


Club Car

®

2004-2005 ILLUSTRATED PARTS LIST

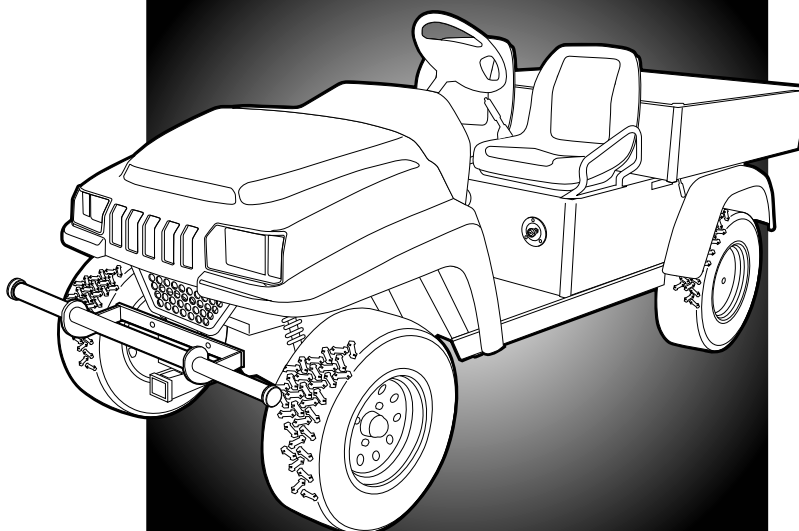

**TURF 272, CARRYALL 272,
AND CARRYALL 472
GASOLINE VEHICLES**

MANUAL NUMBER 102397505
EDITION CODE 0105A00000

USING THE ILLUSTRATED PARTS LIST

WARNING

- **This manual is to be used only for identification and ordering of service parts. Be sure to read and use the maintenance and service manual before attempting any vehicle repairs.**

This manual covers all 2003 Turf 272, Carryall 272™, and Carryall 472 vehicles.

The manual is divided into 13 sections. Sections 1 through 12 pertain to the 272 and 472 vehicles, and Section 13 pertains to tools that are used on all Club Car products. Note that there are two flags on the outside edge of each page. The first flag contains the section number of which that page is a part. The other flag contains the letter G, signifying that the page pertains to the gasoline vehicle only.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section numbers, and under them, the individual page titles and numbers to be found in that section. The index can be used to find specific parts and assemblies. The index is divided into numerical and alphabetical listings with the page numbers in italic text.

There is a two-page spread for each individual page title in the Table of Contents. On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used. Some item numbers have more than one part number because several configurations of a component are represented together on one spread.

There are some wiring diagrams in this manual that cover two pages. For these diagrams the parts list page will be on the next two-page spread.

Note that a part description may be indented. This indentation corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to *level 2* is a component of the *level 1* part (assembly) that it is listed under. A *level 3* part is a component of the *level 2* part that it is listed under, and a *level 4* part is a component of the *level 3* part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part is *the quantity used per next higher level assembly of which it is a component*. A part that is not indented is a *level 1* part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.

HOW TO ORDER PARTS

Replacement parts and accessories can be obtained from our network of authorized dealers and distributors. You can obtain the name and phone number of your closest Club Car contact by visiting our web site at www.clubcar.com and clicking on the “*Distributor Search*” link or by calling our toll-free Service Parts and Technical Assistance hotline at (800) 872-2246 or (706) 863-3000, extension 3281 or 3854.



P. O. Box 204658
Augusta, Georgia 30917-4658 USA
Telephone 706-863-3000
Service Parts Fax 706-855-7413
www.clubcar.com

NOTE: *This illustrated parts list represents the most current information at the time of publication. Club Car, Inc. is continually working to further improve its vehicles and other products. These improvements may affect the parts used to service the vehicle. Any modification and/or significant change in specifications will be forwarded to all Club Car and Carryall distributors/dealers and will, when applicable, appear in future editions of this illustrated parts list.*

Club Car, Inc. reserves the right to change specifications and designs at any time without notice and without incurring the obligation of making changes to units previously sold.

Copyright © 2003 Club Car, Inc.
Club Car and Carryall
are registered trademarks of Club Car, Inc.
This manual effective July 23, 2003.

CONTENTS

SECTION 1 – BODY AND TRIM

Front Body Trim	1-3
Front Seats	1-5
Rear Seat and Support Structure – Carryall 472 Vehicles	1-7
Latch Plate and Prop Rod – Turf 272 and Carryall 272 Vehicles	1-9
Tilt Bed, Hinge and Latch – Turf 272 and Carryall 272 Vehicles	1-11
Cargo Box – Turf 272 and Carryall 272 Vehicles	1-13
Tilt Bed, Hinge and Latch – Carryall 472 Vehicles	1-15
Cargo Box – Carryall 472 Vehicles	1-17
Rear Body Trim – Carryall 272 Vehicles	1-19
Rear Body Trim – Carryall 472 Vehicles	1-21

SECTION 2 – WHEELS AND TIRES

Wheels and Tires	2-3
------------------------	-----

SECTION 3 – DECALS

Decals – Turf 272 Vehicles	3-3
Decals – Carryall 272 Vehicles	3-5
Decals, Continued – Turf 272 and Carryall 272 Vehicles	3-7
Decals, Continued – Carryall 472 Vehicles	3-9
Decals, Continued – Carryall 472 Vehicles	3-11

SECTION 4 – BRAKE SYSTEMS

Front Brake Assembly	4-3
Rear Brake Assembly	4-5
Master Cylinder	4-7
Hydraulic Brake System – Turf 272 and Carryall 272 Vehicles	4-9
Hydraulic Brake System – Carryall 472 Vehicles	4-11
Hand Park Brake Assembly	4-13

SECTION 5 – PEDAL GROUP

Brake Pedal Assembly	5-3
Accelerator Pedal Assembly	5-5

SECTION 6 – STEERING, FRONT AND REAR SUSPENSION

Steering Column	6-3
Steering Gear Assembly	6-5
Front Suspension	6-7

CONTENTS

Rear Suspension	6-9
-----------------------	-----

SECTION 7 – ELECTRICAL SYSTEM

Wiring – Turf 272, Pedal-Start Vehicle	7-5
Wiring – Turf and Carryall 272 Key-Start Vehicles	7-9
Wiring – Carryall 472, Key-Start Vehicle	7-13
Forward/Reverse Shifter Assembly	7-15
Electrical Component Box, Pedal-Start Vehicles	7-17
Electrical Component Box, Key-Start Vehicles	7-19
Electrical Components, Front Body	7-21
Electrical Components, Dash Panel	7-23
Starter/Generator Assembly	7-25
Starter/Generator Mounting	7-27
Battery	7-29

SECTION 8 – ENGINE

FE350 Engine (Pedal-Start) – Shrouds and Brackets	8-3
FE350 Engine (Pedal-Start) – Ignition Components and Flywheel	8-5
FE350 Engine (Pedal-Start) – Oil Circulation	8-7
FE350 Engine (Pedal-Start) – Cylinder Head	8-9
FE350 Engine (Pedal-Start) – Crankcase, Camshaft and Oil Sensor	8-11
FE350 Engine (Pedal-Start) – Crankcase and Crankshaft	8-13
FE400 Engine (Key-Start) – Shrouds and Brackets	8-15
FE400 Engine (Key-Start) – Ignition Components and Flywheel	8-17
FE400 Engine (Key-Start) – Oil Circulation	8-19
FE400 Engine (Key-Start) – Cylinder Head	8-21
FE400 Engine (Key-Start) – Crankcase, Camshaft and Oil Sensor	8-23
FE400 Engine (Key-Start) – Crankcase and Crankshaft	8-25
Engine Mounting	8-27

SECTION 9 – FUEL, INTAKE, AND GOVERNOR SYSTEMS

Fuel System – Turf 272 and Carryall 272 Vehicles	9-3
Fuel System – Carryall 472 Vehicles	9-5
Carburetor Assembly, FE350 engine	9-7
Carburetor Assembly, FE400 engine	9-9
Carburetor Installation	9-11
Governor and Accelerator Cables	9-13
Intake Duct, Choke, and Air Box Assembly – Turf 272 and Carryall 272 Vehicles	9-15
Intake Duct, Choke, and Air Box Assembly – Carryall 472 Vehicles	9-17

CONTENTS

SECTION 10 – EXHAUST SYSTEM

Exhaust System, FE350 engine	10-3
Exhaust System, FE400 engine	10-5

SECTION 11 – TORQUE CONVERTER

Drive Clutch	11-3
Driven Clutch	11-5

SECTION 12 – UNITIZED TRANSAXLE

MC012C-AS00 Prior To Serial Number MC012C3J0001 – Gear Cases, Brackets and Guard	12-3
MC012C-AS00 Prior To Serial Number MC012C3 J0001 – F&R Transmission and Gear Reduction	12-5
MC012C-AS00 Prior To Serial Number MC012C3J0001 – Differential Lock and Axles	12-7
MC012C-BS00 Beginning With Serial Number MC012C3J0001 – Gear Cases, Brackets and Guard	12-9
MC012C-BS00 Beginning With Serial Number MC012C3J0001 – F&R Transmission And Gear ...	12-11
MC012C-BS00 Beginning With Serial Number MC012C3J0001 – Differential Lock And Axles	12-13
Unitized Transaxle – Differential Lock Cable Assembly and Shifter	12-15

SECTION 13 – MAINTENANCE AND SERVICE TOOLS


Maintenance and Service Tools	13-3
Maintenance and Service Tools, Continued	13-5
Maintenance and Service Tools, Continued	13-7
Maintenance and Service Tools, Continued	13-9
Maintenance and Service Tools, Continued	13-11

SECTION i – INDEX

BODY AND TRIM

1

G

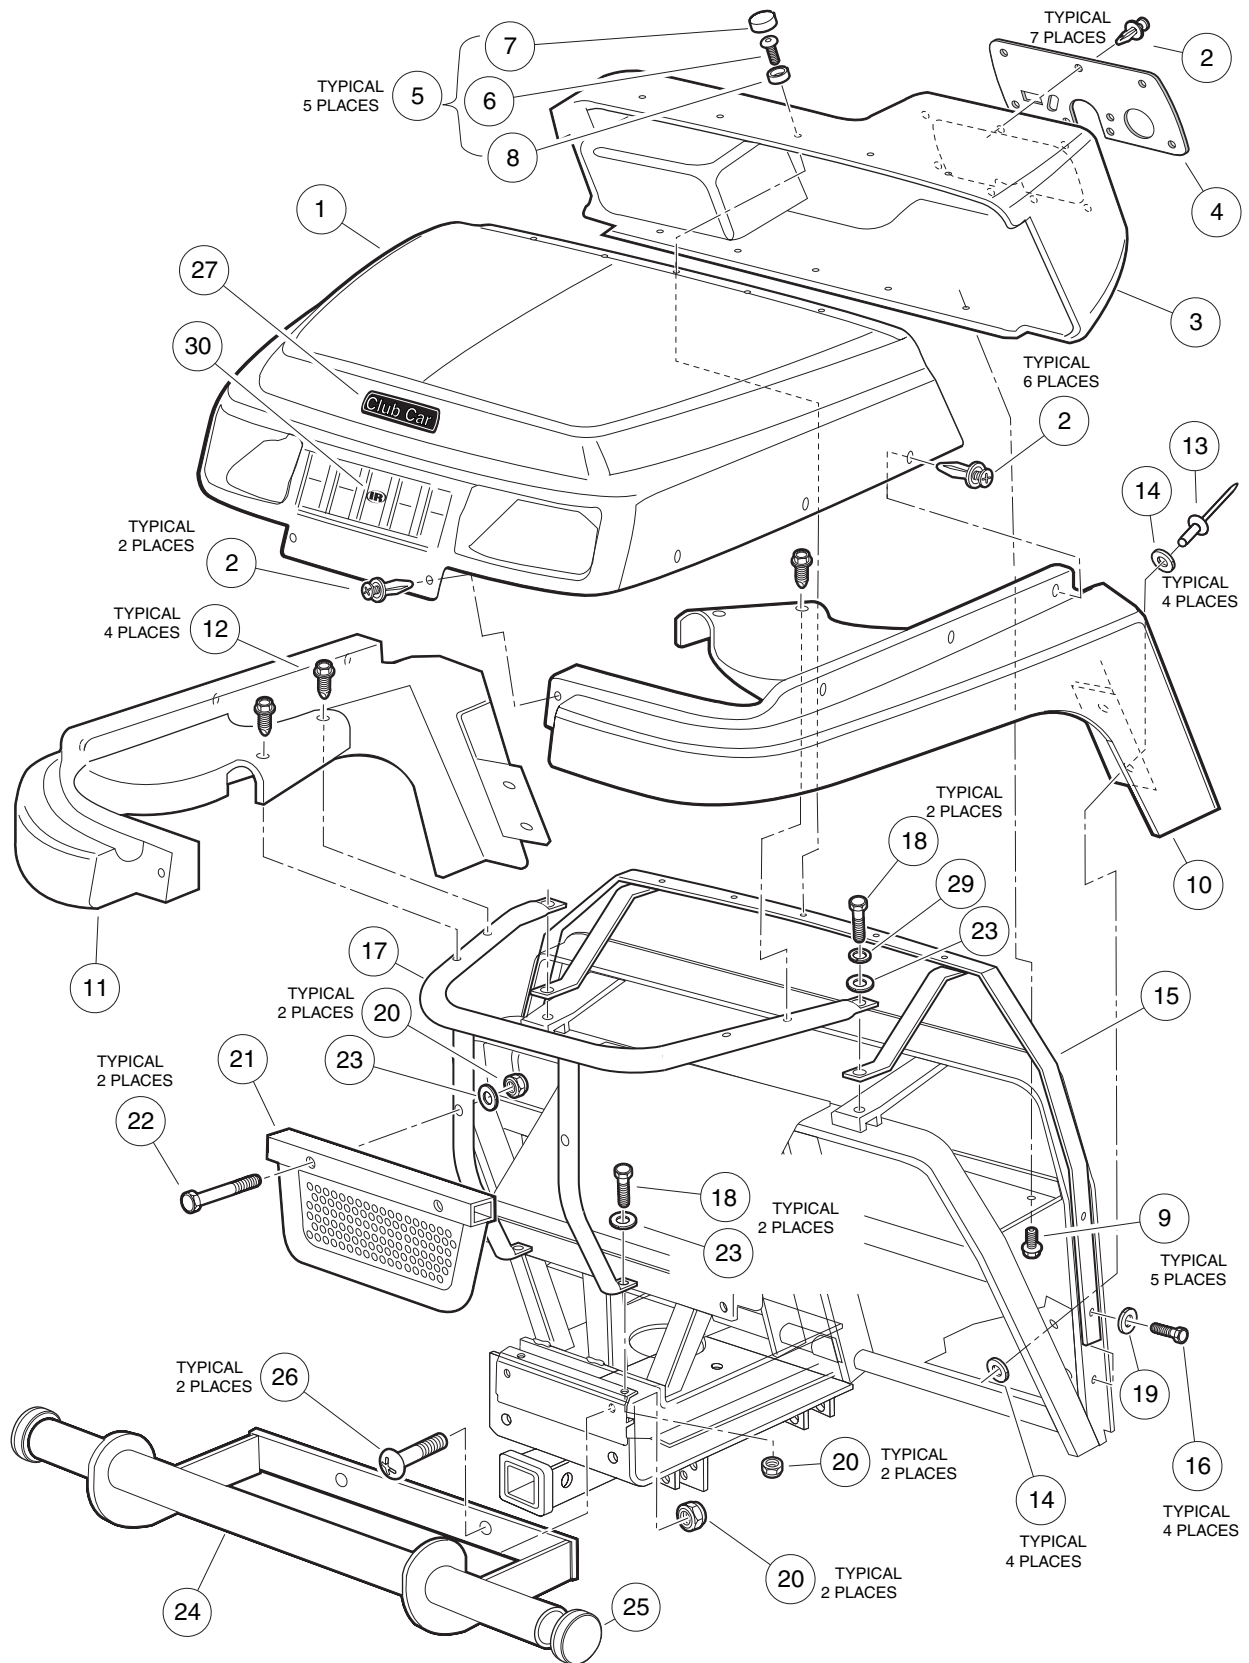


FRONT BODY TRIM

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102021710</u>	Body, Front with Headlight Opening (dark green) (Turf 272 only)	1
1	<u>102021714</u>	Body, Front with Headlight Opening (dark gray) (Carryall 272 and Carryall 472 only)	1
2	<u>102025701</u>	Screw, Tuflok	15
3	<u>102021801</u>	Dashboard	1
4	<u>102030501</u>	Panel, Dash	1
5	<u>102056901</u>	Kit, Dash Hardware (includes items 6 - 8)	1
6	<u>102025801</u>	Screw, Truss-Head, Type C, 1/4-20 x 3/4	5
7	<u>102045001</u>	Cap	5
8	<u>102048401</u>	Washer	5
9	<u>1017384</u>	Screw, Hex Washer-Head, Type AB, #12	5
10	<u>102021501</u>	Fender, Front, Driver-Side	1
11	<u>102021601</u>	Fender, Front, Passenger-Side	1
12	<u>1010545</u>	Screw, Hex Washer-Head, Type AB, 1/4-14 x 3/4	4
13	<u>1606</u>	Rivet, Blind, 3/16 x 1/2	4
14	<u>183</u>	Washer, Flat, Type A, #10	8
15	<u>102015701</u>	Support, Upper Front Body	1
16	<u>1012285</u>	Screw, Hex-Head Thread-Rolling, 1/4-20 x 5/8	4
17	<u>102015801</u>	Support, Lower Fender	1
18	<u>102078101</u>	Screw, Hex-Head Cap, 5/16-18 x 2-1/2	4
19	<u>332</u>	Washer, Flat, Type A, 1/4	4
20	<u>7473</u>	Nut, Nylon Lock, 5/16-18	6
21	<u>102013901</u>	Grill	1
22	<u>1010921</u>	Screw, Hex-Head Cap, 5/16-18 x 2-1/2	2
23	<u>1241</u>	Washer, Flat, Type A, 5/16	6
24	<u>102055801</u>	Bumper, Tube	1
25	<u>102058401</u>	Cap, Tuber Bumper	2
26	<u>7410</u>	Screw, Phillips Truss-Head, 5/16-18 x 1-1/4	4
27	<u>102046501</u>	Decal, Club Car Nameplate	1
28	<u>102160101</u>	Mat, Floor (not shown)	1
29	<u>7174</u>	Washer, Lock, 5/16	2
30	<u>102259001</u>	Decal, IR (Turf 272 only)	1

1

G

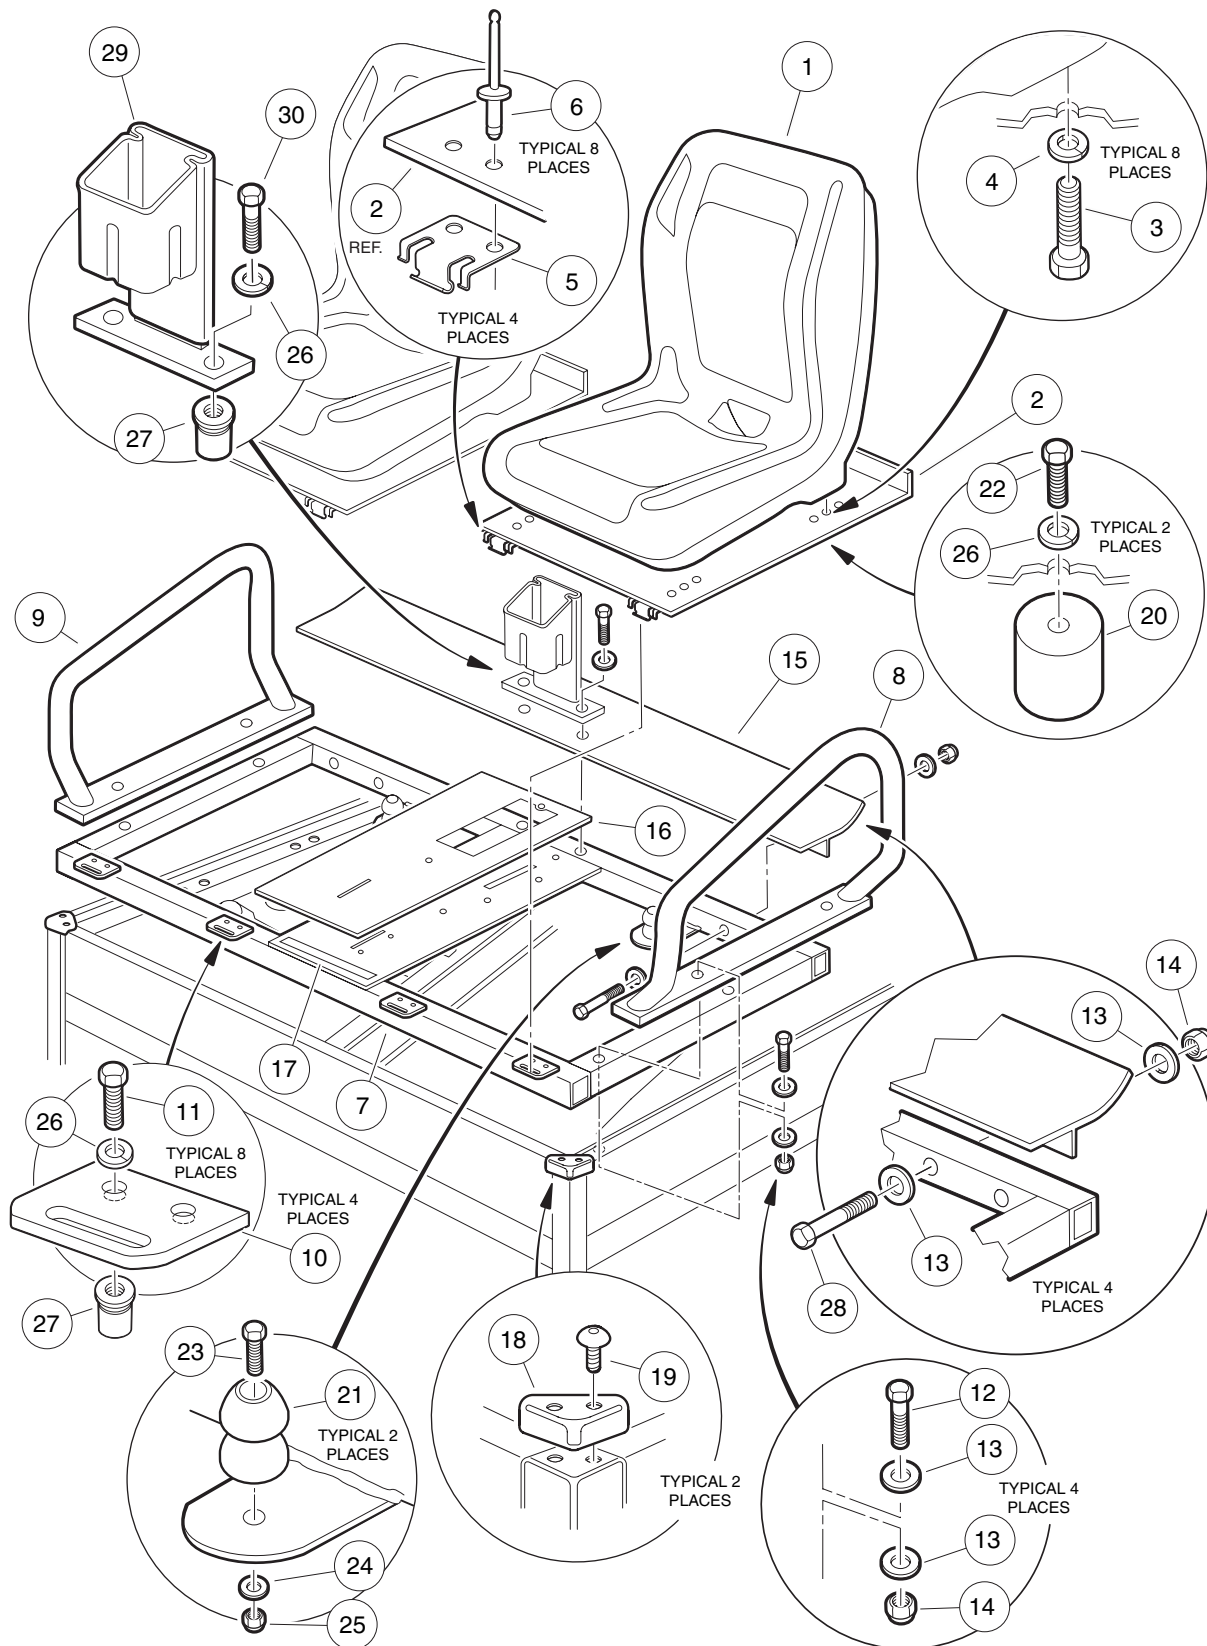


FRONT SEATS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102026501</u>	Seat, Bucket – Gray	2
2	<u>102023701</u>	Panel, Seat	2
3	<u>1012830</u>	Screw, Hex-Head, M8 x 1.25 x 22 mm	8
4	<u>1013734</u>	Washer, Lock, 8 mm	8
5	<u>1011652</u>	Plate, Hinge	4
6	<u>102047001</u>	Rivet, Pop, Stainless Steel, 1/4 x 1/2	8
7	<u>102026901</u>	Weldment, Seat Support	1
8	<u>102024901</u>	Armrest, Driver-Side	1
9	<u>102025001</u>	Armrest, Passenger-Side	1
10	<u>1012412</u>	Plate, Hinge, Body	4
11	<u>7847</u>	Screw, Hex-Head Cap, 1/4-20 x 3/4	8
12	<u>8935</u>	Screw, Hex-Head Cap, 5/16-18 x 2-1/4	4
13	<u>1011697</u>	Washer, Flat, 5/16	16
14	<u>7473</u>	Nut, Nylon Lock, 5/16-18	8
15	<u>102029501</u>	Seal, Bed (Turf 272 and Carryall 272 only)	1
16	<u>102026401</u>	Cover, Console	1
17	N/A	Tape, VHB	A/R
18	<u>1014387</u>	Cap, Corner	2
19	<u>1014321</u>	Screw, Torx Truss-Head, 1/4-14 x 3/4	4
20	<u>102061101</u>	Cup, Seat Holder	2
21	<u>102059001</u>	Base, Seat Holder	2
22	<u>102059401</u>	Screw, Hex-Head Cap, M6 x 1 x 10 mm	2
23	<u>102059501</u>	Screw, Hex-Head Cap, M6 x 1 x 35 mm	2
24	<u>332</u>	Washer, Flat, Type A, 1/4	2
25	<u>101887601</u>	Nut, Nylon Lock, M6	2
26	<u>451</u>	Washer, Lock, 1/4	12
27	<u>102060201</u>	Insert, Threaded, 1/4-20	10
28	<u>7311</u>	Screw, Hex-Head Cap, 5/16-18 x 2 (Turf 272 and Carryall 272 only)	4
29	<u>102068501</u>	Holder, Radio/Beverage	1
30	<u>7847</u>	Screw, Hex-Head Cap, 1/4-20 x 3/4	2

1

G

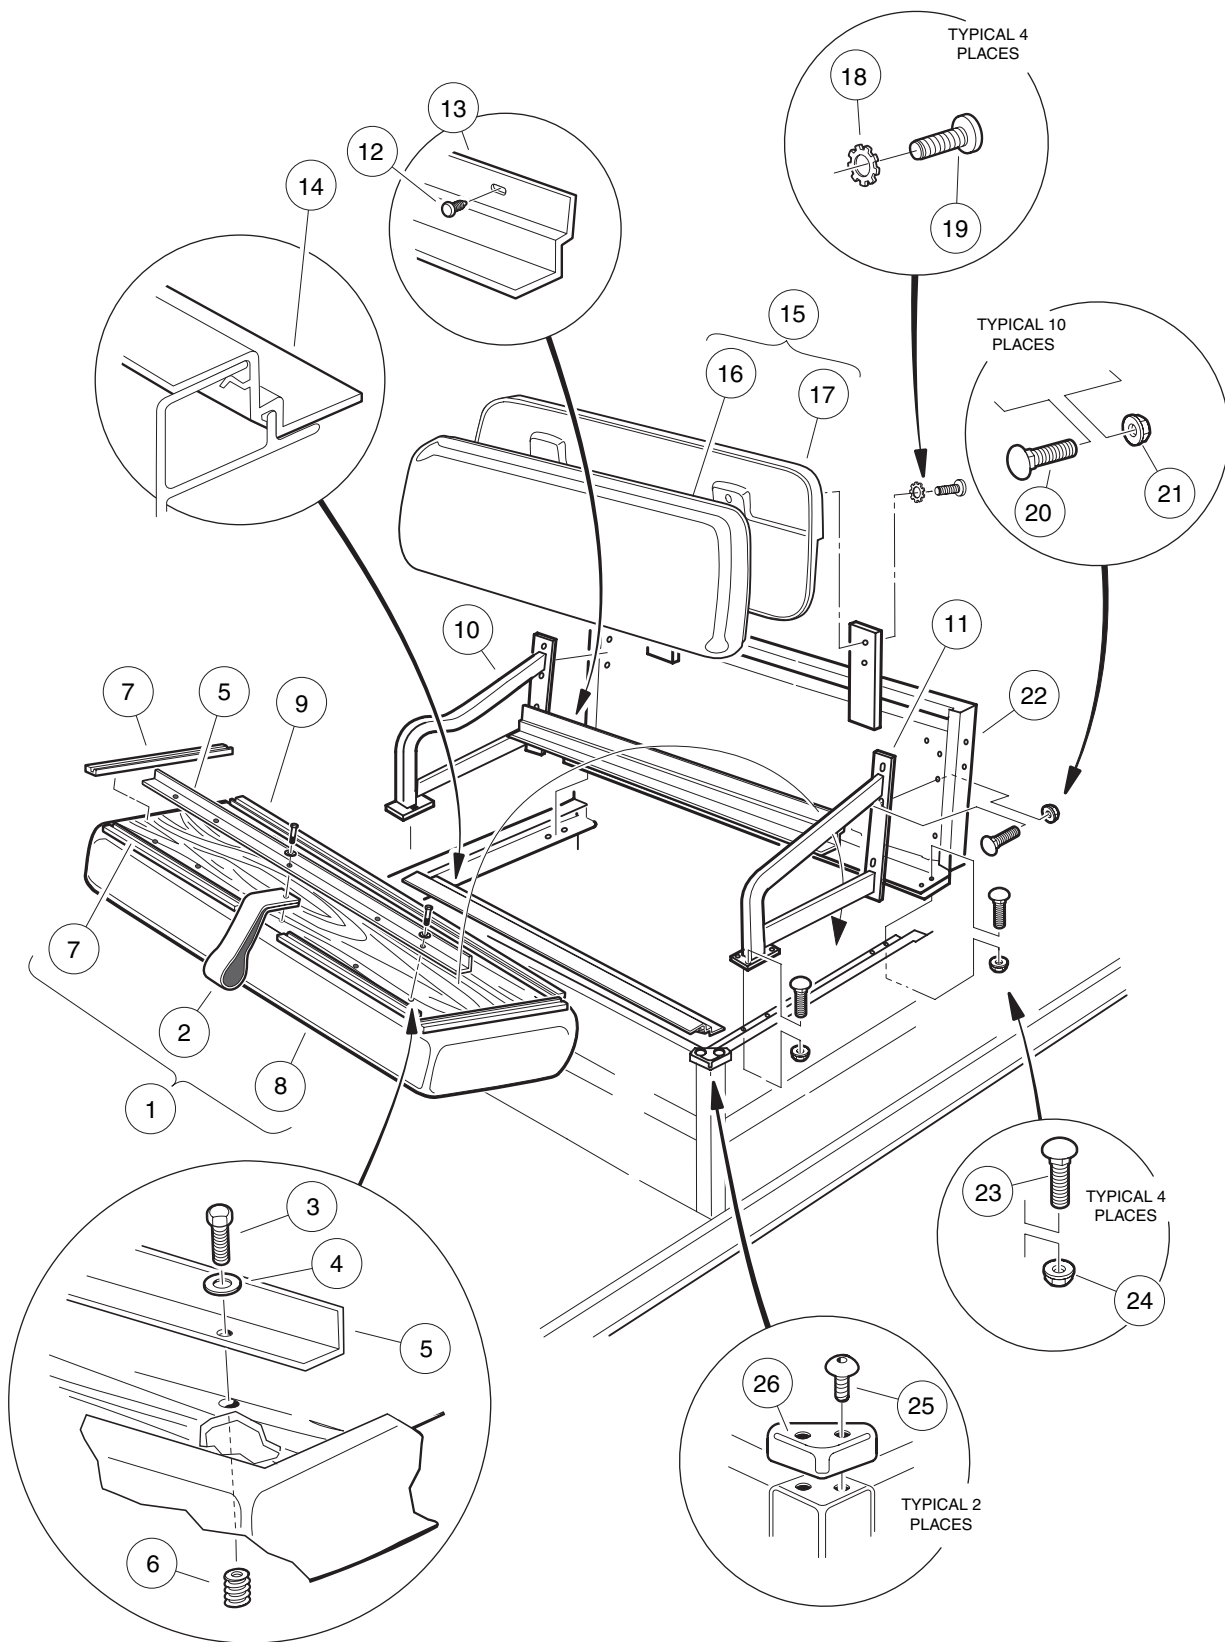


REAR SEAT AND SUPPORT STRUCTURE – CARRYALL 472 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101564505</u>	Assembly, Seat Bottom (gray) (includes items 2 - 9)	1
2	<u>1013309</u>	Strap, Seat Bottom	1
3	<u>101954301</u>	Screw, Hex-Head Cap with Adhesive Patch, 1/4-20 x 3/4	5
4	<u>332</u>	Washer, Flat, 1/4	5
5	<u>101894303</u>	Stiffener, Seat	1
6	<u>1010543</u>	Insert, Wood	5
7	<u>1013311</u>	Bumper, Seat, Short	4
8	<u>101562710</u>	Cover, Vinyl Seat Bottom (gray)	1
9	<u>1013312</u>	Bumper, Seat, Long	1
10	<u>101888501</u>	Assembly, Armrest, Passenger	1
11	<u>101888502</u>	Assembly, Armrest, Driver	1
12	<u>1010434</u>	Barrel, Plastic.....	5
13	<u>101963901</u>	Trim, Seat Bottom, Rear	1
14	<u>101964001</u>	Trim, Seat Bottom, Front	1
15	<u>101677705</u>	Assembly, Seat Back (gray) (includes items 16 and 17)	1
16	<u>101675506</u>	Cover, Vinyl Seat Back (gray)	1
17	<u>1016751</u>	Cap, Seat Back (black)	1
18	<u>101946201</u>	Washer, External Tooth Lock, 1/4	4
19	<u>8251</u>	Screw, Phillips Truss-Head, 1/4-20 x 1	4
20	<u>101958601</u>	Bolt, Carriage, 1/4-20 x 3/4	10
21	<u>101835601</u>	Nut, Flange, 1/4-20	10
22	<u>1016723</u>	Panel, Seat Support	1
23	<u>101963301</u>	Bolt, Carriage, 5/16-18 x 3/4	4
24	<u>101963401</u>	Nut, Flange, 5/16-18	4
25	<u>1014321</u>	Screw, Torx Truss-Head, 1/4-14 x 3/4	4
26	<u>1014387</u>	Cap, Corner	2


1

G

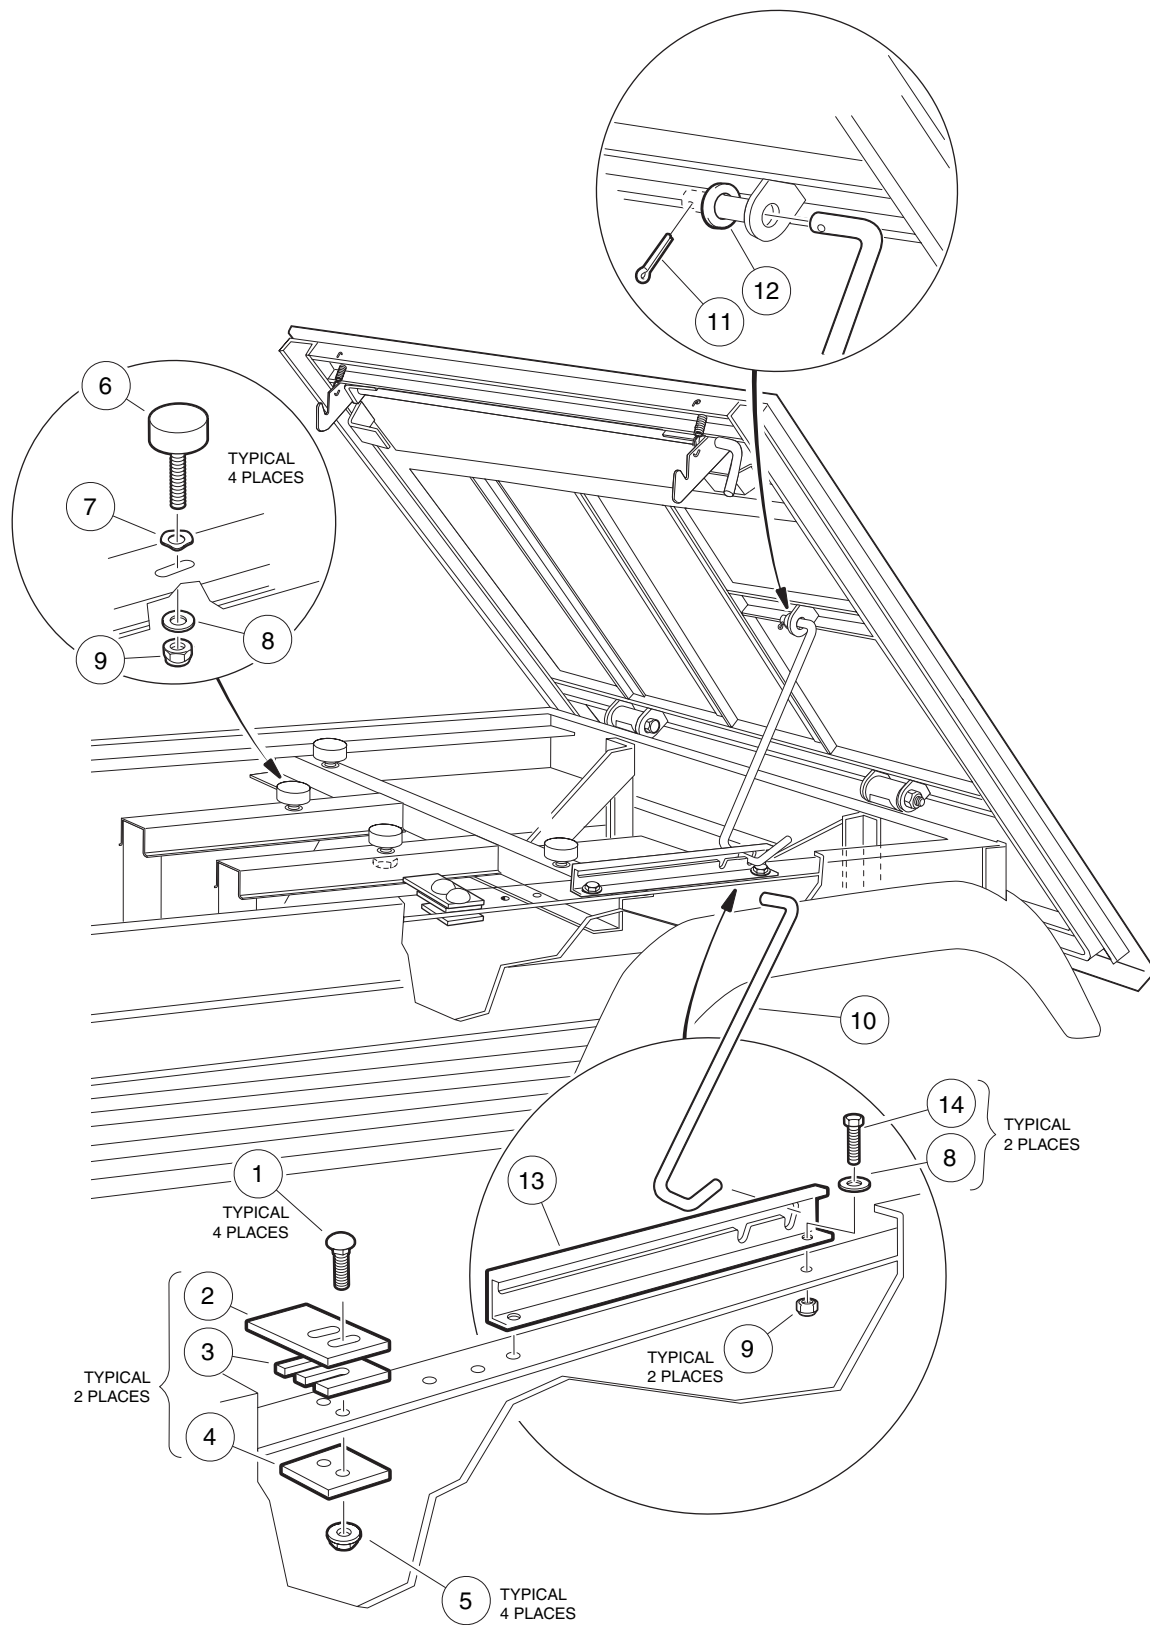


LATCH PLATE AND PROP ROD – TURF 272 AND CARRYALL 272 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	1 G
		1 2 3 4		
1	<u>101958602</u>	Bolt, Carriage, 1/4-20 x 1	4	
2	<u>1015277</u>	Plate, Tilt Bed Latch	2	
3	<u>1016078</u>	Shim, Latch Plate	A/R	
4	<u>1016060</u>	Support, Latch Plate	2	
5	<u>101835601</u>	Nut, Flanged, 1/4-20	4	
6	<u>1010878</u>	Bumper, Rubber	4	
7	<u>1016201</u>	Washer, Wave	4	
8	<u>332</u>	Washer, Flat, Type A, 1/4	4	
9	<u>8233</u>	Nut, Nylon Lock, 1/4-20	4	
10	<u>102301401</u>	Rod, Prop	1	
11	<u>1035</u>	Pin, Cotter, 3/32 x 1	1	
12	<u>334</u>	Washer, Flat, 3/8	1	
13	<u>101921601</u>	Track, Prop Rod	1	
14	<u>7847</u>	Screw, Hex-Head Cap, 1/4-20 x 3/4	2	

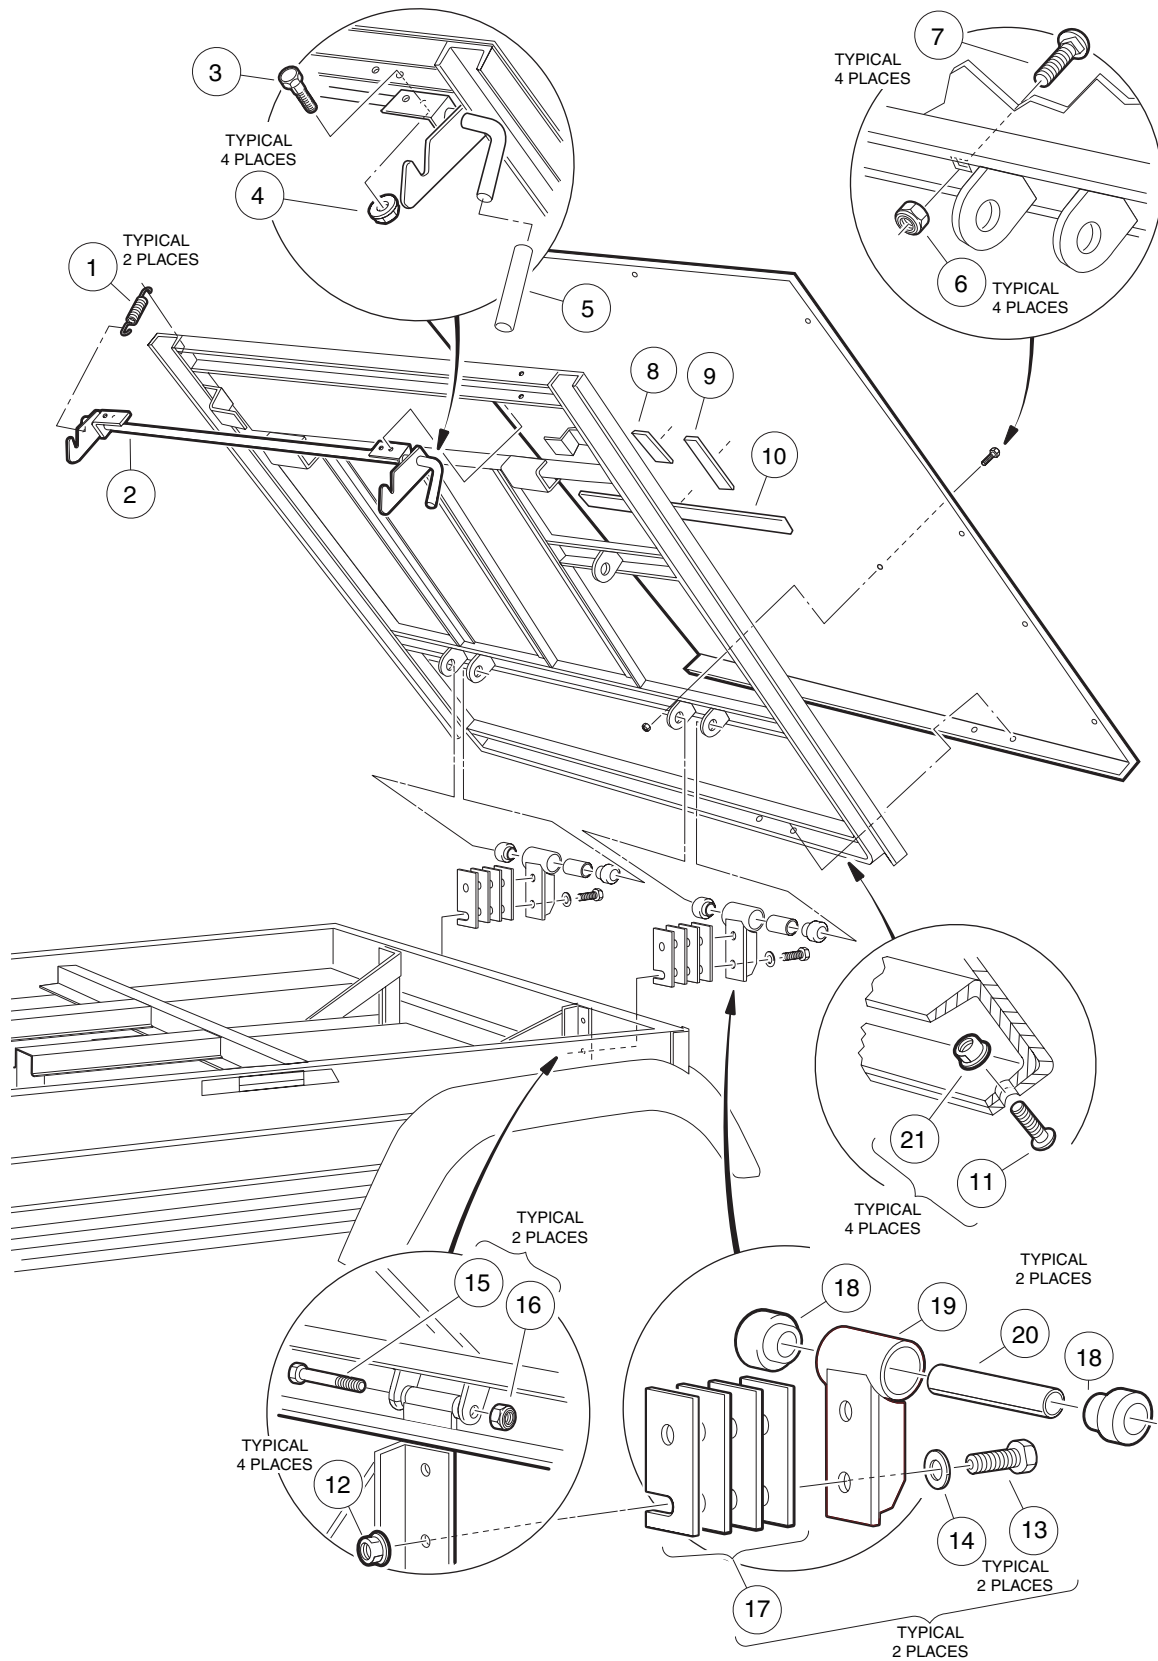

TILT BED, HINGE AND LATCH – TURF 272 AND CARRYALL 272 VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY	1 G
		1 2 3 4		
	<u>101542901</u>	Assembly, Tilt Bed, Manual Lift (includes items 1 - 11)	1	
1	<u>1015391</u>	Spring, Latch Extension	2	
2	<u>1015252</u>	Assembly, Latch Weld	1	
3	<u>403</u>	Screw, Hex-Head Cap, 1/4-20 x 5/8	4	
4	<u>101835601</u>	Nut, Flanged Lock, 1/4-20	4	
5	<u>1015400</u>	Hand Grip, Tilt Latch	1	
6	<u>7473</u>	Nut, Nylon Lock, 5/16-18	4	
7	<u>1010435</u>	Bolt, Carriage, 5/16-18 x 1	4	
8	<u>1014471</u>	Insulation, Bulk (4 inches long)	A/R	
9	<u>1014471</u>	Insulation, Bulk (8 inches long)	A/R	
10	<u>1014471</u>	Insulation, Bulk (46 inches long)	A/R	
11	<u>1015399</u>	Screw, Torx Truss-Head, 5/16-18 x 5/8	4	
12	<u>102065901</u>	Nut, Dimpled Flanged Lock, 3/8-16	4	
13	<u>705</u>	Screw, Hex-Head Cap, 3/8-16 x 1-1/4	4	
14	<u>102066001</u>	Washer, Flat, Type B, 3/8	4	
15	<u>8755</u>	Screw, Hex-Head Cap, 3/8-16 x 3-3/8	2	
16	<u>8754</u>	Nut, Nylon Lock, 3/8-16	2	
17	<u>1015507</u>	Shim, Tilt Bed Pivot	A/R	
18	<u>1015583</u>	Bushing, Urethane	4	
19	<u>1015356</u>	Hinge, Tilt Bed	2	
20	<u>1012303</u>	Bushing, Steel	2	
21	<u>101963401</u>	Nut, Flanged Lock, 5/16-18.....	4	
		For latch plate and prop rod components, see page 1-9.		

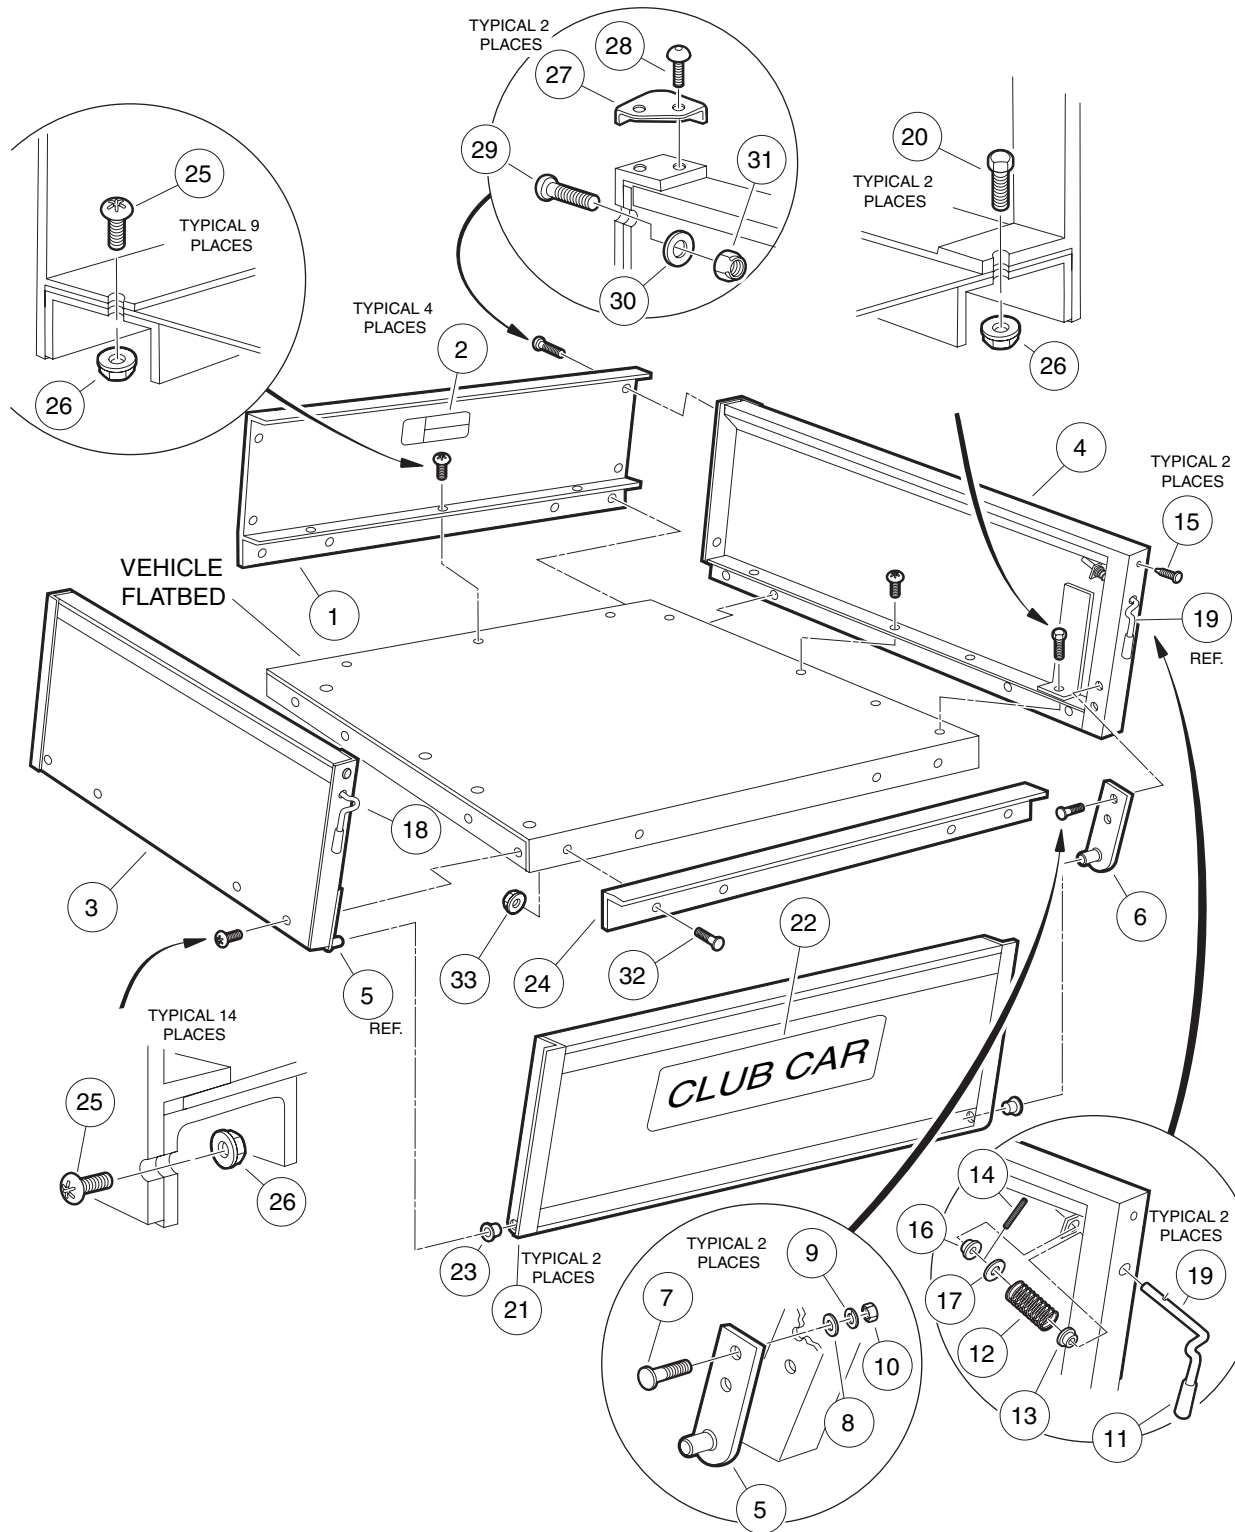

CARGO BOX – TURF 272 AND CARRYALL 272 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102030001</u>	Assembly, Front Panel (includes item 2)	1
2	<u>101553901</u>	Decal, Bed Load	1
3	<u>102029801</u>	Assembly, Side Panel, Driver-Side (includes items 5 and 7 - 18)	1
4	<u>102029601</u>	Assembly, Side Panel, Passenger-Side (includes items 6 - 17 and 19)	1
5	<u>1014513</u>	Bracket, Tailgate, Driver-Side	1
6	<u>1014514</u>	Bracket, Tailgate, Passenger-Side	1
7	<u>1014537</u>	Stud, Flush Head	4
8	<u>1241</u>	Washer, Flat, 5/16	4
9	<u>7174</u>	Washer, Lock, 5/16	4
10	<u>1242</u>	Nut, Hex, 5/16-18	4
11	<u>1015400</u>	Grip, Hand	2
12	<u>1015390</u>	Spring, Compression	2
13	<u>1032</u>	Bushing, Nylon	2
14	<u>1231</u>	Roll Pin, 1/8 x 1	2
15	<u>1010434</u>	Barrel, Plastic - Black	2
16	<u>1015363</u>	Bushing	2
17	<u>1011990</u>	Washer, Flat, 3/8	2
18	<u>1015313</u>	Latch, Driver-Side	1
19	<u>1015245</u>	Latch, Passenger-Side	1
20	<u>1010934</u>	Screw, Hex-Head Cap, 5/16-18 x 1	2
21	<u>102030201</u>	Assembly, Tailgate (includes item 22)	1
22	<u>1013317</u>	Decal, Club Car Tailgate (Turf 272)	1
22	<u>102234901</u>	Decal, Club Car Tailgate (Carryall 272)	1
23	<u>7049</u>	Bushing, Nylon	2
24	<u>101894302</u>	Angle, Tailgate	1
25	<u>1015399</u>	Screw, Torx Truss-Head, 5/16-18 x 3/4	23
26	<u>101963401</u>	Nut, Flange Lock, 5/16-18	25
27	<u>1014387</u>	Cap, Corner	2
28	<u>1014321</u>	Screw, Torx Truss-Head, #10-24 x 3/8	4
29	<u>1014415</u>	Screw, Torx Truss-Head, 1/4-20 x 3/4	4
30	<u>332</u>	Washer, Flat, Type A, 1/4	4
31	<u>8233</u>	Nut, Nylon Lock, 1/4-20	4
32	<u>1014537</u>	Stud, Flush Head	4
33	<u>101963401</u>	Nut, Flanged, 5/16-18	4

1
G

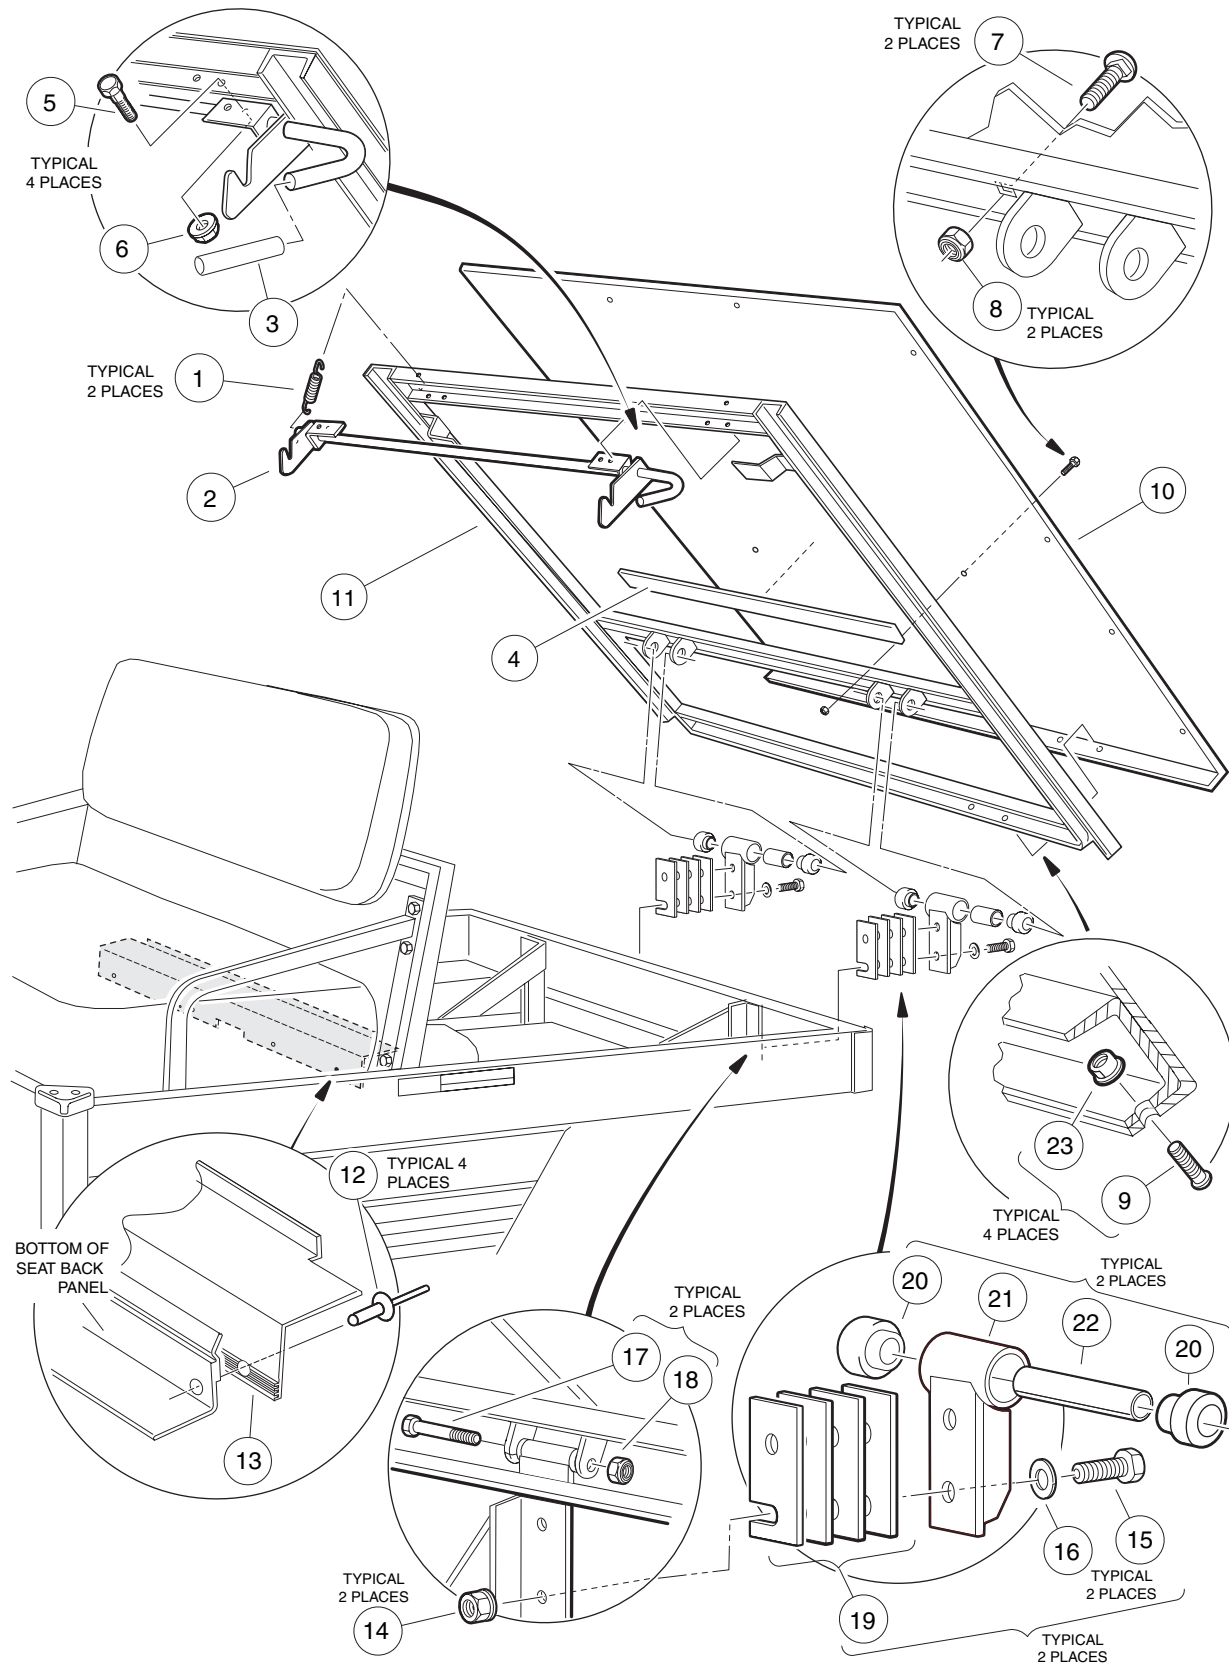


TILT BED, HINGE AND LATCH – CARRYALL 472 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	****	Assembly, Tilt Bed And Latch, Carryall 472 (includes items 1 - 11)	1
1	<u>1015391</u>	Spring, Latch Extension	2
2	<u>102335001</u>	Assembly, Latch Weld	1
3	<u>1015400</u>	Hand Grip, Tilt Latch	1
4	<u>1014471</u>	Insulation, Bulk, (42 inches long)	A/R
5	<u>403</u>	Screw, Hex-Head Cap, 1/4-20 x 5/8	4
6	<u>101835601</u>	Nut, Flanged Lock, 1/4-20	4
7	<u>1010435</u>	Bolt, Carriage, 5/16-18 x 1	2
8	<u>7473</u>	Nut, Nylon Lock, 5/16-18	2
9	<u>1015399</u>	Screw, Torx Truss-Head, 5/16-18 x 3/4	4
10	N/A	Plate, Floor	1
11	N/A	Assembly, Frame Weldment, Tilt Bed	1
12	<u>7532</u>	Rivet, 5/16	4
13	<u>1017976</u>	Seal, Bed	1
14	<u>102065901</u>	Nut, Dimpled Flange Lock, 3/8-16	4
15	<u>705</u>	Screw, Hex-Head Cap, 3/8-16 x 1-1/4	4
16	<u>102066001</u>	Washer, Flat, Type B, 3/8	4
17	<u>8755</u>	Screw, Hex-Head Cap, 3/8-16 x 3-3/8	2
18	<u>8754</u>	Nut, Nylon Lock, 3/8-16	2
19	<u>1015507</u>	Shim, Tilt Bed Pivot	A/R
20	<u>1015583</u>	Bushing, Urethane	4
21	<u>1015356</u>	Assembly, Tilt Bed Hinge Weld	2
22	<u>1012303</u>	Bushing, Steel	2
23	<u>101963401</u>	Nut, Flanged Lock, 5/16-18.....	4
		For latch plate components, see page 1-9.	
	****	Special order item available upon request.	

1

G

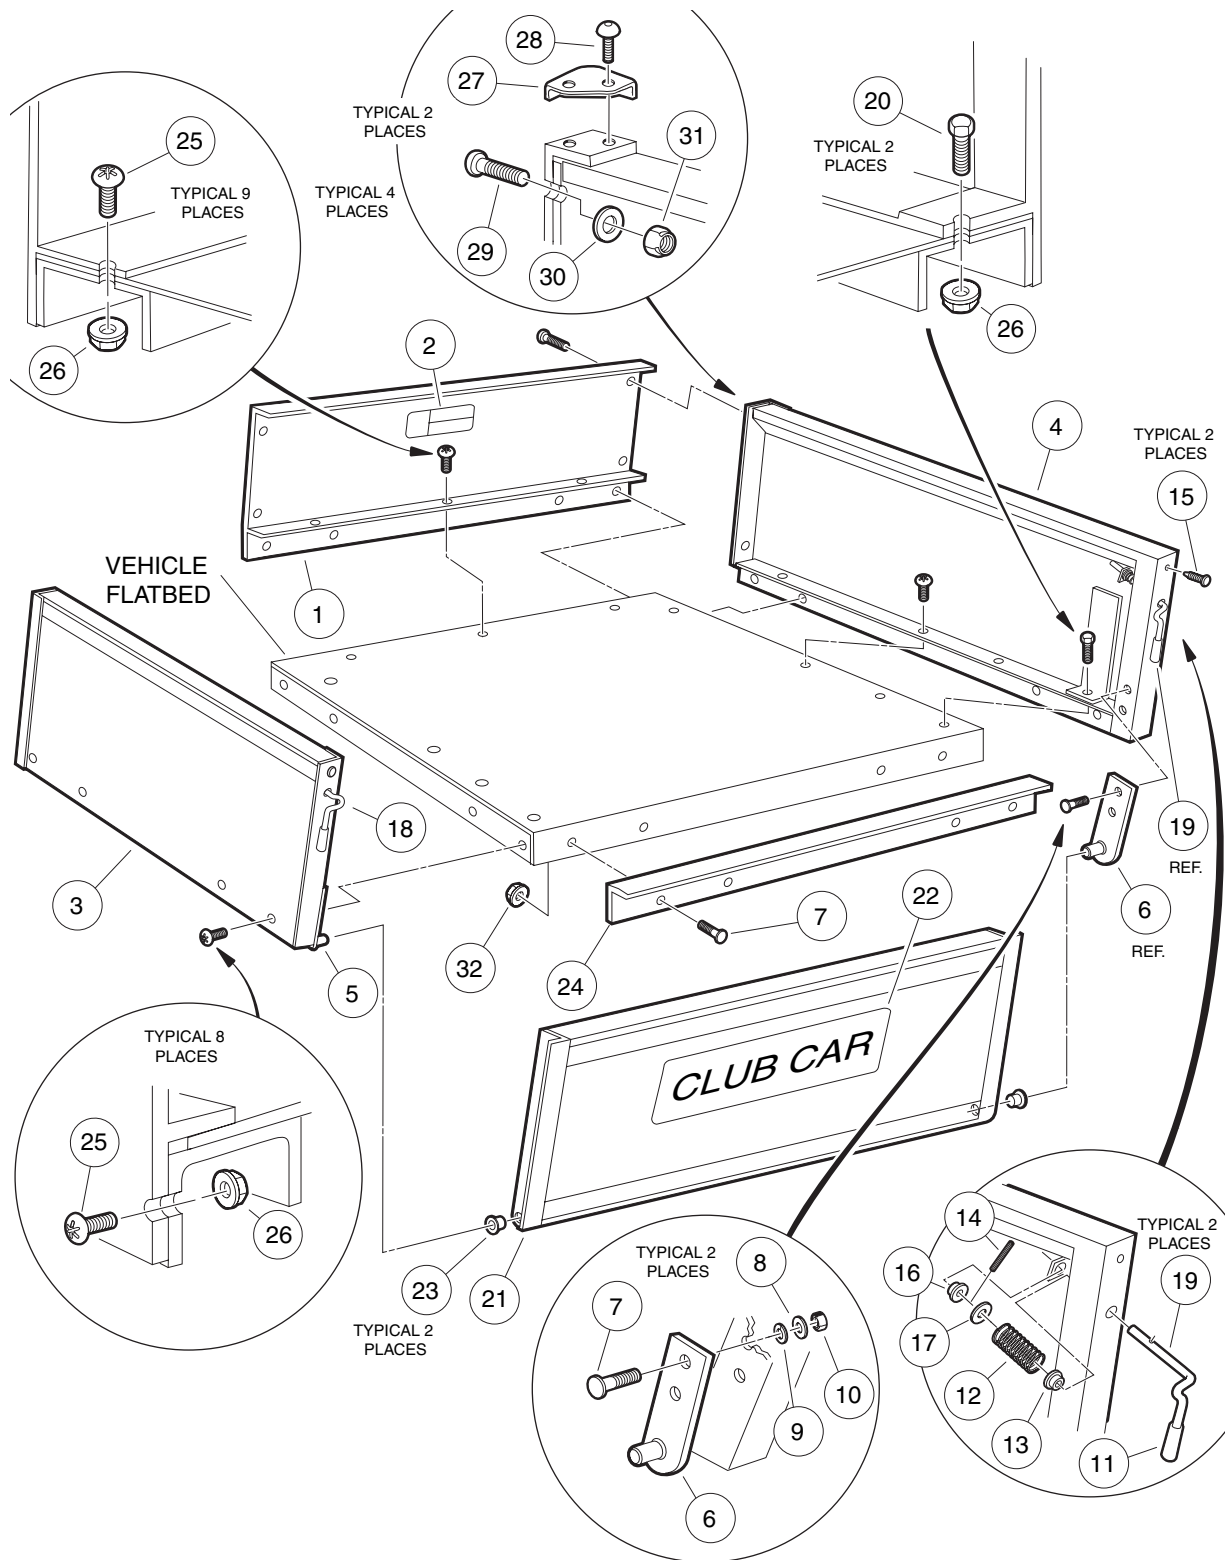


CARGO BOX – CARRYALL 472 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>1015606</u>	Kit, Cargo Box (includes items 1 - 32)	1
1	<u>1015413</u>	Front Panel Assembly (includes item 2)	1
2	<u>101553901</u>	Decal, Bed Load	1
3	<u>1015367</u>	Side, Panel Assembly, Driver-Side (includes items 5 and 7 - 18)	1
4	<u>1015365</u>	Side, Panel Assembly, Passenger-Side (includes items 6 - 17 and 19)	1
5	<u>1014513</u>	Bracket, Tailgate, Driver-Side	1
6	<u>1014514</u>	Bracket, Tailgate, Passenger-Side	1
7	<u>1014537</u>	Stud, Flush Head	8
8	<u>1241</u>	Washer, Flat, 5/16	4
9	<u>7174</u>	Washer, Lock, 5/16	4
10	<u>1242</u>	Nut, Hex, 5/16-18	4
11	<u>1015400</u>	Grip, Hand	2
12	<u>1015390</u>	Spring, Compression	2
13	<u>1032</u>	Bushing, Nylon	2
14	<u>1231</u>	Roll Pin, 1/8 x 1	2
15	<u>1010434</u>	Barrel, Plastic (black)	2
16	<u>1015363</u>	Bushing	2
17	<u>1011990</u>	Washer, Flat, 3/8	2
18	<u>1015313</u>	Latch, Driver-Side	1
19	<u>1015245</u>	Latch, Passenger-Side	1
20	<u>1010934</u>	Screw, Hex-Head Cap, 5/16-18 x 1	2
21	<u>1015414</u>	Tailgate Assembly (includes item 22)	1
22	<u>1013317</u>	Decal, Club Car Tailgate	2
23	<u>7049</u>	Bushing, Nylon	2
24	<u>101894701</u>	Kit, Tailgate Angle	1
25	<u>1015399</u>	Screw, Torx Truss-Head, 5/16-18 x 3/4	17
26	<u>101963401</u>	Nut, Flanged Lock, 5/16-18	19
27	<u>1014387</u>	Cap, Corner	2
28	<u>1014321</u>	Screw, Torx Truss-Head, #10-24 x 3/8	4
29	<u>1014415</u>	Screw, Torx Truss-Head, 1/4-20 x 3/4	4
30	<u>332</u>	Washer, Flat, 1/4	4
31	<u>8233</u>	Nut, Nylon Lock, 1/4-20	4
32	<u>101963401</u>	Nut, Flange Lock, 5/16-18	4

1

G

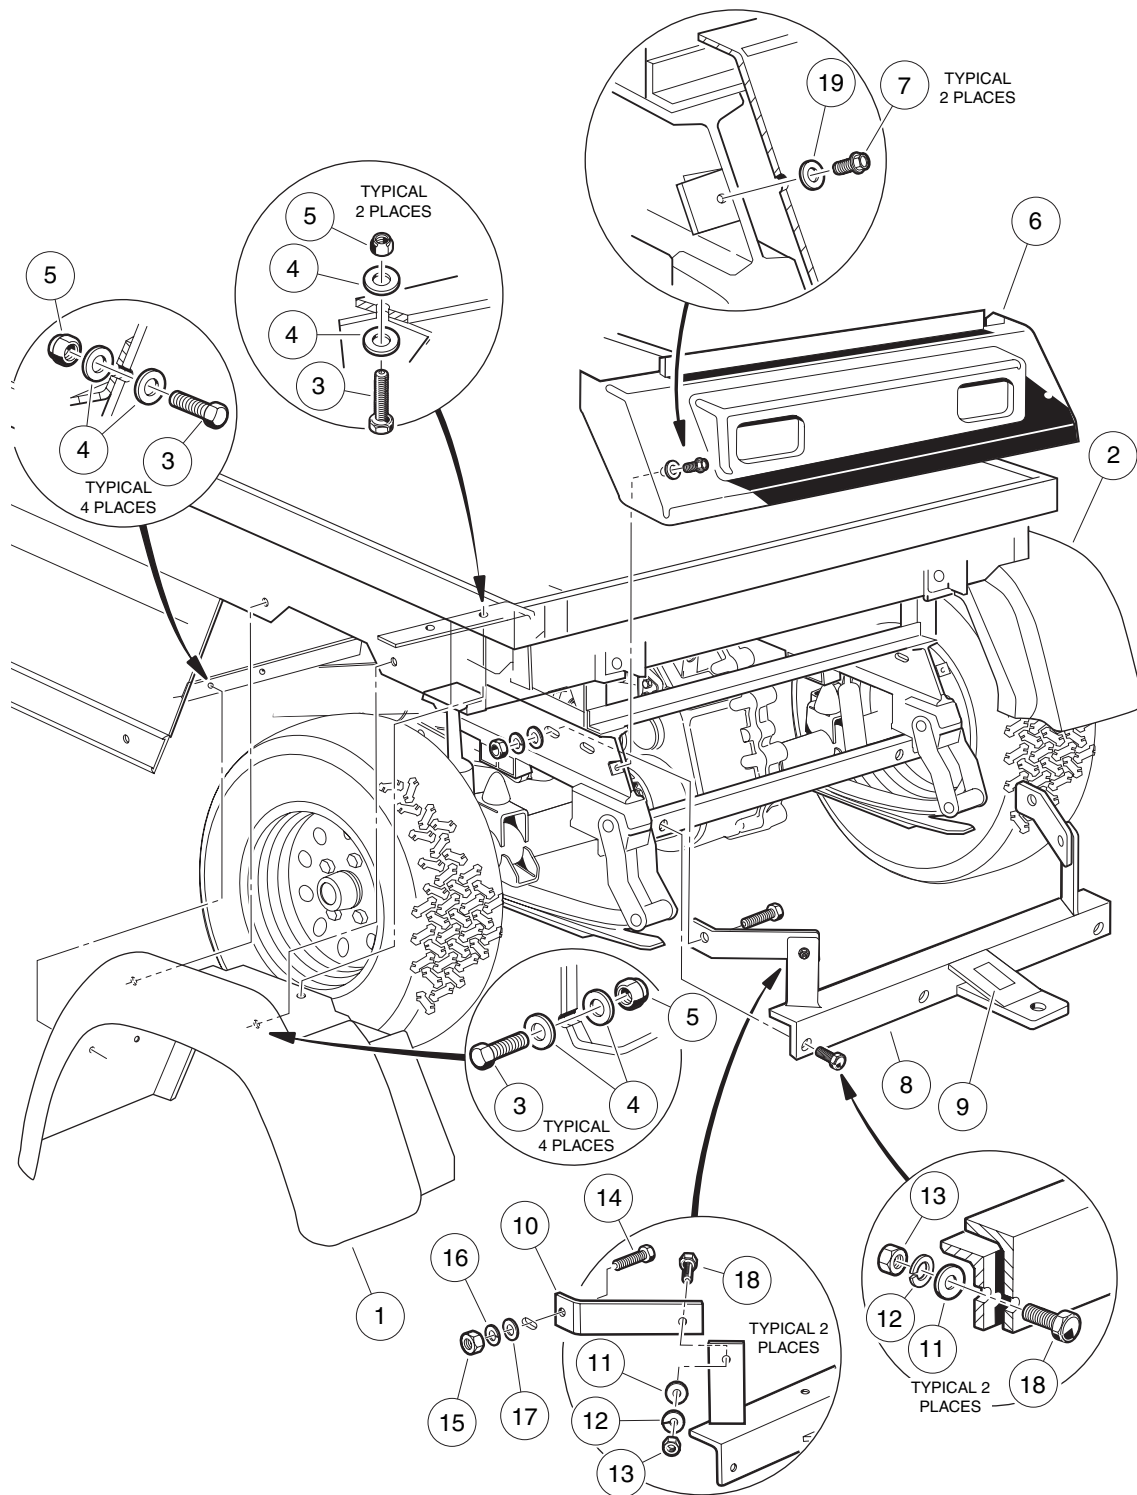


REAR BODY TRIM – CARRYALL 272 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102251701</u>	Fender, Rear, Driver-Side	1
2	<u>102251601</u>	Fender, Rear, Passenger-Side	1
3	<u>304</u>	Screw, Hex-Head Cap, 1/4-20 x 1	10
4	<u>1014306</u>	Washer, Flat, 1/4	20
5	<u>8233</u>	Nut, Nylon Lock, 1/4-20	10
6	<u>1015530</u>	Tailskirt	1
7	<u>1012285</u>	Screw, Thread-Rolling, 1/4-20 x 5/8	2
8	<u>1015445</u>	Hitch, Trailer	1
9	<u>1011553</u>	Decal, Trailer Hitch	1
10	<u>1013483</u>	Brace, Trailer Hitch	2
11	<u>1241</u>	Washer, Flat, 5/16	4
12	<u>7174</u>	Washer, Lock, 5/16	4
13	<u>1242</u>	Nut, Hex, 5/16-18	4
14	<u>705</u>	Screw, Hex-Head Cap, 3/8-16 x 1-1/4	2
15	<u>706</u>	Nut, Hex, 3/8-16	2
16	<u>357</u>	Washer, Lock, 3/8	2
17	<u>1011990</u>	Washer, Flat, 3/8	2
18	<u>1010934</u>	Screw, Hex-Head Cap, 5/16-18 x 1	4
19	<u>332</u>	Washer, Flat, Type A, 1/4	2

1

G

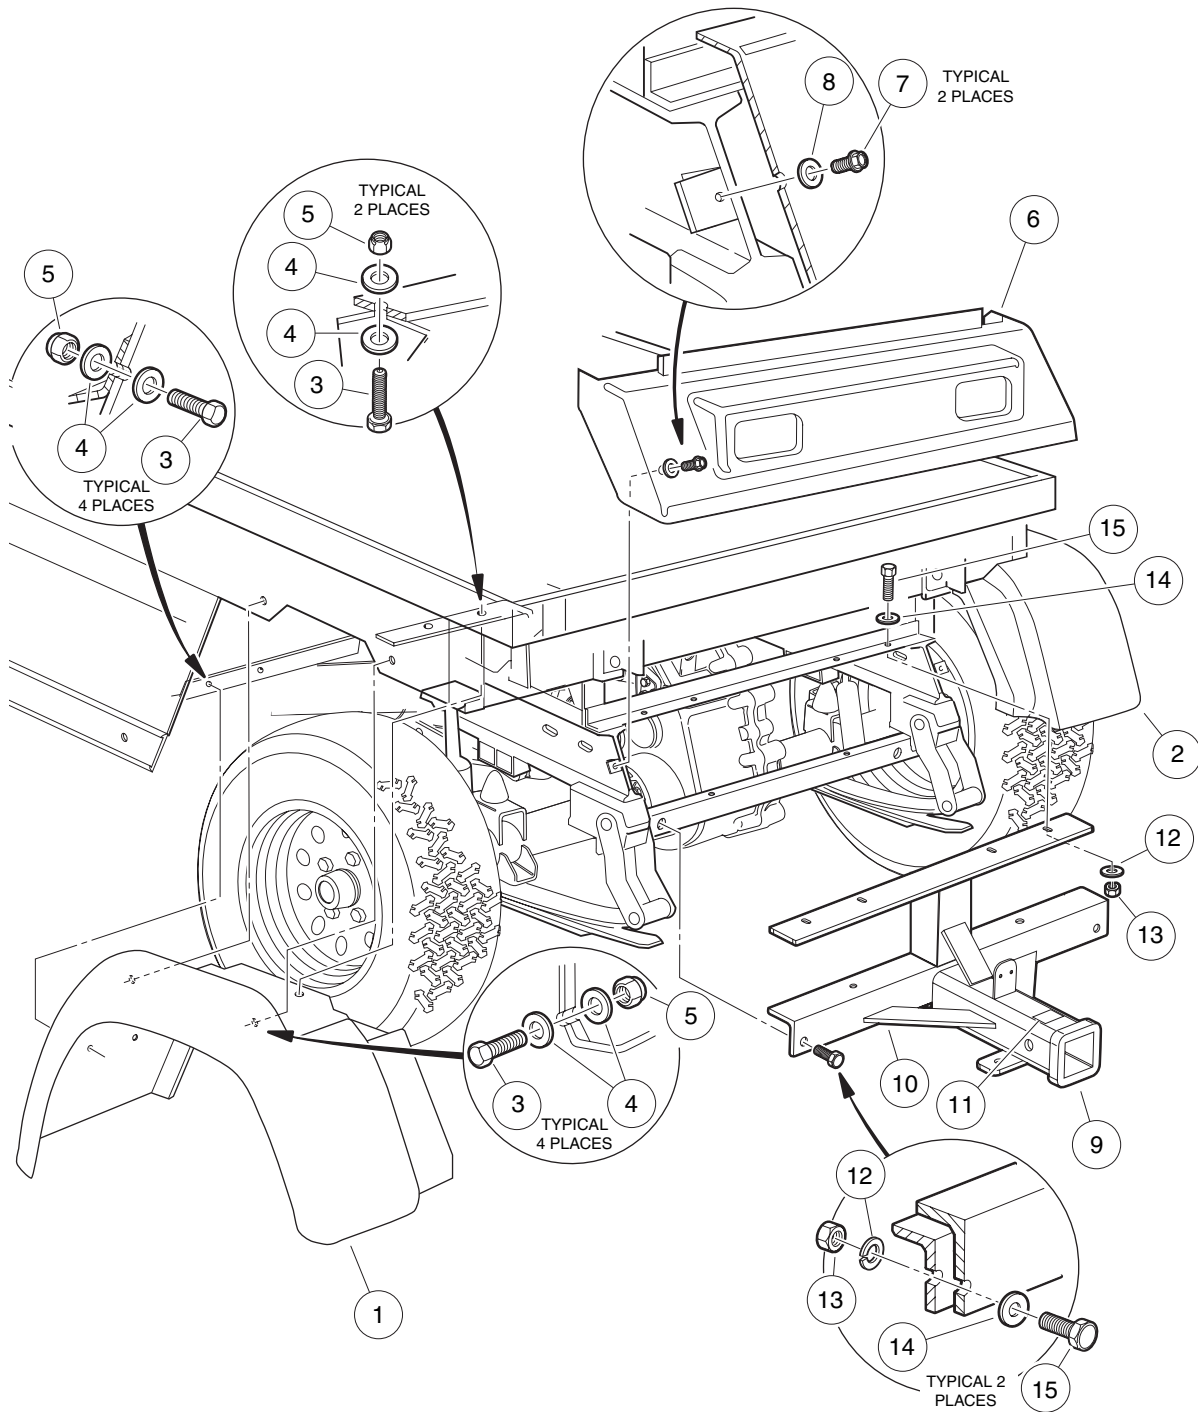

REAR BODY TRIM – CARRYALL 472 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102251701</u>	Fender, Rear, Driver-Side	1
2	<u>102251601</u>	Fender, Rear, Passenger-Side	1
3	<u>304</u>	Screw, Hex-Head Cap, 1/4-20 x 1	10
4	<u>1014306</u>	Washer, Flat, 1/4	20
5	<u>8233</u>	Nut, Nylon Lock, 1/4-20	10
6	<u>1015530</u>	Tailskirt	1
7	<u>1012285</u>	Screw, Thread-Rolling, 1/4-20 x 5/8	2
8	<u>332</u>	Washer, Flat, Type A, 1/4	2
9	<u>102065103</u>	Kit, Rear Receiver (includes items 10 - 15)	1
10	<u>102056001</u>	Hitch, Receiver, 2-Inch	1
11	<u>1011553</u>	Decal, Trailer Hitch	1
12	<u>7174</u>	Washer, Lock, 5/16	6
13	<u>1242</u>	Nut, Hex, 5/16-18	6
14	<u>1241</u>	Washer, Flat, 5/16	6
15	<u>1010934</u>	Screw, Hex-Head Cap, 5/16-18 x 1	6

1

G



1

G


WHEELS AND TIRES

2

G

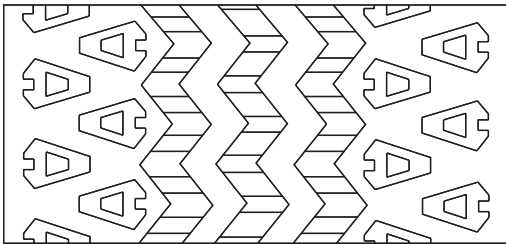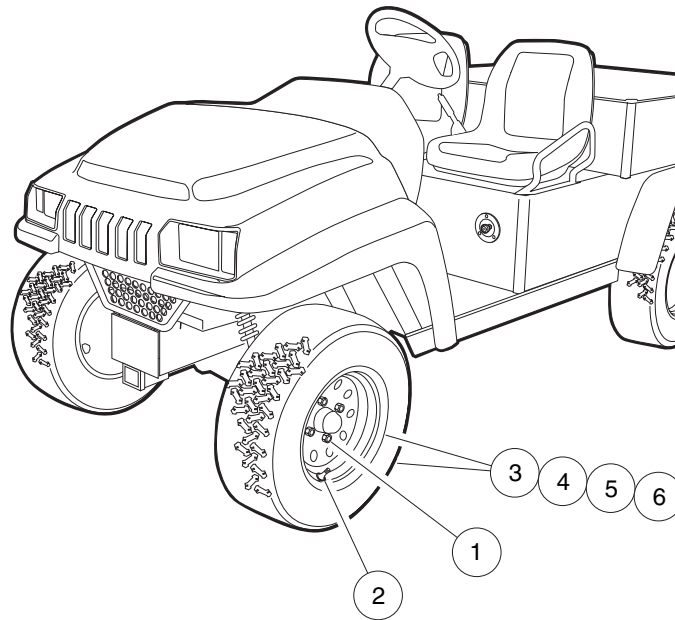

ALL TERRAIN
TREAD

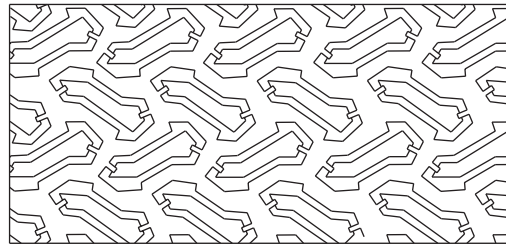

TURF
TREAD

WHEELS AND TIRES

ITEM	PART NO.	DESCRIPTION	QTY	2	G
1	<u>1010984</u>	1 2 3 4 Nut, Lug	16		
2	<u>7310</u>	Stem, Valve *	1		
3	<u>102021402</u>	Assembly, Wheel (gray) and Tire, All Terrain Tread, 4-Ply Rated (23 x 10.50 - 12) (All Trail) (includes item 4)	4		
4	****	Tire, Unmounted, All Terrain Tread (23 x 10.50 - 12) (All Trail)	1		
5	<u>102021401</u>	Assembly, Wheel (gray) and Tire, Turf Tread, 4-Ply Rated (23 x 10.50 - 12) (Turf Mate) (includes item 6)	4		
6	****	Tire, Unmounted, Turf Tread (23 x 10.50 - 12) (Turf Mate)	1		
		* Note: Item 2 is a part of all wheel assemblies.			
	****	Special order item available upon request.			

2

G

DECALS

3

G

WARNING**ROLLOVER OR FALLING OFF MAY CAUSE DEATH**

- Read operators manual and operating instructions.
- Remain seated and hold on to seat handle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not start vehicle until all occupants are seated.
- One (1) person per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Do not operate while under the influence of alcohol or drugs.
- Never attempt jumps.

CCI 102029101

OPERATING INSTRUCTIONS

- Read Owner's Manual and safety warnings located on dash panel prior to driving.
 - Study and understand controls.
- Make sure wheels are turned in desired direction.
- Turn key to "ON" position and be sure nothing is in your path.
- While vehicle is stopped, select direction by placing shift lever or switch in desired position:
 - F – Forward N – Neutral R – Reverse (Buzzer will sound)
 - Release hand brake.
- Vehicle will start moving when accelerator pedal is depressed.
 - Slowly depress accelerator pedal to increase speed.
- To stop, release accelerator pedal and depress brake pedal.
 - After stopping, set hand brake.
- Place forward and reverse switch in neutral position. Turn key "OFF" and remove key when not in use.

CCI 102029301

WARNING

REDUCED STEERING CONTROL MAY CAUSE SERIOUS INJURY OR DEATH
Disengage differential lock on paved surfaces.

CCI 102046601

UNDER 16**WARNING****YOUNG DRIVERS INCREASE CHANCE OF DEATH**


- Young drivers may not be able to control vehicle.
- No drivers younger than 16 years old.
- Do not leave children unattended on vehicle.

CCI 102044601

OFF | ON**WARNING**

Riding in cargo bed can cause severe injury or death. Do not ride in cargo bed.

CCI 1015539-01

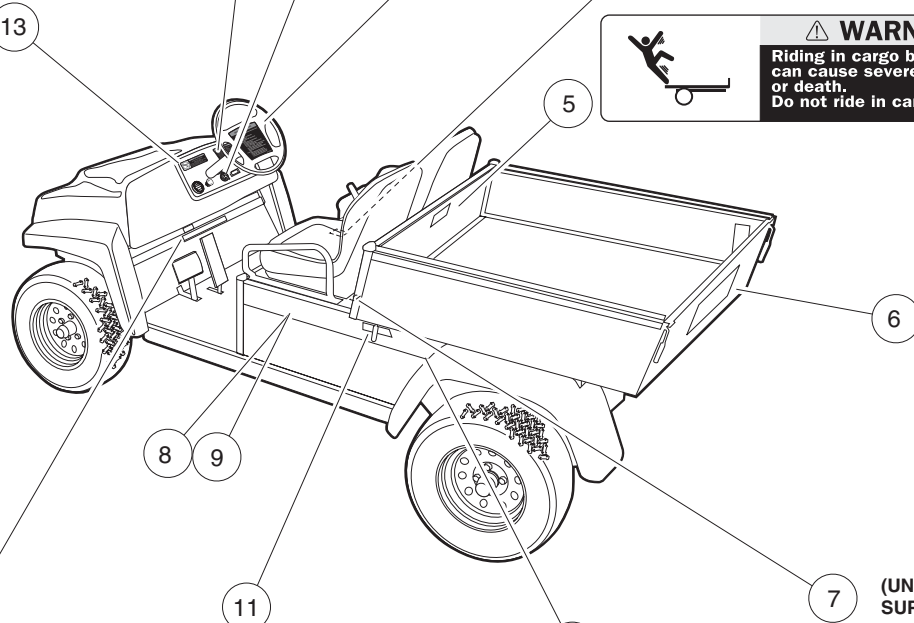

WARNING
Crush area.
Can cause severe injury.
Stay clear when closing bed.

LATCH

CCI 1015437-01

**(UNDER SEAT SUPPORT)****CRUSH AREA****STAY CLEAR**

CCI 1016094-01

VEHICLE LOADING

Read Owner's Manual and warnings on dash.

- Vehicle rated capacity - 1200 lbs. on level surface only. Weight to include passengers, cargo bed load, and gross trailer weight. See Owner's Manual.
- Maximum cargo load - 800 lbs. Weight to include cargo bed load and gross trailer weight.
- Maximum trailer hitch tongue weight - 150 lbs.

- Cargo should be evenly spread over the floor of the cargo bed as far forward as possible and secured.
- For vehicle stability, when fully loaded, drive slowly and avoid stopping on or backing down steep hills.
- Avoid top heavy loads. See Owner's Manual.
- When driving on uneven terrain or down steep hills, reduce speed and load.

CCI 1019602-01

DECALS – TURF 272 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102029101</u>	Decal, Driver/Passenger Warning	1
2	<u>101825101</u>	Decal, Key Switch (off-on)	1
2	<u>101825102</u>	Decal, Key Switch (off-on/start)	1
3	<u>102029301</u>	Decal, Operating Instructions (pedal-start vehicles)	1
3	<u>102224301</u>	Decal, Operating Instructions (key-start vehicles)	1
4	<u>101553901</u>	Decal, Bed Load Warning	1
5	<u>102046601</u>	Decal, Differential Lock Control Warning	1
6	<u>1013317</u>	Decal, Club Car Tailgate	1
7	<u>101609401</u>	Decal, Crush Area Warning	2
8	<u>102158301</u>	Decal, Turf 272 (driver side) (includes items 10 and 11)	1
9	<u>102157001</u>	Decal, Turf 272 (passenger side) (includes item 10)	1
10	N/A	Decal, Ingersoll-Rand	1
11	<u>101543701</u>	Decal, Bed Latch Warning	1
12	<u>101960201</u>	Decal, Vehicle Loading	1
13	<u>102044601</u>	Decal, Under Age Warning	1

3
G

⚠ WARNING**ROLLOVER OR FALLING OFF MAY CAUSE DEATH**

- Read operators manual and operating instructions.
- Remain seated and hold on to seat handle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not start vehicle until all occupants are seated.
- One (1) person per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Do not operate while under the influence of alcohol or drugs.
- Never attempt jumps.

CCI 102029101

OPERATING INSTRUCTIONS

- Read owner's manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.

TO START ENGINE

- Place shift lever in "N" – Neutral position.
- Depress brake pedal.
- Turn key switch to "START" position and hold, activating the choke as necessary, until engine starts.

TO OPERATE VEHICLE

- Make sure wheels are turned in desired direction.
- Be sure nothing is in your path.
- While vehicle is stopped, select vehicle direction by placing shift lever in desired position.
- F – Forward N – Neutral R – Reverse (Buzzer will sound)
- Release hand brake.
- Slowly push accelerator pedal to increase speed.
- Accelerator pedal must be released to move shift lever.

TO STOP VEHICLE

- Release accelerator pedal and push brake pedal.
- After stopping, firmly set hand brake.
- Turn key to "OFF" position, remove key and place shift lever in straight up neutral position when not in use.

CCI 102224301

**UNDER
16**

⚠ WARNING

YOUNG DRIVERS INCREASE CHANCE OF DEATH

- Young drivers may not be able to control vehicle.
- No drivers younger than 16 years old.
- Do not leave children unattended on vehicle.

CCI 102044601

⚠ WARNING

Riding in cargo bed can cause severe injury or death.

Do not ride in cargo bed.

CCI 1015539-01

○

OFF

ON


START

⚠ WARNING

REDUCED STEERING CONTROL MAY CAUSE SERIOUS INJURY OR DEATH

Disengage differential lock on paved surfaces.

CCI 102046601

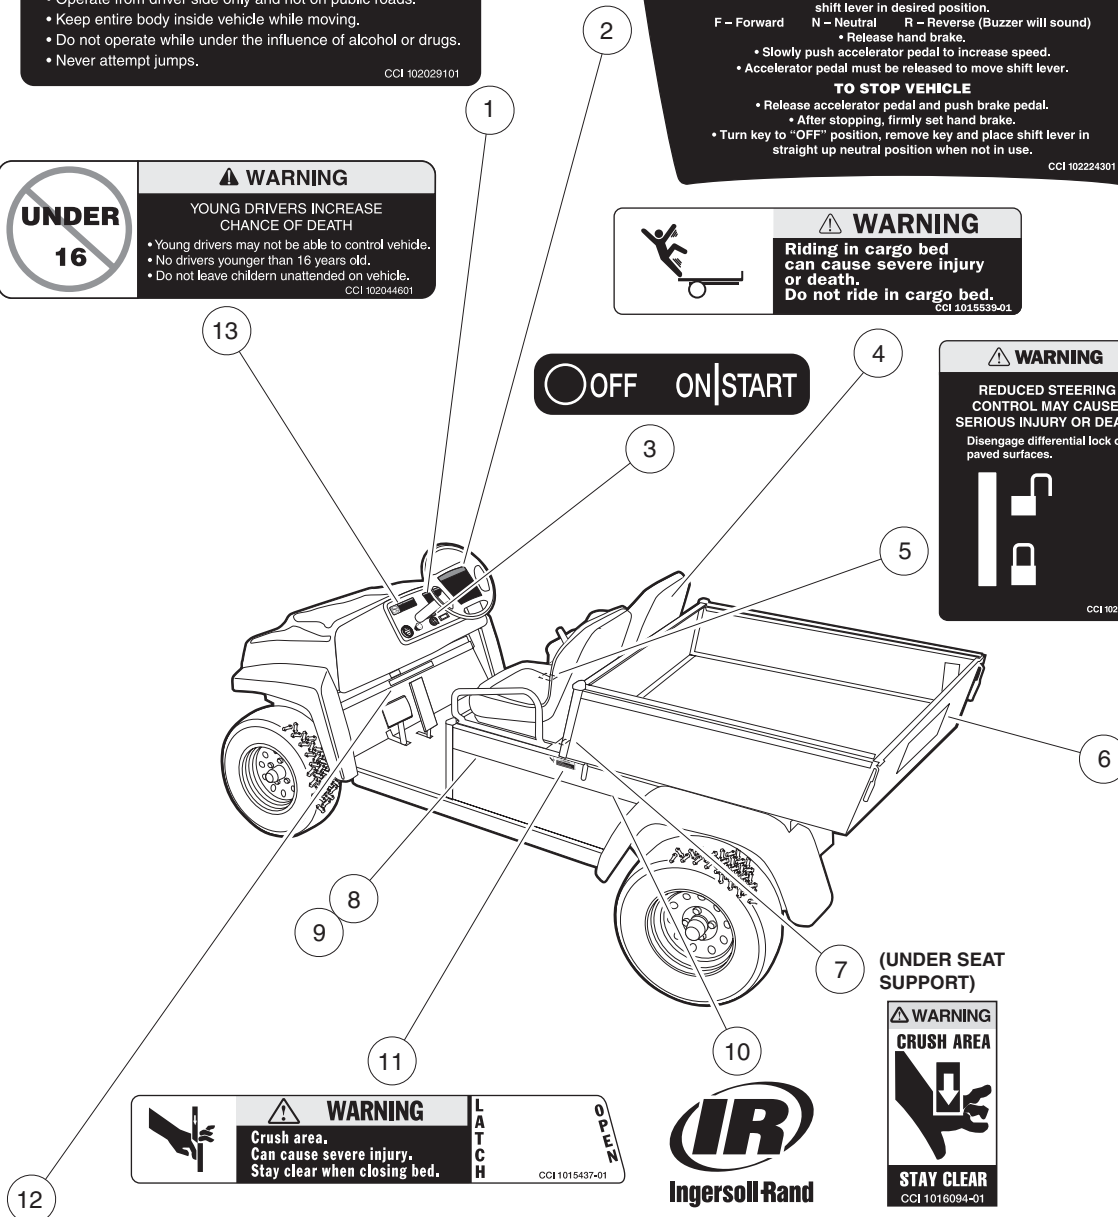

⚠ WARNING

Crush area. Can cause severe injury. Stay clear when closing bed.

LATCH

CCI 1015437-01



⚠ WARNING

CRUSH AREA

STAY CLEAR

CCI 1016094-01

VEHICLE LOADING

Read Owner's Manual and warnings on dash.

- Vehicle rated capacity - 1200 lbs. on level surface only. Weight to include passengers, cargo bed load, and gross trailer weight. See Owner's Manual.
- Maximum cargo load - 800 lbs. Weight to include cargo bed load and gross trailer weight.
- Maximum trailer hitch tongue weight - 150 lbs.


- Cargo should be evenly spread over the floor of the cargo bed as far forward as possible and secured.
 - For vehicle stability, when fully loaded, drive slowly and avoid stopping on or backing down steep hills.
 - Avoid top heavy loads. See Owner's Manual.
 - When driving on uneven terrain or down steep hills, reduce speed and load.
- CCI 1019602-01

DECALS – CARRYALL 272 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3
		1 2 3 4		G
1	<u>102029101</u>	Decal, Driver/Passenger Warning	1	
2	<u>102224301</u>	Decal, Operating Instructions (key-start vehicles)	1	
3	<u>101825102</u>	Decal, Key Switch (off-on/start)	1	
4	<u>101553901</u>	Decal, Bed Load Warning	1	
5	<u>102046601</u>	Decal, Differential Lock Control Warning	1	
6	<u>102234901</u>	Decal, Club Car Tailgate	1	
7	<u>101609401</u>	Decal, Crush Area Warning	2	
8	<u>102157601</u>	Decal, Carryall 272 (driver side) (includes items 10 and 11)	1	
9	<u>102156301</u>	Decal, Carryall 272 (passenger side) (includes item 10)	1	
10	N/A	Decal, Ingersoll-Rand	1	
11	<u>101543701</u>	Decal, Bed Latch Warning	1	
12	<u>101960201</u>	Decal, Vehicle Loading	1	
13	<u>102044601</u>	Decal, Under Age Warning	1	




(ON PASSENGER-SIDE
SEAT SUPPORT)

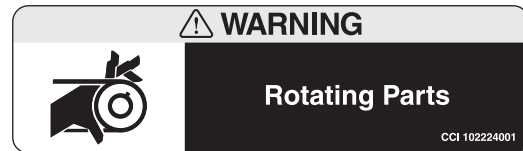


(ON PASSENGER-SIDE
REAR FENDER)



(ON FRONT AND REAR
RECEIVER HITCHES)

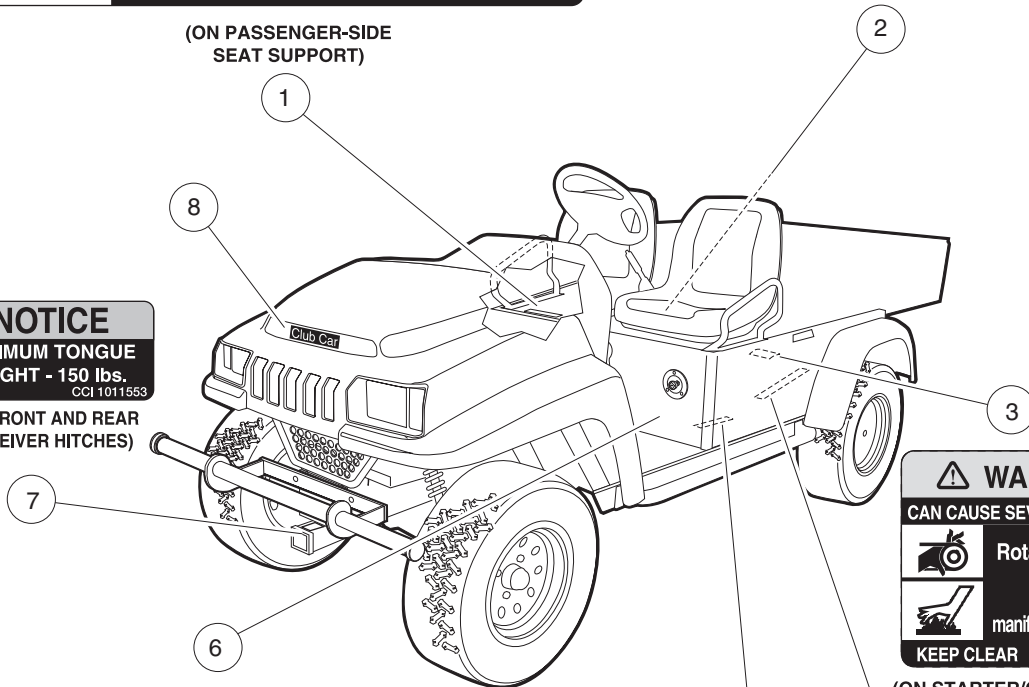


(FOR VEHICLES WITH WINCH ACCESSORY)

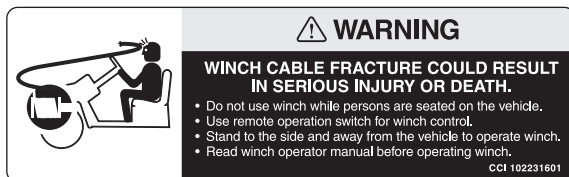

(ON SEAT SUPPORT PANEL)



(ON STARTER/GENERATOR
AND ENGINE)

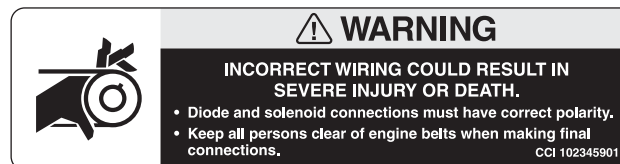

(ON FRAME ABOVE DIODE)



(ON FRAME NEXT TO BATTERY)

DECALS, CONTINUED – TURF 272 AND CARRYALL 272 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3	G
		1 2 3 4			
1	<u>101547601</u>	Decal, Gasoline Warning	1		
2	<u>102224001</u>	Decal, Rotating Parts	1		
3	<u>101960501</u>	Decal, Rotating Parts and Hot Manifold	2		
4	<u>101915201</u>	Decal, Frame Ground	1		
5	<u>102345901</u>	Decal, Diode Wiring (key-start vehicle only)	1		
6	<u>102231601</u>	Decal, Winch Cable Warning	1		
7	<u>1011553</u>	Decal, Trailer Hitch	2		
8	<u>102046501</u>	Decal, Club Car (Turf 272)	1		
8	<u>102228001</u>	Decal, Club Car (Carryall 272)	1		

⚠ WARNING

ROLLOVER OR FALLING OFF MAY CAUSE DEATH

- Read operators manual and operating instructions.
- Remain seated and hold on to seat handle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not start vehicle until all occupants are seated.
- Front seats: One (1) person per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Do not operate while under the influence of alcohol or drugs.
- Never attempt jumps.

CCI 102029101

OPERATING INSTRUCTIONS

- Read owner's manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.

TO START ENGINE

- Place shift lever in "N" - Neutral position.
- Depress brake pedal.
- Turn key switch to "START" position and hold, activating the choke as necessary, until engine starts.

TO OPERATE VEHICLE

- Make sure wheels are turned in desired direction.
- Be sure nothing is in your path.
- While vehicle is stopped, and the engine is at idle, select vehicle direction by placing shift lever in desired position.
- F - Forward N - Neutral R - Reverse (Buzzer will sound)
- Release hand brake.
- Slowly push accelerator pedal to increase speed.
- Engine must be at idle before moving shift lever.

TO STOP VEHICLE

- Release accelerator pedal and push brake pedal.
- After stopping, firmly set hand brake.
- Turn key to "OFF" position, remove key and place shift lever in straight up neutral position when not in use.

CCI 102224301

⚠ WARNING

REDUCED STEERING CONTROL MAY CAUSE SERIOUS INJURY OR DEATH

Disengage differential lock on paved surfaces.



CCI 102046601

⚠ WARNING

YOUNG DRIVERS INCREASE CHANCE OF DEATH

UNDER 16

- Young drivers may not be able to control vehicle.
- No drivers younger than 16 years old.
- Do not leave children unattended on vehicle.

CCI 102044601


OFF ON/START

⚠ WARNING

Riding in cargo bed can cause severe injury or death. Do not ride in cargo bed.



CCI 101533901

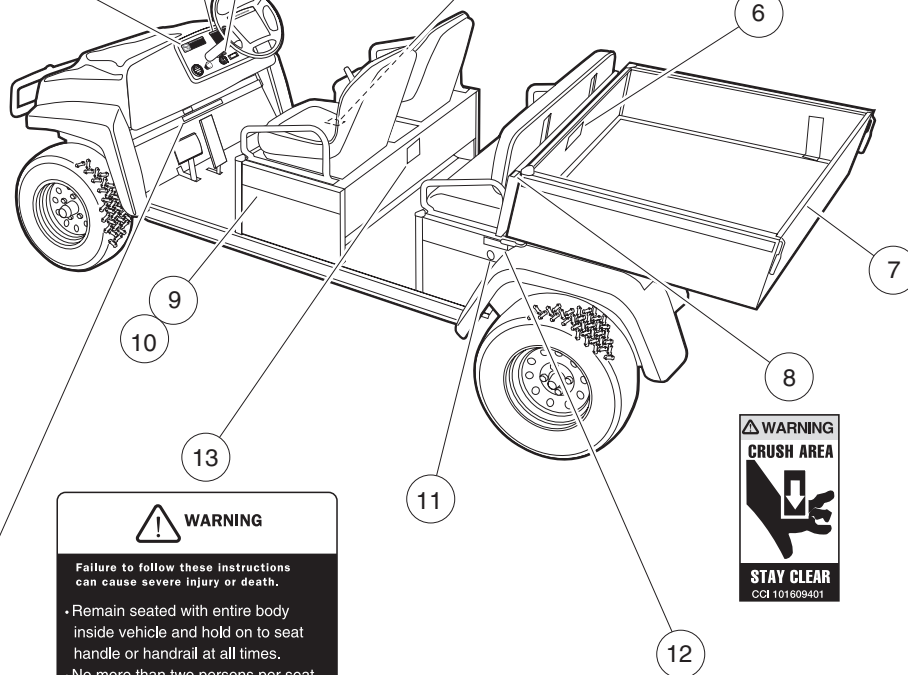

⚠ WARNING

Failure to follow these instructions can cause severe injury or death.

- Remain seated with entire body inside vehicle and hold on to seat handle or handrail at all times.
- No more than two persons per seat.
- Do not leave children unattended on vehicle at anytime.
- Never stand in front of or behind vehicle.

CCI 1017057-01

⚠ WARNING

CRUSH AREA

STAY CLEAR



CCI 101609401

⚠ WARNING

Crush area. Can cause severe injury. Stay clear when closing bed.

LATCH OPEN



VEHICLE LOADING

Read Owner's Manual and warnings on dash.

- Vehicle rated capacity - 1300 lbs. on level surface only. Weight to include passengers, cargo bed load, and gross trailer weight. See owner's manual.
- Maximum cargo load - 500 lbs. Weight to include cargo bed load and gross trailer weight.
- Maximum trailer hitch tongue weight - 150 lbs.


- Cargo should be evenly spread over the floor of the cargo bed as far forward as possible and secured.
 - For vehicle stability, when fully loaded, drive slowly and avoid stopping on or backing down steep hills.
 - Avoid top heavy loads. See owner's manual.
 - When driving on uneven terrain or down steep hills, reduce speed and load.
- CCI 102274301

DECALS, CONTINUED – CARRYALL 472 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3
		1 2 3 4		G
1	<u>102044601</u>	Decal, Under Age Warning	1	
2	<u>102029101</u>	Decal, Driver/Passenger Warning	1	
3	<u>101825102</u>	Decal, Key Switch	1	
4	<u>102224301</u>	Decal, Operating Instructions	1	
5	<u>102046601</u>	Decal, Differential Lock Control Warning	1	
6	<u>101553901</u>	Decal, Bed Load Warning	1	
7	<u>102234901</u>	Decal, Club Car Tailgate	1	
8	<u>101609401</u>	Decal, Crush Area Warning	2	
9	<u>102334801</u>	Decal, Carryall 472 (driver side) (includes items 11 and 12)	1	
10	<u>102334701</u>	Decal, Carryall 472 (passenger side) (includes item 11)	1	
11	N/A	Decal, Ingersoll-Rand	1	
12	<u>101543701</u>	Decal, Bed Latch Warning	1	
13	<u>101705701</u>	Decal, Passenger Warning	1	
14	<u>102274301</u>	Decal, Vehicle Loading	1	



(ON PASSENGER SIDE
SEAT SUPPORT)

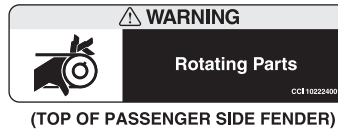


(TOP OF PASSENGER SIDE FENDER)




(ON STARTER/GENERATOR
AND ENGINE)



(ON FRONT AND REAR
RECEIVER HITCHES)

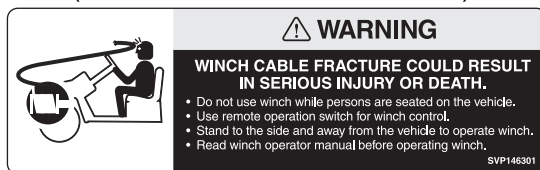

(ON SEAT SUPPORT PANEL)

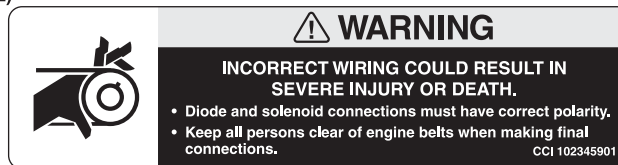

(ON FRAME ABOVE DIODE)



(ON FRAME)

DECALS, CONTINUED – CARRYALL 472 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101547601</u>	Decal, Gasoline Warning	1
2	<u>102224001</u>	Decal, Rotating Parts	1
3	<u>101960501</u>	Decal, Rotating Parts and Hot Manifold	2
4	<u>101915201</u>	Decal, Frame Ground	1
5	<u>102345901</u>	Decal, Diode Wiring (key-start vehicle only)	1
6	<u>102231601</u>	Decal, Winch Cable Warning	1
7	<u>1011553</u>	Decal, Trailer Hitch	2
8	<u>102228001</u>	Decal, Club Car	1

3
G


3

G

BRAKE SYSTEMS

4

G

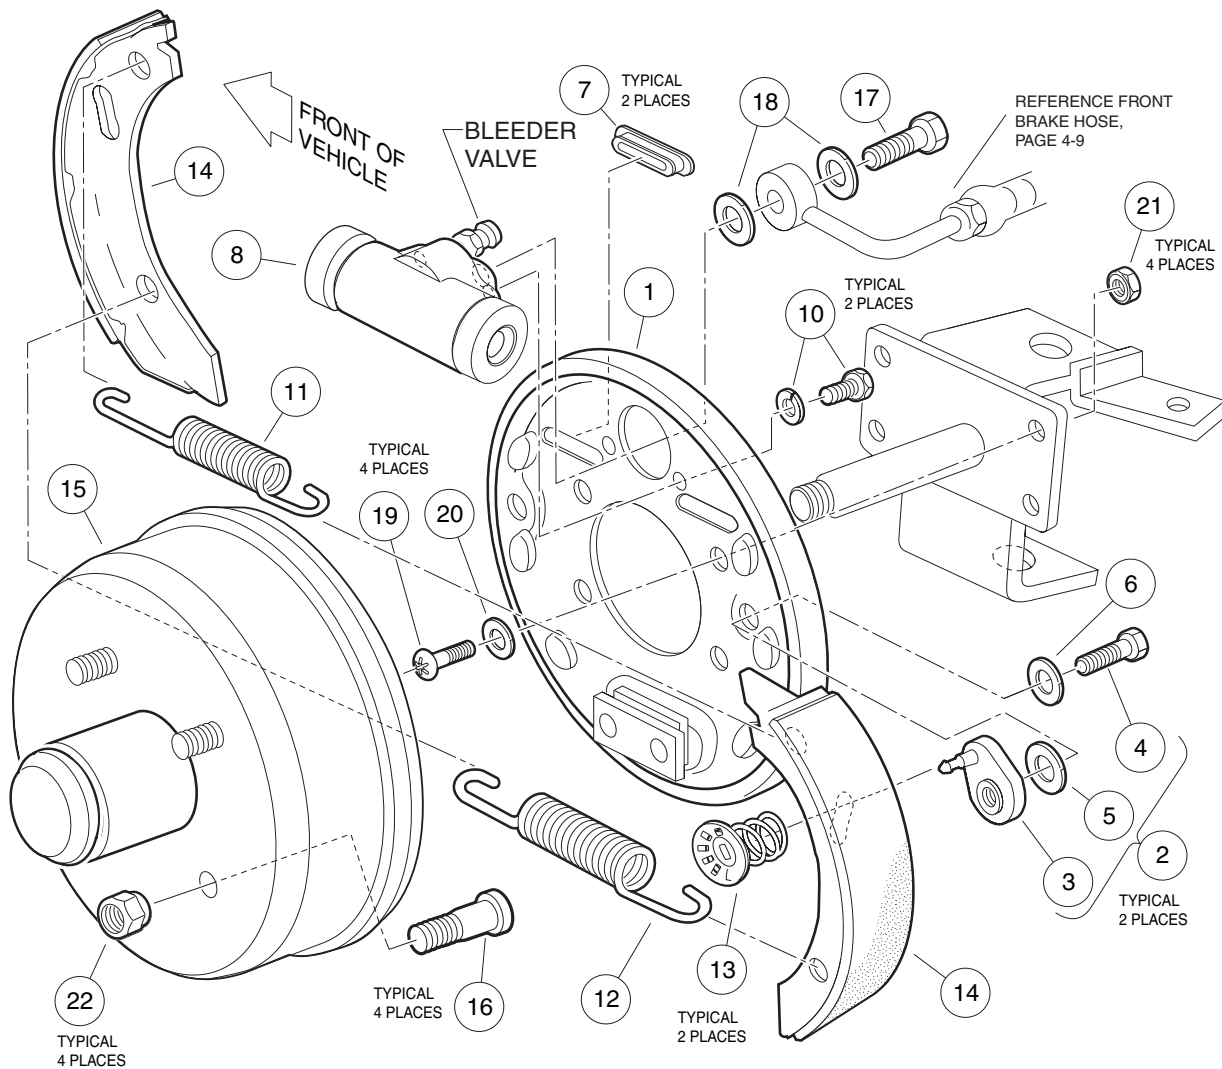


FRONT BRAKE ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>102033301</u>	Cluster, Brake (includes items 1 - 14)	2
1	<u>102049401</u>	Plate, Backing	1
2	<u>102049601</u>	Kit, Adjuster, Axle (one kit will service both front brakes) (includes items 3 - 7)	1
3	<u>102049501</u>	Assembly, Adjuster Lever	4
4	<u>102049901</u>	Bolt, 1/4-28 x .31	4
5	<u>102050001</u>	Washer, Bellville	4
6	N/A	Washer, Flat	4
7	<u>102050101</u>	Cover, Dust	4
8	<u>102050301</u>	Cylinder, Wheel, 5/8	1
9	<u>102049701</u>	Kit, Axle Hardware (not shown) (includes items 10 - 13)	1
10	<u>102050401</u>	Bolt, Wheel Cylinder, Self-Locking, M6 x 1	2
11	<u>102050601</u>	Spring, Shoe to Shoe (upper)	1
12	<u>102050501</u>	Spring, Shoe to Shoe (lower)	1
13	<u>102050701</u>	Hold-down, Shoe	2
14	<u>102050201</u>	Kit, Hydraulic Shoe (BPI 4070) (four shoes per kit)	1
15	<u>102044201</u>	Assembly, Brake Drum and Hub (includes item 16)	2
16	<u>1013787</u>	Stud, Lug, 1/2-20	4
17	<u>102044401</u>	Bolt, Banjo, 3/8-24	2
18	<u>102045501</u>	Washer, Copper	4
19	<u>102051001</u>	Screw, Torx Pan-Head, 5/16-24 x 1	8
20	<u>1017233</u>	Washer, Flat, 5/16	8
21	<u>1013924</u>	Nut, Hex-Head Lock, Grade 8, 5/16-24	8
22	<u>1010984</u>	Nut, Lug	8

4

G

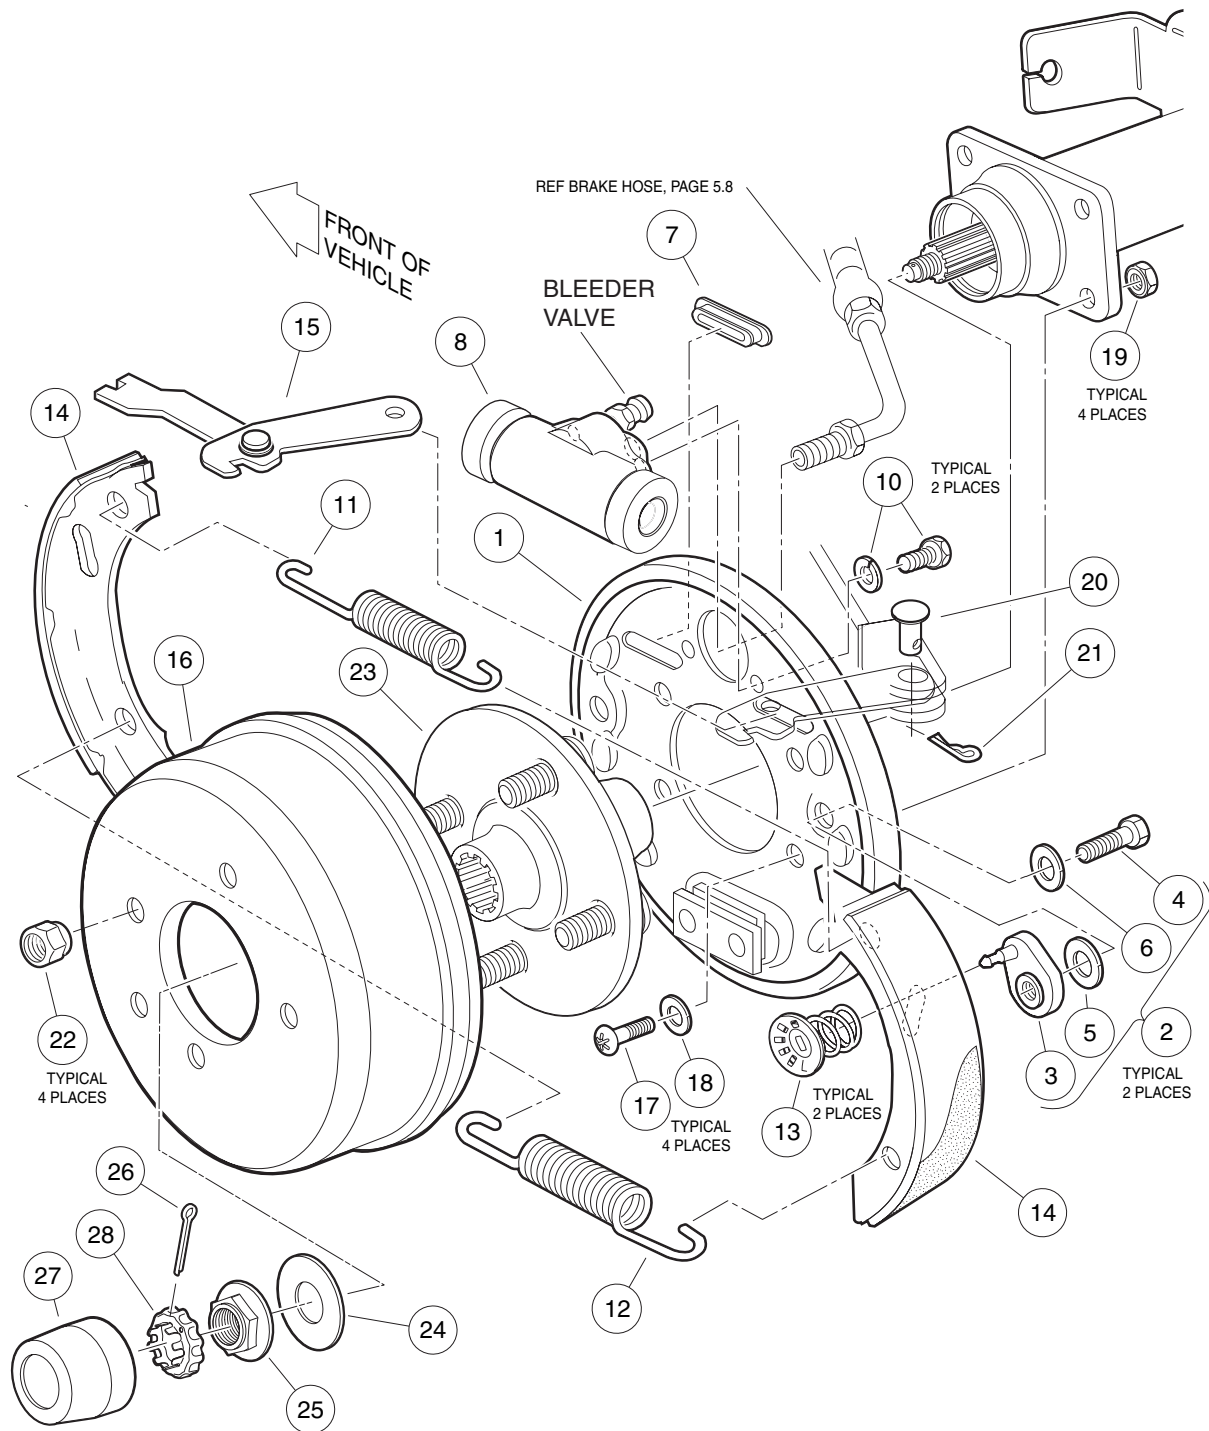


REAR BRAKE ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>102033401</u>	Assembly, Brake, Driver-Side (includes items 1 - 15)	1
	<u>102033501</u>	Assembly, Brake, Passenger-Side (includes items 1 - 15)	1
1	<u>102049401</u>	Plate, Backing	1
2	<u>102049601</u>	Kit, Adjuster, Axle (one kit will service both rear brakes) (includes items 3 - 7)	1
3	<u>102049501</u>	Lever, Adjuster	4
4	<u>102049901</u>	Bolt, 1/4-28 x .31	4
5	<u>102050001</u>	Washer, Bellville	4
6	N/A	Washer, Flat	4
7	<u>102050101</u>	Cover, Dust	4
8	<u>102050801</u>	Cylinder, Wheel, 7/8	1
9	<u>102049701</u>	Kit, Axle Hardware (not shown) (includes items 10 - 13)	1
10	<u>102050401</u>	Bolt, Wheel Cylinder, Self-Locking, M6 x 1	2
11	<u>102050601</u>	Spring, Shoe to Shoe (upper)	1
12	<u>102050501</u>	Spring, Shoe to Shoe (lower)	1
13	<u>102050701</u>	Hold-Down, Shoe	2
14	<u>102050201</u>	Kit, Hydraulic Shoe (BPI 4070) (four shoes per kit)	1
15	<u>102050901</u>	Lever, Park Brake, Passenger-Side	1
15	<u>102050902</u>	Lever, Park Brake, Driver-Side	1
16	<u>102264701</u>	Drum, Brake	1
17	<u>102051001</u>	Screw, Torx Pan-Head, 5/16-24 x 1	8
18	<u>1017233</u>	Washer, Flat, 5/16	8
19	<u>1013924</u>	Nut, Hex-Head Lock, Grade 8, 5/16-24	8
20	<u>1010829</u>	Pin, Clevis, 5/16	2
21	<u>1013366</u>	Pin, Hair Spring Cotter	2
22	<u>1010984</u>	Nut, Lug	8
23	<u>102269101</u>	Flange, Wheel Bolt	2
24	<u>102269301</u>	Washer, Flat	2
25	<u>102269201</u>	Nut, Washer	2
26	<u>101838801</u>	Pin, Cotter	2
27	<u>102274101</u>	Cap, Rubber Center	2
28	<u>102276001</u>	Cap, Locking	2

4

G

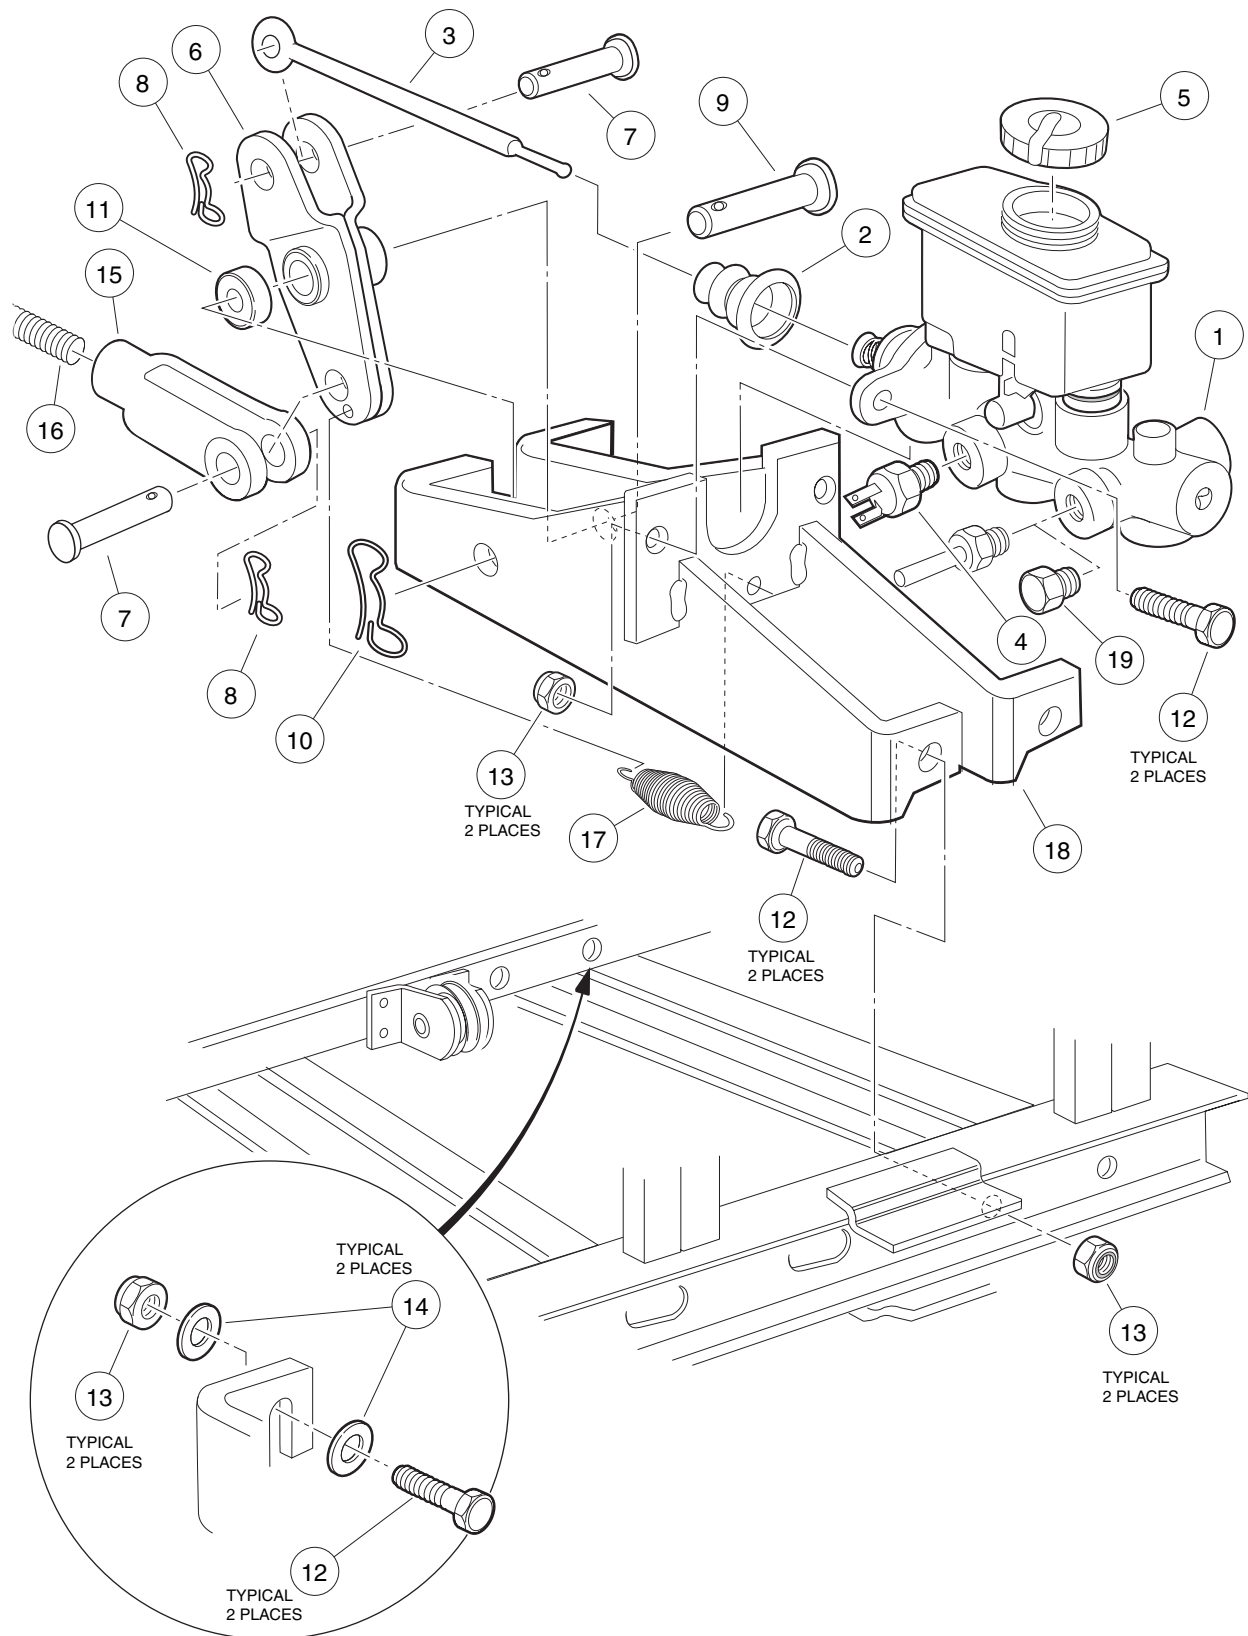


MASTER CYLINDER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102033201	Assembly, Master Cylinder (includes items 2 - 5)	1
2	102051101	Boot	1
3	102051201	Rod, Push	1
4	102051301	Switch, Pressure	1
5	102051401	Cap, Filler	1
6	102054201	Crank, Bell (includes items 7 - 11)	1
7	N/A	Pin, Clevis, 3/8 x 1 5/16	2
8	N/A	Pin, Bow Tie Locking.....	2
9	N/A	Pin, Clevis, 1/2 x 2 1/2	1
10	N/A	Pin, Bow Tie .120 x 2.750	1
11	N/A	Spacer (Not interchangeable with spacer 102057801)	1
12	1010934	Screw, Hex-Head Cap, 5/16-18 x 1	6
13	7473	Nut, Nylon Lock, 5/16	6
14	1241	Washer, Flat, Type A, 5/16	4
15	101806102	Clevis, Rod	1
16	101953105	Rod, Equalizer	1
17	1013531	Spring, Brake Pedal Return	1
18	102054401	Bracket, Master Cylinder Mounting	1
19	102339201	Plug, 3/8-24 (Carryall 472 only)	1


4

G

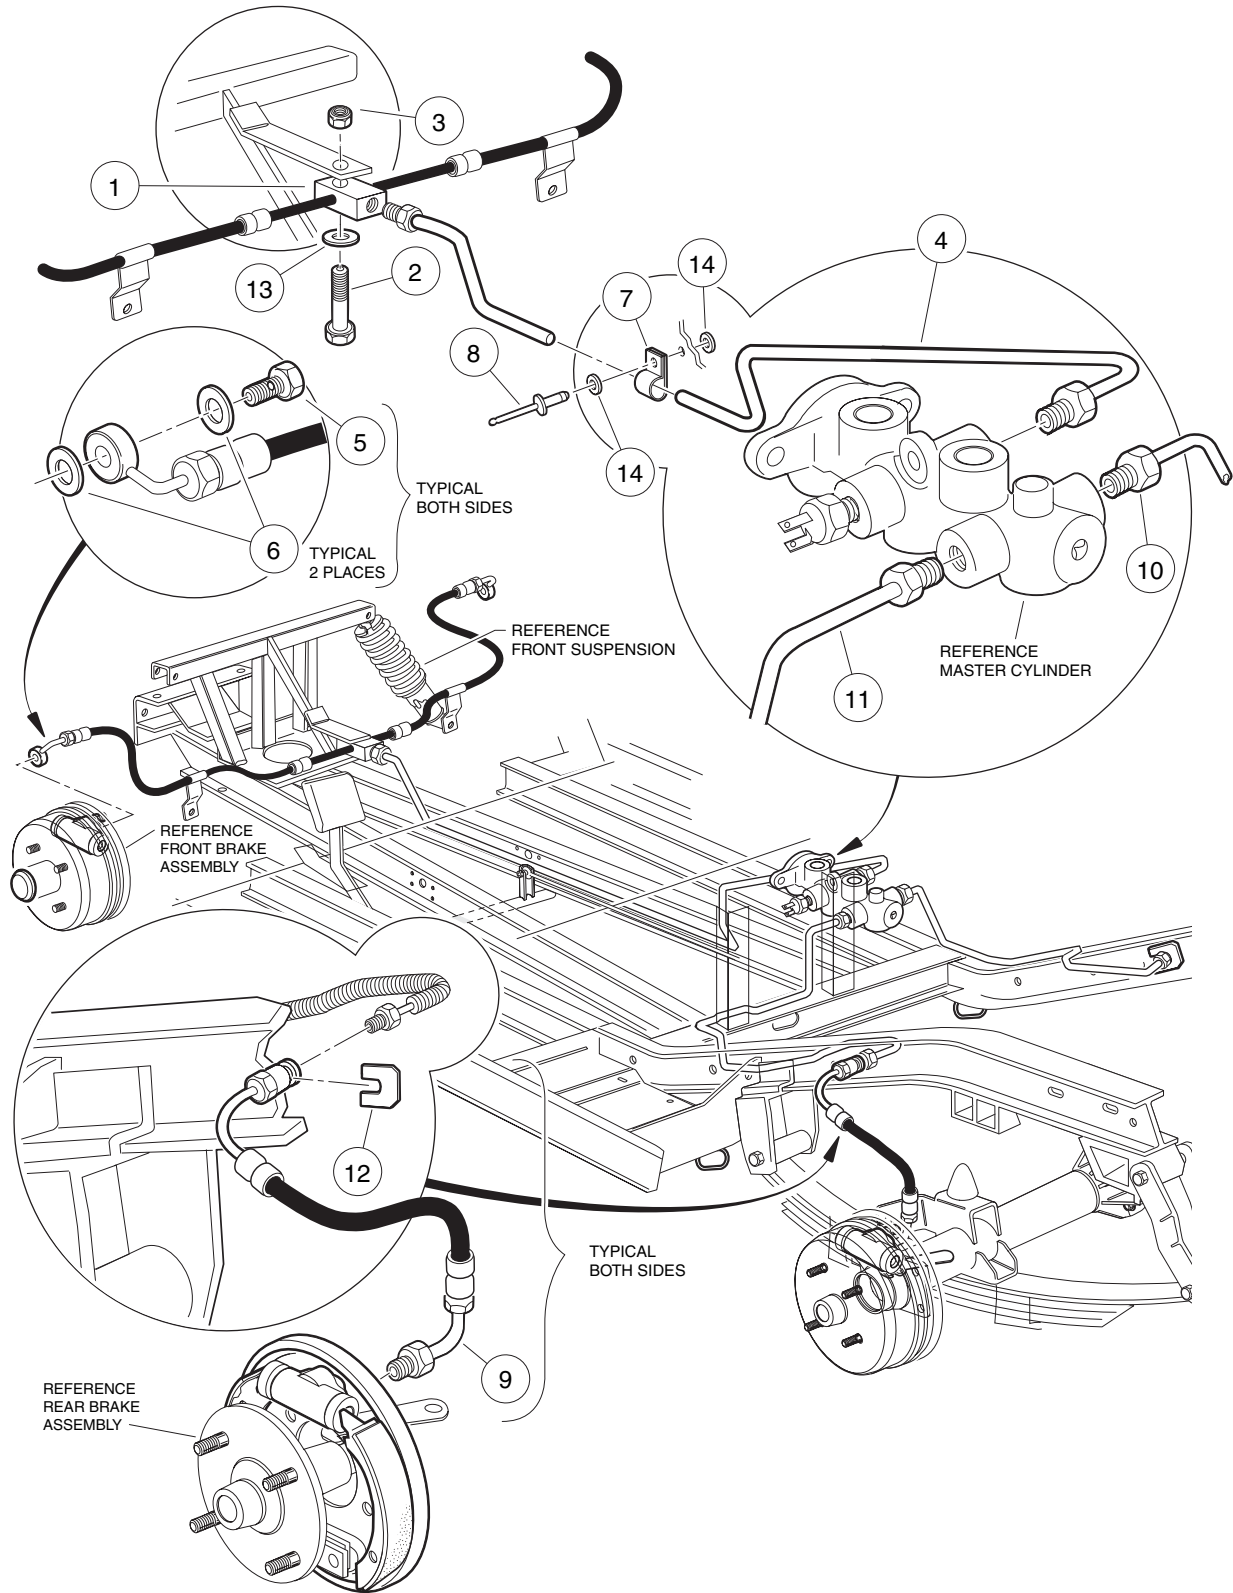

HYDRAULIC BRAKE SYSTEM – TURF 272 AND CARRYALL 272 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	102032801	Hose, Brake, Front	1	
2	<u>7479</u>	Screw, Hex-Head Cap, 1/4-20 x 1-1/4	1	
3	<u>8233</u>	Nut, Nylon Lock, 1/4-20	1	
4	<u>102032901</u>	Line, Brake, Front	1	
5	<u>102044401</u>	Bolt, Banjo, 3/8-24	2	
6	<u>102045501</u>	Washer, Copper	4	
7	<u>102045801</u>	P-Clamp	1	
8	1014136	Rivet, Pop, Stainless Steel, 3/16 x 1/2	1	
9	<u>102033101</u>	Hose, Brake, Rear	2	
10	<u>102033001</u>	Line, Brake, Rear (passenger side)	1	
11	<u>102044001</u>	Line, Brake, Rear (driver side)	1	
12	<u>102045701</u>	Clip, Horseshoe	2	
13	<u>1014007</u>	Washer, Flat, 1/4	1	
14	<u>183</u>	Washer, Flat, Type A, #10	2	

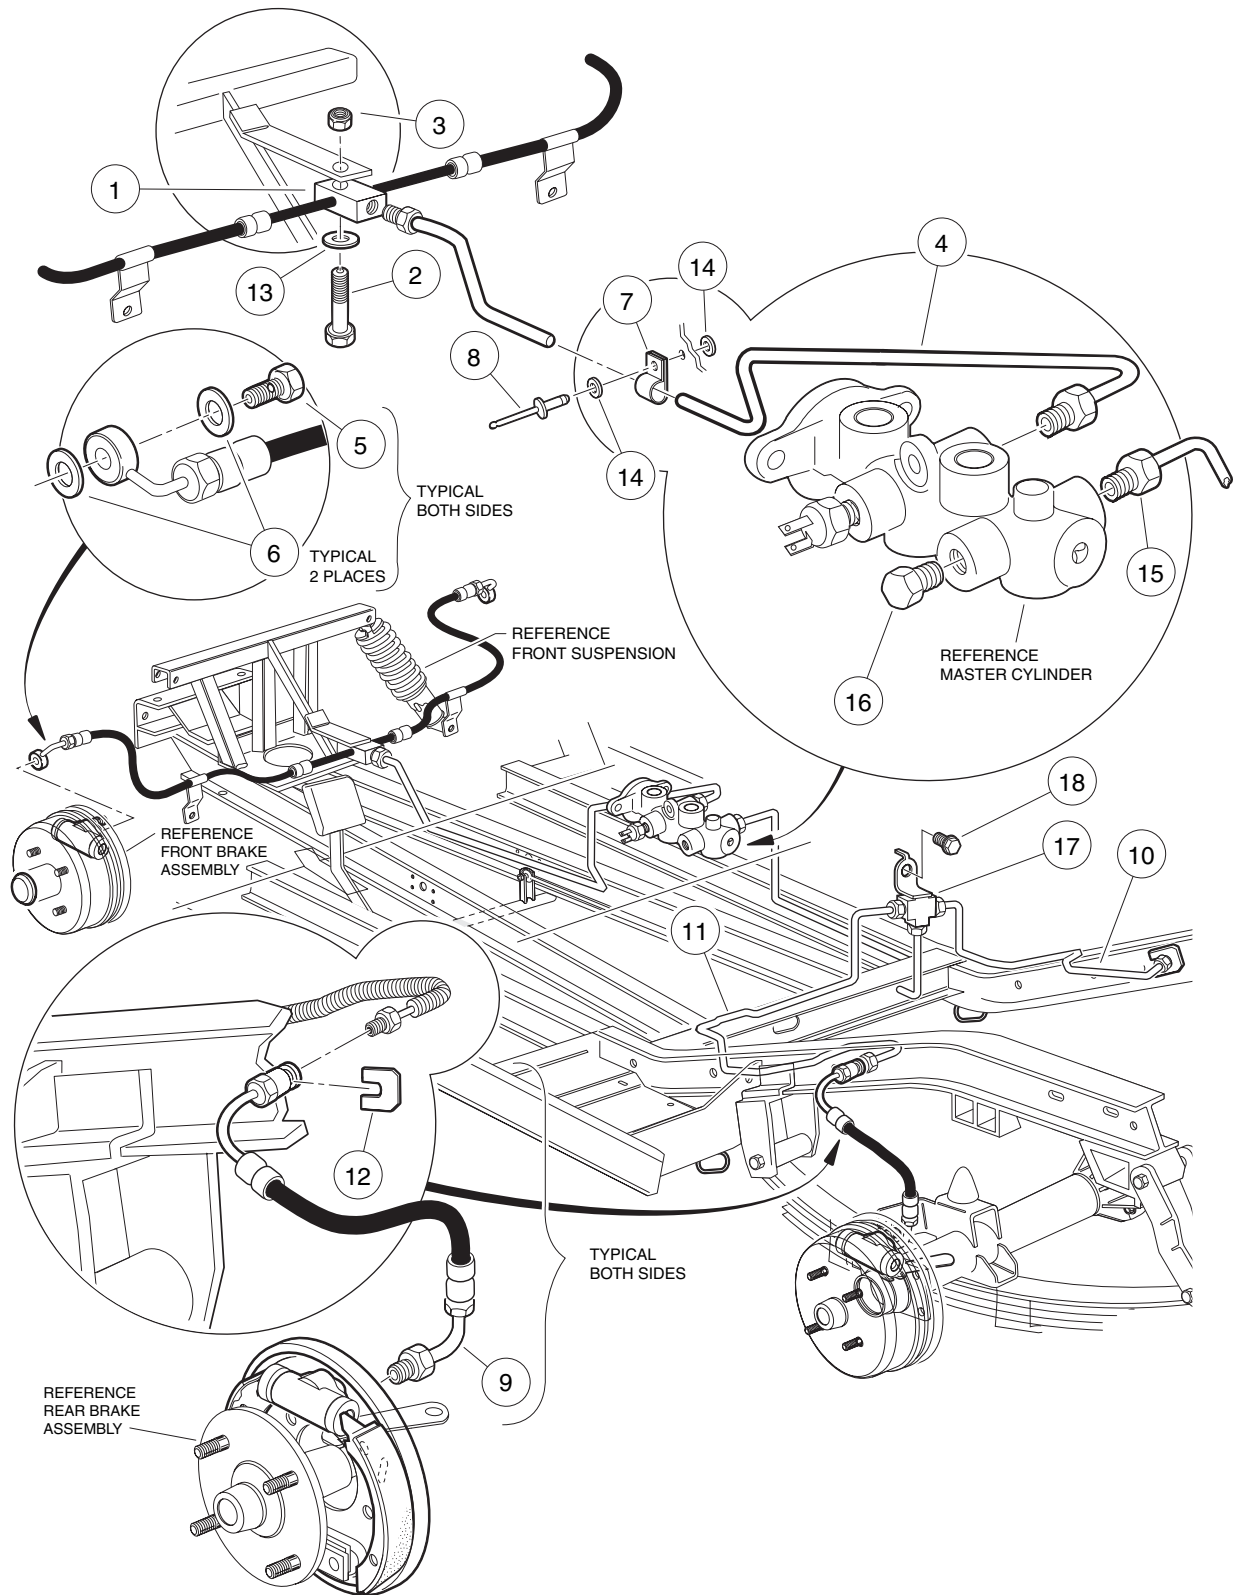


HYDRAULIC BRAKE SYSTEM – CARRYALL 472 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102032801	Hose, Brake, Front	1
2	<u>7479</u>	Screw, Hex-Head Cap, 1/4-20 x 1-1/4	1
3	<u>8233</u>	Nut, Nylon Lock, 1/4-20	1
4	<u>102032901</u>	Line, Brake, Front	1
5	<u>102044401</u>	Bolt, Banjo, 3/8-24	2
6	<u>102045501</u>	Washer, Copper	4
7	<u>102045801</u>	P-Clamp	1
8	1014136	Rivet, Pop, Stainless Steel, 3/16 x 1/2	1
9	<u>102033101</u>	Hose, Brake, Rear	2
10	<u>102331701</u>	Line, Brake, Rear (passenger side)	1
11	<u>102331801</u>	Line, Brake, Rear (driver side)	1
12	<u>102045701</u>	Clip, Horseshoe	2
13	<u>1014007</u>	Washer, Flat, 1/4	1
14	<u>183</u>	Washer, Flat, Type A, #10	2
15	<u>102331601</u>	Line, Brake Supply (master cylinder to tee)	1
16	<u>102339201</u>	Plug, 3/8-24	1
17	<u>102333301</u>	Tee, Brake, 3/8	1
18	<u>1012285</u>	Screw, Hex Washer-Head, 1/4-20 x 5/8	1

4

G

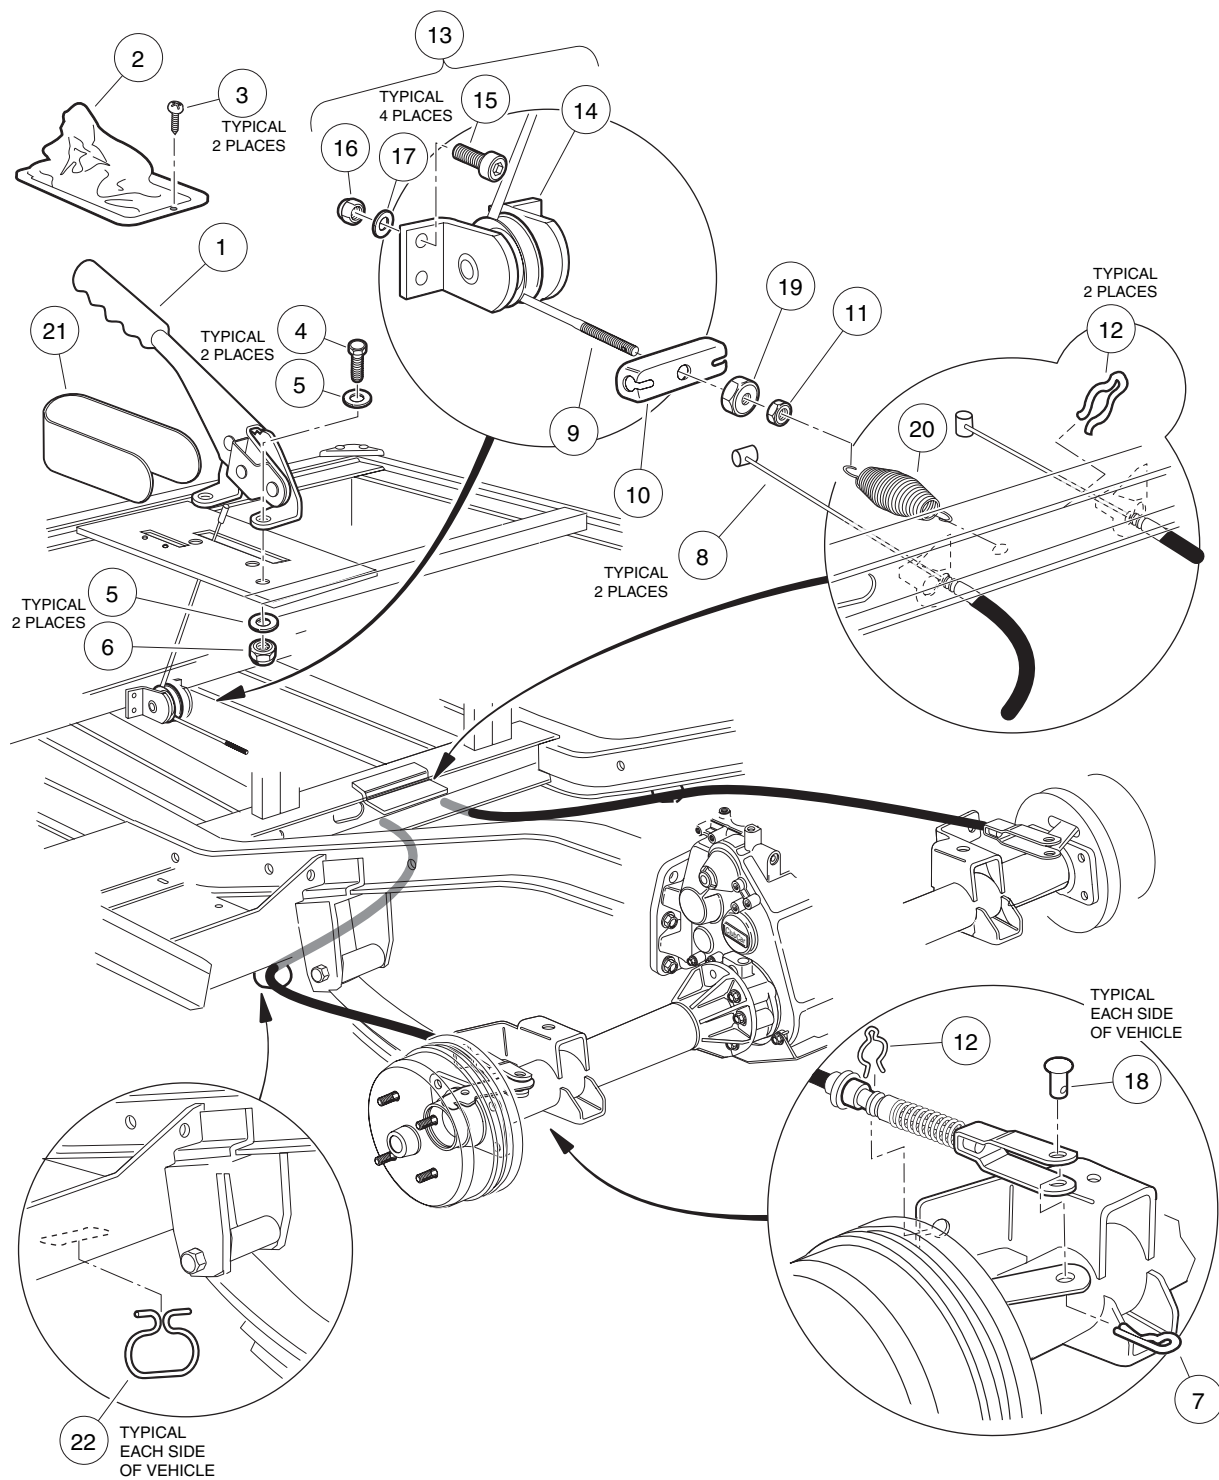

HAND PARK BRAKE ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102170901</u>	Lever, Park Brake	1
2	<u>102033701</u>	Boot, Park Brake Lever	1
3	<u>101832001</u>	Screw, Phillips-Head, 5/16-18	2
4	705	Screw, Hex-Head Cap, 3/8-16 x 1-1/4	2
5	<u>1011990</u>	Washer, Flat, 3/8	4
6	<u>8754</u>	Nut, Nylon Lock, 3/8-16	2
7	<u>1013366</u>	Pin, Hair Spring Cotter	2
8	<u>102033901</u>	Cable, Park Brake, Long	2
9	<u>102247201</u>	Cable, Park Brake, Short (Turf 272 and Carryall 272 Vehicles)	1
9	<u>102331201</u>	Cable, Park Brake (Carryall 472 Vehicles)	1
10	<u>102052701</u>	Equalizer	1
11	<u>102160501</u>	Nut, Hex, 5/16-24	1
12	<u>102028401</u>	Clip, Park Brake Cable	4
13	<u>102242701</u>	Kit, Pulley (includes items 14 - 17)	1
14	102028302	Pulley, Flat Mount, 2-inch	1
15	<u>101260202</u>	Screw, Socket-Head, #10-24 x .75	4
16	<u>1012438</u>	Nut, Nylon Lock, #10-24	4
17	<u>183</u>	Washer, Flat, Type A, #10	4
18	<u>1010829</u>	Pin, Clevis, 5/16	2
19	102052801	Nut, Hex Cone, 5/16-24	1
20	<u>1013531</u>	Spring	1
21	N/A	Shield, Boot	1
22	101900802	Hanger, Brake Cable.....	2

4

G


4

G

PEDAL GROUP

5

G

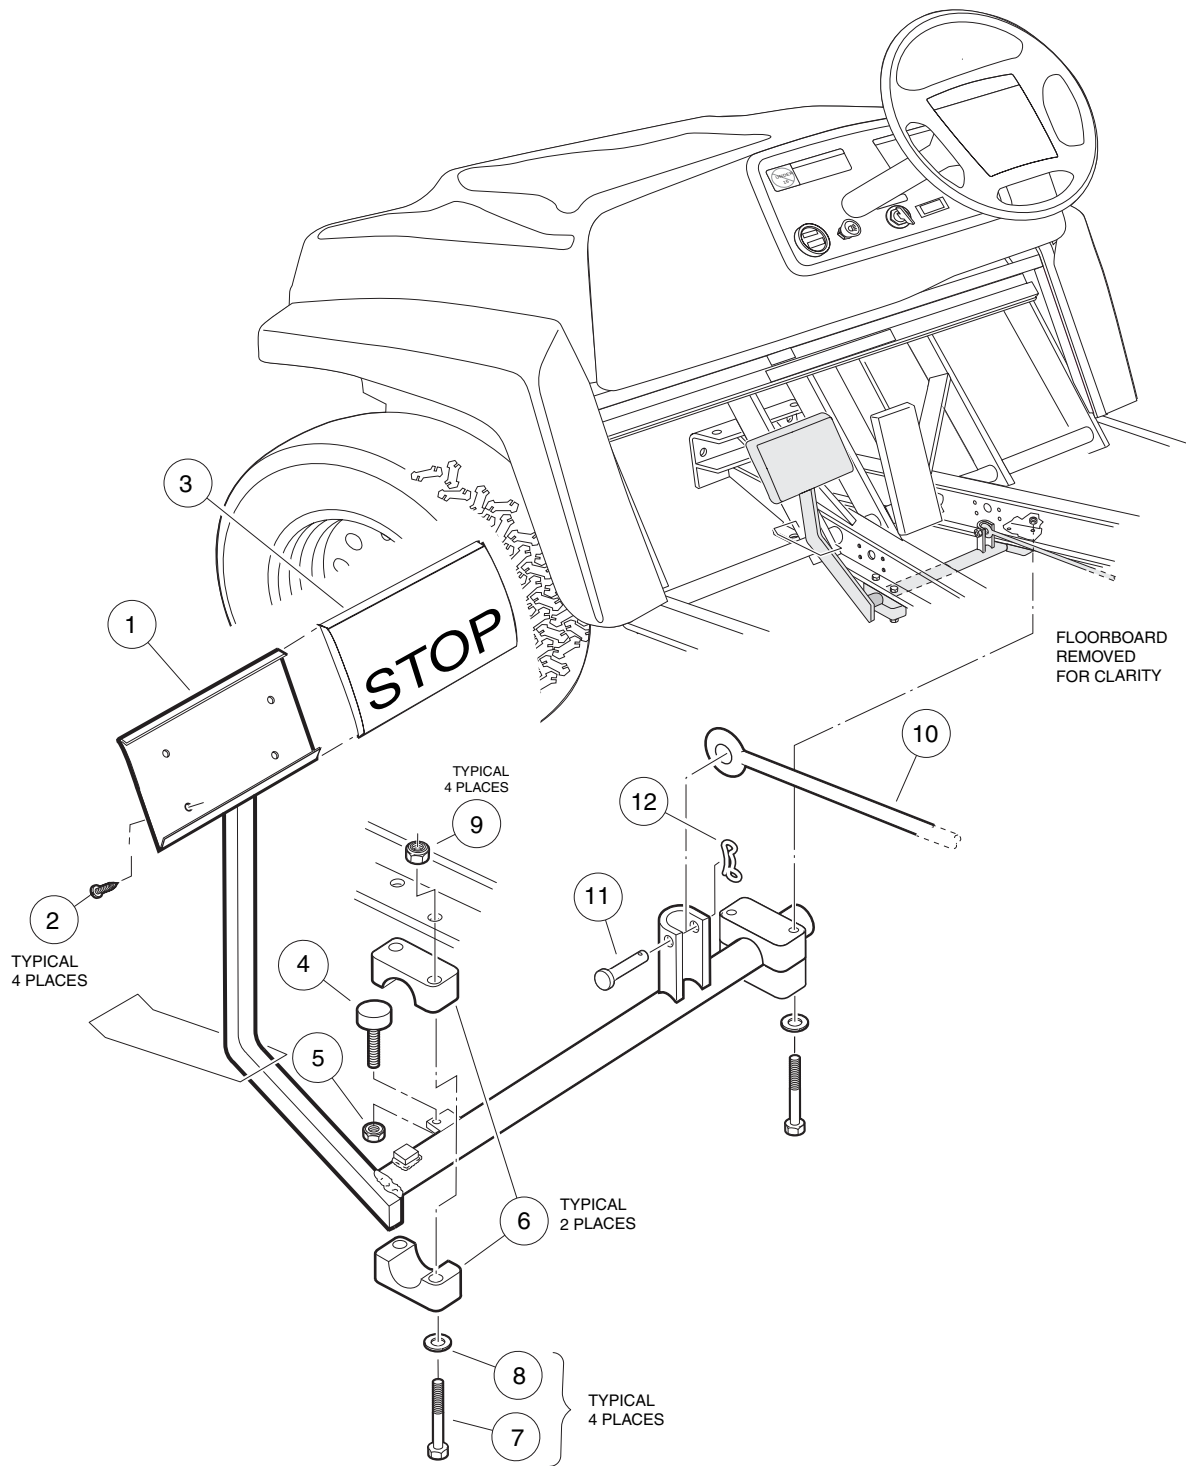


BRAKE PEDAL ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102028901</u>	Assembly, Brake Pedal (includes items 2 - 5)	1
2	<u>7716</u>	Screw, Slotted Hex Washer-Head, #10-16 x 1/2	4
3	<u>102028601</u>	Pad, Brake Pedal	1
4	<u>1010878</u>	Bumper, Rubber	1
5	<u>1028</u>	Nut, Hex, 1/4-20	1
6	<u>1011402</u>	Package, Brake Mounting Block (contains upper and lower for driver and passenger sides)	1
7	<u>1010921</u>	Screw, Hex-Head Cap, 5/16-18 x 2-1/2	4
8	<u>1241</u>	Washer, Flat, 5/16	4
9	<u>7473</u>	Nut, Nylon Lock, 5/16-18	4
10	<u>101953105</u>	Rod, Equalizer	1
11	<u>102323201</u>	Pin, Clevis, 5/16	1
12	<u>102292801</u>	Pin, Bow Tie Locking	1

5

G

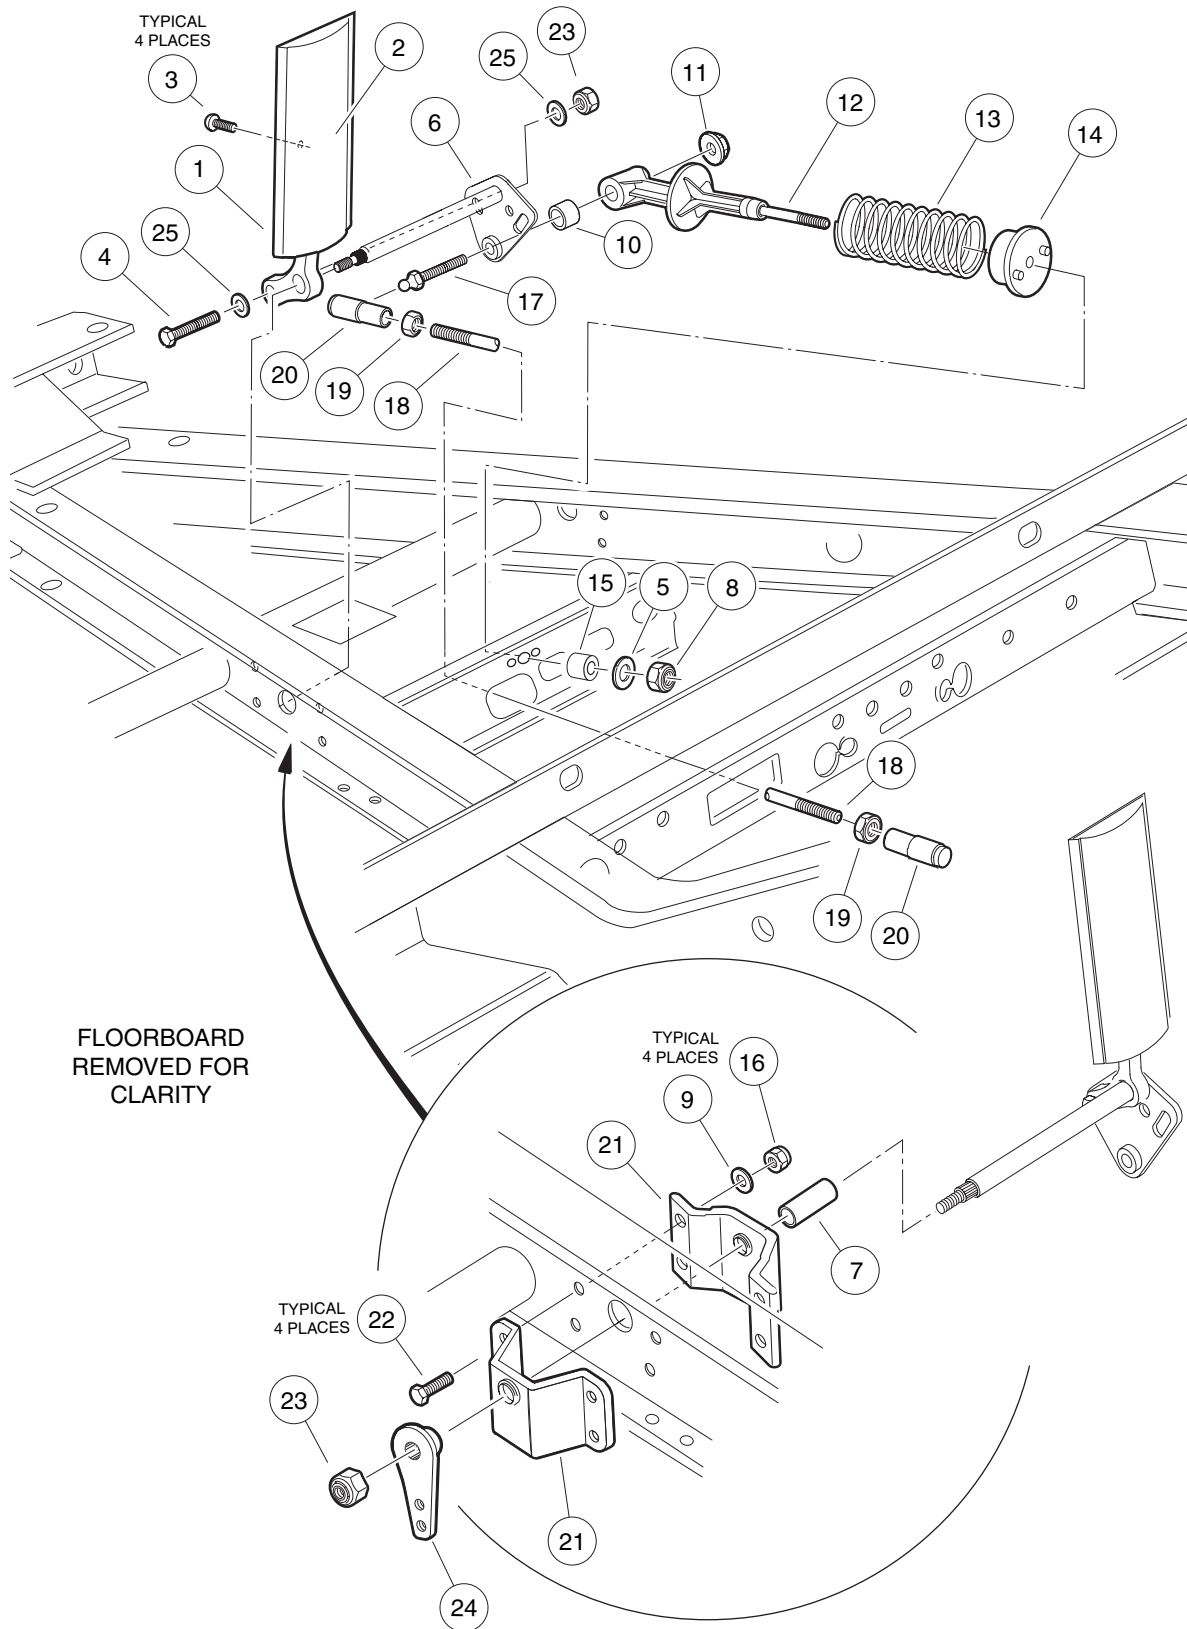

ACCELERATOR PEDAL ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1017696</u>	Assembly, Accelerator Pedal (includes item 2 and 3)	1
2	<u>1013871</u>	Pad, Pedal	1
3	<u>7716</u>	Screw, Slotted Hex Washer-Head, #10-16 x 1/2	4
4	<u>1624</u>	Screw, Hex-Head Cap, 3/8-16 x 1-1/2	1
5	<u>1241</u>	Washer, Flat, 5/16	1
6	<u>102026001</u>	Kit, Accelerator Pivot Rod (includes item 7)	1
7	<u>1011700</u>	Spacer	1
8	<u>7473</u>	Nut, Nylon Lock, 5/16-18	1
9	<u>332</u>	Washer, Flat, Type A, 1/4	4
10	<u>1017424</u>	Bearing, Pivot Support	1
11	<u>101966901</u>	Nut, Flanged Lock, 1/4-28	1
12	<u>101817401</u>	Retainer, Spring	1
13	<u>101796201</u>	Spring, Return	1
14	<u>1017378</u>	Cup, Spring	1
15	<u>1017380</u>	Bumper, Return Spring	1
16	<u>8233</u>	Nut, Nylon Lock, 1/4-20	4
17	<u>101818801</u>	Stud, Ball	1
18	<u>101822001</u>	Assembly, Accelerator Rod (Turf/Carryall 272) (includes items 19 and 20)	1
18	<u>101674702</u>	Assembly, Accelerator Rod (Carryall 472) (includes items 19 and 20)	1
19	<u>1011084</u>	Nut, UNF Hex Jam, 1/4-28	2
20	<u>1011734</u>	Joint, Spring-Loaded Ball	2
21	<u>1011694</u>	Support, Accelerator Pivot Rod	2
22	<u>101861901</u>	Screw, Hex-Head Cap, 1/4-20 x 1-1/8	4
23	<u>8754</u>	Nut, Nylon Lock, 3/8-16	2
24	<u>101916901</u>	Spacer, Ratchet Support	1
25	<u>334</u>	Washer, Flat, 3/8	2

5

G


5

G

STEERING, FRONT AND REAR SUSPENSION

6

G

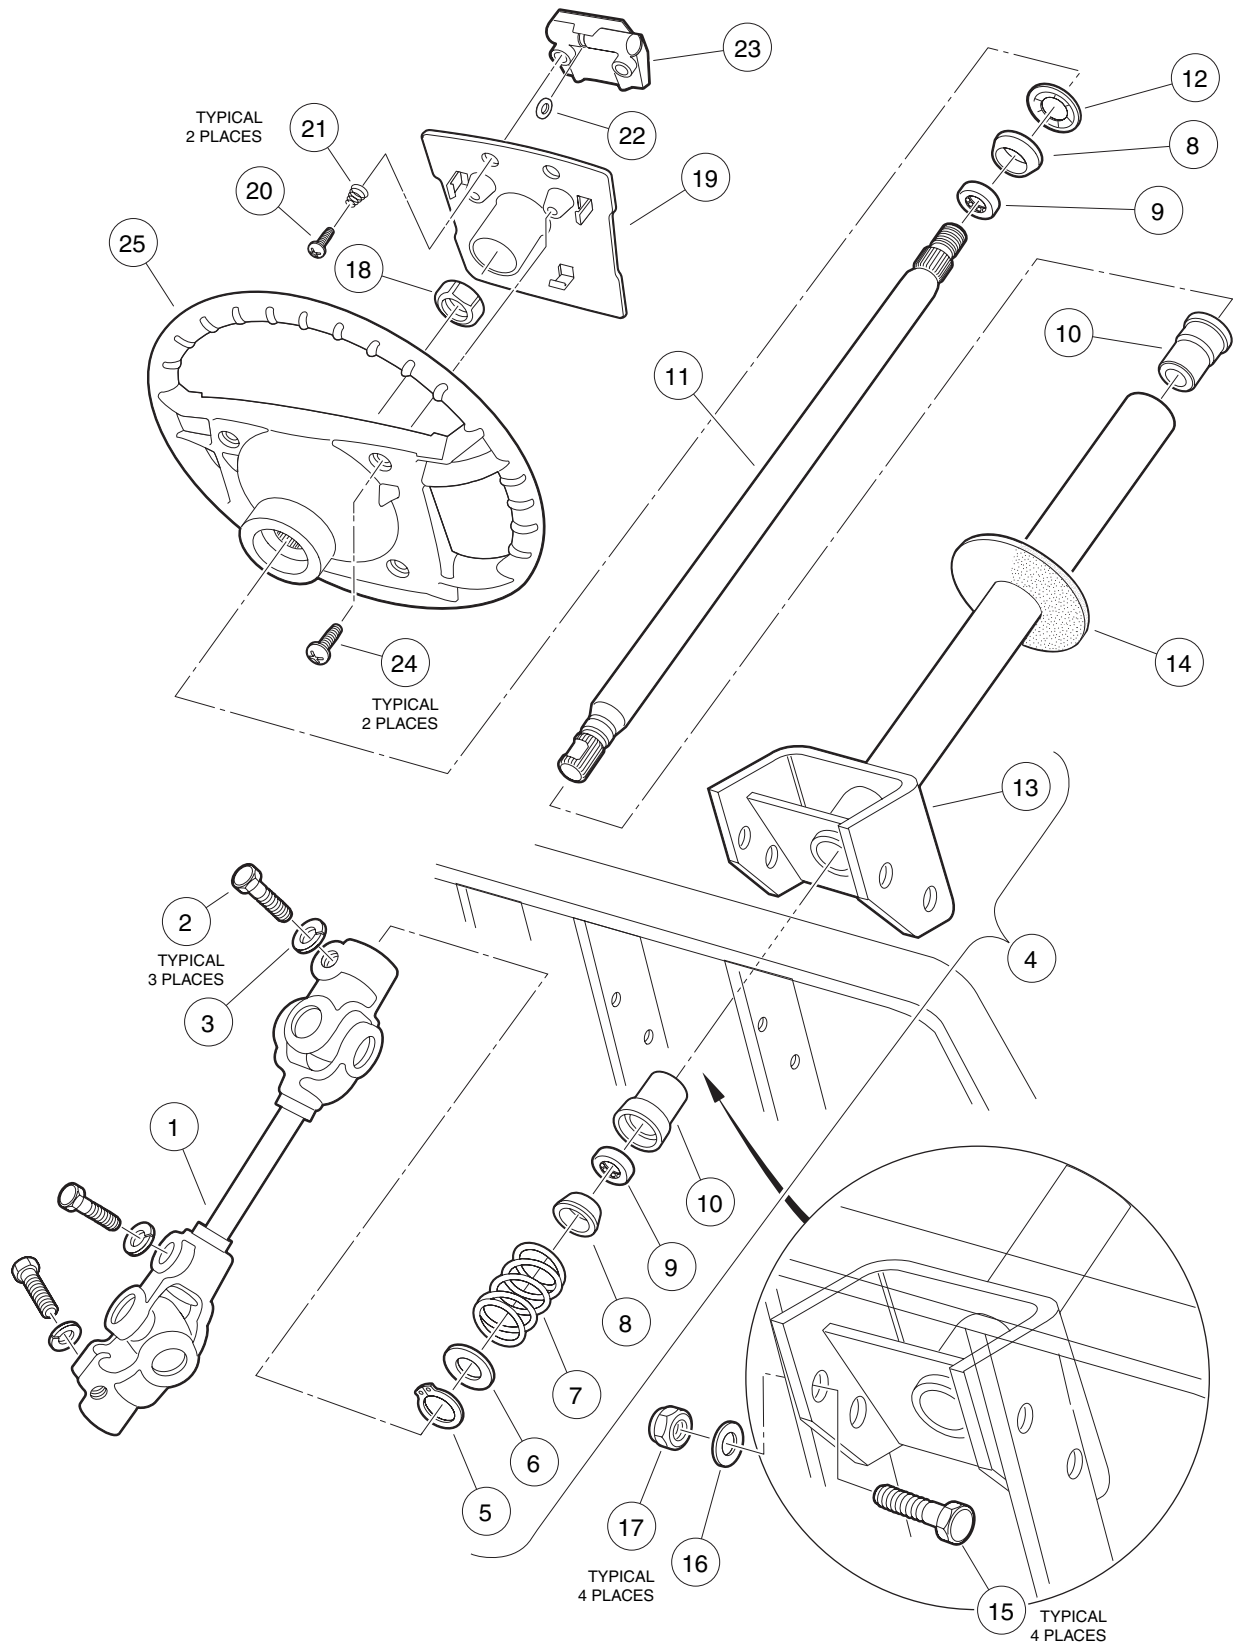


STEERING COLUMN

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102010201</u>	Joint, Steering (includes items 2 and 3)	1
2	<u>1017226</u>	Screw, Hex-Head Cap, M8 x 1.25 x 30 mm	3
3	<u>7174</u>	Washer, Lock, 5/16	3
4	<u>102013101</u>	Assembly, Steering Column (includes items 5 - 13)	1
5	<u>1012605</u>	Ring, Retaining	1
6	<u>1012604</u>	Washer, Steel, 5/8	1
7	<u>1014217</u>	Spring, Compression	1
8	<u>1014125</u>	Wedge	2
9	<u>1014213</u>	Assembly, Bearing	2
10	<u>1014126</u>	Seat, Bearing	2
11	<u>1017315</u>	Shaft, Steering Column	1
12	<u>1014214</u>	Ring, Retaining	1
13	<u>102013001</u>	Weldment, Steering Column	1
14	<u>102278001</u>	Boot, Steering Column	1
15	<u>320</u>	Screw, Hex-Head Cap, 3/8-16 x 1	4
16	<u>334</u>	Washer, Flat, Type A, 3/8	4
17	<u>8754</u>	Nut, Nylon Lock, 3/8-16	4
18	<u>1017273</u>	Nut, Nylon Lock, 5/8-18	1
19	<u>1016219</u>	Assembly, Scorecard Plate (includes items 20 - 23)	1
20	<u>1012565</u>	Screw, Round-Head, #12-14 x 1	2
21	<u>1012566</u>	Spring, Tapered Compression	2
22	<u>1016214</u>	Grip, Pencil	1
23	<u>1016154</u>	Clip, Scorecard	1
24	<u>1016663</u>	Screw, Phillips, Type A, #12-14 x 5/8	2
25	<u>1016156</u>	Wheel, Steering	1


6

G

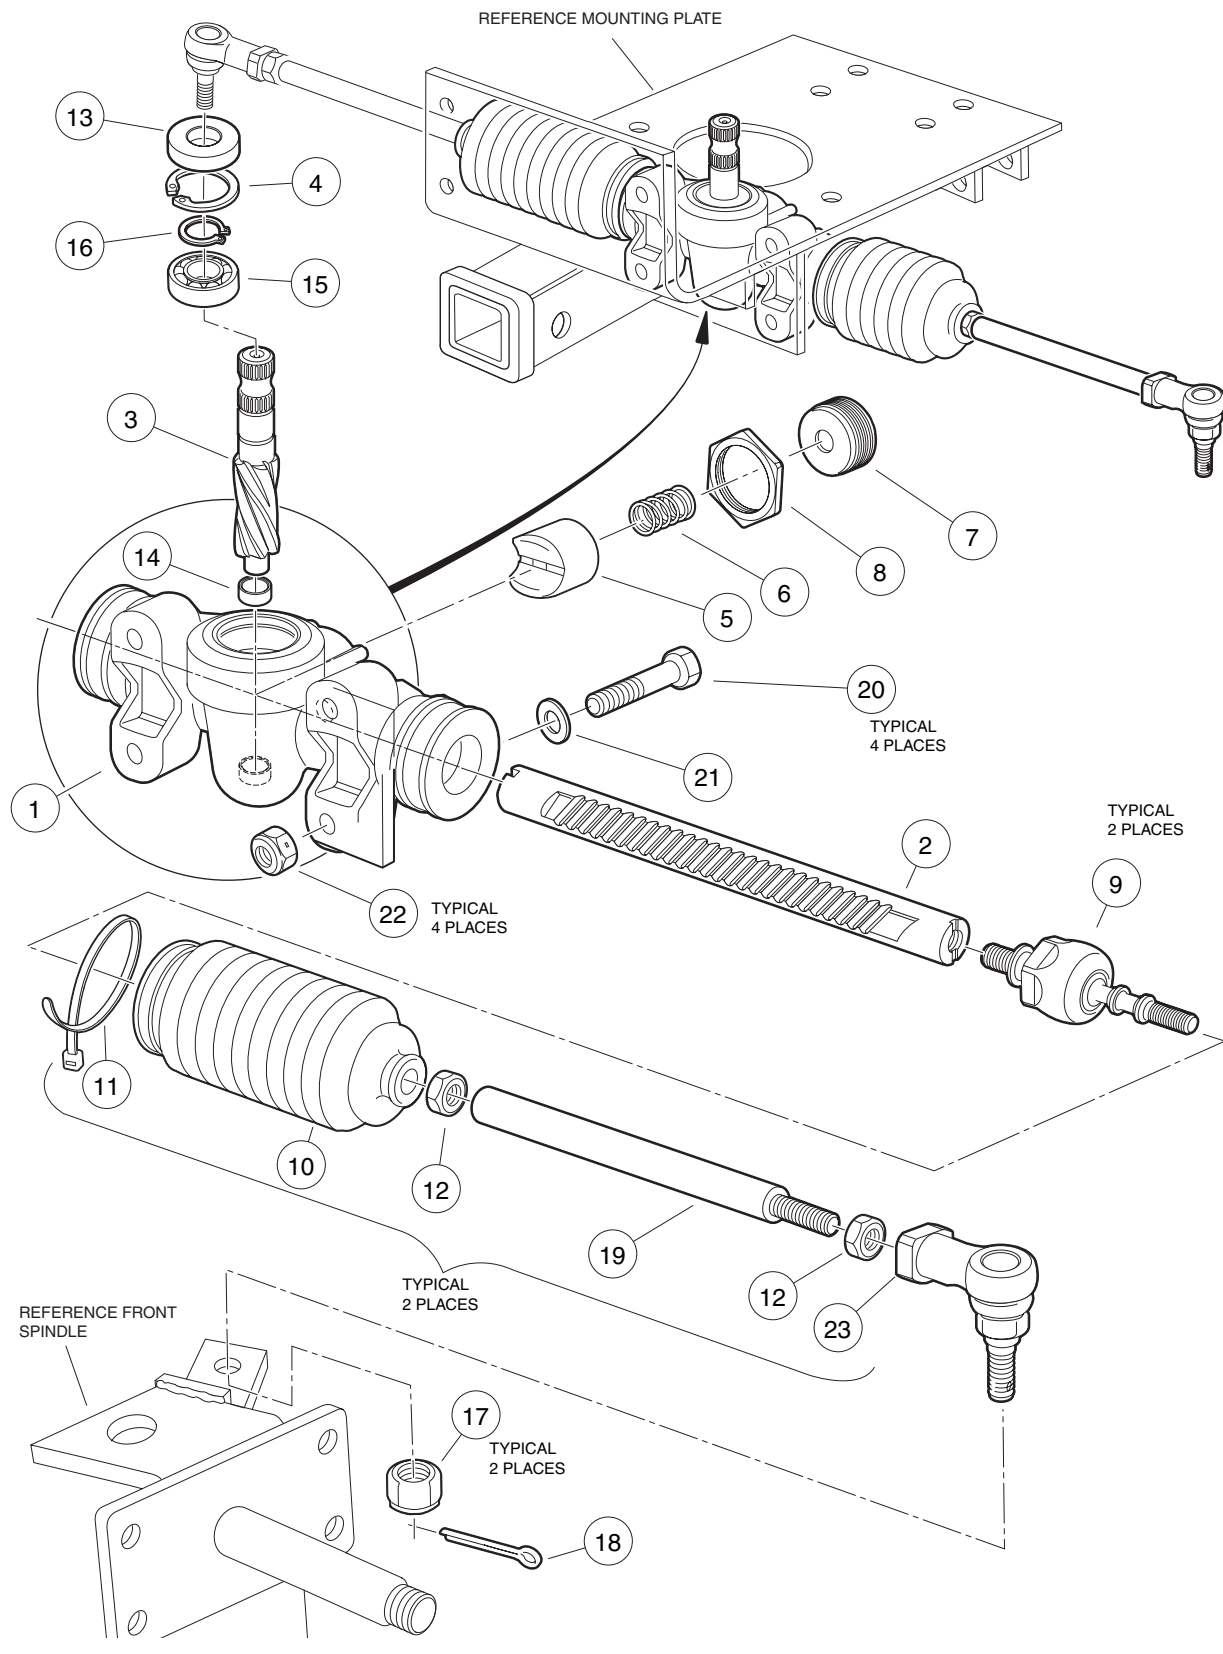

STEERING GEAR ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
	<u>102010101</u>	Assembly, Steering Gear Box (includes items 1 - 16)	1	
1	N/A	Box, Steering Gear	1	
2	N/A	Rack, Steering	1	
3	N/A	Pinion, Steering	1	
4	1013051	Ring, Snap	1	
5	<u>101879701</u>	Guide, Steering Rack	1	
6	<u>101879801</u>	Spring, Yoke	1	
7	N/A	Screw, Rack Guide	1	
8	<u>1013044</u>	Nut, Hex Jam, M30 x 2	1	
9	<u>101880201</u>	Assembly, Inner Ball Joint	2	
10	<u>1013035</u>	Seal, Dust	2	
11	<u>8990</u>	Tie, Wire	2	
12	1013042	Nut, Hex Jam, M12 x 1.25	4	
13	<u>1013052</u>	Seal, Dust, Steering Pinion	1	
14	N/A	Bearing, Lower Pinion	1	
15	<u>101879401</u>	Bearing, Upper Pinion	1	
16	<u>101879901</u>	Ring, C-Type Stop	1	
17	<u>102022901</u>	Nut, Nylon Lock, M12 x 1.25	2	
18	<u>102023301</u>	Pin, Cotter	2	
19	<u>102022801</u>	Link, Rack and Pinion Drag	2	
20	<u>1624</u>	Screw, Hex-Head Cap, 3/8-16 x 1-1/2	4	
21	<u>334</u>	Washer, Flat, Type A, 3/8	4	
22	<u>1010138</u>	Nut, Dimpled Lock, 3/8-16	4	
23	<u>102022601</u>	Joint, Ball	2	

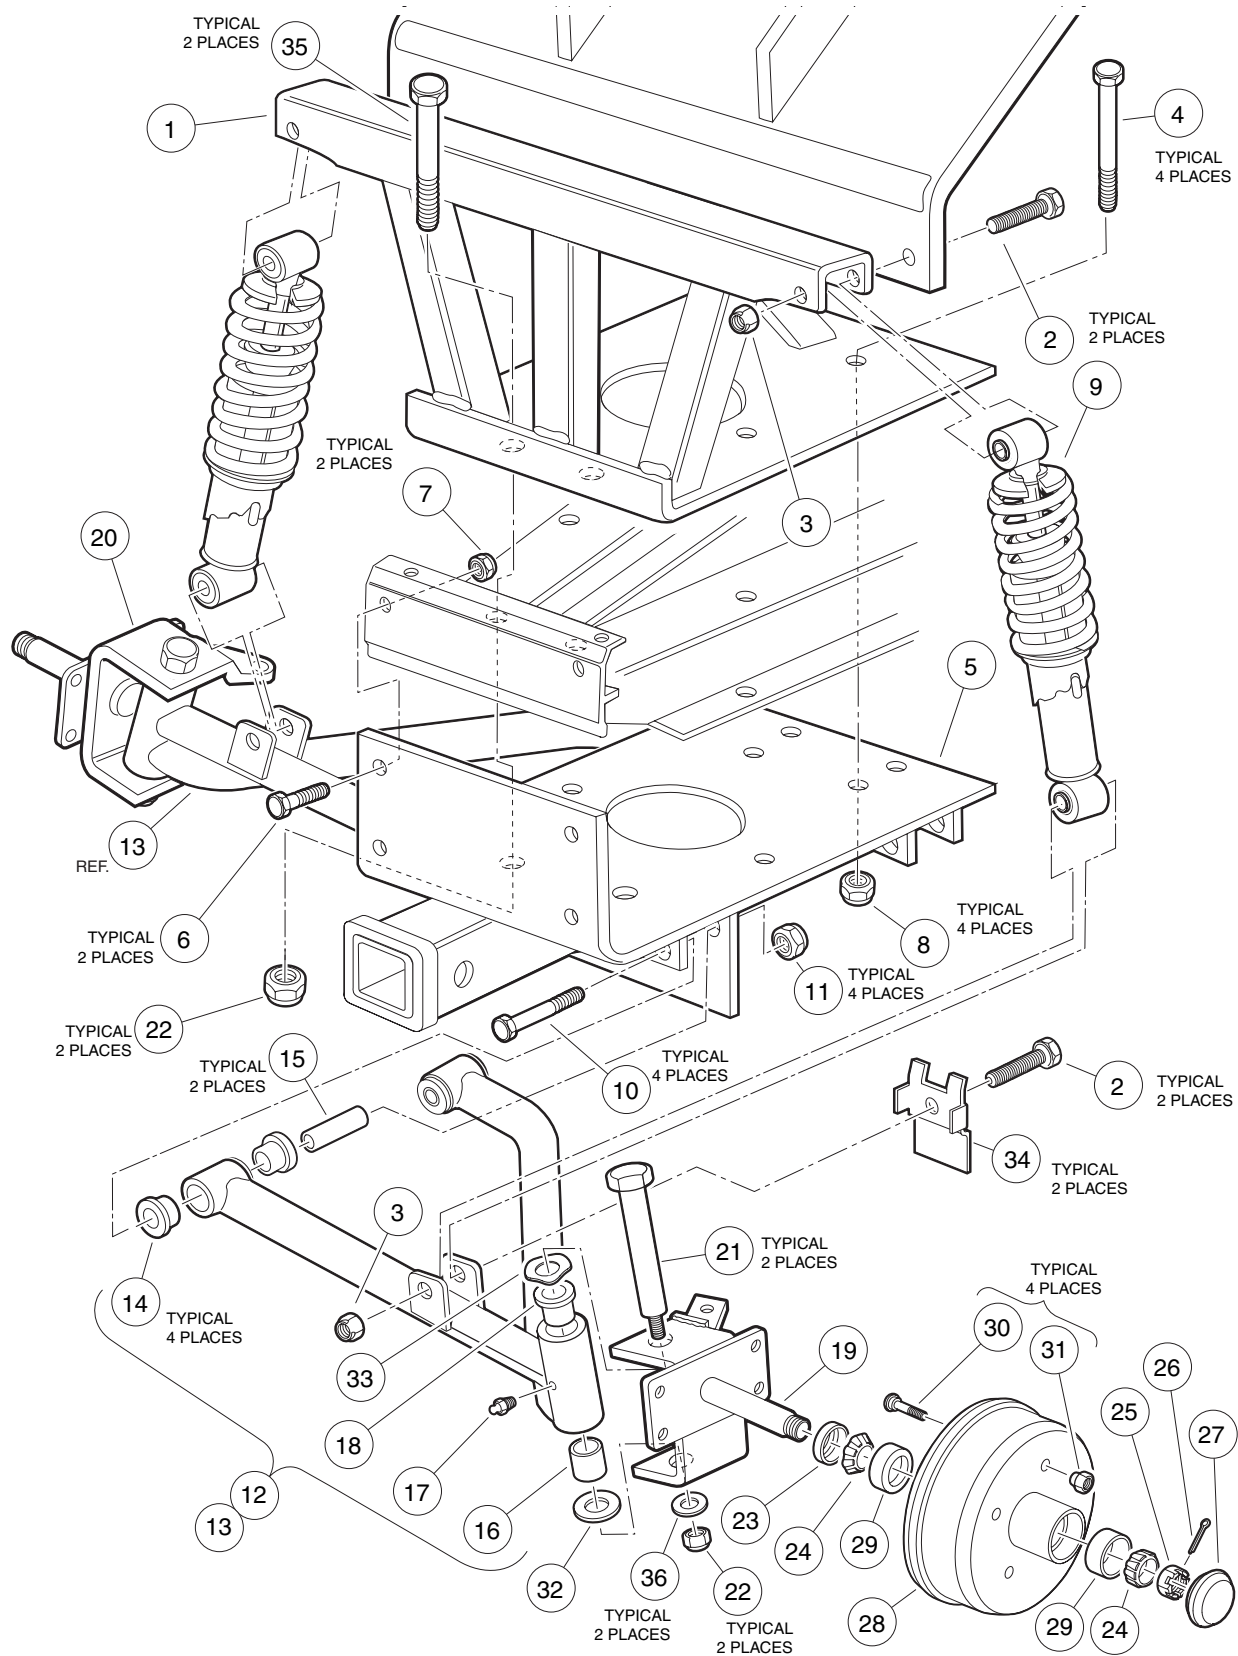


FRONT SUSPENSION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102012301</u>	Tower, Shock	1
2	<u>102023101</u>	Screw, Hex-Head Cap, 7/16-14 x 2-1/4	4
3	<u>1014555</u>	Nut, Nylon Lock, 7/16-14	4
4	<u>7270</u>	Screw, Hex-Head Cap, 3/8-16 x 4-1/2	4
5	102016801	Plate, Suspension Mounting	1
6	<u>1010934</u>	Screw, Hex-Head Cap, 5/16-18 x 1	2
7	<u>7473</u>	Nut, Nylon Lock, 5/16-18	2
8	<u>8754</u>	Nut, Nylon Lock, 3/8-16	4
9	<u>102017601</u>	Shock, Coil Over	2
10	<u>1016387</u>	Screw, Hex-Head Cap, 3/8-16 x 2-3/4	4
11	<u>8754</u>	Nut, Nylon Lock, 3/8-16	4
12	102052401	Assembly, A-Arm, Driver-Side (includes items 14 - 18)	1
13	102052301	Assembly, A-Arm, Passenger-Side (includes items 14 - 18)	1
14	<u>1016346</u>	Bushing, Urethane	4
15	<u>102066701</u>	Sleeve, Steel	2
16	<u>8067</u>	Bushing, Bronze Spindle	1
17	<u>1015597</u>	Fitting, Grease, Thread-Forming, 1/4-28	1
18	<u>7048</u>	Bushing, Bronze	1
19	102016701	Spindle, Driver-Side	1
20	<u>102016501</u>	Spindle, Passenger-Side	1
21	<u>102048601</u>	Bolt, Kingpin	2
22	<u>101903101</u>	Nut, Nylon Lock, 1/2-20	4
23	<u>102023001</u>	Seal, Double Lip	2
24	<u>102013701</u>	Bearing, Hub	4
25	<u>102013801</u>	Nut, Slotted Hex	2
26	<u>101838801</u>	Pin, Cotter, 5/32 x 1-1/4	2
27	<u>102013601</u>	Cover, Dust	2
28	102044201	Assembly, Brake Drum (includes items 29 and 30)	2
29	N/A	Cup, Bearing	2
30	<u>1013787</u>	Stud, Lug, 1/2-20	4
31	<u>1010984</u>	Nut, Lug, 1/2-20	8
32	<u>1010150</u>	Bearing, Thrust	2
33	<u>1016389</u>	Washer, Kingpin Wave	2
34	<u>102100001</u>	Stop, Steering	2
35	<u>102067001</u>	Screw, Hex-Head Cap, 1/2-20 x 4-1/2	2
36	<u>1010028</u>	Washer, Flat, 1/2	2

6

G

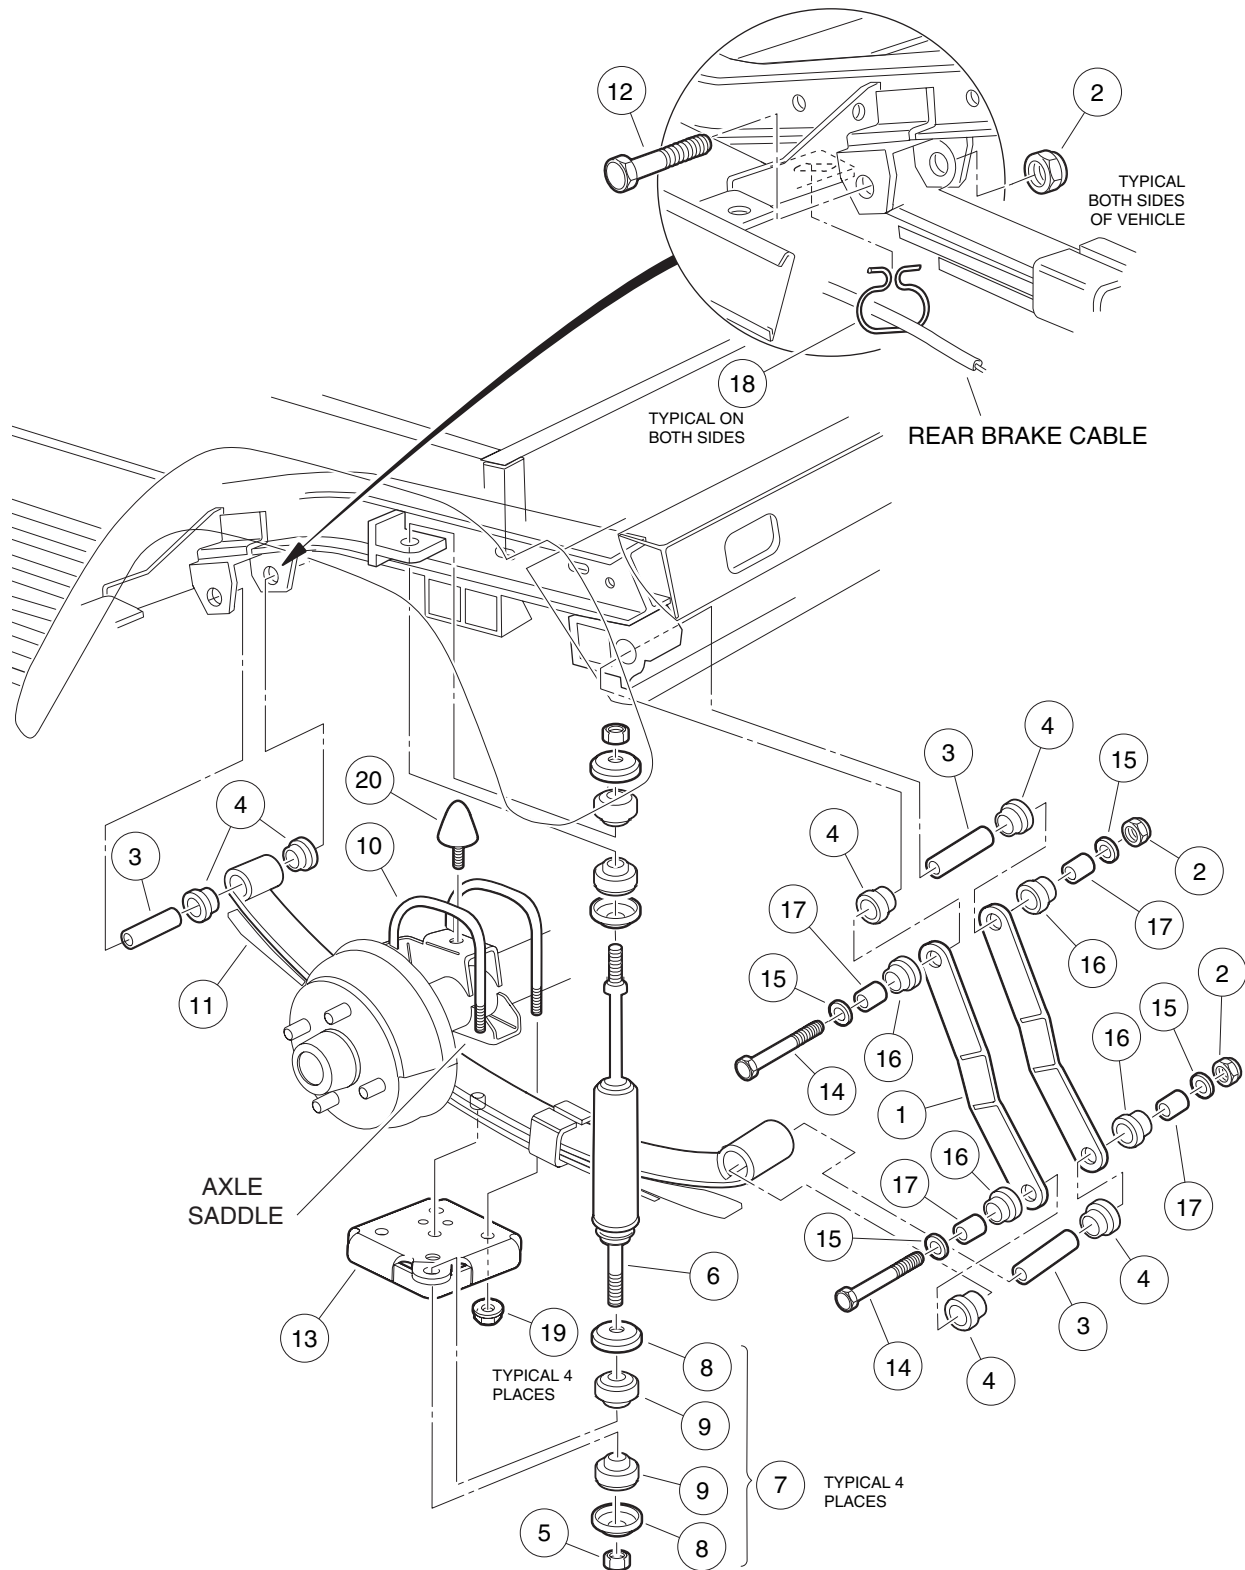

REAR SUSPENSION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102256901</u>	Shackle, Rear Spring	4
2	<u>8754</u>	Nut, Nylon Lock, 3/8-16	6
3	<u>1012303</u>	Bushing, Steel	6
4	<u>1015583</u>	Bushing, Urethane	12
5	<u>1010145</u>	Nut, UNF Hex, 3/8-24	4
6	<u>102267301</u>	Shock Absorber, Rear	2
7	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 8 and 9)	4
8	N/A	Retainer, Shock Absorber Cushion	2
9	N/A	Cushion, Shock Absorber	2
10	<u>102258801</u>	U-Bolt	4
11	<u>102006501</u>	Spring, Rear Four-leaf	2
12	<u>102066201</u>	Screw, Hex-Head Cap, Grade 8, 3/8-16 x 3-1/2	2
13	<u>102266301</u>	Pad, Spring	2
14	<u>7270</u>	Screw, Hex-Head Cap, 3/8-16 x 4-1/2	4
15	<u>808</u>	Washer, Flat, 3/8	8
16	<u>1015453</u>	Mount, Compression	8
17	<u>102045601</u>	Spacer	8
18	<u>101900802</u>	Hanger, Brake Cable	2
19	<u>102065001</u>	Nut, Flanged, 7/16-14	8
20	<u>102188701</u>	Stop, Axle	2

6

G

6


G


ELECTRICAL SYSTEM

7

G

TURF 272 PEDAL-START VEHICLE WIRING

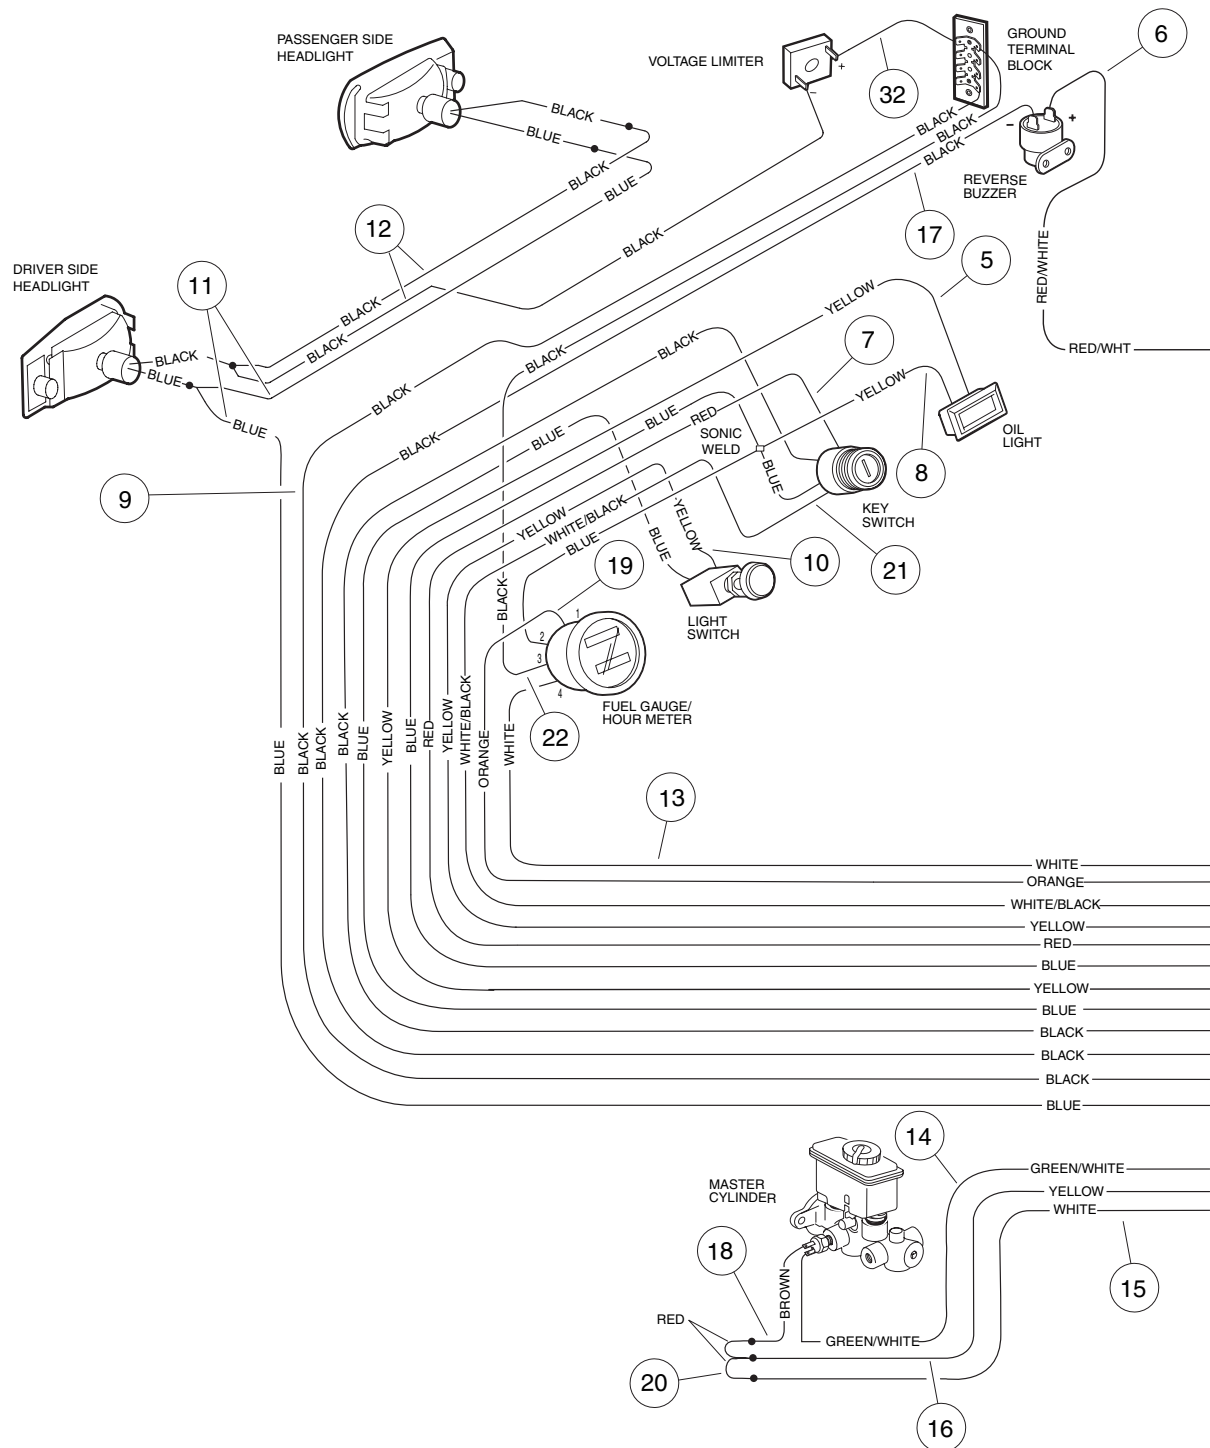

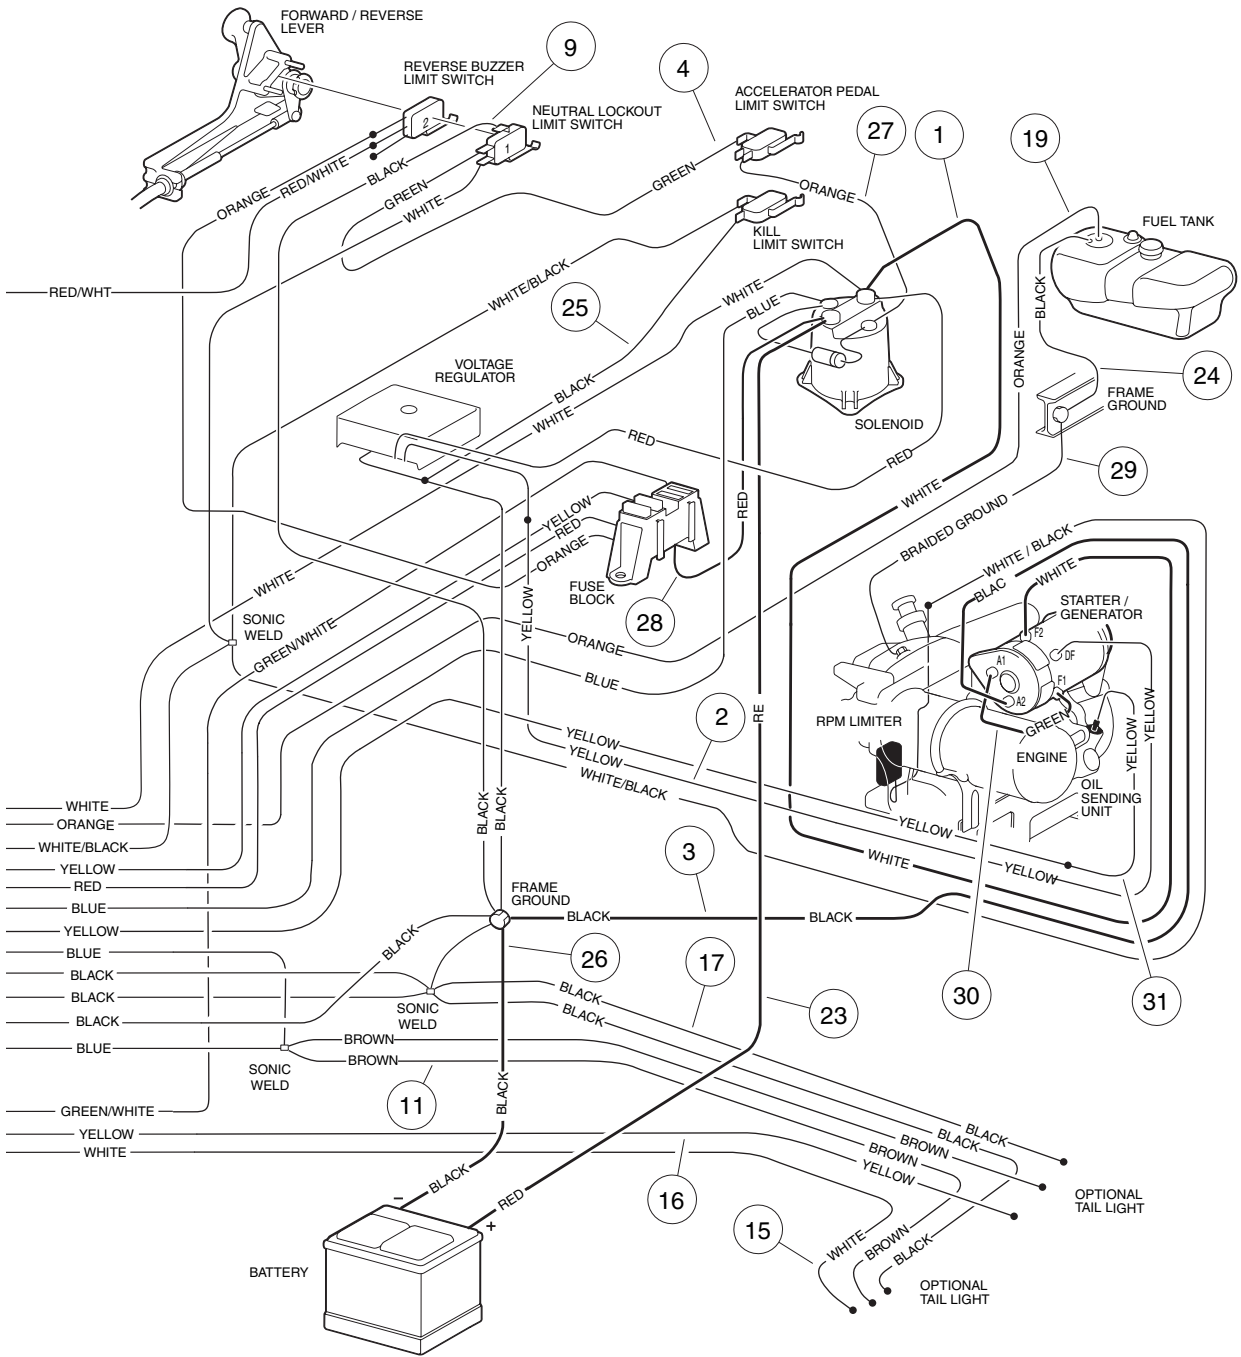

See previous two pages for wiring diagram.


WIRING – TURF 272, PEDAL-START VEHICLE


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>102032601</u>	Wire Harness Assembly (includes items 1 - 22)	1
1	<u>1015769</u>	Wire Assembly, #6 White	1
2	N/A	Wire Assembly, #16 Yellow	1
3	<u>1016380</u>	Wire Assembly, #6 Black	1
4	N/A	Wire Assembly, #18 Green	1
5	N/A	Wire Assembly, #18 Yellow	1
6	N/A	Wire Assembly, #18 Red/White	1
7	N/A	Wire Assembly, #14 Red, #18 Orange	1
8	N/A	Wire Assembly, #18 Blue, #18 Yellow	1
9	N/A	Wire Assembly, #18 Black, #14 Black	1
10	N/A	Wire Assembly, #14 Yellow	1
11	N/A	Wire Assembly, #16 Blue, #16 Brown	1
12	N/A	Wire Assembly, #16 Black	1
13	N/A	Wire Assembly, #18 White	1
14	N/A	Wire Assembly, #18 Green/White	1
15	N/A	Wire Assembly, #18 White	1
16	N/A	Wire Assembly, #18 Yellow	1
17	N/A	Wire Assembly, #18 Black, #14 Black	1
18	N/A	Wire Assembly, #16 Brown	1
19	N/A	Wire Assembly, #18 Orange	1
20	N/A	Wire Assembly, #18 Red	1
21	N/A	Wire Assembly, #18 White/Black	1
22	N/A	Wire Assembly, #18 Black	1
23	<u>1014119</u>	Wire Assembly, #6 Red	1
24	N/A	Wire Assembly, #18 Black	1
25	N/A	Wire Assembly, #18 Black	1
26	<u>1012382</u>	Wire Assembly, #6 Black	1
27	N/A	Wire Assembly, #18 Orange (part of electrical component box)	1
28	<u>1015737</u>	Wire Assembly, #10 Red (part of electrical component box)	1
29	<u>1015332</u>	Wire Assembly, #10 Braided Ground	1
30	<u>101837301</u>	Wire Assembly, #6 Green	1
31	N/A	Wire Assembly, #18 Yellow	1
32	N/A	Wire Assembly, #16 Black	1

7

G

CARRYALL AND TURF 272 KEY-START VEHICLE WIRING

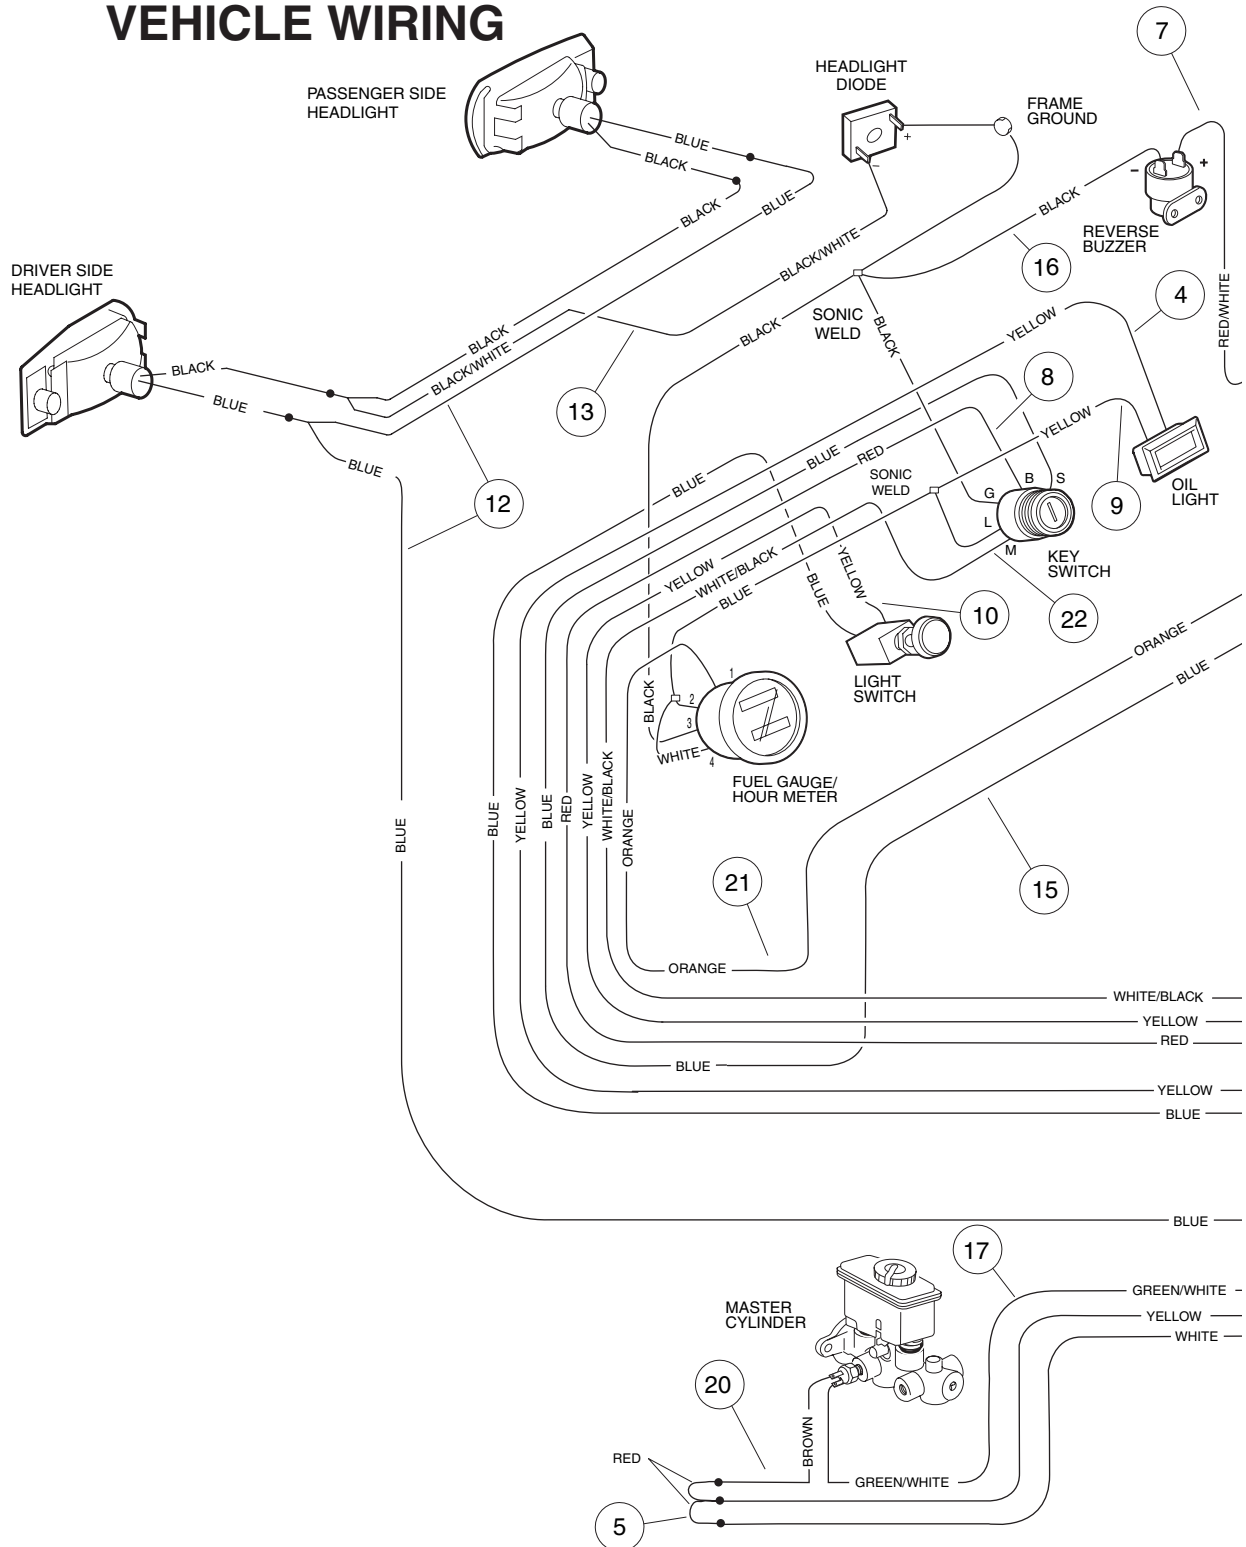

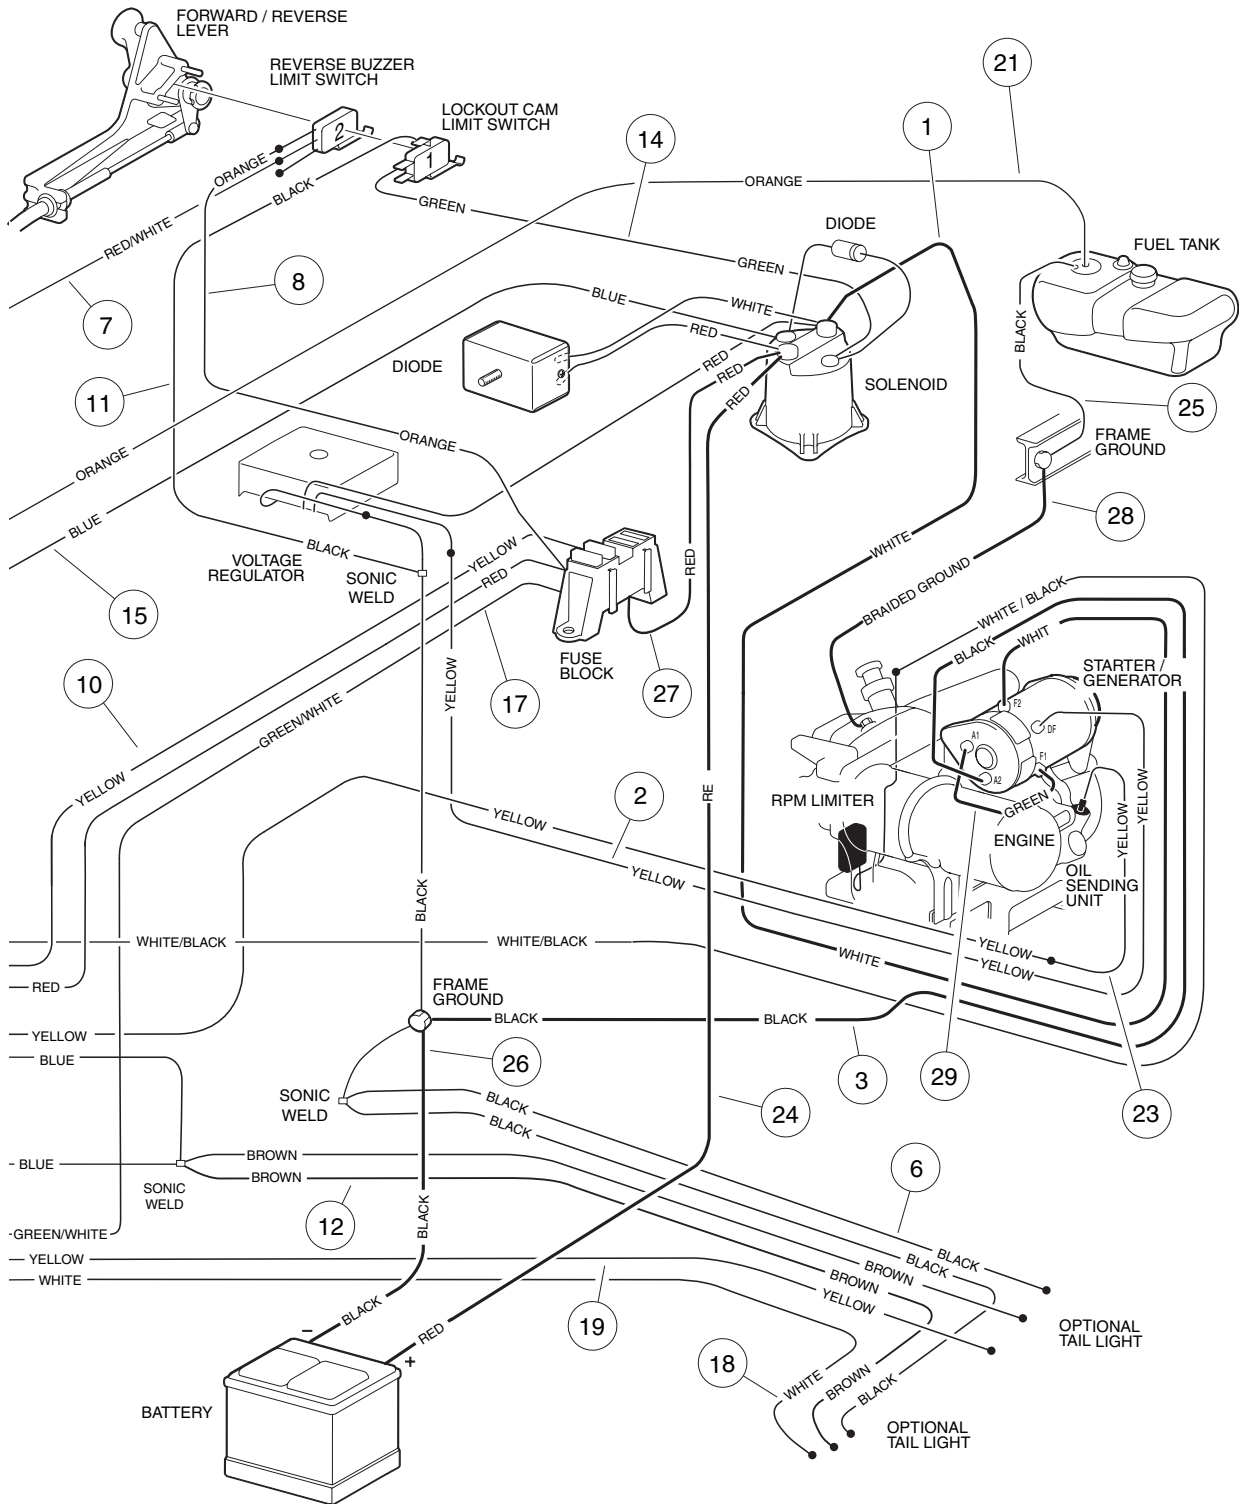


See previous two pages for wiring diagram.


WIRING – TURF AND CARRYALL 272 KEY-START VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>102223601</u>	Wire Harness Assembly (includes items 1 - 22)	1
1	<u>1015769</u>	Wire Assembly, #6 White	1
2	N/A	Wire Assembly, #18 Yellow	1
3	<u>1016380</u>	Wire Assembly, #6 Black	1
4	N/A	Wire Assembly, #18 Yellow	1
5	N/A	Wire Assembly, #18 Red	1
6	N/A	Wire Assembly, #18 Black, #16 Black	1
7	N/A	Wire Assembly, #18 Red/White	1
8	N/A	Wire Assembly, #14 Red, #18 Orange	1
9	N/A	Wire Assembly, #18 Yellow, #18 Blue, #18 White	1
10	N/A	Wire Assembly, #14 Yellow	1
11	N/A	Wire Assembly, #18 Black	1
12	N/A	Wire Assembly, #16 Blue, #14 Blue, #18 Brown, #16 Brown	1
13	N/A	Wire Assembly, #16 Black, #16 Black/White	1
14	N/A	Wire Assembly, #18 Green	1
15	N/A	Wire Assembly, #18 Blue	1
16	N/A	Wire Assembly, #18 Black, #16 Black	1
17	N/A	Wire Assembly, #18 Green/White	1
18	N/A	Wire Assembly, #18 White	1
19	N/A	Wire Assembly, #18 Yellow	1
20	N/A	Wire Assembly, #18 Brown	1
21	N/A	Wire Assembly, #18 Orange	1
22	N/A	Wire Assembly, #18 White/Black	1
23	N/A	Wire Assembly, #18 Yellow	1
24	<u>1014119</u>	Wire Assembly, #6 Red	1
25	N/A	Wire Assembly, #18 Black	1
26	<u>1012382</u>	Wire Assembly, #6 Black	1
27	<u>1015737</u>	Wire Assembly, #10 Red (part of electrical component box)	1
28	<u>1015332</u>	Wire Assembly, #10 Braided Ground	1
29	<u>101837301</u>	Wire Assembly, #6 Green	1

7
G

CARRYALL 472 KEY-START VEHICLE WIRING

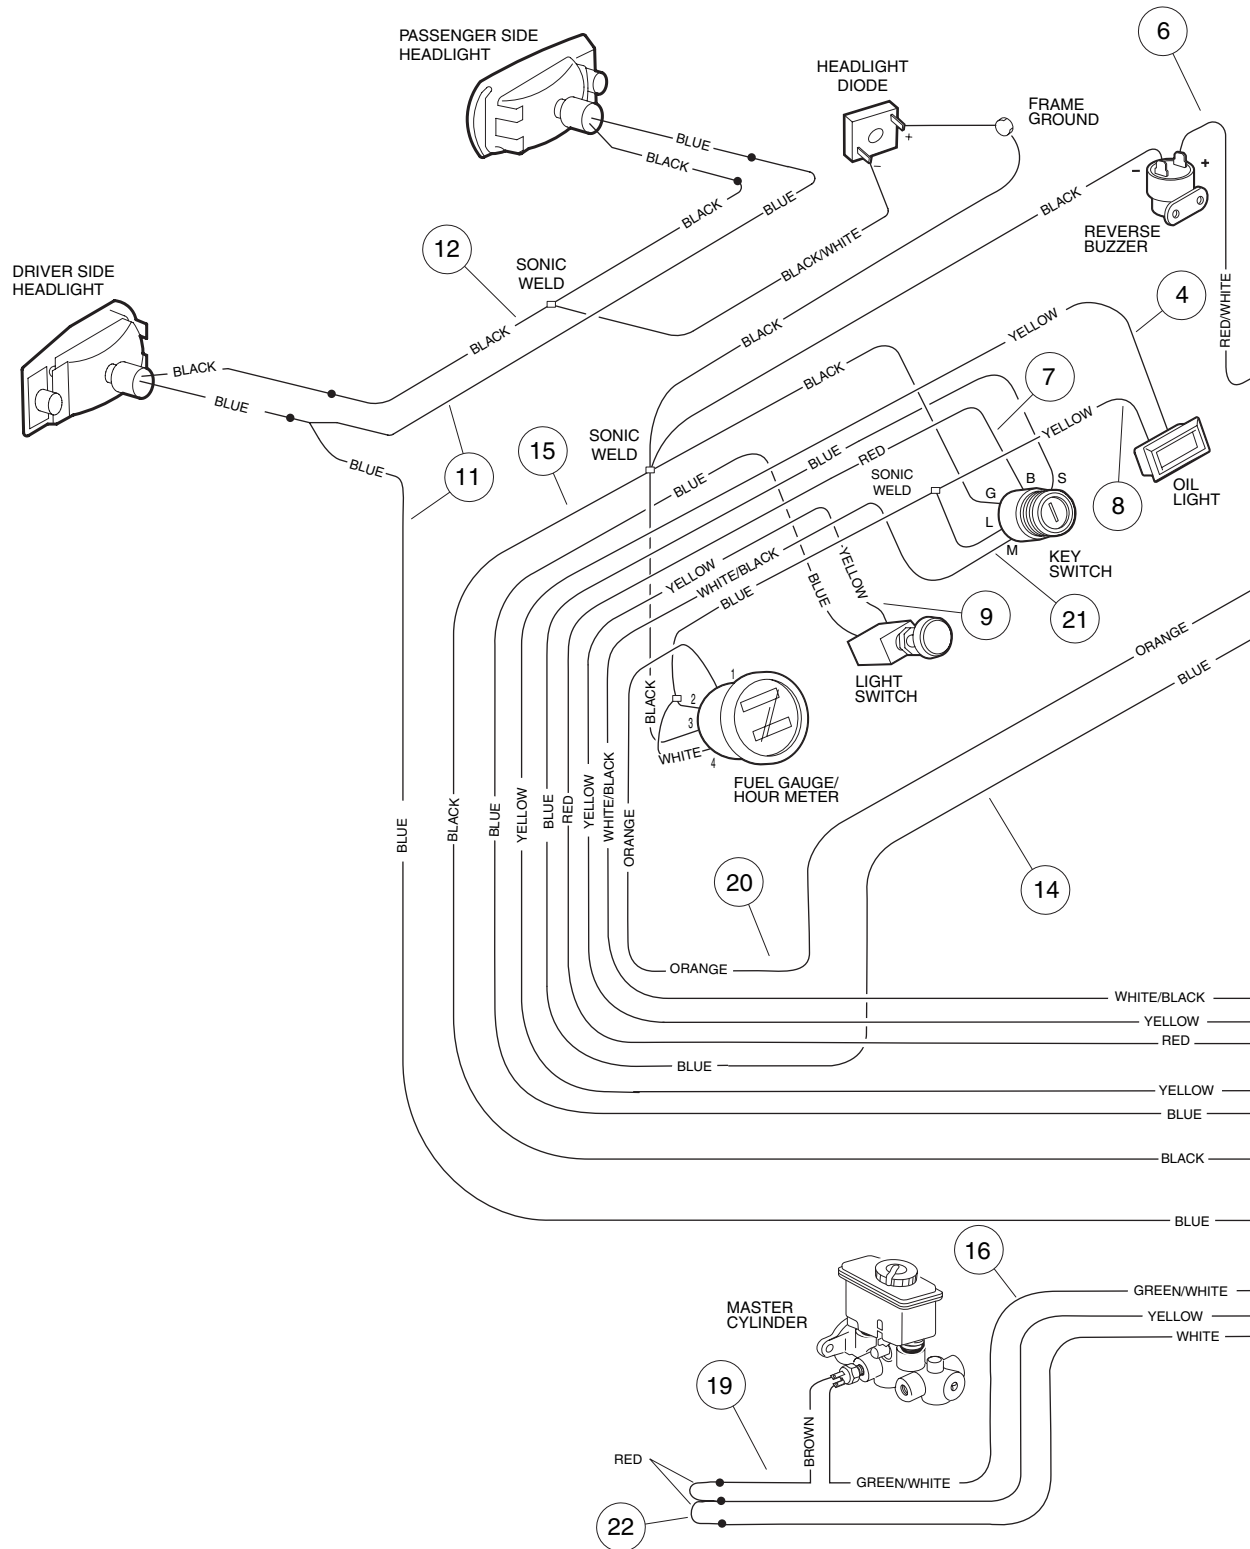

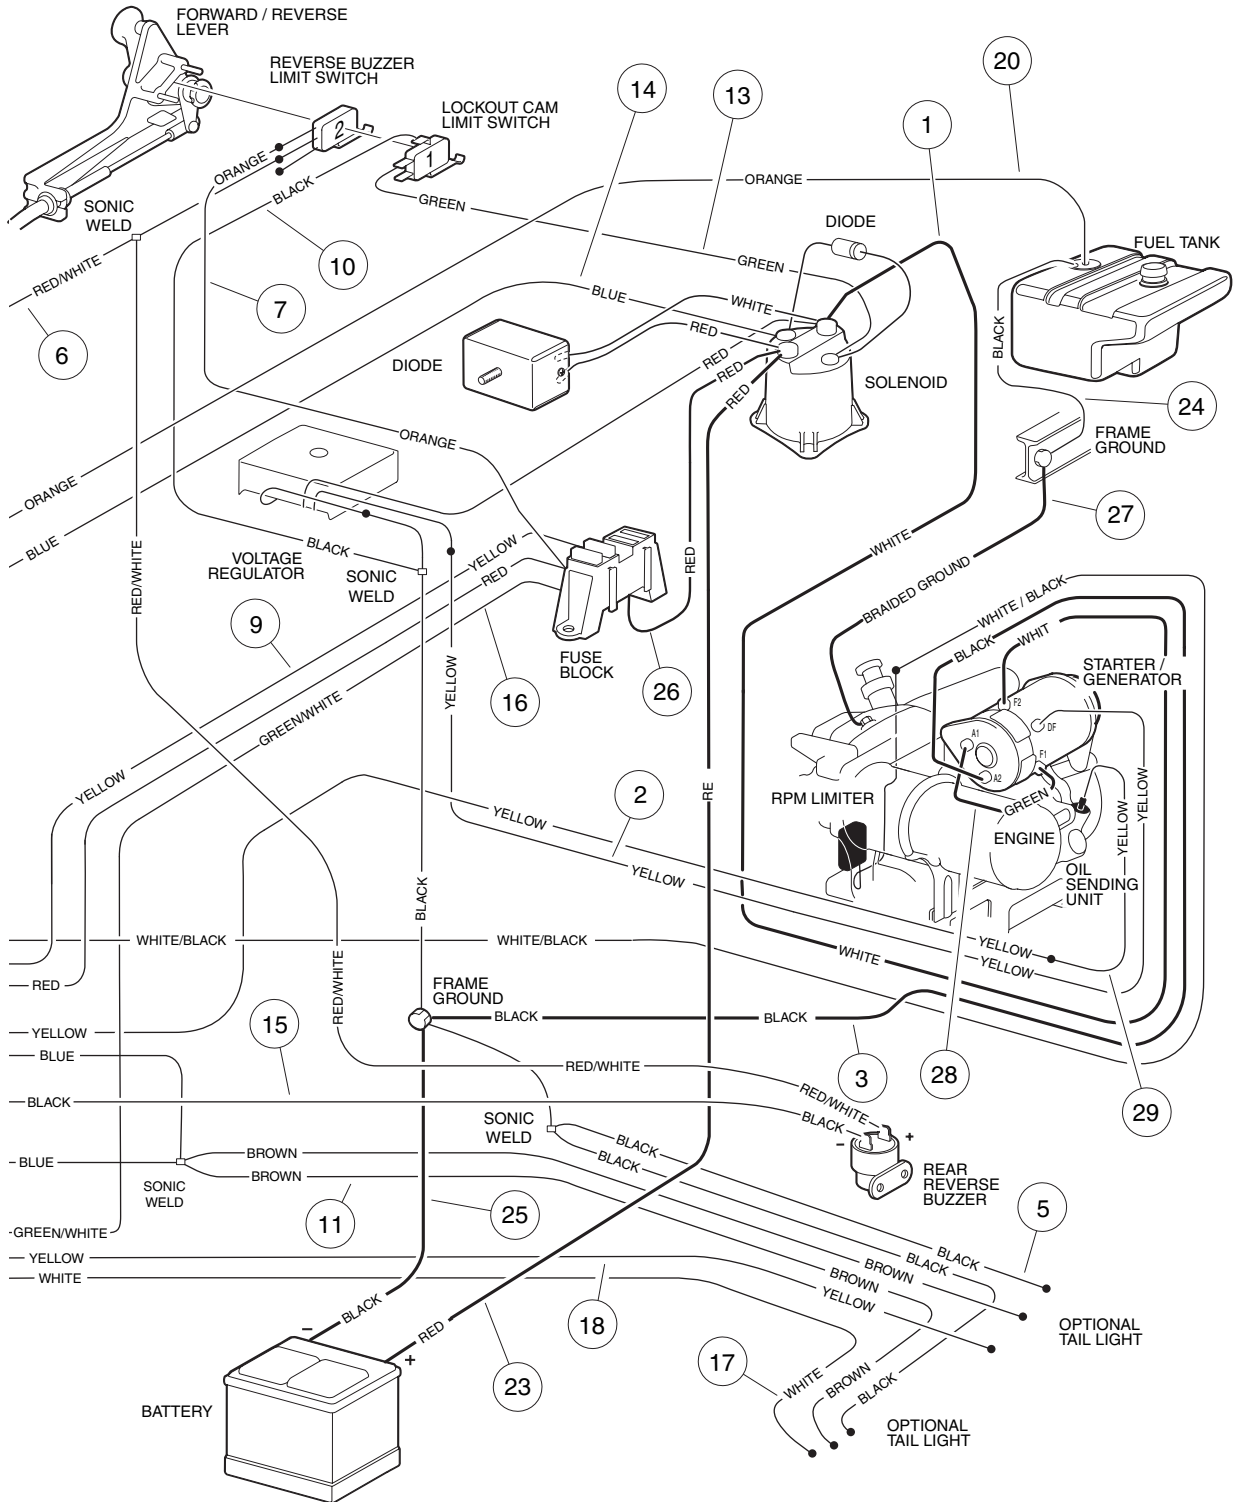


See previous two pages for wiring diagram.

WIRING – CARRYALL 472, KEY-START VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>102316101</u>	Wire Harness Assembly (includes items 1 - 22)	1
1	<u>1015769</u>	Wire Assembly, #6 White	1
2	N/A	Wire Assembly, #16 Yellow	1
3	<u>1016380</u>	Wire Assembly, #6 Black	1
4	N/A	Wire Assembly, #18 Yellow	1
5	N/A	Wire Assembly, #18 Black, #16 Black	1
6	N/A	Wire Assembly, #18 Red/White	1
7	N/A	Wire Assembly, #14 Red, #18 Orange	1
8	N/A	Wire Assembly, #18 Blue, #18 Yellow, and #18 White	1
9	N/A	Wire Assembly, #14 Yellow	1
10	N/A	Wire Assembly, #18 Black	1
11	N/A	Wire Assembly, #16 Blue, #16 Brown	1
12	N/A	Wire Assembly, #16 Black, #16 Black/White	1
13	N/A	Wire Assembly, #18 Green	1
14	N/A	Wire Assembly, #18 Blue	1
15	N/A	Wire Assembly, #18 Black, #16 Black	1
16	N/A	Wire Assembly, #18 Green/White	1
17	N/A	Wire Assembly, #18 White	1
18	N/A	Wire Assembly, #18 Yellow	1
19	N/A	Wire Assembly, #18 Brown	1
20	N/A	Wire Assembly, #18 Orange	1
21	N/A	Wire Assembly, #18 White/Black	1
22	N/A	Wire Assembly, #18 Red	1
23	<u>1014119</u>	Wire Assembly, #6 Red	1
24	N/A	Wire Assembly, #18 Black	1
25	<u>1012382</u>	Wire Assembly, #6 Black	1
26	<u>1015737</u>	Wire Assembly, #10 Red (part of electrical component box)	1
27	<u>1015332</u>	Wire Assembly, #10 Braided Ground	1
28	<u>101837301</u>	Wire Assembly, #6 Green	1
29	N/A	Wire Assembly, #18 Yellow	1

7

G

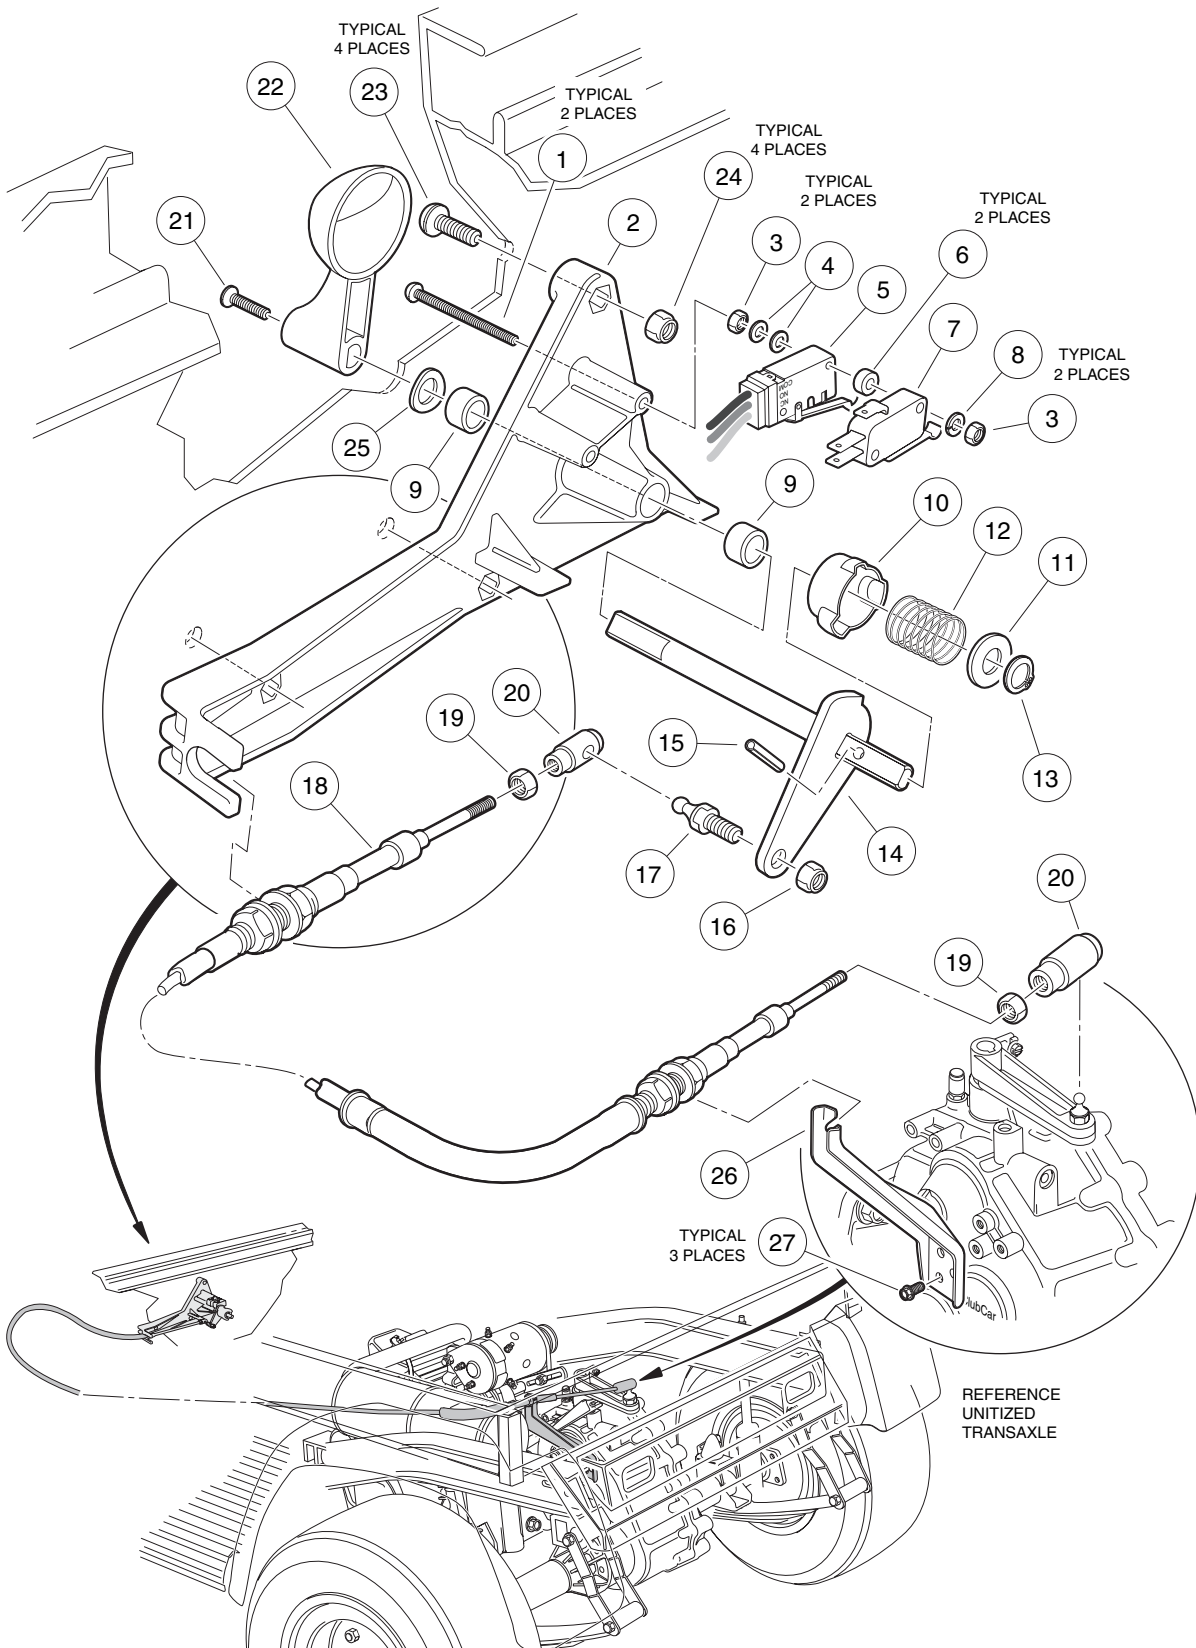


FORWARD/REVERSE SHIFTER ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	1016947	Assembly, Forward/Reverse Shifter (includes items 1 - 17)	1
1	<u>1012594</u>	Screw, Machine, #4-40 x 1-1/2	2
2	<u>1016342</u>	Base, Forward/Reverse Shifter	1
3	<u>8057</u>	Nut, Hex-Head, #4-40	4
4	1012431	Washer, Flat, #4	4
5	<u>101979101</u>	Switch, Limit	1
6	<u>1014727</u>	Washer, Nylon Flat, #4	2
7	<u>1014807</u>	Switch, Limit	1
8	<u>8058</u>	Washer, Lock, #4	2
9	<u>1014145</u>	Bushing, Bronze	2
10	1014089	Kit, Neutral Lockout Cam (includes item 11)	1
11	<u>1014065</u>	Washer, Flat, Delrin	1
12	<u>1013590</u>	Spring, Forward/Reverse Cam	1
13	<u>1013589</u>	Ring, Retaining	1
14	1013587	Weldment, Forward/Reverse Bell Crank	1
15	<u>1013591</u>	Pin, Roll, 1/8	1
16	<u>8717</u>	Nut, Nylon Lock, 1/4-28	1
17	<u>1010954</u>	Stud, Ball, 1/4-28 x 1/4	1
18	<u>1015409</u>	Cable, Transmission (includes items 19 and 20) (Turf 272 and Carryall 272)	1
18	<u>101672701</u>	Cable, Transmission (includes items 19 and 20) (Carryall 472)	1
19	<u>7893</u>	Nut, Hex, #10-32	2
20	<u>1012333</u>	Joint, Ball	2
21	<u>1015064</u>	Screw, Phillips Oval Countersunk Machine, SS, #8-32 x 5/8	1
22	<u>1012987</u>	Handle, Forward/Reverse Switch	1
23	<u>8248</u>	Screw, Phillips Truss-Head, 1/4-20 x 3/4	4
24	8233	Nut, Nylon Lock, 1/4-20	4
25	<u>1016201</u>	Washer, Wave, 3/8	1
26	<u>102045901</u>	Bracket, Transmission Cable Support	1
27	<u>1012285</u>	Screw, Thread-Rolling, 1/4-20 x 5/8	3

7

G

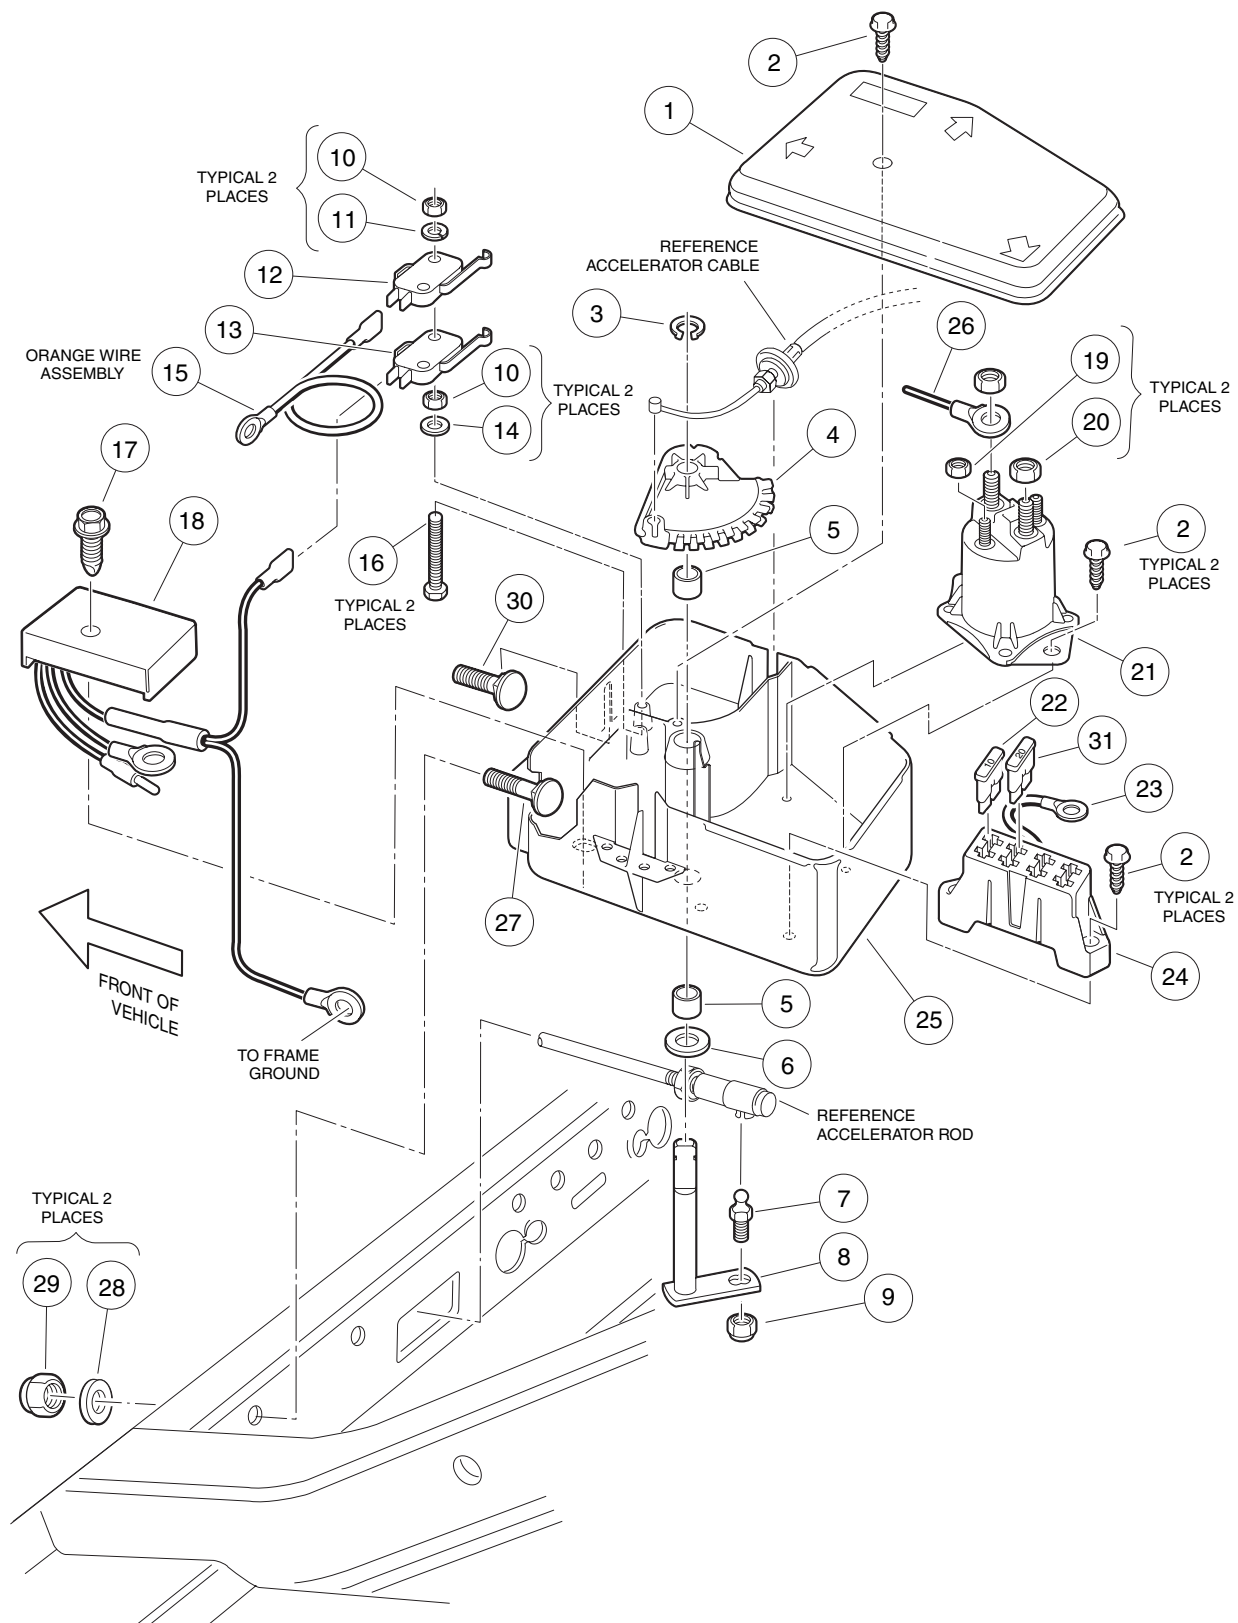

ELECTRICAL COMPONENT BOX, PEDAL-START VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015372</u>	Cover, Electrical Component Box	1
2	<u>1015752</u>	Screw, Hi-lo, #12-16 x 5/8	5
3	<u>1013589</u>	Ring, Retaining	1
4	<u>1015373</u>	Cam, Electrical Box	1
5	<u>1014145</u>	Bushing, Bronze	2
6	<u>1014065</u>	Washer, Flat, Delrin	1
7	<u>1010954</u>	Stud, Ball, 1/4-28	1
8	<u>1015345</u>	Assembly, Bell Crank and Shaft	1
9	<u>8717</u>	Nut, Nylon Lock, 1/4-28	1
10	<u>8057</u>	Nut, Hex, #4-40	4
11	<u>8058</u>	Washer, Lock, #4	2
12	<u>1014807</u>	Switch, Limit	1
13	<u>1014808</u>	Switch, Limit	1
14	<u>1012431</u>	Washer, Flat, #4	2
15	N/A	Wire Assembly, #16 Orange	1
16	<u>1015878</u>	Screw, Hex-Head Machine, #4-40 x 1-5/8	2
17	<u>101856102</u>	Screw, Hex Washer-Head Hi-Lo, 1/4-15 x 1-1/2	1
18	<u>1015777</u>	Regulator, Voltage	1
19	<u>7893</u>	Nut, Hex, #10-32	2
20	<u>1242</u>	Nut, Hex, 5/16-18	2
21	<u>1013609</u>	Solenoid, 12-volt	1
22	<u>1012295</u>	Fuse, 10-amp	1
23	<u>1015737</u>	Wire Assembly, #10 Red	1
24	<u>1015741</u>	Block, Fuse	1
25	<u>1015371</u>	Box, Electrical Component	1
26	<u>1014119</u>	Wire Assembly, #6 Red	1
27	<u>1015405</u>	Bolt, Carriage, 5/16-18 x 2	1
28	<u>1241</u>	Washer, Flat, 5/16	2
29	<u>7473</u>	Nut, Nylon Lock, 5/16-18	2
30	<u>7818</u>	Bolt, Carriage, 5/16-18 x 1-1/2	1
31	<u>1016423</u>	Fuse, 20-amp	1

7
G




ELECTRICAL COMPONENT BOX, KEY-START VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015372</u>	Cover, Electrical Component Box	1
2	<u>1015752</u>	Screw, Hi-Lo, #12-16 x 5/8	5
3	<u>1013589</u>	Ring, Retaining	1
4	<u>1015373</u>	Cam, Electrical Box	1
5	<u>1014145</u>	Bushing, Bronze	2
6	<u>1014065</u>	Washer, Flat, Delrin	1
7	<u>1010954</u>	Stud, Ball, 1/4-28	1
8	<u>1015345</u>	Assembly, Bell Crank and Shaft	1
9	<u>8717</u>	Nut, Nylon Lock, 1/4-28	1
10	<u>101856102</u>	Screw, Hex Washer-Head Hi-Lo, 1/4-15 x 1-1/2	1
11	<u>1015777</u>	Regulator, Voltage	1
12	<u>7893</u>	Nut, Hex, #10-32	2
13	<u>1242</u>	Nut, Hex, 5/16-18	2
14	<u>1013609</u>	Solenoid, 12-Volt	1
15	<u>1012295</u>	Fuse, 10-Amp	1
16	<u>1015737</u>	Wire Assembly, #10 Red	1
17	<u>1015741</u>	Block, Fuse	1
18	<u>1015371</u>	Box, Electrical Component	1
19	<u>1015405</u>	Bolt, Carriage, 5/16-18 x 2	1
20	<u>1241</u>	Washer, Flat, 5/16	2
21	<u>7473</u>	Nut, Nylon Lock, 5/16-18	2
22	<u>7818</u>	Bolt, Carriage, 5/16-18 x 1-1/2	1
23	<u>1016423</u>	Fuse, 20-Amp	1
24	<u>1014948</u>	Diode, Flyback	1

7

G

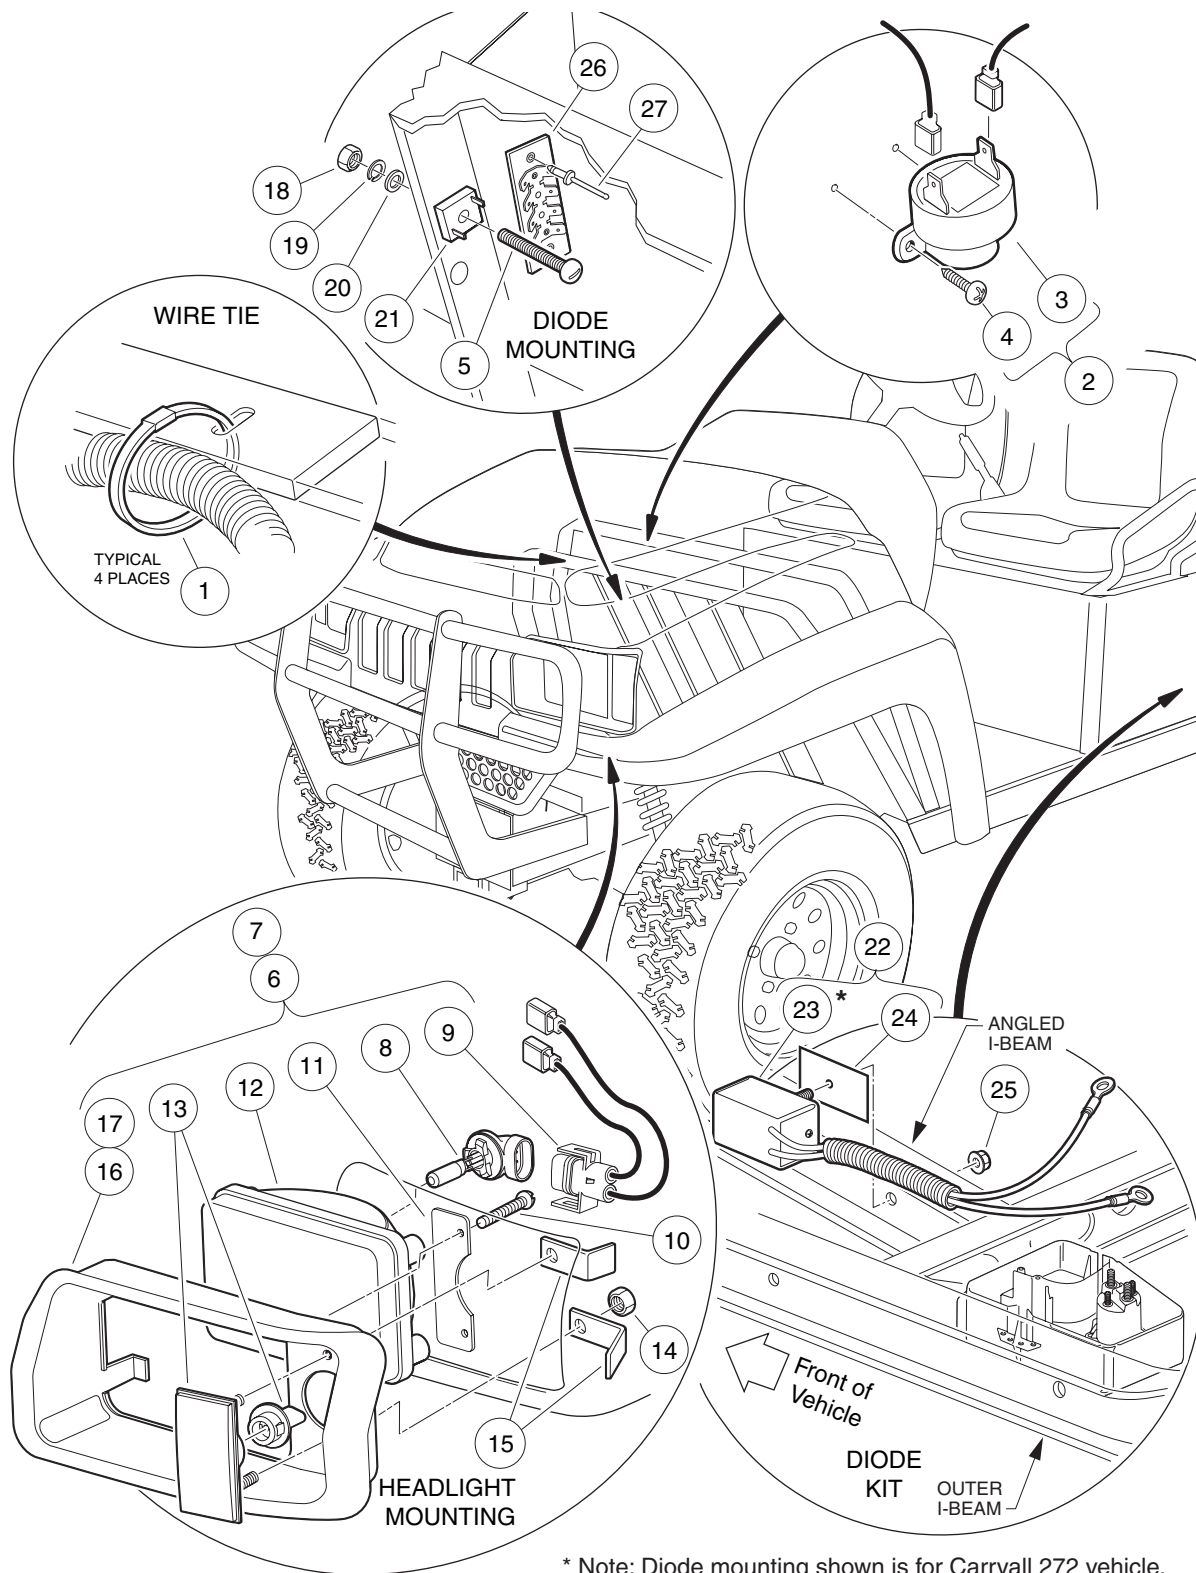


* Note: Diode mounting shown is for Carryall 272 vehicle.
The diode mounts differently on a Carryall 472 vehicle.

ELECTRICAL COMPONENTS, FRONT BODY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>8639</u>	Tie, Wire	4
2	<u>1016859</u>	Kit, Reverse Buzzer (includes items 3 and 4)	1
3	<u>1016851</u>	Buzzer, Reverse	1
4	<u>1016849</u>	Screw, Pan-Head Hi-Lo, #4-24 x 5/16	2
5	<u>1010909</u>	Screw, Machine Head, #10-32 x 1-1/4	1
6	<u>101988001</u>	Assembly, Headlight, Driver-Side (includes items 8 - 16)	1
7	<u>101988002</u>	Assembly, Headlight, Passenger-Side (includes items 8 - 15 and 17)	1
8	<u>101988101</u>	Bulb, Halogen	1
9	<u>101987901</u>	Harness, Headlight Wire	1
10	<u>1013461</u>	Screw, Hi-Lo, #10-16	2
11	<u>1017065</u>	Retainer, Headlight	1
12	<u>101988201</u>	Lens, Headlight	1
13	<u>1017062</u>	Assembly, Turn Signal Lens	1
14	<u>7893</u>	Nut, Hex, #10-32	2
15	<u>1017064</u>	Bracket, Mounting	2
16	<u>1016880</u>	Bezel, Headlight, Driver-Side	1
17	<u>1016879</u>	Bezel, Headlight, Passenger-Side	1
18	<u>7893</u>	Nut, Hex, #10-32	1
19	<u>1016</u>	Washer, Lock, #10	1
20	<u>183</u>	Washer, Flat, Type A, #10	1
21	<u>1017721</u>	Diode (key-start vehicles only)	1
22	<u>102272501</u>	Kit, Diode (includes items 23 - 25) (key-start vehicles only)	1
23	<u>102264001</u>	Assembly, Diode (key-start vehicles only)	1
24	<u>102269701</u>	Pad, Thermal (key-start vehicles only)	1
25	<u>101963401</u>	Nut, Hex Flanged Lock (key-start vehicles only)	1
26	<u>1016356</u>	Block, Terminal (pedal-start vehicles only)	1
27	<u>1013357</u>	Rivet, Pop, Aluminum 5/32 (pedal-start vehicles only)	2

7

G

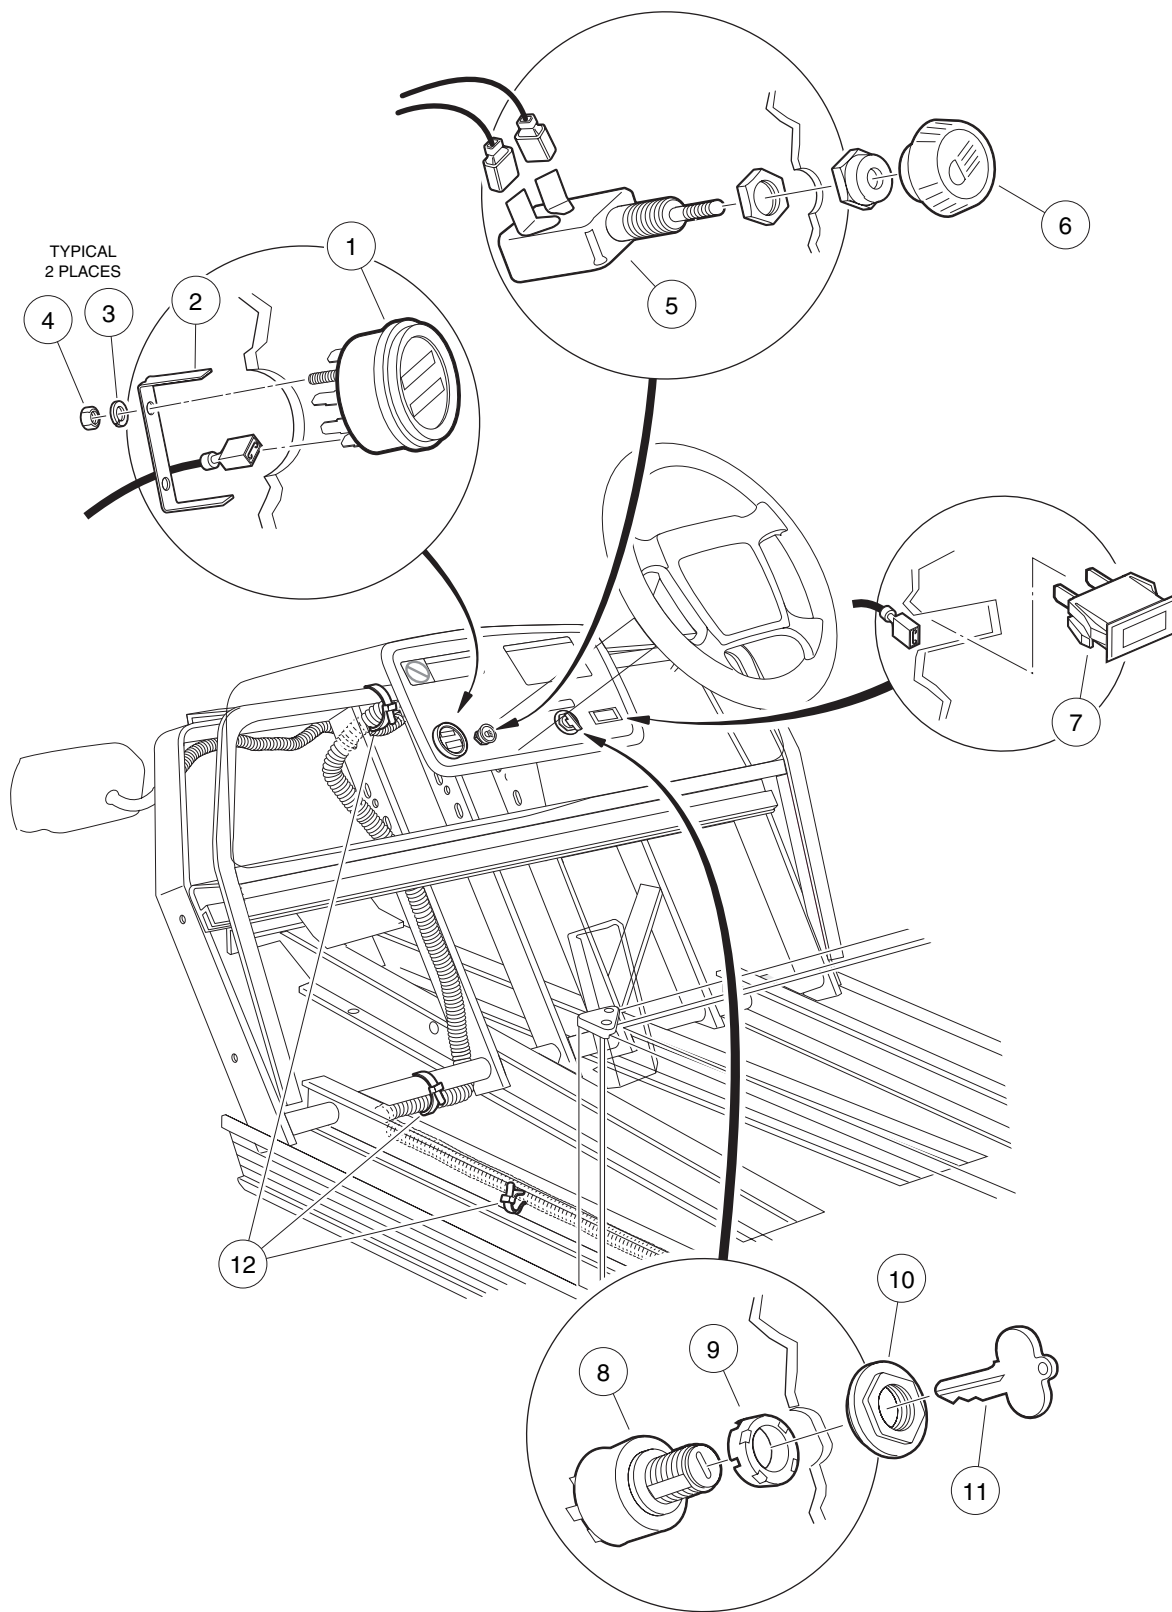


ELECTRICAL COMPONENTS, DASH PANEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101990701</u>	Fuel Gauge/Hour Meter (includes item 2)	1
2	N/A	Bracket	1
3	<u>1012986</u>	Washer, Lock, M4	2
4	<u>101991101</u>	Nut, M4 x 0.7	2
5	<u>102051901</u>	Switch, Light	1
6	<u>1013857</u>	Knob, Light Switch	1
7	<u>1016630</u>	Light, Low Oil Warning	1
8	<u>102044701</u>	Switch, Key (pedal-start vehicles only)	1
8	<u>102044702</u>	Switch, Key (key-start vehicles only)	1
9	<u>102051601</u>	Spacer, Key Switch	1
10	<u>102051701</u>	Nut, Key Switch	1
11	<u>102044801</u>	Key (pair)	1
12	<u>8990</u>	Tie, Wire	3

7

G

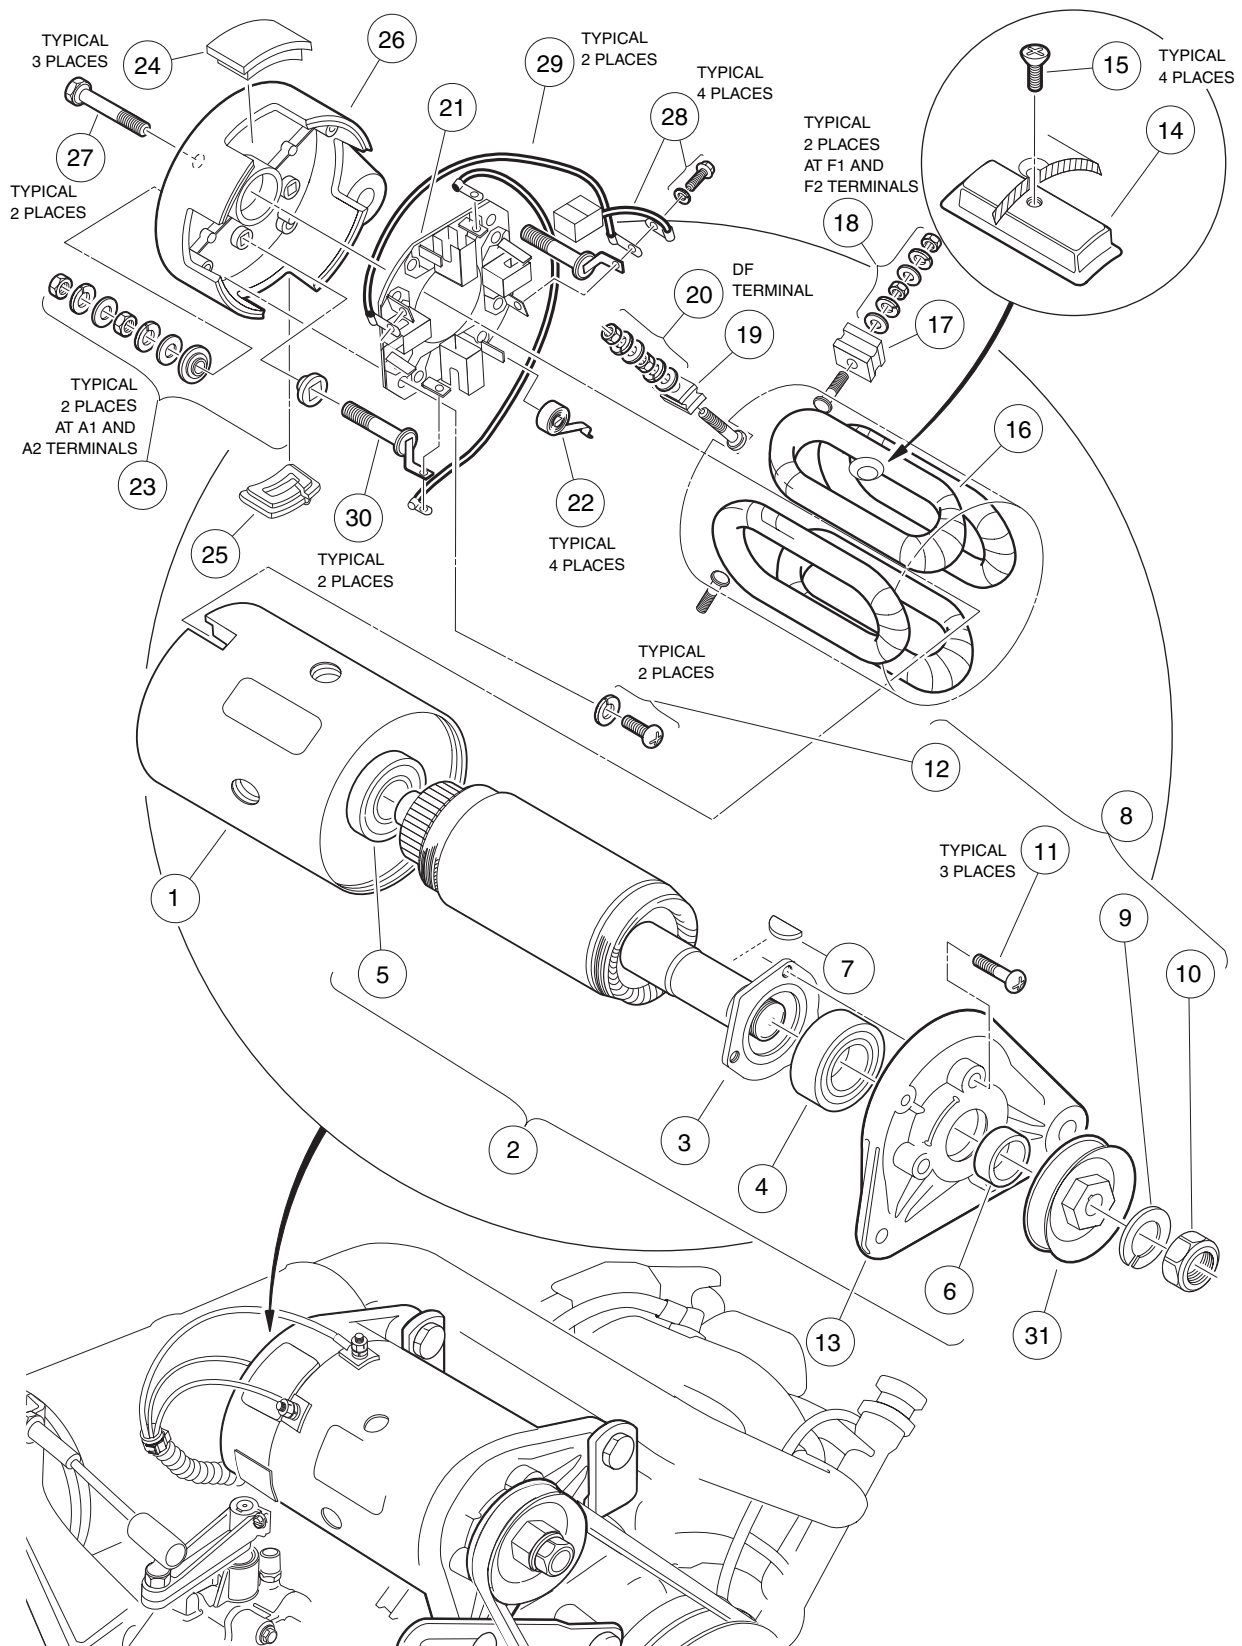


STARTER/GENERATOR ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>101833701</u>	Starter/Generator (clockwise rotation) (includes items 1 - 30)	1
1	<u>101875201</u>	Housing, Field Coil	1
2	<u>101875101</u>	Assembly, Armature (includes items 3 - 6)	1
3	<u>101875001</u>	Retainer, Bearing	1
4	<u>1013001</u>	Ball Bearing, Output Shaft	1
5	<u>1013005</u>	Commutator, Ball Bearing	1
6	<u>101939901</u>	Spacer, 5/16	1
7	<u>1013003</u>	Key, Woodruff	1
8	<u>101876501</u>	Kit, Pulley Nut and Screw (includes items 9 - 12)	1
9	N/A	Washer, Lock, M14	1
10	N/A	Nut, Hex, M14 x 2	1
11	N/A	Screw, Cross-Recessed, M5 x 0.8 x 18 mm	3
12	<u>101896501</u>	Screw, Cross-Recessed, M5 x 0.8 x 16 mm (with lock washer)	2
13	<u>101874901</u>	End Bell, Output Shaft	1
14	<u>101875301</u>	Set, Pole (set of 4)	1
15	<u>101875401</u>	Screw, Pole Piece (set of 4)	1
16	<u>101875501</u>	Coil, Field	1
17	<u>101875601</u>	Insulator, F Terminal	2
18	<u>101877601</u>	Package, Terminal Hardware (F1 and F2)	2
19	<u>101875701</u>	Insulator, DF Terminal	1
20	<u>101877701</u>	Package, Terminal Hardware (DF)	1
21	<u>101301102</u>	Holder, Brush (includes item 22)	1
22	<u>101878101</u>	Spring, Brush	4
23	<u>101876001</u>	Package, Terminal Hardware (A1 and A2)	2
24	<u>101876301</u>	Cover, Brush Inspection Port (set of 4) (includes item 25)	1
25	<u>1017653</u>	Cover, Brush Inspection Port, with Drain	1
26	<u>101876402</u>	End Bell, Commutator	1
27	<u>101879001</u>	Bolt, Clamp, M6 x 1 x 180 mm	2
28	<u>101869302</u>	Package, Brush (includes 4 brushes, 4 screws, 4 washers)	1
29	<u>101876202</u>	Connector, Brush	2
30	<u>101875802</u>	A Connector (set of 2)	1
31	<u>1014289</u>	Pulley	1

7

G

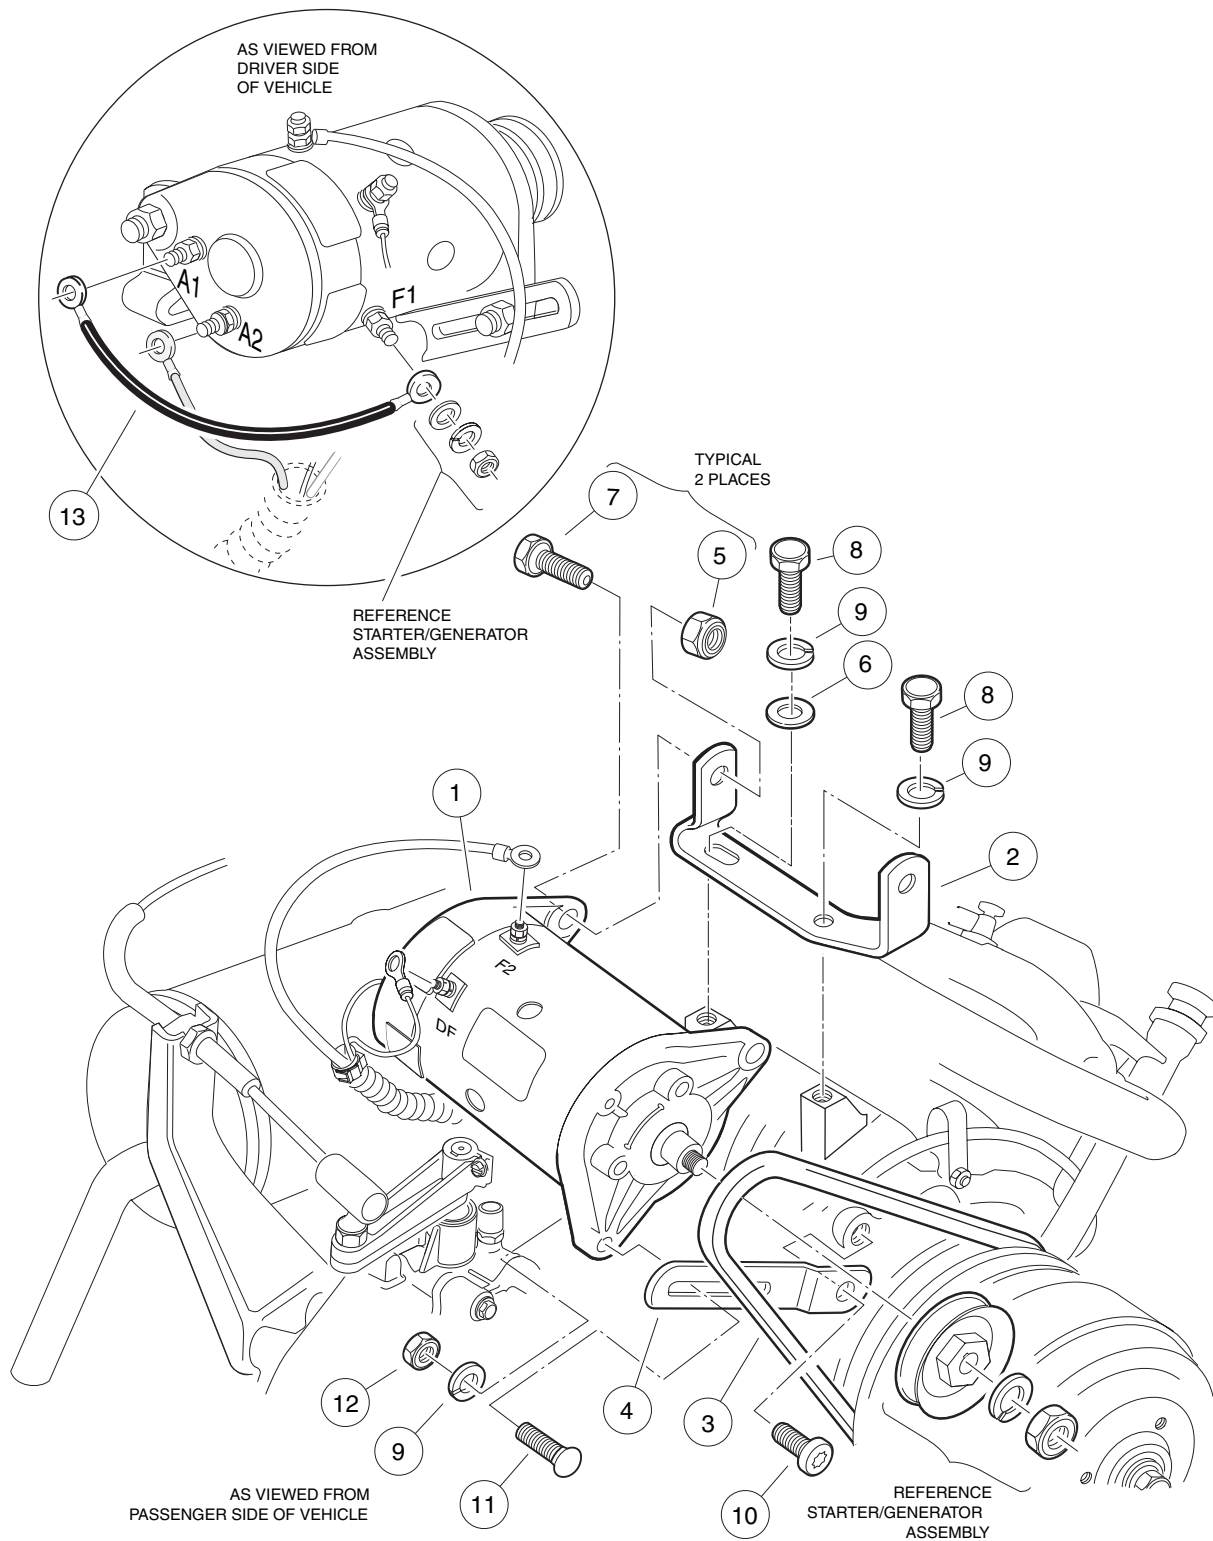


STARTER/GENERATOR MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101833701</u>	Starter/Generator (clockwise rotation)	1
2	<u>101524002</u>	Bracket, Mounting, FE350 and FE400	1
3	<u>101916701</u>	Belt, Starter/Generator	1
4	<u>1016883</u>	Bracket, Adjusting	1
5	<u>8754</u>	Nut, Nylon Lock, 3/8-16	2
6	<u>1241</u>	Washer, Flat, Type A, 5/16 (replaces stainless steel washer 1015075).....	1
7	<u>705</u>	Screw, Hex-Head Cap, 3/8-16 x 1-1/4	2
8	<u>1012830</u>	Screw, Hex-Head Cap, M8 x 1.25 x 22 mm	2
9	<u>7174</u>	Washer, Lock, 5/16	3
10	<u>1016074</u>	Screw, Torx-Head, M8 x 1.25 x 18 mm	1
11	<u>1015932</u>	Bolt, Carriage, 5/16-18 x 1	1
12	<u>1242</u>	Nut, Hex, 5/16-18	1
13	<u>101837301</u>	Wire Assembly, #6 Green	1

7

G

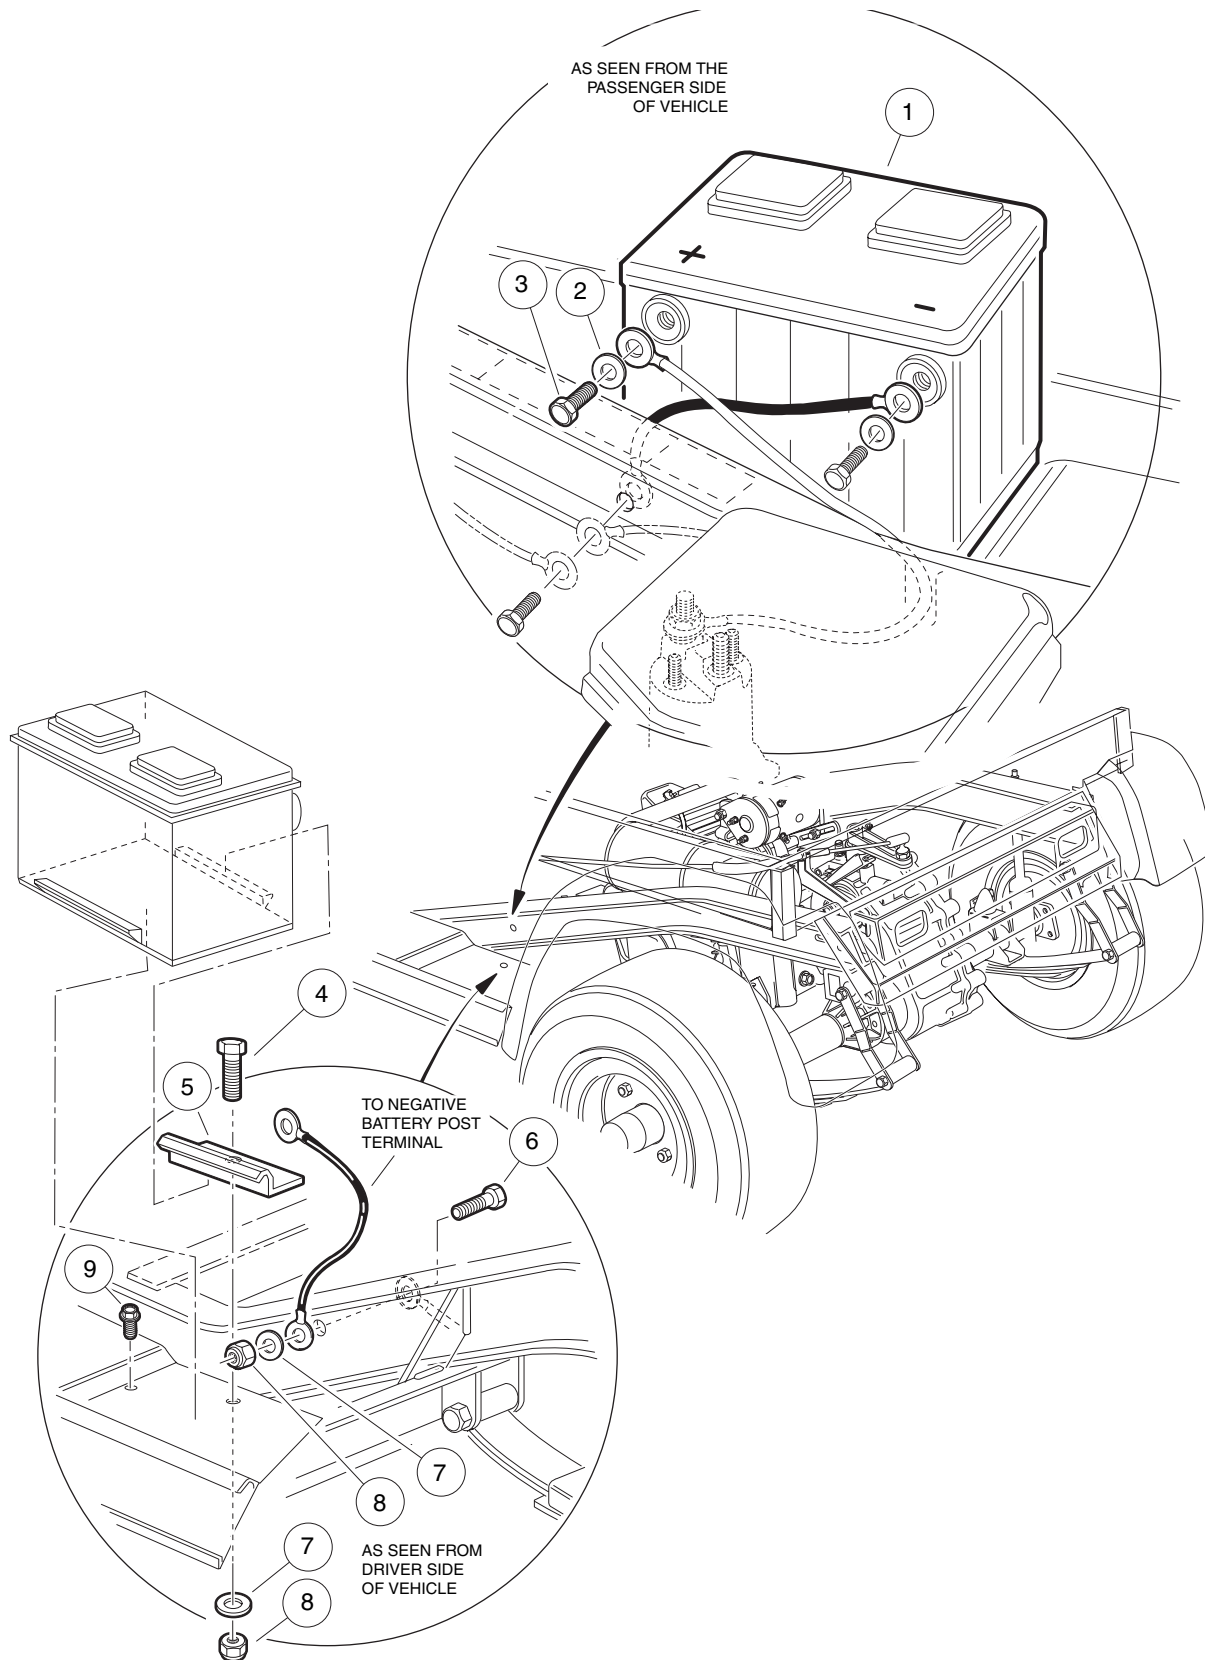

BATTERY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012328</u>	Battery, 12-Volt	1
2	<u>102355301</u>	Washer, Lock, SS, 3/8	2
3	<u>1014375</u>	Screw, Hex-Head Cap, Stainless Steel, 3/8-16 x 1/2	2
4	<u>1010934</u>	Screw, Hex-Head Cap, 5/16-18 x 1	1
5	<u>101898001</u>	Clamp, Battery	1
6	<u>7173</u>	Screw, Hex-Head Cap, 5/16-18 x 3/4	1
7	<u>1241</u>	Washer, Flat, 5/16	2
8	<u>7473</u>	Nut, Nylon Lock, 5/16-18	2
9	<u>1014288</u>	Screw, Thread-Forming, 5/16-18 x 3/4	1

7

G

7



G

ENGINE

8

G

FE350 ENGINE

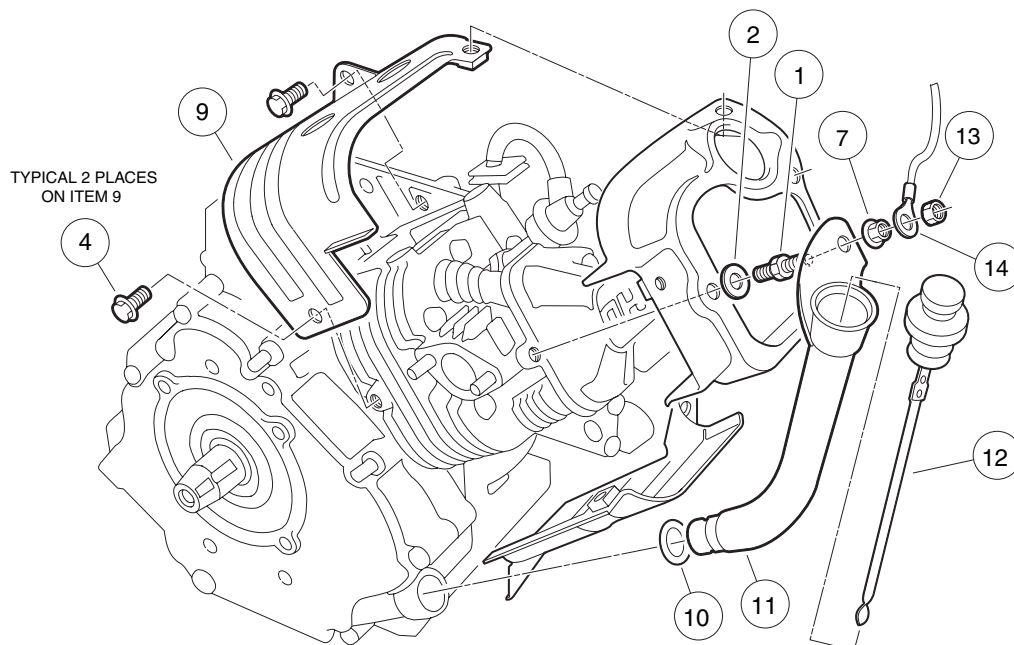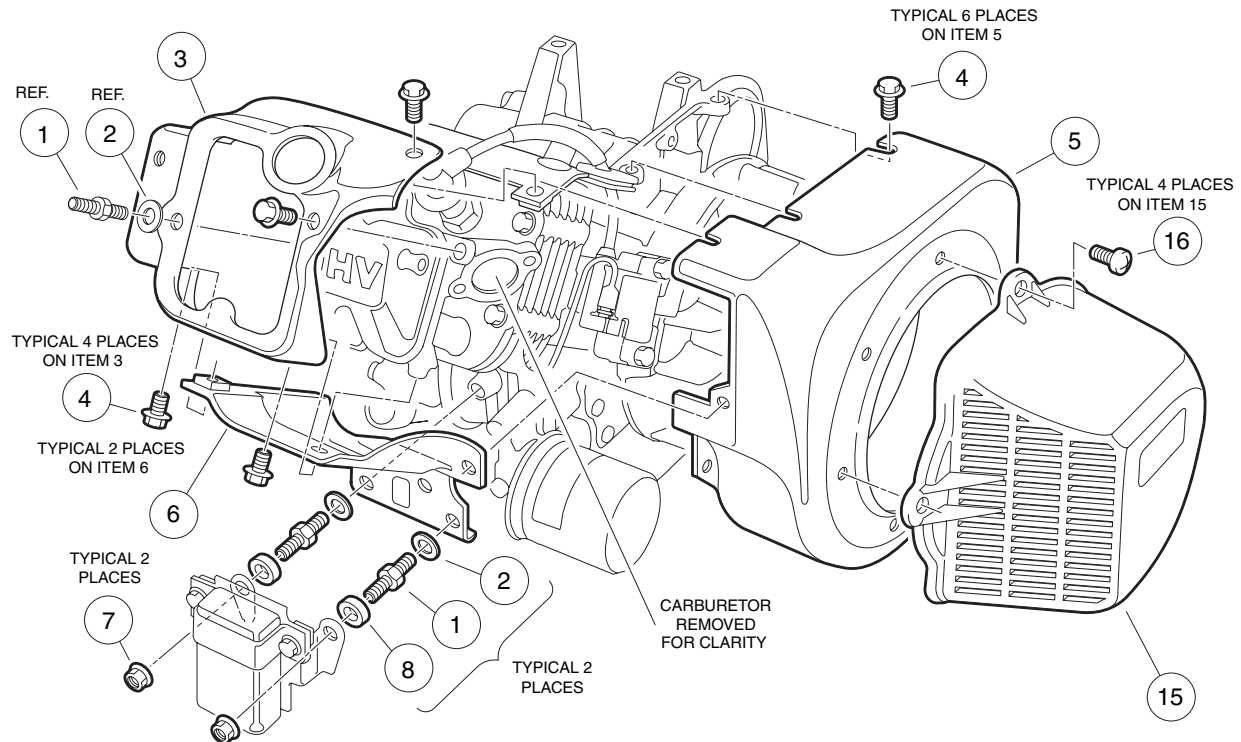


FE350 ENGINE (PEDAL-START) – SHROUDS AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
	<u>101953802</u>	1 2 3 4 FE350 OHV Gasoline Engine, Complete (clockwise rotation) without automatic compression release (w/o ACR) and with Carburetor (does not include items 13 - 16)	1
1	<u>1016507</u>	Bolt, 2-Ended, M6 x 1 x 29 mm	3
2	N/A	Washer, Flat, 6 mm	3
3	<u>1017474</u>	Shroud, Cylinder Head	1
4	<u>1016456</u>	Bolt, Flanged, M6 x 1 x 12 mm	14
5	<u>101916101</u>	Housing, Fan	1
6	<u>1017476</u>	Shroud, Lower Cylinder	1
7	<u>1016547</u>	Nut, Flanged, M6 x 1	3
8	<u>1017500</u>	Spacer	2
9	<u>1017475</u>	Shroud, Upper Cylinder	1
10	<u>1016539</u>	O-Ring	1
11	<u>1017486</u>	Tube, Oil Filler	1
12	<u>1016531</u>	Dipstick	1
13	<u>101887601</u>	Nut, Nylon Lock, M6 x 1	1
14	<u>1015332</u>	Wire Assembly, #10 Braided Ground	1
15	<u>1015649</u>	Shroud, Fan	1
16	<u>1015969</u>	Screw, Pan-Head, M6 x 1 x 14 mm	4

8
G

FE350 ENGINE

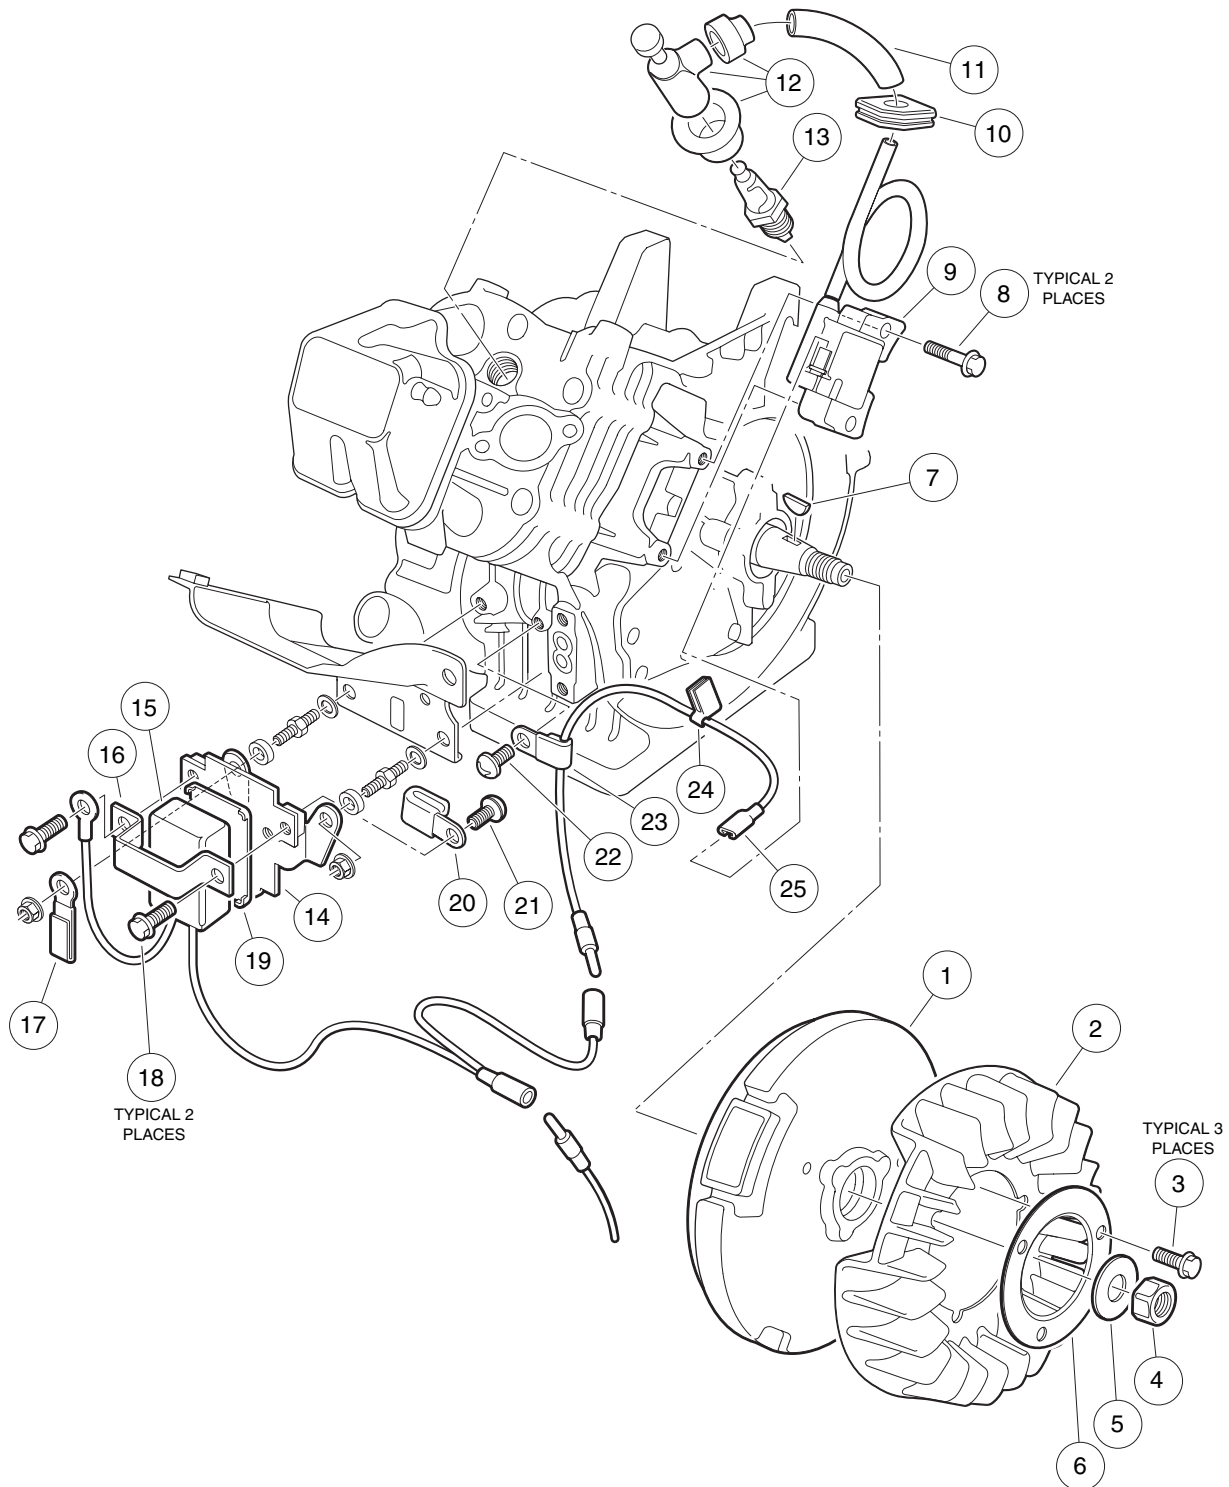


FE350 ENGINE (PEDAL-START) – IGNITION COMPONENTS AND FLYWHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101916201</u>	Flywheel	1
2	<u>101916301</u>	Fan, Flywheel – Gray	1
3	<u>1017448</u>	Screw, Flanged Hex-Head, M6 x 1 x 10 mm	3
4	N/A	Nut, Hex, Fine, 18 mm	1
5	<u>1017490</u>	Washer, Flat, 18 mm	1
6	<u>1017455</u>	Plate, Flywheel Fan	1
7	<u>1016562</u>	Key	1
8	<u>1016455</u>	Screw, Hex-Head Flanged, M5 x 0.8 x 25 mm	2
9	<u>101909201</u>	Coil, Ignition (with internal igniter)	1
10	<u>1016578</u>	Grommet	1
11	<u>1016588</u>	Tube, 7 mm I.D. x 10 mm O.D. x 70 mm Long	1
12	<u>1017463</u>	Assembly, Plug Cap	1
13	<u>101881101</u>	Plug, Spark, OHV (Autolite®)	1
13	<u>AM10724</u>	Plug, Spark, OHV (NGK®)	1
14	<u>1016445</u>	Bracket, RPM Limiter	1
15	<u>101909401</u>	Limiter, RPM	1
16	<u>1016579</u>	Band, RPM Limiter Mount	1
17	<u>1012981</u>	Clamp	1
18	<u>1016456</u>	Screw, Flanged Hex-Head, M6 x 1 x 12 mm	2
19	<u>1016586</u>	Damper	1
20	<u>101909501</u>	Clamp	1
21	<u>1016497</u>	Screw, Cross Pan-Head, M5 x 0.8 x 8 mm	1
22	<u>1016544</u>	Screw, Cross Pan-Head Self-Tapping, M5 x 12 mm	1
23	<u>1016561</u>	Clamp	1
24	<u>1016587</u>	Clamp	1
25	<u>101909301</u>	Wire, Lead	1

8
G


FE350 ENGINE

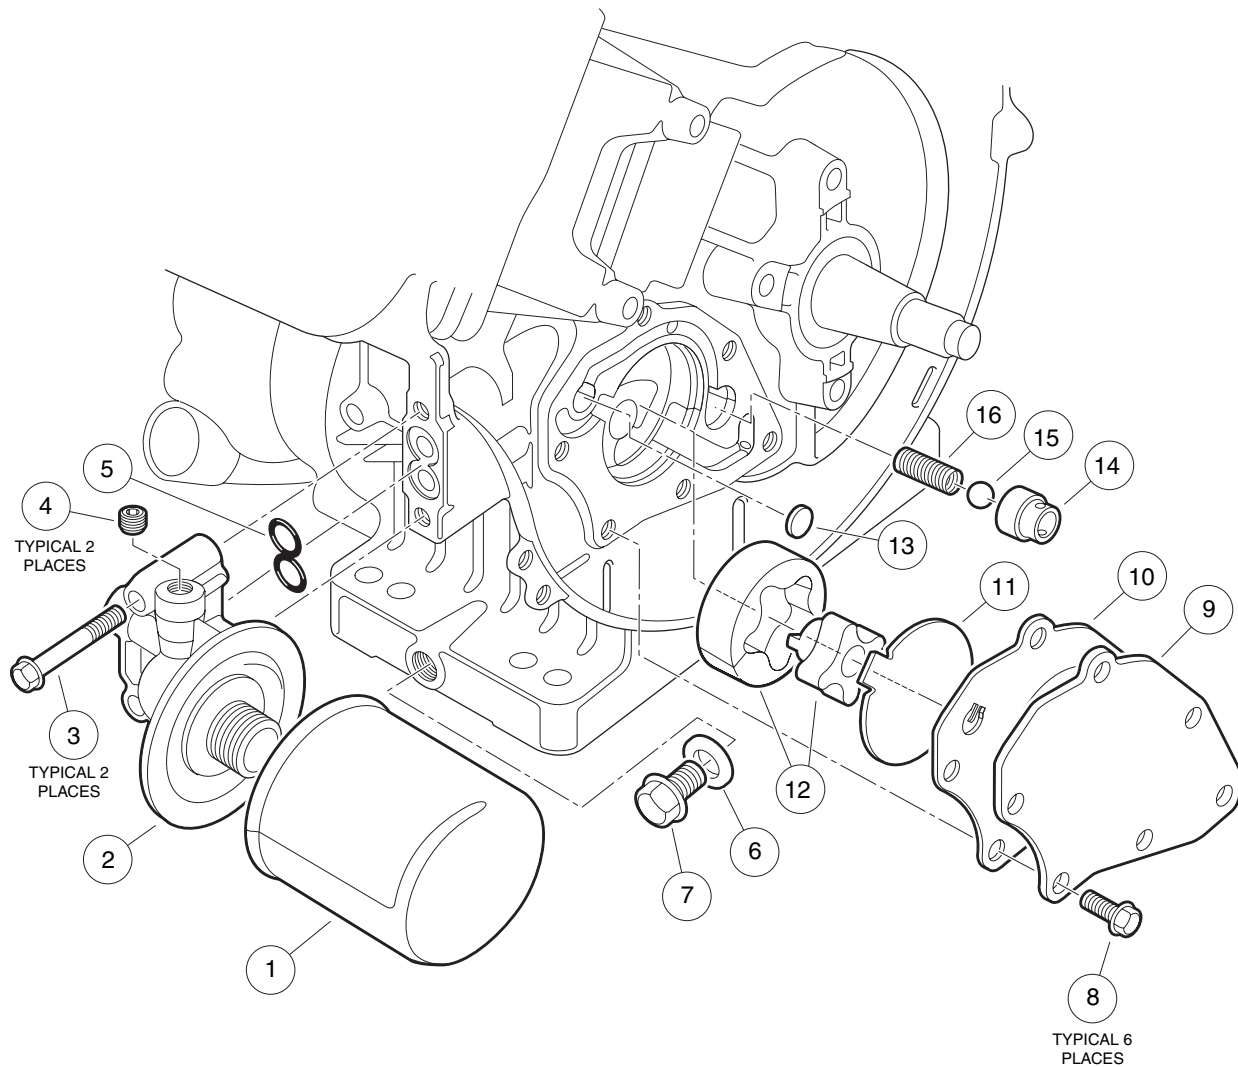

FE350 ENGINE (PEDAL-START) – OIL CIRCULATION

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>1016467</u>	Oil Filter	1	
2	<u>1016502</u>	Bracket, Oil Filter	1	
3	<u>1016457</u>	Bolt, Flanged Hex-Head, M6 x 1 x 40 mm	2	
4	<u>1017507</u>	Plug	2	
5	<u>1016570</u>	O-Ring, Oil Filter Mount	1	
6	<u>1016432</u>	Gasket, Drain Plug	1	
7	<u>1016576</u>	Plug, Drain	1	
8	<u>1017456</u>	Screw, Flanged Hex-Head, M6 x 1 x 12 mm	6	
9	<u>1017460</u>	Cover, Pump	1	
10	<u>1017442</u>	Gasket, Oil Pump	1	
11	<u>1016473</u>	Plate, Oil Pump	1	
12	<u>101648203</u>	Pump, Oil and Rotor	1	
13	<u>1017458</u>	Filter	1	
14	<u>1016429</u>	Seat, Valve	1	
15	<u>1016537</u>	Ball, Steel Pressure Relief	1	
16	<u>1016581</u>	Spring	1	


FE350 ENGINE

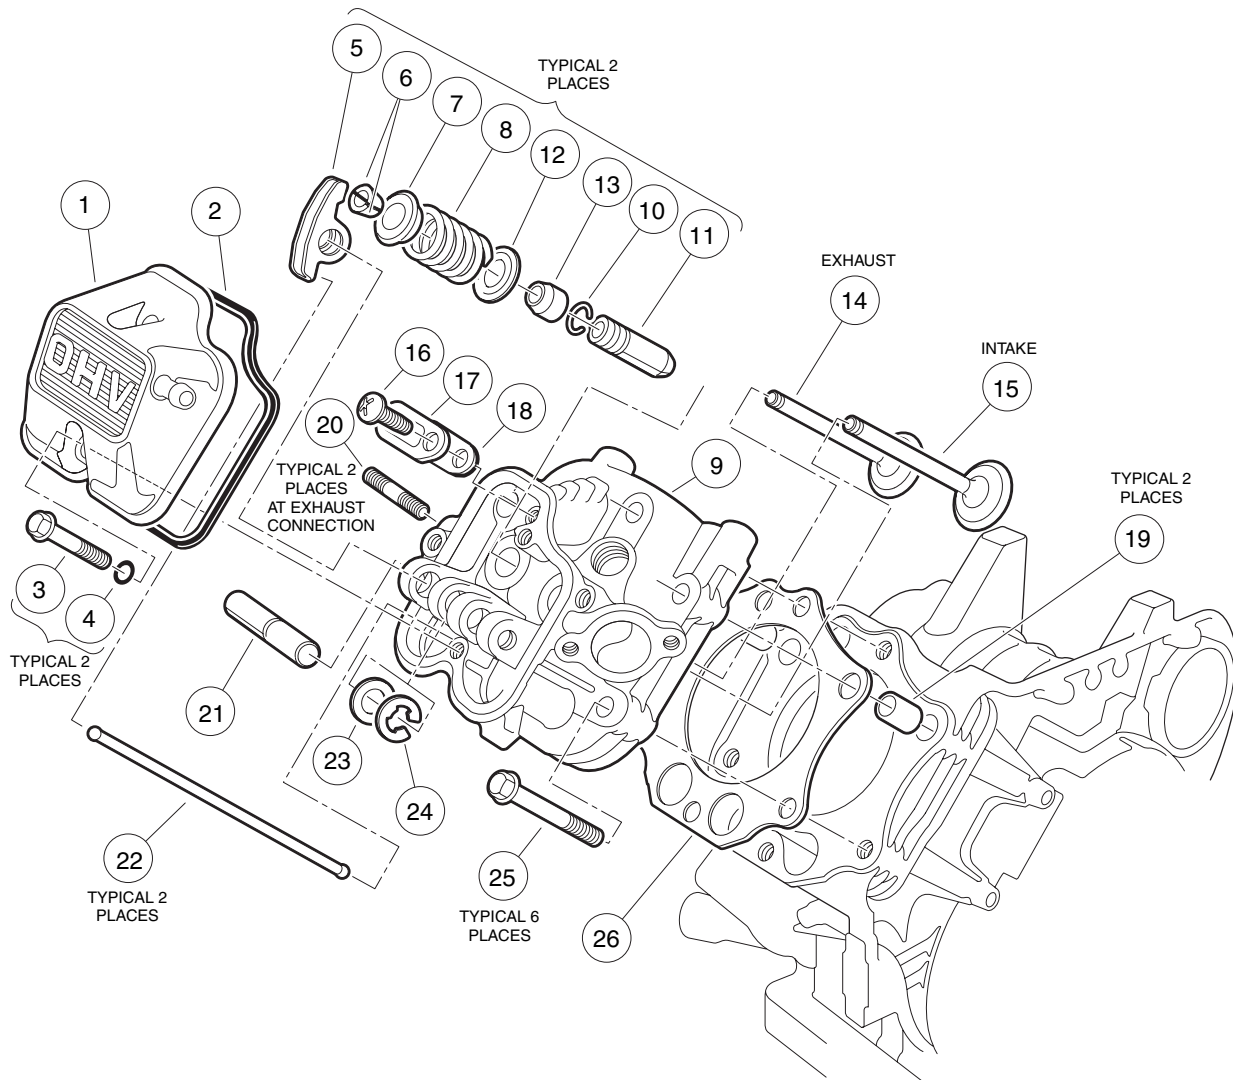

FE350 ENGINE (PEDAL-START) – CYLINDER HEAD

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>1016442</u>	Case, Rocker	1	
2	<u>1016436</u>	Gasket, Rocker Case	1	
3	<u>1016583</u>	Bolt, Flanged, M6 x 1 x 35 mm	2	
4	<u>1016569</u>	O-Ring	2	
5	<u>1017446</u>	Arm, Rocker	2	
6	<u>1016450</u>	Collet	4	
7	<u>1016449</u>	Retainer, Valve Spring	2	
8	<u>1017473</u>	Spring, Engine Valve	2	
9	<u>1017435</u>	Assembly, Cylinder Head, FE350 (includes items 10 and 11)	1	
10	<u>1016560</u>	Ring, Snap	2	
11	<u>1016519</u>	Guide, Valve	2	
12	<u>1016479</u>	Seat, Spring	2	
13	<u>1016566</u>	Seal, Valve	2	
14	<u>1017445</u>	Valve, Exhaust	1	
15	<u>1017444</u>	Valve, Intake	1	
16	<u>1016544</u>	Screw, Cross Pan-Head Self-Tapping, M5 x 0.8 x 12 mm	1	
17	<u>1016474</u>	Plate	1	
18	<u>1016483</u>	Valve	1	
19	<u>1016563</u>	Pin, Hollow	2	
20	<u>1016489</u>	Bolt, Stud, M8 x 1.25 x 29 mm	2	
21	<u>1016452</u>	Shaft, Rocker	1	
22	<u>1017454</u>	Rod, Push	2	
23	<u>1016549</u>	Washer, Flat, M12	1	
24	<u>1016517</u>	Circlip, Type-E	1	
25	<u>1016458</u>	Bolt, Flanged, M8 x 1.25 x 45 mm	6	
26	<u>1017434</u>	Gasket, Head	1	
27	<u>102304801</u>	Kit, Gasket, FE350 (contains one each of all internal gaskets for FE350 engine) (not shown)	1	

FE350 ENGINE

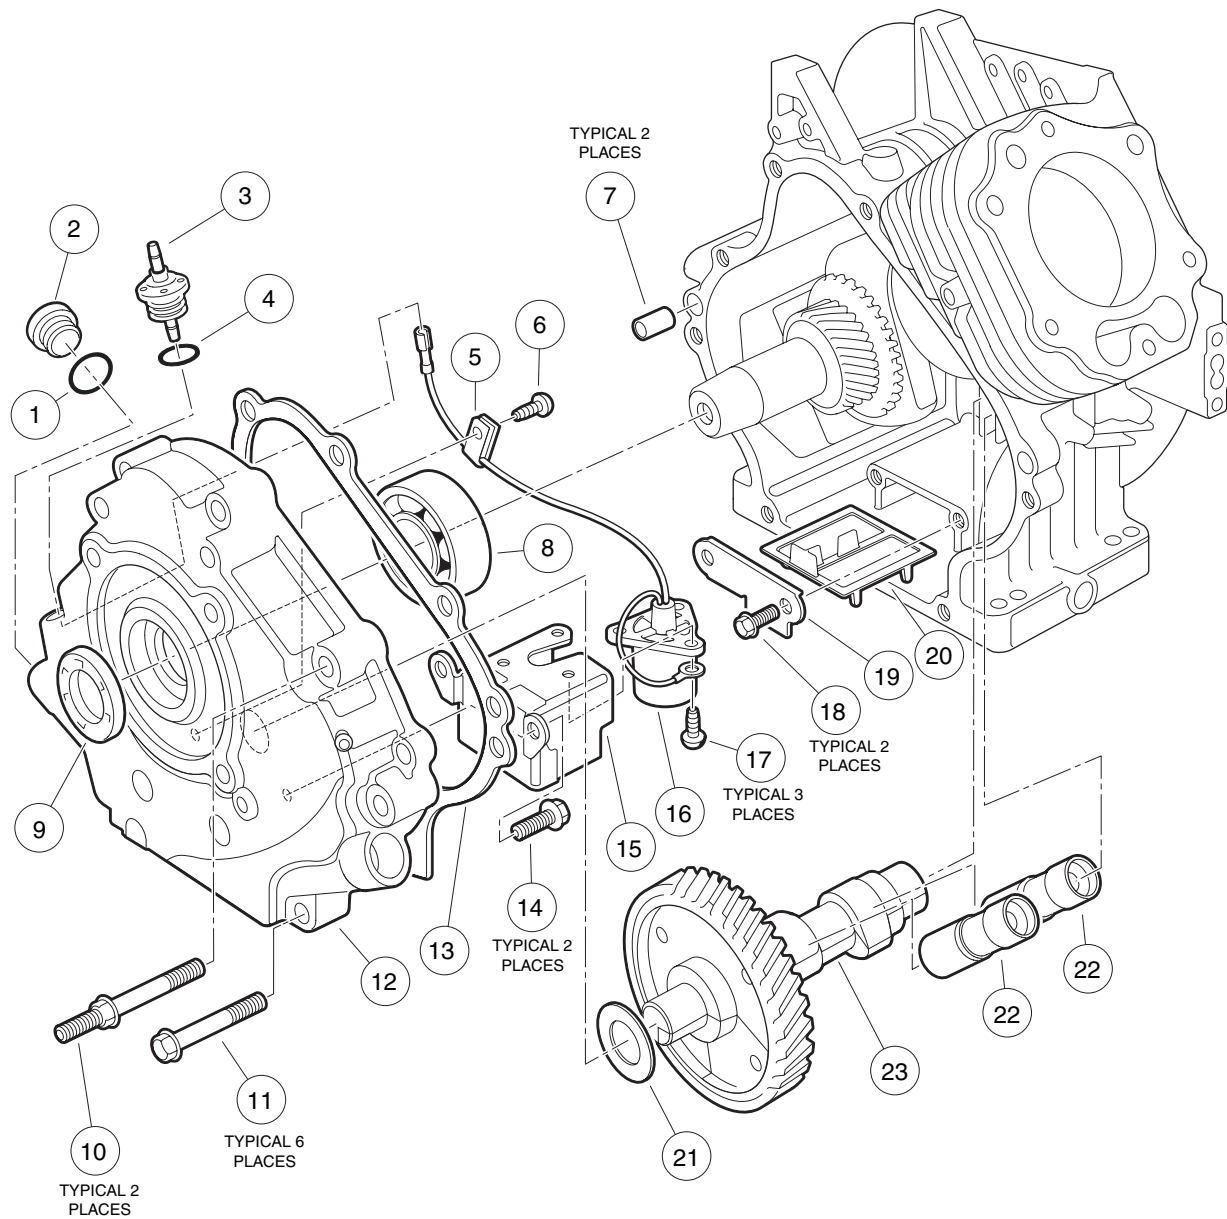


FE350 ENGINE (PEDAL-START) – CRANKCASE, CAMSHAFT AND OIL SENSOR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016538</u>	O-Ring	1
2	<u>1017508</u>	Plug	1
3	<u>1016535</u>	Connector, Oil Sending Unit	1
4	<u>1016538</u>	O-Ring	1
5	<u>1016506</u>	Clamp	1
6	<u>1016544</u>	Screw, Cross Pan-Head Self-Tapping, M5 x 0.8 x 12 mm	1
7	<u>1016564</u>	Pin, Hollow	2
8	<u>1017487</u>	Bearing, Crankshaft	1
9	<u>1017504</u>	Seal, Crankshaft	1
10	<u>1016584</u>	Bolt, 2-Ended Flanged, M8 x 1.25 x 69 mm	2
11	<u>1017514</u>	Bolt, Flanged, M8 x 1.25 x 45 mm	6
12	<u>1017472</u>	Cover, Crankcase	1
13	<u>1017443</u>	Gasket, Crankcase Cover	1
14	<u>1017513</u>	Bolt, Flanged, M6 x 1 x 12 mm	2
15	<u>1016510</u>	Bracket, Oil Level Switch	1
16	<u>1016494</u>	Sensor, Oil Level	1
17	<u>1016496</u>	Screw, Cross Pan-Head, M4 x 0.7 x 8 mm	3
18	<u>1016454</u>	Bolt, Flanged, M5 x 0.8 x 8 mm	2
19	<u>1016472</u>	Plate, Oil Filter Screen	1
20	<u>1016521</u>	Screen, Oil Filter	1
21	<u>101751801</u>	Shim, 0.3 mm Thick	A/R
21	<u>101751802</u>	Shim, 0.4 mm Thick	A/R
21	<u>101751803</u>	Shim, 0.5 mm Thick	A/R
22	<u>1017447</u>	Lifter, Hydraulic	2
23	<u>102431001</u>	Camshaft, FE350 (without automatic compression release) (for engines with serial numbers 094171 and greater)	1
	<u>101947601</u>	Camshaft, FE350 (without automatic compression release) (for engines with serial numbers prior to 094171).....	1
24	<u>102304801</u>	Kit, Gasket, FE350 (contains one each of all internal gaskets for FE350 engine) (not shown)	1

8
G

FE350 ENGINE


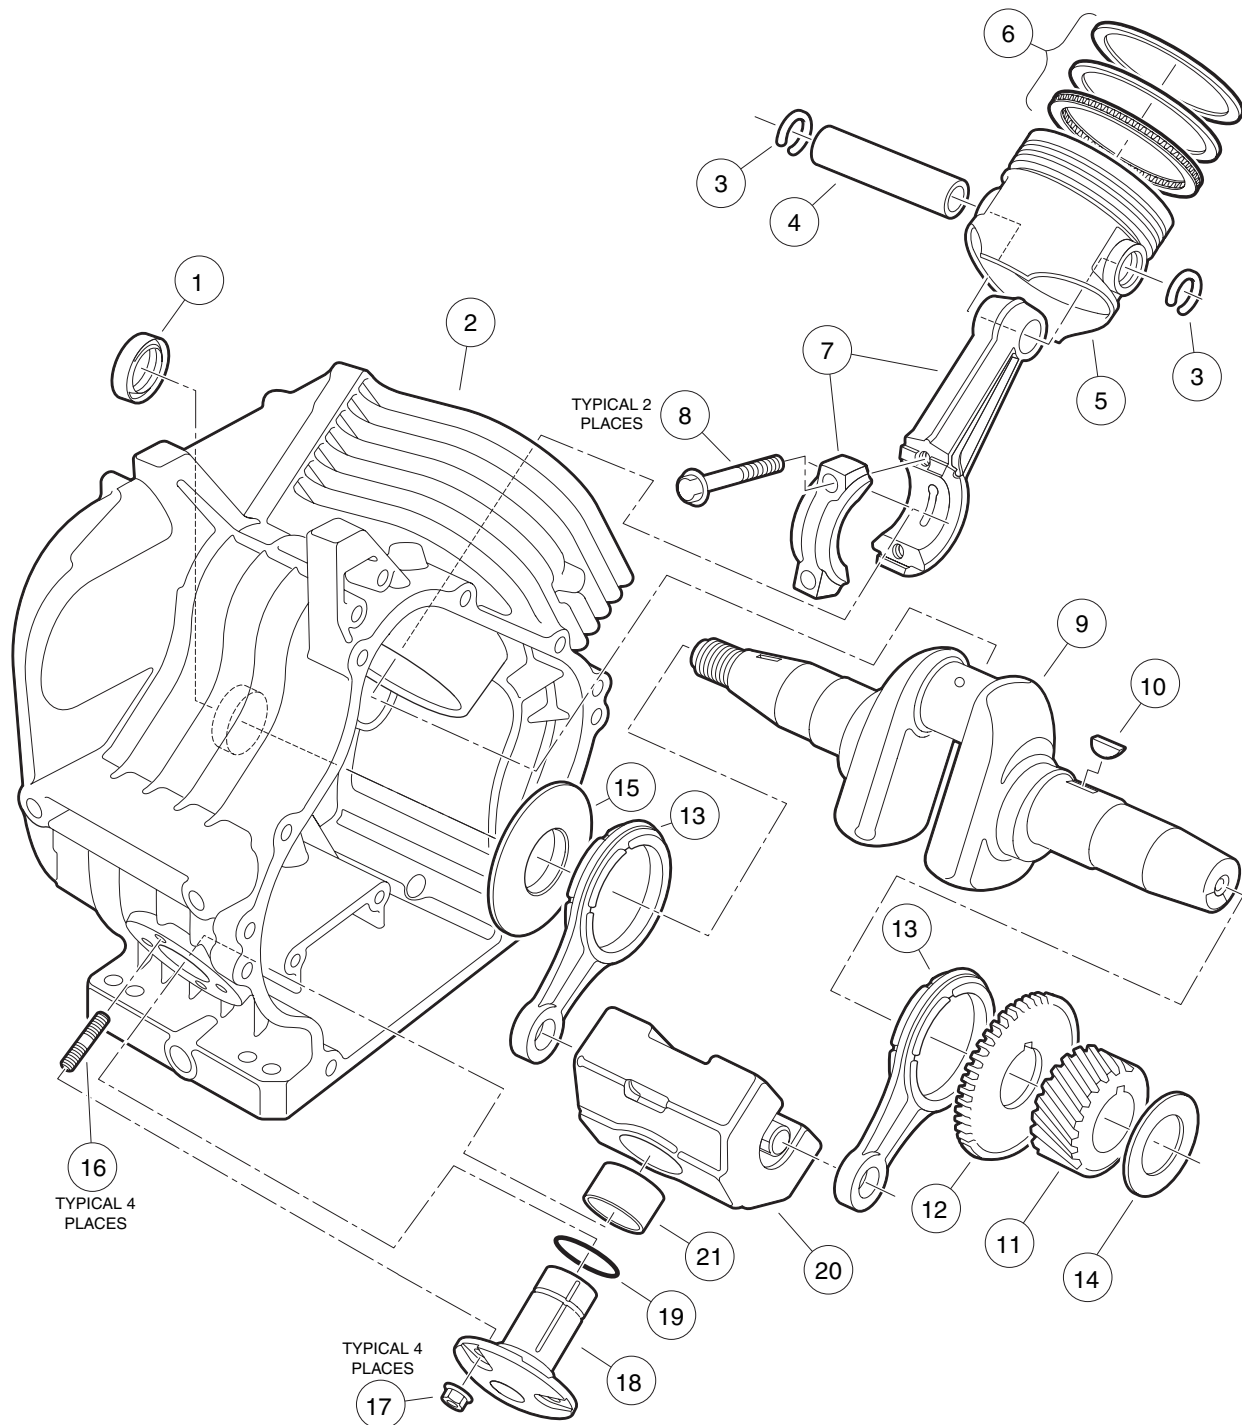


FE350 ENGINE (PEDAL-START) – CRANKCASE AND CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1017503</u>	Seal, Oil	1
2	<u>101916001</u>	Crankcase, FE350 (clockwise rotation)	1
3	<u>1017502</u>	Ring, Snap	2
4	<u>1017450</u>	Pin, Piston	1
5	<u>101744901</u>	Piston, Standard.....	1
5	<u>101744902</u>	Piston, .50 mm Oversized	1
6	<u>101745101</u>	Ring Set, Piston, Standard	1
6	<u>101745102</u>	Ring Set, Piston, .50 mm Oversized	1
7	<u>101745701</u>	Assembly, Connecting Rod, Standard (includes 2 each of item 8)	1
7	<u>101745702</u>	Assembly, Connecting Rod, .50 mm Undersized (includes 2 each of item 8)	1
8	<u>102272201</u>	Bolt, Hex-Head, M8 x 1.25 x 42 mm	2
9	<u>101922302</u>	Crankshaft, FE350 (left-hand threads) (for engines with serial numbers lower than 094171) (includes items 10 - 12 and one each of item 13)	1
	<u>102430901</u>	Crankshaft, FE350 (left-hand threads) (for engines with serial numbers 094171 and greater) (includes helical and spur gear (not sold individually) and one each of items 10 and 13)	1
10	<u>1016562</u>	Key	1
11	<u>1017484</u>	Gear, Helical	1
12	<u>1017483</u>	Gear, Spur	1
13	<u>1017471</u>	Rod, Connecting	2
14	<u>101773301</u>	Shim, Crankshaft, 1.18 mm Thick	A/R
14	<u>101773302</u>	Shim, Crankshaft, 1.25 mm Thick	A/R
14	<u>101773303</u>	Shim, Crankshaft, 1.32 mm Thick	A/R
14	<u>101773304</u>	Shim, Crankshaft, 1.39 mm Thick	A/R
14	<u>101773305</u>	Shim, Crankshaft, 1.46 mm Thick	A/R
14	<u>101773306</u>	Shim, Crankshaft, 1.53 mm Thick	A/R
14	<u>101773307</u>	Shim, Crankshaft, 1.60 mm Thick	A/R
14	<u>101773308</u>	Shim, Crankshaft, 1.67 mm Thick	A/R
14	<u>101773309</u>	Shim, Crankshaft, 1.74 mm Thick	A/R
14	<u>101773310</u>	Shim, Crankshaft, 1.11 mm Thick	A/R
14	<u>101773311</u>	Shim, Crankshaft, 1.81 mm Thick	A/R
15	<u>1017501</u>	Spacer	1
16	<u>1016541</u>	Bolt, Stud, M6 x 1 x 22 mm	4
17	<u>1016547</u>	Nut, Flanged, M6 x 1	4
18	<u>1016470</u>	Shaft, Guide Counterbalance	1
19	<u>1016571</u>	O-Ring	1
20	<u>1017453</u>	Weight, Counterbalance (includes item 21)	1
21	<u>1017510</u>	Bearing	1

8
G

FE400 ENGINE

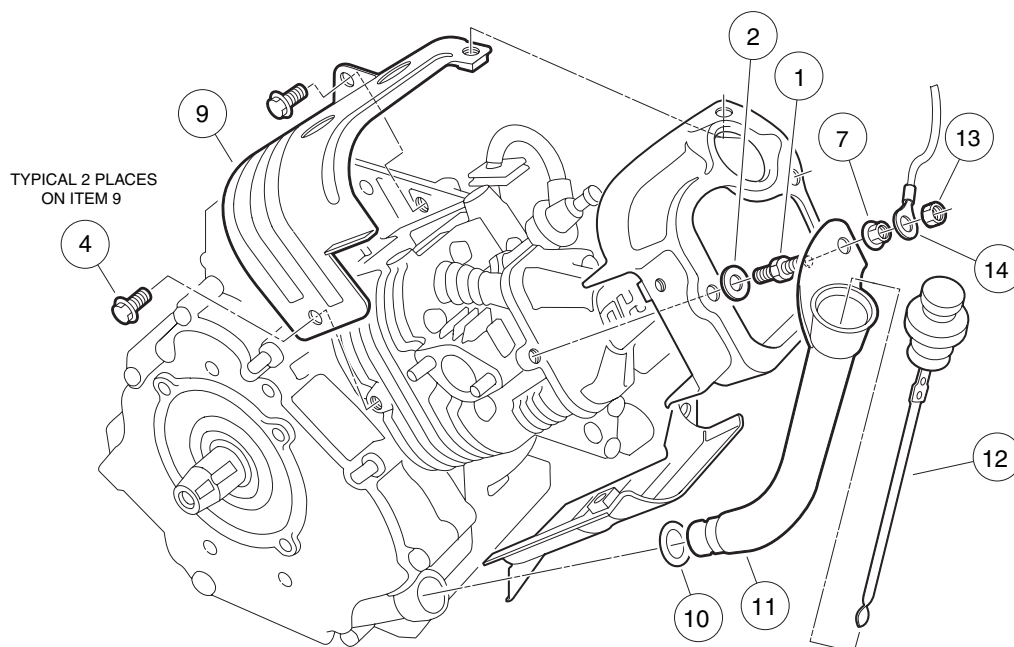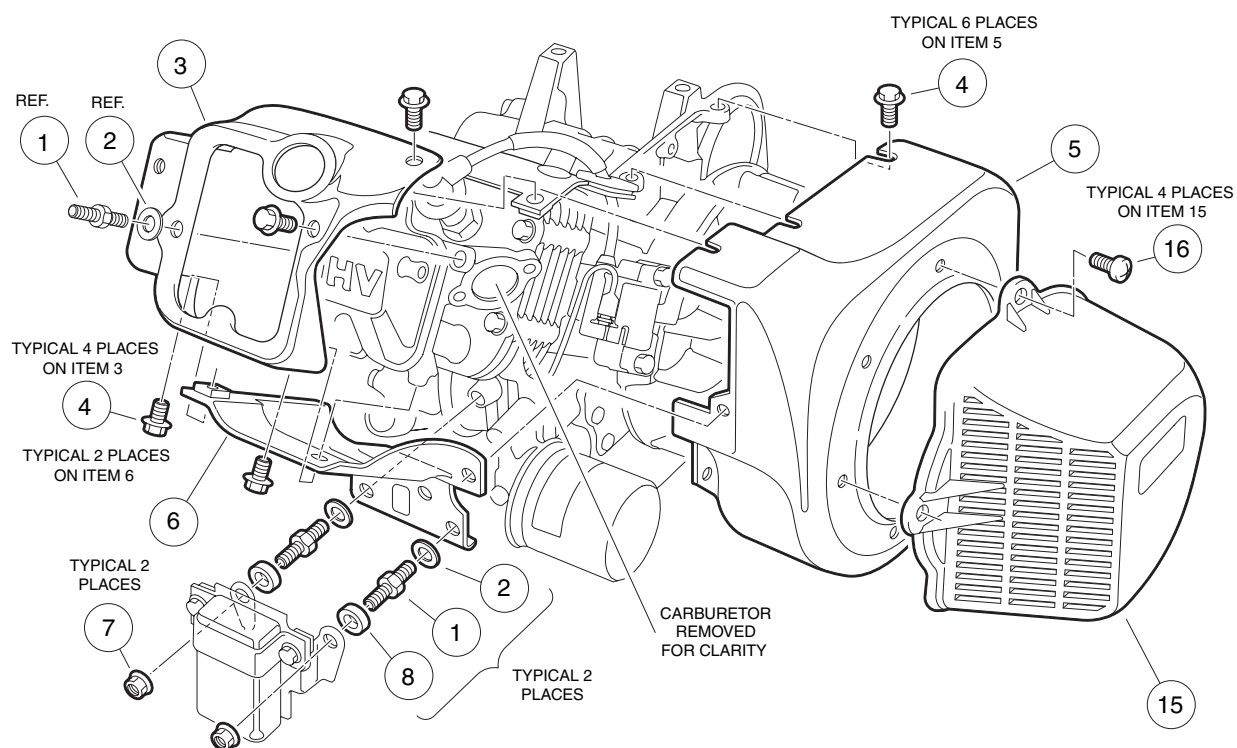


FE400 ENGINE (KEY-START) – SHROUDS AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
	<u>102258701</u>	1 2 3 4 FE400 OHV Gasoline Engine, Complete (clockwise rotation) with automatic compression release (ACR) and Carburetor (does not include items 13 - 16)	1
1	<u>1016507</u>	Bolt, 2-Ended, M6 x 1 x 29 mm	3
2	N/A	Washer, Flat, 6 mm	3
3	<u>1017474</u>	Shroud, Cylinder Head	1
4	<u>1016456</u>	Bolt, Flanged, M6 x 1 x 12 mm	14
5	<u>102272001</u>	Housing, Fan	1
6	<u>1017476</u>	Shroud, Lower Cylinder	1
7	<u>1016547</u>	Nut, Flanged, M6 x 1	3
8	<u>1017500</u>	Spacer	2
9	<u>1017475</u>	Shroud, Upper Cylinder	1
10	<u>1016539</u>	O-Ring	1
11	<u>1017486</u>	Tube, Oil Filler	1
12	<u>1016531</u>	Dipstick	1
13	<u>101887601</u>	Nut, Nylon Lock, M6 x 1	1
14	<u>1015332</u>	Wire Assembly, #10 Braided Ground	1
15	<u>1015649</u>	Shroud, Fan	1
16	<u>1015969</u>	Screw, Pan-Head, M6 x 1 x 14 mm	4

8

G

FE400 ENGINE

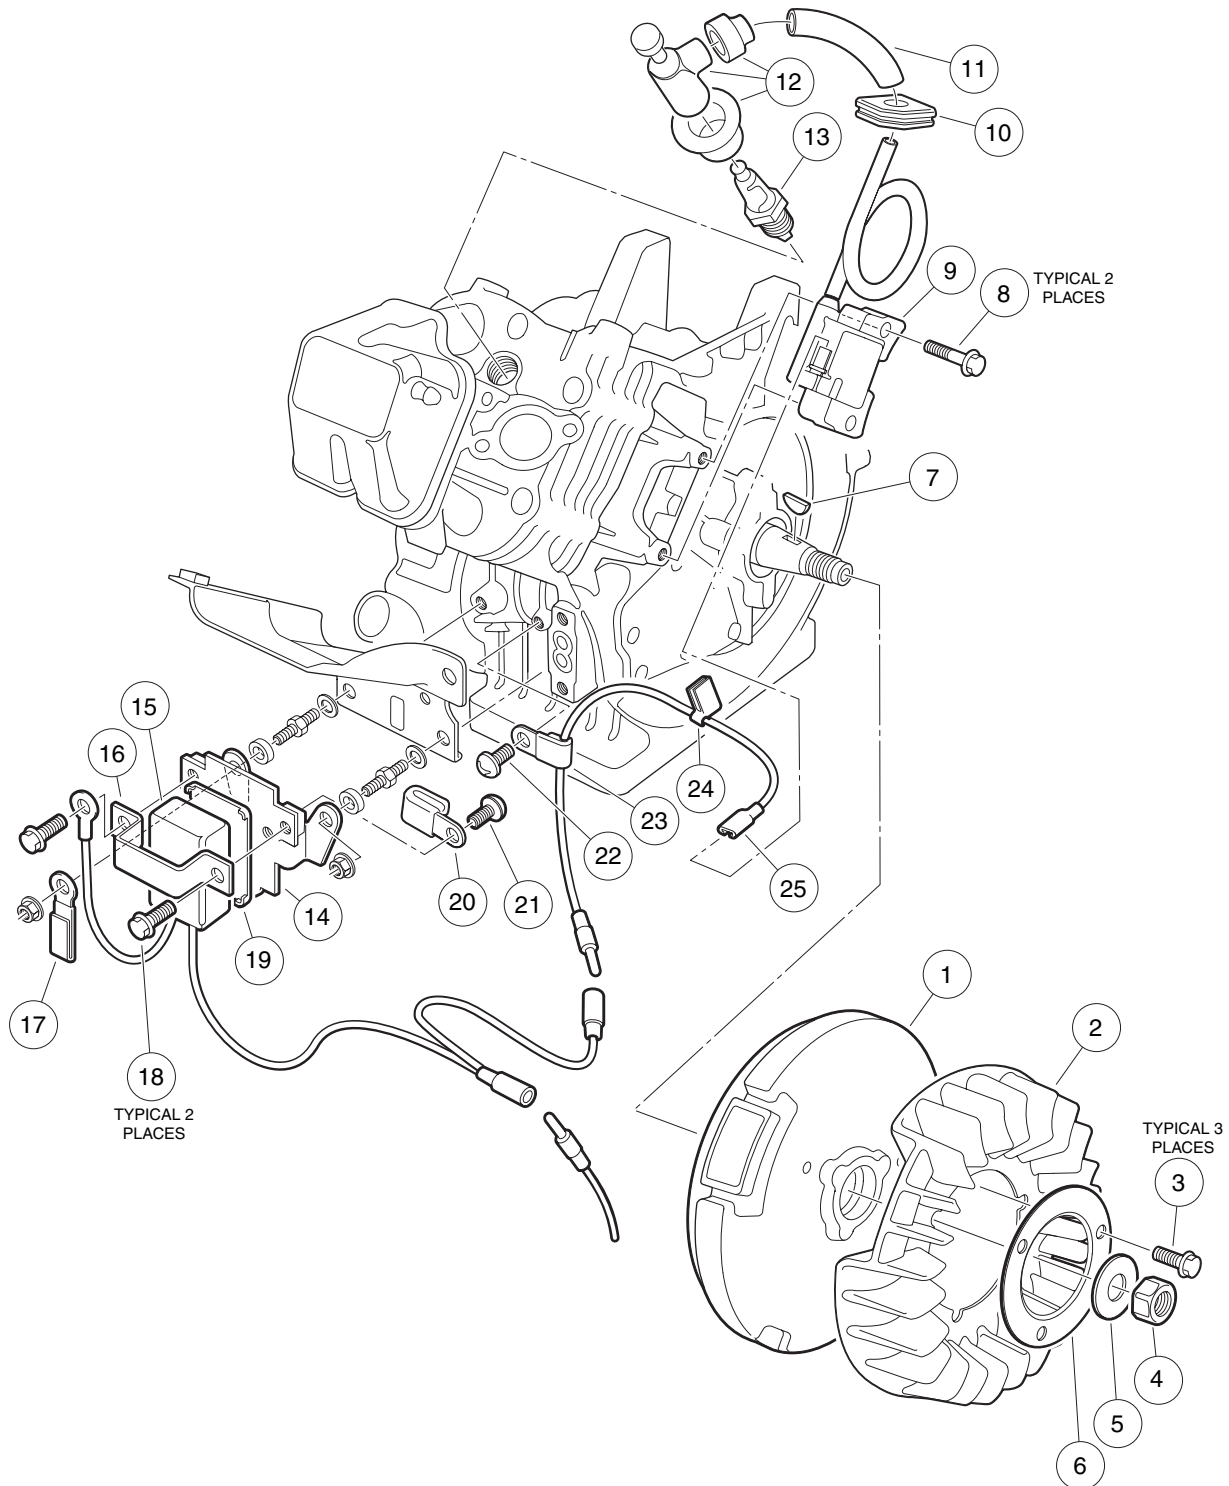


FE400 ENGINE (KEY-START) – IGNITION COMPONENTS AND FLYWHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101916201</u>	Flywheel	1
2	<u>101916301</u>	Fan, Flywheel – Gray	1
3	<u>1017448</u>	Screw, Flanged Hex-Head, M6 x 1 x 10 mm	3
4	N/A	Nut, Hex, Fine, 18 mm	1
5	<u>1017490</u>	Washer, Flat, 18 mm	1
6	<u>1017455</u>	Plate, Flywheel Fan	1
7	<u>1016562</u>	Key	1
8	<u>1016455</u>	Screw, Hex-Head Flanged, M5 x 0.8 x 25 mm	2
9	<u>101909201</u>	Coil, Ignition (with internal igniter)	1
10	<u>1016578</u>	Grommet	1
11	<u>1016588</u>	Tube, 7 mm I.D. x 10 mm O.D. x 70 mm Long	1
12	<u>1017463</u>	Assembly, Plug Cap	1
13	<u>101881101</u>	Plug, Spark, OHV (Autolite)	1
13	<u>AM10724</u>	Plug, Spark, OHV (NGK)	1
14	<u>1016445</u>	Bracket, RPM Limiter	1
15	<u>101909401</u>	Limiter, RPM	1
16	<u>1016579</u>	Band, RPM Limiter Mount	1
17	<u>1012981</u>	Clamp	1
18	<u>1016456</u>	Screw, Flanged Hex-Head, M6 x 1 x 12 mm	2
19	<u>1016586</u>	Damper	1
20	<u>101909501</u>	Clamp	1
21	<u>1016497</u>	Screw, Cross Pan-Head, M5 x 0.8 x 8 mm	1
22	<u>1016544</u>	Screw, Cross Pan-Head Self-Tapping, M5 x 12 mm	1
23	<u>1016561</u>	Clamp	1
24	<u>1016587</u>	Clamp	1
25	<u>101909301</u>	Wire, Lead	1

8
G


FE400 ENGINE

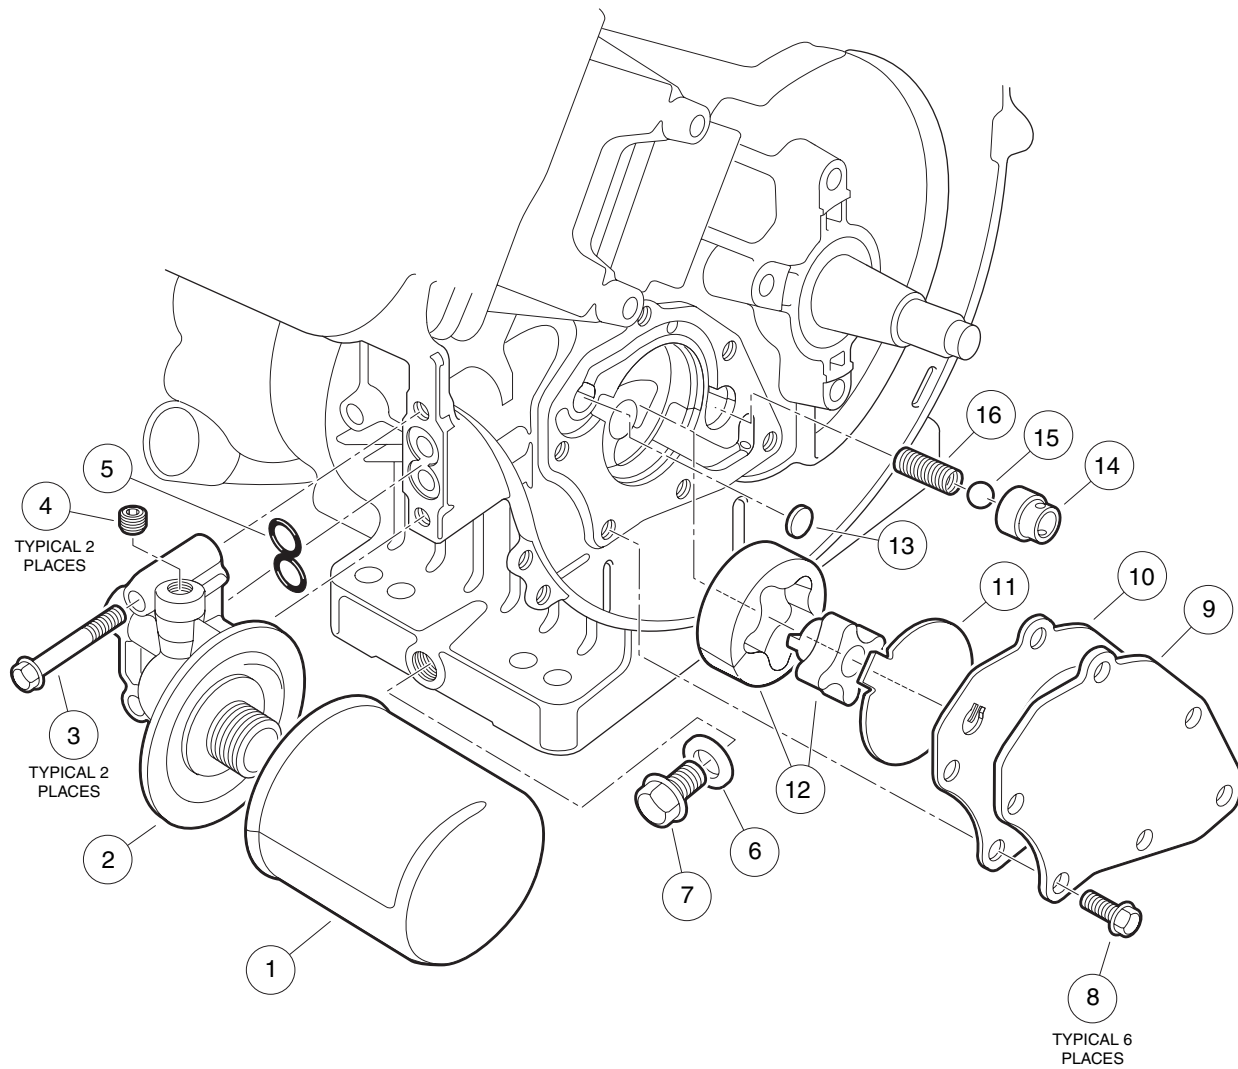

FE400 ENGINE (KEY-START) – OIL CIRCULATION

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>1016467</u>	Oil Filter	1	
2	<u>1016502</u>	Bracket, Oil Filter	1	
3	<u>1016457</u>	Bolt, Flanged Hex-Head, M6 x 1 x 40 mm	2	
4	<u>1017507</u>	Plug	2	
5	<u>1016570</u>	O-Ring, Oil Filter Mount	1	
6	<u>1016432</u>	Gasket, Drain Plug	1	
7	<u>1016576</u>	Plug, Drain	1	
8	<u>1017456</u>	Screw, Flanged Hex-Head, M6 x 1 x 12 mm	6	
9	<u>1017460</u>	Cover, Pump	1	
10	<u>1017442</u>	Gasket, Oil Pump	1	
11	<u>1016473</u>	Plate, Oil Pump	1	
12	<u>101648203</u>	Pump, Oil and Rotor	1	
13	<u>1017458</u>	Filter	1	
14	<u>1016429</u>	Seat, Valve	1	
15	<u>1016537</u>	Ball, Steel Pressure Relief	1	
16	<u>1016581</u>	Spring	1	

FE400 ENGINE

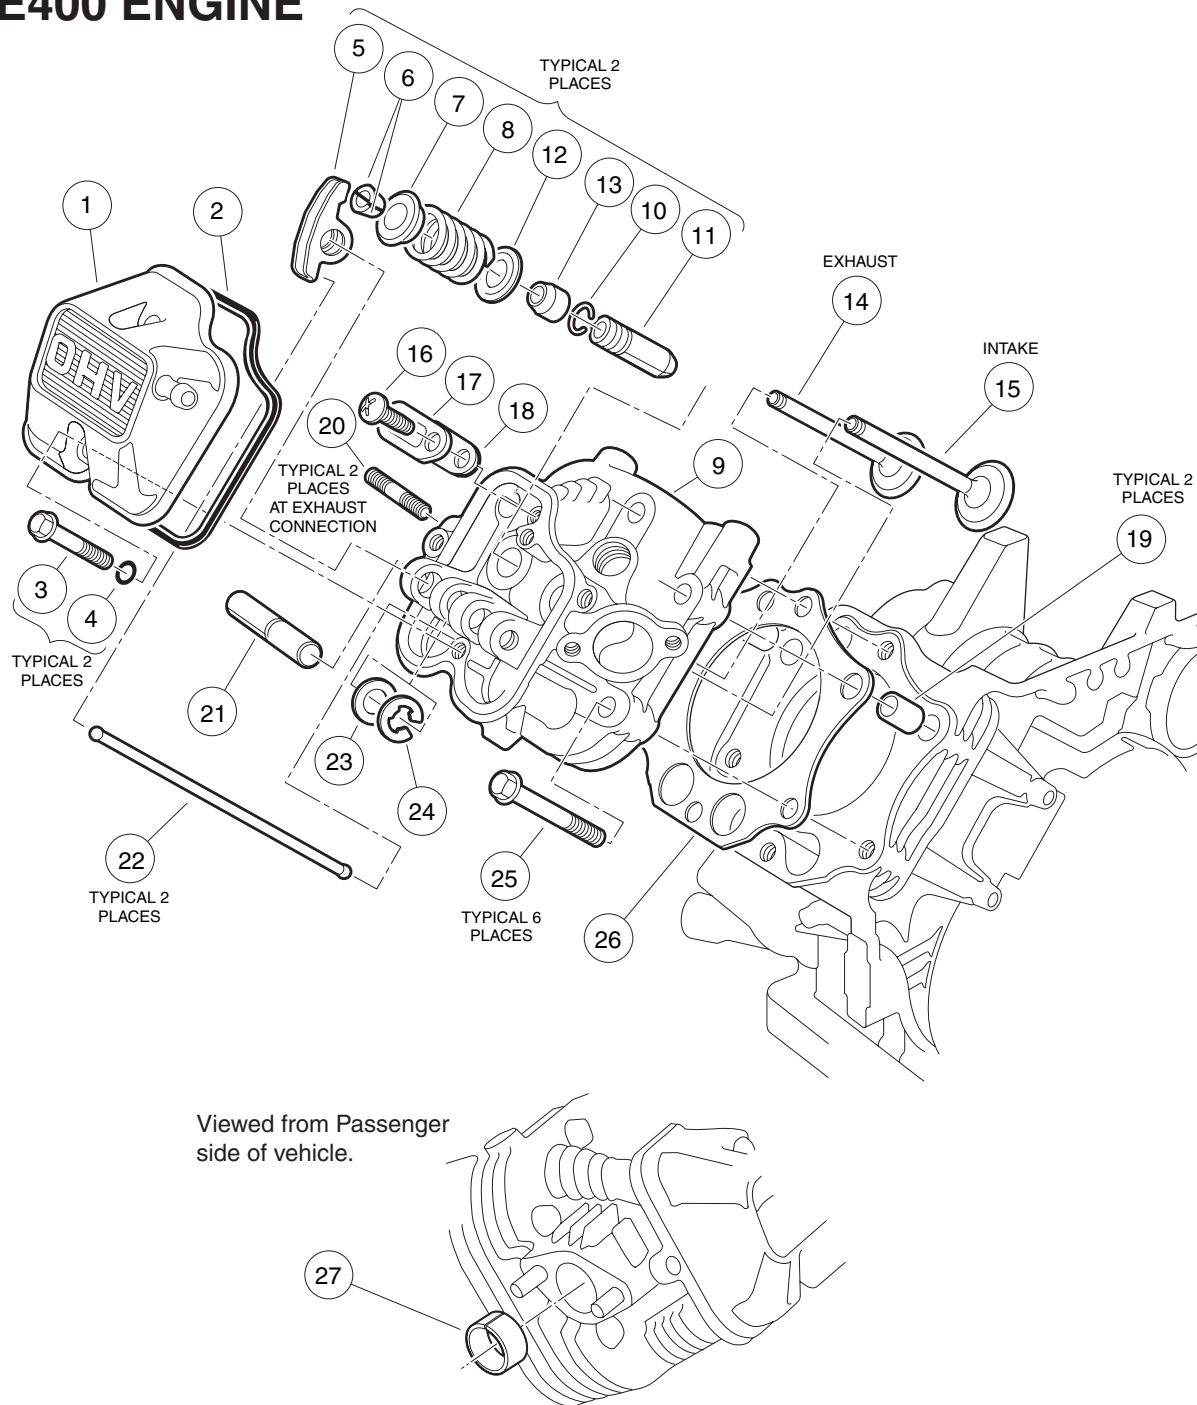


FE400 ENGINE (KEY-START) – CYLINDER HEAD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016442</u>	Case, Rocker	1
2	<u>1016436</u>	Gasket, Rocker Case	1
3	<u>1016583</u>	Bolt, Flanged, M6 x 1 x 35 mm	2
4	<u>1016569</u>	O-Ring	2
5	<u>1017446</u>	Arm, Rocker	2
6	<u>1016450</u>	Collet	4
7	<u>1016449</u>	Retainer, Valve Spring	2
8	<u>1017473</u>	Spring, Engine Valve	2
9	<u>102270001</u>	Assembly, Cylinder Head, FE400 (includes items 10 and 11)	1
10	<u>1016560</u>	Ring, Snap	2
11	<u>1016519</u>	Guide, Valve	2
12	<u>1016479</u>	Seat, Spring	2
13	<u>1016566</u>	Seal, Valve	2
14	<u>1017445</u>	Valve, Exhaust	1
15	<u>1017444</u>	Valve, Intake	1
16	<u>1016544</u>	Screw, Cross Pan-Head Self-Tapping, M5 x 0.8 x 12 mm	1
17	<u>1016474</u>	Plate	1
18	<u>1016483</u>	Valve	1
19	<u>1016563</u>	Pin, Hollow	2
20	<u>1016489</u>	Bolt, Stud, M8 x 1.25 x 29 mm	2
21	<u>1016452</u>	Shaft, Rocker	1
22	<u>1017454</u>	Rod, Push	2
23	<u>1016549</u>	Washer, Flat, M12	1
24	<u>1016517</u>	Circlip, Type-E	1
25	<u>1016458</u>	Bolt, Flanged, M8 x 1.25 x 45 mm	6
26	<u>102269901</u>	Gasket, Head	1
27	<u>102271101</u>	Sleeve	1
28	<u>102304901</u>	Kit, Gasket, FE400 (contains one each of all internal gaskets for FE400 engine) (not shown)	1

8
G

FE400 ENGINE

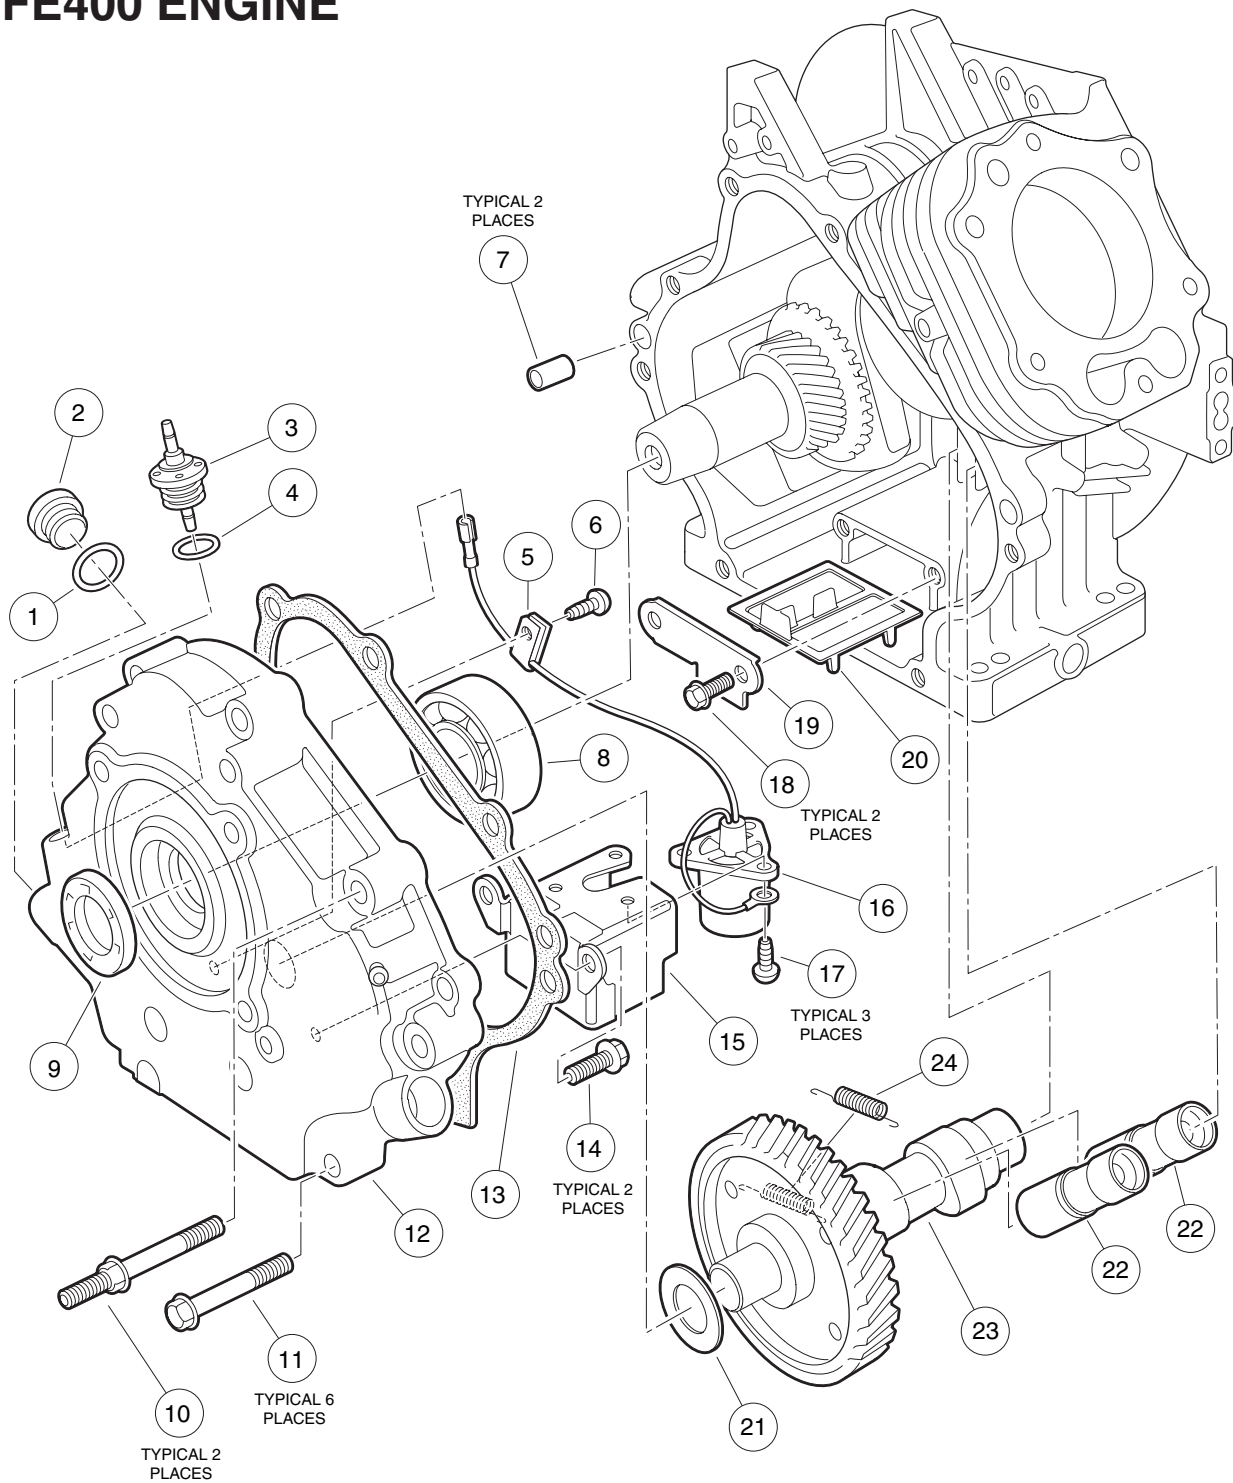


FE400 ENGINE (KEY-START) – CRANKCASE, CAMSHAFT AND OIL SENSOR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016538</u>	O-Ring	1
2	<u>1017508</u>	Plug	1
3	<u>1016535</u>	Connector, Oil Sending Unit	1
4	<u>1016538</u>	O-Ring	1
5	<u>1016506</u>	Clamp	1
6	<u>1016544</u>	Screw, Cross Pan-Head Self-Tapping, M5 x 0.8 x 12 mm	1
7	<u>1016564</u>	Pin, Hollow	2
8	<u>1017487</u>	Bearing, Crankshaft	1
9	<u>102272101</u>	Seal, Crankshaft	1
10	<u>1016584</u>	Bolt, 2-Ended Flanged, M8 x 1.25 x 69 mm	2
11	<u>1017514</u>	Bolt, Flanged, M8 x 1.25 x 45 mm	6
12	<u>102271401</u>	Cover, Crankcase	1
13	<u>1017443</u>	Gasket, Crankcase Cover	1
14	<u>102272301</u>	Bolt, Flanged	2
15	<u>102271201</u>	Bracket, Oil Level Switch	1
16	<u>1016494</u>	Sensor, Oil Level	1
17	<u>1016496</u>	Screw, Cross Pan-Head, M4 x 0.7 x 8 mm	3
18	<u>1016454</u>	Bolt, Flanged, M5 x 0.8 x 8 mm	2
19	<u>1016472</u>	Plate, Oil Filter Screen	1
20	<u>1016521</u>	Screen, Oil Filter	1
21	<u>101751801</u>	Shim, 0.3 mm Thick	A/R
21	<u>101751802</u>	Shim, 0.4 mm Thick	A/R
21	<u>101751803</u>	Shim, 0.5 mm Thick	A/R
22	<u>1017447</u>	Lifter, Hydraulic	2
23	<u>102271601</u>	Camshaft, FE350/FE400 (with automatic compression release) (includes item 24)	1
24	<u>1017511</u>	Spring	1
25	<u>102304901</u>	Kit, Gasket, FE400 (contains one each of all internal gaskets for FE400 engine) (not shown)	1

8
G


FE400 ENGINE

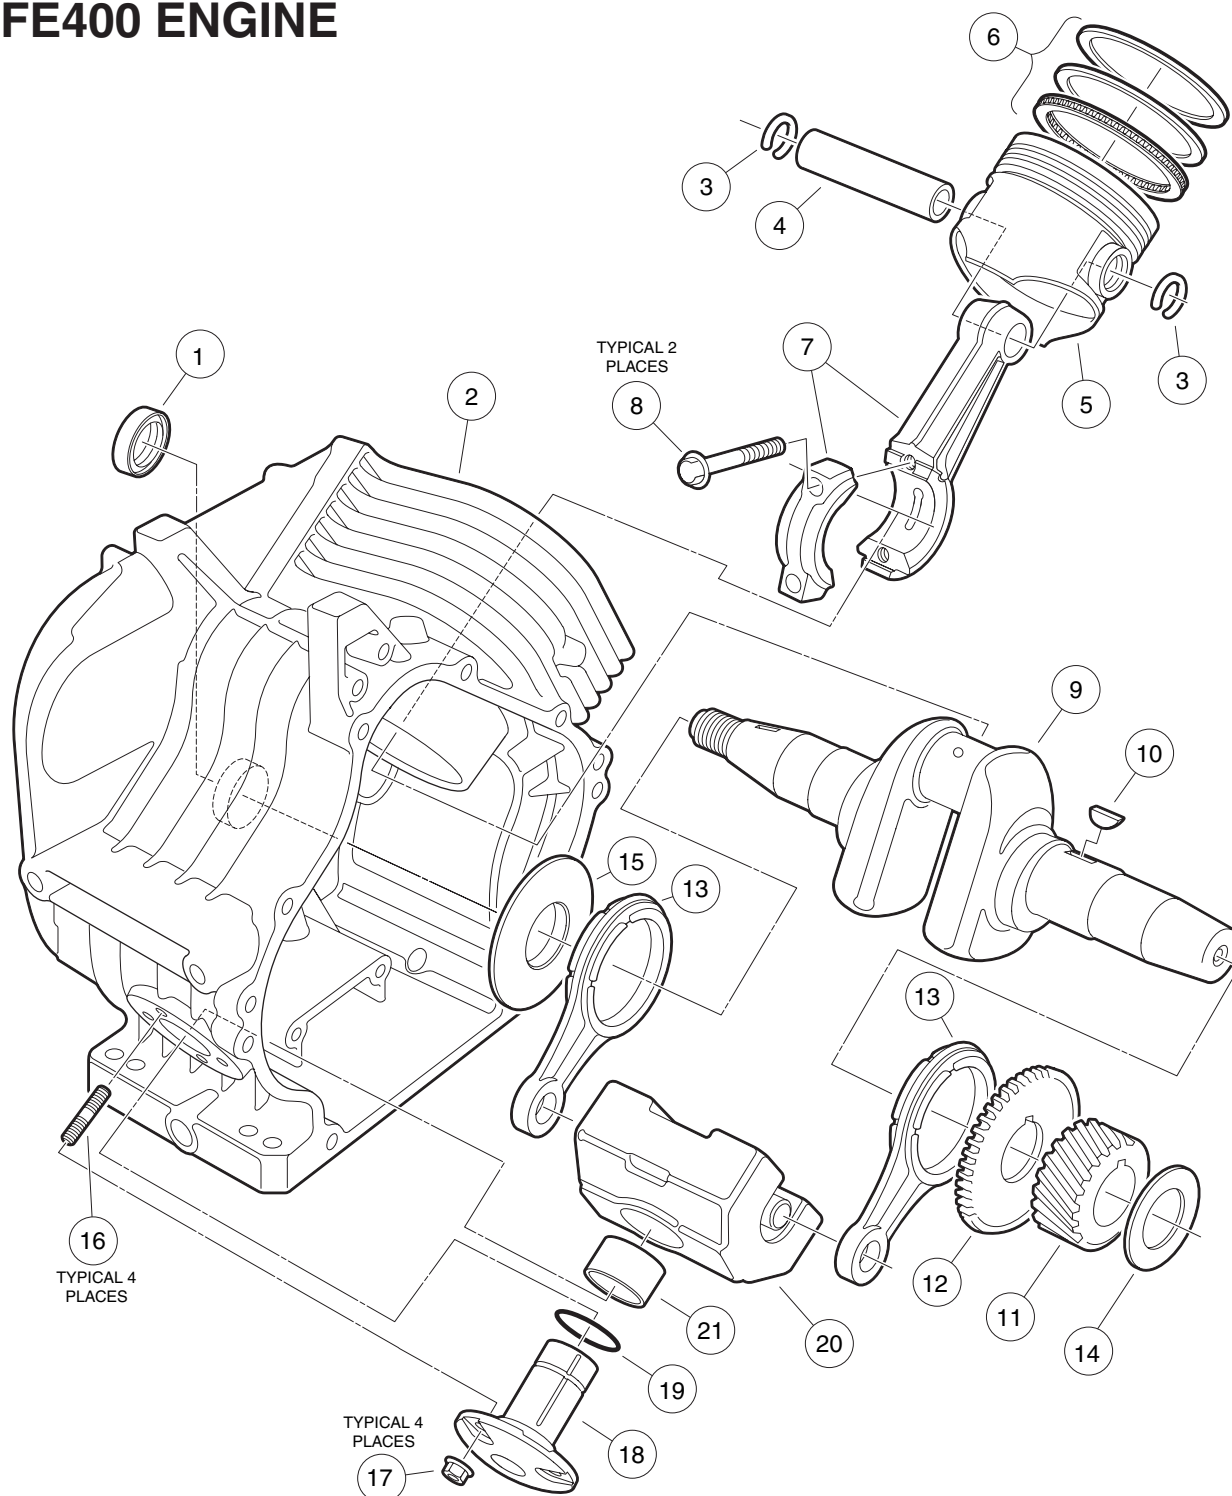

FE400 ENGINE (KEY-START) – CRANKCASE AND CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1017503</u>	Seal, Oil	1
2	<u>102271501</u>	Crankcase, FE400 (clockwise rotation)	1
3	<u>1017502</u>	Ring, Snap	2
4	<u>1017450</u>	Pin, Piston	1
5	<u>102270201</u>	Piston, Standard.....	1
6	<u>102270301</u>	Ring Set, Piston, Standard	1
7	<u>101745701</u>	Assembly, Connecting Rod, Standard (includes 2 each of item 8)	1
7	<u>101745702</u>	Assembly, Connecting Rod, .50 mm Undersized (includes 2 each of item 8)	1
8	<u>102272201</u>	Bolt, Hex-Head, M8 x 1.25 x 42 mm	2
9	<u>102270401</u>	Crankshaft, FE400 (left-hand threads) (includes items 10 - 12 and one each of item 13)	1
10	<u>1016562</u>	Key	1
11	<u>102271901</u>	Gear, Helical (22T)	1
12	<u>102271801</u>	Gear, Spur	1
13	<u>1017471</u>	Rod, Connecting	2
14	<u>101773301</u>	Shim, Crankshaft, 1.18 mm Thick	A/R
14	<u>101773302</u>	Shim, Crankshaft, 1.25 mm Thick	A/R
14	<u>101773303</u>	Shim, Crankshaft, 1.32 mm Thick	A/R
14	<u>101773304</u>	Shim, Crankshaft, 1.39 mm Thick	A/R
14	<u>101773305</u>	Shim, Crankshaft, 1.46 mm Thick	A/R
14	<u>101773306</u>	Shim, Crankshaft, 1.53 mm Thick	A/R
14	<u>101773307</u>	Shim, Crankshaft, 1.60 mm Thick	A/R
14	<u>101773308</u>	Shim, Crankshaft, 1.67 mm Thick	A/R
14	<u>101773309</u>	Shim, Crankshaft, 1.74 mm Thick	A/R
14	<u>101773310</u>	Shim, Crankshaft, 1.11 mm Thick	A/R
14	<u>101773311</u>	Shim, Crankshaft, 1.81 mm Thick	A/R
15	<u>1017501</u>	Spacer	1
16	<u>1016541</u>	Bolt, Stud, M6 x 1 x 22 mm	4
17	<u>1016547</u>	Nut, Flanged, M6 x 1	4
18	<u>1016470</u>	Shaft, Guide Counterbalance	1
19	<u>1016571</u>	O-Ring	1
20	<u>102270501</u>	Weight, Counterbalance (includes item 21)	1
21	<u>1017510</u>	Bearing	1

8
G

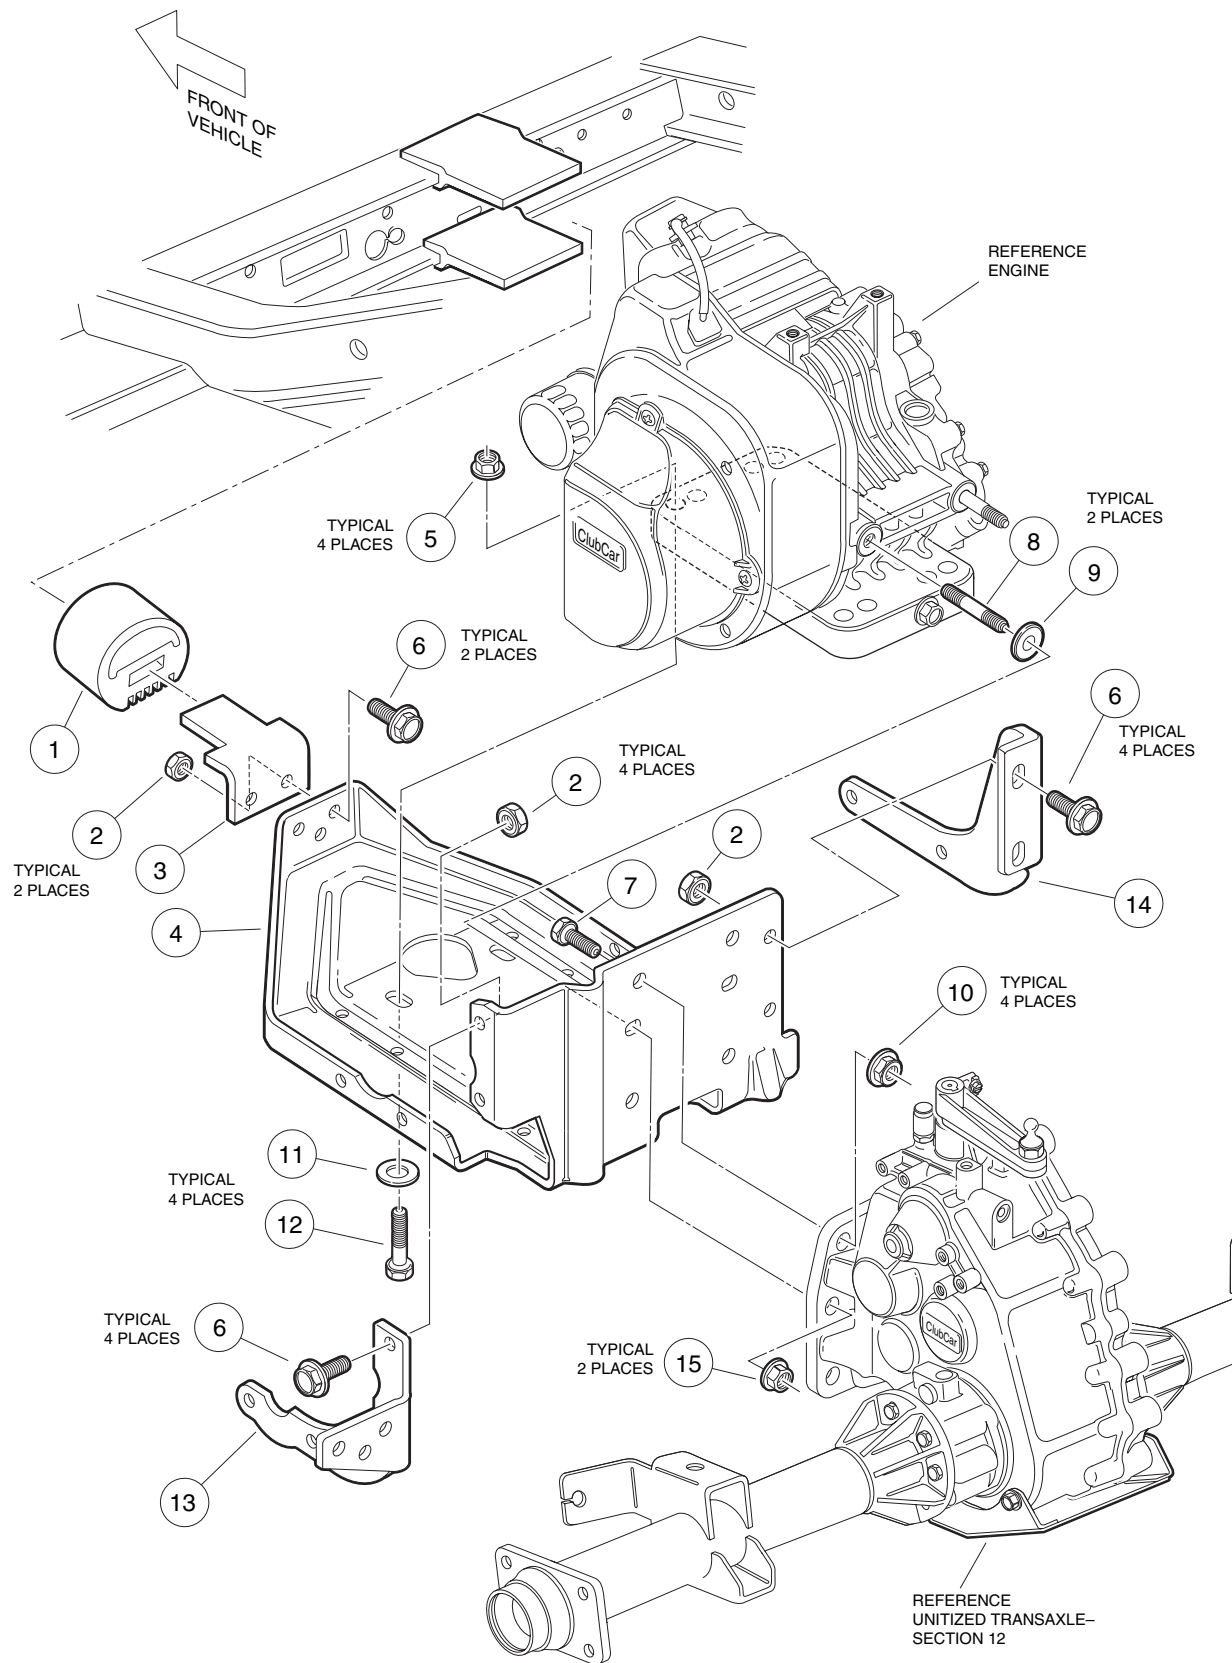

ENGINE MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012164	Snubber	1
2	1013924	Nut, Hex Lock, UNF, 5/16-24	10
3	101834601	Bracket, Snubber	1
4	101827101	Plate, Mounting	1
5	101963401	Nut, Flanged, 5/16-18	6
6	101884801	Screw, Hex Washer-Head, 5/16-24 x 7/8	10
7	101833301	Screw, Hex-Head Cap, M10 x 1.25 x 30 mm	4
8	101833101	Stud, M8 x 1.25 x 50 mm	2
9	101832101	Washer, Flat, 5/16	2
10	101832901	Nut, Flanged, M10 x 1.25	4
11	1012571	Washer, Heavy Flat, 5/16	4
12	1010577	Screw, Hex-Head Cap, 5/16-18x1.50	4
13	101832701	Stiffener, Flywheel Side	1
14	101832601	Stiffener, PTO Side	1
15	101833001	Nut, flange, M8 x 1.25	2

8

G


8

G

FUEL, INTAKE, AND GOVERNOR SYSTEMS

9


G

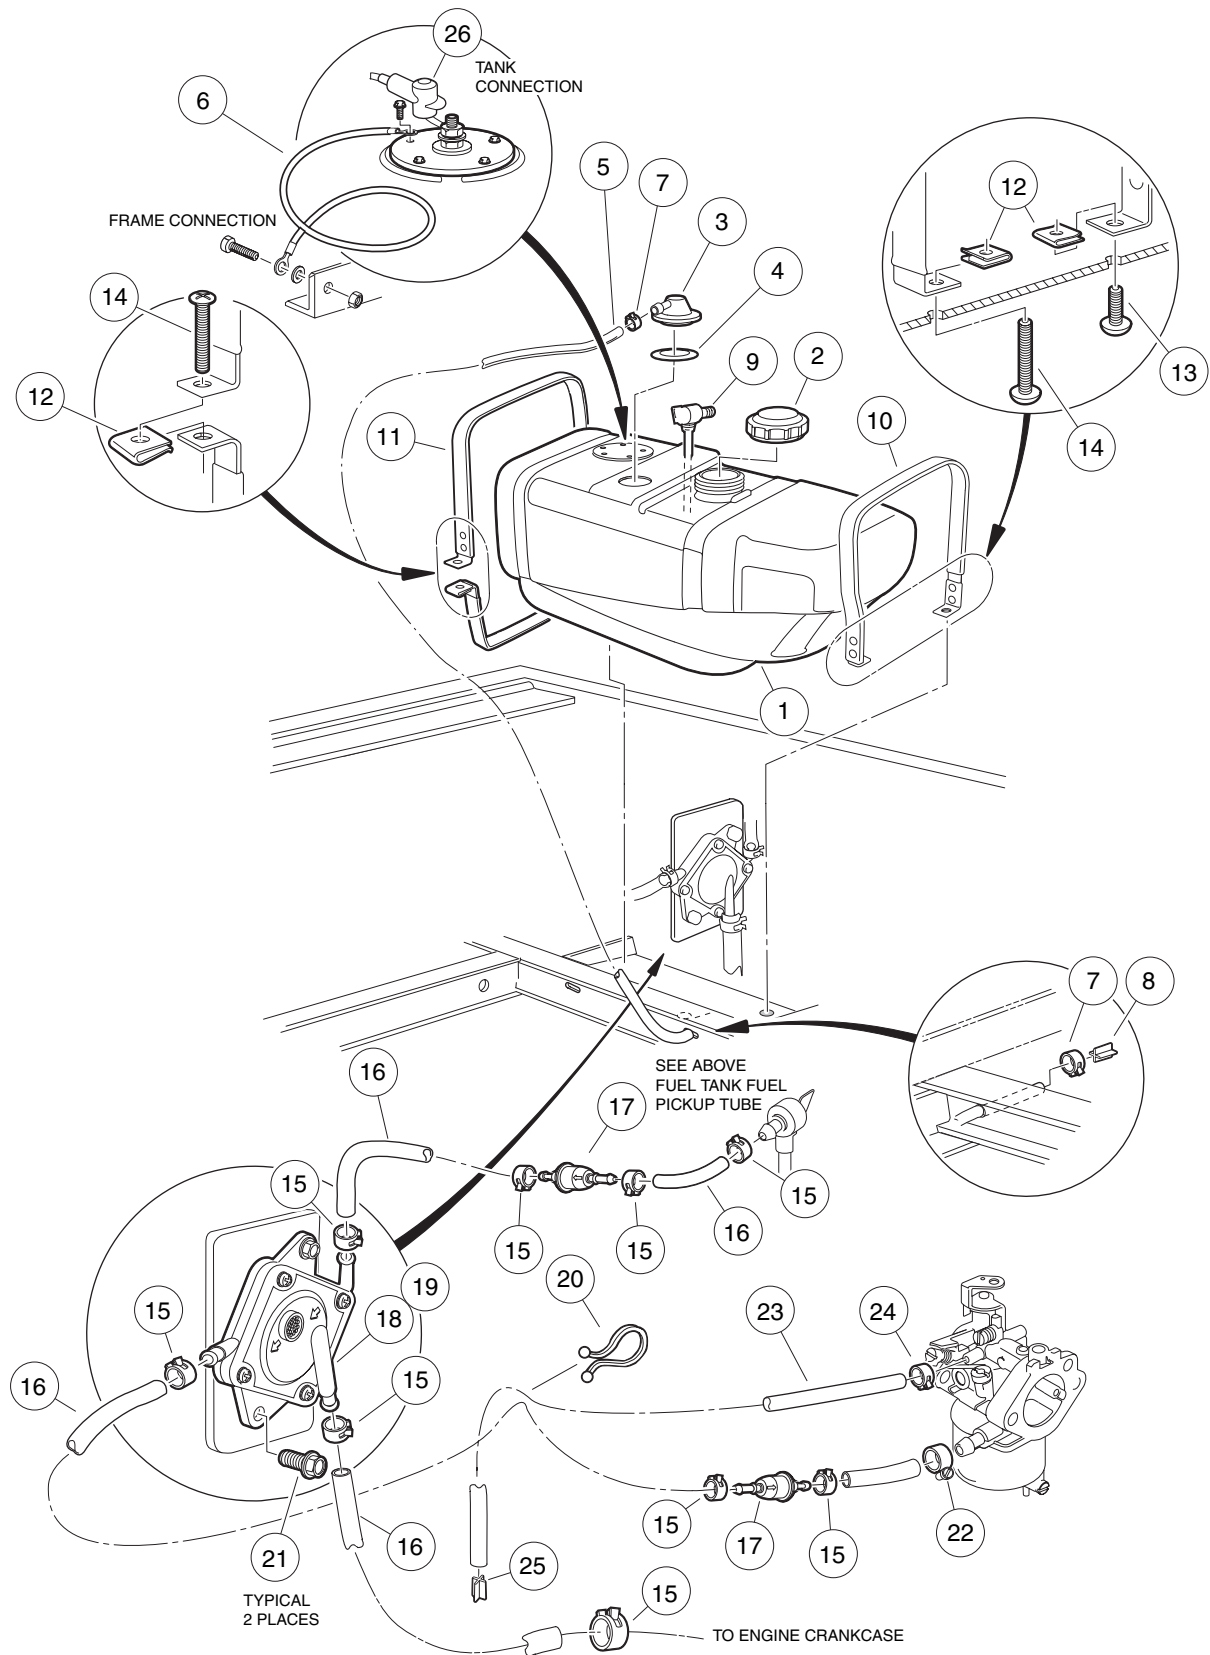

FUEL SYSTEM – TURF 272 AND CARRYALL 272 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016004	Kit, Fuel Tank, with Sending Unit (includes items 2 - 9)	1
2	<u>1015188</u>	Cap, Fuel Tank, Nonvented	1
3	<u>1015143</u>	Vent, Fuel Tank	1
4	<u>1015139</u>	Grommet, Insulation	1
5	<u>1015137</u>	Line, Bulk Vent (available by the foot)	A/R
6	N/A	Wire Assembly, #16 Black	1
7	<u>1013746</u>	Clamp, Hose – Gray	2
8	<u>101824401</u>	Barb, Vent	1
9	101896901	Valve, Fuel Pickup Tube with Shut-Off	1
10	<u>1014928</u>	Fuel Strap, Rear	1
11	<u>101955301</u>	Fuel Strap, Front	1
12	<u>1014116</u>	Nut, U-Type Speed, 1/4-20	3
13	<u>8248</u>	Screw, Phillips Truss-Head, 1/4-20 x 3/4	1
14	<u>1011988</u>	Screw, Phillips Truss-Head, 1/4-20 x 2	2
15	<u>1012649</u>	Clamp, Hose – Red	9
16	<u>1013692</u>	Line, Bulk Fuel (available by the foot*)	A/R
17	<u>102003201</u>	Filter, Fuel	2
18	<u>1014523</u>	Pump, Fuel Impulse	1
19	<u>1014524</u>	Kit, Rebuild, Fuel Impulse Pump	A/R
20	<u>101987701</u>	Clamp, Plastic	1
21	<u>1012285</u>	Screw, Thread-Rolling, 1/4-20 x 5/8	2
22	<u>1013687</u>	Clamp, Hose (screw type)	1
23	<u>1015137</u>	Line, Bulk Vent (available by the foot)	A/R
24	<u>1013746</u>	Clamp, Hose – Gray	1
25	<u>101824401</u>	Barb, Vent	1
26	N/A	Boot, Rubber	1
* The total fuel line length for the Turf/Carryall 272 is 34-1/2 inches (87.6 cm).			

9
G

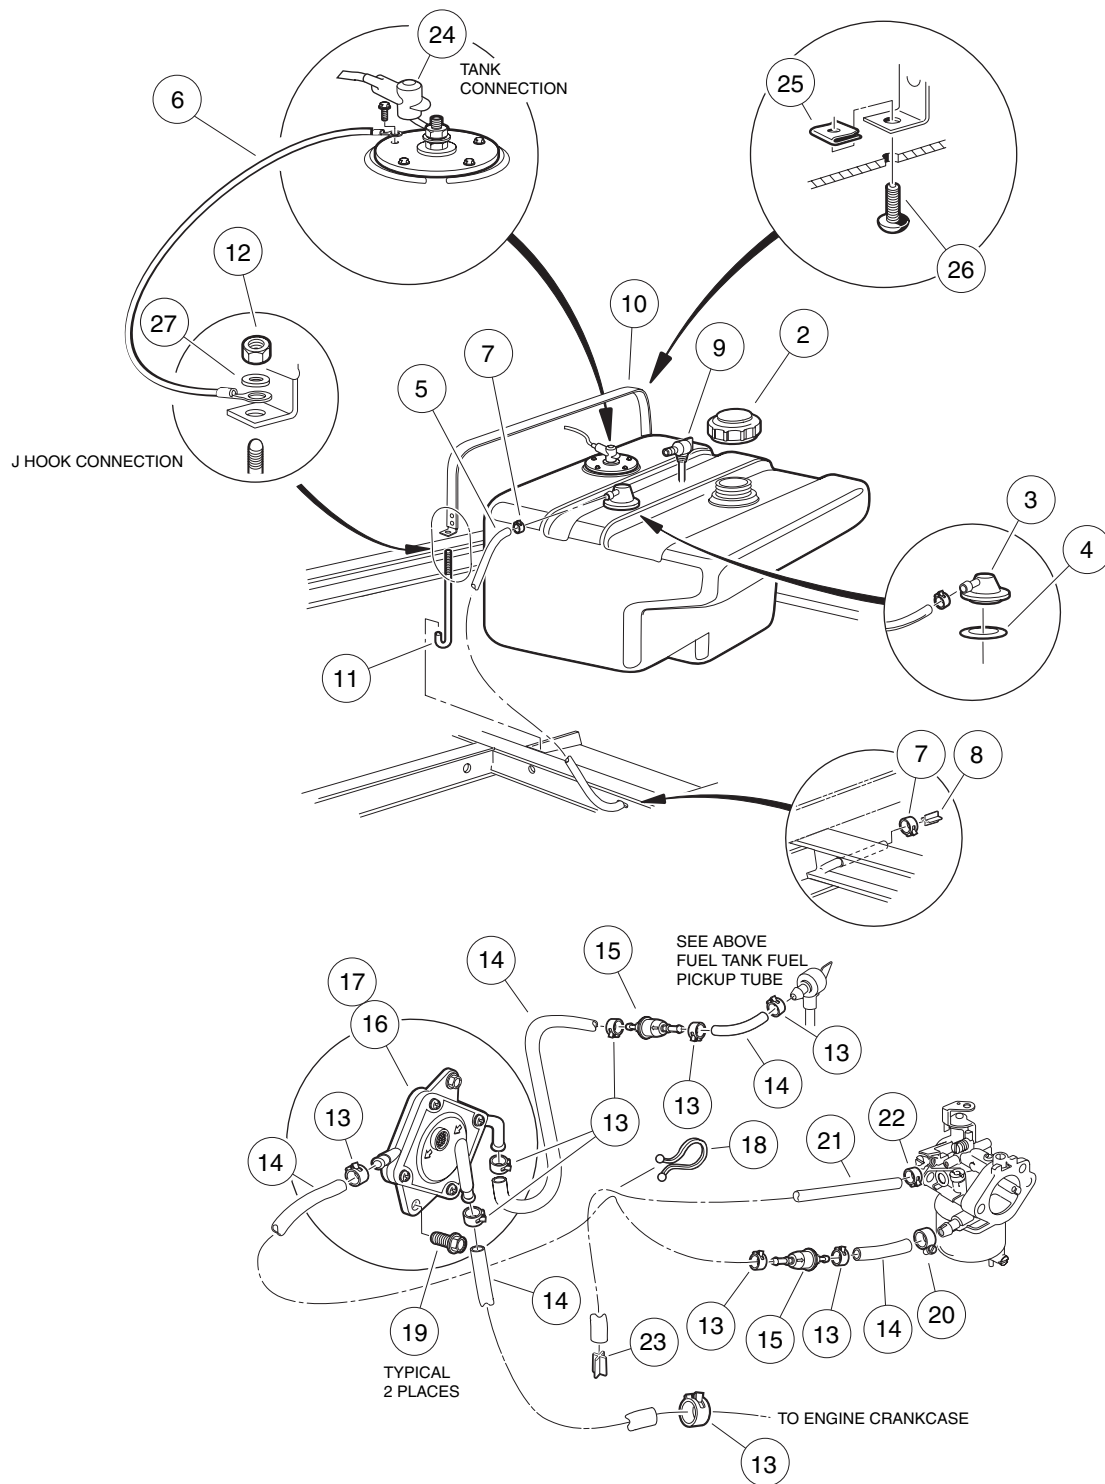


FUEL SYSTEM – CARRYALL 472 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102333601</u>	Kit, Fuel Tank, with Sending Unit (includes items 2 - 9)	1
2	<u>1015188</u>	Cap, Fuel Tank, Nonvented	1
3	<u>1015143</u>	Vent, Fuel Tank	1
4	<u>1015139</u>	Grommet, Insulation	1
5	<u>1015137</u>	Line, Bulk Vent (available by the foot)	A/R
6	N/A	Wire Assembly, #16 Black	1
7	<u>1013746</u>	Clamp, Hose – Gray	2
8	<u>101824401</u>	Barb, Vent	1
9	<u>101896901</u>	Valve, Fuel Pickup Tube with Shut-Off	1
10	<u>102333401</u>	Fuel Strap	1
11	<u>102333901</u>	J-Bolt	1
12	<u>8233</u>	Nut, Hex, 1/4-20	1
13	<u>1012649</u>	Clamp, Hose – Red	9
14	<u>1013692</u>	Line, Bulk Fuel (available by the foot*)	A/R
15	<u>102003201</u>	Filter, Fuel	2
16	<u>1013630</u>	Pump, Fuel Impulse	1
17	<u>1014524</u>	Kit, Rebuild, Fuel Impulse Pump	A/R
18	<u>101987701</u>	Clamp, Plastic	1
19	<u>1012285</u>	Screw, Thread-Rolling, 1/4-20 x 5/8	2
20	<u>1013687</u>	Clamp, Hose (screw type)	1
21	<u>1015137</u>	Line, Bulk Vent (available by the foot)	A/R
22	<u>1013746</u>	Clamp, Hose – Gray	1
23	<u>101824401</u>	Barb, Vent	1
24	N/A	Boot, Rubber	1
25	<u>1014116</u>	Nut, U-Type Speed, 1/4-20	3
26	<u>8248</u>	Screw, Phillips Truss-Head, 1/4-20 x 3/4	1
27	<u>332</u>	Washer, Flat, 5/16	1
* The total fuel line length for the Carryall 472 is 75.65 inches (192.2 cm).			

9

G

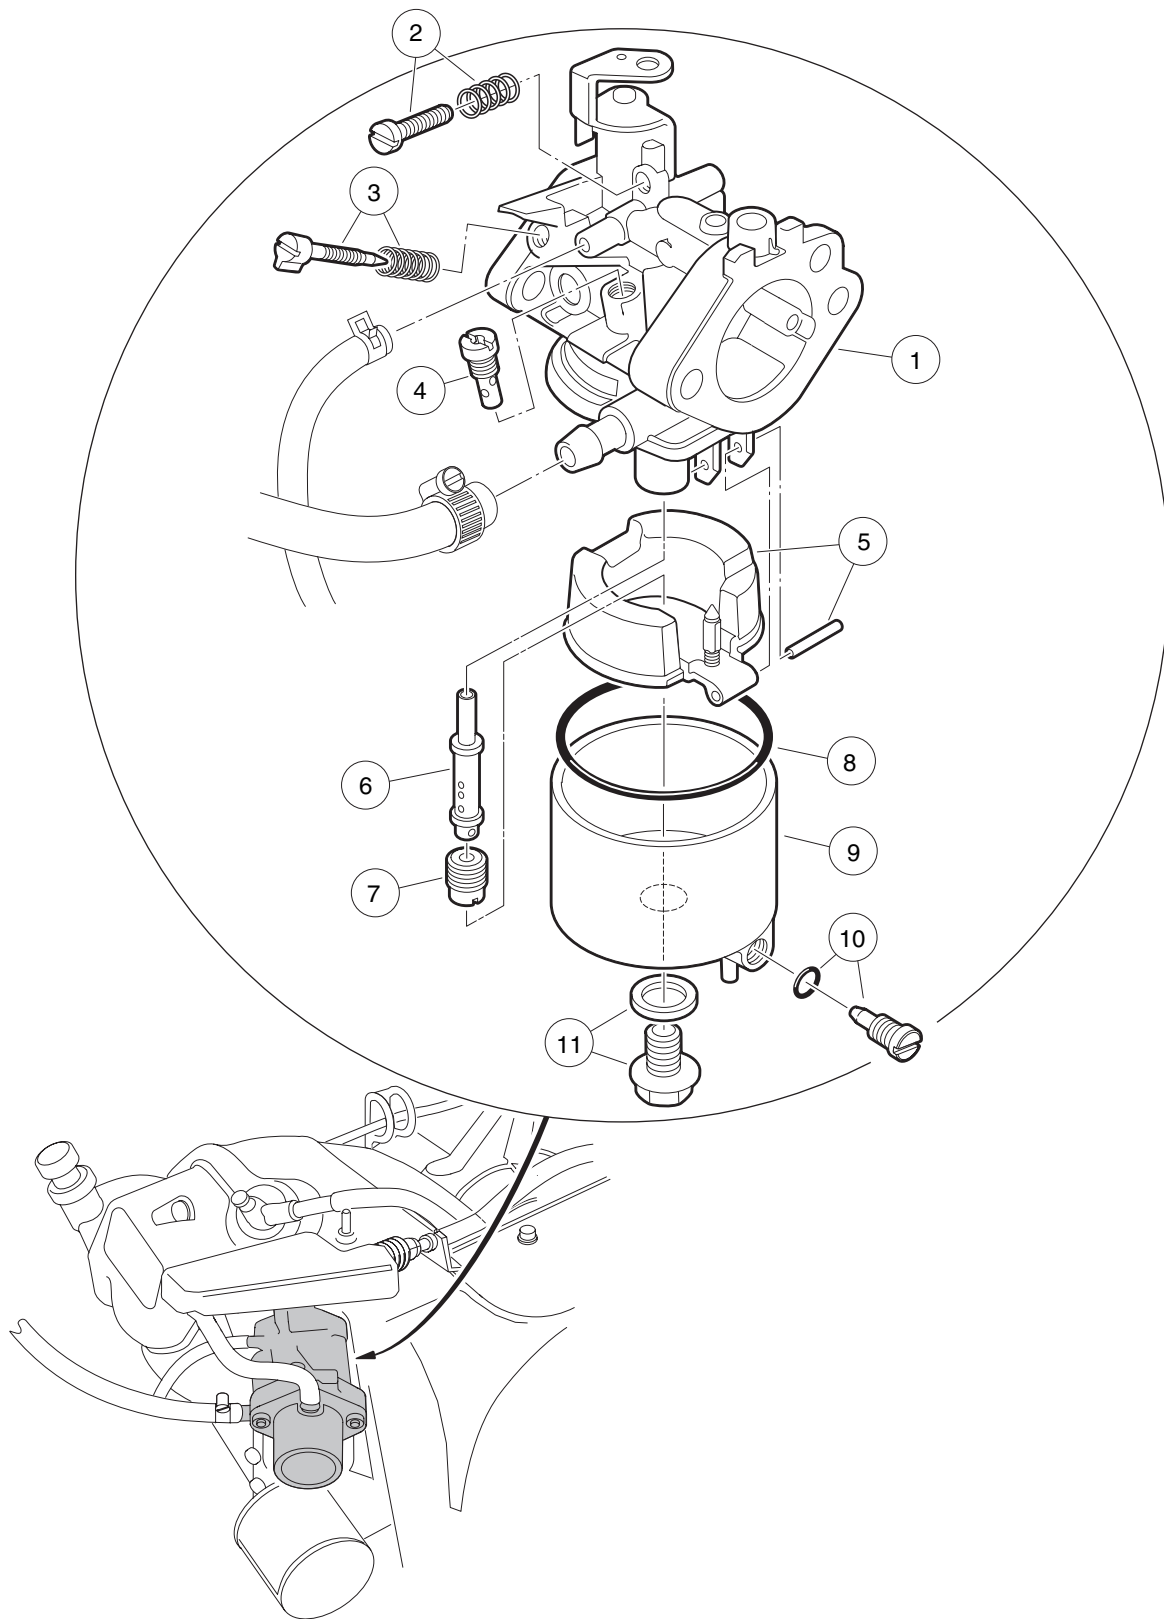


CARBURETOR ASSEMBLY, FE350 ENGINE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101905901</u>	Assembly, Carburetor (FE350 engine) (includes items 2 - 11)	1
2	<u>1016501</u>	Assembly, Idle Screw	1
3	N/A	Assembly, Pilot Air Screw	1
4	<u>101973101</u>	Jet, Pilot, #40	1
5	1016486	Assembly, Float	1
6	<u>101973301</u>	Nozzle, Main (FE350 engine)	1
		Standard Jetting:	
7	<u>101642585</u>	Jet, Main, 0 - 3,000 Feet (0-914.4 m)	1
7	<u>101642582</u>	Jet, Main, 3,000 - 5,000 Feet (914.4-1524 m)	A/R
7	<u>101642580</u>	Jet, Main, 5,000 - 8,000 Feet (1524-2438.4 m)	A/R
7	<u>101642578</u>	Jet, Main, 8,000 - 10,000 Feet (2438.4-3048 m)	A/R
7	<u>101642575</u>	Jet, Main, 10,000 Feet and Above (3048 m and above)	A/R
8	<u>1016437</u>	Gasket, Float Chamber	1
9	<u>1017461</u>	Assembly, Float Chamber (includes item 10)	1
10	<u>1016499</u>	Assembly, Screw	1
11	1016585	Assembly, Bolt	1

9

G

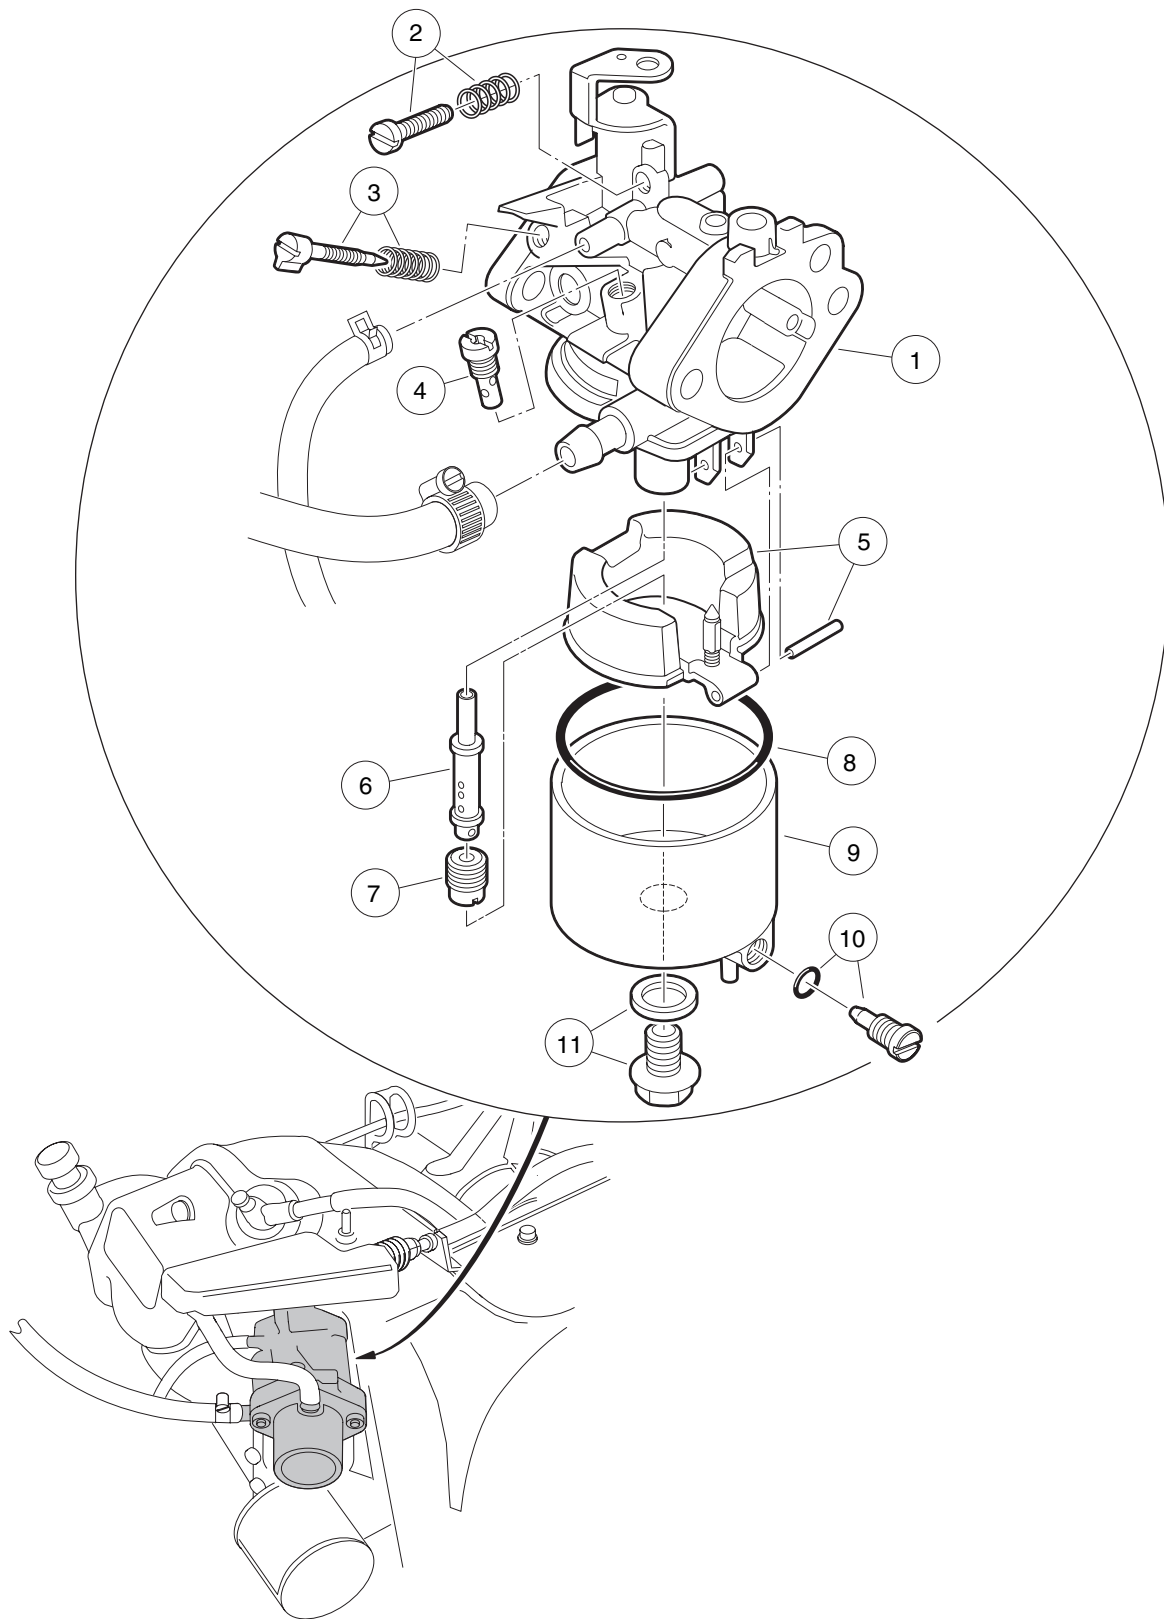


CARBURETOR ASSEMBLY, FE400 ENGINE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102270701</u>	Assembly, Carburetor (FE400 engine) (includes items 2 - 11)	1
2	<u>1016501</u>	Assembly, Idle Screw	1
3	N/A	Assembly, Pilot Air Screw	1
4	<u>1016574</u>	Jet, Pilot, #45	1
5	<u>1016486</u>	Assembly, Float	1
6	<u>102271701</u>	Nozzle, Main (FE400 engine)	1
		Standard Jetting:	
7	<u>101642588</u>	Jet, Main, 0 - 3,280 Feet (0-1000 m)	1
7	<u>101642585</u>	Jet, Main, 3,280 - 6,562 Feet (1000-2000 m)	A/R
7	<u>101642582</u>	Jet, Main, 6,562 Feet and Above (2000 m and above)	A/R
8	<u>1016437</u>	Gasket, Float Chamber	1
9	<u>1017461</u>	Assembly, Float Chamber (includes item 10)	1
10	<u>1016499</u>	Assembly, Screw	1
11	<u>1016585</u>	Assembly, Bolt	1

9

G

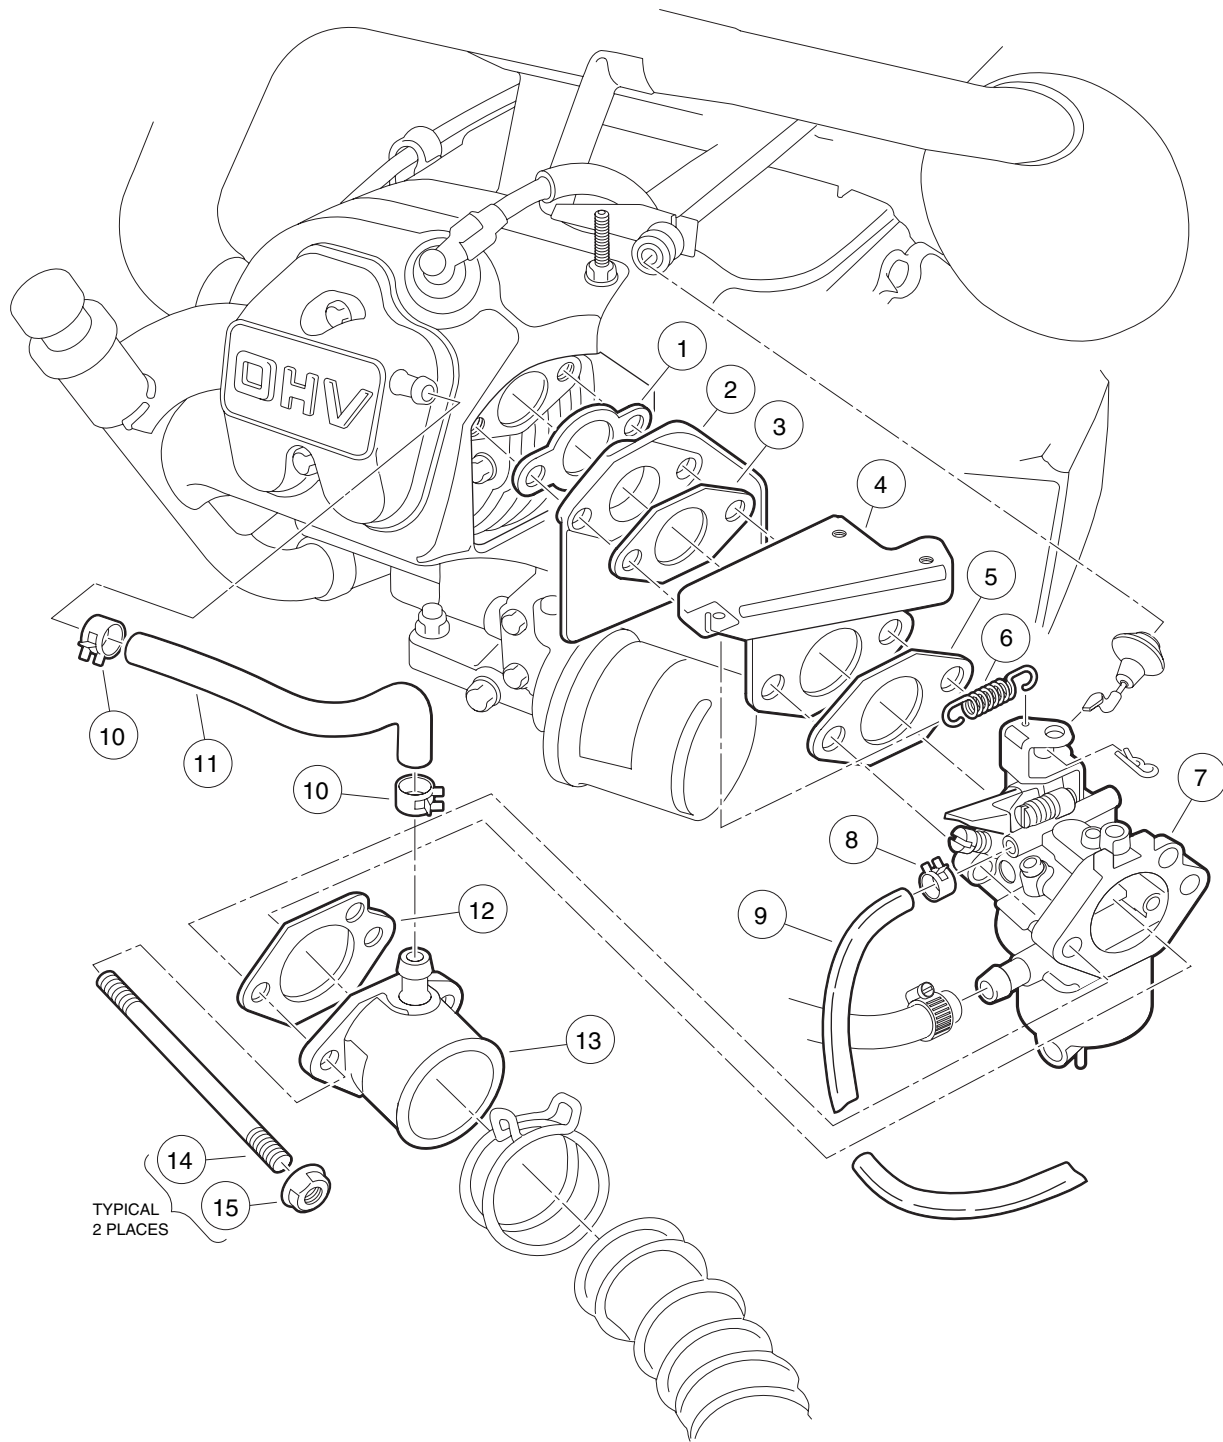


CARBURETOR INSTALLATION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016440</u>	Gasket, Insulator	1
2	<u>101648102</u>	Insulator, Carburetor	1
3	<u>101973401</u>	Gasket, Carburetor Insulator to Throttle Bracket	1
4	<u>1016444</u>	Bracket, Throttle	1
5	<u>1016441</u>	Gasket, Throttle Bracket to Carburetor	1
6	<u>1016582</u>	Spring, Throttle Return	1
7	<u>101905901</u>	Assembly, Carburetor (FE350 engine)	1
7	<u>102270701</u>	Assembly, Carburetor (FE400 engine)	1
8	<u>1013746</u>	Clamp, Hose – Gray	1
9	<u>1015137</u>	Line, Bulk Vent	A/R
10	<u>1017466</u>	Clamp, Hose – Bronze	2
11	<u>1016572</u>	Tube, Crankcase Vent	1
12	<u>1016438</u>	Gasket, Carburetor to Intake Manifold	1
13	<u>1016480</u>	Pipe, Intake	1
14	<u>101649002</u>	Screw, 2-Ended Stud, M6 x 1 x 90 mm	2
15	<u>1016547</u>	Nut, Flanged, M6 x 1	2

9

G

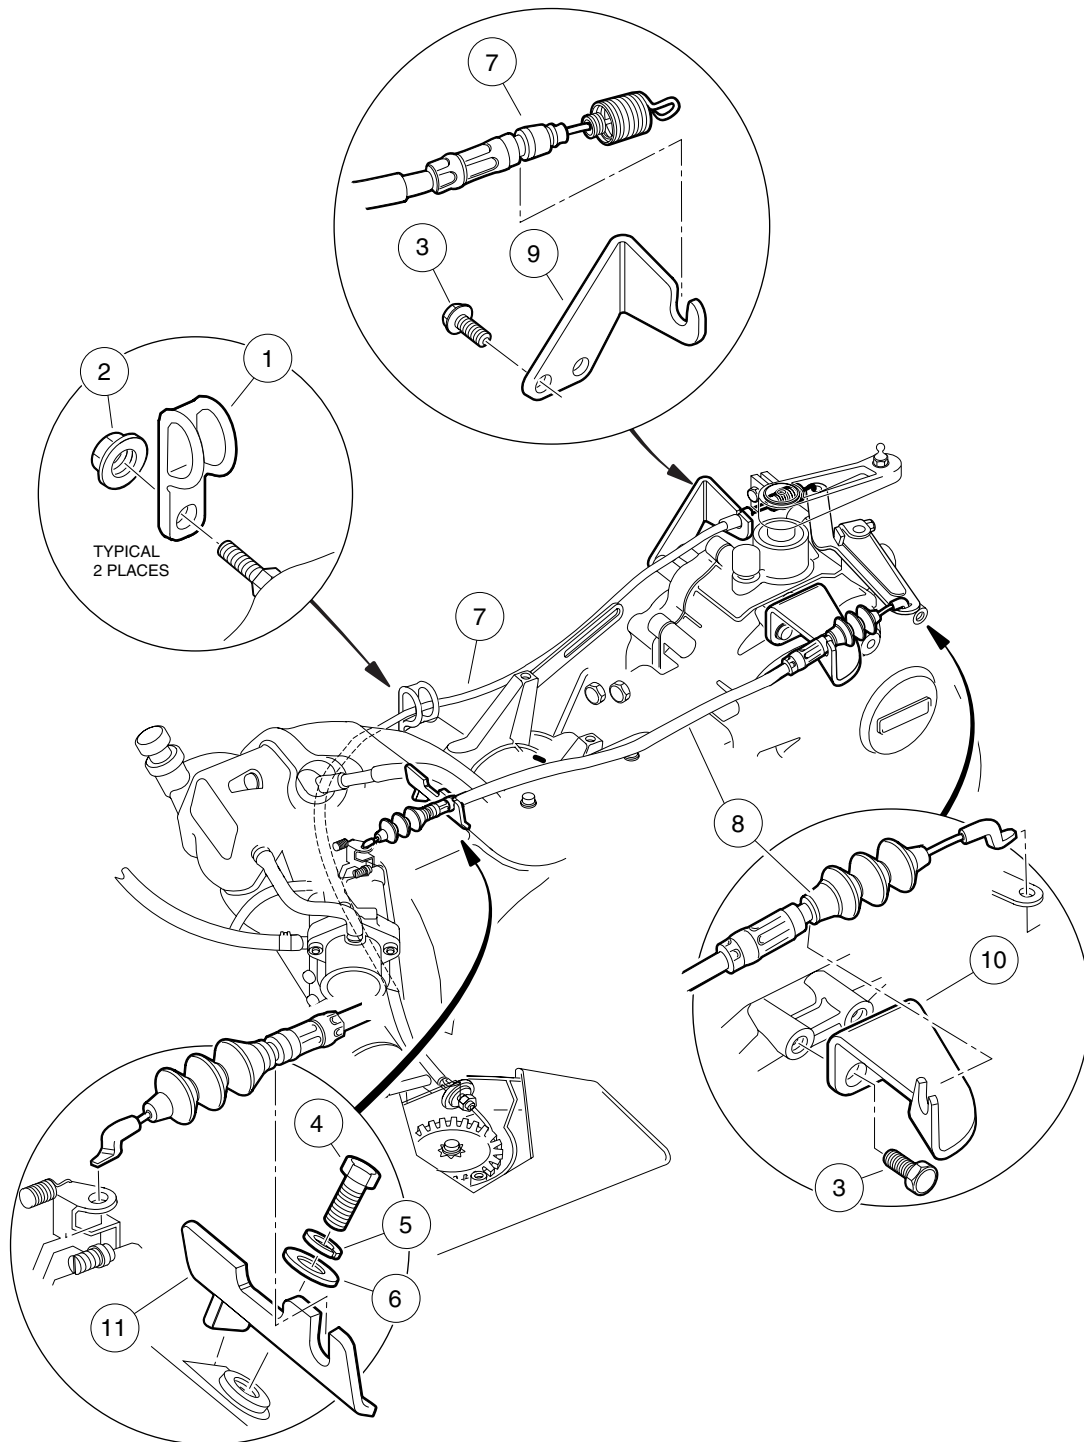


GOVERNOR AND ACCELERATOR CABLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013700</u>	Clamp, Cable Retaining	2
2	<u>1016546</u>	Nut, Flanged Hex, M8 x 1.25	2
3	<u>1012285</u>	Screw, Thread Rolling, 1/4-20 x 5/8	4
4	101903501	Screw, Hex-Head Cap, M8 x 1.25 x 24 mm	1
5	<u>7174</u>	Washer, Lock, 5/16	1
6	<u>1011697</u>	Washer, Flat, 5/16	1
7	<u>102336101</u>	Cable, Accelerator, Snap-in	1
8	<u>102336001</u>	Cable, Governor, Snap-in	1
9	<u>101832302</u>	Bracket, Accelerator Support	1
10	<u>101832202</u>	Bracket, Support	1
11	<u>101584502</u>	Bracket, Governor Cable Engine	1
		* Brackets and cables must be of the same style.	

9

G

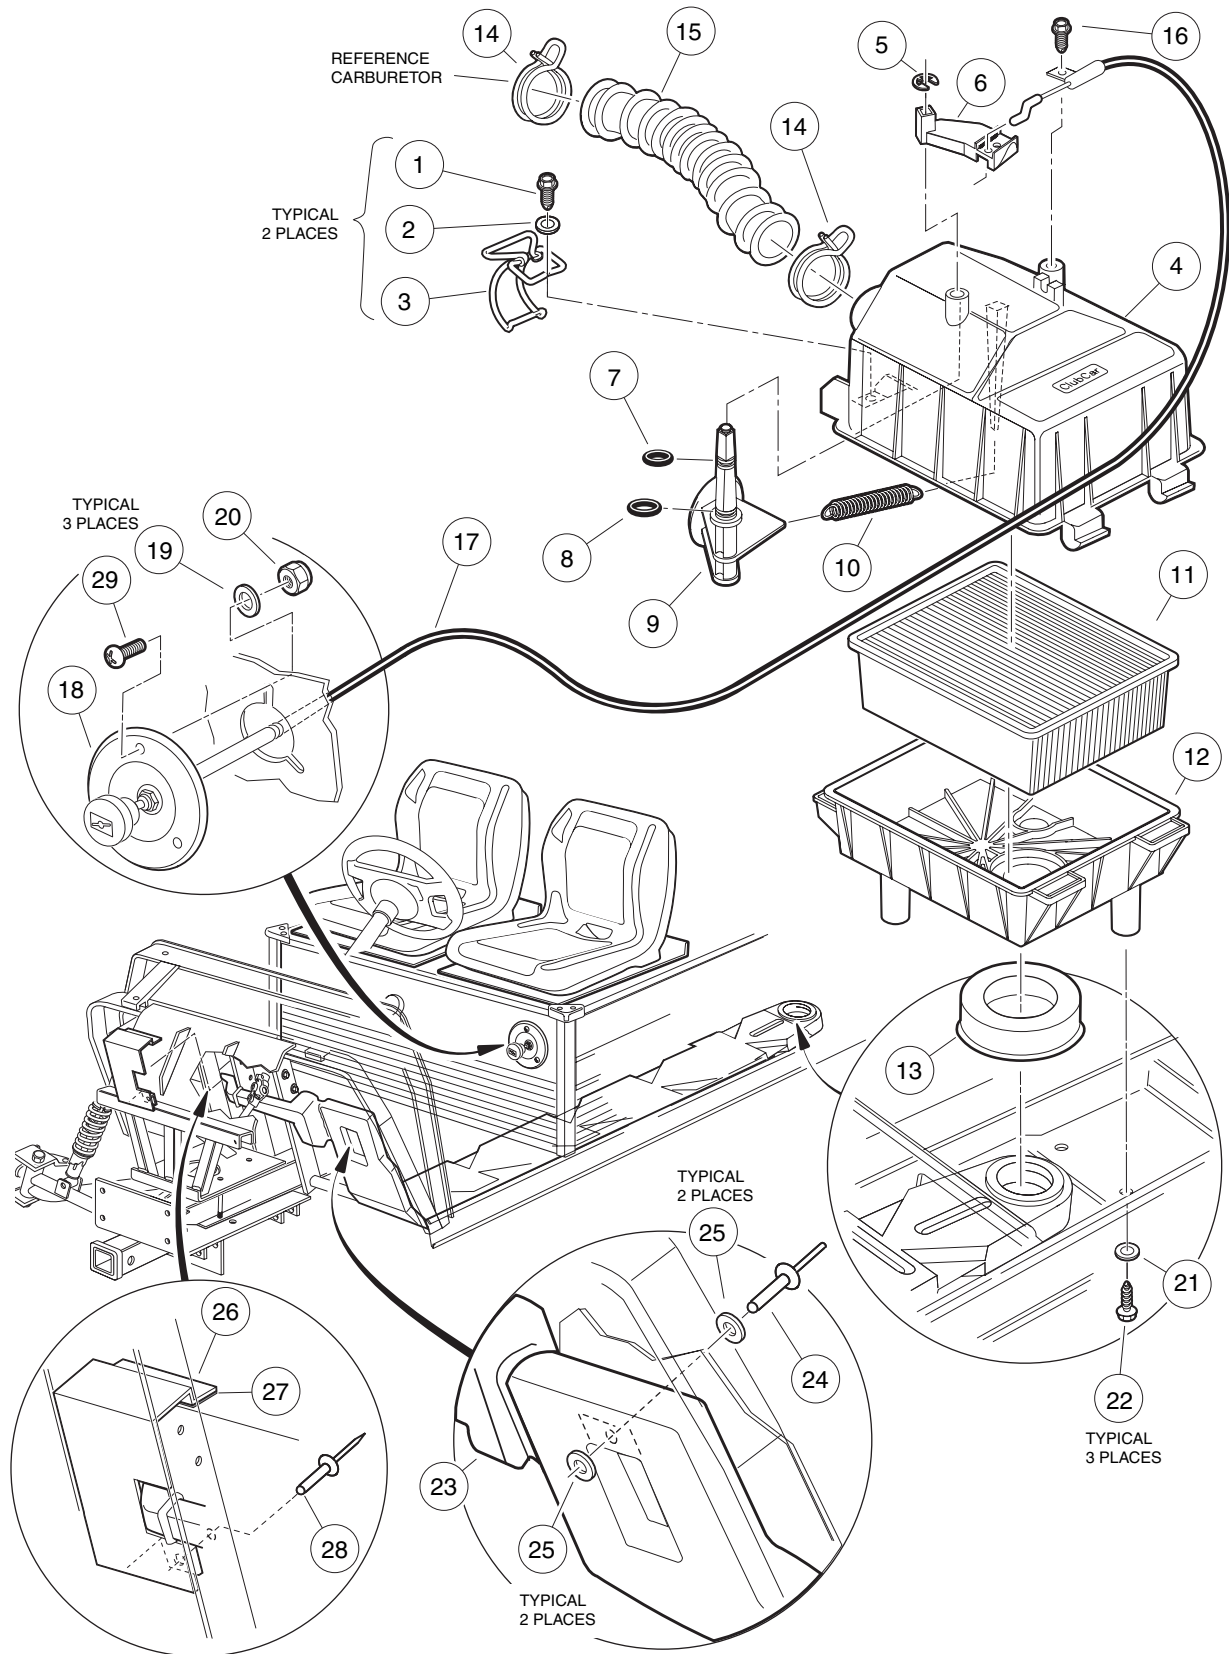


INTAKE DUCT, CHOKE, AND AIR BOX ASSEMBLY – TURF 272 AND CARRYALL 272 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>101821501</u>	Assembly, Air Box (includes items 1 - 13)	1
1	<u>101804301</u>	Screw, Hex-Head Hi-Lo, #8 x 1/2	2
2	<u>101881701</u>	Washer, Stainless Steel, #8	2
3	<u>101925701</u>	Latch, Wire	2
4	<u>101972801</u>	Assembly, Air Box Top (includes items 5 - 10)	1
5	<u>101813001</u>	E-Clip	1
6	<u>101917601</u>	Lever, Choke	1
7	N/A	O-Ring, 5/16 – Red	1
8	N/A	O-Ring, 3/8 – Green	1
9	N/A	Valve, Choke	1
10	<u>101812301</u>	Spring, Return	1
11	<u>1015426</u>	Filter, Air	1
12	<u>101811901</u>	Bottom, Air Box	1
13	<u>101921501</u>	Seal, Intake	1
14	<u>101971301</u>	Clamp, Hose (air intake)	2
15	<u>101837101</u>	Hose, Intake	1
16	<u>101804301</u>	Screw, Hex-Head Hi-Lo, #8 x 1/2	1
17	<u>101926801</u>	Cable, Choke (includes item 18)	1
18	<u>101933701</u>	Bezel, Choke Cable	1
19	<u>183</u>	Washer, Flat, Type A, #10	3
20	<u>1012438</u>	Nut, Nylon Lock, #10-24	3
21	<u>332</u>	Washer, Flat, Type A, 1/4	3
22	<u>1015752</u>	Screw, Hi-Lo, #12-16 x 5/8	3
23	<u>101958102</u>	Duct, Air	1
24	<u>1606</u>	Rivet, Pop, 3/16	2
25	<u>183</u>	Washer, Flat, Type A, #10	4
26	<u>102190702</u>	Kit, Air Duct Shield (includes item 27 and 28)	1
27	N/A	Tape, VHB 4950, 4-1/2 inches	1
28	<u>7973</u>	Rivet, Pop, 3/16	1
29	<u>1631</u>	Screw, Pan-Head, #10-24 x 3/4	3

9

G

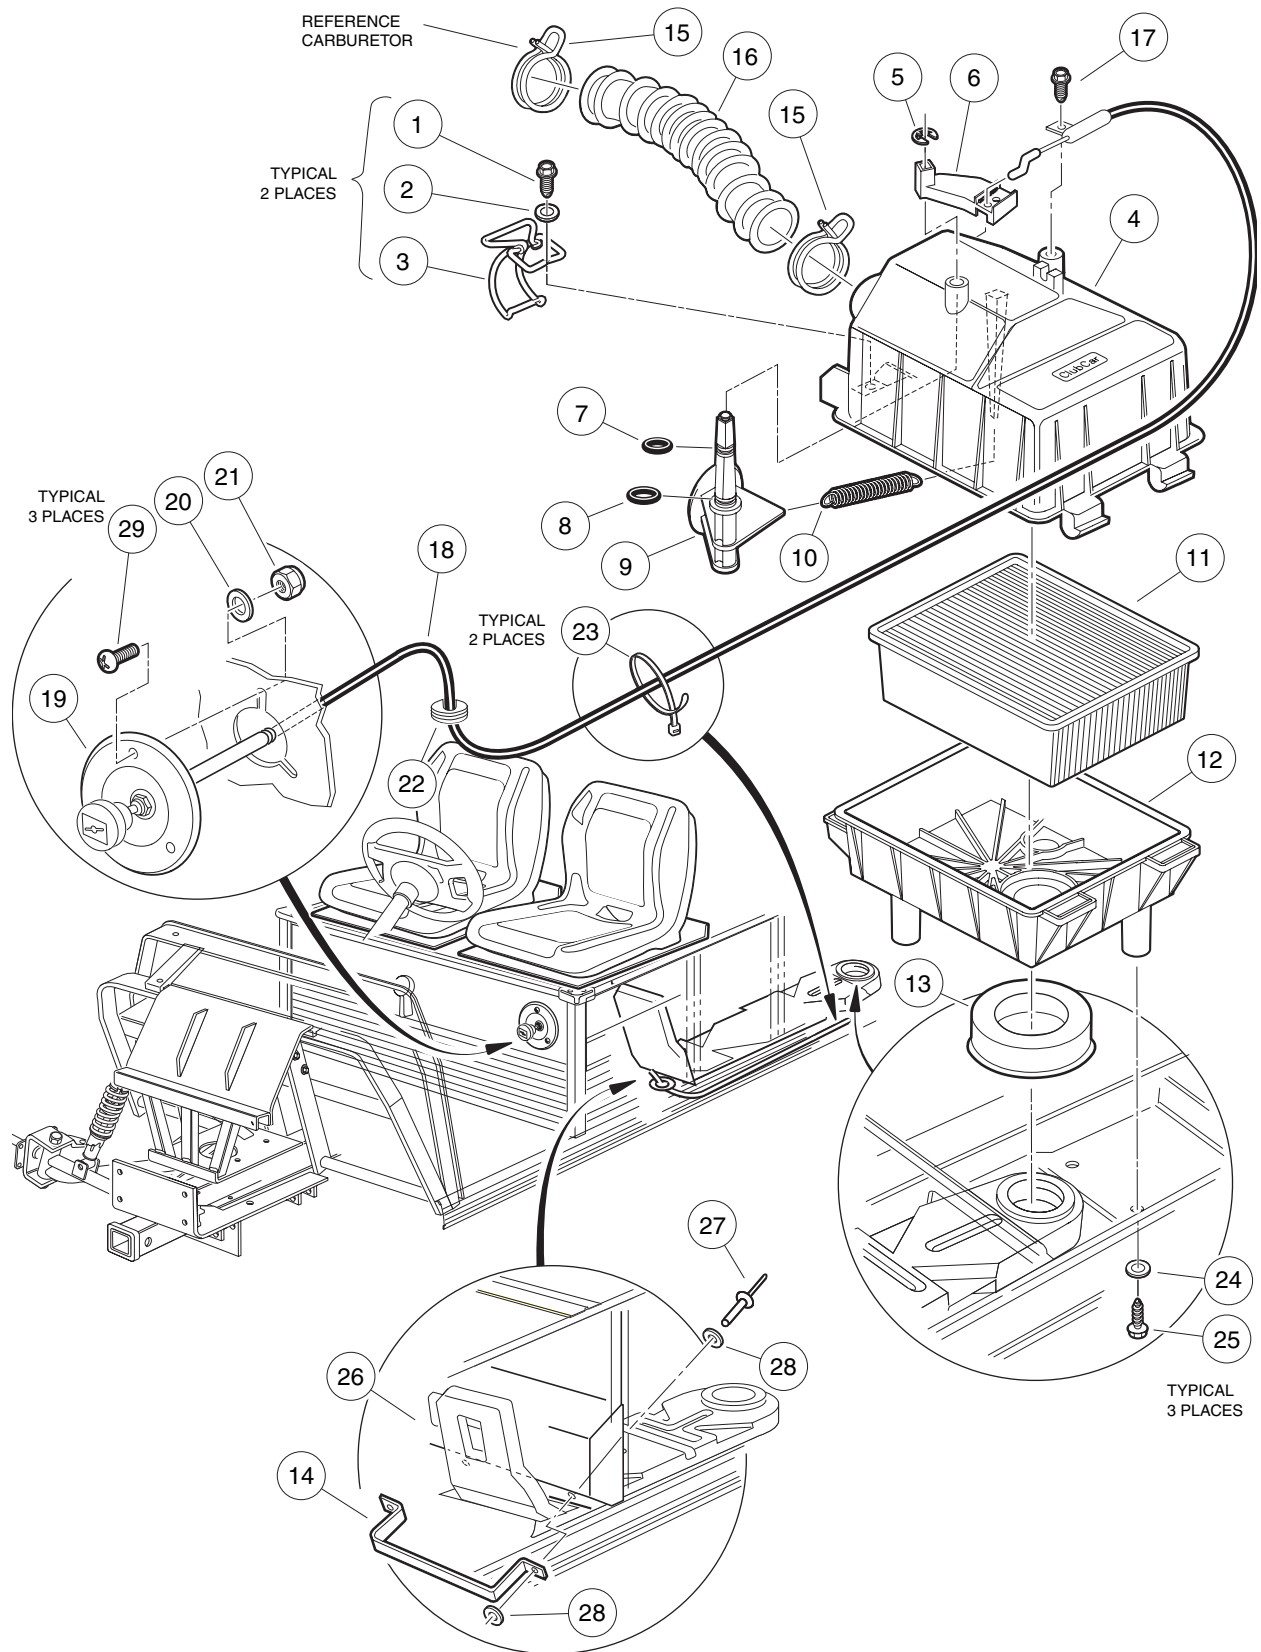

INTAKE DUCT, CHOKE, AND AIR BOX ASSEMBLY – CARRYALL 472 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>101821501</u>	Assembly, Air Box (Includes Items 1 - 13)	1
1	<u>101804301</u>	Screw, Hi-Lo Hex-Head, #8-1/2	2
2	<u>101881701</u>	Washer, Stainless Steel, #8	2
3	<u>101925701</u>	Latch, Wire	2
4	<u>101972801</u>	Assembly, Air Box Top (Includes Items 5 - 10)	1
5	<u>101813001</u>	E-Clip	1
6	<u>101917601</u>	Lever, Choke	1
7	N/A	O-Ring, 5/16 (Red)	1
8	N/A	O-Ring, 3/8 (Green)	1
9	N/A	Valve, Choke	1
10	<u>101812301</u>	Spring, Return	1
11	<u>1015426</u>	Filter, Air	1
12	<u>101811901</u>	Bottom, Air Box	1
13	<u>101921501</u>	Seal, Intake	1
14	<u>101825701</u>	Bracket, Retaining	1
15	<u>101971301</u>	Clamp, Hose (Air Intake)	2
16	<u>101837101</u>	Hose, Intake	1
17	<u>101804301</u>	Screw, Hex-Head Hi-Lo, #8 x 1/2	1
18	<u>101926802</u>	Cable, Choke (includes item 19)	1
19	<u>101933701</u>	Bezel, Choke Cable	1
20	<u>183</u>	Washer, #10	3
21	<u>1012438</u>	Nut, Nylon Lock, #10-24	3
22	<u>1015139</u>	Grommet	1
23	8168	Tie, Wire	2
24	<u>332</u>	Washer, Flat, 1/4	3
25	1015752	Screw, Hi-Lo, #12-16 x 5/8	3
26	<u>101811301</u>	Duct, Air	1
27	7973	Rivet, Pop, 3/16	2
28	<u>183</u>	Washer, Flat, #10	4
29	<u>1631</u>	Screw, Pan-Head, #10-24 x 3/4	3

9

G


9

G

EXHAUST SYSTEM

10

G

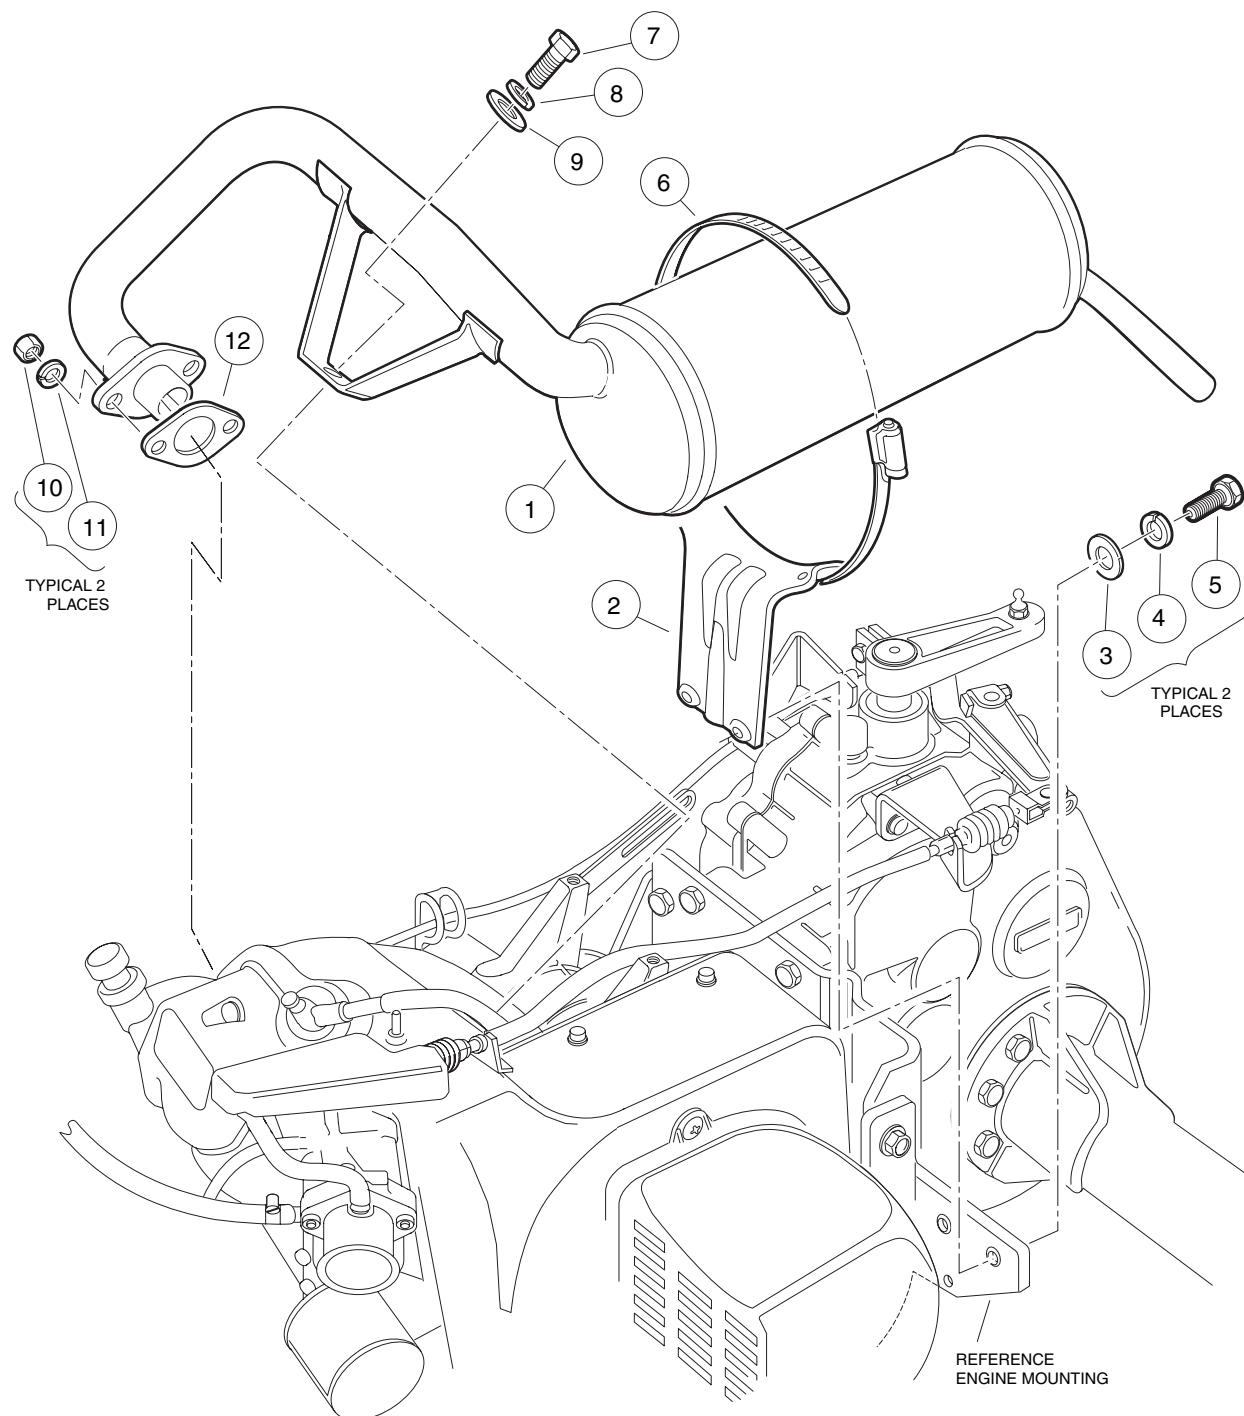


EXHAUST SYSTEM, FE350 ENGINE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101859401</u>	System, Exhaust (FE350 engine)	1
2	<u>1015814</u>	Bracket, Muffler Mounting	1
3	<u>332</u>	Washer, Flat, Type A, 1/4	2
4	<u>451</u>	Washer, Lock, 1/4	2
5	<u>7847</u>	Screw, Hex-Head, 1/4-20 x 3/4	2
6	<u>1017689</u>	Clamp, Muffler	1
7	<u>1012830</u>	Screw, Hex-Head Cap, M8 x 1.25 x 22 mm	1
8	<u>7174</u>	Washer, Lock, 5/16	1
9	<u>1241</u>	Washer, Flat, Type A, 5/16	1
10	<u>1012528</u>	Nut, Hex, M8 x 1.25	2
11	<u>1013734</u>	Washer, Lock, 8 mm	2
12	<u>1016904</u>	Gasket, Exhaust	1

10

G

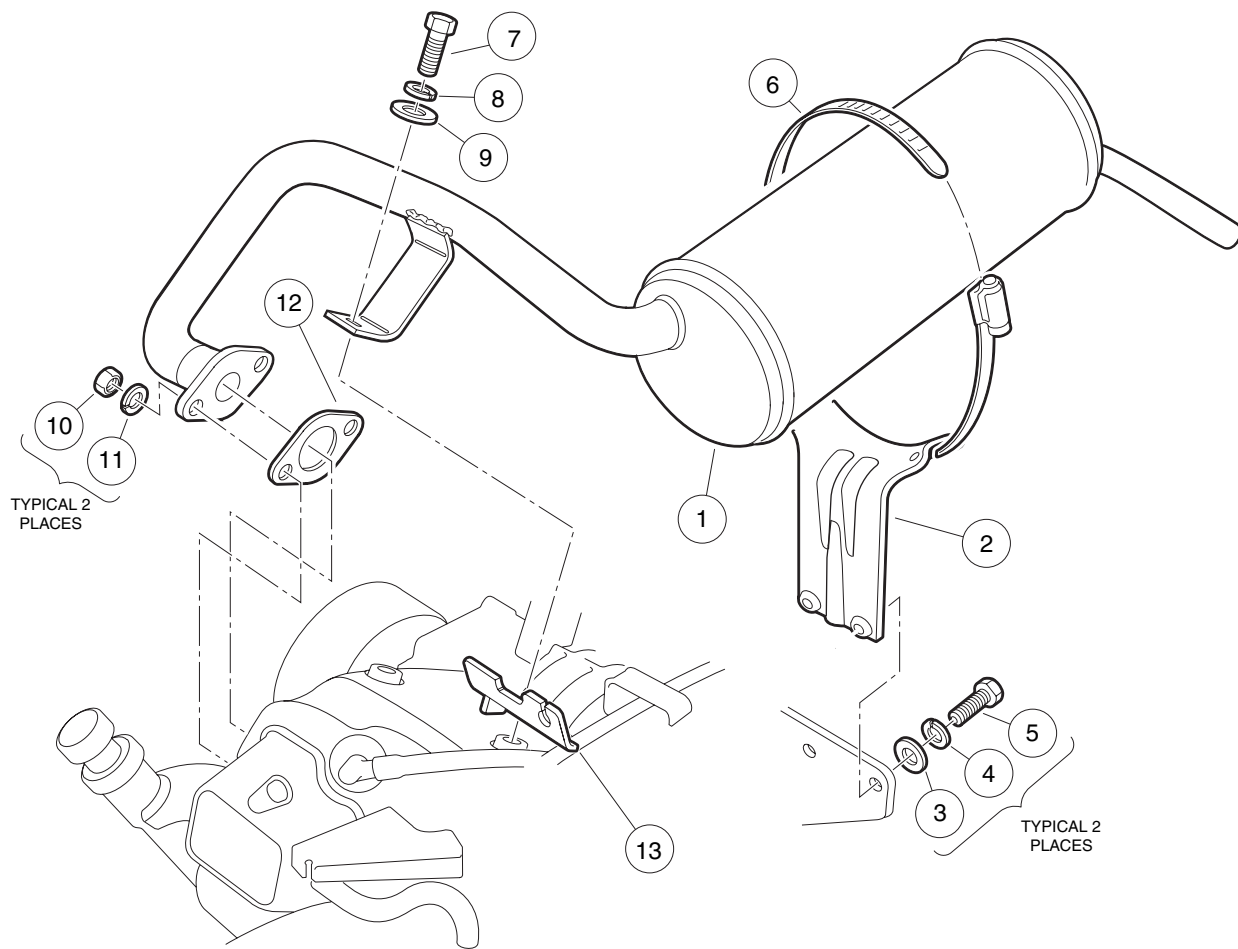

EXHAUST SYSTEM, FE400 ENGINE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102257201</u>	System, Exhaust (FE400 engine)	1
2	<u>1015814</u>	Bracket, Muffler Mounting	1
3	<u>332</u>	Washer, Flat, Type A, 1/4	2
4	<u>451</u>	Washer, Lock, 1/4	2
5	<u>7847</u>	Screw, Hex-Head, 1/4-20 x 3/4	2
6	<u>1017689</u>	Clamp, Muffler	1
7	<u>1012830</u>	Screw, Hex-Head Cap, M8 x 1.25 x 22 mm	1
8	<u>7174</u>	Washer, Lock, 5/16	1
9	<u>1241</u>	Washer, Flat, Type A, 5/16	1
10	<u>1012528</u>	Nut, Hex, M8 x 1.25	2
11	<u>1013734</u>	Washer, Lock, 8 mm	2
12	<u>1016904</u>	Gasket, Exhaust	1
13	<u>1015845</u>	Bracket, Governor Cable Engine	1

10

G


10

G

TORQUE CONVERTER

11

G

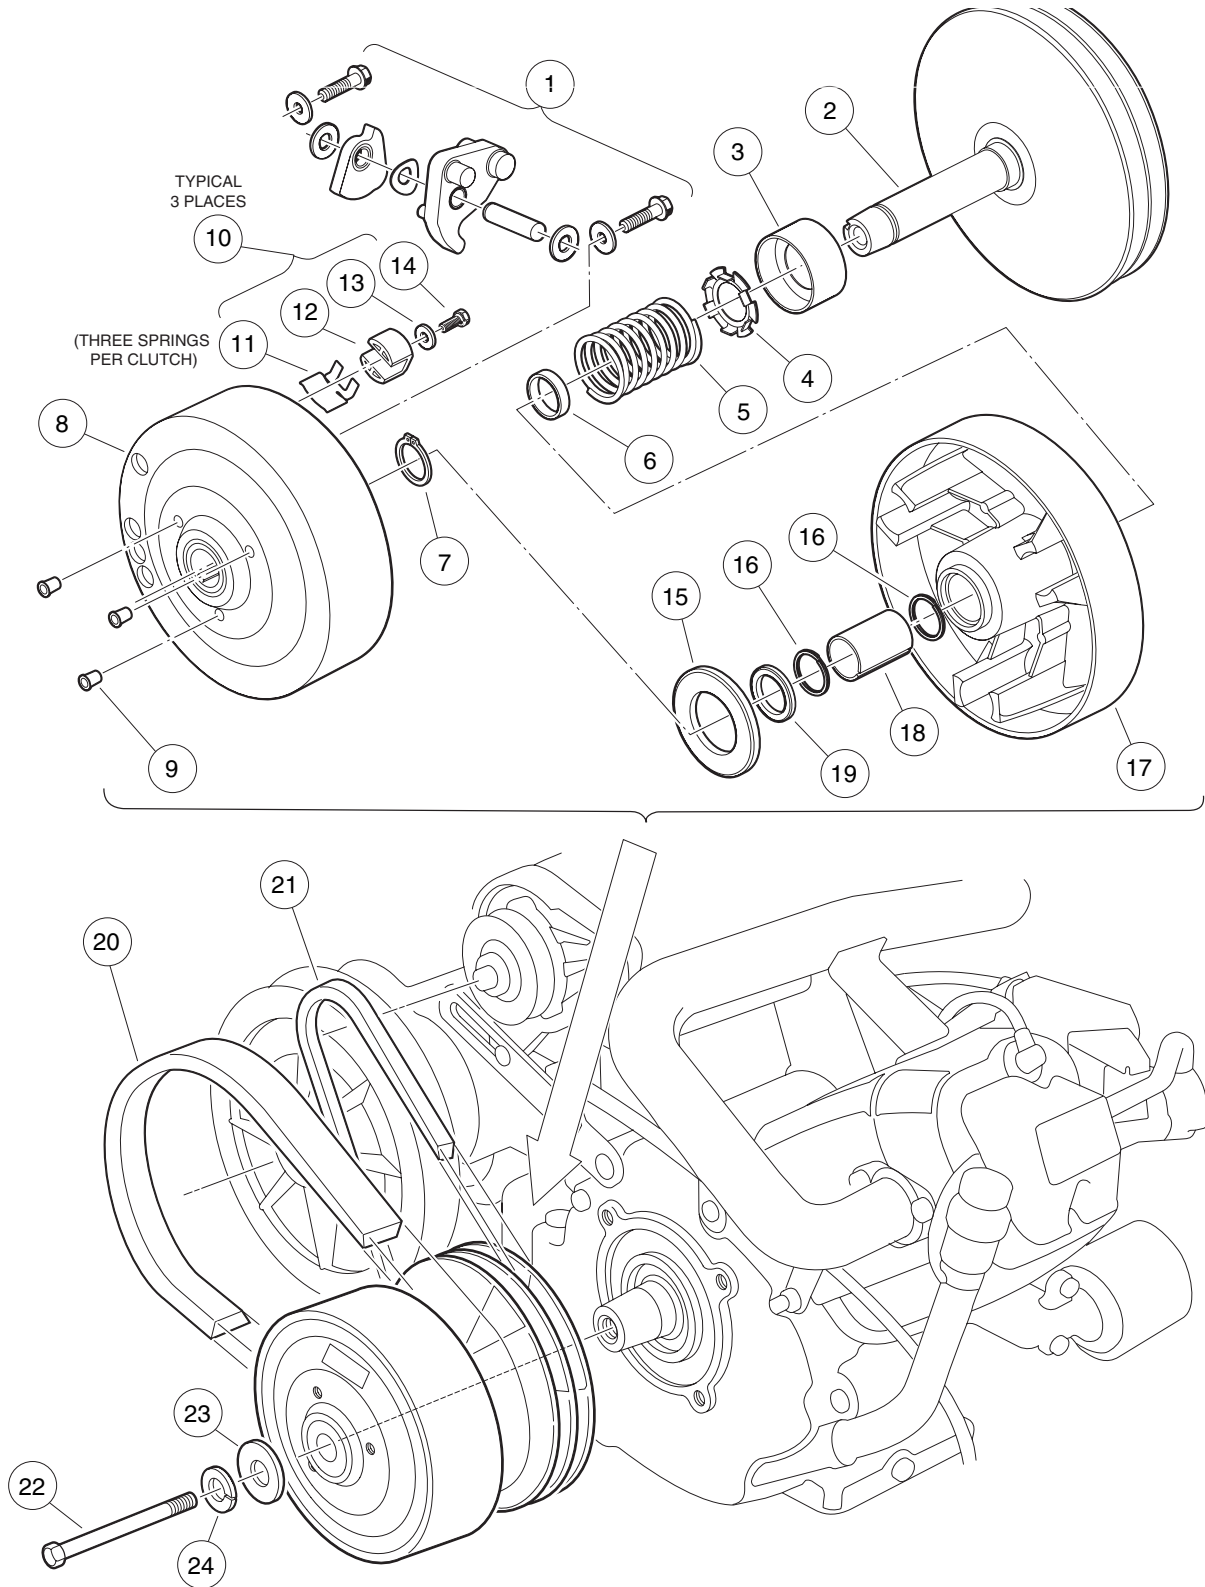

DRIVE CLUTCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>101833904</u>	Assembly, Drive Clutch (FE350 engine) (includes items 1 - 19)	1
	<u>101833908</u>	Assembly, Drive Clutch (FE400 engine) (includes items 1 - 19)	1
1	<u>1016801</u>	Kit, Drive Clutch Weight	1
2	<u>101738301</u>	Assembly, Fixed Face	1
3	<u>1014049</u>	Bearing, Idler	1
4	<u>1014050</u>	Retainer, Spring	1
5	<u>1016901</u>	Spring, Drive Clutch – Green (used in <u>101833904</u> only)	1
5	<u>102266201</u>	Spring, Drive Clutch – Red (used in <u>101833908</u> only)	1
6	<u>1016289</u>	Spacer, Fixed Face Shaft	1
7	<u>1014057</u>	Ring, Retaining	1
8	<u>1014059</u>	Assembly, Drive Hub	1
9	<u>101925601</u>	Plug, Drive Clutch	1
10	<u>1014453</u>	Kit, Drive Clutch Button (includes item 11 - 14)	1
11	<u>1014287</u>	Spring, Drive Button	3
12	<u>1014062</u>	Driver, Drive Clutch	3
13	<u>183</u>	Washer, Flat, #10, Type A	3
14	<u>8450</u>	Screw, Hex-Head, #10-24 x 1/2	3
15	<u>1014058</u>	Washer, Thrust	1
16	<u>1014056</u>	Ring, Spiral Back-Up	2
17	<u>1014052</u>	Assembly, Moveable Face (includes items 18 and 19)	1
18	N/A	Bushing	1
19	<u>1014055</u>	Retainer	1
20	<u>102267101</u>	Belt, Drive (FE350 and FE400)	1
21	<u>101916701</u>	Belt, Starter/Generator	1
22	<u>101916501</u>	Screw, Hex-Head Cap, 3/8-24 x 5-1/2 (left-hand threads)	1
23	<u>808</u>	Washer, Drive Clutch, 3/8	1
24	<u>357</u>	Washer, Lock, 3/8	1

11

G




DRIVEN CLUTCH

ITEM	PART NO.	DESCRIPTION	QTY	11
		1 2 3 4		G
1	<u>101834001</u>	Assembly, Driven Clutch (includes items 2 - 8)	1	
2	<u>1014080</u>	Ring, Retaining	1	
3	<u>1014078</u>	Key	1	
4	<u>1017686</u>	Cam	1	
5	<u>101836201</u>	Spring – Green	1	
6	<u>1014454</u>	Kit, Driven Clutch Button (includes 3 screws and 3 buttons)	1	
7	<u>1014072</u>	Assembly, Moveable Face with Bushing	1	
8	<u>1014070</u>	Face, Fixed	1	
9	<u>102267101</u>	Belt, Drive (FE350 and FE400)	1	
	<u>AM10419</u>	Kit, Driven Clutch Hardware Repair (includes items 10 - 12)	1	
10	<u>101833401</u>	Key, Square Transmission	1	
11	<u>102242101</u>	Screw, Hex-Head Cap, Thread-Locking, 5/16-18 x 3/4	1	
12	<u>1017327</u>	Washer, Driven Clutch	1	

UNITIZED TRANSAXLE

12


G

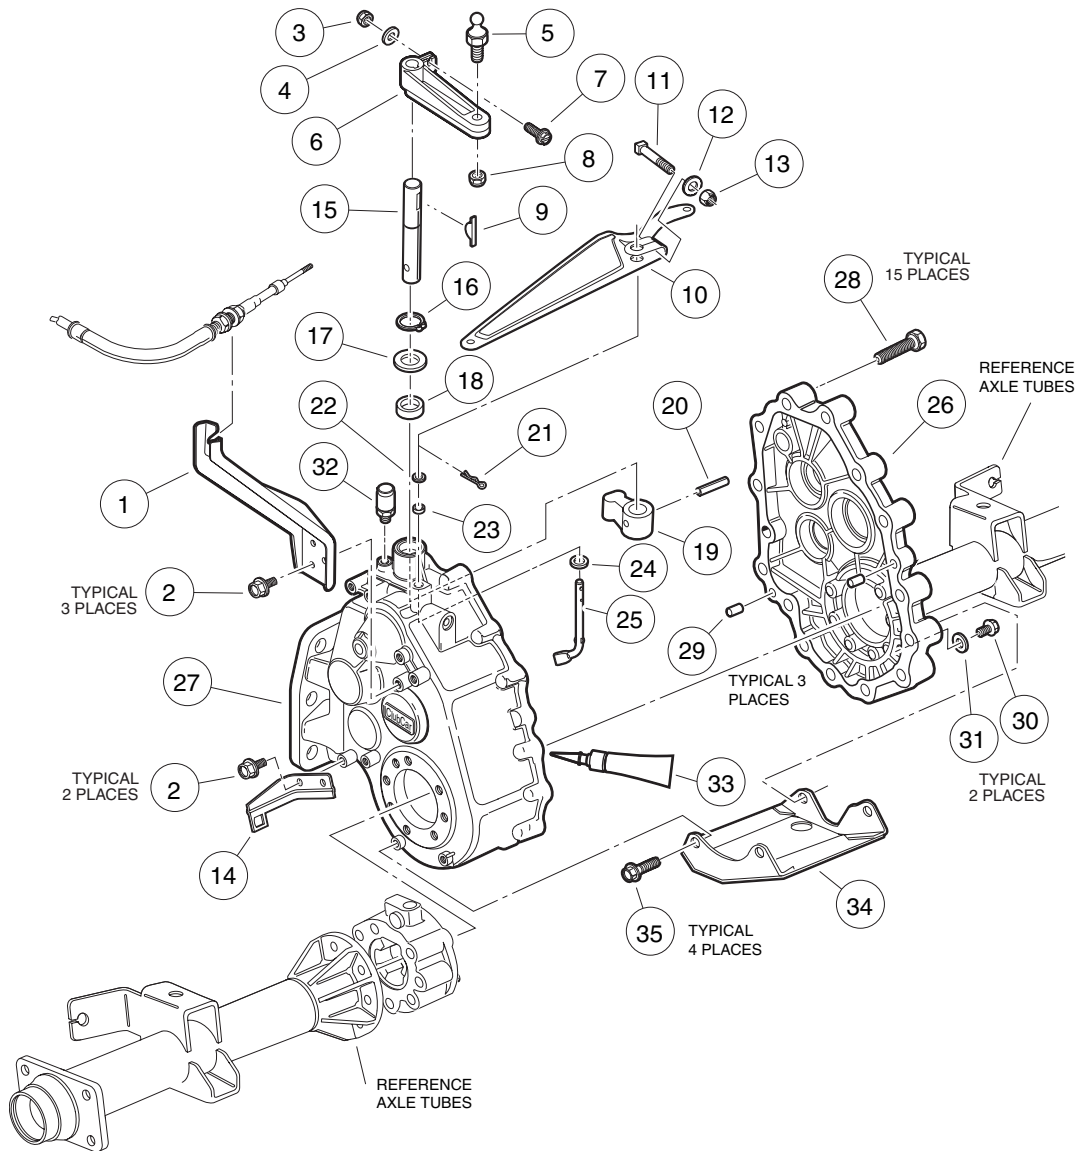

MC012C-AS00 PRIOR TO SERIAL NUMBER MC012C3J0001 – GEAR CASES, BRACKETS AND GUARD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102045901</u>	Bracket, Transmission Cable Support	1
2	<u>1012285</u>	Screw, Thread-Rolling, 1/4-20 x 5/8	5
3	<u>1013061</u>	Nut, Nylon Lock, #10-32	1
4	<u>183</u>	Washer, Flat, Type A, #10	1
5	<u>1010954</u>	Stud, Ball, 1/4-28 x 9/16	1
6	<u>1016341</u>	Lever, Transmission Shifter	1
7	<u>1017082</u>	Screw, Hex Washer-Head, #10-32 x 3/4	1
8	<u>8717</u>	Nut, Nylon Lock, 1/4-28	1
9	<u>1017231</u>	Key, Woodruff, Type T	1
10	<u>101834801</u>	Arm, Governor Lever	1
11	<u>101886101</u>	Screw, Square-Head, 1/4-20 x 1	1
12	<u>1014007</u>	Washer, Type B, 1/4	1
13	<u>8233</u>	Nut, Nylon Lock, 1/4-20	1
14	<u>102018701</u>	Bracket, Differential Lock	1
	<u>102264601</u>	Transaxle, Unitized (includes items 15 - 107)	1
15	<u>101890201</u>	Shaft, Shifter	1
16	<u>101927301</u>	Ring, Snap	1
17	<u>101892901</u>	Washer, Flat	1
18	<u>101927201</u>	Seal, Oil	1
19	<u>101890101</u>	Lever, Shifter	1
20	<u>1012752</u>	Pin, Roll	1
21	<u>101928601</u>	Pin, Cotter	1
22	<u>1016513</u>	Washer, Flat	1
23	<u>101927101</u>	Seal, Oil	1
24	<u>101893801</u>	Washer	1
25	<u>101891301</u>	Arm, Pivot	1
26	<u>102018501</u>	Gear Case (passenger side)	1
27	<u>102018601</u>	Gear Case (driver side)	1
28	<u>101926901</u>	Bolt, Flanged, M8 x 1.25 x 40 mm	15
29	<u>1012896</u>	Pin, Dowel (see also page 12-6)	3
30	<u>1016576</u>	Plug, Drain	2
31	<u>102267601</u>	Gasket	2
32	<u>1012711</u>	Breather	1
33	<u>101928701</u>	Gasket, Liquid, 8.8 oz. (250 grams)	A/R
34	<u>102031501</u>	Guard, Unitized Transaxle	1
35	<u>102268601</u>	Bolt, M8 x 1.25 x 20 mm	4


12
G

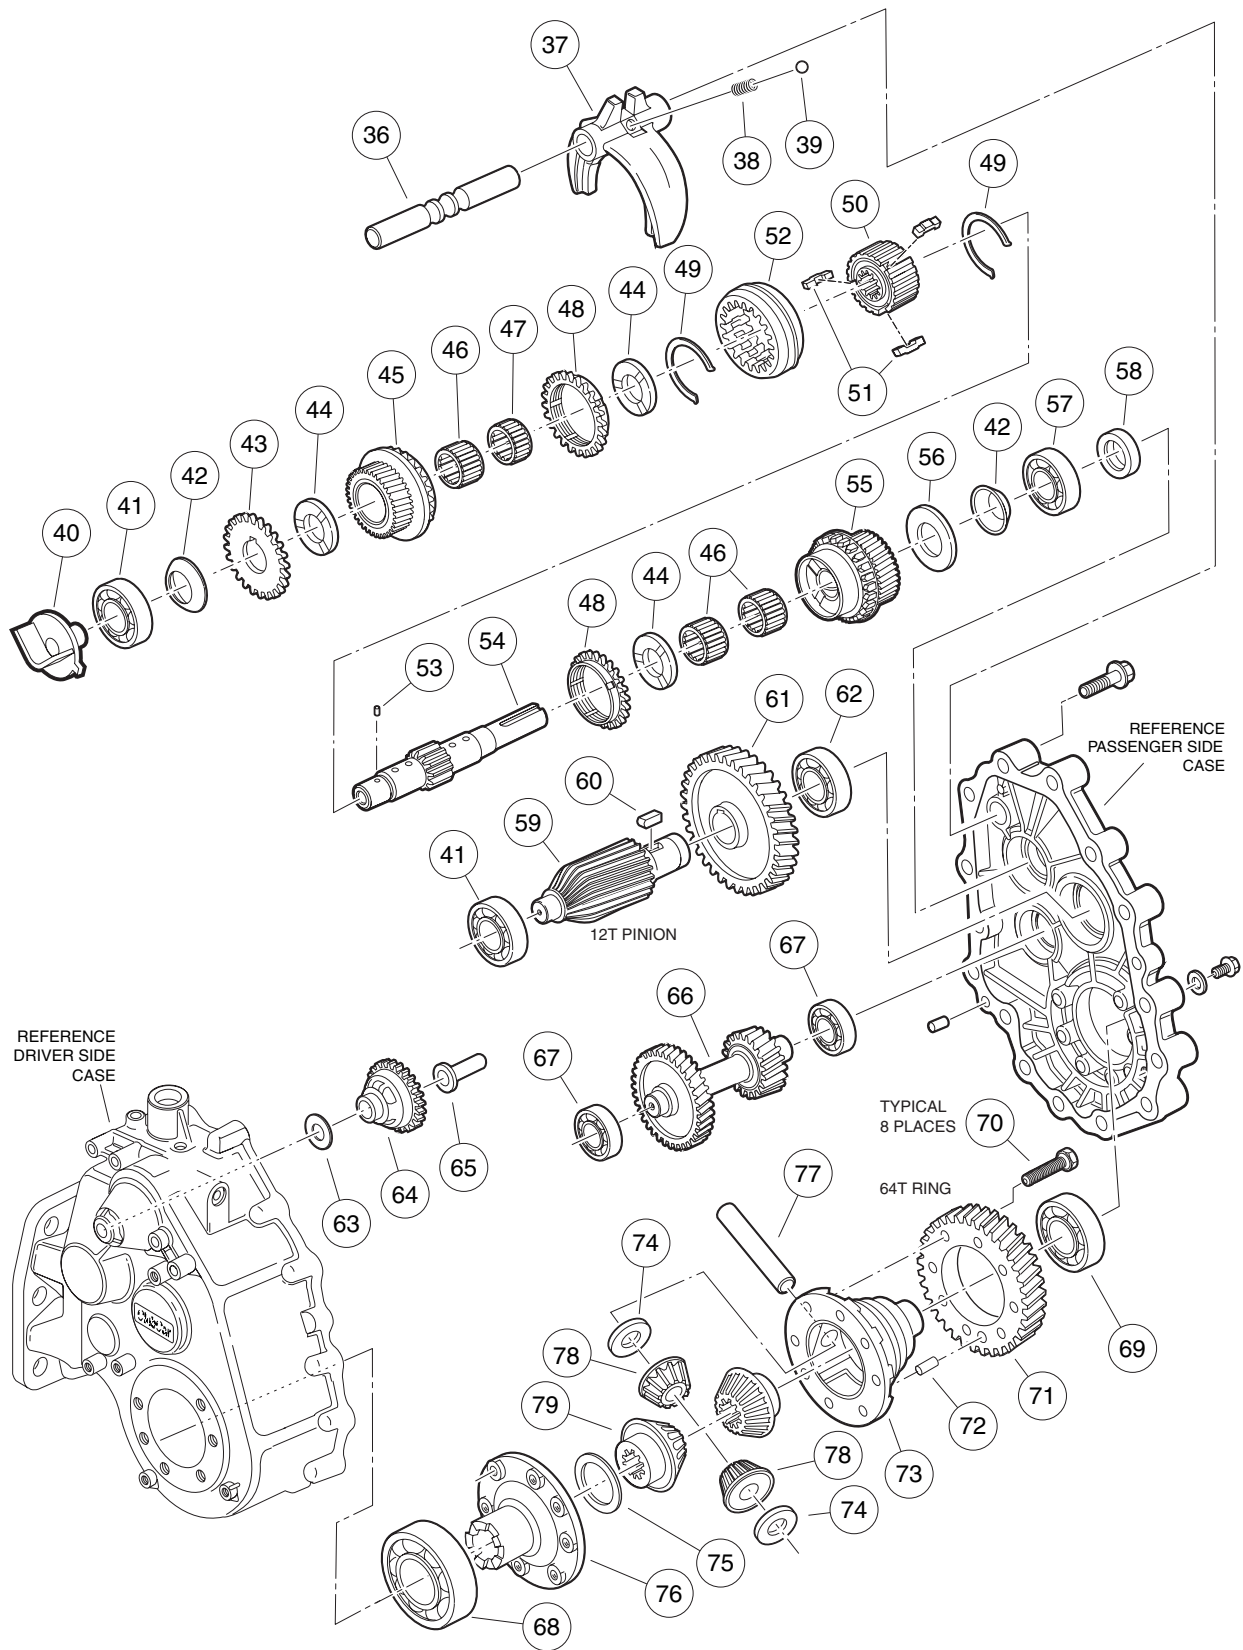

MC012C-AS00 PRIOR TO SERIAL NUMBER MC012C3 J0001 – F&R TRANSMISSION AND GEAR REDUCTION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
36	101892001	Rod, Shift	1
37	<u>101890001</u>	Fork, Shift	1
38	<u>1012748</u>	Spring	1
39	<u>1012747</u>	Ball, Steel	1
40	<u>101889401</u>	Guide	1
41	<u>AM10080</u>	Bearing, Ball, Sealed	2
42	<u>1016338</u>	Washer, Spring	2
43	<u>101892401</u>	Gear, Spur	1
44	<u>101892201</u>	Plate, Thrust	3
45	<u>102018801</u>	Gear, Input, 25 Tooth (16°)	1
46	<u>101927601</u>	Bearing, Needle	3
47	<u>101927501</u>	Bearing, Needle	1
48	<u>101981001</u>	Ring, Synchronizer (16°)	2
49	<u>1012741</u>	Spring, Synchronizer	2
50	<u>101928001</u>	Hub, Synchronizer Clutch	1
51	<u>1012740</u>	Insert, Synchronizer	3
52	<u>101927901</u>	Sleeve, Synchronizer	1
53	<u>101927701</u>	Pin, Dowel	1
54	<u>101889901</u>	Shaft, Input	1
55	<u>101980801</u>	Gear, Input, 25 Tooth (16°)	1
56	<u>1016337</u>	Washer, Thrust	1
57	<u>AM10081</u>	Bearing, Ball, C-3 Sealed	1
58	<u>1012714</u>	Seal, Oil, Input Shaft	1
59	<u>102268201</u>	Gear, 12 Tooth	1
60	<u>101893201</u>	Key	1
61	<u>102018901</u>	Gear, 70 Tooth	1
62	<u>102268401</u>	Bearing, Ball	1
63	<u>101893901</u>	Washer	1
64	<u>101892301</u>	Governor	1
65	<u>101891601</u>	Sleeve	1
66	<u>102019001</u>	Gear, Cluster Idler	1
67	<u>7335</u>	Bearing, Ball	2
68	<u>102032001</u>	Bearing, Inner Axle Tube, Driver-Side	1
69	<u>7330</u>	Bearing, Inner Axle Tube, Passenger-Side	1
70	<u>101928301</u>	Bolt, M8 x 1.25 x 37 mm	8
71	<u>102268301</u>	Gear, Output, 64 Tooth	1
72	<u>102031701</u>	Pin, Dowel	1
73	<u>102267901</u>	Case, Gear Carrier	1
74	<u>1013774</u>	Plate, Thrust (idler gear)	2
75	<u>102268101</u>	Plate, Thrust (differential gear)	1
76	<u>102267801</u>	Cover, Gear Case	1
77	<u>1013772</u>	Pin, Differential	1
78	<u>1013770</u>	Gear, Differential Idler	2
79	<u>102268001</u>	Gear, Differential, 16 Tooth	2

12
G

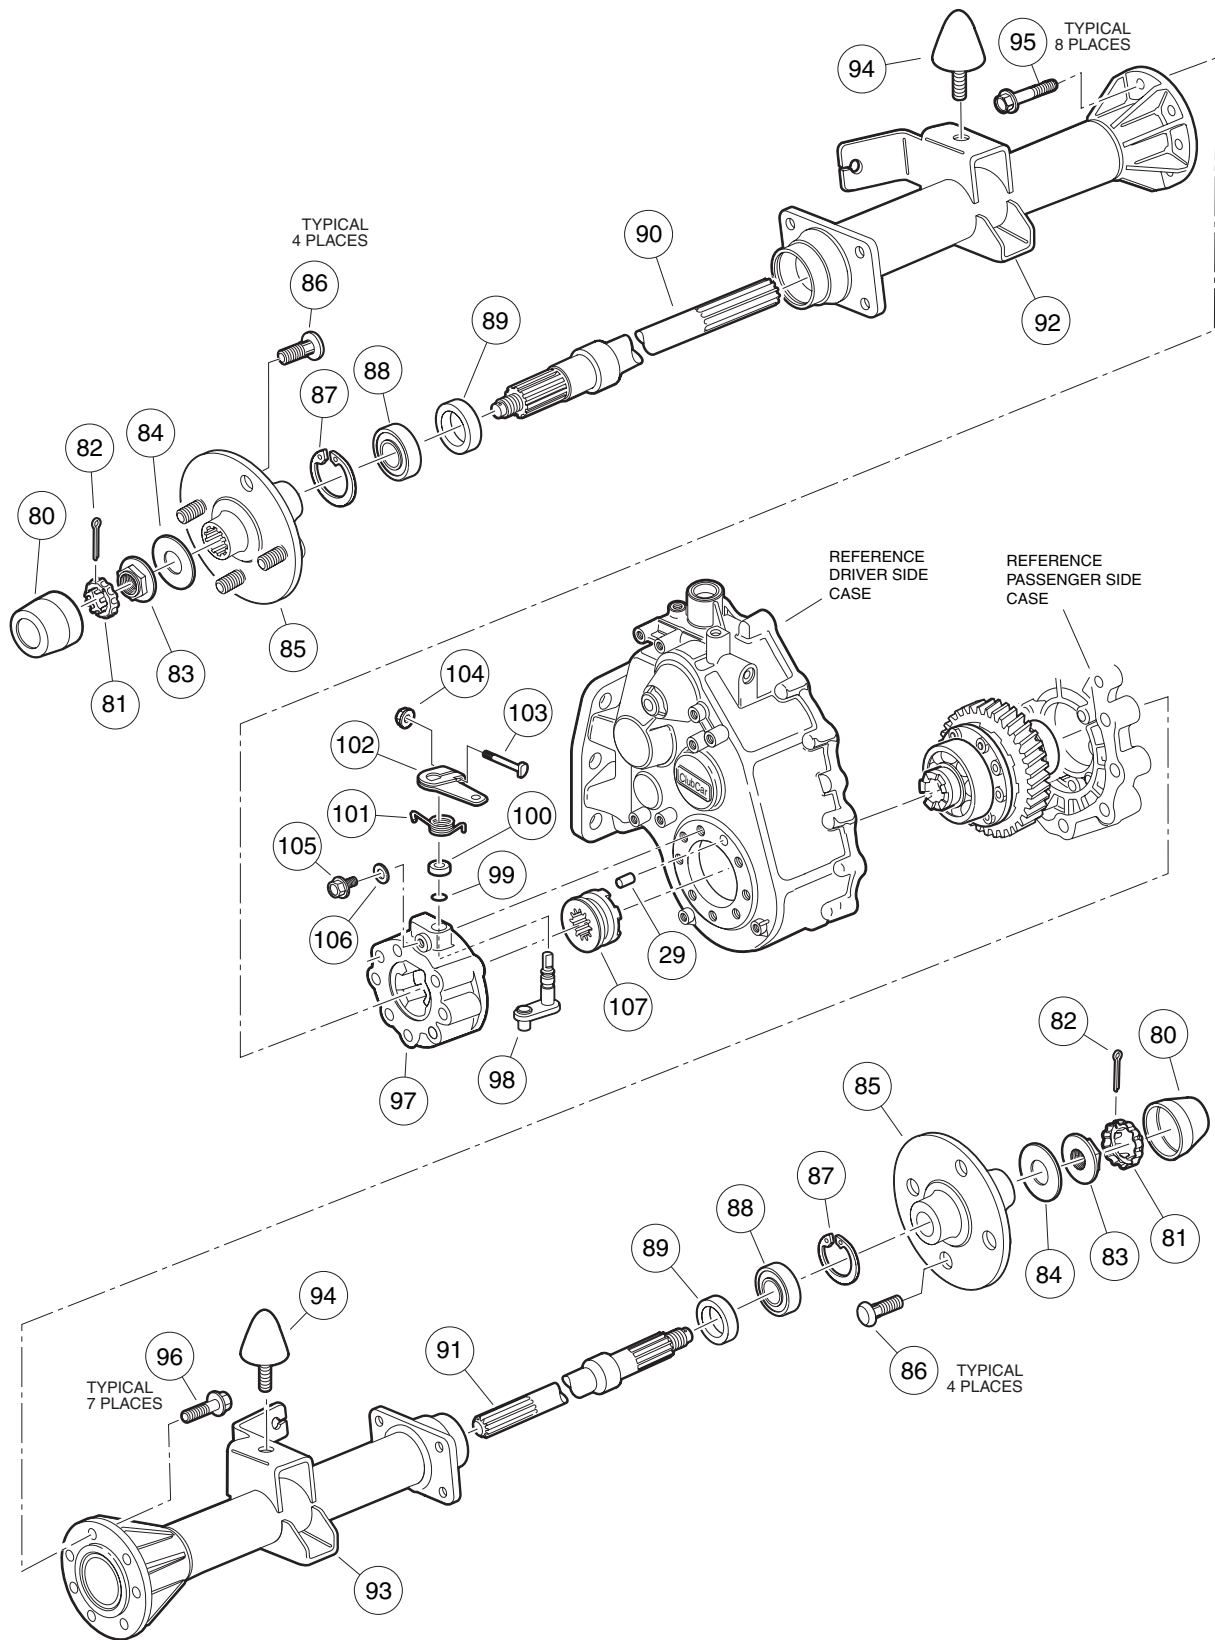


MC012C-AS00 PRIOR TO SERIAL NUMBER MC012C3J0001 – DIFFERENTIAL LOCK AND AXLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
80	102274101	Cap, Rubber Center	2
81	<u>102276001</u>	Cap, Locking	2
82	<u>101838801</u>	Pin, Cotter	2
83	<u>102269201</u>	Nut, Axle Flange Retaining	2
84	<u>102269301</u>	Washer, Flat	2
85	<u>102269101</u>	Hub (includes item 86)	2
86	<u>1013787</u>	Stud, Lug	4
87	<u>1013792</u>	Ring, Retaining	2
88	<u>1011291</u>	Bearing, Outer Axle Tube	2
89	<u>102269401</u>	Seal, Oil	2
90	<u>102269001</u>	Assembly, Axle, Driver-Side	1
91	<u>102268901</u>	Assembly, Axle, Passenger-Side	1
92	<u>102268801</u>	Assembly, Axle Tube, Driver-Side	1
93	<u>102268701</u>	Assembly, Axle Tube, Passenger-Side	1
94	<u>102188701</u>	Stop, Axle	2
95	<u>102019601</u>	Bolt, M10 x 1.5 x 70 mm	8
96	<u>102031901</u>	Bolt, M10 x 1.5 x 30 mm	7
97	<u>102020101</u>	Housing, Differential Lock	1
98	<u>102020201</u>	Lever, Differential Lock	1
99	<u>102020301</u>	O-Ring, Differential Lock	1
100	<u>102020401</u>	Spacer, Differential Lock	1
101	<u>102020501</u>	Spring, Differential Lock	1
102	<u>102020901</u>	Arm, Differential Lock Lever	1
103	<u>1016686</u>	Bolt, Differential Lock Pinch	1
104	<u>1016547</u>	Nut, Flanged, M6 x 1	1
105	<u>102022301</u>	Screw, M6 x 1 x 10 mm	1
106	<u>102022401</u>	Washer, M6	1
107	<u>102267701</u>	Cog, Differential Lock, 15 Tooth	1

12


G

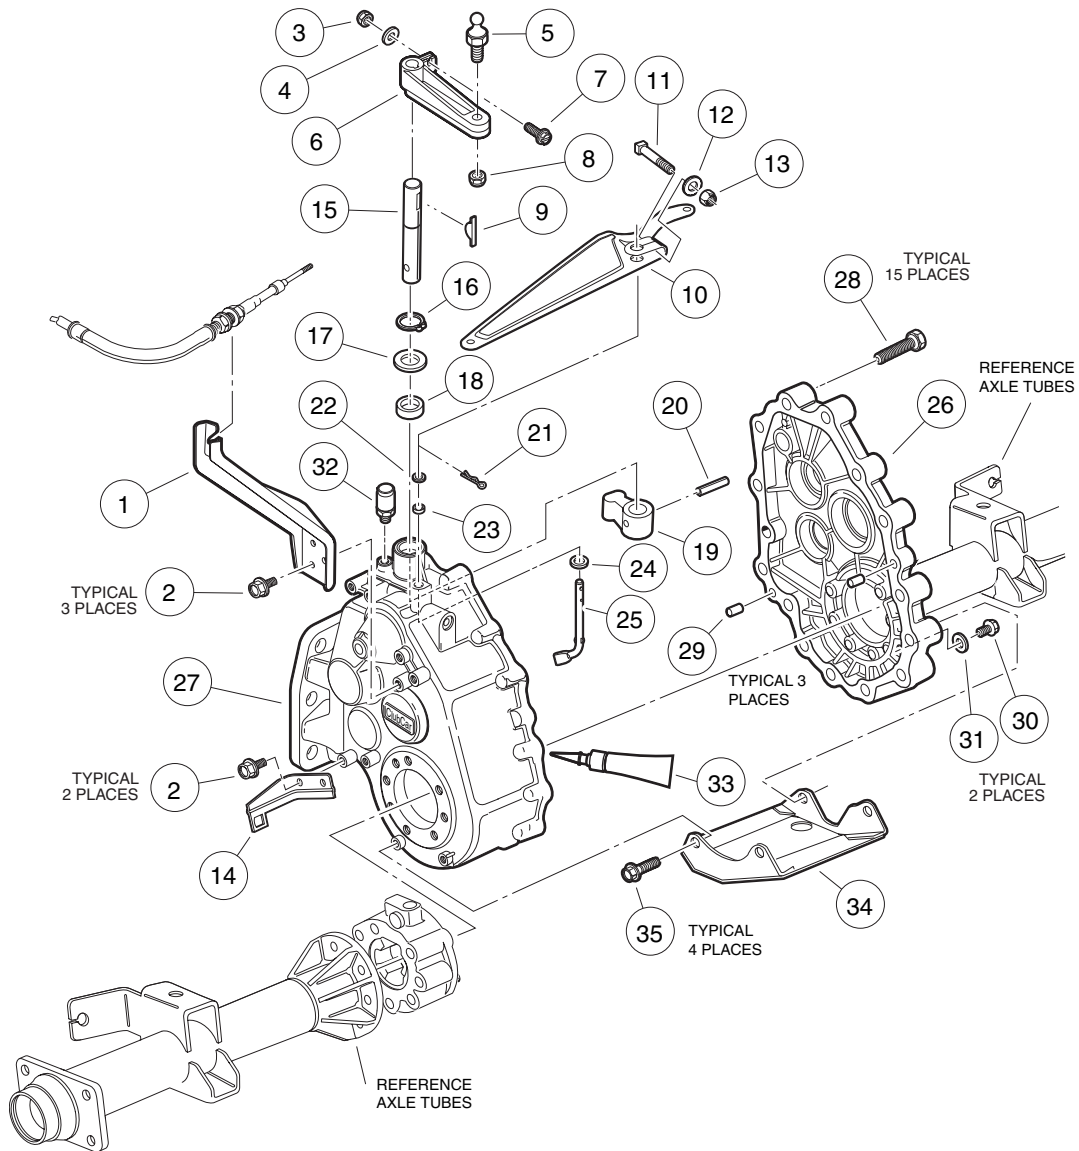

MC012C-BS00 BEGINNING WITH SERIAL NUMBER MC012C3J0001 – GEAR CASES, BRACKETS AND GUARD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102045901</u>	Bracket, Transmission Cable Support	1
2	<u>1012285</u>	Screw, Thread-Rolling, 1/4-20 x 5/8	5
3	<u>1013061</u>	Nut, Nylon Lock, #10-32	1
4	<u>183</u>	Washer, Flat, Type A, #10	1
5	<u>1010954</u>	Stud, Ball, 1/4-28 x 9/16	1
6	<u>1016341</u>	Lever, Transmission Shifter	1
7	<u>1017082</u>	Screw, Hex Washer-Head, #10-32 x 3/4	1
8	<u>8717</u>	Nut, Nylon Lock, 1/4-28	1
9	<u>1017231</u>	Key, Woodruff, Type T	1
10	<u>101834801</u>	Arm, Governor Lever	1
11	<u>101886101</u>	Screw, Square-Head, 1/4-20 x 1	1
12	<u>1014007</u>	Washer, Type B, 1/4	1
13	<u>8233</u>	Nut, Nylon Lock, 1/4-20	1
14	<u>102018701</u>	Bracket, Differential Lock	1
	<u>102457401</u>	Transaxle, Unitized (includes items 15 - 108)	1
15	<u>101890201</u>	Shaft, Shifter	1
16	<u>101927301</u>	Ring, Snap	1
17	<u>101892901</u>	Washer, Flat	1
18	<u>101927201</u>	Seal, Oil	1
19	<u>101890101</u>	Lever, Shifter	1
20	<u>1012752</u>	Pin, Roll	1
21	<u>101928601</u>	Pin, Cotter	1
22	<u>1016513</u>	Washer, Flat	1
23	<u>101927101</u>	Seal, Oil	1
24	<u>101893801</u>	Washer	1
25	<u>101891301</u>	Arm, Pivot	1
26	<u>102018501</u>	Gear Case (passenger side)	1
27	<u>102018601</u>	Gear Case (driver side)	1
28	<u>101926901</u>	Bolt, Flanged, M8 x 1.25 x 40 mm	15
29	<u>1012896</u>	Pin, Dowel (see also page 12-6)	3
30	<u>1016576</u>	Plug, Drain	2
31	<u>102267601</u>	Gasket	2
32	<u>1012711</u>	Breather	1
33	<u>101928701</u>	Gasket, Liquid, 8.8 oz. (250 grams)	A/R
34	<u>102031501</u>	Guard, Unitized Transaxle	1
35	<u>102268601</u>	Bolt, M8 x 1.25 x 20 mm	4

12
G

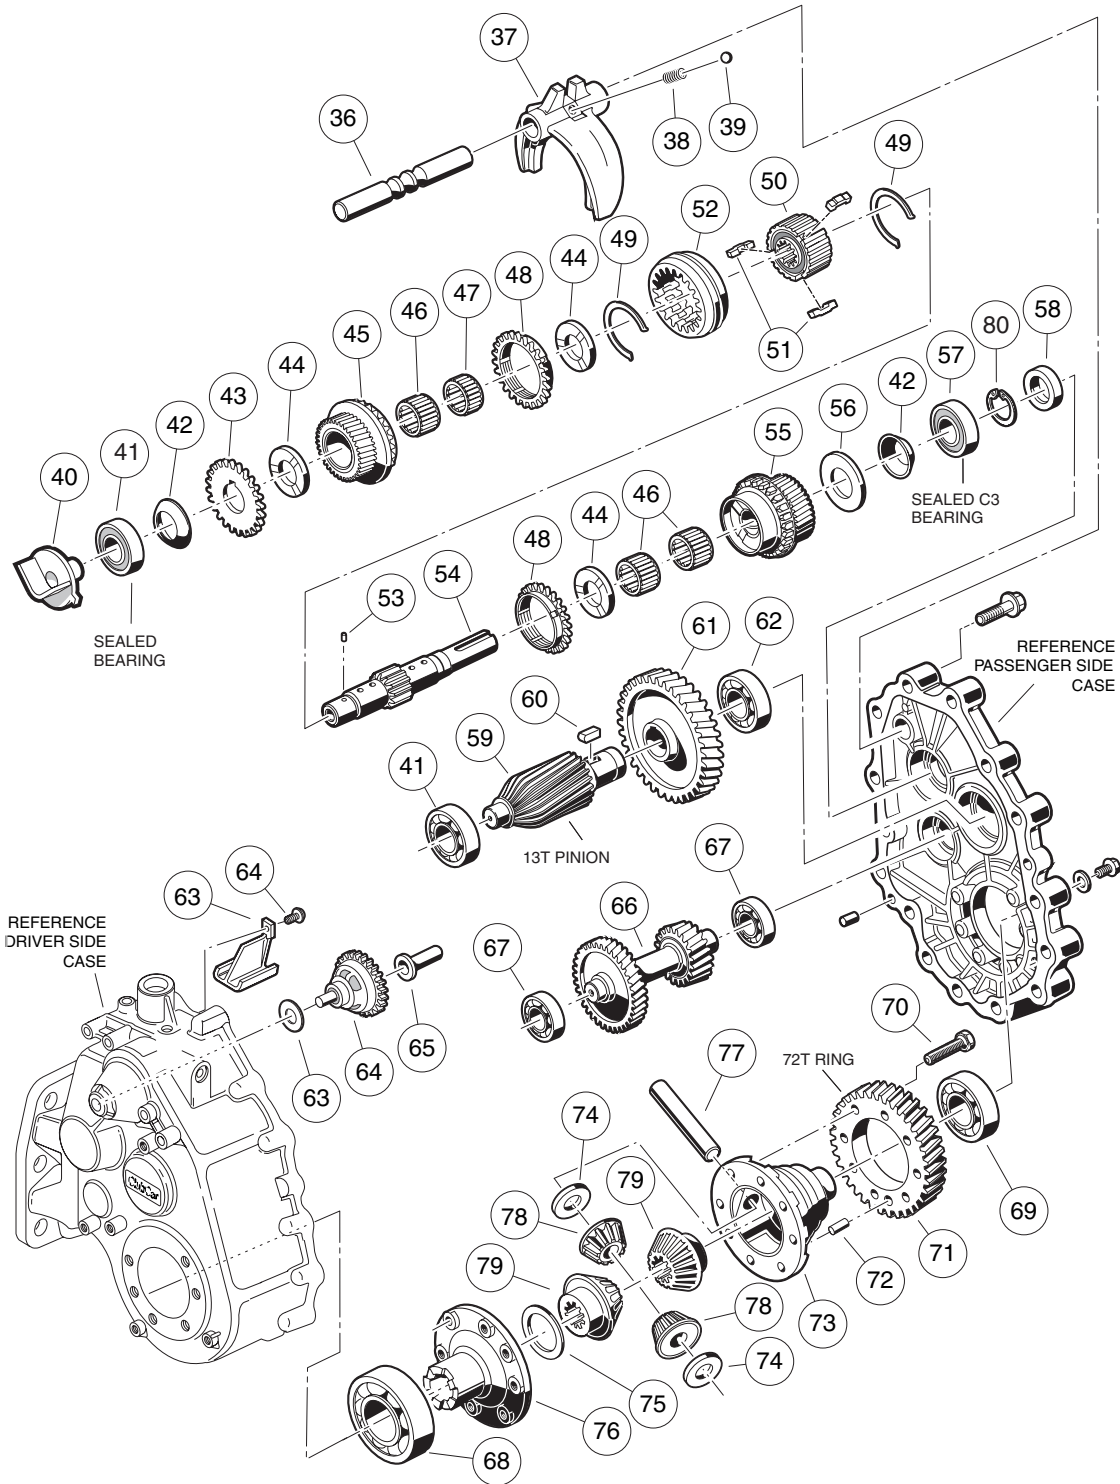


Parts identification for transaxles beginning with serial number MC012C3J0001

MC012C-BS00 BEGINNING WITH SERIAL NUMBER MC012C3J0001 – F&R TRANSMISSION AND GEAR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
36	101892001	Rod, Shift	1
37	<u>101890001</u>	Fork, Shift	1
38	<u>1012748</u>	Spring	1
39	<u>1012747</u>	Ball, Steel	1
40	<u>101889401</u>	Guide	1
41	<u>AM10080</u>	Bearing, Sealed, Ball	2
42	<u>1016338</u>	Washer, Spring	2
43	<u>101892401</u>	Gear, Spur	1
44	<u>101892201</u>	Plate, Thrust	3
45	<u>102018801</u>	Gear, Input, 25 Tooth (16°)	1
46	<u>101927601</u>	Bearing, Needle	3
47	<u>101927501</u>	Bearing, Needle	1
48	<u>101981001</u>	Ring, Synchronizer (16°)	2
49	<u>1012741</u>	Spring, Synchronizer	2
50	<u>101928001</u>	Hub, Synchronizer Clutch	1
51	<u>1012740</u>	Insert, Synchronizer	3
52	<u>101927901</u>	Sleeve, Synchronizer	1
53	<u>101927701</u>	Pin, Dowel	1
54	<u>102453001</u>	Shaft, Input, w/Circlip Groove	1
55	<u>101980801</u>	Gear, Input, 25 Tooth (16°)	1
56	<u>1016337</u>	Washer, Thrust	1
57	<u>AM10081</u>	Bearing, C-3 Sealed, Ball	1
58	<u>1012714</u>	Seal, Oil, Input Shaft	1
59	<u>102452501</u>	Gear, 13 Tooth	1
60	<u>101893201</u>	Key	1
61	<u>102018901</u>	Gear, 70 Tooth	1
62	<u>102268401</u>	Bearing, Ball	1
63	<u>101893901</u>	Washer	1
64	<u>101892301</u>	Governor	1
65	<u>101891601</u>	Sleeve	1
66	<u>102019001</u>	Gear, Cluster Idler	1
67	<u>7335</u>	Bearing, Ball	2
68	<u>102032001</u>	Bearing, Inner Axle Tube, Driver-Side	1
69	<u>7330</u>	Bearing, Inner Axle Tube, Passenger-Side	1
70	<u>101928301</u>	Bolt, M8 x 1.25 x 37 mm	8
71	<u>102452401</u>	Gear, Output, 72 Tooth	1
72	<u>102031701</u>	Pin, Dowel	1
73	<u>102453201</u>	Case, Gear Carrier	1
74	<u>1013774</u>	Plate, Thrust (idler gear)	2
75	<u>102268101</u>	Plate, Thrust (differential gear)	1
76	<u>102267801</u>	Cover, Gear Case	1
77	<u>1013772</u>	Pin, Differential	1
78	<u>1013770</u>	Gear, Differential Idler	2
79	<u>102268001</u>	Gear, Differential, 16 Tooth	2
80	<u>102453101</u>	Circlip, Input Shaft.....	1

12
G

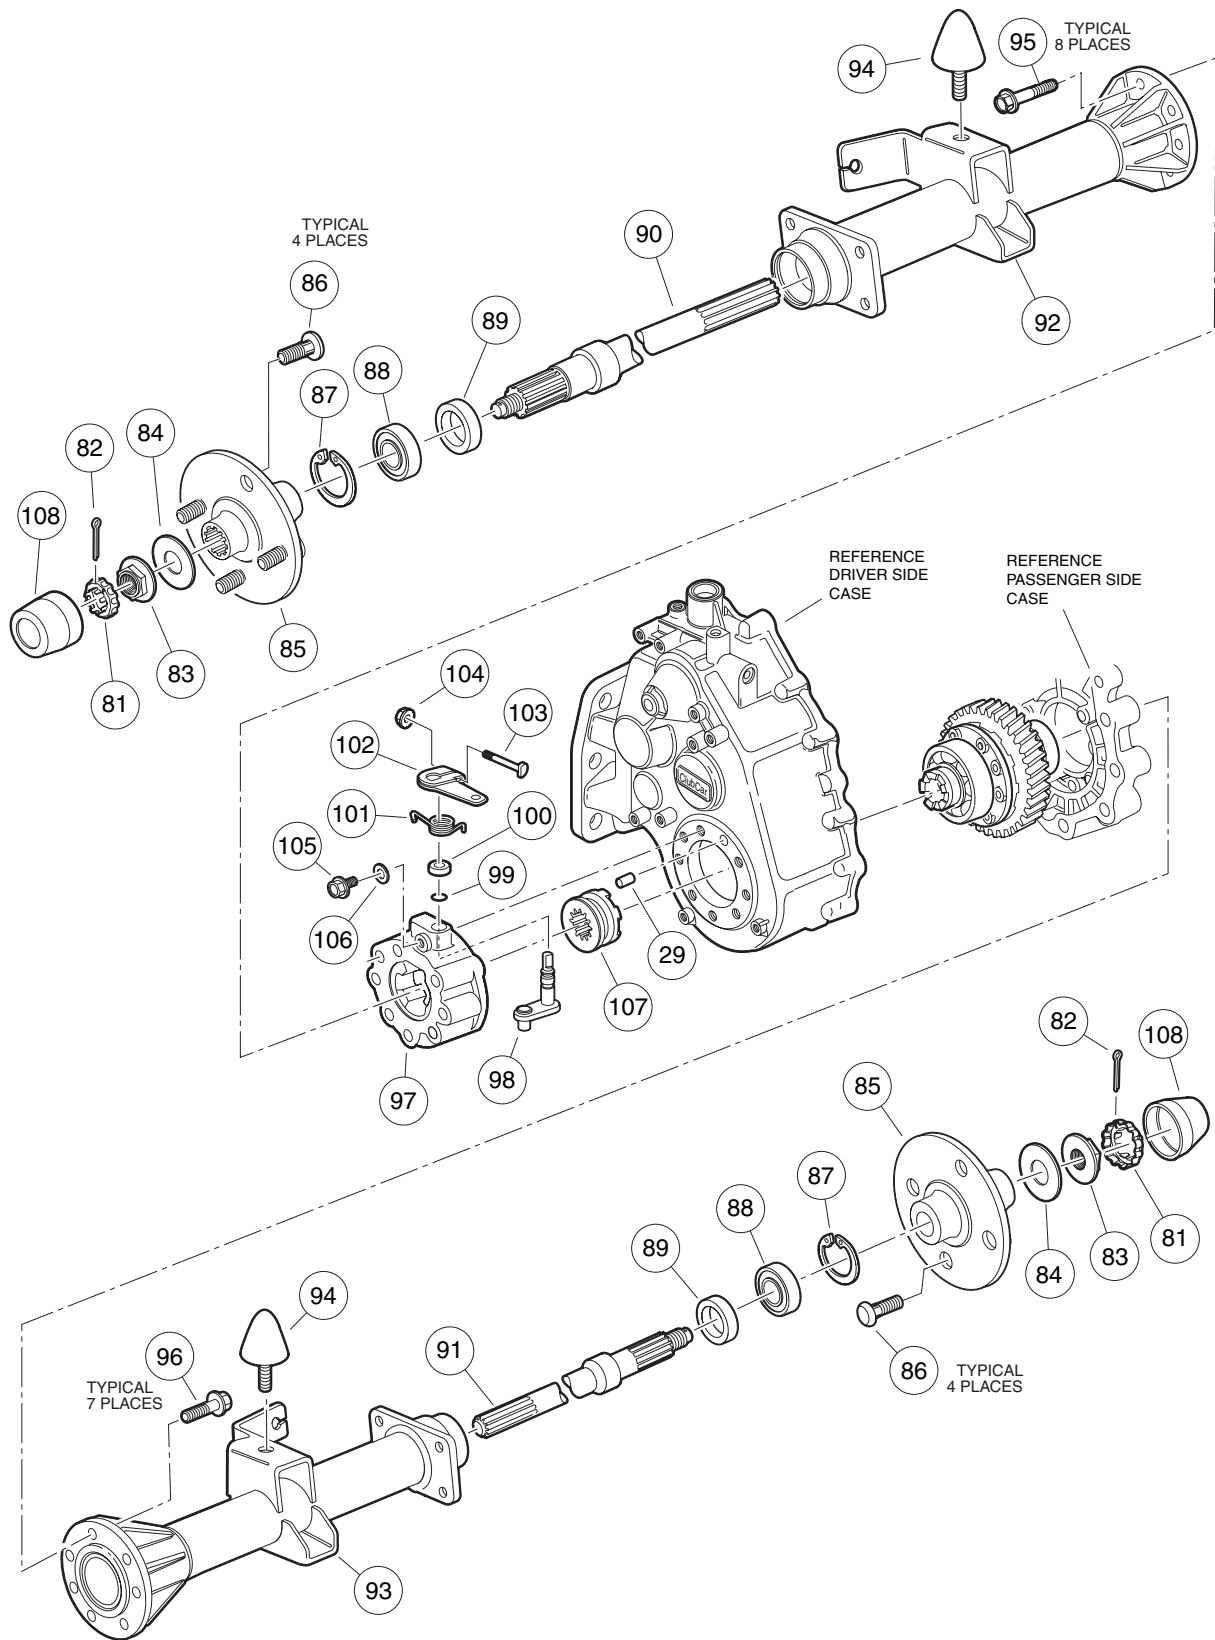


MC012C-BS00 BEGINNING WITH SERIAL NUMBER MC012C3J0001 – DIFFERENTIAL LOCK AND AXLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
81	<u>102276001</u>	Cap, Locking	2
82	<u>101838801</u>	Pin, Cotter	2
83	<u>102269201</u>	Nut, Axle Flange Retaining	2
84	<u>102269301</u>	Washer, Flat	2
85	<u>102269101</u>	Hub (includes item 86)	2
86	<u>1013787</u>	Stud, Lug	4
87	<u>1013792</u>	Ring, Retaining	2
88	<u>1011291</u>	Bearing, Outer Axle Tube	2
89	<u>102269401</u>	Seal, Oil	2
90	<u>102269001</u>	Assembly, Axle, Driver-Side	1
91	<u>102268901</u>	Assembly, Axle, Passenger-Side	1
92	<u>102452701</u>	Assembly, Axle Tube, Driver-Side (LH).....	1
93	<u>102452601</u>	Assembly, Axle Tube, Passenger-Side (RH)	1
94	<u>102188701</u>	Stop, Axle	2
95	<u>102019601</u>	Bolt, M10 x 1.5 x 70 mm	8
96	<u>102031901</u>	Bolt, M10 x 1.5 x 30 mm	7
97	<u>102020101</u>	Housing, Differential Lock	1
98	<u>102020201</u>	Lever, Differential Lock	1
99	<u>102020301</u>	O-Ring, Differential Lock	1
100	<u>102020401</u>	Spacer, Differential Lock	1
101	<u>102020501</u>	Spring, Differential Lock	1
102	<u>102020901</u>	Arm, Differential Lock Lever	1
103	<u>1016686</u>	Bolt, Differential Lock Pinch	1
104	<u>1016547</u>	Nut, Flanged, M6 x 1	1
105	<u>102022301</u>	Screw, M6 x 1 x 10 mm	1
106	<u>102022401</u>	Washer, M6	1
107	<u>102267701</u>	Cog, Differential Lock, 15 Tooth	1
108	<u>102274101</u>	Cap, Rubber Center	2

12

G

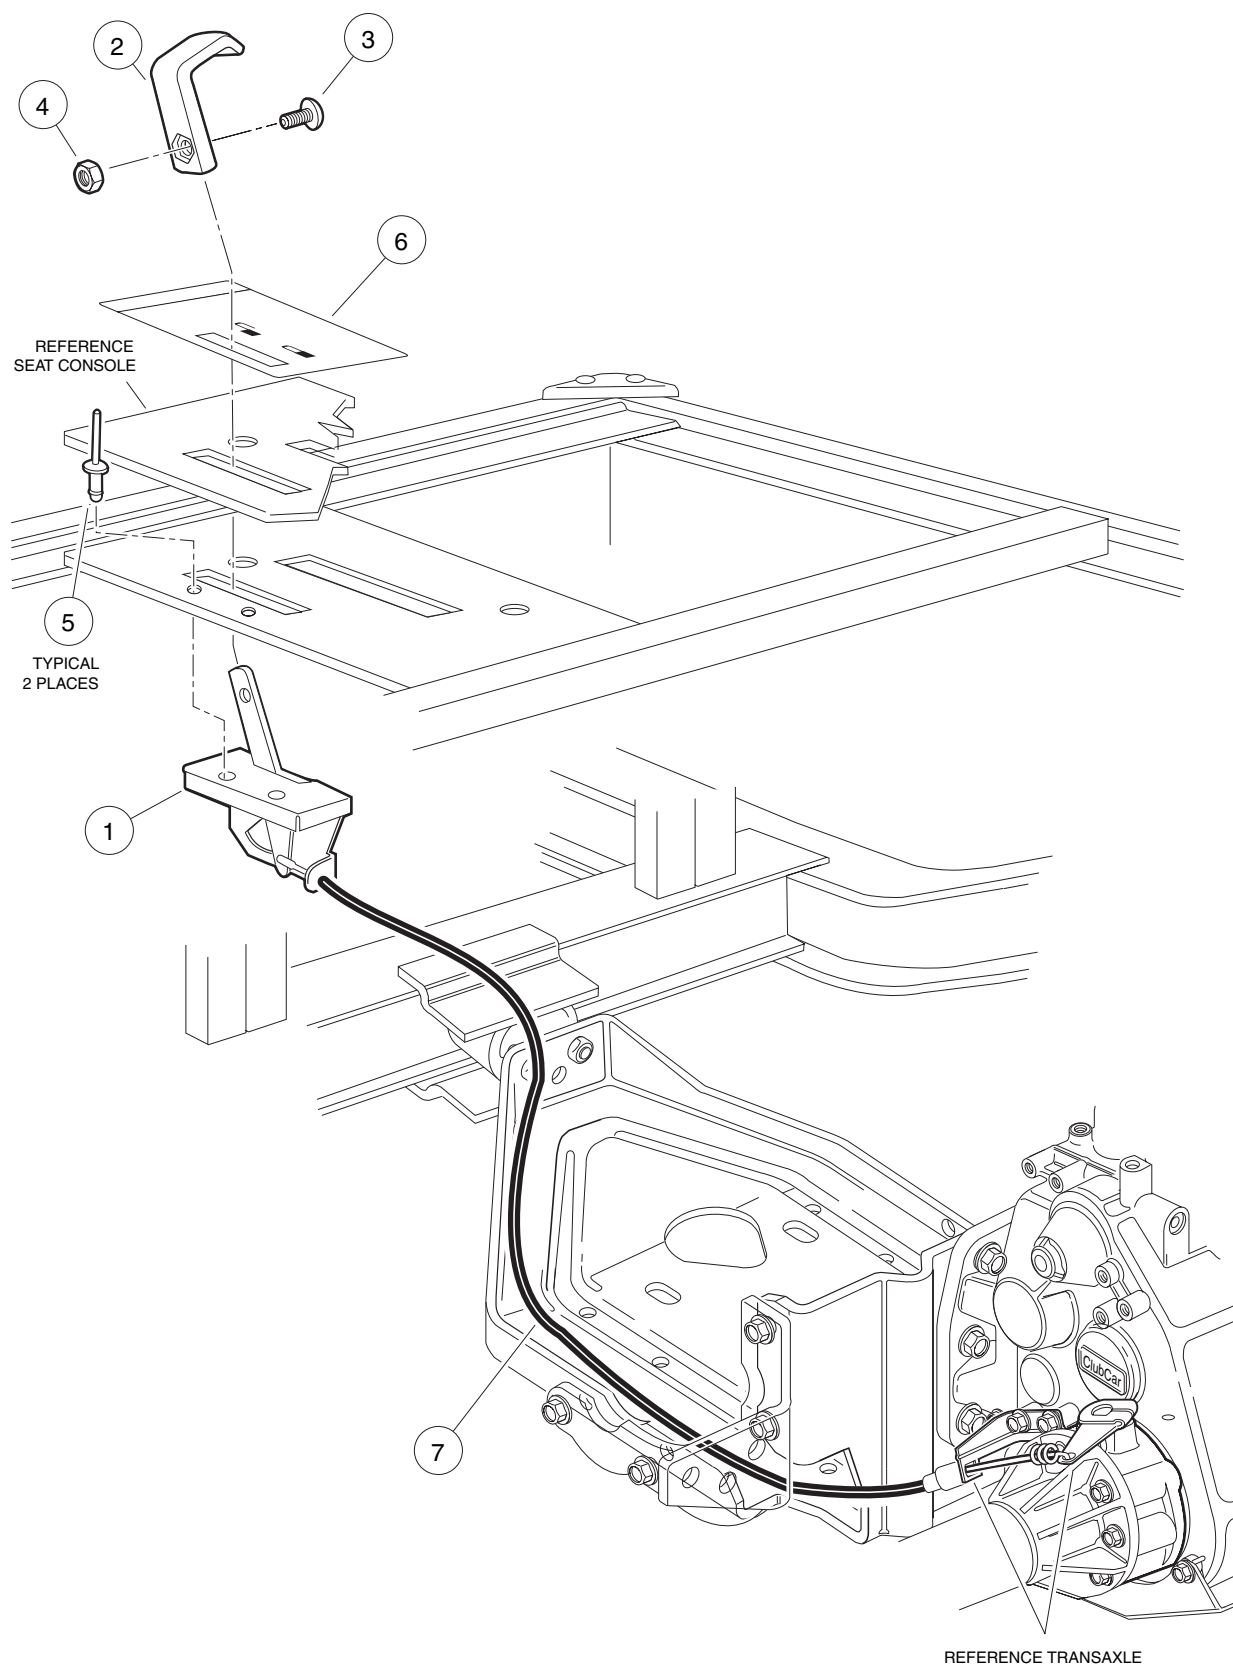

UNITIZED TRANSAXLE – DIFFERENTIAL LOCK CABLE ASSEMBLY AND SHIFTER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102025101</u>	Control, Differential Lock	1
2	<u>102022201</u>	Handle, Differential Lock	1
3	<u>1011017</u>	Bolt, Hex Washer-Head, #8-32 x 3/8	1
4	<u>1011571</u>	Nut, Hex, #8-32	1
5	<u>101880901</u>	Rivet, Pop	2
6	<u>102046601</u>	Decal, Differential Lock Control Warning	1
7	<u>102031201</u>	Cable, Differential Lock (Turf 272 and Carryall 272)	1
7	<u>102316701</u>	Cable, Differential Lock (Carryall 472)	1

12
G

12

G

MAINTENANCE AND SERVICE TOOLS

13

G

E


D

13

G

E

D

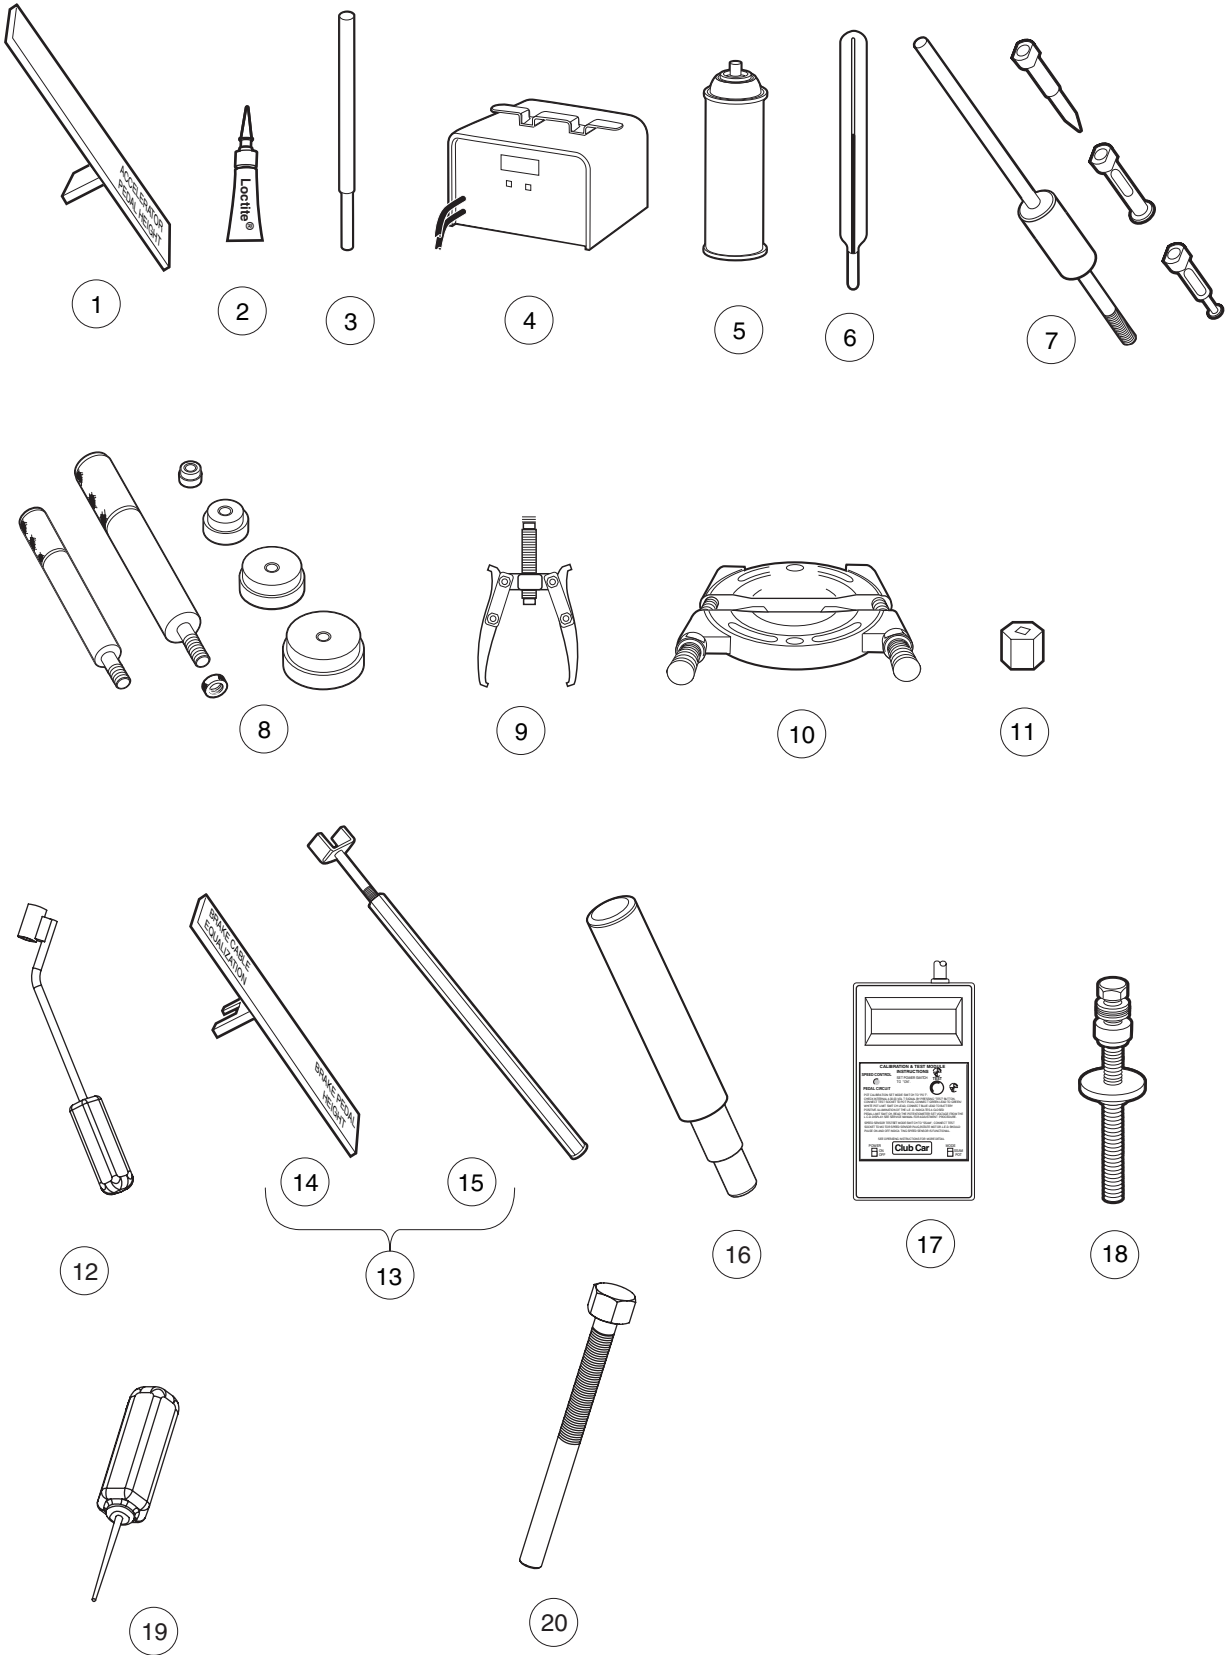

MAINTENANCE AND SERVICE TOOLS


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	13 G E D
		1 2 3 4 The following tool list includes all tools available from Club Car for maintenance and service procedures for gasoline, electric, and/or diesel vehicles, both past and present models. Be sure to carefully examine the tool list for applicability to your vehicle before ordering.				
1	<u>101871001</u>	Accelerator Pedal Adjustment Tool		1	1	
2	<u>101813202</u>	Adhesive, Guide Ring, 3-Gram Tube			1	
3	<u>101641202</u>	Arbor		1		
4	<u>101831901</u>	Battery Discharge Machine, 36/48 Volt			1	
5	<u>1014305</u>	Battery Terminal Protector Spray	1	1	1	
6	<u>1011767</u>	Battery Thermometer	1	1	1	
7	<u>1016417</u>	Bearing and Oil Seal Remover Assembly	1	1	1	
8	<u>1016416</u>	Bearing Driver Set	1	1	1	
9	<u>1012811</u>	Bearing Puller	1	1	1	
10	<u>1012812</u>	Bearing Puller Wedge Attachment	1	1	1	
11	1013582	Brake Adjustment Tool (used only on vehicles with manually adjusted mechanical brakes)		1	1	
12	<u>102555501</u>	Brake Cable Release Tool	1	1	1	
13	102249901	Brake Pedal Adjustment Tool Kit (used for the Carryall Electric Industrial Truck only) (includes items 14 and 15).....			1	
14	****	Brake Pedal Adjustment Tool			1	
15	****	Brake Pedal Tension Tool			1	
16	102669601	Connecting Rod Small End Bushing Tool (for Kubota D722 Diesel Engines)	1			
17	<u>101887101</u>	Calibration Test Module			1	
18	<u>101808401</u>	Cam Installation Tool		1		
19	<u>102562401</u>	Charger Bezel Tool			1	
20	<u>102686101</u>	Clutch Removal Tool (for XRT 1500, Carryall 294, and Bobcat 2200 Vehicles)	1	1		
		Please refer to the maintenance and service manual for proper tool application. **** Special order item available upon request				

13

G


E

D

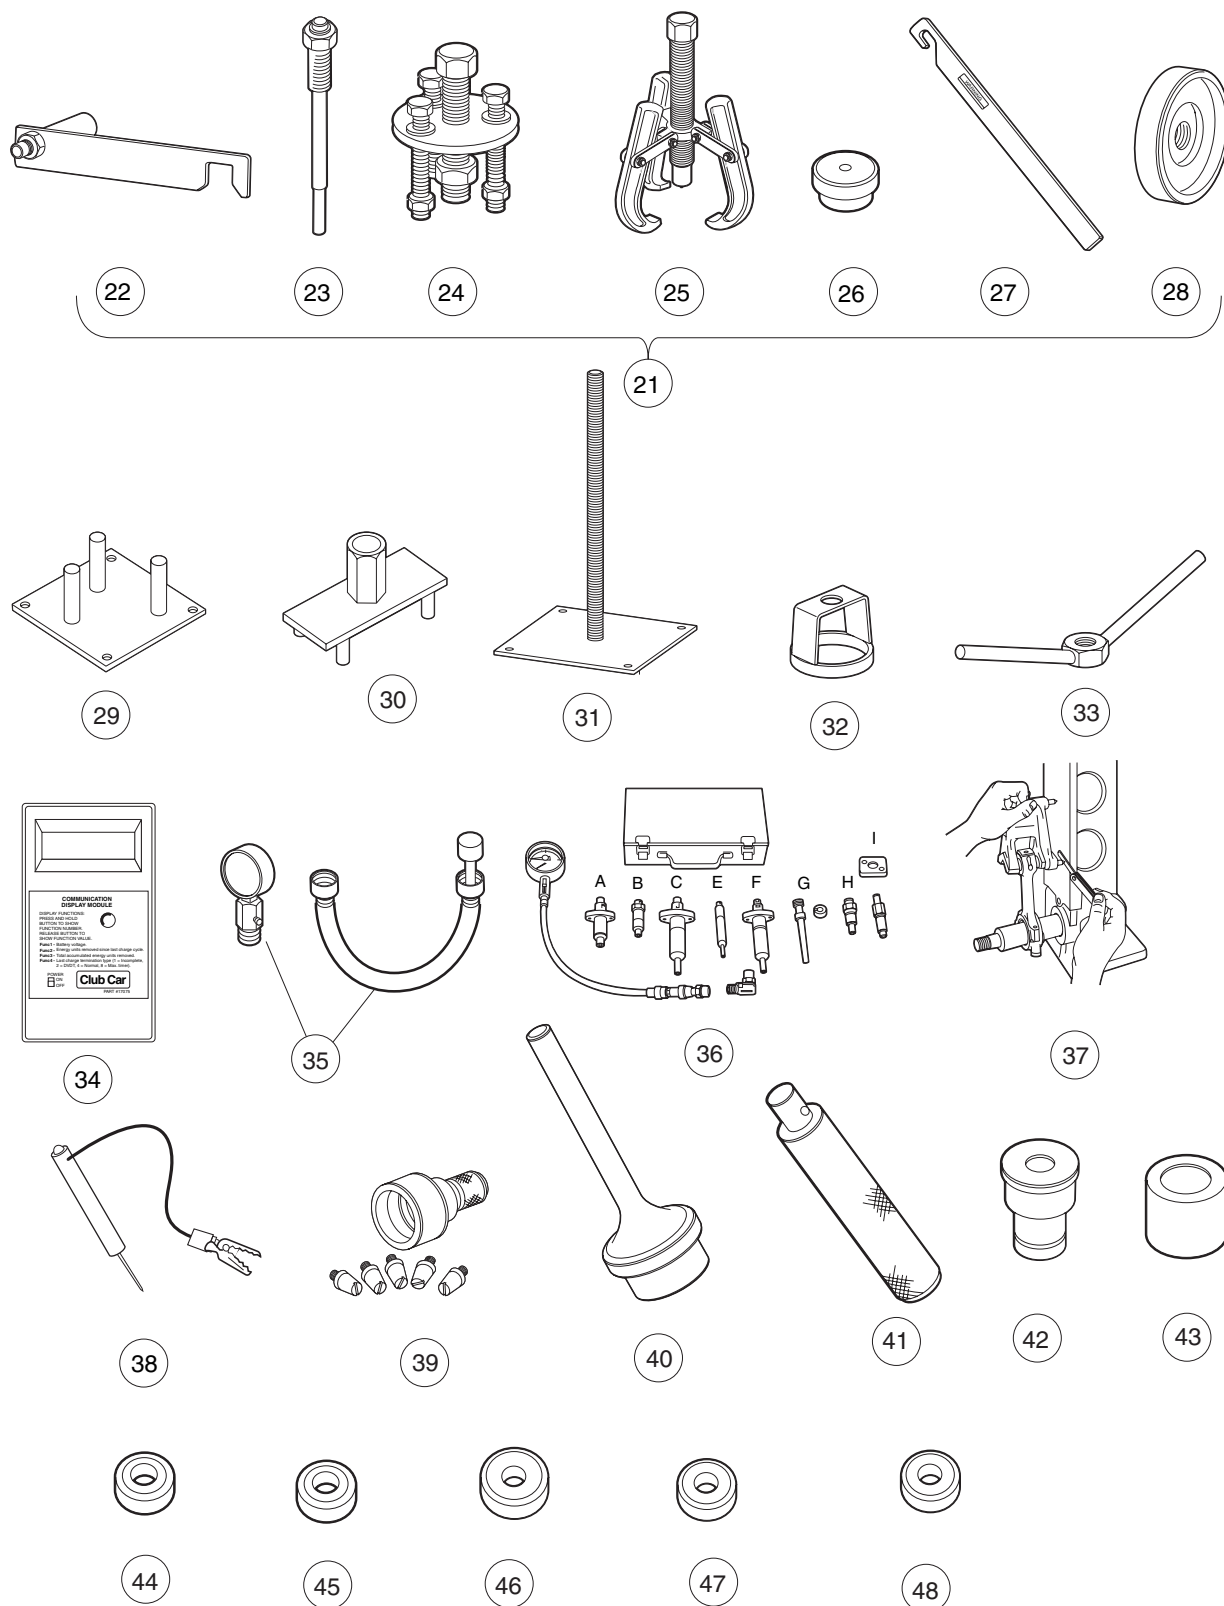

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	13 G E D
		1 2 3 4				
21	<u>1014510</u>	Clutch Tool Kit (includes items 22 - 28)		1		
22	<u>1014498</u>	Clutch Alignment Tool (for pre-unitized transaxle vehicles built prior to 1997 model year)		1		
23	<u>1014496</u>	Drive Clutch Puller (for Kawasaki engines only)		1		
24	<u>1014497</u>	Drive Clutch Hub Puller (for Kawasaki engines only)		1		
25	<u>1014508</u>	Driven Clutch Cam Puller (for Kawasaki engines only)		1		
26	<u>1014507</u>	Driven Clutch Puller Plug (for Kawasaki engines only)		1		
27	<u>1015524</u>	Drive Clutch Holder Tool Assembly (for Kawasaki engines only)		1		
28	<u>101809101</u>	Press Weldment (for Kawasaki engines only)		1		
29	<u>102601501</u>	Clutch, Drive, Fixed Sheave Tool (for XRT 1500, Carryall 294, and Bobcat 2200 Vehicles)	1	1		
30	<u>102607501</u>	Clutch, Drive, Spider Removal Tool (for XRT 1500, Carryall 294, and Bobcat 2200 Vehicles)	1	1		
31	<u>102603501</u>	Clutch, Driven, Spring Compression Base (for use with items 32 and 33) (for XRT 1500, Carryall 294, and Bobcat 2200 Vehicles) ...	1	1		
32	<u>102605201</u>	Clutch, Driven, Spring Compression Collar (for use with items 31 and 33) (for XRT 1500, Carryall 294, and Bobcat 2200 Vehicles) ...	1	1		
33	<u>102606101</u>	Clutch, Driven, Spring Compression Nut (for use with items 31 and 32) (for XRT 1500, Carryall 294, and Bobcat 2200 Vehicles) ...	1	1		
34	101831801	Communication Display Module			1	
35	101641002	Compression Gauge and Adapter		1		
36	<u>102669001</u>	Compression Tester (for Kubota D722 Diesel Engines).....	1			
37	102669201	Connecting Rod Alignment Tool (for Kubota D722 Diesel Engines)	1			
38	1011273	Continuity Tester		1	1	
39	102668901	Crank Sleeve Setter (for Kubota D722 Diesel Engines)	1			
40	102669501	Crankshaft Bearing Replacement Tool (for Kubota D722 Diesel Engines)	1			
41	102674001	Crankshaft Main Bearing Driver (for use with items 42 and 43) (for Honda GX620 Gasoline Engines)		1		
42	102674101	Crankshaft Main Bearing Driver Attachment (for use with Honda GX620 Gasoline Engines)		1		
43	102674201	Crankshaft Main Bearing Pilot Attachment (for Honda GX620 Gasoline Engines)		1		
44	102675201	Cutter, Valve Seat Exhaust, 32 Degree (requires item 59) (for Honda GX620 Gasoline Engines)		1		
45	102675301	Cutter, Valve Seat Intake, 32 Degree (requires item 59) (for Honda GX620 Gasoline Engines)		1		
46	102675401	Cutter, Valve Seat, 60 Degree (requires item 59) (for Honda GX620 Gasoline Engines)		1		
47	102675001	Cutter, Valve Seat, Exhaust, 45 Degree (requires item 59) (for Honda GX620 Gasoline Engines)		1		
48	102675101	Cutter, Valve Seat, Intake, 45 Degree (requires item 59) (for Honda GX620 Gasoline Engines)		1		
		Please refer to the maintenance and service manual for proper tool application.				

 



49




50

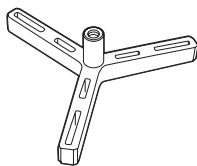


51

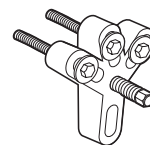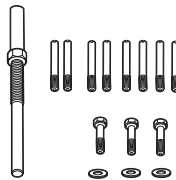


52

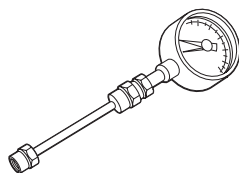

53

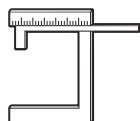


54

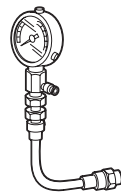

55




56

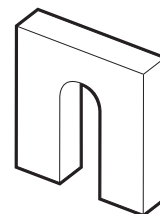


57



 
58




59

 

60

 


61

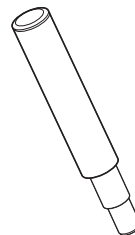


62




63

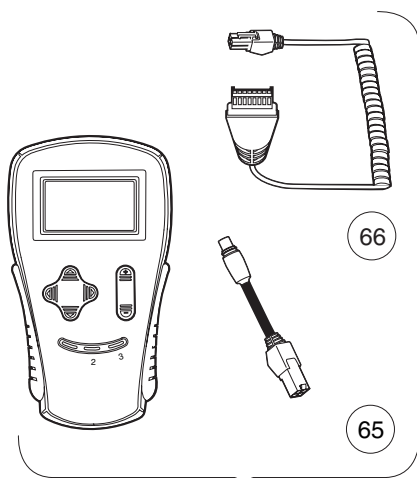

64

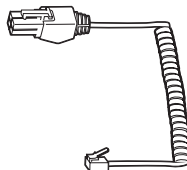

67

 

68



69

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC
		1 2 3 4			
49	<u>1012151</u>	Dry Moly Lubricant	1	1	1
50	102674501	Flywheel Clutch Holder (for Honda GX620 Gasoline Engines)		1	
51	102668601	Flywheel Puller (for Kubota D722 Diesel Engines)	1		
52	<u>1016627</u>	Flywheel Puller Kit (for Kawasaki Engines)		1	
53	102669801	Fuel Injection Pump Pressure Tester (for Kubota D722 Diesel Engines)	1		
54	<u>102669901</u>	Gauge, Carburetor Float Level (for Honda GX620 Gasoline Engines)		1	
55	102674701	Gauge, Oil Pressure (for Honda GX620 Gasoline Engines)		1	
56	102670001	Gauge, Oil Pressure, Attachment (for Honda GX620 Engines)		1	
57	<u>1016418</u>	Gear Yoke	1	1	1
58	<u>101933101</u>	Governor Shaft Installation Tool (for Kawasaki Engine Vehicles) ...		1	
59	102674901	Holder, Valve Seat Cutter (for use with items 44 through 48) (for Honda GX620 Gasoline Engines)		1	
60	102169401	Hydraulic Brake Adjuster (for gasoline vehicles equipped with hydraulic brakes, except XRT 1500, Carryall 294, and Bobcat 2200)		1	
61	<u>1011478</u>	Hydrometer	1	1	1
62	102669701	Idle Gear Bushing Replacement Tool (for Kubota D722 Diesel Engines)	1		
63	<u>1013593</u>	Internal Retaining Ring Pliers	1	1	1
64	<u>102248803</u>	IQ Display Module (IQDM) Kit (for IQ System vehicles only)			1
65	<u>102251501</u>	Adaptor, Cable			1
66	<u>102241502</u>	IQDM Series 2 Cable			1
67	<u>102241501</u>	IQDM Series 1 Cable (replacement)			1
68	<u>101928701</u>	Liquid Gasket (transaxle case)	1	1	1
69	<u>102243402</u>	Moly-Teflon Lubricant (4-oz. (113-gram) tube)			1
Please refer to the maintenance and service manual for proper tool application.					

13


G

E

D

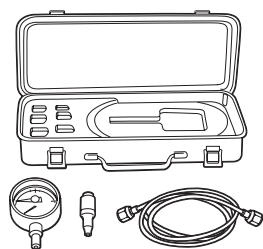


70

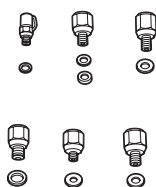


71




72

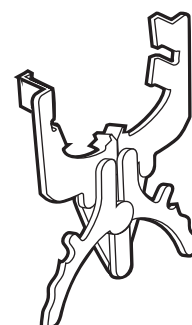

73

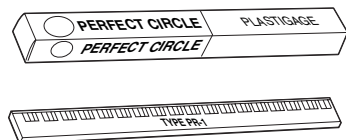

74

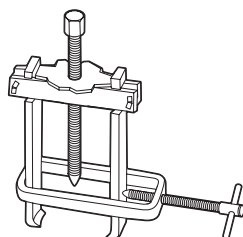


75



76



 77



78



 
79




80



81




82

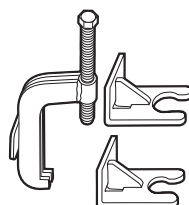


83




84

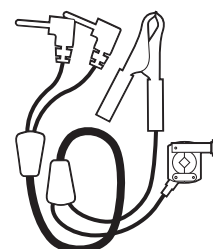


85

 


86

 

87

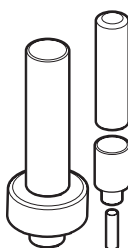

88

 

90




91



92



93

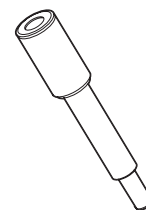

94

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	13 G E D
		1 2 3 4				
70	102669101	Oil Pressure Tester (for Kubota D722 Diesel Engines)	1			
71	<u>101997201</u>	Paint, Touch-Up – Beige*		1	1	
71	<u>101997207</u>	Paint, Touch-Up – Black*		1	1	
71	<u>101997212</u>	Paint, Touch-Up – Burgundy*		1	1	
71	<u>101997211</u>	Paint, Touch-Up – Classic Blue (Navy)*		1	1	
71	<u>101997205</u>	Paint, Touch-Up – Dark Gray*	1	1	1	
71	<u>101997209</u>	Paint, Touch-Up – Dark Green*	1	1	1	
71	<u>101997204</u>	Paint, Touch-Up – Gray*	1	1	1	
71	<u>101997203</u>	Paint, Touch-Up – Red*	1	1	1	
71	<u>101997206</u>	Paint, Touch-Up – Royal Blue (Pacific Blue)*		1	1	
71	<u>101997202</u>	Paint, Touch-Up – White*	1	1	1	
72	<u>1016414</u>	Piston Ring Compressor Kit (FE290, FE350 and FE400 engines) .		1		
73	<u>1016415</u>	Piston Ring Pliers (for Kawasaki Engines)		1		
74	102669301	Plastigage (for Kubota D722 Diesel Engines)	1			
75	<u>102668801</u>	Puller, Special Use (for Kubota D722 Diesel Engines)	1			
76	<u>1012549</u>	Retaining Ring Pliers, 45° External	1	1	1	
77	<u>1012560</u>	Retaining Ring Pliers, 90° Internal	1	1	1	
78	<u>101823101</u>	Safety First Card (50 per pack)	1	1	1	
79	<u>1012809</u>	Seal Puller	1	1	1	
80	<u>102330901</u>	Spanner Wrench (for coil over shock front suspension vehicles only)	1	1		
81	<u>1014264</u>	Steering Column Bearing Press Tool		1	1	
82	<u>1014259</u>	Steering Column Retaining Ring Tool		1	1	
83	102061201	Steering Wheel Puller Tool	1	1	1	
84	<u>AM10753</u>	Tachometer (includes gasoline engine pick up lead only)	1	1		
85	<u>AM10771</u>	Tachometer Diesel Probe (for use with item 84)	1			
86	<u>1014162</u>	Transaxle Axle Seal Tool		1		
87	<u>1014161</u>	Transaxle Pinion Seal Tool		1		
88	<u>1014115</u>	Transmission Tool Kit		1		
89	<u>101611003</u>	Tune-Up Kit, All OHV (for Kawasaki Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
90	<u>1016413</u>	Valve Clearance Adjuster Screw Holder (for FE290 engines only) .		1		
91	<u>102674601</u>	Valve Guide Driver (for Honda GX620 Gasoline Engines)		1		
92	101641201	Valve Guide Reamer (FE290, FE350, and FE400 only)		1		
93	<u>102674401</u>	Valve Guide Reamer, 6.6 mm (for Honda GX620 Gasoline Engines)		1		
94	102669401	Valve Guide Replacement Tool (for Kubota D722 Diesel Engines)	1			
		* Item 71 is not for use on Surlyn® body material which is used on Precedent vehicles.				

13


G

E


D




95

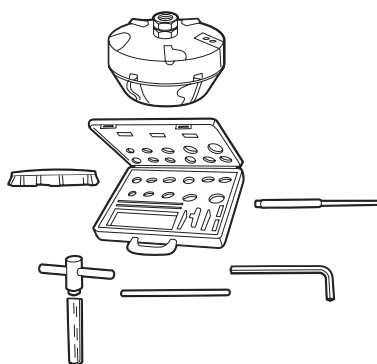


96

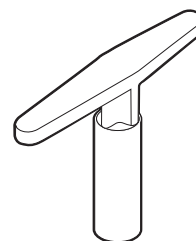


97

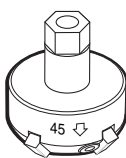


98

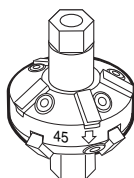


99

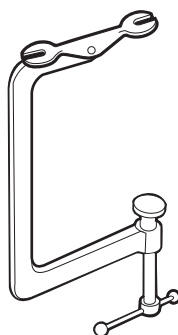

100

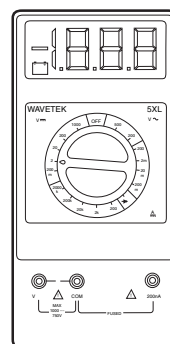

101

 

102

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	13 G E D
		1 2 3 4				
95	<u>1016552</u>	Valve Seat Cutter Guide		1		
96	102668701	Valve Seat Cutter Set (for Kubota D722 Diesel Engines)	1			
97	<u>1016551</u>	Valve Seat Cutter T-Wrench		1		
98	<u>1016553</u>	Valve Seat Cutter, 45° (32 mm diameter) (for FE290 engines only)		1		
99	<u>1016554</u>	Valve Seat Cutter, 45°/30° (35 mm diameter)		1		
100	<u>101641101</u>	Valve Spring Compressor		1		
101	1011480	Volt Ohm Meter	1	1	1	
102	102674801	Wrench, Valve Clearance Adjustment (for Honda GX620 Gasoline Engines)		1		

13

G

E

D

INDEX

Part Number and Page

AM10080	12-11	8248	7-15, 9-3, 9-5	1012438	9-15, 9-17
AM10081	12-11	8251	1-7	1012528	10-3, 10-5
AM10419	11-5	8450	11-3	1012549	13-9
AM10724	8-5, 8-17	8639	7-21	1012560	13-9
AM10753	13-9	8717	7-15, 7-17, 7-19, 12-3, 12-9	1012565	6-3
183	4-9, 4-11, 1-3, 7-21, 9-15, 9-17, 11-3, 12-3, 12-9	8754	1-11, 1-15, 4-13, 5-5, 6-3, 6-7, 6-9, 7-27	1012566	6-3
304	1-19, 1-21	8755	1-11, 1-15	1012571	8-27
320	6-3	8935	1-5	1012594	7-15
332	1-3, 1-5, 1-7, 1-9, 1-13, 1-17, 1-19, 1-21, 5-5, 9-5, 9-15, 9-17, 10-3, 10-5	8990	6-5, 7-23	1012604	6-3
334	1-9, 5-5, 6-3, 6-5	1010028	6-7	1012605	6-3
357	1-19	1010138	6-5	1012649	9-3, 9-5
403	1-11, 1-15	1010145	6-9	1012711	12-3, 12-9
451	1-5, 10-3, 10-5	1010150	6-7	1012714	12-5, 12-11
705	1-11, 1-15, 1-19, 4-13, 7-27	1010434	1-7, 1-13, 1-17	1012740	12-5, 12-11
706	1-19	1010435	1-11, 1-15	1012741	12-5, 12-11
808	6-9	1010543	1-7	1012747	12-5, 12-11
1016	7-21	1010545	1-3	1012748	12-5, 12-11
1028	5-3	1010577	8-27	1012752	12-3, 12-9
1032	1-13, 1-17	1010829	4-5, 4-13	1012809	13-9
1035	1-9	1010878	1-9, 5-3	1012811	13-3
1231	1-13, 1-17	1010909	7-21	1012812	13-3
1241	1-3, 1-13, 1-17, 1-19, 1-21, 4-7, 5-3, 5-5, 7-17, 7-19, 7-27, 7-29, 10-5	1010921	1-3, 5-3	1012830	1-5, 7-27, 10-3, 10-5
1242	1-13, 1-17, 1-19, 1-21, 7-17, 7-19, 7-27	1010934	1-13, 1-17, 1-19, 1-21, 4-7, 6-7, 7-29	1012896	12-3, 12-9
1606	1-3, 9-15	1010954	7-15, 7-17, 7-19, 12-3, 12-9	1012981	8-5, 8-17
1624	5-5, 6-5	1010984	2-3, 4-3, 4-5, 6-7	1012986	7-23
1631	9-15, 9-17	1011017	12-15	1012987	7-15
7048	6-7	1011084	5-5	1013001	7-25
7049	1-13, 1-17	1011273	13-5	1013003	7-25
7173	7-29	1011291	12-7, 12-13	1013005	7-25
7174	1-3, 1-13, 1-17, 1-19, 1-21, 6-3, 7-27, 9-13, 10-3, 10-5	1011402	5-3	101301102	7-25
7270	6-7, 6-9	1011415	6-9	1013035	6-5
7310	2-3	1011478	13-7	1013042	6-5
7311	1-5	1011480	13-11	1013044	6-5
7330	12-5, 12-11	1011553	1-19, 1-21, 3-7, 3-11	1013051	6-5
7335	12-5, 12-11	1011571	12-15	1013052	6-5
7410	1-3	1011652	1-5	1013061	12-3, 12-9
7473	1-3, 1-5, 1-11, 1-15, 4-7, 5-3, 5-5, 6-7, 7-17, 7-19, 7-29	1011694	5-5	1013309	1-7
7479	4-9, 4-11	1011697	1-5, 9-13	1013311	1-7
7532	1-15	1011700	5-5	1013312	1-7
7716	5-3, 5-5	1011734	5-5	1013317	1-17
7818	7-17, 7-19	1011767	13-3	1013357	7-21
7847	1-5, 1-9, 10-3, 10-5	1011988	9-3	1013366	4-5, 4-13
7893	7-15, 7-17, 7-19, 7-21	1011990	1-13, 1-17, 1-19, 4-13	1013461	7-21
7973	9-15, 9-17	1012151	13-7	1013483	1-19
8057	7-15, 7-17	1012164	8-27	1013531	4-7, 4-13
8058	7-15, 7-17	1012285	1-3, 1-19, 1-21, 4-11, 7-15, 9-3, 9-5, 9-13, 12-3, 12-9	1013582	13-3
8067	6-7	1012295	7-17, 7-19	1013587	7-15
8168	9-17	1012303	1-11, 1-15, 6-9	1013589	7-15, 7-17, 7-19
8233	1-9, 1-13, 1-17, 1-19, 1-21, 4-9, 4-11, 5-5, 7-15, 9-5, 12-3, 12-9	1012328	7-29	1013590	7-15
		1012333	7-15	1013591	7-15
		1012382	7-5, 7-9, 7-13	1013593	13-7
		1012412	1-5	1013609	7-17, 7-19
		1012431	7-15, 7-17	1013630	9-5
				1013687	9-3, 9-5
				1013692	9-3, 9-5
				1013700	9-13

INDEX

1013734	1-5, 10-3, 10-5	1014508	13-5	1015649	8-3, 8-15
1013746	9-3, 9-5, 9-11	1014510	13-5	1015737	7-5, 7-9, 7-13, 7-17, 7-19
1013770	12-5, 12-11	1014513	1-13, 1-17	1015741	7-17, 7-19
1013772	12-5, 12-11	1014514	1-13, 1-17	1015752	7-17, 7-19, 9-15, 9-17
1013774	12-5, 12-11	1014523	9-3	1015769	7-5, 7-9, 7-13
1013787	4-3, 6-7, 12-7, 12-13	1014524	9-3, 9-5	1015777	7-17, 7-19
1013792	12-7, 12-13	1014537	1-13, 1-17	1015814	10-3, 10-5
1013857	7-23	1014555	6-7	1015845	10-5
1013871	5-5	1014727	7-15	101584502	9-13
1013924	4-3, 4-5, 8-27	1014807	7-15, 7-17	1015878	7-17
1014007	4-9, 4-11, 12-3, 12-9	1014808	7-17	1015932	7-27
1014049	11-3	1014928	9-3	1015969	8-3, 8-15
1014050	11-3	1014948	7-19	1016004	9-3
1014052	11-3	1015064	7-15	1016060	1-9
1014055	11-3	1015075	10-3	1016074	7-27
1014056	11-3	1015137	9-3, 9-5, 9-11	1016078	1-9
1014057	11-3	1015139	9-3, 9-5, 9-17	101609401	3-3, 3-5, 3-9
1014058	11-3	1015143	9-3, 9-5	101611003	13-9
1014059	11-3	1015188	9-3, 9-5	1016154	6-3
1014062	11-3	101524002	7-27	1016156	6-3
1014065	7-15, 7-17, 7-19	1015245	1-13, 1-17	1016201	1-9, 7-15
1014070	11-5	1015252	1-11	1016214	6-3
1014072	11-5	1015277	1-9	1016219	6-3
1014078	11-5	1015313	1-13, 1-17	1016289	11-3
1014080	11-5	1015332	7-5, 7-9, 7-13, 8-3, 8-15	1016337	12-5, 12-11
1014089	7-15	1015345	7-17, 7-19	1016338	12-5, 12-11
1014115	13-9	1015356	1-11, 1-15	1016341	12-3, 12-9
1014116	9-3, 9-5	1015363	1-13, 1-17	1016342	7-15
1014119	7-5, 7-9, 7-13, 7-17	1015365	1-17	1016346	6-7
1014125	6-3	1015367	1-17	1016356	7-21
1014126	6-3	1015371	7-17, 7-19	1016380	7-5, 7-9, 7-13
1014136	4-9, 4-11	1015372	7-17, 7-19	1016387	6-7
1014145	7-15, 7-17, 7-19	1015373	7-17, 7-19	1016389	6-7
1014161	13-9	1015390	1-13, 1-17	101641002	13-5
1014162	13-9	1015391	1-11, 1-15	101641101	13-11
1014213	6-3	1015399	1-11, 1-13, 1-15, 1-17	101641201	13-9
1014214	6-3	1015400	1-11, 1-13, 1-15, 1-17	101641202	13-3
1014217	6-3	1015405	7-17, 7-19	1016413	13-9
1014259	13-9	1015409	7-15	1016414	13-9
1014264	13-9	1015413	1-17	1016415	13-9
1014287	11-3	1015414	1-17	1016416	13-3
1014288	7-29	1015426	9-15, 9-17	1016417	13-3
1014289	7-25	101542901	1-11	1016418	13-7
1014305	13-3	101543701	3-3, 3-5, 3-9	1016423	7-17, 7-19
1014306	1-19, 1-21	1015445	1-19	101642575	9-7
1014321	1-5, 1-7, 1-13, 1-17	1015453	6-9	101642578	9-7
1014375	7-29	101547601	3-7, 3-11	101642580	9-7
1014387	1-5, 1-7, 1-13, 1-17	1015507	1-11, 1-15	101642582	9-7, 9-9
1014415	1-13, 1-17	1015524	13-5	101642585	9-7, 9-9
1014453	11-3	1015530	1-19, 1-21	101642588	9-9
1014454	11-5	101553901	1-13, 1-17, 3-3, 3-5, 3-9	1016429	8-7, 8-19
1014471	1-11, 1-15	1015583	1-11, 1-15, 6-9	1016432	8-7, 8-19
1014496	13-5	1015597	6-7	1016436	8-9, 8-21
1014497	13-5	1015606	1-17	1016437	9-7, 9-9
1014498	13-5	101562710	1-7	1016438	9-11
1014507	13-5	101564505	1-7	1016440	9-11

INDEX

1016441	9-11	1016564	8-11, 8-23	1017443	8-11, 8-23
1016442	8-9, 8-21	1016566	8-9, 8-21	1017444	8-9, 8-21
1016444	9-11	1016569	8-9, 8-21	1017445	8-9, 8-21
1016445	8-5, 8-17	1016570	8-7, 8-19	1017446	8-9, 8-21
1016449	8-9, 8-21	1016571	8-13, 8-25	1017447	8-11, 8-23
1016450	8-9, 8-21	1016572	9-11	1017448	8-5, 8-17
1016452	8-9, 8-21	1016574	9-9	101744901	8-13
1016454	8-11, 8-23	1016576	8-7, 8-19, 12-3, 12-9	101744902	8-13
1016455	8-5, 8-17	1016578	8-5, 8-17	1017450	8-13, 8-25
1016456	8-3, 8-5, 8-15, 8-17	1016579	8-5, 8-17	101745101	8-13
1016457	8-7, 8-19	1016581	8-7, 8-19	101745102	8-13
1016458	8-9, 8-21	1016582	9-11	1017453	8-13
1016467	8-7, 8-19	1016583	8-9, 8-21	1017454	8-9, 8-21
1016470	8-13, 8-25	1016584	8-11, 8-23	1017455	8-5, 8-17
1016472	8-11, 8-23	1016585	9-7, 9-9	1017456	8-7, 8-19
1016473	8-7, 8-19	1016586	8-5, 8-17	101745701	8-13, 8-25
1016474	8-9, 8-21	1016587	8-5, 8-17	101745702	8-13, 8-25
1016479	8-9, 8-21	1016588	8-5, 8-17	1017458	8-7, 8-19
1016480	9-11	1016627	13-7	1017460	8-7, 8-19
101648102	9-11	1016630	7-23	1017461	9-7, 9-9
101648203	8-7, 8-19	1016663	6-3	1017463	8-5, 8-17
1016483	8-9, 8-21	1016723	1-7	1017466	9-11
1016486	9-7, 9-9	101672701	7-15	1017471	8-13, 8-25
1016489	8-9, 8-21	101674702	5-5	1017472	8-11
101649002	9-11	1016751	1-7	1017473	8-9, 8-21
1016494	8-11, 8-23	101675506	1-7	1017474	8-3, 8-15
1016496	8-11, 8-23	101677705	1-7	1017475	8-3, 8-15
1016497	8-5, 8-17	1016801	11-3	1017476	8-3, 8-15
1016499	9-7, 9-9	1016849	7-21	1017483	8-13
1016501	9-7, 9-9	1016851	7-21	1017484	8-13
1016502	8-7, 8-19	1016859	7-21	1017486	8-3, 8-15
1016506	8-11, 8-23	1016879	7-21	1017487	8-11, 8-23
1016507	8-3, 8-15	1016880	7-21	1017490	8-5, 8-17
1016510	8-11	1016883	7-27	1017500	8-3, 8-15
1016513	12-3, 12-9	1016901	11-3	1017501	8-13, 8-25
1016517	8-9, 8-21	1016904	10-3, 10-5	1017502	8-13, 8-25
1016519	8-9, 8-21	1016947	7-15	1017503	8-13, 8-25
1016521	8-11, 8-23	101705701	3-9	1017504	8-11
1016531	8-3, 8-15	1017062	7-21	1017507	8-7, 8-19
1016535	8-11, 8-23	1017064	7-21	1017508	8-11, 8-23
1016537	8-7, 8-19	1017065	7-21	1017510	8-13, 8-25
1016538	8-11, 8-23	1017082	12-3, 12-9	1017511	8-23
1016539	8-3, 8-15	1017226	6-3	1017513	8-11
1016541	8-13, 8-25	1017231	12-3, 12-9	1017514	8-11, 8-23
1016544	8-5, 8-9, 8-11, 8-17, 8-21, 8-23	1017233	4-3, 4-5	101751801	8-11, 8-23
1016546	9-13	1017273	6-3	101751802	8-11, 8-23
1016547	8-3, 8-13, 8-15, 8-25, 9-11	1017315	6-3	101751803	8-11, 8-23
1016549	8-9, 8-21	1017327	11-5	1017653	7-25
1016551	13-11	1017378	5-5	1017686	11-5
1016552	13-11	1017380	5-5	1017689	10-3, 10-5
1016553	13-11	101738301	11-3	1017696	5-5
1016554	13-11	1017384	1-3	1017721	7-21
1016560	8-9, 8-21	1017424	5-5	101773301	8-13, 8-25
1016561	8-5, 8-17	1017434	8-9	101773302	8-13, 8-25
1016562	8-5, 8-13, 8-17, 8-25	1017435	8-9	101773303	8-13, 8-25
1016563	8-9, 8-21	1017442	8-7, 8-19	101773304	8-13, 8-25

INDEX

101773305	8-13, 8-25	101874901	7-25	101903501	9-13
101773306	8-13, 8-25	101875001	7-25	101905901	9-7, 9-11
101773307	8-13, 8-25	101875101	7-25	101909201	8-5, 8-17
101773308	8-13, 8-25	101875201	7-25	101909301	8-5, 8-17
101773309	8-13, 8-25	101875301	7-25	101909401	8-5, 8-17
101773310	8-13, 8-25	101875401	7-25	101909501	8-5, 8-17
101773311	8-13, 8-25	101875501	7-25	101915201	3-7, 3-11
101796201	5-5	101875601	7-25	101916001	8-13
1017976	1-15	101875701	7-25	101916101	8-3
101804301	9-15, 9-17	101875802	7-25	101916201	8-5, 8-17
101806102	4-7	101876001	7-25	101916301	8-5, 8-17
101808401	13-3	101876202	7-25	101916501	11-3
101809101	13-5	101876301	7-25	101916701	7-27, 11-3
101811301	9-17	101876402	7-25	101916901	5-5
101811901	9-15, 9-17	101876501	7-25	101917601	9-15, 9-17
101812301	9-15, 9-17	101877601	7-25	101921501	9-15, 9-17
101813001	9-15, 9-17	101877701	7-25	101921601	1-9
101813202	13-3	101878101	7-25	101922302	8-13
101817401	5-5	101879001	7-25	101925601	11-3
101818801	5-5	101879401	6-5	101925701	9-15, 9-17
101821501	9-15, 9-17	101879701	6-5	101926801	9-15
101822001	5-5	101879801	6-5	101926802	9-17
101823101	13-9	101879901	6-5	101926901	12-3, 12-9
101824401	9-3, 9-5	101880201	6-5	101927101	12-3, 12-9
101825101	3-3	101880901	4-13, 12-15	101927201	12-3, 12-9
101825102	3-3, 3-5, 3-9	101881101	8-5, 8-17	101927301	12-3, 12-9
101825701	9-17	101881701	9-15, 9-17	101927501	12-5, 12-11
101827101	8-27	101884801	8-27	101927601	12-5, 12-11
101831801	13-5	101886101	12-3, 12-9	101927701	12-5, 12-11
101831901	13-3	101887101	13-3	101927901	12-5, 12-11
101832001	4-13	101887601	1-5, 8-3, 8-15	101928001	12-5, 12-11
101832101	8-27	101888501	1-7	101928301	12-5, 12-11
101832202	9-13	101888502	1-7	101928601	12-3, 12-9
101832302	9-13	101889401	12-5, 12-11	101928701	12-3, 12-9, 13-7
101832601	8-27	101889901	12-5	101933101	13-7
101832701	8-27	101890001	12-5, 12-11	101933701	9-15, 9-17
101832901	8-27	101890101	12-3, 12-9	101939901	7-25
101833101	8-27	101890201	12-3, 12-9	101946201	1-7
101833301	8-27	101891301	12-3, 12-9	101953105	4-7, 5-3
101833401	11-5	101891601	12-5, 12-11	101954301	1-7
101833701	7-25, 7-27	101892001	12-5, 12-11	101955301	9-3
101833904	11-3	101892201	12-5, 12-11	101958102	9-15
101833908	11-3	101892301	12-5, 12-11	101958601	1-7
101834001	11-5	101892401	12-5, 12-11	101958602	1-9
101834601	8-27	101892901	12-3, 12-9	101960201	3-3, 3-5
101834801	12-3, 12-9	101893201	12-5, 12-11	101960501	3-7, 3-11
101835601	1-7, 1-9, 1-11, 1-15	101893801	12-3, 12-9	101963301	1-7
101836201	11-5	101893901	12-5, 12-11	101963401	1-7, 1-11, 1-13, 1-15, 1-17, 7-21, 8-27
101837101	9-15, 9-17	101894302	1-13	101963901	1-7
101837301	7-5, 7-9, 7-13, 7-27	101894303	1-7	101964001	1-7
101838801	4-5, 6-7, 12-7, 12-13	101894701	1-17	101966901	5-5
101856102	7-17, 7-19	101896501	7-25	101971301	9-15, 9-17
101859401	10-3	101896901	9-3, 9-5	101972001	13-9
101861901	5-5	101898001	7-29	101972002	13-9
101869302	7-25	101900802	4-13, 6-9	101972003	13-9
101871001	13-3	101903101	6-7		

INDEX

101972004	13-9	102021501	1-3	102044702	7-23
101972005	13-9	102021601	1-3	102044801	7-23
101972006	13-9	102021710	1-3	102045001	1-3
101972007	13-9	102021714	1-3	102045501	4-3, 4-9, 4-11
101972009	13-9	102021801	1-3	102045601	6-9
101972011	13-9	102022201	12-15	102045701	4-9, 4-11
101972012	13-9	102022301	12-7, 12-13	102045801	4-9, 4-11
101972801	9-15, 9-17	102022401	12-7, 12-13	102045901	7-15, 12-3, 12-9
101973101	9-7	102022601	6-5	102046501	1-3, 3-7
101973301	9-7	102022801	6-5	102046601	3-3, 3-5, 3-9, 12-15
101973401	9-11	102022901	6-5	102046801	1-13, 3-3
101979101	7-15	102023001	6-7	102047001	1-5
101980801	12-5, 12-11	102023101	6-7	102048401	1-3
101981001	12-5, 12-11	102023301	6-5	102048601	6-7
101987701	9-3, 9-5	102023701	1-5	102049401	4-3, 4-5
101987901	7-21	102024901	1-5	102049501	4-3, 4-5
101988001	7-21	102025001	1-5	102049601	4-3, 4-5
101988002	7-21	102025101	12-15	102049701	4-3, 4-5
101988101	7-21	102025701	1-3	102049901	4-3, 4-5
101988201	7-21	102025801	1-3	102050001	4-3, 4-5
101990701	7-23	102026001	5-5	102050101	4-3, 4-5
101991101	7-23	102026401	1-5	102050201	4-3, 4-5
102003201	9-3, 9-5	102026501	1-5	102050301	4-3
102006501	6-9	102026901	1-5	102050401	4-3, 4-5
102010101	6-5	102028301	4-13	102050501	4-3, 4-5
102010201	6-3	102028401	4-13	102050601	4-3, 4-5
102012301	6-7	102028601	5-3	102050701	4-3, 4-5
102013001	6-3	102028901	5-3	102050801	4-5
102013101	6-3	102029101	3-3, 3-5, 3-9	102050901	4-5
102013601	6-7	102029301	3-3	102050902	4-5
102013701	6-7	102029501	1-5	102051001	4-3, 4-5
102013801	6-7	102029601	1-13	102051101	4-7
102013901	1-3	102029801	1-13	102051201	4-7
102015701	1-3	102030001	1-13	102051301	4-7
102015801	1-3	102030201	1-13	102051401	4-7
102016501	6-7	102030501	1-3	102051601	7-23
102016701	6-7	102031201	12-15	102051701	7-23
102016801	6-7	102031501	12-3, 12-9	102051901	7-23
102017601	6-7	102031701	12-5, 12-11	102052301	6-7
102018501	12-3, 12-9	102031901	12-7, 12-13	102052401	6-7
102018601	12-3, 12-9	102032001	12-5, 12-11	102052701	4-13
102018701	12-3, 12-9	102032801	4-9, 4-11	102052801	4-13
102018801	12-5, 12-11	102032901	4-9, 4-11	102054201	4-7
102018901	12-5, 12-11	102033001	4-9	102054401	4-7
102019001	12-5, 12-11	102033101	4-9, 4-11	102055801	1-3
102019601	12-7, 12-13	102033201	4-7	102056001	1-21
102020101	12-7, 12-13	102033301	4-3	102056901	1-3
102020201	12-7, 12-13	102033401	4-5	102057501	4-7
102020301	12-7, 12-13	102033501	4-5	102057601	4-7
102020401	12-7, 12-13	102033701	4-13	102058401	1-3
102020501	12-7, 12-13	102033901	4-13	102059001	1-5
102020601	12-7, 12-13	102044001	4-9	102059401	1-5
102020801	12-7, 12-13	102044201	4-3, 6-7	102059501	1-5
102020901	12-7, 12-13	102044401	4-3, 4-9, 4-11	102060201	1-5
102021401	2-3	102044601	3-3, 3-5, 3-9	102061101	1-5
102021402	2-3	102044701	7-23	102061201	13-9

INDEX

102065001	6-9	102268601	12-3, 12-9	102345901	3-7, 3-11
102065103	1-21	102268701	12-7	102355301	7-29
102065901	1-11, 1-15	102268801	12-7	102430901	8-13
102066001	1-11, 1-15	102268901	12-7, 12-13	102431001	8-11
102066701	6-7	102269001	12-7, 12-13	102452401	12-11
102067001	6-7	102269101	4-5, 12-7, 12-13	102452501	12-11
102068501	1-5	102269201	4-5, 12-7, 12-13	102452601	12-13
102078101	1-3	102269301	4-5, 12-7, 12-13	102452701	12-13
102100001	6-7	102269401	12-7, 12-13	102453001	12-11
102156301	3-5	102269701	7-21	102453101	12-11
102157001	3-3	102269901	8-21	102453201	12-11
102157601	3-5	102270001	8-21	102457401	12-9
102158301	3-3	102270201	8-25	102555501	13-3
102160101	1-3	102270301	8-25	102562401	13-3
102160501	4-13	102270401	8-25	472 park brake cable	4-13
102169401	13-7	102270501	8-25		
102170901	4-13	102270701	9-9, 9-11		
102188701	6-9, 12-7, 12-13	102271101	8-21	A	
102195201	9-15	102271201	8-23	a-arm	6-7
102223601	7-5, 7-9	102271401	8-23	accelerator pedal	5-5
102224001	3-7, 3-11	102271501	8-25	accelerator pedal adjustment tool	13-3
102224301	3-3, 3-5, 3-9	102271601	8-23	accelerator pedal return spring cup	5-5
102228001	3-7, 3-11	102271701	9-9	accelerator pivot rod	5-5
102231601	3-7, 3-11	102271801	8-25	accelerator rod	5-5
102234901	1-13, 3-5, 3-9	102271901	8-25	a-connector (starter/generator)	7-25
102241501	13-7	102272001	8-15	adapter	
102242101	11-5	102272101	8-23	cable (IQDM)	13-7
102242701	4-13	102272201	8-13, 8-25	adhesive, guide ring	13-3
102243402	13-7	102272301	8-23	adjuster	
102247201	4-13	102272501	7-21	hydraulic brake	13-7
102248801	13-7	102274101	4-5, 12-7, 12-13	adjuster, axle (brake)	4-3, 4-5
102249901	13-3	102274301	3-9	air box	9-15, 9-17
102251501	13-7	102276001	4-5, 12-7, 12-13	air box top	9-17
102251601	1-19, 1-21	102278001	6-3	air duct	9-15, 9-17
102251701	1-19, 1-21	102292801	5-3	air filter	9-15, 9-17
102256901	6-9	102301401	1-9	AM10080	12-5
102257201	10-5	102304801	8-9, 8-11	AM10081	12-5
102258701	8-15	102304901	8-21, 8-23	angle, tailgate	1-13
102258801	6-9	102316101	7-13	arbor	13-3
102259001	1-3	102316701	12-15	arm	
102264001	7-21	102323201	5-3	differential lock lever	12-7, 12-13
102264601	12-3	102330901	13-9	governor lever	12-3, 12-9
102264701	4-5	102331201	4-13	pivot	12-3, 12-9
102266201	11-3	102331601	4-11	rocker	8-9, 8-21
102266301	6-9	102331701	4-11	armature	7-25
102267101	11-3, 11-5	102331801	4-11	armrest	1-5, 1-7
102267301	6-9	102333301	4-11	assembly	
102267601	12-3, 12-9	102333401	9-5	a-arm	6-7
102267701	12-7, 12-13	102333601	9-5	accelerator pedal	5-5
102267801	12-5, 12-11	102333901	9-5	accelerator rod	5-5
102267901	12-5	102334701	3-9	air box	9-15
102268001	12-5, 12-11	102334801	3-9	air box top	9-15
102268101	12-5, 12-11	102335001	1-15	armature	7-25
102268201	12-5	102336001	9-13	axle	12-7, 12-13
102268301	12-5	102336101	9-13	bearing (steering column)	6-3
102268401	12-5, 12-11	102339201	4-7, 4-11	bolt (float chamber)	9-7, 9-9
				brake	4-5

INDEX

brake drum 6-7
brake drum and hub 4-3
brake pedal 5-3
carburetor (fe350 engine) 9-7, 9-11
carburetor (fe400 engine) 9-9, 9-11
connecting rod 8-13, 8-25
cylinder head 8-9, 8-21
drive clutch (fe350 engine) 11-3
drive clutch (fe400 engine) 11-3
drive hub 11-3
driven clutch 11-5
fixed face (drive clutch) 11-3
float (carburetor) 9-7, 9-9
float chamber 9-7, 9-9
front panel (cargo box) 1-13, 1-17
headlight 7-21
idle screw 9-7, 9-9
inner ball joint 6-5
master cylinder 4-7
moveable face (driven clutch) 11-5
pilot air screw 9-7, 9-9
scorecard plate 6-3
screw (float chamber) 9-7, 9-9
side panel (cargo box) 1-13, 1-17
steering column 6-3
steering gear box 6-5
tailgate 1-13
tilt bed 1-11
turn signal lens 7-21
wheel and tire 2-3
wire 7-27
wire harness 7-5, 7-9, 7-13
axle 12-7, 12-13
axle adjuster (brake) 4-3, 4-5
axle hardware 4-3, 4-5
axle tube 12-7, 12-13
axle, stop 6-9, 12-7, 12-13

B

backing plate (brake) 4-3, 4-5
ball bearing (transaxle) 12-5
ball bearing, C-3 sealed (transaxle) 12-11
ball bearing, output shaft 7-25
ball bearing, sealed (transaxle) 12-11
ball joint 6-5, 7-15
ball stud 5-5, 7-15, 7-17, 7-19, 12-3, 12-9
ball, steel (transaxle) 12-5, 12-11
ball, steel pressure relief 8-7, 8-19
band, rpm limiter mount 8-5, 8-17
barb, vent 9-3, 9-5
barrel, plastic 1-7, 1-13, 1-17
base, forward/reverse shifter 7-15
battery
 12-volt 7-29
 clamp 7-29
battery discharge machine 13-3

battery terminal protector spray 13-3
battery thermometer 13-3
bearing
 ball (transaxle) 12-5
 ball, C-3 sealed (transaxle) 12-11
 ball, sealed (transaxle) 12-11
 crankshaft 8-11, 8-23
 hub 6-7
 idler (drive clutch) 11-3
 inner axle tube 12-5, 12-11
 lower pinion (steering) 6-5
 needle 12-5, 12-11
 outer axle tube 12-7, 12-13
 pivot support 5-5
 thrust 6-7
 upper pinion (steering) 6-5
bearing and oil seal remover 13-3
bearing cup 6-7
bearing driver set 13-3
bearing puller 13-3
bearing puller wedge 13-3
bearing retainer (starter/generator) 7-25
bearing seat (steering column) 6-3
bell crank 4-7
bell crank and shaft 7-17, 7-19
bell crank, forward/reverse 7-15
belt, drive 11-3
belt, starter/generator 7-27, 11-3
bezel, choke cable 9-15, 9-17
bezel, headlight 7-21
block, fuse 7-17, 7-19
block, terminal 7-21
body, front 1-3
bolt
 banjo (brake) 4-3, 4-9, 4-11
 differential lock pinch 12-7, 12-13
 kingpin 6-7
 u- 6-9
 wheel cylinder 4-3, 4-5
boot
 park brake lever 4-13
 rubber 9-3, 9-5
 steering column 6-3
boot (master cylinder) 4-7
boot shield 4-13
bottom, air box 9-17
brace, trailer hitch 1-19
bracket
 accelerator support 9-13
 adjusting (starter/generator) 7-27
 differential lock 12-3, 12-9
 governor cable engine 9-13, 10-5
 master cylinder mounting 4-7
 mounting (headlight) 7-21
 mounting (starter) 7-27
 muffler mounting 10-3, 10-5

oil filter 8-7, 8-19
oil level switch 8-11, 8-23
retaining 9-17
rpm limiter 8-5, 8-17
snubber 8-27
support 9-13
tailgate 1-13, 1-17
throttle 9-11
transmission cable support 7-15, 12-3, 12-9
bracket (fuel gauge/hour meter) 7-23
brake 4-5
brake adjustment tool 13-3
brake cable hanger 4-13, 6-9
brake cable release tool 13-3
brake cluster 4-3
brake drum 4-3, 4-5, 6-7
brake hose 4-9, 4-11
brake line 4-9, 4-11
brake mounting block 5-3
brake pedal 5-3
brake pedal adjustment tool 13-3
brake pedal tension tool 13-3
breather (transaxle) 12-3, 12-9
bronze bushing 6-7, 7-15, 7-17, 7-19
brush 7-25
brush connector 7-25
brush holder 7-25
brush inspection port cover 7-25
brush spring 7-25
bucket seat 1-5
bulb, halogen 7-21
bumper
 return spring 5-5
 rubber 1-9, 5-3
 seat 1-7
 tube 1-3
bushing
 bronze 6-7, 7-15, 7-17, 7-19
 bronze spindle 6-7
 drive clutch 11-3
 nylon 1-13, 1-17
 steel 1-11, 1-15, 6-9
 tailgate latch 1-17
 urethane 1-11, 1-15, 6-7, 6-9

C

cable
 accelerator, snap-in 9-13
 choke 9-15, 9-17
 choke, bezel 9-15, 9-17
 differential lock 12-15
 governor, snap-in 9-13
 IQDM 13-7
 park brake 4-13
 transmission 7-15

INDEX

- calibration test module 13-3
 - cam (driven clutch) 11-5
 - cam installation tool 13-3
 - cam, electrical box 7-17, 7-19
 - cam, neutral lockout 7-15
 - camshaft 8-11, 8-23
 - cap
 - corner 1-5, 1-7, 1-13, 1-17
 - filler 4-7
 - fuel tank 9-3, 9-5
 - locking 4-5, 12-7, 12-13
 - rubber center 4-5, 12-7, 12-13
 - seat back 1-7
 - tuber bumper 1-3
 - carburetor (fe350 engine) 9-7, 9-11
 - carburetor (fe400 engine) 9-9, 9-11
 - carburetor float level tool 13-7
 - card, safety first 13-9
 - cargo box 1-17
 - case
 - gear 12-3, 12-9
 - gear carrier 12-5, 12-11
 - rocker 8-9, 8-21
 - charger bezel tool 13-3
 - choke cable 9-15
 - choke cable bezel 9-15, 9-17
 - choke valve o-ring 9-15
 - circlip
 - input shaft 12-11
 - circlip, type-e 8-9, 8-21
 - clamp
 - battery 7-29
 - cable retaining 9-13
 - hose 9-3, 9-5, 9-17
 - hose (air intake) 9-15
 - hose (bronze) 9-11
 - hose (gray) 9-3, 9-5, 9-11
 - hose (red) 9-3, 9-5
 - muffler 10-3, 10-5
 - p- 4-9, 4-11
 - plastic (fuel line) 9-3, 9-5
 - clevis pin 4-5, 4-13
 - clevis rod 4-7
 - clip
 - horseshoe 4-9, 4-11
 - scorecard 6-3
 - cluster, brake 4-3
 - clutch alignment tool 13-5
 - clutch removal tool 13-3
 - clutch tool kit 13-5
 - clutch, drive (fe350 engine) 11-3
 - clutch, drive (fe400 engine) 11-3
 - clutch, driven 11-5
 - cog, differential lock 12-7, 12-13
 - coil cover shock 6-7
 - coil, field 7-25
 - coil, ignition 8-5, 8-17
 - collet (cylinder head) 8-9, 8-21
 - communication display module 13-5
 - compression gauge 13-5
 - compression mount 6-9
 - compression tester 13-5
 - compressor, piston ring 13-9
 - compressor, valve spring 13-11
 - connecting rod 8-13, 8-25
 - connecting rod (crankshaft) 8-13, 8-25
 - connecting rod alignment tool (diesel) 13-5
 - connector, oil sending unit 8-11, 8-23
 - console cover 1-5
 - continuity tester 13-5
 - control, differential lock 12-15
 - corner cap 1-5, 1-13
 - counterbalance guide shaft 8-13, 8-25
 - counterbalance weight 8-13, 8-25
 - cover
 - brush inspection port 7-25
 - console 1-5
 - crankcase 8-11, 8-23
 - dust 4-3, 4-5, 6-7
 - electrical component box 7-17, 7-19
 - gear case 12-5, 12-11
 - oil pump 8-7, 8-19
 - vinyl seat back 1-7
 - vinyl seat bottom 1-7
 - crank sleeve setter tool 13-5
 - crank, bell 4-7
 - crankcase 8-13, 8-25
 - crankshaft 8-13, 8-25
 - crankshaft bearing replacement tool 13-5
 - crankshaft main bearing driver attachment tool 13-5
 - crankshaft main bearing driver tool 13-5
 - crankshaft main bearing pilot attachment tool 13-5
 - cup
 - accelerator pedal return spring 5-5
 - bearing 6-7
 - seat holder 1-5
 - cushion, shock absorber 6-9
 - cutter, valve seat 13-5, 13-11
 - cylinder head 8-9, 8-21
 - cylinder, master 4-7
 - cylinder, wheel 4-3, 4-5
- ## D
- damper 8-5, 8-17
 - dash hardware 1-3
 - dash panel 1-3
 - dashboard 1-3
 - decal
 - bed latch warning 3-3, 3-5, 3-9
 - bed load 1-13, 1-17
 - bed load warning 3-3, 3-5, 3-9
 - Carryall 272 3-5
 - Carryall 472 3-9
 - Club Car 3-7, 3-11
 - Club Car tailgate 1-13, 1-17, 3-3, 3-5, 3-9
 - crush area warning 3-3, 3-5, 3-9
 - differential lock control warning 3-3, 3-5, 3-9, 12-15
 - diode wiring 3-7, 3-11
 - driver/passenger warning 3-3, 3-5, 3-9
 - frame ground 3-7, 3-11
 - gasoline warning 3-7, 3-11
 - Ingersoll-Rand (gold) 3-3, 3-5, 3-9
 - key switch 3-3, 3-5, 3-9
 - operating instructions 3-3, 3-5, 3-9
 - passenger warning 3-9
 - rotating parts 3-7, 3-11
 - rotating parts and hot manifold 3-7, 3-11
 - trailer hitch 1-19, 1-21, 3-7, 3-11
 - Turf 272 3-3
 - under age warning 3-3, 3-5, 3-9
 - vehicle loading 3-3, 3-5, 3-9
 - winch cable warning 3-7, 3-11
 - decal, Club Car 1-3
 - decal, IR 1-3
 - decal, Key Switch 3-3
 - decal, Operating Instructions 3-3
 - diesel tachometer probe 13-9
 - differential gear 12-5, 12-11
 - differential lock 12-7, 12-13, 12-15
 - differential pin 12-5, 12-11
 - diode 7-21
 - diode, flyback 7-19
 - diode, headlight 7-21
 - dipstick 8-3, 8-15
 - double lip seal 6-7
 - drain plug 8-7, 8-19
 - drain plug (transaxle) 12-3, 12-9
 - drive belt 11-3
 - drive clutch (fe350 engine) 11-3
 - drive clutch (fe400 engine) 11-3
 - drive clutch button 11-3
 - drive clutch fixed sheave tool 13-5
 - drive clutch holder tool 13-5
 - drive clutch hub puller 13-5
 - drive clutch puller 13-5
 - drive clutch spider removal tool 13-5
 - drive hub 11-3
 - driven clutch 11-5
 - driven clutch cam puller 13-5
 - driven clutch puller plug 13-5
 - driven clutch spring compression base tool 13-5
 - driven clutch spring compression collar tool 13-5

INDEX

driven clutch spring compression nut tool 13-5
driver, drive clutch 11-3
drum, brake 4-3, 4-5, 6-7
dry moly lubricant 13-7
duct, air 9-15
dust cover 4-3, 4-5, 6-7
dust seal 6-5

E

e-clip (air box top) 9-15
electrical box cam 7-17, 7-19
end bell, commutator 7-25
end bell, output shaft 7-25
engine shroud 8-3, 8-15
engine, fe350 ohv gasoline 8-3
engine, fe400 ohv gasoline 8-15
equalizer 4-13
equalizer rod 4-7, 5-3
exhaust gasket 10-3, 10-5
exhaust system (fe350 engine) 10-3
exhaust system (fe400 engine) 10-5
exhaust valve 8-9, 8-21

F

fan housing 8-3, 8-15
fan shroud 8-3, 8-15
fan, flywheel 8-5, 8-17
fe350 ohv gasoline engine 8-3
fe400 ohv gasoline engine 8-15
fender, front 1-3
fender, rear 1-21
field coil (starter/generator) 7-25
filler cap 4-7
filter
 air 9-15, 9-17
 fuel 9-3, 9-5
 oil 8-7, 8-19
fitting, grease 6-7
fixed face (drive clutch) 11-3
fixed face (driven clutch) 11-5
flange, wheel bolt 4-5
float (carburetor) 9-7, 9-9
float chamber 9-7, 9-9
floor mat 1-3
flywheel 8-5, 8-17
flywheel puller 13-7
fork, shift 12-5, 12-11
forward/reverse shifter 7-15
frame, tilt bed 1-15
f-terminal insulator 7-25
fuel gauge 7-23
fuel impulse pump 9-3, 9-5
fuel injection pump pressure tester tool 13-7
fuel line 9-3, 9-5
fuel strap 9-3, 9-5

fuel tank 9-3, 9-5
fuse block 7-17, 7-19
fuse, 10-amp 7-17, 7-19
fuse, 20-amp 7-17, 7-19

G

gasket
 carburetor insulator 9-11
 crankcase cover 8-11, 8-23
 drain plug 8-7, 8-19
 exhaust 10-3, 10-5
 float chamber 9-7, 9-9
 head 8-9, 8-21
 insulator 9-11
 liquid 12-3, 12-9, 13-7
 oil pump 8-7, 8-19
 rocker arm case 8-9
 rocker case 8-21
 throttle bracket 9-11
gasket kit 8-9, 8-11, 8-21, 8-23
gauge, compression 13-5
gauge, fuel 7-23
gear
 12 tooth 12-5
 13 tooth 12-11
 70 tooth 12-5, 12-11
 cluster idler 12-5, 12-11
 differential 12-5, 12-11
 differential idler 12-5, 12-11
 helical (crankshaft) 8-13, 8-25
 input 12-5, 12-11
 output 12-5, 12-11
 spur (crankshaft) 8-13, 8-25
 spur (transaxle) 12-5, 12-11
gear case 12-3, 12-9
gear case cover 12-5, 12-11
gear yoke 13-7
governor 12-5, 12-11
governor lever arm 12-3, 12-9
governor shaft installation tool 13-7
grease fitting 6-7
grill (front body) 1-3
grip, hand 1-13, 1-17
grip, pencil 6-3
grommet 9-17
grommet (flywheel) 8-5, 8-17
grommet, insulation 9-3, 9-5
guard, unitized transaxle 12-3, 12-9
guide
 oil (transaxle) 12-5, 12-11
 steering 6-5
 valve 8-9, 8-21
 valve seat cutter 13-11
guide ring adhesive 13-3

H

halogen bulb 7-21
hand grip 1-13
hand grip, tilt latch 1-11, 1-15
handle, differential lock 12-15
handle, forward/reverse switch 7-15
hanger, brake cable 4-13, 6-9
hardware, terminal (starter/generator) 7-25
harness, headlight wire 7-21
harness, wire 7-5, 7-9, 7-13
headlight 7-21
headlight lens 7-21
hinge plate 1-5
hinge plate, body 1-5
hinge, tilt bed 1-11
hitch, receiver trailer 1-21
hitch, trailer 1-19
hold-down, (brake) shoe 4-3, 4-5
holder, radio/beverage 1-5
horseshoe clip 4-9, 4-11
hose, brake 4-9, 4-11
hose, intake 9-15, 9-17
hour meter 7-23
housing
 differential lock 12-7, 12-13
 fan 8-3, 8-15
 field coil (starter/generator) 7-25
hub 12-7, 12-13
hub bearing 6-7
hub, drive 11-3
hub, synchronizer clutch 12-5, 12-11
hydraulic brake adjuster 13-7
hydraulic lifter 8-11, 8-23
hydraulic shoe 4-3, 4-5
hydrometer 13-7

I

idle gear bushing replacement tool 13-7
idle screw 9-7, 9-9
ignition coil 8-5, 8-17
insert, synchronizer 12-5, 12-11
insert, threaded 1-5
insert, wood 1-7
insulation 1-15
insulation, bulk 1-11
insulator, carburetor 9-11
insulator, f-terminal 7-25
intake hose 9-17
intake pipe 9-11
intake valve 8-9, 8-21
internal retaining ring pliers 13-7
IQ display module (IQDM) 13-7

J

jet, main 9-7, 9-9

INDEX

jet, pilot 9-7, 9-9

joint

- ball 6-5, 7-15
- inner ball 6-5
- spring-loaded ball 5-5
- steering 6-3

K

- key (crankshaft) 8-13, 8-25
- key (dash panel) 7-23
- key (driven clutch) 11-5
- key (flywheel) 8-5, 8-17
- key (transmission) 11-5
- key switch 7-23
- key, woodruff 7-25, 12-3, 12-9
- kingpin bolt 6-7
- kit
 - accelerator pivot rod 5-5
 - axle adjuster 4-3, 4-5
 - axle hardware 4-3, 4-5
 - brake pedal adjustment tool 13-3
 - dash hardware 1-3
 - diode 7-21
 - drive clutch weight 11-3
 - driven clutch button 11-5
 - fuel tank 9-3, 9-5
 - gasket (engine) 8-9, 8-11, 8-21, 8-23
 - hydraulic shoe 4-3, 4-5
 - IQ display module (IQDM) 13-7
 - pulley 4-13
 - pulley nut and screw 7-25
 - rear receiver 1-21
 - reverse buzzer 7-21
 - shock absorber cushion 6-9
 - tune-up 13-9
- knob, light switch 7-23

L

- latch
 - tailgate 1-17
 - weld 1-15
 - wire (air box) 9-15, 9-17
- latch (cargo bed) 1-13
- latch weld (cargo bed) 1-11
- lead wire 8-5, 8-17
- lens, headlight 7-21
- lens, turn signal 7-21
- lever
 - adjuster (brake) 4-3, 4-5
 - choke 9-15, 9-17
 - differential lock 12-7, 12-13
 - park brake 4-5, 4-13
 - shifter 12-3, 12-9
 - transmission shifter 12-3, 12-9
- lifter, hydraulic 8-11, 8-23

- light switch 7-23
- light switch knob 7-23
- light, low oil warning 7-23
- limit switch 7-15, 7-17
- limiter, rpm 8-5, 8-17
- line
 - brake 4-9, 4-11
 - fuel 9-3, 9-5
 - vent 9-3, 9-5, 9-11
- link, rack and pinion drag 6-5
- liquid gasket 13-7
- locking cap 4-5, 12-7, 12-13
- long park brake cable 4-13
- lubricant, dry moly 13-7
- lubricant, moly-teflon 13-7
- lug nut 2-3, 4-3, 4-5, 6-7
- lug stud 4-3, 6-7, 12-7, 12-13

M

- main jet 9-7, 9-9
- master cylinder 4-7
- mat, floor 1-3
- meter, hour 7-23
- meter, volt ohm 13-11
- module
 - calibration test 13-3
 - communication display 13-5
- moly-teflon lubricant 13-7
- mount, compression 6-9
- moveable face (drive clutch) 11-3
- moveable face (driven clutch) 11-5

N

- neutral lockout cam 7-15
- nozzle, main (fe350 engine) 9-7
- nozzle, main (fe400 engine) 9-9
- nut, key switch 7-23
- nut, lug 2-3, 4-3, 4-5, 6-7

O

- oil filler tube 8-3, 8-15
- oil filter 8-7, 8-19
- oil level sensor 8-11, 8-23
- oil pressure gauge tool 13-7
- oil pressure tester (diesel) tool 13-9
- oil pump and rotor 8-7, 8-19
- oil seal 8-13
- oil seal (axle tube) 12-7, 12-13
- oil seal (crankshaft) 8-11, 8-25
- oil seal (governor pivot) 12-3, 12-9
- oil seal (shifter shaft) 12-3, 12-9
- oil seal, input shaft 12-5, 12-11
- oil warning light 7-23
- o-ring 8-11, 8-23, 12-7, 12-13
- o-ring (counterbalance shaft) 8-13, 8-25

- o-ring (oil sending connector) 8-11, 8-23
- o-ring (rocker case hardware) 8-9, 8-21
- o-ring, choke valve 9-15
- o-ring, oil filter mount 8-7, 8-19

P

- pad
 - accelerator pedal 5-5
 - brake pedal 5-3
 - spring 6-9
 - thermal 7-21
- paint, touch-up 13-9
- panel
 - dash 1-3
 - front (cargo box) 1-13, 1-17
 - seat 1-5
 - seat support 1-7
 - side (cargo box) 1-13, 1-17
- p-clamp 4-9, 4-11
- pedal, accelerator 5-5
- pedal, brake 5-3
- pencil grip 6-3
- pilot air screw 9-7, 9-9
- pilot jet 9-7, 9-9
- pin
 - bow tie locking 4-7, 5-3
 - clevis 4-5, 4-13, 5-3
 - differential 12-5, 12-11
 - hair spring cotter 4-13
 - piston 8-13, 8-25
- pinion, steering 6-5
- pipe, intake 9-11
- piston 8-13, 8-25
- piston pin 8-13, 8-25
- piston pin retaining ring 8-13, 8-25
- piston ring compressor 13-9
- piston ring pliers 13-9
- piston ring set 8-13, 8-25
- pivot arm 12-3, 12-9
- plastic barrel 1-13
- Plastigauge tool 13-9
- plate 8-9, 8-21
 - backing (brake) 4-3, 4-5
 - body hinge 1-5
 - floor 1-15
 - flywheel fan 8-5, 8-17
 - hinge 1-5
 - mounting 8-27
 - oil filter screen 8-11, 8-23
 - oil pump 8-7, 8-19
 - scorecard 6-3
 - suspension mounting 6-7
 - thrust 12-5, 12-11
 - tilt bed latch 1-9
- pliers
 - internal retaining ring 13-7

INDEX

piston ring 13-9
 retaining ring 13-9
 plug
 cap 8-5, 8-17
 drain 8-7, 8-19
 drain (transaxle) 12-3, 12-9
 drive clutch 11-3
 driven clutch puller 13-5
 spark (ohv) 8-5, 8-17
 pole set (starter/generator) 7-25
 pop rivet 1-5, 4-9, 4-11, 4-13, 9-15, 12-15
 press weldment 13-5
 pressure switch 4-7
 prop rod 1-9
 protector spray, battery terminal 13-3
 puller
 bearing 13-3
 clutch 13-3
 drive clutch 13-5
 drive clutch hub 13-5
 driven clutch cam 13-5
 flywheel 13-7
 seal 13-9
 puller, special use tool 13-9
 pulley (starter/generator) 7-25
 pulley nut and screw (starter/generator) 7-25
 pulley, flat mount 4-13
 pump cover (oil) 8-7, 8-19
 pump, fuel impulse 9-3, 9-5
 pump, oil and rotor 8-7, 8-19
 push rod 4-7, 8-9, 8-21

R

rack and pinion drag link 6-5
 rack, steering 6-5
 radio/beverage holder 1-5
 reamer, valve guide 13-9
 regulator, voltage 7-17, 7-19
 remover, bearing and oil seal 13-3
 retainer
 bearing (starter/generator) 7-25
 headlight 7-21
 shock absorber cushion 6-9
 spiral ring 11-3
 spring 5-5
 spring (drive clutch) 11-3
 valve spring 8-9, 8-21
 retaining ring (drive clutch) 11-3
 retaining ring (driven clutch) 11-5
 retaining ring pliers 13-9
 return spring bumper 5-5
 reverse buzzer 7-21
 ring
 piston (set) 8-13, 8-25
 piston pin retaining 8-13, 8-25

retaining (drive clutch) 11-3
 retaining (driven clutch) 11-5
 snap (steering) 6-5
 spiral back-up 11-3
 synchronizer 12-5, 12-11
 rivet, blind 1-3
 rivet, pop 1-5, 4-9, 4-11, 4-13, 9-15, 12-15
 rocker arm 8-9, 8-21
 rocker case 8-9, 8-21
 rocker shaft 8-9, 8-21
 rod
 accelerator 5-5
 accelerator pivot 5-5
 connecting 8-13, 8-25
 connecting (crankshaft) 8-13, 8-25
 equalizer 4-7, 5-3
 prop 1-9
 push 4-7, 8-9, 8-21
 shift 12-5, 12-11
 rod, clevis 4-7
 rpm limiter 8-5, 8-17
 rubber boot 9-3, 9-5
 rubber bumper 1-9, 5-3

S

safety first card 13-9
 scorecard clip 6-3
 scorecard plate 6-3
 screen, oil filter 8-11, 8-23
 screw
 idle 9-7, 9-9
 pilot air 9-7, 9-9
 pole piece (starter/generator) 7-25
 rack guide 6-5
 tufflok 1-3
 screw, valve clearance adjuster 13-9
 seal
 bed 1-5, 1-15
 crankshaft 8-23
 double lip 6-7
 dust 6-5
 input shaft oil 12-5, 12-11
 intake 9-17
 intake (air box) 9-15
 oil 8-13
 oil (axle tube) 12-7, 12-13
 oil (crankshaft) 8-11, 8-25
 oil (governor pivot) 12-3, 12-9
 oil (shifter shaft) 12-3, 12-9
 steering pinion dust 6-5
 valve 8-9, 8-21
 seal puller 13-9
 seat back 1-7
 seat bottom 1-7
 seat panel 1-5
 seat support 1-5

seat, bucket 1-5
 seat, spring 8-9, 8-21
 sensor, oil level 8-11, 8-23
 set, pole 7-25
 shackle, rear spring 6-9
 shaft
 counterbalance guide 8-13, 8-25
 input 12-5, 12-11
 rocker 8-9, 8-21
 shifter 12-3, 12-9
 steering column 6-3
 shield, air duct 9-15
 shield, boot 4-13
 shift fork 12-5, 12-11
 shift rod 12-5, 12-11
 shifter shaft 12-3, 12-9
 shifter, forward/reverse 7-15
 shim
 crankshaft 8-13, 8-25
 latch plate 1-9
 tilt bed pivot 1-15
 shim (camshaft) 8-11, 8-23
 shock absorber cushion 6-9
 shock absorber, rear 6-9
 shock tower 6-7
 shock, coil cover 6-7
 short park brake cable 4-13
 shroud, engine 8-3, 8-15
 shroud, fan 8-3, 8-15
 sleeve (governor) 12-5, 12-11
 sleeve, steel 6-7
 sleeve, synchronizer 12-5, 12-11
 snap ring (steering) 6-5
 snubber 8-27
 solenoid, 12-volt 7-17, 7-19
 spacer
 accelerator pedal 5-5
 differential lock 12-7, 12-13
 fixed face shaft 11-3
 key switch 7-23
 ratchet support 5-5
 rear suspension 6-9
 spanner wrench 13-9
 spark plug (ohv) 8-5, 8-17
 spindle 6-7
 spray, battery terminal protector 13-3
 spring
 brake pedal return 4-7
 brush 7-25
 compression 1-13, 1-17, 6-3
 differential lock 12-7, 12-13
 drive button 11-3
 drive clutch 11-3
 engine valve 8-9, 8-21
 forward/reverse cam 7-15
 latch extension 1-11, 1-15

INDEX

rear four-leaf 6-9
return 5-5, 9-17
return (air box) 9-15
shoe to shoe 4-3, 4-5
synchronizer 12-5, 12-11
tapered compression 6-3
throttle return 9-11
yoke (steering) 6-5
spring pad 6-9
spring seat 8-9, 8-21
starter/generator 7-25, 7-27
steel ball (transaxle) 12-5, 12-11
steel bushing 1-11, 1-15, 6-9
steel sleeve 6-7
steering column 6-3
steering column bearing press tool 13-9
steering column retaining ring tool 13-9
steering gear box 6-5
steering guide 6-5
steering pinion 6-5
steering rack 6-5
steering stop 6-7
steering wheel 6-3
steering wheel puller tool 13-9
stem, valve 2-3
stiffener, flywheel side 8-27
stiffener, pto side 8-27
stiffener, seat 1-7
stop, axle 6-9, 12-7, 12-13
stop, steering 6-7
strap, seat bottom 1-7
stud
 ball 5-5, 7-15, 7-17, 7-19, 12-3, 12-9
 flush head 1-13, 1-17
 lug 4-3, 6-7, 12-7, 12-13
support
 accelerator pivot rod 5-5
 latch plate 1-9
 lower fender 1-3
 seat 1-5
 upper front body 1-3
suspension mounting plate 6-7
switch
 key 7-23
 light 7-23
 limit 7-15, 7-17
 pressure 4-7
synchronizer clutch hub 12-5, 12-11
synchronizer ring 12-5, 12-11
system, exhaust (fe350 engine) 10-3
system, exhaust (fe400 engine) 10-5

T

10-amp fuse 7-17, 7-19
12-volt battery 7-29
12-volt solenoid 7-17, 7-19

20-amp fuse 7-17, 7-19
tachometer 13-9
tachometer probe, diesel 13-9
tailgate 1-13, 1-17
tailgate angle 1-17
tailskirt 1-19, 1-21
tape, VHB (air duct shield) 9-15
tape, VHB (console cover) 1-5
terminal block 7-21
terminal hardware (starter/generator) 7-25
tester, continuity 13-5
thermal pad 7-21
thermometer, battery 13-3
thrust bearing 6-7
thrust plate 12-5, 12-11
tie, wire 6-5, 7-21, 7-23
tilt bed 1-15
tilt bed hinge 1-15
tilt bed, manual lift 1-11
tire 2-3
tool
 accelerator pedal adjustment 13-3
 brake adjustment 13-3
 brake cable release 13-3
 brake pedal adjustment 13-3
 brake pedal tension 13-3
 cam installation 13-3
 carburetor float level 13-7
 charger bezel 13-3
 clutch alignment 13-5
 connecting rod alignment 13-5
 crank sleeve setter 13-5
 crankshaft bearing replacement 13-5
 crankshaft main bearing driver 13-5
 crankshaft main bearing driver attachment 13-5
 crankshaft main bearing pilot attachment 13-5
 drive clutch fixed sheave 13-5
 drive clutch holder 13-5
 drive clutch spider removal 13-5
 driven clutch spring compression base 13-5
 driven clutch spring compression collar 13-5
 driven clutch spring compression nut 13-5
 fuel injection pump pressure tester 13-7
 governor shaft installation 13-7
 idle gear replacement 13-7
 oil pressure gauge 13-7
 oil pressure tester 13-9
 Plastigauge 13-9
 puller, special use 13-9
 steering column bearing press 13-9
 steering column retaining ring 13-9
 steering wheel puller 13-9

transaxle axle seal 13-9
transaxle pinion seal 13-9
transmission 13-9
valve clearance adjustment 13-11
valve guide driver 13-9
valve guide replacement 13-9
tool kit, clutch 13-5
top, air box 9-15, 9-17
touch-up paint 13-9
tower, shock 6-7
track, prop rod 1-9
trailer hitch 1-19
trailer hitch, receiver 1-21
transaxle axle seal tool 13-9
transaxle pinion seal tool 13-9
transaxle, unitized 12-3, 12-9
transmission cable 7-15
transmission shifter lever 12-3, 12-9
transmission tool 13-9
trim, seat bottom 1-7
tube
 7 mm (flywheel) 8-5, 8-17
 axle 12-7, 12-13
 crankcase vent 9-11
 oil filler 8-3, 8-15
tune-up kit 13-9
turn signal lens 7-21

U

u-bolt 6-9
unitized transaxle 12-3, 12-9
urethane bushing 1-11, 1-15, 6-7, 6-9

V

valve 8-9, 8-21
 choke 9-15, 9-17
 exhaust 8-9, 8-21
 fuel pickup tube 9-3, 9-5
 intake 8-9, 8-21
 stem 2-3
valve clearance adjuster screw 13-9
valve clearance adjustment wrench 13-11
valve guide 8-9, 8-21
valve guide driver tool 13-9
valve guide reamer 13-9
valve guide replacement tool 13-9
valve seal 8-9, 8-21
valve seat cutter 13-5, 13-11
valve seat cutter guide 13-11
valve seat t-wrench 13-11
valve spring compressor 13-11
vent line 9-11
vent, fuel tank 9-3, 9-5
volt ohm meter 13-11
voltage regulator 7-17, 7-19

INDEX

W

warning light, oil 7-23
washer
 copper (brake) 4-3, 4-9, 4-11
 delrin flat 7-15, 7-17, 7-19
 kingpin wave 6-7
 mounting 11-3, 11-5
 nylon flat 7-15
 spring 12-5, 12-11
 thrust 12-5, 12-11
 wave 7-15
wedge (steering column) 6-3
wedge, bearing puller 13-3
weight, counterbalance 8-13, 8-25
weight, drive clutch 11-3
weldment, forward/reverse bell crank 7-15
weldment, press 13-5
wheel 2-3
wheel bolt flange 4-5
wheel cylinder 4-3, 4-5
wheel, steering 6-3
wire harness 7-5, 7-9, 7-13
wire latch 9-15, 9-17
wire tie 6-5, 7-21, 7-23
wire, lead 8-5, 8-17
woodruff key 7-25, 12-3, 12-9
wrench, spanner 13-9

Y

yoke spring (steering) 6-5
yoke, gear 13-7

Your Comments Are Appreciated

Please select your category:

- ☐ Distributor/Dealer
 ☐ Technician
☐ Individual Owner
 ☐ Golf Course Superintendent
☐ Club Car Associate/Representative
 ☐ Other: _____

In order to help us better serve you, please rate this publication in the following categories:

	Poor	Fair	Average	Good	Excellent
1. Ease of Understanding	☐	☐	☐	☐	☐
2. Ease of Finding Information	☐	☐	☐	☐	☐
3. Clarity of Illustrations	☐	☐	☐	☐	☐
4. Index Usability	☐	☐	☐	☐	☐

Comments/Suggestions

This image shows a single sheet of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page. There are approximately 20 lines visible. The paper has a slight shadow on the right side, suggesting it's resting on a surface.

Please fax a copy of this page to (706) 228-2662.

Thank You!

Club Car Technical Publication Department



Club Car, Inc.
P.O. Box 204658
Augusta, GA 30917-4658
USA

Web www.clubcar.com
Phone 1.706.863.3000
1.800.ClubCar
Int'l +1 706.863.3000
Fax 1.706.863.5808