 




**2009-2011
XRT800/XRT810
Illustrated Parts List**

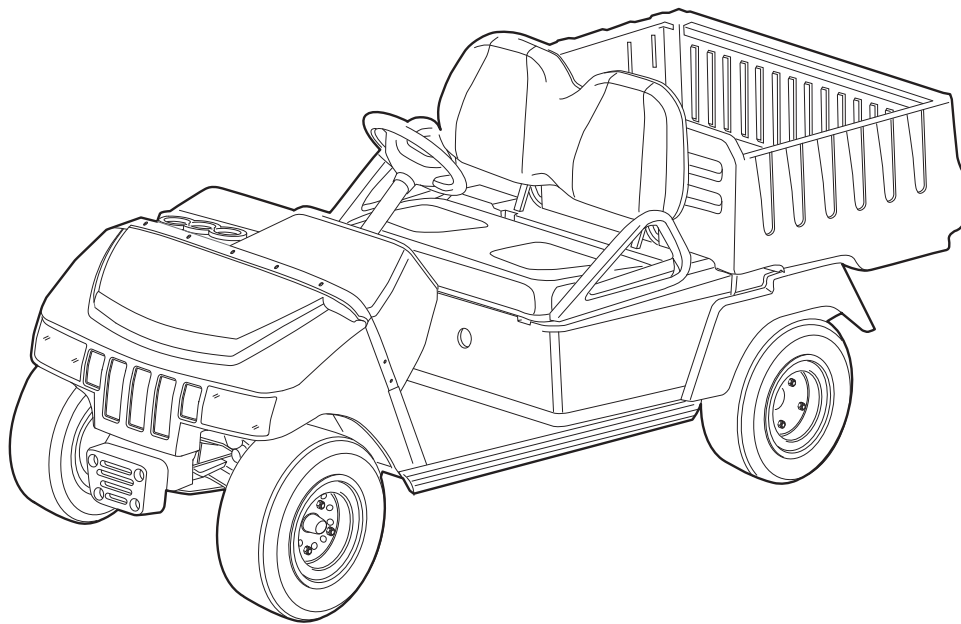

Gasoline and Electric Vehicles

Manual Number 103472613
Edition Code 0508L0112K

USING THE ILLUSTRATED PARTS LIST

WARNING

- **This manual is to be used only for identification and ordering of service parts. Be sure to read and use the maintenance and service manual before attempting any vehicle repairs.**

This manual covers all 2009-2011 XRT800 and XRT810 gasoline and electric vehicles.

The manual is divided into 16 sections. Sections 1 through 15 pertain to the vehicles, and Section 16 pertains to tools that are used on all Club Car products. Note that there are flags on the outside edge of each page. The first flag contains the section number of which that page is a part. The other flags contain the letters G or E, signifying that the page pertains to either the gasoline vehicle, the electric vehicle, or both.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section numbers, and under them, the individual page titles and numbers to be found in that section. The index can be used to find specific parts and assemblies. The index is divided into numerical and alphabetical listings with the page numbers in italic text.

There is a two-page spread for each individual page title in the Table of Contents. On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used.

Note that a part description may be indented. This indentation corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to *level 2* is a component of the *level 1* part (assembly) that it is listed under. A *level 3* part is a component of the *level 2* part that it is listed under, and a *level 4* part is a component of the *level 3* part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part is *the quantity used per next higher level assembly of which it is a component*. A part that is not indented is a *level 1* part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.

HOW TO ORDER PARTS

Replacement parts and accessories can be obtained from our network of authorized dealers and distributors. You can obtain the name and phone number of your closest authorized Club Car dealer or distributor by visiting our web site at www.clubcar.com and clicking on the "*Distributor Search*" link or by calling our toll-free Service Parts and Technical Assistance hotline at (800) 872-2246 or (706) 863-3000, extension 3887.



P. O. Box 204658
Augusta, Georgia 30917-4658 USA
Telephone 706-863-3000
Service Parts Fax 706-855-7413
www.clubcar.com

NOTE: *This illustrated parts list represents the most current information at the time of publication. Club Car, LLC. is continually working to further improve its vehicles and other products. These improvements may affect the parts used to service the vehicle. Any modification and/or significant change in specifications will be forwarded to all Club Car and Carryall distributors/dealers and will, when applicable, appear in future editions of this illustrated parts list.*

Club Car, LLC. reserves the right to change specifications and designs at any time without notice and without the obligation of making changes to units previously sold.

Copyright © 2010 Club Car, LLC.
Club Car and ArmorFlex
are registered trademarks of Club Car, LLC.
This manual effective October 1, 2010.

CONTENTS

SECTION 1 – BODY AND TRIM

Front Body	1-3
Canopy Support System	1-5
Bumper – XRT800 and XRT800-E	1-7
Brush Guard – HUV4210-GX	1-9
Dash Box – XRT800 and XRT800-E	1-11
Glove Box – XRT810 and XRT810-E	1-13
Side Trim – XRT800 and XRT800-E	1-15
Nerf Bar – XRT810 and XRT810-E	1-17
Rear Body and Fender – Gasoline Vehicle	1-19
Rear Body and Fender – Electric Vehicle	1-21
Front Seat Bottom and Armrests	1-23
Seat Back	1-25
Cargo Bed	1-27
Bed Hinge	1-29
Access Panel and Heat Shield	1-31

SECTION 2 – WHEELS AND TIRES

Wheels and Tires	2-3
Hubcap – XRT810 and XRT810-E	2-5

SECTION 3 – DECALS

Safety Decals – Gasoline Vehicles	3-3
Safety Decals – Gasoline Vehicles, Continued	3-5
Safety Decals – Gasoline Vehicles, Continued	3-7
Logo Decals – Gasoline Vehicles	3-9
Safety Decals – Electric Vehicles	3-11
Safety Decals – Electric Vehicles, Continued	3-13
Logo Decals	3-15

SECTION 4 – BRAKE SYSTEMS

Rear Brake Assembly, Self-Adjusting – Vehicle with 2-Wheel Brakes	4-3
Brake Pedal Assembly	4-5
Brake Cable, Equalizer, and Equalizer Rod – Vehicles with Two-Wheel Brakes	4-7
Accelerator Pedal – Gasoline Vehicles	4-9
Accelerator Pedal Assembly – Electric Vehicles with MCOR	4-11
Accelerator Rod – Gasoline Vehicles	4-13

CONTENTS

SECTION 5 – STEERING AND SUSPENSIONS

Steering Column	5-3
Steering Wheel	5-5
Steering Gear Assembly	5-7
Front Suspension, Upper	5-9
Front Suspension, Lower	5-11
Front Spindles and Hubs	5-13
Rear Suspension	5-15
Steering Gear Assembly	5-17

SECTION 6 – ELECTRICAL SYSTEM – GASOLINE VEHICLES

Wiring – Gasoline Vehicle	6-5
Headlights	6-7
Electrical Component Box – Gasoline Vehicle	6-9
Electrical Components, Front Body – Gasoline Vehicle	6-11
Starter/Generator Assembly Model G425419 – Gasoline Vehicles	6-13
FE290 Starter/Generator Mounting – Gasoline Vehicle	6-15
FE350 Starter/Generator Mounting – Gasoline Vehicles	6-17
Battery – Gasoline Vehicle	6-19

SECTION 7 – FE290 ENGINE

FE290 Engine – Shrouds and Brackets	7-3
FE290 Engine – Ignition Components and Flywheel	7-5
FE290 Engine – Oil Circulation	7-7
FE290 Engine – Cylinder Head	7-9
FE290 Engine – Crankcase, Camshaft, and Oil Sensor	7-11
FE290 Engine – Crankcase and Crankshaft	7-13
FE290 Engine Mounting	7-15

SECTION 8 – FE350 ENGINE – S27

FE350 Engine – Oil Circulation	8-3
FE350 Engine without ACR (Automatic Compression Release) – Shrouds and Brackets	8-5
AS26 FE350 Engine – Ignition Components and Flywheel	8-7
AS26 FE350 Engine – Cylinder Head	8-9
AS26 FE350 Engine – Crankcase and Crankshaft Oil Sensor	8-11
AS26 FE350 Engine – Crankcase and Crankshaft	8-13
FE350 Engine Mounting	8-15

CONTENTS

SECTION 9 – AS11 FE350 ENGINE

AS11 FE350 Engine without ACR (Automatic Compression Release) – Shrouds and Brackets	9-3
AS11 FE350 Engine – Ignition Components and Flywheel	9-5
FE350 Engine – Oil Circulation	9-7
AS11 FE350 Engine – Cylinder Head	9-9
AS11 FE350 Engine without ACR – Crankcase, Camshaft, and Oil Sensor	9-11
AS11 FE350 Engine – Crankcase and Crankshaft	9-13
FE350 Engine Mounting	9-15

SECTION 10 – FUEL, INTAKE, AND GOVERNOR SYSTEMS

Fuel System	10-3
Fuel Tank with Fuel Level Sending Unit	10-5
Carburetor Assembly – FE290	10-7
Carburetor Assembly – FE350	10-9
Carburetor Installation – FE290	10-11
Carburetor Installation – FE350	10-13
Governor and Accelerator Cables	10-15
Intake Duct, Choke, and Air Box Assembly	10-17
Carburetor Assembly – FE350 S26	10-19
Carburetor Installation – FE350 S27	10-21

SECTION 11 – EXHAUST SYSTEM

Exhaust System – FE290 Engine	11-3
Exhaust System – FE350 Engine	11-5

SECTION 12 – TORQUE CONVERTER

Drive Clutch	12-3
Drive Belt – FE290	12-5
Drive Belt – FE350	12-7
Driven Clutch	12-9

SECTION 13 – TRANSAXLE AND FNR SHIFTER- GASOLINE VEHICLE

Transaxle – Gasoline Vehicles, Gear Cases and Brackets	13-3
Transaxle – Gasoline Vehicles, Transmission and Gear Reduction	13-5
Transaxle – Gasoline Vehicles, Differential and Axles	13-7
Forward/Reverse Shifter Assembly – Gasoline Vehicles	13-9
Forward/Reverse Shifter Cable – Gasoline Vehicles	13-11
Differential Guard – XRT810	13-13

CONTENTS

SECTION 14 – ELECTRICAL SYSTEM – ELECTRIC VEHICLES

Wiring – Electric Vehicle	14-5
Headlights	14-7
Electrical Components, Front Body – Electric Vehicle	14-9
Motor Controller Output Regulator (MCOR)	14-11
Forward/Reverse Switch, Tow/Run Switch	14-13
Battery Charger Receptacle	14-15
Batteries, Electric Vehicle	14-17
OBC, Controller, and Solenoid – Electric Vehicle	14-19
Reverse Buzzer	14-21

SECTION 15 – ELECTRIC MOTOR

Motor (Model 5BC59JBS6365A)	15-3
Motor (Model EJ4-4001) – Electric Vehicle	15-5
Motor (Model EJ8-4001A) – Electric Vehicle	15-7

SECTION 16 – TRANSAXLE – ELECTRIC VEHICLES

Transaxle – Electric Vehicles	16-3
Differential Guard	16-5

SECTION 17 – BATTERY CHARGER

PowerDrive 3 Battery Charger, Domestic	17-3
PowerDrive 2 Battery Charger (Model 22110), Domestic	17-5
PowerDrive Battery Charger (Model 17930), Domestic	17-7
PowerDrive Battery Charger (Model 18780), Export	17-9
PowerDrive Battery Charger (Model 20310), European	17-11

SECTION 18 – MAINTENANCE AND SERVICE TOOLS

Maintenance and Service Tools	18-3
Maintenance and Service Tools, Continued	18-5
Maintenance and Service Tools, Continued	18-7
Maintenance and Service Tools, Continued	18-9
Maintenance and Service Tools, Continued	18-11

 
SECTION i – INDEX

BODY AND TRIM

1

G

E

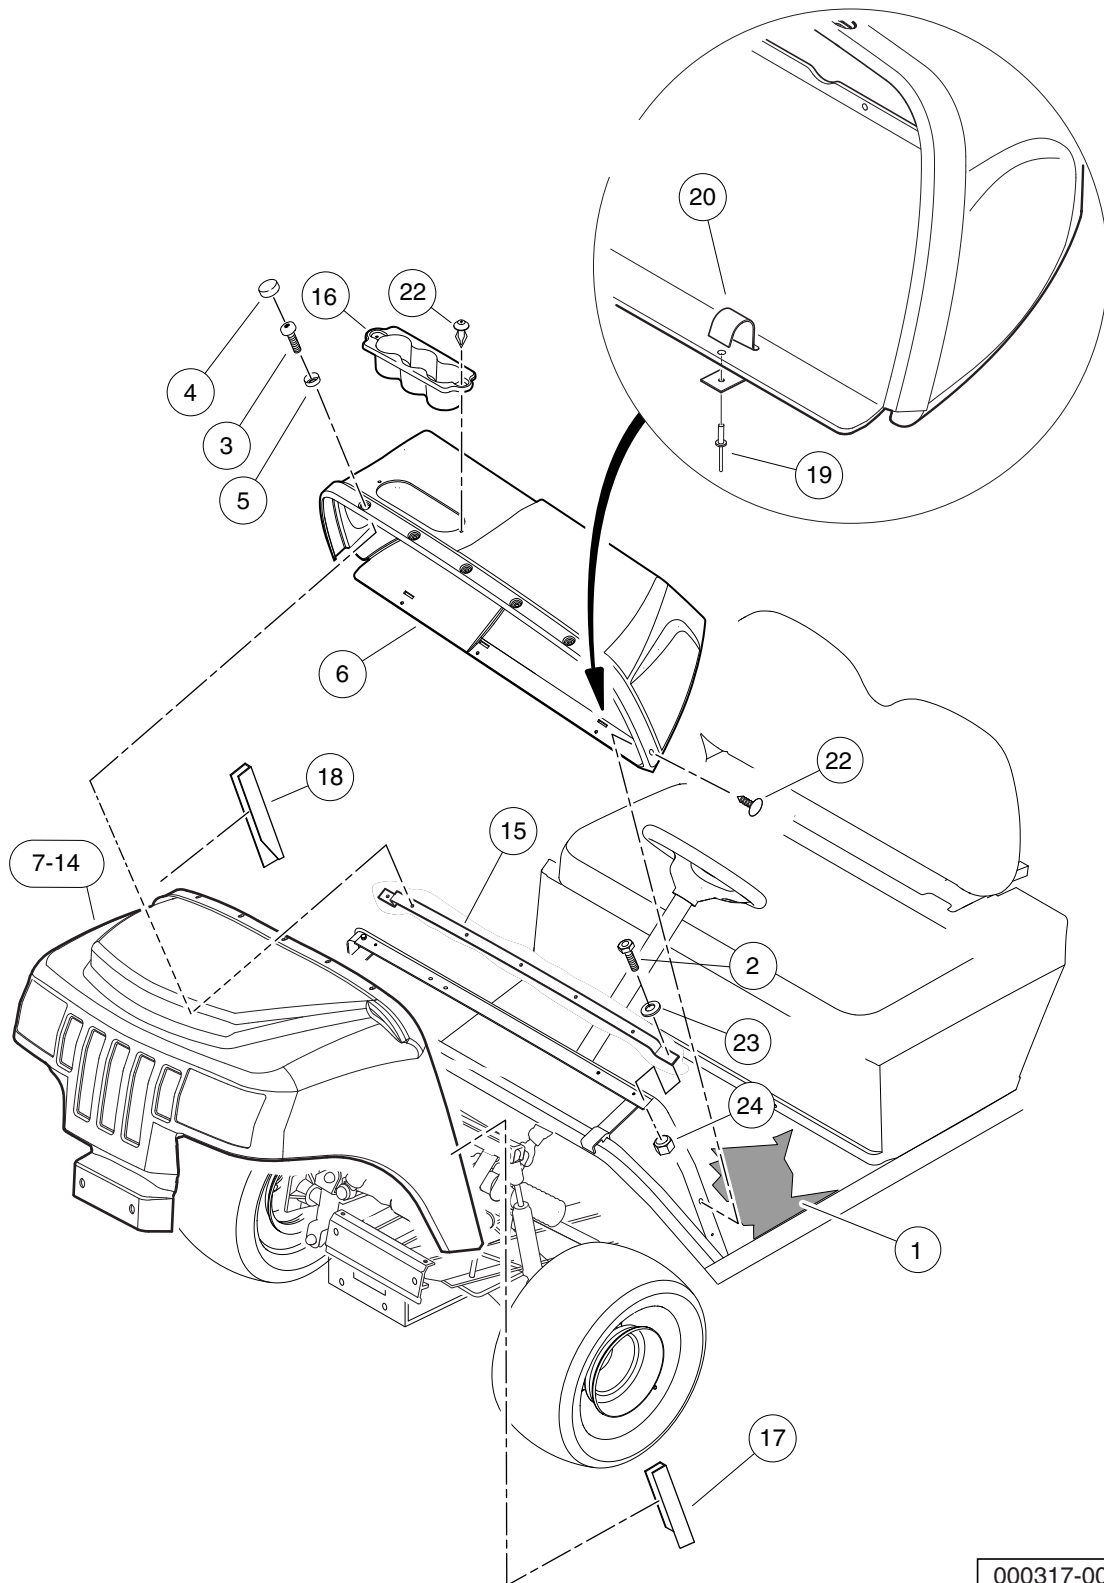1**G****E**

000317-002

FRONT BODY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101503202</u>	Floormat	1
2	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2
3	<u>102025801</u>	Screw, 1/4-20 X .75 Torx Pn Hd	5
4	<u>102045001</u>	Cap, 1/4" Plastic Screw Head	5
5	<u>102048401</u>	Washer, 1/4 Id Scalloped Plast	5
6	<u>102766701</u>	Dash	1
7	<u>102778501</u>	Cowl, Red	1
8	<u>102778502</u>	Cowl, Green	1
9	<u>102778503</u>	Cowl, Camouflage (Husqvarna)	1
10	<u>102778504</u>	Cowl, Classic Blue	1
11	<u>102778505</u>	Cowl, XRT- Black	1
12	<u>102778507</u>	Cowl, XRT- Camo Hard Wood HD (Standard camo for XRT850)	1
13	N/A	Cowl, XRT- Camo Max4 HD	1
14	<u>102778509</u>	Cowl, XRT- Silver	1
15	<u>102778601</u>	Support, Upper Cowl	1
16	<u>102796701</u>	Object Holder	1
17	<u>102822001</u>	Cowl Cover, Driver-Side	1
18	<u>102822002</u>	Cowl Cover, Passenger-Side	1
19	<u>102828701</u>	Rivet	10
20	<u>102857401</u>	Clip, Dash	3
21	<u>102914301</u>	Push Pin, Black	2
22	<u>102967901</u>	Rivet, Removable, Tuflok 1/4"	2
23	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
24	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2

1

 
G

E

1

G

E

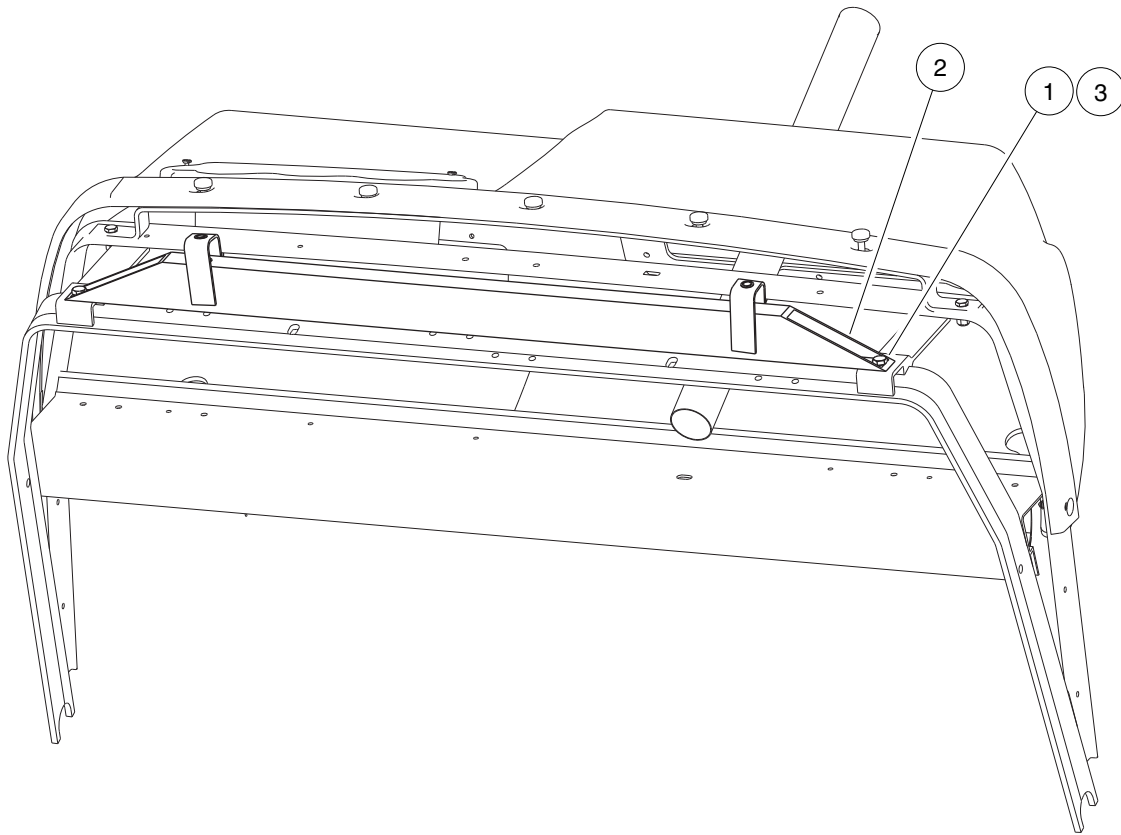

000582-001

CANOPY SUPPORT SYSTEM

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102242101	Screw, 5/16-18 X 3/4 Hex-Head with Patch	2
2	103313301	Asm, Brace, Canopy, Tube, Xrt	1
3	1241	Washer, 5/16 Type A Flat	1

1

 
G

E

1

G

E

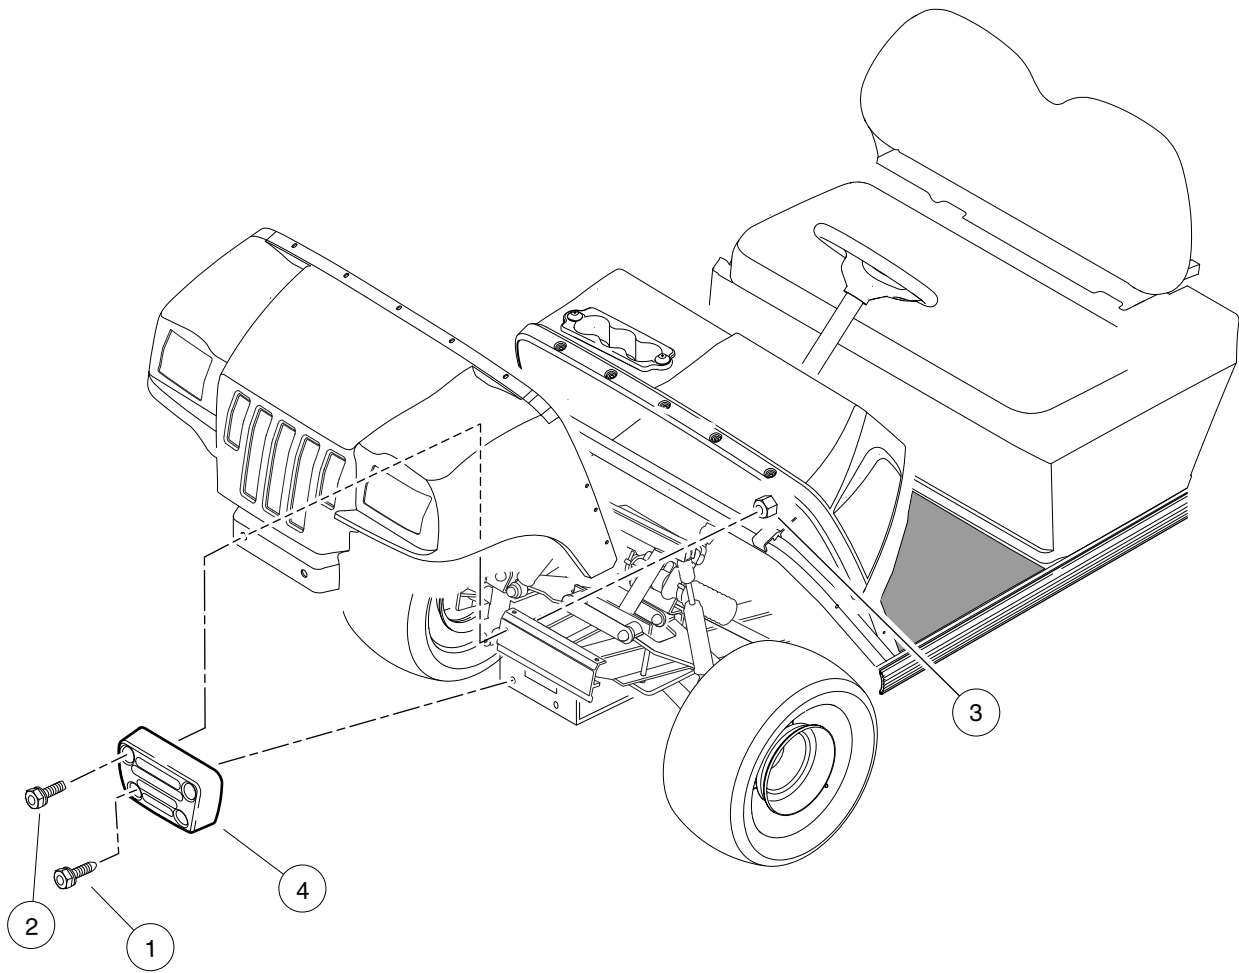

000357-002

BUMPER – XRT800 AND XRT800-E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102289002</u>	Screw, M8 X 1.25 X 30 Tri, Blk	2
2	<u>102298240</u>	Bolt, Flange Head, M8-1.25 X 40	2
3	<u>102618601</u>	Lock Nut, Flg M8 X 1.25 Nylon	2
4	<u>102830501</u>	Bumper, Cast	1

1

 
G

E

1

G

E

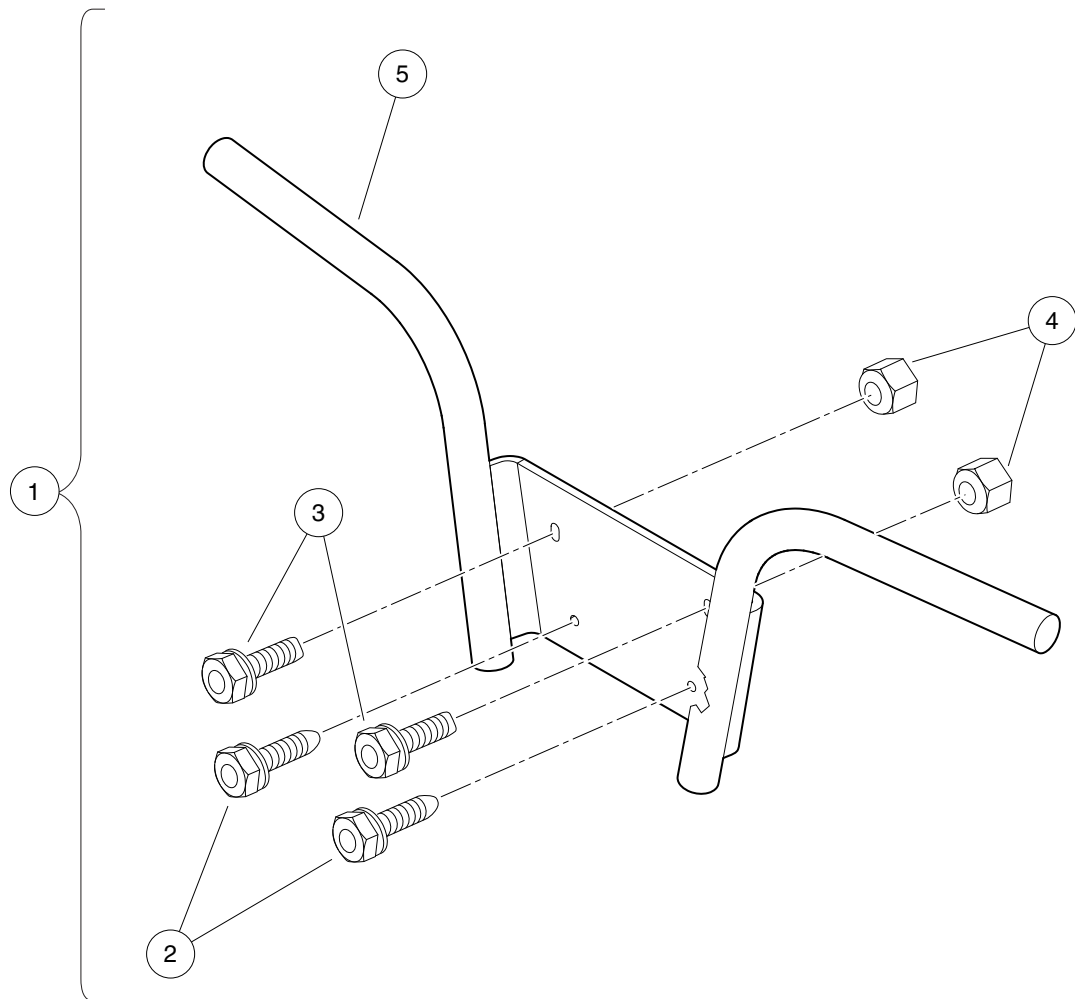

000356-001


BRUSH GUARD – HUV4210-GX

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>102852401</u>	Kit, Brush Guard (includes items 2 through 6)	1	
2	<u>102289002</u>	Screw, M8 X 1.25 X 30 Tri, Blk	2	
3	<u>102298240</u>	Bolt, Flange Head, M8-1.25 X 40	2	
4	102618601	Lock Nut, Flg M8 X 1.25 Nylon	2	
5	102830201	Guard, Brush	1	
6	N/A	Instr, Brush Guard	1	

1

G

 E

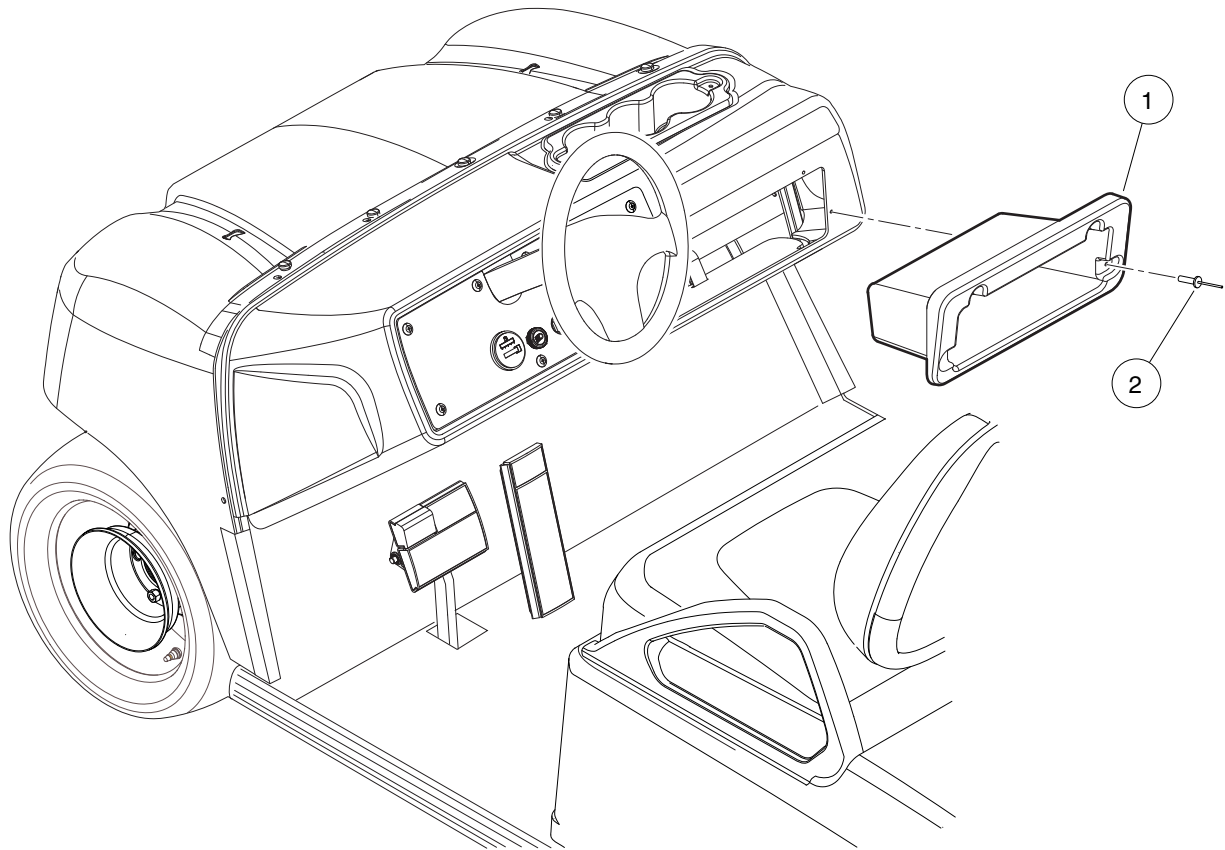

000358-001


DASH BOX – XRT800 AND XRT800-E

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	<u>102810301</u>	Box, Dash	1	
2	<u>102828701</u>	Rivet	4	

1

G

 E

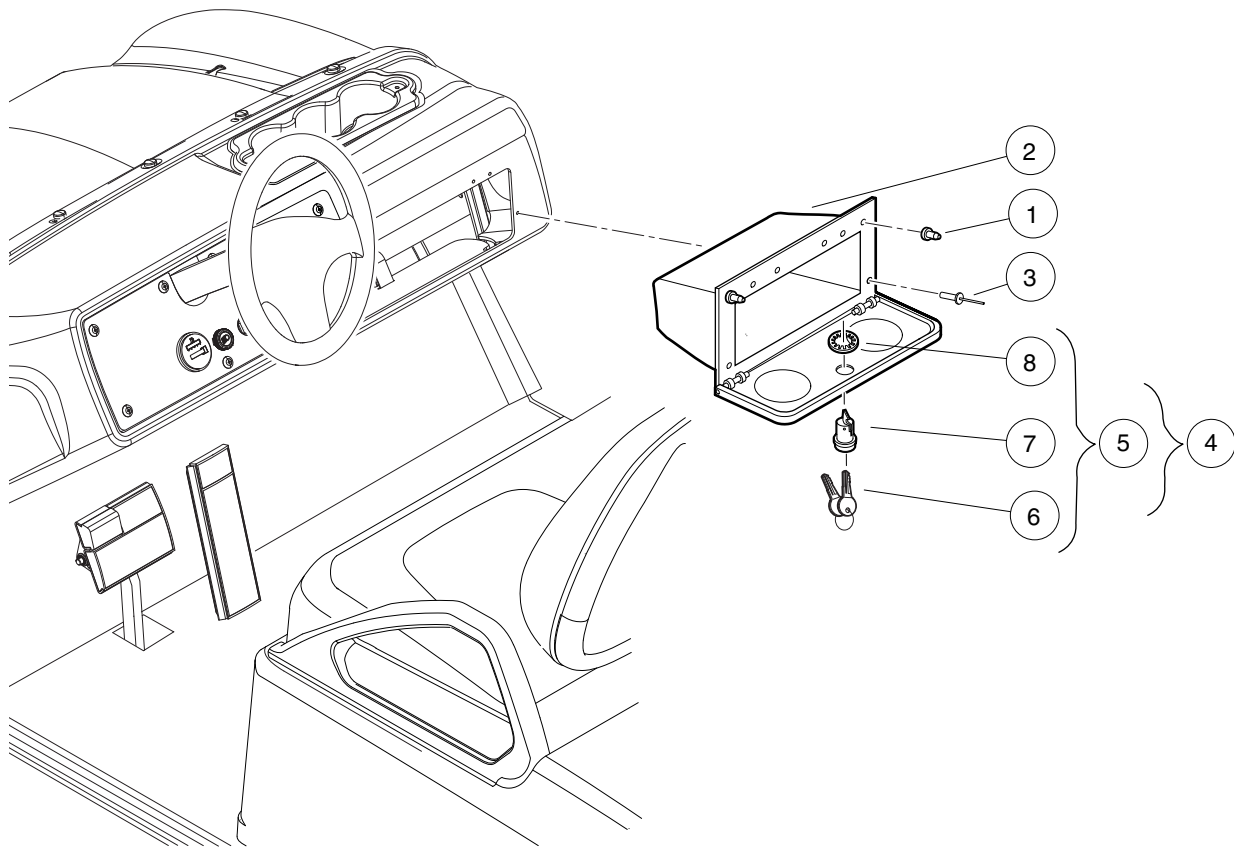

000359-001


GLOVE BOX – XRT810 AND XRT810-E

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010436</u>	Bumper, Rubber	2	
2	<u>102796501</u>	Glove Box	1	
3	<u>102828701</u>	Rivet	6	
4	<u>102959401</u>	Glove Box Lock / Key Kit (includes item 5)	1	
5	N/A	Asm, Glove Box Lock / Key (includes items 6 through 8)	1	
6	N/A	Key	2	
7	N/A	Lock	1	
8	N/A	Nut	1	

1

G

 E

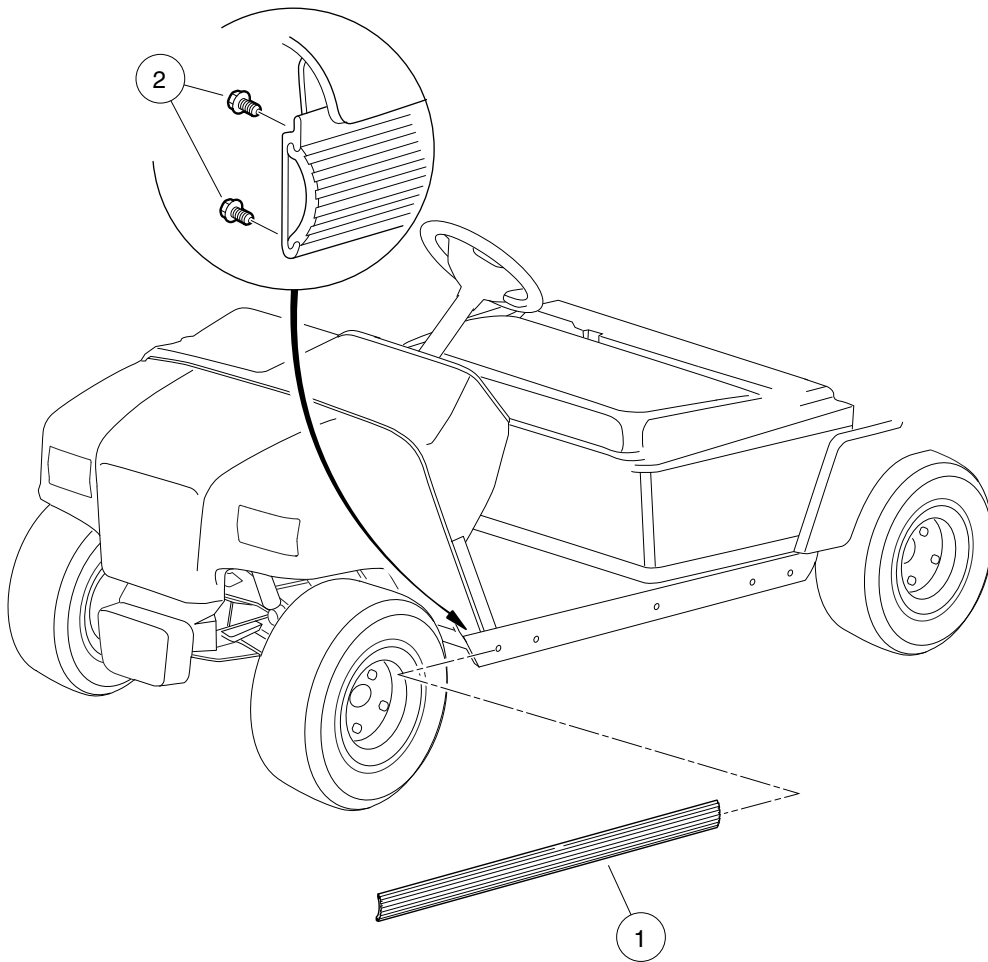

000361-002


SIDE TRIM – XRT800 AND XRT800-E

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	<u>1013983</u>	1 2 3 4 Bumper, Side Trim	2	
2	<u>102310701</u>	Screw, #8-18 x 0.375, Hex-Head Washer	8	

1

G

 
E

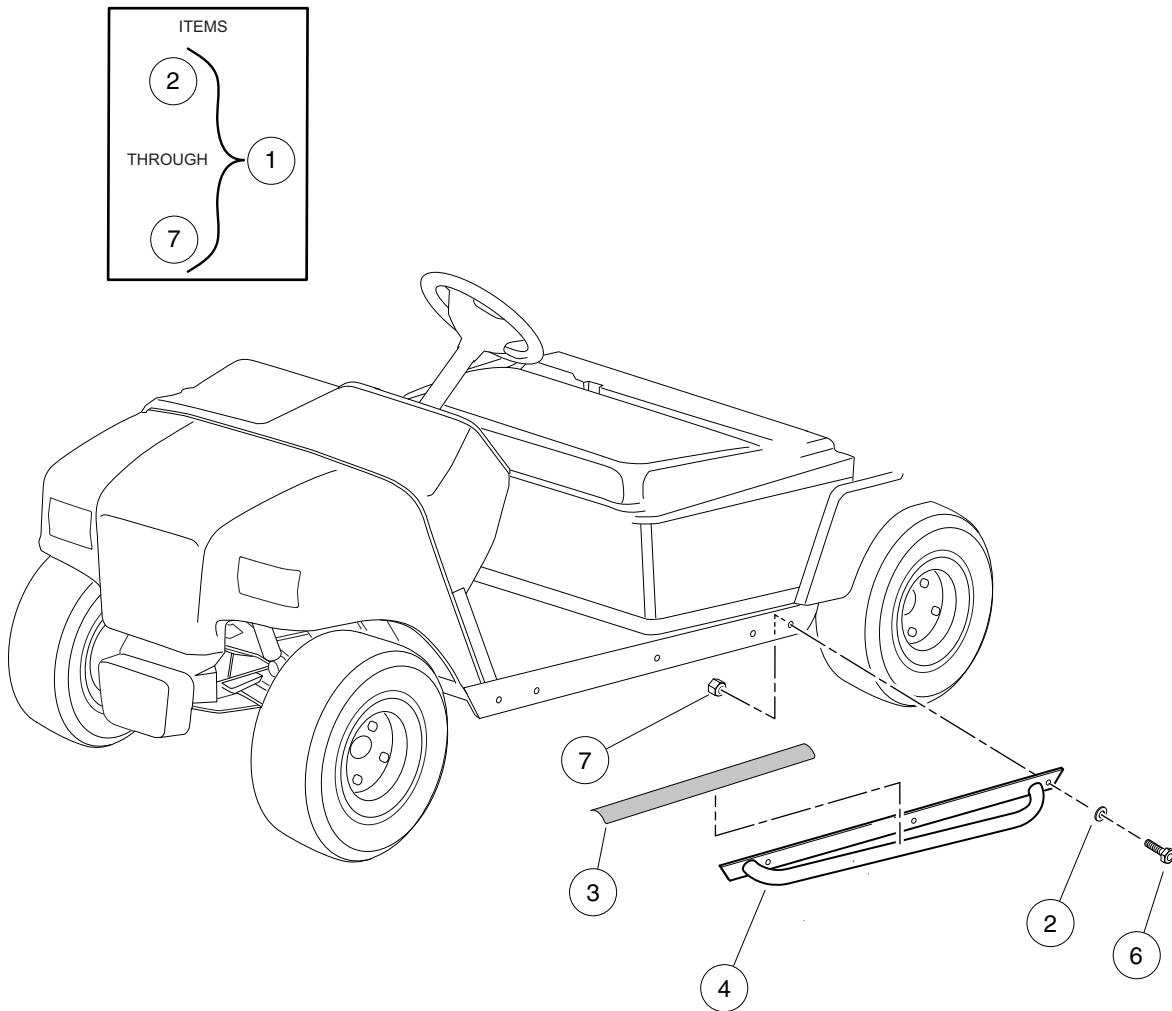

000360-002

NERF BAR – XRT810 AND XRT810-E


ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>102829802</u>	Kit, Nerf Bar (black) (includes items 2 through 7)	1	
2	<u>1011990</u>	Washer, 3/8 Flat	6	
3	<u>102355102</u>	Tape, Non-skid	2	
4	<u>102829703</u>	Nerf Bar Assy, Driver	1	
5	<u>102829704</u>	Nerf Bar Assy, Passngr	1	
6	<u>320</u>	Screw, 3/8-16 X 1.00 Hex-Head Cap	6	
7	<u>8754</u>	Locknut, 3/8-16 Hex	6	

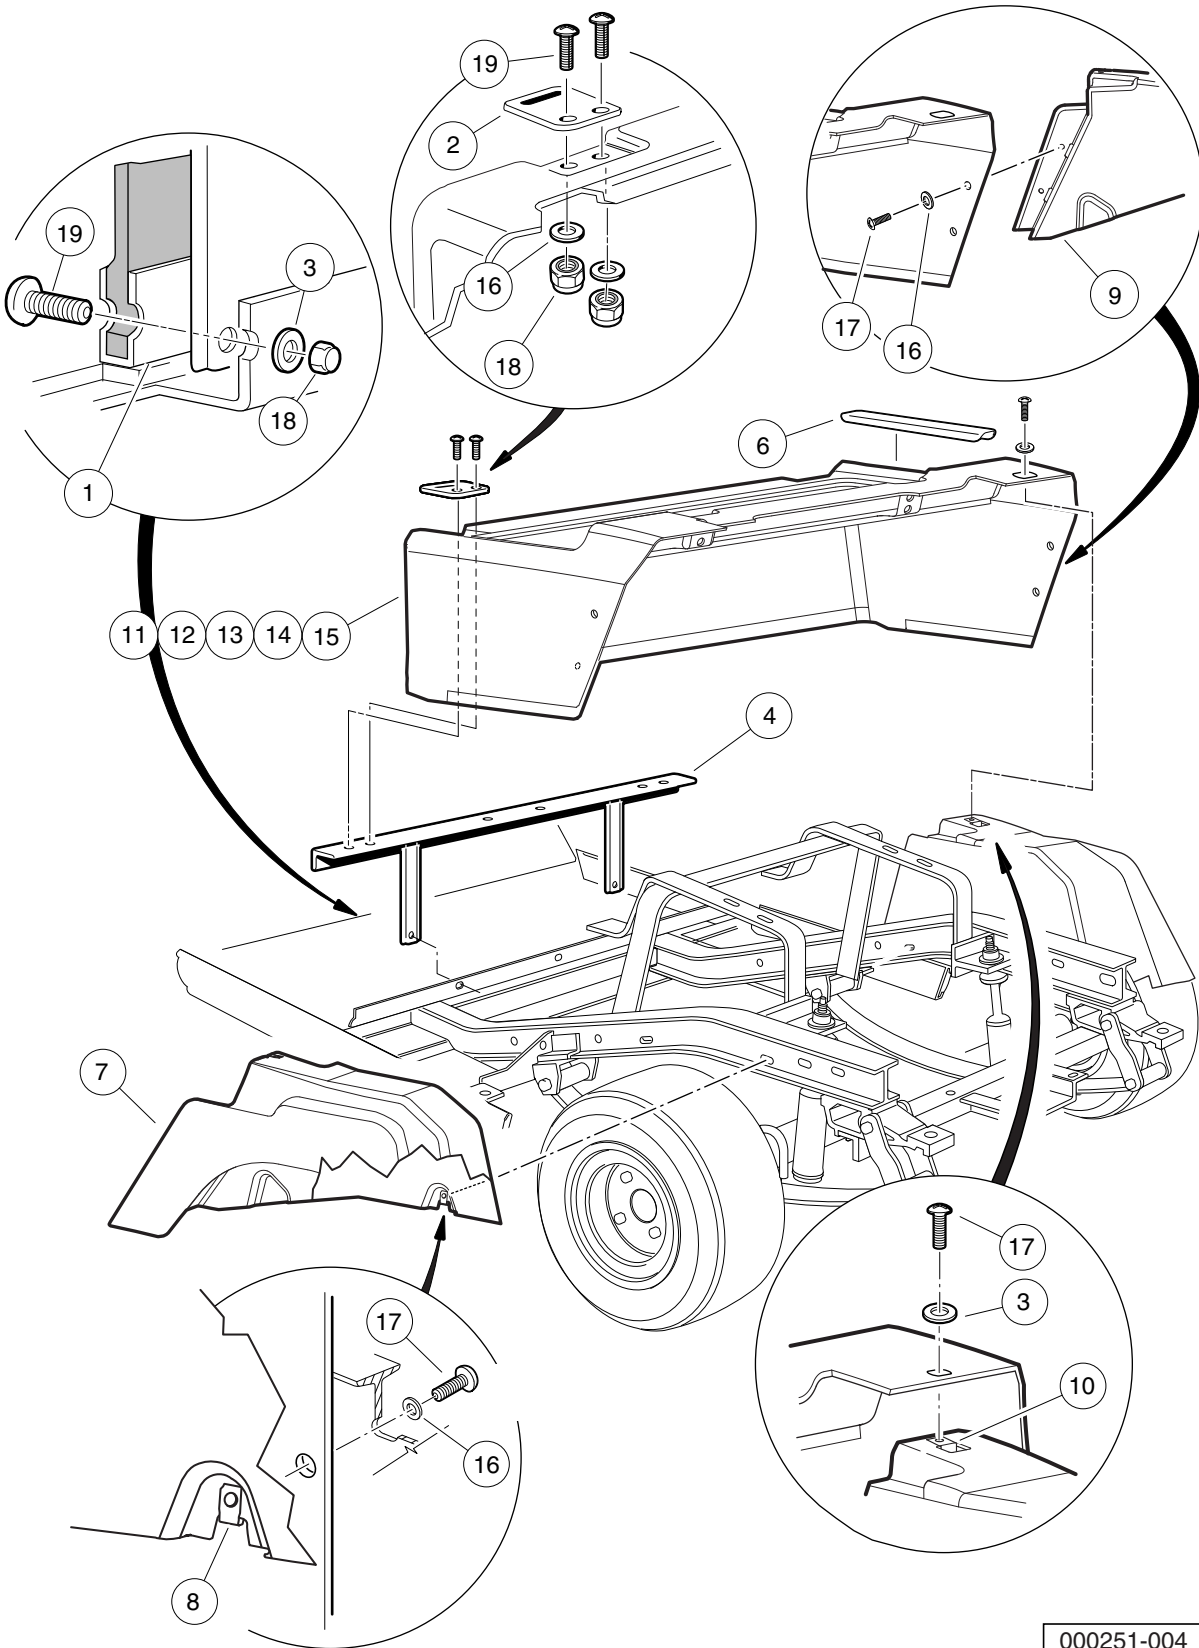 1**G****E**

000251-004

REAR BODY AND FENDER – GASOLINE VEHICLE


ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010993</u>	Body Kick Plate	1	
2	<u>1012412</u>	Body, Hinge Plate	2	
3	<u>1014306</u>	Washer, 1/4" Type B Flat	8	
4	<u>1017141</u>	Body Support Weldment	1	
5	<u>101855801</u>	Cable Retainer	1	
6	<u>102221201</u>	Wear Pad	2	
7	<u>102777601</u>	Fender, Driver Side (includes item 8)	1	
8	<u>1016952</u>	U-Nut, 1/4-20	4	
9	<u>102777602</u>	Fender, Passenger Side (includes item 10)	1	
10	<u>1016952</u>	U-Nut, 1/4-20	4	
11	<u>102796801</u>	Body, Rear, Gas, Red	1	
12	<u>102796802</u>	Body, Rear, Gas, Orange	1	
13	<u>102796803</u>	Body, Rear, Gas, Green	1	
14	<u>102796804</u>	Body, Rear, Gas, Classic Blue	1	
15	<u>102796805</u>	Body, Rear, Gas, Olive Green	1	
16	<u>332</u>	Washer, 1/4 Type A Narrow Flat	6	
17	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
18	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	6	
19	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	6	

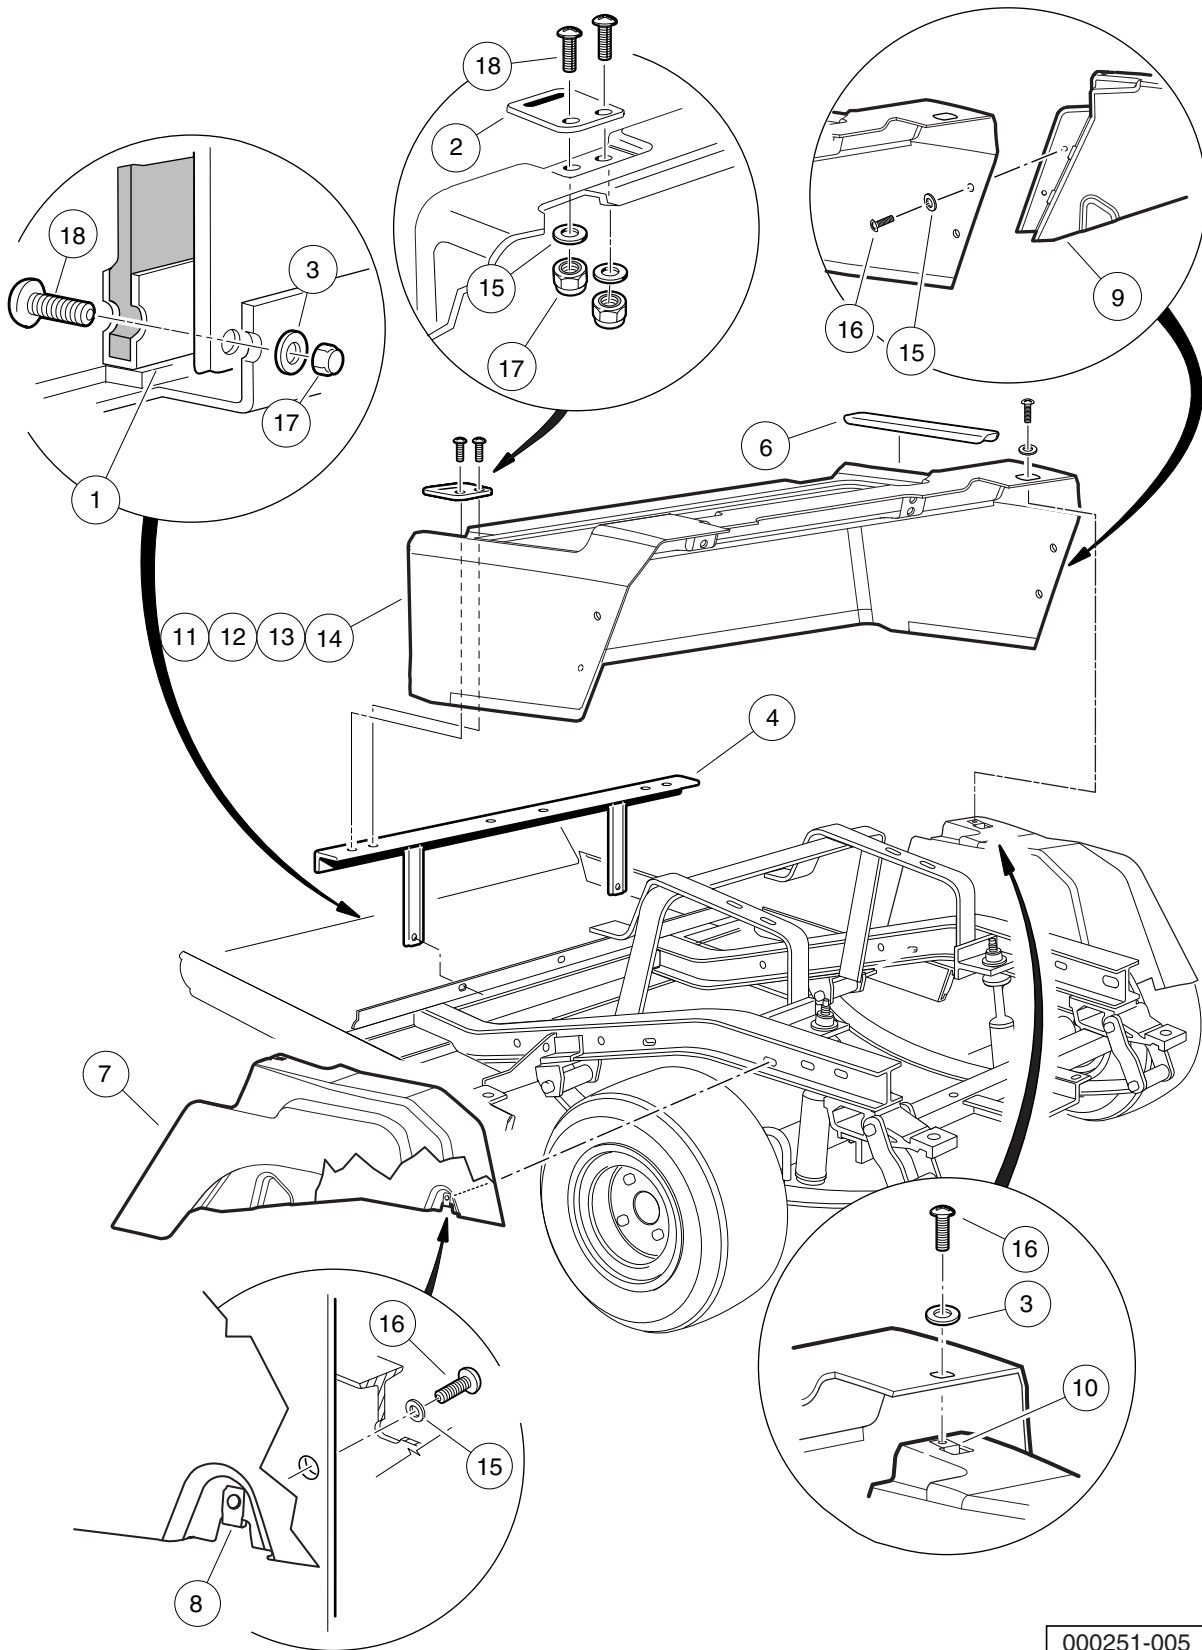 1**G****E**

000251-005

REAR BODY AND FENDER – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	<u>1010993</u>	Body Kick Plate	1			
2	<u>1012412</u>	Body, Hinge Plate	2			
3	<u>1014306</u>	Washer, 1/4" Type B Flat	8			
4	<u>1017141</u>	Body Support Weldment	1			
5	<u>101855801</u>	Cable Retainer	1			
6	<u>102221201</u>	Wear Pad	2			
7	<u>102777601</u>	Fender, Driver Side (includes item 8)	1			
8	<u>1016952</u>	U-Nut, 1/4-20	4			
9	<u>102777602</u>	Fender, Passenger Side (includes item 10)	1			
10	<u>1016952</u>	U-Nut, 1/4-20	4			
11	<u>102818301</u>	Body, Rear, Electric, Red	1			
12	<u>102818302</u>	Body, Rear, Electric, Orange	1			
13	<u>102818303</u>	Body, Rear, Electric, Green	1			
14	<u>102818305</u>	Body, Rear, Electric, Olive Green	1			
15	<u>332</u>	Washer, 1/4 Type A Narrow Flat	6			
16	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8			
17	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	6			
18	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	6			

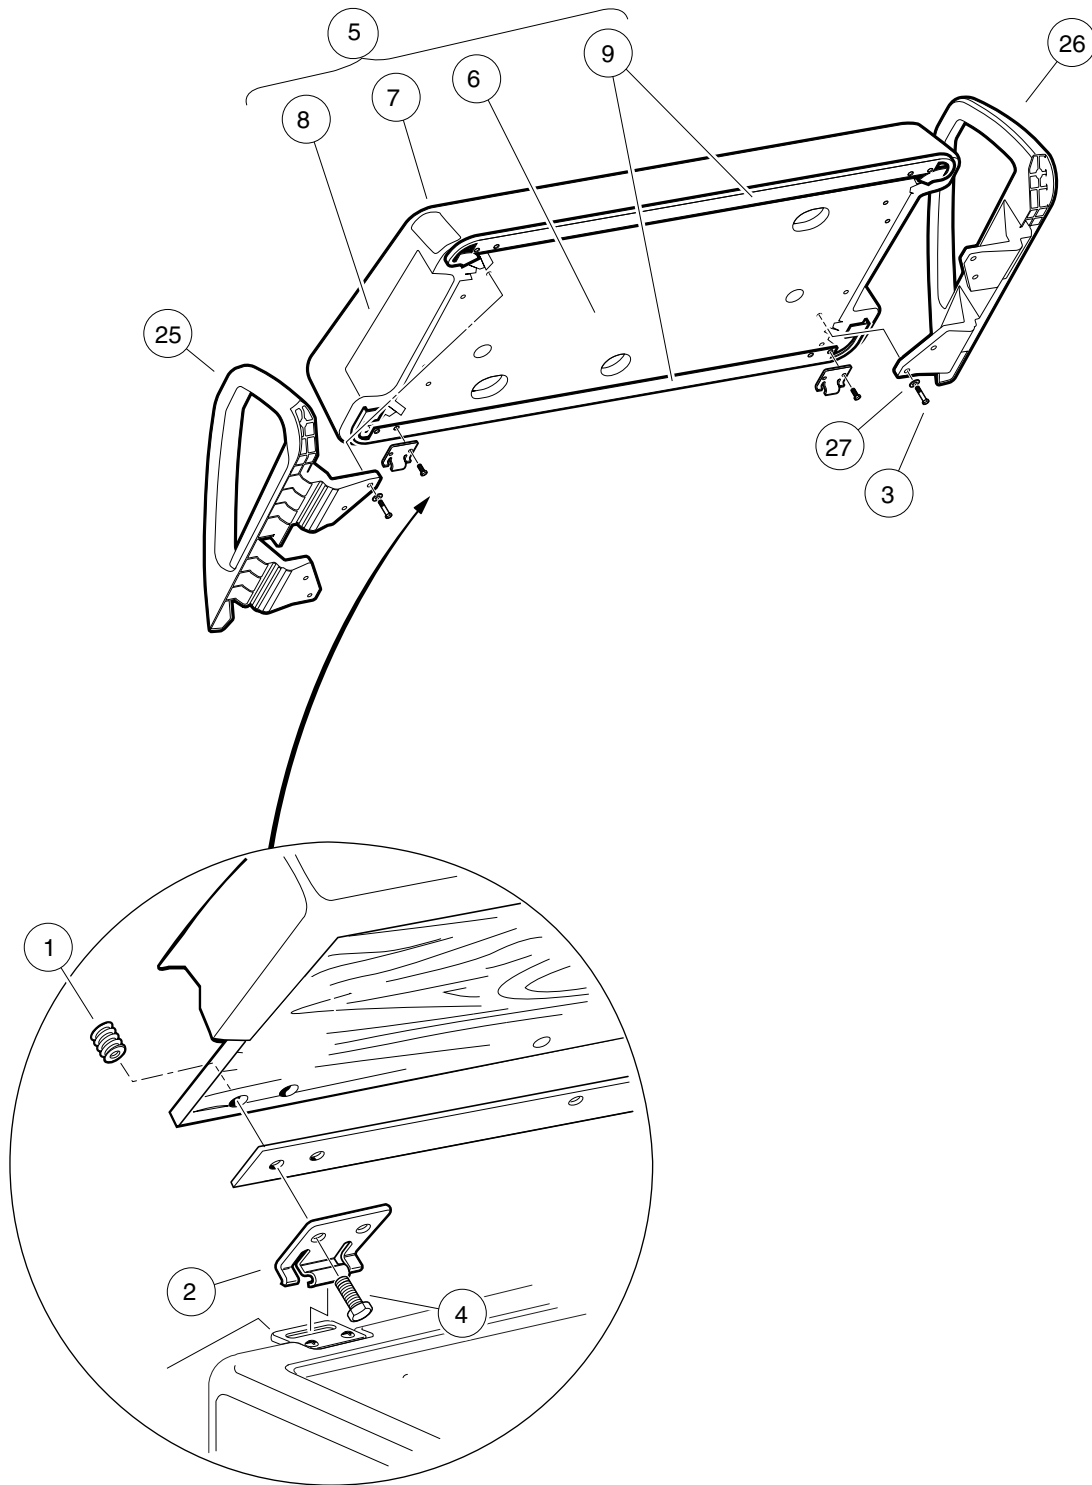 1**G****E**

000364-003

FRONT SEAT BOTTOM AND ARMRESTS


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010543	Insert - Wood	4
2	<u>1011652</u>	Hinge Plate	2
3	1016916	Screw, 1/4-20 X 1.50 Hex-Head Cap	8
4	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
5	<u>102174201</u>	Seat Bottom Assembly, Buff (includes items 6 through 9)	1
6	N/A	Plywood Assy	1
7	<u>101998211</u>	Vinyl Cover Seat Btm - Buffsvc	1
8	N/A	Foam, Seat	1
9	<u>101998501</u>	Gasket, Seat	2
10	<u>102174202</u>	Seat Bottom Assembly, White (includes items 11 through 14)	1
11	N/A	Plywood Assy	1
12	<u>101998212</u>	Vinyl Cover, Seat Bottom, White	1
13	N/A	Foam, Seat	1
14	<u>101998501</u>	Gasket, Seat	2
15	<u>102174204</u>	Seat Bottom Assembly, Black (includes items 16 through 19)	1
16	N/A	Plywood Assy	1
17	<u>101998214</u>	Vinyl Cover, Seat Bottom, Black	1
18	N/A	Foam, Seat	1
19	<u>101998501</u>	Gasket, Seat	2
20	<u>102174205</u>	Seat Bottom Assembly, Gray (includes items 21 through 24)	1
21	N/A	Plywood Assy	1
22	<u>101998215</u>	Vinyl Cover, Seat Bottom, Gray	1
23	N/A	Foam, Seat	1
24	<u>101998501</u>	Gasket, Seat	2
25	<u>103246701</u>	Hip Restraint, Drvr Side	1
26	<u>103246801</u>	Hip Restraint, Pass Side	1
27	<u>332</u>	Washer, 1/4 Type A Narrow Flat	8
Note: Sub-components contained in items 10, 15, and 20 are the same as those shown for item 5, except for the vinyl seat covers.			

1
G
E

1

G

 
E

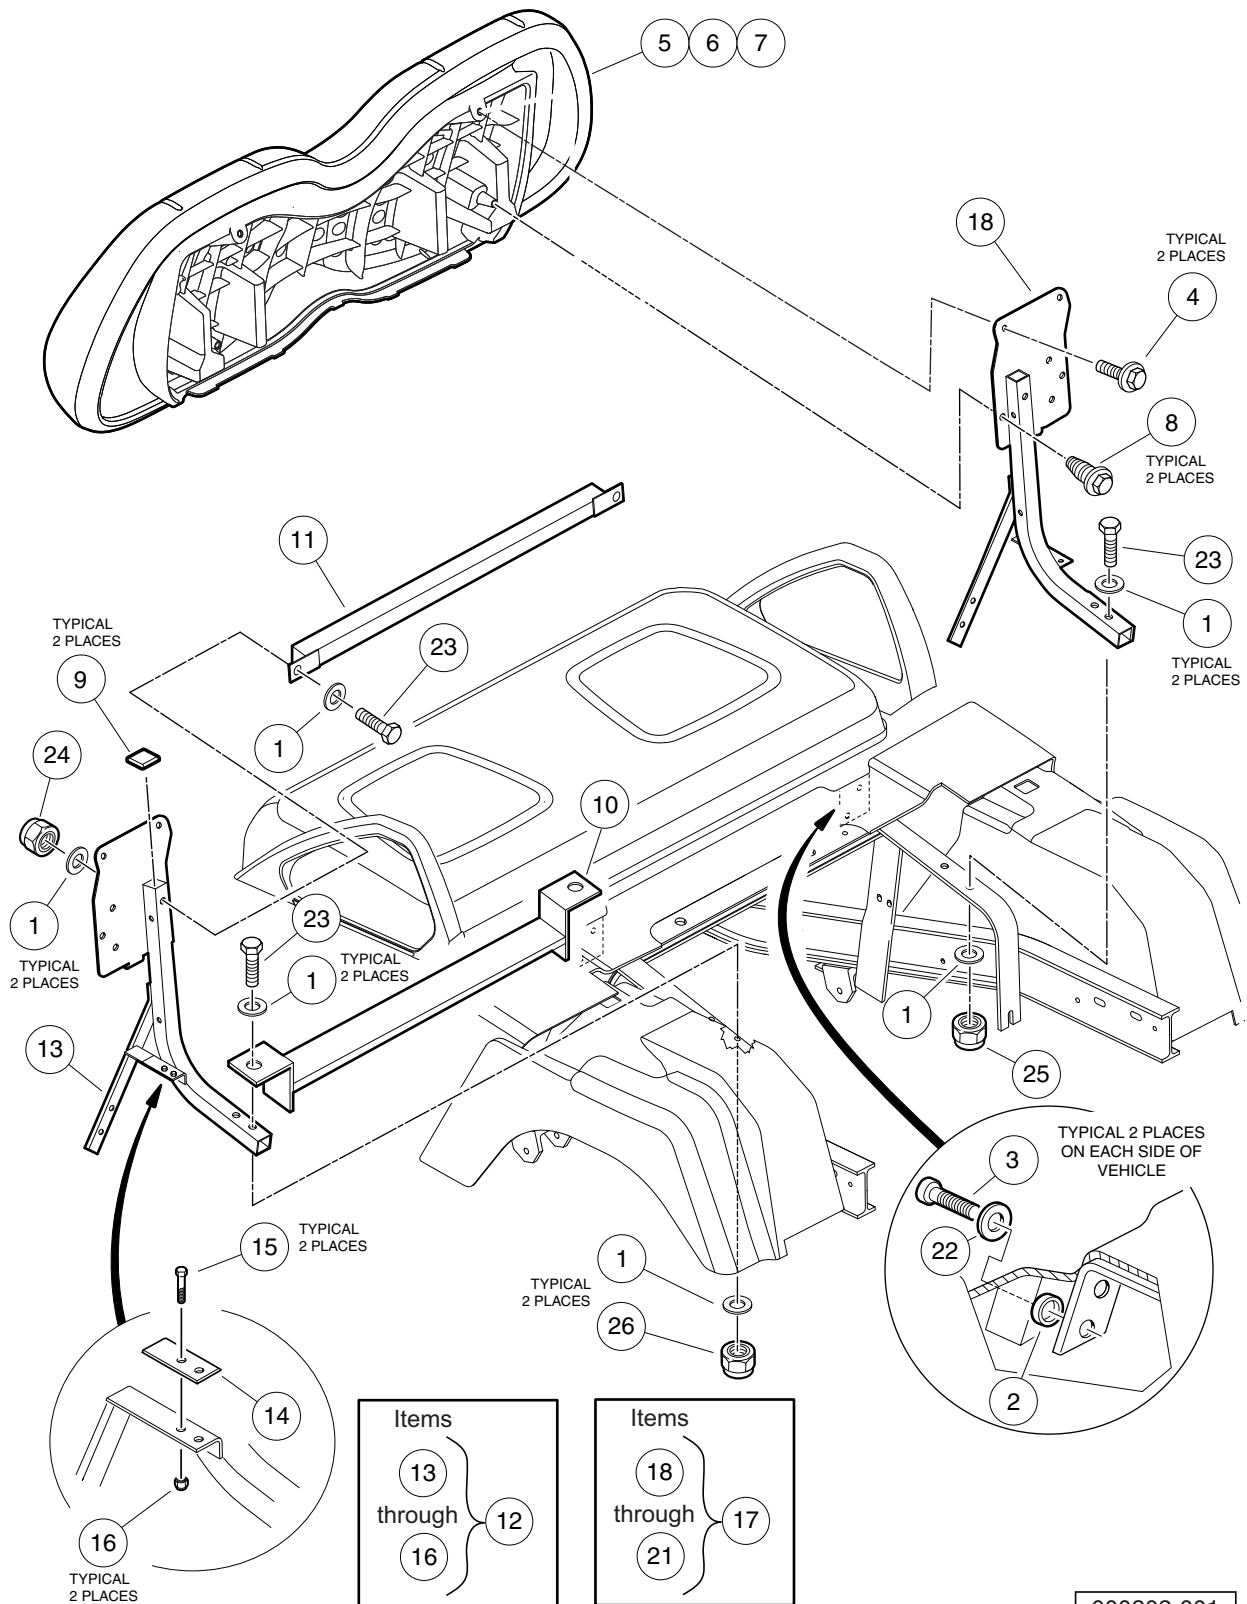

000302-001

SEAT BACK

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1011931</u>	Washer, 1/4 Flat	12	
2	<u>1017774</u>	Body Spacer	4	
3	<u>101910401</u>	Screw, 5/16-18 X 1.25 Thrd Frm	4	
4	<u>102296530</u>	Screw - M6 X 1.0 X 30 Sems	2	
5	<u>102503221</u>	Service Backrest Asm, Beige	1	
6	<u>102503222</u>	Service Backrest Asm, White	1	
7	<u>102503224</u>	Service Backrest Asm, Gray	1	
8	<u>102544201</u>	Screw, M6 Hex	2	
9	<u>102581201</u>	Plug, Square - 25.4 mm	2	
10	<u>102796101</u>	Weldment, Bed Support	1	
11	<u>102816201</u>	Seat Support, Cross Brace	1	
12	<u>102913101</u>	Seat Support W/striker, Drv (includes items 13 through 16)	1	
13	<u>102796301</u>	Seat Support, Driver-Side	1	
14	<u>102840301</u>	Striker Plate	1	
15	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2	
16	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2	
17	<u>102913102</u>	Support, Seat, Right (passenger) (includes items 18 through 21)	1	
18	<u>102796302</u>	Seat Support, Passenger-Side	1	
19	<u>102840301</u>	Striker Plate	1	
20	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2	
21	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2	
22	<u>1241</u>	Washer, 5/16 Type A Flat	4	
23	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	6	
24	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	
25	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	6	
26	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	2	

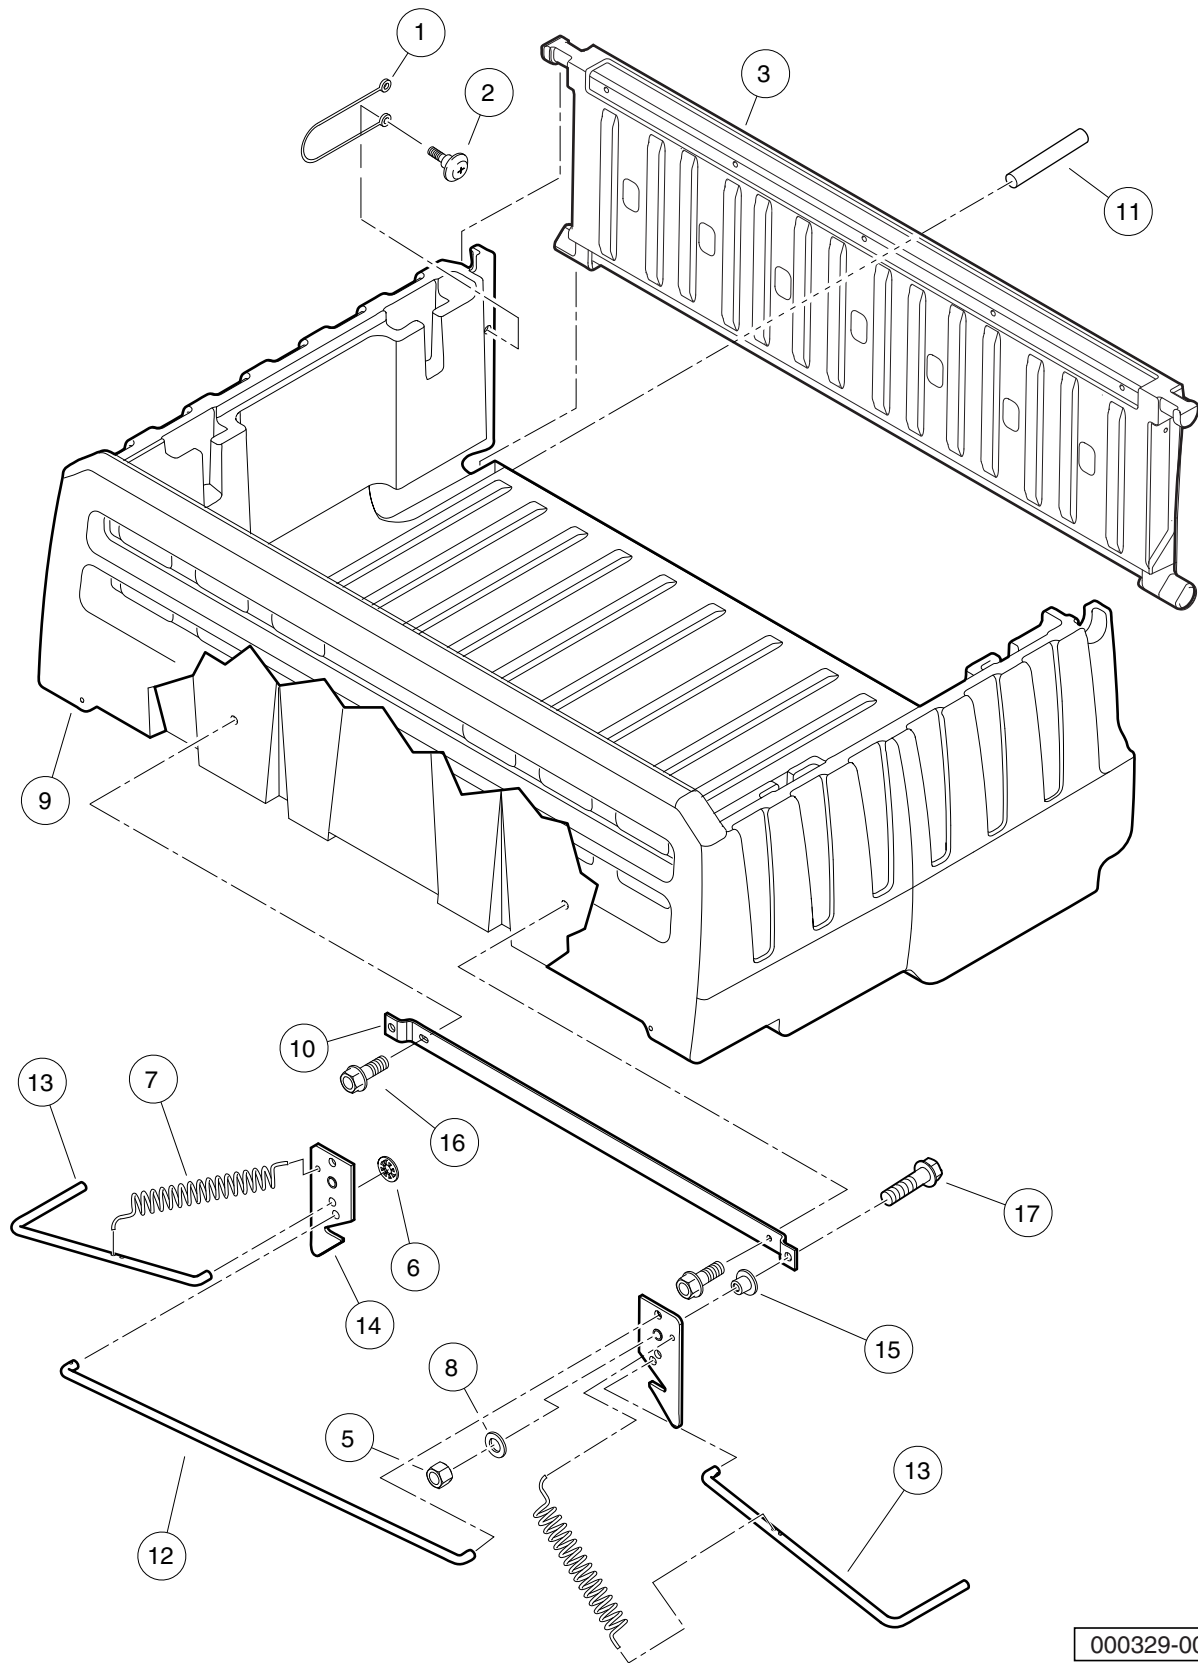 
1**G****E**

000329-002

CARGO BED

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102779001</u>	Lanyard, Tailgate	2
2	<u>102779401</u>	Bolt Lanyard	2
3	<u>102779501</u>	Tailgate	1
4	<u>103189901</u>	Bed Assembly (includes items 5 through 17)	1
5	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2
6	<u>1013876</u>	Pushnut, 3/8	4
7	N/A	Extension, Spring Latch	2
8	N/A	Washer, 3/8 Flat Type A	2
9	N/A	Bed	1
10	N/A	Support, Latch Link	1
11	N/A	Pin, Support	2
12	N/A	Rod, Long Link	1
13	N/A	Rod, Bed Lift, Short Bent	2
14	N/A	Catch, Tilt Bed	2
15	N/A	Bearing, Bronze, 1/2x9/32	2
16	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
17	320	Screw, 3/8-16 X 1.00 Hex-Head Cap	1
18	<u>103317501</u>	Kit, Plastic Bed Box Latch (includes items 19 through 22)	1
19	<u>1010545</u>	Screw, Hex Washer Head 1/4-14 X .75	2
20	<u>1011578</u>	Washer, 5/16 Type B Flat	2
21	103293501	Spring, Tilt Latch 3.4 Lb/in	2
22	103317601	Instr, Bed Box Field Kit	1

 1
G
E

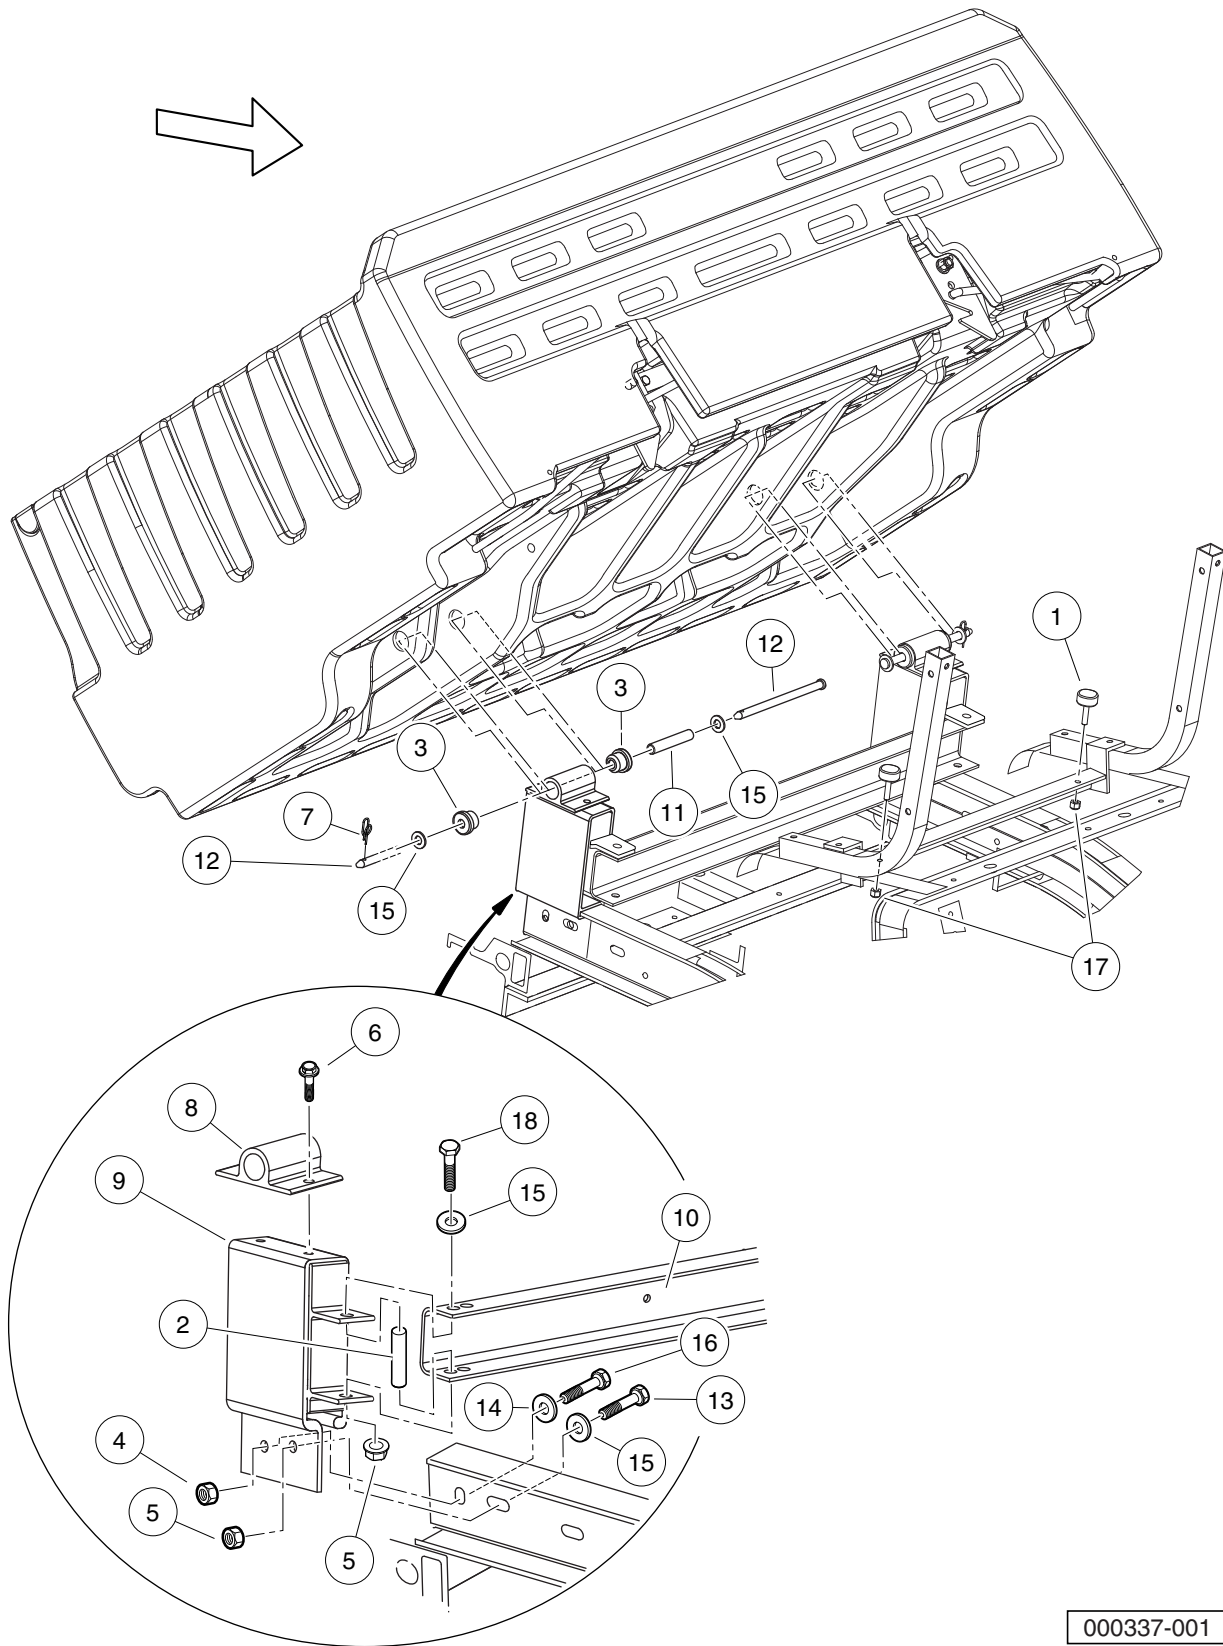1**G****E**

000337-001


BED HINGE

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010878</u>	Bumper, Rubber	2	
2	<u>1012303</u>	Bushing, Steel	2	
3	<u>1015583</u>	Bushing, Urethane	4	
4	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	2	
5	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4	
6	<u>102289001</u>	Screw, M8X1.25X30, Hex	4	
7	<u>102289301</u>	Rue Ring - 1/2"	2	
8	<u>102797201</u>	Hinge, Roto Bed	2	
9	<u>102820301</u>	Support, Hinge	2	
10	<u>102820501</u>	Stiffener, Bed Support	1	
11	<u>102821101</u>	Bushing, Steel	2	
12	<u>102823201</u>	Pin, Clevis, 3/8	2	
13	<u>320</u>	Screw, 3/8-16 X 1.00 Hex-Head Cap	2	
14	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2	
15	<u>334</u>	Washer, 3/8 Type A Flat	8	
16	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2	
17	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2	
18	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2	

1

G

 E

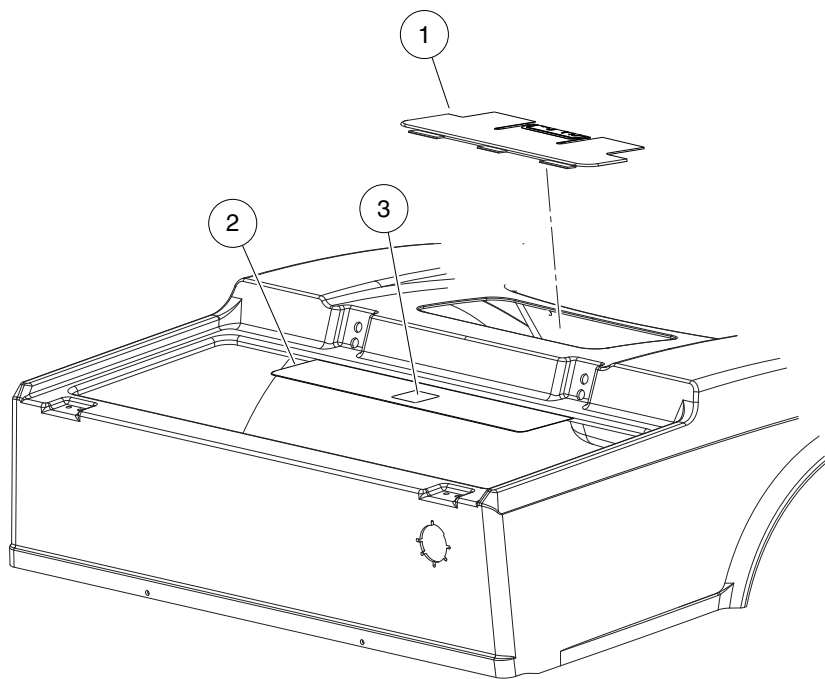

000819-002

ACCESS PANEL AND HEAT SHIELD

ITEM	PART NO.	DESCRIPTION	QTY
1	N/A	Access Panel - Black, Cut	1
2	<u>101806901</u>	Shield, Heat	1
3	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	1

1

G

E

1

G

E

WHEELS AND TIRES

2

 
 
G

E

2

G

E

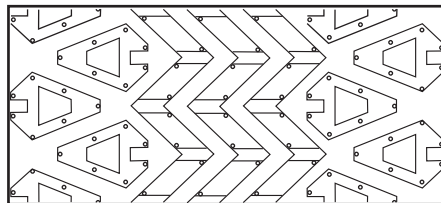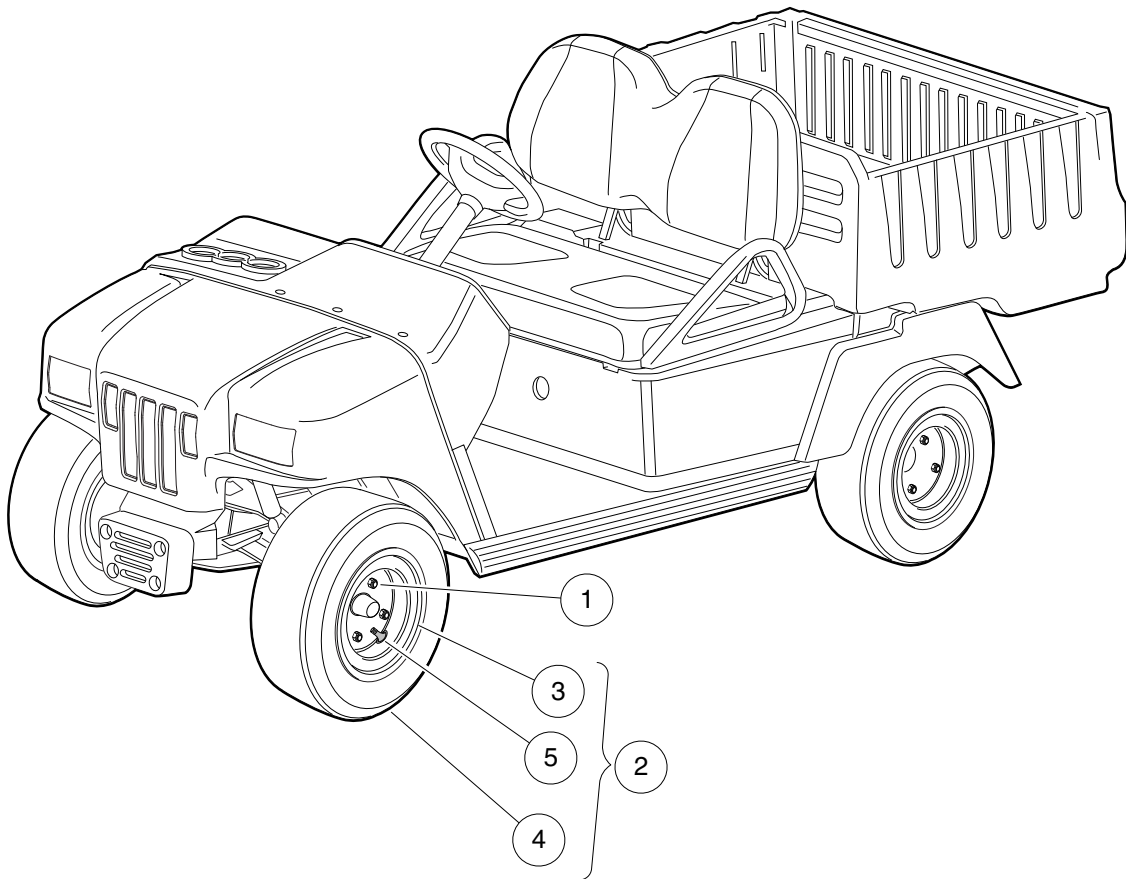

000224-002


WHEELS AND TIRES

ITEM	PART NO.	DESCRIPTION	QTY	2
		1 2 3 4		G
1	<u>1010984</u>	.500-20 Unf Lug Nut	16	E
2	<u>102819101</u>	Tire Assembly, All Trail II (includes items 3 through 5)	4	
3	<u>102815801</u>	Wheel Rim, Gray	1	
4	<u>102815901</u>	Tire, Unmounted, All Trail II	1	
5	<u>7310</u>	Valve Stem	1	

2

G

 E

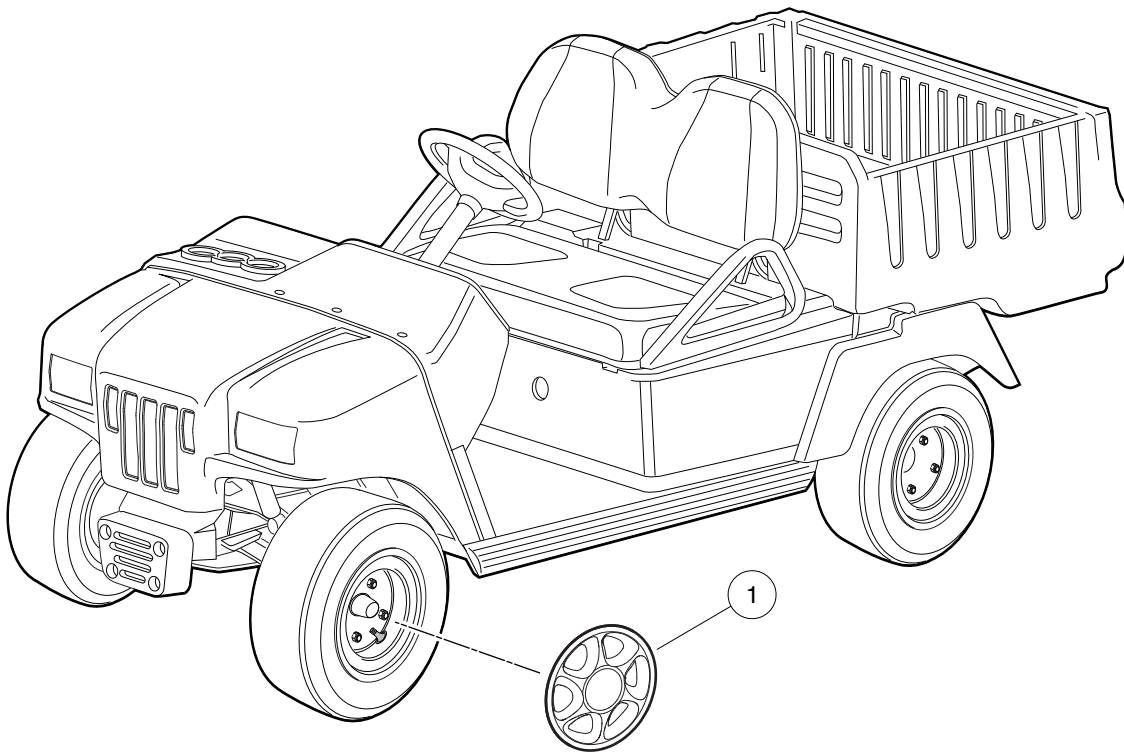

000318-002

HUBCAP – XRT810 AND XRT810-E

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>102861401</u>	1 2 3 4 Wheel Cover, Chrome Elite	4

2

G

E

2

G

E

DECALS

3

 
G

E

3

G

E

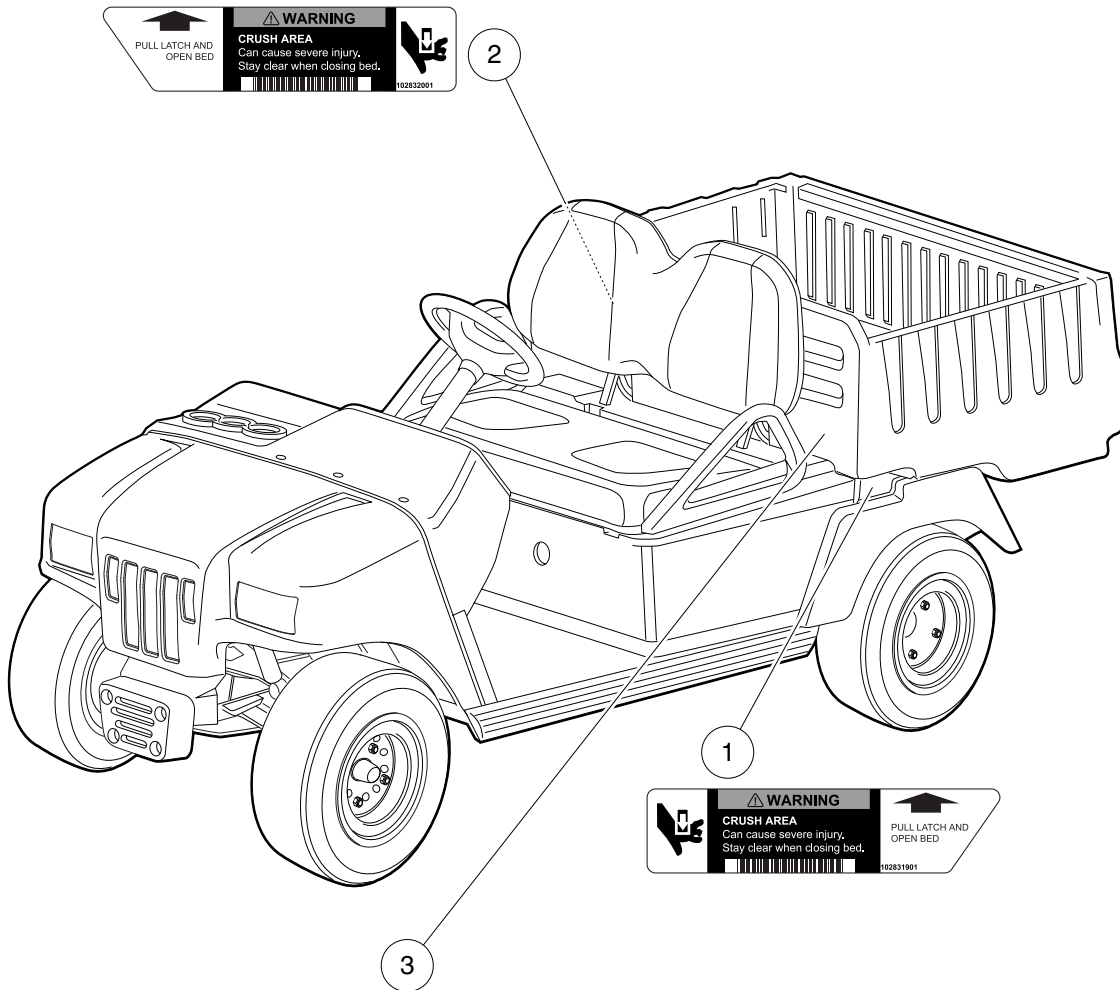

3

NOTICE



• THE OWNER/OPERATOR should maintain, lubricate, adjust, and operate the vehicle as detailed in the vehicle owners manual.

CQ 102832001

000225-002

SAFETY DECALS – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
1	<u>102831901</u>	1 2 3 4 Decal, Crush Warning, Driver-Side	1	
2	<u>102832001</u>	Decal, Crush Warning, Passenger-Side	1	
3	<u>102833301</u>	Decal, Maintenance	1	

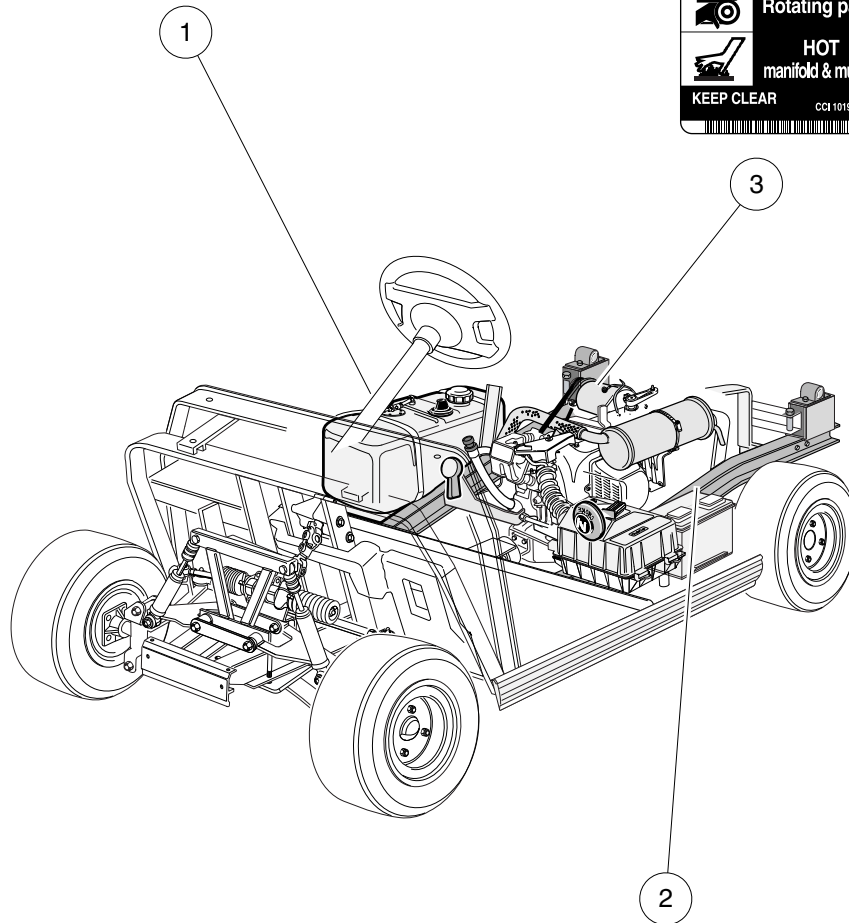  

000226-001

SAFETY DECALS – GASOLINE VEHICLES, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
1	<u>101547601</u>	1 2 3 4 Decal, Gasoline Explosion/Fire Warning	1	
2	<u>101915201</u>	Decal, Frame Ground and Governor Warning	1	
3	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	1	

3

G

E

OPERATING INSTRUCTIONS

- Read owner's manual and dash-mounted safety warnings prior to driving.
- Study and understand controls.

TO START ENGINE

- Place shift lever in "N" – Neutral position.
- Press brake pedal.
- Turn key switch to "START" position and release.

TO OPERATE VEHICLE

- Turn wheels to desired direction and ensure path is clear.
- Engine must be at idle before moving shift lever.
- While vehicle is stopped, and engine is at idle, place Forward/Reverse switch in desired position:
F – Forward N – Neutral R – Reverse (Buzzer will sound)
- Park brake will release and vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and push brake pedal.

BEFORE LEAVING

- Press park brake pedal until it locks and holds vehicle.
- Place Forward/Reverse switch in NEUTRAL position.
- Turn key to "OFF" position and remove key when not in use.

102825601

 
WARNING

ROLLOVER OR FALLING OFF MAY CAUSE SERIOUS INJURY OR DEATH

- Before using vehicle, read operating instructions.
- Do not start vehicle until all occupants are seated.
- Operate from driver side only and not on public roads.
- Drive slowly in turns and straight up and down slopes.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Remain seated while moving.
- Hold on to seat handle while moving.
- Two (2) persons per seat maximum.
- Never stand in front of or behind vehicle.
- Do not leave children unattended on vehicle.
- Keep entire body inside vehicle while moving.

OFF ON
START

102825401

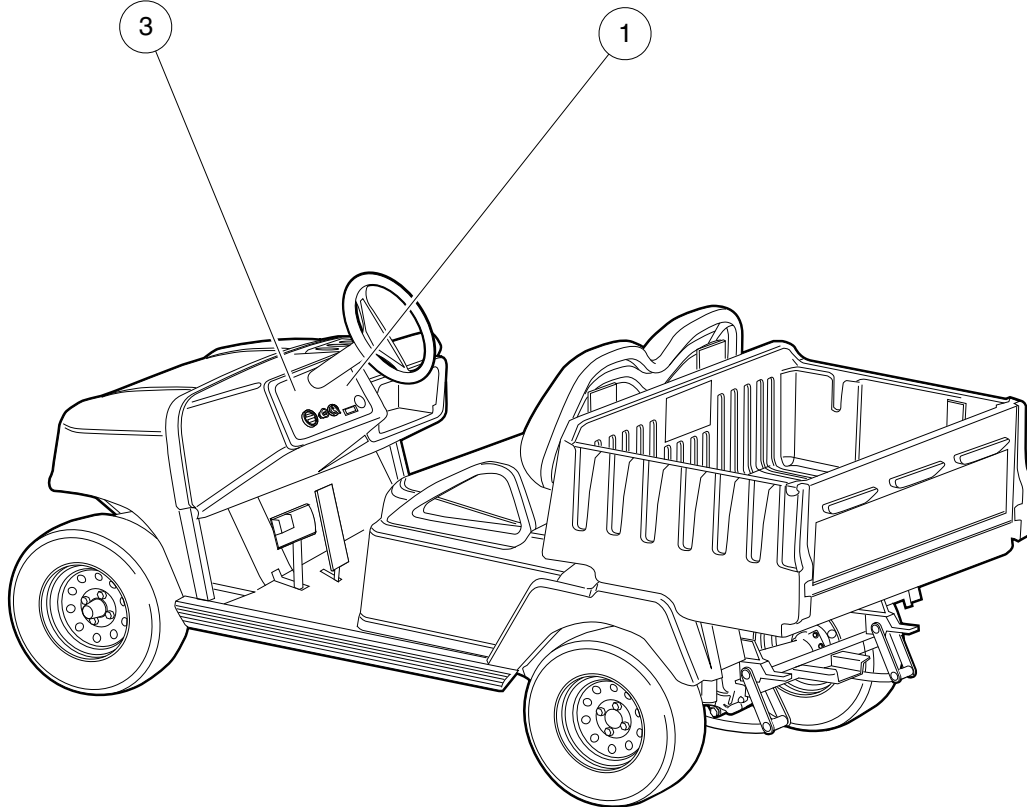

000227-002




SAFETY DECALS – GASOLINE VEHICLES, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
1	<u>102825401</u>	1 2 3 4 Decal, Warning, Instrument Panel	1	
2	<u>102825402</u>	Decal, Warning, Instrument Panel	1	
3	<u>102825601</u>	Decal, Operating Instructions, Instrument Panel	1	
Note: Item 2 is for use on vehicles equipped with a 12-volt accessory outlet.				

3

G

   E

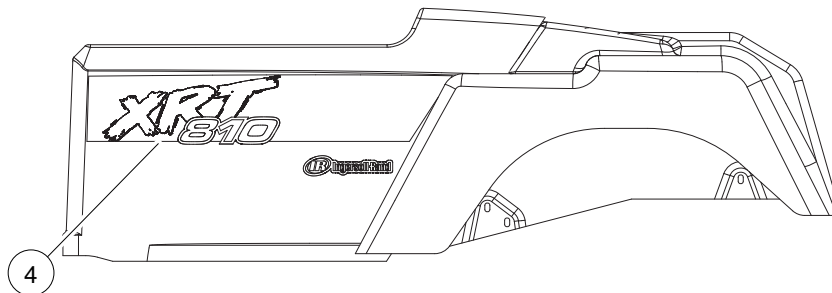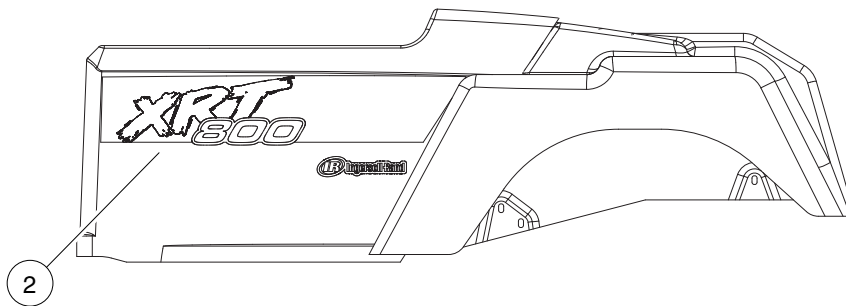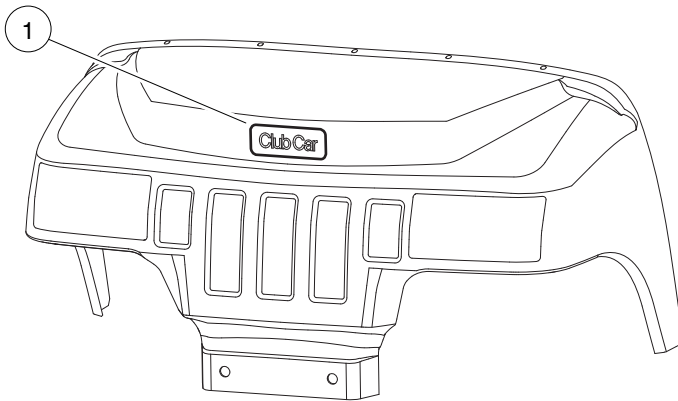

000300-002

LOGO DECALS – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>102278801</u>	Decal, Club Car	1	
2	<u>102850801</u>	Decal, 800 Drv	1	
3	<u>102850901</u>	Decal, 800 Pass	1	
4	<u>102851201</u>	Decal, 810 Drv	1	
5	<u>102851301</u>	Decal, 810 Pass	1	

NOTICE

Do not operate vehicle without this cover properly installed.
Do not direct water stream in this area; will cause damage to components.

CCI 101931501

**WARNING**

TOW


RUN

Place Tow/Run switch in TOW position before:

- Disconnecting or connecting batteries
- Towing
- Extended storage
- Servicing

**FAILURE TO HEED THIS
WARNING COULD RESULT
IN A BATTERY EXPLOSION**

 CCI 101908601

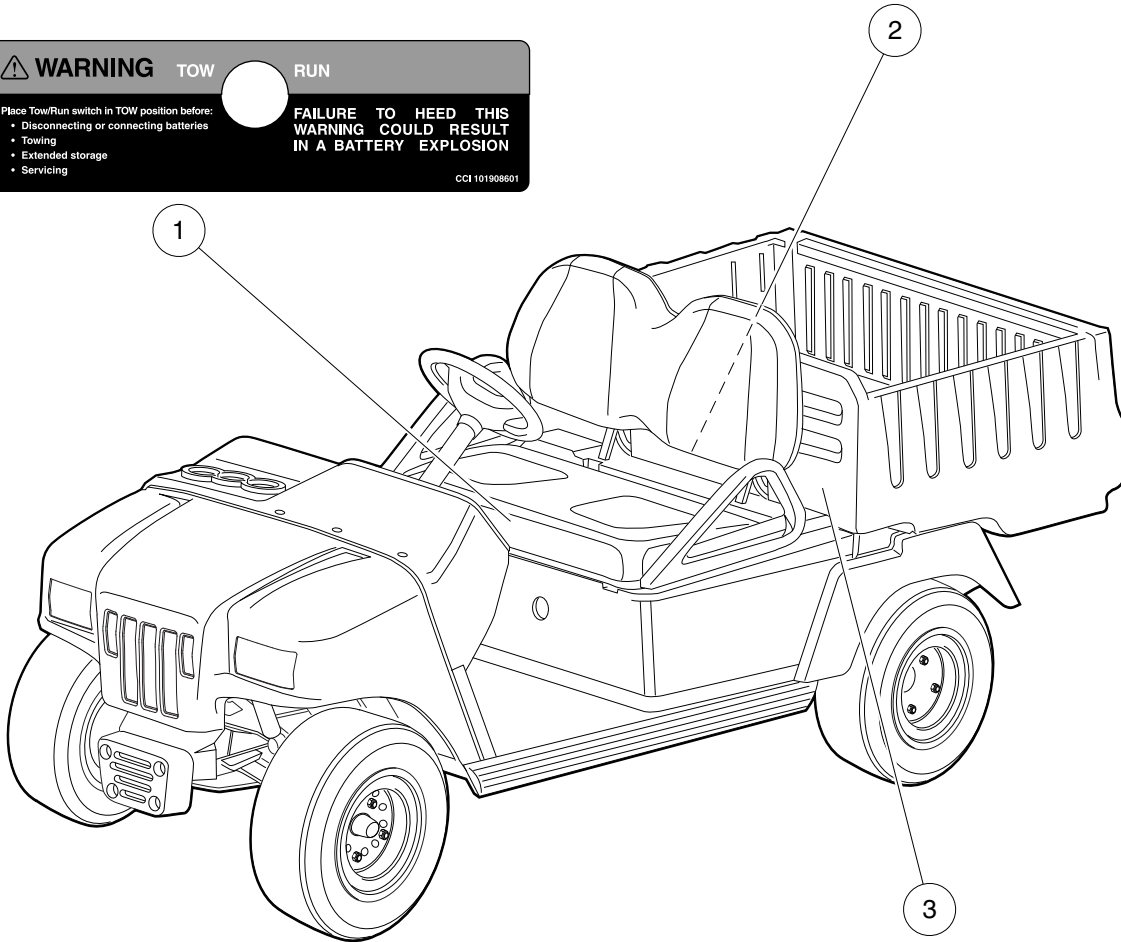**NOTICE**

- THE OWNER/OPERATOR should maintain, lubricate, adjust, and operate the vehicle as detailed in the vehicle owners manual.

CCI 102833301

000228-002



SAFETY DECALS – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
1	<u>101908601</u>	1 2 3 4 Decal, Tow/Run Switch Warning	1	
2	<u>101931501</u>	Decal, Component Cover	1	
3	<u>102833301</u>	Decal, Maintenance	1	

3

G

  E

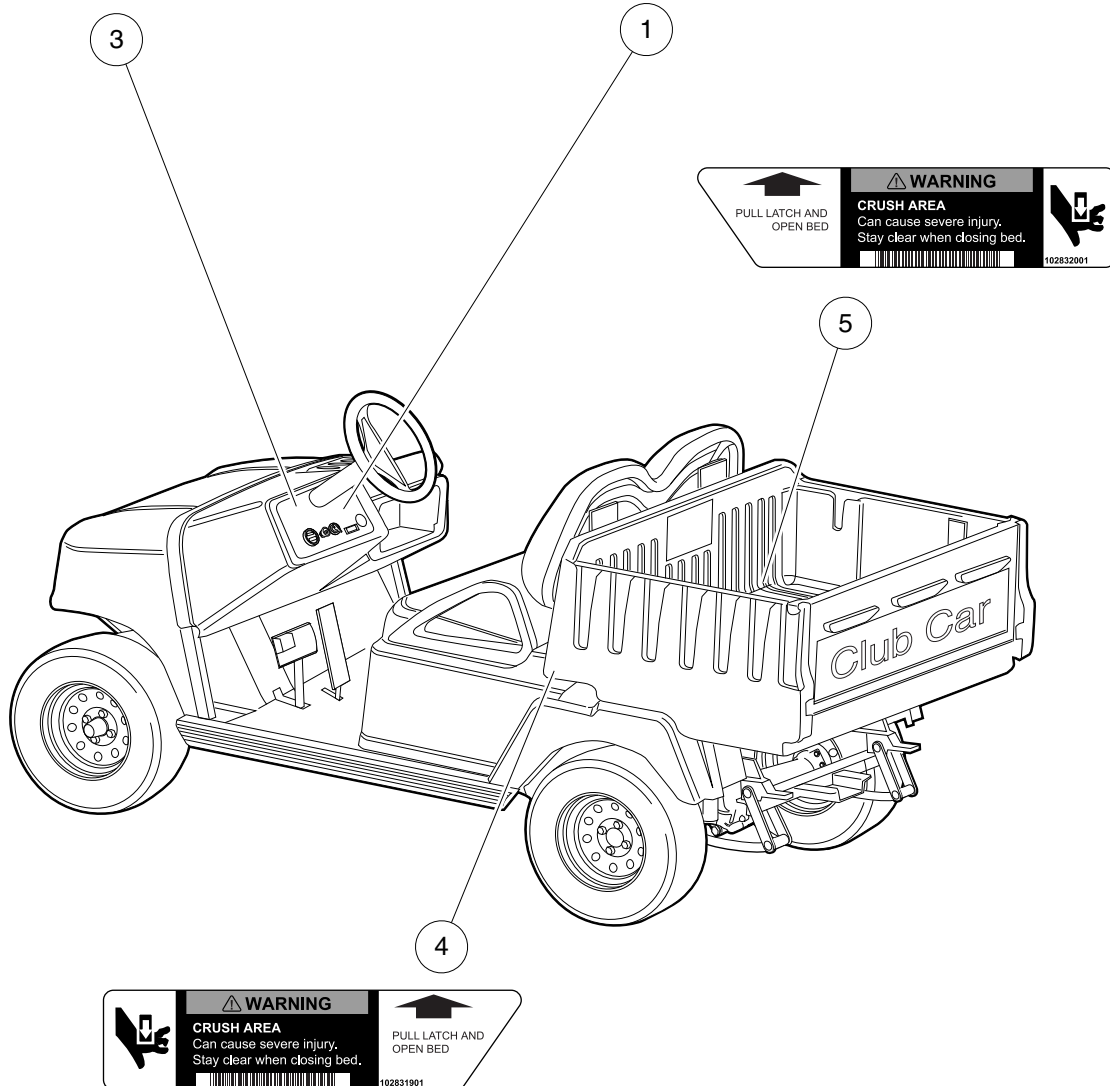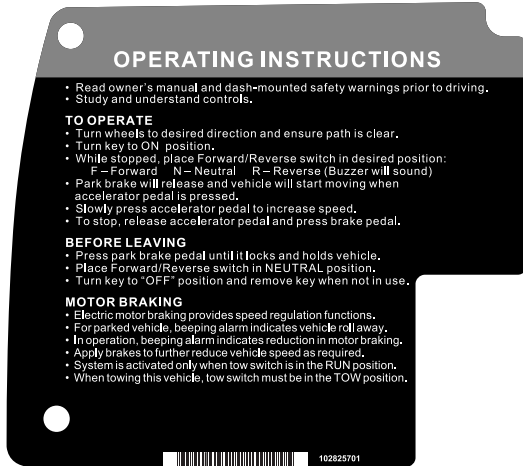

000229-002



SAFETY DECALS – ELECTRIC VEHICLES, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>102825501</u>	Decal, Warning, Instrument Panel	1	
2	<u>102825502</u>	Decal, Warning, Instrument Panel	1	
3	<u>102825701</u>	Decal, Operating Instructions, Instrument Panel	1	
4	<u>102831901</u>	Decal, Crush Warning, Driver-Side	1	
5	<u>102832001</u>	Decal, Crush Warning, Passenger-Side	1	
Note: Item 2 is for use on vehicles equipped with a 12-volt accessory outlet.				

3

G

  E

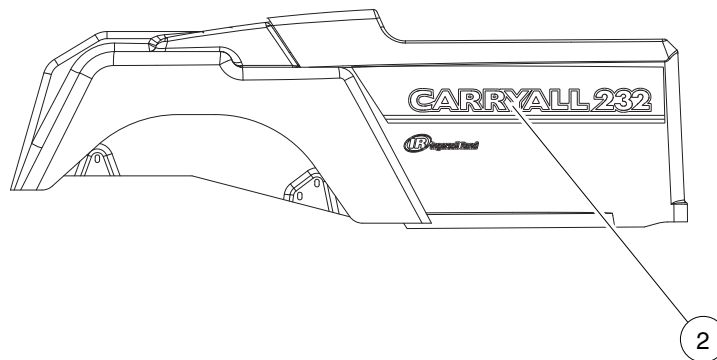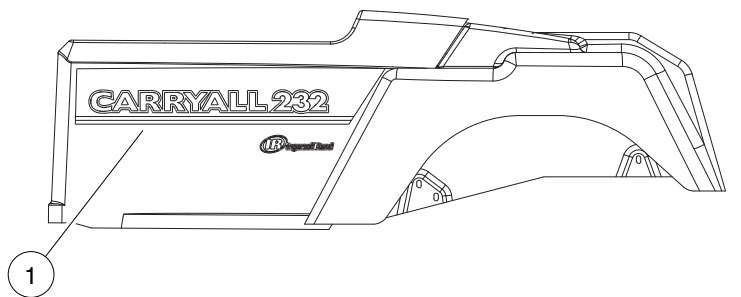

000299-003

LOGO DECALS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102278801</u>	Decal, Club Car	1
2	<u>102851001</u>	Decal, 800E, Drv	1
3	<u>102851101</u>	Decal, 800E, Pass	1
4	<u>102851401</u>	Decal, 810E, Drv	1
5	<u>102851501</u>	Decal, 810E, Pass	1

3

G

E

3

G

 
E

BRAKE SYSTEMS

4

G


E

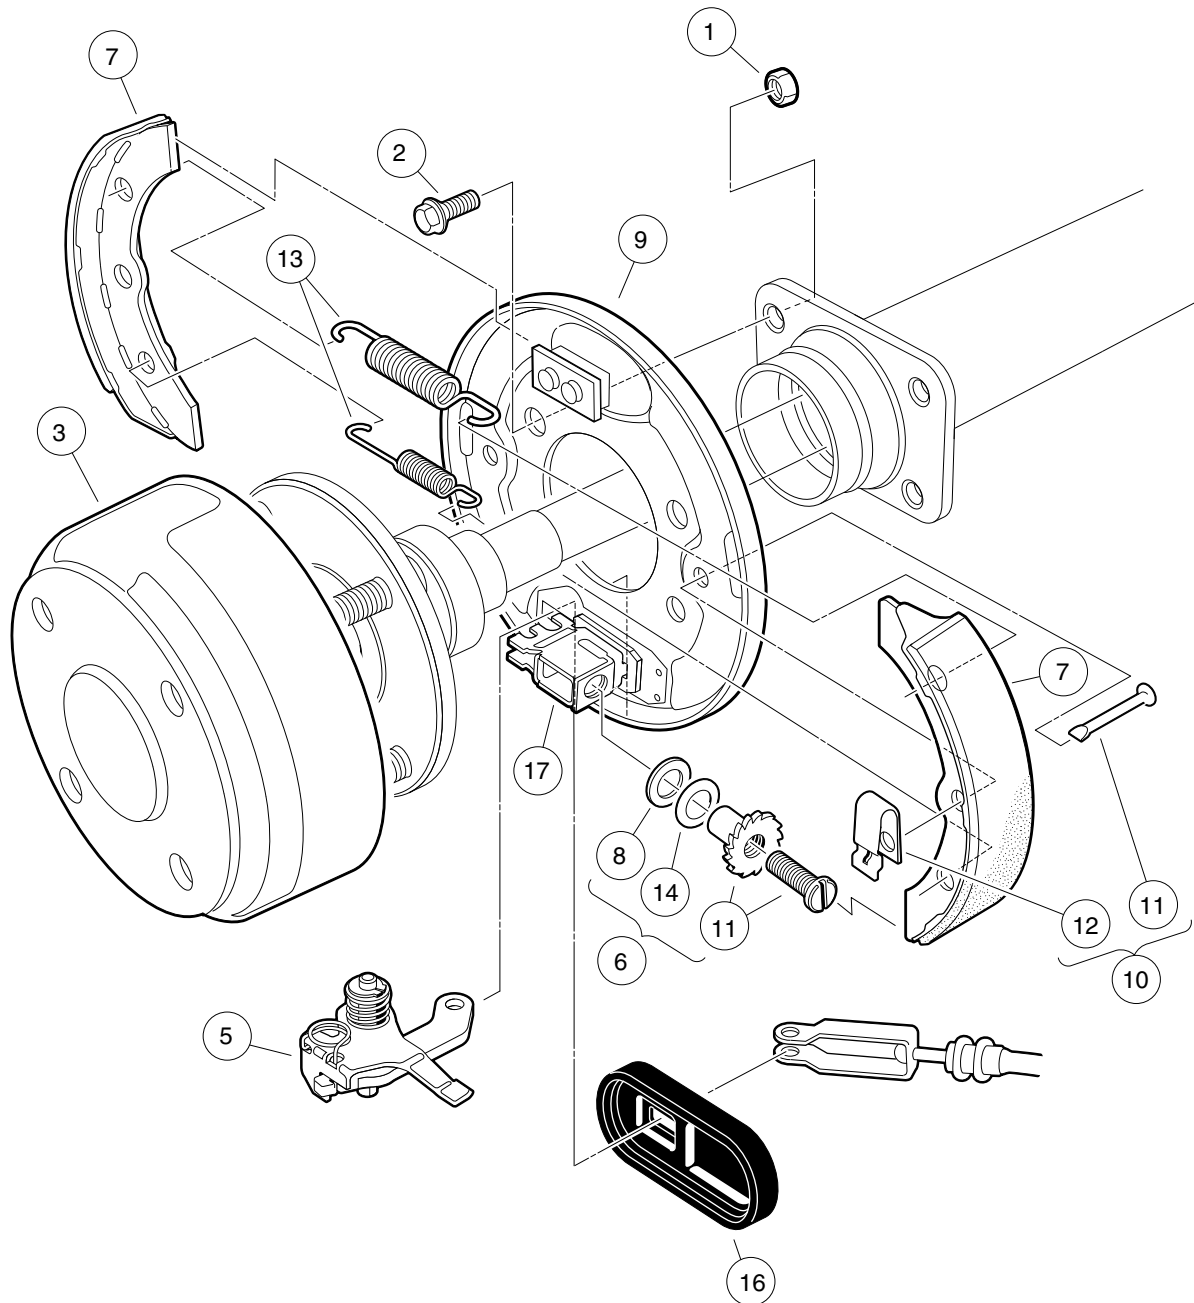4**G****E**

000186-001

REAR BRAKE ASSEMBLY, SELF-ADJUSTING – VEHICLE WITH 2-WHEEL BRAKES


ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	8	
2	<u>1014153</u>	Bolt, Brake Cluster Mounting	8	
3	<u>101791101</u>	Drum without Center Hole, Brake	2	
4	<u>103380201</u>	Asm, Brake Cluster, Mech, Drvr (includes items 5 through 17)	1	
5	<u>101815501</u>	Lever Assembly, Self-Adjusting Brake, Right (Passenger)	1	
6	<u>101816501</u>	Adj Mechanism, S.A. Brakes, Right (Passenger)	1	
7	<u>101823201</u>	Package, Brake Shoe, Self-Adjusting	1	
8	<u>101823801</u>	Plate, Washer, Brake, Self-Adjusting	1	
9	<u>103483101</u>	Back Plate, Rh	1	
10	<u>103483201</u>	Kit, Shoe Retainer (includes items 11 and 12)	1	
11	<u>1010953</u>	Pin	2	
12	<u>103483301</u>	Spring, Shoe, Clamp	2	
13	<u>103483401</u>	Package Brake Spring Self Adj (includes items 14 and 15)	1	
14	<u>101816401</u>	Brake Spring Self Adj	2	
15	<u>103483501</u>	Spring Brake	2	
16	<u>103483601</u>	Cover, Dust	1	
17	<u>103483701</u>	Brake Block	1	
18	<u>103380202</u>	Asm, Brake Cluster, Mech, Pass (includes items 19 through 31)	1	
19	<u>101815502</u>	Lever Assembly, Self-Adjusting Brake, Left	1	
20	<u>101816502</u>	Adjusting Mechanism, Self-Adjusting Brake, Left	1	
21	<u>101823201</u>	Package, Brake Shoe, Self-Adjusting	1	
22	<u>101823801</u>	Plate, Washer, Brake, Self-Adjusting	1	
23	<u>103483102</u>	Back Plate, Lh	1	
24	<u>103483201</u>	Kit, Shoe Retainer (includes items 25 and 26)	1	
25	<u>1010953</u>	Pin	2	
26	<u>103483301</u>	Spring, Shoe, Clamp	2	
27	<u>103483401</u>	Package Brake Spring Self Adj (includes items 28 and 29)	1	
28	<u>101816401</u>	Brake Spring Self Adj	2	
29	<u>103483501</u>	Spring Brake	2	
30	<u>103483601</u>	Cover, Dust	1	
31	<u>103483701</u>	Brake Block	1	
Note: Driver-side brake cluster not shown. Components have a similar appearance to passenger-side brake cluster components.				

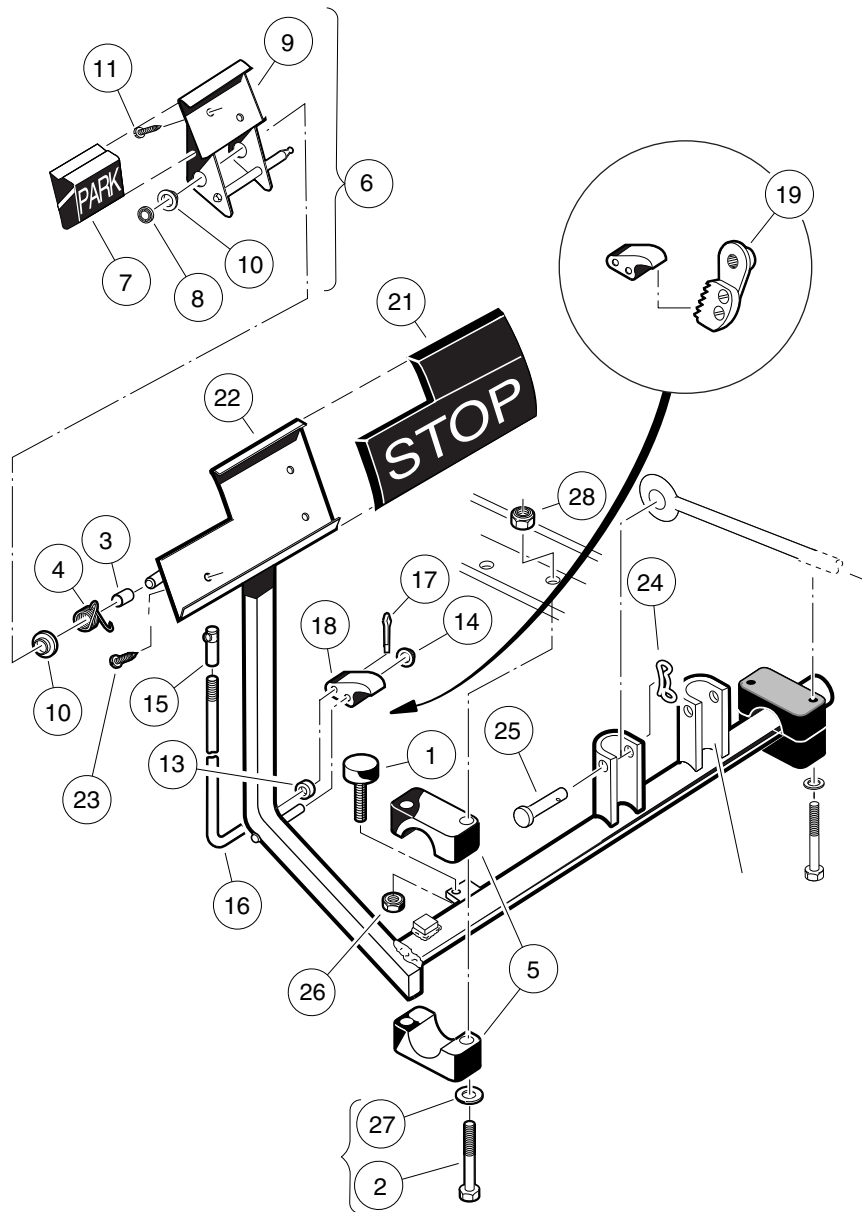 

000187-001

BRAKE PEDAL ASSEMBLY


ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>1010878</u>	Bumper, Rubber	1	E
2	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	4	
3	<u>1010927</u>	Hill Brake Spacer	1	
4	<u>1010933</u>	Spring, Hill Brake Torsion	1	
5	<u>1011402</u>	Package, Brake Mounting Block	1	
6	<u>1011418</u>	Kit, Hill Brake Pedal (includes items 7 through 11)	1	
7	<u>1013870</u>	Pad, Hill Brake	1	
8	<u>1013876</u>	Pushnut, 3/8	1	
9	N/A	Hill Brake Weld Assembly	1	
10	<u>1032</u>	Bushing, Nylon	2	
11	7716	Screw, #10-16 Type AB, Sheet Metal	2	
12	<u>101187702</u>	Kit, Hill Brake Latch (includes items 13 through 19)	1	
13	<u>1010805</u>	Sleeve, Hill Brake Rod	1	
14	<u>1010877</u>	Pushnut, 3/8	1	
15	1010932	Ball Joint, 1/4-28	1	
16	N/A	Rod, Hill Brake	1	
17	<u>1017029</u>	Pin, Cotter, 7/64 x 1/2 Stainless-Steel	1	
18	N/A	Pawl, Hill Brake	1	
19	101918501	Ratchet Assembly	1	
20	<u>101878201</u>	Brake Pedal Kit (includes items 21 through 23)	1	
21	<u>1013869</u>	Pad, Brake Pedal	1	
22	N/A	Weldment, Brake Pedal 4wb Std	1	
23	7716	Screw, #10-16 Type AB, Sheet Metal	3	
24	<u>102323101</u>	Pin, Bow Tie Locking	1	
25	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1	
26	<u>1028</u>	Nut, 1/4-20 Hex	1	
27	<u>1241</u>	Washer, 5/16 Type A Flat	4	
28	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4	

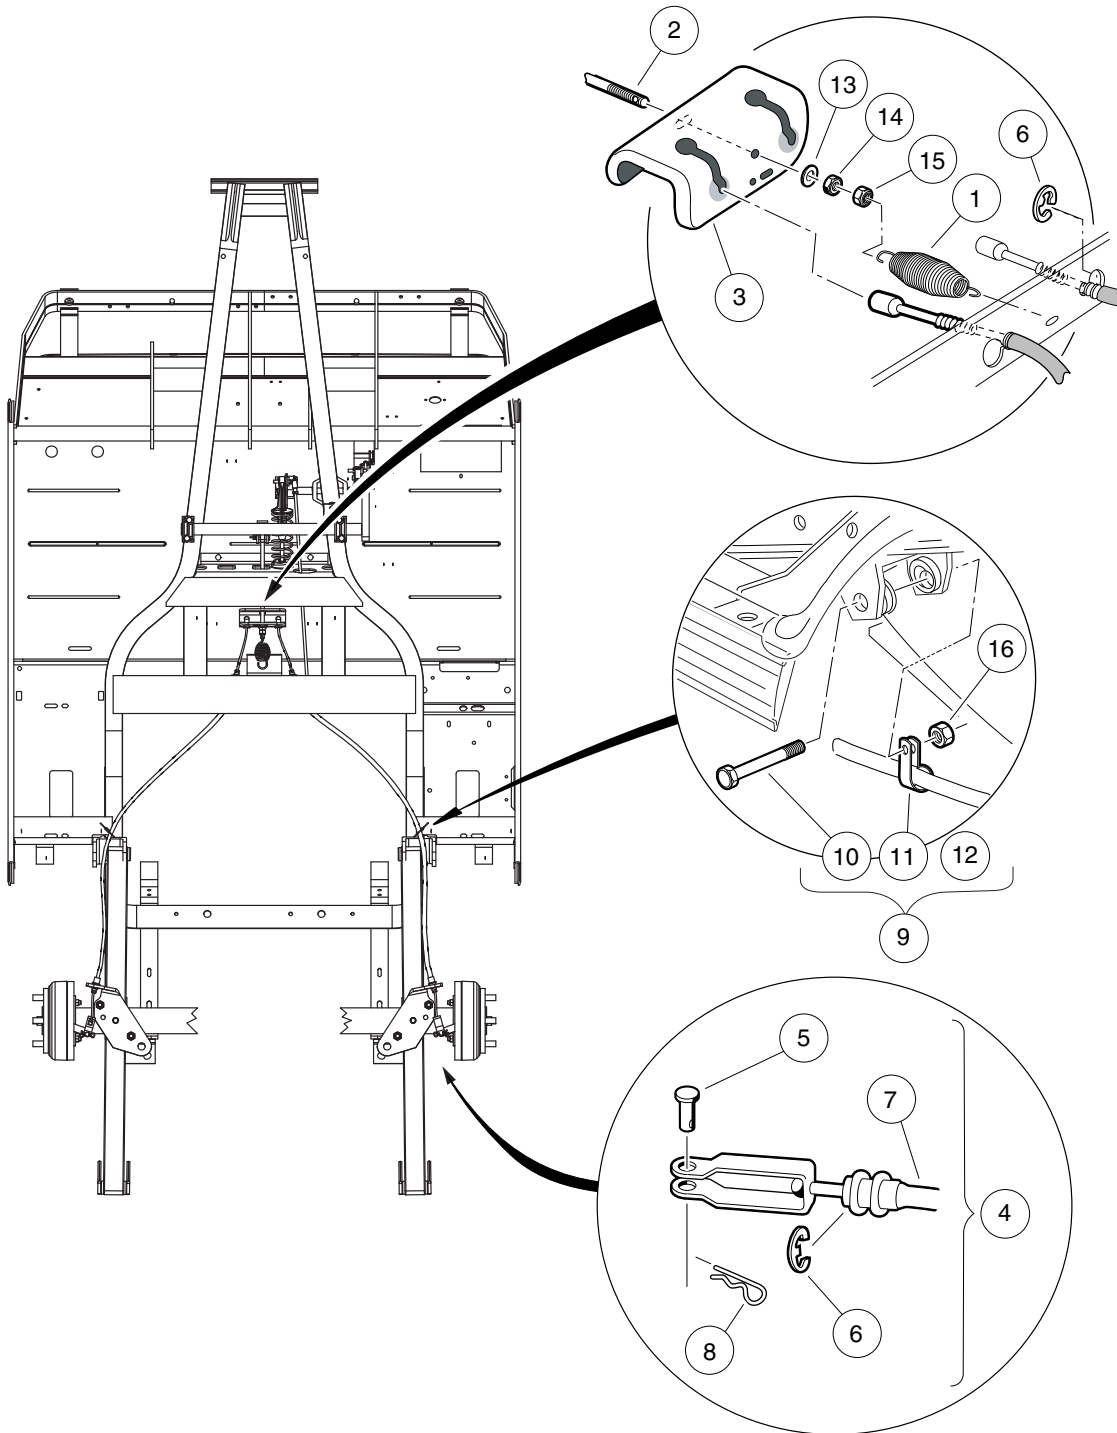 4**G****E**

000245-002

BRAKE CABLE, EQUALIZER, AND EQUALIZER ROD – VEHICLES WITH TWO-WHEEL BRAKES


ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1013531</u>	Spring, Brake Return	1	
2	<u>101953101</u>	Rod, Equalizer, 8.91"	1	
3	<u>101990801</u>	Equalizer Bracket	1	
4	<u>102022101</u>	Brake Cable Kit (includes items 5 through 8)	2	
5	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	1	
6	<u>1011779</u>	E-Clip, 1/2	2	
7	N/A	Cable, Brake, 41"	1	
8	<u>1035</u>	Cotter Pin, 3/32 x 1	1	
9	<u>103377301</u>	Kit, Field P-clamp, Brake Line (includes items 10 through 12)	1	
10	<u>102066201</u>	Screw, 3/8-16 X 3.50 Hex Cap	2	
11	<u>103377201</u>	P-clamp, Brake Line	2	
12	N/A	Instr Fd. P-clamp, Brake Line	1	
13	<u>1241</u>	Washer, 5/16 Type A Flat	5	
14	<u>1242</u>	Nut, 5/16-18 Hex	1	
15	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	5	
16	<u>8754</u>	Locknut, 3/8-16 Hex	2	

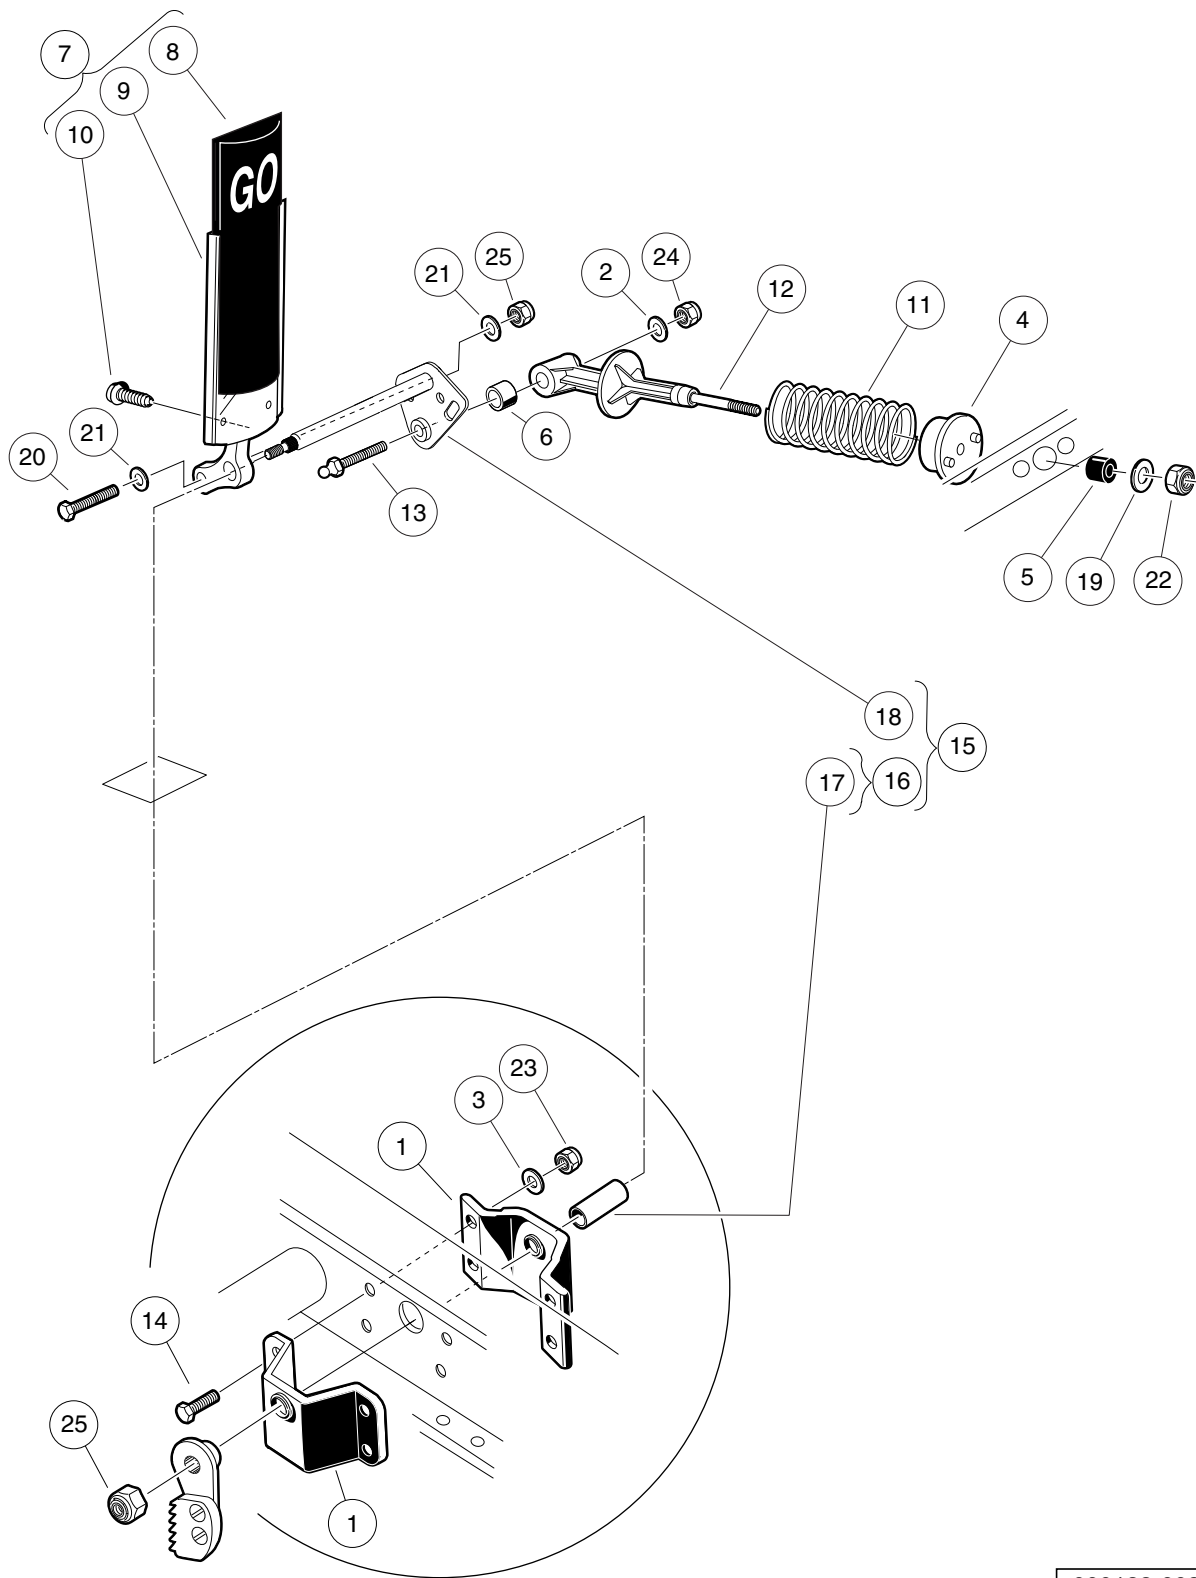 

000188-003

ACCELERATOR PEDAL – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2	
2	<u>1011931</u>	Washer, 1/4 Flat	1	
3	<u>1014007</u>	Washer, 1/4 Flat	4	
4	<u>1017378</u>	Cup, Spring	1	
5	<u>1017380</u>	Bumper, Spring Return	1	
6	<u>1017424</u>	Bearing, Pivot Support	1	
7	<u>1017696</u>	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1	
8	1013871	Pad, Accelerator Pedal	1	
9	N/A	Accelerator Pedal Weldment	1	
10	7716	Screw, #10-16 Type AB, Sheet Metal	4	
11	101796201	Spring, Accelerator Return	1	
12	<u>101817401</u>	Retainer, Spring	1	
13	101818801	Stud, 1/4-28 X 1.35 Ball	1	
14	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4	
15	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 16 through 18)	1	
16	<u>1011700</u>	Spacer Assembly (includes item 17)	1	
17	101919801	Spacer, Accelerator	1	
18	N/A	Pivot Rod Weldment	1	
19	<u>1241</u>	Washer, 5/16 Type A Flat	1	
20	<u>1624</u>	Screw, 3/8-16 X 1.50 Hex-Head Cap	1	
21	<u>334</u>	Washer, 3/8 Type A Flat	2	
22	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	
23	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4	
24	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1	
25	<u>8754</u>	Locknut, 3/8-16 Hex	2	

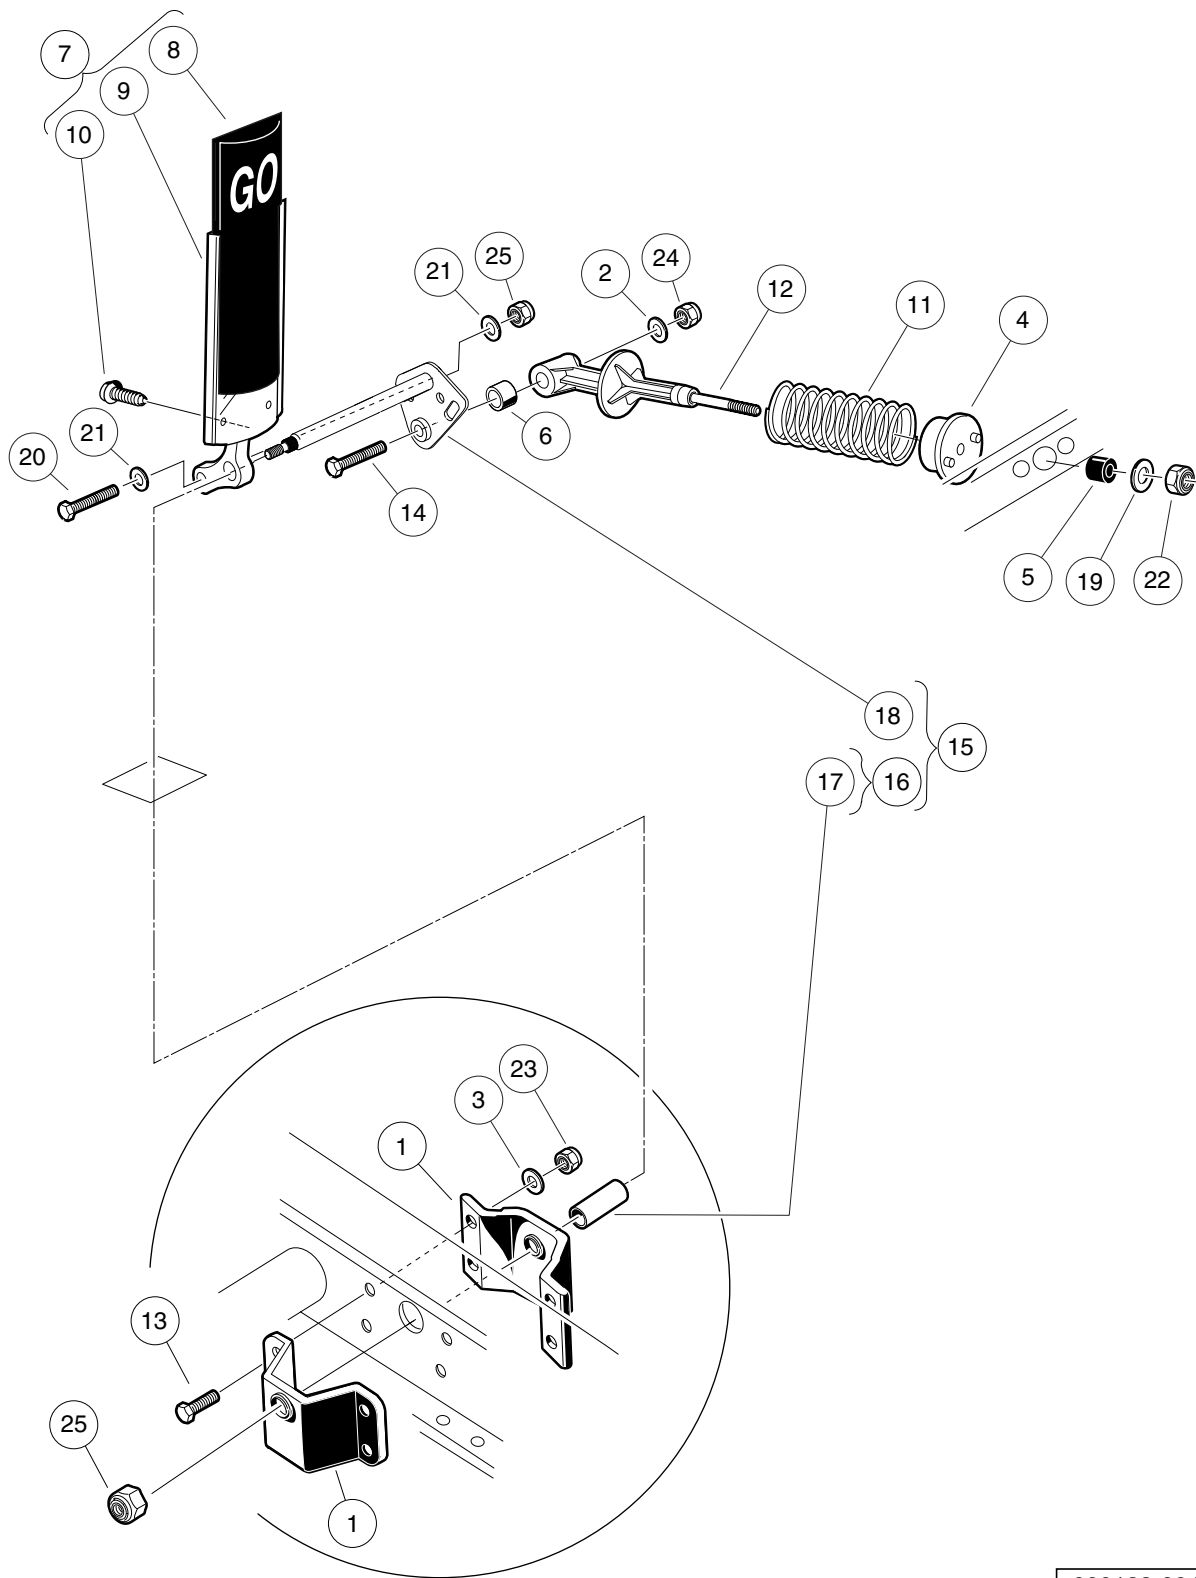 


000188-004

ACCELERATOR PEDAL ASSEMBLY – ELECTRIC VEHICLES WITH MCOR

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2	
2	<u>1011931</u>	Washer, 1/4 Flat	1	
3	<u>1014007</u>	Washer, 1/4 Flat	4	
4	<u>1017378</u>	Cup, Spring	1	
5	<u>1017380</u>	Bumper, Spring Return	1	
6	<u>1017424</u>	Bearing, Pivot Support	1	
7	<u>1017696</u>	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1	
8	1013871	Pad, Accelerator Pedal	1	
9	N/A	Accelerator Pedal Weldment	1	
10	7716	Screw, #10-16 Type AB, Sheet Metal	4	
11	101796201	Spring, Accelerator Return	1	
12	<u>101817401</u>	Retainer, Spring	1	
13	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4	
14	<u>101862001</u>	Screw, 1/4-20 X 1.500 Flange	1	
15	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 16 through 18)	1	
16	<u>1011700</u>	Spacer Assembly (includes item 17)	1	
17	101919801	Spacer, Accelerator	1	
18	N/A	Pivot Rod Weldment	1	
19	<u>1241</u>	Washer, 5/16 Type A Flat	1	
20	<u>1624</u>	Screw, 3/8-16 X 1.50 Hex-Head Cap	1	
21	<u>334</u>	Washer, 3/8 Type A Flat	2	
22	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	
23	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4	
24	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1	
25	<u>8754</u>	Locknut, 3/8-16 Hex	2	

 4
G
E

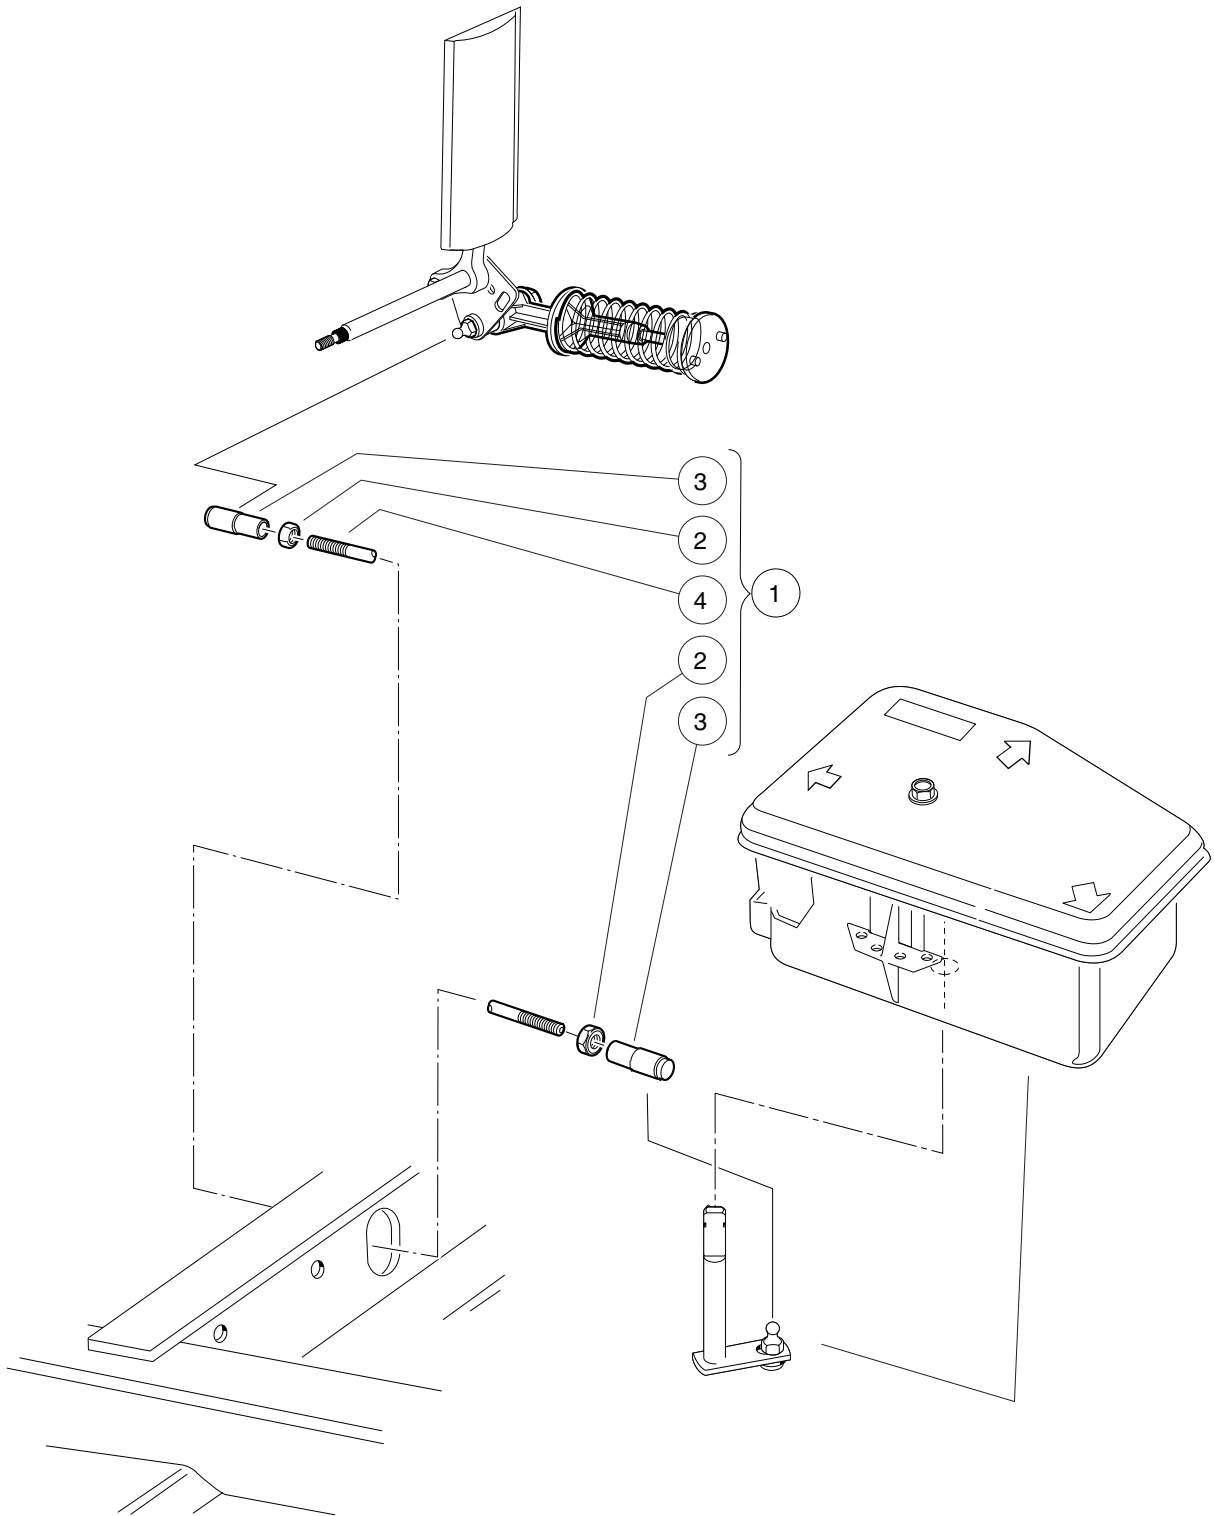

000362-001

ACCELERATOR ROD – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101912401	Rod, Accelerator (includes items 2 through 4)	1
2	<u>1011084</u>	Nut, 1/4-28 Hex Jam	2
3	<u>1011734</u>	Joint, Ball	2
4	N/A	Accelerator Rod	1

4

G

E

 
4
G
E

STEERING AND SUSPENSIONS

5

G

E

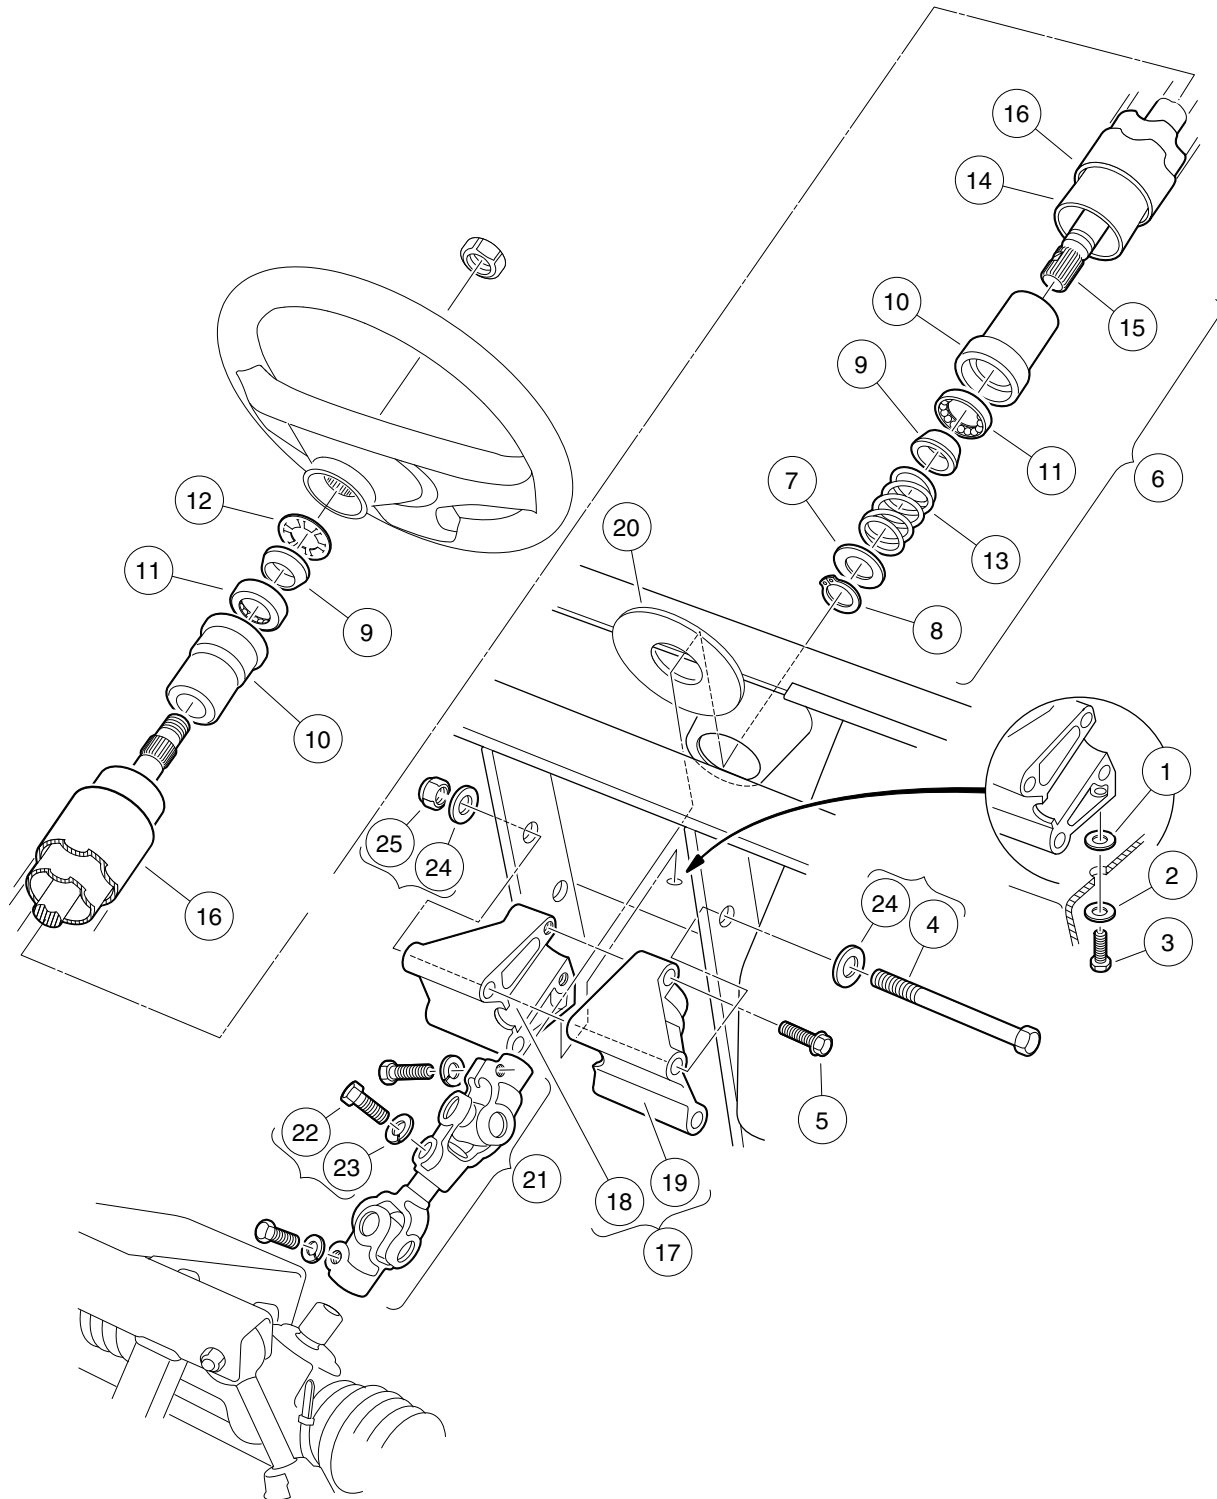5**G****E**

000247-001

STEERING COLUMN


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011578</u>	Washer, 5/16 Type B Flat	1
2	<u>1011697</u>	Washer, 5/16 Flat	1
3	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	1
4	<u>1016183</u>	Screw, 3/8-16 X 7.00 Hex Cap	2
5	<u>1016269</u>	Screw, 5/16-18 Thrd Forming	2
6	<u>1017313</u>	Steering Shaft Assembly (includes items 7 through 15)	1
7	<u>1012604</u>	Washer, 0.675 ID X 1.19 OD	1
8	<u>1012605</u>	Ring, 0.579 Internal Retaining	1
9	<u>1014125</u>	Wedge, Molded	2
10	<u>1014126</u>	Seat, Plastic Bearing	2
11	<u>1014213</u>	Bearing, Ball	2
12	<u>1014214</u>	Ring, Retaining	1
13	<u>1014217</u>	Spring, Steering Shaft	1
14	<u>1017314</u>	Column, Aluminum Steering	1
15	<u>1017315</u>	Shaft Steering Column	1
16	<u>1017317</u>	Tube Cover, Steering Column	1
17	101984801	Kit, Steering Column Mounting Bracket (includes items 18 and 19)	1
18	N/A	Bracket, RH Steering Column Mount	1
19	N/A	Bracket, LH Steering column mount	1
20	<u>102278001</u>	Boot, Steering Column Round	1
21	<u>103601601</u>	Shaft, Intermediate Steering (includes items 22 and 23)	1
22	<u>1017226</u>	Bolt, Hex-Head, 8mm X 1.25 - 30	3
23	<u>7174</u>	Lockwasher, 5/16 Split	3
24	<u>334</u>	Washer, 3/8 Type A Flat	4
25	<u>8754</u>	Locknut, 3/8-16 Hex	2

5
G
E

5

G

 E

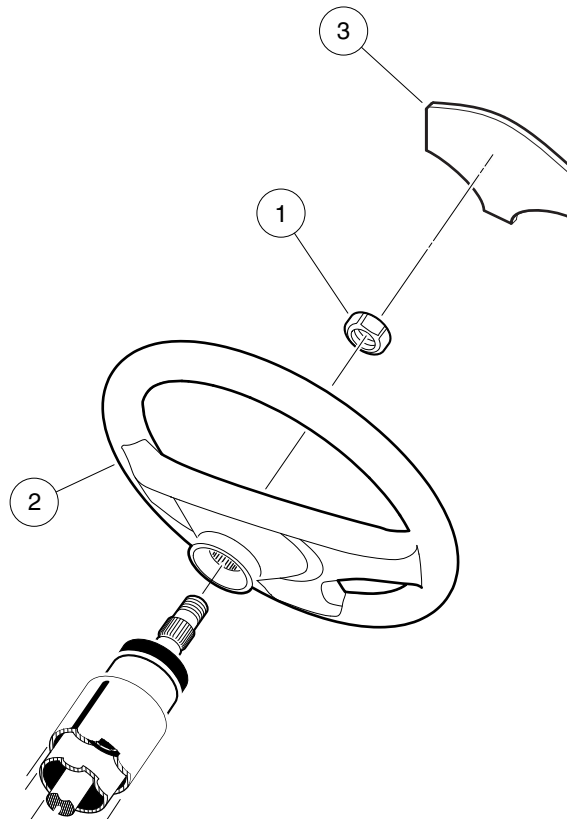

000246-001

STEERING WHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1017273</u>	Nut, 5/8-18 Nylon Insert Jam	1
2	<u>102796201</u>	Steering Wheel, Spline	1
3	<u>102822401</u>	Wheel Center	1

5

 
G

E

5

G

E

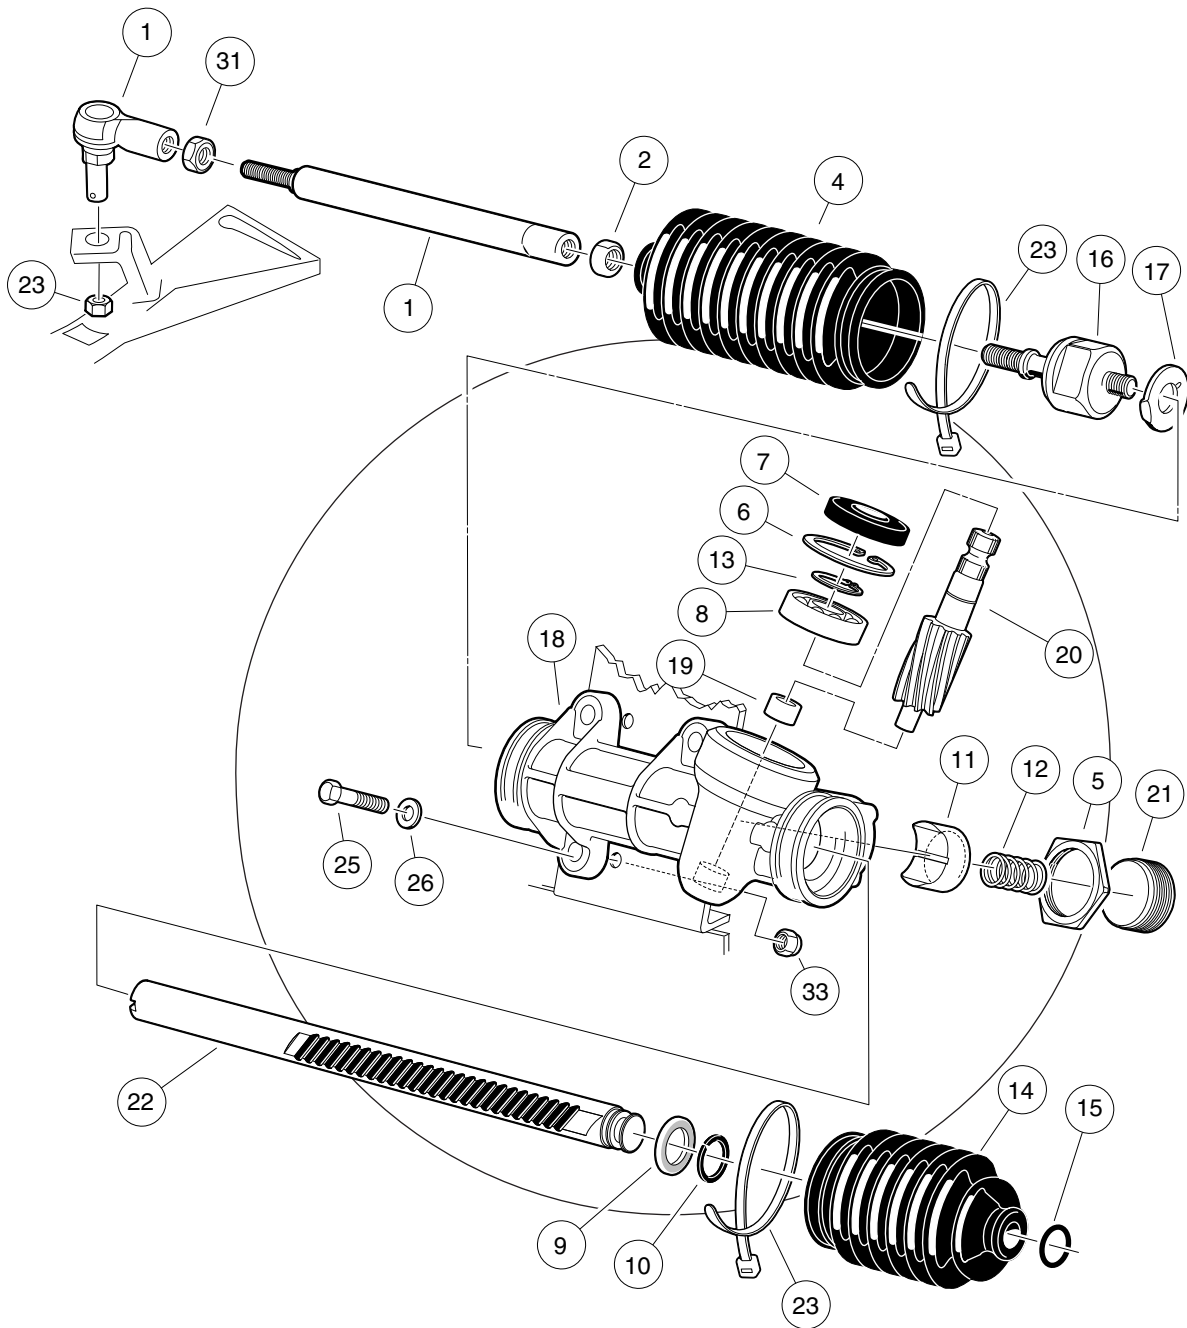


000189-001

STEERING GEAR ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012467</u>	Link, Rack and Pinion Drag	1
2	<u>1013042</u>	Nut, 12mm Hex	1
3	<u>101878302</u>	Steering Gear Assembly (without yoke) (includes items 4 through 23)	1
4	<u>1013035</u>	Bellows, Long	1
5	<u>1013044</u>	Rack Screw Locknut	1
6	<u>1013051</u>	Snap Ring	1
7	<u>1013052</u>	Seal, Steering Pinion Dust	1
8	<u>101879401</u>	Bearing, Ball	1
9	<u>101879501</u>	Stop Washer	1
10	<u>101879601</u>	Stop Ring, C-Type	1
11	<u>101879701</u>	Support Yoke	1
12	<u>101879801</u>	Rack Guide Pressure Spring	1
13	<u>101879901</u>	Ring, Stop, C-Type	1
14	<u>101880001</u>	Bellows, Short	1
15	<u>101880101</u>	Dust Seal Retaining Ring	1
16	<u>101880201</u>	Inner Ball Joint Asm	1
17	<u>101880301</u>	Washer, Tab	1
18	N/A	Box, Steering Gear	1
19	N/A	Bearing, Lower Pinion	1
20	N/A	Pinion, Steering	1
21	N/A	Screw, Rack Guide	1
22	N/A	Rack, Steering	1
23	<u>8990</u>	Tie Wrap, 8" Nylon	2
24	<u>1035</u>	Cotter Pin, 3/32 x 1	1
25	<u>1624</u>	Screw, 3/8-16 X 1.50 Hex-Head Cap	3
26	<u>334</u>	Washer, 3/8 Type A Flat	3
27	<u>7540</u>	Ball Joint, Left (includes items 28 through 31)	1
28	<u>1011895</u>	Socket, LH Vertical	1
29	<u>1011930</u>	Seal, Vertical Socket Dust	1
30	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1
31	<u>7602</u>	Nut, 3/8-24 UNF Hex	1
32	<u>7555</u>	Nut, 1/2-20 Hex, Left-Hand Thread	1
33	<u>8754</u>	Locknut, 3/8-16 Hex	3

 5
G
E

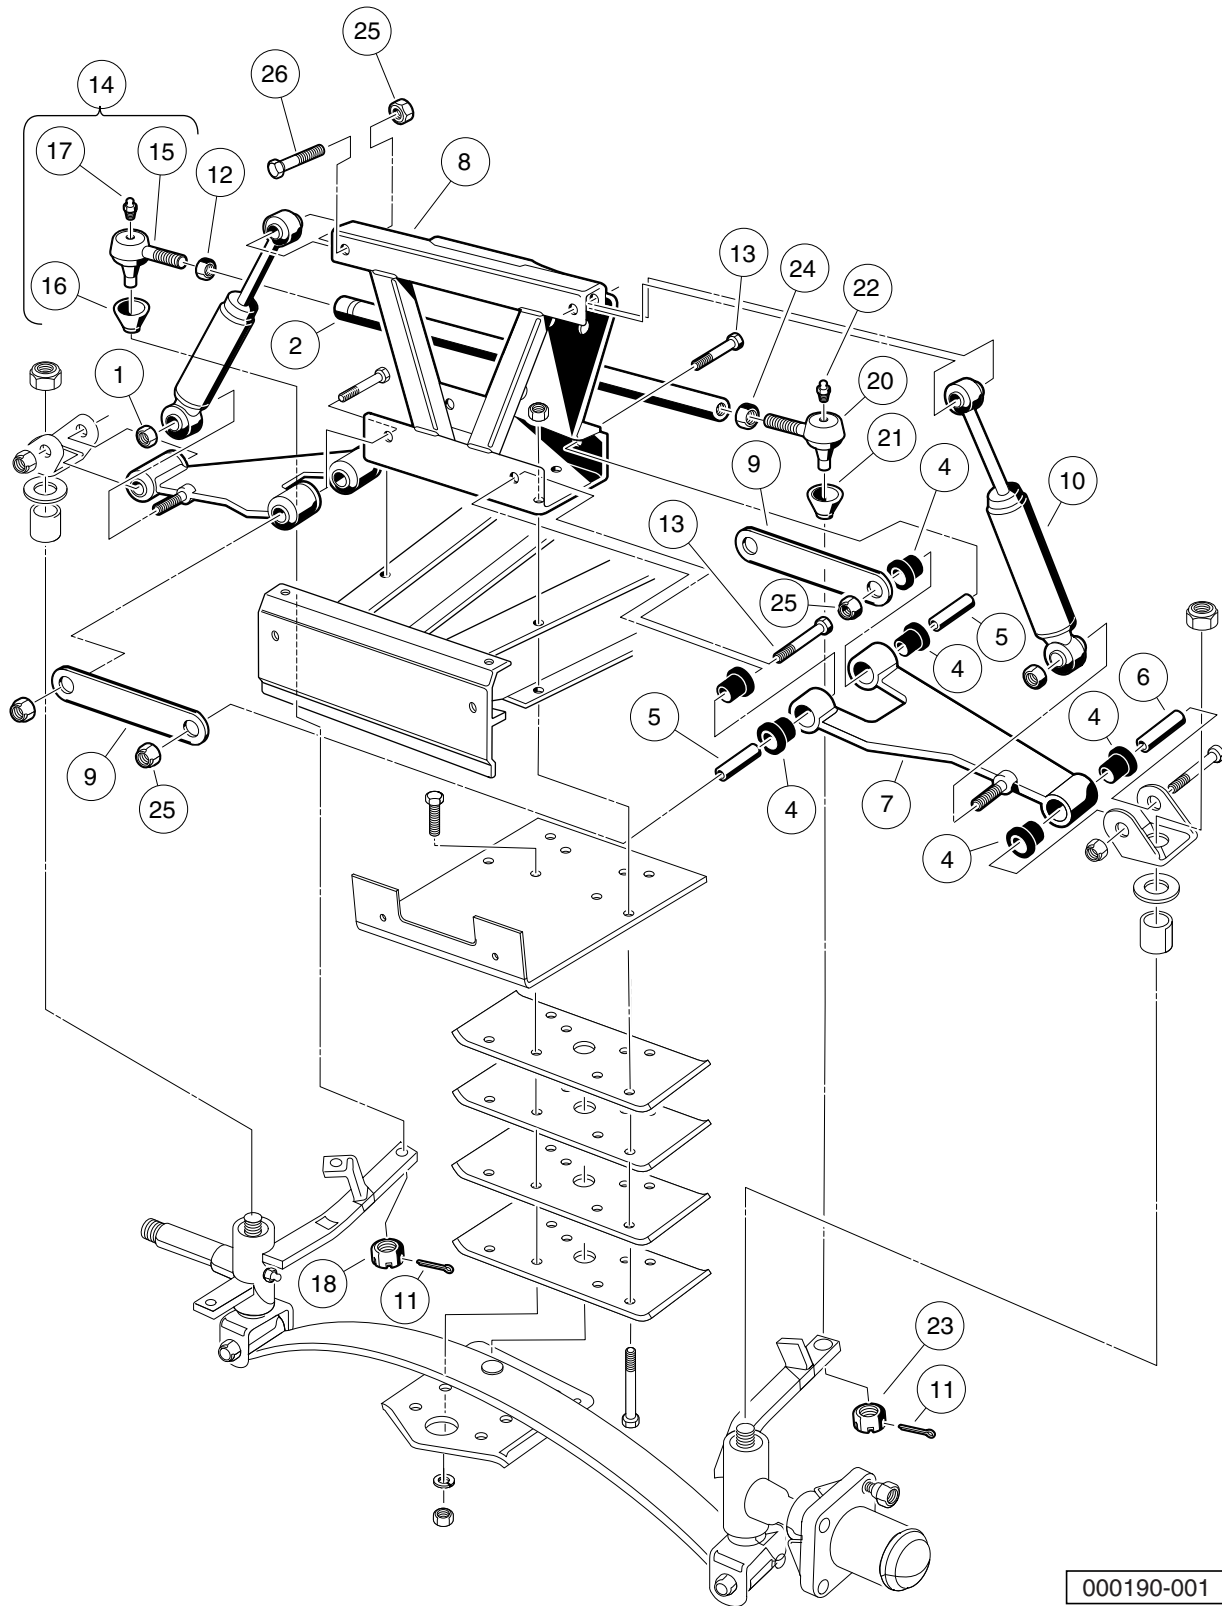
5**G****E**

000190-001

FRONT SUSPENSION, UPPER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2
2	<u>1010219</u>	Tie Rod	1
3	<u>1016353</u>	Sub-Assembly, Delta A-Plate (includes items 4 through 7)	2
4	<u>1016346</u>	Bushing, Urethane	6
5	<u>1016349</u>	Sleeve, Delta Inner	2
6	<u>1016350</u>	Sleeve, Delta Outer	1
7	<u>1016351</u>	Delta A-Plate	1
8	<u>1016385</u>	Delta Shock and Gear Support Assembly	1
9	<u>1017266</u>	A-Plate Strap	2
10	<u>103351001</u>	Shock Absorber, Front, Common	2
11	<u>1035</u>	Cotter Pin, 3/32 x 1	2
12	<u>1308</u>	Nut, 1/2-20 Hex	1
13	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4
14	<u>7539</u>	Ball Joint, Right-Hand (includes items 15 through 18)	1
15	1011893	Socket, RH Vertical	1
16	<u>1011930</u>	Seal, Vertical Socket Dust	1
17	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1
18	<u>7602</u>	Nut, 3/8-24 UNF Hex	1
19	<u>7540</u>	Ball Joint, Left (includes items 20 through 23)	1
20	1011895	Socket, LH Vertical	1
21	<u>1011930</u>	Seal, Vertical Socket Dust	1
22	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1
23	<u>7602</u>	Nut, 3/8-24 UNF Hex	1
24	<u>7555</u>	Nut, 1/2-20 Hex, Left-Hand Thread	1
25	<u>8754</u>	Locknut, 3/8-16 Hex	10
26	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	2

 5
G
E

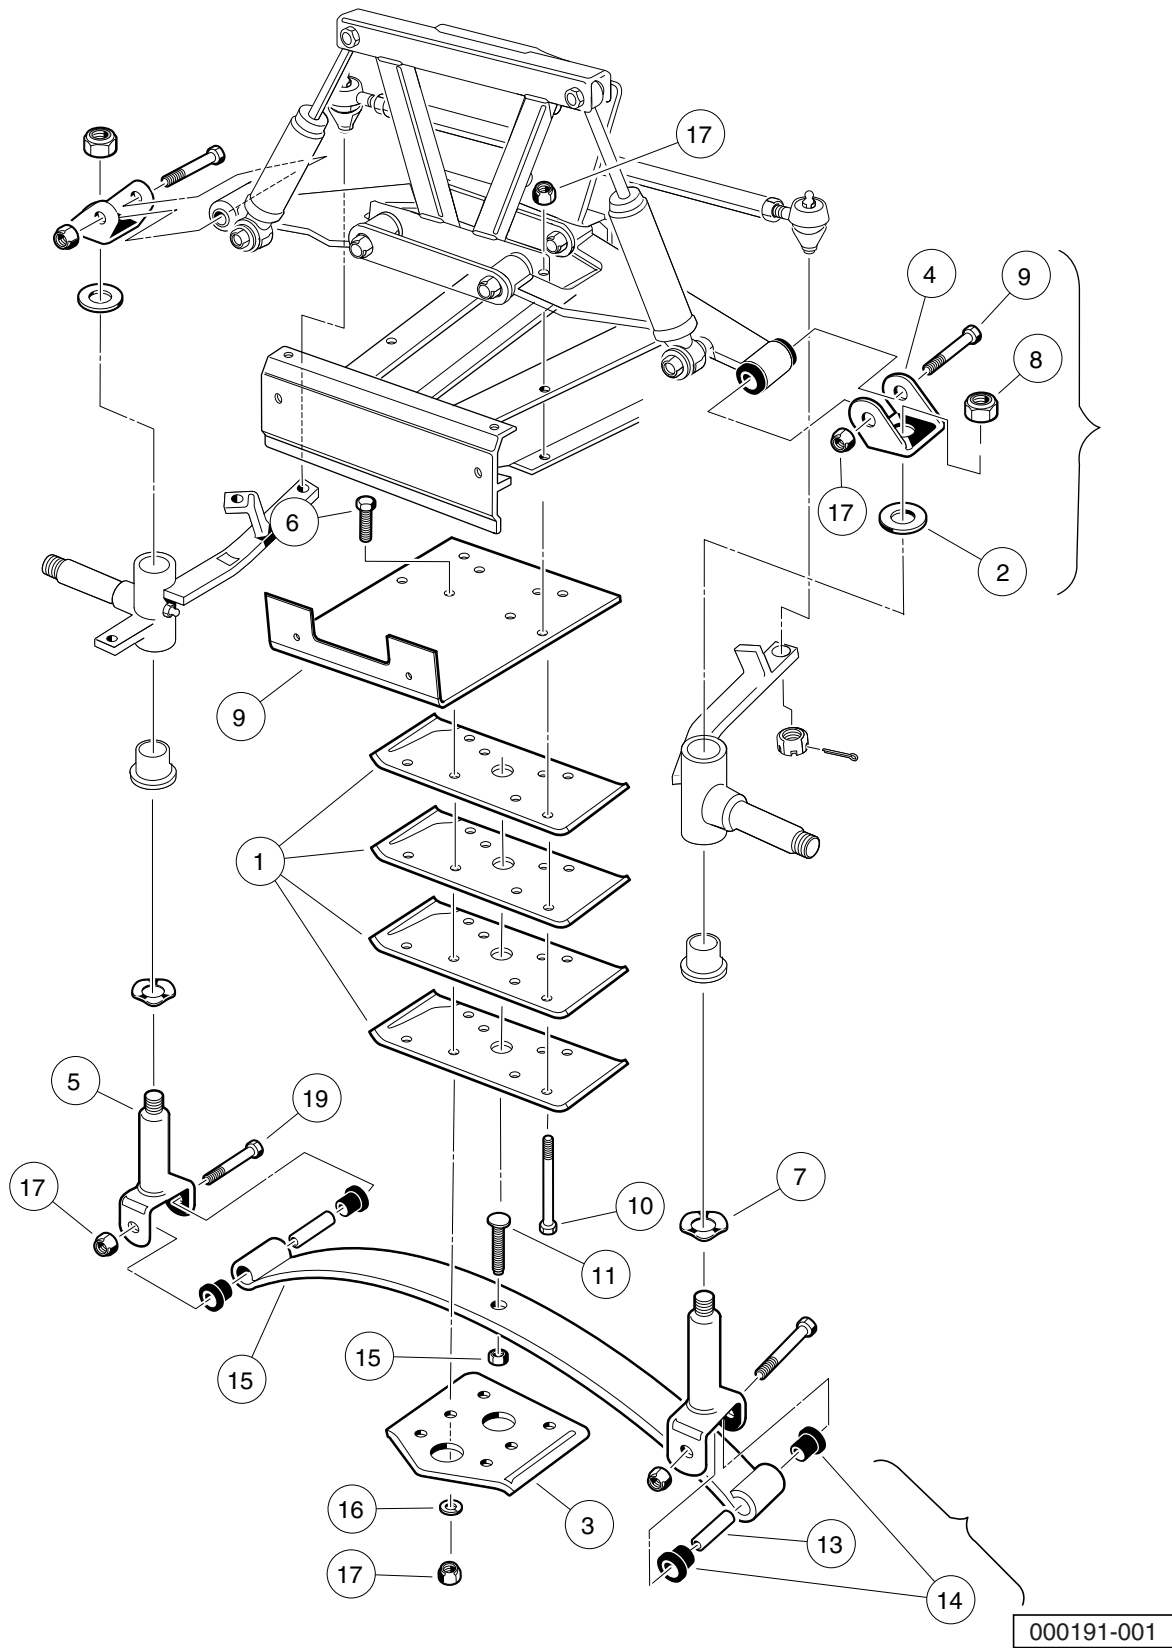5**G****E**


FRONT SUSPENSION, LOWER

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1010124</u>	Plate, Spring Mount	4	
2	<u>1010150</u>	Bearing, Thrust	2	
3	<u>1014276</u>	Plate, Front Spring Retainer	1	
4	<u>1016384</u>	Clevis, Delta Upper	2	
5	<u>1016386</u>	King Pin Assembly	2	
6	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	6	
7	<u>1016389</u>	Washer, 1.125 Od Wave	2	
8	<u>101903101</u>	Locknut, 1/2-20 Nylon Insert	2	
9	<u>102830401</u>	Support, Brush Guard	1	
10	<u>102913601</u>	Screw, 3/8-16 X 5.50 Hx Hd Cap	4	
11	<u>103507001</u>	Eccentric Bolt Common	1	
12	N/A	Spring Asm, Front, 1 Leaf (includes items 13 through 15)	1	
13	<u>1012303</u>	Bushing, Steel	2	
14	<u>1015583</u>	Bushing, Urethane	4	
15	N/A	Spring, Front, 1 Leaf	1	
16	<u>357</u>	Lockwasher, 3/8 Split	4	
17	<u>706</u>	Nut, Hex 3/8-16	1	
18	<u>8754</u>	Locknut, 3/8-16 Hex	8	
19	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2	

5

G

 E


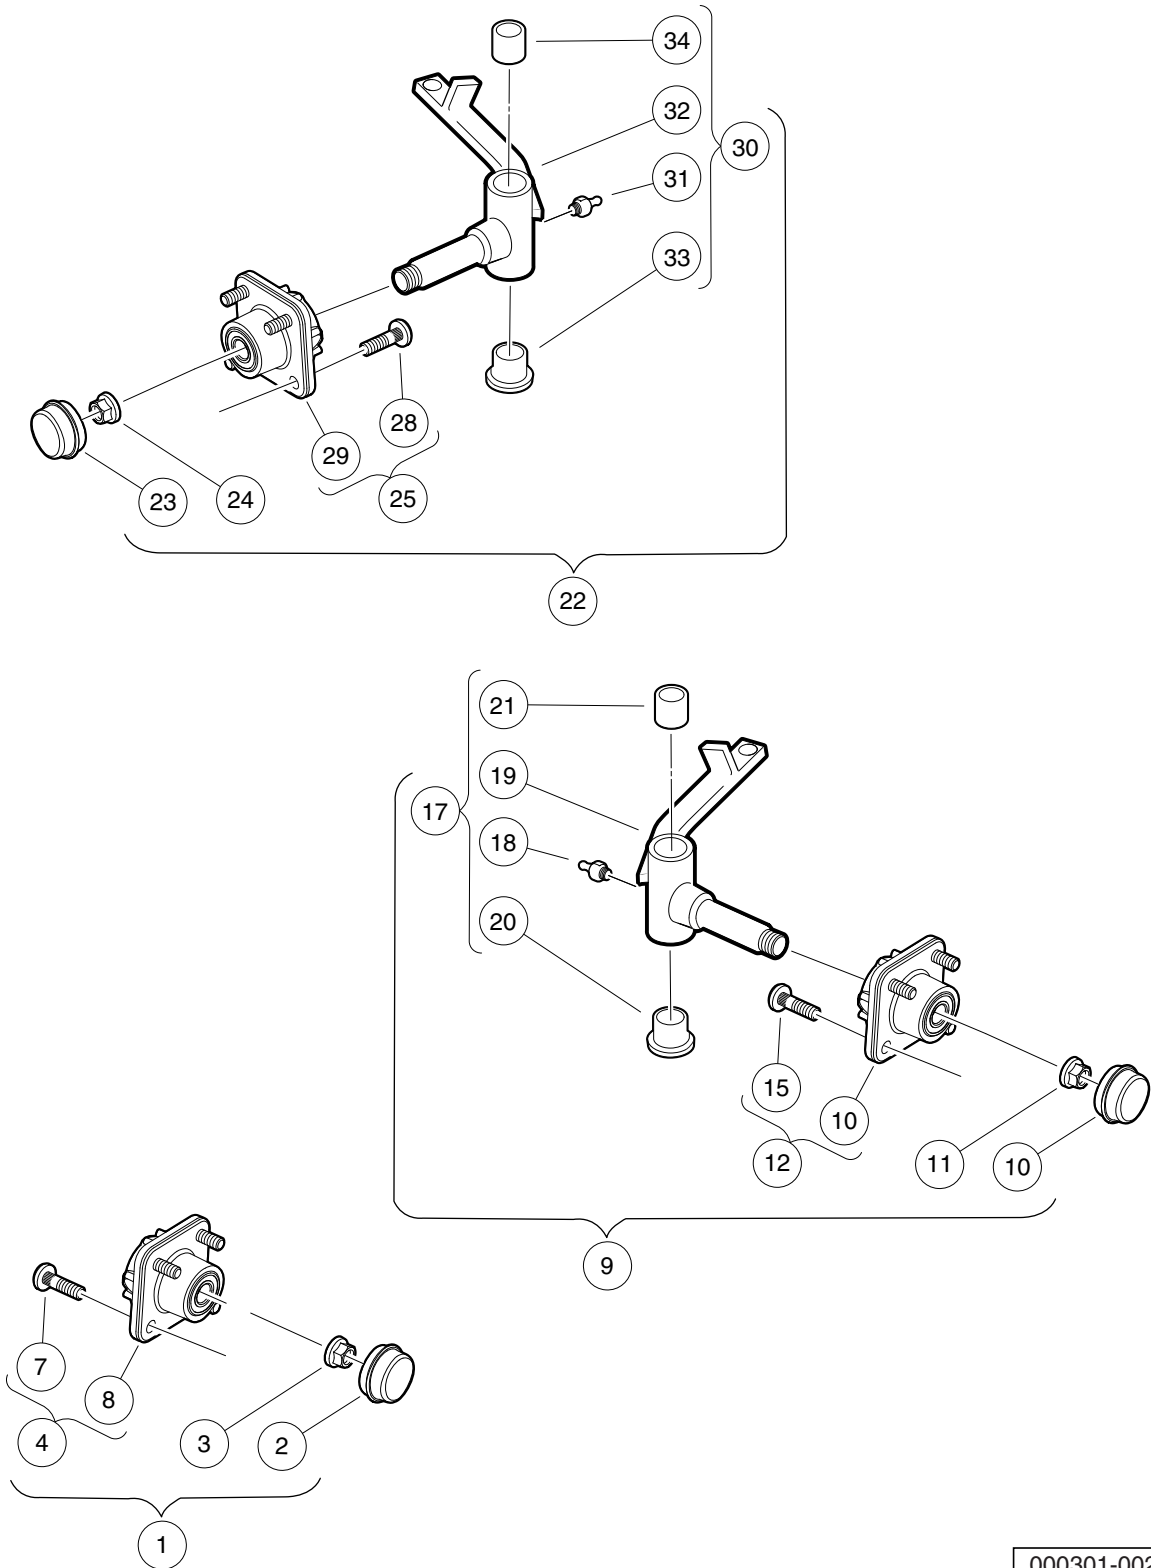


000301-002

FRONT SPINDLES AND HUBS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Replacement Kit, Front Hub (includes items 2 through 4)	2
2	<u>102353201</u>	Cap, Front Hub	1
3	<u>102353301</u>	Hex Nut, Locking Flange, M14x2	1
4	N/A	Asm, Front Hub, Bb, Long Stud (includes items 5 through 8)	1
5	N/A	Bearing, Ball, 6204	2
6	N/A	Spacer, Bearing, Front Hub, Pm	1
7	<u>103477901</u>	Lug Stud, 1/2-20 Unf, 4037	4
8	N/A	Front Hub, Ball Brg, Long Stud	1
9	N/A	Asm, Hub And Spindle, Left-Hand Ext (includes items 10 through 15)	1
10	102352801	Front Hub Assembly, Ball Bearing (includes items 11 and 12)	1
11	<u>102353401</u>	Lug Stud, 1/2-20 UNF, 4037 Stl	4
12	N/A	Hub, Front	1
13	<u>102353201</u>	Cap, Front Hub	1
14	<u>102353301</u>	Hex Nut, Locking Flange, M14x2	1
15	<u>102354204</u>	Asm, Spindle, LH, Ext (includes items 16 through 19)	1
16	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1
17	N/A	Subasm, Spindle, LH, Ext	1
18	<u>7048</u>	Bushing, Flanged Bronze	1
19	<u>8067</u>	Bushing, Bronze Spindle	1
20	N/A	Asm, Hub And Spindle, Right-Hand Ext (includes items 21 through 26)	1
21	102352801	Front Hub Assembly, Ball Bearing (includes items 22 and 23)	1
22	<u>102353401</u>	Lug Stud, 1/2-20 UNF, 4037 Stl	4
23	N/A	Hub, Front	1
24	<u>102353201</u>	Cap, Front Hub	1
25	<u>102353301</u>	Hex Nut, Locking Flange, M14x2	1
26	<u>102354104</u>	Asm, Spindle, RH, Ext (includes items 27 through 30)	1
27	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1
28	N/A	Subasm, Spindle, RH, Ext	1
29	<u>7048</u>	Bushing, Flanged Bronze	1
30	<u>8067</u>	Bushing, Bronze Spindle	1

  5
G
E

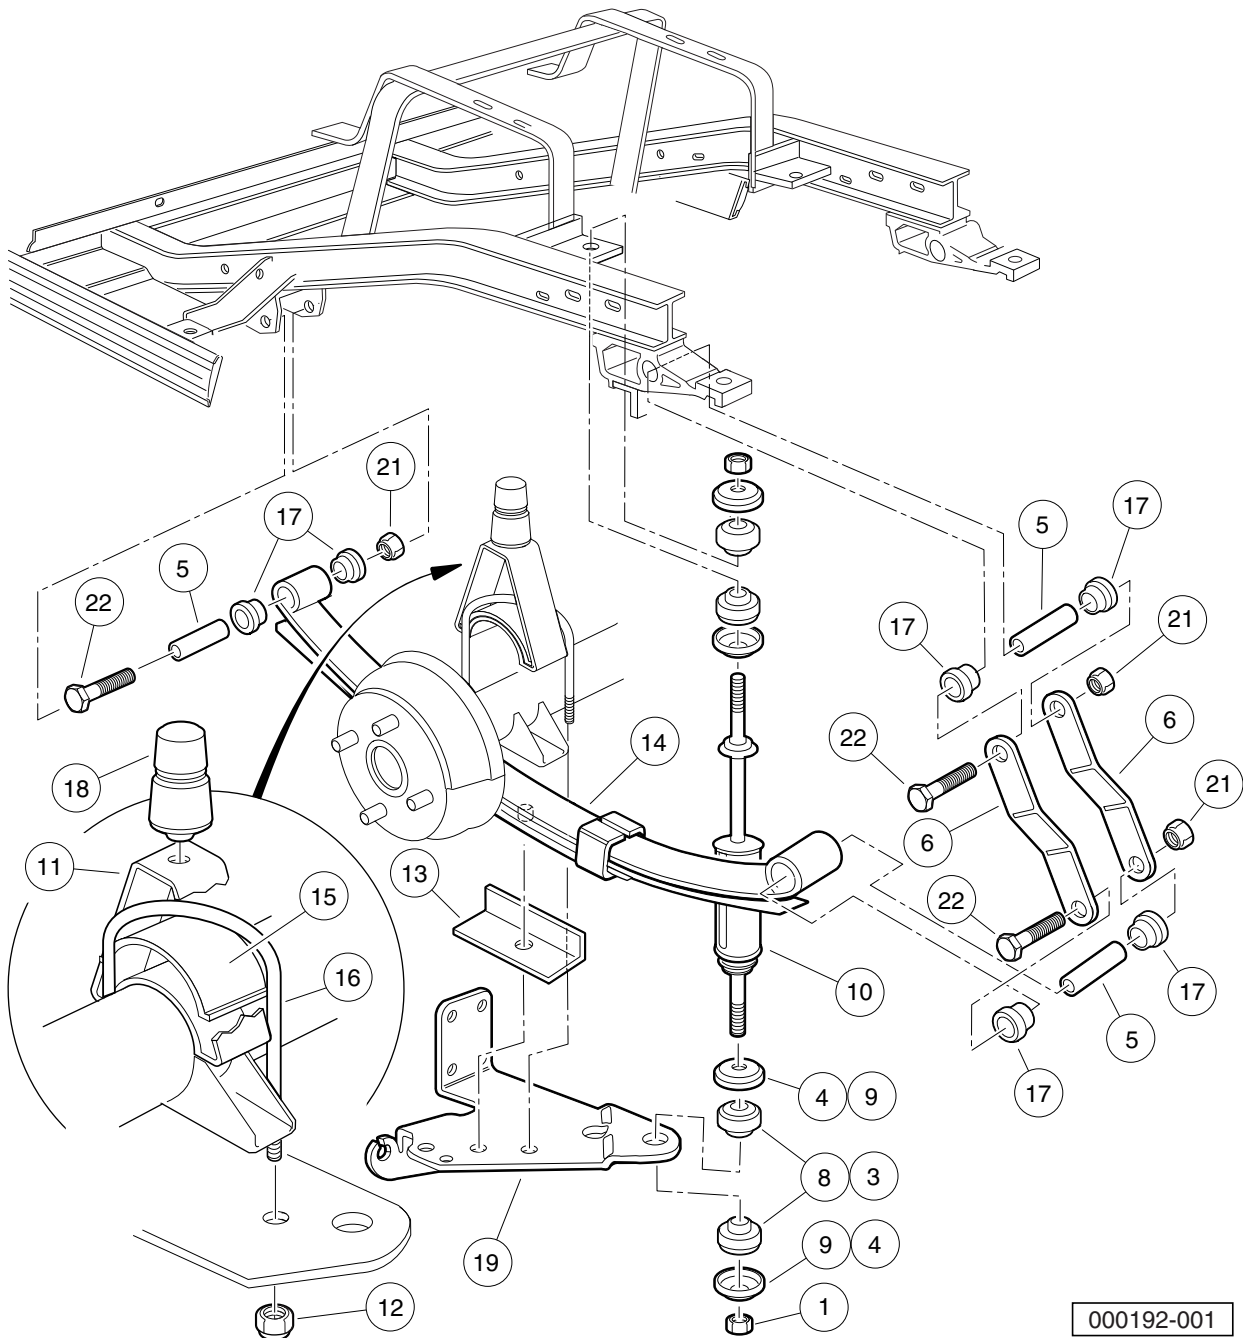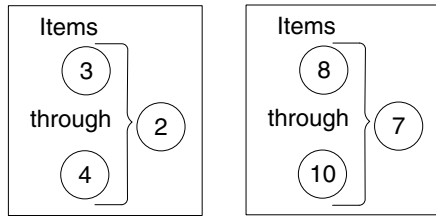5**G****E**


REAR SUSPENSION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010145</u>	Nut, 3/8-24 Hex	4
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4
3	<u>1010142</u>	Cushion, Shock Absorber	2
4	<u>1010144</u>	Retainer, Shock Absorber Cushion	2
5	<u>1012303</u>	Bushing, Steel	6
6	<u>1012304</u>	Shackle, Rear Spring	4
7	<u>1013164</u>	Shock Absorber Kit (includes items 8 through 10)	1
8	<u>1010142</u>	Cushion, Shock Absorber	8
9	<u>1010144</u>	Retainer, Shock Absorber Cushion	8
10	<u>102588501</u>	Shock Absorber Rear Prv Spd	2
11	<u>101454902</u>	Bumper Mount, Angled	2
12	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4
13	<u>1014573</u>	Spring Retainer	2
14	<u>1014675</u>	Rear Leaf Spring	2
15	<u>1014901</u>	Spacer, Overload Bumper	2
16	<u>1014902</u>	U-Bolt	2
17	<u>1015583</u>	Bushing, Urethane	12
18	<u>1017235</u>	Bumper, Jounce	2
19	<u>101926501</u>	Bracket, Left-Hand	1
20	<u>101929401</u>	Bracket, Right	1
21	<u>8754</u>	Locknut, 3/8-16 Hex	6
22	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	6

5

G

 E



STEERING GEAR ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	1013042	Nut, 12mm Hex	1	
2	<u>102022602</u>	End, Tie Rod, M12 X 1.25, Lh	1	
3	<u>102289201</u>	Nut - Hex Locking, M12 X 1.25	3	
4	<u>103601501</u>	Asm, Steering Rack And Pinion (includes items 5 through 24)	1	
5	<u>1013035</u>	Bellows, Long	1	
6	<u>1013044</u>	Rack Screw Locknut	1	
7	1013051	Snap Ring	1	
8	<u>1013052</u>	Seal, Steering Pinion Dust	1	
9	<u>101879401</u>	Bearing, Ball	1	
10	<u>101879501</u>	Stop Washer	1	
11	101879601	Stop Ring, C-Type	1	
12	<u>101879701</u>	Support Yoke	1	
13	<u>101879801</u>	Rack Guide Pressure Spring	1	
14	<u>101879901</u>	Ring, Stop, C-Type	1	
15	<u>101880001</u>	Bellows, Short	1	
16	101880101	Dust Seal Retaining Ring	1	
17	<u>101880201</u>	Inner Ball Joint Asm	1	
18	101880301	Washer, Tab	1	
19	N/A	Box, Steering Gear	1	
20	N/A	Bearing, Lower Pinion	1	
21	N/A	Pinion, Steering	1	
22	N/A	Screw, Rack Guide	1	
23	N/A	Rack, Steering	1	
24	<u>8990</u>	Tie Wrap, 8" Nylon	2	
25	<u>103653401</u>	Link, Drag, Male Thd	1	
26	<u>1624</u>	Screw, 3/8-16 X 1.50 Hex-Head Cap	3	
27	<u>334</u>	Washer, 3/8 Type A Flat	3	
28	<u>7555</u>	Nut, 1/2-20 Hex, Left-Hand Thread	1	
29	<u>8754</u>	Locknut, 3/8-16 Hex	3	

5

 
G

E


ELECTRICAL SYSTEM – GASOLINE VEHICLES

6

G

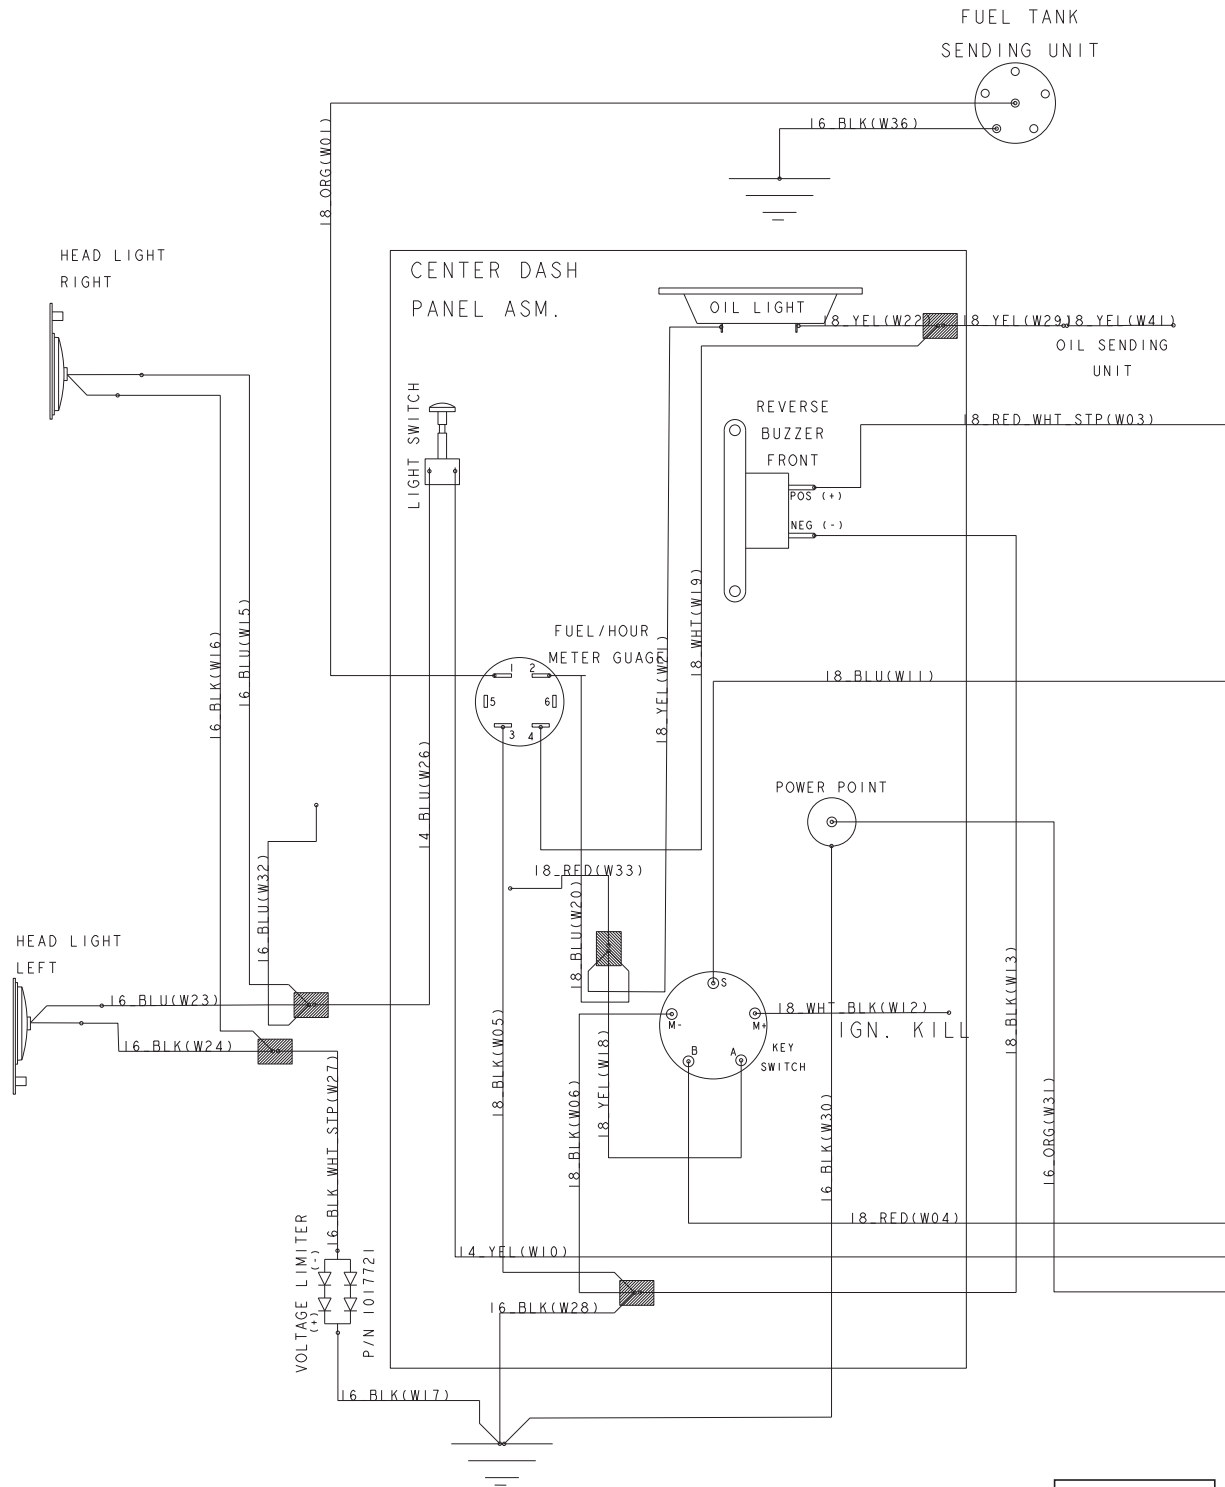

000234-001

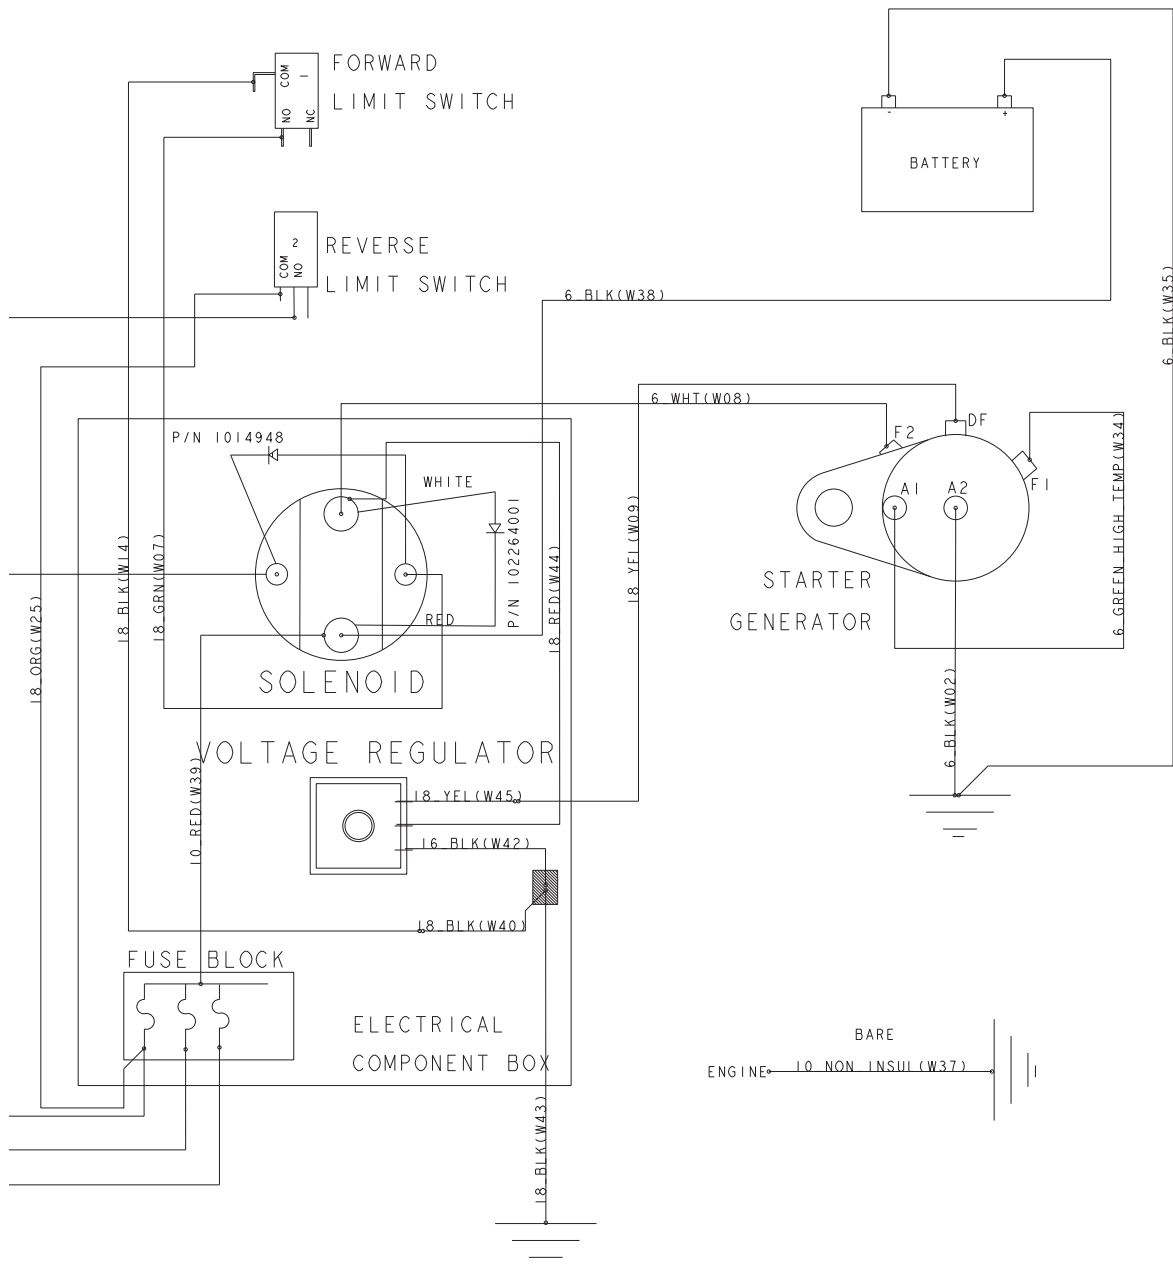 

000234-001


See previous two pages for illustration.

WIRING – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>102803001</u>	1 2 3 4 Wire Harness, Gasoline Vehicle	1

6

 G

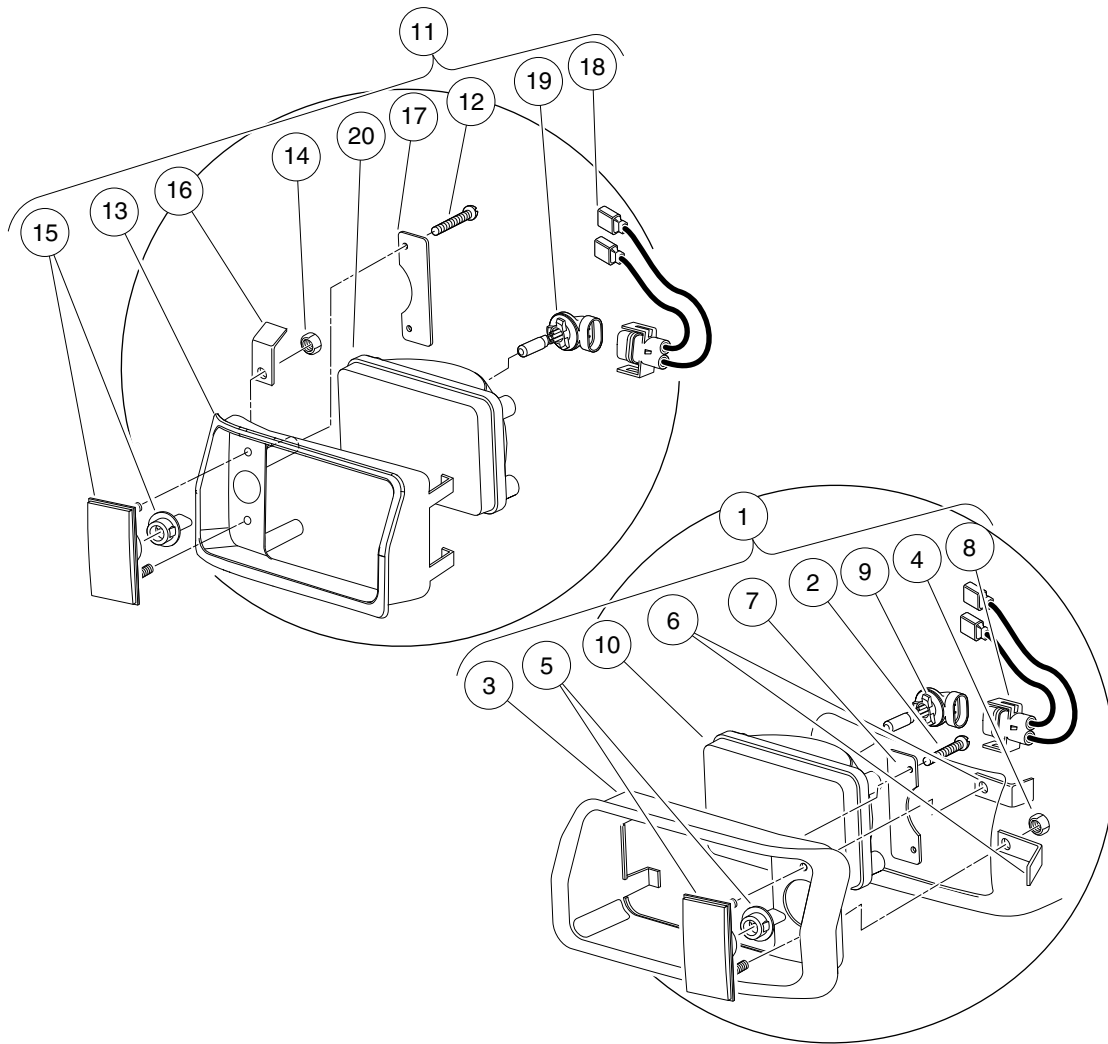


000073-001

HEADLIGHTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101988001</u>	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	1
2	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2
3	<u>1016880</u>	Headlight Bezel, Left	1
4	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
5	<u>1017062</u>	Turn Signal Lens Assy	1
6	<u>1017064</u>	Mounting Bracket	2
7	<u>1017065</u>	Retainer, Headlight	1
8	<u>101987901</u>	Connector Harness Assembly, Headlight	1
9	<u>101988101</u>	Bulb, Headlight	1
10	<u>101988201</u>	Lens, Headlight	1
11	<u>101988002</u>	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	1
12	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2
13	<u>1016879</u>	Headlight Bezel, Right	1
14	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
15	<u>1017062</u>	Turn Signal Lens Assy	1
16	<u>1017064</u>	Mounting Bracket	2
17	<u>1017065</u>	Retainer, Headlight	1
18	<u>101987901</u>	Connector Harness Assembly, Headlight	1
19	<u>101988101</u>	Bulb, Headlight	1
20	<u>101988201</u>	Lens, Headlight	1

6

 G

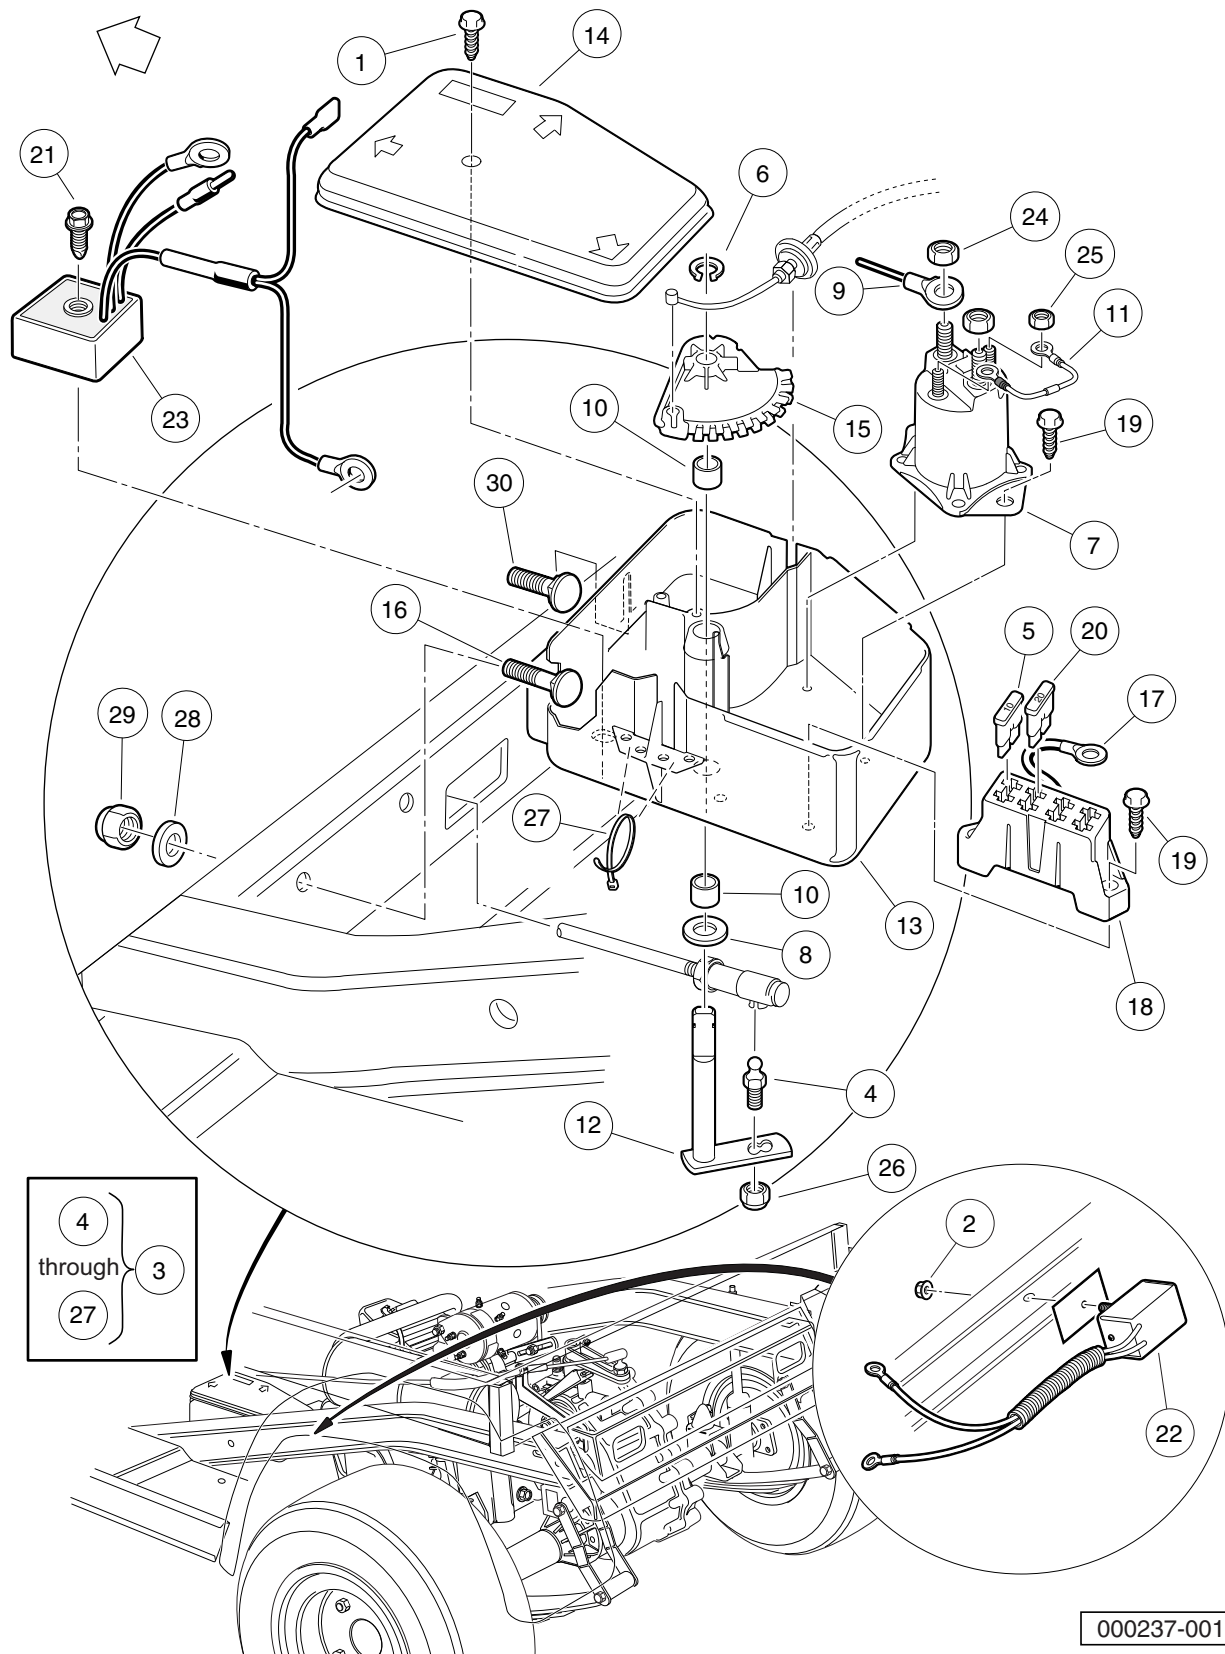


ELECTRICAL COMPONENT BOX – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	1
2	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	1
3	N/A	Assembly, Electrical Component Box (includes items 4 through 27)	1
4	<u>1010954</u>	Stud, 1/4-28 X 0.560 Ball	1
5	<u>1012295</u>	Fuse, 10-Amp	1
6	<u>1013589</u>	Ring, 0.338" Internal Retaining	1
7	<u>1013609</u>	Solenoid, 12-Volt	1
8	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	1
9	<u>1014119</u>	Wire Assembly #6 Red	1
10	<u>1014145</u>	Bushing, Secondary Weight, Split	2
11	<u>1014948</u>	Diode	1
12	<u>1015345</u>	Bell Crank and Shaft Assembly	1
13	<u>1015371</u>	Box, Electrical Component	1
14	<u>1015372</u>	Cover, Electric Box	1
15	<u>1015373</u>	Cam, Electric Box	1
16	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	1
17	<u>1015737</u>	Wire Assy, #10 Red	1
18	<u>1015741</u>	Fuse Block	1
19	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	4
20	<u>1016423</u>	Fuse, 20-Amp	1
21	<u>101856102</u>	Screw, 1/4-15 X 1.50 Hi-lo Hex	1
22	<u>102264001</u>	Diode Assembly	1
23	<u>102711201</u>	Voltage Regulator	1
24	<u>1242</u>	Nut, 5/16-18 Hex	2
25	<u>7893</u>	Nut, #10-32 Hex	2
26	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1
27	<u>8990</u>	Tie Wrap, 8" Nylon	2
28	<u>1241</u>	Washer, 5/16 Type A Flat	2
29	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
30	<u>7818</u>	Bolt, Carriage, 5/16-18 X 1.5	1

6

 G




ELECTRICAL COMPONENTS, FRONT BODY – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012986</u>	Lockwasher, M4	2
2	<u>1013857</u>	Knob, Light Switch	1
3	<u>1016630</u>	Light, Oil	1
4	<u>101990703</u>	Gauge, Fuel/Hour, with Bracket (includes items 5 and 6)	1
5	102025901	Bracket, Fuel Gauge/Hour Meter	1
6	N/A	Gauge, Fuel/Hour	1
7	<u>101991101</u>	Nut, M4-0.7	2
8	<u>102044702</u>	Key Switch 12v Key Start	1
9	102044801	Key Set	1
10	<u>102051601</u>	Spacer, Keyswitch	1
11	<u>102051701</u>	Nut, Key Switch	1
12	<u>102051901</u>	Switch, Light	1
13	<u>102198001</u>	Receptacle, Accessory	1
14	<u>102804501</u>	Panel, Instrument	1
15	<u>102804502</u>	Panel, Instrument (with 12-Volt Accessory Outlet Cutout)	1
16	<u>102967901</u>	Rivet, Removable, Tuflok 1/4"	7

6

 G

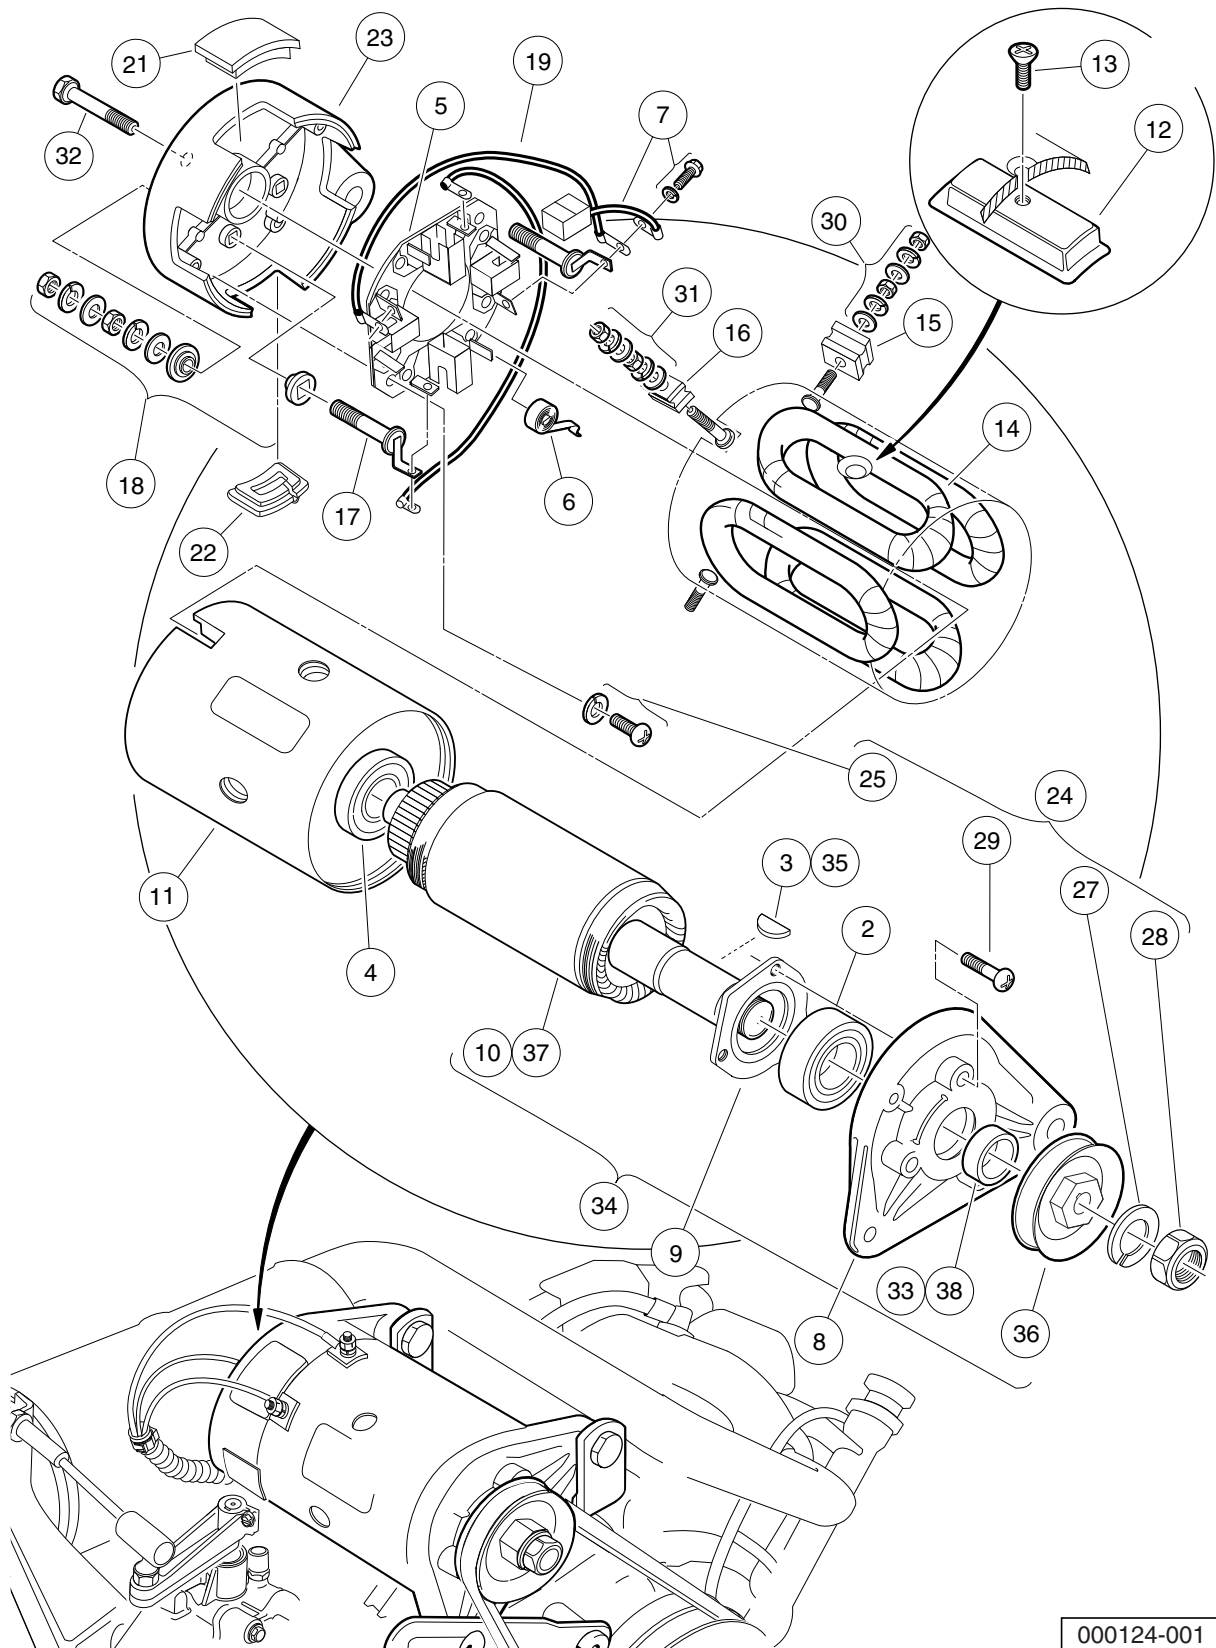


000124-001

STARTER/GENERATOR ASSEMBLY MODEL G425419 – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101833701</u>	Starter/Generator (cw) (includes items 2 through 33)	1
2	<u>1013001</u>	Bearing, Output Shaft Ball	1
3	<u>1013003</u>	Key, Starter/Generator	1
4	<u>1013005</u>	Bearing, Ball	1
5	<u>101301102</u>	Brush Holder Assembly (cw) (includes item 6)	1
6	<u>101878101</u>	Brush Spring Set	4
7	<u>101869302</u>	Brush and Screw Set (cw)	1
8	<u>101874901</u>	Front Bracket	1
9	<u>101875001</u>	Retainer	1
10	<u>101875101</u>	Armature	1
11	<u>101875201</u>	Field Coil Housing	1
12	<u>101875301</u>	Pole Set	1
13	<u>101875401</u>	Screw Set	1
14	<u>101875501</u>	Field Stator Coil Assembly	1
15	<u>101875601</u>	F Insulator Set	2
16	<u>101875701</u>	DF Insulator	1
17	<u>101875802</u>	A Connector (cw)	1
18	<u>101876001</u>	Screw and Mold Assembly	2
19	<u>101876202</u>	Brush Connector Assembly (cw)	2
20	<u>101876301</u>	Cover Set (includes items 21 and 22)	1
21	<u>1012991</u>	Brush Inspection Port Cover	3
22	<u>1017653</u>	Brush Port Cover w/Drain	1
23	<u>101876402</u>	Rear Bracket (cw)	1
24	<u>101876501</u>	Nut and Screw Set (includes items 25 through 29)	1
25	<u>101896501</u>	Brush Holder Asm Screw	2
26	N/A	Washer, M5 Flat	1
27	N/A	Washer, M14 Lock	1
28	N/A	Nut, Hex, M14 x 2	1
29	N/A	Screw, M5 x 0.8 x 18mm	3
30	<u>101877601</u>	Nut and Washer Set	2
31	<u>101877701</u>	Nut and Washer Set	1
32	<u>101879001</u>	Through Bolt Set	2
33	<u>101939901</u>	Spacer	1
34	<u>101875102</u>	Armature Asm Conversion Kit (includes items 35 through 38)	1
35	<u>1013003</u>	Key, Starter/Generator	1
36	<u>1014289</u>	Pulley, Starter/Generator	1
37	<u>101875101</u>	Armature	1
38	<u>101939901</u>	Spacer	1
		Note: Item 36 will ONLY fit Model G425419 Starter/Generator.	


6

 G

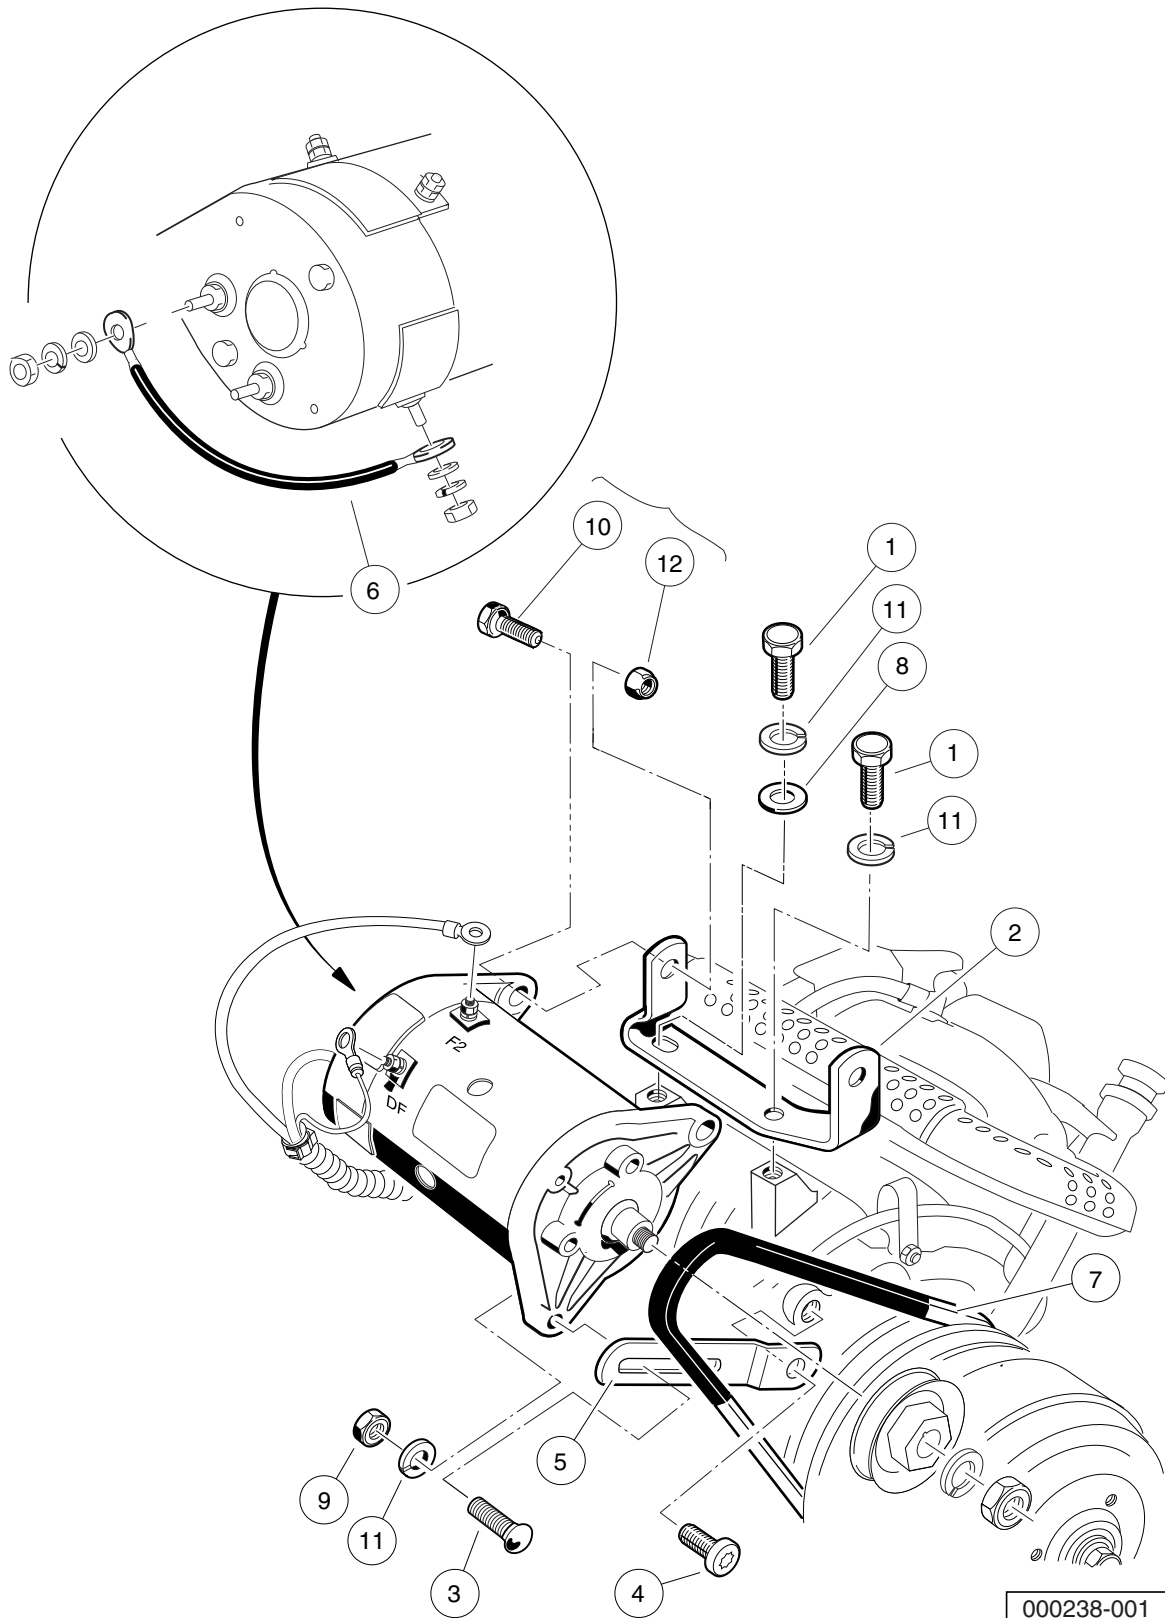

FE290 STARTER/GENERATOR MOUNTING – GASOLINE VEHICLE


ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	2	
2	<u>101524001</u>	Bracket, Starter/Generator Mounting (FE290)	1	
3	<u>1015932</u>	Bolt, Carriage, 5/16-18	1	
4	<u>1016074</u>	Screw, M8-1.25 X 18mm Torx	1	
5	<u>1016883</u>	Bracket, Starter/Generator Adjustment	1	
6	<u>101837301</u>	Wire Assy, #6 Green	1	
7	<u>101916701</u>	V-Belt	1	
8	<u>1241</u>	Washer, 5/16 Type A Flat	1	
9	<u>1242</u>	Nut, 5/16-18 Hex	1	
10	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	2	
11	<u>7174</u>	Lockwasher, 5/16 Split	3	
12	<u>8754</u>	Locknut, 3/8-16 Hex	2	

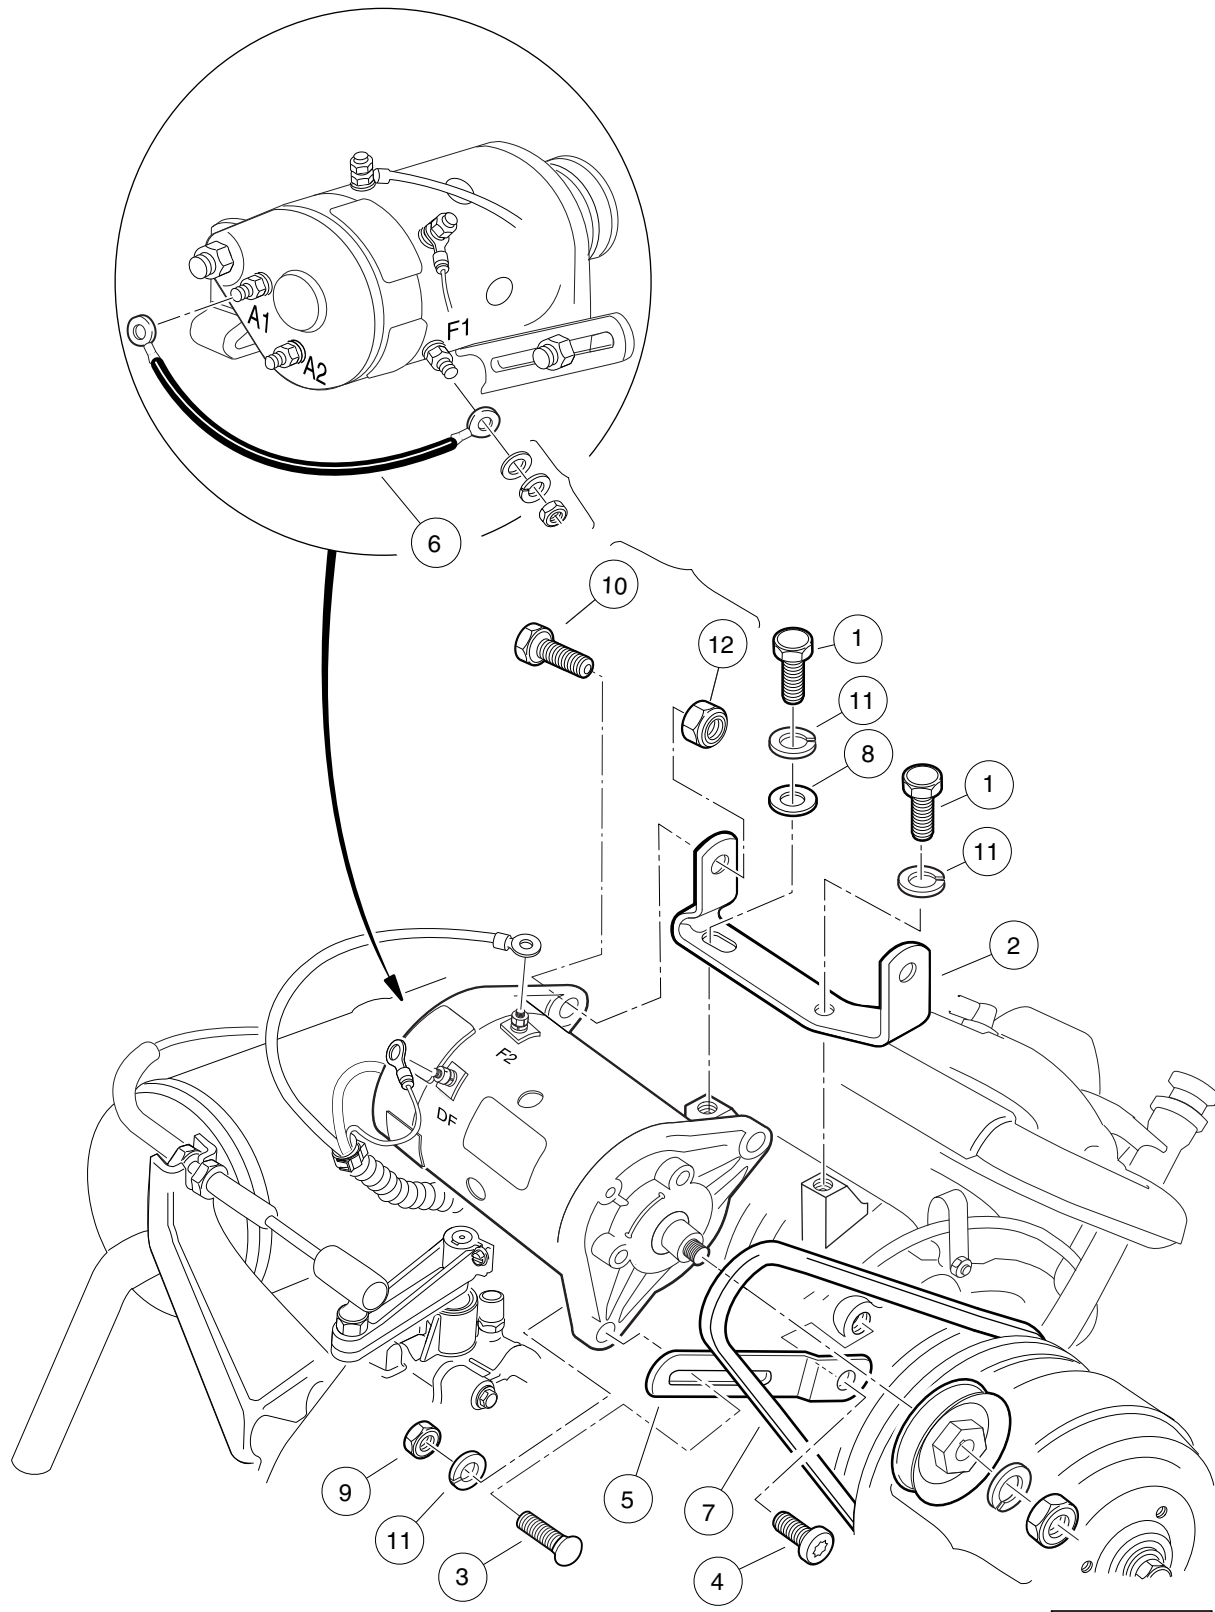 

000239-001

FE350 STARTER/GENERATOR MOUNTING – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	6	G
		1 2 3 4			
1	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	2		
2	<u>101524002</u>	Bracket, Starter/Generator Mounting	1		
3	<u>1015932</u>	Bolt, Carriage, 5/16-18	1		
4	<u>1016074</u>	Screw, M8-1.25 X 18mm Torx	1		
5	<u>1016883</u>	Bracket, Starter/Generator Adjustment	1		
6	<u>101837301</u>	Wire Assy, #6 Green	1		
7	<u>101916701</u>	V-Belt	1		
8	<u>1241</u>	Washer, 5/16 Type A Flat	1		
9	<u>1242</u>	Nut, 5/16-18 Hex	1		
10	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	2		
11	<u>7174</u>	Lockwasher, 5/16 Split	3		
12	<u>8754</u>	Locknut, 3/8-16 Hex	2		

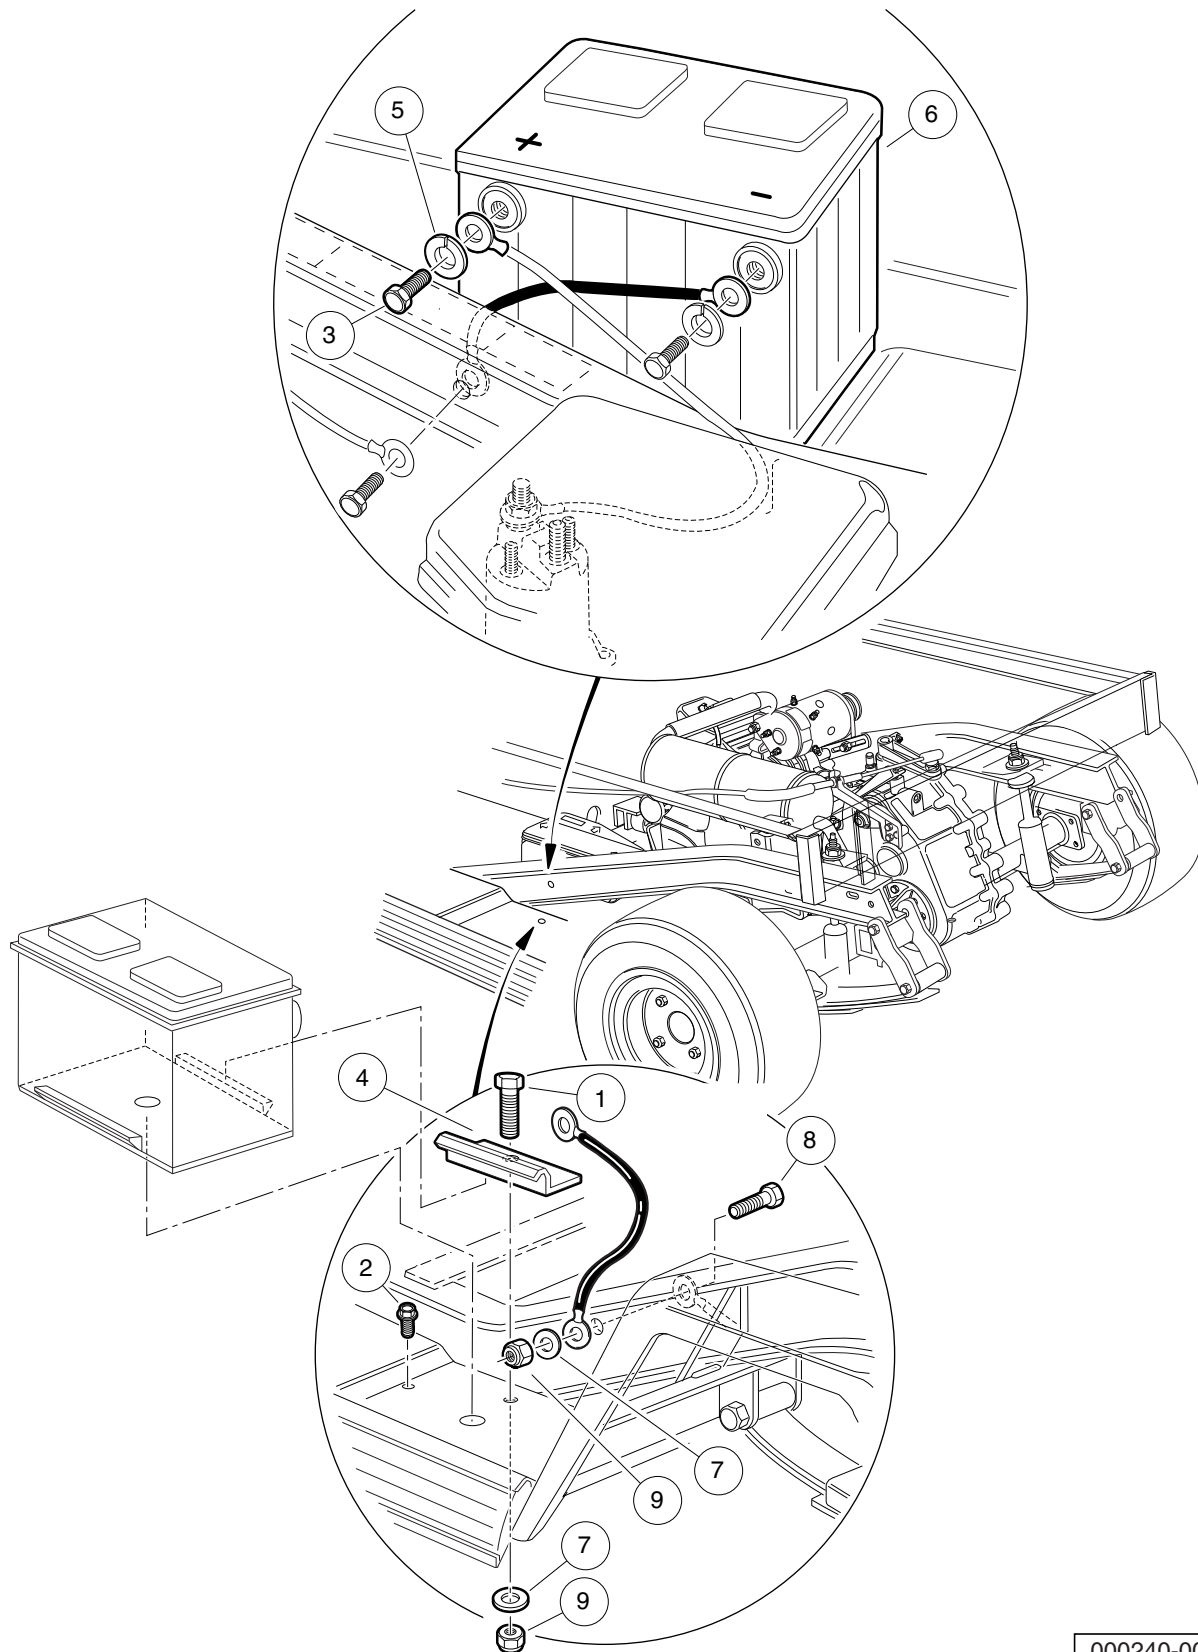 

000240-001

BATTERY – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1	
2	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	1	
3	<u>1014375</u>	Screw, 3/8-16 X 0.50 Stainless Steel Hex-Head	2	
4	<u>101898001</u>	Clamp, Battery	1	
5	<u>102355301</u>	Lockwasher, #10 Split Ss	2	
6	N/A	Battery, Start, 12v	1	
7	<u>1241</u>	Washer, 5/16 Type A Flat	2	
8	<u>7173</u>	Screw, 5/16-18 X 0.75 Hex-Head Cap	1	
9	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	

 
6

G

FE290 ENGINE

7

G

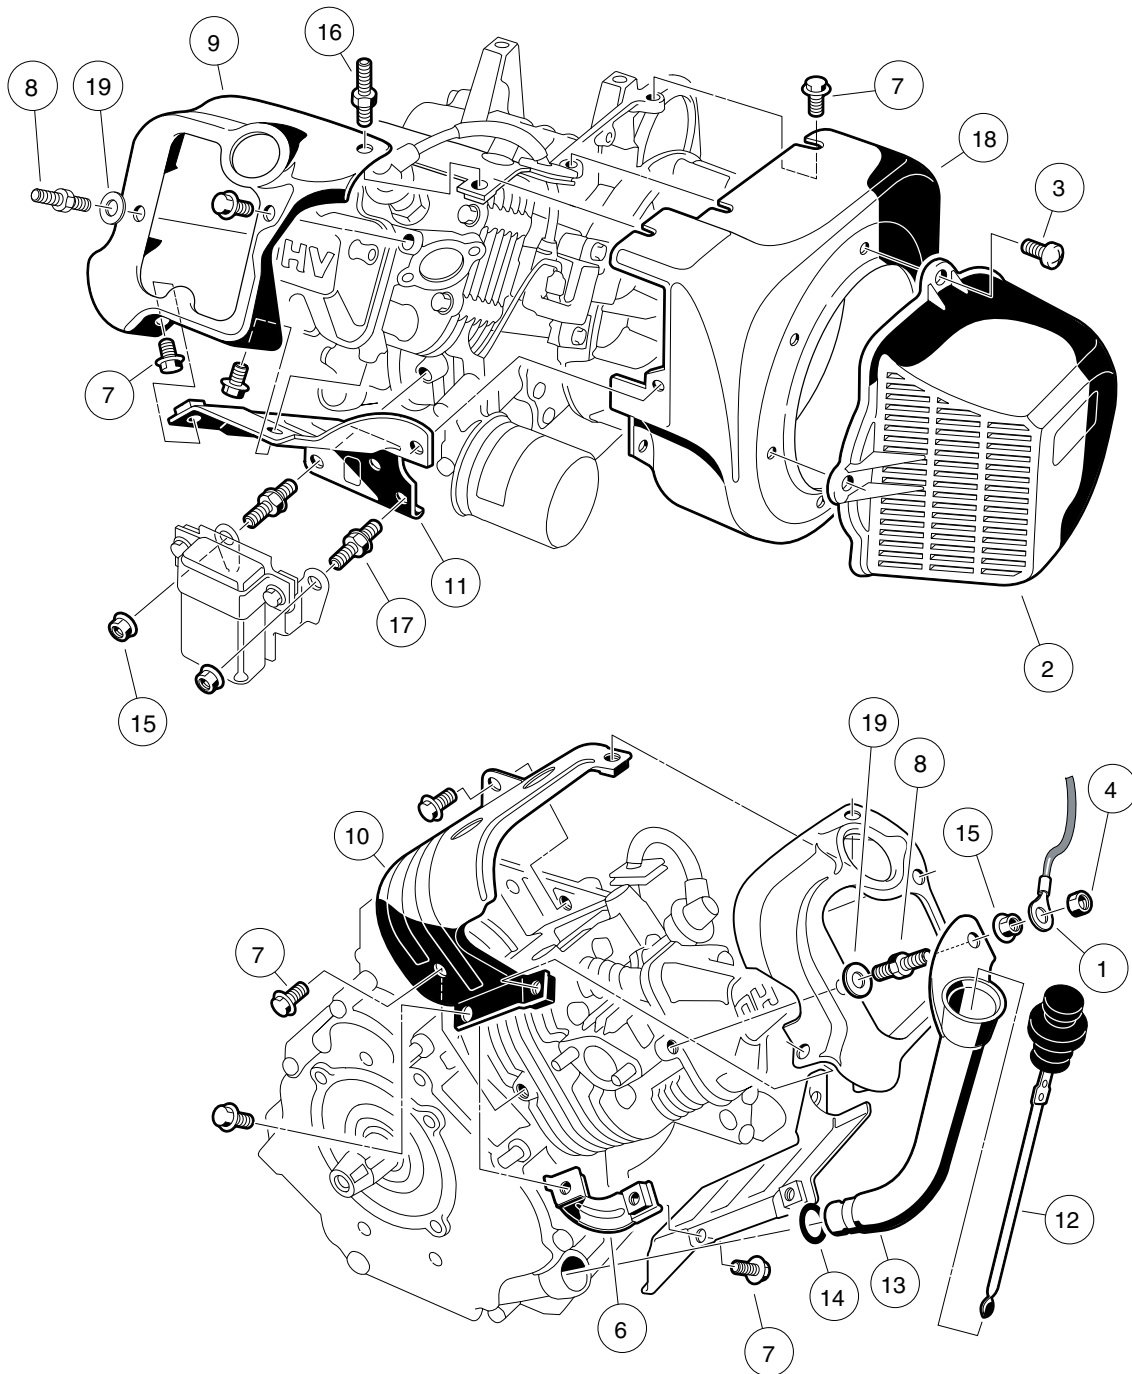


000194-001

FE290 ENGINE – SHROUDS AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015332</u>	Wire Assembly, #10, Uninsulated	1
2	<u>1015649</u>	Shroud, Fan	1
3	<u>1015969</u>	Screw, M6-1.00 X 10mm Pan Hd	4
4	<u>101887601</u>	Locknut, M6-1.00 Nylon Insert	1
5	<u>101953901</u>	Engine, FE290 (cw) * (includes items 6 through 19)	1
6	<u>1016443</u>	Bracket	1
7	<u>1016456</u>	Bolt, Flange Head, M6 x 1 x 12 mm	15
8	<u>1016507</u>	Bolt, Two-Ended	1
9	<u>1016524</u>	Shroud, Engine, FE290D	1
10	<u>1016525</u>	Shroud, Engine, FE290D	1
11	<u>1016526</u>	Shroud, Engine, FE290D	1
12	<u>1016531</u>	Dipstick	1
13	<u>1016536</u>	Tube, Oil Filler, FE290D	1
14	<u>1016539</u>	O-Ring	1
15	<u>1016547</u>	Nut, M6 Flange	3
16	<u>1017221</u>	Screw, M6-1.00 Stud	1
17	<u>101909701</u>	Stud, M6-1.00, Two-Ended	2
18	<u>101915601</u>	Housing, FE290 Fan	1
19	N/A	Washer, 6 mm Flat	1
* Note: FE290 engine component listings span several pages.			

7

 
G

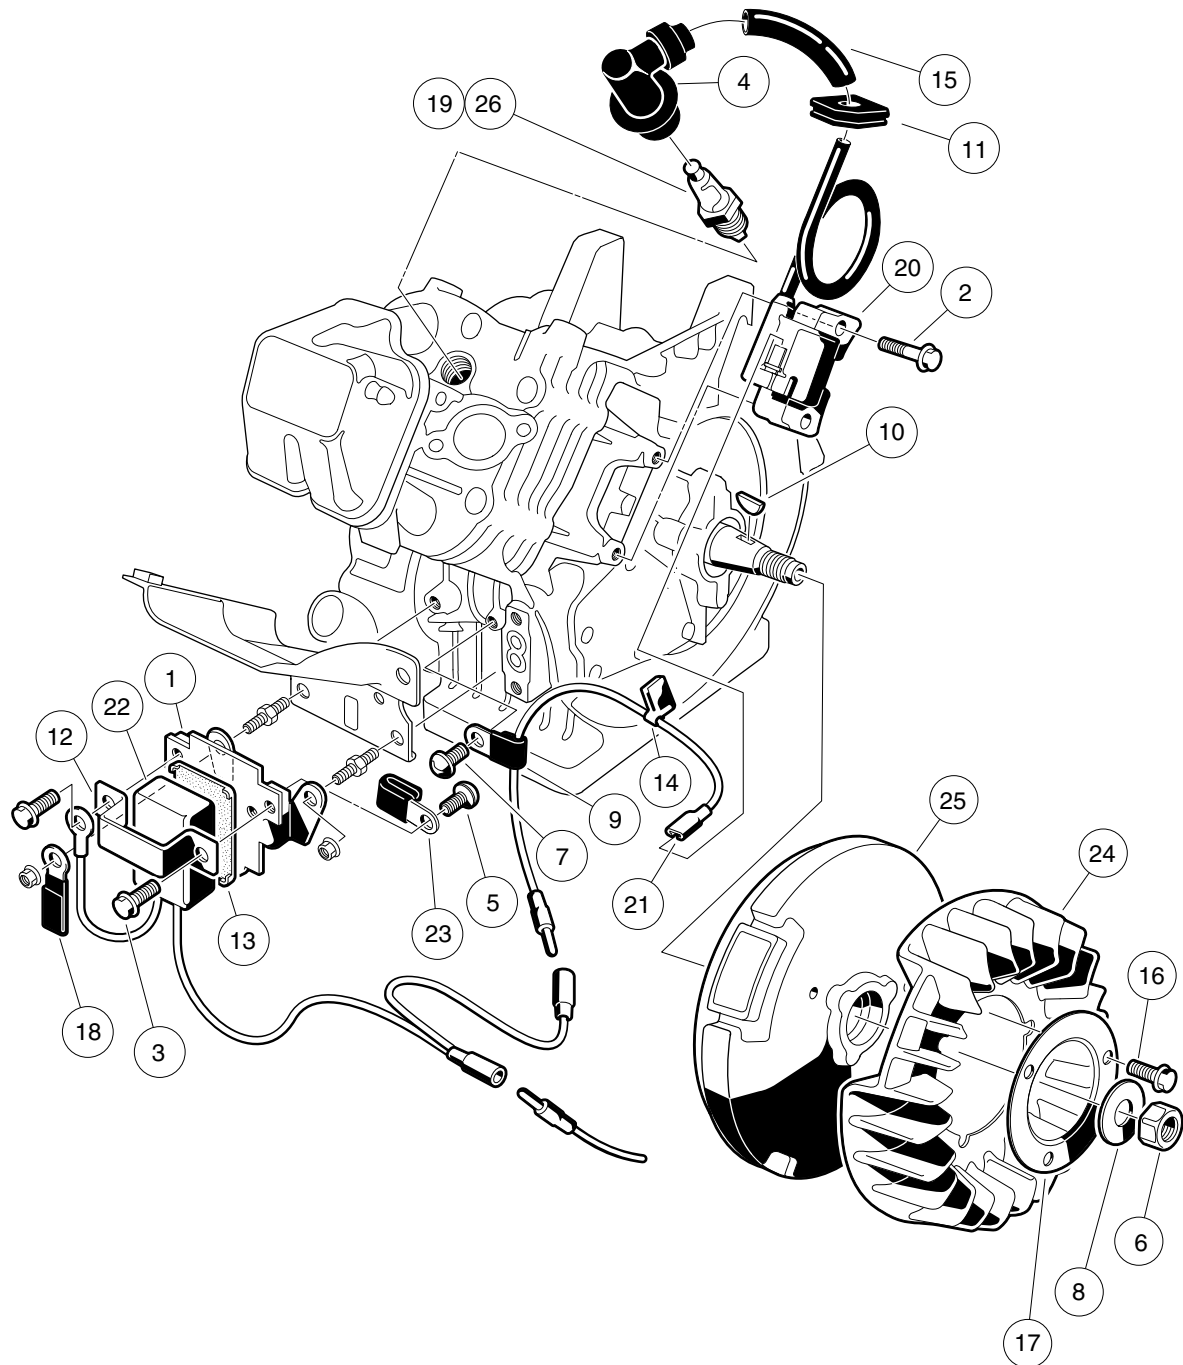

000195-001

FE290 ENGINE – IGNITION COMPONENTS AND FLYWHEEL


ITEM	PART NO.	DESCRIPTION	QTY	7	G
		1 2 3 4			
1	1016445	Bracket, RPM Limiter	1		
2	<u>1016455</u>	Bolt, Flange Head	2		
3	1016456	Bolt, Flange Head, M6 x 1 x 12 mm	2		
4	<u>1016493</u>	Cap, Spark Plug	1		
5	<u>1016497</u>	Screw, Pan WP Cross	1		
6	<u>1016505</u>	Nut, Hex, Fine	1		
7	<u>1016544</u>	Screw	1		
8	<u>1016548</u>	Washer, M16 Flat	1		
9	<u>1016561</u>	Clamp	1		
10	<u>1016562</u>	Key	1		
11	<u>1016578</u>	Ignition, Grommet	1		
12	<u>1016579</u>	Band, RPM Limiter Mount	1		
13	1016586	Damper, RPM Limiter	1		
14	<u>1016587</u>	Clamp	1		
15	<u>1016588</u>	Tube, 7mm X 10mm X 70mm	1		
16	<u>1017448</u>	Bolt, Flanged	3		
17	<u>1017455</u>	Plate, Flywheel Fan	1		
18	<u>1017468</u>	Clamp	1		
19	<u>101881101</u>	Spark Plug, OHV (Autolite)	1		
20	<u>101909201</u>	Coil, Ignition	1		
21	<u>101909301</u>	Lead Wire Assy	1		
22	101909401	Limiter, RPM	1		
23	101909501	Clamp, Steel	1		
24	<u>101915801</u>	Fan, FE290 (cw)	1		
25	<u>101929301</u>	Flywheel, Complete	1		
26	<u>AM10724</u>	Spark Plug, OHV (NGK)	1		

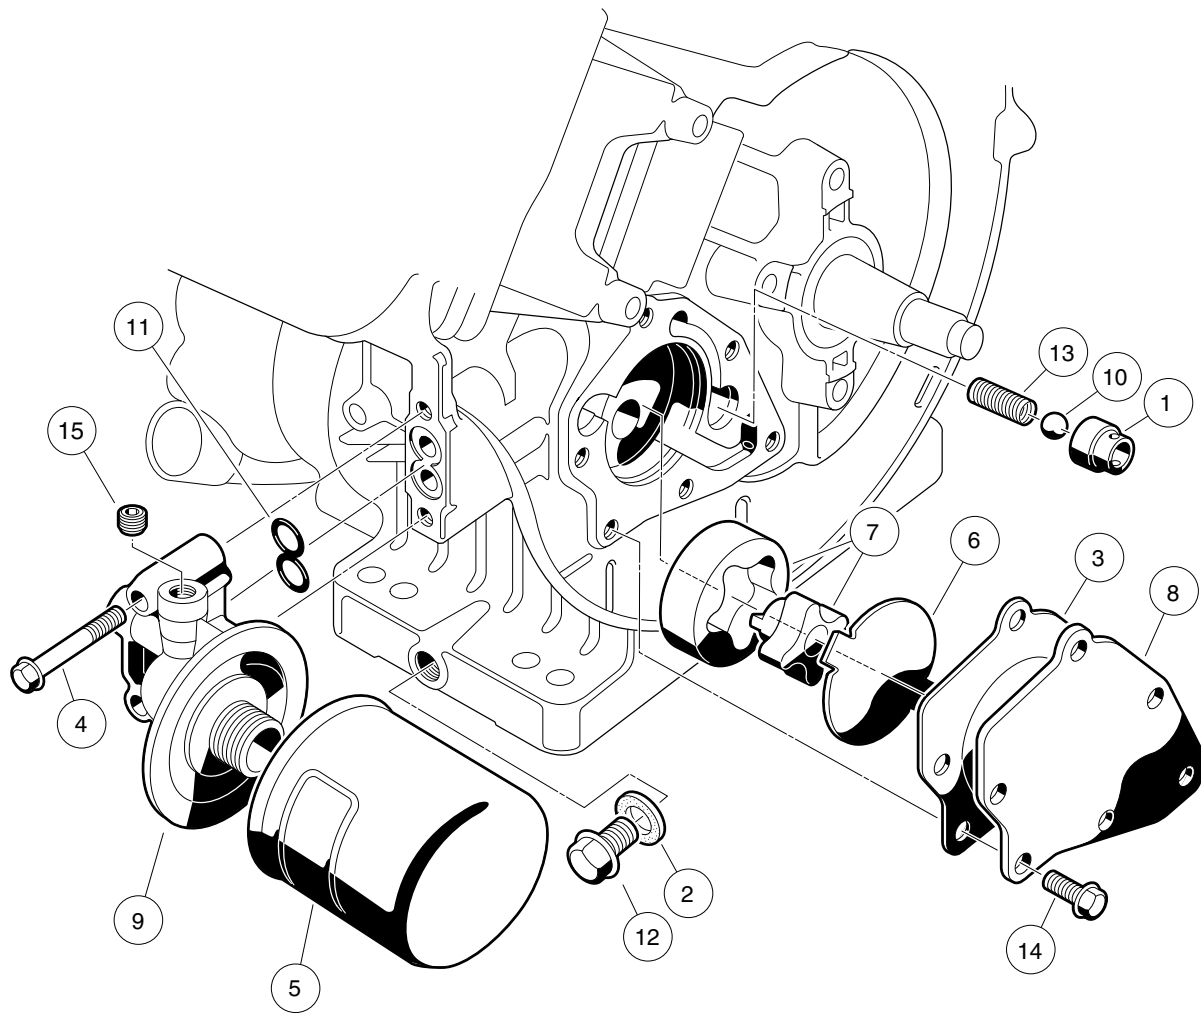 

000196-001

FE290 ENGINE – OIL CIRCULATION


ITEM	PART NO.	DESCRIPTION	QTY	7	G
		1 2 3 4			
1	1016429	Seat, Value Oil Press Relief	1		
2	<u>1016432</u>	Gasket, Drain Plug	1		
3	<u>1016435</u>	Gasket, Oil Pump	1		
4	<u>1016457</u>	Bolt, Flange Head	2		
5	<u>1016467</u>	Filter, Oil	1		
6	<u>1016473</u>	Plate, Oil Pump	1		
7	<u>101648203</u>	Oil Pump And Rotor	1		
8	<u>1016484</u>	Cover, Pump	1		
9	<u>1016502</u>	Bracket, Oil Filter Mount	1		
10	<u>1016537</u>	Ball, Steel, Press, Relief	1		
11	<u>1016570</u>	O-Ring	1		
12	<u>1016576</u>	Plug, Drain	1		
13	<u>1016581</u>	Spring	1		
14	<u>1017456</u>	Bolt, Flanged	6		
15	<u>1017507</u>	Plug	2		

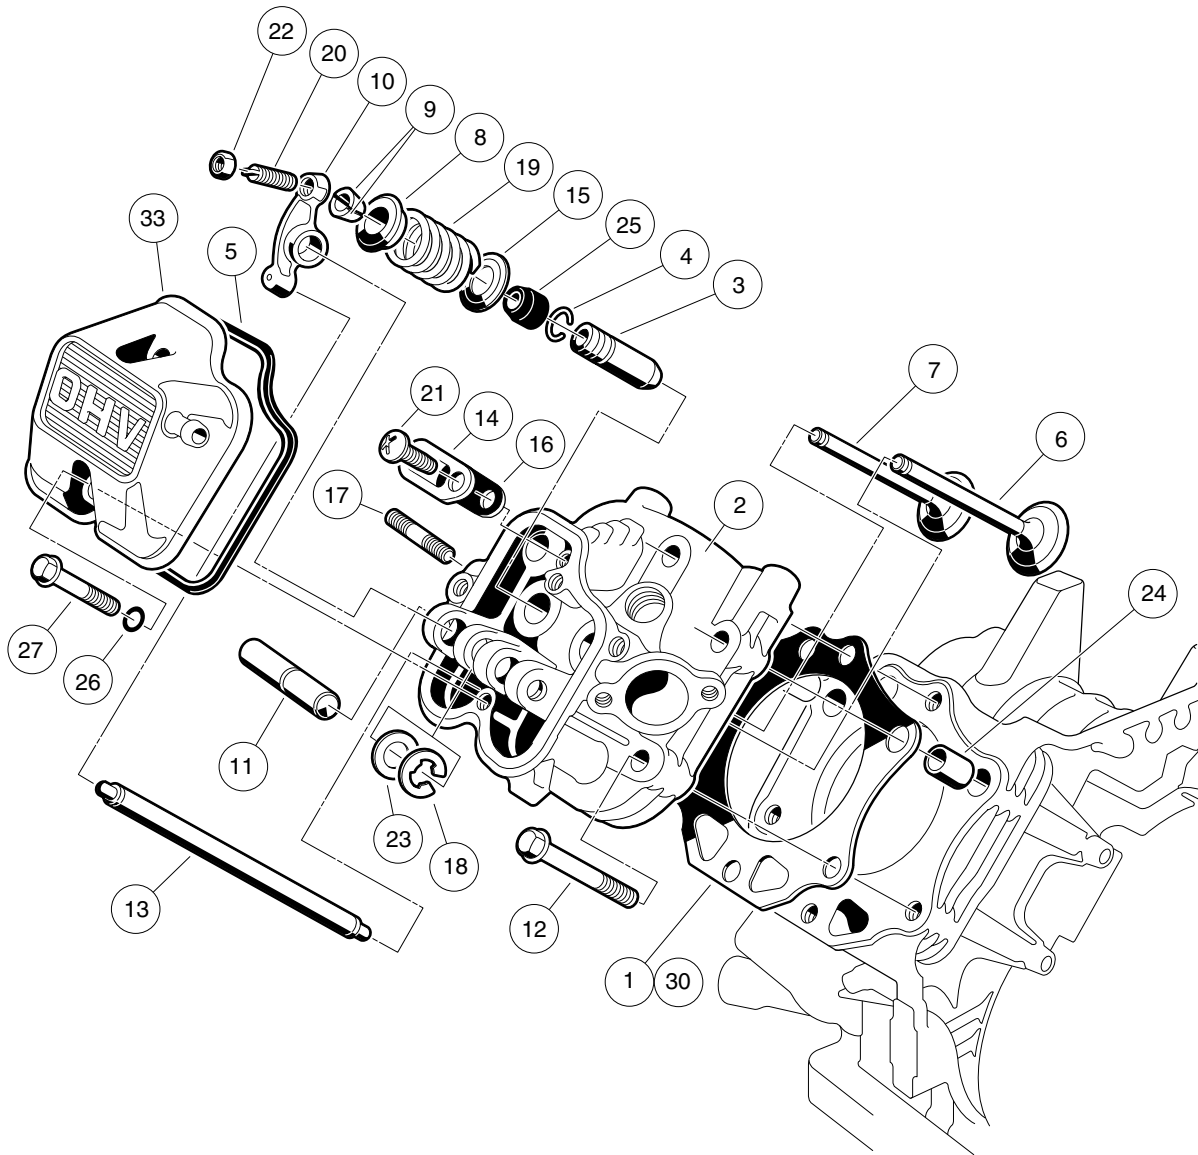 

000197-001

FE290 ENGINE – CYLINDER HEAD

ITEM	PART NO.	DESCRIPTION	QTY	7	G
		1 2 3 4			
1	<u>1016430</u>	Gasket, Head, FE290	1		
2	<u>1016431</u>	Head Assembly, FE290 Cylinder (includes items 3 and 4)	1		
3	<u>1016519</u>	Guide, Valve	2		
4	<u>1016560</u>	Snap Ring	2		
5	<u>1016436</u>	Gasket, Rocker Case	1		
6	<u>1016447</u>	Valve, Intake	1		
7	<u>1016448</u>	Valve, Exhaust	1		
8	<u>1016449</u>	Retainer, Valve Spring	2		
9	<u>1016450</u>	Collet	4		
10	<u>1016451</u>	Arm, Rocker	2		
11	<u>1016452</u>	Shaft, Rocker	1		
12	<u>1016458</u>	Bolt, Flange Head, M8 x 1.25 x 45 mm	6		
13	<u>1016471</u>	Rod, Push	2		
14	<u>1016474</u>	Plate	1		
15	<u>1016479</u>	Seat, Spring	2		
16	<u>1016483</u>	Valve	1		
17	<u>1016489</u>	Stud, Two-Ended, M8-1.25	2		
18	<u>1016517</u>	Circlip, Type-E	1		
19	<u>1016523</u>	Spring, Engine Valve	2		
20	<u>1016542</u>	Screw	2		
21	<u>1016544</u>	Screw	1		
22	<u>1016545</u>	Nut	2		
23	<u>1016549</u>	Washer, 12.1x19x1.8	1		
24	<u>1016563</u>	Pin	2		
25	<u>1016566</u>	Seal, Oil	2		
26	<u>1016569</u>	O-Ring	2		
27	<u>1016583</u>	Bolt, 6x35	2		
28	<u>102304701</u>	Kit, Gasket, FE290 (includes items 29 through 32)	1		
29	<u>1015330</u>	Gasket, Exhaust	1		
30	<u>1016430</u>	Gasket, Head, FE290	1		
31	<u>1016440</u>	Gasket, Engine to Insulator	1		
32	<u>1016446</u>	Gasket, Crankcase Cover	1		
33	<u>102753401</u>	Case, Rocker	1		

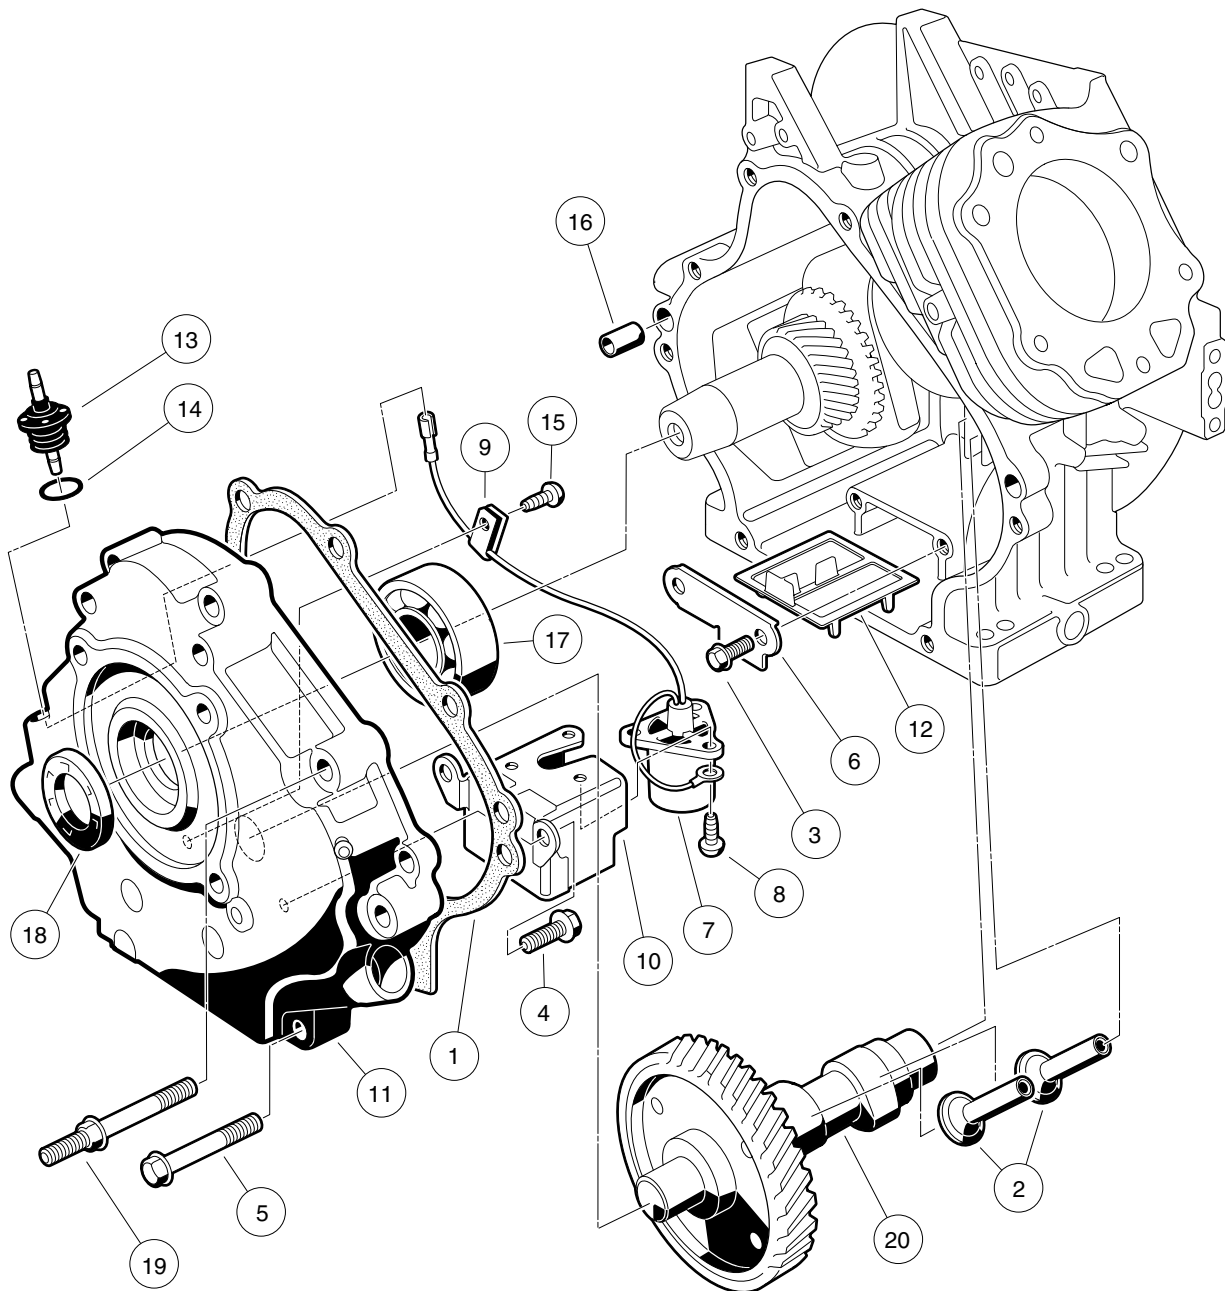 


000198-001

FE290 ENGINE – CRANKCASE, CAMSHAFT, AND OIL SENSOR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016446</u>	Gasket, Crankcase Cover	1
2	<u>1016453</u>	Tappet	2
3	<u>1016454</u>	Bolt, Flange Head, M5 x 0.8 x 8 mm	2
4	<u>1016456</u>	Bolt, Flange Head, M6 x 1 x 12 mm	2
5	<u>1016458</u>	Bolt, Flange Head, M8 x 1.25 x 45 mm	6
6	<u>1016472</u>	Plate, Oil Filter Screen	1
7	<u>1016494</u>	Sensor, Oil Level	1
8	<u>1016496</u>	Screw, Cross Pan-Head, M4 x 0.7 x 8 mm	3
9	<u>1016506</u>	Clamp	1
10	<u>1016510</u>	Bracket, Switch, Oil Level	1
11	<u>1016520</u>	Cover, Crankcase	1
12	<u>1016521</u>	Screen, Oil Filter	1
13	<u>1016535</u>	Connector, Cord	1
14	<u>1016538</u>	O-Ring	1
15	<u>1016544</u>	Screw	1
16	<u>1016564</u>	Pin	2
17	<u>1016565</u>	Bearing, Ball	1
18	<u>1016567</u>	Seal, Crankshaft	1
19	<u>1016584</u>	Bolt, Two-Ended, M8 x 1.25 x 69 mm	2
20	<u>101915401</u>	Camshaft Complete, FE290	1

7

 G

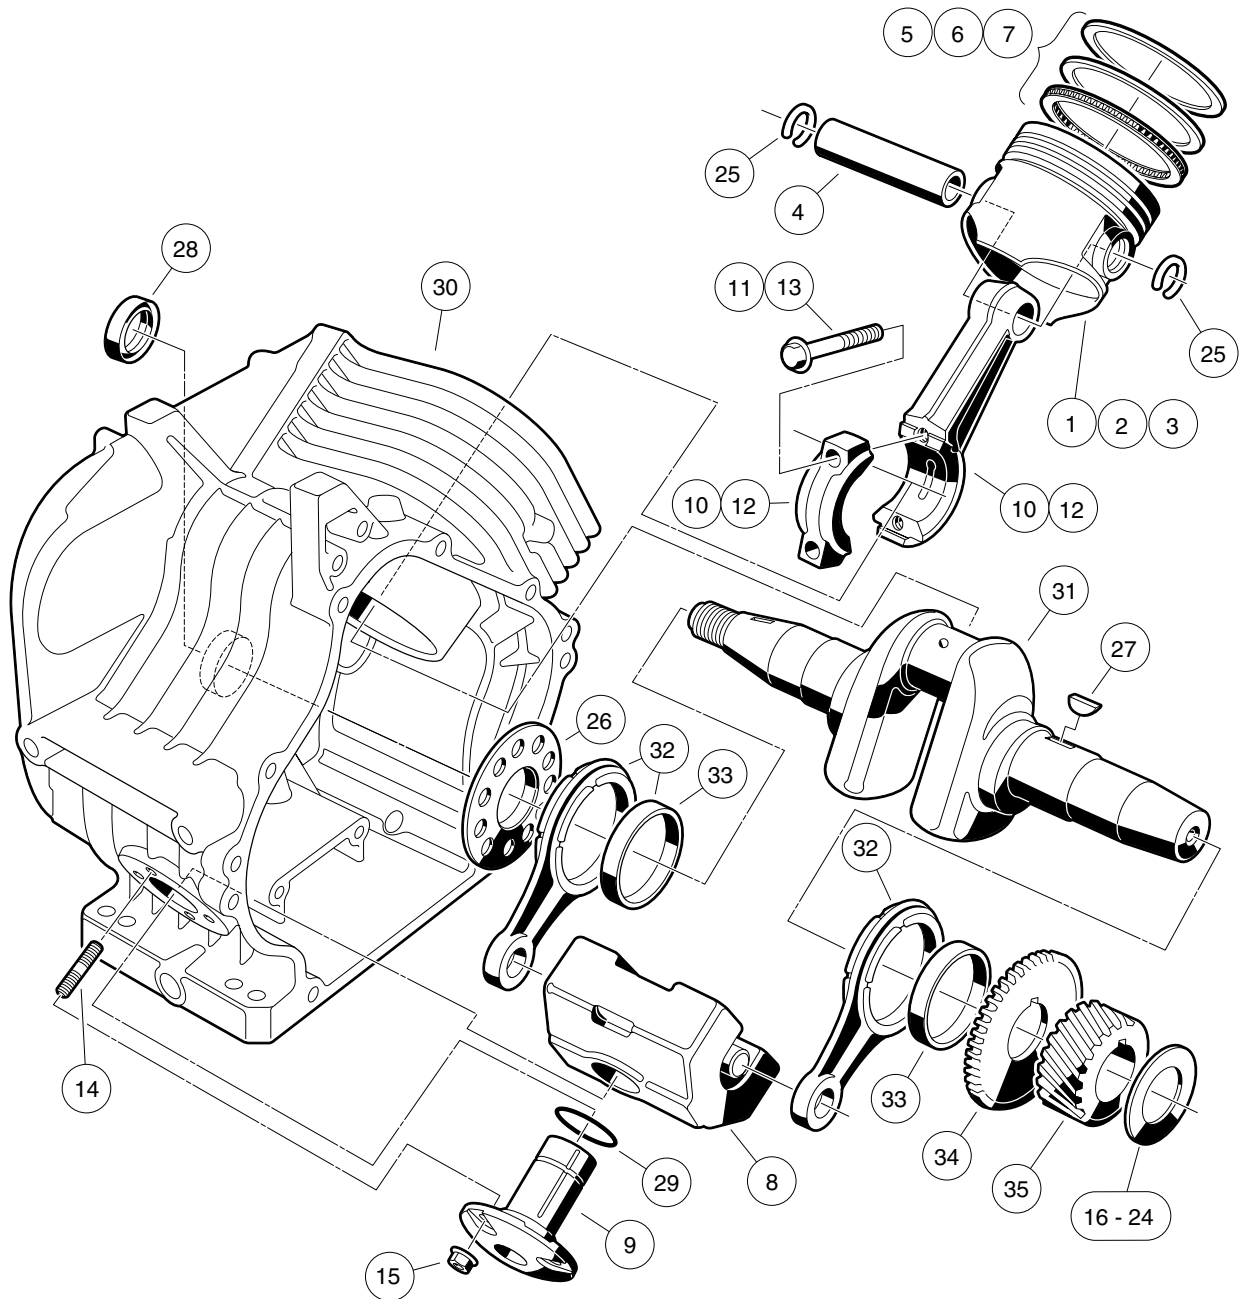


000199-001

FE290 ENGINE – CRANKCASE AND CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101645901</u>	Piston	1
2	<u>101645902</u>	Piston, Engine 0.25 mm Over	1
3	<u>101645903</u>	Piston, Engine 0.50 mm Over	1
4	<u>1016460</u>	Pin, Piston	1
5	<u>101646101</u>	Ring Set, Piston	1
6	<u>101646102</u>	Ring Set, Piston 0.25 mm Over	1
7	<u>101646103</u>	Ring Set, Piston 0.50 mm Over	1
8	<u>1016469</u>	Weight, Counterbalance	1
9	<u>1016470</u>	Shaft, Guide, Counterbalance	1
10	<u>101647501</u>	Rod Assembly (includes item 11)	1
11	<u>1016509</u>	Bolt	2
12	<u>101647502</u>	Rod Assembly, Connecting 0.50 mm Under (includes item 13)	1
13	<u>1016509</u>	Bolt	2
14	<u>1016541</u>	Stud, 6x14	4
15	<u>1016547</u>	Nut, M6 Flange	4
16	<u>101655001</u>	Shim, Crankshaft T=1.13	1
17	<u>101655002</u>	Shim, Crankshaft T=1.18	1
18	<u>101655003</u>	Shim, Crankshaft T=1.23	1
19	<u>101655004</u>	Shim, Crankshaft T=1.28	1
20	<u>101655005</u>	Shim, Crankshaft T=1.33	1
21	<u>101655006</u>	Shim, Crankshaft T=1.38	1
22	<u>101655007</u>	Shim, Crankshaft T=1.43	1
23	<u>101655008</u>	Shim, Crankshaft T=1.48	1
24	<u>101655009</u>	Shim, Crankshaft T=1.53	1
25	<u>1016558</u>	Ring, Snap	2
26	<u>1016559</u>	Spacer	1
27	<u>1016562</u>	Key	1
28	<u>1016568</u>	Seal, Oil	1
29	<u>1016571</u>	O-Ring	1
30	<u>101915501</u>	Crankcase Complete, FE290 (cw)	1
31	<u>101922301</u>	Crankshaft, FE290 Left-Hand Thread (includes items 32 through 35)	1
32	<u>1016516</u>	Rod (includes item 33)	2
33	<u>1016580</u>	Bearing, Plane	1
34	<u>1016532</u>	Gear, Spur	1
35	<u>1016533</u>	Gear, Helical	1

 7
G

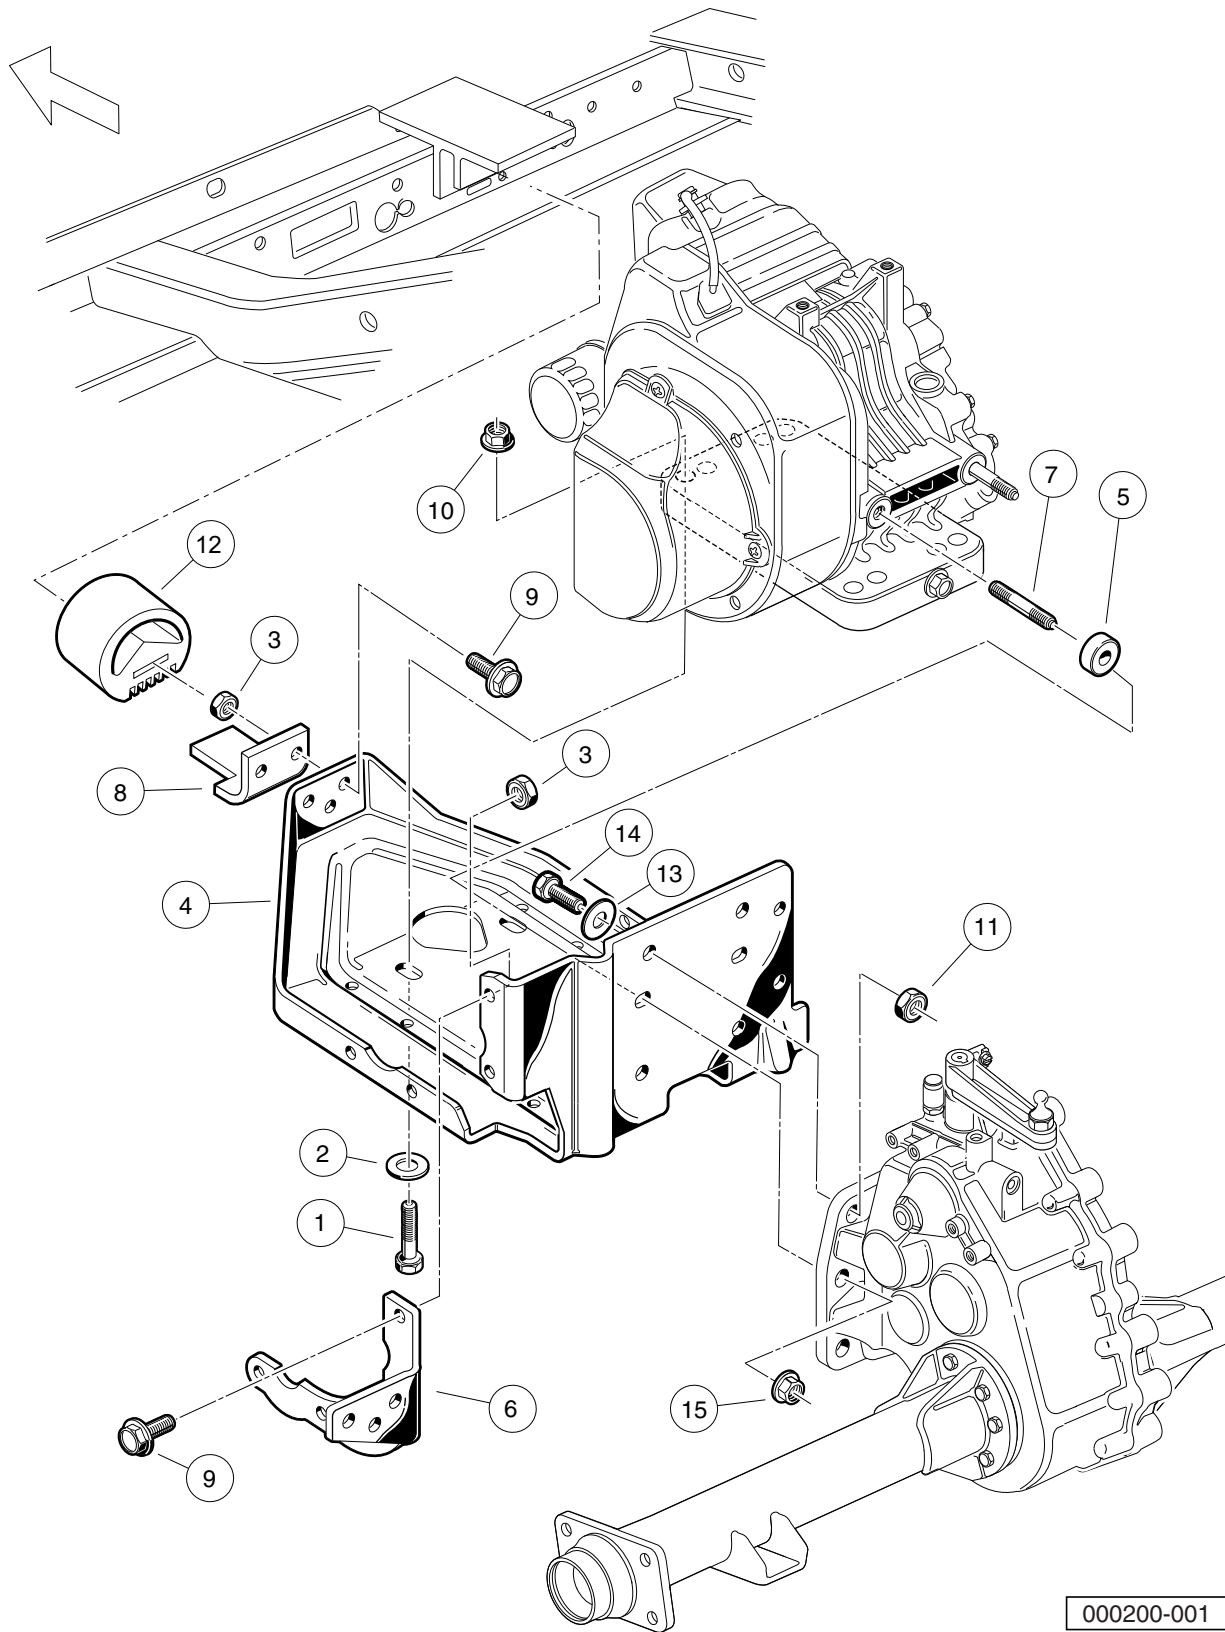7**G**

000200-001

FE290 ENGINE MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	4
2	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	4
3	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	6
4	<u>101827101</u>	Plate, Engine Mounting	1
5	<u>101832101</u>	Spacer, Powdered Metal	2
6	<u>101832701</u>	Stiffener (Flywheel Side)	1
7	<u>101833201</u>	Stud, M8-1.25 X 60mm Two-Ended	2
8	<u>101834601</u>	Snubber Bracket	1
9	<u>101884801</u>	Screw, 5/16-24 X 0.875 Grade-8	6
10	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4
11	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4
12	<u>102540301</u>	Inner Frame Snubber	1
13	<u>334</u>	Washer, 3/8 Type A Flat	4
14	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	4
15	<u>96704416</u>	Nut Flg, M8 X 1.25 Serrated	2

7

G

 
7

G

FE350 ENGINE – S27

8



G

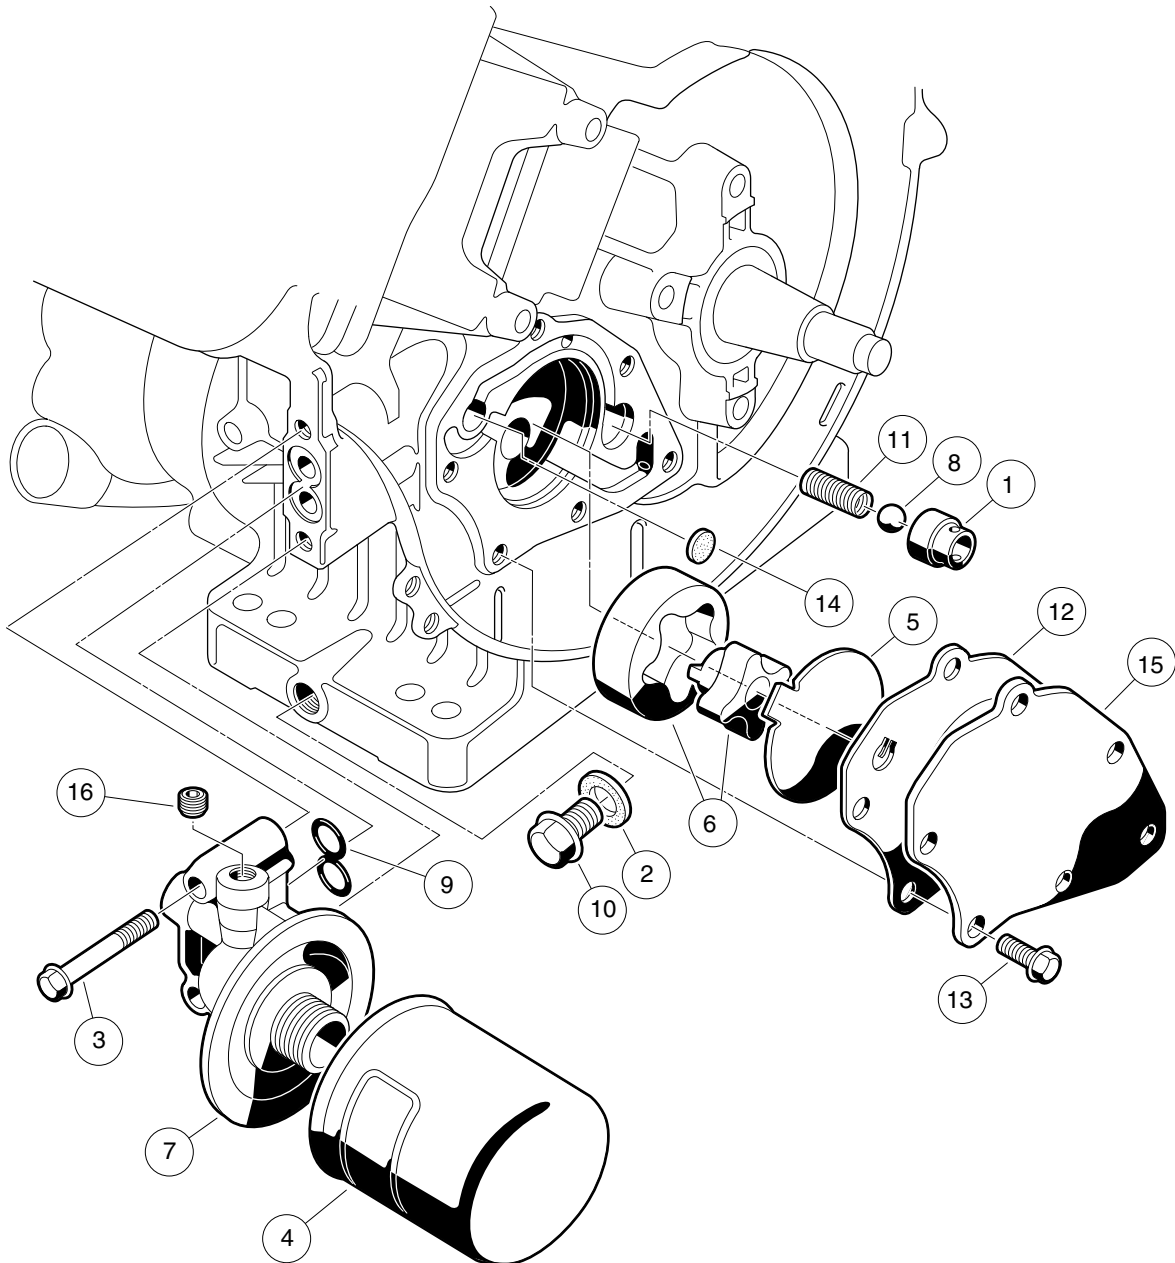

000203-001

FE350 ENGINE – OIL CIRCULATION

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	1016429	Seat, Value Oil Press Relief	1	
2	<u>1016432</u>	Gasket, Drain Plug	1	
3	<u>1016457</u>	Bolt, Flange Head	2	
4	<u>1016467</u>	Filter, Oil	1	
5	<u>1016473</u>	Plate, Oil Pump	1	
6	<u>101648203</u>	Oil Pump And Rotor	1	
7	<u>1016502</u>	Bracket, Oil Filter Mount	1	
8	<u>1016537</u>	Ball, Steel, Press, Relief	1	
9	<u>1016570</u>	O-Ring	1	
10	1016576	Plug, Drain	1	
11	<u>1016581</u>	Spring	1	
12	<u>1017442</u>	Gasket	1	
13	<u>1017456</u>	Bolt, Flanged	6	
14	<u>1017458</u>	Filter	1	
15	<u>1017460</u>	Cover, Pump	1	
16	<u>1017507</u>	Plug	2	

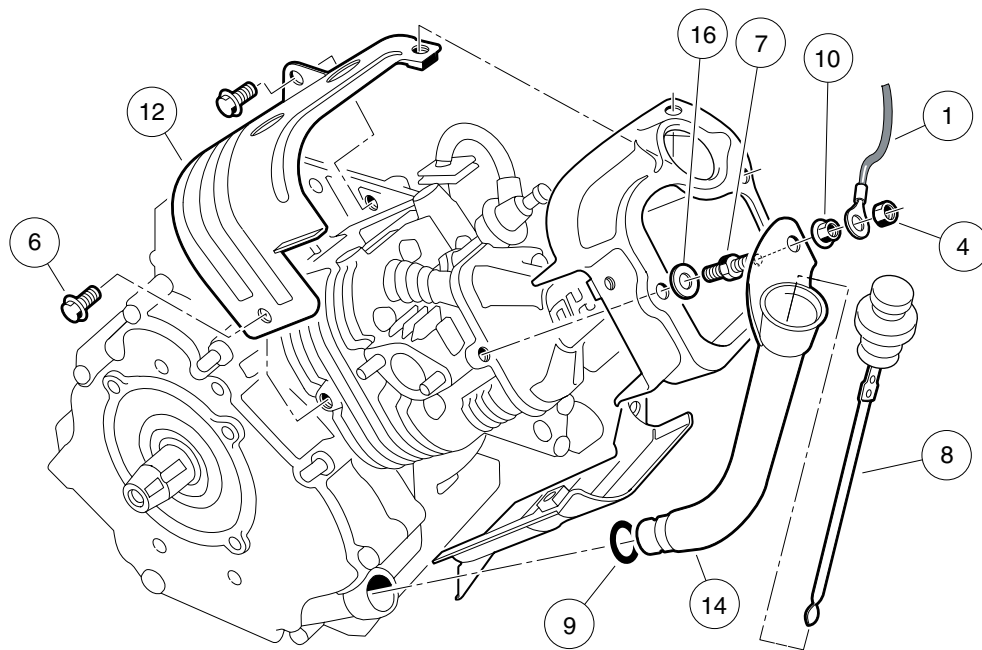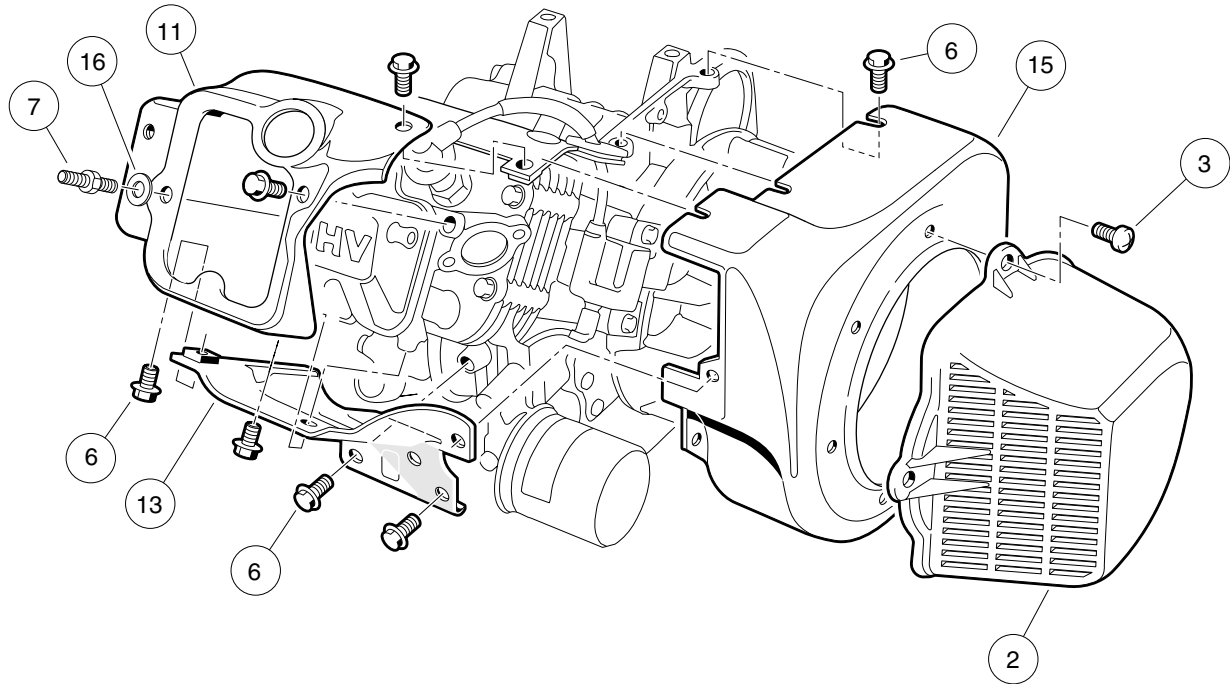  


000201-002

FE350 ENGINE WITHOUT ACR (AUTOMATIC COMPRESSION RELEASE) – SHROUDS AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015332</u>	Wire Assembly, #10, Uninsulated	1
2	<u>1015649</u>	Shroud, Fan	1
3	<u>1015969</u>	Screw, M6-1.00 X 10mm Pan Hd	4
4	<u>101887601</u>	Locknut, M6-1.00 Nylon Insert	1
5	<u>103386202</u>	Engine, FE350 S27 (includes items 6 through 16)	1
6	1016456	Bolt, Flange Head, M6 x 1 x 12 mm	16
7	<u>1016507</u>	Bolt, Two-Ended	1
8	1016531	Dipstick	1
9	<u>1016539</u>	O-Ring	1
10	1016547	Nut, M6 Flange	1
11	<u>1017474</u>	Shroud, Engine	1
12	<u>1017475</u>	Shroud, Engine	1
13	<u>1017476</u>	Shroud, Engine	1
14	<u>1017486</u>	Tube, Oil Filler	1
15	<u>101916101</u>	Housing, FE350 Fan	1
16	N/A	Washer, 6mm Flat	1

8

 
G

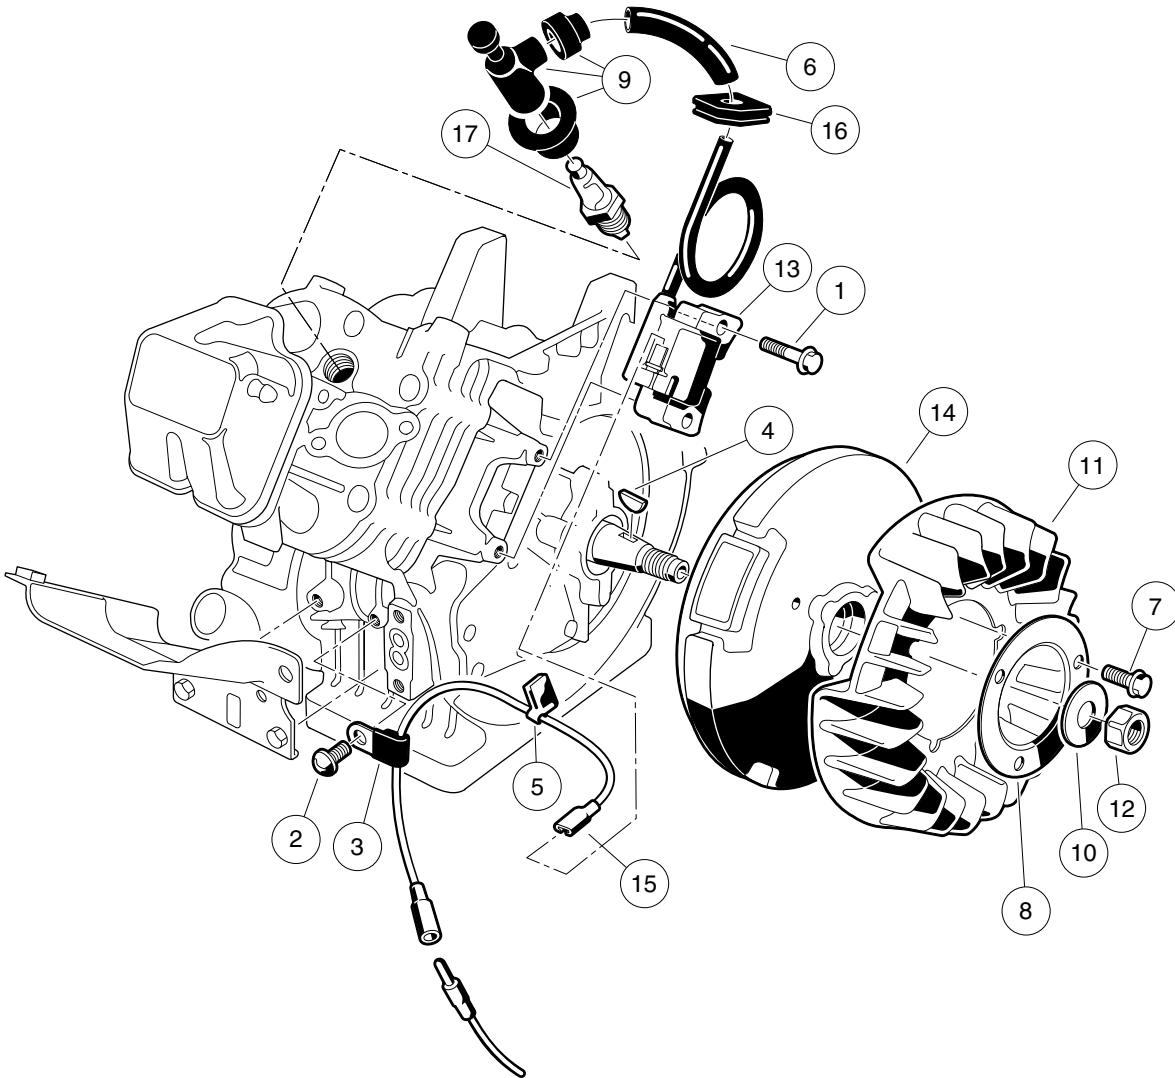

000202-002

AS26 FE350 ENGINE – IGNITION COMPONENTS AND FLYWHEEL

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>1016455</u>	Bolt, Flange Head	2	
2	<u>1016544</u>	Screw	1	
3	<u>1016561</u>	Clamp	1	
4	<u>1016562</u>	Key	1	
5	<u>1016587</u>	Clamp	1	
6	<u>1016588</u>	Tube, 7mm X 10mm X 70mm	1	
7	<u>1017448</u>	Bolt, Flanged	3	
8	<u>1017455</u>	Plate, Flywheel Fan	1	
9	<u>1017463</u>	Cap Asm Plug	1	
10	<u>1017490</u>	Washer, Flat	1	
11	<u>101916301</u>	Fan (cw)	1	
12	N/A	Nut, Hex, 18 mm Fine	1	
13	<u>103616501</u>	Ignition, Coil Asm	1	
14	<u>103616601</u>	Flywheel Comp	1	
15	<u>103616701</u>	Ignition, Wire Lead	1	
16	<u>103616801</u>	Ignition, Grommet	1	
17	<u>AM1232301</u>	Spark Plug, BPR2ES	1	

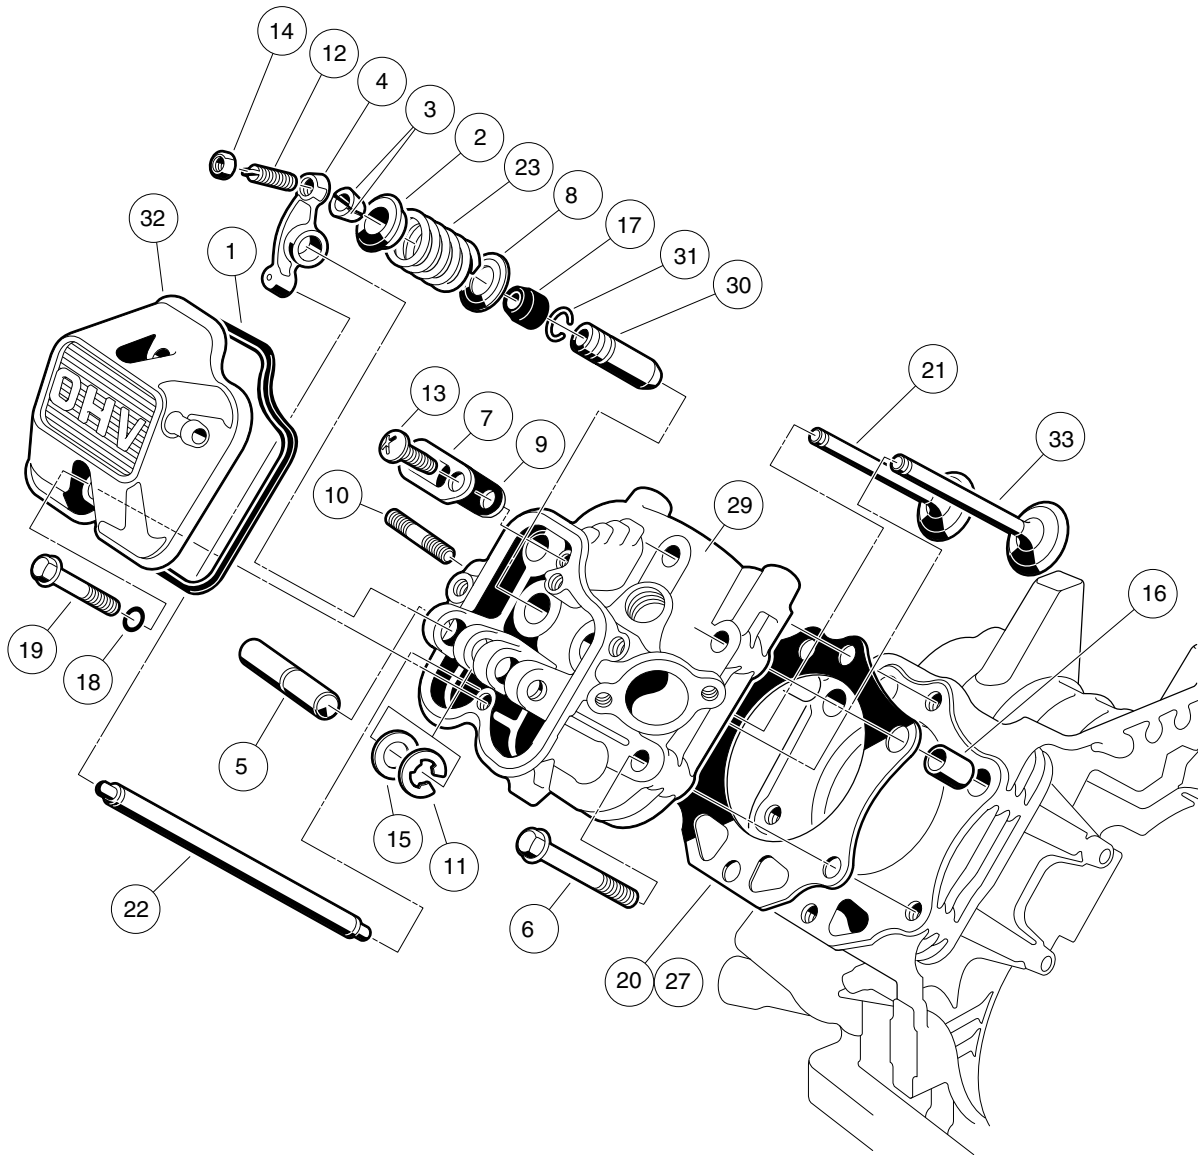 


000204-002

AS26 FE350 ENGINE – CYLINDER HEAD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016436</u>	Gasket, Rocker Case	1
2	<u>1016449</u>	Retainer, Valve Spring	2
3	<u>1016450</u>	Collet	4
4	<u>1016451</u>	Arm, Rocker	2
5	<u>1016452</u>	Shaft, Rocker	1
6	<u>1016458</u>	Bolt, Flange Head, M8 x 1.25 x 45 mm	6
7	<u>1016474</u>	Plate	1
8	<u>1016479</u>	Seat, Spring	2
9	<u>1016483</u>	Valve	1
10	<u>1016489</u>	Stud, Two-Ended, M8-1.25	2
11	<u>1016517</u>	Circlip, Type-E	1
12	<u>1016542</u>	Screw	2
13	<u>1016544</u>	Screw	1
14	<u>1016545</u>	Nut	2
15	<u>1016549</u>	Washer, 12.1x19x1.8	1
16	<u>1016563</u>	Pin	2
17	<u>1016566</u>	Seal, Oil	2
18	<u>1016569</u>	O-Ring	2
19	<u>1016583</u>	Bolt, 6x35	2
20	<u>1017434</u>	Gasket, Head	1
21	<u>1017445</u>	Valve, Exhaust	1
22	<u>1017454</u>	Rod, Push	2
23	<u>1017473</u>	Spring, Engine Valve	2
24	<u>102304801</u>	Kit, Gasket, FE350 (includes items 25 through 28)	1
25	<u>1016440</u>	Gasket, Engine to Insulator	1
26	<u>1016904</u>	Gasket, Exhaust	1
27	<u>1017434</u>	Gasket, Head	1
28	<u>1017443</u>	Gasket, Crankcase Cover	1
29	<u>103615601</u>	Cylinder Head, Fe350 S26, S27	1
30	<u>103615701</u>	Case, Rocker, Fe350 S26 S27	1
31	<u>103616301</u>	Valve, Intake, Hard Tip	1
Note: Item 24 is not a component of the FE350 engine.			

8

 
G

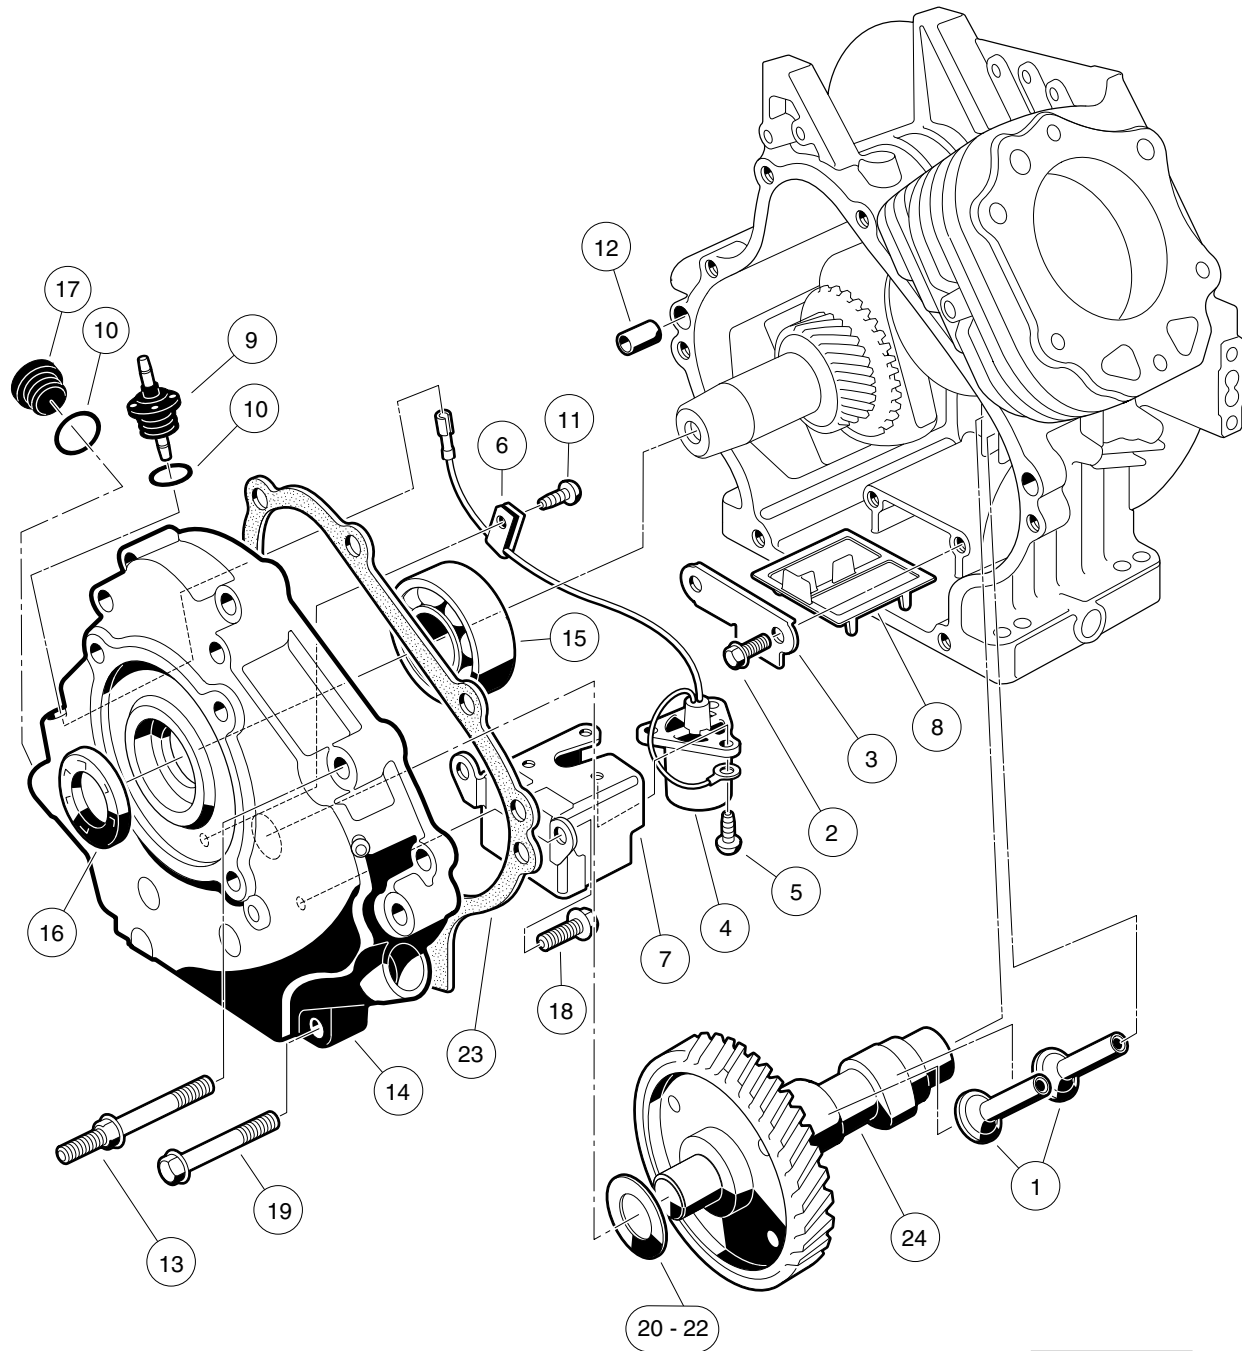

000205-003

AS26 FE350 ENGINE – CRANKCASE AND CRANKSHAFT OIL SENSOR


ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	1016453	Tappet	2	
2	<u>1016454</u>	Bolt, Flange Head, M5 x 0.8 x 8 mm	2	
3	<u>1016472</u>	Plate, Oil Filter Screen	1	
4	1016494	Sensor, Oil Level	1	
5	<u>1016496</u>	Screw, Cross Pan-Head, M4 x 0.7 x 8 mm	3	
6	<u>1016506</u>	Clamp	1	
7	<u>1016510</u>	Bracket, Switch, Oil Level	1	
8	<u>1016521</u>	Screen, Oil Filter	1	
9	<u>1016535</u>	Connector, Cord	1	
10	<u>1016538</u>	O-Ring	2	
11	<u>1016544</u>	Screw	1	
12	<u>1016564</u>	Pin	2	
13	<u>1016584</u>	Bolt, Two-Ended, M8 x 1.25 x 69 mm	2	
14	<u>1017472</u>	Cover Crankcase	1	
15	<u>1017487</u>	Bearing, Ball	1	
16	<u>1017504</u>	Seal, Oil	1	
17	1017508	Plug	1	
18	<u>1017513</u>	Bolt Switch Bracket	2	
19	<u>1017514</u>	Screw, M8-1.25 X 45mm Hex	6	
20	<u>101751801</u>	Shim, 0.3	1	
21	<u>101751802</u>	Shim, 0.4	1	
22	<u>101751803</u>	Shim, 0.5	1	
23	<u>103615901</u>	Gasket, Crankcase Cover	1	
24	<u>103616401</u>	Camshaft Comp	1	

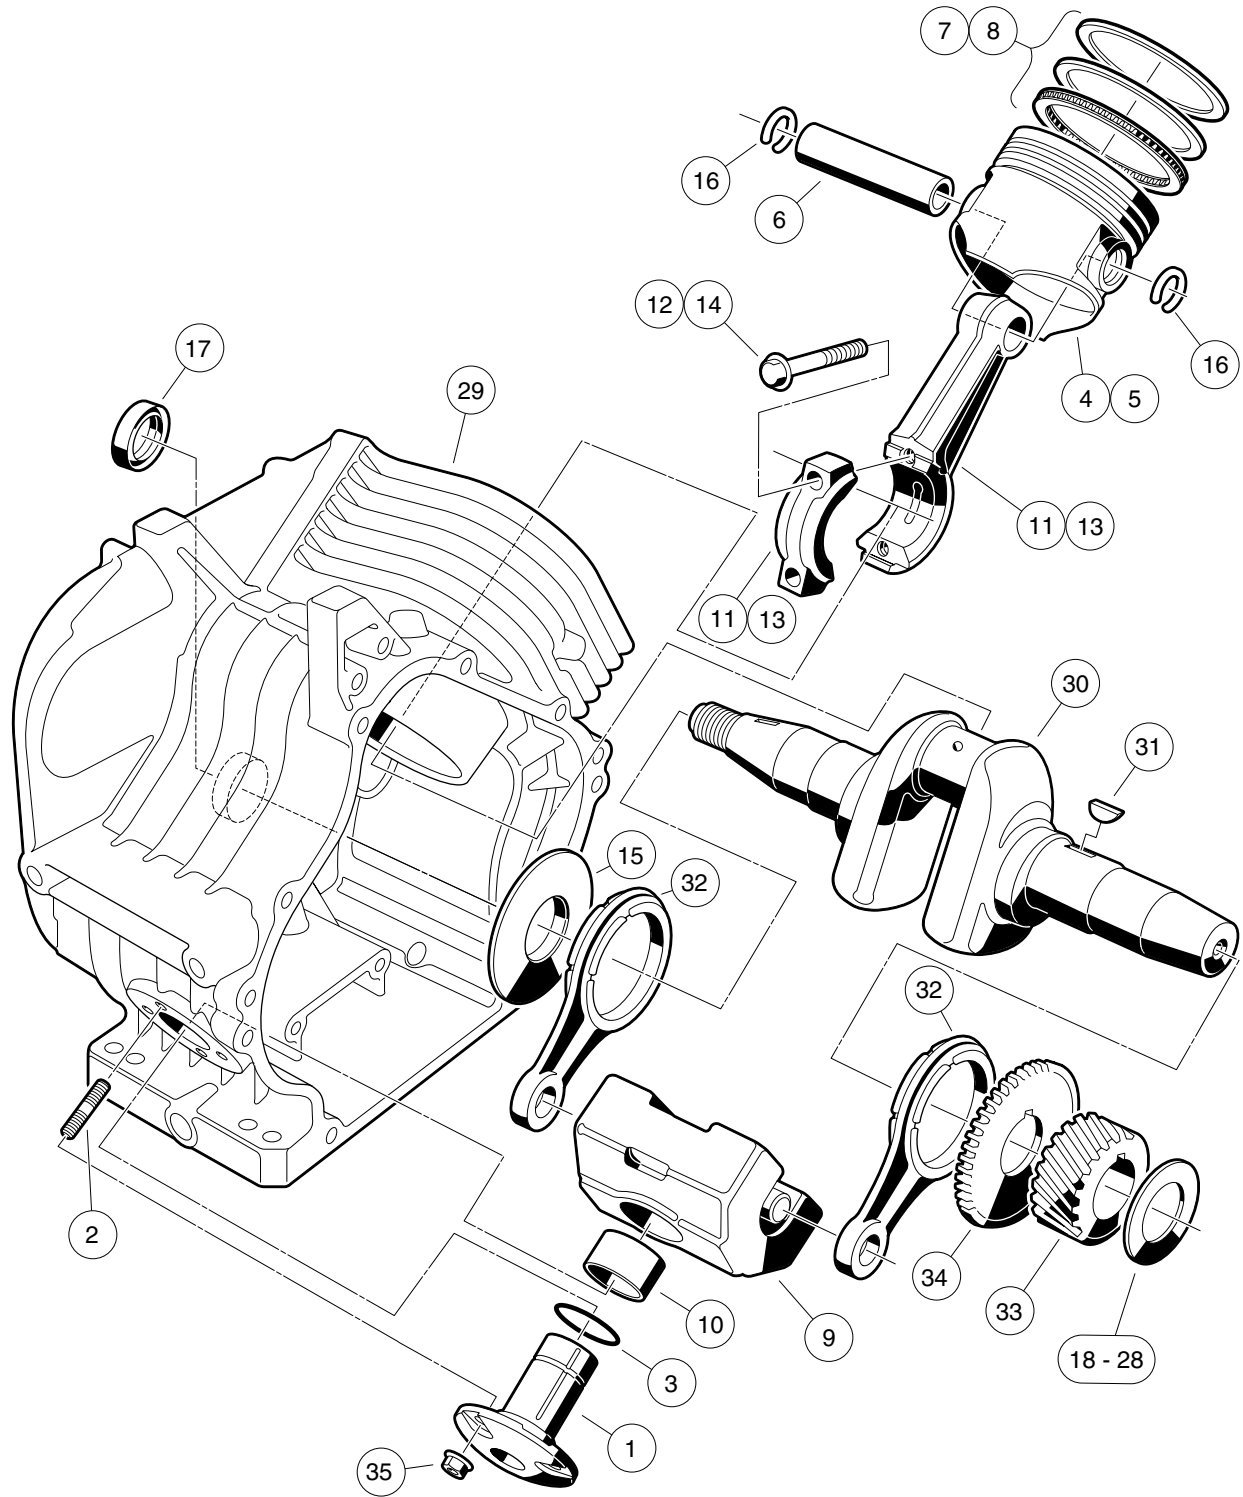 

000206-001

AS26 FE350 ENGINE – CRANKCASE AND CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	1016470	Shaft, Guide, Counterbalance	1	
2	<u>1016541</u>	Stud, 6x14	4	
3	<u>1016571</u>	O-Ring	1	
4	<u>101744901</u>	Piston, Standard	1	
5	<u>101744902</u>	Piston, 0.50 mm Oversize	1	
6	1017450	Pin, Piston	1	
7	<u>101745101</u>	Ring Set, Standard Piston	1	
8	<u>101745102</u>	Ring Set, Piston, 0.50 mm Oversize	1	
9	<u>1017453</u>	Fe400 Counterbalance Weight (includes item 10)	1	
10	1017510	Bearing, Plain	1	
11	101745701	Asm, Con. Rod Std (includes item 12)	1	
12	<u>1017512</u>	Bolt	2	
13	<u>101745702</u>	Rod Assembly Connecting Rod 0.5mm (includes item 14)	1	
14	<u>1017512</u>	Bolt	2	
15	1017501	Spacer	1	
16	<u>1017502</u>	Snap Ring	2	
17	<u>1017503</u>	Seal, Oil	1	
18	<u>101773301</u>	Shim, Crankshaft, 1.18mm	1	
19	<u>101773302</u>	Shim, Crankshaft, 1.25mm	1	
20	<u>101773303</u>	Shim, Crankshaft, 1.32mm	1	
21	<u>101773304</u>	Shim, Crankshaft, 1.39mm	1	
22	<u>101773305</u>	Shim, Crankshaft, 1.46mm	1	
23	<u>101773306</u>	Shim, Crankshaft, 1.53mm	1	
24	<u>101773307</u>	Shim, Crankshaft, 1.60mm	1	
25	<u>101773308</u>	Shim, Crankshaft, 1.67mm	1	
26	<u>101773309</u>	Shim, Crankshaft, 1.74mm	1	
27	<u>101773310</u>	Shim, Crankshaft, 1.11mm	1	
28	<u>101773311</u>	Shim, Crankshaft, 1.81mm	1	
29	<u>103615801</u>	Crankcase, Fe350 S26 S27	1	
30	N/A	Crankshaft, Complete (includes items 31 through 34)	1	
31	<u>1016562</u>	Key	1	
32	<u>1017471</u>	Rod	2	
33	N/A	Gear, Helical	1	
34	N/A	Gear, Spur	1	
35	103616201	Nut, M6 Flange	4	

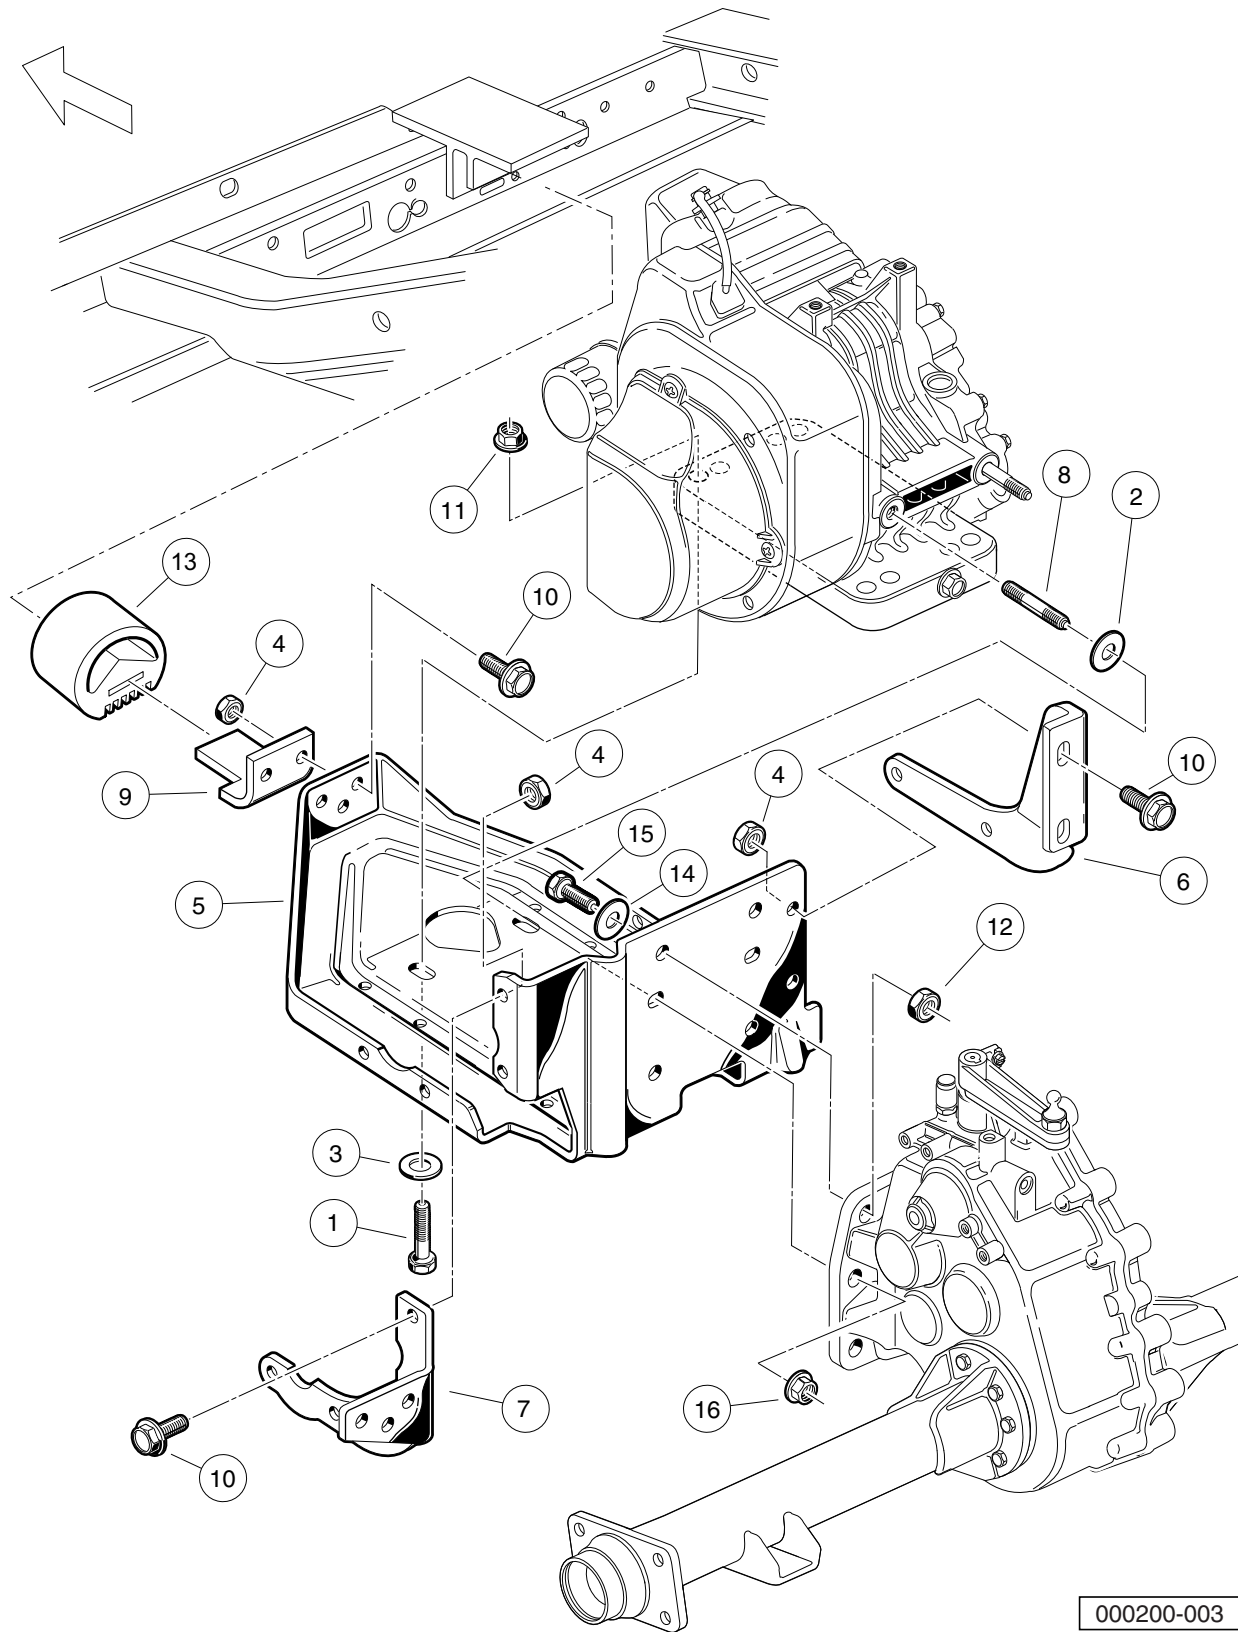 

000200-003

FE350 ENGINE MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	4	
2	<u>1011697</u>	Washer, 5/16 Flat	2	
3	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	4	
4	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	10	
5	<u>101827101</u>	Plate, Engine Mounting	1	
6	<u>101832601</u>	Stiffener (PTO Side)	1	
7	<u>101832701</u>	Stiffener (Flywheel Side)	1	
8	<u>101833101</u>	Stud, M8-1.25 X 50 mm Two-Ended	2	
9	<u>101834601</u>	Snubber Bracket	1	
10	<u>101884801</u>	Screw, 5/16-24 X 0.875 Grade-8	10	
11	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4	
12	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4	
13	<u>102540301</u>	Inner Frame Snubber	1	
14	<u>334</u>	Washer, 3/8 Type A Flat	4	
15	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	4	
16	<u>96704416</u>	Nut Flg, M8 X 1.25 Serrated	2	

 
 
8

G

AS11 FE350 ENGINE

9

G

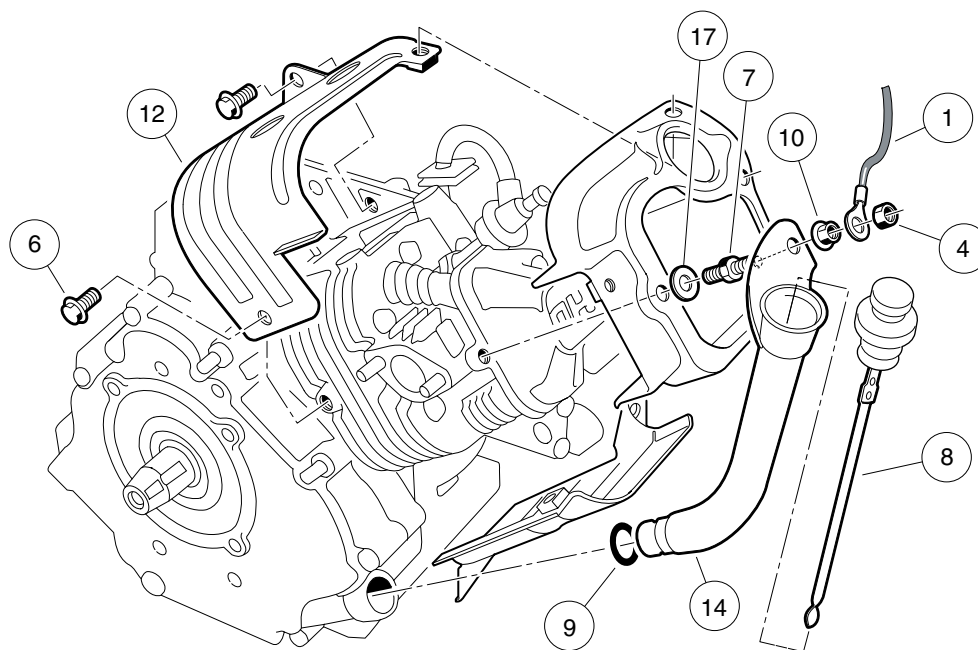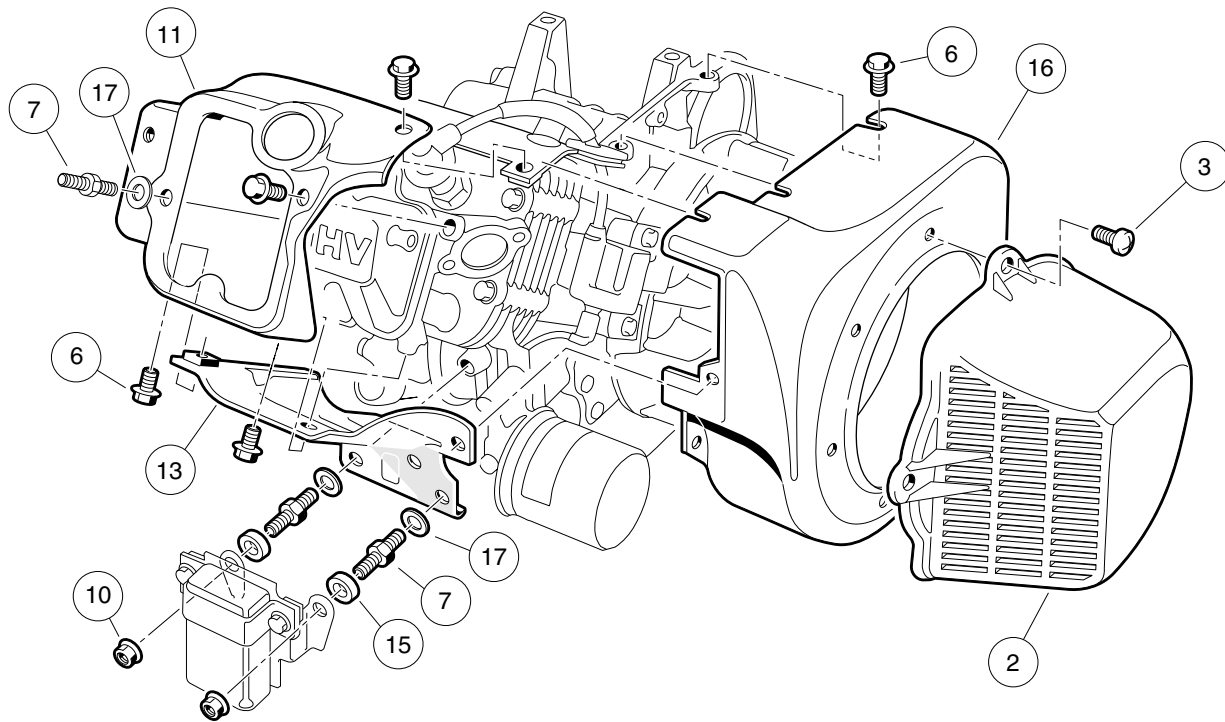


000201-001

AS11 FE350 ENGINE WITHOUT ACR (AUTOMATIC COMPRESSION RELEASE) – SHROUDS AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015332</u>	Wire Assembly, #10, Uninsulated	1
2	<u>1015649</u>	Shroud, Fan	1
3	<u>1015969</u>	Screw, M6-1.00 X 10mm Pan Hd	4
4	<u>101887601</u>	Locknut, M6-1.00 Nylon Insert	1
5	<u>101953802</u>	Engine, FE350 (cw) without ACR * (includes items 6 through 17)	1
6	<u>1016456</u>	Bolt, Flange Head, M6 x 1 x 12 mm	14
7	<u>1016507</u>	Bolt, Two-Ended	3
8	<u>1016531</u>	Dipstick	1
9	<u>1016539</u>	O-Ring	1
10	<u>1016547</u>	Nut, M6 Flange	3
11	<u>1017474</u>	Shroud, Engine	1
12	<u>1017475</u>	Shroud, Engine	1
13	<u>1017476</u>	Shroud, Engine	1
14	<u>1017486</u>	Tube, Oil Filler	1
15	<u>1017500</u>	Spacer 6.50 X 12 X 5.5	2
16	<u>101916101</u>	Housing, FE350 Fan	1
17	N/A	Washer, 6mm Flat	3
* Note: FE350 engine component listings span several pages.			

9

 
G

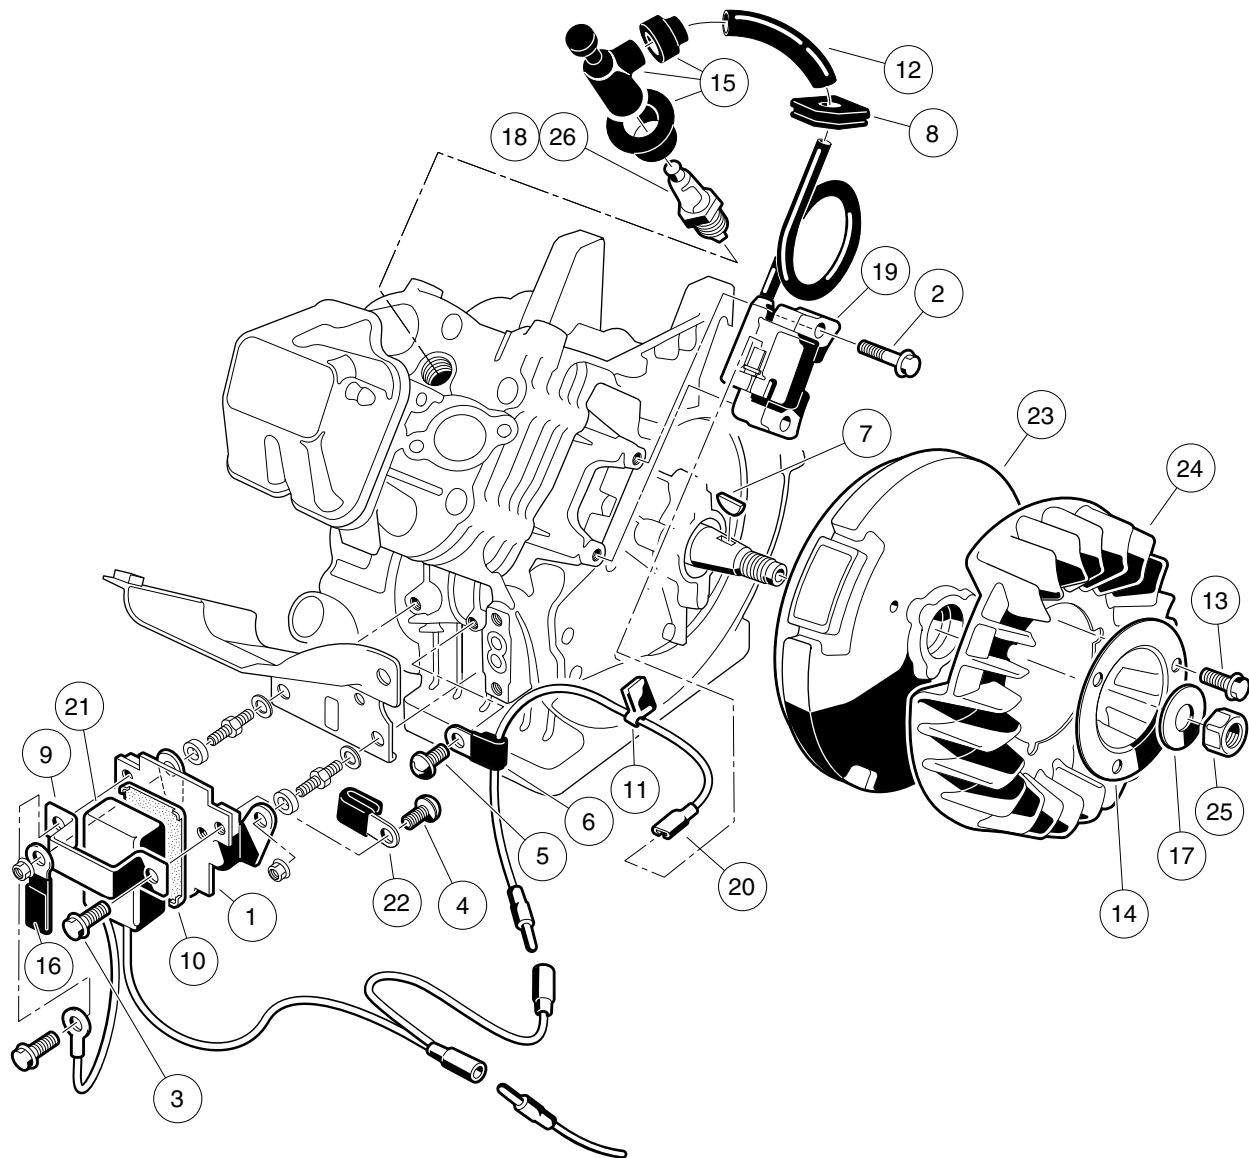

000202-001

AS11 FE350 ENGINE – IGNITION COMPONENTS AND FLYWHEEL


ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	1016445	Bracket, RPM Limiter	1	
2	<u>1016455</u>	Bolt, Flange Head	2	
3	1016456	Bolt, Flange Head, M6 x 1 x 12 mm	2	
4	<u>1016497</u>	Screw, Pan WP Cross	1	
5	<u>1016544</u>	Screw	1	
6	<u>1016561</u>	Clamp	1	
7	<u>1016562</u>	Key	1	
8	<u>1016578</u>	Ignition, Grommet	1	
9	<u>1016579</u>	Band, RPM Limiter Mount	1	
10	1016586	Damper, RPM Limiter	1	
11	<u>1016587</u>	Clamp	1	
12	<u>1016588</u>	Tube, 7mm X 10mm X 70mm	1	
13	<u>1017448</u>	Bolt, Flanged	3	
14	<u>1017455</u>	Plate, Flywheel Fan	1	
15	<u>1017463</u>	Cap Asm Plug	1	
16	<u>1017468</u>	Clamp	1	
17	<u>1017490</u>	Washer, Flat	1	
18	<u>101881101</u>	Spark Plug, OHV (Autolite)	1	
19	<u>101909201</u>	Coil, Ignition	1	
20	<u>101909301</u>	Lead Wire Assy	1	
21	101909401	Limiter, RPM	1	
22	101909501	Clamp, Steel	1	
23	<u>101916201</u>	Flywheel	1	
24	<u>101916301</u>	Fan (cw)	1	
25	N/A	Nut, Hex, 18 mm Fine	1	
26	<u>AM10724</u>	Spark Plug, OHV (NGK)	1	

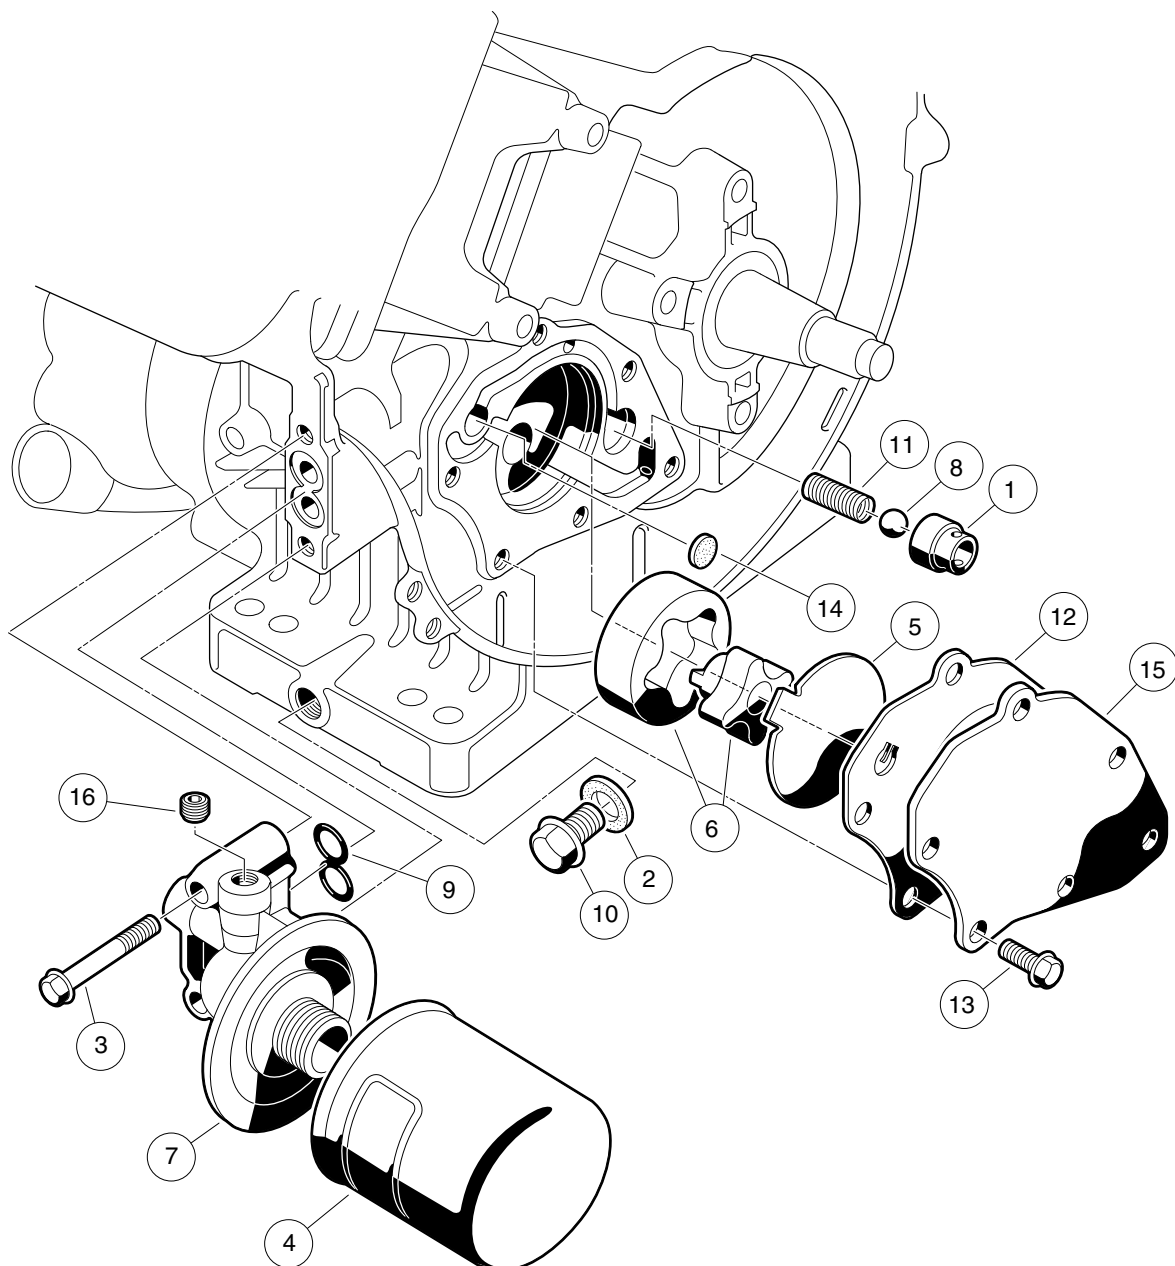 

000203-001


FE350 ENGINE – OIL CIRCULATION

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	1016429	Seat, Value Oil Press Relief	1	
2	<u>1016432</u>	Gasket, Drain Plug	1	
3	<u>1016457</u>	Bolt, Flange Head	2	
4	<u>1016467</u>	Filter, Oil	1	
5	<u>1016473</u>	Plate, Oil Pump	1	
6	<u>101648203</u>	Oil Pump And Rotor	1	
7	<u>1016502</u>	Bracket, Oil Filter Mount	1	
8	<u>1016537</u>	Ball, Steel, Press, Relief	1	
9	<u>1016570</u>	O-Ring	1	
10	1016576	Plug, Drain	1	
11	<u>1016581</u>	Spring	1	
12	<u>1017442</u>	Gasket	1	
13	<u>1017456</u>	Bolt, Flanged	6	
14	<u>1017458</u>	Filter	1	
15	<u>1017460</u>	Cover, Pump	1	
16	<u>1017507</u>	Plug	2	

 

AS11 FE350 ENGINE – CYLINDER HEAD

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>1016436</u>	Gasket, Rocker Case	1	
2	<u>1016449</u>	Retainer, Valve Spring	2	
3	<u>1016450</u>	Collet	4	
4	<u>1016452</u>	Shaft, Rocker	1	
5	<u>1016458</u>	Bolt, Flange Head, M8 x 1.25 x 45 mm	6	
6	<u>1016474</u>	Plate	1	
7	<u>1016479</u>	Seat, Spring	2	
8	<u>1016483</u>	Valve	1	
9	<u>1016489</u>	Stud, Two-Ended, M8-1.25	2	
10	<u>1016517</u>	Circlip, Type-E	1	
11	<u>1016544</u>	Screw	1	
12	<u>1016549</u>	Washer, 12.1x19x1.8	1	
13	<u>1016563</u>	Pin	2	
14	<u>1016566</u>	Seal, Oil	2	
15	<u>1016569</u>	O-Ring	2	
16	<u>1016583</u>	Bolt, 6x35	2	
17	<u>1017434</u>	Gasket, Head	1	
18	<u>1017435</u>	Assembly, Cylinder Head, FE350 (includes items 19 through 21)	1	
19	<u>1016518</u>	Guide, Valve, Exhaust	1	
20	<u>1016519</u>	Guide, Valve	1	
21	<u>1016560</u>	Snap Ring	2	
22	<u>1017444</u>	Valve, Intake	1	
23	<u>1017445</u>	Valve, Exhaust	1	
24	<u>1017446</u>	Arm, Rocker	2	
25	<u>1017454</u>	Rod, Push	2	
26	<u>1017473</u>	Spring, Engine Valve	2	
27	<u>102304801</u>	Kit, Gasket, FE350 (includes items 28 through 31)	1	
28	<u>1016440</u>	Gasket, Engine to Insulator	1	
29	<u>1016904</u>	Gasket, Exhaust	1	
30	<u>1017434</u>	Gasket, Head	1	
31	<u>1017443</u>	Gasket, Crankcase Cover	1	
32	<u>102753401</u>	Case, Rocker	1	
Note: Item 28 is not a component of the FE350 engine.				

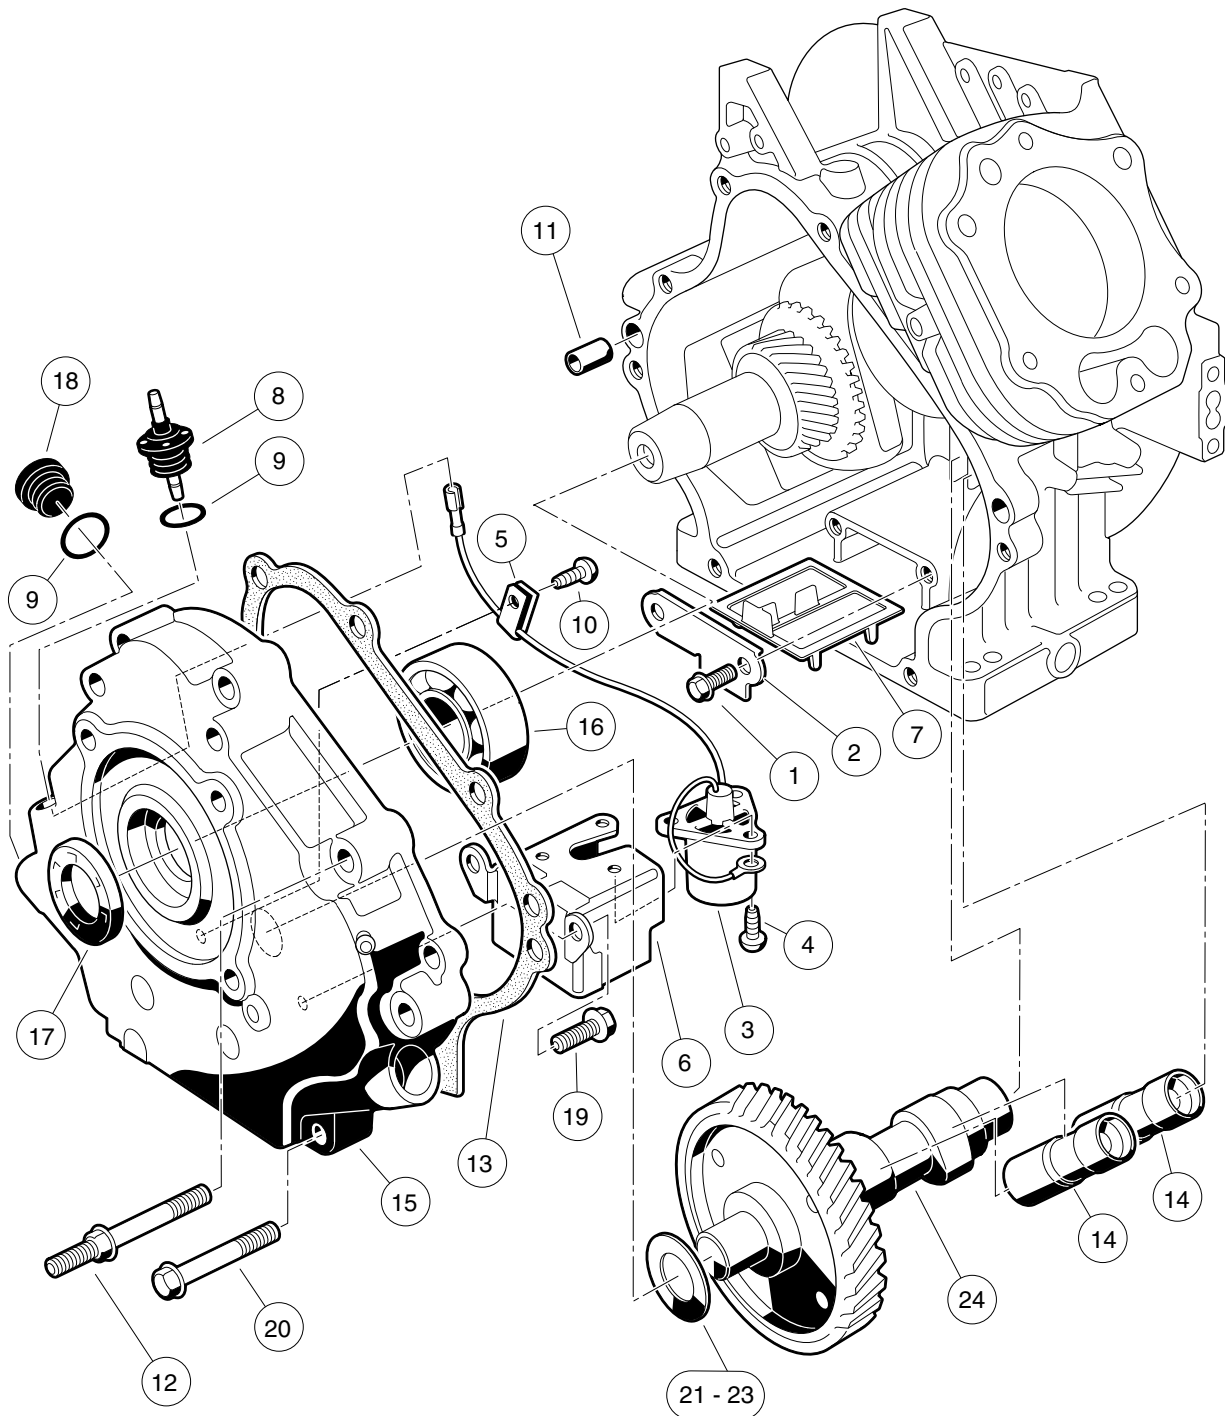 


000205-002

AS11 FE350 ENGINE WITHOUT ACR – CRANKCASE, CAMSHAFT, AND OIL SENSOR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016454</u>	Bolt, Flange Head, M5 x 0.8 x 8 mm	2
2	<u>1016472</u>	Plate, Oil Filter Screen	1
3	<u>1016494</u>	Sensor, Oil Level	1
4	<u>1016496</u>	Screw, Cross Pan-Head, M4 x 0.7 x 8 mm	3
5	<u>1016506</u>	Clamp	1
6	<u>1016510</u>	Bracket, Switch, Oil Level	1
7	<u>1016521</u>	Screen, Oil Filter	1
8	<u>1016535</u>	Connector, Cord	1
9	<u>1016538</u>	O-Ring	2
10	<u>1016544</u>	Screw	1
11	<u>1016564</u>	Pin	2
12	<u>1016584</u>	Bolt, Two-Ended, M8 x 1.25 x 69 mm	2
13	<u>1017443</u>	Gasket, Crankcase Cover	1
14	<u>1017447</u>	Adjuster, Lash	2
15	<u>1017472</u>	Cover Crankcase	1
16	<u>1017487</u>	Bearing, Ball	1
17	<u>1017504</u>	Seal, Oil	1
18	<u>1017508</u>	Plug	1
19	<u>1017513</u>	Bolt Switch Bracket	2
20	<u>1017514</u>	Screw, M8-1.25 X 45mm Hex	6
21	<u>101751801</u>	Shim, 0.3	1
22	<u>101751802</u>	Shim, 0.4	1
23	<u>101751803</u>	Shim, 0.5	1
24	<u>102431001</u>	Camshaft, FE350 without ACR, 44-Tooth	1

9

 G

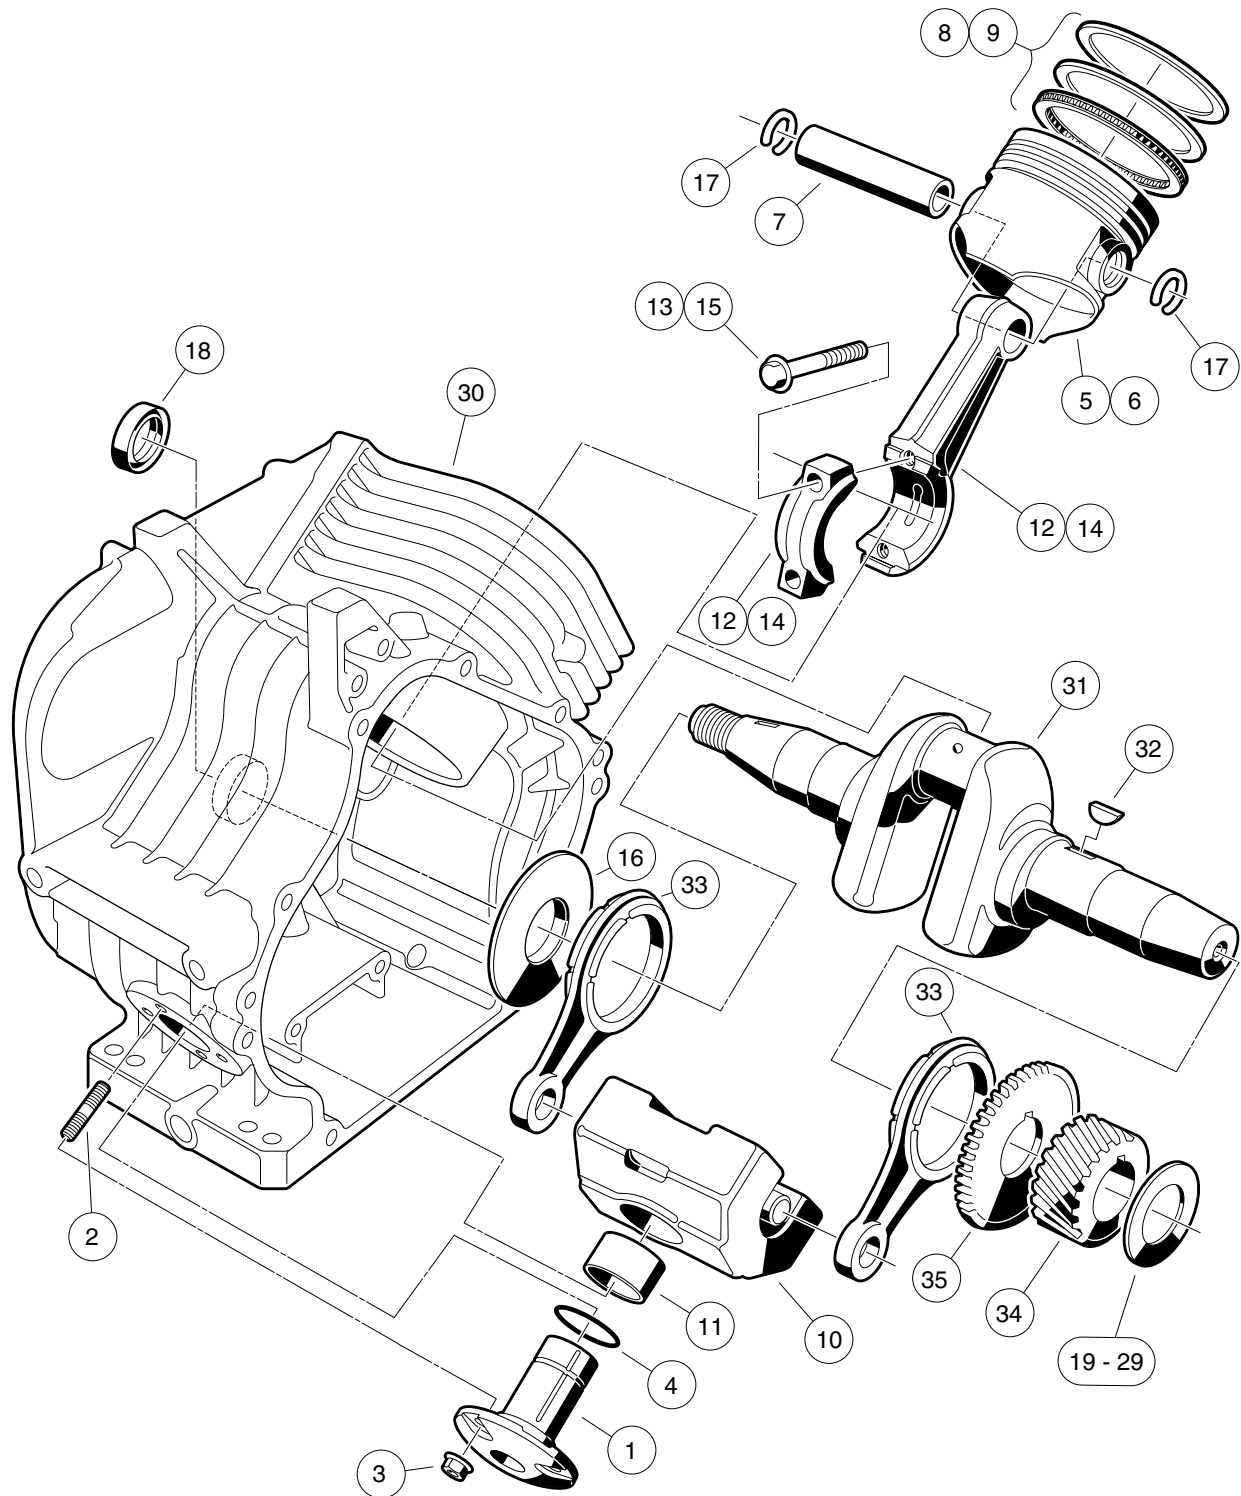


000206-001

AS11 FE350 ENGINE – CRANKCASE AND CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016470	Shaft, Guide, Counterbalance	1
2	<u>1016541</u>	Stud, 6x14	4
3	1016547	Nut, M6 Flange	4
4	<u>1016571</u>	O-Ring	1
5	<u>101744901</u>	Piston, Standard	1
6	<u>101744902</u>	Piston, 0.50 mm Oversize	1
7	1017450	Pin, Piston	1
8	<u>101745101</u>	Ring Set, Standard Piston	1
9	<u>101745102</u>	Ring Set, Piston, 0.50 mm Oversize	1
10	<u>1017453</u>	Fe400 Counterbalance Weight (includes item 11)	1
11	1017510	Bearing, Plain	1
12	101745701	Asm, Con. Rod Std (includes item 13)	1
13	<u>1017512</u>	Bolt	2
14	<u>101745702</u>	Rod Assembly Connecting Rod 0.5mm (includes item 15)	1
15	<u>1017512</u>	Bolt	2
16	1017501	Spacer	1
17	<u>1017502</u>	Snap Ring	2
18	<u>1017503</u>	Seal, Oil	1
19	<u>101773301</u>	Shim, Crankshaft, 1.18mm	1
20	<u>101773302</u>	Shim, Crankshaft, 1.25mm	1
21	<u>101773303</u>	Shim, Crankshaft, 1.32mm	1
22	<u>101773304</u>	Shim, Crankshaft, 1.39mm	1
23	<u>101773305</u>	Shim, Crankshaft, 1.46mm	1
24	<u>101773306</u>	Shim, Crankshaft, 1.53mm	1
25	<u>101773307</u>	Shim, Crankshaft, 1.60mm	1
26	<u>101773308</u>	Shim, Crankshaft, 1.67mm	1
27	<u>101773309</u>	Shim, Crankshaft, 1.74mm	1
28	<u>101773310</u>	Shim, Crankshaft, 1.11mm	1
29	<u>101773311</u>	Shim, Crankshaft, 1.81mm	1
30	<u>101916001</u>	Crankcase Complete, FE350 (cw)	1
31	<u>102430901</u>	Crankshaft, FE350 Left-Hand, 22-Tooth (includes items 32 through 35)	1
32	<u>1016562</u>	Key	1
33	<u>1017471</u>	Rod	2
34	N/A	Gear, Helical	1
35	N/A	Gear, Spur	1

9

 G

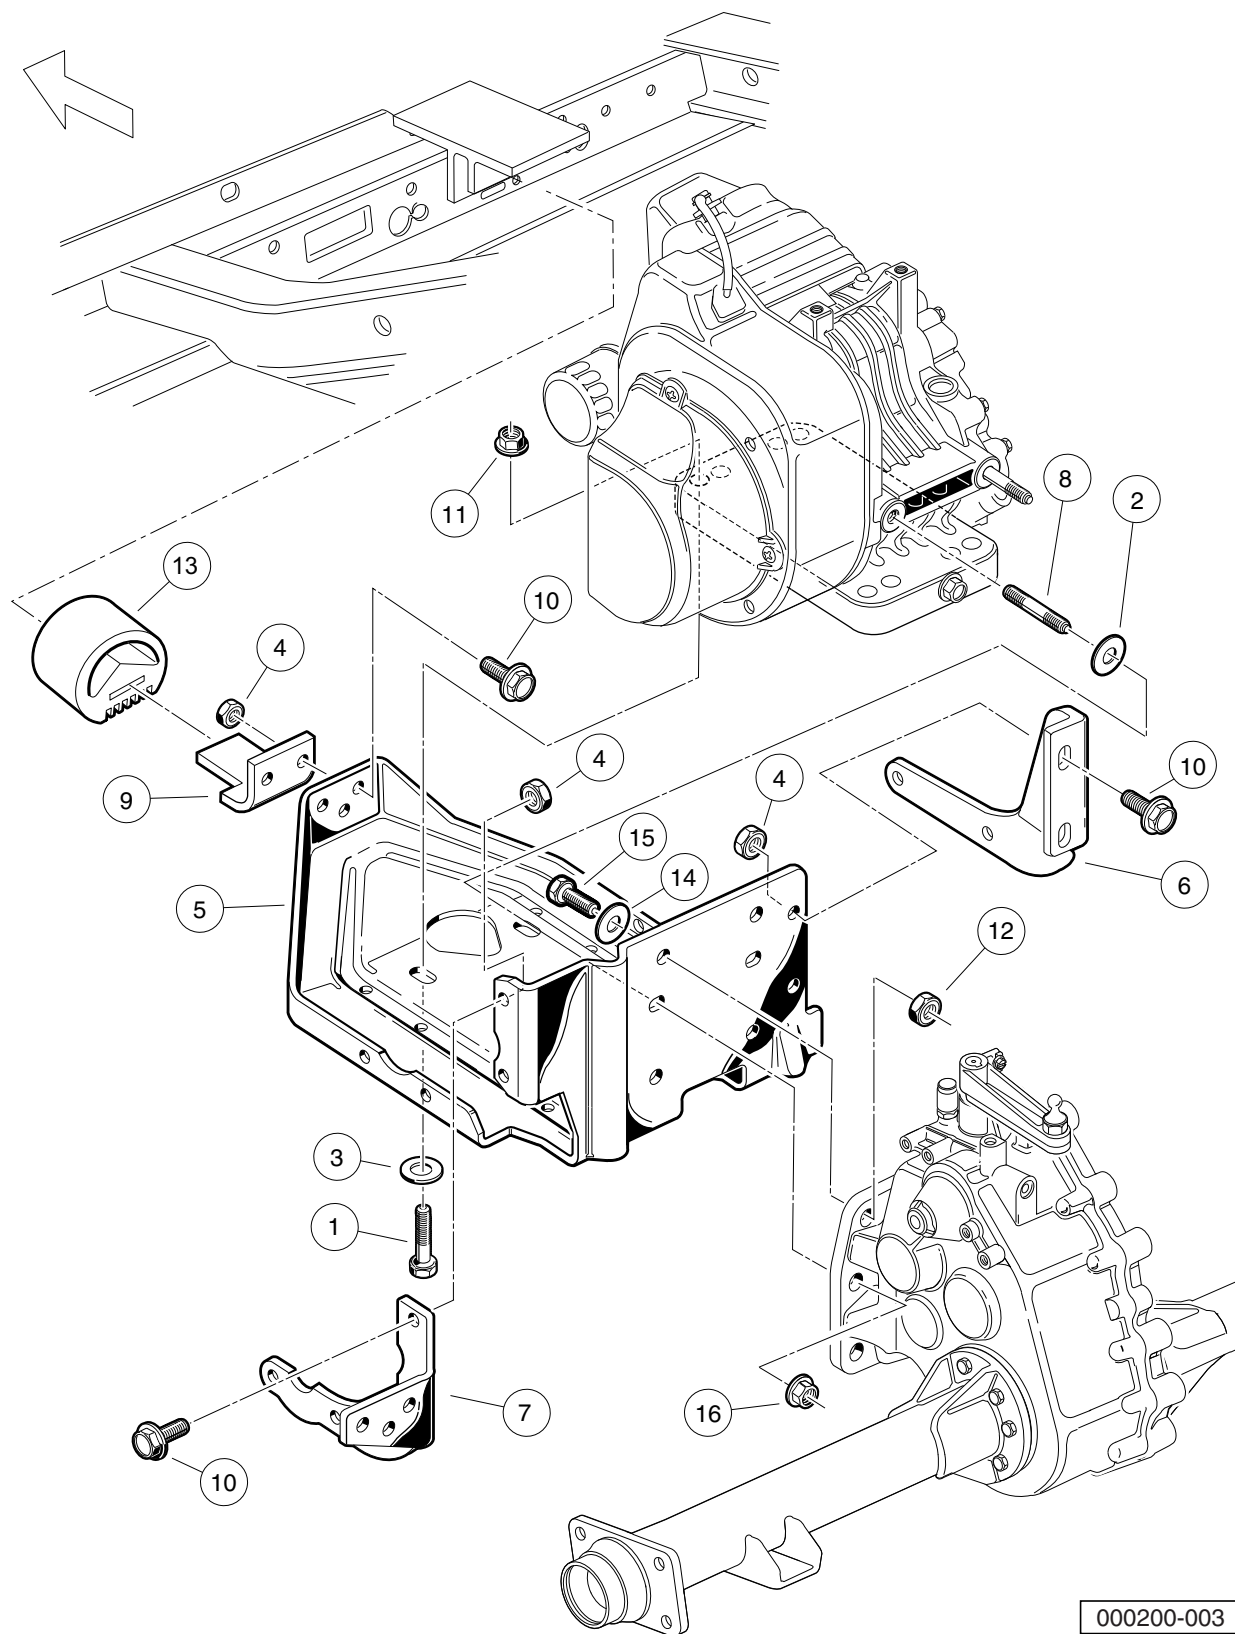

000200-003

FE350 ENGINE MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	4
2	<u>1011697</u>	Washer, 5/16 Flat	2
3	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	4
4	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	10
5	<u>101827101</u>	Plate, Engine Mounting	1
6	<u>101832601</u>	Stiffener (PTO Side)	1
7	<u>101832701</u>	Stiffener (Flywheel Side)	1
8	<u>101833101</u>	Stud, M8-1.25 X 50 mm Two-Ended	2
9	<u>101834601</u>	Snubber Bracket	1
10	<u>101884801</u>	Screw, 5/16-24 X 0.875 Grade-8	10
11	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4
12	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4
13	<u>102540301</u>	Inner Frame Snubber	1
14	<u>334</u>	Washer, 3/8 Type A Flat	4
15	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	4
16	<u>96704416</u>	Nut Flg, M8 X 1.25 Serrated	2

9

G

 
9

G

FUEL, INTAKE, AND GOVERNOR SYSTEMS

10

G

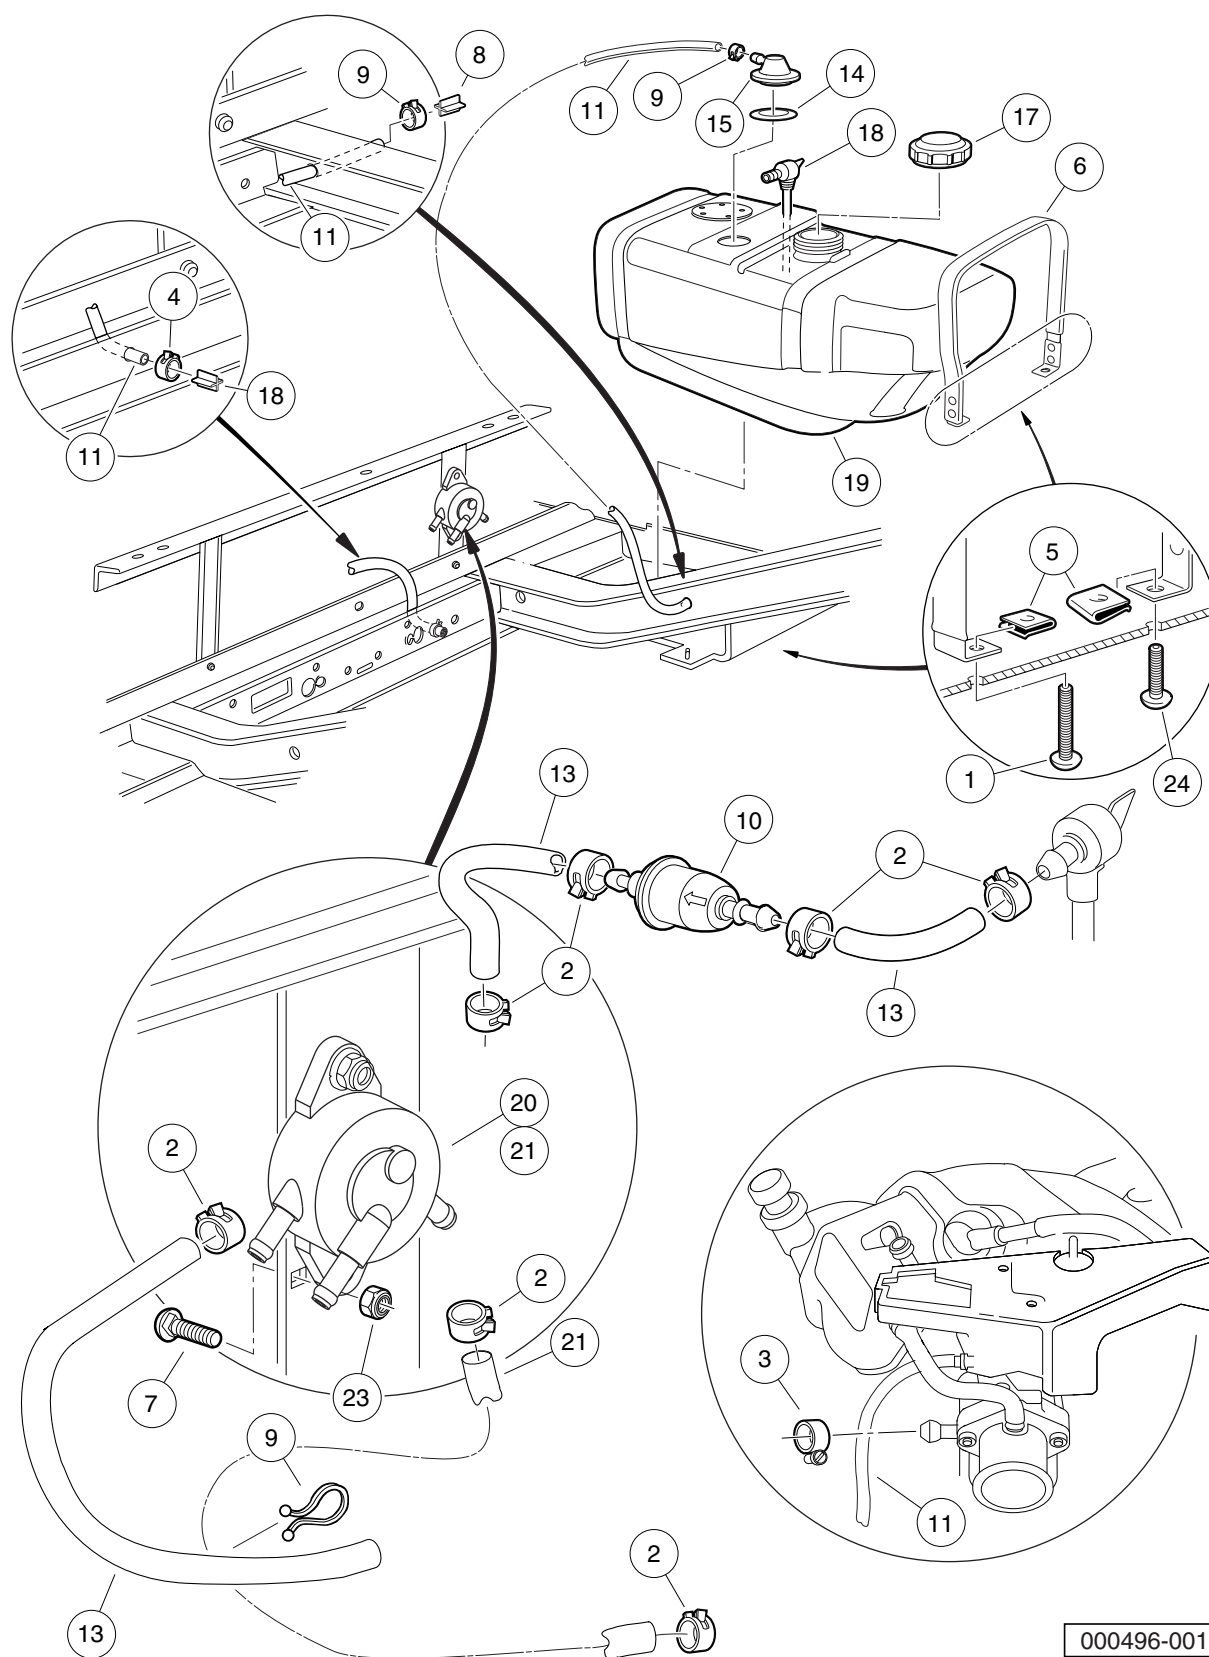


000496-001

FUEL SYSTEM

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011988</u>	Screw, 1/4-20 X 2.00 Phillips Truss-Head	1
2	<u>1012649</u>	Clamp, 0.460 Red Hose	7
3	<u>1013687</u>	Clamp, 3/8" Hose (screw type)	1
4	<u>1013746</u>	Clamp, 0.301 ID Hose	2
5	<u>1014116</u>	Nut, 1/4-20 Speed	2
6	<u>1014928</u>	Fuel Strap Assembly Rear	1
7	<u>1017203</u>	Carriage Bolt	2
8	<u>101824401</u>	Vent Barb	1
9	<u>101987701</u>	Clamp, Plastic Tie	1
10	<u>102003201</u>	Filter, Fuel, 30 Micron	1
11	<u>102865101</u>	Fuel Line	1
12	<u>103651902</u>	Asm, Tank, Ds Utl Wo/su† Nano (includes items 13 through 19)	1
13	<u>1015137</u>	Fuel Line (available by the foot)	1
14	<u>1015139</u>	Insulation Grommet	1
15	<u>1015143</u>	Vent, Fuel Tank	1
16	<u>102406701</u>	Bushing, Line, Return	1
17	<u>103372101</u>	Cap, Fuel Tank, Gas, Ratchet	1
18	<u>103372302</u>	Fuel Pickup w/Shut-Off Valve, 288mm	1
19	<u>103776902</u>	Tank, Fuel, Top, Wo/su Nano	1
20	<u>103781101</u>	Kit, Fuel Pump Retrofit (includes items 21 and 22)	1
21	<u>103010101</u>	Pump, Fuel, Impulse, Fh	1
22	<u>103781201</u>	Instr, Fuel Pump Retrofit	1
23	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2
24	<u>8248</u>	Screw, 1/4-20 X 0.75 Truss-Head Machine	1
Note: Total fuel line length: 47 inches (119.4 cm)			

10

 
G

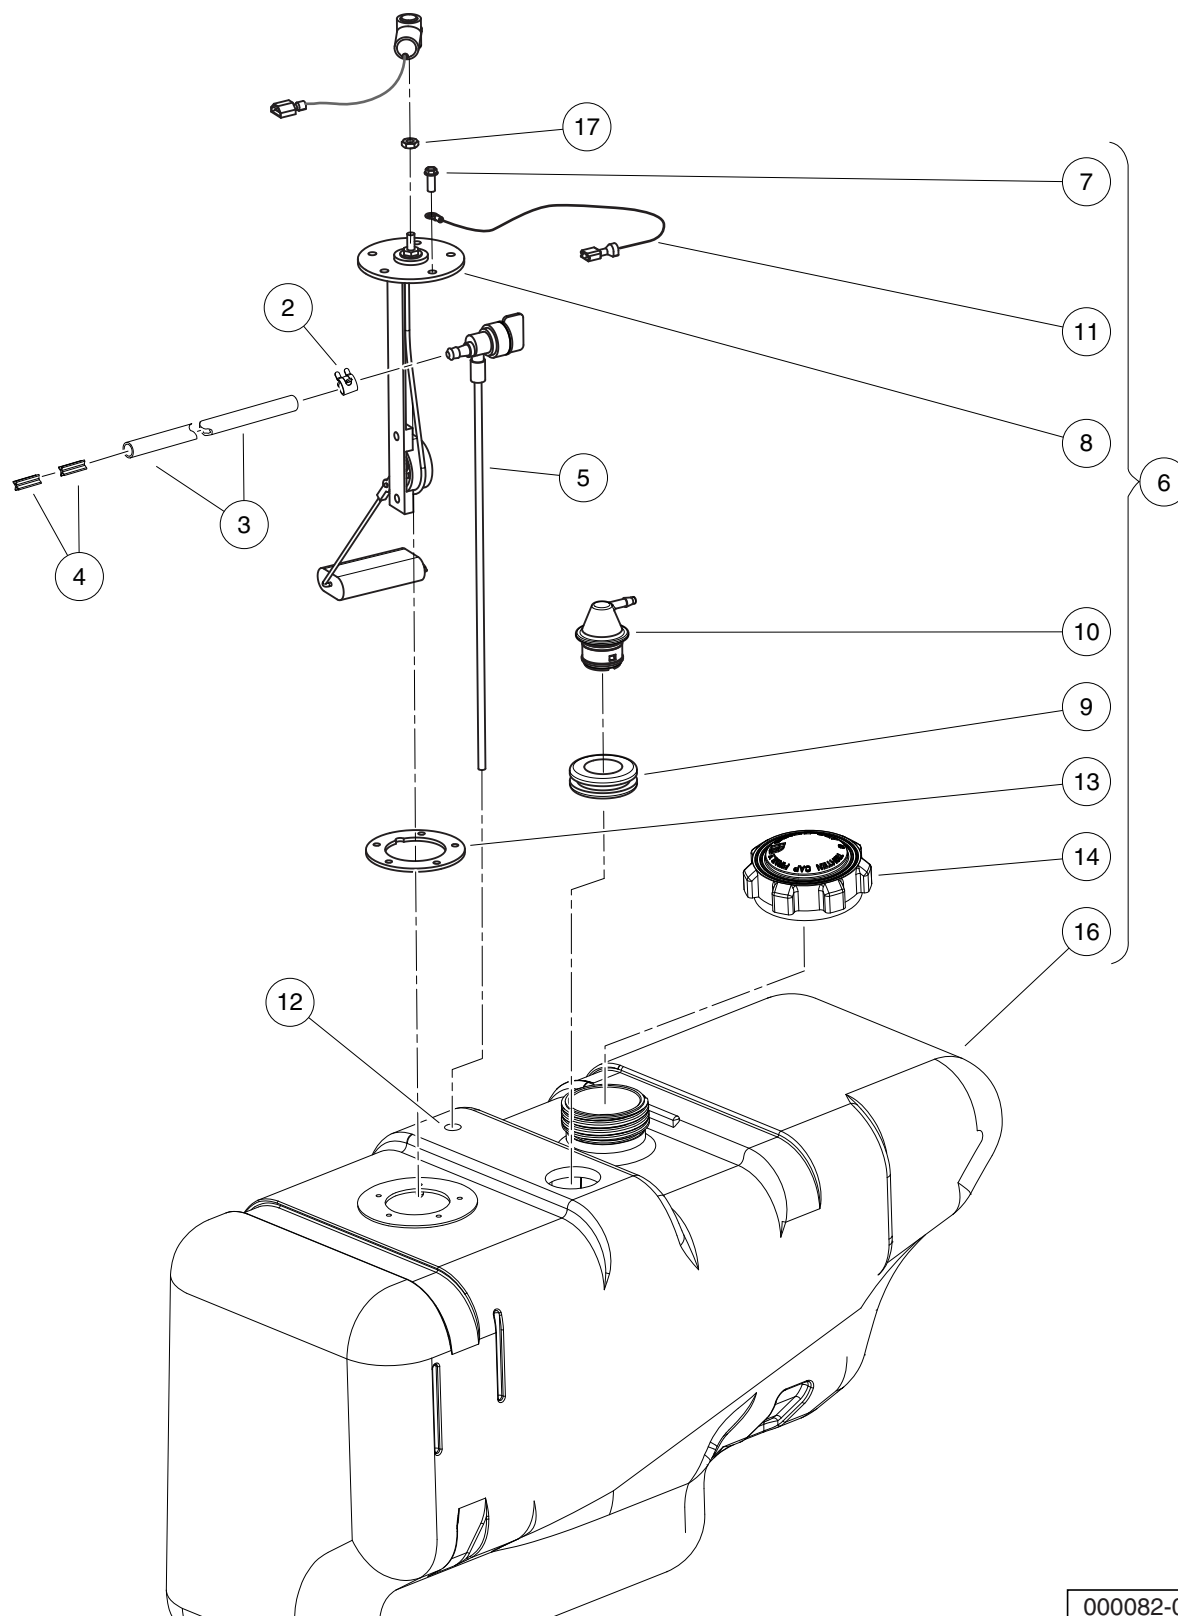

000082-003

FUEL TANK WITH FUEL LEVEL SENDING UNIT


ITEM	PART NO.	DESCRIPTION	QTY	10	G
		1 2 3 4			
1	1016004	Tank Kit w/Sending Unit (includes items 2 through 6)	1		
2	<u>1013746</u>	Clamp, 0.301 ID Hose	2		
3	<u>1015137</u>	Fuel Line (available by the foot)	1		
4	<u>101824401</u>	Vent Barb	2		
5	101896901	Fuel Pickup w/Shut-Off Valve	1		
6	<u>103651901</u>	Asm, Tank, Ds Utl W/su† Nano (includes items 7 through 16)	1		
7	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	5		
8	<u>1013462</u>	Sending Unit, Fuel Level *	1		
9	<u>1015139</u>	Insulation Grommet	1		
10	<u>1015143</u>	Vent, Fuel Tank	1		
11	1015921	Wire Assembly #16 Black	1		
12	<u>102406701</u>	Bushing, Line, Return	1		
13	<u>102522001</u>	Gasket, Rubber	1		
14	<u>103372101</u>	Cap, Fuel Tank, Gas, Ratchet	1		
15	<u>103372302</u>	Fuel Pickup w/Shut-Off Valve, 288mm	1		
16	103776901	Tank, Fuel, Top, W/su Nano	1		
17	<u>8797</u>	Nut, #10-32 Brass Hex	1		
		* Note: Must replace fuel sending unit gasket when servicing this component.			

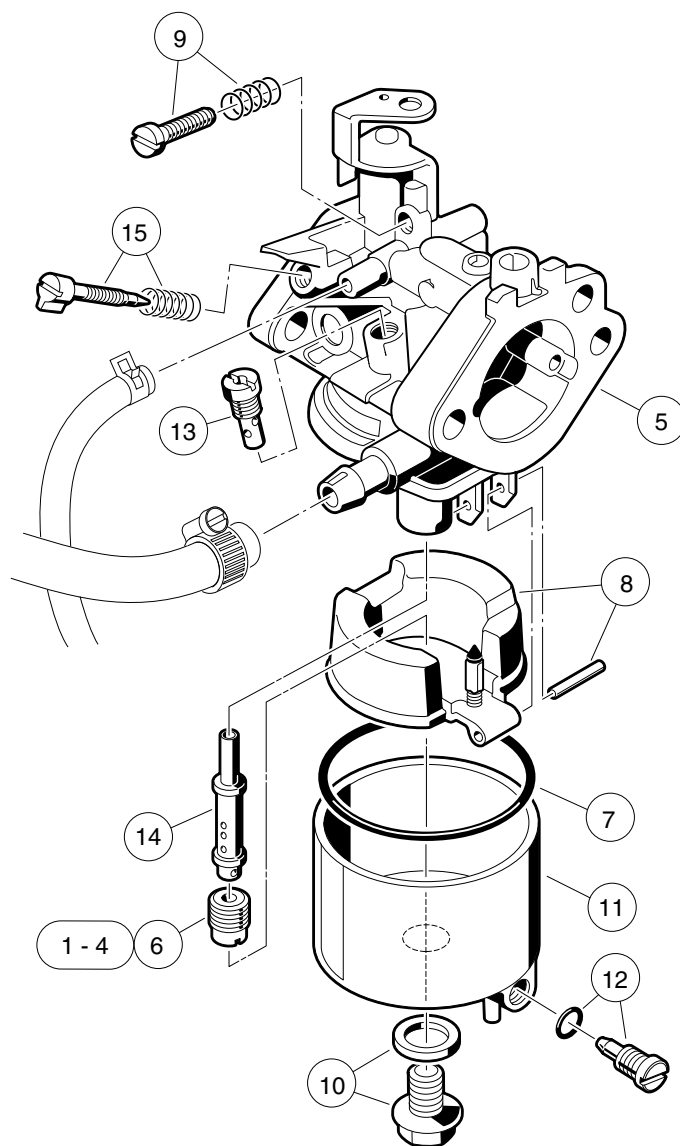 

000211-001

CARBURETOR ASSEMBLY – FE290


ITEM	PART NO.	DESCRIPTION	QTY	10
		1 2 3 4		G
1	<u>101642572</u>	Jet, Altitude, # 72	1	
2	<u>101642575</u>	Jet, Altitude, # 75	1	
3	<u>101642578</u>	Jet, Altitude, # 78	1	
4	<u>101642580</u>	Jet, Altitude, # 80	1	
5	<u>101905601</u>	Carburetor Assembly, FE290D (includes items 6 through 15)	1	
6	<u>101642582</u>	Jet, Altitude, # 82	1	
7	<u>1016437</u>	Gasket, Carburetor Bowl OHV	1	
8	<u>1016486</u>	Float Assembly	1	
9	<u>1016501</u>	Screw Assembly	1	
10	<u>1016585</u>	Bolt	1	
11	<u>1017461</u>	Chamber Assembly, Float (includes item 12)	1	
12	<u>1016499</u>	Screw Assembly	1	
13	<u>101973101</u>	Jet, #40 Pilot	1	
14	<u>101973201</u>	Nozzle, Main	1	
15	N/A	Assembly, Pilot Air Screw	1	
Note: <u>101642582</u> for 0 - 3,000 feet; <u>101642580</u> for 3,000 - 5,000 feet; <u>101642578</u> for 5,000 - 8,000 feet; <u>101642575</u> for 8,000 - 10,000 feet; <u>101642572</u> for 10,000 feet and higher.				

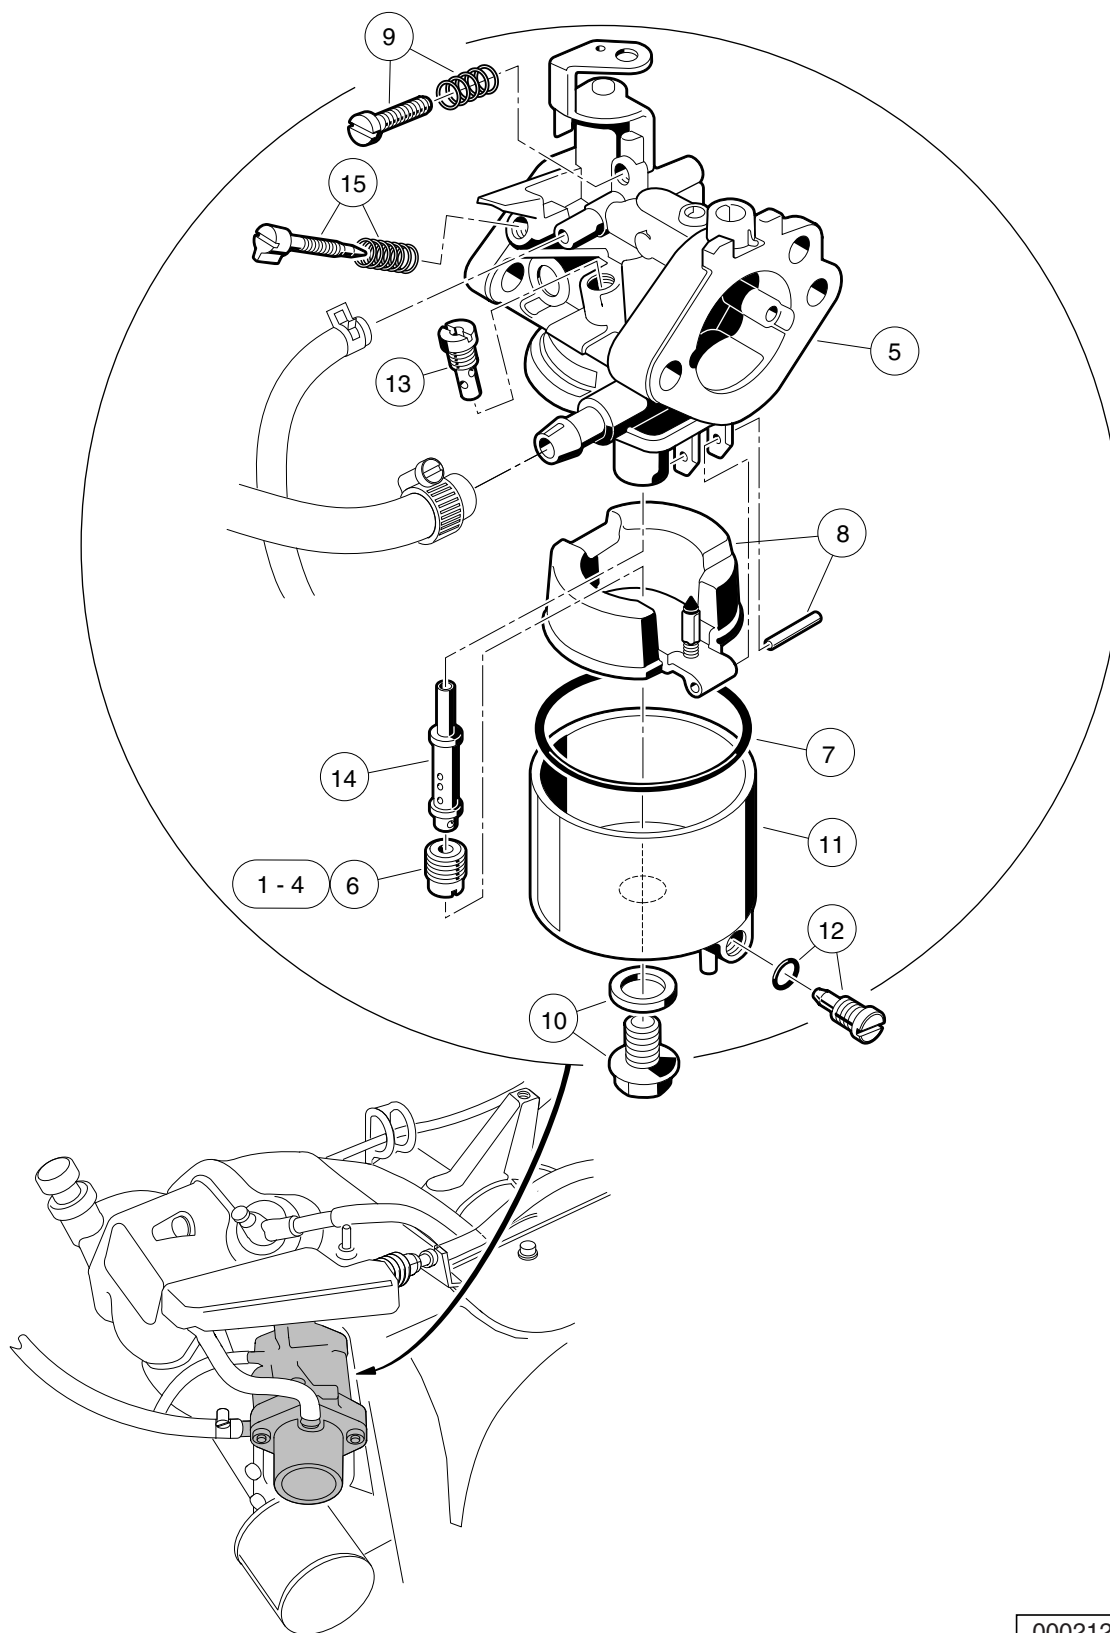 

000212-001

CARBURETOR ASSEMBLY – FE350

ITEM	PART NO.	DESCRIPTION	QTY	10	G
		1 2 3 4			
1	<u>101642575</u>	Jet, Altitude, # 75	1		
2	<u>101642578</u>	Jet, Altitude, # 78	1		
3	<u>101642580</u>	Jet, Altitude, # 80	1		
4	<u>101642582</u>	Jet, Altitude, # 82	1		
5	<u>101905901</u>	Carburetor, FE350D (includes items 6 through 15)	1		
6	<u>101642585</u>	Jet, Altitude, # 85	1		
7	<u>1016437</u>	Gasket, Carburetor Bowl OHV	1		
8	<u>1016486</u>	Float Assembly	1		
9	<u>1016501</u>	Screw Assembly	1		
10	<u>1016585</u>	Bolt	1		
11	<u>1017461</u>	Chamber Assembly, Float (includes item 12)	1		
12	<u>1016499</u>	Screw Assembly	1		
13	<u>101973101</u>	Jet, #40 Pilot	1		
14	<u>101973301</u>	Nozzle, Main	1		
15	N/A	Assembly, Pilot Air Screw	1		
Note: <u>101642585</u> for 0 - 3,000 feet; <u>101642582</u> for 3,000 - 5,000 feet; <u>101642580</u> for 5,000 - 8,000 feet; <u>101642578</u> for 8,000 - 10,000 feet; <u>101642575</u> for 10,000 feet and higher.					

 


CARBURETOR INSTALLATION – FE290

ITEM	PART NO.	DESCRIPTION	QTY	10	G
		1 2 3 4			
1	<u>1011697</u>	Washer, 5/16 Flat	1		
2	<u>1013746</u>	Clamp, 0.301 ID Hose	1		
3	<u>1015137</u>	Fuel Line (available by the foot)	1		
4	<u>1016103</u>	Screw, Pan Hd Tx, Taptite 6-32	2		
5	<u>1016438</u>	Gasket, Carb To Intake Manifold	1		
6	<u>1016439</u>	Gasket, Insulator	1		
7	<u>1016440</u>	Gasket, Engine to Insulator	1		
8	<u>1016441</u>	Gasket, Sprg Brkt To Carb OHV	1		
9	<u>1016444</u>	Bracket, Throttle Spring Return	1		
10	<u>1016480</u>	Pipe, Intake Manifold	1		
11	<u>101648102</u>	Insulator, Carburetor	1		
12	<u>101649002</u>	Stud, M6-1.00 Two-Ended	2		
13	<u>1016547</u>	Nut, M6 Flange	2		
14	<u>1016572</u>	Tube, Crankcase Vent	1		
15	<u>1016582</u>	Spring, Throttle Return	1		
16	<u>1017466</u>	Clamp	2		
17	<u>101820201</u>	Shield, Governor	1		
18	<u>101887601</u>	Locknut, M6-1.00 Nylon Insert	1		

CARBURETOR INSTALLATION – FE350


ITEM	PART NO.	DESCRIPTION	QTY	10	G
		1 2 3 4			
1	<u>1013746</u>	Clamp, 0.301 ID Hose	1		
2	<u>1015137</u>	Fuel Line (available by the foot)	1		
3	<u>1016438</u>	Gasket, Carb To Intake Manifold	1		
4	<u>1016440</u>	Gasket, Engine to Insulator	1		
5	<u>1016441</u>	Gasket, Sprg Brkt To Carb OHV	1		
6	<u>1016444</u>	Bracket, Throttle Spring Return	1		
7	1016480	Pipe, Intake Manifold	1		
8	101648102	Insulator, Carburetor	1		
9	<u>101649002</u>	Stud, M6-1.00 Two-Ended	2		
10	1016547	Nut, M6 Flange	2		
11	<u>1016572</u>	Tube, Crankcase Vent	1		
12	<u>1016582</u>	Spring, Throttle Return	1		
13	<u>1017466</u>	Clamp	2		
14	<u>101973401</u>	Gasket, Insulator To Bracket	1		

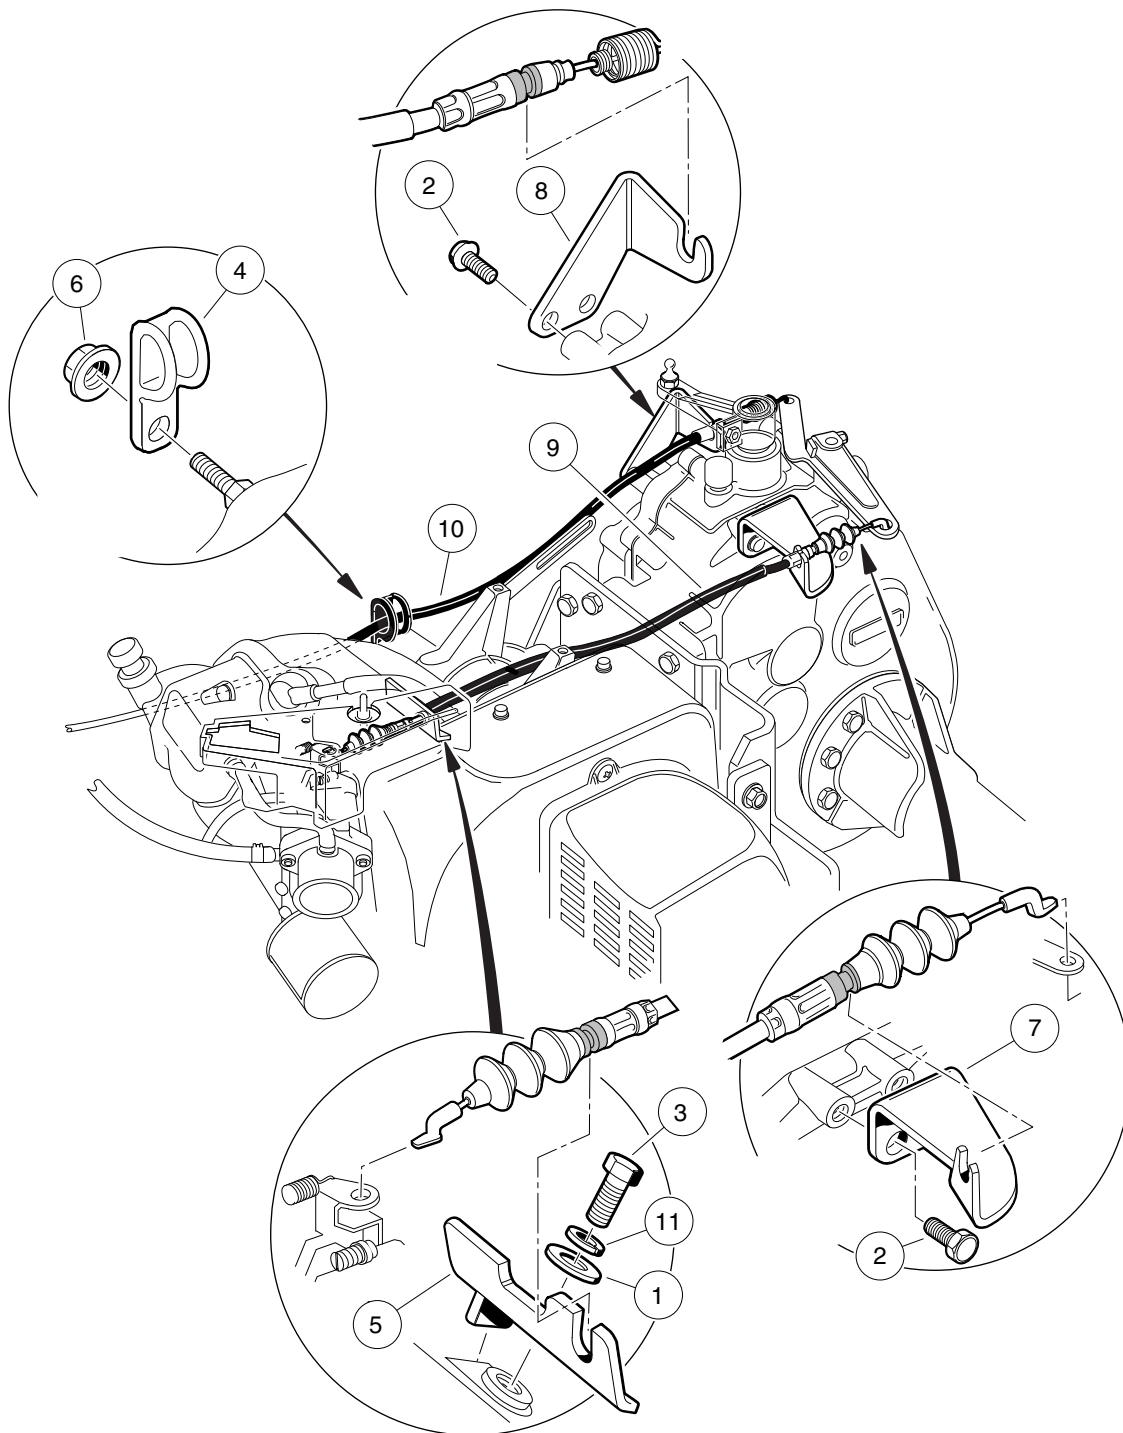 

000215-001

GOVERNOR AND ACCELERATOR CABLES

ITEM	PART NO.	DESCRIPTION	QTY	10	G
		1 2 3 4			
1	<u>1011697</u>	Washer, 5/16 Flat	1		
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4		
3	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	1		
4	<u>1013700</u>	Clamp	2		
5	<u>101584502</u>	Bracket, Governor Cable Snap-In	1		
6	<u>1016546</u>	Nut	2		
7	<u>101832202</u>	Bracket, Rear Governor Cable Snap-In	1		
8	<u>101832302</u>	Bracket, Rear Accelerator Cable Snap-In	1		
9	<u>102336001</u>	Cable, Governor, Snap-In	1		
10	<u>102336101</u>	Cable, Accelerator, Snap-In	1		
11	<u>7174</u>	Lockwasher, 5/16 Split	1		

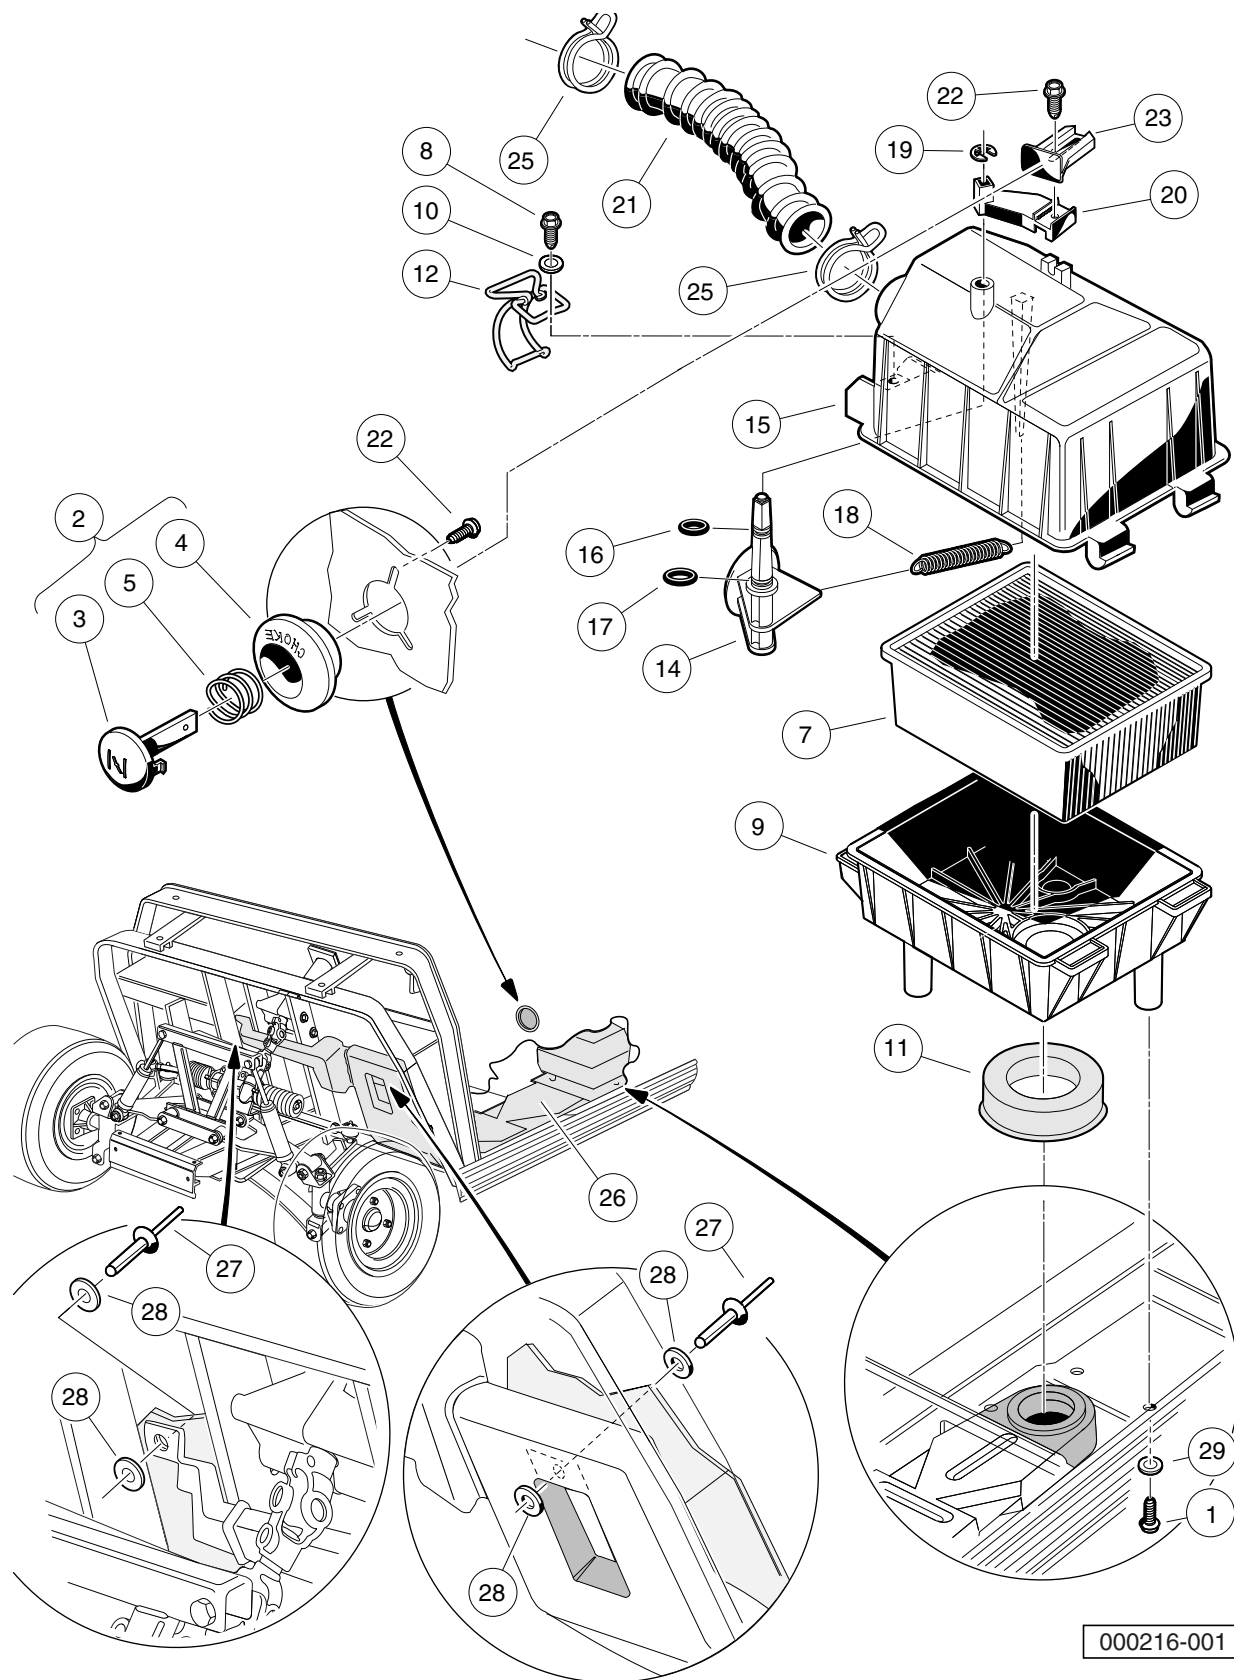 


INTAKE DUCT, CHOKE, AND AIR BOX ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	3
2	<u>101805701</u>	Button Assembly, Choke (includes items 3 through 5)	1
3	<u>101811401</u>	Lever, Choke	1
4	<u>101811501</u>	Guide, Choke Lever	1
5	<u>101856201</u>	Compression Spring	1
6	<u>101821501</u>	Assembly, Air Box (includes items 7 through 13)	1
7	<u>1015426</u>	Filter, Air	1
8	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	2
9	<u>101811901</u>	Bottom, Air Box	1
10	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	2
11	<u>101921501</u>	Seal, Intake	1
12	<u>101925701</u>	Latch, Wireform	2
13	<u>101972801</u>	Top Assy, Air Box (includes items 14 through 20)	1
14	N/A	Valve, Choke	1
15	101811801	Top, Air Box	1
16	N/A	O-Ring, 5/16	1
17	N/A	O-Ring, 3/8	1
18	<u>101812301</u>	Spring, Extension Return	1
19	<u>101813001</u>	Retaining Ring 0.25, Shaft	1
20	<u>101917601</u>	Lever, Choke	1
21	<u>101837101</u>	Hose, Air Intake	1
22	<u>101850301</u>	Screw, #12-16 X 0.50 Washer-Head Hi-Lo	4
23	<u>101917701</u>	Choke Positioner	1
24	<u>101971001</u>	Tape Kit, Air Duct Repair	1
25	<u>101971301</u>	Clamp, 1.58" ID Hose	2
26	<u>103520301</u>	Duct, Air Intake, Ds	1
27	<u>1606</u>	Rivet, 3/16 X .500 Alum Pop	2
28	<u>183</u>	Washer, #10 Type A Flat	4
29	<u>332</u>	Washer, 1/4 Type A Narrow Flat	3
Note: Item 25 is not illustrated.			

10

 
G

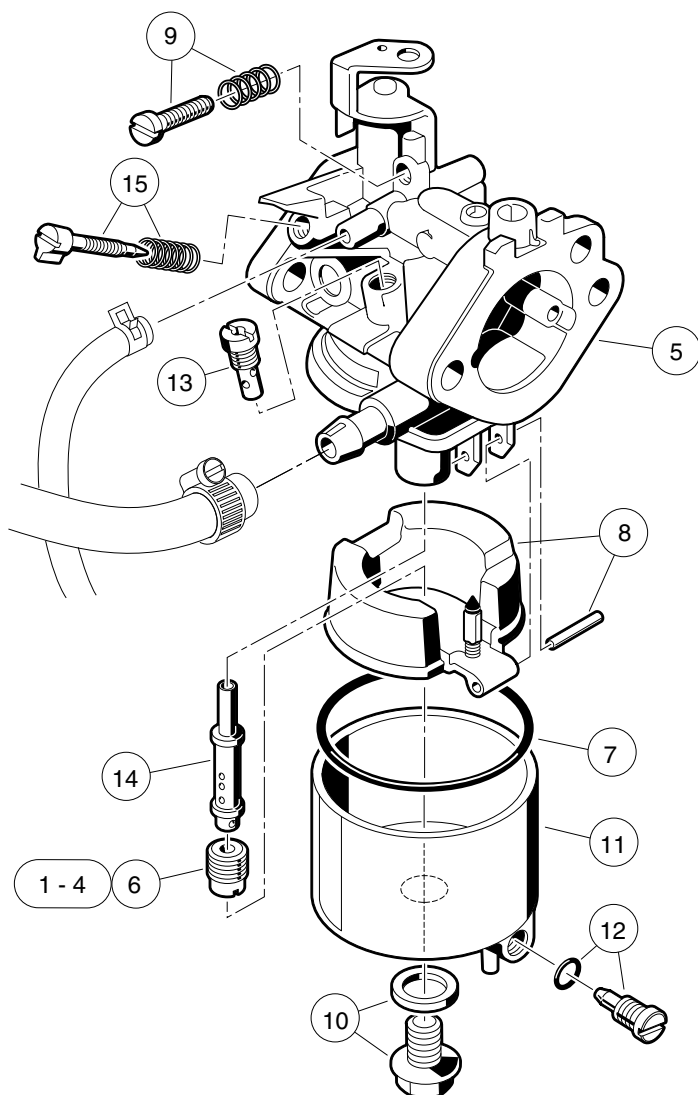

000212-002

CARBURETOR ASSEMBLY – FE350 S26

ITEM	PART NO.	DESCRIPTION	QTY	10
		1 2 3 4		G
1	<u>101642575</u>	Jet, Altitude, # 75	1	
2	<u>101642578</u>	Jet, Altitude, # 78	1	
3	<u>101642580</u>	Jet, Altitude, # 80	1	
4	<u>101642582</u>	Jet, Altitude, # 82	1	
5	<u>103616901</u>	Carburetor Fe350 Precedent	1	
Note: <u>101642582</u> for 0 - 3,200 feet; <u>101642580</u> for 3,200 - 6,500 feet; <u>101642578</u> for 6,500 - 9,800 feet; 101642576 for 9,800 feet and higher.				

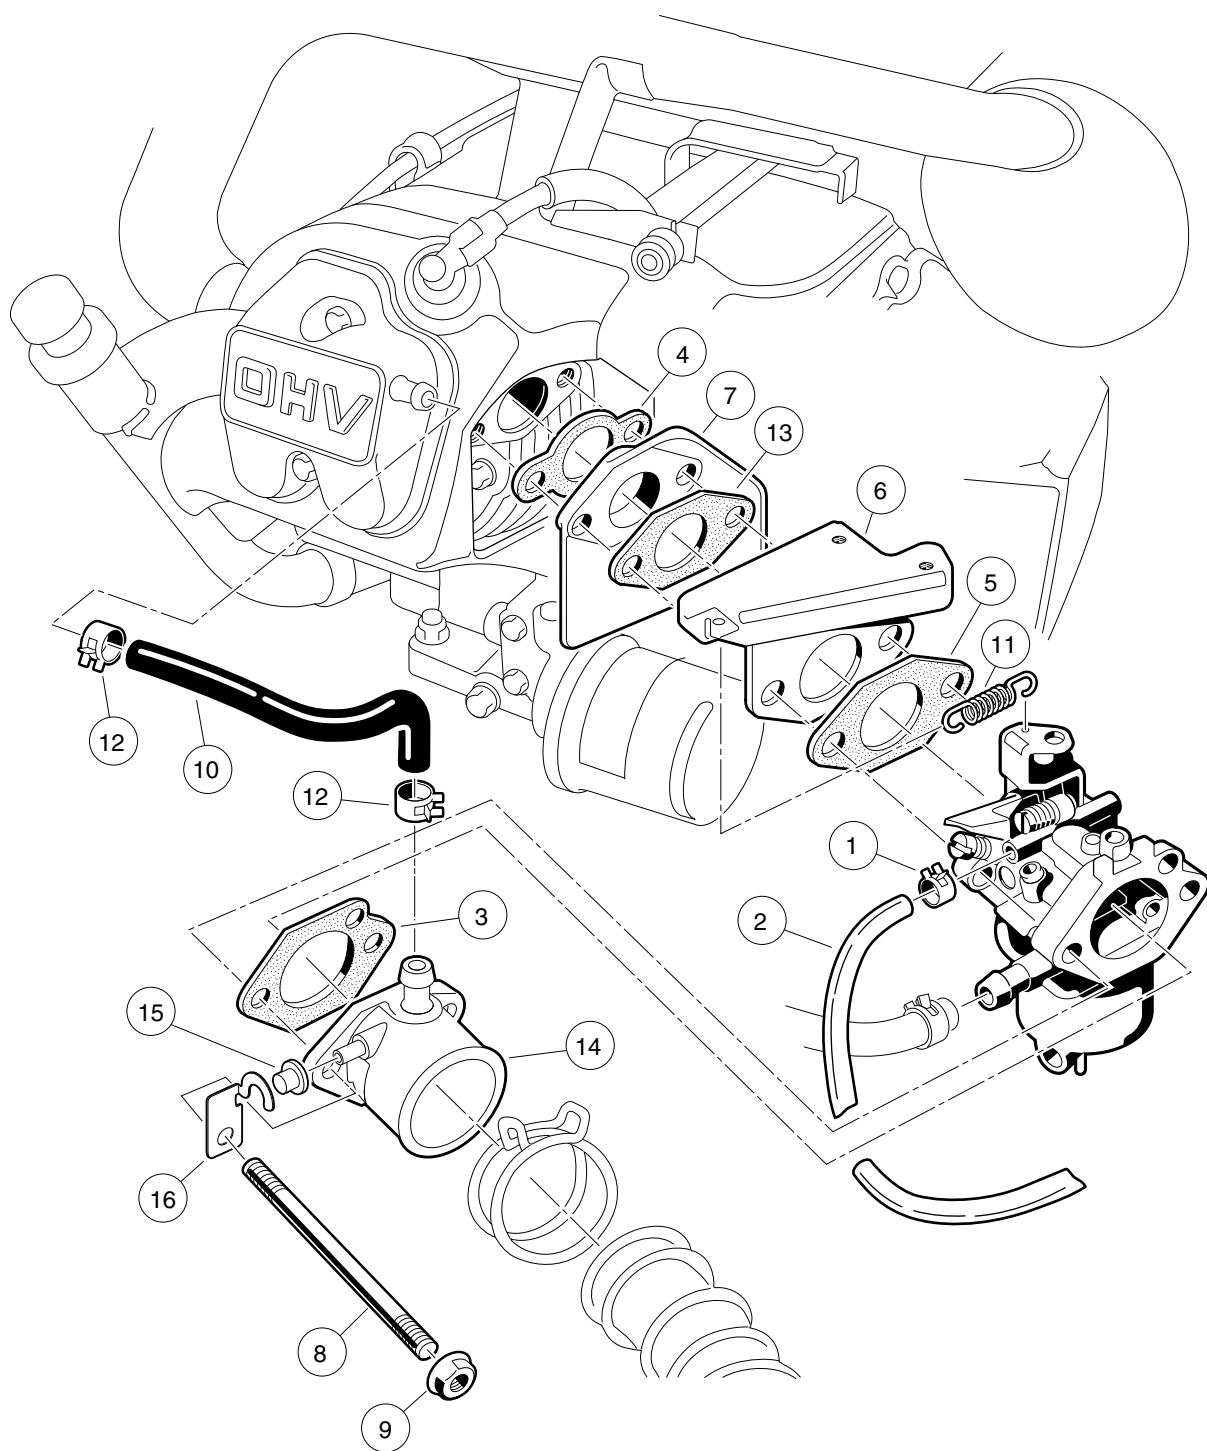 

000214-002

CARBURETOR INSTALLATION – FE350 S27

ITEM	PART NO.	DESCRIPTION	QTY	10	G
		1 2 3 4			
1	<u>1013746</u>	Clamp, 0.301 ID Hose	1		
2	<u>1015137</u>	Fuel Line (available by the foot)	1		
3	<u>1016438</u>	Gasket, Carb To Intake Manifold	1		
4	<u>1016440</u>	Gasket, Engine to Insulator	1		
5	<u>1016441</u>	Gasket, Sprg Brkt To Carb OHV	1		
6	<u>1016444</u>	Bracket, Throttle Spring Return	1		
7	101648102	Insulator, Carburetor	1		
8	<u>101649002</u>	Stud, M6-1.00 Two-Ended	2		
9	1016547	Nut, M6 Flange	2		
10	<u>1016572</u>	Tube, Crankcase Vent	1		
11	<u>1016582</u>	Spring, Throttle Return	1		
12	<u>1017466</u>	Clamp	2		
13	<u>101973401</u>	Gasket, Insulator To Bracket	1		
14	103507101	Carburetor Adapter w/ Tap	1		
15	103507201	Plug, Intake Manifold, Carb	1		
16	103507301	Bracket, Intake Manifold, Carb	1		

 
10

G

EXHAUST SYSTEM

11

G

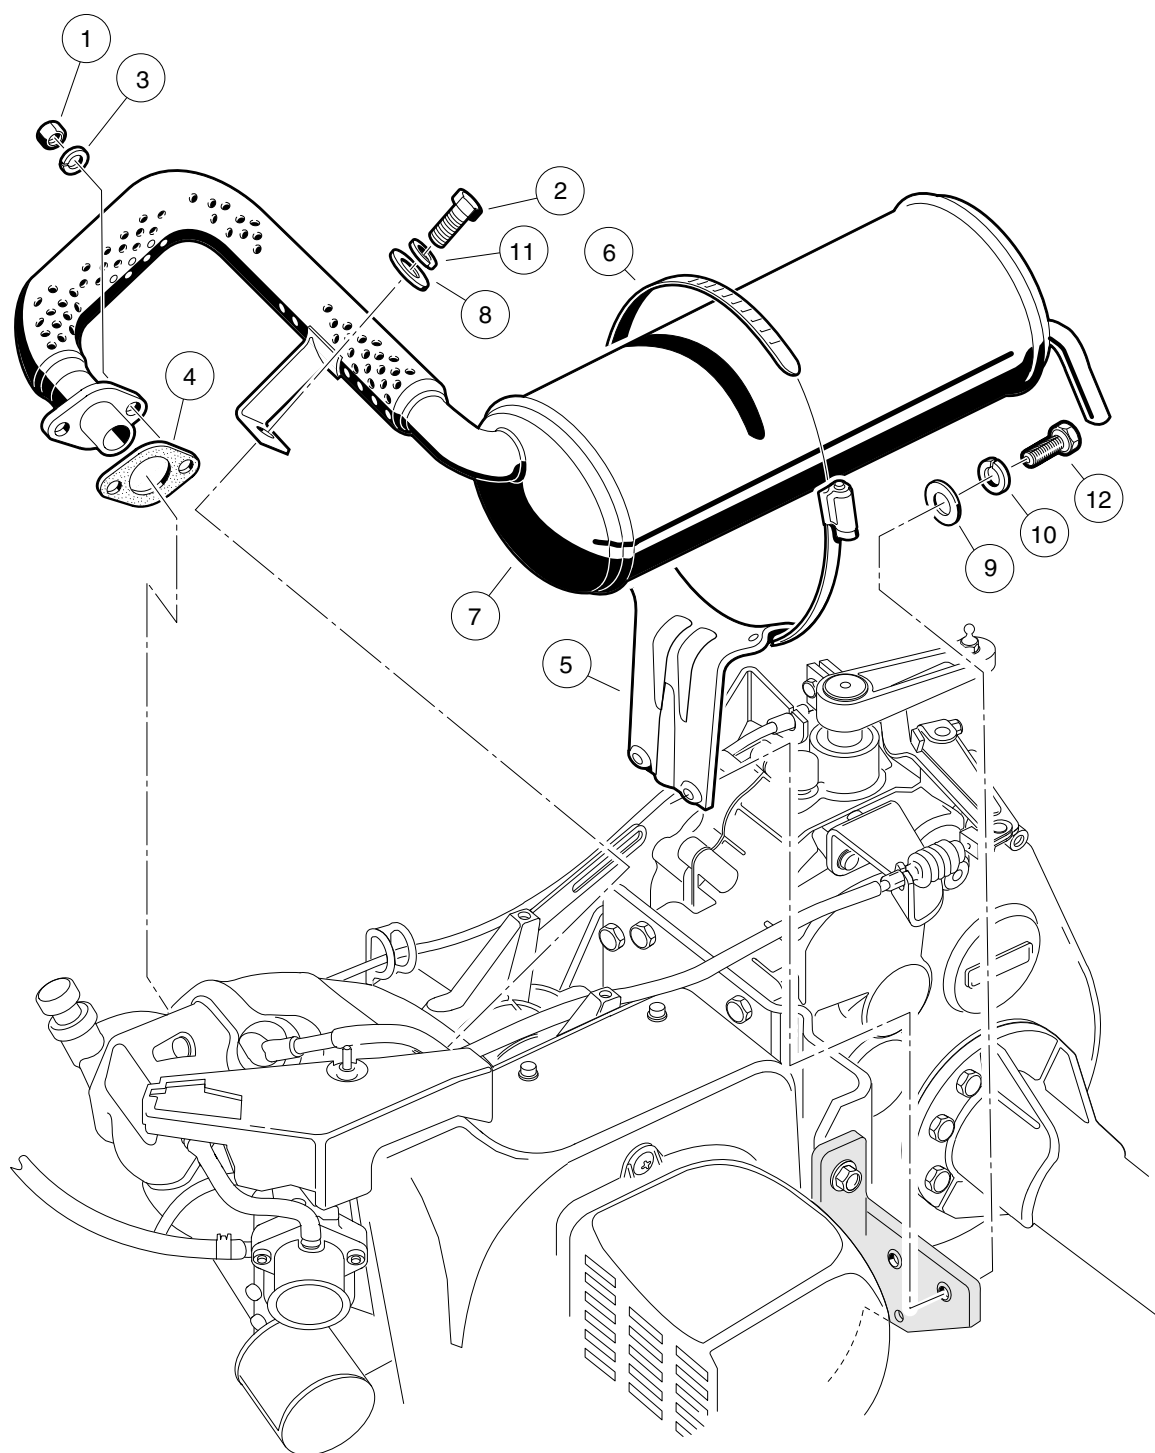


000208-001

EXHAUST SYSTEM – FE290 ENGINE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012528</u>	Nut, M8-1.25 Hex	2
2	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	1
3	<u>1013734</u>	Lockwasher, 8mm Split	2
4	<u>1015330</u>	Gasket, Exhaust	1
5	<u>1015814</u>	Bracket, Muffler Mounting	1
6	<u>1017689</u>	Clamp, 5" Muffler Hose	1
7	<u>101859301</u>	Exhaust System, FE290	1
8	<u>1241</u>	Washer, 5/16 Type A Flat	1
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
10	<u>451</u>	Lockwasher, 1/4 Split	2
11	<u>7174</u>	Lockwasher, 5/16 Split	1
12	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2

 11
G

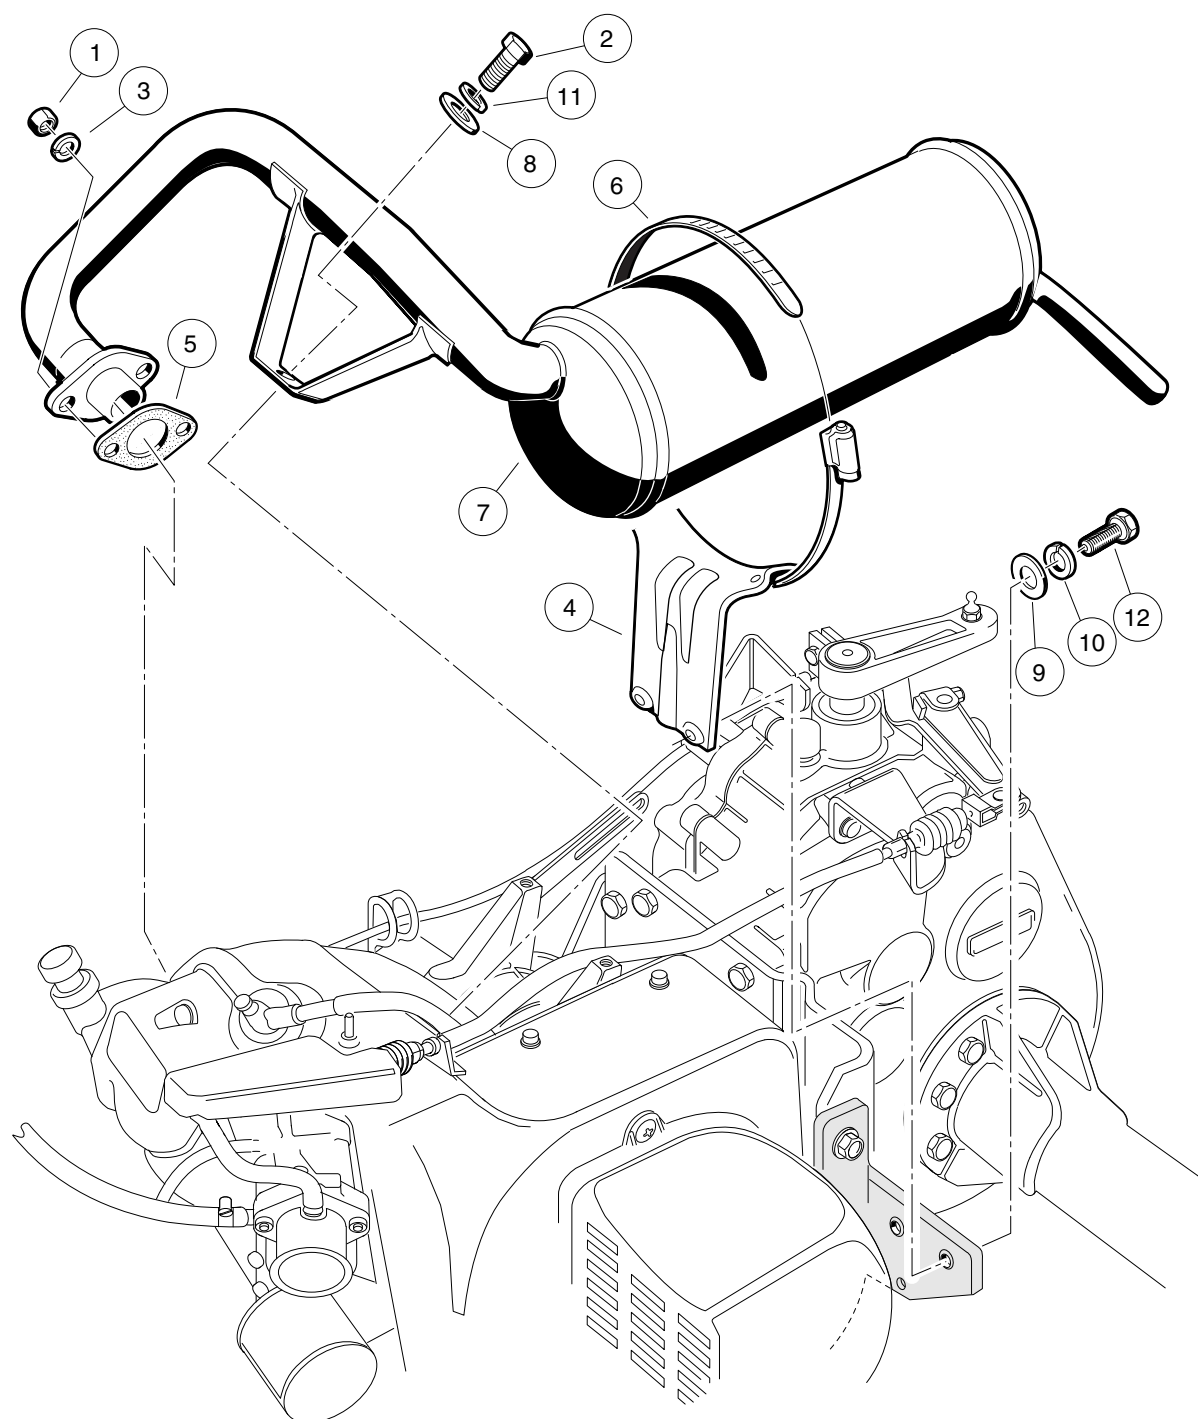

000209-001

EXHAUST SYSTEM – FE350 ENGINE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012528</u>	Nut, M8-1.25 Hex	2
2	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	1
3	<u>1013734</u>	Lockwasher, 8mm Split	2
4	<u>1015814</u>	Bracket, Muffler Mounting	1
5	<u>1016904</u>	Gasket, Exhaust	1
6	<u>1017689</u>	Clamp, 5" Muffler Hose	1
7	<u>101859401</u>	Exhaust System, FE350	1
8	<u>1241</u>	Washer, 5/16 Type A Flat	1
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
10	<u>451</u>	Lockwasher, 1/4 Split	2
11	<u>7174</u>	Lockwasher, 5/16 Split	1
12	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2

11
G

 
11

G

TORQUE CONVERTER

12

G

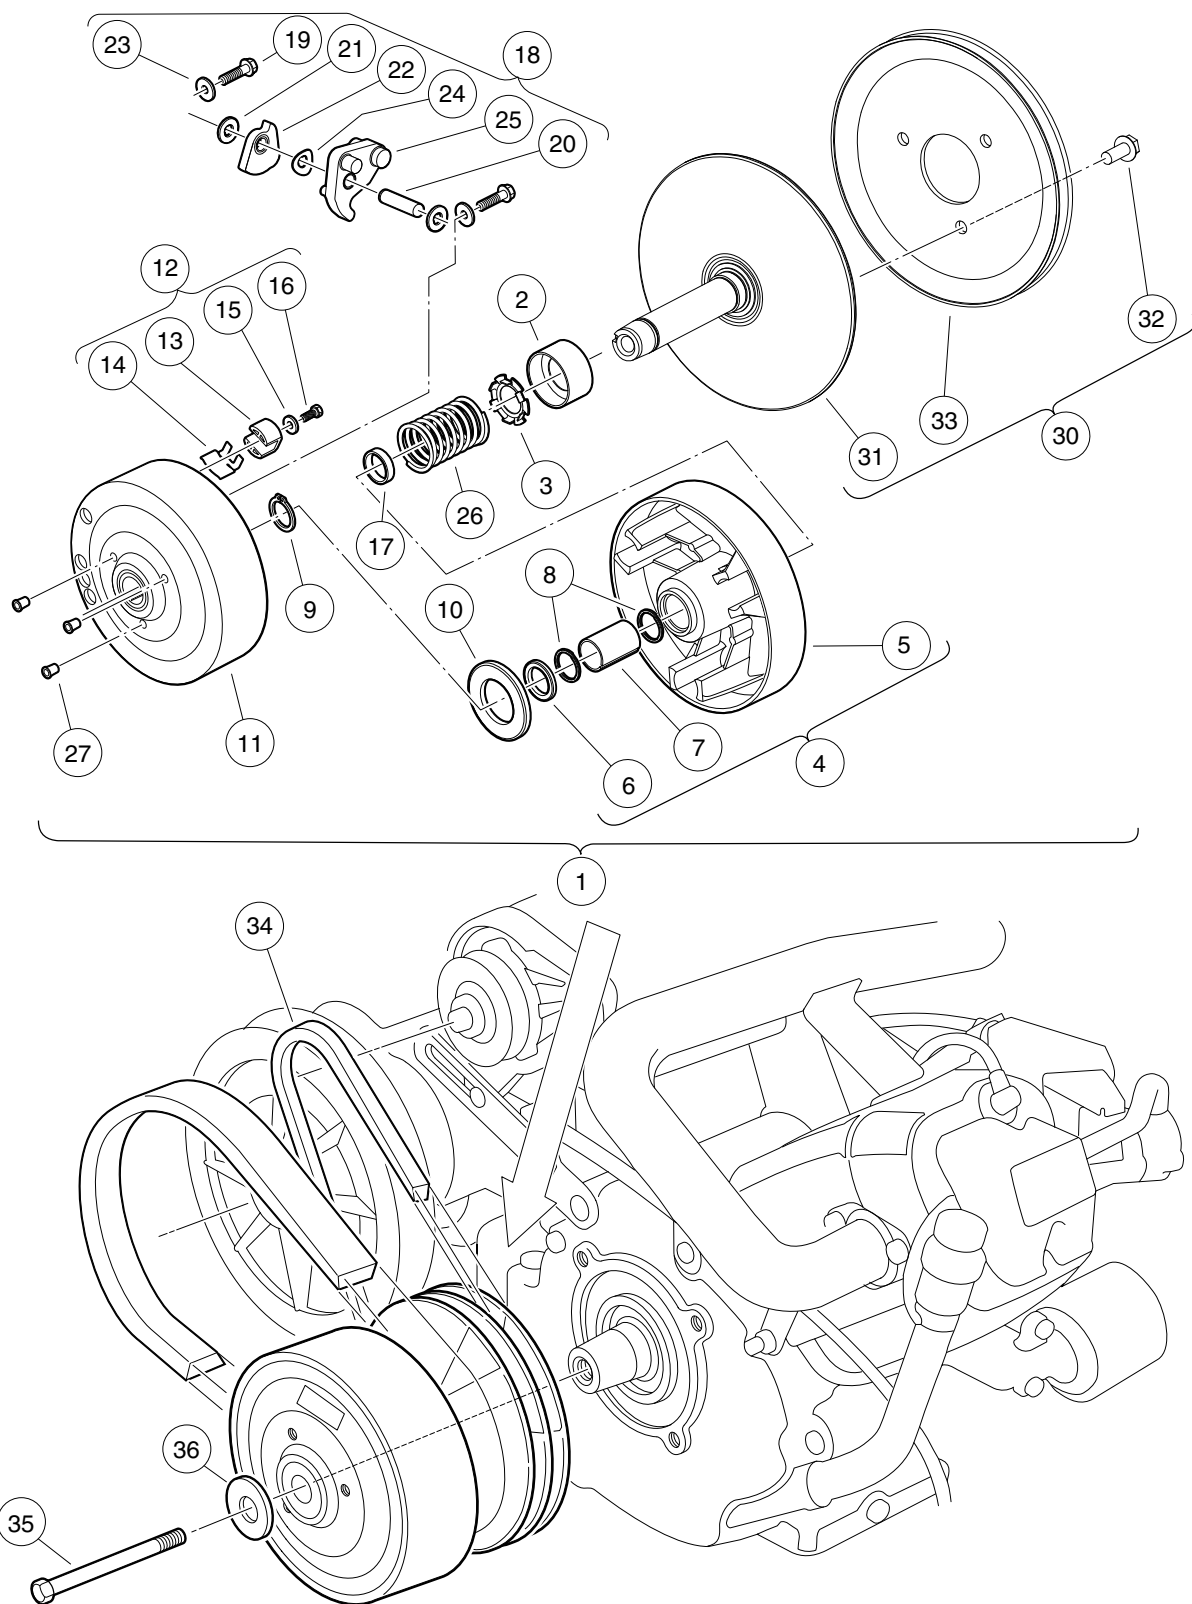


000217-003

DRIVE CLUTCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101833906</u>	Drive Clutch Assy. FE 350/272 (includes items 2 through 28)	1
2	<u>1014049</u>	Bearing, Idler	1
3	<u>1014050</u>	Retainer, Spring	1
4	<u>1014052</u>	Movable-Face Assembly (includes items 5 through 7)	1
5	N/A	Drive Clutch Movable Face	1
6	<u>1014055</u>	Retainer	1
7	N/A	Bushing, Split, Drive Clutch	1
8	<u>1014056</u>	Ring, Spiral Backup	2
9	<u>1014057</u>	Ring, 0.810" Internal Retaining	1
10	<u>1014058</u>	Thrust Washer	1
11	<u>1014059</u>	Drive Hub Assy, Drive Clutch	1
12	<u>1014453</u>	Kit, Drive Clutch Button (includes items 13 through 16)	1
13	<u>1014062</u>	Driver, Drive Clutch	3
14	<u>1014287</u>	Spring, Drive Button	3
15	<u>183</u>	Washer, #10 Type A Flat	3
16	<u>8450</u>	Screw, #10-24 X 0.50 Hex-Head	3
17	<u>1016289</u>	Spacer, Fixed Face Shaft	1
18	<u>1016801</u>	Kit, Drive Clutch Weight (includes items 19 through 25)	1
19	<u>1014063</u>	Screw, 1/4-20 X 1.00 Hex Head	6
20	N/A	Pin, 0.3752 X 1.50 Dowel	3
21	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	6
22	N/A	Clutch Weight, Secondary	3
23	N/A	Washer	6
24	<u>1016201</u>	Washer, Wave	3
25	N/A	Weight, Primary	3
26	<u>1016901</u>	Spring, Drive Clutch	1
27	N/A	Cap Plug	3
28	<u>101929802</u>	Kit, Fxd Face Dr Asm Fe290/350 (includes items 29 and 30)	1
29	N/A	Desiccant Bag (Not Shown)	1
30	<u>101929801</u>	Assembly, Fixed-Face Drive (includes items 31 through 33)	1
31	N/A	Fixed Face Assembly, Drive Clutch	1
32	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	3
33	N/A	Pulley, Clutch	1
34	<u>101916701</u>	V-Belt	1
35	<u>103345701</u>	Screw 3/8-24x5.5 Hex Loc Ptch	1
36	<u>808</u>	Washer, 3/8 Type B Flat	1
		Note: Item 29 not shown.	

12

 
G

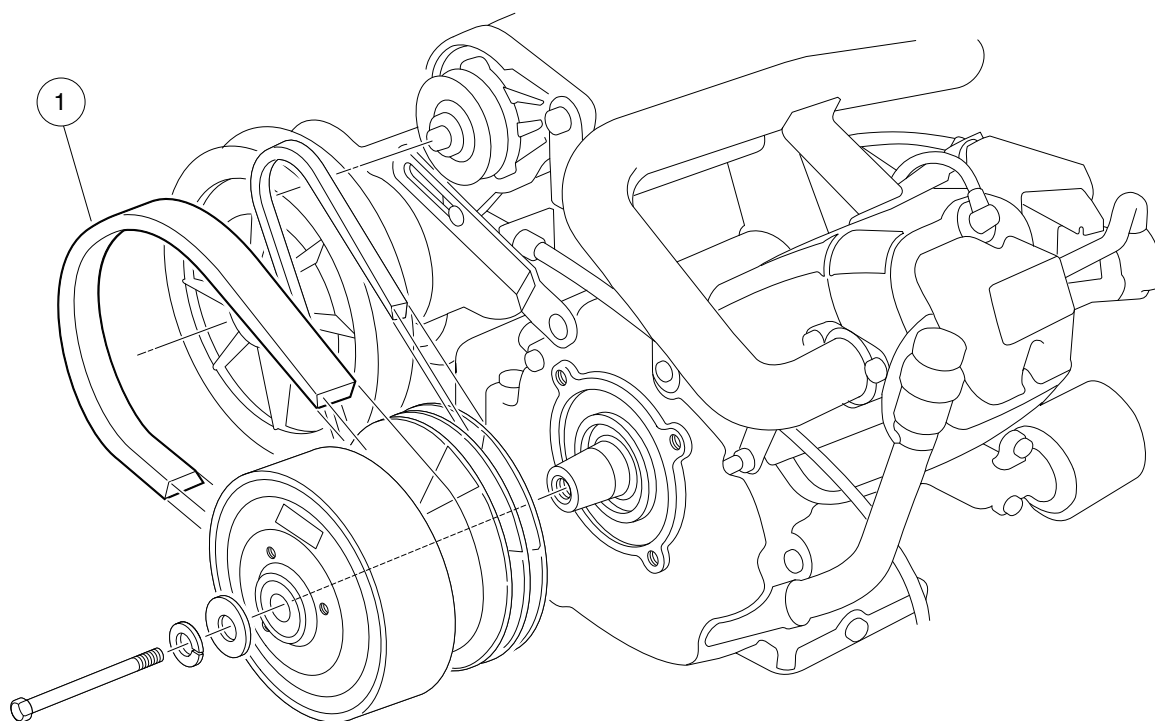

000218-001

DRIVE BELT – FE290

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>1016203</u>	1 2 3 4 Belt, Drive	1

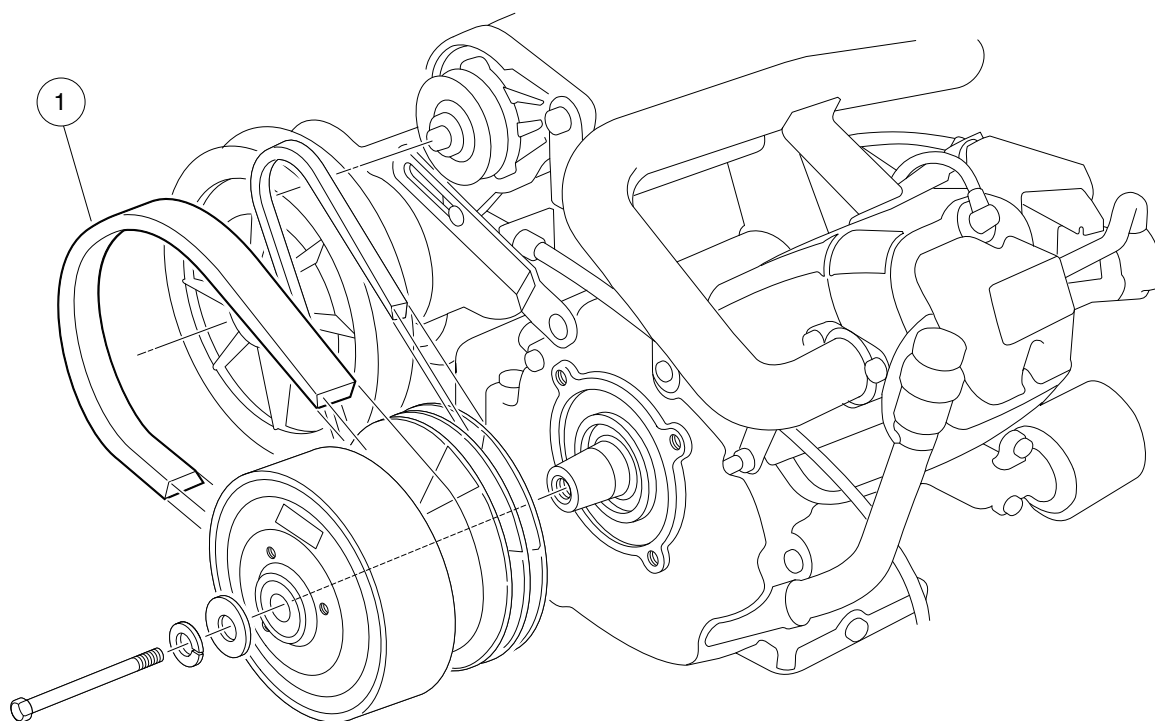 


000218-001

DRIVE BELT – FE350

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>1017188</u>	1 2 3 4 Belt, Drive (FE350)	1

12

 G

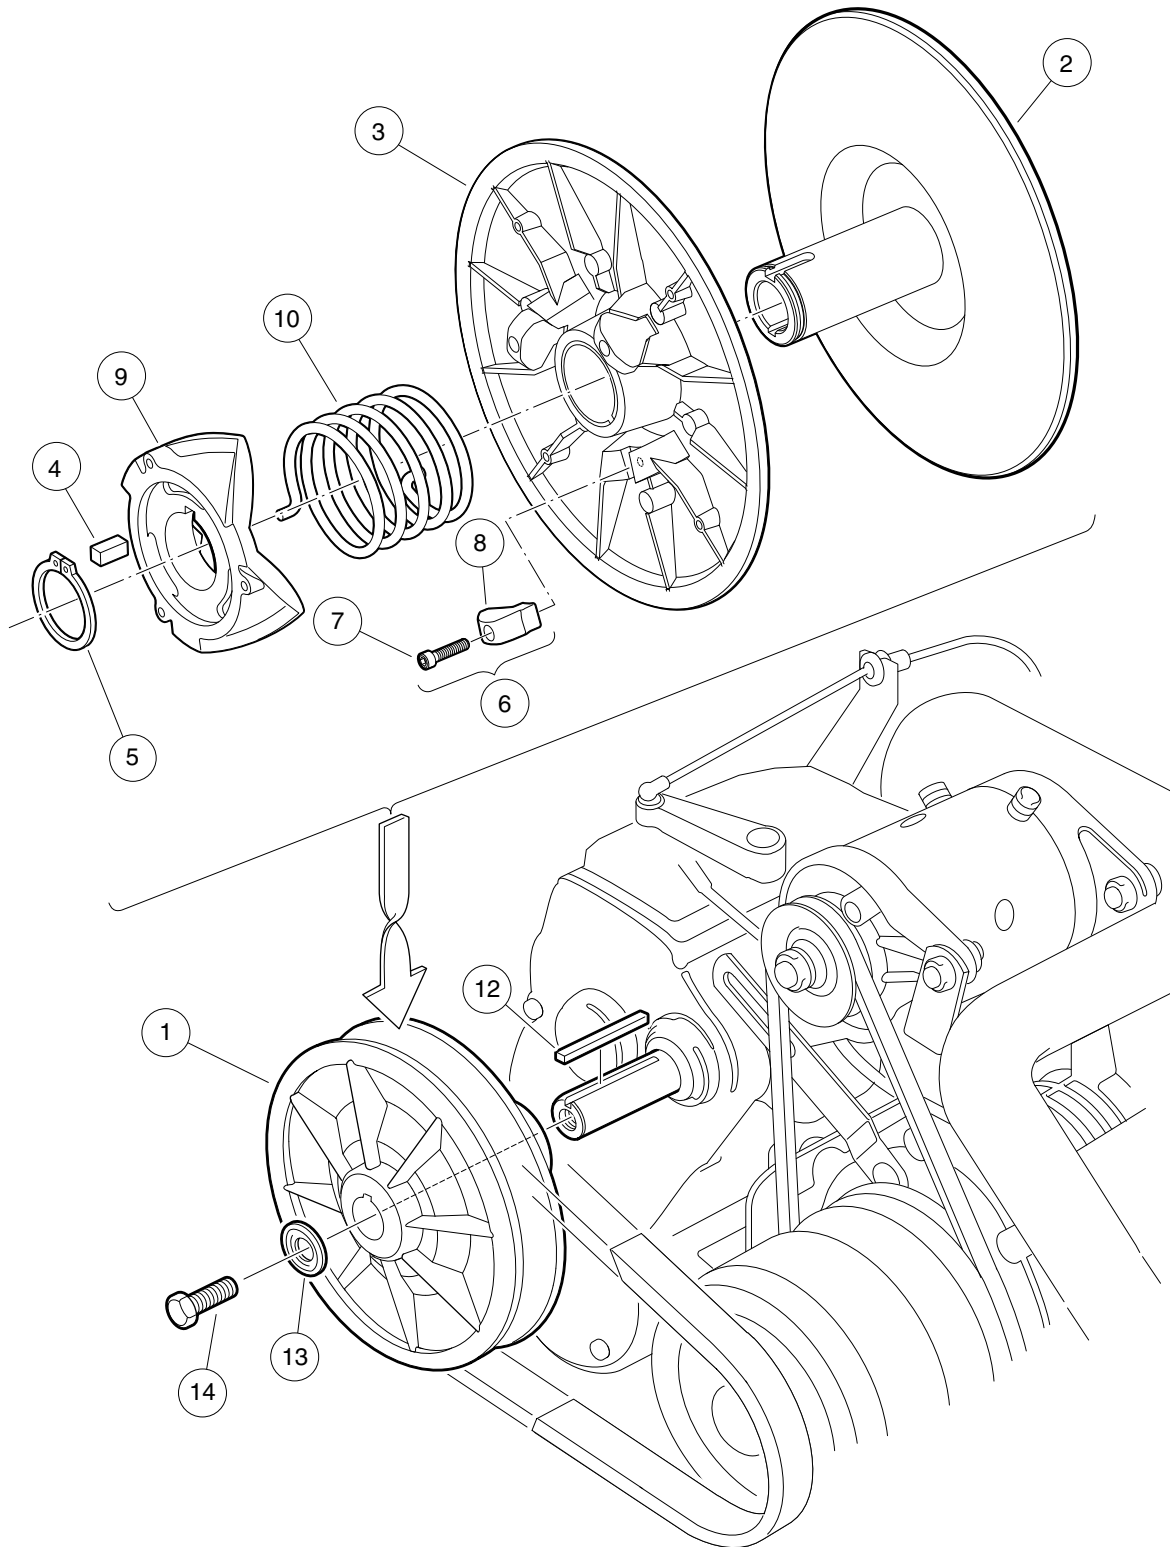

000219-001

DRIVEN CLUTCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101834001</u>	Assembly, Driven Clutch (includes items 2 through 10)	1
2	<u>1014070</u>	Fixed Face Assy, Driven Clutch	1
3	<u>1014072</u>	Movable-Face Assembly with Bushing	1
4	<u>1014078</u>	Key, Driven Clutch	1
5	<u>1014080</u>	Ring, Retaining	1
6	<u>1014454</u>	Kit, Driven Clutch Button (includes items 7 and 8)	1
7	<u>1012836</u>	Screw, #8-32 X 3/4 Socket-Head Cap	3
8	<u>1014076</u>	Button, Drive	3
9	<u>1017686</u>	Cam, Driven Clutch	1
10	<u>101836201</u>	Spring, Driven Clutch, Reversed	1
11	<u>AM10419</u>	Kit, Clutch Repair (includes items 12 through 14)	1
12	<u>101833401</u>	Key, 3/16 Sq X 1.50"	1
13	<u>102155801</u>	Washer, Driven Clutch	1
14	<u>102242101</u>	Screw, 5/16-18 X 3/4 Hex-Head with Patch	1

12

G

 
12

G

TRANSAXLE AND FNR SHIFTER- GASOLINE VEHICLE

13

G

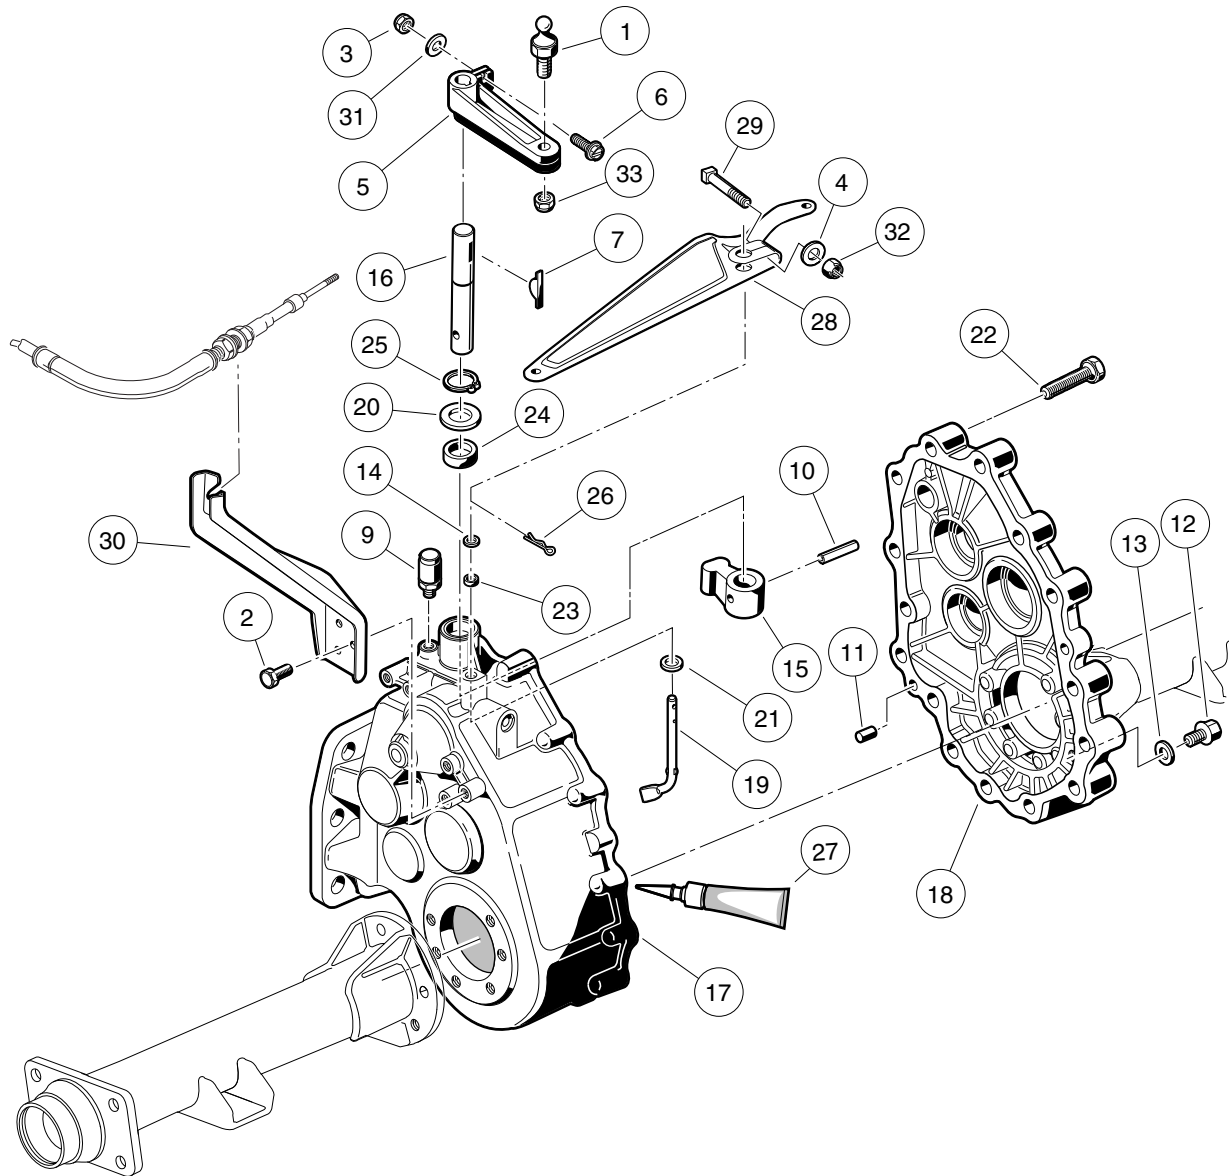


000220-001

TRANSAXLE – GASOLINE VEHICLES, GEAR CASES AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010954</u>	Stud, 1/4-28 X 0.560 Ball	1
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3
3	<u>1013061</u>	Locknut, #10-32 Nylon Insert	1
4	<u>1014007</u>	Washer, 1/4 Flat	1
5	<u>1016341</u>	Lever, Transmission Shift	1
6	<u>1017082</u>	Screw, #10-32 X 0.75, Hex-Head Machine	1
7	<u>1017231</u>	Key, Woodruff	1
8	<u>101833601</u>	Transaxle, 11.77 Ratio (includes items 9 through 27)	1
9	<u>1012711</u>	Breather	1
10	<u>1012752</u>	Roll Pin	1
11	<u>1012896</u>	Pin, Dowel	2
12	<u>1013760</u>	Fill Plug	2
13	<u>1016432</u>	Gasket, Drain Plug	1
14	<u>1016513</u>	Washer, M6 Flat	1
15	<u>101890101</u>	Lever, Change	1
16	<u>101890201</u>	Shaft - Change	1
17	<u>101890501</u>	Gear Case (driver side)	1
18	<u>101890601</u>	Gear Case (passenger side)	1
19	<u>101891301</u>	Arm Pivot	1
20	<u>101892901</u>	Washer	1
21	<u>101893801</u>	Washer	1
22	<u>101926901</u>	Screw, M8-1.25 X 40mm Hex-Head	15
23	<u>101927101</u>	Seal, Oil	1
24	<u>101927201</u>	Seal, Oil	1
25	<u>101927301</u>	Snap Ring	1
26	<u>101928601</u>	Pin, Cotter	1
27	<u>101928701</u>	Liquid Gasket (Transaxle case)	1
28	<u>101834801</u>	Arm, Governor	1
29	<u>101886101</u>	Screw, 1/4-20 X 1.00 Square-Head	1
30	<u>102045901</u>	Bracket, Shifter	1
31	<u>183</u>	Washer, #10 Type A Flat	1
32	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	1
33	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1

 13
G

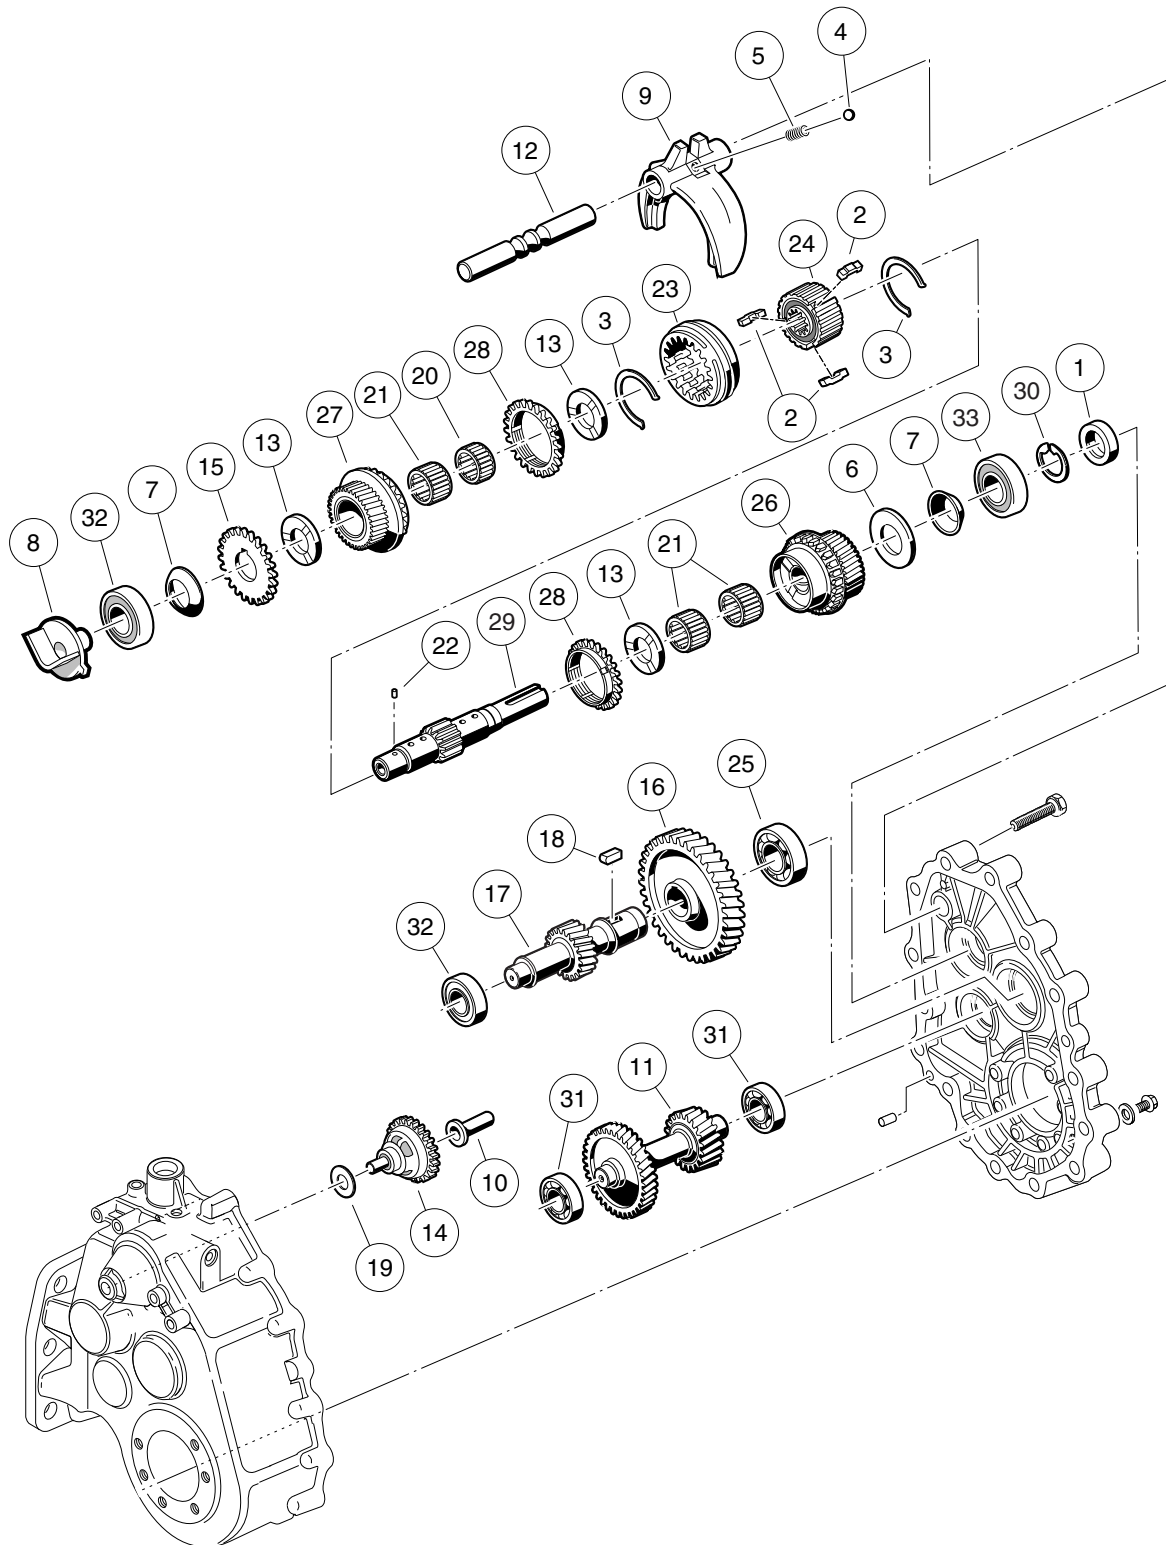


000221-001

TRANSAXLE – GASOLINE VEHICLES, TRANSMISSION AND GEAR REDUCTION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012714</u>	Oil Seal	1
2	<u>1012740</u>	Synchro Insert	3
3	<u>1012741</u>	Synchro Spring	2
4	<u>1012747</u>	Shifter Ball	1
5	<u>1012748</u>	Shifter Spring	1
6	<u>1016337</u>	Washer, Thrust	1
7	<u>1016338</u>	Washer, Spring	2
8	<u>101889401</u>	Guide	1
9	<u>101890001</u>	Fork - Shift	1
10	<u>101891601</u>	Sleeve, Governor	1
11	<u>101891901</u>	Gear, Cluster	1
12	<u>101892001</u>	Rod, Shift	1
13	<u>101892201</u>	Plate, Thrust	3
14	<u>101892301</u>	Governor Assembly	1
15	<u>101892401</u>	Gear, Spur	1
16	<u>101892501</u>	Gear, Helical (61 Tooth)	1
17	<u>101892601</u>	Gear, Helical (17 Tooth)	1
18	<u>101893201</u>	Key Sunk	1
19	<u>101893901</u>	Washer	1
20	<u>101927501</u>	Needle Bearing	1
21	<u>101927601</u>	Needle Bearing	3
22	<u>101927701</u>	Pin, .116" Dia X 0.264 Dowel	1
23	<u>101927901</u>	Sleeve, Synchro	1
24	<u>101928001</u>	Hub, Synchro Clutch	1
25	<u>101928101</u>	Bearing, Ball	1
26	<u>101980801</u>	Gear Assembly, 16-Degree Synchro (25 Tooth)	1
27	<u>101980901</u>	Gear Assembly, 16-Degree Rear Synchro (28 Tooth)	1
28	<u>101981001</u>	Ring, 16-Degree Synchronizer	2
29	<u>102453001</u>	Shaft, Trans, with Circlip	1
30	<u>102453101</u>	Circlip	1
31	<u>7335</u>	Bearing	2
32	<u>AM10080</u>	Bearing, Ball, Sealed	2
33	<u>AM10081</u>	Bearing, Ball, Sealed	1
Note: Items listed on this page are components of the unitized transaxle.			

 13
G

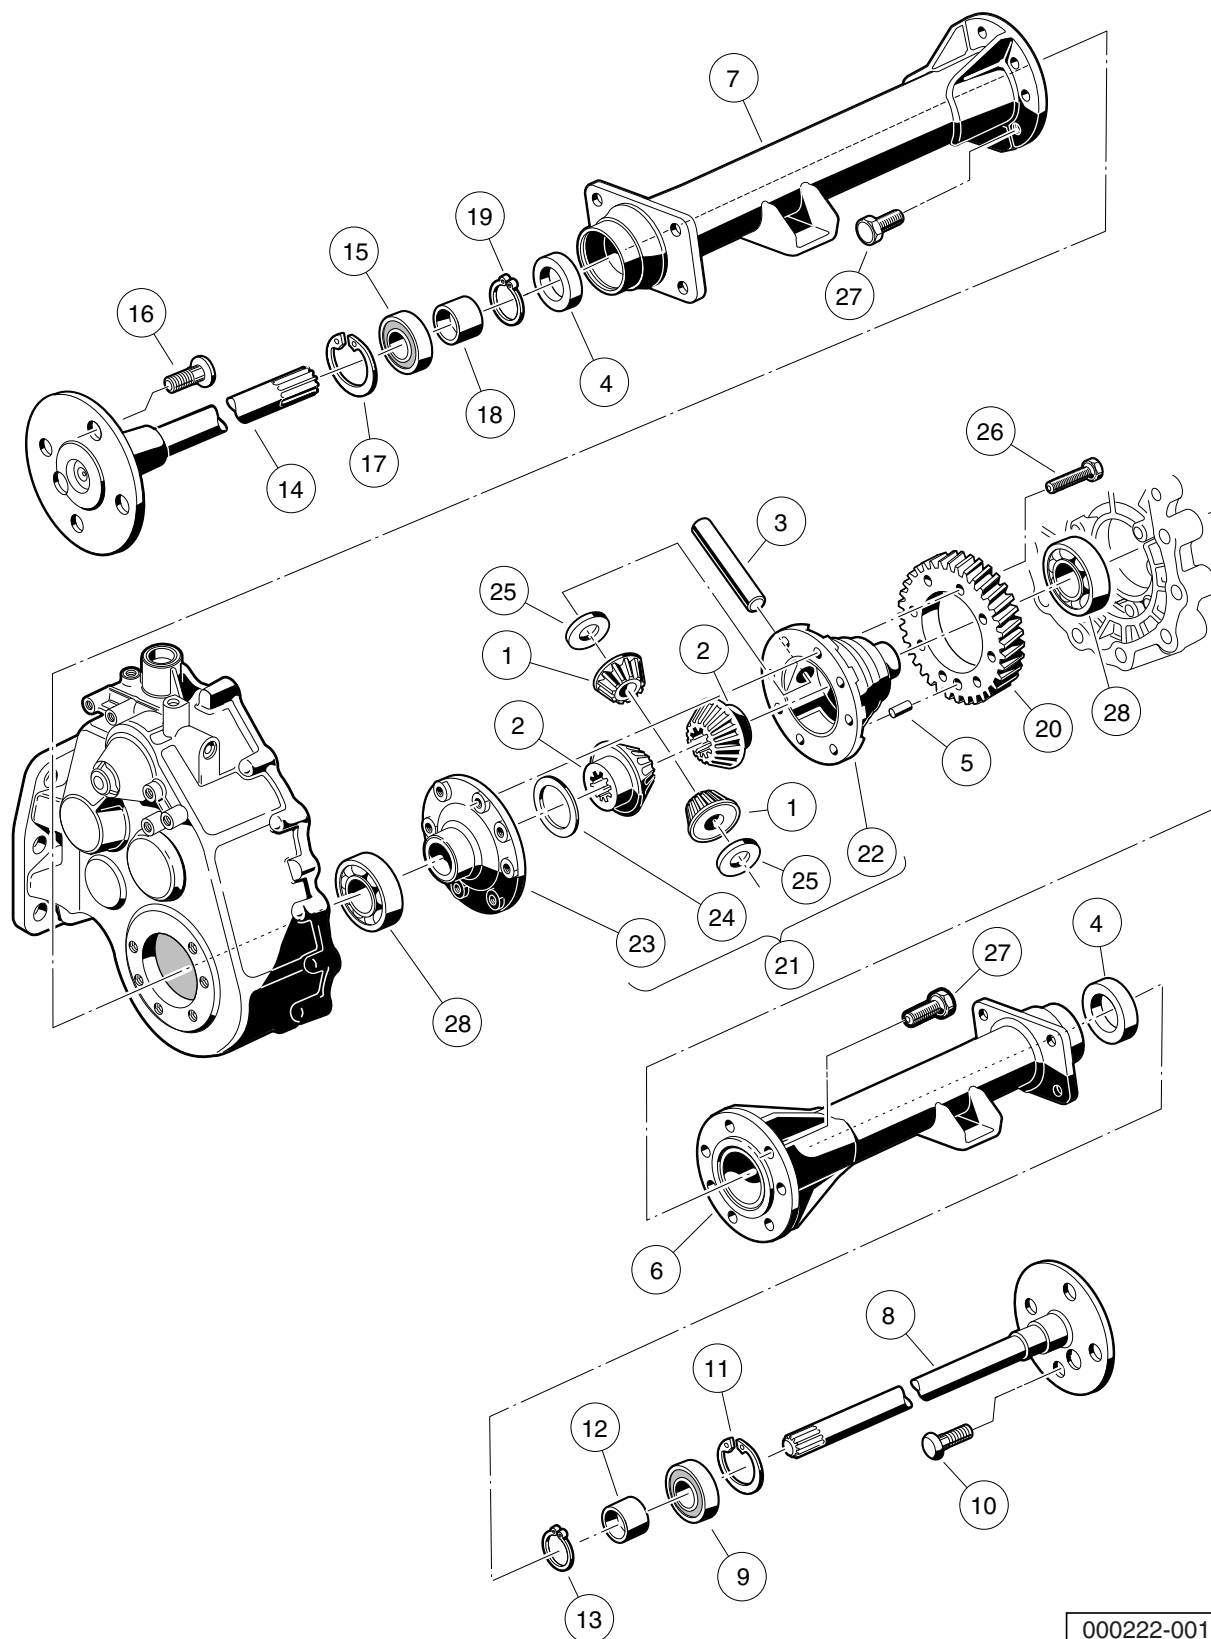


000222-001

TRANSAXLE – GASOLINE VEHICLES, DIFFERENTIAL AND AXLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013770</u>	Differential Idler Gear	2
2	<u>1013771</u>	Gear, Differential	2
3	<u>1013772</u>	Pin, Differential	1
4	<u>1013794</u>	Axle Shaft Oil Seal	2
5	<u>1014193</u>	Dowel Pin	1
6	<u>101890901</u>	Pipe	1
7	<u>101891001</u>	Pipe	1
8	<u>101891401</u>	Axle Assembly, Passenger Side (includes items 9 through 13)	1
9	<u>1011291</u>	Outer Axle, Tube Bearing	1
10	<u>1013787</u>	Lug Stud	4
11	<u>1013792</u>	Circlip Type C	1
12	<u>1014207</u>	Bushing	1
13	<u>1016672</u>	Retaining Ring	1
14	<u>101891501</u>	Axle Assembly, Driver-Side (includes items 15 through 19)	1
15	<u>1011291</u>	Outer Axle, Tube Bearing	1
16	<u>1013787</u>	Lug Stud	4
17	<u>1013792</u>	Circlip Type C	1
18	<u>1014207</u>	Bushing	1
19	<u>1016672</u>	Retaining Ring	1
20	<u>101892701</u>	Gear, Helical	1
21	<u>101910501</u>	Kit, Differential Gear Case (includes items 22 through 25)	1
22	<u>1013768</u>	Differential Gear Case, Left-Hand	1
23	<u>1013769</u>	Differential Gear Case, Right-Hand	1
24	<u>1013773</u>	Plate, Thrust (Differential Gear)	1
25	<u>1013774</u>	Plate, Thrust (Idler Gear)	2
26	<u>101928301</u>	Screw, M8-1.25 X 35mm Hex Head	8
27	<u>102031901</u>	Bolt, M10 X 1.5 X 30mm	14
28	<u>7330</u>	Inner Axle Tube Bearing	2

 13
G

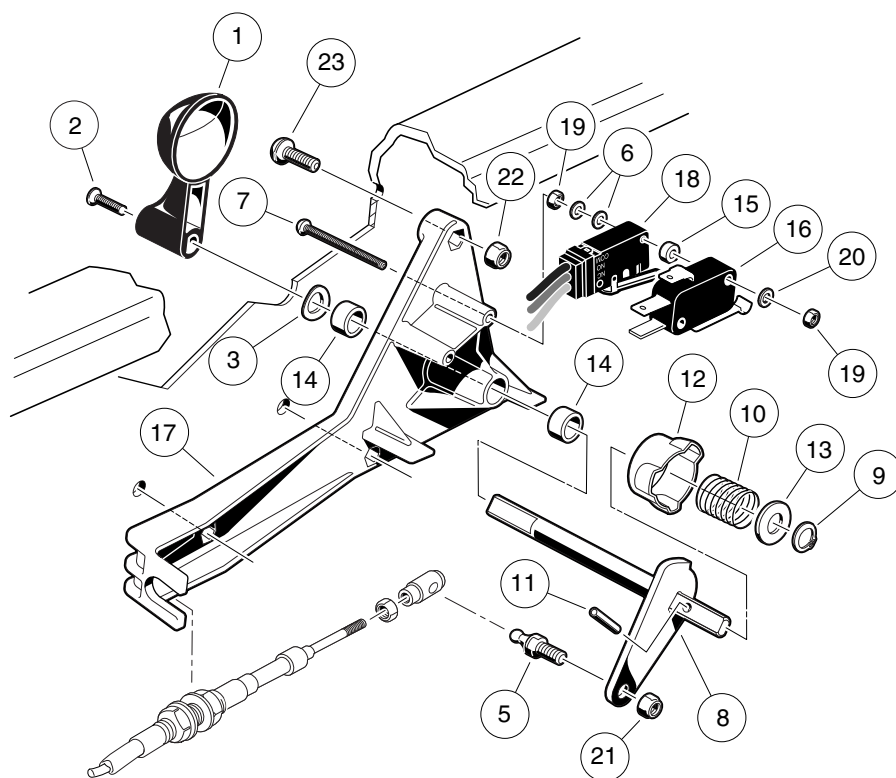


000236-001

FORWARD/REVERSE SHIFTER ASSEMBLY – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012987</u>	Handle, FNR	1
2	<u>1015064</u>	Screw, #8-32 X 0.63 Machine	1
3	<u>1016201</u>	Washer, Wave	1
4	<u>1016947</u>	Assembly, FNR Shifter (includes items 5 through 21)	1
5	<u>1010954</u>	Stud, 1/4-28 X 0.560 Ball	1
6	<u>1012431</u>	Washer, #4 Flat	4
7	<u>1012594</u>	Screw, #4-40 Machine	2
8	<u>1013587</u>	FNR Bell Crank Weldment	1
9	<u>1013589</u>	Ring, 0.338" Internal Retaining	1
10	<u>1013590</u>	Spring, FNR Cam	1
11	<u>1013591</u>	Pin, 1/8 X 1/2 Roll	1
12	<u>1014089</u>	Neutral Lockout Cam Kit (includes item 13)	1
13	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	1
14	<u>1014145</u>	Bushing, Secondary Weight, Split	2
15	<u>1014727</u>	Washer, #4 Nylon Flat	2
16	<u>1014807</u>	Switch, Limit	1
17	<u>1016342</u>	FNR Shifter Base	1
18	<u>101979101</u>	Assembly, Switch, Limit	1
19	<u>8057</u>	Nut, #4-40 Hex Machine	4
20	<u>8058</u>	Lockwasher, #4 Split	2
21	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1
22	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
23	<u>8248</u>	Screw, 1/4-20 X 0.75 Truss-Head Machine	4

 13
G

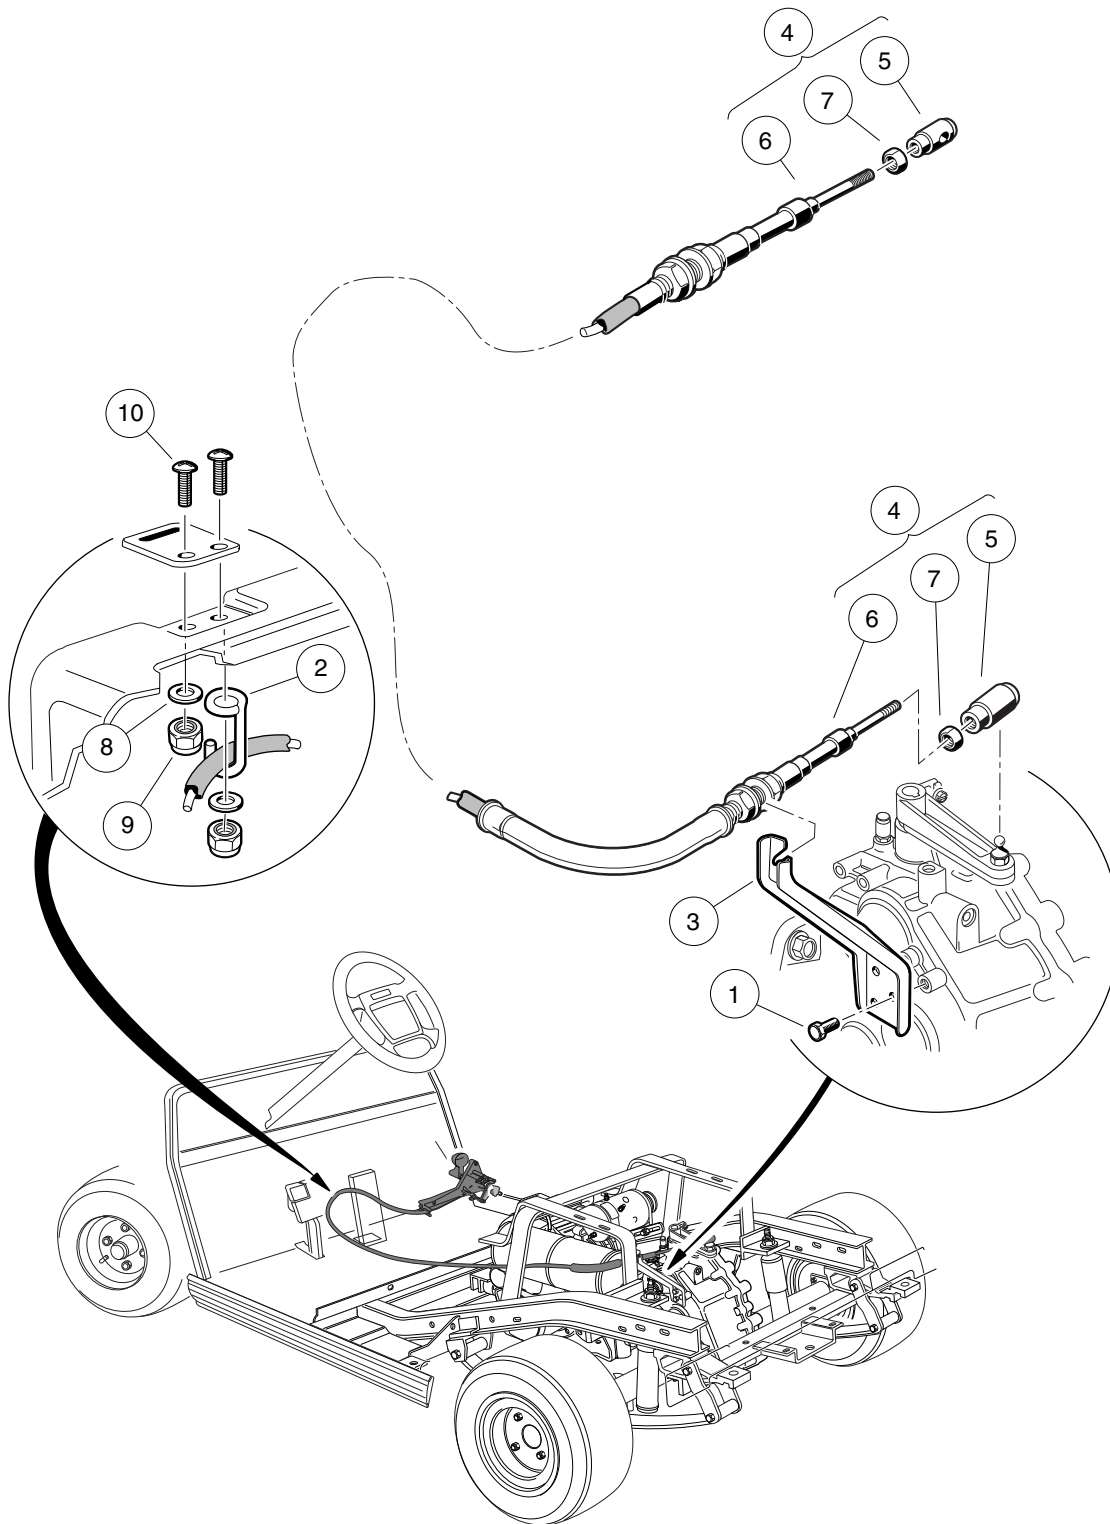


000248-001

FORWARD/REVERSE SHIFTER CABLE – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3
2	<u>101855801</u>	Cable Retainer	1
3	<u>101922601</u>	Bracket, Shifter	1
4	<u>101951501</u>	FNR Shifter Cable (includes items 5 through 7)	1
5	<u>1012333</u>	Joint, #10-32 Ball	2
6	<u>103379501</u>	Cable, Transmission Shifter Ds	1
7	<u>7893</u>	Nut, #10-32 Hex	2
8	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4
9	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
10	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	4

13

 G

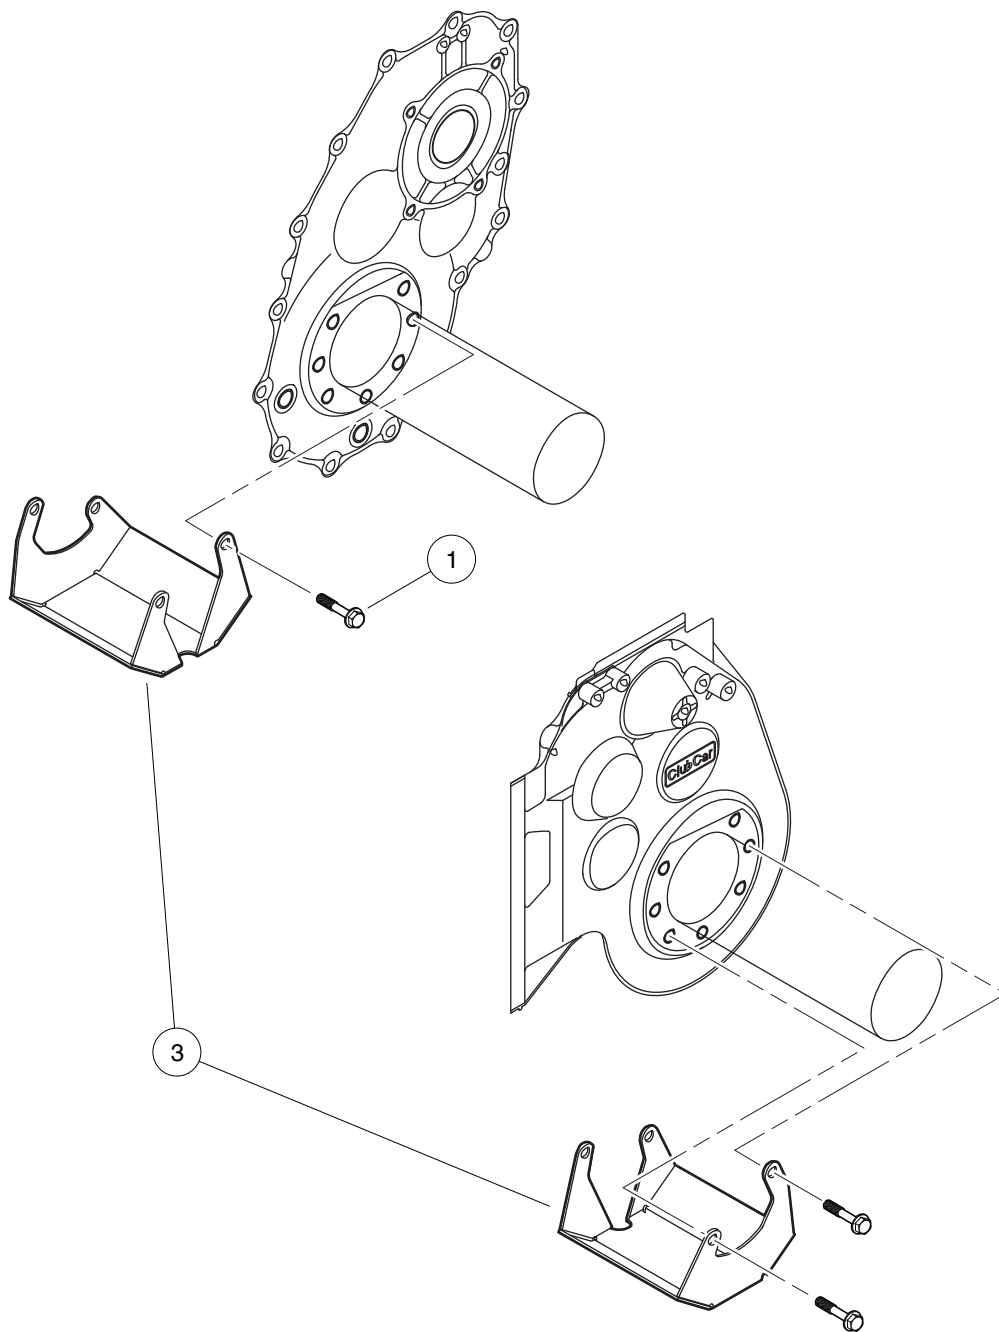

000366-001

DIFFERENTIAL GUARD – XRT810

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101926901</u>	Screw, M8-1.25 X 40mm Hex-Head	4
2	<u>101932902</u>	Diff Guard Unitized Kit (Includes Instructions) (includes item 3)	1
3	N/A	Guard, Unitized Differential	1

13

G

 
13

 
G

ELECTRICAL SYSTEM – ELECTRIC VEHICLES

14

E



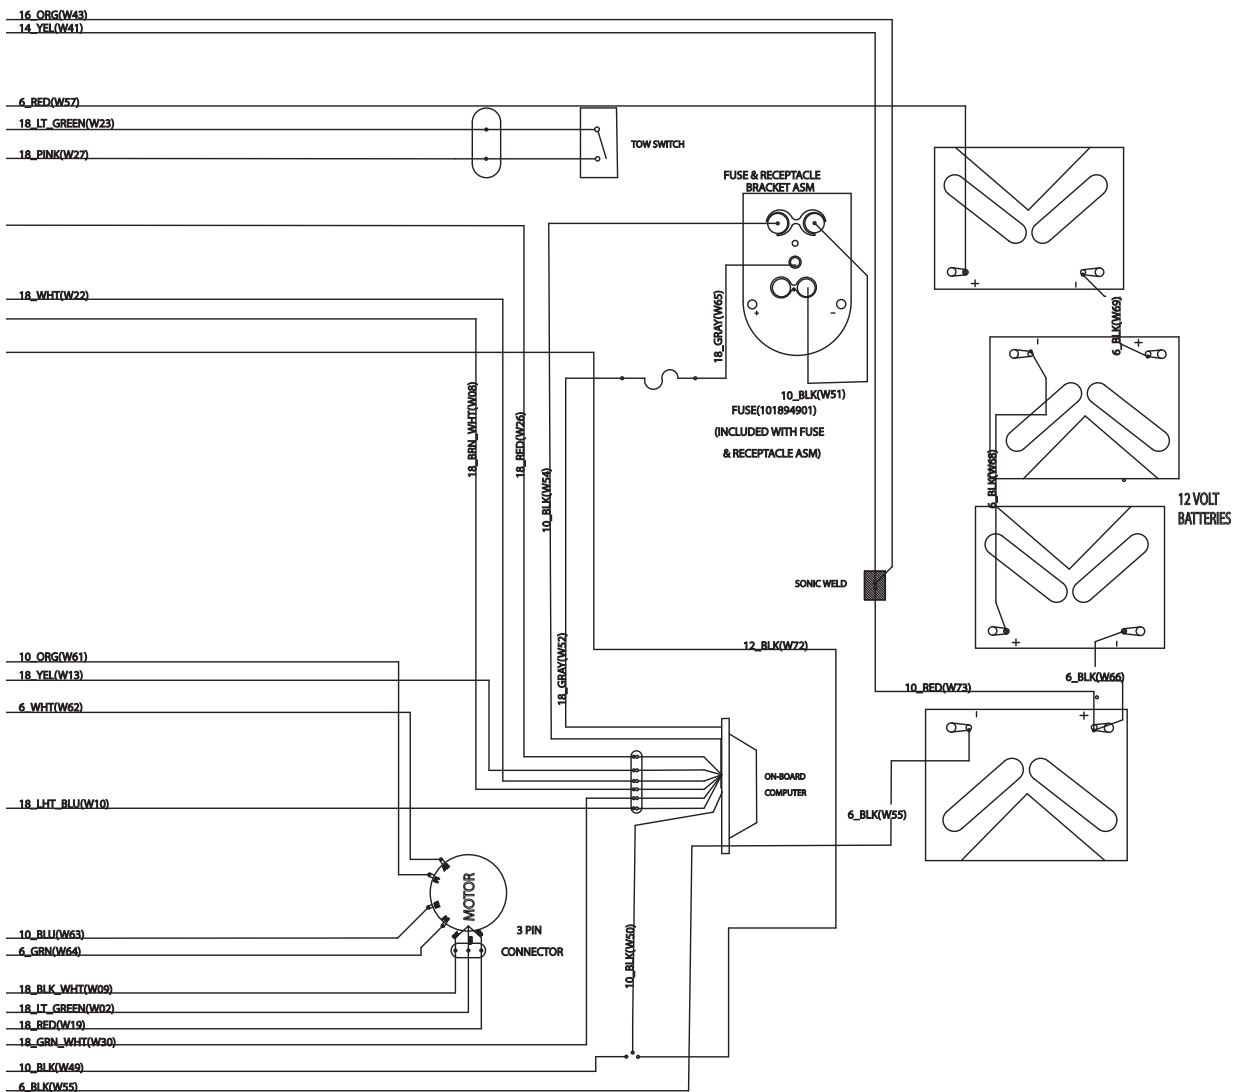

000233-001


See previous two pages for illustration.

WIRING – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>102810501</u>	1 2 3 4 Wire Harness, Electric Vehicle	1

14

 E

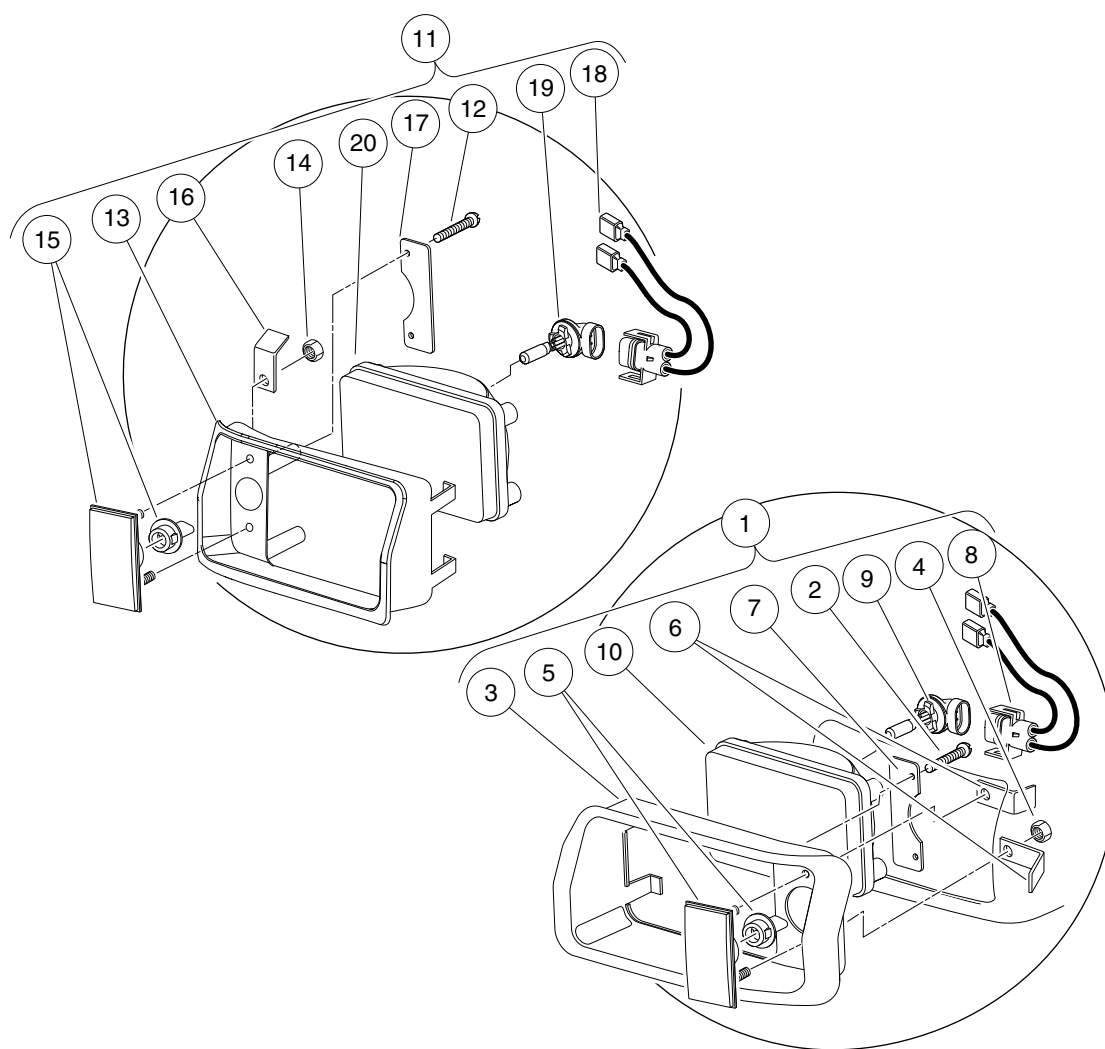


000073-001

HEADLIGHTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101988001</u>	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	1
2	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2
3	<u>1016880</u>	Headlight Bezel, Left	1
4	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
5	<u>1017062</u>	Turn Signal Lens Assy	1
6	<u>1017064</u>	Mounting Bracket	2
7	<u>1017065</u>	Retainer, Headlight	1
8	<u>101987901</u>	Connector Harness Assembly, Headlight	1
9	<u>101988101</u>	Bulb, Headlight	1
10	<u>101988201</u>	Lens, Headlight	1
11	<u>101988002</u>	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	1
12	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2
13	<u>1016879</u>	Headlight Bezel, Right	1
14	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
15	<u>1017062</u>	Turn Signal Lens Assy	1
16	<u>1017064</u>	Mounting Bracket	2
17	<u>1017065</u>	Retainer, Headlight	1
18	<u>101987901</u>	Connector Harness Assembly, Headlight	1
19	<u>101988101</u>	Bulb, Headlight	1
20	<u>101988201</u>	Lens, Headlight	1

14

 E

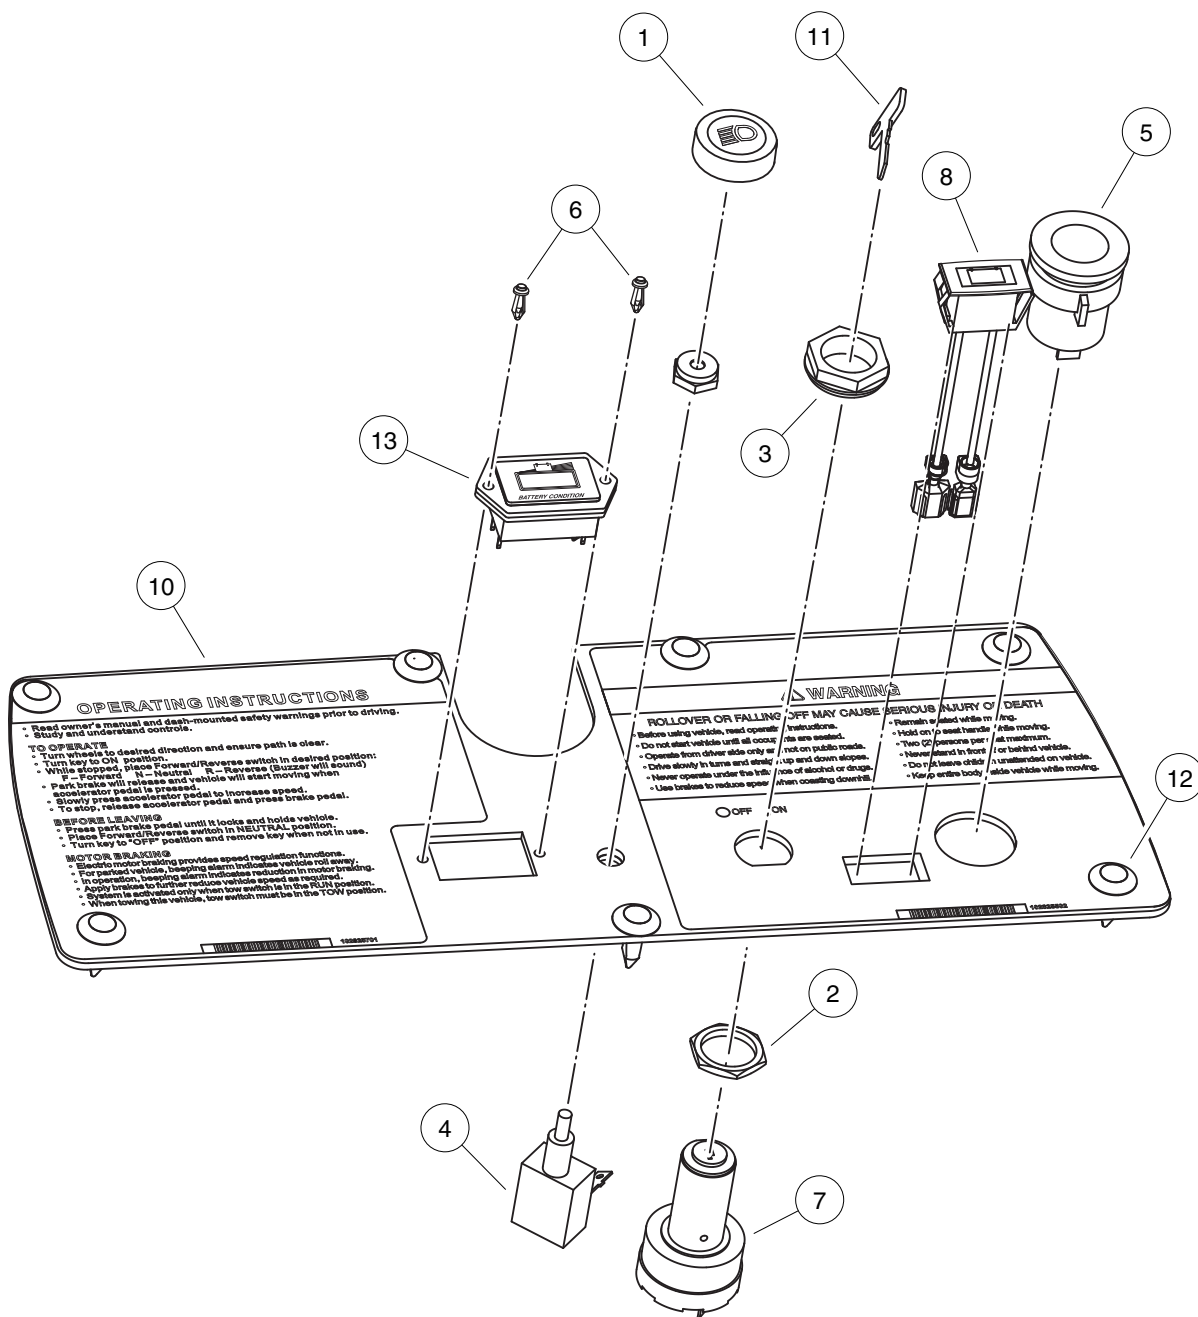


000231-001

ELECTRICAL COMPONENTS, FRONT BODY – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013857</u>	Knob, Light Switch	1
2	<u>101830701</u>	Nut, Key Switch	1
3	<u>102051701</u>	Nut, Key Switch	1
4	<u>102051901</u>	Switch, Light	1
5	<u>102198001</u>	Receptacle, Accessory	1
6	<u>102499001</u>	Rivet, Micro Tuflok	2
7	<u>102508601</u>	Key Switch, Electric	1
8	<u>102508701</u>	Light, Battery	1
9	<u>102804503</u>	Panel, Instrument	1
10	<u>102804504</u>	Panel, Instrument (With 12-Volt Accessory Outlet Cutout) *	1
11	<u>102830801</u>	Set, Key	1
12	<u>102967901</u>	Rivet, Removable, Tuflok 1/4"	7
13	<u>103200701</u>	Battery Condition Indicator - 48V	1
Note: Items marked with an asterisk (*) are to be used only on vehicles equipped with a 12-volt accessory outlet.			

14

 
E

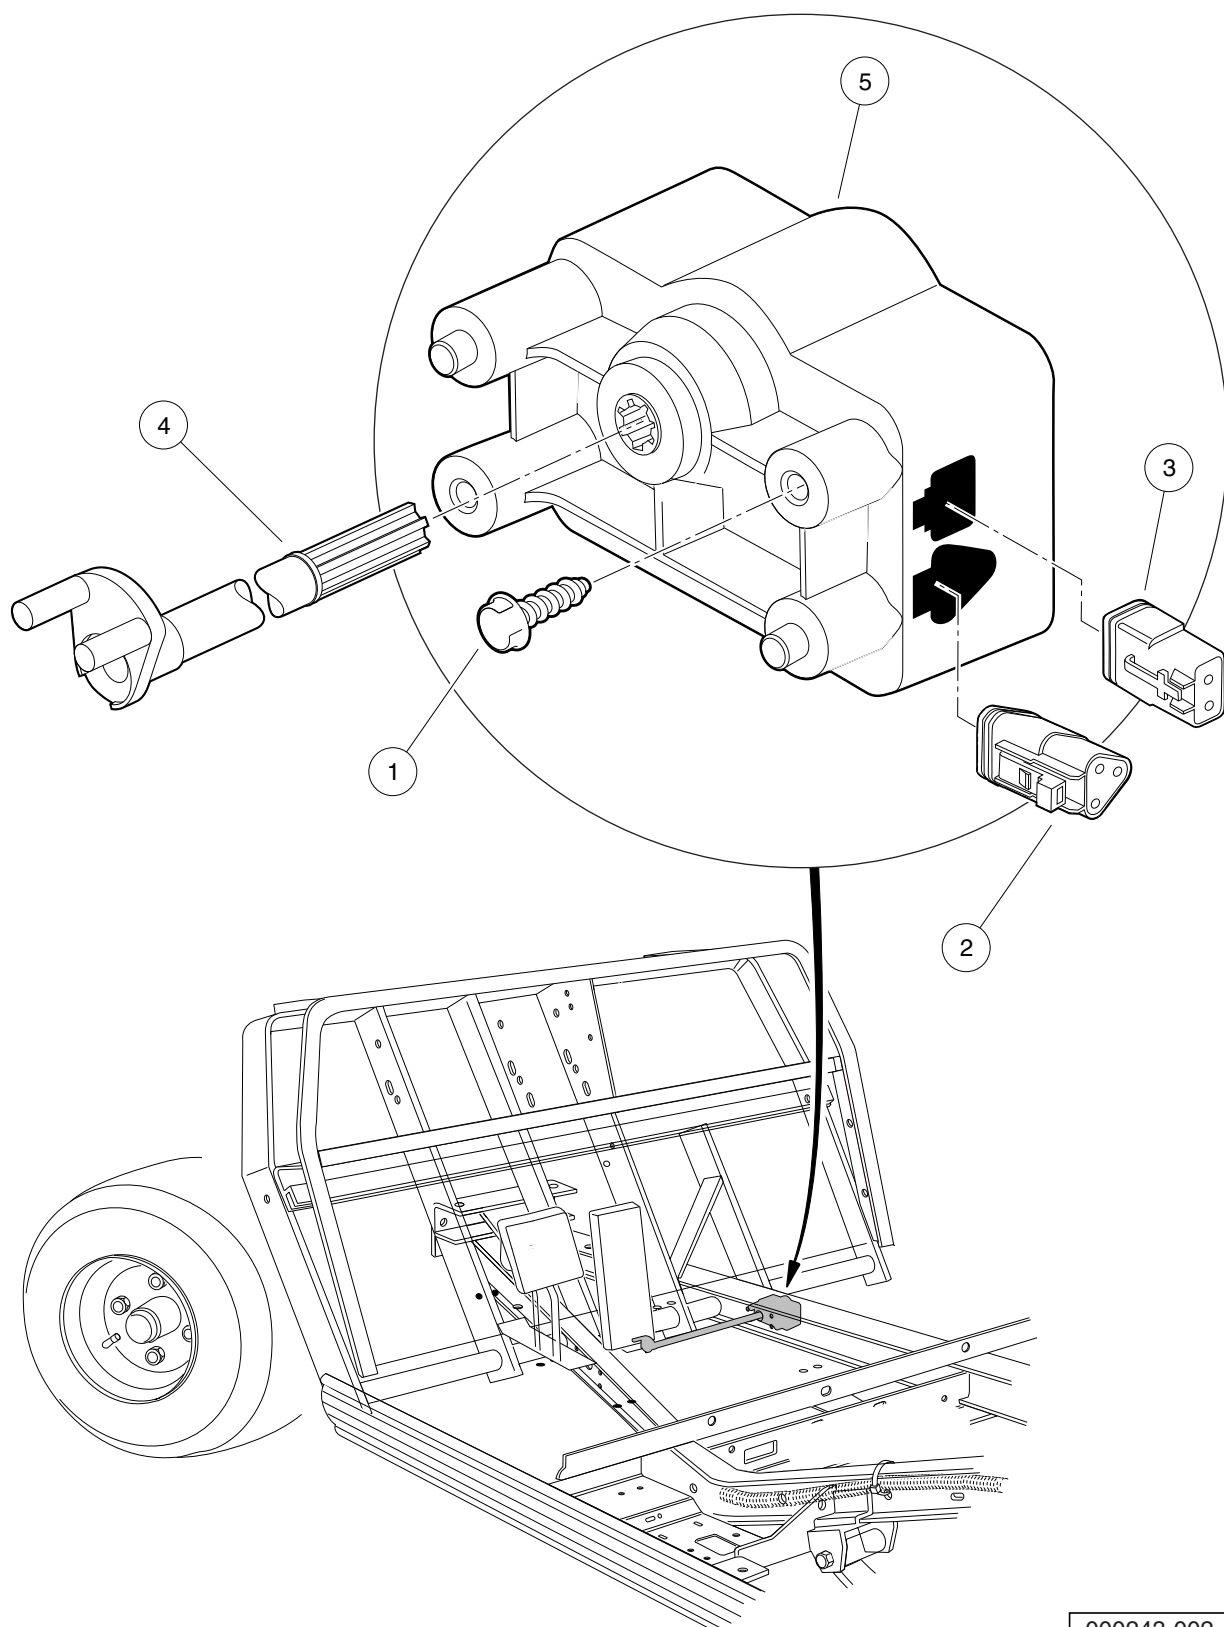

000243-002

MOTOR CONTROLLER OUTPUT REGULATOR (MCOR)

ITEM	PART NO.	DESCRIPTION	QTY	14
		1 2 3 4		
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	2	
2	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1	E
3	<u>101936801</u>	Kit, 2-Pin Wedge Lock	1	
4	<u>102101001</u>	Bar, Drive, Cast	1	
5	<u>102101101</u>	MCOR	1	

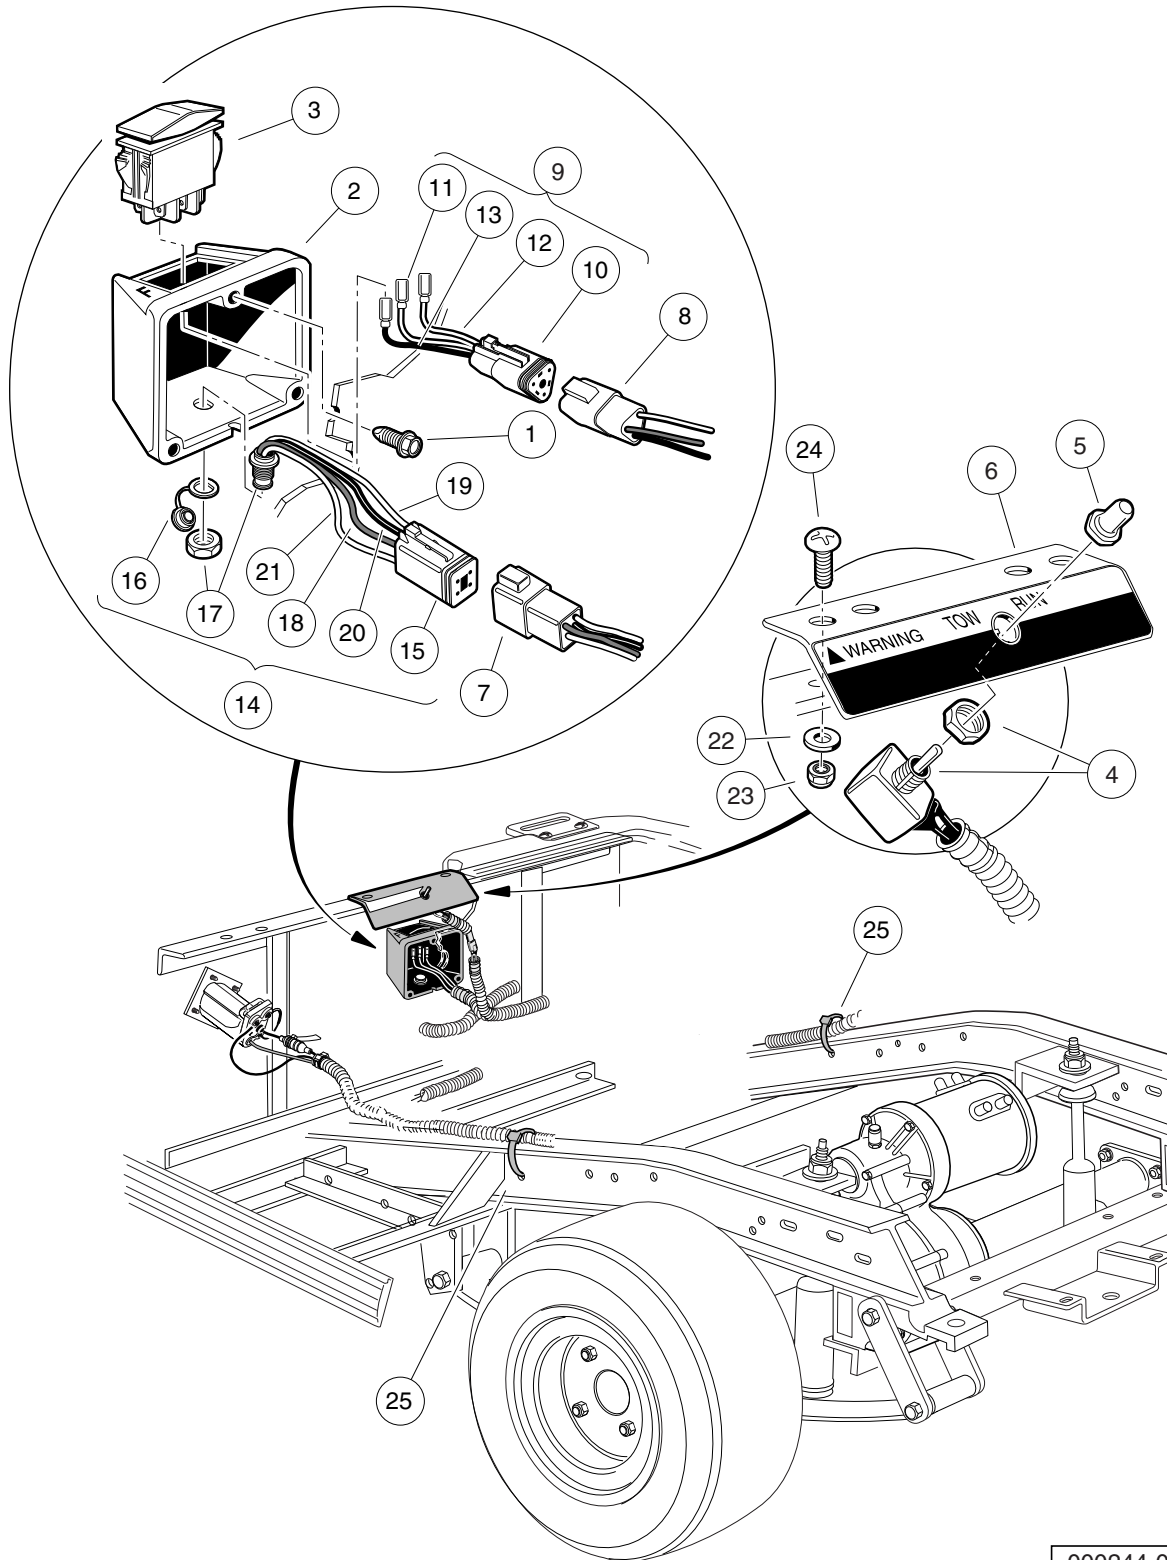 

000244-001

FORWARD/REVERSE SWITCH, TOW/RUN SWITCH


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3
2	<u>101855002</u>	Case, FNR Switch	1
3	<u>101856002</u>	Switch, Rocker, Single-Pole	1
4	<u>101908101</u>	Switch Assembly, Tow/Run	1
5	<u>101908401</u>	Boot, Switch	1
6	<u>101922501</u>	Bracket, Tow/Run Switch Mounting	1
7	<u>101932401</u>	Kit, 4-Pin Receptacle and Wedge Lock	1
8	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
9	<u>102266601</u>	Wire Assembly, FNR Switch (includes items 10 through 13)	1
10	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
11	N/A	Wire Assembly, #18 Blue	1
12	N/A	Wire Assembly, #18 Orange	1
13	N/A	Wire Assembly, #18 Brown	1
14	<u>102266701</u>	Wire Assembly, IQDM Port (includes items 15 through 21)	1
15	<u>101932501</u>	Kit, 4-Pin Wedge Lock	1
16	<u>102196901</u>	Dust Cap	1
17	N/A	Connector Mount, Four-Pin	1
18	N/A	Wire Assembly, #18 Red/Yellow	1
19	N/A	Wire Assembly, #18 Black/Yellow	1
20	N/A	Wire Assembly, #18 Blue/Yellow	1
21	N/A	Wire Assembly, #18 Green/Yellow	1
22	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
23	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2
24	<u>8248</u>	Screw, 1/4-20 X 0.75 Truss-Head Machine	2
25	<u>8990</u>	Tie Wrap, 8" Nylon	1

14

E

14

 E

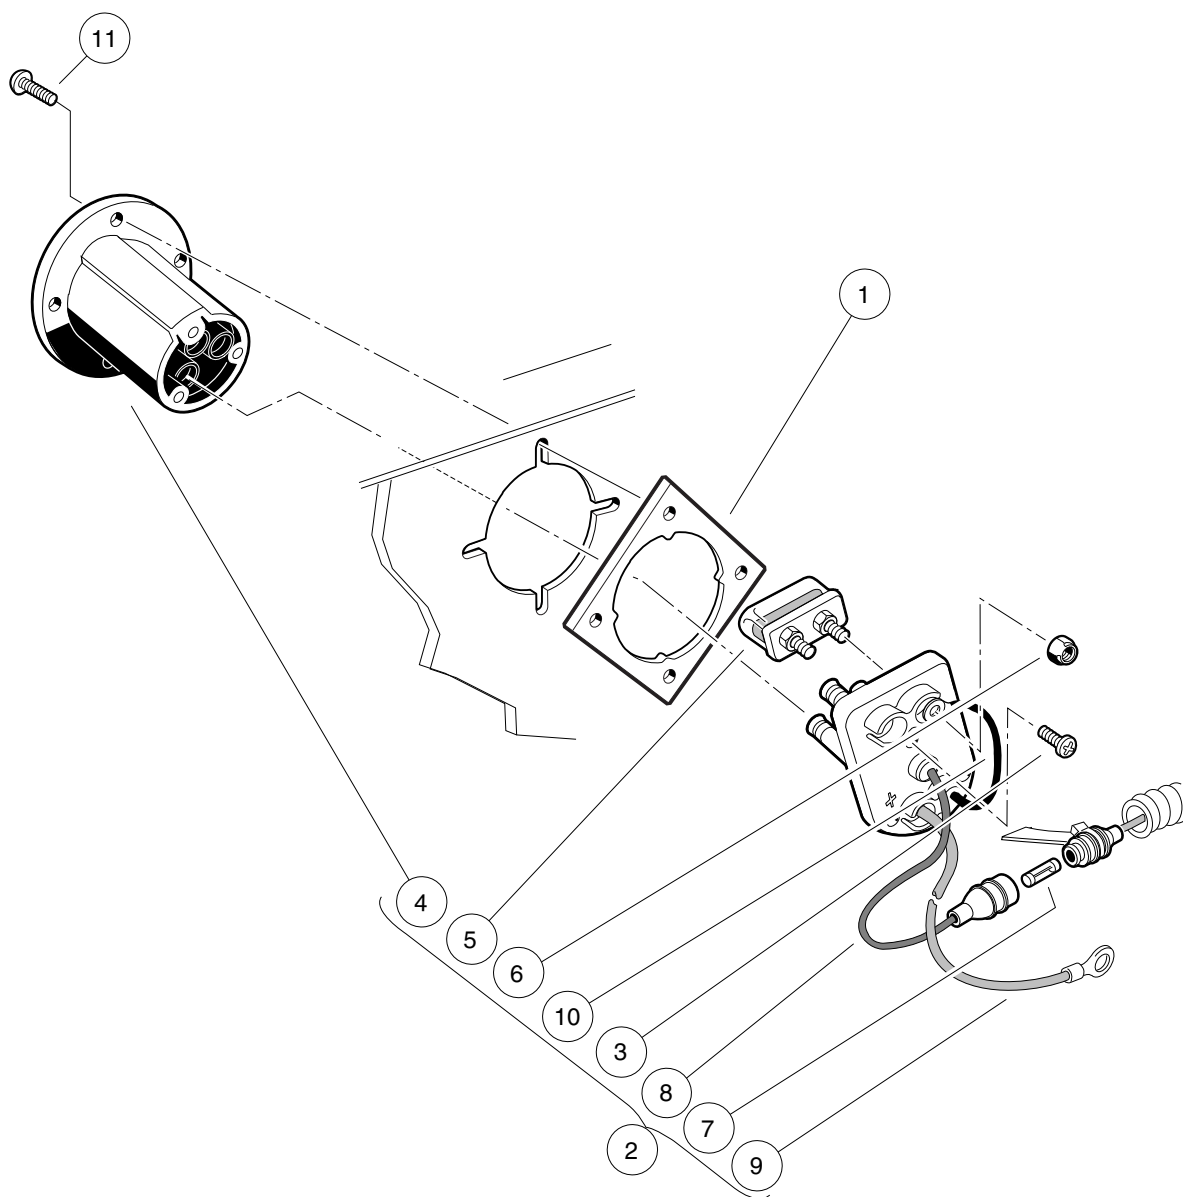


000369-001

BATTERY CHARGER RECEPTACLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101801001</u>	Plate, Receptacle Backing	1
2	<u>101802101</u>	Fuse and Receptacle Assembly (includes items 3 through 10)	1
3	<u>1017705</u>	Screw, #8 X 5/8 Phillips Pan-Head Type AB	3
4	<u>101796501</u>	Receptacle	1
5	<u>101796801</u>	Fuse Assembly (includes item 6)	1
6	<u>1013061</u>	Locknut, #10-32 Nylon Insert	2
7	N/A	Fuse, 3/8-Amp	1
8	N/A	Wire Assembly, Sense Lead, Gray	1
9	N/A	Wire Assembly, #10 Red	1
10	N/A	Wire Assembly, #10 Black	1
11	<u>101832001</u>	Screw, #7-19 X 0.625 Phillips Pan-Head Tap	4

14

 E

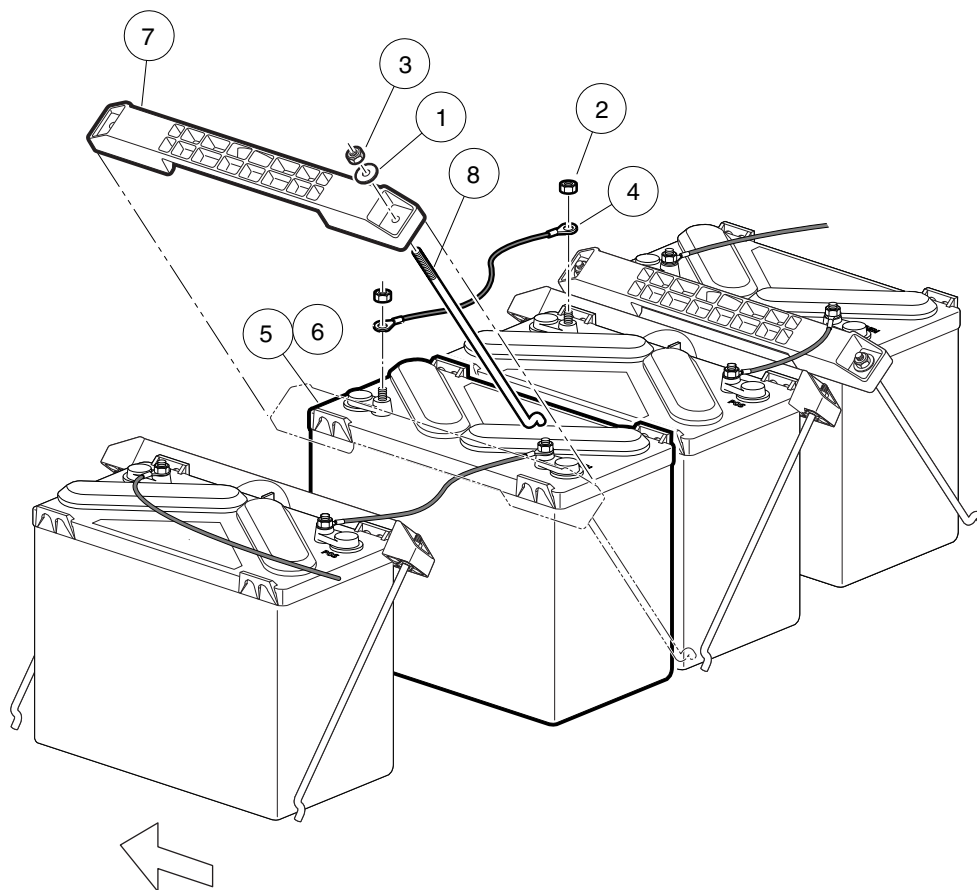


000241-002

BATTERIES, ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011697</u>	Washer, 5/16 Flat	8
2	<u>1014304</u>	Nut, 5/16-18 Stainless-Steel Hex	8
3	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	8
4	<u>101795701</u>	Asm, Wire, #6blk 13in	3
5	<u>102511301</u>	Battery, Ventmaster 12-Volt (Wet)	4
6	<u>102511302</u>	Battery, Ventmaster 12-Volt (Dry, also known as moist)	4
7	<u>102777401</u>	Battery Hold-Down	4
8	<u>102832601</u>	Bolt, Battery, J-	8

14

 E

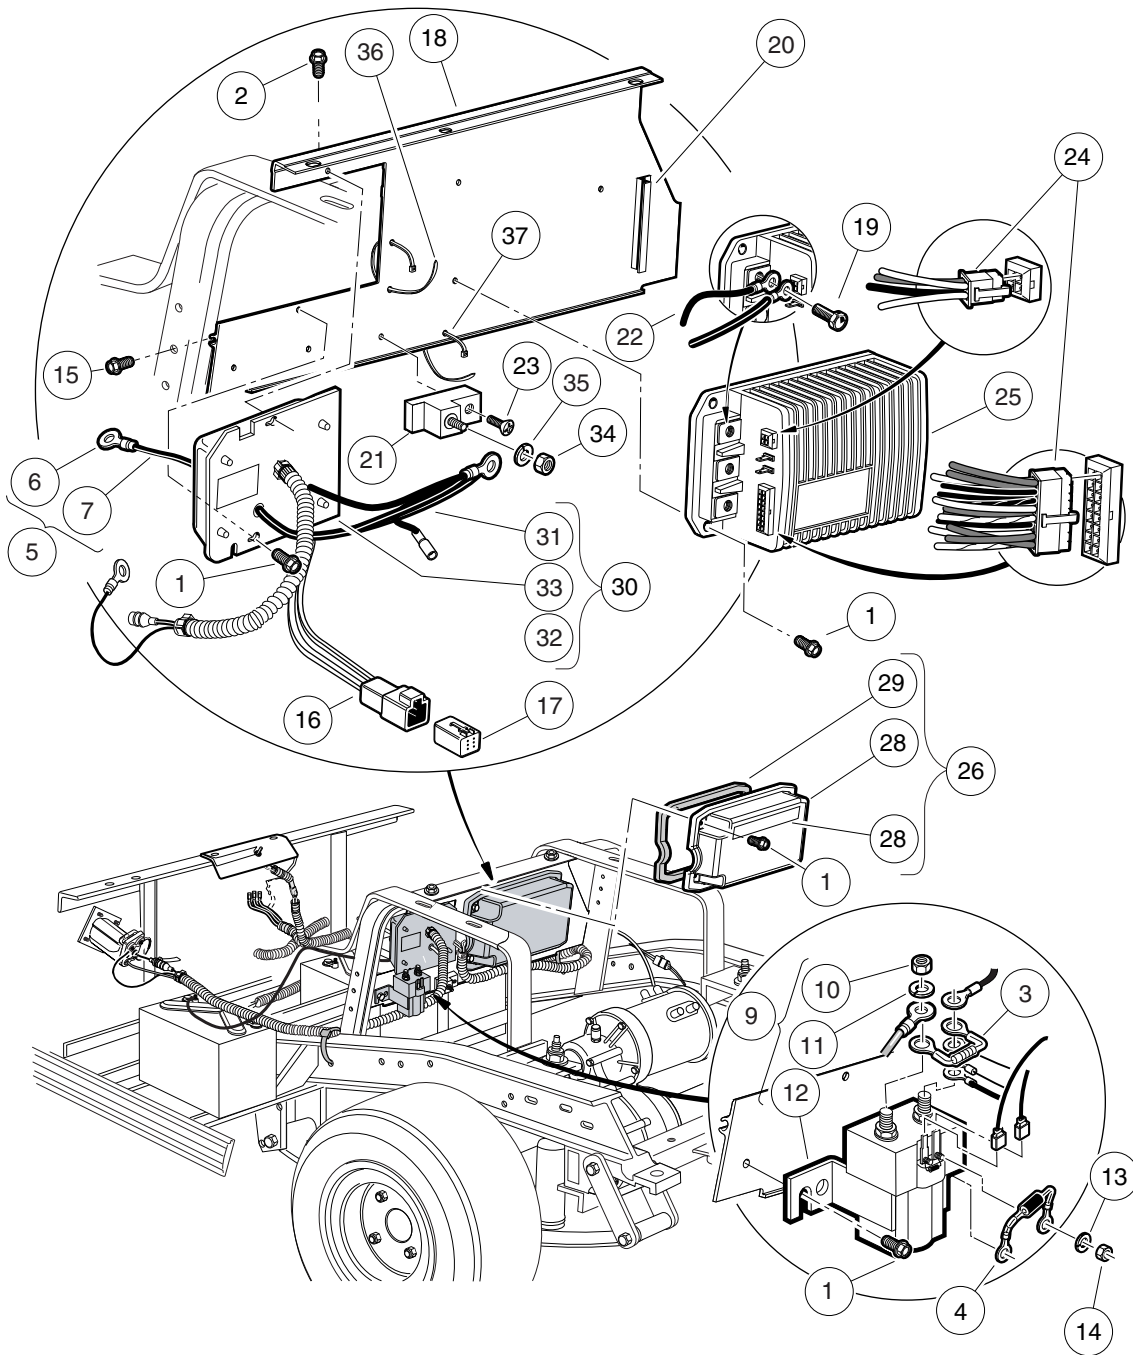


000242-006

OBC, CONTROLLER, AND SOLENOID – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	9
2	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	2
3	<u>1014947</u>	Resistor Assembly	1
4	<u>1014948</u>	Diode	1
5	<u>101827801</u>	Ground Wire Kit, 48-Volt (includes items 6 through 8)	1
6	<u>101826801</u>	Compression Lug	1
7	N/A	Wire Assembly, Black	1
8	<u>8990</u>	Tie Wrap, 8" Nylon	3
9	<u>101908701</u>	Solenoid, 48-Volt (includes items 10 through 14)	1
10	<u>1012528</u>	Nut, M8-1.25 Hex	2
11	<u>1013734</u>	Lockwasher, 8mm Split	2
12	N/A	Solenoid, 48-Volt	1
13	N/A	Washer, Lock	2
14	N/A	Nut	2
15	<u>101910401</u>	Screw, 5/16-18 X 1.25 Thrd Frm	2
16	<u>101932601</u>	Kit, 6-Pin Wedge Lock	1
17	<u>101932701</u>	Kit, 6-Pin Receptacle and Wedge Lock	1
18	<u>101965205</u>	Plate, Component Mounting	1
19	<u>102240501</u>	Bolt, Controller, Terminal	3
20	****	Extrusion, Cover Support	1
21	<u>102259801</u>	Terminal Block	1
22	<u>102263601</u>	Wire Assy, #10 Black	1
23	<u>102263701</u>	Screw, #10-24 X 0.75 Phillips, Thread-Forming	1
24	<u>102266501</u>	Kit, Connector, IQ Controller	1
25	<u>102806201</u>	Controller, IQ, 48-volt	1
26	<u>103316901</u>	Cover Asm - Controller (includes items 27 through 29)	1
27	<u>101931501</u>	Decal, Component Cover	1
28	<u>103316701</u>	Cover - Controller, Deep	1
29	<u>103316801</u>	Gasket - Controller Cover	1
30	N/A	Kit, OBC, DS and Util IQ (includes items 31 through 33)	1
31	<u>103282601</u>	Wire Assembly Black #10	1
32	N/A	Instr Obc Ds Pre 01-28-2007	1
33	<u>103403101</u>	Asm, Obc, Iq, V3.0	1
34	<u>1242</u>	Nut, 5/16-18 Hex	1
35	<u>7174</u>	Lockwasher, 5/16 Split	1
36	<u>8639</u>	Tie Wrap, 11" Nylon	1
37	<u>8990</u>	Tie Wrap, 8" Nylon	1
		**** Special order item available upon request.	

 14
E

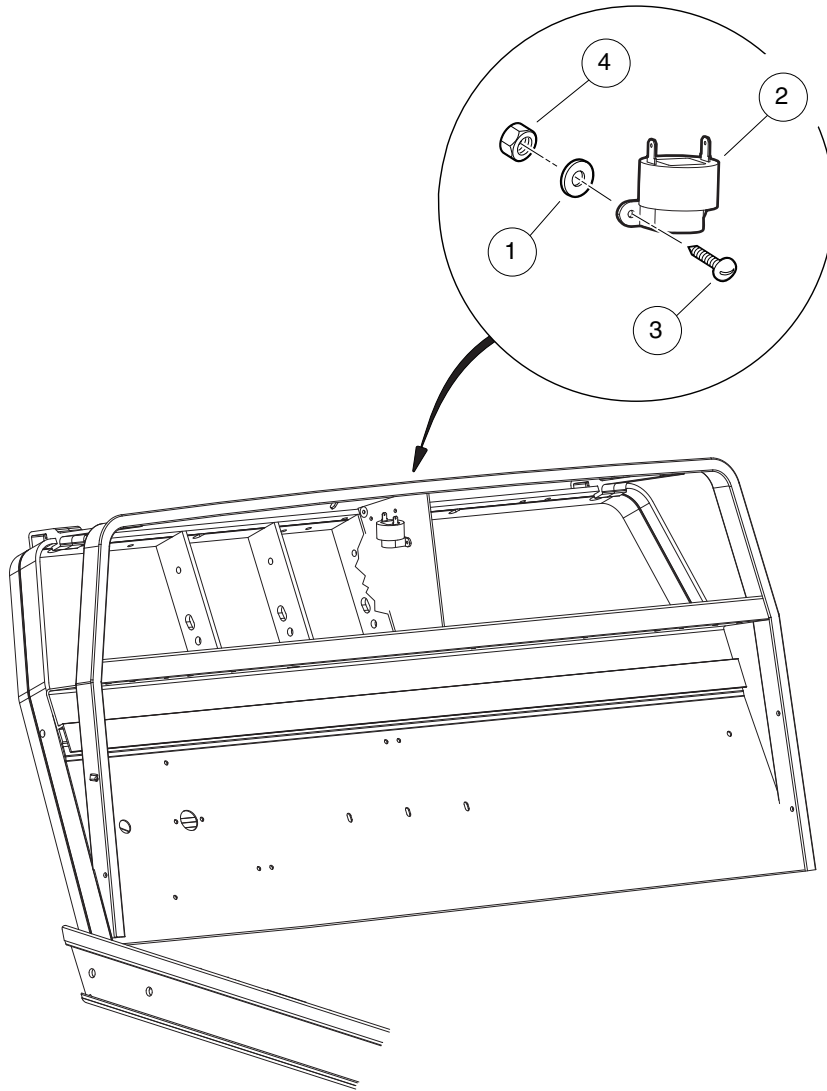

000363-001

REVERSE BUZZER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012431	Washer, #4 Flat	1
2	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
3	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	1
4	<u>8057</u>	Nut, #4-40 Hex Machine	1

 
14

E

ELECTRIC MOTOR

15

E

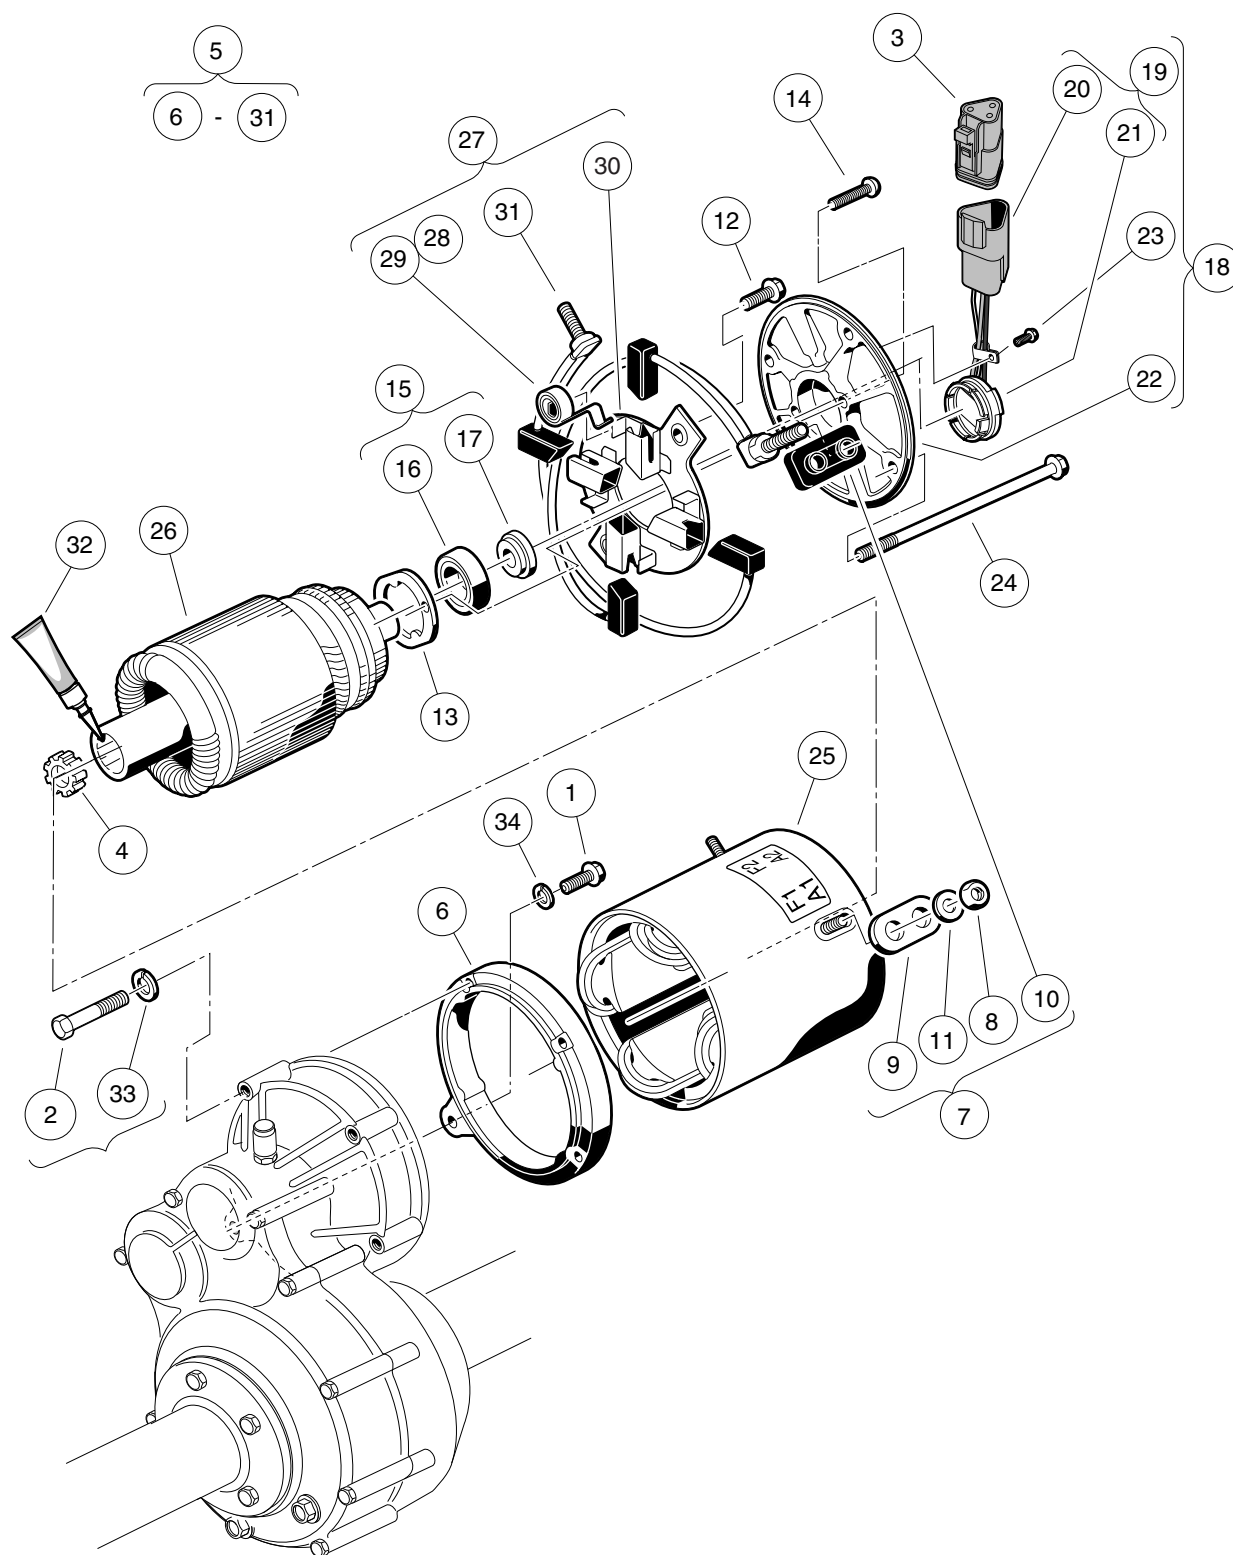


000349-002

MOTOR (MODEL 5BC59JBS6365A)

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1
2	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	3
3	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
4	<u>102235201</u>	Bumper, Drive Unit	1
5	<u>102240104</u>	Motor, 48-Volt Non-Skew IQ * (includes items 6 through 27)	1
6	<u>1017944</u>	End Shield	1
7	<u>1017947</u>	Hardware Package (includes items 8 through 11)	1
8	<u>1011280</u>	Locknut, 5/16-18	4
9	N/A	Insulator Bushing	2
10	N/A	Insulated Bushing	2
11	<u>1241</u>	Washer, 5/16 Type A Flat	4
12	<u>1017949</u>	Screw, #6-32 X 0.480 Hex-Head	2
13	<u>1017950</u>	Bearing Retainer	1
14	<u>1017953</u>	Screw, Bearing Retainer	2
15	<u>102265701</u>	Kit, Bearing and Magnet (includes items 16 and 17)	1
16	<u>1011290</u>	Ball Bearing	1
17	<u>102265801</u>	Magnet	1
18	<u>102265901</u>	Motor End Shield Asm (includes items 19 through 23)	1
19	<u>102265601</u>	Speed Sensor Assembly (includes items 20 and 21)	1
20	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
21	N/A	Sensor, Speed, without Connector	1
22	<u>102266001</u>	End Shield, Motor	1
23	<u>102267001</u>	Screw, #8-32 X 0.375 Hex-Head	1
24	<u>102266101</u>	Screw, #10 - 32 X 8.250	4
25	<u>103325701</u>	Stator Shell and Winding	1
26	<u>103325801</u>	Non Skew Armature	1
27	<u>103337601</u>	Brush Assembly, IQ Motor, Non-Skew (includes items 28 through 31)	1
28	<u>1011411</u>	Kit, Brush Spring (ge Motor) (includes item 29)	1
29	<u>1011285</u>	Brush Spring	4
30	<u>103325501</u>	Brush Rigging, Non-Skew Motor	1
31	<u>103325601</u>	Brush Set, Non-Skew	1
32	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
33	<u>451</u>	Lockwasher, 1/4 Split	3
34	<u>7174</u>	Lockwasher, 5/16 Split	1
* Note: The model 5BC59JBS6390 motor has been discontinued. To replace the motor, use motor model EJ8-4001A.			

 15
E

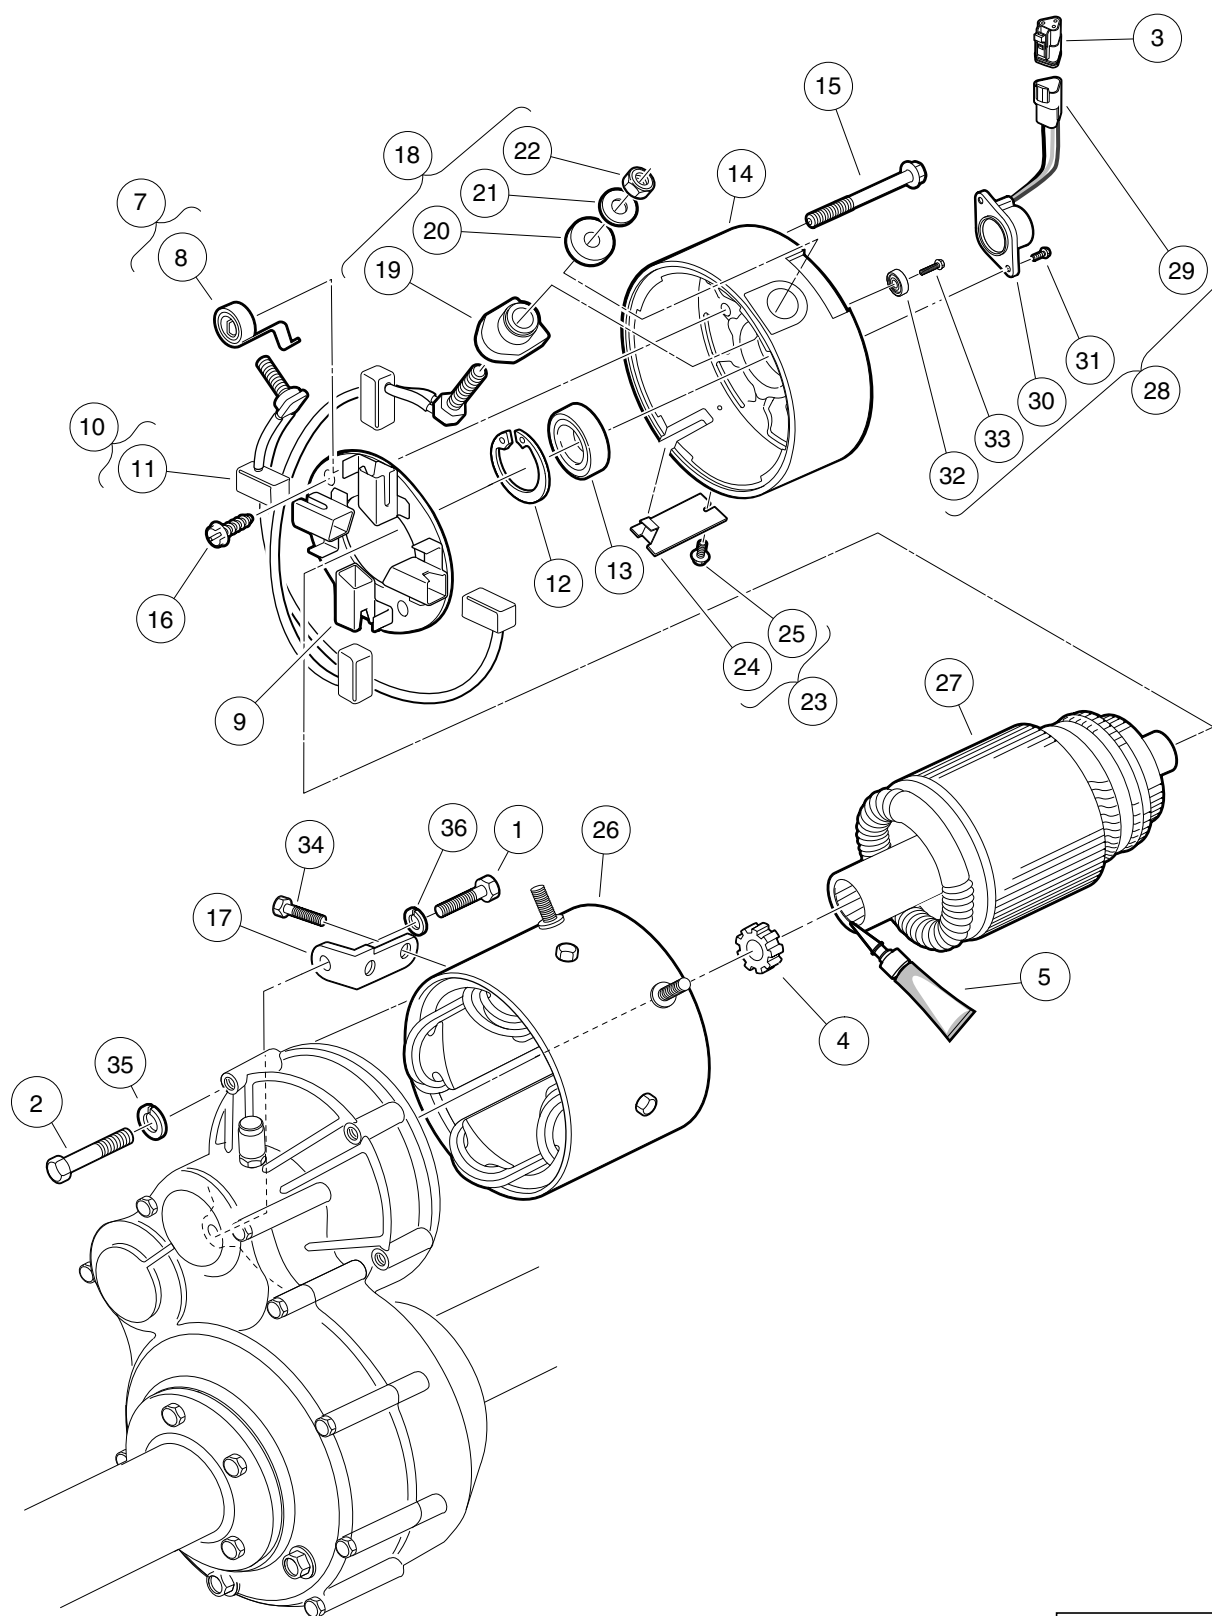


000185-001

MOTOR (MODEL EJ4-4001) – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1
2	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	3
3	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
4	<u>102235201</u>	Bumper, Drive Unit	1
5	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
6	<u>102705001</u>	IQ Electric Motor, 48-VDC 3.3 hp * (includes items 7 through 34)	1
7	<u>102186001</u>	Spring Kit, Motor Brush (includes item 8)	1
8	N/A	Spring, Brush, S-g	4
9	<u>102186101</u>	Brush Box Assembly	1
10	<u>102186201</u>	Brush Kit, Motor (includes item 11)	1
11	N/A	Assembly, Brush and Terminal	2
12	<u>102186301</u>	Ring, 2.24" Internal Retaining	1
13	<u>102186401</u>	Bearing, Ball	1
14	<u>102186701</u>	End Cap, Motor	1
15	N/A	Screw, 1/4-20 X 2.25 Hex-Head Washer	2
16	<u>102186901</u>	Screw, #8-32 X .5 Hex-Head	2
17	<u>102187001</u>	L-Bracket, Motor	1
18	<u>102187101</u>	Hardware Kit, Motor Terminal (includes items 19 through 22)	2
19	N/A	Bushing, Nylon	2
20	N/A	Washer, Nylon Flat	2
21	N/A	Washer, Flat, 5/16 Steel	2
22	N/A	Nut, Brass Hex, 5/16 - 18	2
23	<u>102187201</u>	Plate Kit, Motor Cover (includes items 24 and 25)	1
24	N/A	Assembly, Cover Plate	1
25	N/A	Screw, #8-32 x 0.375, Taptite Thread	1
26	<u>102704701</u>	Frame and Field Assembly	1
27	<u>102704801</u>	Armature Assembly	1
28	<u>102704901</u>	Kit, Speed Sensor (includes items 29 through 33)	1
29	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
30	N/A	Sensor, Motor Speed, ADC	1
31	N/A	Screw, #8-32, Taptite Thread	2
32	N/A	Magnet, ADC Motor	1
33	N/A	Screw, 1/4-20 x 0.5	1
34	N/A	Bolt, 1/4 - 20 x 0.73 Thread-Forming	2
35	<u>451</u>	Lockwasher, 1/4 Split	3
36	<u>7174</u>	Lockwasher, 5/16 Split	1
* Note: The model EJ4-4001 motor has been discontinued. To replace the motor, use motor model EJ8-4001A.			

15

 E

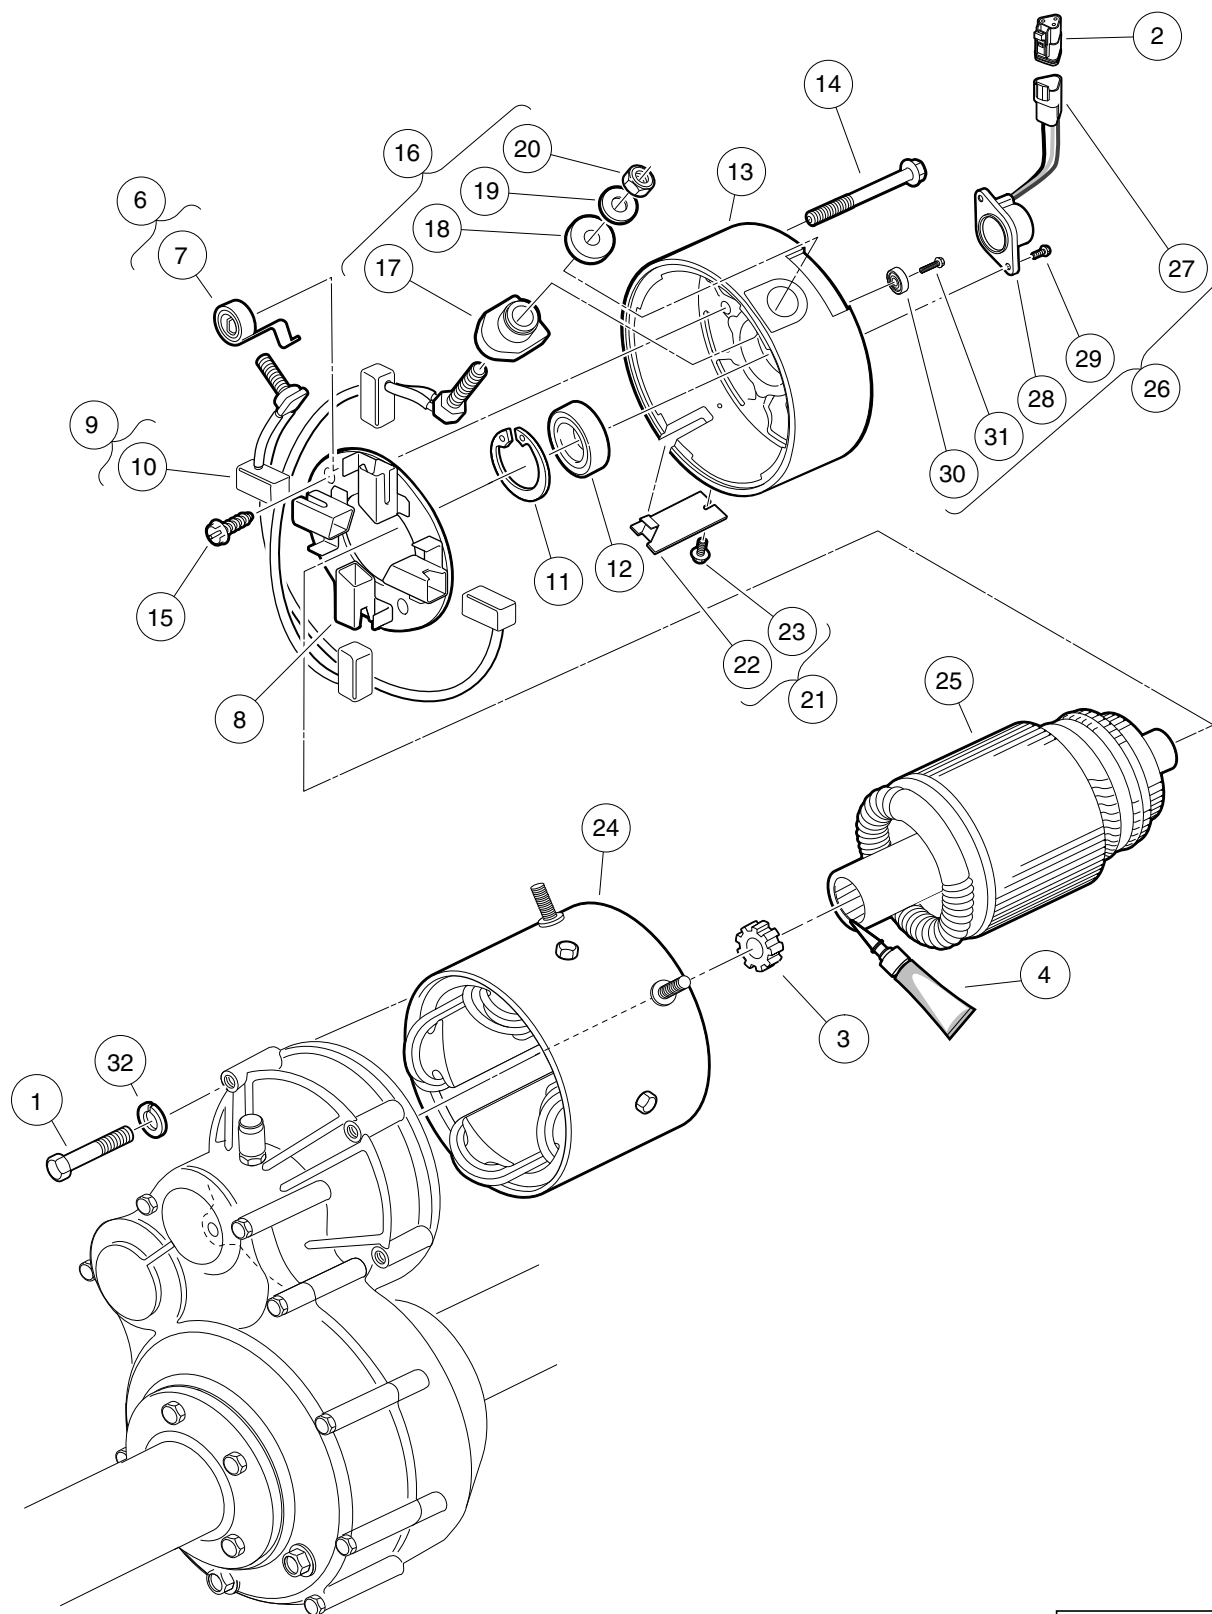

000185-002

MOTOR (MODEL EJ8-4001A) – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1014201	Screw, 1/4-20 X 2.25 Hex Cap	3
2	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
3	<u>102235201</u>	Bumper, Drive Unit	1
4	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
5	N/A	IQ Electric Motor, 48-VDC 3.3 hp (includes items 6 through 26)	1
6	<u>102186001</u>	Spring Kit, Motor Brush (includes item 7)	1
7	N/A	Spring, Brush, S-g	4
8	<u>102186101</u>	Brush Box Assembly	1
9	<u>102186201</u>	Brush Kit, Motor (includes item 10)	1
10	N/A	Assembly, Brush and Terminal	2
11	<u>102186301</u>	Ring, 2.24" Internal Retaining	1
12	<u>102186401</u>	Bearing, Ball	1
13	<u>102186701</u>	End Cap, Motor	1
14	N/A	Screw, 1/4-20 X 2.25 Hex-Head Washer	2
15	<u>102186901</u>	Screw, #8-32 X .5 Hex-Head	2
16	<u>102187101</u>	Hardware Kit, Motor Terminal (includes items 17 through 20)	2
17	N/A	Bushing, Nylon	2
18	N/A	Washer, Nylon Flat	2
19	N/A	Washer, Flat, 5/16 Steel	2
20	N/A	Nut, Brass Hex, 5/16 - 18	2
21	<u>102187201</u>	Plate Kit, Motor Cover (includes items 22 and 23)	1
22	N/A	Assembly, Cover Plate	1
23	N/A	Screw, #8-32 x 0.375, Taptite Thread	1
24	<u>102704701</u>	Frame and Field Assembly	1
25	<u>102704801</u>	Armature Assembly	1
26	<u>102704901</u>	Kit, Speed Sensor (includes items 27 through 31)	1
27	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
28	N/A	Sensor, Motor Speed, ADC	1
29	N/A	Screw, #8-32, Taptite Thread	2
30	N/A	Magnet, ADC Motor	1
31	N/A	Screw, 1/4-20 x 0.5	1
32	<u>451</u>	Lockwasher, 1/4 Split	3

15
E

 
15

E

TRANSAXLE – ELECTRIC VEHICLES

16

E

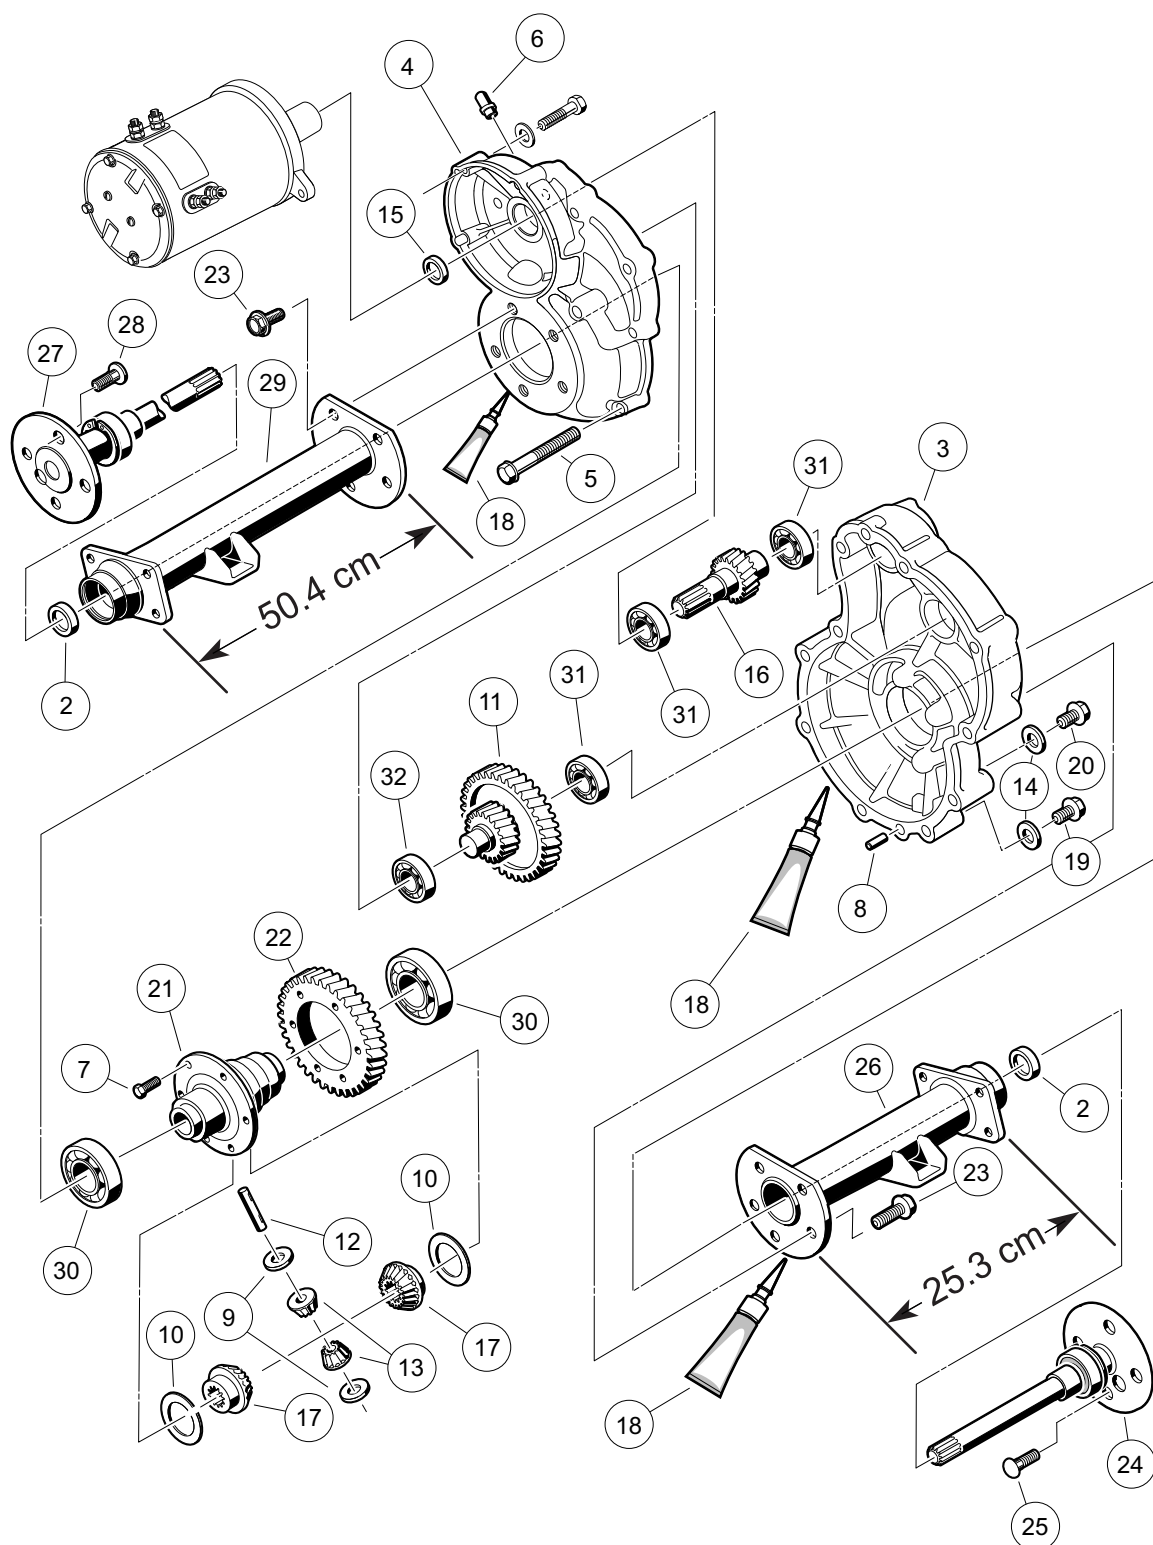


000223-002

TRANSAXLE – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102771701</u>	Transaxle, Electric (includes items 2 through 32)	1
2	<u>1013794</u>	Axle Shaft Oil Seal	2
3	<u>101895401</u>	Gear Case, Left-Hand	1
4	<u>101895501</u>	Gear Case, Passenger-Side	1
5	<u>101897001</u>	Screw, M8-1.25 X 60mm Hex-Head	11
6	<u>101897201</u>	Breather	1
7	<u>101897401</u>	Screw, M10-1.25 X 25mm	6
8	<u>101897601</u>	Pin, 11mm OD X 8.5mm ID X 10mm	2
9	<u>101903601</u>	Washer, Thrust	2
10	<u>101903701</u>	Washer, Thrust	2
11	<u>101906901</u>	Intermediate Shaft Assembly	1
12	<u>101922101</u>	Pin, 15.99mm X 88.7mm Dowel	1
13	<u>101923001</u>	Gear, Differential Idler	2
14	<u>101923201</u>	Gasket	2
15	<u>101923501</u>	Seal, Lip	1
16	<u>101923701</u>	Shaft, Input	1
17	<u>101923901</u>	Gear, Differential	2
18	<u>101928701</u>	Liquid Gasket (Transaxle case)	1
19	<u>101972101</u>	Plug, M14-1.5 X 12mm Magnetic	1
20	<u>101972201</u>	Plug, M14-1.5 X 12mm Hex	1
21	<u>102356601</u>	Housing, Differential, 6 Bolt	1
22	<u>102356801</u>	Gear, Differential Output, 6-Bolt	1
23	<u>102357001</u>	Screw, Flg Hd M10 X 1.5 X 30	10
24	<u>102886301</u>	Axle Assembly, Driver-Side (includes item 25)	1
25	<u>101922201</u>	Lug Stud	4
26	<u>102886401</u>	Tube, Axle, Driver-Side	1
27	<u>102886501</u>	Axle Assembly, Passenger-Side (includes item 28)	1
28	<u>101922201</u>	Lug Stud	4
29	<u>102886601</u>	Tube, Axle, Passenger-Side	1
30	<u>7330</u>	Inner Axle Tube Bearing	2
31	<u>7335</u>	Bearing	3
32	<u>7336</u>	Bearing	1

16

 E

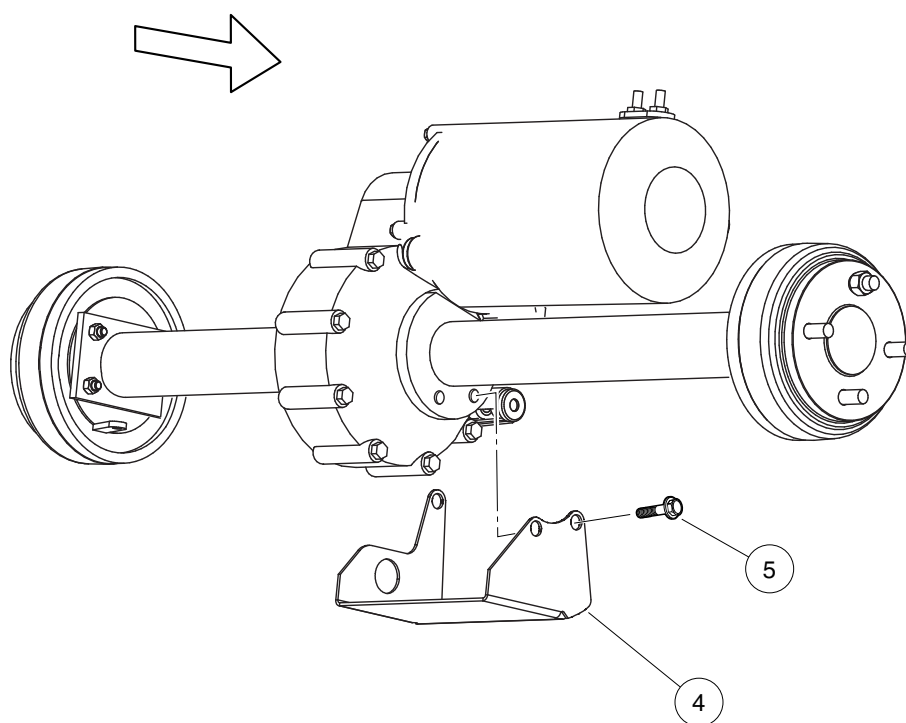

000365-001

DIFFERENTIAL GUARD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101611402</u>	Differential Guard Kit (includes items 2 through 4)	1
2	<u>101911401</u>	Kit - Support Brace	2
3	<u>101936101</u>	Screw, M10-1.50 X 60mm Hex Cap	2
4	<u>101978601</u>	Guard, Elect.axle Differential	1
5	<u>102357001</u>	Screw, Flg Hd M10 X 1.5 X 30	3

16

E

 
BATTERY CHARGER

17

E

17

E

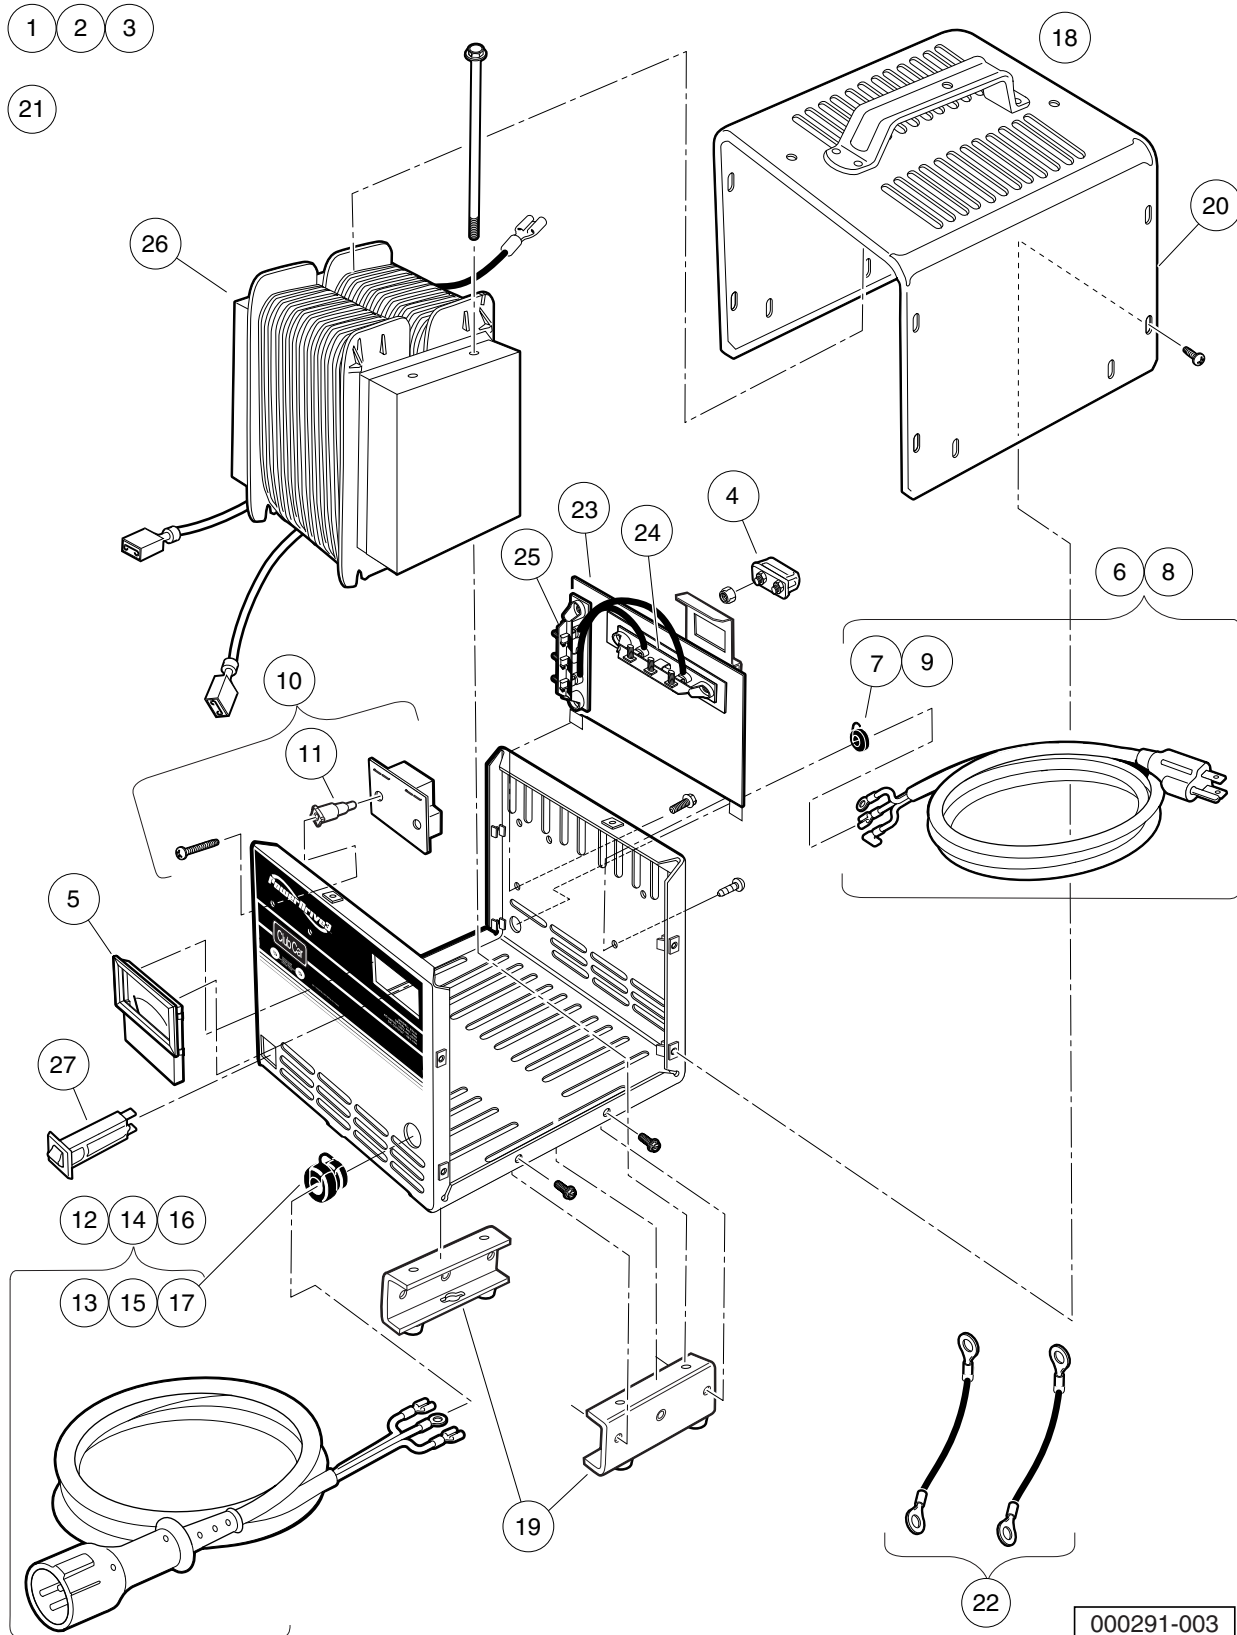


000291-003

POWERDRIVE 3 BATTERY CHARGER, DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103717001</u>	Chgr, Pd3 Stnry, 9Dc6'Ac'	1
2	<u>103717002</u>	Chgr, Pd3 Stnry, 12Dc9'Ac'	1
3	<u>103717003</u>	Chgr, Pd3 Stnry, 20Dc9'Ac'(includes items 4 through 27)	1
4	<u>102273701</u>	PD2 Fuse Asm	1
5	<u>102273801</u>	PD2 Ammeter	1
6	<u>103428501</u>	Kit, PD3 Cordset - AC 80" (includes item 7)	1
7	<u>102273901</u>	PD2 AC Cord Bushing	1
8	<u>103428601</u>	Kit, PD3 Cordset, - AC 114" (includes item 9)	1
9	<u>102273901</u>	PD2 AC Cord Bushing	1
10	<u>103428701</u>	Asm, PD3 Board Relay (includes item 11)	1
11	<u>103429701</u>	PD3 Plastic Stand-Offs	2
12	<u>103429001</u>	PD3 Cordset - DC 113" (includes item 13)	1
13	<u>1012098</u>	Bushing, DC Cord	1
14	<u>103429101</u>	PD3 Cordset - DC 154" (includes item 15)	1
15	<u>1012098</u>	Bushing, DC Cord	1
16	<u>103429201</u>	PD3 Cordset - DC 205" (includes item 17)	1
17	<u>1012098</u>	Bushing, DC Cord	1
18	<u>103429301</u>	Asm, PD3 Case (includes items 19 and 20)	1
19	<u>103434001</u>	Asm, PD3 Legs	1
20	<u>103439901</u>	PD3Case Top (Includes Handle)	1
21	<u>103429501</u>	Kit, PD3 Hardware	1
22	<u>103513001</u>	Wire Asm Kit Blk Pd3	1
23	<u>103517401</u>	Kit Pd3 Button Diode (includes items 24 and 25)	1
24	<u>103512801</u>	Asm Diode Top	1
25	<u>103512901</u>	Asm Diode Side	1
26	<u>103779601</u>	Transformer, Pd3, Al	1
27	<u>CCX8506</u>	Circuit Breaker, 15-Amp/120-Volt	1

17

 E

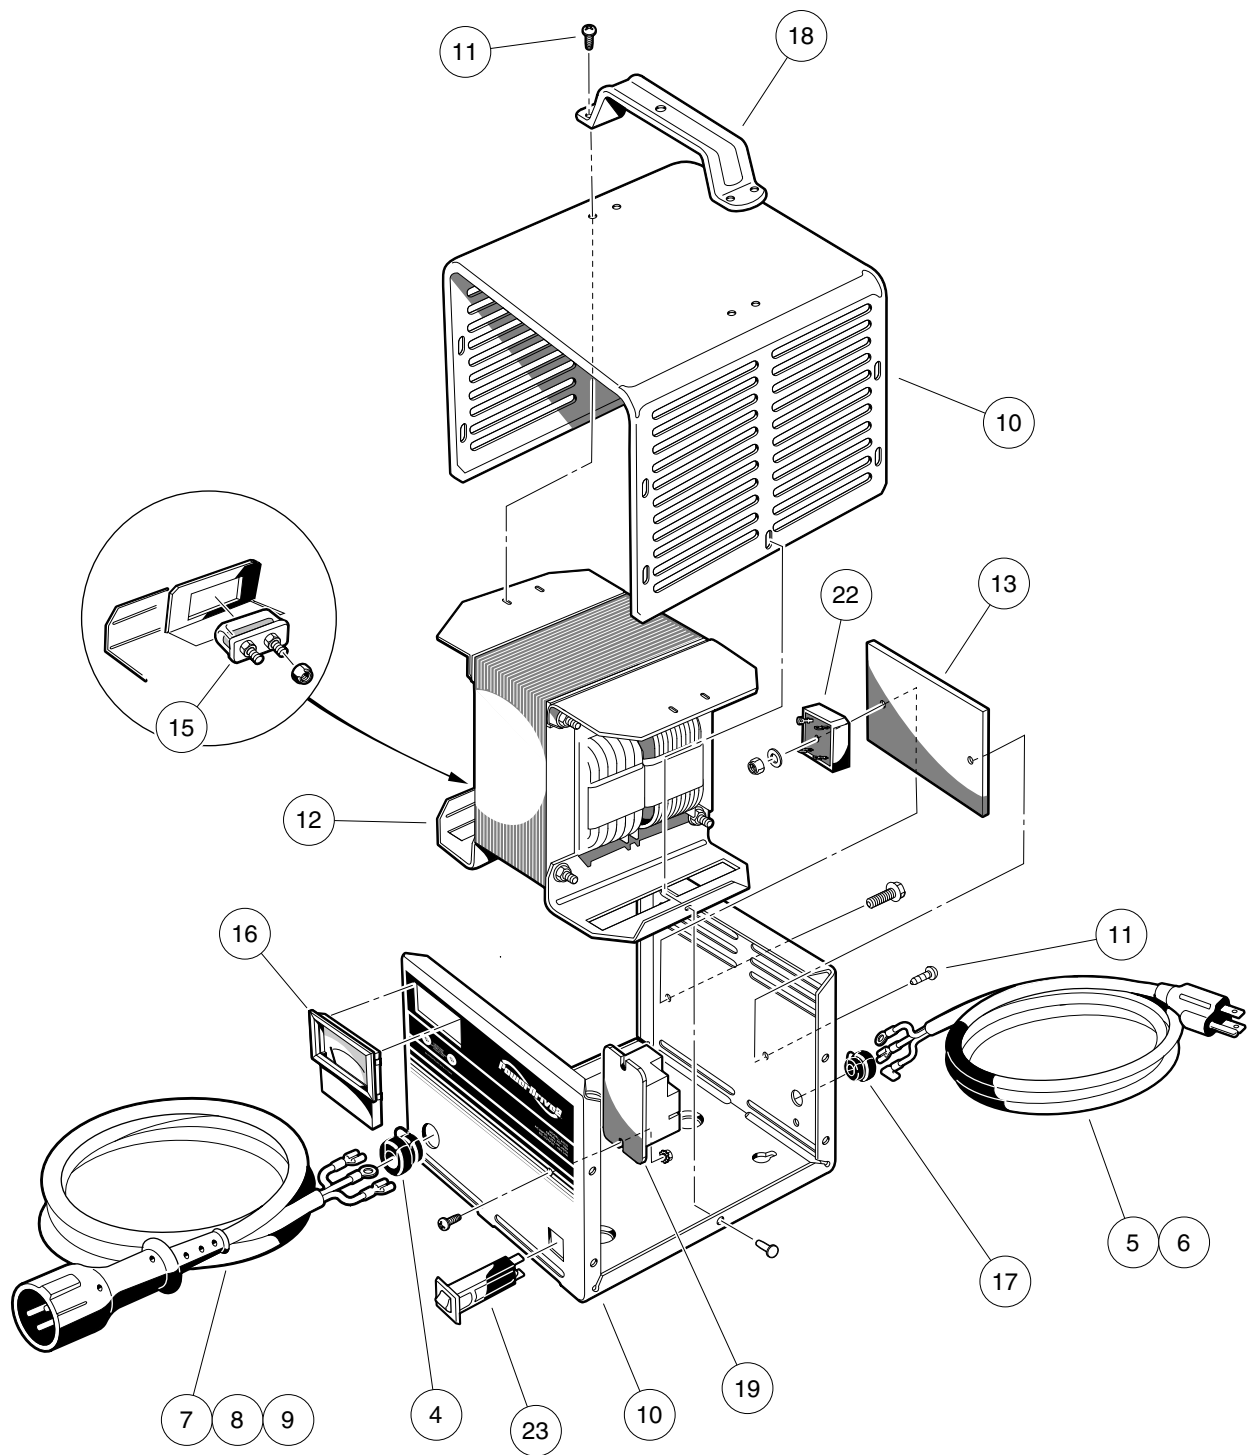


000291-001

POWERDRIVE 2 BATTERY CHARGER (MODEL 22110), DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101802204</u>	48-V/13-A PowerDrive 2 (9-ft. DC, 6-ft. AC)	1
2	<u>101802205</u>	48-V/13-A PowerDrive 2 (12-ft. DC, 9-ft. AC)	1
3	<u>101802206</u>	48-V/13-A PowerDrive 2 (20-ft. DC, 9-ft. AC) (includes items 4 through 23)	1
4	<u>1012098</u>	Bushing, DC Cord	1
5	<u>101828801</u>	Cord, AC, 80-Inch (203 cm)	1
6	<u>101828802</u>	Cord, AC, 108-Inch (274 cm)	1
7	<u>101828904</u>	PD2 DC Cordset, 113-inch	1
8	<u>101828905</u>	PD2 DC Cordset, 154-inch	1
9	<u>101828906</u>	Pd2 Dc Cordset 250 Inch	1
10	<u>102273201</u>	PD2 Case (includes item 11)	1
11	7577	Screw, #10 X 0.50 Phillips Pan-Head	12
12	<u>102273301</u>	PD2 Transformer Asm	1
13	<u>102273401</u>	PD2 Heatsink	1
14	<u>102273601</u>	PD2 Wire Asm	1
15	<u>102273701</u>	PD2 Fuse Asm	1
16	<u>102273801</u>	PD2 Ammeter	1
17	<u>102273901</u>	PD2 AC Cord Bushing	1
18	<u>102274001</u>	PD2 Handle	1
19	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes items 20 and 21)	1
20	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
21	N/A	Kit, Relay, 48v 30a Instrns	1
22	<u>103517601</u>	Pd2 Rectifier Kit	1
23	<u>CCX8506</u>	Circuit Breaker, 15-Amp/120-Volt	1
Note: Item 16 not shown. Level 1 Battery Charger part numbers include one AC and one DC cord. They do not include all of the level 2 cords listed.			

17

 E

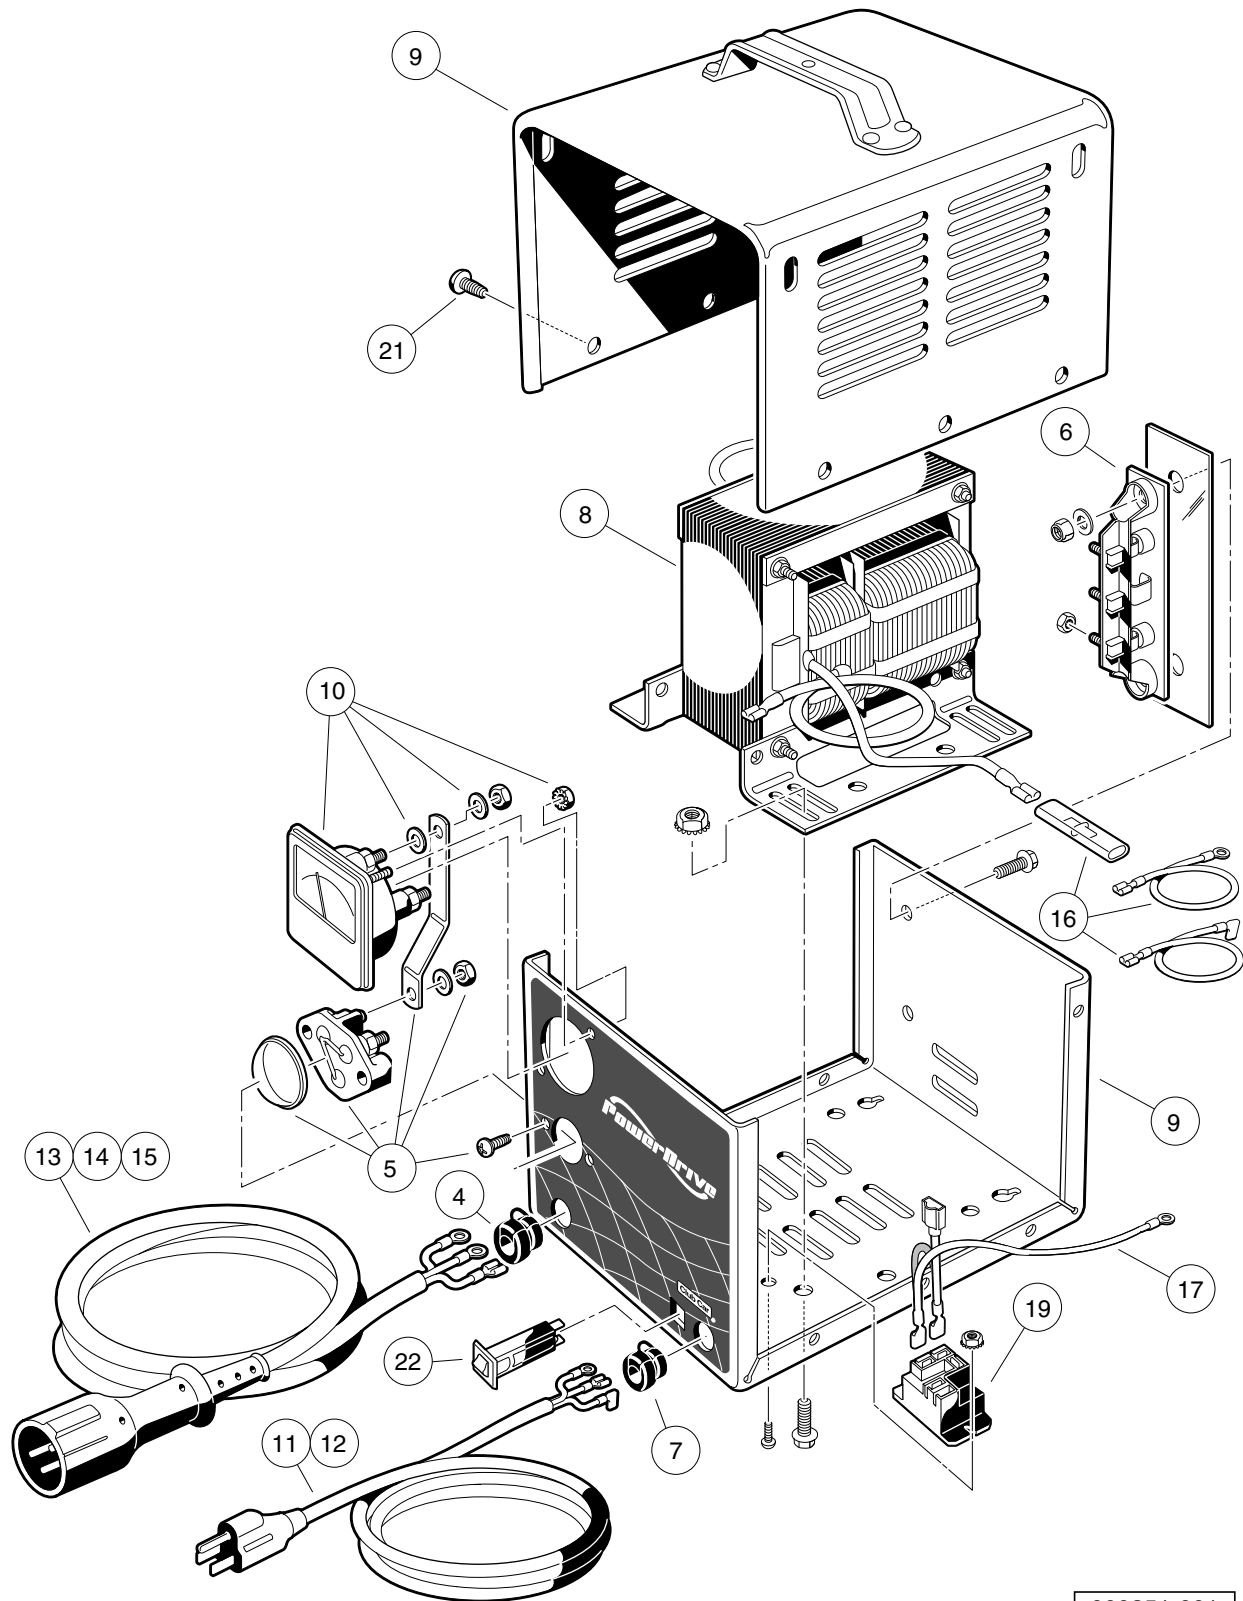


000351-001

POWERDRIVE BATTERY CHARGER (MODEL 17930), DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101802201</u>	48V/17A PowerDrive (9-ft DC, 6-ft AC Cord)	1
2	<u>101802202</u>	48V/17A PowerDrive (12-ft DC, 9-ft AC Cord)	1
3	<u>101802203</u>	48V/17A PowerDrive (20-ft DC, 9-ft AC Cord) (includes items 4 through 22)	1
4	<u>1012098</u>	Bushing, DC Cord	1
5	<u>1012101</u>	Fuse Assembly	1
6	<u>1015914</u>	Rectifier with Heatsink Assembly	1
7	<u>1015917</u>	Bushing, AC Cord	1
8	****	Transformer, Battery Charger	1
9	<u>101828301</u>	Case Assembly	1
10	<u>101828501</u>	Ammeter	1
11	<u>101828801</u>	Cord, AC, 80-Inch (203 cm)	1
12	<u>101828802</u>	Cord, AC, 108-Inch (274 cm)	1
13	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
14	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
15	<u>101828903</u>	Cord, DC, 250-Inch (635 cm)	1
16	<u>101831101</u>	Wire Assembly Kit	1
17	<u>101914401</u>	Assembly, Voltage Suppressor	1
18	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes items 19 and 20)	1
19	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
20	N/A	Kit, Relay, 48v 30a Instrns	1
21	7577	Screw, #10 X 0.50 Phillips Pan-Head	10
22	<u>CCX8506</u>	Circuit Breaker, 15-Amp/120-Volt	1
**** Special order item available upon request.			
Note: Level 1 Battery Charger part numbers include one AC and one DC cord. They do not include all of the level 2 cords listed.			

 17
E

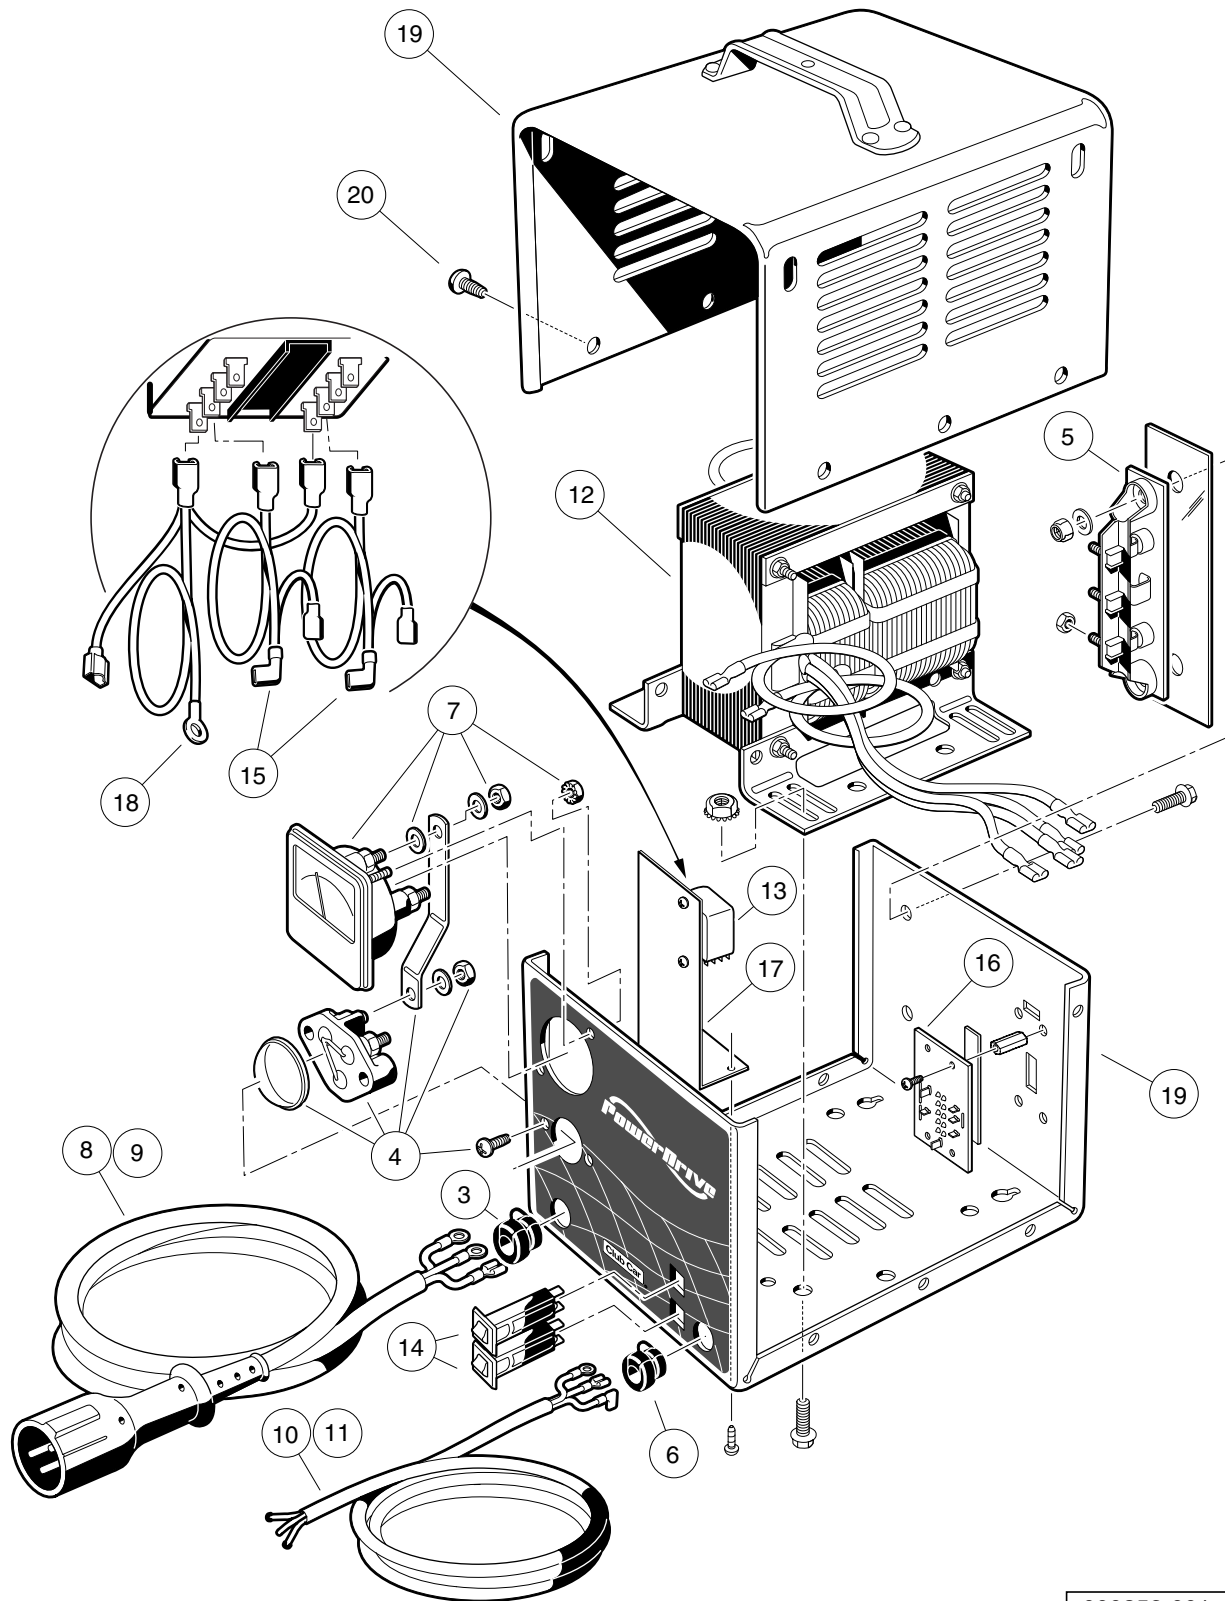


000352-001

POWERDRIVE BATTERY CHARGER (MODEL 18780), EXPORT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101831503	Battery Charger, 48-Volt DC (8.5-ft DC, 6-ft AC)	1
2	101831504	Battery Charger, 48-Volt DC (12-ft DC, 9-ft AC) (includes items 3 through 20)	1
3	<u>1012098</u>	Bushing, DC Cord	1
4	<u>1012101</u>	Fuse Assembly	1
5	<u>1015914</u>	Rectifier with Heatsink Assembly	1
6	<u>1015917</u>	Bushing, AC Cord	1
7	<u>101828501</u>	Ammeter	1
8	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
9	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
10	<u>101831701</u>	Cord, AC, 80-Inch (203 cm), without Plug	1
11	<u>101831702</u>	Cord, AC, 118-Inch (203 cm), without Plug	1
12	101838201	Transformer, Export Battery Charger	1
13	<u>101838301</u>	Relay, Export Charger	1
14	101838401	Circuit Breaker	2
15	101838501	Kit, Wire Assembly	1
16	101838601	Four-Position Switch	1
17	****	Mounting Bracket, Relay	1
18	101914401	Assembly, Voltage Suppressor	1
19	N/A	Case, Charger	1
20	7577	Screw, #10 X 0.50 Phillips Pan-Head	10
**** Special order item available upon request. Note: Level 1 Battery Charger part numbers include one AC and one DC cord. They do not include all of the level 2 cords listed.			

17

 E

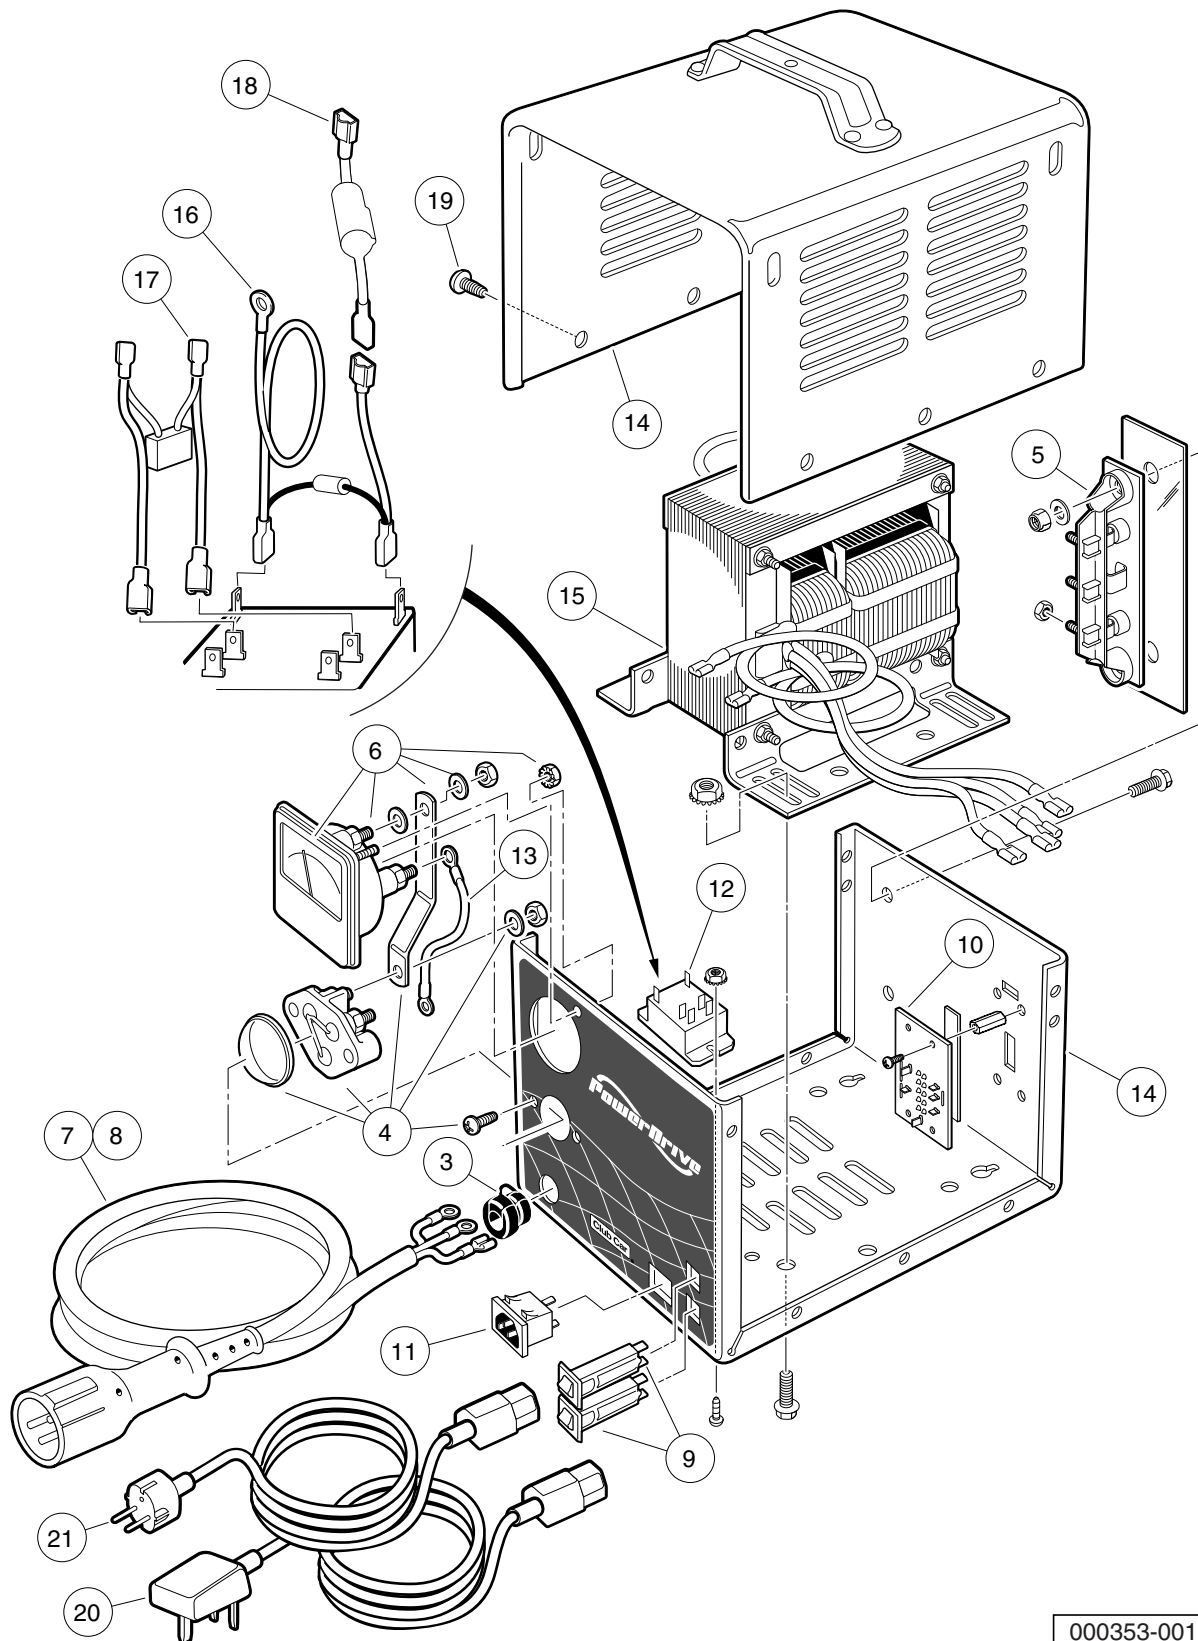

000353-001

POWERDRIVE BATTERY CHARGER (MODEL 20310), EUROPEAN

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101956201</u>	Battery Charger, 48-Volt w/ 4-Position Switch (8.5-ft DC)	1
2	<u>101956202</u>	Battery Charger, 48-Volt w/ 4-Pos. Switch (12-ft DC) (includes items 3 through 19)	1
3	<u>1012098</u>	Bushing, DC Cord	1
4	<u>1012101</u>	Fuse Assembly	1
5	<u>1015914</u>	Rectifier with Heatsink Assembly	1
6	<u>101828501</u>	Ammeter	1
7	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
8	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
9	<u>101838401</u>	Circuit Breaker	2
10	<u>101838601</u>	Four-Position Switch	1
11	<u>101973501</u>	Receptacle, AC Cord	1
12	<u>101987501</u>	Relay	1
13	N/A	Wire, Jumper	1
14	N/A	Case, Charger	1
15	****	Transformer, European Battery Charger	1
16	****	Suppressor, AC Voltage	1
17	****	Assembly, Wire	1
18	****	Limiter, Current	1
19	7577	Screw, #10 X 0.50 Phillips Pan-Head	10
20	<u>101958201</u>	Cord, UK, AC, Battery Charger	1
21	<u>101958301</u>	Cord, European AC, Battery Charger	1
**** Special order item available upon request.			
Note: Level 1 Battery Charger part numbers include one AC and one DC cord. They do not include all of the level 2 cords listed.			

17

E

 
MAINTENANCE AND SERVICE TOOLS

18

G

E

D

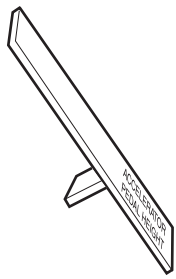


1



2



 3

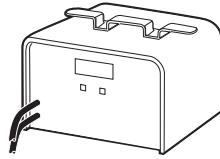


4




5



 6

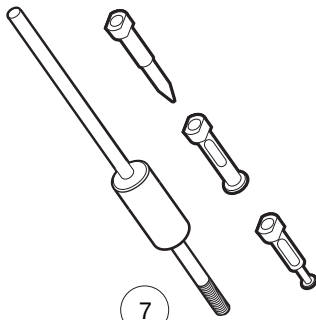


7

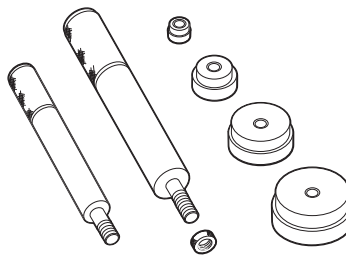 

8



 
9

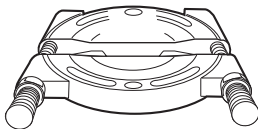


10



 11

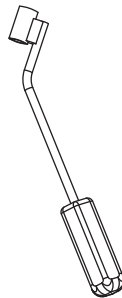


12

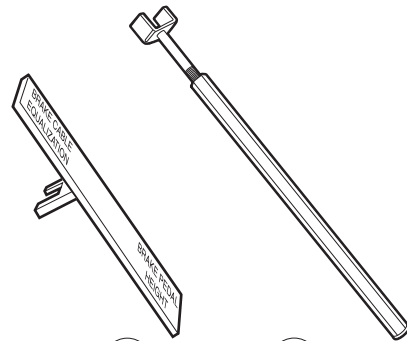 

14

15

 
13

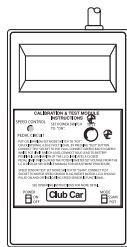


16



 17




18

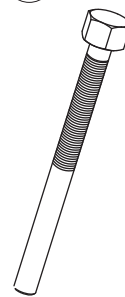 

19

MAINTENANCE AND SERVICE TOOLS

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	18 G E D
		1 2 3 4 The following tool list includes all tools available from Club Car for maintenance and service procedures for gasoline, electric, and/or diesel vehicles, both past and present models. Be sure to carefully examine the tool list for applicability to your vehicle before ordering.				
1	<u>101871001</u>	Accelerator Pedal Adjustment Tool		1	1	
2	<u>101813202</u>	Adhesive, Guide Ring, 3-Gram Tube			1	
3	<u>101641202</u>	Arbor		1		
4	<u>101831901</u>	Battery Discharge Machine, 36/48 Volt			1	
5	<u>1014305</u>	Battery Terminal Protector Spray	1	1	1	
6	<u>1011767</u>	Battery Thermometer	1	1	1	
7	<u>1016417</u>	Bearing and Oil Seal Remover Assembly	1	1	1	
8	<u>1016416</u>	Bearing Driver Set	1	1	1	
9	<u>1012811</u>	Bearing Puller	1	1	1	
10	<u>1012812</u>	Bearing Puller Wedge Attachment	1	1	1	
11	<u>1013582</u>	Brake Adjustment Tool (used only on vehicles with manually adjusted mechanical brakes)		1	1	
12	<u>102555501</u>	Brake Cable Release Tool	1	1	1	
13	<u>102249901</u>	Brake Pedal Adjustment Tool Kit (used for the Carryall Electric Industrial Truck only) (includes items 14 and 15).....			1	
14	****	Brake Pedal Adjustment Tool			1	
15	****	Brake Pedal Tension Tool			1	
16	<u>101887101</u>	Calibration Test Module			1	
17	<u>101808401</u>	Cam Installation Tool		1		
18	<u>102562401</u>	Charger Bezel Tool			1	
19	<u>102686101</u>	Clutch Removal Tool (for 4x4 vehicles)	1	1		
		Please refer to the maintenance and service manual for proper tool application. **** Special order item available upon request				

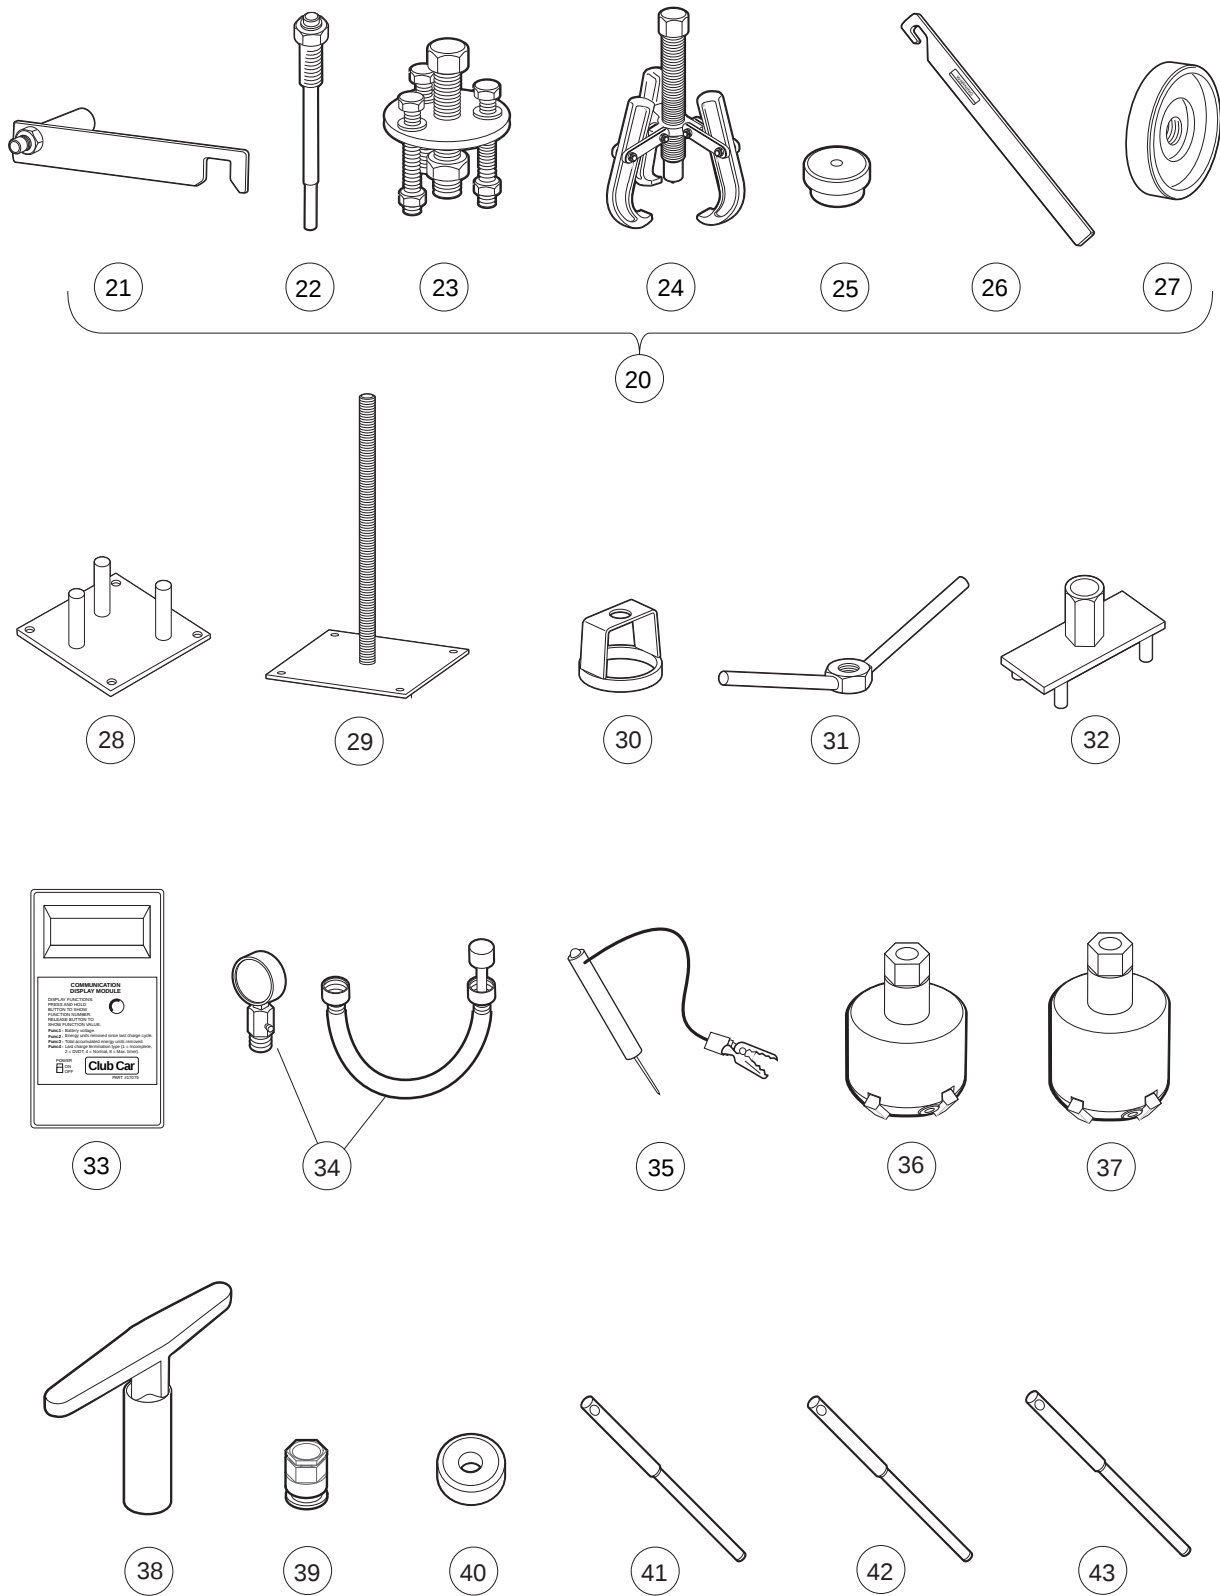 

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	18 G E D
		1 2 3 4				
20	<u>1014510</u>	Clutch Tool Kit (includes items 21 - 27)		1		
21	<u>1014498</u>	Clutch Alignment Tool (for pre-unitized transaxle vehicles built prior to 1997 model year)		1		
22	<u>1014496</u>	Drive Clutch Puller (for Kawasaki engines only)		1		
23	<u>1014497</u>	Drive Clutch Hub Puller (for Kawasaki engines only)		1		
24	<u>1014508</u>	Driven Clutch Cam Puller (for Kawasaki engines only)		1		
25	<u>1014507</u>	Driven Clutch Puller Plug (for Kawasaki engines only)		1		
26	<u>1015524</u>	Drive Clutch Holder Tool Assembly (for Kawasaki engines only)		1		
27	<u>101809101</u>	Press Weldment (for Kawasaki engines only)		1		
28	<u>102601501</u>	Drive ClutchFixed Sheave Tool (for 4x4 vehicles)	1	1		
29	<u>102603501</u>	Driven Clutch Spring Compression Base (for use with items 30 and 31) (for 4x4 vehicles)	1	1		
30	<u>102605201</u>	Driven Clutch Spring Compression Collar (for use with items 29 and 31) (for 4x4 vehicles)	1	1		
31	<u>102606101</u>	Driven Clutch Spring Compression Nut (for use with items 29 and 30) (for 4x4 vehicles)	1	1		
32	<u>102607501</u>	Drive Clutch Spider Removal Tool (for 4x4 vehicles)	1	1		
33	101831801	Communication Display Module			1	
34	101641002	Compression Gauge and Adapter		1		
35	1011273	Continuity Tester		1	1	
36	<u>102773801</u>	Cutter, Valve Seat, #122		1		
37	<u>102773901</u>	Cutter, Valve Seat #115		1		
38	<u>102774101</u>	Wrench, T, #505.....		1		
39	<u>102774101</u>	Adapter, T-Wrench		1		
40	102675401	Cutter, Valve Seat, 60 Degree (requires item 51) (for Honda GX620 Gasoline Engines)		1		
41	<u>102774201</u>	Pilot, 6.6 MM		1		
42	<u>102774301</u>	Pilot, 6.62 MM.....		1		
43	<u>102774401</u>	Pilot, 6.65 MM.....		1		
		Please refer to the maintenance and service manual for proper tool application.				

18

 
G

E


D




44

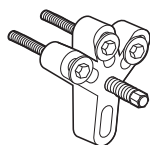

45

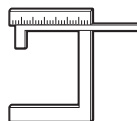 


46

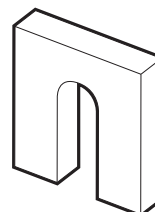 


47



 48





49

 


50



  51

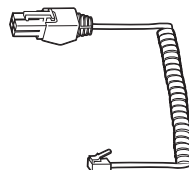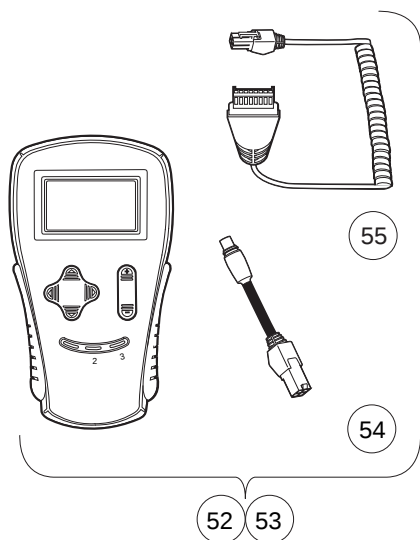

56

 

57



58



59 60




61

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	18 G E D
		1 2 3 4				
44	<u>1012151</u>	Dry Moly Lubricant	1	1	1	
45	<u>1016627</u>	Flywheel Puller Kit (for Kawasaki Engines)		1		
46	<u>102669901</u>	Gauge, Carburetor Float Level (for Honda GX620 Gasoline Engines)		1		
47	<u>1016418</u>	Gear Yoke	1	1	1	
48	<u>101933101</u>	Governor Shaft Installation Tool (for Kawasaki Engine Vehicles)		1		
49	<u>102169401</u>	Hydraulic Brake Adjuster (for Turf/CA 272/472, Pioneer/XRT 1200, Bobcat 2100, HUV 4213)			1	
50	<u>1011478</u>	Hydrometer	1	1	1	
51	<u>1013593</u>	Internal Retaining Ring Pliers	1	1	1	
52	<u>102248803</u>	IQ Display Module (IQDM) Kit (IQ System and IQ Plus vehicles)			1	
		(includes items 54 and 55)				
53	<u>102248804</u>	IQ Display Module (IQDM-P) Kit (IQ System and IQ Plus vehicles)			1	
		(includes items 54 and 55)				
54	<u>102251501</u>	Adaptor, Cable			1	
55	<u>102241502</u>	IQDM Series 2 Cable			1	
56	<u>102241501</u>	IQDM Series 1 Cable (replacement)			1	
57	<u>101928701</u>	Liquid Gasket (transaxle case)	1	1	1	
58	<u>102243402</u>	Moly-Teflon Lubricant (4-oz. (113-gram) tube)			1	
59	<u>101997201</u>	Paint, Touch-Up – Beige*		1	1	
59	<u>101997207</u>	Paint, Touch-Up – Black*		1	1	
59	<u>101997212</u>	Paint, Touch-Up – Burgundy*		1	1	
59	<u>101997211</u>	Paint, Touch-Up – Classic Blue (Navy)*		1	1	
59	<u>101997205</u>	Paint, Touch-Up – Dark Gray*	1	1	1	
59	<u>101997209</u>	Paint, Touch-Up – Dark Green*	1	1	1	
59	<u>101997204</u>	Paint, Touch-Up – Gray*	1	1	1	
59	<u>101997203</u>	Paint, Touch-Up – Red*	1	1	1	
59	<u>101997206</u>	Paint, Touch-Up – Royal Blue (Pacific Blue)*		1	1	
59	<u>101997202</u>	Paint, Touch-Up – White*	1	1	1	
60	<u>102562301</u>	Paint, Precedent Underbody – Gray		1	1	
61	<u>102587201</u>	Paint Pen, Touch-Up, Precedent Underbody – Black		1	1	
Please refer to the maintenance and service manual for proper tool application. * Item 59 is not for use on Surlyn[®] body material, which is used on Precedent vehicles.						



 62

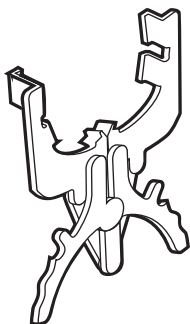

63

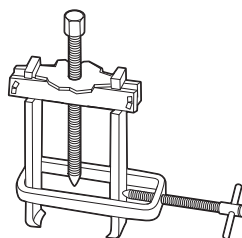 


64



65



 66



67



68



 
69



70




71

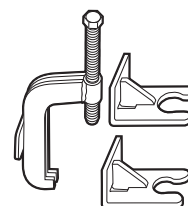

72



 
73

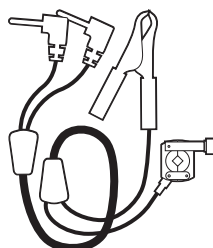


74



 75



76

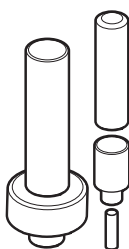 

77



83



84



85




86

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	18
		1 2 3 4				G
62	<u>1016414</u>	Piston Ring Compressor Kit (FE290, FE350 and FE400 engines)		1		E
63	<u>1016415</u>	Piston Ring Pliers (for Kawasaki Engines)		1		D
64	<u>102668801</u>	Puller, Special Use (for Kubota D722 Diesel Engines)	1			
65	<u>1012549</u>	Retaining Ring Pliers, 45° External	1	1	1	
66	<u>1012560</u>	Retaining Ring Pliers, 90° Internal	1	1	1	
67	<u>101823101</u>	Safety First Card (50 per pack)	1	1	1	
68	<u>1012809</u>	Seal Puller	1	1	1	
69	<u>102330901</u>	Spanner Wrench (for coil over shock front suspension vehicles only)	1	1		
70	<u>1014264</u>	Steering Column Bearing Press Tool		1	1	
71	<u>1014259</u>	Steering Column Retaining Ring Tool		1	1	
72	<u>102061201</u>	Steering Wheel Puller Tool	1	1	1	
73	<u>AM10753</u>	Tachometer (includes gasoline engine pick up lead only)	1	1		
74	<u>AM10771</u>	Tachometer Diesel Probe (for use with item 73)	1			
75	<u>1014162</u>	Transaxle Axle Seal Tool		1		
76	<u>1014161</u>	Transaxle Pinion Seal Tool		1		
77	<u>1014115</u>	Transmission Tool Kit		1		
78	<u>101611003</u>	Tune-Up Kit, All OHV (for FE290, FE350, FE400 only) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
79	<u>AM11804</u>	Tune-Up Kit, Gx620 (for Honda Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
80	<u>AM11805</u>	Tune-Up Kit, D722 (for Kubota Engines) (includes air filter, oil filter, fuel filters, water separator filter) (not shown)	1			
81	<u>AM1220301</u>	Tune-Up Kit, Precedent (for FE290/350 Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
82	<u>AM1232401</u>	Tune-Up Kit, FH680D (for Kawasaki V-Twin Engines) (includes oil filter, fuel filter, air filter, and spark plugs) (not shown)		1		
83	<u>1016413</u>	Valve Clearance Adjuster Screw Holder (for FE290 engines only)		1		
84	<u>102674601</u>	Valve Guide Driver (for Honda GX620 Gasoline Engines)		1		
85	<u>101641201</u>	Valve Guide Reamer (FE290, FE350, and FE400 only)		1		
86	<u>102674401</u>	Valve Guide Reamer, 6.6 mm (for Honda GX620 Gasoline Engines)		1		



 
87

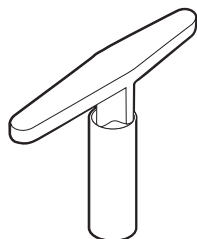


88

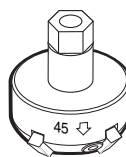 


89

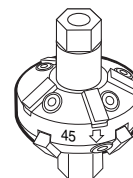 


90

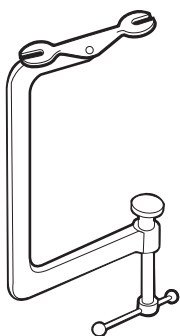 

91

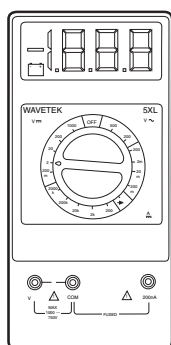 


92

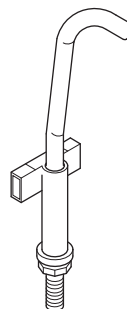 


93



 94

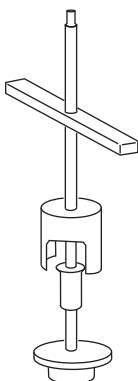

95

 

96

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	18 G E D
		1 2 3 4				
87	<u>1016552</u>	Valve Seat Cutter Guide		1		
88	<u>1016551</u>	Valve Seat Cutter T-Wrench		1		
89	<u>1016553</u>	Valve Seat Cutter, 45° (32 mm diameter) (for FE290 engines only)		1		
90	<u>1016554</u>	Valve Seat Cutter, 45°/30° (35 mm diameter)		1		
91	<u>101641101</u>	Valve Spring Compressor		1		
92	<u>1011480</u>	Volt Ohm Meter	1	1	1	
93	<u>102570401</u>	Tool, Tensioning, Starter Generator (For Precedent vehicles)		1		
94	<u>103601401</u>	Puller, Drive Clutch, XRT 950*		1		
95	<u>103601701</u>	Tool, Disassembly, Driven Clutch, XRT 950		1		
96	<u>103600501</u>	Screw, Driven Clutch Disassembly, M6, XRT 950		1		
*Note: The XRT 950 Drive Clutch Puller requires the use of Screw, Driven Clutch Disassembly, CCI Part Number <u>103600501</u>.						

INDEX

Part Number and Page

AM10753	18-9	13-3, 13-9, 13-11, 14-13	1011779	4-7
AM10771	18-9	8248 10-3, 13-9, 14-13	101187702	4-5
AM10080	13-5	8251 1-19, 1-21, 13-11	1011893	5-9
AM10081	13-5	8450 12-3	1011895	5-7, 5-9
AM10419	12-9	8639 14-19	1011930	5-7, 5-9
AM10724	7-5, 9-5	8717 4-9, 4-11, 6-9, 13-3, 13-9	1011931	1-25, 4-9, 4-11
AM1232301	8-7	8754 1-17, 4-7, 4-9, 4-11, 5-3, 5-7, 5-9, 5-11, 5-15, 5-17, 6-15, 6-17	1011988	10-3
CCX8506	17-3, 17-5, 17-7	8755 1-29, 5-11, 5-15	1011990	1-17
183	10-17, 12-3, 13-3	8797 10-5	1012098	17-3, 17-5, 17-7, 17-9, 17-11
304	1-27	8861 5-9	1012101	17-7, 17-9, 17-11
320	1-17, 1-27, 1-29	8963 1-25	1012151	18-7
332	1-3, 1-19, 1-21, 1-23, 1-29, 10-17, 11-3, 11-5, 13-11, 14-13	8990 5-7, 5-17, 6-9, 14-13, 14-19	1012285	10-15, 13-3, 13-11, 14-13, 14-19
334	1-29, 4-9, 4-11, 5-3, 5-7, 5-17, 7-15, 8-15, 9-15	1010124 5-11	1012295	6-9
357	5-11	1010138 1-27, 5-9	1012303	1-29, 5-11, 5-15
451	11-3, 11-5, 15-3, 15-5, 15-7	1010142 5-15	1012304	5-15
705	6-15, 6-17, 7-15, 8-15, 9-15	1010144 5-15	1012333	13-11
706	5-11	1010145 5-15	1012412	1-19, 1-21
808	12-3	1010150 5-11	1012431	13-9, 14-21
1017	6-7, 14-7	1010219 5-9	1012467	5-7
1028	4-5	1010436 1-13	1012528	11-3, 11-5, 14-19
1032	4-5	1010543 1-23	1012549	18-9
1035	4-7, 5-7, 5-9	1010545 1-27	1012560	18-9
1241	1-5, 1-25, 4-5, 4-7, 4-9, 4-11, 6-9, 6-15, 6-17, 6-19, 11-3, 11-5, 15-3	1010577 7-15, 8-15, 9-15	1012571	7-15, 8-15, 9-15
1242	4-7, 6-9, 6-15, 6-17, 14-19	1010805 4-5	1012594	13-9
1308	5-9	1010829 4-7	1012604	5-3
1606	10-17	1010877 4-5	1012605	5-3
1624	4-9, 4-11, 5-7, 5-17	1010878 1-29, 4-5	1012649	10-3
2402	5-9	1010921 4-5	1012711	13-3
7048	5-13	1010927 4-5	1012714	13-5
7173	6-19	1010932 4-5	1012740	13-5
7174	5-3, 6-15, 6-17, 10-15, 11-3, 11-5, 14-19, 15-3, 15-5	1010933 4-5	1012741	13-5
7310	2-3	1010934 6-19, 15-3, 15-5	1012747	13-5
7311	1-25	1010953 4-3	1012748	13-5
7330	13-7, 16-3	1010954 6-9, 13-3, 13-9	1012752	13-3
7335	13-5, 16-3	1010984 2-3	1012809	18-9
7336	16-3	1010993 1-19, 1-21	1012811	18-3
7473	1-25, 4-5, 4-7, 4-9, 4-11, 6-9, 6-19	1011084 4-13	1012812	18-3
7539	5-9	1011273 18-5	1012830	6-15, 6-17, 10-15, 11-3, 11-5
7540	5-7, 5-9	1011280 15-3	1012836	12-9
7555	5-7, 5-9, 5-17	1011285 15-3	1012896	13-3
7577	17-5, 17-7, 17-9, 17-11	1011290 15-3	1012986	6-11
7602	5-7, 5-9	1011291 13-7	1012987	13-9
7716	4-5, 4-9, 4-11	1011402 4-5	1012991	6-13
7818	6-9	1011411 15-3	1013001	6-13
7847	1-19, 1-21, 1-25, 1-29, 11-3, 11-5	1011415 5-15	1013003	6-13
7893	6-9, 13-11	1011418 4-5	1013005	6-13
8056	14-21	1011478 18-7	101301102	6-13
8057	13-9, 14-21	1011480 18-11	1013035	5-7, 5-17
8058	13-9	1011578 1-27, 5-3	1013042	5-7, 5-17
8067	5-13	1011652 1-23	1013044	5-7, 5-17
8233	1-3, 1-19, 1-21, 1-25, 1-29, 4-9, 4-11, 10-3,	1011694 4-9, 4-11	1013051	5-7, 5-17
		1011697 5-3, 8-15, 9-15, 10-11, 10-15, 14-17	1013052	5-7, 5-17
		1011700 4-9, 4-11	1013061	13-3, 14-15
		1011734 4-13	1013164	5-15
		1011767 18-3	1013461	6-7, 10-5, 14-7
			1013462	10-5

INDEX

1013531	4-7	1014162	18-9	1015649	7-3, 8-5, 9-3
1013582	18-3	1014193	13-7	1015737	6-9
1013587	13-9	1014201	15-3, 15-5, 15-7	1015741	6-9
1013589	6-9, 13-9	1014207	13-7	1015752	6-9, 10-17, 14-11
1013590	13-9	1014213	5-3	1015814	11-3, 11-5
1013591	13-9	1014214	5-3	101584502	10-15
1013593	18-7	1014217	5-3	1015914	17-7, 17-9, 17-11
1013609	6-9	1014259	18-9	1015917	17-7, 17-9
1013687	10-3	1014264	18-9	1015921	10-5
1013700	10-15	1014276	5-11	1015932	6-15, 6-17
1013734	11-3, 11-5, 14-19	1014287	12-3	1015969	7-3, 8-5, 9-3
1013746	10-3, 10-5, 10-11, 10-13, 10-21	1014288	5-3, 6-19, 12-3, 14-19	1016004	10-5
1013760	13-3	1014289	6-13	1016074	6-15, 6-17
1013768	13-7	1014304	14-17	1016103	10-11
1013769	13-7	1014305	18-3	101611003	18-9
1013770	13-7	1014306	1-19, 1-21	101611402	16-5
1013771	13-7	1014375	6-19	1016183	5-3
1013772	13-7	1014453	12-3	1016201	12-3, 13-9
1013773	13-7	1014454	12-9	1016203	12-5
1013774	13-7	1014496	18-5	1016269	5-3
1013787	13-7	1014497	18-5	1016289	12-3
1013792	13-7	1014498	18-5	1016337	13-5
1013794	13-7, 16-3	1014507	18-5	1016338	13-5
1013857	6-11, 14-9	1014508	18-5	1016341	13-3
1013869	4-5	1014510	18-5	1016342	13-9
1013870	4-5	101454902	5-15	1016346	5-9
1013871	4-9, 4-11	1014555	5-15	1016349	5-9
1013876	1-27, 4-5	1014573	5-15	1016350	5-9
1013924	4-3, 7-15, 8-15, 9-15	1014675	5-15	1016351	5-9
1013983	1-15	1014727	13-9	1016353	5-9
1014007	4-9, 4-11, 13-3	1014807	13-9	1016384	5-11
1014049	12-3	1014901	5-15	1016385	5-9
1014050	12-3	1014902	5-15	1016386	5-11
1014052	12-3	1014928	10-3	1016387	5-11
1014055	12-3	1014947	14-19	1016389	5-11
1014056	12-3	1014948	6-9, 14-19	101641002	18-5
1014057	12-3	101503202	1-3	101641101	18-11
1014058	12-3	1015064	13-9	101641201	18-9
1014059	12-3	1015072	14-17	101641202	18-3
1014062	12-3	1015137	10-3, 10-5, 10-11, 10-13, 10-21	1016413	18-9
1014063	12-3	1015139	10-3, 10-5	1016414	18-9
1014065	6-9, 12-3, 13-9	1015143	10-3, 10-5	1016415	18-9
1014070	12-9	101524001	6-15	1016416	18-3
1014072	12-9	101524002	6-17	1016417	18-3
1014076	12-9	1015330	7-9, 11-3	1016418	18-7
1014078	12-9	1015332	7-3, 8-5, 9-3	1016423	6-9
1014080	12-9	1015345	6-9	101642572	10-7
1014089	13-9	1015371	6-9	101642575	10-7, 10-9, 10-19
1014115	18-9	1015372	6-9	101642578	10-7, 10-9, 10-19
1014116	10-3	1015373	6-9	101642580	10-7, 10-9, 10-19
1014119	6-9	1015405	6-9	101642582	10-7, 10-9, 10-19
1014125	5-3	1015426	10-17	101642585	10-9
1014126	5-3	101547601	3-5	1016429	7-7, 8-3, 9-7
1014145	6-9, 13-9	1015524	18-5	1016430	7-9
1014153	4-3	1015583	1-29, 5-11, 5-15	1016431	7-9
1014161	18-9	1015597	5-7, 5-9, 5-13	1016432	7-7, 8-3, 9-7, 13-3

INDEX

1016435	7-7	1016506	7-11, 8-11, 9-11	1016568	7-13
1016436	7-9, 8-9, 9-9	1016507	7-3, 8-5, 9-3	1016569	7-9, 8-9, 9-9
1016437	10-7, 10-9	1016509	7-13	1016570	7-7, 8-3, 9-7
1016438	10-11, 10-13, 10-21	1016510	7-11, 8-11, 9-11	1016571	7-13, 8-13, 9-13
1016439	10-11	1016513	13-3	1016572	10-11, 10-13, 10-21
1016440	7-9, 8-9, 9-9, 10-11, 10-13, 10-21	1016516	7-13	1016576	7-7, 8-3, 9-7
1016441	10-11, 10-13, 10-21	1016517	7-9, 8-9, 9-9	1016578	7-5, 9-5
1016443	7-3	1016518	9-9	1016579	7-5, 9-5
1016444	10-11, 10-13, 10-21	1016519	7-9, 9-9	1016580	7-13
1016445	7-5, 9-5	1016520	7-11	1016581	7-7, 8-3, 9-7
1016446	7-9, 7-11	1016521	7-11, 8-11, 9-11	1016582	10-11, 10-13, 10-21
1016447	7-9	1016523	7-9	1016583	7-9, 8-9, 9-9
1016448	7-9	1016524	7-3	1016584	7-11, 8-11, 9-11
1016449	7-9, 8-9, 9-9	1016525	7-3	1016585	10-7, 10-9
1016450	7-9, 8-9, 9-9	1016526	7-3	1016586	7-5, 9-5
1016451	7-9, 8-9	1016531	7-3, 8-5, 9-3	1016587	7-5, 8-7, 9-5
1016452	7-9, 8-9, 9-9	1016532	7-13	1016588	7-5, 8-7, 9-5
1016453	7-11, 8-11	1016533	7-13	1016627	18-7
1016454	7-11, 8-11, 9-11	1016535	7-11, 8-11, 9-11	1016630	6-11
1016455	7-5, 8-7, 9-5	1016536	7-3	1016672	13-7
1016456	7-3, 7-5, 7-11, 8-5, 9-3, 9-5	1016537	7-7, 8-3, 9-7	1016801	12-3
1016457	7-7, 8-3, 9-7	1016538	7-11, 8-11, 9-11	1016851	14-21
1016458	7-9, 7-11, 8-9, 9-9	1016539	7-3, 8-5, 9-3	1016879	6-7, 14-7
101645901	7-13	1016541	7-13, 8-13, 9-13	1016880	6-7, 14-7
101645902	7-13	1016542	7-9, 8-9	1016883	6-15, 6-17
101645903	7-13	1016544	7-5, 7-9, 7-11, 8-7, 8-9, 8-11, 9-5, 9-9, 9-11	1016901	12-3
1016460	7-13	1016545	7-9, 8-9	1016904	8-9, 9-9, 11-5
101646101	7-13	1016546	10-15	1016916	1-23
101646102	7-13	1016547	7-3, 7-13, 8-5, 9-3, 9-13, 10-11, 10-13, 10-21	1016947	13-9
101646103	7-13	1016548	7-5	1016952	1-19, 1-21
1016467	7-7, 8-3, 9-7	1016549	7-9, 8-9, 9-9	1017029	4-5
1016469	7-13	101655001	7-13	1017062	6-7, 14-7
1016470	7-13, 8-13, 9-13	101655002	7-13	1017064	6-7, 14-7
1016471	7-9	101655003	7-13	1017065	6-7, 14-7
1016472	7-11, 8-11, 9-11	101655004	7-13	1017082	13-3
1016473	7-7, 8-3, 9-7	101655005	7-13	1017141	1-19, 1-21
1016474	7-9, 8-9, 9-9	101655006	7-13	1017188	12-7
101647501	7-13	101655007	7-13	1017203	10-3
101647502	7-13	101655008	7-13	1017221	7-3
1016479	7-9, 8-9, 9-9	101655009	7-13	1017226	5-3
1016480	10-11, 10-13	1016551	18-11	1017231	13-3
101648102	10-11, 10-13, 10-21	1016552	18-11	1017235	5-15
101648203	7-7, 8-3, 9-7	1016553	18-11	1017266	5-9
1016483	7-9, 8-9, 9-9	1016554	18-11	1017273	5-5
1016484	7-7	1016558	7-13	1017313	5-3
1016486	10-7, 10-9	1016559	7-13	1017314	5-3
1016489	7-9, 8-9, 9-9	1016560	7-9, 9-9	1017315	5-3
101649002	10-11, 10-13, 10-21	1016561	7-5, 8-7, 9-5	1017317	5-3
1016493	7-5	1016562	7-5, 7-13, 8-7, 8-13, 9-5, 9-13	1017378	4-9, 4-11
1016494	7-11, 8-11, 9-11	1016563	7-9, 8-9, 9-9	1017380	4-9, 4-11
1016496	7-11, 8-11, 9-11	1016564	7-11, 8-11, 9-11	1017424	4-9, 4-11
1016497	7-5, 9-5	1016565	7-11	1017434	8-9, 9-9
1016499	10-7, 10-9	1016566	7-9, 8-9, 9-9	1017435	9-9
1016501	10-7, 10-9	1016567	7-11	1017442	8-3, 9-7
1016502	7-7, 8-3, 9-7			1017443	8-9, 9-9, 9-11
1016505	7-5			1017444	9-9

INDEX

1017445	8-9, 9-9	101773308	8-13, 9-13	101828902	17-7, 17-9, 17-11
1017446	9-9	101773309	8-13, 9-13	101828903	17-7
1017447	9-11	101773310	8-13, 9-13	101828904	17-5
1017448	7-5, 8-7, 9-5	101773311	8-13, 9-13	101828905	17-5
101744901	8-13, 9-13	1017774	1-25	101828906	17-5
101744902	8-13, 9-13	101791101	4-3	101830701	14-9
1017450	8-13, 9-13	1017944	15-3	101831101	17-7
101745101	8-13, 9-13	1017947	15-3	101831503	17-9
101745102	8-13, 9-13	1017949	15-3	101831504	17-9
1017453	8-13, 9-13	1017950	15-3	101831701	17-9
1017454	8-9, 9-9	1017953	15-3	101831702	17-9
1017455	7-5, 8-7, 9-5	101795701	14-17	101831801	18-5
1017456	7-7, 8-3, 9-7	101796201	4-9, 4-11	101831901	18-3
101745701	8-13, 9-13	101796501	14-15	101832001	14-15
101745702	8-13, 9-13	101796801	14-15	101832101	7-15
1017458	8-3, 9-7	101801001	14-15	101832202	10-15
1017460	8-3, 9-7	101802101	14-15	101832302	10-15
1017461	10-7, 10-9	101802201	17-7	101832601	8-15, 9-15
1017463	8-7, 9-5	101802202	17-7	101832701	7-15, 8-15, 9-15
1017466	10-11, 10-13, 10-21	101802203	17-7	101833101	8-15, 9-15
1017468	7-5, 9-5	101802204	17-5	101833201	7-15
1017471	8-13, 9-13	101802205	17-5	101833401	12-9
1017472	8-11, 9-11	101802206	17-5	101833601	13-3
1017473	8-9, 9-9	101804301	10-17	101833701	6-13
1017474	8-5, 9-3	101805701	10-17	101833906	12-3
1017475	8-5, 9-3	101806901	1-31	101834001	12-9
1017476	8-5, 9-3	101808401	18-3	101834601	7-15, 8-15, 9-15
1017486	8-5, 9-3	101809101	18-5	101834801	13-3
1017487	8-11, 9-11	101811401	10-17	101835601	1-29
1017490	8-7, 9-5	101811501	10-17	101836201	12-9
1017500	9-3	101811801	10-17	101837101	10-17
1017501	8-13, 9-13	101811901	10-17	101837301	6-15, 6-17
1017502	8-13, 9-13	101812301	10-17	101838201	17-9
1017503	8-13, 9-13	101813001	10-17	101838301	17-9
1017504	8-11, 9-11	101813202	18-3	101838401	17-9, 17-11
1017507	7-7, 8-3, 9-7	101815501	4-3	101838501	17-9
1017508	8-11, 9-11	101815502	4-3	101838601	17-9, 17-11
1017510	8-13, 9-13	101816401	4-3	101850301	10-17
1017512	8-13, 9-13	101816501	4-3	101855002	14-13
1017513	8-11, 9-11	101816502	4-3	101855801	1-19, 1-21, 13-11
1017514	8-11, 9-11	101817401	4-9, 4-11	101856002	14-13
101751801	8-11, 9-11	101818801	4-9	101856102	6-9
101751802	8-11, 9-11	101820201	10-11	101856201	10-17
101751803	8-11, 9-11	101821501	10-17	101859301	11-3
1017653	6-13	101823101	18-9	101859401	11-5
1017686	12-9	101823201	4-3	101861901	4-9, 4-11
1017689	11-3, 11-5	101823801	4-3	101862001	4-11
1017696	4-9, 4-11	101824401	10-3, 10-5	101869302	6-13
1017705	14-15	101826801	14-19	101871001	18-3
101773301	8-13, 9-13	101827101	7-15, 8-15, 9-15	101874901	6-13
101773302	8-13, 9-13	101827801	14-19	101875001	6-13
101773303	8-13, 9-13	101828301	17-7	101875101	6-13
101773304	8-13, 9-13	101828501	17-7, 17-9, 17-11	101875102	6-13
101773305	8-13, 9-13	101828801	17-5, 17-7	101875201	6-13
101773306	8-13, 9-13	101828802	17-5, 17-7	101875301	6-13
101773307	8-13, 9-13	101828901	17-7, 17-9, 17-11	101875401	6-13

INDEX

101875501	6-13	101895501	16-3	101926901	13-3, 13-13
101875601	6-13	101896501	6-13	101927101	13-3
101875701	6-13	101896901	10-5	101927201	13-3
101875802	6-13	101897001	16-3	101927301	13-3
101876001	6-13	101897201	16-3	101927501	13-5
101876202	6-13	101897401	16-3	101927601	13-5
101876301	6-13	101897601	16-3	101927701	13-5
101876402	6-13	101898001	6-19	101927901	13-5
101876501	6-13	101903101	5-11	101928001	13-5
101877601	6-13	101903601	16-3	101928101	13-5
101877701	6-13	101903701	16-3	101928301	13-7
101878101	6-13	101905601	10-7	101928601	13-3
101878201	4-5	101905901	10-9	101928701	13-3, 16-3, 18-7
101878302	5-7	101906901	16-3	101929301	7-5
101879001	6-13	101908101	14-13	101929401	5-15
101879401	5-7, 5-17	101908401	14-13	101929801	12-3
101879501	5-7, 5-17	101908601	3-11	101929802	12-3
101879601	5-7, 5-17	101908701	14-19	101931501	3-11, 14-19
101879701	5-7, 5-17	101909201	7-5, 9-5	101932401	14-13
101879801	5-7, 5-17	101909301	7-5, 9-5	101932501	14-13
101879901	5-7, 5-17	101909401	7-5, 9-5	101932601	14-19
101880001	5-7, 5-17	101909501	7-5, 9-5	101932701	14-19
101880101	5-7, 5-17	101909701	7-3	101932902	13-13
101880201	5-7, 5-17	101910401	1-25, 14-19	101933101	18-7
101880301	5-7, 5-17	101910501	13-7	101936101	16-5
101881101	7-5, 9-5	101911401	16-5	101936801	14-11
101881701	10-17	101912401	4-13	101939901	6-13
101884801	7-15, 8-15, 9-15	101914401	17-7, 17-9	101942301	14-13, 15-3, 15-5, 15-7
101886101	13-3	101915201	3-5	101951501	13-11
101887101	18-3	101915401	7-11	101953101	4-7
101887601	7-3, 8-5, 9-3, 10-11	101915501	7-13	101953802	9-3
101889401	13-5	101915601	7-3	101953901	7-3
101890001	13-5	101915801	7-5	101954301	1-3, 1-23
101890101	13-3	101916001	9-13	101956201	17-11
101890201	13-3	101916101	8-5, 9-3	101956202	17-11
101890501	13-3	101916201	9-5	101958201	17-11
101890601	13-3	101916301	8-7, 9-5	101958301	17-11
101890901	13-7	101916701	6-15, 6-17, 12-3	101960501	1-31, 3-5
101891001	13-7	101917601	10-17	101963401	6-9, 7-15, 8-15, 9-15
101891301	13-3	101917701	10-17	101965205	14-19
101891401	13-7	101918501	4-5	101971001	10-17
101891501	13-7	101919801	4-9, 4-11	101971301	10-17
101891601	13-5	101920101	14-11, 14-13, 15-3, 15-5, 15-7	101972001	18-7
101891901	13-5	101921501	10-17	101972002	18-7
101892001	13-5	101922101	16-3	101972003	18-7
101892201	13-5	101922201	16-3	101972004	18-7
101892301	13-5	101922301	7-13	101972005	18-7
101892401	13-5	101922501	14-13	101972006	18-7
101892501	13-5	101922601	13-11	101972007	18-7
101892601	13-5	101923001	16-3	101972009	18-7
101892701	13-7	101923201	16-3	101972011	18-7
101892901	13-3	101923501	16-3	101972012	18-7
101893201	13-5	101923701	16-3	101972101	16-3
101893801	13-3	101923901	16-3	101972201	16-3
101893901	13-5	101925701	10-17	101972801	10-17
101895401	16-3	101926501	5-15	101973101	10-7, 10-9

INDEX

101973201	10-7	102186701	15-5, 15-7	102336101	10-15
101973301	10-9	102186901	15-5, 15-7	102352801	5-13
101973401	10-13, 10-21	102187001	15-5	102353201	5-13
101973501	17-11	102187101	15-5, 15-7	102353301	5-13
101978601	16-5	102187201	15-5, 15-7	102353401	5-13
101979101	13-9	102196901	14-13	102354104	5-13
101980801	13-5	102198001	6-11, 14-9	102354204	5-13
101980901	13-5	102221201	1-19, 1-21	102355102	1-17
101981001	13-5	102235201	15-3, 15-5, 15-7	102355301	6-19
101984801	5-3	102240104	15-3	102356601	16-3
101987501	17-11	102240501	14-19	102356801	16-3
101987701	10-3	102241501	18-7	102357001	16-3, 16-5
101987901	6-7, 14-7	102241502	18-7	102406701	10-3, 10-5
101988001	6-7, 14-7	102242101	1-5, 12-9	102430901	9-13
101988002	6-7, 14-7	102243402	18-7	102431001	9-11
101988101	6-7, 14-7	102243403	15-3, 15-5, 15-7	102453001	13-5
101988201	6-7, 14-7	102248803	18-7	102453101	13-5
101990703	6-11	102249901	18-3	102499001	14-9
101990801	4-7	102251501	18-7	102503221	1-25
101991101	6-11	102259801	14-19	102503222	1-25
101998211	1-23	102263601	14-19	102503224	1-25
101998212	1-23	102263701	14-19	102508601	14-9
101998214	1-23	102264001	6-9	102508701	14-9
101998215	1-23	102265601	15-3	102511301	14-17
101998501	1-23	102265701	15-3	102511302	14-17
102003201	10-3	102265801	15-3	102522001	10-5
102022101	4-7	102265901	15-3	102540301	7-15, 8-15, 9-15
102022602	5-17	102266001	15-3	102544201	1-25
102025801	1-3	102266101	15-3	102555501	18-3
102025901	6-11	102266501	14-19	102562401	18-3
102026001	4-9, 4-11	102266601	14-13	102570401	18-11
102031901	13-7	102266701	14-13	102581201	1-25
102044702	6-11	102267001	15-3	102588501	5-15
102044801	6-11	102273201	17-5	102601501	18-5
102045001	1-3	102273301	17-5	102603501	18-5
102045901	13-3	102273401	17-5	102605201	18-5
102048401	1-3	102273601	17-5	102606101	18-5
102051601	6-11	102273701	17-3, 17-5	102607501	18-5
102051701	6-11, 14-9	102273801	17-3, 17-5	102618601	1-7, 1-9
102051901	6-11, 14-9	102273901	17-3, 17-5	102668801	18-9
102061201	18-9	102274001	17-5	102669901	18-7
102065901	1-29, 7-15, 8-15, 9-15	102278001	5-3	102674001	18-5
102066201	4-7	102278801	3-9, 3-15	102674101	18-5
102101001	14-11	102289001	1-29	102674201	18-5
102101101	14-11	102289002	1-7, 1-9	102674401	18-9
102155801	12-9	102289201	5-17	102674601	18-9
102169401	18-7	102289301	1-29	102675001	18-5
102174201	1-23	102296530	1-25	102675101	18-5
102174202	1-23	102298240	1-7, 1-9	102675201	18-5
102174204	1-23	102304701	7-9	102675301	18-5
102174205	1-23	102304801	8-9, 9-9	102675401	18-5
102186001	15-5, 15-7	102310701	1-15	102686101	18-3
102186101	15-5, 15-7	102323101	4-5	102704701	15-5, 15-7
102186201	15-5, 15-7	102323201	4-5	102704801	15-5, 15-7
102186301	15-5, 15-7	102330901	18-9	102704901	15-5, 15-7
102186401	15-5, 15-7	102336001	10-15	102705001	15-5

INDEX

102711201	6-9	102825502	3-13	103345701	12-3
102753401	7-9, 9-9	102825601	3-7	103351001	5-9
102766701	1-3	102825701	3-13	103372101	10-3, 10-5
102771701	16-3	102828701	1-3, 1-11, 1-13	103372302	10-3, 10-5
102777401	14-17	102829703	1-17	103377201	4-7
102777601	1-19, 1-21	102829704	1-17	103377301	4-7
102777602	1-19, 1-21	102829802	1-17	103379501	13-11
102778501	1-3	102830201	1-9	103380201	4-3
102778502	1-3	102830401	5-11	103380202	4-3
102778503	1-3	102830501	1-7	103386202	8-5
102778504	1-3	102830801	14-9	103397901	17-5, 17-7
102778505	1-3	102831901	3-3, 3-13	103403101	14-19
102778507	1-3	102832001	3-3, 3-13	103414901	17-5, 17-7
102778509	1-3	102832601	14-17	103428501	17-3
102778601	1-3	102833301	3-3, 3-11	103428601	17-3
102779001	1-27	102840301	1-25	103428701	17-3
102779401	1-27	102850801	3-9	103429001	17-3
102779501	1-27	102850901	3-9	103429101	17-3
102796101	1-25	102851001	3-15	103429201	17-3
102796201	5-5	102851101	3-15	103429301	17-3
102796301	1-25	102851201	3-9	103429501	17-3
102796302	1-25	102851301	3-9	103429701	17-3
102796501	1-13	102851401	3-15	103434001	17-3
102796701	1-3	102851501	3-15	103439901	17-3
102796801	1-19	102852401	1-9	103477901	5-13
102796802	1-19	102857401	1-3	103483101	4-3
102796803	1-19	102861401	2-5	103483102	4-3
102796804	1-19	102865101	10-3	103483201	4-3
102796805	1-19	102886301	16-3	103483301	4-3
102797201	1-29	102886401	16-3	103483401	4-3
102803001	6-5	102886501	16-3	103483501	4-3
102804501	6-11	102886601	16-3	103483601	4-3
102804502	6-11	102913101	1-25	103483701	4-3
102804503	14-9	102913102	1-25	103507001	5-11
102804504	14-9	102913601	5-11	103507101	10-21
102806201	14-19	102914301	1-3	103507201	10-21
102810301	1-11	102959401	1-13	103507301	10-21
102810501	14-5	102967901	1-3, 6-11, 14-9	103512801	17-3
102815801	2-3	103010101	10-3	103512901	17-3
102815901	2-3	103189901	1-27	103513001	17-3
102816201	1-25	103200701	14-9	103517401	17-3
102818301	1-21	103246701	1-23	103517601	17-5
102818302	1-21	103246801	1-23	103520301	10-17
102818303	1-21	103282601	14-19	103601501	5-17
102818305	1-21	103293501	1-27	103601601	5-3
102819101	2-3	103313301	1-5	103615601	8-9
102820301	1-29	103316701	14-19	103615701	8-9
102820501	1-29	103316801	14-19	103615801	8-13
102821101	1-29	103316901	14-19	103615901	8-11
102822001	1-3	103317501	1-27	103616201	8-13
102822002	1-3	103317601	1-27	103616301	8-9
102822401	5-5	103325501	15-3	103616401	8-11
102823201	1-29	103325601	15-3	103616501	8-7
102825401	3-7	103325701	15-3	103616601	8-7
102825402	3-7	103325801	15-3	103616701	8-7
102825501	3-13	103337601	15-3	103616801	8-7

INDEX

103616901 10-19
 103651901 10-5
 103651902 10-3
 103653401 5-17
 103717001 17-3
 103717002 17-3
 103717003 17-3
 103776901 10-5
 103776902 10-3
 103779601 17-3
 103781101 10-3
 103781201 10-3
 96704416 7-15, 8-15, 9-15

A

absorber, rear shock 5-15
 AC cord 17-5, 17-7, 17-9, 17-11
 AC cord bushing 17-3, 17-5
 AC cord receptacle 17-11
 AC cordset 17-3
 accelerator bracket and bearing assembly 4-9, 4-11
 accelerator cable 10-15
 accelerator pedal 4-9, 4-11
 accelerator pedal adjustment tool 18-3
 accelerator pivot rod 4-9, 4-11
 accelerator return spring 4-9, 4-11
 accelerator rod 4-13
 accessory receptacle 6-11, 14-9
 adapter
 cable (IQDM) 18-7
 adhesive, guide ring 18-3
 adjuster
 hydraulic brake 18-7
 adjuster, lash 9-11
 air box 10-17
 air box top 10-17
 air filter 10-17
 air intake hose 10-17
 ammeter 17-3, 17-5, 17-7, 17-9, 17-11
 angled bumper mount 5-15
 A-plate strap 5-9
 A-plate, delta 5-9
 arbor 18-3
 arm
 governor 13-3
 pivot 13-3
 rocker 7-9, 8-9, 9-9
 armature 6-13, 15-3, 15-5, 15-7
 armature conversion kit 6-13
 assembly
 accelerator bracket and bearing 4-9, 4-11
 accelerator pivot rod 4-9, 4-11
 air box 10-17
 air box top 10-17
 armature 6-13

axle 13-7
 bearing, steering shaft 5-3
 bell crank and shaft 6-9
 brake lever 4-3
 brush connector 6-13
 brush holder 6-13
 carburetor 10-7, 10-9
 connecting rod 7-13, 8-13, 9-13
 cylinder head 9-9
 delta A-plate 5-9
 delta shock and gear support 5-9
 drive hub 12-3
 driven clutch 12-9
 driven clutch fixed-face 12-9
 field coil 6-13
 float 10-7, 10-9
 Forward/Reverse shifter 13-9
 frame and field (motor) 15-5, 15-7
 fuel tank vent 10-3, 10-5
 governor 13-5
 headlight 6-7, 14-7
 headlight harness 6-7, 14-7
 idle screw 10-7, 10-9
 inner ball joint 5-7, 5-17
 kingpin 5-11
 moveable-face 12-3, 12-9
 pilot air screw 10-7, 10-9
 plug cap 8-7, 9-5
 ratchet 4-5
 secondary clutch weight 12-3
 steering shaft 5-3
 turn signal lens 6-7, 14-7
 axle 13-7, 16-3
 axle guard 13-13, 16-5
 axle shaft oil seal 13-7, 16-3
 axle tube 16-3

B

backrest 1-25
 bag, desiccant 12-3
 ball bearing 8-11, 9-11
 ball joint 4-5, 4-13, 5-7, 5-9, 13-11
 ball joint, left-hand thread 5-7, 5-9
 ball stud 6-9, 13-3, 13-9
 ball, bearing 5-13
 ball, shifter 13-5
 ball, steel pressure relief 7-7, 8-3, 9-7
 band, RPM limiter mount 7-5, 9-5
 bar, drive 14-11
 barb, vent 10-3, 10-5
 battery 6-19
 battery charger 17-5, 17-7, 17-9, 17-11
 battery charger case 17-5, 17-7, 17-9, 17-11
 battery charger handle 17-5
 battery charger receptacle 14-15
 battery charger transformer 17-5, 17-7, 17-9,

17-11

battery clamp 6-19
 battery condition indicator, 48-volt 14-9
 battery discharge machine 18-3
 battery hold-down, 12-volt 14-17
 battery light 14-9
 battery terminal protector spray 18-3
 battery thermometer 18-3
 battery, 12-volt, Trojan T1275, moist 14-17
 battery, 12-volt, Trojan T1275, wet 14-17
 bearing 16-3
 ball 5-13, 8-11, 9-11
 ball (motor) 15-5, 15-7
 ball (steering pinion) 5-7, 5-17
 idler 12-3
 inner axle tube 13-7, 16-3
 lower pinion (steering) 5-7, 5-17
 needle 13-5
 outer axle tube 13-7
 pivot support 4-9, 4-11
 steering shaft 5-3
 thrust 5-11
 bearing and oil seal remover 18-3
 bearing driver set 18-3
 bearing puller 18-3
 bearing puller wedge 18-3
 bearing retainer 15-3
 bearing seat 5-3
 bed support 1-25
 bed support stiffener 1-29
 bed, cargo 1-27
 bell crank 13-9
 bell crank and shaft 6-9
 bellows 5-7, 5-17
 belt, drive 12-5, 12-7
 belt, starter/generator 6-15, 6-17, 12-3
 bezel, headlight 6-7, 14-7
 block, brake-mounting 4-5
 block, fuse 6-9
 body kick plate 1-19, 1-21
 body, front 1-3
 body, rear 1-19, 1-21
 bolt, J- 14-17
 bolt, U- 5-15
 boot, steering column 5-3
 boot, switch 14-13
 bottom, air box 10-17
 box
 air 10-17
 dash 1-11
 electrical component 6-9
 glove 1-13
 steering gear 5-7, 5-17
 box lock kit, glove 1-13
 brace, canopy 1-5
 brace, seat support cross 1-25

INDEX

- bracket 5-15, 6-11, 7-3
 - accelerator cable 10-15
 - adjustable starter/generator 6-15, 6-17
 - governor cable 10-15
 - headlight mounting 6-7, 14-7
 - muffler mounting 11-3, 11-5
 - oil filter mount 7-7, 8-3, 9-7
 - oil level switch 7-11, 8-11, 9-11
 - relay mounting 17-9
 - RPM limiter 7-5, 9-5
 - shifter 13-3, 13-11
 - snubber 7-15, 8-15, 9-15
 - starter/generator mounting 6-15, 6-17
 - steering column 5-3
 - steering column mounting 5-3
 - throttle spring return 10-11, 10-13, 10-21
 - Tow/Run switch 14-13
- bracket, carburetor intake manifold 10-21
- brake adjusting mechanism 4-3
- brake adjustment tool 18-3
- brake cable 4-7
- brake cable equalizer 4-7
- brake cable release tool 18-3
- brake drum 4-3
- brake lever 4-3
- brake mounting block 4-5
- brake pedal 4-5
- brake pedal adjustment tool 18-3
- brake pedal pad 4-5
- brake pedal tension tool 18-3
- brake return spring 4-7
- brake self-adjusting mechanism 4-3
- brake shoe 4-3
- brake spring 4-3
- breaker, circuit 17-3, 17-5, 17-7, 17-9, 17-11
- breather 13-3, 16-3
- brush 15-3, 15-5, 15-7
- brush and screw set 6-13
- brush box assembly 15-5, 15-7
- brush connector 6-13
- brush guard 1-9
- brush guard support 5-11
- brush holder 6-13
- brush inspection port cover 6-13
- brush port cover 6-13
- brush rigging 15-3, 15-5, 15-7
- brush spring 15-3, 15-5, 15-7
- brush spring set 6-13
- bulb, headlight 6-7, 14-7
- bumper
 - cast 1-7
 - drive unit (motor) 15-3, 15-5, 15-7
 - jounce 5-15
 - rubber 1-13, 1-29, 4-5
 - side trim 1-15
 - spring return 4-9, 4-11
- bumper mount, angled 5-15
- bushing 12-3
 - AC cord 17-3, 17-5
 - bronze 5-13
 - nylon 4-5
 - return line 10-3, 10-5
 - spindle 5-13
 - steel 1-29, 5-11, 5-15
 - urethane 1-29, 5-9, 5-11, 5-15
- bushing, insulated 15-3
- button, choke 10-17
- button, drive 12-9
- buzzer, reverse 14-21
- C**
- cable
 - accelerator 10-15
 - brake 4-7
 - governor 10-15
 - IQDM 18-7
 - transmission 13-11
- cable retainer 1-19, 1-21, 13-11
- cable, cargo bed 1-27
- calibration test module 18-3
- cam
 - driven clutch 12-9
 - electrical component box 6-9
 - neutral lockout 13-9
- cam installation tool 18-3
- camshaft 7-11, 9-11
- camshaft shim 8-11, 9-11
- canopy brace 1-5
- cap
 - dust 14-13
 - plug 8-7, 9-5
 - spark plug 7-5
- carburetor 10-7, 10-9
- carburetor adapter 10-21
- carburetor float level tool 18-7
- carburetor gasket 10-13, 10-21
- carburetor insulator 10-11, 10-13, 10-21, 15-3
- carburetor mounting gasket 10-11, 10-13, 10-21
- card, safety first 18-9
- cargo bed 1-27
- cargo bed hinge 1-29
- case
 - battery charger 17-5, 17-7, 17-9, 17-11
 - differential gear 13-7
 - FNR switch 14-13
 - gear 13-3, 16-3
 - rocker 7-9, 9-9
- case, charger 17-3
- cast bumper 1-7
- catch, tilt bed 1-27
- center, steering wheel 5-5
- charger bezel tool 18-3
- charger board relay 17-3
- charger case 17-3
- charger hardware 17-3
- charger legs 17-3
- charger receptacle 14-15
- charger, battery 17-5, 17-7
- choke button 10-17
- choke lever 10-17
- choke lever guide 10-17
- choke positioner 10-17
- choke valve 10-17
- circuit breaker 17-3, 17-5, 17-7, 17-9, 17-11
- clamp
 - battery 6-19
 - cable retaining 10-15
 - hose 10-3, 10-5, 10-11, 10-13, 10-17, 10-21
 - muffler hose 11-3, 11-5
- clevis, upper delta 5-11
- cluster idler gear 13-5
- clutch alignment tool 18-5
- clutch pulley 12-3
- clutch removal tool 18-3
- clutch repair kit 12-9
- clutch tool kit 18-5
- clutch weight 12-3
- clutch, drive 12-3
- clutch, driven 12-9
- coil, field 6-13
- coil, ignition 7-5, 9-5
- collet 7-9, 8-9, 9-9
- column, steering 5-3
- communication display module 18-5
- component box, electrical 6-9
- component mounting plate 14-19
- compression gauge 18-5
- compression lug 14-19
- compression spring 10-17
- compressor, piston ring 18-9
- compressor, valve spring 18-11
- computer, onboard 14-19
- connecting rod 7-13, 8-13, 9-13
- connector, a- 6-13
- connector, four-pin 14-13
- connector, speed controller 14-19
- continuity tester 18-5
- controller cover 14-19
- controller cover gasket 14-19
- controller, motor speed 14-19
- cord connector 7-11, 8-11, 9-11
- cord set, DC 17-5
- cord, AC 17-5, 17-7, 17-9, 17-11
- cord, DC 17-7, 17-9, 17-11
- Cordset
 - PD3, AC 114" 17-3
 - PD3, AC 80" 17-3

INDEX

PD3, DC 113" 17-3
PD3, DC 154" 17-3
PD3, DC 205" 17-3
counterbalance guide shaft 7-13, 8-13, 9-13
counterbalance weight 7-13, 8-13, 9-13
cover
brush inspection port 6-13
brush port 6-13
cowl 1-3
crankcase 7-11, 8-11, 9-11
electrical box 6-9
oil pump 7-7, 8-3, 9-7
steering column 5-3
cover gasket, controller 14-19
cover plate 15-5, 15-7
cover, controller 14-19
cover, speed controller 14-19
cowl 1-3
cowl cover 1-3
cowl support 1-3
crank, bell 13-9
crankcase 7-13, 9-13
crankcase cover 8-11, 9-11
crankcase cover gasket 7-9, 7-11
crankcase vent tube 10-11, 10-13, 10-21
crankshaft 7-13, 8-13, 9-13
crankshaft rod 8-13, 9-13
crankshaft seal 7-11
crankshaft shim 7-13, 8-13, 9-13
cross brace, seat support 1-25
C-type stop ring 5-7, 5-17
cup, spring 4-9, 4-11
current limiter 17-11
cushion, shock absorber 5-15
cutter, valve seat 18-5, 18-11

D

damper, RPM limiter 7-5, 9-5
dash 1-3
dash box 1-11
DC cord 17-7, 17-9, 17-11
DC cord set 17-5
DC cordset 17-3
decals
800 3-9
810 3-9
810E 3-15
Club Car 3-9, 3-15
component cover 3-11, 14-19
crush area 3-3, 3-13
crush warning 3-3, 3-13
driver/passenger 3-5
frame ground 3-5
instrument panel warning 3-7, 3-13
operating instructions 3-7, 3-13
owner notice 3-3, 3-11

rotating parts 1-31, 3-5
Tow/Run switch warning 3-11
delta A-plate 5-9
delta A-plate sub-assembly 5-9
delta shock and gear support 5-9
desiccant bag 12-3
DF-terminal insulator 6-13
diesel tachometer probe 18-9
differential
drive unit 16-3
differential gear 13-7, 16-3
differential gear case 13-7
differential guard 13-13, 16-5
differential housing 16-3
differential idler gear 13-7
differential pin 13-7
diode 6-9, 14-19
dipstick 7-3, 8-5, 9-3
drain plug 7-7, 8-3, 9-7
drain plug gasket 7-7, 8-3, 9-7, 13-3
drive bar 14-11
drive belt 12-5, 12-7
drive button 12-9
drive clutch 12-3
drive clutch button 12-3
drive clutch fixed sheave tool 18-5
drive clutch fixed-face 12-3
drive clutch holder tool 18-5
drive clutch hub puller 18-5
drive clutch puller 18-5
drive clutch spider removal tool 18-5
drive clutch spring 12-3
drive clutch weight 12-3
drive hub 12-3
drive unit bumper 15-3, 15-5, 15-7
drive unit guard 13-13, 16-5
driven clutch 12-9
driven clutch button 12-9
driven clutch cam 12-9
driven clutch cam puller 18-5
driven clutch fixed-face assembly 12-9
driven clutch puller plug 18-5
driven clutch spring compression base tool 18-5
driven clutch spring compression collar tool 18-5
driven clutch spring compression nut tool 18-5
driver, drive clutch 12-3
drum, brake 4-3
dry moly lubricant 18-7
dust cap 14-13

E

E-clip 4-7
electrical box cover 6-9

electrical component box 6-9
end bell, commutator 6-13
end bell, output shaft 6-13
end cap, motor 15-3, 15-5, 15-7
end shield
motor 15-3
engine 7-3
engine mounting plate 7-15, 8-15, 9-15
engine shroud 7-3, 8-5, 9-3
engine valve spring 7-9
engine, FE350 CW without ACR 9-3
engine, FE350 S27 8-5
equalizer rod 4-7
equalizer, brake cable 4-7
exhaust system 11-3, 11-5
exhaust valve 7-9, 8-9, 9-9
extension, spring latch 1-27
extrusion 14-19

F

face, moveable 12-3, 12-9
fan housing 7-3, 8-5, 9-3
fan shroud 7-3, 8-5, 9-3
fan, flywheel 7-5, 8-7, 9-5
fender 1-19, 1-21
field coil 6-13
field coil housing 6-13
fill plug 13-3
filter
air 10-17
fuel 10-3
oil 7-7, 8-3, 9-7
oil pump 8-3, 9-7
fitting, thread-forming grease 5-7, 5-9, 5-13
fixed-face, drive clutch 12-3
fixed-face, driven clutch 12-9
float 10-7, 10-9
floor mat 1-3
flywheel 7-5, 9-5
flywheel fan 8-7, 9-5
flywheel fan plate 7-5, 8-7, 9-5
flywheel puller 18-7
FNR handle 13-9
FNR shifter base 13-9
FNR switch case 14-13
foam, seat 1-23
fork, shift 13-5
Forward/Reverse shifter 13-9
frame and field assembly (motor) 15-5, 15-7
front body 1-3
front body support 1-19, 1-21
front hub 5-13
front spring retainer plate 5-11
F-terminal hardware 6-13
f-terminal insulator 6-13
fuel filter 10-3

INDEX

fuel gauge sending unit 10-5
fuel gauge/hour meter 6-11
fuel line 10-3, 10-5, 10-11, 10-13, 10-21
fuel tank 10-5
fuel tank strap 10-3
fuel tank vent 10-3, 10-5
fuse 14-15, 17-7, 17-9, 17-11

10-amp 6-9
20-amp 6-9
3/8-amp 14-15
charger 17-3, 17-5

fuse block 6-9

G

gasket 16-3
carburetor 10-13, 10-21
carburetor mounting 10-7, 10-9, 10-11, 10-13, 10-21
crankcase cover 7-9, 7-11, 8-9, 9-9, 9-11
drain plug 7-7, 8-3, 9-7, 13-3
exhaust 7-9, 8-9, 9-9, 11-3, 11-5
head 7-9, 8-9, 9-9
insulator 7-9, 8-9, 9-9, 10-11, 10-13, 10-21
liquid 13-3, 16-3, 18-7
oil pump 7-7
rocker case 7-9, 8-9, 9-9
seat 1-23
sending unit 10-5
gasket kit, FE290 7-9
gasket kit, FE350 8-9, 9-9
gasket, controller cover 14-19
gauge, compression 18-5
gauge, fuel/hour 6-11
gear
case 13-3, 16-3
cluster idler 13-5
differential 13-7, 16-3
differential idler 13-7, 16-3
differential output 16-3
helical 7-13, 8-13, 9-13, 13-5, 13-7
spur 7-13, 8-13, 9-13, 13-5
synchro 13-5
gear yoke 18-7
glove box 1-13
glove box key 1-13
glove box lock 1-13
glove box lock kit 1-13
governor 13-5
governor arm 13-3
governor cable 10-15
governor cable bracket 10-15
governor shaft installation tool 18-7
governor shield 10-11
grommet 10-3, 10-5
guard, brush 1-9
guard, differential 13-13, 16-5

guide
choke lever 10-17
intake valve 7-9, 9-9
valve 9-9
valve seat cutter 18-11
guide ring adhesive 18-3

H

handle, battery charger 17-5
handle, FNR 13-9
hardware kit, charger 17-3
hardware, F-terminal 6-13
harness, wire 14-5
gasoline 6-5
head gasket 7-9, 8-9, 9-9
head, cylinder 9-9
head, FE290 7-9
headlight assembly 6-7, 14-7
headlight bulb 6-7, 14-7
headlight harness 6-7, 14-7
headlight retainer 6-7, 14-7
heatsink 17-5
heatsink and rectifier 17-7, 17-9, 17-11
helical gear 7-13, 8-13, 9-13, 13-5, 13-7
hill brake rod 4-5
hill brake weld assembly 4-5
hinge plate 1-19, 1-21, 1-23
hinge support 1-29
hinge, cargo bed 1-29
hold-down, battery, 12-volt 14-17
holder, object 1-3
hose, air intake 10-17
hose, fuel 10-3
hour meter/fuel gauge 6-11
housing
2-pin 14-11
3-pin 14-11, 14-13, 15-3, 15-5, 15-7
4-pin 14-13
6-pin 14-19
differential 16-3
fan 7-3, 8-5, 9-3
field coil 6-13

hub 5-13
hub and spindle 5-13
hub, front 5-13
hub, synchronizer clutch 13-5
hubcap 5-13
hydraulic brake adjuster 18-7
hydrometer 18-7

I

idle screw assembly 10-7, 10-9
idler bearing 12-3
idler gear, differential 16-3
ignition coil 7-5, 9-5

inner frame snubber 7-15, 8-15, 9-15
input shaft 16-3
insert, synchronizer 13-5
instrument panel 6-11, 14-9
insulated bushing 15-3
insulator gasket 7-9, 8-9, 9-9, 10-11, 10-13, 10-21
insulator, carburetor 10-11, 10-13, 10-21, 15-3
intake pipe 10-11, 10-13
intake valve 7-9, 9-9
intermediate shaft 16-3
internal retaining ring pliers 18-7
IQ display module (IQDM) 18-7

J

J-bolt 14-17
jet, main 10-7, 10-9, 10-19
jet, pilot 10-7, 10-9
joint
ball 4-5, 4-13, 5-9, 13-11
left-hand thread ball 5-7, 5-9
jounce bumper 5-15

K

key 14-9
crankshaft 7-5, 7-13, 8-7, 8-13, 9-5, 9-13
driven clutch 12-9
square 12-9
starter/generator 6-13
woodruff 13-3
key (pair) 6-11
key switch 6-11, 14-9
key switch spacer 6-11
key, glove box 1-13
keyswitch nut 6-11, 14-9
kick plate, body 1-19, 1-21
kingpin 5-11
kit
2-pin housing 14-11
3-pin housing 14-11, 14-13, 15-3, 15-5, 15-7
4-pin housing 14-13
6-pin housing 14-19
accelerator pivot rod 4-9, 4-11
air duct repair tape 10-17
brake cable 4-7
brake pedal 4-5
brake pedal adjustment tool 18-3
clutch repair 12-9
differential gear case 13-7
drive clutch button 12-3
drive clutch weight 12-3
driven clutch button 12-9
front hub replacement 5-13
fuel tank 10-5
IQ display module (IQDM) 18-7
magnet and bearing 15-3

INDEX

motor brush 15-5, 15-7
motor brush spring 15-5, 15-7
motor cover plate 15-5, 15-7
motor speed sensor 15-5, 15-7
motor terminal hardware 15-5, 15-7
neutral lockout cam 13-9
park brake latch 4-5
park brake pedal 4-5
PD3 Cordest, AC 114" 17-3
PD3 Cordest, AC 80" 17-3
PD3 Cordest, DC 113" 17-3
PD3 Cordest, DC 154" 17-3
PD3 Cordest, DC 205" 17-3
PD3 hardware 17-3
shock absorber 5-15
shock absorber cushion 5-15
tune-up 18-9
knob, light switch 6-11, 14-9

L

lash adjuster 9-11
latch spring 1-27
latch, air box 10-17
latch, park brake 4-5
L-bracket, motor 15-5
leaf spring 5-15
legs, charger 17-3
lens, headlight 6-7, 14-7
lever
 change 13-3
 choke 10-17
 transmission shifter 13-3
light
 battery 14-9
 oil 6-11
light switch 6-11, 14-9
light switch knob 6-11, 14-9
limit switch 13-9
limiter
 current 17-11
 RPM 7-5, 9-5
line, fuel 10-3, 10-5, 10-11, 10-13, 10-21
link, rack and pinion drag 5-7
link, rod 1-27
liquid gasket 13-3, 16-3, 18-7
lock kit, glove box 1-13
lock, glove box 1-13
low oil warning light 6-11
lubricant, dry moly 18-7
lubricant, moly-teflon 15-3, 15-5, 15-7, 18-7
lug nut 2-3
lug stud 5-13, 13-7, 16-3
lug, compression 14-19

M

magnet and bearing kit 15-3
magnet, speed sensor 15-3, 15-5, 15-7
main jet 10-7, 10-9, 10-19
main nozzle 10-7
mat, floor 1-3
MCOR 14-11
mechanism, brake adjusting 4-3
meter, volt ohm 18-11
module
 calibration test 18-3
 communication display 18-5
moly-teflon lubricant 18-7
motor
 48-volt 15-3
 48-volt IQ 15-5, 15-7
motor armature 15-3
motor brush 15-3
motor brush kit 15-5, 15-7
motor brush spring kit 15-5, 15-7
motor bumper 15-3, 15-5, 15-7
motor end cap 15-3, 15-5, 15-7
motor end shield 15-3
motor L-bracket 15-5
motor magnet, speed sensor 15-3, 15-5, 15-7
motor speed controller 14-19
motor speed sensor 15-3, 15-5, 15-7
motor speed sensor kit 15-5, 15-7
motor stator shell and winding 15-3
motor terminal hardware kit 15-5, 15-7
mounting block, brake 4-5
moveable-face 12-3, 12-9
muffler hose clamp 11-3, 11-5

N

needle bearing 13-5
nerf bar 1-17
neutral lockout cam 13-9
non-skid tape 1-17
nozzle, main 10-7, 10-9
nut, keyswitch 6-11, 14-9
nut, lug 2-3

O

OBC 14-19
OBC, onboard computer 14-19
object holder 1-3
oil filler tube 7-3, 8-5, 9-3
oil filter 7-7, 8-3, 9-7
oil filter mount bracket 7-7, 8-3, 9-7
oil filter screen 7-11, 8-11, 9-11
oil filter screen plate 7-11, 8-11, 9-11
oil level sensor 7-11, 8-11, 9-11
oil level switch bracket 7-11, 8-11, 9-11
oil pump and rotor 7-7, 8-3, 9-7
oil pump cover 7-7, 8-3, 9-7
oil pump filter 8-3, 9-7
oil pump gasket 7-7
oil pump plate 7-7, 8-3, 9-7
oil seal 7-9, 7-13, 8-9, 8-11, 8-13, 9-9, 9-11, 9-13, 13-3, 13-5
oil warning light, low 6-11
onboard computer 14-19
O-ring 7-3, 7-9, 7-11, 7-13, 8-5, 8-9, 8-11, 8-13, 9-3, 9-9, 9-11, 9-13
overload bumper spacer 5-15

P

pad
 accelerator pedal 4-9, 4-11
 brake pedal 4-5
 park brake 4-5
 wear 1-19, 1-21
paint, touch-up 18-7
panel
 instrument 6-11
panel, instrument 6-11, 14-9
park brake latch 4-5
park brake pedal 4-5
park brake rod sleeve 4-5
park brake spacer 4-5
park brake torsion spring 4-5
pawl 4-5
pedal, accelerator 4-9, 4-11
pedal, brake 4-5
pedal, park brake 4-5
pilot air screw 10-7
pilot air screw assembly 10-9
pilot jet 10-7, 10-9
pin, differential 13-7
pin, piston 7-13, 8-13, 9-13
pinion, steering 5-7, 5-17
pipe, intake 10-11, 10-13
piston 7-13, 8-13, 9-13
piston pin 8-13, 9-13
piston ring 7-13, 8-13, 9-13
piston ring compressor 18-9
piston ring pliers 18-9
piston ring set 8-13, 9-13
pivot arm 13-3
pivot support bearing 4-9, 4-11
plate
 body kick 1-19, 1-21
 component mounting 14-19
 cover 15-5, 15-7
 engine mounting 7-15, 8-15, 9-15
 flywheel fan 7-5, 8-7, 9-5
 front spring retainer 5-11
 hinge 1-19, 1-21, 1-23
 oil filter screen 7-11, 8-11, 9-11
 oil pump 7-7, 8-3, 9-7

INDEX

receptacle backing 14-15
spring mounting 5-11
thrust 13-5, 13-7
pliers
internal retaining ring 18-7
piston ring 18-9
retaining ring 18-9
plug
4-pin 14-13
6-pin 14-19
drain 7-7, 8-3, 9-7
driven clutch puller 18-5
fill 13-3
spark 7-5, 9-5
plug cap 8-7, 9-5
plug, carburetor intake manifold 10-21
plug, spark 8-7
pole set 6-13
positioner, choke 10-17
press weldment 18-5
protector spray, battery terminal 18-3
puller
bearing 18-3
clutch 18-3
drive clutch 18-5
drive clutch hub 18-5
driven clutch cam 18-5
flywheel 18-7
seal 18-9
special use tool 18-9
pulley
clutch 12-3
starter-generator 6-13
push rod 7-9, 8-9, 9-9

R

rack and pinion drag link 5-7
rack guide pressure spring 5-7, 5-17
rack, steering 5-7, 5-17
ratchet, park brake 4-5
reamer, valve guide 18-9
rear body 1-19
rear spring shackle 5-15
receptacle 14-15
receptacle backing plate 14-15
receptacle, AC cord 17-11
receptacle, accessory 6-11, 14-9
receptacle, battery charger 14-15
rectifier with heatsink 17-7, 17-9, 17-11
regulator, voltage 6-9
relay 17-9, 17-11
relay mounting bracket 17-9
relay, charger board 17-3
remover, bearing and oil seal 18-3
resistor assembly 14-19
retainer

accelerator pedal spring 4-9, 4-11
bearing 15-3
cable 1-19, 1-21, 13-11
headlight 6-7, 14-7
shock absorber cushion 5-15
spring 5-15
spring (drive clutch) 12-3
valve spring 7-9, 8-9, 9-9
retaining ring 5-3
retaining ring pliers 18-9
return spring bumper 4-9, 4-11
reverse buzzer 14-21
rigging, brush 15-3
rim, wheel 2-3
ring
piston 7-13, 8-13, 9-13
retaining 5-3, 6-9, 12-3, 12-9, 13-9
snap 5-7, 5-17, 7-9, 7-13, 8-13, 9-9, 9-13
spiral backup 12-3
synchronizer 13-5
ring, C-type stop 5-7, 5-17
ring, piston 8-13, 9-13
rock guard 13-13, 16-5
rocker arm 7-9, 8-9, 9-9
rocker case 7-9, 9-9
rocker case gasket 7-9, 8-9, 9-9
rocker shaft 7-9, 8-9, 9-9
rocker switch 14-13
rod
accelerator 4-13
accelerator pivot 4-9, 4-11
connecting 7-13, 8-13, 9-13
crankshaft 7-13, 8-13, 9-13
equalizer 4-7
hill brake 4-5
link 1-27
push 7-9, 8-9, 9-9
shift 13-5
tie 5-9
rotor, oil pump and 7-7, 8-3, 9-7
RPM limiter 7-5, 9-5
RPM limiter bracket 7-5, 9-5
RPM limiter damper 7-5, 9-5
RPM limiter mount band 7-5, 9-5
rubber bumper 1-13

S

safety first card 18-9
screen, oil filter 7-11, 8-11, 9-11
screw, valve clearance adjuster 18-9
seal
crankshaft 7-11
intake 10-17
lip 16-3
oil 7-9, 7-13, 8-9, 8-11, 8-13, 9-9, 9-11, 9-13,
13-3, 13-5, 13-7, 16-3

steering pinion dust 5-7, 5-17
vertical socket dust 5-7, 5-9
seal puller 18-9
sealant 13-3, 16-3
seat
spring 7-9, 8-9, 9-9
valve 7-7, 8-3, 9-7
seat bottom assembly 1-23
seat bottom cover 1-23
seat cover, vinyl 1-23
seat cover, white 1-23
seat foam 1-23
seat gasket 1-23
seat support 1-25
seat support cross brace 1-25
seat, bearing 5-3
sending unit, fuel gauge 10-5
sensor, motor speed 15-3, 15-5, 15-7
sensor, oil level 7-11, 8-11, 9-11
sensor, speed 15-3
set, brush and screw 6-13
set, pole 6-13
shackle, rear spring 5-15
shaft
change 13-3
counterbalance guide 7-13, 8-13, 9-13
input 16-3
intermediate 16-3
rocker 7-9, 8-9, 9-9
steering column 5-3
transmission 13-5
shield, governor 10-11
shift fork 13-5
shift rod 13-5
shifter base, FNR 13-9
shifter bracket 13-3, 13-11
shim, camshaft 8-11, 9-11
shim, crankshaft 7-13, 8-13, 9-13
shock absorber 5-9
shock absorber (rear) 5-15
shock absorber cushion 5-15
shock absorber cushion retainer 5-15
shoe, brake 4-3
shroud 8-5, 9-3
shroud, engine 7-3, 8-5, 9-3
shroud, fan 7-3, 8-5, 9-3
side bar 1-17
sleeve
delta A-plate 5-9
governor 13-5
park brake rod 4-5
synchronizer 13-5
snap ring 5-7, 5-17, 7-9, 7-13, 8-13, 9-9, 9-13
snubber bracket 7-15, 8-15, 9-15
snubber, inner frame 7-15, 8-15, 9-15
socket 5-7, 5-9

INDEX

- solenoid, 12-volt 6-9
 - solenoid, 48-volt 14-19
 - spacer
 - accelerator pivot rod 4-9, 4-11
 - key switch 6-11
 - overload bumper 5-15
 - park brake 4-5
 - spanner wrench 18-9
 - spark plug 7-5, 8-7, 9-5
 - spark plug cap 7-5
 - speed controller 14-19
 - speed controller connector 14-19
 - speed controller cover 14-19
 - speed sensor 15-3, 15-5, 15-7
 - speed sensor magnet 15-3, 15-5, 15-7
 - speed sensor, motor 15-3, 15-5, 15-7
 - spindle 5-13
 - spindle and hub 5-13
 - spiral backup ring 12-3
 - spray, battery terminal protector 18-3
 - spring 1-27
 - accelerator return 4-9, 4-11
 - brake return 4-7
 - brush 6-13, 15-3, 15-5, 15-7
 - compression 10-17
 - drive button 12-3
 - drive clutch 12-3
 - driven clutch 12-9
 - engine valve 7-9
 - extension return 10-17
 - forward/reverse cam 13-9
 - leaf 5-15
 - park brake torsion 4-5
 - rack guide pressure 5-7, 5-17
 - shifter 13-5
 - steering shaft compression 5-3
 - synchronizer 13-5
 - throttle return 10-11, 10-13, 10-21
 - valve 8-9, 9-9
 - spring cup 4-9, 4-11
 - spring mounting plate 5-11
 - spring retainer 5-15
 - spur gear 7-13, 8-13, 9-13, 13-5
 - stand-offs, plastic 17-3
 - starter/generator 6-13
 - starter/generator belt 6-15, 6-17, 12-3
 - starter/generator mounting bracket 6-15
 - starter/generator pulley 6-13
 - stator shell and winding 15-3
 - steel bushing 1-29, 5-11, 5-15
 - steel pressure relief ball 7-7, 8-3, 9-7
 - steering column 5-3
 - steering column bearing press tool 18-9
 - steering column retaining ring tool 18-9
 - steering gear box 5-7, 5-17
 - steering pinion 5-7, 5-17
 - steering pinion dust seal 5-7, 5-17
 - steering rack 5-7, 5-17
 - steering shaft assembly 5-3
 - steering shaft compression spring 5-3
 - steering wheel 5-5
 - steering wheel center 5-5
 - steering wheel puller tool 18-9
 - stem, valve 2-3
 - stiffener, bed support 1-29
 - stiffener, flywheel side 7-15, 8-15, 9-15
 - stiffener, PTO side 8-15, 9-15
 - strap, A-plate 5-9
 - strap, fuel tank 10-3
 - stud 7-15, 8-15, 9-15
 - lug 5-13, 13-7, 16-3
 - stud, ball 6-9, 13-3, 13-9
 - support
 - bed 1-25
 - brush guard 5-11
 - cowl 1-3
 - hinge 1-29
 - latch link 1-27
 - seat 1-25
 - support yoke (steering) 5-7, 5-17
 - support, front body 1-19, 1-21
 - support, seat 1-25
 - suppressor, voltage 17-7, 17-9, 17-11
 - switch
 - four-position 17-9, 17-11
 - key 6-11, 14-9
 - light 6-11, 14-9
 - limit 13-9
 - rocker 14-13
 - Tow/Run 14-13
 - switch rubber boot 14-13
 - synchro gear 13-5
 - synchronizer clutch hub 13-5
 - synchronizer insert 13-5
 - synchronizer sleeve 13-5
 - synchronizer spring 13-5
 - system, exhaust 11-3, 11-5
- ## T
- 12-volt solenoid 6-9
 - tachometer 18-9
 - tachometer probe, diesel 18-9
 - taligate 1-27
 - tank, fuel 10-5
 - tape, non-skid 1-17
 - tappet 7-11, 8-11
 - terminal block 14-19
 - tester, continuity 18-5
 - thermometer, battery 18-3
 - thread-forming grease fitting 5-7, 5-9, 5-13
 - throttle return spring 10-11, 10-13, 10-21
 - throttle spring return bracket 10-11, 10-13, 10-21
 - thrust bearing 5-11
 - thrust plate 13-5, 13-7
 - tie rod 5-9
 - tie wrap 5-7, 5-17, 6-9, 14-13, 14-19
 - tilt bed catch 1-27
 - tilt latch 1-27
 - tire 2-3
 - tool
 - accelerator pedal adjustment 18-3
 - belt tensioning, starter/generator 18-11
 - brake adjustment 18-3
 - brake cable release 18-3
 - brake pedal adjustment 18-3
 - brake pedal tension 18-3
 - cam installation 18-3
 - carburetor float level 18-7
 - charger bezel 18-3
 - clutch alignment 18-5
 - cT-wrench 18-5
 - drive clutch fixed sheave 18-5
 - drive clutch holder 18-5
 - drive clutch spider removal 18-5
 - driven clutch spring compression base 18-5
 - driven clutch spring compression collar 18-5
 - driven clutch spring compression nut 18-5
 - governor shaft installation 18-7
 - puller, special use 18-9
 - steering column bearing press 18-9
 - steering column retaining ring 18-9
 - steering wheel puller 18-9
 - transaxle axle seal 18-9
 - transaxle pinion seal 18-9
 - transmission 18-9
 - valve guide driver 18-9
 - valve seat cutter 18-5
 - tool kit, clutch 18-5
 - touch-up paint 18-7
 - Tow/Run switch 14-13
 - Tow/Run switch bracket 14-13
 - transaxle 16-3
 - transaxle axle seal tool 18-9
 - transaxle guard 13-13, 16-5
 - transaxle housing 16-3
 - transaxle pinion seal tool 18-9
 - transaxle, unitized 13-3
 - transformer, battery charger 17-5, 17-7, 17-9, 17-11
 - transmission cable 13-11
 - transmission shaft 13-5
 - transmission tool 18-9
 - tube
 - crankcase vent 10-11, 10-13, 10-21
 - oil filler 7-3, 8-5, 9-3

INDEX

tune-up kit 18-9
turn signal lens 6-7, 14-7
T-wrench tool 18-5

U

U-bolt 5-15
unitized transaxle 13-3
upper delta clevis 5-11
urethane bushing 1-29, 5-9, 5-11, 5-15

V

valve
 choke 10-17
 exhaust 7-9, 8-9, 9-9
 fuel pickup tube 10-5
 intake 7-9, 9-9
 reed 7-9, 8-9, 9-9
valve clearance adjuster screw 18-9
valve guide 9-9
valve guide driver tool 18-9
valve guide reamer 18-9
valve guide, intake 7-9, 9-9
valve seat 7-7, 8-3, 9-7
valve seat cutter 18-5, 18-11
valve seat cutter guide 18-11
valve seat cutter tool 18-5
valve seat t-wrench 18-11
valve spring 8-9, 9-9
valve spring compressor 18-11
valve spring retainer 7-9, 8-9, 9-9
valve stem 2-3
vent barb 10-3, 10-5
vertical socket dust seal 5-7, 5-9
volt ohm meter 18-11
voltage regulator 6-9
voltage suppressor 17-7, 17-9, 17-11

W

warning light, low oil 6-11
wear pad 1-19, 1-21
wedge, bearing puller 18-3
weight
 clutch 12-3
 counterbalance 7-13, 8-13, 9-13
 secondary clutch 12-3
weldment
 press 18-5
wheel cover 2-5
wheel rim 2-3
wheel, steering 5-5
wire harness 14-5
wire harness, gasoline 6-5
woodruff key 13-3
wrap, tie 5-7, 5-17, 6-9, 14-13, 14-19
wrench, spanner 18-9

Y

yoke, gear 18-7
yoke, support (steering) 5-7, 5-17



Club Car, Inc.
P.O. Box 204658
Augusta, GA 30917-4658
USA

Web	www.clubcar.com
Phone	1.706.863.3000 1.800.ClubCar
Int'l	+1 706.863.3000
Fax	1.706.863.5808