




2007

TransPorter 4 and 6

Illustrated Parts List

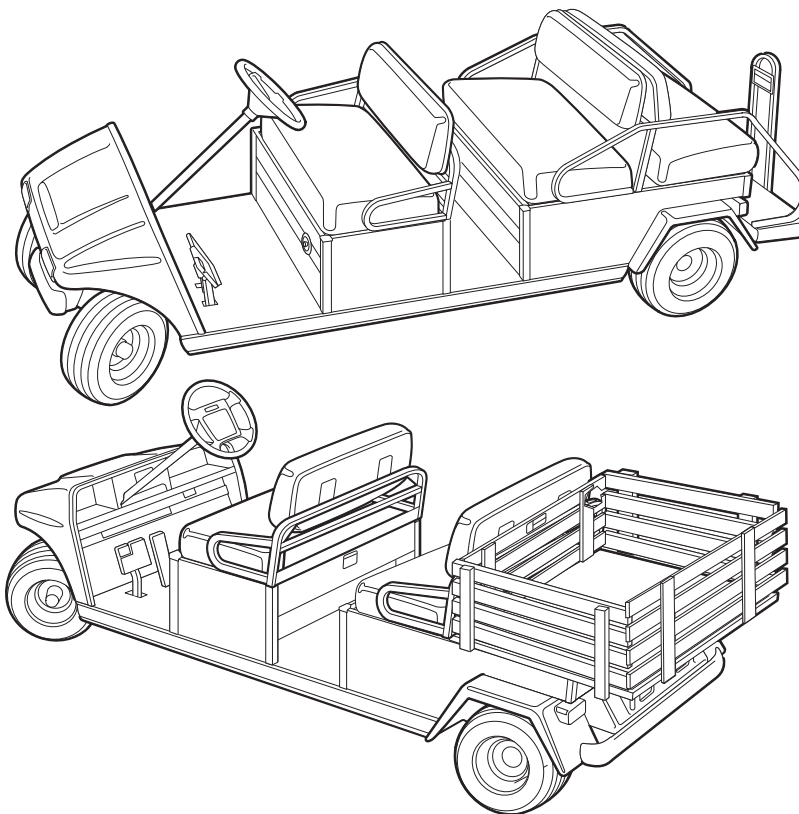

Gasoline and Electric Vehicles

Manual Number 103209026
Edition Code 1206K0112J

USING THE ILLUSTRATED PARTS LIST

WARNING

- **This manual is to be used only for identification and ordering of service parts. Be sure to read and use the maintenance and service manual before attempting any vehicle repairs.**

This manual covers all TransPorter 4 and 6 vehicles built during the 2007 model year.

The manual is divided into sections. Note that there are two or three flags on the outside edge of each page. The first flag contains the section number of which that page is a part. The other flag (or flags) contains the letter G or E, signifying that the page pertains to the electric or gasoline vehicles only.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section numbers, and under them, the individual page titles and numbers to be found in that section. The index can be used to find specific parts and assemblies. The index is divided into numerical and alphabetical listings with the page numbers in italic text.

There is a two-page spread for each individual page title in the Table of Contents. On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used.

Note that a part description may be indented. This indentation corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to *level 2* is a component of the *level 1* part (assembly) that it is listed under. A *level 3* part is a component of the *level 2* part that it is listed under, and a *level 4* part is a component of the *level 3* part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part is *the quantity used per next higher level assembly of which it is a component*. A part that is not indented is a *level 1* part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.

HOW TO ORDER PARTS

Replacement parts and accessories can be obtained from our network of authorized dealers and distributors. You can obtain the name and phone number of your closest authorized Club Car dealer or distributor by visiting our web site at www.clubcar.com and clicking on the "Distributor Search" link or by calling our toll-free Service Parts and Technical Assistance hotline at (800) 872-2246 or (706) 863-3000, extension 3887.



P. O. Box 204658
Augusta, Georgia 30917-4658 USA
Telephone 706-863-3000
Service Parts Fax 706-855-7413
www.clubcar.com

NOTE: *This illustrated parts list represents the most current information at the time of publication. Club Car, Inc. is continually working to further improve its vehicles and other products. These improvements may affect the parts used to service the vehicle. Any modification and/or significant change in specifications will be forwarded to all Club Car and Carryall distributors/dealers and will, when applicable, appear in future editions of this illustrated parts list.*

Club Car, Inc. reserves the right to change specifications and designs at any time without notice and without the obligation of making changes to units previously sold.

Copyright © 2006 Club Car, Inc.
Club Car and ArmorFlex
are registered trademarks of Club Car, Inc.
This manual effective July 31, 2006.

2007 TransPorter 4 and 6 Gasoline and Electric Vehicle Illustrated Parts List

CONTENTS

SECTION 1 – BODY AND TRIM

Front Body and Trim	1-3
Dash Pockets and Floormat	1-5
Seat Bottom	1-7
Seat Back Assembly	1-9
Hip Restraints and Seat Back Mounting (Front)	1-11
Hip Restraints and Seat Back Mounting (Rear)	1-13
Rear-Facing Seat Bottom – TransPorter 6	1-15
Rear-Facing Seat Bottom – TransPorter 6, Continued	1-17
Rear-Facing Seat Back and Support Structure – TransPorter 6	1-19
Rear Body Trim	1-21
Battery Insulator – Electric TransPorter Vehicles	1-23
Rear Cargo Bed – TransPorter 4	1-25
Stake Side – TransPorter 4	1-27
Rear Footrest and Handrails – TransPorter 6	1-29

SECTION 2 – WHEELS AND TIRES

Wheels and Tires	2-3
------------------------	-----

SECTION 3 – DECALS

Decals – Electric TransPorter	3-3
Decals – Electric TransPorter, Continued	3-5
Decals – Gasoline TransPorter	3-7
Decals – Gasoline TransPorter, Continued	3-9
Logo Decals	3-11

SECTION 4 – BRAKES, PEDAL, AND CABLES

Rear Brake Assembly, Manually-Adjusted – Vehicles with 4-Wheel Brakes	4-3
Brake Pedal Assembly – Gasoline Vehicles	4-5
Brake Pedal Assembly – IQ Plus Vehicles	4-7
Front Brake Assembly – Vehicles with Four-Wheel Brakes	4-9
Front Brake Cables and Equalizer – Vehicles with Four-Wheel Brakes	4-11
Front Brake Cable Clips and Hardware – Gasoline Vehicles	4-13
Front Brake Cable Clips – IQ Plus Vehicles	4-15
Rear Brake Cables and Equalizer	4-17
Accelerator Pedal Assembly – Gasoline Vehicles	4-19
Accelerator Pedal Assembly – Electric Vehicles with MCOR	4-21
Accelerator Rod	4-23

CONTENTS

SECTION 5 – STEERING, FRONT AND REAR SUSPENSION

Steering Column	5-3
Steering Wheel	5-5
Steering Gear Assembly	5-7
Front Suspension, Upper	5-9
Front Suspension, Lower (Style A)	5-11
Front Suspension, Lower (Style B)	5-13
Front Spindles and Hubs – Vehicles with Four-Wheel Brakes	5-15
Steering Gear Assembly	5-17
Rear Suspension – Gasoline Vehicles	5-19
Rear Suspension – IQ Plus Vehicles	5-21
Stabilizer Bar – Gasoline Vehicles	5-23

SECTION 6 – ELECTRICAL SYSTEM – GASOLINE VEHICLES

Wiring – Gasoline Vehicles	6-5
Headlight and Horn Electrical Components	6-7
Headlights	6-9
Electrical Component Box	6-11
Instrument Panel and Electrical Components	6-13
Horn and Brake Switches	6-15
Starter/Generator Assembly Model G425419 – Gasoline Vehicles	6-17
FE350 Starter/Generator Mounting – Gasoline Vehicles	6-19
Battery – Gasoline Vehicle	6-21
Electrical Components, Rear Body	6-23
Operation and Maintenance Switch	6-25

SECTION 7 – FE350 ENGINE WITH ACR

FE350 Engine with ACR (Automatic Compression Release) – Shrouds and Brackets	7-3
AS11 FE350 Engine – Ignition Components and Flywheel	7-5
FE350 Engine – Oil Circulation	7-7
AS11 FE350 Engine – Cylinder Head	7-9
FE350 Engine with ACR – Crankcase, Camshaft, and Oil Sensor	7-11
AS11 FE350 Engine – Crankcase and Crankshaft	7-13
FE350 Engine Mounting	7-15

SECTION 8 – FUEL, INTAKE, AND GOVERNOR SYSTEMS

Splash Guard	8-3
Fuel Tank (Non-California) with Sending Unit	8-5

CONTENTS

Fuel System	8-7
Carburetor Assembly – FE350	8-9
Carburetor Installation – FE350	8-11
Governor and Accelerator Cables	8-13
Air Box and Intake Hose	8-15
Intake System	8-17
Fuel Tank (California) with Sending Unit	8-19

SECTION 9 – EXHAUST SYSTEM

Exhaust System – FE350 Engine	9-3
-------------------------------------	-----

SECTION 10 – TORQUE CONVERTER

Drive Clutch	10-3
Drive Belt – FE350	10-5
Driven Clutch	10-7

SECTION 11 – UNITIZED TRANSAXLE AND FORWARD/REVERSE SHIFTER

Unitized Transaxle – Gear Cases and Brackets	11-3
Transaxle – Gasoline Vehicles, Transmission and Gear Reduction	11-5
Transaxle – Gasoline Vehicles, Differential and Axles	11-7
Forward/Reverse Shifter	11-9

SECTION 12 – ELECTRICAL SYSTEM – ELECTRIC VEHICLES

Headlight and Horn Electrical Components	12-3
Wiring – IQ Plus Electric Vehicles	12-7
Headlights	12-9
Instrument Panel with Electrical Components	12-11
Horn and Brake Switches	12-13
Motor Controller Output Regulator (MCOR)	12-15
Electrical Components – IQ Plus Vehicles	12-17
Electrical Installation	12-19
Taillights	12-21
Rear Reverse Buzzer	12-23
IQ Plus Vehicle with T-105 Batteries	12-25
IQ Plus Vehicle with T-145 Batteries	12-27

SECTION 13 – ELECTRIC MOTOR

Motor (Model DA5-4006) – IQ Plus	13-3
--	------

CONTENTS

SECTION 14 – TRANSAXLE – ELECTRIC VEHICLES

Transaxle – Electric Vehicles	14-3
-------------------------------------	------

SECTION 15 – BATTERY CHARGER

Onboard PowerDrive Battery Charger (Model 17935), Domestic	15-3
Onboard PowerDrive Battery Charger (Model 17790), Export	15-5
IQ Plus Domestic Battery Charger (Model 25730)	15-7
IQ Plus Onboard Battery Charger (Model 25260)	15-9
Onboard Charger (Models 25260 and 25660) and Reel Mounting	15-11
IQ Plus Onboard Charger (Model 25260) Mounting	15-13
IQ Plus Battery Charger (Model 25880), Export and European	15-15
IQ Plus Onboard Battery Charger (Model 25660), Export	15-17

SECTION 16 – MAINTENANCE AND SERVICE TOOLS

Maintenance and Service Tools	16-3
Maintenance and Service Tools, Continued	16-5
Maintenance and Service Tools, Continued	16-7
Maintenance and Service Tools, Continued	16-9
Maintenance and Service Tools, Continued	16-11


SECTION i – INDEX

BODY AND TRIM

1

G

E

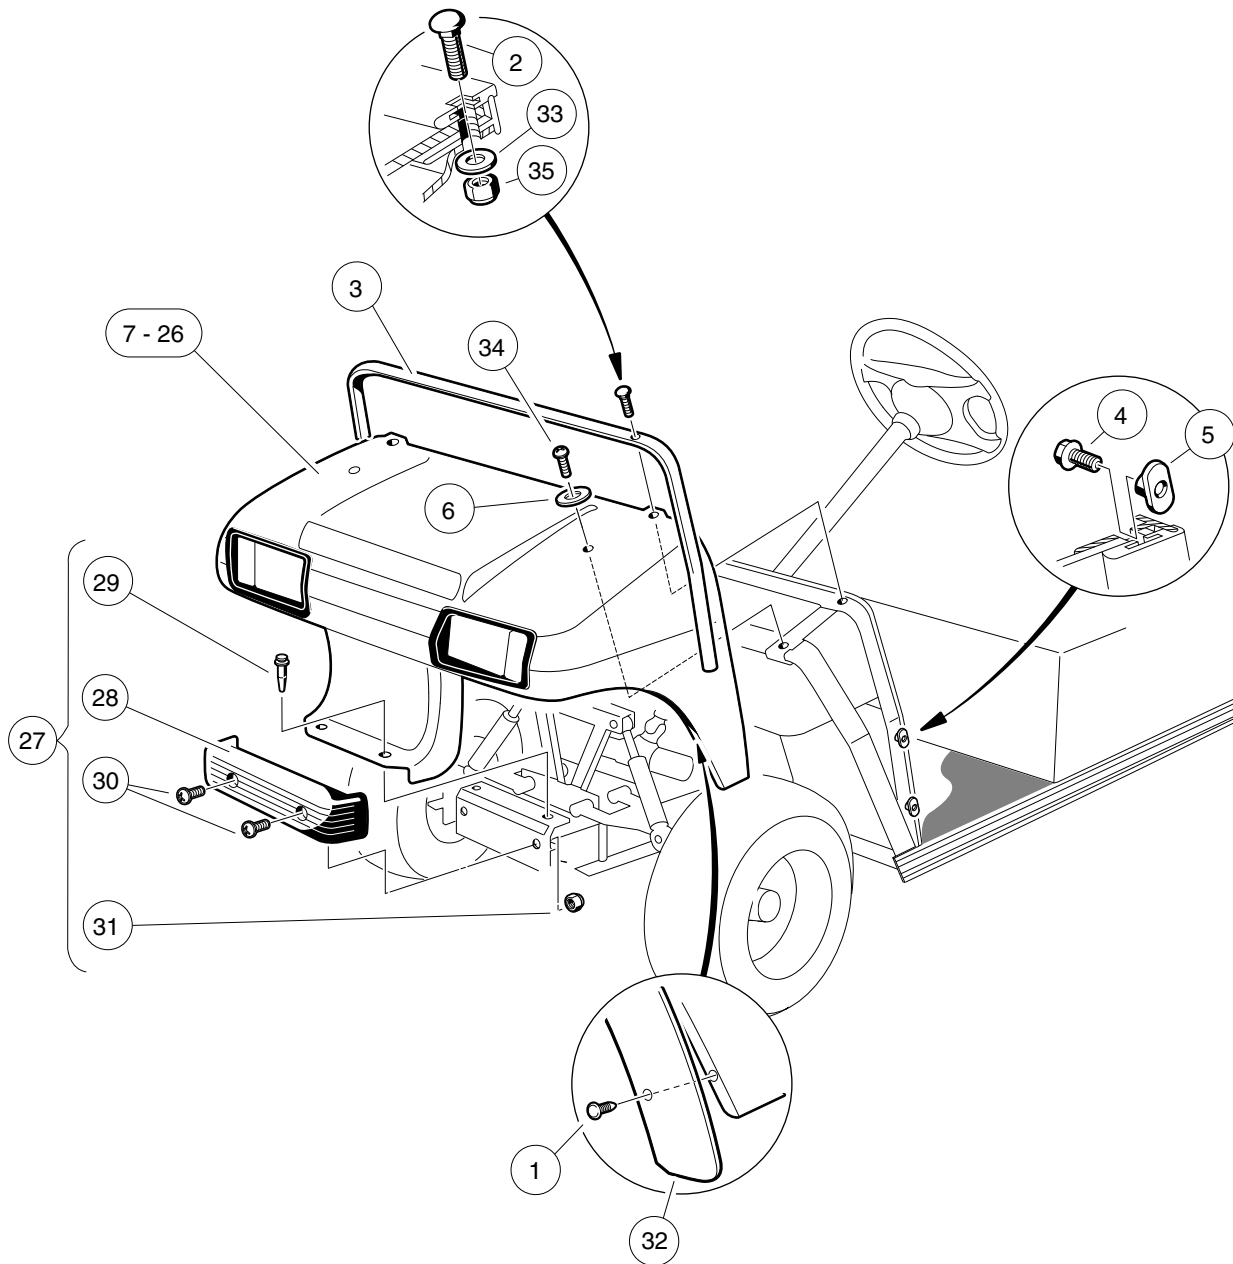1**G****E**

000249-005


FRONT BODY AND TRIM

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010434</u>	Barrel - Plastic	12	
2	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	2	
3	<u>1011014</u>	Trim, Cowl	1	
4	<u>1011017</u>	Screw, #8-32 X 0.375	6	
5	<u>1011394</u>	T-Nut Package (Set of 4)	1	
6	<u>1015075</u>	Washer, 5/16 Flat Type A	2	
7	<u>101692501</u>	Cowl, TPO, Beige	1	
8	<u>101692502</u>	Cowl, TPO, White	1	
9	<u>101692506</u>	Cowl, TPO, Red	1	
10	<u>101692509</u>	Cowl, TPO, Pacific Blue (Royal Blue)	1	
11	<u>101692510</u>	Cowl, TPO, Dark Green	1	
12	<u>101692511</u>	Cowl, TPO, Black	1	
13	<u>101692512</u>	Cowl, TPO, Classic Blue (Navy)	1	
14	<u>101692513</u>	Cowl, TPO, Burgundy	1	
15	<u>101692514</u>	Cowl, TPO, Dark Gray	1	
16	<u>101692515</u>	Cowl, TPO, Safety Yellow	1	
17	<u>101693901</u>	Cowl with Headlight Opening, TPO, Beige	1	
18	<u>101693902</u>	Cowl with Headlight Opening, TPO, White	1	
19	<u>101693906</u>	Cowl with Headlight Opening, TPO, Red	1	
20	<u>101693908</u>	Cowl with Headlight Opening, TPO, Pacific Blue (Royal Blue)	1	
21	<u>101693909</u>	Cowl with Headlight Opening, TPO, Dark Green	1	
22	<u>101693910</u>	Cowl with Headlight Opening, TPO, Black	1	
23	<u>101693911</u>	Cowl with Headlight Opening, TPO, Classic Blue (Navy)	1	
24	<u>101693912</u>	Cowl with Headlight Opening, TPO, Burgundy	1	
25	<u>101693913</u>	Cowl with Headlight Opening, TPO, Dark Gray	1	
26	<u>101693914</u>	Cowl with Headlight Opening, TPO, Safety Yellow	1	
27	<u>1017080</u>	Kit, Front Bumper (includes items 28 through 31)	1	
28	<u>1016868</u>	Front Bumper	1	
29	<u>1016967</u>	Blind Rivet, Push Type	2	
30	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2	
31	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	
32	<u>101870401</u>	Fender Extrusion	2	
33	<u>1241</u>	Washer, 5/16 Type A Flat	2	
34	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2	
35	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	

1

G

E

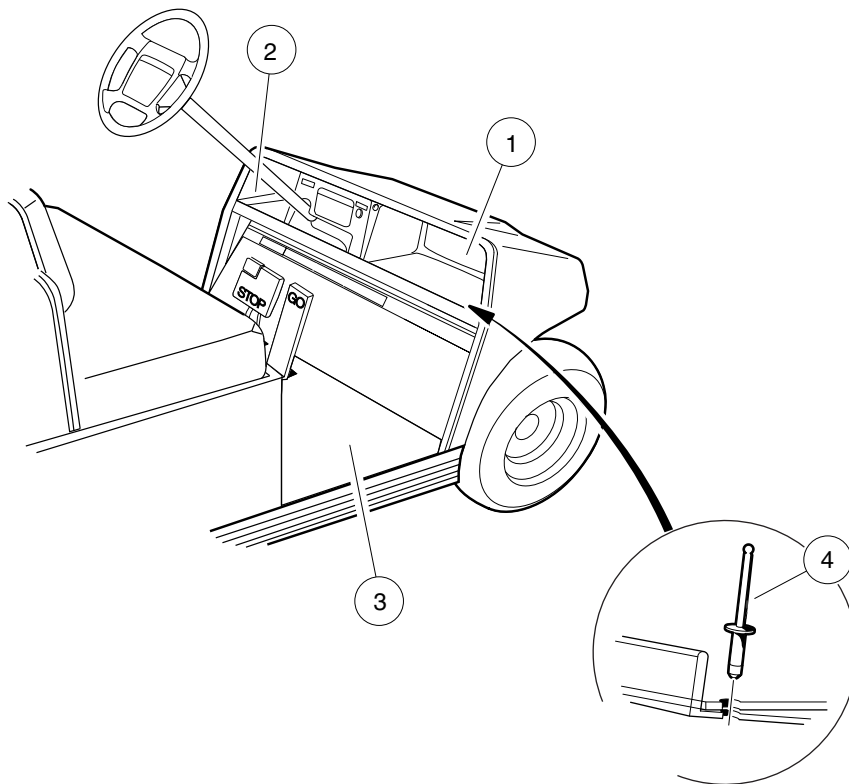


000252-002

DASH POCKETS AND FLOORMAT


ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	<u>1013343</u>	1 2 3 4 Dash Component, Passenger-Side, Black	1	
2	1013344	Dash Component, Driver-Side	1	
3	<u>101503202</u>	Floormat	1	
4	<u>7973</u>	Rivet, 3/16 X .400 Blind	5	

1**G****E**


BEIGE
SEAT BOTTOM ASSEMBLY

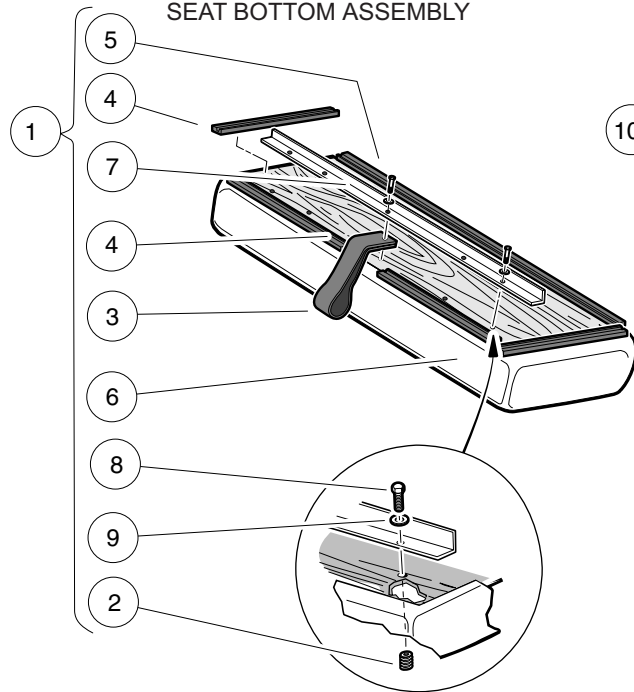


WHITE
SEAT BOTTOM ASSEMBLY

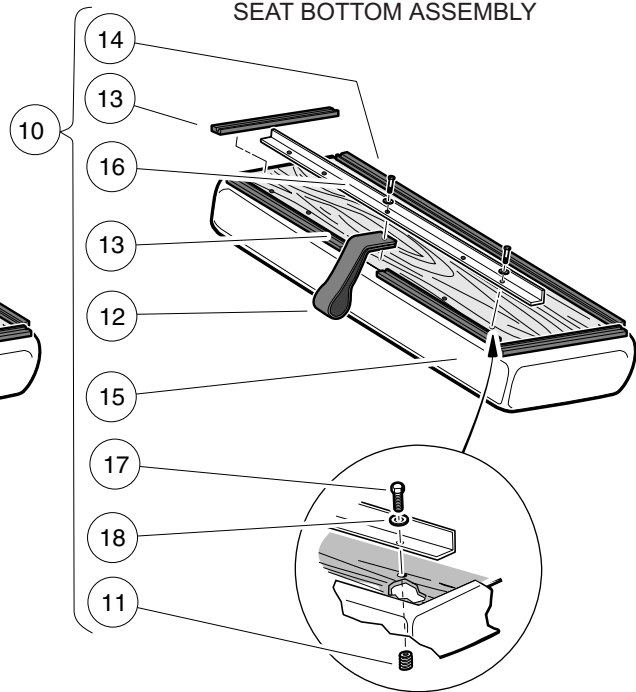

BLACK
SEAT BOTTOM ASSEMBLY

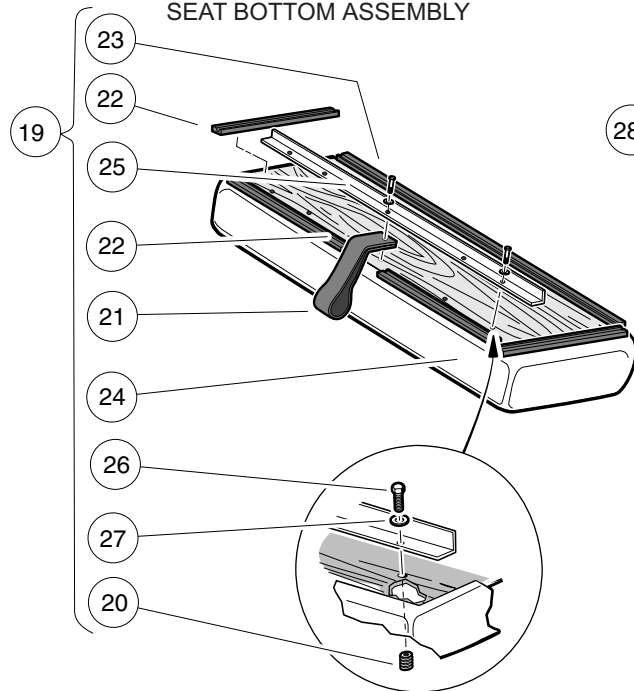

GRAY
SEAT BOTTOM ASSEMBLY

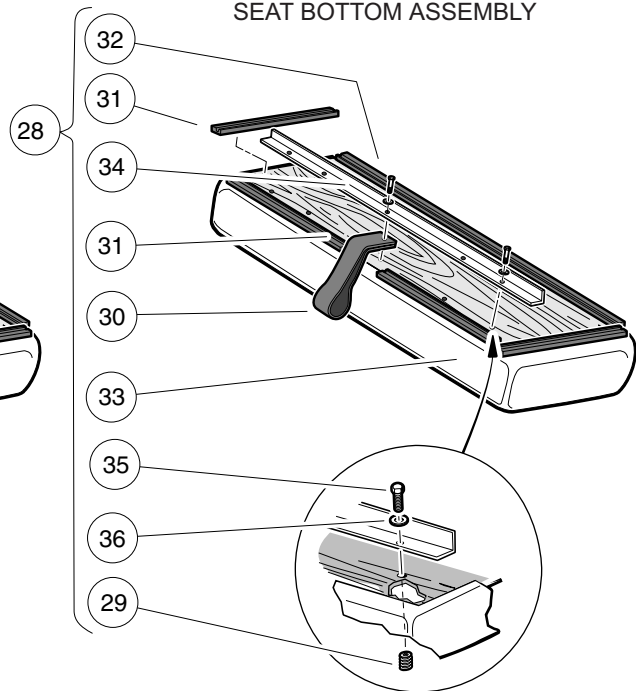

000254-001

SEAT BOTTOM





ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101564501</u>	Seat Bottom Assembly, Beige (includes items 2 through 9)	1
2	<u>1010543</u>	Insert - Wood	5
3	<u>1013309</u>	Strap, Utility Seat	1
4	<u>1013311</u>	Bumper, Seat, Short	4
5	<u>1013312</u>	Bumper, Seat, Long	1
6	<u>101562711</u>	Vinyl Cover, Seat Bottom, Buff	1
7	<u>101894303</u>	Stiffener	1
8	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	5
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	5
10	<u>101564502</u>	Seat Bottom Assembly, White (includes items 11 through 18)	1
11	<u>1010543</u>	Insert - Wood	5
12	<u>1013309</u>	Strap, Utility Seat	1
13	<u>1013311</u>	Bumper, Seat, Short	4
14	<u>1013312</u>	Bumper, Seat, Long	1
15	<u>101562712</u>	Vinyl Cover, Seat Bottom, White	1
16	<u>101894303</u>	Stiffener	1
17	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	5
18	<u>332</u>	Washer, 1/4 Type A Narrow Flat	5
19	<u>101564503</u>	Seat Bottom Assembly, Black (includes items 20 through 27)	1
20	<u>1010543</u>	Insert - Wood	5
21	<u>1013309</u>	Strap, Utility Seat	1
22	<u>1013311</u>	Bumper, Seat, Short	4
23	<u>1013312</u>	Bumper, Seat, Long	1
24	<u>101562714</u>	Vinyl Cover, Seat Bottom, Black	1
25	<u>101894303</u>	Stiffener	1
26	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	5
27	<u>332</u>	Washer, 1/4 Type A Narrow Flat	5
28	<u>101564505</u>	Seat Bottom Assembly, Gray (includes items 29 through 36)	1
29	<u>1010543</u>	Insert - Wood	5
30	<u>1013309</u>	Strap, Utility Seat	1
31	<u>1013311</u>	Bumper, Seat, Short	4
32	<u>1013312</u>	Bumper, Seat, Long	1
33	<u>101562715</u>	Vinyl Cover, Seat Bottom, Gray	2
34	<u>101894303</u>	Stiffener	1
35	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	5
36	<u>332</u>	Washer, 1/4 Type A Narrow Flat	5

1
G
E

1

G

E

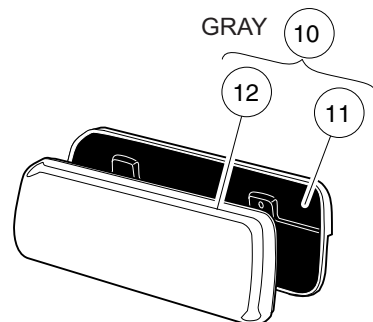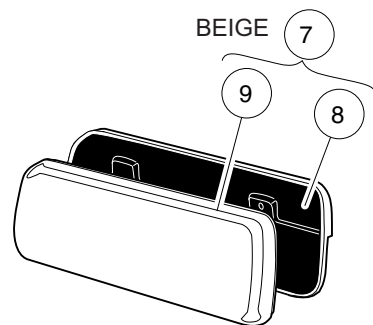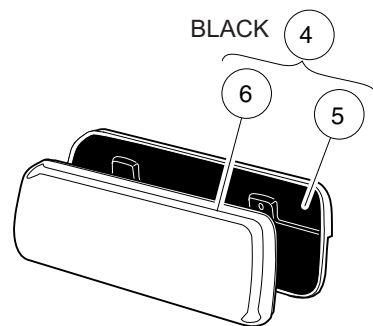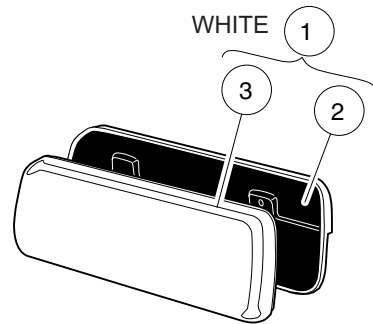

000608-001


SEAT BACK ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>101677701</u>	Seat Back Assembly, White (includes items 2 and 3)	1	
2	1016751	Cap, Seat Back	1	
3	<u>101675512</u>	Vinyl Seat Back, White	1	
4	<u>101677702</u>	Seat Back Assembly, Black (includes items 5 and 6)	1	
5	1016751	Cap, Seat Back	1	
6	<u>101675514</u>	Vinyl Seat Back, Black	1	
7	<u>101677703</u>	Seat Back Assembly, Beige (includes items 8 and 9)	1	
8	1016751	Cap, Seat Back	1	
9	<u>101675511</u>	Vinyl Seat Back, Beige	1	
10	<u>101677705</u>	Seat Back Assembly, Gray (includes items 11 and 12)	1	
11	1016751	Cap, Seat Back	1	
12	<u>101675515</u>	Vinyl Seat Back-nstd Svc	1	

1

G

E

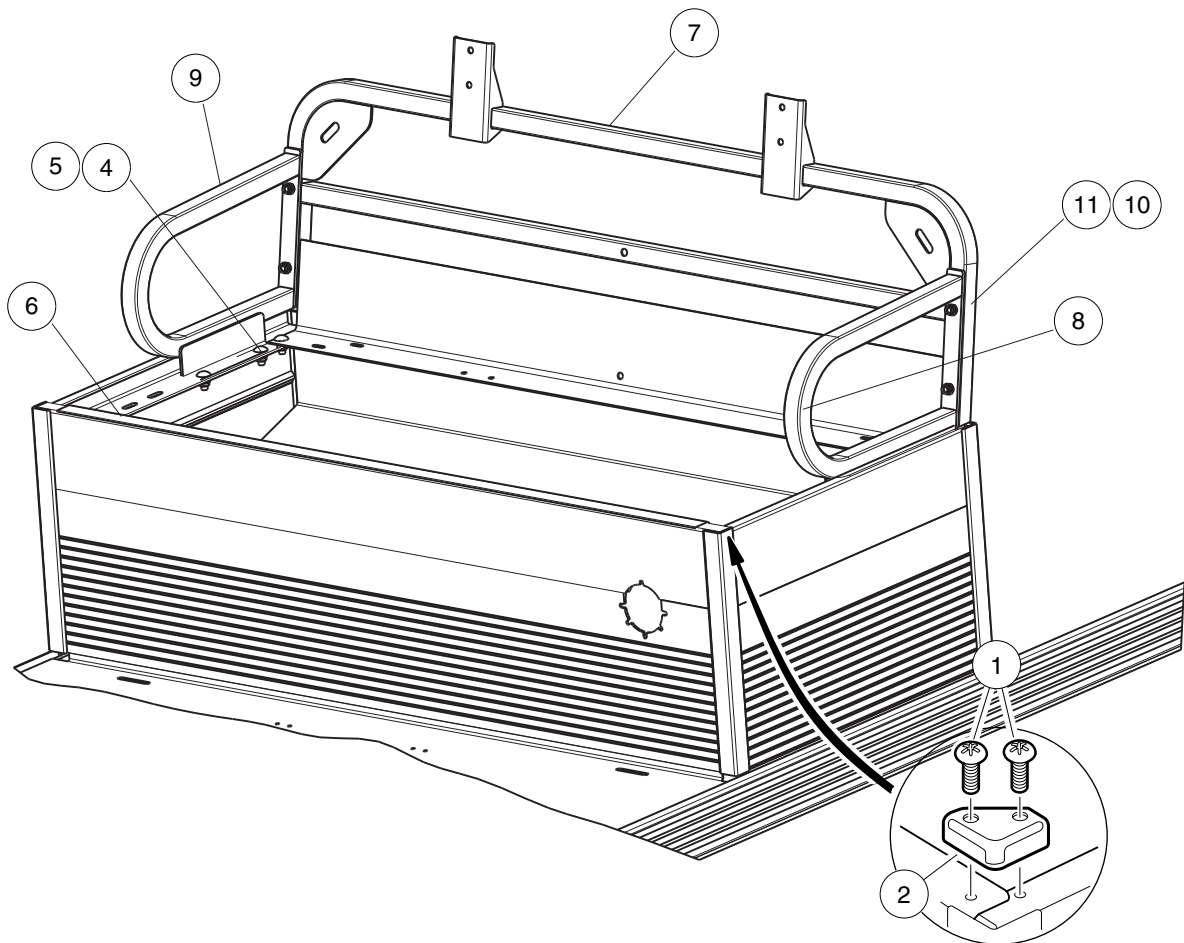

000603-003


HIP RESTRAINTS AND SEAT BACK MOUNTING (FRONT)

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1014321</u>	Screw, #10 Truss-Head Torx	4	
2	<u>1014387</u>	Cap, Corner	2	
3	N/A	Instl, Seat Bk, Hip Restr, Ca4 (includes items 4 through 11)	1	
4	<u>101963301</u>	Bolt, 5/16-18 X 0.75 Round-Head	6	
5	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	6	
6	<u>101964001</u>	Trim, Seat Bottom Front	1	
7	<u>102966401</u>	Seat Back, Tube	1	
8	<u>102966501</u>	Hip Restraint, Left	1	
9	<u>102966502</u>	Hip Restraint, Right	1	
10	<u>103245201</u>	Screw, 5/16-18 X 1.5, Tr Tx Hd	4	
11	<u>103245301</u>	Nut, Hex, Cp, Mech Def, 5/16-1	4	

1

G

E

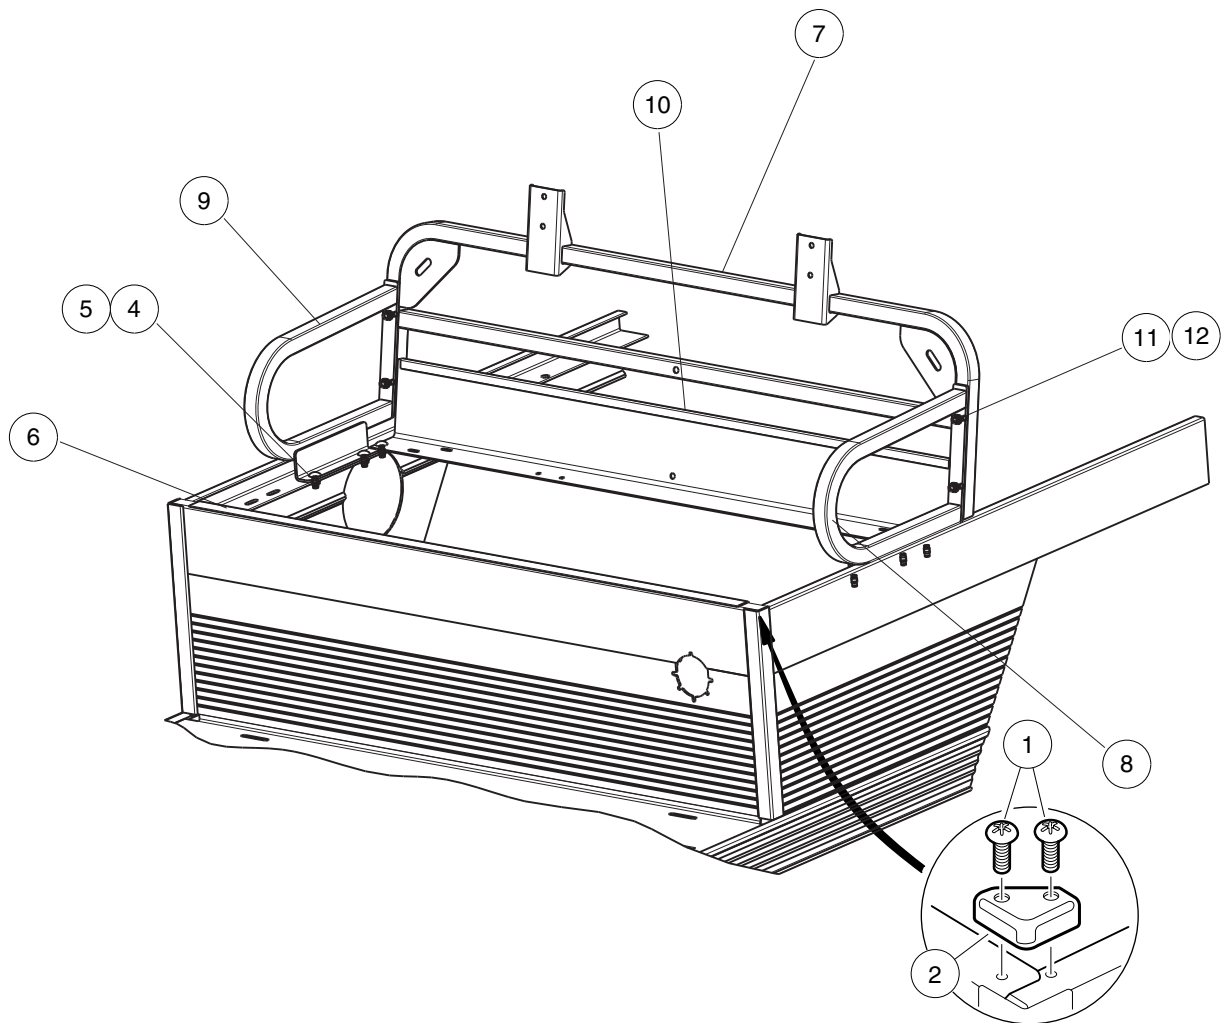

000603-002

HIP RESTRAINTS AND SEAT BACK MOUNTING (REAR)



ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1014321</u>	Screw, #10 Truss-Head Torx	4	
2	<u>1014387</u>	Cap, Corner	2	
3	N/A	Instl, Seat Bk, Hip Restr, Ca6 (includes items 4 through 12)	1	
4	<u>101963301</u>	Bolt, 5/16-18 X 0.75 Round-Head	6	
5	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	6	
6	<u>101964001</u>	Trim, Seat Bottom Front	1	
7	<u>102966401</u>	Seat Back, Tube	1	
8	<u>102966501</u>	Hip Restraint, Left	1	
9	<u>102966502</u>	Hip Restraint, Right	1	
10	<u>102989501</u>	Seal, Bed, 41-Inch	1	
11	<u>103245201</u>	Screw, 5/16-18 X 1.5, Tr Tx Hd	4	
12	<u>103245301</u>	Nut, Hex, Cp, Mech Def, 5/16-1	4	

1

G

E

TRANSPORTER 6

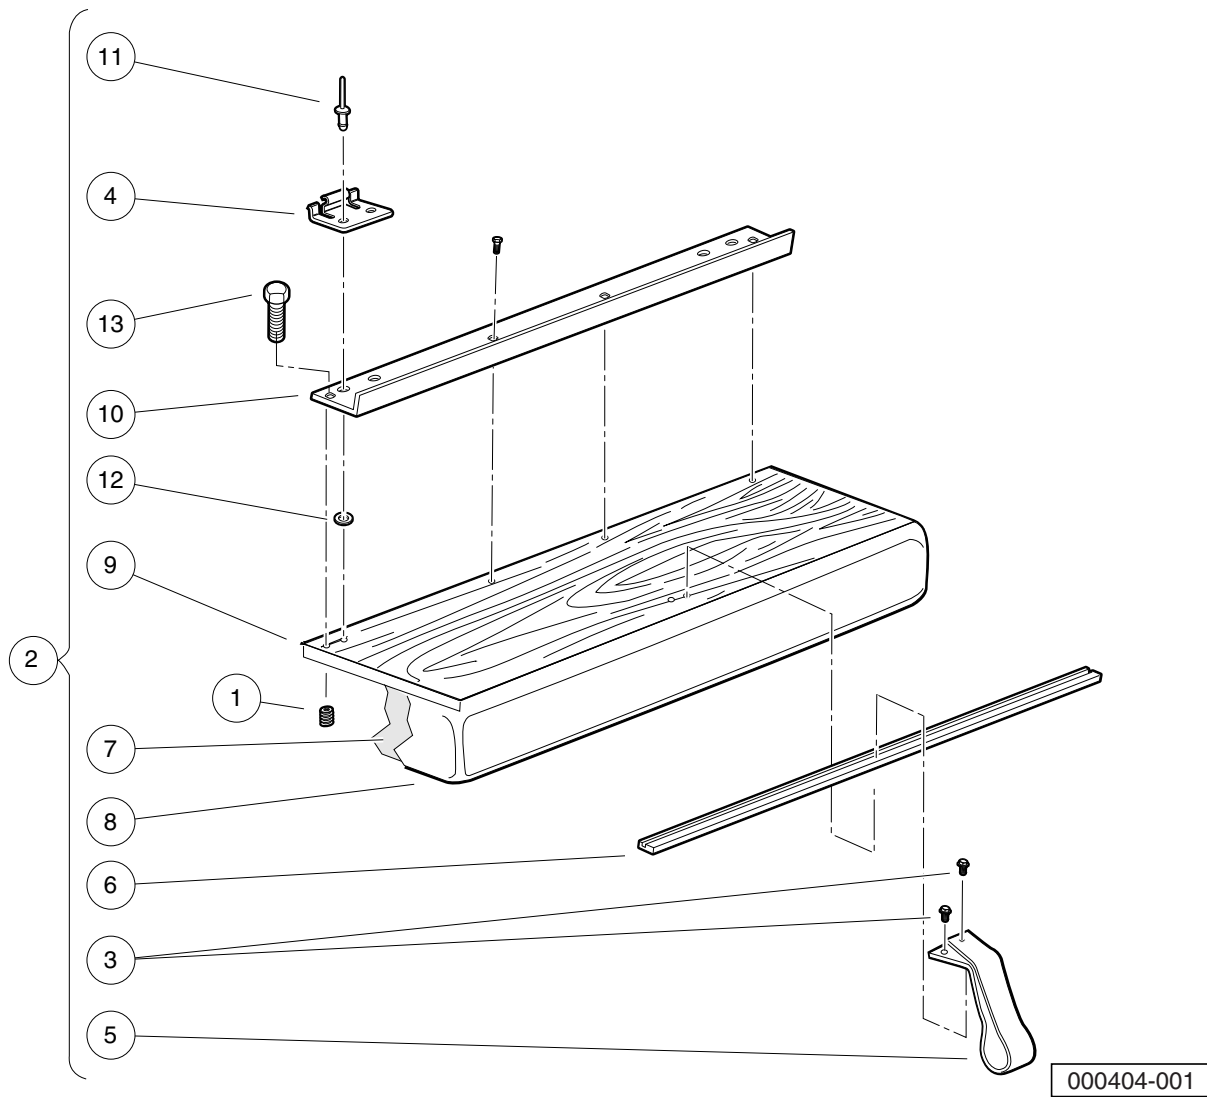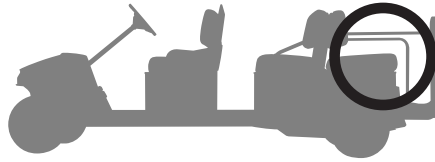

REAR-FACING SEAT BOTTOM – TRANSPORTER 6



ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	1010543	Insert - Wood	4	
2	<u>101684102</u>	Seat Bottom Assembly, Rear, White (includes items 3 through 13)	1	
3	<u>1010545</u>	Screw, Hex Washer Head 1/4-14 X .75	2	
4	<u>1011652</u>	Hinge Plate	2	
5	<u>1013309</u>	Strap, Utility Seat	1	
6	<u>1013312</u>	Bumper, Seat, Long	1	
7	N/A	Foam, Seat	1	
8	<u>101562712</u>	Vinyl Cover, Seat Bottom, White	1	
9	N/A	Plywood Assy	1	
10	<u>1016824</u>	Angle Seat Hinge	1	
11	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
12	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
13	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4	
14	<u>101684103</u>	Seat Bottom Assembly, Rear, Black (includes items 15 through 25)	1	
15	<u>1010545</u>	Screw, Hex Washer Head 1/4-14 X .75	2	
16	<u>1011652</u>	Hinge Plate	2	
17	<u>1013309</u>	Strap, Utility Seat	1	
18	<u>1013312</u>	Bumper, Seat, Long	1	
19	N/A	Foam, Seat	1	
20	<u>101562714</u>	Vinyl Cover, Seat Bottom, Black	1	
21	N/A	Plywood Assy	1	
22	<u>1016824</u>	Angle Seat Hinge	1	
23	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
24	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
25	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4	
Note: Sub-components contained in item 14 are the same as those shown for item 2, except for the vinyl seat cover.				

1

G

E


TRANSPORTER 6

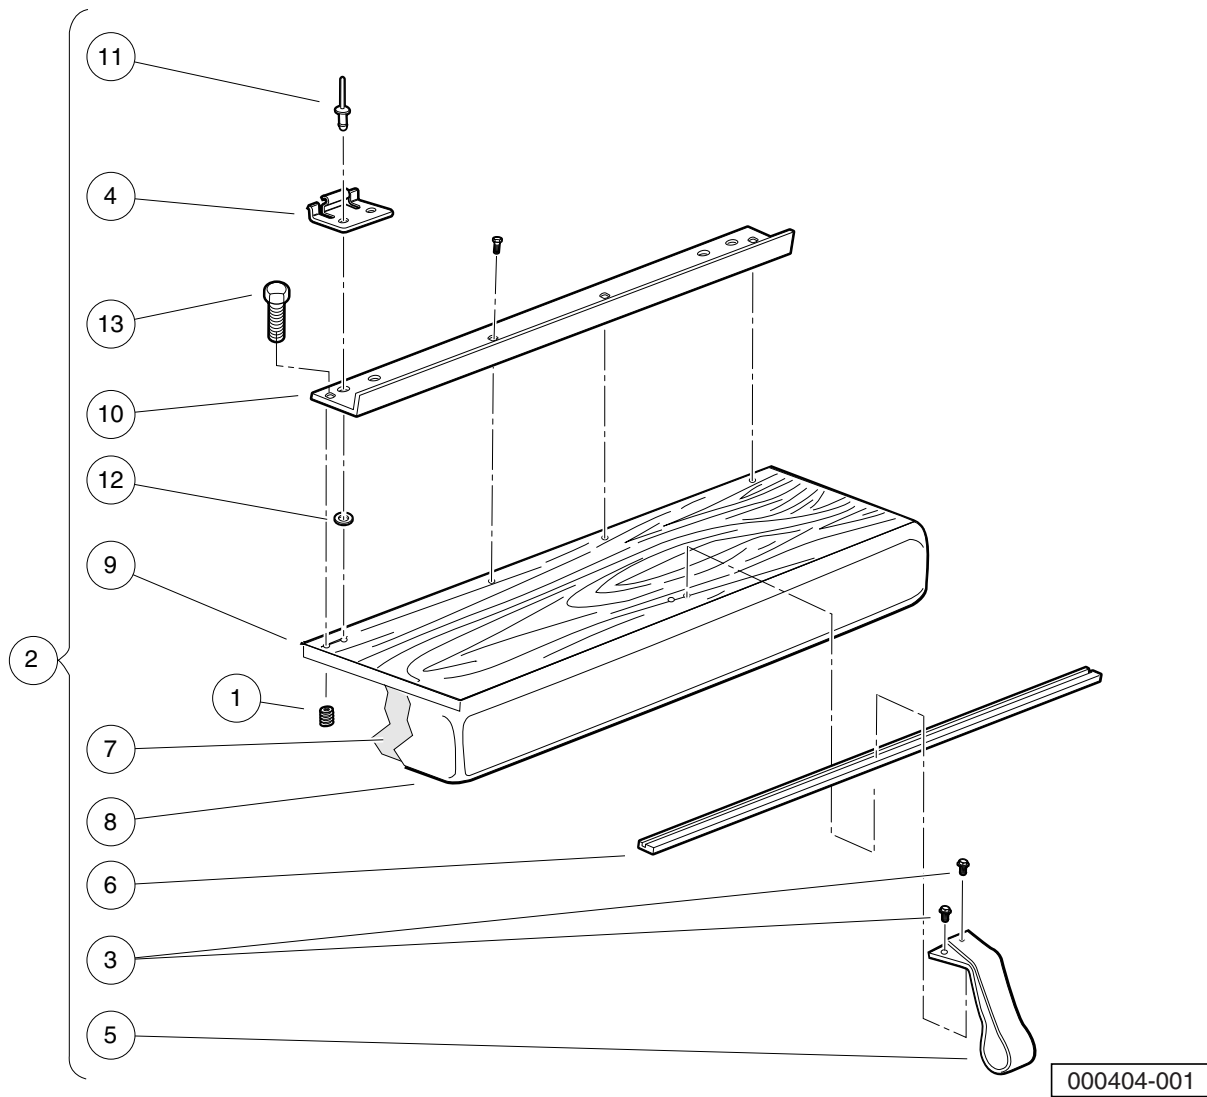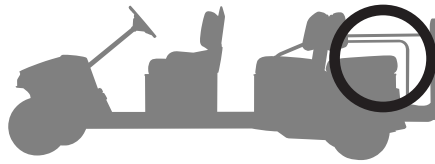

000404-001

REAR-FACING SEAT BOTTOM – TRANSPORTER 6, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	1010543	Insert - Wood	4	
2	<u>101684105</u>	Seat Bottom Assembly, Rear, Gray (includes items 3 through 13)	1	
3	<u>1010545</u>	Screw, Hex Washer Head 1/4-14 X .75	2	
4	<u>1011652</u>	Hinge Plate	2	
5	<u>1013309</u>	Strap, Utility Seat	1	
6	<u>1013312</u>	Bumper, Seat, Long	1	
7	N/A	Foam, Seat	1	
8	<u>101562715</u>	Vinyl Cover, Seat Bottom, Gray	1	
9	N/A	Plywood Assy	1	
10	<u>1016824</u>	Angle Seat Hinge	1	
11	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
12	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
13	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4	
14	****	Seat Bottom Assembly, Rear, Beige (includes items 15 through 25)	1	
15	<u>1010545</u>	Screw, Hex Washer Head 1/4-14 X .75	2	
16	<u>1011652</u>	Hinge Plate	2	
17	<u>1013309</u>	Strap, Utility Seat	1	
18	<u>1013312</u>	Bumper, Seat, Long	1	
19	N/A	Foam, Seat	1	
20	<u>101562711</u>	Vinyl Cover, Seat Bottom, Buff	1	
21	N/A	Plywood Assy	1	
22	<u>1016824</u>	Angle Seat Hinge	1	
23	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
24	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
25	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4	
**** Special order item available upon request. Note: Sub-components contained in item 14 are the same as those shown for item 2, except for the vinyl seat cover.				

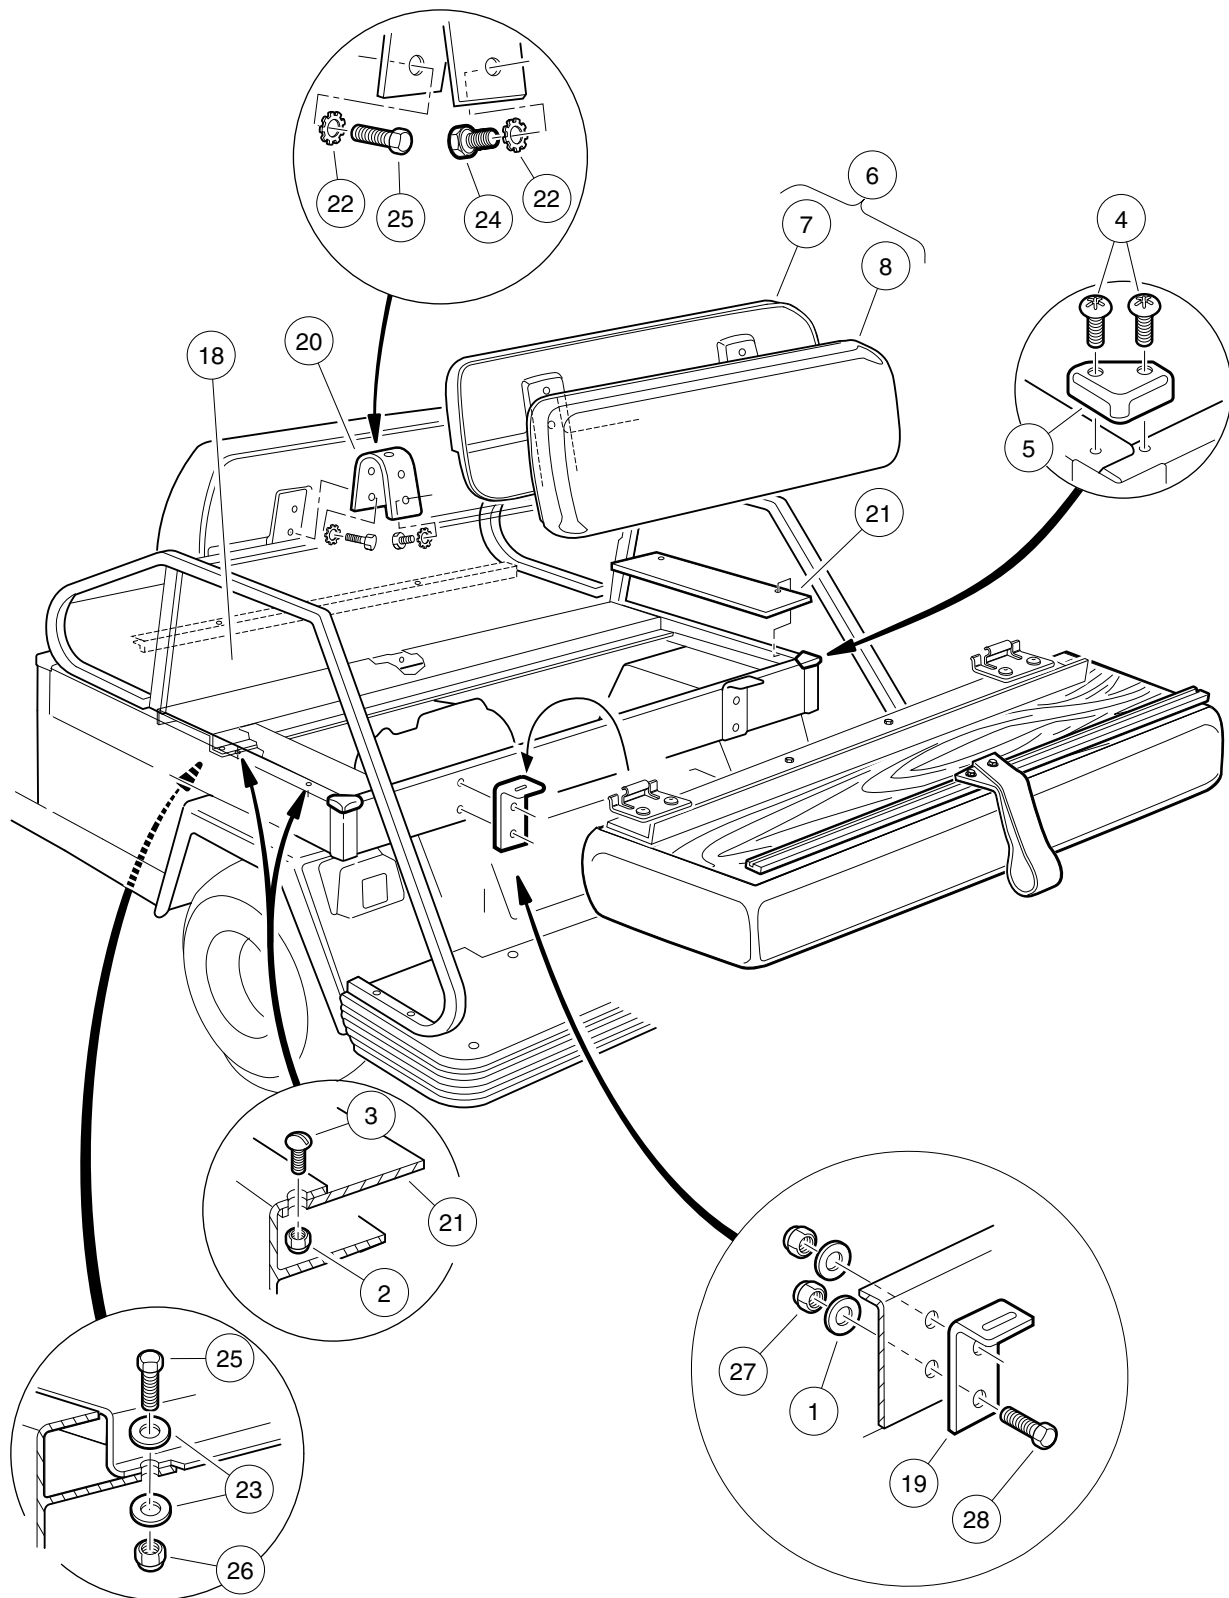1**G****E**

000406-001

REAR-FACING SEAT BACK AND SUPPORT STRUCTURE – TRANSPORTER 6

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1011990</u>	Washer, 3/8 Flat	4	
2	<u>1013061</u>	Locknut, #10-32 Nylon Insert	4	
3	<u>1013169</u>	Screw, #10-32 X 0.5 Round-Head	4	
4	<u>1014321</u>	Screw, #10 Truss-Head Torx	4	
5	<u>1014387</u>	Cap, Corner	2	
6	<u>101677701</u>	Seat Back Assembly, White (includes items 7 and 8)	1	
7	<u>1016751</u>	Cap, Seat Back	1	
8	<u>101675512</u>	Vinyl Seat Back, White	1	
9	<u>101677702</u>	Seat Back Assembly, Black (includes items 10 and 11)	1	
10	<u>1016751</u>	Cap, Seat Back	1	
11	<u>101675514</u>	Vinyl Seat Back, Black	1	
12	<u>101677703</u>	Seat Back Assembly, Beige (includes items 13 and 14)	1	
13	<u>1016751</u>	Cap, Seat Back	1	
14	<u>101675511</u>	Vinyl Seat Back, Beige	1	
15	<u>101677705</u>	Seat Back Assembly, Gray (includes items 16 and 17)	1	
16	<u>1016751</u>	Cap, Seat Back	1	
17	<u>101675515</u>	Vinyl Seat Back-nstd Svc	1	
18	<u>1016816</u>	Support Rear Seat	1	
19	<u>1016819</u>	Seat Hinge Body	2	
20	<u>1016839</u>	Bracket Seat Back Mount	2	
21	<u>1016930</u>	Frame Panel Rear Seat	2	
22	<u>101946201</u>	Washer, Lock, 0.250 External-Tooth	8	
23	<u>332</u>	Washer, 1/4 Type A Narrow Flat	6	
24	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	4	
25	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	7	
26	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	3	
27	<u>8754</u>	Locknut, 3/8-16 Hex	4	
28	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	4	
Note: Sub-components contained in items 9, 12, and 15 are the same as those shown for item 6, except for the vinyl seat covers.				

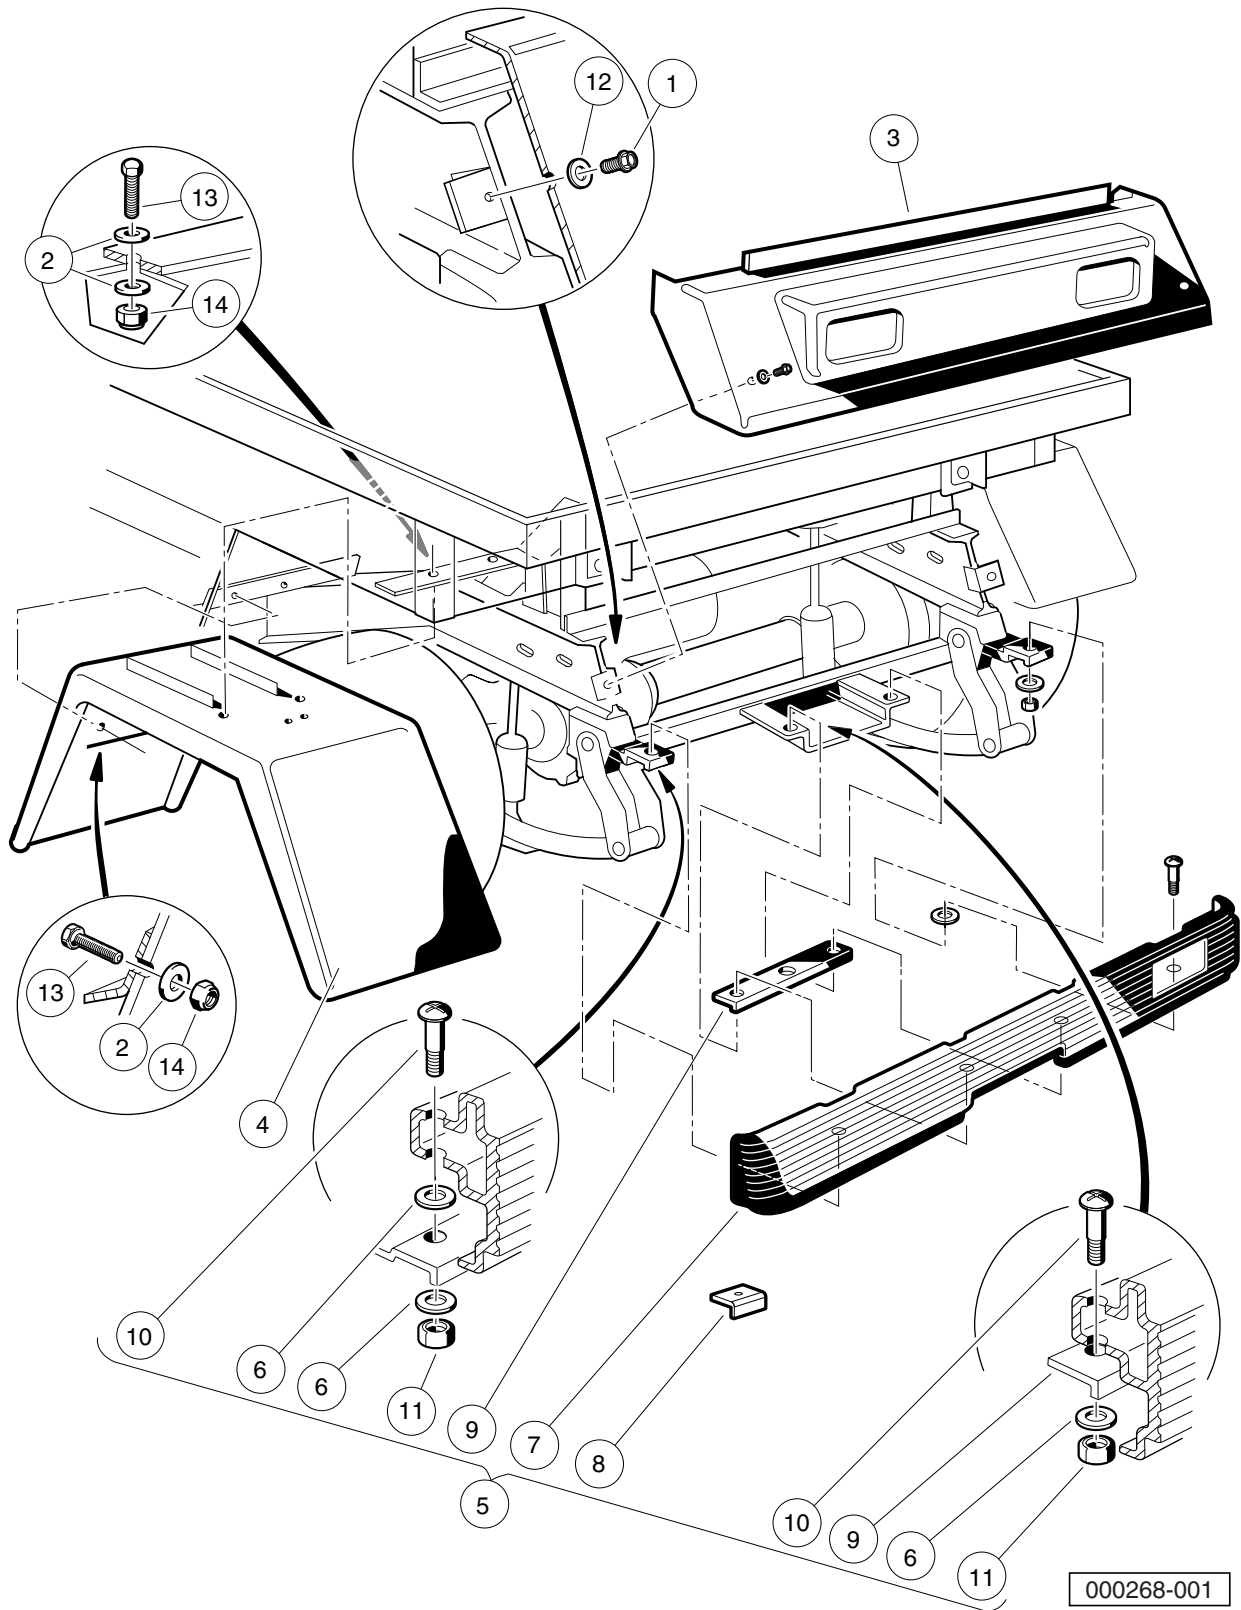1**G****E**


REAR BODY TRIM

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	2	
2	<u>1014306</u>	Washer, 1/4" Type B Flat	12	
3	<u>1015530</u>	Tailskirt	1	
4	<u>1016679</u>	Rear Fender	2	
5	<u>1017079</u>	Kit, Rear Bumper (includes items 6 through 11)	1	
6	<u>1011697</u>	Washer, 5/16 Flat	6	
7	<u>1016379</u>	Bumper, Rear	1	
8	<u>1016874</u>	Plate, Bumper Mounting, Short	2	
9	<u>1016875</u>	Plate, Bumper Mounting, Long	1	
10	<u>1016876</u>	Bolt, 3/8 Shoulder	4	
11	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4	
12	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2	
13	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
14	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	8	

1

G


E

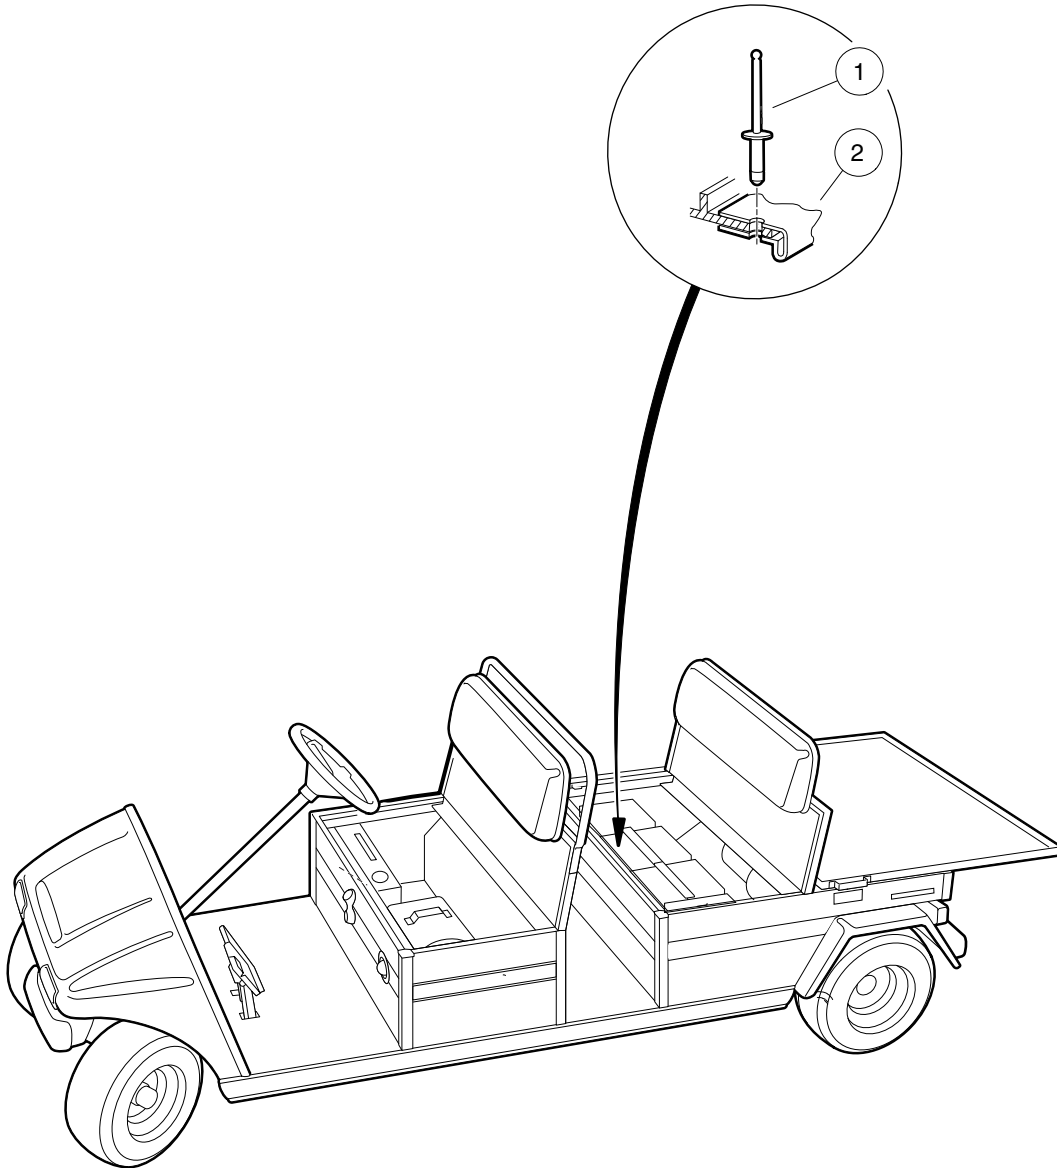

000400-001

BATTERY INSULATOR – ELECTRIC TRANSPORTER VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY	1
1	<u>1013357</u>	1 2 3 4 Rivet, 5/32 Aluminum Pop	2	G
2	<u>101837001</u>	Battery Insulator	1	E

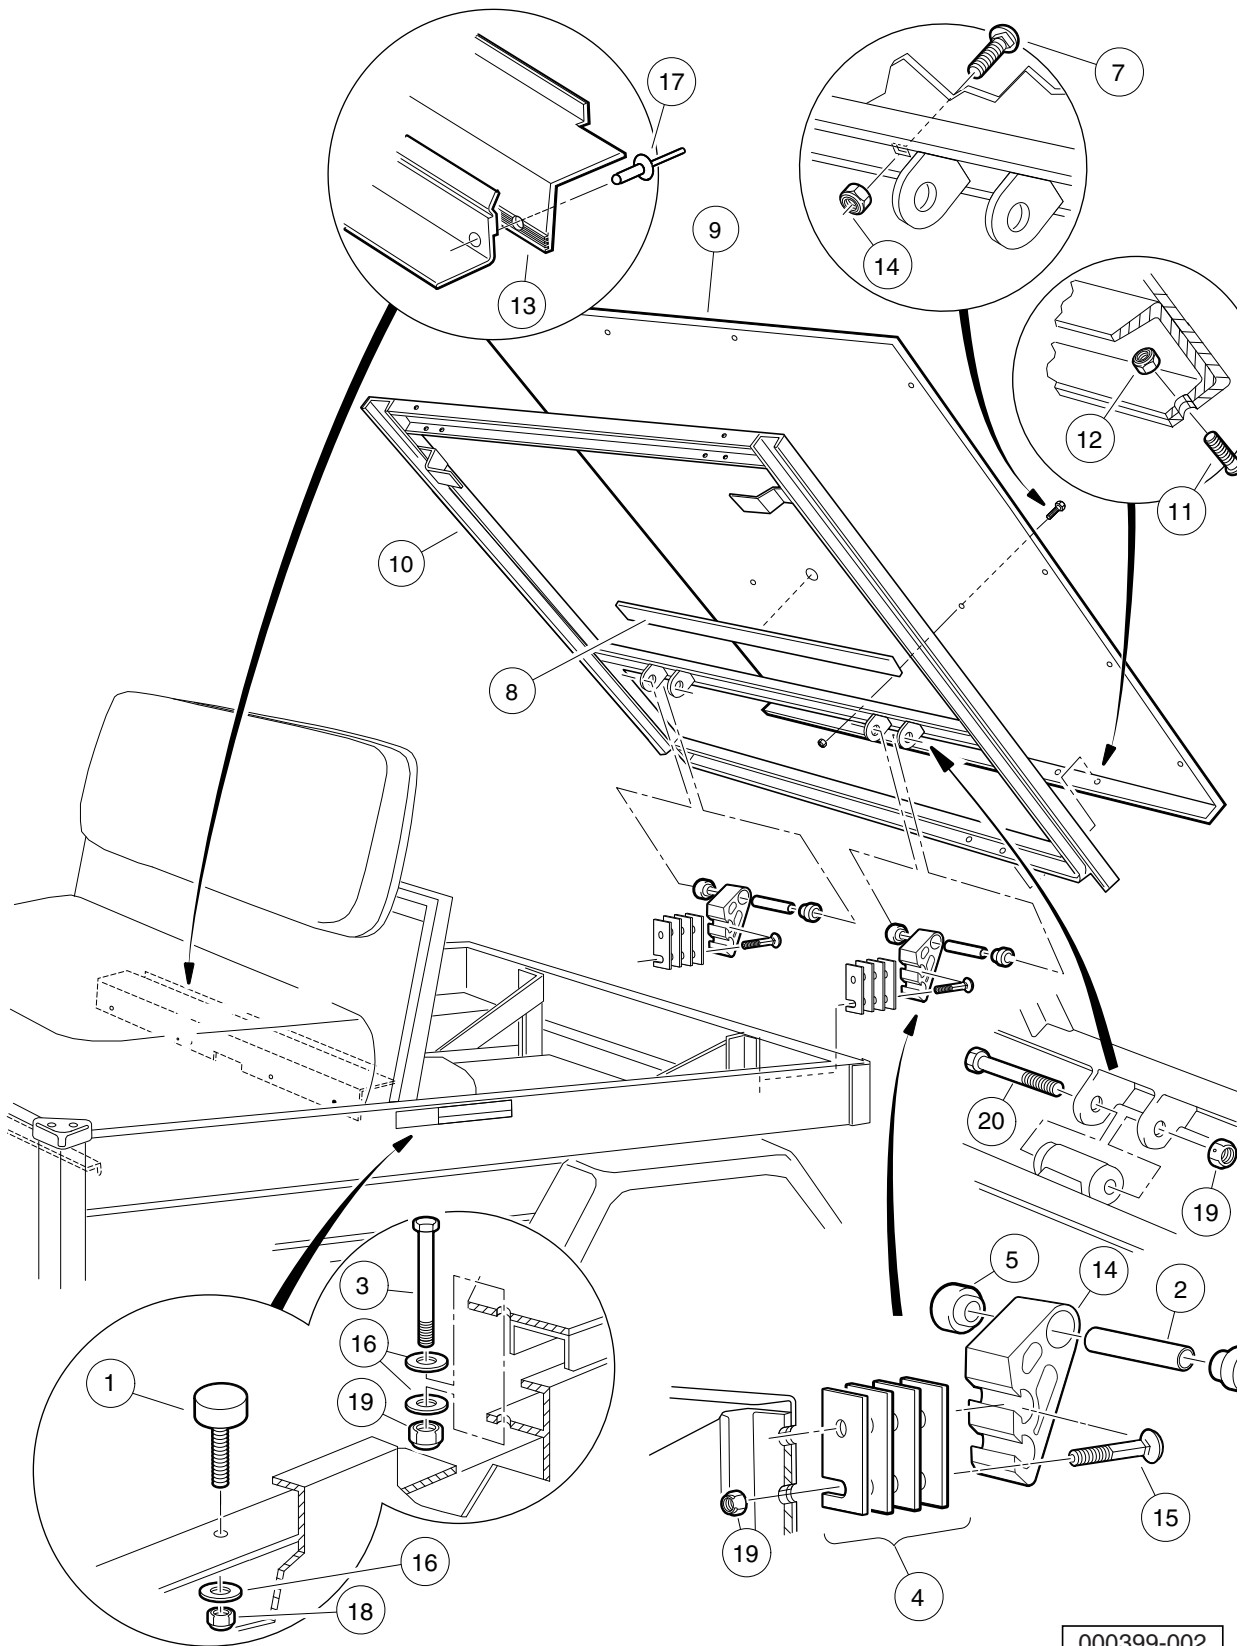1**G****E**

000399-002

REAR CARGO BED – TRANSPORTER 4

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010878</u>	Bumper, Rubber	2	
2	<u>1012303</u>	Bushing, Steel	2	
3	<u>1013872</u>	Bolt, 1/4-20 X 4.00 Hex Head	2	
4	<u>1015507</u>	Shim, Tilt Bed Pivot	1	
5	<u>1015583</u>	Bushing, Urethane	4	
6	<u>1016724</u>	Flat Bed Assembly (includes items 7 through 12)	1	
7	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	2	
8	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4" *	1	
9	N/A	Plate, Floor, Carryall 1 Flat bed	1	
10	N/A	Frame Assembly, Tilt Bed	1	
11	1015399	Screw, 5/16-18 X 0.88 Torx Truss-Head	4	
12	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	6	
13	<u>1017976</u>	Bed Seal	1	
14	<u>103538701</u>	Extra, Bracket, Hinge, Bed	2	
15	<u>103538901</u>	3/8-16 X 3.5 Carr Blt Gr5 Zn	4	
16	<u>332</u>	Washer, 1/4 Type A Narrow Flat	6	
17	7532	Rivet, 3/16 X 0.3125, Pop	4	
18	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4	
19	<u>8754</u>	Locknut, 3/8-16 Hex	6	
20	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2	
		* Note: Item not shown.		

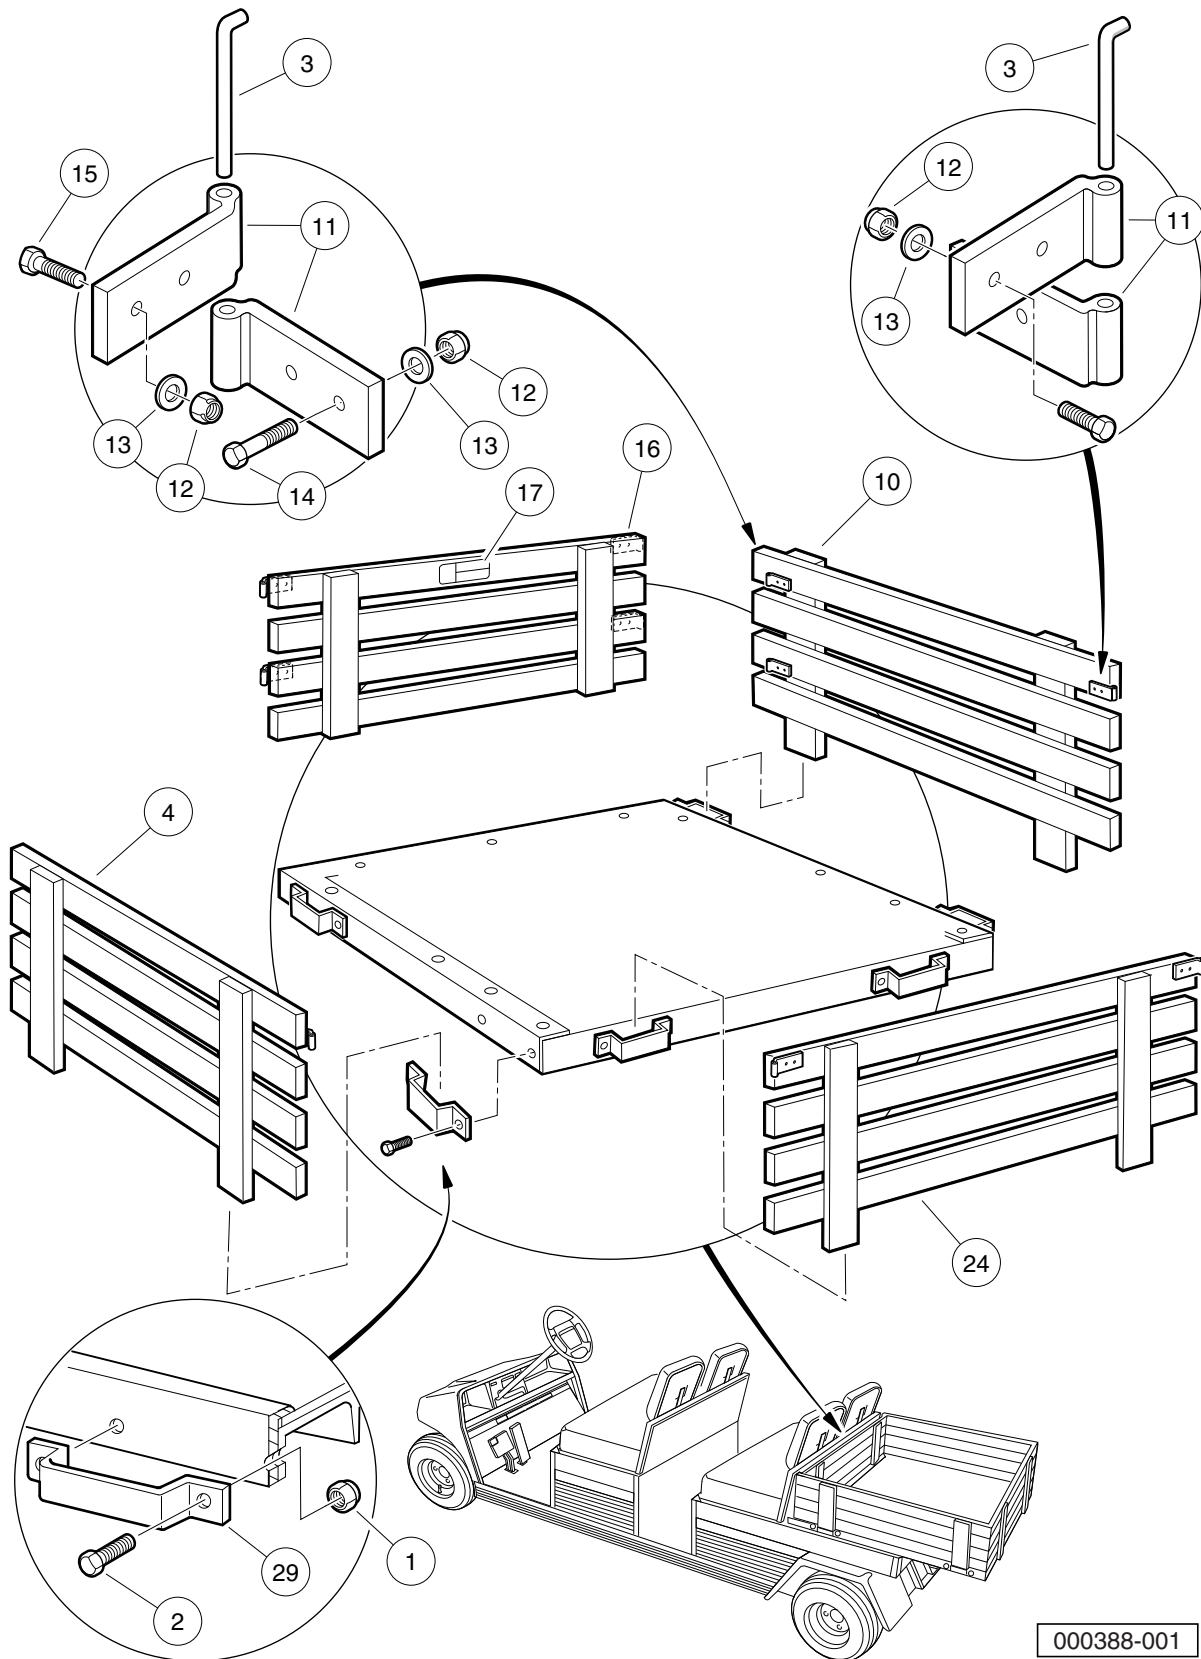
1**G****E**

000388-001

STAKE SIDE – TRANSPORTER 4

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015660</u>	Stake Side Kit (includes items 2 through 29)	1
2	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	12
3	<u>1015656</u>	Pin, hinge	6
4	101565701	Stake Side, Driver-Side (includes items 5 through 9)	1
5	<u>1015654</u>	Stake Side Hinge	3
6	<u>1108</u>	Locknut, 1/4-20 Dimpled	6
7	<u>332</u>	Washer, 1/4 Type A Narrow Flat	19
8	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	3
9	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	3
10	101565702	Stake Side, Passenger-Side (includes items 11 through 15)	1
11	<u>1015654</u>	Stake Side Hinge	3
12	<u>1108</u>	Locknut, 1/4-20 Dimpled	6
13	<u>332</u>	Washer, 1/4 Type A Narrow Flat	19
14	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	3
15	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	3
16	101565703	Stake Side, Front (includes items 17 through 23)	1
17	<u>101553901</u>	Decal, Bed Load Warning	1
18	<u>1015654</u>	Stake Side Hinge	4
19	<u>1016663</u>	Screw, #12-14 X 0.625	2
20	N/A	Plate, Bed Load Decal	1
21	<u>1108</u>	Locknut, 1/4-20 Dimpled	8
22	<u>332</u>	Washer, 1/4 Type A Narrow Flat	24
23	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	8
24	101565704	Stake Side, Rear (includes items 25 through 28)	1
25	<u>1015654</u>	Stake Side Hinge	2
26	<u>1108</u>	Locknut, 1/4-20 Dimpled	4
27	<u>332</u>	Washer, 1/4 Type A Narrow Flat	20
28	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	4
29	<u>1016077</u>	Bracket, Stake Side	6
Note: Items 19 and 20 are not shown.			

1
G
E

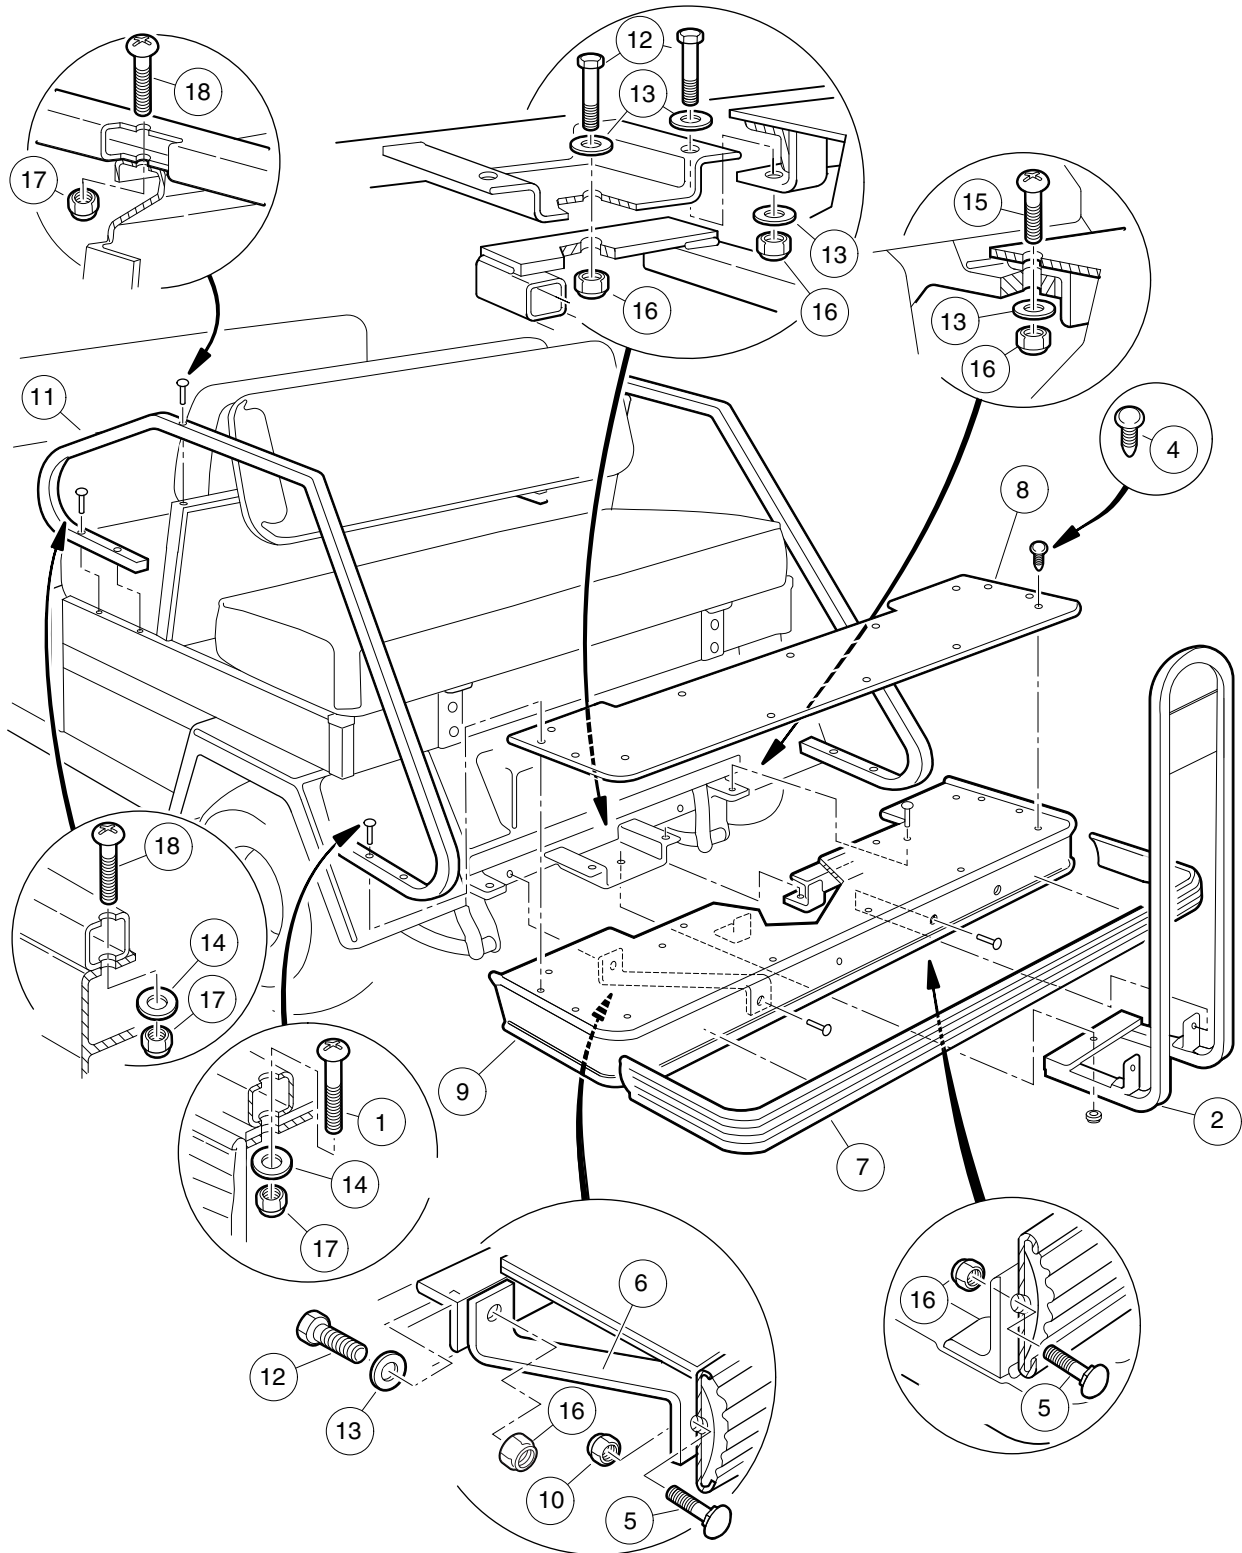1**G****E**

000405-001

REAR FOOTREST AND HANDRAILS – TRANSPORTER 6

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1011988</u>	Screw, 1/4-20 X 2.00 Phillips Truss-Head	4	
2	<u>1016842</u>	Rear Seat Handrail Weldment	1	
3	<u>1016843</u>	Rear Footrest Assembly (includes items 4 through 10)	1	
4	<u>1010434</u>	Barrel - Plastic	10	
5	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	4	
6	<u>1016668</u>	Connecting Bar	2	
7	<u>1016835</u>	Bumper, Side Trim	1	
8	****	Foot Rest Mat	1	
9	N/A	Rear Footrest Weldment	1	
10	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	
11	<u>101846301</u>	Rear Seat Armrest/Hip Restraint	2	
12	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	5	
13	<u>1241</u>	Washer, 5/16 Type A Flat	9	
14	<u>332</u>	Washer, 1/4 Type A Narrow Flat	8	
15	<u>7410</u>	Screw, 5/16-18 X 1.25 Truss Hd	2	
16	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	8	
17	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	9	
18	<u>8418</u>	Screw, 1/4-20 X 1.50 Phillips Truss-Head	6	
**** Special order item available upon request.				

1

G

E

WHEELS AND TIRES

2

G

 


E



FOR FRONT OR REAR

BEIGE RIMS

WHITE RIMS

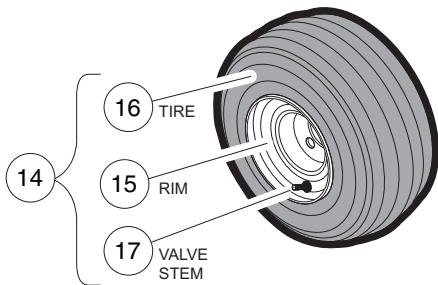
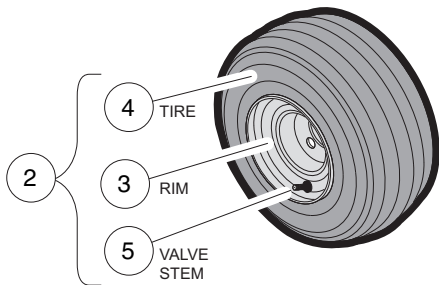


PREMIUM TREAD

FOR REAR ONLY

BEIGE RIMS

WHITE RIMS


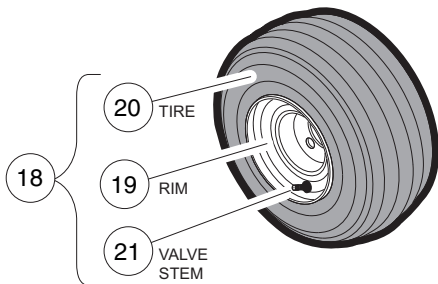
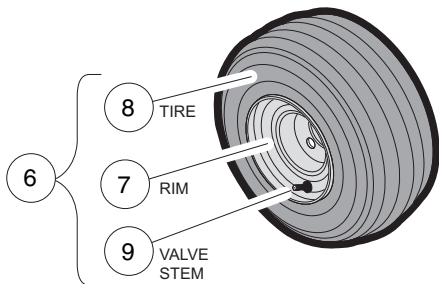


EXTRA TRACTION
TREAD

FOR FRONT ONLY

BEIGE RIMS

 WHITE RIMS

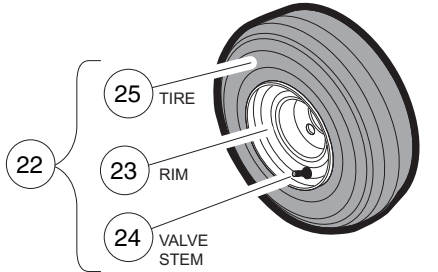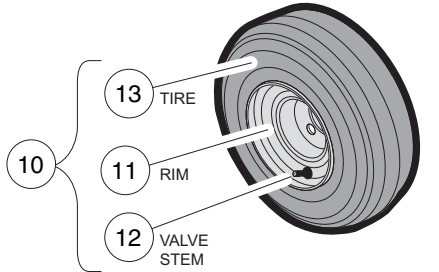

DURO HF 232 TREAD

000269-003

WHEELS AND TIRES

ITEM	PART NO.	DESCRIPTION	QTY	2 G E
		1 2 3 4		
1	<u>1010984</u>	.500-20 Unf Lug Nut	16	
2	<u>101570506</u>	Tire/Wheel Asm, Beige, Premium Tread, 6-ply (includes items 3 through 5)	4	
3	<u>1015707</u>	Wheel Rim, Beige	1	
4	<u>101737002</u>	Tire, Unmounted	1	
5	<u>7310</u>	Valve Stem	1	
6	<u>101570507</u>	Tire/Wheel Asm, Beige, Xtrac Tread, 6-ply (includes items 7 through 9)	2	
7	<u>1015707</u>	Wheel Rim, Beige	1	
8	N/A	Tire, Unmounted Xtrac 18 x 8.50-8	1	
9	<u>7310</u>	Valve Stem	1	
10	<u>101570514</u>	Tire/Wheel Asm, Beige, Duro HF 232 Tread (includes items 11 through 13)	2	
11	<u>1015707</u>	Wheel Rim, Beige	1	
12	<u>7310</u>	Valve Stem	1	
13	****	Tire, Unmounted, 6-Ply Rated (18.5 x 8.5 - 8) (Duro)	1	
14	<u>101651406</u>	Tire/Wheel Asm, White, Premium Tread, 6-Ply (includes items 15 through 17)	4	
15	<u>1014771</u>	Wheel Rim, White	1	
16	<u>101737002</u>	Tire, Unmounted	1	
17	<u>7310</u>	Valve Stem	1	
18	<u>101651407</u>	Tire/Wheel Asm, White, Extra-Traction, 6-Ply (includes items 19 through 21)	2	
19	<u>1014771</u>	Wheel Rim, White	1	
20	N/A	Tire, Unmounted Xtrac 18 x 8.50-8	1	
21	<u>7310</u>	Valve Stem	1	
22	<u>101651414</u>	Tire/Wheel Asm, White, Duro HF 232 (includes items 23 through 25)	2	
23	<u>101918402</u>	Wheel Rim, White	1	
24	<u>7310</u>	Valve Stem	1	
25	****	Tire, Unmounted, 6-Ply Rated (18.5 x 8.5 - 8) (Duro)	1	
		**** Special order item available upon request.		

2

G

E

DECALS

3

G

E

3

G

E

⚠ WARNING**ROLLOVER OR FALLING OFF MAY CAUSE DEATH.**

- Before using vehicle, read operating instructions.
- Remain seated and hold on to seat handle while moving.
- Do not start vehicle until all occupants are seated.
- Two (2) persons per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not leave children unattended on vehicle.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Never stand in front of or behind vehicle.

CCI 103205401

OPERATING INSTRUCTIONS

- Read owner's manual and dash-mounted safety warnings prior to driving.
- Study and understand controls.

TO OPERATE

- Turn wheels to desired direction and ensure path is clear.
- Turn key to ON position.
- While stopped, place Forward/Reverse switch in desired position:
F—Forward N—Neutral R—Reverse (Buzzer will sound)
- Park brake will release and vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and press brake pedal.


BEFORE LEAVING

- Press park brake pedal until it locks and holds vehicle.
- Place Forward/Reverse switch in NEUTRAL position.
- Turn key OFF and remove key when not in use.

MOTOR BRAKING

- Electric motor braking provides speed regulation functions.
- For parked vehicle, beeping alarm indicates vehicle roll away.
- In operation, beeping alarm indicates reduction in motor braking.
- Apply brakes to further reduce vehicle speed as required.
- System is activated only when tow switch is in the RUN position.
- When towing this vehicle, tow switch must be in the TOW position.

CCI 102518001

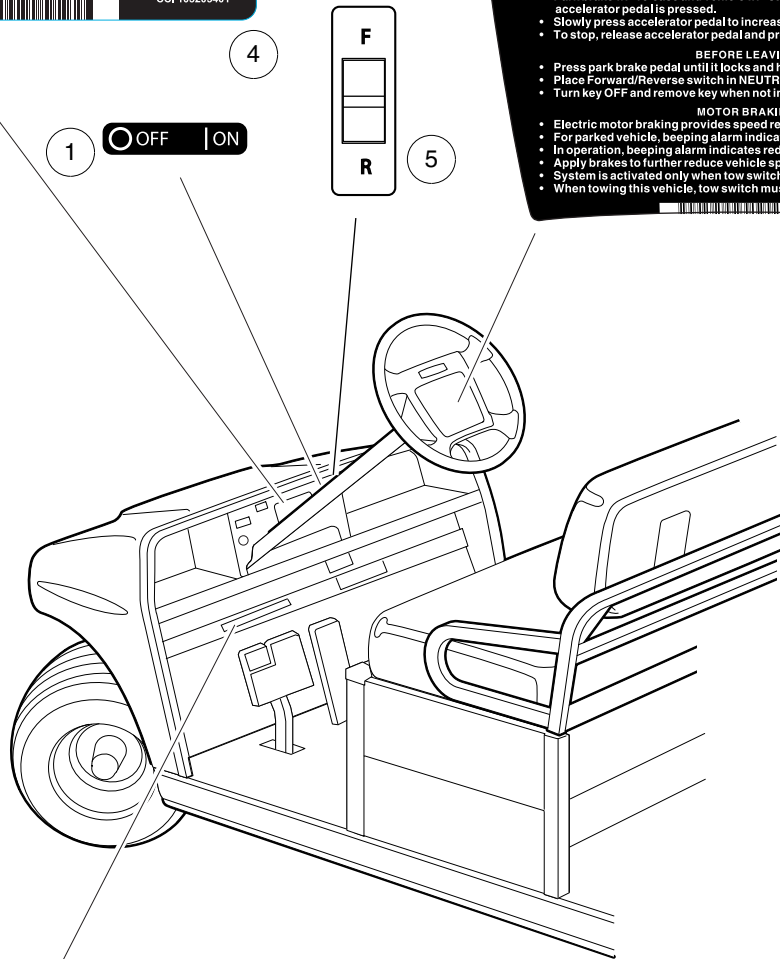**VEHICLE
LOADING**

Read Owner's Manual
and warnings on dash.

- Vehicle rated capacity - 1500 lbs. on level surface only. Weight to include passengers, cargo bed load, and gross trailer weight. See Owner's Manual.
- Maximum cargo load CARRYALL 6 and TURF 6 - 1000 lbs., TRANSPORTER - 300 LBS. Weight to include cargo bed load and gross trailer weight.
- Maximum trailer hitch tongue weight - 150 lbs.

- Cargo should be evenly spread over the floor of the cargo bed as far forward as possible and secured.
- For vehicle stability, when fully loaded, drive slowly and avoid stopping on or backing down steep hills.
- Avoid top heavy loads. See Owner's Manual.
- When driving on uneven terrain or down steep hills, reduce speed and load.

CCI 101960001

2

000628-001

DECALS – ELECTRIC TRANSPORTER

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>101825101</u>	Decal, Off/On	1	
2	<u>101960001</u>	Decal, Vehicle Loading	1	
3	<u>102518001</u>	Decal, Operating Instr, Elec	1	
4	<u>103205401</u>	Decal, Warning, Rollover, Utl	1	
5	<u>103210301</u>	Decal, Forward/Reverse, Electric	1	

WARNING
BATTERY EXPLOSION COULD RESULT IN SEVERE PERSONAL INJURY.

- Do not store items in battery compartment.
- Place Run/Tow switch in TOW position before:
- Disconnecting or connecting battery cables
- Towing this vehicle
- Extended storage
- Servicing the vehicle

NORMAL

TRIPPED

TOW

RUN

CCI 102945101

NOTICE
Do not operate vehicle without this cover properly installed.
Do not direct water stream in this area, will cause damage to components.
See vehicle maintenance and service manual before servicing.

CCI 101931501

7

5

NOTICE

DO NOT USE AS GROUND
CCI 1019646-01

DANGER / POISON

EXPLOSIVE
GASES CAN CAUSE
BLINDNESS OR INJURY


SHIELD EYES

NO
SPARKS
FLAMES
SMOKING

SULFURIC
ACID
CAN CAUSE
BLINDNESS OR
SEVERE BURNS

FLUSH EYES
IMMEDIATELY
WITH WATER
GET MEDICAL
HELP FAST

KEEP OUT OF THE REACH OF CHILDREN – DO NOT TIP – KEEP VENT CAPS TIGHT AND LEVEL

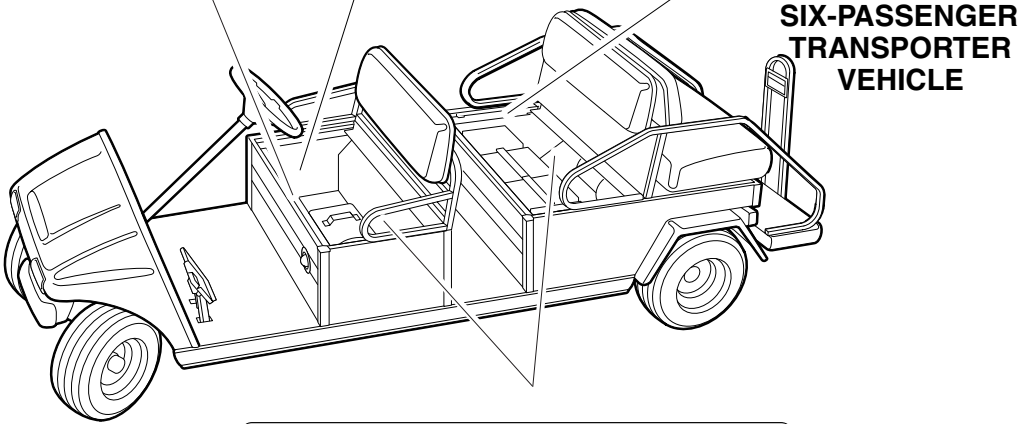


WARNING
AVOID FIRE HAZARD

- Replacement battery wires must be 4-gauge (AWG) with low-resistance terminals equivalent to factory-installed wires.
- Ensure that battery connections are clean and properly tightened. See owner's manual.

CCI 102967601

8

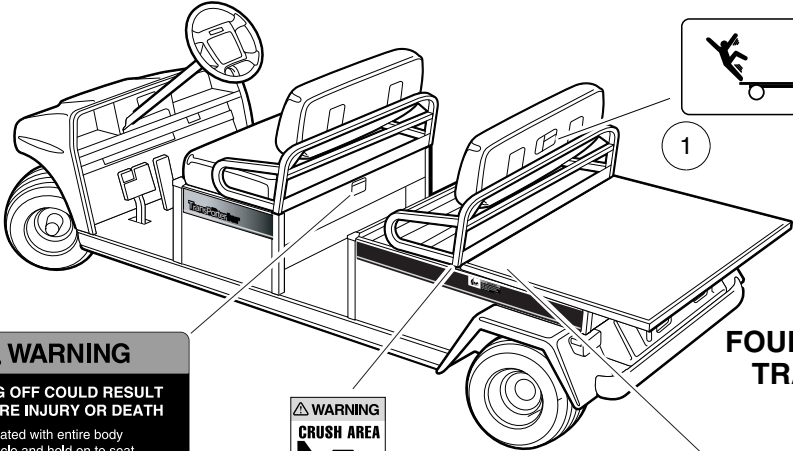

WARNING
Riding in cargo bed can cause severe injury or death.
Do not ride in cargo bed.

CCI 1015539-01

1

WARNING
FALLING OFF COULD RESULT IN SEVERE INJURY OR DEATH

- Remain seated with entire body inside vehicle and hold on to seat handle or handrail at all times.
- Two (2) persons per bench seat maximum.
- One (1) person per bucket seat maximum.
- Do not leave children unattended on vehicle at anytime.
- Never stand in front of or behind vehicle.

CCI 101705701

3

WARNING
CRUSH AREA
STAY CLEAR

CCI 101609401

2

WARNING
FAILURE TO FOLLOW THESE INSTRUCTIONS CAN CAUSE SEVERE INJURY OR DEATH.
Bed can tip up unexpectedly. Bed hold down bolts must be fastened.

CCI 101707801

4

000629-001

DECALS – ELECTRIC TRANSPORTER, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>101553901</u>	Decal, Bed Load Warning	1	
2	<u>101609401</u>	Decal, Crush Area Warning	2	
3	<u>101705701</u>	Decal, Warning	1	
4	<u>101707801</u>	Decal, Bed Hold-Down Bolts	1	
5	<u>101931501</u>	Decal, Component Cover	1	
6	<u>101964601</u>	Decal, No Ground Warning	1	
7	<u>102845101</u>	Decal, Tow Switch	1	
8	<u>102967601</u>	Decal, Warning, 4 Gauge Wire	1	

3

G

E

WARNING**ROLLOVER OR FALLING OFF MAY CAUSE DEATH.**

- Before using vehicle, read operating instructions.
- Remain seated and hold on to seat handle while moving.
- Do not start vehicle until all occupants are seated.
- Two (2) persons per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not leave children unattended on vehicle.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Never stand in front of or behind vehicle.

CCI 103205401

OPERATING INSTRUCTIONS

- Read Owner's Manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.

TO START ENGINE

- Place shift lever in "N" - Neutral position.
- Depress brake pedal.
- Turn key switch to "START" position and release.

TO OPERATE VEHICLE

- Make sure wheels are turned in desired direction.
- Be sure nothing is in your path.
- While vehicle is stopped, and engine is at idle, select vehicle direction by placing shift lever or switch in desired position.
F - Forward N - Neutral R - Reverse (Buzzer will sound)
- Park brake will release when accelerator pedal is pushed.
- Slowly push accelerator pedal to increase speed.
- Engine must be at idle before moving shift lever.

TO STOP VEHICLE

- Release accelerator pedal and push brake pedal.
- After stopping, firmly push park brake until it locks.
- Turn key to "OFF" position, remove key and place shift lever in straight up neutral position when not in use.


CCI 101693201

4

2

OFF ON/START

1

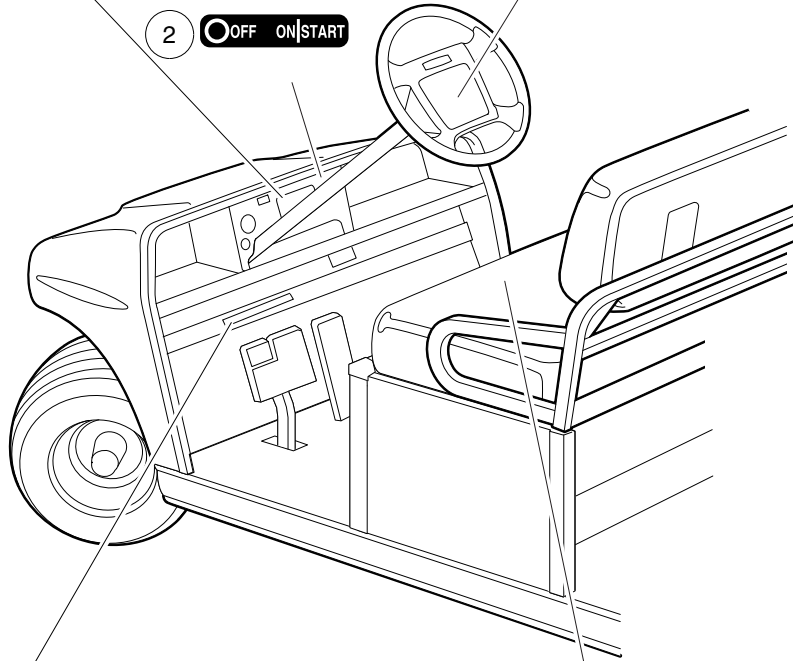

Maintenance

Operate

WARNING

VEHICLE MOVEMENT MAY CAUSE SERIOUS INJURY
When switch is in Maintenance position, chock wheels and firmly set park brake.

CCI 103205501

5

VEHICLE LOADING

Read Owner's Manual and warnings on dash.

- Vehicle rated capacity - 1500 lbs. on level surface only. Weight to include passengers, cargo bed load, and gross trailer weight. See Owner's Manual.
- Maximum cargo load CARRYALL 6 and TURF 6 - 1000 lbs., TRANSPORTER - 300 LBS. Weight to include cargo bed load and gross trailer weight.
- Maximum trailer hitch tongue weight - 150 lbs.

- Cargo should be evenly spread over the floor of the cargo bed as far forward as possible and secured.
- For vehicle stability, when fully loaded, drive slowly and avoid stopping on or backing down steep hills.
- Avoid top heavy loads. See Owner's Manual.
- When driving on uneven terrain or down steep hills, reduce speed and load.

CCI 101960001

3

000630-001



DECALS – GASOLINE TRANSPORTER

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>101693201</u>	Decal, Operating Instructions, Key-Start	1	
2	<u>101825102</u>	Decal, Off/On/Start	1	
3	<u>101960001</u>	Decal, Vehicle Loading	1	
4	<u>103205401</u>	Decal, Warning, Rollover, Utl	1	
5	<u>103205501</u>	Decal, Run/Service Switch	1	



3

G




E

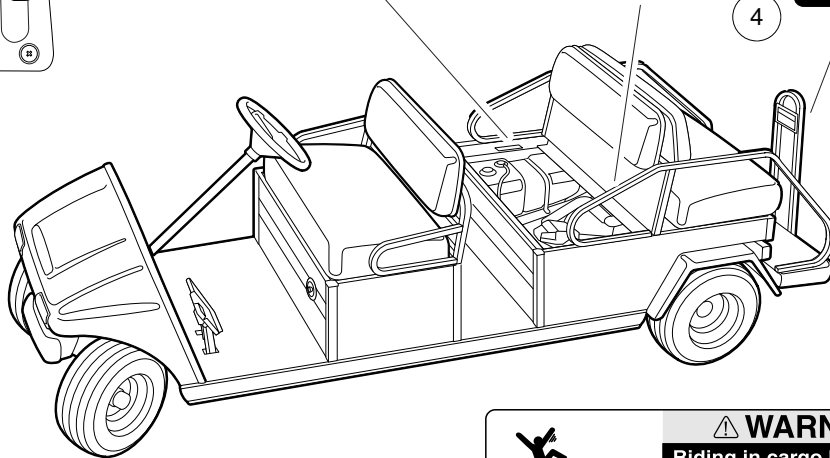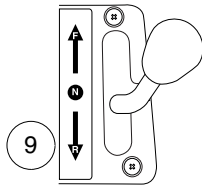

SIX-PASSENGER TRANSPORTER VEHICLE

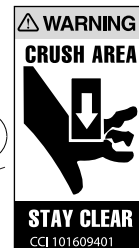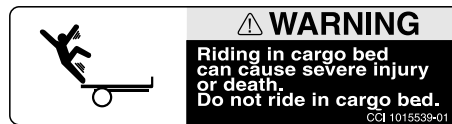

FOUR-PASSENGER TRANSPORTER VEHICLE

 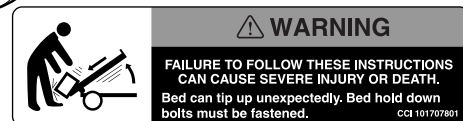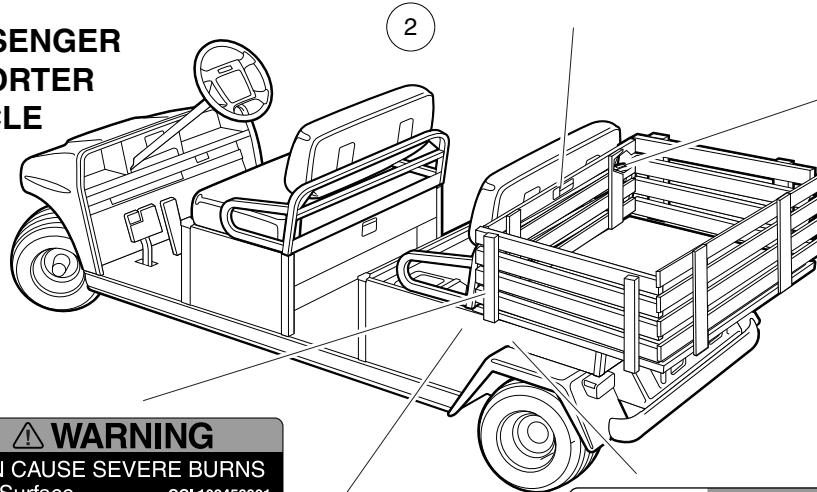

000631-001


DECALS – GASOLINE TRANSPORTER, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>101547601</u>	Decal, Gasoline Explosion/Fire Warning	1	
2	<u>101553901</u>	Decal, Bed Load Warning	1	
3	<u>101609401</u>	Decal, Crush Area Warning	2	
4	<u>101705701</u>	Decal, Warning	1	
5	<u>101707801</u>	Decal, Bed Hold-Down Bolts	1	
6	<u>101915201</u>	Decal, Frame Ground and Governor Warning	1	
7	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	2	
8	<u>102458901</u>	Decal, Hot Surface Warning	2	
9	<u>103210201</u>	Decal, Forward/Reverse, Gas	1	

3


G

E

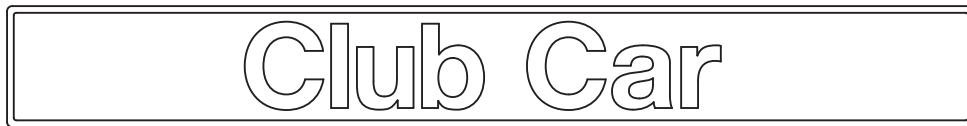


1

(ON FRONT OF COWL)

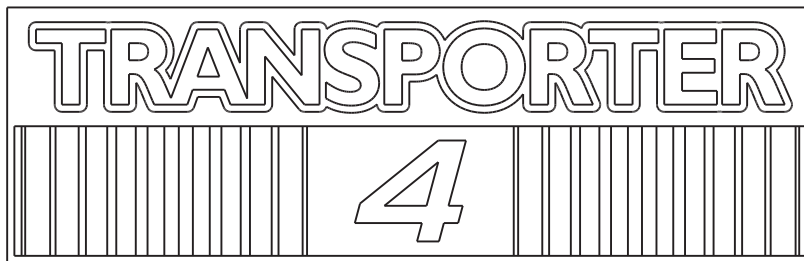

2

(ON SIDE PANELS)

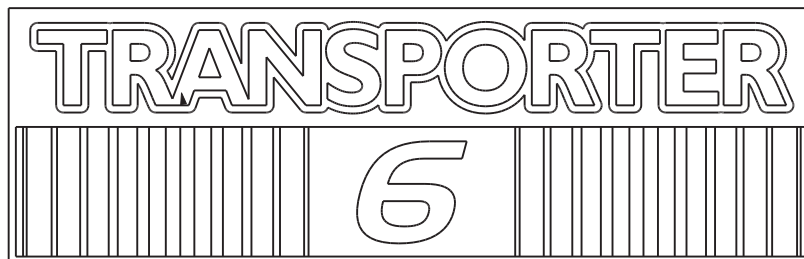

3

(ON SIDE PANELS)

000384-002

LOGO DECALS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101670201	Nameplate Kit (silver)	1
2	103261701	Decal Trans 4 Side Panel	2
3	103261801	Decal Trans 6 Side Panel	2
4	103284201	Decal Ca6/tp4/tp6 Bar	2

3

G

E

3

G


E

BRAKES, PEDAL, AND CABLES

4

G

E

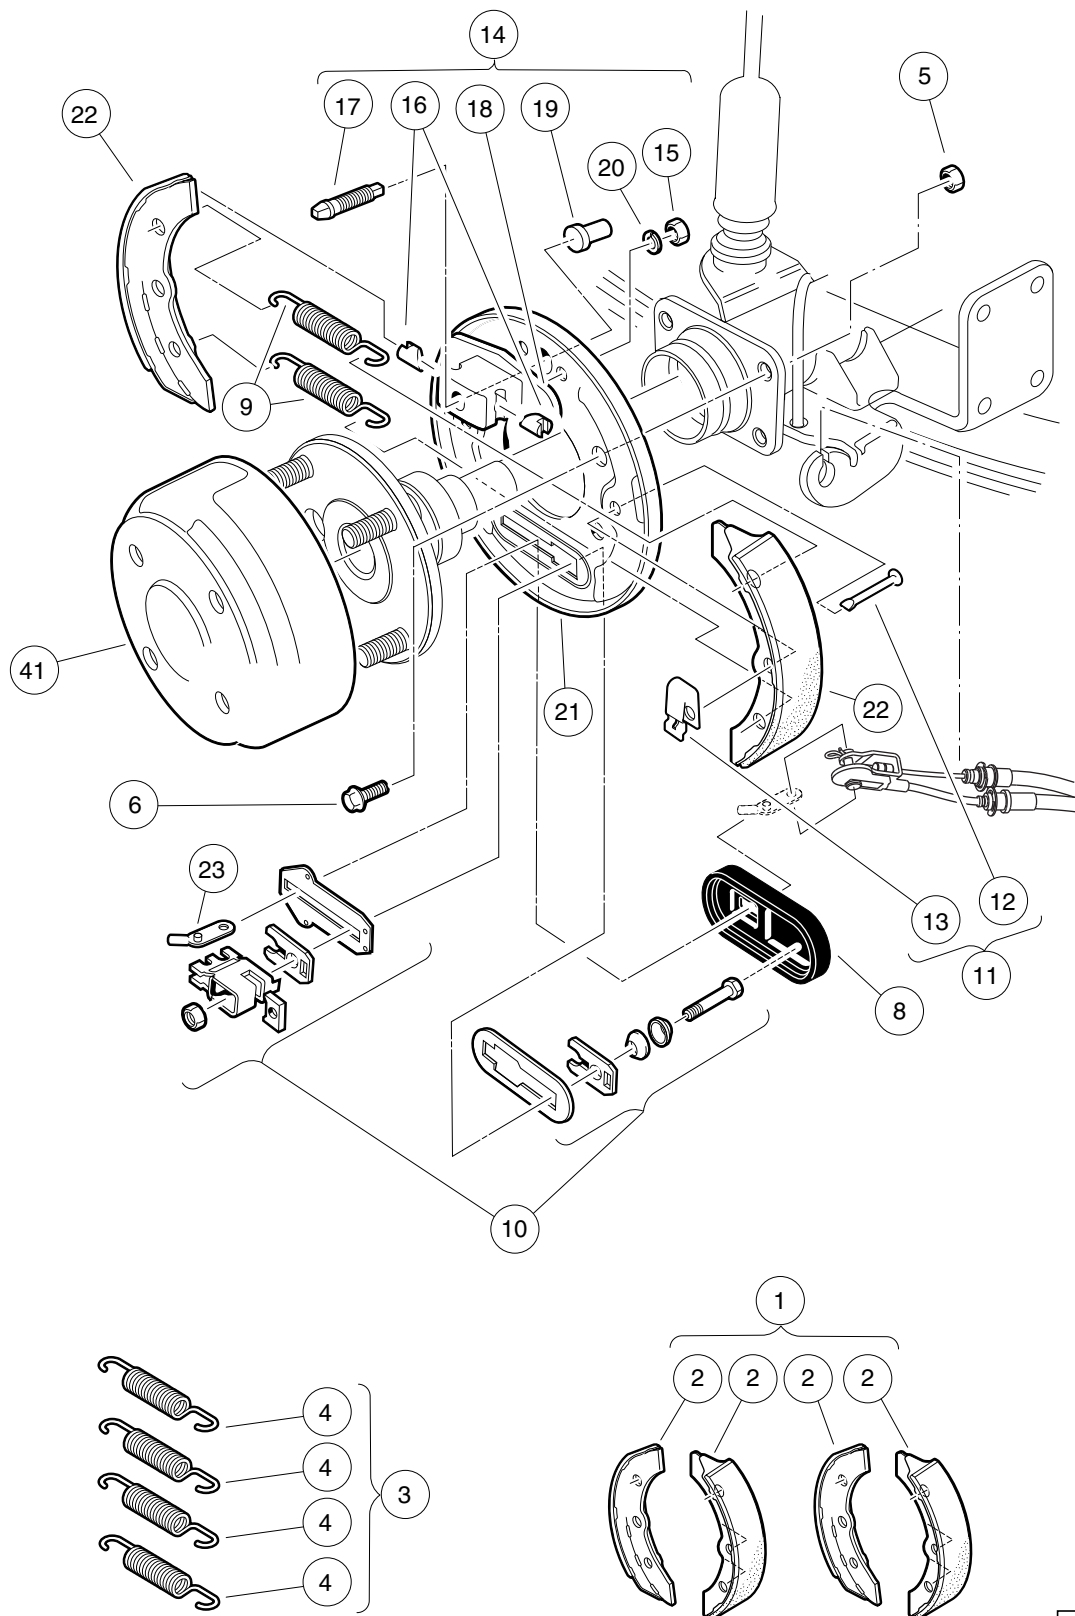


000293-002

REAR BRAKE ASSEMBLY, MANUALLY-ADJUSTED – VEHICLES WITH 4-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101146302</u>	Kit, Non-Asbestos Brake Shoe (includes item 2)	1
2	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	4
3	<u>1011464</u>	Package, Brake Spring (includes item 4)	1
4	1011314	Brake Spring	4
5	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	8
6	<u>1014153</u>	Bolt, Brake Cluster Mounting	8
7	<u>1016557</u>	Cluster, Brake, Driver-Side (includes items 8 through 23)	1
8	<u>1010850</u>	Dust Cover	1
9	1011314	Brake Spring	2
10	<u>1011465</u>	Kit, Brake Actuator	1
11	<u>1011466</u>	Kit, Shoe Retainer (includes items 12 and 13)	1
12	1010953	Pin	2
13	1011301	Shoe Clamp Spring	2
14	<u>1011467</u>	Kit, Anchor Body (includes items 15 through 20)	1
15	<u>1011114</u>	Nut, M6-1.00 Hex	2
16	1011298	Anchor Piston	2
17	N/A	Adjustment Bolt	1
18	N/A	Anchor Body Component	1
19	<u>1011303</u>	Adjustment Bolt Cap	1
20	<u>451</u>	Lockwasher, 1/4 Split	2
21	1011494	Backing Plate, Left-Hand	1
22	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2
23	N/A	Arm, Brake Lever	1
24	<u>1016573</u>	Cluster, Brake, Passenger-Side (includes items 25 through 40)	1
25	<u>1010850</u>	Dust Cover	1
26	<u>1011154</u>	Backing Plate, Right-Hand	1
27	1011314	Brake Spring	2
28	<u>1011465</u>	Kit, Brake Actuator	1
29	<u>1011466</u>	Kit, Shoe Retainer (includes items 30 and 31)	1
30	1010953	Pin	2
31	1011301	Shoe Clamp Spring	2
32	<u>1011467</u>	Kit, Anchor Body (includes items 33 through 38)	1
33	<u>1011114</u>	Nut, M6-1.00 Hex	2
34	1011298	Anchor Piston	2
35	N/A	Adjustment Bolt	1
36	N/A	Anchor Body Component	1
37	<u>1011303</u>	Adjustment Bolt Cap	1
38	<u>451</u>	Lockwasher, 1/4 Split	2
39	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2
40	N/A	Arm, Brake Lever	1
41	<u>101791101</u>	Drum without Center Hole, Brake	2
		Note: Passenger-side brake cluster not shown. Components have a similar appearance to driver-side brake cluster components.	

4
G
E

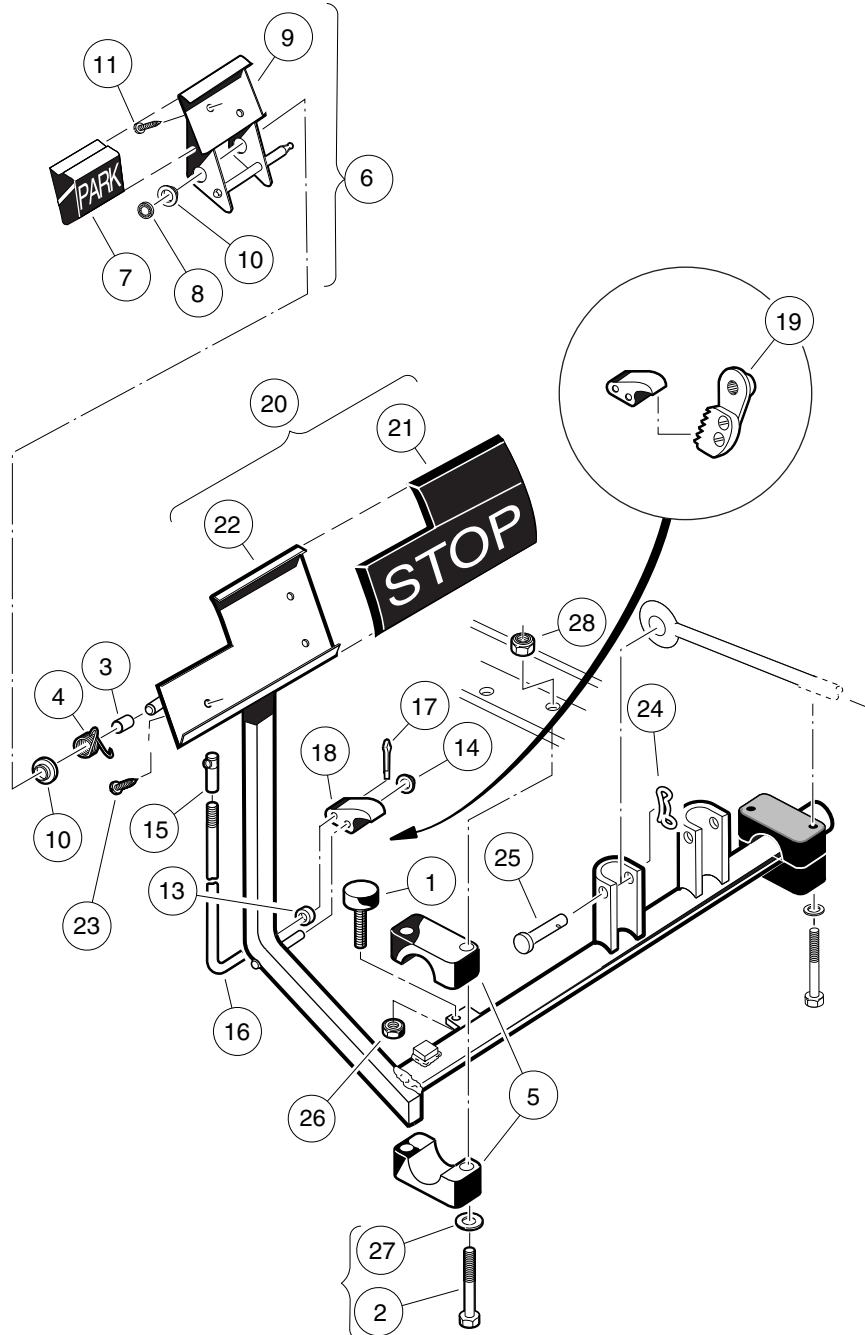
4**G****E**

000187-003

BRAKE PEDAL ASSEMBLY – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010878</u>	Bumper, Rubber	1
2	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	4
3	<u>1010927</u>	Hill Brake Spacer	1
4	<u>1010933</u>	Spring, Hill Brake Torsion	1
5	<u>1011402</u>	Package, Brake Mounting Block	1
6	<u>1011418</u>	Kit, Hill Brake Pedal (includes items 7 through 11)	1
7	<u>1013870</u>	Pad, Hill Brake	1
8	<u>1013876</u>	Pushnut, 3/8	1
9	N/A	Hill Brake Weld Assembly	1
10	<u>1032</u>	Bushing, Nylon	2
11	7716	Screw, #10-16 Type AB, Sheet Metal	2
12	<u>101187702</u>	Kit, Hill Brake Latch (includes items 13 through 19)	1
13	<u>1010805</u>	Sleeve, Hill Brake Rod	1
14	<u>1010877</u>	Pushnut, 3/8	1
15	1010932	Ball Joint, 1/4-28	1
16	N/A	Rod, Hill Brake	1
17	<u>1017029</u>	Pin, Cotter, 7/64 x 1/2 Stainless-Steel	1
18	N/A	Pawl, Hill Brake	1
19	101918501	Ratchet Assembly	1
20	<u>101878201</u>	Brake Pedal Kit (includes items 21 through 23)	1
21	<u>1013869</u>	Pad, Brake Pedal	1
22	N/A	Weldment, Brake Pedal 4wb Std	1
23	7716	Screw, #10-16 Type AB, Sheet Metal	3
24	<u>102323101</u>	Pin, Bow Tie Locking	2
25	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	2
26	<u>1028</u>	Nut, 1/4-20 Hex	1
27	<u>1241</u>	Washer, 5/16 Type A Flat	4
28	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4

4
G
E

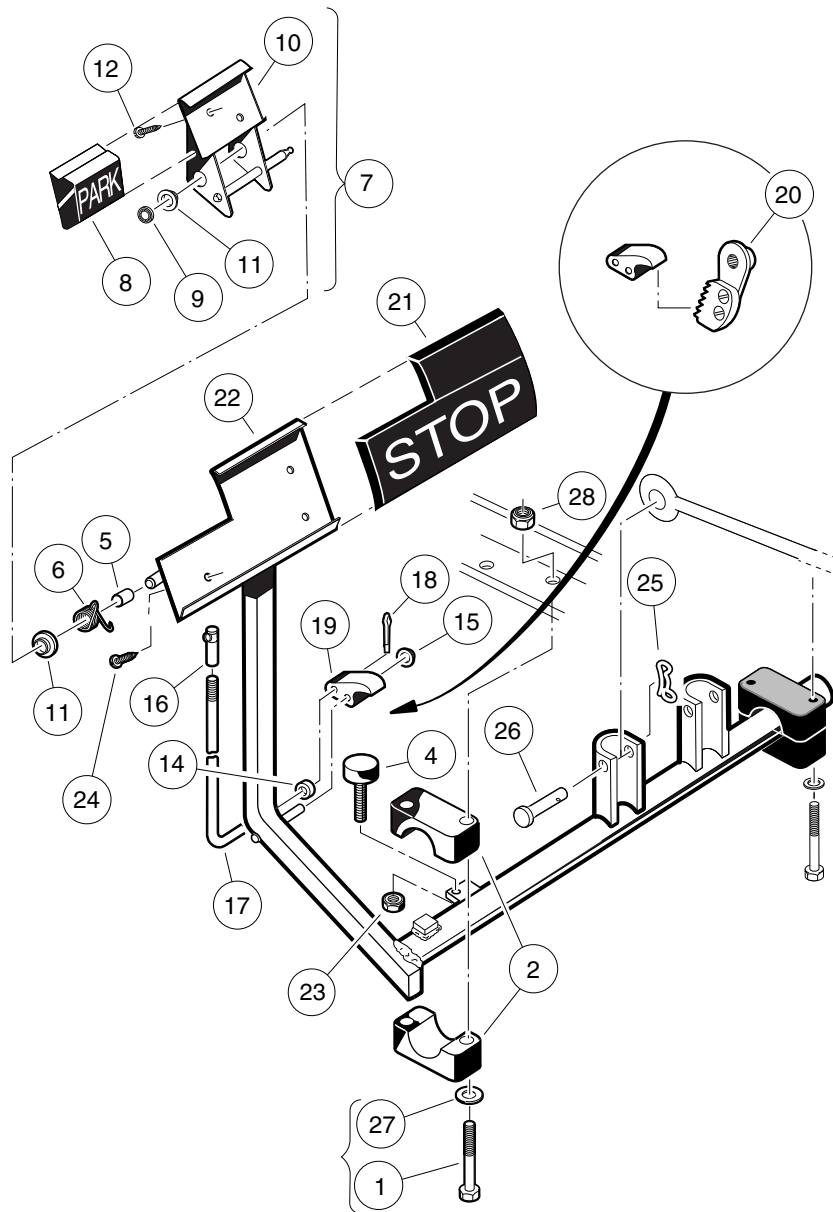

000187-002


BRAKE PEDAL ASSEMBLY – IQ PLUS VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	4	G	E
		1 2 3 4				
1	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	4			
2	<u>1011402</u>	Package, Brake Mounting Block	1			
3	N/A	Subasm, Pedal Group, 4-Wheel Brake (includes items 4 through 24)	1			
4	<u>1010878</u>	Bumper, Rubber	1			
5	<u>1010927</u>	Hill Brake Spacer	1			
6	<u>1010933</u>	Spring, Hill Brake Torsion	1			
7	<u>1011418</u>	Kit, Hill Brake Pedal (includes items 8 through 12)	1			
8	<u>1013870</u>	Pad, Hill Brake	1			
9	<u>1013876</u>	Pushnut, 3/8	1			
10	N/A	Hill Brake Weld Assembly	1			
11	<u>1032</u>	Bushing, Nylon	2			
12	7716	Screw, #10-16 Type AB, Sheet Metal	2			
13	<u>101187702</u>	Kit, Hill Brake Latch (includes items 14 through 20)	1			
14	<u>1010805</u>	Sleeve, Hill Brake Rod	1			
15	<u>1010877</u>	Pushnut, 3/8	1			
16	1010932	Ball Joint, 1/4-28	1			
17	N/A	Rod, Hill Brake	1			
18	<u>1017029</u>	Pin, Cotter, 7/64 x 1/2 Stainless-Steel	1			
19	N/A	Pawl, Hill Brake	1			
20	101918501	Ratchet Assembly	1			
21	<u>1013869</u>	Pad, Brake Pedal	1			
22	N/A	Brake Pedal Weldment	1			
23	<u>1028</u>	Nut, 1/4-20 Hex	1			
24	7716	Screw, #10-16 Type AB, Sheet Metal	3			
25	<u>102323101</u>	Pin, Bow Tie Locking	2			
26	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	2			
27	<u>1241</u>	Washer, 5/16 Type A Flat	4			
28	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4			

4

G

E

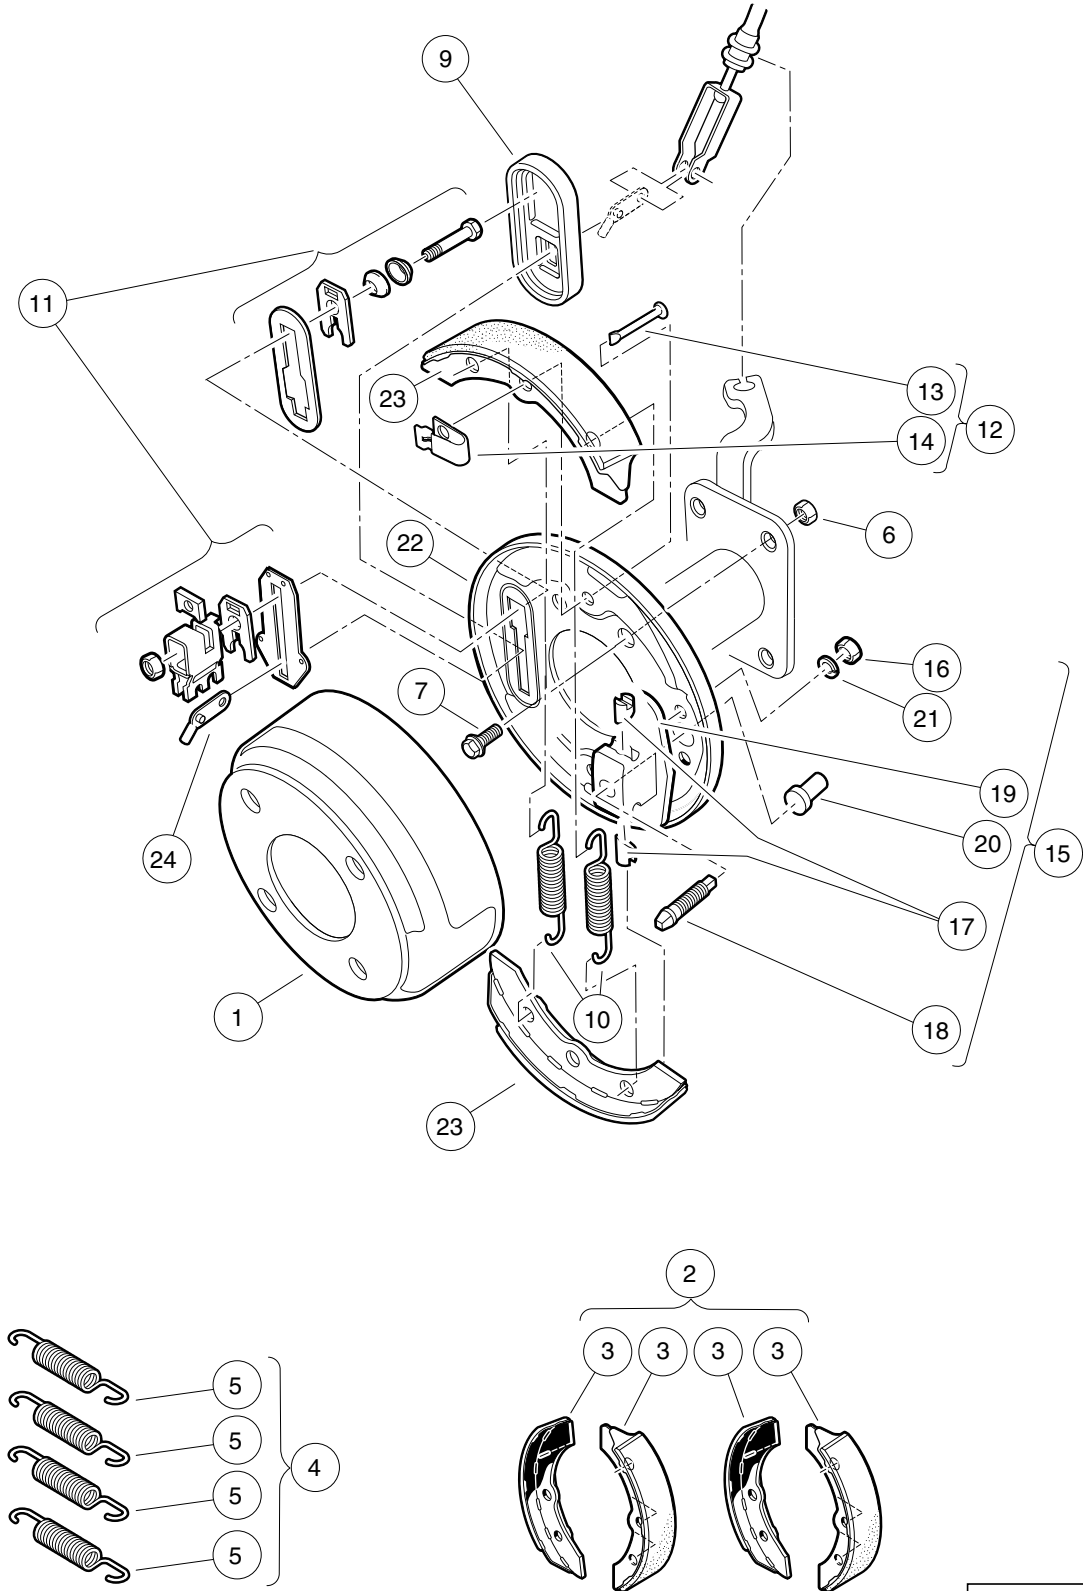

000298-001

FRONT BRAKE ASSEMBLY – VEHICLES WITH FOUR-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011137</u>	Drum, Brake	2
2	<u>101146302</u>	Kit, Non-Asbestos Brake Shoe (includes item 3)	1
3	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	4
4	<u>1011464</u>	Package, Brake Spring (includes item 5)	1
5	1011314	Brake Spring	4
6	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	8
7	<u>1014153</u>	Bolt, Brake Cluster Mounting	8
8	<u>1016557</u>	Cluster, Brake, Driver-Side (includes items 9 through 24)	1
9	<u>1010850</u>	Dust Cover	1
10	1011314	Brake Spring	2
11	<u>1011465</u>	Kit, Brake Actuator	1
12	<u>1011466</u>	Kit, Shoe Retainer (includes items 13 and 14)	1
13	1010953	Pin	2
14	1011301	Shoe Clamp Spring	2
15	<u>1011467</u>	Kit, Anchor Body (includes items 16 through 21)	1
16	<u>1011114</u>	Nut, M6-1.00 Hex	2
17	1011298	Anchor Piston	2
18	N/A	Adjustment Bolt	1
19	N/A	Anchor Body Component	1
20	<u>1011303</u>	Adjustment Bolt Cap	1
21	<u>451</u>	Lockwasher, 1/4 Split	2
22	1011494	Backing Plate, Left-Hand	1
23	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2
24	N/A	Arm, Brake Lever	1
25	<u>1016573</u>	Cluster, Brake, Passenger-Side (includes items 26 through 41)	1
26	<u>1010850</u>	Dust Cover	1
27	<u>1011154</u>	Backing Plate, Right-Hand	1
28	1011314	Brake Spring	2
29	<u>1011465</u>	Kit, Brake Actuator	1
30	<u>1011466</u>	Kit, Shoe Retainer (includes items 31 and 32)	1
31	1010953	Pin	2
32	1011301	Shoe Clamp Spring	2
33	<u>1011467</u>	Kit, Anchor Body (includes items 34 through 39)	1
34	<u>1011114</u>	Nut, M6-1.00 Hex	2
35	1011298	Anchor Piston	2
36	N/A	Adjustment Bolt	1
37	N/A	Anchor Body Component	1
38	<u>1011303</u>	Adjustment Bolt Cap	1
39	<u>451</u>	Lockwasher, 1/4 Split	2
40	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2
41	N/A	Arm, Brake Lever	1
		Note: Passenger-side brake cluster not shown. Components have a similar appearance to driver-side brake cluster components.	

4


G

E

4

G

E

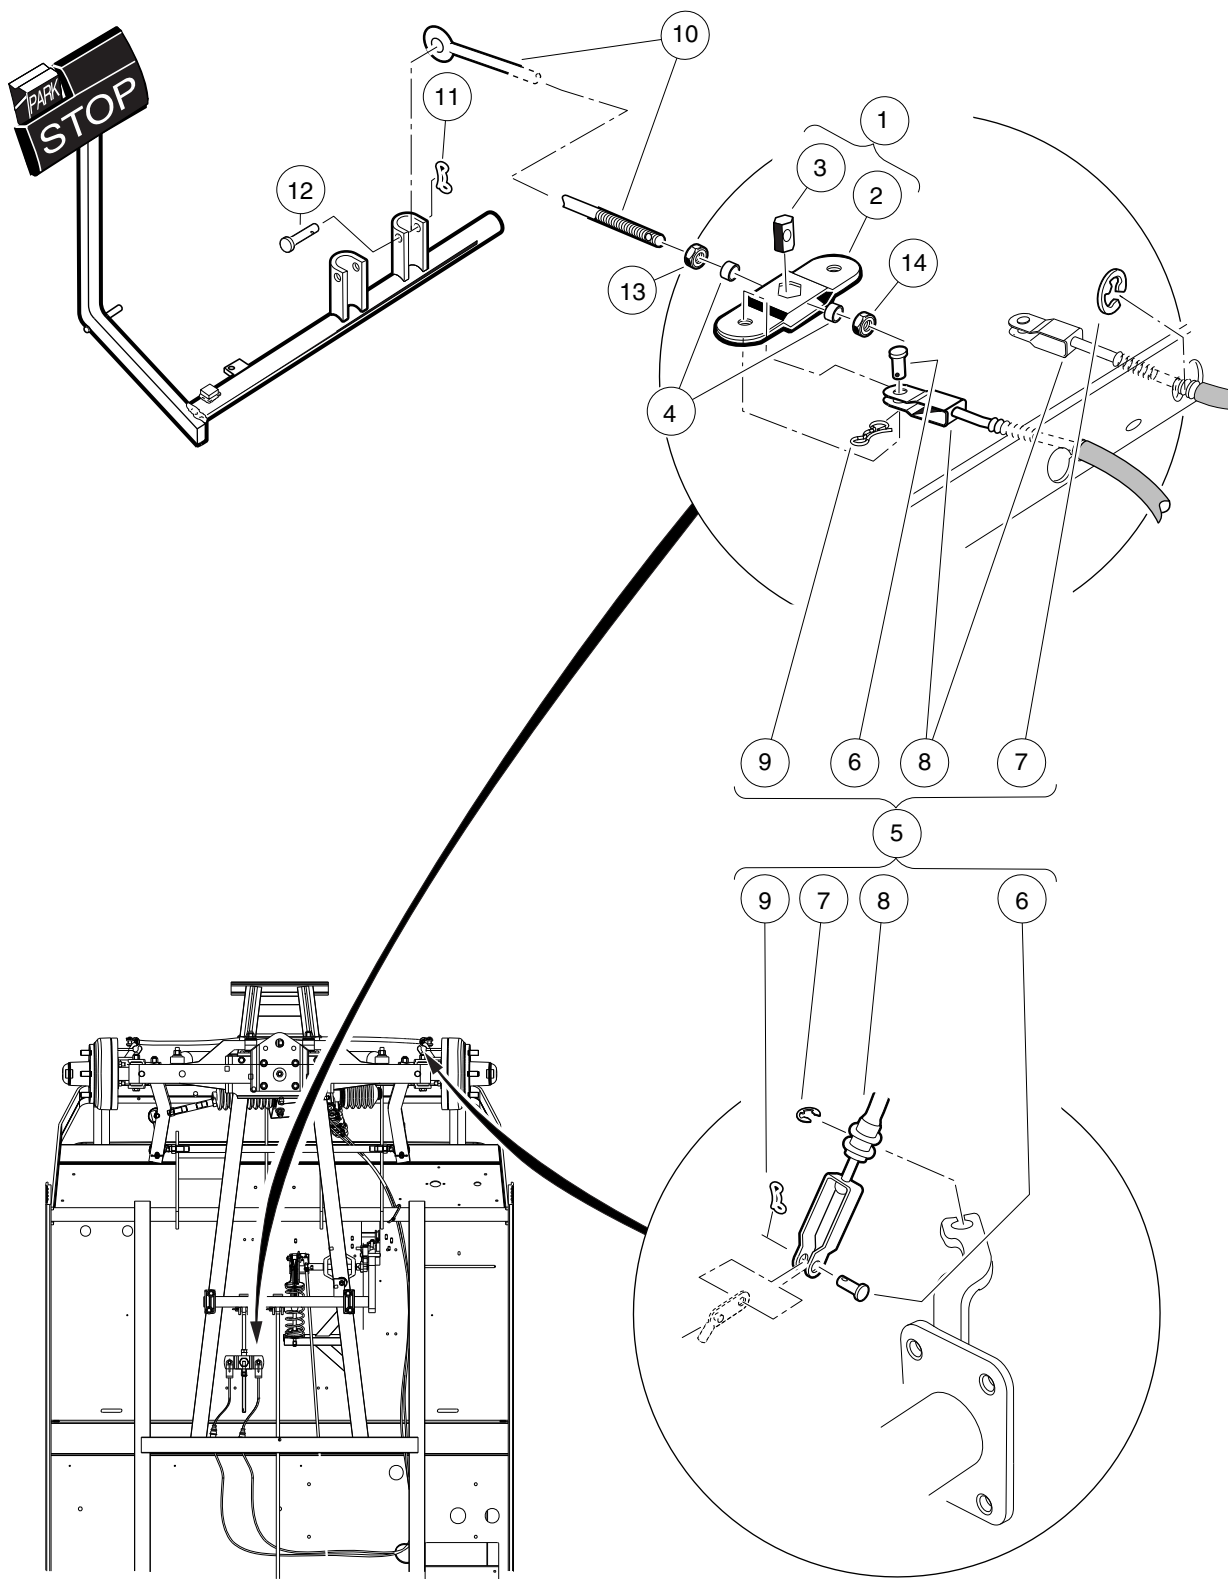

000294-001


FRONT BRAKE CABLES AND EQUALIZER – VEHICLES WITH FOUR-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>1017211</u>	Kit, Equalizer and Pivot Limiter (includes items 2 and 3)	1	E
2	<u>1016319</u>	Equalizer Weld Assembly	1	
3	<u>1016320</u>	Equalizer, Pivot Limiter	1	
4	<u>101865301</u>	Spacer	2	
5	<u>101874601</u>	Kit, Brake Cable (includes items 6 through 9)	1	
6	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	4	
7	<u>1011779</u>	E-Clip, 1/2	4	
8	N/A	Brake Cable	2	
9	<u>102292801</u>	Pin, Bow Tie Locking - .072	4	
10	<u>101953106</u>	Rod, Equalizer, 9.75"	1	
11	<u>102323101</u>	Pin, Bow Tie Locking	1	
12	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1	
13	<u>1242</u>	Nut, 5/16-18 Hex	1	
14	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	

4

G

E

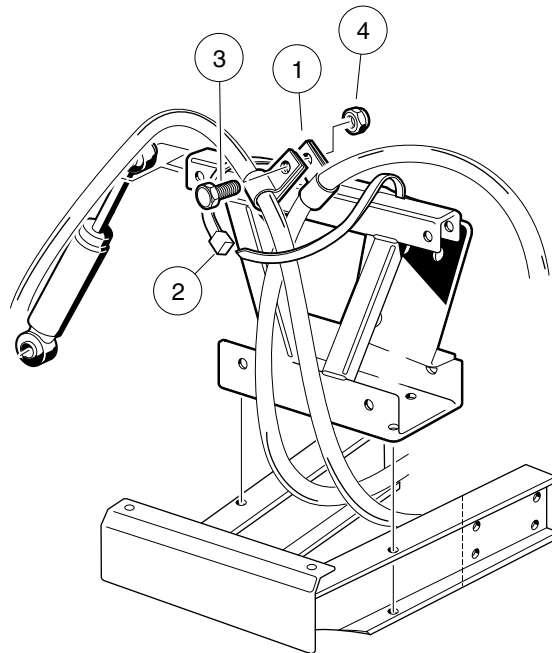

000305-001


FRONT BRAKE CABLE CLIPS AND HARDWARE – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>101935301</u>	Clamp, Brake Cable	2	E
2	<u>102025401</u>	Tie Wrap, Heavy Duty	1	
3	320	Screw, 3/8-16 X 1.00 Hex-Head Cap	1	
4	<u>8754</u>	Locknut, 3/8-16 Hex	1	

4


G

E

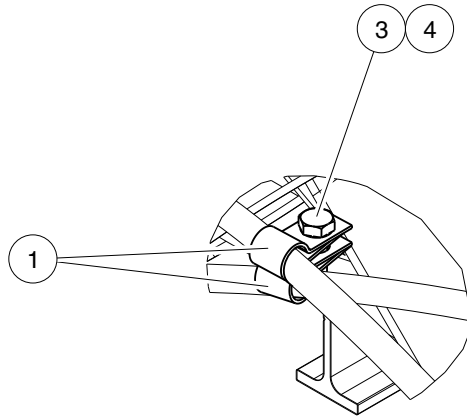

DETAIL G

See Detail G

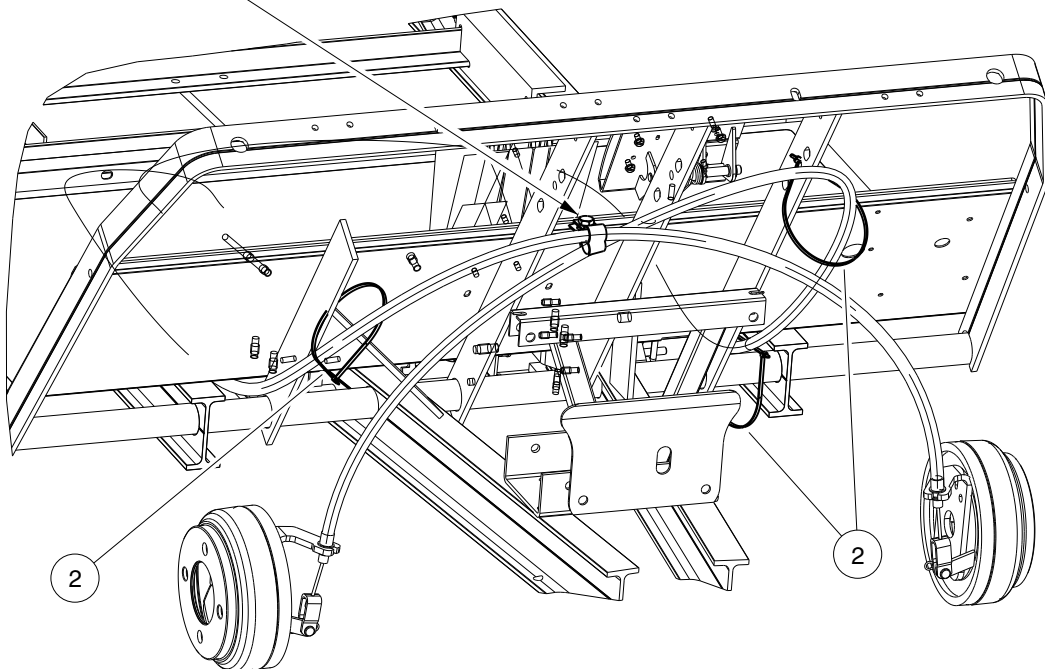

000305-002


FRONT BRAKE CABLE CLIPS – IQ PLUS VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		4
1	<u>101935301</u>	Clamp, Brake Cable	2	G
2	<u>102025401</u>	Tie Wrap, Heavy Duty	3	E
3	320	Screw, 3/8-16 X 1.00 Hex-Head Cap	1	
4	<u>8754</u>	Locknut, 3/8-16 Hex	1	

4

G


E

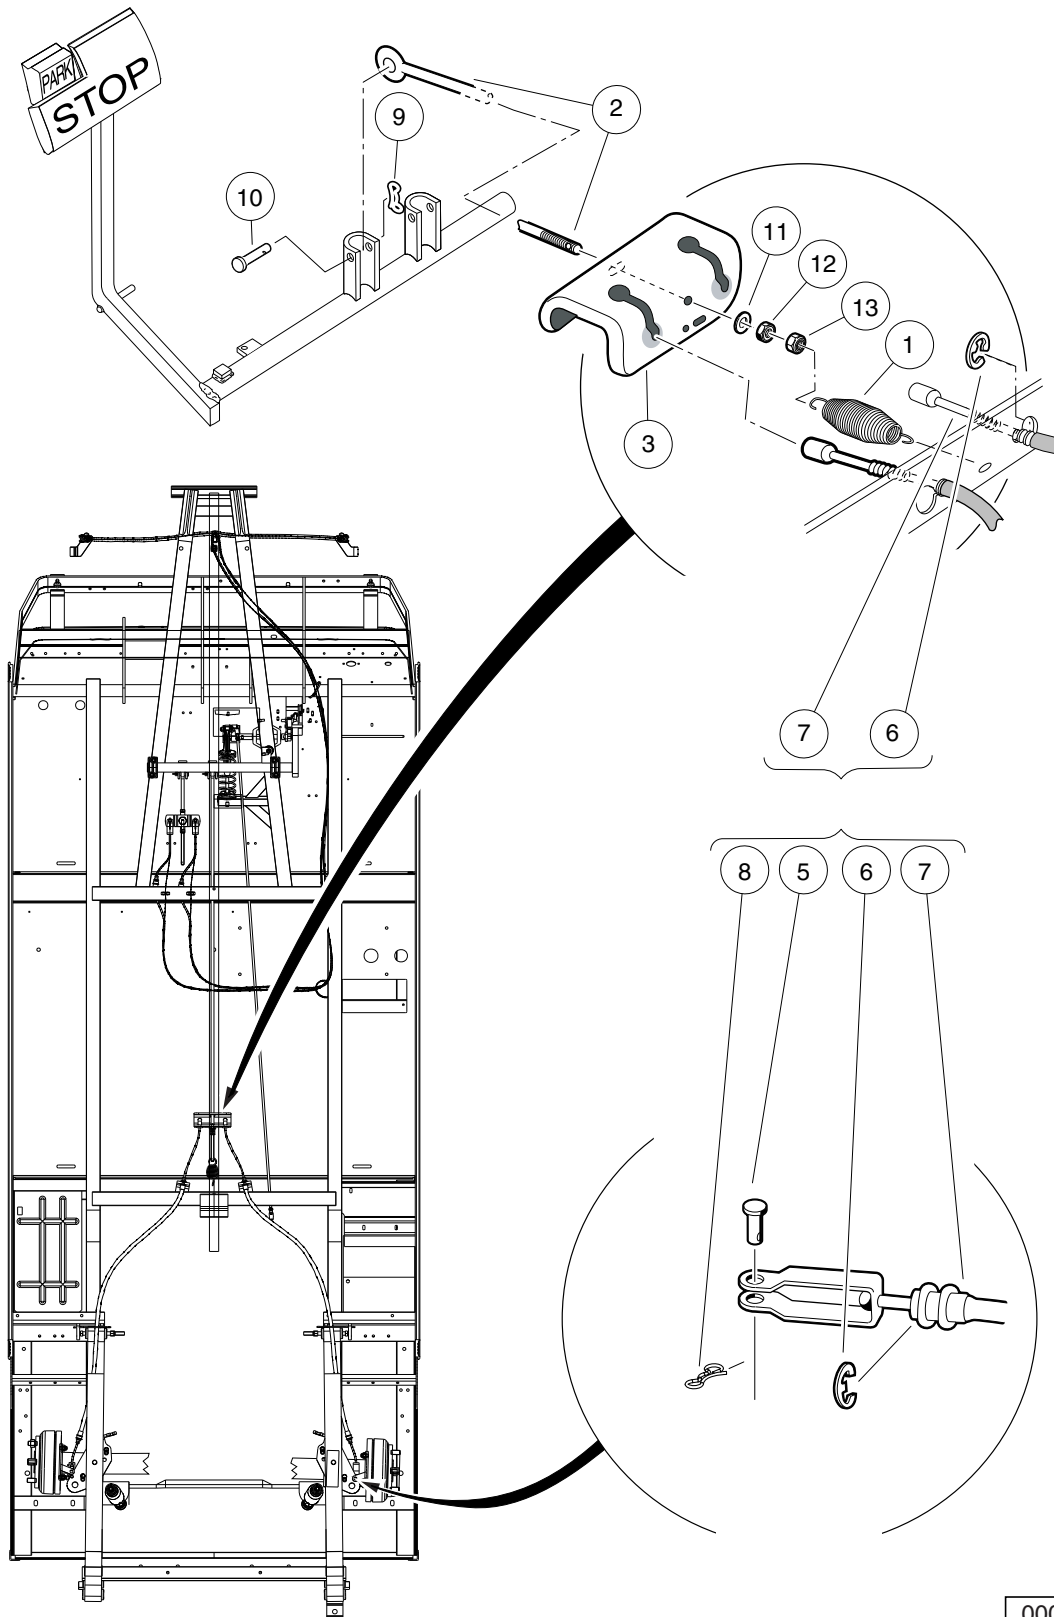

000296-004

REAR BRAKE CABLES AND EQUALIZER

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>1013531</u>	Spring, Brake Return	1	E
2	<u>101953103</u>	Rod, Equalizer	1	
3	<u>101990801</u>	Equalizer Bracket	1	
4	<u>102166901</u>	Kit, Brake Cable Rear (includes items 5 through 8)	1	
5	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	2	
6	<u>1011779</u>	E-Clip, 1/2	4	
7	<u>102162601</u>	Cable, Brake	2	
8	<u>102292801</u>	Pin, Bow Tie Locking - .072	2	
9	<u>102323101</u>	Pin, Bow Tie Locking	1	
10	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1	
11	<u>1241</u>	Washer, 5/16 Type A Flat	1	
12	<u>1242</u>	Nut, 5/16-18 Hex	1	
13	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	

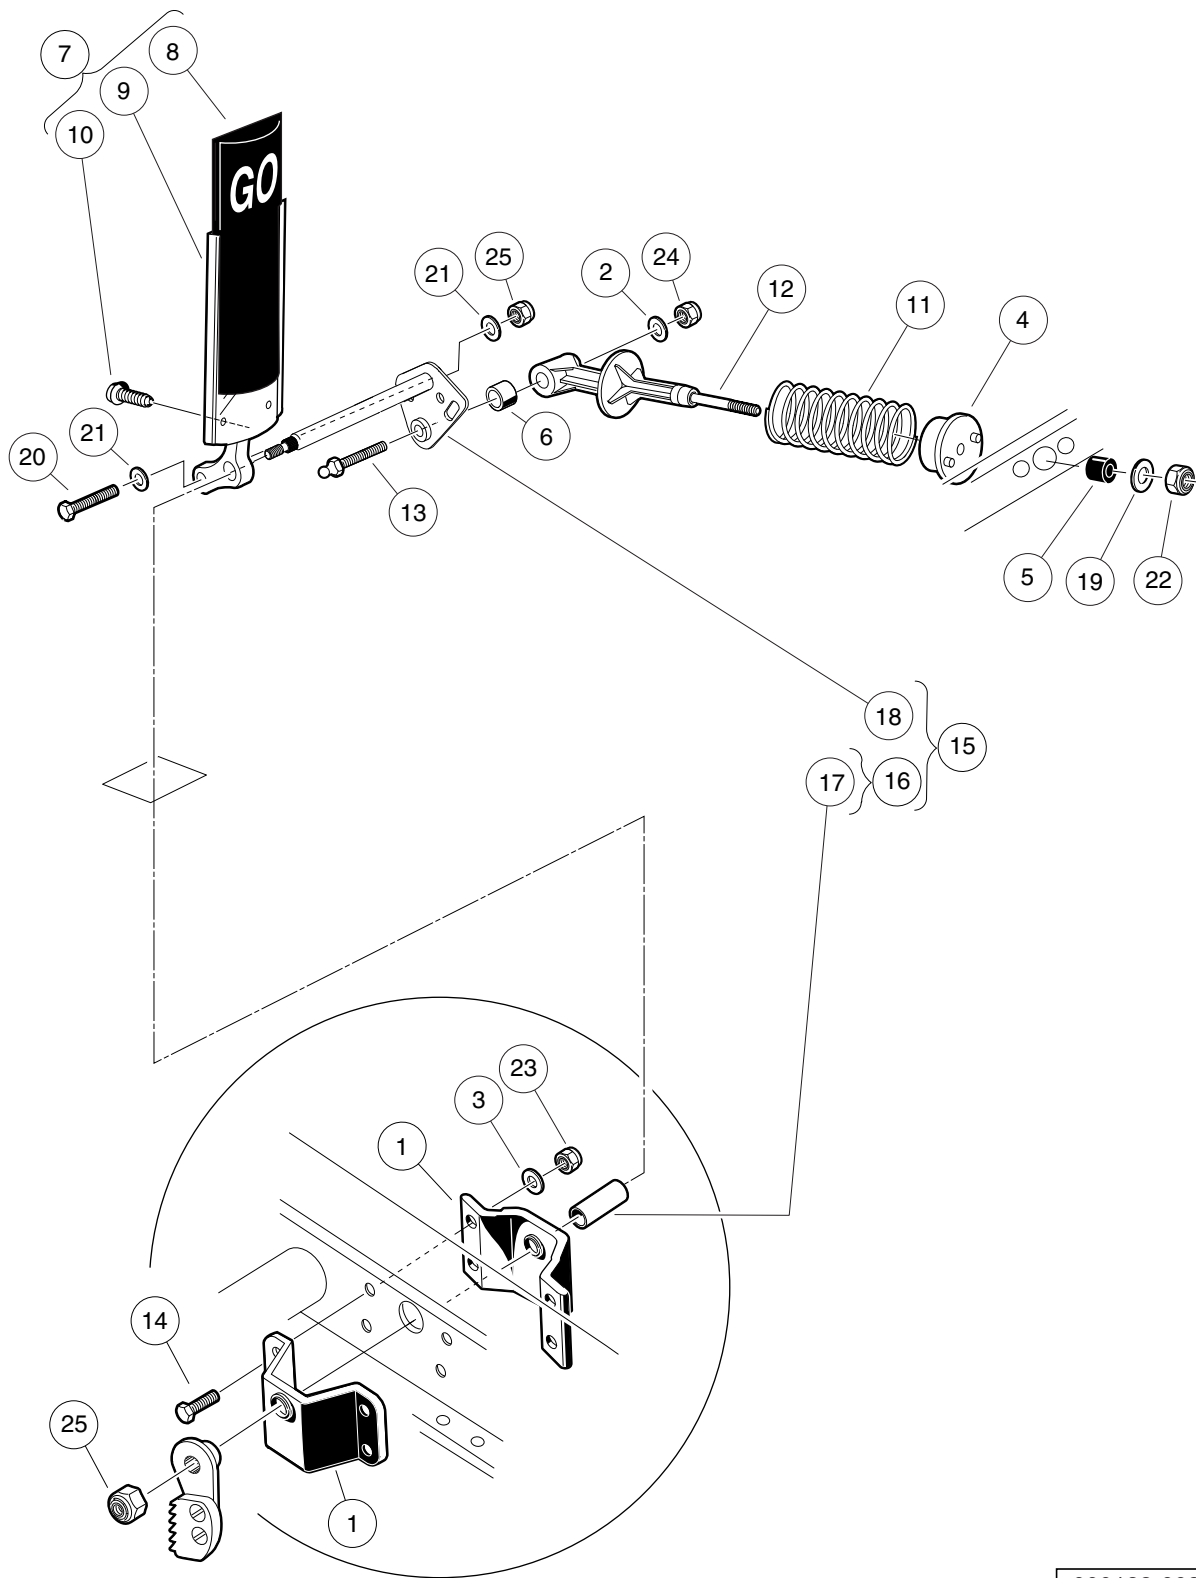


000188-003

ACCELERATOR PEDAL ASSEMBLY – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2
2	<u>1011931</u>	Washer, 1/4 Flat	1
3	<u>1014007</u>	Washer, 1/4 Flat	4
4	<u>1017378</u>	Cup, Spring	1
5	<u>1017380</u>	Bumper, Spring Return	1
6	<u>1017424</u>	Bearing, Pivot Support	1
7	<u>1017696</u>	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1
8	1013871	Pad, Accelerator Pedal	1
9	N/A	Accelerator Pedal Weldment	1
10	7716	Screw, #10-16 Type AB, Sheet Metal	4
11	101796201	Spring, Accelerator Return	1
12	<u>101817401</u>	Retainer, Spring	1
13	101818801	Stud, 1/4-28 X 1.35 Ball	1
14	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4
15	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 16 through 18)	1
16	<u>1011700</u>	Spacer Assembly (includes item 17)	1
17	101919801	Spacer, Accelerator	1
18	N/A	Pivot Rod Weldment	1
19	<u>1241</u>	Washer, 5/16 Type A Flat	1
20	<u>1624</u>	Screw, 3/8-16 X 1.50 Hex-Head Cap	1
21	<u>334</u>	Washer, 3/8 Type A Flat	2
22	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1
23	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
24	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1
25	<u>8754</u>	Locknut, 3/8-16 Hex	2

4
G
E

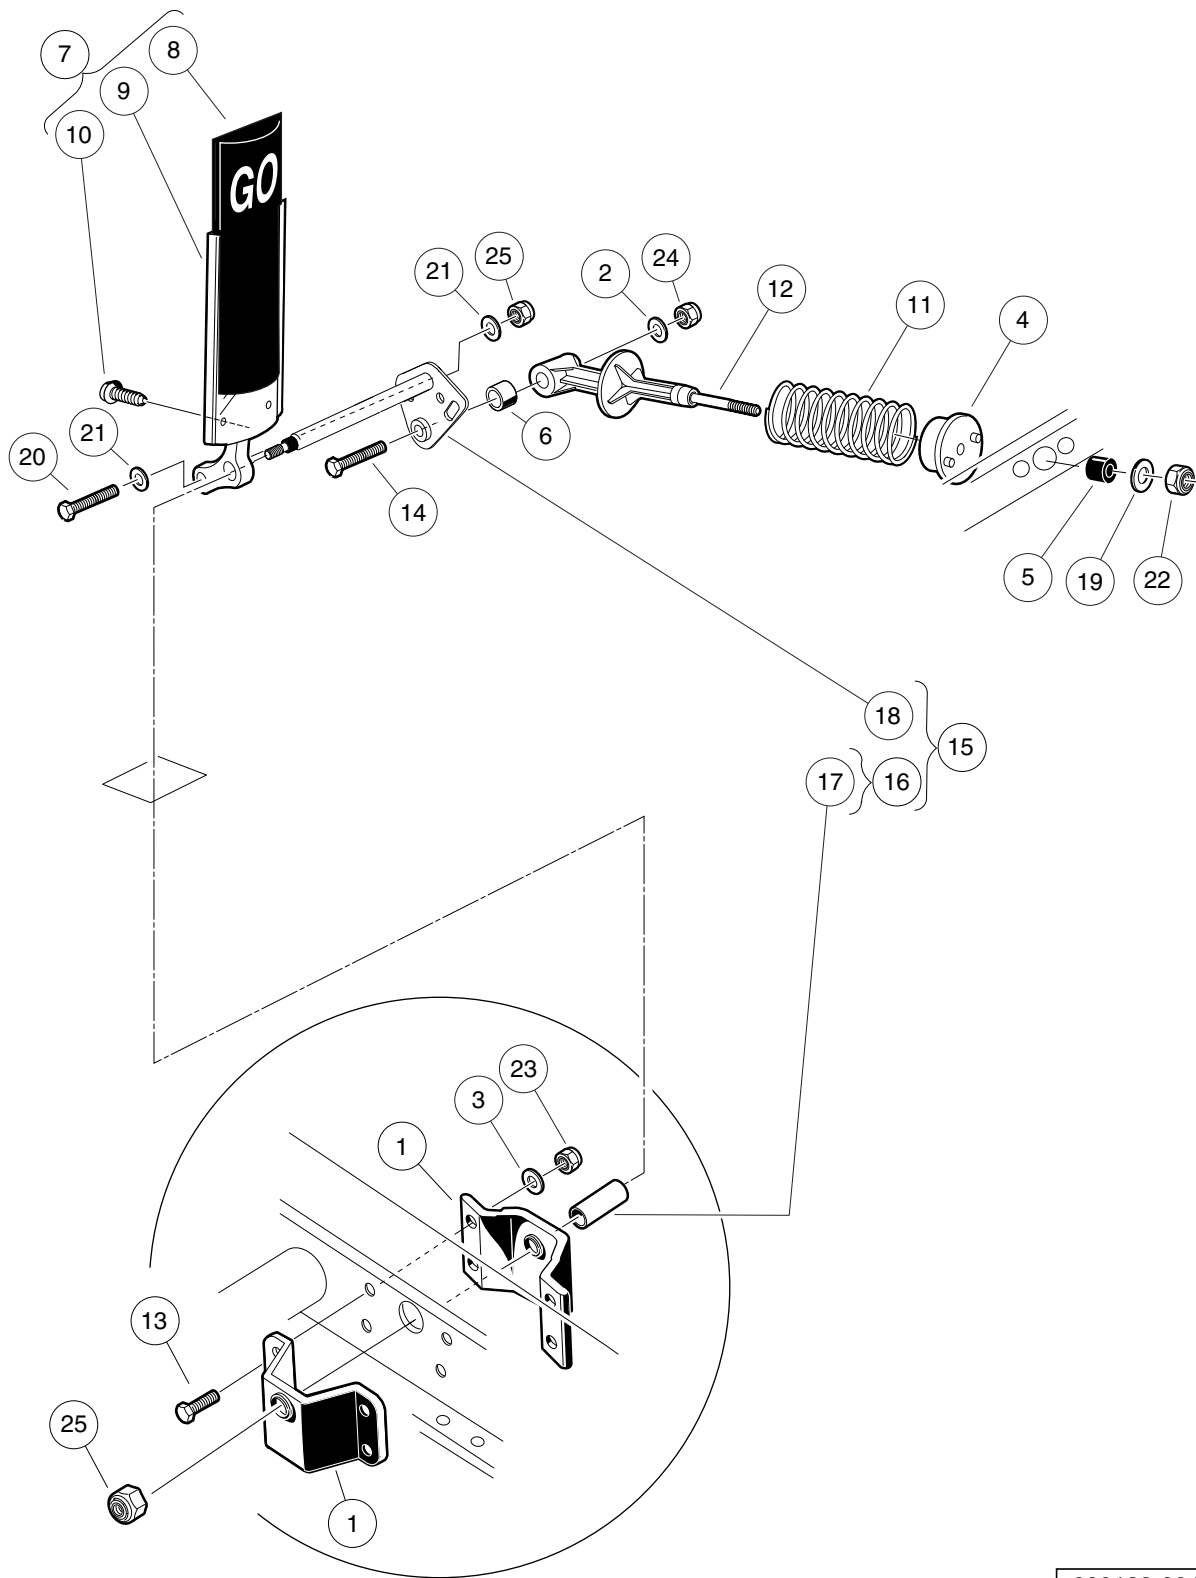

000188-004


ACCELERATOR PEDAL ASSEMBLY – ELECTRIC VEHICLES WITH MCOR

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2	
2	<u>1011931</u>	Washer, 1/4 Flat	1	
3	<u>1014007</u>	Washer, 1/4 Flat	4	
4	<u>1017378</u>	Cup, Spring	1	
5	<u>1017380</u>	Bumper, Spring Return	1	
6	<u>1017424</u>	Bearing, Pivot Support	1	
7	<u>1017696</u>	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1	
8	1013871	Pad, Accelerator Pedal	1	
9	N/A	Accelerator Pedal Weldment	1	
10	7716	Screw, #10-16 Type AB, Sheet Metal	4	
11	101796201	Spring, Accelerator Return	1	
12	<u>101817401</u>	Retainer, Spring	1	
13	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4	
14	<u>101862001</u>	Screw, 1/4-20 X 1.500 Flange	1	
15	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 16 through 18)	1	
16	<u>1011700</u>	Spacer Assembly (includes item 17)	1	
17	101919801	Spacer, Accelerator	1	
18	N/A	Pivot Rod Weldment	1	
19	<u>1241</u>	Washer, 5/16 Type A Flat	1	
20	<u>1624</u>	Screw, 3/8-16 X 1.50 Hex-Head Cap	1	
21	<u>334</u>	Washer, 3/8 Type A Flat	2	
22	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	
23	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4	
24	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1	
25	<u>8754</u>	Locknut, 3/8-16 Hex	2	

4

G

E

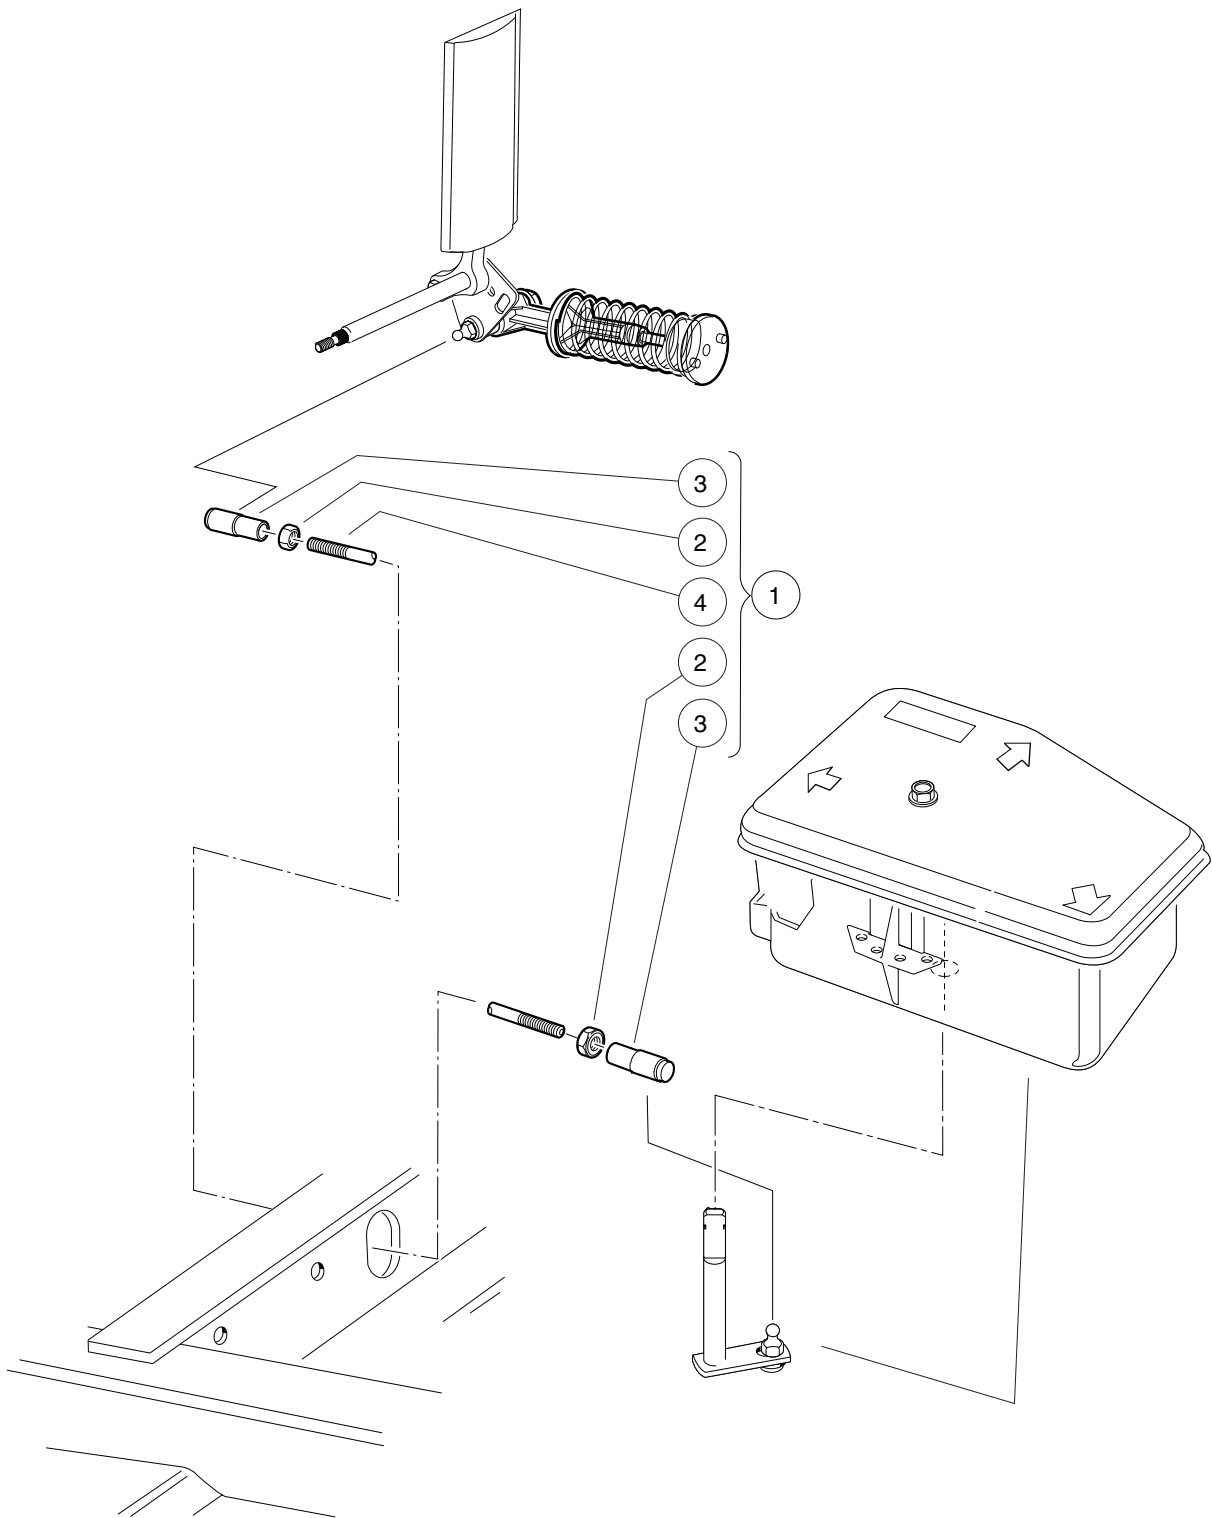

000362-001

ACCELERATOR ROD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101674702	Rod, Accelerator (includes items 2 through 4)	1
2	1011084	Nut, 1/4-28 Hex Jam	2
3	1011734	Joint, Ball	2
4	N/A	Accelerator Rod Elec Stretch	1

4

G

E


4
G
E

STEERING, FRONT AND REAR SUSPENSION

5

G

E

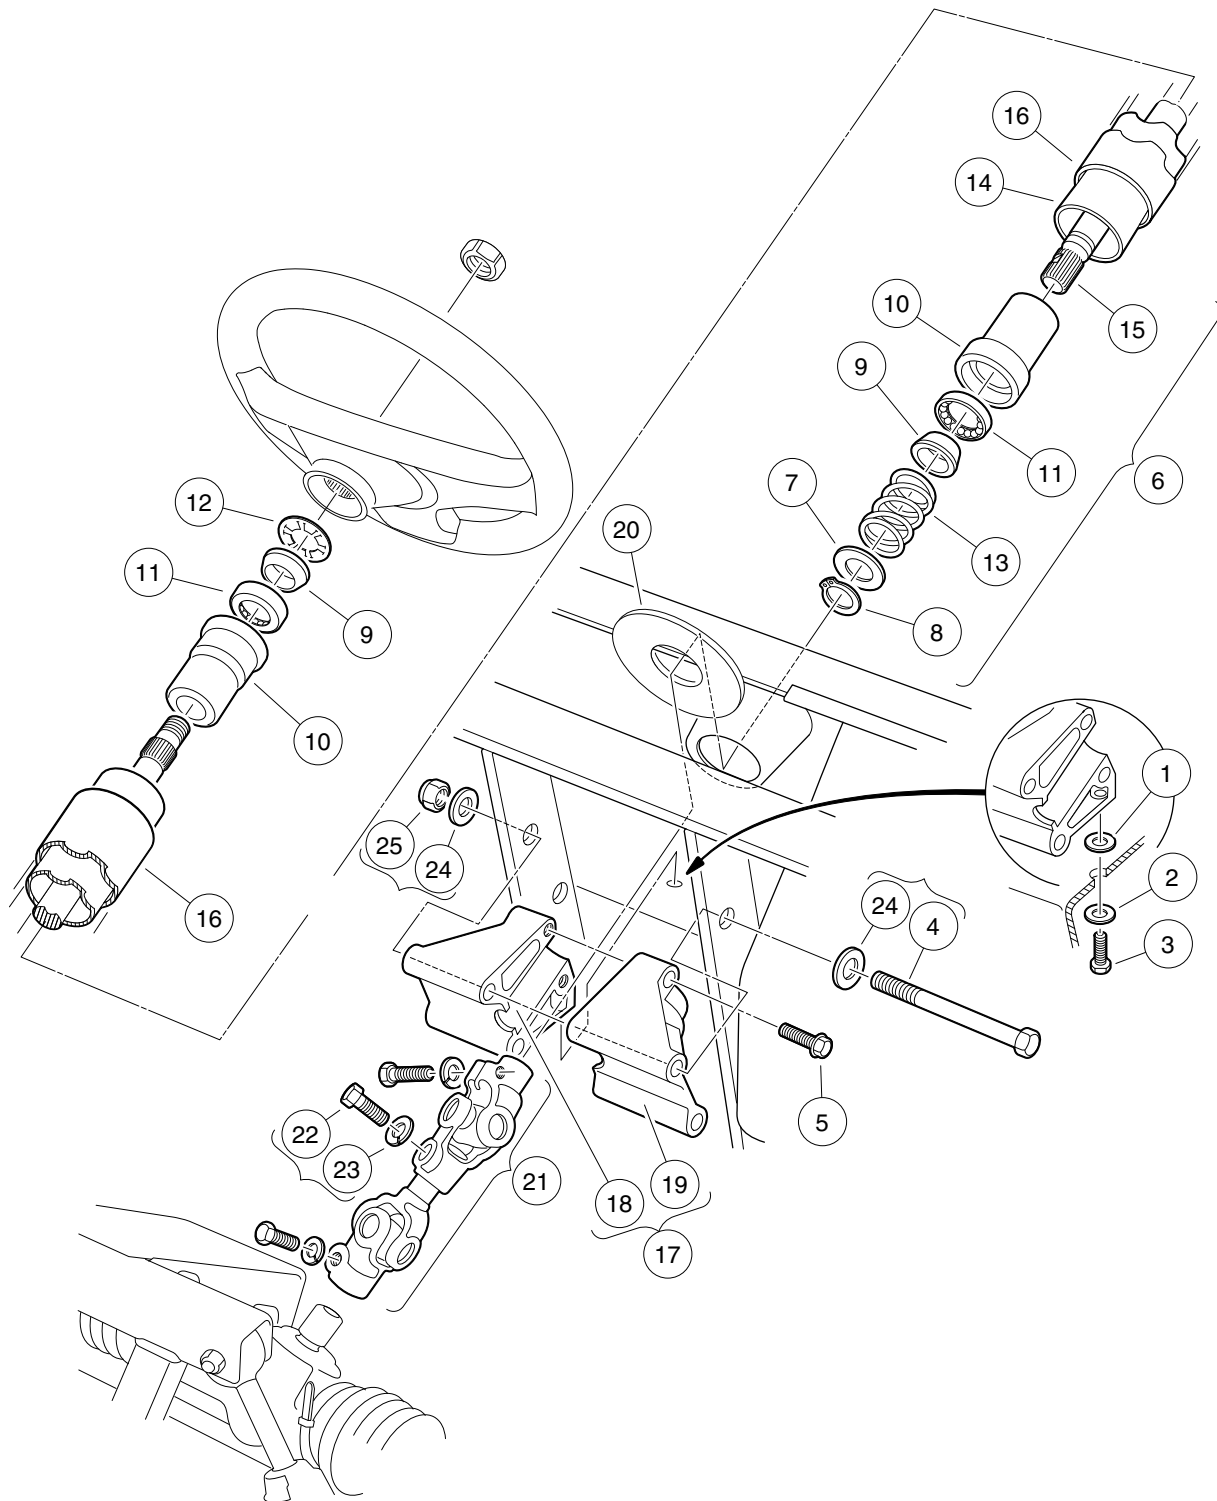5**G****E**

000247-001

STEERING COLUMN

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011578</u>	Washer, 5/16 Type B Flat	1
2	<u>1011697</u>	Washer, 5/16 Flat	1
3	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	1
4	<u>1016183</u>	Screw, 3/8-16 X 7.00 Hex Cap	2
5	<u>1016269</u>	Screw, 5/16-18 Thrd Forming	2
6	<u>1017313</u>	Steering Shaft Assembly (includes items 7 through 15)	1
7	<u>1012604</u>	Washer, 0.675 ID X 1.19 OD	1
8	<u>1012605</u>	Ring, 0.579 Internal Retaining	1
9	<u>1014125</u>	Wedge, Molded	2
10	<u>1014126</u>	Seat, Plastic Bearing	2
11	<u>1014213</u>	Bearing, Ball	2
12	<u>1014214</u>	Ring, Retaining	1
13	<u>1014217</u>	Spring, Steering Shaft	1
14	<u>1017314</u>	Column, Aluminum Steering	1
15	<u>1017315</u>	Shaft Steering Column	1
16	<u>1017317</u>	Tube Cover, Steering Column	1
17	101984801	Kit, Steering Column Mounting Bracket (includes items 18 and 19)	1
18	N/A	Bracket, RH Steering Column Mount	1
19	N/A	Bracket, LH Steering column mount	1
20	<u>102278001</u>	Boot, Steering Column Round	1
21	<u>103601601</u>	Shaft, Intermediate Steering (includes items 22 and 23)	1
22	<u>1017226</u>	Bolt, Hex-Head, 8mm X 1.25 - 30	3
23	<u>7174</u>	Lockwasher, 5/16 Split	3
24	<u>334</u>	Washer, 3/8 Type A Flat	4
25	<u>8754</u>	Locknut, 3/8-16 Hex	2

5


G

E

5

G

E

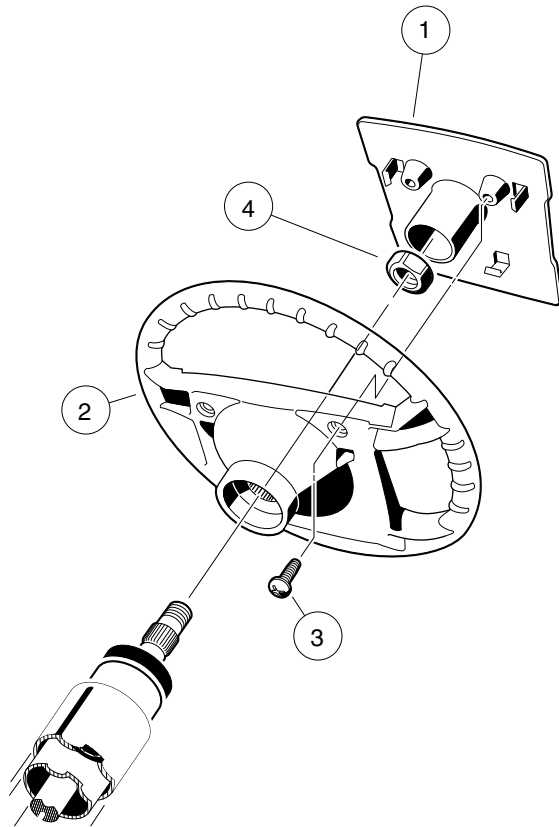

000246-003

STEERING WHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101615504</u>	Plate, Scorecard	1
2	<u>1016156</u>	Wheel, Steering	1
3	<u>1016663</u>	Screw, #12-14 X 0.625	2
4	<u>1017273</u>	Nut, 5/8-18 Nylon Insert Jam	1

5


G

E

5

G


E

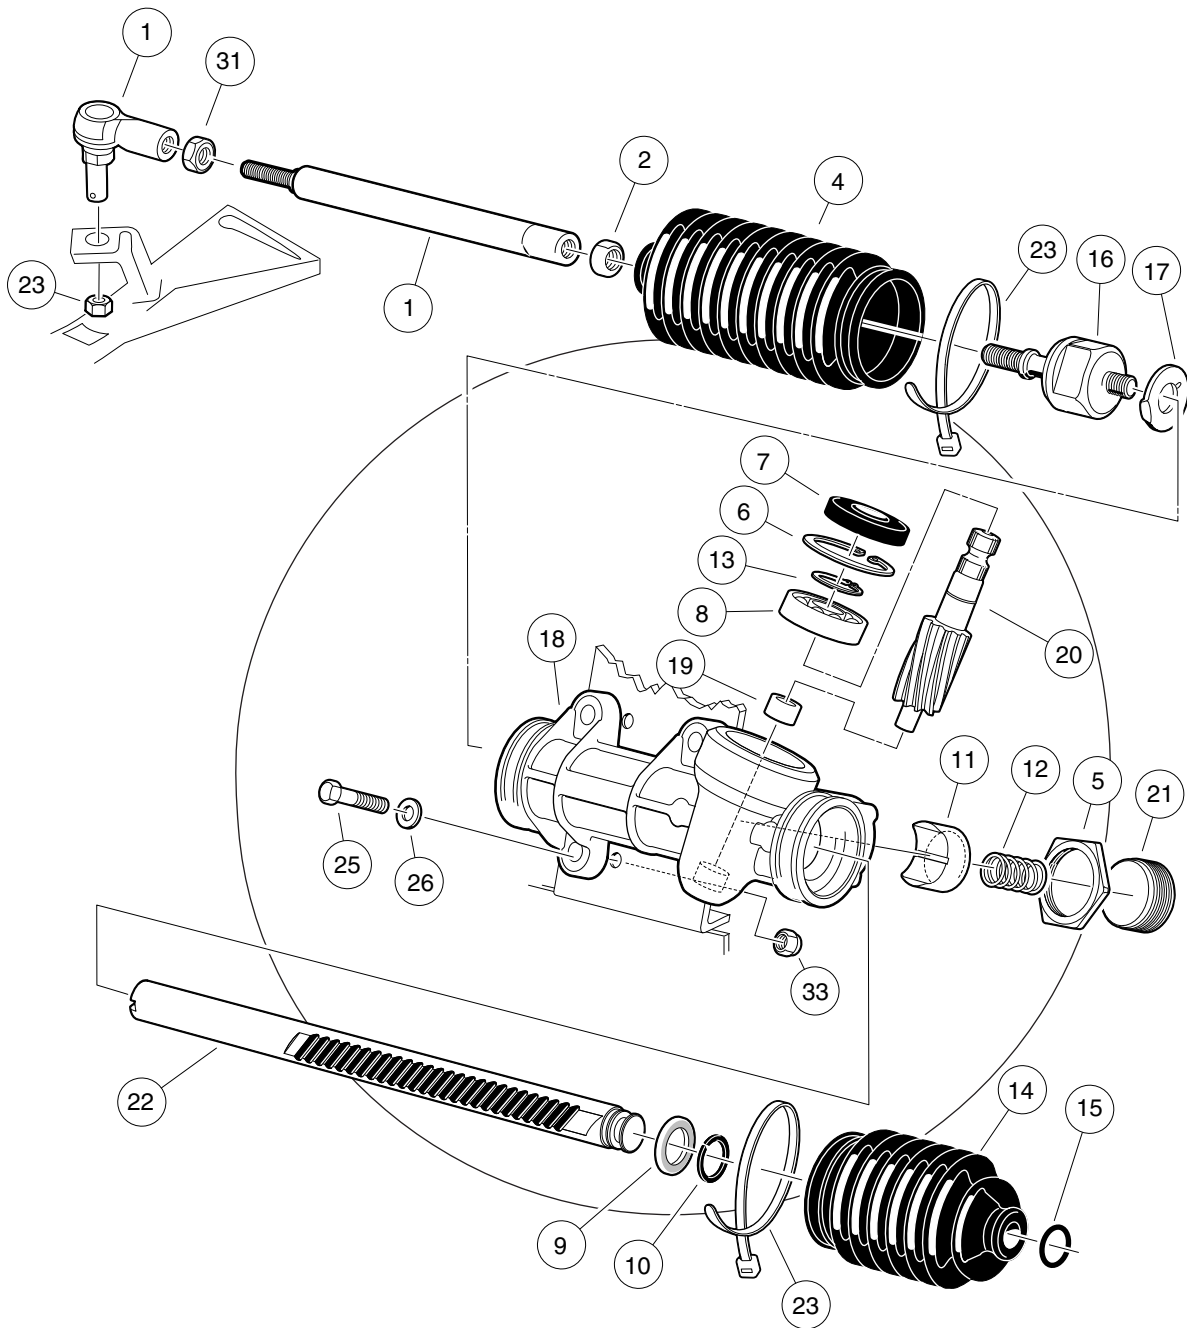

000189-001

STEERING GEAR ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1012467</u>	Link, Rack and Pinion Drag	1	
2	<u>1013042</u>	Nut, 12mm Hex	1	
3	<u>101878302</u>	Steering Gear Assembly (without yoke) (includes items 4 through 23)	1	
4	<u>1013035</u>	Bellows, Long	1	
5	<u>1013044</u>	Rack Screw Locknut	1	
6	<u>1013051</u>	Snap Ring	1	
7	<u>1013052</u>	Seal, Steering Pinion Dust	1	
8	<u>101879401</u>	Bearing, Ball	1	
9	<u>101879501</u>	Stop Washer	1	
10	<u>101879601</u>	Stop Ring, C-Type	1	
11	<u>101879701</u>	Support Yoke	1	
12	<u>101879801</u>	Rack Guide Pressure Spring	1	
13	<u>101879901</u>	Ring, Stop, C-Type	1	
14	<u>101880001</u>	Bellows, Short	1	
15	<u>101880101</u>	Dust Seal Retaining Ring	1	
16	<u>101880201</u>	Inner Ball Joint Asm	1	
17	<u>101880301</u>	Washer, Tab	1	
18	N/A	Box, Steering Gear	1	
19	N/A	Bearing, Lower Pinion	1	
20	N/A	Pinion, Steering	1	
21	N/A	Screw, Rack Guide	1	
22	N/A	Rack, Steering	1	
23	<u>8990</u>	Tie Wrap, 8" Nylon	2	
24	<u>1035</u>	Cotter Pin, 3/32 x 1	1	
25	<u>1624</u>	Screw, 3/8-16 X 1.50 Hex-Head Cap	3	
26	<u>334</u>	Washer, 3/8 Type A Flat	3	
27	<u>7540</u>	Ball Joint, Left (includes items 28 through 31)	1	
28	<u>1011895</u>	Socket, LH Vertical	1	
29	<u>1011930</u>	Seal, Vertical Socket Dust	1	
30	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
31	<u>7602</u>	Nut, 3/8-24 UNF Hex	1	
32	<u>7555</u>	Nut, 1/2-20 Hex, Left-Hand Thread	1	
33	<u>8754</u>	Locknut, 3/8-16 Hex	3	

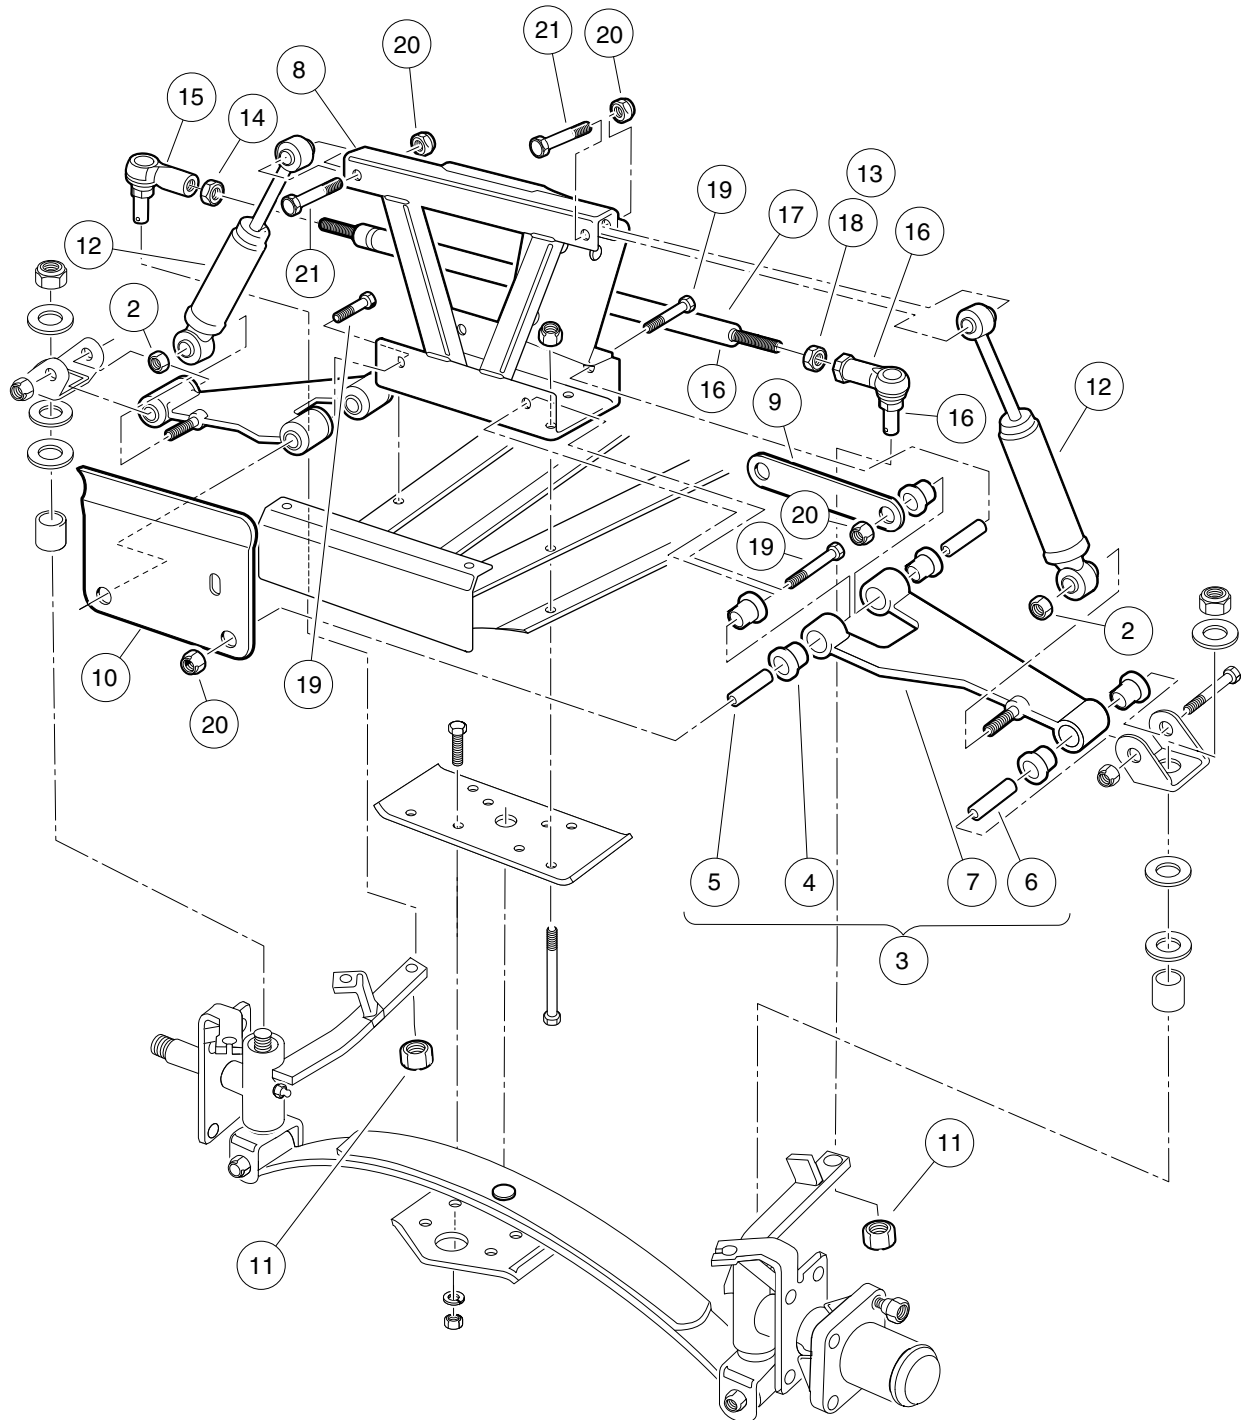

000314-004


FRONT SUSPENSION, UPPER

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	N/A	Sub-Assembly, Front Suspension (includes items 2 through 20)	1	
2	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2	
3	<u>1016353</u>	Sub-Assembly, Delta A-Plate (includes items 4 through 7)	2	
4	<u>1016346</u>	Bushing, Urethane	6	
5	<u>1016349</u>	Sleeve, Delta Inner	2	
6	<u>1016350</u>	Sleeve, Delta Outer	1	
7	<u>1016351</u>	Delta A-Plate	1	
8	<u>1016385</u>	Delta Shock and Gear Support Assembly	1	
9	<u>1017266</u>	A-Plate Strap	1	
10	<u>101955001</u>	Brake Cable Guide Bracket	1	
11	<u>102289201</u>	Nut - Hex Locking, M12 X 1.25	3	
12	<u>103351001</u>	Shock Absorber, Front, Common	2	
13	N/A	Asm, Tie Rod (includes items 14 through 18)	1	
14	1013042	Nut, 12mm Hex	1	
15	<u>102022601</u>	End, Tie Rod M12 X 1.25 Rh	1	
16	<u>102022602</u>	End, Tie Rod, M12 X 1.25, Lh	1	
17	<u>103354701</u>	Rod, Tie, Male Thd	1	
18	<u>103653501</u>	Nut, Jam, M12-1.25, Lh	1	
19	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4	
20	<u>8754</u>	Locknut, 3/8-16 Hex	13	

5

G


E

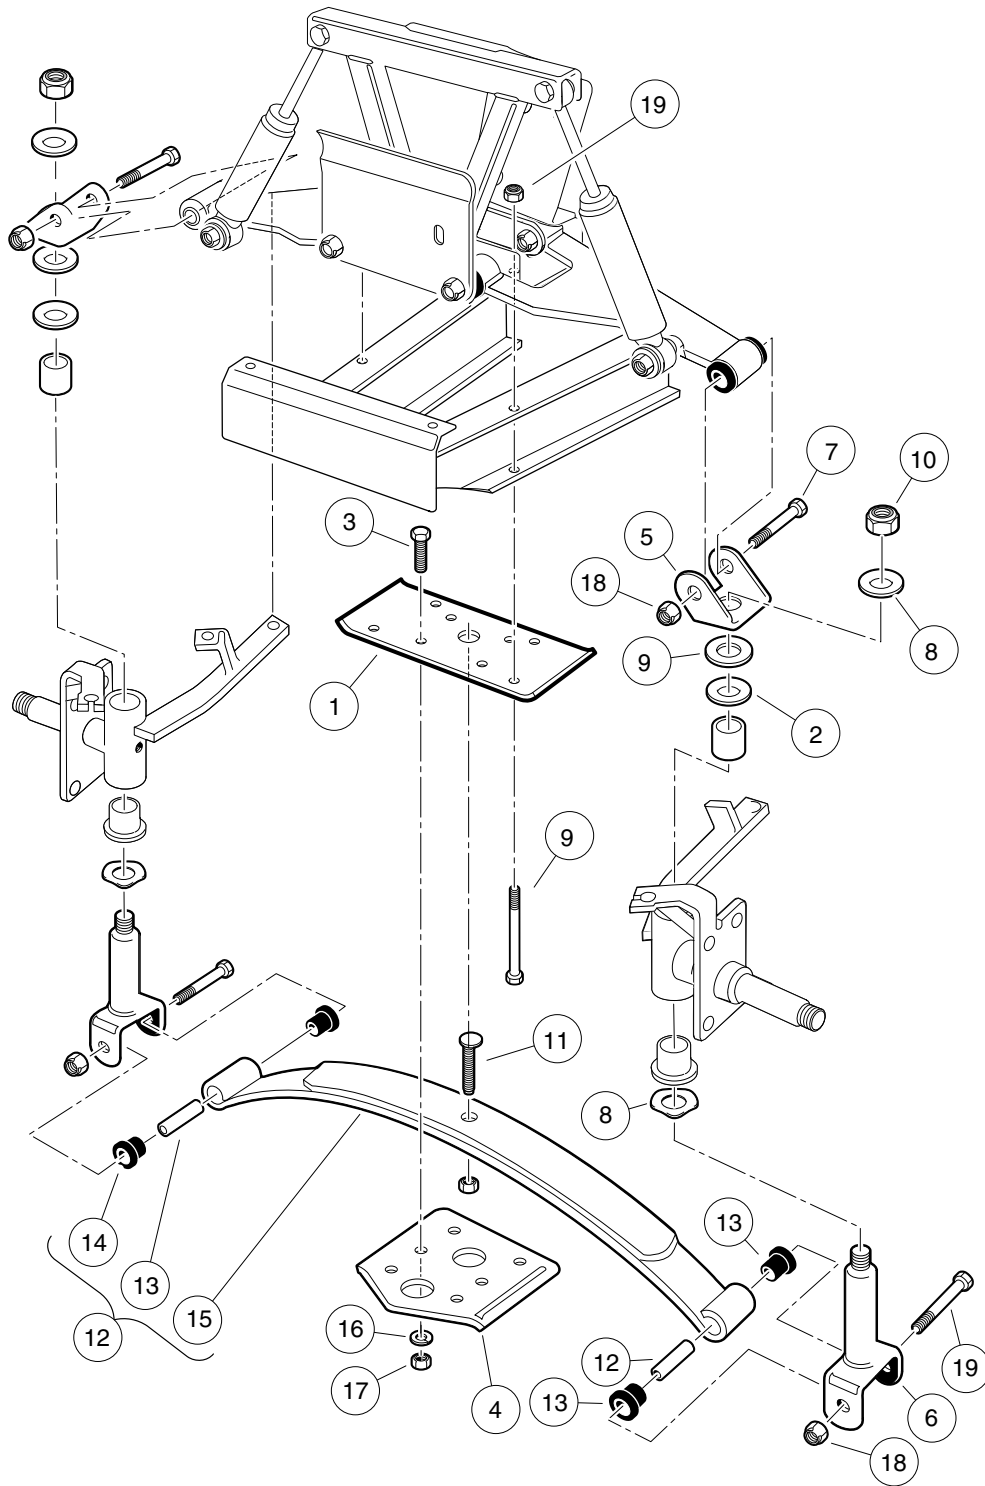

000313-001

FRONT SUSPENSION, LOWER (STYLE A)



ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1010124</u>	Plate, Spring Mount	1	
2	<u>1010150</u>	Bearing, Thrust	2	
3	<u>1014276</u>	Plate, Front Spring Retainer	1	
4	<u>1016384</u>	Clevis, Delta Upper	2	
5	<u>1016386</u>	King Pin Assembly	2	
6	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	2	
7	<u>1016389</u>	Washer, 1.125 Od Wave	2	
8	<u>102564002</u>	Washer-1/2 Conical, Yellow	2	
9	<u>102684501</u>	Washer, M12 Hard Regular	2	
10	<u>102766301</u>	Nut, 1/2-20, Center Lock	2	
11	<u>103628801</u>	Spring Asm, Front, 2 Leaf (includes items 12 through 14)	1	
12	<u>1012303</u>	Bushing, Steel	2	
13	<u>1015583</u>	Bushing, Urethane	4	
14	<u>103502701</u>	Spring, Front, 2 Leaf	1	
15	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4	
16	<u>357</u>	Lockwasher, 3/8 Split	4	
17	<u>706</u>	Nut, Hex 3/8-16	4	
18	<u>7270</u>	Bolt, 3/8-16 X 4.50 Hex Head	4	
19	<u>8754</u>	Locknut, 3/8-16 Hex	8	
20	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2	

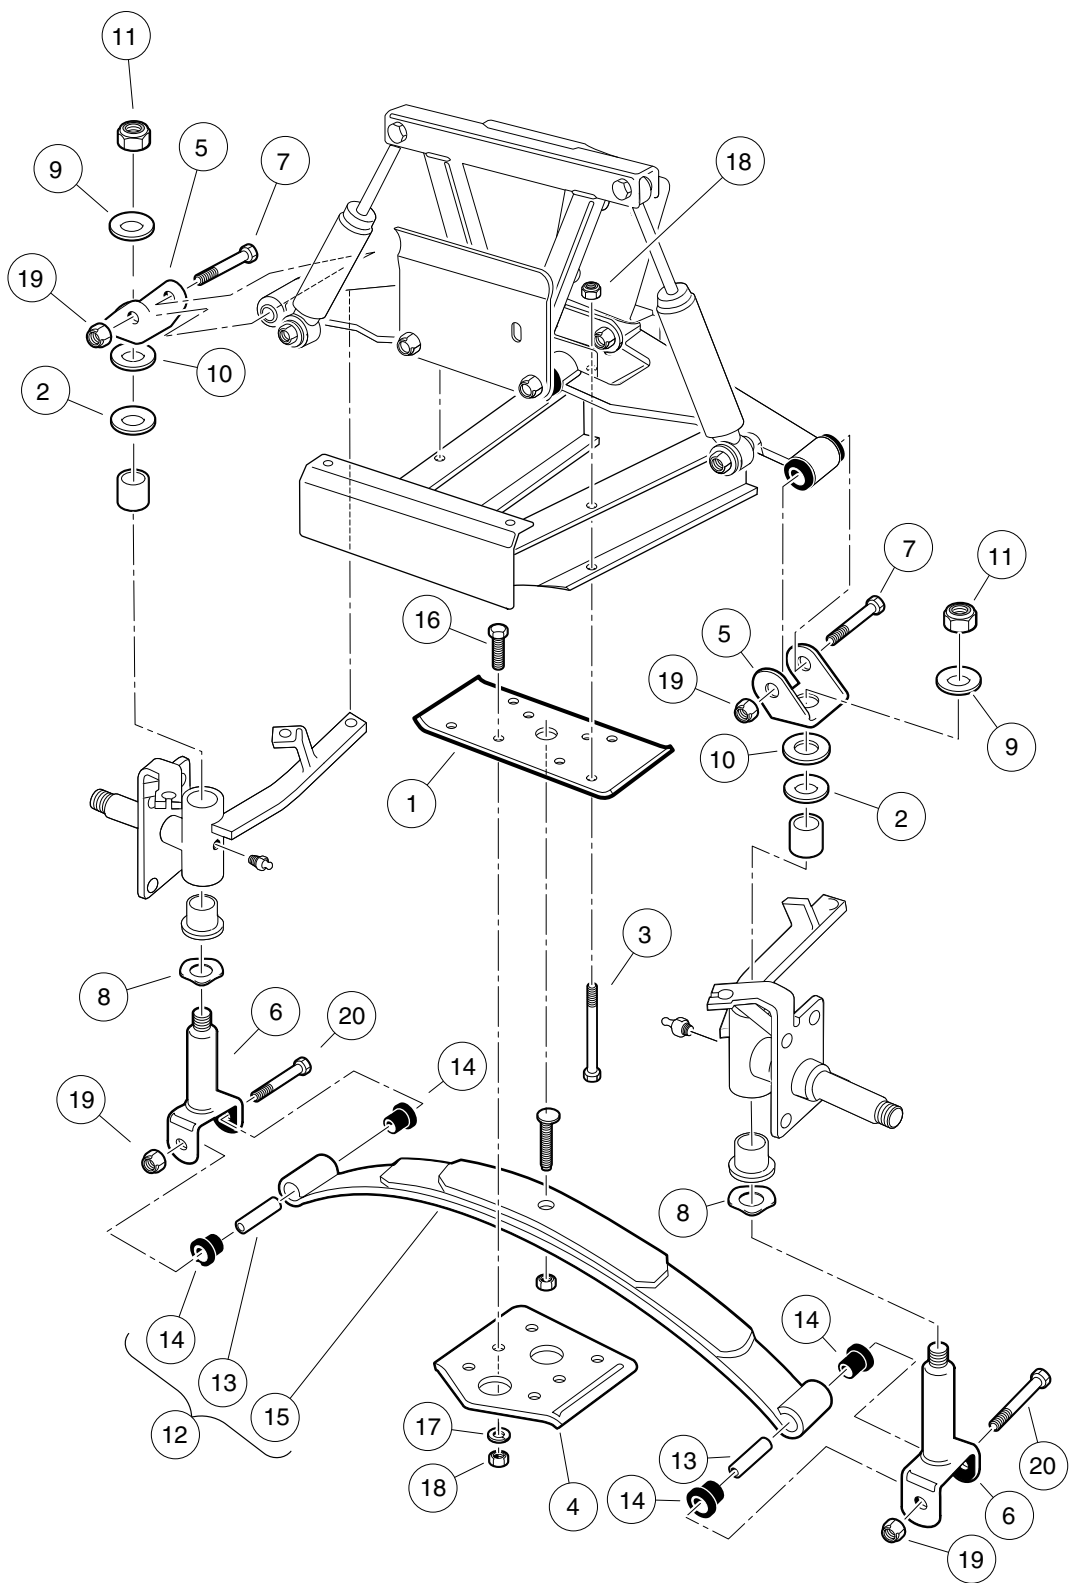

000313-002

FRONT SUSPENSION, LOWER (STYLE B)


ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1010124</u>	Plate, Spring Mount	1	
2	<u>1010150</u>	Bearing, Thrust	2	
3	<u>1010200</u>	Bolt, 3/8-16 X 4.25 Hex Head	4	
4	<u>1014276</u>	Plate, Front Spring Retainer	1	
5	<u>1016384</u>	Clevis, Delta Upper	2	
6	<u>1016386</u>	King Pin Assembly	2	
7	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	2	
8	<u>1016389</u>	Washer, 1.125 Od Wave	2	
9	<u>102564002</u>	Washer-1/2 Conical, Yellow	2	
10	<u>102684501</u>	Washer, M12 Hard Regular	2	
11	<u>102766301</u>	Nut, 1/2-20, Center Lock	2	
12	<u>103628901</u>	Spring Asm, Front, 3 Leaf (includes items 13 through 15)	1	
13	<u>1012303</u>	Bushings, Steel	2	
14	<u>1015583</u>	Bushings, Urethane	4	
15	103502801	Spring, Front, 3 Leaf	1	
16	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4	
17	<u>357</u>	Lockwasher, 3/8 Split	4	
18	<u>706</u>	Nut, Hex 3/8-16	4	
19	<u>8754</u>	Locknut, 3/8-16 Hex	8	
20	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2	

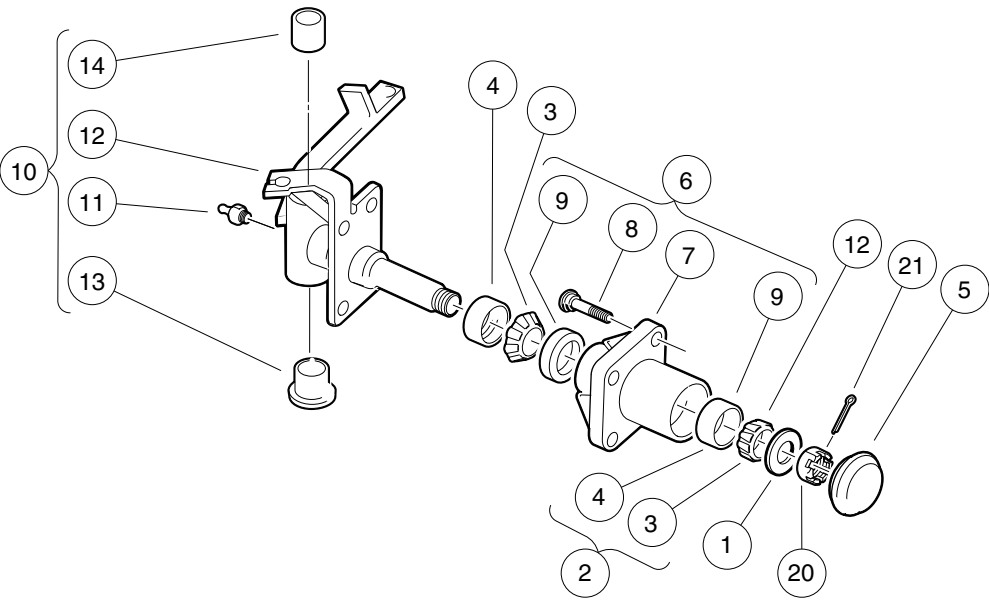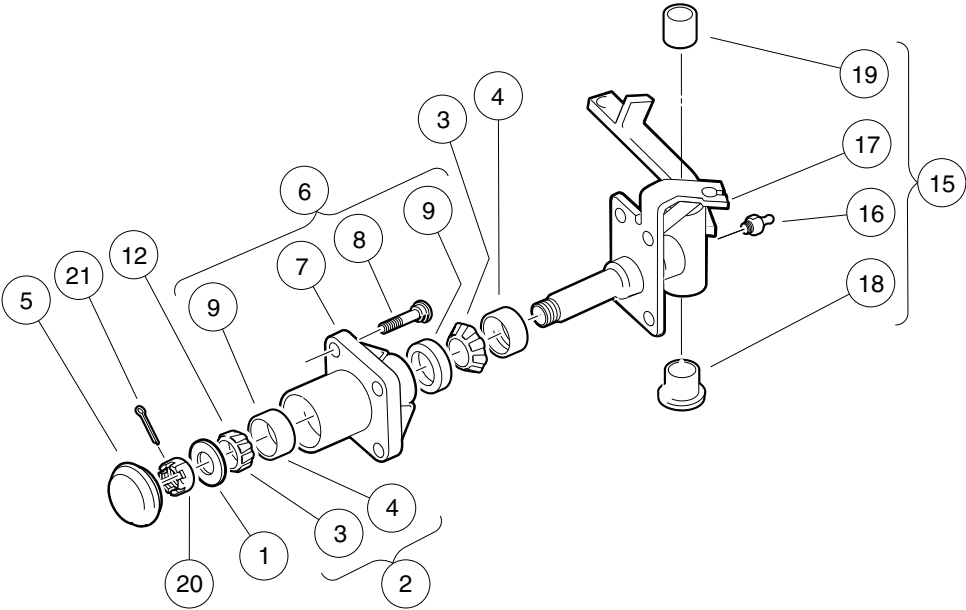

000310-002

FRONT SPINDLES AND HUBS – VEHICLES WITH FOUR-WHEEL BRAKES


ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1010005</u>	Washer, 3/4 Flat	2	
2	<u>1011393</u>	Hub Bearing Package (includes items 3 and 4)	4	
3	<u>7274</u>	Bearing, Front Hub Wheel	1	
4	<u>7308</u>	Race, Front Hub Bearing	1	
5	<u>1011887</u>	Dust Cover	2	
6	<u>1011889</u>	Hub (includes items 7 through 9)	2	
7	<u>1011153</u>	Front Hub	1	
8	<u>103477901</u>	Lug Stud, 1/2-20 Unf, 4037	4	
9	<u>7308</u>	Race, Front Hub Bearing	2	
10	<u>103717302</u>	Asm, Spindle, Lh, 4wb, Sp (includes items 11 through 14)	1	
11	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
12	<u>N/A</u>	Subasm, Spindle, Lh, 4wb	1	
13	<u>7048</u>	Bushing, Flanged Bronze	1	
14	<u>8067</u>	Bushing, Bronze Spindle	1	
15	<u>103717402</u>	Asm, Spindle, Rh, 4wb, Sp (includes items 16 through 19)	1	
16	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
17	<u>N/A</u>	Subasm, Spindle, Rh, 4wb	1	
18	<u>7048</u>	Bushing, Flanged Bronze	1	
19	<u>8067</u>	Bushing, Bronze Spindle	1	
20	<u>7840</u>	Nut, 3/4-16 Hex Slotted	2	
21	<u>7910</u>	Pin, 5/32 X 1.00 Cotter	2	

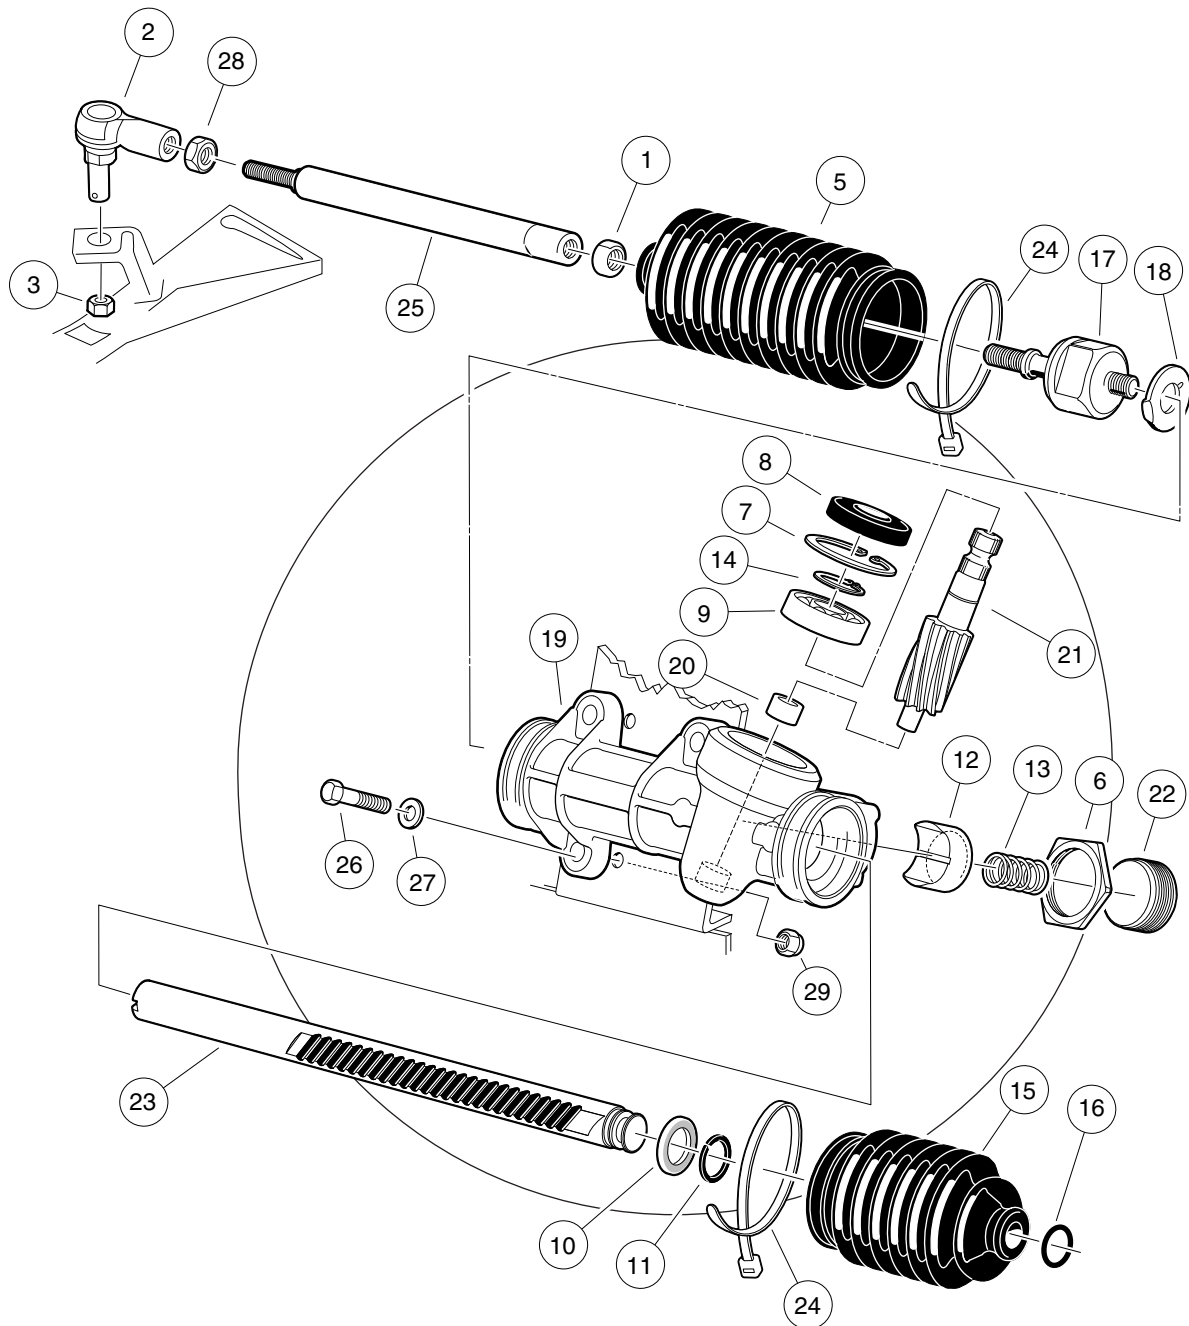

000960-001


STEERING GEAR ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	1013042	Nut, 12mm Hex	1	
2	<u>102022602</u>	End, Tie Rod, M12 X 1.25, Lh	1	
3	<u>102289201</u>	Nut - Hex Locking, M12 X 1.25	3	
4	<u>103601501</u>	Asm, Steering Rack And Pinion (includes items 5 through 24)	1	
5	<u>1013035</u>	Bellows, Long	1	
6	<u>1013044</u>	Rack Screw Locknut	1	
7	1013051	Snap Ring	1	
8	<u>1013052</u>	Seal, Steering Pinion Dust	1	
9	<u>101879401</u>	Bearing, Ball	1	
10	<u>101879501</u>	Stop Washer	1	
11	101879601	Stop Ring, C-Type	1	
12	<u>101879701</u>	Support Yoke	1	
13	<u>101879801</u>	Rack Guide Pressure Spring	1	
14	<u>101879901</u>	Ring, Stop, C-Type	1	
15	<u>101880001</u>	Bellows, Short	1	
16	101880101	Dust Seal Retaining Ring	1	
17	<u>101880201</u>	Inner Ball Joint Asm	1	
18	101880301	Washer, Tab	1	
19	N/A	Box, Steering Gear	1	
20	N/A	Bearing, Lower Pinion	1	
21	N/A	Pinion, Steering	1	
22	N/A	Screw, Rack Guide	1	
23	N/A	Rack, Steering	1	
24	<u>8990</u>	Tie Wrap, 8" Nylon	2	
25	<u>103653401</u>	Link, Drag, Male Thd	1	
26	<u>1624</u>	Screw, 3/8-16 X 1.50 Hex-Head Cap	3	
27	<u>334</u>	Washer, 3/8 Type A Flat	3	
28	<u>7555</u>	Nut, 1/2-20 Hex, Left-Hand Thread	1	
29	<u>8754</u>	Locknut, 3/8-16 Hex	3	

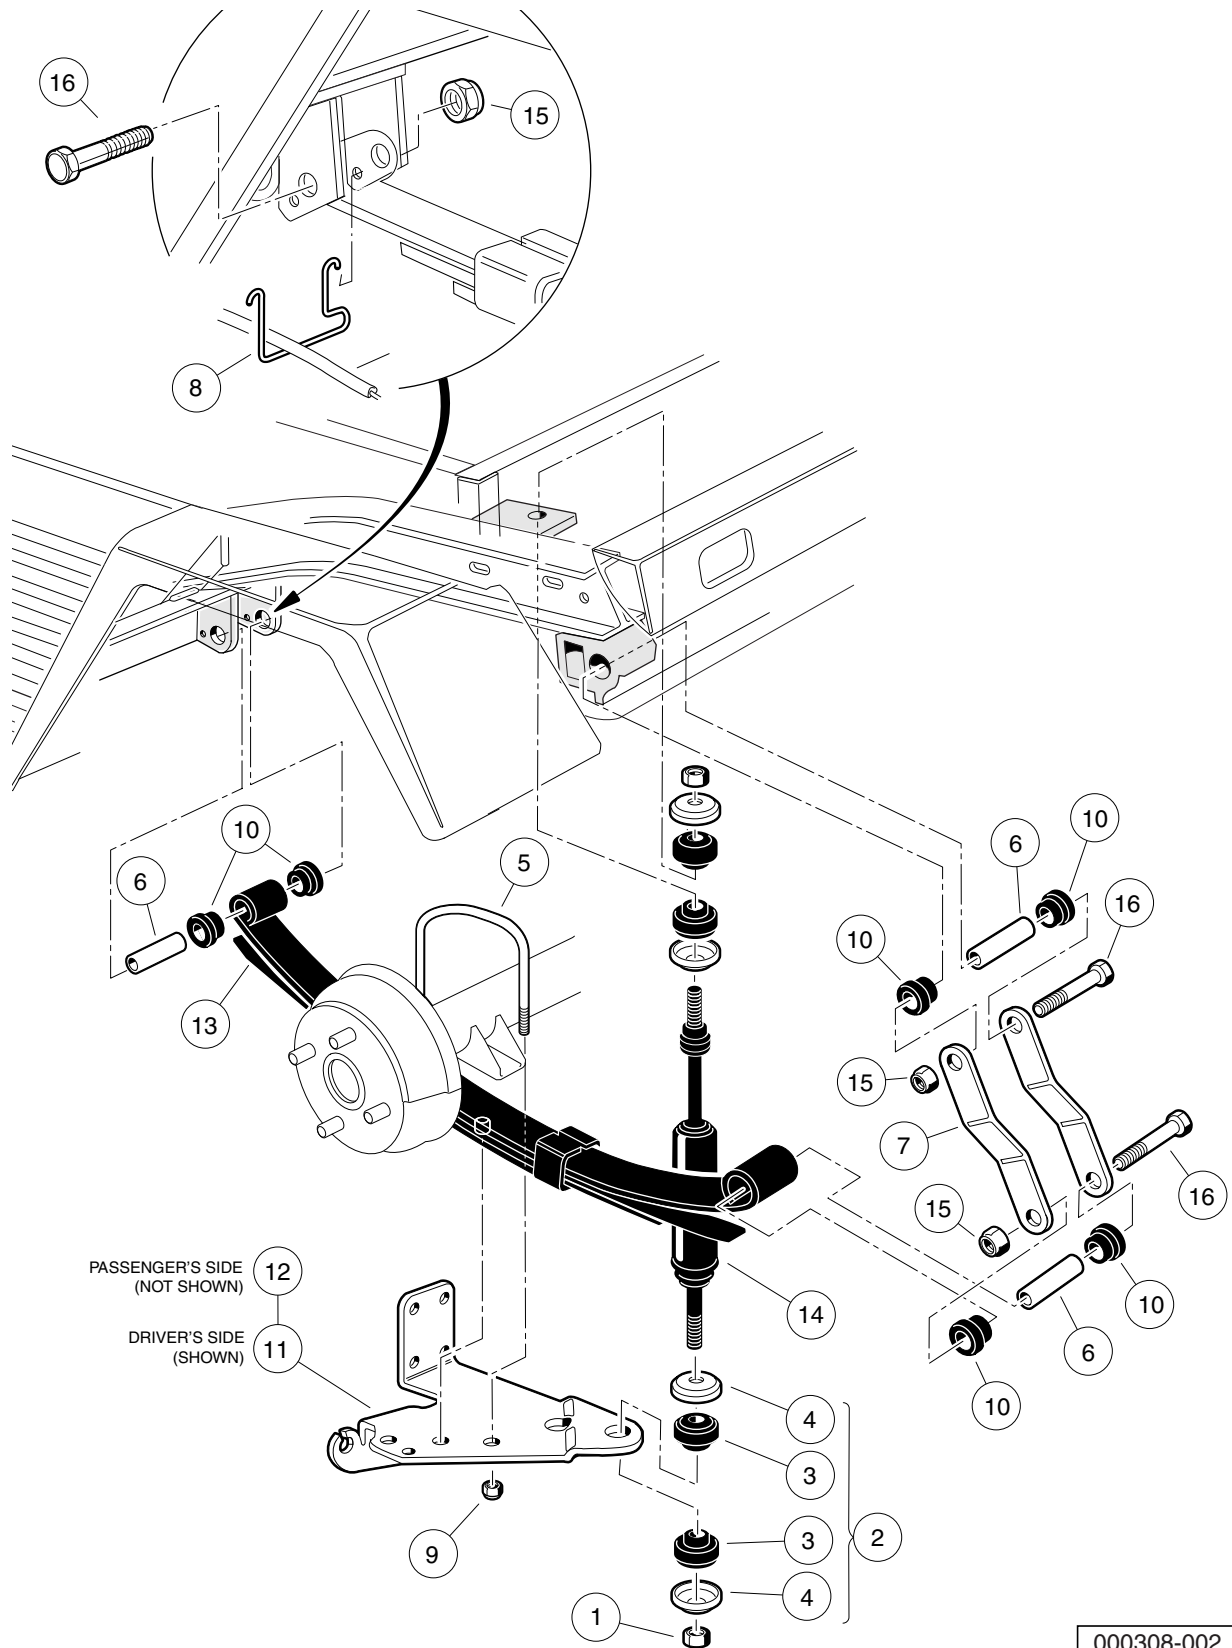5**G****E**

REAR SUSPENSION – GASOLINE VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1010145</u>	Nut, 3/8-24 Hex	4	
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4	
3	<u>1010142</u>	Cushion, Shock Absorber	2	
4	<u>1010144</u>	Retainer, Shock Absorber Cushion	2	
5	<u>1012180</u>	U-Bolt	2	
6	<u>1012303</u>	Bushing, Steel	6	
7	<u>1012304</u>	Shackle, Rear Spring	4	
8	<u>1013207</u>	Hanger, Brake Cable	2	
9	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4	
10	<u>1015583</u>	Bushing, Urethane	12	
11	<u>101926501</u>	Bracket, Left-Hand	1	
12	<u>101929401</u>	Bracket, Right	1	
13	<u>102871801</u>	Spring, Multi Leaf	2	
14	<u>103350901</u>	Shock Absorber, Rear, Utility	2	
15	<u>8754</u>	Locknut, 3/8-16 Hex	6	
16	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	6	
Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock mounting plate.				

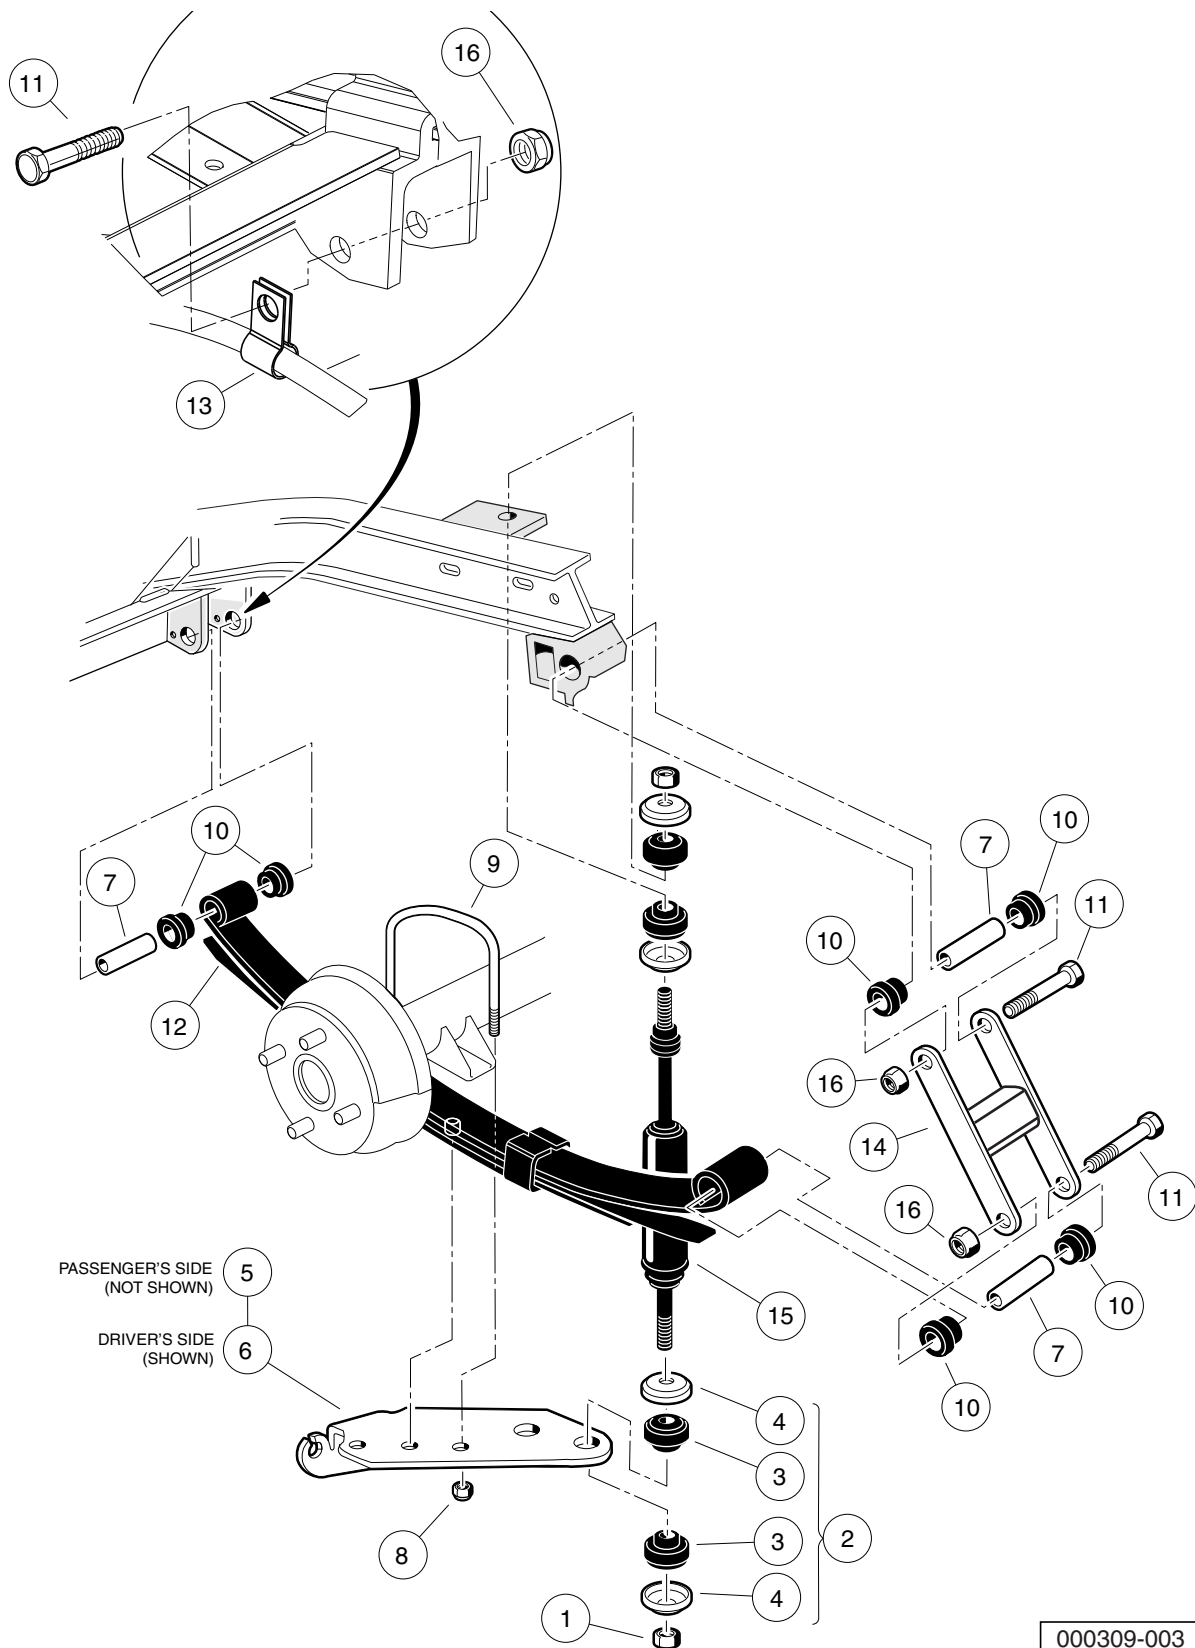

000309-003

REAR SUSPENSION – IQ PLUS VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1010145</u>	Nut, 3/8-24 Hex	4	
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4	
3	<u>1010142</u>	Cushion, Shock Absorber	2	
4	<u>1010144</u>	Retainer, Shock Absorber Cushion	2	
5	<u>1012181</u>	Bracket, Shock Mounting, Right (Passenger)	1	
6	<u>1012182</u>	Bracket, Shock Mounting, Left (Driver)	1	
7	<u>1012303</u>	Bushing, Steel	6	
8	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4	
9	<u>1014902</u>	U-Bolt	2	
10	<u>1015583</u>	Bushing, Urethane	12	
11	<u>102066201</u>	Screw, 3/8-16 X 3.50 Hex Cap	6	
12	<u>102871801</u>	Spring, Multi Leaf	2	
13	<u>102891101</u>	Clamp, Cable, Brake, Sym	2	
14	<u>102917101</u>	Weldment, Shackle	2	
15	<u>103351101</u>	Shock, Absorber, Utility	2	
16	<u>8754</u>	Locknut, 3/8-16 Hex	6	
Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock mounting plate.				

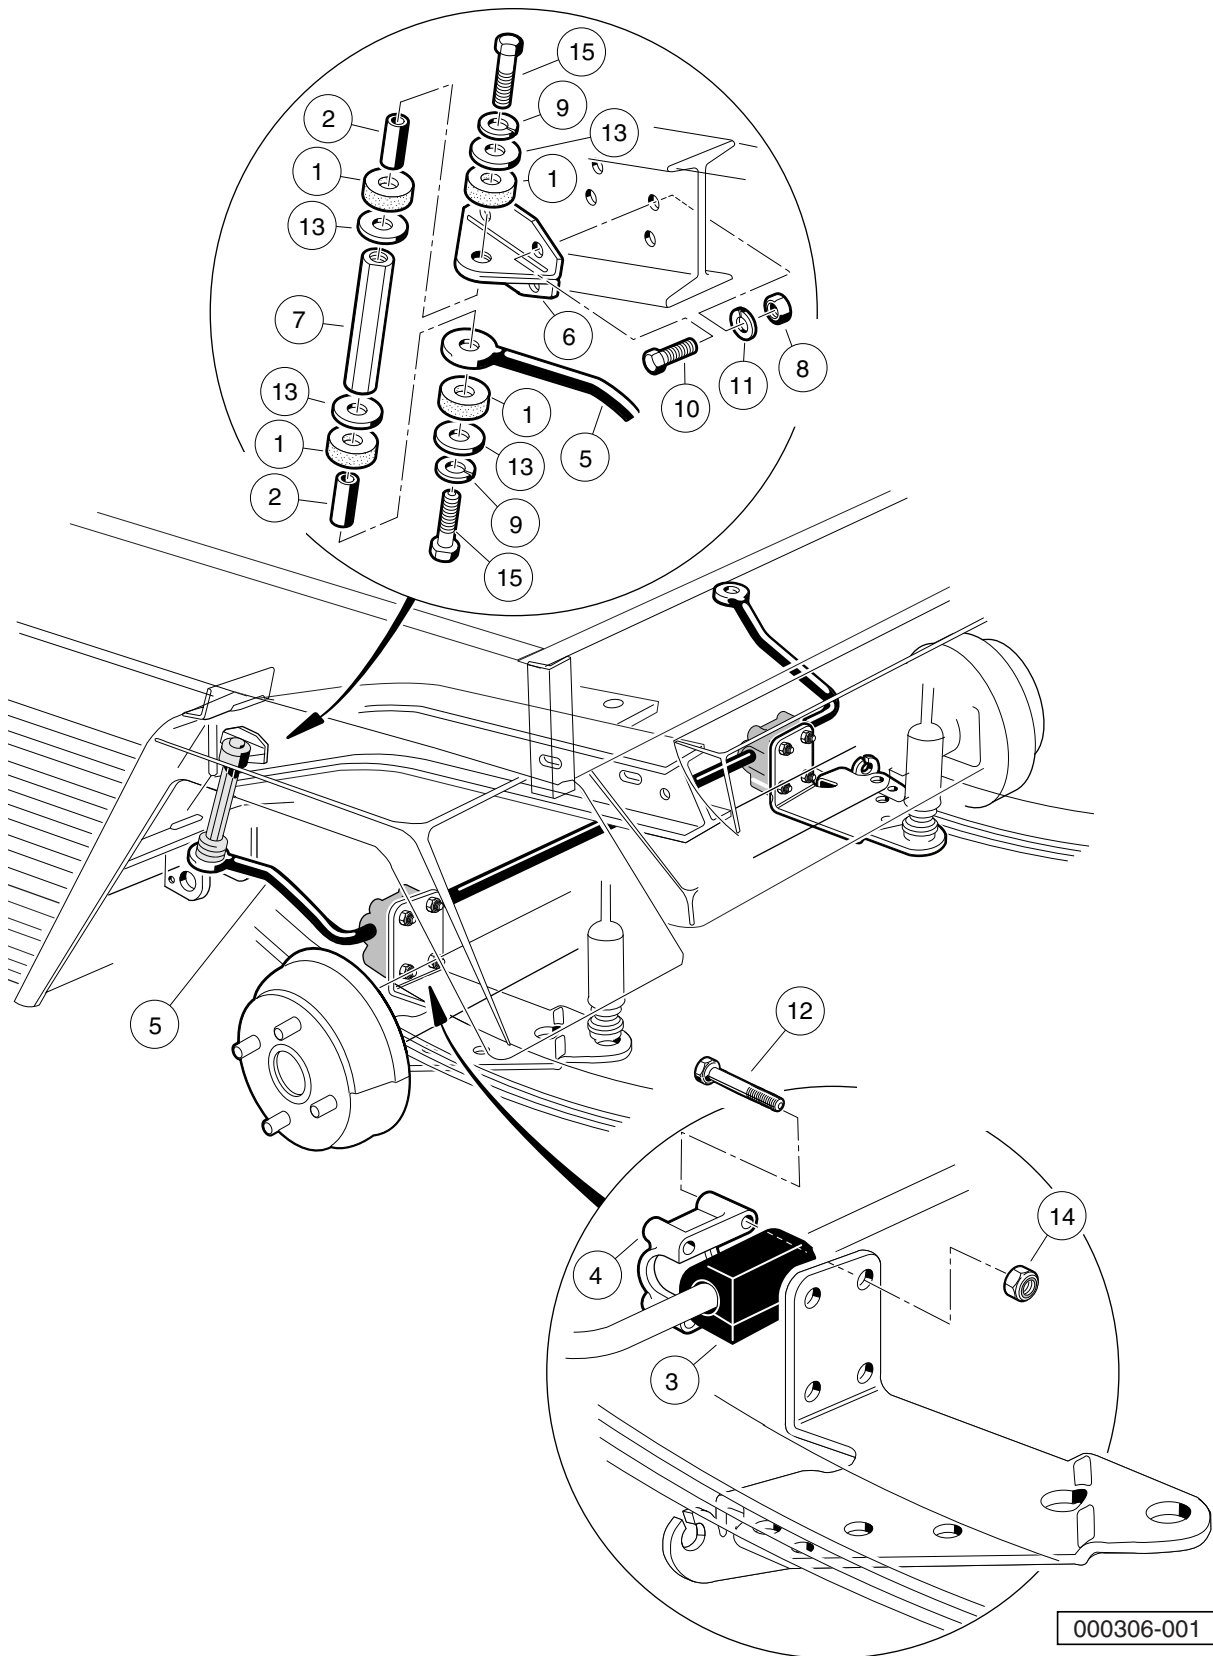5**G****E**

STABILIZER BAR – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1015453</u>	Compression Mount	8	
2	<u>1015457</u>	Spacer, 0.720"	4	
3	<u>1015613</u>	Bushing, Stabilizer Bar	2	
4	<u>1015614</u>	Support, Bushing	2	
5	<u>1015760</u>	Stabilizer Bar	1	
6	<u>1016813</u>	Mounting Bracket, Stabilizer Bar	2	
7	<u>1016814</u>	Link, Stabilizer Bar	2	
8	<u>1242</u>	Nut, 5/16-18 Hex	8	
9	<u>357</u>	Lockwasher, 3/8 Split	4	
10	<u>7173</u>	Screw, 5/16-18 X 0.75 Hex-Head Cap	8	
11	<u>7174</u>	Lockwasher, 5/16 Split	8	
12	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	8	
13	<u>808</u>	Washer, 3/8 Type B Flat	8	
14	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	8	
15	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	4	
Note: Only the driver side of the stabilizer bar is shown. Parts for the passenger side of the stabilizer bar are identical.				

5


G

E


ELECTRICAL SYSTEM – GASOLINE VEHICLES

6

G

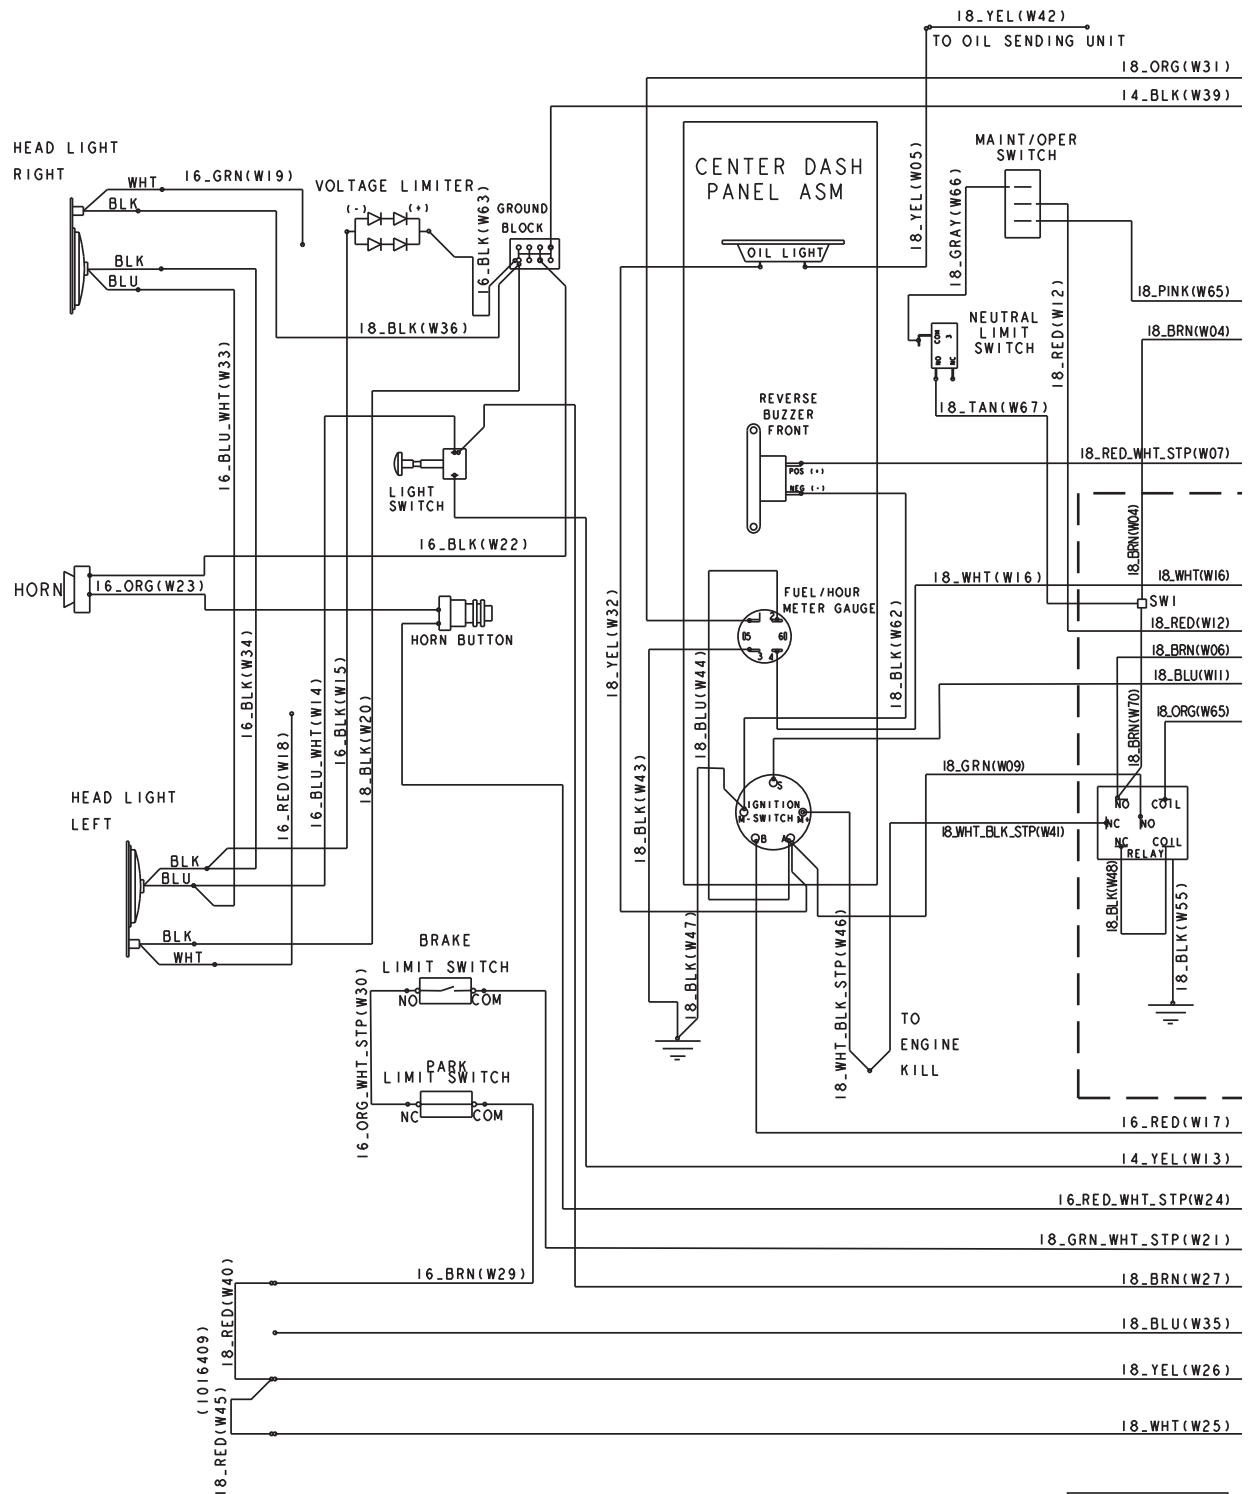

000574-001

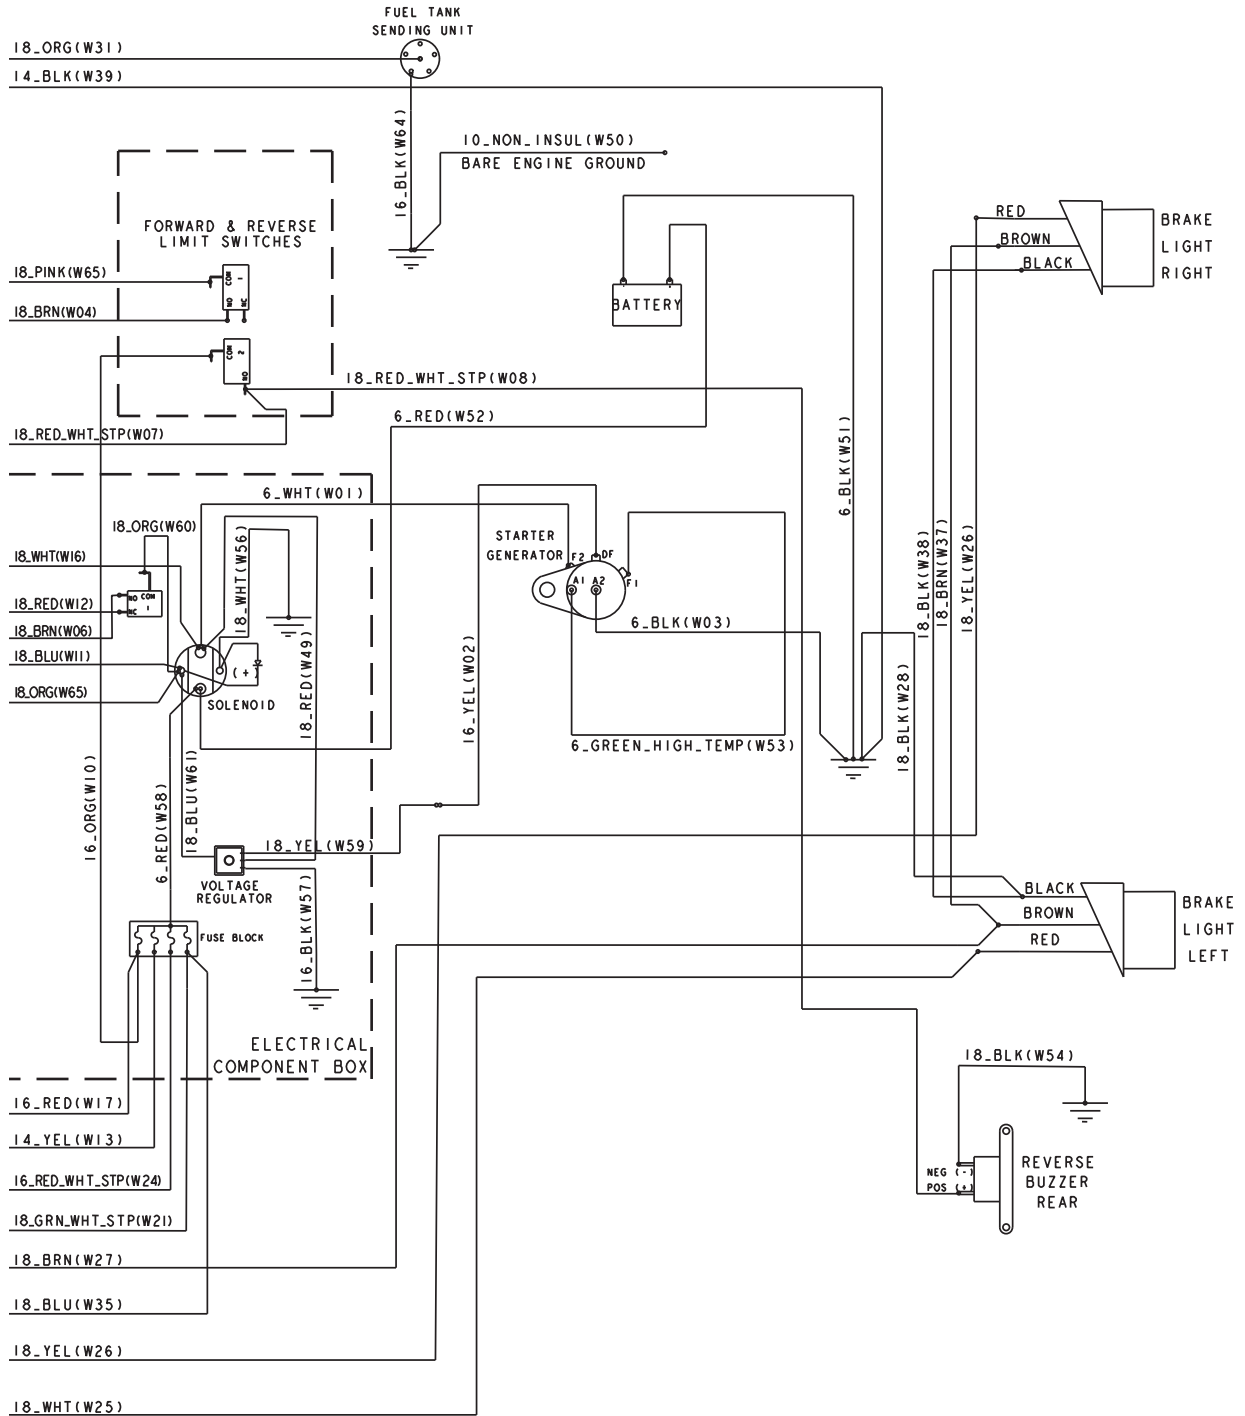

000574-001


6

G

See previous two pages for illustration.

6
G

6
G

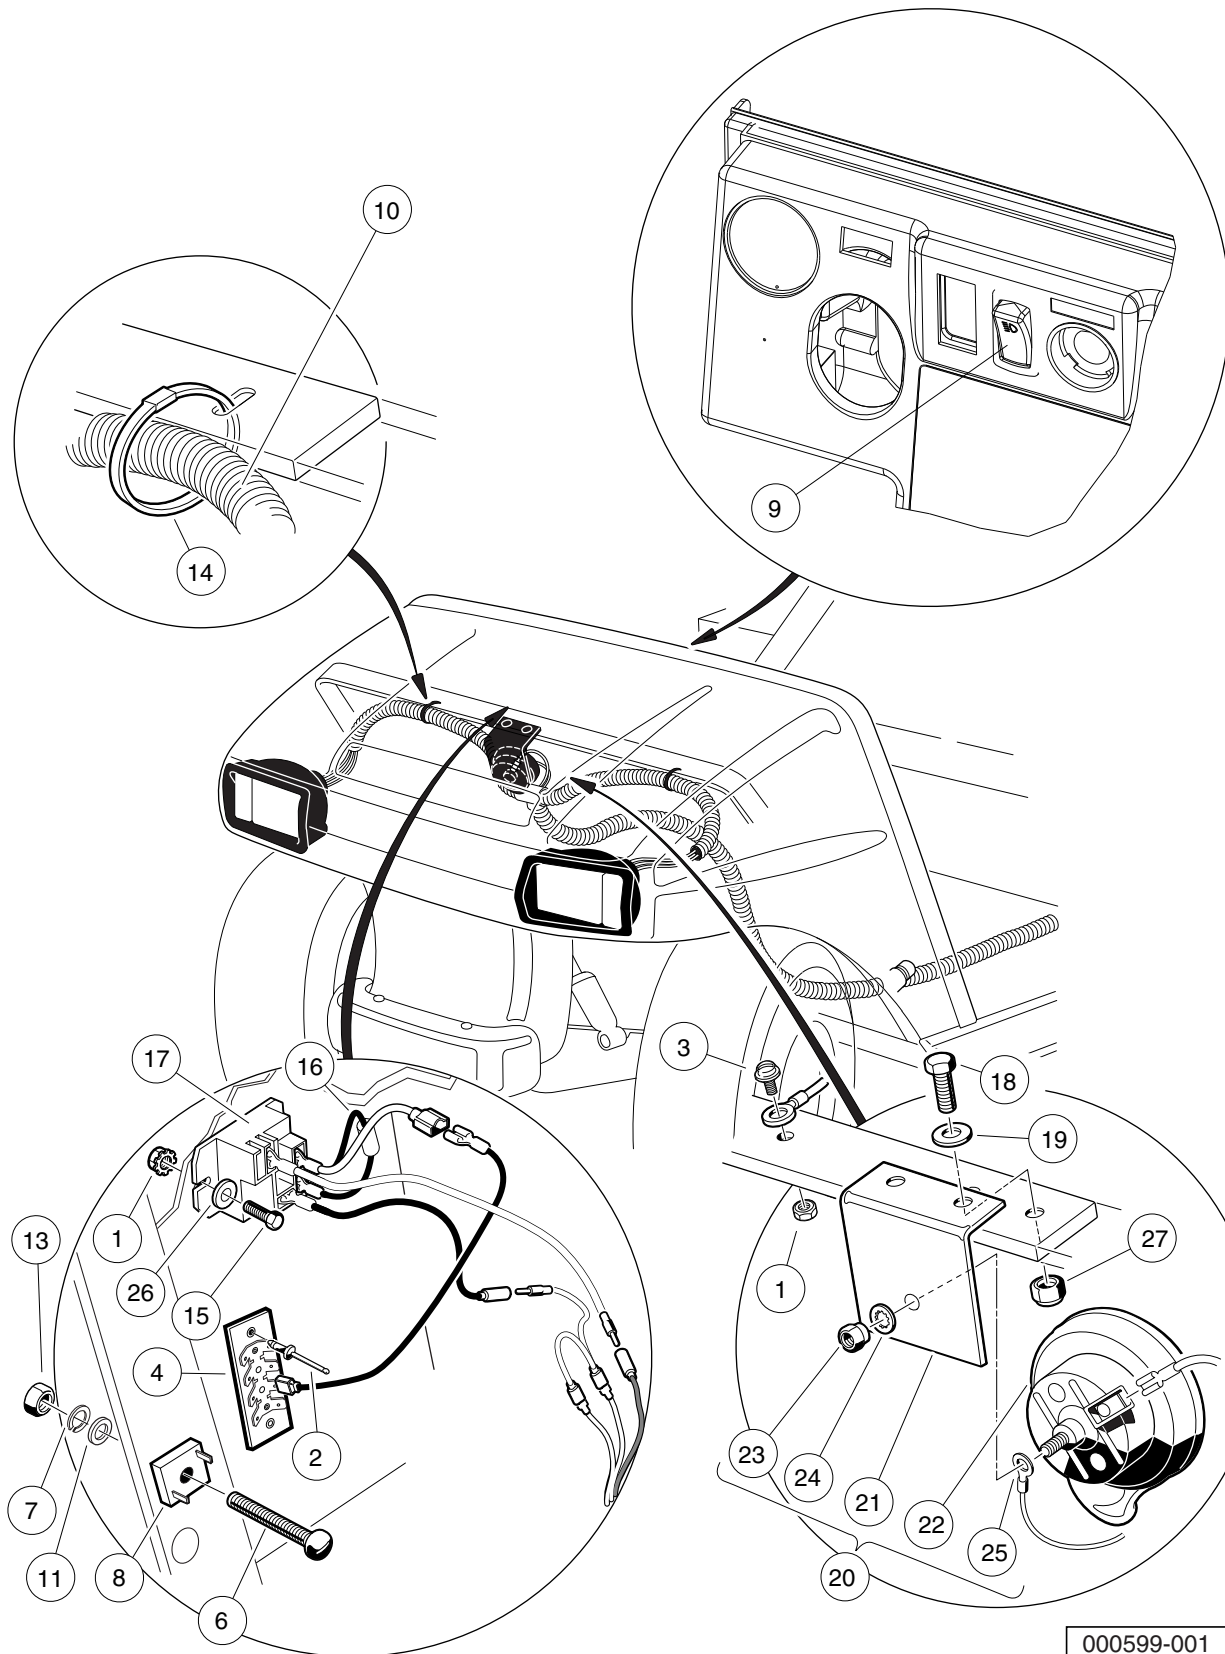


000599-001

HEADLIGHT AND HORN ELECTRICAL COMPONENTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011229</u>	Locknut, #6-32 Whiz	3
2	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2
3	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
4	<u>1016356</u>	Terminal Block with Insulator	1
5	N/A	Headlight Instl-gas Golf (includes items 6 through 14)	1
6	<u>1010909</u>	Screw, #10-32 X 1.25 Rd Hd Mch	1
7	<u>1016</u>	Lockwasher, #10 Split	1
8	<u>1017721</u>	Limiter, Voltage	1
9	<u>102869401</u>	Switch, Rocker, Light	1
10	N/A	Wire Harness, Hd Lght, Ca, Gas	1
11	<u>183</u>	Washer, #10 Type A Flat	1
12	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1
13	<u>7893</u>	Nut, #10-32 Hex	1
14	<u>8990</u>	Tie Wrap, 8" Nylon	12
15	<u>1017853</u>	Screw, #6-32 X 0.75 Hex-Head Machine	2
16	<u>101914401</u>	Assembly, Voltage Suppressor	1
17	<u>102199001</u>	Relay, 12-Volt	1
18	<u>304</u>	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
19	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
20	<u>4029</u>	Horn (includes items 21 through 25)	1
21	<u>1011825</u>	Horn Bracket	1
22	<u>1014530</u>	Horn, 12-VDC	1
23	<u>101955101</u>	Nut, M6 Hex	1
24	<u>7820</u>	Washer, 5/16 Internal-Tooth	1
25	N/A	5/16 Ring Term.	1
26	<u>7591</u>	Washer, #6 Flat	2
27	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2

6

G

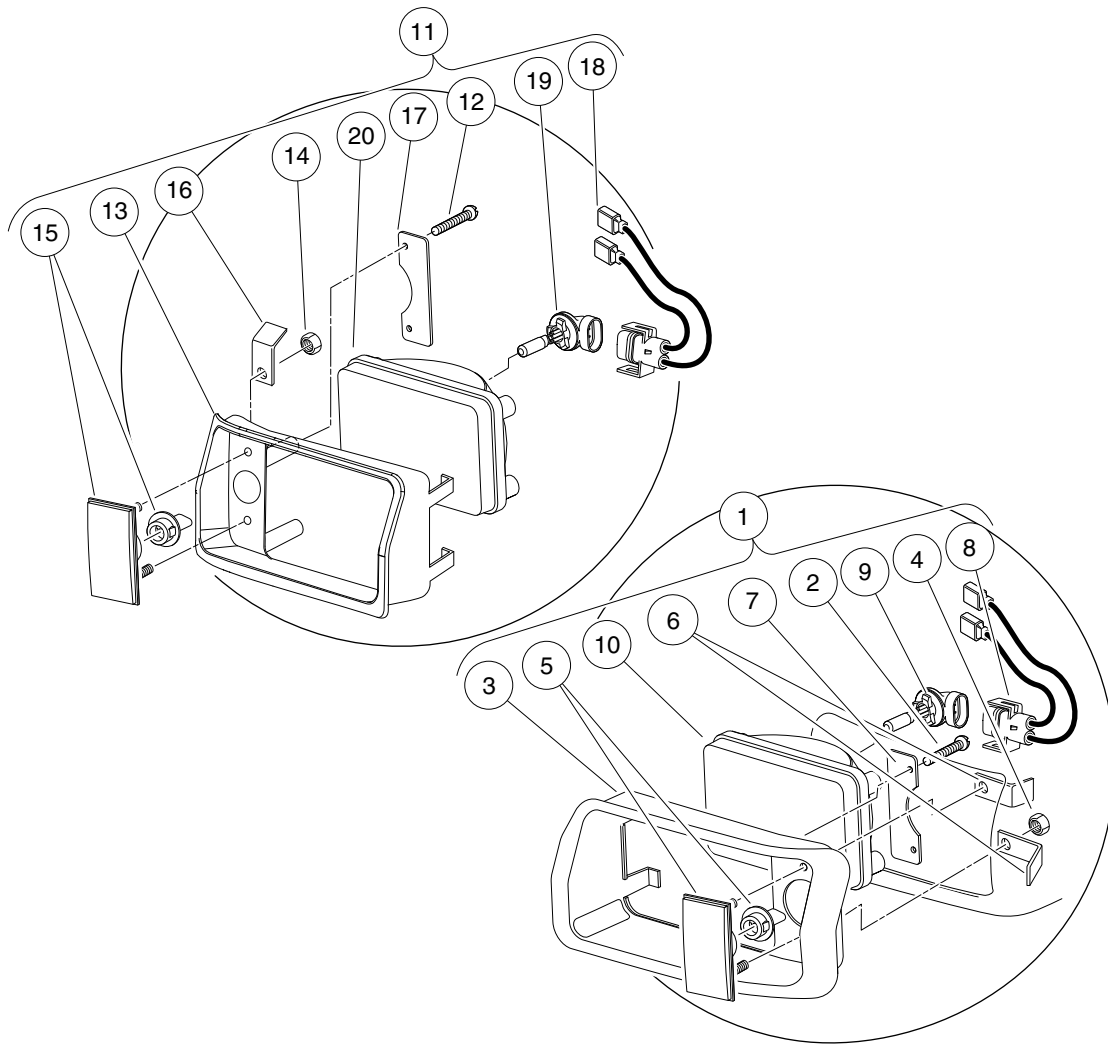


000073-001

HEADLIGHTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101988001</u>	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	1
2	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2
3	<u>1016880</u>	Headlight Bezel, Left	1
4	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
5	<u>1017062</u>	Turn Signal Lens Assy	1
6	<u>1017064</u>	Mounting Bracket	2
7	<u>1017065</u>	Retainer, Headlight	1
8	<u>101987901</u>	Connector Harness Assembly, Headlight	1
9	<u>101988101</u>	Bulb, Headlight	1
10	<u>101988201</u>	Lens, Headlight	1
11	<u>101988002</u>	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	1
12	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2
13	<u>1016879</u>	Headlight Bezel, Right	1
14	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
15	<u>1017062</u>	Turn Signal Lens Assy	1
16	<u>1017064</u>	Mounting Bracket	2
17	<u>1017065</u>	Retainer, Headlight	1
18	<u>101987901</u>	Connector Harness Assembly, Headlight	1
19	<u>101988101</u>	Bulb, Headlight	1
20	<u>101988201</u>	Lens, Headlight	1

6


G

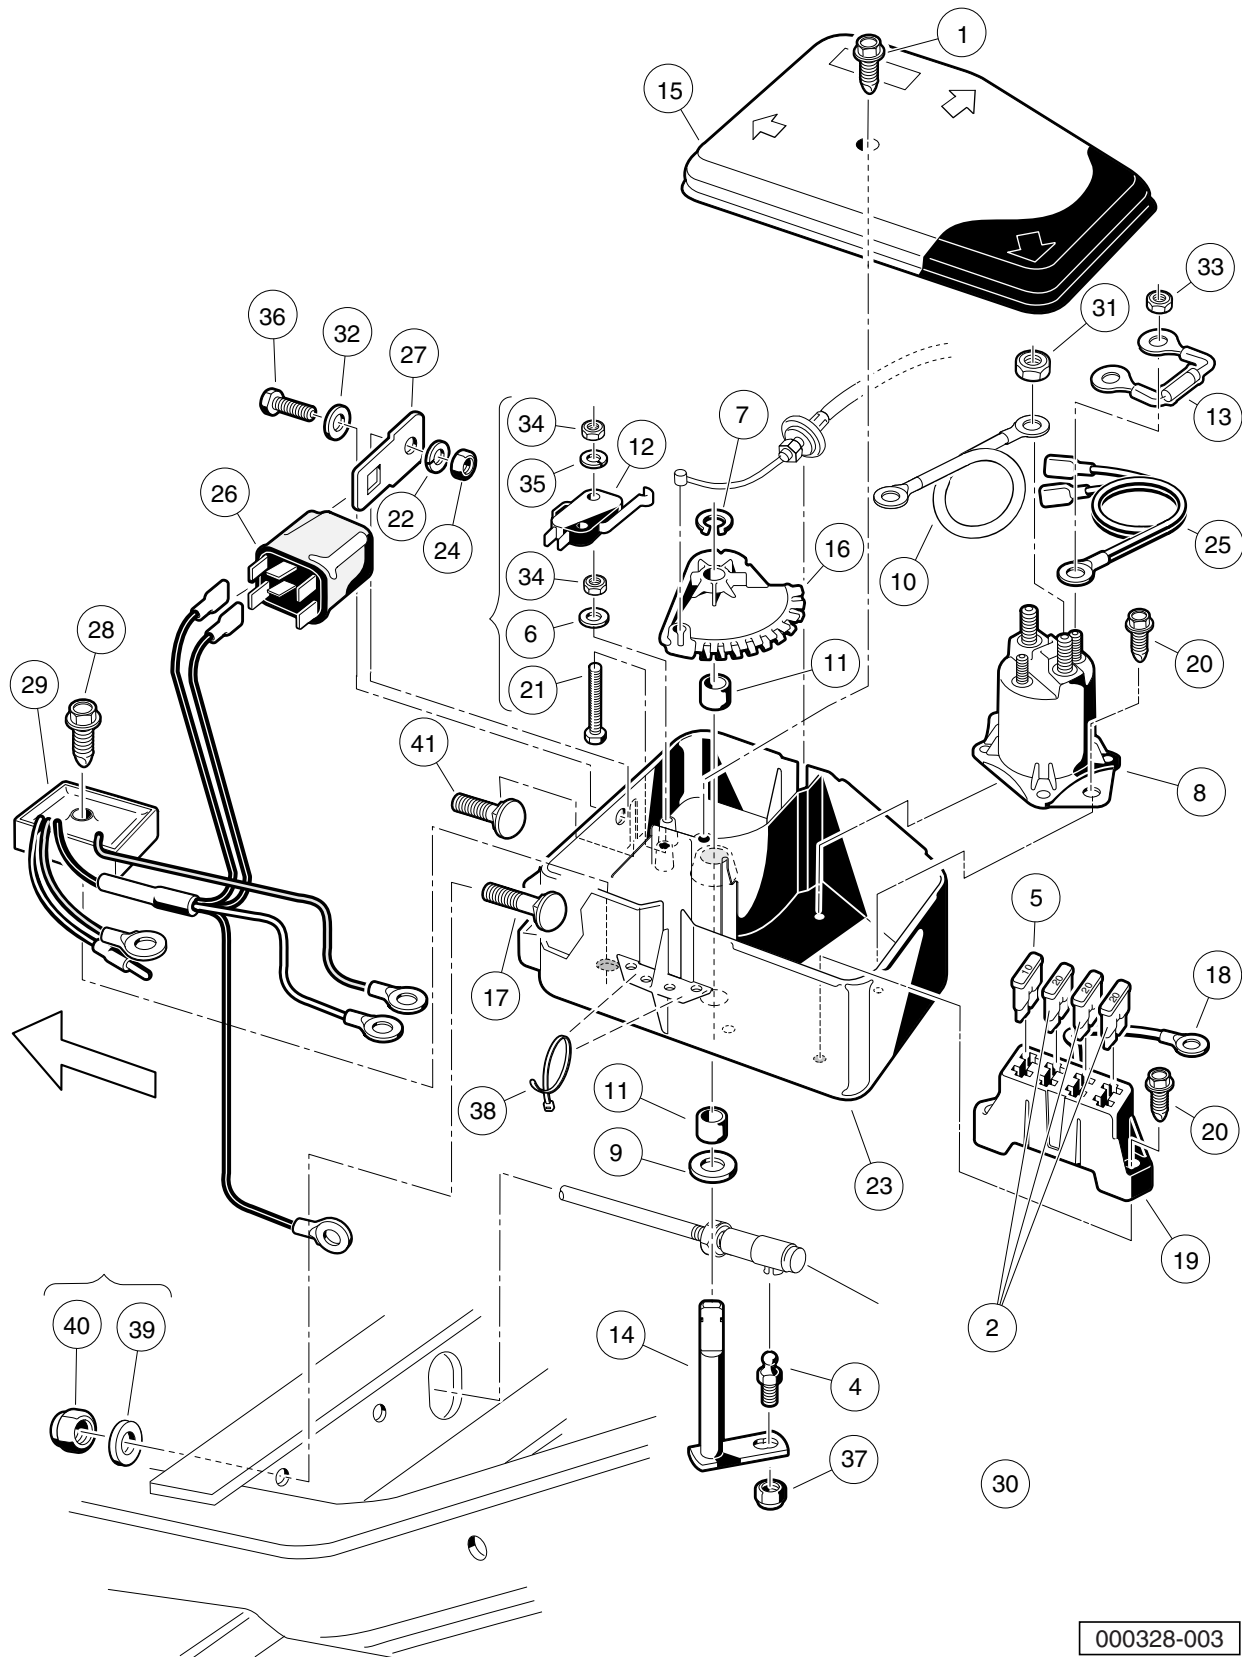

000328-003

ELECTRICAL COMPONENT BOX

ITEM	PART NO.	DESCRIPTION	QTY	6	G
		1 2 3 4			
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	1		
2	<u>1016423</u>	Fuse, 20-Amp	3		
3	N/A	Asm, Electrical Component Box (includes items 4 through 38)	1		
4	<u>1010954</u>	Stud, 1/4-28 X 0.560 Ball	1		
5	<u>1012295</u>	Fuse, 10-Amp	1		
6	<u>1012431</u>	Washer, #4 Flat	2		
7	<u>1013589</u>	Ring, 0.338" Internal Retaining	1		
8	<u>1013609</u>	Solenoid, 12-Volt	1		
9	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	1		
10	<u>1014119</u>	Wire Assembly #6 Red	1		
11	<u>1014145</u>	Bushing, Secondary Weight, Split	2		
12	<u>1014807</u>	Switch, Limit	1		
13	<u>1014948</u>	Diode	1		
14	<u>1015345</u>	Bell Crank and Shaft Assembly	1		
15	<u>1015372</u>	Cover, Electric Box	1		
16	<u>1015373</u>	Cam, Electric Box	1		
17	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	1		
18	<u>1015737</u>	Wire Assy, #10 Red	1		
19	<u>1015741</u>	Fuse Block	1		
20	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	4		
21	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2		
22	<u>1016</u>	Lockwasher, #10 Split	1		
23	<u>1016997</u>	Electrical Component Box	1		
24	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	1		
25	<u>1017006</u>	Wire Assembly Orange #18	1		
26	<u>1017239</u>	Relay	1		
27	<u>1017243</u>	Mounting Bracket, Relay	1		
28	<u>101856102</u>	Screw, 1/4-15 X 1.50 Hi-lo Hex	1		
29	N/A	Asm, Voltage Regulator Key Sta	1		
30	<u>103197301</u>	Asm, Wire Harness, Stretch, Gas	1		
31	<u>1242</u>	Nut, 5/16-18 Hex	2		
32	<u>183</u>	Washer, #10 Type A Flat	1		
33	<u>7893</u>	Nut, #10-32 Hex	2		
34	<u>8057</u>	Nut, #4-40 Hex Machine	4		
35	<u>8058</u>	Lockwasher, #4 Split	2		
36	<u>8450</u>	Screw, #10-24 X 0.50 Hex-Head	1		
37	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1		
38	<u>8990</u>	Tie Wrap, 8" Nylon	3		
39	<u>1241</u>	Washer, 5/16 Type A Flat	2		
40	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2		
41	<u>7818</u>	Bolt, Carriage, 5/16-18 X 1.5	1		

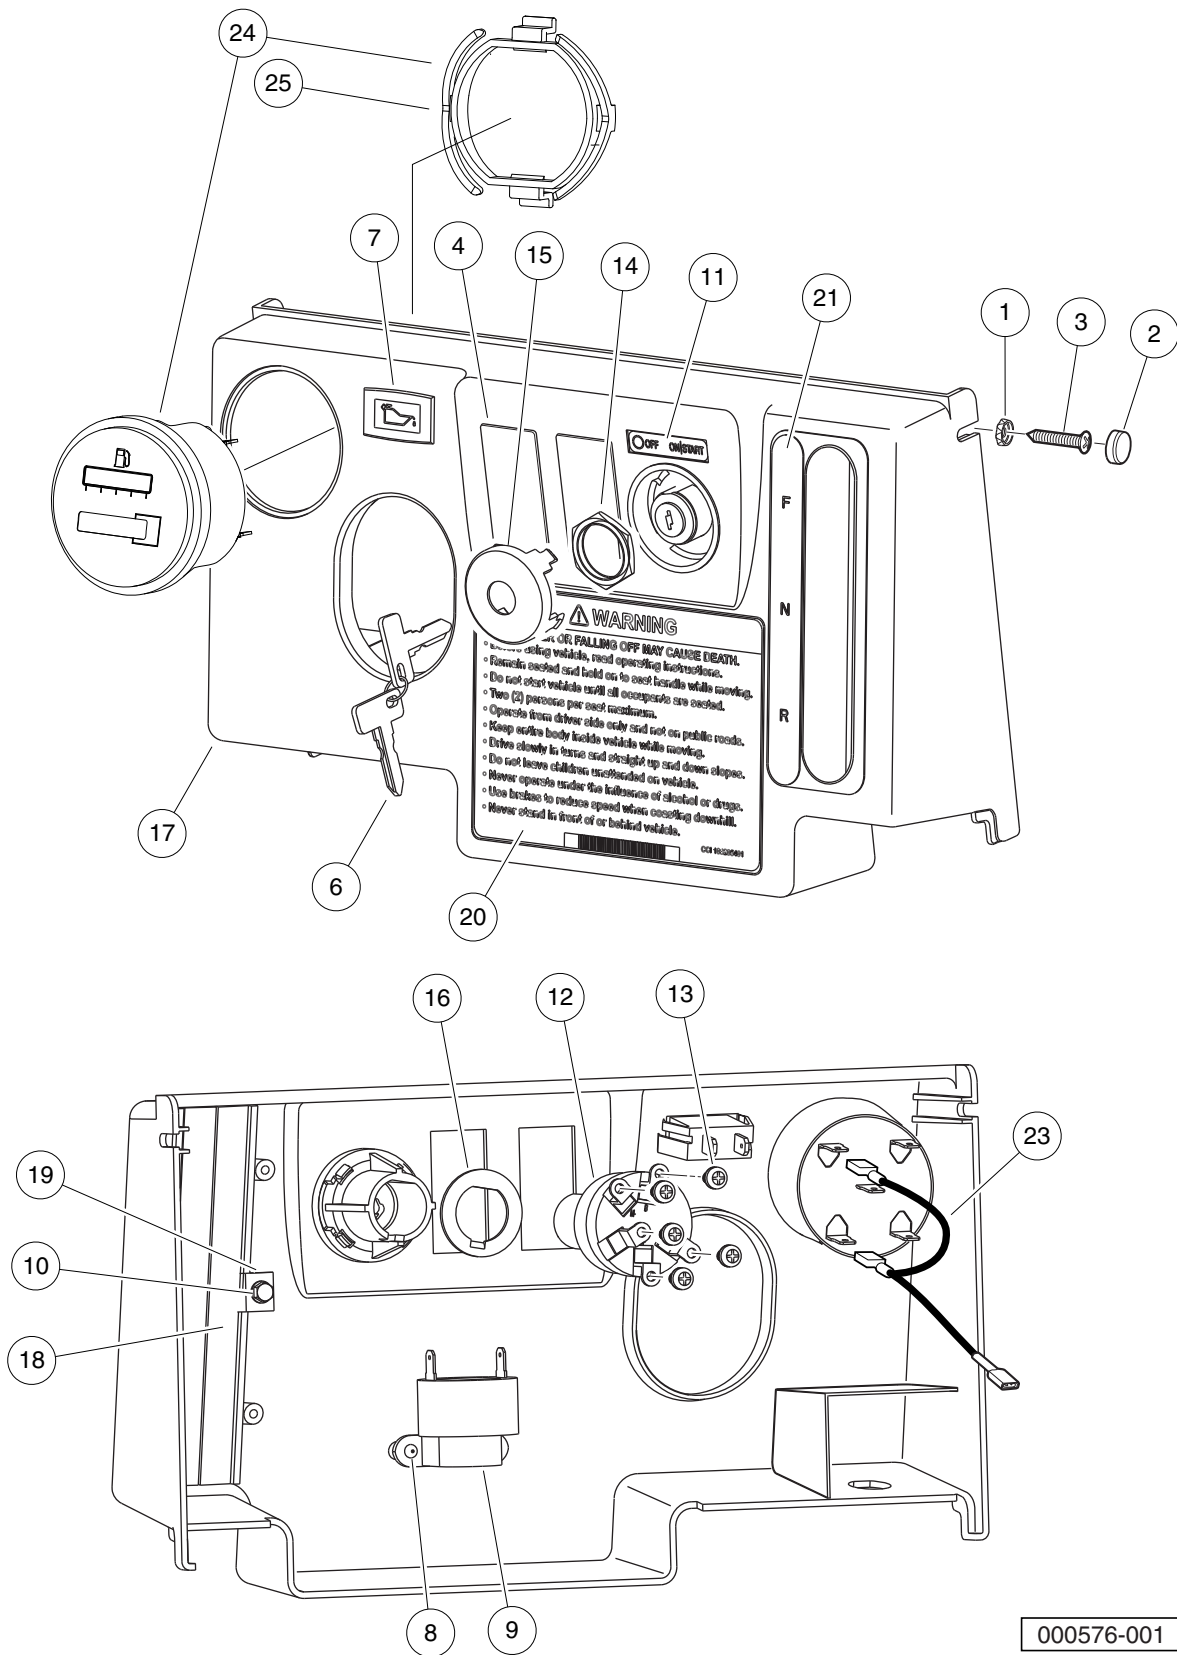


000576-001

INSTRUMENT PANEL AND ELECTRICAL COMPONENTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011382	Washer, #10 Pan-Head Screw	2
2	<u>1013494</u>	Cover, Screw Head	2
3	<u>1015528</u>	Screw, #10 x 1-1/4 Phillips Head	2
4	<u>103180101</u>	Cover, Hole, Switch, Rocker	2
5	N/A	Asm, Dash, Gas, Key Start (Instrument Panel) (includes items 6 through 22)	1
6	<u>1012505</u>	Keys (set of 2)	1
7	<u>1016630</u>	Light, Oil	1
8	<u>1016849</u>	Screw, #4-24 X 0.33 Pan-Head Machine	2
9	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
10	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	2
11	<u>101825102</u>	Decal, Off/On/Start	1
12	<u>101826401</u>	Key Switch, 12-Volt, Off/On/Start	1
13	<u>101830601</u>	Screw and Washer Assembly	5
14	<u>101830701</u>	Nut, Key Switch	1
15	<u>101834502</u>	Cap, Black Key Switch	1
16	<u>101851101</u>	Washer, Key Switch	1
17	<u>102977001</u>	Panel, Dash, Center, Gas (Instrument Panel)	1
18	<u>103199001</u>	Brush, Closeout, FNR	2
19	<u>103199101</u>	Washer, Retaining, Brush, FNR	2
20	<u>103205401</u>	Decal, Warning, Rollover, Utl	1
21	<u>103210201</u>	Decal, Forward/Reverse, Gas	1
22	<u>103390801</u>	Kit, F-h Replmnt Utl Pre2007 (includes items 23 through 26)	1
23	<u>103348501</u>	Asm Wire Meter F-h Jumper	1
24	<u>103348601</u>	Gauge, Fuel-hour,sep Gnd,utl (includes item 25)	1
25	<u>103348201</u>	Clip, Meter, Round	1
26	N/A	Instr, F-h Replmnt Pre2007	1


6
G

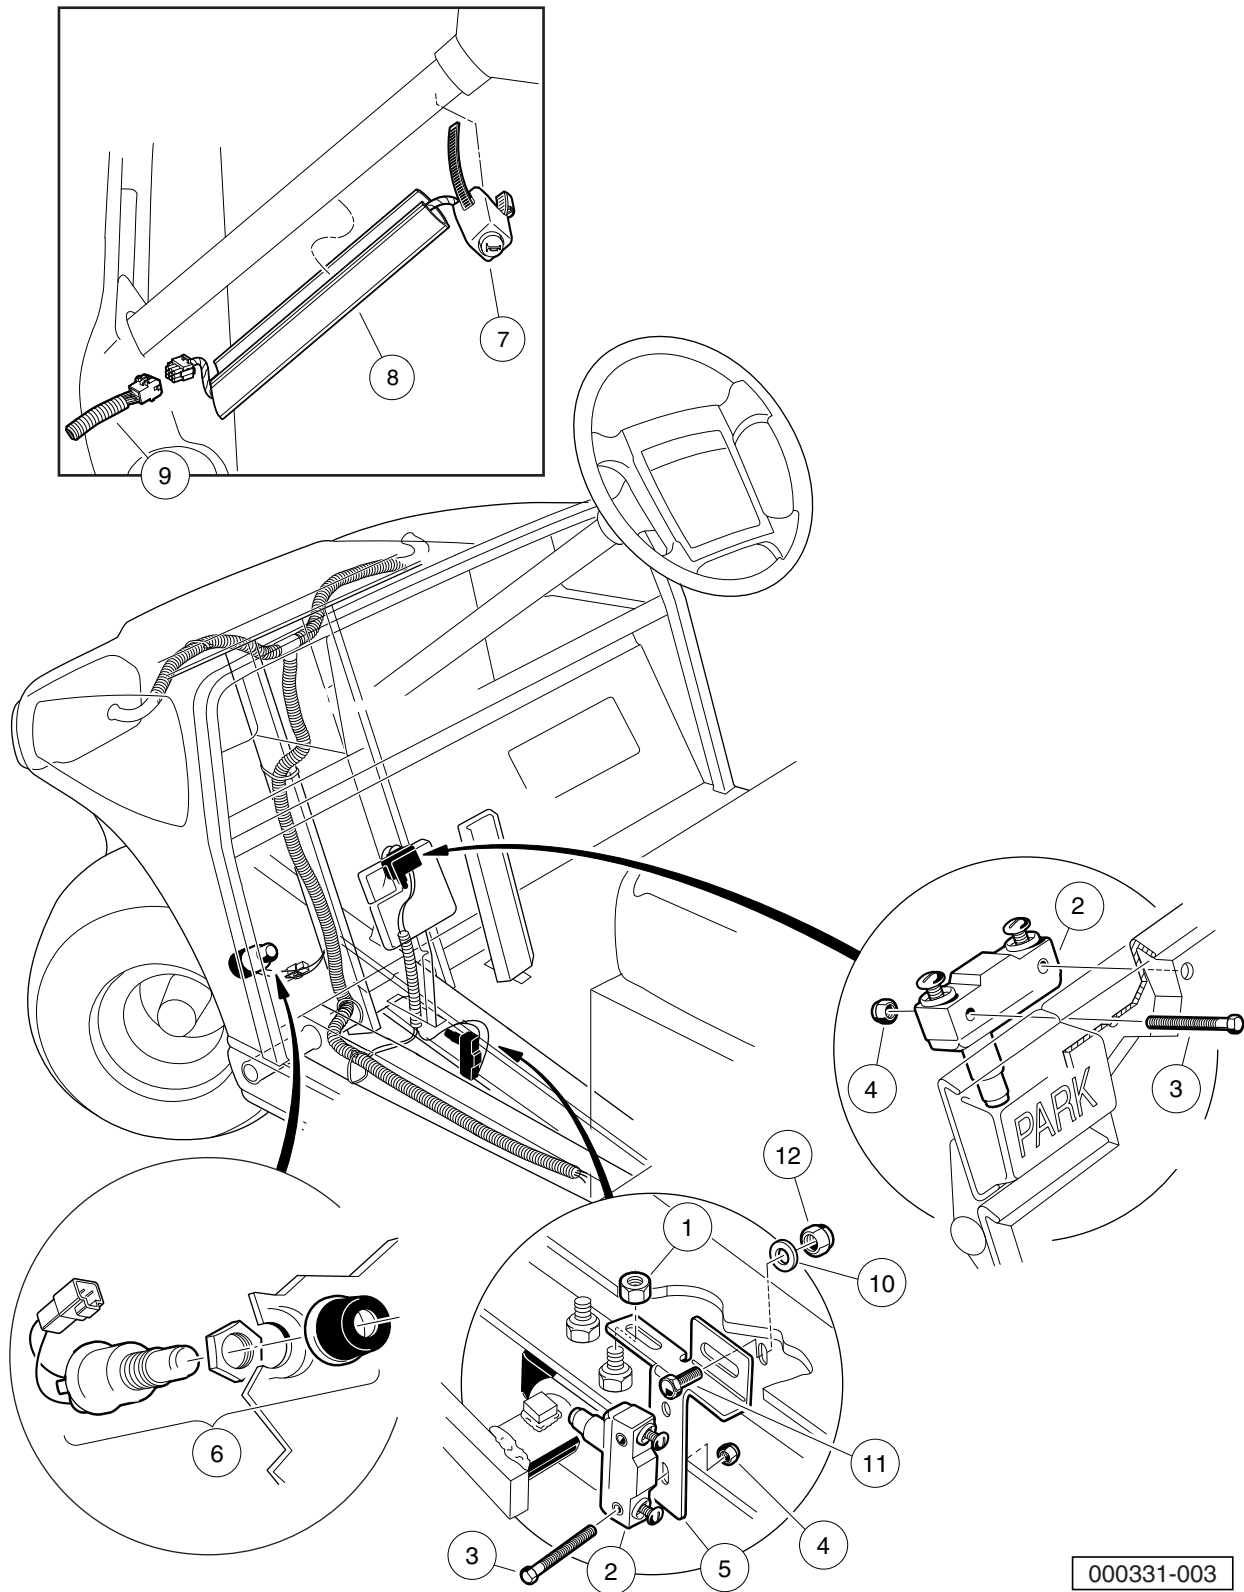

000331-003

HORN AND BRAKE SWITCHES

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	<u>1011280</u>	Locknut, 5/16-18	1	
2	<u>1011439</u>	Switch, Limit	2	
3	<u>1011557</u>	Screw, #6-32 X 1.00 Hex-Head Machine	4	
4	<u>101932201</u>	Locknut, #6-32 Nylon	4	
5	<u>101957101</u>	Bracket, Brake Light Switch	1	
6	<u>101969701</u>	Horn Button and Wire Assembly	1	
7	<u>102517601</u>	Subasm, Horn Button Harness	1	
8	<u>102529201</u>	Wire Cover, Steering Column	1	
9	<u>103618101</u>	Harness, Jumper, Horn	1	
10	<u>1241</u>	Washer, 5/16 Type A Flat	1	
11	<u>7173</u>	Screw, 5/16-18 X 0.75 Hex-Head Cap	1	
12	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	

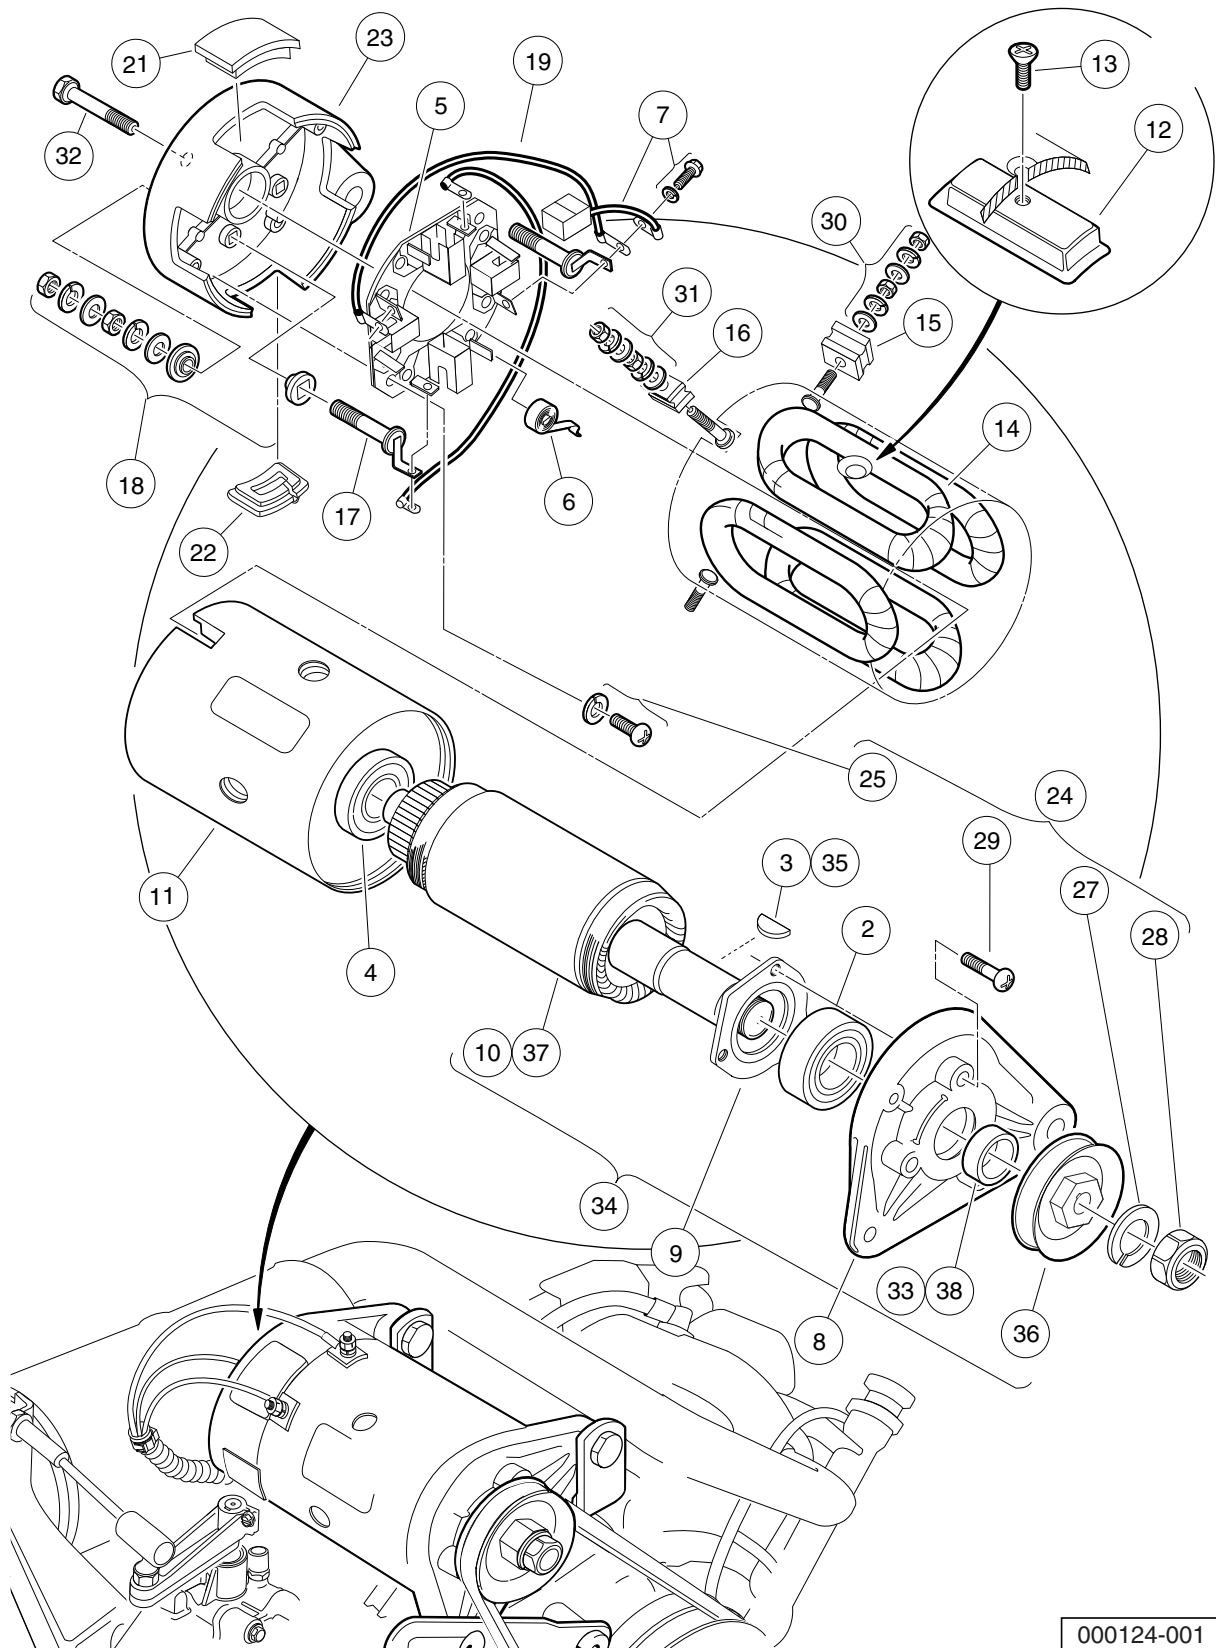


000124-001

STARTER/GENERATOR ASSEMBLY MODEL G425419 – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101833701</u>	Starter/Generator (cw) (includes items 2 through 33)	1
2	<u>1013001</u>	Bearing, Output Shaft Ball	1
3	<u>1013003</u>	Key, Starter/Generator	1
4	<u>1013005</u>	Bearing, Ball	1
5	<u>101301102</u>	Brush Holder Assembly (cw) (includes item 6)	1
6	<u>101878101</u>	Brush Spring Set	4
7	<u>101869302</u>	Brush and Screw Set (cw)	1
8	<u>101874901</u>	Front Bracket	1
9	<u>101875001</u>	Retainer	1
10	<u>101875101</u>	Armature	1
11	<u>101875201</u>	Field Coil Housing	1
12	<u>101875301</u>	Pole Set	1
13	<u>101875401</u>	Screw Set	1
14	<u>101875501</u>	Field Stator Coil Assembly	1
15	<u>101875601</u>	F Insulator Set	2
16	<u>101875701</u>	DF Insulator	1
17	<u>101875802</u>	A Connector (cw)	1
18	<u>101876001</u>	Screw and Mold Assembly	2
19	<u>101876202</u>	Brush Connector Assembly (cw)	2
20	<u>101876301</u>	Cover Set (includes items 21 and 22)	1
21	<u>1012991</u>	Brush Inspection Port Cover	3
22	<u>1017653</u>	Brush Port Cover w/Drain	1
23	<u>101876402</u>	Rear Bracket (cw)	1
24	<u>101876501</u>	Nut and Screw Set (includes items 25 through 29)	1
25	<u>101896501</u>	Brush Holder Asm Screw	2
26	N/A	Washer, M5 Flat	1
27	N/A	Washer, M14 Lock	1
28	N/A	Nut, Hex, M14 x 2	1
29	N/A	Screw, M5 x 0.8 x 18mm	3
30	<u>101877601</u>	Nut and Washer Set	2
31	<u>101877701</u>	Nut and Washer Set	1
32	<u>101879001</u>	Through Bolt Set	2
33	<u>101939901</u>	Spacer	1
34	<u>101875102</u>	Armature Asm Conversion Kit (includes items 35 through 38)	1
35	<u>1013003</u>	Key, Starter/Generator	1
36	<u>1014289</u>	Pulley, Starter/Generator	1
37	<u>101875101</u>	Armature	1
38	<u>101939901</u>	Spacer	1
		Note: Item 36 will ONLY fit Model G425419 Starter/Generator.	

6


G

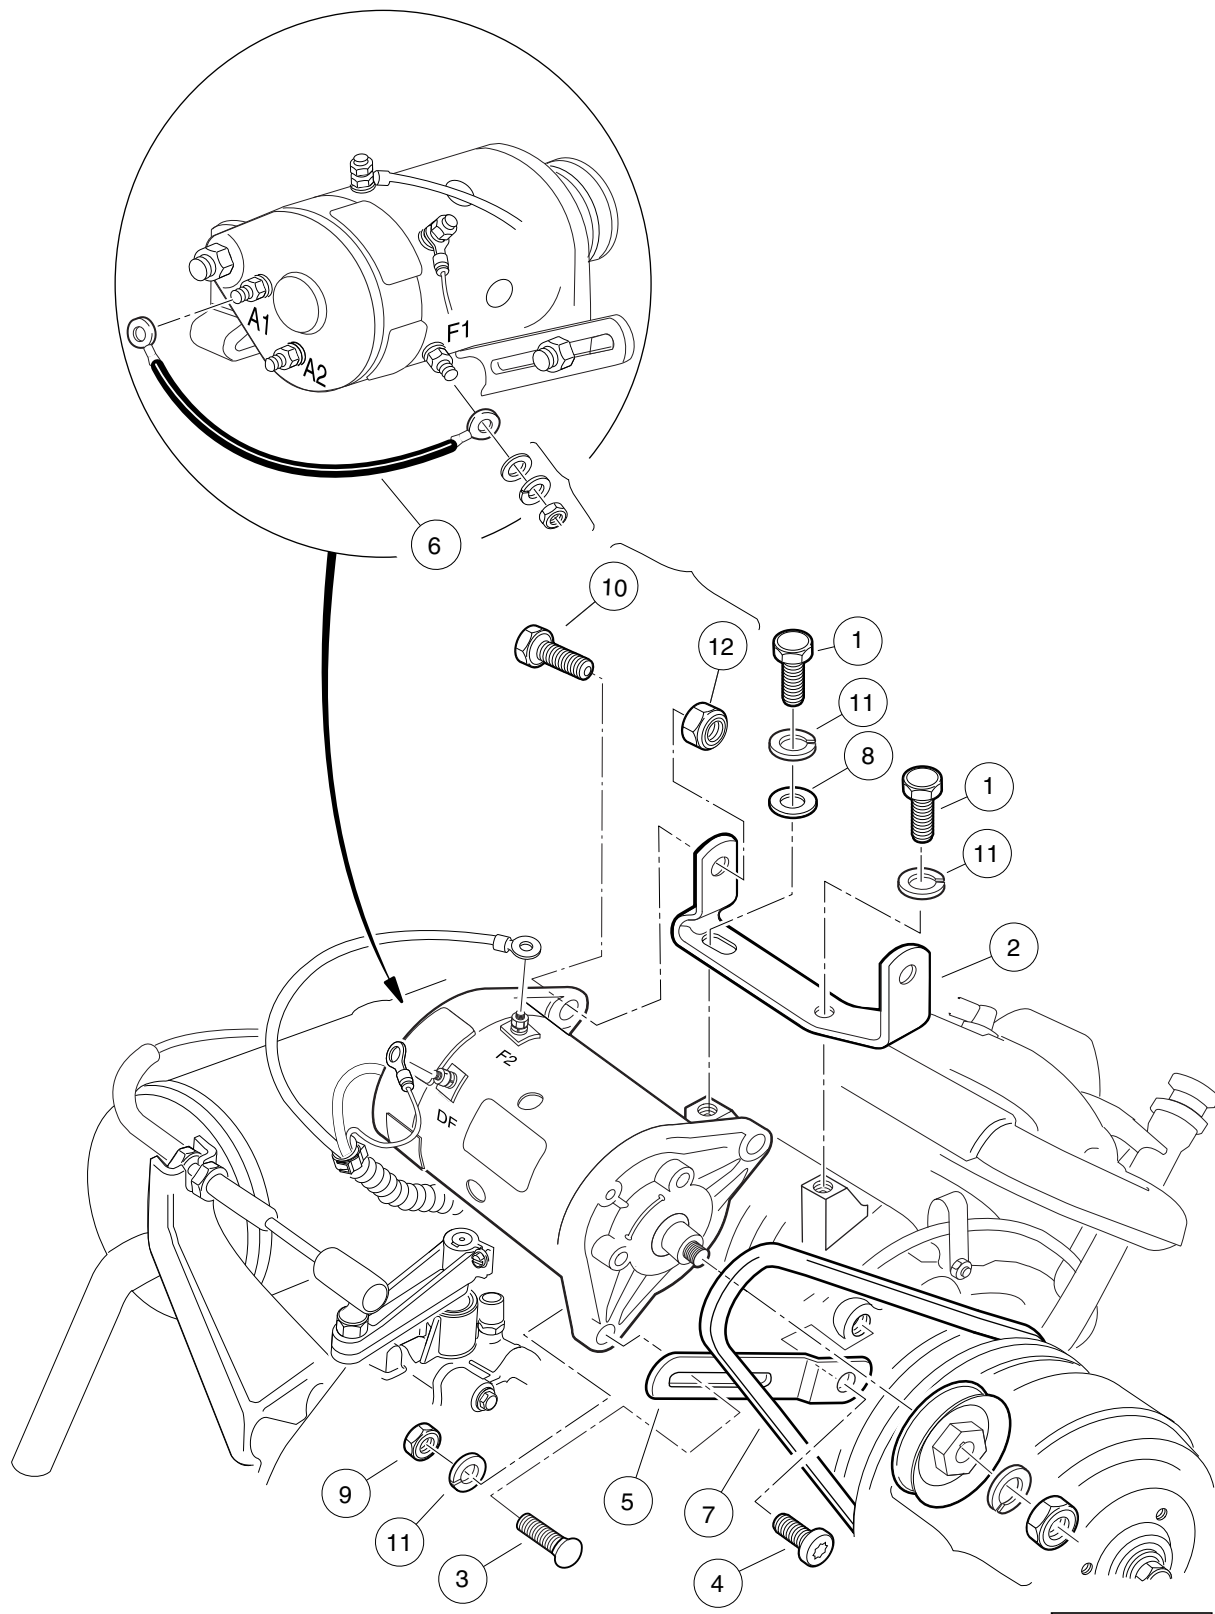

000239-001

FE350 STARTER/GENERATOR MOUNTING – GASOLINE VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY	6	G
		1 2 3 4			
1	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	2		
2	<u>101524002</u>	Bracket, Starter/Generator Mounting	1		
3	<u>1015932</u>	Bolt, Carriage, 5/16-18	1		
4	<u>1016074</u>	Screw, M8-1.25 X 18mm Torx	1		
5	<u>1016883</u>	Bracket, Starter/Generator Adjustment	1		
6	<u>101837301</u>	Wire Assy, #6 Green	1		
7	<u>101916701</u>	V-Belt	1		
8	<u>1241</u>	Washer, 5/16 Type A Flat	1		
9	<u>1242</u>	Nut, 5/16-18 Hex	1		
10	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	2		
11	<u>7174</u>	Lockwasher, 5/16 Split	3		
12	<u>8754</u>	Locknut, 3/8-16 Hex	2		

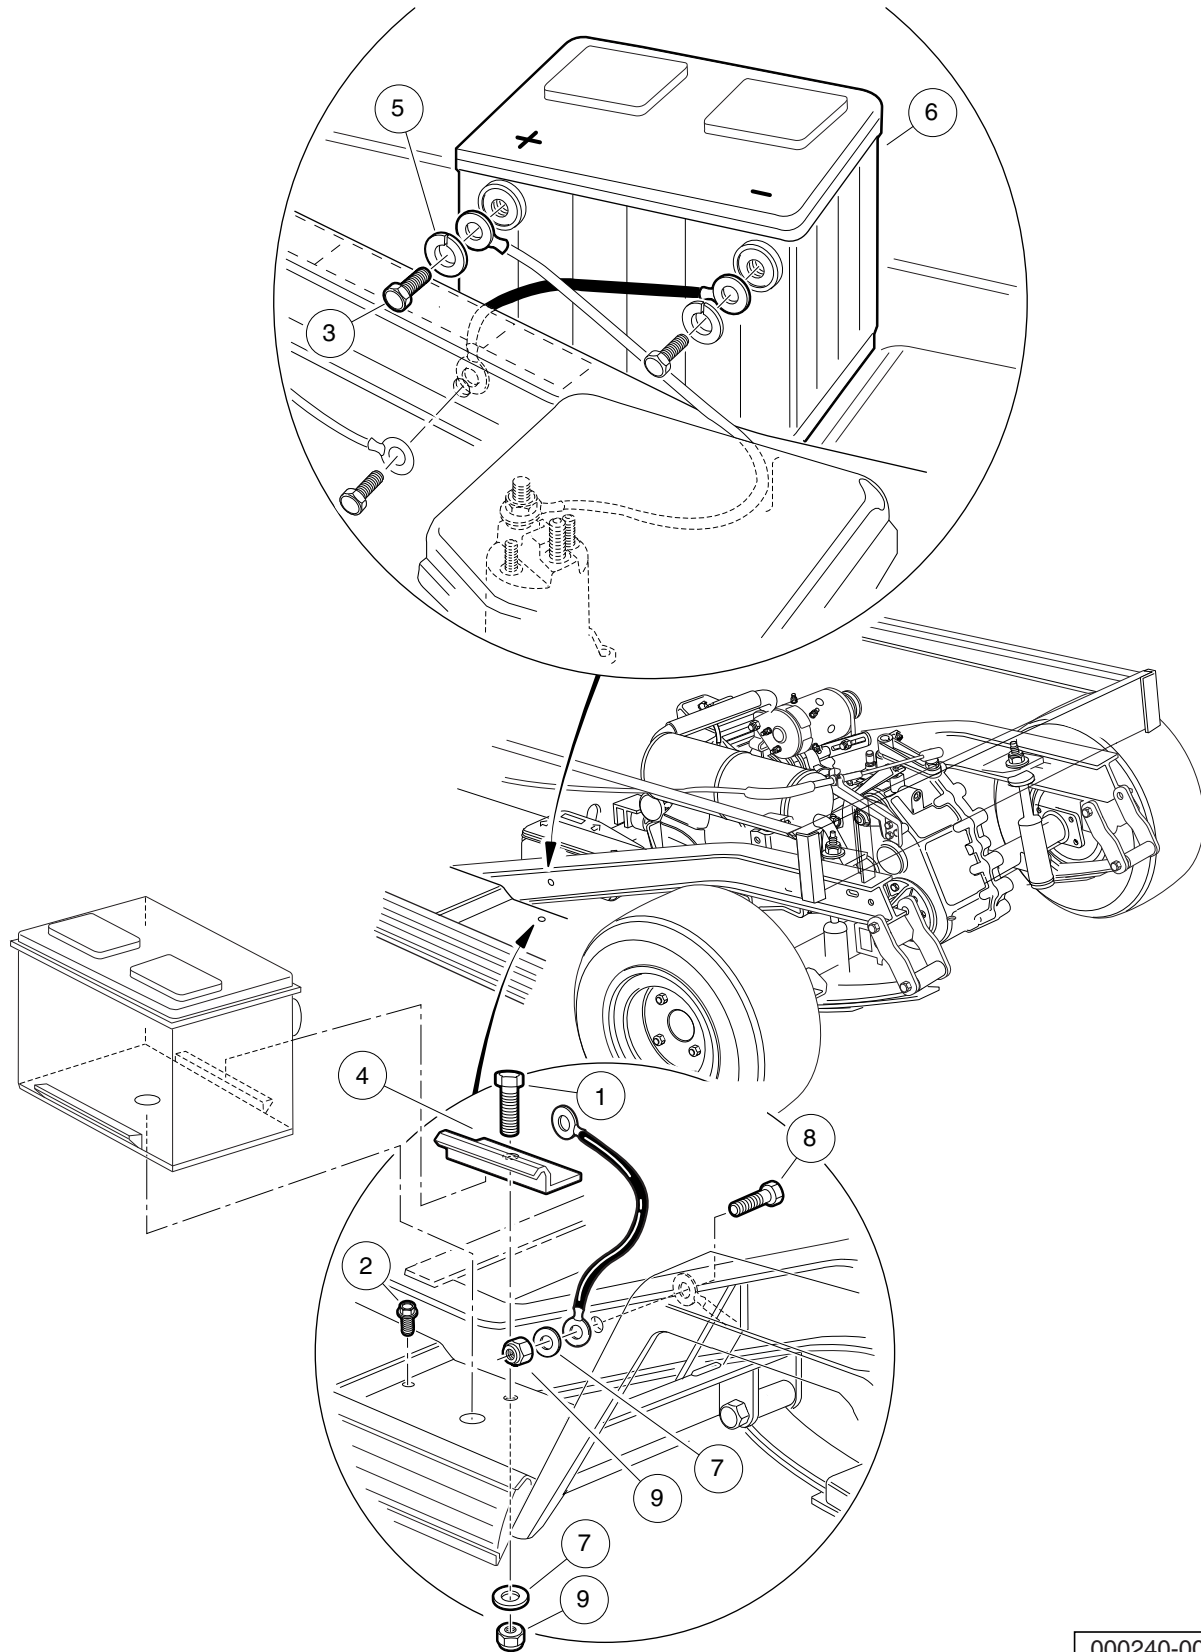

000240-001

BATTERY – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1	
2	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	1	
3	<u>1014375</u>	Screw, 3/8-16 X 0.50 Stainless Steel Hex-Head	2	
4	<u>101898001</u>	Clamp, Battery	1	
5	<u>102355301</u>	Lockwasher, #10 Split Ss	2	
6	N/A	Battery, Start, 12v	1	
7	<u>1241</u>	Washer, 5/16 Type A Flat	2	
8	<u>7173</u>	Screw, 5/16-18 X 0.75 Hex-Head Cap	1	
9	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	

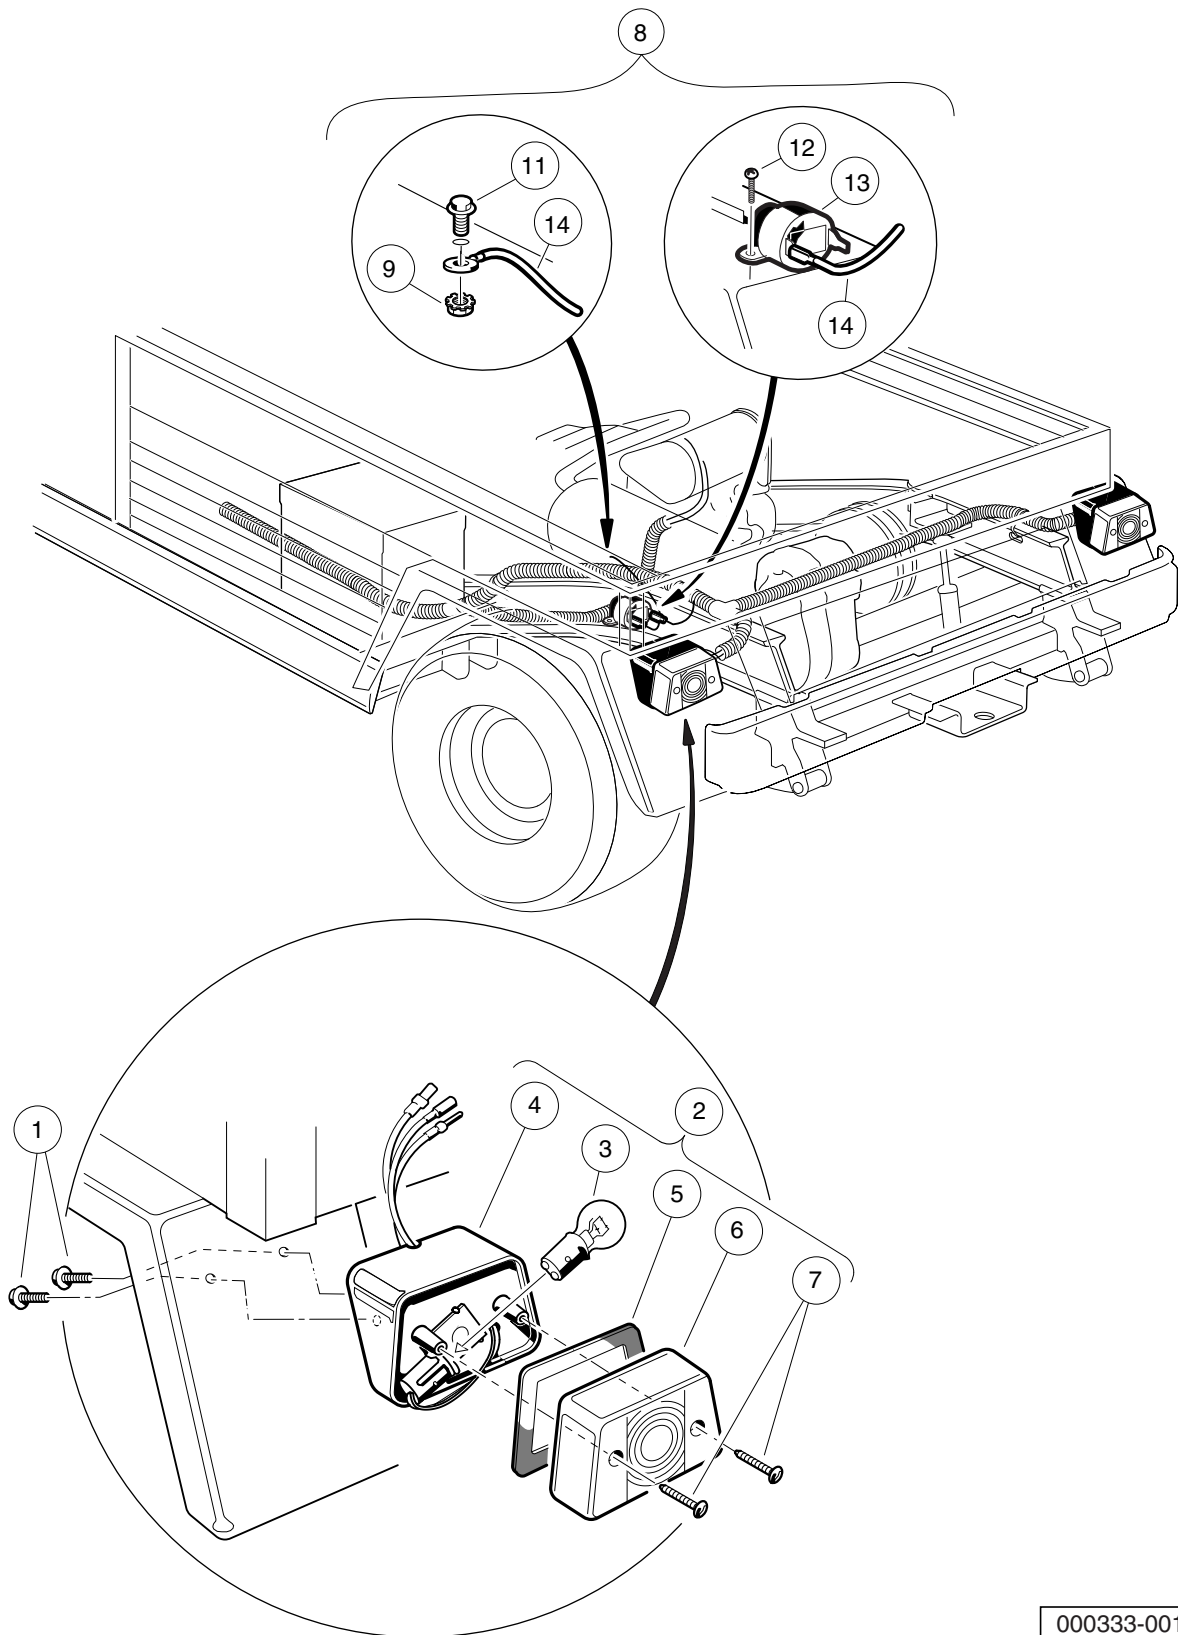


000333-001

ELECTRICAL COMPONENTS, REAR BODY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	4
2	<u>1016717</u>	Light Assembly, Stop/Taillight (includes items 3 through 7)	2
3	<u>1011582</u>	Taillight Bulb	1
4	N/A	Housing, Taillight	1
5	N/A	Gasket, Taillight	1
6	N/A	Lens, Taillight	1
7	N/A	Screw, Taillight Lens	2
8	<u>1016859</u>	Kit, Reverse Buzzer (includes items 9 through 17)	1
9	<u>1011229</u>	Locknut, #6-32 Whiz	1
10	<u>1012431</u>	Washer, #4 Flat	2
11	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
12	<u>1016849</u>	Screw, #4-24 X 0.33 Pan-Head Machine	2
13	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
14	<u>1016857</u>	Wire Assembly Black #18	1
15	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2
16	<u>8057</u>	Nut, #4-40 Hex Machine	2
17	<u>8058</u>	Lockwasher, #4 Split	2
Note: Items 10, and 15 through 17 are included in the reverse buzzer kit, but are not used in this application.			

6
G

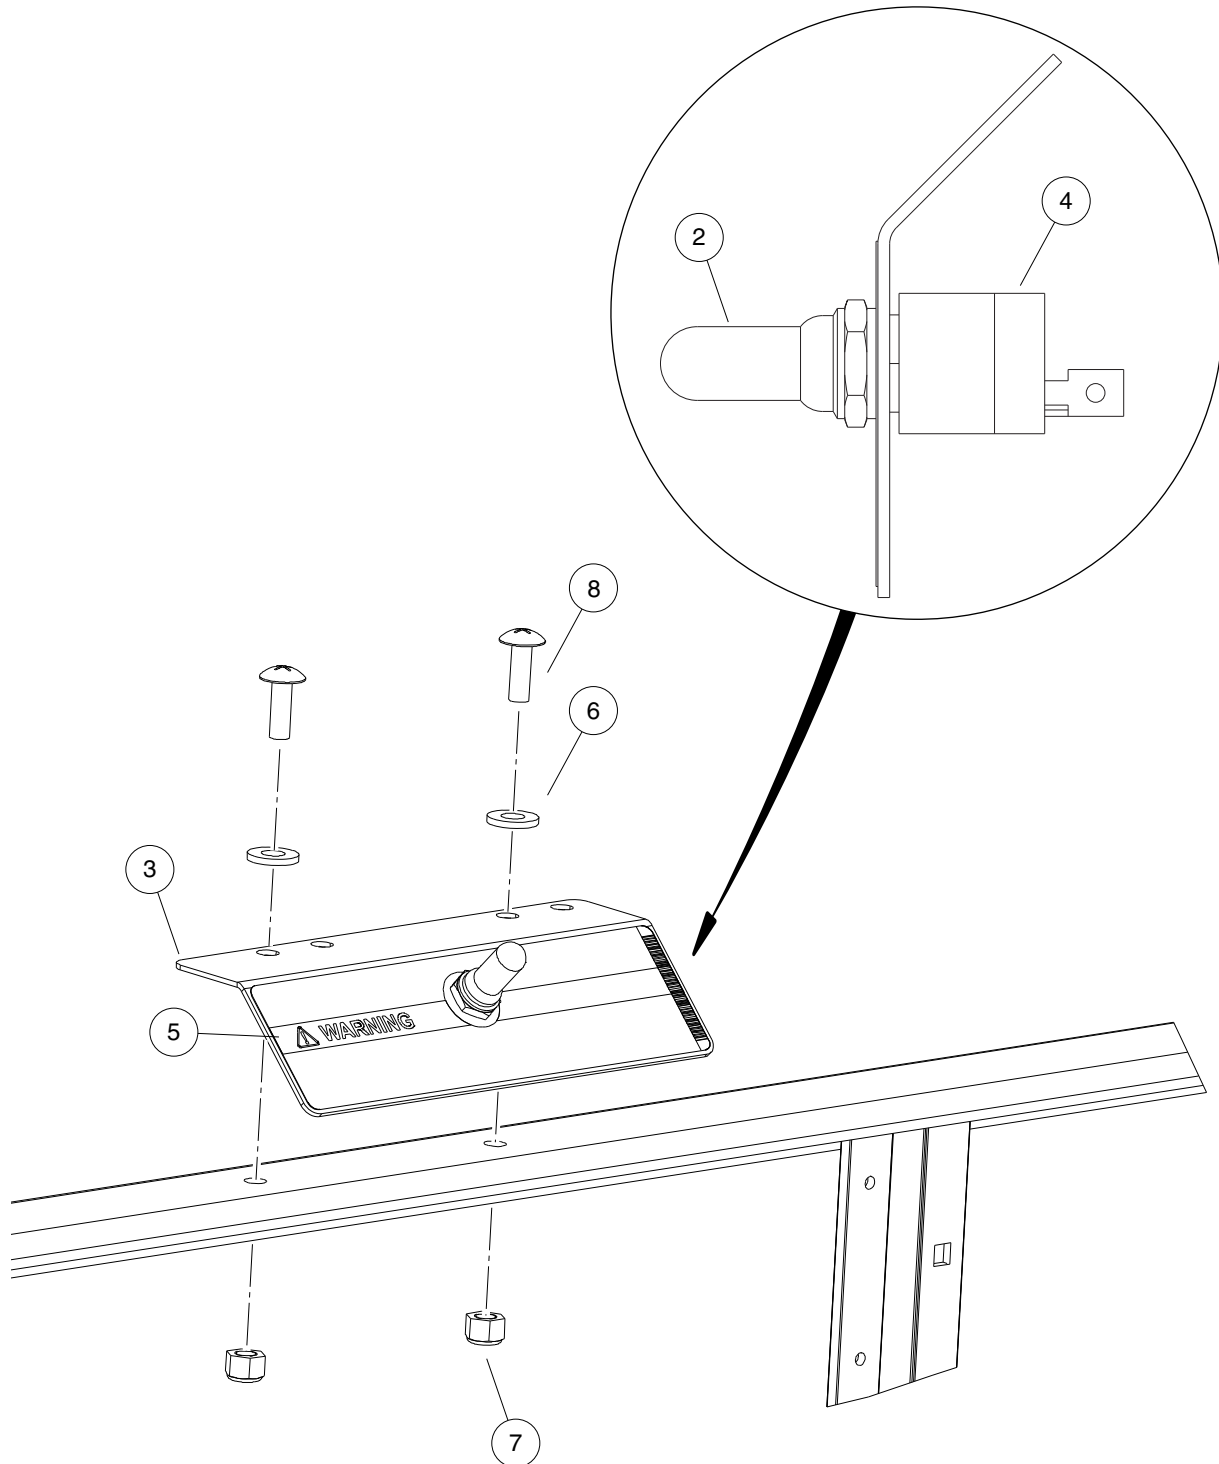

000755-001



OPERATION AND MAINTENANCE SWITCH

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	N/A	Switch, Operation/Maintenance (includes items 2 through 5)	1	
2	<u>101908401</u>	Boot, Switch	1	
3	<u>101922501</u>	Bracket, Tow/Run Switch Mounting	1	
4	<u>103198401</u>	Switch, Toggle, SPDT	1	
5	<u>103205501</u>	Decal, Run/Service Switch	1	
6	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2	
7	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2	
8	<u>8248</u>	Screw, 1/4-20 X 0.75 Truss-Head Machine	2	

6

G

FE350 ENGINE WITH ACR

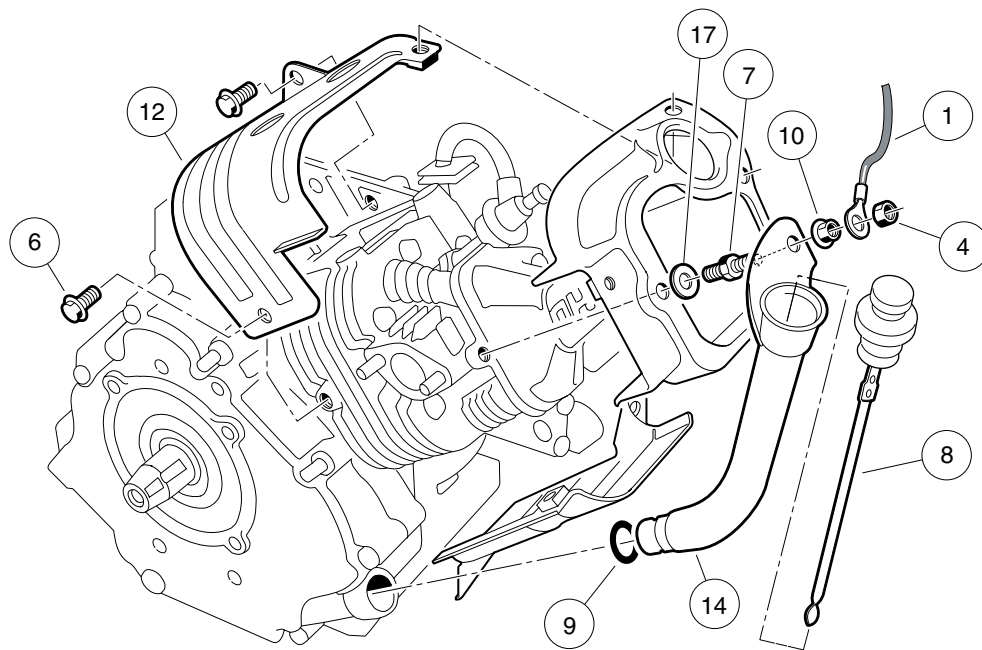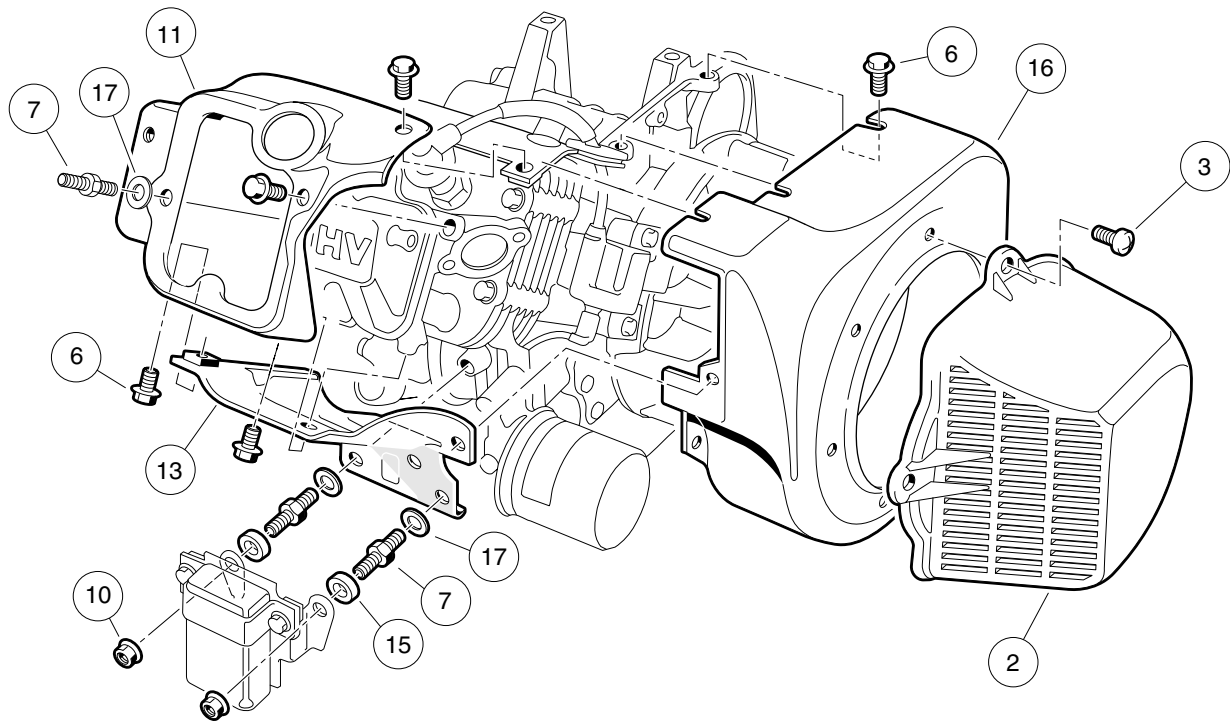


000201-001

FE350 ENGINE WITH ACR (AUTOMATIC COMPRESSION RELEASE) – SHROUDS AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015332</u>	Wire Assembly, #10, Uninsulated	1
2	<u>1015649</u>	Shroud, Fan	1
3	<u>1015969</u>	Screw, M6-1.00 X 10mm Pan Hd	4
4	<u>101887601</u>	Locknut, M6-1.00 Nylon Insert	1
5	<u>101953801</u>	Engine, FE350 (cw) with ACR * (includes items 6 through 17)	1
6	<u>1016456</u>	Bolt, Flange Head, M6 x 1 x 12 mm	14
7	<u>1016507</u>	Bolt, Two-Ended	3
8	<u>1016531</u>	Dipstick	1
9	<u>1016539</u>	O-Ring	1
10	<u>1016547</u>	Nut, M6 Flange	3
11	<u>1017474</u>	Shroud, Engine	1
12	<u>1017475</u>	Shroud, Engine	1
13	<u>1017476</u>	Shroud, Engine	1
14	<u>1017486</u>	Tube, Oil Filler	1
15	<u>1017500</u>	Spacer 6.50 X 12 X 5.5	2
16	<u>101916101</u>	Housing, FE350 Fan	1
17	N/A	Washer, 6mm Flat	3
* Note: FE350 engine component listings span several pages.			

7

G

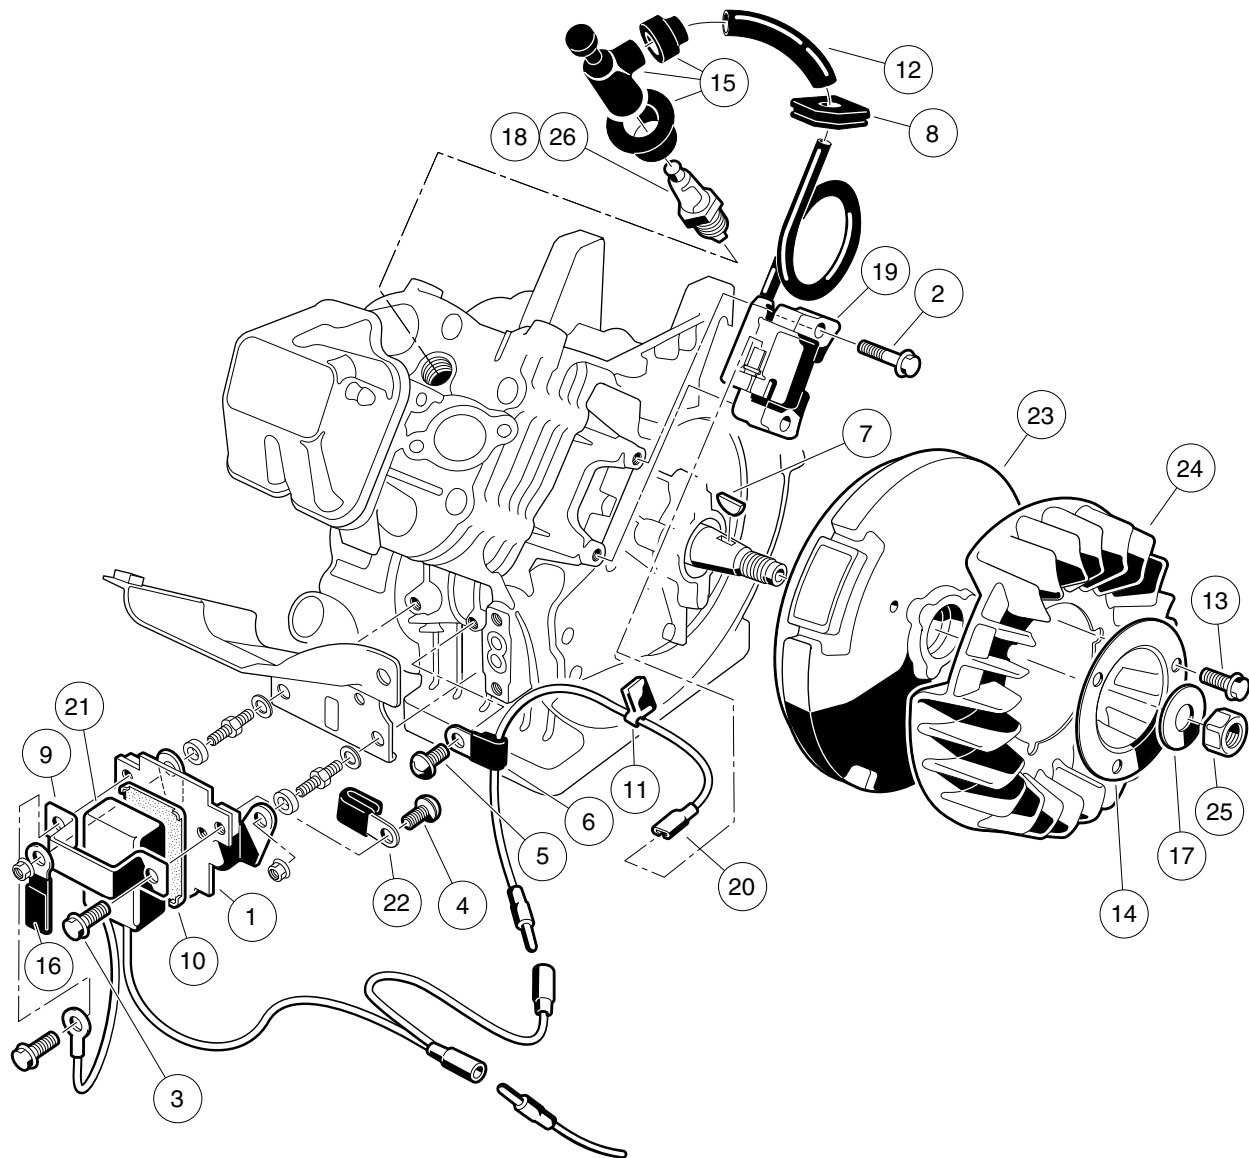


000202-001

AS11 FE350 ENGINE – IGNITION COMPONENTS AND FLYWHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016445	Bracket, RPM Limiter	1
2	<u>1016455</u>	Bolt, Flange Head	2
3	1016456	Bolt, Flange Head, M6 x 1 x 12 mm	2
4	<u>1016497</u>	Screw, Pan WP Cross	1
5	<u>1016544</u>	Screw	1
6	<u>1016561</u>	Clamp	1
7	<u>1016562</u>	Key	1
8	<u>1016578</u>	Ignition, Grommet	1
9	<u>1016579</u>	Band, RPM Limiter Mount	1
10	1016586	Damper, RPM Limiter	1
11	<u>1016587</u>	Clamp	1
12	<u>1016588</u>	Tube, 7mm X 10mm X 70mm	1
13	<u>1017448</u>	Bolt, Flanged	3
14	<u>1017455</u>	Plate, Flywheel Fan	1
15	<u>1017463</u>	Cap Asm Plug	1
16	<u>1017468</u>	Clamp	1
17	<u>1017490</u>	Washer, Flat	1
18	<u>101881101</u>	Spark Plug, OHV (Autolite)	1
19	<u>101909201</u>	Coil, Ignition	1
20	<u>101909301</u>	Lead Wire Assy	1
21	101909401	Limiter, RPM	1
22	101909501	Clamp, Steel	1
23	<u>101916201</u>	Flywheel	1
24	<u>101916301</u>	Fan (cw)	1
25	N/A	Nut, Hex, 18 mm Fine	1
26	<u>AM10724</u>	Spark Plug, OHV (NGK)	1


7
G

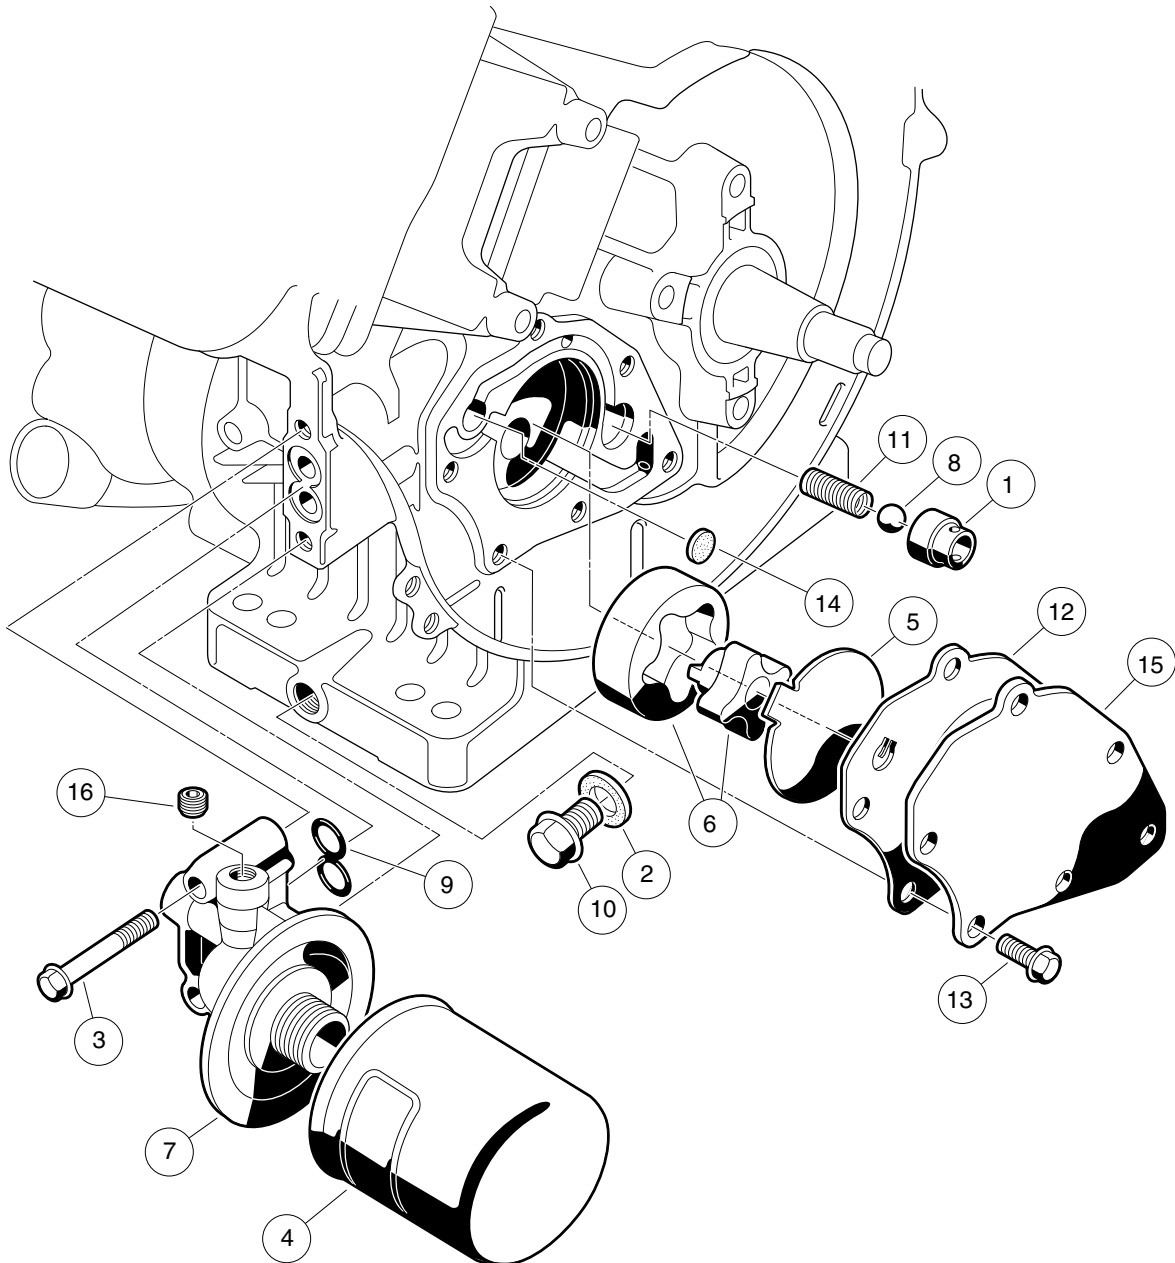

000203-001

FE350 ENGINE – OIL CIRCULATION

ITEM	PART NO.	DESCRIPTION	QTY	7	G
		1 2 3 4			
1	1016429	Seat, Value Oil Press Relief	1		
2	<u>1016432</u>	Gasket, Drain Plug	1		
3	<u>1016457</u>	Bolt, Flange Head	2		
4	<u>1016467</u>	Filter, Oil	1		
5	<u>1016473</u>	Plate, Oil Pump	1		
6	<u>101648203</u>	Oil Pump And Rotor	1		
7	<u>1016502</u>	Bracket, Oil Filter Mount	1		
8	<u>1016537</u>	Ball, Steel, Press, Relief	1		
9	<u>1016570</u>	O-Ring	1		
10	1016576	Plug, Drain	1		
11	<u>1016581</u>	Spring	1		
12	<u>1017442</u>	Gasket	1		
13	<u>1017456</u>	Bolt, Flanged	6		
14	<u>1017458</u>	Filter	1		
15	<u>1017460</u>	Cover, Pump	1		
16	<u>1017507</u>	Plug	2		

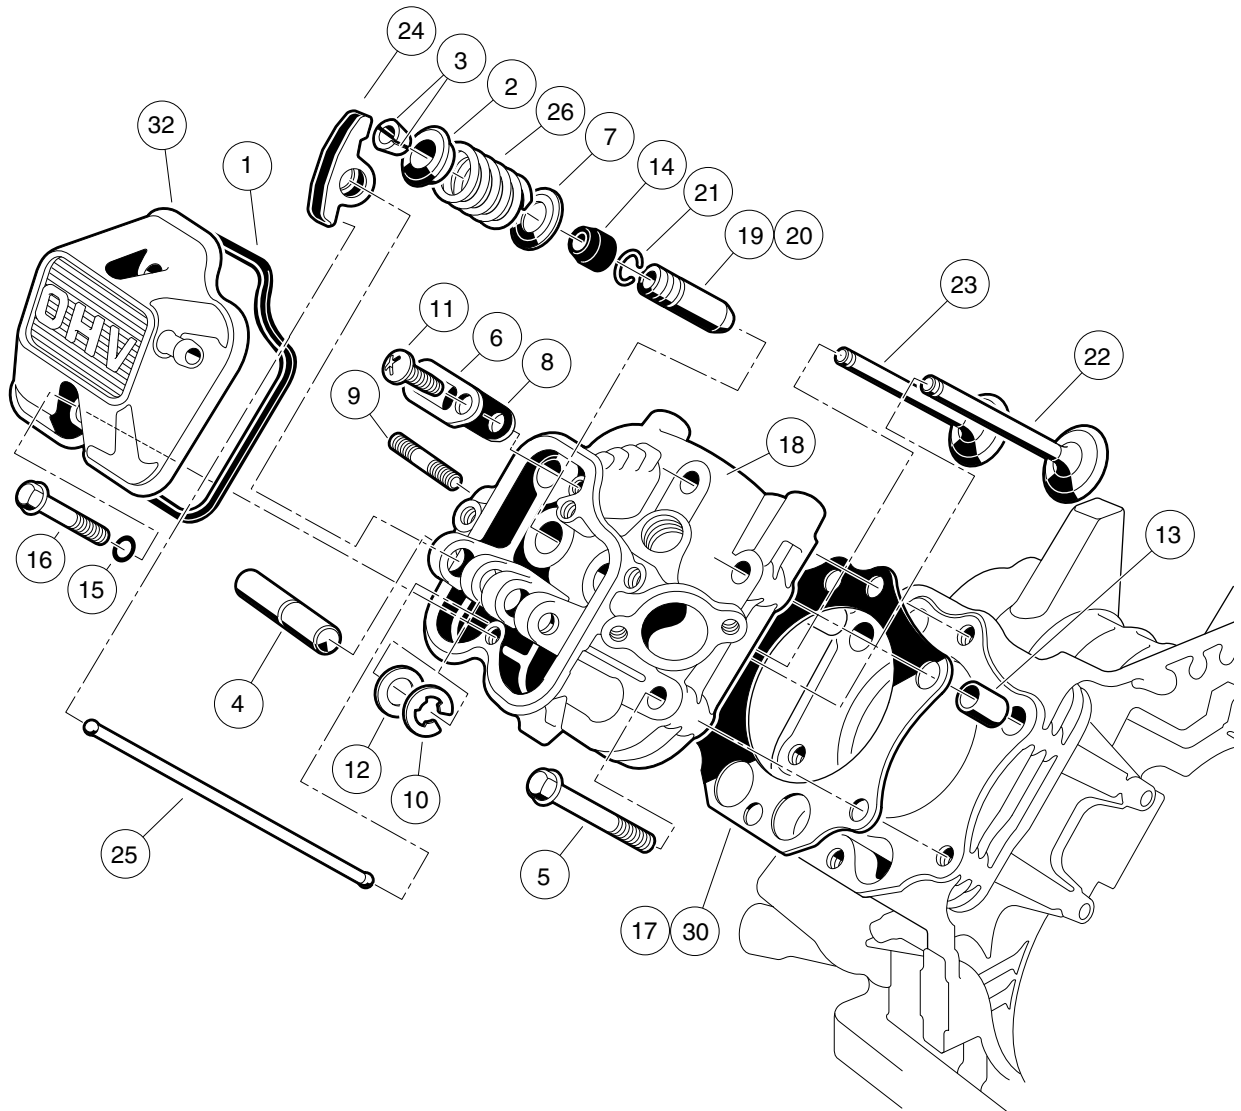


000204-001

AS11 FE350 ENGINE – CYLINDER HEAD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016436</u>	Gasket, Rocker Case	1
2	<u>1016449</u>	Retainer, Valve Spring	2
3	<u>1016450</u>	Collet	4
4	<u>1016452</u>	Shaft, Rocker	1
5	<u>1016458</u>	Bolt, Flange Head, M8 x 1.25 x 45 mm	6
6	<u>1016474</u>	Plate	1
7	<u>1016479</u>	Seat, Spring	2
8	<u>1016483</u>	Valve	1
9	<u>1016489</u>	Stud, Two-Ended, M8-1.25	2
10	<u>1016517</u>	Circlip, Type-E	1
11	<u>1016544</u>	Screw	1
12	<u>1016549</u>	Washer, 12.1x19x1.8	1
13	<u>1016563</u>	Pin	2
14	<u>1016566</u>	Seal, Oil	2
15	<u>1016569</u>	O-Ring	2
16	<u>1016583</u>	Bolt, 6x35	2
17	<u>1017434</u>	Gasket, Head	1
18	<u>1017435</u>	Assembly, Cylinder Head, FE350 (includes items 19 through 21)	1
19	<u>1016518</u>	Guide, Valve, Exhaust	1
20	<u>1016519</u>	Guide, Valve	1
21	<u>1016560</u>	Snap Ring	2
22	<u>1017444</u>	Valve, Intake	1
23	<u>1017445</u>	Valve, Exhaust	1
24	<u>1017446</u>	Arm, Rocker	2
25	<u>1017454</u>	Rod, Push	2
26	<u>1017473</u>	Spring, Engine Valve	2
27	<u>102304801</u>	Kit, Gasket, FE350 (includes items 28 through 31)	1
28	<u>1016440</u>	Gasket, Engine to Insulator	1
29	<u>1016904</u>	Gasket, Exhaust	1
30	<u>1017434</u>	Gasket, Head	1
31	<u>1017443</u>	Gasket, Crankcase Cover	1
32	<u>102753401</u>	Case, Rocker	1
		Note: Item 28 is not a component of the FE350 engine.	

7

G

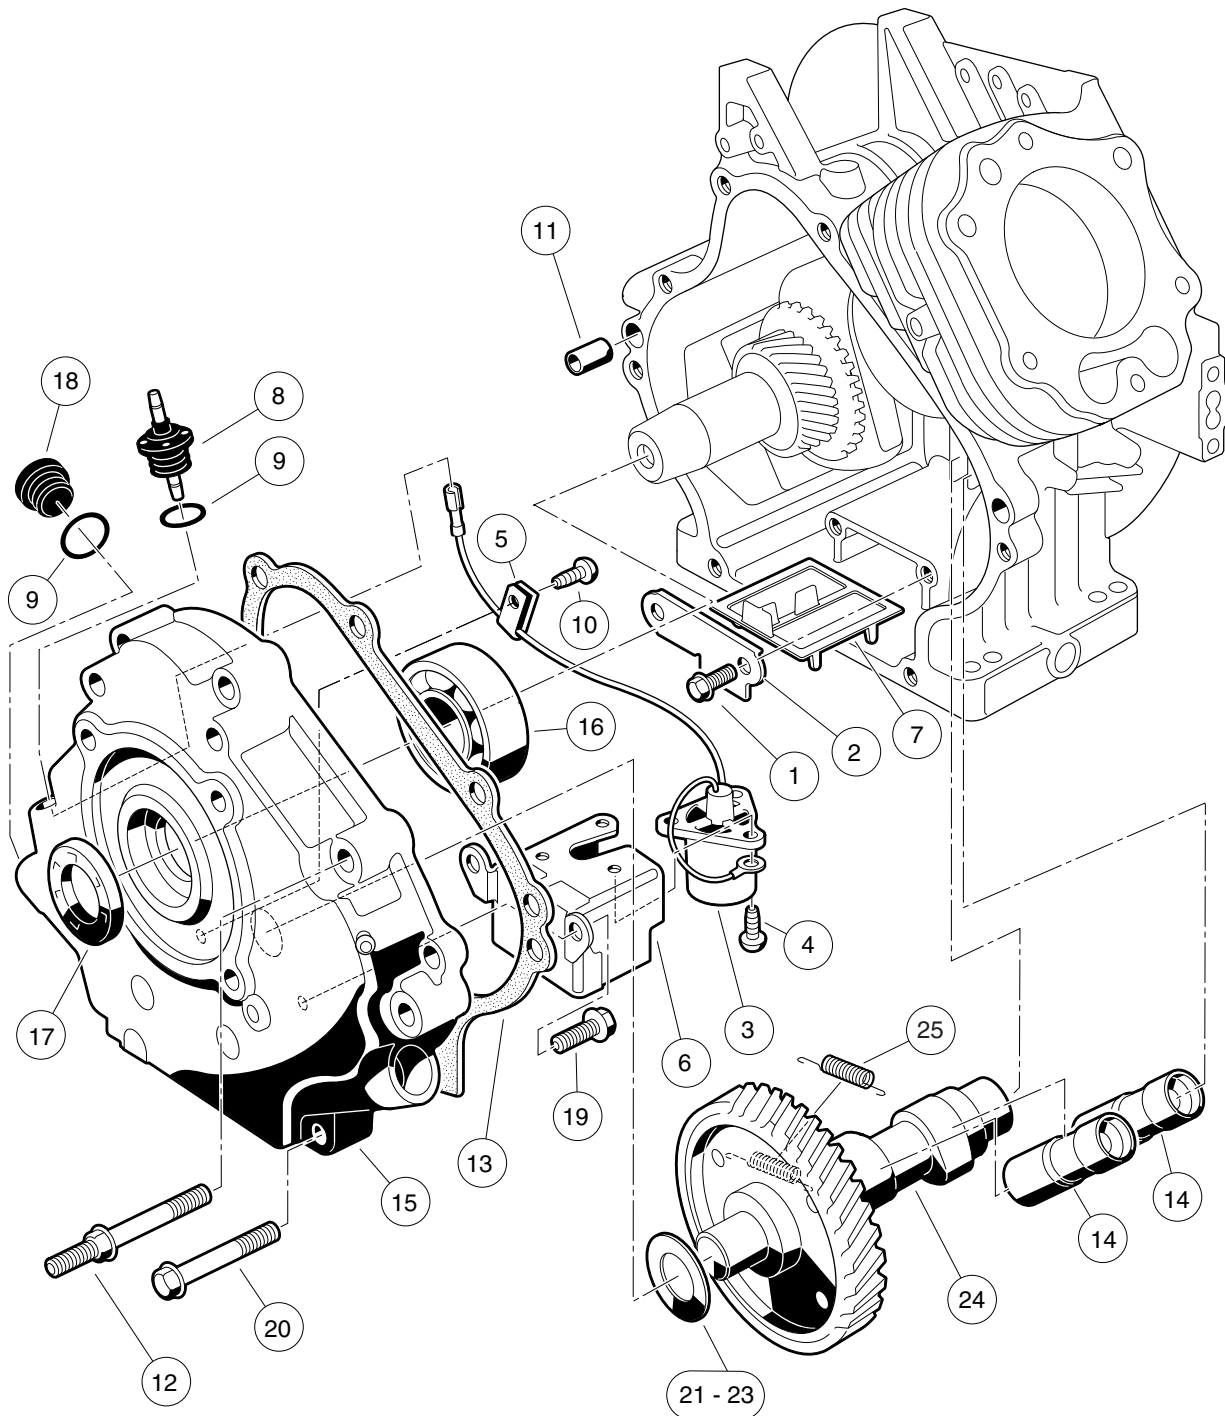


000205-001

FE350 ENGINE WITH ACR – CRANKCASE, CAMSHAFT, AND OIL SENSOR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016454</u>	Bolt, Flange Head, M5 x 0.8 x 8 mm	2
2	<u>1016472</u>	Plate, Oil Filter Screen	1
3	<u>1016494</u>	Sensor, Oil Level	1
4	<u>1016496</u>	Screw, Cross Pan-Head, M4 x 0.7 x 8 mm	3
5	<u>1016506</u>	Clamp	1
6	<u>1016510</u>	Bracket, Switch, Oil Level	1
7	<u>1016521</u>	Screen, Oil Filter	1
8	<u>1016535</u>	Connector, Cord	1
9	<u>1016538</u>	O-Ring	2
10	<u>1016544</u>	Screw	1
11	<u>1016564</u>	Pin	2
12	<u>1016584</u>	Bolt, Two-Ended, M8 x 1.25 x 69 mm	2
13	<u>1017443</u>	Gasket, Crankcase Cover	1
14	<u>1017447</u>	Adjuster, Lash	2
15	<u>1017472</u>	Cover Crankcase	1
16	<u>1017487</u>	Bearing, Ball	1
17	<u>1017504</u>	Seal, Oil	1
18	<u>1017508</u>	Plug	1
19	<u>1017513</u>	Bolt Switch Bracket	2
20	<u>1017514</u>	Screw, M8-1.25 X 45mm Hex	6
21	<u>101751801</u>	Shim, 0.3	1
22	<u>101751802</u>	Shim, 0.4	1
23	<u>101751803</u>	Shim, 0.5	1
24	<u>102271601</u>	Camshaft, FE350/FE400 with ACR, 44-tooth (includes item 25)	1
25	<u>1017511</u>	Spring	1

7
G

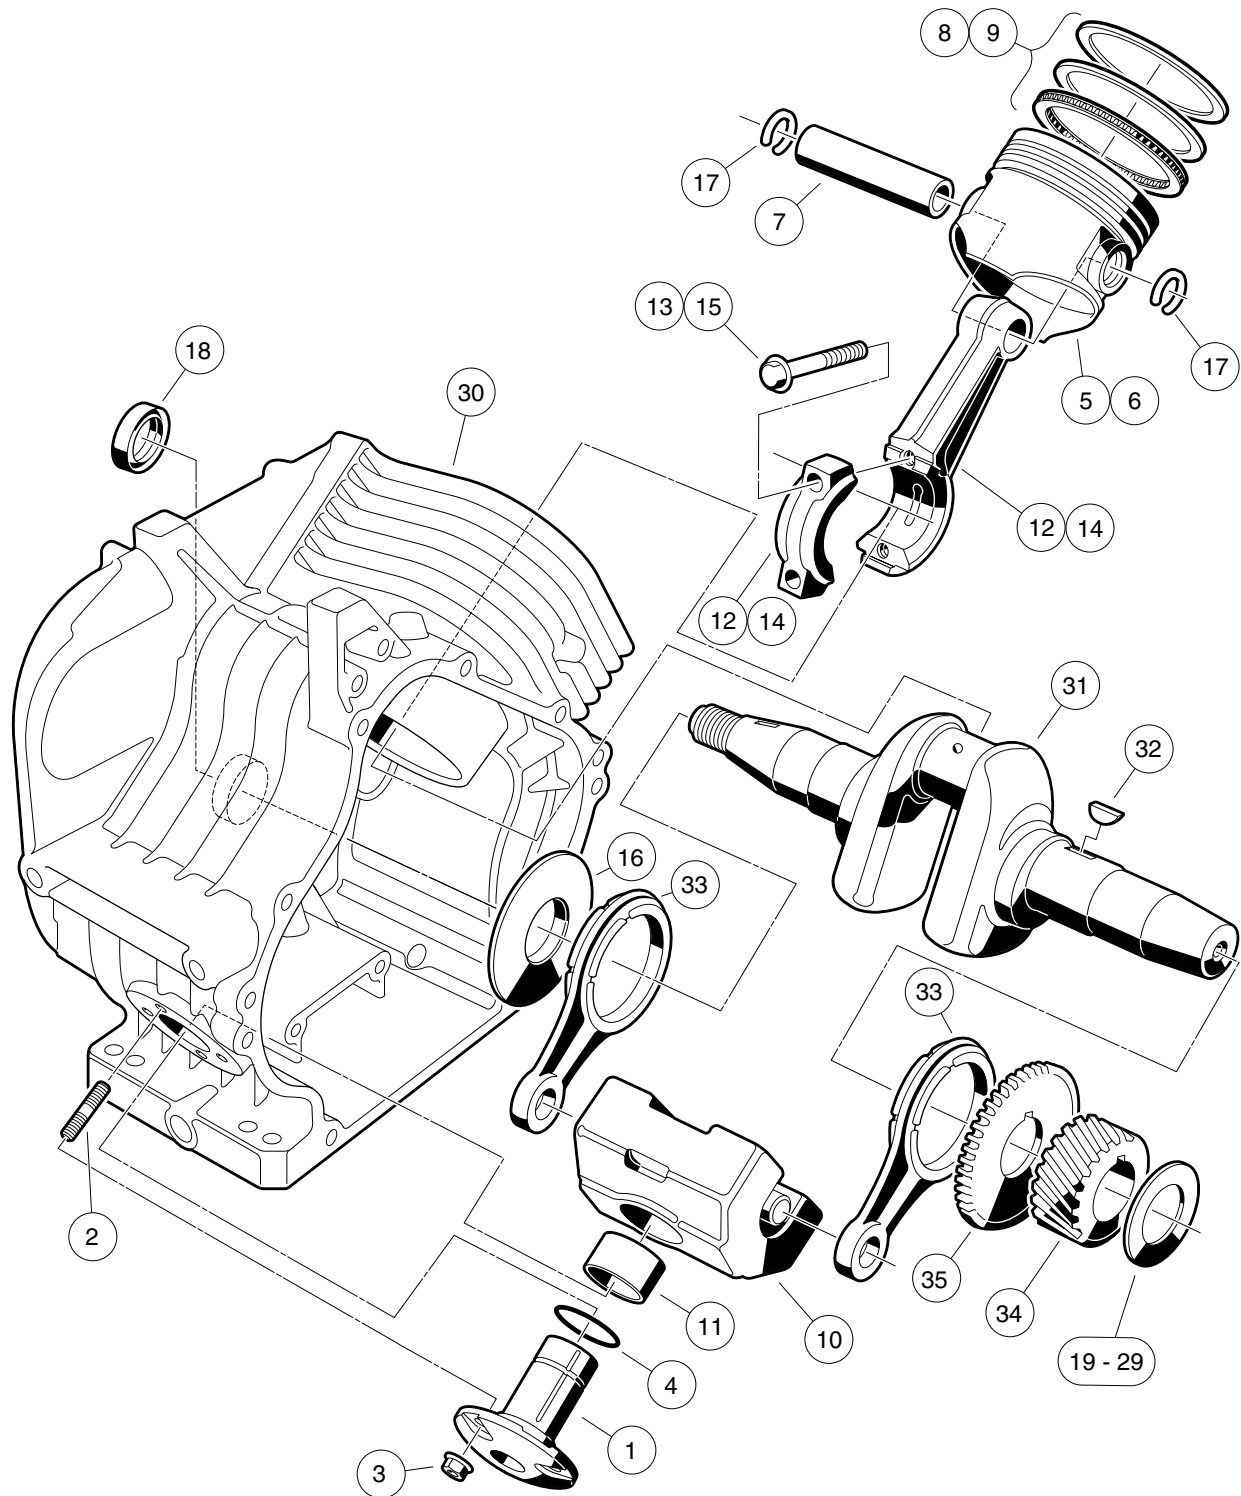


000206-001

AS11 FE350 ENGINE – CRANKCASE AND CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016470	Shaft, Guide, Counterbalance	1
2	<u>1016541</u>	Stud, 6x14	4
3	1016547	Nut, M6 Flange	4
4	<u>1016571</u>	O-Ring	1
5	<u>101744901</u>	Piston, Standard	1
6	<u>101744902</u>	Piston, 0.50 mm Oversize	1
7	1017450	Pin, Piston	1
8	<u>101745101</u>	Ring Set, Standard Piston	1
9	<u>101745102</u>	Ring Set, Piston, 0.50 mm Oversize	1
10	<u>1017453</u>	Fe400 Counterbalance Weight (includes item 11)	1
11	1017510	Bearing, Plain	1
12	101745701	Asm, Con. Rod Std (includes item 13)	1
13	<u>1017512</u>	Bolt	2
14	<u>101745702</u>	Rod Assembly Connecting Rod 0.5mm (includes item 15)	1
15	<u>1017512</u>	Bolt	2
16	1017501	Spacer	1
17	<u>1017502</u>	Snap Ring	2
18	<u>1017503</u>	Seal, Oil	1
19	<u>101773301</u>	Shim, Crankshaft, 1.18mm	1
20	<u>101773302</u>	Shim, Crankshaft, 1.25mm	1
21	<u>101773303</u>	Shim, Crankshaft, 1.32mm	1
22	<u>101773304</u>	Shim, Crankshaft, 1.39mm	1
23	<u>101773305</u>	Shim, Crankshaft, 1.46mm	1
24	<u>101773306</u>	Shim, Crankshaft, 1.53mm	1
25	<u>101773307</u>	Shim, Crankshaft, 1.60mm	1
26	<u>101773308</u>	Shim, Crankshaft, 1.67mm	1
27	<u>101773309</u>	Shim, Crankshaft, 1.74mm	1
28	<u>101773310</u>	Shim, Crankshaft, 1.11mm	1
29	<u>101773311</u>	Shim, Crankshaft, 1.81mm	1
30	<u>101916001</u>	Crankcase Complete, FE350 (cw)	1
31	<u>102430901</u>	Crankshaft, FE350 Left-Hand, 22-Tooth (includes items 32 through 35)	1
32	<u>1016562</u>	Key	1
33	<u>1017471</u>	Rod	2
34	N/A	Gear, Helical	1
35	N/A	Gear, Spur	1

7

G

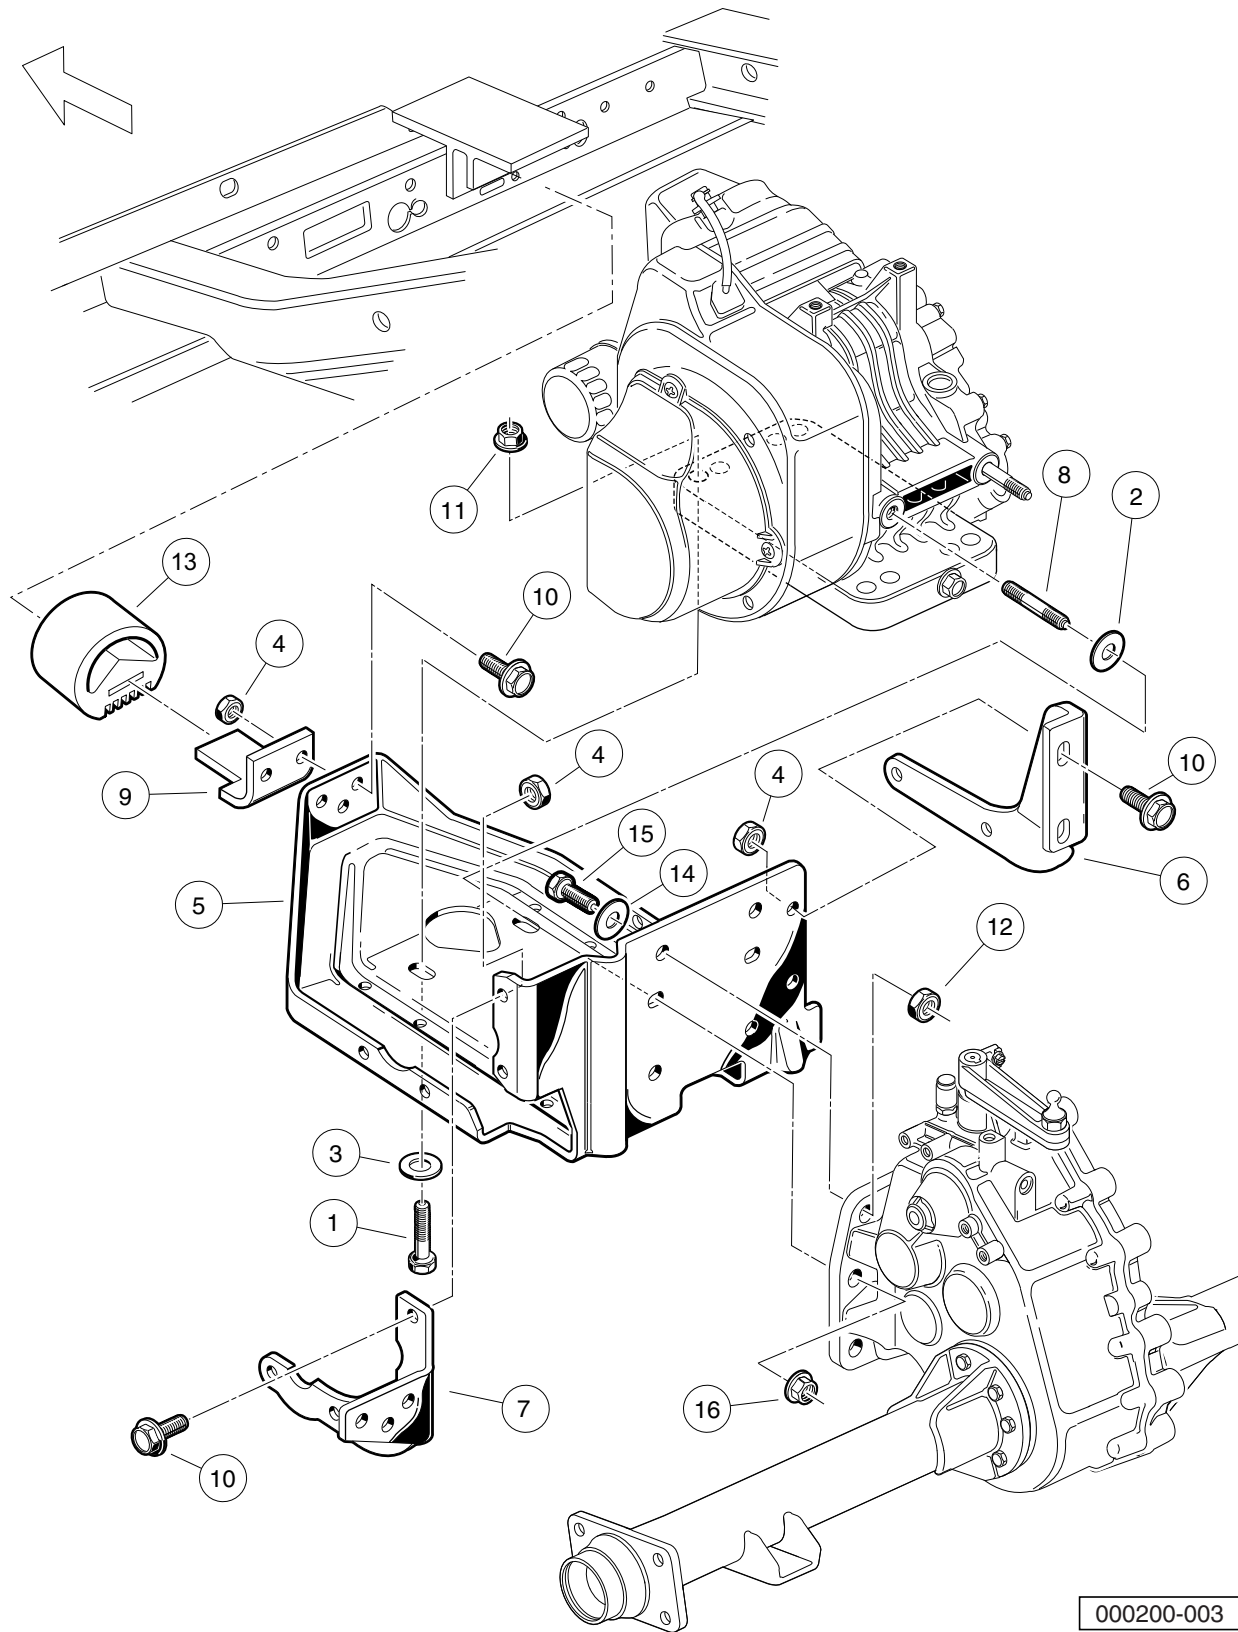7**G**

000200-003

FE350 ENGINE MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY	7
		1 2 3 4		G
1	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	4	
2	<u>1011697</u>	Washer, 5/16 Flat	2	
3	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	4	
4	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	10	
5	<u>101827101</u>	Plate, Engine Mounting	1	
6	<u>101832601</u>	Stiffener (PTO Side)	1	
7	<u>101832701</u>	Stiffener (Flywheel Side)	1	
8	<u>101833101</u>	Stud, M8-1.25 X 50 mm Two-Ended	2	
9	<u>101834601</u>	Snubber Bracket	1	
10	<u>101884801</u>	Screw, 5/16-24 X 0.875 Grade-8	10	
11	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4	
12	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4	
13	<u>102540301</u>	Inner Frame Snubber	1	
14	<u>334</u>	Washer, 3/8 Type A Flat	4	
15	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	4	
16	<u>96704416</u>	Nut Flg, M8 X 1.25 Serrated	2	


7

G

FUEL, INTAKE, AND GOVERNOR SYSTEMS

8

G

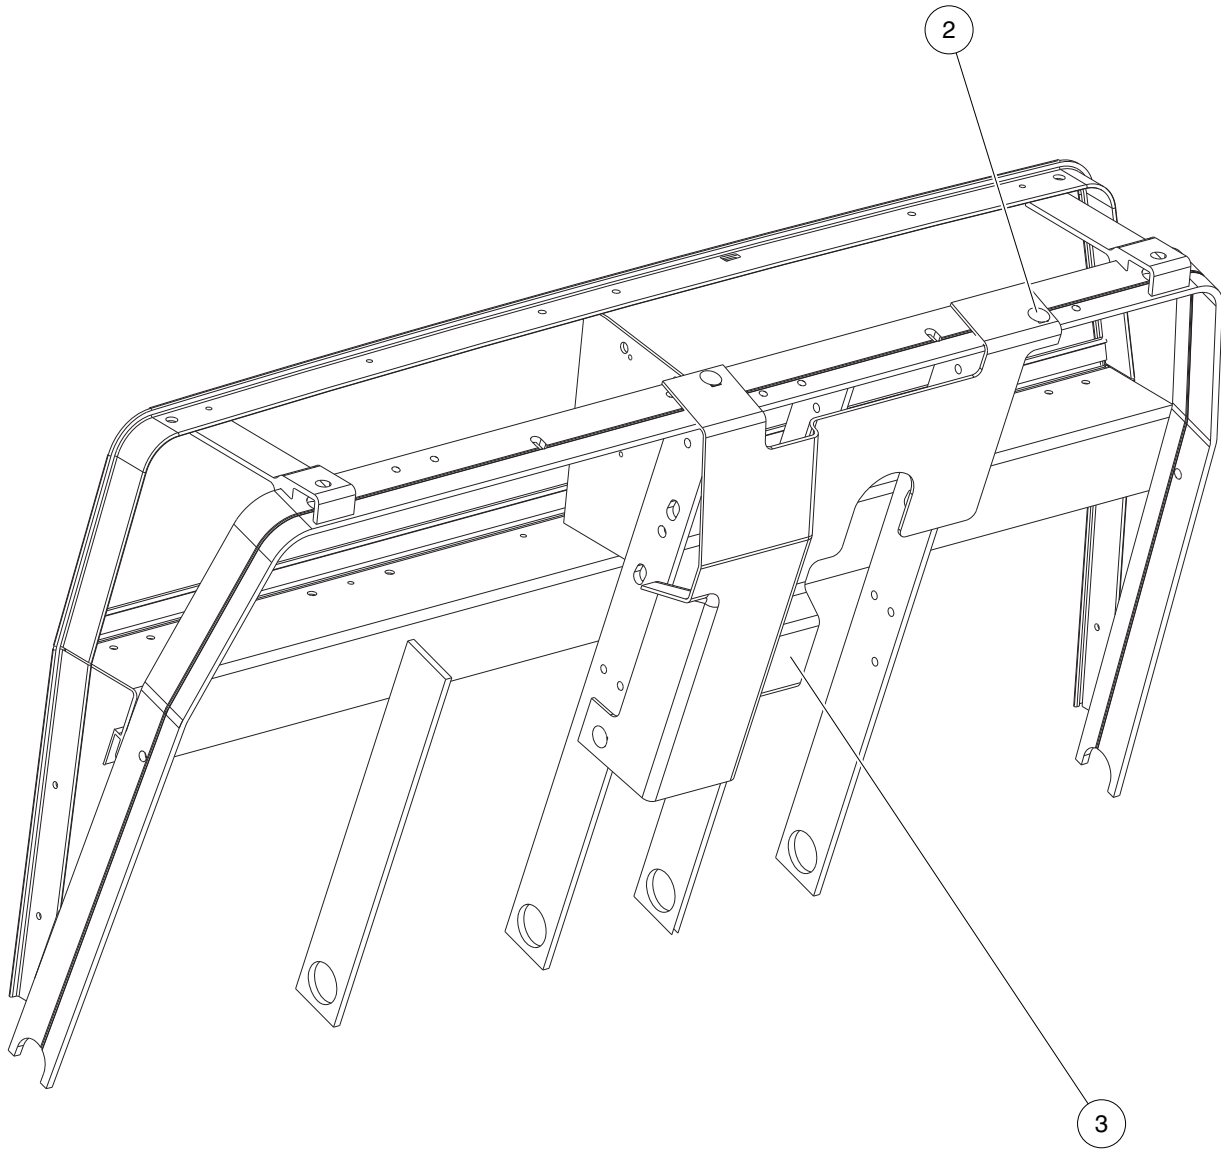


000593-001

SPLASH GUARD

ITEM	PART NO.	DESCRIPTION	QTY
1	N/A	1 2 3 4 Instl, Splashguard, Ca (includes items 2 and 3)	1
2	<u>1010434</u>	Barrel - Plastic	3
3	<u>103174401</u>	Splash Guard	1

8


G

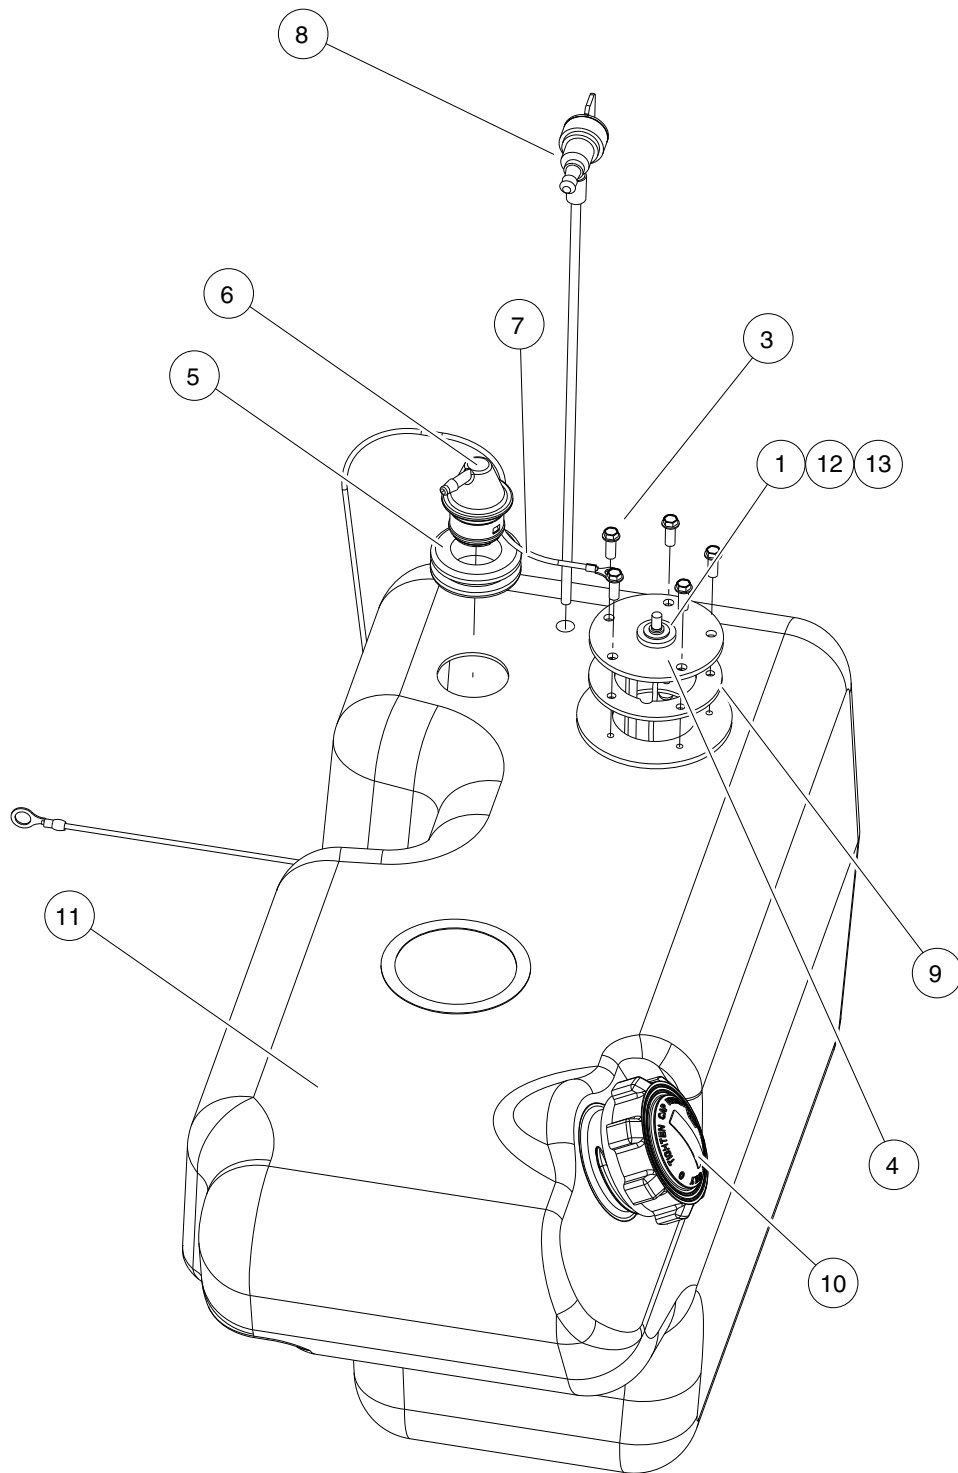

000609-001

FUEL TANK (NON-CLIFORNIA) WITH SENDING UNIT

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>1016</u>	Lockwasher, #10 Split	1	
2	103187601	Asm, Fuel Tank, Side Fill, Su (includes items 3 through 11)	1	
3	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	5	
4	<u>1013462</u>	Sending Unit, Fuel Level *	1	
5	<u>1015139</u>	Insulation Grommet	1	
6	<u>1015143</u>	Vent, Fuel Tank	1	
7	1015921	Wire Assembly #16 Black	1	
8	<u>102513701</u>	Valve - Fuel Pickup Tube	1	
9	<u>102522001</u>	Gasket, Rubber	1	
10	<u>102751601</u>	Cap, Fuel Tank, Gasoline	1	
11	102974201	Tank, Fuel, Side Fill	1	
12	<u>183</u>	Washer, #10 Type A Flat	1	
13	<u>8797</u>	Nut, #10-32 Brass Hex	1	
* Note: Must replace fuel sending unit gasket when servicing this component.				

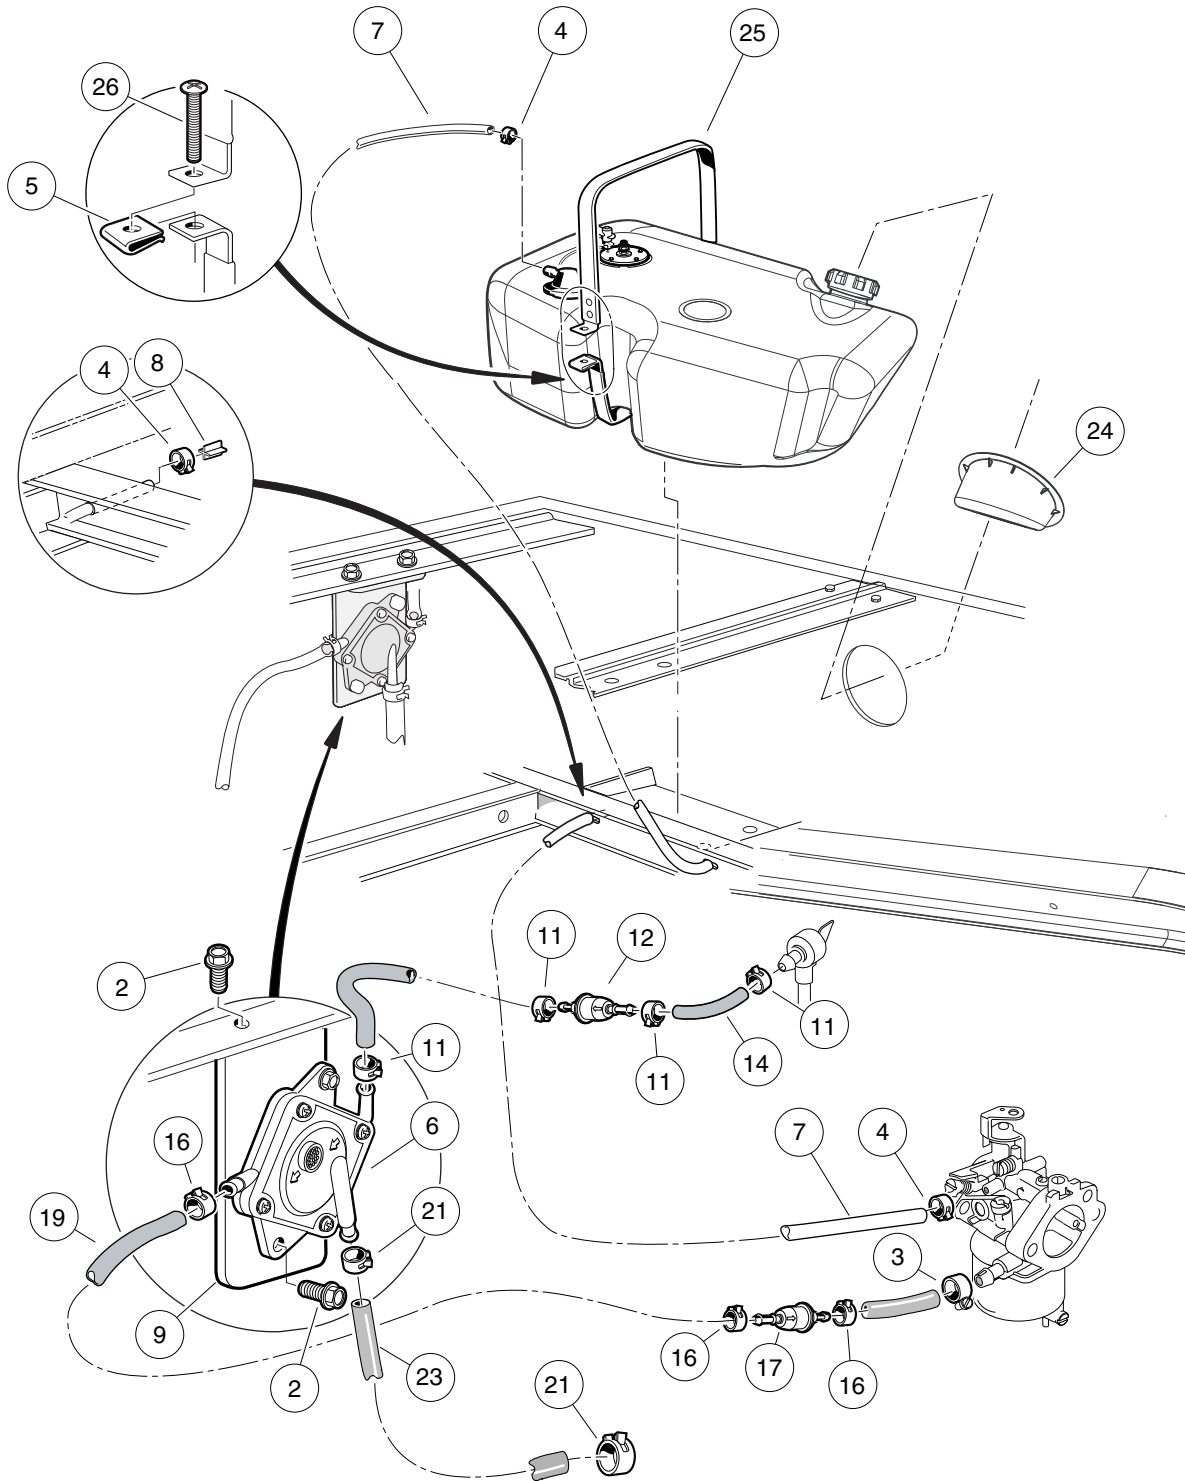


000602-001

FUEL SYSTEM

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Instl, Fuel Sys, Side Fill,ca1 (includes items 2 through 26)	1
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4
3	<u>1013687</u>	Clamp, 3/8" Hose (screw type)	1
4	<u>1013746</u>	Clamp, 0.301 ID Hose	3
5	<u>1014116</u>	Nut, 1/4-20 Speed	1
6	<u>1015137</u>	Fuel Line (available by the foot)	1
7	<u>101824401</u>	Vent Barb	1
8	<u>101929501</u>	Mount Fuel Pump	1
9	N/A	Asm, Fuel Filter 14.93" J1737 (includes items 10 through 13)	1
10	<u>1012649</u>	Clamp, 0.460 Red Hose	4
11	<u>102003201</u>	Filter, Fuel, 30 Micron	1
12	N/A	Cap, Plug, Plastic	2
13	<u>102865101</u>	Fuel Line	1
14	N/A	Asm, Fuel Filter 16.93" J1737 (includes items 15 through 18)	1
15	<u>1012649</u>	Clamp, 0.460 Red Hose	3
16	<u>102003201</u>	Filter, Fuel, 30 Micron	1
17	N/A	Cap, Plug, Plastic	2
18	<u>102865101</u>	Fuel Line	1
19	N/A	Asm, Fuel Line 16" J1737 (includes items 20 through 22)	1
20	<u>1012649</u>	Clamp, 0.460 Red Hose	2
21	N/A	Cap, Plug, Plastic	2
22	<u>102865101</u>	Fuel Line	1
23	<u>102977901</u>	Bezel, Fuel Fill, 5.0 Dia	1
24	<u>102978001</u>	Strap, Fuel Tank, Side Fill	1
25	<u>103306301</u>	Screw, Bhsc, 1/4-20 X 2.0	1
26	<u>103781101</u>	Kit, Fuel Pump Retrofit (includes items 27 and 28)	1
27	<u>103010101</u>	Pump, Fuel, Impulse, Fh	1
28	<u>103781201</u>	Instr, Fuel Pump Retrofit	1

8


G

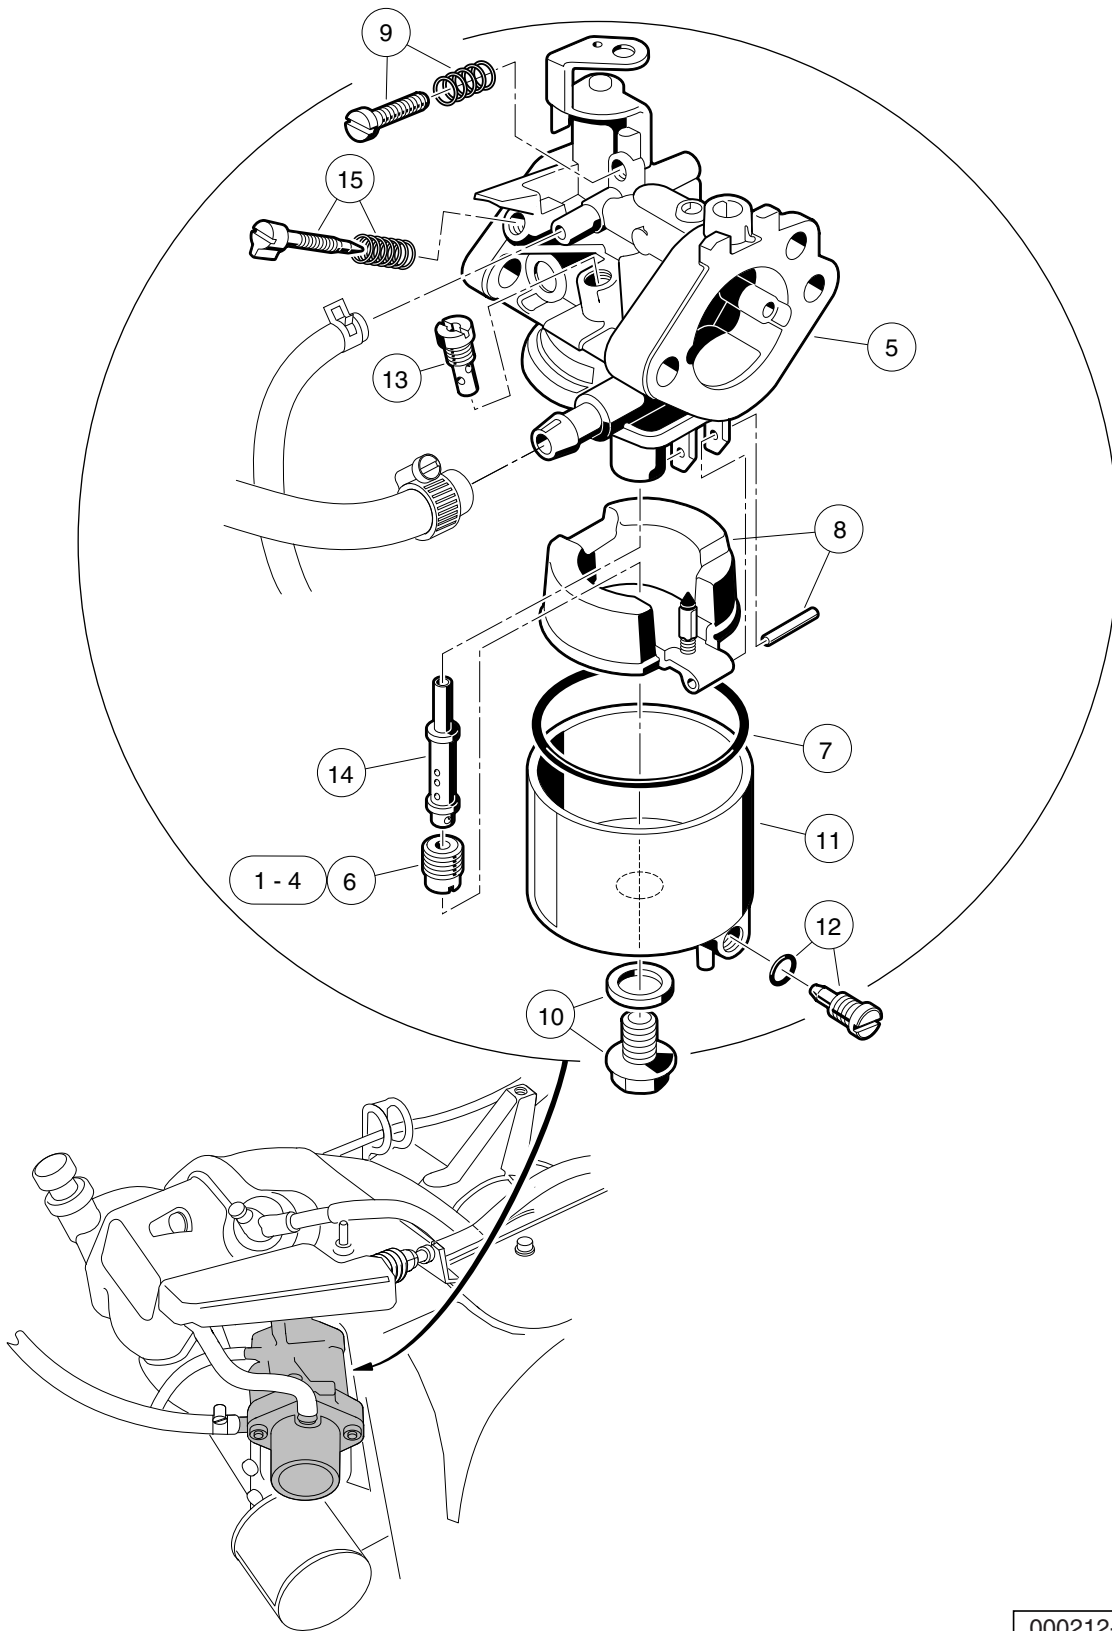

000212-001

CARBURETOR ASSEMBLY – FE350


ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>101642575</u>	Jet, Altitude, # 75	1	
2	<u>101642578</u>	Jet, Altitude, # 78	1	
3	<u>101642580</u>	Jet, Altitude, # 80	1	
4	<u>101642582</u>	Jet, Altitude, # 82	1	
5	<u>101905901</u>	Carburetor, FE350D (includes items 6 through 15)	1	
6	<u>101642585</u>	Jet, Altitude, # 85	1	
7	<u>1016437</u>	Gasket, Carburetor Bowl OHV	1	
8	<u>1016486</u>	Float Assembly	1	
9	<u>1016501</u>	Screw Assembly	1	
10	<u>1016585</u>	Bolt	1	
11	<u>1017461</u>	Chamber Assembly, Float (includes item 12)	1	
12	<u>1016499</u>	Screw Assembly	1	
13	<u>101973101</u>	Jet, #40 Pilot	1	
14	<u>101973301</u>	Nozzle, Main	1	
15	N/A	Assembly, Pilot Air Screw	1	
Note: <u>101642585</u> for 0 - 3,000 feet; <u>101642582</u> for 3,000 - 5,000 feet; <u>101642580</u> for 5,000 - 8,000 feet; <u>101642578</u> for 8,000 - 10,000 feet; <u>101642575</u> for 10,000 feet and higher.				

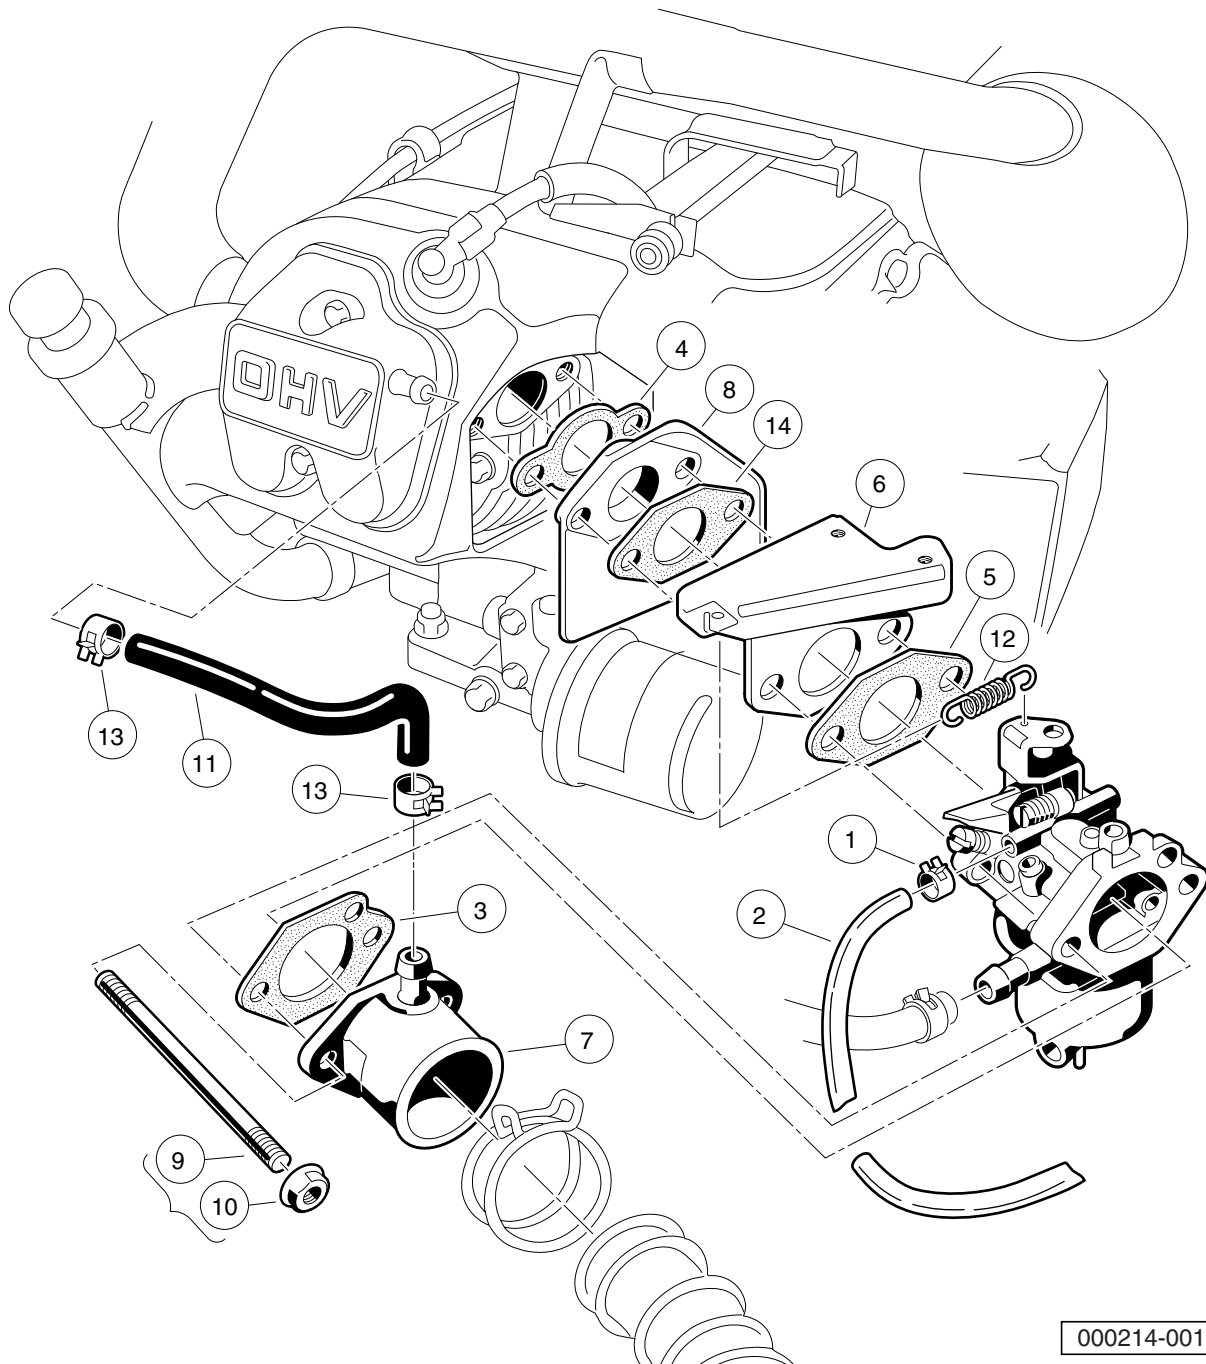

000214-001

CARBURETOR INSTALLATION – FE350


ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>1013746</u>	Clamp, 0.301 ID Hose	1	
2	<u>1015137</u>	Fuel Line (available by the foot)	1	
3	<u>1016438</u>	Gasket, Carb To Intake Manifold	1	
4	<u>1016440</u>	Gasket, Engine to Insulator	1	
5	<u>1016441</u>	Gasket, Sprg Brkt To Carb OHV	1	
6	<u>1016444</u>	Bracket, Throttle Spring Return	1	
7	1016480	Pipe, Intake Manifold	1	
8	101648102	Insulator, Carburetor	1	
9	<u>101649002</u>	Stud, M6-1.00 Two-Ended	2	
10	1016547	Nut, M6 Flange	2	
11	<u>1016572</u>	Tube, Crankcase Vent	1	
12	<u>1016582</u>	Spring, Throttle Return	1	
13	<u>1017466</u>	Clamp	2	
14	<u>101973401</u>	Gasket, Insulator To Bracket	1	

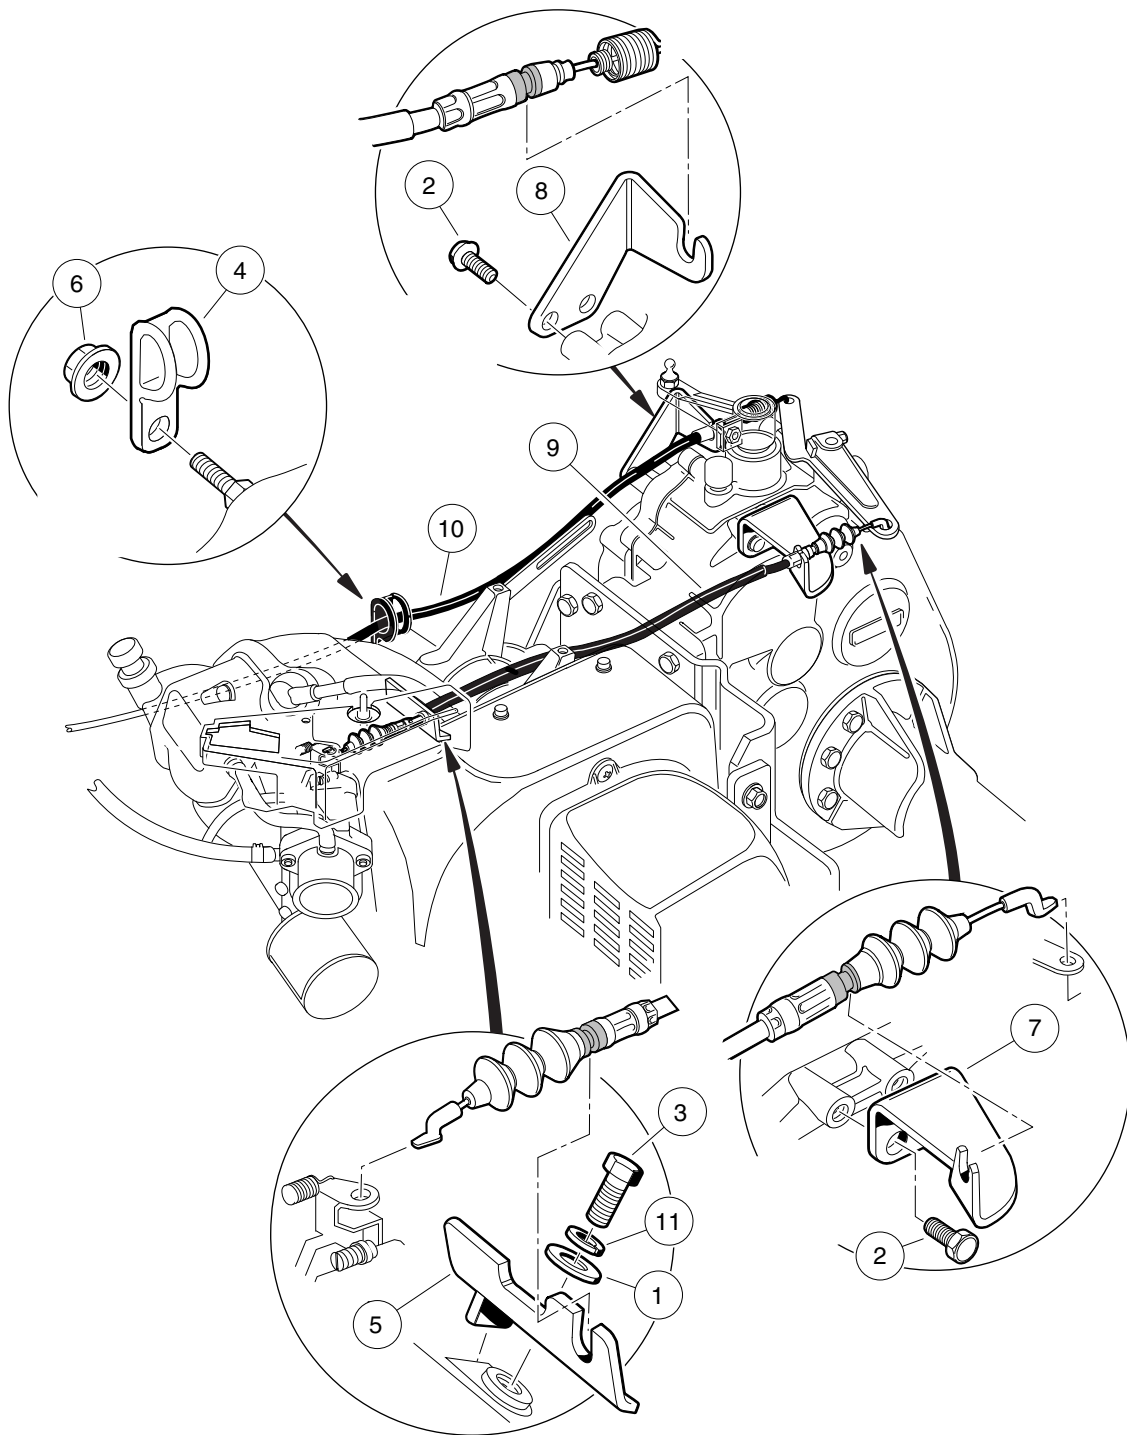

000215-001

GOVERNOR AND ACCELERATOR CABLES

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>1011697</u>	Washer, 5/16 Flat	1	
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4	
3	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	1	
4	<u>1013700</u>	Clamp	2	
5	<u>101584502</u>	Bracket, Governor Cable Snap-In	1	
6	<u>1016546</u>	Nut	2	
7	<u>101832202</u>	Bracket, Rear Governor Cable Snap-In	1	
8	<u>101832302</u>	Bracket, Rear Accelerator Cable Snap-In	1	
9	<u>102336001</u>	Cable, Governor, Snap-In	1	
10	<u>102336101</u>	Cable, Accelerator, Snap-In	1	
11	<u>7174</u>	Lockwasher, 5/16 Split	1	

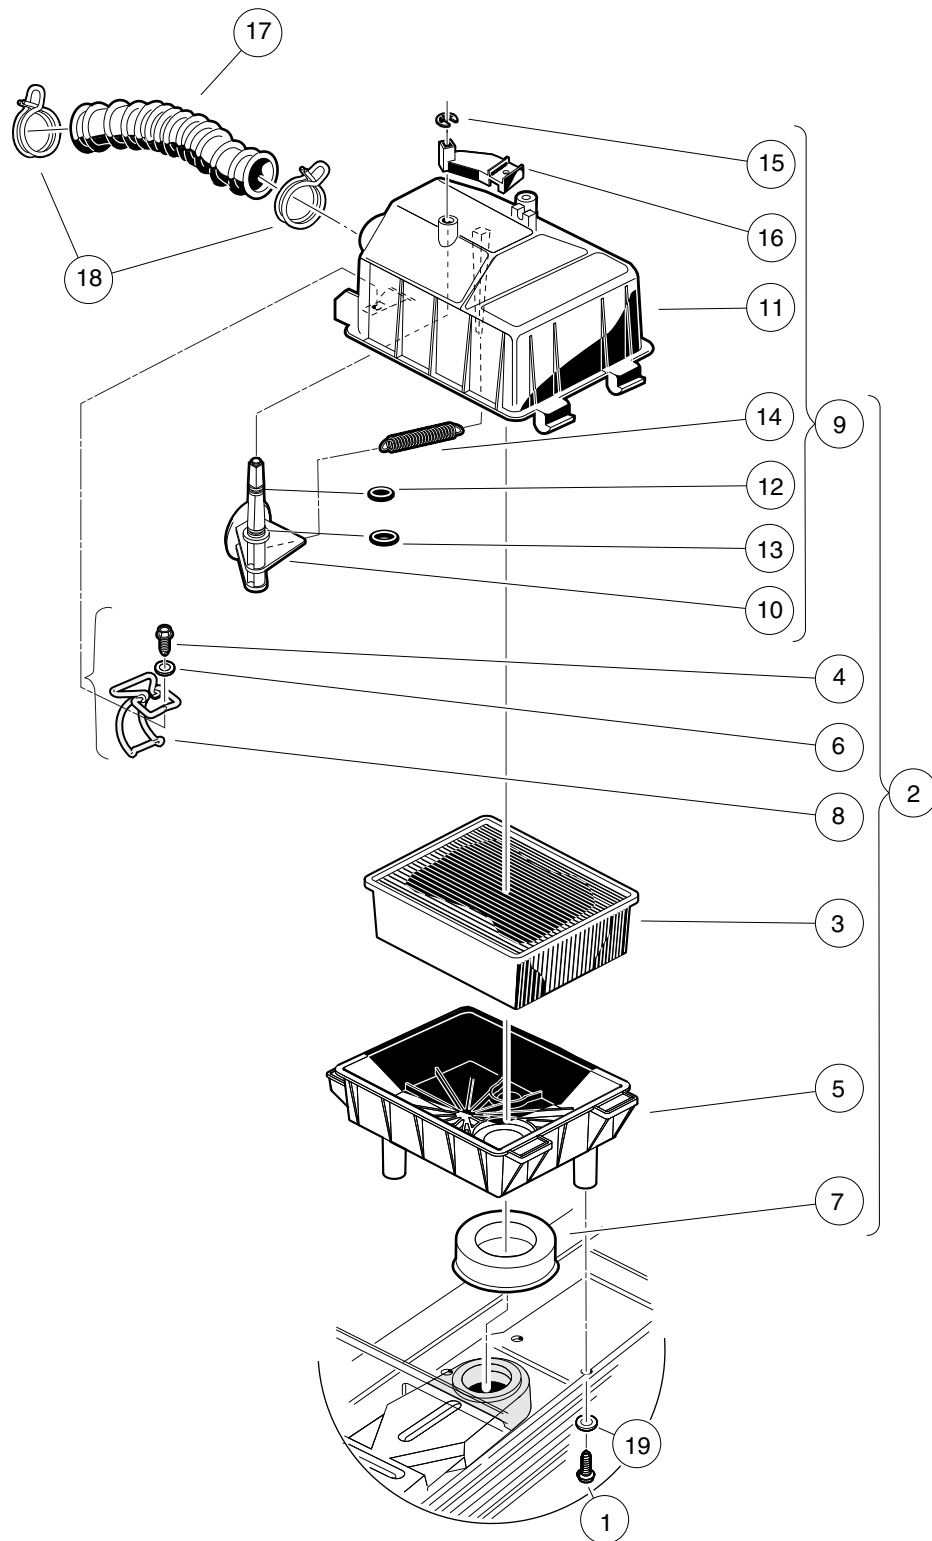


000332-001

AIR BOX AND INTAKE HOSE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	3
2	<u>101821501</u>	Assembly, Air Box (includes items 3 through 9)	1
3	<u>1015426</u>	Filter, Air	1
4	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	2
5	<u>101811901</u>	Bottom, Air Box	1
6	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	2
7	<u>101921501</u>	Seal, Intake	1
8	<u>101925701</u>	Latch, Wireform	2
9	<u>101972801</u>	Top Assy, Air Box (includes items 10 through 16)	1
10	N/A	Valve, Choke	1
11	101811801	Top, Air Box	1
12	N/A	O-Ring, 5/16	1
13	N/A	O-Ring, 3/8	1
14	<u>101812301</u>	Spring, Extension Return	1
15	<u>101813001</u>	Retaining Ring 0.25, Shaft	1
16	<u>101917601</u>	Lever, Choke	1
17	<u>101837101</u>	Hose, Air Intake	1
18	<u>101971301</u>	Clamp, 1.58" ID Hose	2
19	<u>332</u>	Washer, 1/4 Type A Narrow Flat	3

8


G

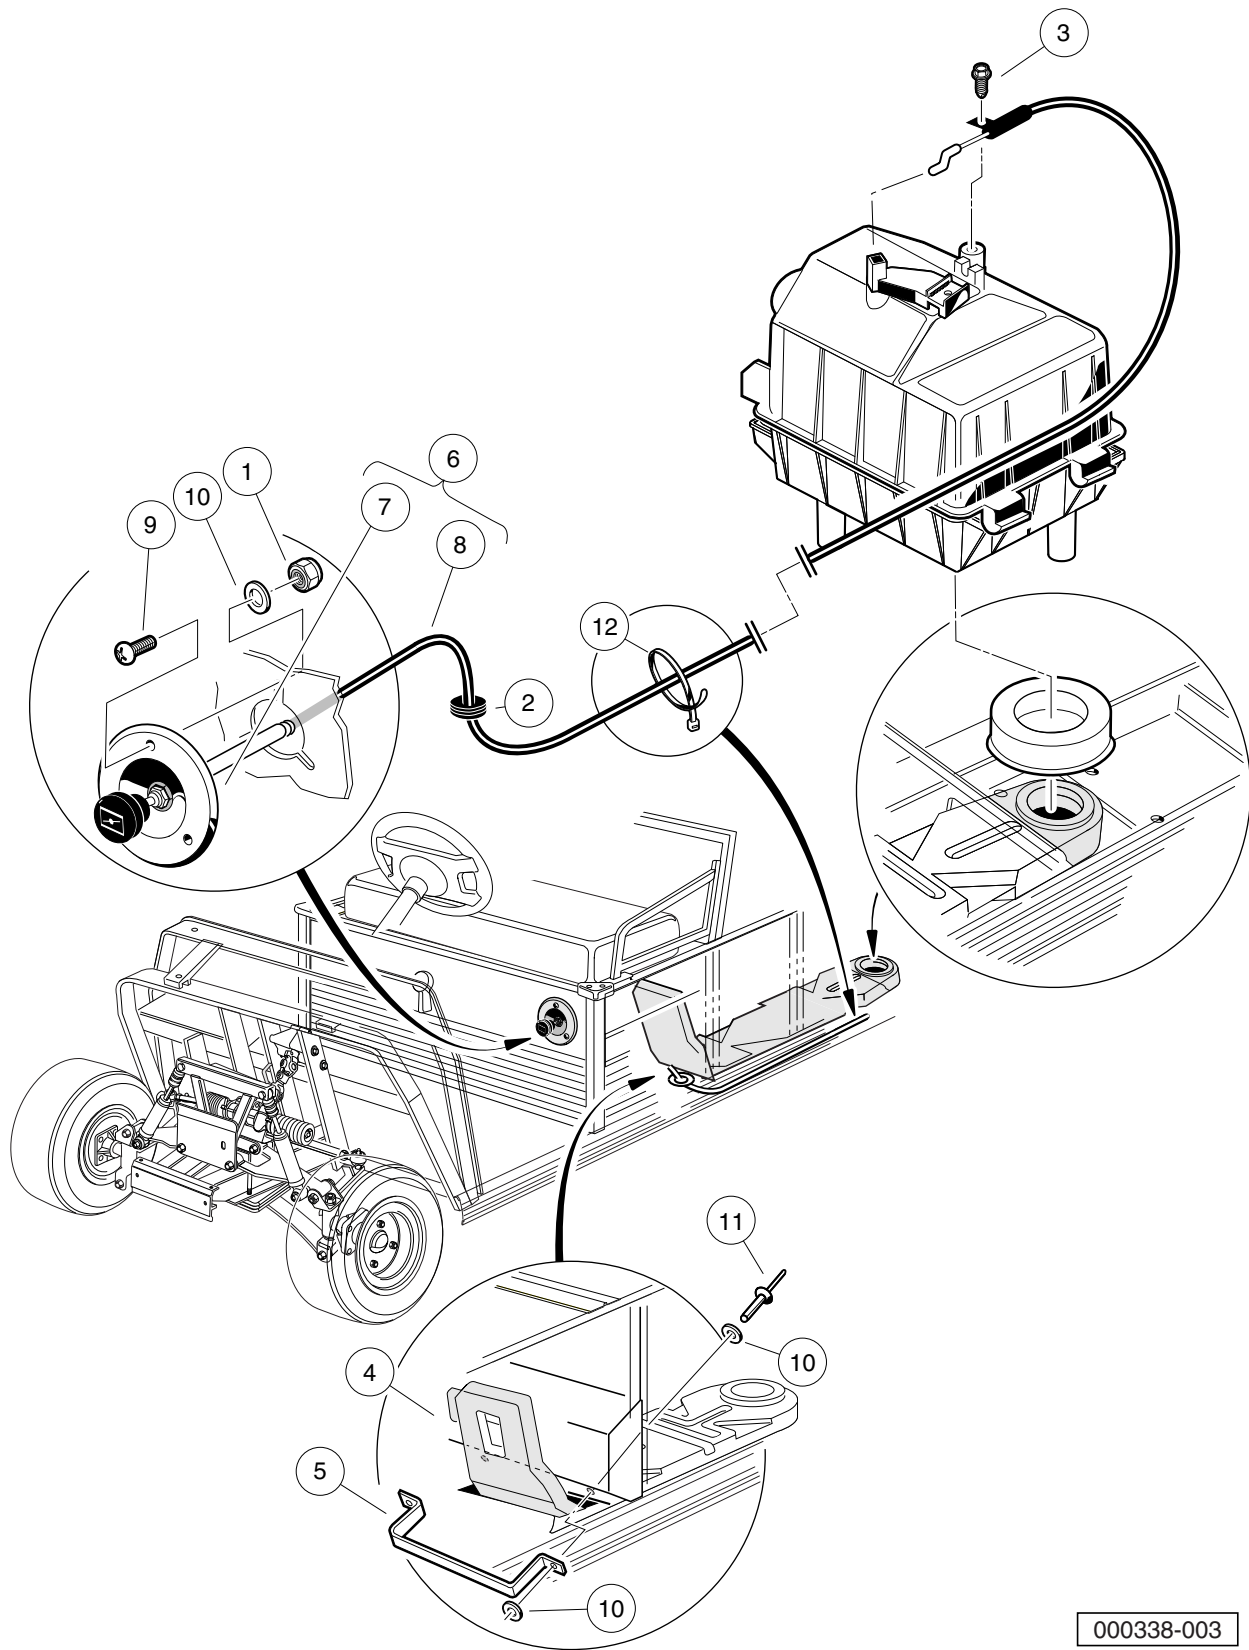

000338-003

INTAKE SYSTEM

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>1012438</u>	Locknut, #10-24 Nylon Insert	3	
2	<u>1015139</u>	Insulation Grommet	1	
3	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	1	
4	<u>101811301</u>	Duct, Intake	1	
5	<u>101825701</u>	Retaining Bracket	1	
6	<u>101926802</u>	Cable, Choke (includes items 7 and 8)	1	
7	<u>101933701</u>	Bezel, Choke Cable	1	
8	N/A	Choke Cable without Bezel, Long	1	
9	<u>1631</u>	Screw, #10-24 X 0.75 Phillips Pan-Head	3	
10	<u>183</u>	Washer, #10 Type A Flat	7	
11	<u>7973</u>	Rivet, 3/16 X .400 Blind	2	
12	<u>8639</u>	Tie Wrap, 11" Nylon	2	

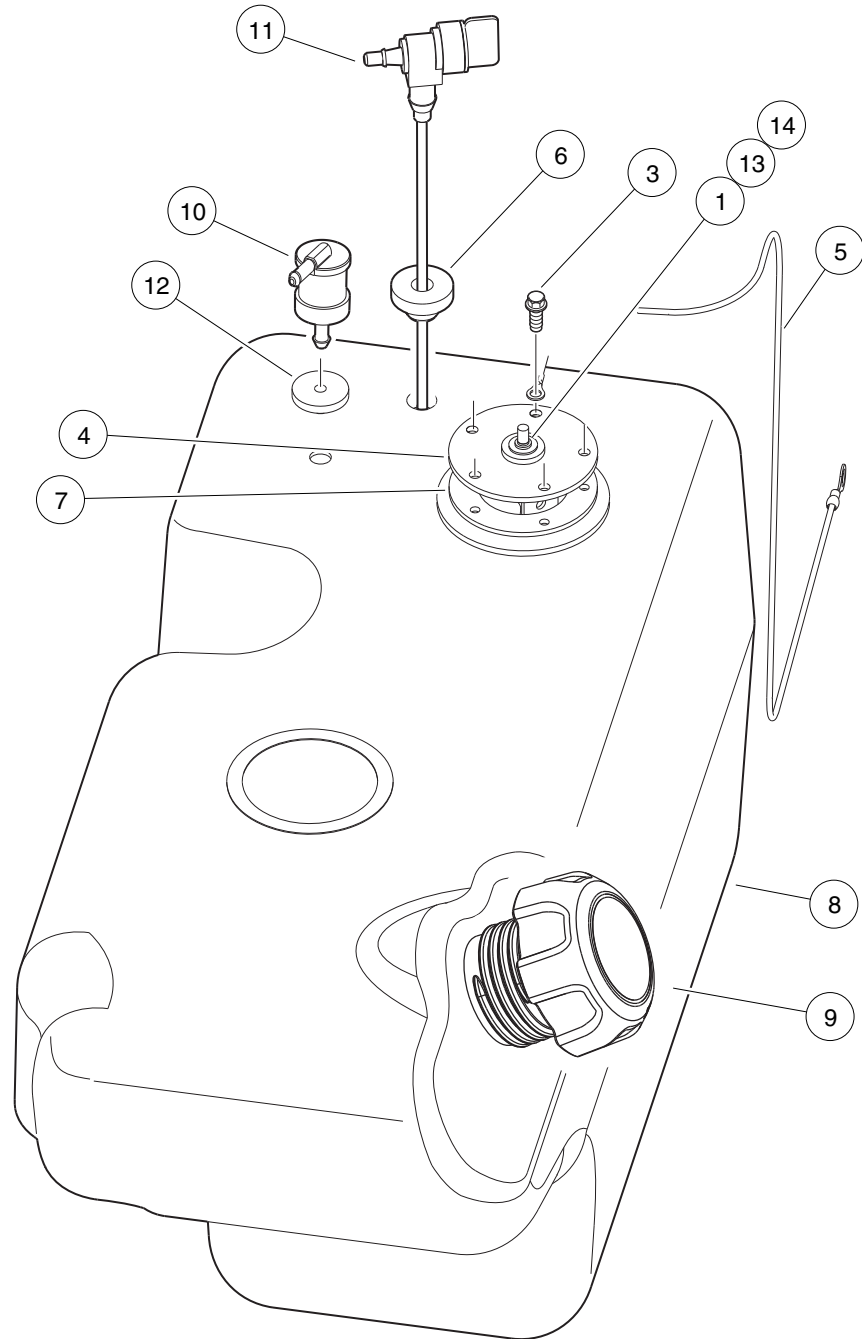

000609-002

FUEL TANK (CALIFORNIA) WITH SENDING UNIT

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>1016</u>	Lockwasher, #10 Split	1	
2	<u>103369101</u>	Asm, Fuel Tank,side Fill,nano (includes items 3 through 12)	1	
3	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	5	
4	<u>1013462</u>	Sending Unit, Fuel Level *	1	
5	<u>1015921</u>	Wire Assembly #16 Black	1	
6	<u>102406701</u>	Bushing, Line, Return	1	
7	<u>102522001</u>	Gasket, Rubber	1	
8	N/A	Tank, Fuel,side Fill,nano	1	
9	<u>103372101</u>	Cap, Fuel Tank, Gas, Ratchet	1	
10	<u>103372201</u>	Vent, Fuel Tank, W/ Valve	1	
11	<u>103372301</u>	Valve, Fuel, 259mm	1	
12	<u>103374701</u>	Grommet, Fuel Tank Vent	1	
13	<u>183</u>	Washer, #10 Type A Flat	1	
14	<u>8797</u>	Nut, #10-32 Brass Hex	1	
* Note: Must replace fuel sending unit gasket when servicing this component.				


8

G

EXHAUST SYSTEM

9

G

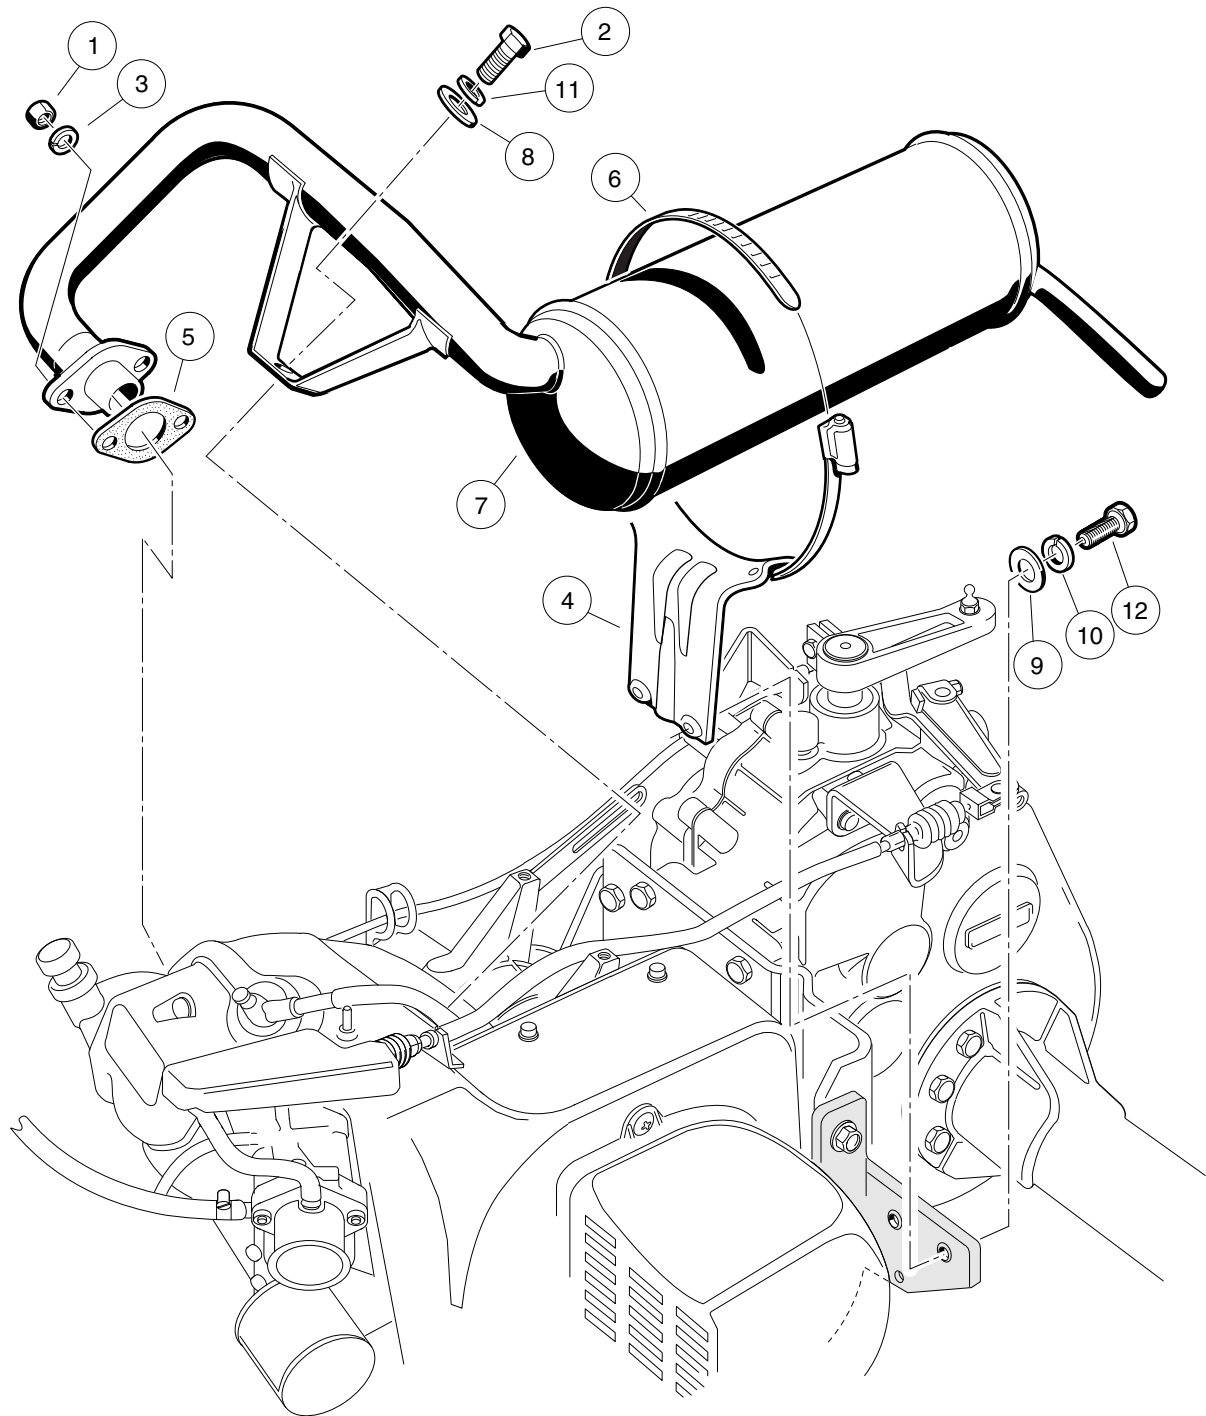

000209-001

EXHAUST SYSTEM – FE350 ENGINE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012528</u>	Nut, M8-1.25 Hex	2
2	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	1
3	<u>1013734</u>	Lockwasher, 8mm Split	2
4	<u>1015814</u>	Bracket, Muffler Mounting	1
5	<u>1016904</u>	Gasket, Exhaust	1
6	<u>1017689</u>	Clamp, 5" Muffler Hose	1
7	<u>101859401</u>	Exhaust System, FE350	1
8	<u>1241</u>	Washer, 5/16 Type A Flat	1
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
10	<u>451</u>	Lockwasher, 1/4 Split	2
11	<u>7174</u>	Lockwasher, 5/16 Split	1
12	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2

9

G


9

G

TORQUE CONVERTER

10

G

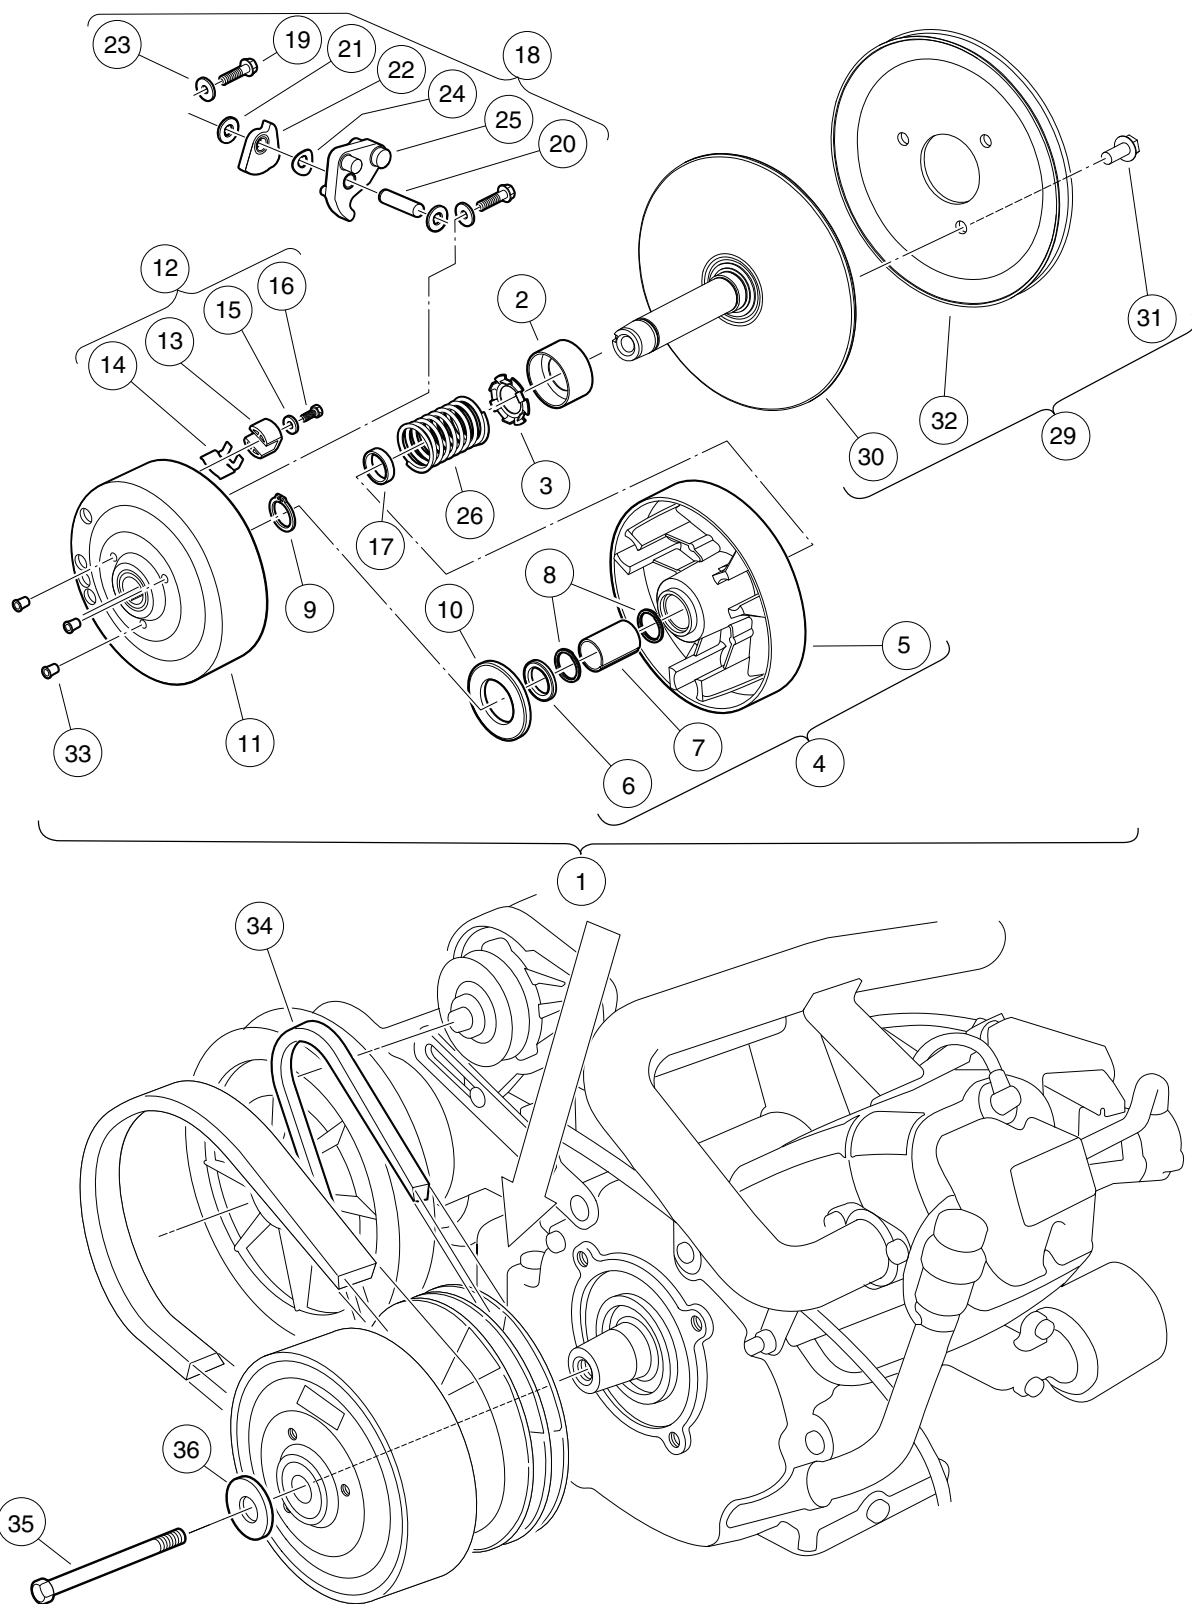


000217-002

DRIVE CLUTCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101833904</u>	Assembly, Drive Clutch (includes items 2 through 33)	1
2	<u>1014049</u>	Bearing, Idler	1
3	<u>1014050</u>	Retainer, Spring	1
4	<u>1014052</u>	Movable-Face Assembly (includes items 5 through 7)	1
5	N/A	Drive Clutch Movable Face	1
6	<u>1014055</u>	Retainer	1
7	N/A	Bushing, Split, Drive Clutch	1
8	<u>1014056</u>	Ring, Spiral Backup	2
9	<u>1014057</u>	Ring, 0.810" Internal Retaining	1
10	<u>1014058</u>	Thrust Washer	1
11	<u>1014059</u>	Drive Hub Assy, Drive Clutch	1
12	<u>1014453</u>	Kit, Drive Clutch Button (includes items 13 through 16)	1
13	<u>1014062</u>	Driver, Drive Clutch	3
14	<u>1014287</u>	Spring, Drive Button	3
15	<u>183</u>	Washer, #10 Type A Flat	3
16	<u>8450</u>	Screw, #10-24 X 0.50 Hex-Head	3
17	<u>1016289</u>	Spacer, Fixed Face Shaft	1
18	<u>1016801</u>	Kit, Drive Clutch Weight (includes items 19 through 25)	1
19	<u>1014063</u>	Screw, 1/4-20 X 1.00 Hex Head	6
20	N/A	Pin, 0.3752 X 1.50 Dowel	3
21	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	6
22	N/A	Clutch Weight, Secondary	3
23	N/A	Washer	6
24	<u>1016201</u>	Washer, Wave	3
25	N/A	Weight, Primary	3
26	<u>1016901</u>	Spring, Drive Clutch	1
27	<u>101738302</u>	Kit, Fixed Face - Drive (includes items 28 and 29)	1
28	N/A	Desiccant Bag (Not Shown)	1
29	<u>101738301</u>	Fixed Face Drive (includes items 30 through 32)	1
30	N/A	Fixed Face Assembly, Drive Clutch	1
31	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	3
32	<u>1016011</u>	Pulley, Drive Clutch	1
33	N/A	Cap Plug	3
34	<u>101916701</u>	V-Belt	1
35	<u>103345701</u>	Screw 3/8-24x5.5 Hex Loc Ptch	1
36	<u>808</u>	Washer, 3/8 Type B Flat	1
		Note: Item 28 not shown.	

10

G

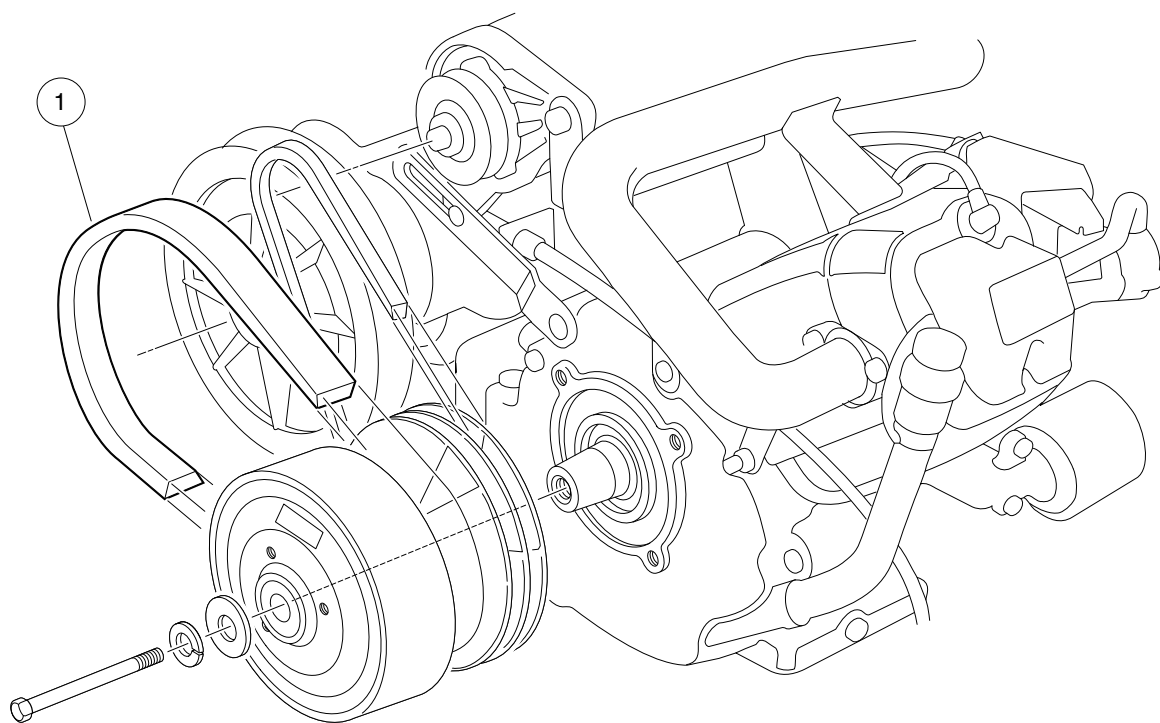


000218-001

DRIVE BELT – FE350

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>1017188</u>	1 2 3 4 Belt, Drive (FE350)	1

10

G

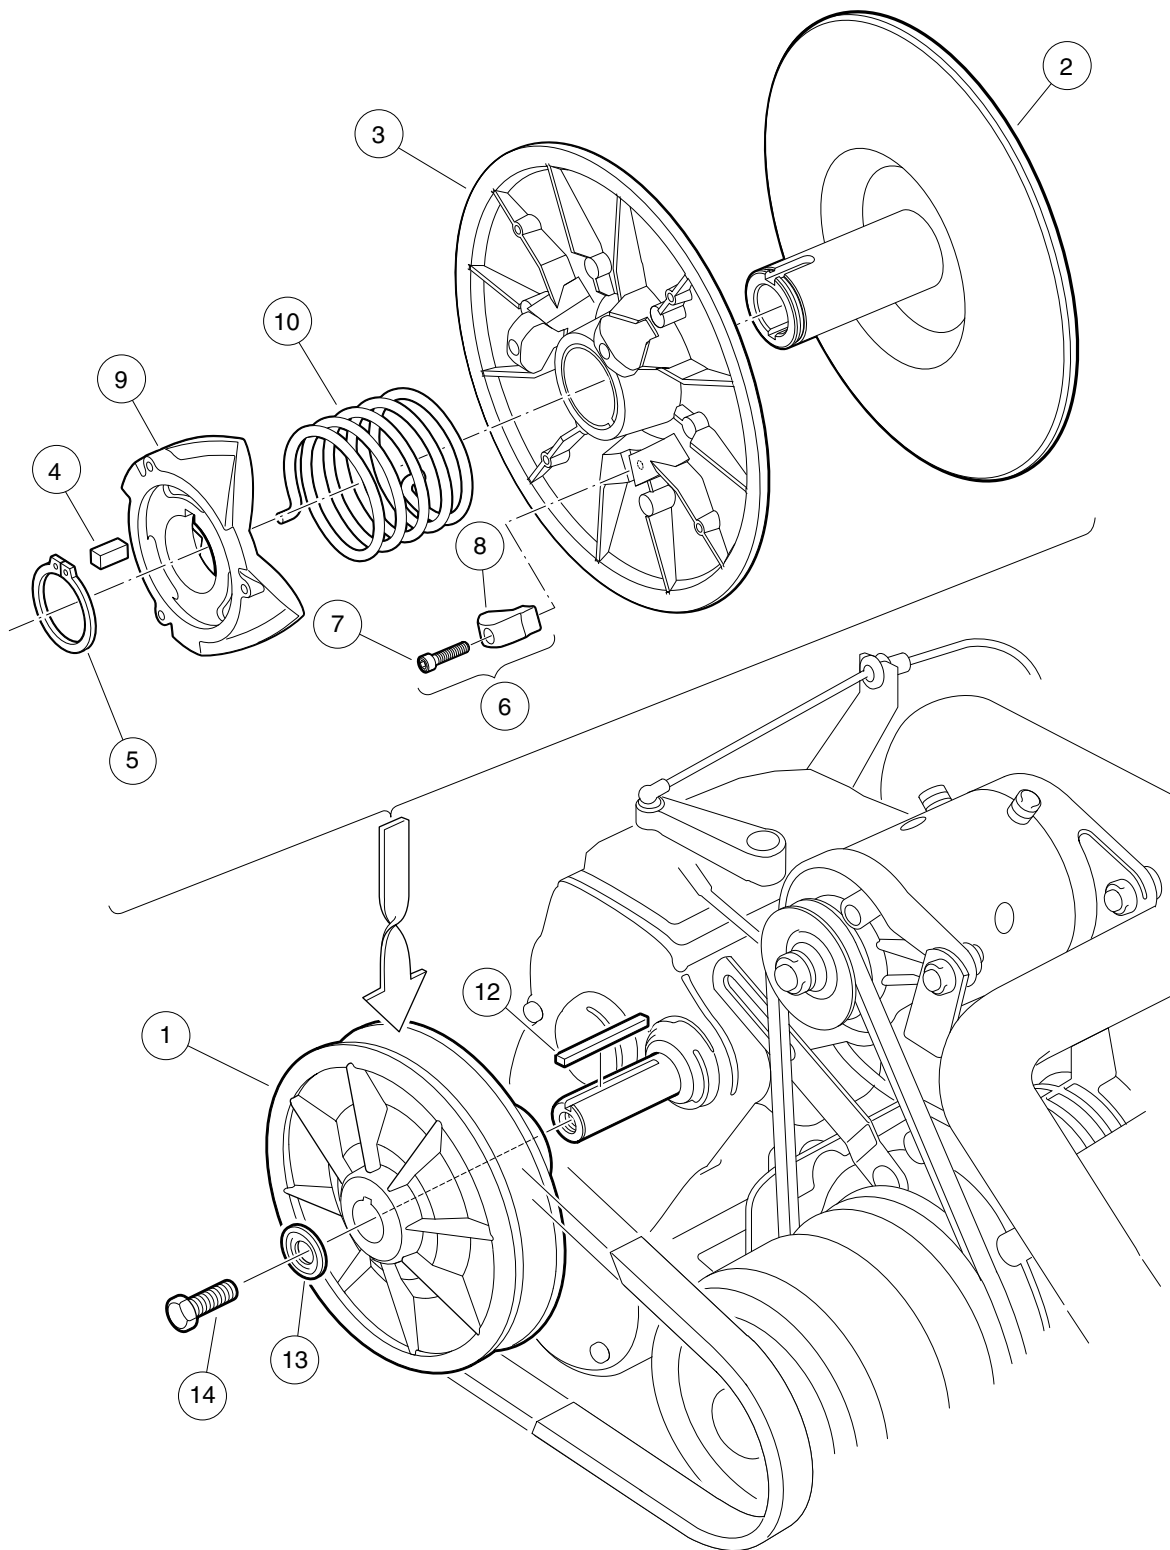

000219-001

DRIVEN CLUTCH

ITEM	PART NO.	DESCRIPTION	QTY	10	G
		1 2 3 4			
1	<u>101834001</u>	Assembly, Driven Clutch (includes items 2 through 10)	1		
2	<u>1014070</u>	Fixed Face Assy, Driven Clutch	1		
3	<u>1014072</u>	Movable-Face Assembly with Bushing	1		
4	<u>1014078</u>	Key, Driven Clutch	1		
5	<u>1014080</u>	Ring, Retaining	1		
6	<u>1014454</u>	Kit, Driven Clutch Button (includes items 7 and 8)	1		
7	<u>1012836</u>	Screw, #8-32 X 3/4 Socket-Head Cap	3		
8	<u>1014076</u>	Button, Drive	3		
9	<u>1017686</u>	Cam, Driven Clutch	1		
10	<u>101836201</u>	Spring, Driven Clutch, Reversed	1		
11	<u>AM10419</u>	Kit, Clutch Repair (includes items 12 through 14)	1		
12	<u>101833401</u>	Key, 3/16 Sq X 1.50"	1		
13	<u>102155801</u>	Washer, Driven Clutch	1		
14	<u>102242101</u>	Screw, 5/16-18 X 3/4 Hex-Head with Patch	1		


10

G

UNITIZED TRANSAXLE AND FORWARD/REVERSE SHIFTER

11

G

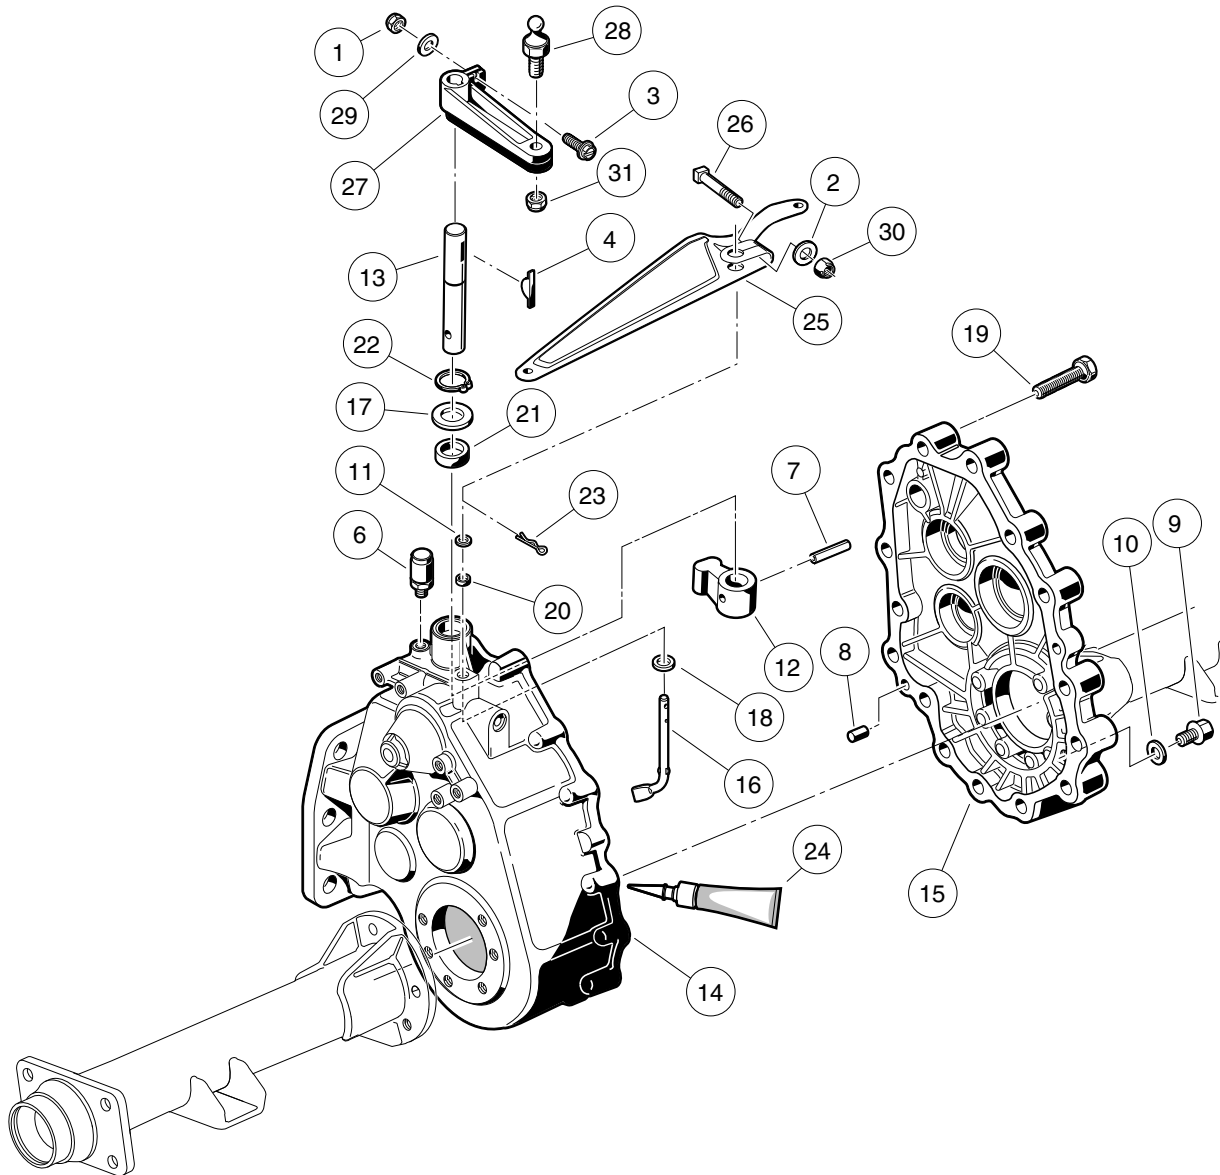


000220-002

UNITIZED TRANSAXLE – GEAR CASES AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013061</u>	Locknut, #10-32 Nylon Insert	1
2	<u>1014007</u>	Washer, 1/4 Flat	1
3	<u>1017082</u>	Screw, #10-32 X 0.75, Hex-Head Machine	1
4	<u>1017231</u>	Key, Woodruff	1
5	<u>101833601</u>	Transaxle, 11.77 Ratio (includes items 6 through 24)	1
6	<u>1012711</u>	Breather	1
7	<u>1012752</u>	Roll Pin	1
8	<u>1012896</u>	Pin, Dowel	2
9	<u>1013760</u>	Fill Plug	2
10	<u>1016432</u>	Gasket, Drain Plug	1
11	<u>1016513</u>	Washer, M6 Flat	1
12	<u>101890101</u>	Lever, Change	1
13	<u>101890201</u>	Shaft - Change	1
14	<u>101890501</u>	Gear Case (driver side)	1
15	<u>101890601</u>	Gear Case (passenger side)	1
16	<u>101891301</u>	Arm Pivot	1
17	<u>101892901</u>	Washer	1
18	<u>101893801</u>	Washer	1
19	<u>101926901</u>	Screw, M8-1.25 X 40mm Hex-Head	15
20	<u>101927101</u>	Seal, Oil	1
21	<u>101927201</u>	Seal, Oil	1
22	<u>101927301</u>	Snap Ring	1
23	<u>101928601</u>	Pin, Cotter	1
24	<u>101928701</u>	Liquid Gasket (Transaxle case)	1
25	<u>101834801</u>	Arm, Governor	1
26	<u>101886101</u>	Screw, 1/4-20 X 1.00 Square-Head	1
27	<u>102515401</u>	Lever, Transmission Shift	1
28	<u>102526201</u>	Stud, Thread, 1/4-28	1
29	<u>183</u>	Washer, #10 Type A Flat	1
30	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	1
31	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1
Note: Unitized transaxle component listings span several pages.			

11

G

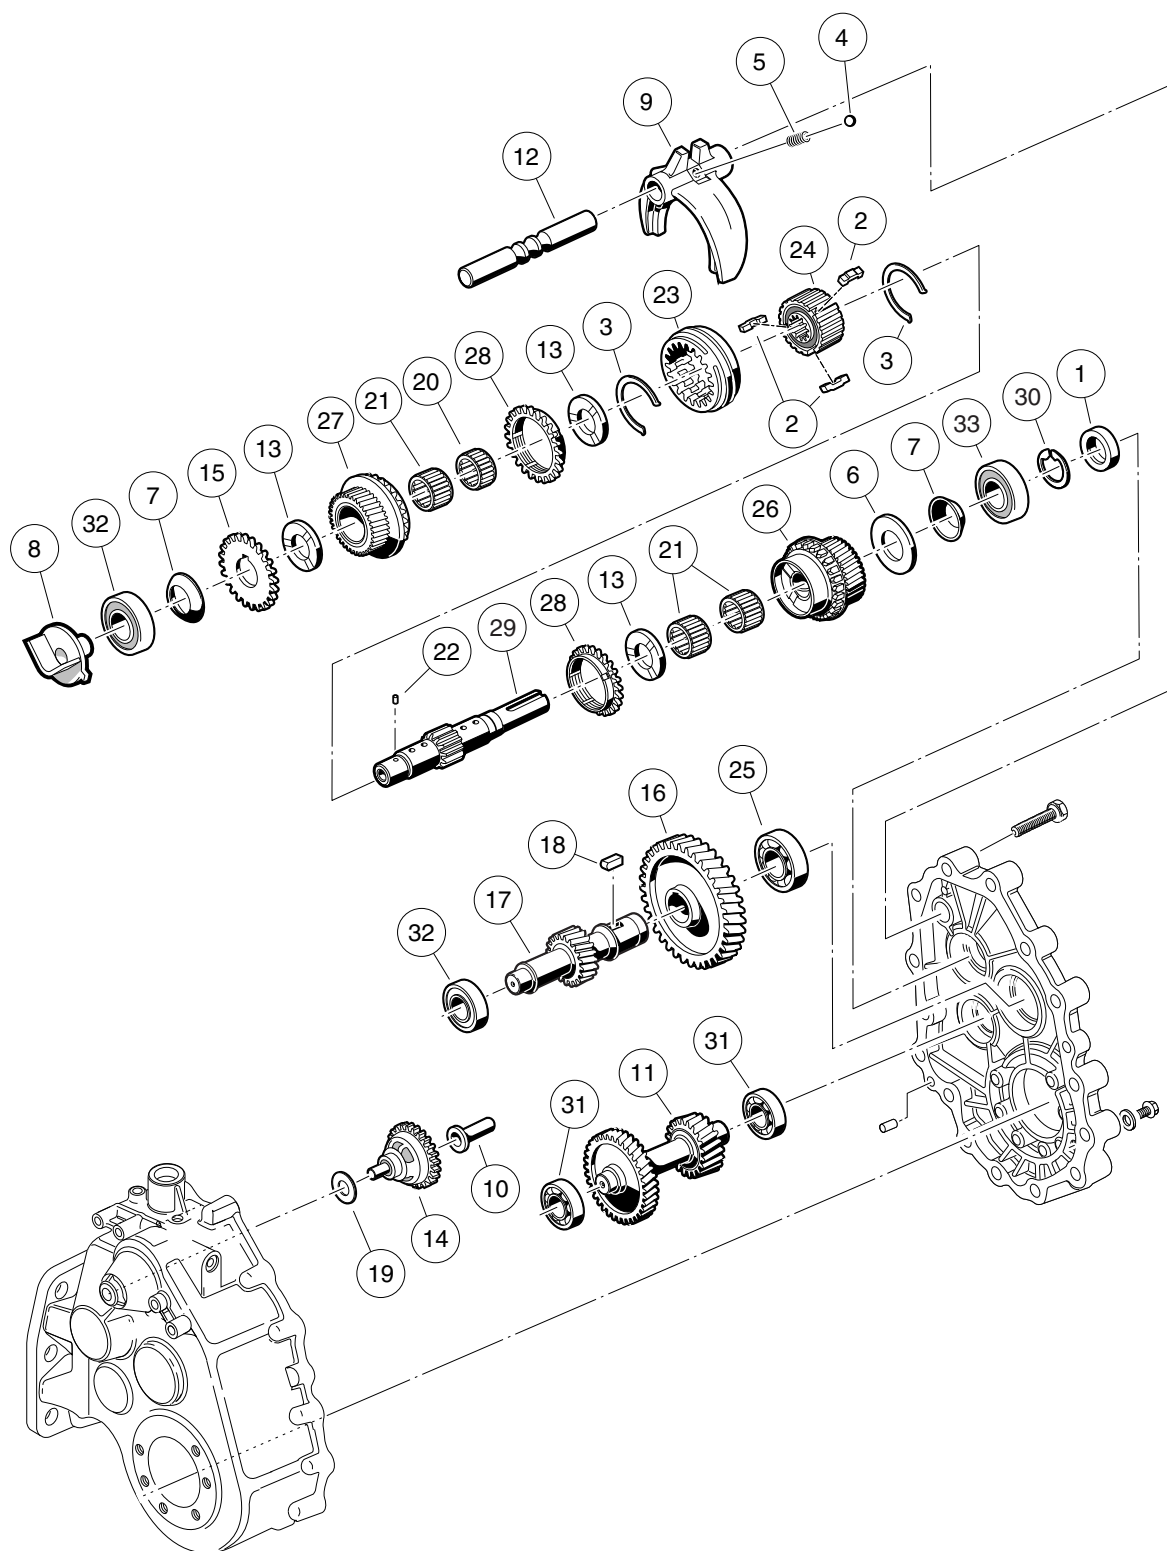


000221-001

TRANSAXLE – GASOLINE VEHICLES, TRANSMISSION AND GEAR REDUCTION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012714</u>	Oil Seal	1
2	<u>1012740</u>	Synchro Insert	3
3	<u>1012741</u>	Synchro Spring	2
4	<u>1012747</u>	Shifter Ball	1
5	<u>1012748</u>	Shifter Spring	1
6	<u>1016337</u>	Washer, Thrust	1
7	<u>1016338</u>	Washer, Spring	2
8	<u>101889401</u>	Guide	1
9	<u>101890001</u>	Fork - Shift	1
10	<u>101891601</u>	Sleeve, Governor	1
11	<u>101891901</u>	Gear, Cluster	1
12	<u>101892001</u>	Rod, Shift	1
13	<u>101892201</u>	Plate, Thrust	3
14	<u>101892301</u>	Governor Assembly	1
15	<u>101892401</u>	Gear, Spur	1
16	<u>101892501</u>	Gear, Helical (61 Tooth)	1
17	<u>101892601</u>	Gear, Helical (17 Tooth)	1
18	<u>101893201</u>	Key Sunk	1
19	<u>101893901</u>	Washer	1
20	<u>101927501</u>	Needle Bearing	1
21	<u>101927601</u>	Needle Bearing	3
22	<u>101927701</u>	Pin, .116" Dia X 0.264 Dowel	1
23	<u>101927901</u>	Sleeve, Synchro	1
24	<u>101928001</u>	Hub, Synchro Clutch	1
25	<u>101928101</u>	Bearing, Ball	1
26	<u>101980801</u>	Gear Assembly, 16-Degree Synchro (25 Tooth)	1
27	<u>101980901</u>	Gear Assembly, 16-Degree Rear Synchro (28 Tooth)	1
28	<u>101981001</u>	Ring, 16-Degree Synchronizer	2
29	<u>102453001</u>	Shaft, Trans, with Circlip	1
30	<u>102453101</u>	Circlip	1
31	<u>7335</u>	Bearing	2
32	<u>AM10080</u>	Bearing, Ball, Sealed	2
33	<u>AM10081</u>	Bearing, Ball, Sealed	1
Note: Items listed on this page are components of the unitized transaxle.			

11
G

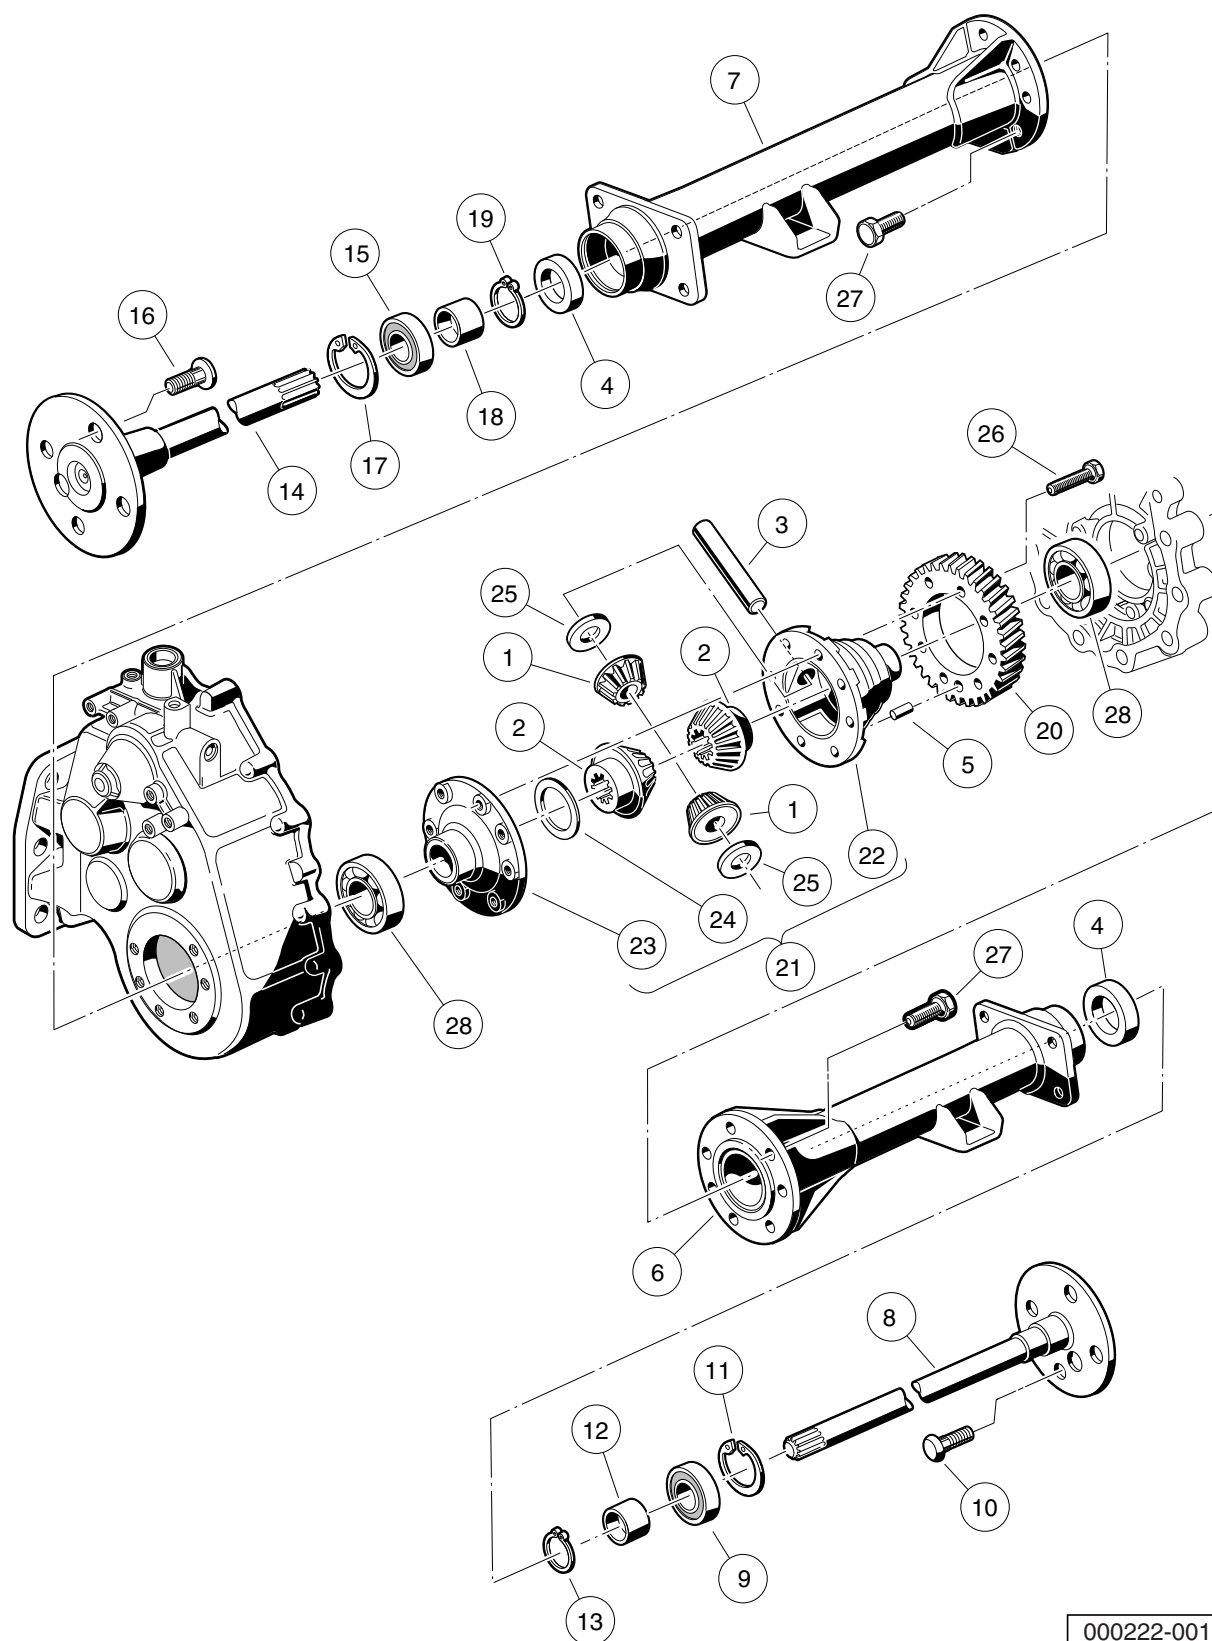


000222-001

TRANSAXLE – GASOLINE VEHICLES, DIFFERENTIAL AND AXLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013770</u>	Differential Idler Gear	2
2	<u>1013771</u>	Gear, Differential	2
3	<u>1013772</u>	Pin, Differential	1
4	<u>1013794</u>	Axle Shaft Oil Seal	2
5	<u>1014193</u>	Dowel Pin	1
6	<u>101890901</u>	Pipe	1
7	<u>101891001</u>	Pipe	1
8	<u>101891401</u>	Axle Assembly, Passenger Side (includes items 9 through 13)	1
9	<u>1011291</u>	Outer Axle, Tube Bearing	1
10	<u>1013787</u>	Lug Stud	4
11	<u>1013792</u>	Circlip Type C	1
12	<u>1014207</u>	Bushing	1
13	<u>1016672</u>	Retaining Ring	1
14	<u>101891501</u>	Axle Assembly, Driver-Side (includes items 15 through 19)	1
15	<u>1011291</u>	Outer Axle, Tube Bearing	1
16	<u>1013787</u>	Lug Stud	4
17	<u>1013792</u>	Circlip Type C	1
18	<u>1014207</u>	Bushing	1
19	<u>1016672</u>	Retaining Ring	1
20	<u>101892701</u>	Gear, Helical	1
21	<u>101910501</u>	Kit, Differential Gear Case (includes items 22 through 25)	1
22	<u>1013768</u>	Differential Gear Case, Left-Hand	1
23	<u>1013769</u>	Differential Gear Case, Right-Hand	1
24	<u>1013773</u>	Plate, Thrust (Differential Gear)	1
25	<u>1013774</u>	Plate, Thrust (Idler Gear)	2
26	<u>101928301</u>	Screw, M8-1.25 X 35mm Hex Head	8
27	<u>102031901</u>	Bolt, M10 X 1.5 X 30mm	14
28	<u>7330</u>	Inner Axle Tube Bearing	2

11
G

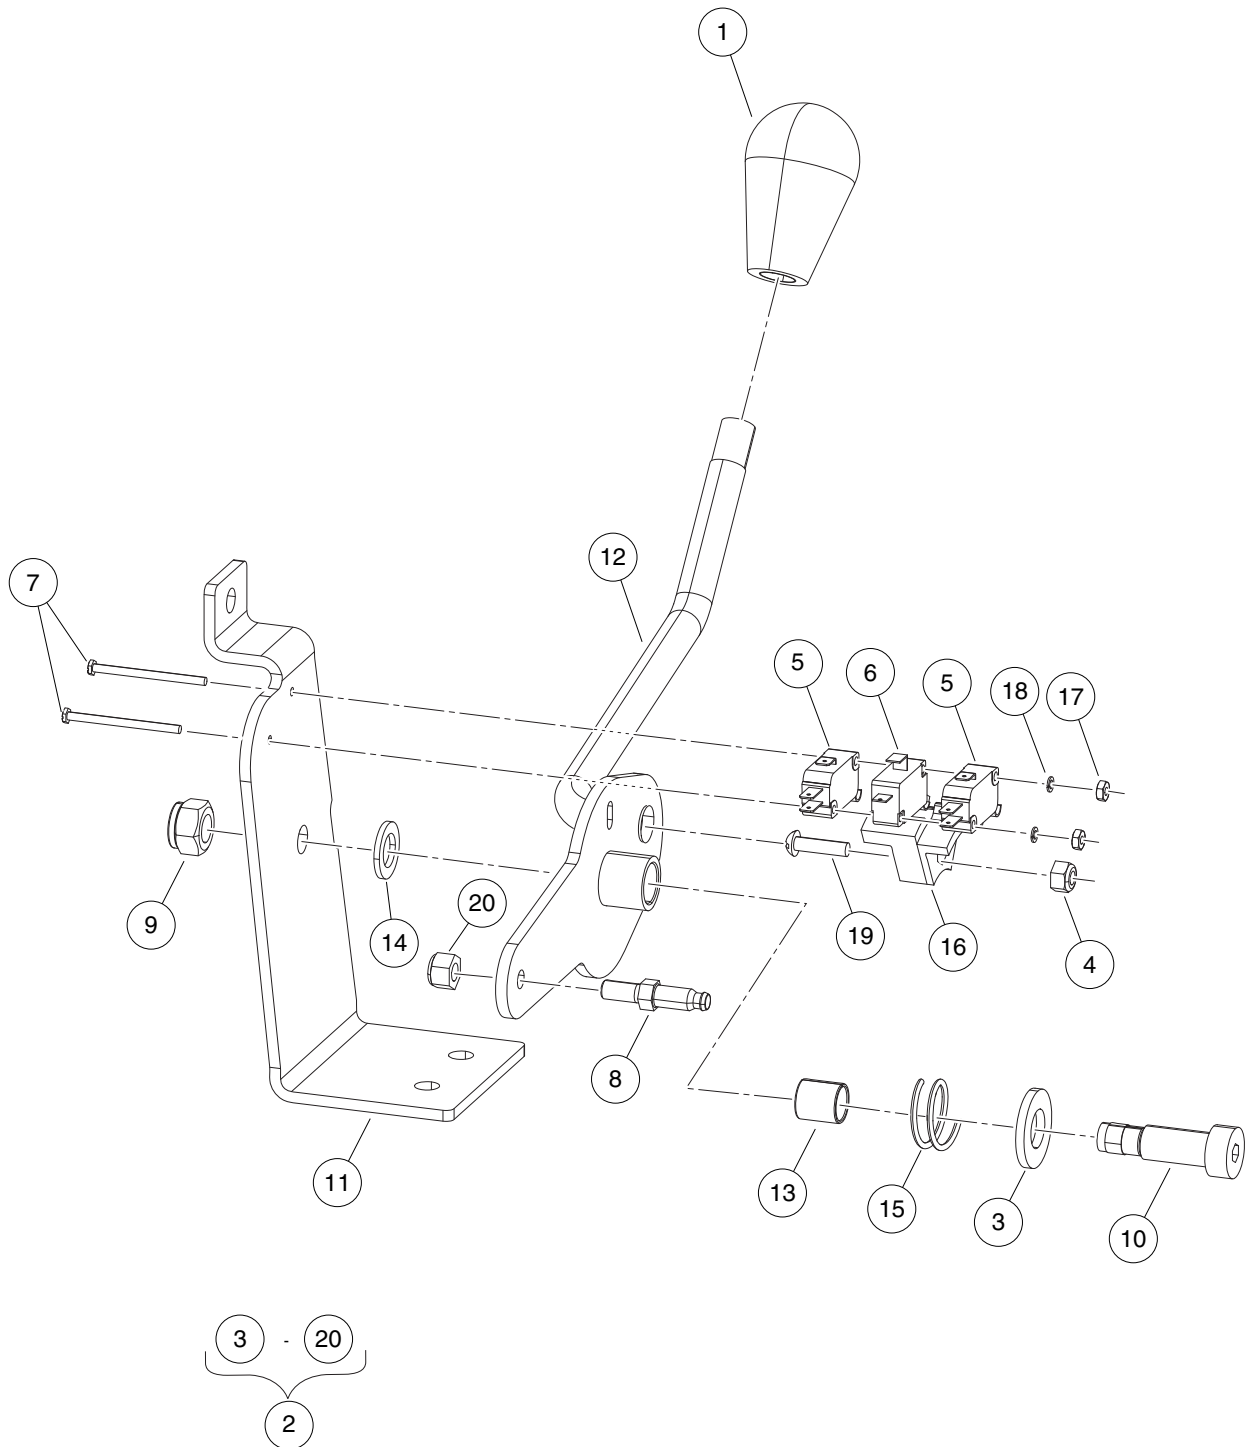

000563-001

FORWARD/REVERSE SHIFTER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102376001</u>	Knob, Fnr	1
2	<u>102969901</u>	Asm, Shifter, FNR (includes items 3 through 20)	1
3	<u>1010028</u>	Washer, 1/2 Type A Flat	1
4	<u>1013061</u>	Locknut, #10-32 Nylon Insert	1
5	<u>1014807</u>	Switch, Limit	2
6	<u>1014808</u>	Switch, Limit	1
7	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2
8	<u>102526201</u>	Stud, Thread, 1/4-28	1
9	<u>102616701</u>	Locknut, M10x1.5 Nylon Insert	1
10	<u>102684602</u>	Shoulder Bolt, M12 X 25.0	1
11	<u>102969401</u>	Bracket, Shifter, FNR	1
12	<u>102969801</u>	Weldment, Shift Lever, FNR	1
13	<u>103173301</u>	Bushing, Greaseless, 12mm Id	1
14	<u>103177401</u>	Washer, Thrust, Shifter, FNR	1
15	<u>103192701</u>	Spring, Comp, .97 Od X.75 L	1
16	<u>103369501</u>	Cam, Limit Switch, Fnr Shifter	1
17	<u>8057</u>	Nut, #4-40 Hex Machine	2
18	<u>8058</u>	Lockwasher, #4 Split	2
19	<u>8104</u>	Screw, #10-32 X .75 Rd Hd Mach	1
20	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1

11

G


11

G

ELECTRICAL SYSTEM – ELECTRIC VEHICLES

12

E

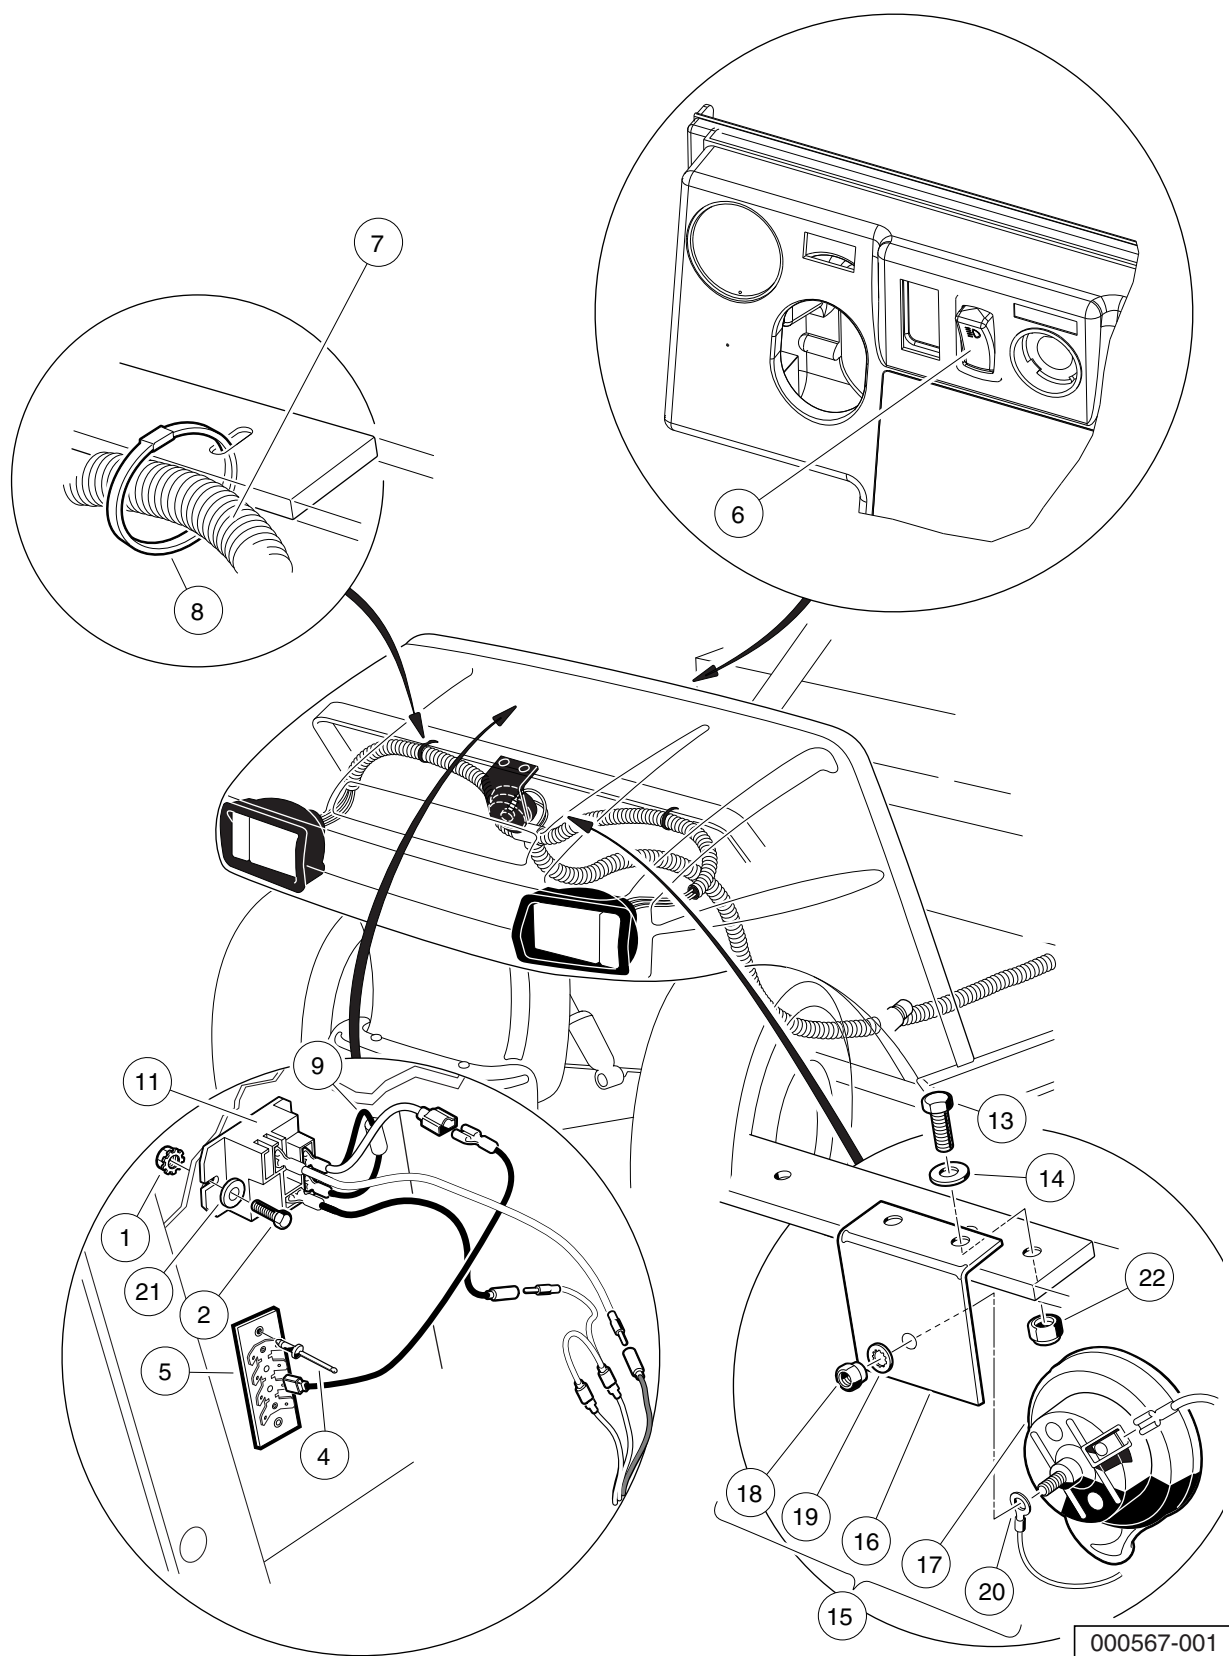


HEADLIGHT AND HORN ELECTRICAL COMPONENTS


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011229</u>	Locknut, #6-32 Whiz	2
2	<u>1017853</u>	Screw, #6-32 X 0.75 Hex-Head Machine	2
3	N/A	Headlight Only, IQ Plus (includes items 4 through 8)	1
4	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2
5	<u>1016356</u>	Terminal Block with Insulator	1
6	<u>102869401</u>	Switch, Rocker, Light	1
7	<u>103255701</u>	Wire Harness, Hd Lght, Ca, Ele	1
8	<u>8990</u>	Tie Wrap, 8" Nylon	8
9	<u>101914401</u>	Assembly, Voltage Suppressor	1
10	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes items 11 and 12)	1
11	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
12	N/A	Kit, Relay, 48v 30a Instrns	1
13	<u>304</u>	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
14	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
15	<u>4029</u>	Horn (includes items 16 through 20)	1
16	<u>1011825</u>	Horn Bracket	1
17	<u>1014530</u>	Horn, 12-VDC	1
18	<u>101955101</u>	Nut, M6 Hex	1
19	<u>7820</u>	Washer, 5/16 Internal-Tooth	1
20	N/A	5/16 Ring Term.	1
21	<u>7591</u>	Washer, #6 Flat	2
22	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2

12

E

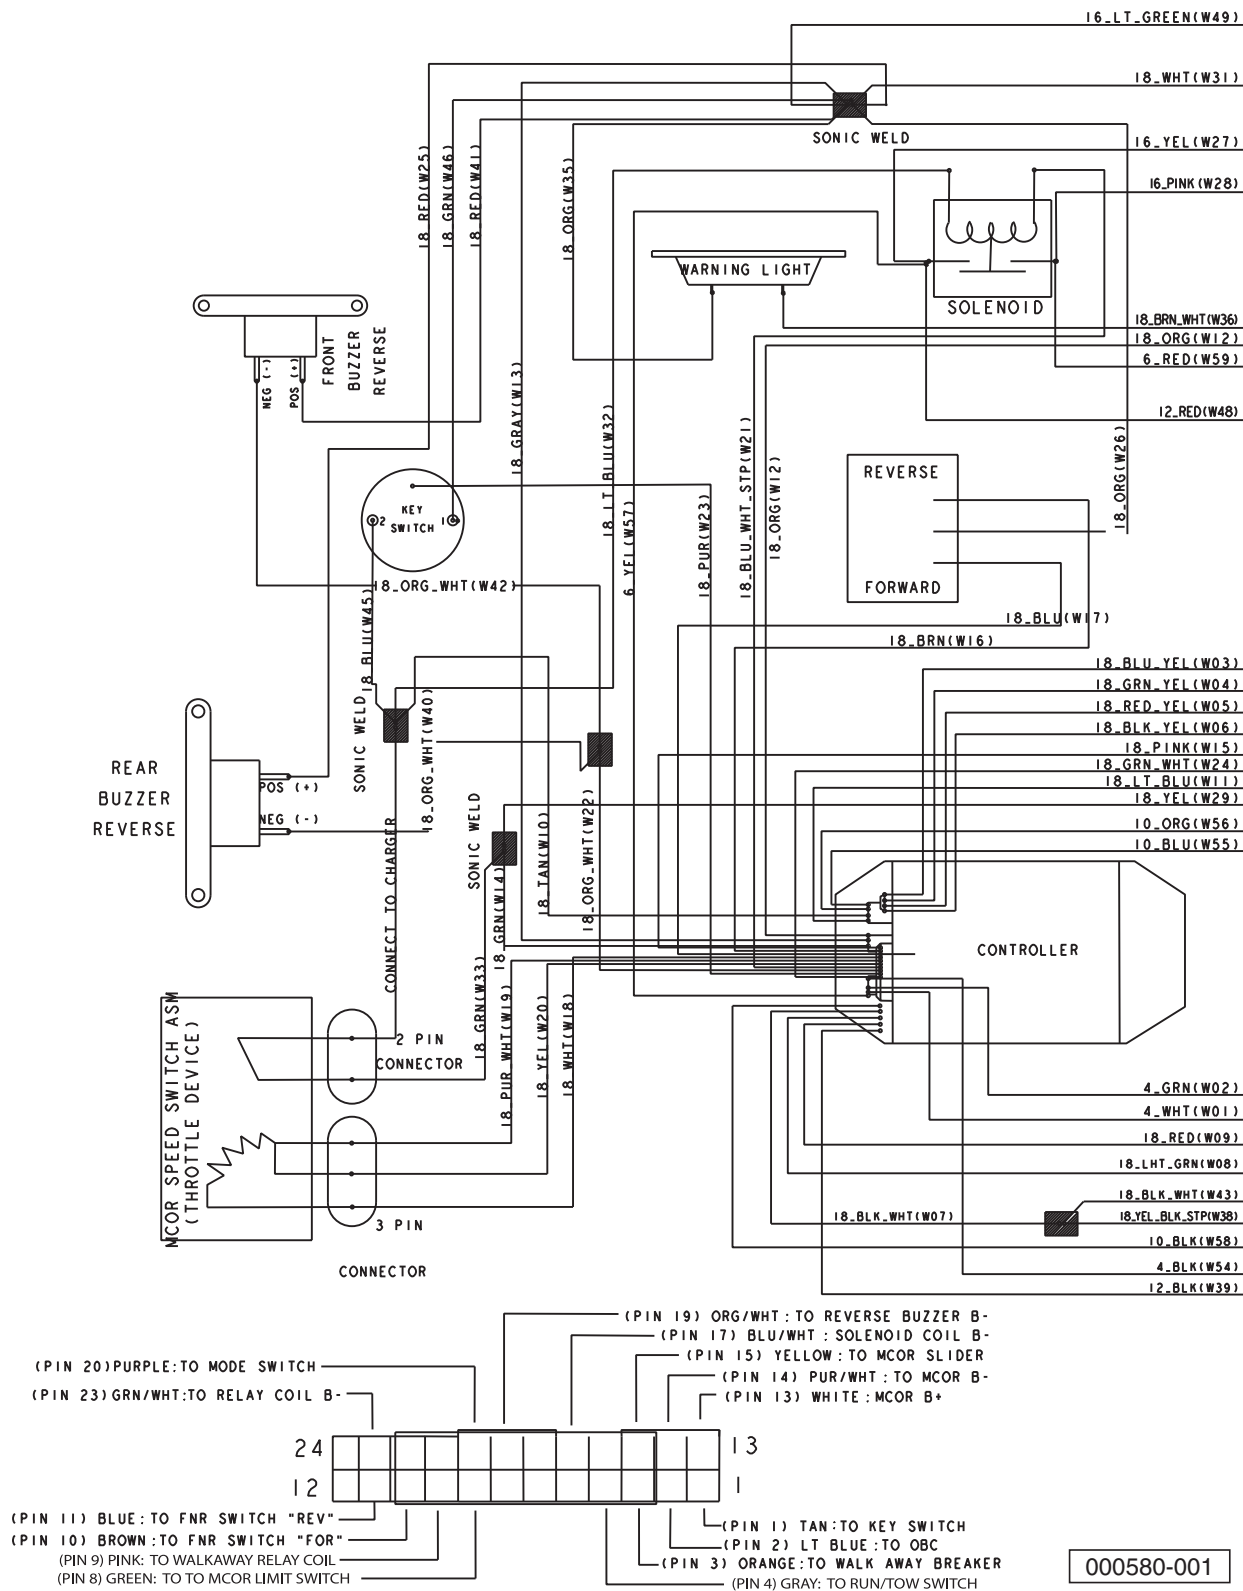

000580-001

 


See previous two pages for illustration.

WIRING – IQ PLUS ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101889801</u>	Shaft Governor Gear	1
2	<u>102845501</u>	Harness, Power, Stretch IQ Plus (includes items 3 through 9)	1
3	N/A	Asm, #4 Grn Wire, 89"	1
4	N/A	Asm, #4 Wht Wire, 88.5"	1
5	N/A	Asm, #10 Org Wire, 89.5"	1
6	N/A	Asm, #10 Blu Wire, 95.5"	1
7	N/A	Asm, #4 Red Wire, 67.5"	1
8	N/A	Asm, #4 Blk Wire, 57.5"	1
9	<u>8639</u>	Tie Wrap, 11" Nylon	6
10	<u>102938301</u>	Chrgr Harness, Iq Plus, Shelf	1
11	<u>103222001</u>	Asm, Wire Harness, Stretch, Electric	1
Note: Item 1 and 10 not shown.			

12

E

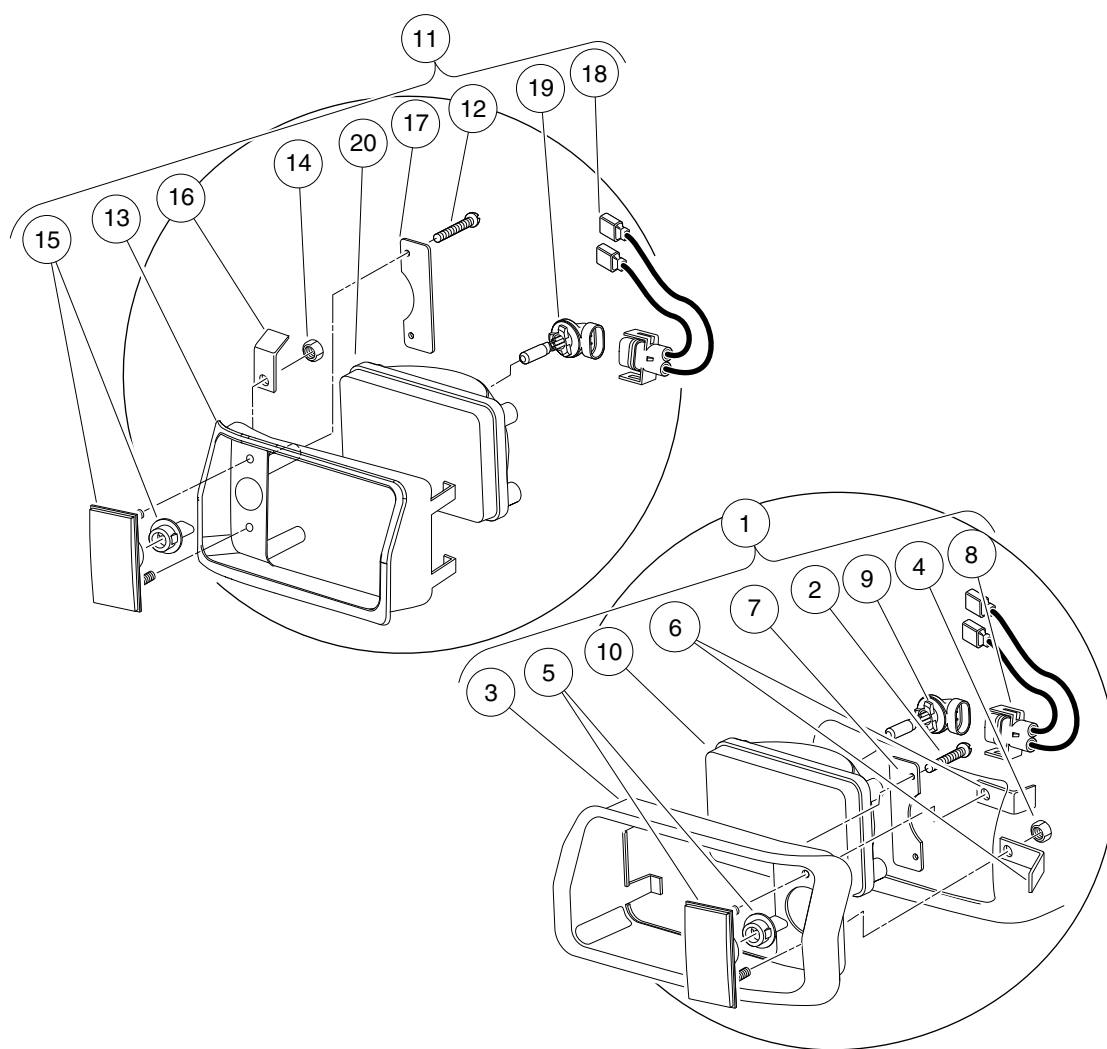


000073-001

HEADLIGHTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101988001</u>	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	1
2	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2
3	<u>1016880</u>	Headlight Bezel, Left	1
4	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
5	<u>1017062</u>	Turn Signal Lens Assy	1
6	<u>1017064</u>	Mounting Bracket	2
7	<u>1017065</u>	Retainer, Headlight	1
8	<u>101987901</u>	Connector Harness Assembly, Headlight	1
9	<u>101988101</u>	Bulb, Headlight	1
10	<u>101988201</u>	Lens, Headlight	1
11	<u>101988002</u>	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	1
12	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2
13	<u>1016879</u>	Headlight Bezel, Right	1
14	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
15	<u>1017062</u>	Turn Signal Lens Assy	1
16	<u>1017064</u>	Mounting Bracket	2
17	<u>1017065</u>	Retainer, Headlight	1
18	<u>101987901</u>	Connector Harness Assembly, Headlight	1
19	<u>101988101</u>	Bulb, Headlight	1
20	<u>101988201</u>	Lens, Headlight	1

12

E

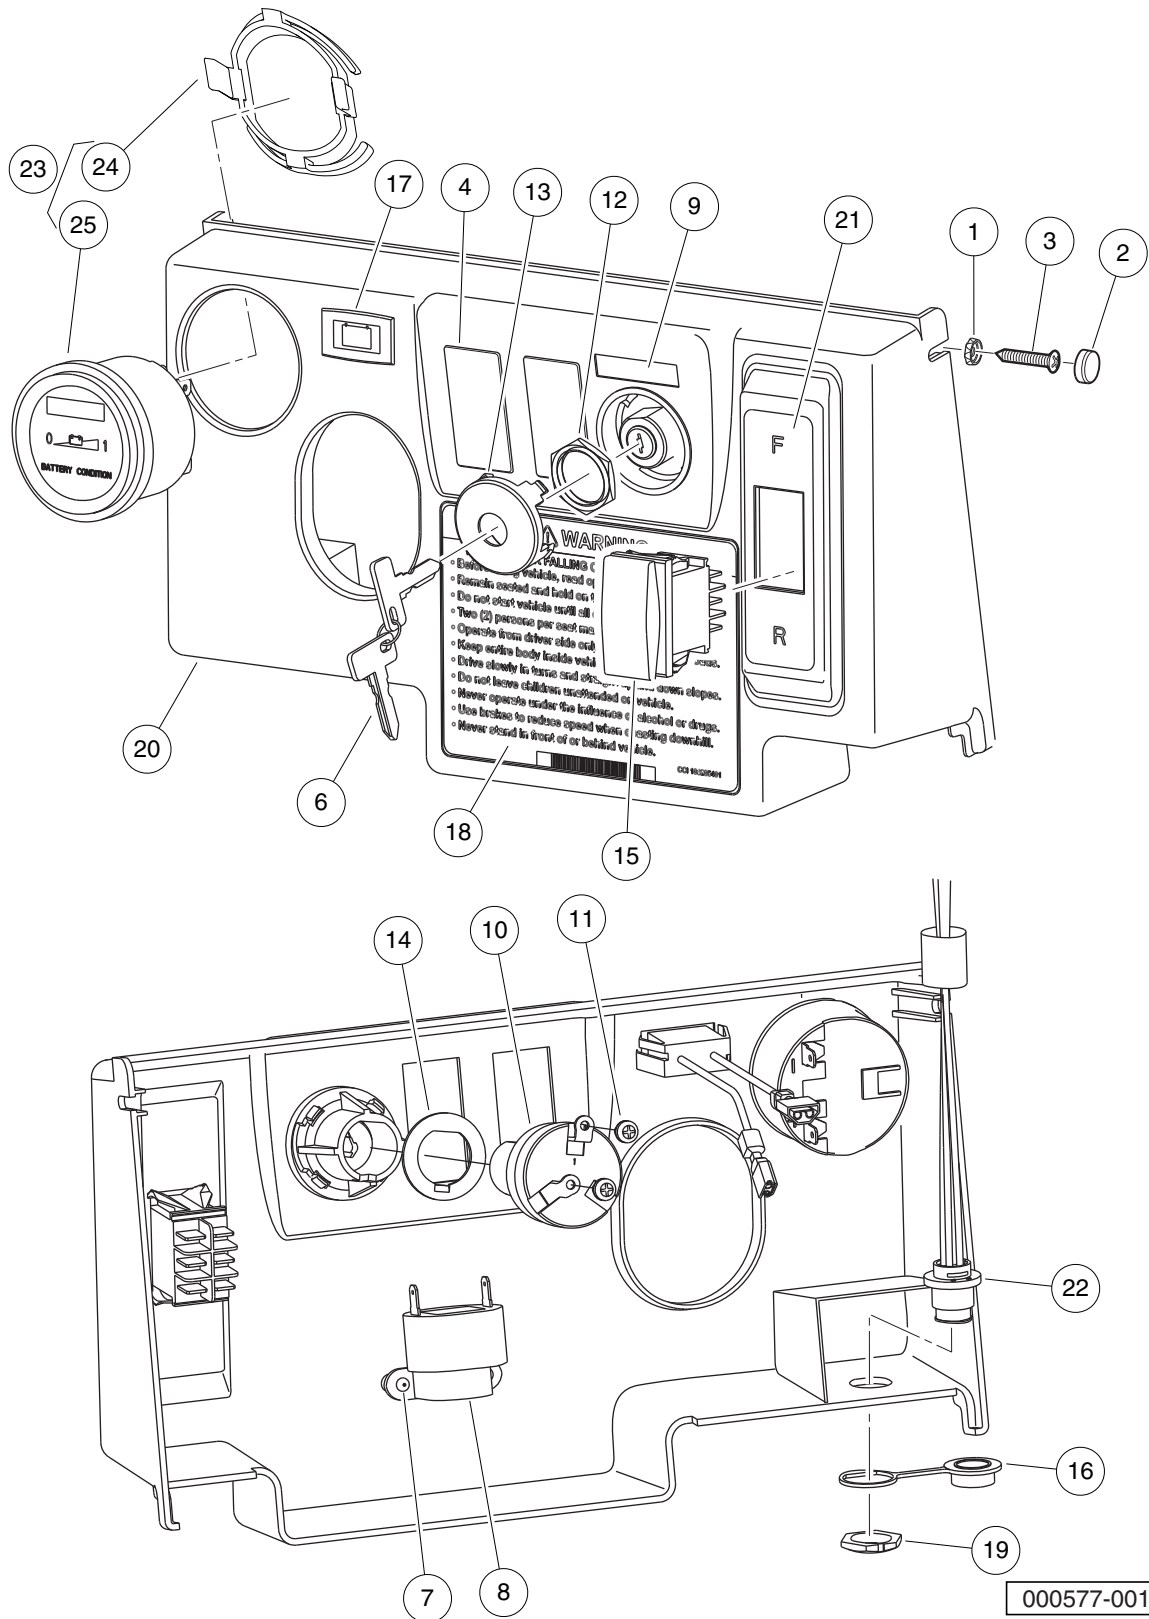


000577-001

INSTRUMENT PANEL WITH ELECTRICAL COMPONENTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011382	Washer, #10 Pan-Head Screw	2
2	<u>1013494</u>	Cover, Screw Head	2
3	<u>1015528</u>	Screw, #10 x 1-1/4 Phillips Head	2
4	<u>103180101</u>	Cover, Hole, Switch, Rocker	2
5	N/A	Asm, Dash, Elec, BCI (Instrument Panel) (includes items 6 through 23)	1
6	<u>1012505</u>	Keys (set of 2)	1
7	<u>1016849</u>	Screw, #4-24 X 0.33 Pan-Head Machine	2
8	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
9	<u>101825101</u>	Decal, Off/On	1
10	<u>101826201</u>	Key Switch, On/Off	1
11	101830601	Screw and Washer Assembly	5
12	<u>101830701</u>	Nut, Key Switch	1
13	<u>101834502</u>	Cap, Black Key Switch	1
14	<u>101851101</u>	Washer, Key Switch	1
15	<u>101856002</u>	Switch, Rocker, Single-Pole	1
16	<u>102196901</u>	Dust Cap	1
17	<u>102508701</u>	Light, Battery	1
18	102518001	Decal, Operating Instr, Elec	1
19	<u>102572401</u>	Nut, Diagnostic Port, Prec	1
20	<u>102977002</u>	Panel, Dash, Center, Gas (Instrument Panel)	1
21	<u>103210301</u>	Decal, Forward/Reverse, Electric	1
22	<u>103218601</u>	Harness, Diagnostic Port	1
23	<u>103354401</u>	Gauge, Battery Cond Ind, Rnd (includes items 24 and 25)	1
24	<u>103348202</u>	Clip, Bci, Round	1
25	N/A	Battery Condition Indicator Gauge	1

12

E

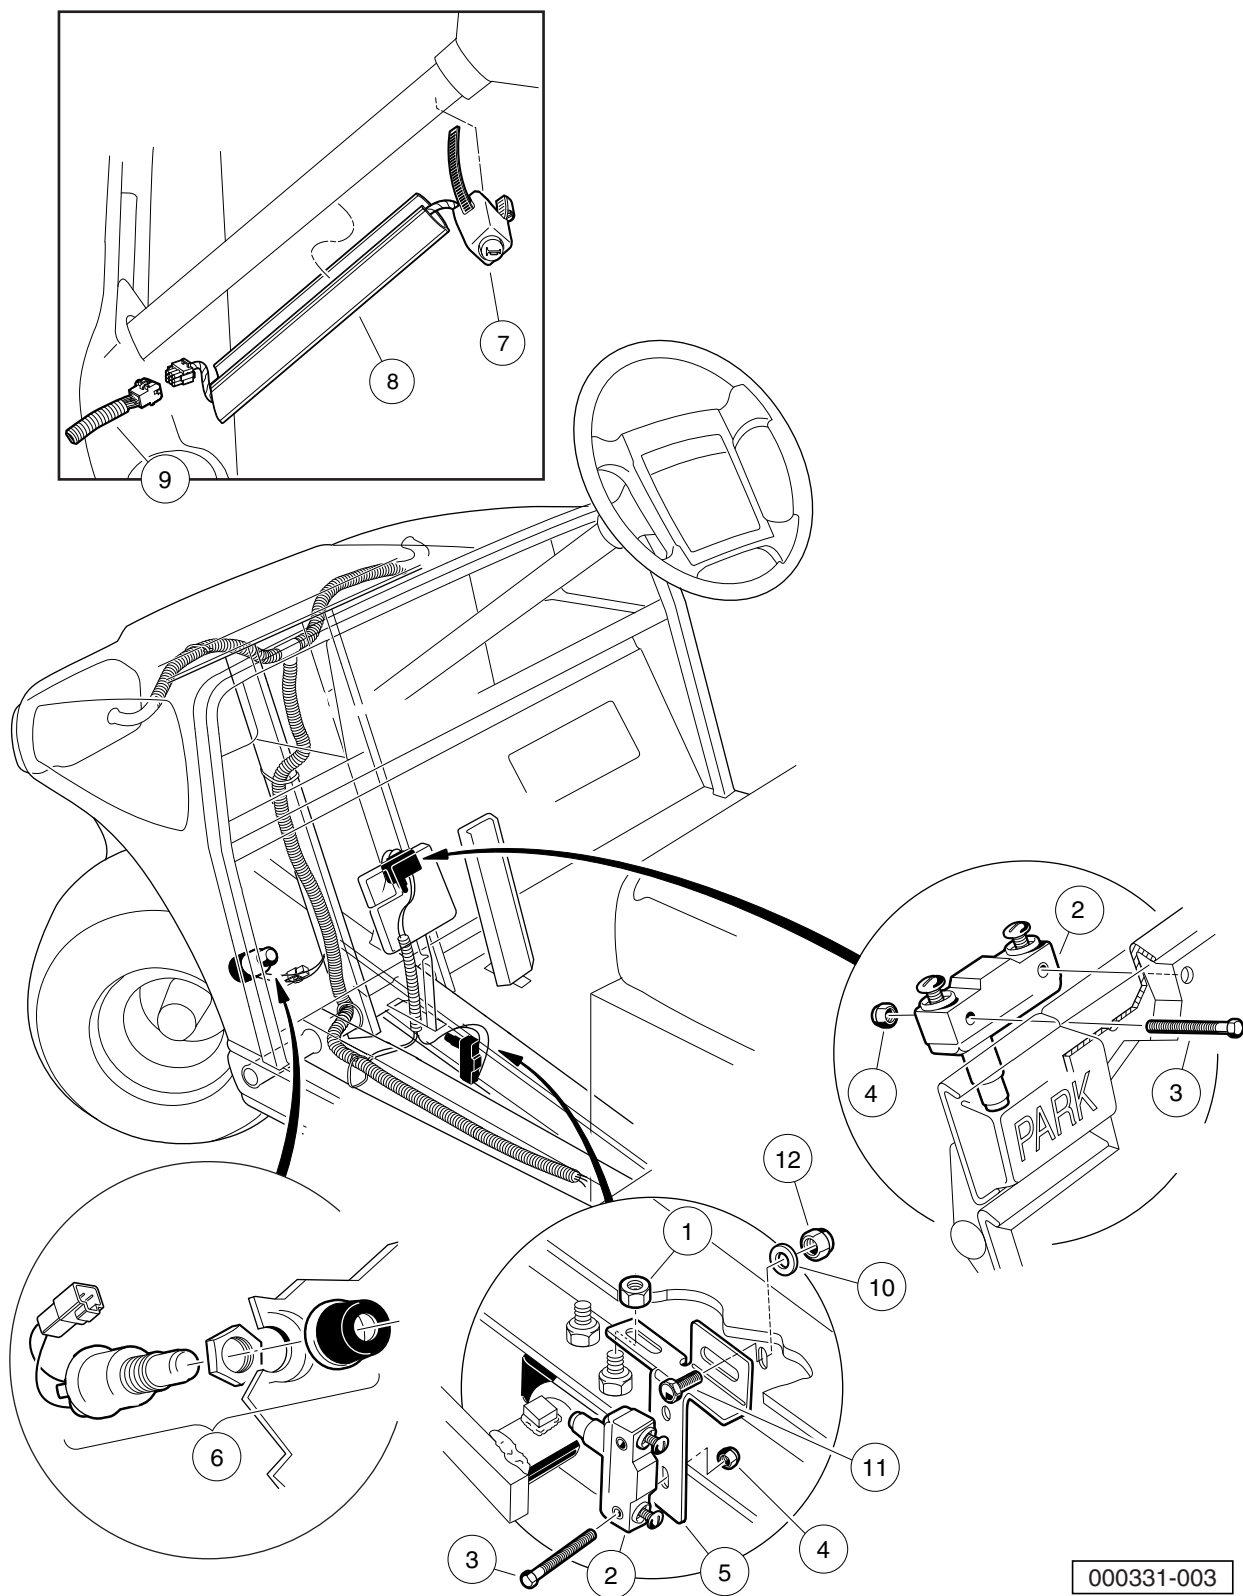


000331-003

HORN AND BRAKE SWITCHES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011280</u>	Locknut, 5/16-18	1
2	<u>1011439</u>	Switch, Limit	2
3	<u>1011557</u>	Screw, #6-32 X 1.00 Hex-Head Machine	4
4	<u>101932201</u>	Locknut, #6-32 Nylon	4
5	<u>101957101</u>	Bracket, Brake Light Switch	1
6	<u>101969701</u>	Horn Button and Wire Assembly	1
7	<u>102517601</u>	Subasm, Horn Button Harness	1
8	<u>102529201</u>	Wire Cover, Steering Column	1
9	<u>103618101</u>	Harness, Jumper, Horn	1
10	<u>1241</u>	Washer, 5/16 Type A Flat	1
11	<u>7173</u>	Screw, 5/16-18 X 0.75 Hex-Head Cap	1
12	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1

12

E

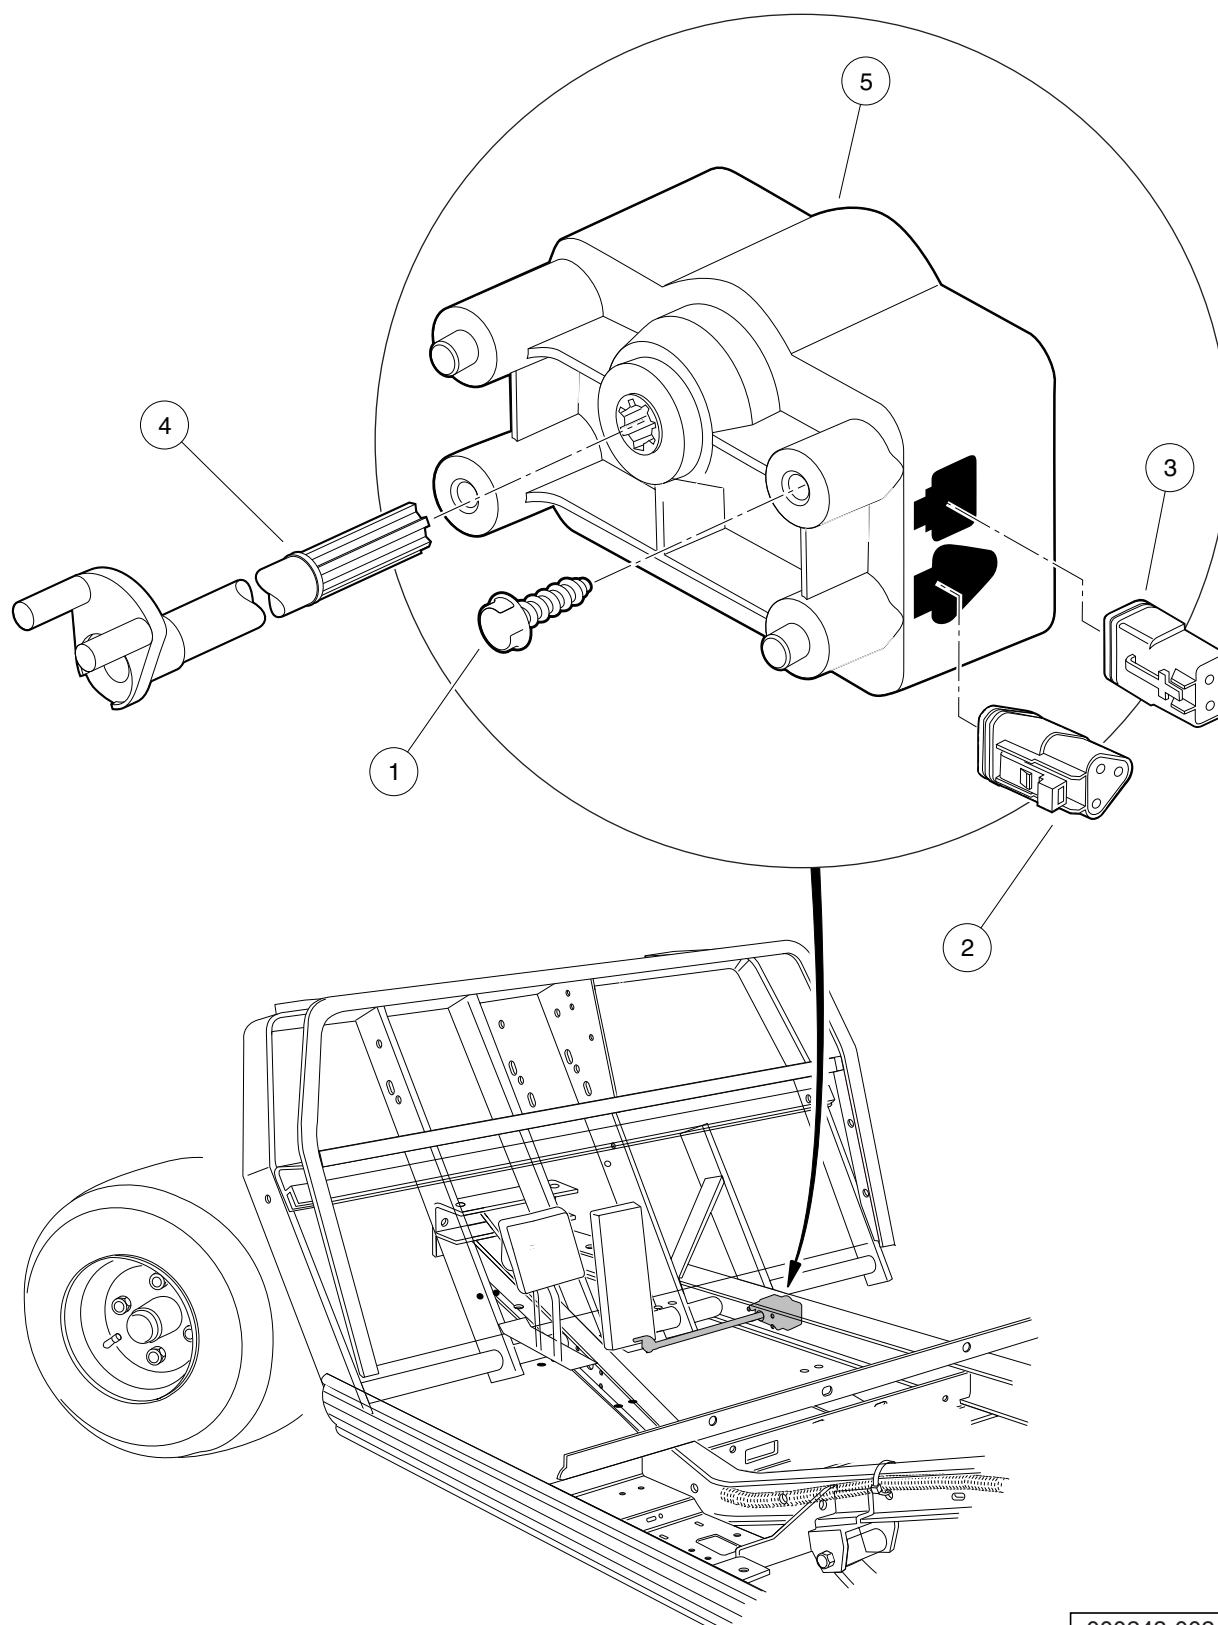


000243-002

MOTOR CONTROLLER OUTPUT REGULATOR (MCOR)

ITEM	PART NO.	DESCRIPTION	QTY	12
		1 2 3 4		
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	2	
2	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1	E
3	<u>101936801</u>	Kit, 2-Pin Wedge Lock	1	
4	<u>102101001</u>	Bar, Drive, Cast	1	
5	<u>102101101</u>	MCOR	1	

12

 E




ELECTRICAL COMPONENTS – IQ PLUS VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Asm, Electrical Component Box (includes items 2 through 18)	1
2	<u>1012528</u>	Nut, M8-1.25 Hex	2
3	<u>1013734</u>	Lockwasher, 8mm Split	2
4	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	2
5	<u>102240501</u>	Bolt, Controller, Terminal	3
6	<u>102440901</u>	Wire Asm, #4 Yellow, 13"	1
7	<u>102769701</u>	Spacer, 2", 1/4-20, Hex	1
8	<u>102774501</u>	Controller, 500 Amp	1
9	<u>102774601</u>	Computer, Onbrd, 8x 6v, 64"	1
10	<u>102774701</u>	Solenoid, 48v	1
11	<u>102817101</u>	Screw, 1/4-20 X .50 Hex Wsh Hd	6
12	<u>102817201</u>	Screw, 1/4-20 X .88 Hex Wsh Hd	4
13	<u>102859501</u>	Screw, M6 X 1 X 20 Ser Hex Flg	2
14	<u>102912801</u>	Plate, Component, Front	1
15	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes items 16 and 17)	1
16	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
17	N/A	Kit, Relay, 48v 30a Instrns	1
18	<u>8990</u>	Tie Wrap, 8" Nylon	5

12

E

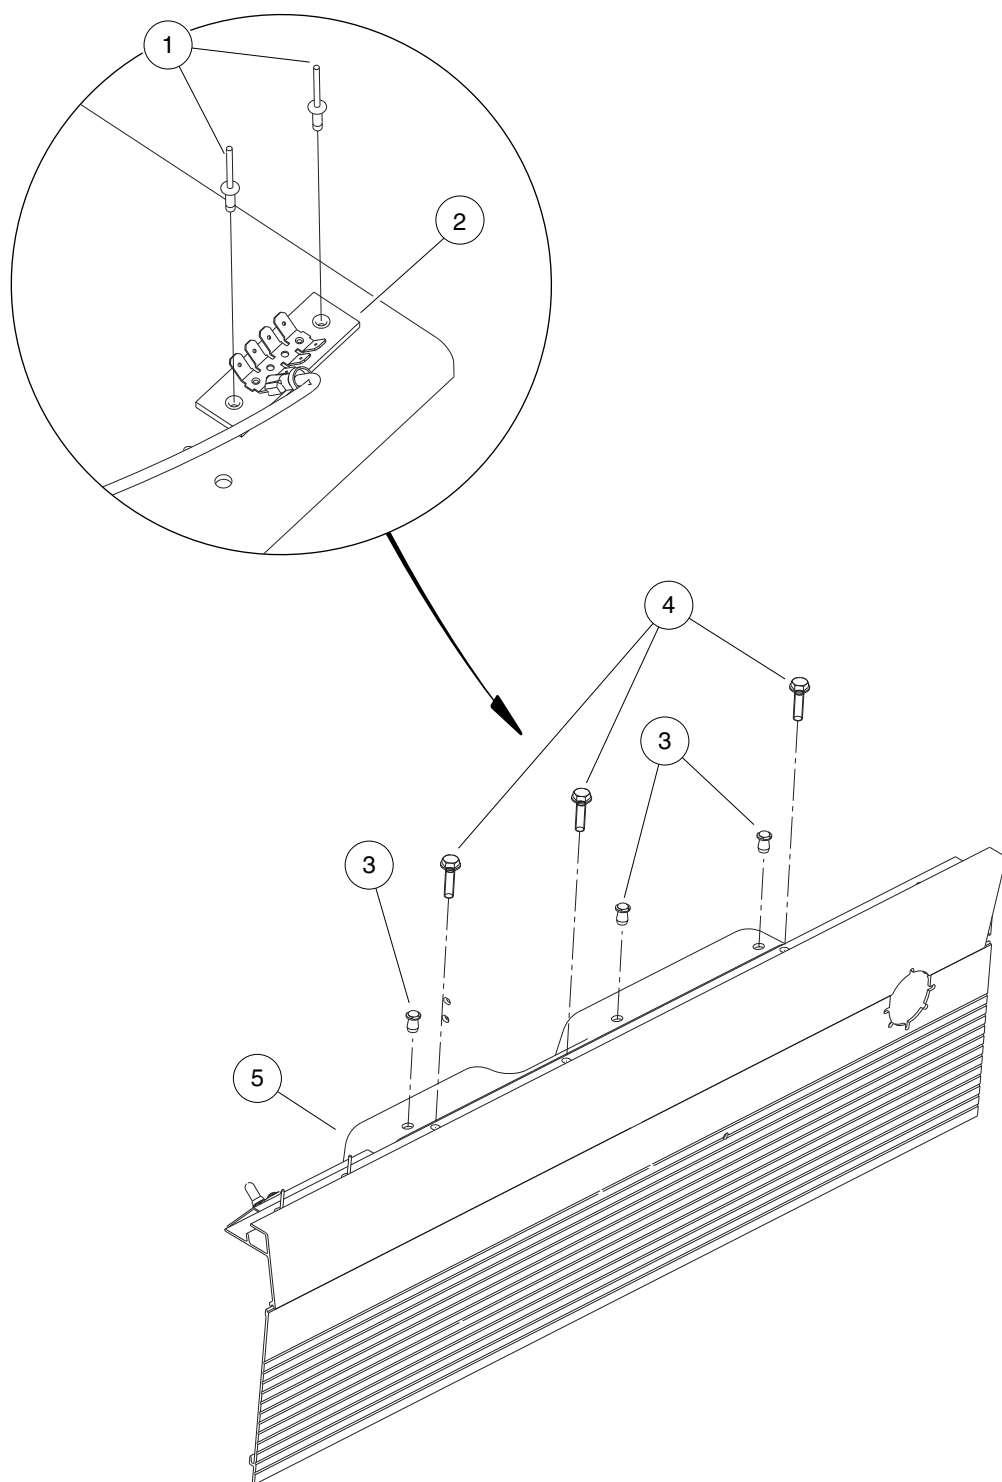


000598-001

ELECTRICAL INSTALLATION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2
2	<u>1016356</u>	Terminal Block with Insulator	1
3	<u>1016967</u>	Blind Rivet, Push Type	3
4	<u>102238001</u>	#10-24 Taptite Screw	3
5	<u>102772402</u>	Cover, Electrical Component, Carryall 6	1
6	<u>8990</u>	Tie Wrap, 8" Nylon	11

12

E

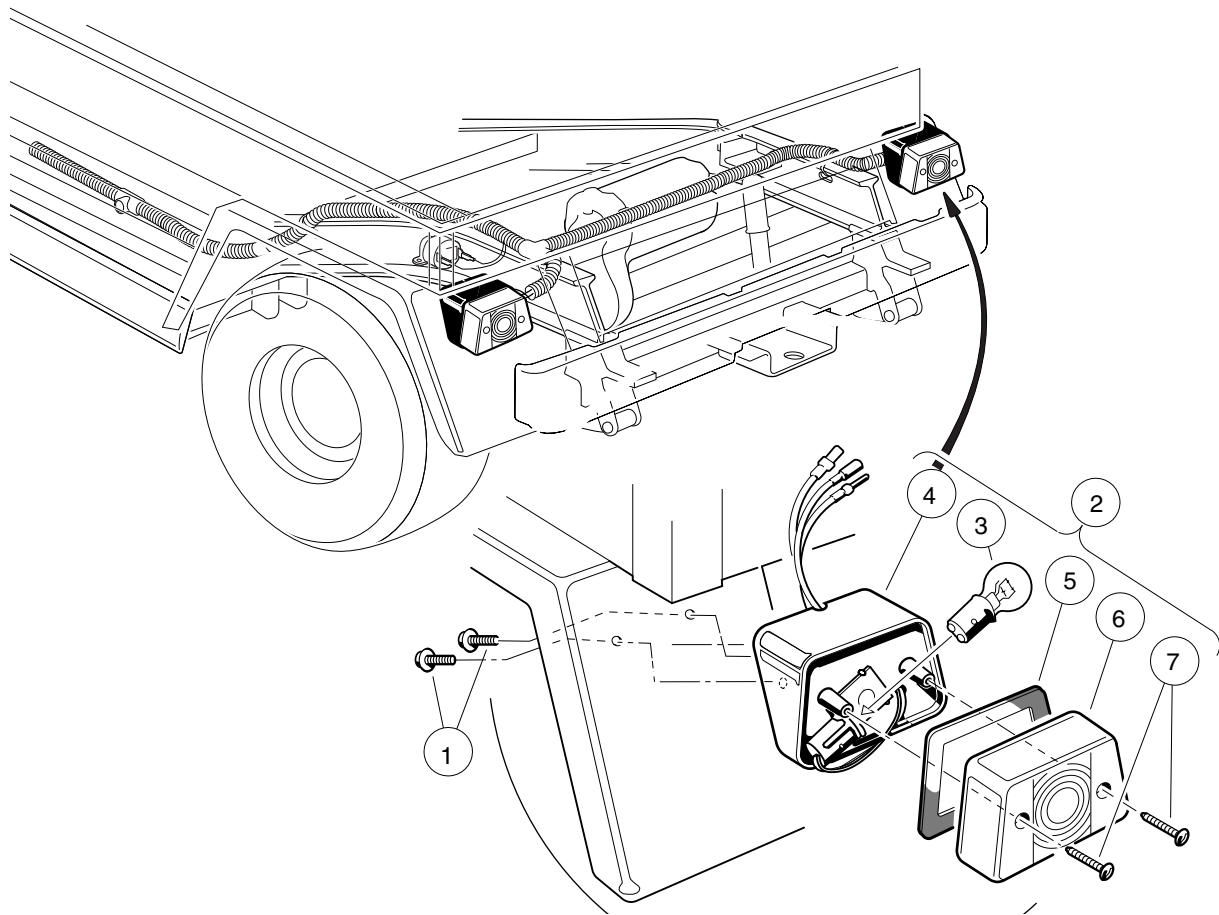


000348-005

TAILLIGHTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	4
2	<u>1016717</u>	Light Assembly, Stop/Taillight (includes items 3 through 7)	2
3	<u>1011582</u>	Taillight Bulb	1
4	N/A	Housing, Taillight	1
5	N/A	Gasket, Taillight	1
6	N/A	Lens, Taillight	1
7	N/A	Screw, Taillight Lens	2

12

E

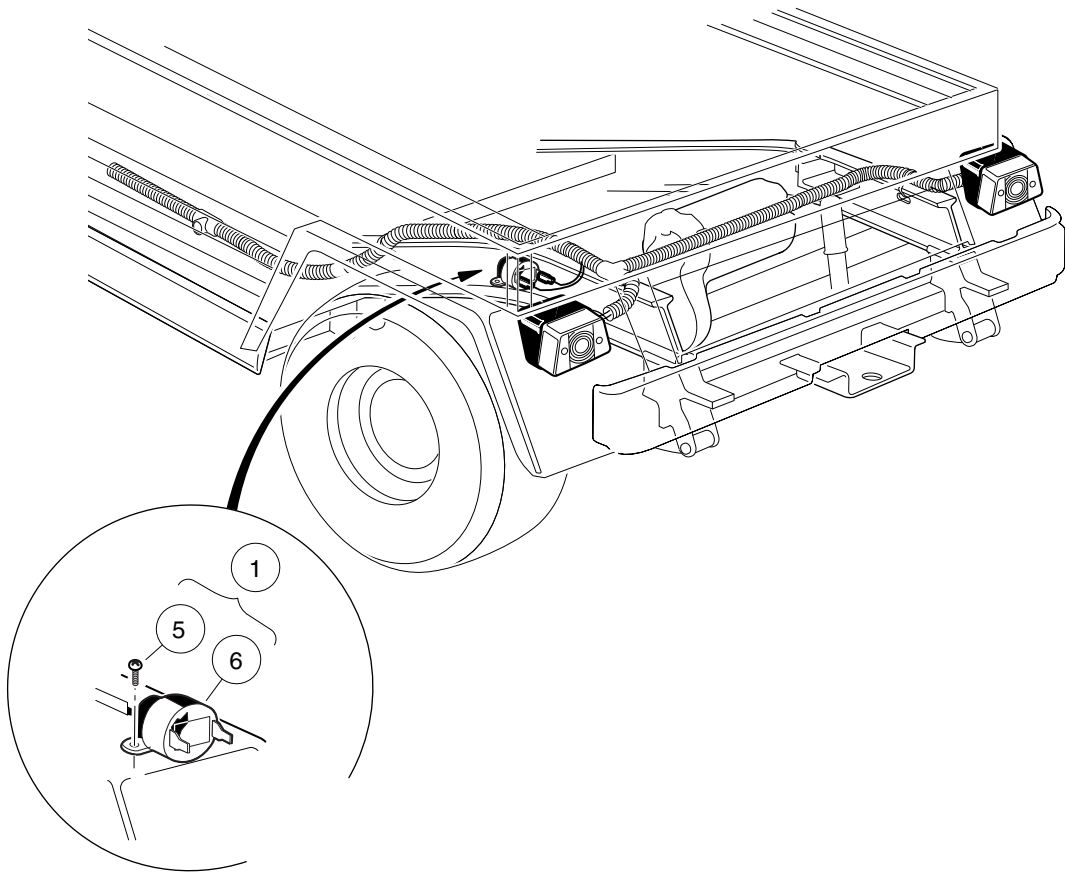


000432-001

REAR REVERSE BUZZER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016859</u>	Kit, Reverse Buzzer (includes items 2 through 10)	1
2	<u>1011229</u>	Locknut, #6-32 Whiz	1
3	<u>1012431</u>	Washer, #4 Flat	2
4	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
5	<u>1016849</u>	Screw, #4-24 X 0.33 Pan-Head Machine	2
6	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
7	<u>1016857</u>	Wire Assembly Black #18	1
8	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2
9	<u>8057</u>	Nut, #4-40 Hex Machine	2
10	<u>8058</u>	Lockwasher, #4 Split	2
Note: Note: Items 2 through 4 and 7 through 10 are included in the kit, but are not used in this application.			


12
E

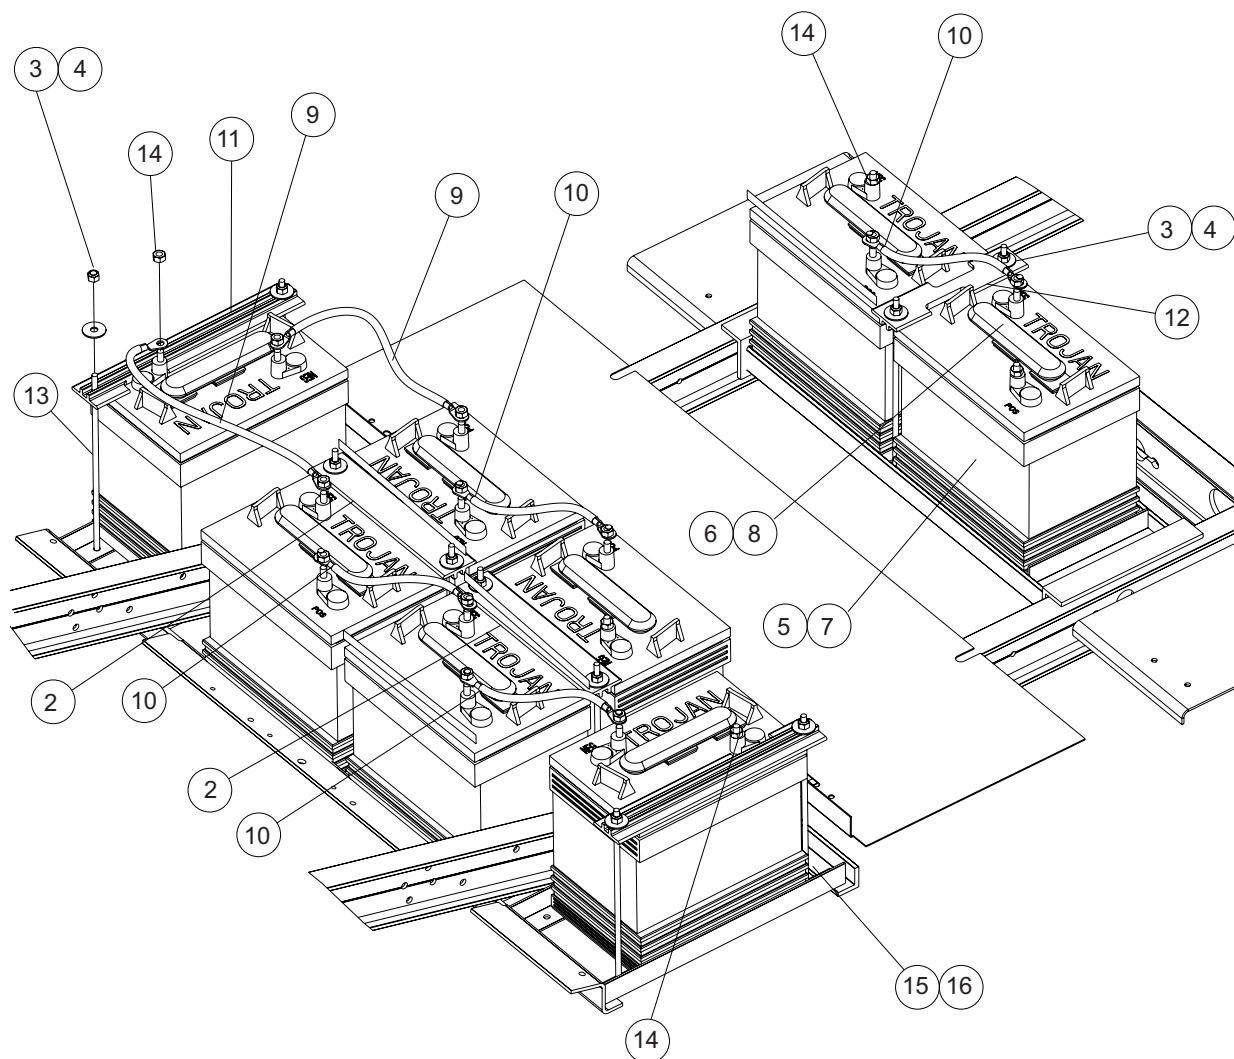

000410-001

IQ PLUS VEHICLE WITH T-105 BATTERIES

ITEM	PART NO.	DESCRIPTION	QTY	12
		1 2 3 4		
1	N/A	Battery Install, Stretch IQ Plus w/T-105 Batteries (includes items 2 through 16)	1	
2	<u>101090801</u>	Hold-Down, Battery	2	E
3	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	10	
4	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	10	
5	<u>101661601</u>	Battery, 6v Trojan T105 (Wet) (includes item 6)	8	
6	<u>101831401</u>	Battery Cap 6 Volt	1	
7	<u>101661602</u>	Battery, 6v Trojan T105 (Dry, also known as moist) (includes item 8)	8	
8	<u>101831401</u>	Battery Cap 6 Volt	1	
9	<u>102002801</u>	Wire Assy, #4 Black	2	
10	<u>102002901</u>	Wire Assy, #4 Black	4	
11	<u>102766201</u>	Hold Down, Outside	2	
12	<u>102830301</u>	Hold Down, Front Center	1	
13	<u>102845203</u>	Rod, Battery Hold Down 10.7"	10	
14	<u>102873401</u>	5/16-18 Heavy Hex Nut	16	
15	<u>102980801</u>	Extr, Plastic, 1 X 1 X 3	2	
16	<u>102980901</u>	Clamp, Hose, Nylon, .25	2	

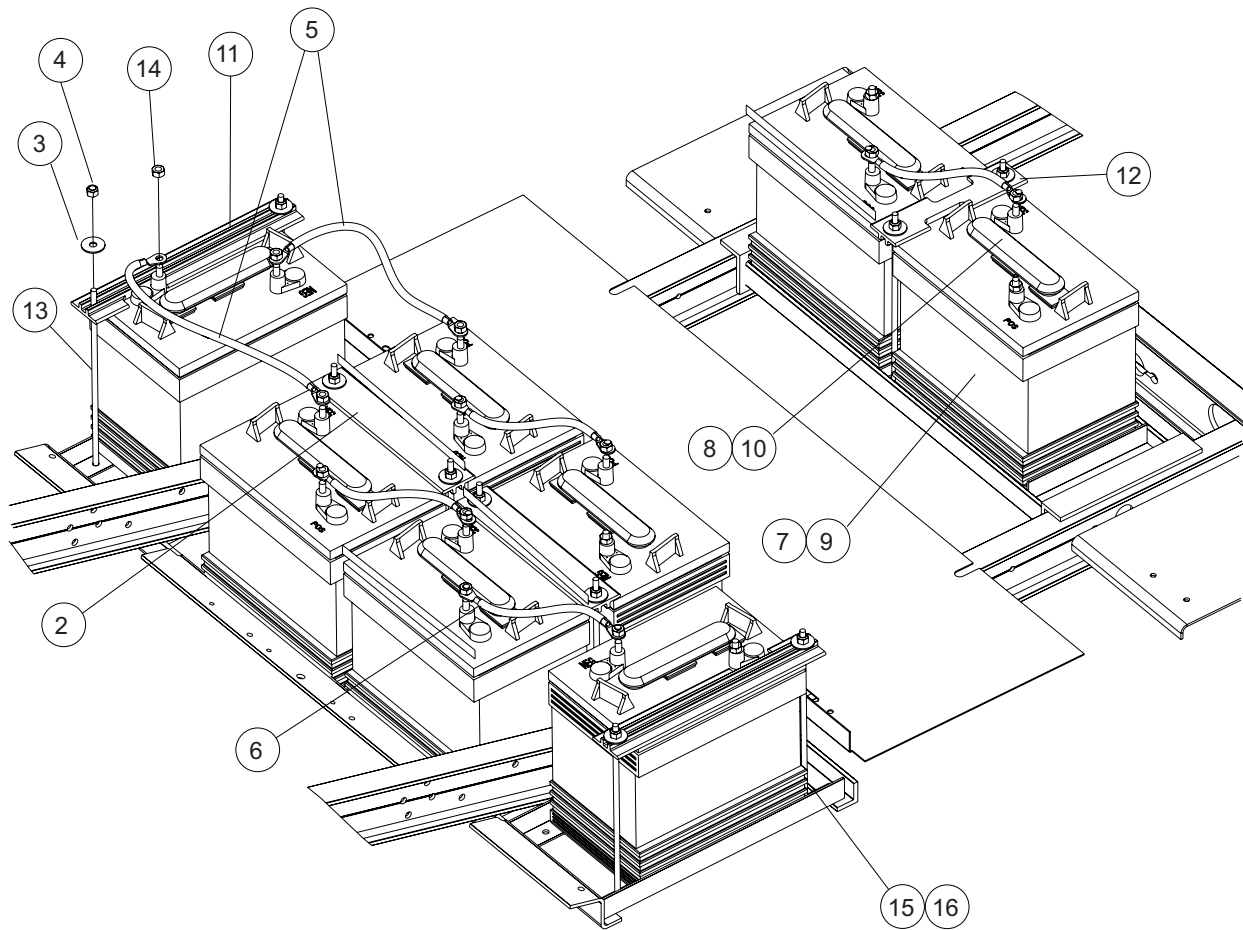

000410-002

IQ PLUS VEHICLE WITH T-145 BATTERIES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Battery Install, Stretch IQ Plus w/T-145 Batteries (includes items 2 through 16)	1
2	<u>101090801</u>	Hold-Down, Battery	2
3	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	10
4	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	10
5	<u>102002801</u>	Wire Assy, #4 Black	2
6	<u>102002901</u>	Wire Assy, #4 Black	4
7	<u>102764401</u>	Battery, 6v Trojan T145 (wet) (includes item 8)	8
8	<u>101831401</u>	Battery Cap 6 Volt	1
9	<u>102764402</u>	Battery, 6v Trojan T145 (Dry, also known as moist) (includes item 10)	8
10	<u>101831401</u>	Battery Cap 6 Volt	1
11	<u>102766201</u>	Hold Down, Outside	2
12	<u>102830301</u>	Hold Down, Front Center	1
13	<u>102845204</u>	Rod, Battery Hold Down 12"	12
14	<u>102873401</u>	5/16-18 Heavy Hex Nut	16
15	<u>102980801</u>	Extr, Plastic, 1 X 1 X 3	2
16	<u>102980901</u>	Clamp, Hose, Nylon, .25	2

12
E

ELECTRIC MOTOR

13

E

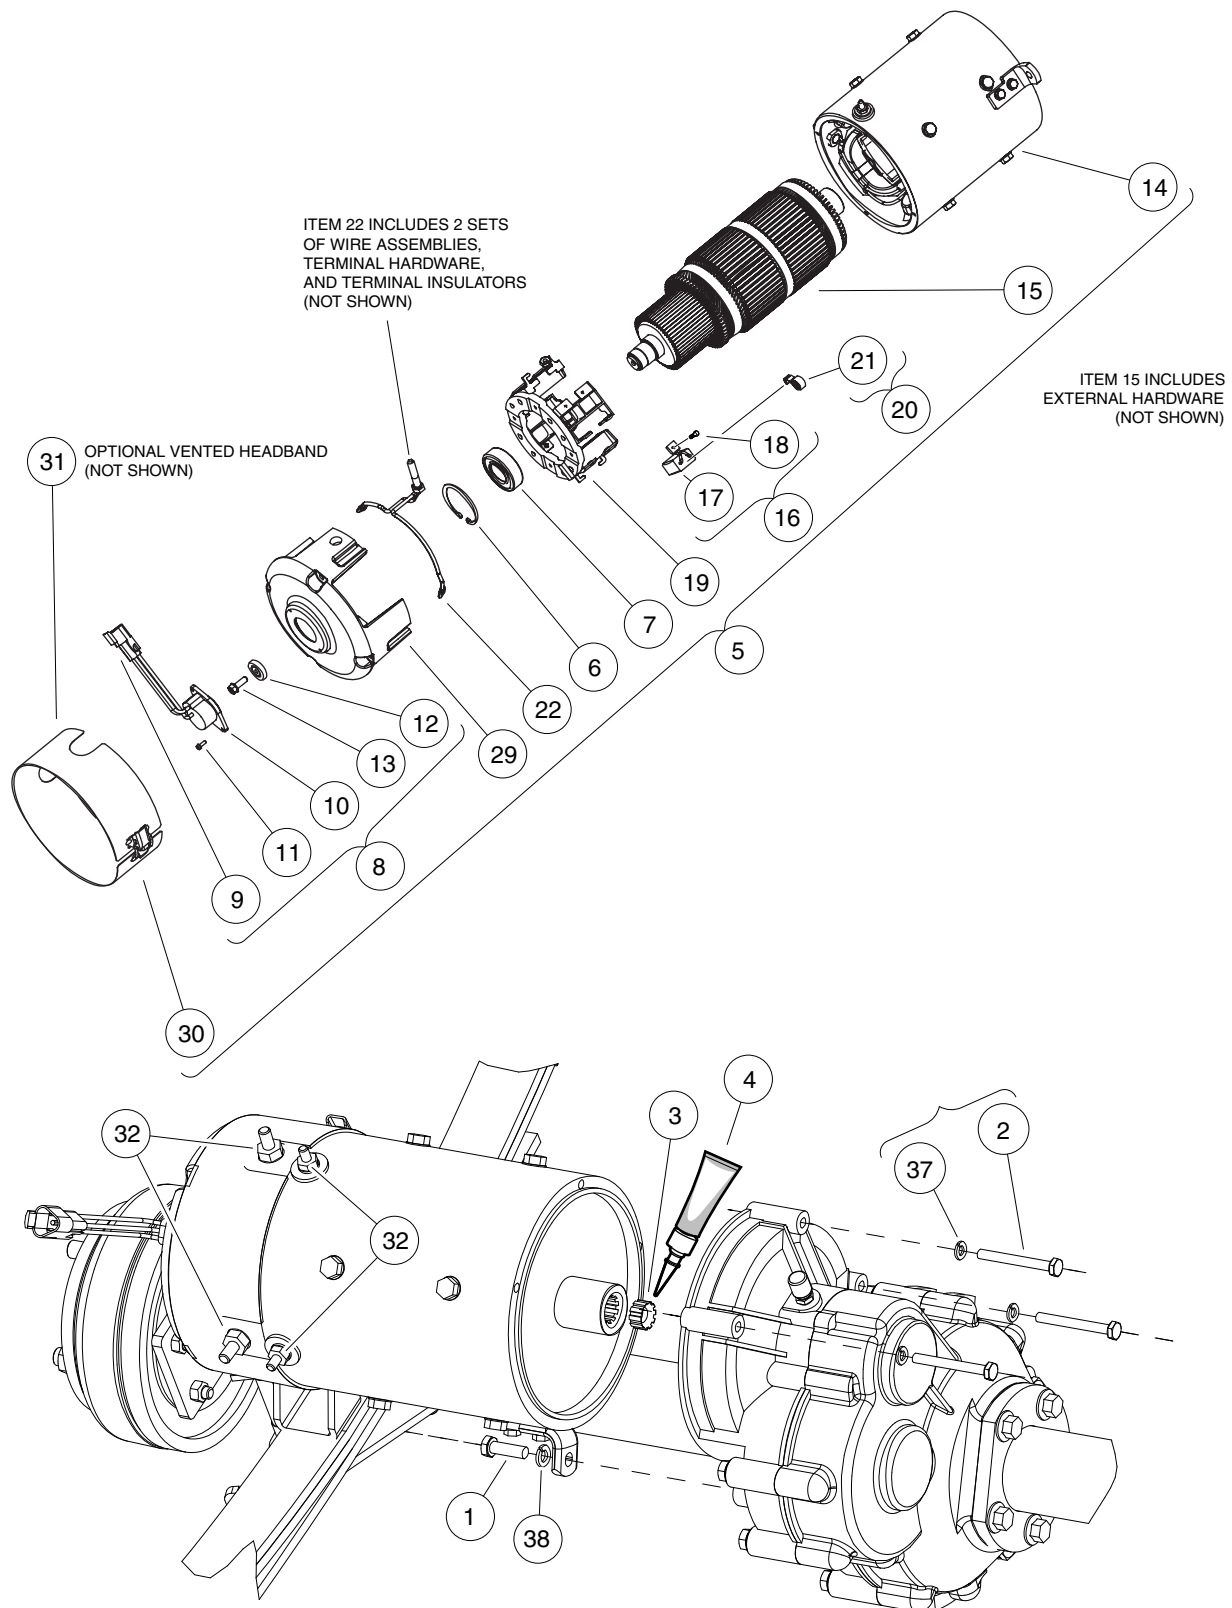

000411-001

MOTOR (MODEL DA5-4006) – IQ PLUS


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1
2	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	3
3	<u>102235201</u>	Bumper, Drive Unit	1
4	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
5	<u>102775101</u>	IQ Plus Electric Motor, 48-VDC 3.7 hp (includes items 6 through 30)	1
6	<u>102186301</u>	Ring, 2.24" Internal Retaining	1
7	<u>102186401</u>	Bearing, Ball	1
8	<u>102704901</u>	Kit, Speed Sensor (includes items 9 through 13)	1
9	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
10	N/A	Sensor, Motor Speed, ADC	1
11	N/A	Screw, #8-32, Taptite Thread	2
12	N/A	Magnet, ADC Motor	1
13	N/A	Screw, 1/4-20 x 0.5	1
14	N/A	Asm, Frame And Field, 3.7 Hp	1
15	N/A	Armature (Includes external hardware - not shown)	1
16	<u>102938601</u>	Kit, Brush, 3.7 Hp (includes items 17 and 18)	1
17	N/A	Brush, Motor	8
18	N/A	Screw, Taptite	8
19	<u>102938701</u>	Asm, Brush Box, 3.7 Hp	1
20	<u>102938801</u>	Kit, Brush Spring, 3.7 Hp (includes item 21)	1
21	N/A	Brush Spring	8
22	<u>102938901</u>	Kit, Brush Lead Asm, 3.7 Hp (includes items 23 through 28)	1
23	N/A	Terminal and Lead Assembly	2
24	N/A	Insulator, Terminal	2
25	N/A	Washer, Insulating	2
26	N/A	Washer, Flat, 5/16, Brass/Bronze	2
27	N/A	Nut, 5/16, Steel	4
28	N/A	Lockwasher, 5/16, Steel	2
29	<u>102939001</u>	Commutator End Head, 3.7 Hp	1
30	<u>102939101</u>	Sealed Headband, 3.7 Hp	1
31	<u>102939102</u>	Vented Headband, 3.7 HP (optional - not shown)	1
32	<u>102951701</u>	Pkg, Terminal Hardware, 3.7hp (includes items 33 through 36)	1
33	N/A	Nut, 5/16, Steel	2
34	N/A	Lockwasher, 5/16, Steel	2
35	N/A	Nut, 1/4-20, Steel	2
36	N/A	Lockwasher, 1/4-20, Steel	2
37	<u>451</u>	Lockwasher, 1/4 Split	3
38	<u>7174</u>	Lockwasher, 5/16 Split	1

13
E

TRANSAXLE – ELECTRIC VEHICLES

14

E

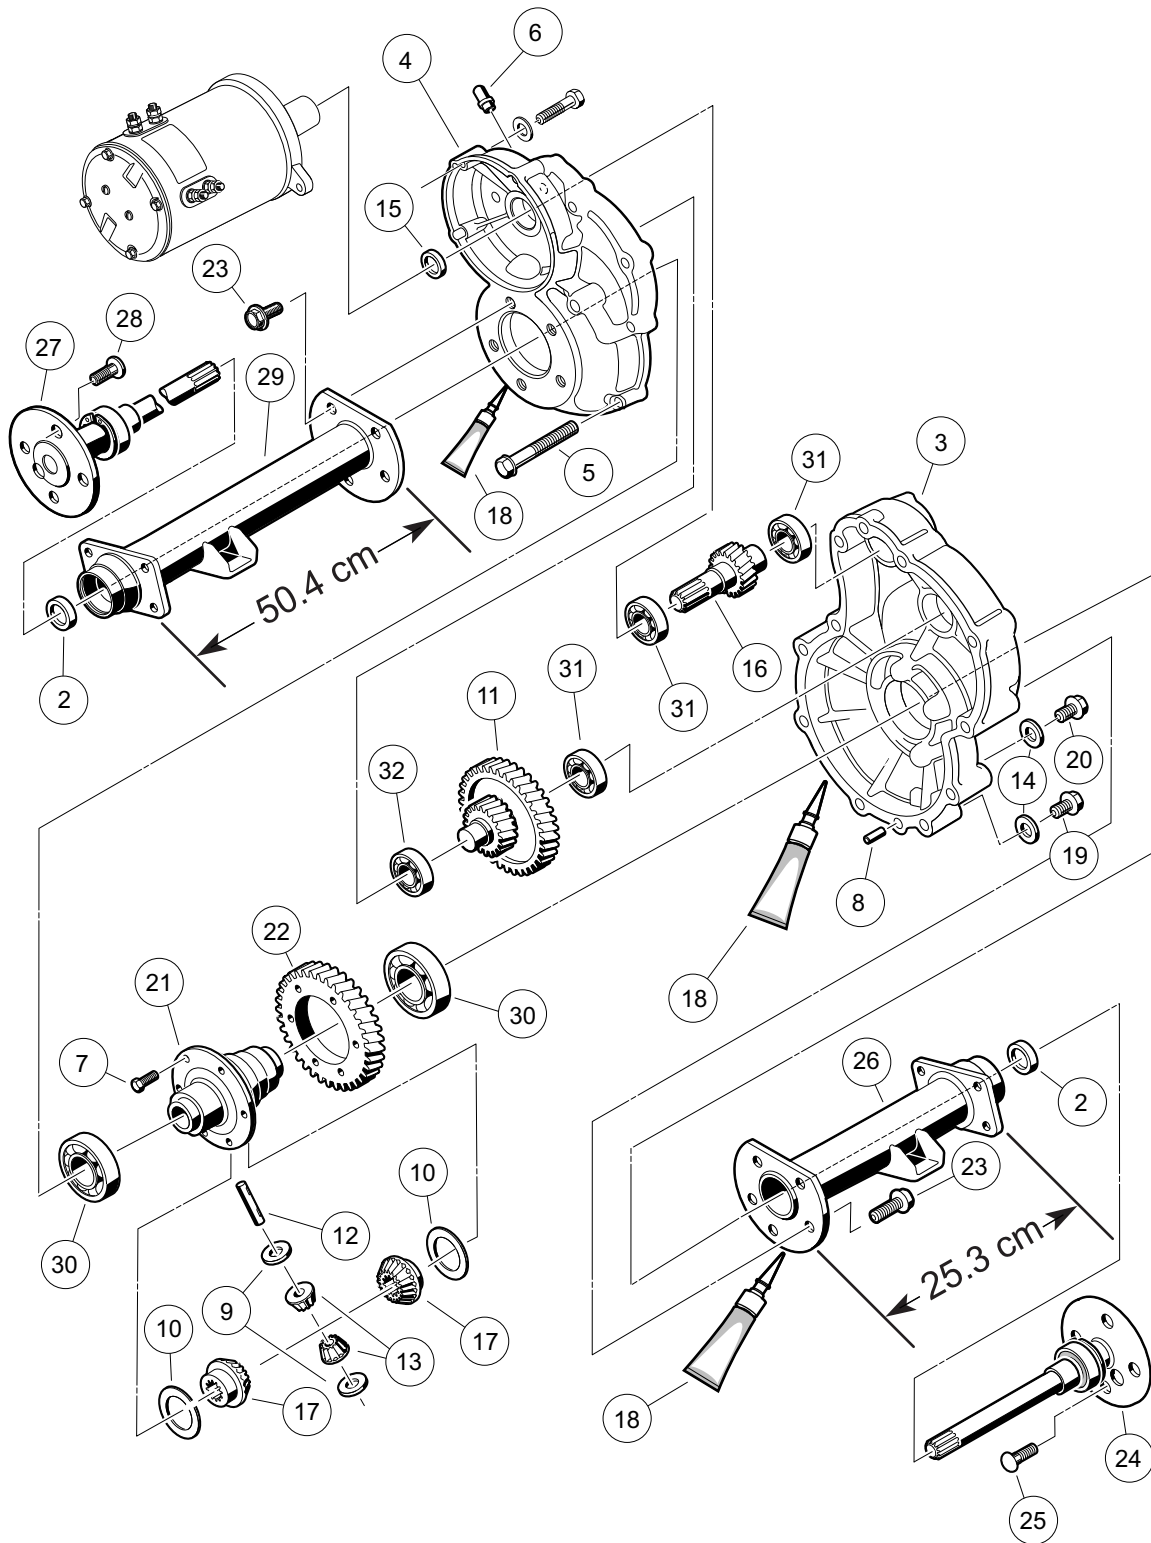

000223-002

TRANSAXLE – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102771701</u>	Transaxle, Electric (includes items 2 through 32)	1
2	<u>1013794</u>	Axle Shaft Oil Seal	2
3	<u>101895401</u>	Gear Case, Left-Hand	1
4	<u>101895501</u>	Gear Case, Passenger-Side	1
5	<u>101897001</u>	Screw, M8-1.25 X 60mm Hex-Head	11
6	<u>101897201</u>	Breather	1
7	<u>101897401</u>	Screw, M10-1.25 X 25mm	6
8	<u>101897601</u>	Pin, 11mm OD X 8.5mm ID X 10mm	2
9	<u>101903601</u>	Washer, Thrust	2
10	<u>101903701</u>	Washer, Thrust	2
11	<u>101906901</u>	Intermediate Shaft Assembly	1
12	<u>101922101</u>	Pin, 15.99mm X 88.7mm Dowel	1
13	<u>101923001</u>	Gear, Differential Idler	2
14	<u>101923201</u>	Gasket	2
15	<u>101923501</u>	Seal, Lip	1
16	<u>101923701</u>	Shaft, Input	1
17	<u>101923901</u>	Gear, Differential	2
18	<u>101928701</u>	Liquid Gasket (Transaxle case)	1
19	<u>101972101</u>	Plug, M14-1.5 X 12mm Magnetic	1
20	<u>101972201</u>	Plug, M14-1.5 X 12mm Hex	1
21	<u>102356601</u>	Housing, Differential, 6 Bolt	1
22	<u>102356801</u>	Gear, Differential Output, 6-Bolt	1
23	<u>102357001</u>	Screw, Flg Hd M10 X 1.5 X 30	10
24	<u>102886301</u>	Axle Assembly, Driver-Side (includes item 25)	1
25	<u>101922201</u>	Lug Stud	4
26	<u>102886401</u>	Tube, Axle, Driver-Side	1
27	<u>102886501</u>	Axle Assembly, Passenger-Side (includes item 28)	1
28	<u>101922201</u>	Lug Stud	4
29	<u>102886601</u>	Tube, Axle, Passenger-Side	1
30	<u>7330</u>	Inner Axle Tube Bearing	2
31	<u>7335</u>	Bearing	3
32	<u>7336</u>	Bearing	1


14

E

BATTERY CHARGER

15

E

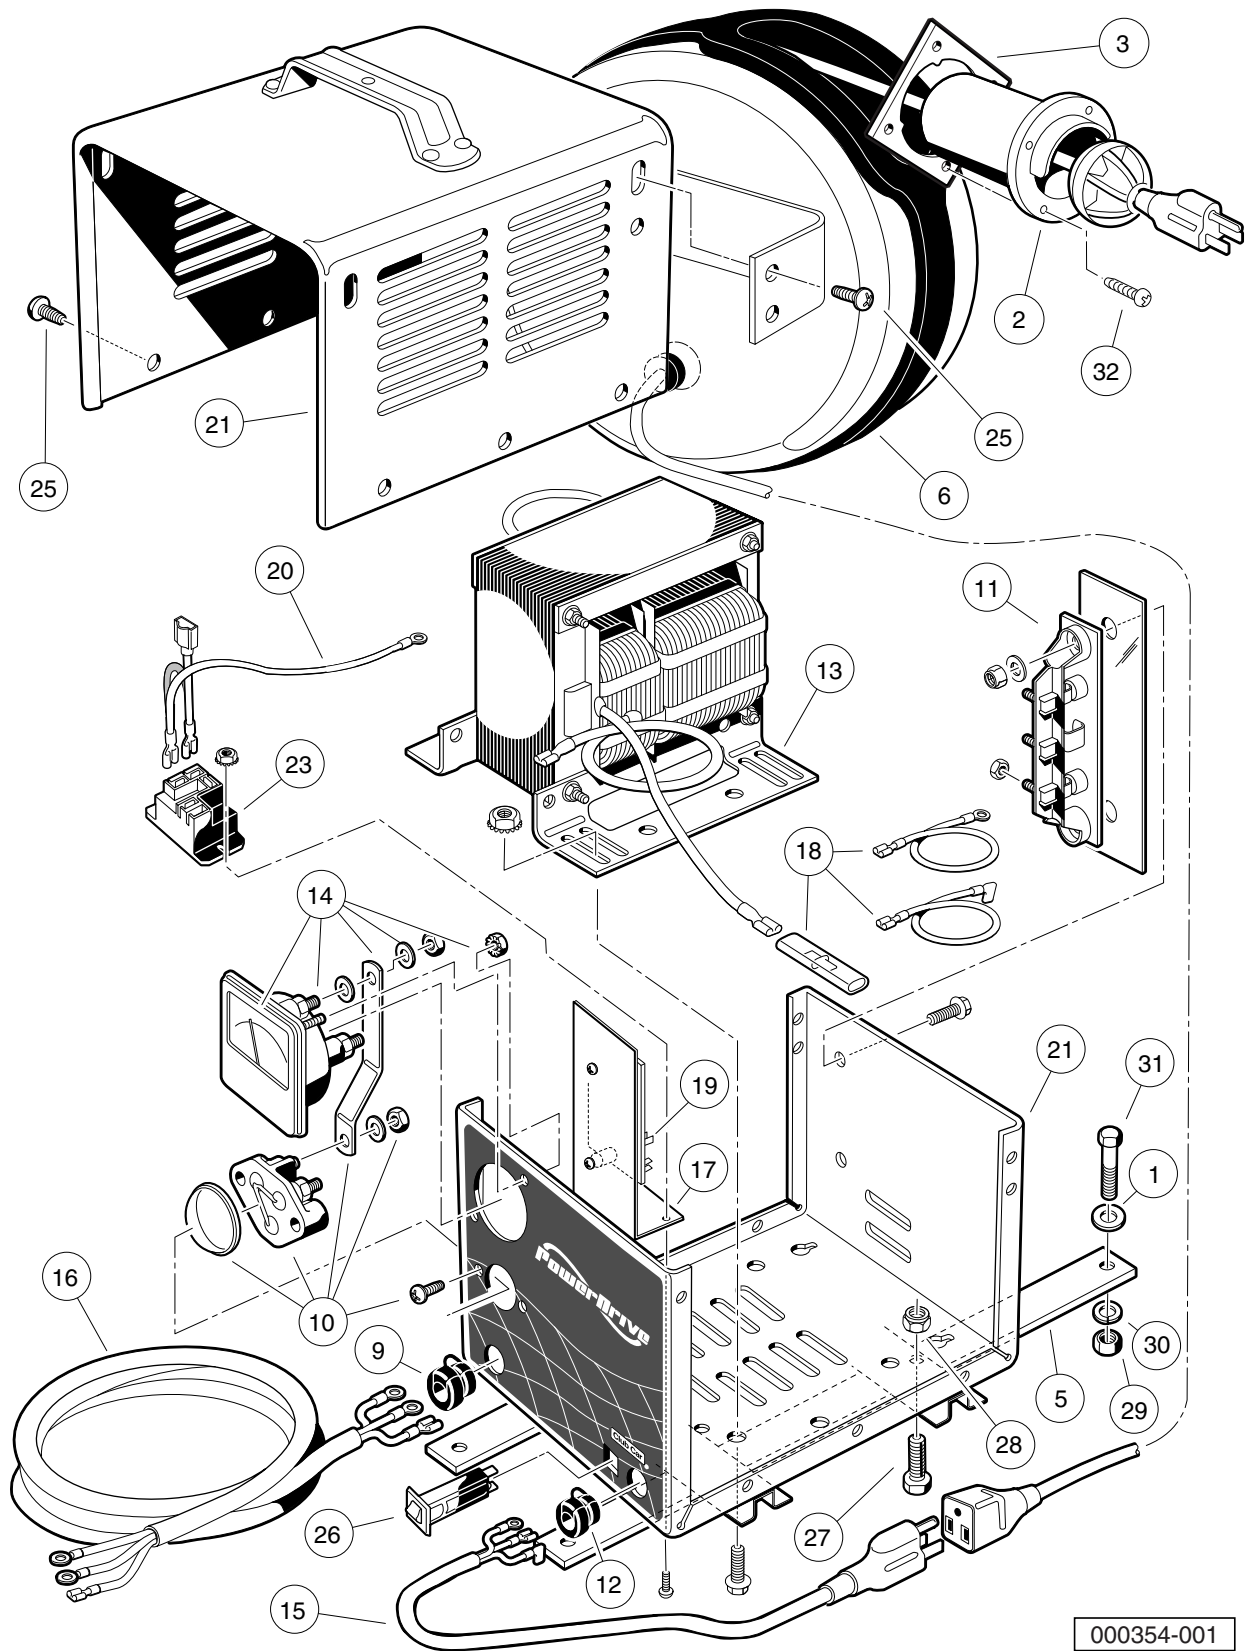


000354-001

ONBOARD POWERDRIVE BATTERY CHARGER (MODEL 17935), DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014306</u>	Washer, 1/4" Type B Flat	4
2	<u>1016673</u>	Housing, Cord Reel	1
3	<u>101801001</u>	Plate, Receptacle Backing	1
4	<u>101814301</u>	Battery Charger and Reel Assembly (includes items 5 through 28)	1
5	<u>1011707</u>	Bracket, Mounting, Battery Charger	2
6	<u>1017187</u>	Retractable Cord Reel	1
7	<u>1017189</u>	Heat Shrink Tube 1.5" X 3"	1
8	<u>101802301</u>	Battery Charger, Onboard, 120-VAC, 48-VDC (includes items 9 through 26)	1
9	<u>1012098</u>	Bushing, DC Cord	1
10	<u>1012101</u>	Fuse Assembly	1
11	<u>1015914</u>	Rectifier with Heatsink Assembly	1
12	<u>1015917</u>	Bushing, AC Cord	1
13	****	Transformer, Battery Charger	1
14	<u>101828501</u>	Ammeter	1
15	<u>101829001</u>	Cord, AC, 22-Inch (56 cm)	1
16	<u>101829101</u>	Cord, DC, 90.5-Inch (230 cm)	1
17	****	Mounting Bracket, Relay	1
18	N/A	Kit, Wire Assembly	1
19	<u>101841901</u>	Control Board	1
20	<u>101914401</u>	Assembly, Voltage Suppressor	1
21	N/A	Case, Charger	1
22	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes items 23 and 24)	1
23	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
24	N/A	Kit, Relay, 48v 30a Instrns	1
25	7577	Screw, #10 X 0.50 Phillips Pan-Head	12
26	<u>CCX8506</u>	Circuit Breaker, 15-Amp/120-Volt	1
27	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
28	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
29	<u>1028</u>	Nut, 1/4-20 Hex	4
30	<u>451</u>	Lockwasher, 1/4 Split	4
31	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	4
32	<u>8796</u>	Screw, #7-19 X 0.75 Pan-Head Type AB	4
		**** Special order item available upon request.	
		Note: Item 7 not shown.	

15

E

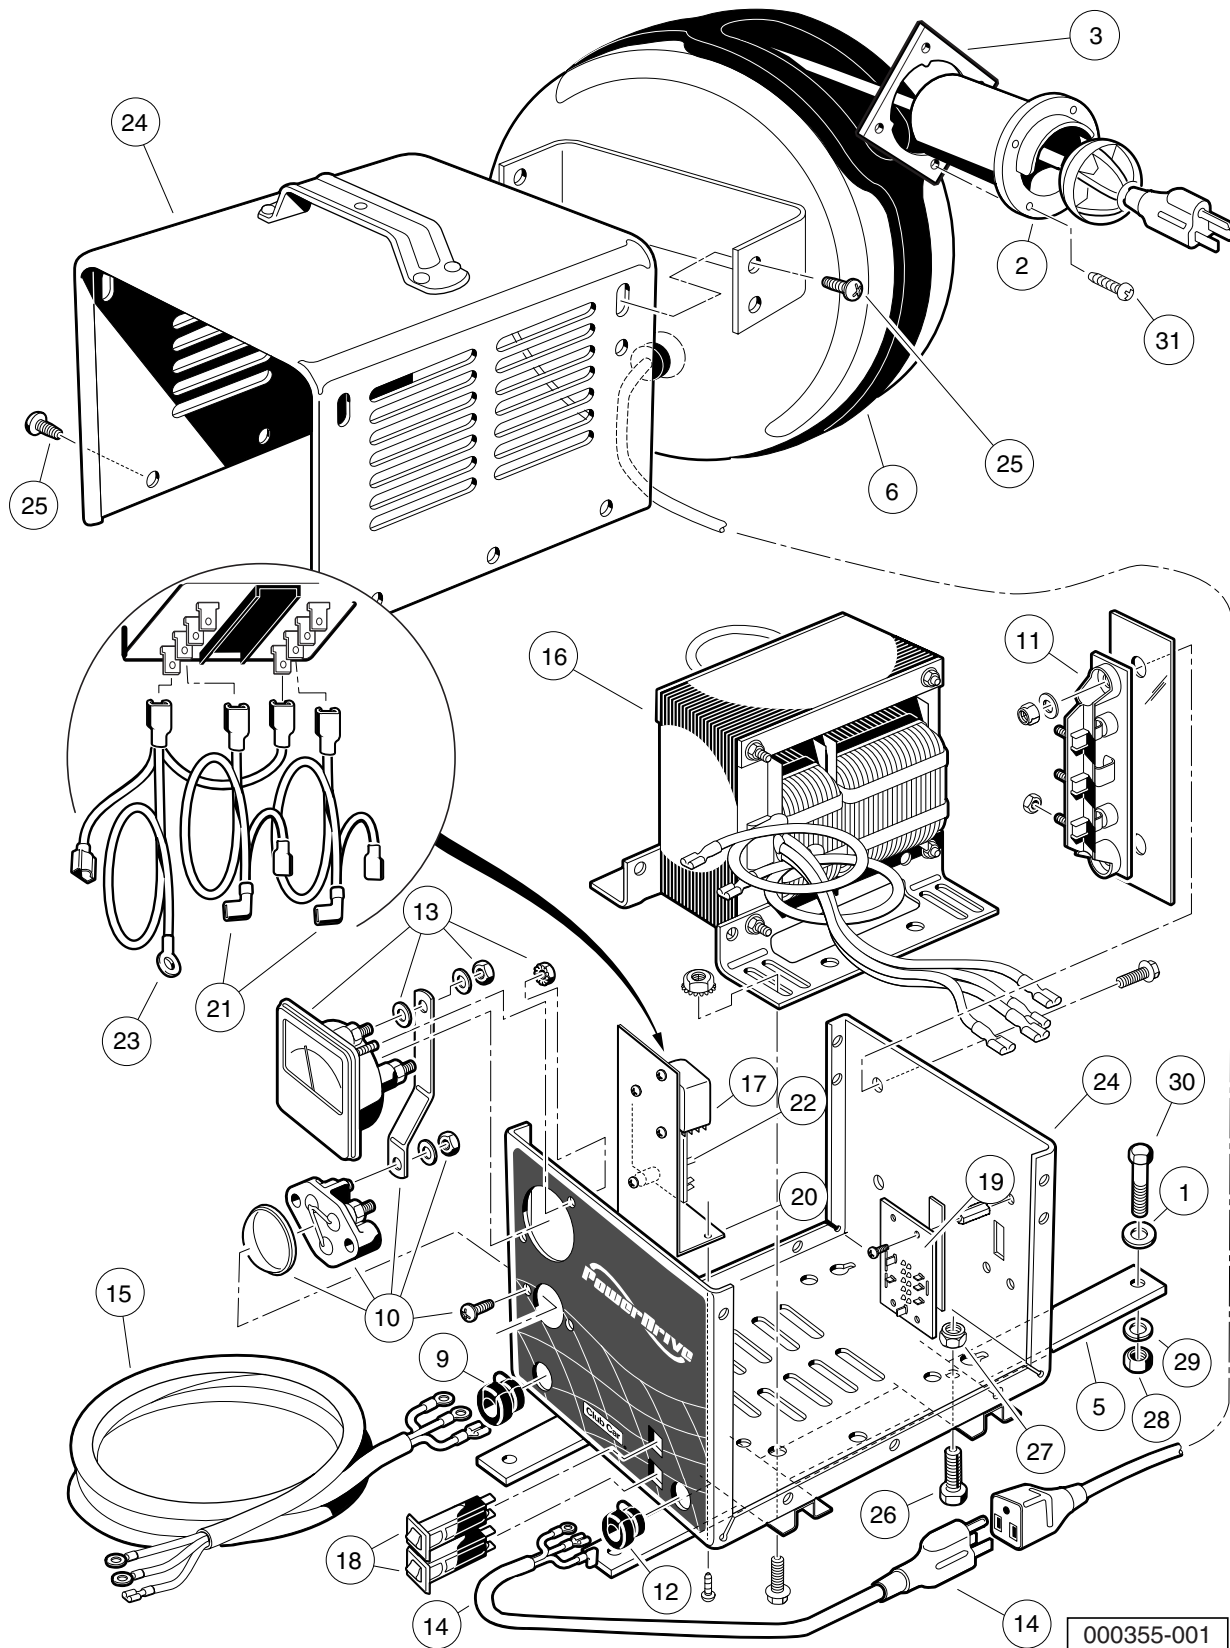


ONBOARD POWERDRIVE BATTERY CHARGER (MODEL 17790), EXPORT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014306</u>	Washer, 1/4" Type B Flat	4
2	<u>1016673</u>	Housing, Cord Reel	1
3	<u>101801001</u>	Plate, Receptacle Backing	1
4	<u>101814302</u>	Battery Charger and Reel Assembly (includes items 5 through 27)	1
5	<u>1011707</u>	Bracket, Mounting, Battery Charger	2
6	<u>1017187</u>	Retractable Cord Reel	1
7	<u>1017189</u>	Heat Shrink Tube 1.5" X 3"	1
8	<u>101831601</u>	Battery Charger, Onboard, 48-Volt DC (includes items 9 through 25)	1
9	<u>1012098</u>	Bushing, DC Cord	1
10	<u>1012101</u>	Fuse Assembly	1
11	<u>1015914</u>	Rectifier with Heatsink Assembly	1
12	<u>1015917</u>	Bushing, AC Cord	1
13	<u>101828501</u>	Ammeter	1
14	<u>101829001</u>	Cord, AC, 22-Inch (56 cm)	1
15	<u>101829101</u>	Cord, DC, 90.5-Inch (230 cm)	1
16	<u>101838201</u>	Transformer, Export Battery Charger	1
17	<u>101838301</u>	Relay, Export Charger	1
18	<u>101838401</u>	Circuit Breaker	2
19	<u>101838601</u>	Four-Position Switch	1
20	****	Mounting Bracket, Relay	1
21	****	Kit, Wire Assembly	1
22	<u>101841901</u>	Control Board	1
23	<u>101914401</u>	Assembly, Voltage Suppressor	1
24	N/A	Case, Charger	1
25	<u>7577</u>	Screw, #10 X 0.50 Phillips Pan-Head	12
26	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
27	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
28	<u>1028</u>	Nut, 1/4-20 Hex	4
29	<u>451</u>	Lockwasher, 1/4 Split	4
30	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	4
31	<u>8796</u>	Screw, #7-19 X 0.75 Pan-Head Type AB	4
		**** Special order item available upon request.	
		Note: Item 7 not shown.	

15

E

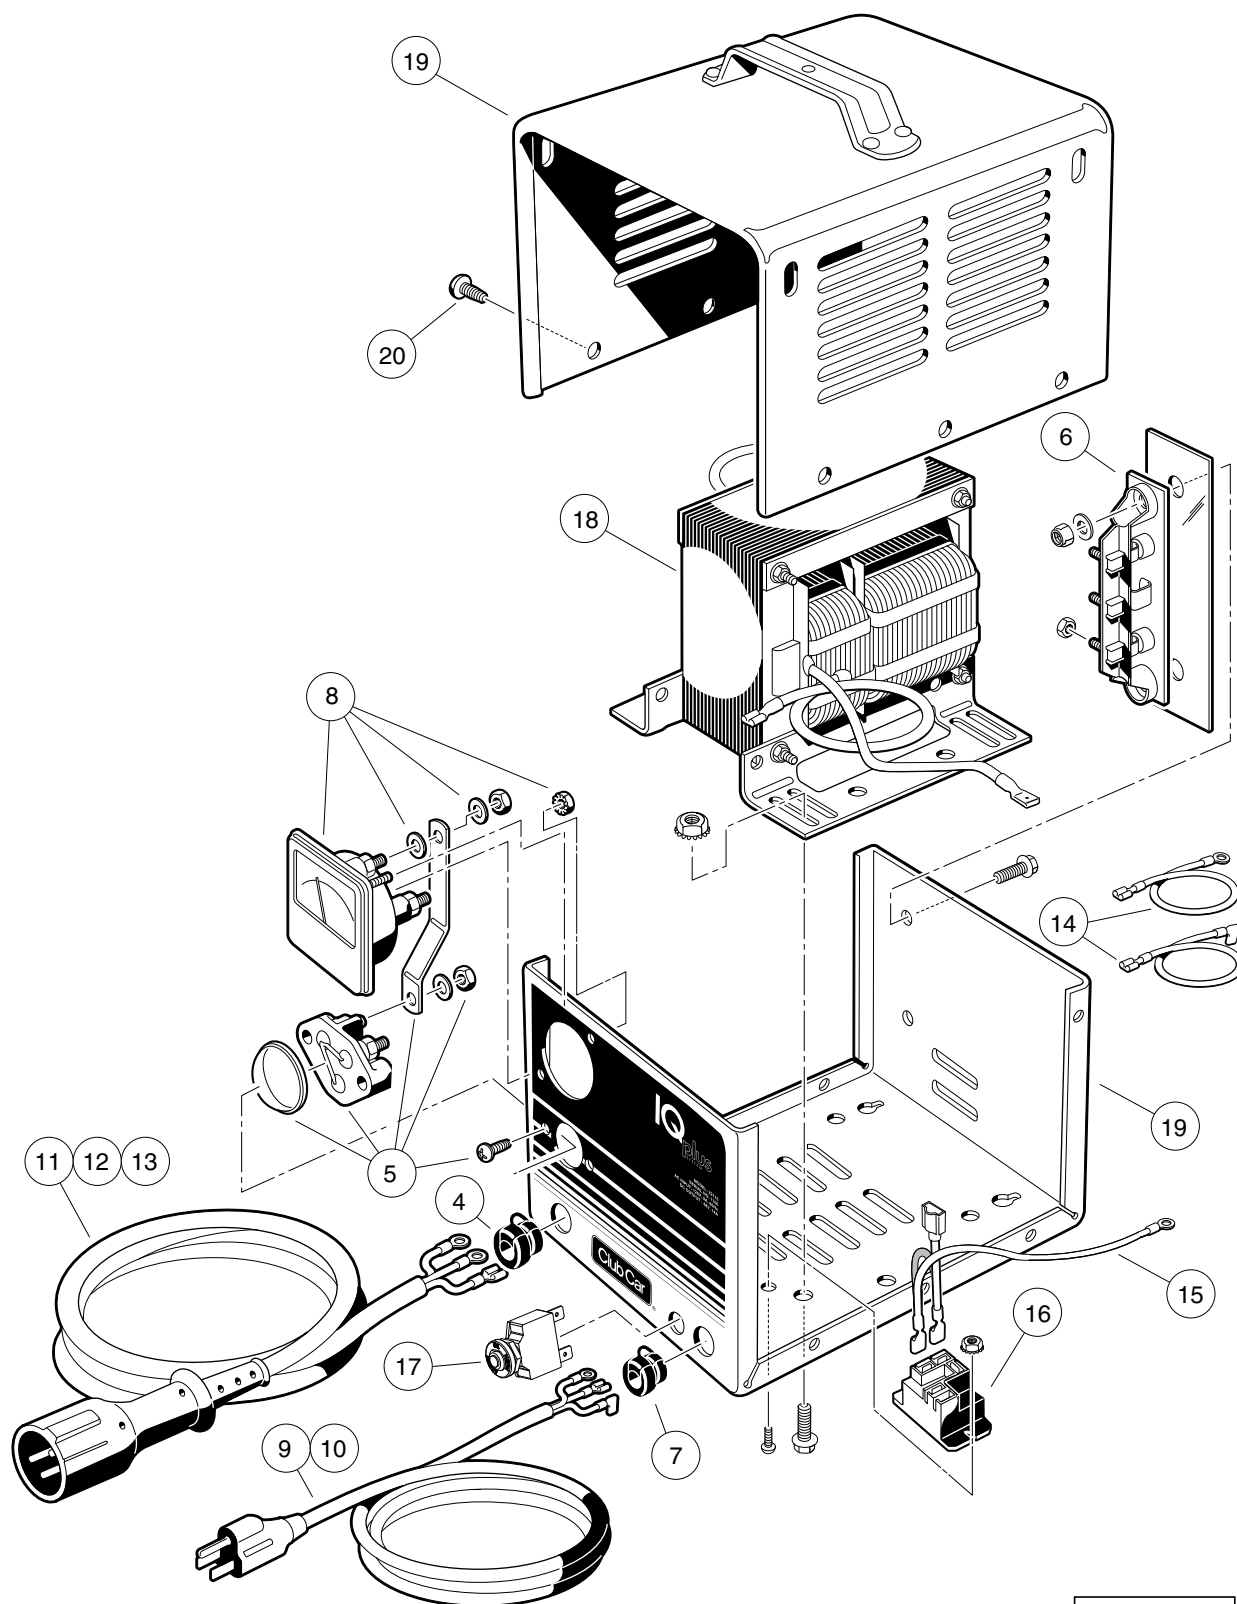

000414-001

IQ PLUS DOMESTIC BATTERY CHARGER (MODEL 25730)


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102847801</u>	48-V/17-A IQ Plus (9-ft. DC Cord, 6-ft. AC Cord)	1
2	<u>102847802</u>	48-V/17-A IQ Plus (12-ft. DC Cord, 9-ft. AC Cord)	1
3	<u>102847803</u>	48-V/17-A IQ Plus (20-ft. DC Cord, 9-ft. AC Cord) (includes items 4 through 20)	1
4	<u>1012098</u>	Bushing, DC Cord	1
5	<u>1012101</u>	Fuse Assembly	1
6	<u>1015914</u>	Rectifier with Heatsink Assembly	1
7	<u>1015917</u>	Bushing, AC Cord	1
8	<u>101828501</u>	Ammeter	1
9	<u>101828801</u>	Cord, AC, 80-Inch (203 cm)	1
10	<u>101828802</u>	Cord, AC, 108-Inch (274 cm)	1
11	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
12	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
13	<u>101828903</u>	Cord, DC, 250-Inch (635 cm)	1
14	<u>101831101</u>	Wire Assembly Kit	1
15	<u>101914401</u>	Assembly, Voltage Suppressor	1
16	<u>102275401</u>	Relay, 48-VDC	1
17	<u>102838101</u>	Circuit Breaker 250vac-50vdc	1
18	N/A	Transformer, Battery Charger	1
19	N/A	Case, Battery Charger	1
20	7577	Screw, #10 X 0.50 Phillips Pan-Head	10

15

E

15


E

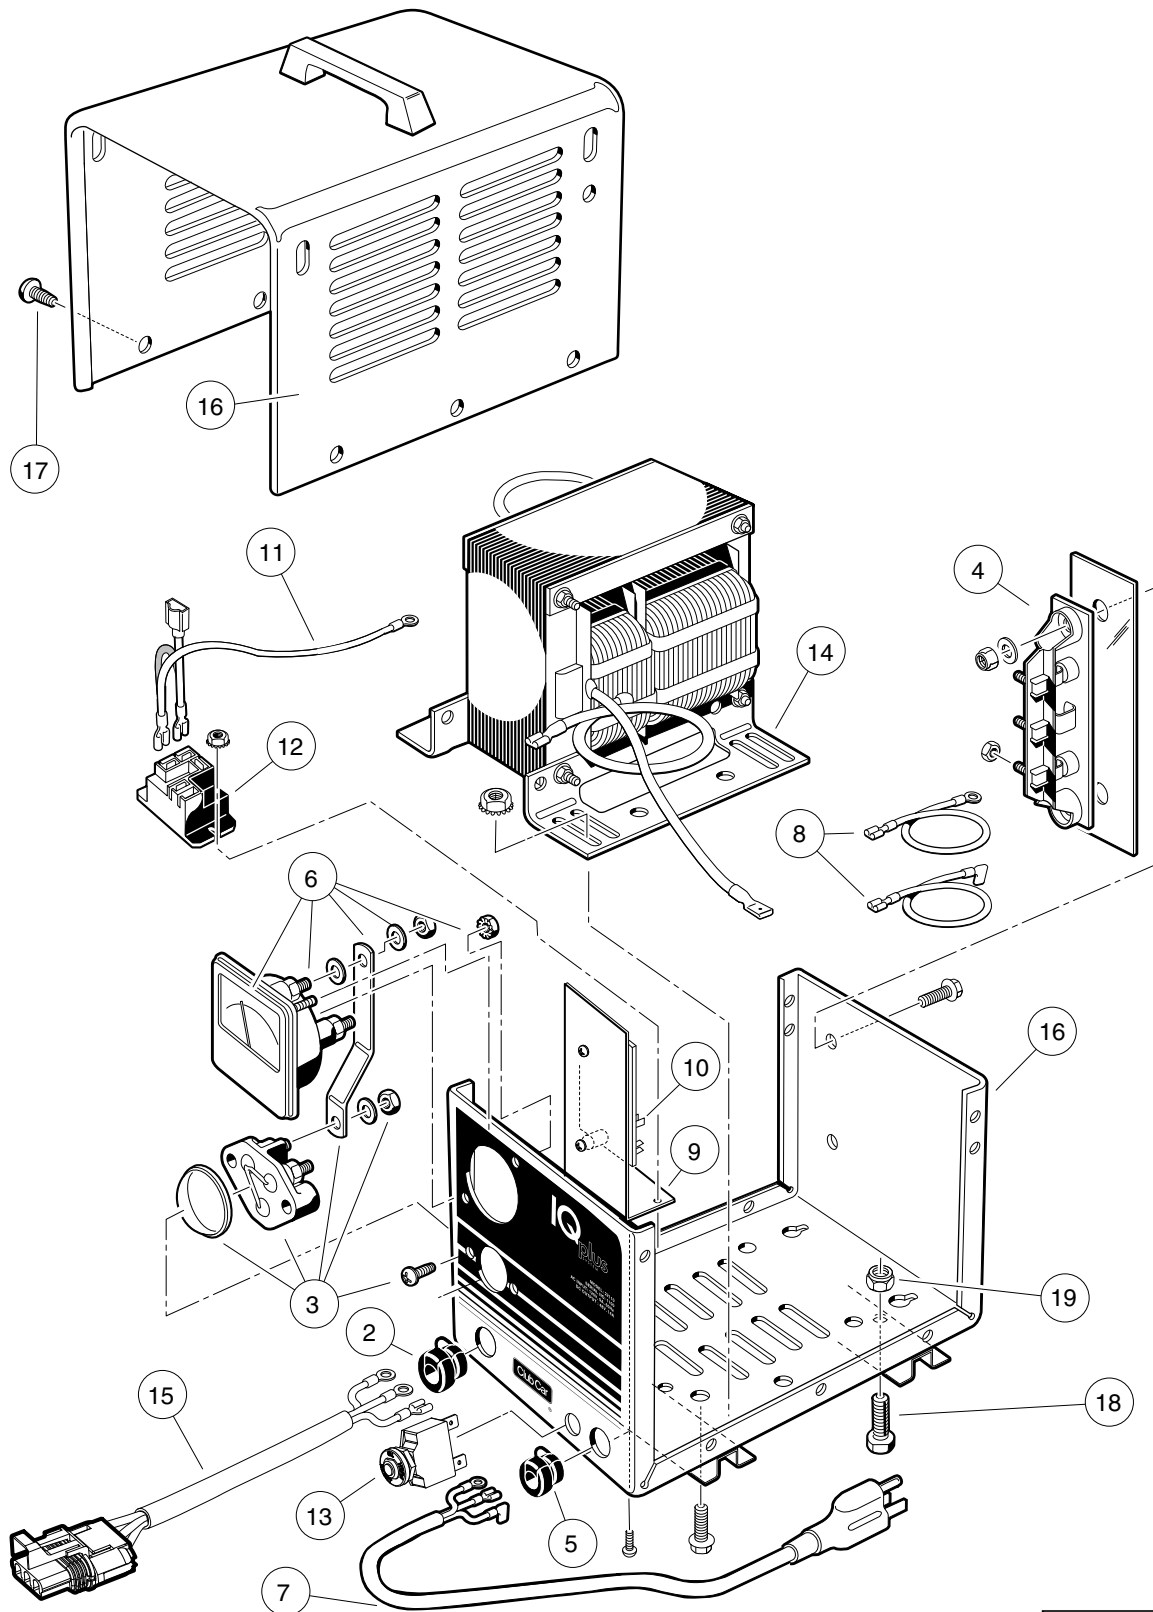

000415-001

IQ PLUS ONBOARD BATTERY CHARGER (MODEL 25260)

ITEM	PART NO.	DESCRIPTION	QTY	15
		1 2 3 4		
1	<u>102837001</u>	Battery Charger, Onboard, 120-VAC, 48-VDC (includes items 2 through 19)	1	
2	<u>1012098</u>	Bushing, DC Cord	1	E
3	<u>1012101</u>	Fuse Assembly	1	
4	<u>1015914</u>	Rectifier with Heatsink Assembly	1	
5	<u>1015917</u>	Bushing, AC Cord	1	
6	<u>101828501</u>	Ammeter	1	
7	<u>101829001</u>	Cord, AC, 22-Inch (56 cm)	1	
8	<u>101831101</u>	Wire Assembly Kit	1	
9	****	Mounting Bracket, Relay	1	
10	<u>101841901</u>	Control Board	1	
11	<u>101914401</u>	Assembly, Voltage Suppressor	1	
12	<u>102275401</u>	Relay, 48-VDC	1	
13	<u>102838101</u>	Circuit Breaker 250vac-50vdc	1	
14	N/A	Transformer, Battery Charger	1	
15	<u>102940801</u>	Cord, Dc	1	
16	N/A	Case, Battery Charger	1	
17	7577	Screw, #10 X 0.50 Phillips Pan-Head	12	
18	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4	
19	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4	
**** Special order item available upon request.				

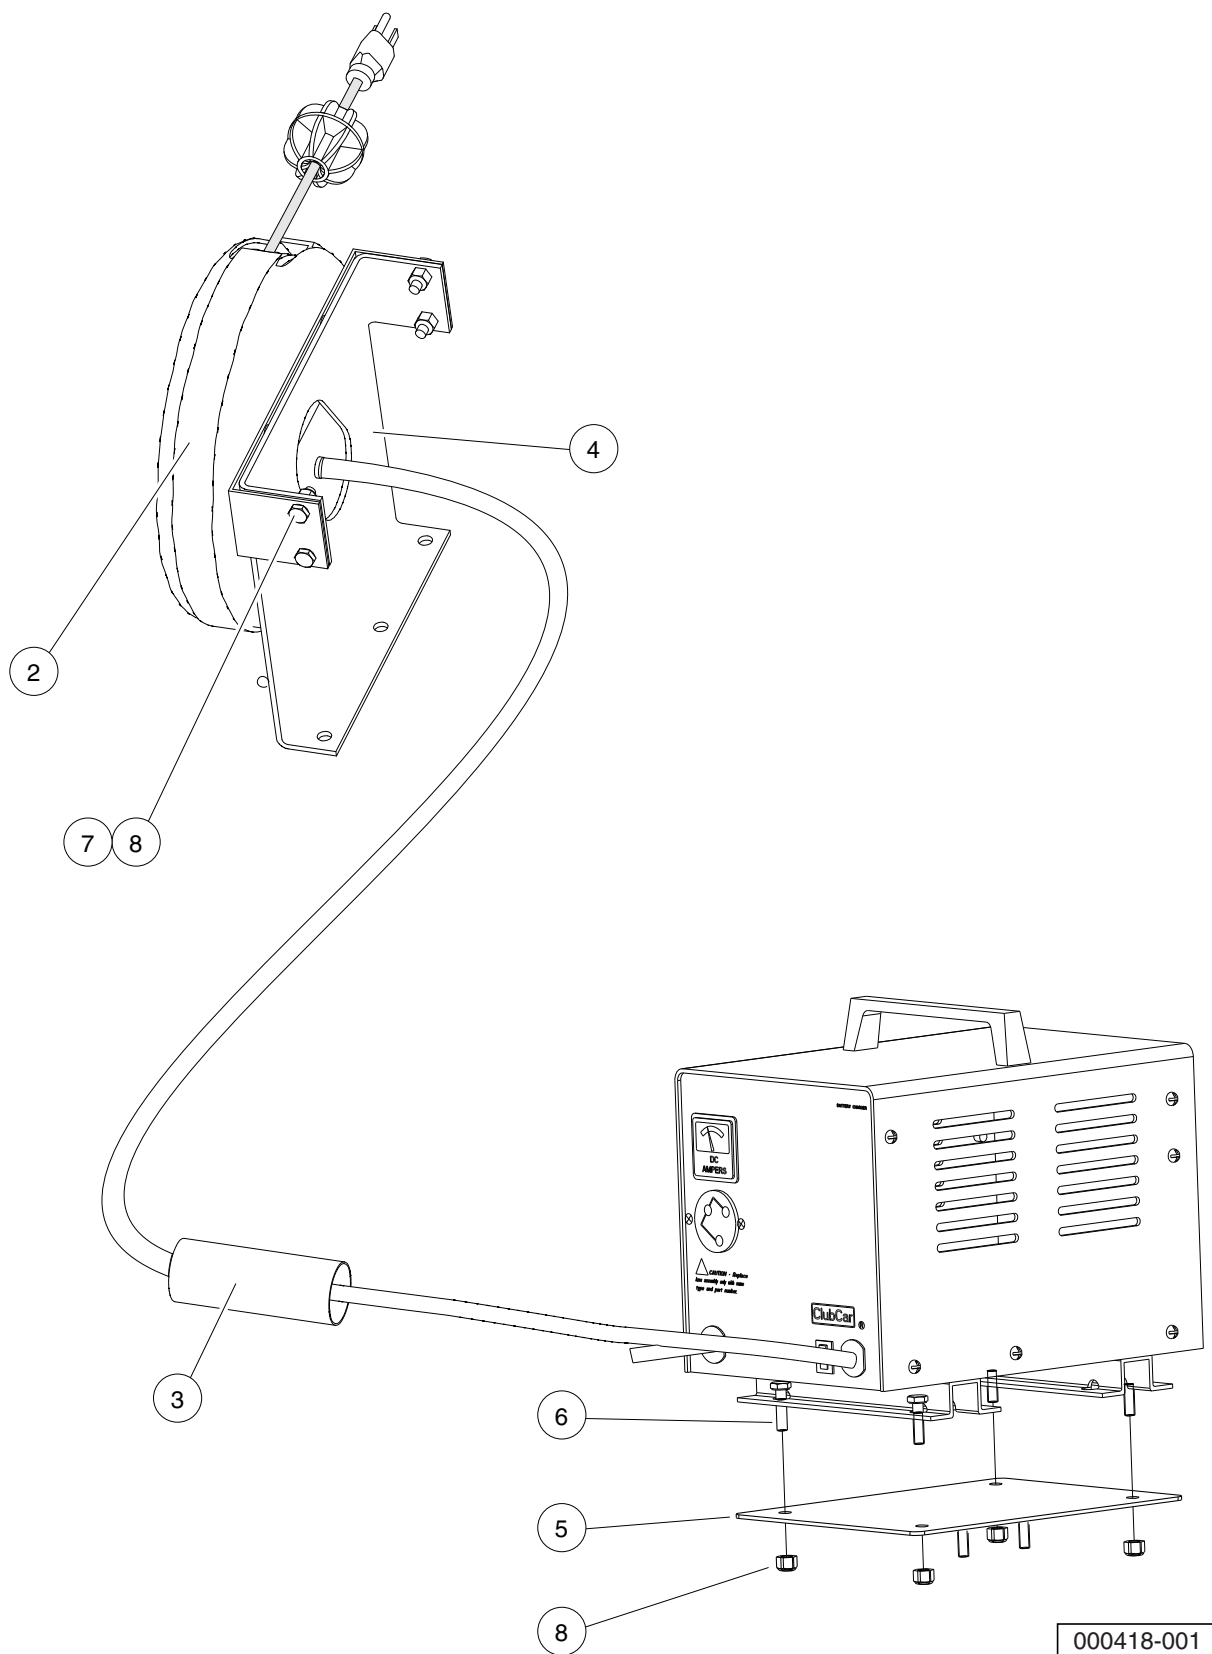


000418-001

ONBOARD CHARGER (MODELS 25260 AND 25660) AND REEL MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Installation, Onboard IQ Plus Charger (includes items 2 through 8)	1
2	<u>1017187</u>	Retractable Cord Reel	1
3	<u>1017189</u>	Heat Shrink Tube 1.5" X 3"	1
4	<u>102770701</u>	Bracket, Reel, Tabbed	1
5	<u>102942601</u>	Asm, Plate, Charger Mounting	1
6	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	4
7	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
8	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	8

15

E

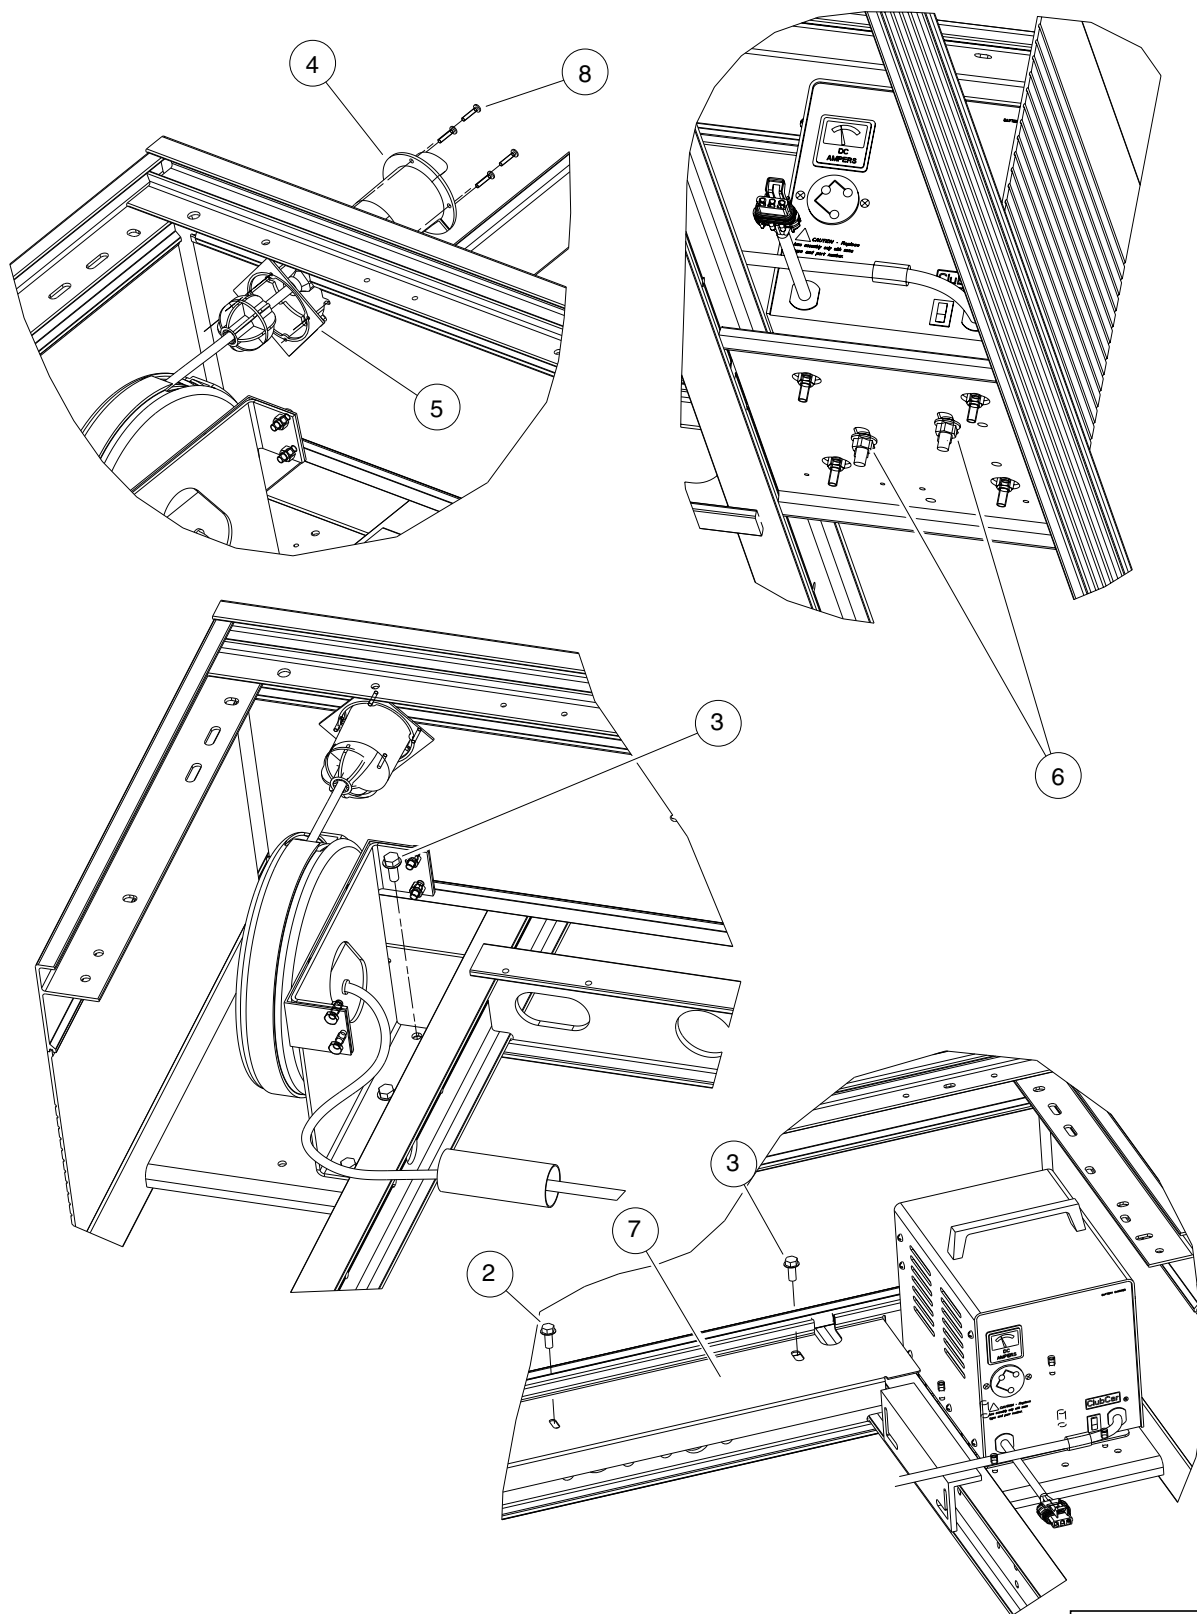


000429-001

IQ PLUS ONBOARD CHARGER (MODEL 25260) MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Installation, Charger System, HDIQ CA 6 (includes items 2 through 8)	1
2	<u>1014063</u>	Screw, 1/4-20 X 1.00 Hex Head	1
3	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	4
4	<u>1016673</u>	Housing, Cord Reel	1
5	<u>101801001</u>	Plate, Receptacle Backing	1
6	<u>101832901</u>	Nut, M10-1.25 Hex Flange	2
7	<u>103352701</u>	Asm, Shield, Iq Plus Ob Chgr,	1
8	<u>8796</u>	Screw, #7-19 X 0.75 Pan-Head Type AB	4

15

E

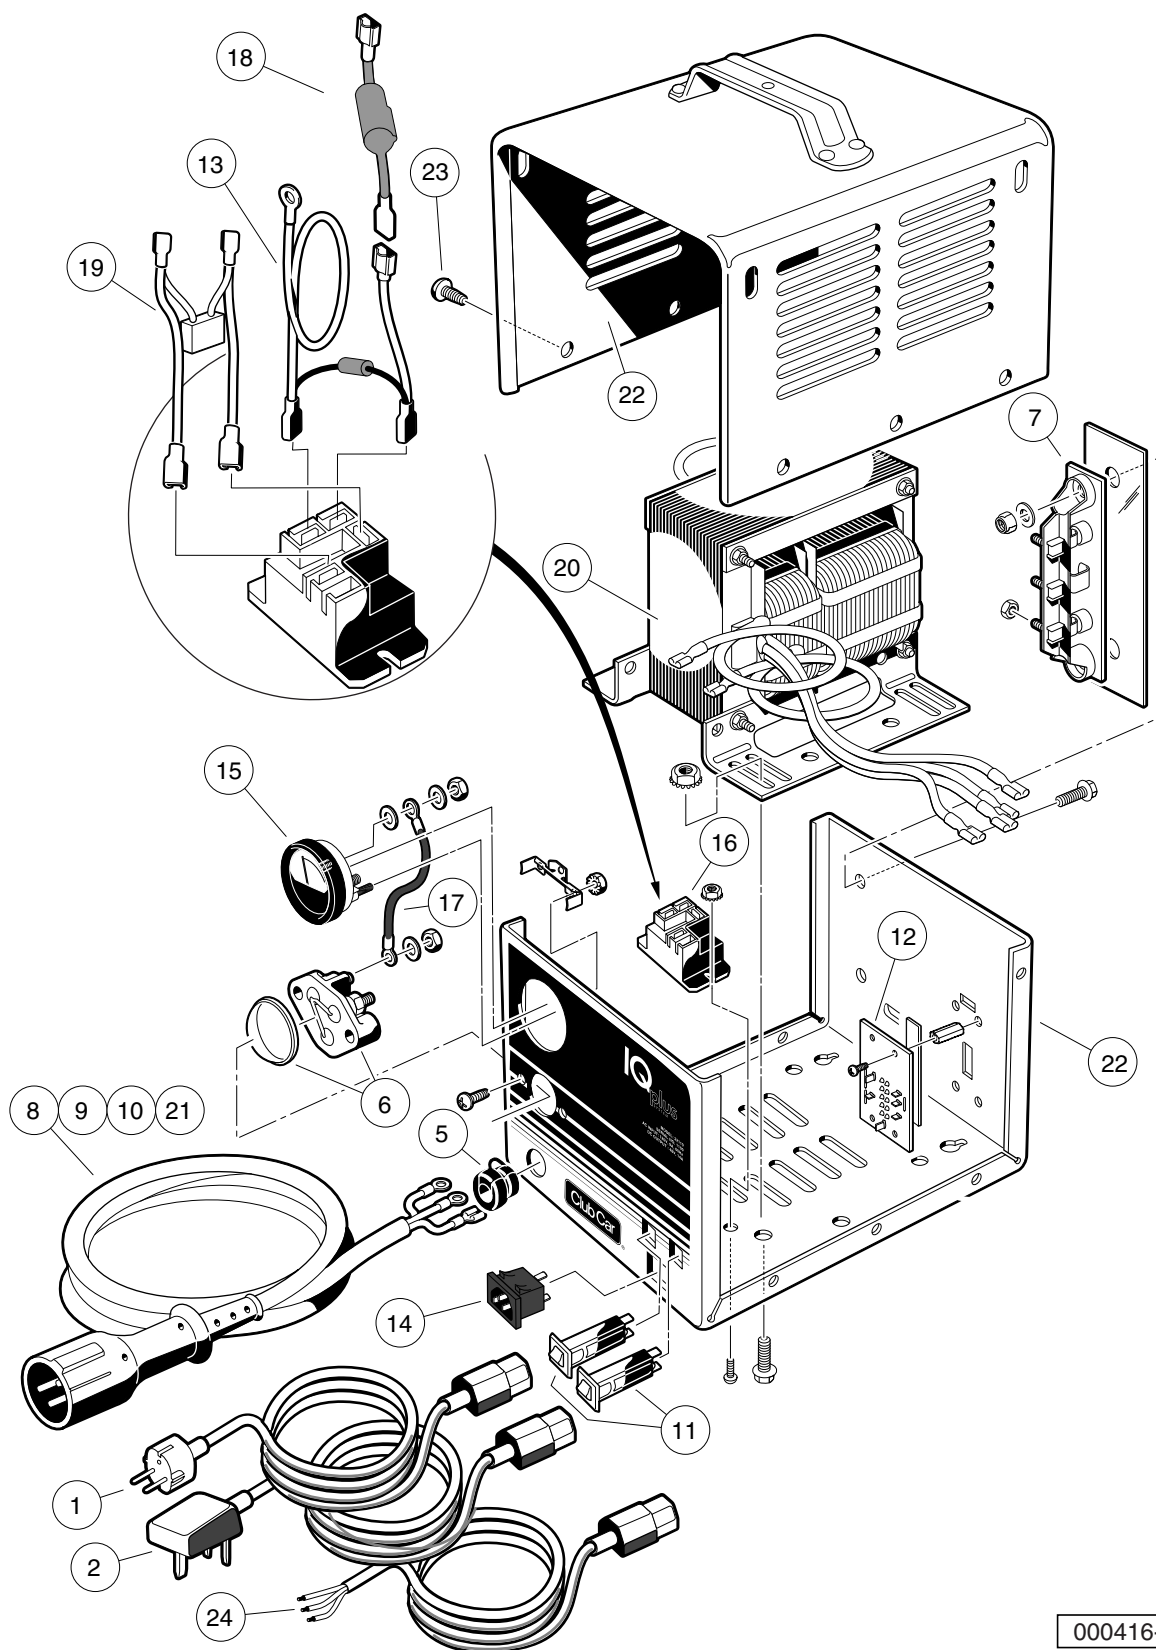


000416-001

IQ PLUS BATTERY CHARGER (MODEL 25880), EXPORT AND EUROPEAN

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101958201</u>	Cord, UK, AC, Battery Charger	1
2	<u>101958301</u>	Cord, European AC, Battery Charger	1
3	<u>102892901</u>	Charger, Export and European	1
4	<u>102892902</u>	Charger, Export and European (includes items 5 through 23)	1
5	<u>1012098</u>	Bushing, DC Cord	1
6	<u>1012101</u>	Fuse Assembly	1
7	<u>1015914</u>	Rectifier with Heatsink Assembly	1
8	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
9	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
10	<u>101828903</u>	Cord, DC, 250-Inch (635 cm)	1
11	<u>101838401</u>	Circuit Breaker	2
12	<u>101838601</u>	Four-Position Switch	1
13	<u>101914401</u>	Assembly, Voltage Suppressor	1
14	<u>101973501</u>	Receptacle, AC Cord	1
15	<u>101976601</u>	Ammeter with Mounting Bracket	1
16	<u>102275401</u>	Relay, 48-VDC	1
17	N/A	Wire, Jumper	1
18	****	Limiter, Current	1
19	****	Wire Assembly, Battery Charger	1
20	****	Transformer, Battery Charger	1
21	<u>102940801</u>	Cord, Dc	1
22	N/A	Case, Battery Charger	1
23	7577	Screw, #10 X 0.50 Phillips Pan-Head	10
24	<u>102939501</u>	Cord, European AC, Battery Charger	1
		**** Special order item available upon request.	

15

E

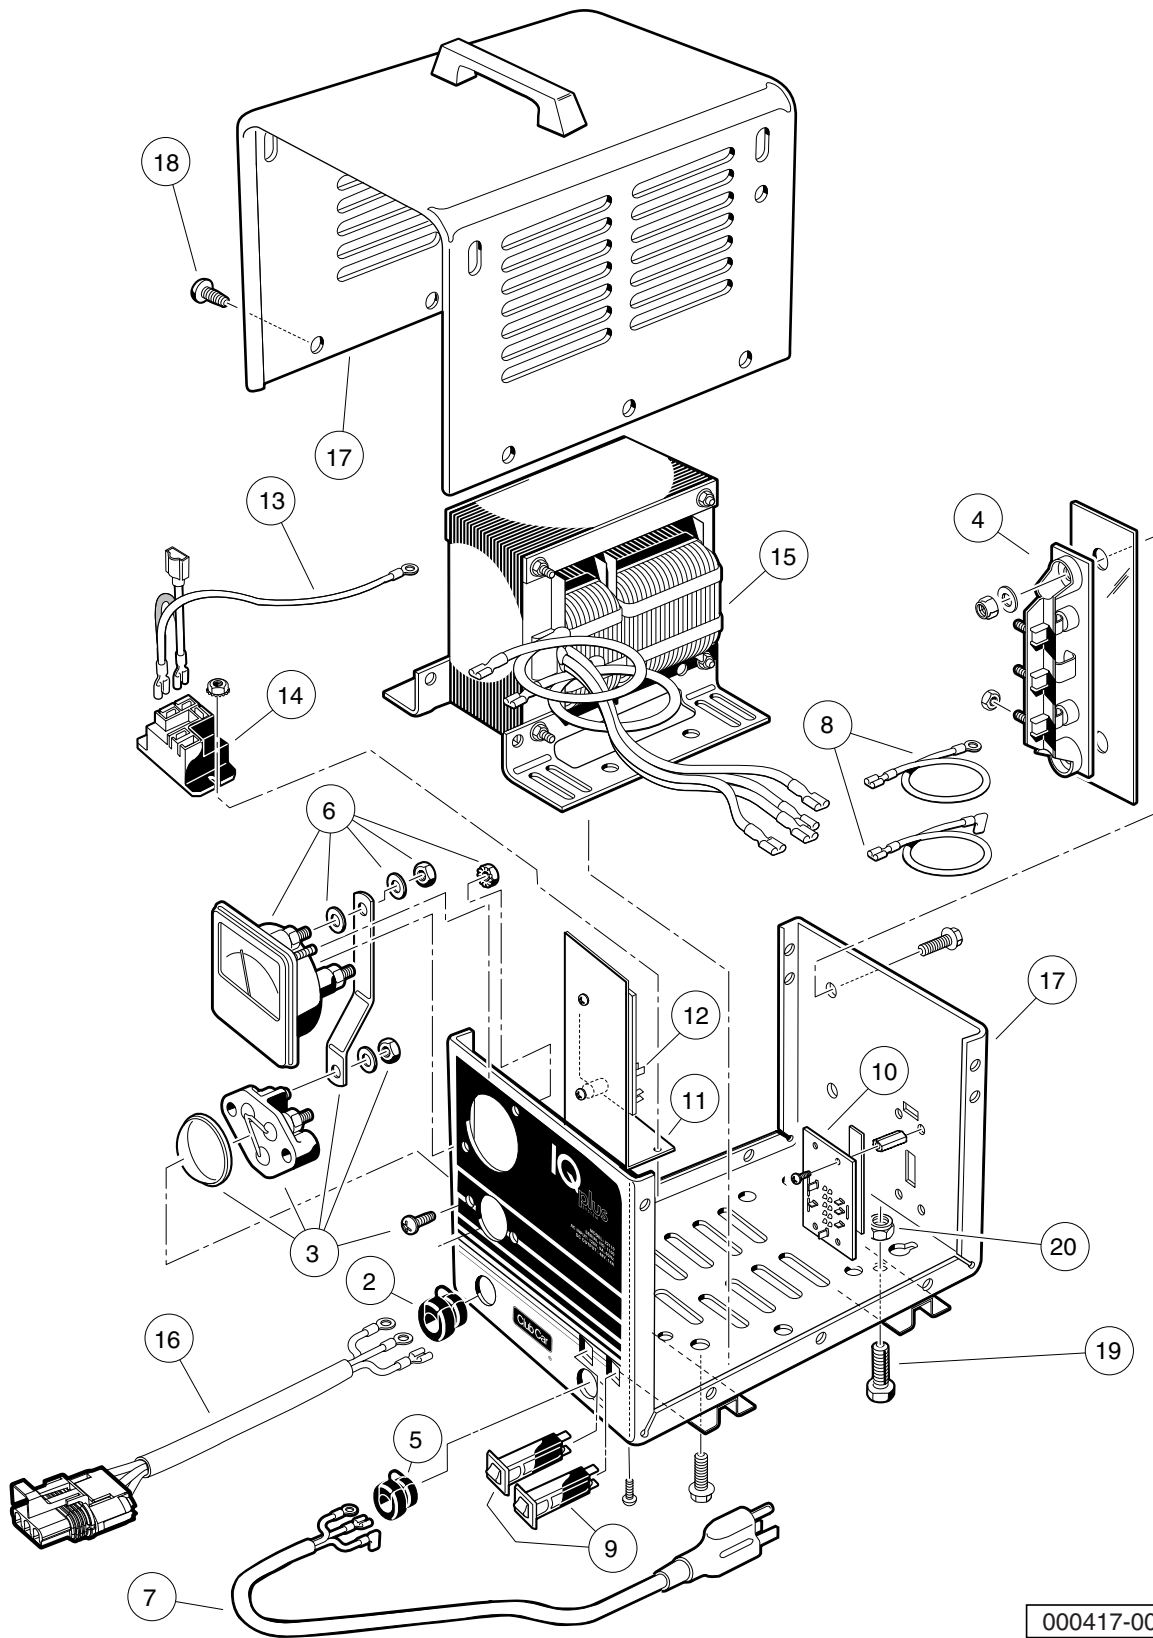

000417-001

IQ PLUS ONBOARD BATTERY CHARGER (MODEL 25660), EXPORT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102893001	Battery Charger, Onboard, International, IQ Plus (includes items 2 through 20)	1
2	<u>1012098</u>	Bushing, DC Cord	1
3	<u>1012101</u>	Fuse Assembly	1
4	<u>1015914</u>	Rectifier with Heatsink Assembly	1
5	<u>1015917</u>	Bushing, AC Cord	1
6	<u>101828501</u>	Ammeter	1
7	<u>101829001</u>	Cord, AC, 22-Inch (56 cm)	1
8	<u>101831101</u>	Wire Assembly Kit	1
9	101838401	Circuit Breaker	2
10	101838601	Four-Position Switch	1
11	****	Mounting Bracket, Relay	1
12	<u>101841901</u>	Control Board	1
13	101914401	Assembly, Voltage Suppressor	1
14	<u>102275401</u>	Relay, 48-VDC	1
15	****	Transformer, Battery Charger	1
16	<u>102940801</u>	Cord, Dc	1
17	N/A	Case, Battery Charger	1
18	7577	Screw, #10 X 0.50 Phillips Pan-Head	12
19	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
20	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
**** Special order item available upon request.			

15

E

15

E

MAINTENANCE AND SERVICE TOOLS

16

G

E


D

16

G

E

D

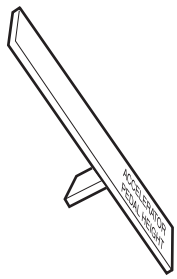


1



2



3

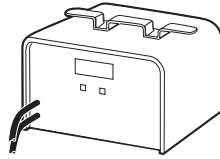


4




5



6

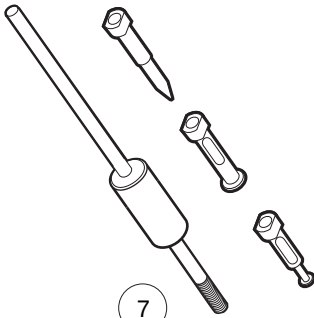


7

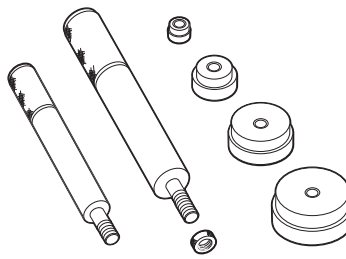

8




9

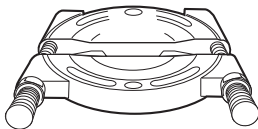


10




11

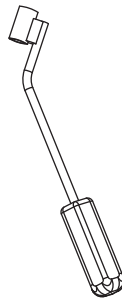


12

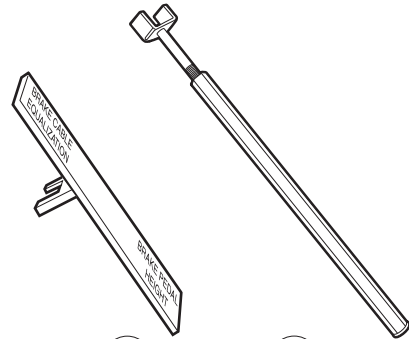


14 15 13

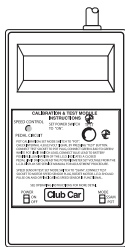


16

 

17

 

18

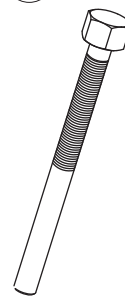

19

MAINTENANCE AND SERVICE TOOLS


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	16 G E D
		1 2 3 4 The following tool list includes all tools available from Club Car for maintenance and service procedures for gasoline, electric, and/or diesel vehicles, both past and present models. Be sure to carefully examine the tool list for applicability to your vehicle before ordering.				
1	<u>101871001</u>	Accelerator Pedal Adjustment Tool		1	1	
2	<u>101813202</u>	Adhesive, Guide Ring, 3-Gram Tube			1	
3	<u>101641202</u>	Arbor		1		
4	<u>101831901</u>	Battery Discharge Machine, 36/48 Volt			1	
5	<u>1014305</u>	Battery Terminal Protector Spray	1	1	1	
6	<u>1011767</u>	Battery Thermometer	1	1	1	
7	<u>1016417</u>	Bearing and Oil Seal Remover Assembly	1	1	1	
8	<u>1016416</u>	Bearing Driver Set	1	1	1	
9	<u>1012811</u>	Bearing Puller	1	1	1	
10	<u>1012812</u>	Bearing Puller Wedge Attachment	1	1	1	
11	<u>1013582</u>	Brake Adjustment Tool (used only on vehicles with manually adjusted mechanical brakes)		1	1	
12	<u>102555501</u>	Brake Cable Release Tool	1	1	1	
13	<u>102249901</u>	Brake Pedal Adjustment Tool Kit (used for the Carryall Electric Industrial Truck only) (includes items 14 and 15).....			1	
14	****	Brake Pedal Adjustment Tool			1	
15	****	Brake Pedal Tension Tool			1	
16	<u>101887101</u>	Calibration Test Module			1	
17	<u>101808401</u>	Cam Installation Tool		1		
18	<u>102562401</u>	Charger Bezel Tool			1	
19	<u>102686101</u>	Clutch Removal Tool (for 4x4 vehicles)	1	1		
		Please refer to the maintenance and service manual for proper tool application. **** Special order item available upon request				

16











G

E

D

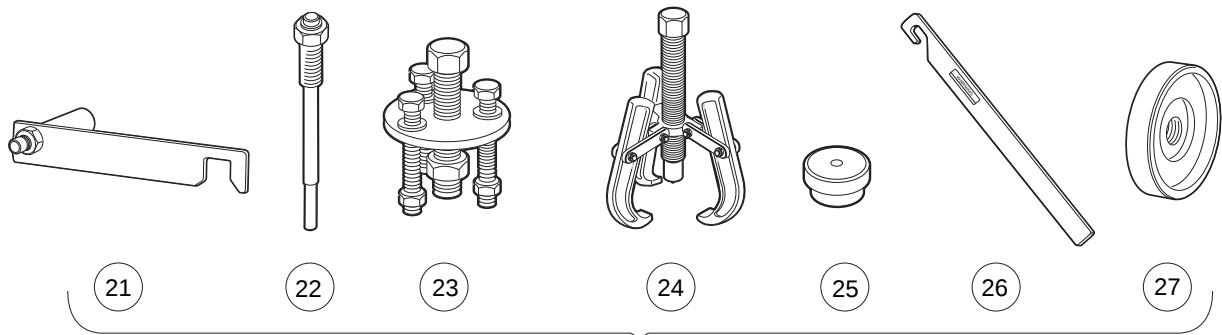

20

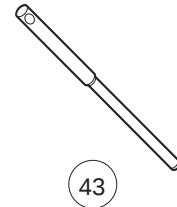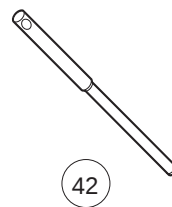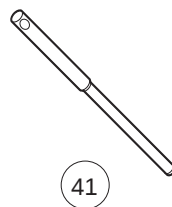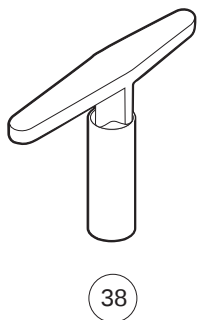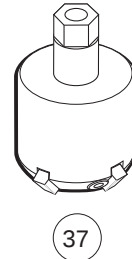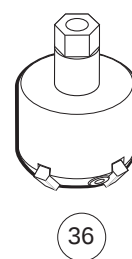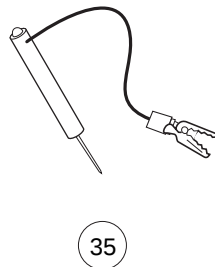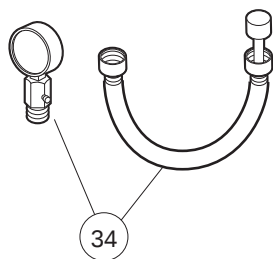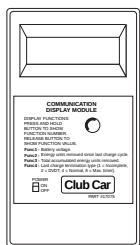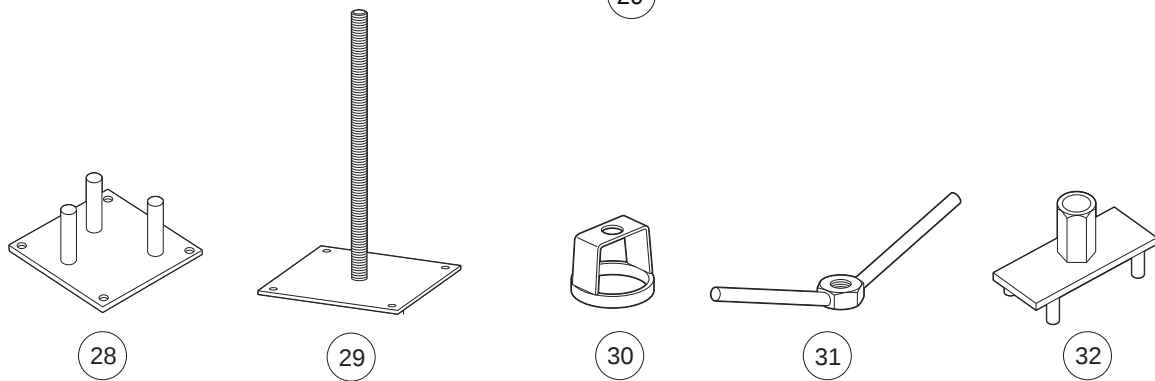

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	16 G E D
		1 2 3 4				
20	<u>1014510</u>	Clutch Tool Kit (includes items 21 - 27)		1		
21	<u>1014498</u>	Clutch Alignment Tool (for pre-unitized transaxle vehicles built prior to 1997 model year)		1		
22	<u>1014496</u>	Drive Clutch Puller (for Kawasaki engines only)		1		
23	<u>1014497</u>	Drive Clutch Hub Puller (for Kawasaki engines only)		1		
24	<u>1014508</u>	Driven Clutch Cam Puller (for Kawasaki engines only)		1		
25	<u>1014507</u>	Driven Clutch Puller Plug (for Kawasaki engines only)		1		
26	<u>1015524</u>	Drive Clutch Holder Tool Assembly (for Kawasaki engines only)		1		
27	<u>101809101</u>	Press Weldment (for Kawasaki engines only)		1		
28	<u>102601501</u>	Drive ClutchFixed Sheave Tool (for 4x4 vehicles)	1	1		
29	<u>102603501</u>	Driven Clutch Spring Compression Base (for use with items 30 and 31) (for 4x4 vehicles)	1	1		
30	<u>102605201</u>	Driven Clutch Spring Compression Collar (for use with items 29 and 31) (for 4x4 vehicles)	1	1		
31	<u>102606101</u>	Driven Clutch Spring Compression Nut (for use with items 29 and 30) (for 4x4 vehicles)	1	1		
32	<u>102607501</u>	Drive Clutch Spider Removal Tool (for 4x4 vehicles)	1	1		
33	101831801	Communication Display Module			1	
34	101641002	Compression Gauge and Adapter		1		
35	1011273	Continuity Tester		1	1	
36	<u>102773801</u>	Cutter, Valve Seat, #122		1		
37	<u>102773901</u>	Cutter, Valve Seat #115		1		
38	<u>102774101</u>	Wrench, T, #505.....		1		
39	<u>102774101</u>	Adapter, T-Wrench		1		
40	102675401	Cutter, Valve Seat, 60 Degree (requires item 51) (for Honda GX620 Gasoline Engines)		1		
41	<u>102774201</u>	Pilot, 6.6 MM		1		
42	<u>102774301</u>	Pilot, 6.62 MM.....		1		
43	<u>102774401</u>	Pilot, 6.65 MM.....		1		
		Please refer to the maintenance and service manual for proper tool application.				

16


G

E

 
D




44

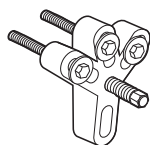

45

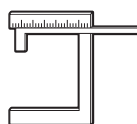


46

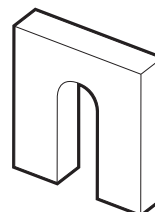


47



 48





49

 


50



51

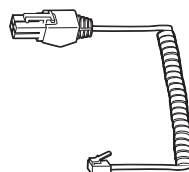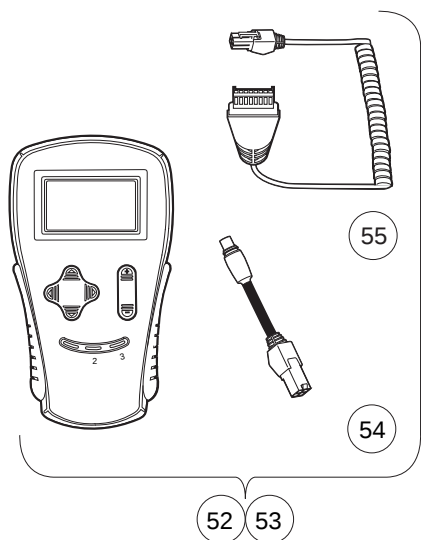

56

 

57



58



59 60




61

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	16 G E D
		1 2 3 4				
44	<u>1012151</u>	Dry Moly Lubricant	1	1	1	
45	<u>1016627</u>	Flywheel Puller Kit (for Kawasaki Engines)		1		
46	<u>102669901</u>	Gauge, Carburetor Float Level (for Honda GX620 Gasoline Engines)		1		
47	<u>1016418</u>	Gear Yoke	1	1	1	
48	<u>101933101</u>	Governor Shaft Installation Tool (for Kawasaki Engine Vehicles)		1		
49	<u>102169401</u>	Hydraulic Brake Adjuster (for Turf/CA 272/472, Pioneer/XRT 1200, Bobcat 2100, HUV 4213)			1	
50	<u>1011478</u>	Hydrometer	1	1	1	
51	<u>1013593</u>	Internal Retaining Ring Pliers	1	1	1	
52	<u>102248803</u>	IQ Display Module (IQDM) Kit (IQ System and IQ Plus vehicles)			1	
		(includes items 54 and 55)				
53	<u>102248804</u>	IQ Display Module (IQDM-P) Kit (IQ System and IQ Plus vehicles)			1	
		(includes items 54 and 55)				
54	<u>102251501</u>	Adaptor, Cable			1	
55	<u>102241502</u>	IQDM Series 2 Cable			1	
56	<u>102241501</u>	IQDM Series 1 Cable (replacement)			1	
57	<u>101928701</u>	Liquid Gasket (transaxle case)	1	1	1	
58	<u>102243402</u>	Moly-Teflon Lubricant (4-oz. (113-gram) tube)			1	
59	<u>101997201</u>	Paint, Touch-Up – Beige*		1	1	
59	<u>101997207</u>	Paint, Touch-Up – Black*		1	1	
59	<u>101997212</u>	Paint, Touch-Up – Burgundy*		1	1	
59	<u>101997211</u>	Paint, Touch-Up – Classic Blue (Navy)*		1	1	
59	<u>101997205</u>	Paint, Touch-Up – Dark Gray*	1	1	1	
59	<u>101997209</u>	Paint, Touch-Up – Dark Green*	1	1	1	
59	<u>101997204</u>	Paint, Touch-Up – Gray*	1	1	1	
59	<u>101997203</u>	Paint, Touch-Up – Red*	1	1	1	
59	<u>101997206</u>	Paint, Touch-Up – Royal Blue (Pacific Blue)*		1	1	
59	<u>101997202</u>	Paint, Touch-Up – White*	1	1	1	
60	<u>102562301</u>	Paint, Precedent Underbody – Gray		1	1	
61	<u>102587201</u>	Paint Pen, Touch-Up, Precedent Underbody – Black		1	1	
Please refer to the maintenance and service manual for proper tool application. * Item 59 is not for use on Surlyn[®] body material, which is used on Precedent vehicles.						



62

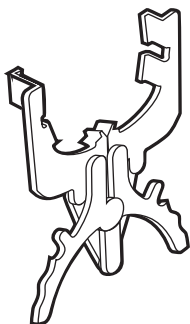

63

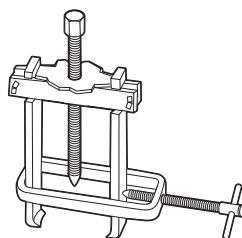


64



65



 66



67



68




69



70




71

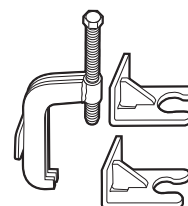

72




73

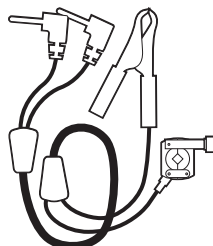


74



 
75



76

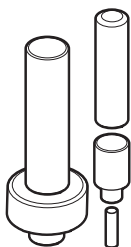

77

 

83



84



85




86

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	16 G E D
		1 2 3 4				
62	<u>1016414</u>	Piston Ring Compressor Kit (FE290, FE350 and FE400 engines)		1		
63	<u>1016415</u>	Piston Ring Pliers (for Kawasaki Engines)		1		
64	<u>102668801</u>	Puller, Special Use (for Kubota D722 Diesel Engines)	1			
65	<u>1012549</u>	Retaining Ring Pliers, 45° External	1	1	1	
66	<u>1012560</u>	Retaining Ring Pliers, 90° Internal	1	1	1	
67	<u>101823101</u>	Safety First Card (50 per pack)	1	1	1	
68	<u>1012809</u>	Seal Puller	1	1	1	
69	<u>102330901</u>	Spanner Wrench (for coil over shock front suspension vehicles only)	1	1		
70	<u>1014264</u>	Steering Column Bearing Press Tool		1	1	
71	<u>1014259</u>	Steering Column Retaining Ring Tool		1	1	
72	<u>102061201</u>	Steering Wheel Puller Tool	1	1	1	
73	<u>AM10753</u>	Tachometer (includes gasoline engine pick up lead only)	1	1		
74	<u>AM10771</u>	Tachometer Diesel Probe (for use with item 73)	1			
75	<u>1014162</u>	Transaxle Axle Seal Tool		1		
76	<u>1014161</u>	Transaxle Pinion Seal Tool		1		
77	<u>1014115</u>	Transmission Tool Kit		1		
78	<u>101611003</u>	Tune-Up Kit, All OHV (for FE290, FE350, FE400 only) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
79	<u>AM11804</u>	Tune-Up Kit, Gx620 (for Honda Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
80	<u>AM11805</u>	Tune-Up Kit, D722 (for Kubota Engines) (includes air filter, oil filter, fuel filters, water separator filter) (not shown)	1			
81	<u>AM1220301</u>	Tune-Up Kit, Precedent (for FE290/350 Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
82	<u>AM1232401</u>	Tune-Up Kit, FH680D (for Kawasaki V-Twin Engines) (includes oil filter, fuel filter, air filter, and spark plugs) (not shown).....		1		
83	<u>1016413</u>	Valve Clearance Adjuster Screw Holder (for FE290 engines only)		1		
84	<u>102674601</u>	Valve Guide Driver (for Honda GX620 Gasoline Engines)		1		
85	<u>101641201</u>	Valve Guide Reamer (FE290, FE350, and FE400 only)		1		
86	<u>102674401</u>	Valve Guide Reamer, 6.6 mm (for Honda GX620 Gasoline Engines)		1		




87

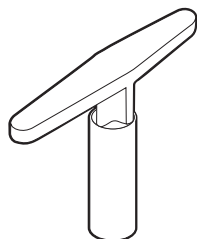


88

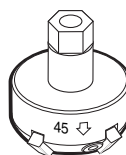


89

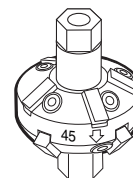


90

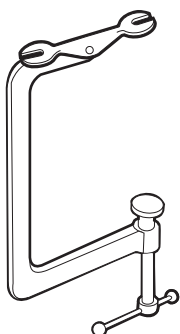

91

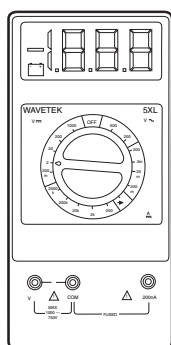


92

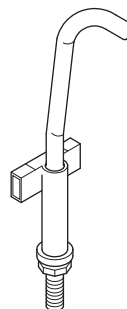


93



94

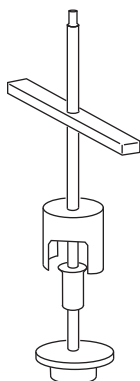

95

 

96

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	16 G E D
		1 2 3 4				
87	<u>1016552</u>	Valve Seat Cutter Guide		1		
88	<u>1016551</u>	Valve Seat Cutter T-Wrench		1		
89	<u>1016553</u>	Valve Seat Cutter, 45° (32 mm diameter) (for FE290 engines only)		1		
90	<u>1016554</u>	Valve Seat Cutter, 45°/30° (35 mm diameter)		1		
91	<u>101641101</u>	Valve Spring Compressor		1		
92	<u>1011480</u>	Volt Ohm Meter	1	1	1	
93	<u>102570401</u>	Tool, Tensioning, Starter Generator (For Precedent vehicles)		1		
94	<u>103601401</u>	Puller, Drive Clutch, XRT 950*		1		
95	<u>103601701</u>	Tool, Disassembly, Driven Clutch, XRT 950		1		
96	<u>103600501</u>	Screw, Driven Clutch Disassembly, M6, XRT 950		1		
*Note: The XRT 950 Drive Clutch Puller requires the use of Screw, Driven Clutch Disassembly, CCI Part Number <u>103600501</u>.						

INDEX

Part Number and Page

AM10753	16-9	7818	6-11	1010984	2-3
AM10771	16-9	7820	6-7, 12-3	1011014	1-3
AM10080	11-5	7840	5-15	1011017	1-3
AM10081	11-5	7847	1-19, 1-21, 9-3, 15-3, 15-5, 15-9, 15-11, 15-17	1011084	4-23
AM10419	10-7	7893	6-7, 6-11	1011114	4-3, 4-9
AM10724	7-5	7910	5-15	1011137	4-9
CCX8506	15-3	7973	1-5, 8-17	1011153	5-15
183	6-7, 6-11, 8-5, 8-17, 8-19, 10-3, 11-3	8056	6-23, 12-23	1011154	4-3, 4-9
304	6-7, 12-3, 15-11	8057	6-11, 6-23, 11-9, 12-23	1011229	6-7, 6-23, 12-3, 12-23
320	4-13, 4-15	8058	6-11, 6-23, 11-9, 12-23	1011273	16-5
332	1-7, 1-19, 1-21, 1-25, 1-27, 1-29, 6-7, 6-25, 8-15, 9-3, 12-3	8067	5-15	1011280	6-15, 12-13
334	4-19, 4-21, 5-3, 5-7, 5-17, 7-15	8104	11-9	1011291	11-7
357	5-11, 5-13, 5-23	8233	1-19, 1-21, 1-25, 1-29, 4-19, 4-21, 5-23, 6-7, 6-25, 11-3, 12-3, 15-3, 15-5, 15-9, 15-11, 15-17	1011298	4-3, 4-9
451	4-3, 4-9, 9-3, 13-3, 15-3, 15-5	8248	6-25	1011301	4-3, 4-9
705	6-19, 7-15	8418	1-29	1011303	4-3, 4-9
706	5-11, 5-13	8450	6-11, 10-3	1011314	4-3, 4-9
808	5-23, 10-3	8639	8-17, 12-7	1011382	6-13, 12-11
1016	6-7, 6-11, 8-5, 8-19	8717	4-19, 4-21, 6-11, 11-3, 11-9	1011393	5-15
1017	6-9, 6-11, 12-9	8754	1-19, 1-25, 4-13, 4-15, 4-19, 4-21, 5-3, 5-7, 5-9, 5-11, 5-13, 5-17, 5-19, 5-21, 6-19	1011394	1-3
1028	4-5, 4-7, 15-3, 15-5	8755	1-25, 5-11, 5-13, 5-19	1011402	4-5, 4-7
1032	4-5, 4-7	8796	15-3, 15-5, 15-13	1011415	5-19, 5-21
1035	5-7	8797	8-5, 8-19	1011418	4-5, 4-7
1108	1-27	8861	1-19, 5-23	1011439	6-15, 12-13
1218	1-29	8990	5-7, 5-17, 6-7, 6-11, 12-3, 12-17, 12-19	101146302	4-3, 4-9
1241	1-3, 1-29, 4-5, 4-7, 4-17, 4-19, 4-21, 6-11, 6-15, 6-19, 6-21, 9-3, 12-13	1010005	5-15	1011464	4-3, 4-9
1242	4-11, 4-17, 5-23, 6-11, 6-19	1010028	11-9	1011465	4-3, 4-9
1624	4-19, 4-21, 5-7, 5-17	1010124	5-11, 5-13	1011466	4-3, 4-9
1631	8-17	1010138	5-9	1011467	4-3, 4-9
2402	5-9, 5-11, 5-13	1010142	5-19, 5-21	1011478	16-7
4029	6-7, 12-3	1010144	5-19, 5-21	1011480	16-11
7048	5-15	1010145	5-19, 5-21	1011494	4-3, 4-9
7173	5-23, 6-15, 6-21, 12-13	1010150	5-11, 5-13	1011557	6-15, 12-13
7174	5-3, 5-23, 6-19, 8-13, 9-3, 13-3	1010200	5-13	1011578	5-3
7251	1-3	1010434	1-3, 1-29, 8-3	1011582	6-23, 12-21
7270	5-11	1010435	1-3, 1-25, 1-29	1011652	1-15, 1-17
7274	5-15	1010543	1-7, 1-15, 1-17	1011694	4-19, 4-21
7308	5-15	1010545	1-15, 1-17	1011697	1-21, 5-3, 7-15, 8-13
7310	2-3	1010577	7-15	1011700	4-19, 4-21
7311	1-27, 5-23	1010805	4-5, 4-7	1011707	15-3, 15-5
7330	11-7, 14-3	1010829	4-11, 4-17	1011734	4-23
7335	11-5, 14-3	1010850	4-3, 4-9	1011767	16-3
7336	14-3	1010877	4-5, 4-7	1011779	4-11, 4-17
7410	1-29	1010878	1-25, 4-5, 4-7	1011825	6-7, 12-3
7473	1-3, 1-21, 1-25, 1-29, 4-5, 4-7, 4-11, 4-17, 4-19, 4-21, 6-7, 6-11, 6-15, 6-21, 12-13	10109801	12-25, 12-27	101187702	4-5, 4-7
7479	1-19, 1-27, 15-3, 15-5	1010909	6-7	1011887	5-15
7532	1-25	1010921	4-5, 4-7	1011889	5-15
7540	5-7	1010927	4-5, 4-7	1011895	5-7
7555	5-7, 5-17	1010932	4-5, 4-7	1011930	5-7
7577	15-3, 15-5, 15-7, 15-9, 15-15, 15-17	1010933	4-5, 4-7	1011931	4-19, 4-21
7591	6-7, 12-3	1010934	1-27, 6-21, 13-3	1011988	1-29
7602	5-7	1010953	4-3, 4-9	1011990	1-19
7716	4-5, 4-7, 4-19, 4-21	1010954	6-11	1012098	15-3, 15-5, 15-7, 15-9, 15-15, 15-17
				1012101	15-3, 15-5, 15-7, 15-9, 15-15, 15-17
				1012151	16-7
				1012180	5-19
				1012181	5-21

INDEX

1012182	5-21	1013687	8-7	1014287	10-3
1012285	1-21, 8-7, 8-13	1013700	8-13	1014288	5-3, 6-21, 10-3, 15-13
1012295	6-11	1013734	9-3, 12-17	1014289	6-17
1012303	1-25, 5-11, 5-13, 5-19, 5-21	1013746	8-7, 8-11	1014305	16-3
1012304	5-19	1013760	11-3	1014306	1-21, 15-3, 15-5
1012431	6-11, 6-23, 12-23	1013768	11-7	1014321	1-11, 1-13, 1-19
1012438	8-17	1013769	11-7	1014375	6-21
1012467	5-7	1013770	11-7	1014387	1-11, 1-13, 1-19
1012505	6-13, 12-11	1013771	11-7	1014453	10-3
1012528	9-3, 12-17	1013772	11-7	1014454	10-7
1012549	16-9	1013773	11-7	1014471	1-25
1012560	16-9	1013774	11-7	1014496	16-5
1012571	7-15, 12-25, 12-27	1013787	11-7	1014497	16-5
1012604	5-3	1013792	11-7	1014498	16-5
1012605	5-3	1013794	11-7, 14-3	1014507	16-5
1012649	8-7	1013869	4-5, 4-7	1014508	16-5
1012711	11-3	1013870	4-5, 4-7	1014510	16-5
1012714	11-5	1013871	4-19, 4-21	1014530	6-7, 12-3
1012740	11-5	1013872	1-25	1014555	5-19, 5-21
1012741	11-5	1013876	4-5, 4-7	1014771	2-3
1012747	11-5	1013924	4-3, 4-9, 7-15	1014807	6-11, 11-9
1012748	11-5	1014007	4-19, 4-21, 11-3	1014808	11-9
1012752	11-3	1014049	10-3	1014902	5-21
1012809	16-9	1014050	10-3	1014948	6-11
1012811	16-3	1014052	10-3	101503202	1-5
1012812	16-3	1014055	10-3	1015072	12-25, 12-27
1012830	6-19, 8-13, 9-3	1014056	10-3	1015075	1-3
1012836	10-7	1014057	10-3	1015137	8-7, 8-11
1012896	11-3	1014058	10-3	1015139	8-5, 8-17
1012991	6-17	1014059	10-3	1015143	8-5
1013001	6-17	1014062	10-3	101524002	6-19
1013003	6-17	1014063	10-3, 15-13	1015332	7-3
1013005	6-17	1014065	6-11, 10-3	1015345	6-11
101301102	6-17	1014070	10-7	1015372	6-11
1013035	5-7, 5-17	1014072	10-7	1015373	6-11
1013042	5-7, 5-9, 5-17	1014076	10-7	1015399	1-25
1013044	5-7, 5-17	1014078	10-7	1015405	6-11
1013051	5-7, 5-17	1014080	10-7	1015426	8-15
1013052	5-7, 5-17	1014115	16-9	1015453	5-23
1013061	1-19, 11-3, 11-9	1014116	8-7	1015457	5-23
1013169	1-19	1014119	6-11	101547601	3-9
1013207	5-19	1014125	5-3	1015507	1-25
1013309	1-7, 1-15, 1-17	1014126	5-3	1015524	16-5
1013311	1-7	1014145	6-11	1015528	6-13, 12-11
1013312	1-7, 1-15, 1-17	1014153	4-3, 4-9	1015530	1-21
1013343	1-5	1014161	16-9	101553901	1-27, 3-5, 3-9
1013344	1-5	1014162	16-9	1015583	1-25, 5-11, 5-13, 5-19, 5-21
1013357	1-23, 6-7, 12-3, 12-19	1014193	11-7	1015597	5-7, 5-15
1013461	6-9, 8-5, 8-19, 12-9	1014201	13-3	1015613	5-23
1013462	8-5, 8-19	1014207	11-7	1015614	5-23
1013494	6-13, 12-11	1014213	5-3	101562711	1-7, 1-17
1013531	4-17	1014214	5-3	101562712	1-7, 1-15
1013582	16-3	1014217	5-3	101562714	1-7, 1-15
1013589	6-11	1014259	16-9	101562715	1-7, 1-17
1013593	16-7	1014264	16-9	101564501	1-7
1013609	6-11	1014276	5-11, 5-13	101564502	1-7

INDEX

101564503	1-7	101641201	16-9	101651414	2-3
101564505	1-7	101641202	16-3	1016517	7-9
1015649	7-3	1016413	16-9	1016518	7-9
1015654	1-27	1016414	16-9	1016519	7-9
1015656	1-27	1016415	16-9	1016521	7-11
101565701	1-27	1016416	16-3	1016531	7-3
101565702	1-27	1016417	16-3	1016535	7-11
101565703	1-27	1016418	16-7	1016537	7-7
101565704	1-27	1016423	6-11	1016538	7-11
1015660	1-27	101642575	8-9	1016539	7-3
101570506	2-3	101642578	8-9	1016541	7-13
101570507	2-3	101642580	8-9	1016544	7-5, 7-9, 7-11
101570514	2-3	101642582	8-9	1016546	8-13
1015707	2-3	101642585	8-9	1016547	7-3, 7-13, 8-11
1015720	6-7, 6-23, 12-17, 12-23	1016429	7-7	1016549	7-9
1015737	6-11	1016432	7-7, 11-3	1016551	16-11
1015741	6-11	1016436	7-9	1016552	16-11
1015752	6-11, 6-23, 8-15, 12-15, 12-21	1016437	8-9	1016553	16-11
1015760	5-23	1016438	8-11	1016554	16-11
1015814	9-3	1016440	7-9, 8-11	1016557	4-3, 4-9
101584502	8-13	1016441	8-11	1016560	7-9
1015878	6-11, 11-9	1016444	8-11	1016561	7-5
1015914	15-3, 15-5, 15-7, 15-9, 15-15, 15-17	1016445	7-5	1016562	7-5, 7-13
1015917	15-3, 15-5, 15-7, 15-9, 15-17	1016449	7-9	1016563	7-9
1015921	8-5, 8-19	1016450	7-9	1016564	7-11
1015932	6-19	1016452	7-9	1016566	7-9
1015969	7-3	1016454	7-11	1016569	7-9
1016011	10-3	1016455	7-5	1016570	7-7
1016074	6-19	1016456	7-3, 7-5	1016571	7-13
1016077	1-27	1016457	7-7	1016572	8-11
101609401	3-5, 3-9	1016458	7-9	1016573	4-3, 4-9
101611003	16-9	1016467	7-7	1016576	7-7
101615504	5-5	1016470	7-13	1016578	7-5
1016156	5-5	1016472	7-11	1016579	7-5
1016183	5-3	1016473	7-7	1016581	7-7
1016201	10-3	1016474	7-9	1016582	8-11
1016269	5-3	1016479	7-9	1016583	7-9
1016289	10-3	1016480	8-11	1016584	7-11
1016319	4-11	101648102	8-11	1016585	8-9
1016320	4-11	101648203	7-7	1016586	7-5
1016337	11-5	1016483	7-9	1016587	7-5
1016338	11-5	1016486	8-9	1016588	7-5
1016346	5-9	1016489	7-9	101661601	12-25
1016349	5-9	101649002	8-11	101661602	12-25
1016350	5-9	1016494	7-11	1016627	16-7
1016351	5-9	1016496	7-11	1016630	6-13
1016353	5-9	1016497	7-5	1016663	1-27, 5-5
1016356	6-7, 12-3, 12-19	1016499	8-9	1016668	1-29
1016379	1-21	1016501	8-9	1016672	11-7
1016384	5-11, 5-13	1016502	7-7	1016673	15-3, 15-5, 15-13
1016385	5-9	1016506	7-11	1016679	1-21
1016386	5-11, 5-13	1016507	7-3	101670201	3-11
1016387	5-11, 5-13	1016510	7-11	1016717	6-23, 12-21
1016389	5-11, 5-13	1016513	11-3	1016724	1-25
101641002	16-5	101651406	2-3	101674702	4-23
101641101	16-11	101651407	2-3	1016751	1-9, 1-19

INDEX

101675511	1-9, 1-19	1016967	1-3, 12-19	1017466	8-11
101675512	1-9, 1-19	1016997	6-11	1017468	7-5
101675514	1-9, 1-19	1017006	6-11	1017471	7-13
101675515	1-9, 1-19	1017029	4-5, 4-7	1017472	7-11
101677701	1-9, 1-19	101705701	3-5, 3-9	1017473	7-9
101677702	1-9, 1-19	1017062	6-9, 12-9	1017474	7-3
101677703	1-9, 1-19	1017064	6-9, 12-9	1017475	7-3
101677705	1-9, 1-19	1017065	6-9, 12-9	1017476	7-3
1016801	10-3	101707801	3-5, 3-9	1017486	7-3
1016813	5-23	1017079	1-21	1017487	7-11
1016814	5-23	1017080	1-3	1017490	7-5
1016816	1-19	1017082	11-3	1017500	7-3
1016819	1-19	1017187	15-3, 15-5, 15-11	1017501	7-13
1016824	1-15, 1-17	1017188	10-5	1017502	7-13
1016835	1-29	1017189	15-3, 15-5, 15-11	1017503	7-13
1016839	1-19	1017211	4-11	1017504	7-11
101684102	1-15	1017226	5-3	1017507	7-7
101684103	1-15	1017231	11-3	1017508	7-11
101684105	1-17	1017239	6-11	1017510	7-13
1016842	1-29	1017243	6-11	1017511	7-11
1016843	1-29	1017266	5-9	1017512	7-13
1016849	6-13, 6-23, 12-11, 12-23	1017273	5-5	1017513	7-11
1016851	6-13, 6-23, 12-11, 12-23	1017313	5-3	1017514	7-11
1016857	6-23, 12-23	1017314	5-3	101751801	7-11
1016859	6-23, 12-23	1017315	5-3	101751802	7-11
1016868	1-3	1017317	5-3	101751803	7-11
1016874	1-21	101737002	2-3	1017653	6-17
1016875	1-21	1017378	4-19, 4-21	1017686	10-7
1016876	1-21	1017380	4-19, 4-21	1017689	9-3
1016879	6-9, 12-9	101738301	10-3	1017696	4-19, 4-21
1016880	6-9, 12-9	101738302	10-3	1017721	6-7
1016883	6-19	1017424	4-19, 4-21	101773301	7-13
1016901	10-3	1017434	7-9	101773302	7-13
1016904	7-9, 9-3	1017435	7-9	101773303	7-13
101692501	1-3	1017442	7-7	101773304	7-13
101692502	1-3	1017443	7-9, 7-11	101773305	7-13
101692506	1-3	1017444	7-9	101773306	7-13
101692509	1-3	1017445	7-9	101773307	7-13
101692510	1-3	1017446	7-9	101773308	7-13
101692511	1-3	1017447	7-11	101773309	7-13
101692512	1-3	1017448	7-5	101773310	7-13
101692513	1-3	101744901	7-13	101773311	7-13
101692514	1-3	101744902	7-13	1017853	6-7, 12-3
101692515	1-3	1017450	7-13	101791101	4-3
1016930	1-19	101745101	7-13	101796201	4-19, 4-21
101693201	3-7	101745102	7-13	1017976	1-25
101693901	1-3	1017453	7-13	101801001	15-3, 15-5, 15-13
101693902	1-3	1017454	7-9	101802301	15-3
101693906	1-3	1017455	7-5	101804301	6-13, 8-15, 8-17
101693908	1-3	1017456	7-7	101808401	16-3
101693909	1-3	101745701	7-13	101809101	16-5
101693910	1-3	101745702	7-13	101811301	8-17
101693911	1-3	1017458	7-7	101811801	8-15
101693912	1-3	1017460	7-7	101811901	8-15
101693913	1-3	1017461	8-9	101812301	8-15
101693914	1-3	1017463	7-5	101813001	8-15

INDEX

101813202	16-3	101859401	9-3	101891001	11-7
101814301	15-3	101861901	4-19, 4-21	101891301	11-3
101814302	15-5	101862001	4-21	101891401	11-7
101817401	4-19, 4-21	101865301	4-11	101891501	11-7
101818801	4-19	101869302	6-17	101891601	11-5
101821501	8-15	101870401	1-3	101891901	11-5
101823101	16-9	101871001	16-3	101892001	11-5
101824401	8-7	101874601	4-11	101892201	11-5
101825101	3-3, 12-11	101874901	6-17	101892301	11-5
101825102	3-7, 6-13	101875001	6-17	101892401	11-5
101825701	8-17	101875101	6-17	101892501	11-5
101826201	12-11	101875102	6-17	101892601	11-5
101826401	6-13	101875201	6-17	101892701	11-7
101827101	7-15	101875301	6-17	101892901	11-3
101828501	15-3, 15-5, 15-7, 15-9, 15-17	101875401	6-17	101893201	11-5
101828801	15-7	101875501	6-17	101893801	11-3
101828802	15-7	101875601	6-17	101893901	11-5
101828901	15-7, 15-15	101875701	6-17	101894303	1-7
101828902	15-7, 15-15	101875802	6-17	101895401	14-3
101828903	15-7, 15-15	101876001	6-17	101895501	14-3
101829001	15-3, 15-5, 15-9, 15-17	101876202	6-17	101896501	6-17
101829101	15-3, 15-5	101876301	6-17	101897001	14-3
101830601	6-13, 12-11	101876402	6-17	101897201	14-3
101830701	6-13, 12-11	101876501	6-17	101897401	14-3
101831101	15-7, 15-9, 15-17	101877601	6-17	101897601	14-3
101831401	12-25, 12-27	101877701	6-17	101898001	6-21
101831601	15-5	101878101	6-17	101903601	14-3
101831801	16-5	101878201	4-5	101903701	14-3
101831901	16-3	101878302	5-7	101905901	8-9
101832202	8-13	101879001	6-17	101906901	14-3
101832302	8-13	101879401	5-7, 5-17	101908401	6-25
101832601	7-15	101879501	5-7, 5-17	101909201	7-5
101832701	7-15	101879601	5-7, 5-17	101909301	7-5
101832901	15-13	101879701	5-7, 5-17	101909401	7-5
101833101	7-15	101879801	5-7, 5-17	101909501	7-5
101833401	10-7	101879901	5-7, 5-17	101910501	11-7
101833601	11-3	101880001	5-7, 5-17	101914401	6-7, 12-3, 15-3, 15-5, 15-7, 15-9, 15-15, 15-17
101833701	6-17	101880101	5-7, 5-17	101915201	3-9
101833904	10-3	101880201	5-7, 5-17	101916001	7-13
101834001	10-7	101880301	5-7, 5-17	101916101	7-3
101834502	6-13, 12-11	101880701	4-3, 4-9	101916201	7-5
101834601	7-15	101880901	1-15, 1-17	101916301	7-5
101834801	11-3	101881101	7-5	101916701	6-19, 10-3
101836201	10-7	101881701	1-15, 1-17, 8-15	101917601	8-15
101837001	1-23	101884801	7-15	101918402	2-3
101837101	8-15	101886101	11-3	101918501	4-5, 4-7
101837301	6-19	101887101	16-3	101919801	4-19, 4-21
101838201	15-5	101887601	7-3	101920101	12-15
101838301	15-5	101889401	11-5	101921501	8-15
101838401	15-5, 15-15, 15-17	101889801	12-7	101922101	14-3
101838601	15-5, 15-15, 15-17	101890001	11-5	101922201	14-3
101841901	15-3, 15-5, 15-9, 15-17	101890101	11-3	101922501	6-25
101846301	1-29	101890201	11-3	101923001	14-3
101851101	6-13, 12-11	101890501	11-3	101923201	14-3
101856002	12-11	101890601	11-3	101923501	14-3
101856102	6-11	101890901	11-7		

INDEX

101923701	14-3	101972101	14-3	102323101	4-5, 4-7, 4-11, 4-17
101923901	14-3	101972201	14-3	102323201	4-5, 4-7, 4-11, 4-17
101925701	8-15	101972801	8-15	102330901	16-9
101926501	5-19	101973101	8-9	102336001	8-13
101926802	8-17	101973301	8-9	102336101	8-13
101926901	11-3	101973401	8-11	102355301	6-21
101927101	11-3	101973501	15-15	102356601	14-3
101927201	11-3	101976601	15-15	102356801	14-3
101927301	11-3	101980801	11-5	102357001	14-3
101927501	11-5	101980901	11-5	102376001	11-9
101927601	11-5	101981001	11-5	102406701	8-19
101927701	11-5	101984801	5-3	102430901	7-13
101927901	11-5	101987901	6-9, 12-9	102440901	12-17
101928001	11-5	101988001	6-9, 12-9	102453001	11-5
101928101	11-5	101988002	6-9, 12-9	102453101	11-5
101928301	11-7	101988101	6-9, 12-9	102458901	3-9
101928601	11-3	101988201	6-9, 12-9	102508701	12-11
101928701	11-3, 14-3, 16-7	101990801	4-17	102513701	8-5
101929401	5-19	102002801	12-25, 12-27	102515401	11-3
101929501	8-7	102002901	12-25, 12-27	102517601	6-15, 12-13
101931501	3-5	102003201	8-7	102518001	3-3, 12-11
101932201	6-15, 12-13	102022601	5-9	102522001	8-5, 8-19
101933101	16-7	102022602	5-9, 5-17	102526201	11-3, 11-9
101933701	8-17	102025401	4-13, 4-15	102529201	6-15, 12-13
101935301	4-13, 4-15	102026001	4-19, 4-21	102540301	7-15
101936801	12-15	102031901	11-7	102555501	16-3
101939901	6-17	102061201	16-9	102562401	16-3
101942301	13-3	102065901	7-15	102564002	5-11, 5-13
101946201	1-19	102066201	5-21	102570401	16-11
101953103	4-17	102101001	12-15	102572401	12-11
101953106	4-11	102101101	12-15	102601501	16-5
101953801	7-3	102155801	10-7	102603501	16-5
101954301	1-7, 1-15, 1-17	102162601	4-17	102605201	16-5
101955001	5-9	102166901	4-17	102606101	16-5
101955101	6-7, 12-3	102169401	16-7	102607501	16-5
101957101	6-15, 12-13	102186301	13-3	102616701	11-9
101958201	15-15	102186401	13-3	102668801	16-9
101958301	15-15	102196901	12-11	102669901	16-7
101960001	3-3, 3-7	102199001	6-7	102674001	16-5
101960501	3-9	102235201	13-3	102674101	16-5
101963301	1-11, 1-13	102238001	12-19	102674201	16-5
101963401	1-11, 1-13, 7-15	102240501	12-17	102674401	16-9
101964001	1-11, 1-13	102241501	16-7	102674601	16-9
101964601	3-5	102241502	16-7	102675001	16-5
101969701	6-15, 12-13	102242101	10-7	102675101	16-5
101971301	8-15	102243402	16-7	102675201	16-5
101972001	16-7	102243403	13-3	102675301	16-5
101972002	16-7	102248803	16-7	102675401	16-5
101972003	16-7	102249901	16-3	102684501	5-11, 5-13
101972004	16-7	102251501	16-7	102684602	11-9
101972005	16-7	102271601	7-11	102686101	16-3
101972006	16-7	102275401	15-7, 15-9, 15-15, 15-17	102704901	13-3
101972007	16-7	102278001	5-3	102751601	8-5
101972009	16-7	102289201	5-9, 5-17	102753401	7-9
101972011	16-7	102292801	4-11, 4-17	102764401	12-27
101972012	16-7	102304801	7-9	102764402	12-27

INDEX

102766201 12-25, 12-27
 102766301 5-11, 5-13
 102769701 12-17
 102770701 15-11
 102771701 14-3
 102772402 12-19
 102774501 12-17
 102774601 12-17
 102774701 12-17
 102775101 13-3
 102817101 12-17
 102817201 12-17
 102830301 12-25, 12-27
 102837001 15-9
 102838101 15-7, 15-9
 102845101 3-5
 102845203 12-25
 102845204 12-27
 102845501 12-7
 102847801 15-7
 102847802 15-7
 102847803 15-7
 102859501 12-17
 102865101 8-7
 102869401 6-7, 12-3
 102871801 5-19, 5-21
 102873401 12-25, 12-27
 102886301 14-3
 102886401 14-3
 102886501 14-3
 102886601 14-3
 102891101 5-21
 102892901 15-15
 102892902 15-15
 102893001 15-17
 102912801 12-17
 102917101 5-21
 102938301 12-7
 102938601 13-3
 102938701 13-3
 102938801 13-3
 102938901 13-3
 102939001 13-3
 102939101 13-3
 102939102 13-3
 102939501 15-15
 102940801 15-9, 15-15, 15-17
 102942601 15-11
 102951701 13-3
 102966401 1-11, 1-13
 102966501 1-11, 1-13
 102966502 1-11, 1-13
 102967601 3-5
 102969401 11-9
 102969801 11-9
 102969901 11-9

102974201 8-5
 102977001 6-13
 102977002 12-11
 102977901 8-7
 102978001 8-7
 102980801 12-25, 12-27
 102980901 12-25, 12-27
 102989501 1-13
 103010101 8-7
 103173301 11-9
 103174401 8-3
 103177401 11-9
 103180101 6-13, 12-11
 103187601 8-5
 103192701 11-9
 103197301 6-5, 6-11
 103198401 6-25
 103199001 6-13
 103199101 6-13
 103205401 3-3, 3-7, 6-13
 103205501 3-7, 6-25
 103210201 3-9, 6-13
 103210301 3-3, 12-11
 103218601 12-11
 103222001 12-7
 103245201 1-11, 1-13
 103245301 1-11, 1-13
 103255701 12-3
 103261701 3-11
 103261801 3-11
 103284201 3-11
 103306301 8-7
 103345701 10-3
 103348201 6-13
 103348202 12-11
 103348501 6-13
 103348601 6-13
 103350901 5-19
 103351001 5-9
 103351101 5-21
 103352701 15-13
 103354401 12-11
 103354701 5-9
 103369101 8-19
 103369501 11-9
 103372101 8-19
 103372201 8-19
 103372301 8-19
 103374701 8-19
 103390801 6-13
 103397901 12-3, 12-17, 15-3
 103414901 12-3, 12-17, 15-3
 103477901 5-15
 103502701 5-11
 103502801 5-13
 103538701 1-25

103538901 1-25
 103601501 5-17
 103601601 5-3
 103618101 6-15, 12-13
 103628801 5-11
 103628901 5-13
 103653401 5-17
 103653501 5-9
 103717302 5-15
 103717402 5-15
 103781101 8-7
 103781201 8-7
 96704416 7-15

A

AC cord 15-3, 15-5, 15-7, 15-9, 15-15, 15-17
 AC cord receptacle 15-15
 accelerator bracket and bearing assembly 4-19, 4-21
 accelerator cable 8-13
 accelerator pedal 4-19, 4-21
 accelerator pedal adjustment tool 16-3
 accelerator pivot rod 4-19, 4-21
 accelerator return spring 4-19, 4-21
 accelerator rod 4-23
 adapter
 cable (IQDM) 16-7
 adhesive, guide ring 16-3
 adjuster
 hydraulic brake 16-7
 adjuster, lash 7-11
 air box 8-15
 air box top 8-15
 air filter 8-15
 air intake hose 8-15
 ammeter 15-3, 15-5, 15-7, 15-9, 15-15, 15-17
 anchor body 4-3, 4-9
 anchor body kit 4-3, 4-9
 anchor, piston 4-3, 4-9
 anti-sway bar 5-23
 A-plate strap 5-9
 A-plate, delta 5-9
 arbor 16-3
 arm
 governor 11-3
 pivot 11-3
 rocker 7-9
 armature 6-17, 13-3
 armature conversion kit 6-17
 armrest 1-29
 assembly
 accelerator bracket and bearing 4-19, 4-21
 accelerator pivot rod 4-19, 4-21
 air box 8-15
 air box top 8-15
 armature 6-17

INDEX

- axle 11-7
 - bearing, steering shaft 5-3
 - bell crank and shaft 6-11
 - brush connector 6-17
 - brush holder 6-17
 - carburetor 8-9
 - connecting rod 7-13
 - cylinder head 7-9
 - delta A-plate 5-9
 - delta shock and gear support 5-9
 - drive clutch 10-3
 - drive hub 10-3
 - driven clutch 10-7
 - driven clutch fixed-face 10-7
 - field coil 6-17
 - float 8-9
 - fuel tank vent 8-5
 - governor 11-5
 - headlight 6-9, 12-9
 - headlight harness 6-9, 12-9
 - idle screw 8-9
 - inner ball joint 5-7, 5-17
 - kingpin 5-11, 5-13
 - moveable-face 10-3, 10-7
 - pilot air screw 8-9
 - plug cap 7-5
 - ratchet 4-5, 4-7
 - secondary clutch weight 10-3
 - steering shaft 5-3
 - steering wheel 5-5
 - turn signal lens 6-9, 12-9
 - axle 11-7, 14-3
 - axle shaft oil seal 11-7, 14-3
 - axle tube 14-3
- B**
- backing plate, brake 4-3, 4-9
 - bag, desiccant 10-3
 - ball bearing 7-11
 - ball joint 4-5, 4-7, 4-23, 5-7
 - ball joint, left-hand thread 5-7
 - ball stud 6-11
 - ball, shifter 11-5
 - ball, steel pressure relief 7-7
 - band, RPM limiter mount 7-5
 - bar, drive 12-15
 - bar, stabilizer 5-23
 - barb, vent 8-7
 - barrel, plastic 1-3, 1-29, 8-3
 - battery 6-21
 - battery cap, 6-volt 12-25, 12-27
 - battery charger 15-7, 15-15
 - battery charger and reel 15-3, 15-5
 - battery charger case 15-3, 15-5, 15-7, 15-9, 15-15, 15-17
 - battery charger harness 12-7
 - battery charger shield 15-13
 - battery charger transformer 15-3, 15-5, 15-7, 15-9, 15-15, 15-17
 - battery charger wire assembly 15-15
 - battery charger, onboard 15-3, 15-9, 15-17
 - battery clamp 6-21
 - battery condition indicator 12-11
 - battery discharge machine 16-3
 - battery hold-down 12-25, 12-27
 - battery hold-down rod 12-25, 12-27
 - battery insulator 1-23
 - battery light 12-11
 - battery terminal protector spray 16-3
 - battery thermometer 16-3
 - battery, 6-volt, Trojan T105 12-25
 - battery, 6-volt, Trojan T105, moist 12-25
 - battery, 6-volt, Trojan T145 12-27
 - battery, 6-volt, Trojan T145, moist 12-27
 - bearing 14-3
 - ball 7-11
 - ball (motor) 13-3
 - ball (steering pinion) 5-7, 5-17
 - front wheel hub 5-15
 - hub 5-15
 - idler 10-3
 - inner axle tube 11-7, 14-3
 - lower pinion (steering) 5-7, 5-17
 - needle 11-5
 - outer axle tube 11-7
 - pivot support 4-19, 4-21
 - steering shaft 5-3
 - thrust 5-11, 5-13
 - bearing and oil seal remover 16-3
 - bearing driver set 16-3
 - bearing puller 16-3
 - bearing puller wedge 16-3
 - bearing seat 5-3
 - bed frame assembly 1-25
 - bed seal 1-13, 1-25
 - bed, flat 1-25
 - bed, floor plate 1-25
 - bell crank and shaft 6-11
 - bellows 5-7, 5-17
 - belt, drive 10-5
 - belt, starter/generator 6-19, 10-3
 - bezel, choke cable 8-17
 - bezel, headlight 6-9, 12-9
 - block, brake-mounting 4-5, 4-7
 - block, fuse 6-11
 - block, terminal 6-7, 12-3, 12-19
 - body, anchor 4-3, 4-9
 - bolt, U- 5-21
 - boot, steering column 5-3
 - boot, switch 6-25
 - bottom, air box 8-15
 - box
 - air 8-15
 - electrical component 6-11
 - steering gear 5-7, 5-17
 - box, electrical component 6-11, 12-17
 - bracket 5-19
 - accelerator cable 8-13
 - adjustable starter/generator 6-19
 - battery charger 15-3, 15-5
 - brake cable guide 5-9
 - brake light switch 6-15, 12-13
 - FNR shifter 11-9
 - governor cable 8-13
 - headlight mounting 6-9, 12-9
 - horn 6-7, 12-3
 - muffler mounting 9-3
 - oil filter mount 7-7
 - oil level switch 7-11
 - relay mounting 6-11, 15-3, 15-5, 15-9, 15-17
 - retaining 8-17
 - RPM limiter 7-5
 - shock absorber 5-21
 - shock mounting 5-21
 - snubber 7-15
 - stabilizer bar mounting 5-23
 - stake side 1-27
 - starter/generator mounting 6-19
 - steering column 5-3
 - steering column mounting 5-3
 - throttle spring return 8-11
 - Tow/Run switch 6-25
 - brake actuator kit 4-3, 4-9
 - brake adjustment tool 16-3
 - brake backing plate 4-3, 4-9
 - brake cable 4-11, 4-17
 - brake cable equalizer 4-11, 4-17
 - brake cable hanger 5-19
 - brake cable release tool 16-3
 - brake cluster 4-3, 4-9
 - brake drum 4-3, 4-9
 - brake lever arm 4-3, 4-9
 - brake light switch bracket 6-15, 12-13
 - brake mounting block 4-5, 4-7
 - brake pedal 4-5
 - pedal, brake 4-7
 - brake pedal adjustment tool 16-3
 - brake pedal pad 4-5, 4-7
 - brake pedal tension tool 16-3
 - brake return spring 4-17
 - brake shoe 4-3, 4-9
 - brake spring 4-3, 4-9
 - breaker, circuit 15-3, 15-5, 15-15, 15-17
 - breather 11-3, 14-3
 - brush and screw set 6-17
 - brush box assembly 13-3
 - brush connector 6-17

INDEX

brush holder 6-17
 brush inspection port cover 6-17
 brush kit, motor 13-3
 brush port cover 6-17
 brush rigging 13-3
 brush spring 13-3
 brush spring set 6-17
 brush, motor 13-3
 bulb, headlight 6-9, 12-9
 bulb, tail light 6-23, 12-21
 bumper
 drive unit (motor) 13-3
 front 1-3
 front, kit 1-3
 rear 1-21
 rubber 1-25, 4-5, 4-7
 seal, long 1-7, 1-15, 1-17
 side trim 1-29
 spring return 4-19, 4-21
 bumper mounting 1-21
 bumper, seat 1-7
 bushing 10-3, 11-9
 bronze 5-15
 nylon 4-5, 4-7
 return line 8-19
 spindle 5-15
 stabilizer bar 5-23
 steel 1-25, 5-11, 5-13, 5-19, 5-21
 urethane 1-25, 5-9, 5-11, 5-13, 5-19, 5-21
 bushing support 5-23
 button, drive 10-7
 buzzer, reverse 6-13, 6-23, 12-11, 12-23

C

cable
 accelerator 8-13
 brake 4-11, 4-17
 choke 8-17
 governor 8-13
 IQDM 16-7
 calibration test module 16-3
 cam
 driven clutch 10-7
 electrical component box 6-11
 cam installation tool 16-3
 cam, FNR shifter 11-9
 camshaft 7-11
 camshaft shim 7-11
 camshaft spring 7-11
 cap
 battery, 6-volt 12-25, 12-27
 corner 1-11, 1-13, 1-19
 dust 12-11
 fuel tank 8-5
 key switch 6-13, 12-11
 plug 7-5
 seat back 1-9, 1-19
 carburetor 8-9
 carburetor float level tool 16-7
 carburetor gasket 8-11
 carburetor insulator 8-11
 carburetor mounting gasket 8-11
 card, safety first 16-9
 case
 battery charger 15-3, 15-5, 15-7, 15-9, 15-15, 15-17
 differential gear 11-7
 gear 11-3, 14-3
 rocker 7-9
 charger bezel tool 16-3
 charger harness 12-7
 charger, battery 15-7, 15-15
 charger, battery, onboard 15-3, 15-9, 15-17
 charger, battery, shield 15-13
 choke cable 8-17
 choke cable bezel 8-17
 choke valve 8-15
 circuit breaker 15-3, 15-5, 15-7, 15-9, 15-15, 15-17
 clamp
 battery 6-21
 cable retaining 8-13
 hose 8-7, 8-11, 8-15
 muffler hose 9-3
 clevis, upper delta 5-11, 5-13
 clip, meter 6-13
 cluster idler gear 11-5
 cluster, brake 4-3, 4-9
 clutch alignment tool 16-5
 clutch removal tool 16-3
 clutch repair kit 10-7
 clutch tool kit 16-5
 clutch weight 10-3
 clutch, driven 10-7
 coil, field 6-17
 coil, ignition 7-5
 collet 7-9
 column, steering 5-3
 communication display module 16-5
 component box, electrical 6-11
 component mounting plate 12-17
 component mounting plate cover 12-19
 compression gauge 16-5
 compression mount 5-23
 compressor, piston ring 16-9
 compressor, valve spring 16-11
 computer, onboard 12-17
 connecting bar 1-29
 connecting rod 7-13
 connector, a- 6-17
 continuity tester 16-5
 control board 15-3, 15-5, 15-9, 15-17

controller, speed 12-17
 cord connector 7-11
 cord reel 15-3, 15-5, 15-11, 15-13
 cord, AC 15-3, 15-5, 15-7, 15-9, 15-15, 15-17
 cord, DC 15-3, 15-5, 15-7, 15-9, 15-15, 15-17
 counterbalance guide shaft 7-13
 counterbalance weight 7-13
 cover
 brush inspection port 6-17
 brush port 6-17
 crankcase 7-11
 dust 4-3, 4-9, 5-15
 electrical box 6-11
 oil pump 7-7
 rocker switch hole 6-13, 12-11
 screw head 6-13, 12-11
 steering column 5-3
 cover, steering column 6-15, 12-13
 cowl 1-3
 crankcase 7-13
 crankcase cover 7-11
 crankcase vent tube 8-11
 crankshaft 7-13
 crankshaft rod 7-13
 crankshaft shim 7-13
 C-type stop ring 5-7, 5-17
 cup, spring 4-19, 4-21
 current limiter 15-15
 cushion, shock absorber 5-19, 5-21
 cutter, valve seat 16-5, 16-11

D

damper, RPM limiter 7-5
 dash 6-13, 12-11
 dash component 1-5
 dash panel 6-13, 12-11
 DC cord 15-3, 15-5, 15-7, 15-9, 15-15, 15-17
 decal
 4-gauge wire warning 3-5
 bed hold-down bolts 3-5, 3-9
 bed load warning 1-27, 3-5, 3-9
 Carryall/TransPorter 3-11
 component cover 3-5
 crush area warning 3-5, 3-9
 driver/passenger 3-9
 FNR 3-3, 3-9, 6-13, 12-11
 four-passenger warning 3-5, 3-9
 frame ground 3-9
 hot surface warning 3-9
 key switch 3-7, 6-13
 no ground warning 3-5
 on/off 3-3, 12-11
 operating instructions 3-7
 operating instructions (electric) 3-3, 12-11
 rollover warning 3-3, 3-7, 6-13
 rotating parts 3-9

INDEX

run/service switch 3-7, 6-25
Tow/Run switch 3-5
TransPorter 4 3-11
TransPorter 6 3-11
vehicle loading 1-27, 3-3, 3-7
delta A-plate 5-9
delta A-plate sub-assembly 5-9
delta shock and gear support 5-9
desiccant bag 10-3
DF-terminal insulator 6-17
diagnostic port 12-11
diesel tachometer probe 16-9
differential
drive unit 14-3
differential gear 11-7, 14-3
differential gear case 11-7
differential housing 14-3
differential idler gear 11-7
differential pin 11-7
diode 6-11
dipstick 7-3
drain plug 7-7
drain plug gasket 7-7, 11-3
drive bar 12-15
drive belt 10-5
drive button 10-7
drive clutch assembly 10-3
drive clutch button 10-3
drive clutch fixed sheave tool 16-5
drive clutch fixed-face 10-3
drive clutch holder tool 16-5
drive clutch hub puller 16-5
drive clutch puller 16-5
drive clutch pulley 10-3
drive clutch spider removal tool 16-5
drive clutch spring 10-3
drive clutch weight 10-3
drive hub 10-3
drive unit bumper 13-3
driven clutch 10-7
driven clutch button 10-7
driven clutch cam 10-7
driven clutch cam puller 16-5
driven clutch fixed-face assembly 10-7
driven clutch puller plug 16-5
driven clutch spring compression base tool 16-5
driven clutch spring compression collar tool 16-5
driven clutch spring compression nut tool 16-5
driver, drive clutch 10-3
drum, brake 4-3, 4-9
dry moly lubricant 16-7
duct, intake 8-17
dust cap 12-11

dust cover 4-3, 4-9, 5-15

E

E-clip 4-11, 4-17
electrical box cover 6-11
electrical component box 6-11, 12-17
end bell, commutator 6-17
end bell, output shaft 6-17
end cap, motor 13-3
end, tie rod 5-9
engine 7-3
engine mounting plate 7-15
engine shroud 7-3
equalizer pivot 4-11
equalizer rod 4-11, 4-17
equalizer, brake cable 4-11, 4-17
exhaust system 9-3
exhaust valve 7-9
extrusion, fender 1-3

F

face, moveable 10-3, 10-7
fan housing 7-3
fan shroud 7-3
fan, flywheel 7-5
fender extrusion 1-3
fender, rear 1-21
field coil 6-17
field coil housing 6-17
fill plug 11-3
filter
air 8-15
fuel 8-7
oil 7-7
oil pump 7-7
fitting, thread-forming grease 5-7, 5-15
fixed-face, drive clutch 10-3
fixed-face, driven clutch 10-7
flat bed 1-25
float 8-9
floor mat 1-5
flywheel 7-5
flywheel fan 7-5
flywheel fan plate 7-5
flywheel puller 16-7
FNR closeout brush 6-13
FNR shift lever 11-3
FNR shifter 11-9
FNR shifter bracket 11-9
FNR shifter cam 11-9
foam, seat 1-15, 1-17
foot rest 1-29
foot rest mat 1-29
fork, shift 11-5
frame and field, motor 13-3

front bumper 1-3
front bumper kit 1-3
front spring retainer plate 5-11, 5-13
front suspension sub-assembly 5-9
F-terminal hardware 6-17
f-terminal insulator 6-17
fuel filter 8-7
fuel gauge sending unit 8-5, 8-19
fuel line 8-7, 8-11
fuel meter 6-13
fuel pickup tube 8-5
fuel pump mount 8-7
fuel tank 8-5
fuel tank cap 8-5
fuel tank strap 8-7
fuel tank vent 8-5
fuel tank vent grommet 8-19
fuse 15-3, 15-5, 15-7, 15-9, 15-15, 15-17
10-amp 6-11
20-amp 6-11
fuse block 6-11

G

gasket 14-3
carburetor 8-11
carburetor mounting 8-9, 8-11
crankcase cover 7-9, 7-11
drain plug 7-7, 11-3
exhaust 7-9, 9-3
head 7-9
insulator 7-9, 8-11
liquid 11-3, 14-3, 16-7
rocker case 7-9
sending unit 8-5, 8-19
taillight 6-23, 12-21
gasket kit, FE350 7-9
gauge, battery condition 12-11
gauge, compression 16-5
gauge, fuel-hour 6-13
gear
case 11-3, 14-3
cluster idler 11-5
differential 11-7, 14-3
differential idler 11-7, 14-3
differential output 14-3
helical 7-13, 11-5, 11-7
spur 7-13, 11-5
synchro 11-5
gear yoke 16-7
governor 11-5
governor arm 11-3
governor cable 8-13
governor cable bracket 8-13
governor gear shaft 12-7
governor shaft installation tool 16-7
grommet 8-5, 8-17

INDEX

grommet, fuel tank vent 8-19
guard, splash 8-3
guide
 intake valve 7-9
 valve 7-9
 valve seat cutter 16-11
guide ring adhesive 16-3

H

handrail 1-29
hanger, brake cable 5-19
hardware, F-terminal 6-17
harness, battery charger 12-7
harness, headlight 6-5, 6-7, 12-3
harness, wire 6-5, 6-11, 6-15, 12-7, 12-13
head gasket 7-9
head, cylinder 7-9
headband, sealed, motor 13-3
headband, vented, motor 13-3
headlight assembly 6-9, 12-9
headlight bulb 6-9, 12-9
headlight harness 6-9, 12-9
headlight retainer 6-9, 12-9
headlight wire harness 6-5, 6-7, 12-3
heat shrink tube 15-3, 15-5, 15-11
heatsink and rectifier 15-3, 15-5, 15-7, 15-9, 15-15, 15-17
helical gear 7-13, 11-5, 11-7
hill brake rod 4-5, 4-7
hill brake weld assembly 4-5, 4-7
hinge pin 1-27
hinge plate 1-15, 1-17
hinge, stake side 1-27
hip restraint 1-29
hold-down rod, battery 12-25, 12-27
hold-down, battery 12-25, 12-27
horn 6-7, 12-3
horn bracket 6-7, 12-3
horn button and wire assembly 6-15, 12-13
hose, air intake 8-15
hose, fuel 8-7
hour meter 6-13
housing
 2-pin 12-15
 3-pin 12-15, 13-3
 differential 14-3
 fan 7-3
 field coil 6-17
hub 5-15
hub bearing 5-15
hub, synchronizer clutch 11-5
hydraulic brake adjuster 16-7
hydrometer 16-7

I

idle screw assembly 8-9

idler bearing 10-3
idler gear, differential 14-3
ignition coil 7-5
indicator, battery condition 12-11
inner frame snubber 7-15
input shaft 14-3
insert, synchronizer 11-5
instrument panel 6-13, 12-11
insulating washer 13-3
insulator gasket 7-9, 8-11
insulator, battery 1-23
insulator, carburetor 8-11
insulator, motor terminal 13-3
intake duct 8-17
intake pipe 8-11
intake valve 7-9
intermediate shaft 14-3
internal retaining ring pliers 16-7
IQ display module (IQDM) 16-7

J

jet, main 8-9
jet, pilot 8-9
joint
 ball 4-5, 4-7, 4-23
 left-hand thread ball 5-7

K

key
 crankshaft 7-5, 7-13
 driven clutch 10-7
 On/Off 6-13, 12-11
 square 10-7
 starter/generator 6-17
 woodruff 11-3
key switch 6-13
key switch cap 6-13, 12-11
key switch, On/Off 12-11
kingpin 5-11, 5-13
kit
 2-pin housing 12-15
 3-pin housing 12-15, 13-3
 accelerator pivot rod 4-19, 4-21
 anchor body 4-3, 4-9
 brake pedal 4-5
 brake pedal adjustment tool 16-3
 brake shoe retainer 4-3, 4-9
 clutch repair 10-7
 differential gear case 11-7
 drive clutch button 10-3
 drive clutch weight 10-3
 driven clutch button 10-7
 IQ display module (IQDM) 16-7
 motor brush 13-3
 motor speed sensor 13-3

park brake latch 4-5, 4-7
park brake pedal 4-5, 4-7
reverse buzzer 6-23, 12-23
shock absorber cushion 5-19, 5-21
tune-up 16-9
knob, forward/reverse 11-9

L

lash adjuster 7-11
latch, air box 8-15
latch, park brake 4-5, 4-7
leaf spring 5-19, 5-21
lens, headlight 6-9, 12-9
lens, taillight 6-23, 12-21
lever
 change 11-3
 choke 8-15
light
 battery 12-11
 oil 6-13
 tail 6-23, 12-21
limit switch 6-11, 6-15, 11-9, 12-13
limiter
 current 15-15
 RPM 7-5
 voltage 6-7
line, fuel 8-7, 8-11
link, rack and pinion drag 5-7
link, stabilizer bar 5-23
liquid gasket 11-3, 14-3, 16-7
low oil warning light 6-13
lubricant, dry moly 16-7
lubricant, moly-teflon 13-3, 16-7
lug nut 2-3
lug stud 11-7, 14-3

M

magnet, speed sensor 13-3
main jet 8-9
maintenance/operation switch 6-25
mat, floor 1-5
mat, foot rest 1-29
MCOR 12-15
meter clip 6-13
meter, volt ohm 16-11
module
 calibration test 16-3
 communication display 16-5
moly-teflon lubricant 16-7
motor
 48-volt IQ Plus 13-3
motor brush 13-3
motor brush kit 13-3
motor brush spring 13-3
motor bumper 13-3

INDEX

motor controller 12-17
motor end cap 13-3
motor frame and field 13-3
motor headband, sealed 13-3
motor headband, vented 13-3
motor magnet, speed sensor 13-3
motor speed sensor 13-3
motor speed sensor kit 13-3
motor terminal and lead assembly 13-3
motor terminal insulator 13-3
mount, compression 5-23
mount, fuel pump 8-7
mounting block, brake 4-5, 4-7
moveable-face 10-3, 10-7
muffler hose clamp 9-3

N

name plate 3-11
needle bearing 11-5
nozzle, main 8-9
nut, lug 2-3

O

OBC 12-17
oil filler tube 7-3
oil filter 7-7
oil filter mount bracket 7-7
oil filter screen 7-11
oil filter screen plate 7-11
oil level sensor 7-11
oil level switch bracket 7-11
oil pump and rotor 7-7
oil pump cover 7-7
oil pump filter 7-7
oil pump plate 7-7
oil seal 7-9, 7-11, 7-13, 11-3, 11-5
oil warning light, low 6-13
onboard battery charger 15-3, 15-9, 15-17
onboard computer 12-17
operation/maintenance switch 6-25
O-ring 7-3, 7-9, 7-11, 7-13

P

pad
 accelerator pedal 4-19, 4-21
 brake pedal 4-5, 4-7
 park brake 4-5, 4-7
paint, touch-up 16-7
panel, instrument 6-13, 12-11
park brake latch 4-5, 4-7
park brake pedal 4-5, 4-7
park brake rod sleeve 4-5, 4-7
park brake spacer 4-5, 4-7
park brake torsion spring 4-5, 4-7
pawl 4-5, 4-7

pedal group 4-7
pedal, accelerator 4-19, 4-21
pedal, brake 4-5
pedal, park brake 4-5, 4-7
pilot air screw assembly 8-9
pilot jet 8-9
pin, differential 11-7
pin, hinge 1-27
pin, piston 7-13
pinion, steering 5-7, 5-17
pipe, intake 8-11
piston 7-13
piston anchor 4-3, 4-9
piston pin 7-13
piston ring 7-13
piston ring compressor 16-9
piston ring pliers 16-9
piston ring set 7-13
pivot arm 11-3
pivot support bearing 4-19, 4-21
plate
 bed floor 1-25
 bumper mounting 1-21
 component mounting 12-17
 engine mounting 7-15
 flywheel fan 7-5
 front spring retainer 5-11, 5-13
 hinge 1-15, 1-17
 name 3-11
 oil filter screen 7-11
 oil pump 7-7
 receptacle backing 15-3, 15-5, 15-13
 score card 5-5
 spring mounting 5-11, 5-13
 steering wheel 5-5
 thrust 11-5, 11-7
pliers
 internal retaining ring 16-7
 piston ring 16-9
 retaining ring 16-9
plug
 drain 7-7
 driven clutch puller 16-5
 fill 11-3
 spark 7-5
plug cap 7-5
pole set 6-17
port, diagnostic 12-11
press weldment 16-5
protector spray, battery terminal 16-3
puller
 bearing 16-3
 clutch 16-3
 drive clutch 16-5
 drive clutch hub 16-5
 driven clutch cam 16-5

flywheel 16-7
seal 16-9
special use tool 16-9
pulley
 drive clutch 10-3
 starter-generator 6-17
push rod 7-9

R

race, front hub bearing 5-15
rack and pinion drag link 5-7
rack guide pressure spring 5-7, 5-17
rack, steering 5-7, 5-17
ratchet, park brake 4-5, 4-7
reamer, valve guide 16-9
rear bumper 1-21
rear fender 1-21
rear spring shackle 5-19
receptacle backing plate 15-3, 15-5, 15-13
receptacle, AC cord 15-15
rectifier with heatsink 15-3, 15-5, 15-7, 15-9, 15-15, 15-17
reel bracket 15-11
reel cord 15-3, 15-5, 15-11, 15-13
regulator, voltage 6-11
relay 6-11, 15-5
relay mounting bracket 6-11, 15-3, 15-5, 15-9, 15-17
relay, 12-volt 6-7
relay, 48-volt 15-7, 15-9, 15-15, 15-17
remover, bearing and oil seal 16-3
retainer
 accelerator pedal spring 4-19, 4-21
 brake shoe 4-3, 4-9
 headlight 6-9, 12-9
 shock absorber cushion 5-19, 5-21
 spring (drive clutch) 10-3
 valve spring 7-9
retaining bracket 8-17
retaining ring 5-3
retaining ring pliers 16-9
return spring bumper 4-19, 4-21
reverse buzzer 6-13, 6-23, 12-11, 12-23
rim, wheel, white 2-3
ring
 piston 7-13
 retaining 5-3, 6-11, 10-3, 10-7
 snap 5-7, 5-17, 7-9, 7-13
 spiral backup 10-3
 synchronizer 11-5
ring, C-type stop 5-7, 5-17
ring, piston 7-13
rivet, blind push 1-3, 12-19
rocker arm 7-9
rocker case 7-9
rocker case gasket 7-9

INDEX

rocker shaft 7-9
rocker switch 12-11
rocker switch (lights) 6-7, 12-3
rod
 accelerator 4-23
 accelerator pivot 4-19, 4-21
 battery hold-down 12-25, 12-27
 connecting 7-13
 crankshaft 7-13
 equalizer 4-11, 4-17
 hill brake 4-5, 4-7
 push 7-9
 shift 11-5
rotor, oil pump and 7-7
RPM limiter 7-5
RPM limiter bracket 7-5
RPM limiter damper 7-5
RPM limiter mount band 7-5

S

safety first card 16-9
screen, oil filter 7-11
screw, valve clearance adjuster 16-9
seal
 bed 1-25
 intake 8-15
 lip 14-3
 oil 7-9, 7-11, 7-13, 11-3, 11-5, 11-7, 14-3
 steering pinion dust 5-7, 5-17
 vertical socket dust 5-7
seal puller 16-9
seal, bed 1-13
sealant 11-3, 14-3
seat
 spring 7-9
 valve 7-7
seat back 1-9, 1-19
seat back assembly 1-9, 1-19
seat back cap 1-9, 1-19
seat back mounting bracket 1-19
seat back tube 1-11, 1-13
seat back, white 1-9, 1-19
seat bottom assembly 1-7, 1-15, 1-17
seat bumper 1-7
seat cover, vinyl 1-7, 1-15, 1-17
seat foam 1-15, 1-17
seat hinge 1-19
seat strap 1-7, 1-15, 1-17
seat, bearing 5-3
sending unit, fuel gauge 8-5, 8-19
sensor, motor speed 13-3
sensor, oil level 7-11
set, brush and screw 6-17
set, pole 6-17
shackle weldment 5-21
shackle, rear spring 5-19
shaft
 change 11-3
 counterbalance guide 7-13
 governor gear 12-7
 input 14-3
 intermediate 14-3
 rocker 7-9
 steering column 5-3
 transmission 11-5
shield, battery charger 15-13
shift fork 11-5
shift lever 11-3
shift rod 11-5
shifter, FNR 11-9
shim, camshaft 7-11
shim, crankshaft 7-13
shim, tilt bed pivot 1-25
shock absorber 5-9, 5-19, 5-21
shock absorber cushion 5-19, 5-21
shock absorber cushion retainer 5-19, 5-21
shock mounting bracket 5-21
shoe, brake 4-3, 4-9
shroud 7-3
shroud, engine 7-3
shroud, fan 7-3
sleeve
 delta A-plate 5-9
 governor 11-5
 park brake rod 4-5, 4-7
 synchronizer 11-5
snap ring 5-7, 5-17, 7-9, 7-13
snubber bracket 7-15
snubber, inner frame 7-15
socket 5-7
solenoid 12-17
solenoid, 12-volt 6-11
spacer
 accelerator pivot rod 4-19, 4-21
 park brake 4-5, 4-7
spanner wrench 16-9
spark plug 7-5
speed controller 12-17
speed sensor 13-3
speed sensor magnet 13-3
speed sensor, motor 13-3
spiral backup ring 10-3
splash guard 8-3
spray, battery terminal protector 16-3
spring
 accelerator return 4-19, 4-21
 brake 4-3, 4-9
 brake return 4-17
 brush 6-17, 13-3
 camshaft 7-11
 drive button 10-3
 drive clutch 10-3
 driven clutch 10-7
 extension return 8-15
 leaf 5-19, 5-21
 park brake torsion 4-5, 4-7
 rack guide pressure 5-7, 5-17
 shifter 11-5
 steering shaft compression 5-3
 synchronizer 11-5
 throttle return 8-11
 valve 7-9
spring cup 4-19, 4-21
spring mounting plate 5-11, 5-13
spring, motor brush 13-3
spur gear 7-13, 11-5
stabilizer bar 5-23
stabilizer bar link 5-23
stabilizer bar mounting bracket 5-23
stake side 1-27
stake side bracket 1-27
stake side hinge 1-27
stake side kit 1-27
starter/generator 6-17
starter/generator belt 6-19, 10-3
starter/generator pulley 6-17
steel bushing 1-25, 5-11, 5-13, 5-19, 5-21
steel pressure relief ball 7-7
steering column 5-3
steering column bearing press tool 16-9
steering column cover 6-15, 12-13
steering column retaining ring tool 16-9
steering gear box 5-7, 5-17
steering pinion 5-7, 5-17
steering pinion dust seal 5-7, 5-17
steering rack 5-7, 5-17
steering shaft assembly 5-3
steering shaft compression spring 5-3
steering wheel 5-5
steering wheel plate 5-5
steering wheel puller tool 16-9
stem, valve 2-3
stiffener 1-7
stiffener, flywheel side 7-15
stiffener, PTO side 7-15
strap, A-plate 5-9
strap, fuel tank 8-7
strap, seat 1-7, 1-15, 1-17
stud 7-15
 lug 11-7, 14-3
stud, ball 6-11
support yoke (steering) 5-7, 5-17
support, bushing 5-23
suppressor, voltage 6-7, 12-3, 15-3, 15-5, 15-7, 15-9, 15-15, 15-17
switch
 four-position 15-5, 15-15, 15-17
 key 6-13, 12-11

INDEX

light rocker 6-7, 12-3
limit 6-11, 6-15, 11-9, 12-13
rocker 12-11
switch rubber boot 6-25
switch, operation/maintenance 6-25
switch, toggle 6-25
synchro gear 11-5
synchronizer clutch hub 11-5
synchronizer insert 11-5
synchronizer sleeve 11-5
synchronizer spring 11-5
system, exhaust 9-3

T

12-volt solenoid 6-11
tachometer 16-9
tachometer probe, diesel 16-9
tail light bulb 6-23, 12-21
taillight 6-23, 12-21
taillight gasket 6-23, 12-21
taillight lens 6-23, 12-21
tailskirt 1-21
tank, fuel 8-5
tape, vinyl foam 1-25
terminal block 6-7, 12-3, 12-19
tester, continuity 16-5
thermometer, battery 16-3
thread-forming grease fitting 5-7, 5-15
throttle return spring 8-11
throttle spring return bracket 8-11
thrust bearing 5-11, 5-13
thrust plate 11-5, 11-7
tie rod end 5-9
tie wrap 5-7, 5-17, 6-7, 6-11, 8-17, 12-3, 12-7, 12-17, 12-19
tire 2-3
tire and wheel assembly 2-3
toggle switch 6-25
tool

accelerator pedal adjustment 16-3
belt tensioning, starter/generator 16-11
brake adjustment 16-3
brake cable release 16-3
brake pedal adjustment 16-3
brake pedal tension 16-3
cam installation 16-3
carburetor float level 16-7
charger bezel 16-3
clutch alignment 16-5
cT-wrench 16-5
drive clutch fixed sheave 16-5
drive clutch holder 16-5
drive clutch spider removal 16-5
driven clutch spring compression base 16-5
driven clutch spring compression collar

16-5
driven clutch spring compression nut 16-5
governor shaft installation 16-7
puller, special use 16-9
steering column bearing press 16-9
steering column retaining ring 16-9
steering wheel puller 16-9
transaxle axle seal 16-9
transaxle pinion seal 16-9
transmission 16-9
valve guide driver 16-9
valve seat cutter 16-5
tool kit, clutch 16-5
touch-up paint 16-7
Tow/Run switch bracket 6-25
transaxle 14-3
transaxle axle seal tool 16-9
transaxle housing 14-3
transaxle pinion seal tool 16-9
transaxle, unitized 11-3
transformer, battery charger 15-3, 15-5, 15-7, 15-9, 15-15, 15-17
transmission shaft 11-5
transmission tool 16-9
trim
cowl 1-3
seat bottom 1-11, 1-13
tube
crankcase vent 8-11
fuel pickup 8-5
oil filler 7-3
seat back 1-11, 1-13
tune-up kit 16-9
turn signal lens 6-9, 12-9
T-wrench tool 16-5

U

U-bolt 5-21
u-bolt 5-19
unitized transaxle 11-3
upper delta clevis 5-11, 5-13
urethane bushing 1-25, 5-9, 5-11, 5-13, 5-19, 5-21

V

valve
choke 8-15
exhaust 7-9
intake 7-9
reed 7-9
valve clearance adjuster screw 16-9
valve guide 7-9
valve guide driver tool 16-9
valve guide reamer 16-9
valve guide, intake 7-9
valve seat 7-7

valve seat cutter 16-5, 16-11
valve seat cutter guide 16-11
valve seat cutter tool 16-5
valve seat t-wrench 16-11
valve spring 7-9
valve spring compressor 16-11
valve spring retainer 7-9
valve stem 2-3
vent barb 8-7
vent, fuel tank, w/ valve 8-19
vertical socket dust seal 5-7
volt ohm meter 16-11
voltage limiter 6-7
voltage regulator 6-11
voltage suppressor 6-7, 12-3, 15-3, 15-5, 15-7, 15-9, 15-15, 15-17

W

warning light, low oil 6-13
washer, insulating 13-3
wedge, bearing puller 16-3
weight
clutch 10-3
counterbalance 7-13
secondary clutch 10-3
weldment
press 16-5
wheel 2-3
wheel and tire assembly 2-3
wheel rim, white 2-3
wheel, steering 5-5
wire assembly, battery charger 15-15
wire harness 6-5, 6-11, 6-15, 12-7, 12-13
wire harness, headlight 6-5, 6-7, 12-3
woodruff key 11-3
wrap, tie 5-7, 5-17, 6-7, 6-11, 8-17, 12-3, 12-7, 12-17, 12-19
wrench, spanner 16-9

Y

yoke, gear 16-7
yoke, support (steering) 5-7, 5-17



Club Car, Inc.
P.O. Box 204658
Augusta, GA 30917-4658
USA

Web	www.clubcar.com
Phone	1.706.863.3000 1.800.ClubCar
Int'l	+1 706.863.3000
Fax	1.706.863.5808