




2004-2005 Transportation Vehicles Illustrated Parts List

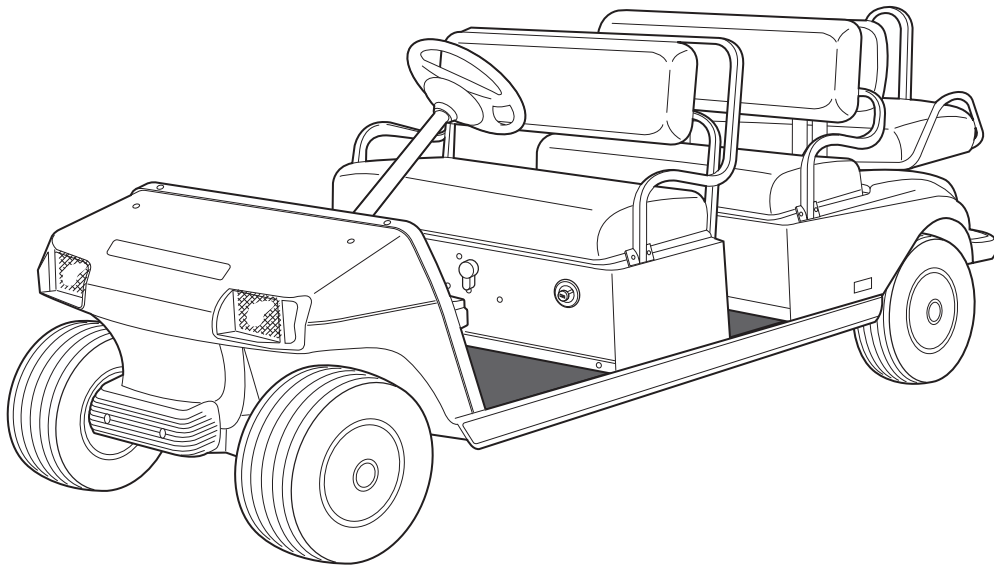

**Villager 4, Villager 6, Villager 8,
TransPorter 4, and TransPorter 6
Gasoline and Electric Vehicles**

Manual Number 102397503
Edition Code 0805U0112T

USING THE ILLUSTRATED PARTS LIST

WARNING

- **This manual is to be used only for identification and ordering of service parts. Be sure to read and use the maintenance and service manual before attempting any vehicle repairs.**

This manual covers all DS Villager 4, Villager 6, Villager 8, TransPorter 4, and TransPorter 6 vehicles built during the 2004 and 2005 model years.

The manual is divided into sections. Note that there are two or three flags on the outside edge of each page. The first flag contains the section number of which that page is a part. The other flag (or flags) contains the letter G or E, signifying that the page pertains to the electric or gasoline vehicles only.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section numbers, and under them, the individual page titles and numbers to be found in that section. The index can be used to find specific parts and assemblies. The index is divided into numerical and alphabetical listings with the page numbers in italic text.

There is a two-page spread for each individual page title in the Table of Contents. On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used.

Note that a part description may be indented. This indentation corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to *level 2* is a component of the *level 1* part (assembly) that it is listed under. A *level 3* part is a component of the *level 2* part that it is listed under, and a *level 4* part is a component of the *level 3* part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part is *the quantity used per next higher level assembly of which it is a component*. A part that is not indented is a *level 1* part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.

HOW TO ORDER PARTS

Replacement parts and accessories can be obtained from our network of authorized dealers and distributors. You can obtain the name and phone number of your closest authorized Club Car dealer or distributor by visiting our web site at www.clubcar.com and clicking on the "Distributor Search" link or by calling our toll-free Service Parts and Technical Assistance hotline at (800) 872-2246 or (706) 863-3000, extension 3887.



P. O. Box 204658
Augusta, Georgia 30917-4658 USA
Telephone 706-863-3000
Service Parts Fax 706-855-7413
www.clubcar.com

NOTE: *This illustrated parts list represents the most current information at the time of publication. Club Car, Inc. is continually working to further improve its vehicles and other products. These improvements may affect the parts used to service the vehicle. Any modification and/or significant change in specifications will be forwarded to all Club Car and Carryall distributors/dealers and will, when applicable, appear in future editions of this illustrated parts list.*

Club Car, Inc. reserves the right to change specifications and designs at any time without notice and without the obligation of making changes to units previously sold.

Copyright © 2005 Club Car, Inc.
Club Car and ArmorFlex
are registered trademarks of Club Car, Inc.
This manual effective July 28, 2003.

2004-2005 Transportation Gasoline and Electric Vehicle Illustrated Parts List

CONTENTS

SECTION 1 – BODY AND TRIM

Front Body and Trim	1-3
Dash Components	1-5
Beverage Holder – Villager Vehicles	1-7
Front Seat Bottom and Armrests – DS Villager 4	1-9
Front Seat Bottom – TransPorter 4 and 6	1-11
Front Seat Back and Support Structure – TransPorter 4	1-13
Rear Seat Back and Support Structure – TransPorter 4	1-15
Handrail, Front Seat Back Cover, and Rear Floormat – Transporter 4	1-17
Front and Center Seat Bottoms – Villager 6 and 8	1-19
Seat Backs and Armrests – Villager 6 and 8	1-21
Front Center Body and Floormat – Villager 6 and 8	1-23
Second Center Body and Floormat – Villager 8	1-25
Rear Forward-Facing Seat Bottom – Villager 6 and 8	1-27
Rear Forward-Facing Seat Bottom – Villager 6 and 8, Continued	1-29
Rear-Facing Seat Bottom – Villager Vehicles	1-31
Rear-Facing Seat Bottom – TransPorter 6	1-33
Rear-Facing Seat Bottom – TransPorter 6, Continued	1-35
Rear-Facing Seat Backs and Supports – DS Villager 4	1-37
Center Seat Back and Support Structure – TransPorter 6	1-39
Rear-Facing Seat Back and Support Structure – TransPorter 6	1-41
Rear Seat Backs and Forward-Facing Armrests – Villager 6 and 8	1-43
Rear-Facing Seat Backs and Supports – Villager 6 and Villager 8	1-45
Rear Body and Fenders – Gasoline DS Villager 4	1-47
Rear Access Door	1-49
Rear Body and Fenders – Electric DS Villager 4	1-51
Rear Body Trim – Transporter 4 and 6	1-53
Rear Body and Fender – Villager 6 and 8	1-55
Heat Shield – Gasoline Villager 6 and 8	1-57
Battery Insulator – Electric Villager 6 and 8	1-59
Battery Insulator – Electric TransPorter Vehicles	1-61
Rear Cargo Bed – TransPorter 4	1-63
Stake Side – TransPorter 4	1-65
Rear Footrest and Handrails – DS Villager 4, Villager 6, and Villager 8	1-67
Rear Footrest and Handrails – TransPorter 6	1-69

SECTION 2 – WHEELS AND TIRES

Wheels and Tires (White Rims) – Villager 4	2-3
Wheels and Tires (Beige Rims) – Villager 4	2-5

CONTENTS

Wheels and Tires – Turf/Carryall 6	2-7
Wheels and Tires – Villager 6 and 8 (Front Only)	2-9

SECTION 3 – DECALS

Decals – DS Villager 4 Gasoline Vehicles	3-3
Decals – DS Villager 4 Electric Vehicles	3-5
Decals – DS Villager 4 Electric Vehicles	3-7
Decals – DS Villager 4 Gasoline Vehicles	3-9
Decals – Villager 6 Gasoline and Electric Vehicles	3-11
Decals – Villager 6 PowerDrive Vehicles	3-13
Decals – Villager 6 Gasoline Vehicles	3-15
Decals – Villager 8 Gasoline and Electric Vehicles	3-17
Decals – Villager 8 Electric Vehicles	3-19
Decals – Villager 8 Gasoline Vehicles	3-21
Logo Decals – Villager 4, 6, and 8 Gasoline and Electric Vehicles	3-23
Decals – TransPorter 4 Gasoline and Electric Vehicles	3-25
Decals – TransPorter 4 and 6 Gasoline and Electric Vehicles	3-27
Decals – TransPorter 4 and 6 Electric Vehicles	3-29
Decals – TransPorter 4 and 6 Gasoline Vehicles	3-31
Logo Decals – TransPorter 4 and 6 Gasoline and Electric Vehicles	3-33

SECTION 4 – BRAKES, PEDAL, AND CABLE ASSEMBLIES

Brake Assembly, Self-Adjusting – DS Villager 4	4-3
Rear Brake Assembly, Manually-Adjusted – Vehicles with 4-Wheel Brakes	4-5
Brake Pedal Assembly – DS Villager 4	4-7
Brake Pedal Assembly – Vehicles with Four-Wheel Brakes	4-9
Front Brake Assembly – Vehicles with Four-Wheel Brakes	4-11
Front Brake Cables and Equalizer – Vehicles with Four-Wheel Brakes	4-13
Front Brake Cable Clips and Hardware – Vehicles with Front-Wheel Brakes	4-15
Brake Cable, Equalizer, and Equalizer Rod – DS Villager 4	4-17
Rear Brake Cables and Equalizer – Villager 6, and TransPorter 4 and 6	4-19
Rear Brake Cables, Equalizer, and Equalizer Rod – Villager 8 Vehicles	4-21
Accelerator Pedal – Gasoline Vehicles	4-23
Accelerator Pedal Assembly – Electric Vehicles with MCOR	4-25
Accelerator Rod – Gasoline DS Villager 4	4-27
Accelerator Rod – Gasoline Villager 6, and TransPorter 4 and 6	4-29
Accelerator Rod – Gasoline Villager 8	4-31

CONTENTS

SECTION 5 – STEERING, FRONT AND REAR SUSPENSION

Steering Column – Villager 6 and 8	5-3
Steering Column – All Vehicles Except Villager 6 and 8	5-5
Steering Wheel	5-7
Steering Wheel – All Vehicles Except DS Villager 4	5-9
Steering Gear Assembly	5-11
Front Suspension, Upper	5-13
Front Suspension, Lower	5-15
Front Suspension, Upper – Villager 6, and TransPorter 4 and 6	5-17
Front Suspension, Lower – Villager 6, and TransPorter 4 and 6	5-19
Front Suspension, Upper – Villager 8	5-21
Front Suspension, Lower – Villager 8	5-23
Front Spindles and Hubs – DS Villager 4 Vehicles	5-25
Front Spindles and Hubs – All Vehicles Except DS Villager 4	5-27
Rear Suspension Components – DS Villager 4 Electric Vehicles	5-29
Rear Suspension Components – DS Villager 4 Gasoline Vehicles	5-31
Rear Suspension Components – Villager 6 and 8, and TransPorter 4 and 6 Gasoline Vehicles	5-33
Rear Suspension – Villager 6 and 8 and TransPorter 4 and 6 Electric Vehicles	5-35
Stabilizer Bar – Villager 6 and 8, and TransPorter 4 and 6 Gasoline Vehicles	5-37

SECTION 6 – ELECTRICAL SYSTEM – GASOLINE VEHICLES

Wiring – Gasoline Villager 6 and TransPorter 4 and 6	6-5
Front Body Electrical Components – Villager 6 and 8, and TransPorter 4 and 6	6-7
Wiring – Gasoline Villager 8	6-11
Wiring – Gasoline DS Villager 4	6-15
Headlights	6-17
Electrical Component Box – Gasoline DS Villager 4	6-19
Electrical Component Box – Gasoline TransPorter 4 and 6, and Villager 6	6-21
Electrical Component Box – Gasoline Villager 8	6-23
Controls and Indicators – DS Villager 4	6-25
Controls and Indicators – Villager 6 and 8, and TransPorter 4 and 6	6-27
Starter/Generator Assembly Model G425419 – Gasoline Vehicles	6-29
FE290 Starter/Generator Mounting – Gasoline DS Villager 4	6-31
FE350 Starter/Generator Mounting – Gasoline Vehicles	6-33
Battery – Gasoline Vehicle	6-35
Electrical Components, Rear Body – Gasoline TransPorter 4 and 6	6-37
Electrical Components, Rear Body – Villager 6 and 8	6-39

CONTENTS

SECTION 7 – FE290 ENGINE (PEDAL-START VEHICLES)

FE290 Engine – Shrouds and Brackets	7-3
FE290 Engine – Ignition Components and Flywheel	7-5
FE290 Engine – Oil Circulation	7-7
FE290 Engine – Cylinder Head	7-9
FE290 Engine – Crankcase, Camshaft, and Oil Sensor	7-11
FE290 Engine – Crankcase and Crankshaft	7-13
FE290 Engine Mounting	7-15

SECTION 8 – FE350 ENGINE WITH ACR (KEY-START VEHICLES)

FE350 Engine with ACR (Automatic Compression Release) – Shrouds and Brackets	8-3
AS11 FE350 Engine – Ignition Components and Flywheel	8-5
FE350 Engine – Oil Circulation	8-7
AS11 FE350 Engine – Cylinder Head	8-9
FE350 Engine with ACR – Crankcase, Camshaft, and Oil Sensor	8-11
AS11 FE350 Engine – Crankcase and Crankshaft	8-13
FE350 Engine Mounting	8-15

SECTION 9 – FUEL, INTAKE, AND GOVERNOR SYSTEMS

Fuel System – TransPorter 4 and 6	9-3
Fuel System – DS Villager 4, Villager 6, and Villager 8	9-5
Fuel Tank with Fuel Level Sending Unit	9-7
Carburetor Assembly, FE290 Engine – DS Villager 4	9-9
Carburetor Assembly, FE350 Engine – Villager 6 and 8, and Transporter 4 and 6	9-11
Carburetor Installation, FE290 Engine – DS Villager 4	9-13
Carburetor Installation, FE350 Engine – Villager 6 and 8, and Transporter 4 and 6	9-15
Governor and Accelerator Cables	9-17
Air Box and Intake Hose	9-19
Intake System – DS Villager 4	9-21
Intake System – TransPorter 4 and 6	9-23
Intake System – Villager 6	9-25
Intake System – Villager 8	9-27

SECTION 10 – EXHAUST SYSTEM

Exhaust System – FE290 Engine	10-3
Exhaust System – FE350 Engine	10-5

CONTENTS

SECTION 11 – TORQUE CONVERTER

Drive Clutch – DS Villager 4	11-3
Drive Clutch – Villager 6 and 8, and Transporter 4 and 6	11-5
Drive Belt – DS Villager 4	11-7
Drive Belt – Villager 6 and 8, and Transporter 4 and 6	11-9
Driven Clutch	11-11

SECTION 12 – UNITIZED TRANSAXLE

Transaxle – Gasoline Vehicles, Gear Cases and Brackets	12-3
Transaxle – Gasoline Vehicles, Transmission and Gear Reduction	12-5
Transaxle – Gasoline Vehicles, Differential and Axles	12-7
Forward/Reverse Shifter Assembly – Gasoline Vehicles	12-9
Forward/Reverse Shifter Cable – DS Villager 4 Vehicles	12-11
Forward/Reverse Shifter Cable – Villager 6 and TransPorter 4 and 6 Vehicles	12-13
Forward/Reverse Shifter Cable – Villager 8	12-15

SECTION 13 – ELECTRICAL SYSTEM – ELECTRIC VEHICLES

Wiring – DS Villager 4 IQ System Vehicle with Six 8-Volt Batteries	13-5
Headlights	13-7
Wiring – PowerDrive Electric Villager 6 and TransPorter 4 and 6	13-11
Wiring – PowerDrive Electric Villager 8	13-15
Front Body Electrical Components – Villager 6 , and TransPorter 4 and 6	13-17
Front Body Electrical Components – Villager 8	13-19
Instrument Panel Components – DS Villager 4 Vehicle	13-21
Instrument Panel Components – Villager 6 and 8, and TransPorter 4 and 6	13-23
Motor Controller Output Regulator (MCOR)	13-25
Forward/Reverse Switch – PowerDrive	13-27
Forward/Reverse Switch and Tow/Run Switch – IQ System DS Villager 4	13-29
Battery Charger Receptacle – Villager Vehicles	13-31
Electrical Components – PowerDrive Villager 6 and 8, and TransPorter 4 and 6	13-33
Electrical Components, Continued – PowerDrive TransPorter 4 and 6	13-35
Electrical Components, Continued – PowerDrive Villager 6	13-37
Electrical Components, Continued – Powerdrive Villager 8	13-39
Batteries – DS Villager 4 with Six 8-Volt Batteries	13-41
Computer, Controller, and Solenoid – DS Villager 4 IQ System Vehicle	13-43
Electrical Components, Rear Body – TransPorter 4 and 6 PowerDrive	13-45
Rear Reverse Buzzer – TransPorter 4 and 6	13-47
Electrical Components, Rear Body – Villager 6 and 8 PowerDrive	13-49

CONTENTS

Rear Reverse Buzzer – Villager 6 and 8	13-51
--	-------

SECTION 14 – ELECTRIC MOTOR

Motor (Model 5BC59JBS6360) – PowerDrive	14-3
Motor (Model 5BC59JBS6365) – Electric Vehicle	14-5
Motor (Model 5BC59JBS6390) – Electric Vehicle	14-7
Motor (Model EJ4-4001) – Electric Vehicle	14-9
Motor (Model EJ8-4001A) – Electric Vehicle	14-11

SECTION 15 – TRANSAXLE – ELECTRIC VEHICLES

Transaxle – Electric Vehicles	15-3
Transaxle – Electric Vehicles	15-5

SECTION 16 – BATTERY CHARGER

PowerDrive 3 Battery Charger, Domestic	16-3
PowerDrive 2 Battery Charger (Model 22110), Domestic	16-5
PowerDrive Battery Charger (Model 17930), Domestic	16-7
PowerDrive Battery Charger (Model 18780), Export	16-9
PowerDrive Battery Charger (Model 20310), European	16-11
Onboard PowerDrive Battery Charger (Model 17935), Domestic	16-13
Onboard PowerDrive Battery Charger (Model 17790), Export	16-15

SECTION 17 – MAINTENANCE AND SERVICE TOOLS

Maintenance and Service Tools	17-3
Maintenance and Service Tools, Continued	17-5
Maintenance and Service Tools, Continued	17-7
Maintenance and Service Tools, Continued	17-9
Maintenance and Service Tools, Continued	17-11

SECTION i – INDEX

BODY AND TRIM

1


G

E

1

G

E

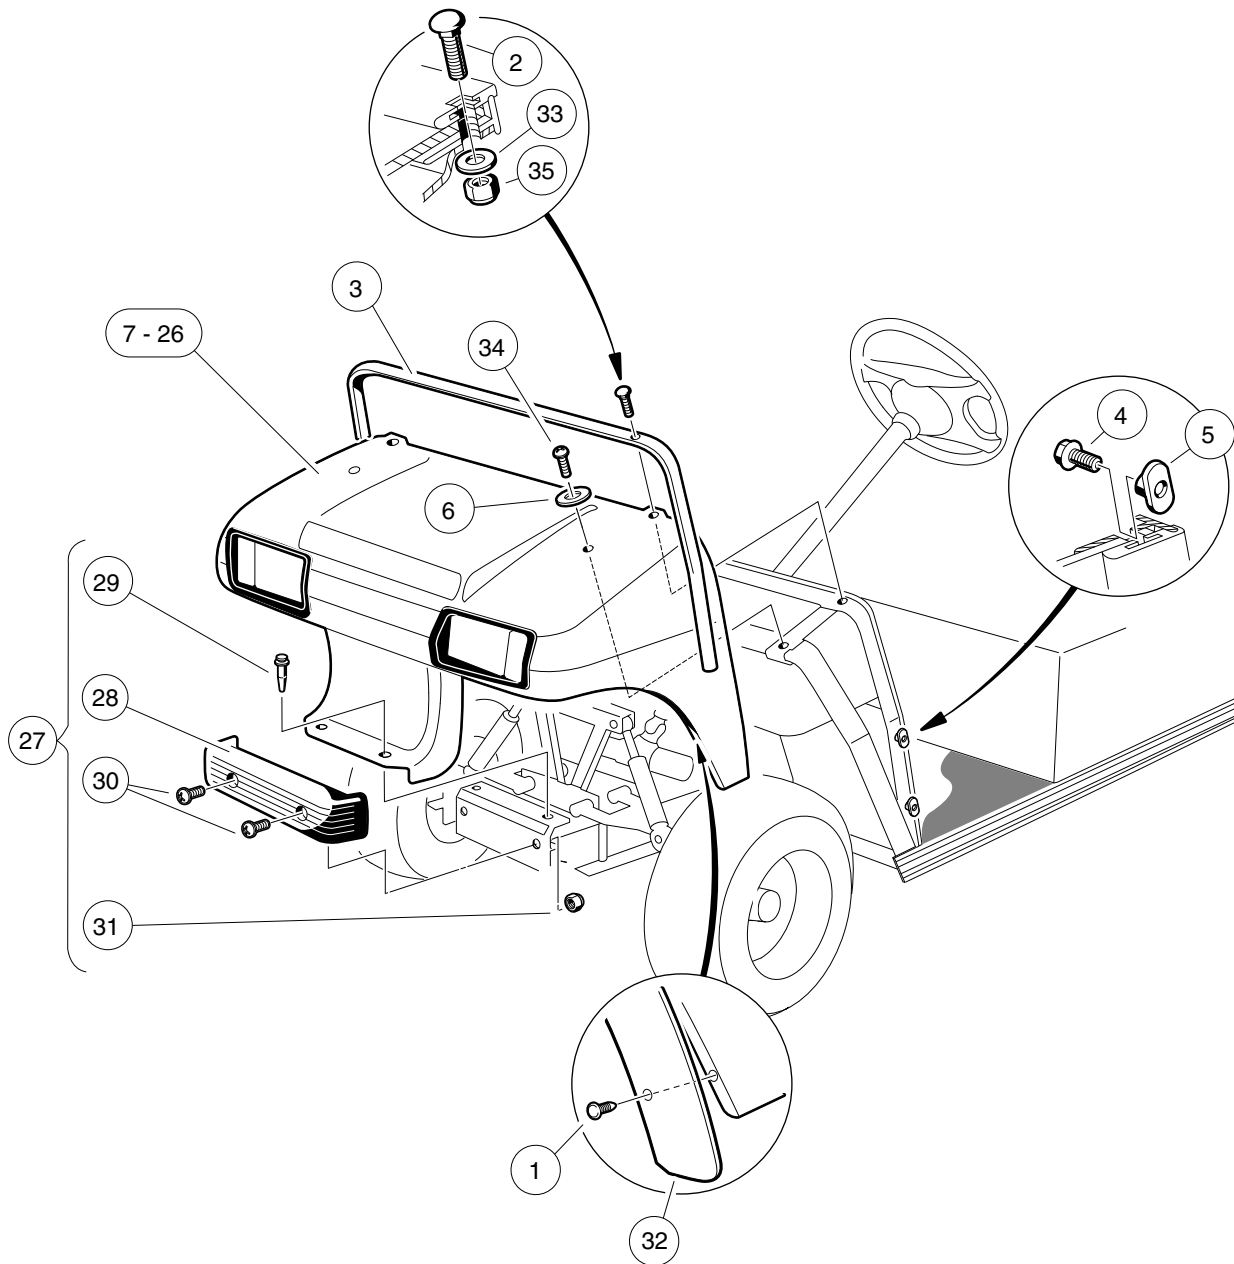

000249-005

FRONT BODY AND TRIM

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010434</u>	Barrel - Plastic	12
2	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	2
3	<u>1011014</u>	Trim, Cowl	1
4	<u>1011017</u>	Screw, #8-32 X 0.375	6
5	<u>1011394</u>	T-Nut Package (Set of 4)	1
6	<u>1015075</u>	Washer, 5/16 Flat Type A	2
7	<u>101692501</u>	Cowl, TPO, Beige	1
8	<u>101692502</u>	Cowl, TPO, White	1
9	<u>101692506</u>	Cowl, TPO, Red	1
10	<u>101692509</u>	Cowl, TPO, Pacific Blue (Royal Blue)	1
11	<u>101692510</u>	Cowl, TPO, Dark Green	1
12	<u>101692511</u>	Cowl, TPO, Black	1
13	<u>101692512</u>	Cowl, TPO, Classic Blue (Navy)	1
14	<u>101692513</u>	Cowl, TPO, Burgundy	1
15	<u>101692514</u>	Cowl, TPO, Dark Gray	1
16	<u>101692515</u>	Cowl, TPO, Safety Yellow	1
17	<u>101693901</u>	Cowl with Headlight Opening, TPO, Beige	1
18	<u>101693902</u>	Cowl with Headlight Opening, TPO, White	1
19	<u>101693906</u>	Cowl with Headlight Opening, TPO, Red	1
20	<u>101693908</u>	Cowl with Headlight Opening, TPO, Pacific Blue (Royal Blue)	1
21	<u>101693909</u>	Cowl with Headlight Opening, TPO, Dark Green	1
22	<u>101693910</u>	Cowl with Headlight Opening, TPO, Black	1
23	<u>101693911</u>	Cowl with Headlight Opening, TPO, Classic Blue (Navy)	1
24	<u>101693912</u>	Cowl with Headlight Opening, TPO, Burgundy	1
25	<u>101693913</u>	Cowl with Headlight Opening, TPO, Dark Gray	1
26	<u>101693914</u>	Cowl with Headlight Opening, TPO, Safety Yellow	1
27	<u>1017080</u>	Kit, Front Bumper (includes items 28 through 31)	1
28	<u>1016868</u>	Front Bumper	1
29	<u>1016967</u>	Blind Rivet, Push Type	2
30	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2
31	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
32	<u>101870401</u>	Fender Extrusion	2
33	<u>1241</u>	Washer, 5/16 Type A Flat	2
34	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2
35	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2

1


G

E

1

G

E

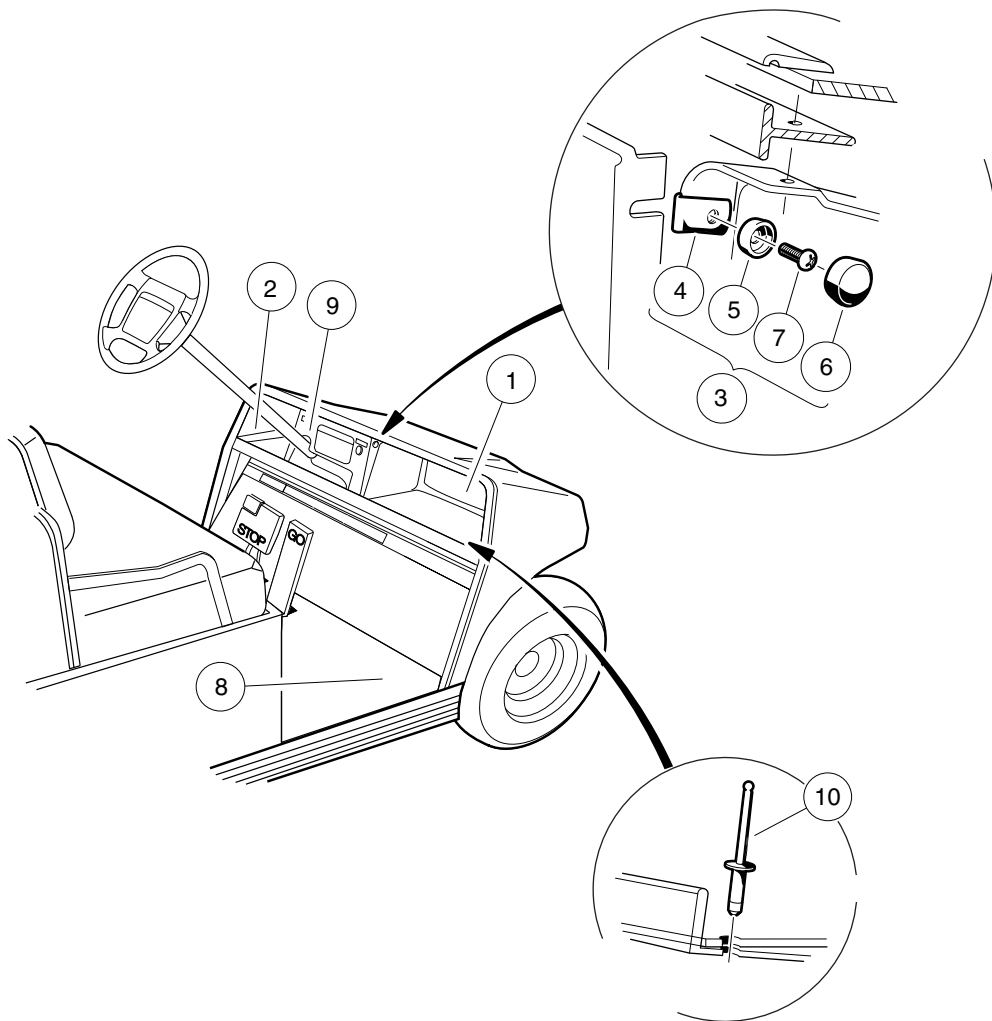

000252-001


DASH COMPONENTS

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	<u>1013343</u>	Dash Component, Passenger-Side, Black	1			
2	<u>1013344</u>	Dash Component, Driver-Side	1			
3	<u>1014645</u>	Snap Washer Kit, Black (includes items 4 through 7)	2			
4	<u>1011019</u>	Nut, Speed	1			
5	<u>1011382</u>	Washer, #10 Pan-Head Screw	1			
6	<u>1013494</u>	Cover, Screw Head	1			
7	1620	Screw, #10-16 X 0.75 Pan-Head Tap	1			
8	<u>101503202</u>	Floormat	1			
9	<u>101660404</u>	Dash Panel, Black Center	1			
10	<u>7973</u>	Rivet, 3/16 X .400 Blind	5			

1

G

E

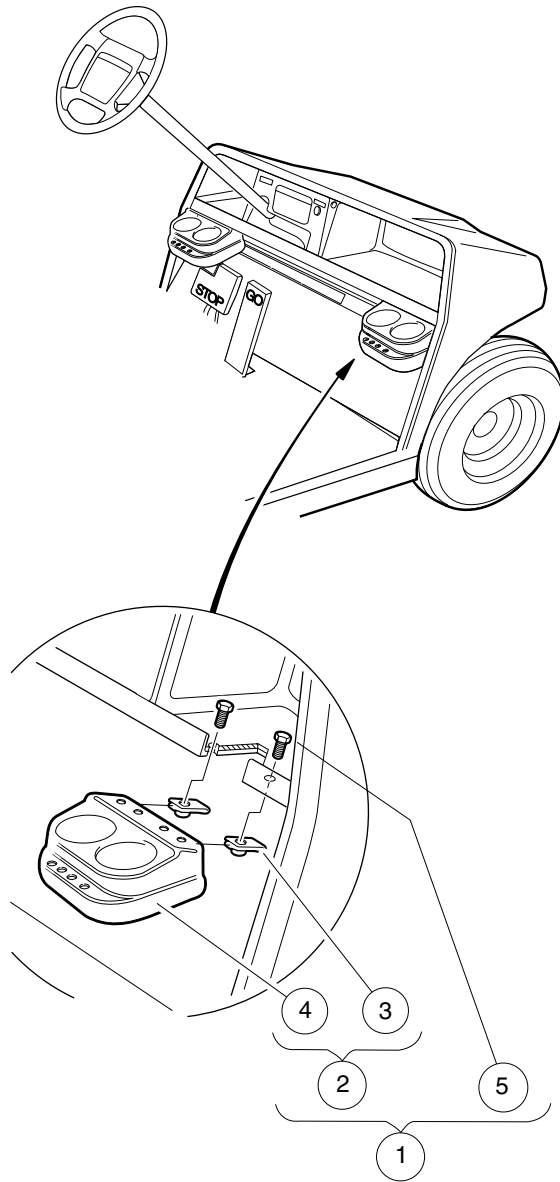

000253-002


BEVERAGE HOLDER – VILLAGER VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	<u>101708301</u>	Drink Holder Kit (includes items 2 through 5)	2			
2	<u>1016811</u>	Holder, Dual Cup (includes items 3 and 4)	1			
3	1016952	U-Nut, 1/4-20	2			
4	N/A	Cup Holder, Dual	1			
5	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2			

1

G





E

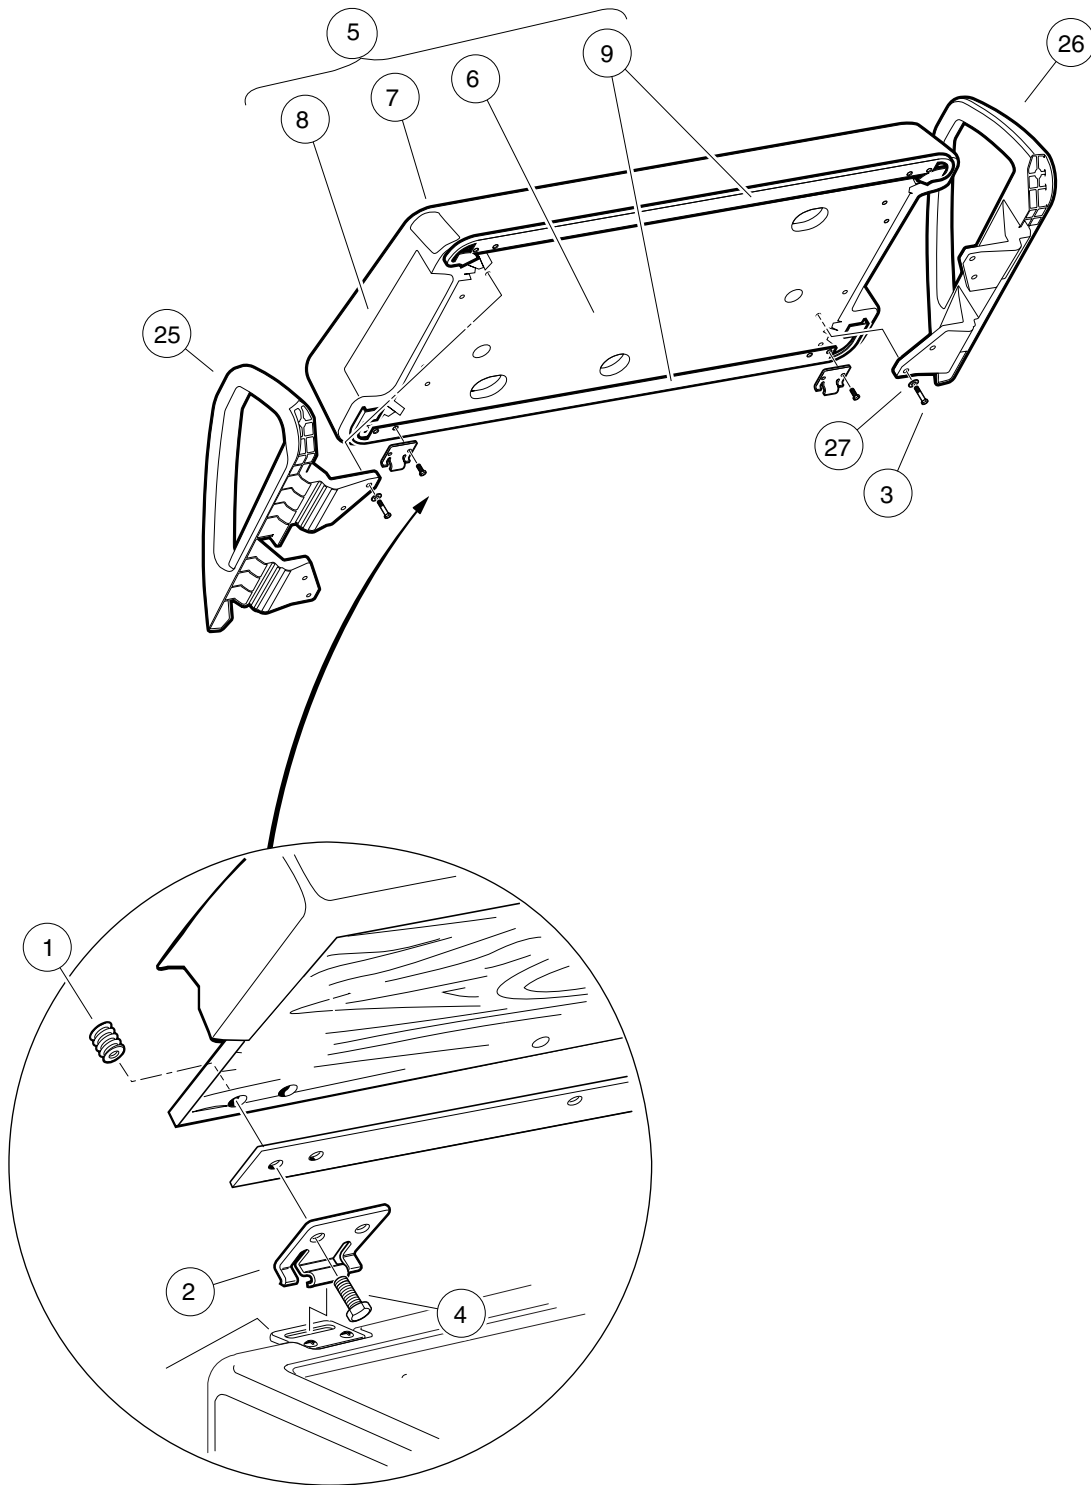

000364-003

FRONT SEAT BOTTOM AND ARMRESTS – DS VILLAGER 4


ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	1010543	Insert - Wood	4	
2	<u>1011652</u>	Hinge Plate	2	
3	1016916	Screw, 1/4-20 X 1.50 Hex-Head Cap	8	
4	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4	
5	<u>102174201</u>	Seat Bottom Assembly, Buff (includes items 6 through 9)	1	
6	N/A	Plywood Assy	1	
7	<u>101998211</u>	Vinyl Cover Seat Btm - Buffsvc	1	
8	N/A	Foam, Seat	1	
9	<u>101998501</u>	Gasket, Seat	2	
10	<u>102174202</u>	Seat Bottom Assembly, White (includes items 11 through 14)	1	
11	N/A	Plywood Assy	1	
12	<u>101998212</u>	Vinyl Cover, Seat Bottom, White	1	
13	N/A	Foam, Seat	1	
14	<u>101998501</u>	Gasket, Seat	2	
15	<u>102174204</u>	Seat Bottom Assembly, Black (includes items 16 through 19)	1	
16	N/A	Plywood Assy	1	
17	<u>101998214</u>	Vinyl Cover, Seat Bottom, Black	1	
18	N/A	Foam, Seat	1	
19	<u>101998501</u>	Gasket, Seat	2	
20	<u>102174205</u>	Seat Bottom Assembly, Gray (includes items 21 through 24)	1	
21	N/A	Plywood Assy	1	
22	<u>101998215</u>	Vinyl Cover, Seat Bottom, Gray	1	
23	N/A	Foam, Seat	1	
24	<u>101998501</u>	Gasket, Seat	2	
25	<u>103246701</u>	Hip Restraint, Drvr Side	1	
26	<u>103246801</u>	Hip Restraint, Pass Side	1	
27	<u>332</u>	Washer, 1/4 Type A Narrow Flat	8	
Note: Sub-components contained in items 10, 15, and 20 are the same as those shown for item 5, except for the vinyl seat covers.				

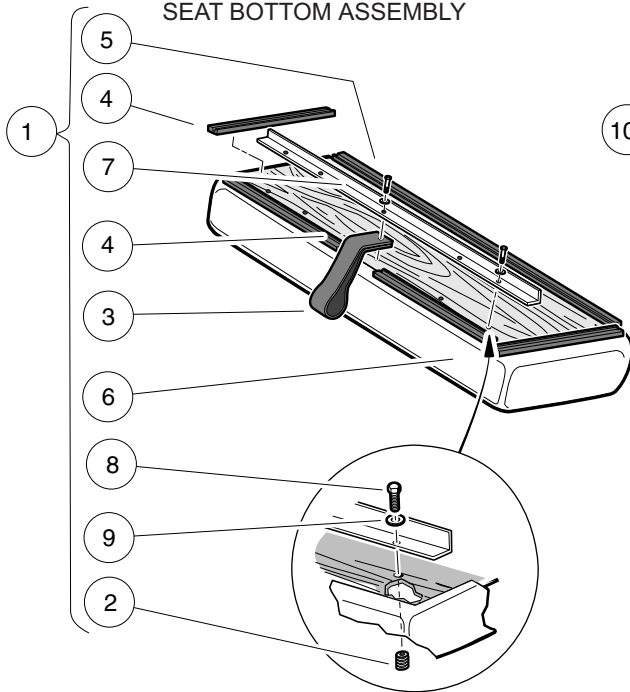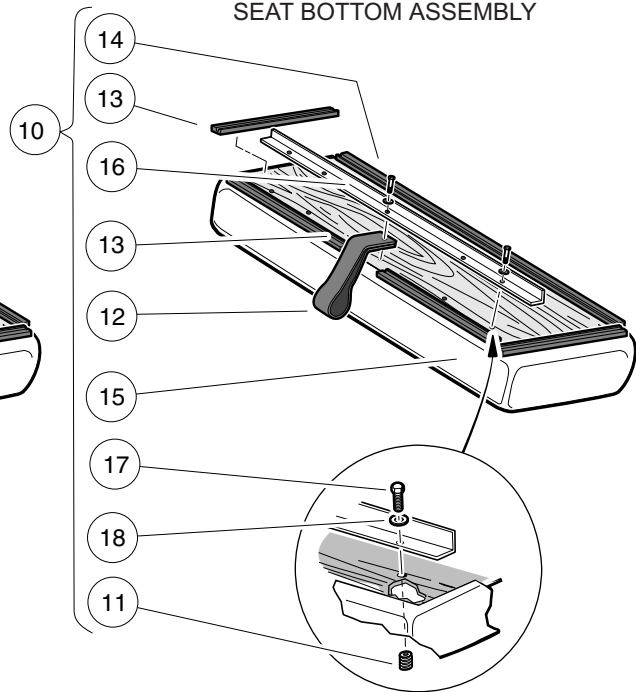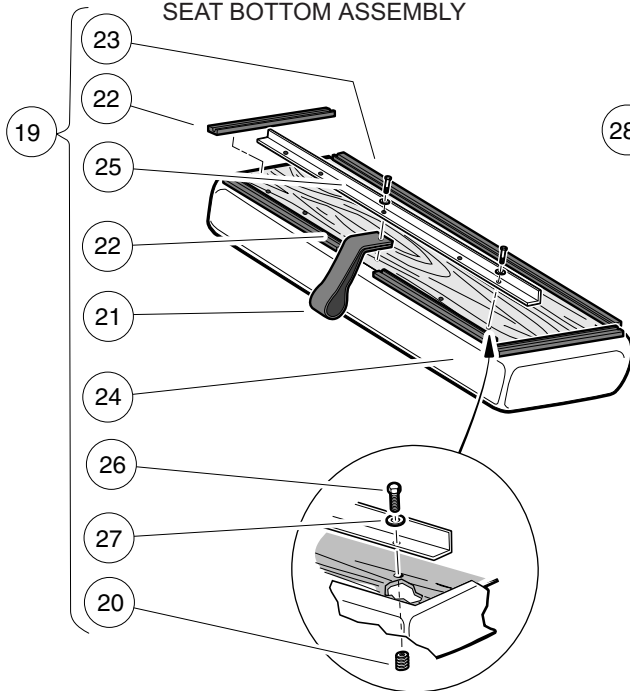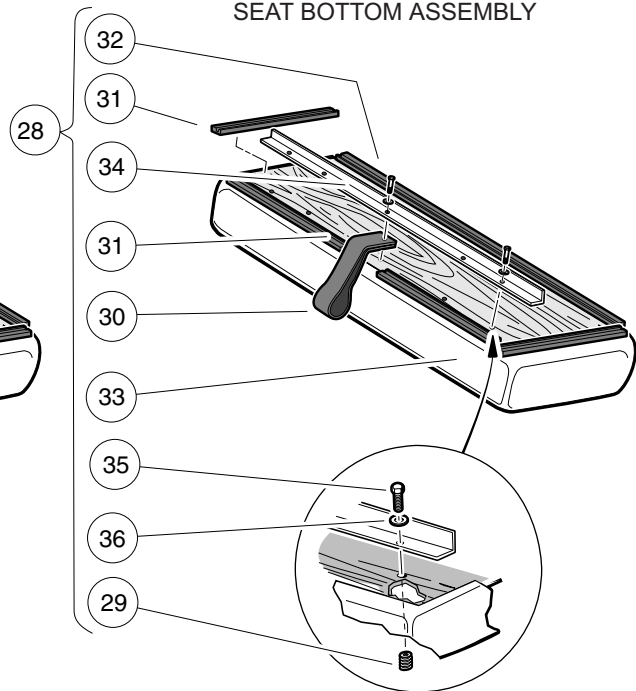1**G****E****BEIGE
SEAT BOTTOM ASSEMBLY****WHITE
SEAT BOTTOM ASSEMBLY****BLACK
SEAT BOTTOM ASSEMBLY****GRAY
SEAT BOTTOM ASSEMBLY**

000254-001

FRONT SEAT BOTTOM – TRANSPORTER 4 AND 6


ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>101564501</u>	Seat Bottom Assembly, Beige (includes items 2 through 9)	1	
2	<u>1010543</u>	Insert - Wood	5	
3	<u>1013309</u>	Strap, Utility Seat	1	
4	<u>1013311</u>	Bumper, Seat, Short	4	
5	<u>1013312</u>	Bumper, Seat, Long	1	
6	<u>101562711</u>	Vinyl Cover, Seat Bottom, Buff	1	
7	<u>101894303</u>	Stiffener	1	
8	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	5	
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	5	
10	<u>101564502</u>	Seat Bottom Assembly, White (includes items 11 through 18)	1	
11	<u>1010543</u>	Insert - Wood	5	
12	<u>1013309</u>	Strap, Utility Seat	1	
13	<u>1013311</u>	Bumper, Seat, Short	4	
14	<u>1013312</u>	Bumper, Seat, Long	1	
15	<u>101562712</u>	Vinyl Cover, Seat Bottom, White	1	
16	<u>101894303</u>	Stiffener	1	
17	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	5	
18	<u>332</u>	Washer, 1/4 Type A Narrow Flat	5	
19	<u>101564503</u>	Seat Bottom Assembly, Black (includes items 20 through 27)	1	
20	<u>1010543</u>	Insert - Wood	5	
21	<u>1013309</u>	Strap, Utility Seat	1	
22	<u>1013311</u>	Bumper, Seat, Short	4	
23	<u>1013312</u>	Bumper, Seat, Long	1	
24	<u>101562714</u>	Vinyl Cover, Seat Bottom, Black	1	
25	<u>101894303</u>	Stiffener	1	
26	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	5	
27	<u>332</u>	Washer, 1/4 Type A Narrow Flat	5	
28	<u>101564505</u>	Seat Bottom Assembly, Gray (includes items 29 through 36)	1	
29	<u>1010543</u>	Insert - Wood	5	
30	<u>1013309</u>	Strap, Utility Seat	1	
31	<u>1013311</u>	Bumper, Seat, Short	4	
32	<u>1013312</u>	Bumper, Seat, Long	1	
33	<u>101562715</u>	Vinyl Cover, Seat Bottom, Gray	2	
34	<u>101894303</u>	Stiffener	1	
35	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	5	
36	<u>332</u>	Washer, 1/4 Type A Narrow Flat	5	

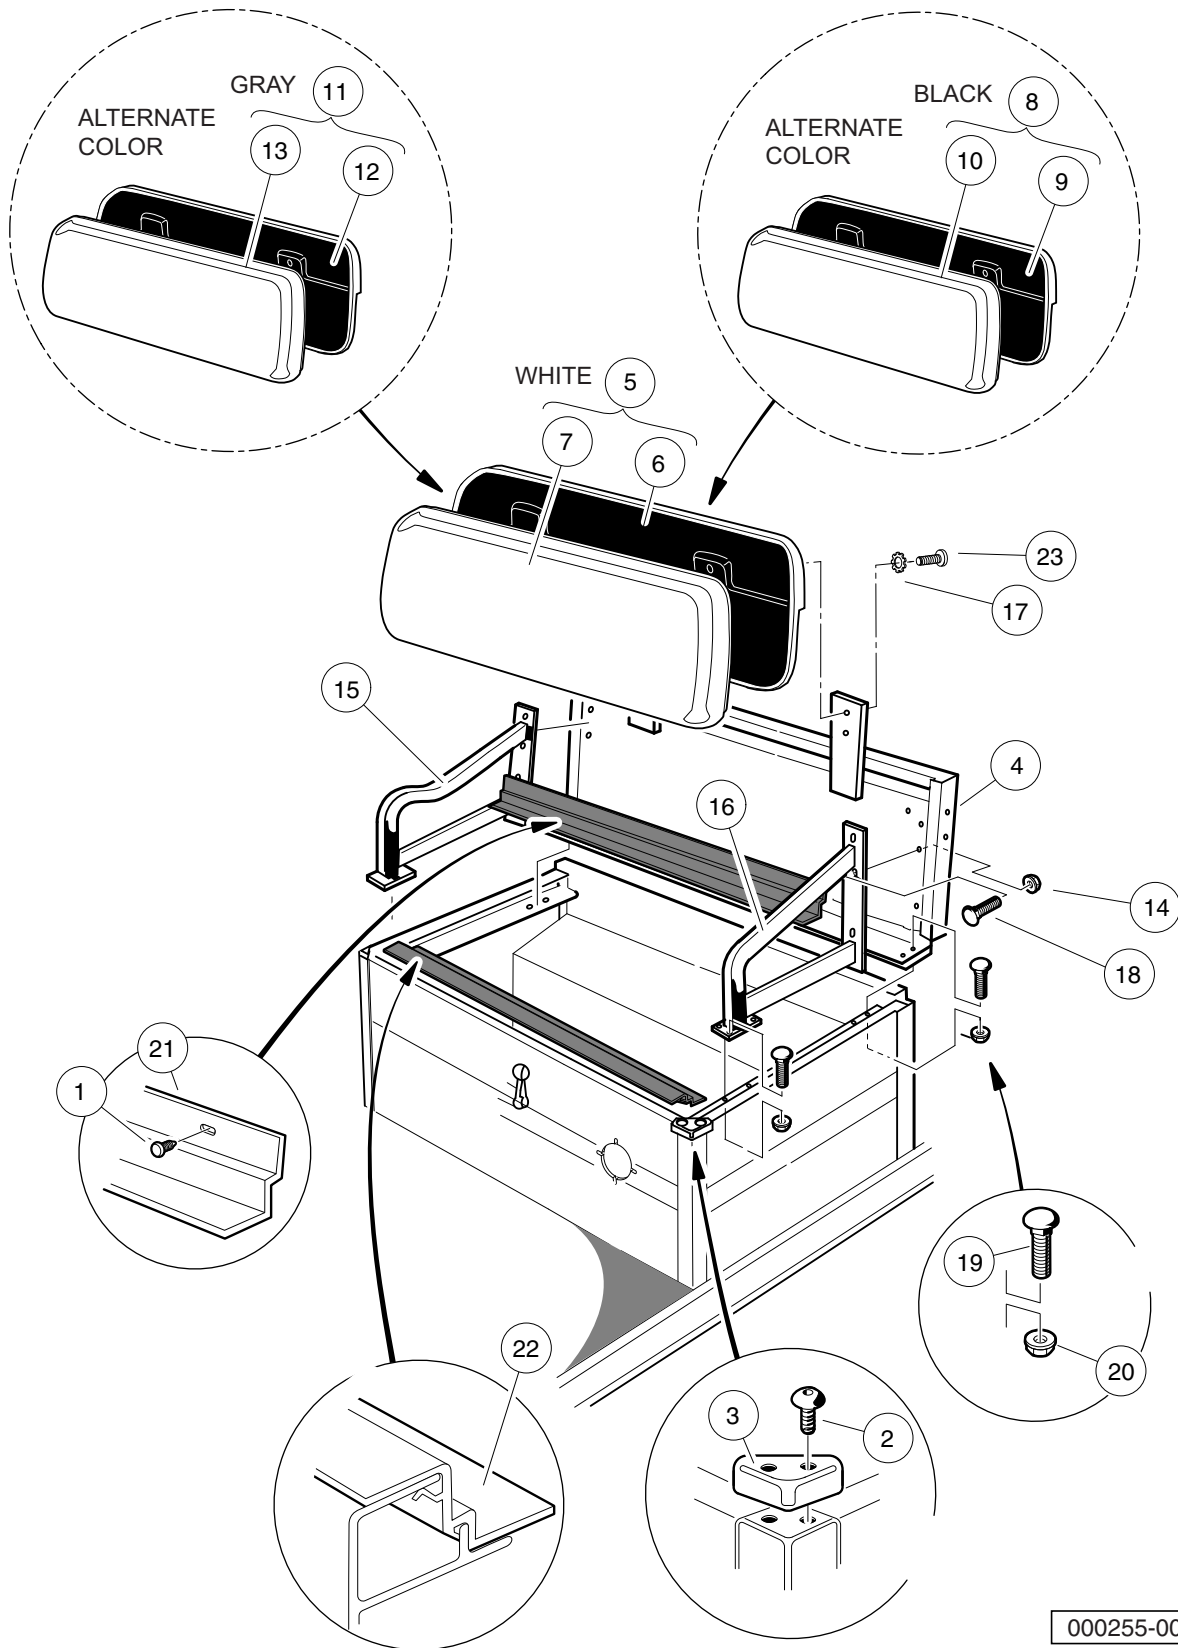1**G****E**

000255-001

FRONT SEAT BACK AND SUPPORT STRUCTURE – TRANSPORTER 4

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010434</u>	Barrel - Plastic	5	
2	<u>1014321</u>	Screw, #10 Truss-Head Torx	4	
3	<u>1014387</u>	Cap, Corner	2	
4	<u>1016723</u>	Seat Support Panel Assembly	1	
5	<u>101677701</u>	Seat Back Assembly, White (includes items 6 and 7)	1	
6	<u>1016751</u>	Cap, Seat Back	1	
7	<u>101675512</u>	Vinyl Seat Back, White	1	
8	<u>101677702</u>	Seat Back Assembly, Black (includes items 9 and 10)	1	
9	<u>1016751</u>	Cap, Seat Back	1	
10	<u>101675514</u>	Vinyl Seat Back, Black	1	
11	<u>101677705</u>	Seat Back Assembly, Gray (includes items 12 and 13)	1	
12	<u>1016751</u>	Cap, Seat Back	1	
13	<u>101675515</u>	Vinyl Seat Back-nstd Svc	1	
14	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	10	
15	<u>101888501</u>	Armrest Weldment, Passenger-Side	1	
16	<u>101888502</u>	Armrest Weldment, Driver-Side	1	
17	<u>101946201</u>	Washer, Lock, 0.250 External-Tooth	4	
18	<u>101958601</u>	Carriage Bolt, 1/4-20 X 0.75	10	
19	<u>101963301</u>	Bolt, 5/16-18 X 0.75 Round-Head	4	
20	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4	
21	<u>101963901</u>	Trim, Seat Bottom Rear	1	
22	<u>101964001</u>	Trim, Seat Bottom Front	1	
23	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	4	
Note: Sub-components contained in items 8 and 11 are the same as those shown for item 5, except for the vinyl seat covers.				

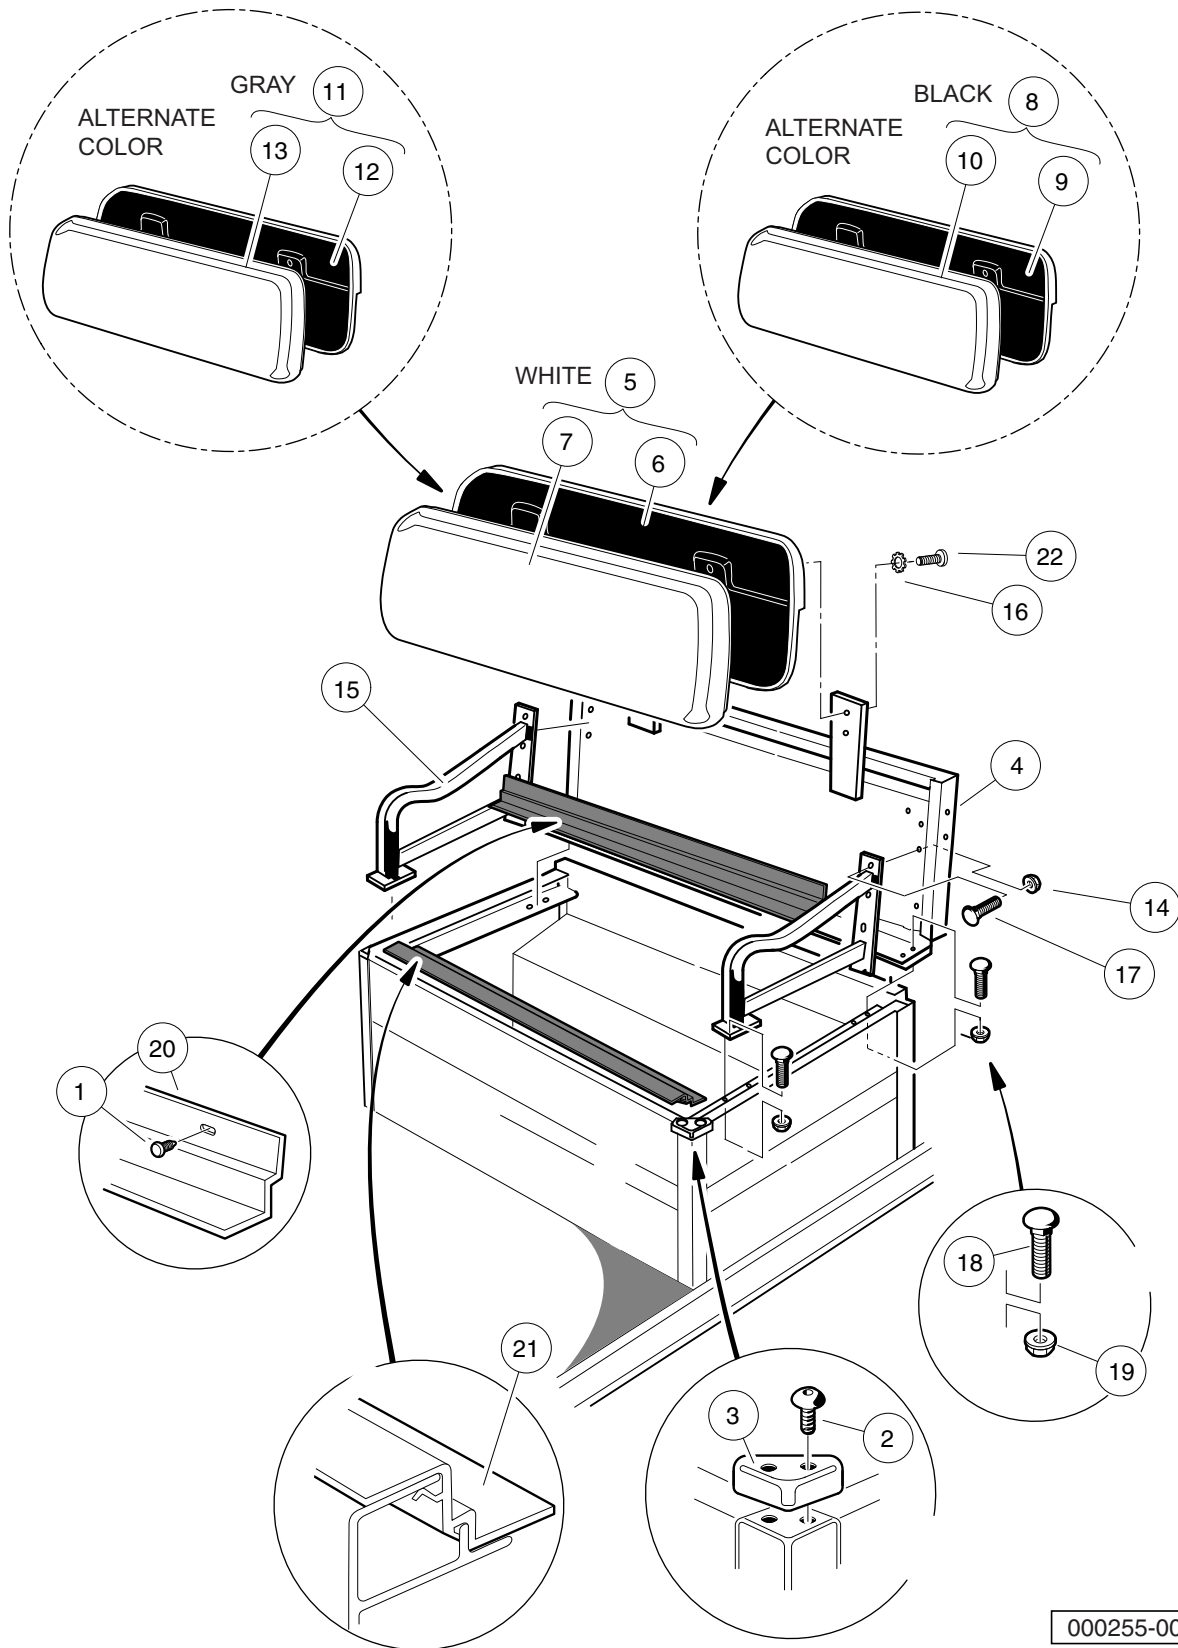1**G****E**

REAR SEAT BACK AND SUPPORT STRUCTURE – TRANSPORTER 4


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010434</u>	Barrel - Plastic	5
2	<u>1014321</u>	Screw, #10 Truss-Head Torx	4
3	<u>1014387</u>	Cap, Corner	2
4	<u>1016723</u>	Seat Support Panel Assembly	1
5	<u>101677701</u>	Seat Back Assembly, White (includes items 6 and 7)	1
6	<u>1016751</u>	Cap, Seat Back	1
7	<u>101675512</u>	Vinyl Seat Back, White	1
8	<u>101677702</u>	Seat Back Assembly, Black (includes items 9 and 10)	1
9	<u>1016751</u>	Cap, Seat Back	1
10	<u>101675514</u>	Vinyl Seat Back, Black	1
11	<u>101677705</u>	Seat Back Assembly, Gray (includes items 12 and 13)	1
12	<u>1016751</u>	Cap, Seat Back	1
13	<u>101675515</u>	Vinyl Seat Back-nstd Svc	1
14	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	10
15	<u>101888501</u>	Armrest Weldment, Passenger-Side	2
16	<u>101946201</u>	Washer, Lock, 0.250 External-Tooth	4
17	<u>101958601</u>	Carriage Bolt, 1/4-20 X 0.75	10
18	<u>101963301</u>	Bolt, 5/16-18 X 0.75 Round-Head	4
19	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4
20	<u>101963901</u>	Trim, Seat Bottom Rear	1
21	<u>101964001</u>	Trim, Seat Bottom Front	1
22	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	4
Note: Sub-components contained in items 8 and 11 are the same as those shown for item 5, except for the vinyl seat covers.			

1
G
E

1

G

E

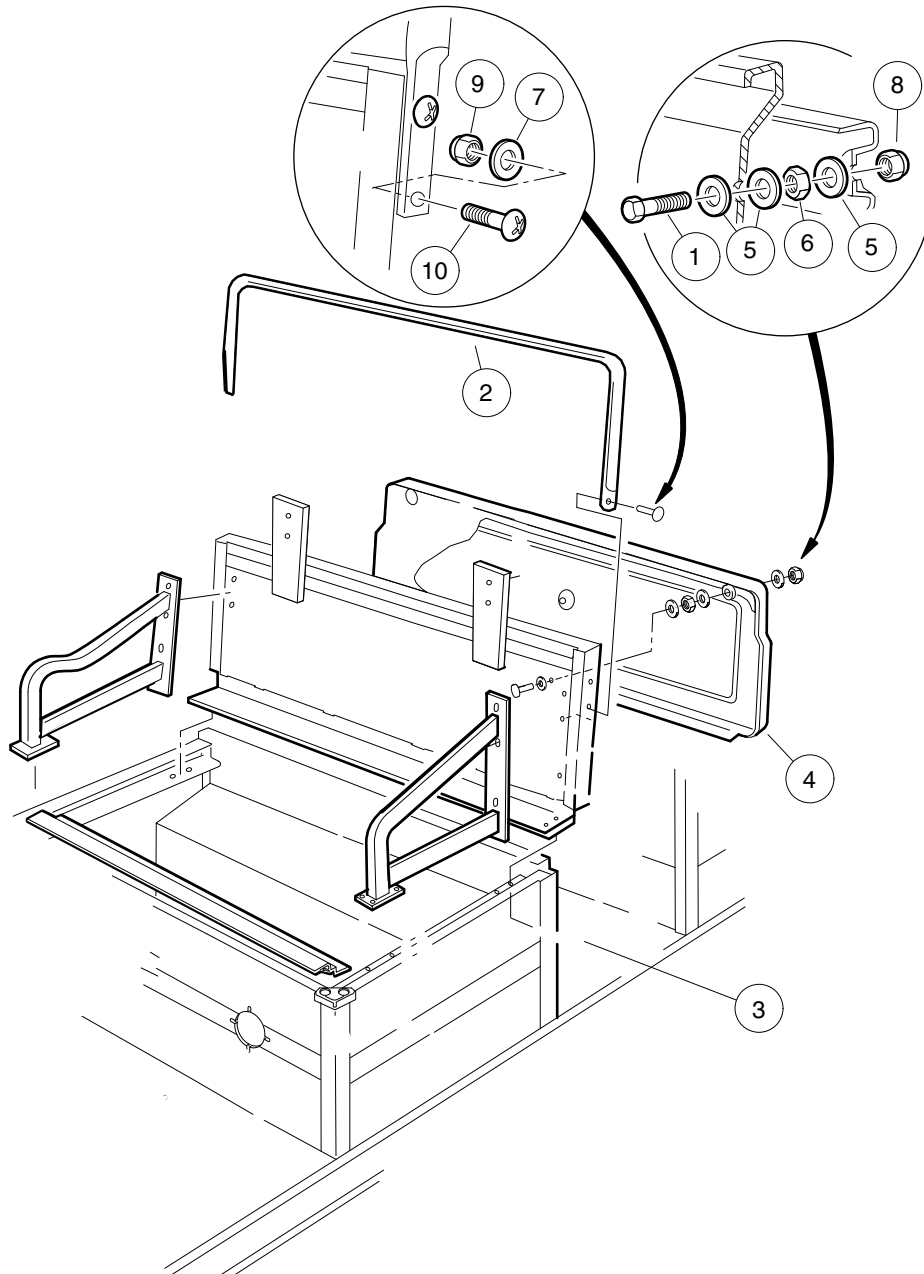

000401-001

HANDRAIL, FRONT SEAT BACK COVER, AND REAR FLOORMAT – TRANSPORTER 4


ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	3	
2	<u>1016670</u>	Handrail	1	
3	<u>1016718</u>	Floormat, Rear	1	
4	<u>1016970</u>	Cover, Seat Back Support	1	
5	<u>1241</u>	Washer, 5/16 Type A Flat	9	
6	<u>1242</u>	Nut, 5/16-18 Hex	3	
7	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4	
8	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	3	
9	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4	
10	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	4	

1


G

E

VILLAGER 8

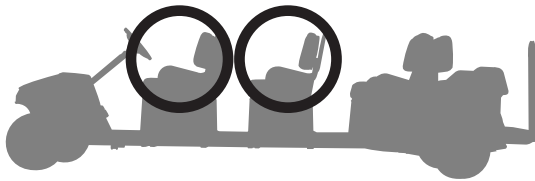

VILLAGER 6

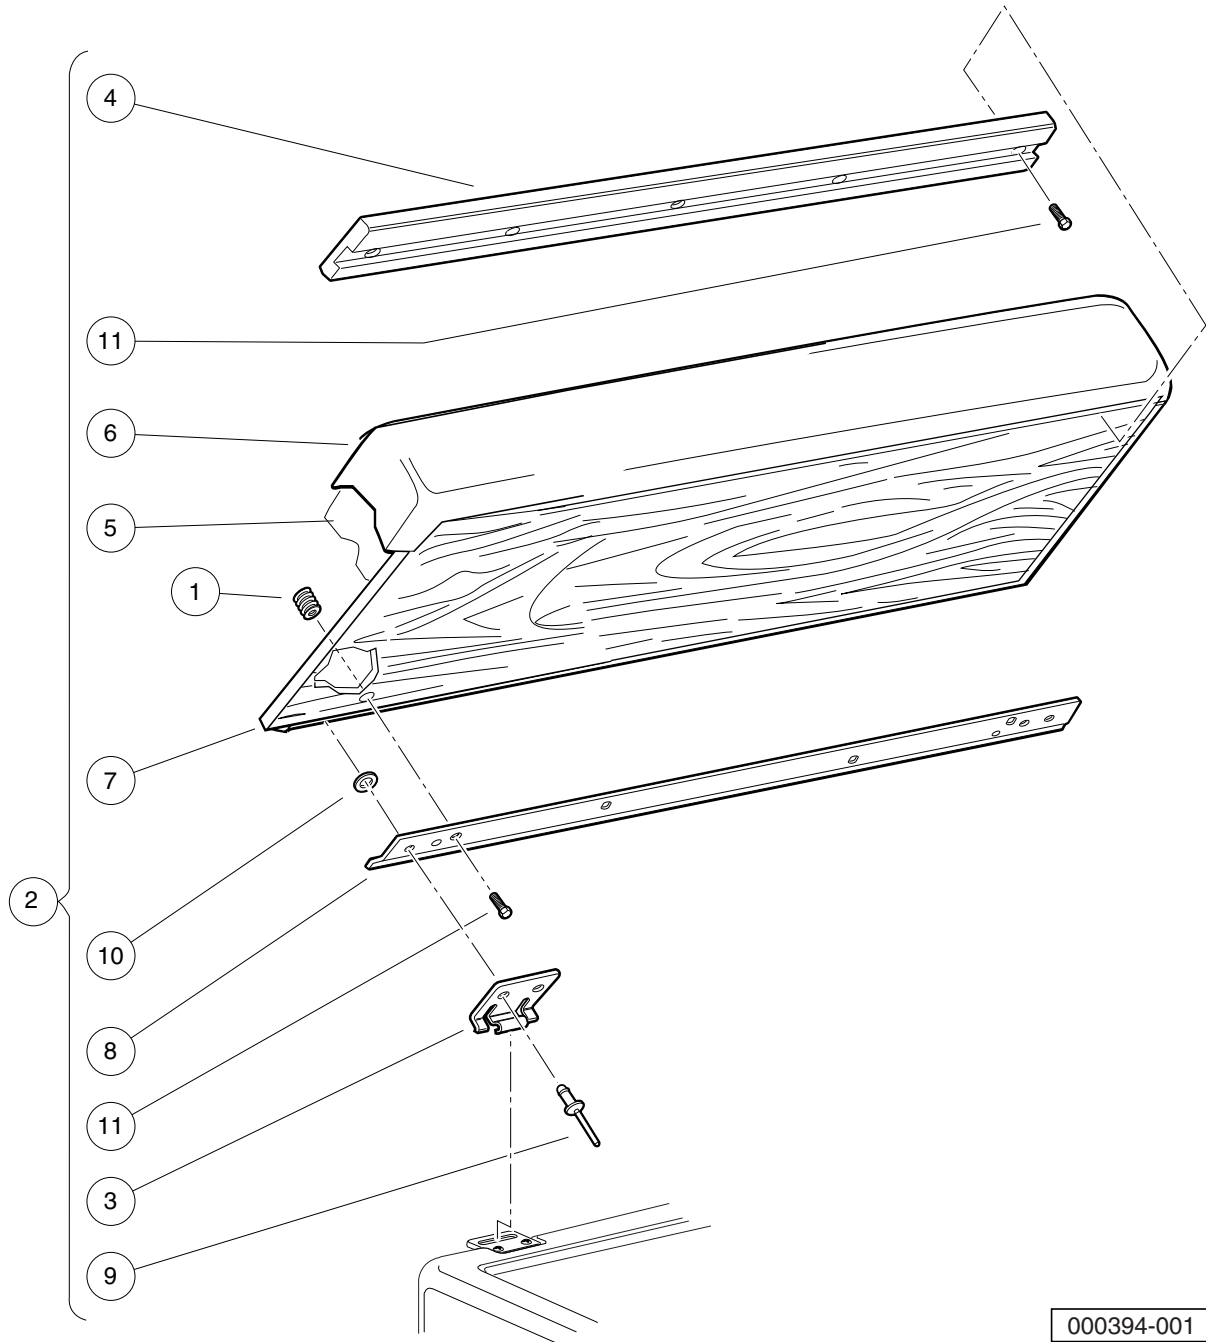

000394-001

FRONT AND CENTER SEAT BOTTOMS – VILLAGER 6 AND 8


ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	1010543	Insert - Wood	8	
2	<u>101728201</u>	Seat Bottom Assembly, Front, White (includes items 3 through 11)	1	
3	<u>1011652</u>	Hinge Plate	2	
4	<u>1013312</u>	Bumper, Seat, Long	1	
5	N/A	Foam, Seat	1	
6	<u>101562712</u>	Vinyl Cover, Seat Bottom, White	1	
7	N/A	Plywood Assy	1	
8	<u>1017695</u>	Seat Support Bracket	2	
9	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
10	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
11	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
12	<u>101728203</u>	Seat Bottom Assembly, Front, Beige (includes items 13 through 21)	1	
13	<u>1011652</u>	Hinge Plate	2	
14	<u>1013312</u>	Bumper, Seat, Long	1	
15	N/A	Foam, Seat	1	
16	<u>101562711</u>	Vinyl Cover, Seat Bottom, Buff	1	
17	N/A	Plywood Assy	1	
18	<u>1017695</u>	Seat Support Bracket	2	
19	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
20	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
21	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
22	<u>101728210</u>	Seat Bottom Assembly, Front, Black (includes items 23 through 31)	1	
23	<u>1011652</u>	Hinge Plate	2	
24	<u>1013312</u>	Bumper, Seat, Long	1	
25	N/A	Foam, Seat	1	
26	<u>101562714</u>	Vinyl Cover, Seat Bottom, Black	1	
27	N/A	Plywood Assy	1	
28	<u>1017695</u>	Seat Support Bracket	2	
29	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
30	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
31	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
32	<u>101728213</u>	Seat Bottom Assembly, Rear, Gray (includes items 33 through 41)	1	
33	<u>1011652</u>	Hinge Plate	2	
34	<u>1013312</u>	Bumper, Seat, Long	1	
35	N/A	Foam, Seat	1	
36	<u>101562715</u>	Vinyl Cover, Seat Bottom, Gray	1	
37	N/A	Plywood Assy	1	
38	<u>1017695</u>	Seat Support Bracket	2	
39	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
40	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
41	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
Note: Sub-components contained in items 12, 22, and 32 are the same as those shown for item 2, except for the vinyl seat covers.				

1


G

E

VILLAGER 8

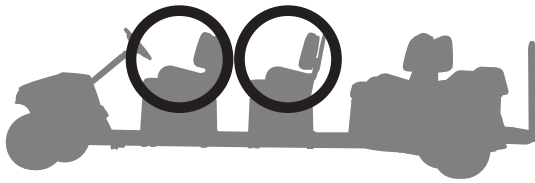

VILLAGER 6

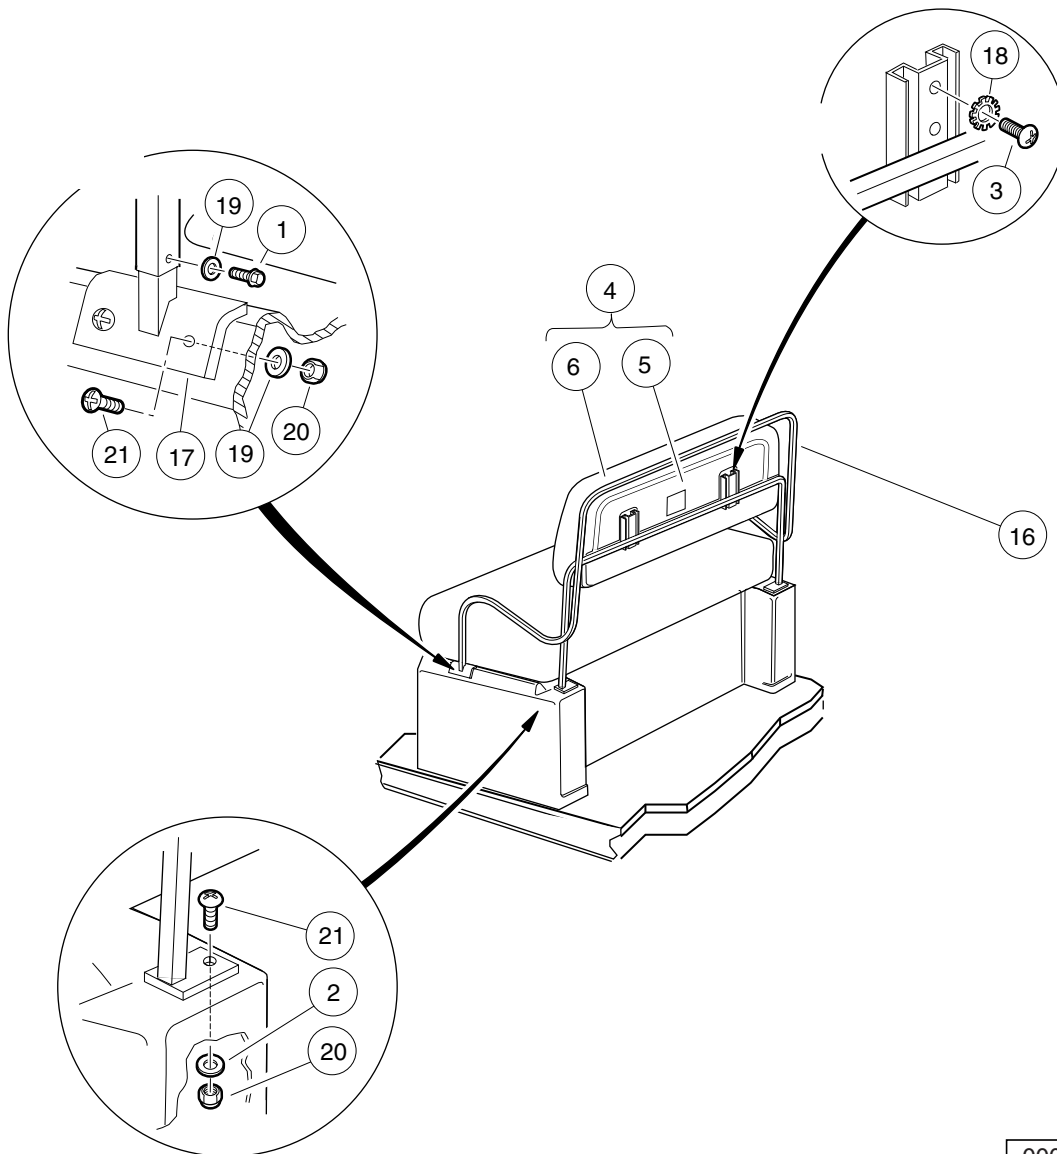

000396-001

SEAT BACKS AND ARMRESTS – VILLAGER 6 AND 8

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4	
2	<u>1014306</u>	Washer, 1/4" Type B Flat	2	
3	<u>1015902</u>	Screw, 1/4-20 X 1.25 Truss-Head	4	
4	<u>101677701</u>	Seat Back Assembly, White (includes items 5 and 6)	1	
5	1016751	Cap, Seat Back	1	
6	<u>101675512</u>	Vinyl Seat Back, White	1	
7	<u>101677702</u>	Seat Back Assembly, Black (includes items 8 and 9)	1	
8	1016751	Cap, Seat Back	1	
9	<u>101675514</u>	Vinyl Seat Back, Black	1	
10	<u>101677703</u>	Seat Back Assembly, Beige (includes items 11 and 12)	1	
11	1016751	Cap, Seat Back	1	
12	<u>101675511</u>	Vinyl Seat Back, Beige	1	
13	<u>101677705</u>	Seat Back Assembly, Gray (includes items 14 and 15)	1	
14	1016751	Cap, Seat Back	1	
15	<u>101675515</u>	Vinyl Seat Back-nstd Svc	1	
16	<u>1017259</u>	Armrest Weld Asm Front	1	
17	<u>1017310</u>	Armrest Mounting Weldment	2	
18	<u>101946201</u>	Washer, Lock, 0.250 External-Tooth	4	
19	<u>332</u>	Washer, 1/4 Type A Narrow Flat	6	
20	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	6	
21	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	6	




1

G

E

VILLAGER 8

VILLAGER 6

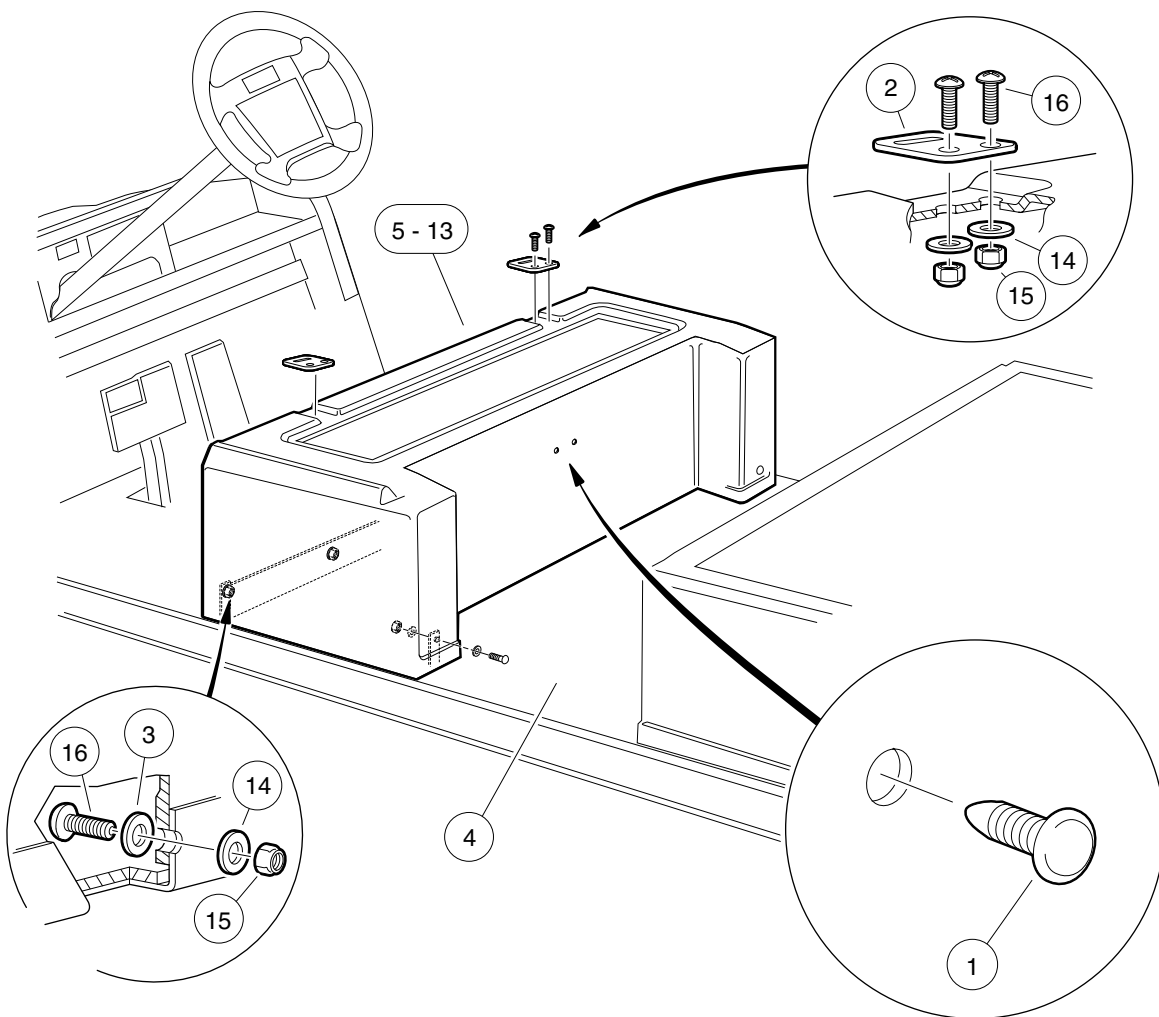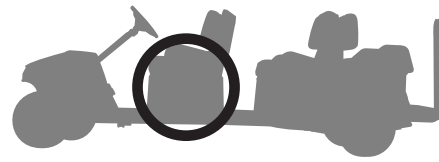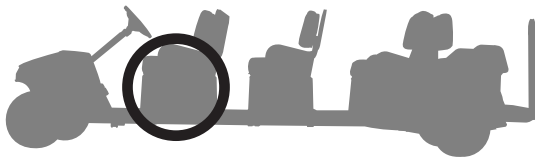

000389-001

FRONT CENTER BODY AND FLOORMAT – VILLAGER 6 AND 8


ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	<u>1010434</u>	Barrel - Plastic	2			
2	<u>1012412</u>	Body, Hinge Plate	2			
3	<u>1012581</u>	Washer, 0.609-inch OD, Nylon Cup	6			
4	<u>1017289</u>	Rear Floormat Limo	1			
5	<u>101731601</u>	Body, Beige, Center	1			
6	<u>101731602</u>	Body, White, Center	1			
7	<u>101731604</u>	Body, Gray, Center	1			
8	<u>101731606</u>	Body, Red, Center	1			
9	<u>101731608</u>	Body, Pacific Blue, Center	1			
10	<u>101731609</u>	Body, Dark Green, Center	1			
11	<u>101731610</u>	Body, Black, Center	1			
12	<u>101731611</u>	Body, Classic Blue, Center	1			
13	<u>101731612</u>	Body, Burgundy, Center	1			
14	<u>332</u>	Washer, 1/4 Type A Narrow Flat	10			
15	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	10			
16	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	10			

1

G

E

VILLAGER 8

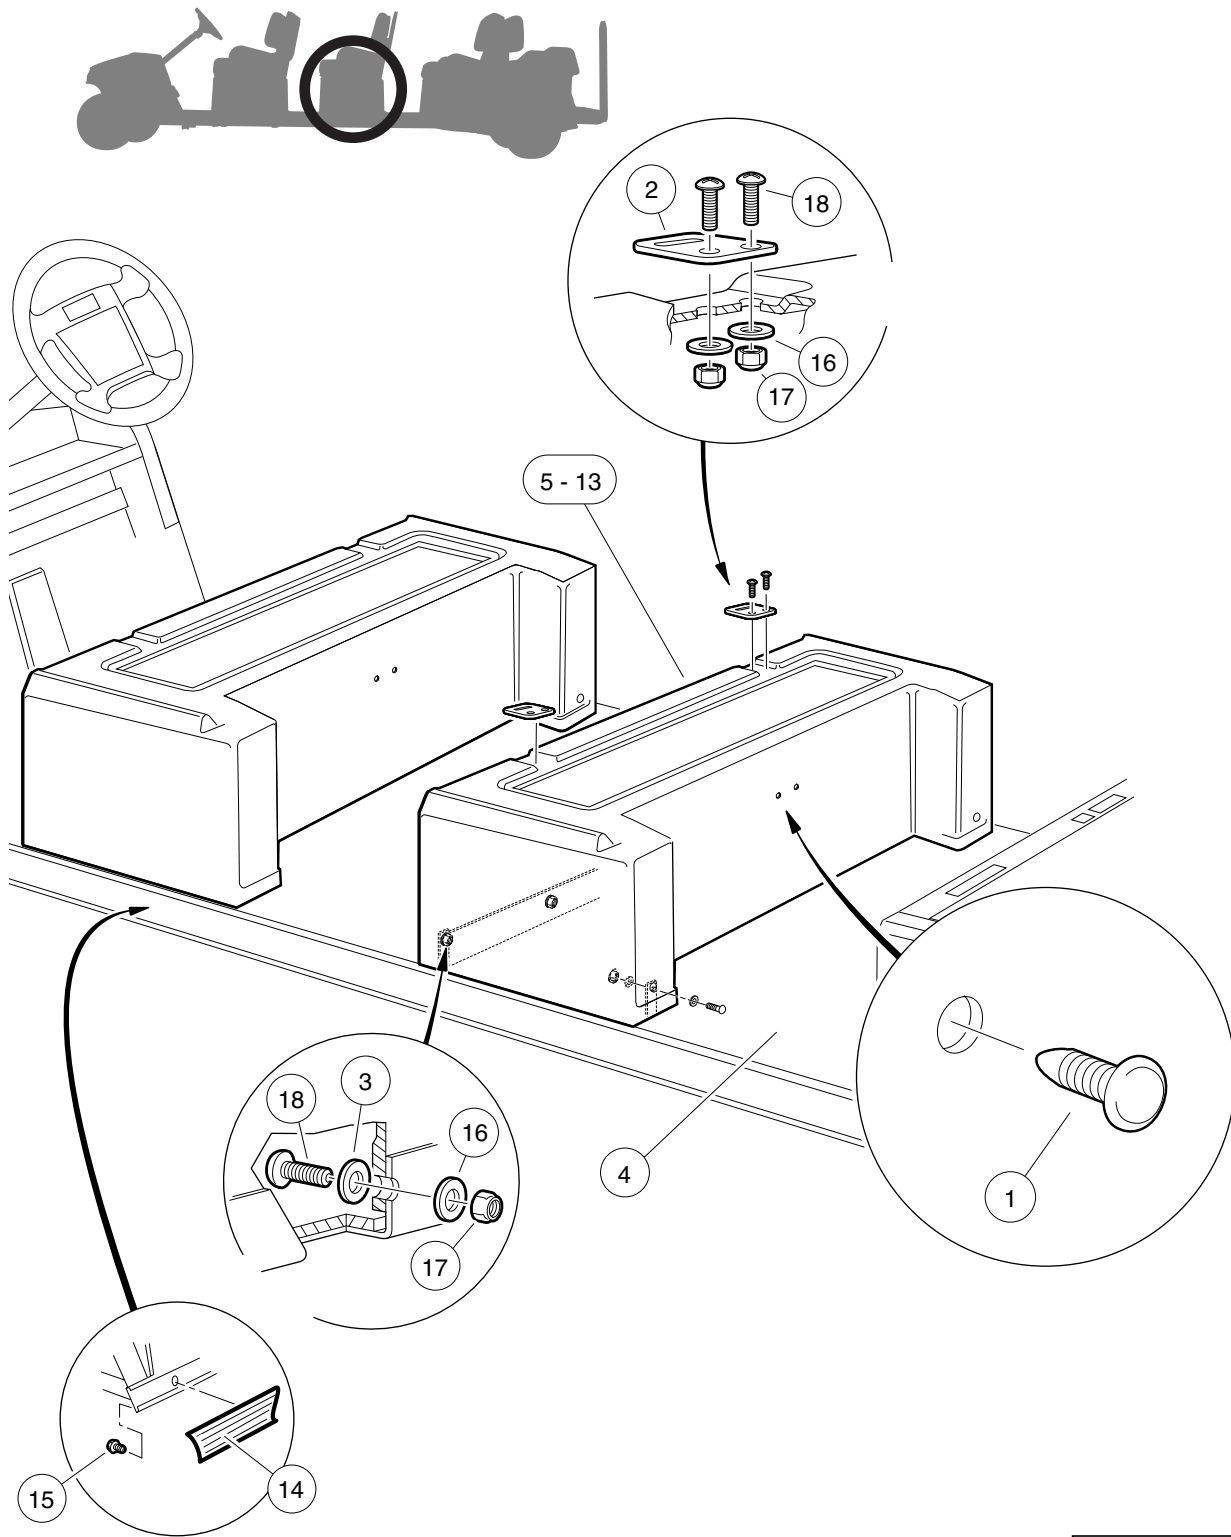

000390-001

SECOND CENTER BODY AND FLOORMAT – VILLAGER 8

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010434</u>	Barrel - Plastic	2	
2	<u>1012412</u>	Body, Hinge Plate	2	
3	<u>1012581</u>	Washer, 0.609-inch OD, Nylon Cup	6	
4	<u>1017289</u>	Rear Floormat Limo	1	
5	<u>101788201</u>	Body, Beige, Center	1	
6	<u>101788202</u>	Body, White, Center	1	
7	<u>101788204</u>	Body, Gray, Center	1	
8	<u>101788206</u>	Body, Red, Center	1	
9	<u>101788208</u>	Body, Pacific Blue, Center	1	
10	<u>101788209</u>	Body, Dark Green, Center	1	
11	<u>101788210</u>	Body, Black, Center	1	
12	<u>101788211</u>	Body, Classic Blue, Center	1	
13	<u>101788212</u>	Body, Burgundy, Center	1	
14	<u>101791901</u>	Bumper Guard Vinyl Trim	2	
15	<u>102310701</u>	Screw, #8-18 x 0.375, Hex-Head Washer	8	
16	<u>332</u>	Washer, 1/4 Type A Narrow Flat	10	
17	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	10	
18	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	10	


1

G

E

VILLAGER 8

VILLAGER 6

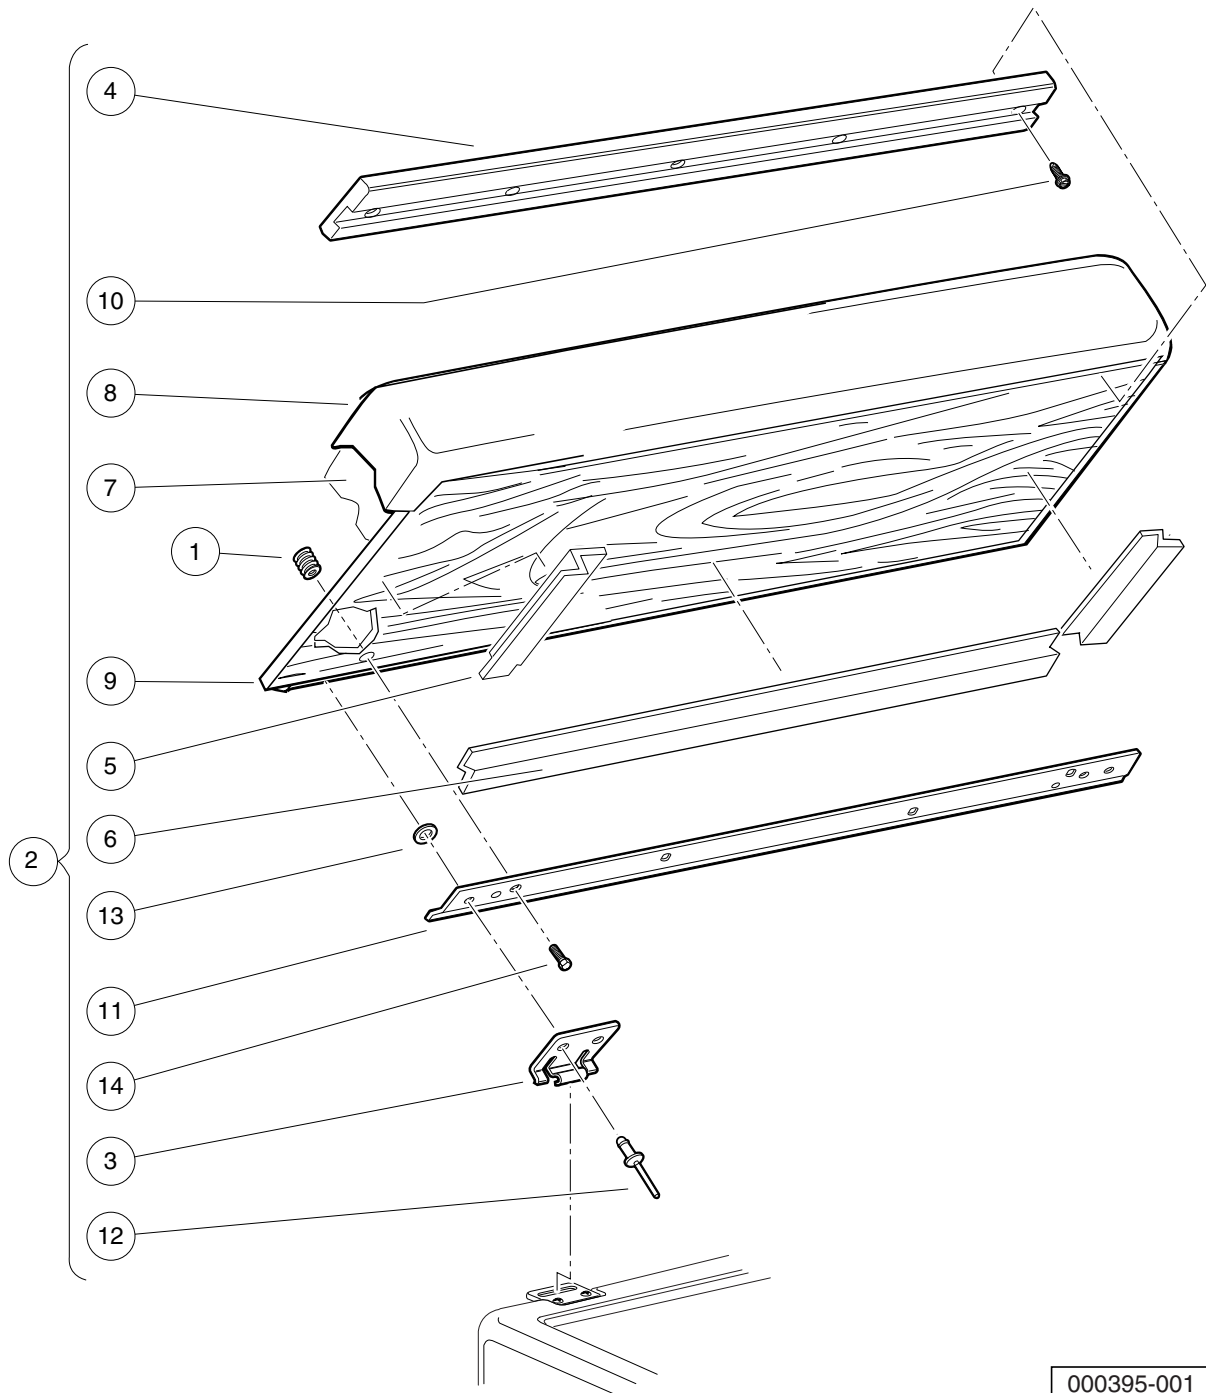

000395-001

REAR FORWARD-FACING SEAT BOTTOM – VILLAGER 6 AND 8

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	1010543	Insert - Wood	8	
2	<u>101728202</u>	Seat Bottom Assembly, Rear, White (includes items 3 through 14)	1	
3	<u>1011652</u>	Hinge Plate	2	
4	<u>1012597</u>	Seat Bumper	1	
5	<u>1012656</u>	Seat Gasket, Short	2	
6	<u>1012657</u>	Seat Gasket, Long	1	
7	N/A	Foam, Seat	1	
8	<u>101562712</u>	Vinyl Cover, Seat Bottom, White	1	
9	N/A	Plywood Assy	1	
10	<u>1017384</u>	Screw, #12 X .50 Hex, Washer-Head	5	
11	<u>1017695</u>	Seat Support Bracket	2	
12	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
13	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
14	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
15	<u>101728204</u>	Seat Bottom Assembly, Rear, Beige (includes items 16 through 27)	1	
16	<u>1011652</u>	Hinge Plate	2	
17	<u>1012597</u>	Seat Bumper	1	
18	<u>1012656</u>	Seat Gasket, Short	2	
19	<u>1012657</u>	Seat Gasket, Long	1	
20	N/A	Foam, Seat	1	
21	<u>101562711</u>	Vinyl Cover, Seat Bottom, Buff	1	
22	N/A	Plywood Assy	1	
23	<u>1017384</u>	Screw, #12 X .50 Hex, Washer-Head	5	
24	<u>1017695</u>	Seat Support Bracket	2	
25	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
26	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
27	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
Note: Sub-components contained in item 15 are the same as those shown for item 2, except for the vinyl seat cover.				


1

G

E

VILLAGER 8

VILLAGER 6

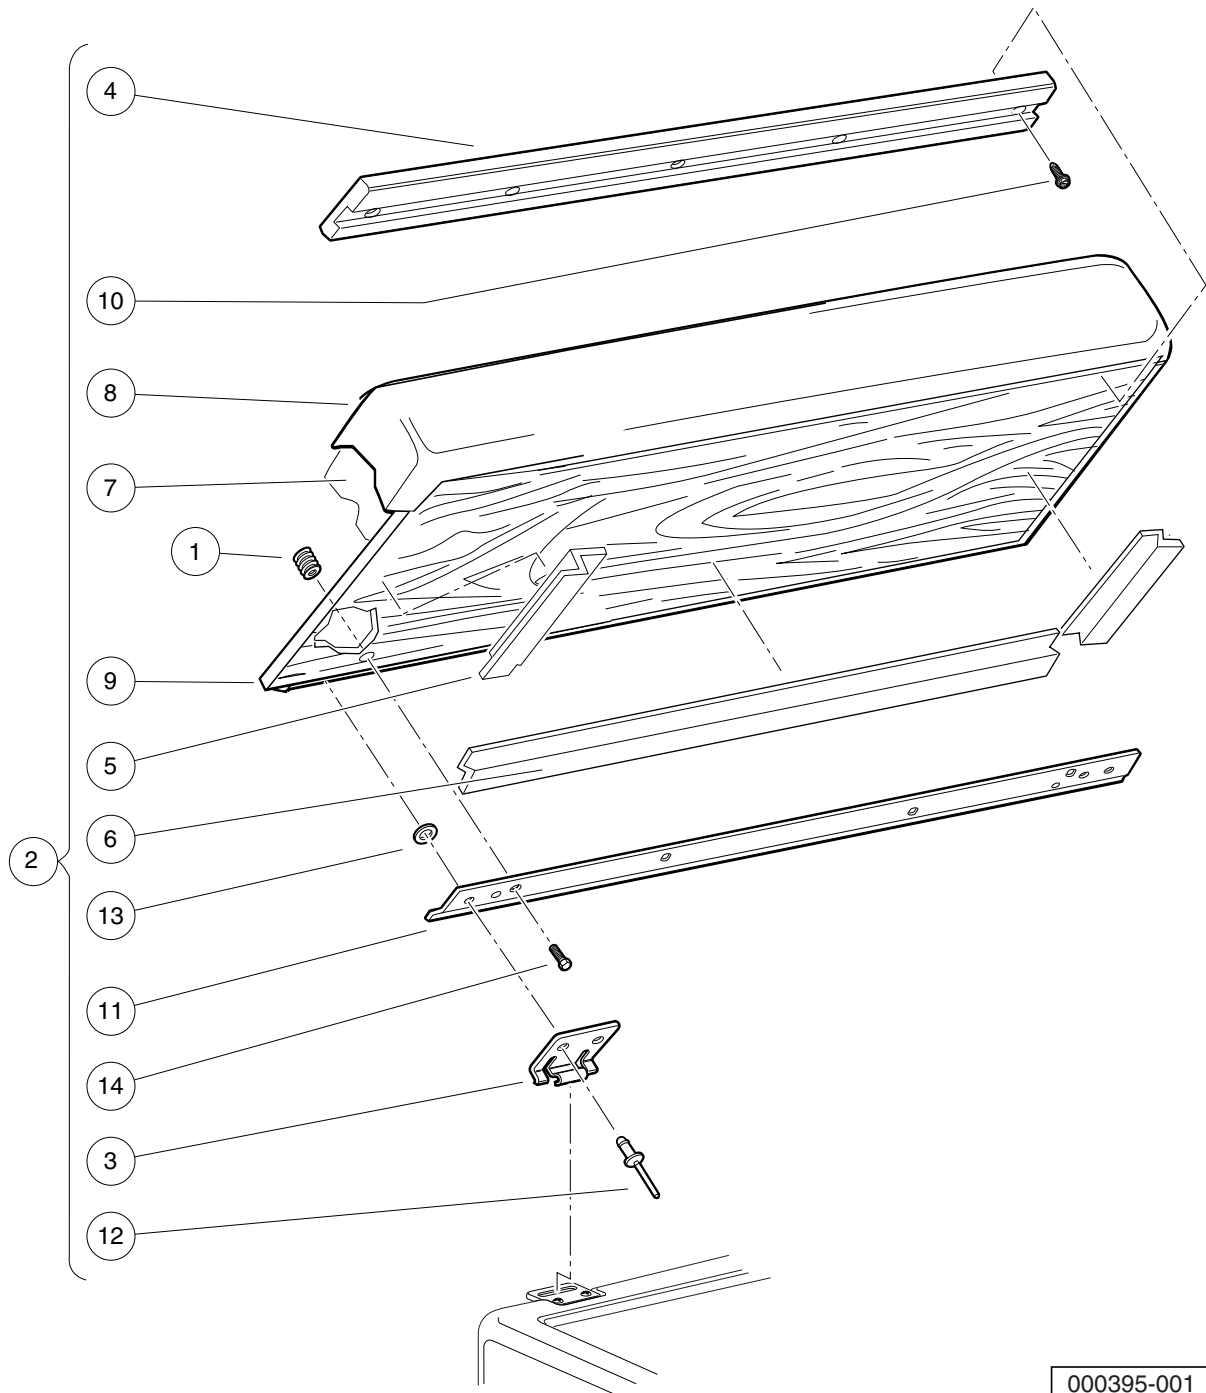

000395-001


REAR FORWARD-FACING SEAT BOTTOM – VILLAGER 6 AND 8, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	1010543	Insert - Wood	8	
2	<u>101728211</u>	Seat Bottom Assembly, Rear, Black (includes items 3 through 14)	1	
3	<u>1011652</u>	Hinge Plate	2	
4	<u>1012597</u>	Seat Bumper	1	
5	<u>1012656</u>	Seat Gasket, Short	2	
6	<u>1012657</u>	Seat Gasket, Long	1	
7	N/A	Foam, Seat	1	
8	<u>101562714</u>	Vinyl Cover, Seat Bottom, Black	1	
9	N/A	Plywood Assy	1	
10	<u>1017384</u>	Screw, #12 X .50 Hex, Washer-Head	5	
11	<u>1017695</u>	Seat Support Bracket	2	
12	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
13	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
14	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
15	<u>101728214</u>	Seat Bottom Assembly, Rear, Gray (includes items 16 through 27)	1	
16	<u>1011652</u>	Hinge Plate	2	
17	<u>1012597</u>	Seat Bumper	1	
18	<u>1012656</u>	Seat Gasket, Short	2	
19	<u>1012657</u>	Seat Gasket, Long	1	
20	N/A	Foam, Seat	1	
21	<u>101562715</u>	Vinyl Cover, Seat Bottom, Gray	1	
22	N/A	Plywood Assy	1	
23	<u>1017384</u>	Screw, #12 X .50 Hex, Washer-Head	5	
24	<u>1017695</u>	Seat Support Bracket	2	
25	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
26	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
27	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
Note: Sub-components contained in item 15 are the same as those shown for item 2, except for the vinyl seat cover.				

1**G****E**

VILLAGER 8

VILLAGER 6

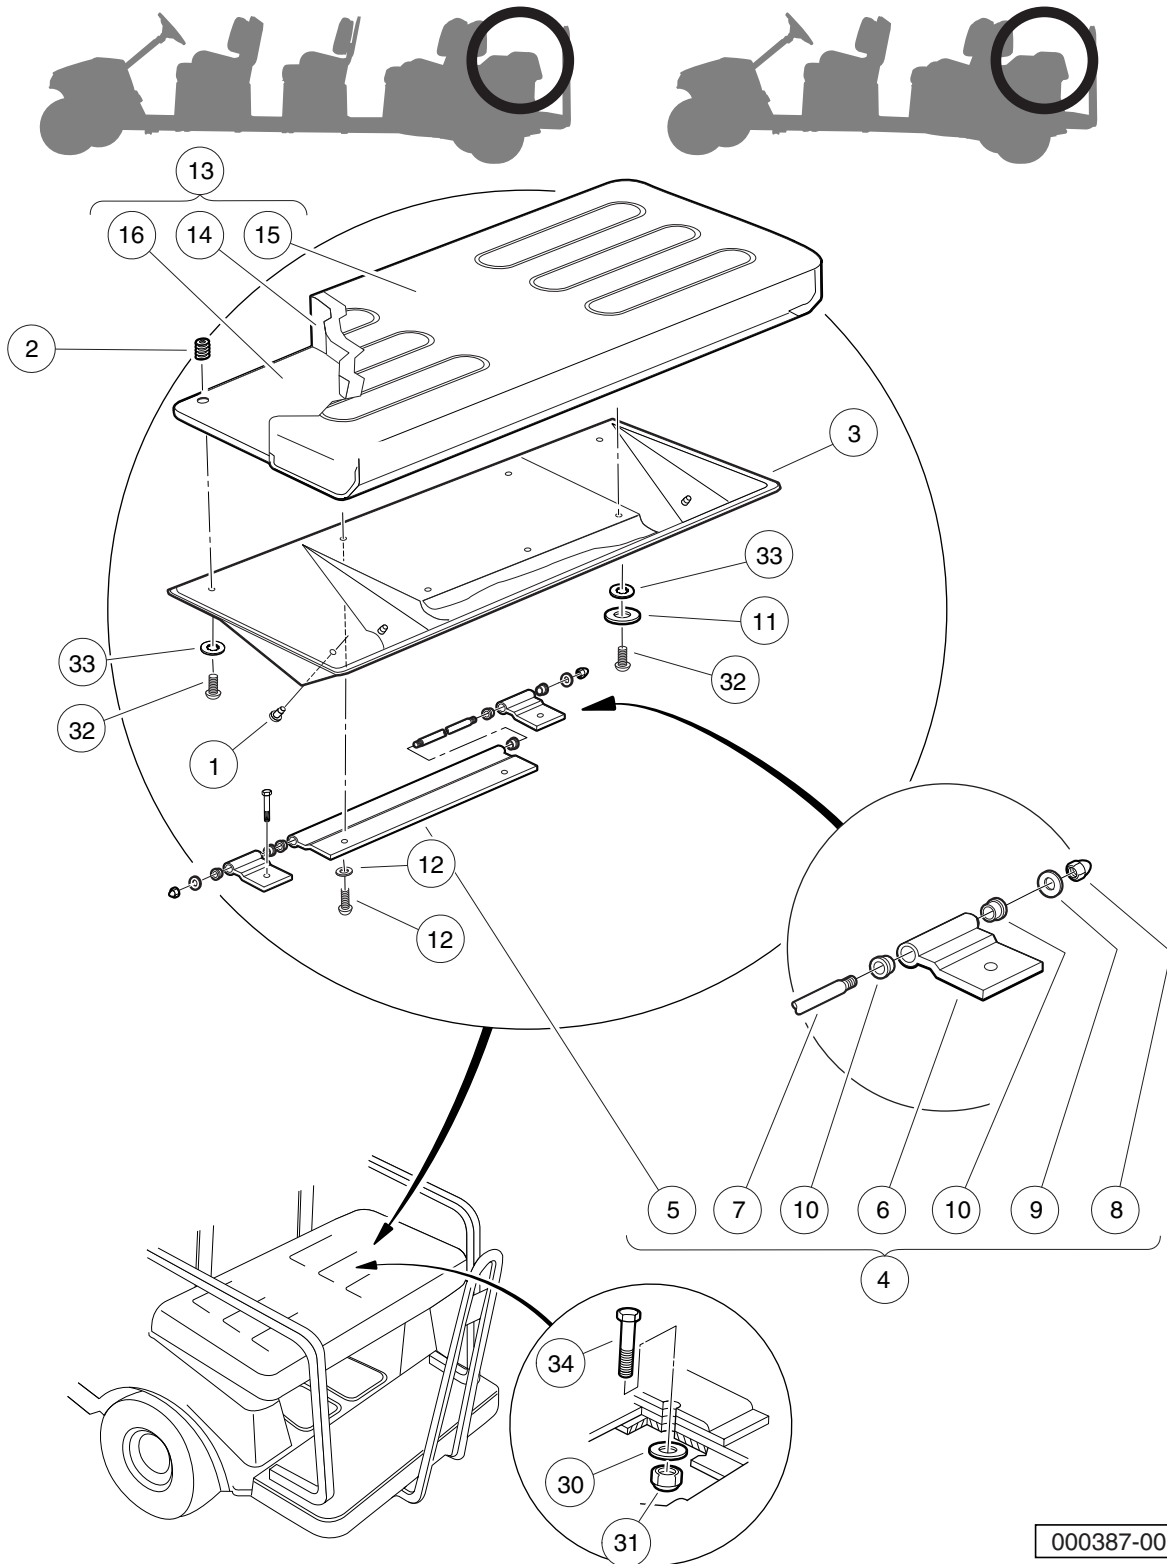

000387-001

REAR-FACING SEAT BOTTOM – VILLAGER VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010436</u>	Bumper, Rubber	1
2	<u>1010543</u>	Insert - Wood	7
3	<u>1011210</u>	Seat Support 4-Passenger	1
4	<u>1011219</u>	Hinge Assembly 4 Passenger (includes items 5 through 10)	1
5	<u>1011220</u>	Hinge Long 4 Passenger	1
6	<u>1011221</u>	Hinge Short 4 Passenger	2
7	<u>1011222</u>	Pin, Hinge, Long, 4-Pass	1
8	<u>1015091</u>	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	2
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
10	<u>8028</u>	Rotor Stop, FNR	6
11	<u>1011578</u>	Washer, 5/16 Type B Flat	3
12	<u>1014007</u>	Washer, 1/4 Flat	2
13	<u>101564804</u>	Seat Bottom Assembly, Buff (includes items 14 through 16)	1
14	N/A	Foam, Seat	1
15	<u>101562711</u>	Vinyl Cover, Seat Bottom, Buff	1
16	N/A	Plywood Assy	1
17	<u>101564805</u>	Seat Bottom Assembly, White (includes items 18 through 20)	1
18	N/A	Foam, Seat	1
19	<u>101562712</u>	Vinyl Cover, Seat Bottom, White	1
20	N/A	Plywood Assy	1
21	<u>101564807</u>	Seat Bottom Assembly, Gray (includes items 22 through 24)	1
22	N/A	Foam, Seat	1
23	<u>101562715</u>	Vinyl Cover, Seat Bottom, Gray	1
24	N/A	Plywood Assy	1
25	<u>101564808</u>	Seat Bottom Assembly, Black (includes items 26 through 28)	1
26	N/A	Foam, Seat	1
27	<u>101562714</u>	Vinyl Cover, Seat Bottom, Black	1
28	N/A	Plywood Assy	1
29	<u>1016916</u>	Screw, 1/4-20 X 1.50 Hex-Head Cap	2
30	<u>1241</u>	Washer, 5/16 Type A Flat	2
31	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
32	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	5
33	<u>8304</u>	Lockwasher, 1/4 Type A Int.tth	5
34	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	2
Note: Sub-components contained in items 17, 21, and 25 are the same as those shown for item 13, except for the vinyl seat covers.			



1
G
E

1

G

E

TRANSPORTER 6

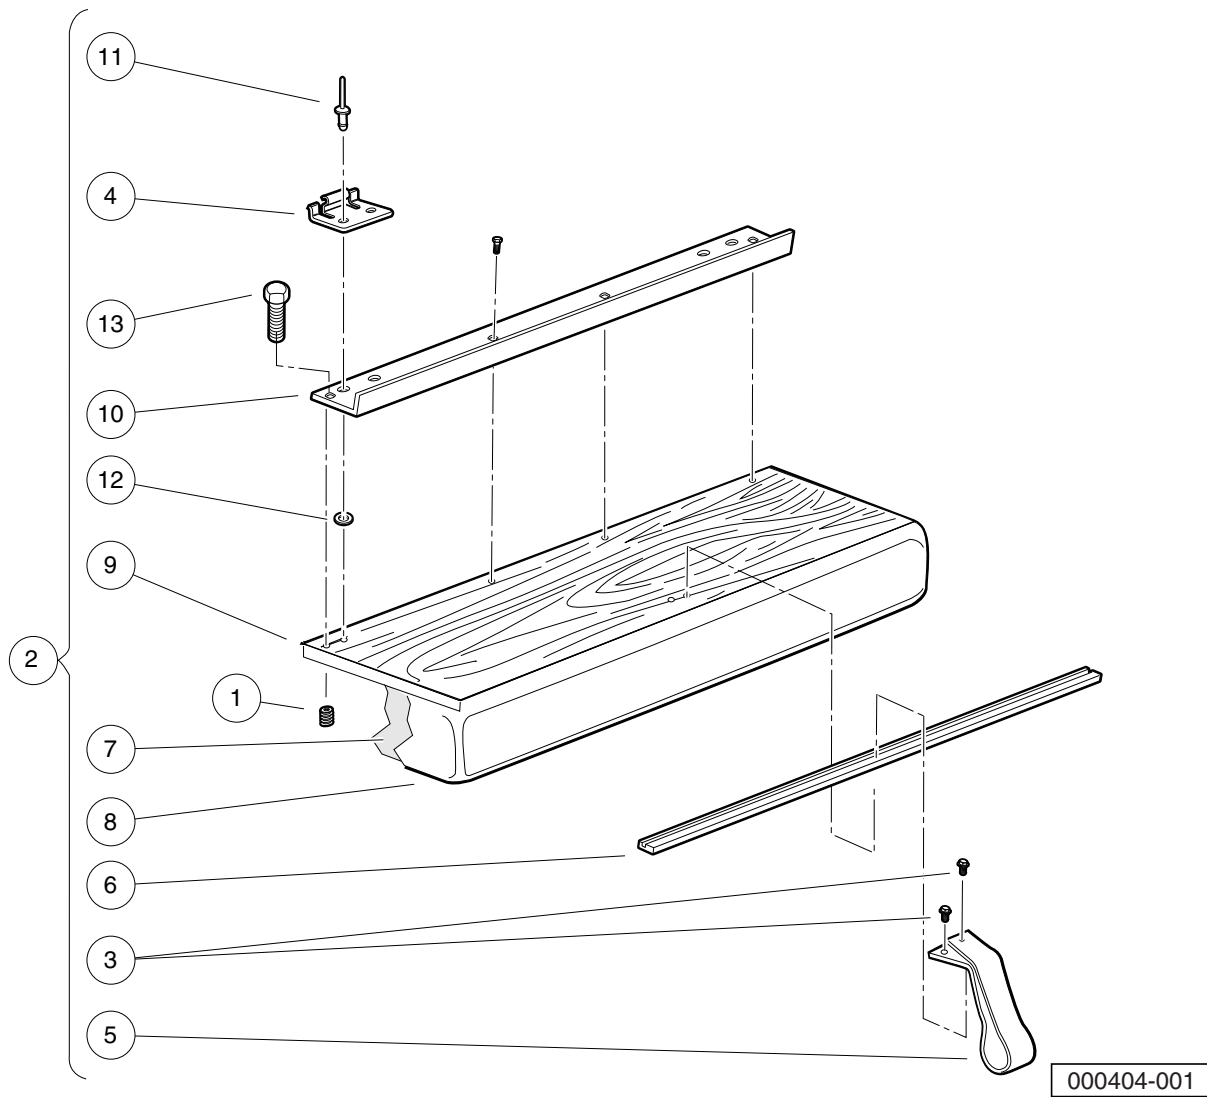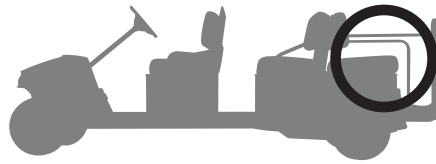

REAR-FACING SEAT BOTTOM – TRANSPORTER 6



ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	1010543	Insert - Wood	4	
2	<u>101684102</u>	Seat Bottom Assembly, Rear, White (includes items 3 through 13)	1	
3	<u>1010545</u>	Screw, Hex Washer Head 1/4-14 X .75	2	
4	<u>1011652</u>	Hinge Plate	2	
5	<u>1013309</u>	Strap, Utility Seat	1	
6	<u>1013312</u>	Bumper, Seat, Long	1	
7	N/A	Foam, Seat	1	
8	<u>101562712</u>	Vinyl Cover, Seat Bottom, White	1	
9	N/A	Plywood Assy	1	
10	<u>1016824</u>	Angle Seat Hinge	1	
11	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
12	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
13	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4	
14	<u>101684103</u>	Seat Bottom Assembly, Rear, Black (includes items 15 through 25)	1	
15	<u>1010545</u>	Screw, Hex Washer Head 1/4-14 X .75	2	
16	<u>1011652</u>	Hinge Plate	2	
17	<u>1013309</u>	Strap, Utility Seat	1	
18	<u>1013312</u>	Bumper, Seat, Long	1	
19	N/A	Foam, Seat	1	
20	<u>101562714</u>	Vinyl Cover, Seat Bottom, Black	1	
21	N/A	Plywood Assy	1	
22	<u>1016824</u>	Angle Seat Hinge	1	
23	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
24	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
25	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4	
Note: Sub-components contained in item 14 are the same as those shown for item 2, except for the vinyl seat cover.				

1

G


E

TRANSPORTER 6

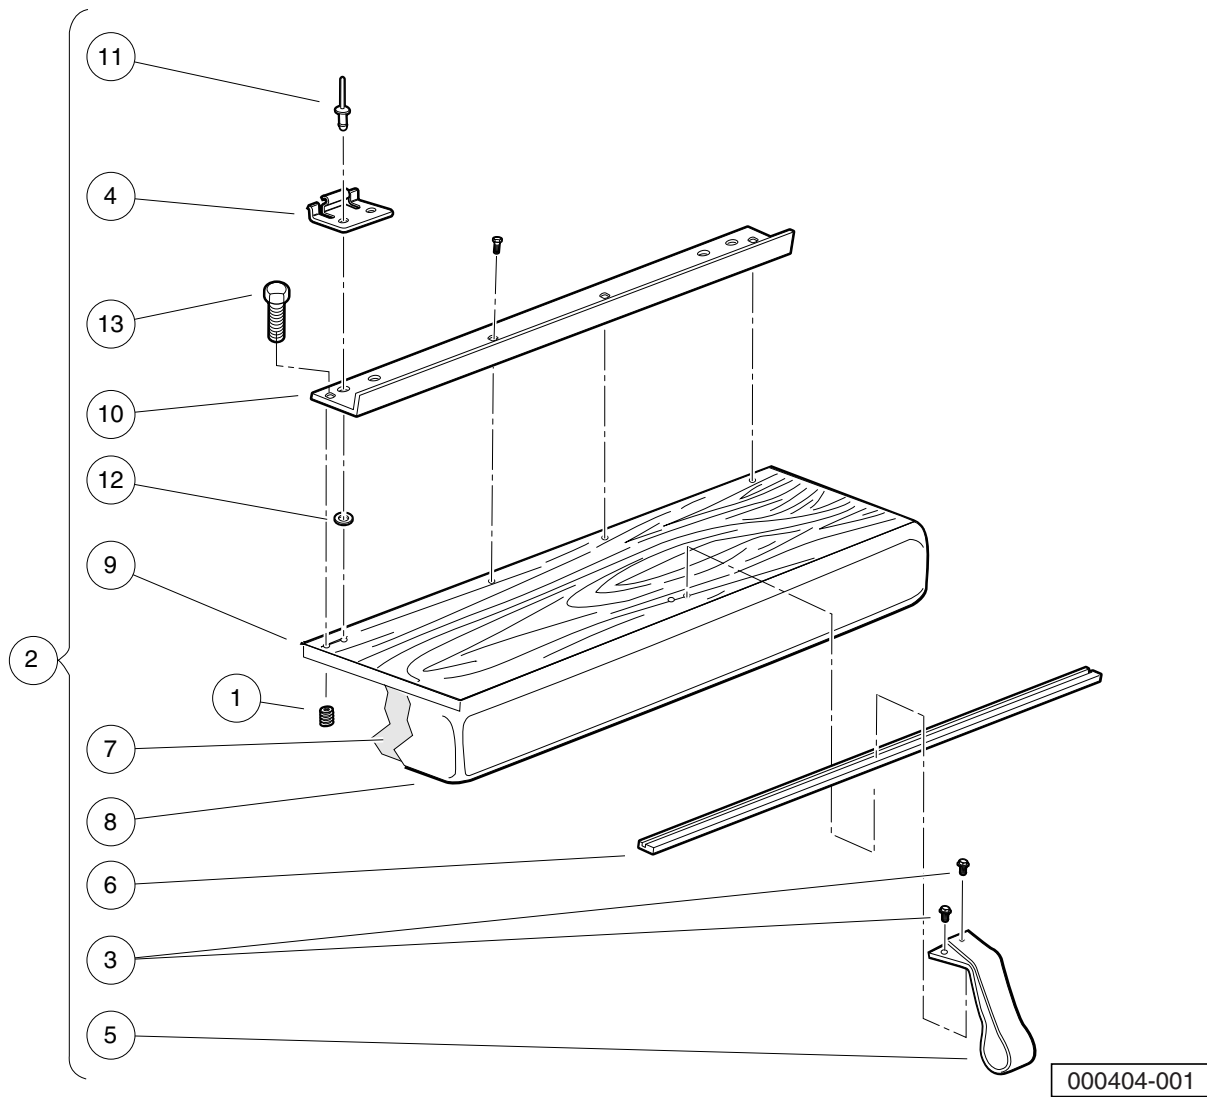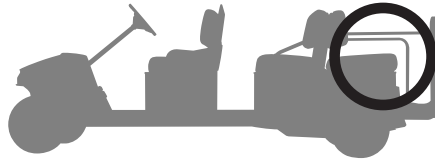

REAR-FACING SEAT BOTTOM – TRANSPORTER 6, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	1010543	Insert - Wood	4	
2	<u>101684105</u>	Seat Bottom Assembly, Rear, Gray (includes items 3 through 13)	1	
3	<u>1010545</u>	Screw, Hex Washer Head 1/4-14 X .75	2	
4	<u>1011652</u>	Hinge Plate	2	
5	<u>1013309</u>	Strap, Utility Seat	1	
6	<u>1013312</u>	Bumper, Seat, Long	1	
7	N/A	Foam, Seat	1	
8	<u>101562715</u>	Vinyl Cover, Seat Bottom, Gray	1	
9	N/A	Plywood Assy	1	
10	<u>1016824</u>	Angle Seat Hinge	1	
11	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
12	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
13	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4	
14	****	Seat Bottom Assembly, Rear, Beige (includes items 15 through 25)	1	
15	<u>1010545</u>	Screw, Hex Washer Head 1/4-14 X .75	2	
16	<u>1011652</u>	Hinge Plate	2	
17	<u>1013309</u>	Strap, Utility Seat	1	
18	<u>1013312</u>	Bumper, Seat, Long	1	
19	N/A	Foam, Seat	1	
20	<u>101562711</u>	Vinyl Cover, Seat Bottom, Buff	1	
21	N/A	Plywood Assy	1	
22	<u>1016824</u>	Angle Seat Hinge	1	
23	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
24	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
25	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4	
**** Special order item available upon request. Note: Sub-components contained in item 14 are the same as those shown for item 2, except for the vinyl seat cover.				

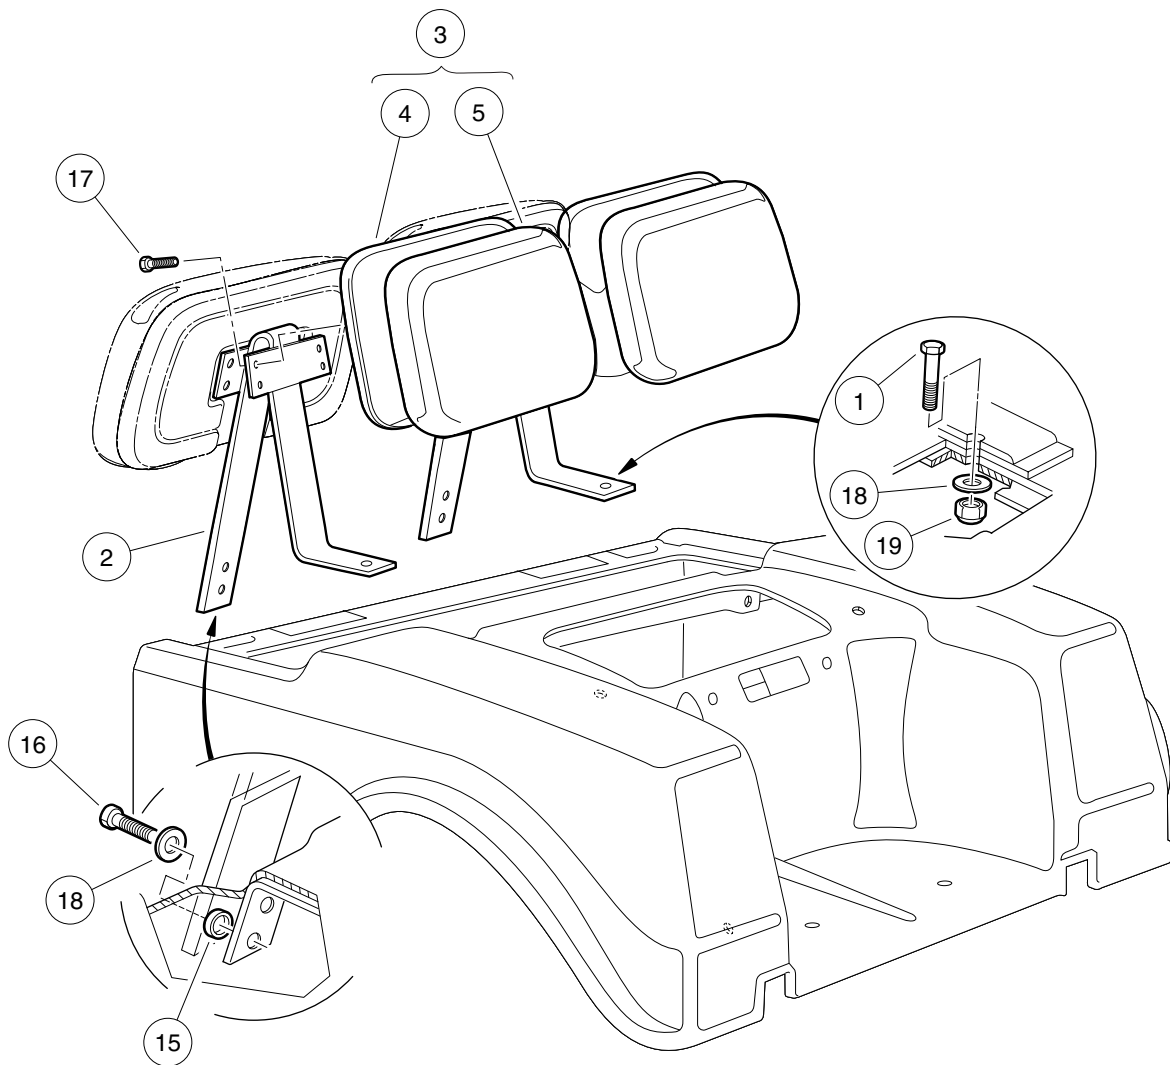1**G****E**

000398-001

REAR-FACING SEAT BACKS AND SUPPORTS – DS VILLAGER 4


ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	2	
2	<u>1011182</u>	Seat Back Assy19804-pass'	2	
3	<u>101565202</u>	Seat Back Assembly, White w/Black Cap	4	
4	<u>101565204</u>	Seat Back Assembly, Beige w/Black Cap	4	
5	<u>101565205</u>	Seat Back Assembly, Black w/Black Cap	4	
6	<u>101565206</u>	Seat Back Assembly, Gray w/Black Cap	4	
7	<u>1017774</u>	Body Spacer	4	
8	<u>101910401</u>	Screw, 5/16-18 X 1.25 Thrd Frm	4	
9	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	16	
10	<u>1241</u>	Washer, 5/16 Type A Flat	6	
11	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	

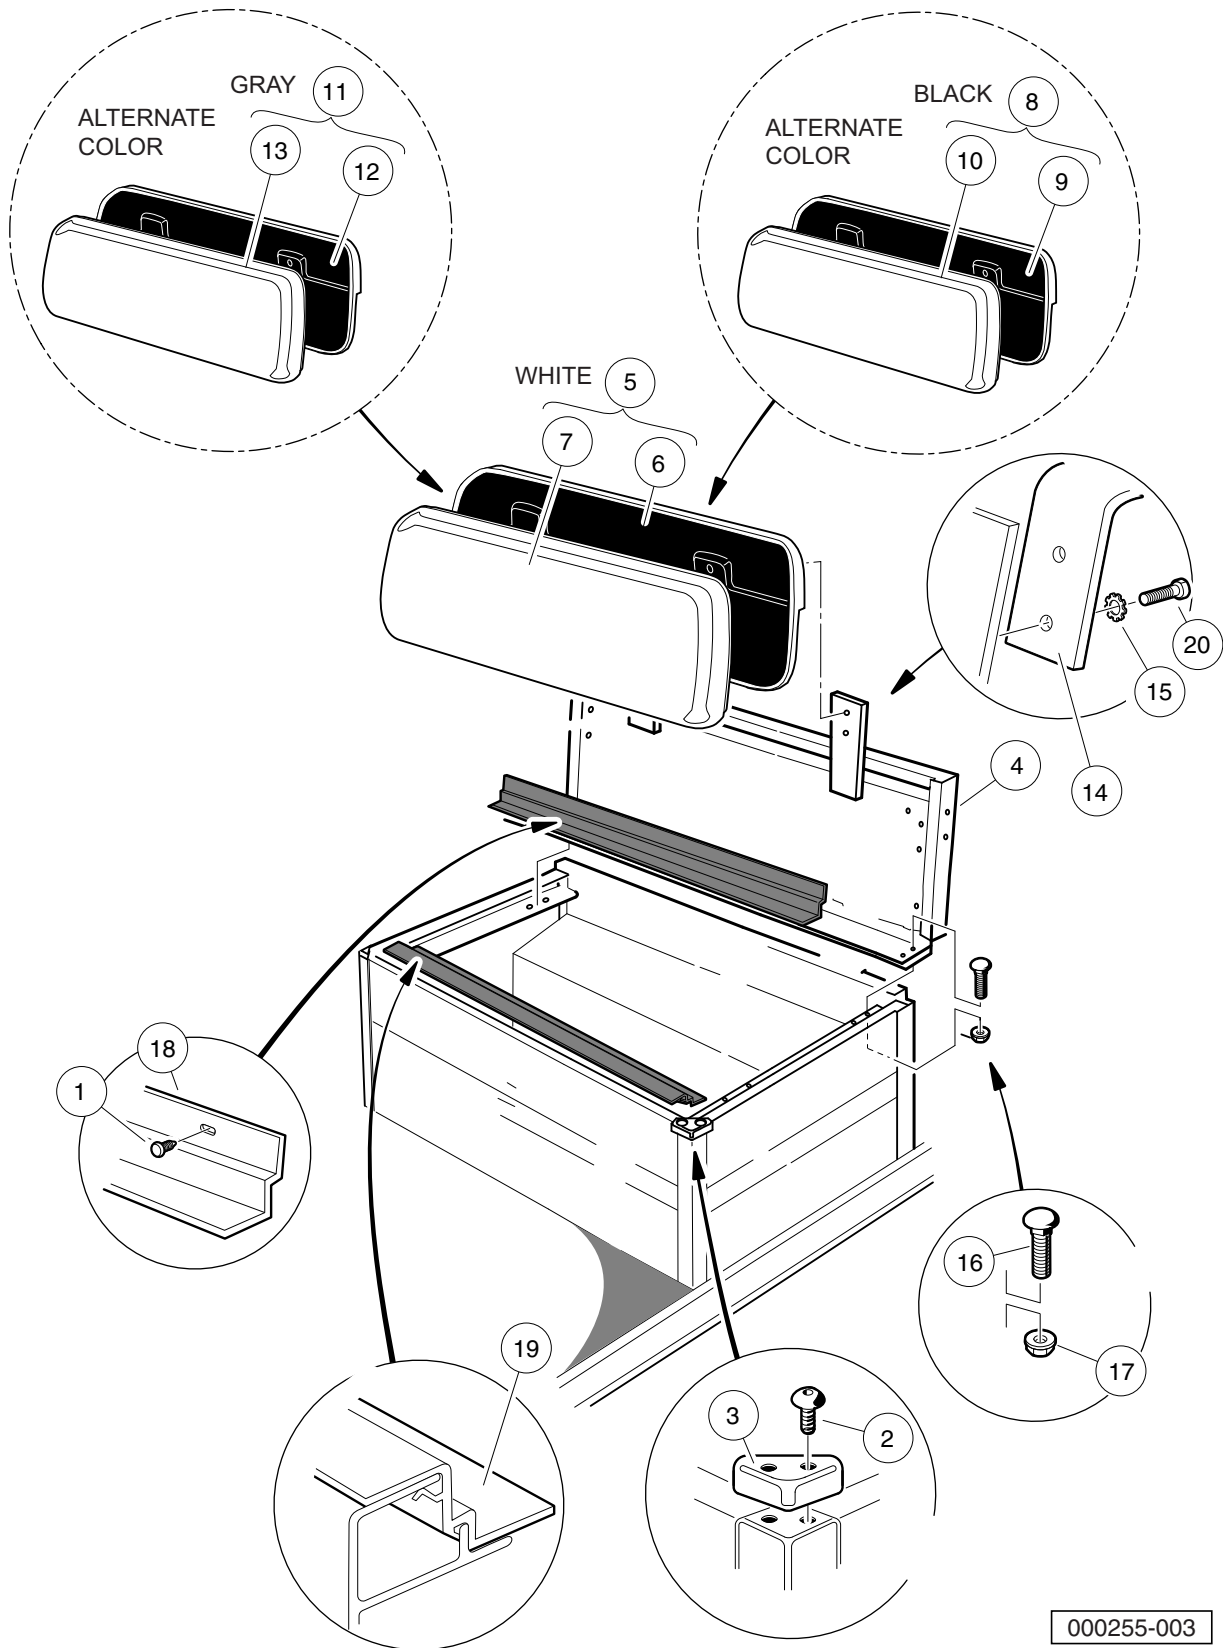1**G****E**

000255-003

CENTER SEAT BACK AND SUPPORT STRUCTURE – TRANSPORTER 6

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010434</u>	Barrel - Plastic	5	
2	<u>1014321</u>	Screw, #10 Truss-Head Torx	4	
3	<u>1014387</u>	Cap, Corner	2	
4	<u>1016723</u>	Seat Support Panel Assembly	1	
5	<u>101677701</u>	Seat Back Assembly, White (includes items 6 and 7)	1	
6	<u>1016751</u>	Cap, Seat Back	1	
7	<u>101675512</u>	Vinyl Seat Back, White	1	
8	<u>101677702</u>	Seat Back Assembly, Black (includes items 9 and 10)	1	
9	<u>1016751</u>	Cap, Seat Back	1	
10	<u>101675514</u>	Vinyl Seat Back, Black	1	
11	<u>101677705</u>	Seat Back Assembly, Gray (includes items 12 and 13)	1	
12	<u>1016751</u>	Cap, Seat Back	1	
13	<u>101675515</u>	Vinyl Seat Back-nstd Svc	1	
14	<u>1016839</u>	Bracket Seat Back Mount	2	
15	<u>101946201</u>	Washer, Lock, 0.250 External-Tooth	4	
16	<u>101963301</u>	Bolt, 5/16-18 X 0.75 Round-Head	2	
17	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	2	
18	<u>101963901</u>	Trim, Seat Bottom Rear	1	
19	<u>101964001</u>	Trim, Seat Bottom Front	1	
20	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	4	
Note: Sub-components contained in items 8 and 11 are the same as those shown for item 5, except for the vinyl seat covers.				

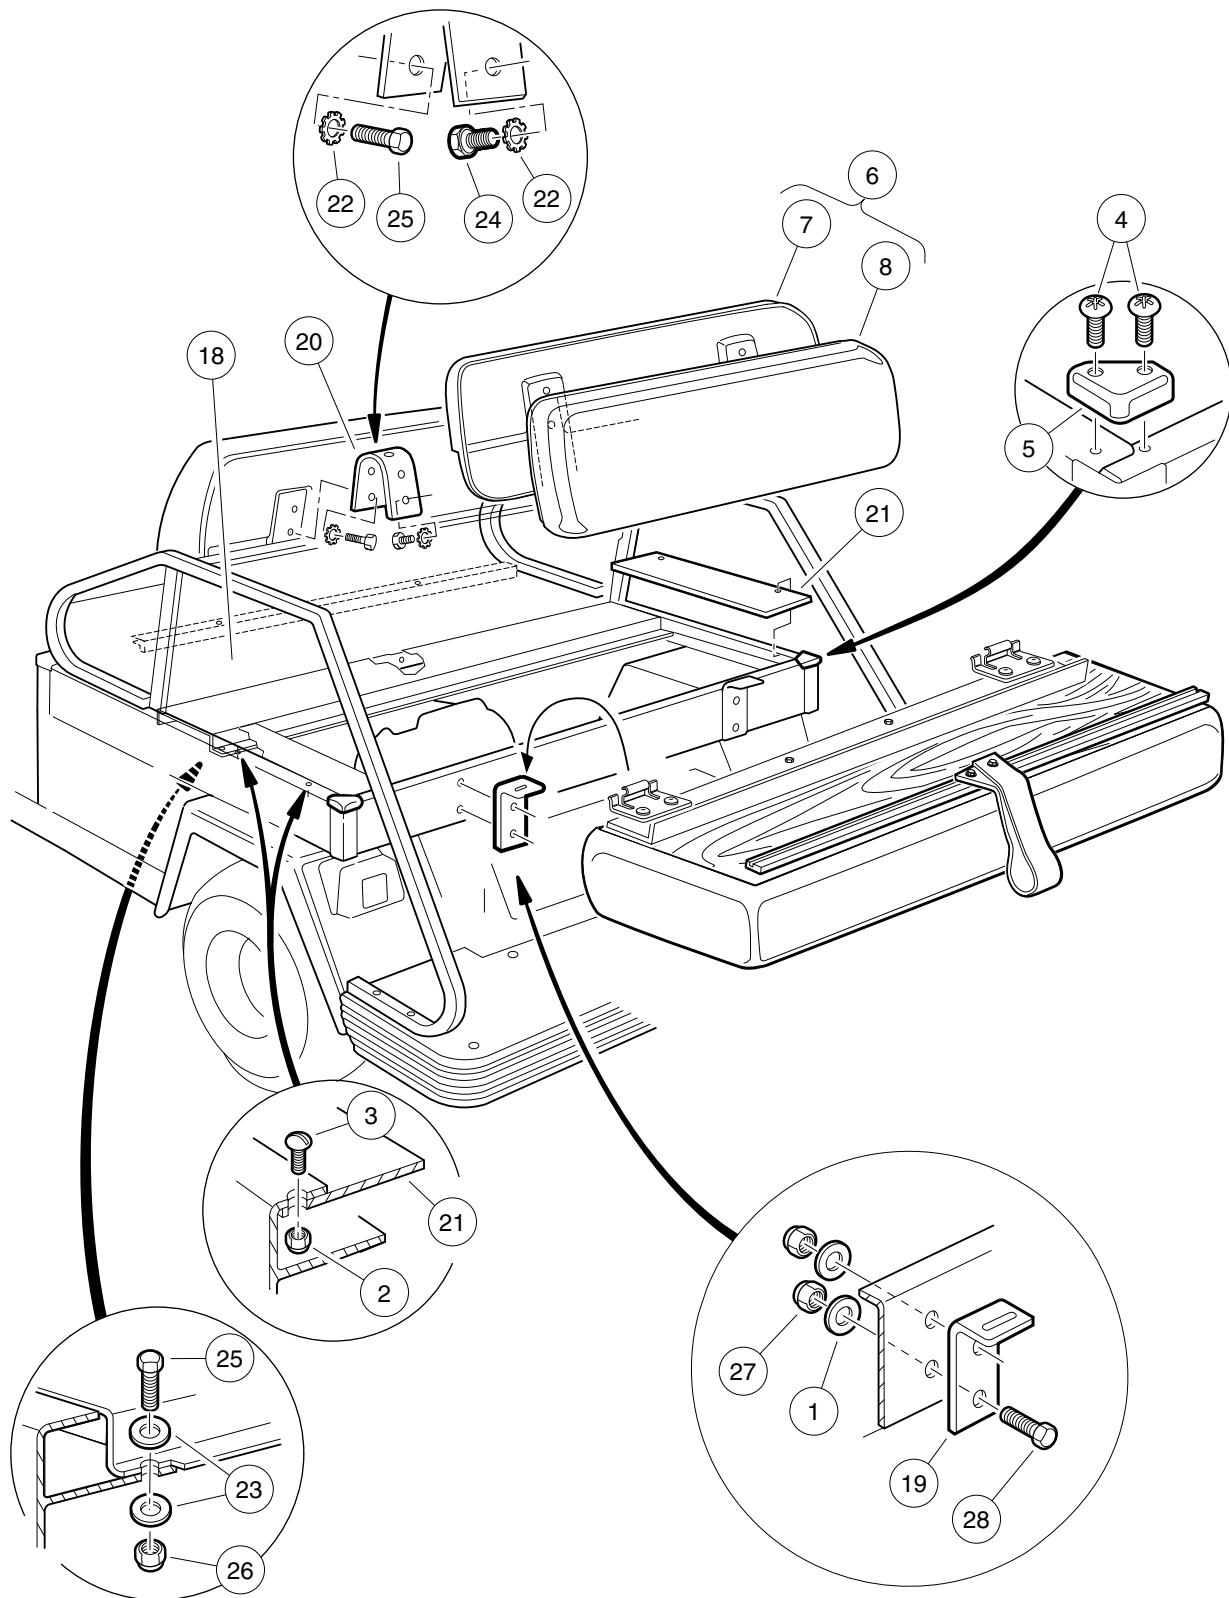1**G****E**

000406-001

REAR-FACING SEAT BACK AND SUPPORT STRUCTURE – TRANSPORTER 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011990</u>	Washer, 3/8 Flat	4
2	<u>1013061</u>	Locknut, #10-32 Nylon Insert	4
3	<u>1013169</u>	Screw, #10-32 X 0.5 Round-Head	4
4	<u>1014321</u>	Screw, #10 Truss-Head Torx	4
5	<u>1014387</u>	Cap, Corner	2
6	<u>101677701</u>	Seat Back Assembly, White (includes items 7 and 8)	1
7	<u>1016751</u>	Cap, Seat Back	1
8	<u>101675512</u>	Vinyl Seat Back, White	1
9	<u>101677702</u>	Seat Back Assembly, Black (includes items 10 and 11)	1
10	<u>1016751</u>	Cap, Seat Back	1
11	<u>101675514</u>	Vinyl Seat Back, Black	1
12	<u>101677703</u>	Seat Back Assembly, Beige (includes items 13 and 14)	1
13	<u>1016751</u>	Cap, Seat Back	1
14	<u>101675511</u>	Vinyl Seat Back, Beige	1
15	<u>101677705</u>	Seat Back Assembly, Gray (includes items 16 and 17)	1
16	<u>1016751</u>	Cap, Seat Back	1
17	<u>101675515</u>	Vinyl Seat Back-nstd Svc	1
18	<u>1016816</u>	Support Rear Seat	1
19	<u>1016819</u>	Seat Hinge Body	2
20	<u>1016839</u>	Bracket Seat Back Mount	2
21	<u>1016930</u>	Frame Panel Rear Seat	2
22	<u>101946201</u>	Washer, Lock, 0.250 External-Tooth	8
23	<u>332</u>	Washer, 1/4 Type A Narrow Flat	6
24	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	4
25	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	7
26	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	3
27	<u>8754</u>	Locknut, 3/8-16 Hex	4
28	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	4
Note: Sub-components contained in items 9, 12, and 15 are the same as those shown for item 6, except for the vinyl seat covers.			

1

G

E

1


G

E

VILLAGER 8



VILLAGER 6

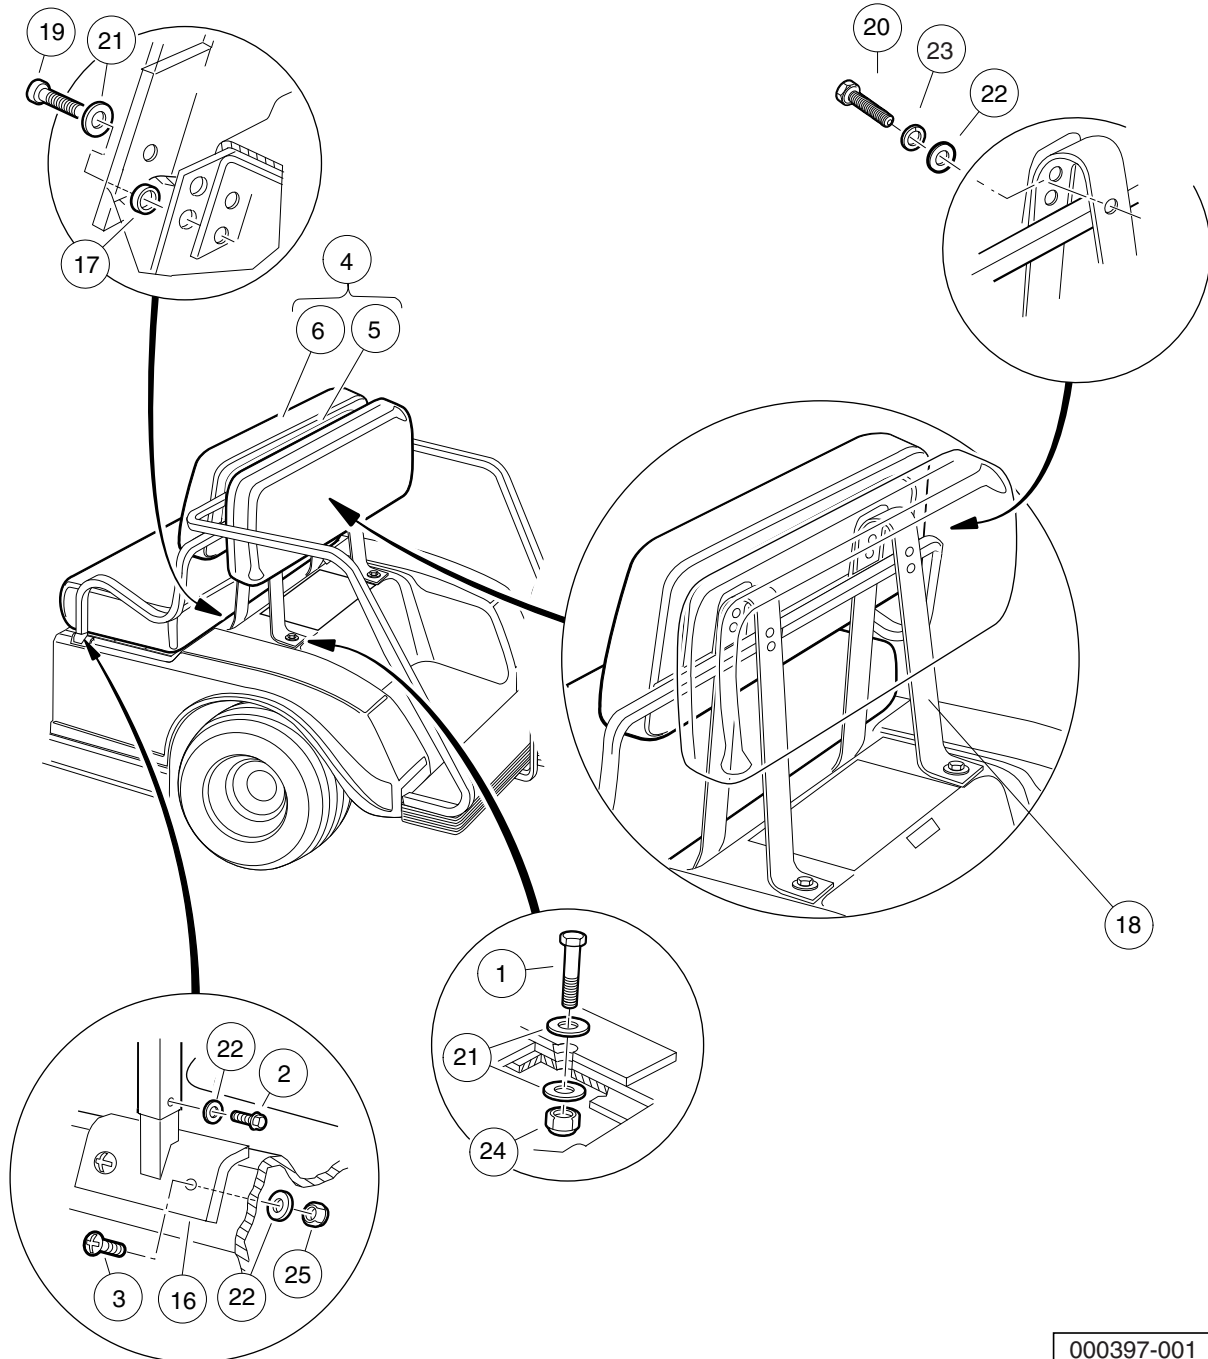

000397-001

REAR SEAT BACKS AND FORWARD-FACING ARMRESTS – VILLAGER 6 AND 8


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	2
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	10
3	<u>1015902</u>	Screw, 1/4-20 X 1.25 Truss-Head	4
4	<u>101677701</u>	Seat Back Assembly, White (includes items 5 and 6)	2
5	<u>1016751</u>	Cap, Seat Back	1
6	<u>101675512</u>	Vinyl Seat Back, White	1
7	<u>101677702</u>	Seat Back Assembly, Black (includes items 8 and 9)	2
8	<u>1016751</u>	Cap, Seat Back	1
9	<u>101675514</u>	Vinyl Seat Back, Black	1
10	<u>101677703</u>	Seat Back Assembly, Beige (includes items 11 and 12)	2
11	<u>1016751</u>	Cap, Seat Back	1
12	<u>101675511</u>	Vinyl Seat Back, Beige	1
13	<u>101677705</u>	Seat Back Assembly, Gray (includes items 14 and 15)	2
14	<u>1016751</u>	Cap, Seat Back	1
15	<u>101675515</u>	Vinyl Seat Back-nstd Svc	1
16	<u>1017310</u>	Armrest Mounting Weldment	2
17	<u>1017774</u>	Body Spacer	4
18	<u>101799201</u>	Armrest Weldment Rear	1
19	<u>101910401</u>	Screw, 5/16-18 X 1.25 Thrd Frm	4
20	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8
21	<u>1241</u>	Washer, 5/16 Type A Flat	6
22	<u>332</u>	Washer, 1/4 Type A Narrow Flat	14
23	<u>451</u>	Lockwasher, 1/4 Split	8
24	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
25	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
Note: Sub-components contained in items 7, 10, and 13 are the same as those shown for item 4, except for the vinyl seat covers.			

1
G
E

1

G


E

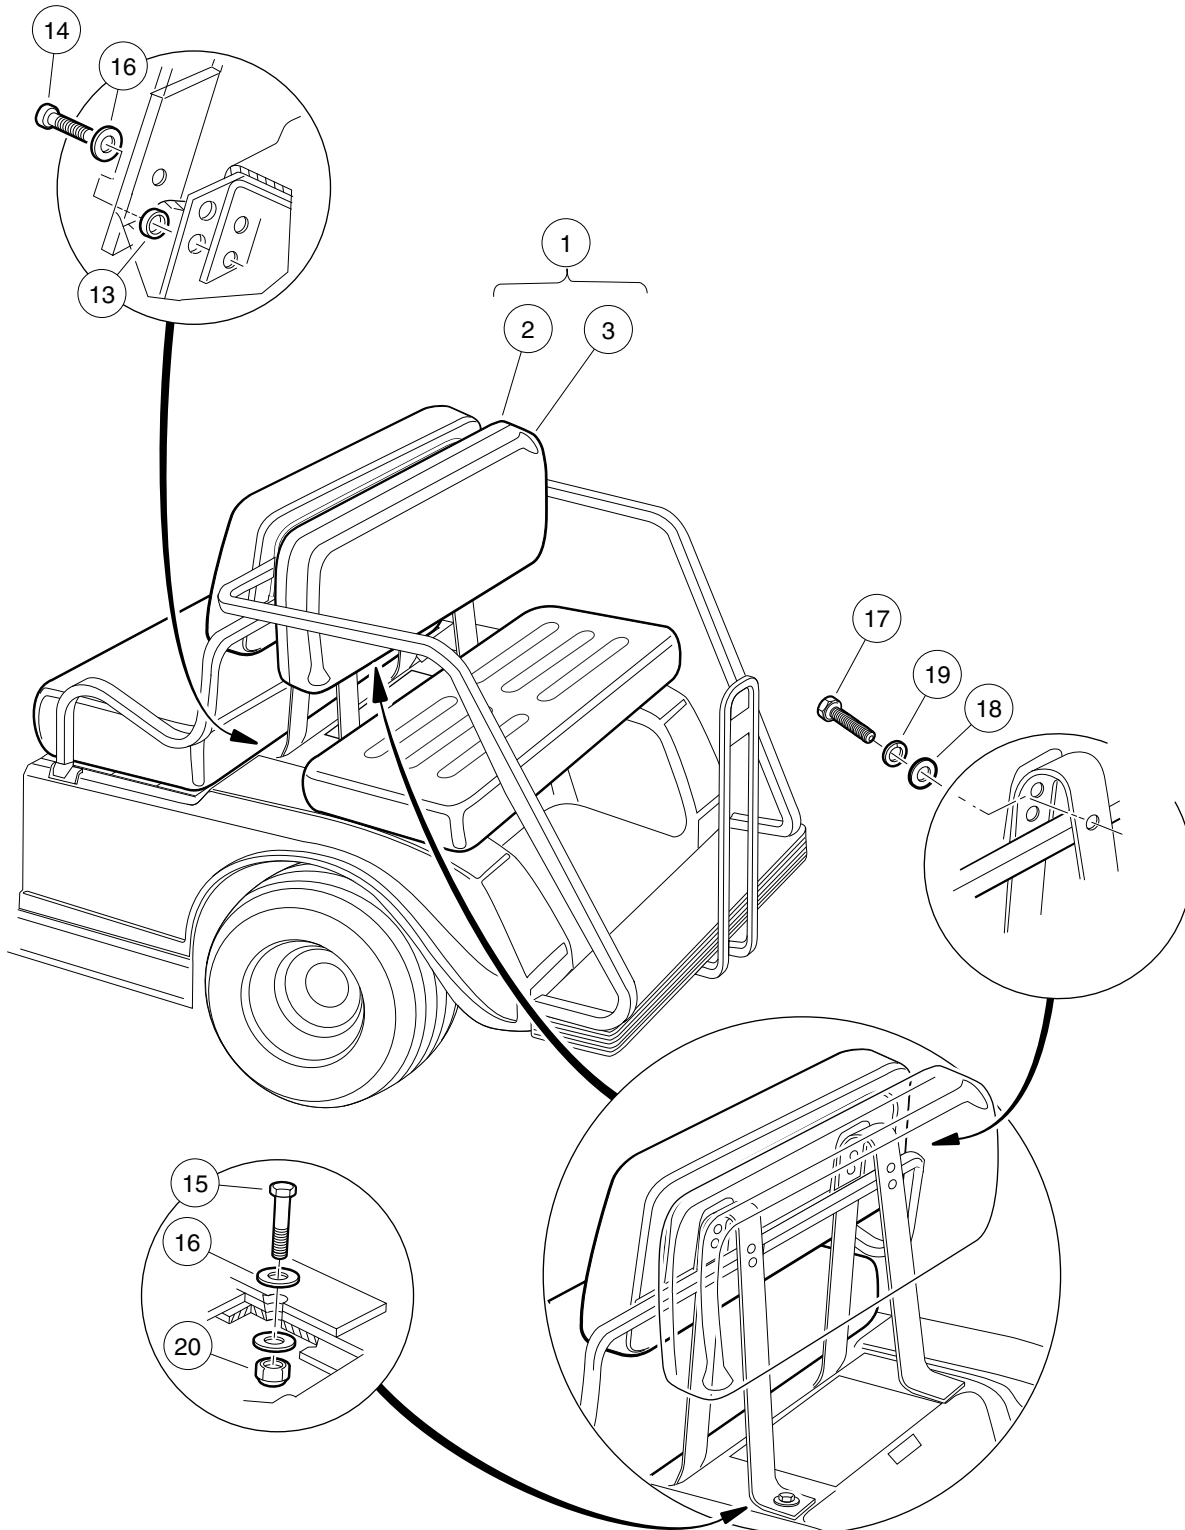

000403-001

REAR-FACING SEAT BACKS AND SUPPORTS – VILLAGER 6 AND VILLAGER 8

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>101677701</u>	Seat Back Assembly, White (includes items 2 and 3)	1	
2	1016751	Cap, Seat Back	1	
3	<u>101675512</u>	Vinyl Seat Back, White	1	
4	<u>101677702</u>	Seat Back Assembly, Black (includes items 5 and 6)	1	
5	1016751	Cap, Seat Back	1	
6	<u>101675514</u>	Vinyl Seat Back, Black	1	
7	<u>101677703</u>	Seat Back Assembly, Beige (includes items 8 and 9)	1	
8	1016751	Cap, Seat Back	1	
9	<u>101675511</u>	Vinyl Seat Back, Beige	1	
10	<u>101677705</u>	Seat Back Assembly, Gray (includes items 11 and 12)	1	
11	1016751	Cap, Seat Back	1	
12	<u>101675515</u>	Vinyl Seat Back-nstd Svc	1	
13	1017774	Body Spacer	4	
14	<u>101910401</u>	Screw, 5/16-18 X 1.25 Thrd Frm	4	
15	1218	Screw, 5/16-18 X 1.25 Hex-Head Cap	2	
16	<u>1241</u>	Washer, 5/16 Type A Flat	6	
17	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	4	
18	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4	
19	<u>451</u>	Lockwasher, 1/4 Split	4	
20	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	

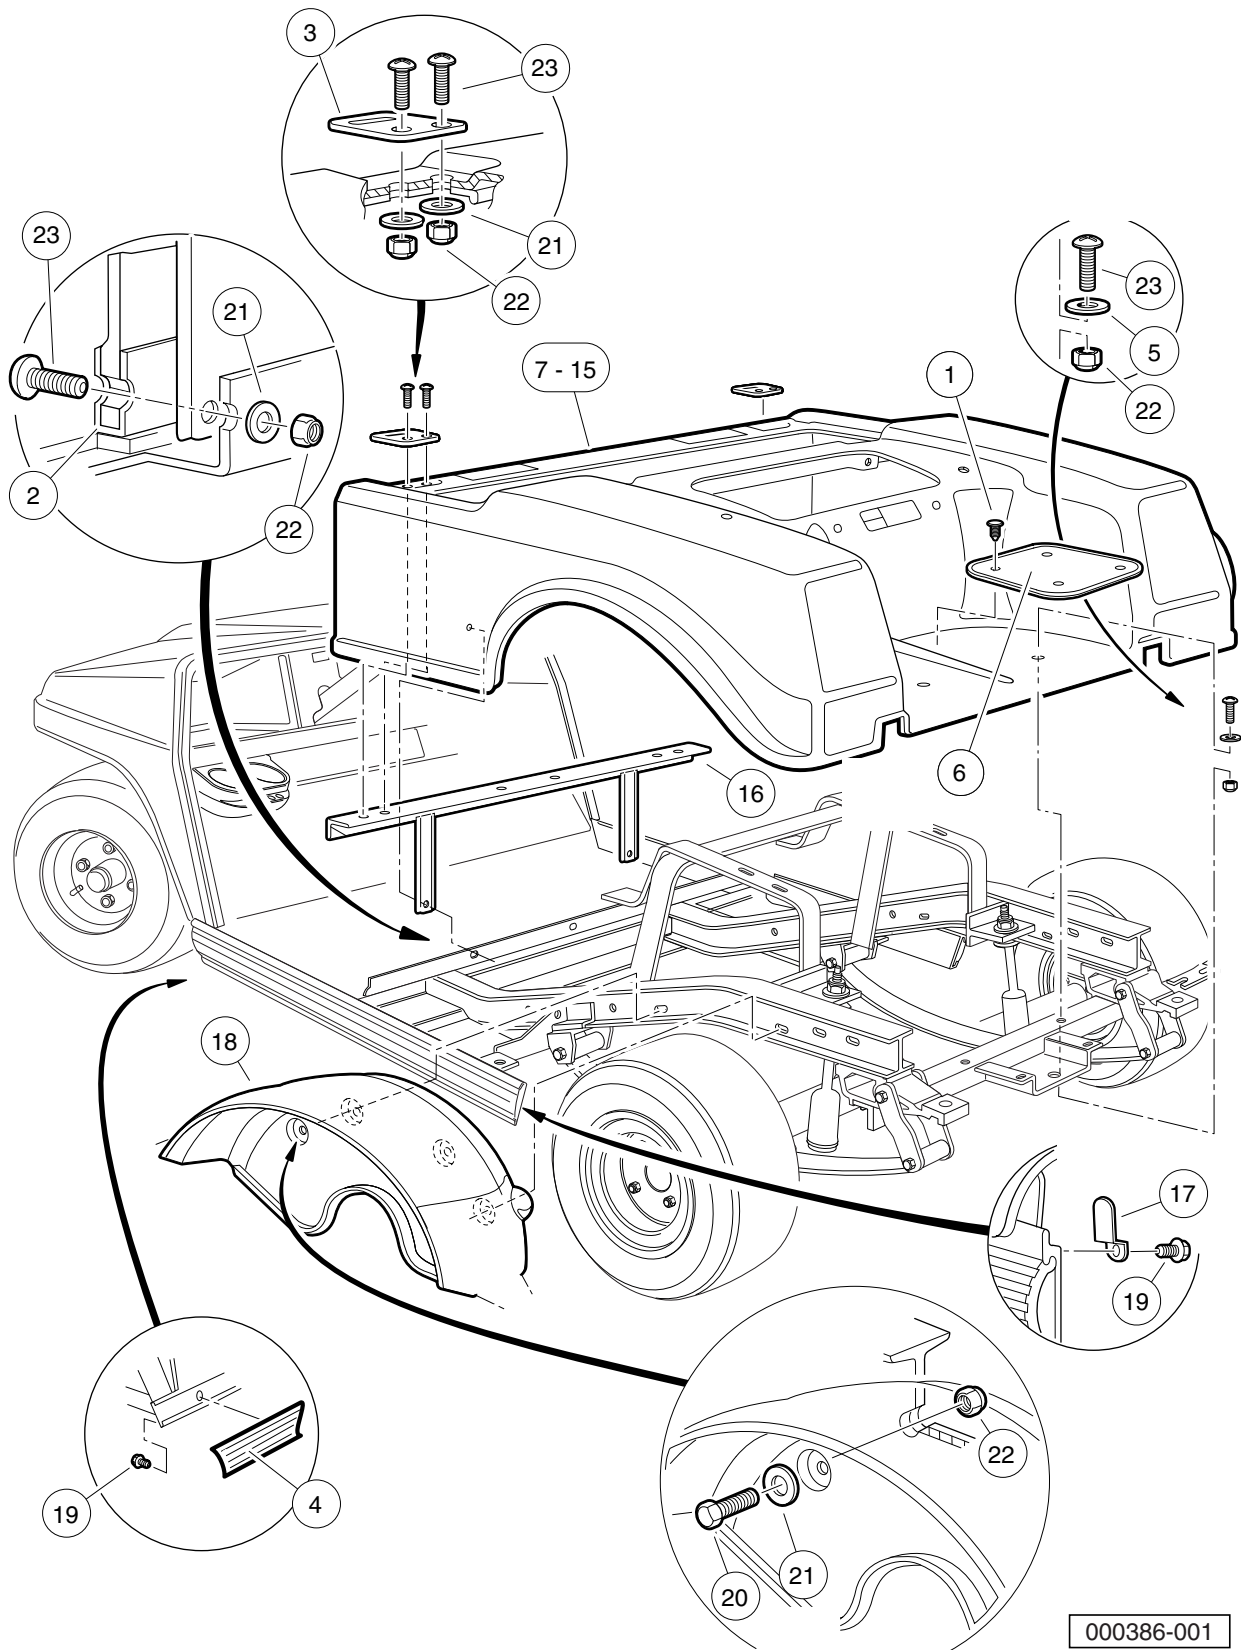1**G****E**

000386-001


REAR BODY AND FENDERS – GASOLINE DS VILLAGER 4

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010434</u>	Barrel - Plastic	8	
2	<u>1010993</u>	Body Kick Plate	1	
3	<u>1012412</u>	Body, Hinge Plate	2	
4	<u>1013983</u>	Bumper, Side Trim	2	
5	<u>1014306</u>	Washer, 1/4" Type B Flat	2	
6	<u>1014392</u>	Bag Rest Mat	2	
7	<u>101692601</u>	Body, Beige, TPO, Rear	1	
8	<u>101692602</u>	Body, White, TPO, Rear	1	
9	<u>101692604</u>	Body, Gray, TPO, Rear	1	
10	<u>101692606</u>	Body, Red, TPO, Rear	1	
11	<u>101692609</u>	Body, Pacific Blue (Royal Blue), TPO, Rear	1	
12	<u>101692610</u>	Body, Dark Green, TPO, Rear	1	
13	<u>101692611</u>	Body, Black, TPO, Rear	1	
14	<u>101692612</u>	Body, Classic Blue, (Navy) TPO, Rear	1	
15	<u>101692613</u>	Body, Burgundy, TPO, Rear	1	
16	<u>1017141</u>	Body Support Weldment	1	
17	<u>1017748</u>	Body Keeper Clip	2	
18	<u>1017936</u>	Fender, Inner	2	
19	<u>102310701</u>	Screw, #8-18 x 0.375, Hex-Head Washer	10	
20	<u>304</u>	Screw, 1/4-20 X 1.0 Hex-Head Cap	4	
21	<u>332</u>	Washer, 1/4 Type A Narrow Flat	10	
22	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	12	
23	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	8	

1

G


E

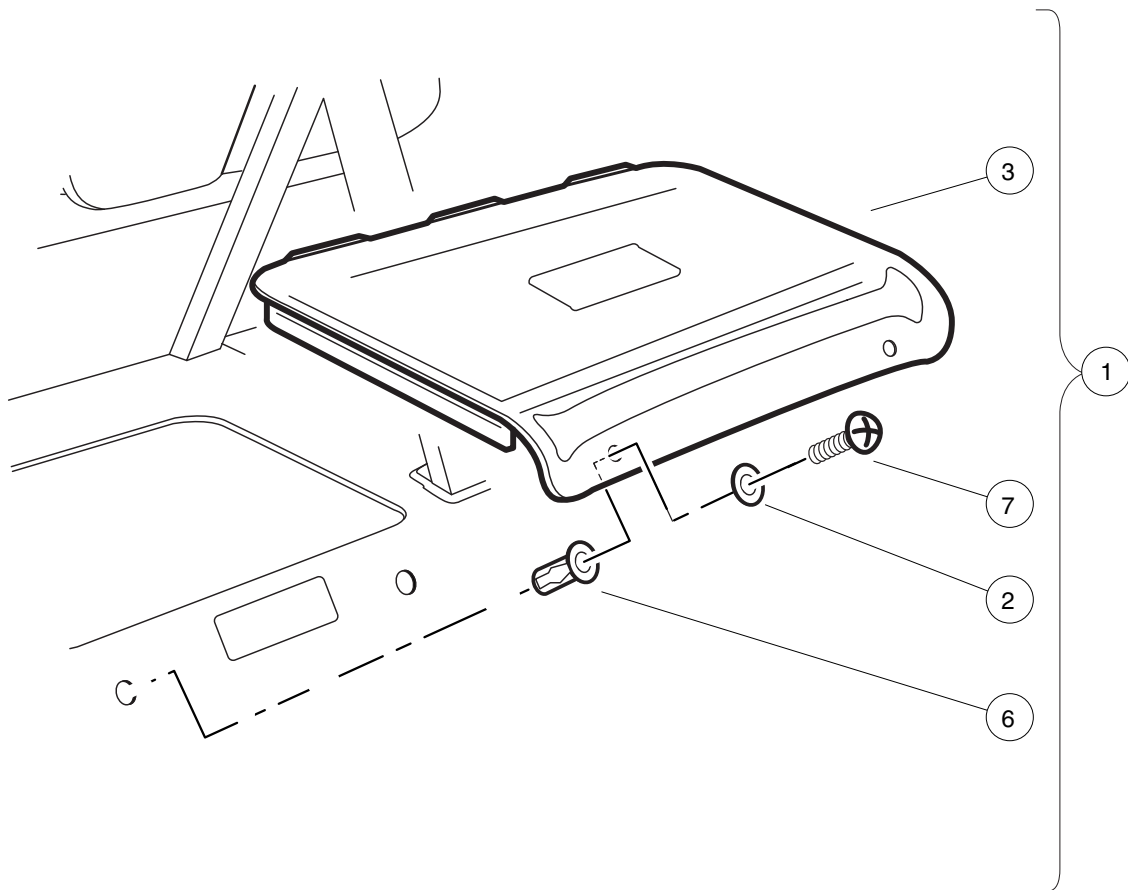

000783-001

REAR ACCESS DOOR


ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	<u>1013218</u>	Kit, Access Door Black (includes items 2 through 7)	1			
2	<u>1012581</u>	Washer, 0.609-inch OD, Nylon Cup	2			
3	<u>1013032</u>	Molded Access Door Black	1			
4	<u>1013216</u>	Plug, Button	2			
5	N/A	Instruction Sheet Access Door	1			
6	<u>1015525</u>	Nut, 1/4-20 Blind	2			
7	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	2			

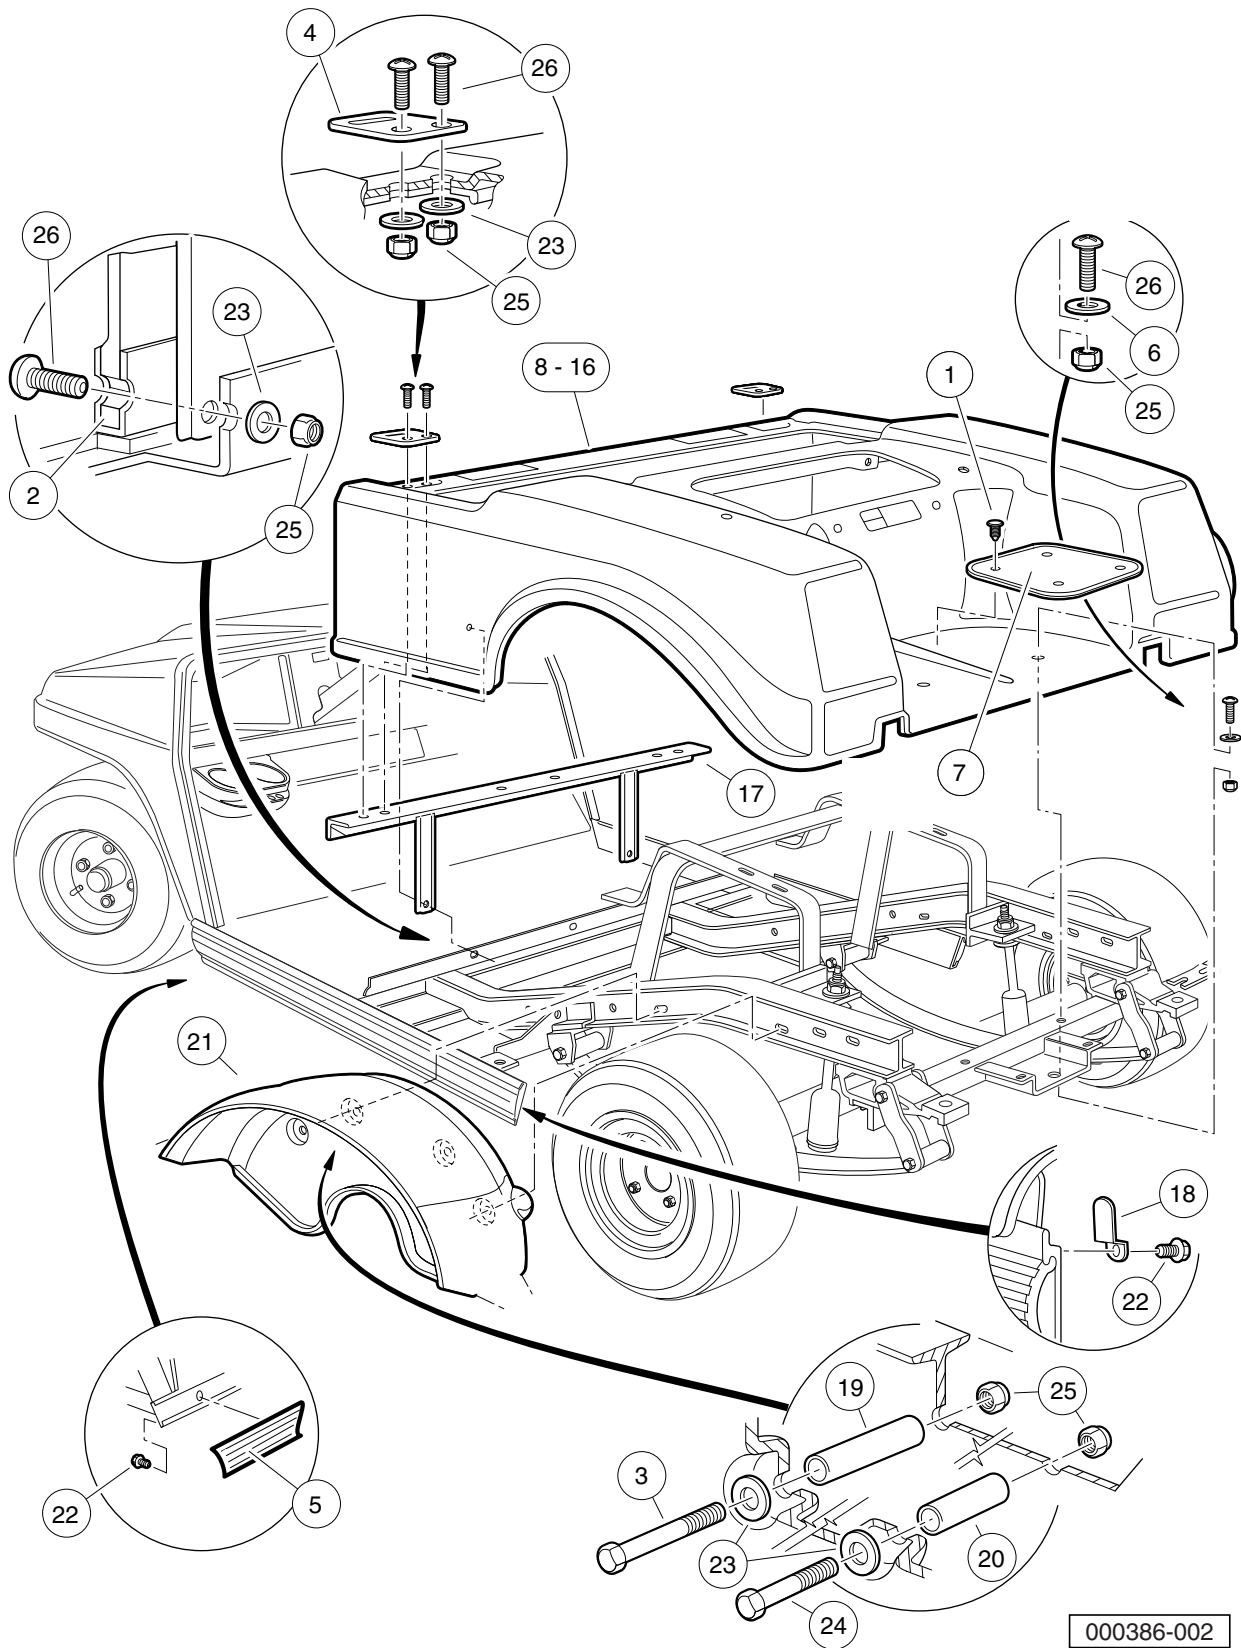1**G****E**

000386-002


REAR BODY AND FENDERS – ELECTRIC DS VILLAGER 4

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	<u>1010434</u>	Barrel - Plastic	8			
2	<u>1010993</u>	Body Kick Plate	1			
3	<u>1012159</u>	Bolt, 1/4-20 X 2.75 Hex-Head	2			
4	<u>1012412</u>	Body, Hinge Plate	2			
5	<u>1013983</u>	Bumper, Side Trim	2			
6	<u>1014306</u>	Washer, 1/4" Type B Flat	2			
7	<u>1014392</u>	Bag Rest Mat	2			
8	<u>101693301</u>	Body, Beige, TPO, Rear	1			
9	<u>101693302</u>	Body, White, TPO, Rear	1			
10	<u>101693304</u>	Body, Gray, TPO, Rear	1			
11	<u>101693306</u>	Body, Red, TPO, Rear	1			
12	<u>101693309</u>	Body, Pacific Blue (Royal Blue), TPO, Rear	1			
13	<u>101693310</u>	Body, Dark Green, TPO, Rear	1			
14	<u>101693311</u>	Body, Black, TPO, Rear	1			
15	<u>101693312</u>	Body, Classic Blue, TPO, Rear	1			
16	<u>101693313</u>	Body, Burgundy, TPO, Rear	1			
17	<u>1017141</u>	Body Support Weldment	1			
18	<u>1017748</u>	Body Keeper Clip	2			
19	<u>1017814</u>	Spacer, 1.88-inch	2			
20	<u>1017815</u>	Spacer, 0.5-inch	2			
21	<u>1017936</u>	Fender, Inner	2			
22	<u>102310701</u>	Screw, #8-18 x 0.375, Hex-Head Washer	10			
23	<u>332</u>	Washer, 1/4 Type A Narrow Flat	10			
24	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	2			
25	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	12			
26	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	8			

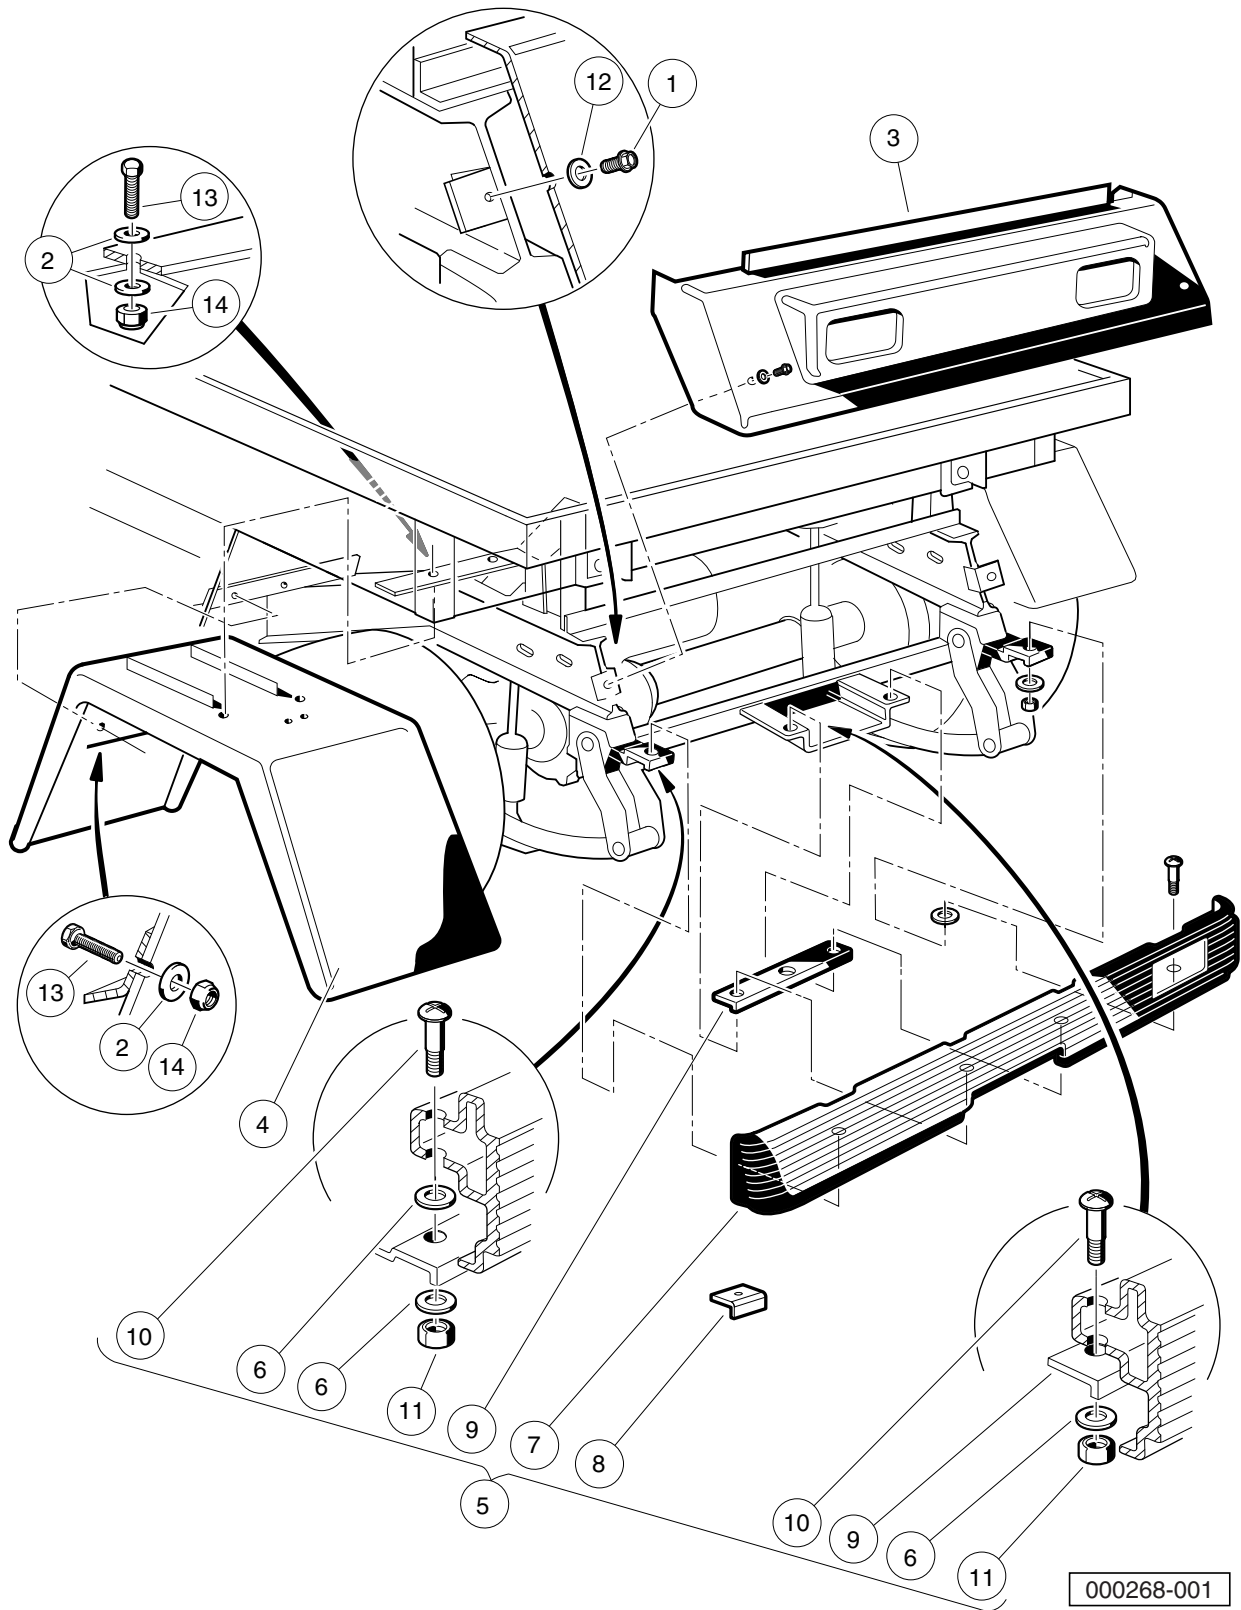1**G****E**

REAR BODY TRIM – TRANSPORTER 4 AND 6

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	2	
2	<u>1014306</u>	Washer, 1/4" Type B Flat	12	
3	<u>1015530</u>	Tailskirt	1	
4	<u>1016679</u>	Rear Fender	2	
5	<u>1017079</u>	Kit, Rear Bumper (includes items 6 through 11)	1	
6	<u>1011697</u>	Washer, 5/16 Flat	6	
7	<u>1016379</u>	Bumper, Rear	1	
8	<u>1016874</u>	Plate, Bumper Mounting, Short	2	
9	<u>1016875</u>	Plate, Bumper Mounting, Long	1	
10	<u>1016876</u>	Bolt, 3/8 Shoulder	4	
11	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4	
12	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2	
13	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
14	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	8	

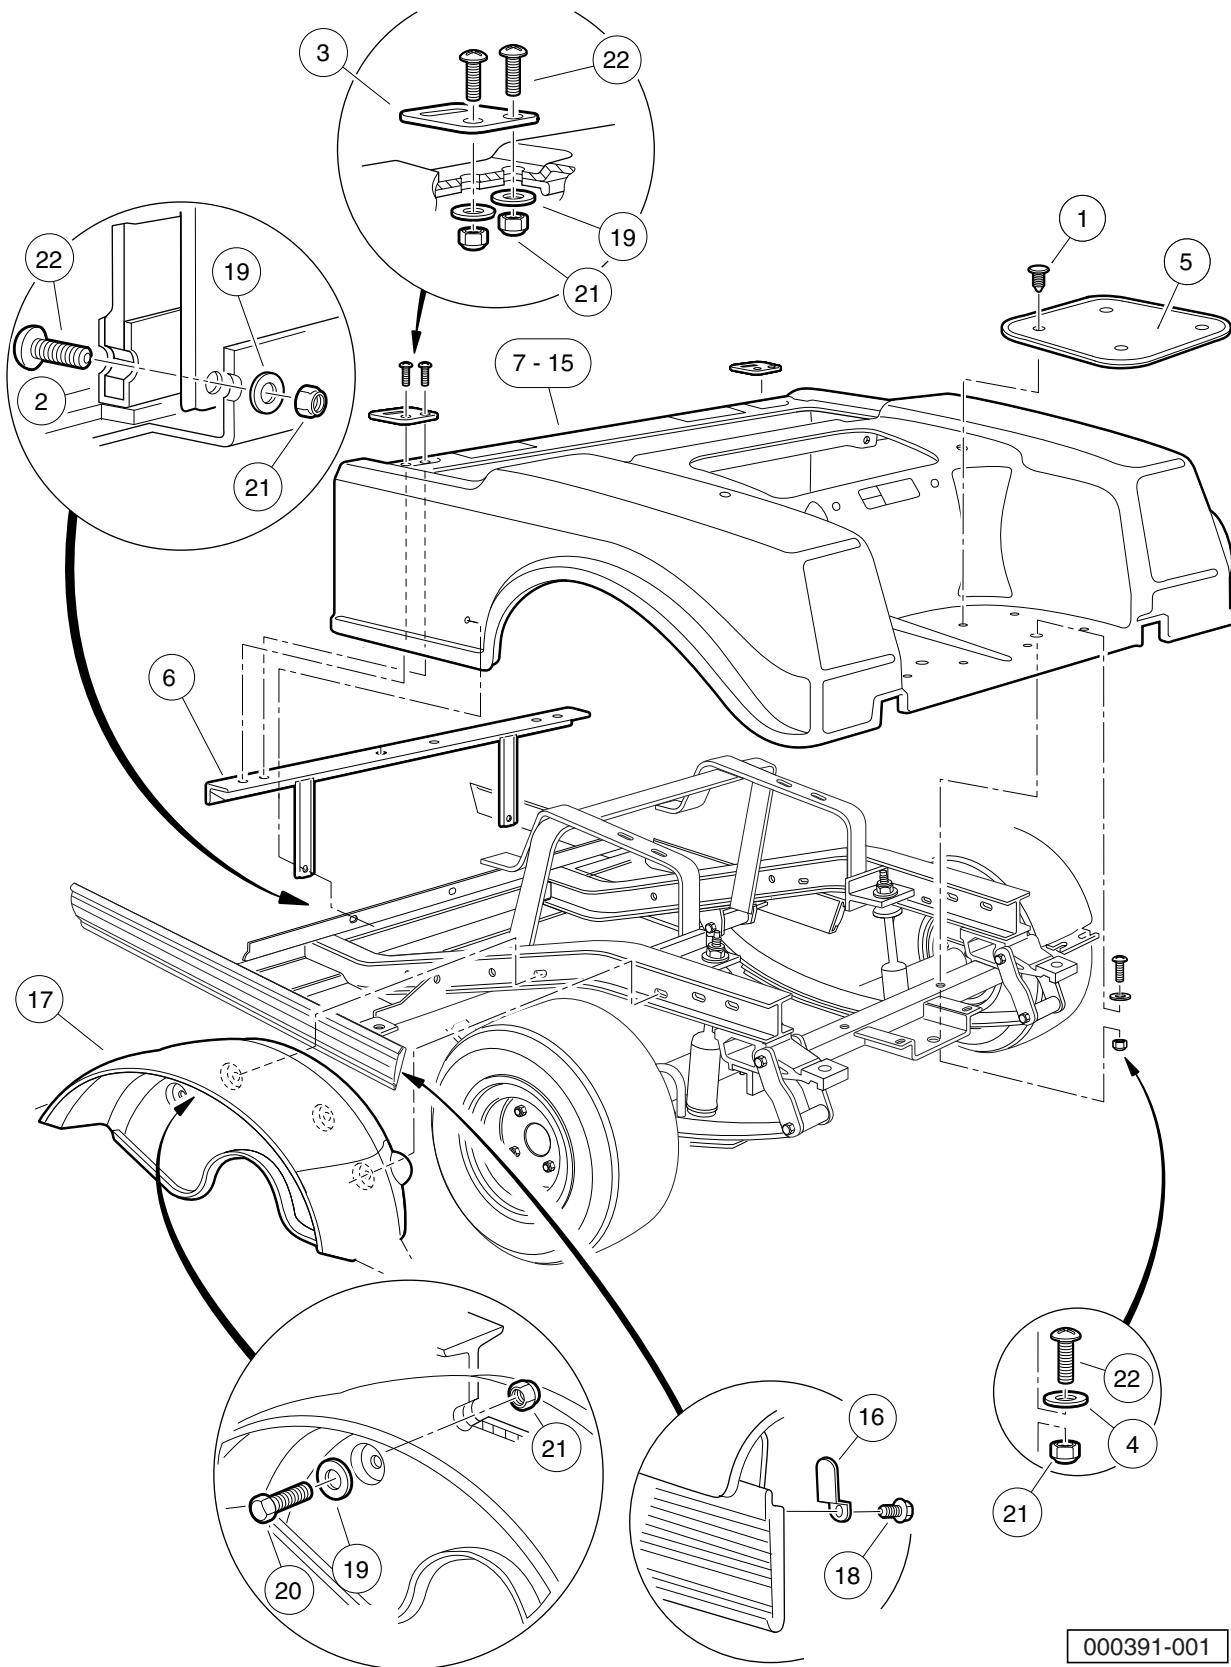1**G****E**

000391-001



REAR BODY AND FENDER – VILLAGER 6 AND 8

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010434</u>	Barrel - Plastic	8	
2	<u>1010993</u>	Body Kick Plate	1	
3	<u>1012412</u>	Body, Hinge Plate	2	
4	<u>1014306</u>	Washer, 1/4" Type B Flat	2	
5	<u>1014392</u>	Bag Rest Mat	2	
6	<u>1017141</u>	Body Support Weldment	1	
7	<u>101728701</u>	Body, Beige, TPO, Rear	1	
8	<u>101728702</u>	Body, White, TPO, Rear	1	
9	<u>101728704</u>	Body, Gray, TPO, Rear	1	
10	<u>101728706</u>	Body, Red, TPO, Rear	1	
11	<u>101728708</u>	Body, Royal Blue, TPO, Rear	1	
12	<u>101728709</u>	Body, Dark Green, TPO, Rear	1	
13	<u>101728710</u>	Body, Black, TPO, Rear	1	
14	<u>101728711</u>	Body, Classic Blue, TPO, Rear	1	
15	<u>101728712</u>	Body, Burgundy, TPO, Rear	1	
16	<u>1017748</u>	Body Keeper Clip	2	
17	<u>1017936</u>	Fender, Inner	2	
18	<u>102310701</u>	Screw, #8-18 x 0.375, Hex-Head Washer	2	
19	<u>332</u>	Washer, 1/4 Type A Narrow Flat	10	
20	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4	
21	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	12	
22	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	8	

1

G

E

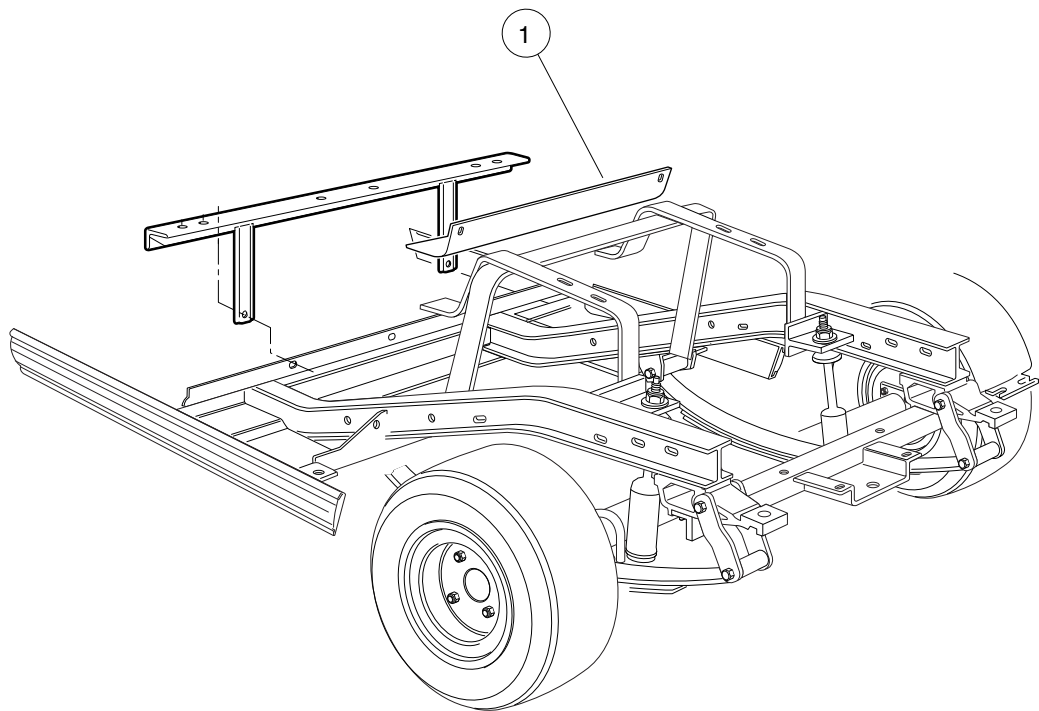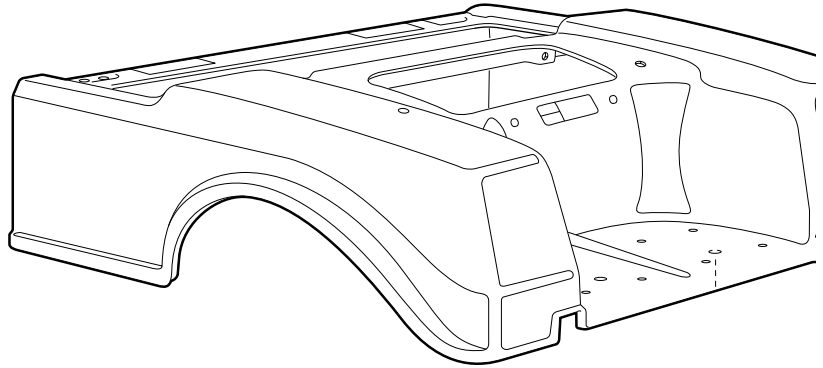

[



HEAT SHIELD – GASOLINE VILLAGER 6 AND 8

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	<u>101806901</u>	1 2 3 4 Shield, Heat	1	

1

G

E

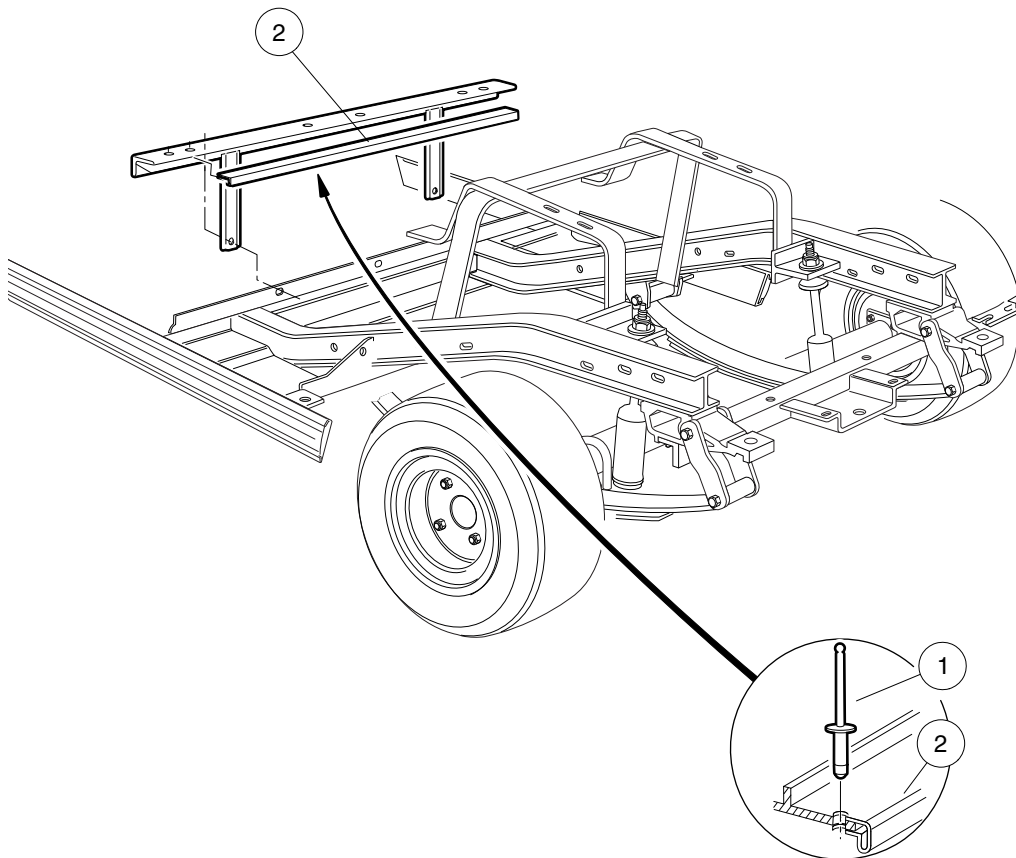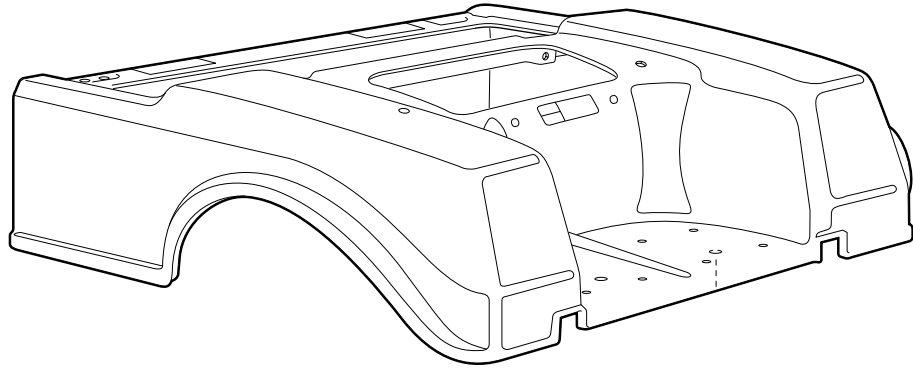

000393-001


BATTERY INSULATOR – ELECTRIC VILLAGER 6 AND 8

ITEM	PART NO.	DESCRIPTION	QTY	1
1	<u>1013357</u>	1 2 3 4 Rivet, 5/32 Aluminum Pop	2	G
2	<u>101837001</u>	Battery Insulator	1	E

1

G


E

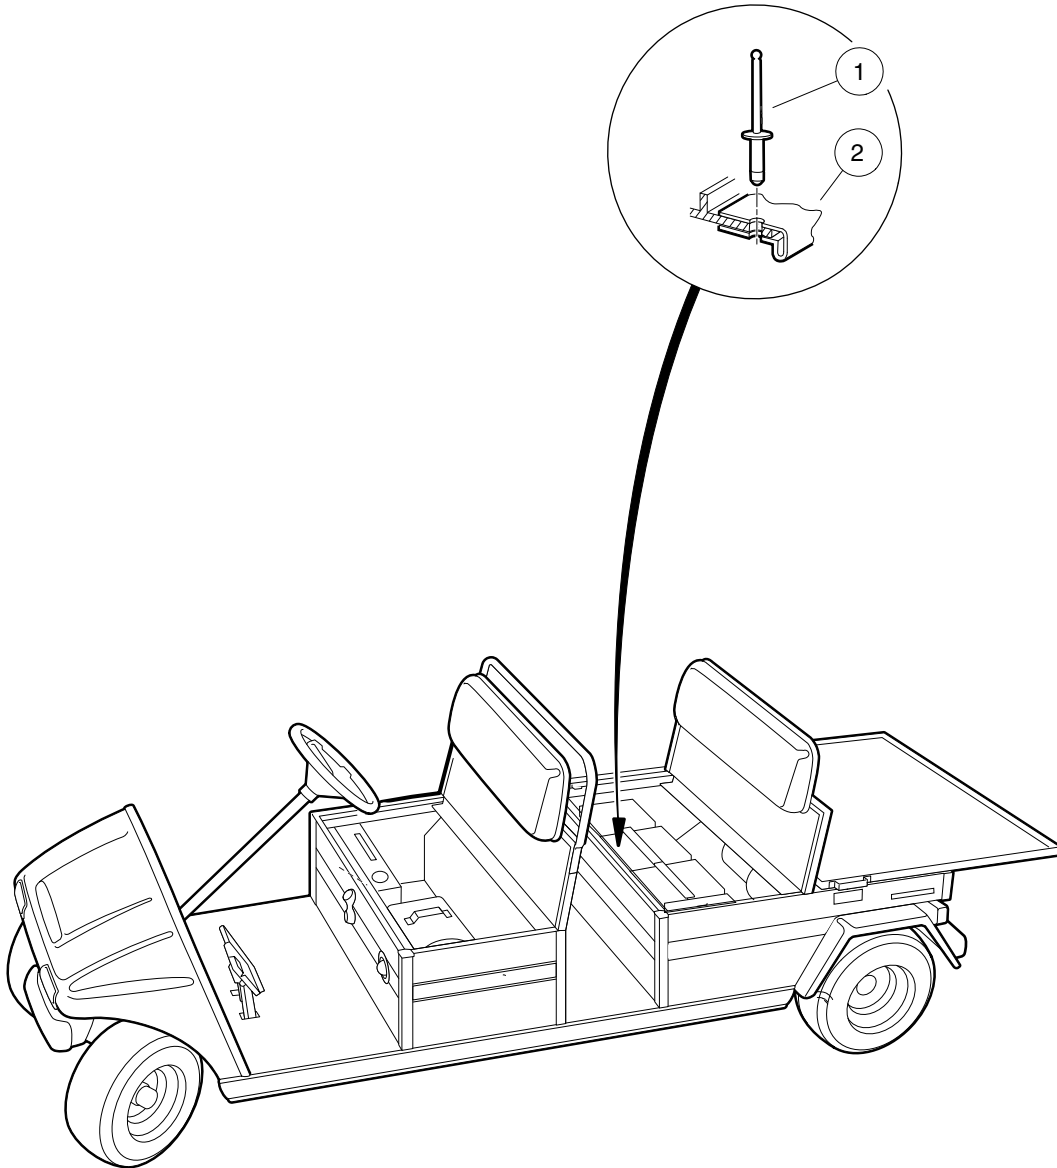

000400-001


BATTERY INSULATOR – ELECTRIC TRANSPORTER VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	1
1	<u>1013357</u>	1 2 3 4 Rivet, 5/32 Aluminum Pop	2	G
2	<u>101837001</u>	Battery Insulator	1	E

 

REAR CARGO BED – TRANSPORTER 4

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010878</u>	Bumper, Rubber	2	
2	<u>1012303</u>	Bushing, Steel	2	
3	<u>1013872</u>	Bolt, 1/4-20 X 4.00 Hex Head	2	
4	<u>1015507</u>	Shim, Tilt Bed Pivot	1	
5	<u>1015583</u>	Bushing, Urethane	4	
6	<u>1016724</u>	Flat Bed Assembly (includes items 7 through 12)	1	
7	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	2	
8	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4" *	1	
9	N/A	Plate, Floor, Carryall 1 Flat bed	1	
10	N/A	Frame Assembly, Tilt Bed	1	
11	1015399	Screw, 5/16-18 X 0.88 Torx Truss-Head	4	
12	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	6	
13	<u>1017976</u>	Bed Seal	1	
14	<u>103538701</u>	Extra, Bracket, Hinge, Bed	2	
15	<u>103538901</u>	3/8-16 X 3.5 Carr Blt Gr5 Zn	4	
16	<u>332</u>	Washer, 1/4 Type A Narrow Flat	6	
17	7532	Rivet, 3/16 X 0.3125, Pop	4	
18	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4	
19	<u>8754</u>	Locknut, 3/8-16 Hex	6	
20	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2	
* Note: Item not shown.				

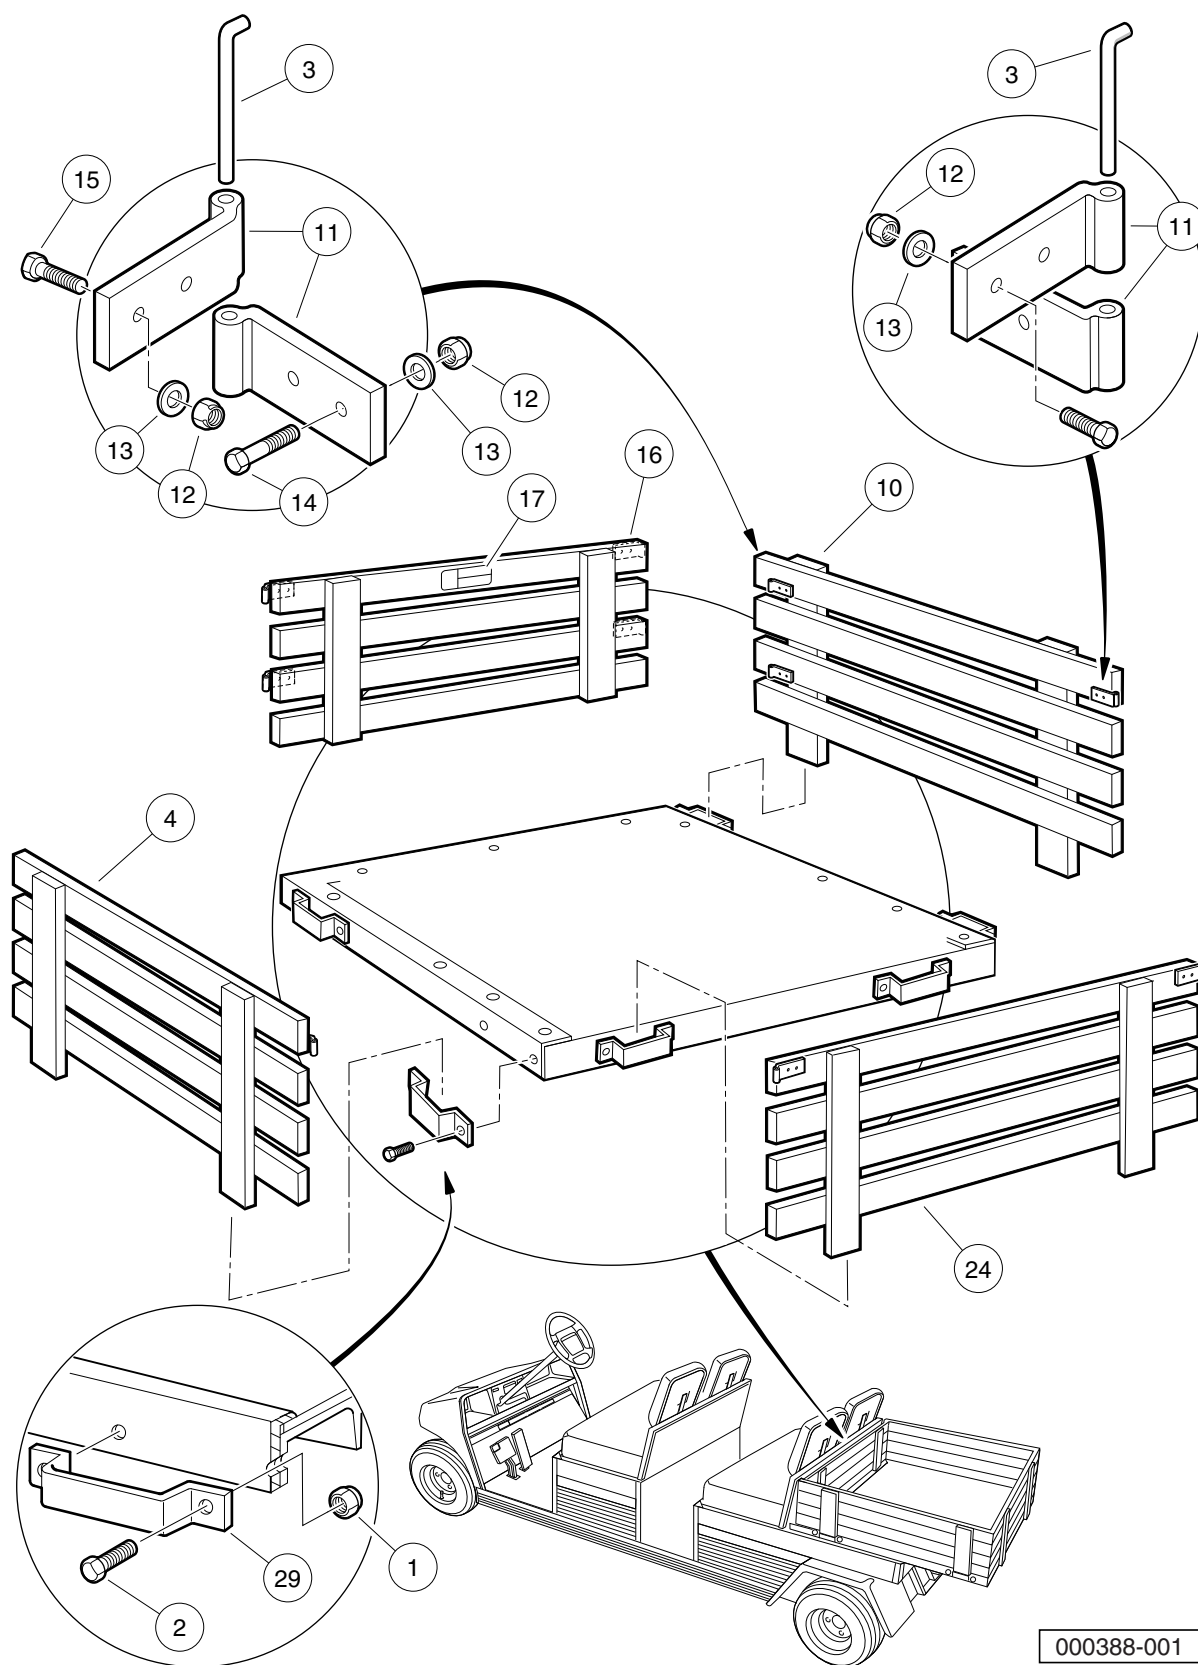

STAKE SIDE – TRANSPORTER 4


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015660</u>	Stake Side Kit (includes items 2 through 29)	1
2	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	12
3	<u>1015656</u>	Pin, hinge	6
4	101565701	Stake Side, Driver-Side (includes items 5 through 9)	1
5	<u>1015654</u>	Stake Side Hinge	3
6	<u>1108</u>	Locknut, 1/4-20 Dimpled	6
7	<u>332</u>	Washer, 1/4 Type A Narrow Flat	19
8	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	3
9	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	3
10	101565702	Stake Side, Passenger-Side (includes items 11 through 15)	1
11	<u>1015654</u>	Stake Side Hinge	3
12	<u>1108</u>	Locknut, 1/4-20 Dimpled	6
13	<u>332</u>	Washer, 1/4 Type A Narrow Flat	19
14	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	3
15	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	3
16	101565703	Stake Side, Front (includes items 17 through 23)	1
17	<u>101553901</u>	Decal, Bed Load Warning	1
18	<u>1015654</u>	Stake Side Hinge	4
19	<u>1016663</u>	Screw, #12-14 X 0.625	2
20	N/A	Plate, Bed Load Decal	1
21	<u>1108</u>	Locknut, 1/4-20 Dimpled	8
22	<u>332</u>	Washer, 1/4 Type A Narrow Flat	24
23	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	8
24	101565704	Stake Side, Rear (includes items 25 through 28)	1
25	<u>1015654</u>	Stake Side Hinge	2
26	<u>1108</u>	Locknut, 1/4-20 Dimpled	4
27	<u>332</u>	Washer, 1/4 Type A Narrow Flat	20
28	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	4
29	<u>1016077</u>	Bracket, Stake Side	6

Note: Items 19 and 20 are not shown.

1


G

E

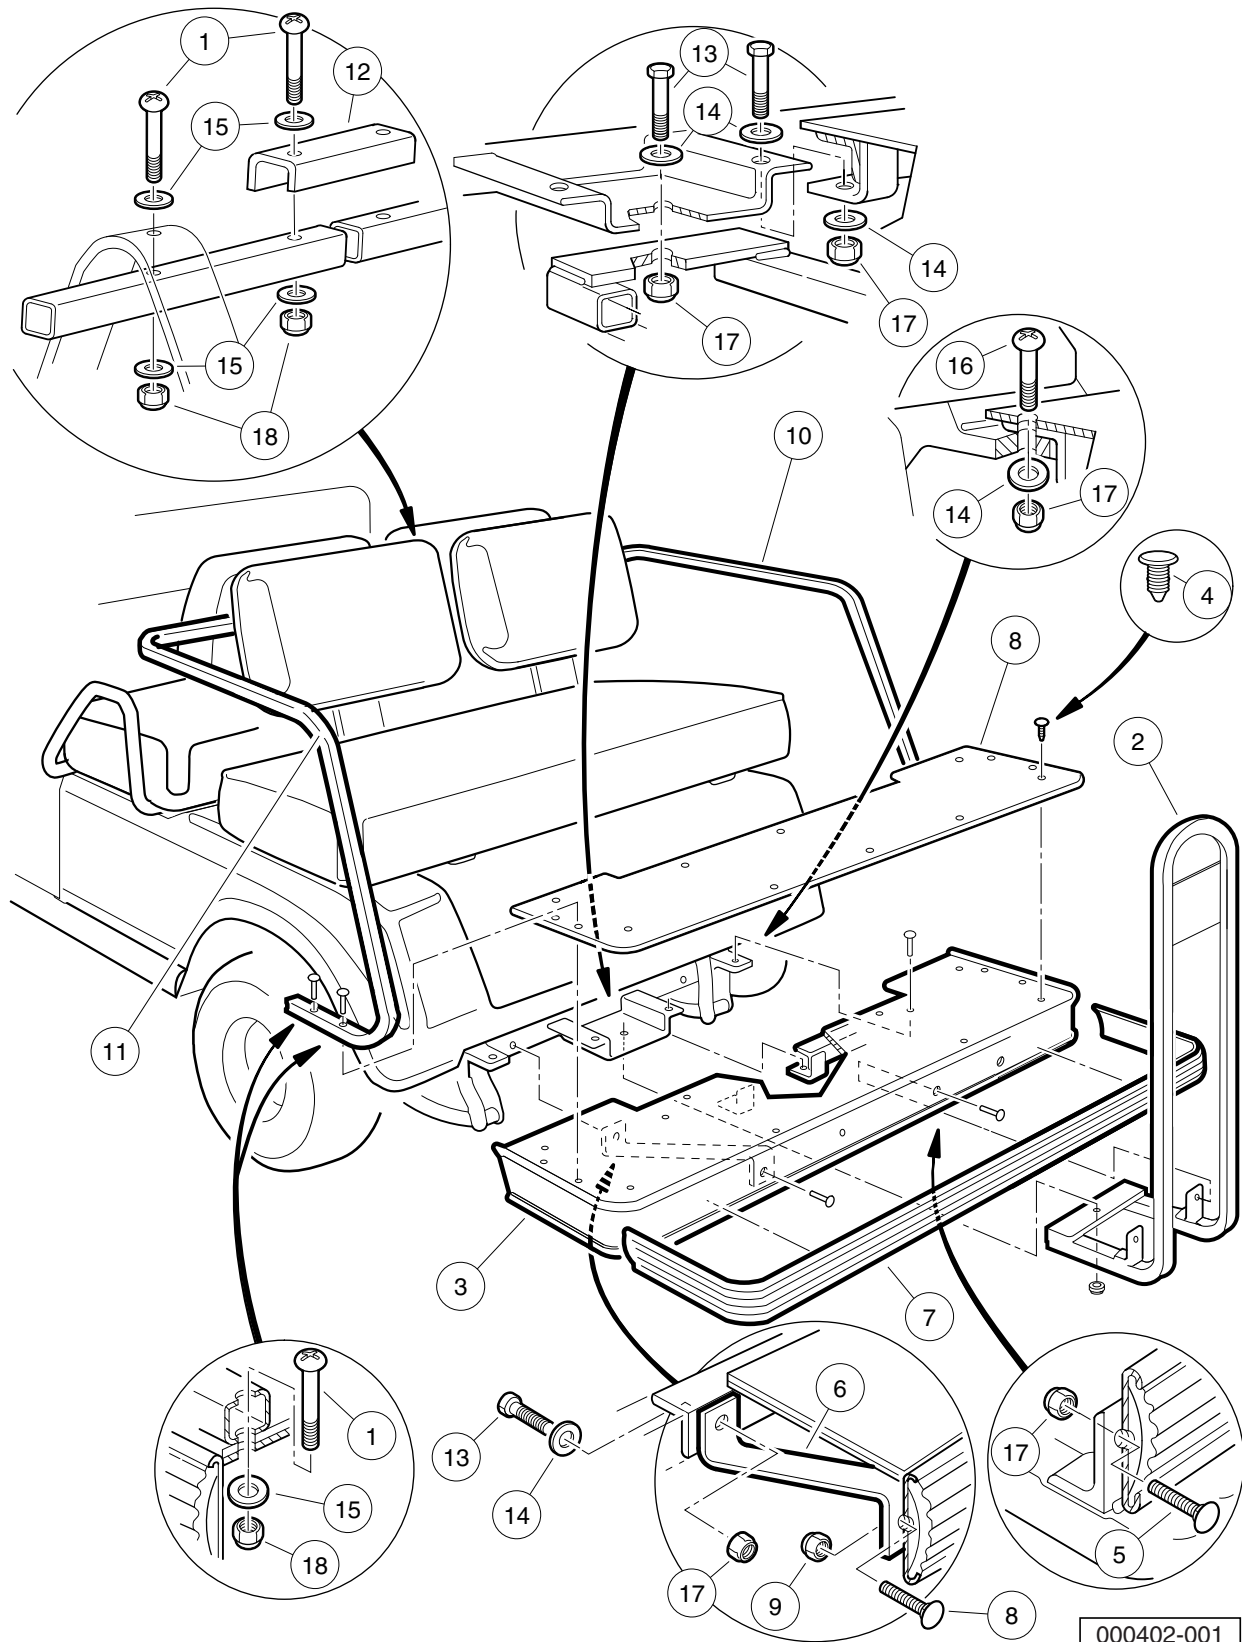1**G****E**

REAR FOOTREST AND HANDRAILS – DS VILLAGER 4, VILLAGER 6, AND VILLAGER 8

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1011988</u>	Screw, 1/4-20 X 2.00 Phillips Truss-Head	8	
2	<u>1016842</u>	Rear Seat Handrail Weldment	1	
3	<u>101841101</u>	Rear Foot Rest Asm (includes items 4 through 9)	1	
4	<u>1010434</u>	Barrel - Plastic	8	
5	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	4	
6	<u>1016668</u>	Connecting Bar	2	
7	<u>1016835</u>	Bumper, Side Trim	1	
8	<u>101840901</u>	Foot Rest Mat	1	
9	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	
10	<u>101841201</u>	Armrest, Seat, Rear, Right-Hand	1	
11	<u>101841202</u>	Armrest, Seat, Rear, Left-Hand	1	
12	<u>101841301</u>	Armrest Bracket	1	
13	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	5	
14	<u>1241</u>	Washer, 5/16 Type A Flat	9	
15	<u>332</u>	Washer, 1/4 Type A Narrow Flat	8	
16	<u>7410</u>	Screw, 5/16-18 X 1.25 Truss Hd	2	
17	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	9	
18	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	8	

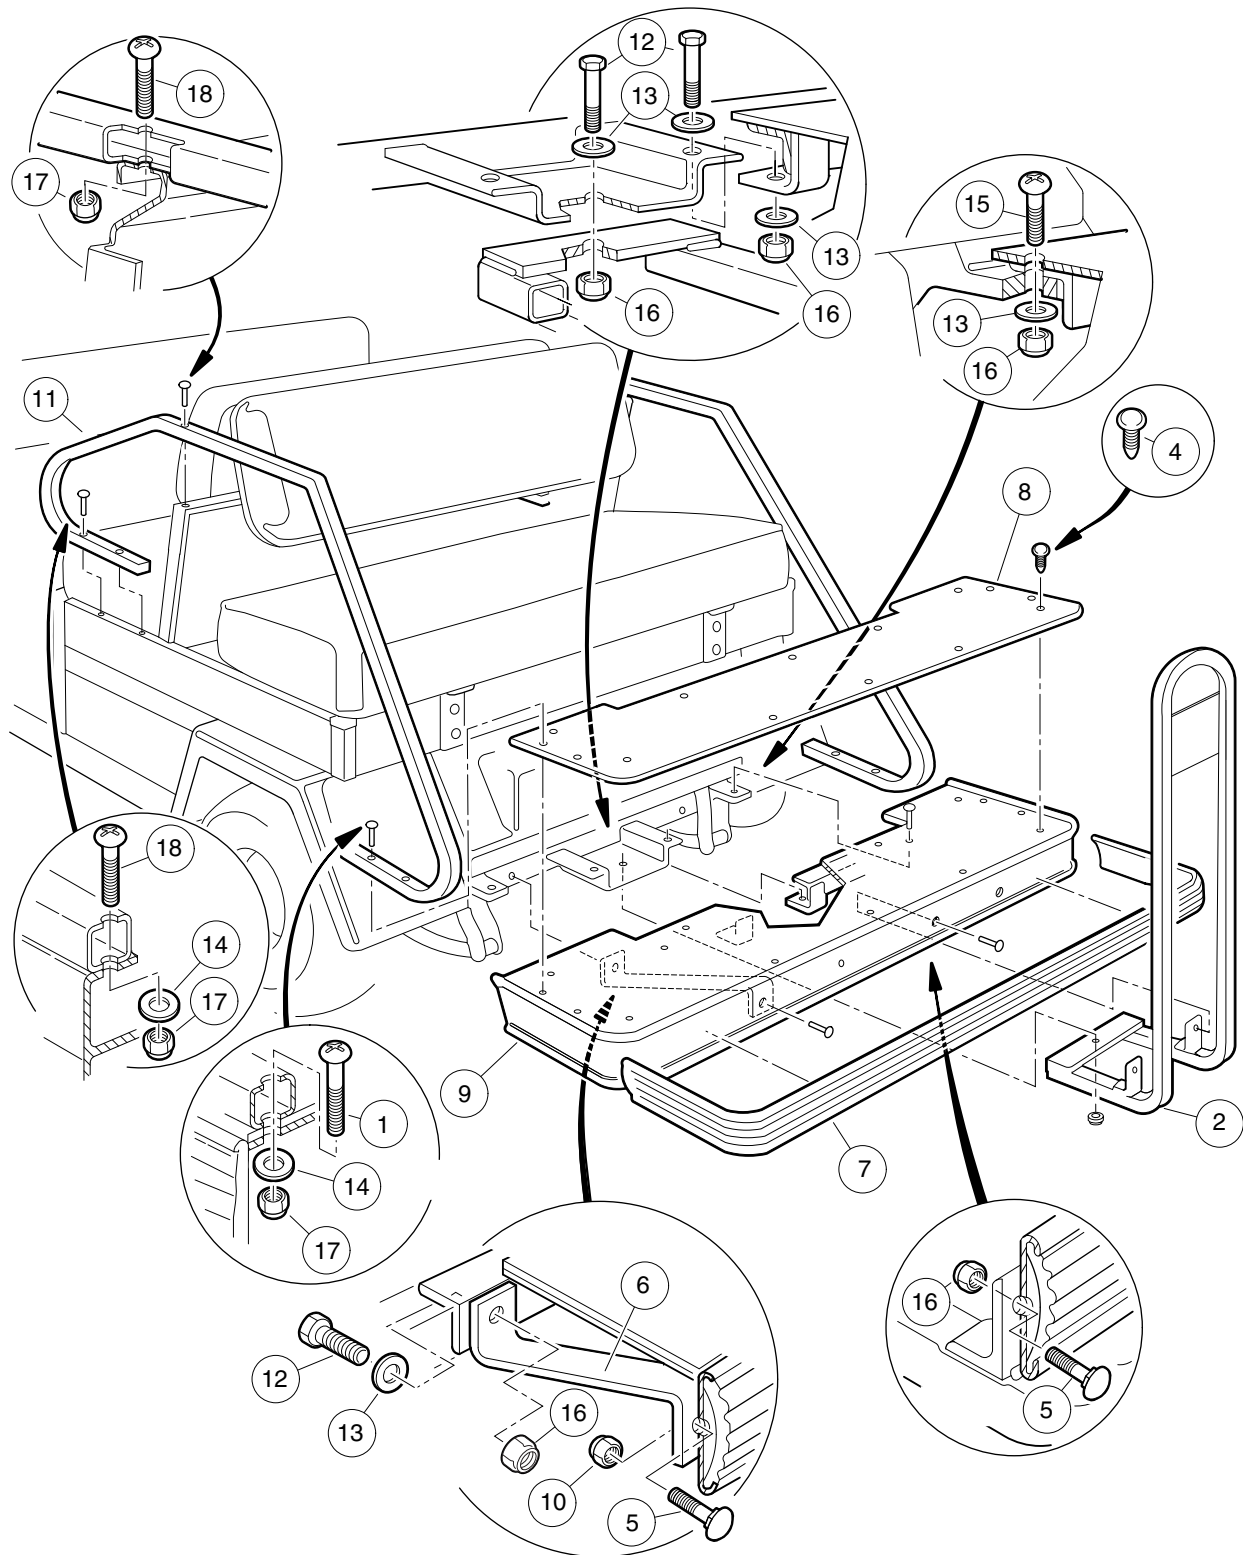1**G****E**

000405-001

REAR FOOTREST AND HANDRAILS – TRANSPORTER 6

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1011988</u>	Screw, 1/4-20 X 2.00 Phillips Truss-Head	4	
2	<u>1016842</u>	Rear Seat Handrail Weldment	1	
3	<u>1016843</u>	Rear Footrest Assembly (includes items 4 through 10)	1	
4	<u>1010434</u>	Barrel - Plastic	10	
5	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	4	
6	<u>1016668</u>	Connecting Bar	2	
7	<u>1016835</u>	Bumper, Side Trim	1	
8	****	Foot Rest Mat	1	
9	N/A	Rear Footrest Weldment	1	
10	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	
11	<u>101846301</u>	Rear Seat Armrest/Hip Restraint	2	
12	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	5	
13	<u>1241</u>	Washer, 5/16 Type A Flat	9	
14	<u>332</u>	Washer, 1/4 Type A Narrow Flat	8	
15	<u>7410</u>	Screw, 5/16-18 X 1.25 Truss Hd	2	
16	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	8	
17	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	9	
18	<u>8418</u>	Screw, 1/4-20 X 1.50 Phillips Truss-Head	6	
**** Special order item available upon request.				

1

G


E

WHEELS AND TIRES

2

G


E

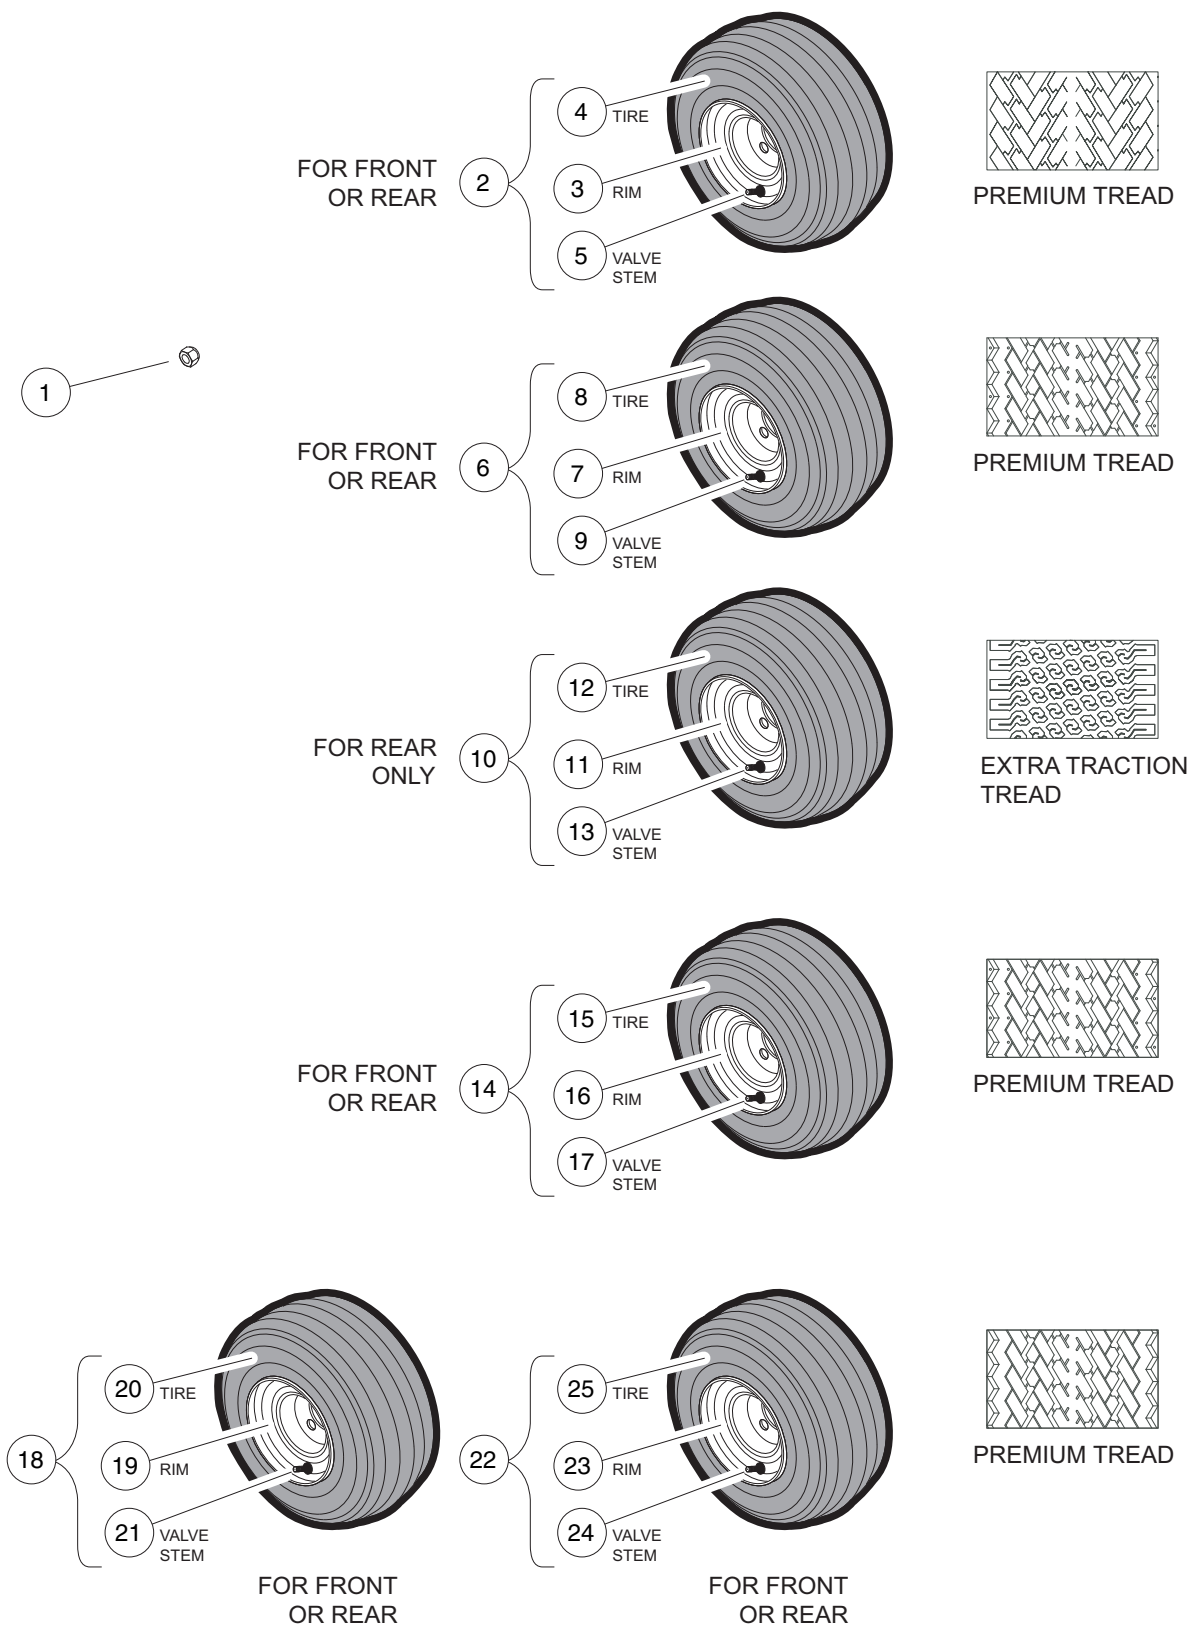

000269-001

WHEELS AND TIRES (WHITE RIMS) – VILLAGER 4

ITEM	PART NO.	DESCRIPTION	QTY	2	G	E
		1 2 3 4				
1	<u>1010984</u>	.500-20 Unf Lug Nut	16			
2	<u>101651402</u>	Tire/Wheel Asm, White, Premium Tread (includes items 3 through 5)	4			
3	<u>1014771</u>	Wheel Rim, White	1			
4	<u>101567202</u>	Tire, Unmounted, Links 18 x 8.50-8	1			
5	<u>7310</u>	Valve Stem	1			
6	<u>101651406</u>	Tire/Wheel Asm, White, Premium Tread, 6-Ply (includes items 7 through 9)	4			
7	<u>1014771</u>	Wheel Rim, White	1			
8	<u>101737002</u>	Tire, Unmounted	1			
9	<u>7310</u>	Valve Stem	1			
10	<u>101651407</u>	Tire/Wheel Asm, White, Extra-Traction, 6-Ply (includes items 11 through 13)	2			
11	<u>1014771</u>	Wheel Rim, White	1			
12	N/A	Tire, Unmounted Xtrac 18 x 8.50-8	1			
13	<u>7310</u>	Valve Stem	1			
14	<u>101651409</u>	Tire/Wheel Asm, White, Premium Tread, 6.5-inch (includes items 15 through 17)	4			
15	<u>101884901</u>	Tire, Unmounted, Power Rib 18 x 6.50-8	1			
16	<u>101918401</u>	Wheel Rim, Beige	1			
17	<u>7310</u>	Valve Stem	1			
18	<u>101651412</u>	Tire/Wheel Asm, White, Duro Premium Tread (includes items 19 through 21)	4			
19	<u>1014771</u>	Wheel Rim, White	1			
20	<u>102569304</u>	Duro 18 X 8.5 X 8, 4-Ply	1			
21	<u>7310</u>	Valve Stem	1			
22	<u>101651413</u>	Tire/Wheel Asm, White, Kenda Premium Tread (includes items 23 through 25)	4			
23	<u>1014771</u>	Wheel Rim, White	1			
24	<u>7310</u>	Valve Stem	1			
25	<u>AM10682</u>	Unmounted Prem Tire 18x8.50x8	1			

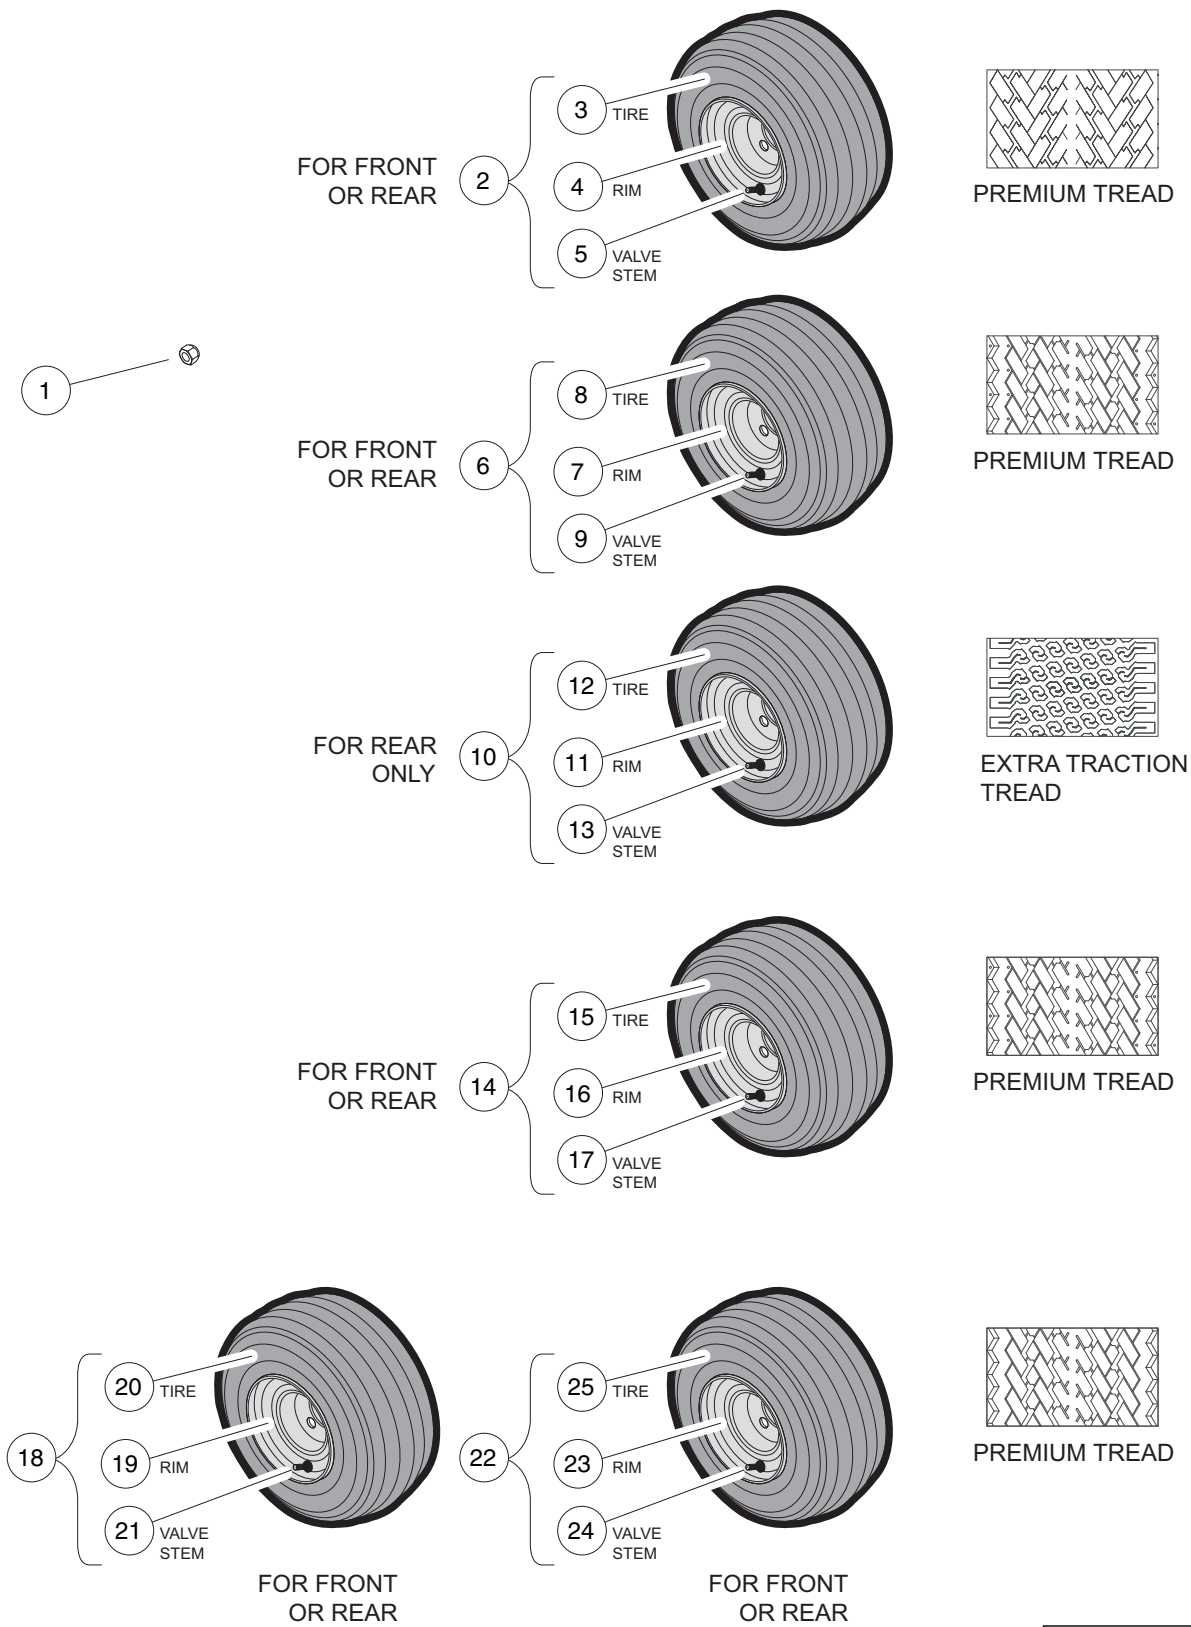

000269-006

WHEELS AND TIRES (BEIGE RIMS) – VILLAGER 4




ITEM	PART NO.	DESCRIPTION	QTY	2 G E
		1 2 3 4		
1	<u>1010984</u>	.500-20 Unf Lug Nut	16	
2	<u>101570502</u>	Tire/Wheel Asm, Beige, Premium Tread (includes items 3 through 5)	4	
3	<u>101567202</u>	Tire, Unmounted, Links 18 x 8.50-8	1	
4	<u>1015707</u>	Wheel Rim, Beige	1	
5	<u>7310</u>	Valve Stem	1	
6	<u>101570506</u>	Tire/Wheel Asm, Beige, Premium Tread, 6-ply (includes items 7 through 9)	4	
7	<u>1015707</u>	Wheel Rim, Beige	1	
8	<u>101737002</u>	Tire, Unmounted	1	
9	<u>7310</u>	Valve Stem	1	
10	<u>101570507</u>	Tire/Wheel Asm, Beige, Xtrac Tread, 6-ply (includes items 11 through 13)	4	
11	<u>1015707</u>	Wheel Rim, Beige	1	
12	N/A	Tire, Unmounted Xtrac 18 x 8.50-8	1	
13	<u>7310</u>	Valve Stem	1	
14	<u>101570509</u>	Tire/Wheel Asm, Beige, Premium Tread, 6.5 (includes items 15 through 17)	4	
15	<u>101884901</u>	Tire, Unmounted, Power Rib 18 x 6.50-8	1	
16	<u>101918401</u>	Wheel Rim, Beige	1	
17	<u>7310</u>	Valve Stem	1	
18	<u>101570512</u>	Tire/Wheel Asm, Beige, Duro Premium Tread (includes items 19 through 21)	4	
19	<u>1015707</u>	Wheel Rim, Beige	1	
20	<u>102569304</u>	Duro 18 X 8.5 X 8, 4-Ply	1	
21	<u>7310</u>	Valve Stem	1	
22	<u>101570513</u>	Tire/Wheel Asm, Beige, Kenda Premium Tread (includes items 23 through 25)	4	
23	<u>1015707</u>	Wheel Rim, Beige	1	
24	<u>7310</u>	Valve Stem	1	
25	<u>AM10682</u>	Unmounted Prem Tire 18x8.50x8	1	



FOR FRONT OR REAR

BEIGE RIMS

 WHITE RIMS

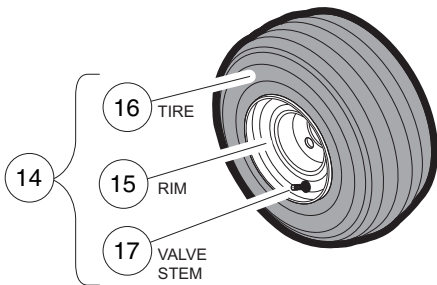
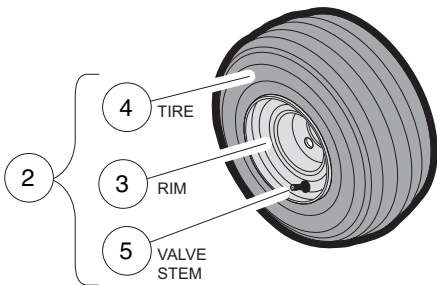


PREMIUM TREAD

FOR REAR ONLY

BEIGE RIMS

WHITE RIMS


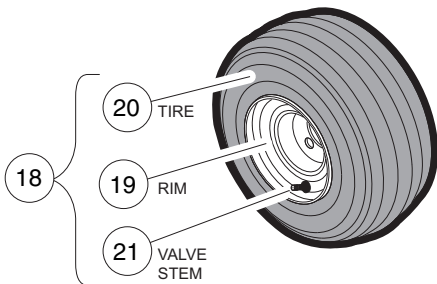
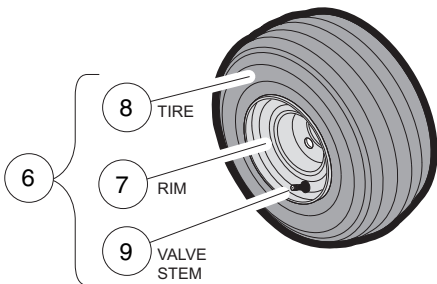


EXTRA TRACTION
TREAD

FOR FRONT ONLY

BEIGE RIMS

 WHITE RIMS

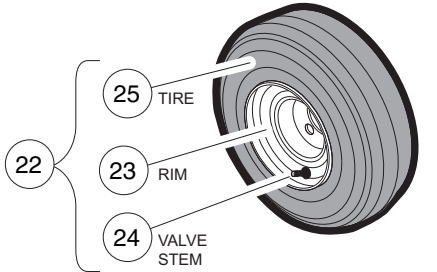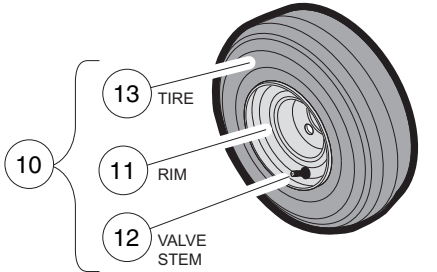

DURO HF 232 TREAD

000269-003

WHEELS AND TIRES – TURF/CARRYALL 6



ITEM	PART NO.	DESCRIPTION	QTY	2 G E
		1 2 3 4		
1	<u>1010984</u>	.500-20 Unf Lug Nut	16	
2	<u>101570506</u>	Tire/Wheel Asm, Beige, Premium Tread, 6-ply (includes items 3 through 5)	4	
3	<u>1015707</u>	Wheel Rim, Beige	1	
4	<u>101737002</u>	Tire, Unmounted	1	
5	<u>7310</u>	Valve Stem	1	
6	<u>101570507</u>	Tire/Wheel Asm, Beige, Xtrac Tread, 6-ply (includes items 7 through 9)	2	
7	<u>1015707</u>	Wheel Rim, Beige	1	
8	N/A	Tire, Unmounted Xtrac 18 x 8.50-8	1	
9	<u>7310</u>	Valve Stem	1	
10	<u>101570514</u>	Tire/Wheel Asm, Beige, Duro HF 232 Tread (includes items 11 through 13)	2	
11	<u>1015707</u>	Wheel Rim, Beige	1	
12	<u>7310</u>	Valve Stem	1	
13	****	Tire, Unmounted, 6-Ply Rated (18.5 x 8.5 - 8) (Duro)	1	
14	<u>101651406</u>	Tire/Wheel Asm, White, Premium Tread, 6-Ply (includes items 15 through 17)	4	
15	<u>1014771</u>	Wheel Rim, White	1	
16	<u>101737002</u>	Tire, Unmounted	1	
17	<u>7310</u>	Valve Stem	1	
18	<u>101651407</u>	Tire/Wheel Asm, White, Extra-Traction, 6-Ply (includes items 19 through 21)	2	
19	<u>1014771</u>	Wheel Rim, White	1	
20	N/A	Tire, Unmounted Xtrac 18 x 8.50-8	1	
21	<u>7310</u>	Valve Stem	1	
22	<u>101651414</u>	Tire/Wheel Asm, White, Duro HF 232 (includes items 23 through 25)	2	
23	<u>101918402</u>	Wheel Rim, White	1	
24	<u>7310</u>	Valve Stem	1	
25	****	Tire, Unmounted, 6-Ply Rated (18.5 x 8.5 - 8) (Duro)	1	
		**** Special order item available upon request.		



FOR FRONT ONLY

BEIGE RIMS

 WHITE RIMS

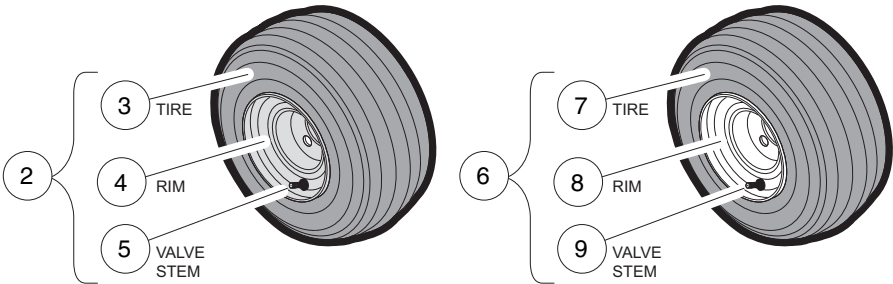

000269-007

WHEELS AND TIRES – VILLAGER 6 AND 8 (FRONT ONLY)

ITEM	PART NO.	DESCRIPTION	QTY	2
		1 2 3 4		G
1	<u>1010984</u>	.500-20 Unf Lug Nut	8	E
2	<u>101570509</u>	Tire/Wheel Asm, Beige, Premium Tread, 6.5 (includes items 3 through 5)	2	
3	<u>101884901</u>	Tire, Unmounted, Power Rib 18 x 6.50-8	1	
4	<u>101918401</u>	Wheel Rim, Beige	1	
5	<u>7310</u>	Valve Stem	1	
6	<u>101651409</u>	Tire/Wheel Asm, White, Premium Tread, 6.5-inch (includes items 7 through 9)	2	
7	<u>101884901</u>	Tire, Unmounted, Power Rib 18 x 6.50-8	1	
8	<u>101918401</u>	Wheel Rim, Beige	1	
9	<u>7310</u>	Valve Stem	1	

2

G

E

DECALS

3

G

E

3

G

E

OPERATING INSTRUCTIONS

- Read owner's manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.

TO OPERATE

- Turn wheels to desired direction and ensure path is clear.
- Turn key to ON position.
- While stopped, place shift lever in desired position:
F – Forward N – Neutral R – Reverse (Buzzer will sound)
- Park brake will release and vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and press brake pedal.

BEFORE LEAVING

- Press park brake pedal until it locks and holds vehicle.
- Place Forward/Reverse switch in NEUTRAL position.
- Turn key OFF and remove key when not in use.


CQ 102519201

WARNING

ROLLOVER OR FALLING OFF MAY CAUSE DEATH.

- Before using vehicle, read operating instructions.
- Remain seated and hold on to seat handle while moving.
- Do not start vehicle until all occupants are seated.
- Two (2) persons per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not leave children unattended on vehicle.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Never stand in front of or behind vehicle.

CQ 101560001

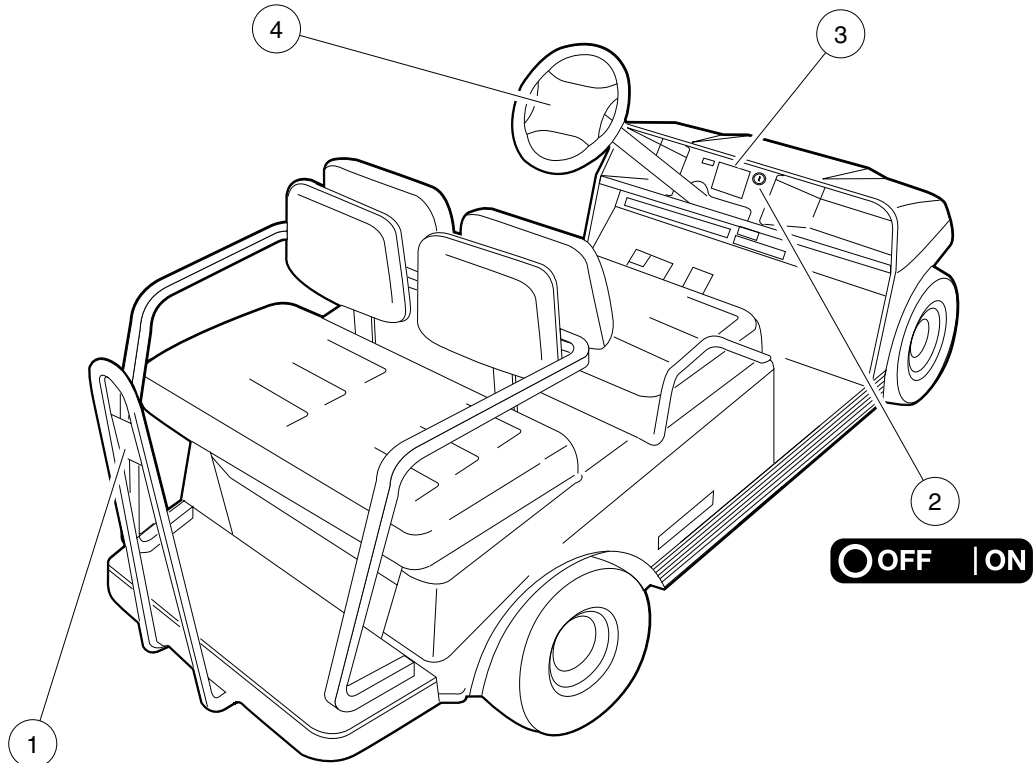

WARNING

FALLING OFF COULD RESULT IN SEVERE INJURY OR DEATH

- Remain seated with entire body inside vehicle and hold on to seat handle or handrail at all times.
- Two (2) persons per bench seat maximum.
- One (1) person per bucket seat maximum.
- Do not leave children unattended on vehicle at anytime.
- Never stand in front of or behind vehicle.

CQ 101765701

000370-001

DECALS – DS VILLAGER 4 GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>101705701</u>	Decal, Warning	1	
2	<u>101825101</u>	Decal, Off/On	1	
3	101960601	Decal, Dash Warning	1	
4	102518001	Decal, Operating Instr, Elec	1	

OPERATING INSTRUCTIONS

- Read owner's manual and dash-mounted safety warnings prior to driving.
- Study and understand controls.

TO OPERATE

- Turn wheels to desired direction and ensure path is clear.
- Turn key to ON position.
- While stopped, place Forward/Reverse switch in desired position:
F = Forward N = Neutral R = Reverse (Buzzer will sound)
- Park brake will release and vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and press brake pedal.

BEFORE LEAVING

- Press park brake pedal until it locks and holds vehicle.
- Place Forward/Reverse switch in NEUTRAL position.
- Turn key OFF and remove key when not in use.

MOTOR BRAKING

- Electric motor braking provides speed regulation functions.
- For parked vehicle, beeping alarm indicates vehicle roll away.
- In operation, beeping alarm indicates reduction in motor braking.
- Apply brakes to further reduce vehicle speed as required.
- System is activated only when tow switch is in the RUN position.
- When towing this vehicle, tow switch must be in the TOW position.


CC1 102518001

WARNING

ROLLOVER OR FALLING OFF MAY CAUSE DEATH.

- Before using vehicle, read operating instructions.
- Remain seated and hold on to seat handle while moving.
- Do not start vehicle until all occupants are seated.
- Two (2) persons per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not leave children unattended on vehicle.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Never stand in front of or behind vehicle.

CQ 101960001

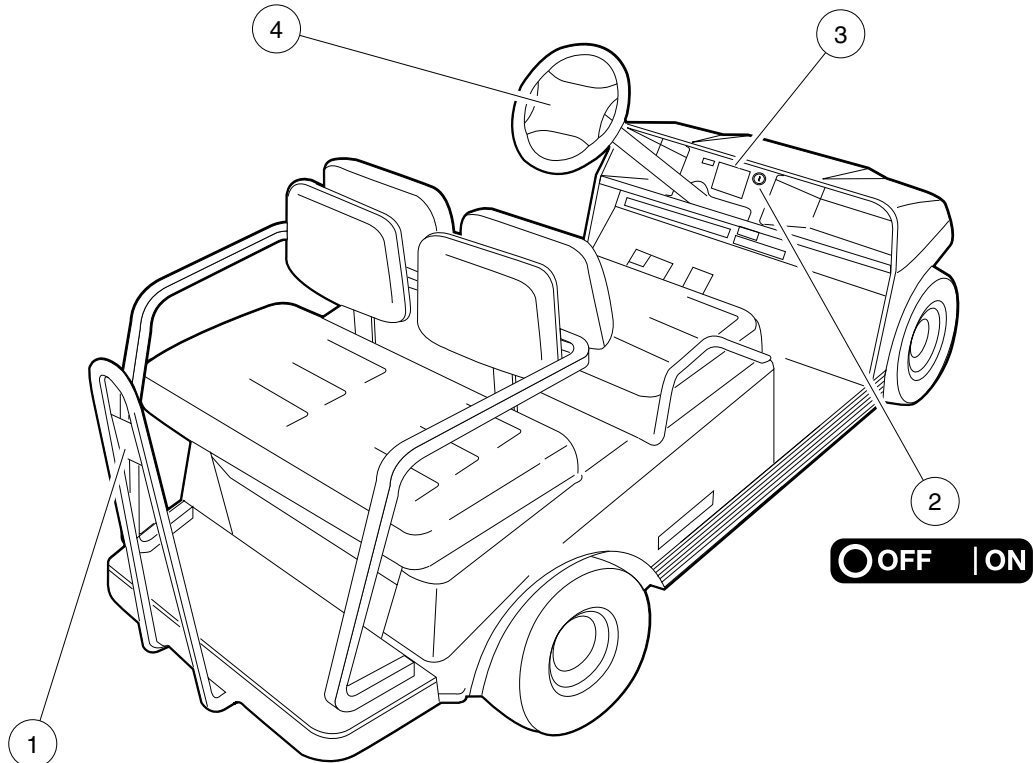

WARNING

FALLING OFF COULD RESULT IN SEVERE INJURY OR DEATH

- Remain seated with entire body inside vehicle and hold on to seat handle or handrail at all times.
- Two (2) persons per bench seat maximum.
- One (1) person per bucket seat maximum.
- Do not leave children unattended on vehicle at anytime.
- Never stand in front of or behind vehicle.

CQ 101765701

000370-003


DECALS – DS VILLAGER 4 ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3
		1 2 3 4		G
1	<u>101705701</u>	Decal, Warning	1	E
2	<u>101825101</u>	Decal, Off/On	1	
3	<u>101960601</u>	Decal, Dash Warning	1	
4	<u>102519201</u>	Decal, Operating Instr, Gas	1	

⚠ DANGER / POISON

 SHIELD EYES EXPLOSIVE GASES CAN CAUSE BLINDNESS OR BLINDNESS	 NO SPARKS • FLAMES • SMOKING	 SULFURIC ACID CAN CAUSE BURNS OR SEVERE BURNS	 FLUSH EYES IMMEDIATELY INTO WATER. GET MEDICAL HELP FAST.
---	--	---	---

KEEP OUT OF THE REACH OF CHILDREN - DO NOT TIP - KEEP VENT CAPS TIGHT AND LEVEL.

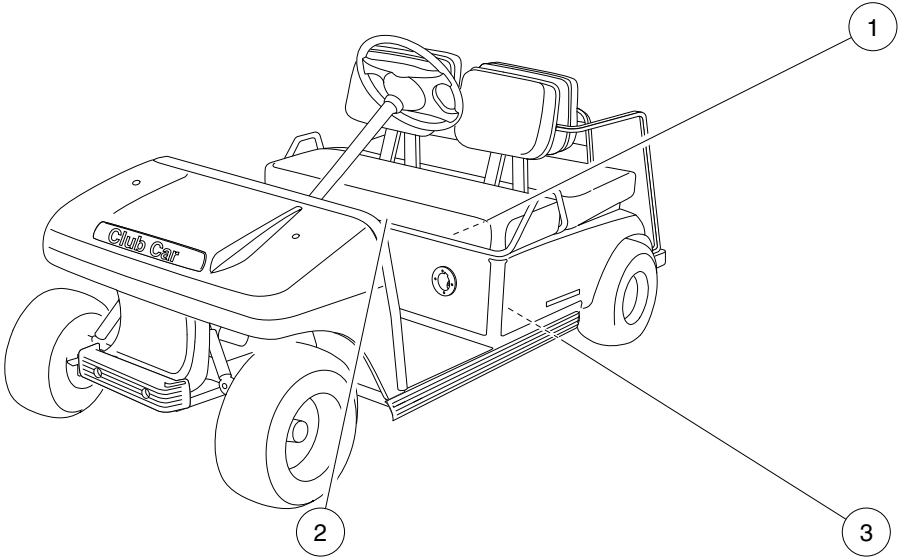

⚠ WARNING TOW RUN

Place Tow/Run switch in TOW position before:

- Disconnecting or connecting batteries
- Towing
- Extended storage
- Servicing


FAILURE TO HEED THIS WARNING COULD RESULT IN A BATTERY EXPLOSION OR SEVERE PERSONAL INJURY.

CCJ 101908601

NOTICE

Do not operate vehicle without this cover properly installed.
Do not direct water stream in this area; will cause damage to components.
See vehicle maintenance and service manual before servicing.

CCJ 101931501

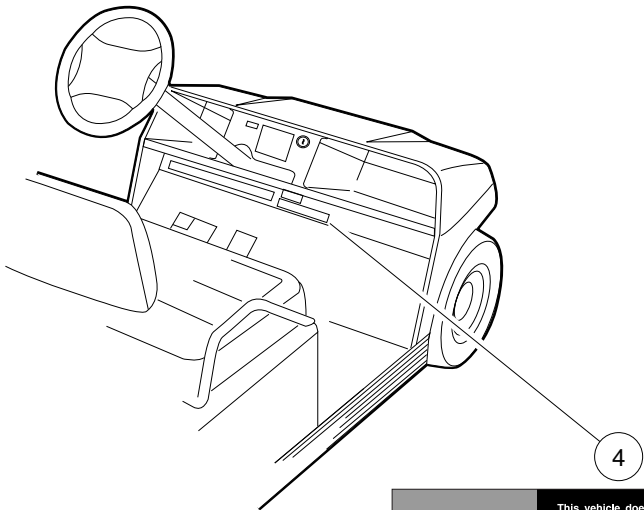

IMPORTANT NOTICE

This vehicle does not conform to ANSI Z130.1 - "Standard for Golf Cars - Safety and Performance Requirements" because it is capable of speeds in excess of 15 miles per hour. Exercise caution.

CCJ 102228701



000371-001


DECALS – DS VILLAGER 4 ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>1013677</u>	Decal, Battery Danger	1	
2	<u>101908601</u>	Decal, Tow/Run Switch Warning	1	
3	<u>101931501</u>	Decal, Component Cover	1	
4	<u>102228701</u>	Decal, Private Speed	1	

3

G

E

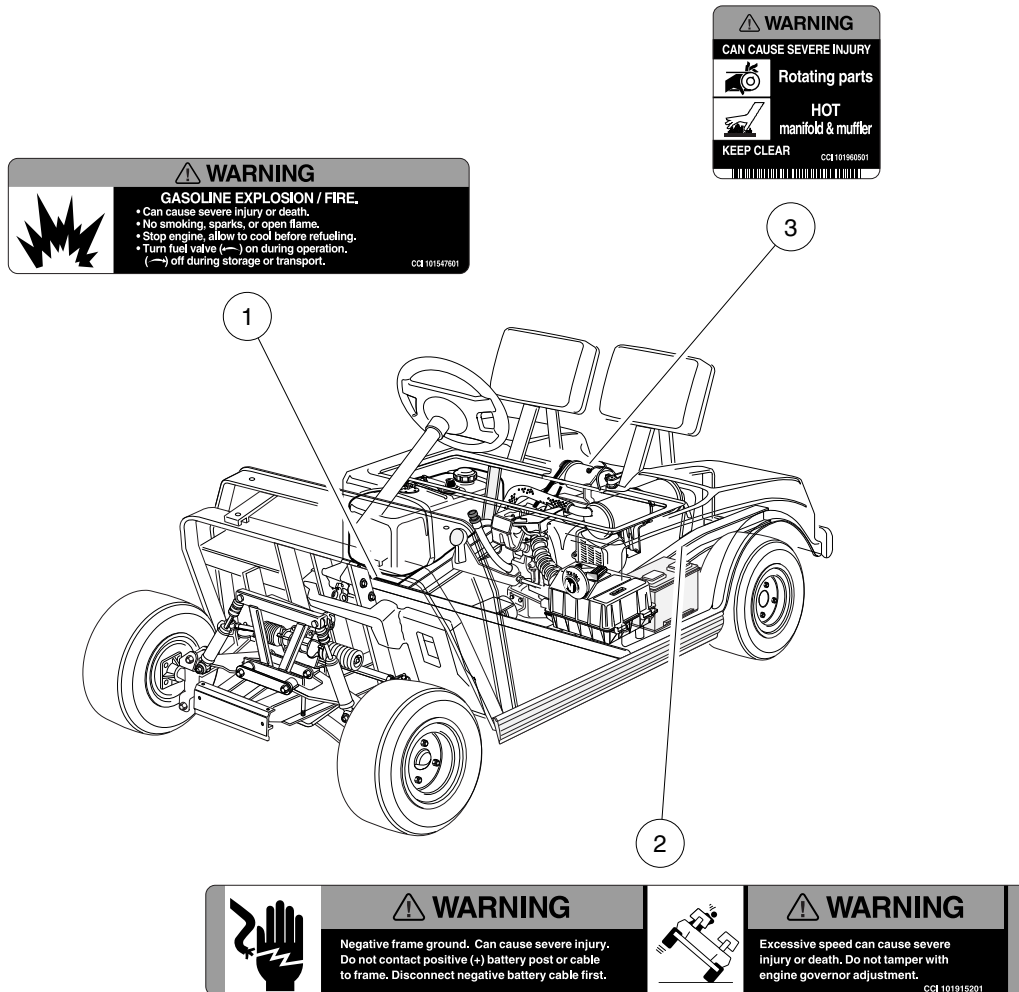

000373-001


DECALS – DS VILLAGER 4 GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101547601	Decal, Gasoline Explosion/Fire Warning	1
2	101915201	Decal, Frame Ground and Governor Warning	1
3	101960501	Decal, Rotating Parts/Hot Manifold	2

3

G

E

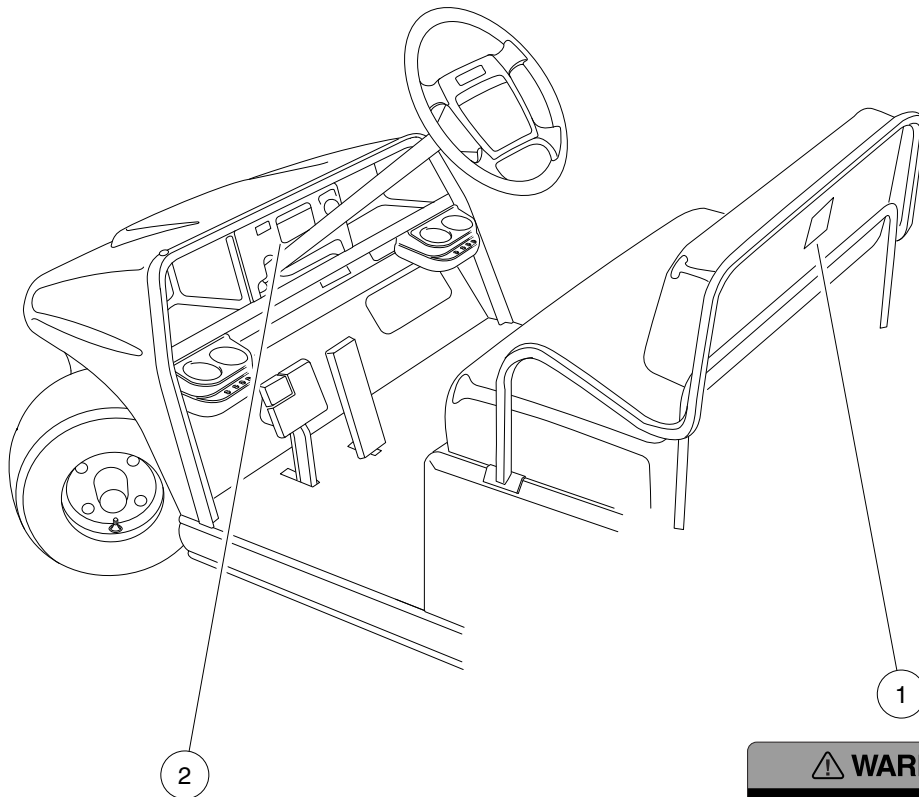

⚠ WARNING

ROLLOVER OR FALLING OFF MAY CAUSE DEATH.

- Before using vehicle, read operating instructions.
- Remain seated and hold on to seat handle while moving.
- Do not start vehicle until all occupants are seated.
- Two (2) persons per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not leave children unattended on vehicle.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Never stand in front of or behind vehicle.

CCJ 101960601

⚠ WARNING

FALLING OFF COULD RESULT IN SEVERE INJURY OR DEATH

- Remain seated with entire body inside vehicle and hold on to seat handle or handrail at all times.
- Two (2) persons per bench seat maximum.
- One (1) person per bucket seat maximum.
- Do not leave children unattended on vehicle at anytime.
- Never stand in front of or behind vehicle.

CCJ 101705701

000374-001

DECALS – VILLAGER 6 GASOLINE AND ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>101705701</u>	1 2 3 4 Decal, Warning	1
2	101960601	Decal, Dash Warning	1

3

G

E

3

G

E

OPERATING INSTRUCTIONS

- Read owner's manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.

TO OPERATE

- Turn wheels to desired direction and ensure path is clear.
- Turn key to ON position.
- While stopped, place shift lever in desired position:
F – Forward N – Neutral R – Reverse (Buzzer will sound)
- Park brake will release and vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and press brake pedal.

BEFORE LEAVING

- Press park brake pedal until it locks and holds vehicle.
- Place Forward/Reverse switch in NEUTRAL position.
- Turn key OFF and remove key when not in use.



CC1 102519201




⚠ DANGER / POISON



KEEP OUT OF THE REACH OF CHILDREN - DO NOT TIP - KEEP VENT CAPS TIGHT AND LEVEL




OFF | ON

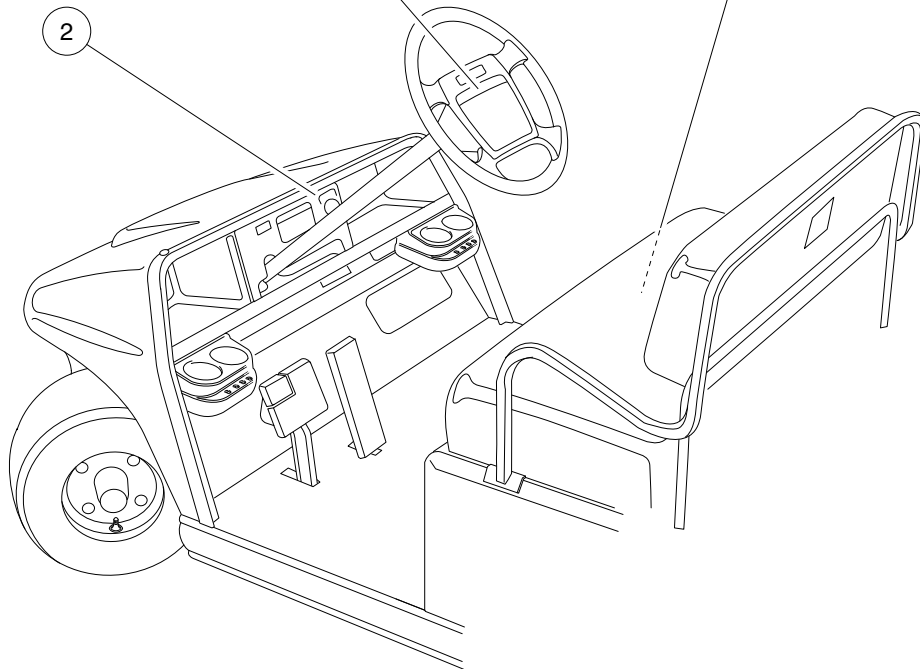

000375-001

DECALS – VILLAGER 6 POWERDRIVE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>1013677</u>	Decal, Battery Danger	1
2	<u>101825101</u>	Decal, Off/On	1
3	<u>102519201</u>	Decal, Operating Instr, Gas	1

 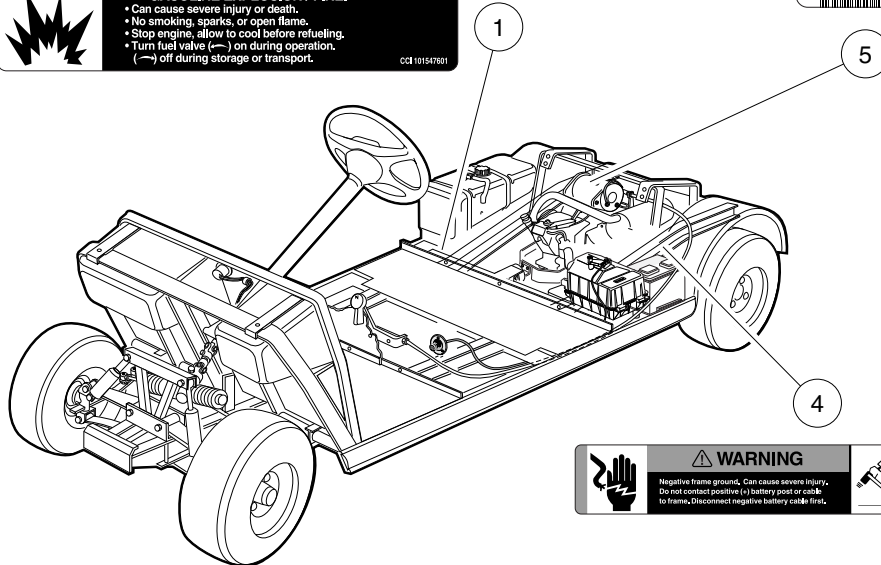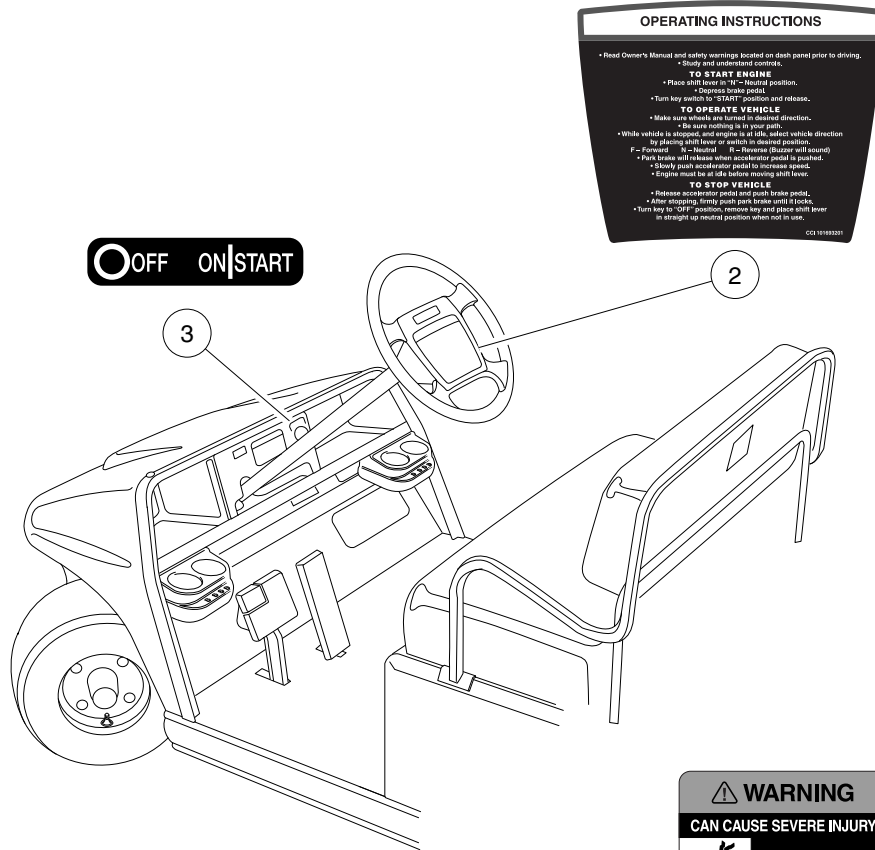

000376-001

DECALS – VILLAGER 6 GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>101547601</u>	Decal, Gasoline Explosion/Fire Warning	1	
2	<u>101693201</u>	Decal, Operating Instructions, Key-Start	1	
3	<u>101825102</u>	Decal, Off/On/Start	1	
4	<u>101915201</u>	Decal, Frame Ground and Governor Warning	1	
5	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	1	

WARNING

ROLLOVER OR FALLING OFF MAY CAUSE DEATH.

- Before using vehicle, read operating instructions.
- Remain seated and hold on to seat handle while moving.
- Do not start vehicle until all occupants are seated.
- Two (2) persons per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not leave children unattended on vehicle.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Never stand in front of or behind vehicle.


CC1 101960601

WARNING

FALLING OFF COULD RESULT IN SEVERE INJURY OR DEATH

- Remain seated with entire body inside vehicle and hold on to seat handle or handrail at all times.
- Two (2) persons per bench seat maximum.
- One (1) person per bucket seat maximum.
- Do not leave children unattended on vehicle at anytime.
- Never stand in front of or behind vehicle.

CC1 101706701

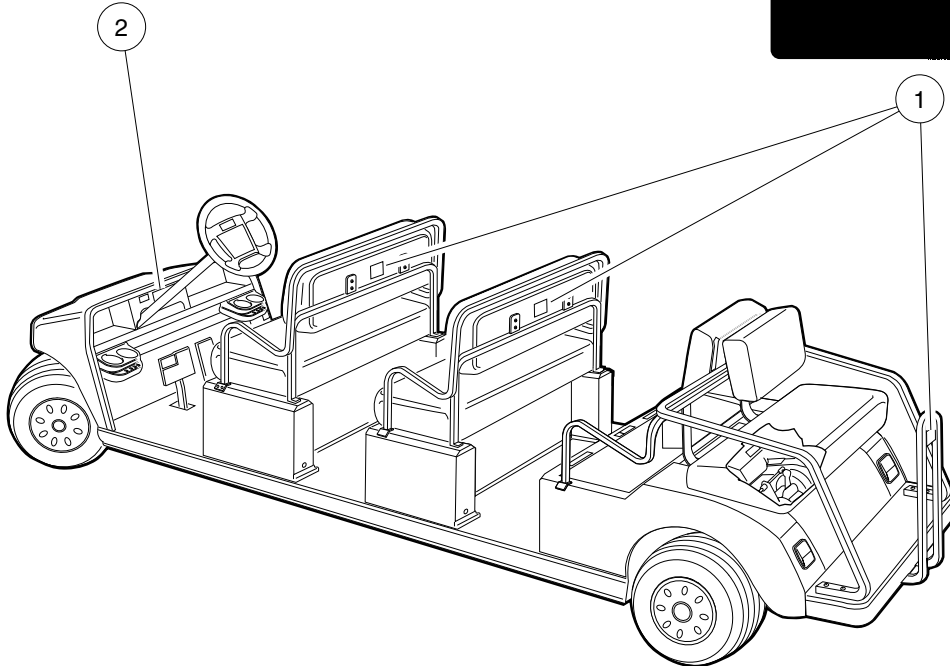

000377-001

DECALS – VILLAGER 8 GASOLINE AND ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
1	<u>101705701</u>	1 2 3 4 Decal, Warning	3	
2	101960601	Decal, Dash Warning	1	

3

G

E

OPERATING INSTRUCTIONS

- Read owner's manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.


TO OPERATE

- Turn wheels to desired direction and ensure path is clear.
- Turn key to ON position.
- While stopped, place shift lever in desired position:
F ~ Forward N ~ Neutral R ~ Reverse (Buzzer will sound)
- Park brake will release and vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and press brake pedal.

BEFORE LEAVING

- Press park brake pedal until it locks and holds vehicle.
- Place Forward/Reverse switch in NEUTRAL position.
- Turn key OFF and remove key when not in use.


CC1 102916201

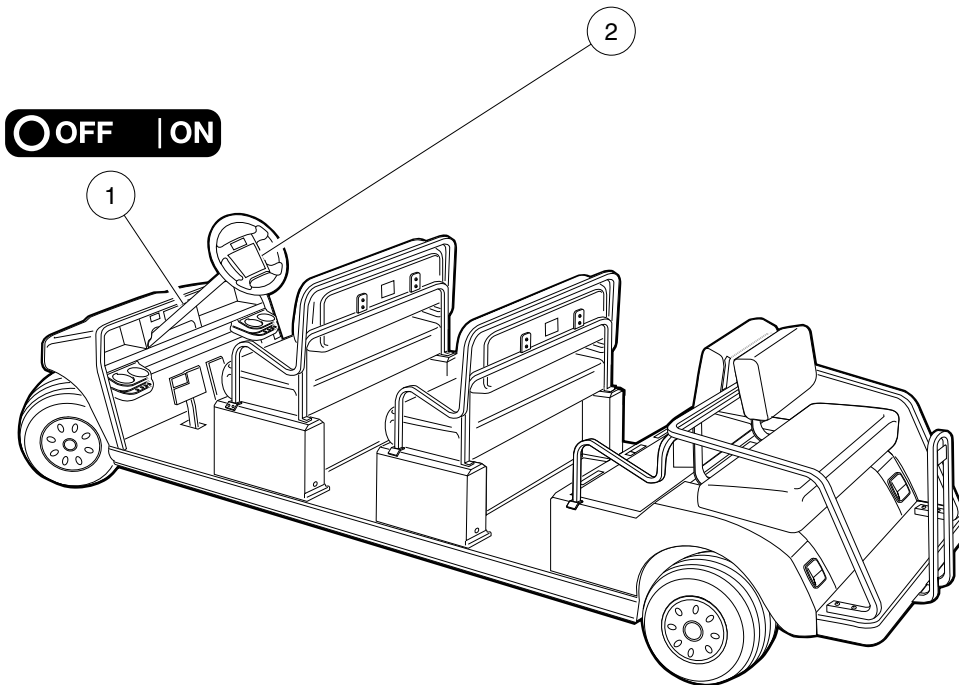

000378-001

DECALS – VILLAGER 8 ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	
1	<u>101825101</u>	1 2 3 4 Decal, Off/On	1	3
2	<u>102519201</u>	Decal, Operating Instr, Gas	1	G
				E

 

DECALS – VILLAGER 8 GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>101547601</u>	Decal, Gasoline Explosion/Fire Warning	1	
2	<u>101693201</u>	Decal, Operating Instructions, Key-Start	1	
3	<u>101825102</u>	Decal, Off/On/Start	1	
4	<u>101915201</u>	Decal, Frame Ground and Governor Warning	1	
5	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	2	

3

G

E

Club Car

1

(ON FRONT OF COWL)

Villager

2

(ON REAR BODY)

IR Ingersoll Rand

3

(ON REAR BODY)

000380-001


LOGO DECALS – VILLAGER 4, 6, AND 8 GASOLINE AND ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>1014198</u>	Nameplate Kit (gold)	1
2	<u>102158701</u>	Decal, Villager	2
3	<u>103234302</u>	Decal, Badge, IR - Gold	2

3

G

E

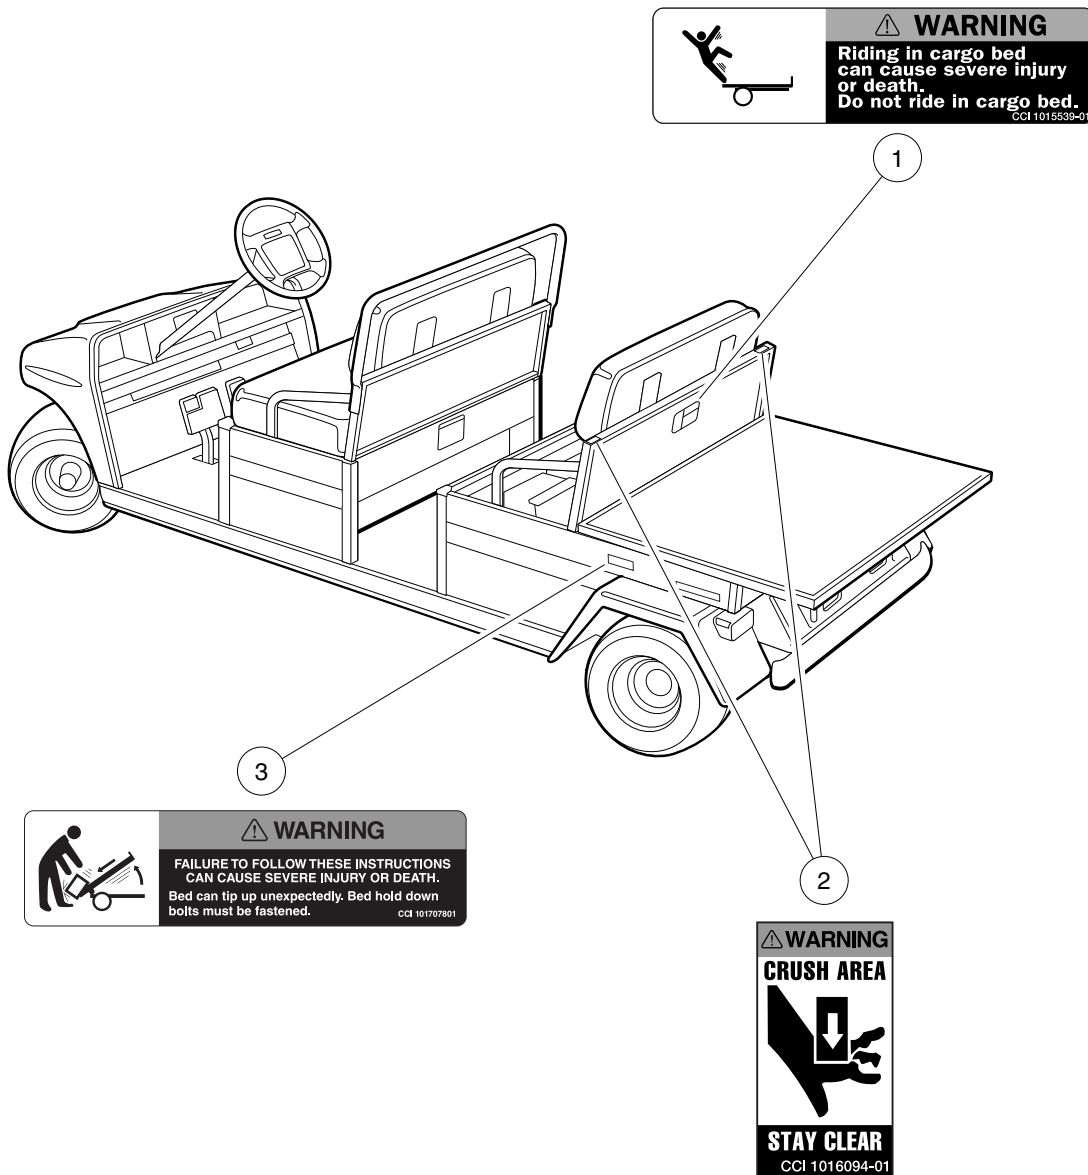


000381-001

DECALS – TRANSPORTER 4 GASOLINE AND ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
1	<u>101553901</u>	1 2 3 4 Decal, Bed Load Warning	1	
2	<u>101609401</u>	Decal, Crush Area Warning	2	
3	<u>101707801</u>	Decal, Bed Hold-Down Bolts	1	

TransPorter 6

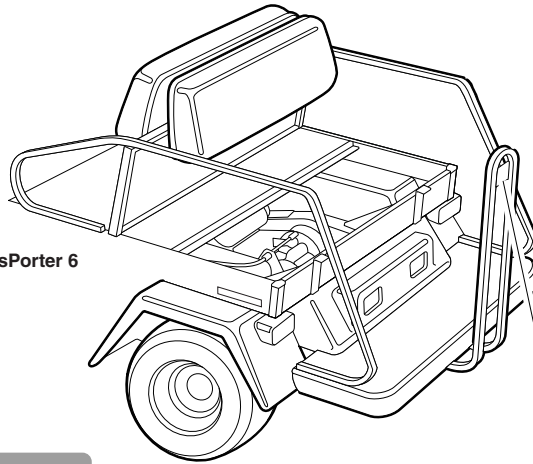

WARNING

ROLLOVER OR FALLING OFF MAY CAUSE DEATH.

- Before using vehicle, read operating instructions.
- Remain seated and hold on to seat handle while moving.
- Do not start vehicle until all occupants are seated.
- Two (2) persons per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not leave children unattended on vehicle.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Never stand in front of or behind vehicle.

CCJ 101960501

WARNING

FALLING OFF COULD RESULT IN SEVERE INJURY OR DEATH


- Remain seated with entire body inside vehicle and hold on to seat handle or handrail at all times.
- Two (2) persons per bench seat maximum.
- One (1) person per bucket seat maximum.
- Do not leave children unattended on vehicle at anytime.
- Never stand in front of or behind vehicle.

CCJ 101705701

3

1

TransPorter 4

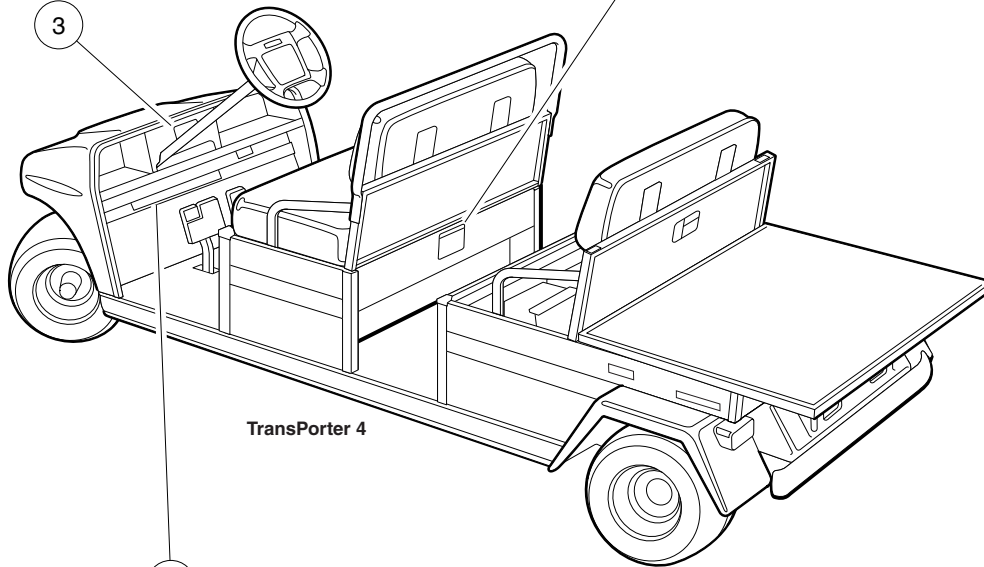

2

VEHICLE LOADING

Read owner's manual and warnings on dash.

- Vehicle rated capacity - 1500 lb on level surface only. Weight to include passengers, cargo bed load, and gross trailer weight. See owner's manual.
- Maximum cargo load CARRYALL 6 or TURF 6 - 1000 lb, TRANSPORTER - 300 lb. Weight to include cargo bed load and gross trailer weight.
- Maximum trailer hitch tongue weight - 150 lbs.

- Cargo should be evenly spread over the floor of the cargo bed as far forward as possible and secured.
- For vehicle stability, when fully loaded, drive slowly and avoid stopping on or backing down steep hills.
- Avoid top heavy loads. See owner's manual.
- When driving on uneven terrain or down steep hills, reduce speed and load.

CCJ 101960001

000382-001

DECALS – TRANSPORTER 4 AND 6 GASOLINE AND ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
1	<u>101705701</u>	1 2 3 4 Decal, Warning	1	
2	<u>101960001</u>	Decal, Vehicle Loading	1	
3	<u>101960601</u>	Decal, Dash Warning	1	
Note: The quantity of item 1 (<u>101705701</u>) used on TransPorter 6 vehicles is 2.				

3

G

E

NOTICE


Do not operate vehicle without this cover properly installed.
Do not direct water stream in this area; will cause damage to components.
See vehicle maintenance and service manual before servicing.

CCI 101931501

**NOTICE**

**DO NOT USE
AS GROUND.**

CCI 101964601

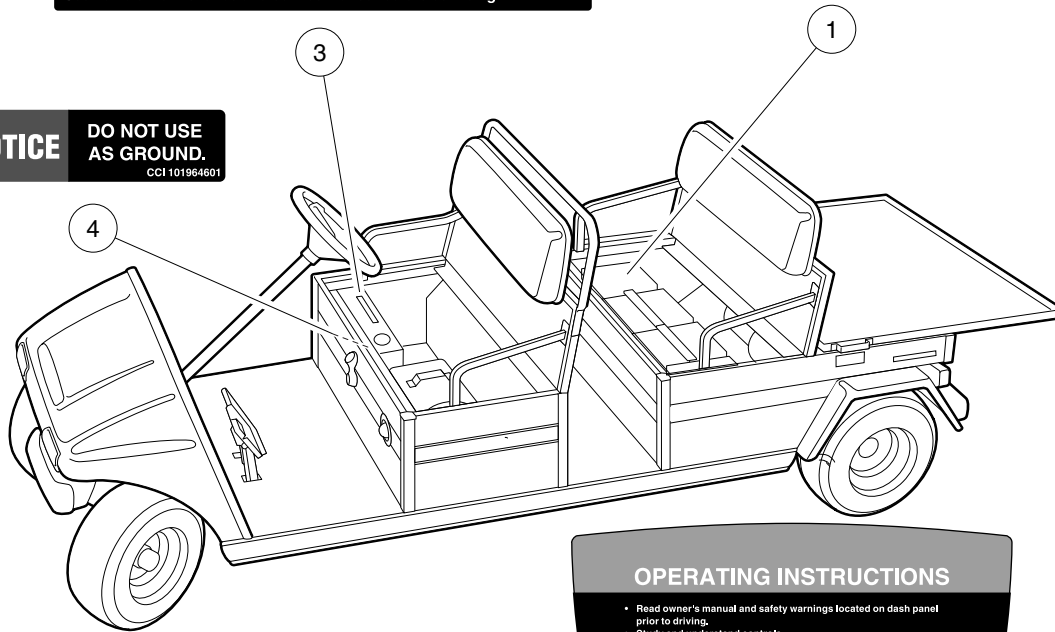**OPERATING INSTRUCTIONS**

- Read owner's manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.

TO OPERATE


- Turn wheels to desired direction and ensure path is clear.
- Turn key to ON position.
- While stopped, place shift lever in desired position:
F = Forward N = Neutral R = Reverse (Buzzer will sound)
- Park brake will release and vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and press brake pedal.

BEFORE LEAVING

- Press park brake pedal until it locks and holds vehicle.
- Place Forward/Reverse switch in NEUTRAL position.
- Turn key OFF and remove key when not in use.

CCI 102519201

OFF | ON

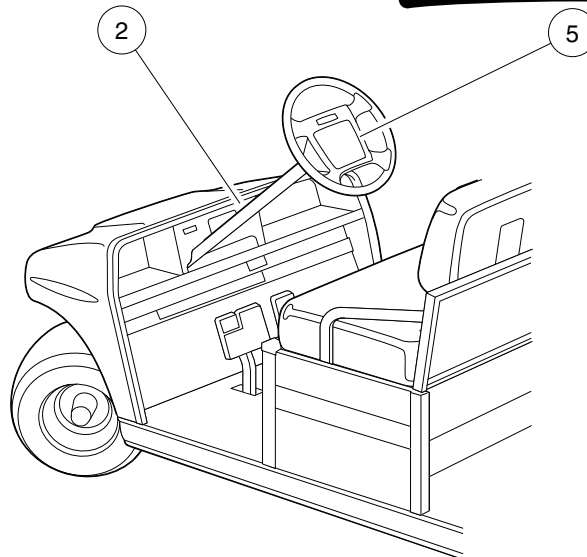

000383-001




DECALS – TRANSPORTER 4 AND 6 ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3
		1 2 3 4		G
1	<u>1013677</u>	Decal, Battery Danger	1	E
2	<u>101825101</u>	Decal, Off/On	1	
3	<u>101931501</u>	Decal, Component Cover	1	
4	<u>101964601</u>	Decal, No Ground Warning	1	
5	<u>102519201</u>	Decal, Operating Instr, Gas	1	

3

G

E

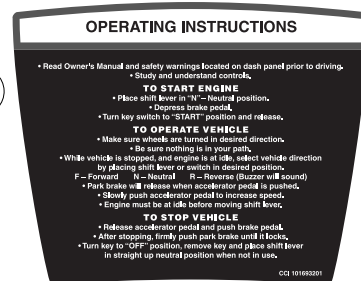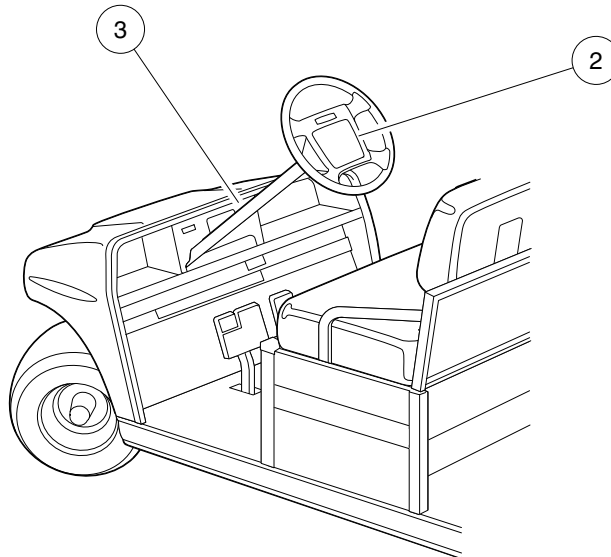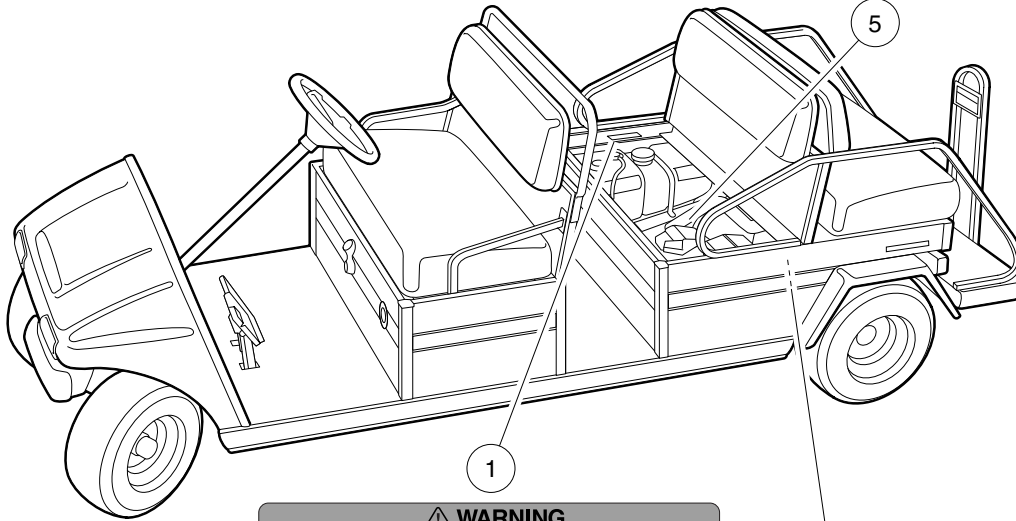

000385-001

DECALS – TRANSPORTER 4 AND 6 GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>101547601</u>	Decal, Gasoline Explosion/Fire Warning	1	
2	<u>101693201</u>	Decal, Operating Instructions, Key-Start	1	
3	<u>101825102</u>	Decal, Off/On/Start	1	
4	<u>101915201</u>	Decal, Frame Ground and Governor Warning	1	
5	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	1	

3

G

E

Club Car

1

(ON FRONT OF COWL)

TransPorter

2

(ON FRONT DRIVER SIDE PANEL)

000384-001

LOGO DECALS – TRANSPORTER 4 AND 6 GASOLINE AND ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>101670201</u>	Nameplate Kit (silver)	1	
2	<u>102244501</u>	Decal Trans 4/6 Front Driver	1	
3	N/A	Decal Trans 4/6 Rear Driver	1	
4	N/A	Decal Trans 4/6 Rear Pass	1	
5	N/A	Decal Trans 4/6 Front Pass	1	

3

G

E

BRAKES, PEDAL, AND CABLE ASSEMBLIES

4


G

E

4

G


E

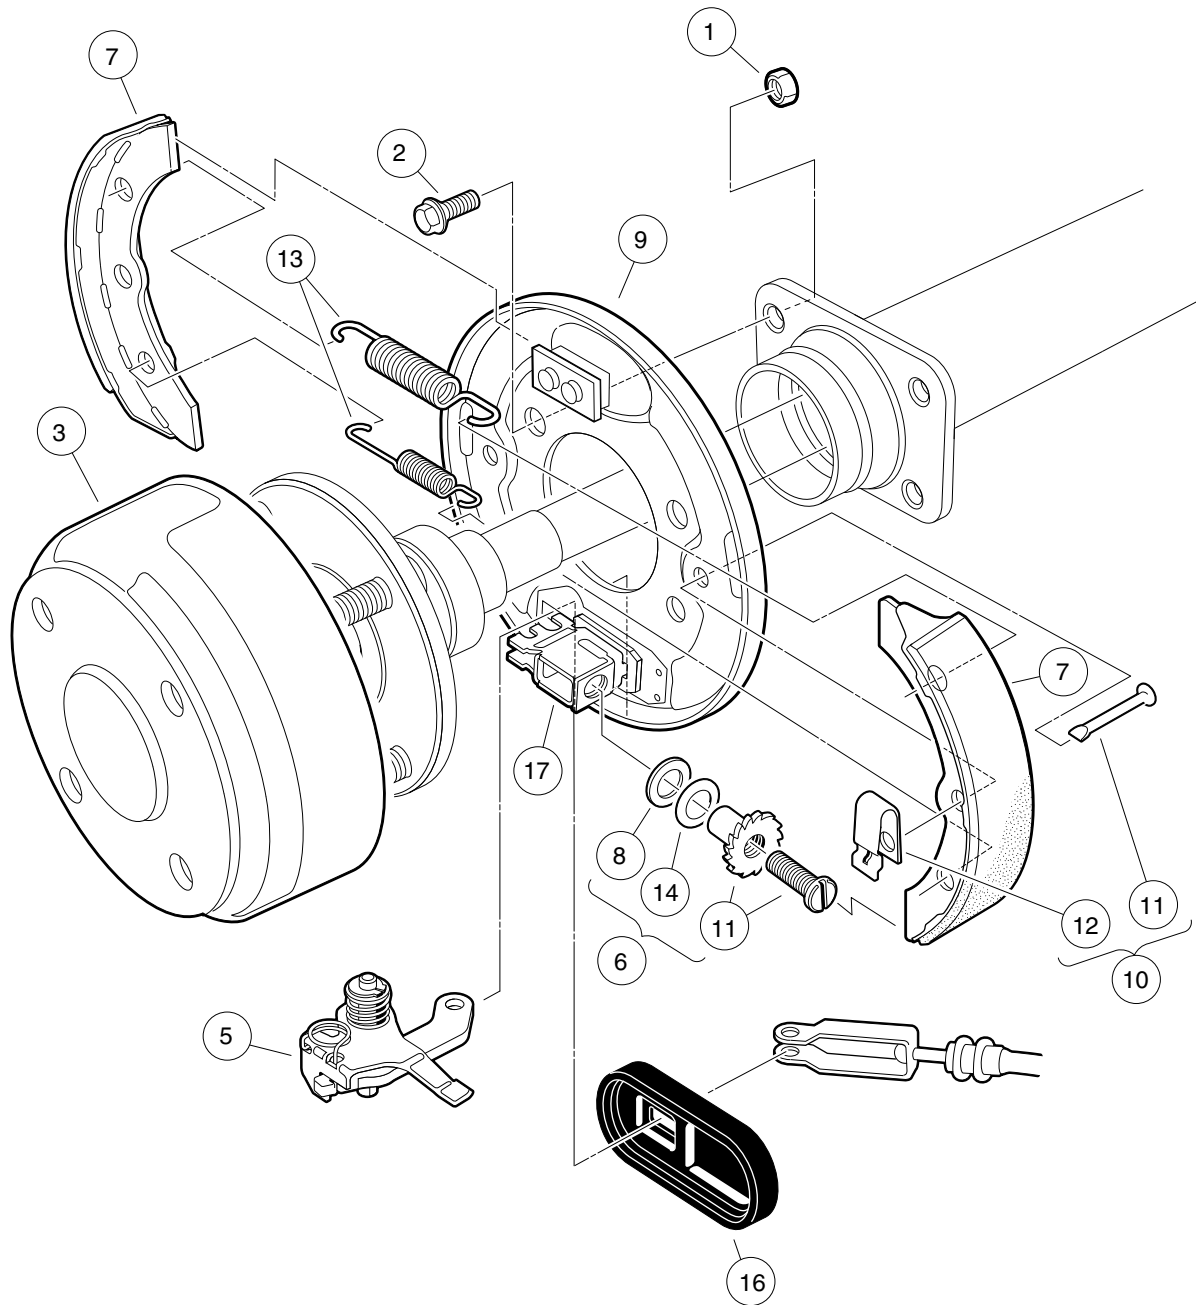

000186-001

BRAKE ASSEMBLY, SELF-ADJUSTING – DS VILLAGER 4

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	8	
2	<u>1014153</u>	Bolt, Brake Cluster Mounting	8	
3	<u>101791101</u>	Drum without Center Hole, Brake	2	
4	<u>103380201</u>	Asm, Brake Cluster, Mech, Drvr (includes items 5 through 17)	1	
5	<u>101815501</u>	Lever Assembly, Self-Adjusting Brake, Right (Passenger)	1	
6	<u>101816501</u>	Adj Mechanism, S.A. Brakes, Right (Passenger)	1	
7	<u>101823201</u>	Package, Brake Shoe, Self-Adjusting	1	
8	<u>101823801</u>	Plate, Washer, Brake, Self-Adjusting	1	
9	<u>103483101</u>	Back Plate, Rh	1	
10	<u>103483201</u>	Kit, Shoe Retainer (includes items 11 and 12)	1	
11	<u>1010953</u>	Pin	2	
12	<u>103483301</u>	Spring, Shoe, Clamp	2	
13	<u>103483401</u>	Package Brake Spring Self Adj (includes items 14 and 15)	1	
14	<u>101816401</u>	Brake Spring Self Adj	2	
15	<u>103483501</u>	Spring Brake	2	
16	<u>103483601</u>	Cover, Dust	1	
17	<u>103483701</u>	Brake Block	1	
18	<u>103380202</u>	Asm, Brake Cluster, Mech, Pass (includes items 19 through 31)	1	
19	<u>101815502</u>	Lever Assembly, Self-Adjusting Brake, Left	1	
20	<u>101816502</u>	Adjusting Mechanism, Self-Adjusting Brake, Left	1	
21	<u>101823201</u>	Package, Brake Shoe, Self-Adjusting	1	
22	<u>101823801</u>	Plate, Washer, Brake, Self-Adjusting	1	
23	<u>103483102</u>	Back Plate, Lh	1	
24	<u>103483201</u>	Kit, Shoe Retainer (includes items 25 and 26)	1	
25	<u>1010953</u>	Pin	2	
26	<u>103483301</u>	Spring, Shoe, Clamp	2	
27	<u>103483401</u>	Package Brake Spring Self Adj (includes items 28 and 29)	1	
28	<u>101816401</u>	Brake Spring Self Adj	2	
29	<u>103483501</u>	Spring Brake	2	
30	<u>103483601</u>	Cover, Dust	1	
31	<u>103483701</u>	Brake Block	1	
		Note: Driver-side brake cluster not shown. Components have a similar appearance to passenger-side brake cluster components.		

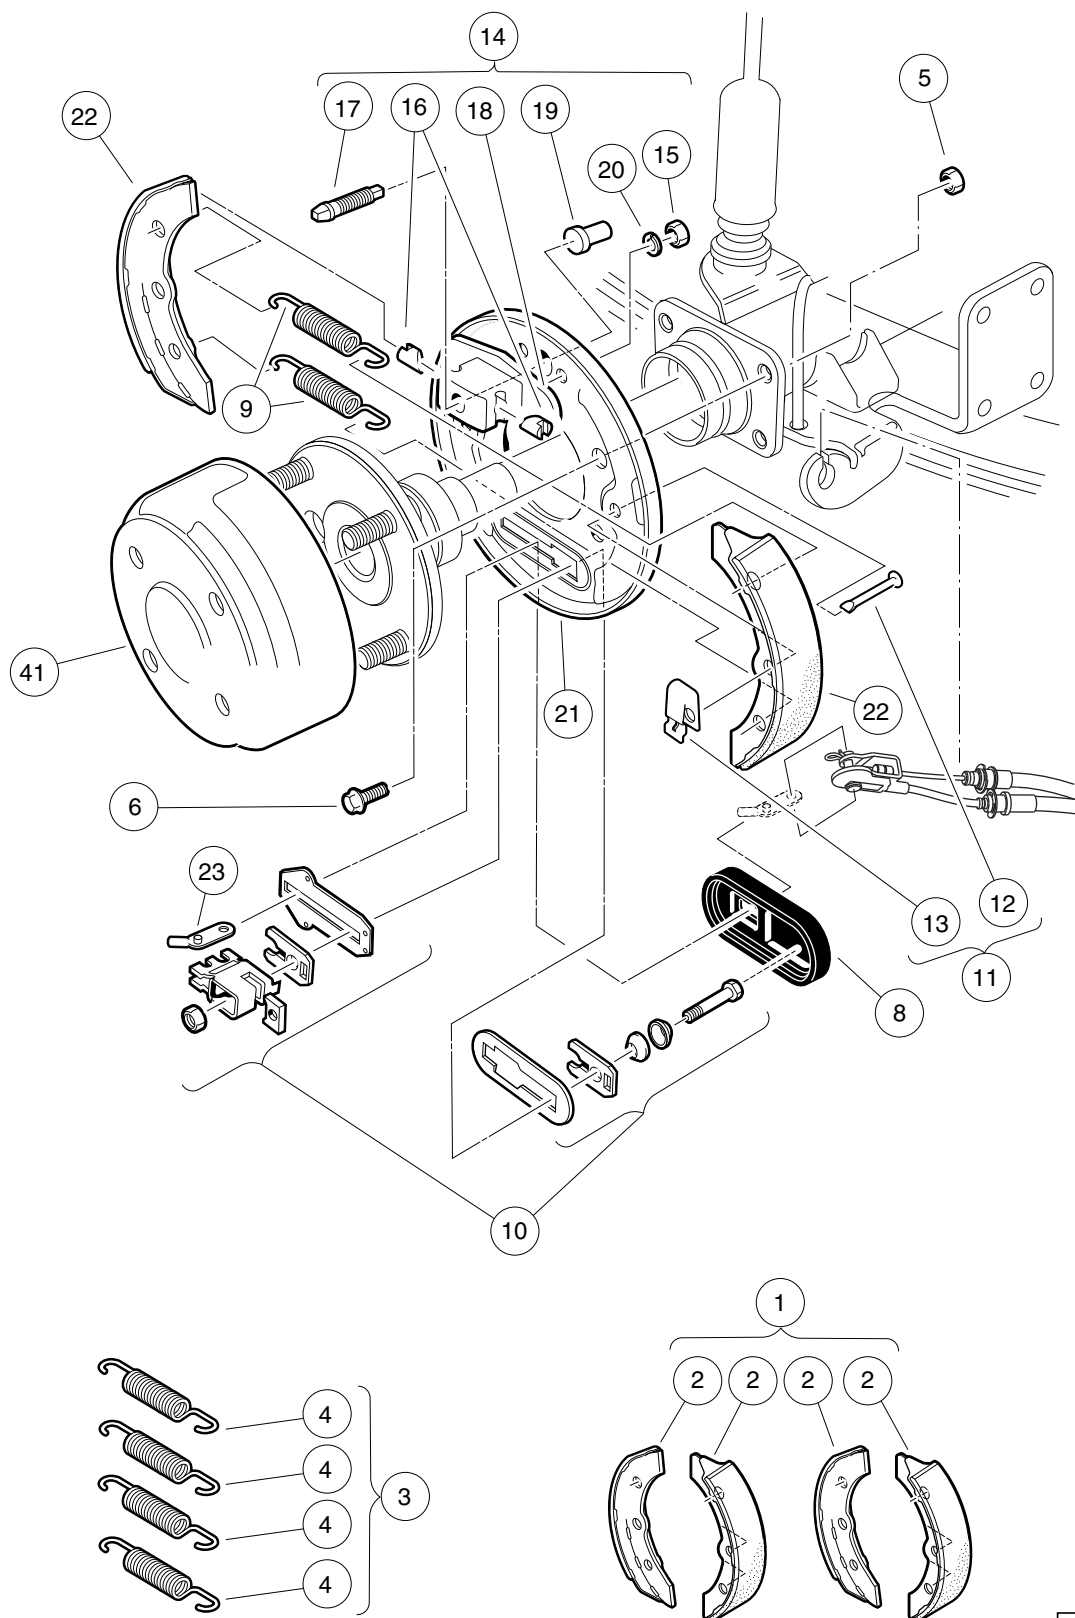


000293-002

REAR BRAKE ASSEMBLY, MANUALLY-ADJUSTED – VEHICLES WITH 4-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101146302</u>	Kit, Non-Asbestos Brake Shoe (includes item 2)	1
2	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	4
3	<u>1011464</u>	Package, Brake Spring (includes item 4)	1
4	1011314	Brake Spring	4
5	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	8
6	<u>1014153</u>	Bolt, Brake Cluster Mounting	8
7	<u>1016557</u>	Cluster, Brake, Driver-Side (includes items 8 through 23)	1
8	<u>1010850</u>	Dust Cover	1
9	1011314	Brake Spring	2
10	<u>1011465</u>	Kit, Brake Actuator	1
11	<u>1011466</u>	Kit, Shoe Retainer (includes items 12 and 13)	1
12	1010953	Pin	2
13	1011301	Shoe Clamp Spring	2
14	<u>1011467</u>	Kit, Anchor Body (includes items 15 through 20)	1
15	<u>1011114</u>	Nut, M6-1.00 Hex	2
16	1011298	Anchor Piston	2
17	N/A	Adjustment Bolt	1
18	N/A	Anchor Body Component	1
19	<u>1011303</u>	Adjustment Bolt Cap	1
20	<u>451</u>	Lockwasher, 1/4 Split	2
21	1011494	Backing Plate, Left-Hand	1
22	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2
23	N/A	Arm, Brake Lever	1
24	<u>1016573</u>	Cluster, Brake, Passenger-Side (includes items 25 through 40)	1
25	<u>1010850</u>	Dust Cover	1
26	<u>1011154</u>	Backing Plate, Right-Hand	1
27	1011314	Brake Spring	2
28	<u>1011465</u>	Kit, Brake Actuator	1
29	<u>1011466</u>	Kit, Shoe Retainer (includes items 30 and 31)	1
30	1010953	Pin	2
31	1011301	Shoe Clamp Spring	2
32	<u>1011467</u>	Kit, Anchor Body (includes items 33 through 38)	1
33	<u>1011114</u>	Nut, M6-1.00 Hex	2
34	1011298	Anchor Piston	2
35	N/A	Adjustment Bolt	1
36	N/A	Anchor Body Component	1
37	<u>1011303</u>	Adjustment Bolt Cap	1
38	<u>451</u>	Lockwasher, 1/4 Split	2
39	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2
40	N/A	Arm, Brake Lever	1
41	<u>101791101</u>	Drum without Center Hole, Brake	2
		Note: Passenger-side brake cluster not shown. Components have a similar appearance to driver-side brake cluster components.	

4
G
E

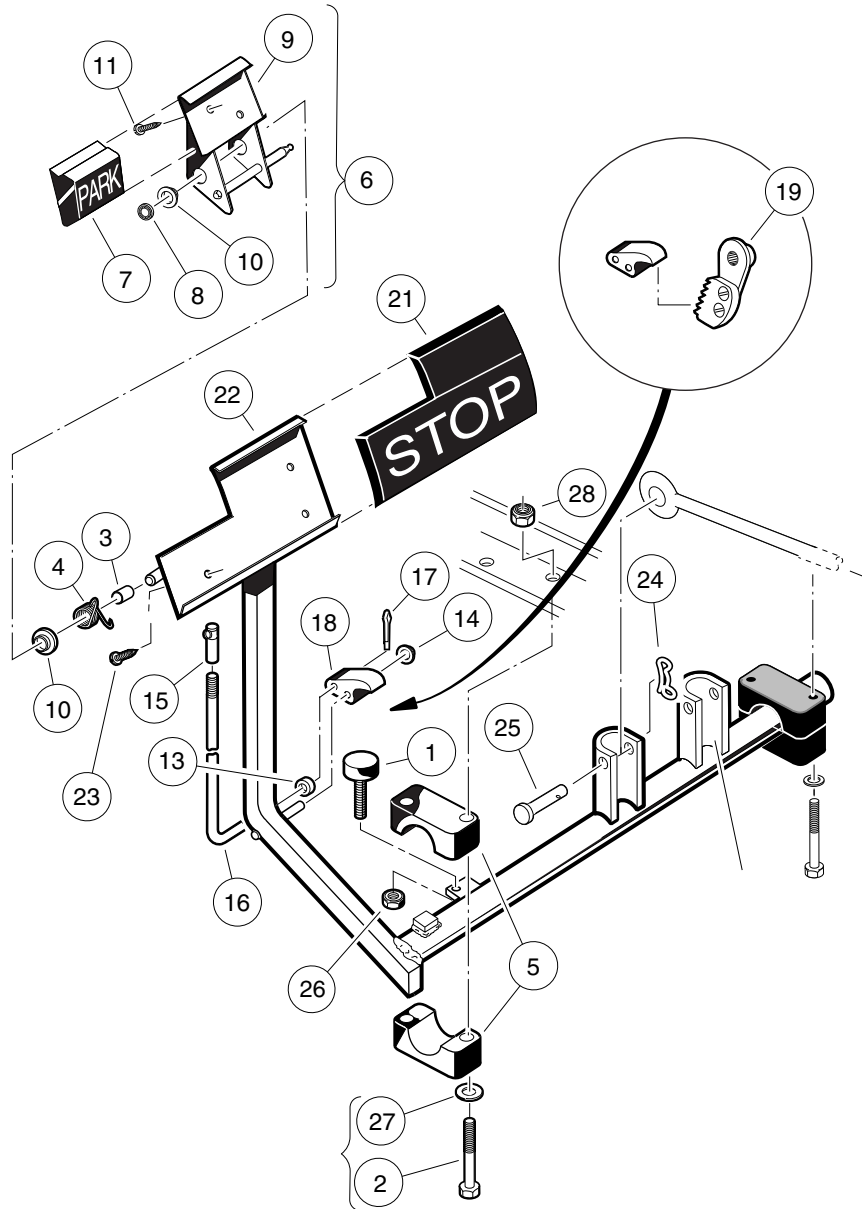

000187-001

BRAKE PEDAL ASSEMBLY – DS VILLAGER 4


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010878</u>	Bumper, Rubber	1
2	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	4
3	<u>1010927</u>	Hill Brake Spacer	1
4	<u>1010933</u>	Spring, Hill Brake Torsion	1
5	<u>1011402</u>	Package, Brake Mounting Block	1
6	<u>1011418</u>	Kit, Hill Brake Pedal (includes items 7 through 11)	1
7	<u>1013870</u>	Pad, Hill Brake	1
8	<u>1013876</u>	Pushnut, 3/8	1
9	N/A	Hill Brake Weld Assembly	1
10	<u>1032</u>	Bushing, Nylon	2
11	7716	Screw, #10-16 Type AB, Sheet Metal	2
12	<u>101187702</u>	Kit, Hill Brake Latch (includes items 13 through 19)	1
13	<u>1010805</u>	Sleeve, Hill Brake Rod	1
14	<u>1010877</u>	Pushnut, 3/8	1
15	1010932	Ball Joint, 1/4-28	1
16	N/A	Rod, Hill Brake	1
17	<u>1017029</u>	Pin, Cotter, 7/64 x 1/2 Stainless-Steel	1
18	N/A	Pawl, Hill Brake	1
19	101918501	Ratchet Assembly	1
20	<u>101878201</u>	Brake Pedal Kit (includes items 21 through 23)	1
21	<u>1013869</u>	Pad, Brake Pedal	1
22	N/A	Weldment, Brake Pedal 4wb Std	1
23	7716	Screw, #10-16 Type AB, Sheet Metal	3
24	<u>102323101</u>	Pin, Bow Tie Locking	1
25	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1
26	<u>1028</u>	Nut, 1/4-20 Hex	1
27	<u>1241</u>	Washer, 5/16 Type A Flat	4
28	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4

4
G
E

4

G


E

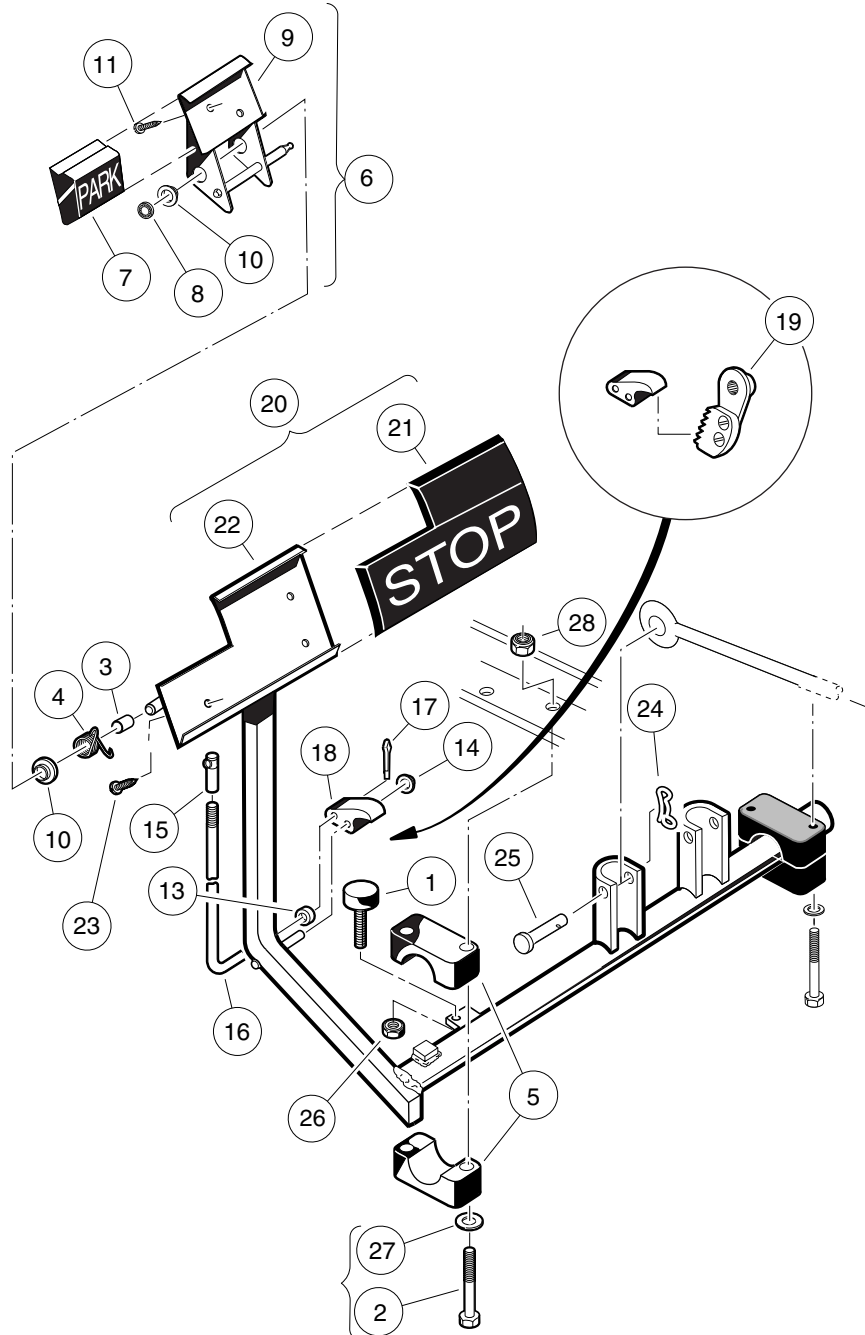

000187-003

BRAKE PEDAL ASSEMBLY – VEHICLES WITH FOUR-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>1010878</u>	Bumper, Rubber	1	E
2	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	4	
3	<u>1010927</u>	Hill Brake Spacer	1	
4	<u>1010933</u>	Spring, Hill Brake Torsion	1	
5	<u>1011402</u>	Package, Brake Mounting Block	1	
6	<u>1011418</u>	Kit, Hill Brake Pedal (includes items 7 through 11)	1	
7	<u>1013870</u>	Pad, Hill Brake	1	
8	<u>1013876</u>	Pushnut, 3/8	1	
9	N/A	Hill Brake Weld Assembly	1	
10	<u>1032</u>	Bushing, Nylon	2	
11	7716	Screw, #10-16 Type AB, Sheet Metal	2	
12	<u>101187702</u>	Kit, Hill Brake Latch (includes items 13 through 19)	1	
13	<u>1010805</u>	Sleeve, Hill Brake Rod	1	
14	<u>1010877</u>	Pushnut, 3/8	1	
15	1010932	Ball Joint, 1/4-28	1	
16	N/A	Rod, Hill Brake	1	
17	<u>1017029</u>	Pin, Cotter, 7/64 x 1/2 Stainless-Steel	1	
18	N/A	Pawl, Hill Brake	1	
19	101918501	Ratchet Assembly	1	
20	<u>101878201</u>	Brake Pedal Kit (includes items 21 through 23)	1	
21	<u>1013869</u>	Pad, Brake Pedal	1	
22	N/A	Weldment, Brake Pedal 4wb Std	1	
23	7716	Screw, #10-16 Type AB, Sheet Metal	3	
24	<u>102323101</u>	Pin, Bow Tie Locking	2	
25	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	2	
26	<u>1028</u>	Nut, 1/4-20 Hex	1	
27	<u>1241</u>	Washer, 5/16 Type A Flat	4	
28	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4	

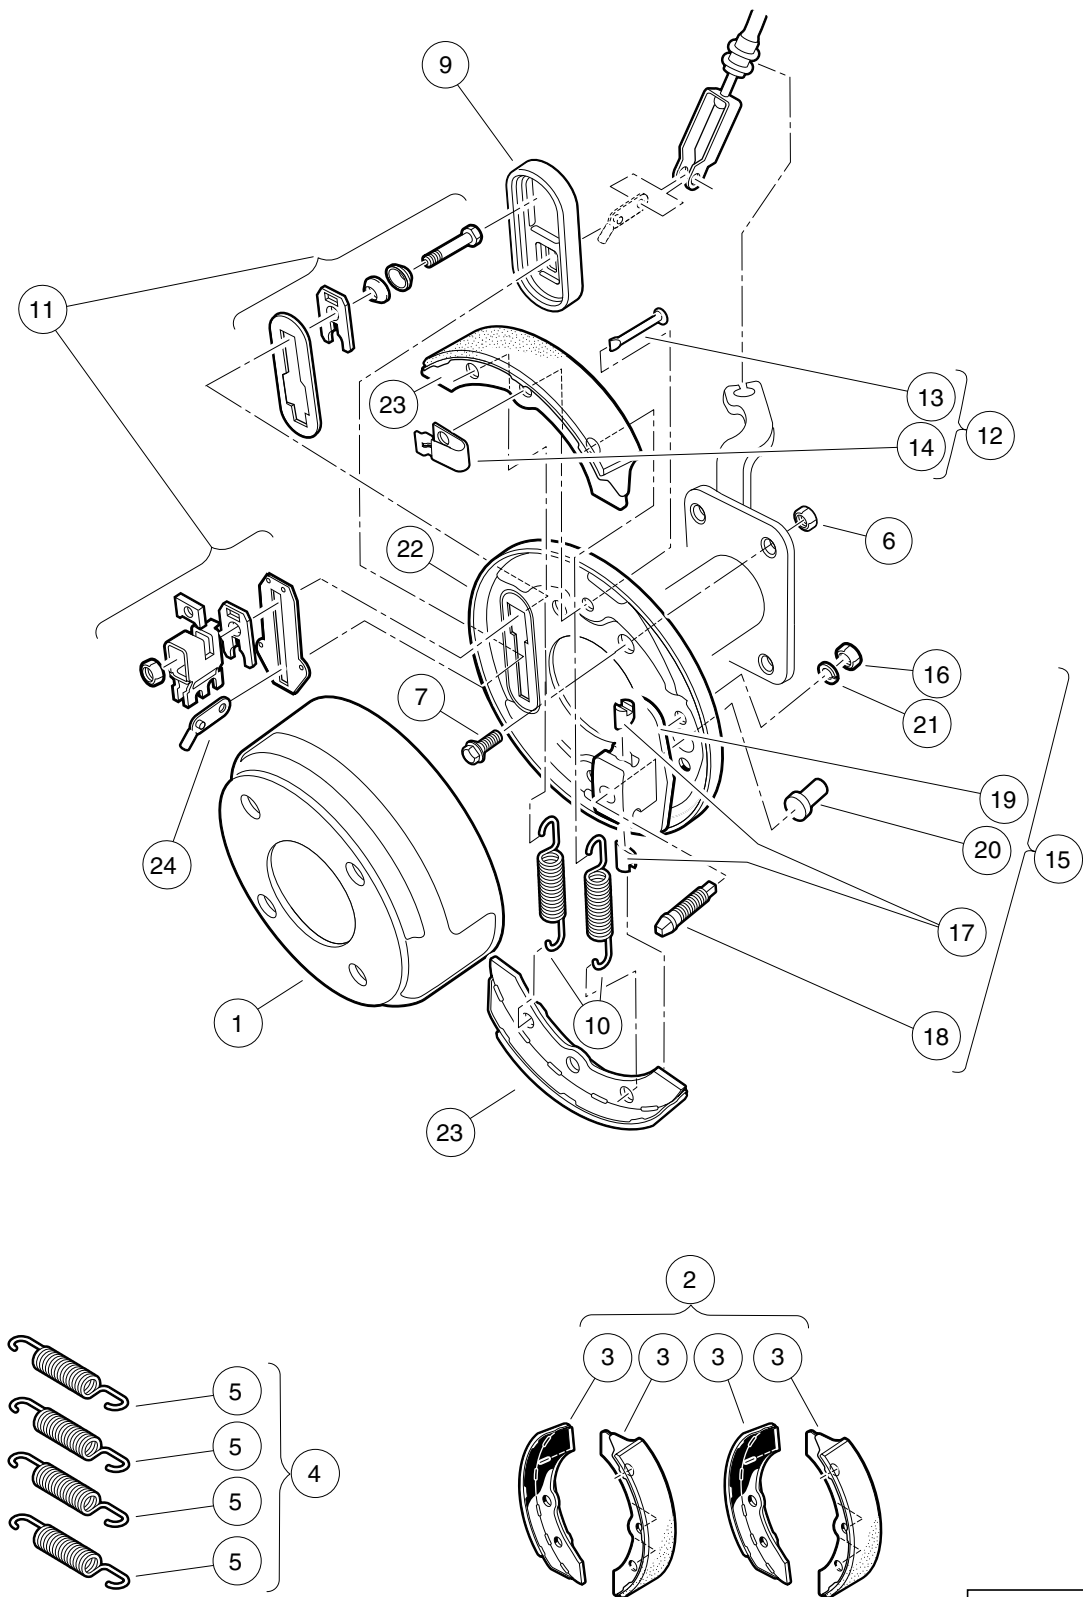

000298-001

FRONT BRAKE ASSEMBLY – VEHICLES WITH FOUR-WHEEL BRAKES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011137</u>	Drum, Brake	2
2	<u>101146302</u>	Kit, Non-Asbestos Brake Shoe (includes item 3)	1
3	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	4
4	<u>1011464</u>	Package, Brake Spring (includes item 5)	1
5	1011314	Brake Spring	4
6	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	8
7	<u>1014153</u>	Bolt, Brake Cluster Mounting	8
8	<u>1016557</u>	Cluster, Brake, Driver-Side (includes items 9 through 24)	1
9	<u>1010850</u>	Dust Cover	1
10	1011314	Brake Spring	2
11	<u>1011465</u>	Kit, Brake Actuator	1
12	<u>1011466</u>	Kit, Shoe Retainer (includes items 13 and 14)	1
13	1010953	Pin	2
14	1011301	Shoe Clamp Spring	2
15	<u>1011467</u>	Kit, Anchor Body (includes items 16 through 21)	1
16	<u>1011114</u>	Nut, M6-1.00 Hex	2
17	1011298	Anchor Piston	2
18	N/A	Adjustment Bolt	1
19	N/A	Anchor Body Component	1
20	<u>1011303</u>	Adjustment Bolt Cap	1
21	<u>451</u>	Lockwasher, 1/4 Split	2
22	1011494	Backing Plate, Left-Hand	1
23	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2
24	N/A	Arm, Brake Lever	1
25	<u>1016573</u>	Cluster, Brake, Passenger-Side (includes items 26 through 41)	1
26	<u>1010850</u>	Dust Cover	1
27	<u>1011154</u>	Backing Plate, Right-Hand	1
28	1011314	Brake Spring	2
29	<u>1011465</u>	Kit, Brake Actuator	1
30	<u>1011466</u>	Kit, Shoe Retainer (includes items 31 and 32)	1
31	1010953	Pin	2
32	1011301	Shoe Clamp Spring	2
33	<u>1011467</u>	Kit, Anchor Body (includes items 34 through 39)	1
34	<u>1011114</u>	Nut, M6-1.00 Hex	2
35	1011298	Anchor Piston	2
36	N/A	Adjustment Bolt	1
37	N/A	Anchor Body Component	1
38	<u>1011303</u>	Adjustment Bolt Cap	1
39	<u>451</u>	Lockwasher, 1/4 Split	2
40	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2
41	N/A	Arm, Brake Lever	1
Note: Passenger-side brake cluster not shown. Components have a similar appearance to driver-side brake cluster components.			

4
G
E

4

G

E

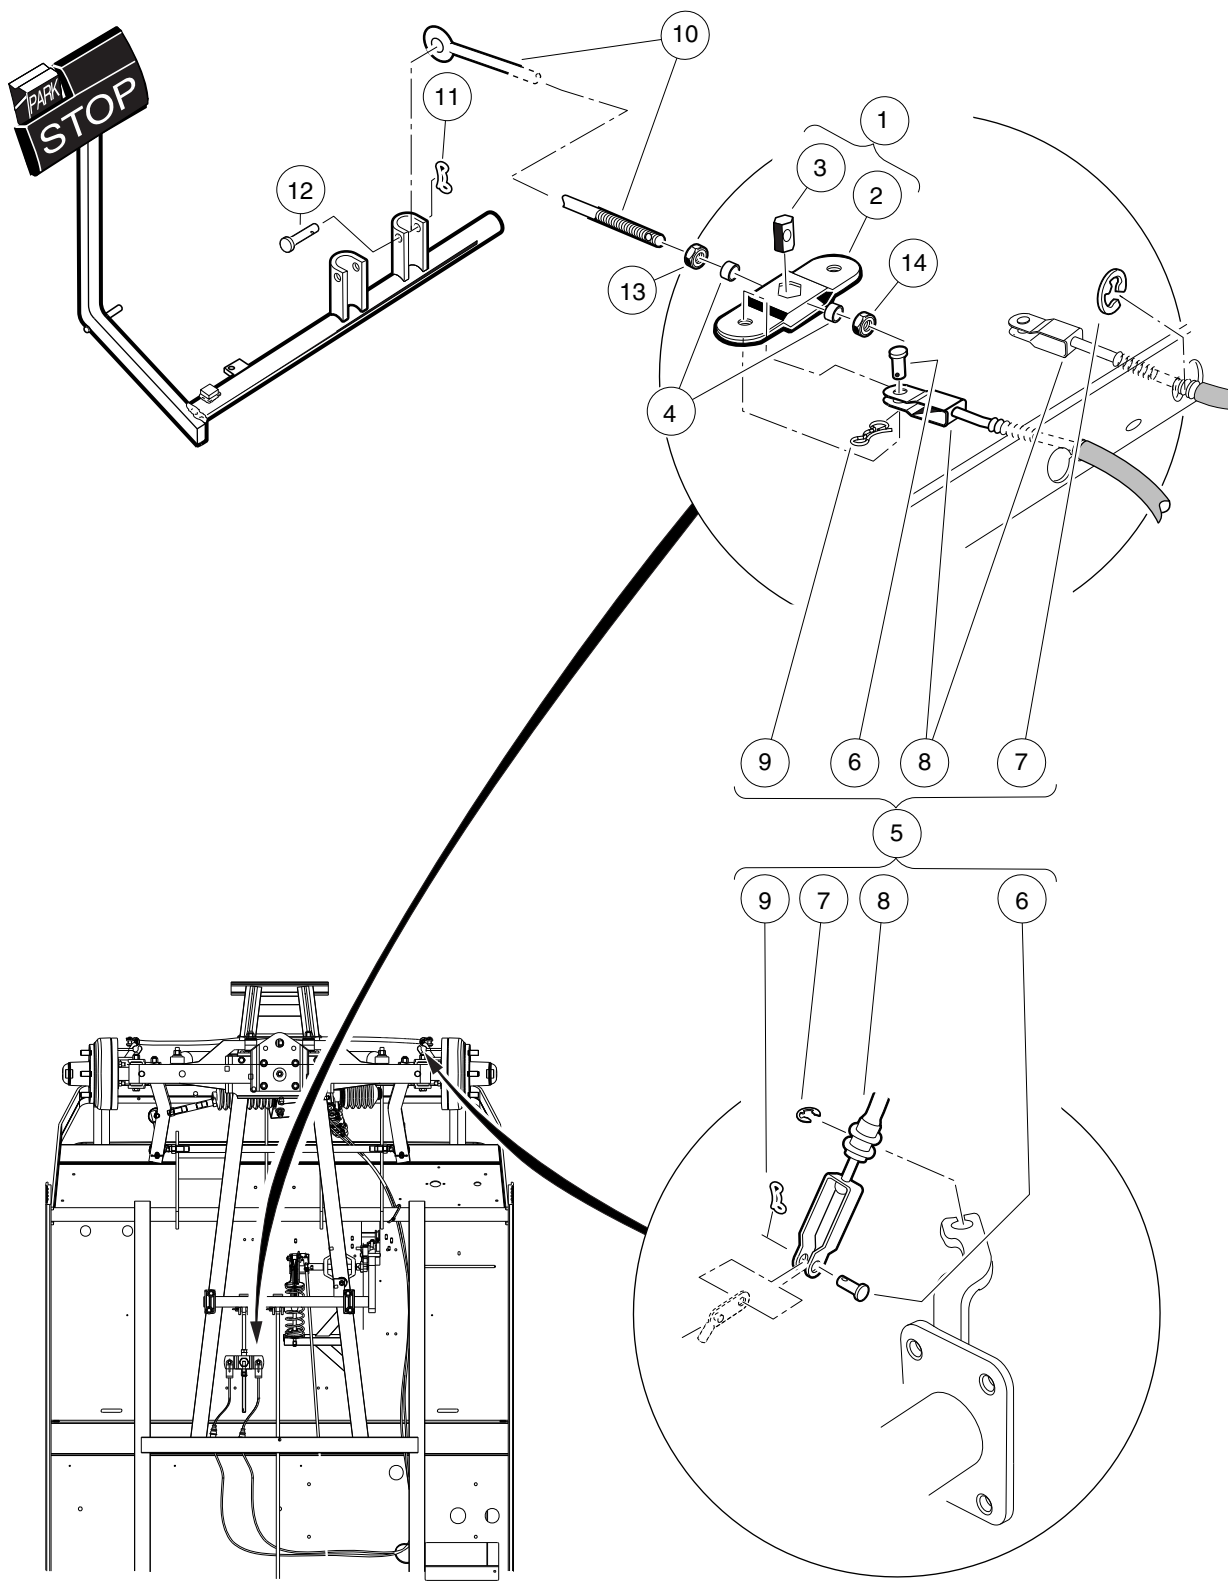

000294-001


FRONT BRAKE CABLES AND EQUALIZER – VEHICLES WITH FOUR-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1017211</u>	Kit, Equalizer and Pivot Limiter (includes items 2 and 3)	1	
2	<u>1016319</u>	Equalizer Weld Assembly	1	
3	<u>1016320</u>	Equalizer, Pivot Limiter	1	
4	<u>101865301</u>	Spacer	2	
5	<u>101874601</u>	Kit, Brake Cable (includes items 6 through 9)	1	
6	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	4	
7	<u>1011779</u>	E-Clip, 1/2	4	
8	N/A	Brake Cable	2	
9	<u>102292801</u>	Pin, Bow Tie Locking - .072	4	
10	<u>101953106</u>	Rod, Equalizer, 9.75"	1	
11	<u>102323101</u>	Pin, Bow Tie Locking	1	
12	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1	
13	<u>1242</u>	Nut, 5/16-18 Hex	1	
14	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	

4

G

E

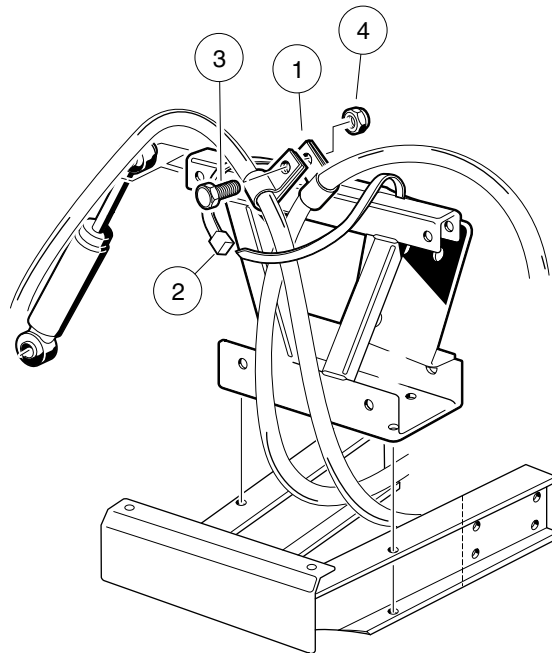

000305-001

FRONT BRAKE CABLE CLIPS AND HARDWARE – VEHICLES WITH FRONT-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101935301</u>	Clamp, Brake Cable	2
2	<u>102025401</u>	Tie Wrap, Heavy Duty	1
3	320	Screw, 3/8-16 X 1.00 Hex-Head Cap	1
4	<u>8754</u>	Locknut, 3/8-16 Hex	1

4


G

E

4

G


E

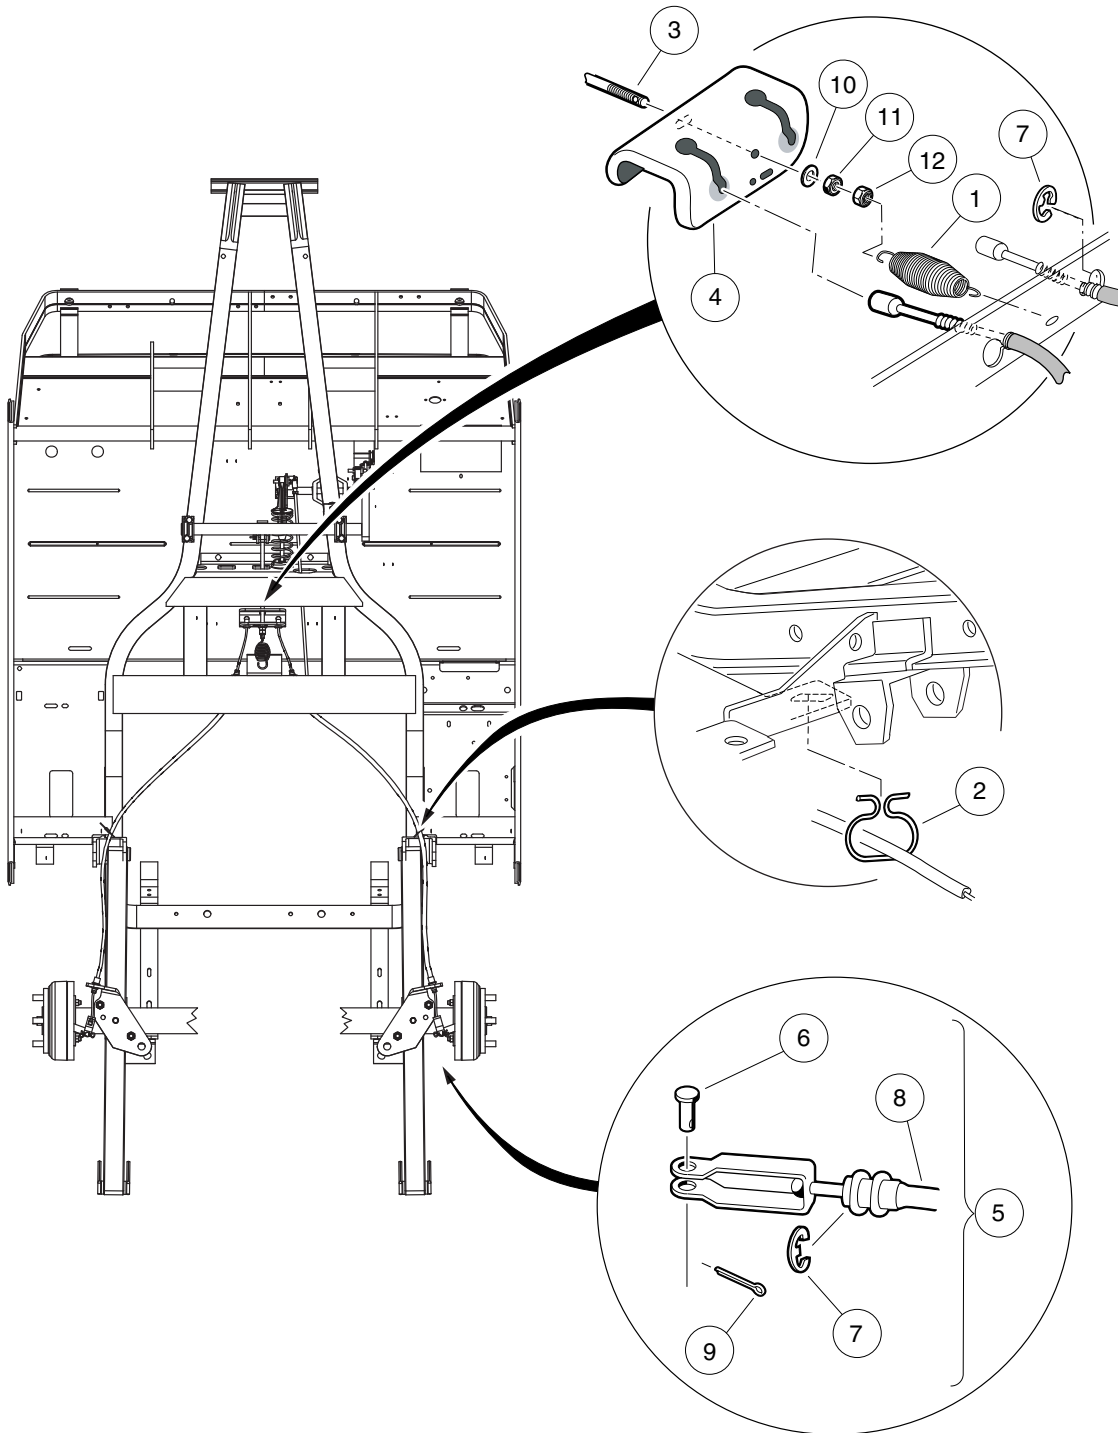

000245-001

BRAKE CABLE, EQUALIZER, AND EQUALIZER ROD – DS VILLAGER 4


ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1013531</u>	Spring, Brake Return	1	
2	<u>101900801</u>	Hanger, Brake Cable	2	
3	<u>101953101</u>	Rod, Equalizer, 8.91"	1	
4	<u>101990801</u>	Equalizer Bracket	1	
5	<u>102022101</u>	Brake Cable Kit (includes items 6 through 9)	2	
6	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	1	
7	<u>1011779</u>	E-Clip, 1/2	2	
8	N/A	Cable, Brake, 41"	1	
9	<u>1035</u>	Cotter Pin, 3/32 x 1	1	
10	<u>1241</u>	Washer, 5/16 Type A Flat	5	
11	<u>1242</u>	Nut, 5/16-18 Hex	1	
12	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	5	

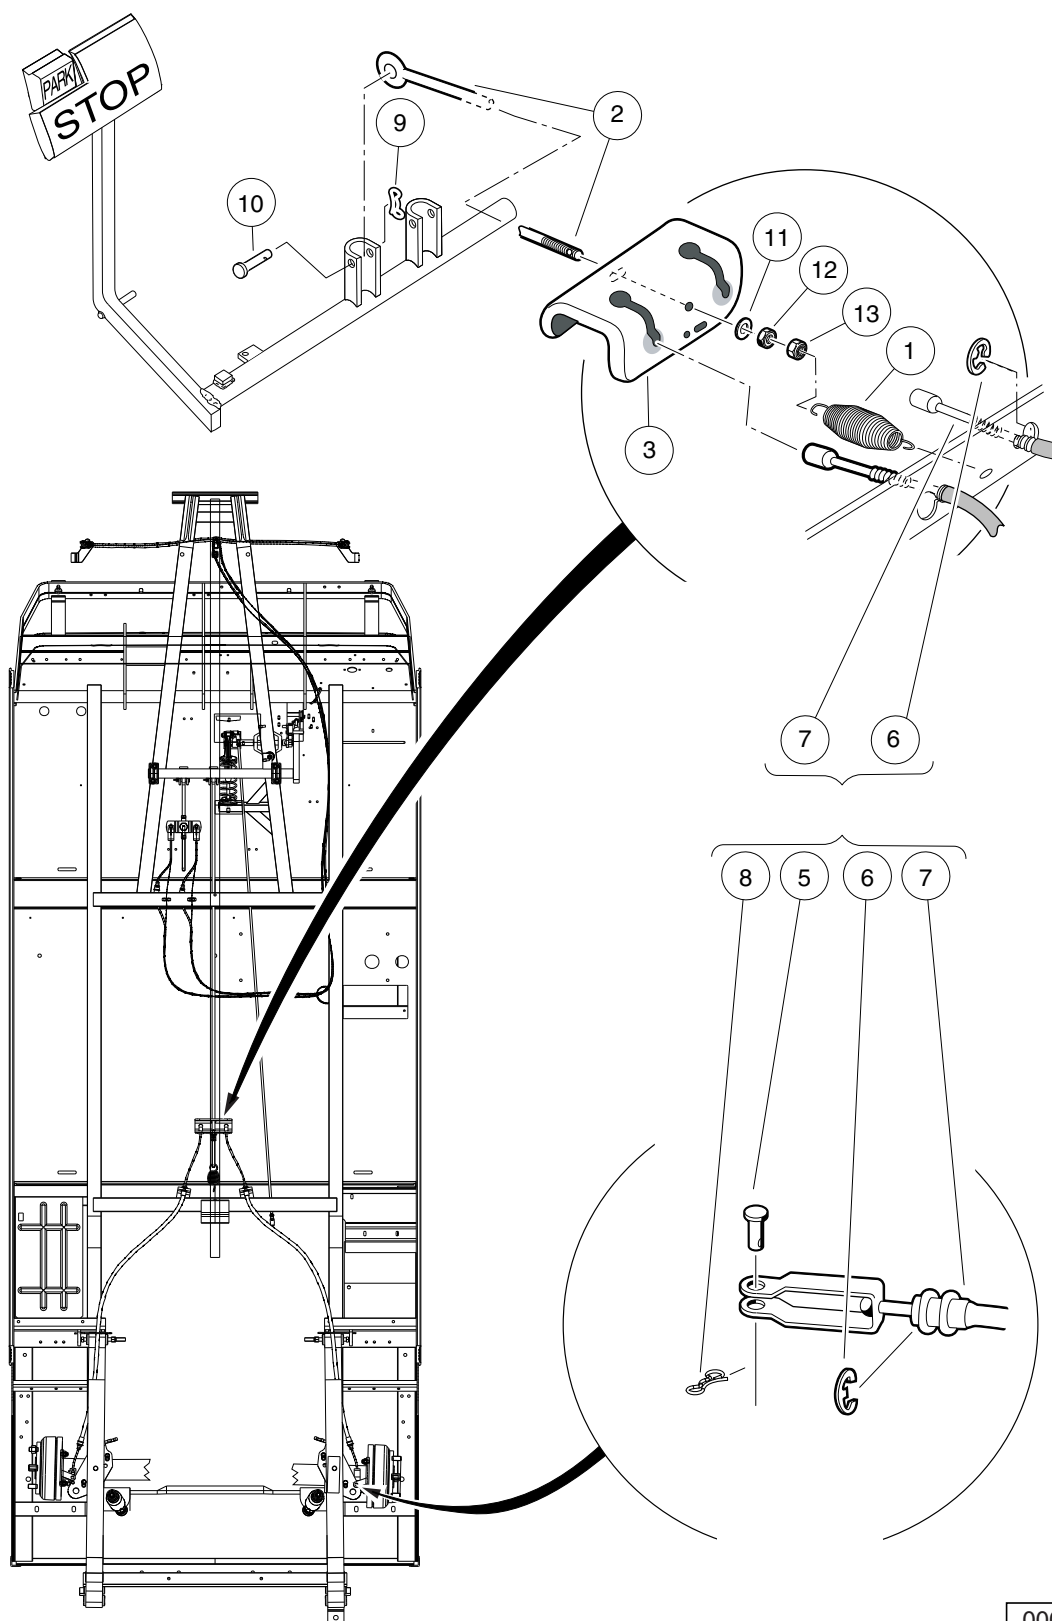

000296-004

REAR BRAKE CABLES AND EQUALIZER – VILLAGER 6, AND TRANSPORTER 4 AND 6


ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1013531</u>	Spring, Brake Return	1	
2	<u>101953103</u>	Rod, Equalizer	1	
3	<u>101990801</u>	Equalizer Bracket	1	
4	<u>102166901</u>	Kit, Brake Cable Rear (includes items 5 through 8)	1	
5	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	2	
6	<u>1011779</u>	E-Clip, 1/2	4	
7	<u>102162601</u>	Cable, Brake	2	
8	<u>102292801</u>	Pin, Bow Tie Locking - .072	2	
9	<u>102323101</u>	Pin, Bow Tie Locking	1	
10	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1	
11	<u>1241</u>	Washer, 5/16 Type A Flat	1	
12	<u>1242</u>	Nut, 5/16-18 Hex	1	
13	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	

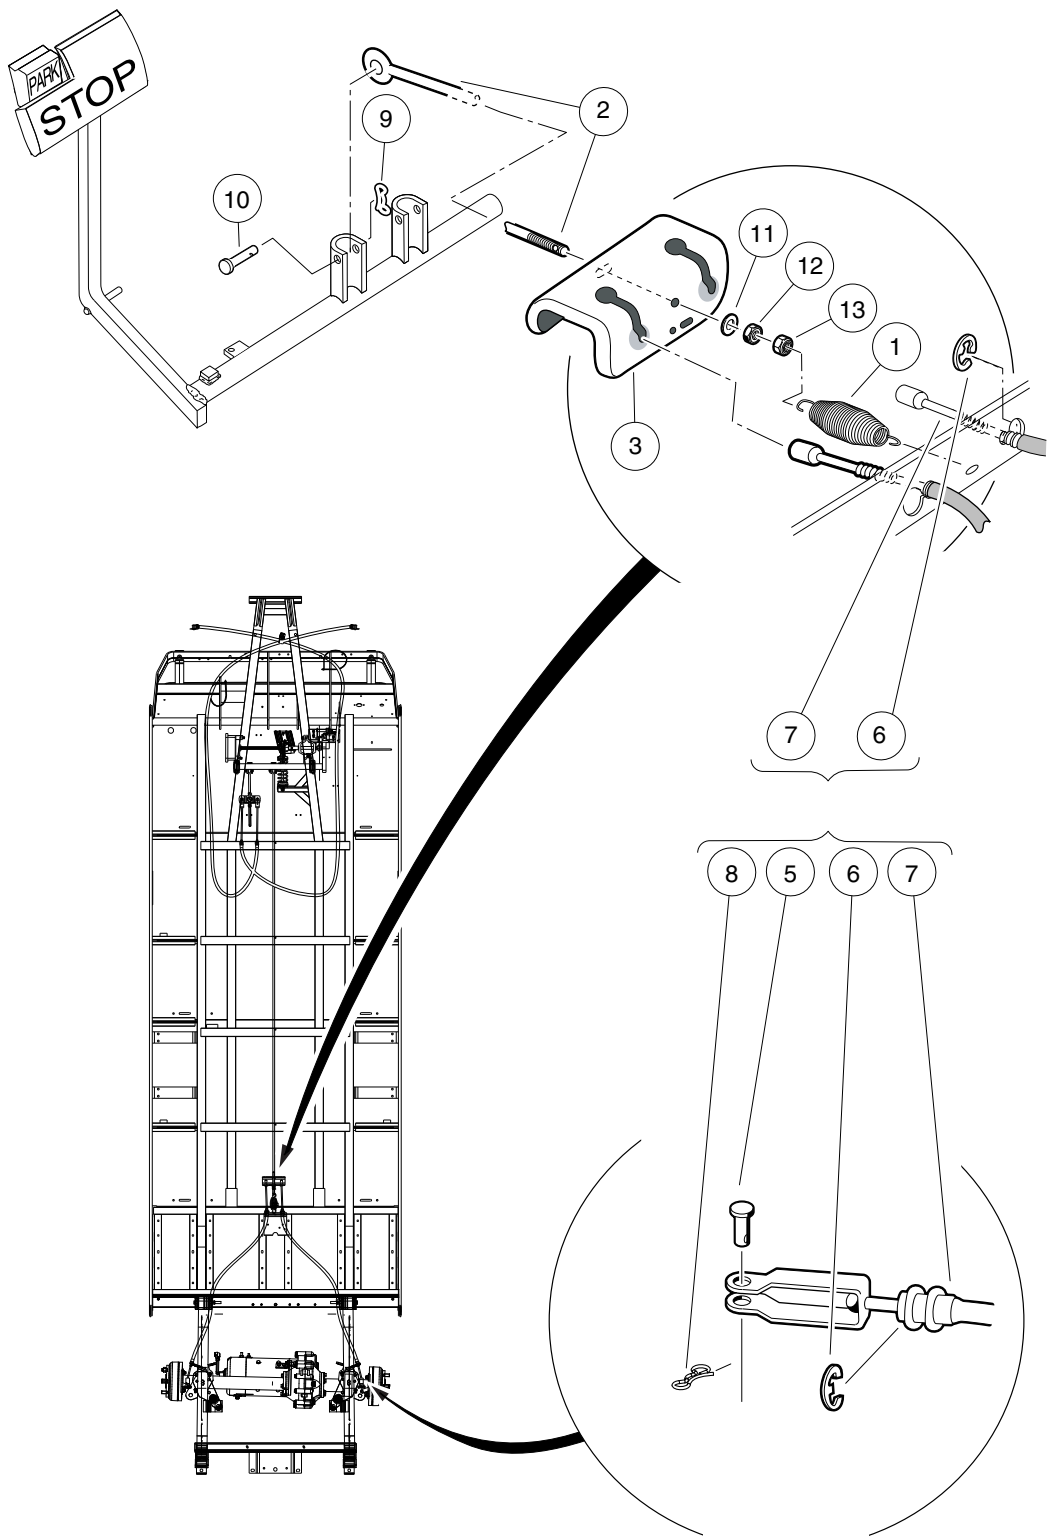

000296-003

REAR BRAKE CABLES, EQUALIZER, AND EQUALIZER ROD – VILLAGER 8 VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1013531</u>	Spring, Brake Return	1	
2	<u>101953104</u>	Rod, Equalizer	1	
3	<u>101990801</u>	Equalizer Bracket	1	
4	<u>102166901</u>	Kit, Brake Cable Rear (includes items 5 through 8)	1	
5	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	2	
6	<u>1011779</u>	E-Clip, 1/2	4	
7	<u>102162601</u>	Cable, Brake	2	
8	<u>102292801</u>	Pin, Bow Tie Locking - .072	2	
9	<u>102323101</u>	Pin, Bow Tie Locking	1	
10	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1	
11	<u>1241</u>	Washer, 5/16 Type A Flat	1	
12	<u>1242</u>	Nut, 5/16-18 Hex	1	
13	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	

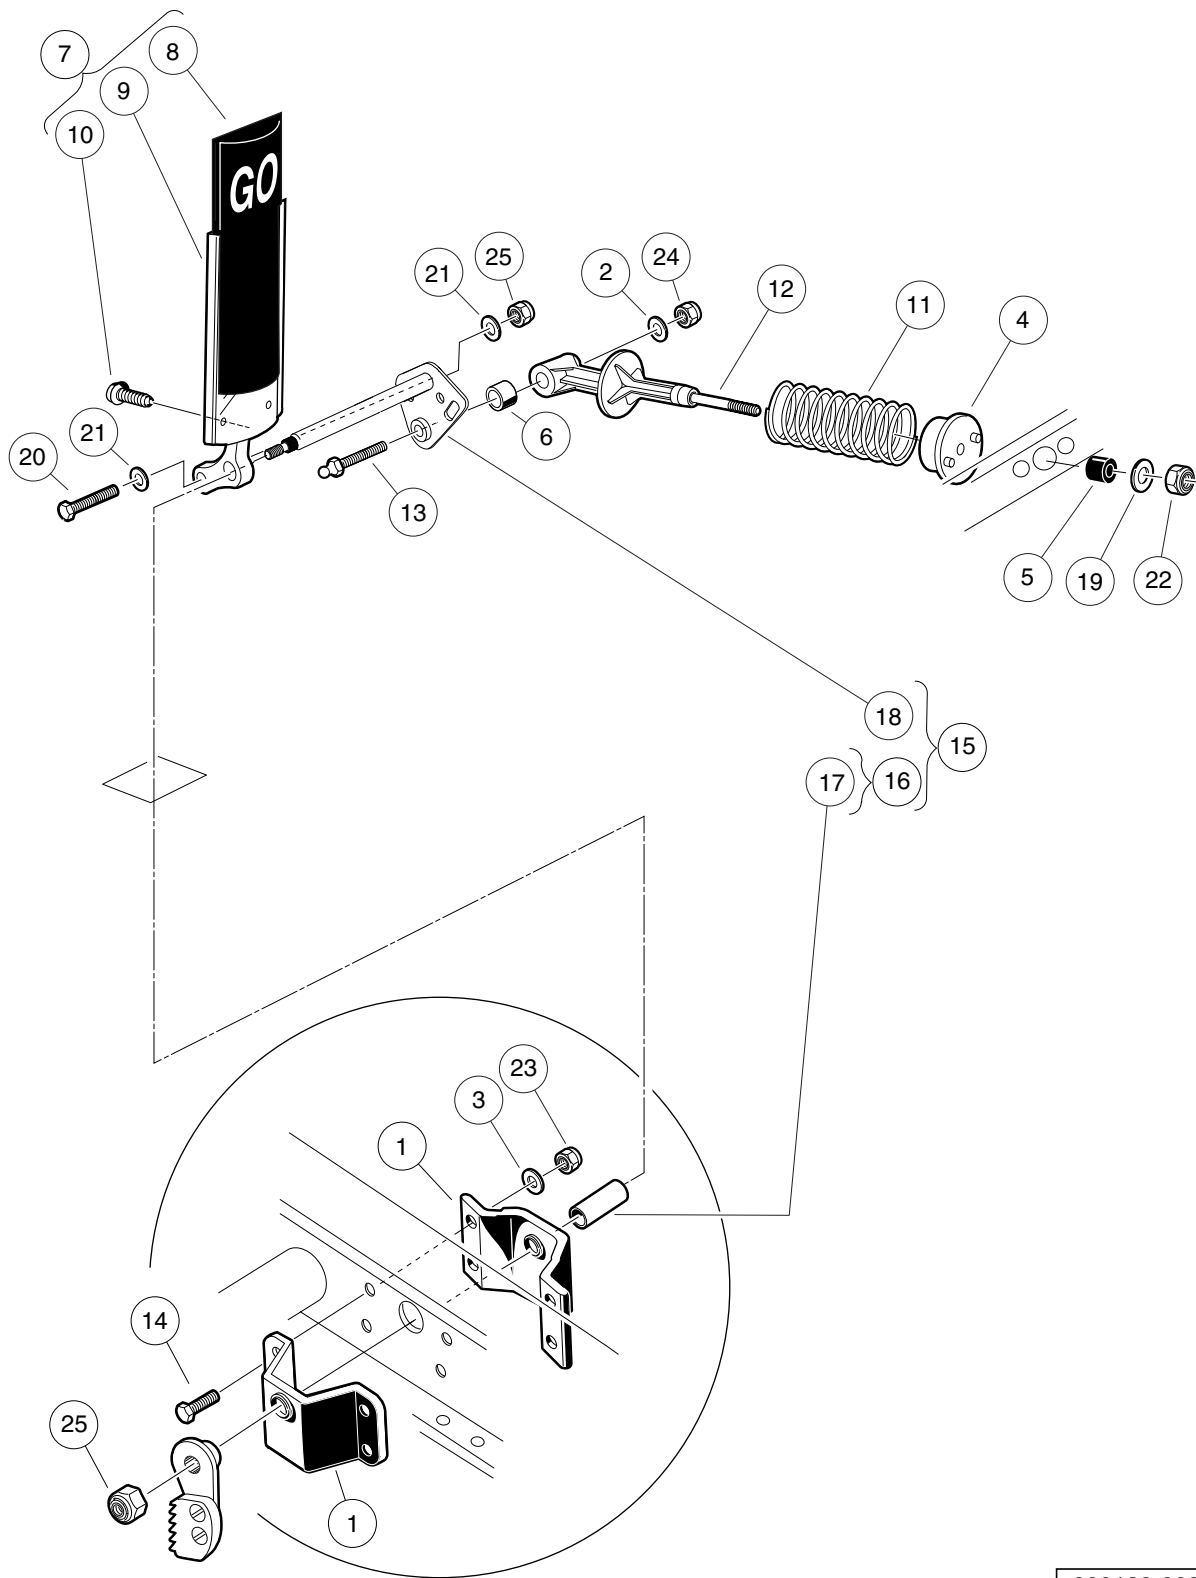

000188-003

ACCELERATOR PEDAL – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2	E
2	<u>1011931</u>	Washer, 1/4 Flat	1	
3	<u>1014007</u>	Washer, 1/4 Flat	4	
4	<u>1017378</u>	Cup, Spring	1	
5	<u>1017380</u>	Bumper, Spring Return	1	
6	<u>1017424</u>	Bearing, Pivot Support	1	
7	<u>1017696</u>	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1	
8	1013871	Pad, Accelerator Pedal	1	
9	N/A	Accelerator Pedal Weldment	1	
10	7716	Screw, #10-16 Type AB, Sheet Metal	4	
11	101796201	Spring, Accelerator Return	1	
12	<u>101817401</u>	Retainer, Spring	1	
13	101818801	Stud, 1/4-28 X 1.35 Ball	1	
14	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4	
15	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 16 through 18)	1	
16	<u>1011700</u>	Spacer Assembly (includes item 17)	1	
17	101919801	Spacer, Accelerator	1	
18	N/A	Pivot Rod Weldment	1	
19	<u>1241</u>	Washer, 5/16 Type A Flat	1	
20	<u>1624</u>	Screw, 3/8-16 X 1.50 Hex-Head Cap	1	
21	<u>334</u>	Washer, 3/8 Type A Flat	2	
22	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	
23	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4	
24	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1	
25	<u>8754</u>	Locknut, 3/8-16 Hex	2	

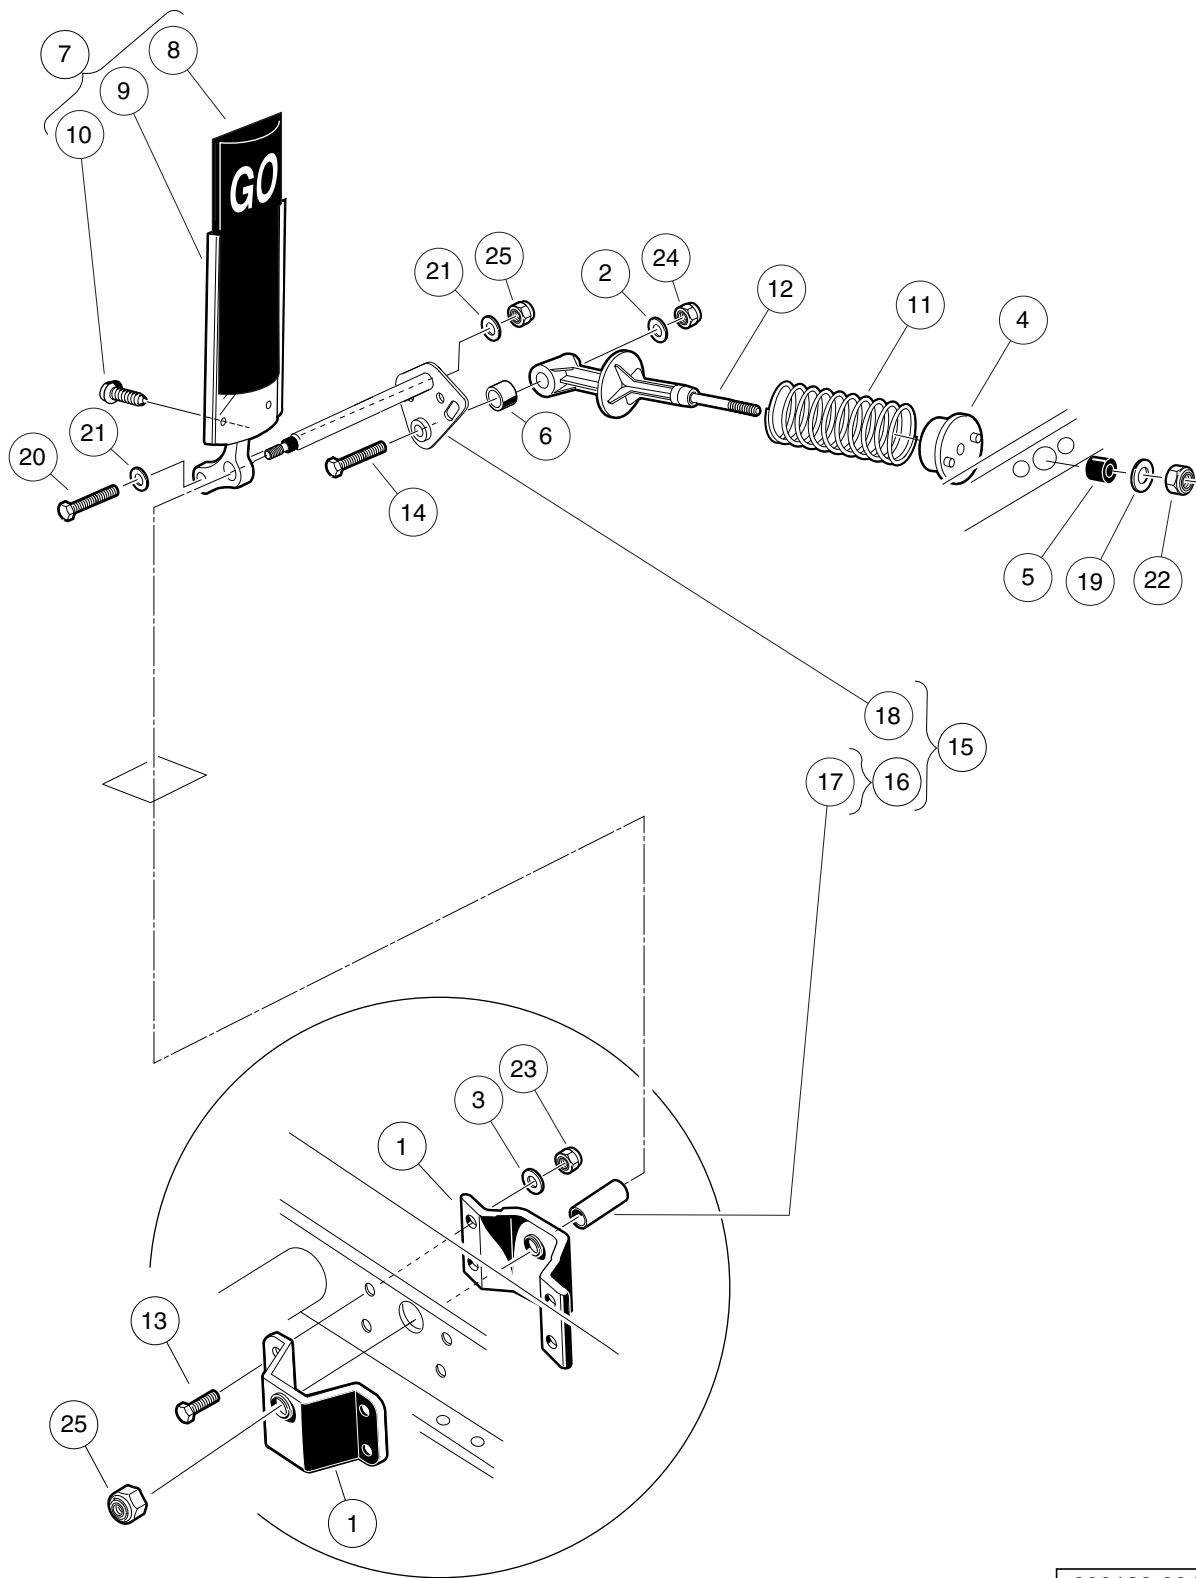

000188-004


ACCELERATOR PEDAL ASSEMBLY – ELECTRIC VEHICLES WITH MCOR

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2	
2	<u>1011931</u>	Washer, 1/4 Flat	1	
3	<u>1014007</u>	Washer, 1/4 Flat	4	
4	<u>1017378</u>	Cup, Spring	1	
5	<u>1017380</u>	Bumper, Spring Return	1	
6	<u>1017424</u>	Bearing, Pivot Support	1	
7	<u>1017696</u>	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1	
8	1013871	Pad, Accelerator Pedal	1	
9	N/A	Accelerator Pedal Weldment	1	
10	7716	Screw, #10-16 Type AB, Sheet Metal	4	
11	101796201	Spring, Accelerator Return	1	
12	<u>101817401</u>	Retainer, Spring	1	
13	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4	
14	<u>101862001</u>	Screw, 1/4-20 X 1.500 Flange	1	
15	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 16 through 18)	1	
16	<u>1011700</u>	Spacer Assembly (includes item 17)	1	
17	101919801	Spacer, Accelerator	1	
18	N/A	Pivot Rod Weldment	1	
19	<u>1241</u>	Washer, 5/16 Type A Flat	1	
20	<u>1624</u>	Screw, 3/8-16 X 1.50 Hex-Head Cap	1	
21	<u>334</u>	Washer, 3/8 Type A Flat	2	
22	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	
23	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4	
24	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1	
25	<u>8754</u>	Locknut, 3/8-16 Hex	2	

4

G


E

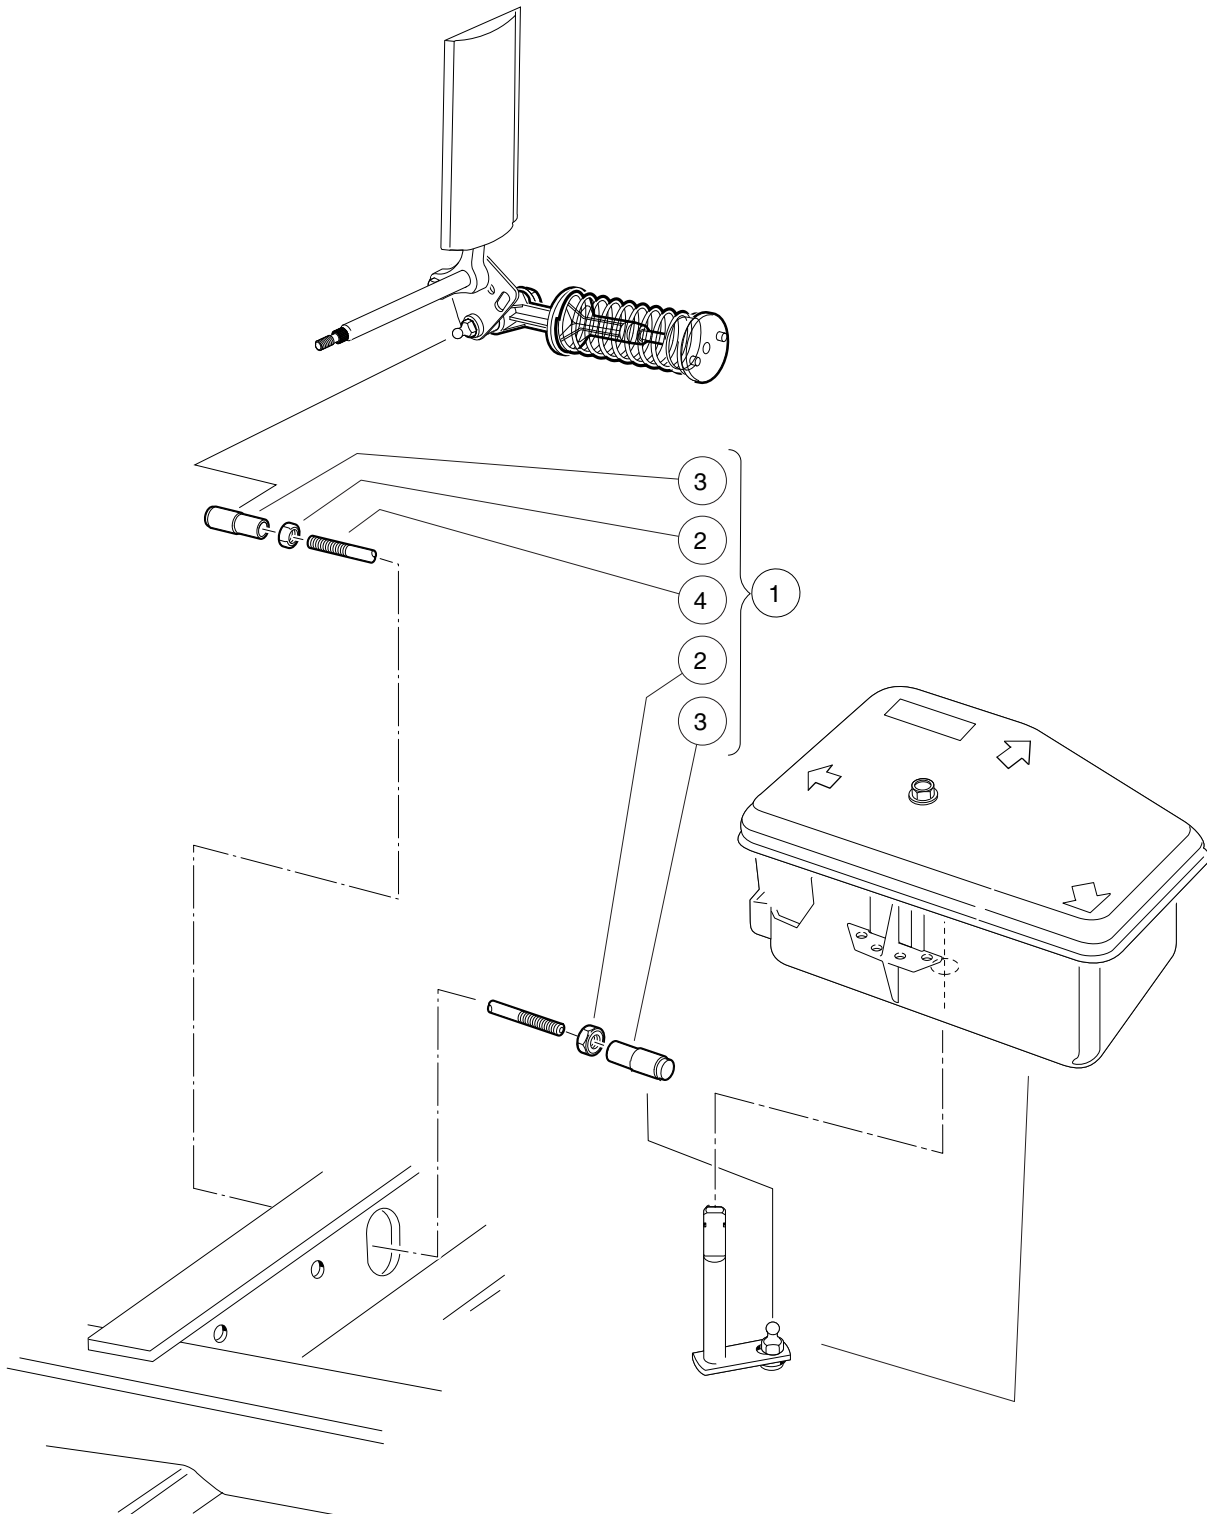

000362-001

ACCELERATOR ROD – GASOLINE DS VILLAGER 4

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		4
1	101912401	Rod, Accelerator (includes items 2 through 4)	1	G
2	<u>1011084</u>	Nut, 1/4-28 Hex Jam	2	E
3	<u>1011734</u>	Joint, Ball	2	
4	N/A	Accelerator Rod	1	
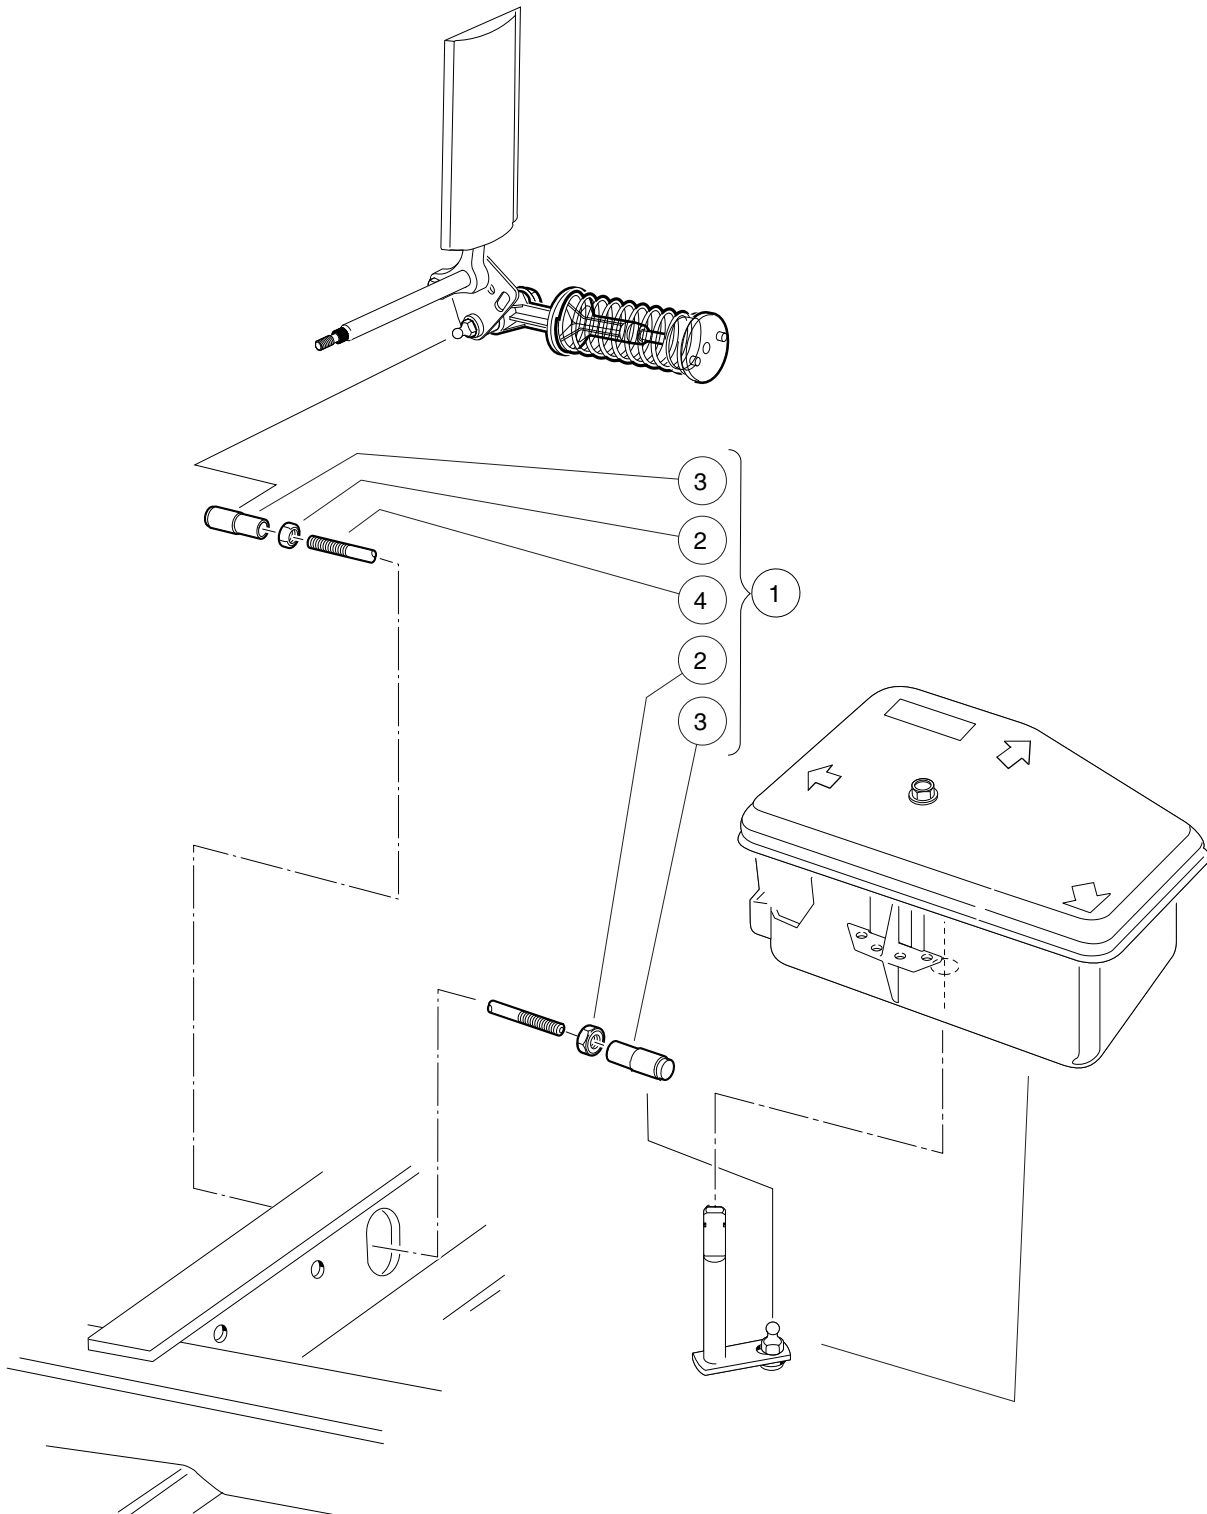
$$\frac{4}{G}E$$
G***E***

000362-001


ACCELERATOR ROD – GASOLINE VILLAGER 6, AND TRANSPORTER 4 AND 6

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>101674702</u>	Rod, Accelerator (includes items 2 through 4)	1	E
2	<u>1011084</u>	Nut, 1/4-28 Hex Jam	2	
3	<u>1011734</u>	Joint, Ball	2	
4	N/A	Accelerator Rod Elec Stretch	1	

4

G

E

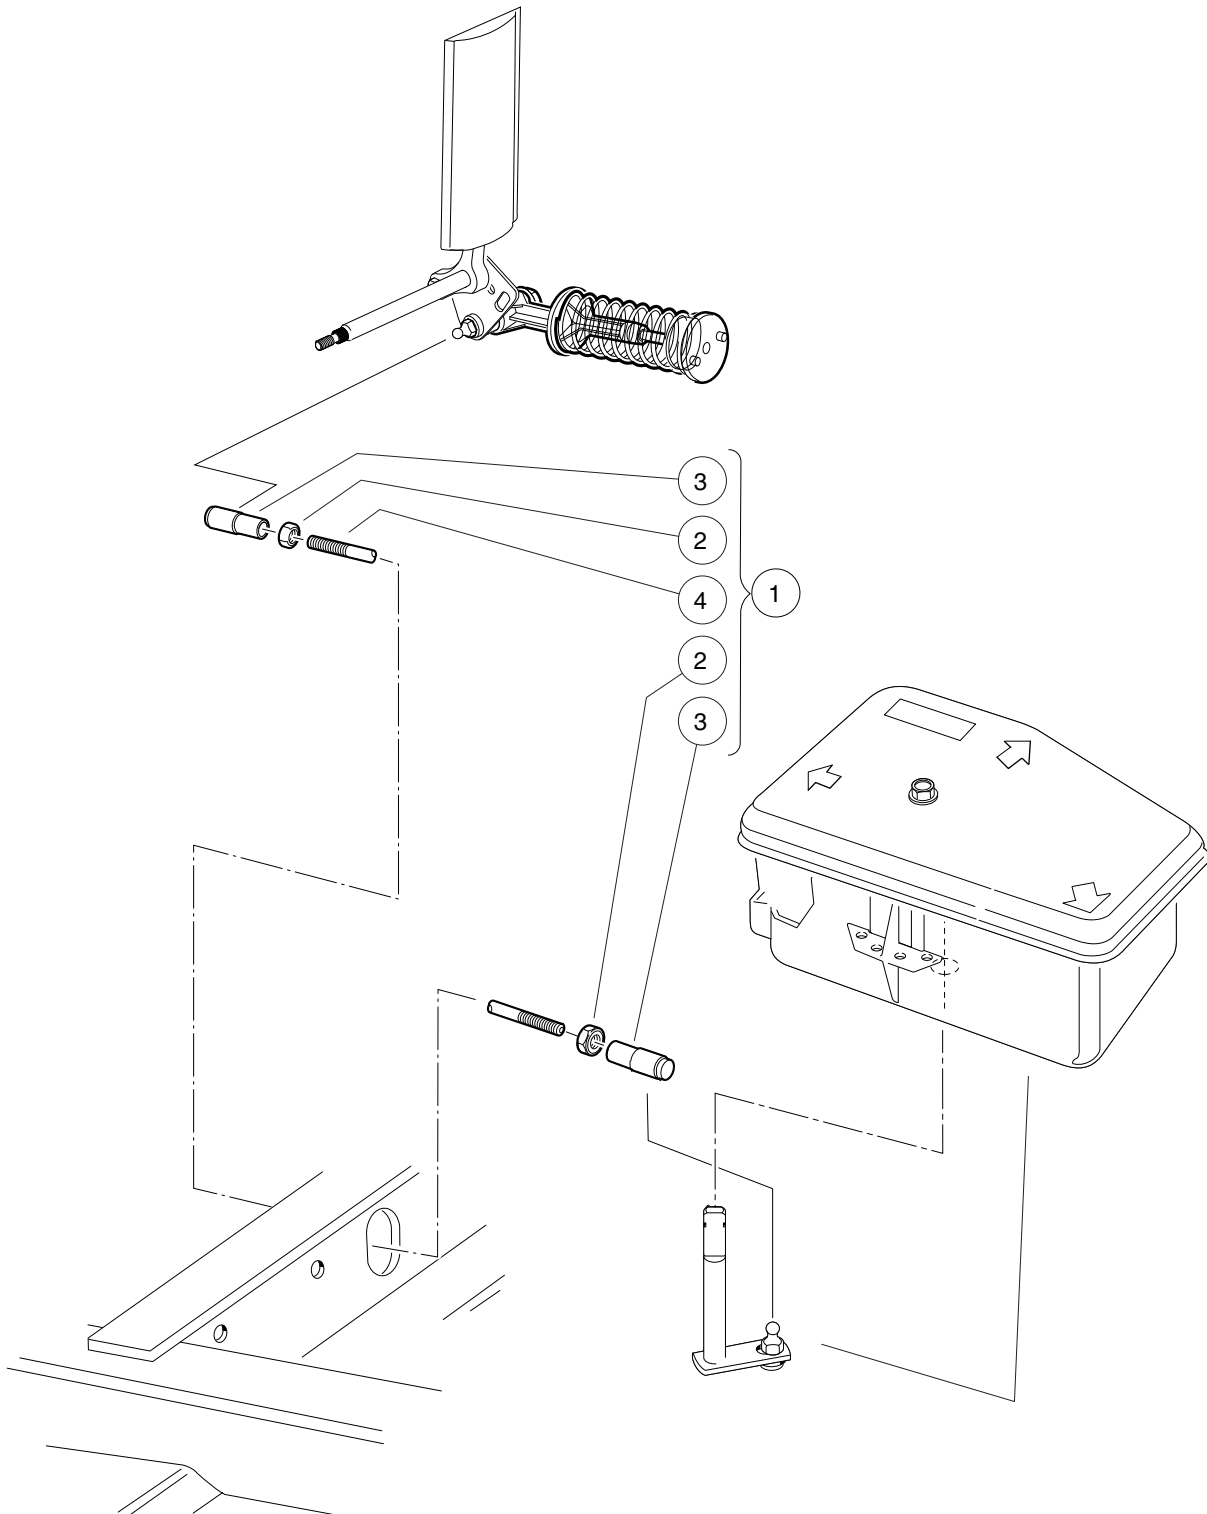

000362-001

ACCELERATOR ROD – GASOLINE VILLAGER 8

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		4
1	<u>101674704</u>	Accelerator Rod Assembly, RV XL (includes items 2 through 4)	1	G
2	<u>1011084</u>	Nut, 1/4-28 Hex Jam	2	E
3	<u>1011734</u>	Joint, Ball	2	
4	N/A	Accelerator Rod, RV XL	1	

4
G
E

STEERING, FRONT AND REAR SUSPENSION

5


G

E

5

G

E

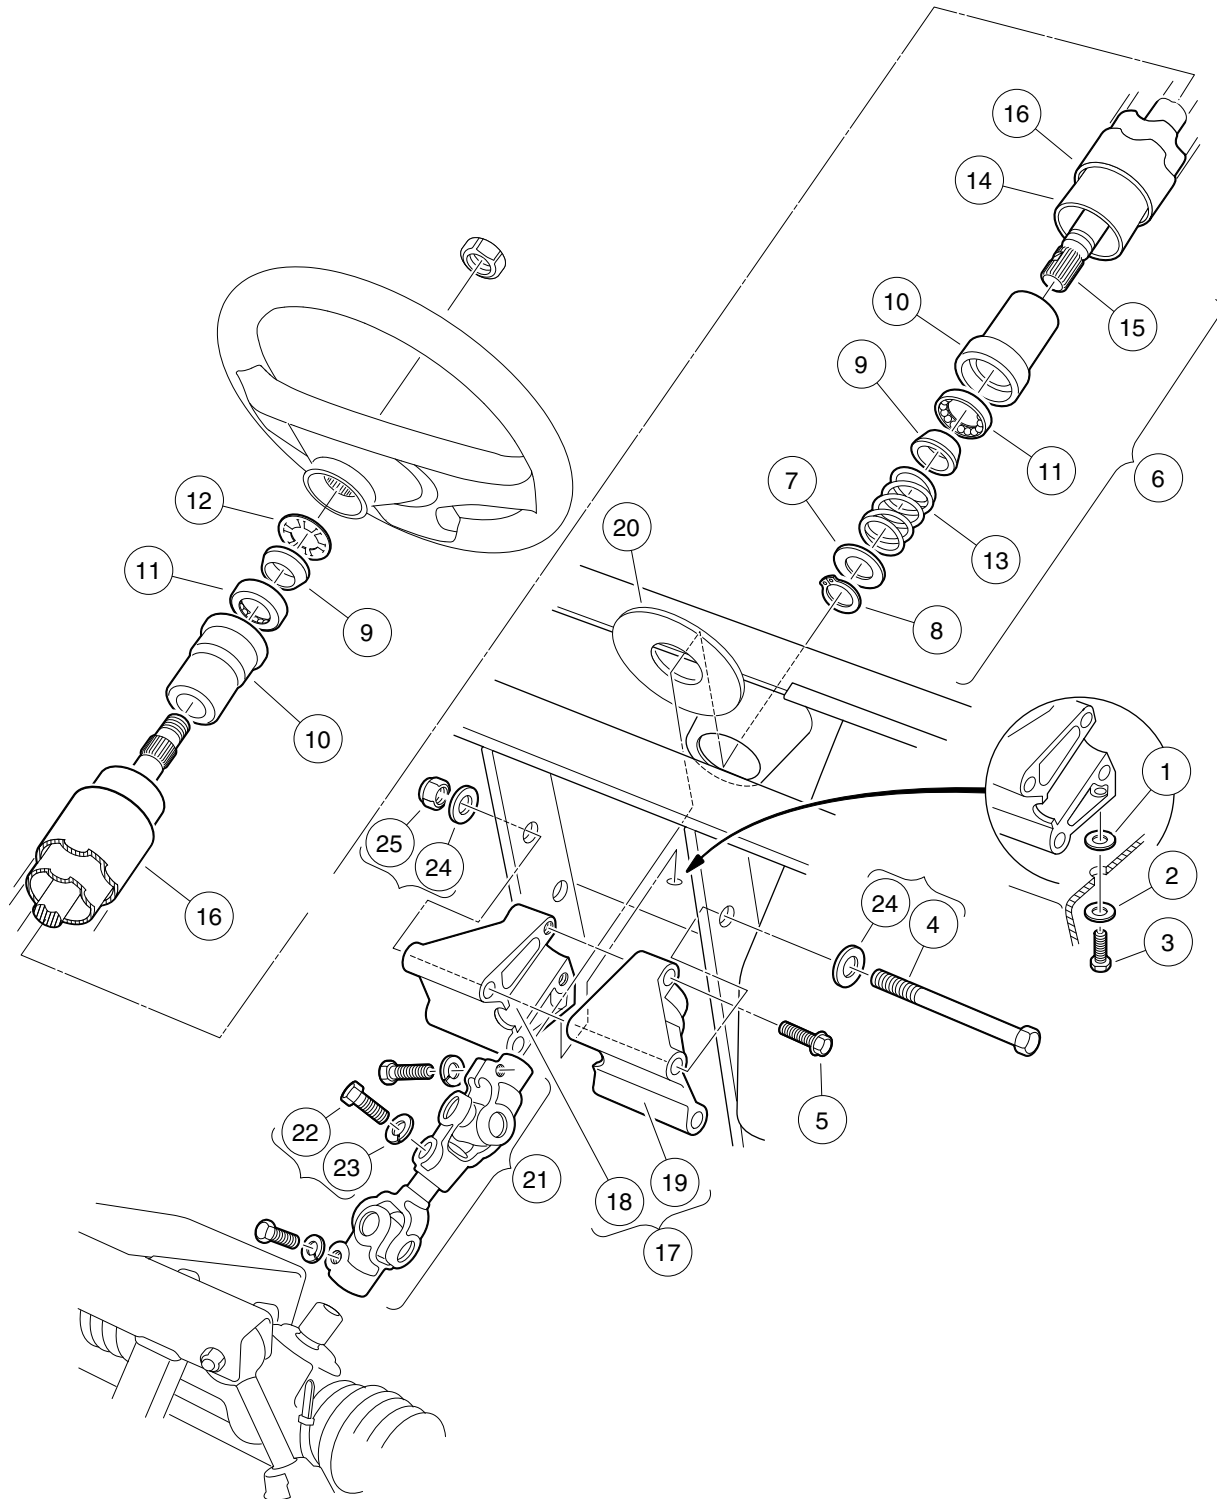

000247-001

STEERING COLUMN – VILLAGER 6 AND 8

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011578</u>	Washer, 5/16 Type B Flat	1
2	<u>1011697</u>	Washer, 5/16 Flat	1
3	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	1
4	<u>1016183</u>	Screw, 3/8-16 X 7.00 Hex Cap	2
5	<u>1016269</u>	Screw, 5/16-18 Thrd Forming	2
6	<u>1017313</u>	Steering Shaft Assembly (includes items 7 through 15)	1
7	<u>1012604</u>	Washer, 0.675 ID X 1.19 OD	1
8	<u>1012605</u>	Ring, 0.579 Internal Retaining	1
9	<u>1014125</u>	Wedge, Molded	2
10	<u>1014126</u>	Seat, Plastic Bearing	2
11	<u>1014213</u>	Bearing, Ball	2
12	<u>1014214</u>	Ring, Retaining	1
13	<u>1014217</u>	Spring, Steering Shaft	1
14	<u>1017314</u>	Column, Aluminum Steering	1
15	<u>1017315</u>	Shaft Steering Column	1
16	<u>1017317</u>	Tube Cover, Steering Column	1
17	101984801	Kit, Steering Column Mounting Bracket (includes items 18 and 19)	1
18	N/A	Bracket, RH Steering Column Mount	1
19	N/A	Bracket, LH Steering column mount	1
20	<u>102278001</u>	Boot, Steering Column Round	1
21	<u>103601601</u>	Shaft, Intermediate Steering (includes items 22 and 23)	1
22	<u>1017226</u>	Bolt, Hex-Head, 8mm X 1.25 - 30	3
23	<u>7174</u>	Lockwasher, 5/16 Split	3
24	<u>334</u>	Washer, 3/8 Type A Flat	4
25	<u>8754</u>	Locknut, 3/8-16 Hex	2

5


G

E

5

G

E

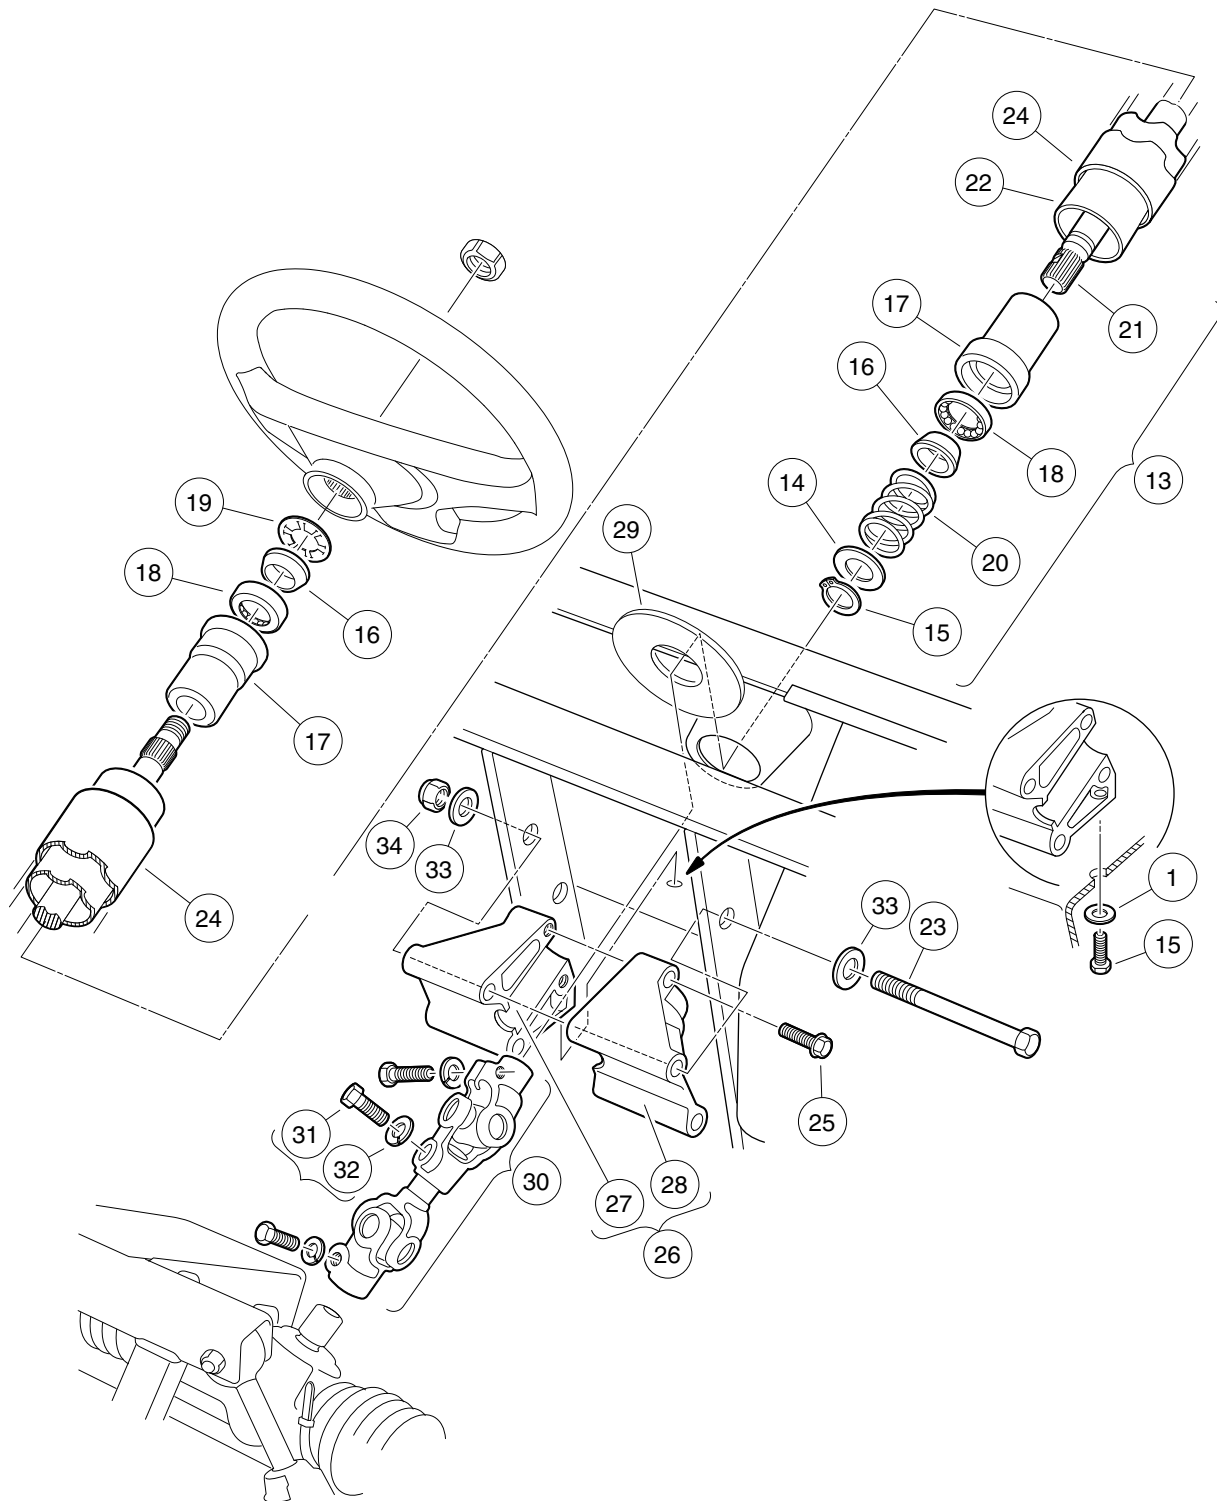

000247-002


STEERING COLUMN – ALL VEHICLES EXCEPT VILLAGER 6 AND 8

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1011697</u>	Washer, 5/16 Flat	1	
2	<u>1014216</u>	Steering Column Rebuild Kit (includes items 3 through 11)	1	
3	<u>1012466</u>	Dust Cover	1	
4	<u>1012605</u>	Ring, 0.579 Internal Retaining	1	
5	<u>1014125</u>	Wedge, Molded	2	
6	<u>1014126</u>	Seat, Plastic Bearing	2	
7	<u>1014211</u>	Seal, Bearing	1	
8	<u>1014212</u>	Spacer, Shaft	1	
9	<u>1014213</u>	Bearing, Ball	2	
10	<u>1014214</u>	Ring, Retaining	1	
11	<u>1014217</u>	Spring, Steering Shaft	1	
12	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	1	
13	<u>1016181</u>	Steering Shaft Assembly (includes items 14 through 22)	1	
14	<u>1012604</u>	Washer, 0.675 ID X 1.19 OD	1	
15	<u>1012605</u>	Ring, 0.579 Internal Retaining	1	
16	<u>1014125</u>	Wedge, Molded	2	
17	<u>1014126</u>	Seat, Plastic Bearing	2	
18	<u>1014213</u>	Bearing, Ball	2	
19	<u>1014214</u>	Ring, Retaining	1	
20	<u>1014217</u>	Spring, Steering Shaft	1	
21	<u>1015545</u>	Shaft, Steering Column	1	
22	<u>1016622</u>	Column, Aluminum Steering	1	
23	<u>1016183</u>	Screw, 3/8-16 X 7.00 Hex Cap	2	
24	<u>1016263</u>	Cover, Steering Column Tube	1	
25	<u>1016269</u>	Screw, 5/16-18 Thrd Forming	2	
26	<u>101984801</u>	Kit, Steering Column Mounting Bracket (includes items 27 and 28)	1	
27	N/A	Bracket, RH Steering Column Mount	1	
28	N/A	Bracket, LH Steering column mount	1	
29	<u>102278001</u>	Boot, Steering Column Round	1	
30	<u>103601601</u>	Shaft, Intermediate Steering (includes items 31 and 32)	1	
31	<u>1017226</u>	Bolt, Hex-Head, 8mm X 1.25 - 30	3	
32	<u>7174</u>	Lockwasher, 5/16 Split	3	
33	<u>334</u>	Washer, 3/8 Type A Flat	4	
34	<u>8754</u>	Locknut, 3/8-16 Hex	2	

5

G

E

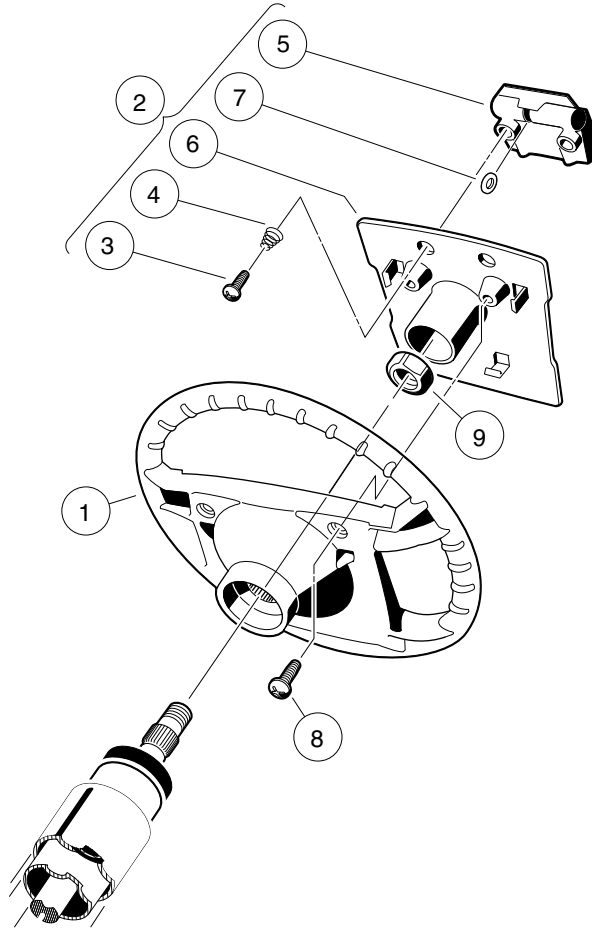

000246-002


STEERING WHEEL

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1016156</u>	Wheel, Steering	1	
2	<u>1016219</u>	Plate, Scorecard (includes items 3 through 7)	1	
3	<u>1012565</u>	Screw, #12 Phillips Round Head	2	
4	<u>1012566</u>	Tapered Compression Spring	2	
5	<u>1016154</u>	Clip, Scorecard	1	
6	N/A	Plate, Score Card	1	
7	N/A	Pencil Grip	1	
8	<u>1016663</u>	Screw, #12-14 X 0.625	2	
9	<u>1017273</u>	Nut, 5/8-18 Nylon Insert Jam	1	

5

G

E

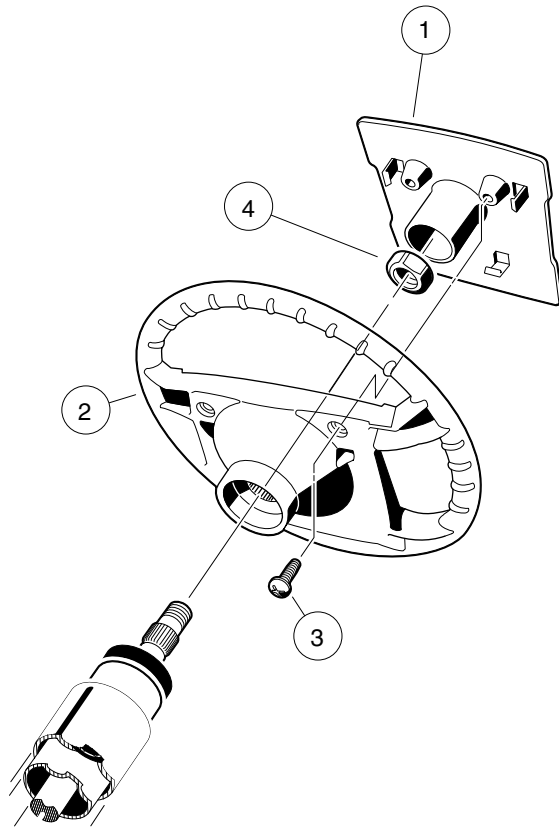

000246-003


STEERING WHEEL – ALL VEHICLES EXCEPT DS VILLAGER 4

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>101615504</u>	Plate, Scorecard	1	
2	<u>1016156</u>	Wheel, Steering	1	
3	<u>1016663</u>	Screw, #12-14 X 0.625	2	
4	<u>1017273</u>	Nut, 5/8-18 Nylon Insert Jam	1	

5

G


E

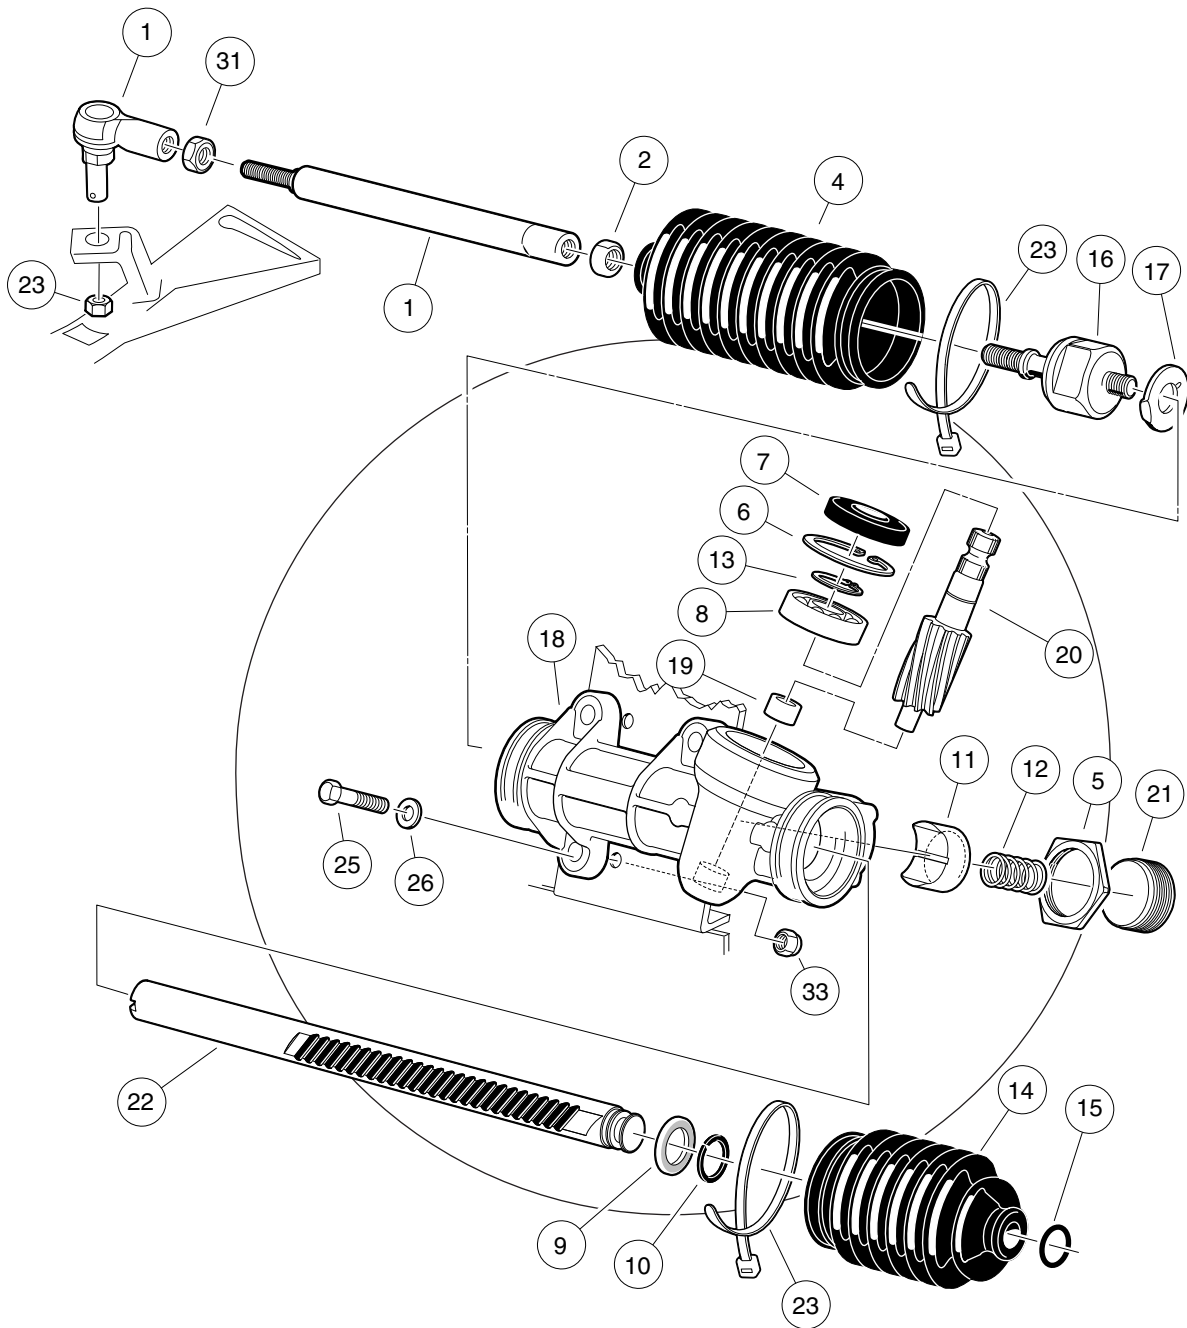

000189-001

STEERING GEAR ASSEMBLY


ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1012467</u>	Link, Rack and Pinion Drag	1	
2	<u>1013042</u>	Nut, 12mm Hex	1	
3	<u>101878302</u>	Steering Gear Assembly (without yoke) (includes items 4 through 23)	1	
4	<u>1013035</u>	Bellows, Long	1	
5	<u>1013044</u>	Rack Screw Locknut	1	
6	<u>1013051</u>	Snap Ring	1	
7	<u>1013052</u>	Seal, Steering Pinion Dust	1	
8	<u>101879401</u>	Bearing, Ball	1	
9	<u>101879501</u>	Stop Washer	1	
10	<u>101879601</u>	Stop Ring, C-Type	1	
11	<u>101879701</u>	Support Yoke	1	
12	<u>101879801</u>	Rack Guide Pressure Spring	1	
13	<u>101879901</u>	Ring, Stop, C-Type	1	
14	<u>101880001</u>	Bellows, Short	1	
15	<u>101880101</u>	Dust Seal Retaining Ring	1	
16	<u>101880201</u>	Inner Ball Joint Asm	1	
17	<u>101880301</u>	Washer, Tab	1	
18	N/A	Box, Steering Gear	1	
19	N/A	Bearing, Lower Pinion	1	
20	N/A	Pinion, Steering	1	
21	N/A	Screw, Rack Guide	1	
22	N/A	Rack, Steering	1	
23	<u>8990</u>	Tie Wrap, 8" Nylon	2	
24	<u>1035</u>	Cotter Pin, 3/32 x 1	1	
25	<u>1624</u>	Screw, 3/8-16 X 1.50 Hex-Head Cap	3	
26	<u>334</u>	Washer, 3/8 Type A Flat	3	
27	<u>7540</u>	Ball Joint, Left (includes items 28 through 31)	1	
28	<u>1011895</u>	Socket, LH Vertical	1	
29	<u>1011930</u>	Seal, Vertical Socket Dust	1	
30	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
31	<u>7602</u>	Nut, 3/8-24 UNF Hex	1	
32	<u>7555</u>	Nut, 1/2-20 Hex, Left-Hand Thread	1	
33	<u>8754</u>	Locknut, 3/8-16 Hex	3	

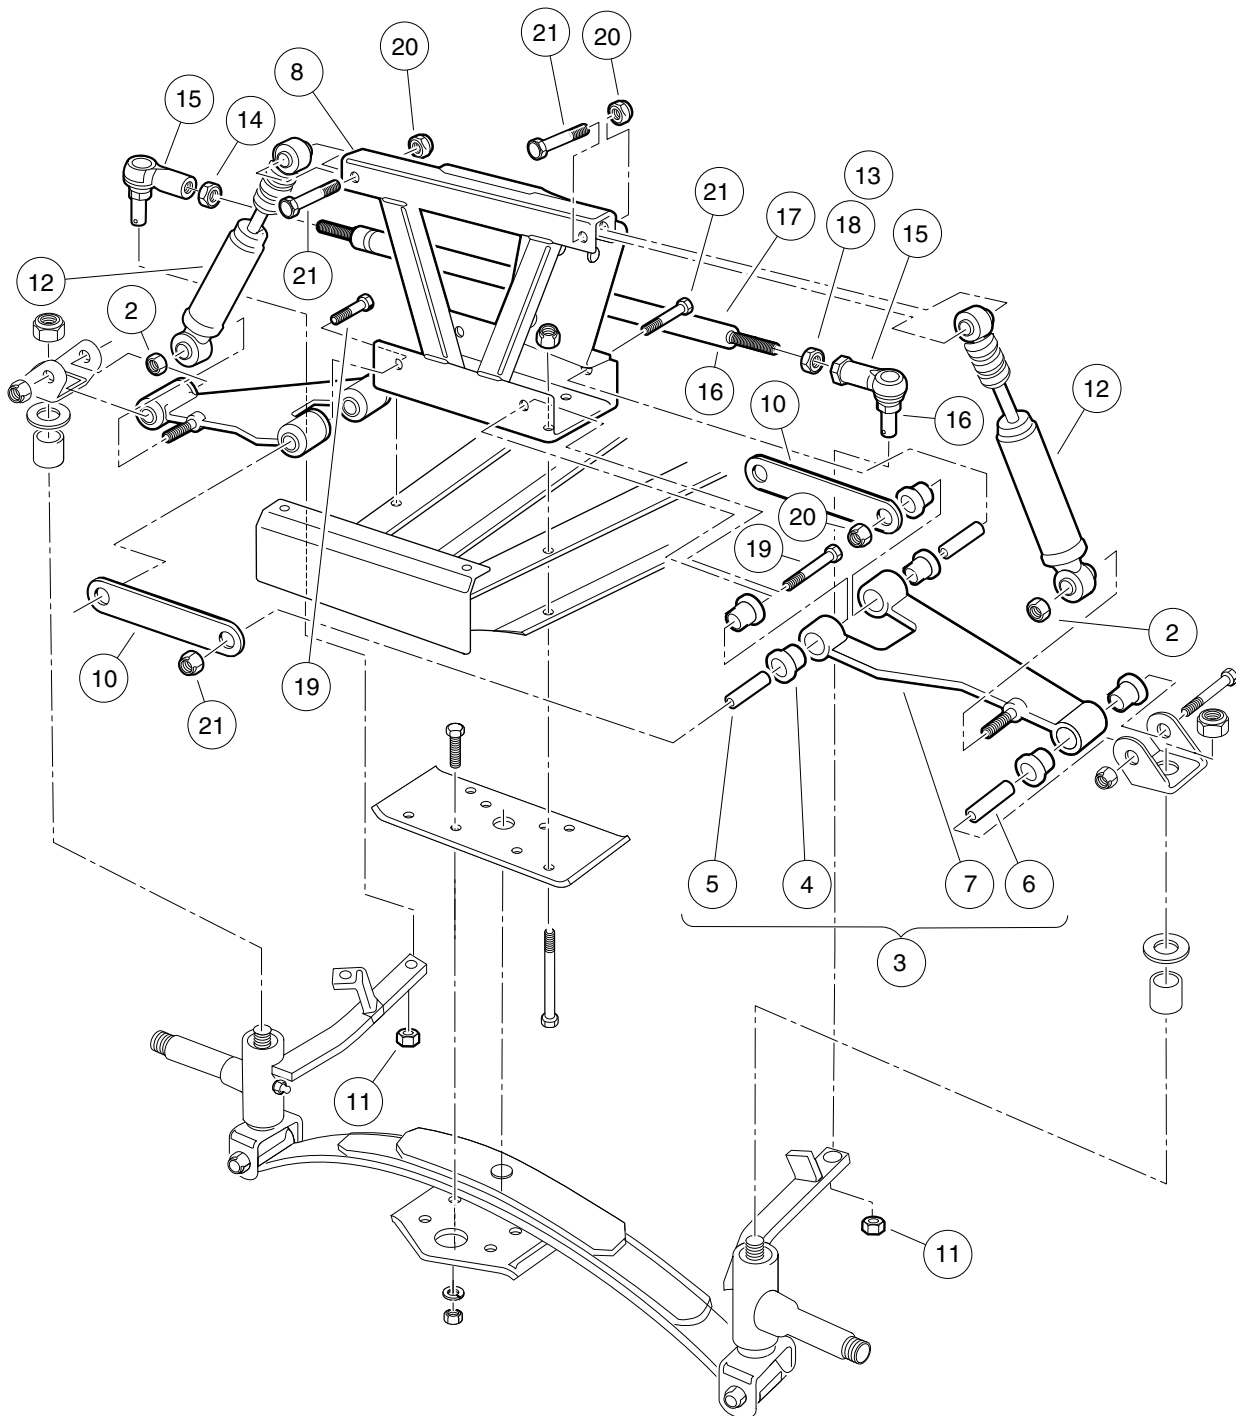

000312-002

FRONT SUSPENSION, UPPER


ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	N/A	Sub, Fr Susp. -1 Lf-2wb Golf (includes items 2 through 21)	1	
2	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2	
3	<u>1016353</u>	Sub-Assembly, Delta A-Plate (includes items 4 through 7)	2	
4	<u>1016346</u>	Bushing, Urethane	6	
5	<u>1016349</u>	Sleeve, Delta Inner	2	
6	<u>1016350</u>	Sleeve, Delta Outer	1	
7	<u>1016351</u>	Delta A-Plate	1	
8	<u>1016385</u>	Delta Shock and Gear Support Assembly	1	
9	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	2	
10	<u>1017266</u>	A-Plate Strap	2	
11	<u>102289201</u>	Nut - Hex Locking, M12 X 1.25	3	
12	<u>103351001</u>	Shock Absorber, Front, Common	2	
13	N/A	Asm, Tie Rod (includes items 14 through 18)	1	
14	1013042	Nut, 12mm Hex	1	
15	<u>102022601</u>	End, Tie Rod M12 X 1.25 Rh	1	
16	<u>102022602</u>	End, Tie Rod, M12 X 1.25, Lh	1	
17	<u>103354701</u>	Rod, Tie, Male Thd	1	
18	<u>103653501</u>	Nut, Jam, M12-1.25, Lh	1	
19	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4	
20	<u>8754</u>	Locknut, 3/8-16 Hex	13	
21	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	2	

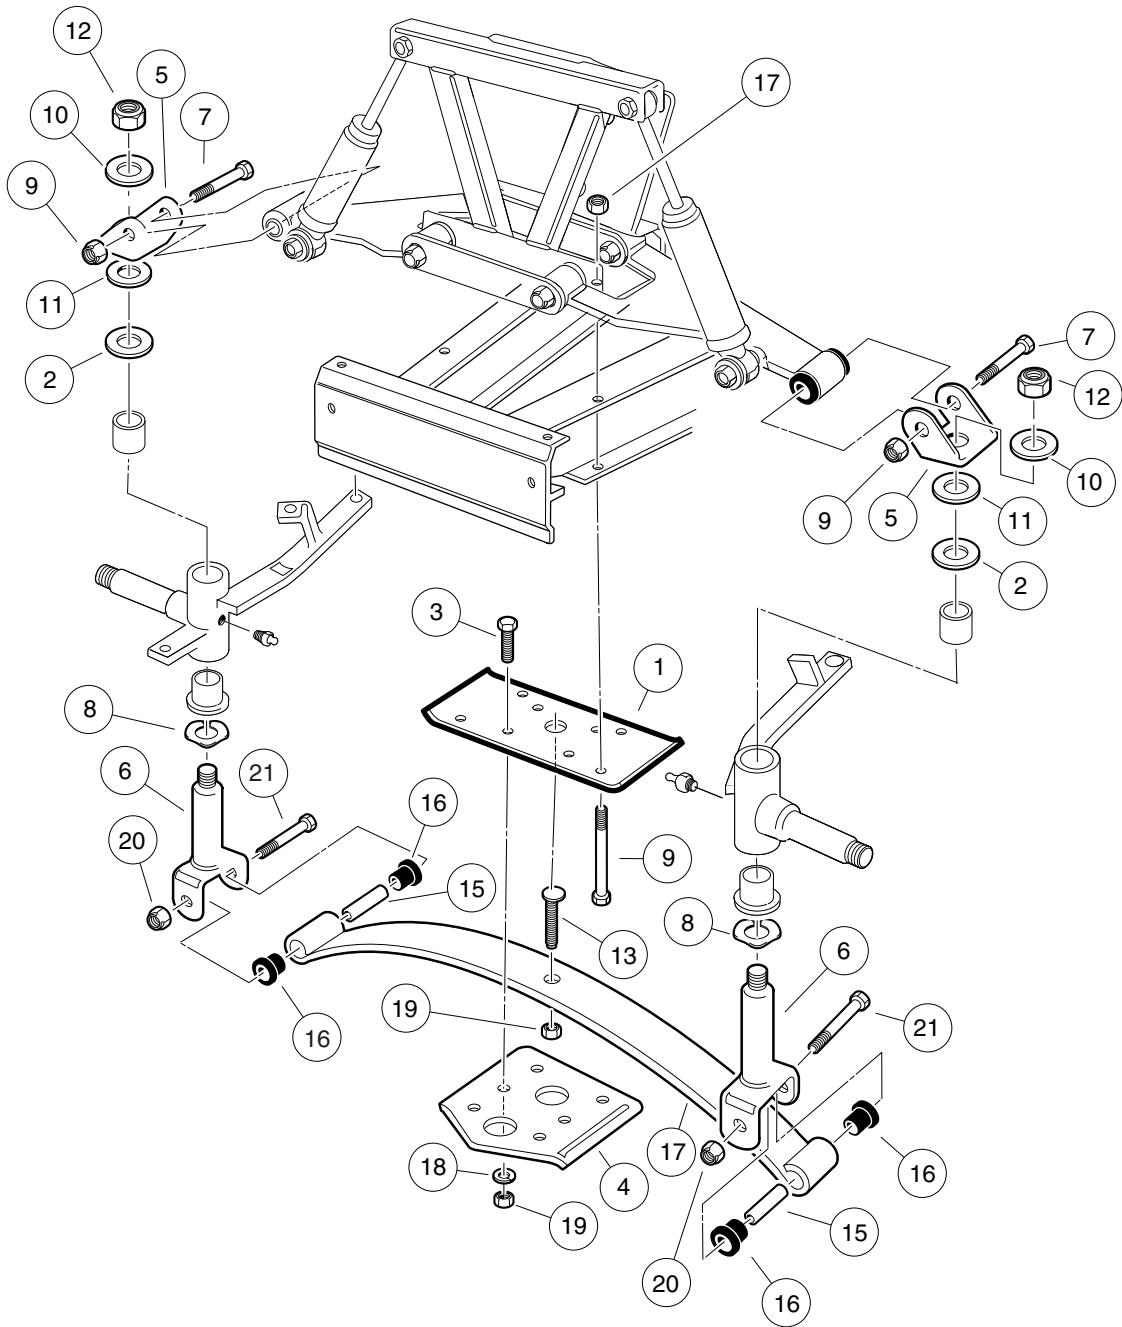5**G****E**

000311-001

FRONT SUSPENSION, LOWER

ITEM	PART NO.	DESCRIPTION	QTY	5
		1 2 3 4		G
1	<u>1010124</u>	Plate, Spring Mount	1	E
2	<u>1010150</u>	Bearing, Thrust	2	
3	<u>1010177</u>	Bolt, 3/8-16 X 2.00 Hex Head	4	
4	<u>1014276</u>	Plate, Front Spring Retainer	1	
5	<u>1016384</u>	Clevis, Delta Upper	2	
6	<u>1016386</u>	King Pin Assembly	2	
7	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	2	
8	<u>1016389</u>	Washer, 1.125 Od Wave	2	
9	<u>101870501</u>	Screw, 3/8-16 X 4.75 Hx Hd Cap	4	
10	<u>102564002</u>	Washer-1/2 Conical, Yellow	2	
11	<u>102684501</u>	Washer, M12 Hard Regular	2	
12	<u>102766301</u>	Nut, 1/2-20, Center Lock	2	
13	<u>103507001</u>	Eccentric Bolt Common	1	
14	N/A	Spring Asm, Front, 1 Leaf (includes items 15 through 17)	1	
15	<u>1012303</u>	Bushing, Steel	2	
16	<u>1015583</u>	Bushing, Urethane	4	
17	N/A	Spring, Front, 1 Leaf	1	
18	<u>357</u>	Lockwasher, 3/8 Split	4	
19	<u>706</u>	Nut, Hex 3/8-16	1	
20	<u>8754</u>	Locknut, 3/8-16 Hex	4	
21	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2	

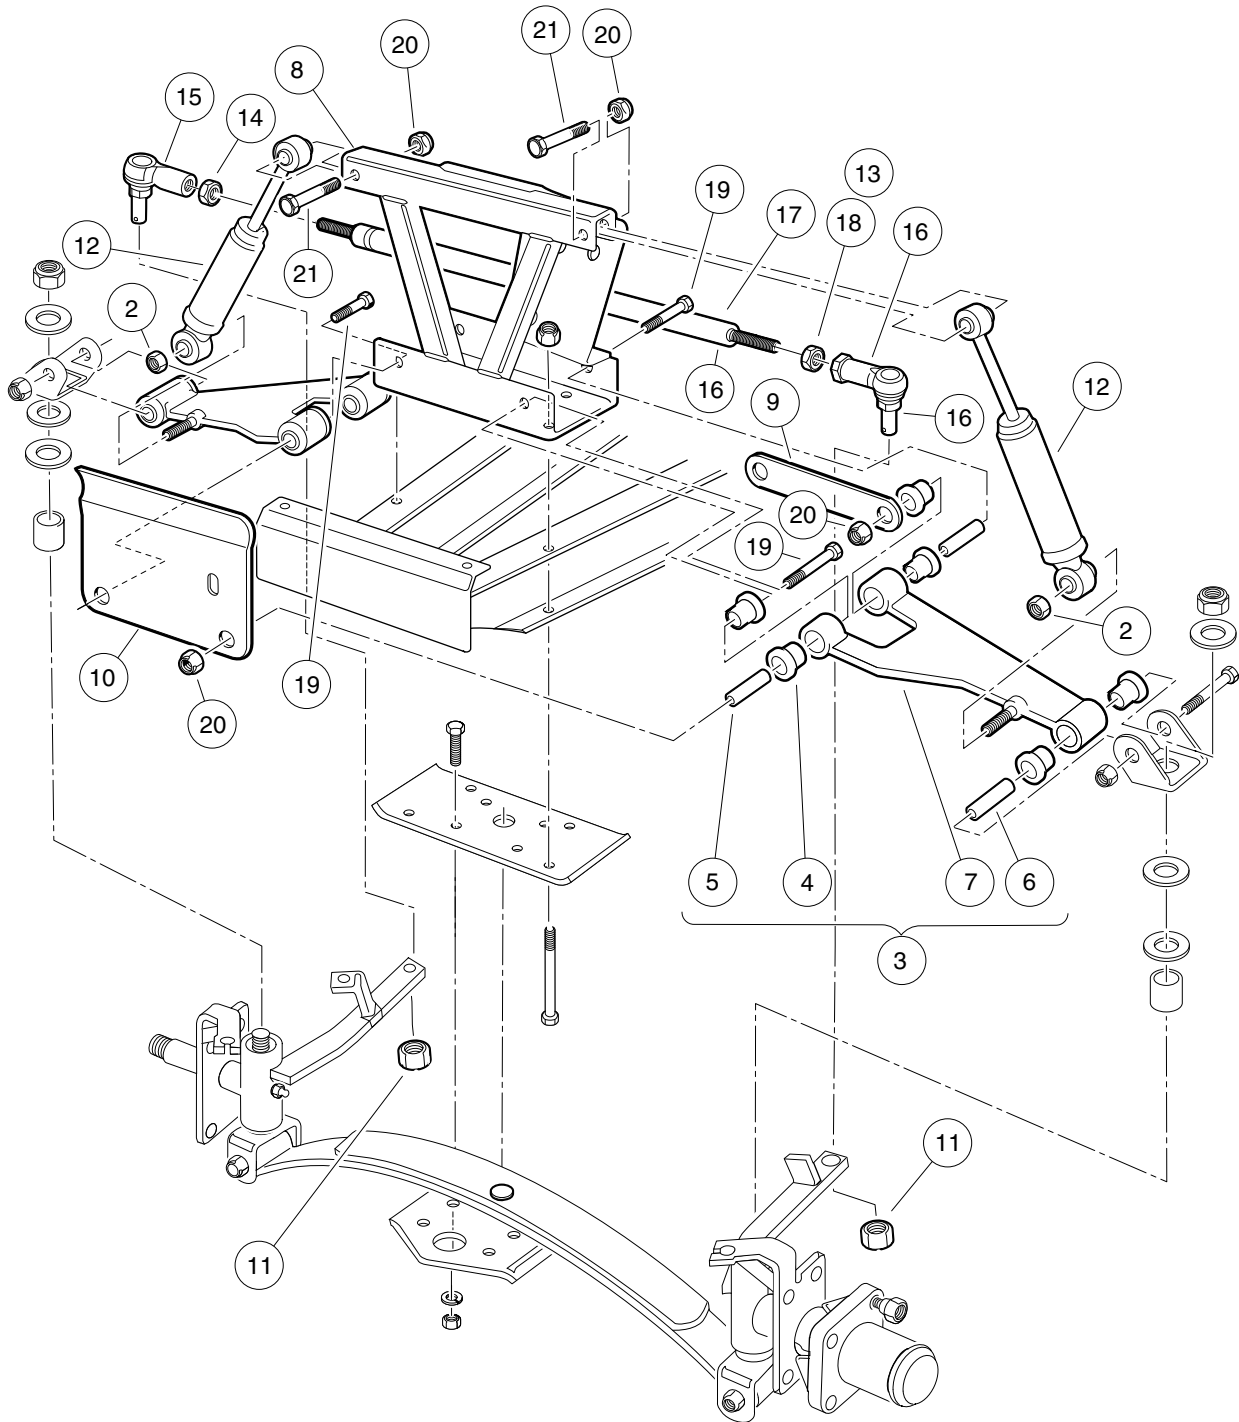

000314-004


FRONT SUSPENSION, UPPER – VILLAGER 6, AND TRANSPORTER 4 AND

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	N/A	Sub-Assembly, Front Suspension (includes items 2 through 20)	1	
2	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2	
3	<u>1016353</u>	Sub-Assembly, Delta A-Plate (includes items 4 through 7)	2	
4	<u>1016346</u>	Bushing, Urethane	6	
5	<u>1016349</u>	Sleeve, Delta Inner	2	
6	<u>1016350</u>	Sleeve, Delta Outer	1	
7	<u>1016351</u>	Delta A-Plate	1	
8	<u>1016385</u>	Delta Shock and Gear Support Assembly	1	
9	<u>1017266</u>	A-Plate Strap	1	
10	<u>101955001</u>	Brake Cable Guide Bracket	1	
11	<u>102289201</u>	Nut - Hex Locking, M12 X 1.25	3	
12	<u>103351001</u>	Shock Absorber, Front, Common	2	
13	N/A	Asm, Tie Rod (includes items 14 through 18)	1	
14	1013042	Nut, 12mm Hex	1	
15	<u>102022601</u>	End, Tie Rod M12 X 1.25 Rh	1	
16	<u>102022602</u>	End, Tie Rod, M12 X 1.25, Lh	1	
17	<u>103354701</u>	Rod, Tie, Male Thd	1	
18	<u>103653501</u>	Nut, Jam, M12-1.25, Lh	1	
19	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4	
20	<u>8754</u>	Locknut, 3/8-16 Hex	13	

5

G


E

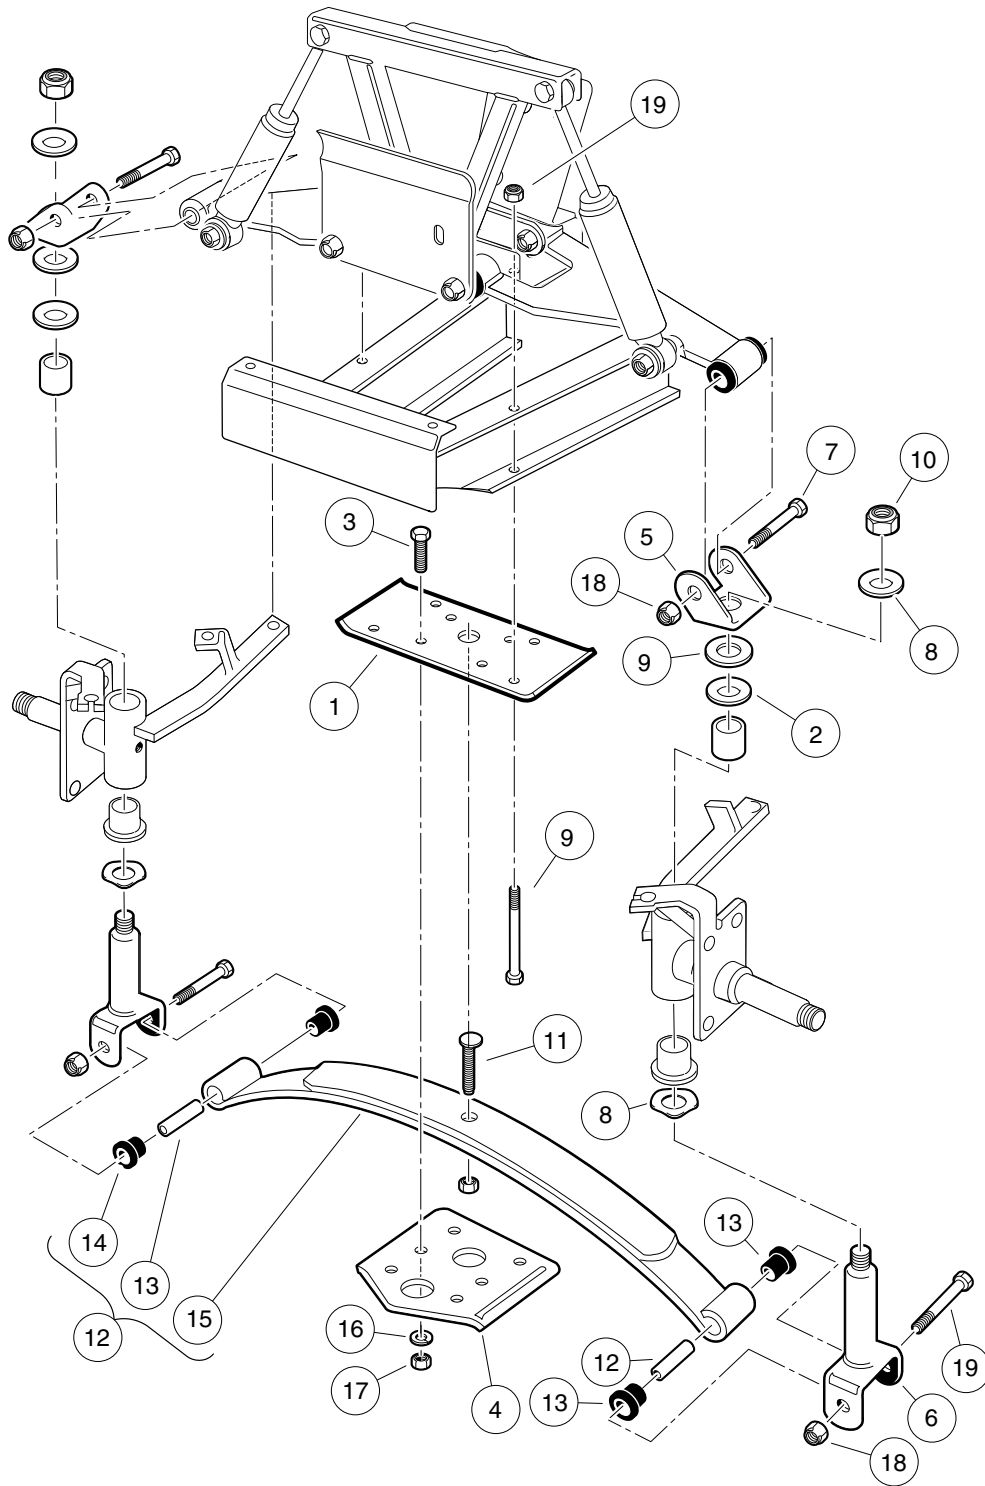

000313-001

FRONT SUSPENSION, LOWER – VILLAGER 6, AND TRANSPORTER 4 AND


ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1010124</u>	Plate, Spring Mount	1	
2	<u>1010150</u>	Bearing, Thrust	2	
3	<u>1014276</u>	Plate, Front Spring Retainer	1	
4	<u>1016384</u>	Clevis, Delta Upper	2	
5	<u>1016386</u>	King Pin Assembly	2	
6	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	2	
7	<u>1016389</u>	Washer, 1.125 Od Wave	2	
8	<u>102564002</u>	Washer-1/2 Conical, Yellow	2	
9	<u>102684501</u>	Washer, M12 Hard Regular	2	
10	<u>102766301</u>	Nut, 1/2-20, Center Lock	2	
11	<u>103628801</u>	Spring Asm, Front, 2 Leaf (includes items 12 through 14)	1	
12	<u>1012303</u>	Bushing, Steel	2	
13	<u>1015583</u>	Bushing, Urethane	4	
14	<u>103502701</u>	Spring, Front, 2 Leaf	1	
15	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4	
16	<u>357</u>	Lockwasher, 3/8 Split	4	
17	<u>706</u>	Nut, Hex 3/8-16	4	
18	<u>7270</u>	Bolt, 3/8-16 X 4.50 Hex Head	4	
19	<u>8754</u>	Locknut, 3/8-16 Hex	8	
20	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2	

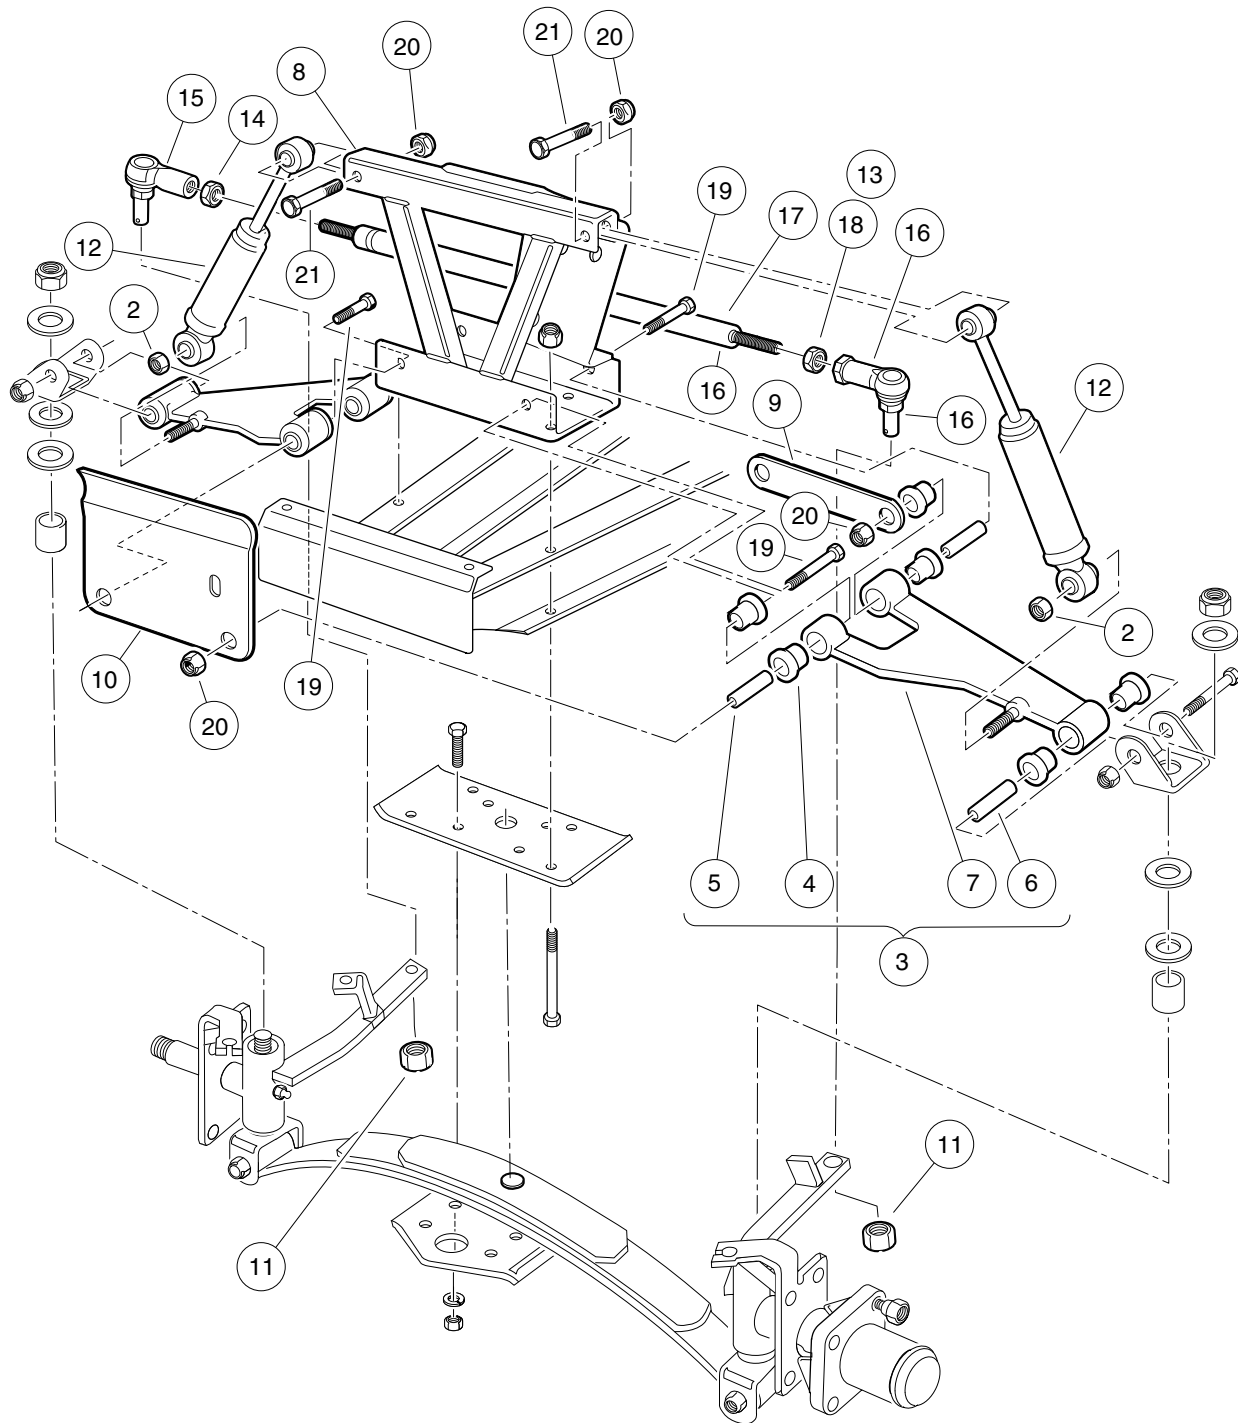

000314-002

FRONT SUSPENSION, UPPER – VILLAGER 8


ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	101637605	Subasm, Front Susp. -3 Leaf (includes items 2 through 20)	1	
2	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2	
3	<u>1016353</u>	Sub-Assembly, Delta A-Plate (includes items 4 through 7)	2	
4	<u>1016346</u>	Bushing, Urethane	6	
5	<u>1016349</u>	Sleeve, Delta Inner	2	
6	<u>1016350</u>	Sleeve, Delta Outer	1	
7	<u>1016351</u>	Delta A-Plate	1	
8	<u>1016385</u>	Delta Shock and Gear Support Assembly	1	
9	<u>1017266</u>	A-Plate Strap	1	
10	<u>101955001</u>	Brake Cable Guide Bracket	1	
11	<u>102289201</u>	Nut - Hex Locking, M12 X 1.25	2	
12	<u>103351001</u>	Shock Absorber, Front, Common	2	
13	N/A	Asm, Tie Rod (includes items 14 through 18)	1	
14	1013042	Nut, 12mm Hex	1	
15	<u>102022601</u>	End, Tie Rod M12 X 1.25 Rh	1	
16	<u>102022602</u>	End, Tie Rod, M12 X 1.25, Lh	1	
17	<u>103354701</u>	Rod, Tie, Male Thd	1	
18	<u>103653501</u>	Nut, Jam, M12-1.25, Lh	1	
19	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4	
20	<u>8754</u>	Locknut, 3/8-16 Hex	13	

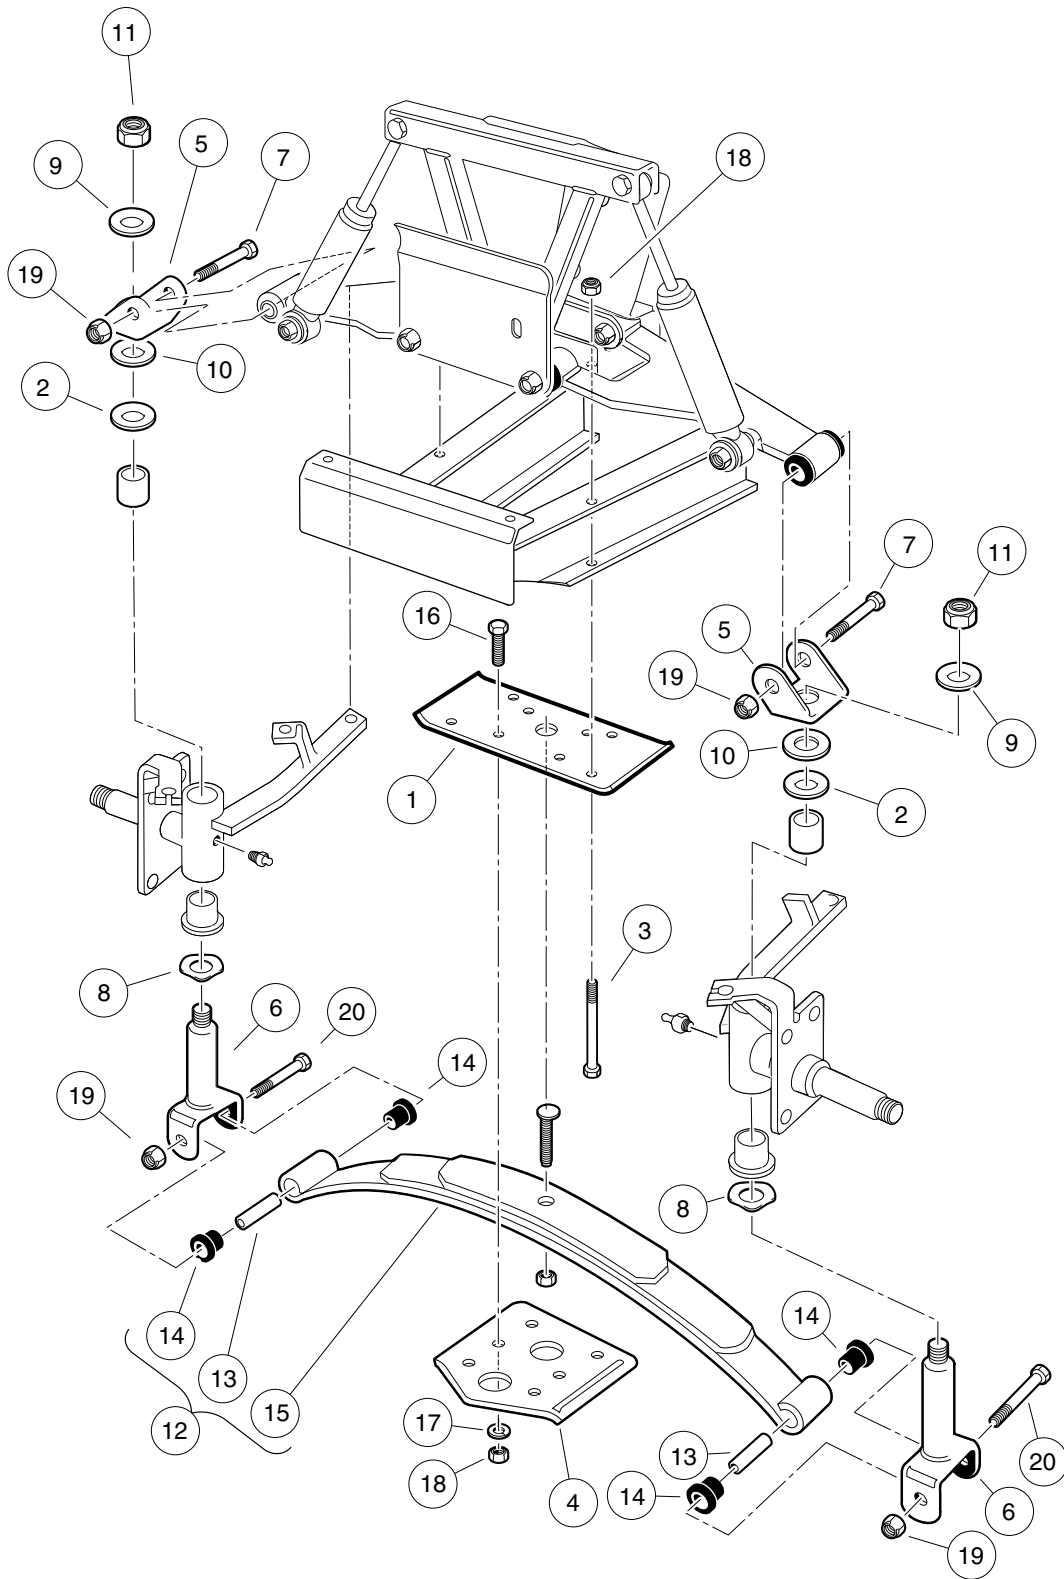

000313-002

FRONT SUSPENSION, LOWER – VILLAGER 8

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1010124</u>	Plate, Spring Mount	1	
2	<u>1010150</u>	Bearing, Thrust	2	
3	<u>1010200</u>	Bolt, 3/8-16 X 4.25 Hex Head	4	
4	<u>1014276</u>	Plate, Front Spring Retainer	1	
5	<u>1016384</u>	Clevis, Delta Upper	2	
6	<u>1016386</u>	King Pin Assembly	2	
7	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	2	
8	<u>1016389</u>	Washer, 1.125 Od Wave	2	
9	<u>102564002</u>	Washer-1/2 Conical, Yellow	2	
10	<u>102684501</u>	Washer, M12 Hard Regular	2	
11	<u>102766301</u>	Nut, 1/2-20, Center Lock	2	
12	<u>103628901</u>	Spring Asm, Front, 3 Leaf (includes items 13 through 15)	1	
13	<u>1012303</u>	Bushing, Steel	2	
14	<u>1015583</u>	Bushing, Urethane	4	
15	103502801	Spring, Front, 3 Leaf	1	
16	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4	
17	<u>357</u>	Lockwasher, 3/8 Split	4	
18	<u>706</u>	Nut, Hex 3/8-16	4	
19	<u>8754</u>	Locknut, 3/8-16 Hex	8	
20	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2	

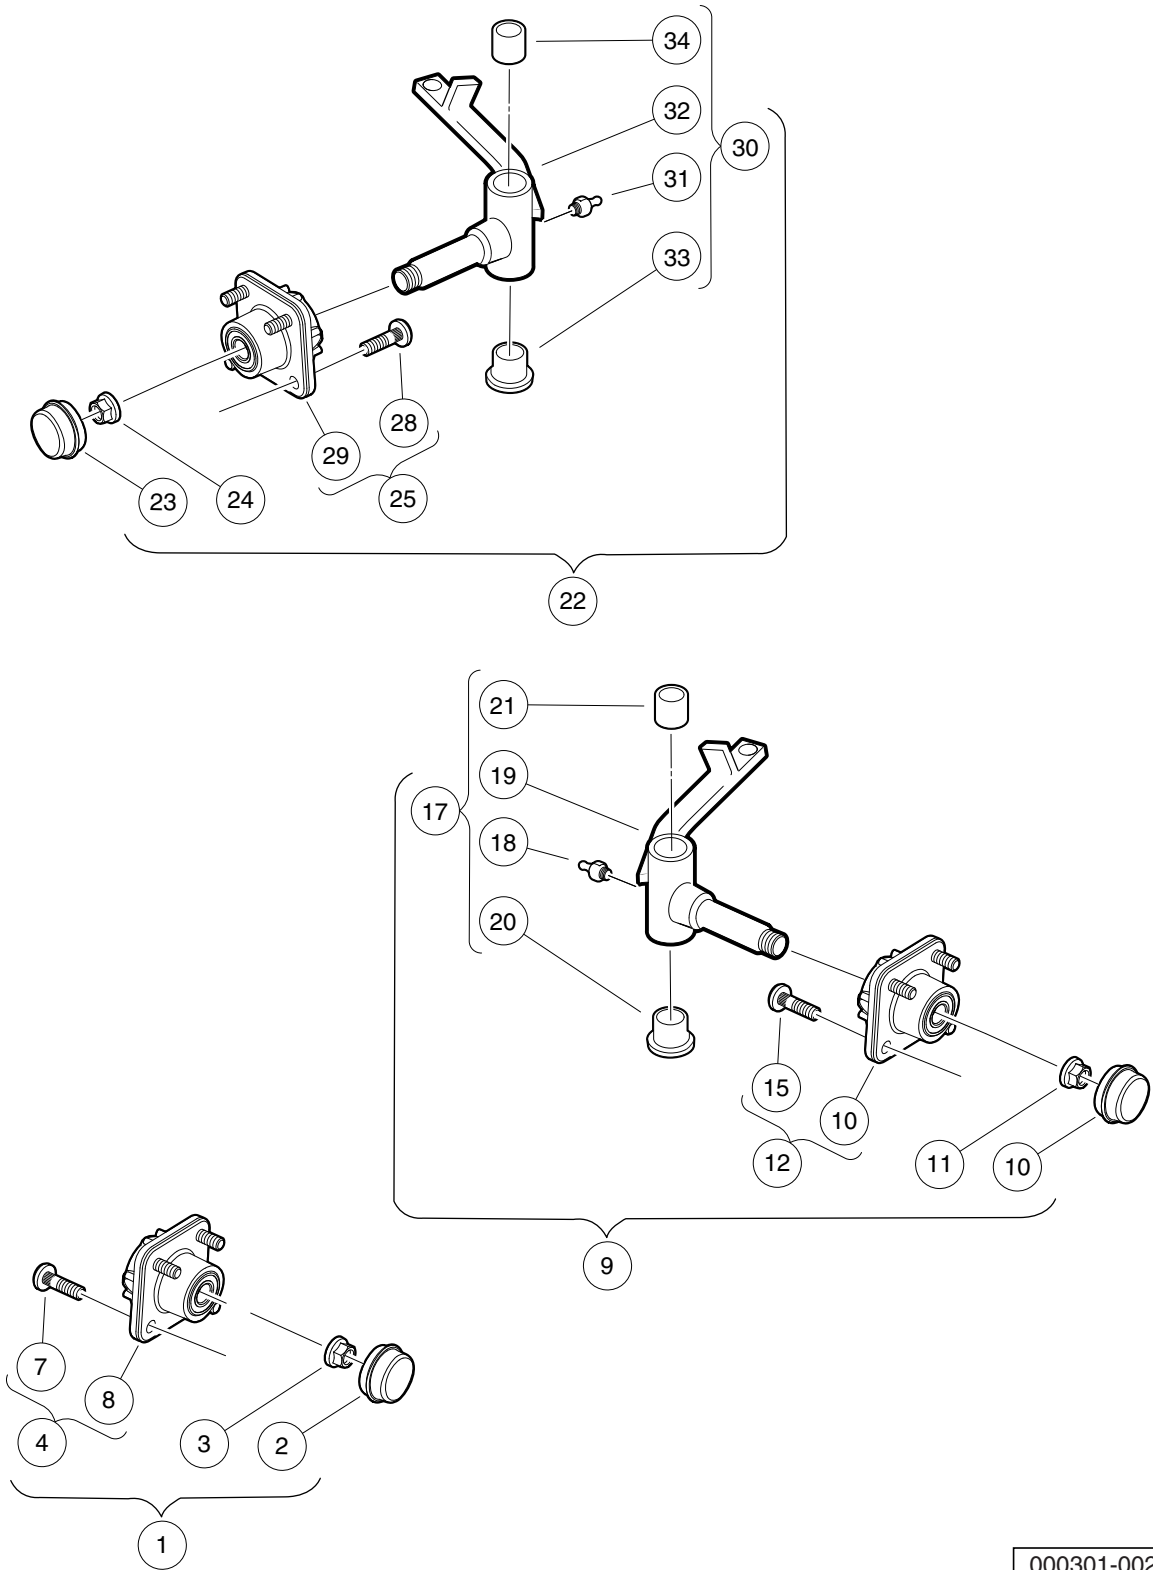

000301-002



FRONT SPINDLES AND HUBS – DS VILLAGER 4 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	N/A	Replacement Kit, Front Hub (includes items 2 through 4)	2	
2	<u>102353201</u>	Cap, Front Hub	1	
3	<u>102353301</u>	Hex Nut, Locking Flange, M14x2	1	
4	N/A	Asm, Front Hub, Bb, Long Stud (includes items 5 through 8)	1	
5	N/A	Bearing, Ball, 6204	2	
6	N/A	Spacer, Bearing, Front Hub, Pm	1	
7	<u>103477901</u>	Lug Stud, 1/2-20 Unf, 4037	4	
8	N/A	Front Hub, Ball Brg, Long Stud	1	
9	N/A	Asm, Frt Hub & Spndle, Rh (includes items 10 through 17)	1	
10	<u>102353201</u>	Cap, Front Hub	1	
11	<u>102353301</u>	Hex Nut, Locking Flange, M14x2	1	
12	N/A	Asm, Front Hub, Bb, Long Stud (includes items 13 through 16)	1	
13	N/A	Bearing, Ball, 6204	2	
14	N/A	Spacer, Bearing, Front Hub, Pm	1	
15	<u>103477901</u>	Lug Stud, 1/2-20 Unf, 4037	4	
16	N/A	Front Hub, Ball Brg, Long Stud	1	
17	<u>103667103</u>	Asm, Spindle, Rh, Sp (includes items 18 through 21)	1	
18	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
19	N/A	Subasm, Spndle, Rh, 2wb	1	
20	<u>7048</u>	Bushing, Flanged Bronze	1	
21	<u>8067</u>	Bushing, Bronze Spindle	1	
22	N/A	Asm, Frt Hub & Spndle, Lh (includes items 23 through 30)	1	
23	<u>102353201</u>	Cap, Front Hub	1	
24	<u>102353301</u>	Hex Nut, Locking Flange, M14x2	1	
25	N/A	Asm, Front Hub, Bb, Long Stud (includes items 26 through 29)	1	
26	N/A	Bearing, Ball, 6204	2	
27	N/A	Spacer, Bearing, Front Hub, Pm	1	
28	<u>103477901</u>	Lug Stud, 1/2-20 Unf, 4037	4	
29	N/A	Front Hub, Ball Brg, Long Stud	1	
30	<u>103667203</u>	Asm, Spindle, Lh, Sp (includes items 31 through 34)	1	
31	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
32	N/A	Subasm, Spndle, Lh, 2wb	1	
33	<u>7048</u>	Bushing, Flanged Bronze	1	
34	<u>8067</u>	Bushing, Bronze Spindle	1	

5

G


E

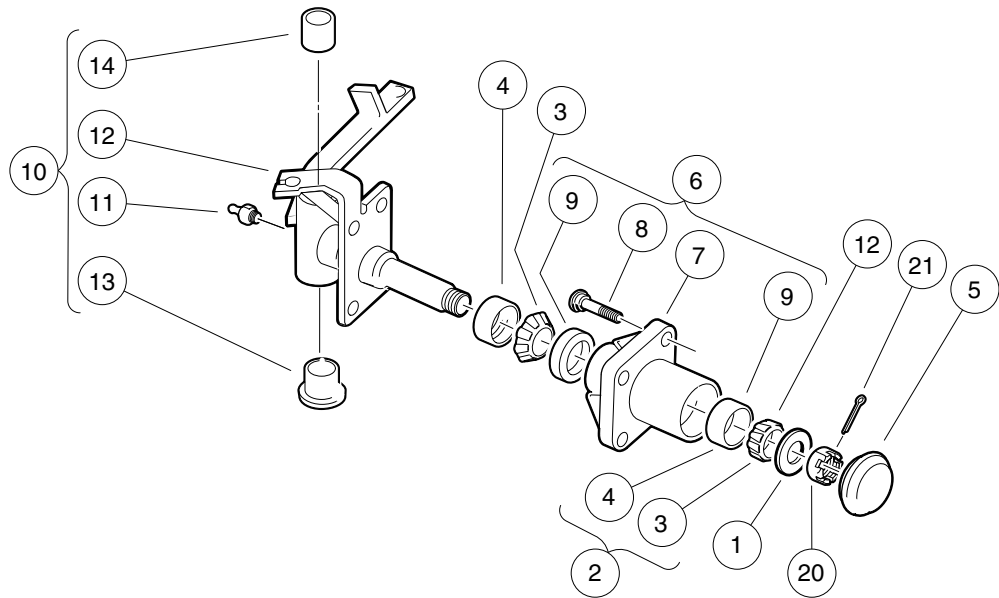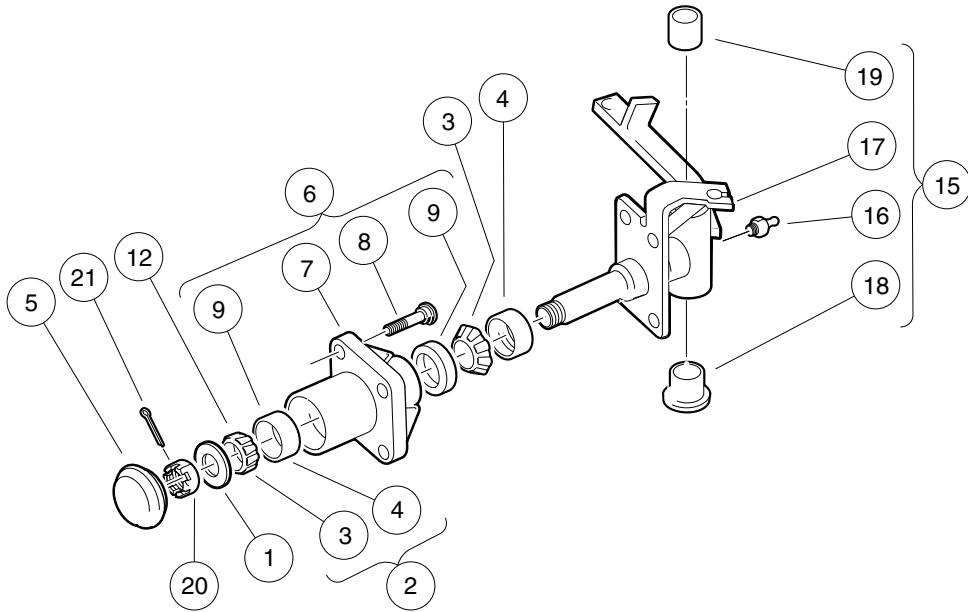

000310-002

FRONT SPINDLES AND HUBS – ALL VEHICLES EXCEPT DS VILLAGER 4


ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1010005</u>	Washer, 3/4 Flat	2	
2	<u>1011393</u>	Hub Bearing Package (includes items 3 and 4)	4	
3	<u>7274</u>	Bearing, Front Hub Wheel	1	
4	<u>7308</u>	Race, Front Hub Bearing	1	
5	<u>1011887</u>	Dust Cover	2	
6	<u>1011889</u>	Hub (includes items 7 through 9)	2	
7	<u>1011153</u>	Front Hub	1	
8	<u>103477901</u>	Lug Stud, 1/2-20 Unf, 4037	4	
9	<u>7308</u>	Race, Front Hub Bearing	2	
10	<u>103717302</u>	Asm, Spindle, Lh, 4wb, Sp (includes items 11 through 14)	1	
11	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
12	<u>N/A</u>	Subasm, Spindle, Lh, 4wb	1	
13	<u>7048</u>	Bushing, Flanged Bronze	1	
14	<u>8067</u>	Bushing, Bronze Spindle	1	
15	<u>103717402</u>	Asm, Spindle, Rh, 4wb, Sp (includes items 16 through 19)	1	
16	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
17	<u>N/A</u>	Subasm, Spindle, Rh, 4wb	1	
18	<u>7048</u>	Bushing, Flanged Bronze	1	
19	<u>8067</u>	Bushing, Bronze Spindle	1	
20	<u>7840</u>	Nut, 3/4-16 Hex Slotted	2	
21	<u>7910</u>	Pin, 5/32 X 1.00 Cotter	2	

 

REAR SUSPENSION COMPONENTS – DS VILLAGER 4 ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010145</u>	Nut, 3/8-24 Hex	4
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4
3	<u>1010142</u>	Cushion, Shock Absorber	2
4	<u>1010144</u>	Retainer, Shock Absorber Cushion	2
5	<u>1012181</u>	Bracket, Shock Mounting, Right (Passenger)	1
6	<u>1012182</u>	Bracket, Shock Mounting, Left (Driver)	1
7	<u>1012303</u>	Bushing, Steel	6
8	<u>1012304</u>	Shackle, Rear Spring	4
9	<u>1013164</u>	Shock Absorber Kit (includes items 10 through 12)	1
10	<u>1010142</u>	Cushion, Shock Absorber	8
11	<u>1010144</u>	Retainer, Shock Absorber Cushion	8
12	<u>102588501</u>	Shock Absorber Rear Prv Spd	2
13	<u>1013207</u>	Hanger, Brake Cable	2
14	<u>101454902</u>	Bumper Mount, Angled	2
15	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4
16	<u>1014573</u>	Spring Retainer	2
17	<u>1014675</u>	Rear Leaf Spring	2
18	<u>1014901</u>	Spacer, Overload Bumper	2
19	<u>1014902</u>	U-Bolt	2
20	<u>1015583</u>	Bushing, Urethane	12
21	<u>1017235</u>	Bumper, Jounce	2
22	<u>8754</u>	Locknut, 3/8-16 Hex	6
23	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	6
Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock mounting plate.			


5
G
E

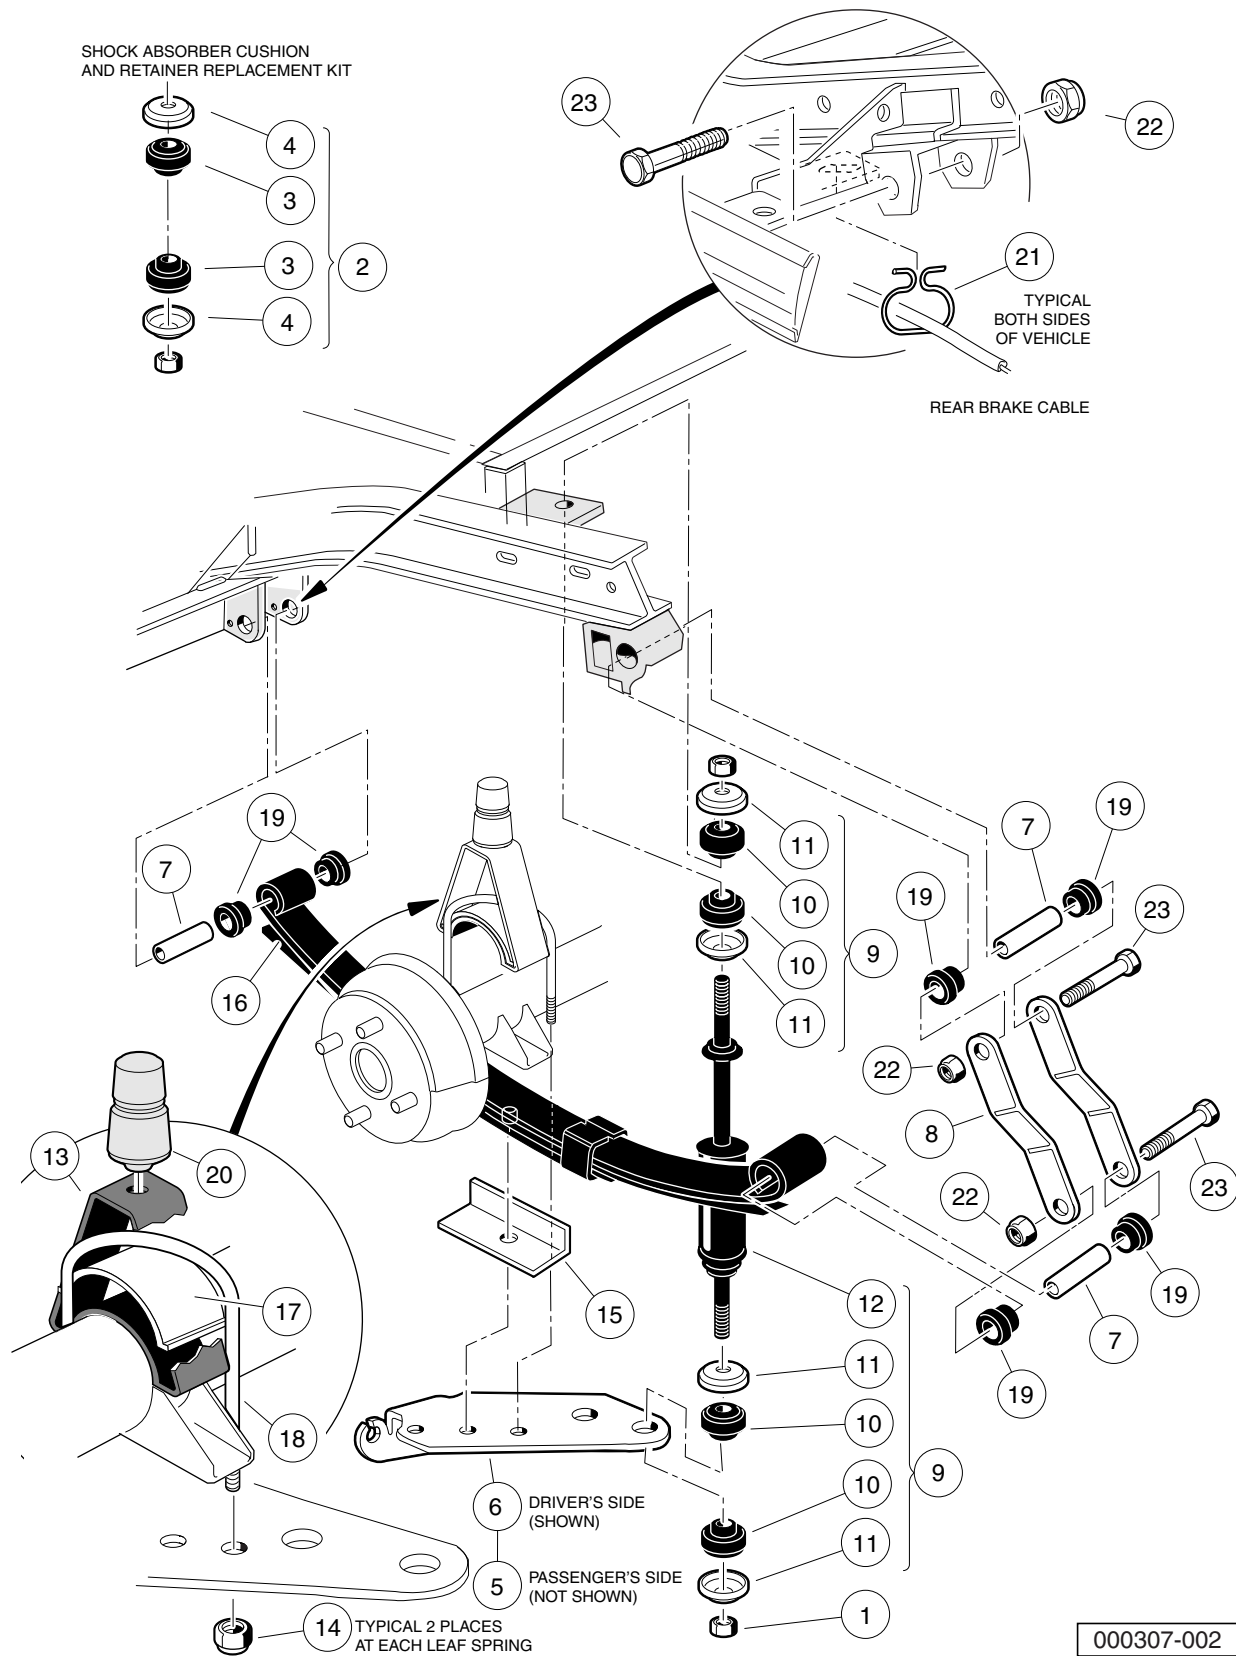5**G****E**

REAR SUSPENSION COMPONENTS – DS VILLAGER 4 GASOLINE VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010145</u>	Nut, 3/8-24 Hex	4
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4
3	<u>1010142</u>	Cushion, Shock Absorber	2
4	<u>1010144</u>	Retainer, Shock Absorber Cushion	2
5	1012181	Bracket, Shock Mounting, Right (Passenger)	1
6	1012182	Bracket, Shock Mounting, Left (Driver)	1
7	<u>1012303</u>	Bushing, Steel	6
8	<u>1012304</u>	Shackle, Rear Spring	4
9	<u>1013164</u>	Shock Absorber Kit (includes items 10 through 12)	1
10	<u>1010142</u>	Cushion, Shock Absorber	8
11	<u>1010144</u>	Retainer, Shock Absorber Cushion	8
12	<u>102588501</u>	Shock Absorber Rear Prv Spd	2
13	101454602	Bumper Mount	2
14	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4
15	1014573	Spring Retainer	2
16	<u>1014675</u>	Rear Leaf Spring	2
17	<u>1014901</u>	Spacer, Overload Bumper	2
18	<u>1014902</u>	U-Bolt	2
19	<u>1015583</u>	Bushing, Urethane	12
20	<u>1017235</u>	Bumper, Jounce	2
21	101900801	Hanger, Brake Cable	2
22	<u>8754</u>	Locknut, 3/8-16 Hex	6
23	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	6
Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock mounting plate.			

5
G
E

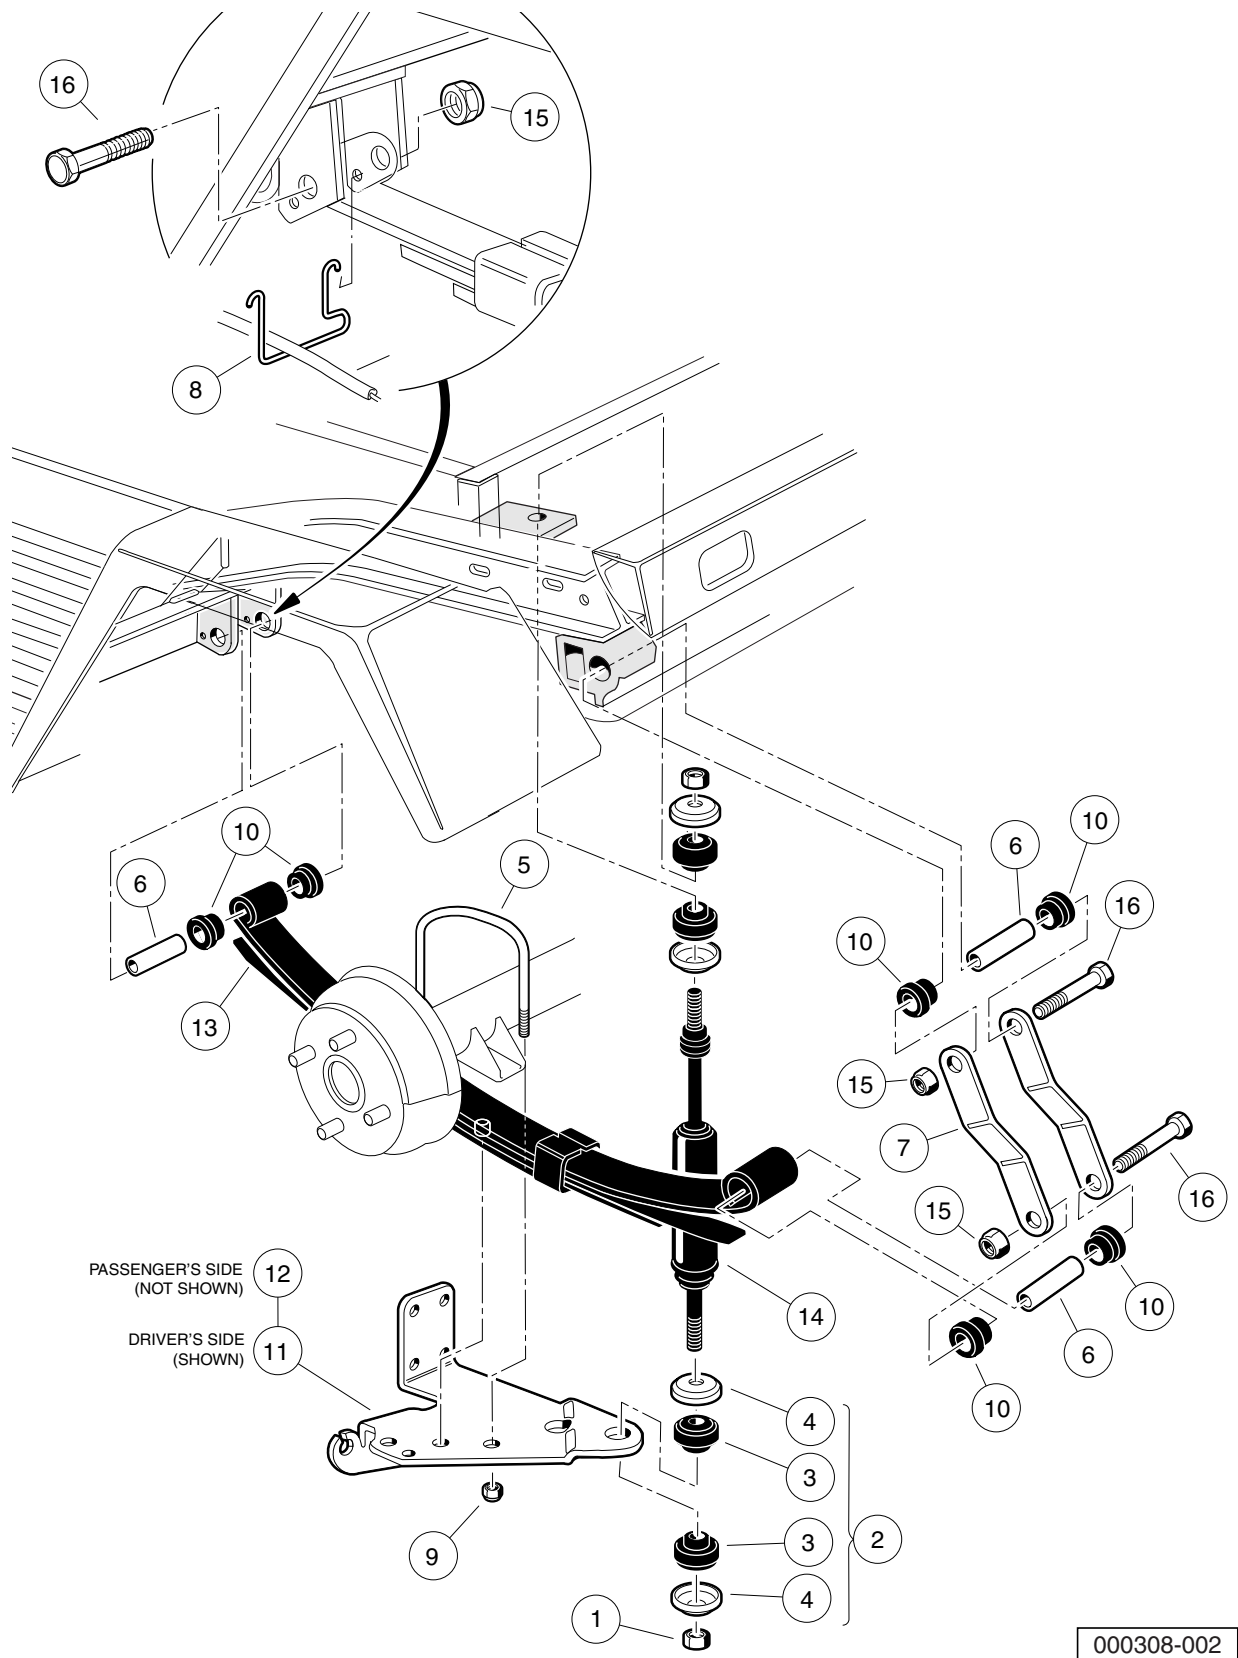

REAR SUSPENSION COMPONENTS – VILLAGER 6 AND 8, AND TRANSPORTER 4 AND 6 GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1010145</u>	Nut, 3/8-24 Hex	4	
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4	
3	<u>1010142</u>	Cushion, Shock Absorber	2	
4	<u>1010144</u>	Retainer, Shock Absorber Cushion	2	
5	<u>1012180</u>	U-Bolt	2	
6	<u>1012303</u>	Bushing, Steel	6	
7	<u>1012304</u>	Shackle, Rear Spring	4	
8	<u>1013207</u>	Hanger, Brake Cable	2	
9	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4	
10	<u>1015583</u>	Bushing, Urethane	12	
11	<u>101926501</u>	Bracket, Left-Hand	1	
12	<u>101929401</u>	Bracket, Right	1	
13	<u>102871801</u>	Spring, Multi Leaf	2	
14	<u>103350901</u>	Shock Absorber, Rear, Utility	2	
15	<u>8754</u>	Locknut, 3/8-16 Hex	6	
16	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	6	
Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock mounting plate.				

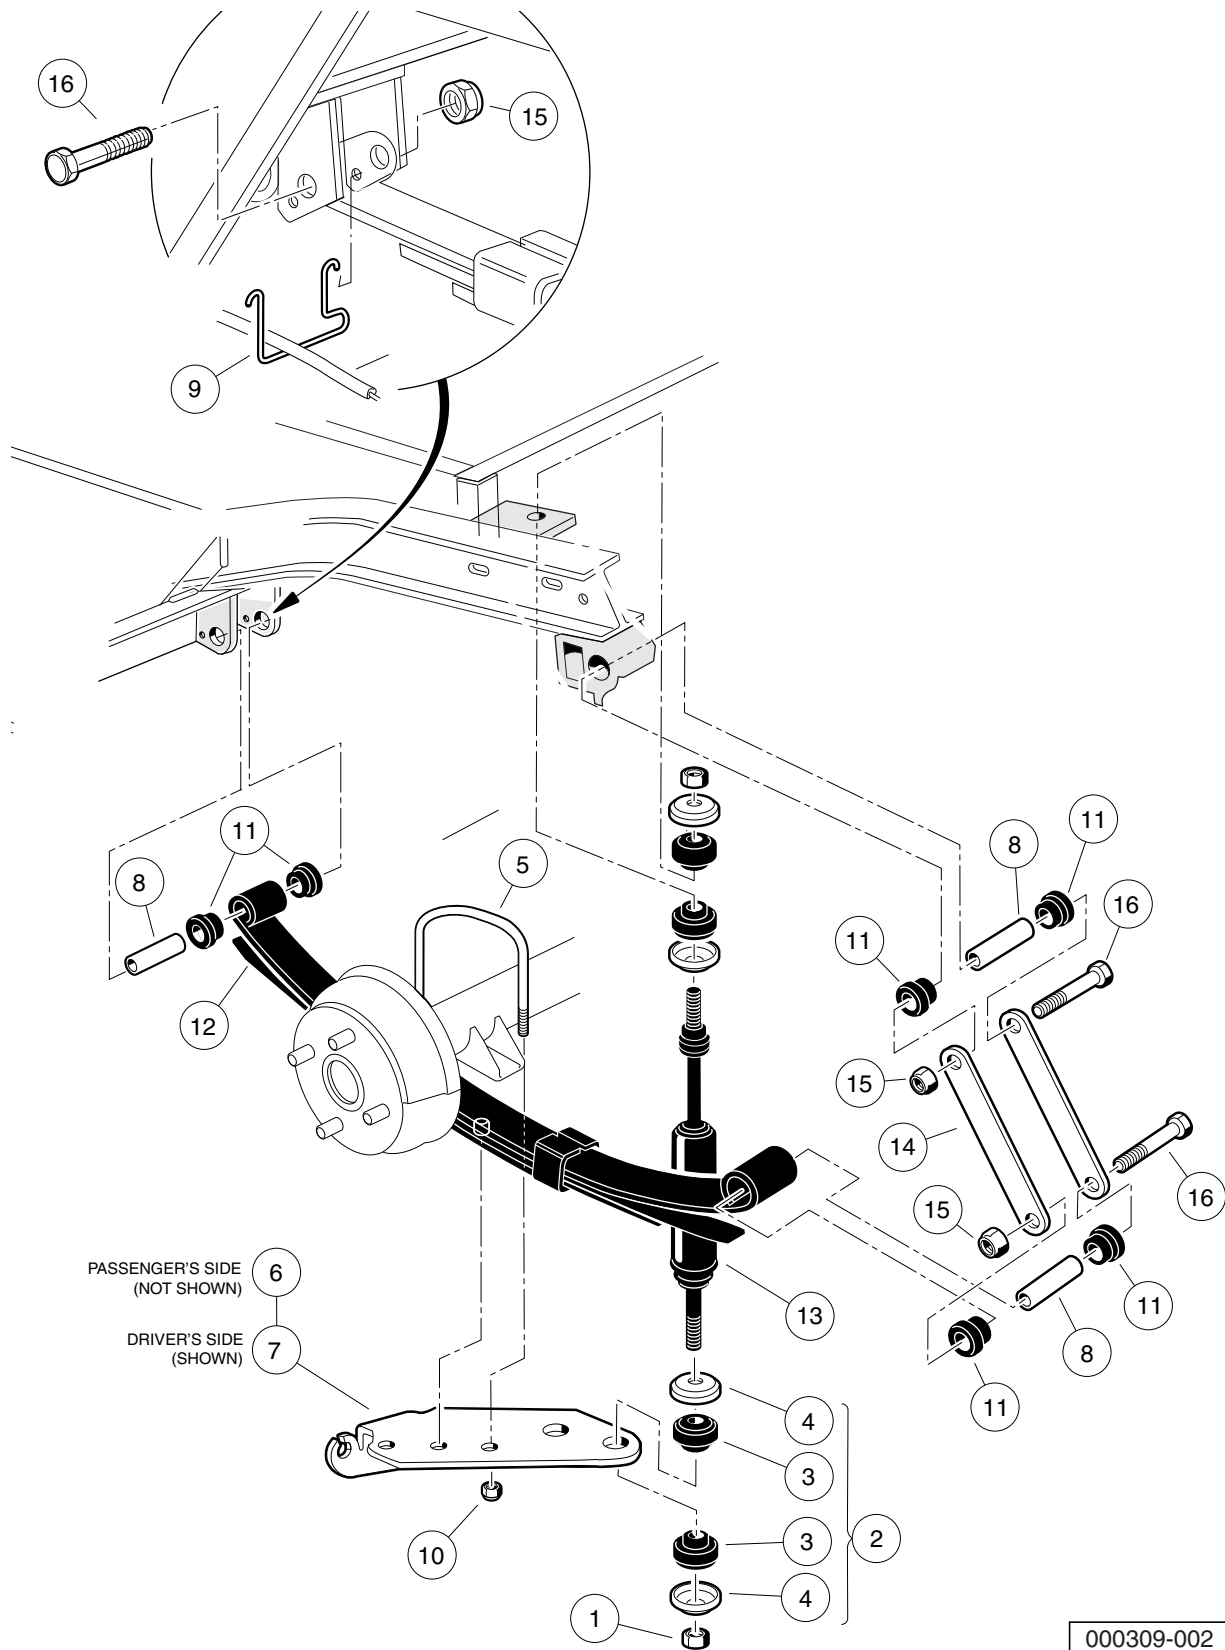5**G****E**

000309-002


REAR SUSPENSION – VILLAGER 6 AND 8 AND TRANSPORTER 4 AND 6 ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010145</u>	Nut, 3/8-24 Hex	4
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4
3	<u>1010142</u>	Cushion, Shock Absorber	2
4	<u>1010144</u>	Retainer, Shock Absorber Cushion	2
5	<u>1012180</u>	U-Bolt	2
6	<u>1012181</u>	Bracket, Shock Mounting, Right (Passenger)	1
7	<u>1012182</u>	Bracket, Shock Mounting, Left (Driver)	1
8	<u>1012303</u>	Bushing, Steel	6
9	<u>1013207</u>	Hanger, Brake Cable	2
10	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4
11	<u>1015583</u>	Bushing, Urethane	12
12	<u>102871801</u>	Spring, Multi Leaf	2
13	<u>103350901</u>	Shock Absorber, Rear, Utility	2
14	<u>7569</u>	Shackle, Rear Spring	4
15	<u>8754</u>	Locknut, 3/8-16 Hex	6
16	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	6
Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock mounting plate.			

5

G

E

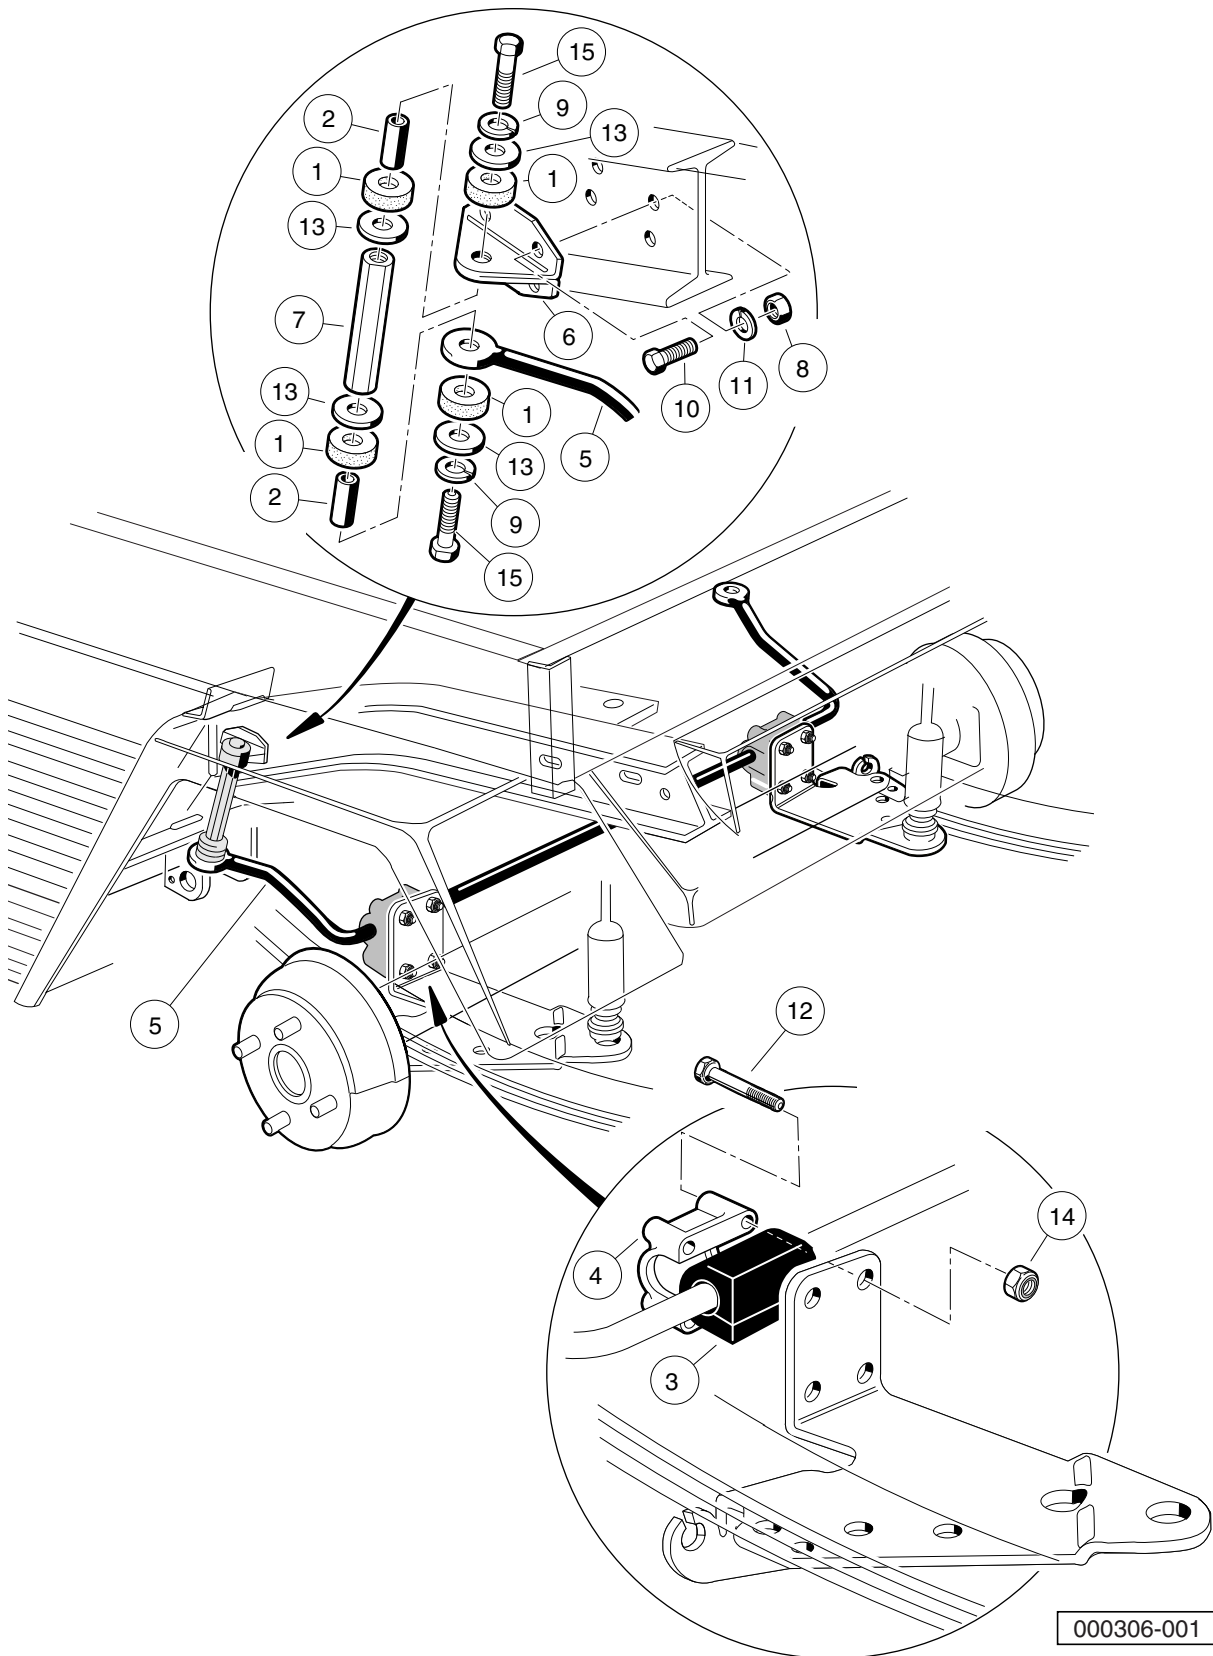5**G****E**

STABILIZER BAR – VILLAGER 6 AND 8, AND TRANSPORTER 4 AND 6 GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1015453</u>	Compression Mount	8	
2	<u>1015457</u>	Spacer, 0.720"	4	
3	<u>1015613</u>	Bushing, Stabilizer Bar	2	
4	<u>1015614</u>	Support, Bushing	2	
5	<u>1015760</u>	Stabilizer Bar	1	
6	<u>1016813</u>	Mounting Bracket, Stabilizer Bar	2	
7	<u>1016814</u>	Link, Stabilizer Bar	2	
8	<u>1242</u>	Nut, 5/16-18 Hex	8	
9	<u>357</u>	Lockwasher, 3/8 Split	4	
10	<u>7173</u>	Screw, 5/16-18 X 0.75 Hex-Head Cap	8	
11	<u>7174</u>	Lockwasher, 5/16 Split	8	
12	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	8	
13	<u>808</u>	Washer, 3/8 Type B Flat	8	
14	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	8	
15	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	4	
Note: Only the driver side of the stabilizer bar is shown. Parts for the passenger side of the stabilizer bar are identical.				

5

 
G


E

ELECTRICAL SYSTEM – GASOLINE VEHICLES

6

G



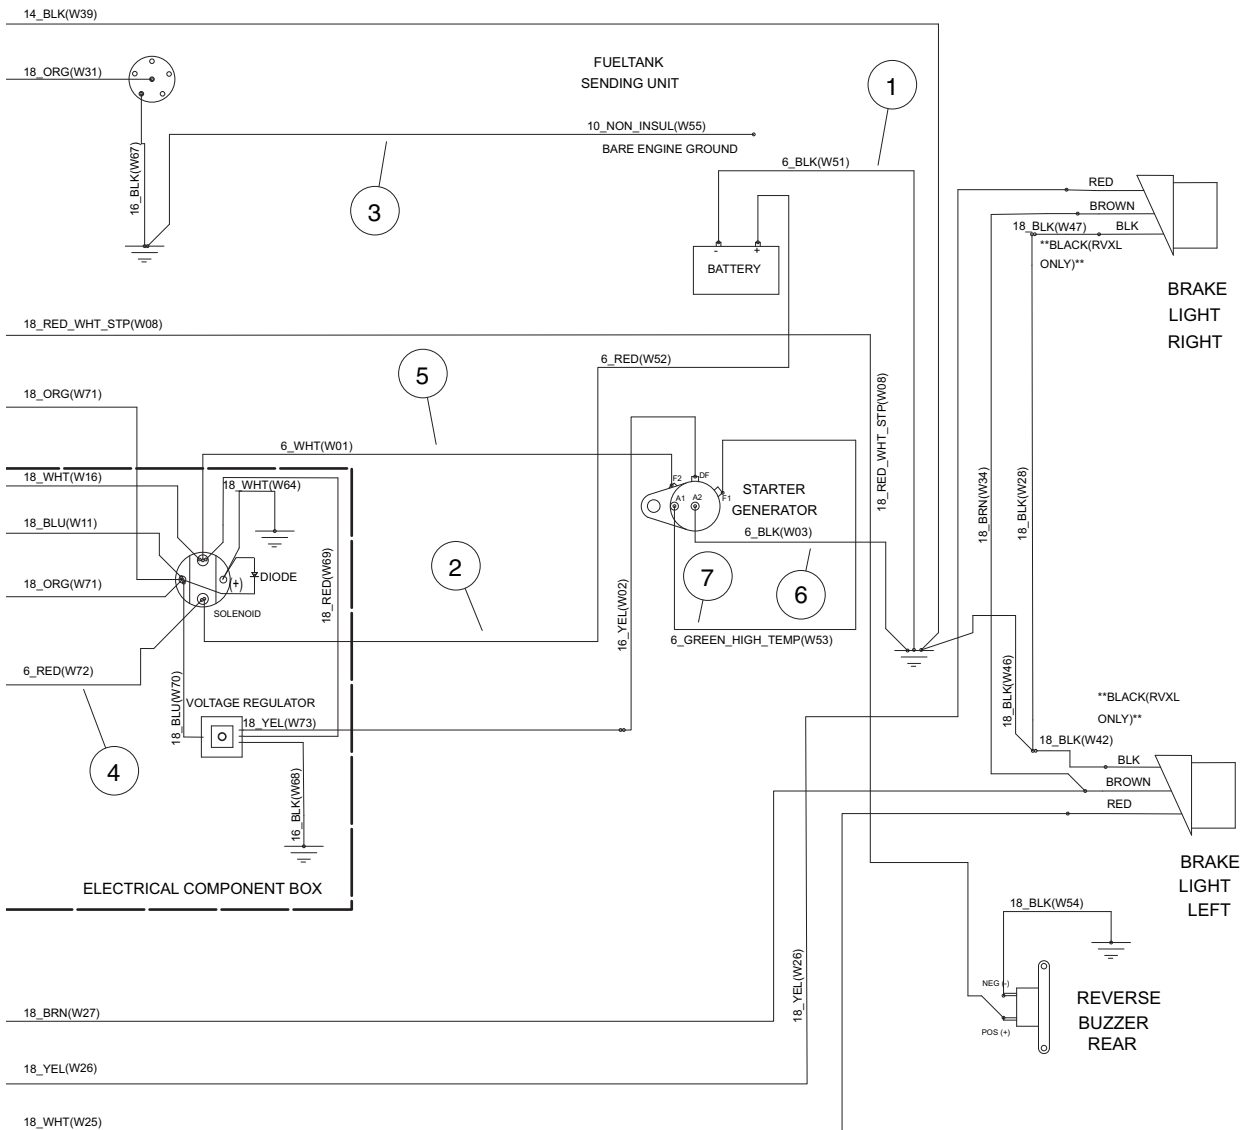


000326-002

See previous two pages for illustration.

WIRING – GASOLINE VILLAGER 6 AND TRANSPORTER 4 AND 6

ITEM	PART NO.	DESCRIPTION	QTY	6	G
		1 2 3 4			
1	<u>1012382</u>	Wire Assy, #6 Black	1		
2	<u>1014119</u>	Wire Assembly #6 Red	1		
3	<u>1015332</u>	Wire Assembly, #10, Uninsulated	1		
4	<u>1015737</u>	Wire Assy, #10 Red	1		
5	<u>1015769</u>	Wire Assy, #6 White	1		
6	<u>1016380</u>	Wire Assembly #6 Black	1		
7	<u>101837301</u>	Wire Assy, #6 Green	1		
8	****	Wire Harness (Lighting)	1		
9	<u>101990402</u>	Wire Harness Assy	1		
		**** Special order item available upon request.			

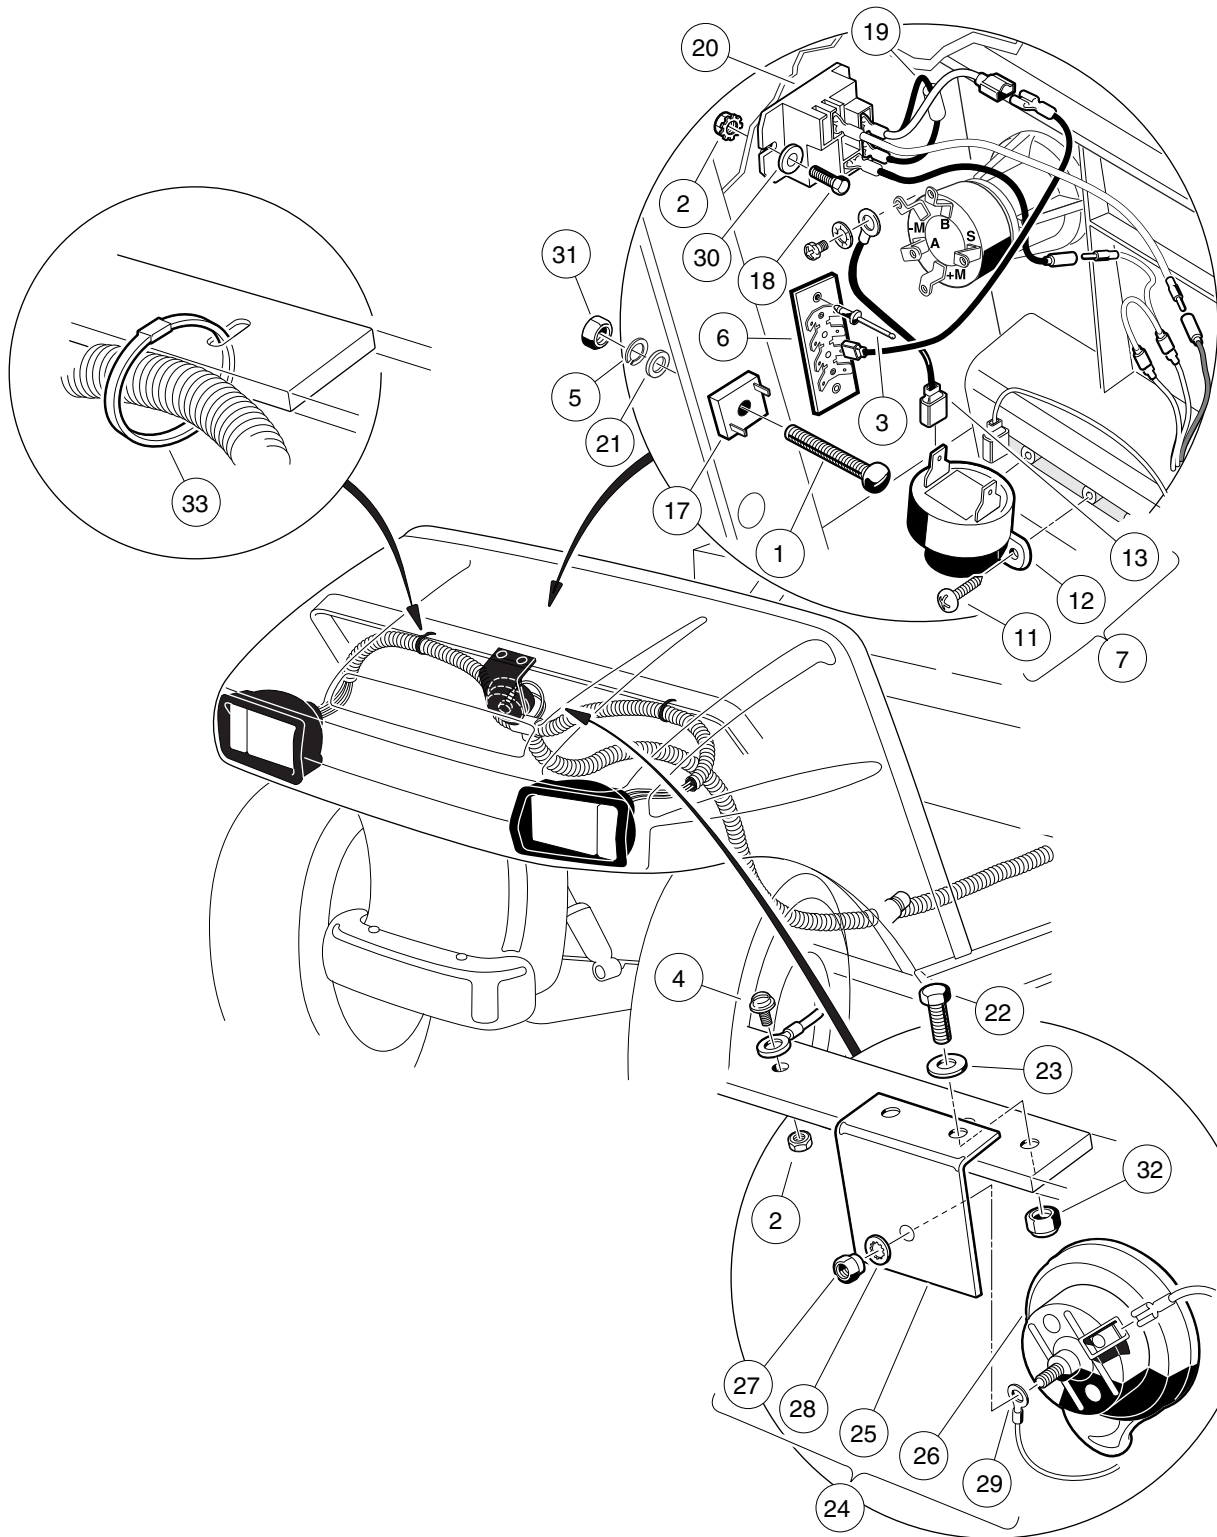


000335-001


FRONT BODY ELECTRICAL COMPONENTS – VILLAGER 6 AND 8, AND TRANSPORTER 4 AND 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010909</u>	Screw, #10-32 X 1.25 Rd Hd Mch	1
2	<u>1011229</u>	Locknut, #6-32 Whiz	3
3	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2
4	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
5	<u>1016</u>	Lockwasher, #10 Split	1
6	<u>1016356</u>	Terminal Block with Insulator	1
7	<u>1016859</u>	Kit, Reverse Buzzer (includes items 8 through 16)	1
8	<u>1011229</u>	Locknut, #6-32 Whiz	1
9	<u>1012431</u>	Washer, #4 Flat	2
10	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
11	<u>1016849</u>	Screw, #4-24 X 0.33 Pan-Head Machine	2
12	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
13	<u>1016857</u>	Wire Assembly Black #18	1
14	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2
15	<u>8057</u>	Nut, #4-40 Hex Machine	2
16	<u>8058</u>	Lockwasher, #4 Split	2
17	<u>1017721</u>	Limiter, Voltage	1
18	<u>1017853</u>	Screw, #6-32 X 0.75 Hex-Head Machine	2
19	<u>101914401</u>	Assembly, Voltage Suppressor	1
20	<u>102199001</u>	Relay, 12-Volt	1
21	<u>183</u>	Washer, #10 Type A Flat	1
22	<u>304</u>	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
23	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
24	<u>4029</u>	Horn (includes items 25 through 29)	1
25	<u>1011825</u>	Horn Bracket	1
26	<u>1014530</u>	Horn, 12-VDC	1
27	<u>101955101</u>	Nut, M6 Hex	1
28	<u>7820</u>	Washer, 5/16 Internal-Tooth	1
29	<u>N/A</u>	5/16 Ring Term.	1
30	<u>7591</u>	Washer, #6 Flat	2
31	<u>7893</u>	Nut, #10-32 Hex	1
32	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2
33	<u>8639</u>	Tie Wrap, 11" Nylon	4
Note: Items 8 through 10, and 14 through 16 are included in the reverse buzzer kit, but are not used in this application.			

6

  G







See previous two pages for illustration.

WIRING – GASOLINE VILLAGER 8

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	<u>1012382</u>	Wire Assy, #6 Black	1	
2	<u>1014119</u>	Wire Assembly #6 Red	1	
3	<u>1015332</u>	Wire Assembly, #10, Uninsulated	1	
4	<u>1015737</u>	Wire Assy, #10 Red	1	
5	<u>1015769</u>	Wire Assy, #6 White	1	
6	<u>1016380</u>	Wire Assembly #6 Black	1	
7	<u>101837301</u>	Wire Assy, #6 Green	1	
8	****	Wire Harness (Lighting)	1	
9	<u>101990502</u>	Wire Harness Assy	1	
**** Special order item available upon request.				

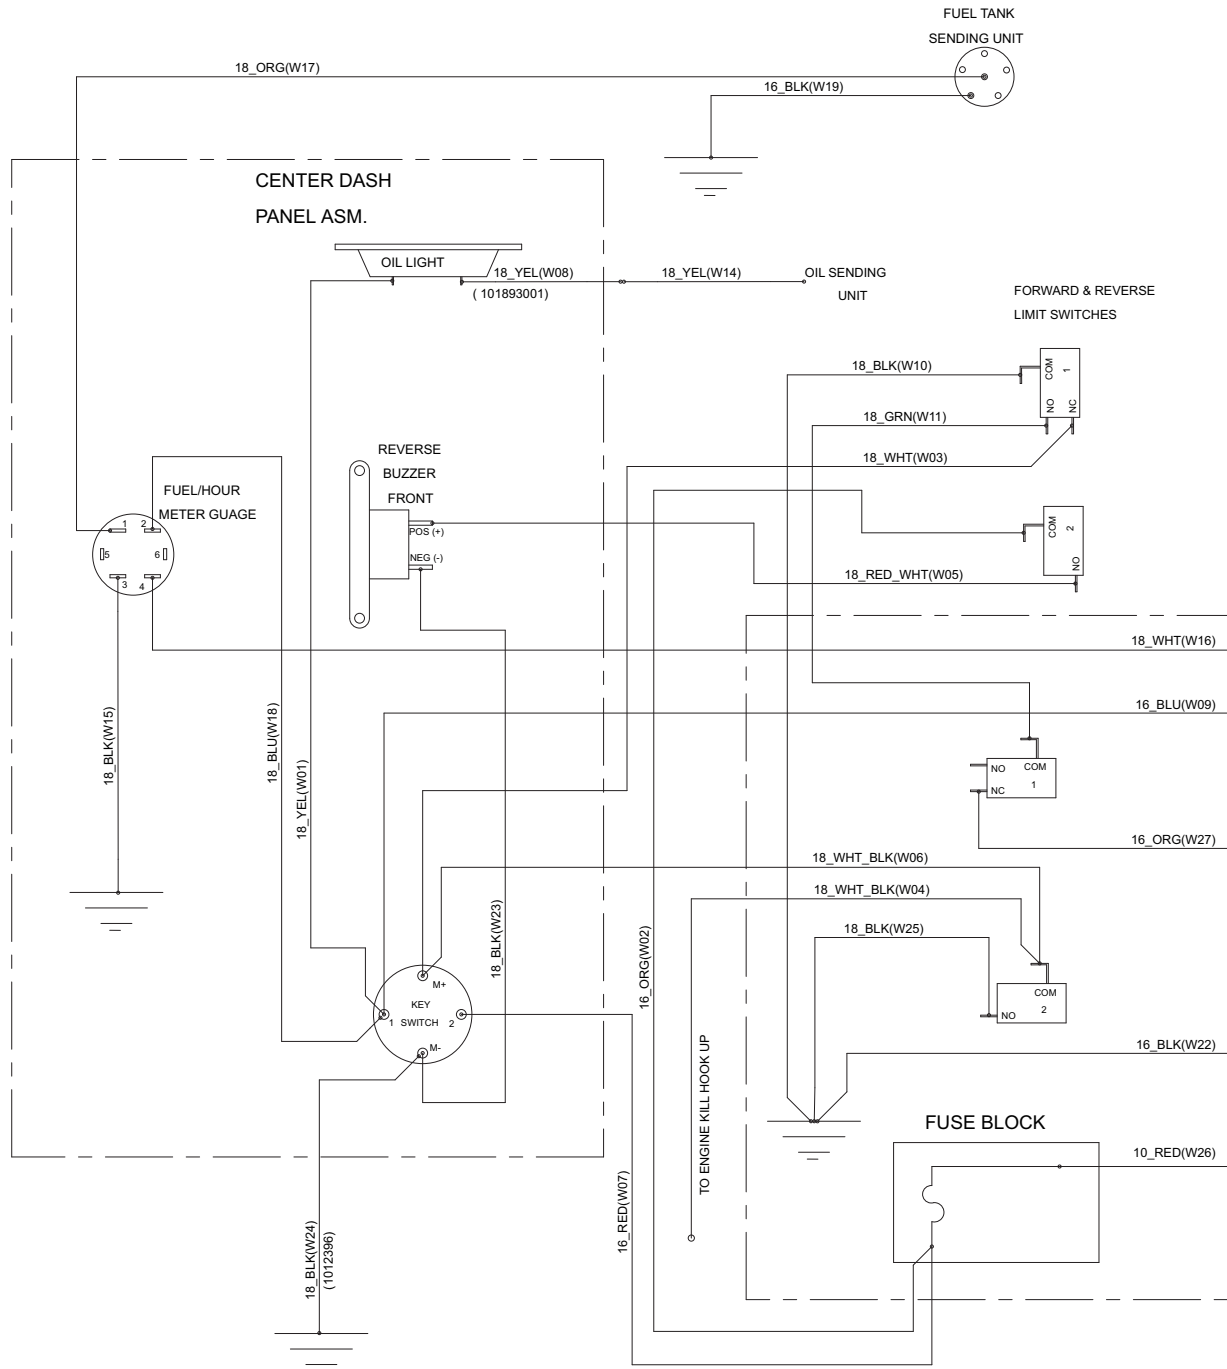

000372-001

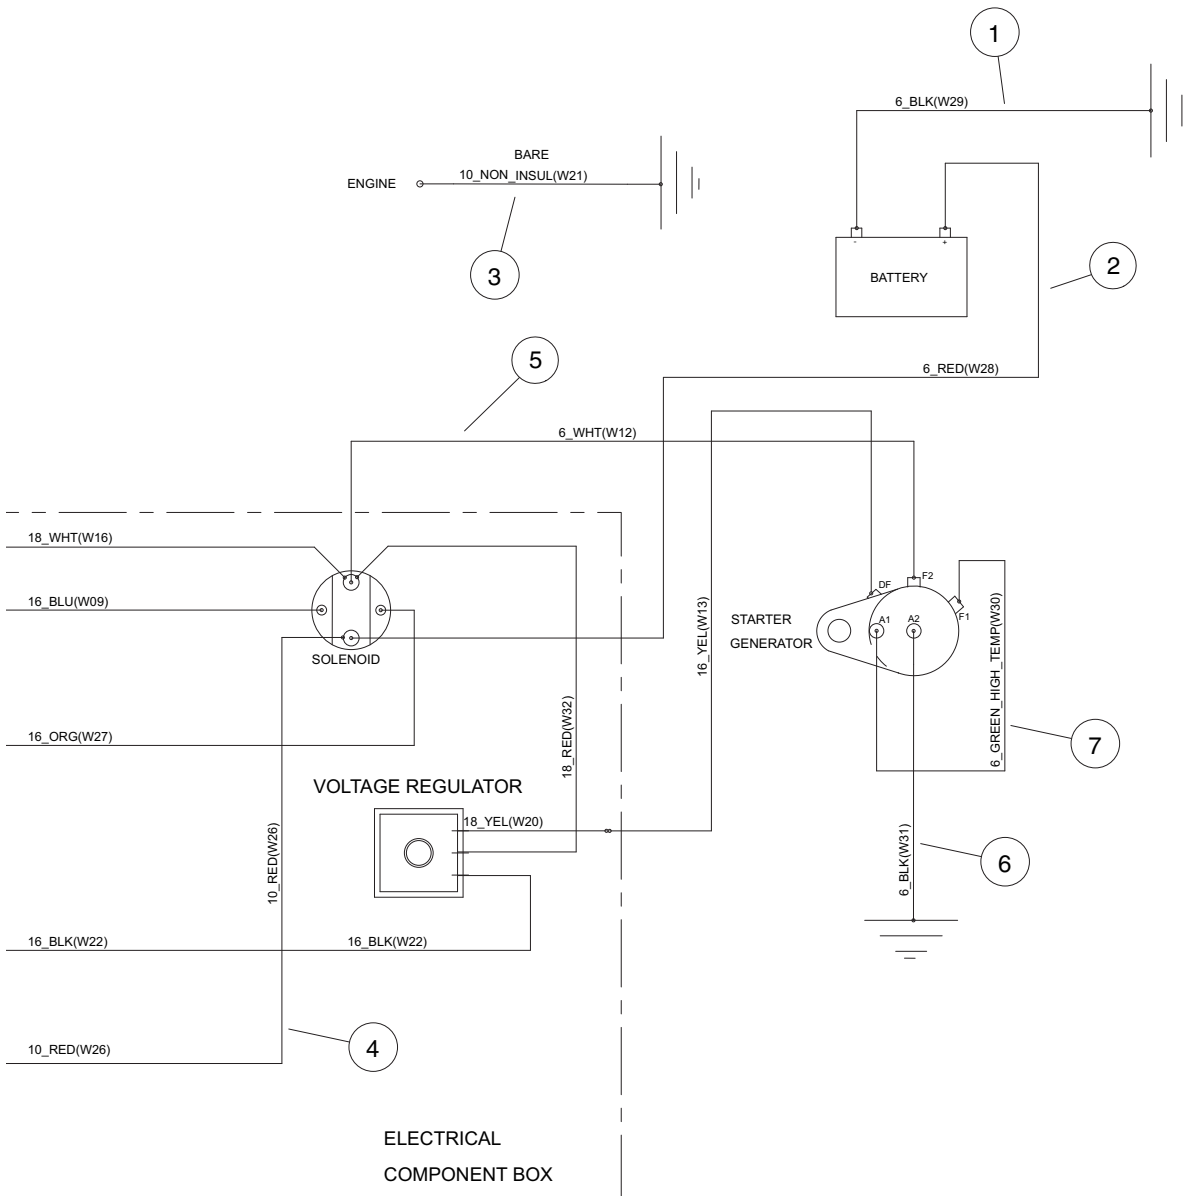

000372-001


6

G

See previous two pages for illustration.

WIRING – GASOLINE DS VILLAGER 4

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	<u>1012382</u>	Wire Assy, #6 Black	1	
2	<u>1014119</u>	Wire Assembly #6 Red	1	
3	<u>1015332</u>	Wire Assembly, #10, Uninsulated	1	
4	<u>1015737</u>	Wire Assy, #10 Red	1	
5	<u>1015769</u>	Wire Assy, #6 White	1	
6	<u>1015920</u>	Ground Wire Assembly	1	
7	<u>101837301</u>	Wire Assy, #6 Green	1	
8	<u>103332402</u>	Assy Wire Harness Gas V4 Kit	1	

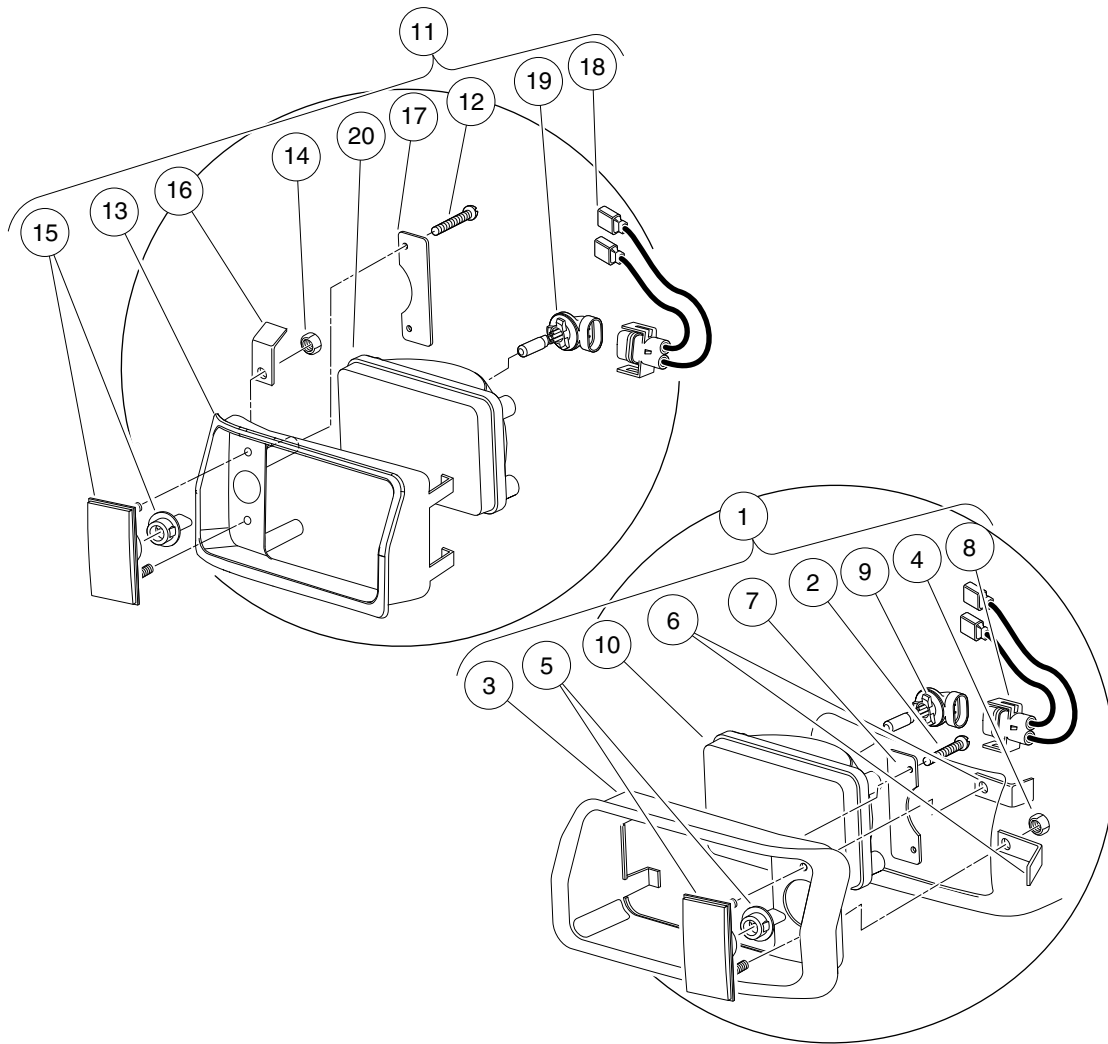


000073-001

HEADLIGHTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101988001</u>	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	1
2	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2
3	<u>1016880</u>	Headlight Bezel, Left	1
4	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
5	<u>1017062</u>	Turn Signal Lens Assy	1
6	<u>1017064</u>	Mounting Bracket	2
7	<u>1017065</u>	Retainer, Headlight	1
8	<u>101987901</u>	Connector Harness Assembly, Headlight	1
9	<u>101988101</u>	Bulb, Headlight	1
10	<u>101988201</u>	Lens, Headlight	1
11	<u>101988002</u>	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	1
12	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2
13	<u>1016879</u>	Headlight Bezel, Right	1
14	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
15	<u>1017062</u>	Turn Signal Lens Assy	1
16	<u>1017064</u>	Mounting Bracket	2
17	<u>1017065</u>	Retainer, Headlight	1
18	<u>101987901</u>	Connector Harness Assembly, Headlight	1
19	<u>101988101</u>	Bulb, Headlight	1
20	<u>101988201</u>	Lens, Headlight	1

6

G

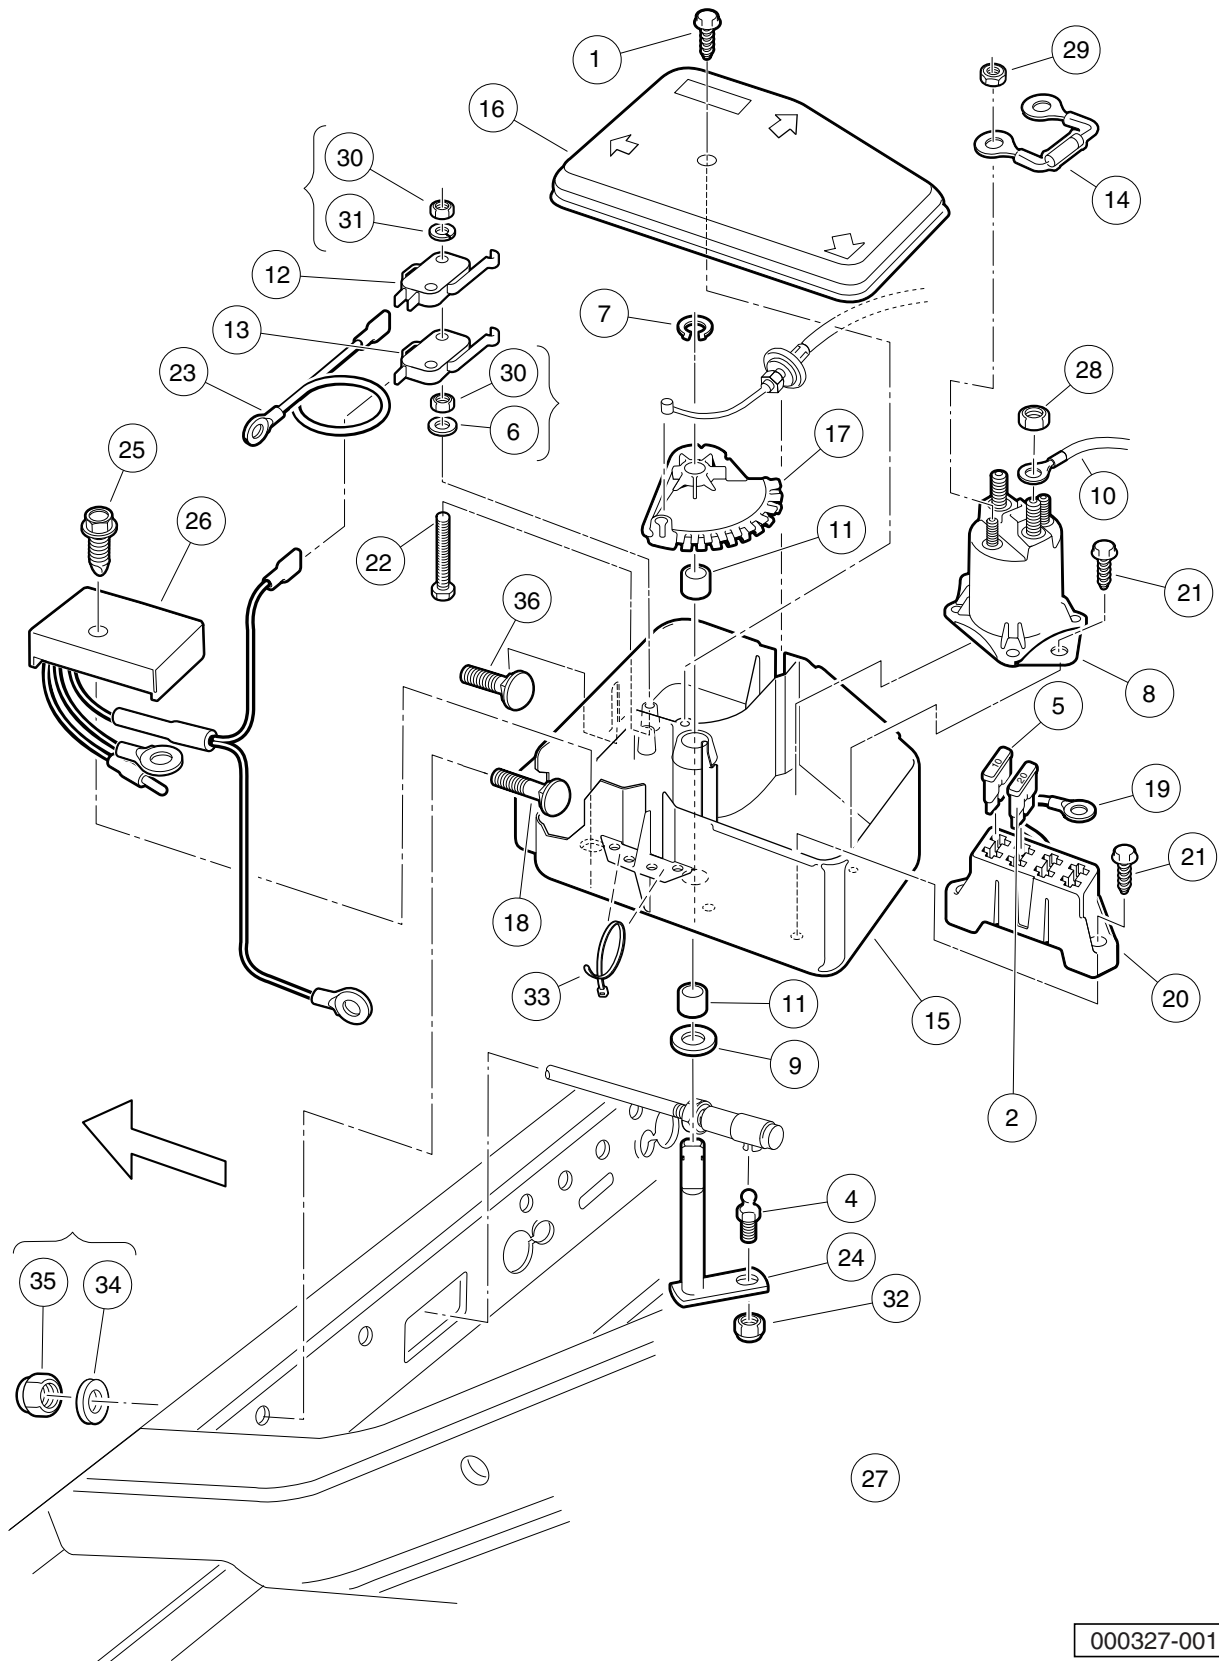


000327-001

ELECTRICAL COMPONENT BOX – GASOLINE DS VILLAGER 4

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	1
2	<u>1016423</u>	Fuse, 20-Amp	1
3	N/A	Elec Component Box Asm, V4 (includes items 4 through 33)	1
4	<u>1010954</u>	Stud, 1/4-28 X 0.560 Ball	1
5	<u>1012295</u>	Fuse, 10-Amp	1
6	<u>1012431</u>	Washer, #4 Flat	2
7	<u>1013589</u>	Ring, 0.338" Internal Retaining	1
8	<u>1013609</u>	Solenoid, 12-Volt	1
9	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	1
10	<u>1014119</u>	Wire Assembly #6 Red	1
11	<u>1014145</u>	Bushing, Secondary Weight, Split	2
12	<u>1014807</u>	Switch, Limit	1
13	<u>1014808</u>	Switch, Limit	1
14	<u>1014948</u>	Diode	1
15	<u>1015371</u>	Box, Electrical Component	1
16	<u>1015372</u>	Cover, Electric Box	1
17	<u>1015373</u>	Cam, Electric Box	1
18	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	1
19	<u>1015737</u>	Wire Assy, #10 Red	1
20	<u>1015741</u>	Fuse Block	1
21	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	4
22	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2
23	<u>1016401</u>	Wire Assy, #16 Orange	1
24	<u>101821301</u>	Bell Crank Weld Asm	1
25	<u>101856102</u>	Screw, 1/4-15 X 1.50 Hi-lo Hex	1
26	<u>102711201</u>	Voltage Regulator	1
27	<u>103332402</u>	Assy Wire Harness Gas V4 Kit	1
28	<u>1242</u>	Nut, 5/16-18 Hex	2
29	<u>7893</u>	Nut, #10-32 Hex	2
30	<u>8057</u>	Nut, #4-40 Hex Machine	4
31	<u>8058</u>	Lockwasher, #4 Split	2
32	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1
33	<u>8990</u>	Tie Wrap, 8" Nylon	2
34	<u>1241</u>	Washer, 5/16 Type A Flat	2
35	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
36	<u>7818</u>	Bolt, Carriage, 5/16-18 X 1.5	1

6

G

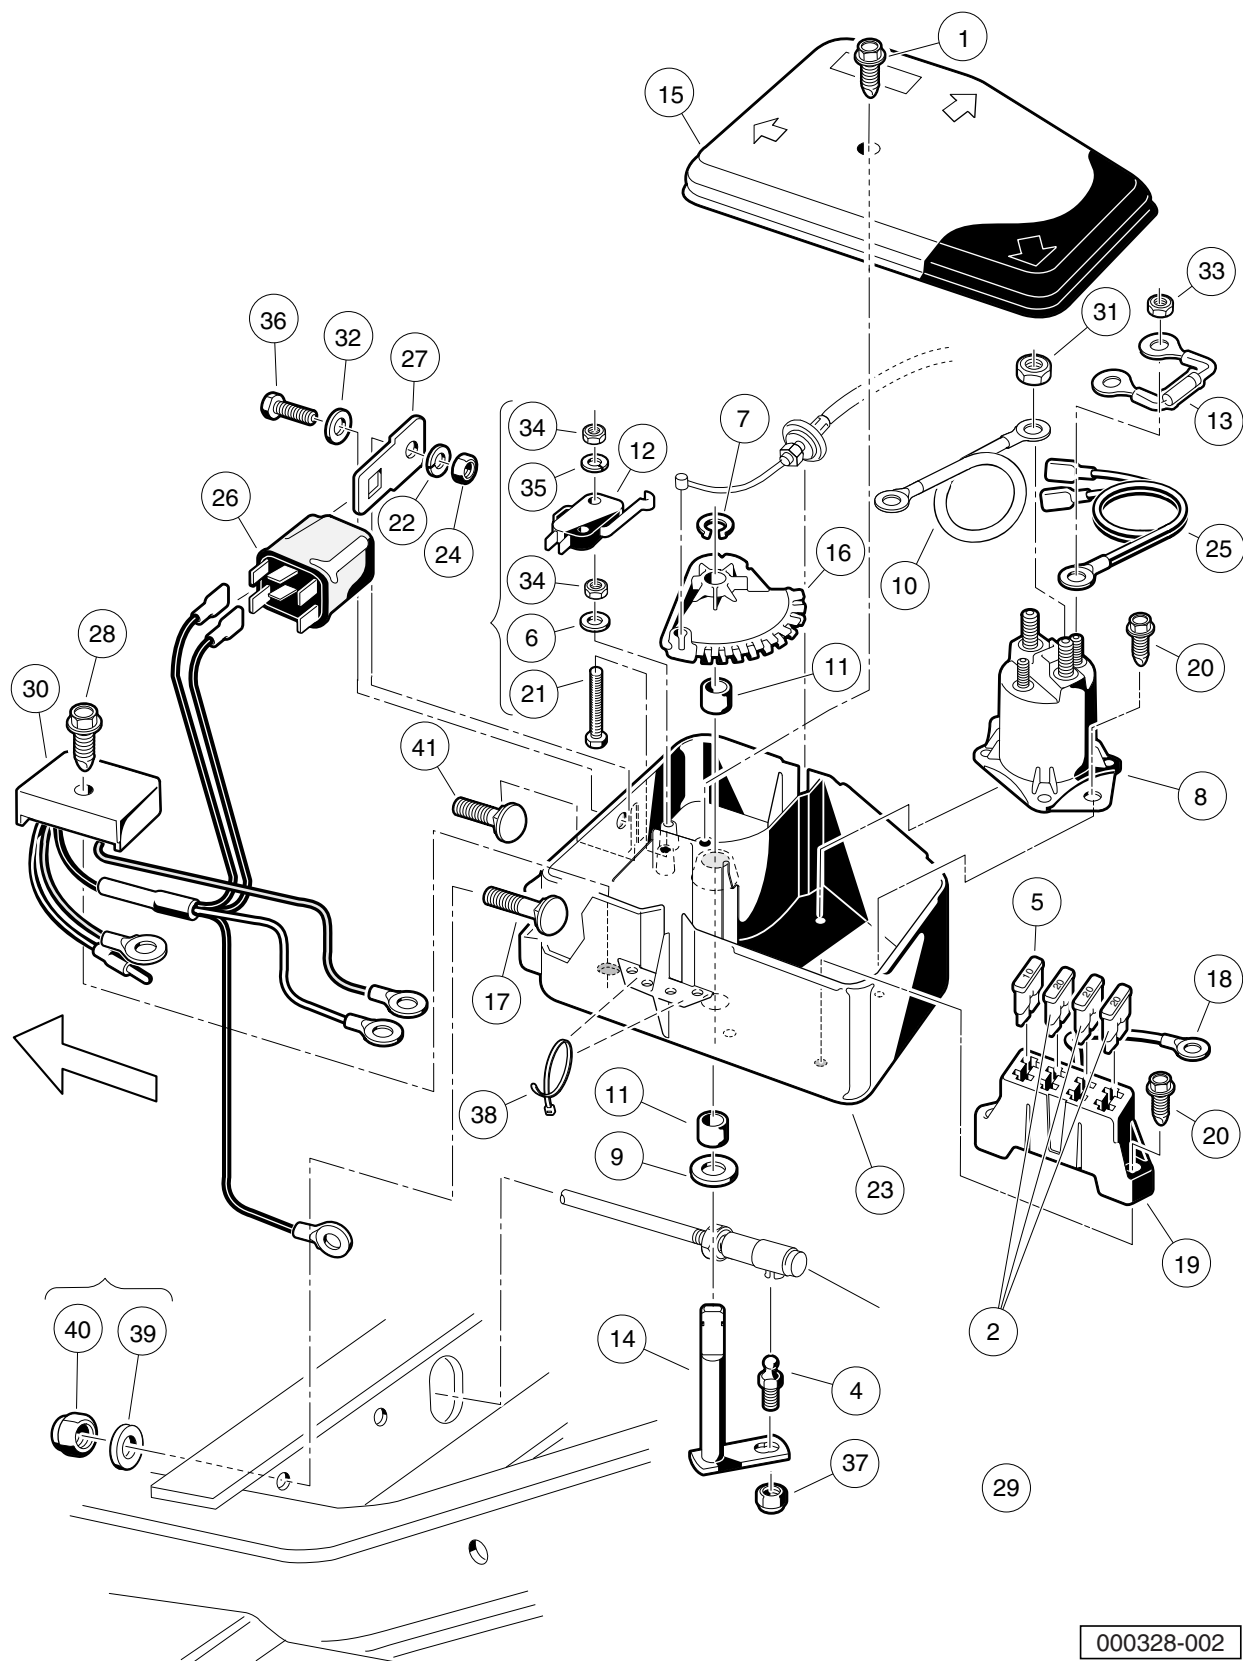


000328-002

ELECTRICAL COMPONENT BOX – GASOLINE TRANSPORTER 4 AND 6, AND VILLAGER 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	1
2	<u>1016423</u>	Fuse, 20-Amp	3
3	N/A	Electrical Component Box Assembly (includes items 4 through 38)	1
4	<u>1010954</u>	Stud, 1/4-28 X 0.560 Ball	1
5	<u>1012295</u>	Fuse, 10-Amp	1
6	<u>1012431</u>	Washer, #4 Flat	2
7	<u>1013589</u>	Ring, 0.338" Internal Retaining	1
8	<u>1013609</u>	Solenoid, 12-Volt	1
9	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	1
10	<u>1014119</u>	Wire Assembly #6 Red	1
11	<u>1014145</u>	Bushing, Secondary Weight, Split	2
12	<u>1014807</u>	Switch, Limit	1
13	<u>1014948</u>	Diode	1
14	<u>1015345</u>	Bell Crank and Shaft Assembly	1
15	<u>1015372</u>	Cover, Electric Box	1
16	<u>1015373</u>	Cam, Electric Box	1
17	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	1
18	<u>1015737</u>	Wire Assy, #10 Red	1
19	<u>1015741</u>	Fuse Block	1
20	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	4
21	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2
22	<u>1016</u>	Lockwasher, #10 Split	1
23	<u>1016997</u>	Electrical Component Box	1
24	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	1
25	<u>1017006</u>	Wire Assembly Orange #18	1
26	<u>1017239</u>	Relay	1
27	<u>1017243</u>	Mounting Bracket, Relay	1
28	<u>101856102</u>	Screw, 1/4-15 X 1.50 Hi-lo Hex	1
29	<u>101990402</u>	Wire Harness Assy	1
30	N/A	Asm, Voltage Regulator Key Sta	1
31	<u>1242</u>	Nut, 5/16-18 Hex	2
32	<u>183</u>	Washer, #10 Type A Flat	1
33	<u>7893</u>	Nut, #10-32 Hex	2
34	<u>8057</u>	Nut, #4-40 Hex Machine	4
35	<u>8058</u>	Lockwasher, #4 Split	2
36	<u>8450</u>	Screw, #10-24 X 0.50 Hex-Head	1
37	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1
38	<u>8990</u>	Tie Wrap, 8" Nylon	3
39	<u>1241</u>	Washer, 5/16 Type A Flat	2
40	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
41	<u>7818</u>	Bolt, Carriage, 5/16-18 X 1.5	1

6

G

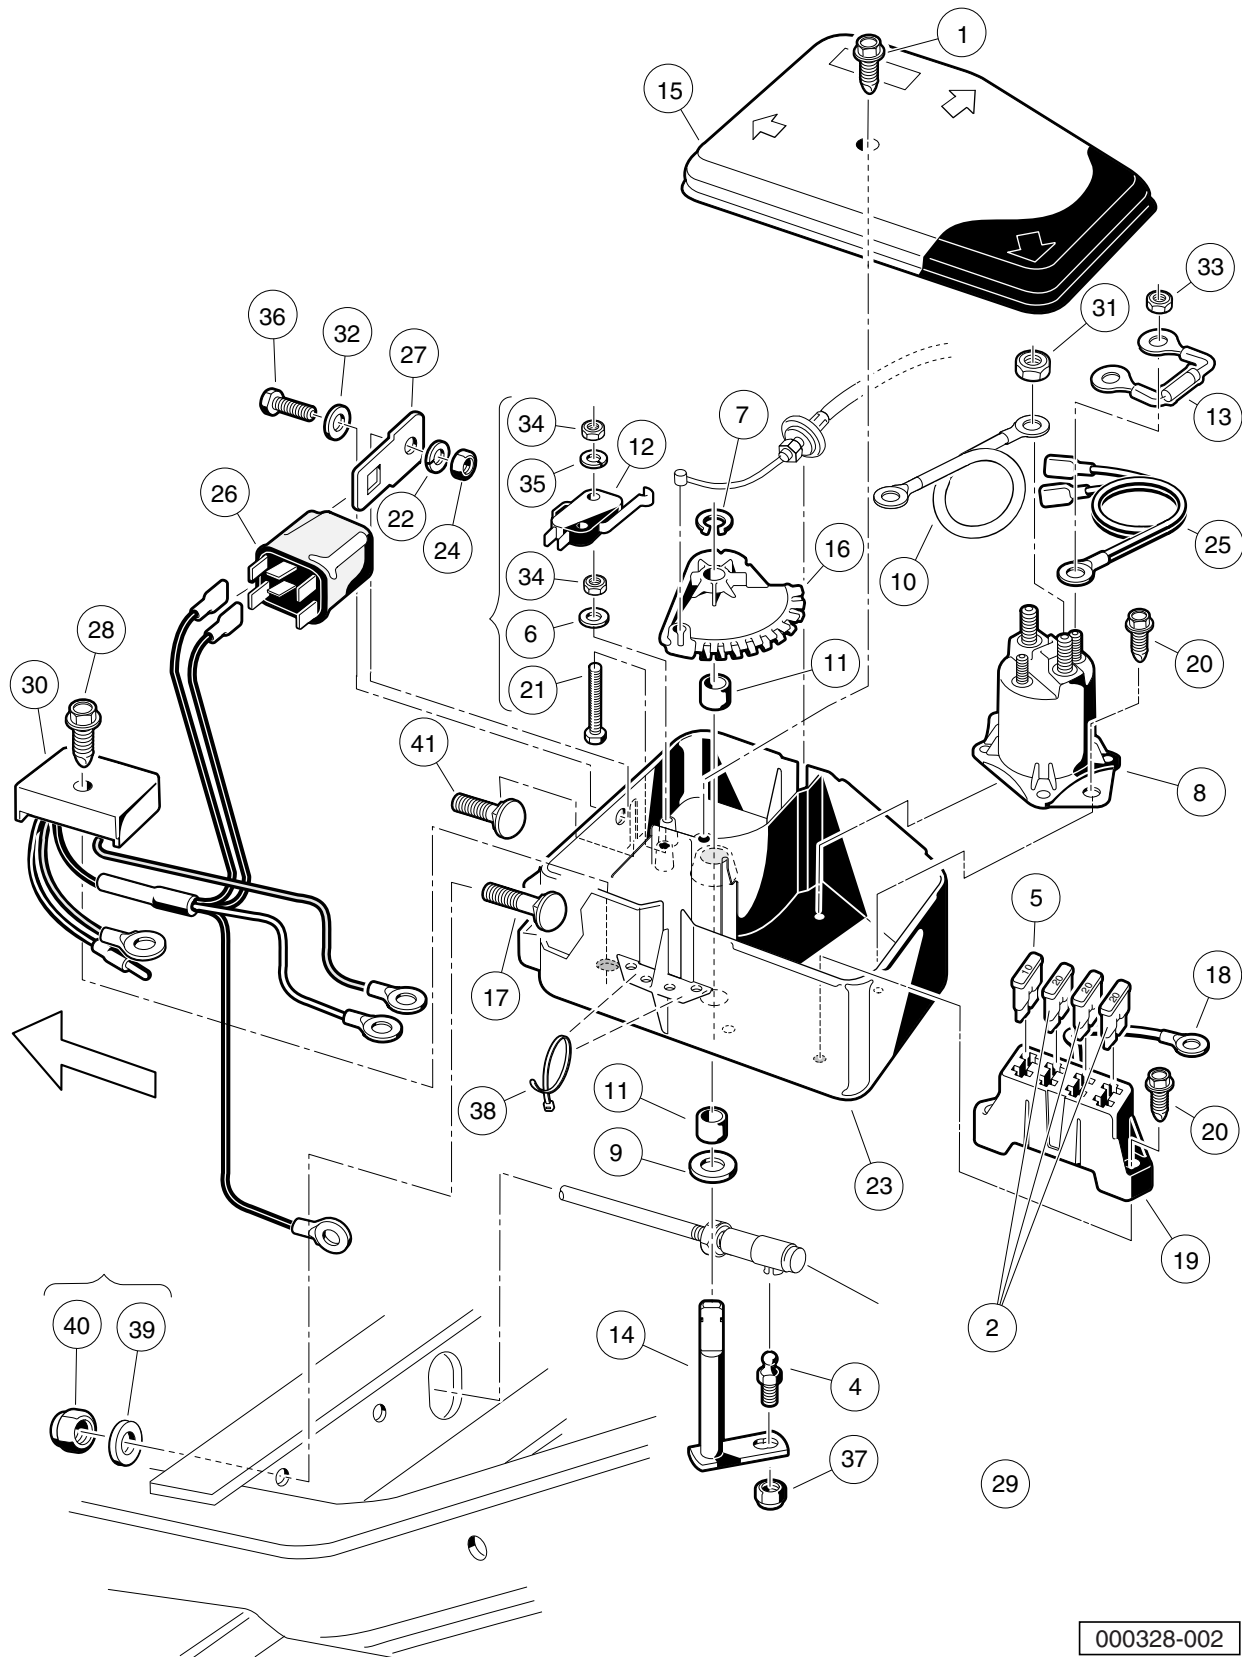


000328-002

ELECTRICAL COMPONENT BOX – GASOLINE VILLAGER 8

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	1
2	<u>1016423</u>	Fuse, 20-Amp	3
3	101827703	Electrical Component Box Assembly (includes items 4 through 38)	1
4	<u>1010954</u>	Stud, 1/4-28 X 0.560 Ball	1
5	<u>1012295</u>	Fuse, 10-Amp	1
6	<u>1012431</u>	Washer, #4 Flat	2
7	<u>1013589</u>	Ring, 0.338" Internal Retaining	1
8	<u>1013609</u>	Solenoid, 12-Volt	1
9	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	1
10	<u>1014119</u>	Wire Assembly #6 Red	1
11	<u>1014145</u>	Bushing, Secondary Weight, Split	2
12	<u>1014807</u>	Switch, Limit	1
13	1014948	Diode	1
14	1015345	Bell Crank and Shaft Assembly	1
15	<u>1015372</u>	Cover, Electric Box	1
16	<u>1015373</u>	Cam, Electric Box	1
17	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	1
18	<u>1015737</u>	Wire Assy, #10 Red	1
19	<u>1015741</u>	Fuse Block	1
20	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	4
21	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2
22	<u>1016</u>	Lockwasher, #10 Split	1
23	<u>1016997</u>	Electrical Component Box	1
24	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	1
25	<u>1017006</u>	Wire Assembly Orange #18	1
26	<u>1017239</u>	Relay	1
27	<u>1017243</u>	Mounting Bracket, Relay	1
28	<u>101856102</u>	Screw, 1/4-15 X 1.50 Hi-lo Hex	1
29	<u>101990502</u>	Wire Harness Assy	1
30	N/A	Asm, Voltage Regulator Key Sta	1
31	<u>1242</u>	Nut, 5/16-18 Hex	2
32	<u>183</u>	Washer, #10 Type A Flat	1
33	<u>7893</u>	Nut, #10-32 Hex	2
34	<u>8057</u>	Nut, #4-40 Hex Machine	4
35	<u>8058</u>	Lockwasher, #4 Split	2
36	<u>8450</u>	Screw, #10-24 X 0.50 Hex-Head	1
37	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1
38	<u>8990</u>	Tie Wrap, 8" Nylon	3
39	<u>1241</u>	Washer, 5/16 Type A Flat	2
40	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
41	<u>7818</u>	Bolt, Carriage, 5/16-18 X 1.5	1

6


G

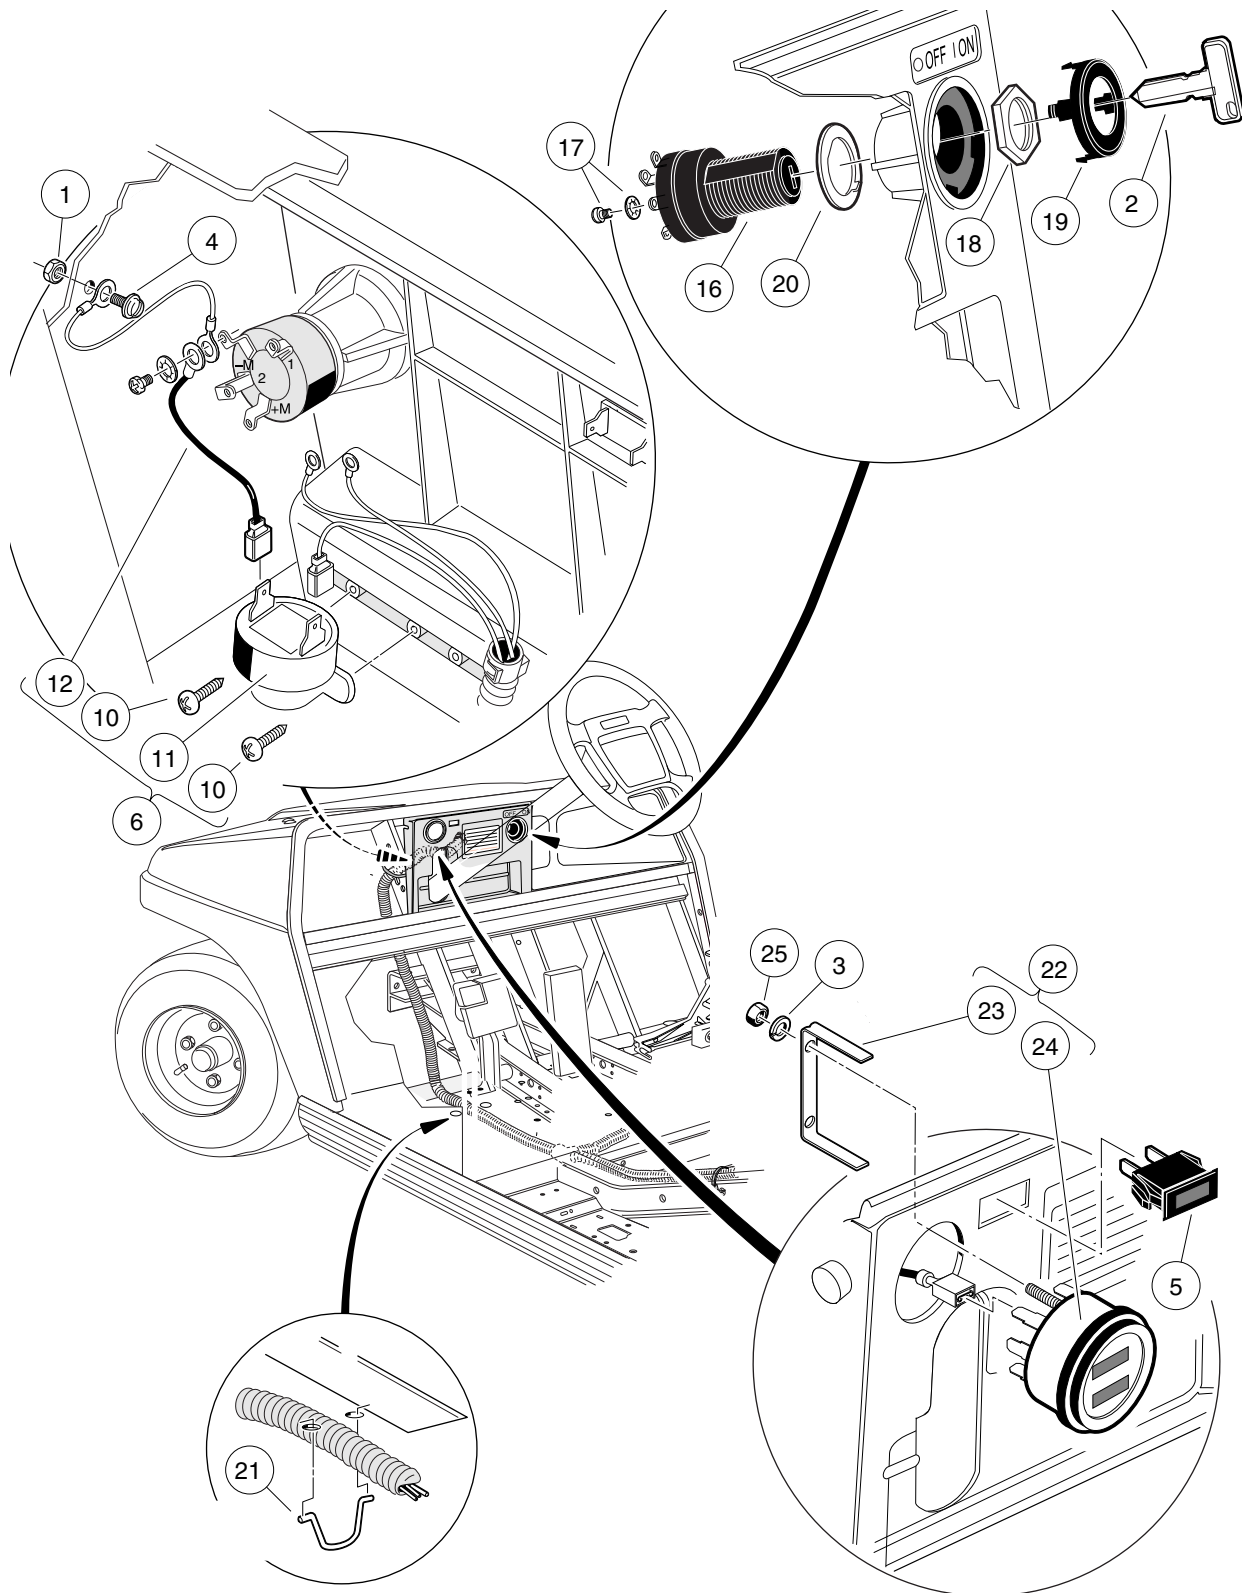

000330-001

CONTROLS AND INDICATORS – DS VILLAGER 4

ITEM	PART NO.	DESCRIPTION	QTY	6	G
		1 2 3 4			
1	<u>1011229</u>	Locknut, #6-32 Whiz	1		
2	<u>1012505</u>	Keys (set of 2)	2		
3	<u>1012986</u>	Lockwasher, M4	2		
4	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1		
5	<u>1016630</u>	Light, Oil	1		
6	<u>1016859</u>	Kit, Reverse Buzzer (includes items 7 through 15)	1		
7	<u>1011229</u>	Locknut, #6-32 Whiz	1		
8	<u>1012431</u>	Washer, #4 Flat	2		
9	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1		
10	<u>1016849</u>	Screw, #4-24 X 0.33 Pan-Head Machine	2		
11	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1		
12	<u>1016857</u>	Wire Assembly Black #18	1		
13	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2		
14	<u>8057</u>	Nut, #4-40 Hex Machine	2		
15	<u>8058</u>	Lockwasher, #4 Split	2		
16	<u>101826301</u>	Key Switch, 12-Volt, Off/On	1		
17	<u>101830601</u>	Screw and Washer Assembly	4		
18	<u>101830701</u>	Nut, Key Switch	1		
19	<u>101834502</u>	Cap, Black Key Switch	1		
20	<u>101851101</u>	Washer, Key Switch	1		
21	<u>101900901</u>	Harness Retainer	3		
22	<u>101990703</u>	Gauge, Fuel/Hour, with Bracket (includes items 23 and 24)	1		
23	<u>102025901</u>	Bracket, Fuel Gauge/Hour Meter	1		
24	N/A	Gauge, Fuel/Hour	1		
25	<u>101991101</u>	Nut, M4-0.7	2		
		Note: Items 7 through 9, and 13 through 15 are included in the reverse buzzer kit, but are not used in this application.			

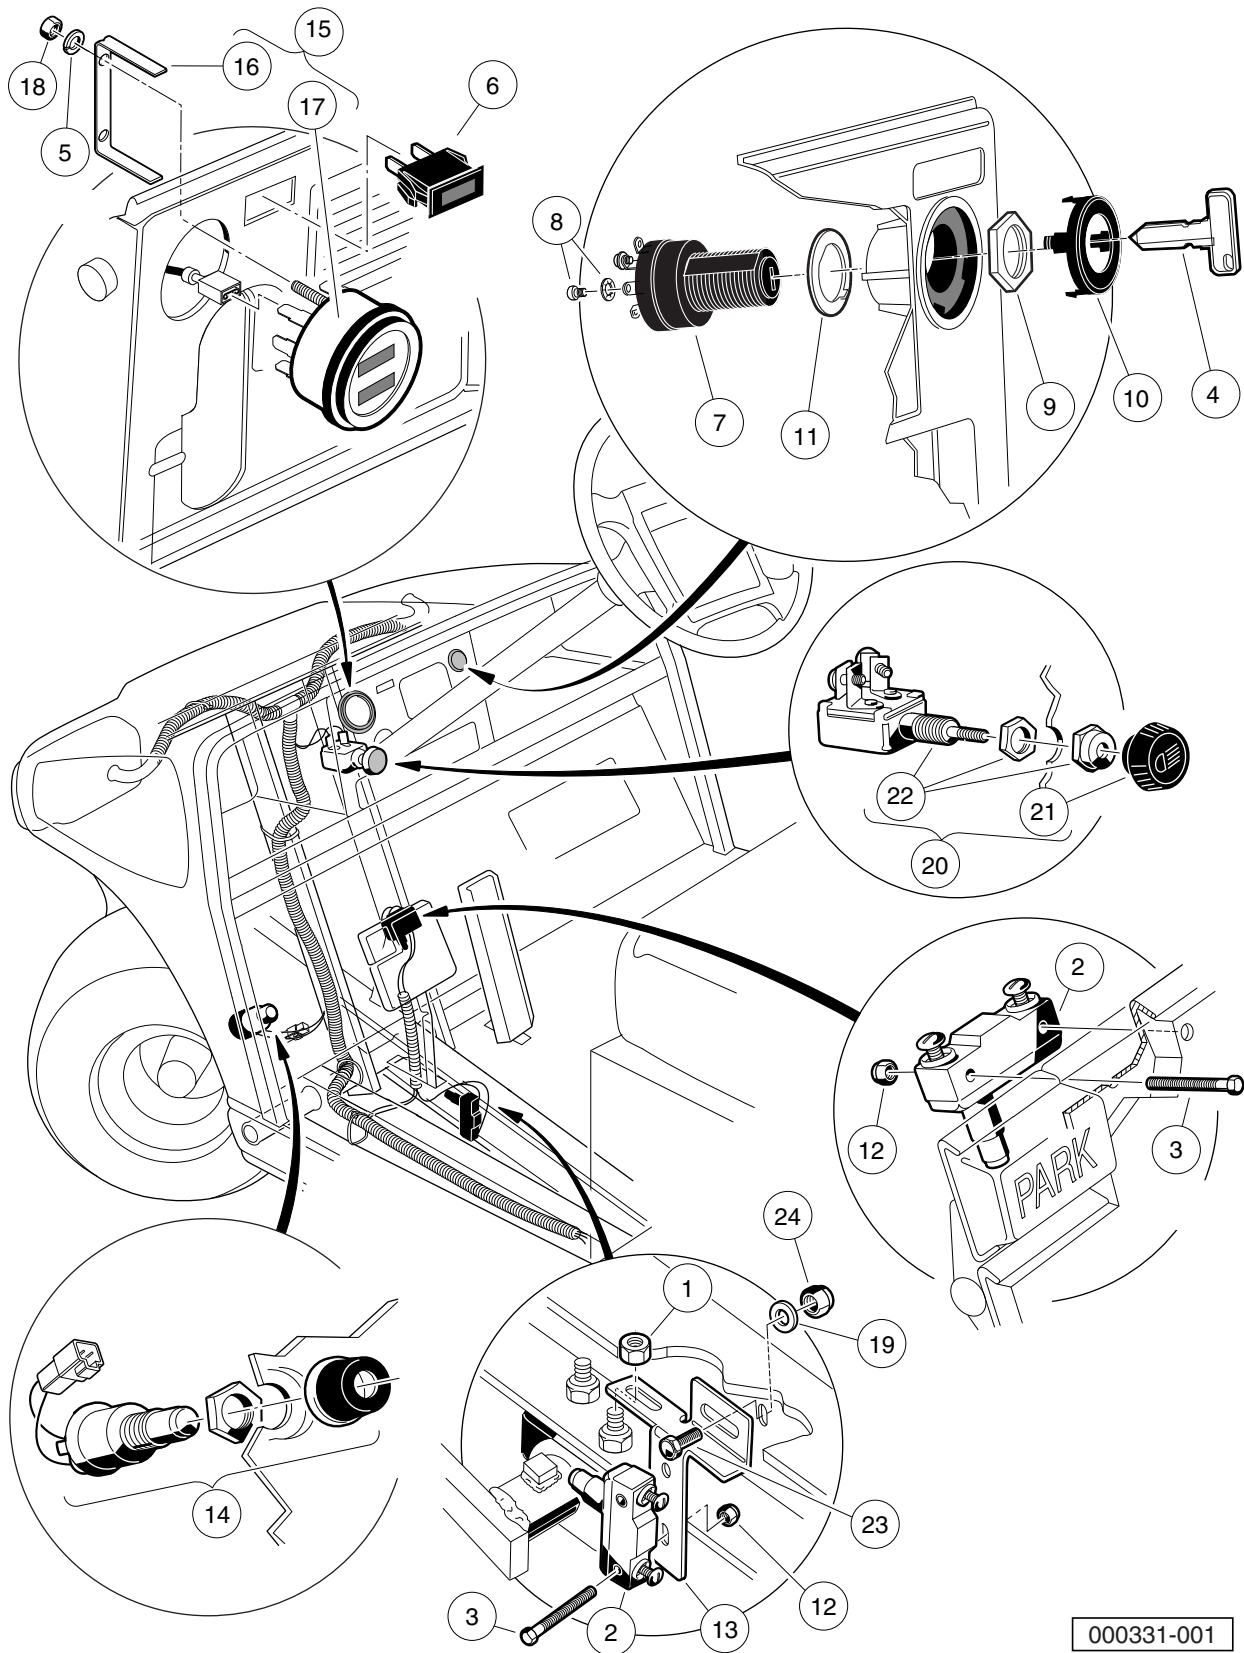


000331-001

CONTROLS AND INDICATORS – VILLAGER 6 AND 8, AND TRANSPORTER 4 AND 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011280</u>	Locknut, 5/16-18	1
2	<u>1011439</u>	Switch, Limit	2
3	<u>1011557</u>	Screw, #6-32 X 1.00 Hex-Head Machine	4
4	<u>1012505</u>	Keys (set of 2)	1
5	<u>1012986</u>	Lockwasher, M4	2
6	<u>1016630</u>	Light, Oil	1
7	101826401	Key Switch, 12-Volt, Off/On/Start	1
8	101830601	Screw and Washer Assembly	5
9	<u>101830701</u>	Nut, Key Switch	1
10	<u>101834502</u>	Cap, Black Key Switch	1
11	<u>101851101</u>	Washer, Key Switch	1
12	<u>101932201</u>	Locknut, #6-32 Nylon	4
13	<u>101957101</u>	Bracket, Brake Light Switch	1
14	<u>101969701</u>	Horn Button and Wire Assembly	1
15	<u>101990703</u>	Gauge, Fuel/Hour, with Bracket (includes items 16 and 17)	1
16	102025901	Bracket, Fuel Gauge/Hour Meter	1
17	N/A	Gauge, Fuel/Hour	1
18	<u>101991101</u>	Nut, M4-0.7	2
19	<u>1241</u>	Washer, 5/16 Type A Flat	1
20	<u>4034</u>	Light Switch (includes items 21 and 22)	1
21	<u>1013857</u>	Knob, Light Switch	1
22	<u>1013858</u>	Switch, Light Without Knob	1
23	<u>7173</u>	Screw, 5/16-18 X 0.75 Hex-Head Cap	1
24	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1

6

G

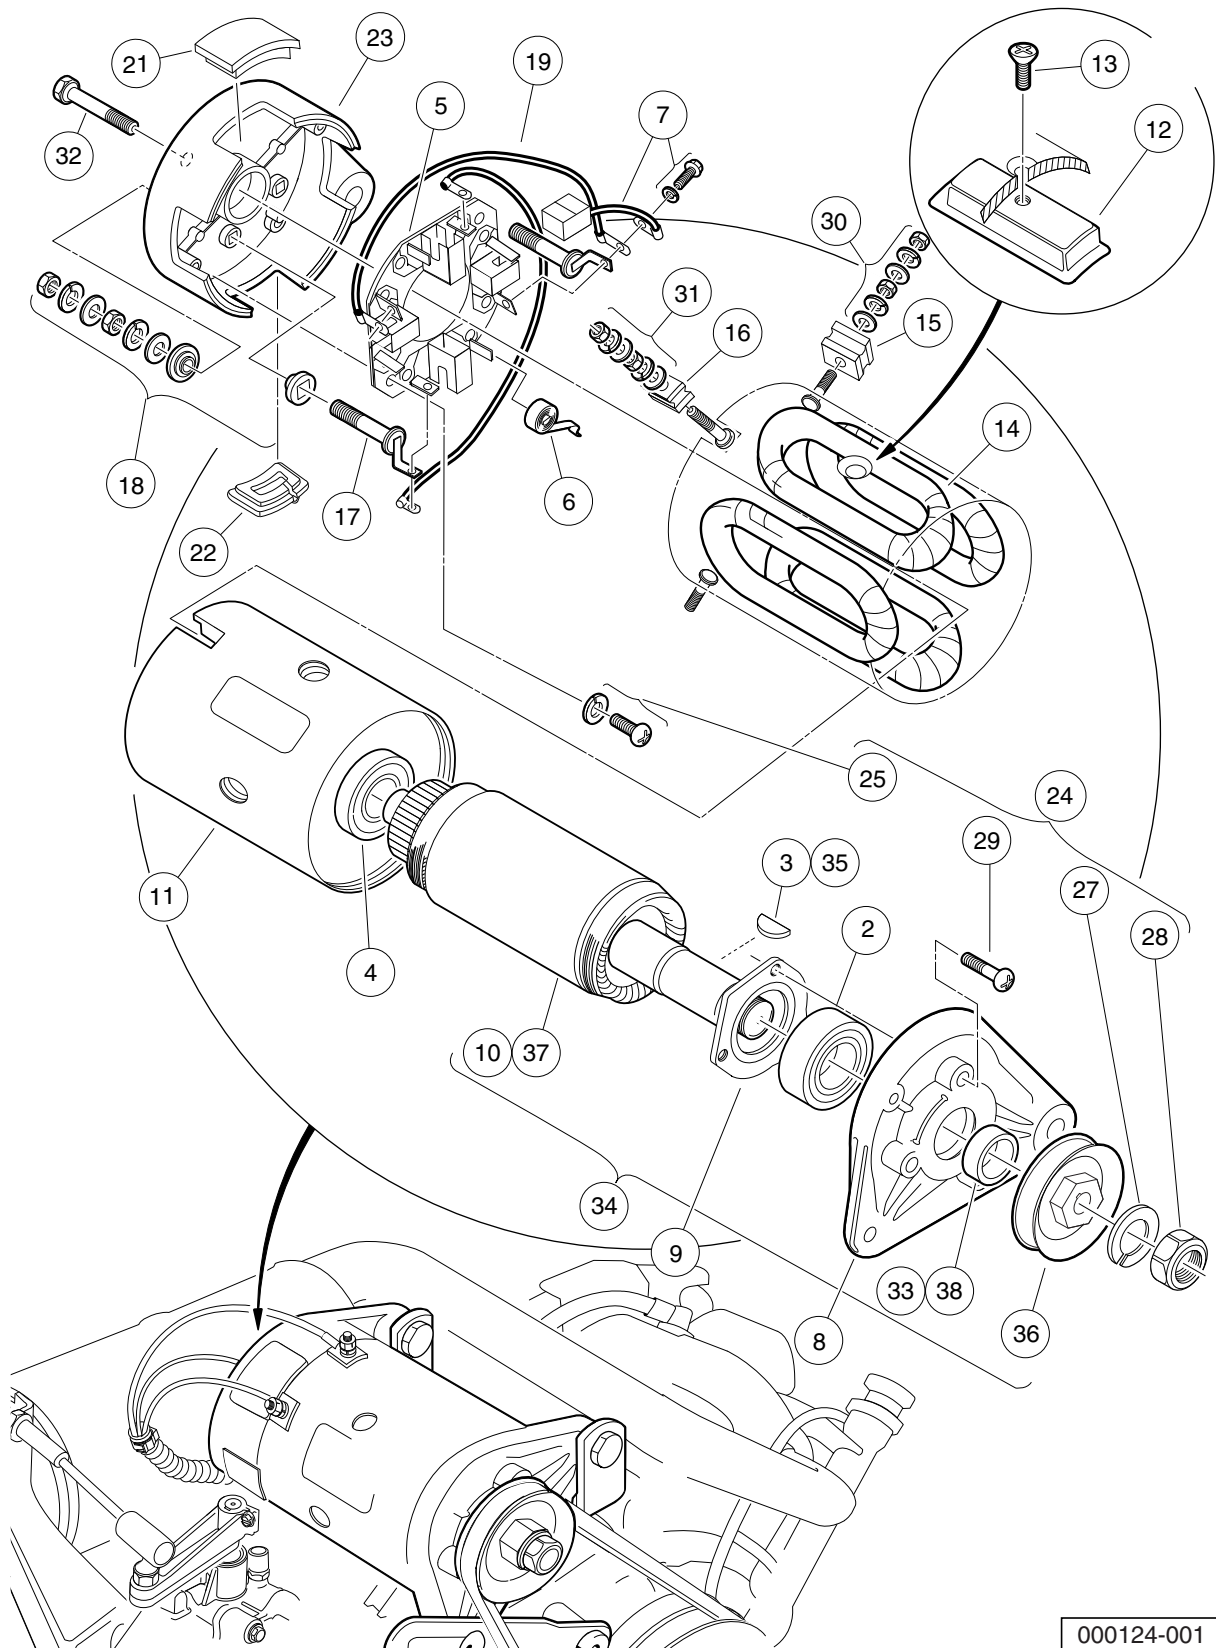


000124-001

STARTER/GENERATOR ASSEMBLY MODEL G425419 – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101833701</u>	Starter/Generator (cw) (includes items 2 through 33)	1
2	<u>1013001</u>	Bearing, Output Shaft Ball	1
3	<u>1013003</u>	Key, Starter/Generator	1
4	<u>1013005</u>	Bearing, Ball	1
5	<u>101301102</u>	Brush Holder Assembly (cw) (includes item 6)	1
6	<u>101878101</u>	Brush Spring Set	4
7	<u>101869302</u>	Brush and Screw Set (cw)	1
8	<u>101874901</u>	Front Bracket	1
9	<u>101875001</u>	Retainer	1
10	<u>101875101</u>	Armature	1
11	<u>101875201</u>	Field Coil Housing	1
12	<u>101875301</u>	Pole Set	1
13	<u>101875401</u>	Screw Set	1
14	<u>101875501</u>	Field Stator Coil Assembly	1
15	<u>101875601</u>	F Insulator Set	2
16	<u>101875701</u>	DF Insulator	1
17	<u>101875802</u>	A Connector (cw)	1
18	<u>101876001</u>	Screw and Mold Assembly	2
19	<u>101876202</u>	Brush Connector Assembly (cw)	2
20	<u>101876301</u>	Cover Set (includes items 21 and 22)	1
21	<u>1012991</u>	Brush Inspection Port Cover	3
22	<u>1017653</u>	Brush Port Cover w/Drain	1
23	<u>101876402</u>	Rear Bracket (cw)	1
24	<u>101876501</u>	Nut and Screw Set (includes items 25 through 29)	1
25	<u>101896501</u>	Brush Holder Asm Screw	2
26	N/A	Washer, M5 Flat	1
27	N/A	Washer, M14 Lock	1
28	N/A	Nut, Hex, M14 x 2	1
29	N/A	Screw, M5 x 0.8 x 18mm	3
30	<u>101877601</u>	Nut and Washer Set	2
31	<u>101877701</u>	Nut and Washer Set	1
32	<u>101879001</u>	Through Bolt Set	2
33	<u>101939901</u>	Spacer	1
34	<u>101875102</u>	Armature Asm Conversion Kit (includes items 35 through 38)	1
35	<u>1013003</u>	Key, Starter/Generator	1
36	<u>1014289</u>	Pulley, Starter/Generator	1
37	<u>101875101</u>	Armature	1
38	<u>101939901</u>	Spacer	1
		Note: Item 36 will ONLY fit Model G425419 Starter/Generator.	

6

G

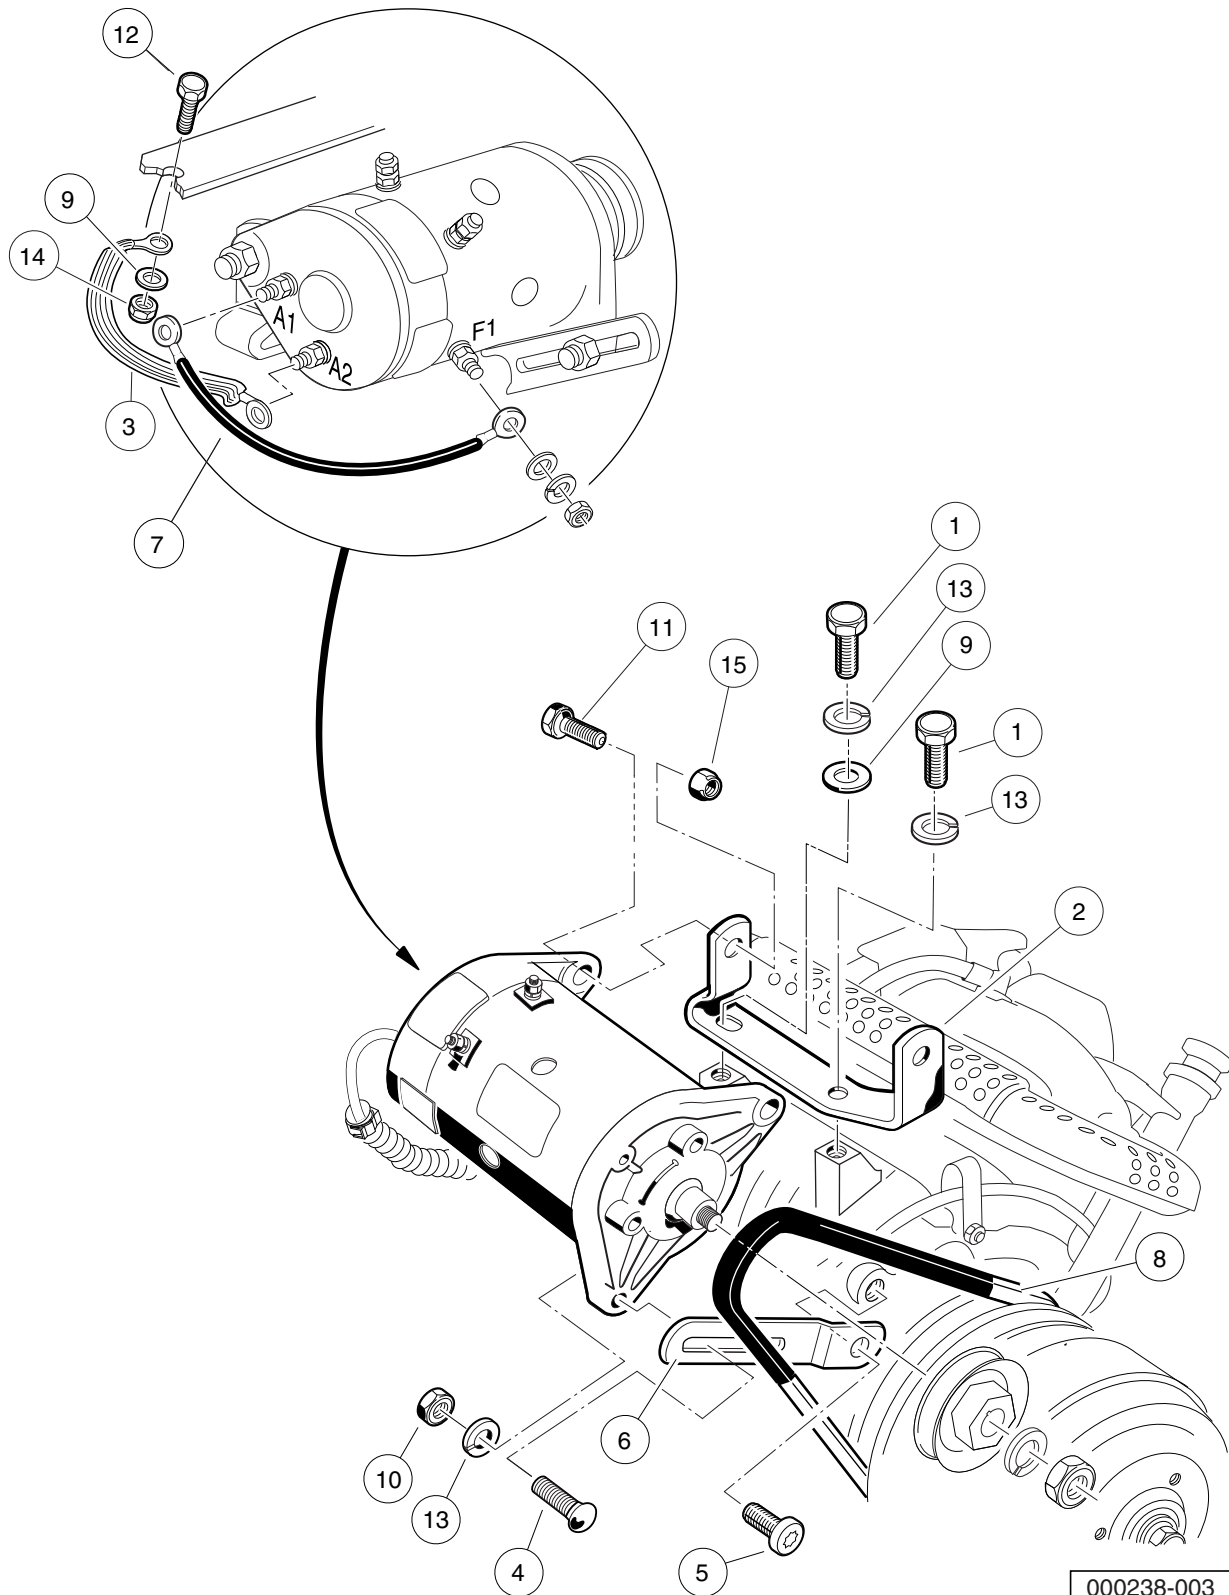


000238-003

FE290 STARTER/GENERATOR MOUNTING – GASOLINE DS VILLAGER 4

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	2
2	<u>101524001</u>	Bracket, Starter/Generator Mounting (FE290)	1
3	<u>1015920</u>	Ground Wire Assembly	1
4	<u>1015932</u>	Bolt, Carriage, 5/16-18	1
5	<u>1016074</u>	Screw, M8-1.25 X 18mm Torx	1
6	<u>1016883</u>	Bracket, Starter/Generator Adjustment	1
7	<u>101837301</u>	Wire Assy, #6 Green	1
8	<u>101916701</u>	V-Belt	1
9	<u>1241</u>	Washer, 5/16 Type A Flat	1
10	<u>1242</u>	Nut, 5/16-18 Hex	1
11	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	2
12	<u>7173</u>	Screw, 5/16-18 X 0.75 Hex-Head Cap	1
13	<u>7174</u>	Lockwasher, 5/16 Split	3
14	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1
15	<u>8754</u>	Locknut, 3/8-16 Hex	2

6

G

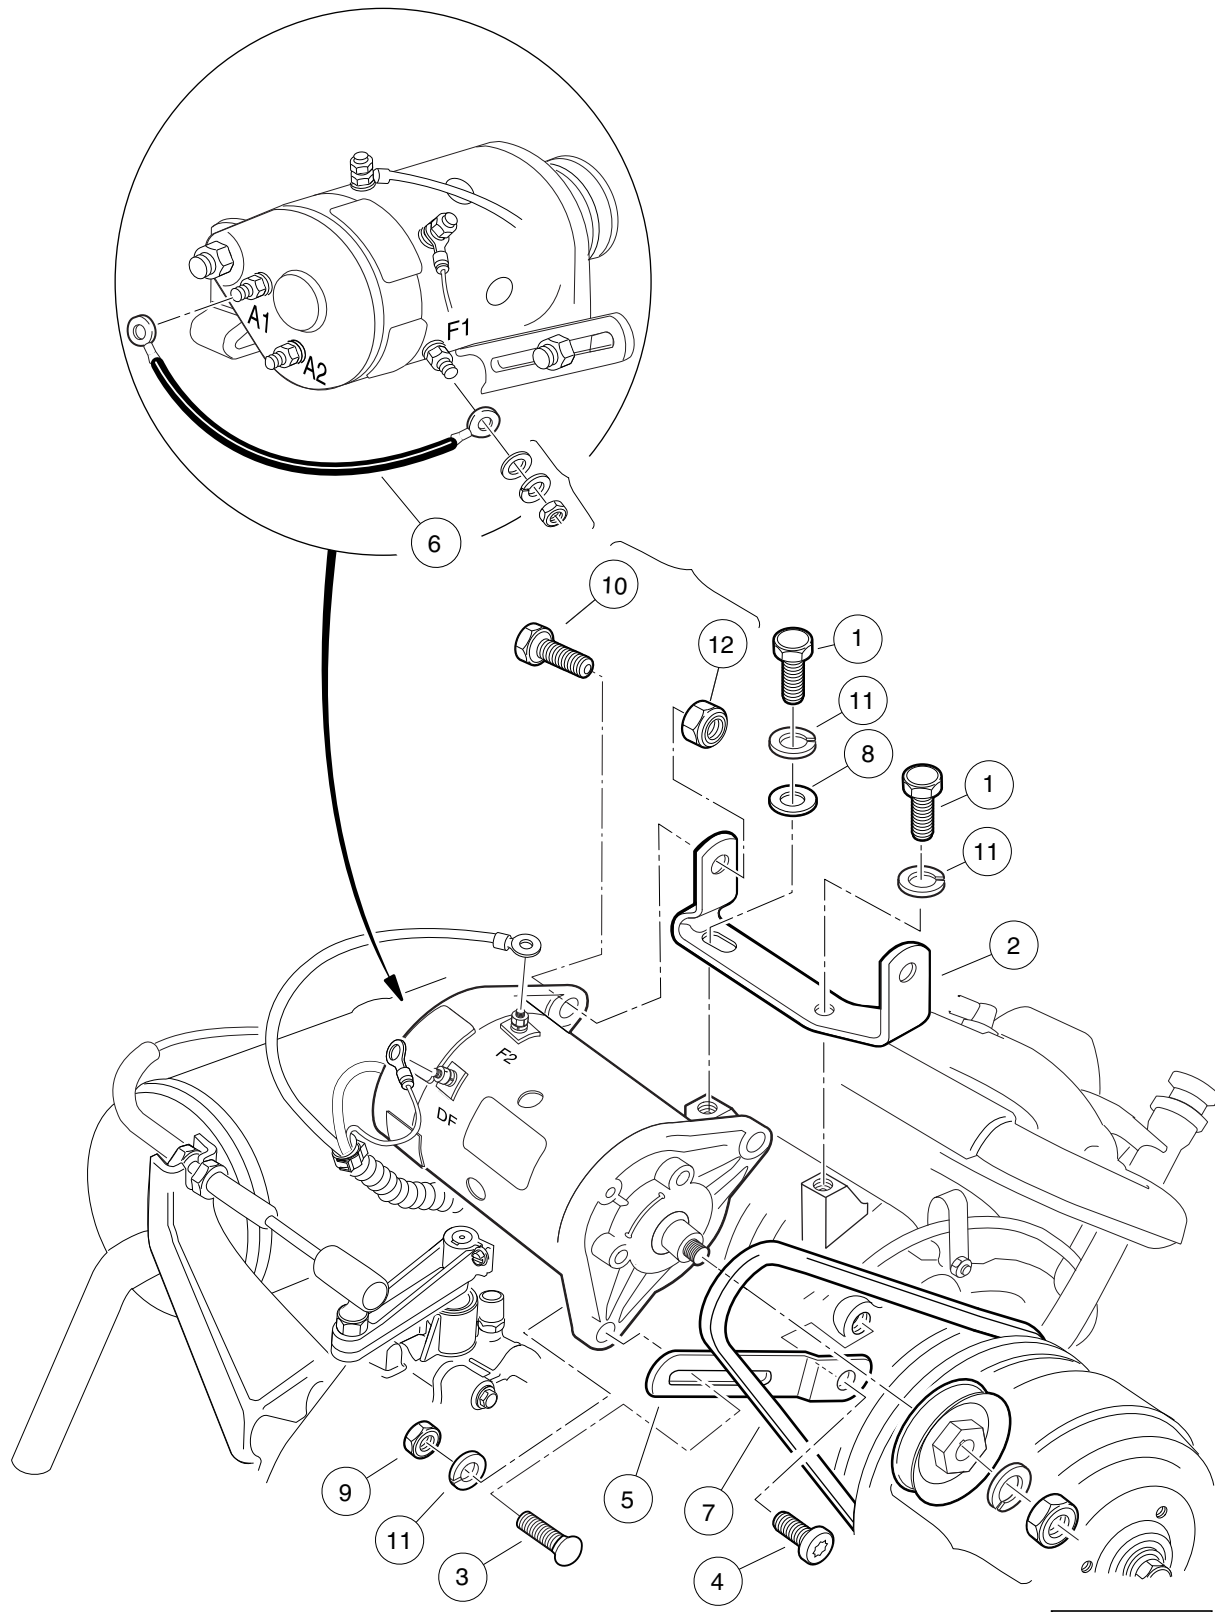


000239-001

FE350 STARTER/GENERATOR MOUNTING – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	2
2	<u>101524002</u>	Bracket, Starter/Generator Mounting	1
3	<u>1015932</u>	Bolt, Carriage, 5/16-18	1
4	<u>1016074</u>	Screw, M8-1.25 X 18mm Torx	1
5	<u>1016883</u>	Bracket, Starter/Generator Adjustment	1
6	<u>101837301</u>	Wire Assy, #6 Green	1
7	<u>101916701</u>	V-Belt	1
8	<u>1241</u>	Washer, 5/16 Type A Flat	1
9	<u>1242</u>	Nut, 5/16-18 Hex	1
10	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	2
11	<u>7174</u>	Lockwasher, 5/16 Split	3
12	<u>8754</u>	Locknut, 3/8-16 Hex	2


6
G

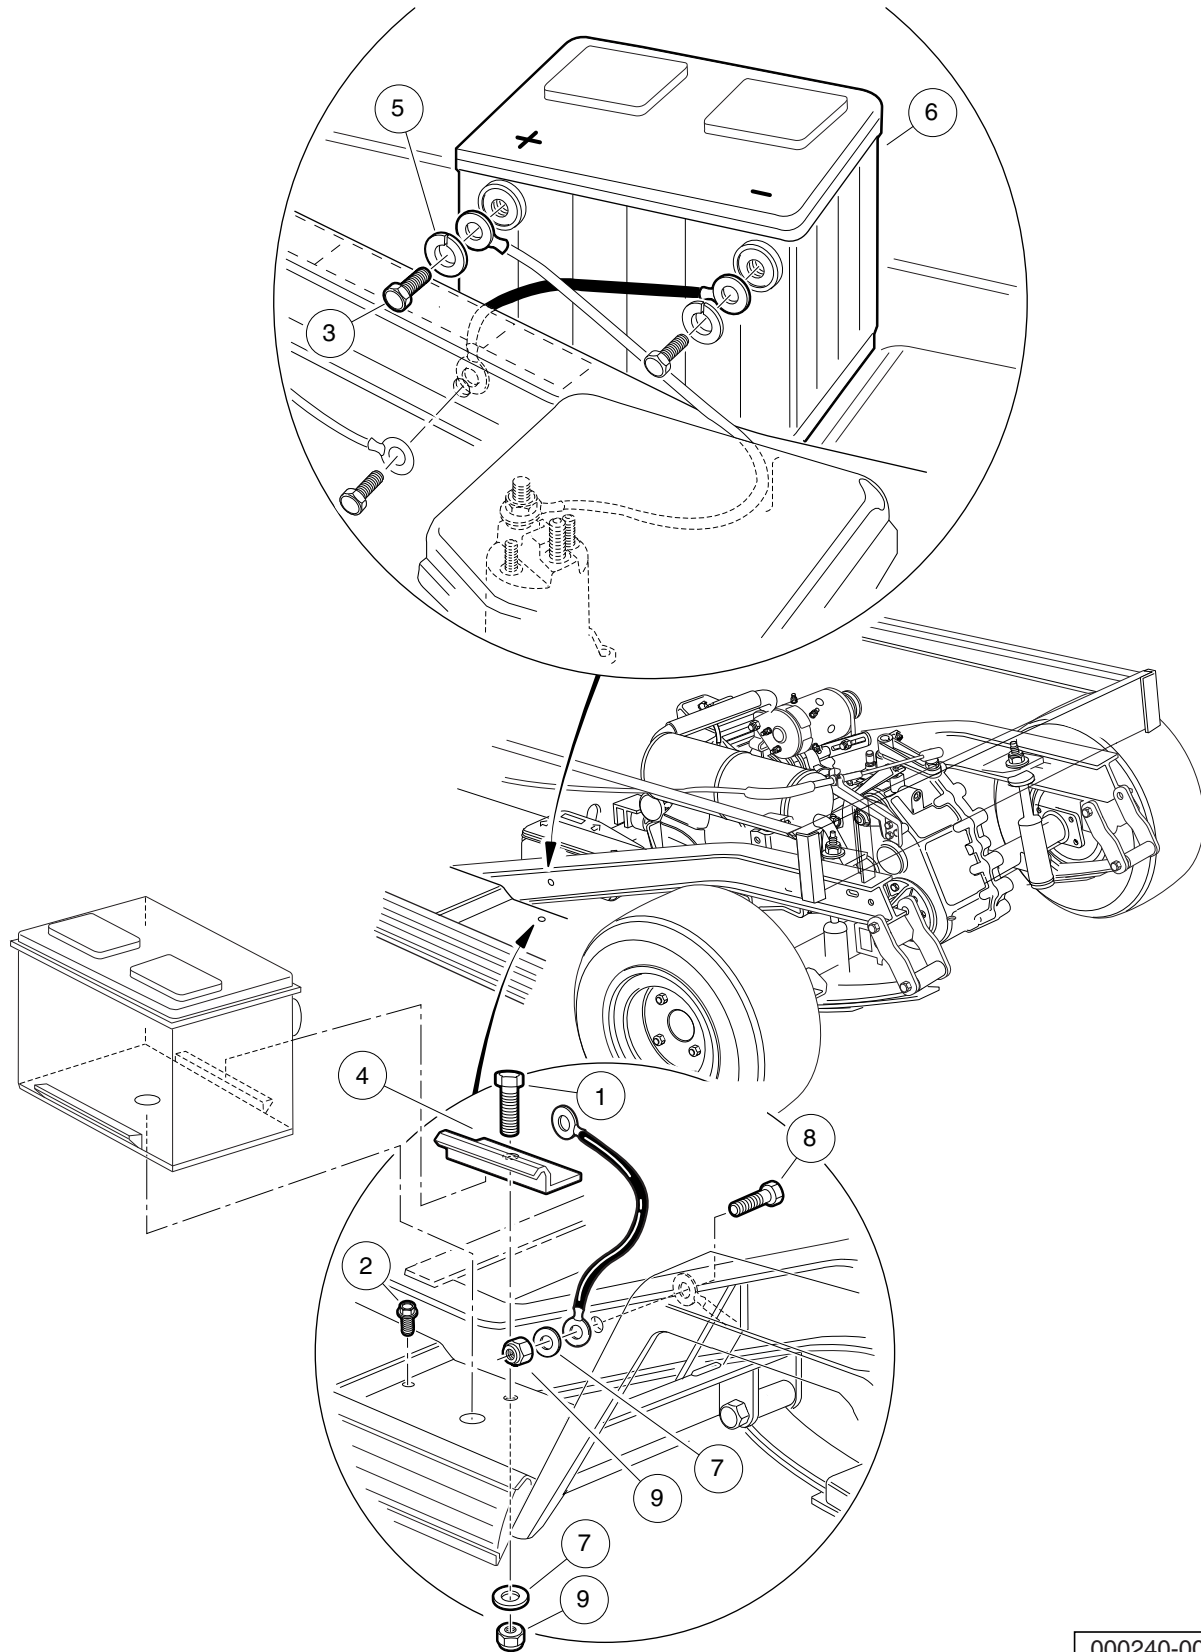

000240-001

BATTERY – GASOLINE VEHICLE


ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1	
2	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	1	
3	<u>1014375</u>	Screw, 3/8-16 X 0.50 Stainless Steel Hex-Head	2	
4	<u>101898001</u>	Clamp, Battery	1	
5	<u>102355301</u>	Lockwasher, #10 Split Ss	2	
6	N/A	Battery, Start, 12v	1	
7	<u>1241</u>	Washer, 5/16 Type A Flat	2	
8	<u>7173</u>	Screw, 5/16-18 X 0.75 Hex-Head Cap	1	
9	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	

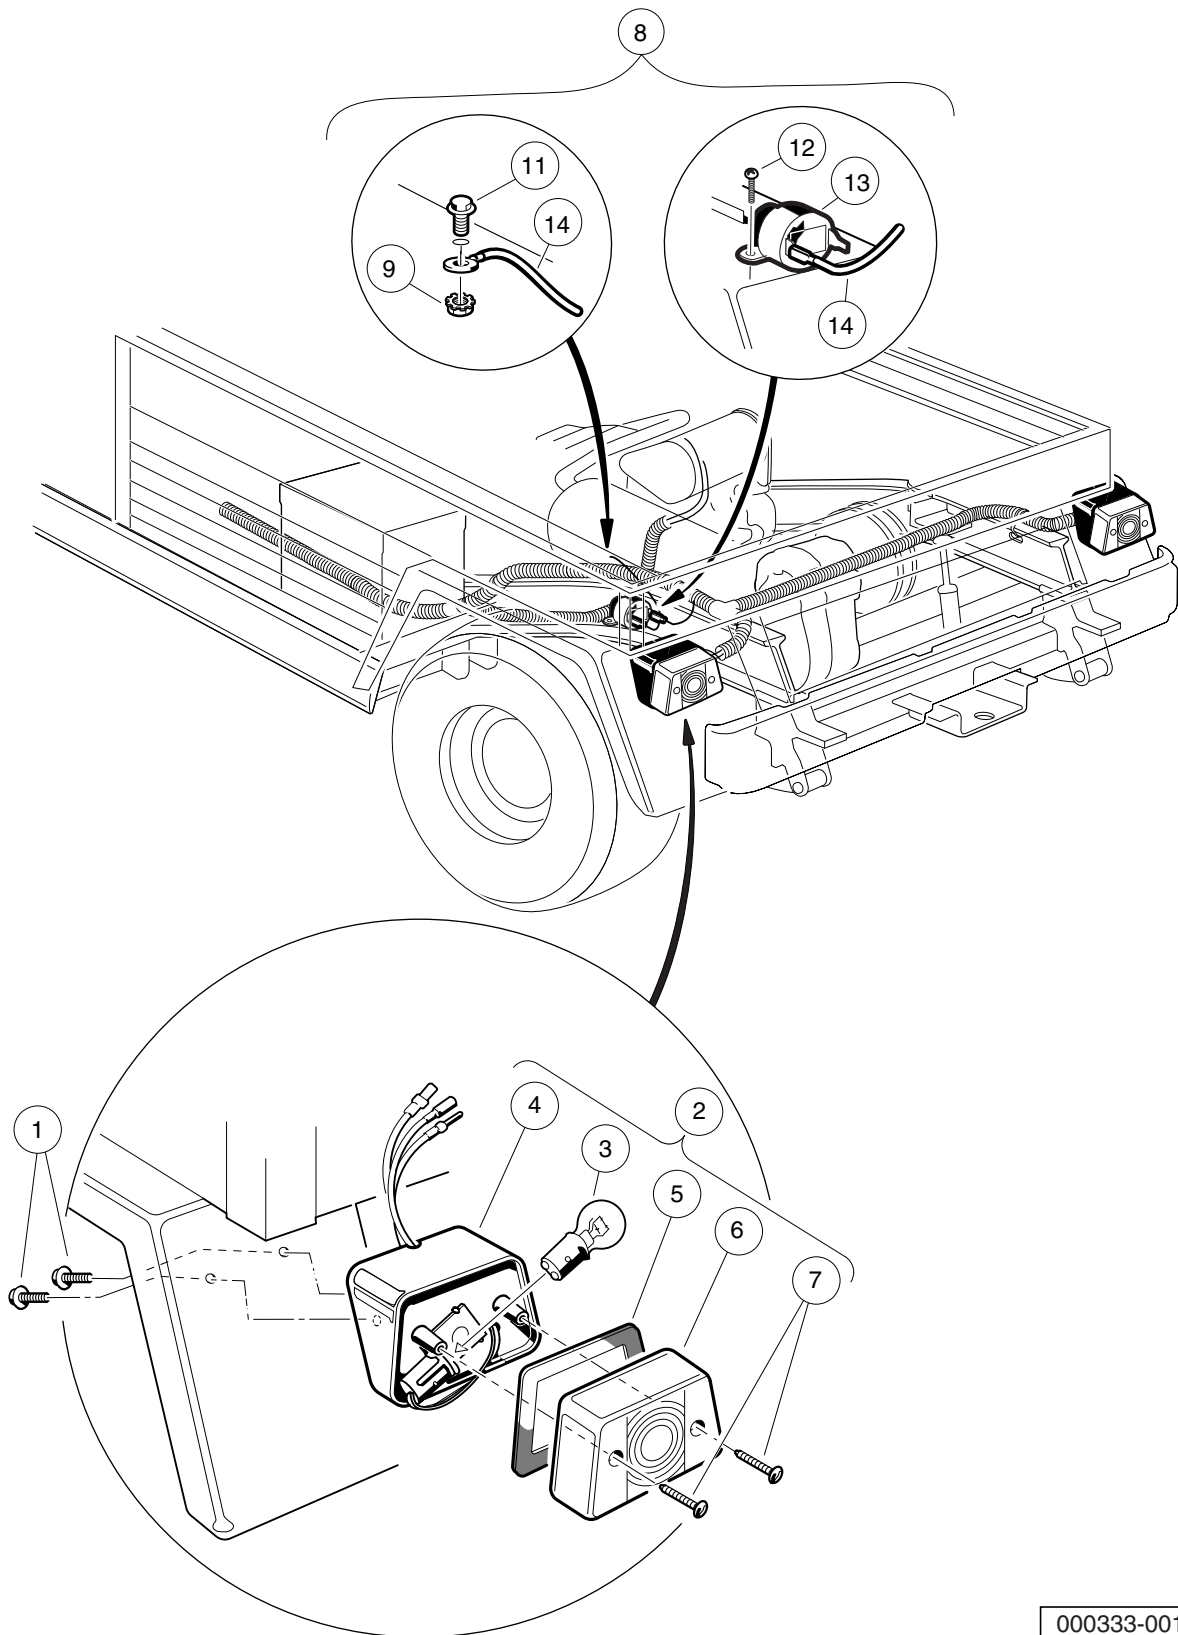

000333-001

ELECTRICAL COMPONENTS, REAR BODY – GASOLINE TRANSPORTER 4 AND 6

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	4	
2	<u>1016717</u>	Light Assembly, Stop/Taillight (includes items 3 through 7)	2	
3	<u>1011582</u>	Taillight Bulb	1	
4	N/A	Housing, Taillight	1	
5	N/A	Gasket, Taillight	1	
6	N/A	Lens, Taillight	1	
7	N/A	Screw, Taillight Lens	2	
8	<u>1016859</u>	Kit, Reverse Buzzer (includes items 9 through 17)	1	
9	<u>1011229</u>	Locknut, #6-32 Whiz	1	
10	<u>1012431</u>	Washer, #4 Flat	2	
11	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1	
12	<u>1016849</u>	Screw, #4-24 X 0.33 Pan-Head Machine	2	
13	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1	
14	<u>1016857</u>	Wire Assembly Black #18	1	
15	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2	
16	<u>8057</u>	Nut, #4-40 Hex Machine	2	
17	<u>8058</u>	Lockwasher, #4 Split	2	
Note: Items 10, and 15 through 17 are included in the reverse buzzer kit, but are not used in this application.				

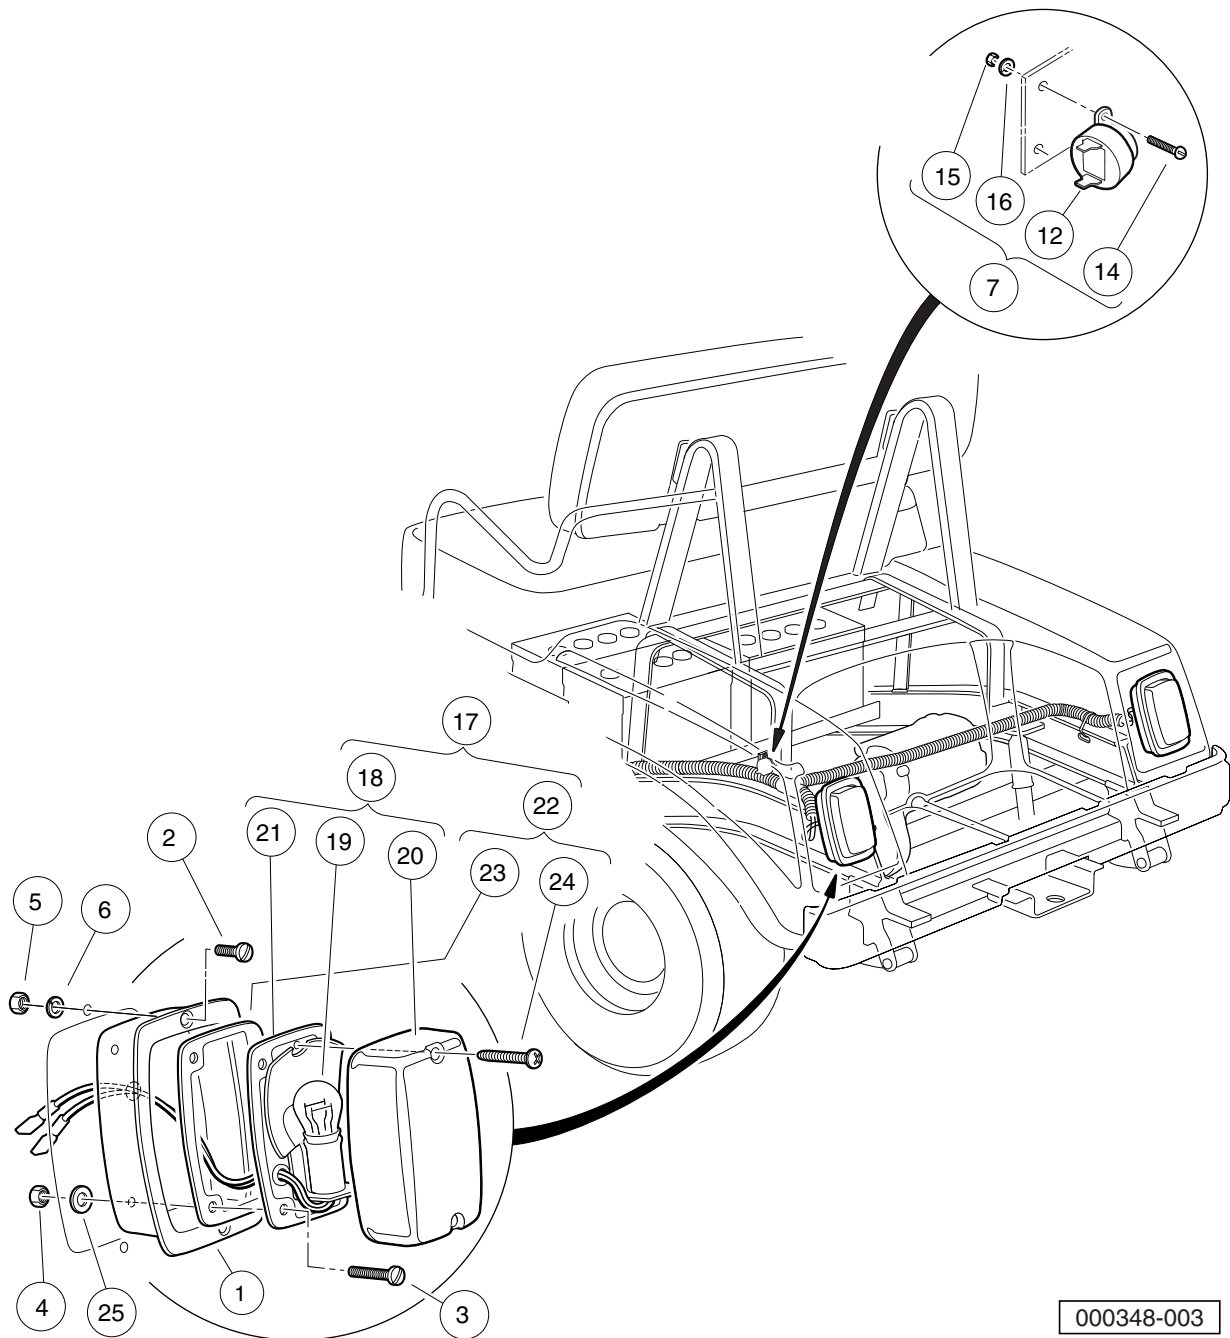

000348-003

ELECTRICAL COMPONENTS, REAR BODY – VILLAGER 6 AND 8

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011497</u>	Bezel, Taillight	2
2	<u>1011498</u>	Screw, #8-32 X 0.50 Oval-Head	4
3	<u>1011557</u>	Screw, #6-32 X 1.00 Hex-Head Machine	4
4	<u>1011558</u>	Nut, #6-32 Hex	4
5	<u>1011571</u>	Nut, #8-32 Hex	4
6	<u>1011610</u>	Lockwasher, #8 Split Ss	4
7	<u>1016859</u>	Kit, Reverse Buzzer (includes items 8 through 16)	1
8	<u>1011229</u>	Locknut, #6-32 Whiz	1
9	<u>1012431</u>	Washer, #4 Flat	2
10	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
11	<u>1016849</u>	Screw, #4-24 X 0.33 Pan-Head Machine	2
12	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
13	<u>1016857</u>	Wire Assembly Black #18	1
14	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2
15	<u>8057</u>	Nut, #4-40 Hex Machine	2
16	<u>8058</u>	Lockwasher, #4 Split	2
17	<u>1017035</u>	Taillight Assembly (includes items 18 through 22)	2
18	N/A	Light, Tail (includes items 19 through 21)	1
19	<u>1011582</u>	Taillight Bulb	1
20	<u>1011843</u>	Taillight Lens	1
21	N/A	Base, Taillight	1
22	<u>1017699</u>	Hardware Kit, Tail Light (includes items 23 and 24)	1
23	N/A	Gasket	1
24	N/A	Screw, Tapered	2
25	<u>7591</u>	Washer, #6 Flat	4

6

G


6

G

FE290 ENGINE (PEDAL-START VEHICLES)

7


G

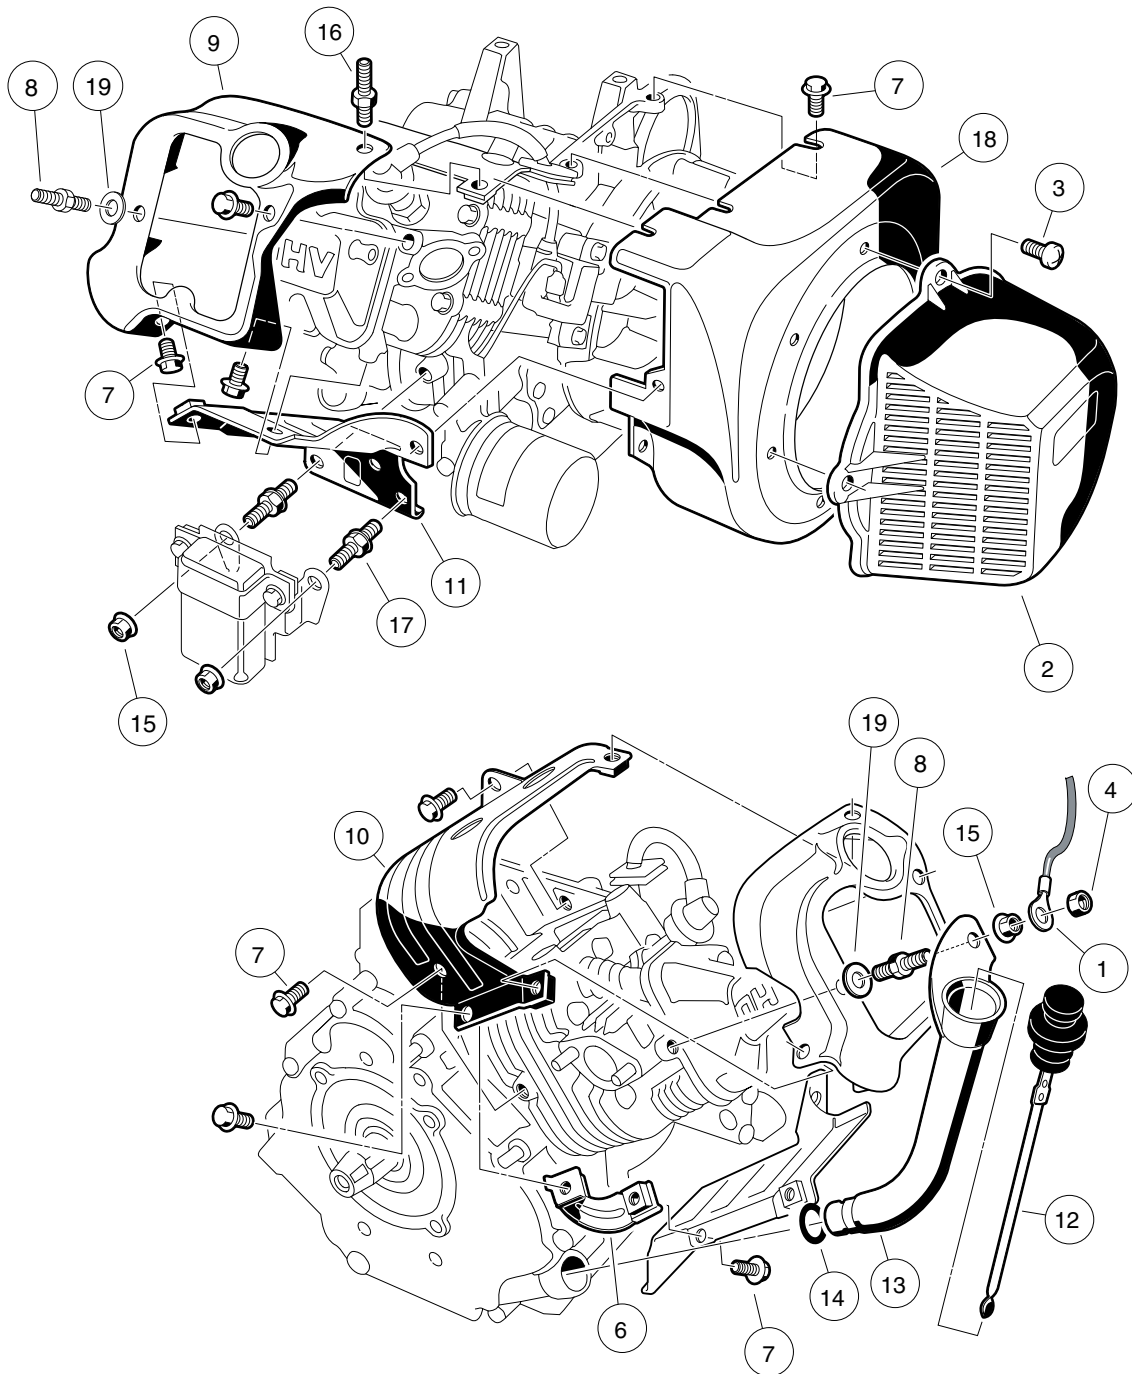

000194-001

FE290 ENGINE – SHROUDS AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY	7
		1 2 3 4		G
1	<u>1015332</u>	Wire Assembly, #10, Uninsulated	1	
2	<u>1015649</u>	Shroud, Fan	1	
3	<u>1015969</u>	Screw, M6-1.00 X 10mm Pan Hd	4	
4	<u>101887601</u>	Locknut, M6-1.00 Nylon Insert	1	
5	<u>101953901</u>	Engine, FE290 (cw) * (includes items 6 through 19)	1	
6	<u>1016443</u>	Bracket	1	
7	<u>1016456</u>	Bolt, Flange Head, M6 x 1 x 12 mm	15	
8	<u>1016507</u>	Bolt, Two-Ended	1	
9	<u>1016524</u>	Shroud, Engine, FE290D	1	
10	<u>1016525</u>	Shroud, Engine, FE290D	1	
11	<u>1016526</u>	Shroud, Engine, FE290D	1	
12	<u>1016531</u>	Dipstick	1	
13	<u>1016536</u>	Tube, Oil Filler, FE290D	1	
14	<u>1016539</u>	O-Ring	1	
15	<u>1016547</u>	Nut, M6 Flange	3	
16	<u>1017221</u>	Screw, M6-1.00 Stud	1	
17	<u>101909701</u>	Stud, M6-1.00, Two-Ended	2	
18	<u>101915601</u>	Housing, FE290 Fan	1	
19	N/A	Washer, 6 mm Flat	1	
* Note: FE290 engine component listings span several pages.				

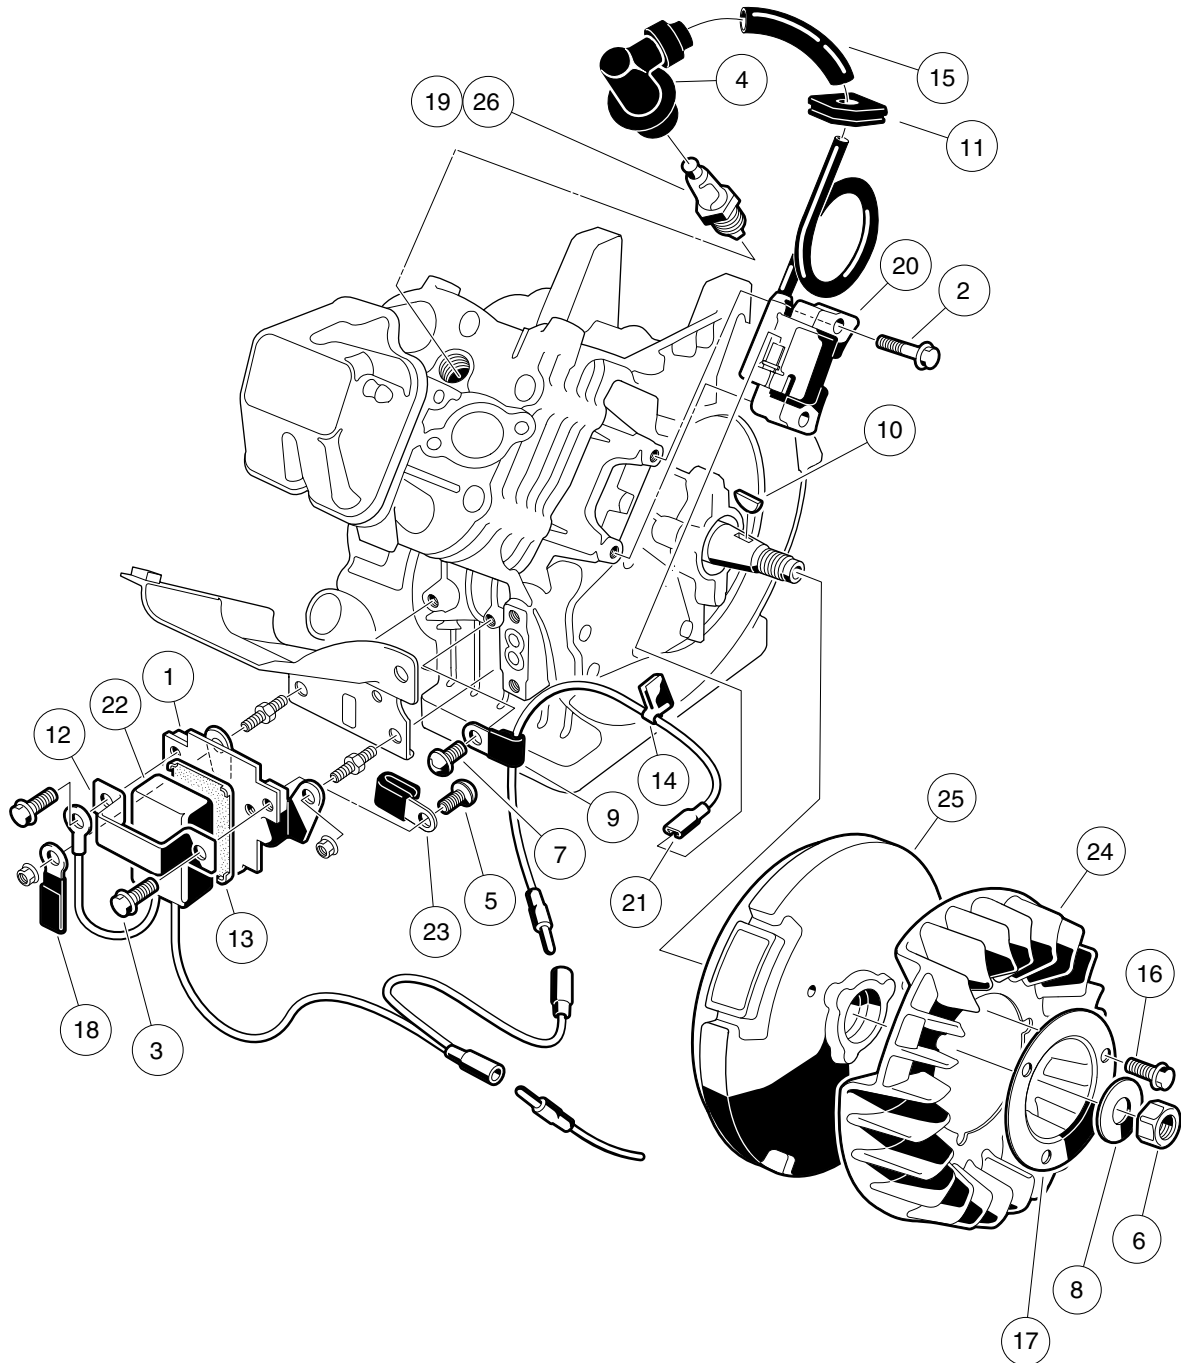


000195-001

FE290 ENGINE – IGNITION COMPONENTS AND FLYWHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016445	Bracket, RPM Limiter	1
2	<u>1016455</u>	Bolt, Flange Head	2
3	1016456	Bolt, Flange Head, M6 x 1 x 12 mm	2
4	<u>1016493</u>	Cap, Spark Plug	1
5	<u>1016497</u>	Screw, Pan WP Cross	1
6	<u>1016505</u>	Nut, Hex, Fine	1
7	<u>1016544</u>	Screw	1
8	<u>1016548</u>	Washer, M16 Flat	1
9	<u>1016561</u>	Clamp	1
10	<u>1016562</u>	Key	1
11	<u>1016578</u>	Ignition, Grommet	1
12	<u>1016579</u>	Band, RPM Limiter Mount	1
13	1016586	Damper, RPM Limiter	1
14	<u>1016587</u>	Clamp	1
15	<u>1016588</u>	Tube, 7mm X 10mm X 70mm	1
16	<u>1017448</u>	Bolt, Flanged	3
17	<u>1017455</u>	Plate, Flywheel Fan	1
18	<u>1017468</u>	Clamp	1
19	<u>101881101</u>	Spark Plug, OHV (Autolite)	1
20	<u>101909201</u>	Coil, Ignition	1
21	<u>101909301</u>	Lead Wire Assy	1
22	101909401	Limiter, RPM	1
23	101909501	Clamp, Steel	1
24	<u>101915801</u>	Fan, FE290 (cw)	1
25	<u>101929301</u>	Flywheel, Complete	1
26	<u>AM10724</u>	Spark Plug, OHV (NGK)	1


7
G

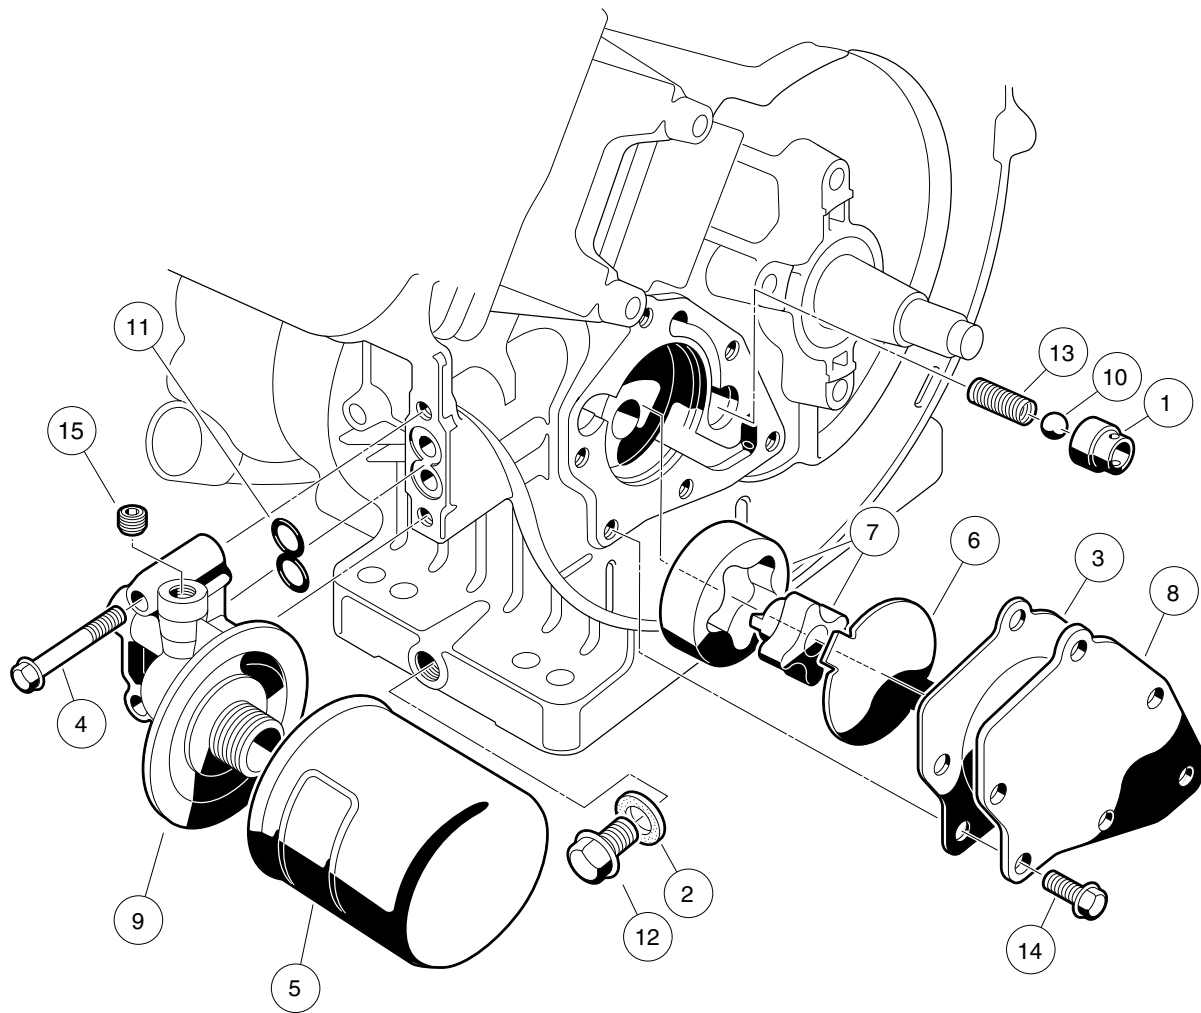

000196-001

FE290 ENGINE – OIL CIRCULATION

ITEM	PART NO.	DESCRIPTION	QTY	7	G
		1 2 3 4			
1	1016429	Seat, Value Oil Press Relief	1		
2	<u>1016432</u>	Gasket, Drain Plug	1		
3	<u>1016435</u>	Gasket, Oil Pump	1		
4	<u>1016457</u>	Bolt, Flange Head	2		
5	<u>1016467</u>	Filter, Oil	1		
6	<u>1016473</u>	Plate, Oil Pump	1		
7	<u>101648203</u>	Oil Pump And Rotor	1		
8	<u>1016484</u>	Cover, Pump	1		
9	<u>1016502</u>	Bracket, Oil Filter Mount	1		
10	<u>1016537</u>	Ball, Steel, Press, Relief	1		
11	<u>1016570</u>	O-Ring	1		
12	1016576	Plug, Drain	1		
13	<u>1016581</u>	Spring	1		
14	<u>1017456</u>	Bolt, Flanged	6		
15	<u>1017507</u>	Plug	2		

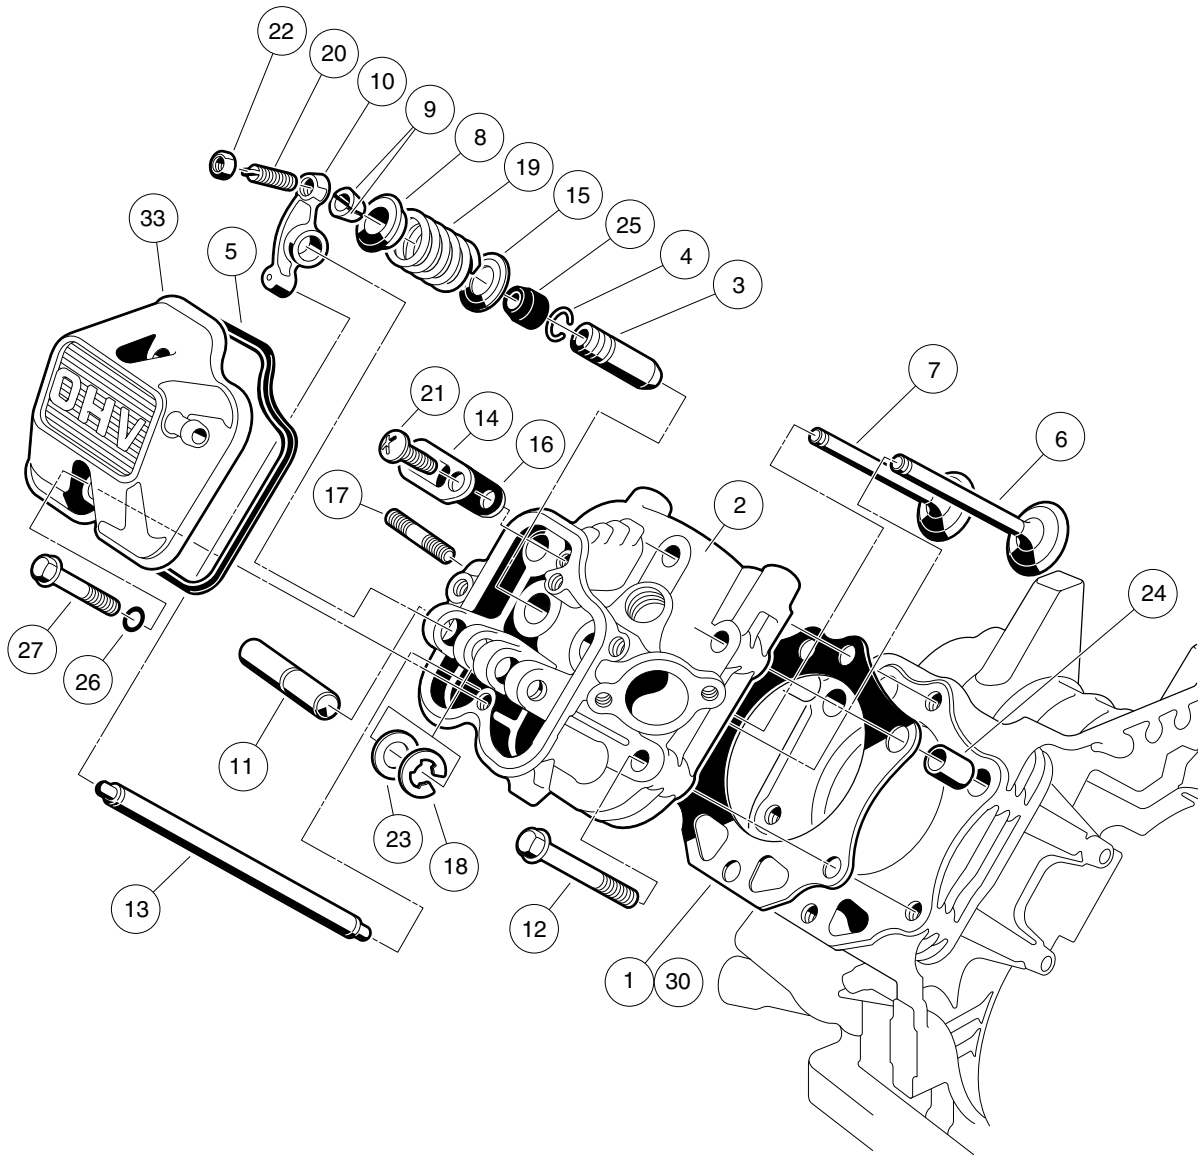


000197-001

FE290 ENGINE – CYLINDER HEAD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016430</u>	Gasket, Head, FE290	1
2	<u>1016431</u>	Head Assembly, FE290 Cylinder (includes items 3 and 4)	1
3	<u>1016519</u>	Guide, Valve	2
4	<u>1016560</u>	Snap Ring	2
5	<u>1016436</u>	Gasket, Rocker Case	1
6	<u>1016447</u>	Valve, Intake	1
7	<u>1016448</u>	Valve, Exhaust	1
8	<u>1016449</u>	Retainer, Valve Spring	2
9	<u>1016450</u>	Collet	4
10	<u>1016451</u>	Arm, Rocker	2
11	<u>1016452</u>	Shaft, Rocker	1
12	<u>1016458</u>	Bolt, Flange Head, M8 x 1.25 x 45 mm	6
13	<u>1016471</u>	Rod, Push	2
14	<u>1016474</u>	Plate	1
15	<u>1016479</u>	Seat, Spring	2
16	<u>1016483</u>	Valve	1
17	<u>1016489</u>	Stud, Two-Ended, M8-1.25	2
18	<u>1016517</u>	Circlip, Type-E	1
19	<u>1016523</u>	Spring, Engine Valve	2
20	<u>1016542</u>	Screw	2
21	<u>1016544</u>	Screw	1
22	<u>1016545</u>	Nut	2
23	<u>1016549</u>	Washer, 12.1x19x1.8	1
24	<u>1016563</u>	Pin	2
25	<u>1016566</u>	Seal, Oil	2
26	<u>1016569</u>	O-Ring	2
27	<u>1016583</u>	Bolt, 6x35	2
28	<u>102304701</u>	Kit, Gasket, FE290 (includes items 29 through 32)	1
29	<u>1015330</u>	Gasket, Exhaust	1
30	<u>1016430</u>	Gasket, Head, FE290	1
31	<u>1016440</u>	Gasket, Engine to Insulator	1
32	<u>1016446</u>	Gasket, Crankcase Cover	1
33	<u>102753401</u>	Case, Rocker	1

7
G

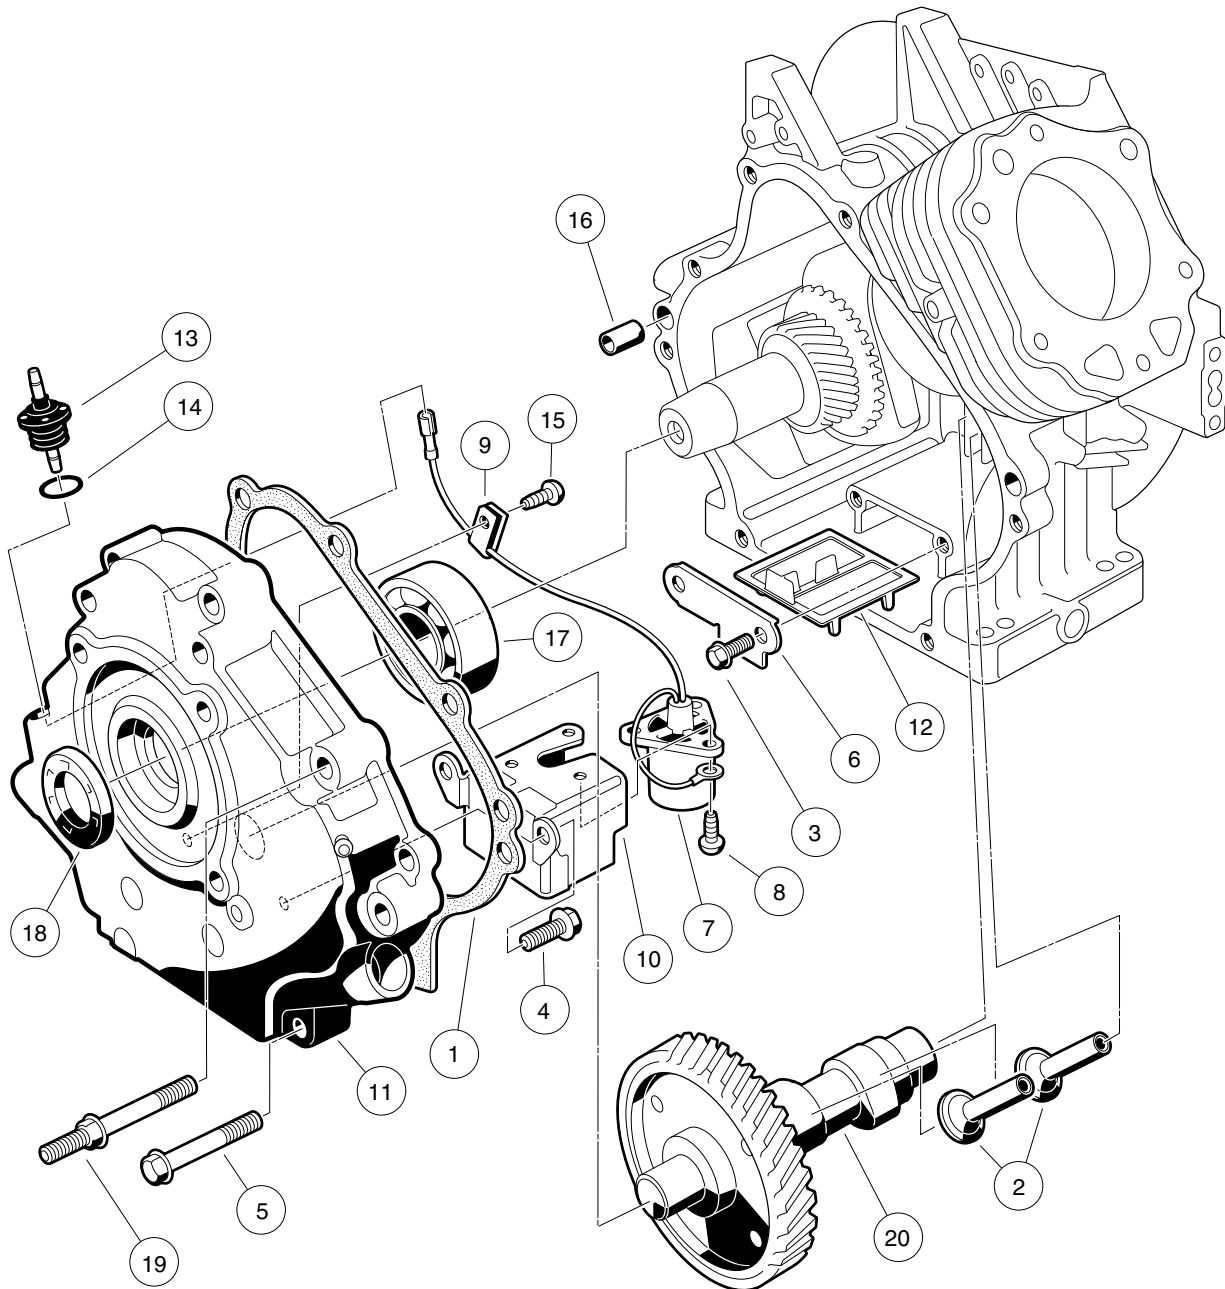


000198-001

FE290 ENGINE – CRANKCASE, CAMSHAFT, AND OIL SENSOR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016446</u>	Gasket, Crankcase Cover	1
2	<u>1016453</u>	Tappet	2
3	<u>1016454</u>	Bolt, Flange Head, M5 x 0.8 x 8 mm	2
4	<u>1016456</u>	Bolt, Flange Head, M6 x 1 x 12 mm	2
5	<u>1016458</u>	Bolt, Flange Head, M8 x 1.25 x 45 mm	6
6	<u>1016472</u>	Plate, Oil Filter Screen	1
7	<u>1016494</u>	Sensor, Oil Level	1
8	<u>1016496</u>	Screw, Cross Pan-Head, M4 x 0.7 x 8 mm	3
9	<u>1016506</u>	Clamp	1
10	<u>1016510</u>	Bracket, Switch, Oil Level	1
11	<u>1016520</u>	Cover, Crankcase	1
12	<u>1016521</u>	Screen, Oil Filter	1
13	<u>1016535</u>	Connector, Cord	1
14	<u>1016538</u>	O-Ring	1
15	<u>1016544</u>	Screw	1
16	<u>1016564</u>	Pin	2
17	<u>1016565</u>	Bearing, Ball	1
18	<u>1016567</u>	Seal, Crankshaft	1
19	<u>1016584</u>	Bolt, Two-Ended, M8 x 1.25 x 69 mm	2
20	<u>101915401</u>	Camshaft Complete, FE290	1

7

G

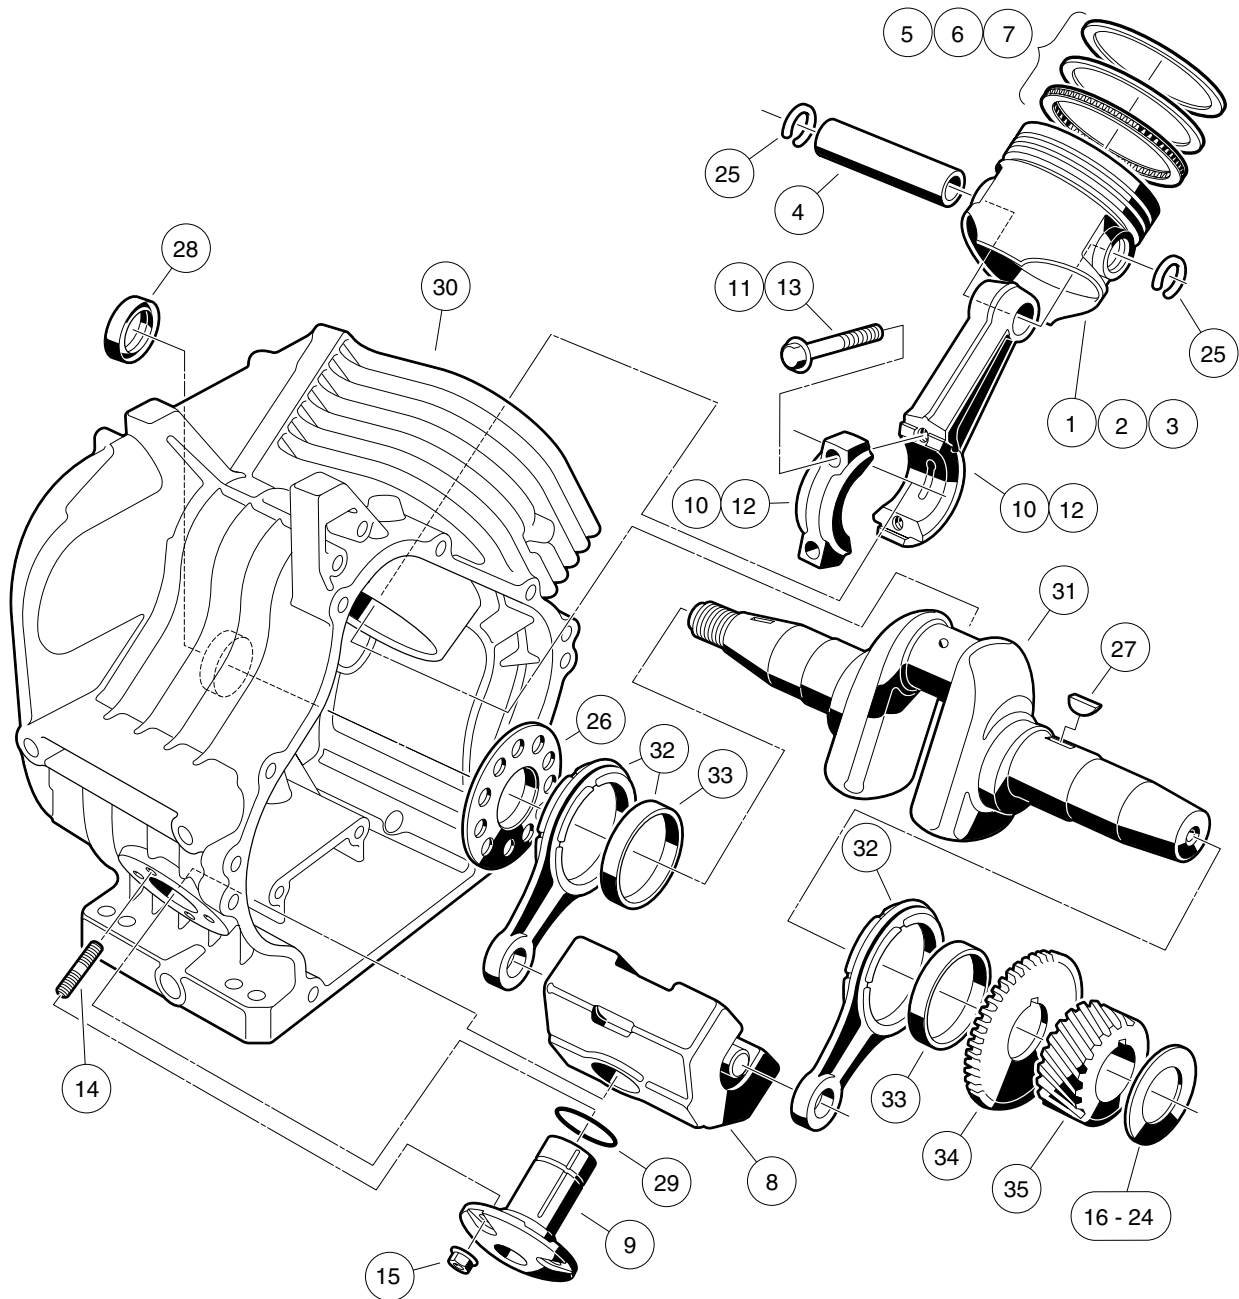

000199-001


FE290 ENGINE – CRANKCASE AND CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101645901</u>	Piston	1
2	<u>101645902</u>	Piston, Engine 0.25 mm Over	1
3	<u>101645903</u>	Piston, Engine 0.50 mm Over	1
4	<u>1016460</u>	Pin, Piston	1
5	<u>101646101</u>	Ring Set, Piston	1
6	<u>101646102</u>	Ring Set, Piston 0.25 mm Over	1
7	<u>101646103</u>	Ring Set, Piston 0.50 mm Over	1
8	<u>1016469</u>	Weight, Counterbalance	1
9	<u>1016470</u>	Shaft, Guide, Counterbalance	1
10	<u>101647501</u>	Rod Assembly (includes item 11)	1
11	<u>1016509</u>	Bolt	2
12	<u>101647502</u>	Rod Assembly, Connecting 0.50 mm Under (includes item 13)	1
13	<u>1016509</u>	Bolt	2
14	<u>1016541</u>	Stud, 6x14	4
15	<u>1016547</u>	Nut, M6 Flange	4
16	<u>101655001</u>	Shim, Crankshaft T=1.13	1
17	<u>101655002</u>	Shim, Crankshaft T=1.18	1
18	<u>101655003</u>	Shim, Crankshaft T=1.23	1
19	<u>101655004</u>	Shim, Crankshaft T=1.28	1
20	<u>101655005</u>	Shim, Crankshaft T=1.33	1
21	<u>101655006</u>	Shim, Crankshaft T=1.38	1
22	<u>101655007</u>	Shim, Crankshaft T=1.43	1
23	<u>101655008</u>	Shim, Crankshaft T=1.48	1
24	<u>101655009</u>	Shim, Crankshaft T=1.53	1
25	<u>1016558</u>	Ring, Snap	2
26	<u>1016559</u>	Spacer	1
27	<u>1016562</u>	Key	1
28	<u>1016568</u>	Seal, Oil	1
29	<u>1016571</u>	O-Ring	1
30	<u>101915501</u>	Crankcase Complete, FE290 (cw)	1
31	<u>101922301</u>	Crankshaft, FE290 Left-Hand Thread (includes items 32 through 35)	1
32	<u>1016516</u>	Rod (includes item 33)	2
33	<u>1016580</u>	Bearing, Plane	1
34	<u>1016532</u>	Gear, Spur	1
35	<u>1016533</u>	Gear, Helical	1

7
G

7

G

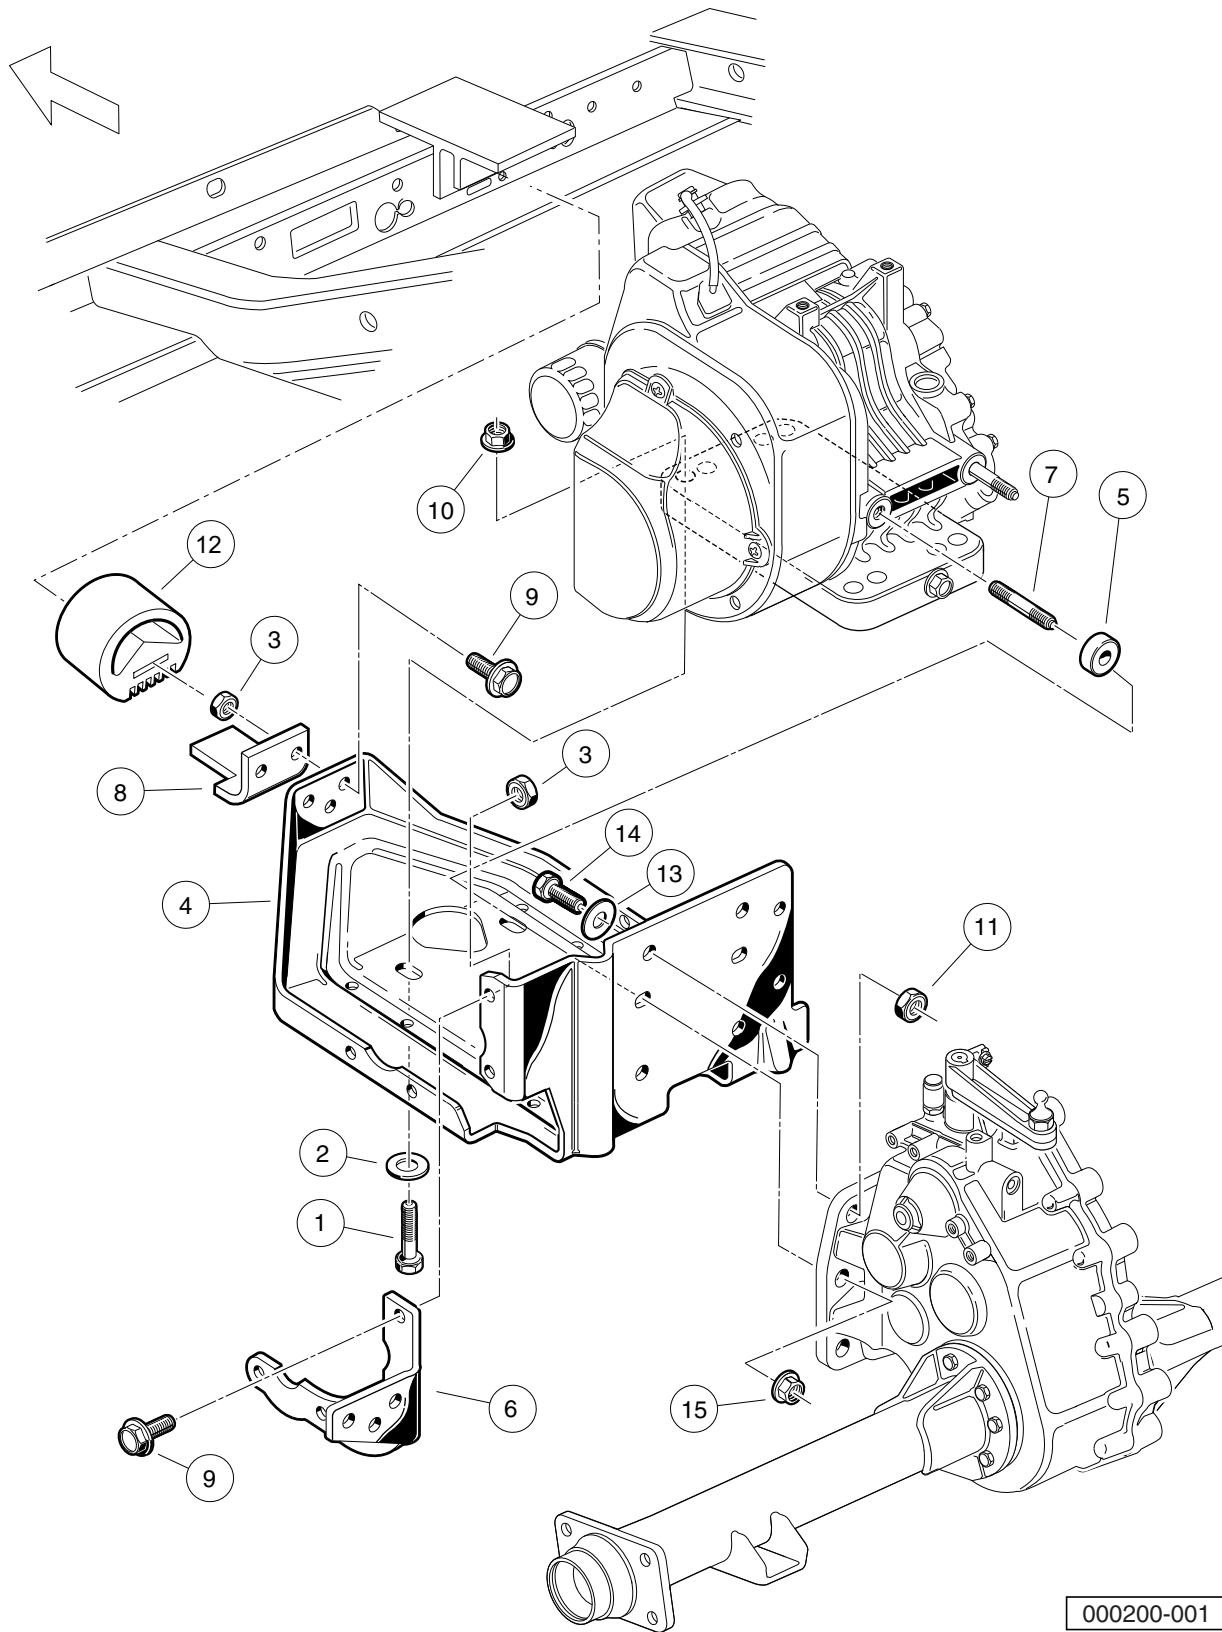

000200-001

FE290 ENGINE MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	4
2	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	4
3	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	6
4	<u>101827101</u>	Plate, Engine Mounting	1
5	<u>101832101</u>	Spacer, Powdered Metal	2
6	<u>101832701</u>	Stiffener (Flywheel Side)	1
7	<u>101833201</u>	Stud, M8-1.25 X 60mm Two-Ended	2
8	<u>101834601</u>	Snubber Bracket	1
9	<u>101884801</u>	Screw, 5/16-24 X 0.875 Grade-8	6
10	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4
11	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4
12	<u>102540301</u>	Inner Frame Snubber	1
13	<u>334</u>	Washer, 3/8 Type A Flat	4
14	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	4
15	<u>96704416</u>	Nut Flg, M8 X 1.25 Serrated	2

7

G


7

G

FE350 ENGINE WITH ACR (KEY-START VEHICLES)

8

G

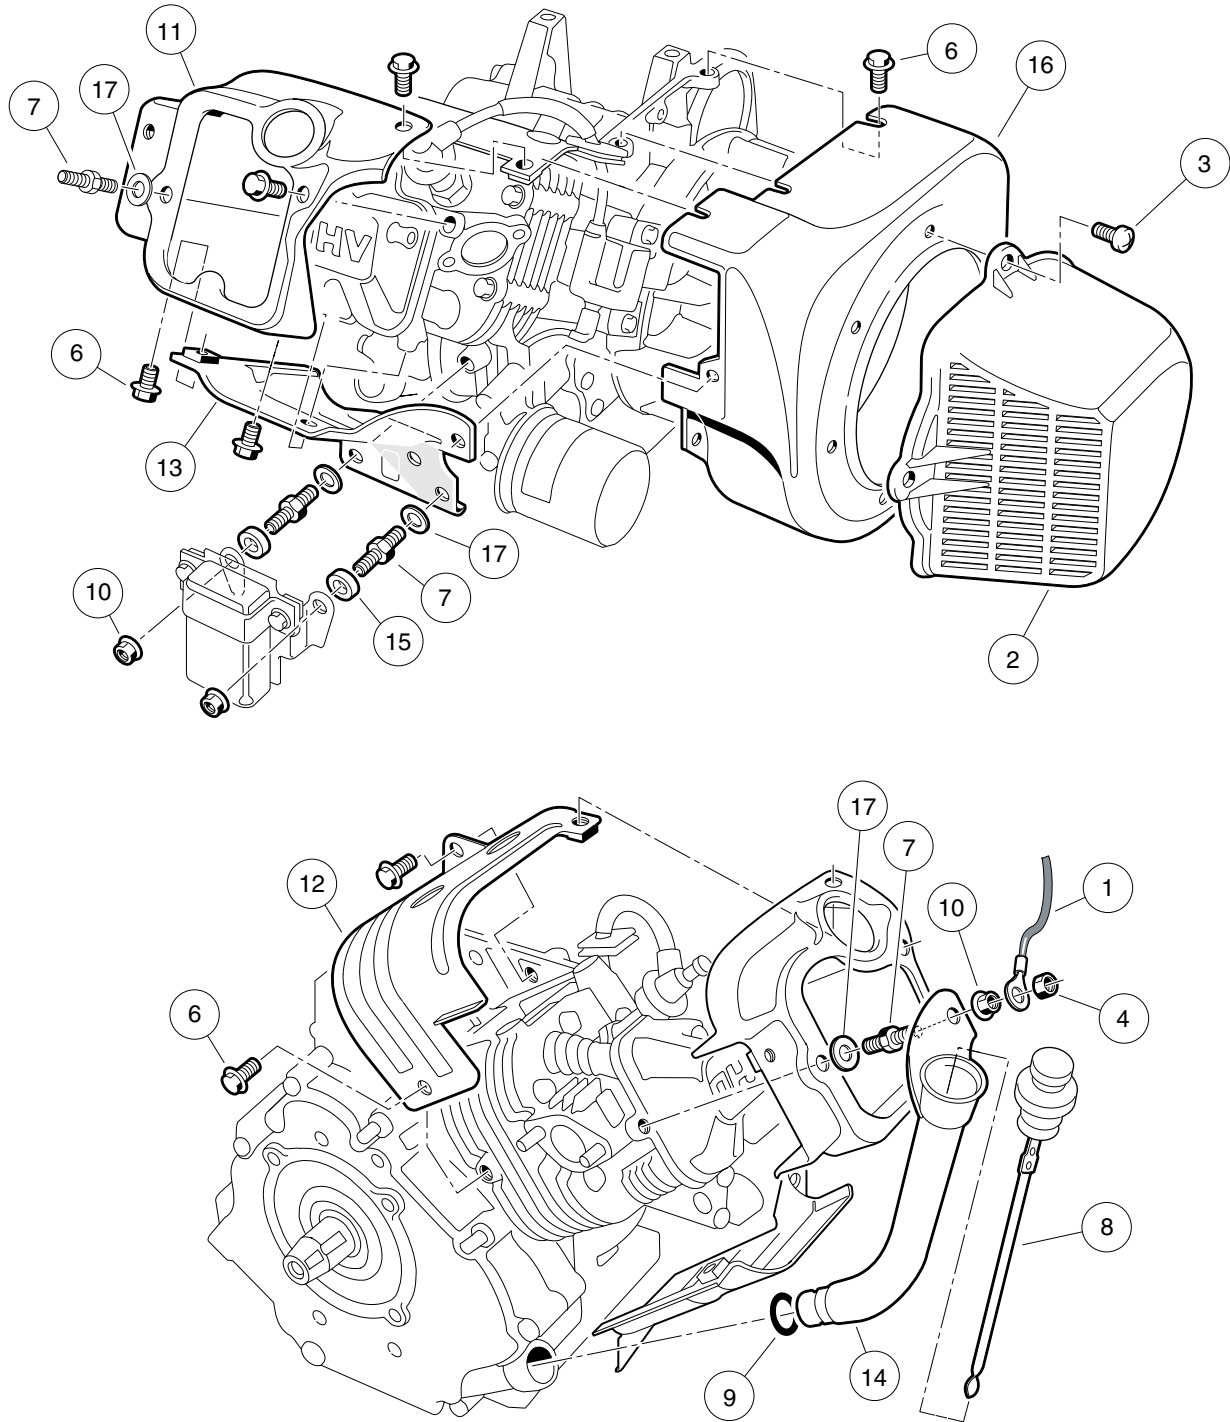


000201-001

FE350 ENGINE WITH ACR (AUTOMATIC COMPRESSION RELEASE) – SHROUDS AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015332</u>	Wire Assembly, #10, Uninsulated	1
2	<u>1015649</u>	Shroud, Fan	1
3	<u>1015969</u>	Screw, M6-1.00 X 10mm Pan Hd	4
4	<u>101887601</u>	Locknut, M6-1.00 Nylon Insert	1
5	<u>101953801</u>	Engine, FE350 (cw) with ACR * (includes items 6 through 17)	1
6	<u>1016456</u>	Bolt, Flange Head, M6 x 1 x 12 mm	14
7	<u>1016507</u>	Bolt, Two-Ended	3
8	<u>1016531</u>	Dipstick	1
9	<u>1016539</u>	O-Ring	1
10	<u>1016547</u>	Nut, M6 Flange	3
11	<u>1017474</u>	Shroud, Engine	1
12	<u>1017475</u>	Shroud, Engine	1
13	<u>1017476</u>	Shroud, Engine	1
14	<u>1017486</u>	Tube, Oil Filler	1
15	<u>1017500</u>	Spacer 6.50 X 12 X 5.5	2
16	<u>101916101</u>	Housing, FE350 Fan	1
17	N/A	Washer, 6mm Flat	3
* Note: FE350 engine component listings span several pages.			

8

G

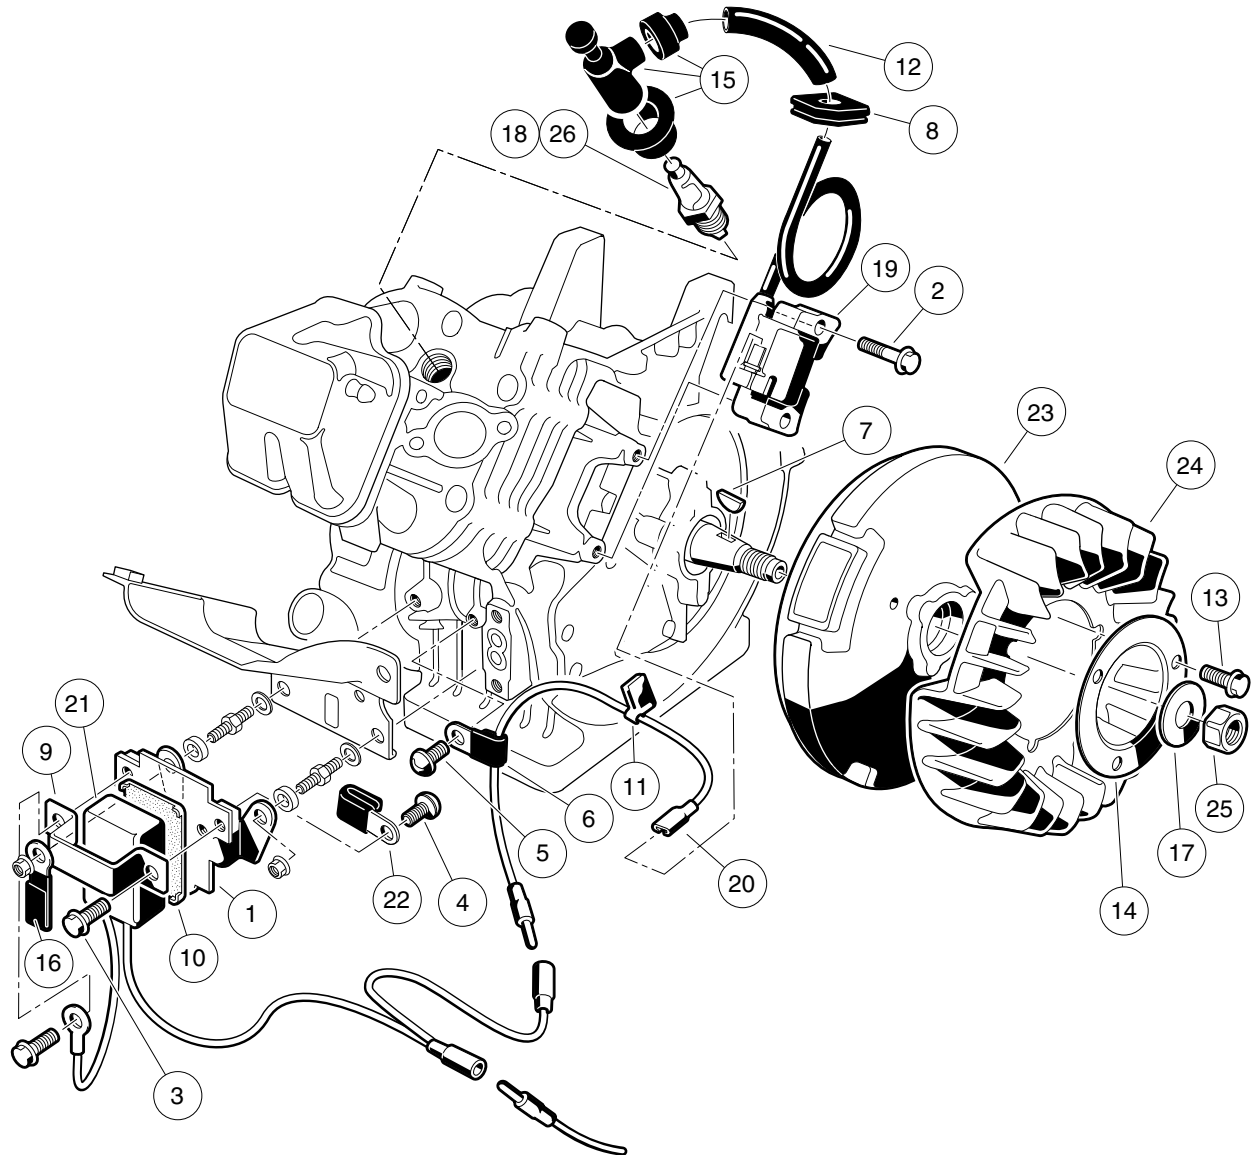


000202-001

AS11 FE350 ENGINE – IGNITION COMPONENTS AND FLYWHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016445	Bracket, RPM Limiter	1
2	<u>1016455</u>	Bolt, Flange Head	2
3	1016456	Bolt, Flange Head, M6 x 1 x 12 mm	2
4	<u>1016497</u>	Screw, Pan WP Cross	1
5	<u>1016544</u>	Screw	1
6	<u>1016561</u>	Clamp	1
7	<u>1016562</u>	Key	1
8	<u>1016578</u>	Ignition, Grommet	1
9	<u>1016579</u>	Band, RPM Limiter Mount	1
10	1016586	Damper, RPM Limiter	1
11	<u>1016587</u>	Clamp	1
12	<u>1016588</u>	Tube, 7mm X 10mm X 70mm	1
13	<u>1017448</u>	Bolt, Flanged	3
14	<u>1017455</u>	Plate, Flywheel Fan	1
15	<u>1017463</u>	Cap Asm Plug	1
16	<u>1017468</u>	Clamp	1
17	<u>1017490</u>	Washer, Flat	1
18	<u>101881101</u>	Spark Plug, OHV (Autolite)	1
19	<u>101909201</u>	Coil, Ignition	1
20	<u>101909301</u>	Lead Wire Assy	1
21	101909401	Limiter, RPM	1
22	101909501	Clamp, Steel	1
23	<u>101916201</u>	Flywheel	1
24	<u>101916301</u>	Fan (cw)	1
25	N/A	Nut, Hex, 18 mm Fine	1
26	<u>AM10724</u>	Spark Plug, OHV (NGK)	1


8
G

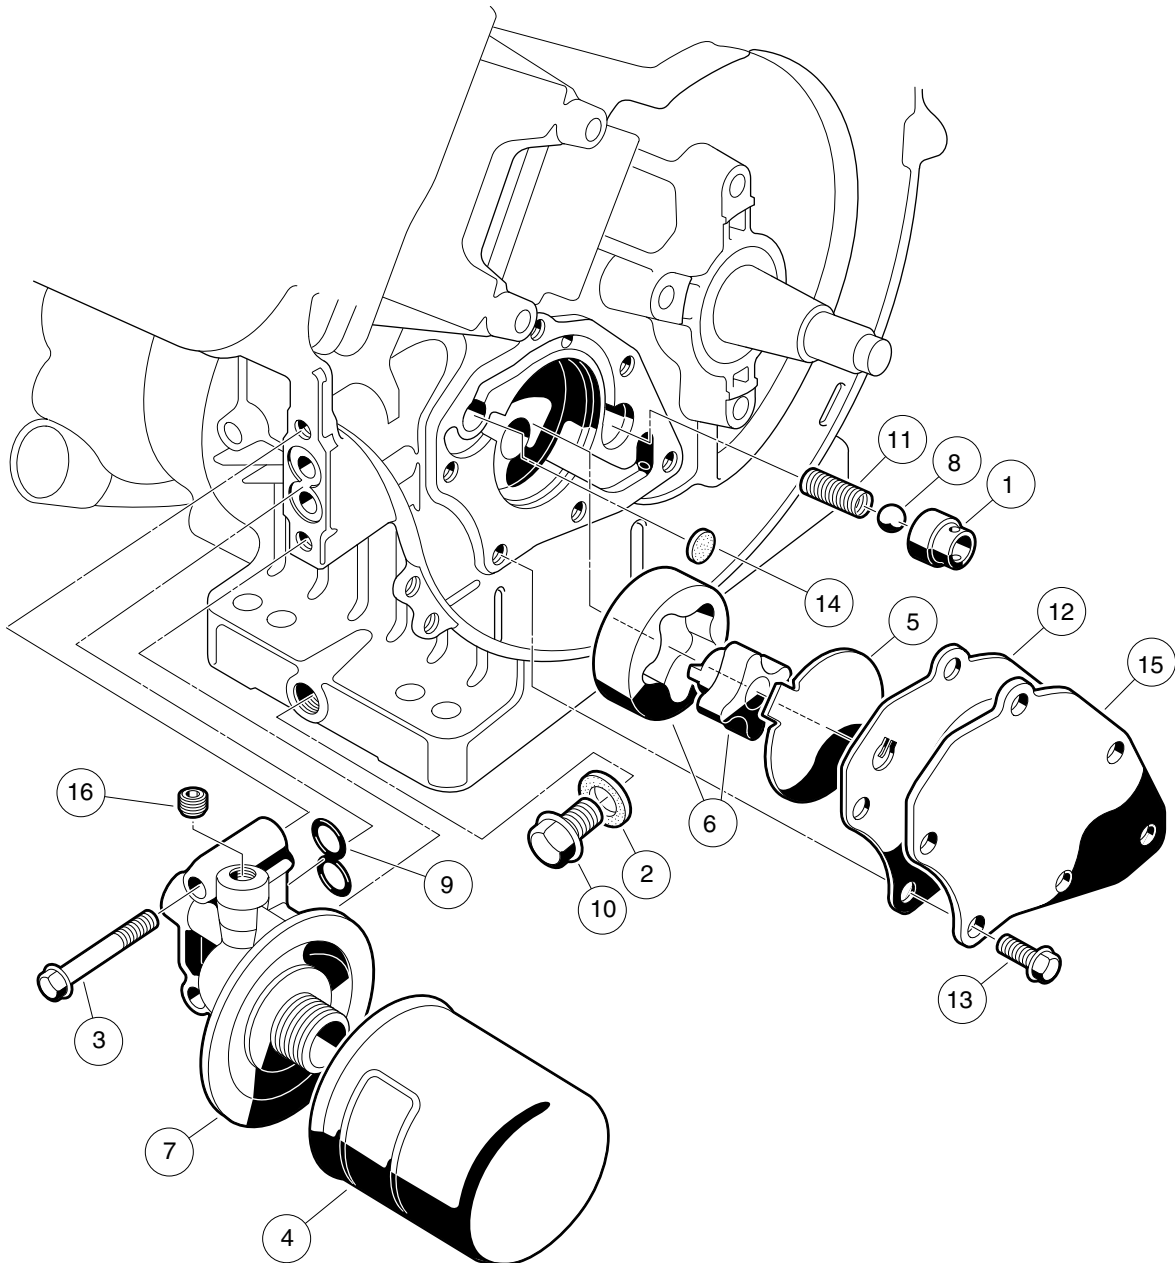

000203-001

FE350 ENGINE – OIL CIRCULATION


ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	1016429	Seat, Value Oil Press Relief	1	
2	<u>1016432</u>	Gasket, Drain Plug	1	
3	<u>1016457</u>	Bolt, Flange Head	2	
4	<u>1016467</u>	Filter, Oil	1	
5	<u>1016473</u>	Plate, Oil Pump	1	
6	<u>101648203</u>	Oil Pump And Rotor	1	
7	<u>1016502</u>	Bracket, Oil Filter Mount	1	
8	<u>1016537</u>	Ball, Steel, Press, Relief	1	
9	<u>1016570</u>	O-Ring	1	
10	1016576	Plug, Drain	1	
11	<u>1016581</u>	Spring	1	
12	<u>1017442</u>	Gasket	1	
13	<u>1017456</u>	Bolt, Flanged	6	
14	<u>1017458</u>	Filter	1	
15	<u>1017460</u>	Cover, Pump	1	
16	<u>1017507</u>	Plug	2	

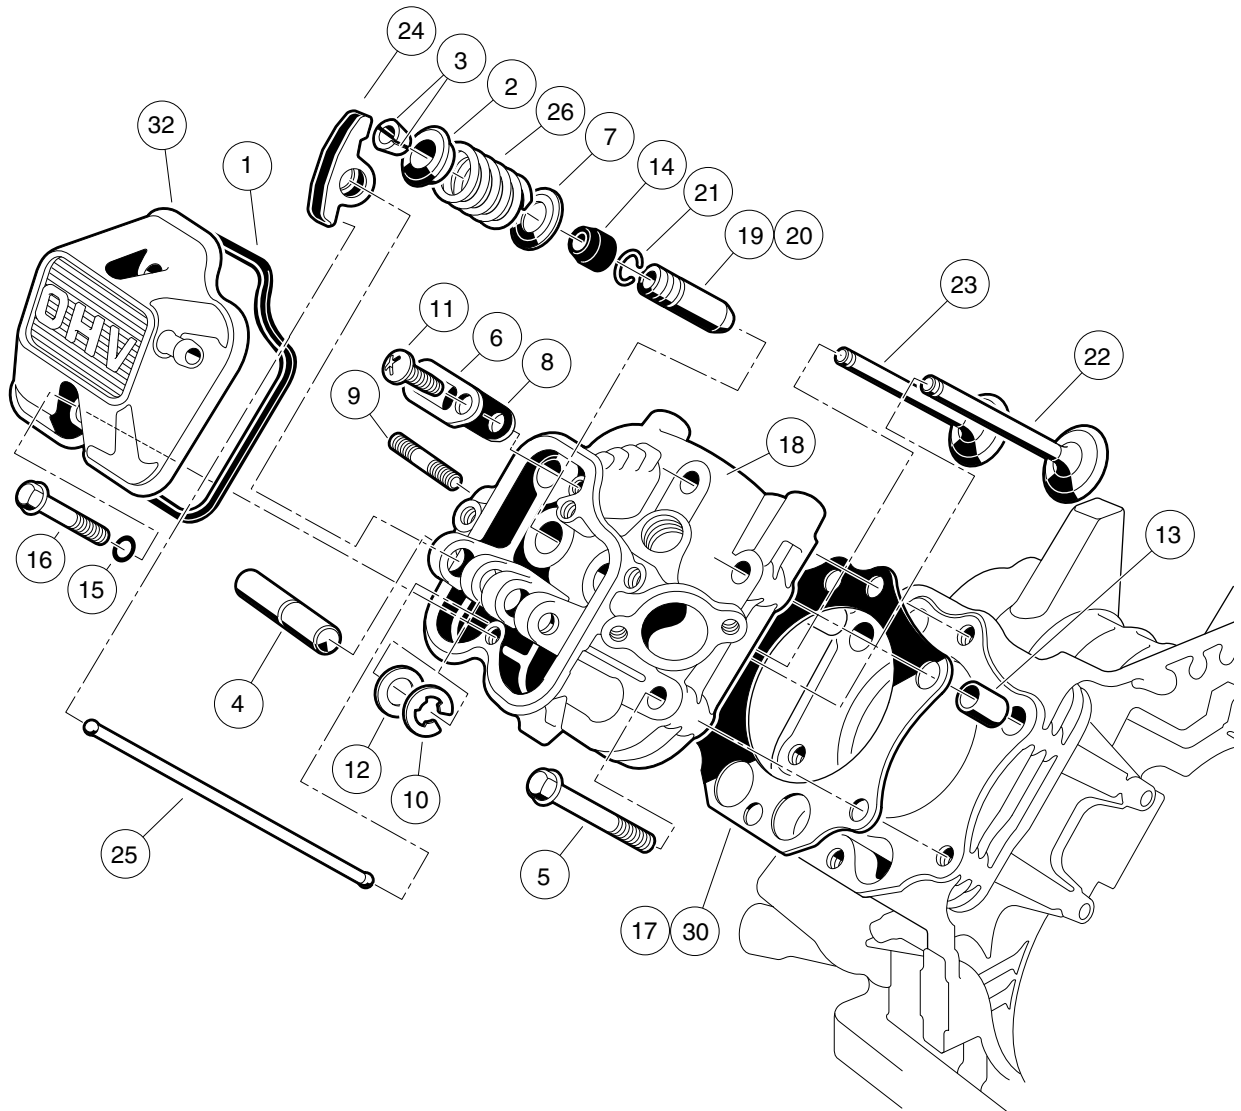

000204-001

AS11 FE350 ENGINE – CYLINDER HEAD


ITEM	PART NO.	DESCRIPTION	QTY	8	G
		1 2 3 4			
1	<u>1016436</u>	Gasket, Rocker Case	1		
2	<u>1016449</u>	Retainer, Valve Spring	2		
3	<u>1016450</u>	Collet	4		
4	<u>1016452</u>	Shaft, Rocker	1		
5	<u>1016458</u>	Bolt, Flange Head, M8 x 1.25 x 45 mm	6		
6	<u>1016474</u>	Plate	1		
7	<u>1016479</u>	Seat, Spring	2		
8	<u>1016483</u>	Valve	1		
9	<u>1016489</u>	Stud, Two-Ended, M8-1.25	2		
10	<u>1016517</u>	Circlip, Type-E	1		
11	<u>1016544</u>	Screw	1		
12	<u>1016549</u>	Washer, 12.1x19x1.8	1		
13	<u>1016563</u>	Pin	2		
14	<u>1016566</u>	Seal, Oil	2		
15	<u>1016569</u>	O-Ring	2		
16	<u>1016583</u>	Bolt, 6x35	2		
17	<u>1017434</u>	Gasket, Head	1		
18	<u>1017435</u>	Assembly, Cylinder Head, FE350 (includes items 19 through 21)	1		
19	<u>1016518</u>	Guide, Valve, Exhaust	1		
20	<u>1016519</u>	Guide, Valve	1		
21	<u>1016560</u>	Snap Ring	2		
22	<u>1017444</u>	Valve, Intake	1		
23	<u>1017445</u>	Valve, Exhaust	1		
24	<u>1017446</u>	Arm, Rocker	2		
25	<u>1017454</u>	Rod, Push	2		
26	<u>1017473</u>	Spring, Engine Valve	2		
27	<u>102304801</u>	Kit, Gasket, FE350 (includes items 28 through 31)	1		
28	<u>1016440</u>	Gasket, Engine to Insulator	1		
29	<u>1016904</u>	Gasket, Exhaust	1		
30	<u>1017434</u>	Gasket, Head	1		
31	<u>1017443</u>	Gasket, Crankcase Cover	1		
32	<u>102753401</u>	Case, Rocker	1		
		Note: Item 28 is not a component of the FE350 engine.			

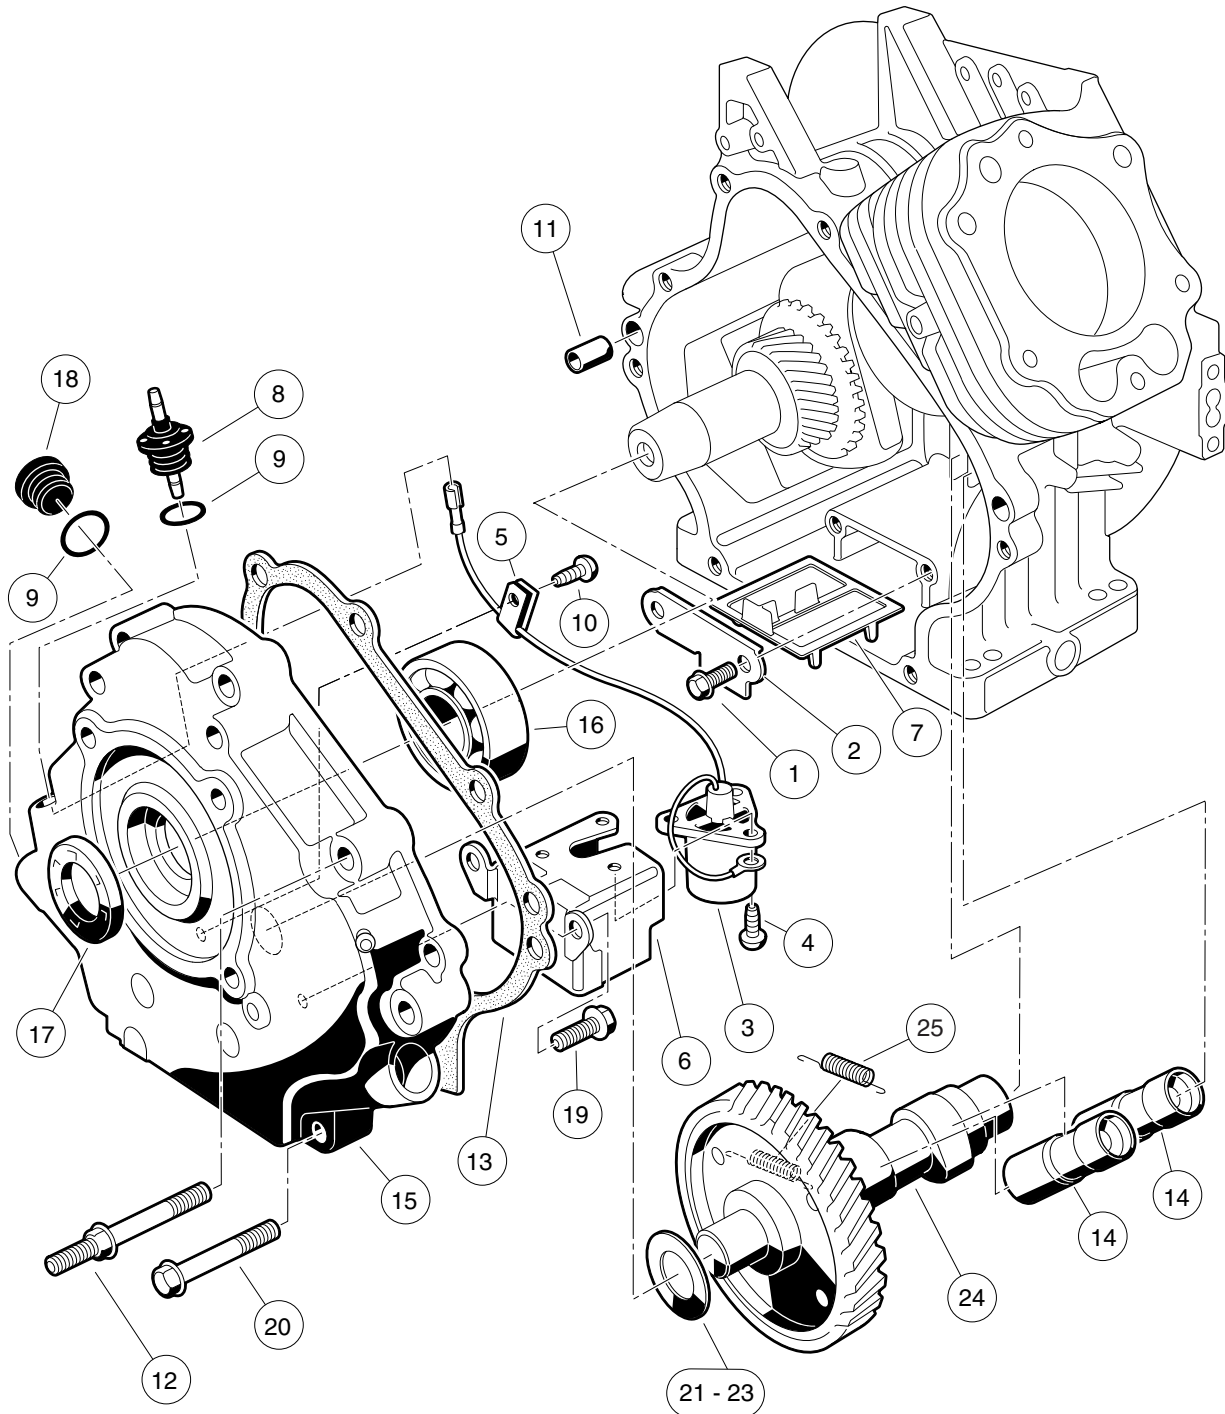

000205-001

FE350 ENGINE WITH ACR – CRANKCASE, CAMSHAFT, AND OIL SENSOR

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>1016454</u>	Bolt, Flange Head, M5 x 0.8 x 8 mm	2	
2	<u>1016472</u>	Plate, Oil Filter Screen	1	
3	<u>1016494</u>	Sensor, Oil Level	1	
4	<u>1016496</u>	Screw, Cross Pan-Head, M4 x 0.7 x 8 mm	3	
5	<u>1016506</u>	Clamp	1	
6	<u>1016510</u>	Bracket, Switch, Oil Level	1	
7	<u>1016521</u>	Screen, Oil Filter	1	
8	<u>1016535</u>	Connector, Cord	1	
9	<u>1016538</u>	O-Ring	2	
10	<u>1016544</u>	Screw	1	
11	<u>1016564</u>	Pin	2	
12	<u>1016584</u>	Bolt, Two-Ended, M8 x 1.25 x 69 mm	2	
13	<u>1017443</u>	Gasket, Crankcase Cover	1	
14	<u>1017447</u>	Adjuster, Lash	2	
15	<u>1017472</u>	Cover Crankcase	1	
16	<u>1017487</u>	Bearing, Ball	1	
17	<u>1017504</u>	Seal, Oil	1	
18	<u>1017508</u>	Plug	1	
19	<u>1017513</u>	Bolt Switch Bracket	2	
20	<u>1017514</u>	Screw, M8-1.25 X 45mm Hex	6	
21	<u>101751801</u>	Shim, 0.3	1	
22	<u>101751802</u>	Shim, 0.4	1	
23	<u>101751803</u>	Shim, 0.5	1	
24	<u>102271601</u>	Camshaft, FE350/FE400 with ACR, 44-tooth (includes item 25)	1	
25	<u>1017511</u>	Spring	1	

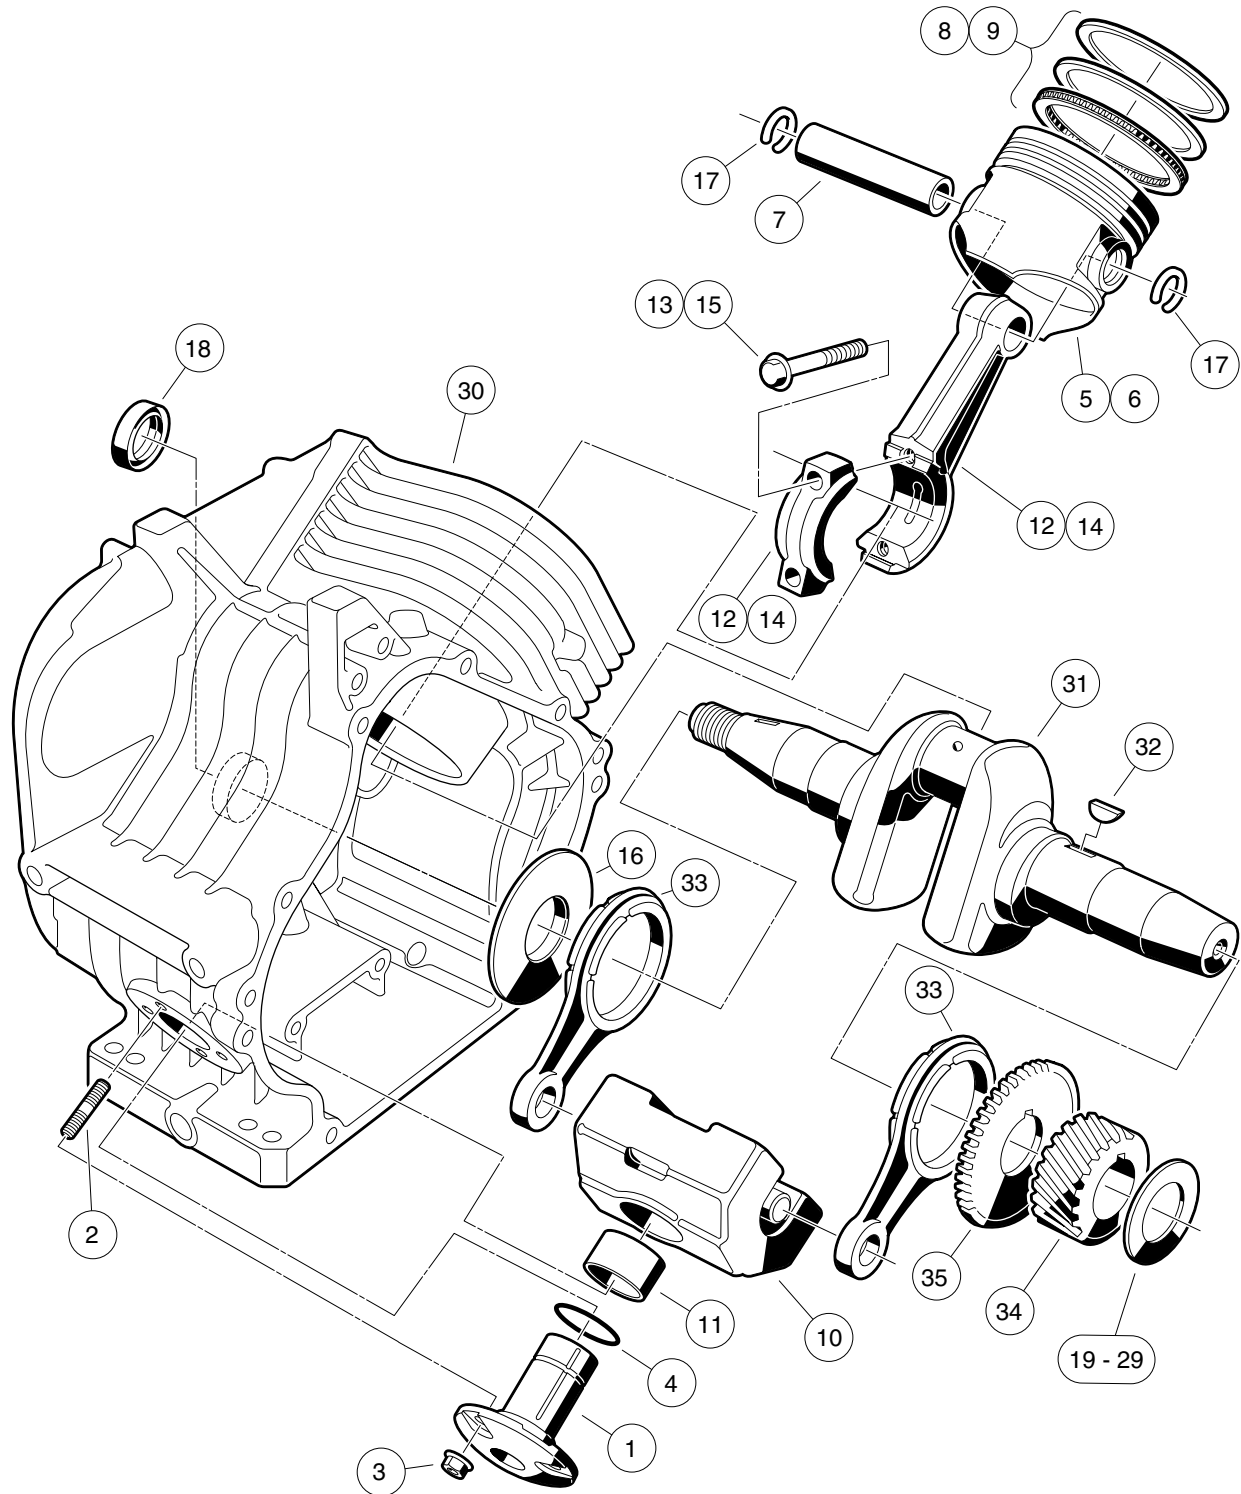


000206-001

AS11 FE350 ENGINE – CRANKCASE AND CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016470	Shaft, Guide, Counterbalance	1
2	<u>1016541</u>	Stud, 6x14	4
3	1016547	Nut, M6 Flange	4
4	<u>1016571</u>	O-Ring	1
5	<u>101744901</u>	Piston, Standard	1
6	<u>101744902</u>	Piston, 0.50 mm Oversize	1
7	1017450	Pin, Piston	1
8	<u>101745101</u>	Ring Set, Standard Piston	1
9	<u>101745102</u>	Ring Set, Piston, 0.50 mm Oversize	1
10	<u>1017453</u>	Fe400 Counterbalance Weight (includes item 11)	1
11	1017510	Bearing, Plain	1
12	101745701	Asm, Con. Rod Std (includes item 13)	1
13	<u>1017512</u>	Bolt	2
14	<u>101745702</u>	Rod Assembly Connecting Rod 0.5mm (includes item 15)	1
15	<u>1017512</u>	Bolt	2
16	1017501	Spacer	1
17	<u>1017502</u>	Snap Ring	2
18	<u>1017503</u>	Seal, Oil	1
19	<u>101773301</u>	Shim, Crankshaft, 1.18mm	1
20	<u>101773302</u>	Shim, Crankshaft, 1.25mm	1
21	<u>101773303</u>	Shim, Crankshaft, 1.32mm	1
22	<u>101773304</u>	Shim, Crankshaft, 1.39mm	1
23	<u>101773305</u>	Shim, Crankshaft, 1.46mm	1
24	<u>101773306</u>	Shim, Crankshaft, 1.53mm	1
25	<u>101773307</u>	Shim, Crankshaft, 1.60mm	1
26	<u>101773308</u>	Shim, Crankshaft, 1.67mm	1
27	<u>101773309</u>	Shim, Crankshaft, 1.74mm	1
28	<u>101773310</u>	Shim, Crankshaft, 1.11mm	1
29	<u>101773311</u>	Shim, Crankshaft, 1.81mm	1
30	<u>101916001</u>	Crankcase Complete, FE350 (cw)	1
31	<u>102430901</u>	Crankshaft, FE350 Left-Hand, 22-Tooth (includes items 32 through 35)	1
32	<u>1016562</u>	Key	1
33	<u>1017471</u>	Rod	2
34	N/A	Gear, Helical	1
35	N/A	Gear, Spur	1

8
G

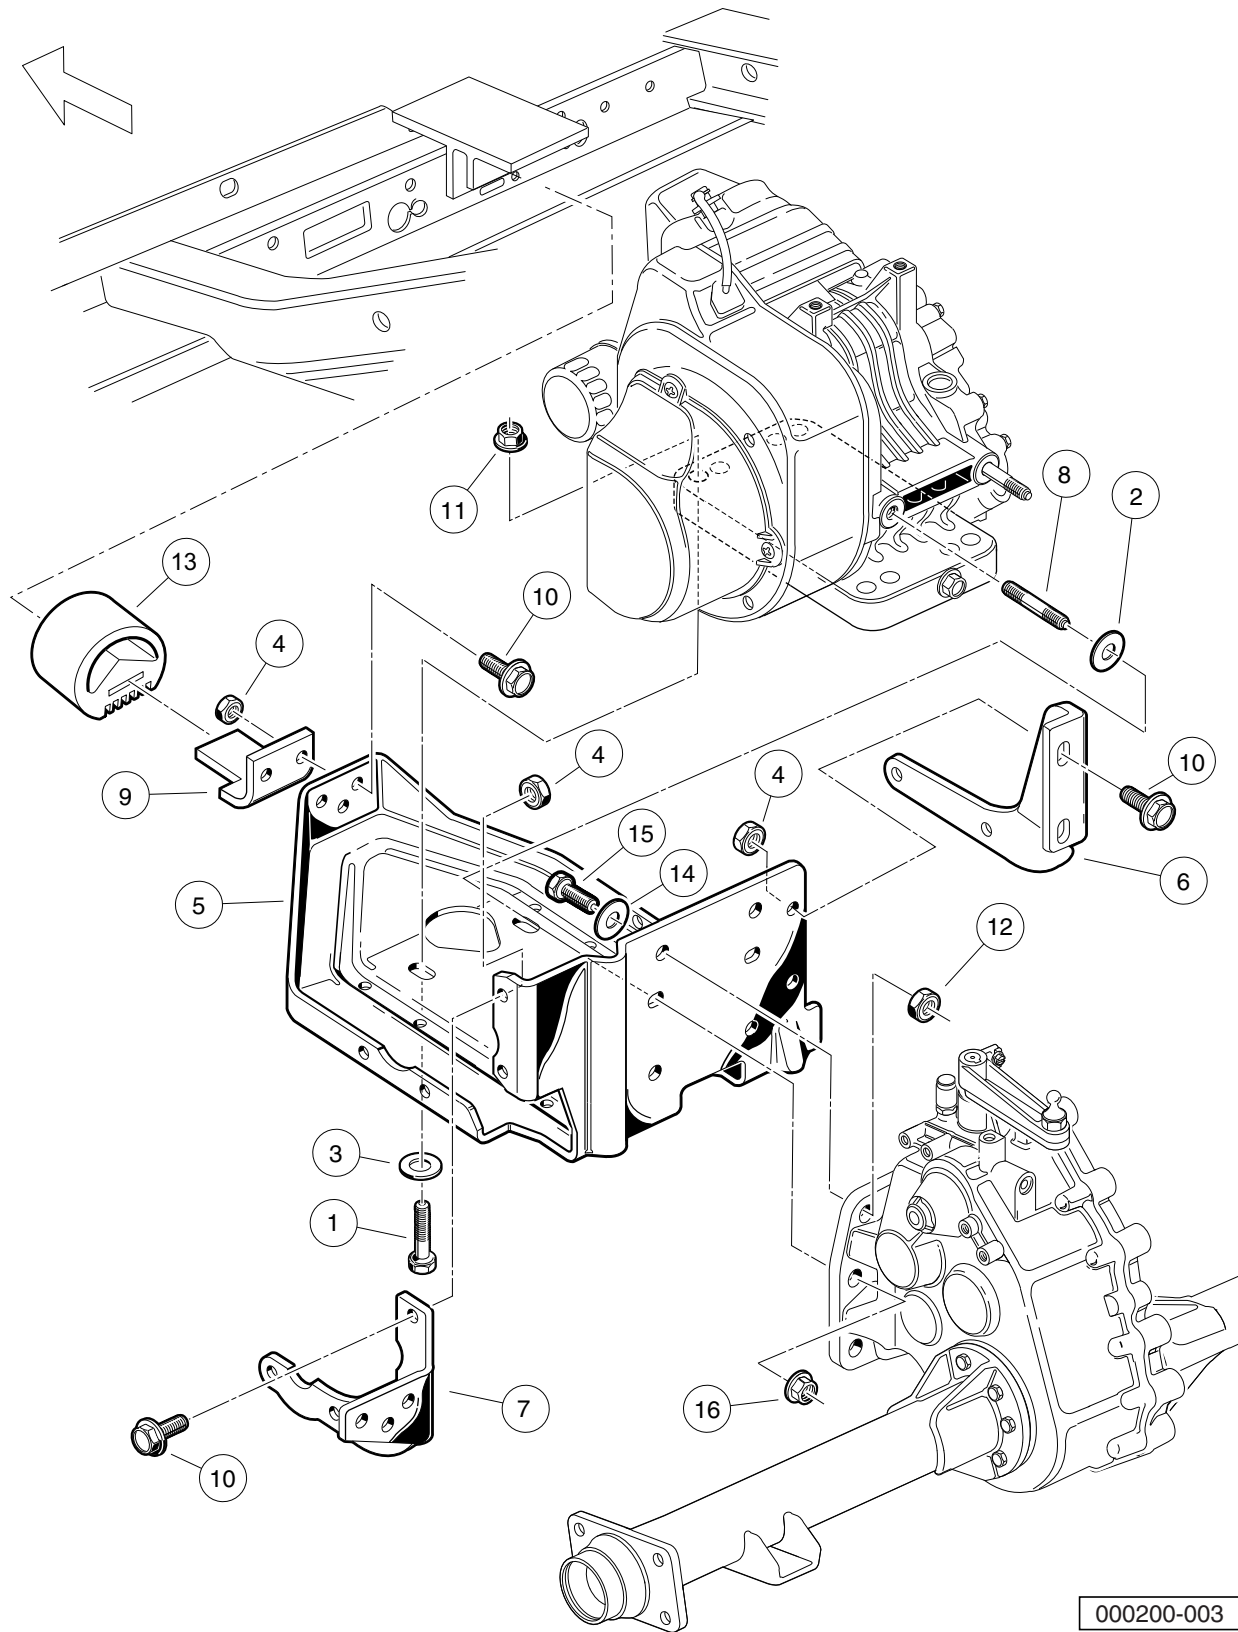

000200-003

FE350 ENGINE MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	4
2	<u>1011697</u>	Washer, 5/16 Flat	2
3	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	4
4	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	10
5	<u>101827101</u>	Plate, Engine Mounting	1
6	<u>101832601</u>	Stiffener (PTO Side)	1
7	<u>101832701</u>	Stiffener (Flywheel Side)	1
8	<u>101833101</u>	Stud, M8-1.25 X 50 mm Two-Ended	2
9	<u>101834601</u>	Snubber Bracket	1
10	<u>101884801</u>	Screw, 5/16-24 X 0.875 Grade-8	10
11	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4
12	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4
13	<u>102540301</u>	Inner Frame Snubber	1
14	<u>334</u>	Washer, 3/8 Type A Flat	4
15	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	4
16	<u>96704416</u>	Nut Flg, M8 X 1.25 Serrated	2

8

G

 
8

G

FUEL, INTAKE, AND GOVERNOR SYSTEMS


9

G



FUEL SYSTEM – TRANSPORTER 4 AND 6


ITEM	PART NO.	DESCRIPTION	QTY	9	G
		1 2 3 4			
1	<u>1011988</u>	Screw, 1/4-20 X 2.00 Phillips Truss-Head	2		
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4		
3	<u>1012649</u>	Clamp, 0.460 Red Hose	7		
4	<u>1013687</u>	Clamp, 3/8" Hose (screw type)	1		
5	<u>1013746</u>	Clamp, 0.301 ID Hose	2		
6	<u>1014116</u>	Nut, 1/4-20 Speed	3		
7	<u>1014524</u>	Kit, Impulse Pump Rebuild	1		
8	<u>1014928</u>	Fuel Strap Assembly Rear	1		
9	<u>1015137</u>	Fuel Line (available by the foot)	1		
10	<u>101824401</u>	Vent Barb	1		
11	<u>101929501</u>	Mount Fuel Pump	1		
12	<u>101955301</u>	Fuel Strap Assy, Front	1		
13	<u>101987701</u>	Clamp, Plastic Tie	1		
14	<u>102003201</u>	Filter, Fuel, 30 Micron	1		
15	<u>102865101</u>	Fuel Line	1		
16	<u>103781101</u>	Kit, Fuel Pump Retrofit (includes items 17 and 18)	1		
17	<u>103010101</u>	Pump, Fuel, Impulse, Fh	1		
18	<u>103781201</u>	Instr, Fuel Pump Retrofit	1		
19	<u>8248</u>	Screw, 1/4-20 X 0.75 Truss-Head Machine	1		
		 Note: Total fuel line length: 43 inches (109.2 cm)			

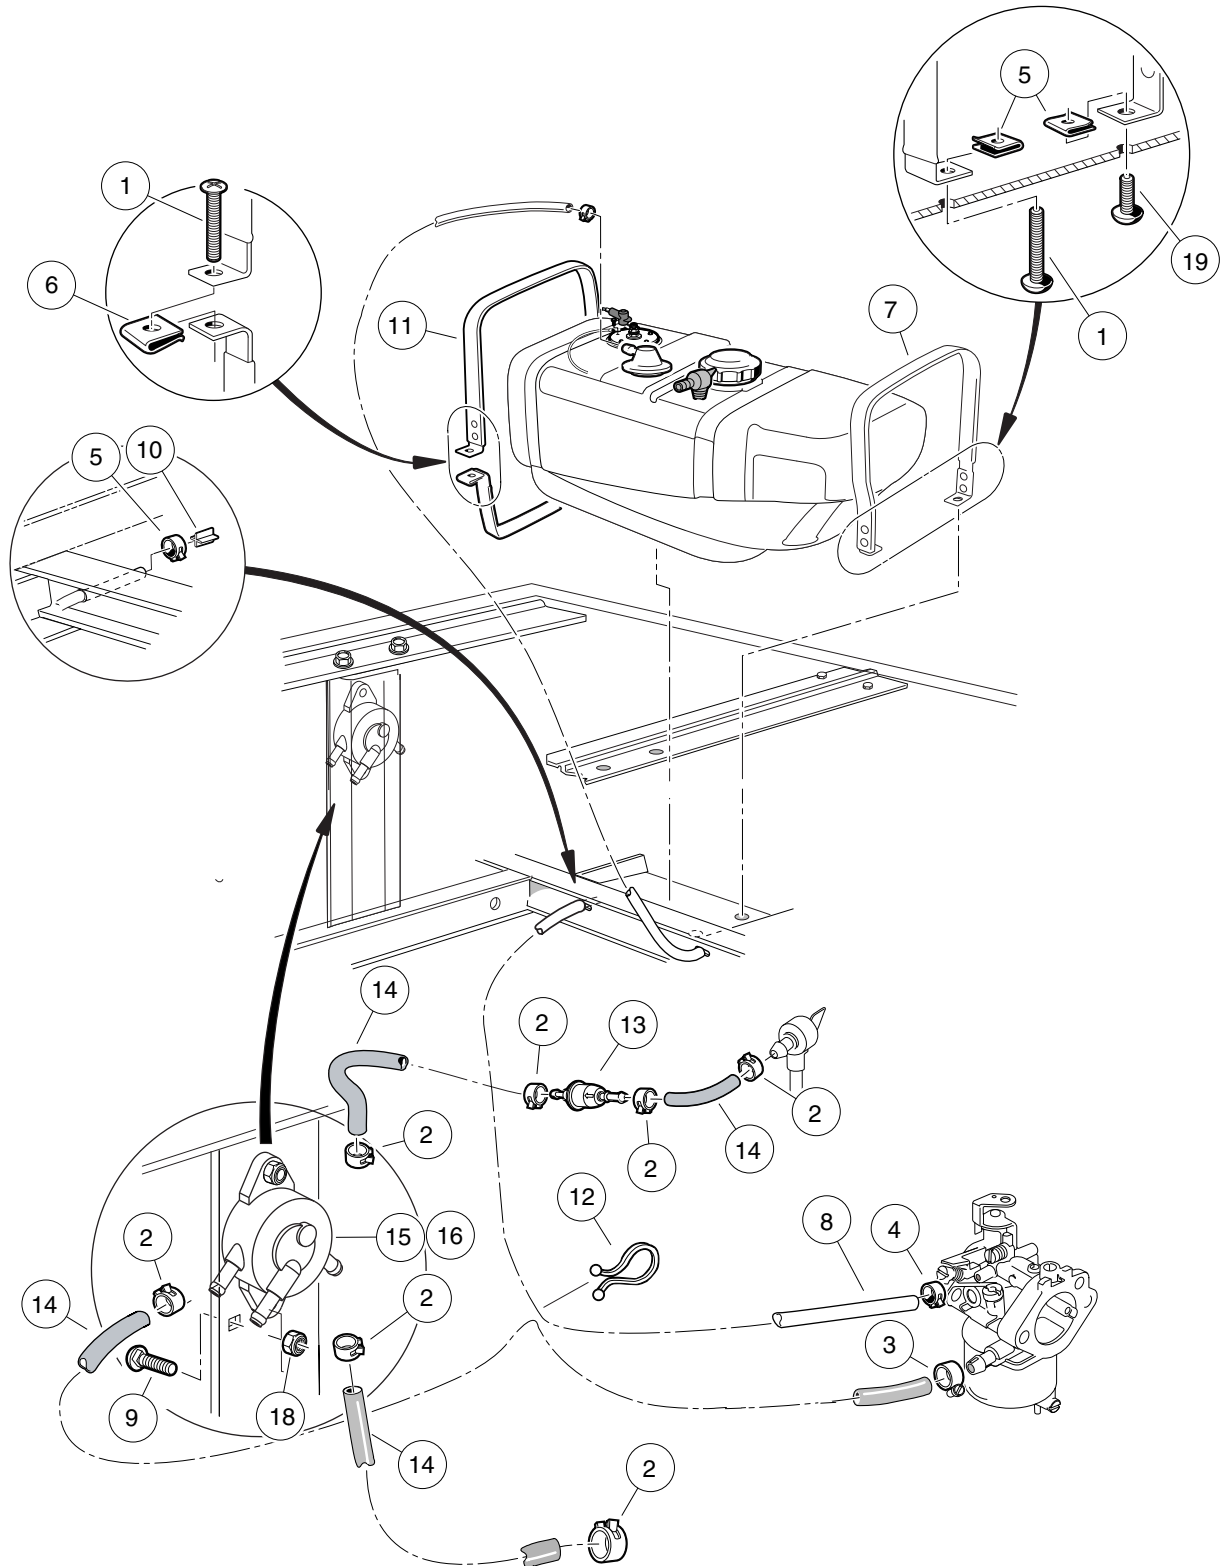

000210-004

FUEL SYSTEM – DS VILLAGER 4, VILLAGER 6, AND VILLAGER 8


ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>1011988</u>	Screw, 1/4-20 X 2.00 Phillips Truss-Head	2	
2	<u>1012649</u>	Clamp, 0.460 Red Hose	7	
3	<u>1013687</u>	Clamp, 3/8" Hose (screw type)	1	
4	<u>1013746</u>	Clamp, 0.301 ID Hose	2	
5	<u>1014116</u>	Nut, 1/4-20 Speed	3	
6	<u>1014524</u>	Kit, Impulse Pump Rebuild	1	
7	<u>1014928</u>	Fuel Strap Assembly Rear	1	
8	<u>1015137</u>	Fuel Line (available by the foot)	1	
9	<u>1017203</u>	Carriage Bolt	2	
10	<u>101824401</u>	Vent Barb	1	
11	<u>101955301</u>	Fuel Strap Assy, Front	1	
12	<u>101987701</u>	Clamp, Plastic Tie	1	
13	<u>102003201</u>	Filter, Fuel, 30 Micron	1	
14	<u>102865101</u>	Fuel Line	1	
15	<u>103781101</u>	Kit, Fuel Pump Retrofit (includes items 16 and 17)	1	
16	<u>103010101</u>	Pump, Fuel, Impulse, Fh	1	
17	103781201	Instr, Fuel Pump Retrofit	1	
18	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2	
19	<u>8248</u>	Screw, 1/4-20 X 0.75 Truss-Head Machine	1	
Note: Total fuel line length: 47 inches (119.4 cm)				

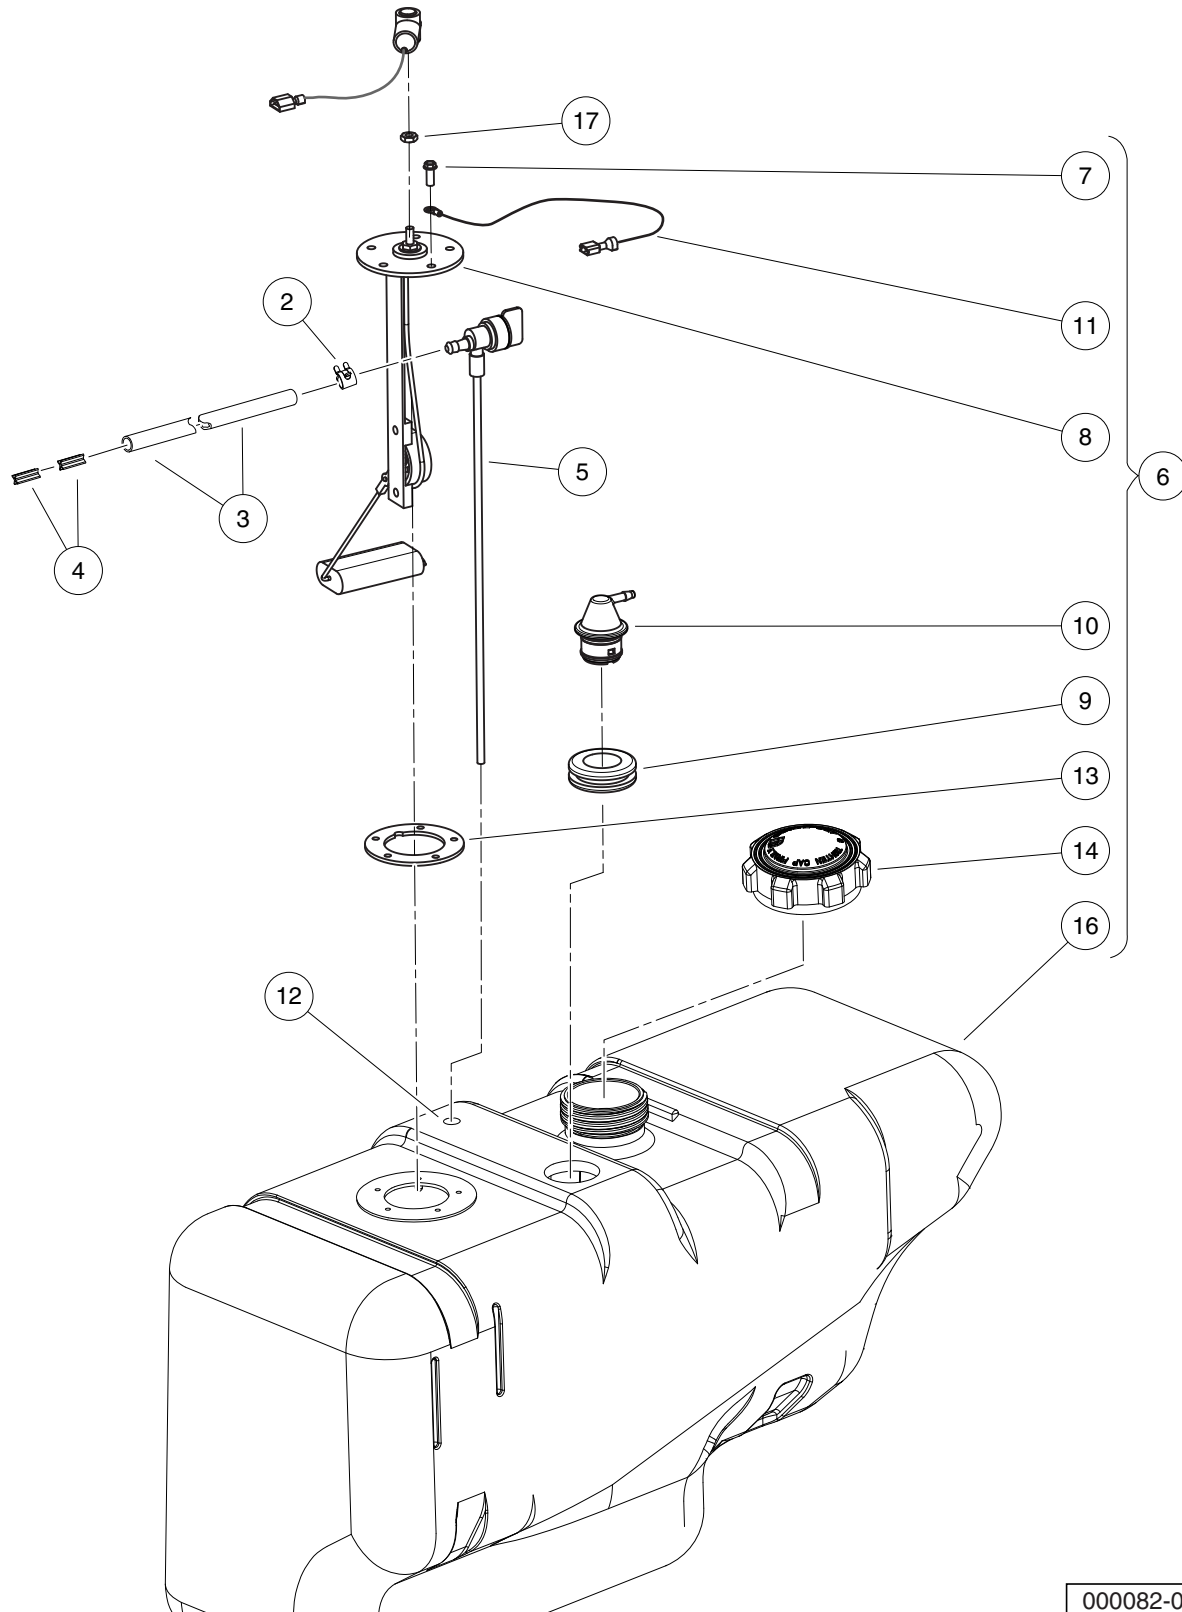

000082-003

FUEL TANK WITH FUEL LEVEL SENDING UNIT

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	1016004	Tank Kit w/Sending Unit (includes items 2 through 6)	1	
2	<u>1013746</u>	Clamp, 0.301 ID Hose	2	
3	<u>1015137</u>	Fuel Line (available by the foot)	1	
4	<u>101824401</u>	Vent Barb	2	
5	101896901	Fuel Pickup w/Shut-Off Valve	1	
6	<u>103651901</u>	Asm, Tank, Ds Utl W/su† Nano (includes items 7 through 16)	1	
7	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	5	
8	<u>1013462</u>	Sending Unit, Fuel Level *	1	
9	<u>1015139</u>	Insulation Grommet	1	
10	<u>1015143</u>	Vent, Fuel Tank	1	
11	1015921	Wire Assembly #16 Black	1	
12	<u>102406701</u>	Bushing, Line, Return	1	
13	<u>102522001</u>	Gasket, Rubber	1	
14	<u>103372101</u>	Cap, Fuel Tank, Gas, Ratchet	1	
15	<u>103372302</u>	Fuel Pickup w/Shut-Off Valve, 288mm	1	
16	103776901	Tank, Fuel, Top, W/su Nano	1	
17	<u>8797</u>	Nut, #10-32 Brass Hex	1	
* Note: Must replace fuel sending unit gasket when servicing this component.				

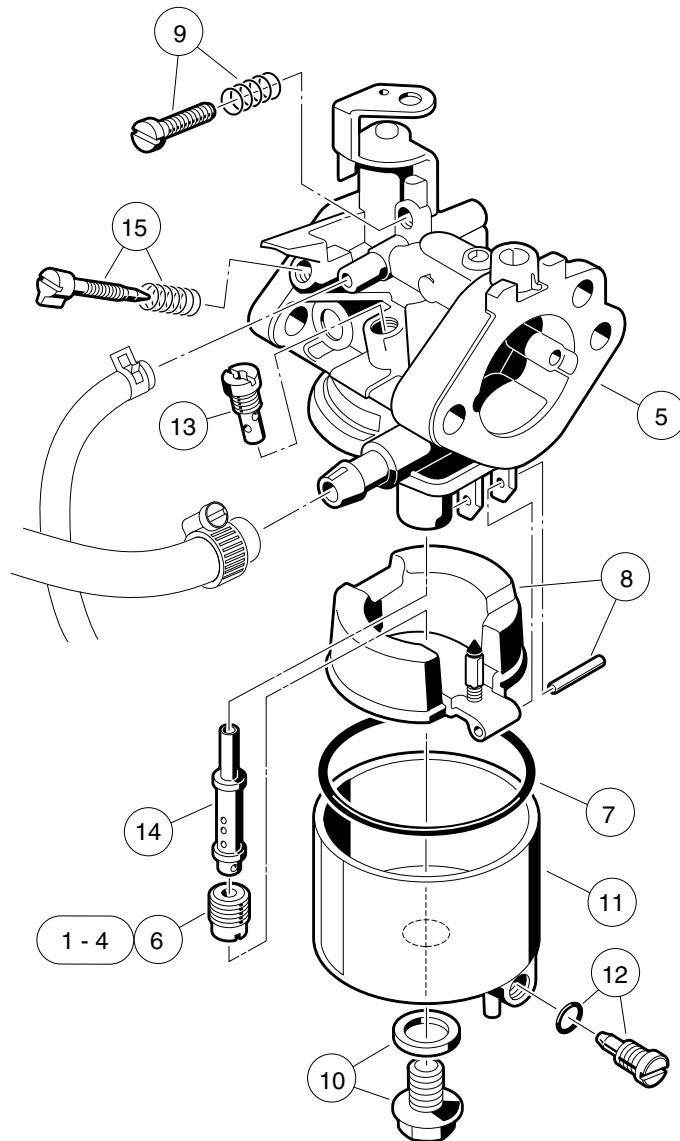


000211-001

CARBURETOR ASSEMBLY, FE290 ENGINE – DS VILLAGER 4

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101642572</u>	Jet, Altitude, # 72	1
2	<u>101642575</u>	Jet, Altitude, # 75	1
3	<u>101642578</u>	Jet, Altitude, # 78	1
4	<u>101642580</u>	Jet, Altitude, # 80	1
5	<u>101905601</u>	Carburetor Assembly, FE290D (includes items 6 through 15)	1
6	<u>101642582</u>	Jet, Altitude, # 82	1
7	<u>1016437</u>	Gasket, Carburetor Bowl OHV	1
8	<u>1016486</u>	Float Assembly	1
9	<u>1016501</u>	Screw Assembly	1
10	<u>1016585</u>	Bolt	1
11	<u>1017461</u>	Chamber Assembly, Float (includes item 12)	1
12	<u>1016499</u>	Screw Assembly	1
13	<u>101973101</u>	Jet, #40 Pilot	1
14	<u>101973201</u>	Nozzle, Main	1
15	N/A	Assembly, Pilot Air Screw	1
Note: <u>101642582</u> for 0 - 3,000 feet; <u>101642580</u> for 3,000 - 5,000 feet; <u>101642578</u> for 5,000 - 8,000 feet; <u>101642575</u> for 8,000 - 10,000 feet; <u>101642572</u> for 10,000 feet and higher.			

9

G

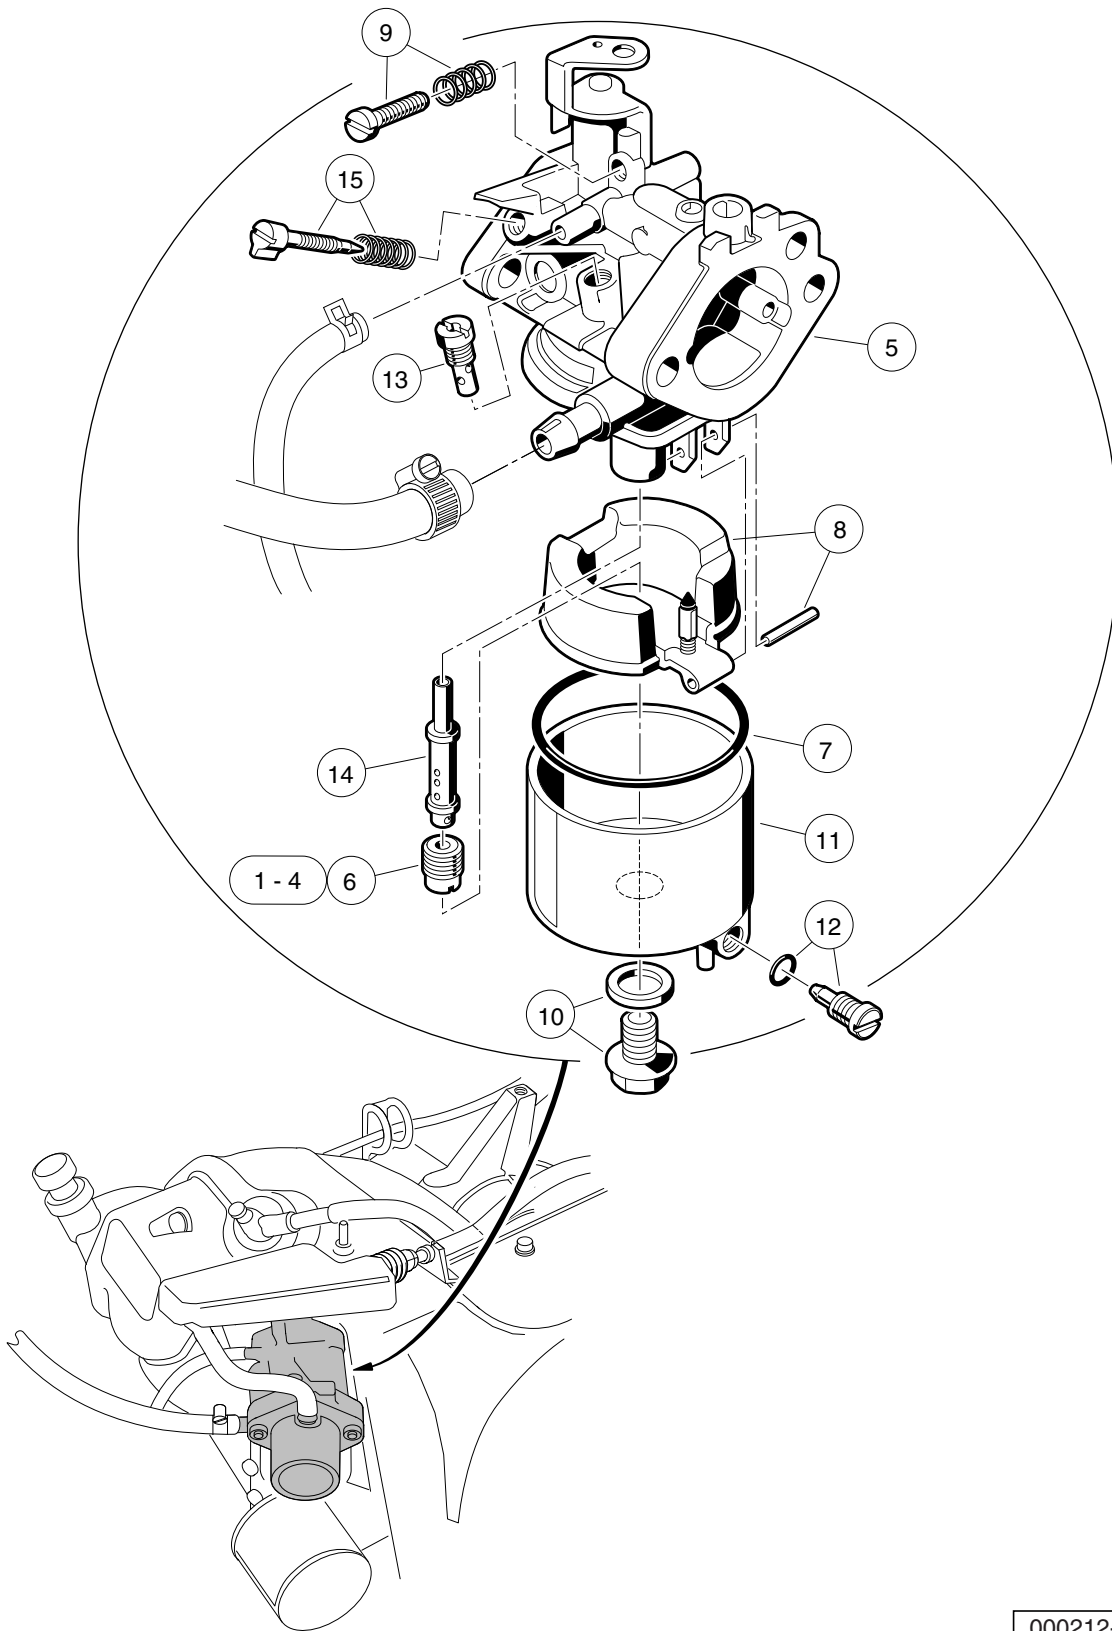


000212-001

CARBURETOR ASSEMBLY, FE350 ENGINE – VILLAGER 6 AND 8, AND TRANSPORTER 4 AND 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101642575</u>	Jet, Altitude, # 75	1
2	<u>101642578</u>	Jet, Altitude, # 78	1
3	<u>101642580</u>	Jet, Altitude, # 80	1
4	<u>101642582</u>	Jet, Altitude, # 82	1
5	<u>101905901</u>	Carburetor, FE350D (includes items 6 through 15)	1
6	<u>101642585</u>	Jet, Altitude, # 85	1
7	<u>1016437</u>	Gasket, Carburetor Bowl OHV	1
8	<u>1016486</u>	Float Assembly	1
9	<u>1016501</u>	Screw Assembly	1
10	<u>1016585</u>	Bolt	1
11	<u>1017461</u>	Chamber Assembly, Float (includes item 12)	1
12	<u>1016499</u>	Screw Assembly	1
13	<u>101973101</u>	Jet, #40 Pilot	1
14	<u>101973301</u>	Nozzle, Main	1
15	N/A	Assembly, Pilot Air Screw	1
Note: <u>101642585</u> for 0 - 3,000 feet; <u>101642582</u> for 3,000 - 5,000 feet; <u>101642580</u> for 5,000 - 8,000 feet; <u>101642578</u> for 8,000 - 10,000 feet; <u>101642575</u> for 10,000 feet and higher.			

9
G

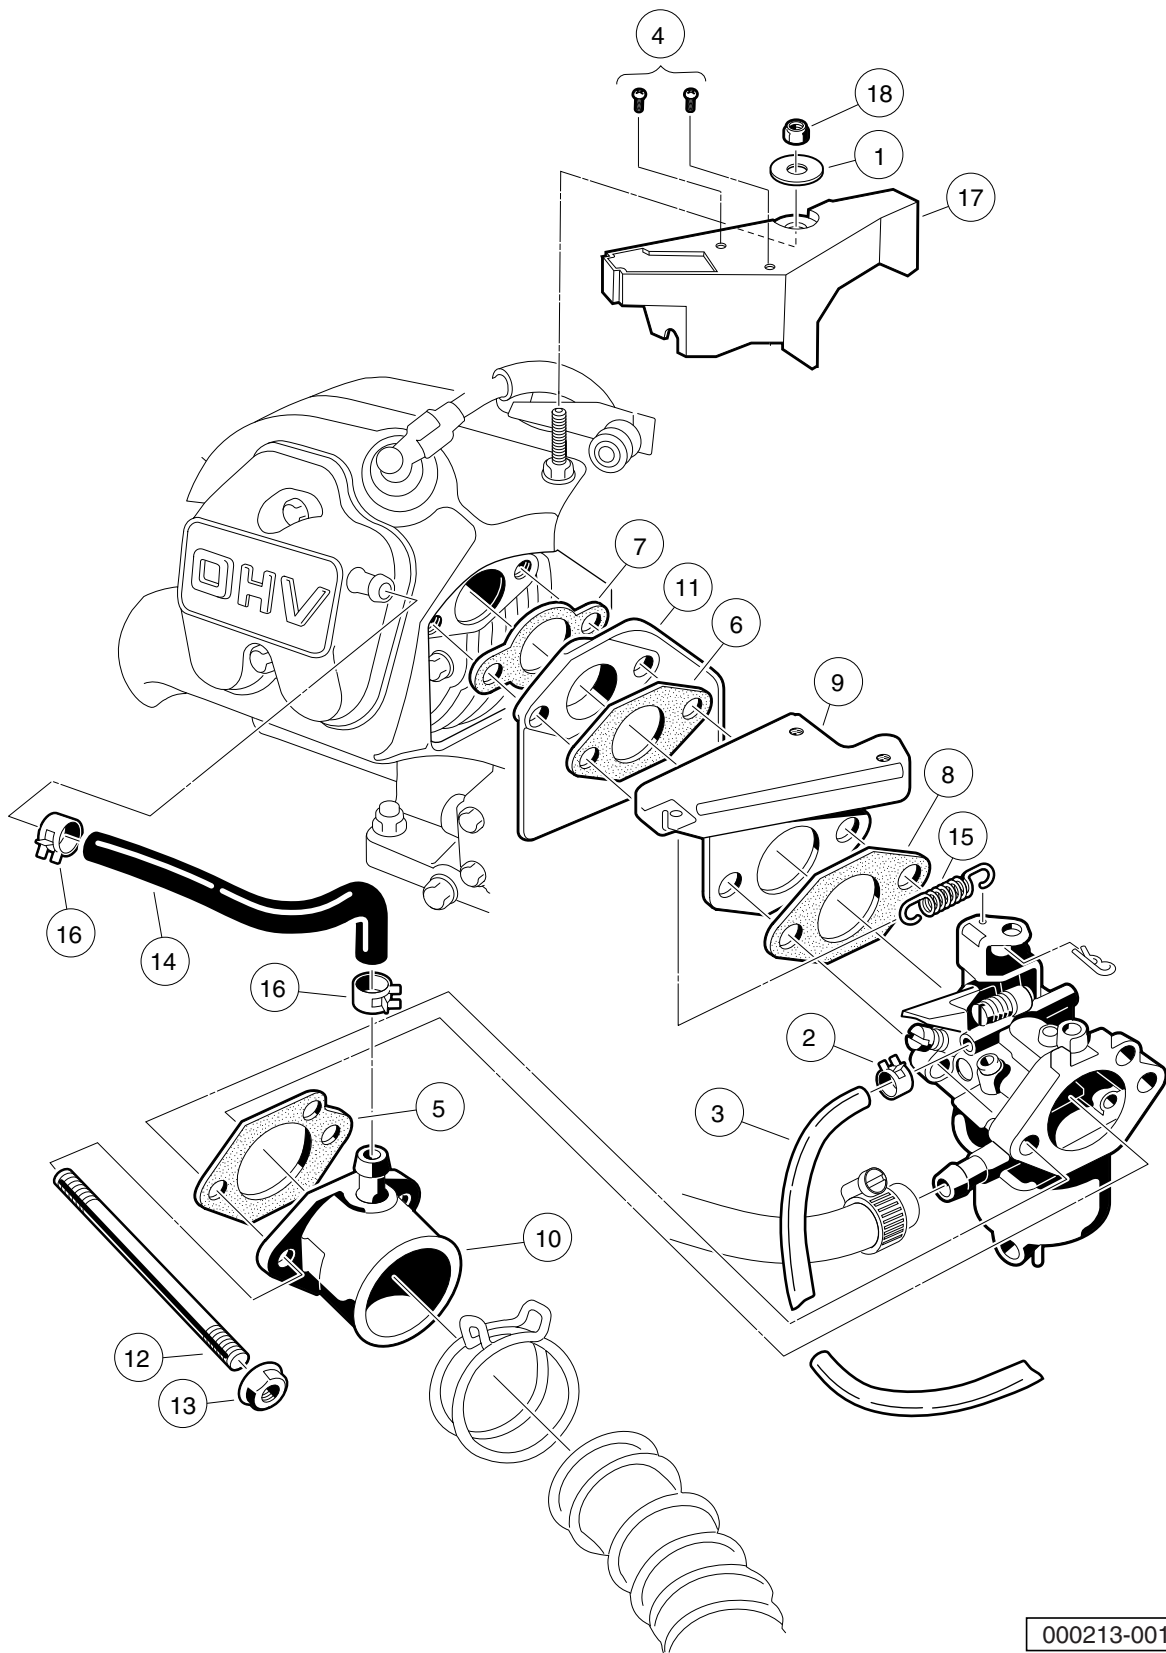


000213-001

CARBURETOR INSTALLATION, FE290 ENGINE – DS VILLAGER 4

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011697</u>	Washer, 5/16 Flat	1
2	<u>1013746</u>	Clamp, 0.301 ID Hose	1
3	<u>1015137</u>	Fuel Line (available by the foot)	1
4	<u>1016103</u>	Screw, Pan Hd Tx, Taptite 6-32	2
5	<u>1016438</u>	Gasket, Carb To Intake Manifold	1
6	<u>1016439</u>	Gasket, Insulator	1
7	<u>1016440</u>	Gasket, Engine to Insulator	1
8	<u>1016441</u>	Gasket, Sprg Brkt To Carb OHV	1
9	<u>1016444</u>	Bracket, Throttle Spring Return	1
10	1016480	Pipe, Intake Manifold	1
11	101648102	Insulator, Carburetor	1
12	<u>101649002</u>	Stud, M6-1.00 Two-Ended	2
13	1016547	Nut, M6 Flange	2
14	<u>1016572</u>	Tube, Crankcase Vent	1
15	<u>1016582</u>	Spring, Throttle Return	1
16	<u>1017466</u>	Clamp	2
17	101820201	Shield, Governor	1
18	<u>101887601</u>	Locknut, M6-1.00 Nylon Insert	1

9


G

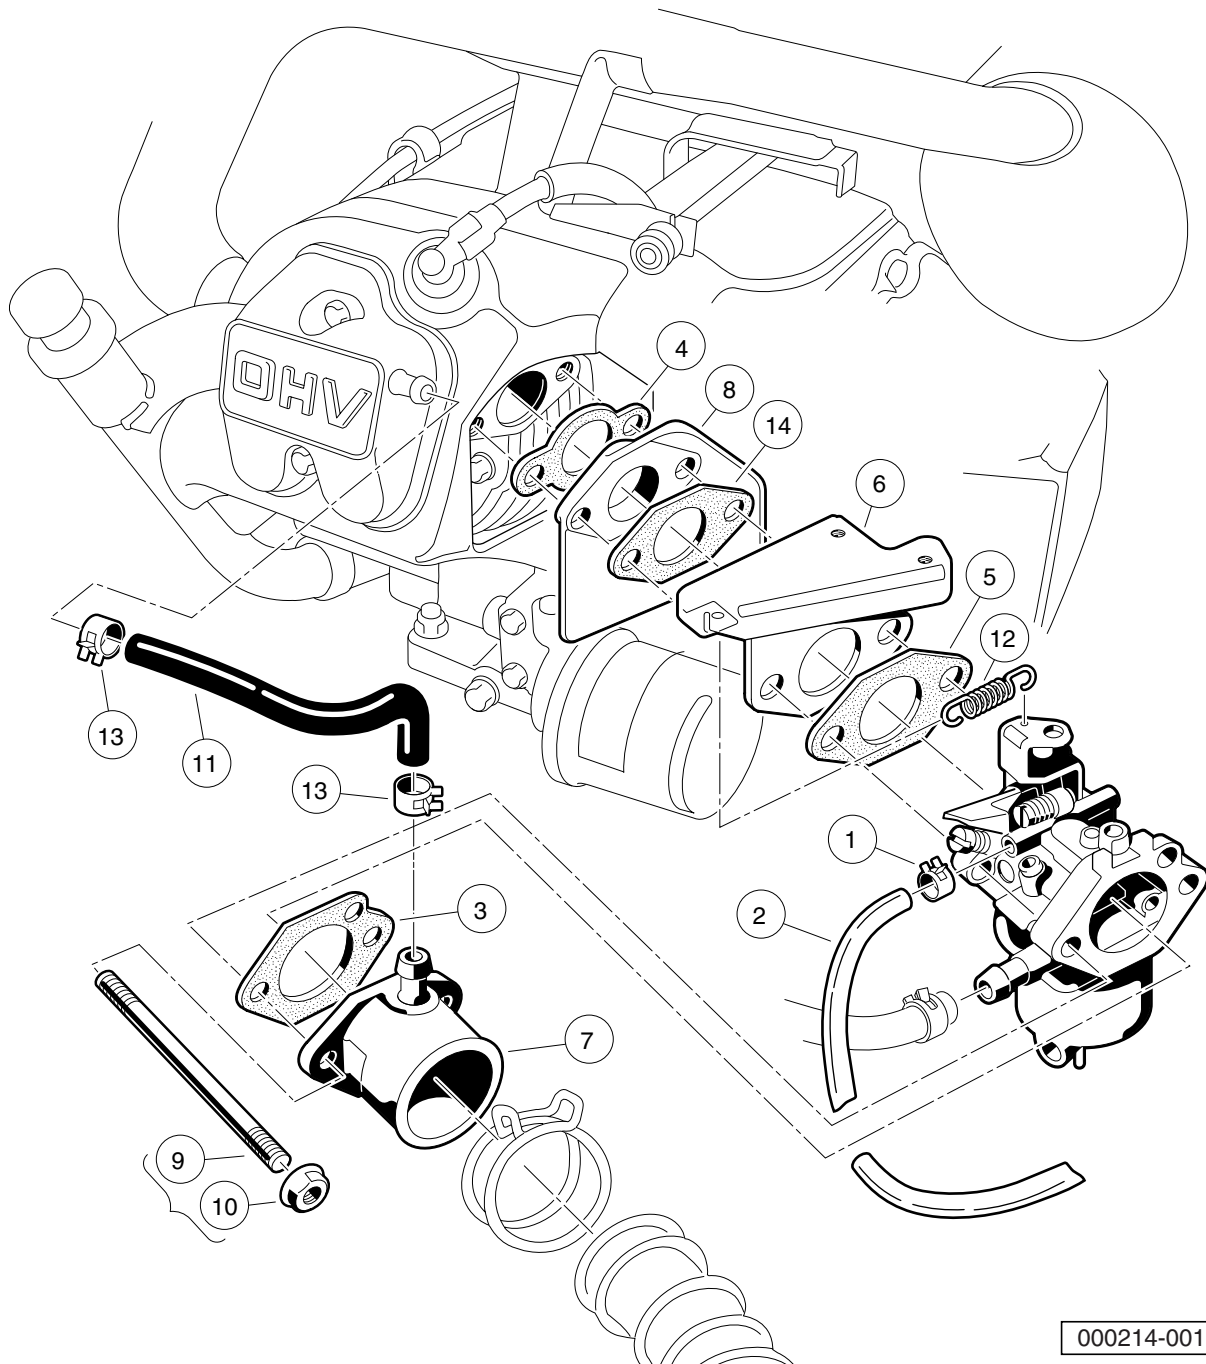

000214-001

CARBURETOR INSTALLATION, FE350 ENGINE – VILLAGER 6 AND 8, AND TRANSPORTER 4 AND 6

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>1013746</u>	Clamp, 0.301 ID Hose	1	
2	<u>1015137</u>	Fuel Line (available by the foot)	1	
3	<u>1016438</u>	Gasket, Carb To Intake Manifold	1	
4	<u>1016440</u>	Gasket, Engine to Insulator	1	
5	<u>1016441</u>	Gasket, Sprg Brkt To Carb OHV	1	
6	<u>1016444</u>	Bracket, Throttle Spring Return	1	
7	1016480	Pipe, Intake Manifold	1	
8	101648102	Insulator, Carburetor	1	
9	<u>101649002</u>	Stud, M6-1.00 Two-Ended	2	
10	1016547	Nut, M6 Flange	2	
11	<u>1016572</u>	Tube, Crankcase Vent	1	
12	<u>1016582</u>	Spring, Throttle Return	1	
13	<u>1017466</u>	Clamp	2	
14	<u>101973401</u>	Gasket, Insulator To Bracket	1	

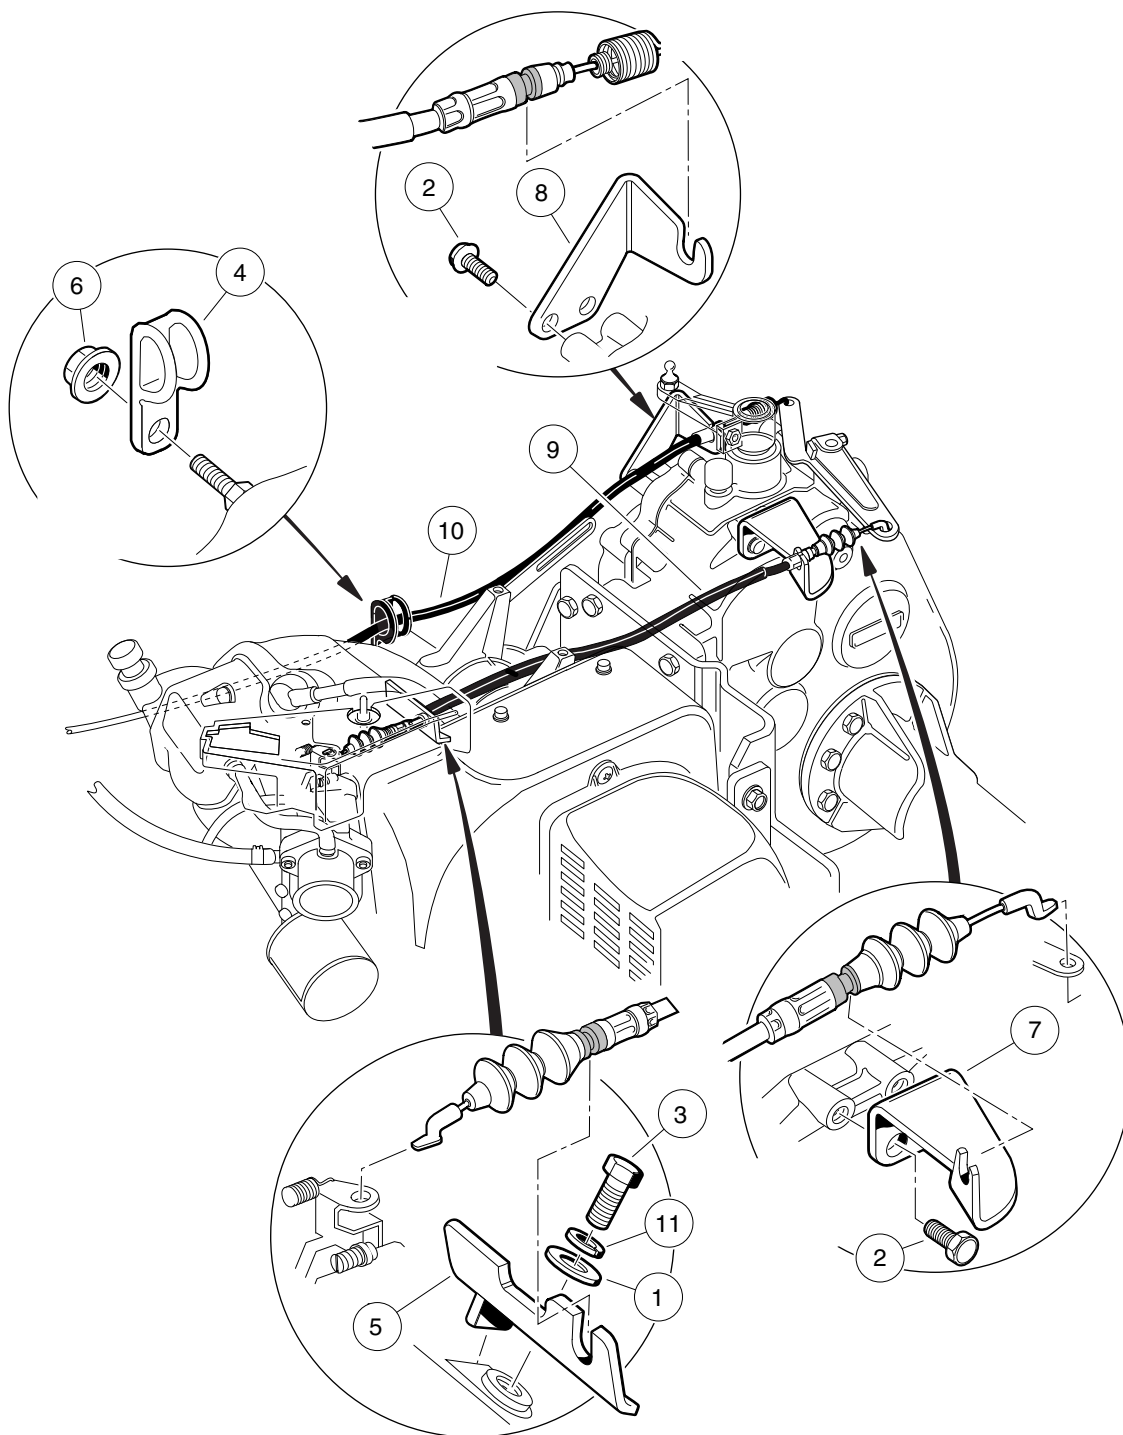


000215-001

GOVERNOR AND ACCELERATOR CABLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011697</u>	Washer, 5/16 Flat	1
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4
3	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	1
4	<u>1013700</u>	Clamp	2
5	<u>101584502</u>	Bracket, Governor Cable Snap-In	1
6	<u>1016546</u>	Nut	2
7	<u>101832202</u>	Bracket, Rear Governor Cable Snap-In	1
8	<u>101832302</u>	Bracket, Rear Accelerator Cable Snap-In	1
9	<u>102336001</u>	Cable, Governor, Snap-In	1
10	<u>102336101</u>	Cable, Accelerator, Snap-In	1
11	<u>7174</u>	Lockwasher, 5/16 Split	1

9

G

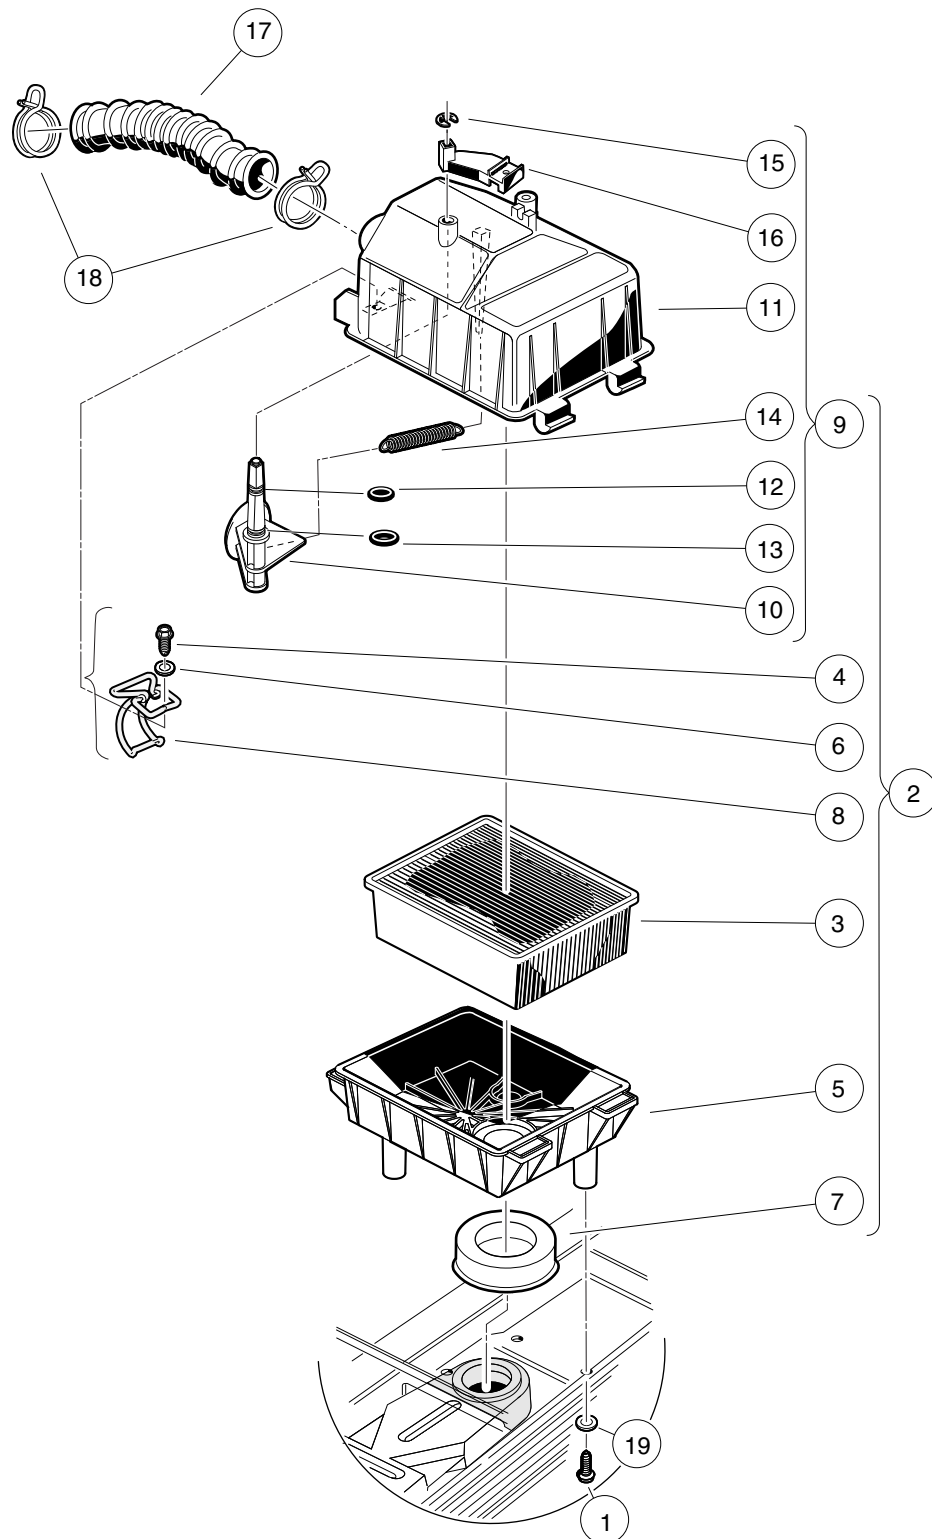


000332-001

AIR BOX AND INTAKE HOSE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	3
2	<u>101821501</u>	Assembly, Air Box (includes items 3 through 9)	1
3	<u>1015426</u>	Filter, Air	1
4	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	2
5	<u>101811901</u>	Bottom, Air Box	1
6	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	2
7	<u>101921501</u>	Seal, Intake	1
8	<u>101925701</u>	Latch, Wireform	2
9	<u>101972801</u>	Top Assy, Air Box (includes items 10 through 16)	1
10	N/A	Valve, Choke	1
11	101811801	Top, Air Box	1
12	N/A	O-Ring, 5/16	1
13	N/A	O-Ring, 3/8	1
14	<u>101812301</u>	Spring, Extension Return	1
15	<u>101813001</u>	Retaining Ring 0.25, Shaft	1
16	<u>101917601</u>	Lever, Choke	1
17	<u>101837101</u>	Hose, Air Intake	1
18	<u>101971301</u>	Clamp, 1.58" ID Hose	2
19	<u>332</u>	Washer, 1/4 Type A Narrow Flat	3

9


G

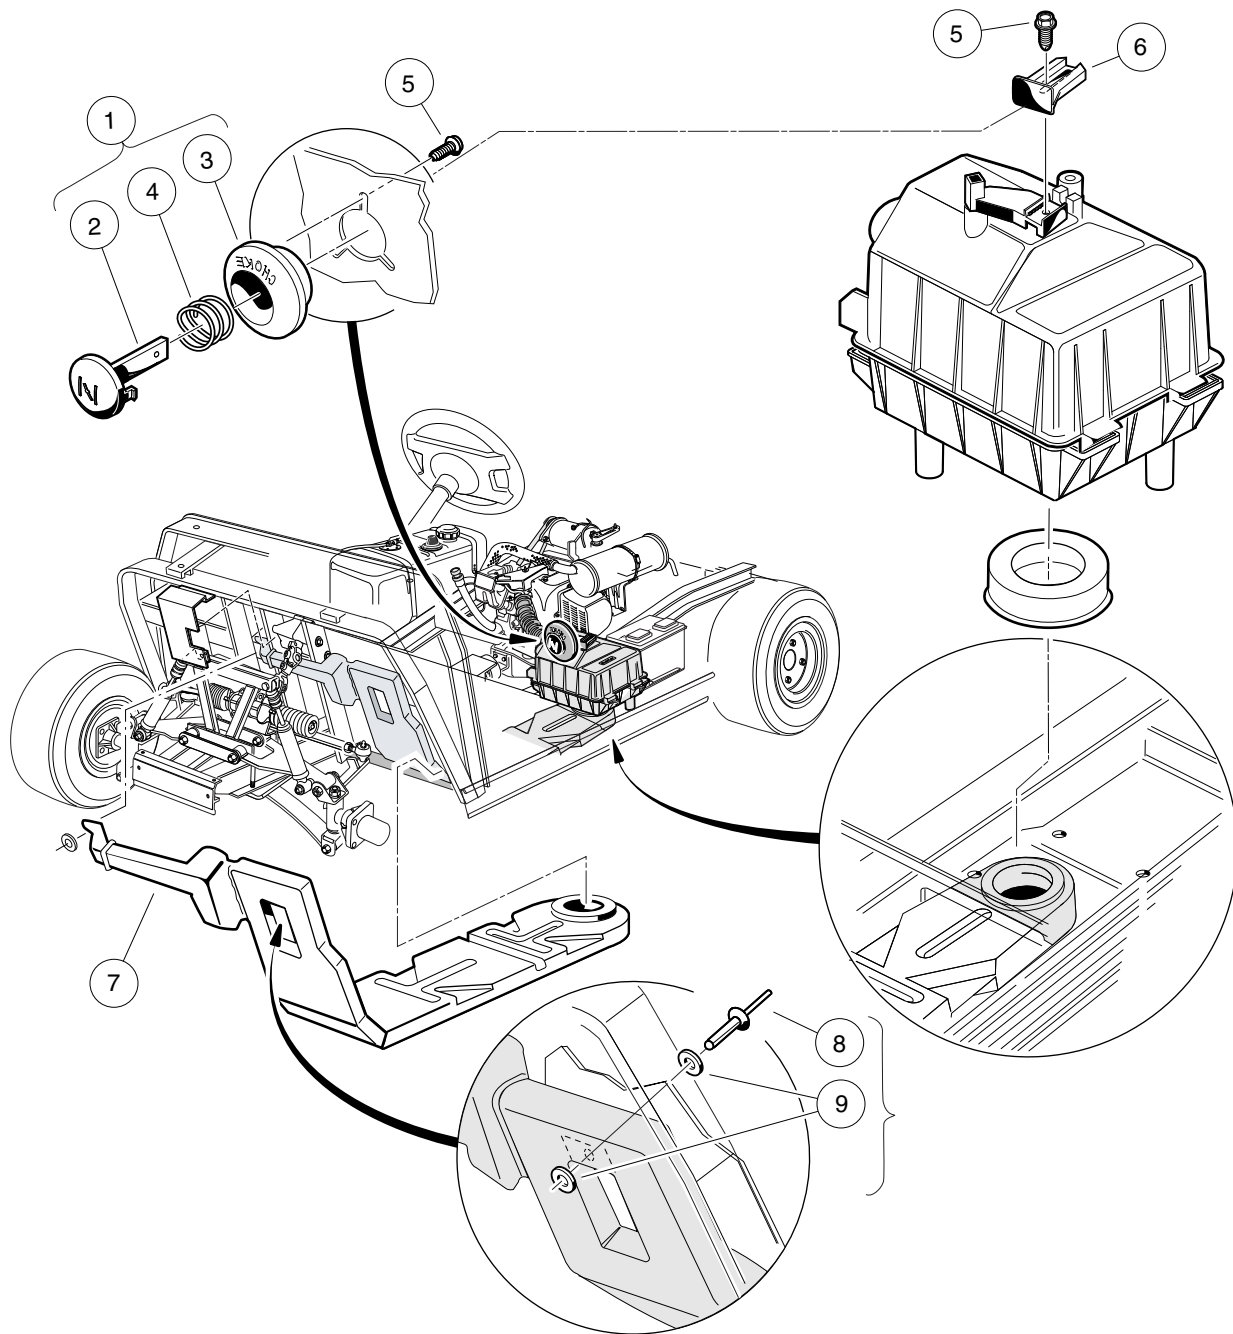

000338-004

INTAKE SYSTEM – DS VILLAGER 4


ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>101805701</u>	Button Assembly, Choke (includes items 2 through 4)	1	
2	<u>101811401</u>	Lever, Choke	1	
3	<u>101811501</u>	Guide, Choke Lever	1	
4	<u>101856201</u>	Compression Spring	1	
5	<u>101850301</u>	Screw, #12-16 X 0.50 Washer-Head Hi-Lo	4	
6	<u>101917701</u>	Choke Positioner	1	
7	<u>103520301</u>	Duct, Air Intake, Ds	1	
8	<u>1606</u>	Rivet, 3/16 X .500 Alum Pop	2	
9	<u>183</u>	Washer, #10 Type A Flat	4	

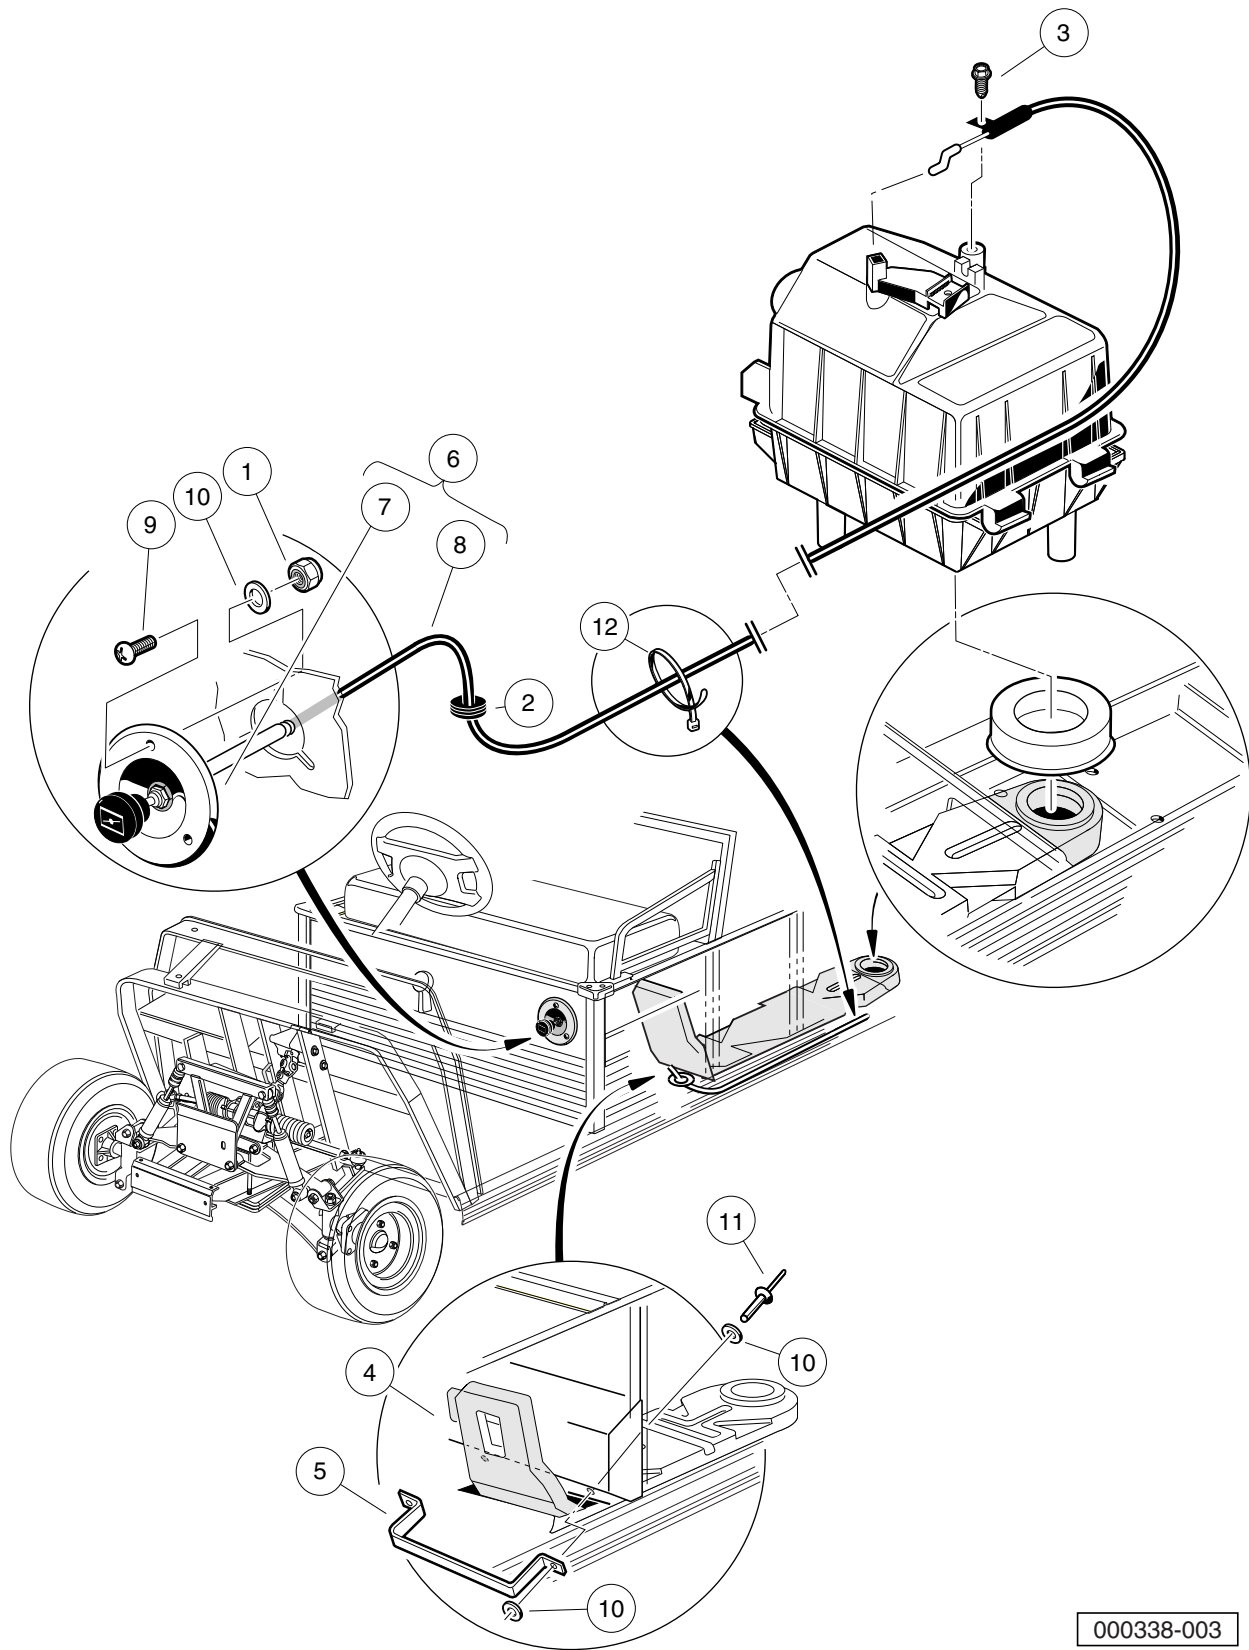

000338-003


INTAKE SYSTEM – TRANSPORTER 4 AND 6

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>1012438</u>	Locknut, #10-24 Nylon Insert	3	
2	<u>1015139</u>	Insulation Grommet	1	
3	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	1	
4	<u>101811301</u>	Duct, Intake	1	
5	<u>101825701</u>	Retaining Bracket	1	
6	<u>101926802</u>	Cable, Choke (includes items 7 and 8)	1	
7	<u>101933701</u>	Bezel, Choke Cable	1	
8	N/A	Choke Cable without Bezel, Long	1	
9	<u>1631</u>	Screw, #10-24 X 0.75 Phillips Pan-Head	3	
10	<u>183</u>	Washer, #10 Type A Flat	7	
11	<u>7973</u>	Rivet, 3/16 X .400 Blind	2	
12	<u>8639</u>	Tie Wrap, 11" Nylon	2	

 

INTAKE SYSTEM – VILLAGER 6

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>1012438</u>	Locknut, #10-24 Nylon Insert	3	
2	<u>1015139</u>	Insulation Grommet	1	
3	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	1	
4	<u>101811301</u>	Duct, Intake	1	
5	<u>101825701</u>	Retaining Bracket	1	
6	<u>101926802</u>	Cable, Choke (includes items 7 and 8)	1	
7	<u>101933701</u>	Bezel, Choke Cable	1	
8	N/A	Choke Cable without Bezel, Long	1	
9	<u>1631</u>	Screw, #10-24 X 0.75 Phillips Pan-Head	3	
10	<u>183</u>	Washer, #10 Type A Flat	7	
11	<u>7973</u>	Rivet, 3/16 X .400 Blind	2	
12	<u>8639</u>	Tie Wrap, 11" Nylon	2	

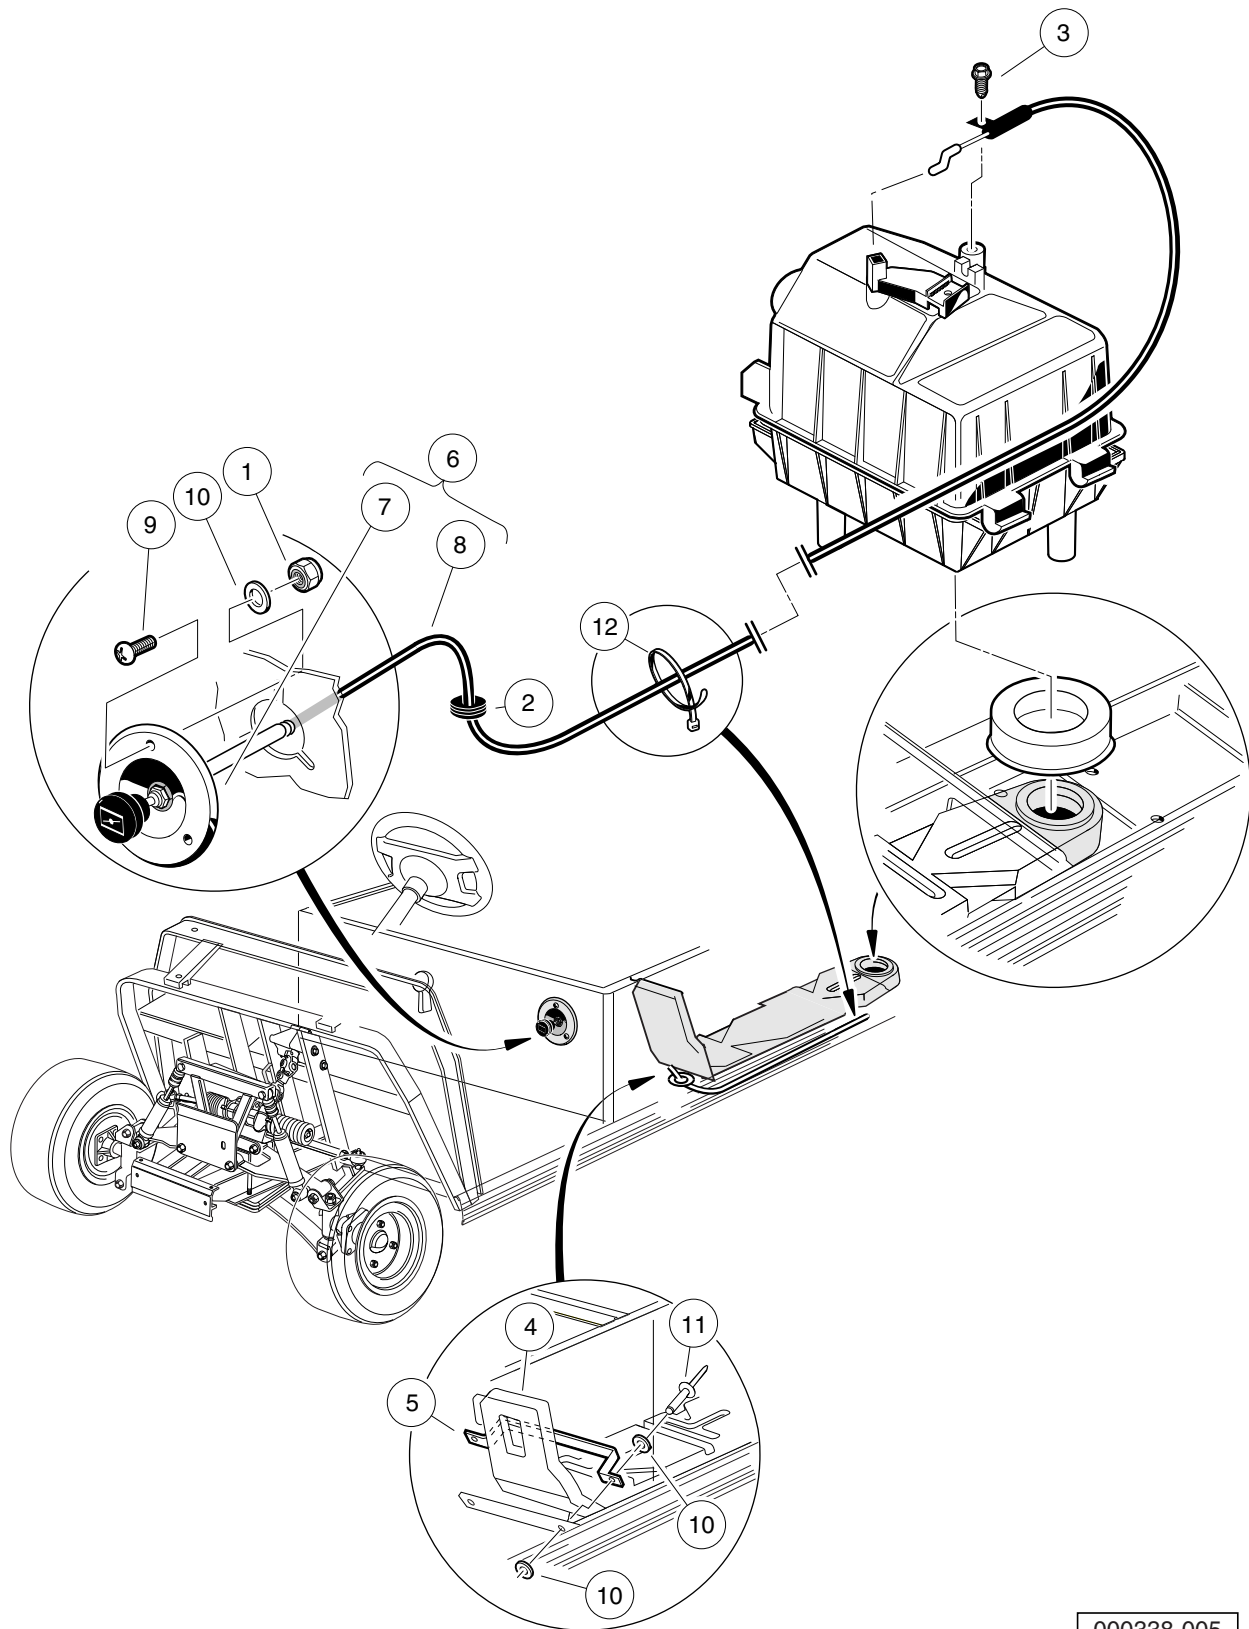

000338-005

INTAKE SYSTEM – VILLAGER 8

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>1012438</u>	Locknut, #10-24 Nylon Insert	3	
2	<u>1015139</u>	Insulation Grommet	1	
3	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	1	
4	<u>101811301</u>	Duct, Intake	1	
5	<u>101825701</u>	Retaining Bracket	1	
6	<u>101926803</u>	Cable, Choke (includes items 7 and 8)	1	
7	<u>101933701</u>	Bezel, Choke Cable	1	
8	N/A	Choke Cable without Bezel, Long	1	
9	<u>1631</u>	Screw, #10-24 X 0.75 Phillips Pan-Head	3	
10	<u>183</u>	Washer, #10 Type A Flat	7	
11	<u>7973</u>	Rivet, 3/16 X .400 Blind	2	
12	<u>8639</u>	Tie Wrap, 11" Nylon	2	


9

G

EXHAUST SYSTEM

10


G

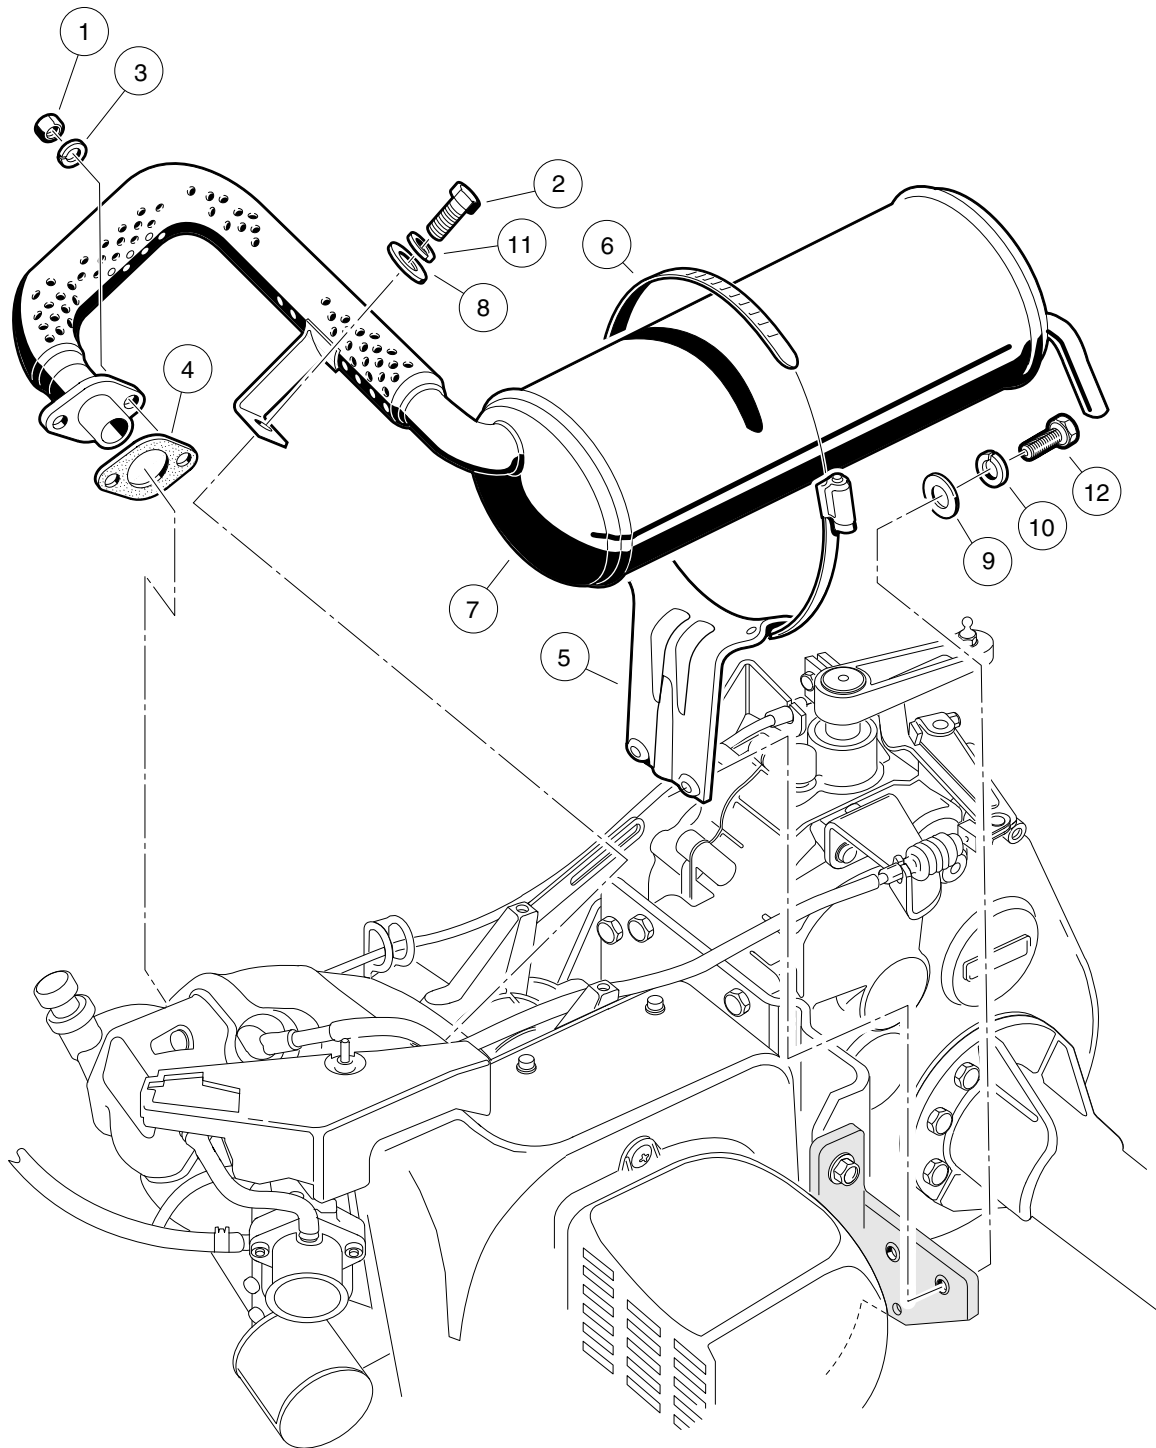

000208-001

EXHAUST SYSTEM – FE290 ENGINE

ITEM	PART NO.	DESCRIPTION	QTY	10	G
		1 2 3 4			
1	<u>1012528</u>	Nut, M8-1.25 Hex	2		
2	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	1		
3	<u>1013734</u>	Lockwasher, 8mm Split	2		
4	<u>1015330</u>	Gasket, Exhaust	1		
5	<u>1015814</u>	Bracket, Muffler Mounting	1		
6	<u>1017689</u>	Clamp, 5" Muffler Hose	1		
7	<u>101859301</u>	Exhaust System, FE290	1		
8	<u>1241</u>	Washer, 5/16 Type A Flat	1		
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2		
10	<u>451</u>	Lockwasher, 1/4 Split	2		
11	<u>7174</u>	Lockwasher, 5/16 Split	1		
12	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2		

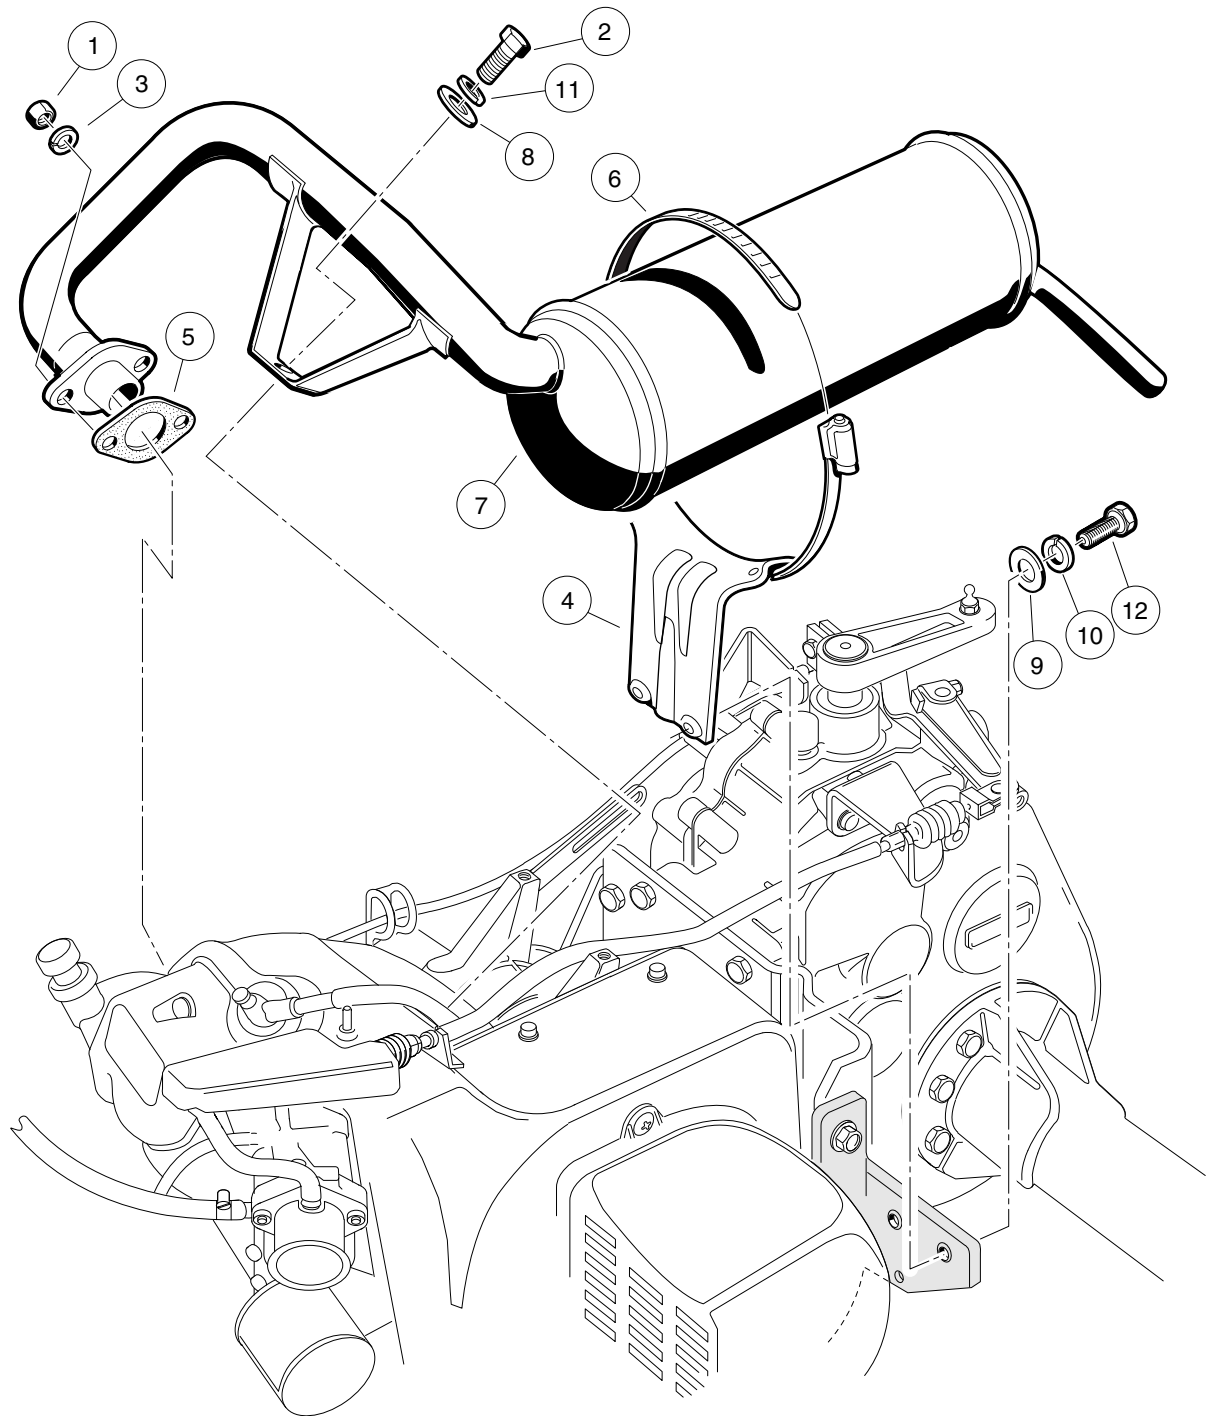

000209-001

EXHAUST SYSTEM – FE350 ENGINE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012528</u>	Nut, M8-1.25 Hex	2
2	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	1
3	<u>1013734</u>	Lockwasher, 8mm Split	2
4	<u>1015814</u>	Bracket, Muffler Mounting	1
5	<u>1016904</u>	Gasket, Exhaust	1
6	<u>1017689</u>	Clamp, 5" Muffler Hose	1
7	<u>101859401</u>	Exhaust System, FE350	1
8	<u>1241</u>	Washer, 5/16 Type A Flat	1
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
10	<u>451</u>	Lockwasher, 1/4 Split	2
11	<u>7174</u>	Lockwasher, 5/16 Split	1
12	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2

10
G


10

G

TORQUE CONVERTER

11

G

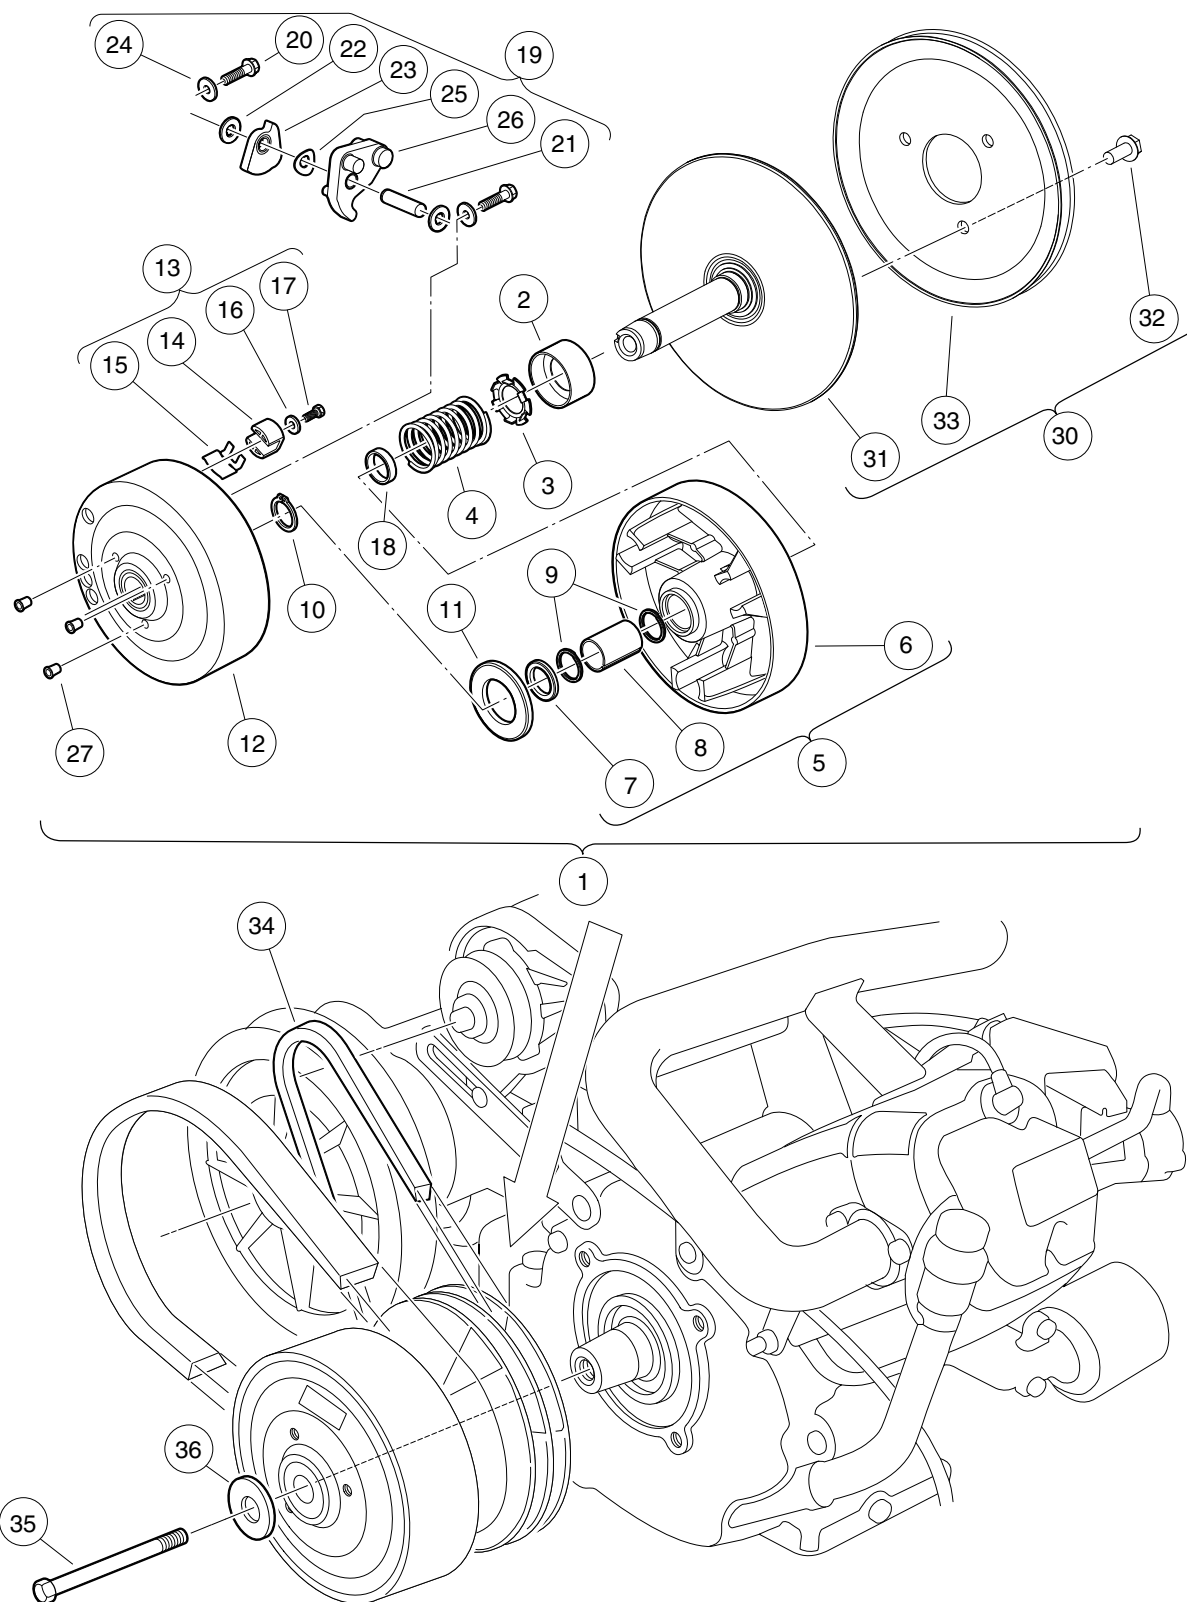


000217-001

DRIVE CLUTCH – DS VILLAGER 4

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101833902</u>	Clutch, Drive (includes items 2 through 28)	1
2	<u>1014049</u>	Bearing, Idler	1
3	<u>1014050</u>	Retainer, Spring	1
4	<u>1014051</u>	Spring, Drive Clutch	1
5	<u>1014052</u>	Movable-Face Assembly (includes items 6 through 8)	1
6	N/A	Drive Clutch Movable Face	1
7	<u>1014055</u>	Retainer	1
8	N/A	Bushing, Split, Drive Clutch	1
9	<u>1014056</u>	Ring, Spiral Backup	2
10	<u>1014057</u>	Ring, 0.810" Internal Retaining	1
11	<u>1014058</u>	Thrust Washer	1
12	<u>1014059</u>	Drive Hub Assy, Drive Clutch	1
13	<u>1014453</u>	Kit, Drive Clutch Button (includes items 14 through 17)	1
14	<u>1014062</u>	Driver, Drive Clutch	3
15	<u>1014287</u>	Spring, Drive Button	3
16	<u>183</u>	Washer, #10 Type A Flat	3
17	<u>8450</u>	Screw, #10-24 X 0.50 Hex-Head	3
18	<u>1016289</u>	Spacer, Fixed Face Shaft	1
19	<u>1016801</u>	Kit, Drive Clutch Weight (includes items 20 through 26)	1
20	<u>1014063</u>	Screw, 1/4-20 X 1.00 Hex Head	6
21	N/A	Pin, 0.3752 X 1.50 Dowel	3
22	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	6
23	N/A	Clutch Weight, Secondary	3
24	N/A	Washer	6
25	<u>1016201</u>	Washer, Wave	3
26	N/A	Weight, Primary	3
27	<u>101925601</u>	Plug, Drive Clutch	3
28	<u>101929802</u>	Kit, Fxd Face Dr Asm Fe290/350 (includes items 29 and 30)	1
29	N/A	Desiccant Bag (Not Shown)	1
30	<u>101929801</u>	Assembly, Fixed-Face Drive (includes items 31 through 33)	1
31	N/A	Fixed Face Assembly, Drive Clutch	1
32	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	3
33	N/A	Pulley, Clutch	1
34	<u>101916701</u>	V-Belt	1
35	<u>103345701</u>	Screw 3/8-24x5.5 Hex Loc Ptch	1
36	<u>808</u>	Washer, 3/8 Type B Flat	1
		Note: Item 29 not shown.	

11

G

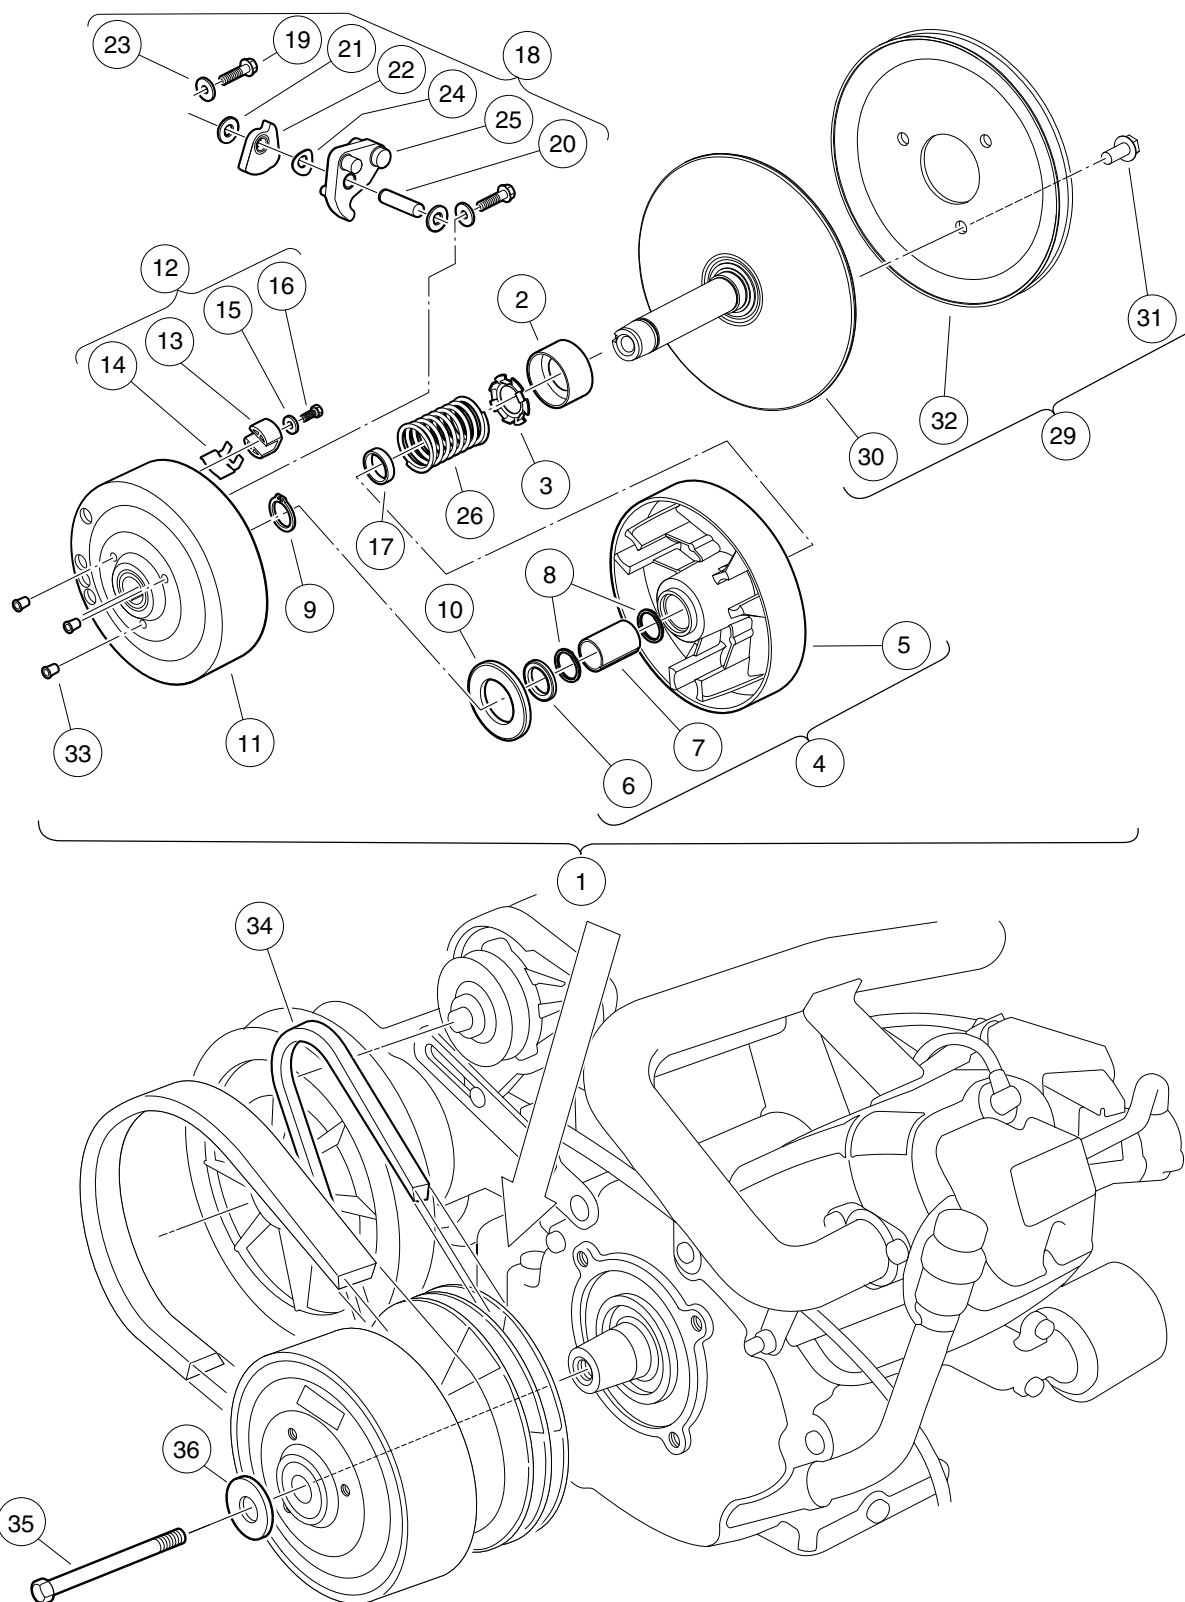

000217-002


DRIVE CLUTCH – VILLAGER 6 AND 8, AND TRANSPORTER 4 AND

6

11

G


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101833904</u>	Assembly, Drive Clutch (includes items 2 through 33)	1
2	<u>1014049</u>	Bearing, Idler	1
3	<u>1014050</u>	Retainer, Spring	1
4	<u>1014052</u>	Movable-Face Assembly (includes items 5 through 7)	1
5	N/A	Drive Clutch Movable Face	1
6	<u>1014055</u>	Retainer	1
7	N/A	Bushing, Split, Drive Clutch	1
8	<u>1014056</u>	Ring, Spiral Backup	2
9	<u>1014057</u>	Ring, 0.810" Internal Retaining	1
10	<u>1014058</u>	Thrust Washer	1
11	<u>1014059</u>	Drive Hub Assy, Drive Clutch	1
12	<u>1014453</u>	Kit, Drive Clutch Button (includes items 13 through 16)	1
13	<u>1014062</u>	Driver, Drive Clutch	3
14	<u>1014287</u>	Spring, Drive Button	3
15	<u>183</u>	Washer, #10 Type A Flat	3
16	<u>8450</u>	Screw, #10-24 X 0.50 Hex-Head	3
17	<u>1016289</u>	Spacer, Fixed Face Shaft	1
18	<u>1016801</u>	Kit, Drive Clutch Weight (includes items 19 through 25)	1
19	<u>1014063</u>	Screw, 1/4-20 X 1.00 Hex Head	6
20	N/A	Pin, 0.3752 X 1.50 Dowel	3
21	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	6
22	N/A	Clutch Weight, Secondary	3
23	N/A	Washer	6
24	<u>1016201</u>	Washer, Wave	3
25	N/A	Weight, Primary	3
26	<u>1016901</u>	Spring, Drive Clutch	1
27	<u>101738302</u>	Kit, Fixed Face - Drive (includes items 28 and 29)	1
28	N/A	Desiccant Bag (Not Shown)	1
29	<u>101738301</u>	Fixed Face Drive (includes items 30 through 32)	1
30	N/A	Fixed Face Assembly, Drive Clutch	1
31	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	3
32	<u>1016011</u>	Pulley, Drive Clutch	1
33	N/A	Cap Plug	3
34	<u>101916701</u>	V-Belt	1
35	<u>103345701</u>	Screw 3/8-24x5.5 Hex Loc Ptch	1
36	<u>808</u>	Washer, 3/8 Type B Flat	1
		Note: Item 28 not shown.	

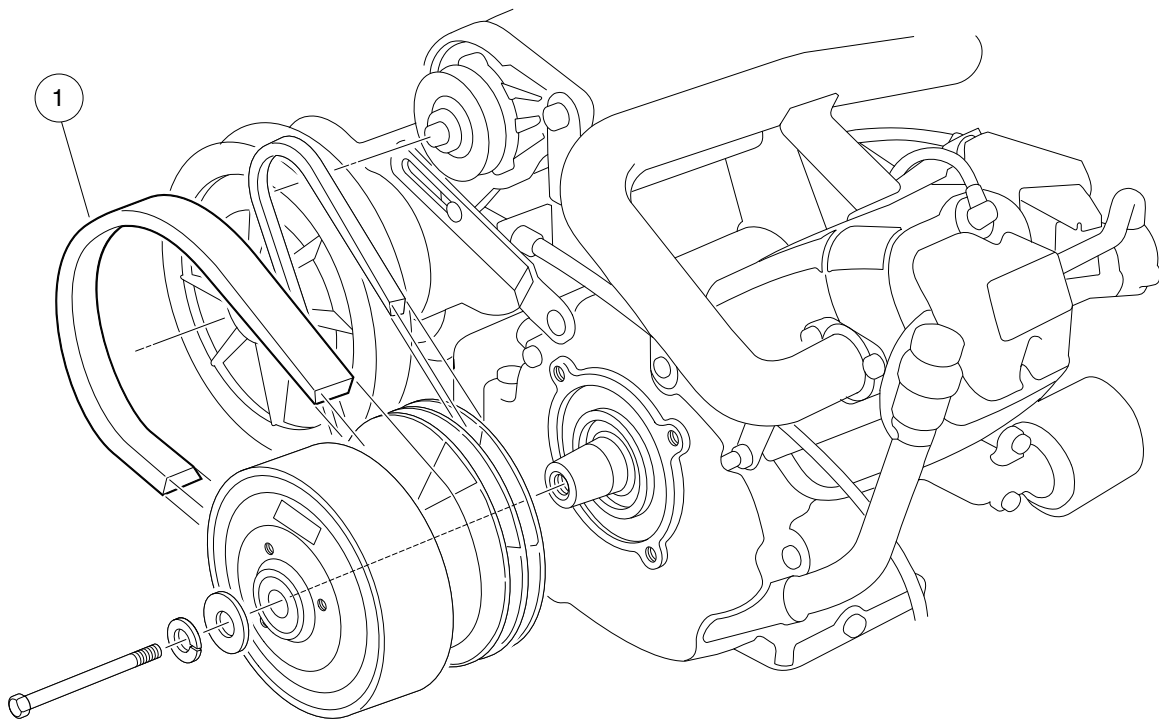

000218-001

DRIVE BELT – DS VILLAGER 4

ITEM	PART NO.	DESCRIPTION	QTY	11 G
1	<u>1016203</u>	1 2 3 4 Belt, Drive	1	

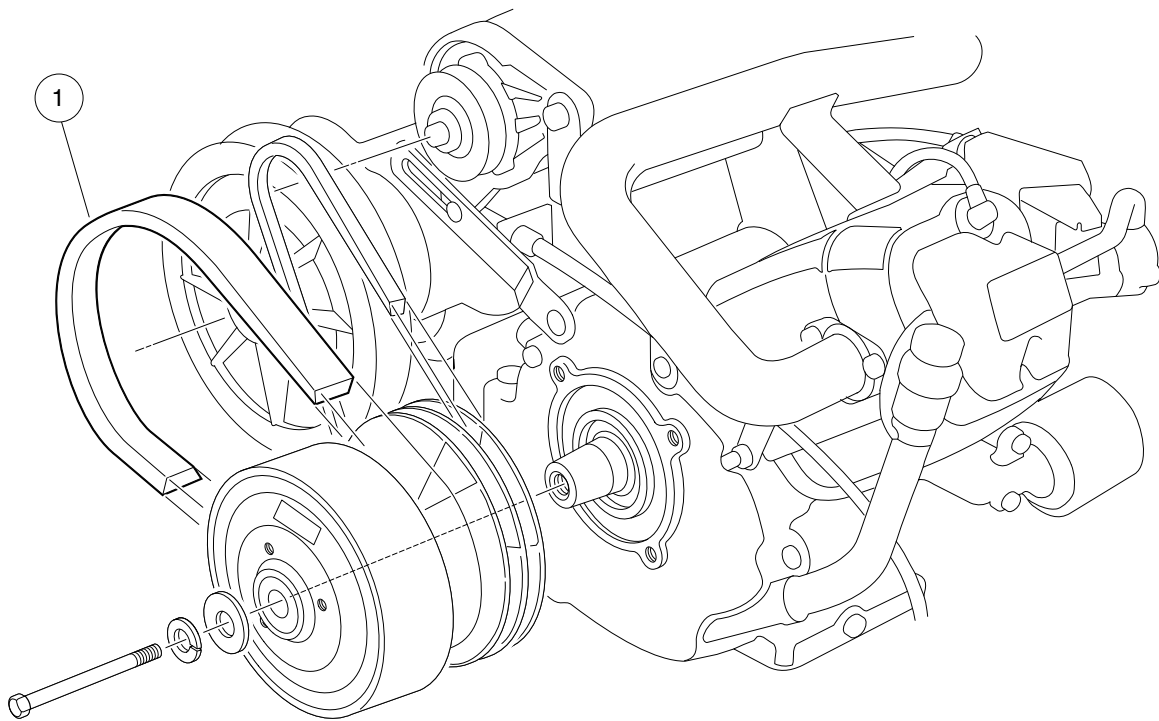


000218-001

DRIVE BELT – VILLAGER 6 AND 8, AND TRANSPORTER 4 AND 6

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>1017188</u>	1 2 3 4 Belt, Drive (FE350)	1

11

G

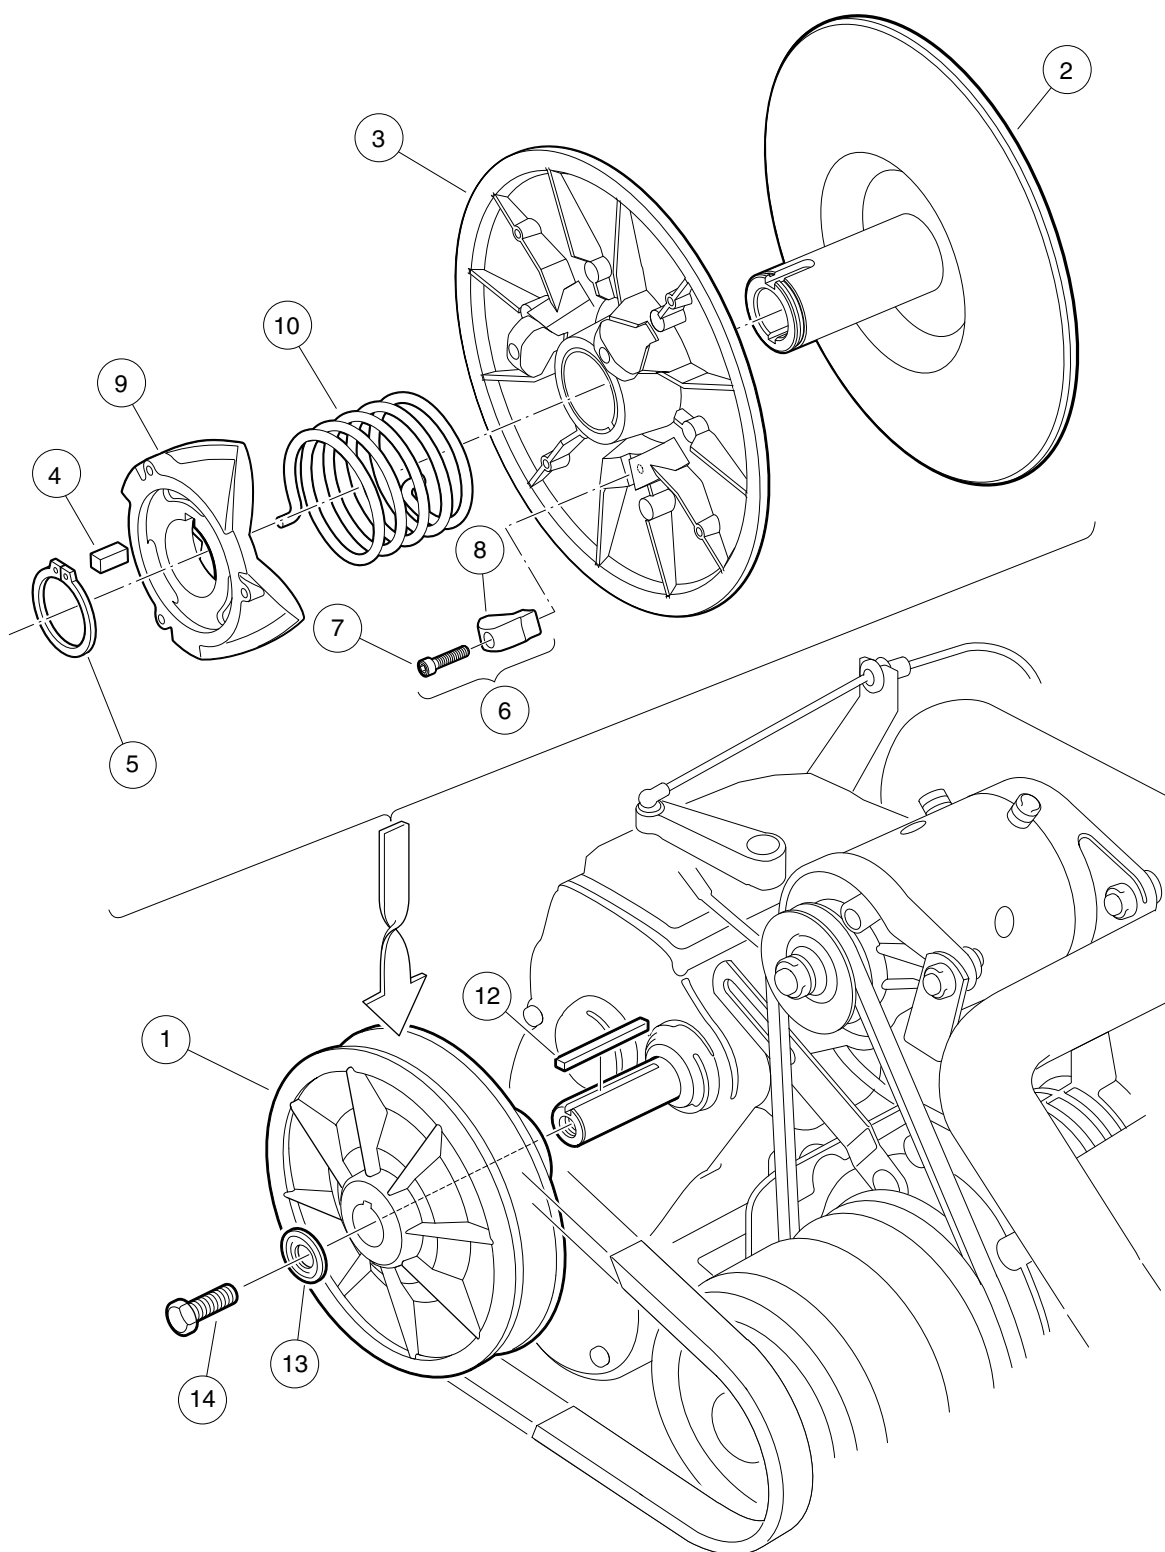

000219-001

DRIVEN CLUTCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101834001</u>	Assembly, Driven Clutch (includes items 2 through 10)	1
2	<u>1014070</u>	Fixed Face Assy, Driven Clutch	1
3	<u>1014072</u>	Movable-Face Assembly with Bushing	1
4	<u>1014078</u>	Key, Driven Clutch	1
5	<u>1014080</u>	Ring, Retaining	1
6	<u>1014454</u>	Kit, Driven Clutch Button (includes items 7 and 8)	1
7	<u>1012836</u>	Screw, #8-32 X 3/4 Socket-Head Cap	3
8	<u>1014076</u>	Button, Drive	3
9	<u>1017686</u>	Cam, Driven Clutch	1
10	<u>101836201</u>	Spring, Driven Clutch, Reversed	1
11	<u>AM10419</u>	Kit, Clutch Repair (includes items 12 through 14)	1
12	<u>101833401</u>	Key, 3/16 Sq X 1.50"	1
13	<u>102155801</u>	Washer, Driven Clutch	1
14	<u>102242101</u>	Screw, 5/16-18 X 3/4 Hex-Head with Patch	1


11

G

UNITIZED TRANSAXLE

12

G

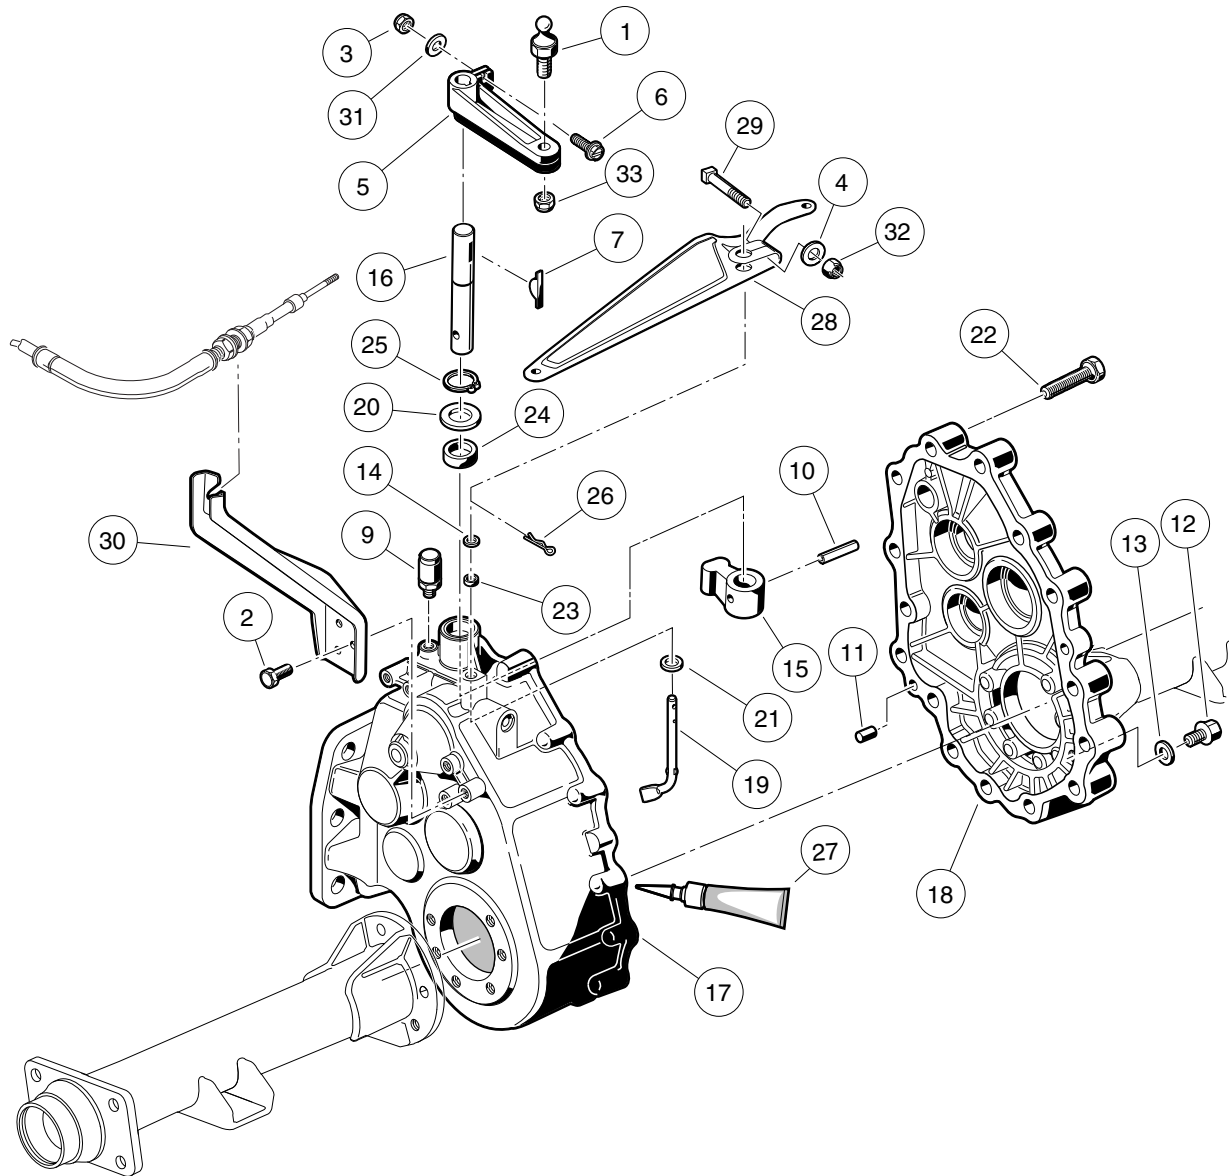


000220-001

TRANSAXLE – GASOLINE VEHICLES, GEAR CASES AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010954</u>	Stud, 1/4-28 X 0.560 Ball	1
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3
3	<u>1013061</u>	Locknut, #10-32 Nylon Insert	1
4	<u>1014007</u>	Washer, 1/4 Flat	1
5	<u>1016341</u>	Lever, Transmission Shift	1
6	<u>1017082</u>	Screw, #10-32 X 0.75, Hex-Head Machine	1
7	<u>1017231</u>	Key, Woodruff	1
8	<u>101833601</u>	Transaxle, 11.77 Ratio (includes items 9 through 27)	1
9	<u>1012711</u>	Breather	1
10	<u>1012752</u>	Roll Pin	1
11	<u>1012896</u>	Pin, Dowel	2
12	<u>1013760</u>	Fill Plug	2
13	<u>1016432</u>	Gasket, Drain Plug	1
14	<u>1016513</u>	Washer, M6 Flat	1
15	<u>101890101</u>	Lever, Change	1
16	<u>101890201</u>	Shaft - Change	1
17	<u>101890501</u>	Gear Case (driver side)	1
18	<u>101890601</u>	Gear Case (passenger side)	1
19	<u>101891301</u>	Arm Pivot	1
20	<u>101892901</u>	Washer	1
21	<u>101893801</u>	Washer	1
22	<u>101926901</u>	Screw, M8-1.25 X 40mm Hex-Head	15
23	<u>101927101</u>	Seal, Oil	1
24	<u>101927201</u>	Seal, Oil	1
25	<u>101927301</u>	Snap Ring	1
26	<u>101928601</u>	Pin, Cotter	1
27	<u>101928701</u>	Liquid Gasket (Transaxle case)	1
28	<u>101834801</u>	Arm, Governor	1
29	<u>101886101</u>	Screw, 1/4-20 X 1.00 Square-Head	1
30	<u>102045901</u>	Bracket, Shifter	1
31	<u>183</u>	Washer, #10 Type A Flat	1
32	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	1
33	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1

12
G

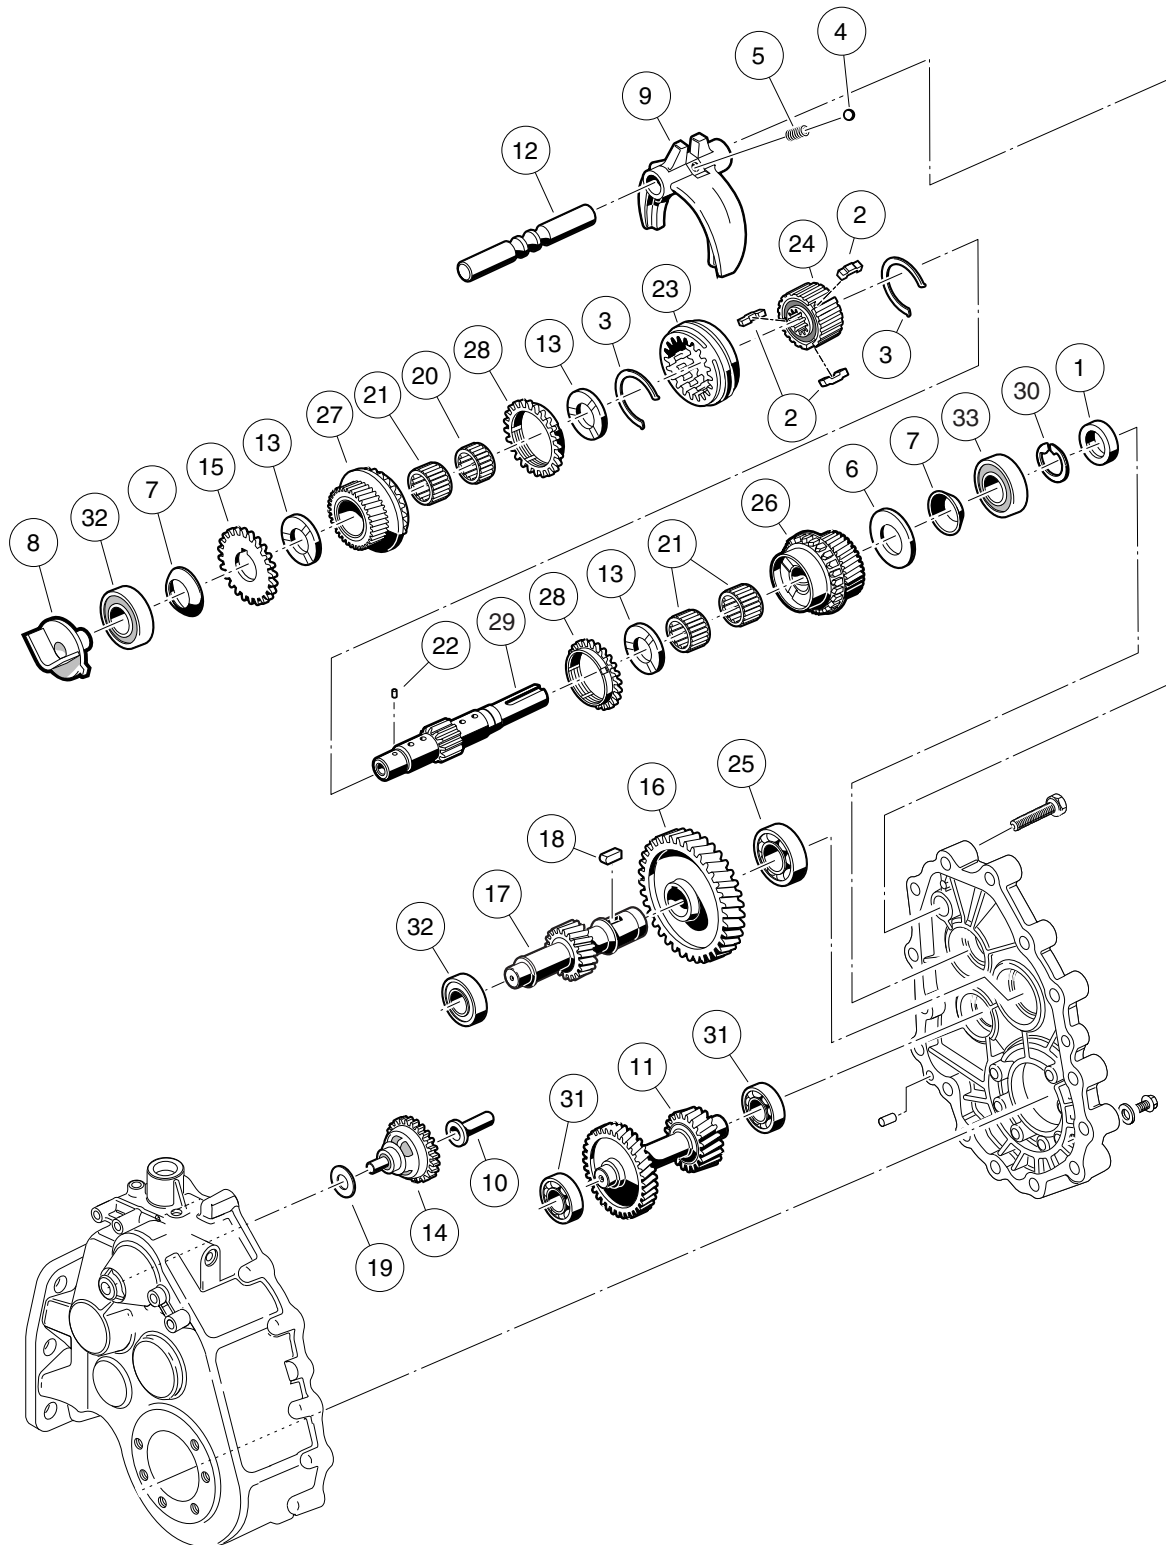

000221-001

TRANSAXLE – GASOLINE VEHICLES, TRANSMISSION AND GEAR REDUCTION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012714</u>	Oil Seal	1
2	<u>1012740</u>	Synchro Insert	3
3	<u>1012741</u>	Synchro Spring	2
4	<u>1012747</u>	Shifter Ball	1
5	<u>1012748</u>	Shifter Spring	1
6	<u>1016337</u>	Washer, Thrust	1
7	<u>1016338</u>	Washer, Spring	2
8	<u>101889401</u>	Guide	1
9	<u>101890001</u>	Fork - Shift	1
10	<u>101891601</u>	Sleeve, Governor	1
11	<u>101891901</u>	Gear, Cluster	1
12	<u>101892001</u>	Rod, Shift	1
13	<u>101892201</u>	Plate, Thrust	3
14	<u>101892301</u>	Governor Assembly	1
15	<u>101892401</u>	Gear, Spur	1
16	<u>101892501</u>	Gear, Helical (61 Tooth)	1
17	<u>101892601</u>	Gear, Helical (17 Tooth)	1
18	<u>101893201</u>	Key Sunk	1
19	<u>101893901</u>	Washer	1
20	<u>101927501</u>	Needle Bearing	1
21	<u>101927601</u>	Needle Bearing	3
22	<u>101927701</u>	Pin, .116" Dia X 0.264 Dowel	1
23	<u>101927901</u>	Sleeve, Synchro	1
24	<u>101928001</u>	Hub, Synchro Clutch	1
25	<u>101928101</u>	Bearing, Ball	1
26	<u>101980801</u>	Gear Assembly, 16-Degree Synchro (25 Tooth)	1
27	<u>101980901</u>	Gear Assembly, 16-Degree Rear Synchro (28 Tooth)	1
28	<u>101981001</u>	Ring, 16-Degree Synchronizer	2
29	<u>102453001</u>	Shaft, Trans, with Circlip	1
30	<u>102453101</u>	Circlip	1
31	<u>7335</u>	Bearing	2
32	<u>AM10080</u>	Bearing, Ball, Sealed	2
33	<u>AM10081</u>	Bearing, Ball, Sealed	1
Note: Items listed on this page are components of the unitized transaxle.			


12
G

TRANSAXLE – GASOLINE VEHICLES, DIFFERENTIAL AND AXLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013770</u>	Differential Idler Gear	2
2	<u>1013771</u>	Gear, Differential	2
3	<u>1013772</u>	Pin, Differential	1
4	<u>1013794</u>	Axle Shaft Oil Seal	2
5	<u>1014193</u>	Dowel Pin	1
6	<u>101890901</u>	Pipe	1
7	<u>101891001</u>	Pipe	1
8	<u>101891401</u>	Axle Assembly, Passenger Side (includes items 9 through 13)	1
9	<u>1011291</u>	Outer Axle, Tube Bearing	1
10	<u>1013787</u>	Lug Stud	4
11	<u>1013792</u>	Circlip Type C	1
12	<u>1014207</u>	Bushing	1
13	<u>1016672</u>	Retaining Ring	1
14	<u>101891501</u>	Axle Assembly, Driver-Side (includes items 15 through 19)	1
15	<u>1011291</u>	Outer Axle, Tube Bearing	1
16	<u>1013787</u>	Lug Stud	4
17	<u>1013792</u>	Circlip Type C	1
18	<u>1014207</u>	Bushing	1
19	<u>1016672</u>	Retaining Ring	1
20	<u>101892701</u>	Gear, Helical	1
21	<u>101910501</u>	Kit, Differential Gear Case (includes items 22 through 25)	1
22	<u>1013768</u>	Differential Gear Case, Left-Hand	1
23	<u>1013769</u>	Differential Gear Case, Right-Hand	1
24	<u>1013773</u>	Plate, Thrust (Differential Gear)	1
25	<u>1013774</u>	Plate, Thrust (Idler Gear)	2
26	<u>101928301</u>	Screw, M8-1.25 X 35mm Hex Head	8
27	<u>102031901</u>	Bolt, M10 X 1.5 X 30mm	14
28	<u>7330</u>	Inner Axle Tube Bearing	2

12

G

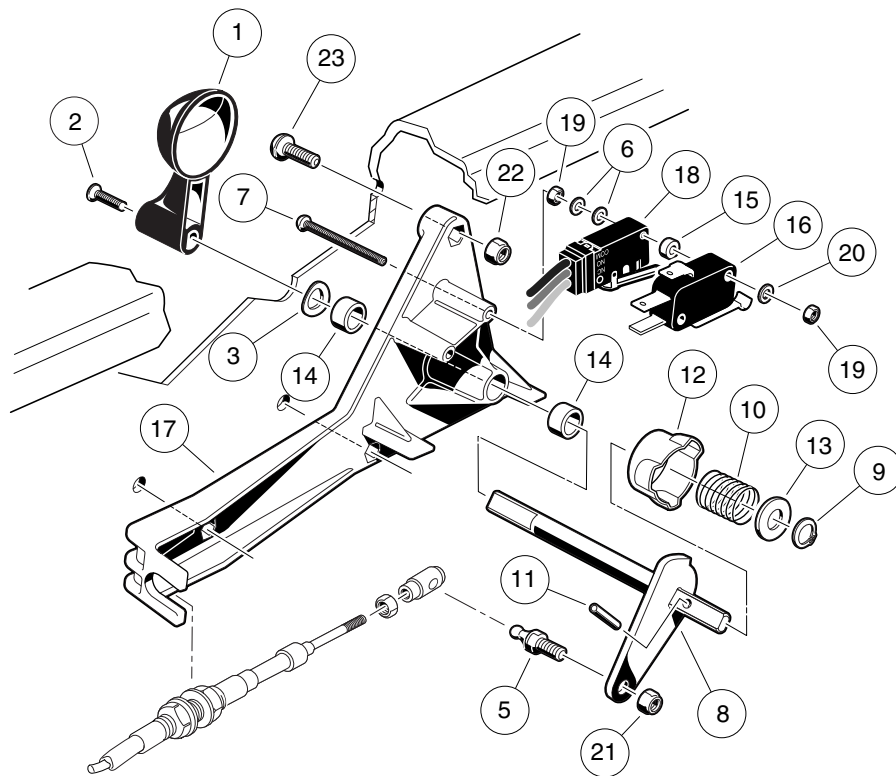


000236-001

FORWARD/REVERSE SHIFTER ASSEMBLY – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012987</u>	Handle, FNR	1
2	<u>1015064</u>	Screw, #8-32 X 0.63 Machine	1
3	<u>1016201</u>	Washer, Wave	1
4	<u>1016947</u>	Assembly, FNR Shifter (includes items 5 through 21)	1
5	<u>1010954</u>	Stud, 1/4-28 X 0.560 Ball	1
6	<u>1012431</u>	Washer, #4 Flat	4
7	<u>1012594</u>	Screw, #4-40 Machine	2
8	<u>1013587</u>	FNR Bell Crank Weldment	1
9	<u>1013589</u>	Ring, 0.338" Internal Retaining	1
10	<u>1013590</u>	Spring, FNR Cam	1
11	<u>1013591</u>	Pin, 1/8 X 1/2 Roll	1
12	<u>1014089</u>	Neutral Lockout Cam Kit (includes item 13)	1
13	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	1
14	<u>1014145</u>	Bushing, Secondary Weight, Split	2
15	<u>1014727</u>	Washer, #4 Nylon Flat	2
16	<u>1014807</u>	Switch, Limit	1
17	<u>1016342</u>	FNR Shifter Base	1
18	<u>101979101</u>	Assembly, Switch, Limit	1
19	<u>8057</u>	Nut, #4-40 Hex Machine	4
20	<u>8058</u>	Lockwasher, #4 Split	2
21	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1
22	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
23	<u>8248</u>	Screw, 1/4-20 X 0.75 Truss-Head Machine	4

12

G

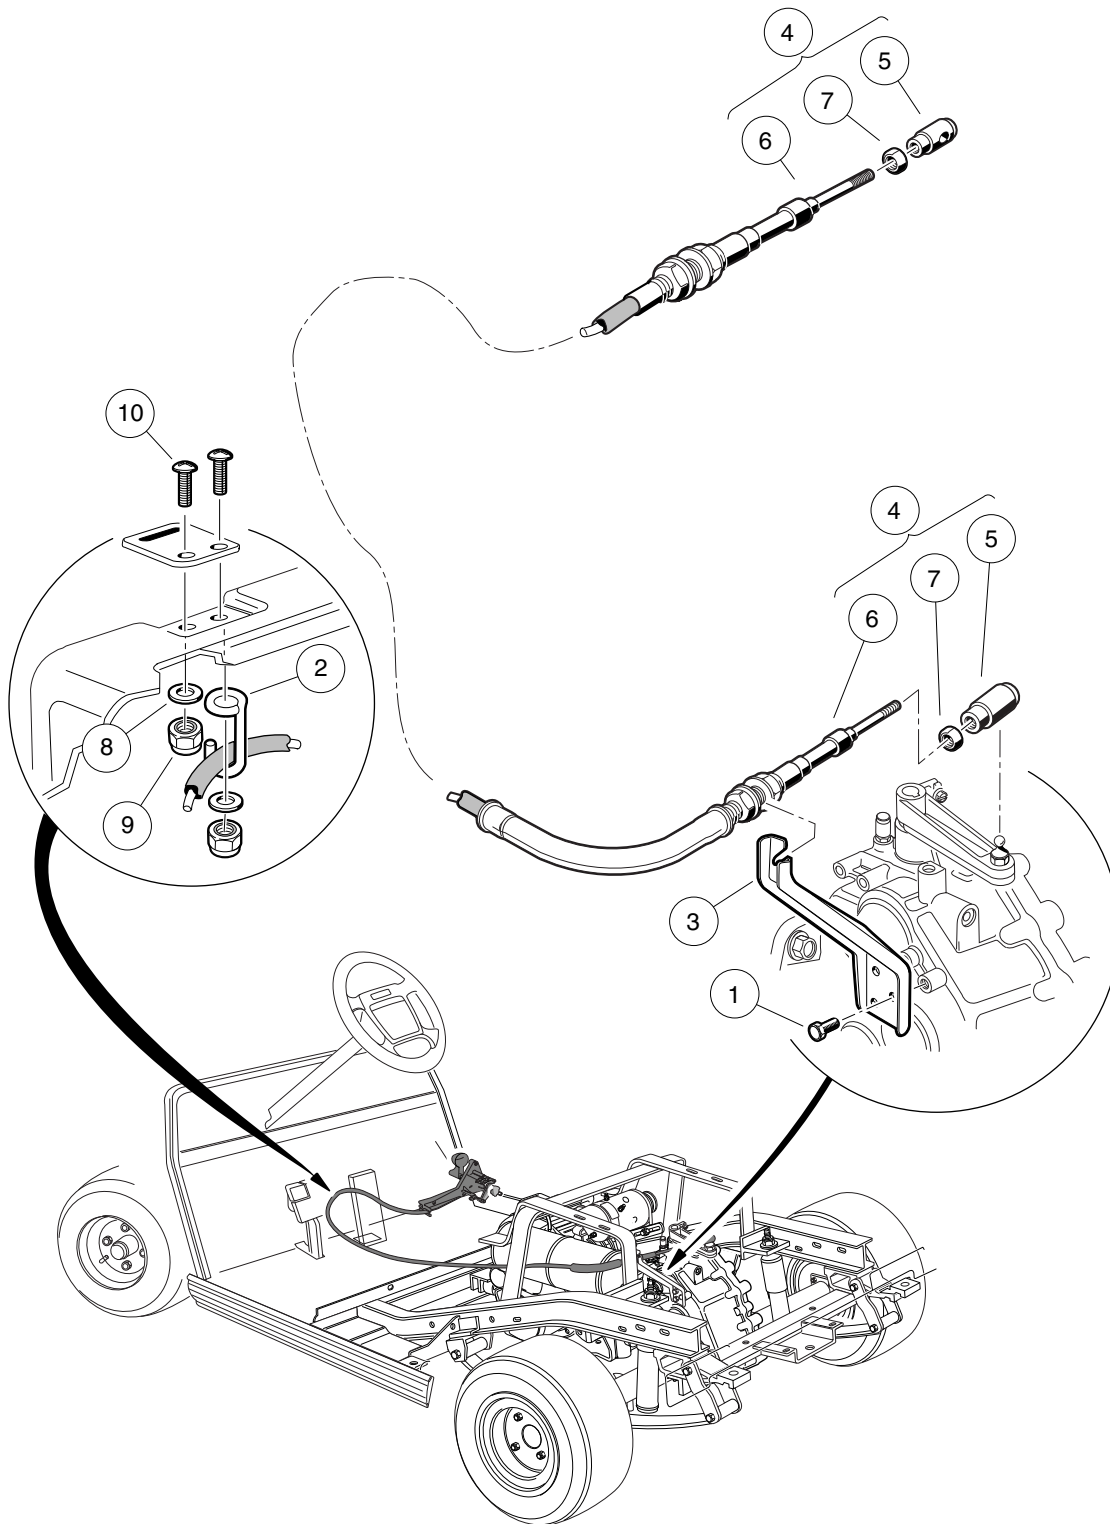


000248-001

FORWARD/REVERSE SHIFTER CABLE – DS VILLAGER 4 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3
2	<u>101855801</u>	Cable Retainer	1
3	<u>101922601</u>	Bracket, Shifter	1
4	<u>101951501</u>	FNR Shifter Cable (includes items 5 through 7)	1
5	<u>1012333</u>	Joint, #10-32 Ball	2
6	<u>103379501</u>	Cable, Transmission Shifter Ds	1
7	<u>7893</u>	Nut, #10-32 Hex	2
8	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4
9	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
10	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	4

12

G

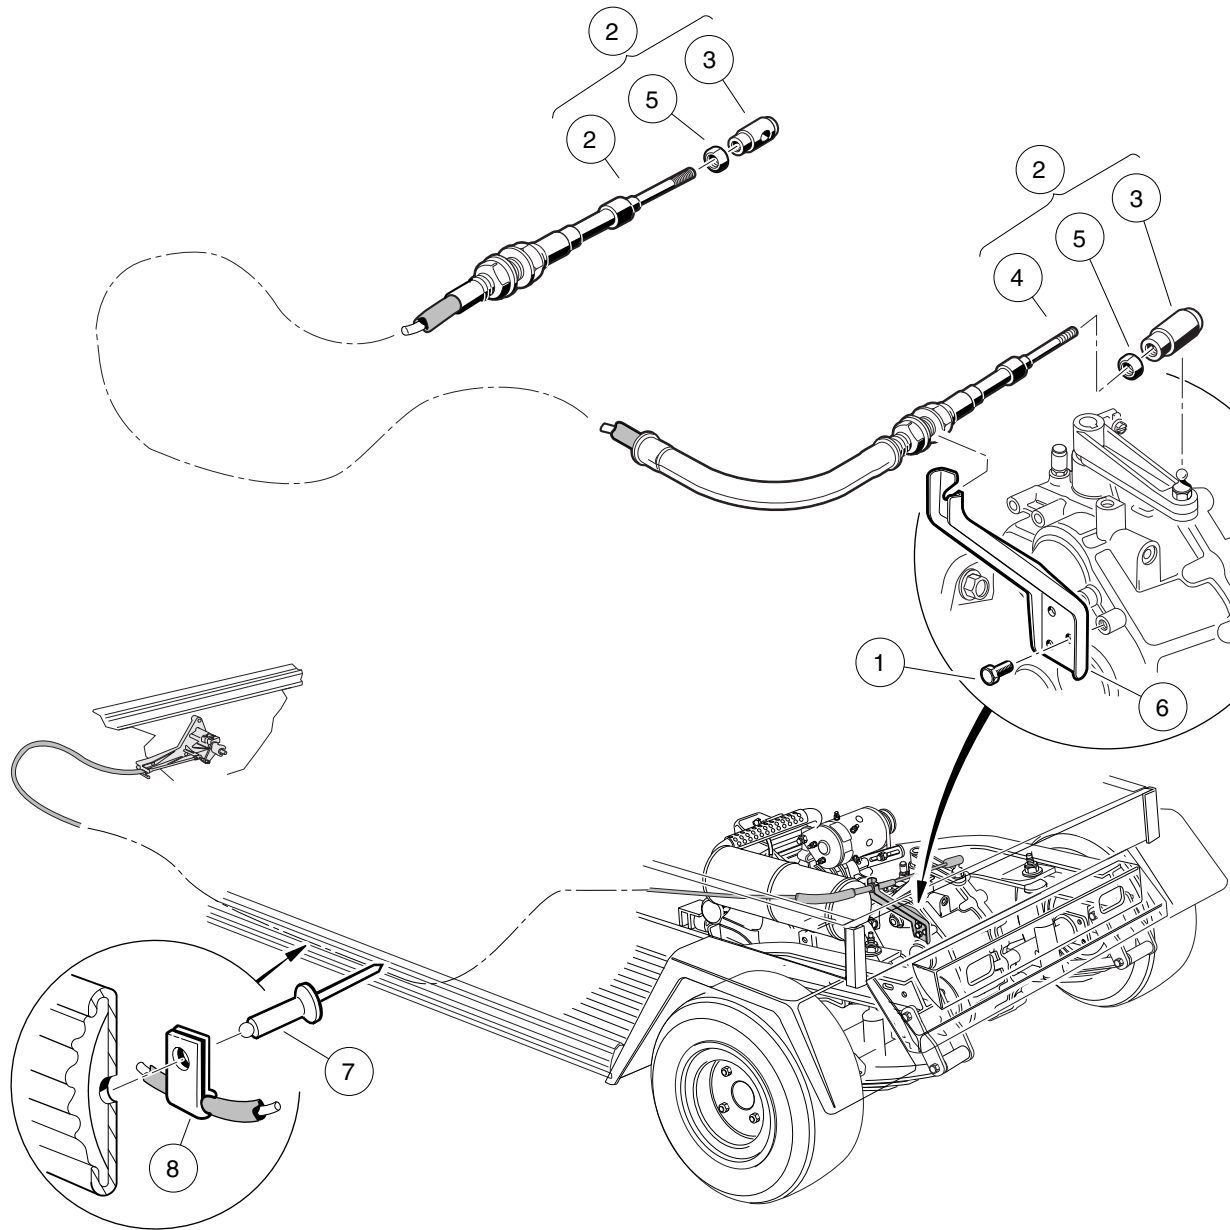


000248-004

FORWARD/REVERSE SHIFTER CABLE – VILLAGER 6 AND TRANSPORTER 4 AND 6 VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3
2	<u>101672701</u>	Cable, FNR Shifter (includes items 3 through 5)	1
3	<u>1012333</u>	Joint, #10-32 Ball	2
4	101539802	Cable, Transmission Shifter	1
5	<u>7893</u>	Nut, #10-32 Hex	2
6	<u>102045901</u>	Bracket, Shifter	1
7	<u>7973</u>	Rivet, 3/16 X .400 Blind	1
8	8455	Wire Harness Clamp	1

12

G

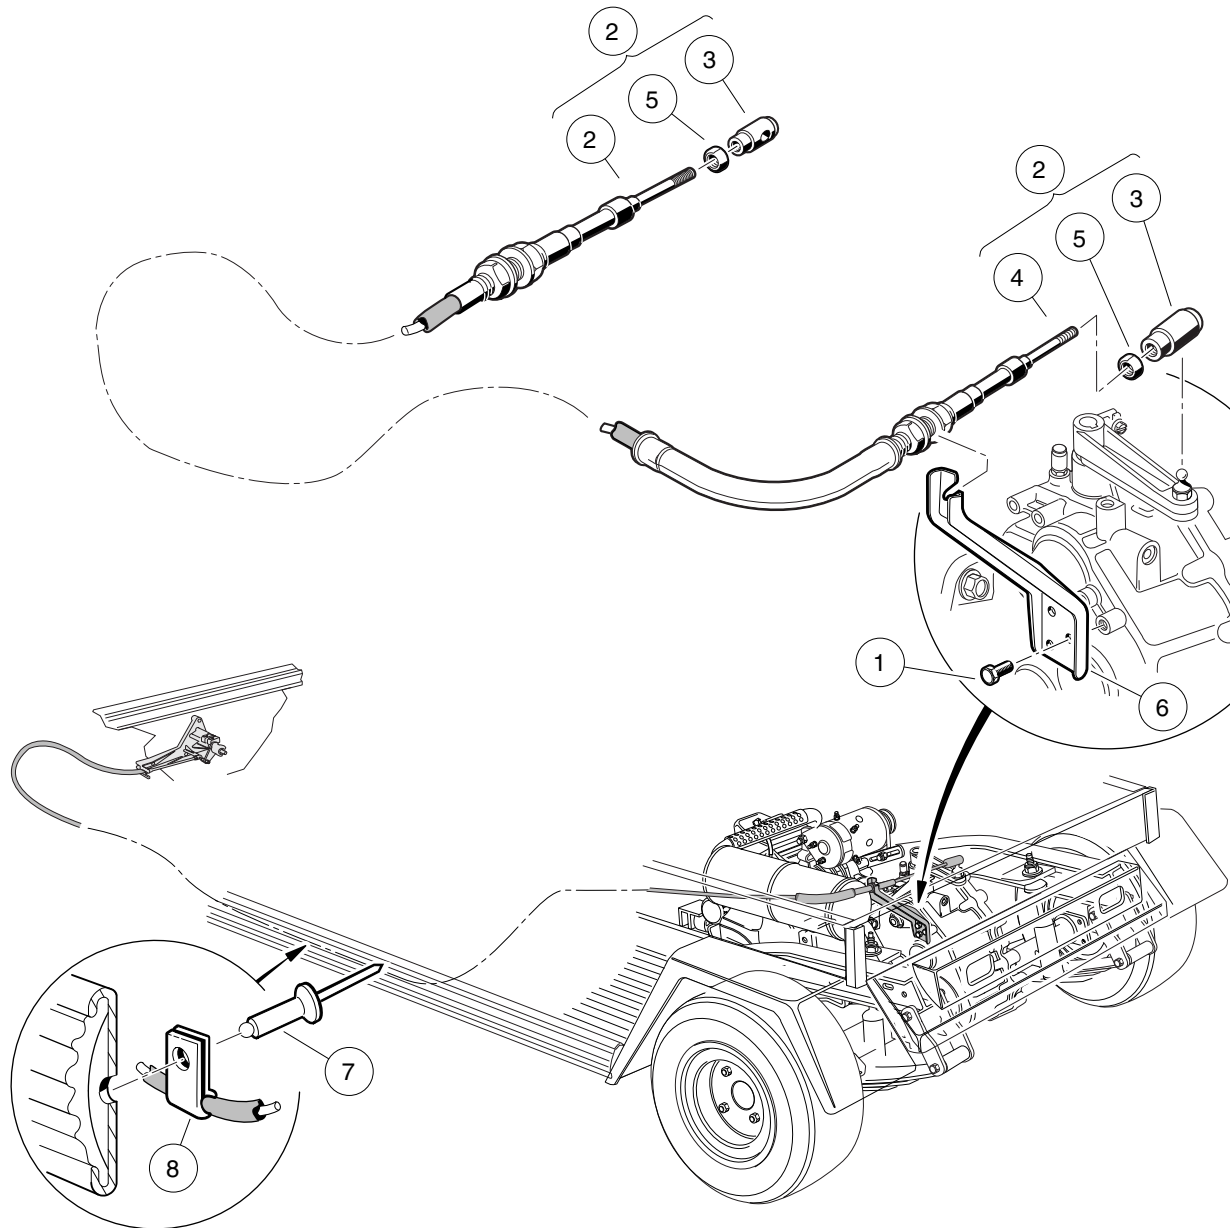

000248-004

FORWARD/REVERSE SHIFTER CABLE – VILLAGER 8

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3
2	<u>101672702</u>	Transmission Shifter Cable Asm (includes items 3 through 5)	1
3	<u>1012333</u>	Joint, #10-32 Ball	2
4	<u>101539803</u>	Cable, Transmission Shifter	1
5	<u>7893</u>	Nut, #10-32 Hex	2
6	<u>102045901</u>	Bracket, Shifter	1
7	<u>7973</u>	Rivet, 3/16 X .400 Blind	1
8	<u>8455</u>	Wire Harness Clamp	1

12
G

 
12


G

ELECTRICAL SYSTEM – ELECTRIC VEHICLES

13

E



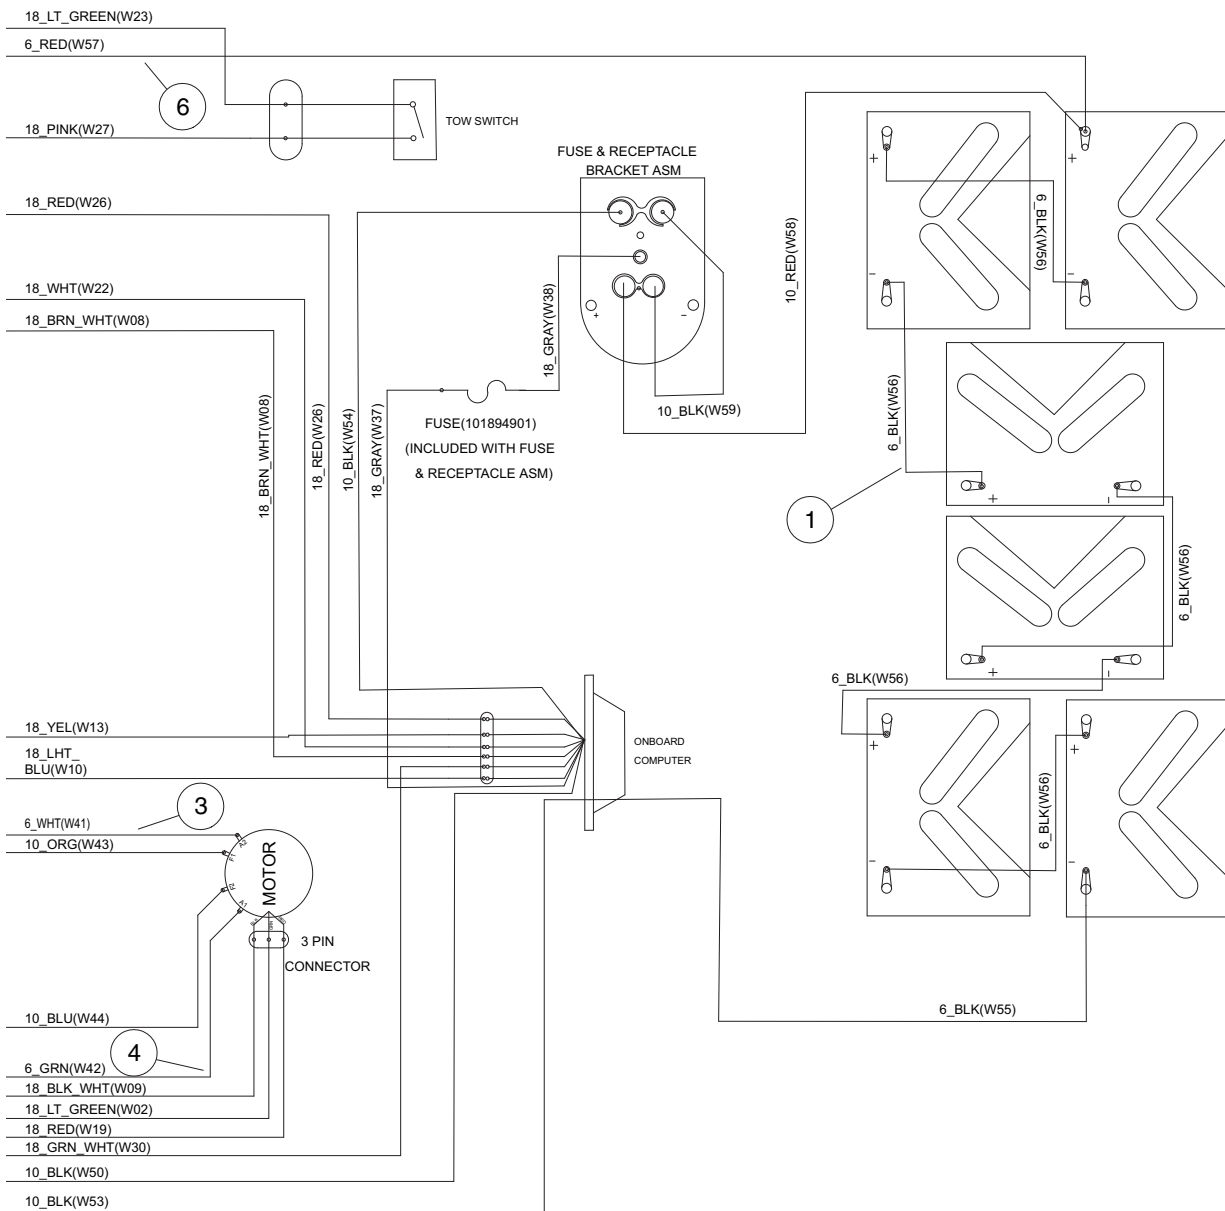

000367-001


See previous two pages for illustration.

WIRING – DS VILLAGER 4 IQ SYSTEM VEHICLE WITH SIX 8-VOLT BATTERIES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101795701	Asm, Wire, #6blk 13in	5
2	101903001	Wire Assembly #6 Yellow	1
3	101968701	Wire Assy, #6 White	1
4	101978001	Wire Assy, #6 Green	1
5	102196601	Wire Harness	1
6	102199601	Wire Assy, #6 Red	1
		Note: Item 5 contains wires in main harness that are not 6-gauge.	

13

E

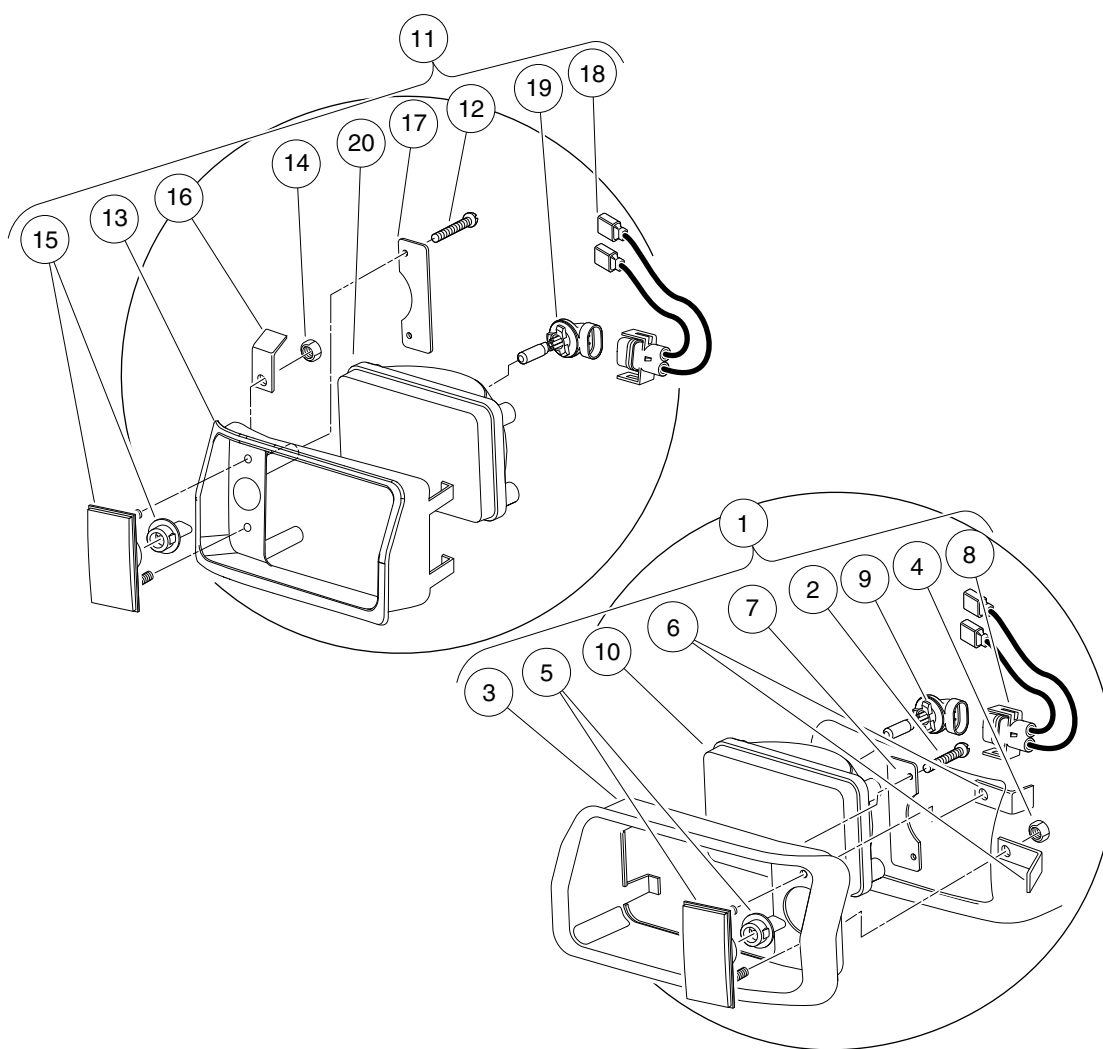


000073-001


HEADLIGHTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101988001</u>	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	1
2	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2
3	<u>1016880</u>	Headlight Bezel, Left	1
4	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
5	<u>1017062</u>	Turn Signal Lens Assy	1
6	<u>1017064</u>	Mounting Bracket	2
7	<u>1017065</u>	Retainer, Headlight	1
8	<u>101987901</u>	Connector Harness Assembly, Headlight	1
9	<u>101988101</u>	Bulb, Headlight	1
10	<u>101988201</u>	Lens, Headlight	1
11	<u>101988002</u>	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	1
12	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2
13	<u>1016879</u>	Headlight Bezel, Right	1
14	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
15	<u>1017062</u>	Turn Signal Lens Assy	1
16	<u>1017064</u>	Mounting Bracket	2
17	<u>1017065</u>	Retainer, Headlight	1
18	<u>101987901</u>	Connector Harness Assembly, Headlight	1
19	<u>101988101</u>	Bulb, Headlight	1
20	<u>101988201</u>	Lens, Headlight	1

13

  E






See previous two pages for illustration.

WIRING – POWERDRIVE ELECTRIC VILLAGER 6 AND TRANSPORTER 4 AND 6


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016729</u>	Wire Assembly #6 White	1
2	<u>1016732</u>	Wire Assembly #6 Yellow	1
3	<u>101795701</u>	Asm, Wire, #6blk 13in	5
4	N/A	Wire Harness (includes items 5 through 9)	1
5	<u>101904402</u>	Wire Assembly #6 Green	1
6	<u>101904502</u>	Wire Assy, #6 Red	1
7	<u>101904602</u>	Wire Assy, #6 Blue	1
8	<u>101904702</u>	Wire Assy, #6 Orange	1
9	<u>101908902</u>	Wire Assembly #6 White	1
10	<u>101989901</u>	Wire Harness (Lighting)	1
11	<u>102162501</u>	Wire Harness	1
Note: Item 11 contains wires in main harness that are not 6-gauge.			

13

E

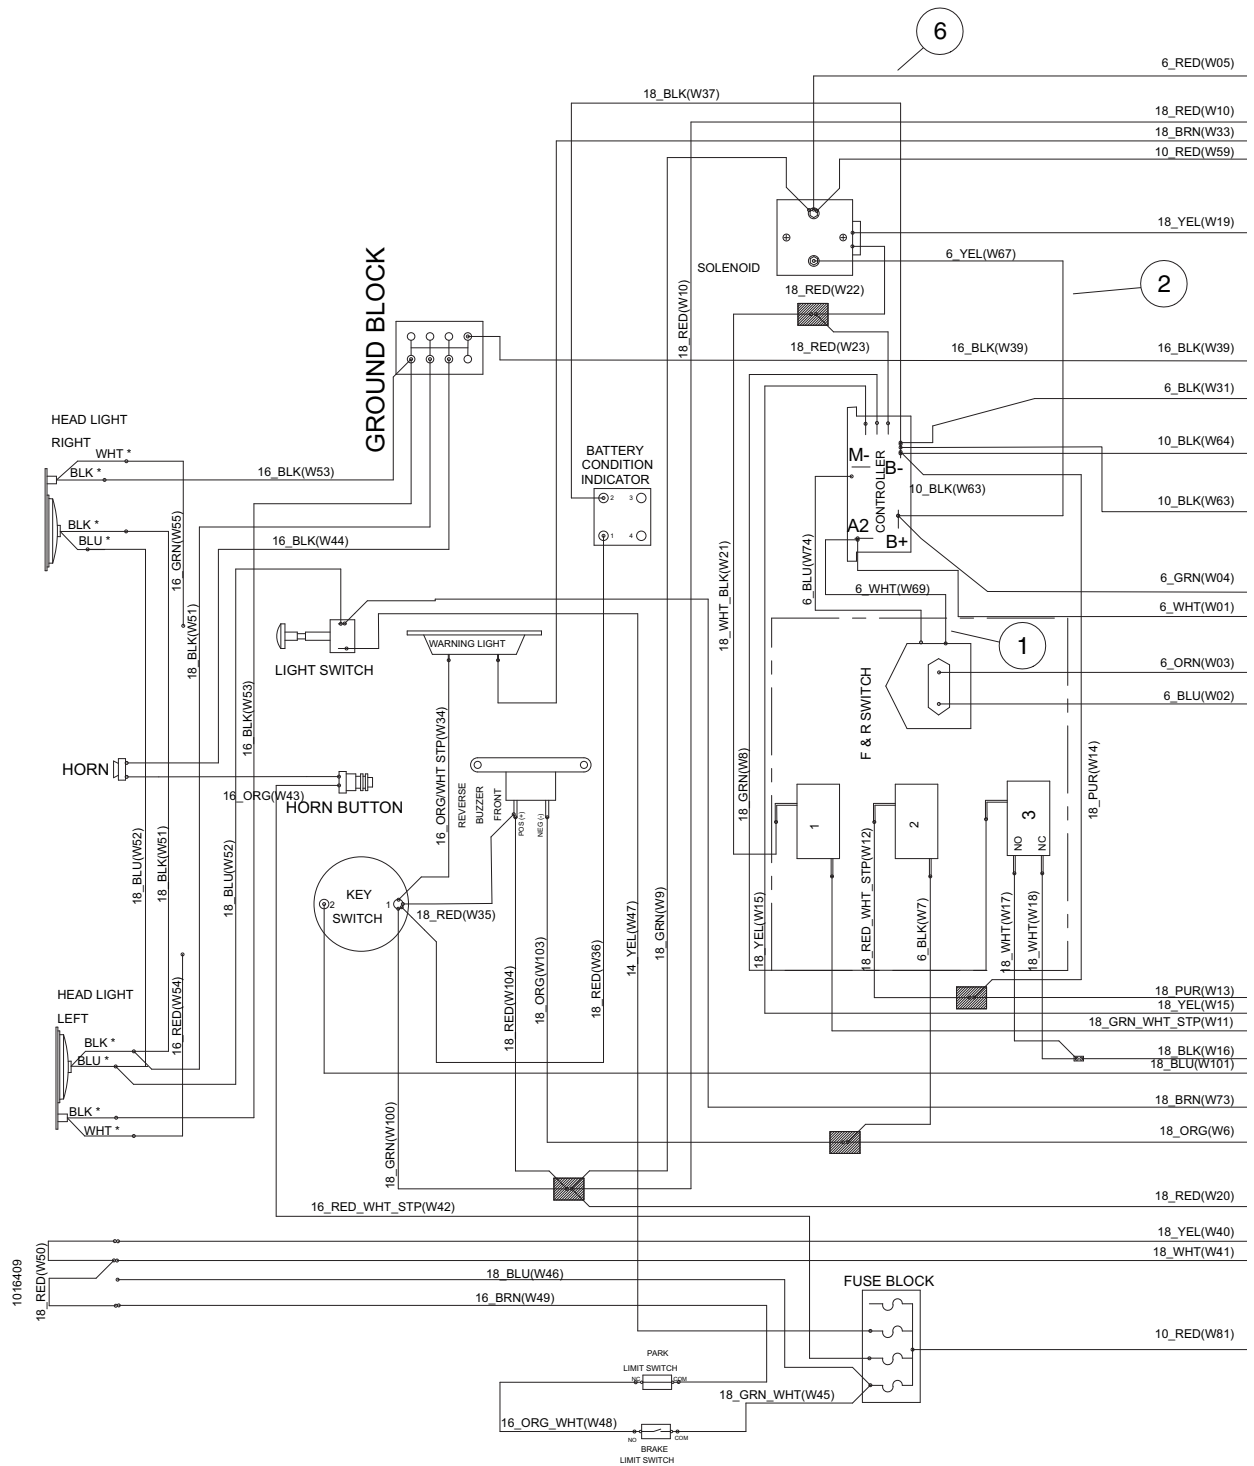

000368-001

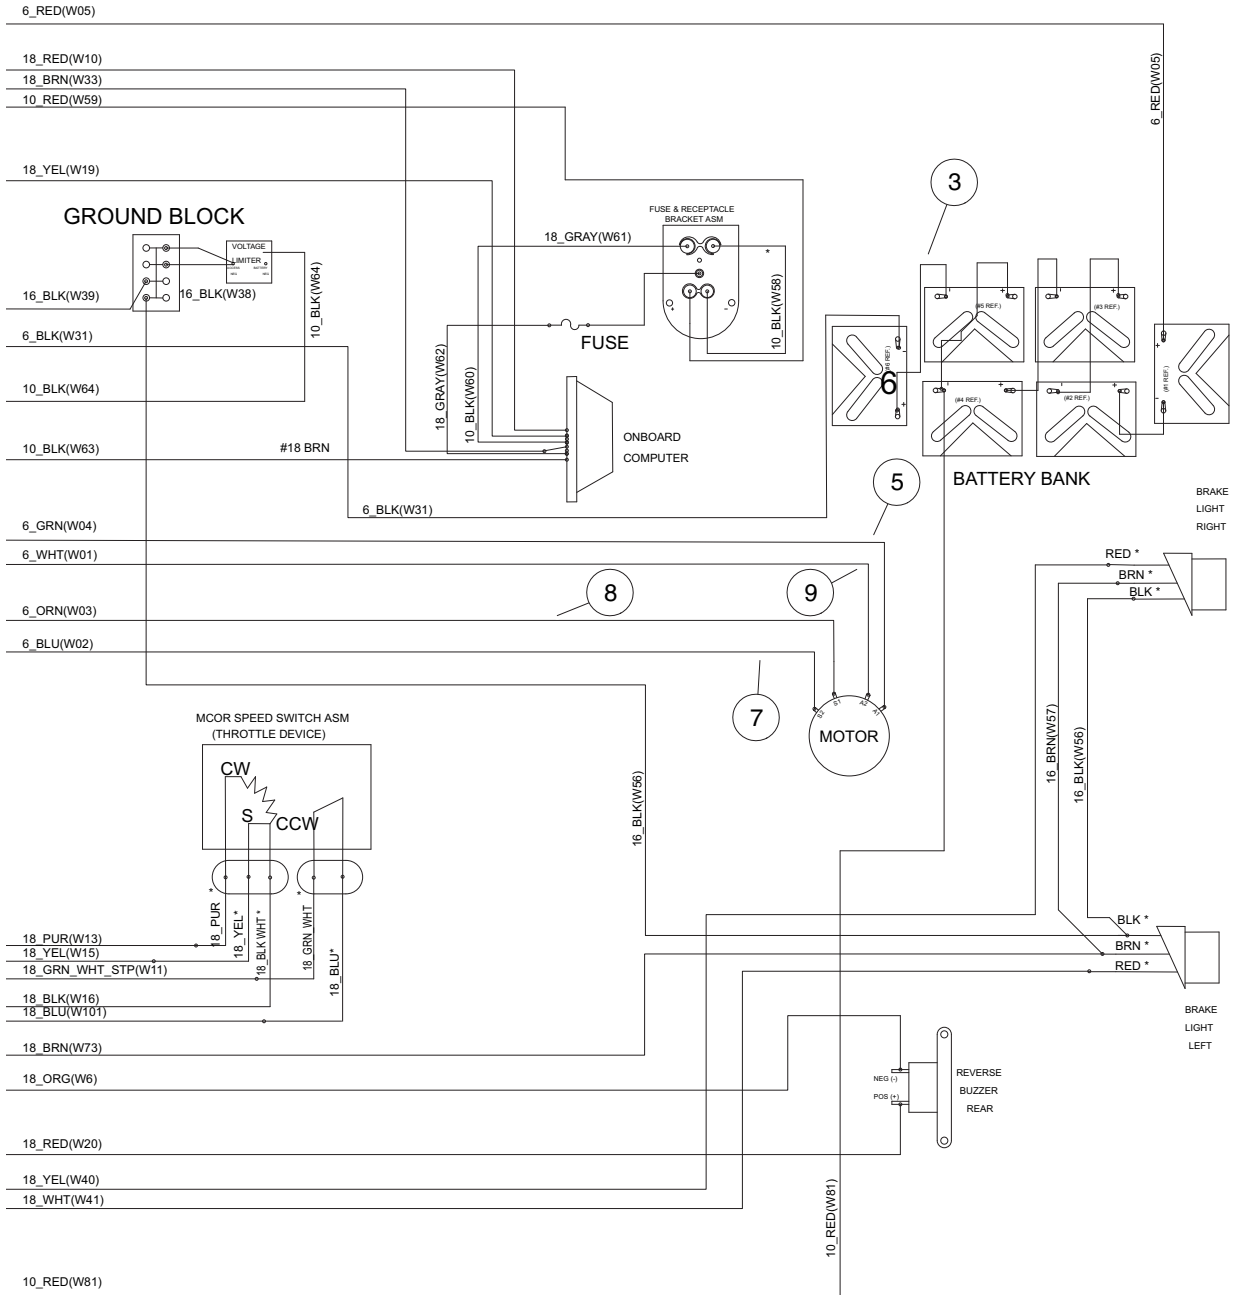


000368-001

See previous two pages for illustration.

WIRING – POWERDRIVE ELECTRIC VILLAGER 8

ITEM	PART NO.	DESCRIPTION	QTY	13
		1 2 3 4		
1	<u>1016729</u>	Wire Assembly #6 White	1	
2	<u>1016732</u>	Wire Assembly #6 Yellow	1	
3	<u>101795701</u>	Asm, Wire, #6blk 13in	5	E
4	N/A	Wire Harness (includes items 5 through 9)	1	
5	<u>101904403</u>	Wire Assembly #6 Green	1	
6	<u>101904503</u>	Wire Assy, #6 Red	1	
7	<u>101904603</u>	Wire Assy, #6 Blue	1	
8	<u>101904703</u>	Wire Assy, #6 Orange	1	
9	<u>101908903</u>	Wire Assembly #6 White	1	
10	<u>101990001</u>	Wire Harness (Lighting)	1	
11	<u>102162501</u>	Wire Harness	1	
Note: Item 11 contains wires in main harness that are not 6-gauge.				

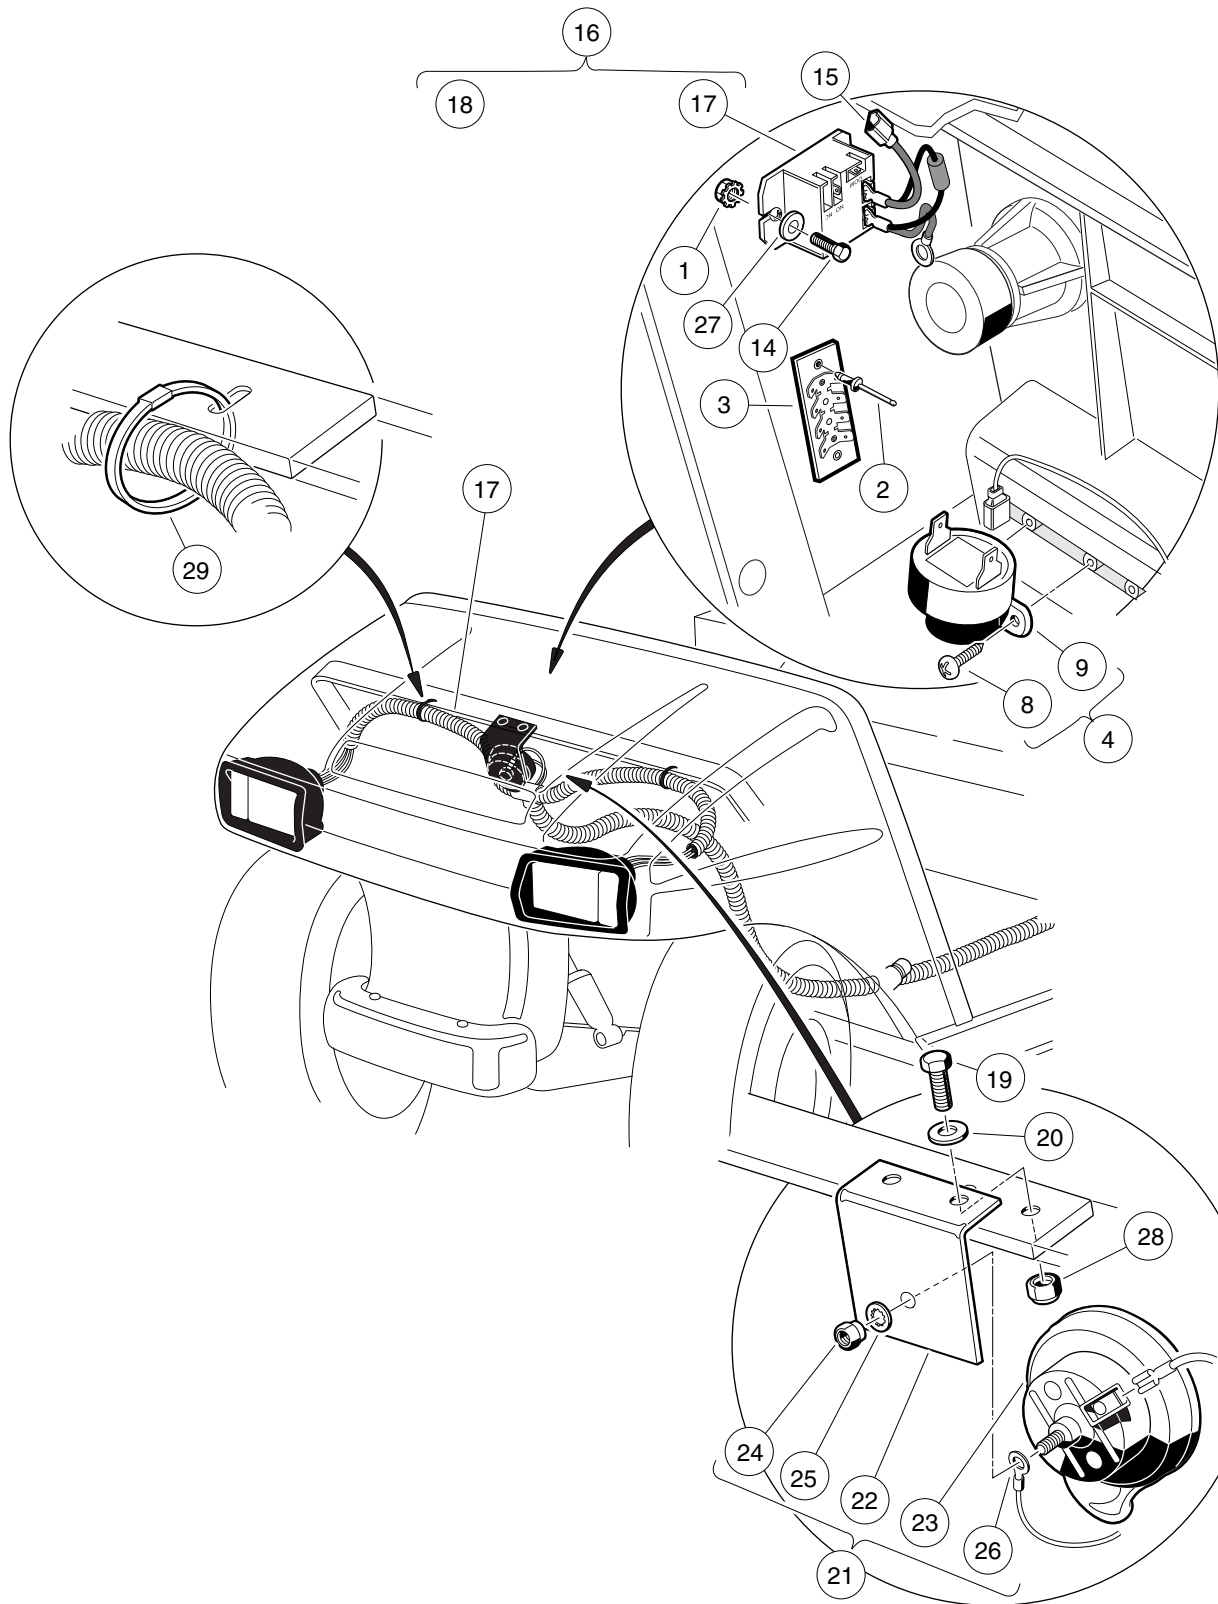

000335-002


FRONT BODY ELECTRICAL COMPONENTS – VILLAGER 6 , AND TRANSPORTER 4 AND 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011229</u>	Locknut, #6-32 Whiz	2
2	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2
3	<u>1016356</u>	Terminal Block with Insulator	1
4	<u>1016859</u>	Kit, Reverse Buzzer (includes items 5 through 13)	1
5	<u>1011229</u>	Locknut, #6-32 Whiz	1
6	<u>1012431</u>	Washer, #4 Flat	2
7	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
8	<u>1016849</u>	Screw, #4-24 X 0.33 Pan-Head Machine	2
9	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
10	<u>1016857</u>	Wire Assembly Black #18	1
11	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2
12	<u>8057</u>	Nut, #4-40 Hex Machine	2
13	<u>8058</u>	Lockwasher, #4 Split	2
14	<u>1017853</u>	Screw, #6-32 X 0.75 Hex-Head Machine	2
15	<u>101914401</u>	Assembly, Voltage Suppressor	1
16	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes items 17 and 18)	1
17	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
18	N/A	Kit, Relay, 48v 30a Instrns	1
19	<u>304</u>	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
20	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
21	<u>4029</u>	Horn (includes items 22 through 26)	1
22	<u>1011825</u>	Horn Bracket	1
23	<u>1014530</u>	Horn, 12-VDC	1
24	<u>101955101</u>	Nut, M6 Hex	1
25	<u>7820</u>	Washer, 5/16 Internal-Tooth	1
26	N/A	5/16 Ring Term.	1
27	<u>7591</u>	Washer, #6 Flat	2
28	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2
29	<u>8639</u>	Tie Wrap, 11" Nylon	4
Note: Items 5 through 7, and 10 through 13 are included in the reverse buzzer kit, but are not used in this application.			

13
E

13

E

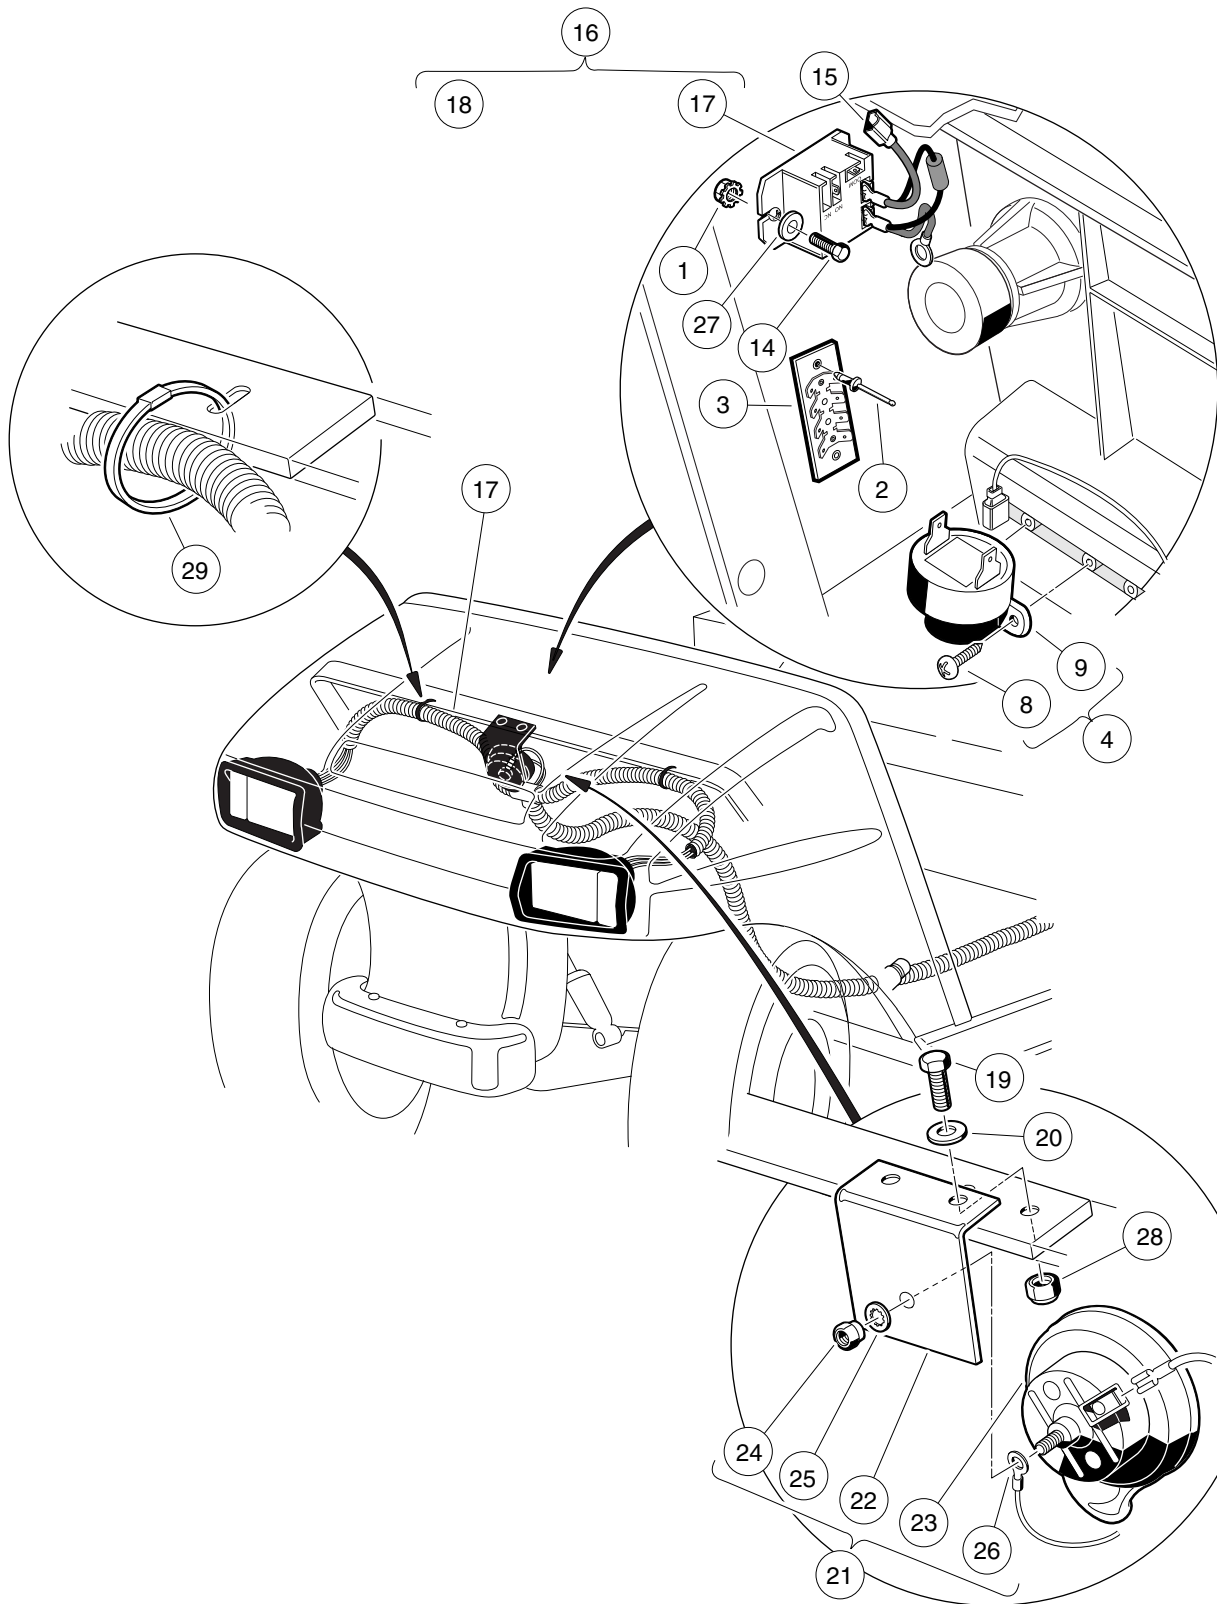


000335-002

FRONT BODY ELECTRICAL COMPONENTS – VILLAGER 8

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011229</u>	Locknut, #6-32 Whiz	2
2	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2
3	<u>1016356</u>	Terminal Block with Insulator	1
4	<u>1016859</u>	Kit, Reverse Buzzer (includes items 5 through 13)	1
5	<u>1011229</u>	Locknut, #6-32 Whiz	1
6	<u>1012431</u>	Washer, #4 Flat	2
7	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
8	<u>1016849</u>	Screw, #4-24 X 0.33 Pan-Head Machine	2
9	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
10	<u>1016857</u>	Wire Assembly Black #18	1
11	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2
12	<u>8057</u>	Nut, #4-40 Hex Machine	2
13	<u>8058</u>	Lockwasher, #4 Split	2
14	<u>1017853</u>	Screw, #6-32 X 0.75 Hex-Head Machine	2
15	<u>101914401</u>	Assembly, Voltage Suppressor	1
16	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes items 17 and 18)	1
17	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
18	N/A	Kit, Relay, 48v 30a Instrns	1
19	<u>304</u>	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
20	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
21	<u>4029</u>	Horn (includes items 22 through 26)	1
22	<u>1011825</u>	Horn Bracket	1
23	<u>1014530</u>	Horn, 12-VDC	1
24	<u>101955101</u>	Nut, M6 Hex	1
25	<u>7820</u>	Washer, 5/16 Internal-Tooth	1
26	N/A	5/16 Ring Term.	1
27	<u>7591</u>	Washer, #6 Flat	2
28	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2
29	<u>8639</u>	Tie Wrap, 11" Nylon	4
Note: Items 5 through 7, and 10 through 13 are included in the reverse buzzer kit, but are not used in this application.			

13

E

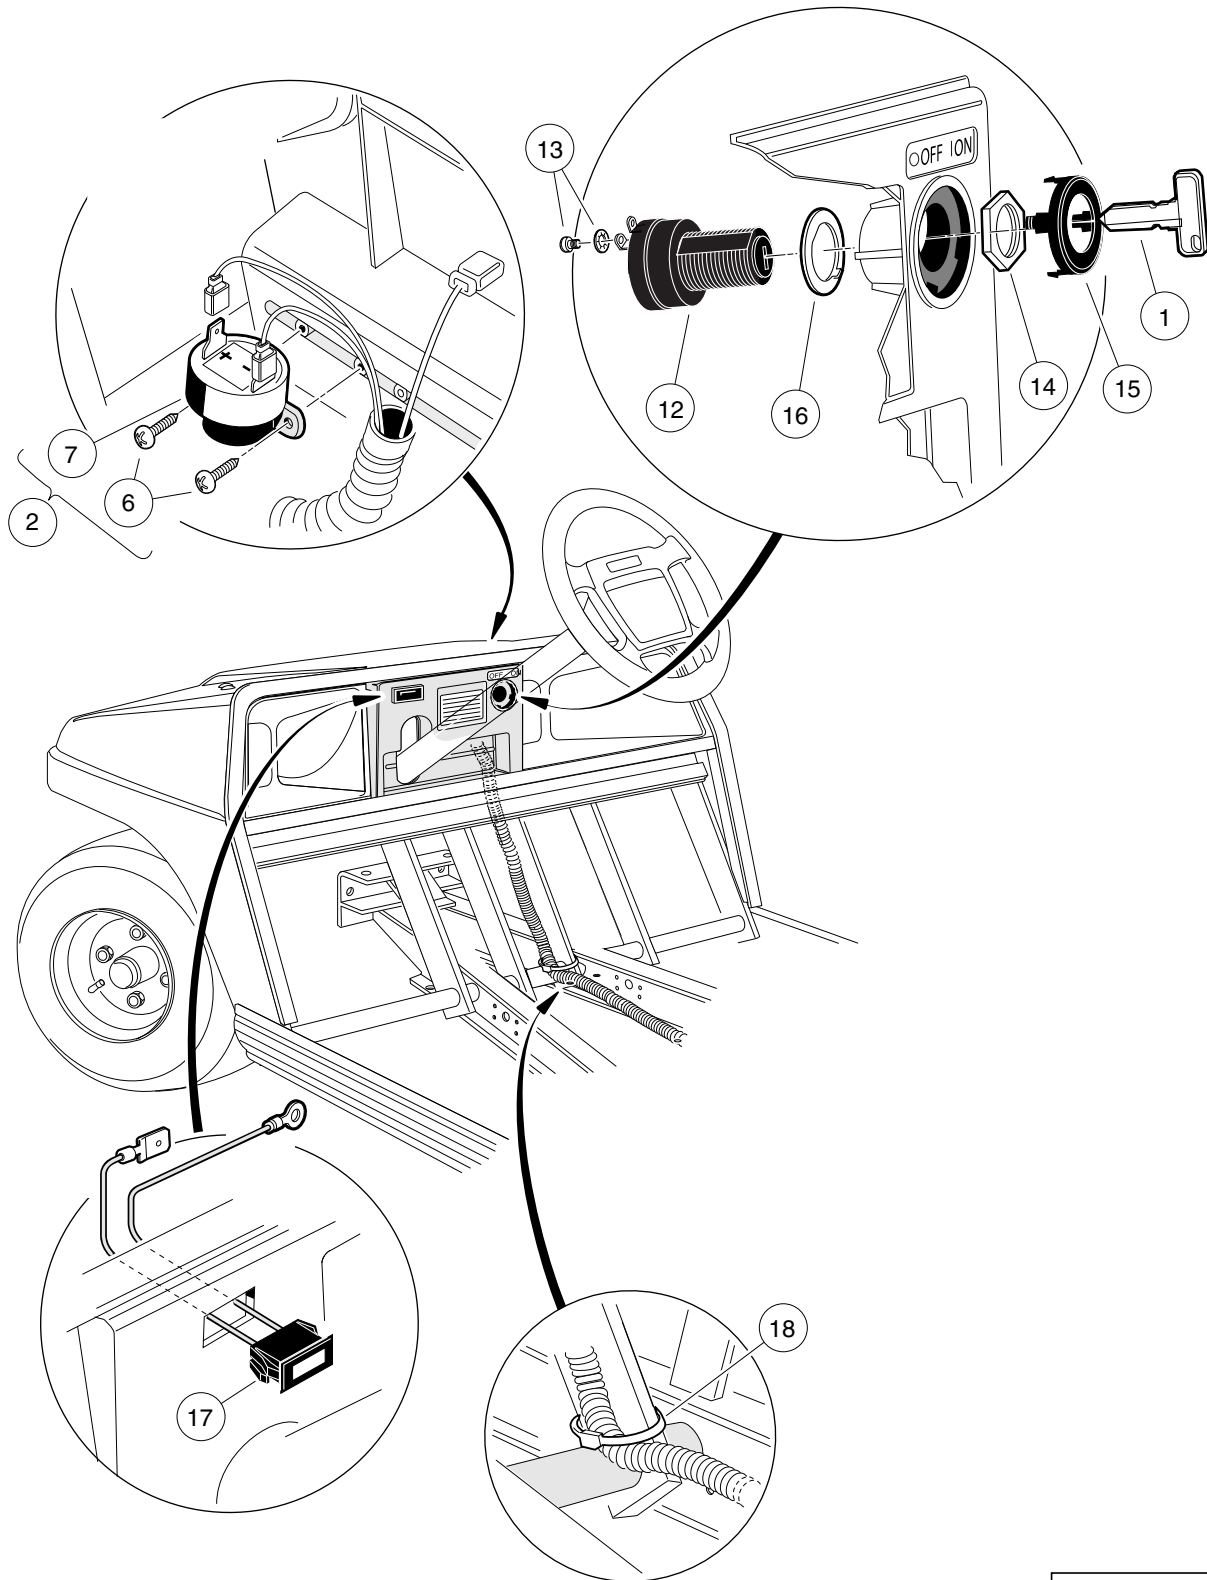


000340-001

INSTRUMENT PANEL COMPONENTS – DS VILLAGER 4 VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012505</u>	Keys (set of 2)	1
2	<u>1016859</u>	Kit, Reverse Buzzer (includes items 3 through 11)	1
3	<u>1011229</u>	Locknut, #6-32 Whiz	1
4	<u>1012431</u>	Washer, #4 Flat	2
5	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
6	<u>1016849</u>	Screw, #4-24 X 0.33 Pan-Head Machine	2
7	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
8	<u>1016857</u>	Wire Assembly Black #18	1
9	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2
10	<u>8057</u>	Nut, #4-40 Hex Machine	2
11	<u>8058</u>	Lockwasher, #4 Split	2
12	<u>101826201</u>	Key Switch, On/Off	1
13	<u>101830601</u>	Screw and Washer Assembly	2
14	<u>101830701</u>	Nut, Key Switch	1
15	<u>101834502</u>	Cap, Black Key Switch	1
16	<u>101851101</u>	Washer, Key Switch	1
17	<u>101935501</u>	Light, Battery (Amber)	1
18	<u>8990</u>	Tie Wrap, 8" Nylon	2
Note: Item 2, Reverse Buzzer Kit, contains parts not used in this application.			

13

E

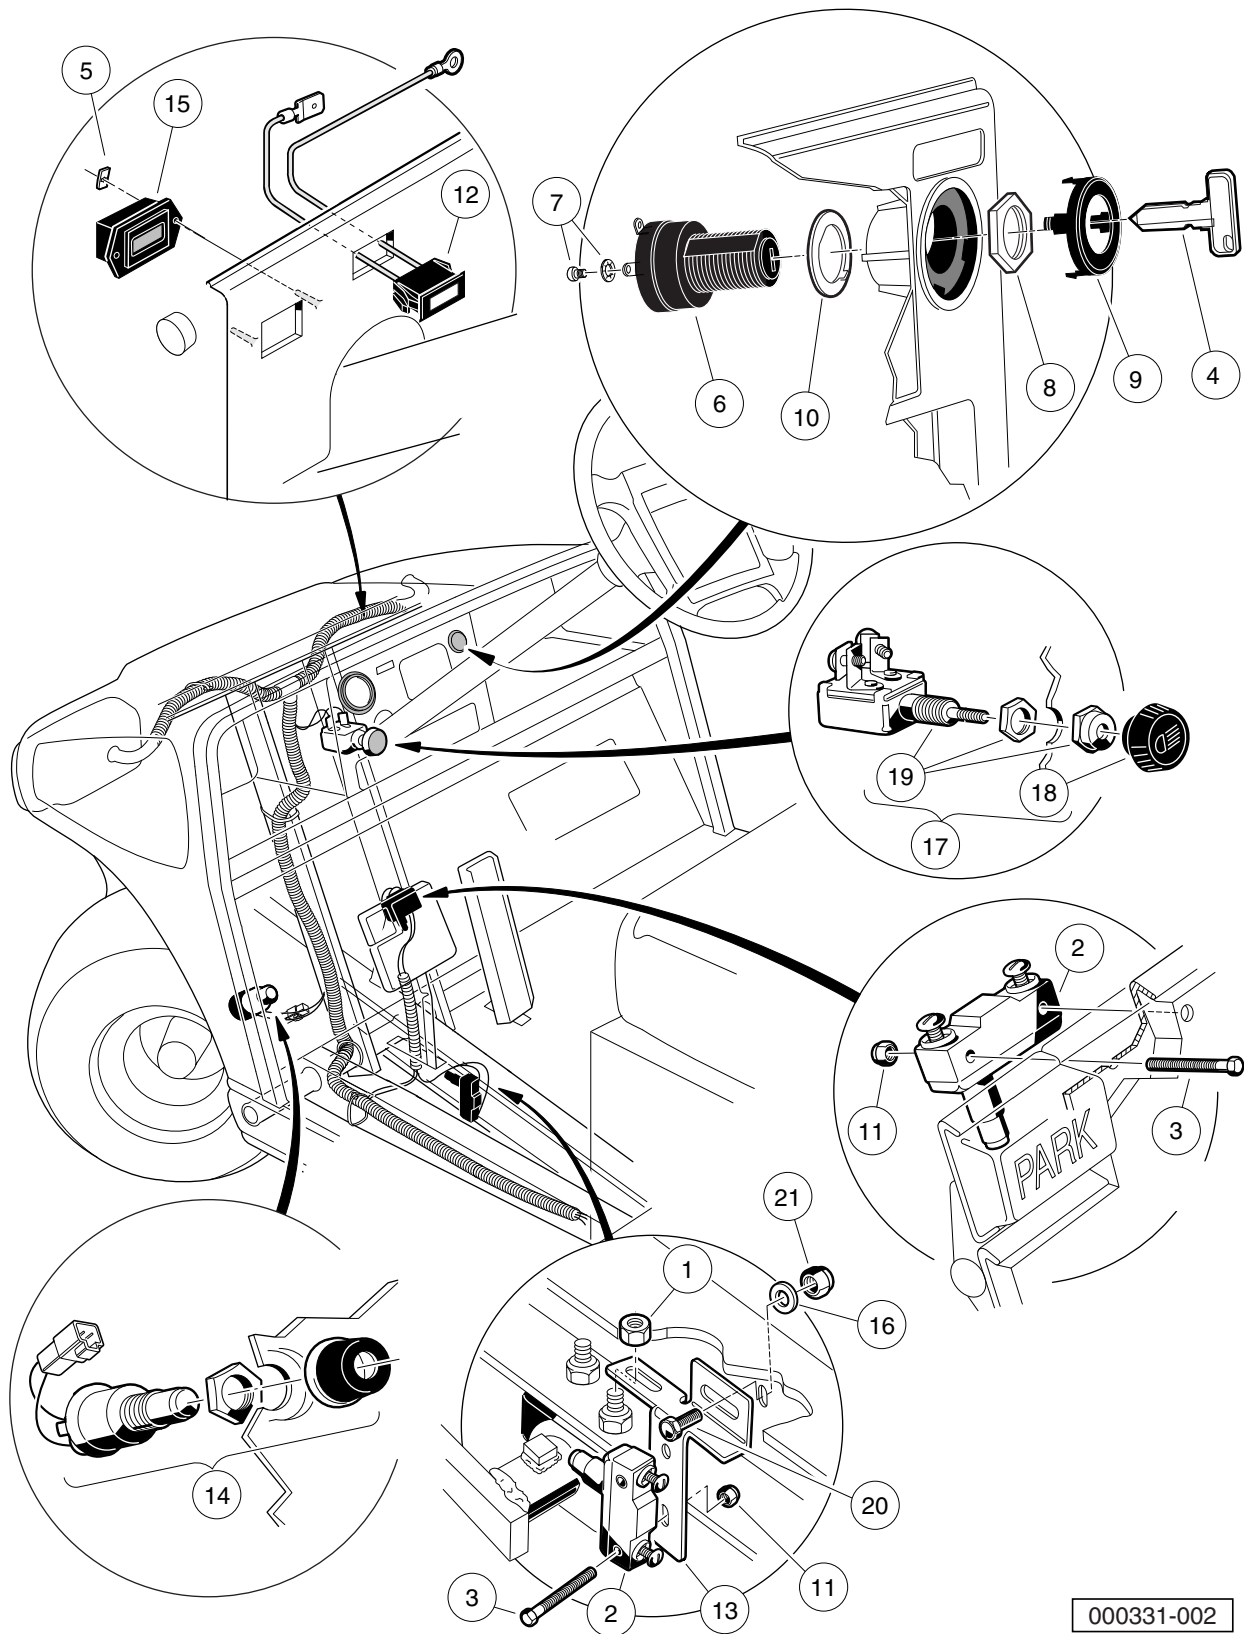


000331-002

INSTRUMENT PANEL COMPONENTS – VILLAGER 6 AND 8, AND TRANSPORTER 4 AND 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011280</u>	Locknut, 5/16-18	1
2	<u>1011439</u>	Switch, Limit	2
3	<u>1011557</u>	Screw, #6-32 X 1.00 Hex-Head Machine	4
4	<u>1012505</u>	Keys (set of 2)	1
5	<u>101814701</u>	Retainer, Push-On	2
6	<u>101826201</u>	Key Switch, On/Off	1
7	<u>101830601</u>	Screw and Washer Assembly	2
8	<u>101830701</u>	Nut, Key Switch	1
9	<u>101834502</u>	Cap, Black Key Switch	1
10	<u>101851101</u>	Washer, Key Switch	1
11	<u>101932201</u>	Locknut, #6-32 Nylon	4
12	<u>101935501</u>	Light, Battery (Amber)	1
13	<u>101957101</u>	Bracket, Brake Light Switch	1
14	<u>101969701</u>	Horn Button and Wire Assembly	1
15	<u>103200701</u>	Battery Condition Indicator - 48V	1
16	<u>1241</u>	Washer, 5/16 Type A Flat	1
17	<u>4034</u>	Light Switch (includes items 18 and 19)	1
18	<u>1013857</u>	Knob, Light Switch	1
19	<u>1013858</u>	Switch, Light Without Knob	1
20	<u>7173</u>	Screw, 5/16-18 X 0.75 Hex-Head Cap	1
21	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1

13


E

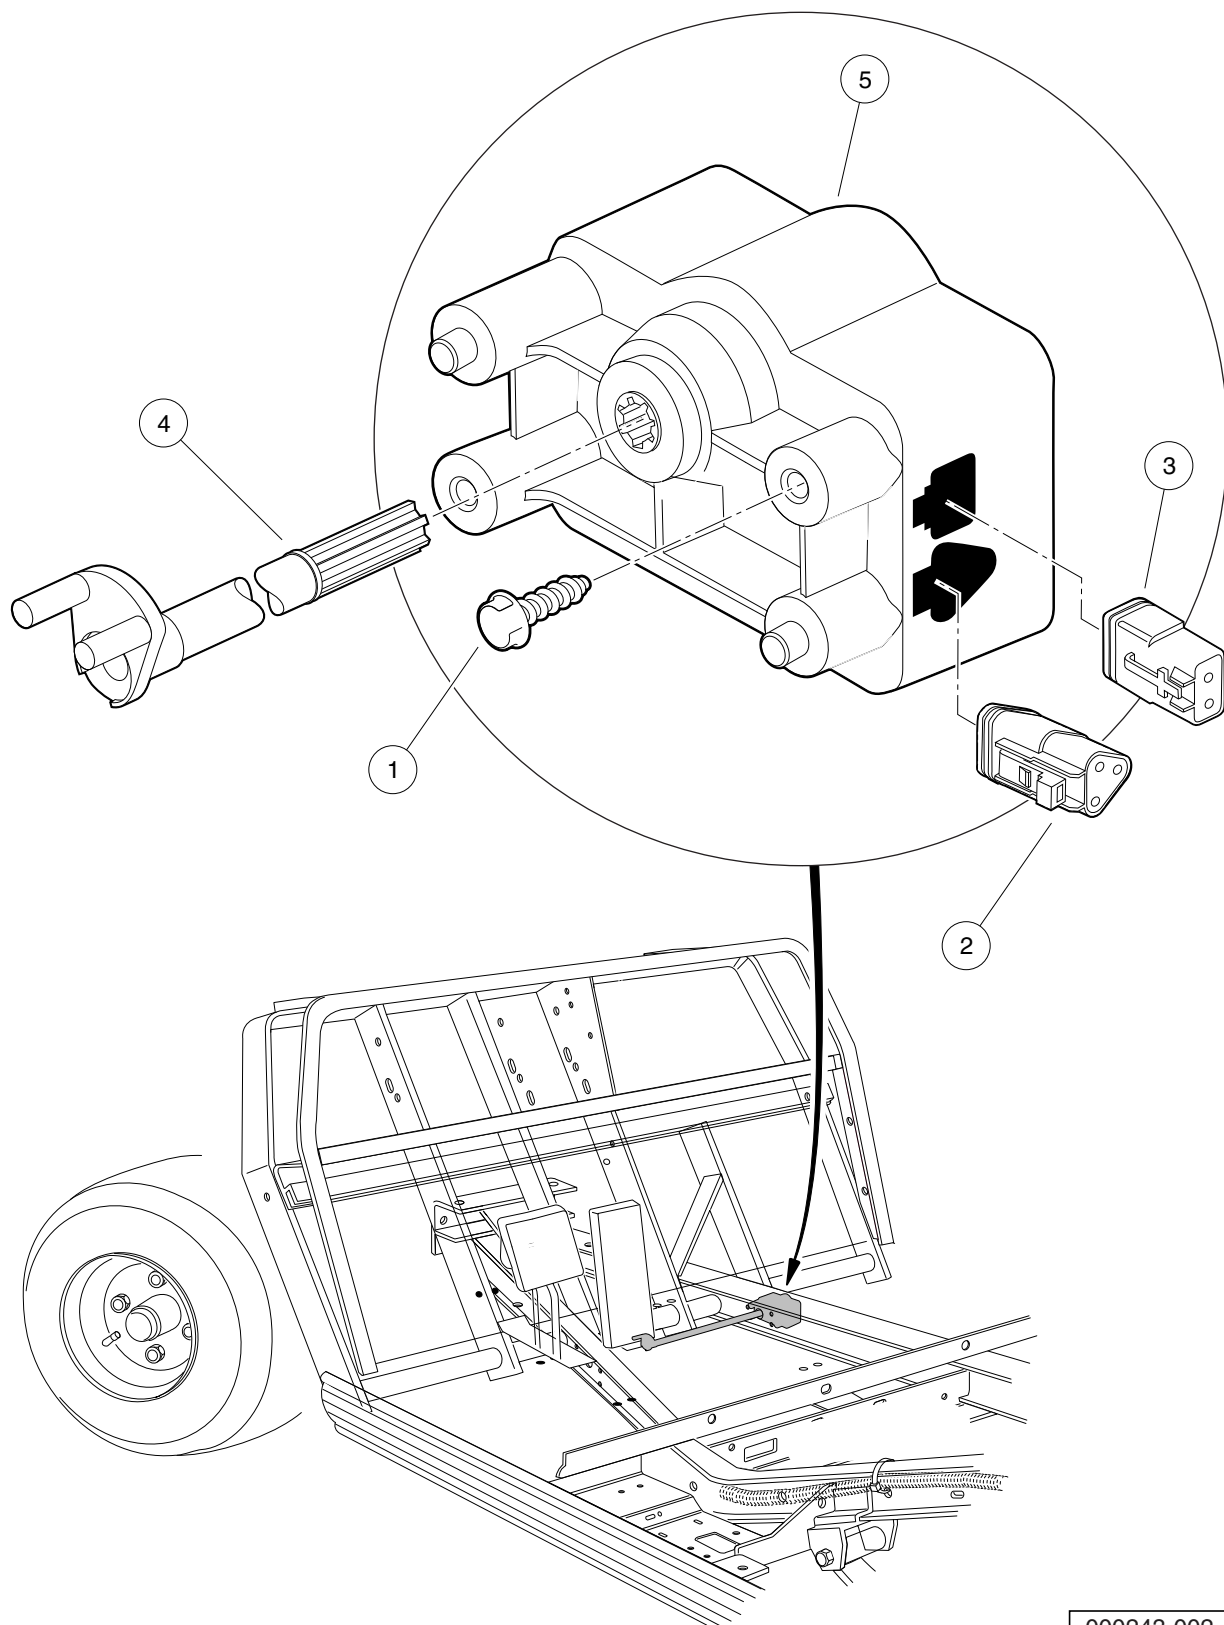

000243-002

MOTOR CONTROLLER OUTPUT REGULATOR (MCOR)

ITEM	PART NO.	DESCRIPTION	QTY	13
		1 2 3 4		
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	2	
2	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1	E
3	<u>101936801</u>	Kit, 2-Pin Wedge Lock	1	
4	<u>102101001</u>	Bar, Drive, Cast	1	
5	<u>102101101</u>	MCOR	1	

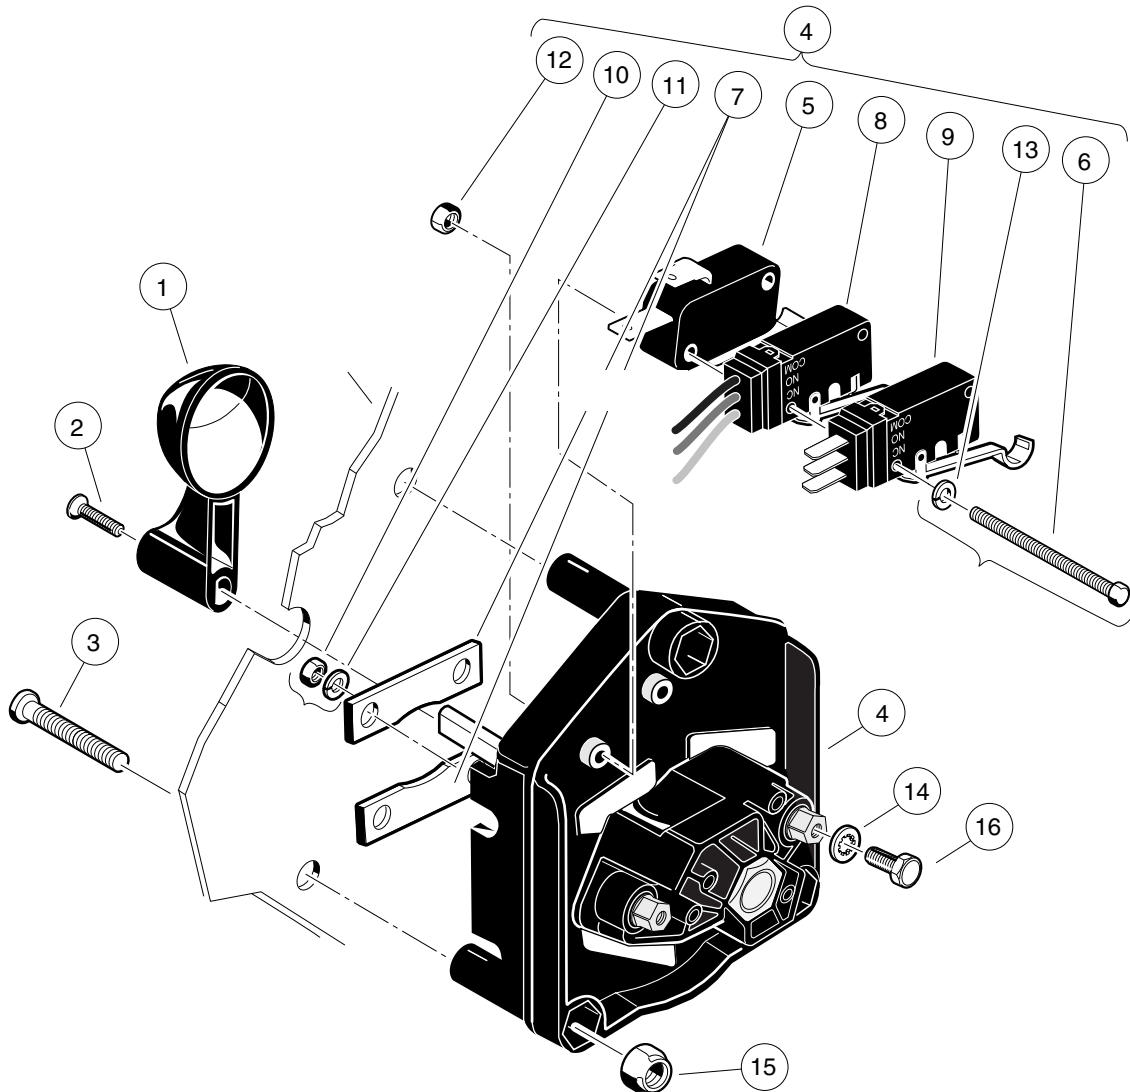


000339-001

FORWARD/REVERSE SWITCH – POWERDRIVE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012987</u>	Handle, FNR	1
2	<u>1015064</u>	Screw, #8-32 X 0.63 Machine	1
3	<u>1016845</u>	Screw, 1/4-20 X 2.125 Truss-Head	3
4	<u>101753005</u>	FNR Switch Assembly (includes items 5 through 13)	1
5	<u>1014808</u>	Switch, Limit	1
6	<u>1014871</u>	Screw, #4-40 X 2.0 Hx Wshr Hd	2
7	<u>1017799</u>	Buss Bar	2
8	<u>101979101</u>	Assembly, Switch, Limit	1
9	<u>102250201</u>	Limit Switch, Sealed Assembly	1
10	<u>1028</u>	Nut, 1/4-20 Hex	4
11	<u>451</u>	Lockwasher, 1/4 Split	4
12	<u>8057</u>	Nut, #4-40 Hex Machine	2
13	<u>8058</u>	Lockwasher, #4 Split	2
14	<u>8049</u>	Lockwasher, #10 Internal-Tooth	2
15	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	3
16	<u>8450</u>	Screw, #10-24 X 0.50 Hex-Head	2

13

E

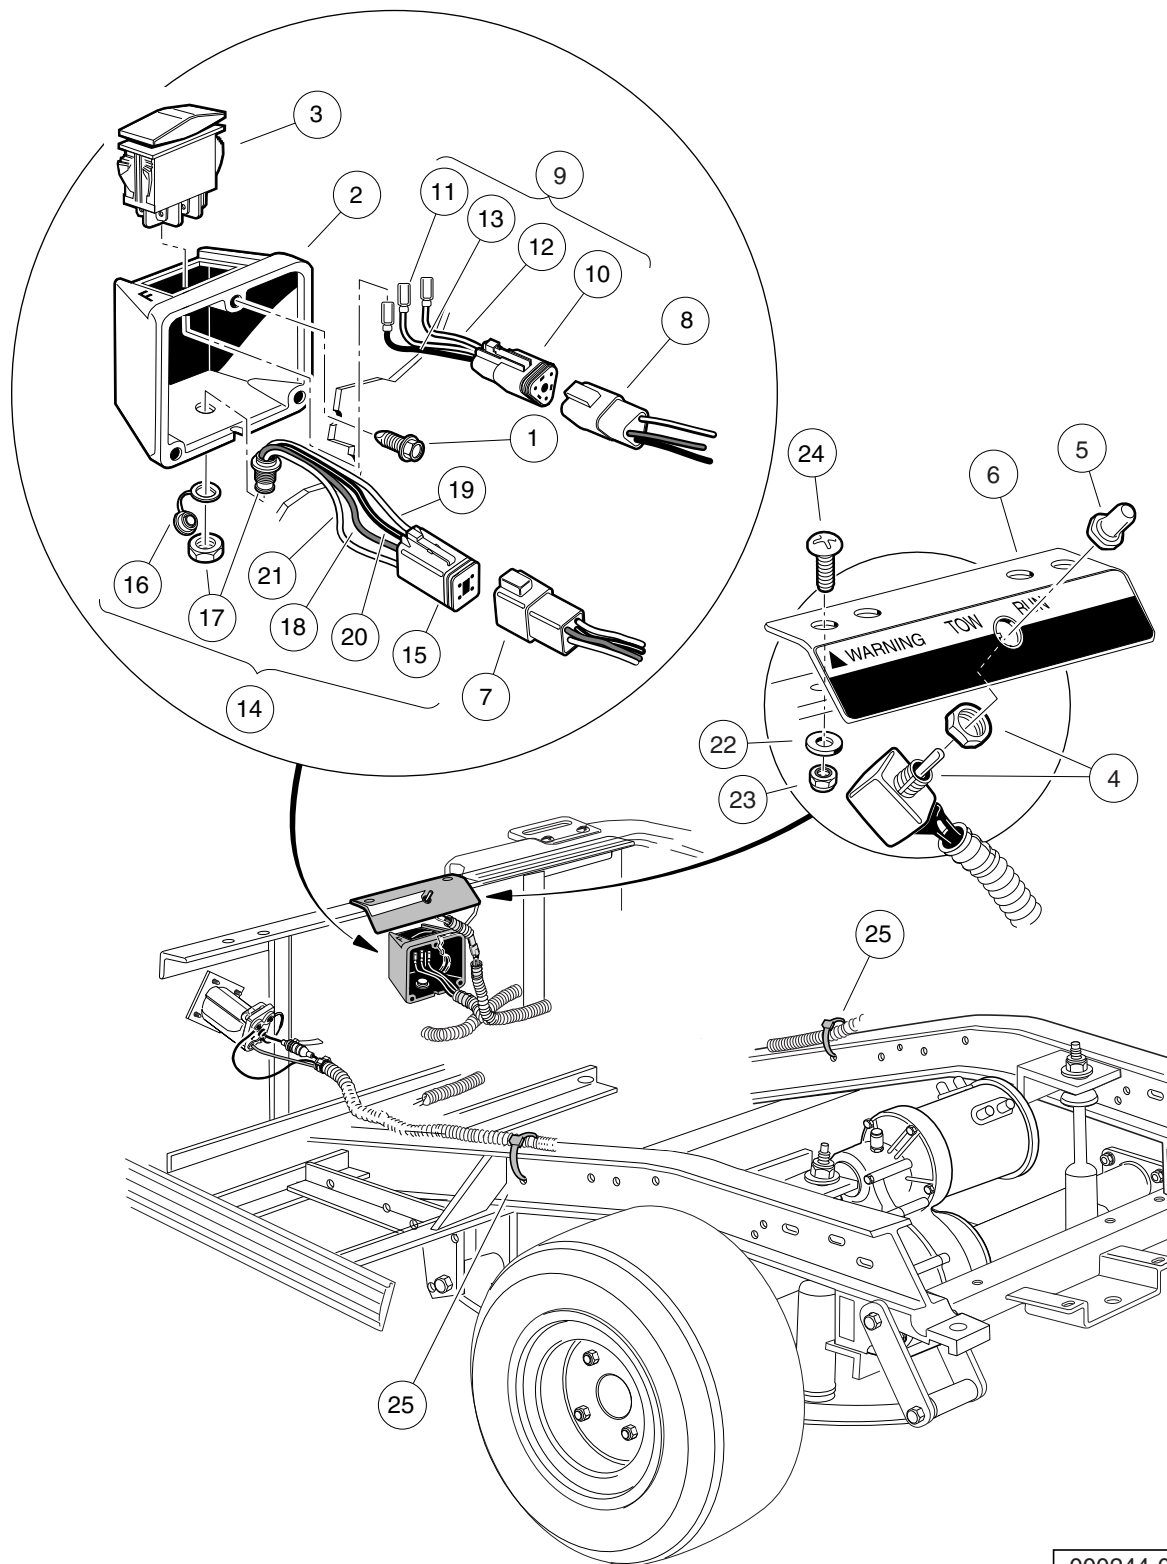

000244-001


FORWARD/REVERSE SWITCH AND TOW/RUN SWITCH – IQ SYSTEM DS VILLAGER 4

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3
2	<u>101855002</u>	Case, FNR Switch	1
3	<u>101856002</u>	Switch, Rocker, Single-Pole	1
4	<u>101908101</u>	Switch Assembly, Tow/Run	1
5	<u>101908401</u>	Boot, Switch	1
6	<u>101922501</u>	Bracket, Tow/Run Switch Mounting	1
7	<u>101932401</u>	Kit, 4-Pin Receptacle and Wedge Lock	1
8	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
9	<u>102266601</u>	Wire Assembly, FNR Switch (includes items 10 through 13)	1
10	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
11	N/A	Wire Assembly, #18 Blue	1
12	N/A	Wire Assembly, #18 Orange	1
13	N/A	Wire Assembly, #18 Brown	1
14	<u>102266701</u>	Wire Assembly, IQDM Port (includes items 15 through 21)	1
15	<u>101932501</u>	Kit, 4-Pin Wedge Lock	1
16	<u>102196901</u>	Dust Cap	1
17	N/A	Connector Mount, Four-Pin	1
18	N/A	Wire Assembly, #18 Red/Yellow	1
19	N/A	Wire Assembly, #18 Black/Yellow	1
20	N/A	Wire Assembly, #18 Blue/Yellow	1
21	N/A	Wire Assembly, #18 Green/Yellow	1
22	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
23	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2
24	<u>8248</u>	Screw, 1/4-20 X 0.75 Truss-Head Machine	2
25	<u>8990</u>	Tie Wrap, 8" Nylon	1

13
E

13

E

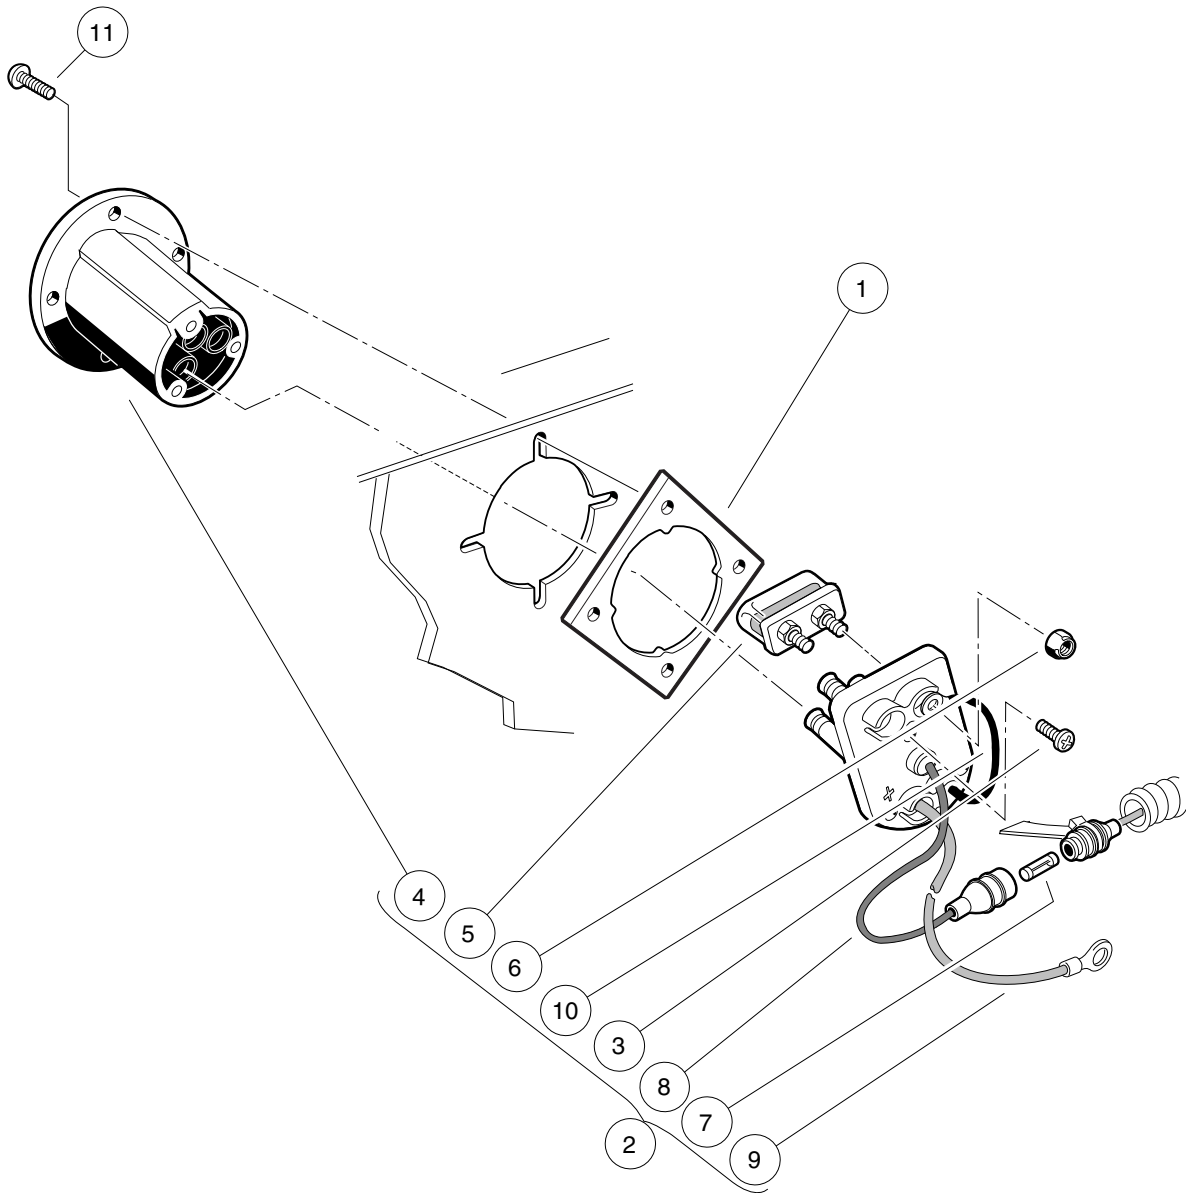


000369-001

BATTERY CHARGER RECEPTACLE – VILLAGER VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101801001</u>	Plate, Receptacle Backing	1
2	<u>101802101</u>	Fuse and Receptacle Assembly (includes items 3 through 10)	1
3	<u>1017705</u>	Screw, #8 X 5/8 Phillips Pan-Head Type AB	3
4	<u>101796501</u>	Receptacle	1
5	<u>101796801</u>	Fuse Assembly (includes item 6)	1
6	<u>1013061</u>	Locknut, #10-32 Nylon Insert	2
7	N/A	Fuse, 3/8-Amp	1
8	N/A	Wire Assembly, Sense Lead, Gray	1
9	N/A	Wire Assembly, #10 Red	1
10	N/A	Wire Assembly, #10 Black	1
11	<u>101832001</u>	Screw, #7-19 X 0.625 Phillips Pan-Head Tap	4

13

E

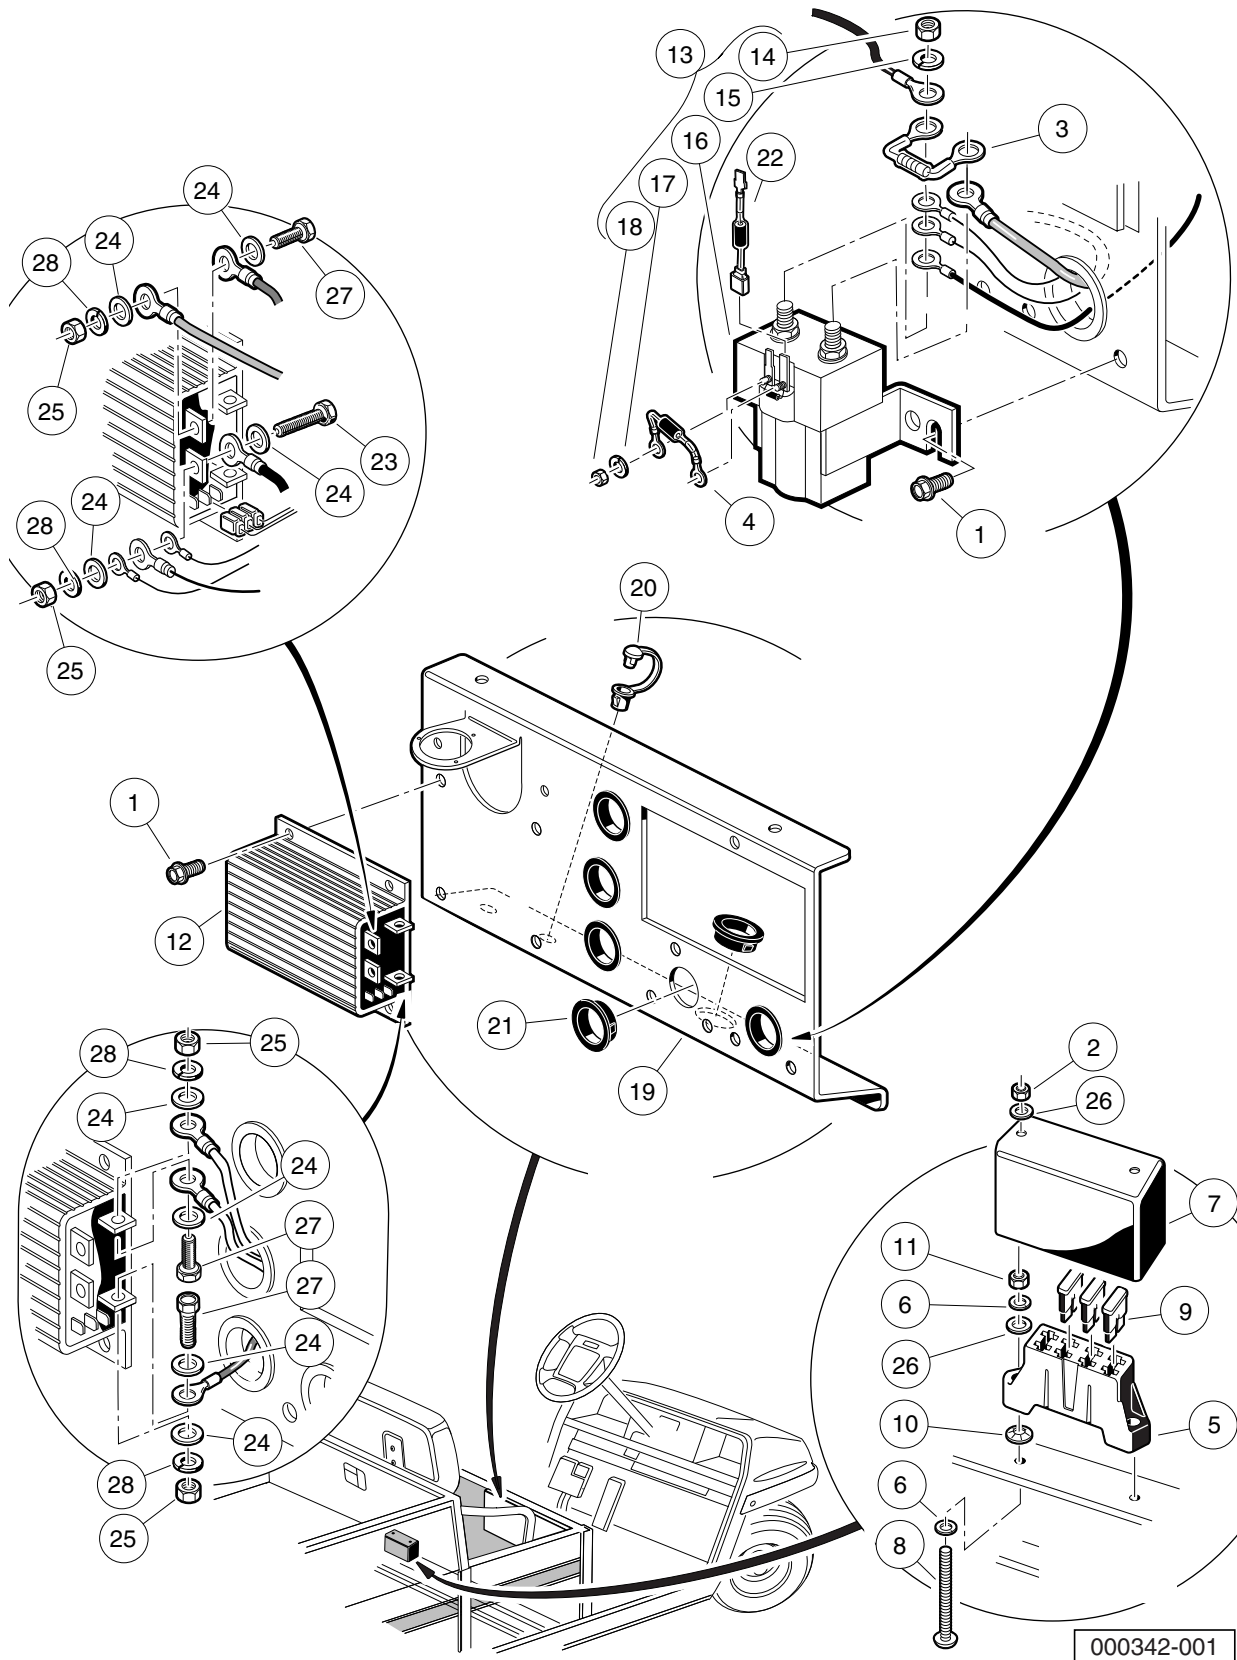


ELECTRICAL COMPONENTS – POWERDRIVE VILLAGER 6 AND 8, AND TRANSPORTER 4 AND 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	6
2	<u>1012438</u>	Locknut, #10-24 Nylon Insert	2
3	<u>1014947</u>	Resistor Assembly	1
4	<u>1014948</u>	Diode	1
5	<u>1015741</u>	Fuse Block	1
6	<u>1016</u>	Lockwasher, #10 Split	4
7	<u>1016363</u>	Fuse Block Cover	1
8	<u>1016366</u>	Screw, #10-24 X 3.0 Pan-Head Machine	2
9	<u>1016423</u>	Fuse, 20-Amp	3
10	<u>1016631</u>	Push Nut	2
11	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
12	<u>101840203</u>	Controller, 48-Volt, 300-Amp Series	1
13	<u>101908701</u>	Solenoid, 48-Volt (includes items 14 through 18)	1
14	<u>1012528</u>	Nut, M8-1.25 Hex	2
15	<u>1013734</u>	Lockwasher, 8mm Split	2
16	N/A	Solenoid, 48-Volt	1
17	N/A	Washer, Lock	2
18	N/A	Nut	2
19	<u>101911701</u>	Plate, Electrical Component Mounting	1
20	<u>101918301</u>	Clamp, Plastic Wire	2
21	<u>101924301</u>	Bushing, Snap	6
22	<u>102273101</u>	Diode Assembly	1
23	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	1
24	<u>1241</u>	Washer, 5/16 Type A Flat	8
25	<u>1242</u>	Nut, 5/16-18 Hex	4
26	<u>183</u>	Washer, #10 Type A Flat	4
27	<u>7173</u>	Screw, 5/16-18 X 0.75 Hex-Head Cap	3
28	<u>7174</u>	Lockwasher, 5/16 Split	4

13

E

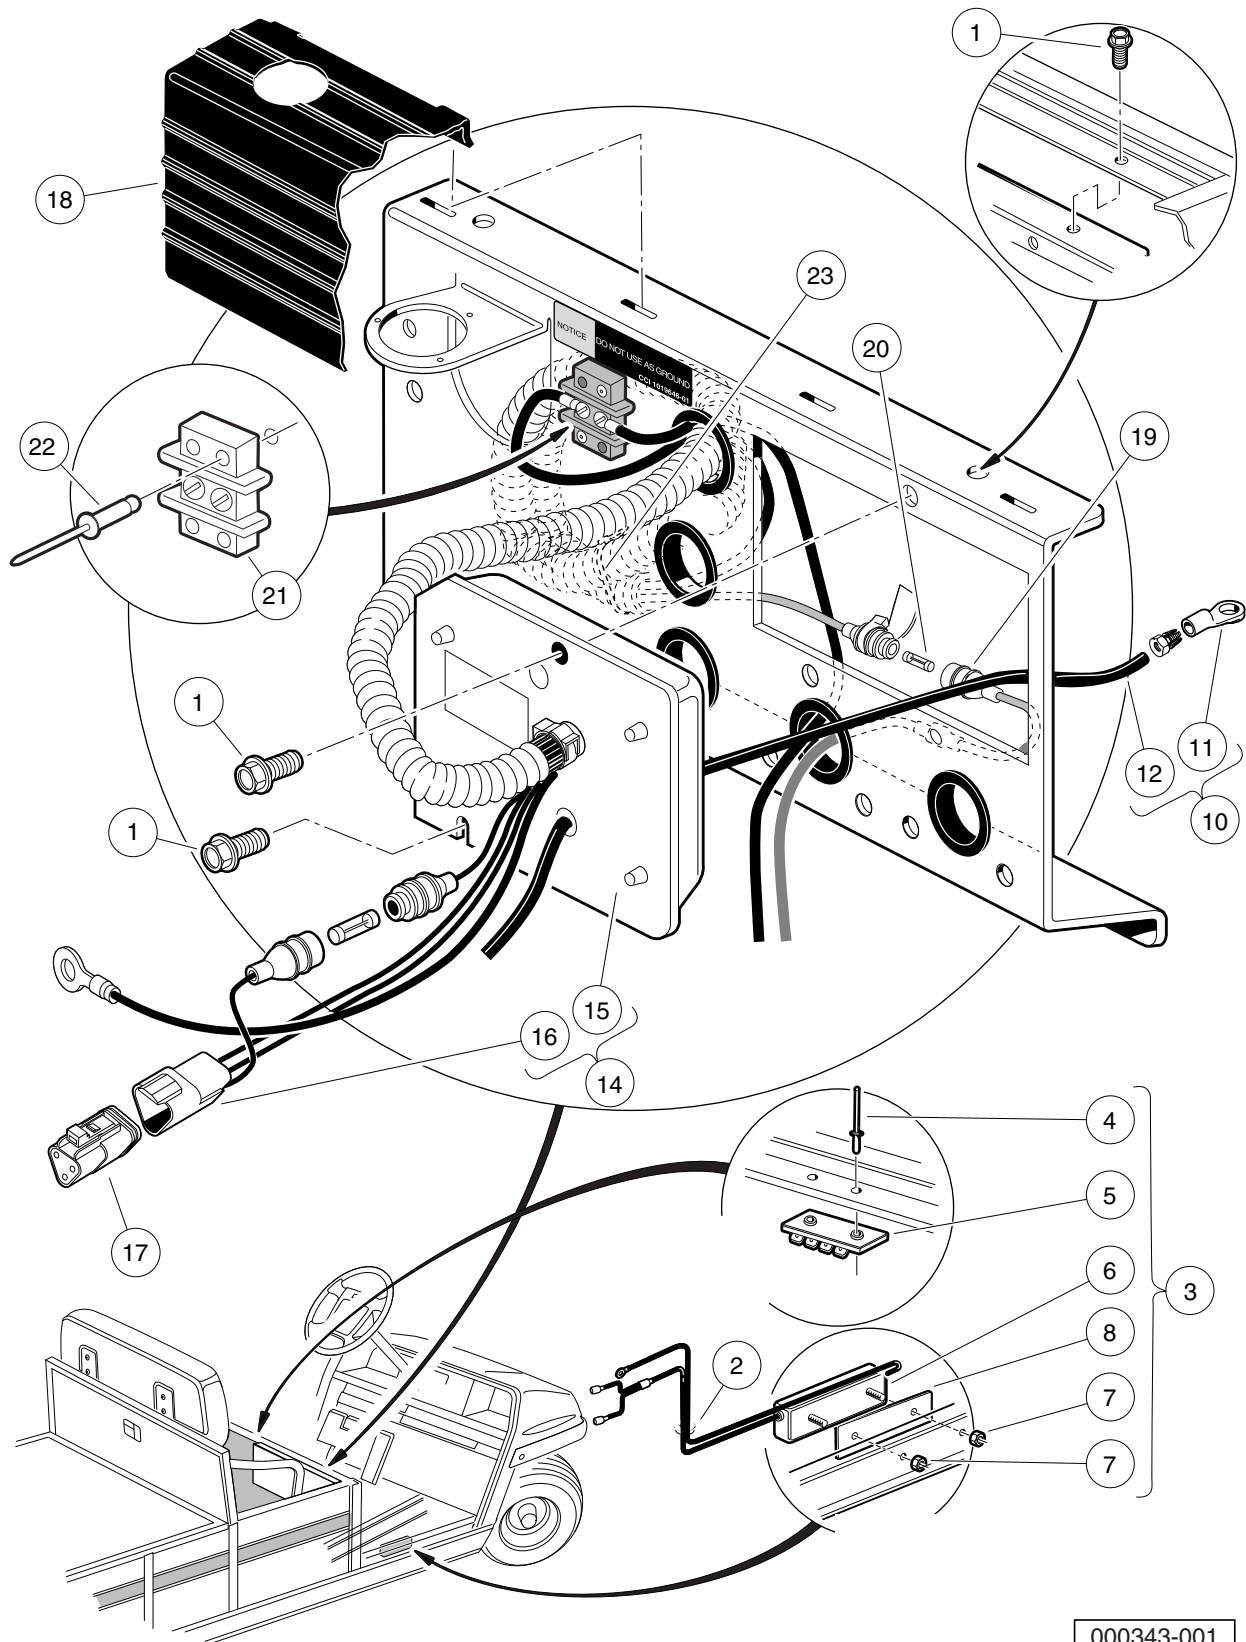


000343-001

ELECTRICAL COMPONENTS, CONTINUED – POWERDRIVE TRANSPORTER 4 AND 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4
2	<u>101802401</u>	Grommet	1
3	N/A	Kit, 12-Volt Regulator (includes items 4 through 8)	1
4	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2
5	<u>1016356</u>	Terminal Block with Insulator	1
6	<u>101810501</u>	Limiter, Voltage	1
7	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	2
8	<u>101962601</u>	Gasket, Voltage Limiter	1
9	<u>101827802</u>	Ground Wire Kit, 48-Volt (includes items 10 through 12)	1
10	<u>101826801</u>	Compression Lug	1
11	N/A	Wire Assembly, Black	1
12	<u>8990</u>	Tie Wrap, 8" Nylon	3
13	<u>101909903</u>	Onboard Computer (includes items 14 and 15)	1
14	N/A	Onboard Computer	1
15	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
16	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
17	<u>101931601</u>	Cover, Component	1
18	<u>101957501</u>	Plug, 2-Way (includes item 19)	1
19	N/A	Fuse, 3/8-Amp	1
20	<u>101966801</u>	Block, Terminal	1
21	<u>101968801</u>	Rivet, 3/16", Pop	2
22	<u>102900501</u>	Bearing	1
23	<u>8990</u>	Tie Wrap, 8" Nylon	1
Note: Item 9 is included in kit, but not used in this application. Item 13 is included in the kit, but is not used in this application.			

13
E

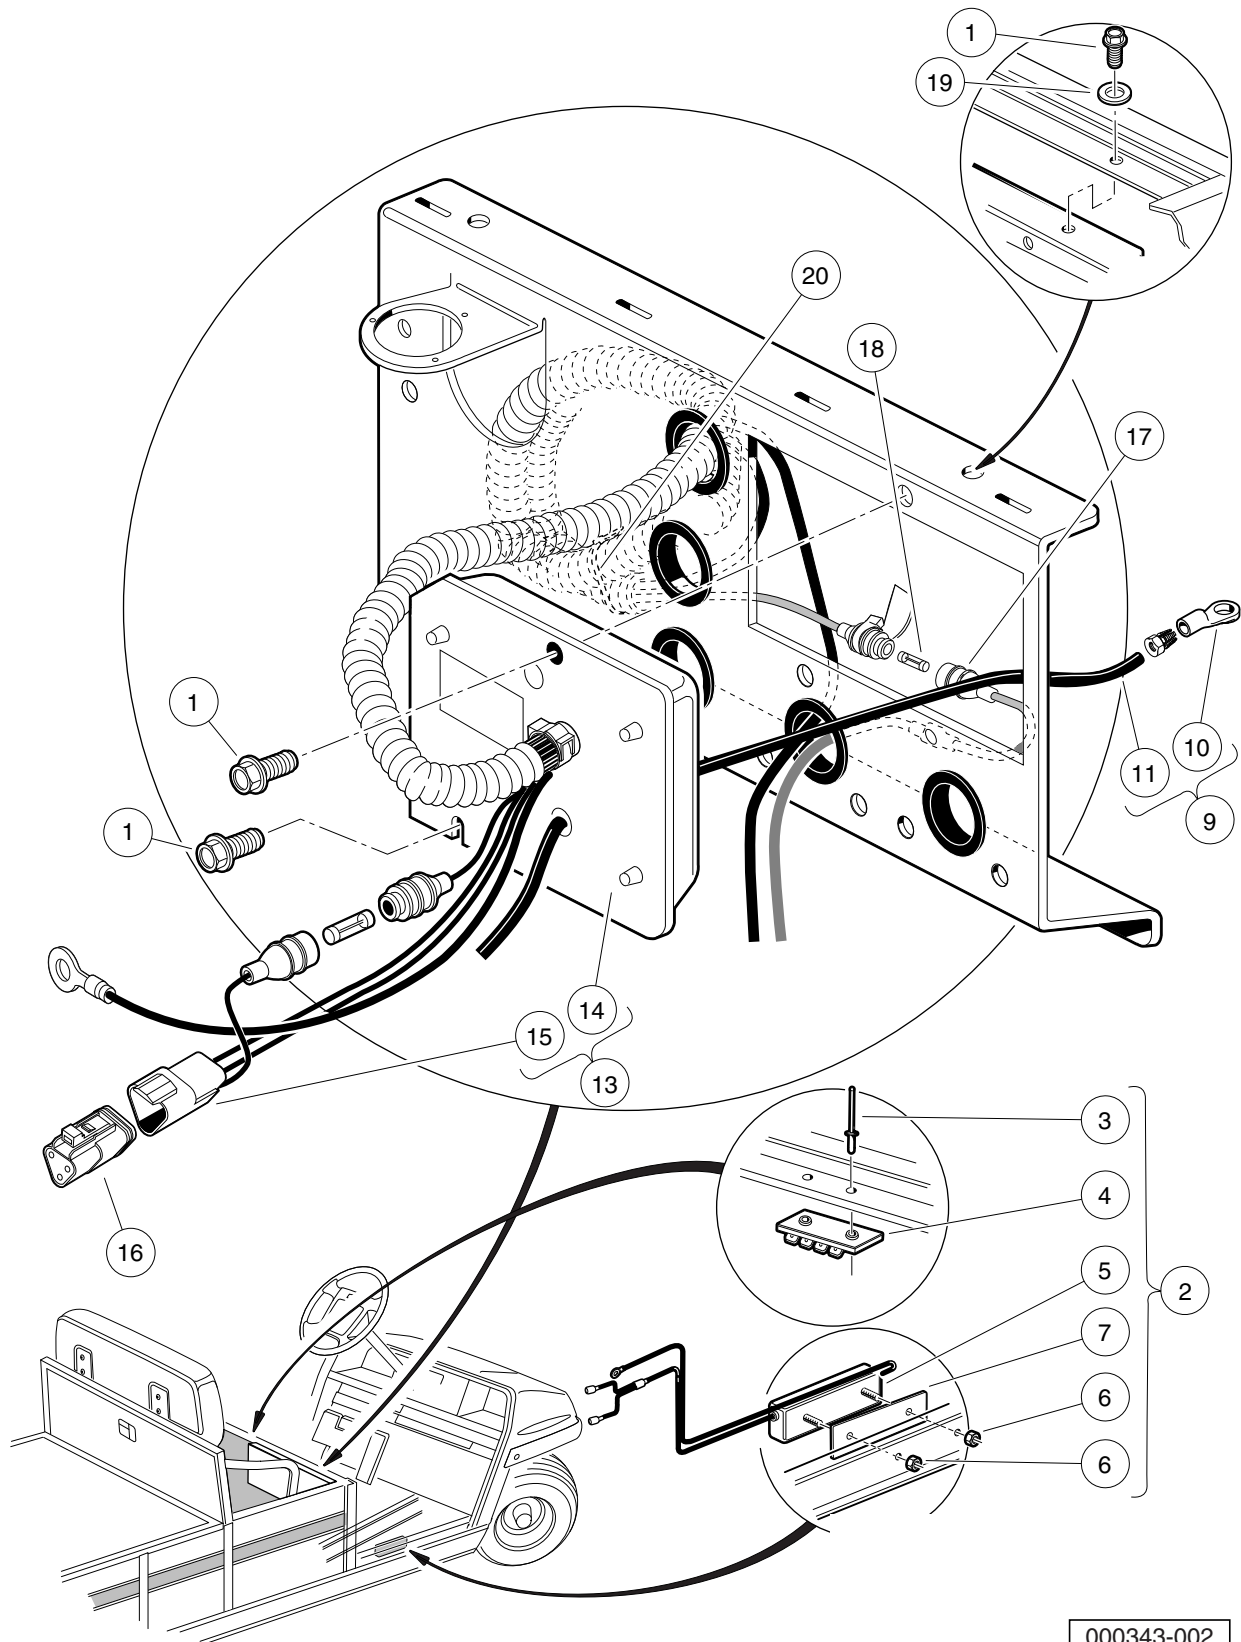


000343-002

ELECTRICAL COMPONENTS, CONTINUED – POWERDRIVE VILLAGER 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4
2	N/A	Kit, 12-Volt Regulator (includes items 3 through 7)	1
3	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2
4	<u>1016356</u>	Terminal Block with Insulator	1
5	101810501	Limiter, Voltage	1
6	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	2
7	<u>101962601</u>	Gasket, Voltage Limiter	1
8	<u>101827802</u>	Ground Wire Kit, 48-Volt (includes items 9 through 11)	1
9	101826801	Compression Lug	1
10	N/A	Wire Assembly, Black	1
11	<u>8990</u>	Tie Wrap, 8" Nylon	3
12	<u>101909903</u>	Onboard Computer (includes items 13 and 14)	1
13	N/A	Onboard Computer	1
14	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
15	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
16	<u>101957501</u>	Plug, 2-Way (includes item 17)	1
17	N/A	Fuse, 3/8-Amp	1
18	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
19	<u>8990</u>	Tie Wrap, 8" Nylon	1
Note: Item 8 is included in kit, but not used in this application. Item 12 is included in the kit, but is not used in this application.			

13

E

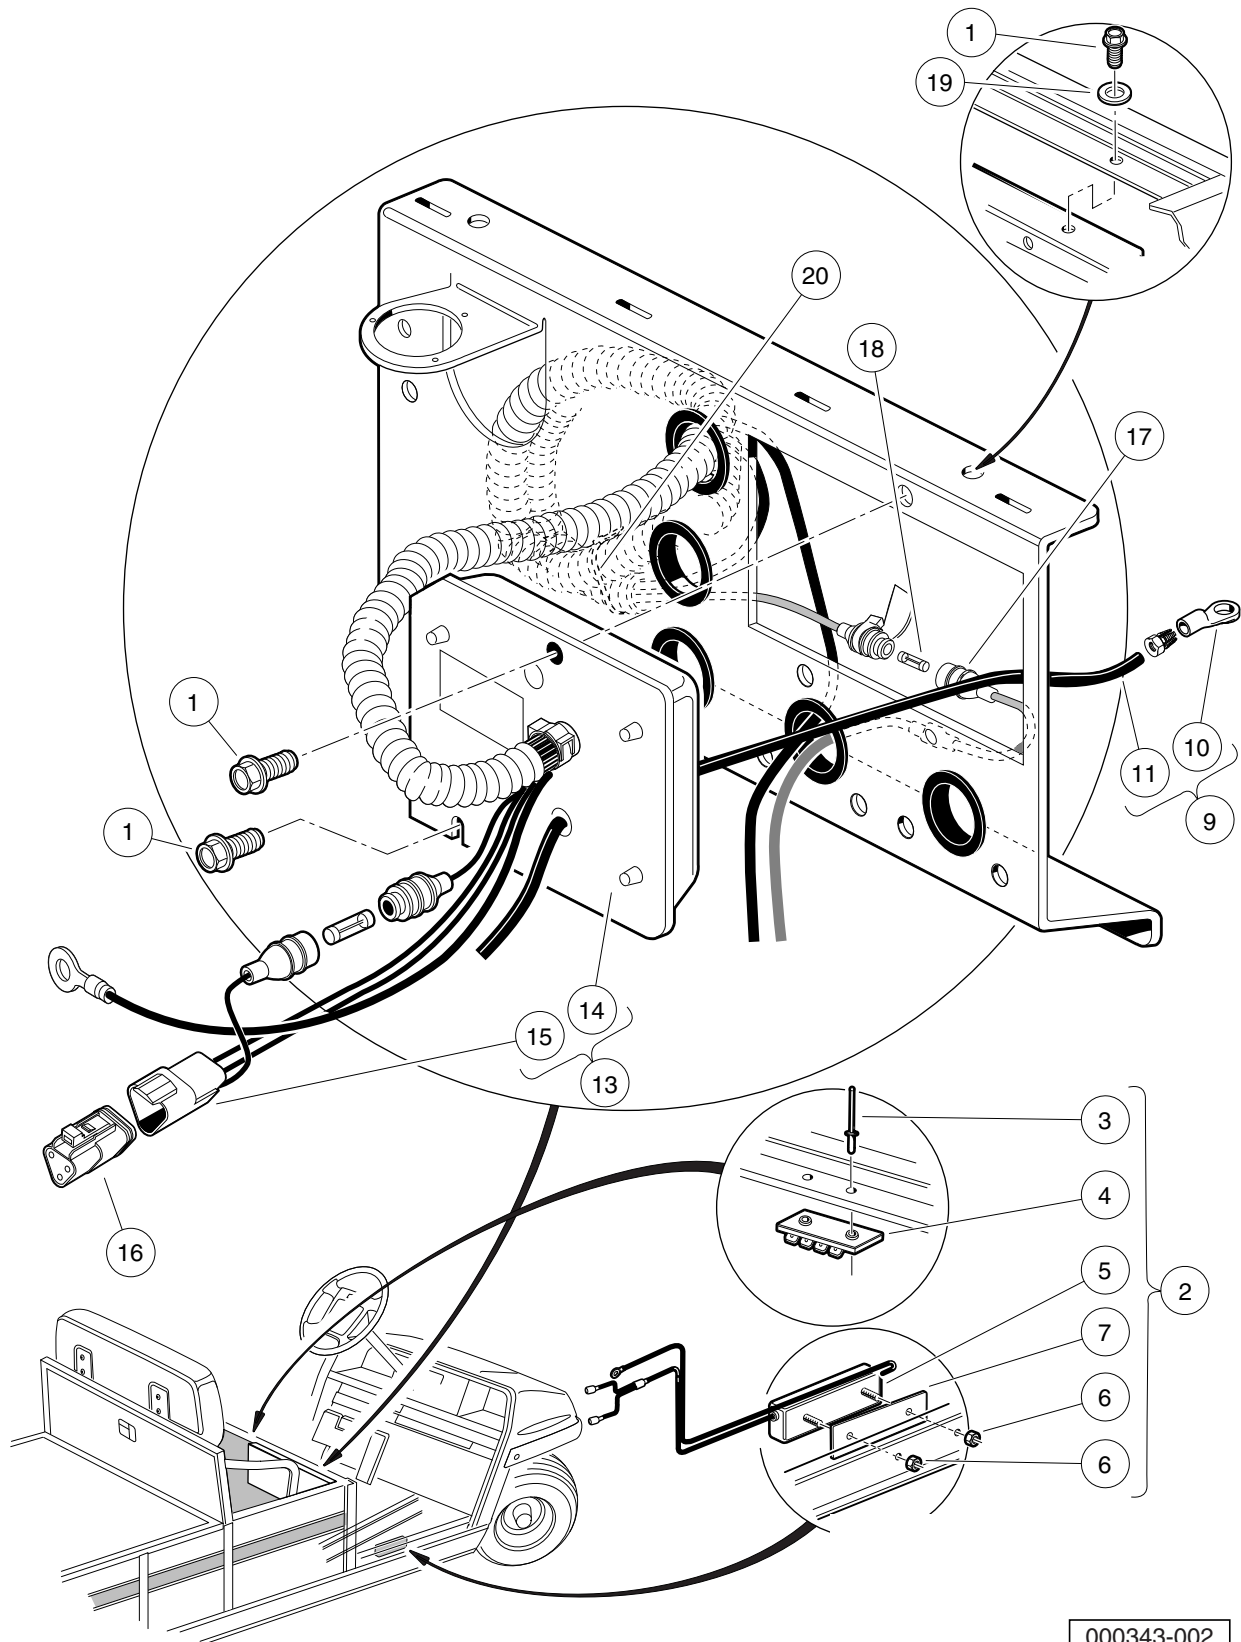


000343-002

ELECTRICAL COMPONENTS, CONTINUED – POWERDRIVE VILLAGER 8

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4
2	N/A	Kit, 12-Volt Regulator (includes items 3 through 7)	1
3	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2
4	<u>1016356</u>	Terminal Block with Insulator	1
5	101810501	Limiter, Voltage	1
6	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	2
7	<u>101962601</u>	Gasket, Voltage Limiter	1
8	N/A	Ground Wire Kit 48 Volt (includes items 9 through 11)	1
9	101826801	Compression Lug	1
10	N/A	Wire Assembly, Black	1
11	<u>8990</u>	Tie Wrap, 8" Nylon	3
12	<u>101909904</u>	Onboard Computer (includes items 13 and 14)	1
13	N/A	Onboard Computer	1
14	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
15	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
16	<u>101957501</u>	Plug, 2-Way (includes item 17)	1
17	N/A	Fuse, 3/8-Amp	1
18	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
19	<u>8990</u>	Tie Wrap, 8" Nylon	1
Note: Item 8 is included in kit, but not used in this application. Item 12 is included in the kit, but is not used in this application.			

13

E

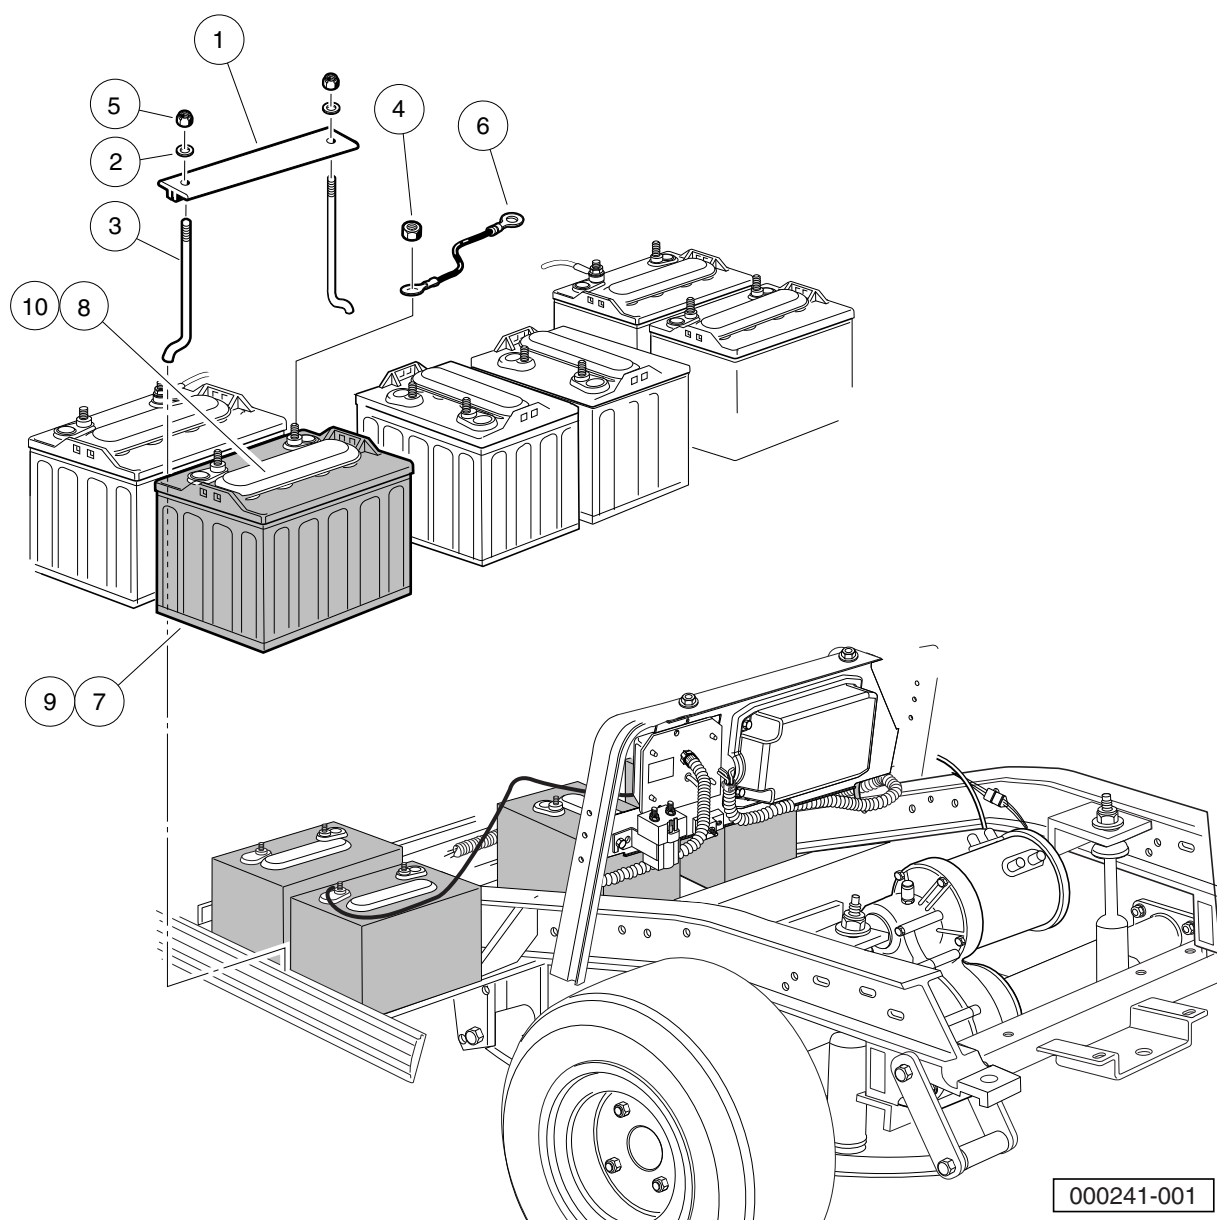


000241-001

BATTERIES – DS VILLAGER 4 WITH SIX 8-VOLT BATTERIES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101090801</u>	Hold-Down, Battery	3
2	<u>1011578</u>	Washer, 5/16 Type B Flat	6
3	<u>1013683</u>	J-Bolt	6
4	<u>1014304</u>	Nut, 5/16-18 Stainless-Steel Hex	12
5	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	6
6	<u>101795701</u>	Asm, Wire, #6blk 13in	5
7	<u>101797701</u>	Battery, 8-Volt, T875 (includes item 8)	6
8	<u>101797801</u>	Cap, 4-Gang Battery	1
9	<u>101797702</u>	Battery, 8-Volt, T875 Moist (also known as dry) (includes item 10)	6
10	<u>101797801</u>	Cap, 4-Gang Battery	1

13

E

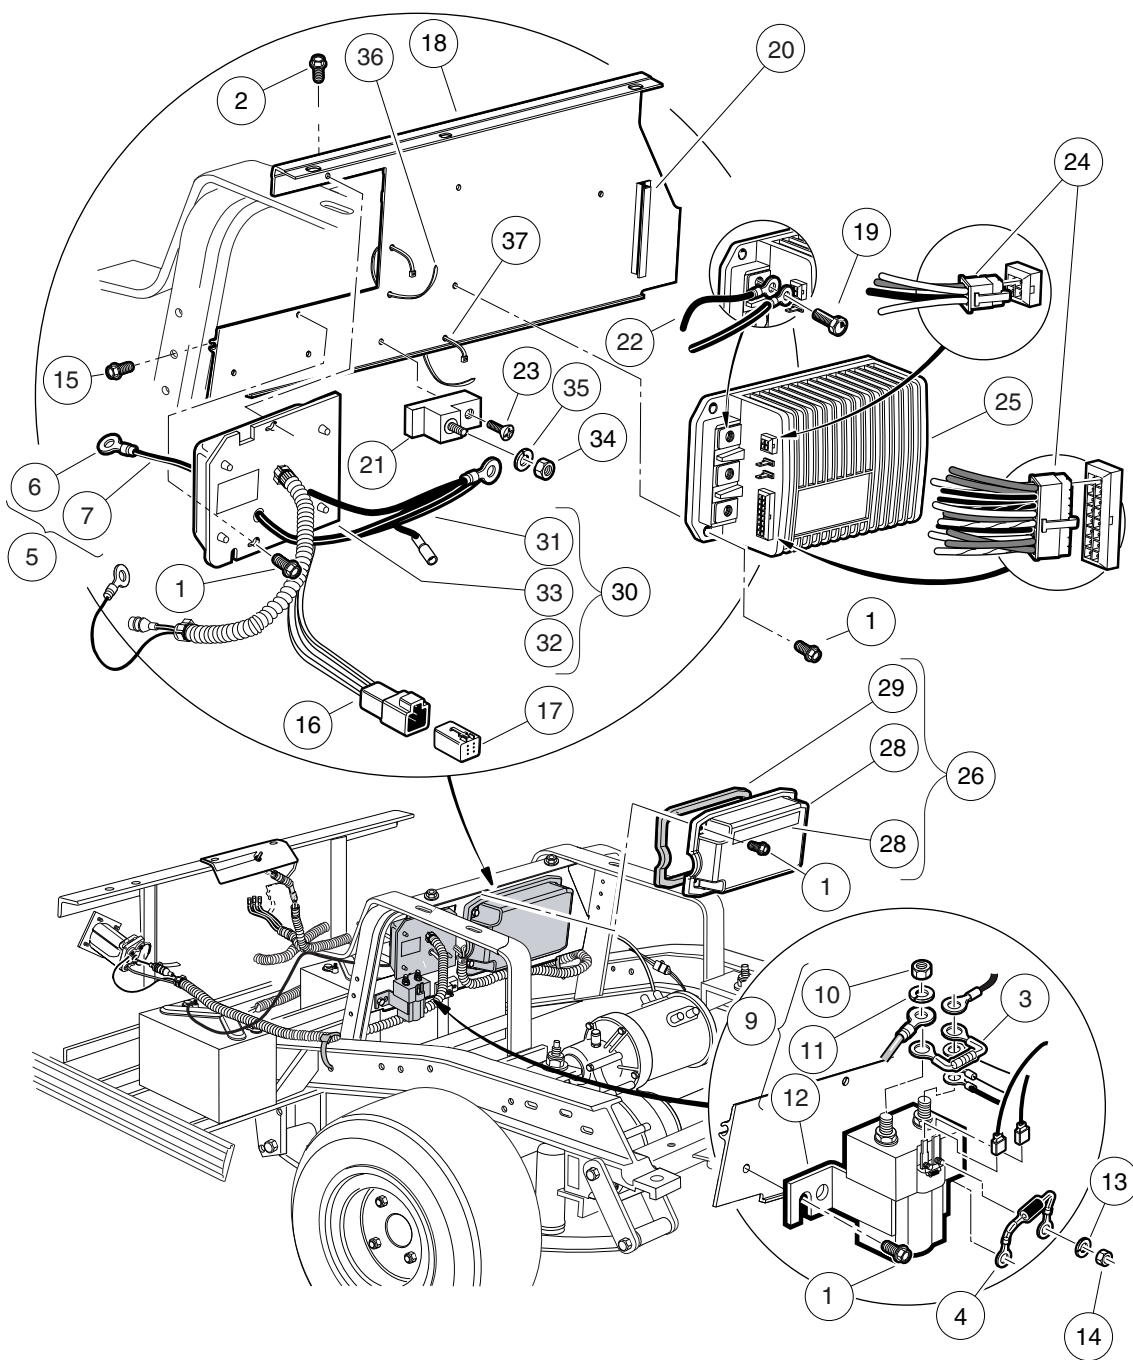


000242-006

COMPUTER, CONTROLLER, AND SOLENOID – DS VILLAGER 4 IQ SYSTEM VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	9
2	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	2
3	<u>1014947</u>	Resistor Assembly	1
4	<u>1014948</u>	Diode	1
5	<u>101827801</u>	Ground Wire Kit, 48-Volt (includes items 6 through 8)	1
6	<u>101826801</u>	Compression Lug	1
7	N/A	Wire Assembly, Black	1
8	<u>8990</u>	Tie Wrap, 8" Nylon	3
9	<u>101908701</u>	Solenoid, 48-Volt (includes items 10 through 14)	1
10	<u>1012528</u>	Nut, M8-1.25 Hex	2
11	<u>1013734</u>	Lockwasher, 8mm Split	2
12	N/A	Solenoid, 48-Volt	1
13	N/A	Washer, Lock	2
14	N/A	Nut	2
15	<u>101910401</u>	Screw, 5/16-18 X 1.25 Thrd Frm	2
16	<u>101932601</u>	Kit, 6-Pin Wedge Lock	1
17	<u>101932701</u>	Kit, 6-Pin Receptacle and Wedge Lock	1
18	<u>101965205</u>	Plate, Component Mounting	1
19	<u>102240501</u>	Bolt, Controller, Terminal	3
20	****	Extrusion, Cover Support	1
21	<u>102259801</u>	Terminal Block	1
22	<u>102263601</u>	Wire Assy, #10 Black	1
23	<u>102263701</u>	Screw, #10-24 X 0.75 Phillips, Thread-Forming	1
24	<u>102266501</u>	Kit, Connector, IQ Controller	1
25	<u>102806201</u>	Controller, IQ, 48-volt	1
26	<u>103316901</u>	Cover Asm - Controller (includes items 27 through 29)	1
27	<u>101931501</u>	Decal, Component Cover	1
28	<u>103316701</u>	Cover - Controller, Deep	1
29	<u>103316801</u>	Gasket - Controller Cover	1
30	N/A	Kit, OBC, DS and Util IQ (includes items 31 through 33)	1
31	<u>103282601</u>	Wire Assembly Black #10	1
32	N/A	Instr Obc Ds Pre 01-28-2007	1
33	<u>103403101</u>	Asm, Obc, Iq, V3.0	1
34	<u>1242</u>	Nut, 5/16-18 Hex	1
35	<u>7174</u>	Lockwasher, 5/16 Split	1
36	<u>8639</u>	Tie Wrap, 11" Nylon	1
37	<u>8990</u>	Tie Wrap, 8" Nylon	1
		**** Special order item available upon request.	

13
E

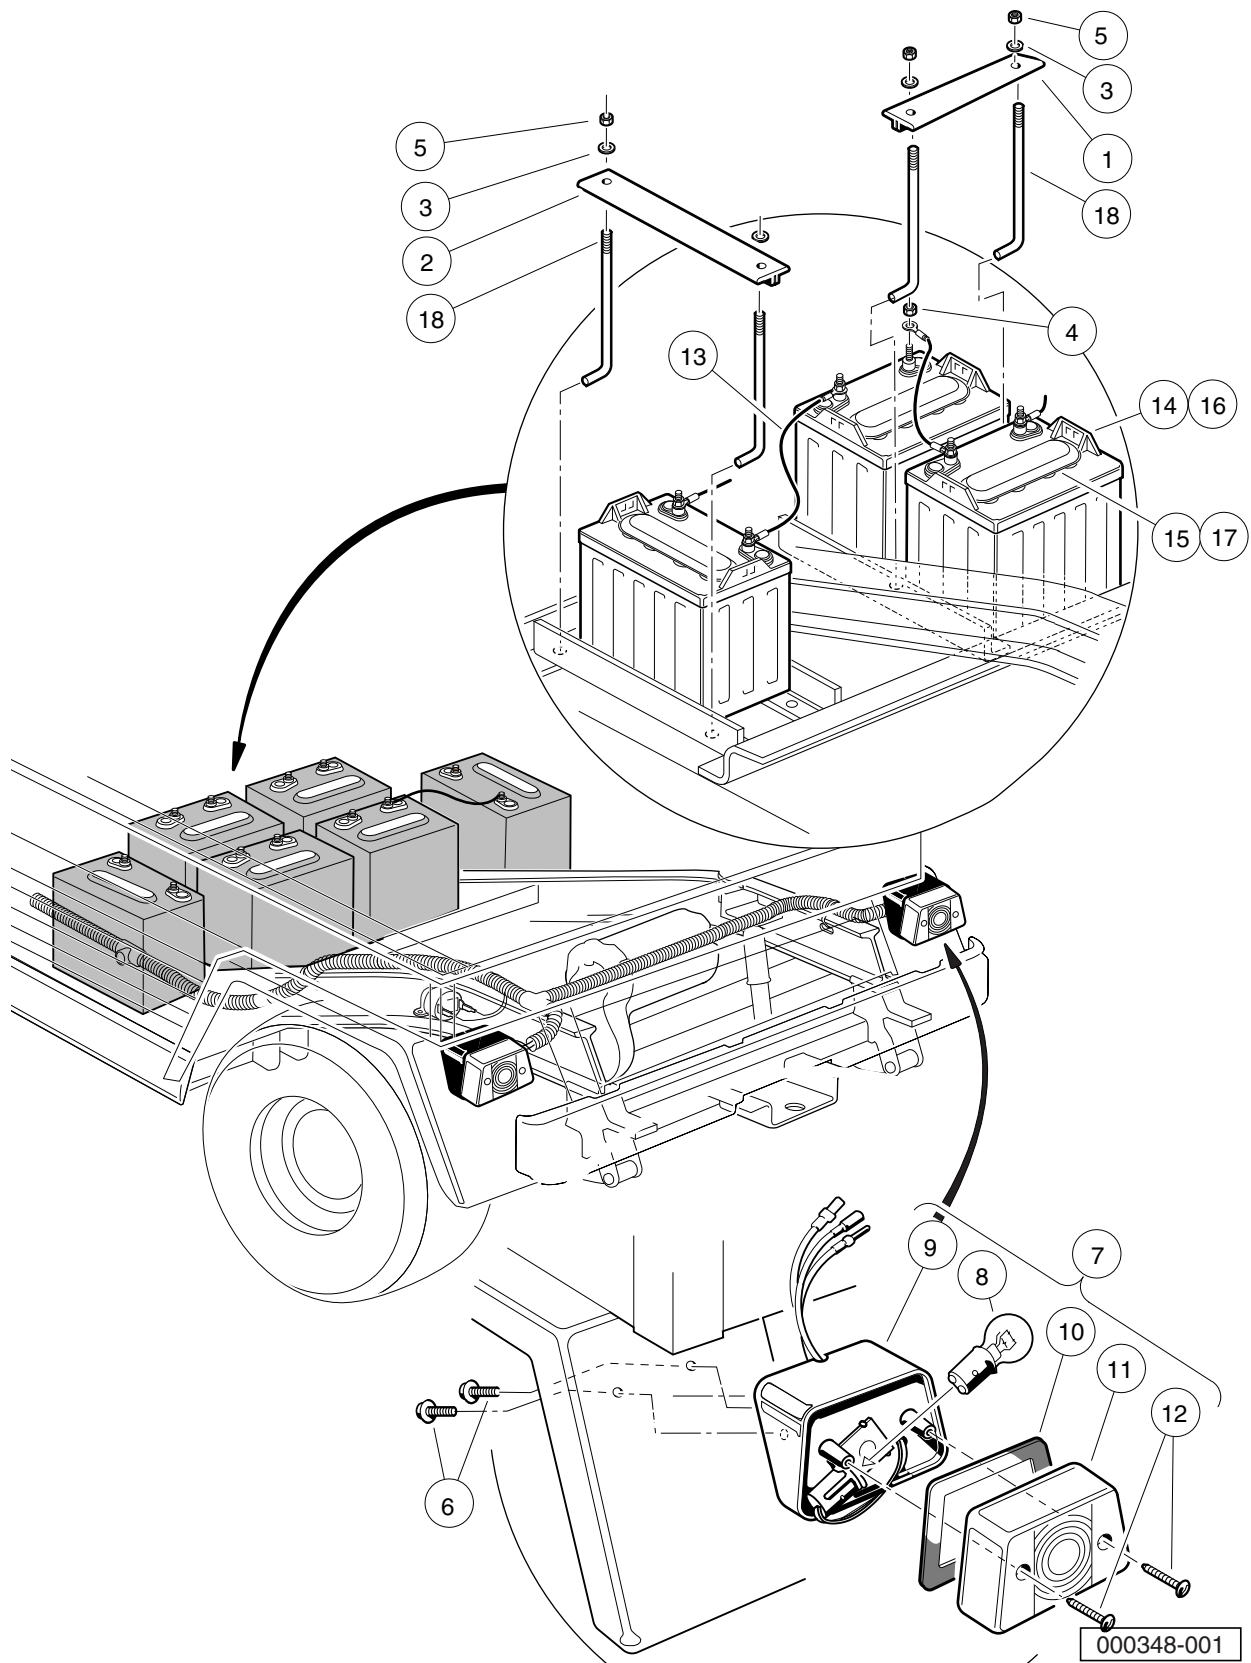


ELECTRICAL COMPONENTS, REAR BODY – TRANSPORTER 4 AND 6 POWERDRIVE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101090801</u>	Hold-Down, Battery	2
2	<u>101090802</u>	Hold-Down, Battery	2
3	<u>1011578</u>	Washer, 5/16 Type B Flat	8
4	<u>1014304</u>	Nut, 5/16-18 Stainless-Steel Hex	12
5	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	8
6	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	4
7	<u>1016717</u>	Light Assembly, Stop/Taillight (includes items 8 through 12)	2
8	<u>1011582</u>	Taillight Bulb	1
9	N/A	Housing, Taillight	1
10	N/A	Gasket, Taillight	1
11	N/A	Lens, Taillight	1
12	N/A	Screw, Taillight Lens	2
13	<u>101795701</u>	Asm, Wire, #6blk 13in	5
14	<u>101797701</u>	Battery, 8-Volt, T875 (includes item 15)	6
15	<u>101797801</u>	Cap, 4-Gang Battery	1
16	<u>101797702</u>	Battery, 8-Volt, T875 Moist (also known as dry) (includes item 17)	6
17	<u>101797801</u>	Cap, 4-Gang Battery	1
18	<u>102845203</u>	Rod, Battery Hold Down 10.7"	8

13

E

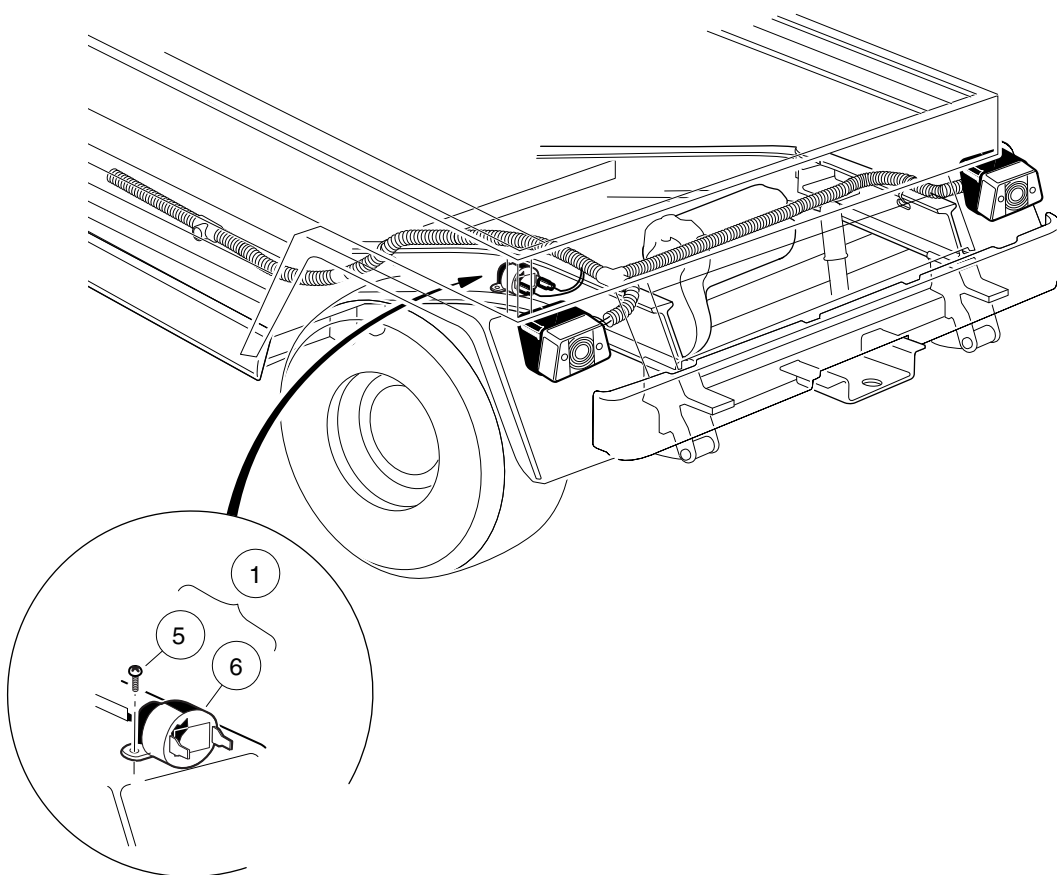


000432-001

REAR REVERSE BUZZER – TRANSPORTER 4 AND 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016859</u>	Kit, Reverse Buzzer (includes items 2 through 10)	1
2	<u>1011229</u>	Locknut, #6-32 Whiz	1
3	<u>1012431</u>	Washer, #4 Flat	2
4	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
5	<u>1016849</u>	Screw, #4-24 X 0.33 Pan-Head Machine	2
6	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
7	<u>1016857</u>	Wire Assembly Black #18	1
8	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2
9	<u>8057</u>	Nut, #4-40 Hex Machine	2
10	<u>8058</u>	Lockwasher, #4 Split	2
Note: Note: Items 2 through 4 and 7 through 10 are included in the kit, but are not used in this application.			

13

E

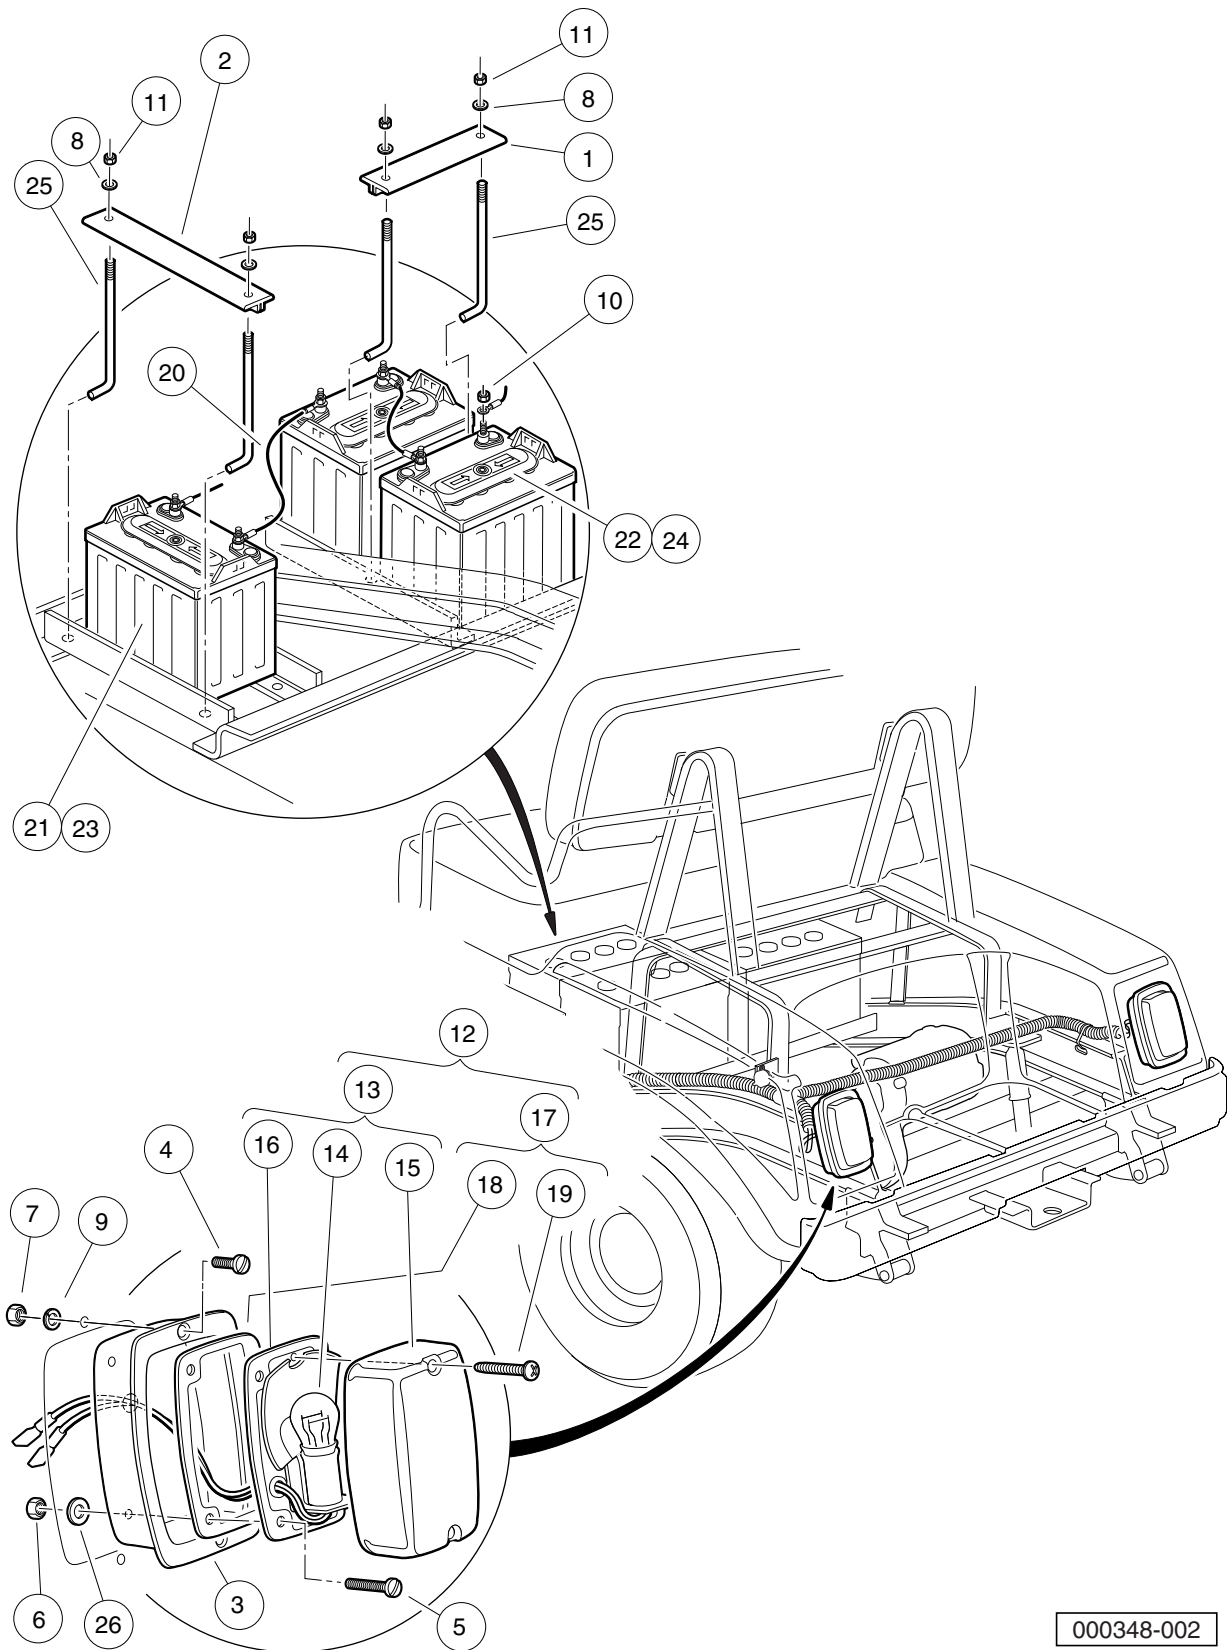


000348-002

ELECTRICAL COMPONENTS, REAR BODY – VILLAGER 6 AND 8 POWERDRIVE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101090801</u>	Hold-Down, Battery	2
2	<u>101090802</u>	Hold-Down, Battery	2
3	<u>1011497</u>	Bezel, Taillight	2
4	<u>1011498</u>	Screw, #8-32 X 0.50 Oval-Head	4
5	<u>1011557</u>	Screw, #6-32 X 1.00 Hex-Head Machine	4
6	<u>1011558</u>	Nut, #6-32 Hex	6
7	<u>1011571</u>	Nut, #8-32 Hex	4
8	<u>1011578</u>	Washer, 5/16 Type B Flat	8
9	<u>1011610</u>	Lockwasher, #8 Split Ss	4
10	<u>1014304</u>	Nut, 5/16-18 Stainless-Steel Hex	12
11	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	8
12	<u>1017035</u>	Taillight Assembly (includes items 13 through 17)	2
13	N/A	Light, Tail (includes items 14 through 16)	1
14	<u>1011582</u>	Taillight Bulb	1
15	<u>1011843</u>	Taillight Lens	1
16	N/A	Base, Taillight	1
17	<u>1017699</u>	Hardware Kit, Tail Light (includes items 18 and 19)	1
18	N/A	Gasket	1
19	N/A	Screw, Tapered	2
20	<u>101795701</u>	Asm, Wire, #6blk 13in	5
21	<u>101797701</u>	Battery, 8-Volt, T875 (includes item 22)	6
22	<u>101797801</u>	Cap, 4-Gang Battery	1
23	<u>101797702</u>	Battery, 8-Volt, T875 Moist (also known as dry) (includes item 24)	6
24	<u>101797801</u>	Cap, 4-Gang Battery	1
25	<u>102845203</u>	Rod, Battery Hold Down 10.7"	8
26	<u>7591</u>	Washer, #6 Flat	4

13
E

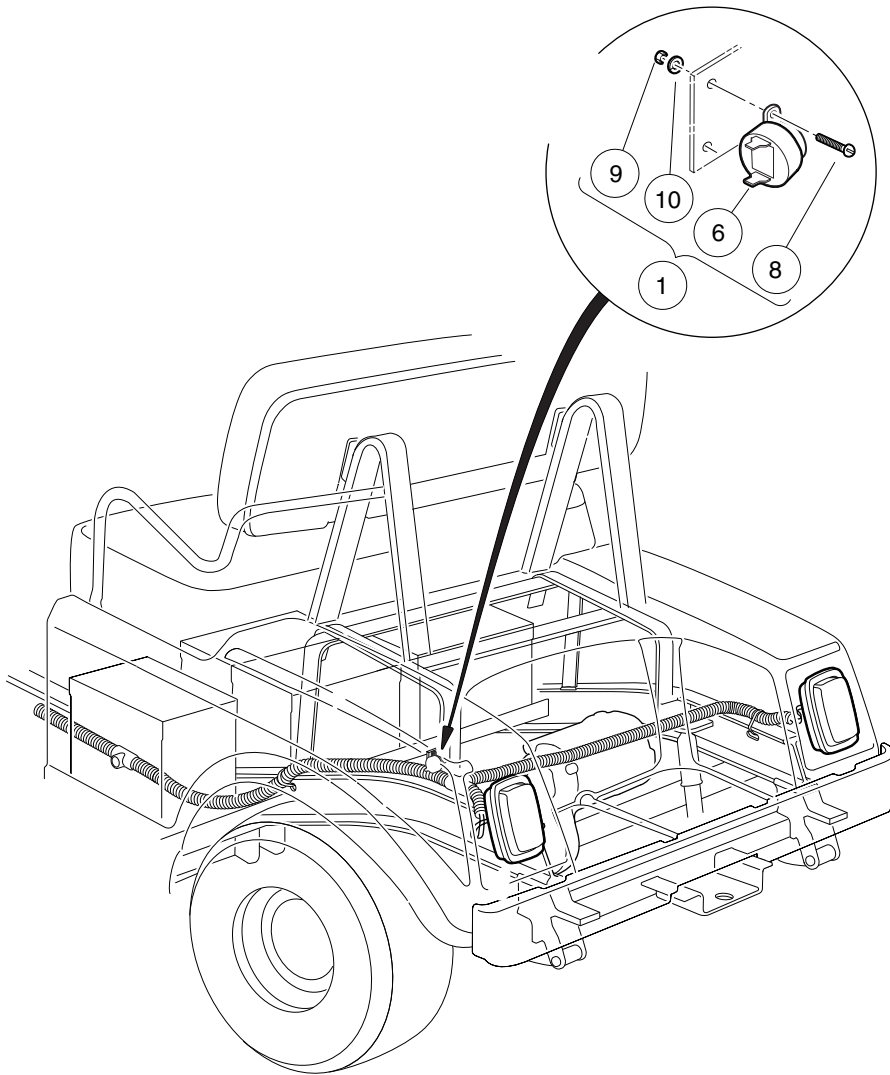

000433-001

REAR REVERSE BUZZER – VILLAGER 6 AND 8


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016859</u>	Kit, Reverse Buzzer (includes items 2 through 10)	1
2	<u>1011229</u>	Locknut, #6-32 Whiz	1
3	<u>1012431</u>	Washer, #4 Flat	2
4	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
5	<u>1016849</u>	Screw, #4-24 X 0.33 Pan-Head Machine	2
6	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
7	<u>1016857</u>	Wire Assembly Black #18	1
8	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2
9	<u>8057</u>	Nut, #4-40 Hex Machine	2
10	<u>8058</u>	Lockwasher, #4 Split	2
Note: Note: Items 2 through 5 and 7 are included in the kit, but are not used in this application.			

13
E

ELECTRIC MOTOR

14

E

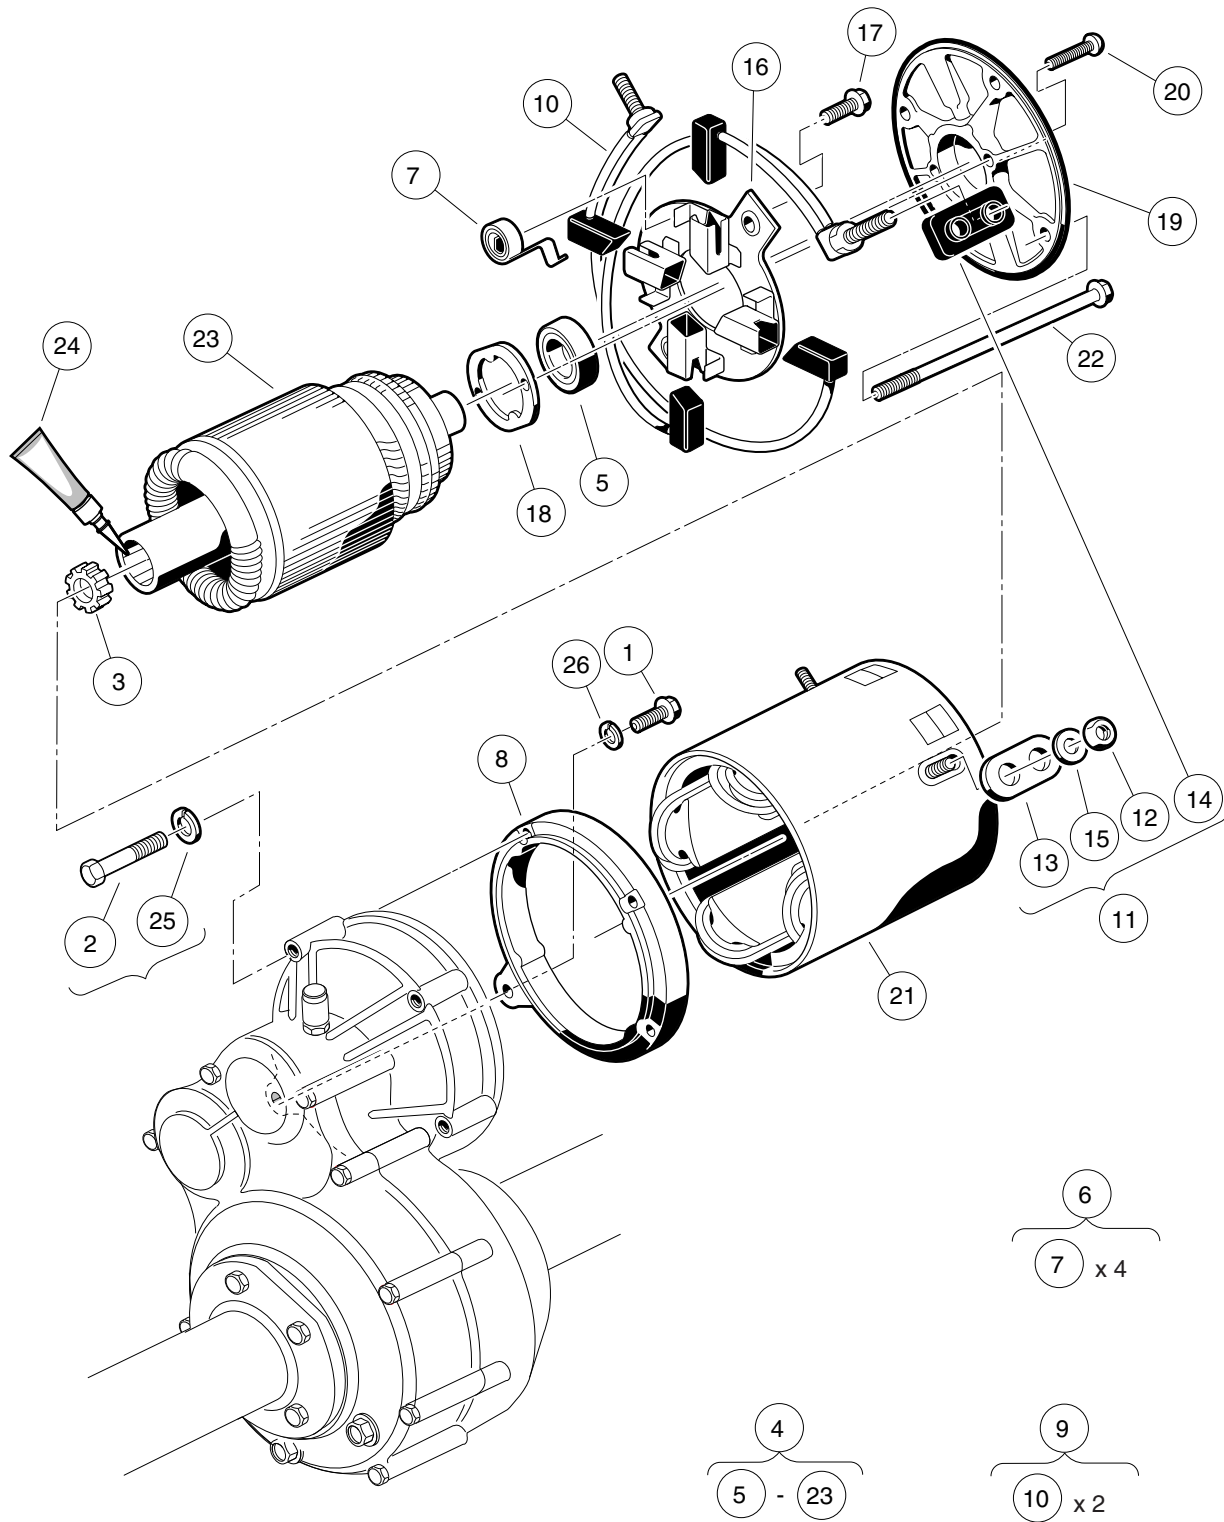


000350-001

MOTOR (MODEL 5BC59JBS6360) – POWERDRIVE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1
2	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	3
3	<u>102235201</u>	Bumper, Drive Unit	1
4	<u>102237701</u>	Motor, 48-Volt Series, 3.10 hp (includes items 5 through 23)	1
5	<u>1011290</u>	Ball Bearing	1
6	<u>1011411</u>	Kit, Brush Spring (ge Motor) (includes item 7)	1
7	<u>1011285</u>	Brush Spring	4
8	<u>1017944</u>	End Shield	1
9	N/A	Brush Package (includes item 10)	1
10	N/A	Brush with Screw	2
11	<u>1017947</u>	Hardware Package (includes items 12 through 15)	1
12	<u>1011280</u>	Locknut, 5/16-18	4
13	N/A	Insulator Bushing	2
14	N/A	Insulated Bushing	2
15	<u>1241</u>	Washer, 5/16 Type A Flat	4
16	<u>1017948</u>	Brush Rigging	1
17	<u>1017949</u>	Screw, #6-32 X 0.480 Hex-Head	2
18	<u>1017950</u>	Bearing Retainer	1
19	<u>1017951</u>	End Shield	1
20	<u>1017953</u>	Screw, Bearing Retainer	2
21	<u>1017958</u>	Stator Shell and Winding, 48-Volt, 3.15 hp	1
22	<u>1017961</u>	Clamp Screw	4
23	N/A	Armature, Series	1
24	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
25	<u>451</u>	Lockwasher, 1/4 Split	3
26	<u>7174</u>	Lockwasher, 5/16 Split	1

14

E

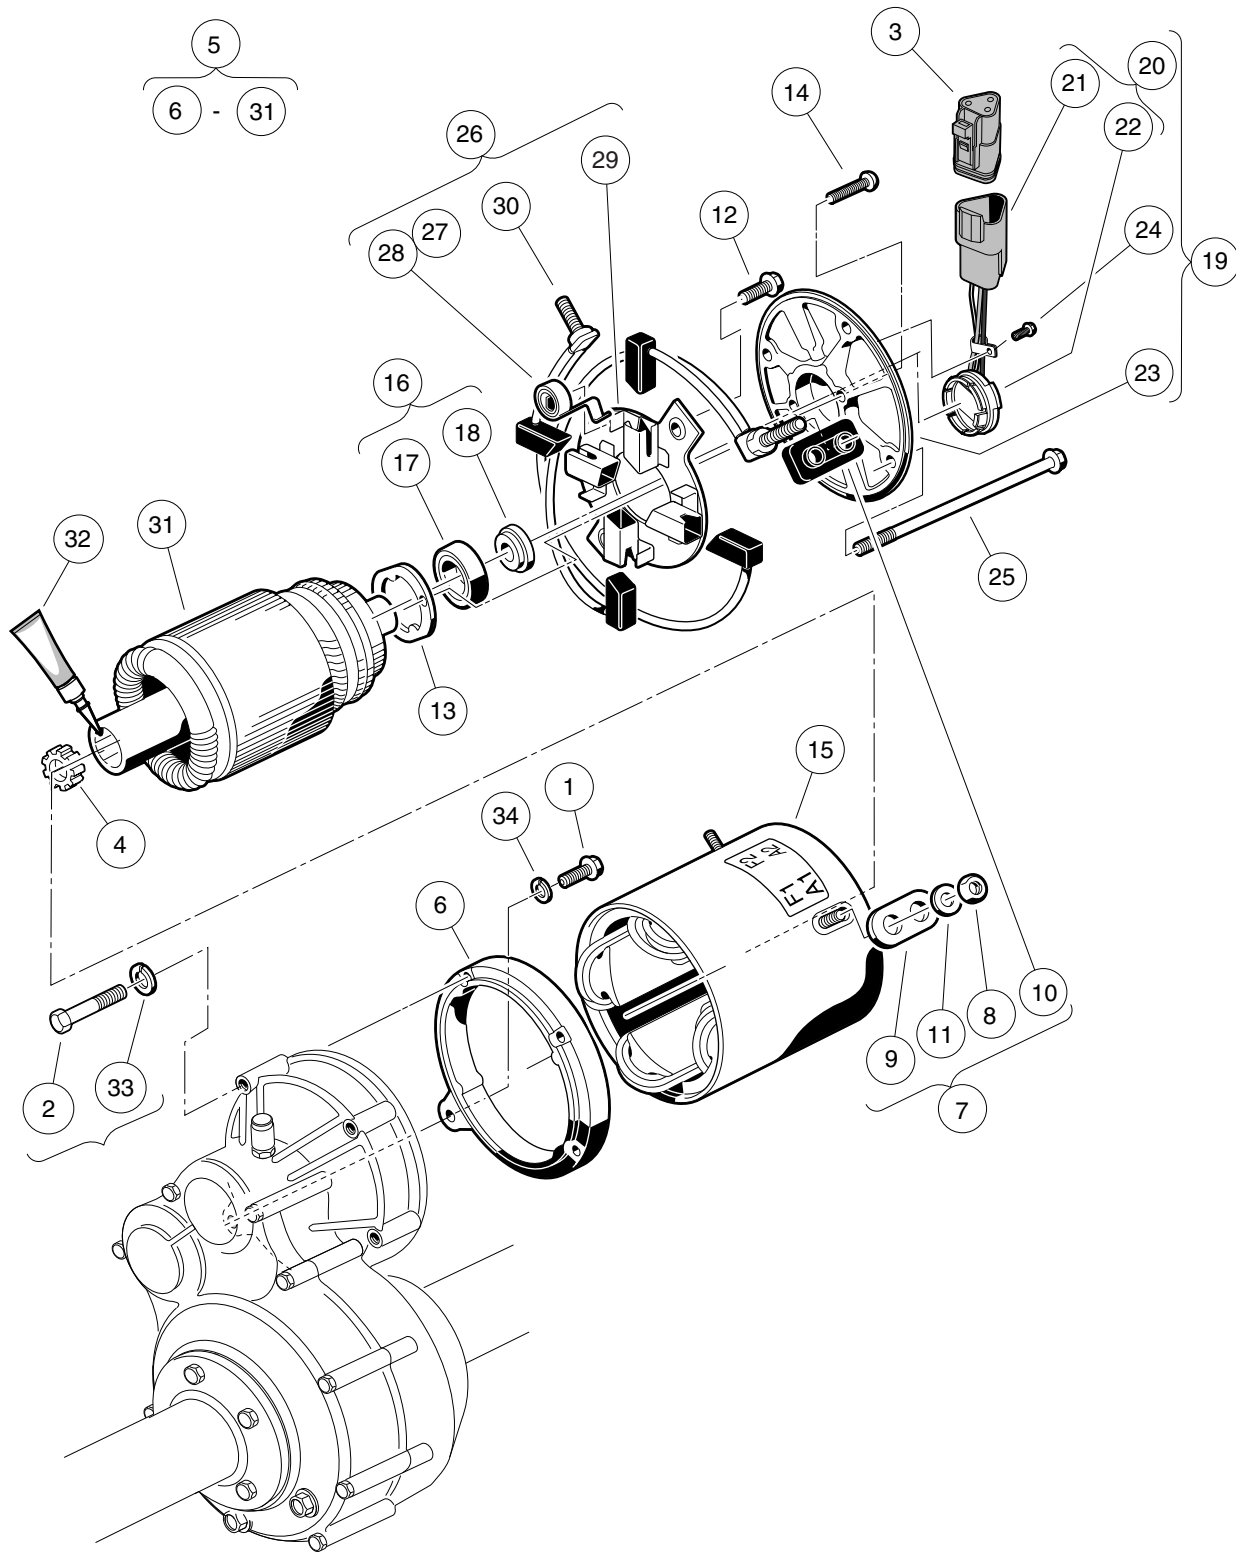


000349-001

MOTOR (MODEL 5BC59JBS6365) – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1
2	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	3
3	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
4	<u>102235201</u>	Bumper, Drive Unit	1
5	<u>102240102</u>	Motor, 48-Volt Shunt-Wound * (includes items 6 through 31)	1
6	<u>1017944</u>	End Shield	1
7	<u>1017947</u>	Hardware Package (includes items 8 through 11)	1
8	<u>1011280</u>	Locknut, 5/16-18	4
9	N/A	Insulator Bushing	2
10	N/A	Insulated Bushing	2
11	<u>1241</u>	Washer, 5/16 Type A Flat	4
12	<u>1017949</u>	Screw, #6-32 X 0.480 Hex-Head	2
13	<u>1017950</u>	Bearing Retainer	1
14	<u>1017953</u>	Screw, Bearing Retainer	2
15	<u>102265501</u>	Stator Shell and Winding	1
16	<u>102265701</u>	Kit, Bearing and Magnet (includes items 17 and 18)	1
17	<u>1011290</u>	Ball Bearing	1
18	<u>102265801</u>	Magnet	1
19	<u>102265901</u>	Motor End Shield Asm (includes items 20 through 24)	1
20	<u>102265601</u>	Speed Sensor Assembly (includes items 21 and 22)	1
21	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
22	N/A	Sensor, Speed, without Connector	1
23	<u>102266001</u>	End Shield, Motor	1
24	<u>102267001</u>	Screw, #8-32 X 0.375 Hex-Head	1
25	<u>102266101</u>	Screw, #10 - 32 X 8.250	4
26	<u>102327801</u>	Brush Assembly, Beveled (includes items 27 through 30)	1
27	<u>1011411</u>	Kit, Brush Spring (ge Motor) (includes item 28)	1
28	<u>1011285</u>	Brush Spring	4
29	<u>1017948</u>	Brush Rigging	1
30	<u>102251901</u>	Brush Kit, Motor	1
31	N/A	Armature	1
32	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
33	<u>451</u>	Lockwasher, 1/4 Split	3
34	<u>7174</u>	Lockwasher, 5/16 Split	1
* Note: The model 5BC59JBS6365 motor has been discontinued. To replace the motor, use motor model EJ8-4001A.			

14
E

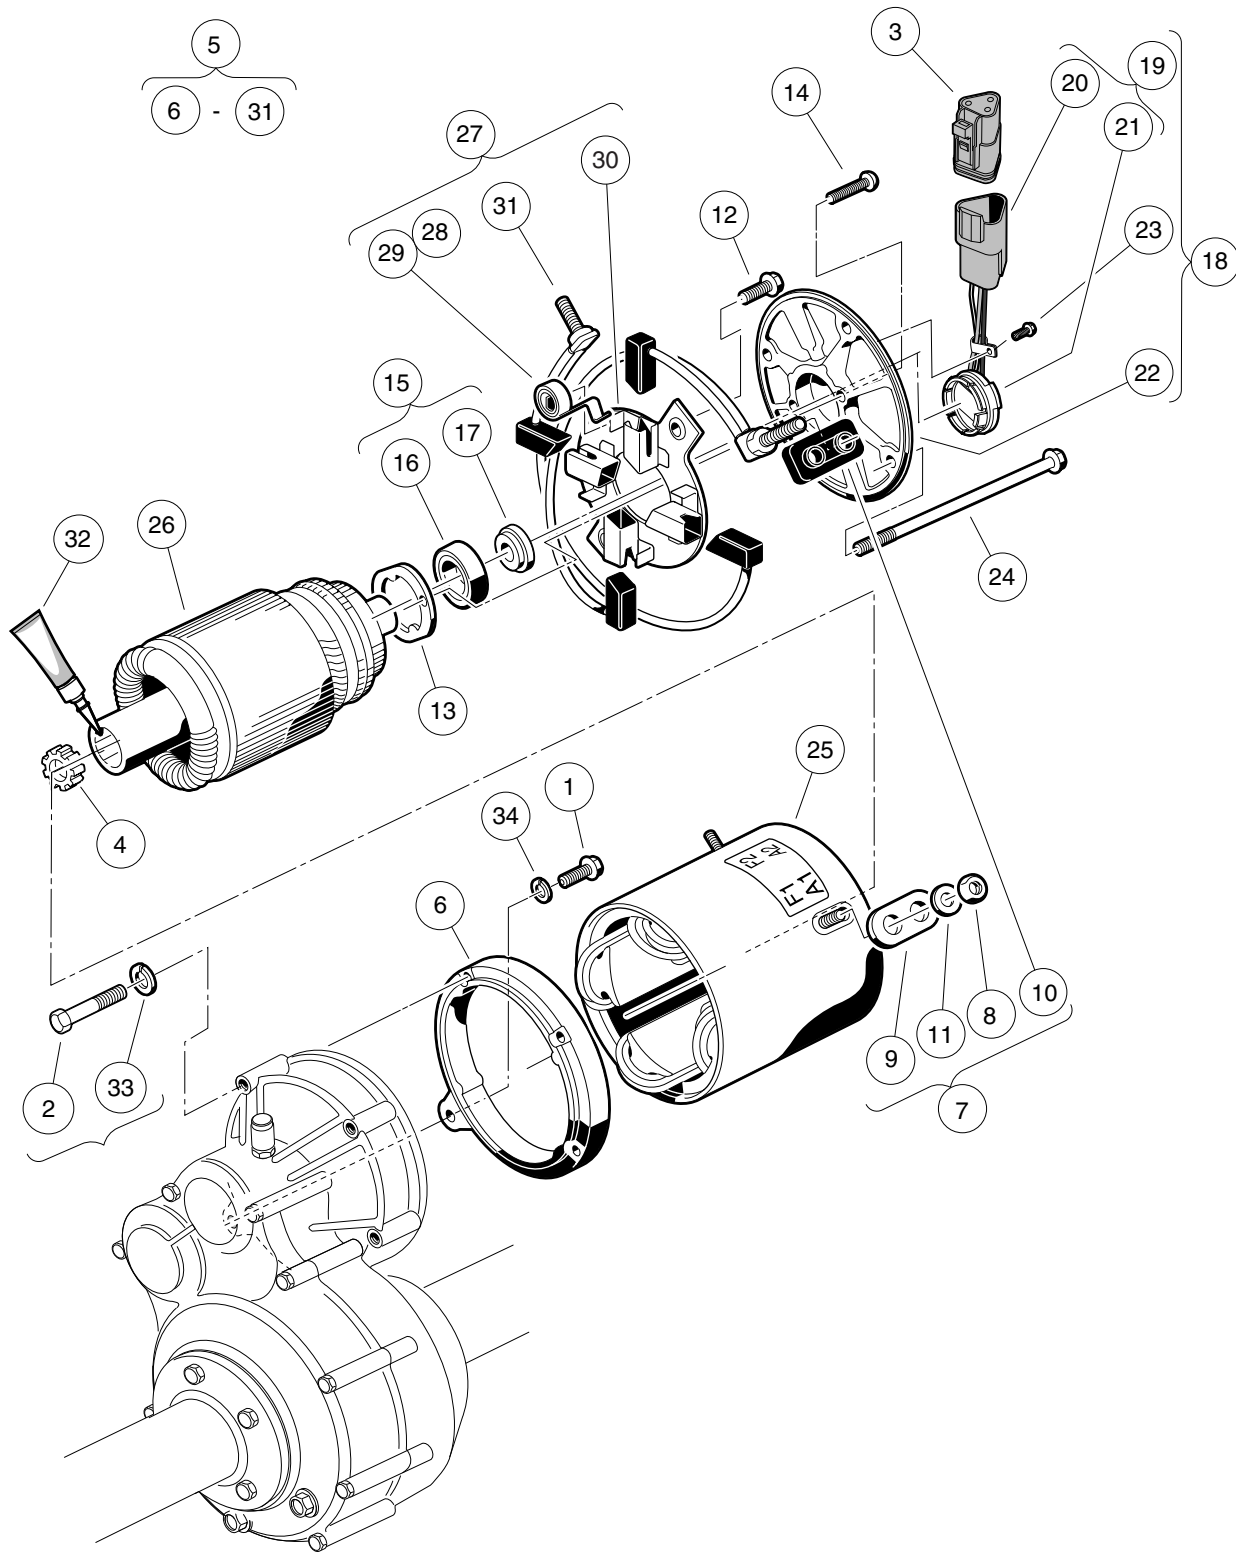


000349-002

MOTOR (MODEL 5BC59JBS6390) – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1
2	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	3
3	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
4	<u>102235201</u>	Bumper, Drive Unit	1
5	<u>102240104</u>	Motor, 48-Volt Non-Skew IQ * (includes items 6 through 27)	1
6	<u>1017944</u>	End Shield	1
7	<u>1017947</u>	Hardware Package (includes items 8 through 11)	1
8	<u>1011280</u>	Locknut, 5/16-18	4
9	N/A	Insulator Bushing	2
10	N/A	Insulated Bushing	2
11	<u>1241</u>	Washer, 5/16 Type A Flat	4
12	<u>1017949</u>	Screw, #6-32 X 0.480 Hex-Head	2
13	<u>1017950</u>	Bearing Retainer	1
14	<u>1017953</u>	Screw, Bearing Retainer	2
15	<u>102265701</u>	Kit, Bearing and Magnet (includes items 16 and 17)	1
16	<u>1011290</u>	Ball Bearing	1
17	<u>102265801</u>	Magnet	1
18	<u>102265901</u>	Motor End Shield Asm (includes items 19 through 23)	1
19	<u>102265601</u>	Speed Sensor Assembly (includes items 20 and 21)	1
20	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
21	N/A	Sensor, Speed, without Connector	1
22	<u>102266001</u>	End Shield, Motor	1
23	<u>102267001</u>	Screw, #8-32 X 0.375 Hex-Head	1
24	<u>102266101</u>	Screw, #10 - 32 X 8.250	4
25	<u>103325701</u>	Stator Shell and Winding	1
26	<u>103325801</u>	Non Skew Armature	1
27	<u>103337601</u>	Brush Assembly, IQ Motor, Non-Skew (includes items 28 through 31)	1
28	<u>1011411</u>	Kit, Brush Spring (ge Motor) (includes item 29)	1
29	<u>1011285</u>	Brush Spring	4
30	<u>103325501</u>	Brush Rigging, Non-Skew Motor	1
31	<u>103325601</u>	Brush Set, Non-Skew	1
32	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
33	<u>451</u>	Lockwasher, 1/4 Split	3
34	<u>7174</u>	Lockwasher, 5/16 Split	1
* Note: The model 5BC59JBS6390 motor has been discontinued. To replace the motor, use motor model EJ8-4001A.			

14
E

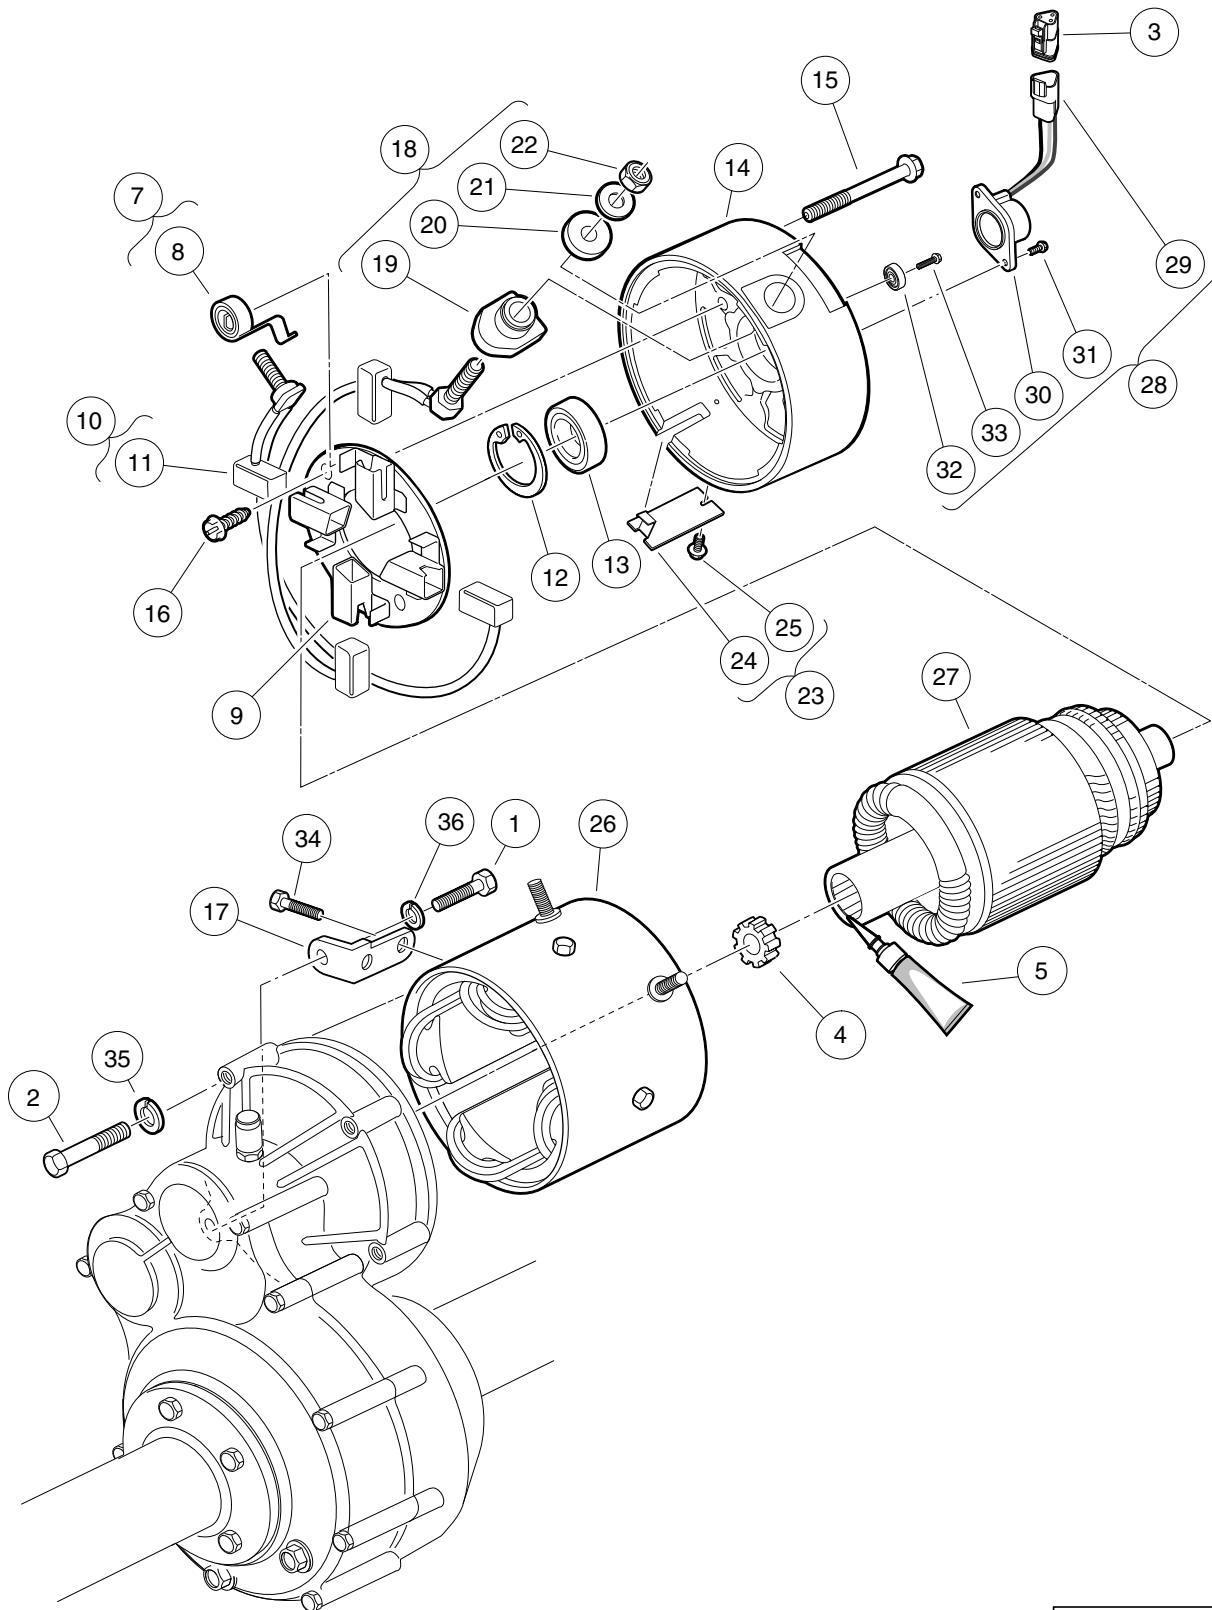


000185-001

MOTOR (MODEL EJ4-4001) – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1
2	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	3
3	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
4	<u>102235201</u>	Bumper, Drive Unit	1
5	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
6	<u>102705001</u>	IQ Electric Motor, 48-VDC 3.3 hp * (includes items 7 through 34)	1
7	<u>102186001</u>	Spring Kit, Motor Brush (includes item 8)	1
8	N/A	Spring, Brush, S-g	4
9	<u>102186101</u>	Brush Box Assembly	1
10	<u>102186201</u>	Brush Kit, Motor (includes item 11)	1
11	N/A	Assembly, Brush and Terminal	2
12	<u>102186301</u>	Ring, 2.24" Internal Retaining	1
13	<u>102186401</u>	Bearing, Ball	1
14	<u>102186701</u>	End Cap, Motor	1
15	N/A	Screw, 1/4-20 X 2.25 Hex-Head Washer	2
16	<u>102186901</u>	Screw, #8-32 X .5 Hex-Head	2
17	<u>102187001</u>	L-Bracket, Motor	1
18	<u>102187101</u>	Hardware Kit, Motor Terminal (includes items 19 through 22)	2
19	N/A	Bushing, Nylon	2
20	N/A	Washer, Nylon Flat	2
21	N/A	Washer, Flat, 5/16 Steel	2
22	N/A	Nut, Brass Hex, 5/16 - 18	2
23	<u>102187201</u>	Plate Kit, Motor Cover (includes items 24 and 25)	1
24	N/A	Assembly, Cover Plate	1
25	N/A	Screw, #8-32 x 0.375, Taptite Thread	1
26	<u>102704701</u>	Frame and Field Assembly	1
27	<u>102704801</u>	Armature Assembly	1
28	<u>102704901</u>	Kit, Speed Sensor (includes items 29 through 33)	1
29	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
30	N/A	Sensor, Motor Speed, ADC	1
31	N/A	Screw, #8-32, Taptite Thread	2
32	N/A	Magnet, ADC Motor	1
33	N/A	Screw, 1/4-20 x 0.5	1
34	N/A	Bolt, 1/4 - 20 x 0.73 Thread-Forming	2
35	<u>451</u>	Lockwasher, 1/4 Split	3
36	<u>7174</u>	Lockwasher, 5/16 Split	1
* Note: The model EJ4-4001 motor has been discontinued. To replace the motor, use motor model EJ8-4001A.			

14
E

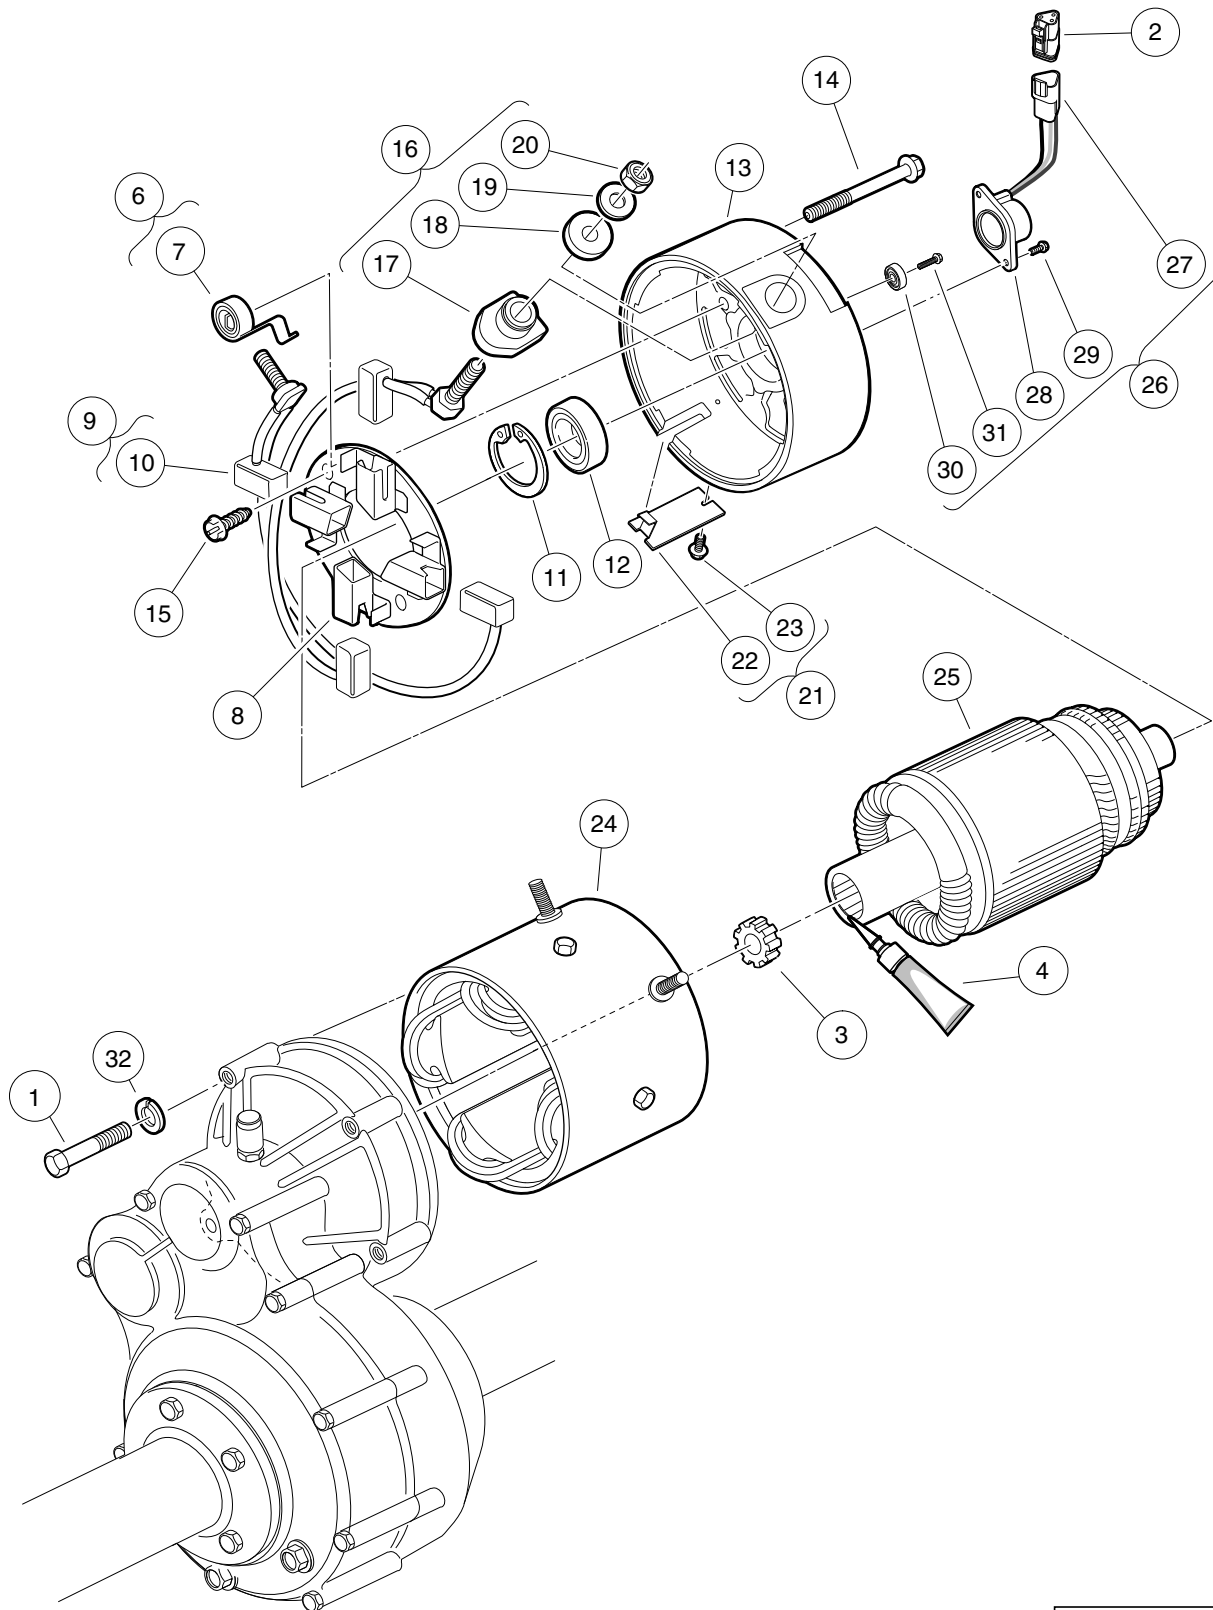

000185-002

MOTOR (MODEL EJ8-4001A) – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1014201	Screw, 1/4-20 X 2.25 Hex Cap	3
2	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
3	<u>102235201</u>	Bumper, Drive Unit	1
4	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
5	N/A	IQ Electric Motor, 48-VDC 3.3 hp (includes items 6 through 26)	1
6	<u>102186001</u>	Spring Kit, Motor Brush (includes item 7)	1
7	N/A	Spring, Brush, S-g	4
8	<u>102186101</u>	Brush Box Assembly	1
9	<u>102186201</u>	Brush Kit, Motor (includes item 10)	1
10	N/A	Assembly, Brush and Terminal	2
11	<u>102186301</u>	Ring, 2.24" Internal Retaining	1
12	<u>102186401</u>	Bearing, Ball	1
13	<u>102186701</u>	End Cap, Motor	1
14	N/A	Screw, 1/4-20 X 2.25 Hex-Head Washer	2
15	<u>102186901</u>	Screw, #8-32 X .5 Hex-Head	2
16	<u>102187101</u>	Hardware Kit, Motor Terminal (includes items 17 through 20)	2
17	N/A	Bushing, Nylon	2
18	N/A	Washer, Nylon Flat	2
19	N/A	Washer, Flat, 5/16 Steel	2
20	N/A	Nut, Brass Hex, 5/16 - 18	2
21	<u>102187201</u>	Plate Kit, Motor Cover (includes items 22 and 23)	1
22	N/A	Assembly, Cover Plate	1
23	N/A	Screw, #8-32 x 0.375, Taptite Thread	1
24	<u>102704701</u>	Frame and Field Assembly	1
25	<u>102704801</u>	Armature Assembly	1
26	<u>102704901</u>	Kit, Speed Sensor (includes items 27 through 31)	1
27	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
28	N/A	Sensor, Motor Speed, ADC	1
29	N/A	Screw, #8-32, Taptite Thread	2
30	N/A	Magnet, ADC Motor	1
31	N/A	Screw, 1/4-20 x 0.5	1
32	<u>451</u>	Lockwasher, 1/4 Split	3

14


E

TRANSAXLE – ELECTRIC VEHICLES

15

E

Note: This transaxle (as a complete unit) has been discontinued. To replace the entire transaxle, use the transaxle shown on the following pages.

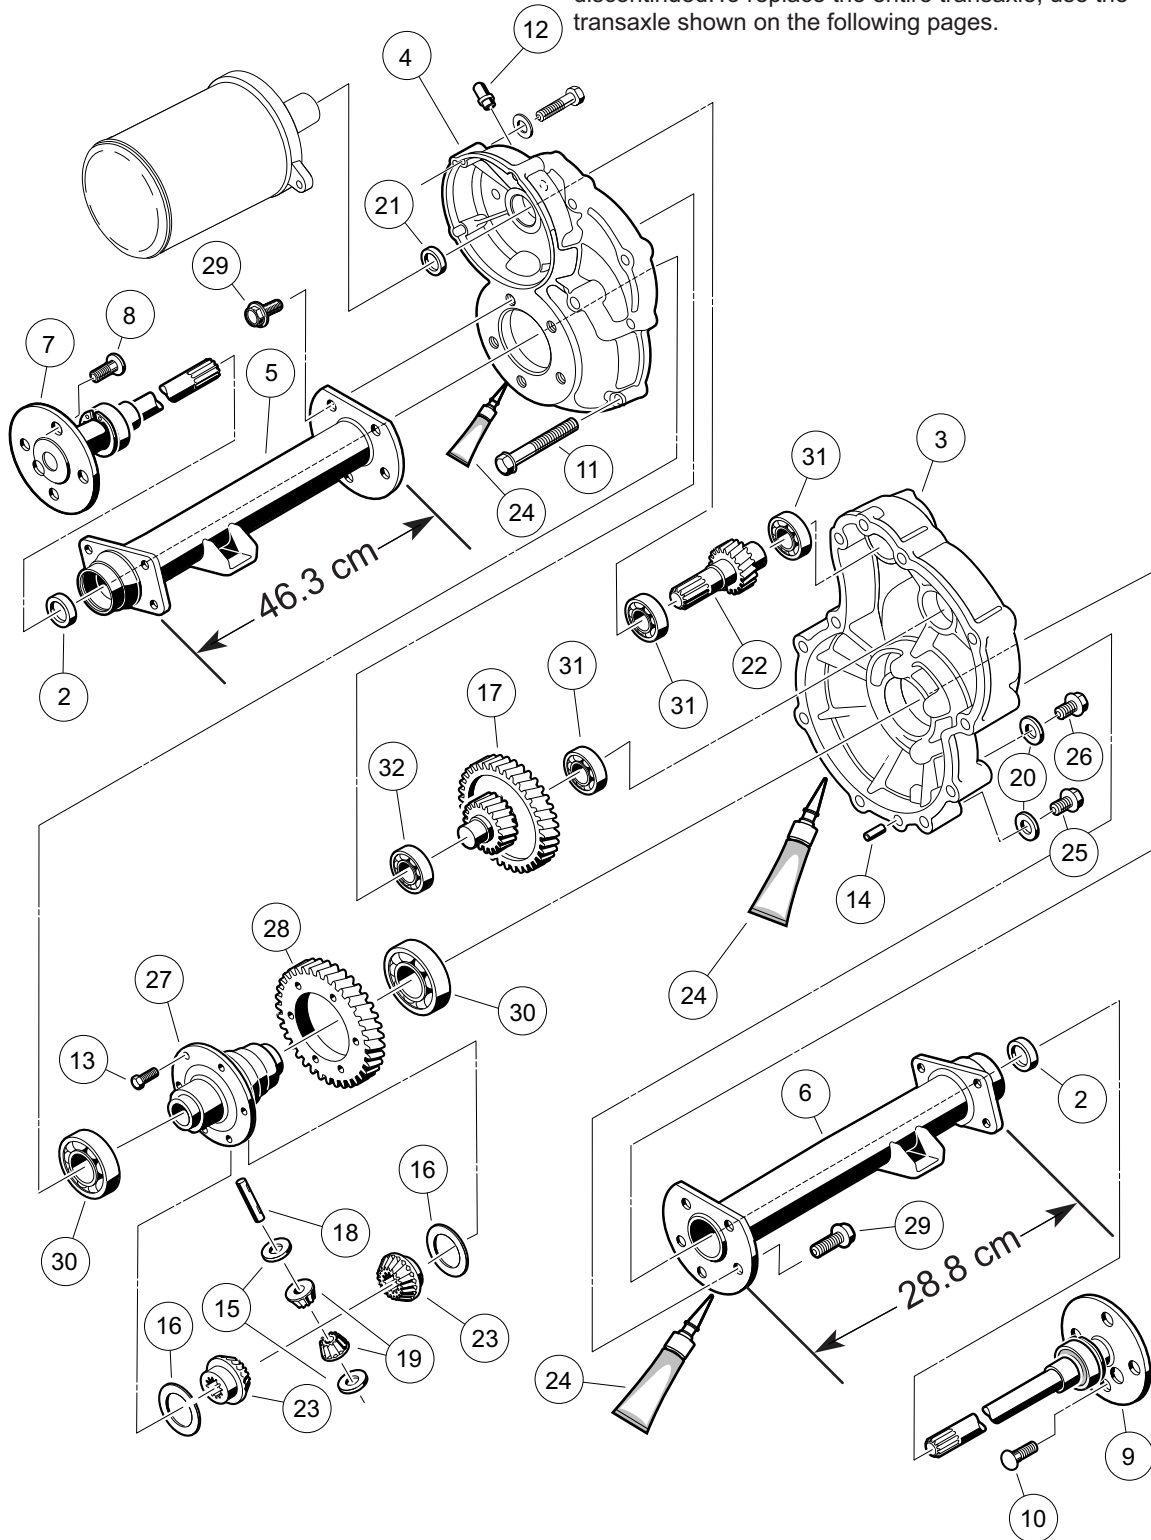


000223-001

TRANSAXLE – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>101896001</u>	1 2 3 4 Transaxle -12.3 Note: If either the Differential Output Gear (item 28) or the Differential Housing (item 27) require replacement, both must be purchased at the same time. Items 27 and 28 are replacements for all gear and differential housing combinations in this transaxle.	1

15

E

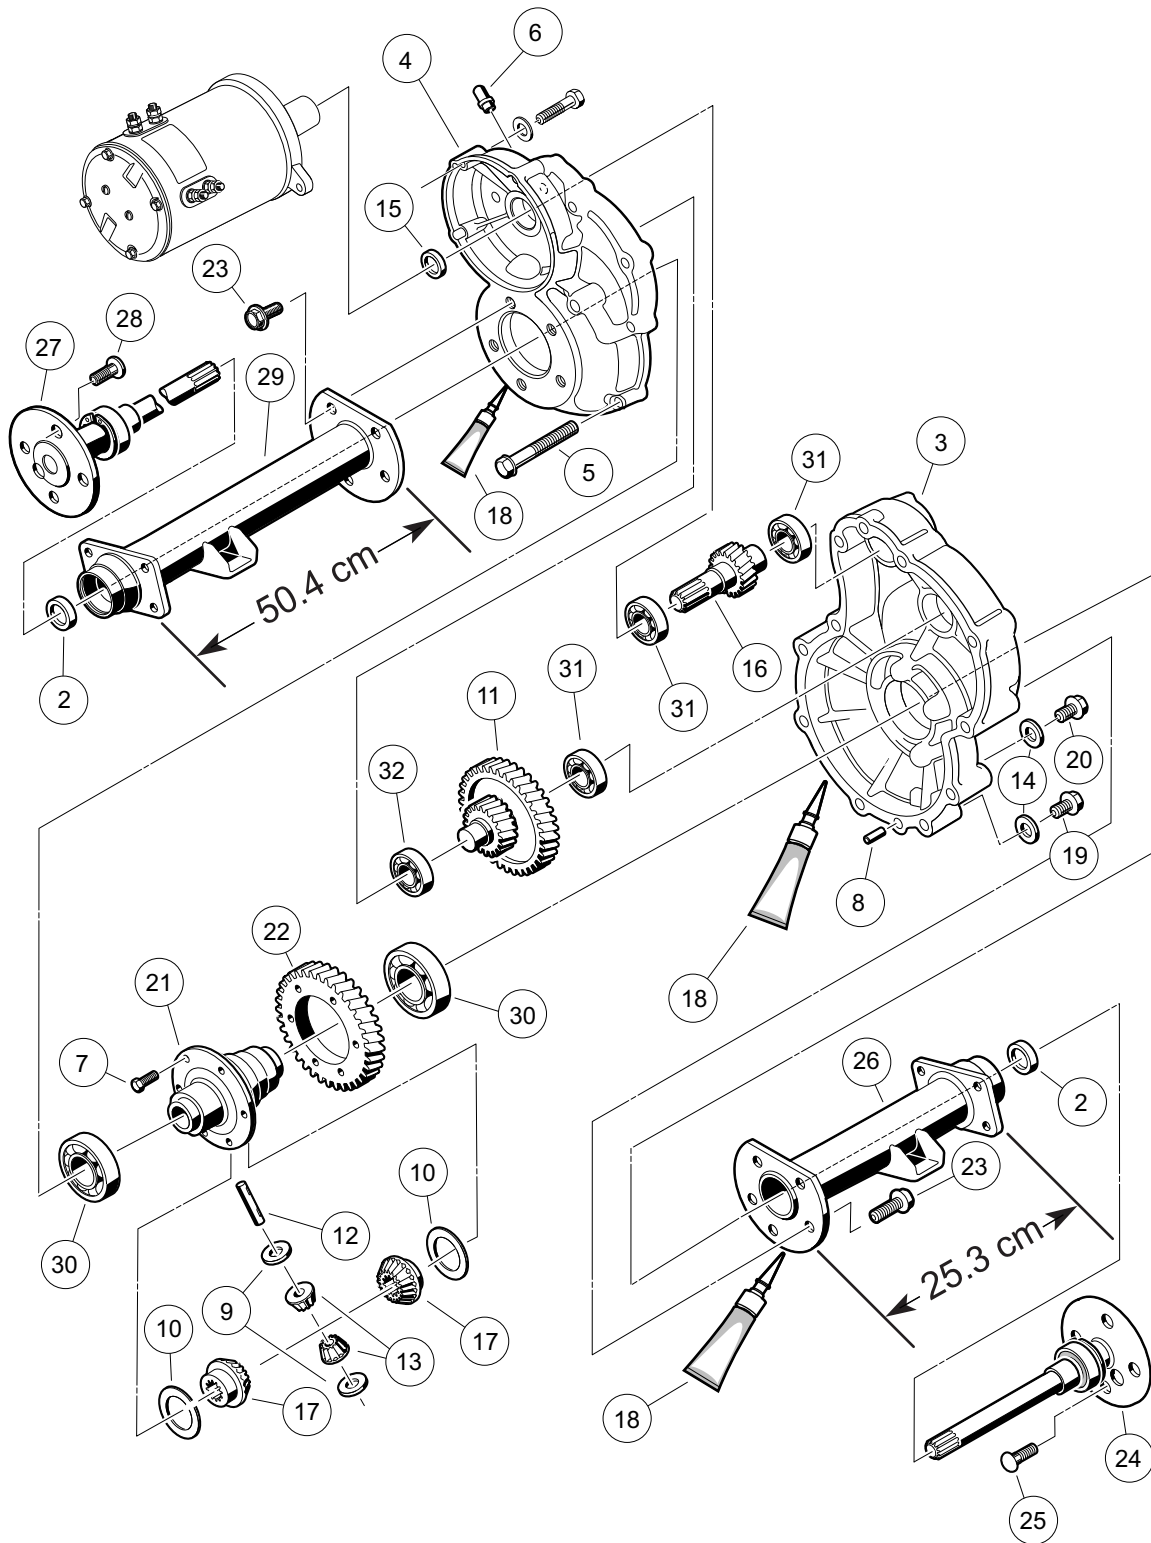

000223-002

TRANSAXLE – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102771701</u>	Transaxle, Electric (includes items 2 through 32)	1
2	<u>1013794</u>	Axle Shaft Oil Seal	2
3	<u>101895401</u>	Gear Case, Left-Hand	1
4	<u>101895501</u>	Gear Case, Passenger-Side	1
5	<u>101897001</u>	Screw, M8-1.25 X 60mm Hex-Head	11
6	<u>101897201</u>	Breather	1
7	<u>101897401</u>	Screw, M10-1.25 X 25mm	6
8	<u>101897601</u>	Pin, 11mm OD X 8.5mm ID X 10mm	2
9	<u>101903601</u>	Washer, Thrust	2
10	<u>101903701</u>	Washer, Thrust	2
11	<u>101906901</u>	Intermediate Shaft Assembly	1
12	<u>101922101</u>	Pin, 15.99mm X 88.7mm Dowel	1
13	<u>101923001</u>	Gear, Differential Idler	2
14	<u>101923201</u>	Gasket	2
15	<u>101923501</u>	Seal, Lip	1
16	<u>101923701</u>	Shaft, Input	1
17	<u>101923901</u>	Gear, Differential	2
18	<u>101928701</u>	Liquid Gasket (Transaxle case)	1
19	<u>101972101</u>	Plug, M14-1.5 X 12mm Magnetic	1
20	<u>101972201</u>	Plug, M14-1.5 X 12mm Hex	1
21	<u>102356601</u>	Housing, Differential, 6 Bolt	1
22	<u>102356801</u>	Gear, Differential Output, 6-Bolt	1
23	<u>102357001</u>	Screw, Flg Hd M10 X 1.5 X 30	10
24	<u>102886301</u>	Axle Assembly, Driver-Side (includes item 25)	1
25	<u>101922201</u>	Lug Stud	4
26	<u>102886401</u>	Tube, Axle, Driver-Side	1
27	<u>102886501</u>	Axle Assembly, Passenger-Side (includes item 28)	1
28	<u>101922201</u>	Lug Stud	4
29	<u>102886601</u>	Tube, Axle, Passenger-Side	1
30	<u>7330</u>	Inner Axle Tube Bearing	2
31	<u>7335</u>	Bearing	3
32	<u>7336</u>	Bearing	1

15

E

15

E


BATTERY CHARGER

16

E

16

E

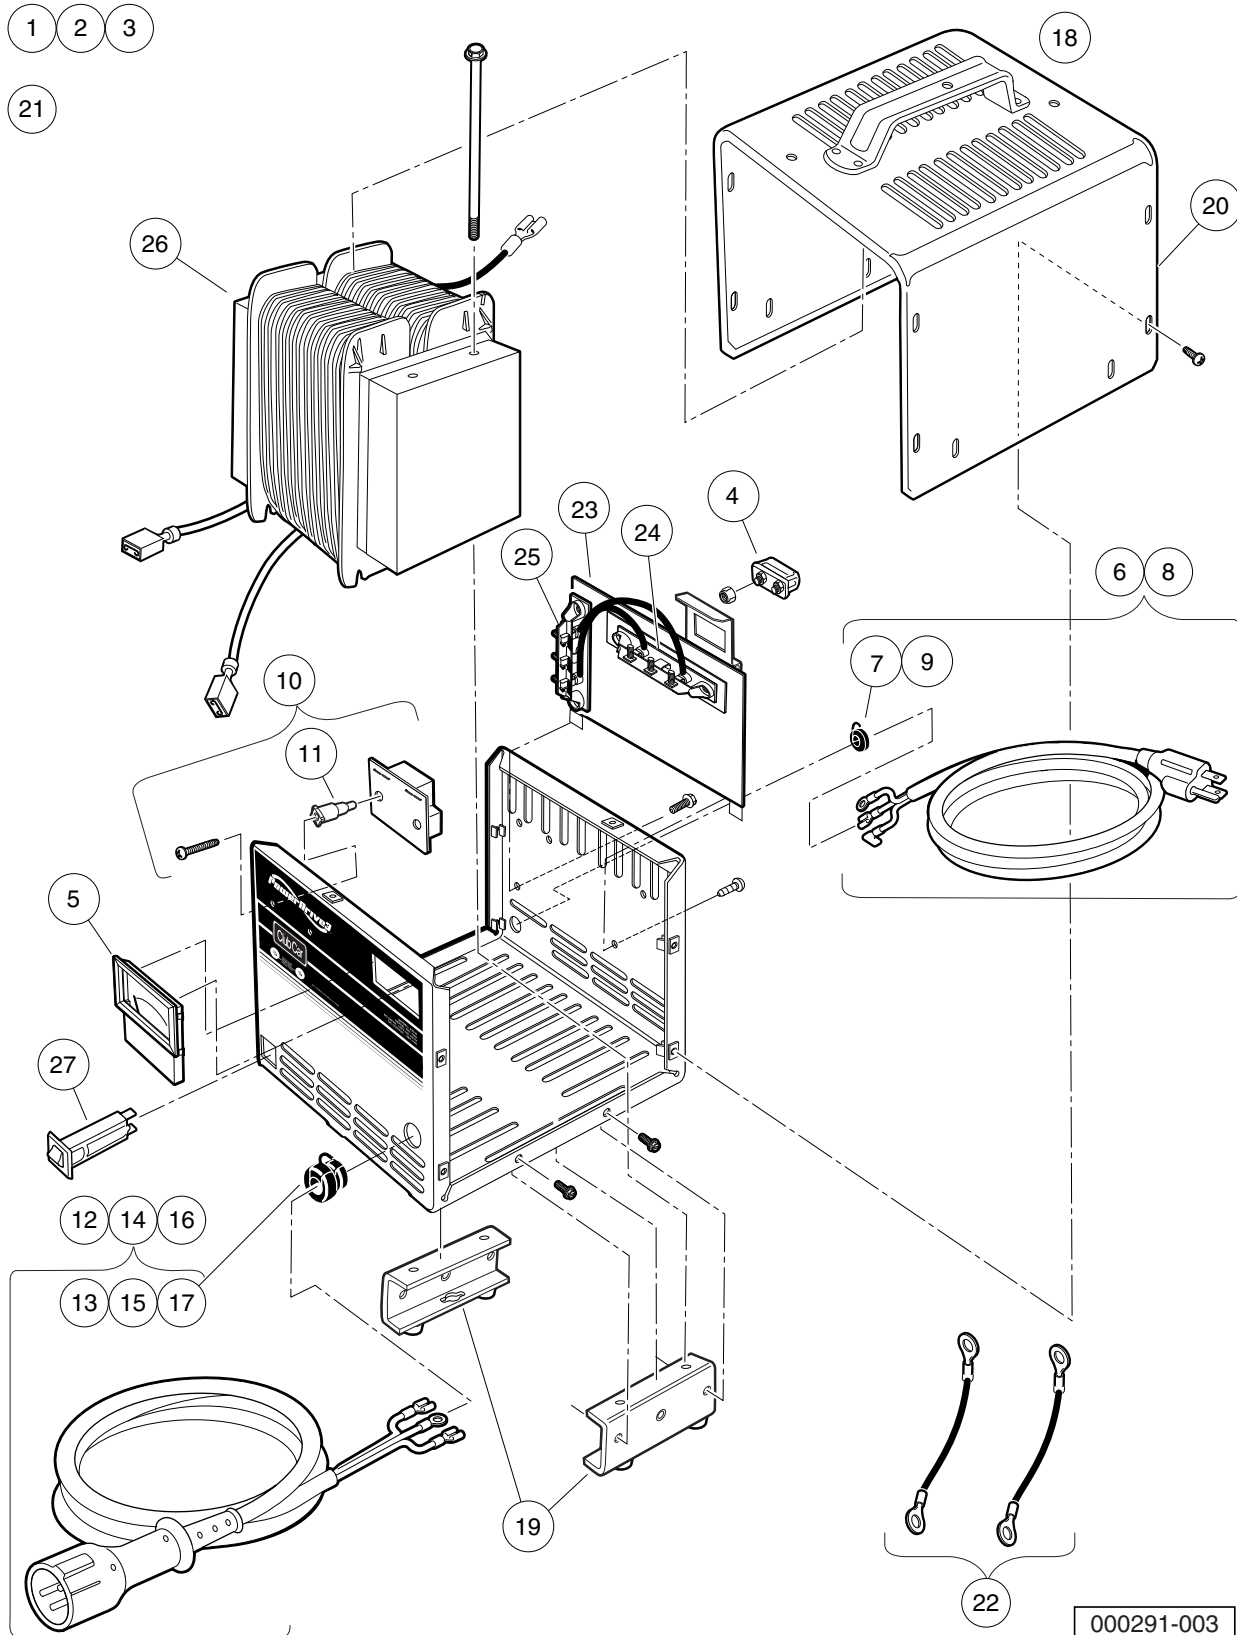


000291-003

POWERDRIVE 3 BATTERY CHARGER, DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103717001</u>	Chgr, Pd3 Stnry, 9Dc6'Ac'	1
2	<u>103717002</u>	Chgr, Pd3 Stnry, 12Dc9'Ac'	1
3	<u>103717003</u>	Chgr, Pd3 Stnry, 20Dc9'Ac'(includes items 4 through 27)	1
4	<u>102273701</u>	PD2 Fuse Asm	1
5	<u>102273801</u>	PD2 Ammeter	1
6	<u>103428501</u>	Kit, PD3 Cordset - AC 80" (includes item 7)	1
7	<u>102273901</u>	PD2 AC Cord Bushing	1
8	<u>103428601</u>	Kit, PD3 Cordset, - AC 114" (includes item 9)	1
9	<u>102273901</u>	PD2 AC Cord Bushing	1
10	<u>103428701</u>	Asm, PD3 Board Relay (includes item 11)	1
11	<u>103429701</u>	PD3 Plastic Stand-Offs	2
12	<u>103429001</u>	PD3 Cordset - DC 113" (includes item 13)	1
13	<u>1012098</u>	Bushing, DC Cord	1
14	<u>103429101</u>	PD3 Cordset - DC 154" (includes item 15)	1
15	<u>1012098</u>	Bushing, DC Cord	1
16	<u>103429201</u>	PD3 Cordset - DC 205" (includes item 17)	1
17	<u>1012098</u>	Bushing, DC Cord	1
18	<u>103429301</u>	Asm, PD3 Case (includes items 19 and 20)	1
19	<u>103434001</u>	Asm, PD3 Legs	1
20	<u>103439901</u>	PD3Case Top (Includes Handle)	1
21	<u>103429501</u>	Kit, PD3 Hardware	1
22	<u>103513001</u>	Wire Asm Kit Blk Pd3	1
23	<u>103517401</u>	Kit Pd3 Button Diode (includes items 24 and 25)	1
24	<u>103512801</u>	Asm Diode Top	1
25	<u>103512901</u>	Asm Diode Side	1
26	<u>103779601</u>	Transformer, Pd3, Al	1
27	<u>CCX8506</u>	Circuit Breaker, 15-Amp/120-Volt	1

16

E

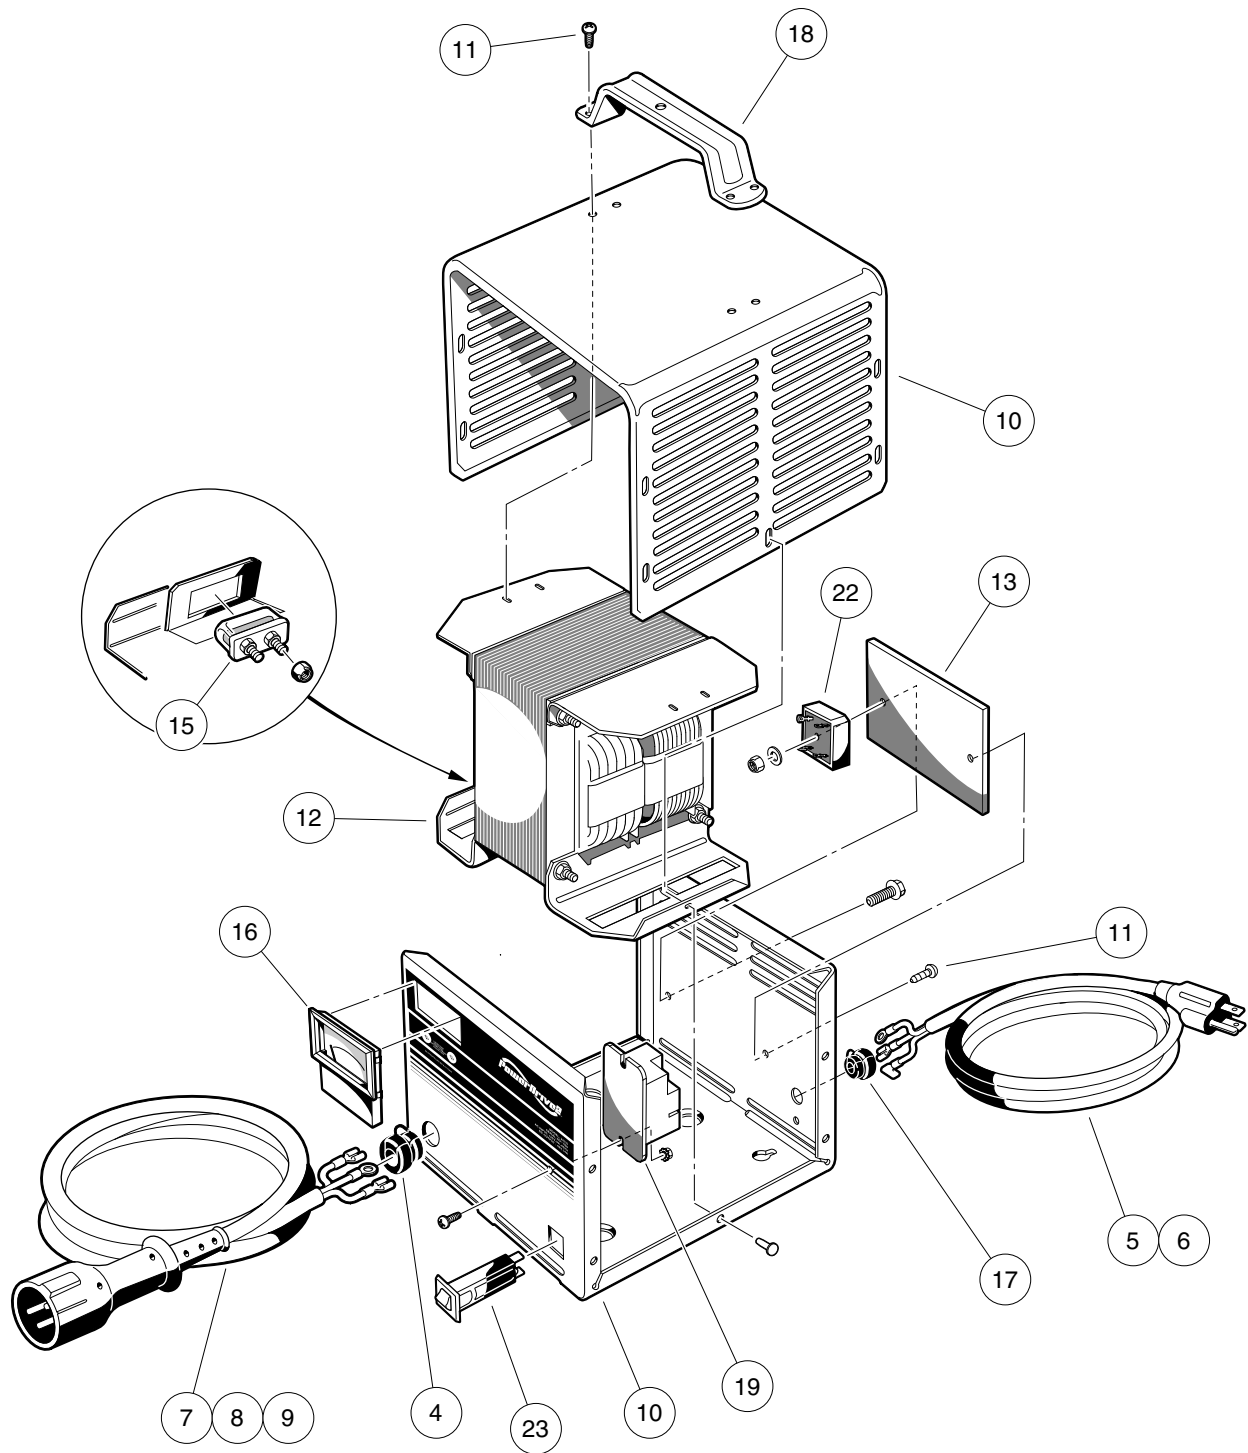


000291-001

POWERDRIVE 2 BATTERY CHARGER (MODEL 22110), DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101802204</u>	48-V/13-A PowerDrive 2 (9-ft. DC, 6-ft. AC)	1
2	<u>101802205</u>	48-V/13-A PowerDrive 2 (12-ft. DC, 9-ft. AC)	1
3	<u>101802206</u>	48-V/13-A PowerDrive 2 (20-ft. DC, 9-ft. AC) (includes items 4 through 23)	1
4	<u>1012098</u>	Bushing, DC Cord	1
5	<u>101828801</u>	Cord, AC, 80-Inch (203 cm)	1
6	<u>101828802</u>	Cord, AC, 108-Inch (274 cm)	1
7	<u>101828904</u>	PD2 DC Cordset, 113-inch	1
8	<u>101828905</u>	PD2 DC Cordset, 154-inch	1
9	<u>101828906</u>	Pd2 Dc Cordset 250 Inch	1
10	<u>102273201</u>	PD2 Case (includes item 11)	1
11	7577	Screw, #10 X 0.50 Phillips Pan-Head	12
12	<u>102273301</u>	PD2 Transformer Asm	1
13	<u>102273401</u>	PD2 Heatsink	1
14	<u>102273601</u>	PD2 Wire Asm	1
15	<u>102273701</u>	PD2 Fuse Asm	1
16	<u>102273801</u>	PD2 Ammeter	1
17	<u>102273901</u>	PD2 AC Cord Bushing	1
18	<u>102274001</u>	PD2 Handle	1
19	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes items 20 and 21)	1
20	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
21	N/A	Kit, Relay, 48v 30a Instrns	1
22	<u>103517601</u>	Pd2 Rectifier Kit	1
23	<u>CCX8506</u>	Circuit Breaker, 15-Amp/120-Volt	1
Note: Item 16 not shown. Level 1 Battery Charger part numbers include one AC and one DC cord. They do not include all of the level 2 cords listed.			

16

E

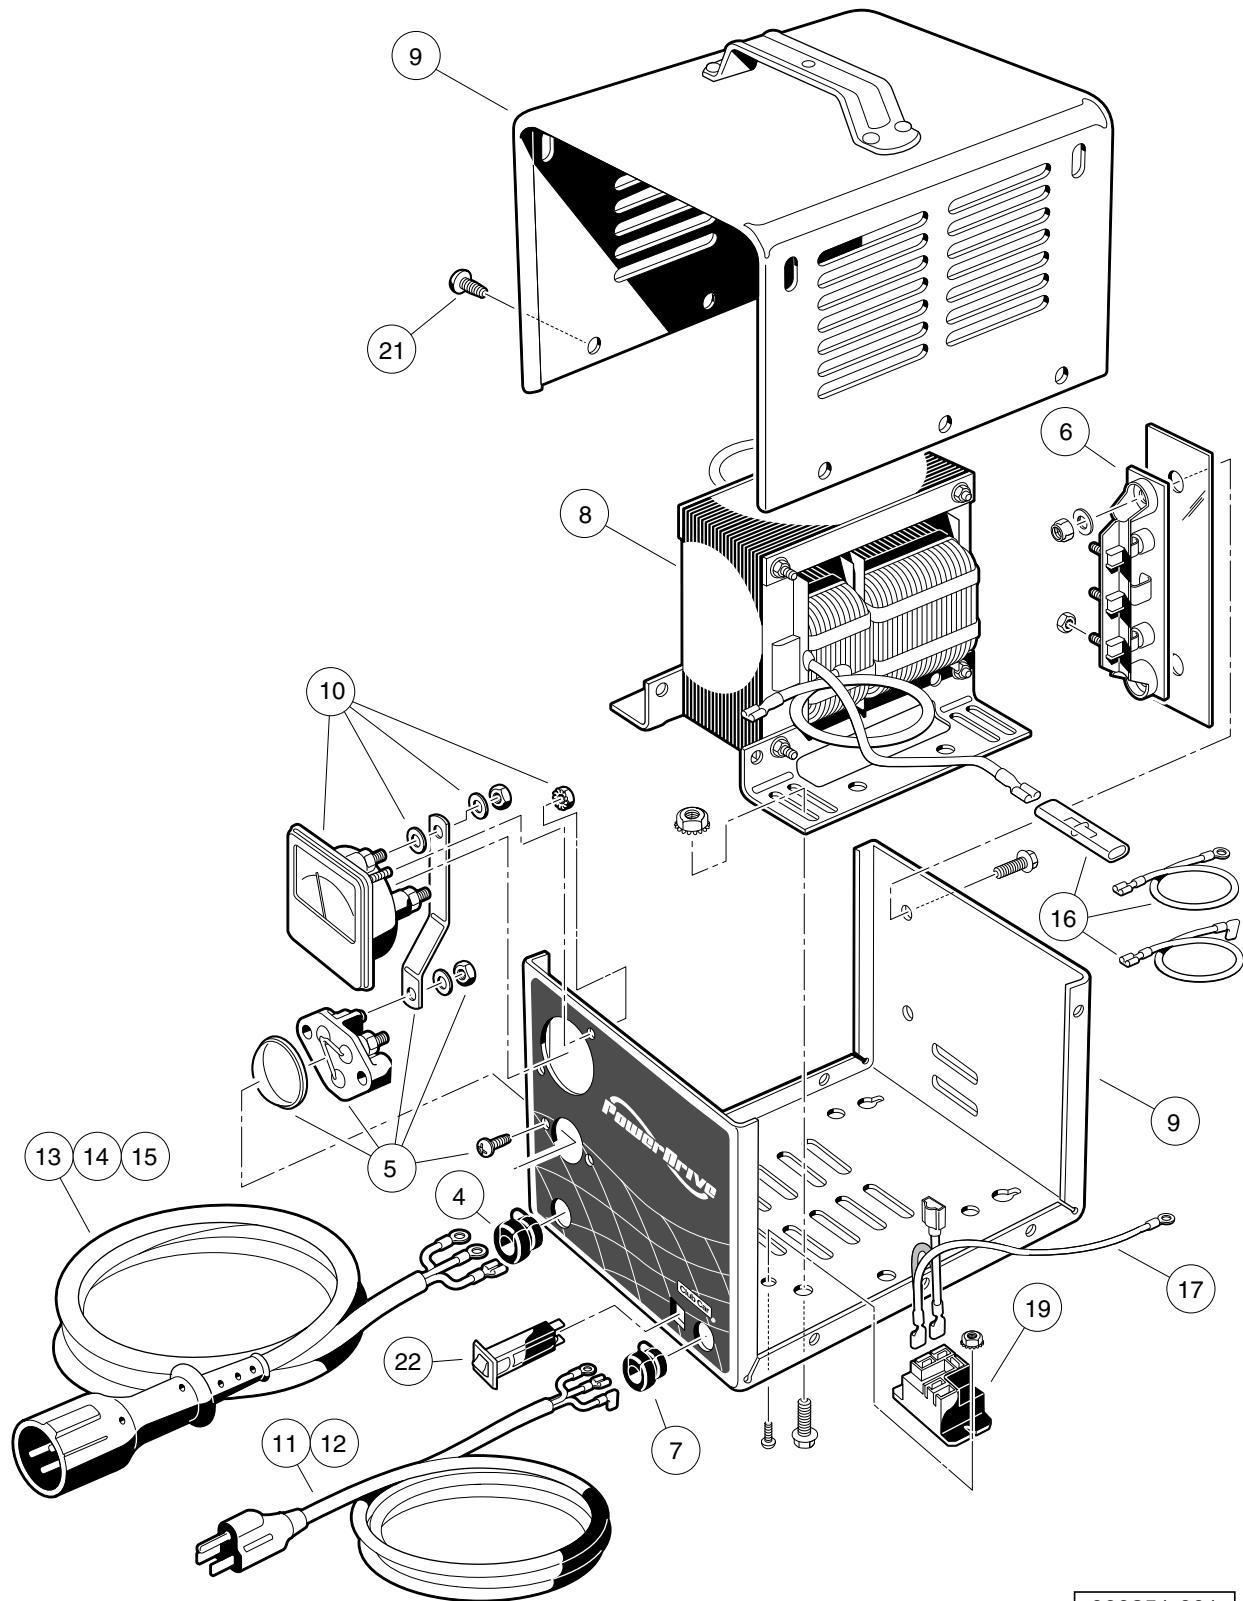


000351-001

POWERDRIVE BATTERY CHARGER (MODEL 17930), DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101802201</u>	48V/17A PowerDrive (9-ft DC, 6-ft AC Cord)	1
2	<u>101802202</u>	48V/17A PowerDrive (12-ft DC, 9-ft AC Cord)	1
3	<u>101802203</u>	48V/17A PowerDrive (20-ft DC, 9-ft AC Cord) (includes items 4 through 22)	1
4	<u>1012098</u>	Bushing, DC Cord	1
5	<u>1012101</u>	Fuse Assembly	1
6	<u>1015914</u>	Rectifier with Heatsink Assembly	1
7	<u>1015917</u>	Bushing, AC Cord	1
8	****	Transformer, Battery Charger	1
9	<u>101828301</u>	Case Assembly	1
10	<u>101828501</u>	Ammeter	1
11	<u>101828801</u>	Cord, AC, 80-Inch (203 cm)	1
12	<u>101828802</u>	Cord, AC, 108-Inch (274 cm)	1
13	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
14	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
15	<u>101828903</u>	Cord, DC, 250-Inch (635 cm)	1
16	<u>101831101</u>	Wire Assembly Kit	1
17	<u>101914401</u>	Assembly, Voltage Suppressor	1
18	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes items 19 and 20)	1
19	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
20	N/A	Kit, Relay, 48v 30a Instrns	1
21	7577	Screw, #10 X 0.50 Phillips Pan-Head	10
22	<u>CCX8506</u>	Circuit Breaker, 15-Amp/120-Volt	1
**** Special order item available upon request.			
Note: Level 1 Battery Charger part numbers include one AC and one DC cord. They do not include all of the level 2 cords listed.			

16

E

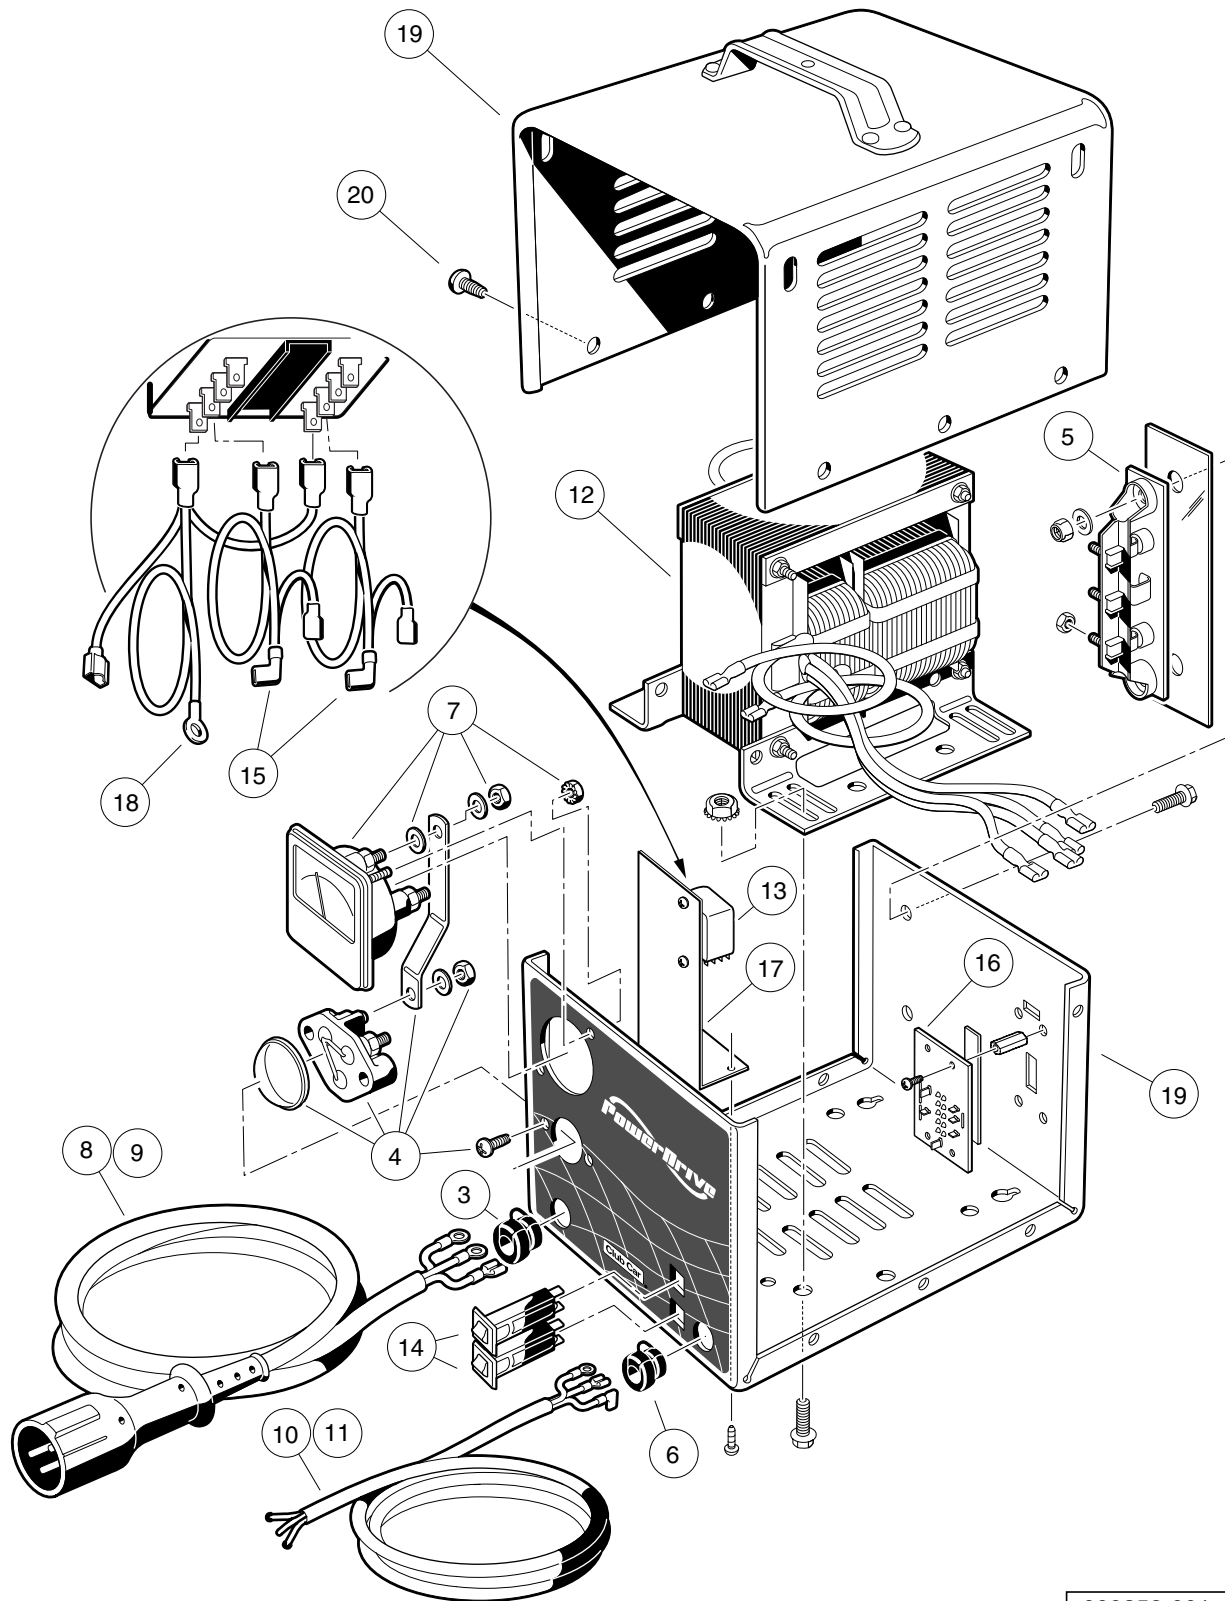


000352-001

POWERDRIVE BATTERY CHARGER (MODEL 18780), EXPORT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101831503	Battery Charger, 48-Volt DC (8.5-ft DC, 6-ft AC)	1
2	101831504	Battery Charger, 48-Volt DC (12-ft DC, 9-ft AC) (includes items 3 through 20)	1
3	<u>1012098</u>	Bushing, DC Cord	1
4	<u>1012101</u>	Fuse Assembly	1
5	<u>1015914</u>	Rectifier with Heatsink Assembly	1
6	<u>1015917</u>	Bushing, AC Cord	1
7	<u>101828501</u>	Ammeter	1
8	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
9	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
10	<u>101831701</u>	Cord, AC, 80-Inch (203 cm), without Plug	1
11	<u>101831702</u>	Cord, AC, 118-Inch (203 cm), without Plug	1
12	101838201	Transformer, Export Battery Charger	1
13	<u>101838301</u>	Relay, Export Charger	1
14	101838401	Circuit Breaker	2
15	101838501	Kit, Wire Assembly	1
16	101838601	Four-Position Switch	1
17	****	Mounting Bracket, Relay	1
18	101914401	Assembly, Voltage Suppressor	1
19	N/A	Case, Charger	1
20	7577	Screw, #10 X 0.50 Phillips Pan-Head	10
**** Special order item available upon request. Note: Level 1 Battery Charger part numbers include one AC and one DC cord. They do not include all of the level 2 cords listed.			

16

 E




POWERDRIVE BATTERY CHARGER (MODEL 20310), EUROPEAN

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101956201</u>	Battery Charger, 48-Volt w/ 4-Position Switch (8.5-ft DC)	1
2	<u>101956202</u>	Battery Charger, 48-Volt w/ 4-Pos. Switch (12-ft DC) (includes items 3 through 19)	1
3	<u>1012098</u>	Bushing, DC Cord	1
4	<u>1012101</u>	Fuse Assembly	1
5	<u>1015914</u>	Rectifier with Heatsink Assembly	1
6	<u>101828501</u>	Ammeter	1
7	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
8	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
9	<u>101838401</u>	Circuit Breaker	2
10	<u>101838601</u>	Four-Position Switch	1
11	<u>101973501</u>	Receptacle, AC Cord	1
12	<u>101987501</u>	Relay	1
13	N/A	Wire, Jumper	1
14	N/A	Case, Charger	1
15	****	Transformer, European Battery Charger	1
16	****	Suppressor, AC Voltage	1
17	****	Assembly, Wire	1
18	****	Limiter, Current	1
19	7577	Screw, #10 X 0.50 Phillips Pan-Head	10
20	<u>101958201</u>	Cord, UK, AC, Battery Charger	1
21	<u>101958301</u>	Cord, European AC, Battery Charger	1
**** Special order item available upon request.			
Note: Level 1 Battery Charger part numbers include one AC and one DC cord. They do not include all of the level 2 cords listed.			

16

E

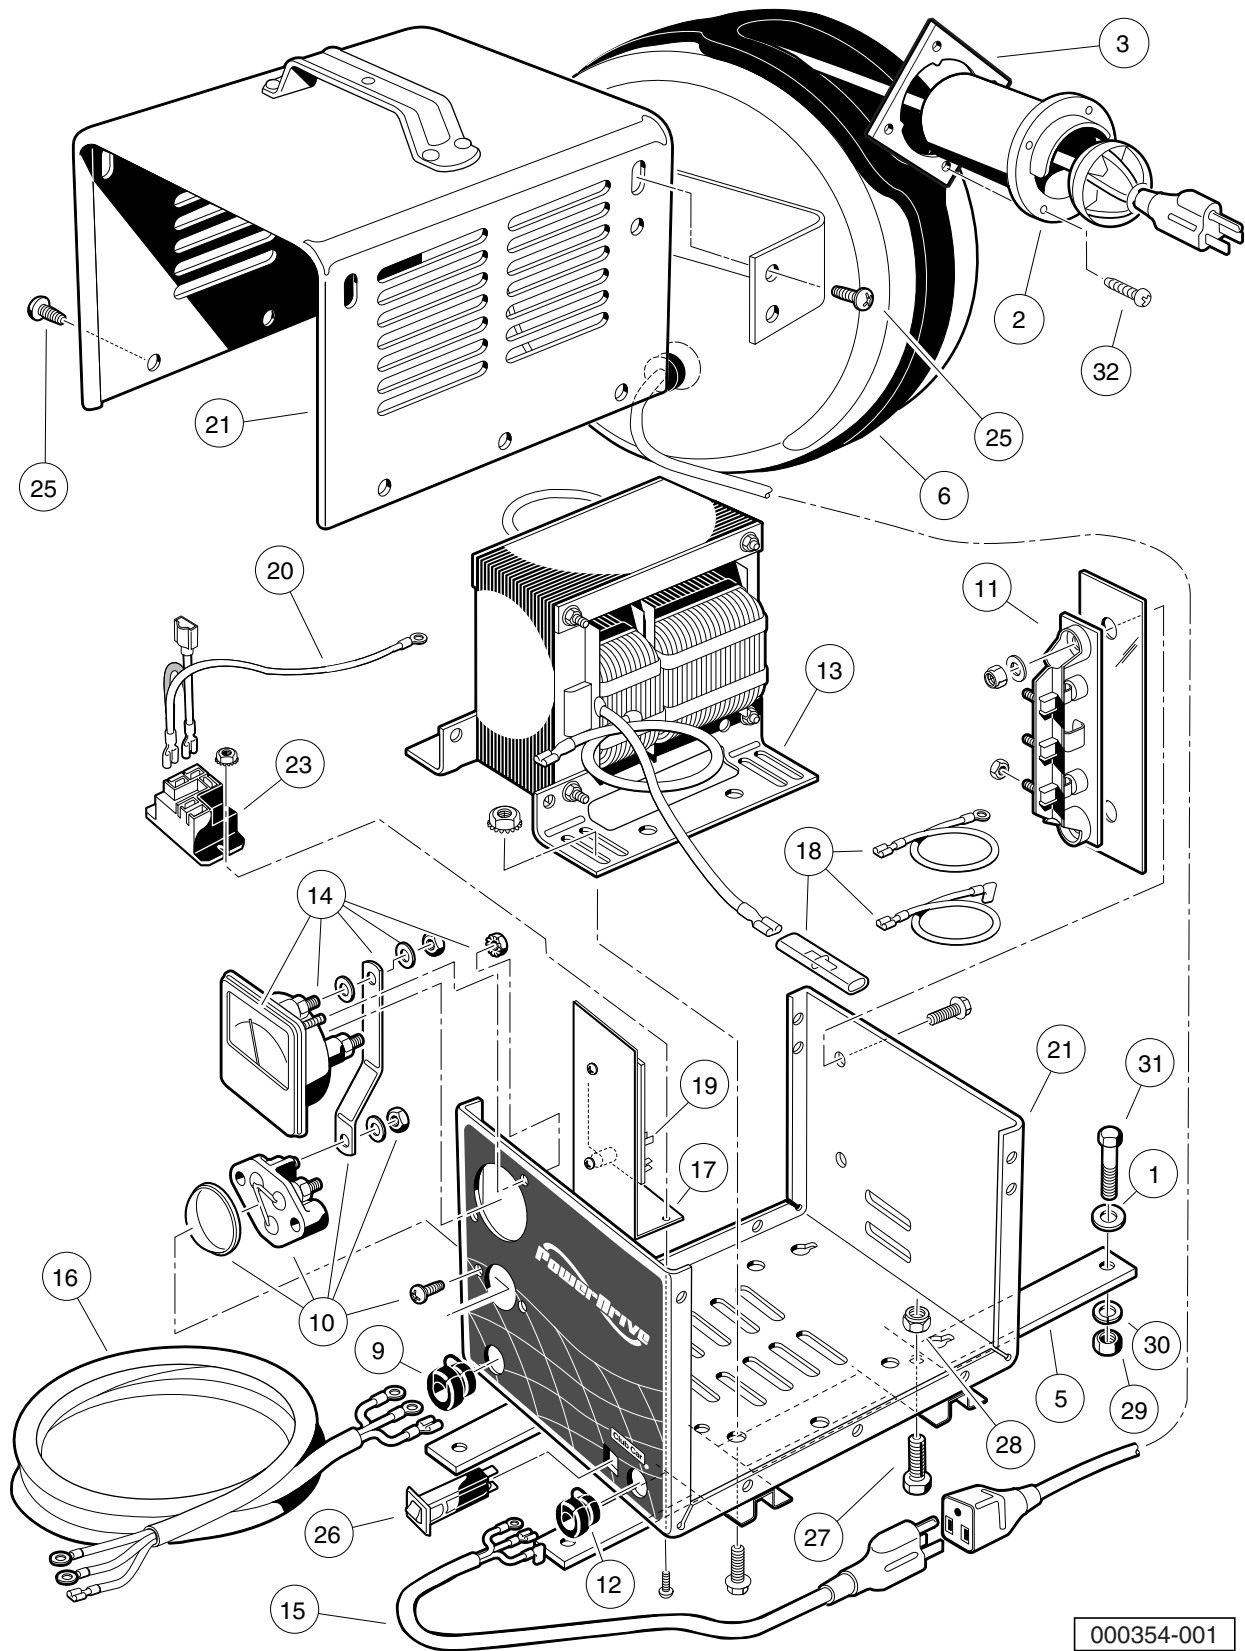


000354-001

ONBOARD POWERDRIVE BATTERY CHARGER (MODEL 17935), DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014306</u>	Washer, 1/4" Type B Flat	4
2	<u>1016673</u>	Housing, Cord Reel	1
3	<u>101801001</u>	Plate, Receptacle Backing	1
4	<u>101814301</u>	Battery Charger and Reel Assembly (includes items 5 through 28)	1
5	<u>1011707</u>	Bracket, Mounting, Battery Charger	2
6	<u>1017187</u>	Retractable Cord Reel	1
7	<u>1017189</u>	Heat Shrink Tube 1.5" X 3"	1
8	<u>101802301</u>	Battery Charger, Onboard, 120-VAC, 48-VDC (includes items 9 through 26)	1
9	<u>1012098</u>	Bushing, DC Cord	1
10	<u>1012101</u>	Fuse Assembly	1
11	<u>1015914</u>	Rectifier with Heatsink Assembly	1
12	<u>1015917</u>	Bushing, AC Cord	1
13	****	Transformer, Battery Charger	1
14	<u>101828501</u>	Ammeter	1
15	<u>101829001</u>	Cord, AC, 22-Inch (56 cm)	1
16	<u>101829101</u>	Cord, DC, 90.5-Inch (230 cm)	1
17	****	Mounting Bracket, Relay	1
18	N/A	Kit, Wire Assembly	1
19	<u>101841901</u>	Control Board	1
20	<u>101914401</u>	Assembly, Voltage Suppressor	1
21	N/A	Case, Charger	1
22	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes items 23 and 24)	1
23	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
24	N/A	Kit, Relay, 48v 30a Instrns	1
25	7577	Screw, #10 X 0.50 Phillips Pan-Head	12
26	<u>CCX8506</u>	Circuit Breaker, 15-Amp/120-Volt	1
27	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
28	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
29	<u>1028</u>	Nut, 1/4-20 Hex	4
30	<u>451</u>	Lockwasher, 1/4 Split	4
31	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	4
32	<u>8796</u>	Screw, #7-19 X 0.75 Pan-Head Type AB	4
		**** Special order item available upon request.	
		Note: Item 7 not shown.	

16

E

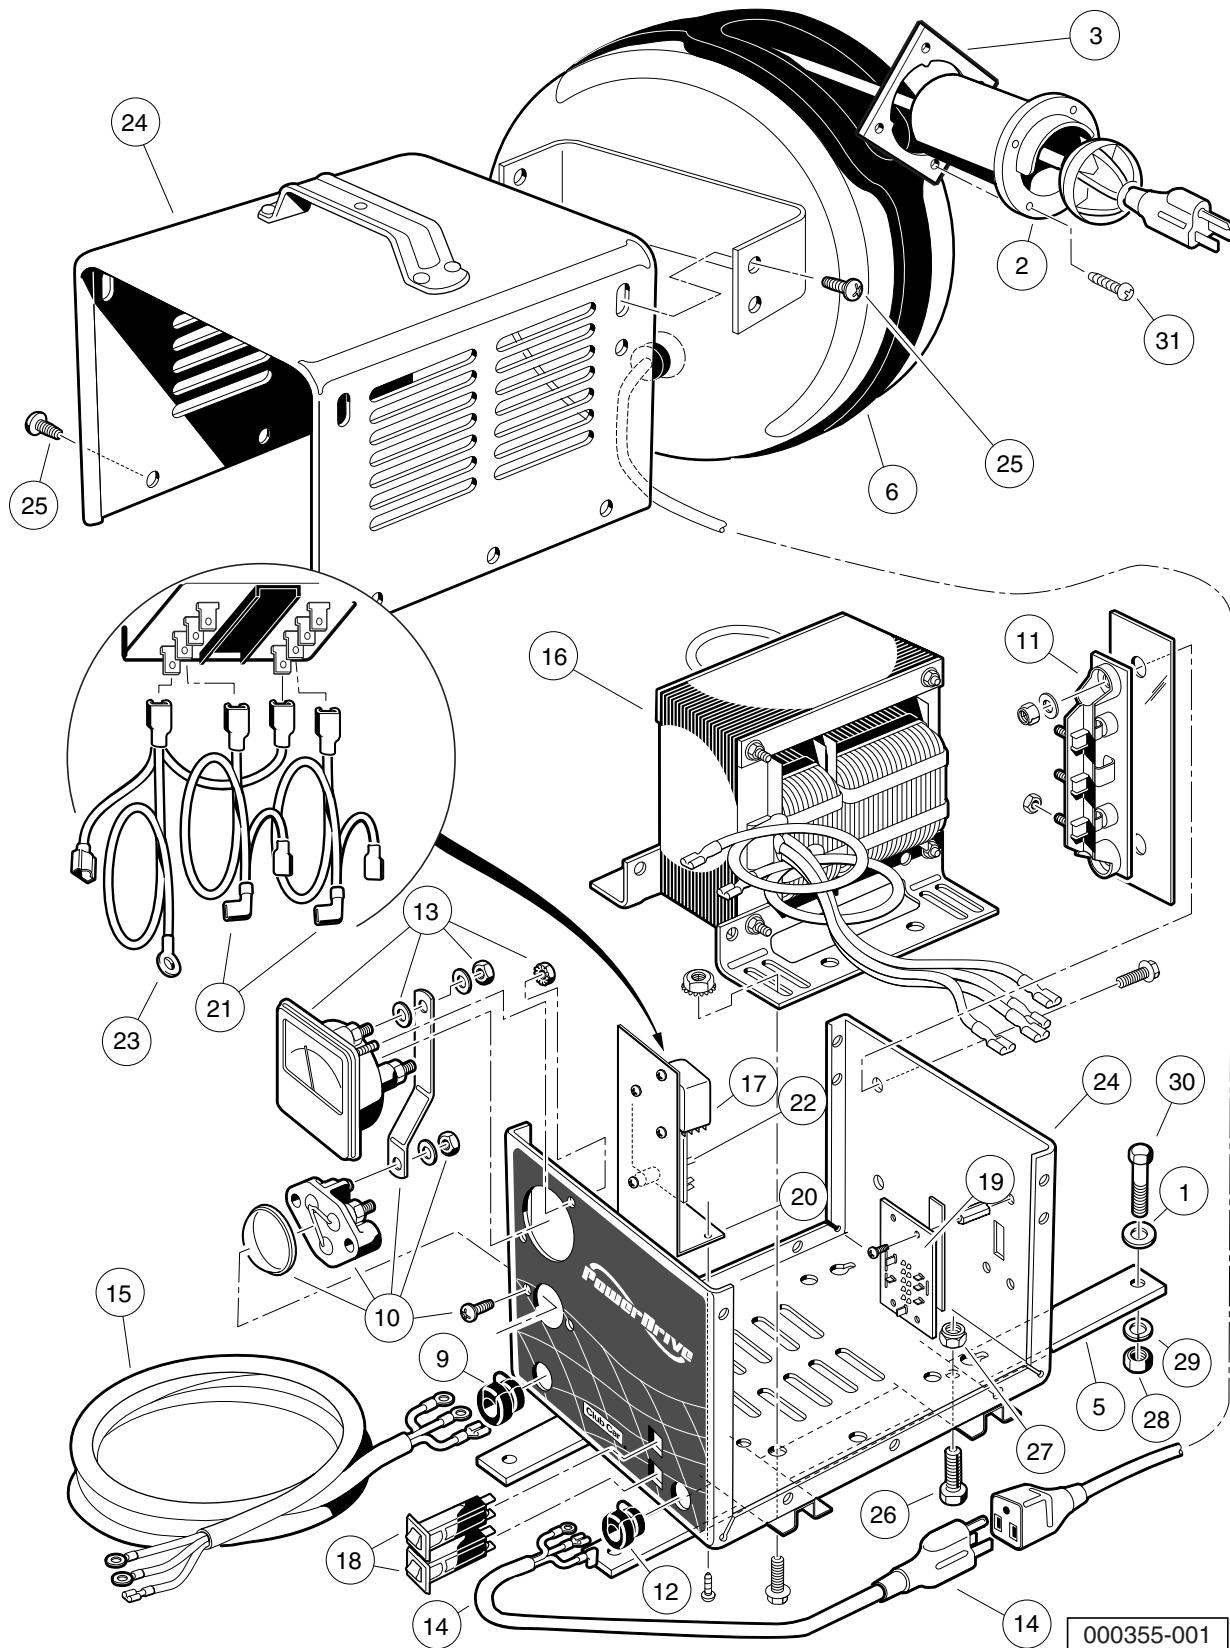

ONBOARD POWERDRIVE BATTERY CHARGER (MODEL 17790), EXPORT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014306</u>	Washer, 1/4" Type B Flat	4
2	<u>1016673</u>	Housing, Cord Reel	1
3	<u>101801001</u>	Plate, Receptacle Backing	1
4	<u>101814302</u>	Battery Charger and Reel Assembly (includes items 5 through 27)	1
5	<u>1011707</u>	Bracket, Mounting, Battery Charger	2
6	<u>1017187</u>	Retractable Cord Reel	1
7	<u>1017189</u>	Heat Shrink Tube 1.5" X 3"	1
8	<u>101831601</u>	Battery Charger, Onboard, 48-Volt DC (includes items 9 through 25)	1
9	<u>1012098</u>	Bushing, DC Cord	1
10	<u>1012101</u>	Fuse Assembly	1
11	<u>1015914</u>	Rectifier with Heatsink Assembly	1
12	<u>1015917</u>	Bushing, AC Cord	1
13	<u>101828501</u>	Ammeter	1
14	<u>101829001</u>	Cord, AC, 22-Inch (56 cm)	1
15	<u>101829101</u>	Cord, DC, 90.5-Inch (230 cm)	1
16	<u>101838201</u>	Transformer, Export Battery Charger	1
17	<u>101838301</u>	Relay, Export Charger	1
18	<u>101838401</u>	Circuit Breaker	2
19	<u>101838601</u>	Four-Position Switch	1
20	****	Mounting Bracket, Relay	1
21	****	Kit, Wire Assembly	1
22	<u>101841901</u>	Control Board	1
23	<u>101914401</u>	Assembly, Voltage Suppressor	1
24	N/A	Case, Charger	1
25	<u>7577</u>	Screw, #10 X 0.50 Phillips Pan-Head	12
26	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
27	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
28	<u>1028</u>	Nut, 1/4-20 Hex	4
29	<u>451</u>	Lockwasher, 1/4 Split	4
30	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	4
31	<u>8796</u>	Screw, #7-19 X 0.75 Pan-Head Type AB	4
		**** Special order item available upon request.	
		Note: Item 7 not shown.	

16

E

MAINTENANCE AND SERVICE TOOLS

17

G

E


D

17

G

E

D

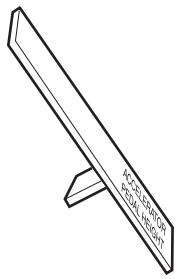


1



2



3

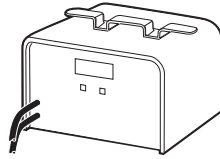


4




5



6

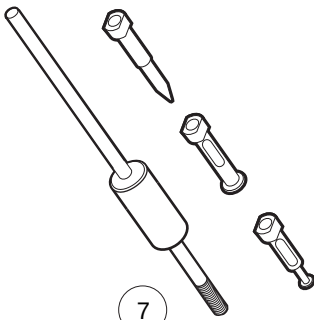


7

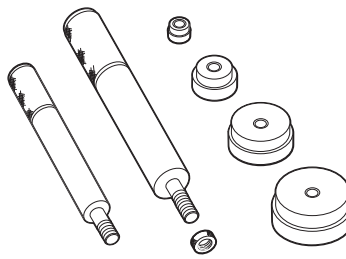

8




9

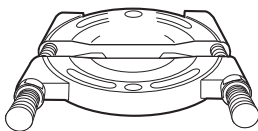


10




11

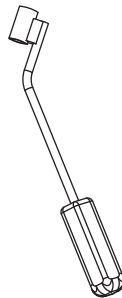


12

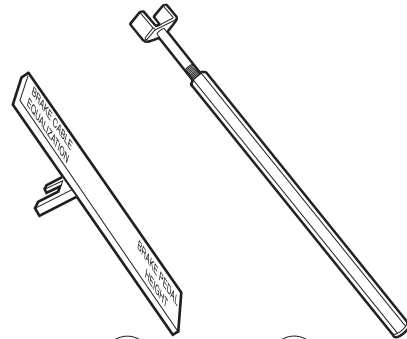


14 15
13

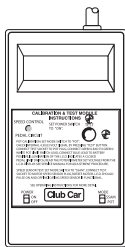


16

 

17

 

18

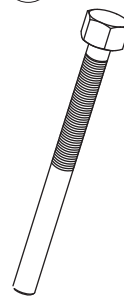

19

MAINTENANCE AND SERVICE TOOLS


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17 G E D
		1 2 3 4 The following tool list includes all tools available from Club Car for maintenance and service procedures for gasoline, electric, and/or diesel vehicles, both past and present models. Be sure to carefully examine the tool list for applicability to your vehicle before ordering.				
1	<u>101871001</u>	Accelerator Pedal Adjustment Tool		1	1	
2	<u>101813202</u>	Adhesive, Guide Ring, 3-Gram Tube			1	
3	<u>101641202</u>	Arbor		1		
4	<u>101831901</u>	Battery Discharge Machine, 36/48 Volt			1	
5	<u>1014305</u>	Battery Terminal Protector Spray	1	1	1	
6	<u>1011767</u>	Battery Thermometer	1	1	1	
7	<u>1016417</u>	Bearing and Oil Seal Remover Assembly	1	1	1	
8	<u>1016416</u>	Bearing Driver Set	1	1	1	
9	<u>1012811</u>	Bearing Puller	1	1	1	
10	<u>1012812</u>	Bearing Puller Wedge Attachment	1	1	1	
11	<u>1013582</u>	Brake Adjustment Tool (used only on vehicles with manually adjusted mechanical brakes)		1	1	
12	<u>102555501</u>	Brake Cable Release Tool	1	1	1	
13	<u>102249901</u>	Brake Pedal Adjustment Tool Kit (used for the Carryall Electric Industrial Truck only) (includes items 14 and 15).....			1	
14	****	Brake Pedal Adjustment Tool			1	
15	****	Brake Pedal Tension Tool			1	
16	<u>101887101</u>	Calibration Test Module			1	
17	<u>101808401</u>	Cam Installation Tool		1		
18	<u>102562401</u>	Charger Bezel Tool			1	
19	<u>102686101</u>	Clutch Removal Tool (for 4x4 vehicles)	1	1		
		Please refer to the maintenance and service manual for proper tool application. **** Special order item available upon request				

17




G

E

D

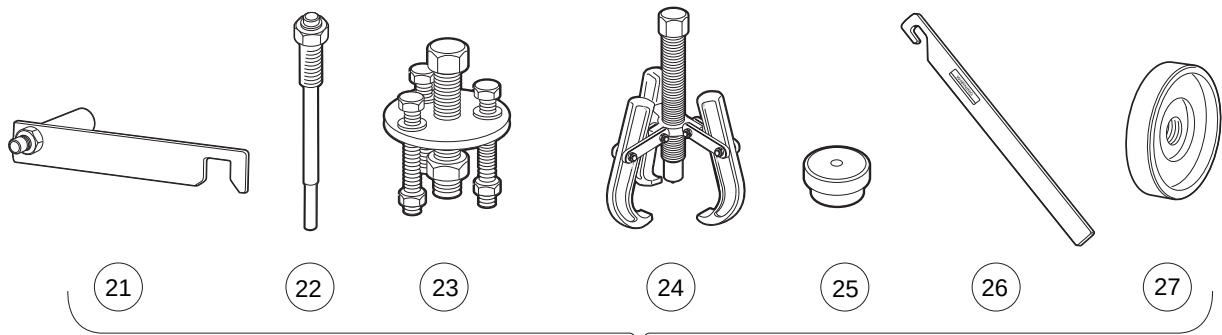

20

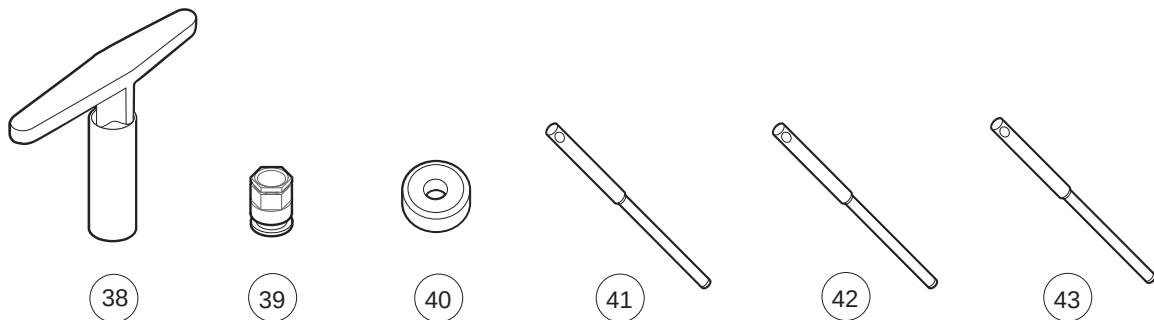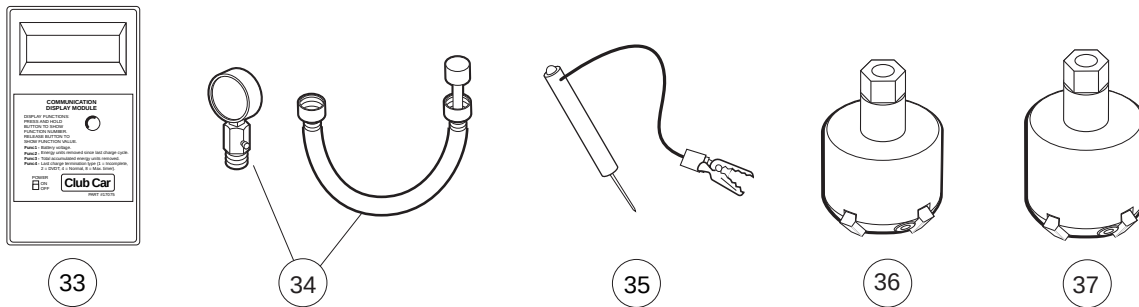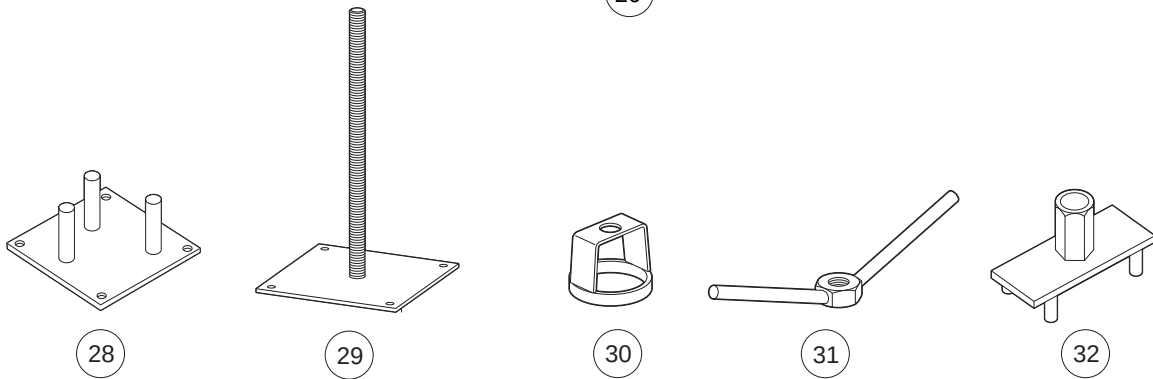

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17 G E D
		1 2 3 4				
20	<u>1014510</u>	Clutch Tool Kit (includes items 21 - 27)		1		
21	<u>1014498</u>	Clutch Alignment Tool (for pre-unitized transaxle vehicles built prior to 1997 model year)		1		
22	<u>1014496</u>	Drive Clutch Puller (for Kawasaki engines only)		1		
23	<u>1014497</u>	Drive Clutch Hub Puller (for Kawasaki engines only)		1		
24	<u>1014508</u>	Driven Clutch Cam Puller (for Kawasaki engines only)		1		
25	<u>1014507</u>	Driven Clutch Puller Plug (for Kawasaki engines only)		1		
26	<u>1015524</u>	Drive Clutch Holder Tool Assembly (for Kawasaki engines only)		1		
27	<u>101809101</u>	Press Weldment (for Kawasaki engines only)		1		
28	<u>102601501</u>	Drive ClutchFixed Sheave Tool (for 4x4 vehicles)	1	1		
29	<u>102603501</u>	Driven Clutch Spring Compression Base (for use with items 30 and 31) (for 4x4 vehicles)	1	1		
30	<u>102605201</u>	Driven Clutch Spring Compression Collar (for use with items 29 and 31) (for 4x4 vehicles)	1	1		
31	<u>102606101</u>	Driven Clutch Spring Compression Nut (for use with items 29 and 30) (for 4x4 vehicles)	1	1		
32	<u>102607501</u>	Drive Clutch Spider Removal Tool (for 4x4 vehicles)	1	1		
33	101831801	Communication Display Module			1	
34	101641002	Compression Gauge and Adapter		1		
35	1011273	Continuity Tester		1	1	
36	<u>102773801</u>	Cutter, Valve Seat, #122		1		
37	<u>102773901</u>	Cutter, Valve Seat #115		1		
38	<u>102774101</u>	Wrench, T, #505.....		1		
39	<u>102774101</u>	Adapter, T-Wrench		1		
40	102675401	Cutter, Valve Seat, 60 Degree (requires item 51) (for Honda GX620 Gasoline Engines)		1		
41	<u>102774201</u>	Pilot, 6.6 MM		1		
42	<u>102774301</u>	Pilot, 6.62 MM.....		1		
43	<u>102774401</u>	Pilot, 6.65 MM.....		1		
		Please refer to the maintenance and service manual for proper tool application.				

17


G

E

 
D




44

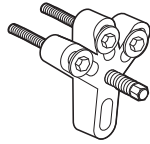

45

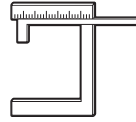


46

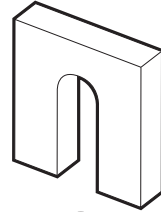


47



 48





49

 


50



51

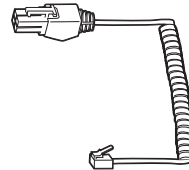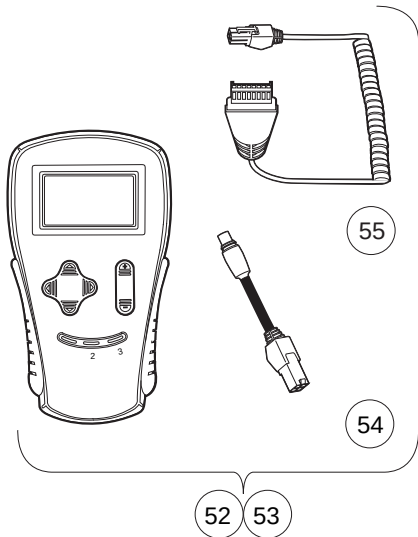

56

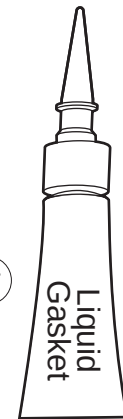

57



58



59 60



61

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17
		1 2 3 4				
44	<u>1012151</u>	Dry Moly Lubricant	1	1	1	G E D
45	<u>1016627</u>	Flywheel Puller Kit (for Kawasaki Engines)		1		
46	<u>102669901</u>	Gauge, Carburetor Float Level (for Honda GX620 Gasoline Engines)		1		
47	<u>1016418</u>	Gear Yoke	1	1	1	
48	<u>101933101</u>	Governor Shaft Installation Tool (for Kawasaki Engine Vehicles)		1		
49	<u>102169401</u>	Hydraulic Brake Adjuster (for Turf/CA 272/472, Pioneer/XRT 1200, Bobcat 2100, HUV 4213)			1	
50	<u>1011478</u>	Hydrometer	1	1	1	
51	<u>1013593</u>	Internal Retaining Ring Pliers	1	1	1	
52	<u>102248803</u>	IQ Display Module (IQDM) Kit (IQ System and IQ Plus vehicles)			1	
		(includes items 54 and 55)				
53	<u>102248804</u>	IQ Display Module (IQDM-P) Kit (IQ System and IQ Plus vehicles)			1	
		(includes items 54 and 55)				
54	<u>102251501</u>	Adaptor, Cable			1	
55	<u>102241502</u>	IQDM Series 2 Cable			1	
56	<u>102241501</u>	IQDM Series 1 Cable (replacement)			1	
57	<u>101928701</u>	Liquid Gasket (transaxle case)	1	1	1	
58	<u>102243402</u>	Moly-Teflon Lubricant (4-oz. (113-gram) tube)			1	
59	<u>101997201</u>	Paint, Touch-Up – Beige*		1	1	
59	<u>101997207</u>	Paint, Touch-Up – Black*		1	1	
59	<u>101997212</u>	Paint, Touch-Up – Burgundy*		1	1	
59	<u>101997211</u>	Paint, Touch-Up – Classic Blue (Navy)*		1	1	
59	<u>101997205</u>	Paint, Touch-Up – Dark Gray*	1	1	1	
59	<u>101997209</u>	Paint, Touch-Up – Dark Green*	1	1	1	
59	<u>101997204</u>	Paint, Touch-Up – Gray*	1	1	1	
59	<u>101997203</u>	Paint, Touch-Up – Red*	1	1	1	
59	<u>101997206</u>	Paint, Touch-Up – Royal Blue (Pacific Blue)*		1	1	
59	<u>101997202</u>	Paint, Touch-Up – White*	1	1	1	
60	<u>102562301</u>	Paint, Precedent Underbody – Gray		1	1	
61	<u>102587201</u>	Paint Pen, Touch-Up, Precedent Underbody – Black		1	1	
Please refer to the maintenance and service manual for proper tool application. * Item 59 is not for use on Surlyn[®] body material, which is used on Precedent vehicles.						

17


G

E


D



62

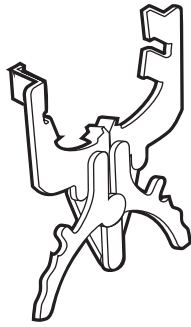

63

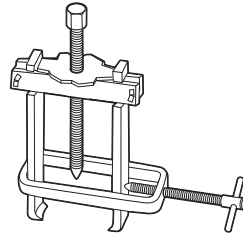


64



65



 66



67



68




69



70




71

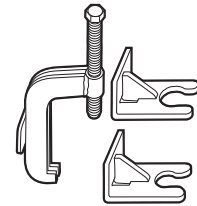

72



73

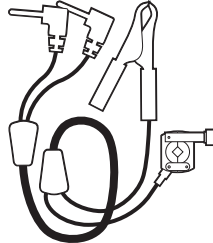


74




75



76

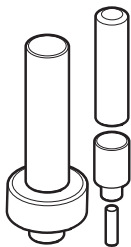

77

 

83



84



85




86

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17
		1 2 3 4				G
62	<u>1016414</u>	Piston Ring Compressor Kit (FE290, FE350 and FE400 engines)		1		E
63	<u>1016415</u>	Piston Ring Pliers (for Kawasaki Engines)		1		D
64	<u>102668801</u>	Puller, Special Use (for Kubota D722 Diesel Engines)	1			
65	<u>1012549</u>	Retaining Ring Pliers, 45° External	1	1	1	
66	<u>1012560</u>	Retaining Ring Pliers, 90° Internal	1	1	1	
67	<u>101823101</u>	Safety First Card (50 per pack)	1	1	1	
68	<u>1012809</u>	Seal Puller	1	1	1	
69	<u>102330901</u>	Spanner Wrench (for coil over shock front suspension vehicles only)	1	1		
70	<u>1014264</u>	Steering Column Bearing Press Tool		1	1	
71	<u>1014259</u>	Steering Column Retaining Ring Tool		1	1	
72	<u>102061201</u>	Steering Wheel Puller Tool	1	1	1	
73	<u>AM10753</u>	Tachometer (includes gasoline engine pick up lead only)	1	1		
74	<u>AM10771</u>	Tachometer Diesel Probe (for use with item 73)	1			
75	<u>1014162</u>	Transaxle Axle Seal Tool		1		
76	<u>1014161</u>	Transaxle Pinion Seal Tool		1		
77	<u>1014115</u>	Transmission Tool Kit		1		
78	<u>101611003</u>	Tune-Up Kit, All OHV (for FE290, FE350, FE400 only) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
79	<u>AM11804</u>	Tune-Up Kit, Gx620 (for Honda Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
80	<u>AM11805</u>	Tune-Up Kit, D722 (for Kubota Engines) (includes air filter, oil filter, fuel filters, water separator filter) (not shown)	1			
81	<u>AM1220301</u>	Tune-Up Kit, Precedent (for FE290/350 Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
82	<u>AM1232401</u>	Tune-Up Kit, FH680D (for Kawasaki V-Twin Engines) (includes oil filter, fuel filter, air filter, and spark plugs) (not shown).....		1		
83	<u>1016413</u>	Valve Clearance Adjuster Screw Holder (for FE290 engines only)		1		
84	<u>102674601</u>	Valve Guide Driver (for Honda GX620 Gasoline Engines)		1		
85	<u>101641201</u>	Valve Guide Reamer (FE290, FE350, and FE400 only)		1		
86	<u>102674401</u>	Valve Guide Reamer, 6.6 mm (for Honda GX620 Gasoline Engines)		1		




87

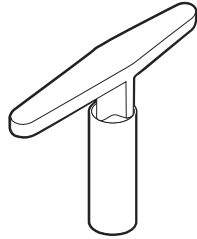


88

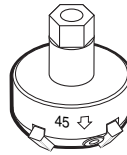


89

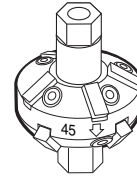


90

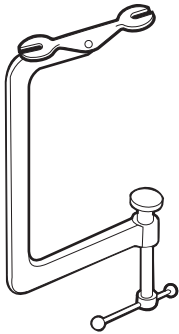

91

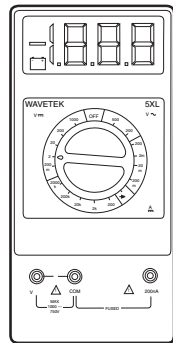


92

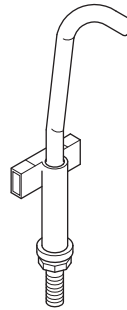


93



94

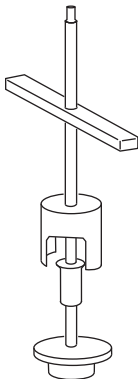

95

 

96

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17 G E D
		1 2 3 4				
87	<u>1016552</u>	Valve Seat Cutter Guide		1		
88	<u>1016551</u>	Valve Seat Cutter T-Wrench		1		
89	<u>1016553</u>	Valve Seat Cutter, 45° (32 mm diameter) (for FE290 engines only)		1		
90	<u>1016554</u>	Valve Seat Cutter, 45°/30° (35 mm diameter)		1		
91	<u>101641101</u>	Valve Spring Compressor		1		
92	1011480	Volt Ohm Meter	1	1	1	
93	<u>102570401</u>	Tool, Tensioning, Starter Generator (For Precedent vehicles)		1		
94	<u>103601401</u>	Puller, Drive Clutch, XRT 950*		1		
95	<u>103601701</u>	Tool, Disassembly, Driven Clutch, XRT 950		1		
96	<u>103600501</u>	Screw, Driven Clutch Disassembly, M6, XRT 950		1		
*Note: The XRT 950 Drive Clutch Puller requires the use of Screw, Driven Clutch Disassembly, CCI Part Number <u>103600501</u>.						

INDEX

Part Number and Page

AM10753	17-9	7410	1-67, 1-69	1010142	5-29, 5-31, 5-33, 5-35
AM10771	17-9	7473	1-3, 1-17, 1-31, 1-37, 1-43, 1-45, 1-53, 1-63, 1-67, 1-69, 4-7, 4-9, 4-13, 4-17, 4-19, 4-21, 4-23, 4-25, 6-19, 6-21, 6-23, 6-27, 6-31, 6-35, 13-23	1010144	5-29, 5-31, 5-33, 5-35
AM10080	12-5	7479	1-39, 1-41, 1-51, 1-65, 16-13, 16-15	1010145	5-29, 5-31, 5-33, 5-35
AM10081	12-5	7532	1-63	1010150	5-15, 5-19, 5-23
AM10419	11-11	7540	5-11	1010177	5-15
AM10682	2-3, 2-5	7555	5-11	1010200	5-23
AM10724	7-5, 8-5	7569	5-35	1010434	1-3, 1-13, 1-15, 1-23, 1-25, 1-39, 1-47, 1-51, 1-55, 1-67, 1-69
CCX8506	16-3, 16-5, 16-7, 16-13	7577	16-5, 16-7, 16-9, 16-11, 16-13, 16-15	1010435	1-3, 1-63, 1-67, 1-69
183	6-7, 6-21, 6-23, 9-21, 9-23, 9-25, 9-27, 11-3, 11-5, 12-3, 13-33	7591	6-7, 6-39, 13-17, 13-19, 13-49	1010436	1-31
304	1-45, 1-47, 6-7, 13-17, 13-19	7602	5-11	1010543	1-9, 1-11, 1-19, 1-27, 1-29, 1-31, 1-33, 1-35
320	4-15	7716	4-7, 4-9, 4-23, 4-25	1010545	1-33, 1-35
332	1-9, 1-11, 1-17, 1-21, 1-23, 1-25, 1-31, 1-41, 1-43, 1-45, 1-47, 1-51, 1-53, 1-55, 1-63, 1-65, 1-67, 1-69, 6-7, 9-19, 10-3, 10-5, 12-11, 13-17, 13-19, 13-29, 13-37, 13-39	7818	6-19, 6-21, 6-23	1010577	1-37, 1-43, 7-15, 8-15
334	4-23, 4-25, 5-3, 5-5, 5-11, 7-15, 8-15	7820	6-7, 13-17, 13-19	1010805	4-7, 4-9
357	5-15, 5-19, 5-23, 5-37	7840	5-27	1010829	4-13, 4-17, 4-19, 4-21
451	1-43, 1-45, 4-5, 4-11, 10-3, 10-5, 13-27, 14-3, 14-5, 14-7, 14-9, 14-11, 16-13, 16-15	7847	1-7, 1-41, 1-53, 1-55, 10-3, 10-5, 16-13, 16-15	1010850	4-5, 4-11
705	6-31, 6-33, 7-15, 8-15	7893	6-7, 6-19, 6-21, 6-23, 12-11, 12-13, 12-15	1010877	4-7, 4-9
706	5-15, 5-19, 5-23	7910	5-27	1010878	1-63, 4-7, 4-9
808	5-37, 11-3, 11-5	7973	1-5, 9-23, 9-25, 9-27, 12-13, 12-15	101090801	13-41, 13-45, 13-49
1016	6-7, 6-21, 6-23, 13-33	8028	1-31	101090802	13-45, 13-49
1017	6-17, 6-21, 6-23, 13-7, 13-33	8049	13-27	1010909	6-7
1028	4-7, 4-9, 13-27, 16-13, 16-15	8056	6-7, 6-25, 6-37, 6-39, 13-17, 13-19, 13-21, 13-47, 13-51	1010921	4-7, 4-9
1032	4-7, 4-9	8057	6-7, 6-19, 6-21, 6-23, 6-25, 6-37, 6-39, 12-9, 13-17, 13-19, 13-21, 13-27, 13-47, 13-51	1010927	4-7, 4-9
1035	4-17, 5-11	8058	6-7, 6-19, 6-21, 6-23, 6-25, 6-37, 6-39, 12-9, 13-17, 13-19, 13-21, 13-27, 13-47, 13-51	1010932	4-7, 4-9
1108	1-65	8067	5-25, 5-27	1010933	4-7, 4-9
1218	1-45, 1-67, 1-69, 13-33	8233	1-17, 1-21, 1-23, 1-25, 1-41, 1-43, 1-47, 1-51, 1-53, 1-55, 1-63, 1-67, 1-69, 4-23, 4-25, 5-37, 6-7, 9-5, 12-3, 12-9, 12-11, 13-17, 13-19, 13-27, 13-29, 16-13, 16-15	1010934	1-17, 1-65, 6-35, 14-3, 14-5, 14-7, 14-9
1241	1-3, 1-17, 1-31, 1-37, 1-43, 1-45, 1-67, 1-69, 4-7, 4-9, 4-17, 4-19, 4-21, 4-23, 4-25, 6-19, 6-21, 6-23, 6-27, 6-31, 6-33, 6-35, 10-3, 10-5, 13-23, 13-33, 14-3, 14-5, 14-7	8248	9-3, 9-5, 12-9, 13-29	1010953	4-3, 4-5, 4-11
1242	1-17, 4-13, 4-17, 4-19, 4-21, 5-37, 6-19, 6-21, 6-23, 6-31, 6-33, 13-33, 13-43	8251	1-13, 1-15, 1-17, 1-21, 1-23, 1-25, 1-31, 1-47, 1-49, 1-51, 1-55, 12-11	1010954	6-19, 6-21, 6-23, 12-3, 12-9
1606	9-21	8304	1-31	1010984	2-3, 2-5, 2-7, 2-9
1620	1-5	8418	1-69	1010993	1-47, 1-51, 1-55
1624	4-23, 4-25, 5-11	8450	6-21, 6-23, 11-3, 11-5, 13-27	1011014	1-3
1631	9-23, 9-25, 9-27	8455	12-13, 12-15	1011017	1-3
2402	5-13, 5-17, 5-19, 5-21, 5-23	8639	6-7, 9-23, 9-25, 9-27, 13-17, 13-19, 13-43	1011019	1-5
4029	6-7, 13-17, 13-19	8717	4-23, 4-25, 6-19, 6-21, 6-23, 12-3, 12-9	1011084	4-27, 4-29, 4-31
4034	6-27, 13-23	8754	1-41, 1-63, 4-15, 4-23, 4-25, 5-3, 5-5, 5-11, 5-13, 5-15, 5-17, 5-19, 5-21, 5-23, 5-29, 5-31, 5-33, 5-35, 6-31, 6-33	1011114	4-5, 4-11
7048	5-25, 5-27	8755	1-63, 5-15, 5-19, 5-23, 5-29, 5-31, 5-33, 5-35	1011137	4-11
7173	5-37, 6-27, 6-31, 6-35, 13-23, 13-33	8796	16-13, 16-15	1011153	5-27
7174	5-3, 5-5, 5-37, 6-31, 6-33, 9-17, 10-3, 10-5, 13-33, 13-43, 14-3, 14-5, 14-7, 14-9	8797	9-7	1011154	4-5, 4-11
7251	1-3	8861	1-41, 5-13, 5-37	1011182	1-37
7270	5-19	8963	1-31	1011210	1-31
7274	5-27	8990	5-11, 6-19, 6-21, 6-23, 13-21, 13-29, 13-35, 13-37, 13-39, 13-43	1011219	1-31
7308	5-27	1010005	5-27	1011220	1-31
7310	2-3, 2-5, 2-7, 2-9	1010124	5-15, 5-19, 5-23	1011221	1-31
7311	1-65, 5-37	1010138	5-13, 5-17, 5-21	1011222	1-31
7330	12-7, 15-5			1011229	6-7, 6-25, 6-37, 6-39, 13-17, 13-19, 13-21, 13-47, 13-51
7335	12-5, 15-5			1011273	17-5
7336	15-5			1011280	6-27, 13-23, 14-3, 14-5, 14-7
				1011285	14-3, 14-5, 14-7
				1011290	14-3, 14-5, 14-7
				1011291	12-7
				1011298	4-5, 4-11
				1011301	4-5, 4-11
				1011303	4-5, 4-11
				1011314	4-5, 4-11

INDEX

1011382	1-5	1012304	5-29, 5-31, 5-33	1013309	1-11, 1-33, 1-35
1011393	5-27	1012333	12-11, 12-13, 12-15	1013311	1-11
1011394	1-3	1012382	6-5, 6-11, 6-15	1013312	1-11, 1-19, 1-33, 1-35
1011402	4-7, 4-9	1012412	1-23, 1-25, 1-47, 1-51, 1-55	1013343	1-5
1011411	14-3, 14-5, 14-7	1012431	6-7, 6-19, 6-21, 6-23, 6-25, 6-37, 6-39, 12-9, 13-17, 13-19, 13-21, 13-47, 13-51	1013344	1-5
1011415	5-29, 5-31, 5-33, 5-35	1012438	9-23, 9-25, 9-27, 13-33	1013357	1-59, 1-61, 6-7, 13-17, 13-19, 13-35, 13-37, 13-39
1011418	4-7, 4-9	1012466	5-5	1013461	6-17, 9-7, 13-7
1011439	6-27, 13-23	1012467	5-11	1013462	9-7
101146302	4-5, 4-11	1012505	6-25, 6-27, 13-21, 13-23	1013494	1-5
1011464	4-5, 4-11	1012528	10-3, 10-5, 13-33, 13-43	1013531	4-17, 4-19, 4-21
1011465	4-5, 4-11	1012549	17-9	1013582	17-3
1011466	4-5, 4-11	1012560	17-9	1013587	12-9
1011467	4-5, 4-11	1012565	5-7	1013589	6-19, 6-21, 6-23, 12-9
1011478	17-7	1012566	5-7	1013590	12-9
1011480	17-11	1012571	7-15, 8-15	1013591	12-9
1011494	4-5, 4-11	1012581	1-23, 1-25, 1-49	1013593	17-7
1011497	6-39, 13-49	1012594	12-9	1013609	6-19, 6-21, 6-23
1011498	6-39, 13-49	1012597	1-27, 1-29	1013677	3-7, 3-13, 3-29
1011557	6-27, 6-39, 13-23, 13-49	1012604	5-3, 5-5	1013683	13-41
1011558	6-39, 13-49	1012605	5-3, 5-5	1013687	9-3, 9-5
1011571	6-39, 13-49	1012649	9-3, 9-5	1013700	9-17
1011578	1-31, 5-3, 13-41, 13-45, 13-49	1012656	1-27, 1-29	1013734	10-3, 10-5, 13-33, 13-43
1011582	6-37, 6-39, 13-45, 13-49	1012657	1-27, 1-29	1013746	9-3, 9-5, 9-7, 9-13, 9-15
1011610	6-39, 13-49	1012711	12-3	1013760	12-3
1011652	1-9, 1-19, 1-27, 1-29, 1-33, 1-35	1012714	12-5	1013768	12-7
1011694	4-23, 4-25	1012740	12-5	1013769	12-7
1011697	1-53, 5-3, 5-5, 8-15, 9-13, 9-17	1012741	12-5	1013770	12-7
1011700	4-23, 4-25	1012747	12-5	1013771	12-7
1011707	16-13, 16-15	1012748	12-5	1013772	12-7
1011734	4-27, 4-29, 4-31	1012752	12-3	1013773	12-7
1011767	17-3	1012809	17-9	1013774	12-7
1011779	4-13, 4-17, 4-19, 4-21	1012811	17-3	1013787	12-7
1011825	6-7, 13-17, 13-19	1012812	17-3	1013792	12-7
1011843	6-39, 13-49	1012830	6-31, 6-33, 9-17, 10-3, 10-5	1013794	12-7, 15-5
101187702	4-7, 4-9	1012836	11-11	1013857	6-27, 13-23
1011887	5-27	1012896	12-3	1013858	6-27, 13-23
1011889	5-27	1012986	6-25, 6-27	1013869	4-7, 4-9
1011895	5-11	1012987	12-9, 13-27	1013870	4-7, 4-9
1011930	5-11	1012991	6-29	1013871	4-23, 4-25
1011931	4-23, 4-25	1013001	6-29	1013872	1-63
1011988	1-67, 1-69, 9-3, 9-5	1013003	6-29	1013876	4-7, 4-9
1011990	1-41	1013005	6-29	1013924	4-3, 4-5, 4-11, 7-15, 8-15
1012098	16-3, 16-5, 16-7, 16-9, 16-11, 16-13, 16-15	101301102	6-29	1013983	1-47, 1-51
1012101	16-7, 16-9, 16-11, 16-13, 16-15	1013032	1-49	1014007	1-31, 4-23, 4-25, 12-3
1012151	17-7	1013035	5-11	1014049	11-3, 11-5
1012159	1-51	1013042	5-11, 5-13, 5-17, 5-21	1014050	11-3, 11-5
1012180	5-33, 5-35	1013044	5-11	1014051	11-3
1012181	5-29, 5-31, 5-35	1013051	5-11	1014052	11-3, 11-5
1012182	5-29, 5-31, 5-35	1013052	5-11	1014055	11-3, 11-5
1012285	1-21, 1-43, 1-53, 9-3, 9-17, 12-3, 12-11, 12-13, 12-15, 13-29, 13-33, 13-35, 13-37, 13-39, 13-43	1013061	1-41, 12-3, 13-31	1014056	11-3, 11-5
1012295	6-19, 6-21, 6-23	1013164	5-29, 5-31	1014057	11-3, 11-5
1012303	1-63, 5-15, 5-19, 5-23, 5-29, 5-31, 5-33, 5-35	1013169	1-41	1014058	11-3, 11-5
		1013207	5-29, 5-33, 5-35	1014059	11-3, 11-5
		1013216	1-49	1014062	11-3, 11-5
		1013218	1-49	1014063	11-3, 11-5

INDEX

1014065	6-19, 6-21, 6-23, 11-3, 11-5, 12-9	1014675	5-29, 5-31	101564807	1-31
1014070	11-11	1014727	12-9	101564808	1-31
1014072	11-11	1014771	2-3, 2-7	1015649	7-3, 8-3
1014076	11-11	1014807	6-19, 6-21, 6-23, 12-9	101565202	1-37
1014078	11-11	1014808	6-19, 13-27	101565204	1-37
1014080	11-11	1014871	13-27	101565205	1-37
1014089	12-9	1014901	5-29, 5-31	101565206	1-37
1014115	17-9	1014902	5-29, 5-31	1015654	1-65
1014116	9-3, 9-5	1014928	9-3, 9-5	1015656	1-65
1014119	6-5, 6-11, 6-15, 6-19, 6-21, 6-23	1014947	13-33, 13-43	101565701	1-65
1014125	5-3, 5-5	1014948	6-19, 6-21, 6-23, 13-33, 13-43	101565702	1-65
1014126	5-3, 5-5	101503202	1-5	101565703	1-65
1014145	6-19, 6-21, 6-23, 12-9	1015064	12-9, 13-27	101565704	1-65
1014153	4-3, 4-5, 4-11	1015072	13-41, 13-45, 13-49	1015660	1-65
1014161	17-9	1015075	1-3	101567202	2-3, 2-5
1014162	17-9	1015091	1-31	101570502	2-5
1014193	12-7	1015137	9-3, 9-5, 9-7, 9-13, 9-15	101570506	2-5, 2-7
1014198	3-23	1015139	9-7, 9-23, 9-25, 9-27	101570507	2-5, 2-7
1014201	14-3, 14-5, 14-7, 14-9, 14-11	1015143	9-7	101570509	2-5, 2-9
1014207	12-7	101524001	6-31	101570512	2-5
1014211	5-5	101524002	6-33	101570513	2-5
1014212	5-5	1015330	7-9, 10-3	101570514	2-7
1014213	5-3, 5-5	1015332	6-5, 6-11, 6-15, 7-3, 8-3	1015707	2-5, 2-7
1014214	5-3, 5-5	1015345	6-21, 6-23	1015720	6-7, 6-25, 6-37, 6-39, 13-17, 13-19, 13-21, 13-47, 13-51
1014216	5-5	1015371	6-19	1015737	6-5, 6-11, 6-15, 6-19, 6-21, 6-23
1014217	5-3, 5-5	1015372	6-19, 6-21, 6-23	1015741	6-19, 6-21, 6-23, 13-33
1014259	17-9	1015373	6-19, 6-21, 6-23	1015752	6-19, 6-21, 6-23, 6-37, 9-19, 13-25, 13-45
1014264	17-9	101539802	12-13	1015760	5-37
1014276	5-15, 5-19, 5-23	101539803	12-15	1015769	6-5, 6-11, 6-15
1014287	11-3, 11-5	1015399	1-63	1015814	10-3, 10-5
1014288	5-3, 5-5, 6-35, 11-3, 11-5, 13-43	1015405	6-19, 6-21, 6-23	101584502	9-17
1014289	6-29	1015426	9-19	1015878	6-19, 6-21, 6-23
1014304	13-41, 13-45, 13-49	1015453	5-37	1015902	1-21, 1-43
1014305	17-3	1015457	5-37	1015914	16-7, 16-9, 16-11, 16-13, 16-15
1014306	1-21, 1-47, 1-51, 1-53, 1-55, 16-13, 16-15	101547601	3-9, 3-15, 3-21, 3-31	1015917	16-7, 16-9, 16-13, 16-15
1014321	1-13, 1-15, 1-39, 1-41	1015507	1-63	1015920	6-15, 6-31
1014375	6-35	1015524	17-5	1015921	9-7
1014387	1-13, 1-15, 1-39, 1-41	1015525	1-49	1015932	6-31, 6-33
1014392	1-47, 1-51, 1-55	1015530	1-53	1015969	7-3, 8-3
1014453	11-3, 11-5	101553901	1-65, 3-25	1016004	9-7
1014454	11-11	1015545	5-5	1016011	11-5
1014471	1-63	1015583	1-63, 5-15, 5-19, 5-23, 5-29, 5-31, 5-33, 5-35	1016074	6-31, 6-33
1014496	17-5	1015597	5-11, 5-25, 5-27	1016077	1-65
1014497	17-5	1015613	5-37	101609401	3-25
1014498	17-5	1015614	5-37	1016103	9-13
1014507	17-5	101562711	1-11, 1-19, 1-27, 1-31, 1-35	101611003	17-9
1014508	17-5	101562712	1-11, 1-19, 1-27, 1-31, 1-33	1016154	5-7
1014510	17-5	101562714	1-11, 1-19, 1-29, 1-31, 1-33	101615504	5-9
1014524	9-3, 9-5	101562715	1-11, 1-19, 1-29, 1-31, 1-35	1016156	5-7, 5-9
1014530	6-7, 13-17, 13-19	101564501	1-11	1016181	5-5
101454602	5-31	101564502	1-11	1016183	5-3, 5-5
101454902	5-29	101564503	1-11	1016201	11-3, 11-5, 12-9
1014555	5-29, 5-31, 5-33, 5-35	101564505	1-11	1016203	11-7
1014573	5-29, 5-31	101564804	1-31	1016219	5-7
1014645	1-5	101564805	1-31		

INDEX

1016263	5-5	1016445	7-5, 8-5	101651412	2-3
1016269	5-3, 5-5	1016446	7-9, 7-11	101651413	2-3
1016289	11-3, 11-5	1016447	7-9	101651414	2-7
1016319	4-13	1016448	7-9	1016516	7-13
1016320	4-13	1016449	7-9, 8-9	1016517	7-9, 8-9
1016337	12-5	1016450	7-9, 8-9	1016518	8-9
1016338	12-5	1016451	7-9	1016519	7-9, 8-9
1016341	12-3	1016452	7-9, 8-9	1016520	7-11
1016342	12-9	1016453	7-11	1016521	7-11, 8-11
1016346	5-13, 5-17, 5-21	1016454	7-11, 8-11	1016523	7-9
1016349	5-13, 5-17, 5-21	1016455	7-5, 8-5	1016524	7-3
1016350	5-13, 5-17, 5-21	1016456	7-3, 7-5, 7-11, 8-3, 8-5	1016525	7-3
1016351	5-13, 5-17, 5-21	1016457	7-7, 8-7	1016526	7-3
1016353	5-13, 5-17, 5-21	1016458	7-9, 7-11, 8-9	1016531	7-3, 8-3
1016356	6-7, 13-17, 13-19, 13-35, 13-37, 13-39	101645901	7-13	1016532	7-13
1016363	13-33	101645902	7-13	1016533	7-13
1016366	13-33	101645903	7-13	1016535	7-11, 8-11
101637605	5-21	1016460	7-13	1016536	7-3
1016379	1-53	101646101	7-13	1016537	7-7, 8-7
1016380	6-5, 6-11	101646102	7-13	1016538	7-11, 8-11
1016384	5-15, 5-19, 5-23	101646103	7-13	1016539	7-3, 8-3
1016385	5-13, 5-17, 5-21	1016467	7-7, 8-7	1016541	7-13, 8-13
1016386	5-15, 5-19, 5-23	1016469	7-13	1016542	7-9
1016387	5-13, 5-15, 5-19, 5-23	1016470	7-13, 8-13	1016544	7-5, 7-9, 7-11, 8-5, 8-9, 8-11
1016389	5-15, 5-19, 5-23	1016471	7-9	1016545	7-9
1016401	6-19	1016472	7-11, 8-11	1016546	9-17
101641002	17-5	1016473	7-7, 8-7	1016547	7-3, 7-13, 8-3, 8-13, 9-13, 9-15
101641101	17-11	1016474	7-9, 8-9	1016548	7-5
101641201	17-9	101647501	7-13	1016549	7-9, 8-9
101641202	17-3	101647502	7-13	101655001	7-13
1016413	17-9	1016479	7-9, 8-9	101655002	7-13
1016414	17-9	1016480	9-13, 9-15	101655003	7-13
1016415	17-9	101648102	9-13, 9-15	101655004	7-13
1016416	17-3	101648203	7-7, 8-7	101655005	7-13
1016417	17-3	1016483	7-9, 8-9	101655006	7-13
1016418	17-7	1016484	7-7	101655007	7-13
1016423	6-19, 6-21, 6-23, 13-33	1016486	9-9, 9-11	101655008	7-13
101642572	9-9	1016489	7-9, 8-9	101655009	7-13
101642575	9-9, 9-11	101649002	9-13, 9-15	1016551	17-11
101642578	9-9, 9-11	1016493	7-5	1016552	17-11
101642580	9-9, 9-11	1016494	7-11, 8-11	1016553	17-11
101642582	9-9, 9-11	1016496	7-11, 8-11	1016554	17-11
101642585	9-11	1016497	7-5, 8-5	1016557	4-5, 4-11
1016429	7-7, 8-7	1016499	9-9, 9-11	1016558	7-13
1016430	7-9	1016501	9-9, 9-11	1016559	7-13
1016431	7-9	1016502	7-7, 8-7	1016560	7-9, 8-9
1016432	7-7, 8-7, 12-3	1016505	7-5	1016561	7-5, 8-5
1016435	7-7	1016506	7-11, 8-11	1016562	7-5, 7-13, 8-5, 8-13
1016436	7-9, 8-9	1016507	7-3, 8-3	1016563	7-9, 8-9
1016437	9-9, 9-11	1016509	7-13	1016564	7-11, 8-11
1016438	9-13, 9-15	1016510	7-11, 8-11	1016565	7-11
1016439	9-13	1016513	12-3	1016566	7-9, 8-9
1016440	7-9, 8-9, 9-13, 9-15	101651402	2-3	1016567	7-11
1016441	9-13, 9-15	101651406	2-3, 2-7	1016568	7-13
1016443	7-3	101651407	2-3, 2-7	1016569	7-9, 8-9
1016444	9-13, 9-15	101651409	2-3, 2-9	1016570	7-7, 8-7

INDEX

1016571	7-13, 8-13	1016819	1-41	101693312	1-51
1016572	9-13, 9-15	1016824	1-33, 1-35	101693313	1-51
1016573	4-5, 4-11	1016835	1-67, 1-69	101693901	1-3
1016576	7-7, 8-7	1016839	1-39, 1-41	101693902	1-3
1016578	7-5, 8-5	101684102	1-33	101693906	1-3
1016579	7-5, 8-5	101684103	1-33	101693908	1-3
1016580	7-13	101684105	1-35	101693909	1-3
1016581	7-7, 8-7	1016842	1-67, 1-69	101693910	1-3
1016582	9-13, 9-15	1016843	1-69	101693911	1-3
1016583	7-9, 8-9	1016845	13-27	101693912	1-3
1016584	7-11, 8-11	1016849	6-7, 6-25, 6-37, 6-39, 13-17, 13-19, 13-21, 13-47, 13-51	101693913	1-3
1016585	9-9, 9-11	1016851	6-7, 6-25, 6-37, 6-39, 13-17, 13-19, 13-21, 13-47, 13-51	101693914	1-3
1016586	7-5, 8-5	1016857	6-7, 6-25, 6-37, 6-39, 13-17, 13-19, 13-21, 13-47, 13-51	1016947	12-9
1016587	7-5, 8-5	1016859	6-7, 6-25, 6-37, 6-39, 13-17, 13-19, 13-21, 13-47, 13-51	1016952	1-7
1016588	7-5, 8-5	1016868	1-3	1016967	1-3
101660404	1-5	1016874	1-53	1016970	1-17
1016622	5-5	1016875	1-53	1016997	6-21, 6-23
1016627	17-7	1016876	1-53	1017006	6-21, 6-23
1016630	6-25, 6-27	1016879	6-17, 13-7	1017029	4-7, 4-9
1016631	13-33	1016880	6-17, 13-7	1017035	6-39, 13-49
1016663	1-65, 5-7, 5-9	1016883	6-31, 6-33	101705701	3-3, 3-5, 3-11, 3-17, 3-27
1016668	1-67, 1-69	1016901	11-5	1017062	6-17, 13-7
1016670	1-17	1016904	8-9, 10-5	1017064	6-17, 13-7
1016672	12-7	1016916	1-9, 1-31	1017065	6-17, 13-7
1016673	16-13, 16-15	101692501	1-3	101707801	3-25
1016679	1-53	101692502	1-3	1017079	1-53
101670201	3-33	101692506	1-3	1017080	1-3
1016717	6-37, 13-45	101692509	1-3	1017082	12-3
1016718	1-17	101692510	1-3	101708301	1-7
1016723	1-13, 1-15, 1-39	101692511	1-3	1017141	1-47, 1-51, 1-55
1016724	1-63	101692512	1-3	1017187	16-13, 16-15
101672701	12-13	101692513	1-3	1017188	11-9
101672702	12-15	101692514	1-3	1017189	16-13, 16-15
1016729	13-11, 13-15	101692515	1-3	1017203	9-5
1016732	13-11, 13-15	101692601	1-47	1017211	4-13
101674702	4-29	101692602	1-47	1017221	7-3
101674704	4-31	101692604	1-47	1017226	5-3, 5-5
1016751	1-13, 1-15, 1-21, 1-39, 1-41, 1-43, 1-45	101692606	1-47	1017231	12-3
101675511	1-21, 1-41, 1-43, 1-45	101692609	1-47	1017235	5-29, 5-31
101675512	1-13, 1-15, 1-21, 1-39, 1-41, 1-43, 1-45	101692610	1-47	1017239	6-21, 6-23
101675514	1-13, 1-15, 1-21, 1-39, 1-41, 1-43, 1-45	101692611	1-47	1017243	6-21, 6-23
101675515	1-13, 1-15, 1-21, 1-39, 1-41, 1-43, 1-45	101692612	1-47	1017259	1-21
101677701	1-13, 1-15, 1-21, 1-39, 1-41, 1-43, 1-45	101692613	1-47	1017266	5-13, 5-17, 5-21
101677702	1-13, 1-15, 1-21, 1-39, 1-41, 1-43, 1-45	1016930	1-41	1017273	5-7, 5-9
101677703	1-21, 1-41, 1-43, 1-45	101693201	3-15, 3-21, 3-31	101728201	1-19
101677705	1-13, 1-15, 1-21, 1-39, 1-41, 1-43, 1-45	101693301	1-51	101728202	1-27
1016801	11-3, 11-5	101693302	1-51	101728203	1-19
1016811	1-7	101693304	1-51	101728204	1-27
1016813	5-37	101693306	1-51	101728210	1-19
1016814	5-37	101693309	1-51	101728211	1-29
1016816	1-41	101693310	1-51	101728213	1-19
		101693311	1-51	101728214	1-29
				101728701	1-55
				101728702	1-55
				101728704	1-55
				101728706	1-55

INDEX

101728708	1-55	1017474	8-3	101791101	4-3, 4-5
101728709	1-55	1017475	8-3	101791901	1-25
101728710	1-55	1017476	8-3	1017936	1-47, 1-51, 1-55
101728711	1-55	1017486	8-3	1017944	14-3, 14-5, 14-7
101728712	1-55	1017487	8-11	1017947	14-3, 14-5, 14-7
1017289	1-23, 1-25	1017490	8-5	1017948	14-3, 14-5
1017310	1-21, 1-43	1017500	8-3	1017949	14-3, 14-5, 14-7
1017313	5-3	1017501	8-13	1017950	14-3, 14-5, 14-7
1017314	5-3	1017502	8-13	1017951	14-3
1017315	5-3	1017503	8-13	1017953	14-3, 14-5, 14-7
101731601	1-23	1017504	8-11	101795701	13-5, 13-11, 13-15, 13-41, 13-45, 13-49
101731602	1-23	1017507	7-7, 8-7	1017958	14-3
101731604	1-23	1017508	8-11	1017961	14-3
101731606	1-23	1017510	8-13	101796201	4-23, 4-25
101731608	1-23	1017511	8-11	101796501	13-31
101731609	1-23	1017512	8-13	101796801	13-31
101731610	1-23	1017513	8-11	1017976	1-63
101731611	1-23	1017514	8-11	101797701	13-41, 13-45, 13-49
101731612	1-23	101751801	8-11	101797702	13-41, 13-45, 13-49
1017317	5-3	101751802	8-11	101797801	13-41, 13-45, 13-49
101737002	2-3, 2-5, 2-7	101751803	8-11	101799201	1-43
1017378	4-23, 4-25	101753005	13-27	101801001	13-31, 16-13, 16-15
1017380	4-23, 4-25	1017653	6-29	101802101	13-31
101738301	11-5	1017686	11-11	101802201	16-7
101738302	11-5	1017689	10-3, 10-5	101802202	16-7
1017384	1-27, 1-29	1017695	1-19, 1-27, 1-29	101802203	16-7
1017424	4-23, 4-25	1017696	4-23, 4-25	101802204	16-5
1017434	8-9	1017699	6-39, 13-49	101802205	16-5
1017435	8-9	1017705	13-31	101802206	16-5
1017442	8-7	1017721	6-7	101802301	16-13
1017443	8-9, 8-11	101773301	8-13	101802401	13-35
1017444	8-9	101773302	8-13	101804301	9-19, 9-23, 9-25, 9-27
1017445	8-9	101773303	8-13	101805701	9-21
1017446	8-9	101773304	8-13	101806901	1-57
1017447	8-11	101773305	8-13	101808401	17-3
1017448	7-5, 8-5	101773306	8-13	101809101	17-5
101744901	8-13	101773307	8-13	101810501	13-35, 13-37, 13-39
101744902	8-13	101773308	8-13	101811301	9-23, 9-25, 9-27
1017450	8-13	101773309	8-13	101811401	9-21
101745101	8-13	101773310	8-13	101811501	9-21
101745102	8-13	101773311	8-13	101811801	9-19
1017453	8-13	1017748	1-47, 1-51, 1-55	101811901	9-19
1017454	8-9	1017774	1-37, 1-43, 1-45	101812301	9-19
1017455	7-5, 8-5	1017799	13-27	101813001	9-19
1017456	7-7, 8-7	1017814	1-51	101813202	17-3
101745701	8-13	1017815	1-51	101814301	16-13
101745702	8-13	1017853	6-7, 13-17, 13-19	101814302	16-15
1017458	8-7	101788201	1-25	101814701	13-23
1017460	8-7	101788202	1-25	101815501	4-3
1017461	9-9, 9-11	101788204	1-25	101815502	4-3
1017463	8-5	101788206	1-25	101816401	4-3
1017466	9-13, 9-15	101788208	1-25	101816501	4-3
1017468	7-5, 8-5	101788209	1-25	101816502	4-3
1017471	8-13	101788210	1-25	101817401	4-23, 4-25
1017472	8-11	101788211	1-25	101818801	4-23
1017473	8-9	101788212	1-25		

INDEX

101820201	9-13	101834801	12-3	101878302	5-11
101821301	6-19	101835601	1-13, 1-15, 13-35, 13-37, 13-39	101879001	6-29
101821501	9-19	101836201	11-11	101879401	5-11
101823101	17-9	101837001	1-59, 1-61	101879501	5-11
101823201	4-3	101837101	9-19	101879601	5-11
101823801	4-3	101837301	6-5, 6-11, 6-15, 6-31, 6-33	101879701	5-11
101824401	9-3, 9-5, 9-7	101838201	16-9, 16-15	101879801	5-11
101825101	3-3, 3-5, 3-13, 3-19, 3-29	101838301	16-9, 16-15	101879901	5-11
101825102	3-15, 3-21, 3-31	101838401	16-9, 16-11, 16-15	101880001	5-11
101825701	9-23, 9-25, 9-27	101838501	16-9	101880101	5-11
101826201	13-21, 13-23	101838601	16-9, 16-11, 16-15	101880201	5-11
101826301	6-25	101840203	13-33	101880301	5-11
101826401	6-27	101840901	1-67	101880701	4-5, 4-11
101826801	13-35, 13-37, 13-39, 13-43	101841101	1-67	101880901	1-19, 1-27, 1-29, 1-33, 1-35
101827101	7-15, 8-15	101841201	1-67	101881101	7-5, 8-5
101827703	6-23	101841202	1-67	101881701	1-19, 1-27, 1-29, 1-33, 1-35, 9-19
101827801	13-43	101841301	1-67	101884801	7-15, 8-15
101827802	13-35, 13-37	101841901	16-13, 16-15	101884901	2-3, 2-5, 2-9
101828301	16-7	101846301	1-69	101886101	12-3
101828501	16-7, 16-9, 16-11, 16-13, 16-15	101850301	9-21	101887101	17-3
101828801	16-5, 16-7	101851101	6-25, 6-27, 13-21, 13-23	101887601	7-3, 8-3, 9-13
101828802	16-5, 16-7	101855002	13-29	101888501	1-13, 1-15
101828901	16-7, 16-9, 16-11	101855801	12-11	101888502	1-13
101828902	16-7, 16-9, 16-11	101856002	13-29	101889401	12-5
101828903	16-7	101856102	6-19, 6-21, 6-23	101890001	12-5
101828904	16-5	101856201	9-21	101890101	12-3
101828905	16-5	101859301	10-3	101890201	12-3
101828906	16-5	101859401	10-5	101890501	12-3
101829001	16-13, 16-15	101861901	4-23, 4-25	101890601	12-3
101829101	16-13, 16-15	101862001	4-25	101890901	12-7
101830601	6-25, 6-27, 13-21, 13-23	101865301	4-13	101891001	12-7
101830701	6-25, 6-27, 13-21, 13-23	101869302	6-29	101891301	12-3
101831101	16-7	101870401	1-3	101891401	12-7
101831503	16-9	101870501	5-15	101891501	12-7
101831504	16-9	101871001	17-3	101891601	12-5
101831601	16-15	101874601	4-13	101891901	12-5
101831701	16-9	101874901	6-29	101892001	12-5
101831702	16-9	101875001	6-29	101892201	12-5
101831801	17-5	101875101	6-29	101892301	12-5
101831901	17-3	101875102	6-29	101892401	12-5
101832001	13-31	101875201	6-29	101892501	12-5
101832101	7-15	101875301	6-29	101892601	12-5
101832202	9-17	101875401	6-29	101892701	12-7
101832302	9-17	101875501	6-29	101892901	12-3
101832601	8-15	101875601	6-29	101893201	12-5
101832701	7-15, 8-15	101875701	6-29	101893801	12-3
101833101	8-15	101875802	6-29	101893901	12-5
101833201	7-15	101876001	6-29	101894303	1-11
101833401	11-11	101876202	6-29	101895401	15-5
101833601	12-3	101876301	6-29	101895501	15-5
101833701	6-29	101876402	6-29	101896001	15-3
101833902	11-3	101876501	6-29	101896501	6-29
101833904	11-5	101877601	6-29	101896901	9-7
101834001	11-11	101877701	6-29	101897001	15-5
101834502	6-25, 6-27, 13-21, 13-23	101878101	6-29	101897201	15-5
101834601	7-15, 8-15	101878201	4-7, 4-9	101897401	15-5

INDEX

101897601	15-5	101921501	9-19	101953801	8-3
101898001	6-35	101922101	15-5	101953901	7-3
101900801	4-17, 5-31	101922201	15-5	101954301	1-9, 1-11, 1-19, 1-27, 1-29, 1-33, 1-35, 1-37, 1-43
101900901	6-25	101922301	7-13	101955001	5-17, 5-21
101903001	13-5	101922501	13-29	101955101	6-7, 13-17, 13-19
101903601	15-5	101922601	12-11	101955301	9-3, 9-5
101903701	15-5	101923001	15-5	101956201	16-11
101904402	13-11	101923201	15-5	101956202	16-11
101904403	13-15	101923501	15-5	101957101	6-27, 13-23
101904502	13-11	101923701	15-5	101957501	13-35, 13-37, 13-39
101904503	13-15	101923901	15-5	101958201	16-11
101904602	13-11	101924301	13-33	101958301	16-11
101904603	13-15	101925601	11-3	101958601	1-13, 1-15
101904702	13-11	101925701	9-19	101960001	3-27
101904703	13-15	101926501	5-33	101960501	3-9, 3-15, 3-21, 3-31
101905601	9-9	101926802	9-23, 9-25	101960601	3-3, 3-5, 3-11, 3-17, 3-27
101905901	9-11	101926803	9-27	101962601	13-35, 13-37, 13-39
101906901	15-5	101926901	12-3	101963301	1-13, 1-15, 1-39
101908101	13-29	101927101	12-3	101963401	1-13, 1-15, 1-39, 7-15, 8-15
101908401	13-29	101927201	12-3	101963901	1-13, 1-15, 1-39
101908601	3-7	101927301	12-3	101964001	1-13, 1-15, 1-39
101908701	13-33, 13-43	101927501	12-5	101964601	3-29
101908902	13-11	101927601	12-5	101965205	13-43
101908903	13-15	101927701	12-5	101966801	13-35
101909201	7-5, 8-5	101927901	12-5	101968701	13-5
101909301	7-5, 8-5	101928001	12-5	101968801	13-35
101909401	7-5, 8-5	101928101	12-5	101969701	6-27, 13-23
101909501	7-5, 8-5	101928301	12-7	101971301	9-19
101909701	7-3	101928601	12-3	101972001	17-7
101909903	13-35, 13-37	101928701	12-3, 15-5, 17-7	101972002	17-7
101909904	13-39	101929301	7-5	101972003	17-7
101910401	1-37, 1-43, 1-45, 13-43	101929401	5-33	101972004	17-7
101910501	12-7	101929501	9-3	101972005	17-7
101911701	13-33	101929801	11-3	101972006	17-7
101912401	4-27	101929802	11-3	101972007	17-7
101914401	6-7, 13-17, 13-19, 16-7, 16-9, 16-13, 16-15	101931501	3-7, 3-29, 13-43	101972009	17-7
101915201	3-9, 3-15, 3-21, 3-31	101931601	13-35	101972011	17-7
101915401	7-11	101932201	6-27, 13-23	101972012	17-7
101915501	7-13	101932401	13-29	101972101	15-5
101915601	7-3	101932501	13-29	101972201	15-5
101915801	7-5	101932601	13-43	101972801	9-19
101916001	8-13	101932701	13-43	101973101	9-9, 9-11
101916101	8-3	101933101	17-7	101973201	9-9
101916201	8-5	101933701	9-23, 9-25, 9-27	101973301	9-11
101916301	8-5	101935301	4-15	101973401	9-15
101916701	6-31, 6-33, 11-3, 11-5	101935501	13-21, 13-23	101973501	16-11
101917601	9-19	101936801	13-25	101978001	13-5
101917701	9-21	101939901	6-29	101979101	12-9, 13-27
101918301	13-33	101942301	13-29, 13-35, 13-37, 13-39, 14-5, 14-7, 14-9, 14-11	101980801	12-5
101918401	2-3, 2-5, 2-9	101946201	1-13, 1-15, 1-21, 1-39, 1-41	101980901	12-5
101918402	2-7	101951501	12-11	101981001	12-5
101918501	4-7, 4-9	101953101	4-17	101984801	5-3, 5-5
101919801	4-23, 4-25	101953103	4-19	101987501	16-11
101920101	13-25, 13-29, 13-35, 13-37, 13-39, 14-5, 14-7, 14-9, 14-11	101953104	4-21	101987701	9-3, 9-5
		101953106	4-13	101987901	6-17, 13-7

INDEX

101988001	6-17, 13-7	102240102	14-5	102406701	9-7
101988002	6-17, 13-7	102240104	14-7	102430901	8-13
101988101	6-17, 13-7	102240501	13-43	102453001	12-5
101988201	6-17, 13-7	102241501	17-7	102453101	12-5
101989901	13-11	102241502	17-7	102518001	3-3
101990001	13-15	102242101	11-11	102519201	3-5, 3-13, 3-19, 3-29
101990402	6-5, 6-21	102243402	17-7	102522001	9-7
101990502	6-11, 6-23	102243403	14-3, 14-5, 14-7, 14-9, 14-11	102540301	7-15, 8-15
101990703	6-25, 6-27	102244501	3-33	102555501	17-3
101990801	4-17, 4-19, 4-21	102248803	17-7	102562401	17-3
101991101	6-25, 6-27	102249901	17-3	102564002	5-15, 5-19, 5-23
101998211	1-9	102250201	13-27	102569304	2-3, 2-5
101998212	1-9	102251501	17-7	102570401	17-11
101998214	1-9	102251901	14-5	102588501	5-29, 5-31
101998215	1-9	102259801	13-43	102601501	17-5
101998501	1-9	102263601	13-43	102603501	17-5
102003201	9-3, 9-5	102263701	13-43	102605201	17-5
102022101	4-17	102265501	14-5	102606101	17-5
102022601	5-13, 5-17, 5-21	102265601	14-5, 14-7	102607501	17-5
102022602	5-13, 5-17, 5-21	102265701	14-5, 14-7	102668801	17-9
102025401	4-15	102265801	14-5, 14-7	102669901	17-7
102025901	6-25, 6-27	102265901	14-5, 14-7	102674001	17-5
102026001	4-23, 4-25	102266001	14-5, 14-7	102674101	17-5
102031901	12-7	102266101	14-5, 14-7	102674201	17-5
102045901	12-3, 12-13, 12-15	102266501	13-43	102674401	17-9
102061201	17-9	102266601	13-29	102674601	17-9
102065901	7-15, 8-15	102266701	13-29	102675001	17-5
102101001	13-25	102267001	14-5, 14-7	102675101	17-5
102101101	13-25	102271601	8-11	102675201	17-5
102155801	11-11	102273101	13-33	102675301	17-5
102158701	3-23	102273201	16-5	102675401	17-5
102162501	13-11, 13-15	102273301	16-5	102684501	5-15, 5-19, 5-23
102162601	4-19, 4-21	102273401	16-5	102686101	17-3
102166901	4-19, 4-21	102273601	16-5	102704701	14-9, 14-11
102169401	17-7	102273701	16-3, 16-5	102704801	14-9, 14-11
102174201	1-9	102273801	16-3, 16-5	102704901	14-9, 14-11
102174202	1-9	102273901	16-3, 16-5	102705001	14-9
102174204	1-9	102274001	16-5	102711201	6-19
102174205	1-9	102278001	5-3, 5-5	102753401	7-9, 8-9
102186001	14-9, 14-11	102289201	5-13, 5-17, 5-21	102766301	5-15, 5-19, 5-23
102186101	14-9, 14-11	102292801	4-13, 4-19, 4-21	102771701	15-5
102186201	14-9, 14-11	102304701	7-9	102806201	13-43
102186301	14-9, 14-11	102304801	8-9	102845203	13-45, 13-49
102186401	14-9, 14-11	102310701	1-25, 1-47, 1-51, 1-55	102865101	9-3, 9-5
102186701	14-9, 14-11	102323101	4-7, 4-9, 4-13, 4-19, 4-21	102871801	5-33, 5-35
102186901	14-9, 14-11	102323201	4-7, 4-9, 4-13, 4-19, 4-21	102886301	15-5
102187001	14-9	102327801	14-5	102886401	15-5
102187101	14-9, 14-11	102330901	17-9	102886501	15-5
102187201	14-9, 14-11	102336001	9-17	102886601	15-5
102196601	13-5	102336101	9-17	102900501	13-35
102196901	13-29	102353201	5-25	103010101	9-3, 9-5
102199001	6-7	102353301	5-25	103200701	13-23
102199601	13-5	102355301	6-35	103234302	3-23
102228701	3-7	102356601	15-5	103246701	1-9
102235201	14-3, 14-5, 14-7, 14-9, 14-11	102356801	15-5	103246801	1-9
102237701	14-3	102357001	15-5	103282601	13-43

INDEX

103316701 13-43
 103316801 13-43
 103316901 13-43
 103325501 14-7
 103325601 14-7
 103325701 14-7
 103325801 14-7
 103332402 6-15, 6-19
 103337601 14-7
 103345701 11-3, 11-5
 103350901 5-33, 5-35
 103351001 5-13, 5-17, 5-21
 103354701 5-13, 5-17, 5-21
 103372101 9-7
 103372302 9-7
 103379501 12-11
 103380201 4-3
 103380202 4-3
 103397901 13-17, 13-19, 16-5, 16-7, 16-13
 103403101 13-43
 103414901 13-17, 13-19, 16-5, 16-7, 16-13
 103428501 16-3
 103428601 16-3
 103428701 16-3
 103429001 16-3
 103429101 16-3
 103429201 16-3
 103429301 16-3
 103429501 16-3
 103429701 16-3
 103434001 16-3
 103439901 16-3
 103477901 5-25, 5-27
 103483101 4-3
 103483102 4-3
 103483201 4-3
 103483301 4-3
 103483401 4-3
 103483501 4-3
 103483601 4-3
 103483701 4-3
 103502701 5-19
 103502801 5-23
 103507001 5-15
 103512801 16-3
 103512901 16-3
 103513001 16-3
 103517401 16-3
 103517601 16-5
 103520301 9-21
 103538701 1-63
 103538901 1-63
 103601601 5-3, 5-5
 103628801 5-19
 103628901 5-23
 103651901 9-7

103653501 5-13, 5-17, 5-21
 103667103 5-25
 103667203 5-25
 103717001 16-3
 103717002 16-3
 103717003 16-3
 103717302 5-27
 103717402 5-27
 103776901 9-7
 103779601 16-3
 103781101 9-3, 9-5
 103781201 9-3, 9-5
 96704416 7-15, 8-15

A

absorber, rear shock 5-29, 5-31
 AC cord 16-5, 16-7, 16-9, 16-11, 16-13, 16-15
 AC cord bushing 16-3, 16-5
 AC cord receptacle 16-11
 AC cordset 16-3
 accelerator bracket and bearing assembly 4-23, 4-25
 accelerator cable 9-17
 accelerator pedal 4-23, 4-25
 accelerator pedal adjustment tool 17-3
 accelerator pivot rod 4-23, 4-25
 accelerator return spring 4-23, 4-25
 accelerator rod 4-27, 4-29, 4-31
 access door 1-49
 adapter
 cable (IQDM) 17-7
 adhesive, guide ring 17-3
 adjuster
 hydraulic brake 17-7
 adjuster, lash 8-11
 air box 9-19
 air box top 9-19
 air filter 9-19
 air intake hose 9-19
 ammeter 16-3, 16-5, 16-7, 16-9, 16-11, 16-13, 16-15
 anchor body 4-5, 4-11
 anchor body kit 4-5, 4-11
 anchor, piston 4-5, 4-11
 angled bumper mount 5-29
 anti-sway bar 5-37
 A-plate strap 5-13, 5-17, 5-21
 A-plate, delta 5-13, 5-17, 5-21
 arbor 17-3
 arm
 governor 12-3
 pivot 12-3
 rocker 7-9, 8-9
 armature 6-29, 14-3, 14-5, 14-7, 14-9, 14-11
 armature conversion kit 6-29
 armrest 1-13, 1-15, 1-21, 1-43, 1-67, 1-69

assembly

accelerator bracket and bearing 4-23, 4-25
 accelerator pivot rod 4-23, 4-25
 air box 9-19
 air box top 9-19
 armature 6-29
 axle 12-7
 bearing, steering shaft 5-3, 5-5
 bell crank and shaft 6-21, 6-23
 brake lever 4-3
 brush connector 6-29
 brush holder 6-29
 carburetor 9-9, 9-11
 connecting rod 7-13, 8-13
 cylinder head 8-9
 delta A-plate 5-13, 5-17, 5-21
 delta shock and gear support 5-13, 5-17, 5-21
 diode 13-33
 drive clutch 11-5
 drive hub 11-3, 11-5
 driven clutch 11-11
 driven clutch fixed-face 11-11
 field coil 6-29
 float 9-9, 9-11
 Forward/Reverse shifter 12-9
 frame and field (motor) 14-9, 14-11
 fuel tank vent 9-7
 governor 12-5
 headlight 6-17, 13-7
 headlight harness 6-17, 13-7
 idle screw 9-9, 9-11
 inner ball joint 5-11
 kingpin 5-15, 5-19, 5-23
 moveable-face 11-3, 11-5, 11-11
 pilot air screw 9-9, 9-11
 plug cap 8-5
 ratchet 4-7, 4-9
 score card plate 5-7
 secondary clutch weight 11-3, 11-5
 steering shaft 5-3, 5-5
 steering wheel 5-7, 5-9
 turn signal lens 6-17, 13-7
 axle 12-7, 15-3, 15-5
 axle shaft oil seal 12-7, 15-5
 axle tube 15-5

B

backing plate, brake 4-5, 4-11
 bag rest mat 1-47, 1-51, 1-55
 bag, desiccant 11-3, 11-5
 ball bearing 8-11
 ball joint 4-7, 4-9, 4-27, 4-29, 4-31, 5-11, 12-11, 12-13, 12-15
 ball joint, left-hand thread 5-11
 ball stud 6-19, 6-21, 6-23, 12-3, 12-9

INDEX

- ball, bearing 5-25
- ball, shifter 12-5
- ball, steel pressure relief 7-7, 8-7
- band, RPM limiter mount 7-5, 8-5
- bar, drive 13-25
- bar, stabilizer 5-37
- barb, vent 9-3, 9-5, 9-7
- barrel, plastic 1-3, 1-13, 1-15, 1-23, 1-25, 1-39, 1-47, 1-51, 1-55, 1-67, 1-69
- battery 6-35
 - 8-volt 13-41, 13-45, 13-49
 - 8-volt moist 13-41, 13-45, 13-49
- battery cap 13-41, 13-45, 13-49
- battery charger 16-5, 16-7, 16-9, 16-11
- battery charger and reel 16-13, 16-15
- battery charger case 16-5, 16-7, 16-9, 16-11, 16-13, 16-15
- battery charger handle 16-5
- battery charger receptacle 13-31
- battery charger transformer 16-5, 16-7, 16-9, 16-11, 16-13, 16-15
- battery charger, onboard 16-13
- battery clamp 6-35
- battery condition indicator, 48-volt 13-23
- battery discharge machine 17-3
- battery hold-down 13-41, 13-45, 13-49
- battery hold-down rod 13-45, 13-49
- battery insulator 1-59, 1-61
- battery terminal protector spray 17-3
- battery thermometer 17-3
- battery warning light 13-21, 13-23
- bearing 15-5
 - ball 5-25, 8-11
 - ball (motor) 14-9, 14-11
 - ball (steering pinion) 5-11
 - front wheel hub 5-27
 - hub 5-27
 - idler 11-3, 11-5
 - inner axle tube 12-7, 15-5
 - lower pinion (steering) 5-11
 - needle 12-5
 - outer axle tube 12-7
 - pivot support 4-23, 4-25
 - steering shaft 5-3, 5-5
 - thrust 5-15, 5-19, 5-23
- bearing and oil seal remover 17-3
- bearing driver set 17-3
- bearing puller 17-3
- bearing puller wedge 17-3
- bearing retainer 14-3, 14-5, 14-7
- bearing seal 5-5
- bearing seat 5-3, 5-5
- bed frame assembly 1-63
- bed seal 1-63
- bed, flat 1-63
- bed, floor plate 1-63
- bell crank 6-19, 12-9
- bell crank and shaft 6-21, 6-23
- bellows 5-11
- belt, drive 11-7, 11-9
- belt, starter/generator 6-31, 6-33, 11-3, 11-5
- beverage holder 1-7
- bezel, choke cable 9-23, 9-25, 9-27
- bezel, headlight 6-17, 13-7
- bezel, taillight 6-39, 13-49
- block, brake-mounting 4-7, 4-9
- block, fuse 6-19, 6-21, 6-23, 13-33
- block, terminal 6-7, 13-17, 13-19, 13-35, 13-37, 13-39
- body kick plate 1-23, 1-25, 1-47, 1-51, 1-55
- body, anchor 4-5, 4-11
- body, center 1-23, 1-25
- body, rear 1-47, 1-51, 1-55
- bolt, J- 13-41
- bolt, U- 5-29, 5-31
- boot, steering column 5-3, 5-5
- boot, switch 13-29
- bottom, air box 9-19
- box
 - air 9-19
 - electrical component 6-19, 6-21, 6-23
 - steering gear 5-11
- bracket 5-33, 6-25, 6-27, 7-3
 - accelerator cable 9-17
 - adjustable starter/generator 6-31, 6-33
 - battery charger 16-13, 16-15
 - brake cable guide 5-17, 5-21
 - brake light switch 6-27, 13-23
 - governor cable 9-17
 - headlight mounting 6-17, 13-7
 - horn 6-7, 13-17, 13-19
 - muffler mounting 10-3, 10-5
 - oil filter mount 7-7, 8-7
 - oil level switch 7-11, 8-11
 - relay mounting 6-21, 6-23, 16-9, 16-13, 16-15
 - retaining 9-23, 9-25, 9-27
 - RPM limiter 7-5, 8-5
 - shifter 12-3, 12-11, 12-13, 12-15
 - shock absorber 5-29, 5-31, 5-35
 - shock mounting 5-29, 5-31, 5-35
 - snubber 7-15, 8-15
 - stabilizer bar mounting 5-37
 - stake side 1-65
 - starter/generator mounting 6-31, 6-33
 - steering column 5-3, 5-5
 - steering column mounting 5-3, 5-5
 - throttle spring return 9-13, 9-15
 - Tow/Run switch 13-29
- brake actuator kit 4-5, 4-11
- brake adjusting mechanism 4-3
- brake adjustment tool 17-3
- brake backing plate 4-5, 4-11
- brake cable 4-13, 4-17, 4-19, 4-21
- brake cable equalizer 4-13, 4-17, 4-19, 4-21
- brake cable hanger 4-17, 5-29, 5-31, 5-33, 5-35
- brake cable release tool 17-3
- brake cluster 4-5, 4-11
- brake drum 4-3, 4-5, 4-11
- brake lever 4-3
- brake lever arm 4-5, 4-11
- brake light switch bracket 6-27, 13-23
- brake mounting block 4-7, 4-9
- brake pedal 4-7, 4-9
- brake pedal adjustment tool 17-3
- brake pedal pad 4-7, 4-9
- brake pedal tension tool 17-3
- brake return spring 4-17, 4-19, 4-21
- brake self-adjusting mechanism 4-3
- brake shoe 4-3, 4-5, 4-11
- brake spring 4-3, 4-5, 4-11
- breaker, circuit 16-3, 16-5, 16-7, 16-9, 16-11, 16-13, 16-15
- breather 12-3, 15-5
- brush 14-3, 14-5, 14-7, 14-9, 14-11
- brush and screw set 6-29
- brush box assembly 14-9, 14-11
- brush connector 6-29
- brush holder 6-29
- brush inspection port cover 6-29
- brush port cover 6-29
- brush rigging 14-3, 14-5, 14-7, 14-9, 14-11
- brush spring 14-3, 14-5, 14-7, 14-9, 14-11
- brush spring set 6-29
- bulb, headlight 6-17, 13-7
- bulb, tail light 6-37, 6-39, 13-45, 13-49
- bumper
 - drive unit (motor) 14-3, 14-5, 14-7, 14-9, 14-11
 - front 1-3
 - front, kit 1-3
 - jounce 5-29, 5-31
 - rear 1-53
 - rubber 1-31, 1-63, 4-7, 4-9
 - seal, long 1-11, 1-19, 1-33, 1-35
 - side trim 1-47, 1-51, 1-67, 1-69
 - spring return 4-23, 4-25
- bumper guard vinyl trim 1-25
- bumper mount 5-31
- bumper mount, angled 5-29
- bumper mounting 1-53
- bumper, seat 1-11, 1-27, 1-29
- bushing 11-3, 11-5
 - AC cord 16-3, 16-5
 - bronze 5-25, 5-27
 - nylon 4-7, 4-9
 - return line 9-7
 - spindle 5-25, 5-27

INDEX

stabilizer bar 5-37
 steel 1-63, 5-15, 5-19, 5-23, 5-29, 5-31, 5-33, 5-35
 urethane 1-63, 5-13, 5-15, 5-17, 5-19, 5-21, 5-23, 5-29, 5-31, 5-33, 5-35
 bushing support 5-37
 bushing, insulated 14-3, 14-5, 14-7
 Buss bar 13-27
 button, choke 9-21
 button, drive 11-11
 buzzer, reverse 6-7, 6-25, 6-37, 6-39, 13-17, 13-19, 13-21, 13-47, 13-51

C

cable
 accelerator 9-17
 brake 4-13, 4-17, 4-19, 4-21
 choke 9-23, 9-25, 9-27
 FNR shifter 12-13, 12-15
 governor 9-17
 IQDM 17-7
 transmission 12-11
 cable retainer 12-11
 calibration test module 17-3
 cam
 driven clutch 11-11
 electrical component box 6-19, 6-21, 6-23
 neutral lockout 12-9
 cam installation tool 17-3
 camshaft 7-11, 8-11
 camshaft shim 8-11
 camshaft spring 8-11
 cap
 battery 13-41, 13-45, 13-49
 corner 1-13, 1-15, 1-39, 1-41
 dust 13-29
 key switch 6-25, 6-27, 13-21, 13-23
 plug 8-5
 seat back 1-13, 1-15, 1-21, 1-39, 1-41, 1-43, 1-45
 spark plug 7-5
 carburetor 9-9, 9-11
 carburetor float level tool 17-7
 carburetor gasket 9-15
 carburetor insulator 9-13, 9-15, 14-3, 14-5, 14-7
 carburetor mounting gasket 9-13, 9-15
 card, safety first 17-9
 case
 battery charger 16-5, 16-7, 16-9, 16-11, 16-13, 16-15
 differential gear 12-7
 FNR switch 13-29
 gear 12-3, 15-5
 rocker 7-9, 8-9
 case, charger 16-3
 center body 1-23, 1-25
 charger bezel tool 17-3
 charger board relay 16-3
 charger case 16-3
 charger hardware 16-3
 charger legs 16-3
 charger receptacle 13-31
 charger, battery 16-5, 16-7
 charger, battery, onboard 16-13
 choke button 9-21
 choke cable 9-23, 9-25, 9-27
 choke cable bezel 9-23, 9-25, 9-27
 choke lever 9-21
 choke lever guide 9-21
 choke positioner 9-21
 choke valve 9-19
 circuit breaker 16-3, 16-5, 16-7, 16-9, 16-11, 16-13, 16-15
 clamp
 battery 6-35
 cable retaining 9-17
 hose 9-3, 9-5, 9-7, 9-13, 9-15, 9-19
 muffler hose 10-3, 10-5
 clevis, upper delta 5-15, 5-19, 5-23
 clip, score card 5-7
 cluster idler gear 12-5
 cluster, brake 4-5, 4-11
 clutch alignment tool 17-5
 clutch pulley 11-3
 clutch removal tool 17-3
 clutch repair kit 11-11
 clutch tool kit 17-5
 clutch weight 11-3, 11-5
 clutch, drive 11-3
 clutch, driven 11-11
 coil, field 6-29
 coil, ignition 7-5, 8-5
 collet 7-9, 8-9
 column, steering 5-3, 5-5
 communication display module 17-5
 component box, electrical 6-19, 6-21, 6-23
 component cover 13-35
 component mounting plate 13-33, 13-43
 compression gauge 17-5
 compression lug 13-35, 13-37, 13-39, 13-43
 compression mount 5-37
 compression spring 9-21
 compressor, piston ring 17-9
 compressor, valve spring 17-11
 computer, onboard 13-35, 13-37, 13-39, 13-43
 connecting bar 1-67, 1-69
 connecting rod 7-13, 8-13
 connector, a- 6-29
 connector, four-pin 13-29
 connector, speed controller 13-43
 continuity tester 17-5
 control board 16-13, 16-15
 controller cover 13-43
 controller cover gasket 13-43
 controller, motor speed 13-43
 controller, speed 13-33
 cord connector 7-11, 8-11
 cord reel 16-13, 16-15
 cord set, DC 16-5
 cord, AC 16-5, 16-7, 16-9, 16-11, 16-13, 16-15
 cord, DC 16-7, 16-9, 16-11, 16-13, 16-15
 Cordset
 PD3, AC 114" 16-3
 PD3, AC 80" 16-3
 PD3, DC 113" 16-3
 PD3, DC 154" 16-3
 PD3, DC 205" 16-3
 counterbalance guide shaft 7-13, 8-13
 counterbalance weight 7-13, 8-13
 cover
 brush inspection port 6-29
 brush port 6-29
 component 13-35
 crankcase 7-11, 8-11
 dust 4-5, 4-11, 5-5, 5-27
 electrical box 6-19, 6-21, 6-23
 fuse block 13-33
 oil pump 7-7, 8-7
 screw head 1-5
 steering column 5-3
 steering column tube 5-5
 cover gasket, controller 13-43
 cover plate 14-9, 14-11
 cover, controller 13-43
 cover, seat back support 1-17
 cover, speed controller 13-43
 cowl 1-3
 crank, bell 12-9
 crankcase 7-13, 8-13
 crankcase cover 8-11
 crankcase cover gasket 7-9, 7-11
 crankcase vent tube 9-13, 9-15
 crankshaft 7-13, 8-13
 crankshaft rod 8-13
 crankshaft seal 7-11
 crankshaft shim 7-13, 8-13
 C-type stop ring 5-11
 cup holder 1-7
 cup, spring 4-23, 4-25
 current limiter 16-11
 cushion, shock absorber 5-29, 5-31, 5-33, 5-35
 cutter, valve seat 17-5, 17-11

D

damper, RPM limiter 7-5, 8-5
 dash component 1-5
 dash panel 1-5
 DC cord 16-7, 16-9, 16-11, 16-13, 16-15

INDEX

- DC cord set 16-5
 - DC cordset 16-3
 - decals
 - battery danger 3-7, 3-13, 3-29
 - bed hold-down bolts 3-25
 - bed load warning 1-65, 3-25
 - component cover 3-7, 3-29, 13-43
 - crush area warning 3-25
 - dash warning 3-3, 3-5, 3-11, 3-17, 3-27
 - driver/passenger 3-9, 3-15, 3-21, 3-31
 - four-passenger warning 3-3, 3-5, 3-11, 3-17, 3-27
 - frame ground 3-9, 3-15, 3-21, 3-31
 - key switch 3-15, 3-21, 3-31
 - no ground warning 3-29
 - on/off 3-3, 3-5, 3-13, 3-19, 3-29
 - operating instructions 3-15, 3-21, 3-31
 - operating instructions (electric) 3-3
 - operating instructions (gas) 3-5, 3-13, 3-19, 3-29
 - private speed mode 3-7
 - rotating parts 3-9, 3-15, 3-21, 3-31
 - Tow/Run switch warning 3-7
 - TransPorter 3-33
 - vehicle loading 1-65, 3-27
 - Villager 3-23
 - delta A-plate 5-13, 5-17, 5-21
 - delta A-plate sub-assembly 5-13, 5-17, 5-21
 - delta shock and gear support 5-13, 5-17, 5-21
 - desiccant bag 11-3, 11-5
 - DF-terminal insulator 6-29
 - diesel tachometer probe 17-9
 - differential 15-3
 - drive unit 15-5
 - differential gear 12-7, 15-5
 - differential gear case 12-7
 - differential housing 15-5
 - differential idler gear 12-7
 - differential pin 12-7
 - diode 6-19, 6-21, 6-23, 13-33, 13-43
 - dipstick 7-3, 8-3
 - door, access 1-49
 - drain plug 7-7, 8-7
 - drain plug gasket 7-7, 8-7, 12-3
 - drink holder 1-7
 - drive bar 13-25
 - drive belt 11-7, 11-9
 - drive button 11-11
 - drive clutch 11-3
 - drive clutch assembly 11-5
 - drive clutch button 11-3, 11-5
 - drive clutch fixed sheave tool 17-5
 - drive clutch fixed-face 11-3, 11-5
 - drive clutch holder tool 17-5
 - drive clutch hub puller 17-5
 - drive clutch puller 17-5
 - drive clutch pulley 11-5
 - drive clutch spider removal tool 17-5
 - drive clutch spring 11-3, 11-5
 - drive clutch weight 11-3, 11-5
 - drive hub 11-3, 11-5
 - drive unit 15-3
 - drive unit bumper 14-3, 14-5, 14-7, 14-9, 14-11
 - driven clutch 11-11
 - driven clutch button 11-11
 - driven clutch cam 11-11
 - driven clutch cam puller 17-5
 - driven clutch fixed-face assembly 11-11
 - driven clutch puller plug 17-5
 - driven clutch spring compression base tool 17-5
 - driven clutch spring compression collar tool 17-5
 - driven clutch spring compression nut tool 17-5
 - driver, drive clutch 11-3, 11-5
 - drum, brake 4-3, 4-5, 4-11
 - dry moly lubricant 17-7
 - duct, intake 9-23, 9-25, 9-27
 - dust cap 13-29
 - dust cover 4-5, 4-11, 5-5, 5-27
- ## E
- E-clip 4-13, 4-17, 4-19, 4-21
 - electrical box cover 6-19, 6-21, 6-23
 - electrical component box 6-19, 6-21, 6-23
 - electrical component mounting plate 13-33
 - end bell, commutator 6-29
 - end bell, output shaft 6-29
 - end cap, motor 14-3, 14-5, 14-7, 14-9, 14-11
 - end shield
 - motor 14-5, 14-7
 - end, tie rod 5-13, 5-17, 5-21
 - engine 7-3, 8-3
 - engine mounting plate 7-15, 8-15
 - engine shroud 7-3, 8-3
 - engine valve spring 7-9
 - equalizer pivot 4-13
 - equalizer rod 4-13, 4-17, 4-19, 4-21
 - equalizer, brake cable 4-13, 4-17, 4-19, 4-21
 - exhaust system 10-3, 10-5
 - exhaust valve 7-9, 8-9
 - extrusion 13-43
 - extrusion, fender 1-3
- ## F
- face, moveable 11-3, 11-5, 11-11
 - fan housing 7-3, 8-3
 - fan shroud 7-3, 8-3
 - fan, flywheel 7-5, 8-5
 - fender extrusion 1-3
 - fender, inner 1-47, 1-51, 1-55
 - fender, rear 1-53
 - field coil 6-29
 - field coil housing 6-29
 - fill plug 12-3
 - filter
 - air 9-19
 - fuel 9-3, 9-5
 - oil 7-7, 8-7
 - oil pump 8-7
 - fitting, thread-forming grease 5-11, 5-25, 5-27
 - fixed-face, drive clutch 11-3, 11-5
 - fixed-face, driven clutch 11-11
 - flat bed 1-63
 - float 9-9, 9-11
 - floor mat 1-5, 1-17, 1-23, 1-25
 - flywheel 7-5, 8-5
 - flywheel fan 8-5
 - flywheel fan plate 7-5, 8-5
 - flywheel puller 17-7
 - FNR handle 12-9, 13-27
 - FNR shifter base 12-9
 - FNR shifter cable 12-13, 12-15
 - FNR switch 13-27
 - FNR switch case 13-29
 - foam, seat 1-9, 1-19, 1-27, 1-29, 1-31, 1-33, 1-35
 - foot rest 1-67, 1-69
 - foot rest mat 1-67, 1-69
 - fork, shift 12-5
 - Forward/Reverse shifter 12-9
 - frame and field assembly (motor) 14-9, 14-11
 - front body support 1-47, 1-51, 1-55
 - front bumper 1-3
 - front bumper kit 1-3
 - front spring retainer plate 5-15, 5-19, 5-23
 - front suspension 5-13, 5-21
 - front suspension sub-assembly 5-17
 - F-terminal hardware 6-29
 - f-terminal insulator 6-29
 - fuel filter 9-3, 9-5
 - fuel gauge sending unit 9-7
 - fuel gauge/hour meter 6-25, 6-27
 - fuel line 9-3, 9-5, 9-7, 9-13, 9-15
 - fuel pump mount 9-3
 - fuel tank 9-7
 - fuel tank strap 9-3, 9-5
 - fuel tank vent 9-7
 - fuse 13-31, 16-7, 16-9, 16-11, 16-13, 16-15
 - 10-amp 6-19, 6-21, 6-23
 - 20-amp 6-19, 6-21, 6-23, 13-33
 - 3/8-amp 13-31, 13-35, 13-37, 13-39
 - charger 16-3, 16-5
 - fuse block 6-19, 6-21, 6-23, 13-33
 - fuse block cover 13-33
- ## G
- gasket 15-5

INDEX

carburetor 9-15
carburetor mounting 9-9, 9-11, 9-13, 9-15
crankcase cover 7-9, 7-11, 8-9, 8-11
drain plug 7-7, 8-7, 12-3
exhaust 7-9, 8-9, 10-3, 10-5
head 7-9, 8-9
insulator 7-9, 8-9, 9-13, 9-15
liquid 12-3, 15-5, 17-7
oil pump 7-7
rocker case 7-9, 8-9
seat 1-9, 1-27, 1-29
sending unit 9-7
taillight 6-37, 6-39, 13-45, 13-49
voltage limiter 13-35, 13-37, 13-39
gasket kit, FE290 7-9
gasket kit, FE350 8-9
gasket, controller cover 13-43
gauge, compression 17-5
gauge, fuel/hour 6-25, 6-27
gear
case 12-3, 15-5
cluster idler 12-5
differential 12-7, 15-5
differential idler 12-7, 15-5
differential output 15-5
helical 7-13, 8-13, 12-5, 12-7
spur 7-13, 8-13, 12-5
synchro 12-5
gear yoke 17-7
governor 12-5
governor arm 12-3
governor cable 9-17
governor cable bracket 9-17
governor shaft installation tool 17-7
governor shield 9-13
grip, pencil 5-7
grommet 9-7, 9-23, 9-25, 9-27, 13-35
guide
choke lever 9-21
intake valve 7-9, 8-9
valve 8-9
valve seat cutter 17-11
guide ring adhesive 17-3

H

hand rail 1-17
handle, battery charger 16-5
handle, FNR 12-9, 13-27
handrail 1-67, 1-69
hanger, brake cable 4-17, 5-29, 5-31, 5-33, 5-35
hardware kit, charger 16-3
hardware, F-terminal 6-29
harness, wire 6-5, 6-11, 6-15, 6-19, 6-21, 6-23, 13-5, 13-11, 13-15
head gasket 7-9, 8-9
head, cylinder 8-9

head, FE290 7-9
headlight assembly 6-17, 13-7
headlight bulb 6-17, 13-7
headlight harness 6-17, 13-7
headlight retainer 6-17, 13-7
heat shrink tube 16-13, 16-15
heatsink 16-5
heatsink and rectifier 16-7, 16-9, 16-11, 16-13, 16-15
helical gear 7-13, 8-13, 12-5, 12-7
hill brake rod 4-7, 4-9
hill brake weld assembly 4-7, 4-9
hinge assembly 1-31
hinge pin 1-31, 1-65
hinge plate 1-9, 1-19, 1-23, 1-25, 1-27, 1-29, 1-33, 1-35, 1-47, 1-51, 1-55
hinge, long 1-31
hinge, stake side 1-65
hip restraint 1-69
hold-down rod, battery 13-45, 13-49
hold-down, battery 13-41, 13-45, 13-49
holder, cup 1-7
horn 6-7, 13-17, 13-19
horn bracket 6-7, 13-17, 13-19
horn button and wire assembly 6-27, 13-23
hose, air intake 9-19
hose, fuel 9-3, 9-5
hour meter/fuel gauge 6-25, 6-27
housing
2-pin 13-25
3-pin 13-25, 13-29, 13-35, 13-37, 13-39, 14-5, 14-7, 14-9, 14-11
4-pin 13-29
6-pin 13-43
differential 15-5
fan 7-3, 8-3
field coil 6-29
hub 5-25, 5-27
hub bearing 5-27
hub, synchronizer clutch 12-5
hubcap 5-25
hydraulic brake adjuster 17-7
hydrometer 17-7

I

idle screw assembly 9-9, 9-11
idler bearing 11-3, 11-5
idler gear, differential 15-5
ignition coil 7-5, 8-5
inner frame snubber 7-15, 8-15
input shaft 15-5
insert, synchronizer 12-5
instrument panel 1-5
insulated bushing 14-3, 14-5, 14-7
insulator gasket 7-9, 8-9, 9-13, 9-15
insulator, battery 1-59, 1-61

insulator, carburetor 9-13, 9-15, 14-3, 14-5, 14-7
intake duct 9-23, 9-25, 9-27
intake pipe 9-13, 9-15
intake valve 7-9, 8-9
intermediate shaft 15-5
internal retaining ring pliers 17-7
IQ display module (IQDM) 17-7

J

J-bolt 13-41
jet, main 9-9, 9-11
jet, pilot 9-9, 9-11
joint
ball 4-7, 4-9, 4-27, 4-29, 4-31, 12-11, 12-13, 12-15
left-hand thread ball 5-11
jounce bumper 5-29, 5-31

K

key
crankshaft 7-5, 7-13, 8-5, 8-13
driven clutch 11-11
On/Off 6-25, 6-27, 13-21, 13-23
square 11-11
starter/generator 6-29
woodruff 12-3
key switch 6-25, 6-27
key switch cap 6-25, 6-27, 13-21, 13-23
key switch, On/Off 13-21, 13-23
kick plate, body 1-23, 1-25, 1-47, 1-51, 1-55
kingpin 5-15, 5-19, 5-23
kit
2-pin housing 13-25
3-pin housing 13-25, 13-29, 13-35, 13-37, 13-39, 14-5, 14-7, 14-9, 14-11
4-pin housing 13-29
6-pin housing 13-43
accelerator pivot rod 4-23, 4-25
anchor body 4-5, 4-11
brake cable 4-17
brake pedal 4-7, 4-9
brake pedal adjustment tool 17-3
brake shoe retainer 4-5, 4-11
clutch repair 11-11
differential gear case 12-7
drive clutch button 11-3, 11-5
drive clutch weight 11-3, 11-5
driven clutch button 11-11
front hub replacement 5-25
fuel tank 9-7
impulse fuel pump rebuild 9-3, 9-5
IQ display module (IQDM) 17-7
magnet and bearing 14-5, 14-7
motor brush 14-9, 14-11
motor brush spring 14-9, 14-11

INDEX

motor cover plate 14-9, 14-11
motor speed sensor 14-9, 14-11
motor terminal hardware 14-9, 14-11
neutral lockout cam 12-9
park brake latch 4-7, 4-9
park brake pedal 4-7, 4-9
PD3 Cordest, AC 114" 16-3
PD3 Cordest, AC 80" 16-3
PD3 Cordest, DC 113" 16-3
PD3 Cordest, DC 154" 16-3
PD3 Cordest, DC 205" 16-3
PD3 hardware 16-3
reverse buzzer 6-7, 6-25, 6-37, 6-39, 13-17,
13-19, 13-21, 13-47, 13-51
shock absorber 5-29, 5-31
shock absorber cushion 5-29, 5-31, 5-33,
5-35
steering column rebuild 5-5
taillight hardware 6-39, 13-49
tune-up 17-9
knob, light switch 6-27, 13-23

L

lash adjuster 8-11
latch, air box 9-19
latch, park brake 4-7, 4-9
L-bracket, motor 14-9
leaf spring 5-29, 5-31, 5-33, 5-35
legs, charger 16-3
lens, headlight 6-17, 13-7
lens, taillight 6-37, 6-39, 13-45, 13-49
lever
change 12-3
choke 9-19, 9-21
transmission shifter 12-3
light
battery warning 13-21, 13-23
oil 6-25, 6-27
tail 6-37, 13-45
light switch 6-27, 13-23
light switch knob 6-27, 13-23
limit switch 6-19, 6-21, 6-23, 6-27, 12-9, 13-23,
13-27
limiter
current 16-11
RPM 7-5, 8-5
voltage 6-7, 13-35, 13-37, 13-39
line, fuel 9-3, 9-5, 9-7, 9-13, 9-15
link, rack and pinion drag 5-11
link, stabilizer bar 5-37
liquid gasket 12-3, 15-5, 17-7
low oil warning light 6-25, 6-27
lubricant, dry moly 17-7
lubricant, moly-teflon 14-3, 14-5, 14-7, 14-9,
14-11, 17-7
lug nut 2-3, 2-5, 2-7, 2-9

lug stud 12-7, 15-5
lug, compression 13-35, 13-37, 13-39, 13-43

M

magnet and bearing kit 14-5, 14-7
magnet, speed sensor 14-5, 14-7, 14-9, 14-11
main jet 9-9, 9-11
main nozzle 9-9
mat, floor 1-5, 1-17, 1-23, 1-25
mat, foot rest 1-67, 1-69
MCOR 13-25
mechanism, brake adjusting 4-3
meter, volt ohm 17-11
module
calibration test 17-3
communication display 17-5
moly-teflon lubricant 17-7
motor
48-volt 14-7
48-volt 3.10 hp series 14-3
48-volt IQ 14-5, 14-9, 14-11
motor armature 14-3, 14-5, 14-7
motor brush 14-5, 14-7
motor brush kit 14-9, 14-11
motor brush spring kit 14-9, 14-11
motor bumper 14-3, 14-5, 14-7, 14-9, 14-11
motor end cap 14-3, 14-5, 14-7, 14-9, 14-11
motor end shield 14-5, 14-7
motor L-bracket 14-9
motor magnet, speed sensor 14-5, 14-7, 14-9,
14-11
motor speed controller 13-43
motor speed sensor 14-5, 14-7, 14-9, 14-11
motor speed sensor kit 14-9, 14-11
motor stator shell and winding 14-3, 14-5, 14-7
motor terminal hardware kit 14-9, 14-11
mount, bumper 5-31
mount, compression 5-37
mount, fuel pump 9-3
mounting block, brake 4-7, 4-9
moveable-face 11-3, 11-5, 11-11
muffler hose clamp 10-3, 10-5

N

name plate 3-33
nameplate kit, amber 3-23
needle bearing 12-5
neutral lockout cam 12-9
nozzle, main 9-9, 9-11
nut, lug 2-3, 2-5, 2-7, 2-9

O

OBC 13-39, 13-43
OBC, onboard computer 13-43
oil filler tube 7-3, 8-3

oil filter 7-7, 8-7
oil filter mount bracket 7-7, 8-7
oil filter screen 7-11, 8-11
oil filter screen plate 7-11, 8-11
oil level sensor 7-11, 8-11
oil level switch bracket 7-11, 8-11
oil pump and rotor 7-7, 8-7
oil pump cover 7-7, 8-7
oil pump filter 8-7
oil pump gasket 7-7
oil pump plate 7-7, 8-7
oil seal 7-9, 7-13, 8-9, 8-11, 8-13, 12-3, 12-5
oil warning light, low 6-25, 6-27
onboard battery charger 16-13
onboard computer 13-35, 13-37, 13-39, 13-43
O-ring 7-3, 7-9, 7-11, 7-13, 8-3, 8-9, 8-11, 8-13
overload bumper spacer 5-29, 5-31

P

pad
accelerator pedal 4-23, 4-25
brake pedal 4-7, 4-9
park brake 4-7, 4-9
paint, touch-up 17-7
park brake latch 4-7, 4-9
park brake pedal 4-7, 4-9
park brake rod sleeve 4-7, 4-9
park brake spacer 4-7, 4-9
park brake torsion spring 4-7, 4-9
pawl 4-7, 4-9
pedal, accelerator 4-23, 4-25
pedal, brake 4-7, 4-9
pedal, park brake 4-7, 4-9
pencil grip 5-7
pilot air screw 9-9
pilot air screw assembly 9-11
pilot jet 9-9, 9-11
pin, differential 12-7
pin, hinge 1-65
pin, piston 7-13, 8-13
pinion, steering 5-11
pipe, intake 9-13, 9-15
piston 7-13, 8-13
piston anchor 4-5, 4-11
piston pin 8-13
piston ring 7-13, 8-13
piston ring compressor 17-9
piston ring pliers 17-9
piston ring set 8-13
pivot arm 12-3
pivot support bearing 4-23, 4-25
plate
bed floor 1-63
body kick 1-47, 1-51, 1-55
bumper mounting 1-53
component mounting 13-33, 13-43

INDEX

cover 14-9, 14-11
 engine mounting 7-15, 8-15
 flywheel fan 7-5, 8-5
 front spring retainer 5-15, 5-19, 5-23
 hinge 1-9, 1-19, 1-23, 1-25, 1-27, 1-29, 1-33, 1-35, 1-47, 1-51, 1-55
 name 3-33
 oil filter screen 7-11, 8-11
 oil pump 7-7, 8-7
 receptacle backing 13-31, 16-13, 16-15
 score card 5-7, 5-9
 shackle 5-35
 spring mounting 5-15, 5-19, 5-23
 steering wheel 5-9
 thrust 12-5, 12-7
 pliers
 internal retaining ring 17-7
 piston ring 17-9
 retaining ring 17-9
 plug
 2-way 13-35, 13-37, 13-39
 4-pin 13-29
 6-pin 13-43
 drain 7-7, 8-7
 driven clutch puller 17-5
 fill 12-3
 spark 7-5, 8-5
 plug cap 8-5
 pole set 6-29
 positioner, choke 9-21
 press weldment 17-5
 protector spray, battery terminal 17-3
 puller
 bearing 17-3
 clutch 17-3
 drive clutch 17-5
 drive clutch hub 17-5
 driven clutch cam 17-5
 flywheel 17-7
 seal 17-9
 special use tool 17-9
 pulley
 clutch 11-3
 drive clutch 11-5
 starter-generator 6-29
 push rod 7-9, 8-9

R

race, front hub bearing 5-27
 rack and pinion drag link 5-11
 rack guide pressure spring 5-11
 rack, steering 5-11
 ratchet, park brake 4-7, 4-9
 reamer, valve guide 17-9
 rear bumper 1-53
 rear fender 1-53

rear spring shackle 5-29, 5-31, 5-33
 receptacle 13-31
 receptacle backing plate 13-31, 16-13, 16-15
 receptacle, AC cord 16-11
 receptacle, battery charger 13-31
 rectifier with heatsink 16-7, 16-9, 16-11, 16-13, 16-15
 reel cord 16-13, 16-15
 regulator, 12-volt 13-35, 13-37, 13-39
 regulator, voltage 6-19, 6-21, 6-23
 relay 6-21, 6-23, 16-9, 16-11, 16-15
 relay mounting bracket 6-21, 6-23, 16-9, 16-13, 16-15
 relay, 12-volt 6-7
 relay, charger board 16-3
 remover, bearing and oil seal 17-3
 resistor assembly 13-33, 13-43
 retainer
 accelerator pedal spring 4-23, 4-25
 bearing 14-3, 14-5, 14-7
 brake shoe 4-5, 4-11
 cable 12-11
 headlight 6-17, 13-7
 shock absorber cushion 5-29, 5-31, 5-33, 5-35
 spring 5-29, 5-31
 spring (drive clutch) 11-3, 11-5
 valve spring 7-9, 8-9
 retaining bracket 9-23, 9-25, 9-27
 retaining ring 5-3, 5-5
 retaining ring pliers 17-9
 return spring bumper 4-23, 4-25
 reverse buzzer 6-7, 6-25, 6-37, 6-39, 13-17, 13-19, 13-21, 13-47, 13-51
 rigging, brush 14-3, 14-5, 14-7
 rim, wheel, white 2-3, 2-7
 ring
 piston 7-13, 8-13
 retaining 5-3, 5-5, 6-19, 6-21, 6-23, 11-3, 11-5, 11-11, 12-9
 snap 5-11, 7-9, 7-13, 8-9, 8-13
 spiral backup 11-3, 11-5
 synchronizer 12-5
 ring, C-type stop 5-11
 ring, piston 8-13
 rivet, blind push 1-3
 rocker arm 7-9, 8-9
 rocker case 7-9, 8-9
 rocker case gasket 7-9, 8-9
 rocker shaft 7-9, 8-9
 rocker switch 13-29
 rod
 accelerator 4-27, 4-29, 4-31
 accelerator pivot 4-23, 4-25
 battery hold-down 13-45, 13-49
 connecting 7-13, 8-13
 crankshaft 7-13, 8-13

equalizer 4-13, 4-17, 4-19, 4-21
 hill brake 4-7, 4-9
 push 7-9, 8-9
 shift 12-5
 rotor, oil pump and 7-7, 8-7
 RPM limiter 7-5, 8-5
 RPM limiter bracket 7-5, 8-5
 RPM limiter damper 7-5, 8-5
 RPM limiter mount band 7-5, 8-5
 rubber bumper 1-31

S

safety first card 17-9
 score card clip 5-7
 score card plate 5-7
 screen, oil filter 7-11, 8-11
 screw, valve clearance adjuster 17-9
 seal
 bearing 5-5
 bed 1-63
 crankshaft 7-11
 intake 9-19
 lip 15-5
 oil 7-9, 7-13, 8-9, 8-11, 8-13, 12-3, 12-5, 12-7, 15-5
 steering pinion dust 5-11
 vertical socket dust 5-11
 seal puller 17-9
 sealant 12-3, 15-5
 seat
 spring 7-9, 8-9
 valve 7-7, 8-7
 seat back 1-13, 1-15, 1-21, 1-39, 1-41, 1-43, 1-45
 seat back assembly 1-13, 1-15, 1-21, 1-37, 1-39, 1-41, 1-43, 1-45
 seat back assembly, four-passenger 1-37
 seat back cap 1-13, 1-15, 1-21, 1-39, 1-41, 1-43, 1-45
 seat back mounting bracket 1-39, 1-41
 seat back support cover 1-17
 seat back, white 1-13, 1-15, 1-21, 1-39, 1-41, 1-43, 1-45
 seat bottom assembly 1-9, 1-11, 1-19, 1-27, 1-29, 1-31, 1-33, 1-35
 seat bottom cover 1-9
 seat bumper 1-11, 1-27, 1-29
 seat cover, vinyl 1-9, 1-11, 1-19, 1-27, 1-29, 1-31, 1-33, 1-35
 seat cover, white 1-9
 seat foam 1-9, 1-19, 1-27, 1-29, 1-31, 1-33, 1-35
 seat gasket 1-9, 1-27, 1-29
 seat hinge 1-41
 seat strap 1-11, 1-33, 1-35
 seat support 1-19, 1-27, 1-29
 seat support panel assembly 1-13, 1-15, 1-39
 seat support, four-passenger 1-31
 seat, bearing 5-3, 5-5

INDEX

- sending unit, fuel gauge 9-7
- sensor, motor speed 14-5, 14-7, 14-9, 14-11
- sensor, oil level 7-11, 8-11
- sensor, speed 14-5, 14-7
- set, brush and screw 6-29
- set, pole 6-29
- shackle plate 5-35
- shackle, rear spring 5-29, 5-31, 5-33
- shaft
 - change 12-3
 - counterbalance guide 7-13, 8-13
 - input 15-5
 - intermediate 15-5
 - rocker 7-9, 8-9
 - steering column 5-3
 - transmission 12-5
- shield, governor 9-13
- shift fork 12-5
- shift rod 12-5
- shifter base, FNR 12-9
- shifter bracket 12-3, 12-11, 12-13, 12-15
- shim, camshaft 8-11
- shim, crankshaft 7-13, 8-13
- shim, tilt bed pivot 1-63
- shock absorber 5-13, 5-17, 5-21, 5-33, 5-35
- shock absorber (rear) 5-29, 5-31
- shock absorber cushion 5-29, 5-31, 5-33, 5-35
- shock absorber cushion retainer 5-29, 5-31, 5-33, 5-35
- shock mounting bracket 5-29, 5-31, 5-35
- shoe, brake 4-3, 4-5, 4-11
- shroud 8-3
- shroud, engine 7-3, 8-3
- shroud, fan 7-3, 8-3
- sleeve
 - delta A-plate 5-13, 5-17, 5-21
 - governor 12-5
 - park brake rod 4-7, 4-9
 - synchronizer 12-5
- snap ring 5-11, 7-9, 7-13, 8-9, 8-13
- snubber bracket 7-15, 8-15
- snubber, inner frame 7-15, 8-15
- socket 5-11
- solenoid, 12-volt 6-19, 6-21, 6-23
- solenoid, 48-volt 13-33, 13-43
- spacer
 - accelerator pivot rod 4-23, 4-25
 - overload bumper 5-29, 5-31
 - park brake 4-7, 4-9
- spanner wrench 17-9
- spark plug 7-5, 8-5
- spark plug cap 7-5
- speed controller 13-33, 13-43
- speed controller connector 13-43
- speed controller cover 13-43
- speed sensor 14-5, 14-7, 14-9, 14-11
- speed sensor magnet 14-5, 14-7, 14-9, 14-11
- speed sensor, motor 14-5, 14-7, 14-9, 14-11
- spiral backup ring 11-3, 11-5
- spray, battery terminal protector 17-3
- spring
 - accelerator return 4-23, 4-25
 - brake 4-5, 4-11
 - brake return 4-17, 4-19, 4-21
 - brush 6-29, 14-3, 14-5, 14-7, 14-9, 14-11
 - camshaft 8-11
 - compression 5-7, 9-21
 - drive button 11-3, 11-5
 - drive clutch 11-3, 11-5
 - driven clutch 11-11
 - engine valve 7-9
 - extension return 9-19
 - forward/reverse cam 12-9
 - leaf 5-29, 5-31, 5-33, 5-35
 - park brake torsion 4-7, 4-9
 - rack guide pressure 5-11
 - shifter 12-5
 - steering shaft compression 5-3, 5-5
 - synchronizer 12-5
 - throttle return 9-13, 9-15
 - valve 8-9
- spring cup 4-23, 4-25
- spring mounting plate 5-15, 5-19, 5-23
- spring retainer 5-29, 5-31
- spur gear 7-13, 8-13, 12-5
- stabilizer bar 5-37
- stabilizer bar link 5-37
- stabilizer bar mounting bracket 5-37
- stake side 1-65
- stake side bracket 1-65
- stake side hinge 1-65
- stake side kit 1-65
- stand-offs, plastic 16-3
- starter/generator 6-29
- starter/generator belt 6-31, 6-33, 11-3, 11-5
- starter/generator mounting bracket 6-31
- starter/generator pulley 6-29
- stator shell and winding 14-3, 14-5, 14-7
- steel bushing 1-63, 5-15, 5-19, 5-23, 5-29, 5-31, 5-33, 5-35
- steel pressure relief ball 7-7, 8-7
- steering column 5-3, 5-5
- steering column bearing press tool 17-9
- steering column retaining ring tool 17-9
- steering gear box 5-11
- steering pinion 5-11
- steering pinion dust seal 5-11
- steering rack 5-11
- steering shaft assembly 5-3, 5-5
- steering shaft column 5-5
- steering shaft compression spring 5-3, 5-5
- steering wheel 5-7, 5-9
- steering wheel plate 5-9
- steering wheel puller tool 17-9
- stem, valve 2-3, 2-5, 2-7, 2-9
- stiffener 1-11
- stiffener, flywheel side 7-15, 8-15
- stiffener, PTO side 8-15
- strap, A-plate 5-13, 5-17, 5-21
- strap, fuel tank 9-3, 9-5
- strap, seat 1-11, 1-33, 1-35
- stud 7-15, 8-15
 - lug 12-7, 15-5
- stud, ball 6-19, 6-21, 6-23, 12-3, 12-9
- support yoke (steering) 5-11
- support, bushing 5-37
- support, front body 1-47, 1-51, 1-55
- suppressor, voltage 6-7, 13-17, 13-19, 16-7, 16-9, 16-11, 16-13, 16-15
- suspension, front 5-13, 5-21
- switch
 - FNR 13-27
 - four-position 16-9, 16-11, 16-15
 - key 6-25, 6-27, 13-21, 13-23
 - light 6-27, 13-23
 - limit 6-19, 6-21, 6-23, 6-27, 12-9, 13-23, 13-27
 - rocker 13-29
 - Tow/Run 13-29
- switch rubber boot 13-29
- synchro gear 12-5
- synchronizer clutch hub 12-5
- synchronizer insert 12-5
- synchronizer sleeve 12-5
- synchronizer spring 12-5
- system, exhaust 10-3, 10-5

T

- 12-volt solenoid 6-19, 6-21, 6-23
- tachometer 17-9
- tachometer probe, diesel 17-9
- tail light bulb 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight assembly 6-39, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39, 13-49
- taillight lens 6-37, 6-39, 13-45, 13-49
- taillight 6-37, 6-39, 13-45, 13-49
- taillight base 6-39, 13-49
- taillight bezel 6-39, 13-49
- taillight gasket 6-37, 6-39, 13-45, 13-49
- taillight hardware kit 6-39,

INDEX

throttle return spring 9-13, 9-15
throttle spring return bracket 9-13, 9-15
thrust bearing 5-15, 5-19, 5-23
thrust plate 12-5, 12-7
tie rod end 5-13, 5-17, 5-21
tie wrap 5-11, 6-7, 6-19, 6-21, 6-23, 9-23, 9-25, 9-27, 13-17, 13-19, 13-21, 13-29, 13-35, 13-37, 13-39, 13-43
tire 2-3, 2-5, 2-7, 2-9
tire and wheel assembly 2-3, 2-5, 2-7, 2-9
tool
 accelerator pedal adjustment 17-3
 belt tensioning, starter/generator 17-11
 brake adjustment 17-3
 brake cable release 17-3
 brake pedal adjustment 17-3
 brake pedal tension 17-3
 cam installation 17-3
 carburetor float level 17-7
 charger bezel 17-3
 clutch alignment 17-5
 cT-wrench 17-5
 drive clutch fixed sheave 17-5
 drive clutch holder 17-5
 drive clutch spider removal 17-5
 driven clutch spring compression base 17-5
 driven clutch spring compression collar 17-5
 driven clutch spring compression nut 17-5
 governor shaft installation 17-7
 puller, special use 17-9
 steering column bearing press 17-9
 steering column retaining ring 17-9
 steering wheel puller 17-9
 transaxle axle seal 17-9
 transaxle pinion seal 17-9
 transmission 17-9
 valve guide driver 17-9
 valve seat cutter 17-5
tool kit, clutch 17-5
touch-up paint 17-7
Tow/Run switch 13-29
Tow/Run switch bracket 13-29
transaxle 15-3, 15-5
transaxle axle seal tool 17-9
transaxle housing 15-5
transaxle pinion seal tool 17-9
transaxle, unitized 12-3
transformer, battery charger 16-5, 16-7, 16-9, 16-11, 16-13, 16-15
transmission cable 12-11
transmission shaft 12-5
transmission tool 17-9
trim
 cowl 1-3
 seat bottom 1-13, 1-15, 1-39

tube
 crankcase vent 9-13, 9-15
 oil filler 7-3, 8-3
tune-up kit 17-9
turn signal lens 6-17, 13-7
T-wrench tool 17-5
U
U-bolt 5-29, 5-31
u-bolt 5-33, 5-35
unitized transaxle 12-3
upper delta clevis 5-15, 5-19, 5-23
urethane bushing 1-63, 5-13, 5-15, 5-17, 5-19, 5-21, 5-23, 5-29, 5-31, 5-33, 5-35

V
valve
 choke 9-19
 exhaust 7-9, 8-9
 fuel pickup tube 9-7
 intake 7-9, 8-9
 reed 7-9, 8-9
valve clearance adjuster screw 17-9
valve guide 8-9
valve guide driver tool 17-9
valve guide reamer 17-9
valve guide, intake 7-9, 8-9
valve seat 7-7, 8-7
valve seat cutter 17-5, 17-11
valve seat cutter guide 17-11
valve seat cutter tool 17-5
valve seat t-wrench 17-11
valve spring 8-9
valve spring compressor 17-11
valve spring retainer 7-9, 8-9
valve stem 2-3, 2-5, 2-7, 2-9
vent barb 9-3, 9-5, 9-7
vertical socket dust seal 5-11
volt ohm meter 17-11
voltage limiter 6-7, 13-35, 13-37, 13-39
voltage limiter gasket 13-35, 13-37, 13-39
voltage regulator 6-19, 6-21, 6-23
voltage suppressor 6-7, 13-17, 13-19, 16-7, 16-9, 16-11, 16-13, 16-15

W
warning light, low oil 6-25, 6-27
wedge, bearing puller 17-3
weight
 clutch 11-3, 11-5
 counterbalance 7-13, 8-13
 secondary clutch 11-3, 11-5
weldment
 press 17-5
wheel 2-3, 2-5, 2-7, 2-9

wheel and tire assembly 2-3, 2-5, 2-7, 2-9
wheel rim, white 2-3, 2-7
wheel, steering 5-7, 5-9
wire harness 6-5, 6-11, 6-15, 6-19, 6-21, 6-23, 13-5, 13-11, 13-15
woodruff key 12-3
wrap, tie 5-11, 6-7, 6-19, 6-21, 6-23, 9-23, 9-25, 9-27, 13-17, 13-19, 13-21, 13-29, 13-35, 13-37, 13-39, 13-43
wrench, spanner 17-9

Y
yoke, gear 17-7
yoke, support (steering) 5-11



Club Car, Inc.
P.O. Box 204658
Augusta, GA 30917-4658
USA

Web	www.clubcar.com
Phone	1.706.863.3000 1.800.ClubCar
Int'l	+1 706.863.3000
Fax	1.706.863.5808