




2018 Carryall 100 and 100CE Illustrated Parts List

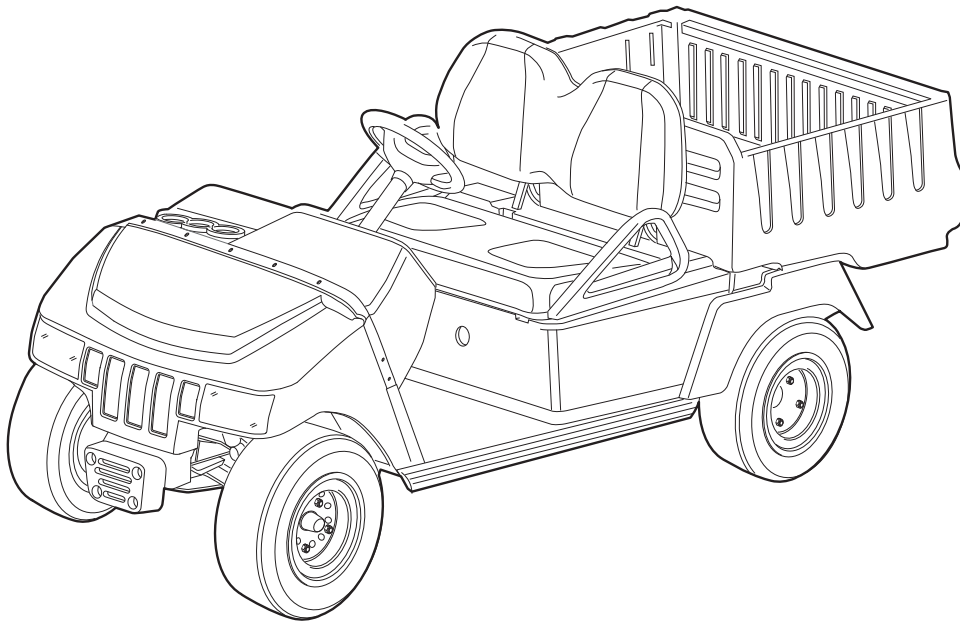

Gasoline and Electric Vehicles

Manual Number 105344110
Edition Code B

USING THE ILLUSTRATED PARTS LIST

WARNING

- **This manual is to be used only for identification and ordering of service parts. Be sure to read and use the maintenance and service manual before attempting any vehicle repairs.**

This manual is divided into several sections. Note that there are flags on the outside edge of each page. The first flag contains the section number of which that page is a part. The other flags contain the letters G or E, signifying that the page pertains to either the gasoline vehicle, the electric vehicle, or both.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section numbers, and under them, the individual page titles and numbers to be found in that section. The index can be used to find specific parts and assemblies. The index is divided into numerical and alphabetical listings with the page numbers in italic text.

There is a two-page spread for each individual page title in the Table of Contents. On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used.

Note that a part description may be indented. This indentation corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to *level 2* is a component of the *level 1* part (assembly) that it is listed under. A *level 3* part is a component of the *level 2* part that it is listed under, and a *level 4* part is a component of the *level 3* part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part is *the quantity used per next higher level assembly of which it is a component*. A part that is not indented is a *level 1* part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.

HOW TO ORDER PARTS

Replacement parts and accessories can be obtained from our network of authorized dealers and distributors. You can obtain the name and phone number of your closest authorized Club Car dealer or distributor by visiting our web site at www.clubcar.com and clicking on the "Distributor Search" link or by calling our toll-free Service Parts and Technical Assistance hotline at (800) 872-2246 or (706) 863-3000, extension 3887.



P. O. Box 204658
Augusta, Georgia 30917-4658 USA
Telephone 706-863-3000
Service Parts Fax 706-855-7413
www.clubcar.com

NOTE: *This illustrated parts list represents the most current information at the time of publication. Club Car, Inc. is continually working to further improve its vehicles and other products. These improvements may affect the parts used to service the vehicle. Any modification and/or significant change in specifications will be forwarded to all Club Car and Carryall distributors/dealers and will, when applicable, appear in future editions of this illustrated parts list.*

Club Car, Inc. reserves the right to change specifications and designs at any time without notice and without the obligation of making changes to units previously sold.

CONTENTS

SECTION 1 – BODY AND TRIM

Front Body	1-3
Canopy Support System	1-5
Access Panel and Heat Shield	1-7
Bumper – Gasoline Vehicles	1-9
Bumper – Electric Vehicles	1-11
Brush Guard	1-13
Dash Box	1-15
Glove Box	1-17
Side Trim	1-19
Nerf Bar	1-21
Rear Body and Fender – Gasoline Vehicle	1-23
Rear Body and Fender – Electric Vehicle	1-25
Front Seat Bottom and Armrests	1-27
Seat Back	1-29
Cargo Bed	1-31
Bed Hinge	1-33

SECTION 2 – WHEELS AND TIRES

Wheels and Tires	2-3
Hubcap	2-5

SECTION 3 – LOGO AND DECALS

Logo Decals	3-3
Safety Decals – Gasoline Vehicles	3-5
Safety Decals – Gasoline Vehicles, Continued	3-7
Safety Decals – Gasoline Vehicles, Continued	3-9
Safety Decals – Electric Vehicles	3-11
Safety Decals – Electric Vehicles, Continued	3-13

SECTION 4 – LIGHTS, CONTROLS, AND INDICATORS

Headlights	4-3
Lighting System Components – Gasoline Vehicles	4-5
Lighting System Components – Electric Vehicles	4-7
Turn Signal Kit – Gasoline and Electric Vehicles	4-9
Reverse Buzzer	4-11
Instrument Panel – Gasoline Vehicle	4-13
Instrument Panel – Electric Vehicle	4-15

CONTENTS

Battery Condition Indicator – Electric Vehicles	4-17
DC Converter – IQ System Electric Vehicle	4-19
Voltage Limiter – Gasoline Vehicle	4-21
Strobe Light, Post-Mounted – Gasoline Vehicles	4-23
Strobe Light, Post-Mounted – Electric Vehicles	4-25
Strobe Light, Canopy-Mounted	4-27
Horn	4-29
Hour Meter – IQ System and IQ Plus Electric Vehicles	4-31
Taillights	4-33

SECTION 5 – BRAKE SYSTEM

Brake Pedal Assembly	5-3
Accelerator Pedal Assembly – Electric Vehicles with MCOR	5-5
Accelerator Pedal Assembly – Gasoline Vehicles	5-7
Accelerator Rod – Gasoline Vehicles	5-9
Rear Brake Assembly, Self-Adjusting – Vehicle with 2-Wheel Brakes	5-11
Brake Cables and Equalizer	5-13

SECTION 6 – STEERING AND SUSPENSIONS

Steering Wheel	6-3
Steering Column	6-5
Steering Gear Assembly	6-7
Front Suspension, Lower – Vehicles with Two-Wheel Brakes	6-9
Front Suspension, Upper	6-11
Front Spindles and Hubs	6-13
Rear Suspension	6-15

SECTION 7 – ELECTRICAL SYSTEM – GASOLINE VEHICLES

Wiring, Fuses, and Diodes, Pedal-Start – EFI, CA100	7-3
Wiring, Fuses, and Diodes, Key-Start – EFI, CA100-CE	7-5
Starter/Generator (Model 114-04-4006), Key-Start – EFI	7-7
Starter/Generator (Model 114-05-4001) , Pedal-Start – EFI	7-9
Starter/Generator Mounting, EX40	7-11
Electrical Component Box, Key-Start – EX40	7-13
Electrical Component Box, Pedal-Start – EX40	7-15
Forward/Reverse Shifter Switches, Key-Start – EFI, CA100CE	7-17
Forward/Reverse Shifter Switches, Pedal-Start – EFI, CA100	7-19
Charging Diode, Key-Start – EFI	7-21
Top-Post Battery – Gasoline Utility Vehicles	7-23

CONTENTS

SECTION 8 – ENGINE (SUBARU EX40)

Tune-Up Parts – Subaru EX40	8-3
Engine and Engine Mounting, Utility	8-5
Automatic Compression Release (ACR) Service Kit – Subaru EX40	8-7
Fan and Shroud – EX40	8-9
Air Deflector – EX40	8-11
Ignition Components and Flywheel – EX40	8-13
Sensors – EX40	8-15
Cylinder Head – EX40	8-17
Valvetrain and Timing Chain – EX40	8-19
Crankcase – EX40	8-21
Crankshaft and Piston – EX40	8-23

SECTION 9 – FUEL SYSTEM – EFI

Fuel System with Sending Unit, Top Fill – EFI	9-3
Fuel Tank Kits – EFI	9-5
Carbon Canister – EFI, Carryall 100	9-7
Throttle Body and ECU – EFI	9-9
Throttle Body Mounting – EFI	9-11
Governor and Accelerator Cables – EFI	9-13
Air Filter System and Intake Hose – EFI	9-15

SECTION 10 – EXHAUST SYSTEM – EX40 ENGINE

Exhaust System – Utility	10-3
--------------------------------	------

SECTION 11 – DRIVE BELT AND CLUTCHES – EX40

Drive Belt – Key-Start Vehicles with EFI	11-3
Drive Belt – Pedal-Start Vehicles with EFI	11-5
Drive Clutch – Key-Start Vehicles	11-7
Drive Clutch – Pedal-Start Vehicles with EFI	11-9
Driven Clutch (Standard Speed) – Key Start and Pedal Start	11-11

SECTION 12 – TRANSAXLE (FUJI ED65)

Forward/Reverse Shifter – EFI	12-3
Shifter Cable	12-5
Shift Lever and Bracket – Pedal-Start Engines	12-7
Shift Lever and Bracket – Key-Start Engines	12-9
Governor Arm and Brackets – Utility Vehicles	12-11

CONTENTS

Transaxle (ED65), Limited Slip – Page 1 of 3	12-13
Transaxle (ED65), Open – Page 1 of 3	12-15
Transaxle (ED65), Limited Slip and Open – Page 2 of 3	12-17
Transaxle (ED65), Limited Slip – Page 3 of 3	12-19
Transaxle (ED65), Open – Page 3 of 3	12-21
Hub, Rear	12-23
Differential Guard, ED65 – Gasoline Vehicle	12-25

SECTION 13 – ELECTRICAL SYSTEM – ELECTRIC VEHICLES

Forward/Reverse Switch, Tow/Run Switch	13-3
Motor Controller Output Regulator (MCOR)	13-5
Wiring – Electric Vehicle	13-7
Battery Charger Receptacle	13-9
Computer, Controller, and Solenoid	13-11
Batteries 8-Volt, Heavy Duty	13-13
Single Point Watering System (SPWS)	13-15
Hand Pump and Deionizer (Battery-Powered Quality Light)	13-17

SECTION 14 – ELECTRIC MOTOR

Motor (Model EJ8-4001A) – Electric Vehicle	14-3
--	------

SECTION 15 – TRANSAXLE – ELECTRIC VEHICLES

Transaxle – Electric Vehicles	15-3
Differential Guard – Electric Vehicles	15-5

SECTION 16 – BATTERY CHARGERS

Battery Charger, High-Frequency – U.S./Canada	16-3
Battery Charger, High-Freq., 2.74 m DC Cord – Global	16-5
Battery Charger, High-Freq., 3.66 m DC Cord – Global	16-7
Battery Charger, High-Freq., 6.1 m DC Cord – Global	16-9
Cords – Battery Charger, High-Frequency	16-11

SECTION 17 – MAINTENANCE AND SERVICE TOOLS

Maintenance and Service Tools	17-3
Maintenance and Service Tools, Continued	17-5
Maintenance and Service Tools, Continued	17-7
Maintenance and Service Tools, Continued	17-9
Maintenance and Service Tools, Continued	17-11

CONTENTS


SECTION i – INDEX

BODY AND TRIM

1

G

E

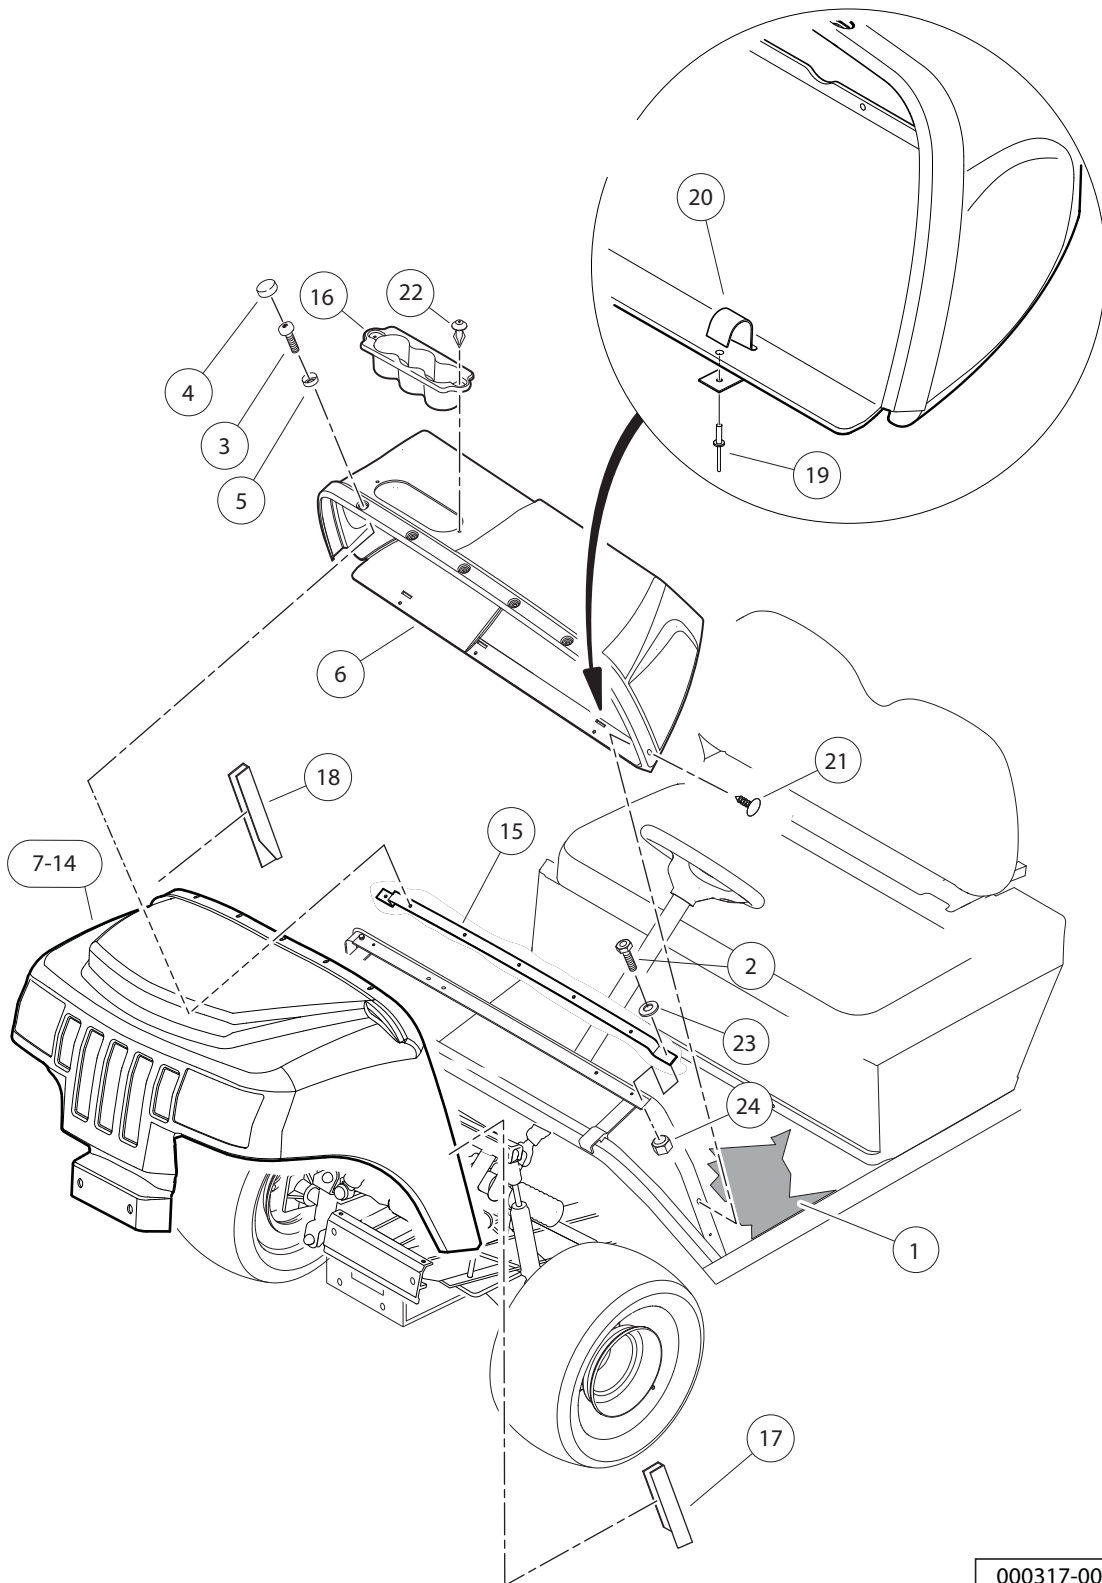1**G****E**

000317-004


FRONT BODY

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	<u>101503202</u>	Floormat	1			
2	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2			
3	<u>102025801</u>	Screw, 1/4-20 X .75 Torx Pn Hd	5			
4	<u>102045001</u>	Cap, 1/4" Plastic Screw Head	5			
5	<u>102048401</u>	Washer, 1/4 Id Scalloped Plast	5			
6	<u>102766701</u>	Dash	1			
7	<u>102778501</u>	Cowl, Red	1			
8	<u>102778502</u>	Cowl, Green	1			
9	<u>102778503</u>	Cowl, Camouflage (Husqvarna)	1			
10	<u>102778504</u>	Cowl, Classic Blue	1			
11	<u>102778505</u>	Cowl, XRT- Black	1			
12	<u>102778507</u>	Cowl, XRT- Camo Hard Wood HD (Standard camo for XRT850)	1			
13	N/A	Cowl, XRT- Camo Max4 HD	1			
14	<u>102778509</u>	Cowl, XRT- Silver	1			
15	<u>102778601</u>	Support, Upper Cowl	1			
16	<u>102796701</u>	Object Holder	1			
17	<u>102822001</u>	Cowl Cover, Driver-Side	1			
18	<u>102822002</u>	Cowl Cover, Passenger-Side	1			
19	<u>102828701</u>	Rivet	10			
20	<u>102857401</u>	Clip, Dash	3			
21	<u>102914301</u>	Push Pin, Black	2			
22	<u>102967901</u>	Rivet, Removable, Tuflok 1/4"	2			
23	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2			
24	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2			

1

G

E

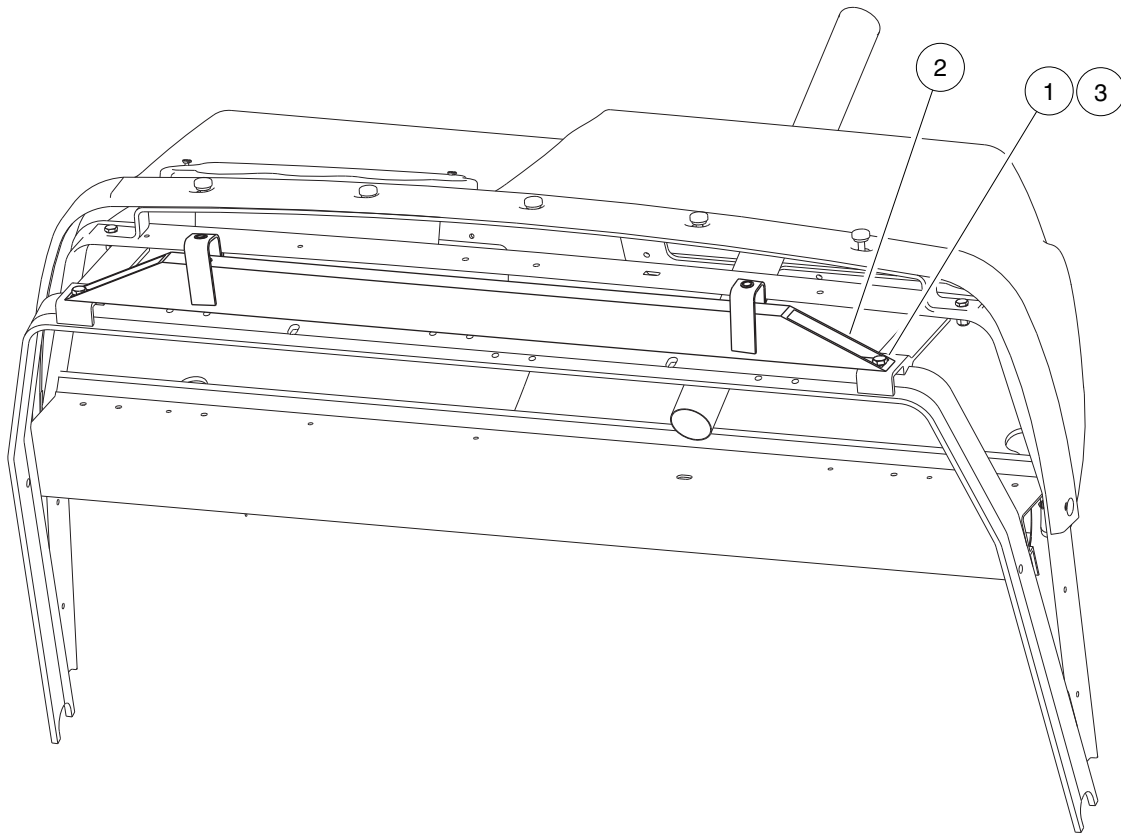

000582-001


CANOPY SUPPORT SYSTEM

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102242101</u>	Screw, 5/16-18 X 3/4 Hex-Head with Patch	2
2	<u>103313301</u>	Asm, Brace, Canopy, Tube, Xrt	1
3	<u>1241</u>	Washer, 5/16 Type A Flat	1

1

G

E

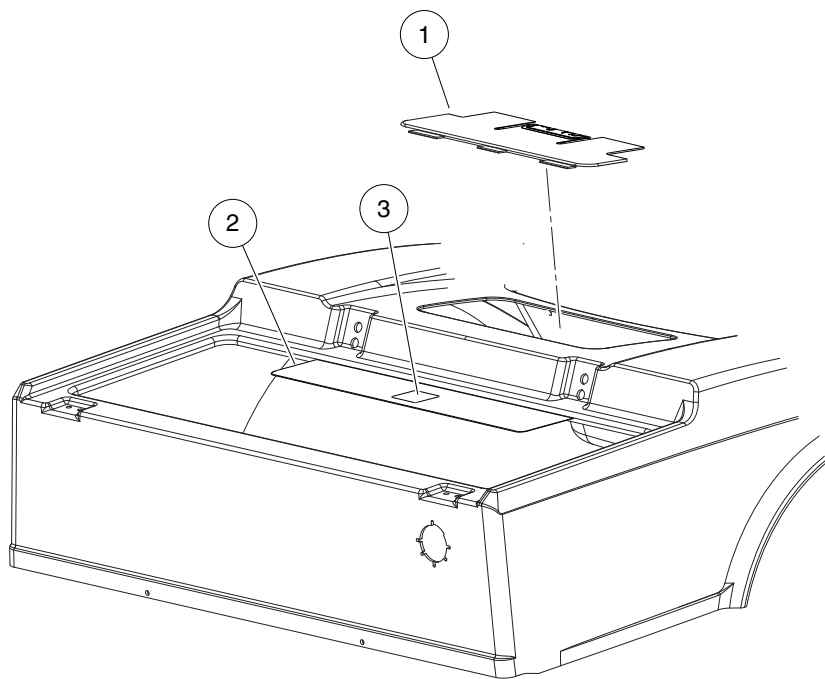

000819-002

ACCESS PANEL AND HEAT SHIELD

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>101303202</u>	Access Panel - Black, Cut	1
2	<u>101806901</u>	Shield, Heat	1
3	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	1

1


G

E

1

G

E

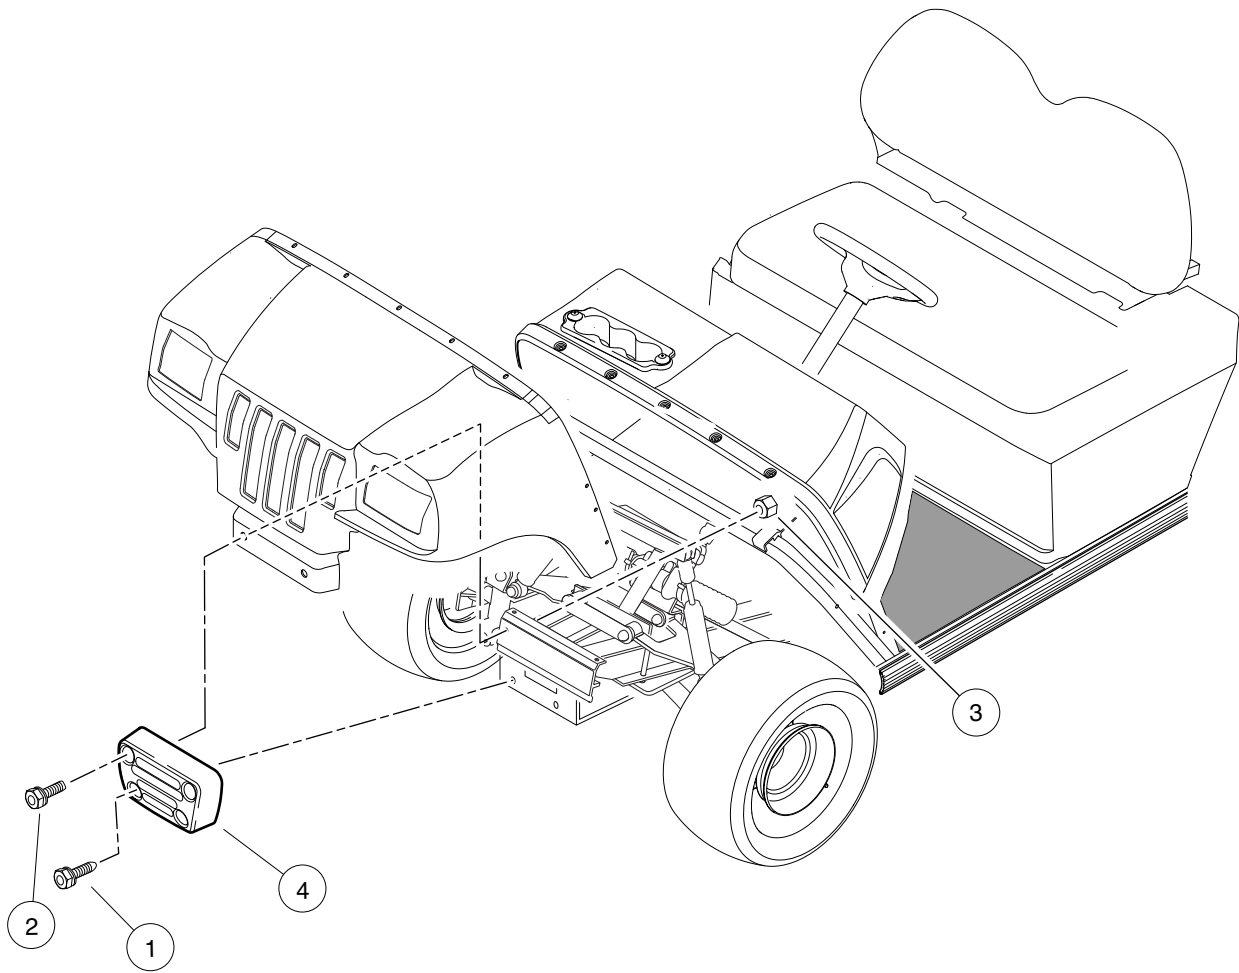

000357-002

BUMPER – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102289002</u>	Screw, M8 X 1.25 X 30 Tri, Blk	2
2	<u>102298240</u>	Bolt, Flange Head, M8-1.25 X 40	2
3	<u>102618601</u>	Lock Nut, Flange, M8 X 1.25 Nylon	2
4	<u>102830501</u>	Bumper, Cast	1

1


G

E

1

G


E

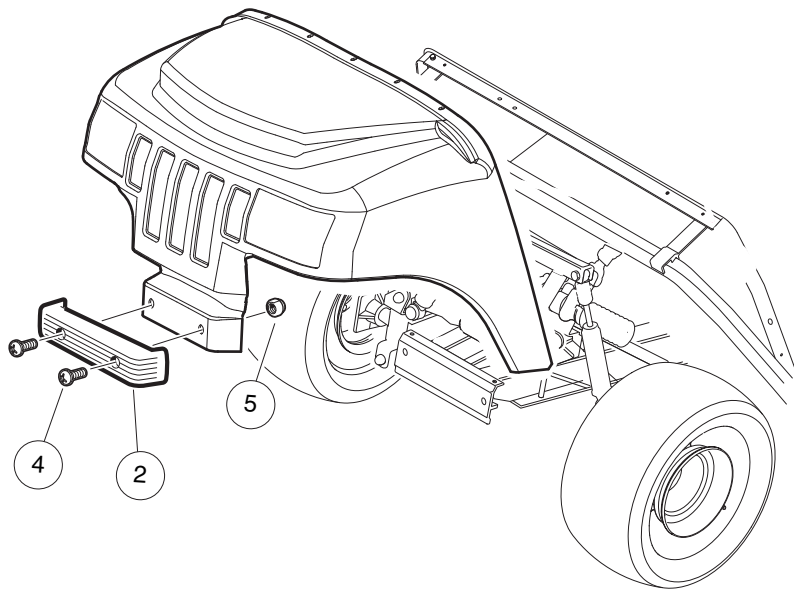

000357-005

BUMPER – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1017080</u>	Kit, Front Bumper (includes items 2 through 5)	1	
2	<u>1016868</u>	Front Bumper	1	
3	<u>1016967</u>	Blind Rivet, Push Type	2	
4	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2	
5	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	
Note: Item 3 is not used in this application.				

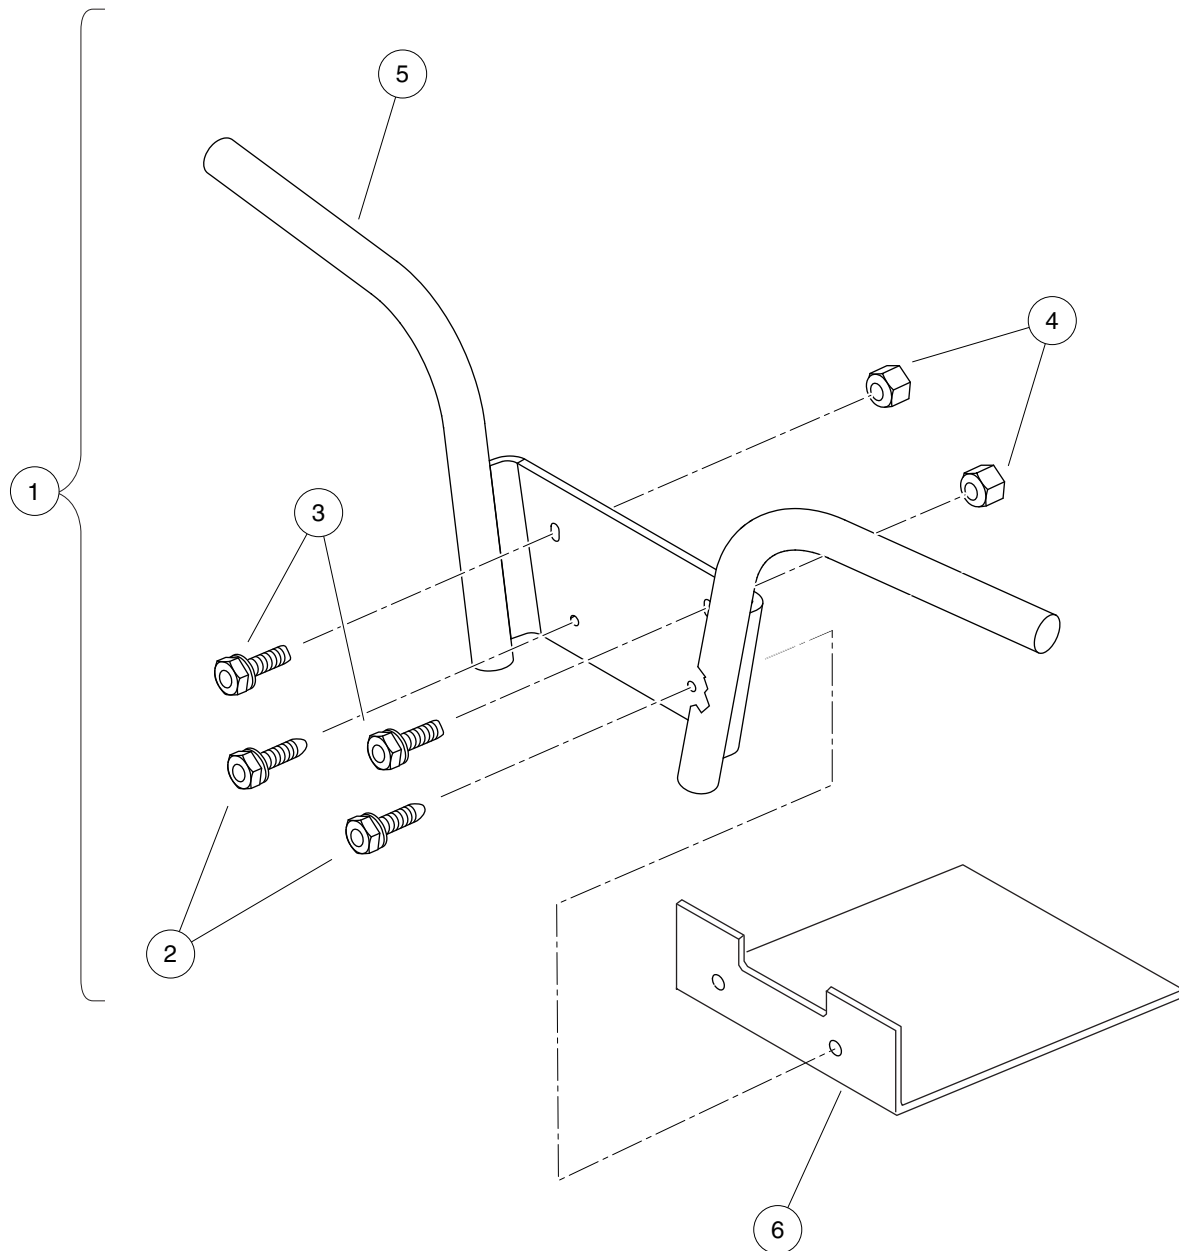

000356-003


BRUSH GUARD

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>102852401</u>	Kit, Brush Guard (includes items 2 through 6)	1	
2	<u>102289002</u>	Screw, M8 X 1.25 X 30 Tri, Blk	2	
3	<u>102298240</u>	Bolt, Flange Head, M8-1.25 X 40	2	
4	<u>102618601</u>	Lock Nut, Flange, M8 X 1.25 Nylon	2	
5	<u>102830201</u>	Guard, Brush	1	
6	<u>102830401</u>	Support, Brush Guard	1	

1

G

E

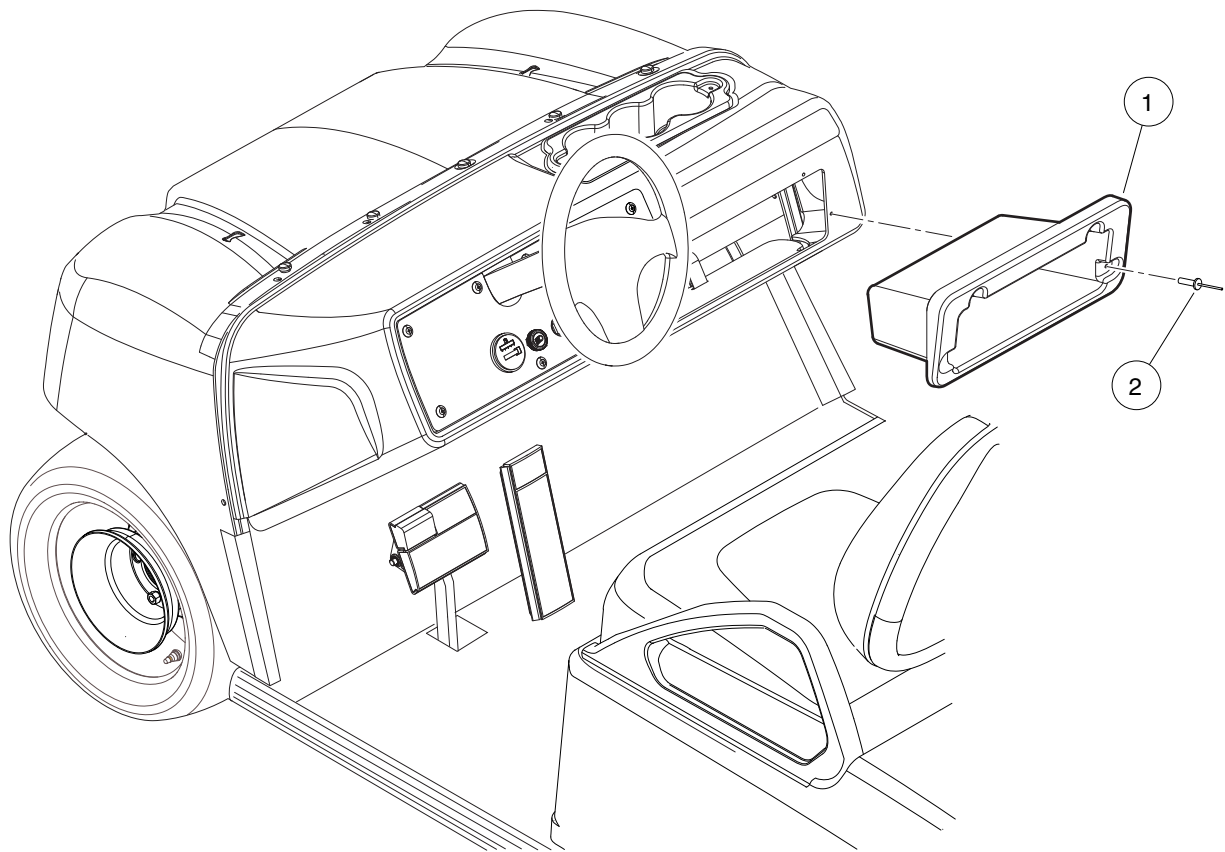

000358-001

DASH BOX

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>102810301</u>	Box, Dash	1
2	<u>103344501</u>	Rivet, 5/32" Dia., Black	4

1


G

E

1

G

E

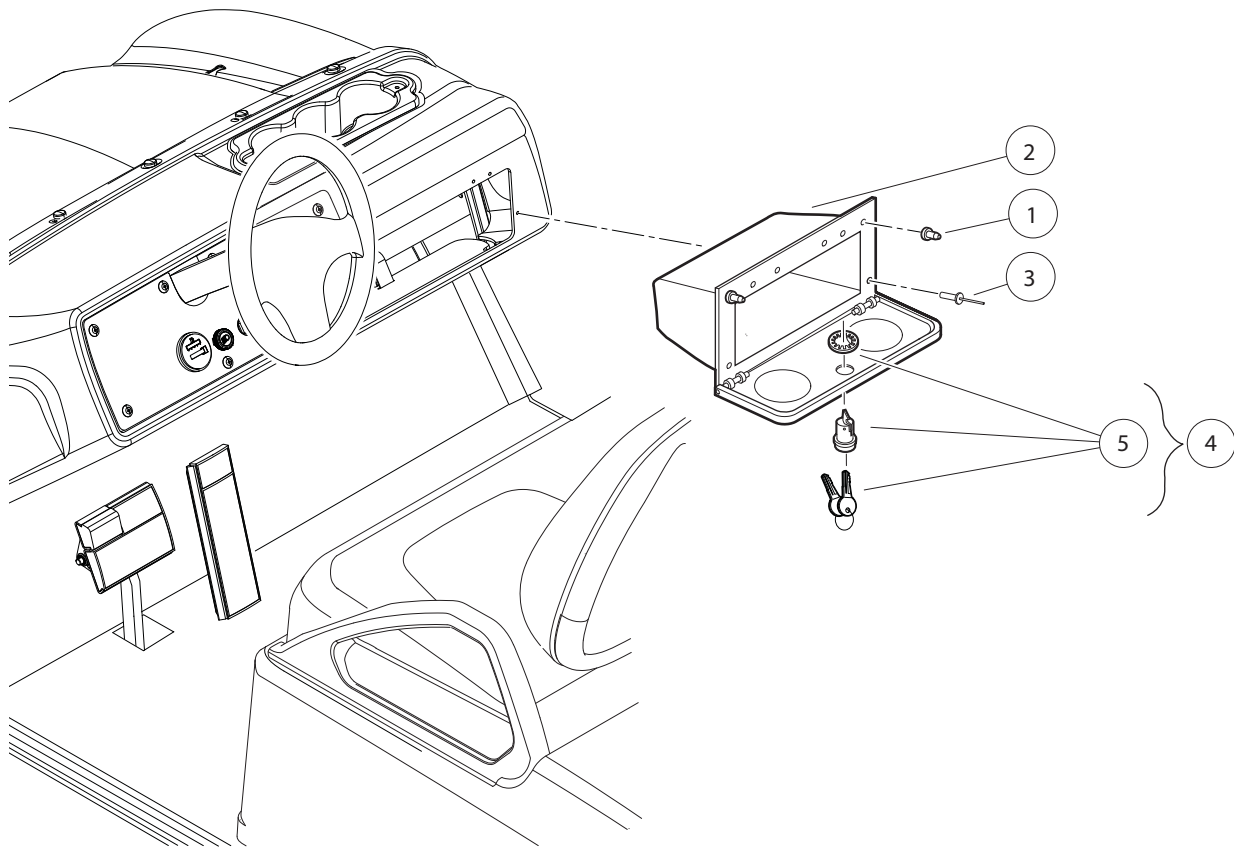

000359-002


GLOVE BOX

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	<u>1010436</u>	Bumper, Rubber	2			
2	<u>102796501</u>	Glove Box	1			
3	<u>102828701</u>	Rivet	6			
4	<u>102959401</u>	Glove Box Lock / Key Kit (includes item 5)	1			
5	N/A	Asm, Glove Box Lock / Key	1			

1

G

E

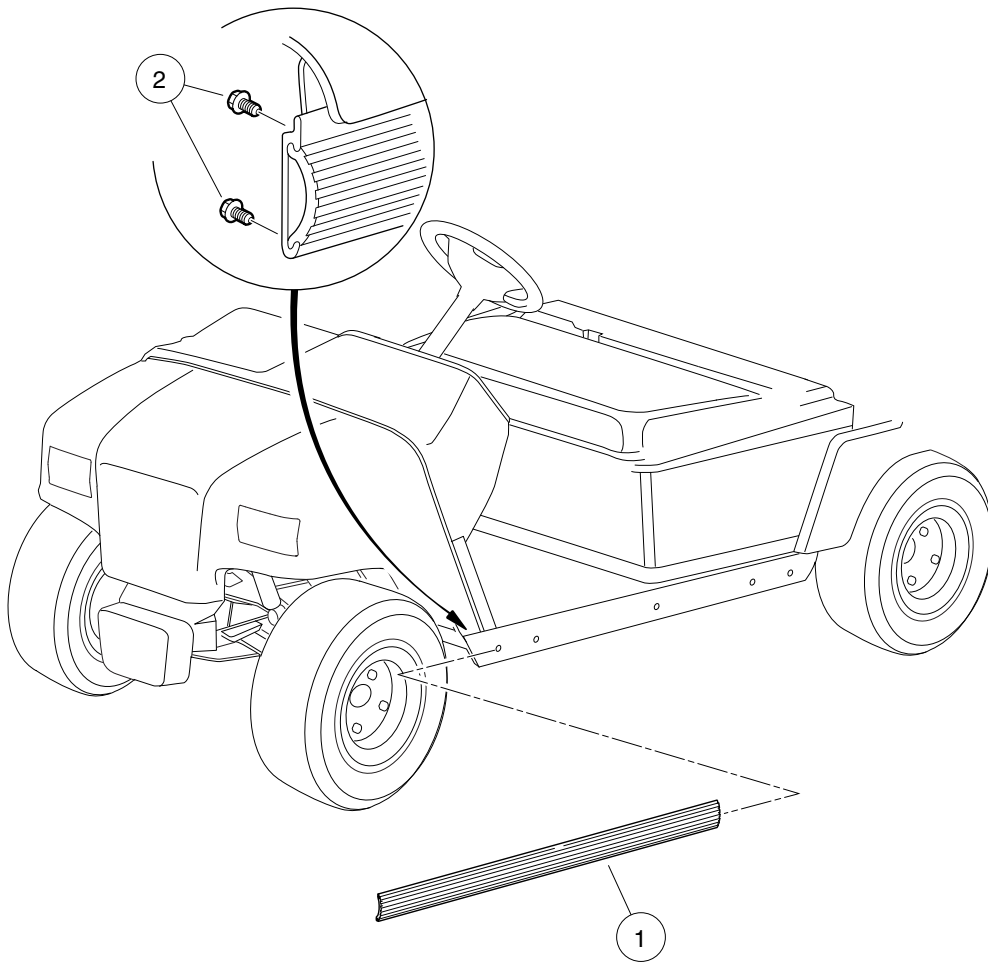

000361-002


SIDE TRIM

ITEM	PART NO.	DESCRIPTION	QTY	1
1	<u>1013983</u>	Bumper, Side Trim	2	G
2	<u>102310701</u>	Screw, #8-18 x 0.375, Hex-Head Washer	8	E

1

G


E

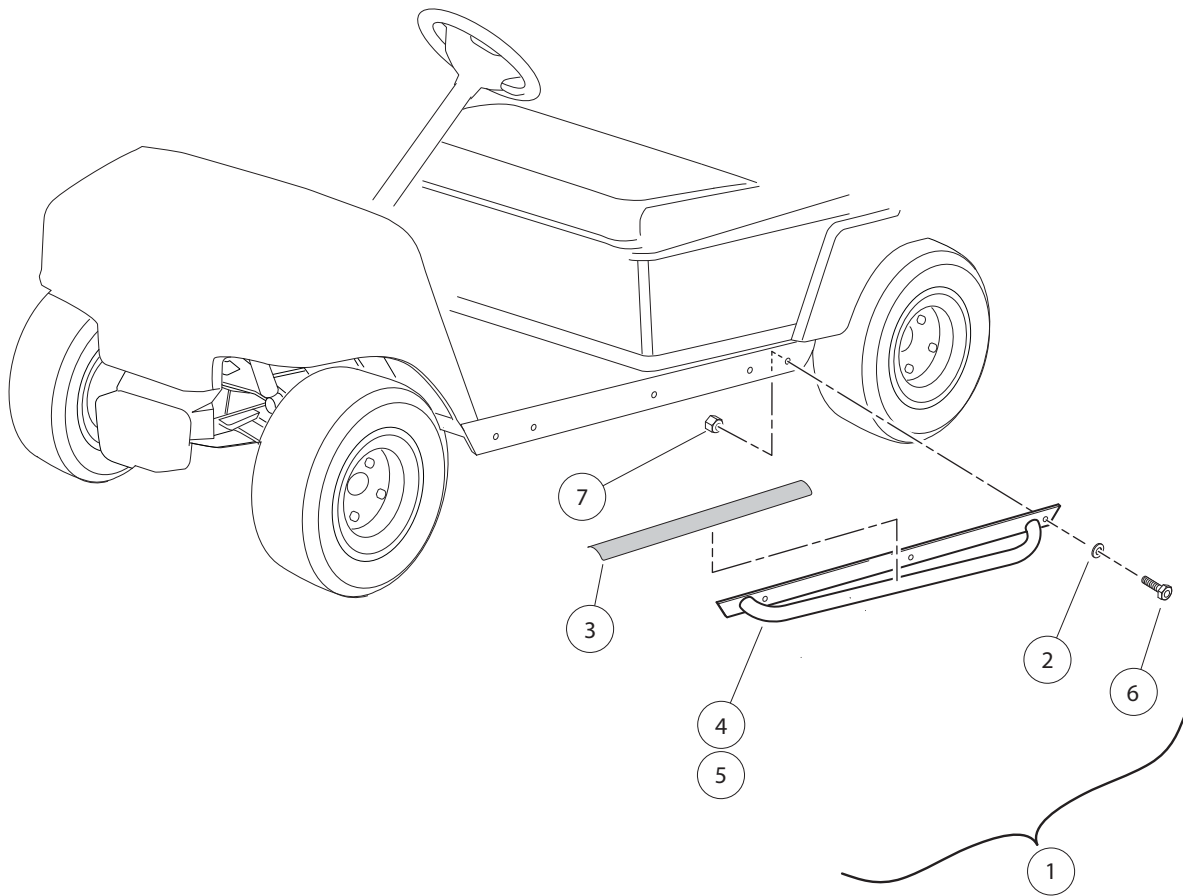

000360-004

NERF BAR


ITEM	PART NO.	DESCRIPTION	QTY	1
		1 2 3 4		G
1	<u>102829802</u>	Kit, Nerf Bar (black) (includes items 2 through 7)	1	E
2	<u>1011990</u>	Washer, 3/8 Flat	6	
3	<u>102355102</u>	Tape, Non-skid	2	
4	<u>102829703</u>	Nerf Bar Assy, Driver	1	
5	<u>102829704</u>	Nerf Bar Assy, Passenger	1	
6	<u>320</u>	Screw, 3/8-16 X 1.00 Hex-Head Cap	6	
7	<u>8754</u>	Locknut, 3/8-16 Hex	6	

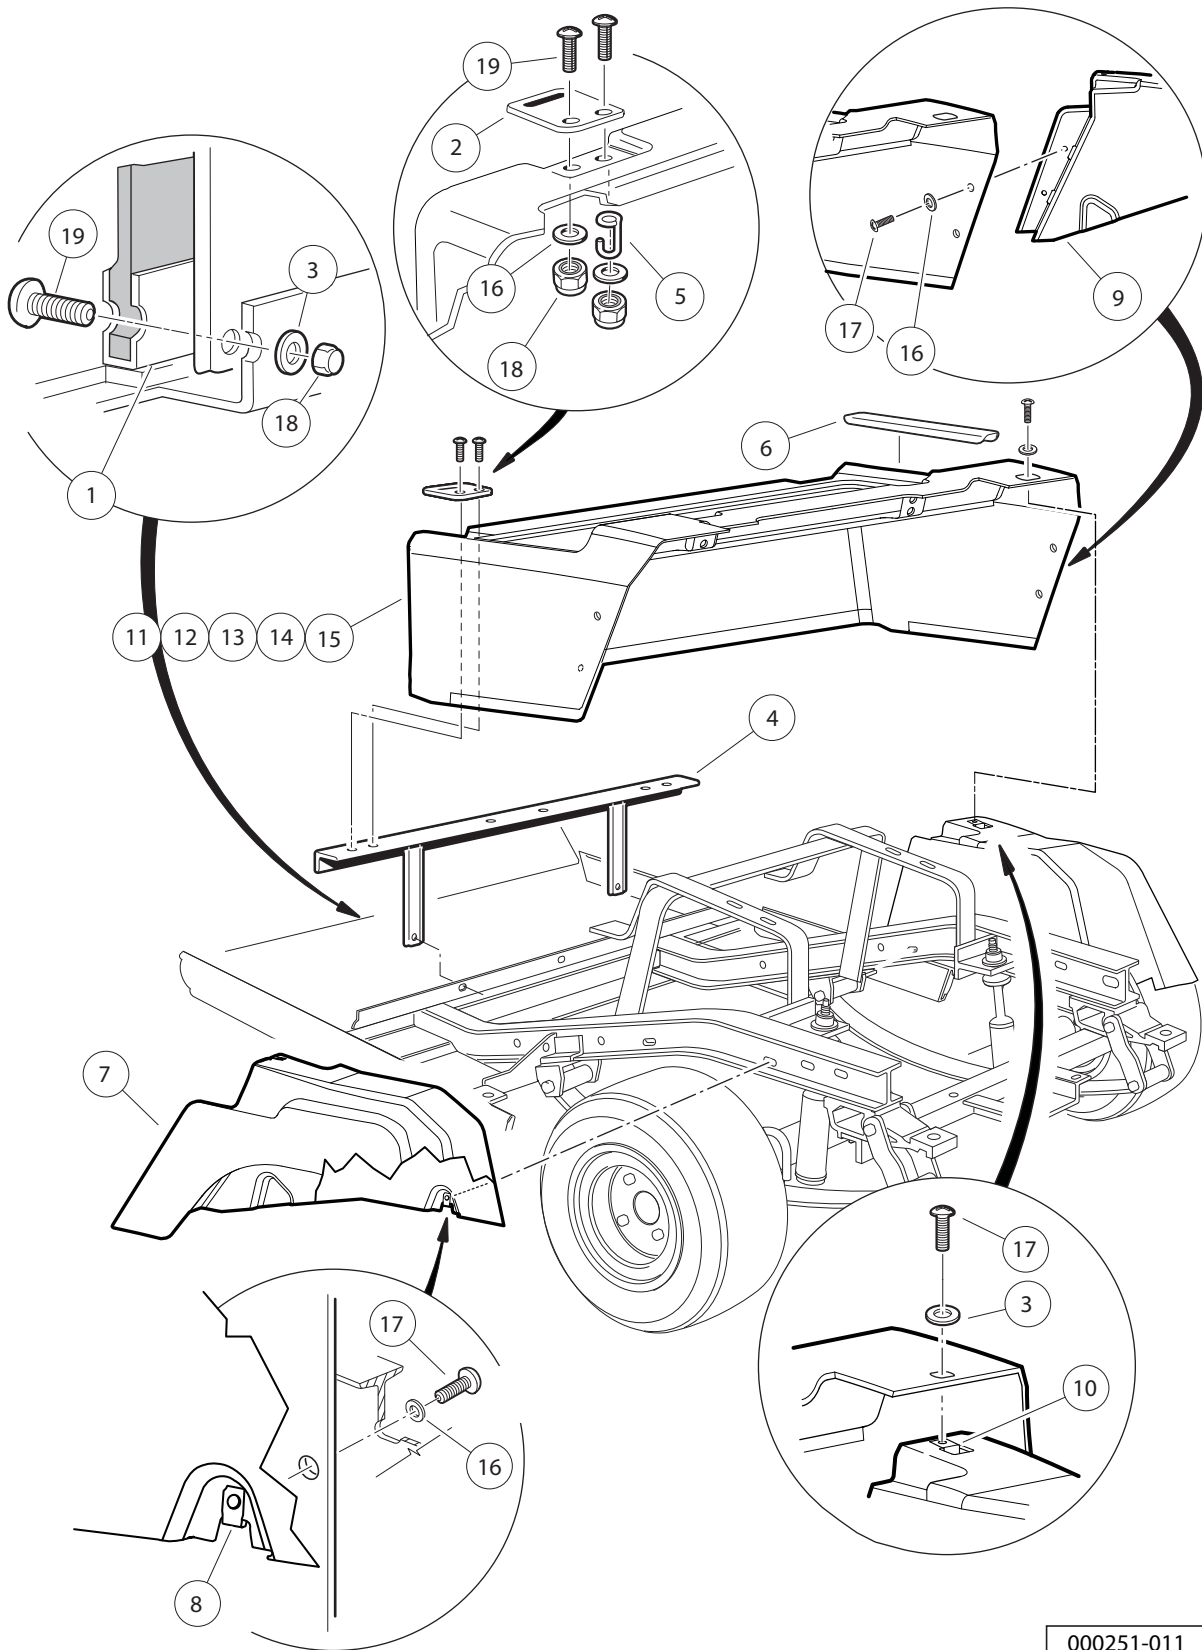1**G****E**

000251-011

REAR BODY AND FENDER – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010993</u>	Body Kick Plate	1	
2	<u>1012412</u>	Body, Hinge Plate	2	
3	<u>1014306</u>	Washer, 1/4" Type B Flat	8	
4	<u>1017141</u>	Body Support Weldment	1	
5	<u>101855801</u>	Cable Retainer	1	
6	<u>102221201</u>	Wear Pad	2	
7	<u>102777601</u>	Fender, Driver Side (includes item 8)	1	
8	<u>1016952</u>	U-Nut, 1/4-20	4	
9	<u>102777602</u>	Fender, Passenger Side (includes item 10)	1	
10	<u>1016952</u>	U-Nut, 1/4-20	4	
11	<u>102796801</u>	Body, Rear, Gas, Red	1	
12	<u>102796802</u>	Body, Rear, Gas, Orange	1	
13	<u>102796803</u>	Body, Rear, Gas, Green	1	
14	<u>102796804</u>	Body, Rear, Gas, Classic Blue	1	
15	<u>102796805</u>	Body, Rear, Gas, Olive Green	1	
16	<u>332</u>	Washer, 1/4 Type A Narrow Flat	6	
17	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
18	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	6	
19	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	6	

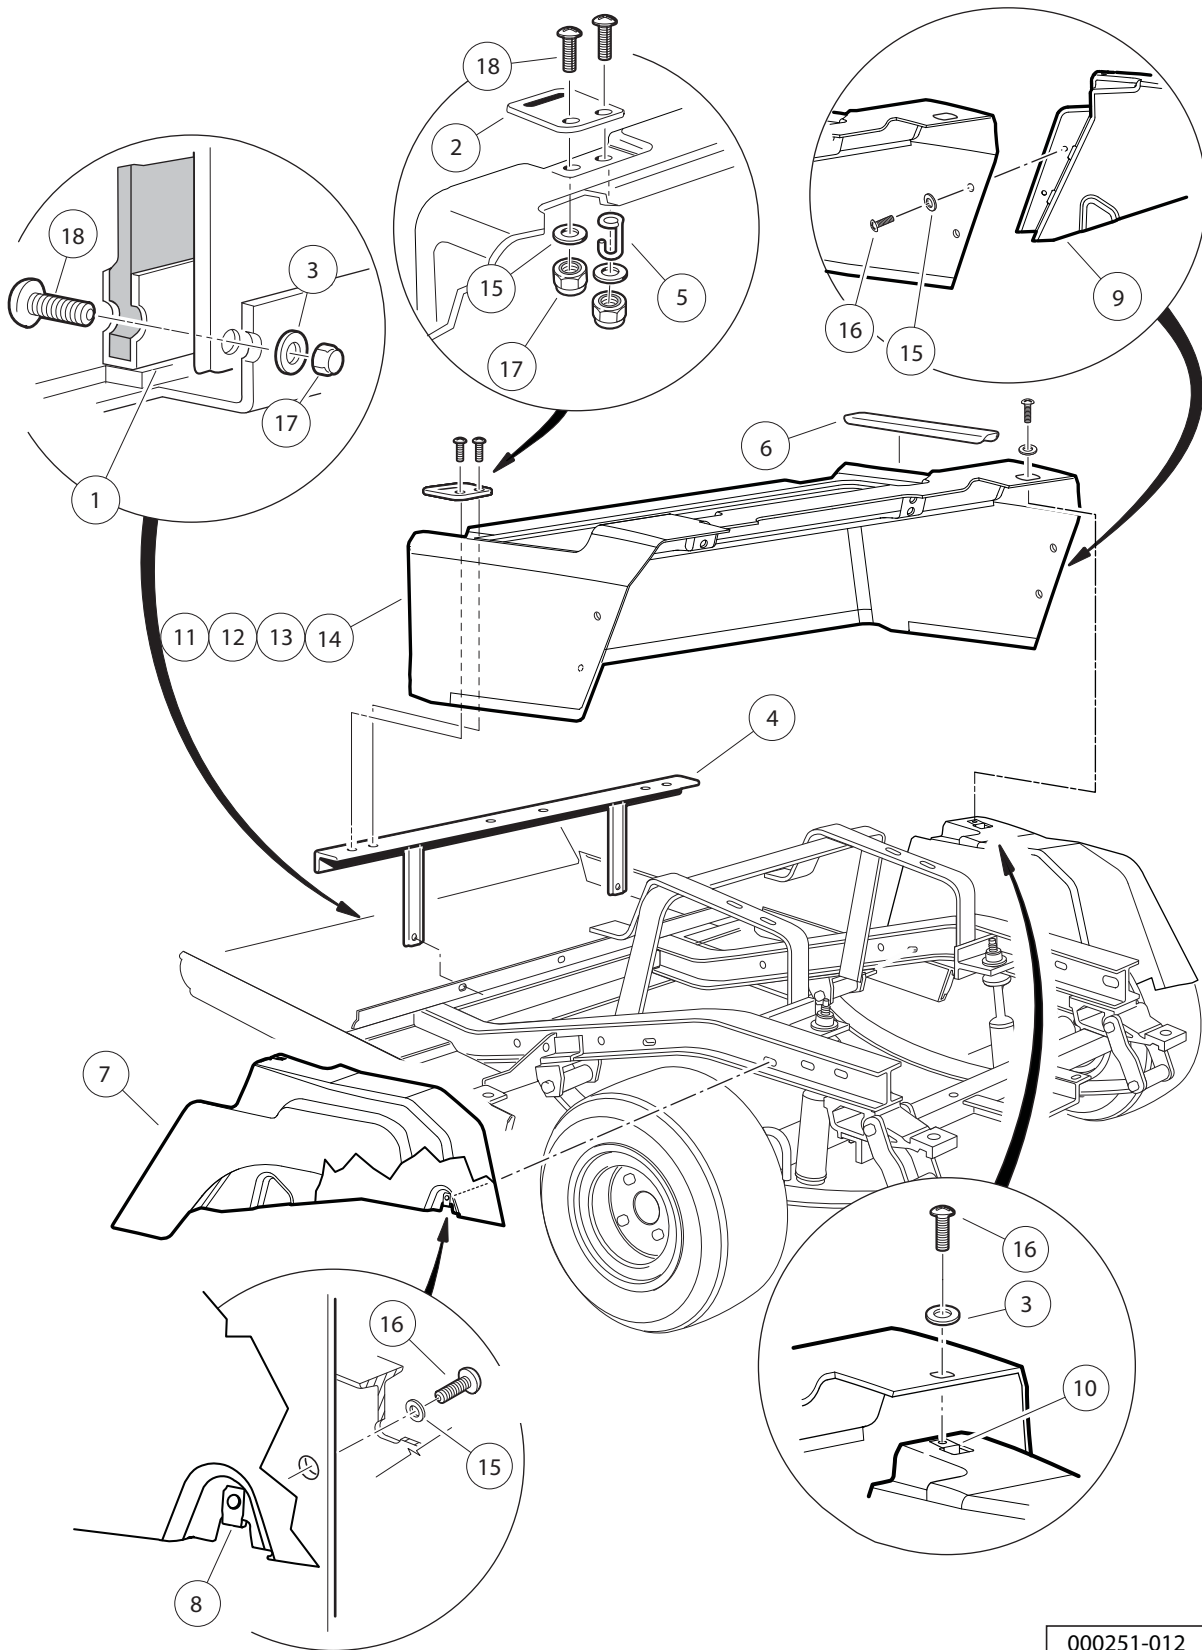1**G****E**

000251-012


REAR BODY AND FENDER – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010993</u>	Body Kick Plate	1	
2	<u>1012412</u>	Body, Hinge Plate	2	
3	<u>1014306</u>	Washer, 1/4" Type B Flat	8	
4	<u>1017141</u>	Body Support Weldment	1	
5	<u>101855801</u>	Cable Retainer	1	
6	<u>102221201</u>	Wear Pad	2	
7	<u>102777601</u>	Fender, Driver Side (includes item 8)	1	
8	<u>1016952</u>	U-Nut, 1/4-20	4	
9	<u>102777602</u>	Fender, Passenger Side (includes item 10)	1	
10	<u>1016952</u>	U-Nut, 1/4-20	4	
11	<u>102818301</u>	Body, Rear, Electric, Red	1	
12	<u>102818302</u>	Body, Rear, Electric, Orange	1	
13	<u>102818303</u>	Body, Rear, Electric, Green	1	
14	<u>102818305</u>	Body, Rear, Electric, Olive Green	1	
15	<u>332</u>	Washer, 1/4 Type A Narrow Flat	6	
16	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
17	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	6	
18	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	6	

1

G

E

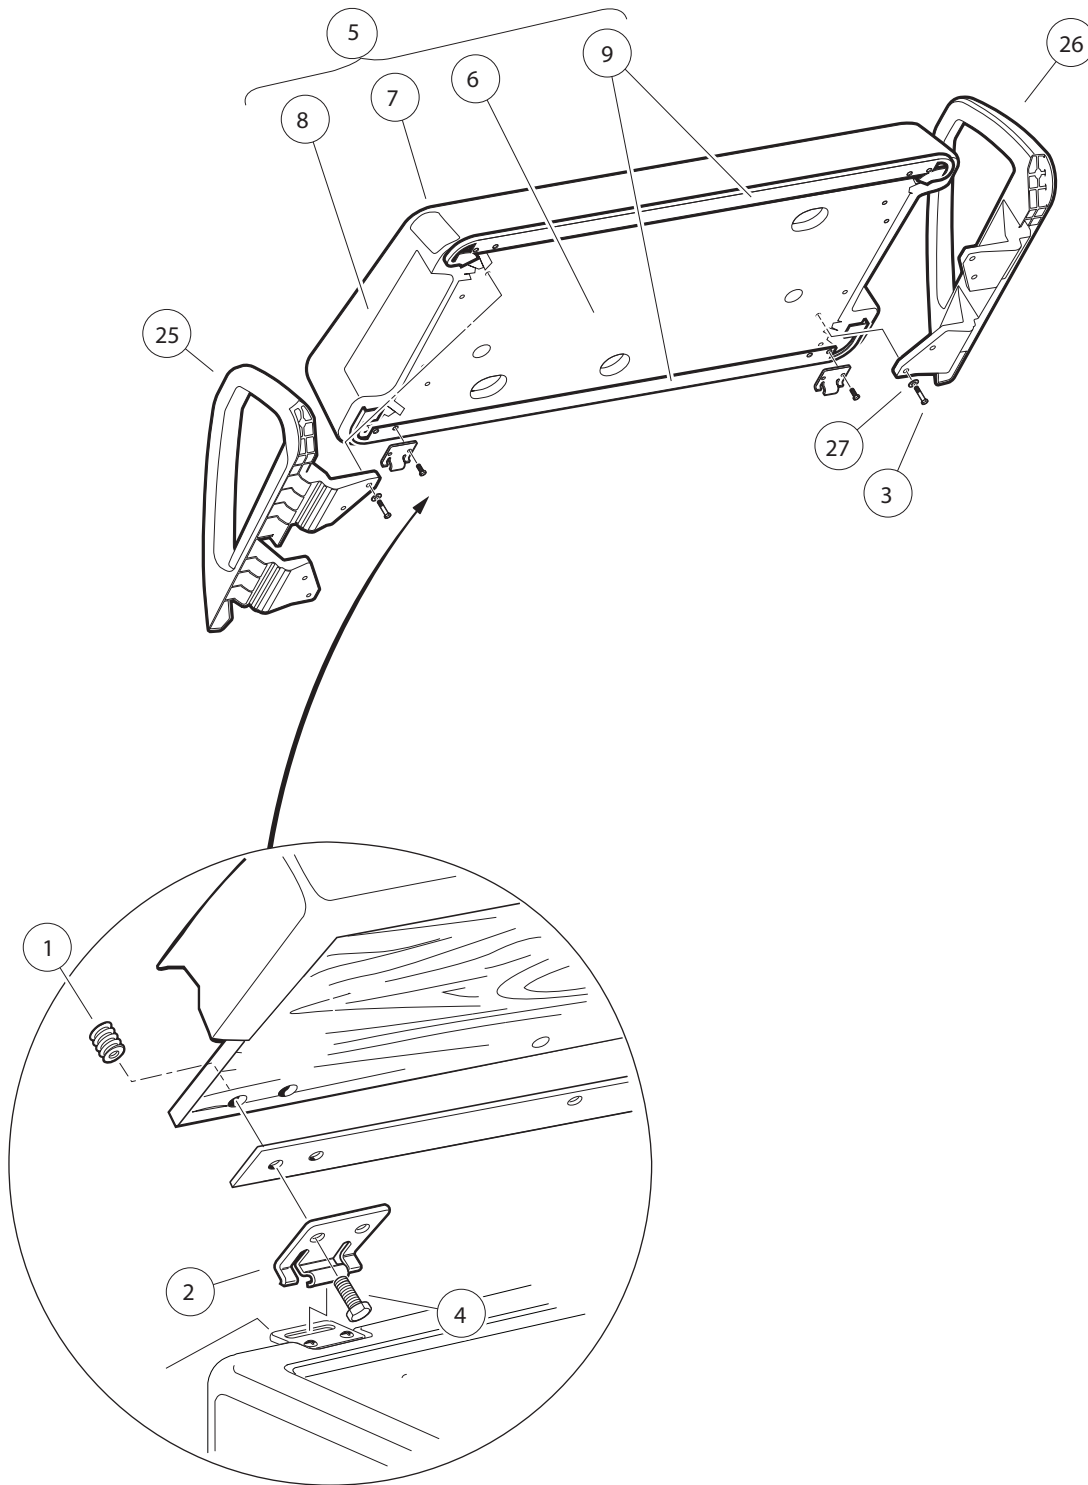

000364-008


FRONT SEAT BOTTOM AND ARMRESTS

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	1010543	Insert - Wood	4	
2	<u>1011652</u>	Hinge Plate	2	
3	1016916	Screw, 1/4-20 X 1.50 Hex-Head Cap	8	
4	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4	
5	<u>102174201</u>	Seat Bottom Assembly, Buff (includes items 6 through 9)	1	
6	N/A	Plywood Assy	1	
7	<u>101998211</u>	Vinyl Cover Seat Btm - Buffsvc	1	
8	N/A	Foam, Seat	1	
9	<u>101998501</u>	Gasket, Seat	2	
10	<u>102174202</u>	Seat Bottom Assembly, White (includes items 11 through 14)	1	
11	N/A	Plywood Assy	1	
12	<u>101998212</u>	Vinyl Cover, Seat Bottom, White	1	
13	N/A	Foam, Seat	1	
14	<u>101998501</u>	Gasket, Seat	2	
15	<u>102174204</u>	Seat Bottom Assembly, Black (includes items 16 through 19)	1	
16	N/A	Plywood Assy	1	
17	<u>101998214</u>	Vinyl Cover, Seat Bottom, Black	1	
18	N/A	Foam, Seat	1	
19	<u>101998501</u>	Gasket, Seat	2	
20	<u>102174205</u>	Seat Bottom Assembly, Gray (includes items 21 through 24)	1	
21	N/A	Plywood Assy	1	
22	<u>101998215</u>	Vinyl Cover, Seat Bottom, Gray	1	
23	N/A	Foam, Seat	1	
24	<u>101998501</u>	Gasket, Seat	2	
25	<u>103246701</u>	Hip Restraint, Drvr Side	1	
26	<u>103246801</u>	Hip Restraint, Pass Side	1	
27	<u>332</u>	Washer, 1/4 Type A Narrow Flat	8	
Note: Sub-components contained in items 10, 15, and 20 are the same as those shown for item 5, except for the vinyl seat covers.				

1

G


E

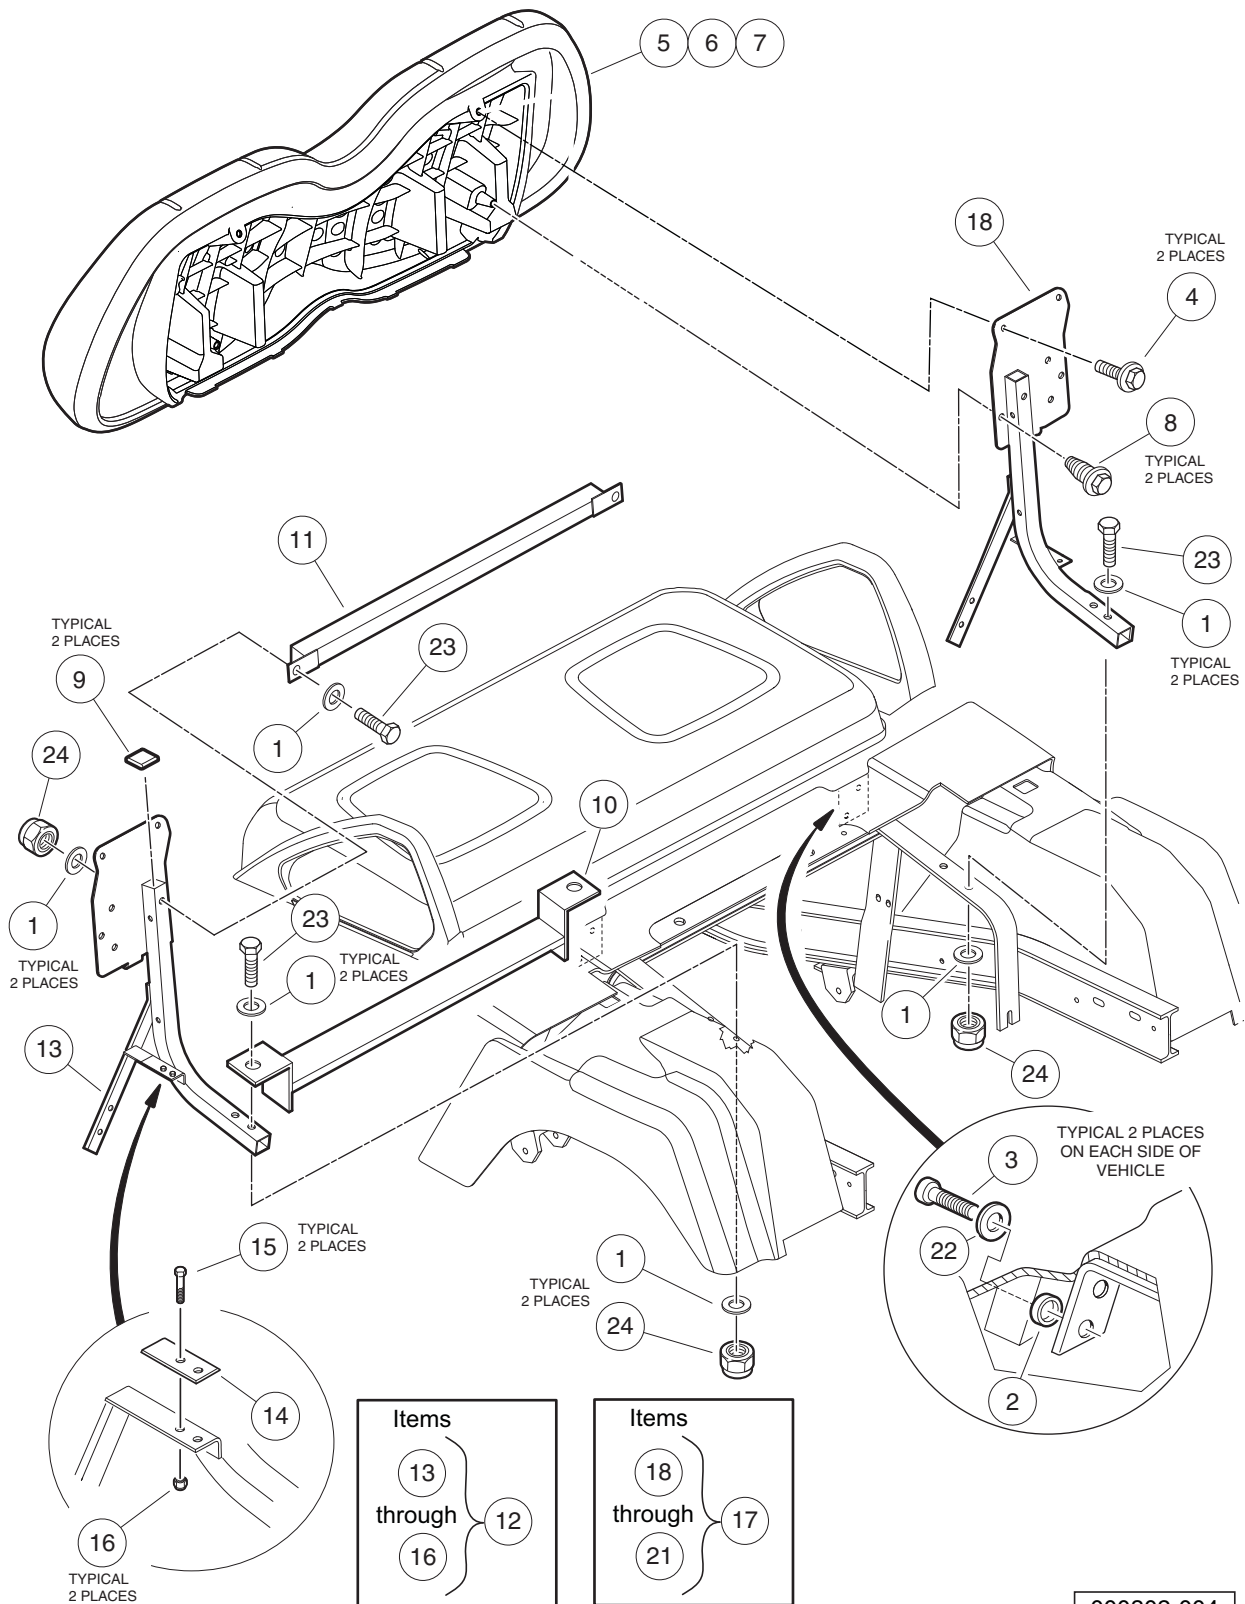

000302-004

SEAT BACK

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1011931</u>	Washer, 1/4 Flat	12	
2	<u>1017774</u>	Body Spacer	4	
3	<u>101910401</u>	Screw, 5/16-18 X 1.25 Thrd Frm	4	
4	<u>102296530</u>	Screw - M6 X 1.0 X 30 Sems	2	
5	<u>102503221</u>	Service Backrest Asm, Beige	1	
6	<u>102503222</u>	Service Backrest Asm, White	1	
7	<u>102503224</u>	Service Backrest Asm, Gray	1	
8	<u>102544201</u>	Screw, M6 Hex	2	
9	<u>102581201</u>	Plug, Square - 25.4 mm	2	
10	<u>102796101</u>	Weldment, Bed Support	1	
11	<u>102816201</u>	Seat Support, Cross Brace	1	
12	<u>102913101</u>	Seat Support W/striker, Drv (includes items 13 through 16)	1	
13	<u>102796301</u>	Seat Support, Driver-Side	1	
14	<u>102840301</u>	Striker Plate	1	
15	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2	
16	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2	
17	<u>102913102</u>	Support, Seat, Right (passenger) (includes items 18 through 21)	1	
18	<u>102796302</u>	Seat Support, Passenger-Side	1	
19	<u>102840301</u>	Striker Plate	1	
20	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2	
21	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2	
22	<u>1241</u>	Washer, 5/16 Type A Flat	4	
23	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	6	
24	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	6	

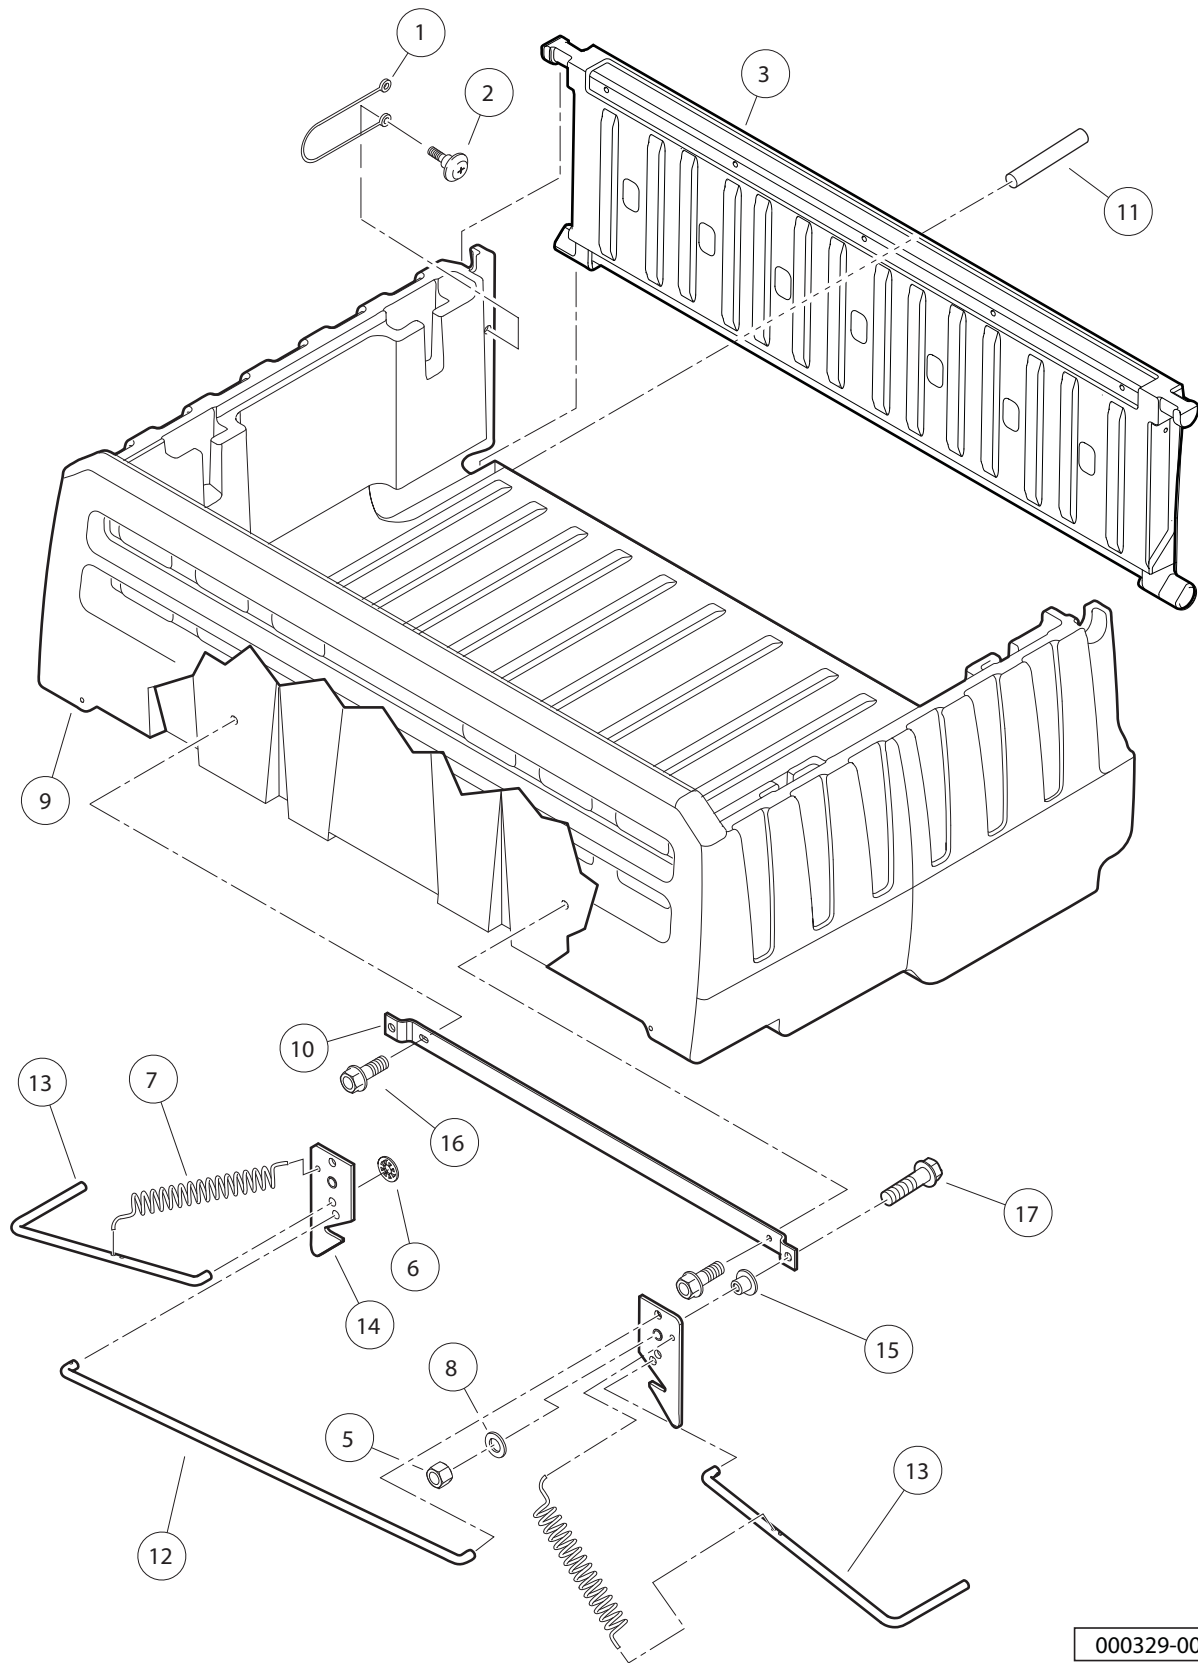
1**G****E**

000329-002

CARGO BED

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102779001</u>	Lanyard, Tailgate	2
2	<u>102779401</u>	Bolt Lanyard	2
3	<u>102779501</u>	Tailgate	1
4	<u>103189901</u>	Bed Assembly (includes items 5 through 17)	1
5	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2
6	<u>1013876</u>	Pushnut, 3/8	4
7	<u>1015391</u>	Extension, Spring Latch	2
8	N/A	Washer, 3/8 Flat Type A	2
9	N/A	Bed	1
10	<u>102778901</u>	Support, Latch Link	1
11	N/A	Pin, Support	2
12	<u>102779201</u>	Rod, Long Link	1
13	<u>102779301</u>	Rod, Bed Lift, Short Bent	2
14	<u>102779601</u>	Catch, Tilt Bed	2
15	<u>102830701</u>	Bearing, Bronze, 1/2x9/32	2
16	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
17	320	Screw, 3/8-16 X 1.00 Hex-Head Cap	1
18	<u>103317501</u>	Kit, Plastic Bed Box Latch (includes items 19 through 21)	1
19	<u>1010545</u>	Screw, Hex Washer Head 1/4-14 X .75	2
20	<u>1011578</u>	Washer, 5/16 Type B Flat	2
21	<u>103293501</u>	Spring, Tilt Latch 3.4 Lb/in	2

1
G
E

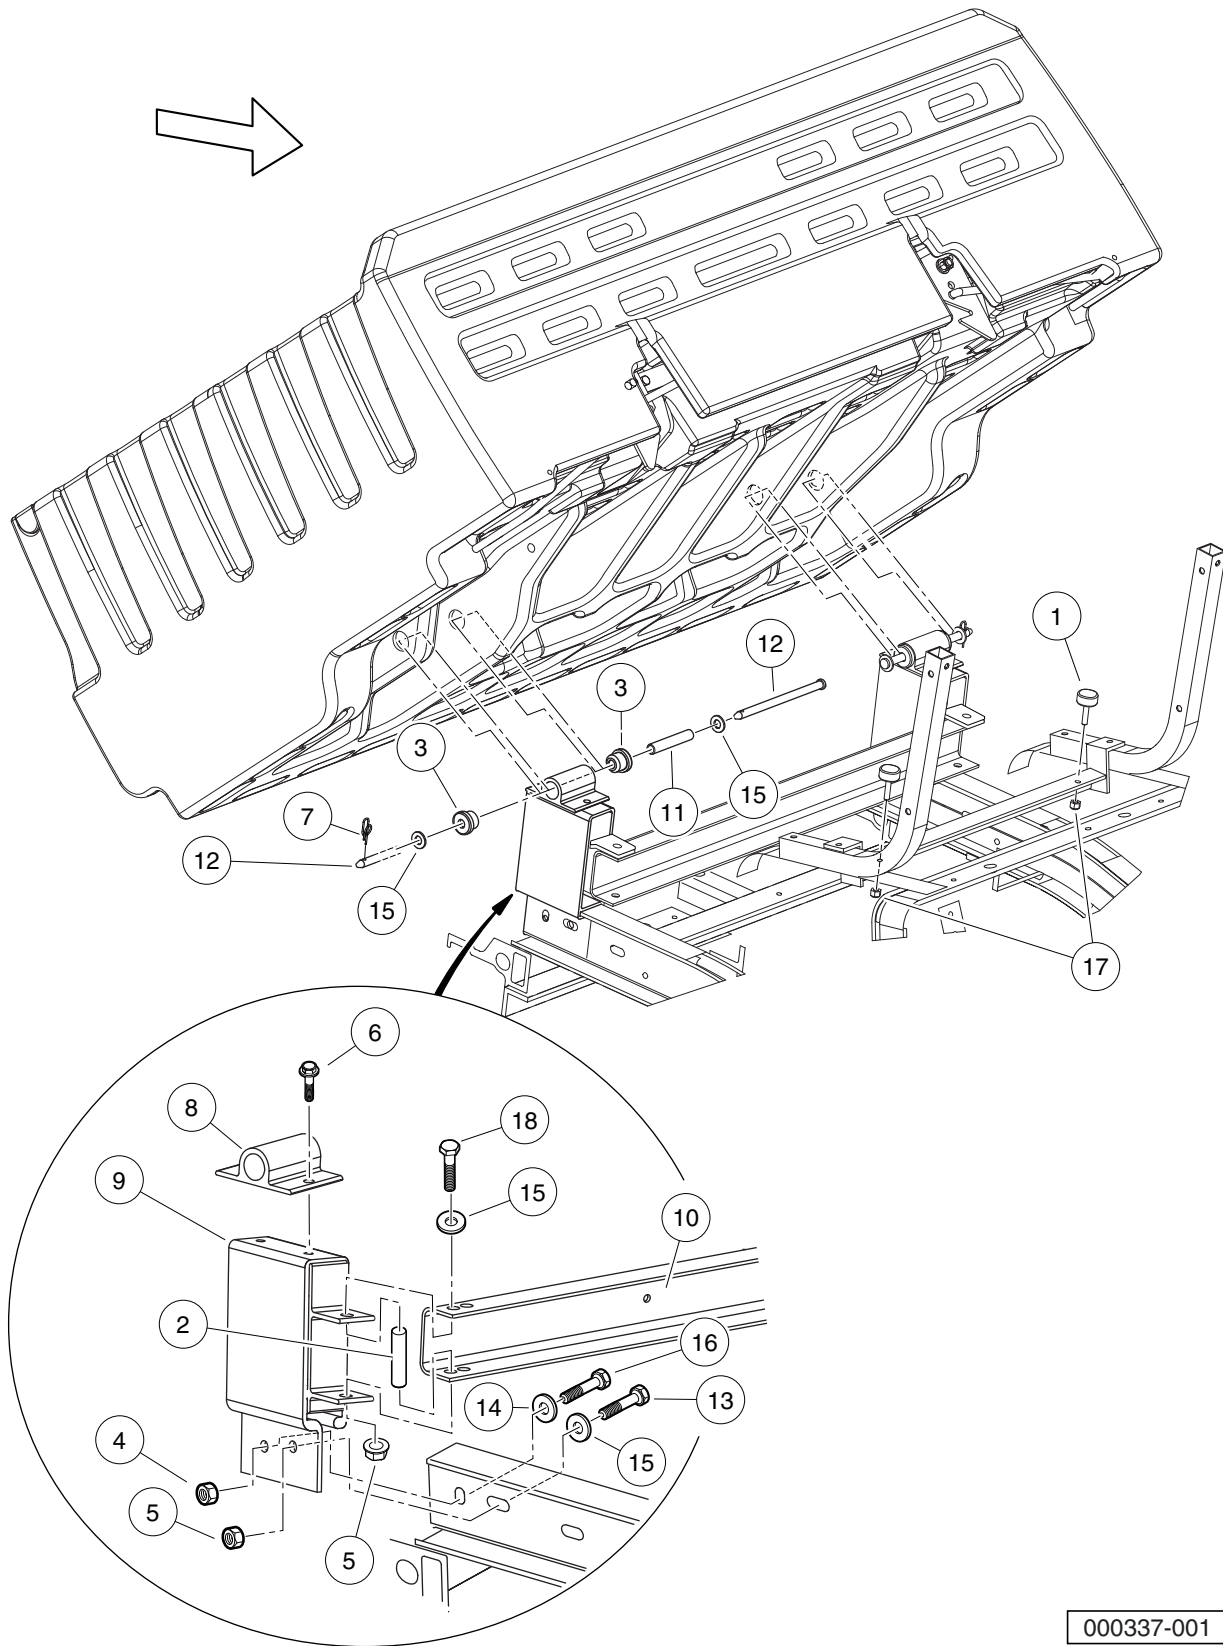1**G****E**

000337-001

BED HINGE

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010878</u>	Bumper, Rubber	2	
2	<u>1012303</u>	Bushing, Steel	2	
3	<u>1015583</u>	Bushing, Urethane	4	
4	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	2	
5	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4	
6	<u>102289001</u>	Screw, M8X1.25X30, Hex	4	
7	<u>102289301</u>	Rue Ring - 1/2"	2	
8	<u>102797201</u>	Hinge, Roto Bed	2	
9	<u>102820301</u>	Support, Hinge	2	
10	<u>102820501</u>	Stiffener, Bed Support	1	
11	<u>102821101</u>	Bushing, Steel	2	
12	<u>102823201</u>	Pin, Clevis, 3/8	2	
13	<u>320</u>	Screw, 3/8-16 X 1.00 Hex-Head Cap	2	
14	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2	
15	<u>334</u>	Washer, 3/8, Type A, Flat	8	
16	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2	
17	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2	
18	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2	

1

G



E

WHEELS AND TIRES

2

G

E

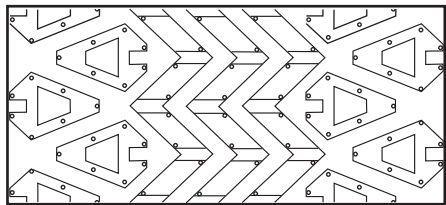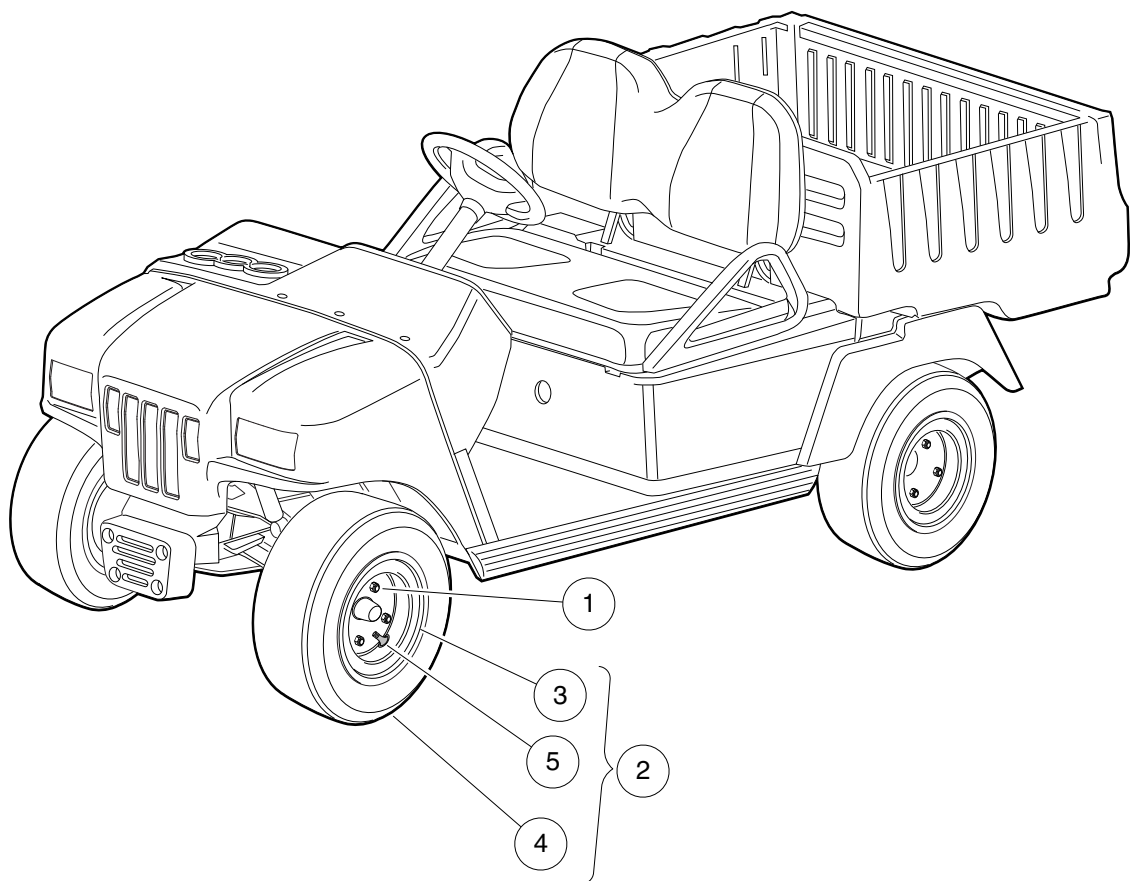

000224-002


WHEELS AND TIRES

ITEM	PART NO.	DESCRIPTION	QTY	2
		1 2 3 4		G
1	<u>1010984</u>	.500-20 Unf Lug Nut	16	E
2	<u>102819101</u>	Tire Assembly, All Trail II (includes items 3 through 5)	4	
3	<u>102815801</u>	Wheel Rim, Gray	1	
4	<u>102815901</u>	Tire, Unmounted, All Trail II	1	
5	<u>7310</u>	Valve Stem, Black Plastic	1	

2

G

E

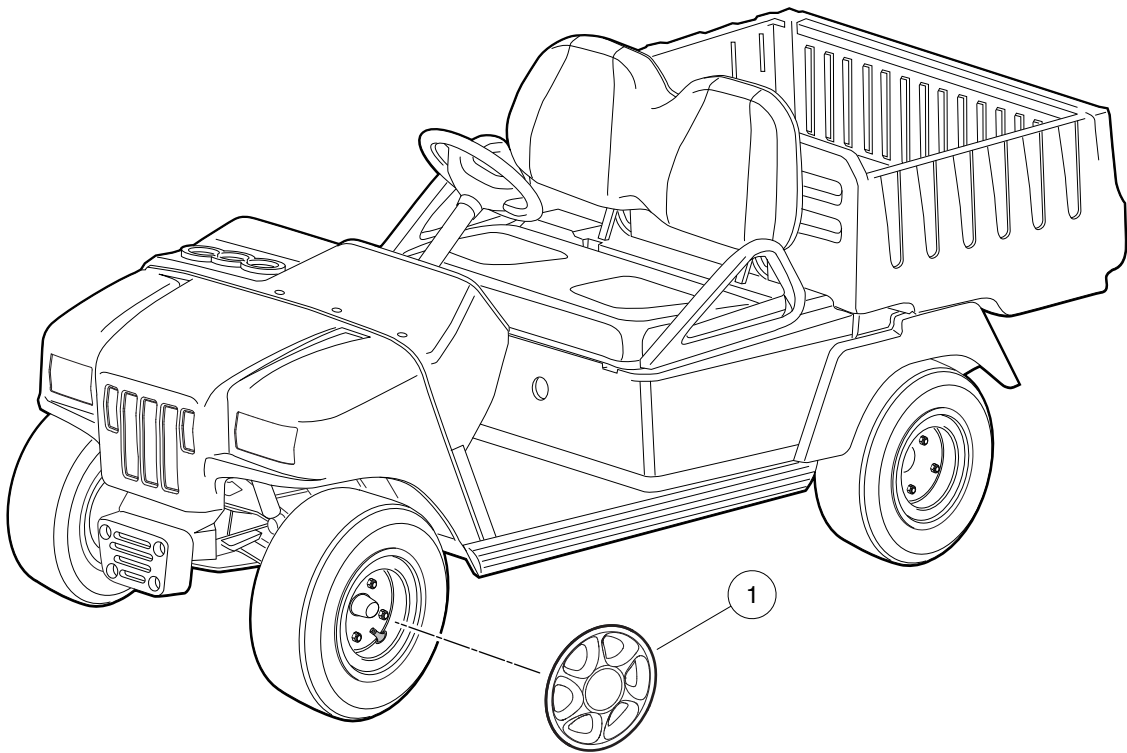

000318-002

HUBCAP

ITEM	PART NO.	DESCRIPTION	QTY	2 G E
1	<u>102861401</u>	1 2 3 4 Wheel Cover, Chrome Elite	4	

2

G



E

LOGO AND DECALS

3

G

E

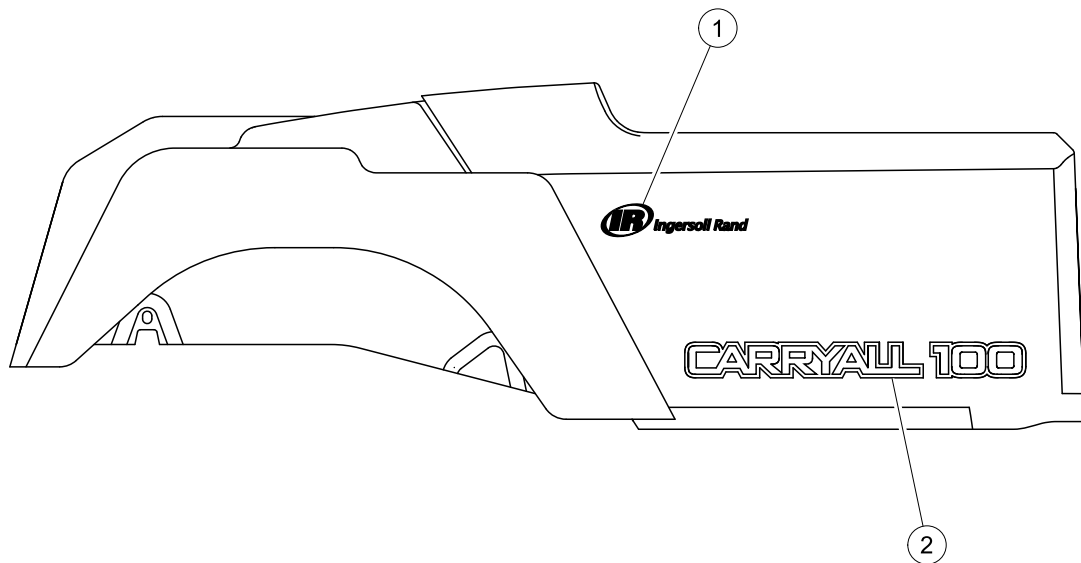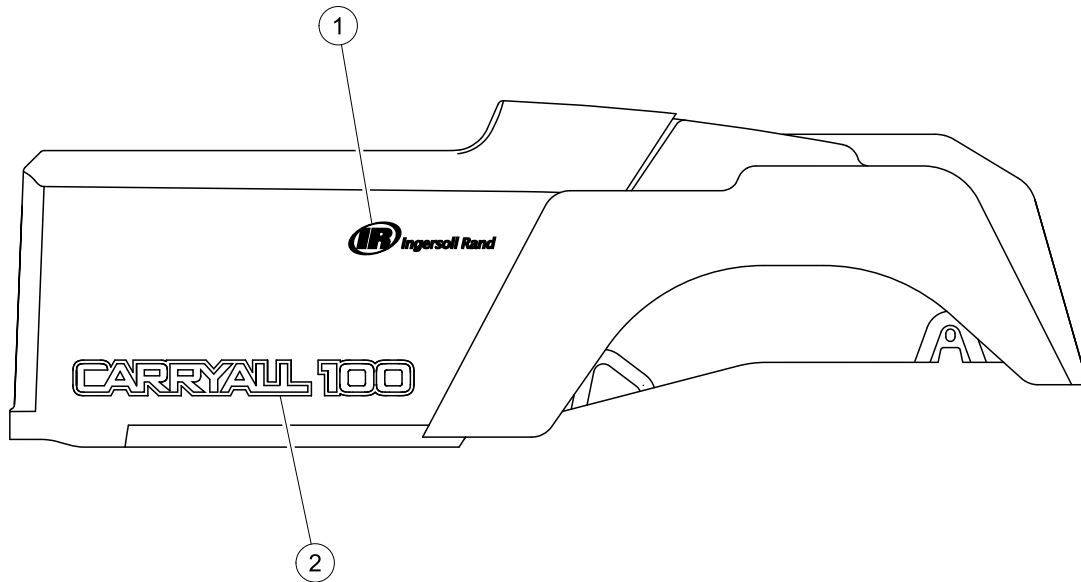

LOGO DECALS

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>103234303</u>	1 2 3 4 Decal, Badge, Ir Black	2
2	<u>105199601</u>	Decal,†carryall†100	2

3


G

E

3

G

E

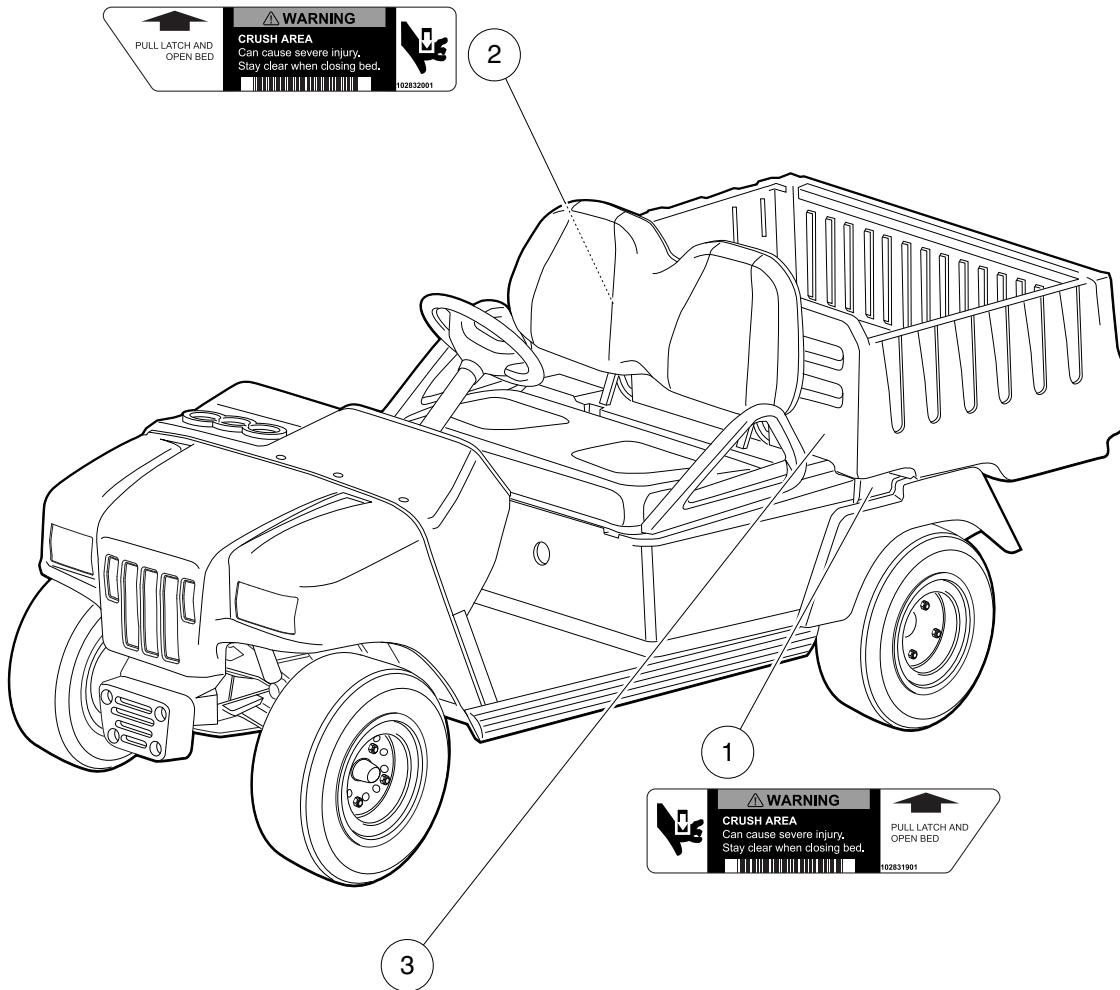

3

NOTICE

- THE OWNER/OPERATOR should maintain, lubricate, adjust, and operate the vehicle as detailed in the vehicle owners manual.

CCQ 102832001

000225-002

SAFETY DECALS – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
1	<u>102831901</u>	1 2 3 4 Decal, Crush Warning, Driver-Side	1	
2	<u>102832001</u>	Decal, Crush Warning, Passenger-Side	1	
3	<u>102833301</u>	Decal, Maintenance	1	



WARNING

- GASOLINE EXPLOSION / FIRE.
- CAN CAUSE SEVERE INJURY OR DEATH.
- NO SMOKING, SPARKS, OR OPEN FLAME.
- STOP ENGINE, ALLOW TO COOL BEFORE REFUELING.
- TURN FUEL VALVE () ON DURING OPERATION.
- () OFF DURING STORAGE OR TRANSPORT.

CC1 1015476-01

WARNING


CAN CAUSE SEVERE INJURY

**Rotating parts**

**HOT manifold & muffler**

KEEP CLEAR

CC1 101960501

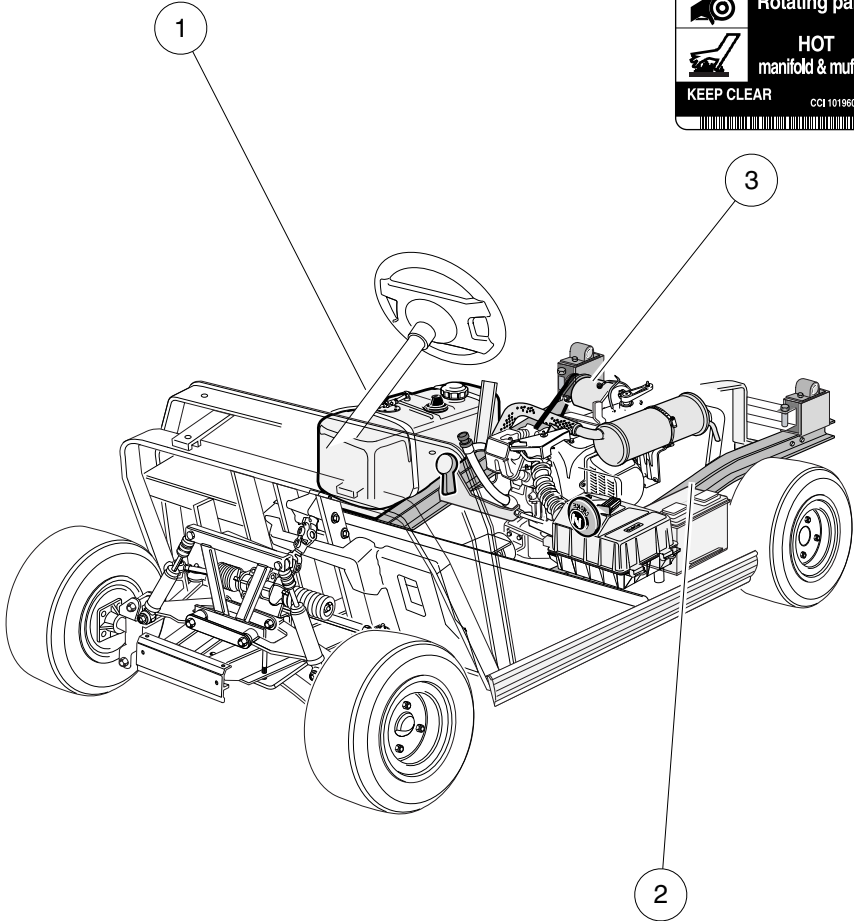



WARNING

Negative frame ground. Can cause severe injury.
Do not contact positive (+) battery post or cable to frame.
Disconnect negative battery lead first.





WARNING

Excessive speed.
Can cause severe injury or death.
Do not tamper with engine governor adjustment.

CC1 1019152-01

SAFETY DECALS – GASOLINE VEHICLES, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101547601</u>	Decal, Gasoline Explosion/Fire Warning	1
2	<u>101915201</u>	Decal, Frame Ground and Governor Warning	1
3	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	1

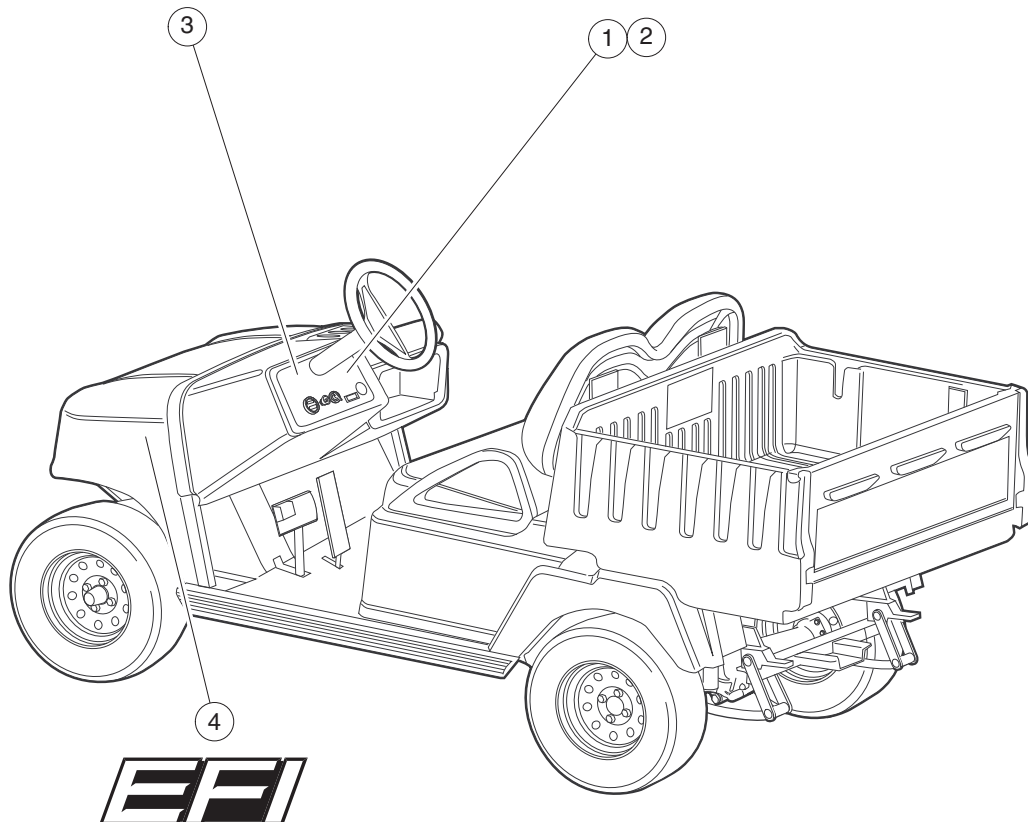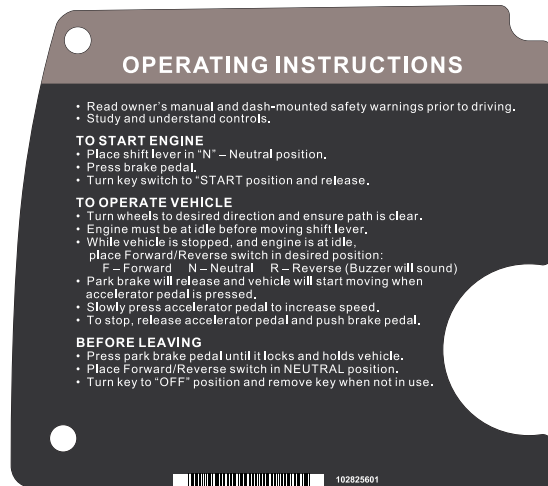

SAFETY DECALS – GASOLINE VEHICLES, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>102825401</u>	Decal, Warning, Instrument Panel	1	
2	<u>102825402</u>	Decal, Warning, Instrument Panel	1	
3	<u>102825601</u>	Decal, Operating Instructions, Instrument Panel	1	
4	<u>105153301</u>	Decal, Efi, Italic, Lh	1	
5	<u>105153302</u>	Decal, Efi, Italic, Rh	1	
Note: Item 2 is for use on vehicles equipped with a 12-volt accessory outlet. Item 5 is not illustrated. It is exact opposite of item 4.				

NOTICE

Do not operate vehicle without this cover properly installed.
Do not direct water stream in this area; will cause damage to components.

CC# 101931501



WARNING

TOW

RUN


Place Tow/Run switch in TOW position before:

- Disconnecting or connecting batteries
- Towing
- Extended storage
- Servicing

FAILURE TO HEED THIS WARNING COULD RESULT IN A BATTERY EXPLOSION

INJURY.

CC# 101908601

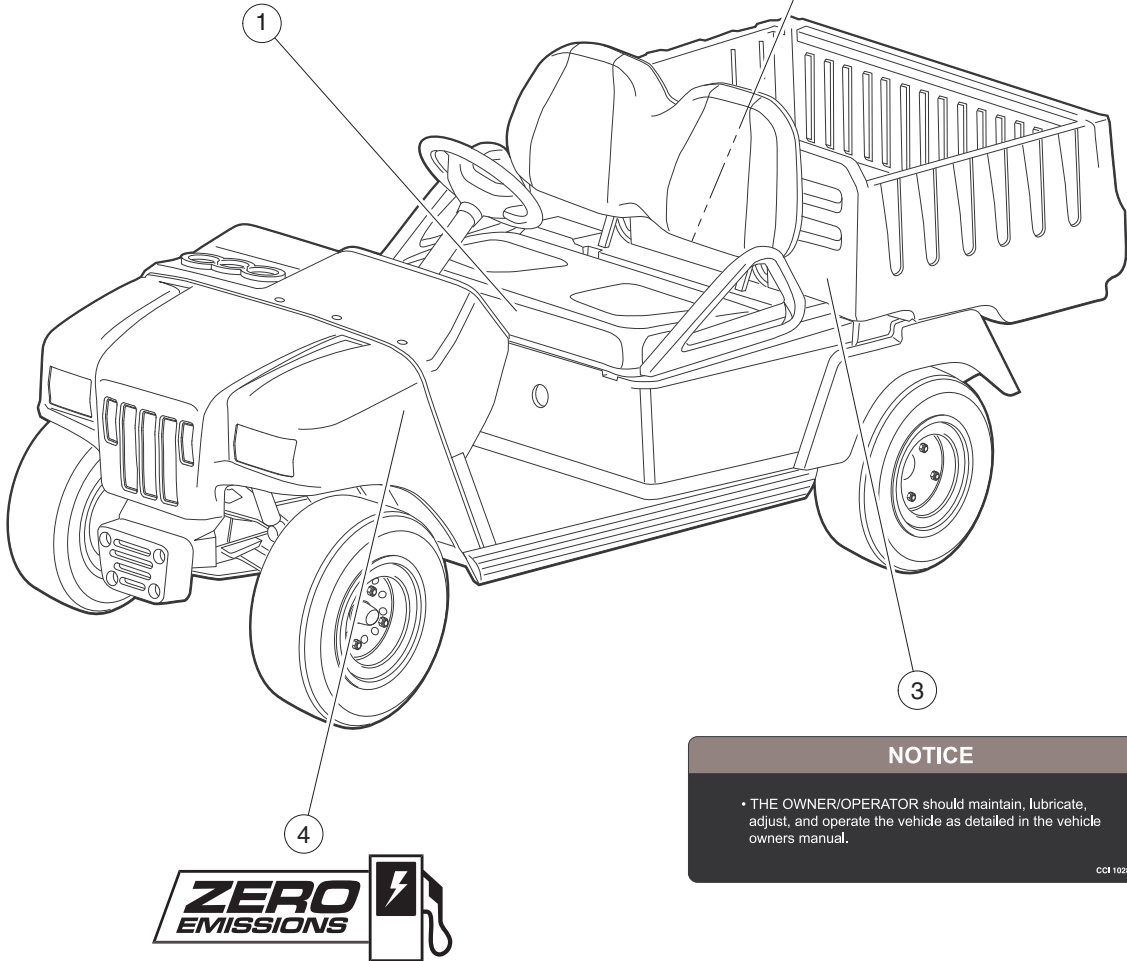

NOTICE

- THE OWNER/OPERATOR should maintain, lubricate, adjust, and operate the vehicle as detailed in the vehicle owners manual.

CC# 102833301



SAFETY DECALS – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>101908601</u>	Decal, Tow/Run Switch Warning	1	
2	<u>101931501</u>	Decal, Component Cover	1	
3	<u>102833301</u>	Decal, Maintenance	1	
4	<u>105153201</u>	Decal, Zero Emission Vhcle, Lh	1	
5	<u>105153202</u>	Decal, Zero Emission Vhcle, Rh	1	
Note: Item 5 is not illustrated. It is exact opposite of item 4.				

3

G

E

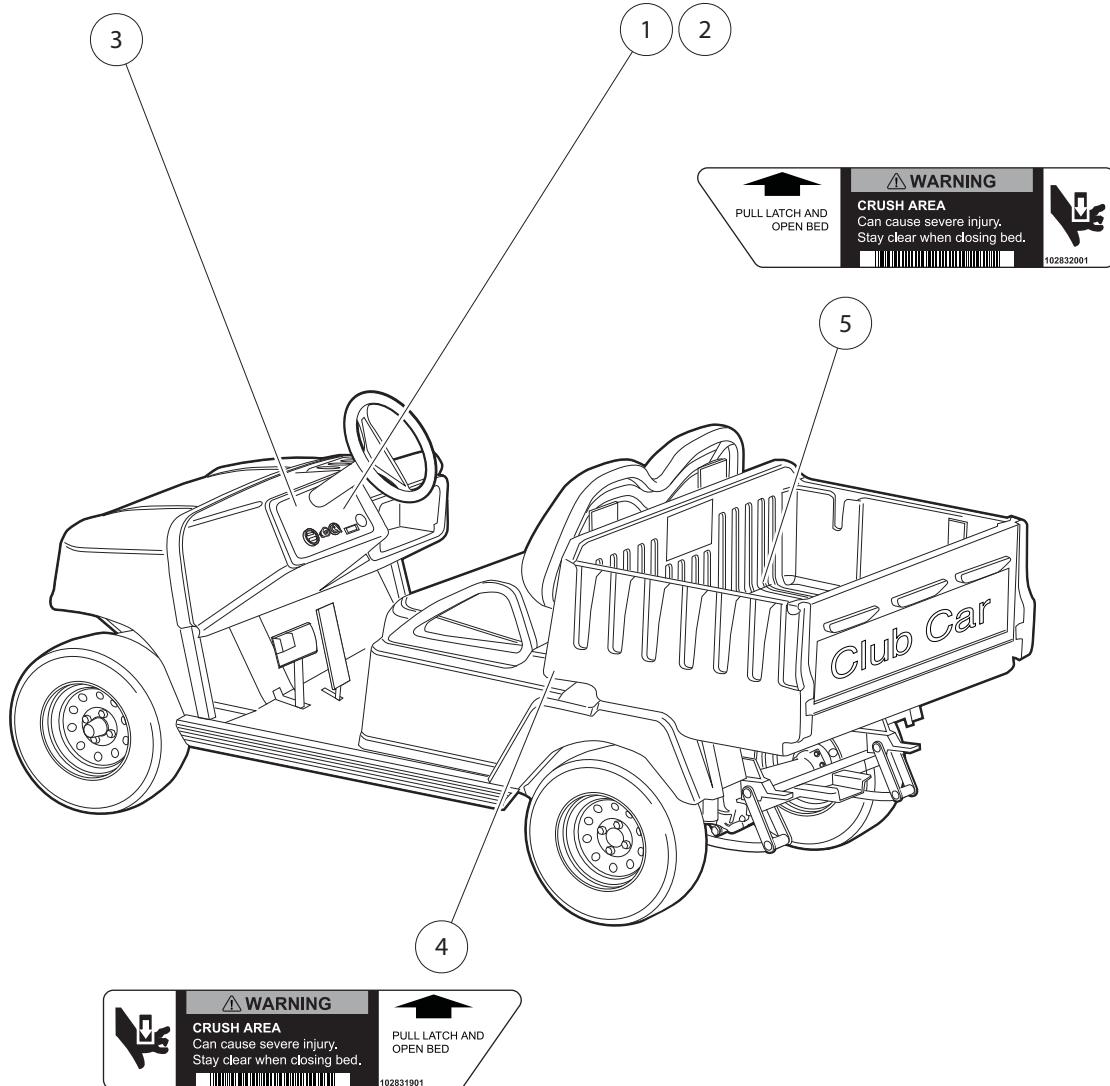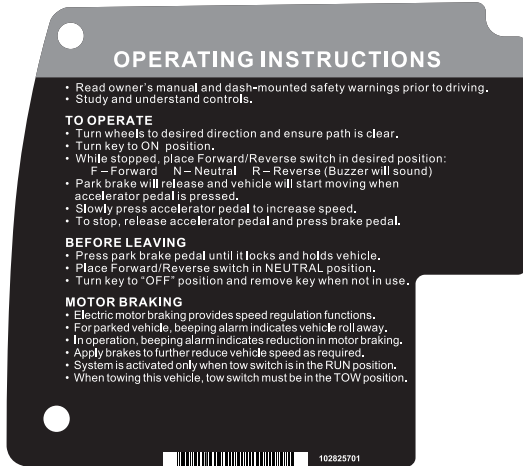

000229-003

SAFETY DECALS – ELECTRIC VEHICLES, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
1	<u>102825501</u>	1 2 3 4 Decal, Warning, Instrument Panel	1	
2	<u>102825502</u>	Decal, Warning, Instrument Panel	1	
3	<u>102825701</u>	Decal, Operating Instructions, Instrument Panel	1	
4	<u>102831901</u>	Decal, Crush Warning, Driver-Side	1	
5	<u>102832001</u>	Decal, Crush Warning, Passenger-Side	1	
Note: Item 2 is for use on vehicles equipped with a 12-volt accessory outlet.				

3

G


E

LIGHTS, CONTROLS, AND INDICATORS

4

G

E

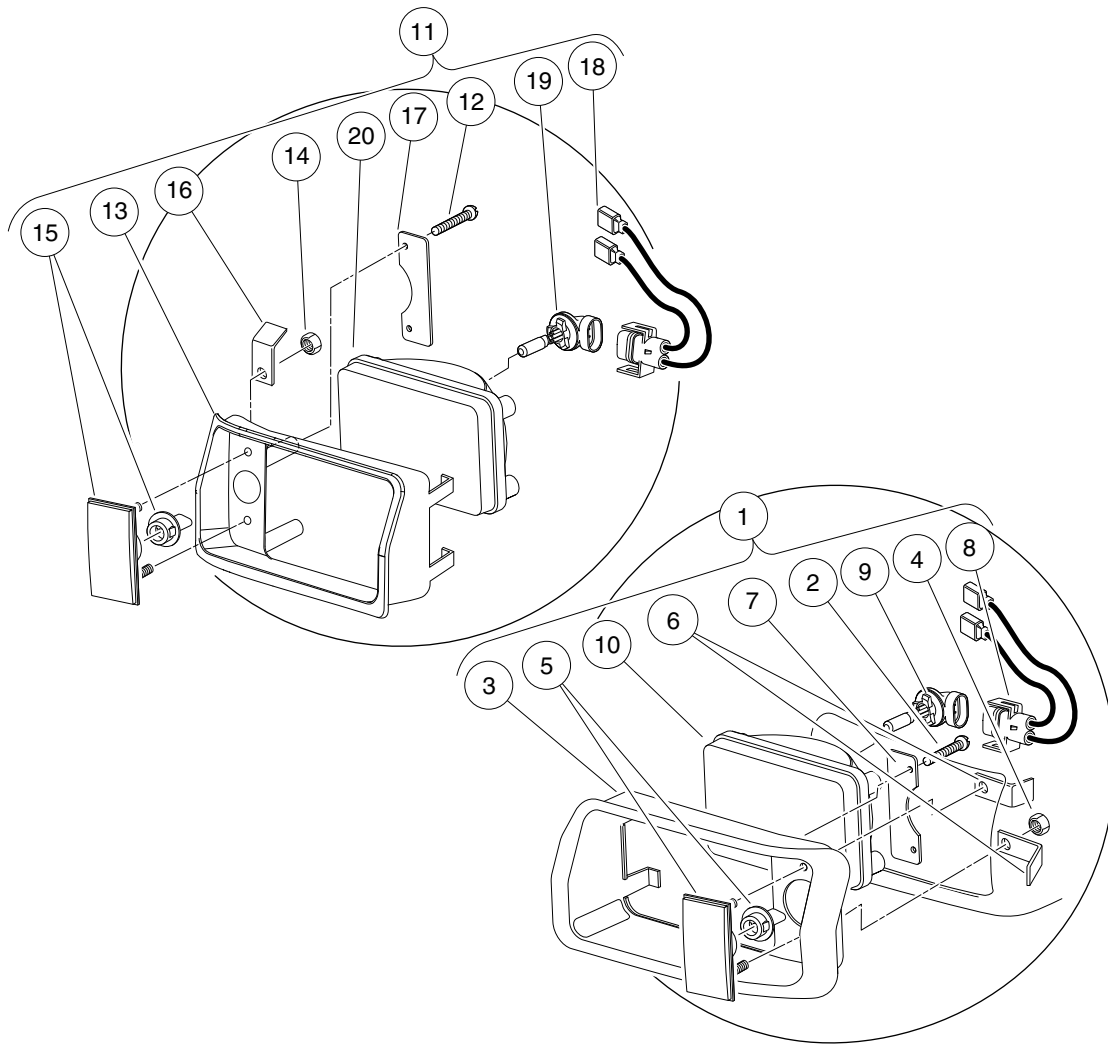

000073-001


HEADLIGHTS

ITEM	PART NO.	DESCRIPTION	QTY	4	G	E
		1 2 3 4				
1	<u>101988001</u>	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	1			
2	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2			
3	<u>1016880</u>	Headlight Bezel, Left	1			
4	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2			
5	<u>1017062</u>	Turn Signal Lens Assy	1			
6	<u>1017064</u>	Mounting Bracket	2			
7	<u>1017065</u>	Retainer, Headlight	1			
8	<u>101987901</u>	Connector, Harness Assembly, Headlight	1			
9	<u>101988101</u>	Bulb, Headlight	1			
10	<u>101988201</u>	Lens, Headlight	1			
11	<u>101988002</u>	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	1			
12	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2			
13	<u>1016879</u>	Headlight Bezel, Right	1			
14	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2			
15	<u>1017062</u>	Turn Signal Lens Assy	1			
16	<u>1017064</u>	Mounting Bracket	2			
17	<u>1017065</u>	Retainer, Headlight	1			
18	<u>101987901</u>	Connector, Harness Assembly, Headlight	1			
19	<u>101988101</u>	Bulb, Headlight	1			
20	<u>101988201</u>	Lens, Headlight	1			

4

G

E

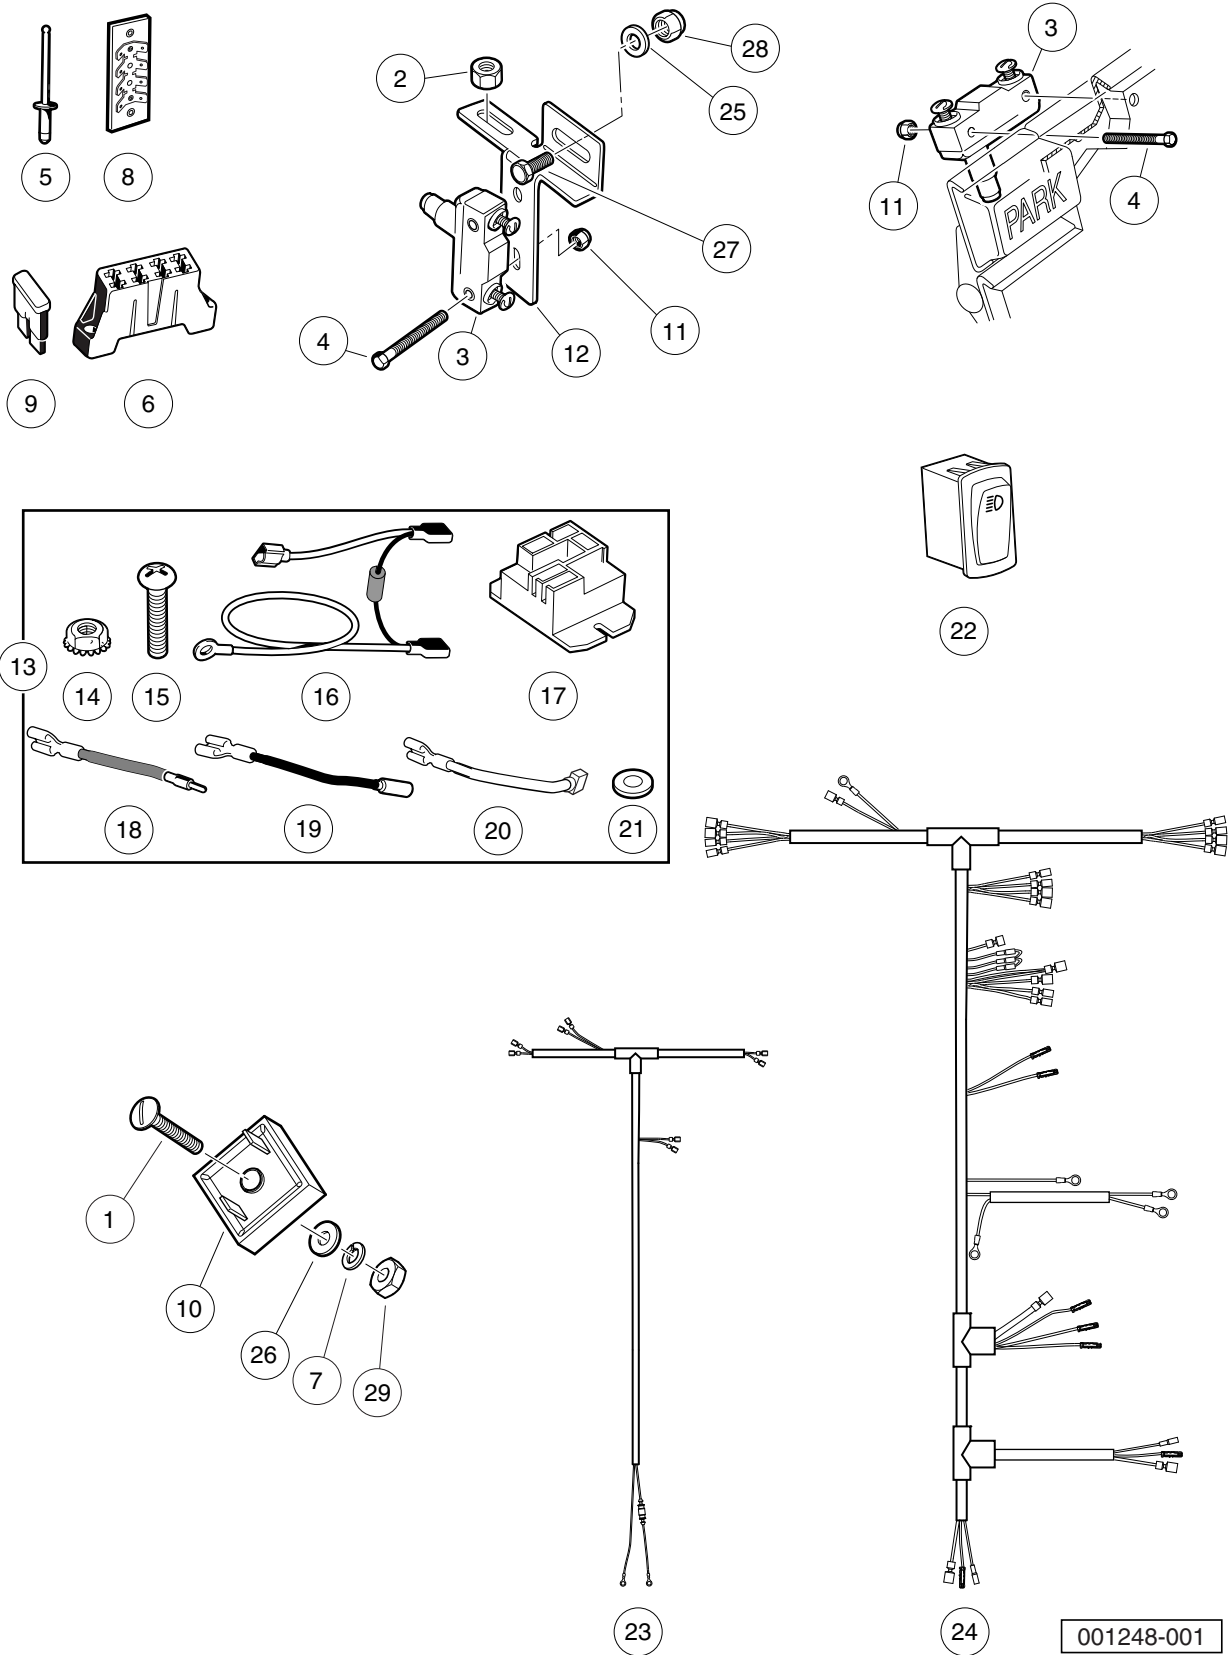


LIGHTING SYSTEM COMPONENTS – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1010909</u>	Screw, #10-32 X 1.25 Rd Hd Mch	1	
2	<u>1011280</u>	Locknut, 5/16-18	1	
3	<u>1011439</u>	Switch, Limit	2	
4	<u>1011557</u>	Screw, #6-32 X 1.00 Hex-Head Machine	4	
5	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2	
6	<u>1015741</u>	Fuse Block	1	
7	<u>1016</u>	Lockwasher, #10 Split	1	
8	<u>1016356</u>	Terminal Block with Insulator	1	
9	<u>1016423</u>	Fuse, 20-Amp	3	
10	<u>1017721</u>	Limiter, Voltage	1	
11	<u>101932201</u>	Locknut, #6-32 Nylon	4	
12	<u>101957101</u>	Bracket, Brake Light Switch	1	
13	<u>102198701</u>	Brake Relay Kit - 12v (includes items 14 through 21)	1	
14	<u>1011229</u>	Locknut, #6-32 Whiz	2	
15	<u>1017853</u>	Screw, #6-32 X 0.75 Hex-Head Machine	2	
16	<u>101914401</u>	Assembly, Voltage Suppressor	1	
17	<u>102199001</u>	Relay, 12-Volt	1	
18	<u>102199201</u>	Wire Asm #18 Brown	1	
19	<u>102199301</u>	Wire Asm #18 Black	1	
20	<u>102199401</u>	Wire Asm #18 Black	1	
21	<u>7591</u>	Washer, #6, Flat	2	
22	<u>102869401</u>	Switch, Rocker, Light	1	
23	<u>103255601</u>	Wire Harness, Headlights-Only, CA, Gas	1	
24	<u>103256901</u>	Wire Harness, Lighting, CA2	1	
25	<u>1241</u>	Washer, 5/16 Type A Flat	1	
26	<u>183</u>	Washer, #10, Type A, Flat	1	
27	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1	
28	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	
29	<u>7893</u>	Nut, #10-32 Hex	1	
Note: Use item 23 for headlights only. NOTE 2: Use item 24 for headlights and taillights. NOTE 3: Items 23 and 24 are used in many different models.				

4

G


E

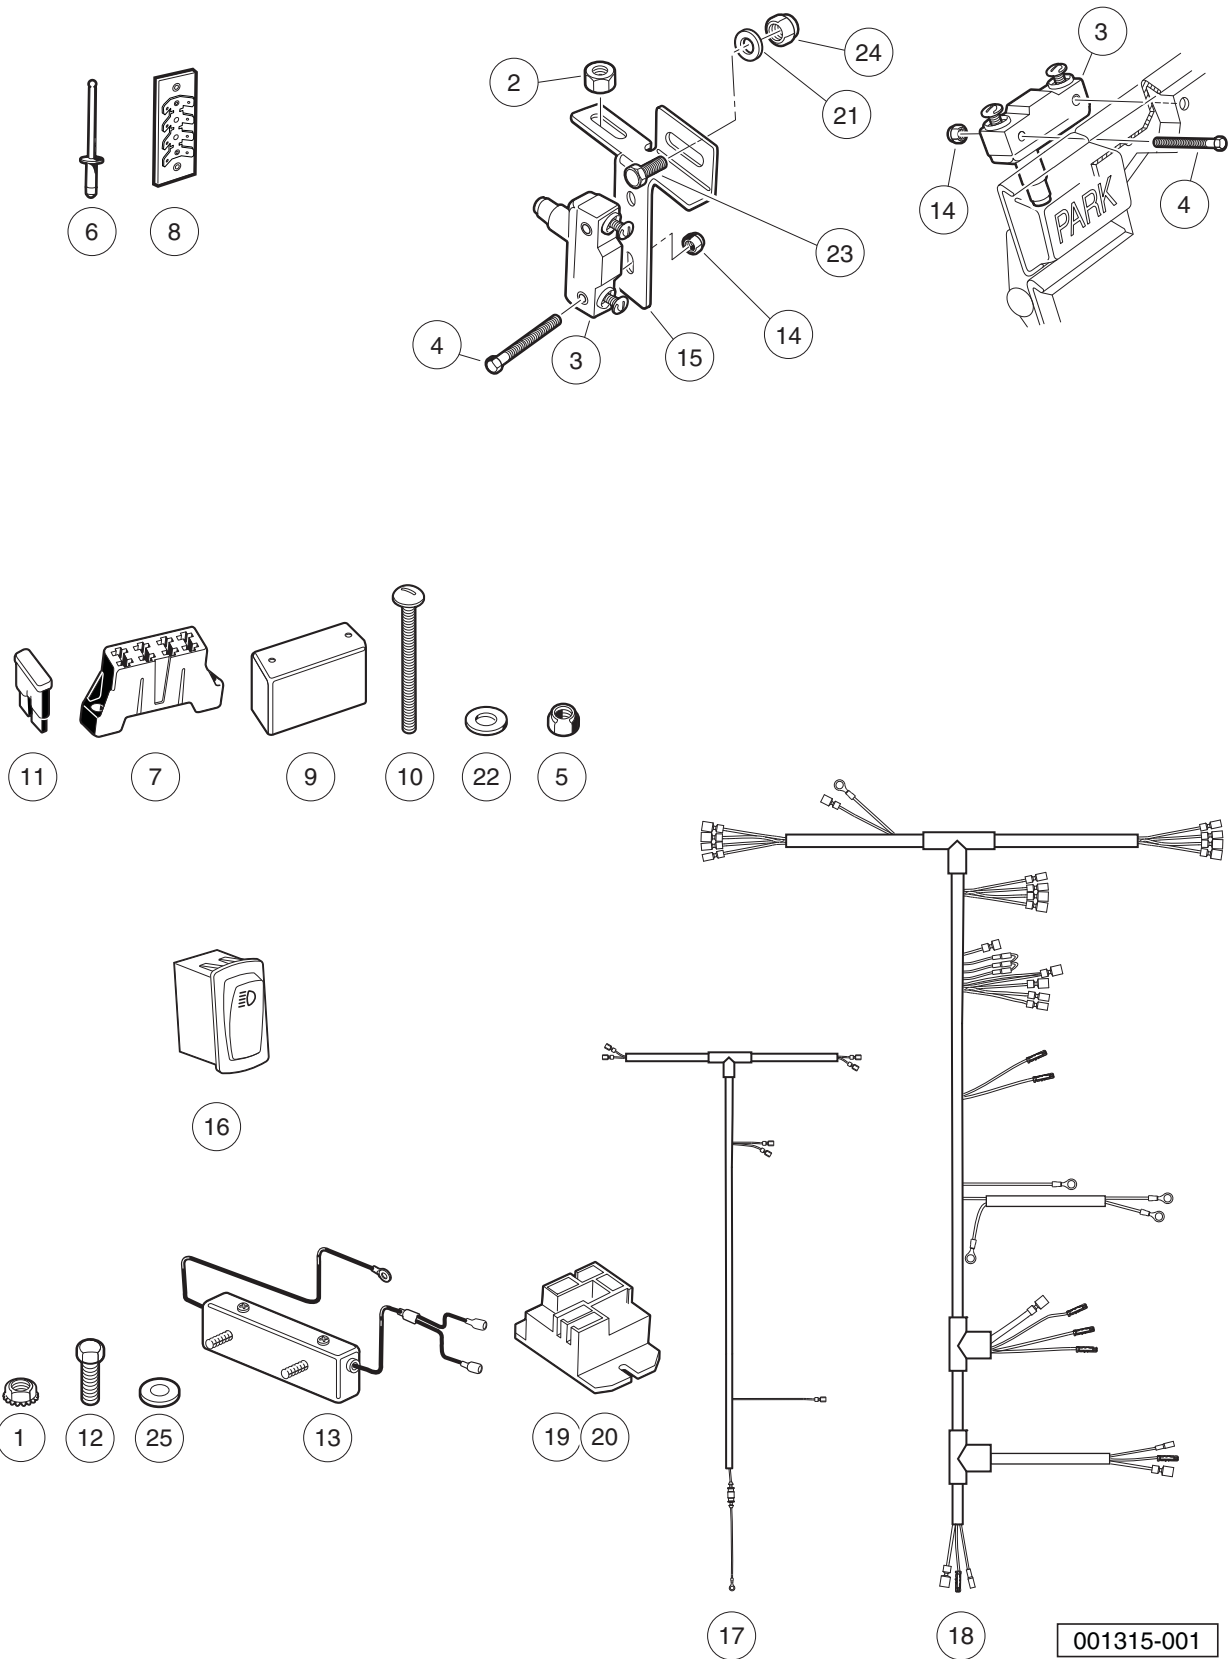

001315-001

LIGHTING SYSTEM COMPONENTS – ELECTRIC VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1011229</u>	Locknut, #6-32 Whiz	2	
2	<u>1011280</u>	Locknut, 5/16-18	1	
3	<u>1011439</u>	Switch, Limit	2	
4	<u>1011557</u>	Screw, #6-32 X 1.00 Hex-Head Machine	4	
5	<u>1012438</u>	Locknut, #10-24 Nylon Insert	2	
6	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2	
7	<u>1015741</u>	Fuse Block	1	
8	<u>1016356</u>	Terminal Block with Insulator	1	
9	<u>1016363</u>	Fuse Block Cover	1	
10	<u>1016366</u>	Screw, #10-24 X 3.0 Pan-Head Machine	2	
11	<u>1016423</u>	Fuse, 20-Amp	3	
12	<u>1017853</u>	Screw, #6-32 X 0.75 Hex-Head Machine	2	
13	<u>101810501</u>	Limiter, Voltage	1	
14	<u>101932201</u>	Locknut, #6-32 Nylon	4	
15	<u>101957101</u>	Bracket, Brake Light Switch	1	
16	<u>102869401</u>	Switch, Rocker, Light	1	
17	<u>103255701</u>	Wire Harness, Headlights-Only, CA, Electric	1	
18	<u>103257001</u>	Wire Harness, Lighting	1	
19	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes item 20)	1	
20	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1	
21	<u>1241</u>	Washer, 5/16 Type A Flat	1	
22	<u>183</u>	Washer, #10, Type A, Flat	4	
23	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1	
24	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	
25	<u>7591</u>	Washer, #6, Flat	2	
Note: Use item 17 for headlights only. NOTE 2: Use item 18 for headlights and taillights. NOTE 3: Items 17 and 18 are used in many different models.				

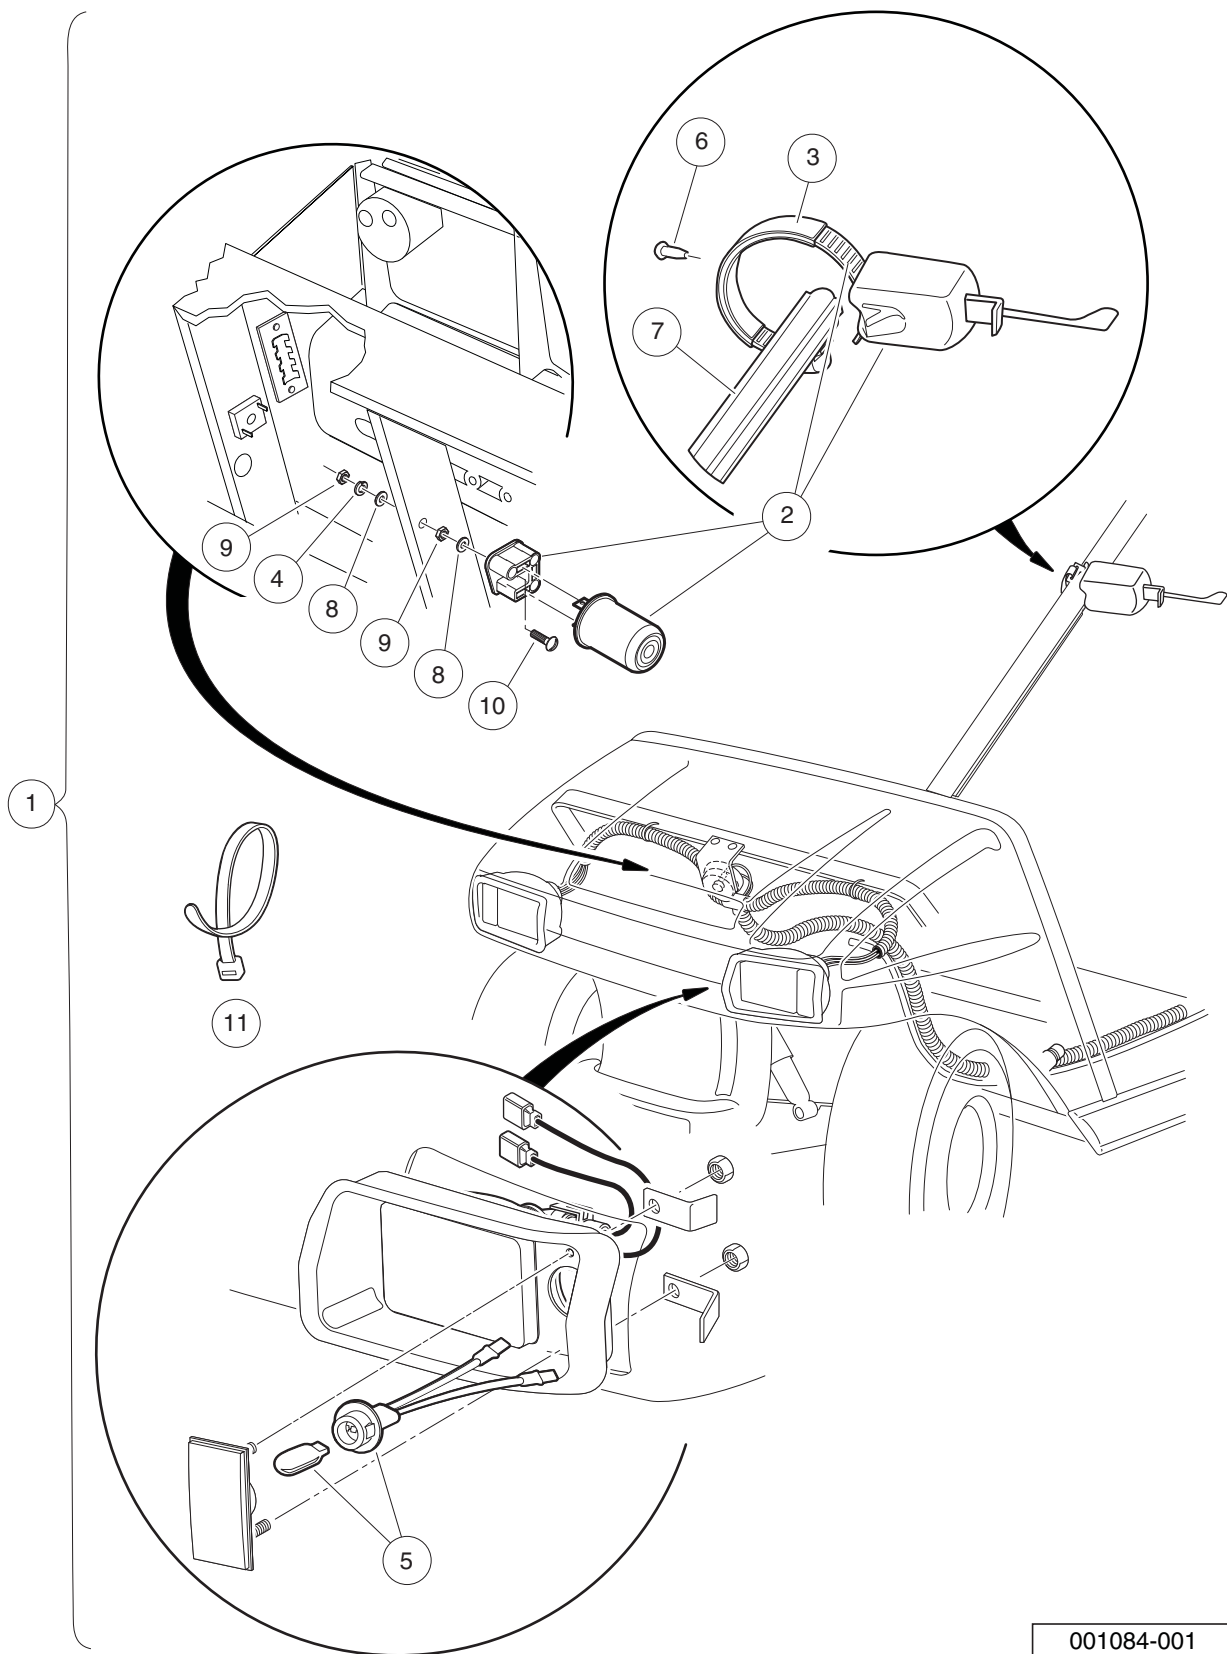

001084-001

TURN SIGNAL KIT – GASOLINE AND ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	101707402	Turn Signal Conversion Kit (includes items 2 through 11)	1	
2	<u>1011590</u>	Switch Sub-assy, Turn Signal	1	
3	N/A	Strap, Extrusion	1	
4	<u>1016</u>	Lockwasher, #10 Split	1	
5	<u>1017075</u>	Socket & Lamp Assembly	2	
6	<u>1017724</u>	Rivet, Plastic	1	
7	<u>102529201</u>	Wire Cover, Steering Column	1	
8	<u>183</u>	Washer, #10, Type A, Flat	2	
9	<u>7893</u>	Nut, #10-32 Hex	2	
10	8104	Screw, #10-32 X .75 Rd Hd Mach	1	
11	<u>8990</u>	Tie Wrap, 8" Nylon	1	

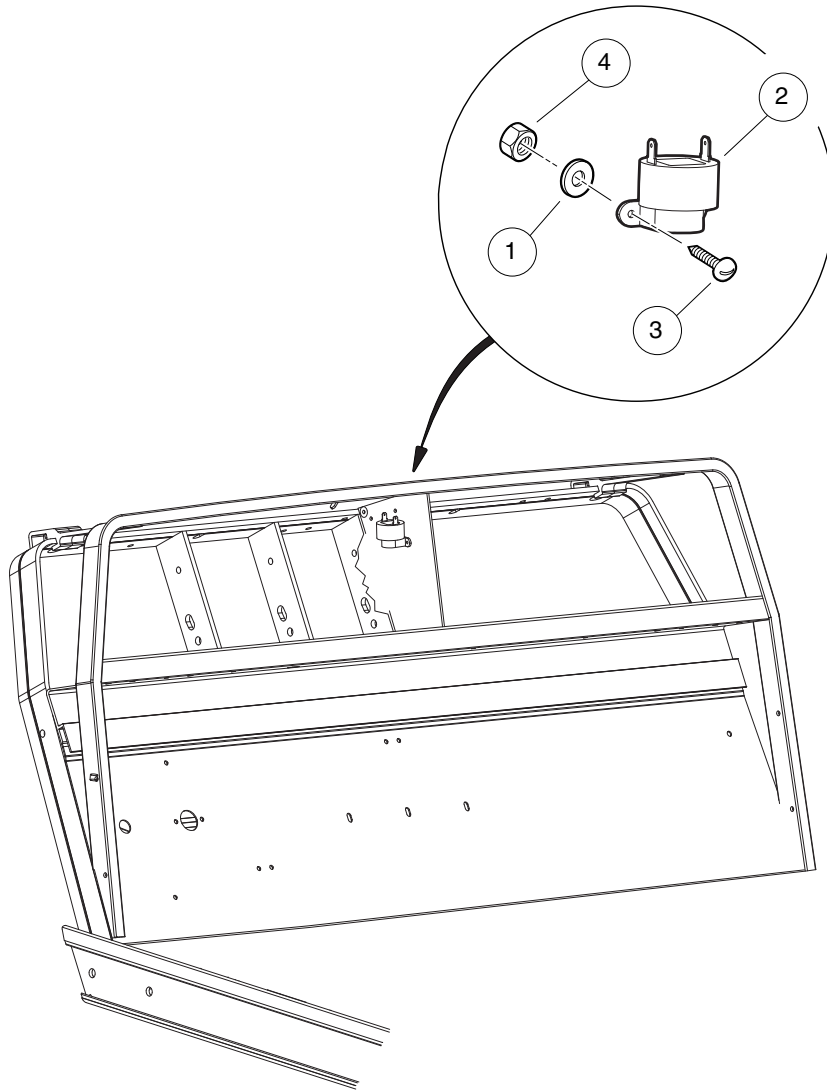


000363-001

REVERSE BUZZER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012431	Washer, #4 Flat	1
2	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
3	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	1
4	<u>8057</u>	Nut, #4-40 Hex Machine	1


4
G
E

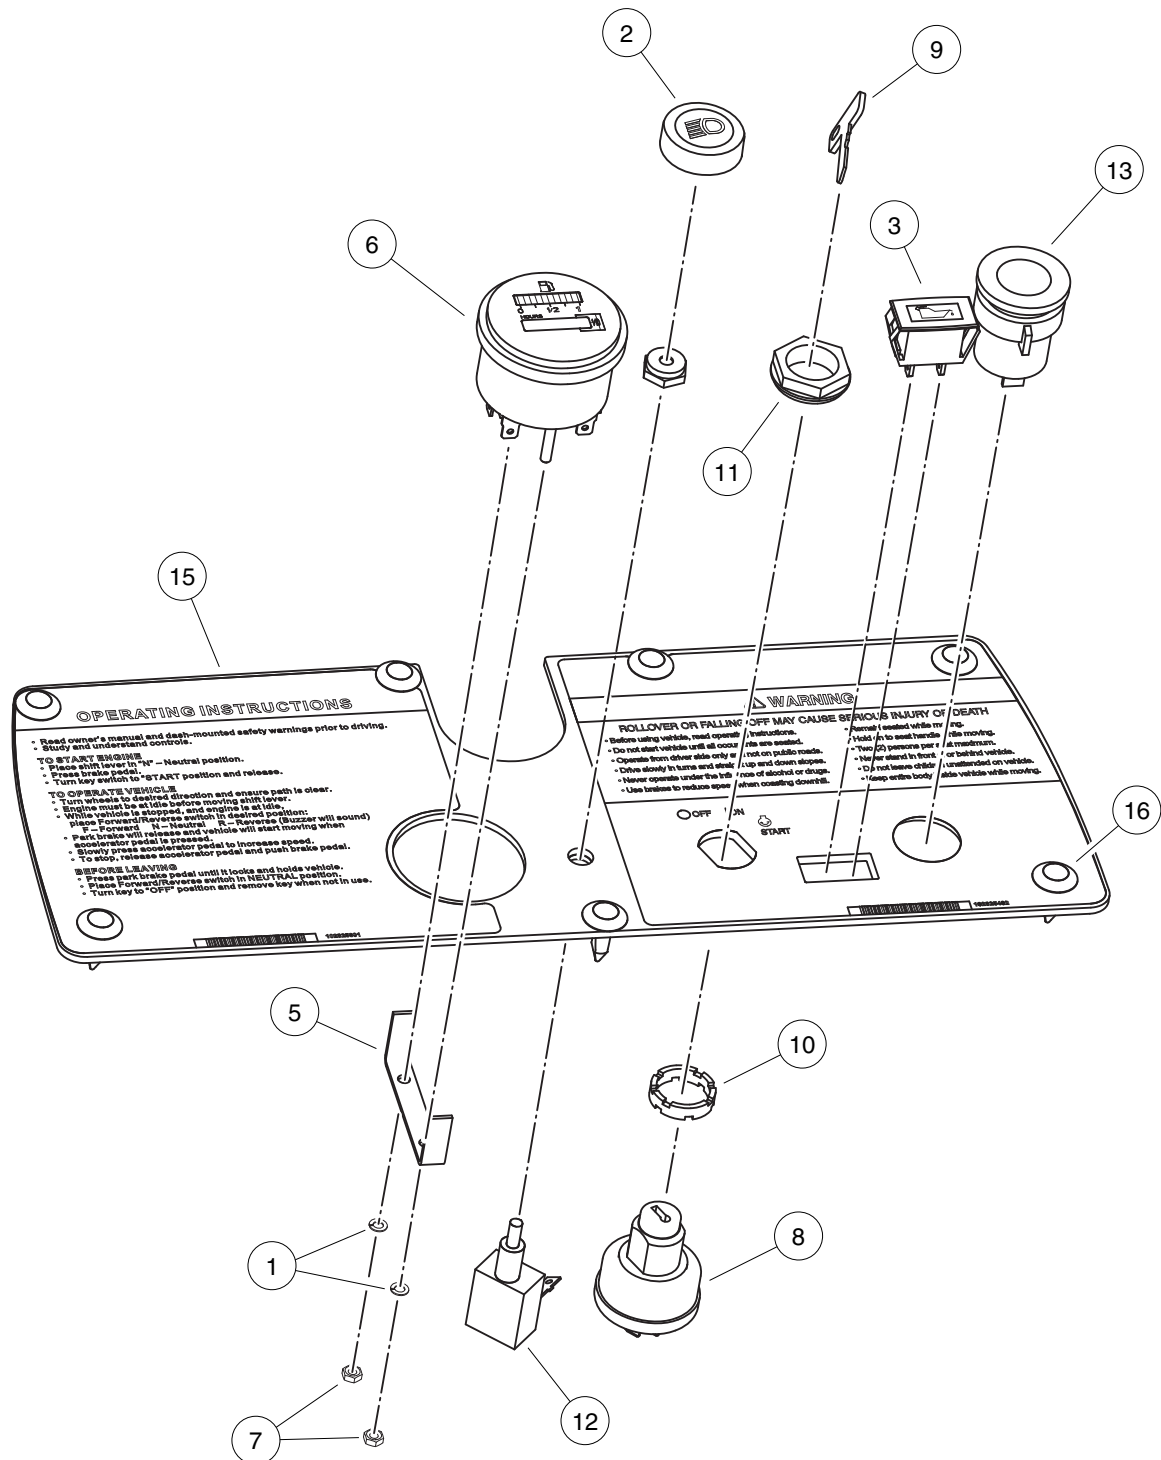

000232-001

INSTRUMENT PANEL – GASOLINE VEHICLE


ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>1012986</u>	Lockwasher, M4	2	E
2	<u>1013857</u>	Knob, Light Switch	1	
3	<u>1016630</u>	Light, Oil	1	
4	<u>101990703</u>	Gauge, Fuel/Hour, with Bracket (includes items 5 and 6)	1	
5	<u>102025901</u>	Bracket, Fuel Gauge/Hour Meter	1	
6	N/A	Gauge, Fuel/Hour	1	
7	<u>101991101</u>	Nut, M4-0.7	2	
8	<u>102044702</u>	Key Switch 12v Key Start	1	
9	<u>102044801</u>	Key Set	1	
10	<u>102051601</u>	Spacer, Keyswitch	1	
11	<u>102051701</u>	Nut, Key Switch	1	
12	<u>102051901</u>	Switch, Light	1	
13	<u>102198001</u>	Receptacle, Accessory	1	
14	<u>102804501</u>	Panel, Instrument	1	
15	<u>102804502</u>	Panel, Instrument (with 12-Volt Accessory Outlet Cutout)	1	
16	<u>102967901</u>	Rivet, Removable, Tuflok 1/4"	7	

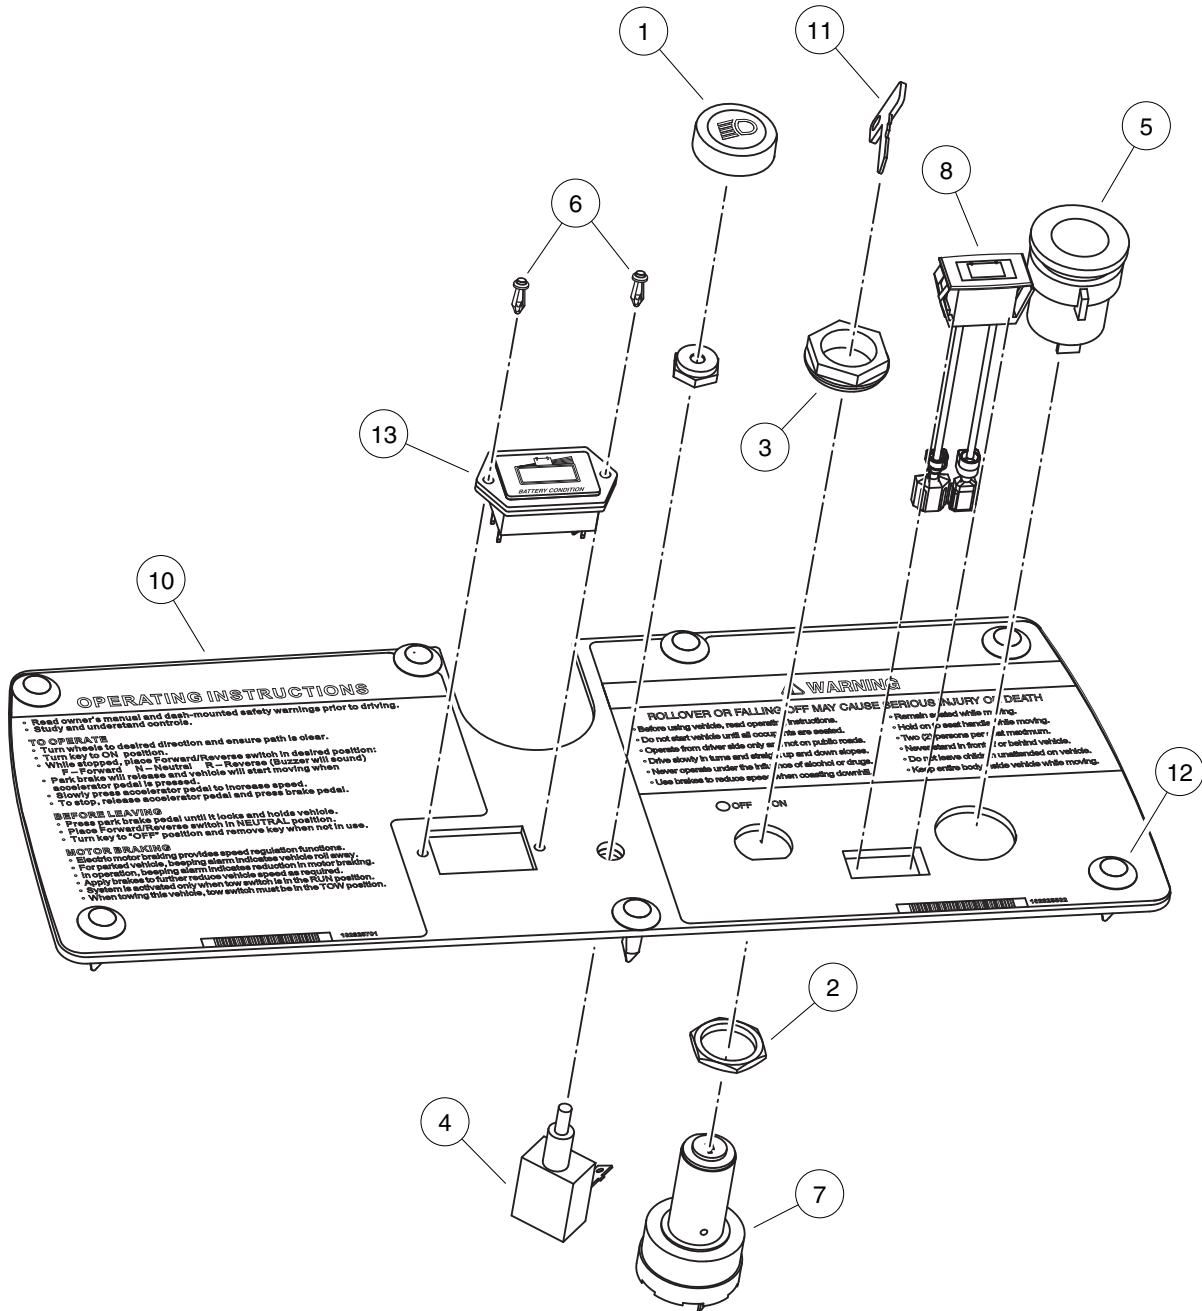

000231-001

INSTRUMENT PANEL – ELECTRIC VEHICLE


ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1013857</u>	Knob, Light Switch	1	
2	<u>101830701</u>	Nut, Key Switch	1	
3	<u>102051701</u>	Nut, Key Switch	1	
4	<u>102051901</u>	Switch, Light	1	
5	<u>102198001</u>	Receptacle, Accessory	1	
6	<u>102499001</u>	Rivet, Micro Tuflok	2	
7	<u>102508601</u>	Key Switch, Electric	1	
8	<u>102508701</u>	Light, Battery	1	
9	<u>102804503</u>	Panel, Instrument	1	
10	<u>102804504</u>	Panel, Instrument (With 12-Volt Accessory Outlet Cutout) *	1	
11	<u>102830801</u>	Set, Key	1	
12	<u>102967901</u>	Rivet, Removable, Tuflok 1/4"	7	
13	<u>103200701</u>	Battery Condition Indicator - 48V	1	
Note: Items marked with an asterisk (*) are to be used only on vehicles equipped with a 12-volt accessory outlet. This item to be used only in vehicles equipped with accessory outlets.				

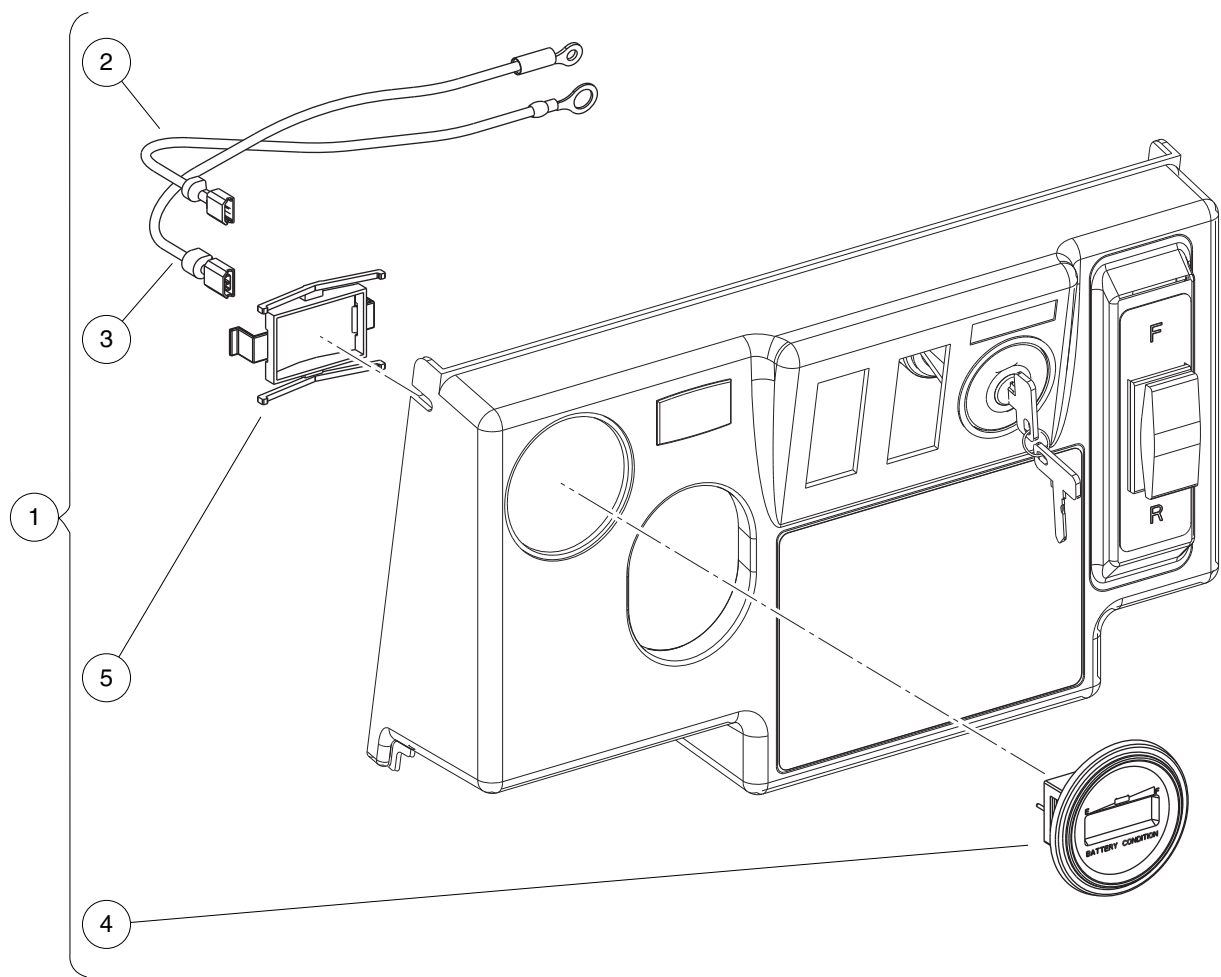

000817-002

BATTERY CONDITION INDICATOR – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>103257603</u>	Kit, Gauge, Battery Condition Indicator (includes items 2 through 4)	1	E
2	<u>103257701</u>	Wire Asm, #18 Black, 2565mm	1	
3	<u>103257801</u>	Wire Asm, #16 Red, 330mm	1	
4	<u>103354401</u>	Gauge, Battery Cond Ind, Rnd (includes item 5)	1	
5	<u>103348202</u>	Clip, Bci, Round	1	

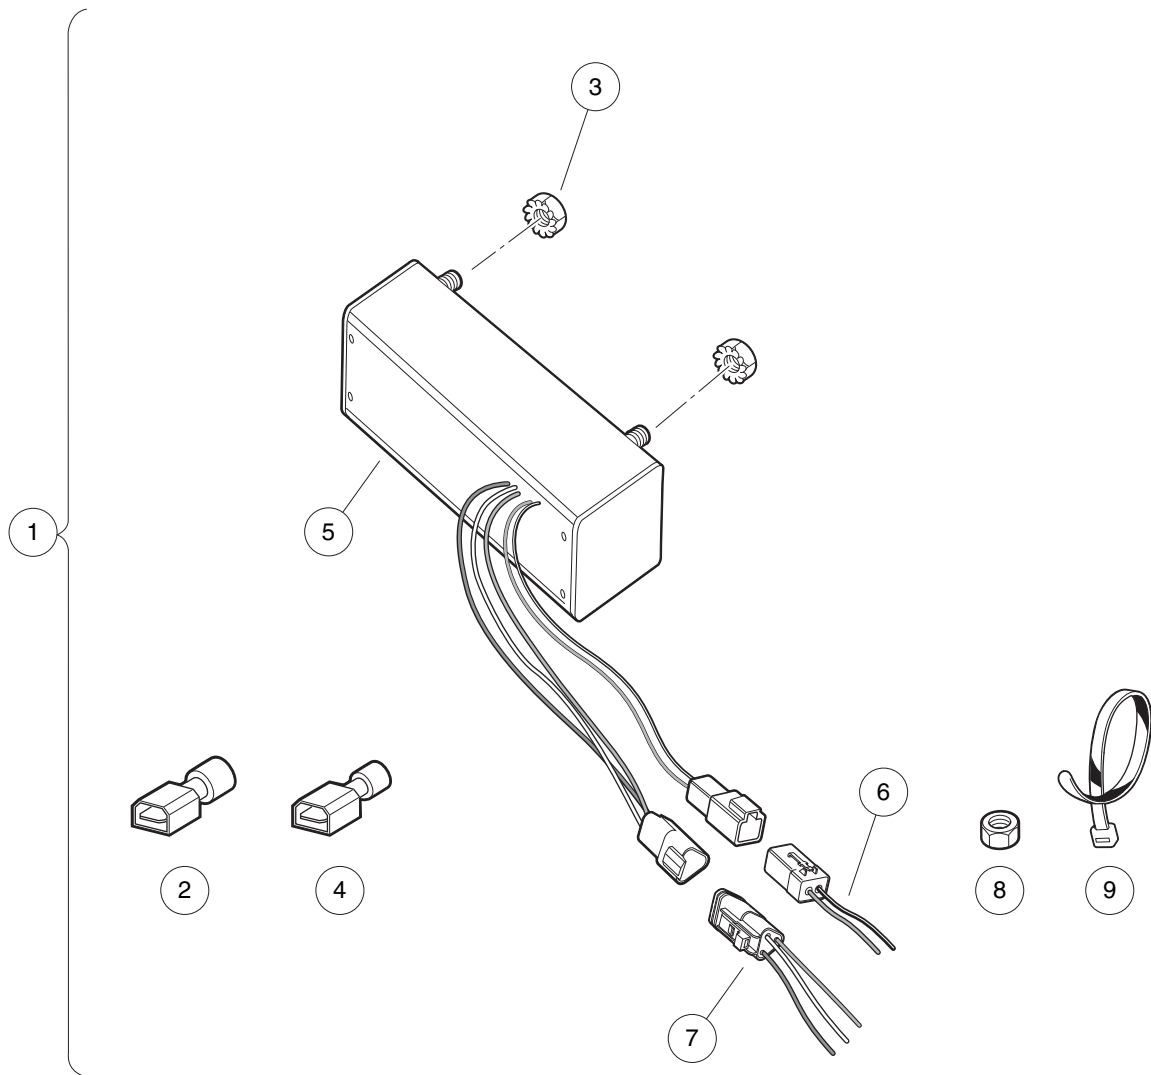

001271-001


DC CONVERTER – IQ SYSTEM ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>102357501</u>	Kit, DC/DC Converter (includes items 2 through 9)	1	
2	<u>1016365</u>	Terminal, 1/4" Male Quick Disconnect	1	
3	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	2	
4	N/A	Terminal, 1/4" Male Quick Disconnect	1	
5	<u>102352201</u>	Converter , Dc -non Isolated	1	
6	<u>102354901</u>	Harness, Dc Converter - 12v	1	
7	<u>102355001</u>	Harness, Dc Converter - 48v	1	
8	<u>1242</u>	Nut, 5/16-18 Hex	1	
9	<u>8990</u>	Tie Wrap, 8" Nylon	4	

4

G


E

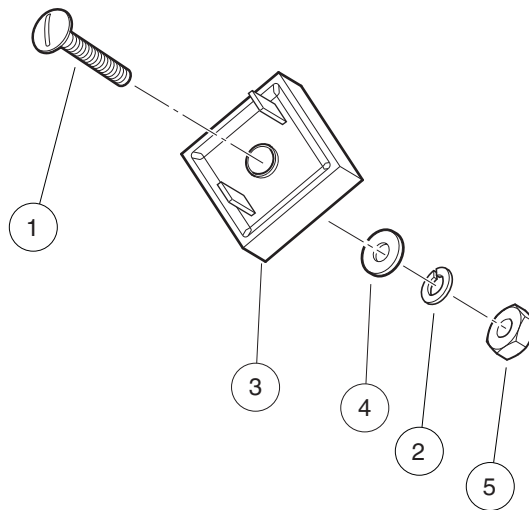

001091-001


VOLTAGE LIMITER – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1010909</u>	Screw, #10-32 X 1.25 Rd Hd Mch	1	
2	<u>1016</u>	Lockwasher, #10 Split	1	
3	<u>1017721</u>	Limiter, Voltage	1	
4	<u>183</u>	Washer, #10, Type A, Flat	1	
5	<u>7893</u>	Nut, #10-32 Hex	1	

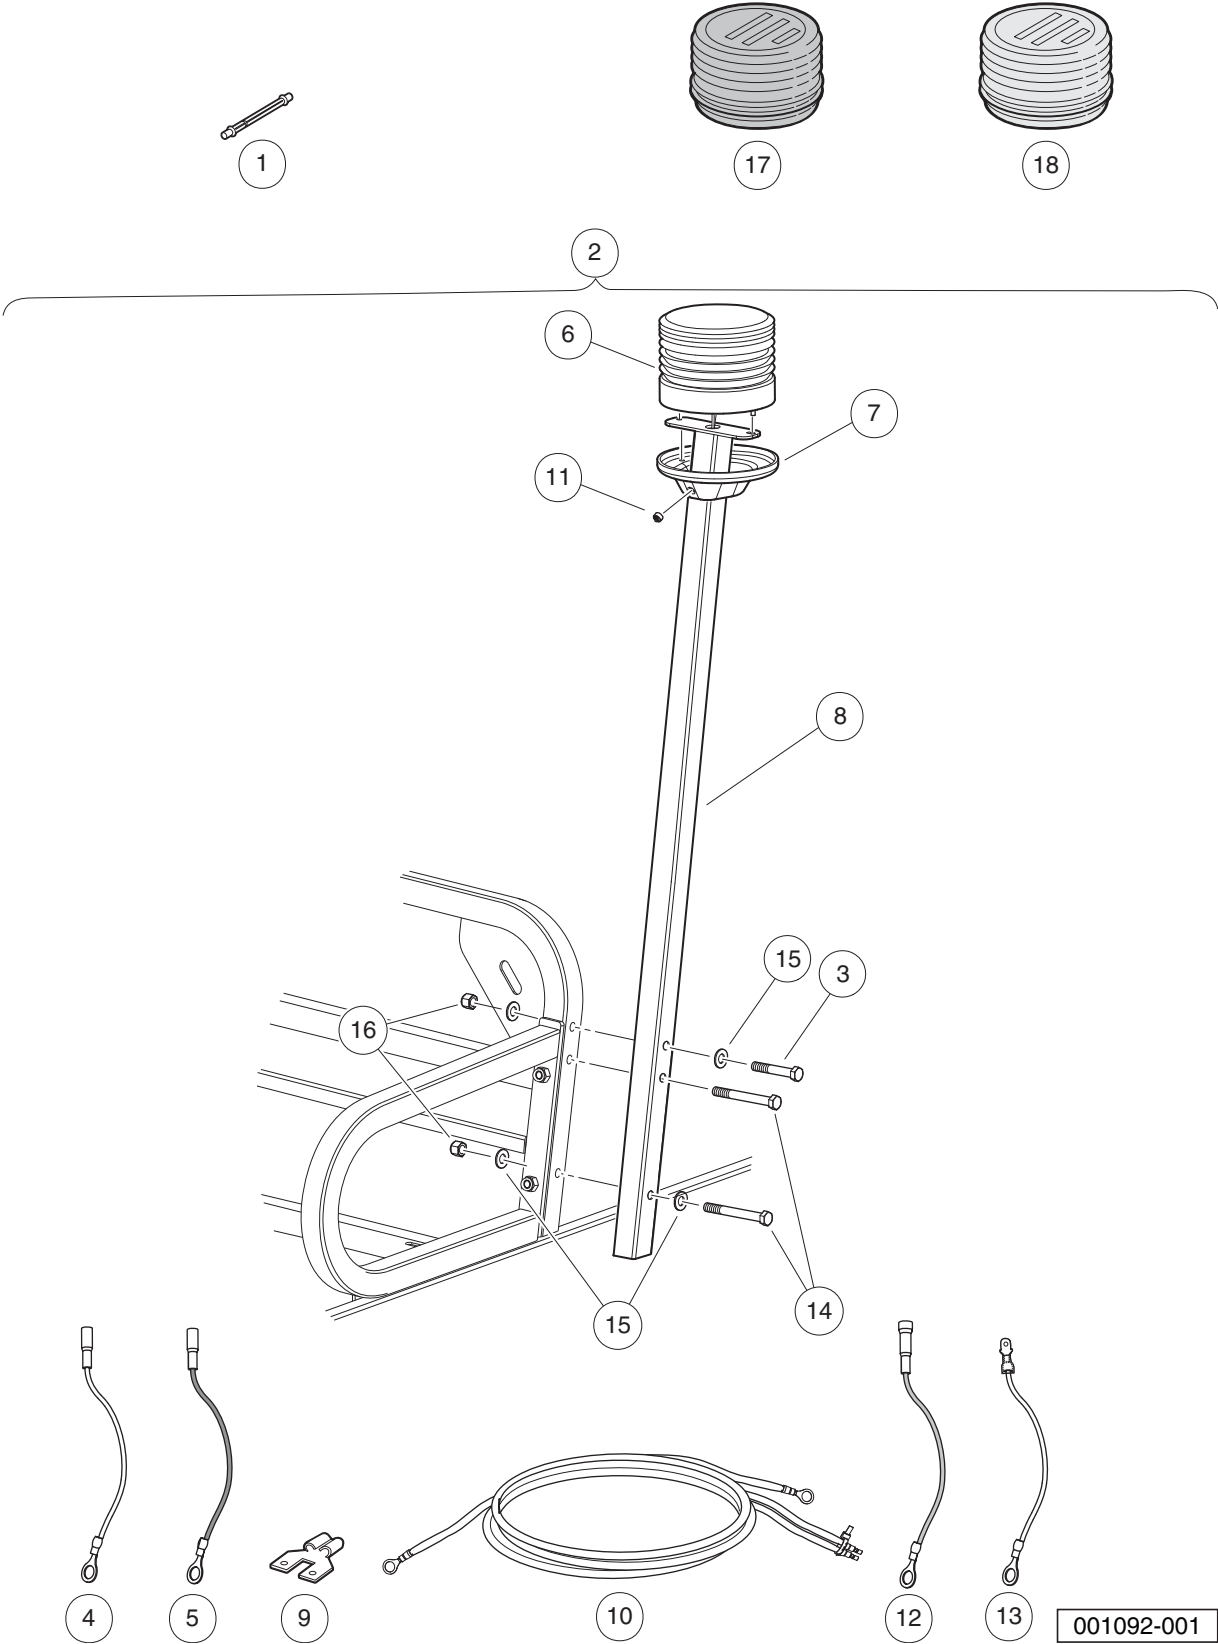

STROBE LIGHT, POST-MOUNTED – GASOLINE VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1015526</u>	Bulb, Replacement, for Strobe Light	1	
2	<u>1015765</u>	Safety Strobe Lht Post Mnt Gas (includes items 3 through 16)	1	
3	<u>1013509</u>	Screw, 1/4-20 X 1.75 Hx Hd Cap	2	
4	<u>1015153</u>	Wire Assembly #16 Yellow	1	
5	<u>1015154</u>	Wire Assembly Blue Ca #16	1	
6	<u>1015156</u>	Light Assembly, Strobe	1	
7	<u>1015157</u>	Cover Plate Switch - Pole Ca	1	
8	<u>1015160</u>	Pole Weldment Carryall	1	
9	<u>1015162</u>	3/16 Tab Adapter Non-insul	1	
10	<u>1015172</u>	Wire Harness Assy, Strobe Lght	1	
11	<u>1015187</u>	Switch Assembly	1	
12	<u>1016837</u>	Wire Assembly Red #18	1	
13	<u>1016929</u>	Wire Assembly Black #16	1	
14	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	2	
15	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4	
16	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2	
17	<u>AM1243701</u>	Lens, Blue, for Strobe Light	1	
18	<u>AM1243801</u>	Lens, Red, for Strobe Light	1	

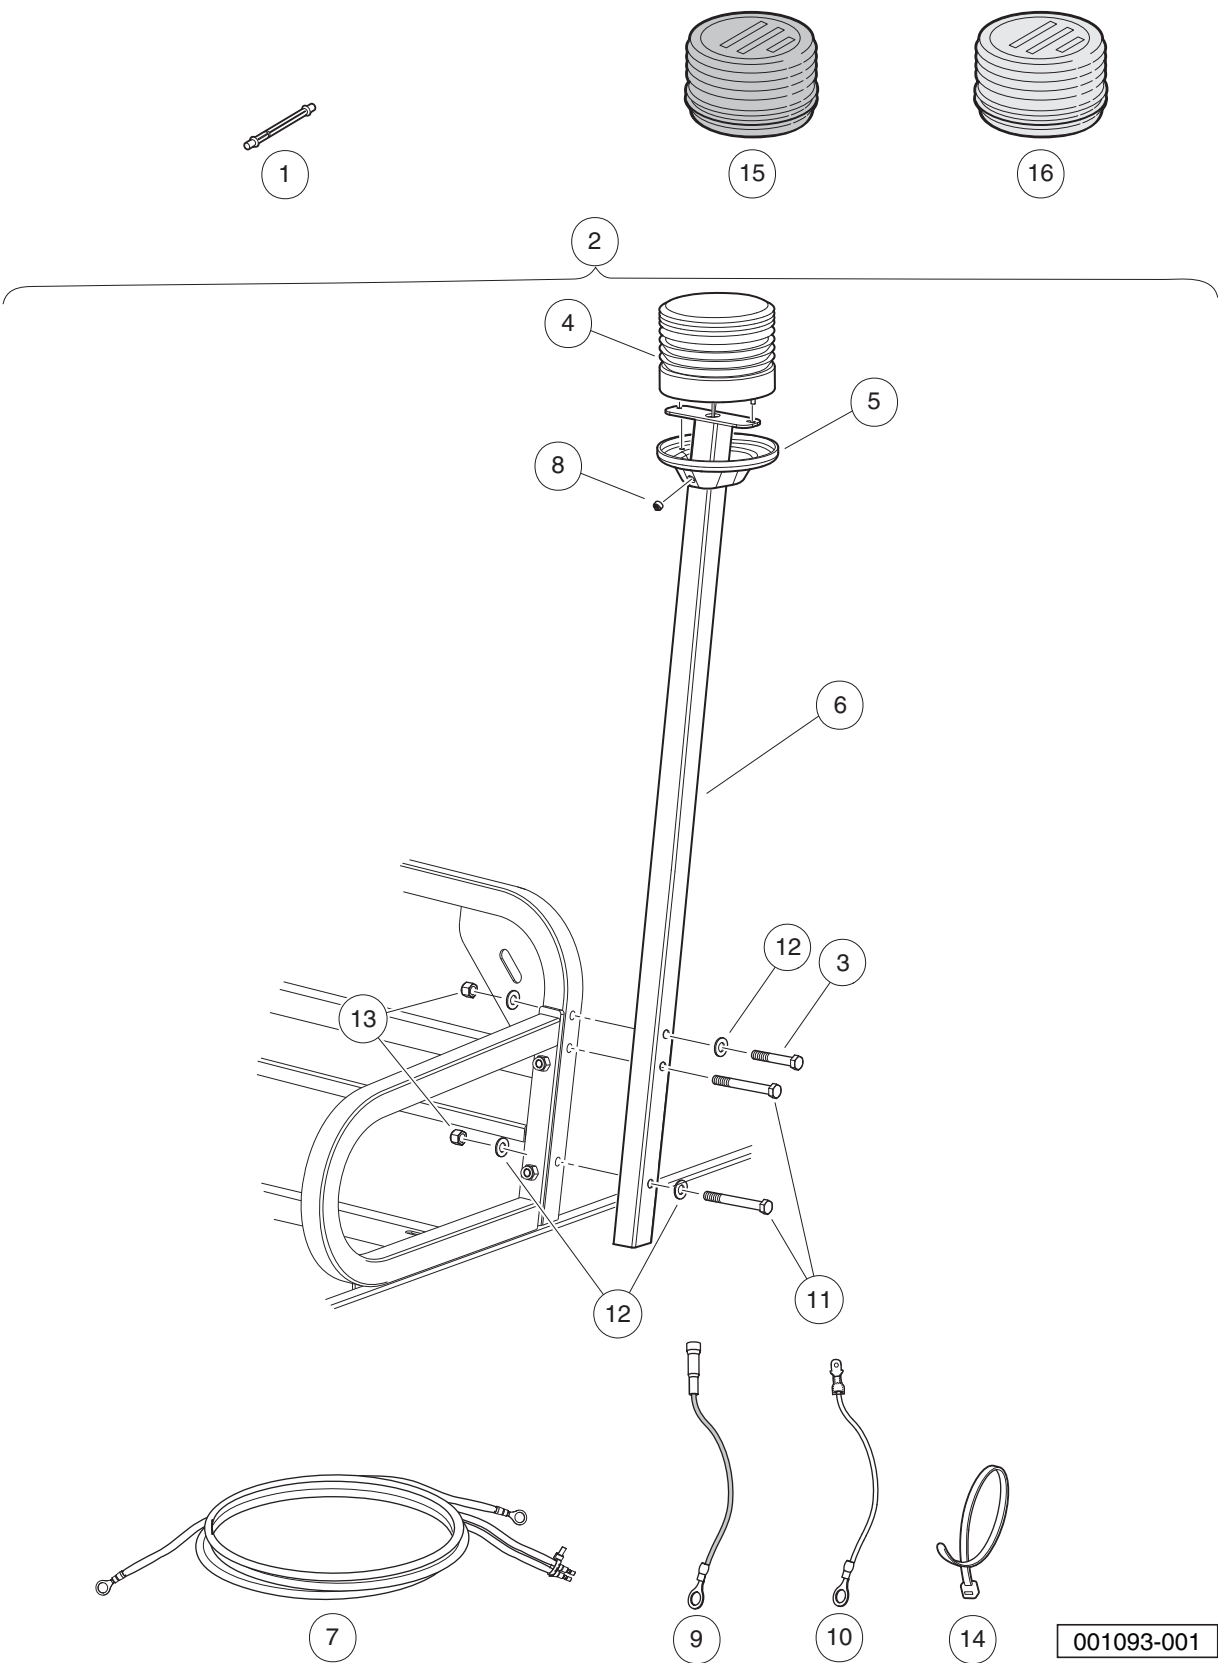

001093-001

STROBE LIGHT, POST-MOUNTED – ELECTRIC VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1015526</u>	Bulb, Replacement, for Strobe Light	1	
2	<u>101814601</u>	Safety Strobe Lht & Post Mt El (includes items 3 through 14)	1	
3	<u>1013509</u>	Screw, 1/4-20 X 1.75 Hx Hd Cap	2	
4	<u>1015156</u>	Light Assembly, Strobe	1	
5	<u>1015157</u>	Cover Plate Switch - Pole Ca	1	
6	<u>1015160</u>	Pole Weldment Carryall	1	
7	<u>1015172</u>	Wire Harness Assy, Strobe Lght	1	
8	<u>1015187</u>	Switch Assembly	1	
9	<u>1016837</u>	Wire Assembly Red #18	1	
10	<u>1016929</u>	Wire Assembly Black #16	1	
11	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	2	
12	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4	
13	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2	
14	<u>8990</u>	Tie Wrap, 8" Nylon	4	
15	<u>AM1243701</u>	Lens, Blue, for Strobe Light	1	
16	<u>AM1243801</u>	Lens, Red, for Strobe Light	1	

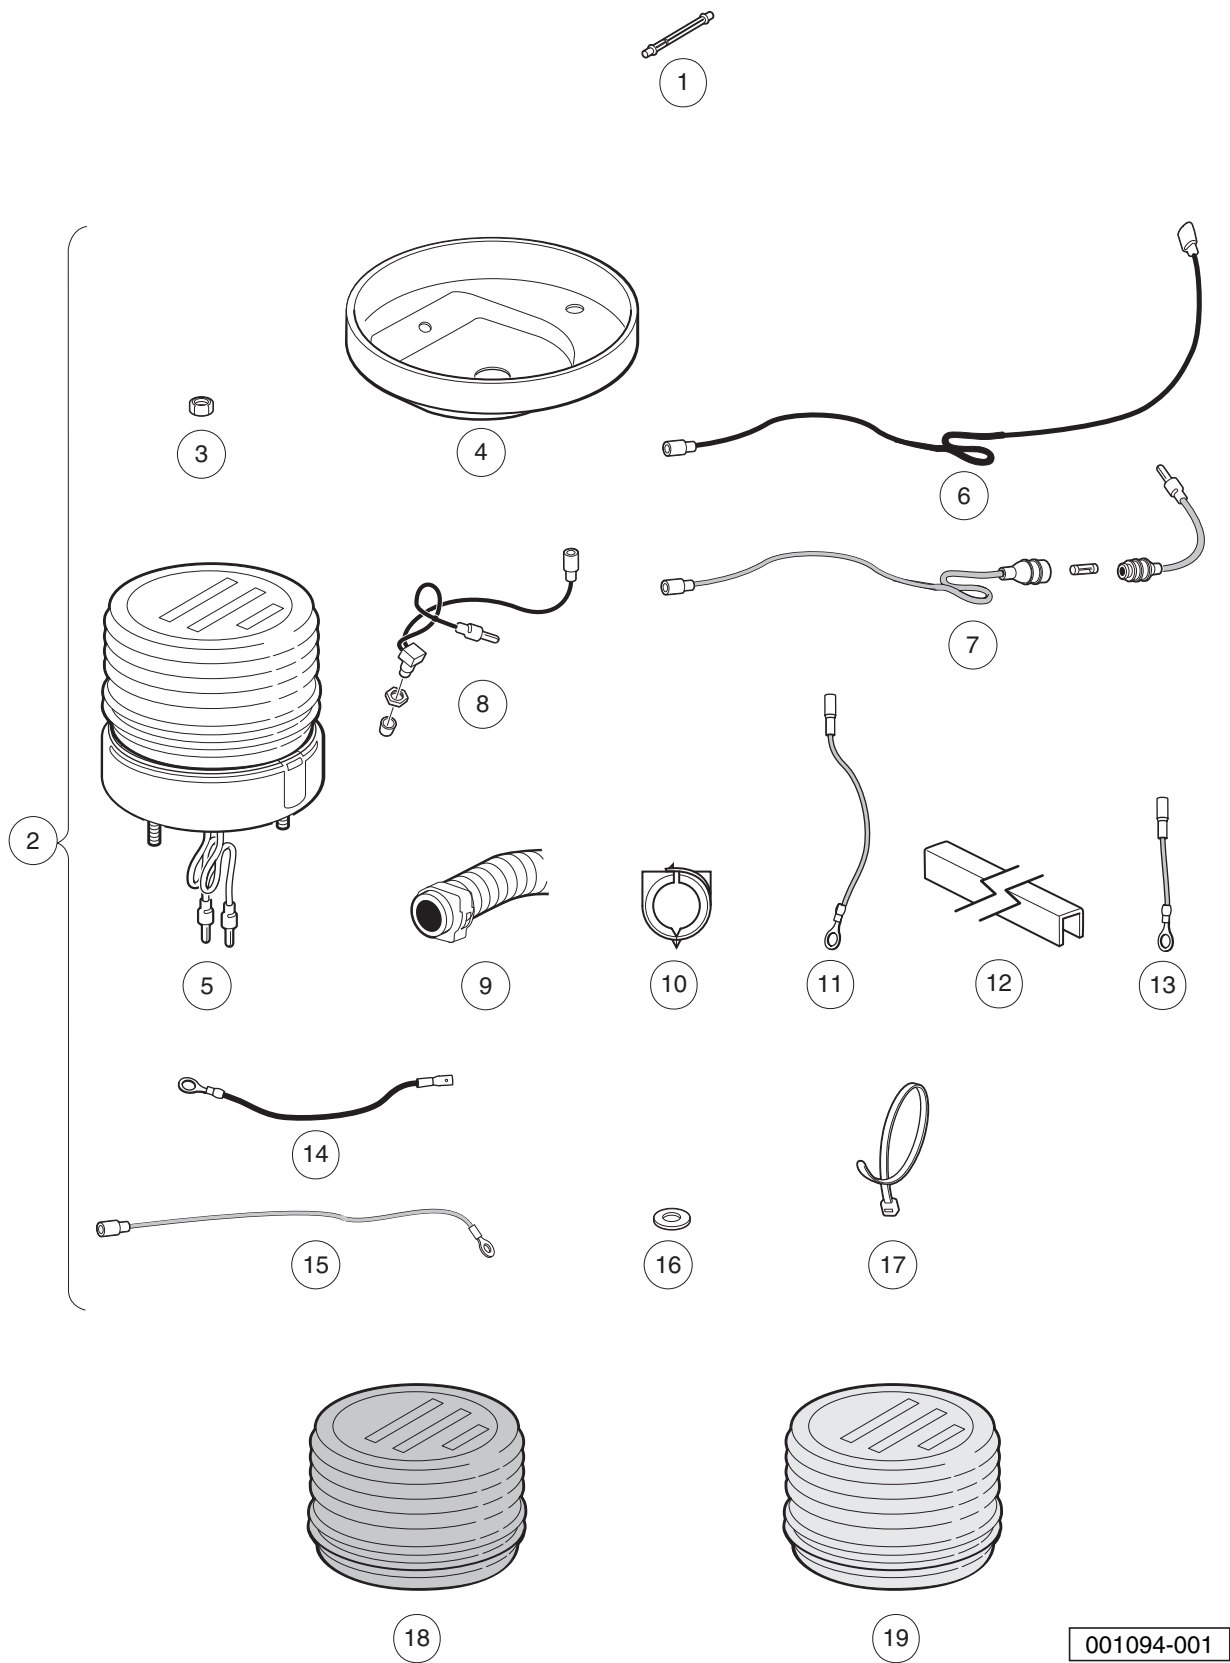

001094-001

STROBE LIGHT, CANOPY-MOUNTED

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>1015526</u>	Bulb, Replacement, for Strobe Light	1	E
2	<u>AM1243501</u>	Kit, Roof Mounted Strobe Fd (includes items 3 through 17)	A/R	
3	<u>1012438</u>	Locknut, #10-24 Nylon Insert	2	
4	<u>1015010</u>	Cover Plate Switch	1	
5	<u>1015156</u>	Light Assembly, Strobe	1	
6	<u>1015167</u>	#16 Black Wire Asm	1	
7	<u>1015170</u>	Wire Assembly #16	1	
8	<u>1015187</u>	Switch Assembly	1	
9	<u>1015768</u>	Split Convoluted Elec Conduit	11	
10	<u>1015770</u>	Outlet Ring - .5 Diameter	5	
11	<u>1016230</u>	Wire Asm #16 Red	1	
12	<u>1016267</u>	Snap On Conduit Vert.	1	
13	<u>1016287</u>	Wire Asm #16 Red	1	
14	<u>1016929</u>	Wire Assembly Black #16	1	
15	<u>101821601</u>	#18 Red Wire Assembly	1	
16	<u>183</u>	Washer, #10, Type A, Flat	2	
17	<u>8639</u>	Tie Wrap, 11" Nylon	8	
18	<u>AM1243701</u>	Lens, Blue, for Strobe Light	A/R	
19	<u>AM1243801</u>	Lens, Red, for Strobe Light	A/R	

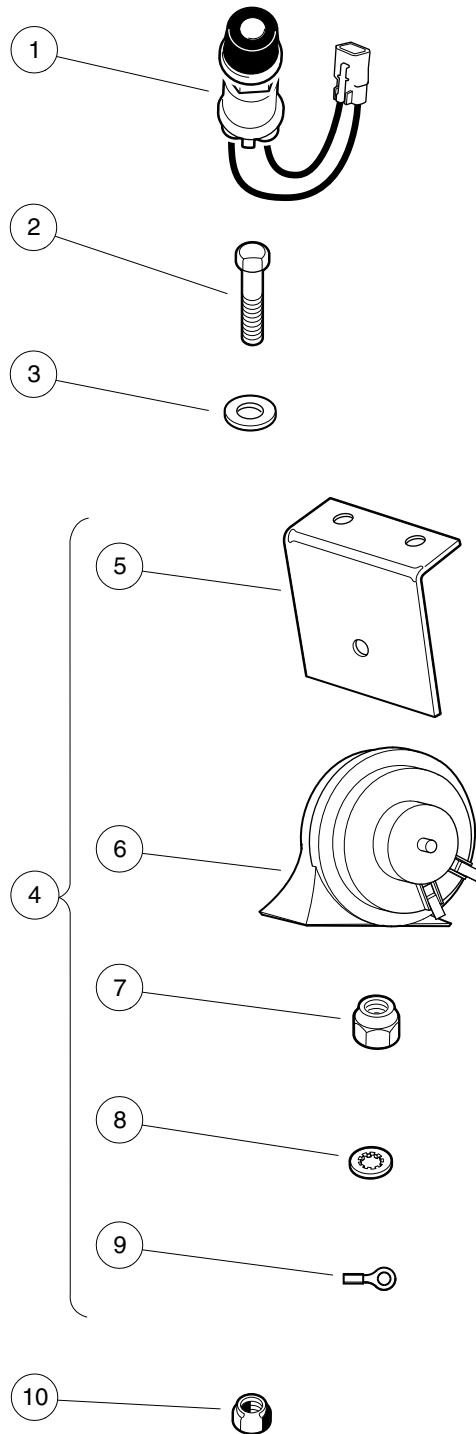

001095-001


HORN

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101969701</u>	Horn Button and Wire Assembly	1
2	<u>304</u>	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
3	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
4	<u>4029</u>	Horn (includes items 5 through 9)	1
5	<u>1011825</u>	Horn Bracket	1
6	<u>1014530</u>	Horn, 12-VDC	1
7	<u>101955101</u>	Nut, M6 Hex	1
8	<u>7820</u>	Washer, 5/16 Internal-Tooth	1
9	<u>8294</u>	5/16 Ring Term.	1
10	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2

4

G


E

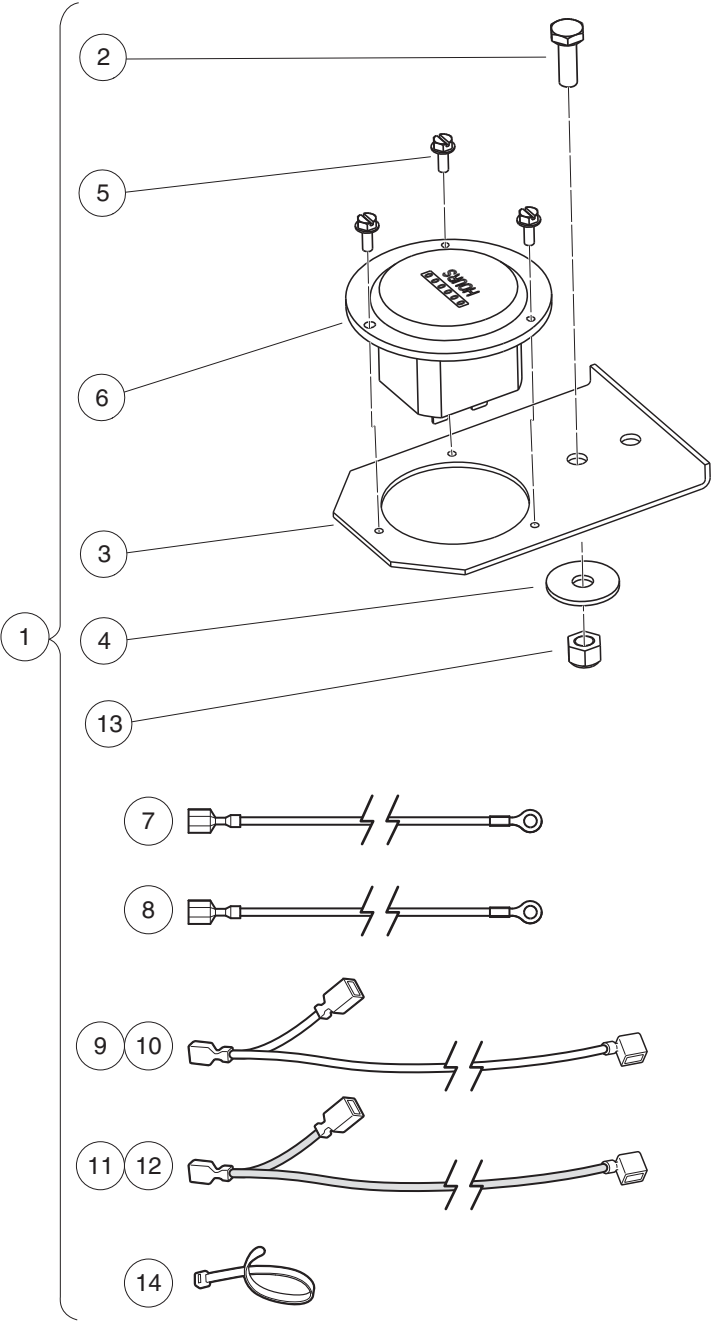

001096-001

HOUR METER – IQ SYSTEM AND IQ PLUS ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1013579</u>	Kit, Hour Meter (includes items 2 through 14)	1	
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	1	
3	<u>1013547</u>	Hour Meter Bracket	1	
4	<u>1014306</u>	Washer, 1/4" Type B Flat	1	
5	<u>1014540</u>	Screw, #6-32 X 3/8 Taptite	3	
6	N/A	Hour Meter	1	
7	101881501	Wire Assembly Black #18	1	
8	101881601	Wire Assembly Red #18	1	
9	<u>101997802</u>	Wire Assembly #18 Yellow	1	
10	<u>101997803</u>	Wire Asm #18 Yellow 31"	1	
11	<u>101997902</u>	Wire Assembly #18 Red	1	
12	<u>101997903</u>	Wire Asm # 18 Red 31"	1	
13	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	1	
14	<u>8990</u>	Tie Wrap, 8" Nylon	1	
Note: The kit includes components that apply to multiple vehicles. The installation instructions will specify which components are required for a specific model. After installation, discard components not used.				

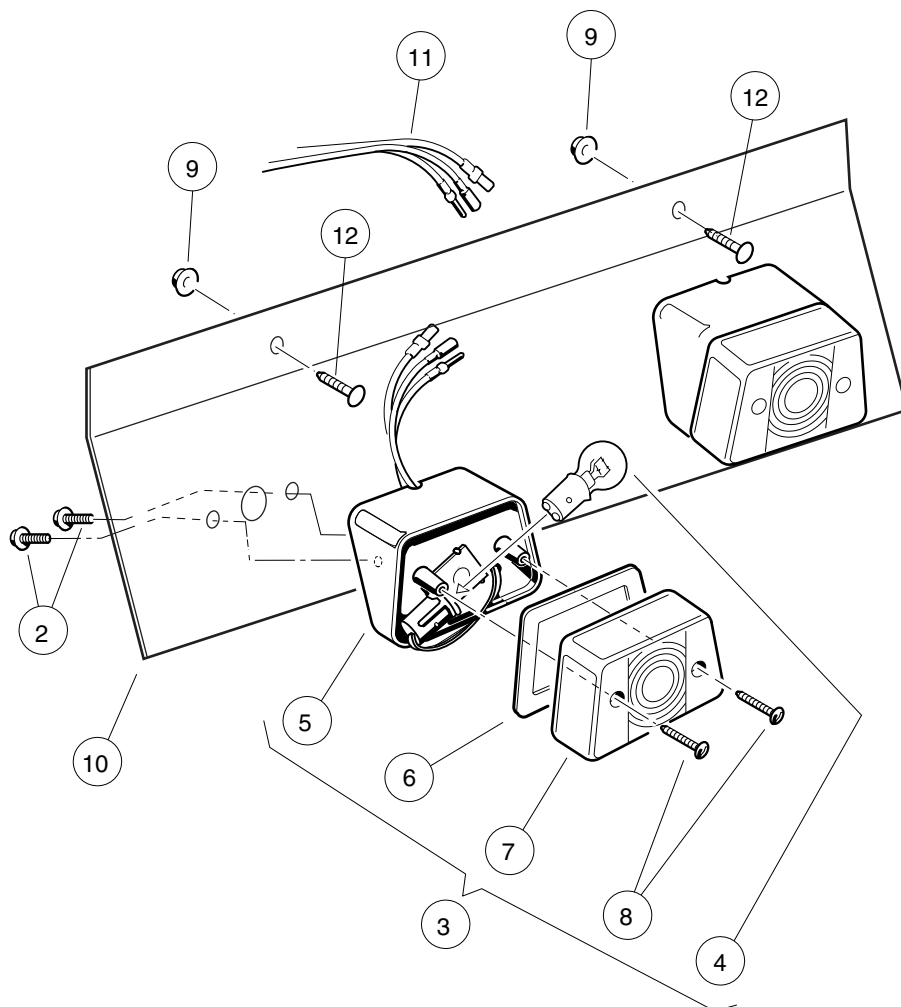

000348-009

TAILLIGHTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102852501</u>	Kit, Tail Lights (includes items 2 through 12)	1
2	<u>1015752</u>	Screw, #12-16 X 0.625, Hi-Lo	4
3	<u>1016717</u>	Light Assembly, Stop/Taillight (includes items 4 through 8)	2
4	<u>1011582</u>	Taillight Bulb	1
5	N/A	Housing, Taillight	1
6	N/A	Gasket, Taillight	1
7	N/A	Lens, Taillight	1
8	N/A	Screw, Taillight Lens	2
9	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	2
10	<u>102909901</u>	Support, Tail Light	1
11	<u>102911601</u>	Asm, Wire Harness	1
12	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2
Note: Taillights are optional for Carryall 242 and XRT 800 vehicles.			

4


G

E

4
G
E

BRAKE SYSTEM


5
G
E

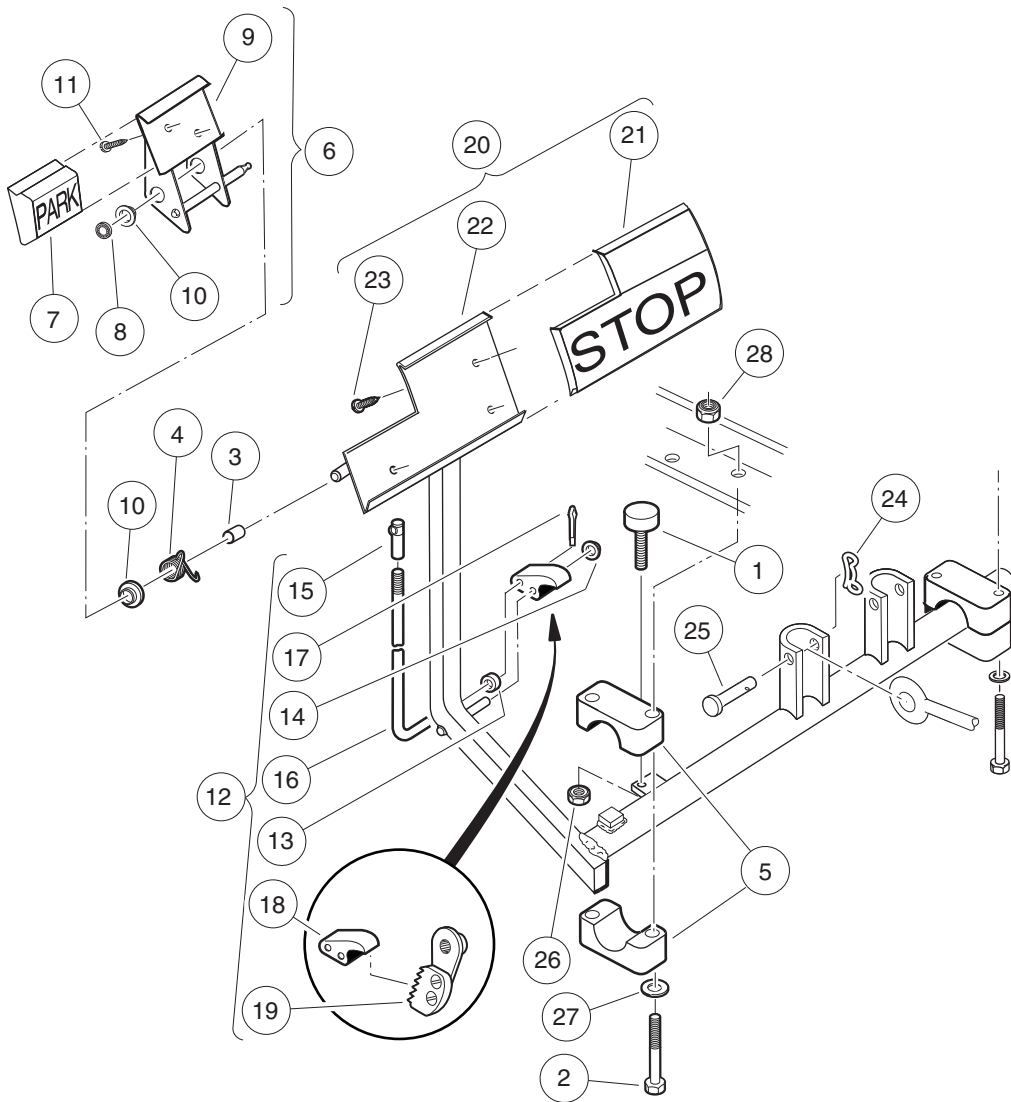

000187-001

BRAKE PEDAL ASSEMBLY


ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1010878</u>	Bumper, Rubber	1	
2	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	4	
3	<u>1010927</u>	Hill Brake Spacer	1	
4	<u>1010933</u>	Spring, Hill Brake Torsion	1	
5	<u>1011402</u>	Package, Brake Mounting Block	1	
6	<u>1011418</u>	Kit, Hill Brake Pedal (includes items 7 through 11)	1	
7	<u>1013870</u>	Pad, Hill Brake	1	
8	<u>1013876</u>	Pushnut, 3/8	1	
9	N/A	Hill Brake Weld Assembly	1	
10	<u>1032</u>	Bushing, Nylon	2	
11	7716	Screw, #10-16 Type AB, Sheet Metal	2	
12	<u>101187702</u>	Kit, Hill Brake Latch (includes items 13 through 19)	1	
13	<u>1010805</u>	Sleeve, Hill Brake Rod	1	
14	<u>1010877</u>	Pushnut, 3/8	1	
15	1010932	Ball Joint, 1/4-28	1	
16	N/A	Rod, Hill Brake	1	
17	<u>1017029</u>	Pin, Cotter, 7/64 x 1/2 Stainless-Steel	1	
18	N/A	Pawl, Hill Brake	1	
19	101918501	Ratchet Assembly	1	
20	<u>101878201</u>	Brake Pedal Kit (includes items 21 through 23)	1	
21	<u>1013869</u>	Pad, Brake Pedal	1	
22	N/A	Weldment, Brake Pedal, 2wr Std	1	
23	7716	Screw, #10-16 Type AB, Sheet Metal	3	
24	<u>102323101</u>	Pin, Bow Tie Locking	1	
25	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1	
26	<u>1028</u>	Nut, 1/4-20 Hex	1	
27	<u>1241</u>	Washer, 5/16 Type A Flat	4	
28	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4	

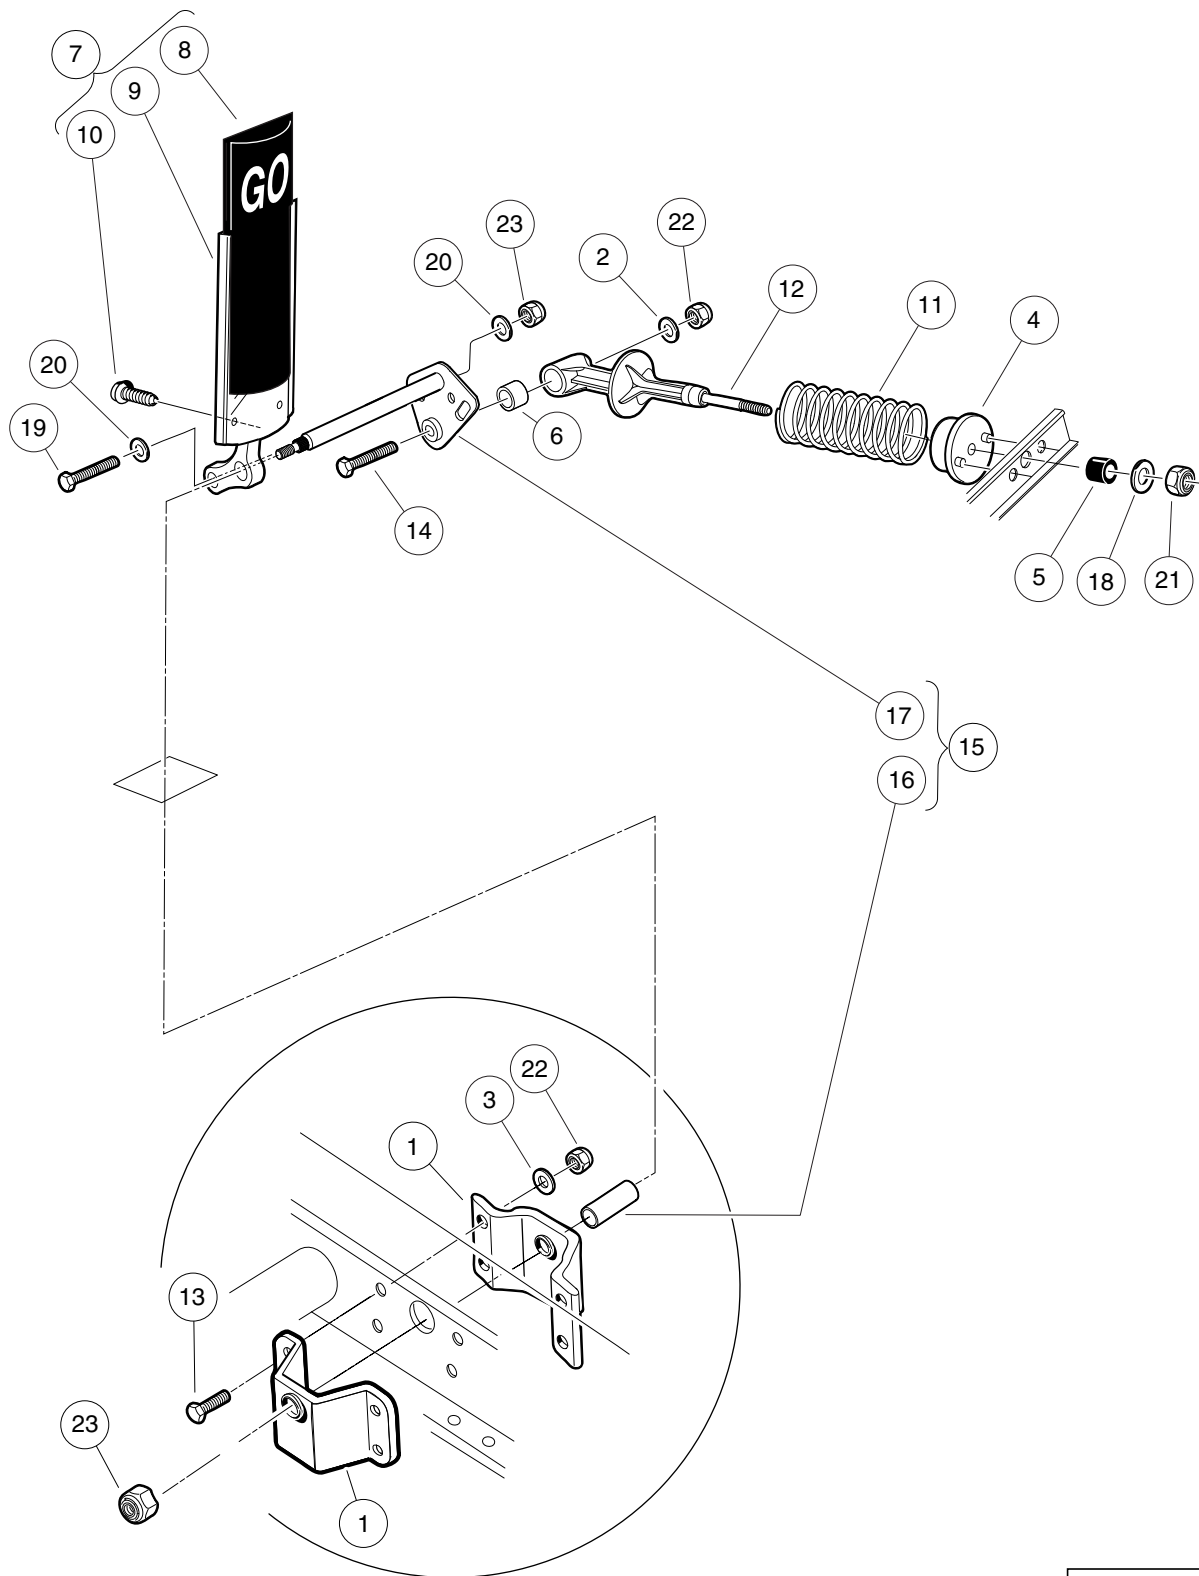

000188-007

ACCELERATOR PEDAL ASSEMBLY – ELECTRIC VEHICLES WITH MCOR


ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2	
2	<u>1011931</u>	Washer, 1/4 Flat	1	
3	<u>1014007</u>	Washer, 1/4, Flat	4	
4	<u>1017378</u>	Cup, Spring	1	
5	<u>1017380</u>	Bumper, Spring Return	1	
6	<u>1017424</u>	Bearing, Pivot Support	1	
7	<u>1017696</u>	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1	
8	1013871	Pad, Accelerator Pedal	1	
9	N/A	Accelerator Pedal Weldment	1	
10	7716	Screw, #10-16 Type AB, Sheet Metal	4	
11	101796201	Spring, Accelerator Return	1	
12	<u>101817401</u>	Retainer, Spring	1	
13	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4	
14	<u>101862001</u>	Screw, 1/4-20 X 1.500 Flange	1	
15	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 16 and 17)	1	
16	101919801	Spacer, Accelerator	1	
17	<u>102158901</u>	Pivot Rod Weldment	1	
18	<u>1241</u>	Washer, 5/16 Type A Flat	1	
19	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	1	
20	<u>334</u>	Washer, 3/8, Type A, Flat	2	
21	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	
22	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	5	
23	<u>8754</u>	Locknut, 3/8-16 Hex	2	

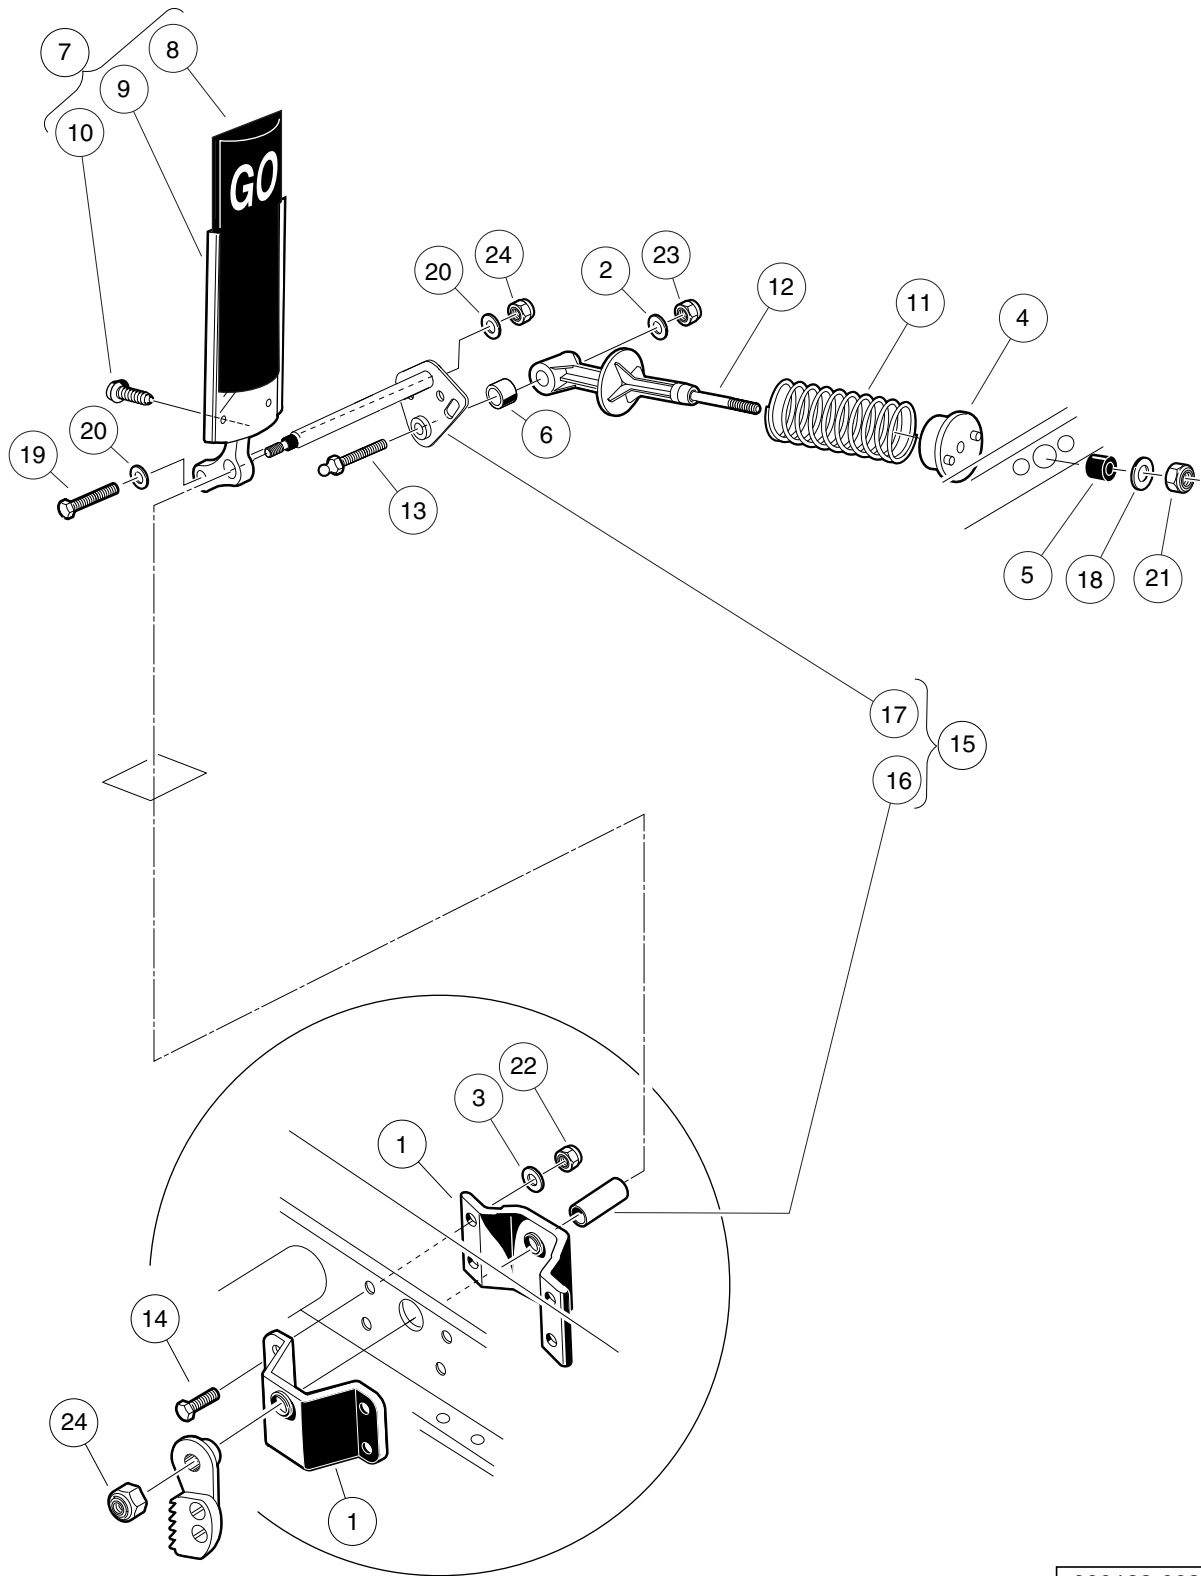

000188-008

ACCELERATOR PEDAL ASSEMBLY – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2	
2	<u>1011931</u>	Washer, 1/4 Flat	1	
3	<u>1014007</u>	Washer, 1/4, Flat	4	
4	<u>1017378</u>	Cup, Spring	1	
5	<u>1017380</u>	Bumper, Spring Return	1	
6	<u>1017424</u>	Bearing, Pivot Support	1	
7	<u>1017696</u>	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1	
8	1013871	Pad, Accelerator Pedal	1	
9	N/A	Accelerator Pedal Weldment	1	
10	7716	Screw, #10-16 Type AB, Sheet Metal	4	
11	101796201	Spring, Accelerator Return	1	
12	<u>101817401</u>	Retainer, Spring	1	
13	101818801	Stud, 1/4-28 X 1.35 Ball	1	
14	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4	
15	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 16 and 17)	1	
16	101919801	Spacer, Accelerator	1	
17	<u>102158901</u>	Pivot Rod Weldment	1	
18	<u>1241</u>	Washer, 5/16 Type A Flat	1	
19	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	1	
20	<u>334</u>	Washer, 3/8, Type A, Flat	2	
21	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	
22	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4	
23	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1	
24	<u>8754</u>	Locknut, 3/8-16 Hex	2	

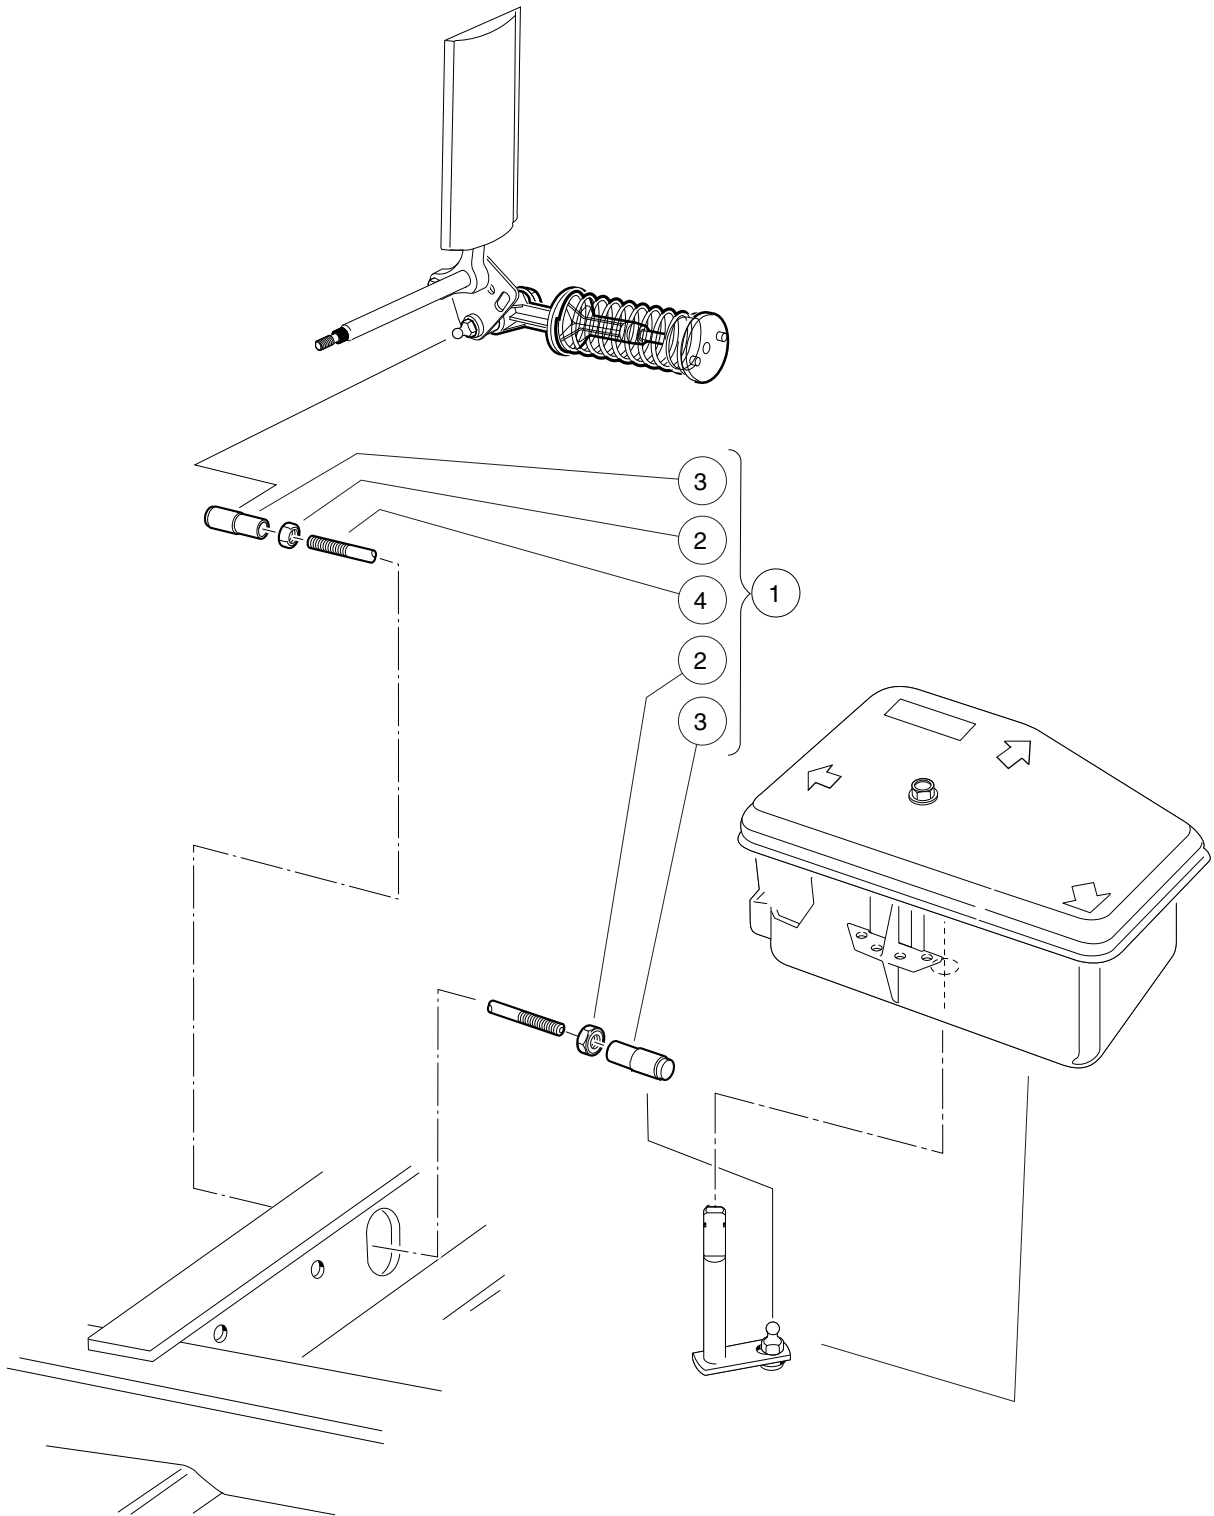

000362-001


ACCELERATOR ROD – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101912401	Rod, Accelerator (includes items 2 through 4)	1
2	<u>1011084</u>	Nut, 1/4-28 Hex Jam	2
3	<u>1011734</u>	Joint, Ball	2
4	N/A	Accelerator Rod	1

5

G


E

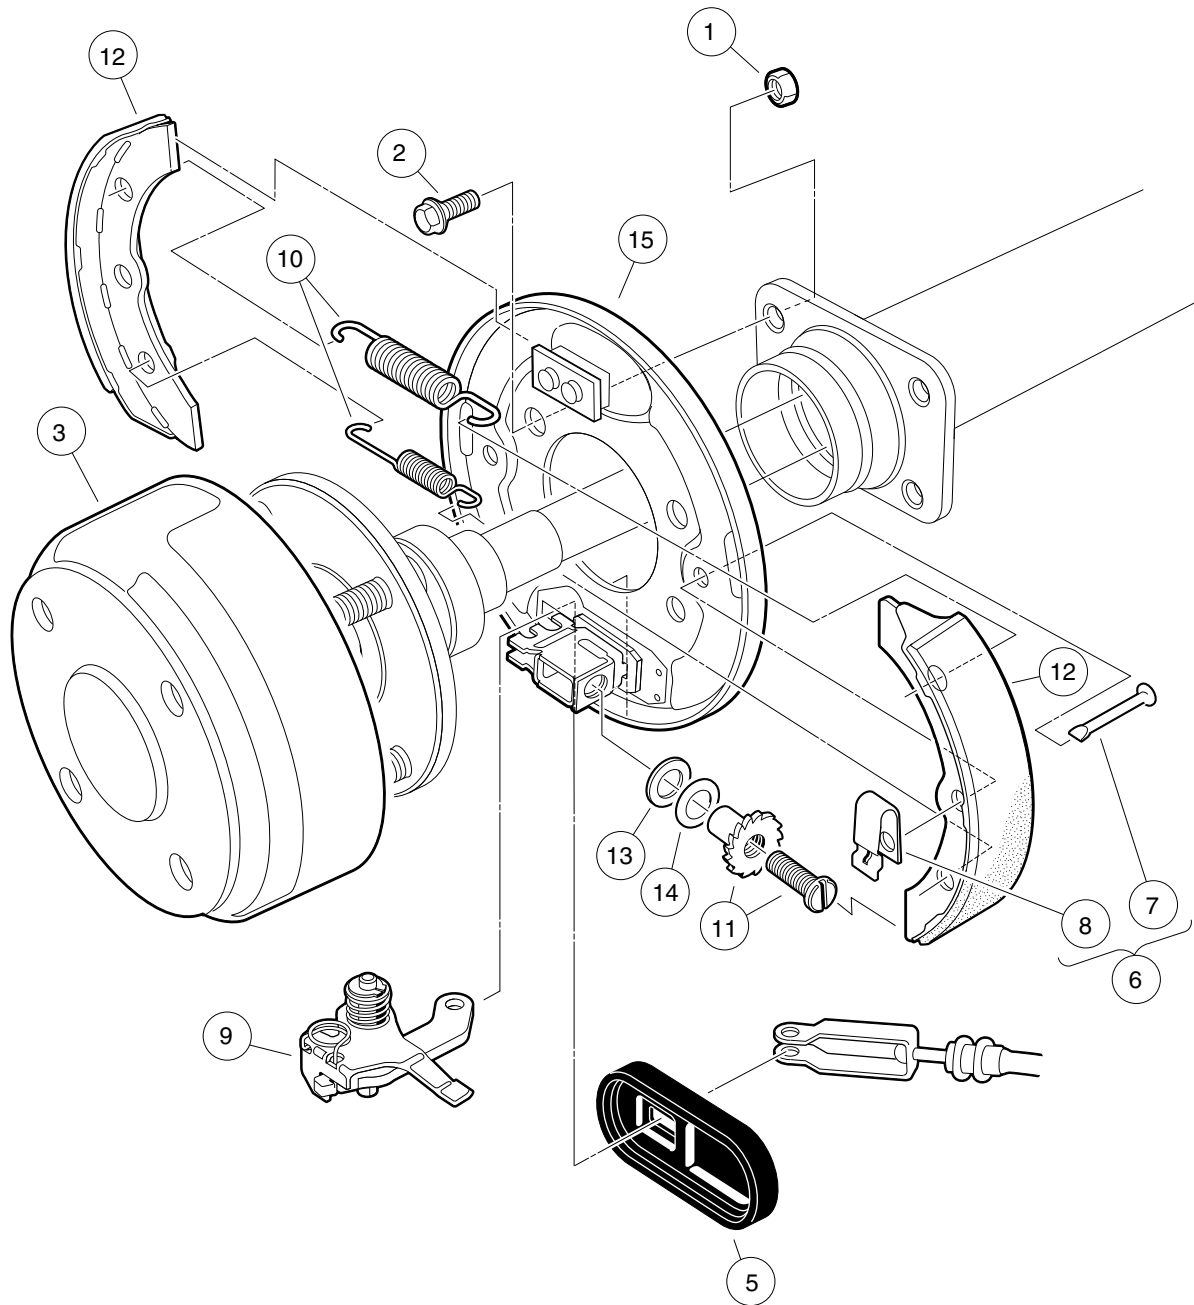5**G****E**

000186-002

REAR BRAKE ASSEMBLY, SELF-ADJUSTING – VEHICLE WITH 2-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1013924</u>	Nut, 5/16-24, Hex Head Cone	8	
2	<u>1014153</u>	Bolt, Brake Cluster Mounting	8	
3	<u>101791101</u>	Drum without Center Hole, Brake	2	
4	<u>101823301</u>	Cluster Assembly, Right (Passenger) Brake (includes items 5 through 15)	1	
5	<u>1010850</u>	Dust Cover	1	
6	<u>1011466</u>	Kit, Shoe Retainer (includes items 7 and 8)	1	
7	N/A	Pin	2	
8	N/A	Shoe Clamp Spring	2	
9	<u>101815501</u>	Lever Assembly, Self-Adjusting Brake, Right (Passenger)	1	
10	<u>101816301</u>	Package, Brake Spring, Self-Adjusting	1	
11	<u>101816501</u>	Adj Mechanism, S.A. Brakes, Right (Passenger)	1	
12	<u>101823201</u>	Package, Brake Shoe, Self-Adjusting	1	
13	<u>101823801</u>	Plate, Washer, Brake, Self-Adjusting	1	
14	<u>101823901</u>	Washer, Brake, Self-Adjusting	1	
15	<u>101824001</u>	Plate Assembly, Right Brake Backing	1	
16	<u>101823302</u>	Cluster Assembly, Left Brake (includes items 17 through 27)	1	
17	<u>1010850</u>	Dust Cover	1	
18	<u>1011466</u>	Kit, Shoe Retainer (includes items 19 and 20)	1	
19	N/A	Pin	2	
20	N/A	Shoe Clamp Spring	2	
21	<u>101815502</u>	Lever Assembly, Self-Adjusting Brake, Left	1	
22	<u>101816301</u>	Package, Brake Spring, Self-Adjusting	1	
23	<u>101816502</u>	Adjusting Mechanism, Self-Adjusting Brake, Left	1	
24	<u>101823201</u>	Package, Brake Shoe, Self-Adjusting	1	
25	<u>101823801</u>	Plate, Washer, Brake, Self-Adjusting	1	
26	<u>101823901</u>	Washer, Brake, Self-Adjusting	1	
27	<u>101824002</u>	Plate Assembly, Left Brake Backing	1	
Note: Driver-side brake cluster not shown. Components have a similar appearance to passenger-side brake cluster components.				

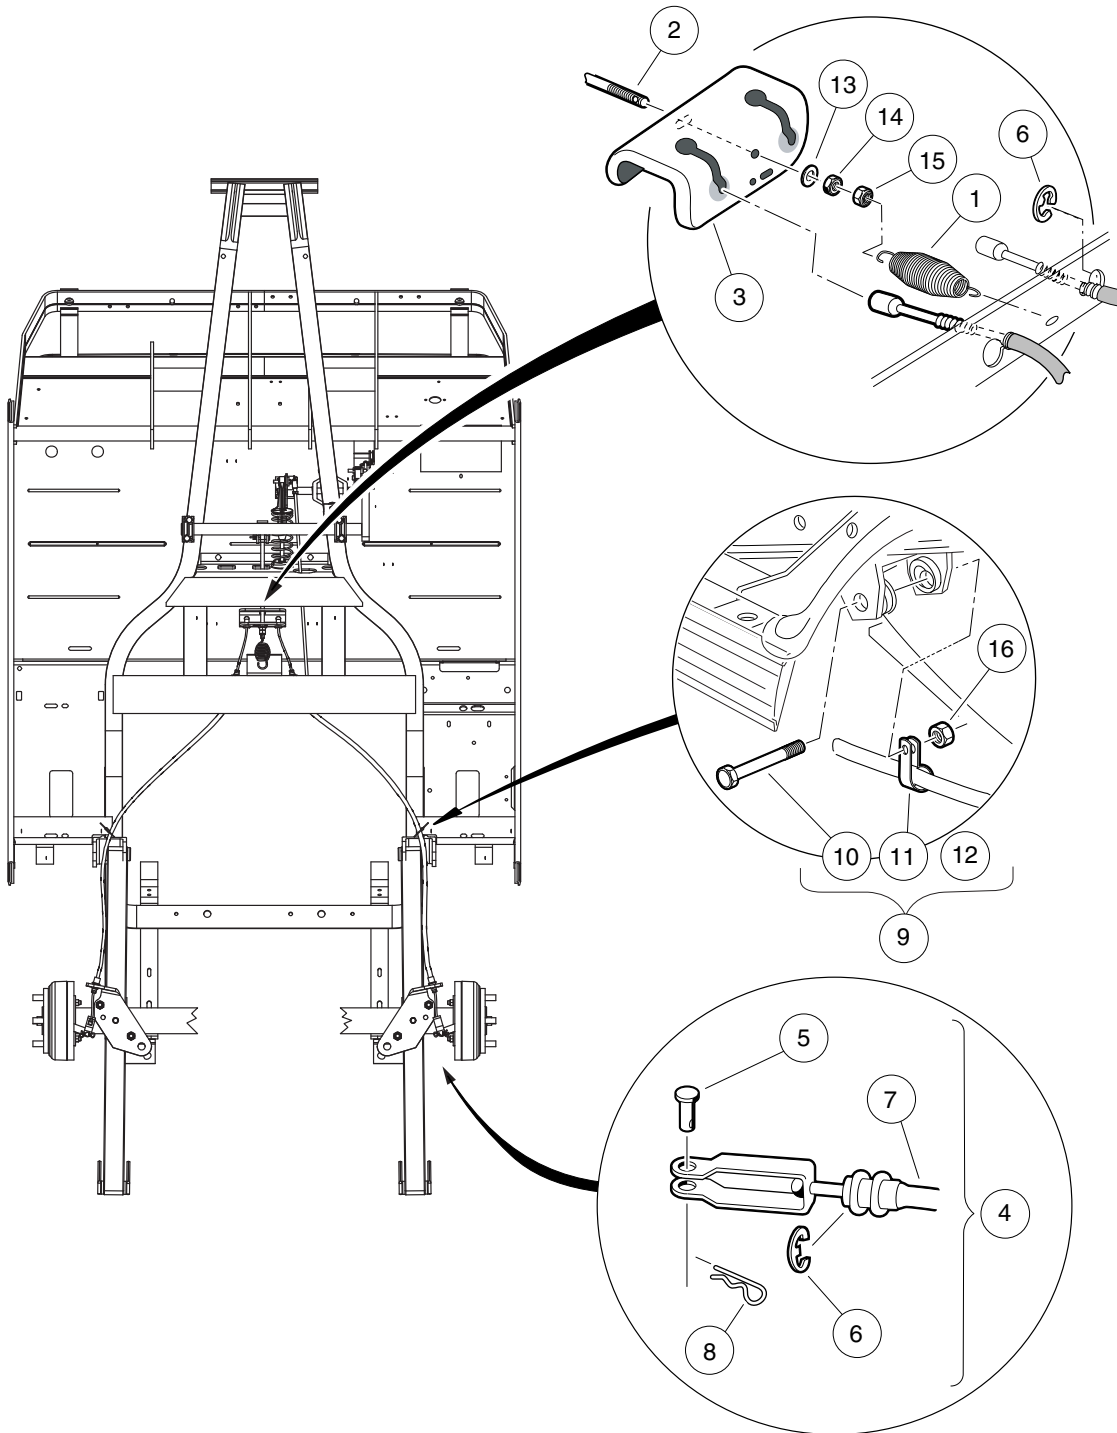

000245-002

BRAKE CABLES AND EQUALIZER

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1013531</u>	Spring, Brake Return	1	
2	<u>101953101</u>	Rod, Equalizer, 8.91"	1	
3	<u>101990801</u>	Equalizer Bracket	1	
4	<u>102022101</u>	Brake Cable Kit (includes items 5 through 8)	2	
5	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	1	
6	<u>1011779</u>	E-Clip, 1/2	2	
7	N/A	Cable, Brake, 41"	1	
8	<u>102292801</u>	Pin, Bow Tie Locking - .072	1	
9	<u>103377301</u>	Kit, Field P-clamp, Brake Line (includes items 10 through 12)	1	
10	<u>102066201</u>	Screw, 3/8-16 X 3.50 Hex Cap	2	
11	<u>103377201</u>	P-clamp, Brake Line	2	
12	N/A	Instr Fd. P-clamp, Brake Line	1	
13	<u>1241</u>	Washer, 5/16 Type A Flat	5	
14	<u>1242</u>	Nut, 5/16-18 Hex	1	
15	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	5	
16	<u>8754</u>	Locknut, 3/8-16 Hex	2	

5

G

E

STEERING AND SUSPENSIONS

6


G

E

6

G

E

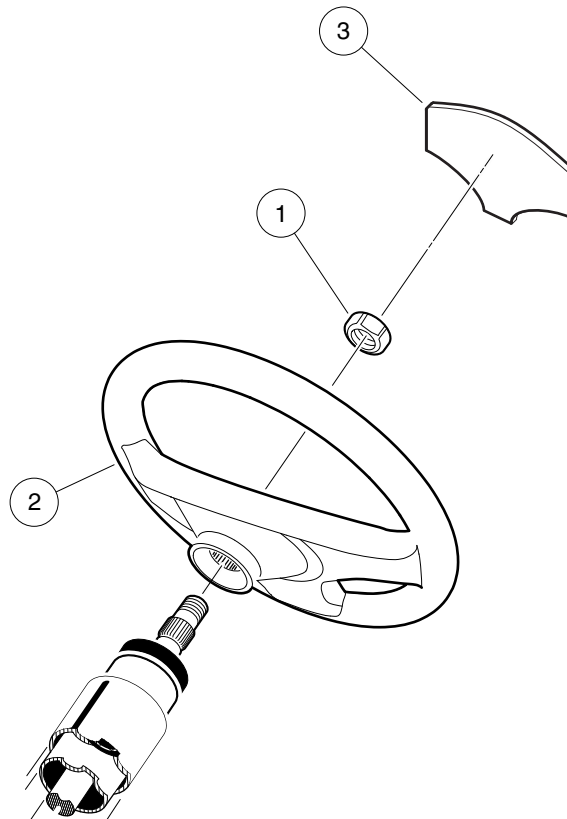

000246-001

STEERING WHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1017273</u>	Nut, 5/8-18 Nylon Insert Jam	1
2	<u>102796201</u>	Steering Wheel, Spline	1
3	<u>102822401</u>	Wheel Center	1

6

G

E


STEERING COLUMN

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011578</u>	Washer, 5/16 Type B Flat	1
2	<u>1011697</u>	Washer, 5/16 Flat	1
3	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	1
4	<u>1016183</u>	Screw, 3/8-16 X 7.00 Hex Cap	2
5	<u>1016269</u>	Screw, 5/16-18 Thrd Forming	2
6	<u>1017313</u>	Steering Shaft Assembly (includes items 7 through 15)	1
7	<u>1012604</u>	Washer, 0.675 ID X 1.19 OD	1
8	<u>1012605</u>	Ring, 0.579 Internal Retaining	1
9	<u>1014125</u>	Wedge, Molded	2
10	<u>1014126</u>	Seat, Plastic Bearing	2
11	<u>1014213</u>	Bearing, Ball	2
12	<u>1014214</u>	Ring, Retaining	1
13	<u>1014217</u>	Spring, Steering Shaft	1
14	<u>1017314</u>	Column, Aluminum Steering	1
15	<u>1017315</u>	Shaft Steering Column	1
16	<u>1017317</u>	Tube Cover, Steering Column	1
17	101984801	Kit, Steering Column Mounting Bracket (includes items 18 and 19)	1
18	N/A	Bracket, RH Steering Column Mount	1
19	N/A	Bracket, LH Steering column mount	1
20	<u>102278001</u>	Boot, Steering Column Round	1
21	<u>103601601</u>	Shaft, Intermediate Steering (includes items 22 and 23)	1
22	<u>1017226</u>	Bolt, Hex-Head, 8mm X 1.25 - 30	3
23	<u>7174</u>	Lockwasher, 5/16 Split	3
24	<u>334</u>	Washer, 3/8, Type A, Flat	4
25	<u>8754</u>	Locknut, 3/8-16 Hex	2

6

G


E

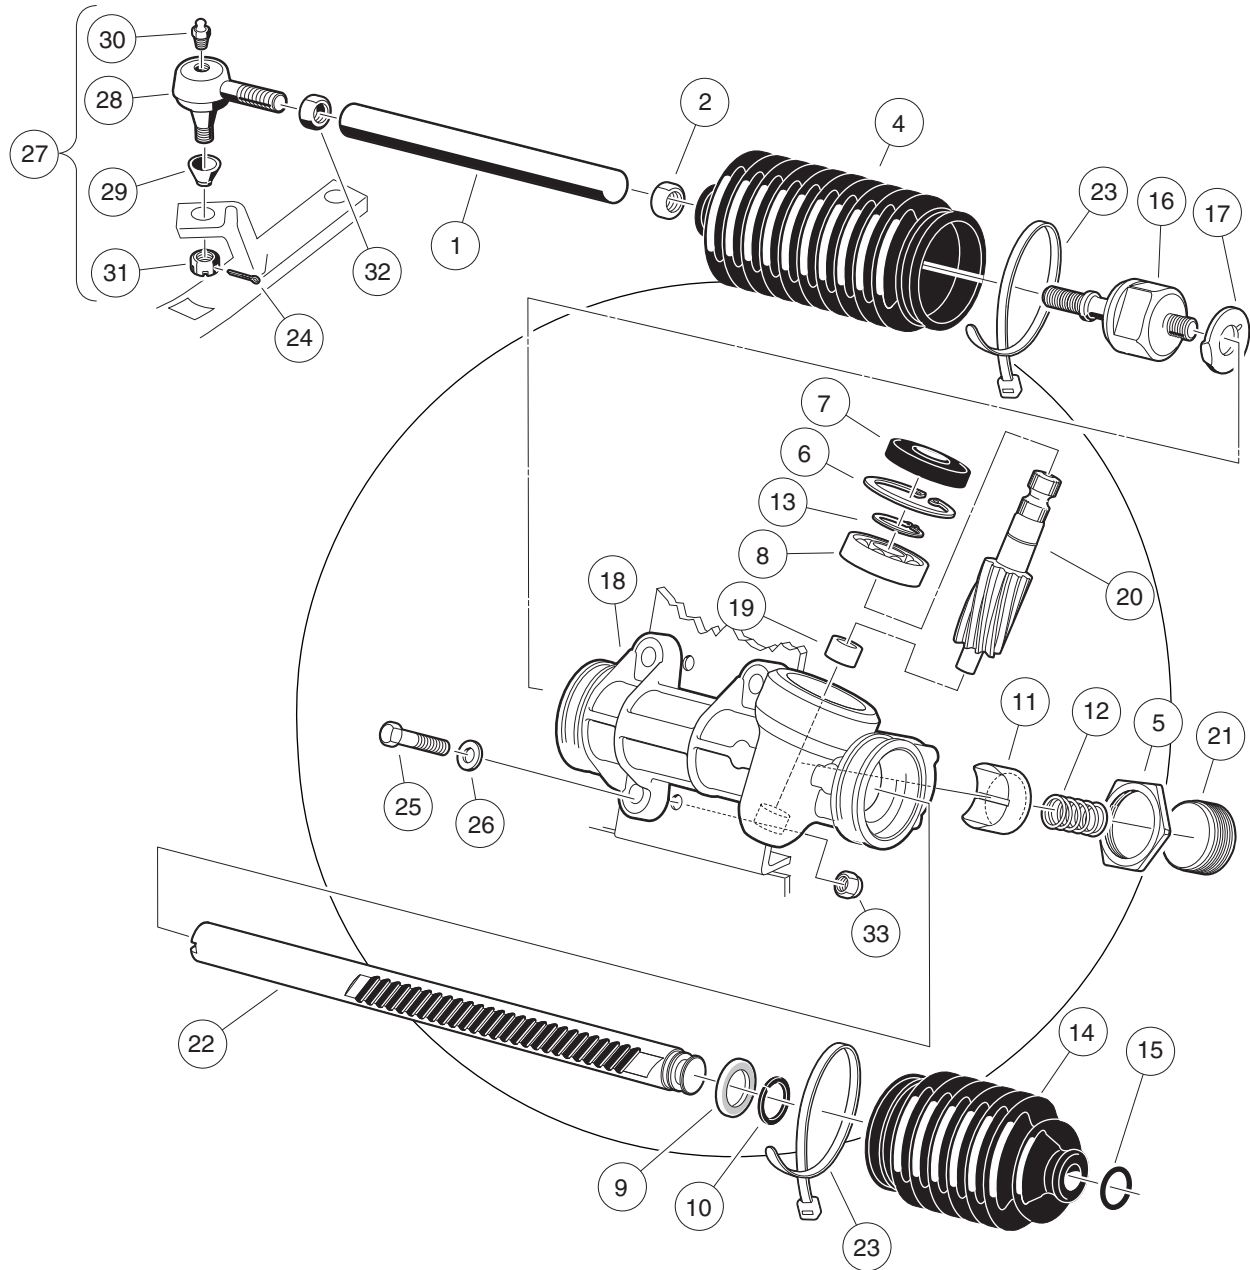6**G****E**

000189-003

STEERING GEAR ASSEMBLY


ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	<u>1012467</u>	Link, Rack and Pinion Drag	1	
2	<u>1013042</u>	Nut, 12mm Hex	1	
3	<u>101878302</u>	Steering Gear Assembly (without yoke) (includes items 4 through 23)	1	
4	<u>1013035</u>	Bellows, Long	1	
5	<u>1013044</u>	Rack Screw Locknut	1	
6	N/A	Snap Ring	1	
7	<u>1013052</u>	Seal, Steering Pinion Dust	1	
8	<u>101879401</u>	Bearing, Ball	1	
9	<u>101879501</u>	Stop Washer	1	
10	<u>101879601</u>	Stop Ring, C-Type	1	
11	<u>101879701</u>	Support Yoke	1	
12	<u>101879801</u>	Rack Guide Pressure Spring	1	
13	<u>101879901</u>	Ring, Stop, C-Type	1	
14	<u>101880001</u>	Bellows, Short	1	
15	<u>101880101</u>	Dust Seal Retaining Ring	1	
16	<u>101880201</u>	Inner Ball Joint Asm	1	
17	<u>101880301</u>	Washer, Tab	1	
18	N/A	Box, Steering Gear	1	
19	N/A	Bearing, Lower Pinion	1	
20	N/A	Pinion, Steering	1	
21	N/A	Screw, Rack Guide	1	
22	N/A	Rack, Steering	1	
23	<u>8990</u>	Tie Wrap, 8" Nylon	2	
24	<u>1035</u>	Cotter Pin, 3/32 x 1	1	
25	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	3	
26	<u>334</u>	Washer, 3/8, Type A, Flat	3	
27	<u>7540</u>	Ball Joint, Left (includes items 28 through 31)	1	
28	<u>1011895</u>	Socket, LH Vertical	1	
29	<u>1011930</u>	Seal, Vertical Socket Dust	1	
30	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
31	<u>7602</u>	Nut, 3/8-24 UNF Hex	1	
32	<u>7555</u>	Nut, 1/2-20 Hex, Left-Hand Thread	1	
33	<u>8754</u>	Locknut, 3/8-16 Hex	3	

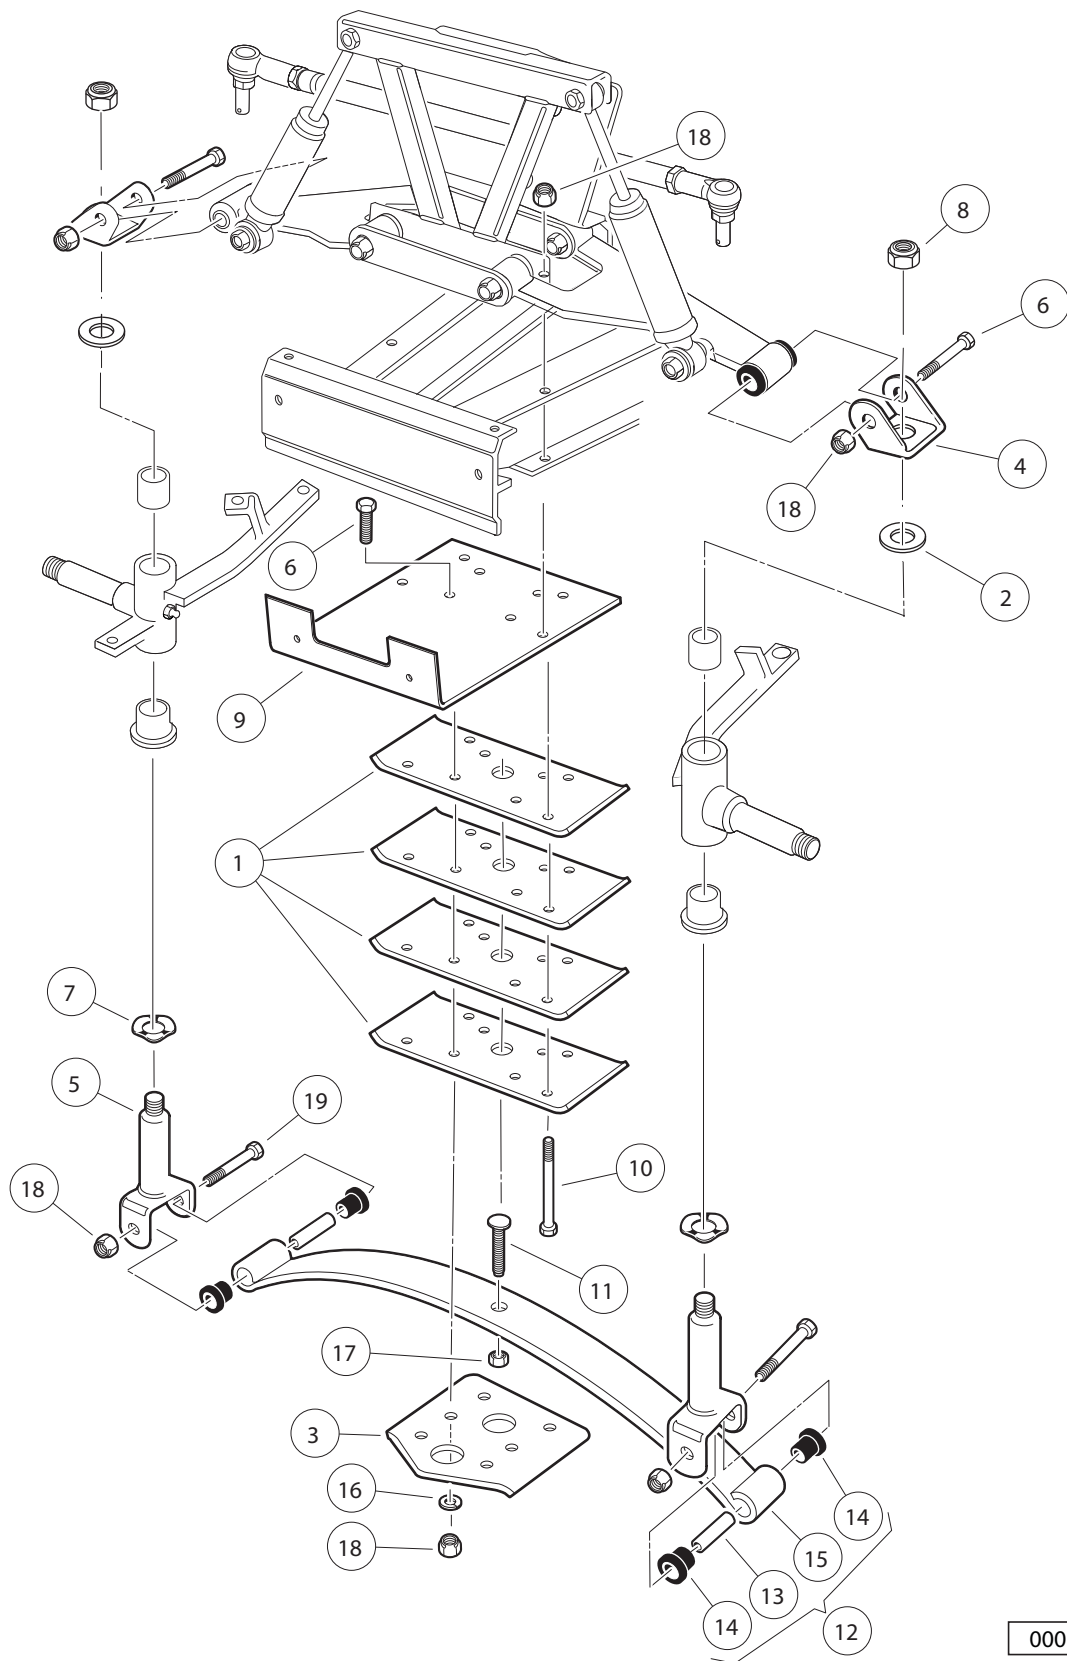

000191-005

FRONT SUSPENSION, LOWER – VEHICLES WITH TWO-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	<u>1010124</u>	Plate, Spring Mount	4	
2	<u>1010150</u>	Bearing, Thrust	2	
3	<u>1014276</u>	Plate, Front Spring Retainer	1	
4	<u>1016384</u>	Clevis, Delta Upper	2	
5	<u>1016386</u>	King Pin Assembly	2	
6	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	6	
7	<u>1016389</u>	Washer, 1.125 Od Wave	2	
8	<u>101903101</u>	Locknut, 1/2-20 Nylon Insert	2	
9	<u>102830401</u>	Support, Brush Guard	1	
10	<u>102913601</u>	Screw, 3/8-16 X 5.50 Hx Hd Cap	4	
11	<u>103507001</u>	Eccentric Bolt Common	1	
12	<u>103628701</u>	Spring Asm, Front, 1 Leaf (includes items 13 through 15)	1	
13	<u>1012303</u>	Bushing, Steel	2	
14	<u>101558302</u>	Bushing, Urethane, Soft	4	
15	<u>103502601</u>	Spring, Front, 1 Leaf	1	
16	<u>357</u>	Lockwasher, 3/8 Split	4	
17	<u>706</u>	Nut, Hex 3/8-16	1	
18	<u>8754</u>	Locknut, 3/8-16 Hex	8	
19	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2	

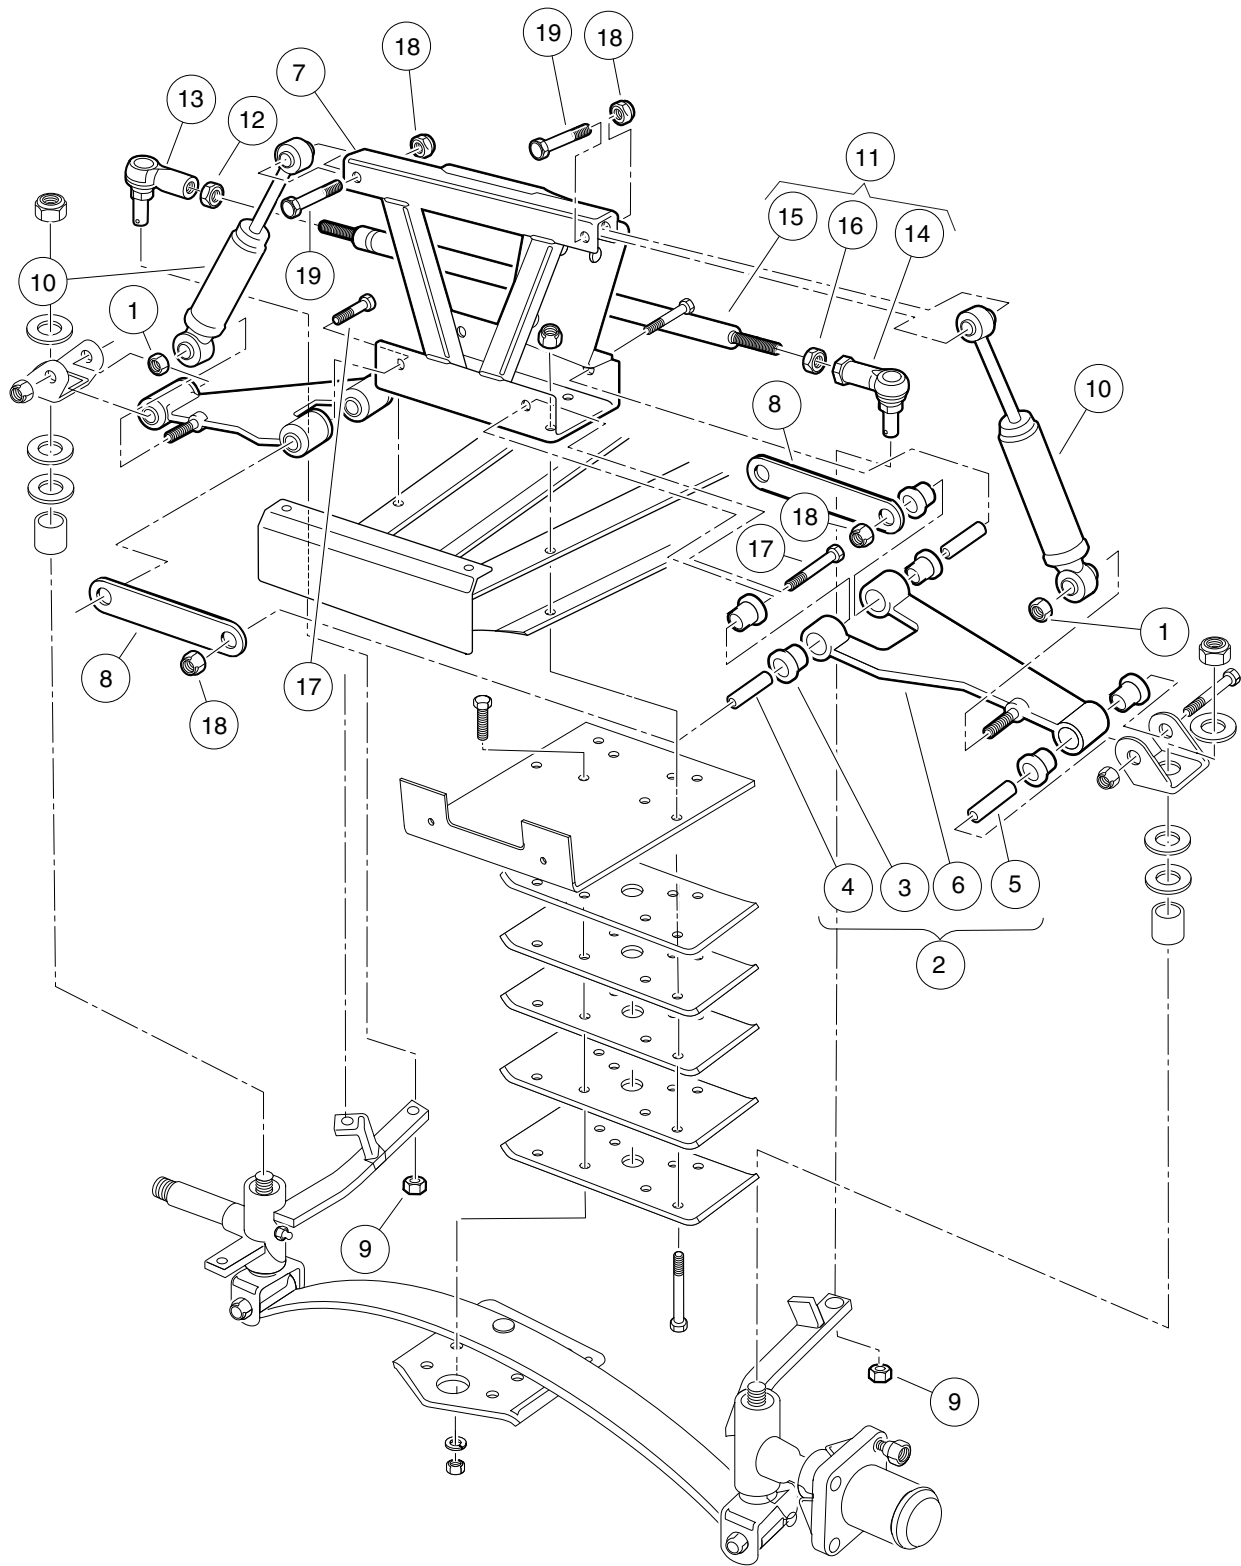

000190-002

FRONT SUSPENSION, UPPER


ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2	E
2	<u>1016353</u>	Sub-Assembly, Delta A-Plate (includes items 3 through 6)	2	
3	<u>1016346</u>	Bushing, Urethane	6	
4	<u>1016349</u>	Sleeve, Delta Inner	2	
5	<u>1016350</u>	Sleeve, Delta Outer	1	
6	<u>1016351</u>	Delta A-Plate	1	
7	<u>1016385</u>	Delta Shock and Gear Support Assembly	1	
8	<u>1017266</u>	A-Plate Strap	2	
9	<u>102289201</u>	Nut - Hex Locking, M12 X 1.25	3	
10	<u>103351001</u>	Shock Absorber, Front, Common	2	
11	<u>103653601</u>	Asm, Tie Rod (includes items 12 through 16)	1	
12	<u>1013042</u>	Nut, 12mm Hex	1	
13	<u>102022601</u>	End, Tie Rod M12 X 1.25 Rh	1	
14	<u>102022602</u>	End, Tie Rod, M12 X 1.25, Lh	1	
15	<u>103354701</u>	Rod, Tie, Male Thd	1	
16	<u>103653501</u>	Nut, Jam, M12-1.25, Lh	1	
17	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4	
18	<u>8754</u>	Locknut, 3/8-16 Hex	13	
19	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	2	

6


G

E


DRIVER SIDE

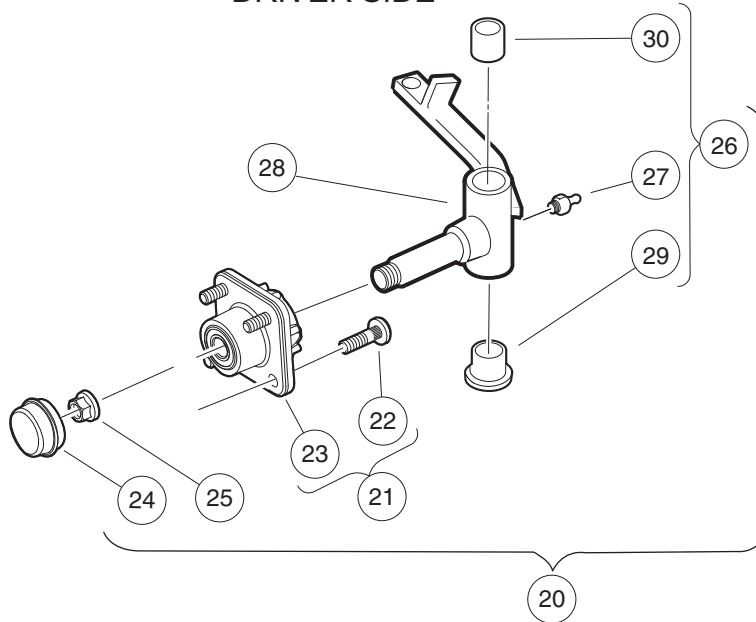

PASSENGER SIDE

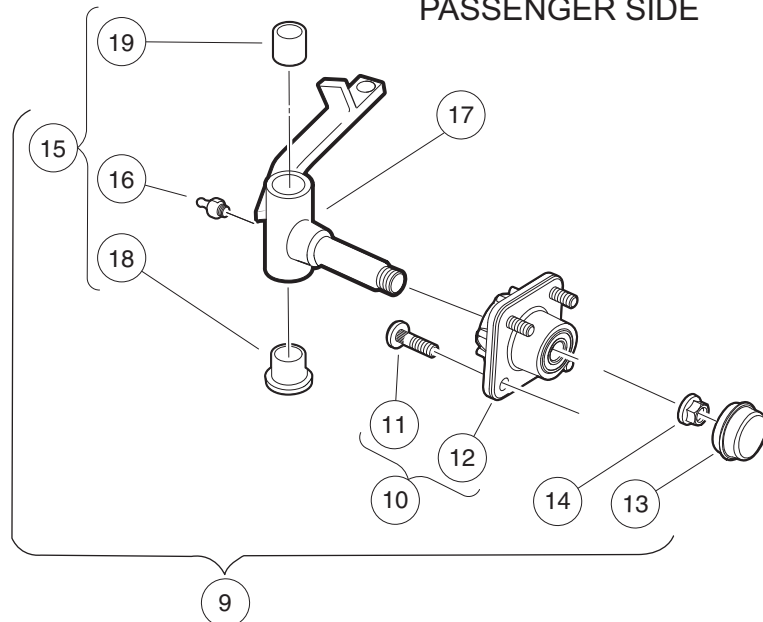



REPLACEMENT HUB FOR DRIVER OR PASSENGER SIDE

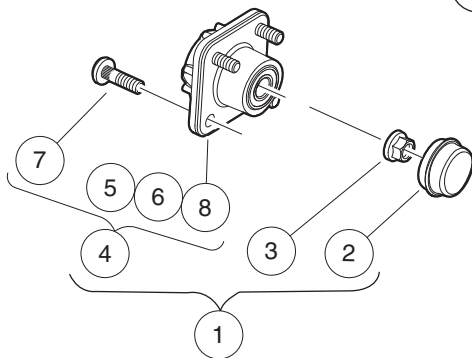

000301-008

FRONT SPINDLES AND HUBS

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	<u>102357701</u>	Replacement Kit, Front Hub (includes items 2 through 4)	1	E
2	<u>102353201</u>	Cap, Front Hub	1	
3	<u>102353301</u>	Hex Nut, Locking Flange, M14x2	1	
4	N/A	Asm, Front Hub, Bb, Long Stud (includes items 5 through 8)	1	
5	N/A	Bearing, Ball, 6204	2	
6	N/A	Spacer, Bearing, Front Hub, Pm	1	
7	<u>103477901</u>	Lug Stud, 1/2-20 Unf, 4037	4	
8	N/A	Front Hub, Ball Brg, Long Stud	1	
9	N/A	Asm, Hub And Spindle, Left-Hand Ext (includes items 10 through 15)	1	
10	N/A	Front Hub Assembly, Ball Bearing (includes items 11 and 12)	1	
11	<u>102353401</u>	Lug Stud, 1/2-20 UNF, 4037 Stl	4	
12	N/A	Hub, Front	1	
13	<u>102353201</u>	Cap, Front Hub	1	
14	<u>102353301</u>	Hex Nut, Locking Flange, M14x2	1	
15	<u>102354204</u>	Asm, Spindle, LH, Ext (includes items 16 through 19)	1	
16	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
17	N/A	Subasm, Spindle, LH, Ext	1	
18	<u>7048</u>	Bushing, Flanged Bronze	1	
19	<u>8067</u>	Bushing, Bronze Spindle	1	
20	N/A	Asm, Hub And Spindle, Right-Hand Ext (includes items 21 through 26)	1	
21	N/A	Front Hub Assembly, Ball Bearing (includes items 22 and 23)	1	
22	<u>102353401</u>	Lug Stud, 1/2-20 UNF, 4037 Stl	4	
23	N/A	Hub, Front	1	
24	<u>102353201</u>	Cap, Front Hub	1	
25	<u>102353301</u>	Hex Nut, Locking Flange, M14x2	1	
26	<u>102354104</u>	Asm, Spindle, RH, Ext (includes items 27 through 30)	1	
27	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
28	N/A	Subasm, Spindle, RH, Ext	1	
29	<u>7048</u>	Bushing, Flanged Bronze	1	
30	<u>8067</u>	Bushing, Bronze Spindle	1	

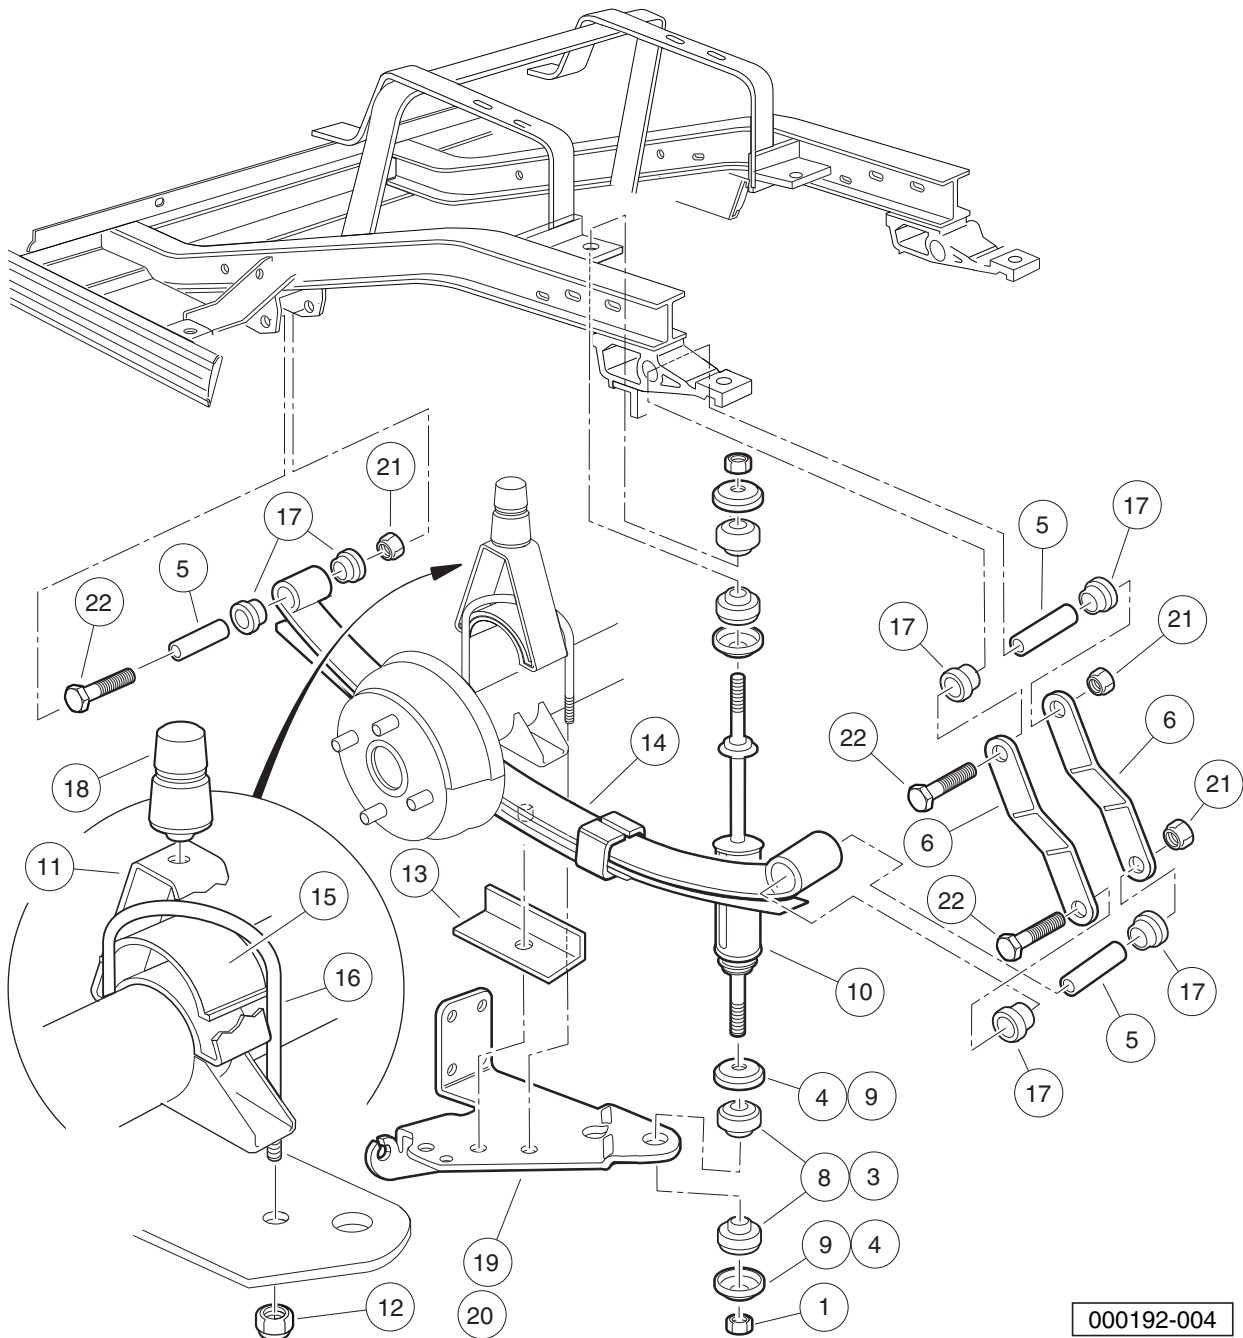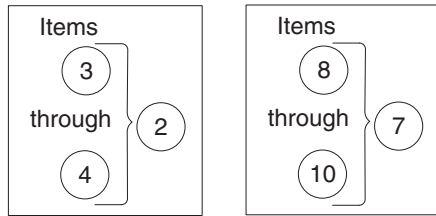6**G****E**

000192-004

REAR SUSPENSION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010145</u>	Nut, 3/8-24 Hex	4
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4
3	N/A	Cushion, Shock Absorber	2
4	N/A	Retainer, Shock Absorber Cushion	2
5	<u>1012303</u>	Bushing, Steel	6
6	<u>1012304</u>	Shackle, Rear Spring	4
7	<u>1013164</u>	Shock Absorber Kit (includes items 8 through 10)	1
8	N/A	Cushion, Shock Absorber	8
9	N/A	Retainer, Shock Absorber Cushion	8
10	<u>102588501</u>	Shock Absorber, Rear	2
11	<u>101454902</u>	Bumper Mount, Angled	2
12	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4
13	<u>1014573</u>	Spring Retainer	2
14	<u>1014675</u>	Rear Leaf Spring	2
15	<u>1014901</u>	Spacer, Overload Bumper	2
16	<u>1014902</u>	U-Bolt	2
17	<u>1015583</u>	Bushing, Urethane	12
18	<u>1017235</u>	Bumper, Jounce	2
19	<u>101926501</u>	Bracket, Left-Hand	1
20	<u>101929401</u>	Bracket, Right	1
21	<u>8754</u>	Locknut, 3/8-16 Hex	6
22	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	6

6

G

E

6

G


E

ELECTRICAL SYSTEM – GASOLINE VEHICLES

7

G

7
G

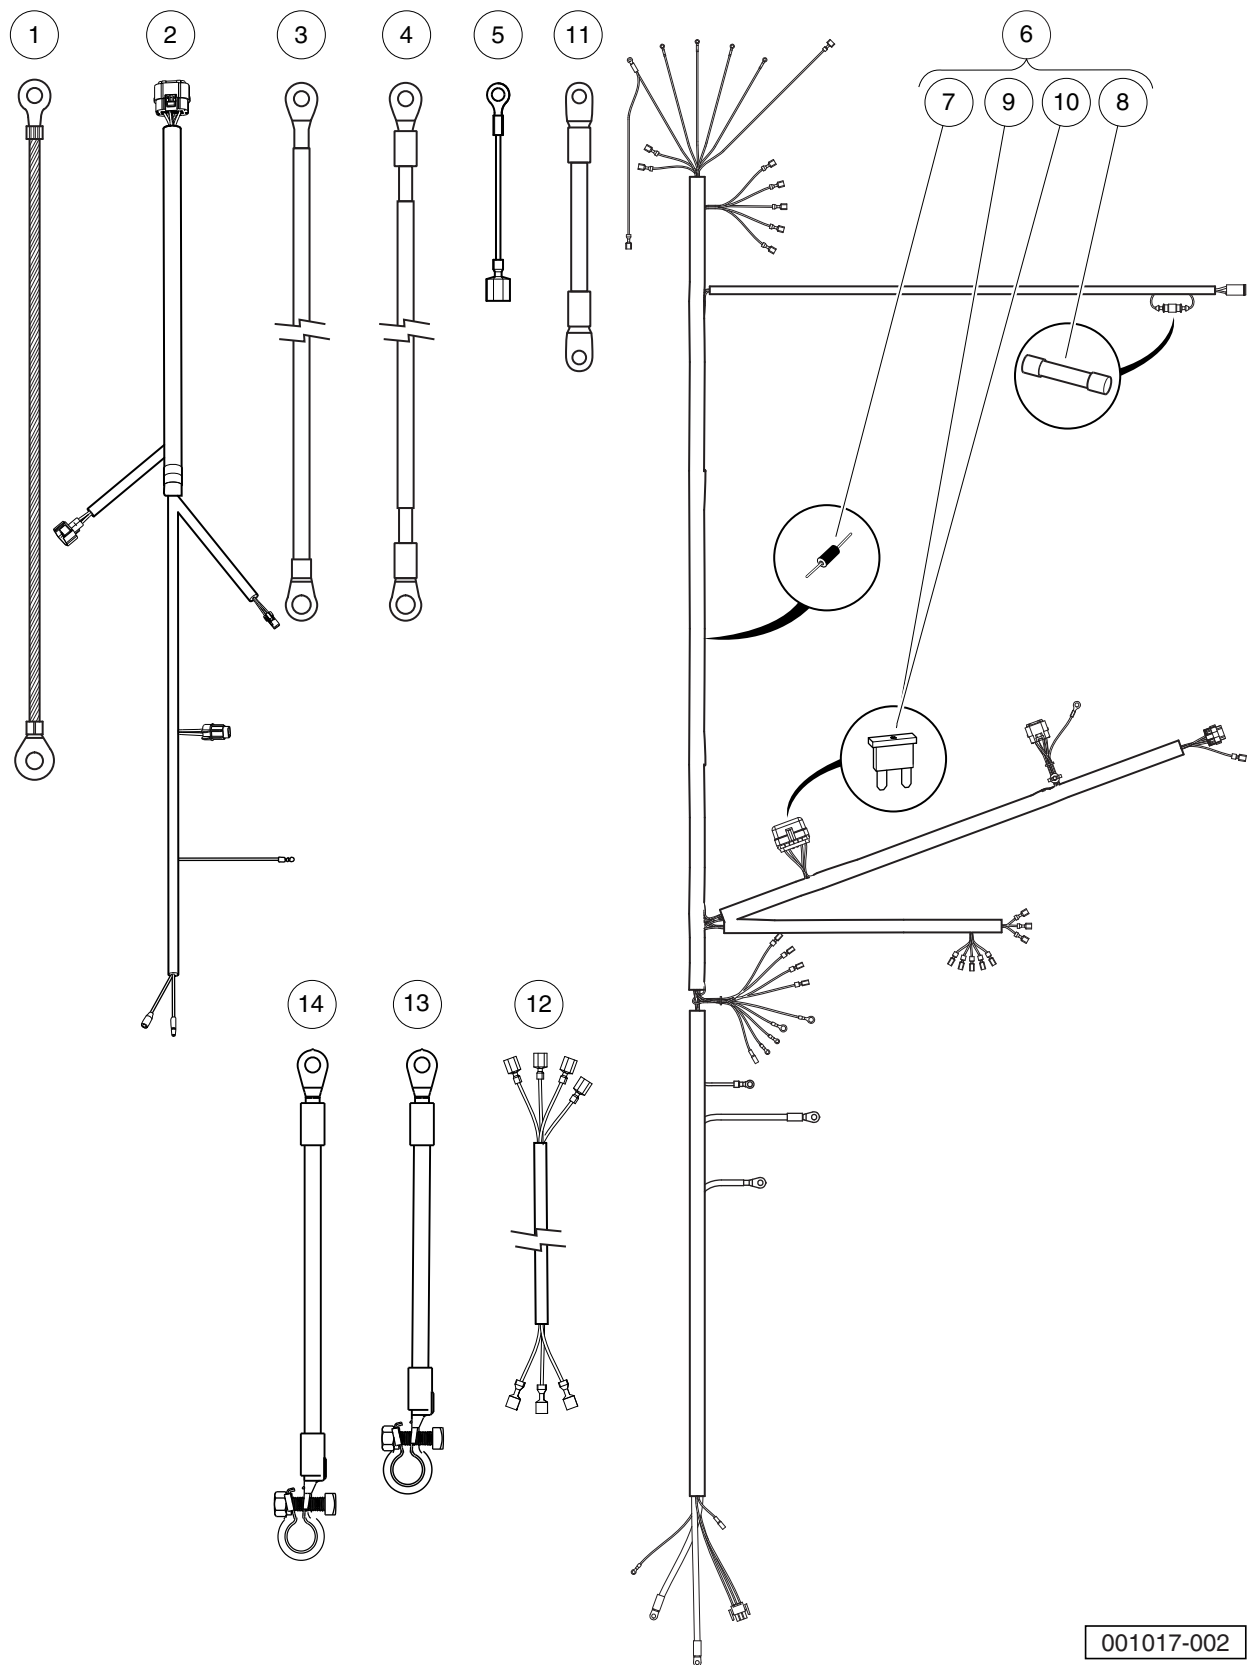

001017-002


WIRING, FUSES, AND DIODES, PEDAL-START – EFI, CA100

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015332</u>	Wire, Ground, #10, Uninsulated	1
2	<u>105008101</u>	Harness, Wire, ECU/Engine	1
3	<u>105135901</u>	Wire, Battery (side-post), B-, Gas	1
4	<u>105136001</u>	Wire, Battery (side-post), B+, Gas	1
5	<u>105143301</u>	Wire, Ground, Fuel Tank	1
6	<u>105151001</u>	Harness, Main, Util, Ps (includes items 7 through 10)	1
7	<u>1014789</u>	Diode, General Purpose, 3.0-Amp	1
8	<u>103924801</u>	Fuse, Glass, 2-Amp	1
9	<u>105081501</u>	Fuse, ATM, 5-Amp	1
10	<u>105081601</u>	Fuse, ATM, 10-Amp	1
11	<u>105161701</u>	Wire, 4-Ga, Green, Starter/Generator	1
12	<u>105245701</u>	Jumper, Run/maint, Sw	1
13	<u>105256701</u>	Wire Assy, 4ga, Battery, (top-post) B-, Gas	1
14	<u>105256801</u>	Wire Assy, 4ga, Battery, (top-post) B+, Gas	1
Note: For ECU, see Throttle Body in Fuel System section.			

7
G

7

G

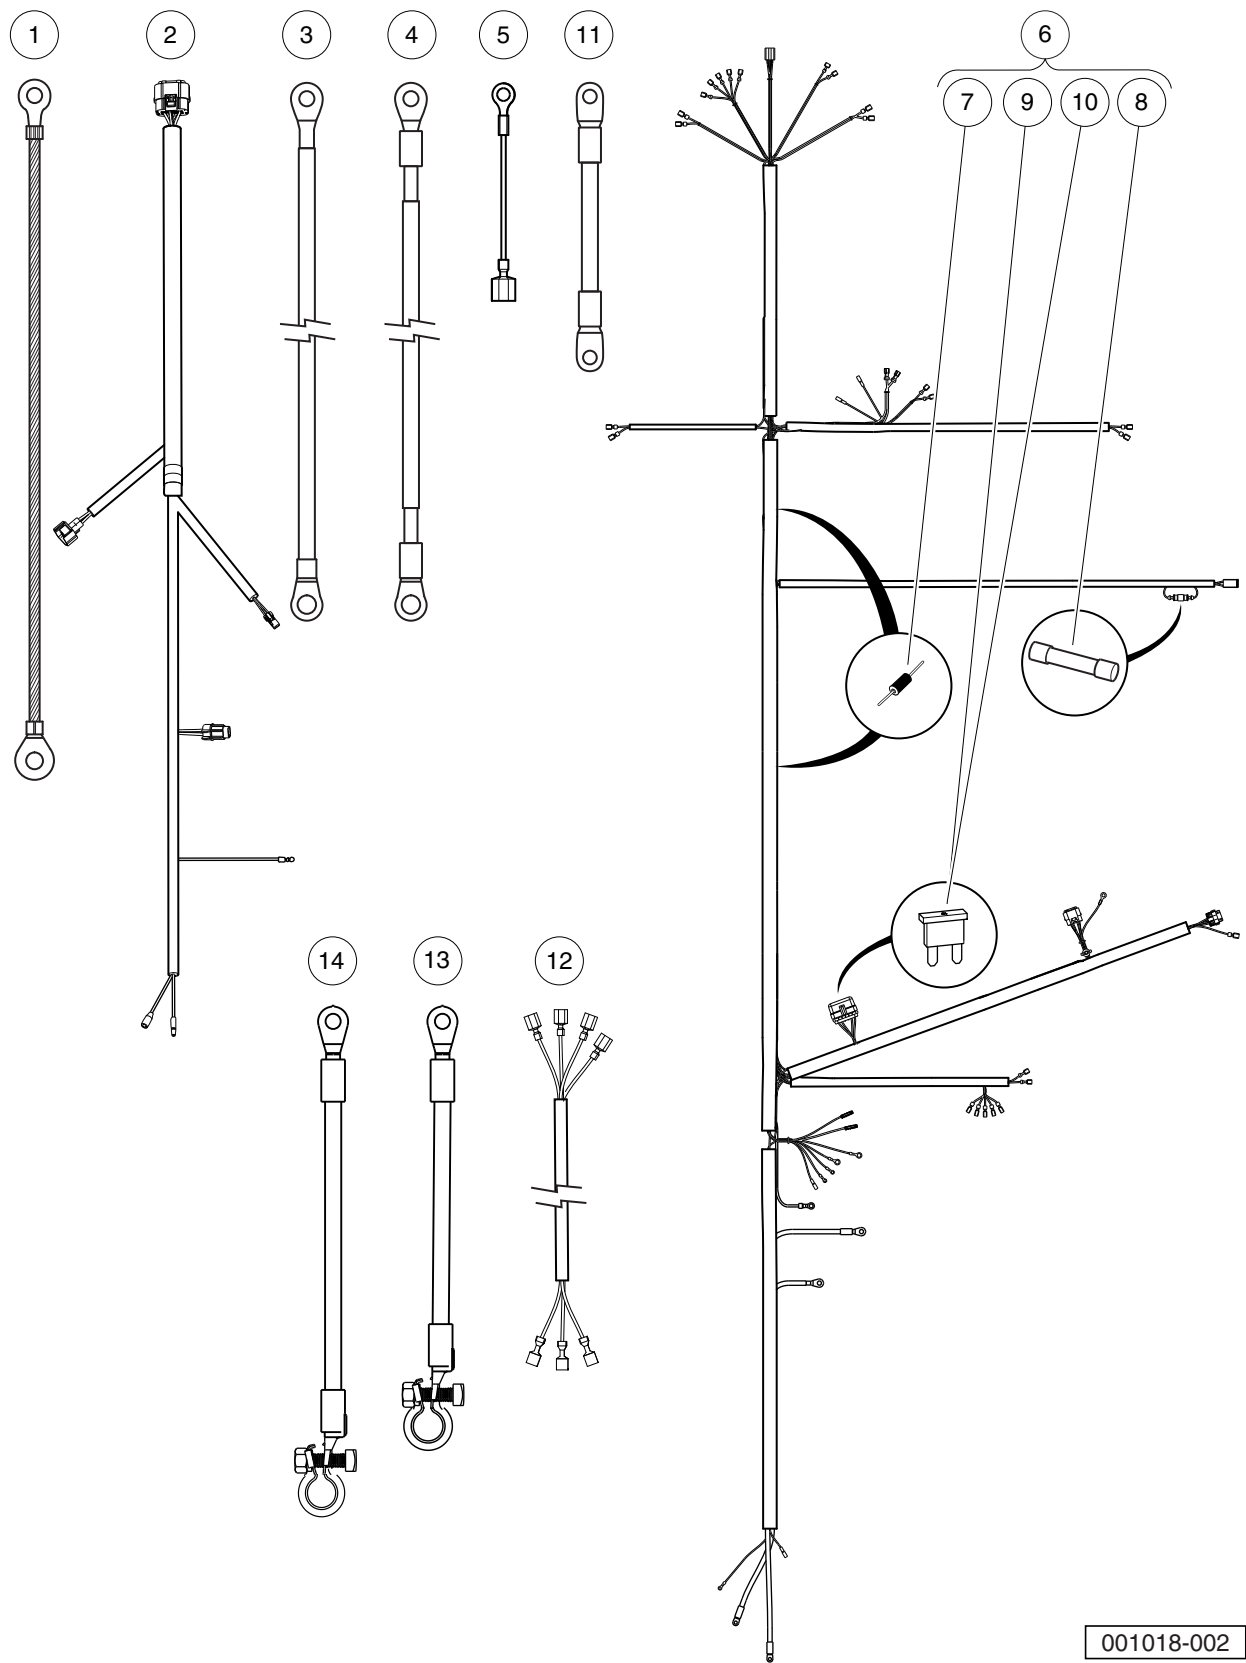


001018-002

WIRING, FUSES, AND DIODES, KEY-START – EFI, CA100-CE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015332</u>	Wire, Ground, #10, Uninsulated	1
2	<u>105008101</u>	Harness, Wire, ECU/Engine	1
3	<u>105135901</u>	Wire, Battery (side-post), B-, Gas	1
4	<u>105136001</u>	Wire, Battery (side-post), B+, Gas	1
5	<u>105143301</u>	Wire, Ground, Fuel Tank	1
6	<u>105151101</u>	Harness, Wire, Main, CA100 CE (includes items 7 through 10)	1
7	<u>1014789</u>	Diode, General Purpose, 3.0-Amp	2
8	<u>103924801</u>	Fuse, Glass, 2-Amp	1
9	<u>105081501</u>	Fuse, ATM, 5-Amp	1
10	<u>105081601</u>	Fuse, ATM, 10-Amp	1
11	<u>105161701</u>	Wire, 4-Ga, Green, Starter/Generator	1
12	<u>105245701</u>	Jumper, Run/maint, Sw	1
13	<u>105256701</u>	Wire Assy, 4ga, Battery, (top-post) B-, Gas	1
14	<u>105256801</u>	Wire Assy, 4ga, Battery, (top-post) B+, Gas	1
Note: For ECU, see Throttle Body in Fuel System section.			

7
G

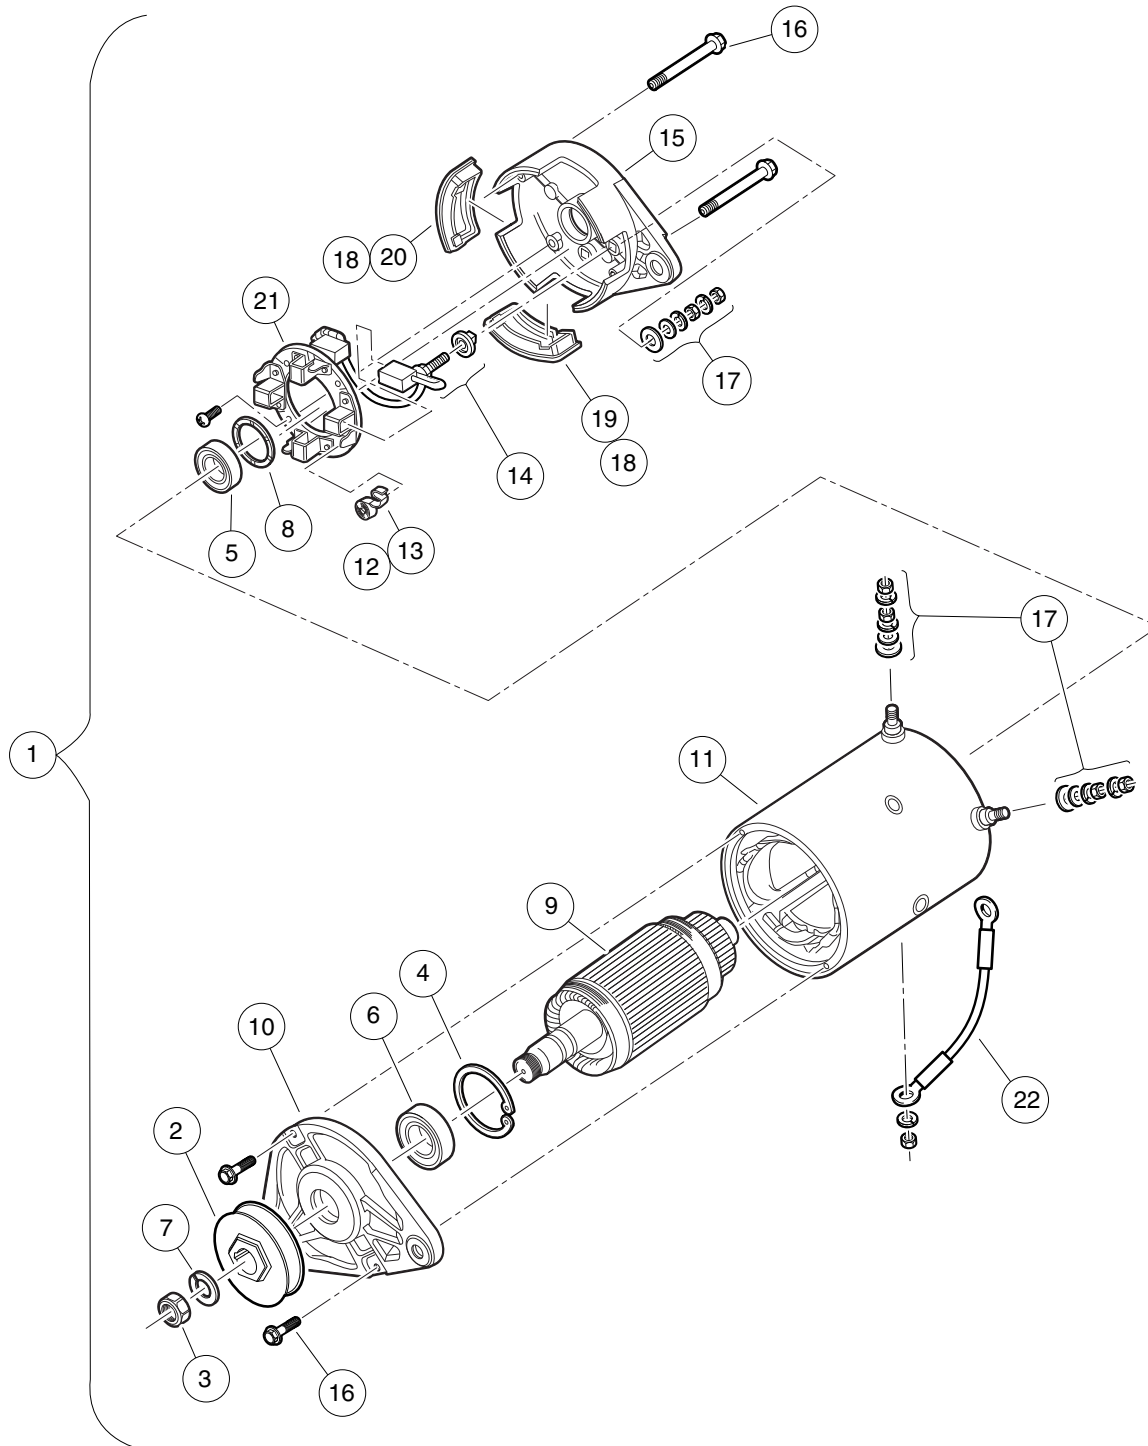


001016-001

STARTER/GENERATOR (MODEL 114-04-4006), KEY-START – EFI

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>105190102</u>	Starter/Generator, Bi-Rotational, Utility, Key-Start (includes items 2 through 22)	1
2	<u>1014289</u>	Pulley, Starter/Generator	1
3	<u>102838701</u>	Nut, Hex, M14x2, S/G	1
4	<u>102838801</u>	Retainer, Front, S/G	1
5	<u>102838901</u>	Bearing, Ball, Front, S-g	1
6	<u>102839001</u>	Bearing, Ball, Front, S-g	1
7	<u>102839301</u>	Washer, Lock M14x2, S-g	1
8	<u>102841101</u>	Washer, Wave, S-g	1
9	N/A	Asm, Armature, Starter/Generator	1
10	<u>102844601</u>	Head, Drive End, S-g	1
11	<u>102844701</u>	Asm, Frame and Field, Starter/Generator	1
12	<u>103347101</u>	Kit, Spring Brush, Starter/Generator (includes item 13)	1
13	N/A	Spring, Brush, S-g	4
14	<u>103347301</u>	Set, Brush Term, S-g	1
15	<u>103347601</u>	Head, Comm End, S-g	1
16	<u>103347701</u>	Set, Fastener, Ceh Deh, S-g	1
17	<u>103347801</u>	Set, Term Hardware, S/G	1
18	<u>103347901</u>	Kit, Cover, Brush Insp, Starter/Generator (includes items 19 and 20)	1
19	N/A	Plug, Rubber Drain, Start/Generator	3
20	N/A	Cover, Inspection, S-g	1
21	<u>103953301</u>	Kit, Brush And Brush Holder	1
22	<u>105161701</u>	Wire, 4-Ga, Green, Starter/Generator	1


7
G

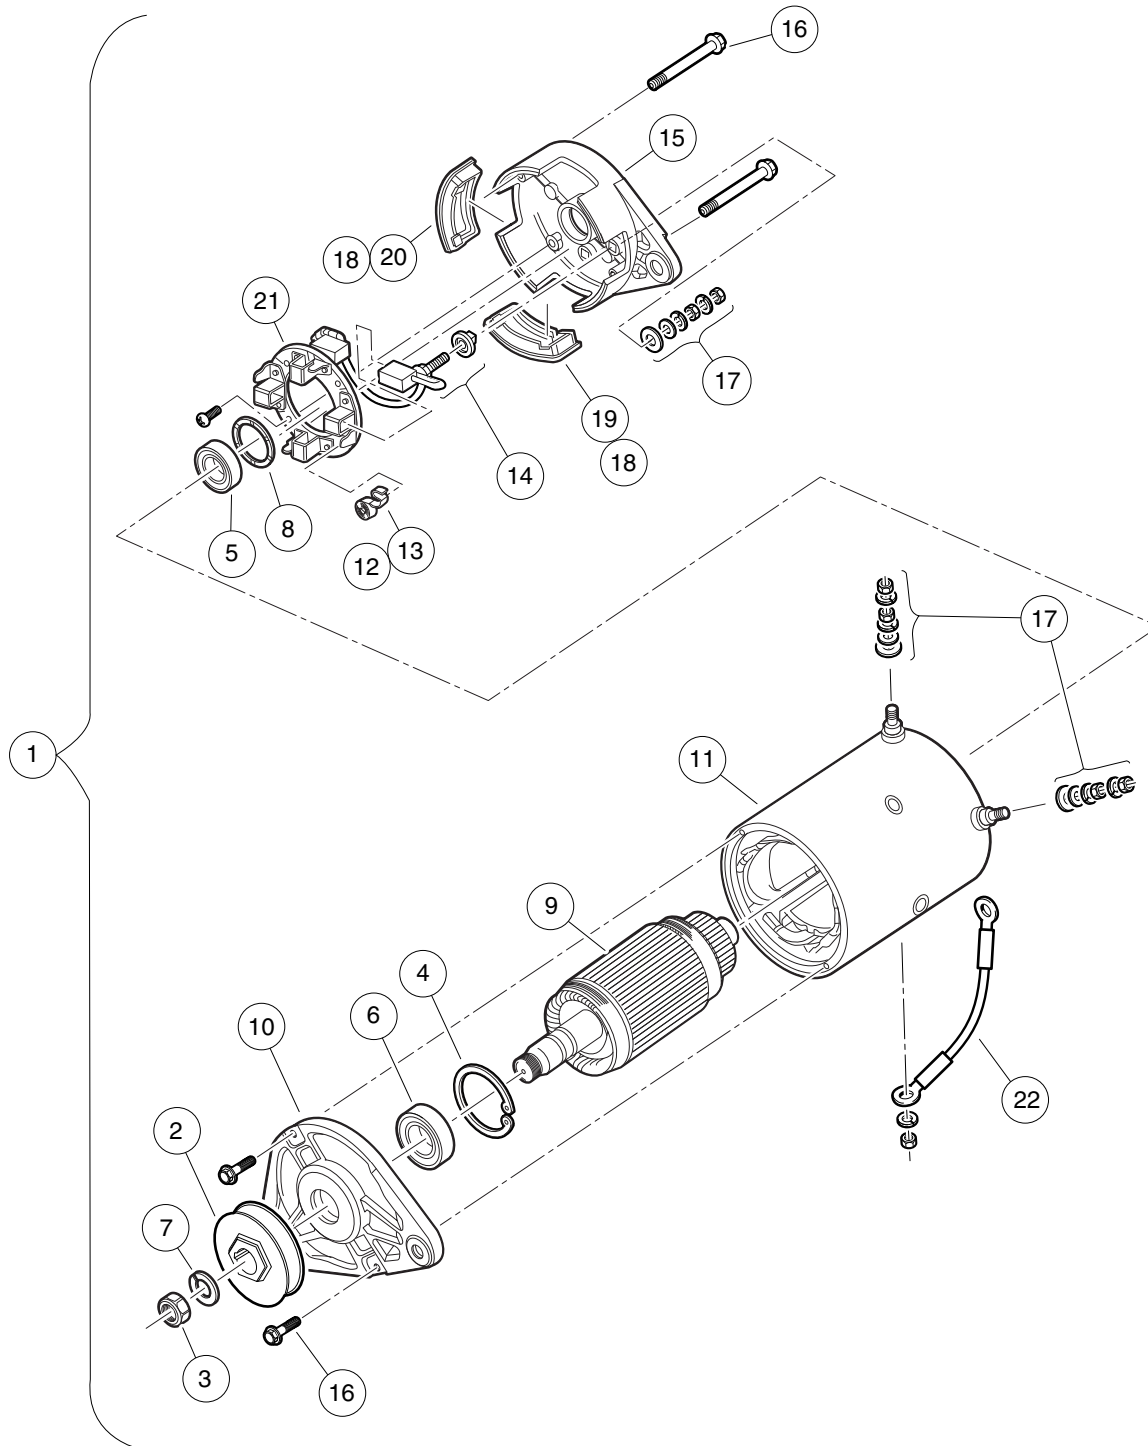

001016-001

STARTER/GENERATOR (MODEL 114-05-4001), PEDAL-START – EFI


ITEM	PART NO.	DESCRIPTION	QTY	7
		1 2 3 4		G
1	<u>105190101</u>	Starter/Generator, High-Torque, Utility, Pedal-Start (includes items 2 through 22)	1	
2	<u>1014289</u>	Pulley, Starter/Generator	1	
3	<u>102838701</u>	Nut, Hex, M14x2, S/G	1	
4	<u>102838801</u>	Retainer, Front, S/G	1	
5	<u>102838901</u>	Bearing, Ball, Front, S-g	1	
6	<u>102839001</u>	Bearing, Ball, Front, S-g	1	
7	<u>102839301</u>	Washer, Lock M14x2, S-g	1	
8	<u>102841101</u>	Washer, Wave, S-g	1	
9	N/A	Asm, Armature, Starter/Generator	1	
10	<u>102844601</u>	Head, Drive End, S-g	1	
11	<u>102844701</u>	Asm, Frame and Field, Starter/Generator	1	
12	<u>103347101</u>	Kit, Spring Brush, Starter/Generator (includes item 13)	1	
13	N/A	Spring, Brush, S-g	4	
14	<u>103347301</u>	Set, Brush Term, S-g	1	
15	<u>103347601</u>	Head, Comm End, S-g	1	
16	<u>103347701</u>	Set, Fastener, Ceh Deh, S-g	1	
17	<u>103347801</u>	Set, Term Hardware, S/G	1	
18	<u>103347901</u>	Kit, Cover, Brush Insp, Starter/Generator (includes items 19 and 20)	1	
19	N/A	Plug, Rubber Drain, Start/Generator	3	
20	N/A	Cover, Inspection, S-g	1	
21	<u>103953301</u>	Kit, Brush And Brush Holder	1	
22	<u>105161701</u>	Wire, 4-Ga, Green, Starter/Generator	1	

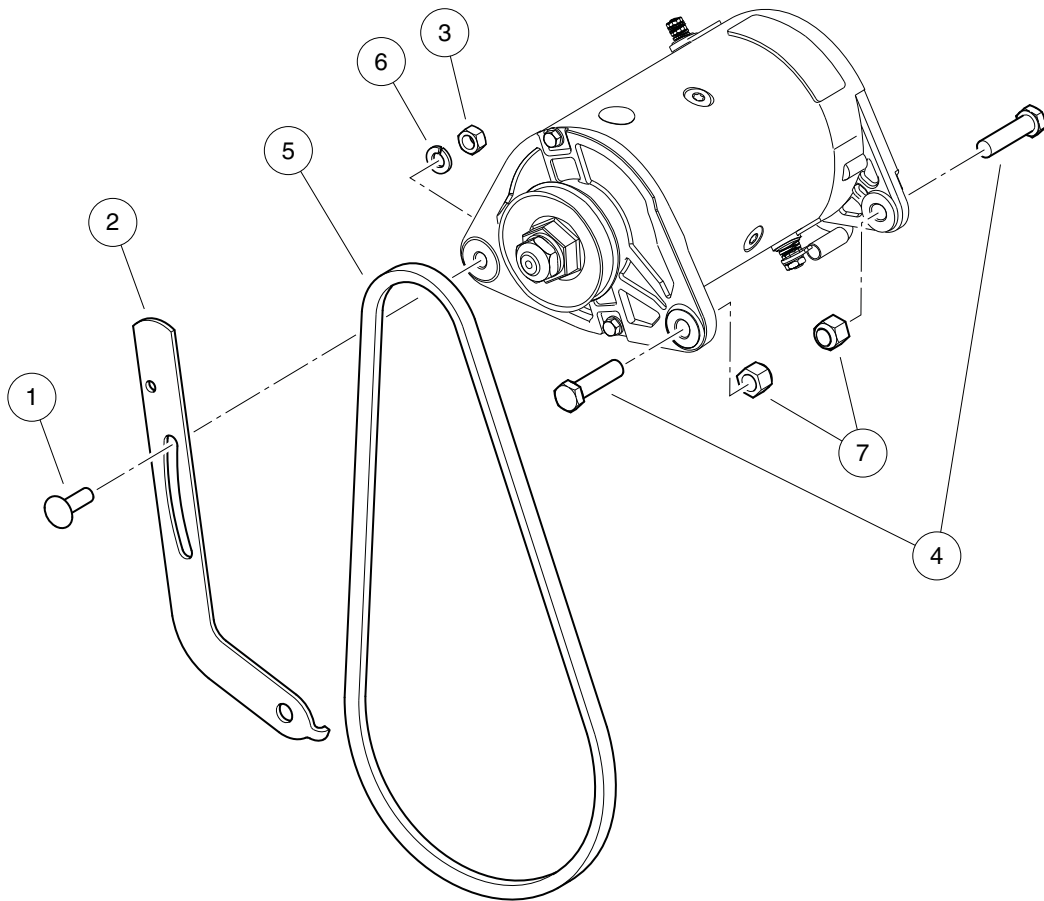

001009-002

STARTER/GENERATOR MOUNTING, EX40

ITEM	PART NO.	DESCRIPTION	QTY	7
		1 2 3 4		G
1	<u>1015932</u>	Bolt, Carriage, 5/16-18	1	
2	<u>104005301</u>	Bracket, Adjustable, Starter/Generator, EX40	1	
3	<u>1242</u>	Nut, 5/16-18 Hex	1	
4	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	2	
5	<u>47539338001</u>	Belt, Sg, Ex40, #5a	1	
6	<u>7174</u>	Lockwasher, 5/16 Split	1	
7	<u>8754</u>	Locknut, 3/8-16 Hex	2	

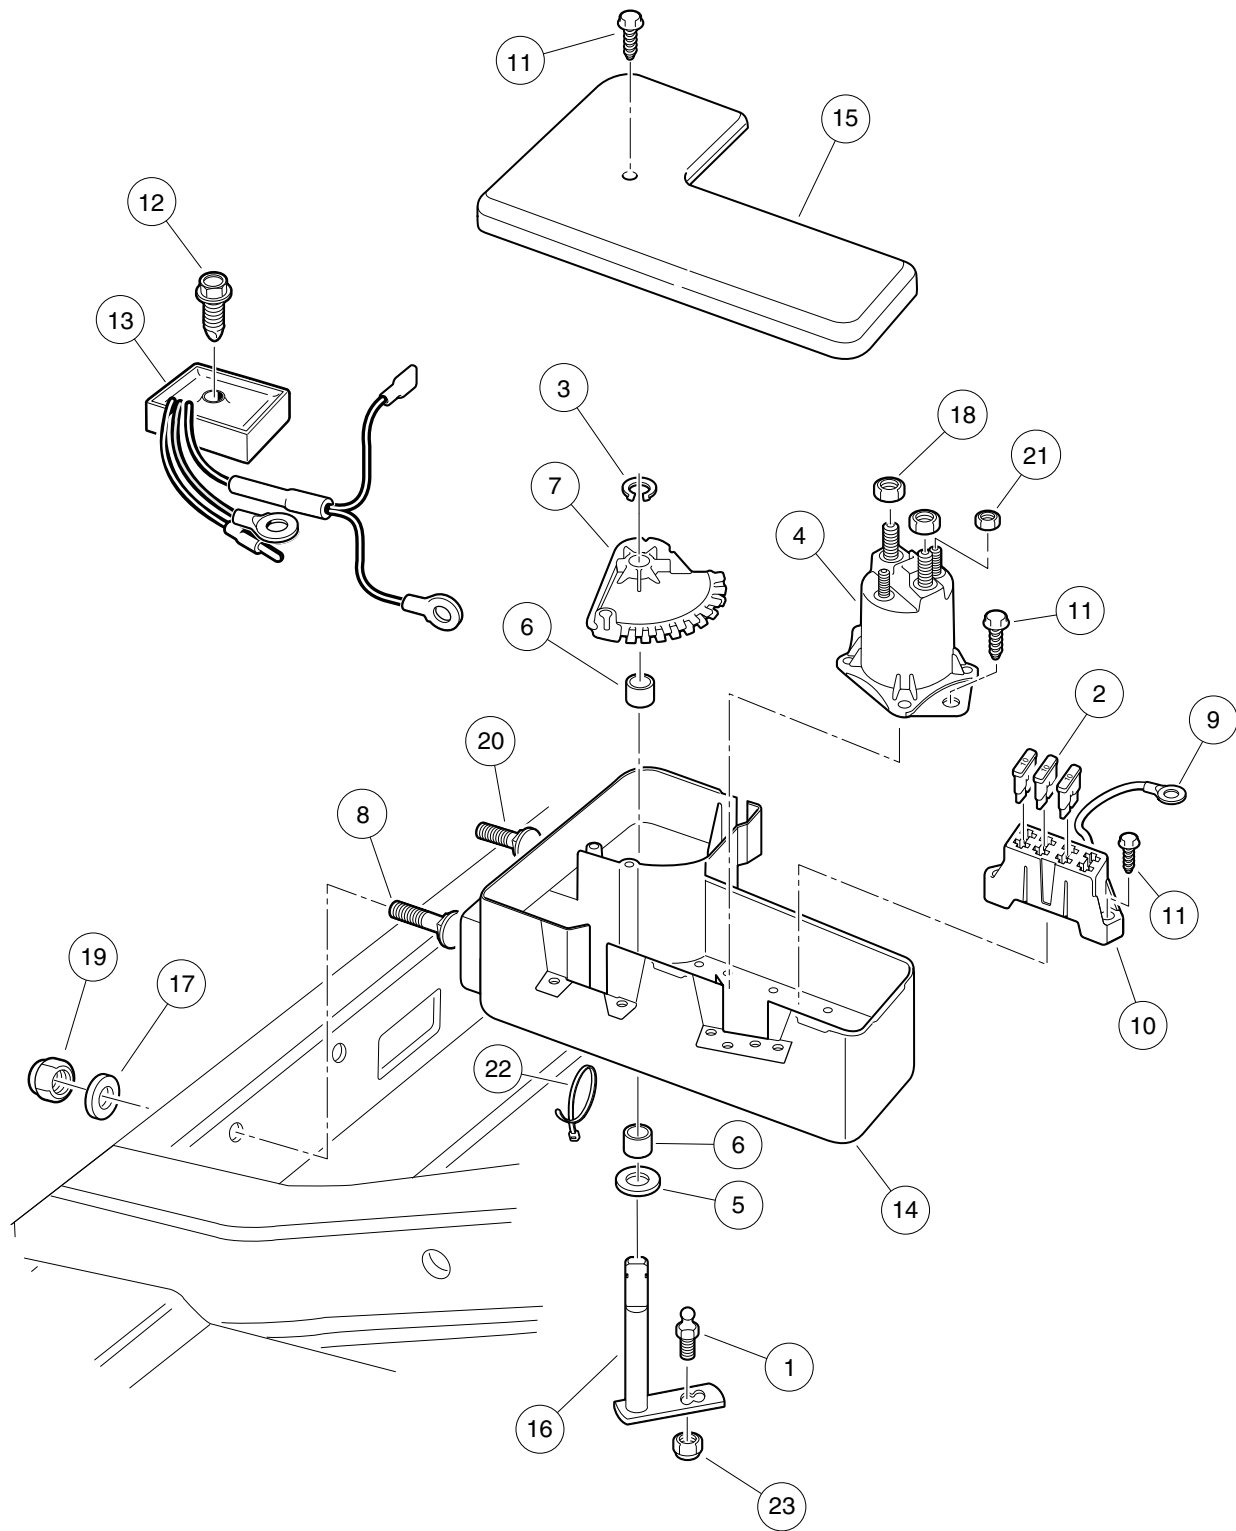


001014-002

ELECTRICAL COMPONENT BOX, KEY-START – EX40

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010954</u>	Stud, Ball, 1/4-28 X 0.560	1
2	<u>1012295</u>	Fuse, 10-Amp	3
3	<u>1013589</u>	Ring, Retaining, 0.338" Internal	1
4	<u>1013609</u>	Solenoid, 12-Volt	1
5	<u>1014065</u>	Washer, Flat, 0.38" ID, Delrin	1
6	<u>1014145</u>	Bushing, Secondary Weight, Split	2
7	<u>1015373</u>	Cam, Electric Box	1
8	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	1
9	<u>1015737</u>	Wire Assy, #10 Red	1
10	<u>1015741</u>	Fuse Block	1
11	<u>1015752</u>	Screw, #12-16 X 0.625, Hi-Lo	5
12	<u>101856102</u>	Screw, 1/4-15 X 1.50, Hi-lo, Hex	1
13	<u>102711201</u>	Voltage Regulator	1
14	<u>105000301</u>	Box, Component, Electrical	1
15	<u>105000401</u>	Cover, Box, Component, Elec	1
16	<u>105037401</u>	Weldment, Bellcrank, Comp Box	1
17	<u>1241</u>	Washer, 5/16 Type A Flat	2
18	<u>1242</u>	Nut, 5/16-18 Hex	2
19	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
20	<u>7818</u>	Bolt, Carriage, 5/16-18 X 1.5	1
21	<u>7893</u>	Nut, #10-32 Hex	2
22	<u>8639</u>	Tie Wrap, 11" Nylon	6
23	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1

7

 G




ELECTRICAL COMPONENT BOX, PEDAL-START – EX40

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010954</u>	Stud, Ball, 1/4-28 X 0.560	1
2	<u>1012295</u>	Fuse, 10-Amp	3
3	<u>1012431</u>	Washer, #4 Flat	2
4	<u>1013589</u>	Ring, Retaining, 0.338" Internal	1
5	<u>1013609</u>	Solenoid, 12-Volt	1
6	<u>1014065</u>	Washer, Flat, 0.38" ID, Delrin	1
7	<u>1014145</u>	Bushing, Secondary Weight, Split	2
8	<u>1014807</u>	Switch, Limit	1
9	<u>1014808</u>	Switch, Limit	1
10	<u>1015373</u>	Cam, Electric Box	1
11	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	1
12	<u>1015737</u>	Wire Assy, #10 Red	1
13	<u>1015741</u>	Fuse Block	1
14	<u>1015752</u>	Screw, #12-16 X 0.625, Hi-Lo	5
15	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2
16	<u>101856102</u>	Screw, 1/4-15 X 1.50, Hi-lo, Hex	1
17	<u>102711201</u>	Voltage Regulator	1
18	<u>105000301</u>	Box, Component, Electrical	1
19	<u>105000401</u>	Cover, Box, Component, Elec	1
20	<u>105037401</u>	Weldment, Bellcrank, Comp Box	1
21	<u>1241</u>	Washer, 5/16 Type A Flat	2
22	<u>1242</u>	Nut, 5/16-18 Hex	2
23	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
24	<u>7818</u>	Bolt, Carriage, 5/16-18 X 1.5	1
25	<u>7893</u>	Nut, #10-32 Hex	2
26	<u>8057</u>	Nut, #4-40 Hex Machine	4
27	<u>8058</u>	Lockwasher, #4 Split	2
28	<u>8639</u>	Tie Wrap, 11" Nylon	6
29	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1

7

G

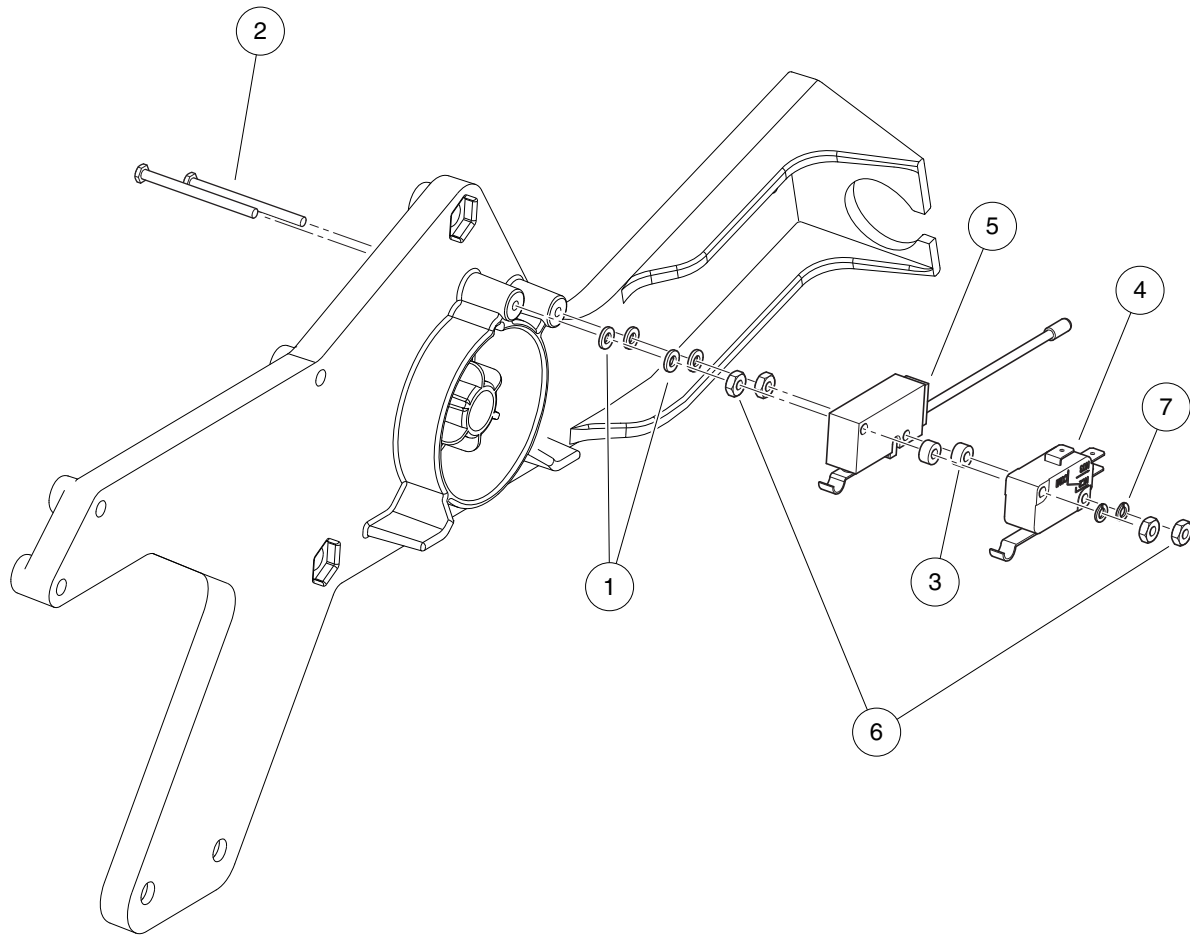

001013-002

FORWARD/REVERSE SHIFTER SWITCHES, KEY-START – EFI, CA100CE



ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012431	Washer, #4 Flat	4
2	<u>1012594</u>	Screw, #4-40 Machine	2
3	<u>1014727</u>	Washer, Flat, #4, Nylon	2
4	<u>1014807</u>	Switch, Limit	1
5	<u>101979101</u>	Switch, Limit, Assembly, Sealed	1
6	<u>8057</u>	Nut, #4-40 Hex Machine	4
7	<u>8058</u>	Lockwasher, #4 Split	2

7

G

7

G

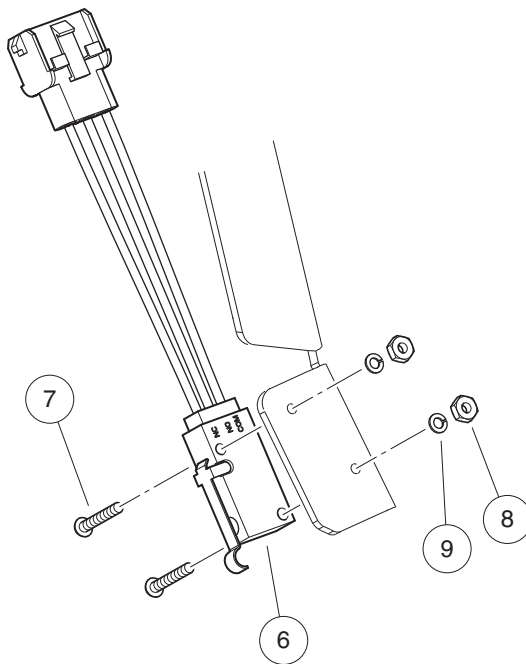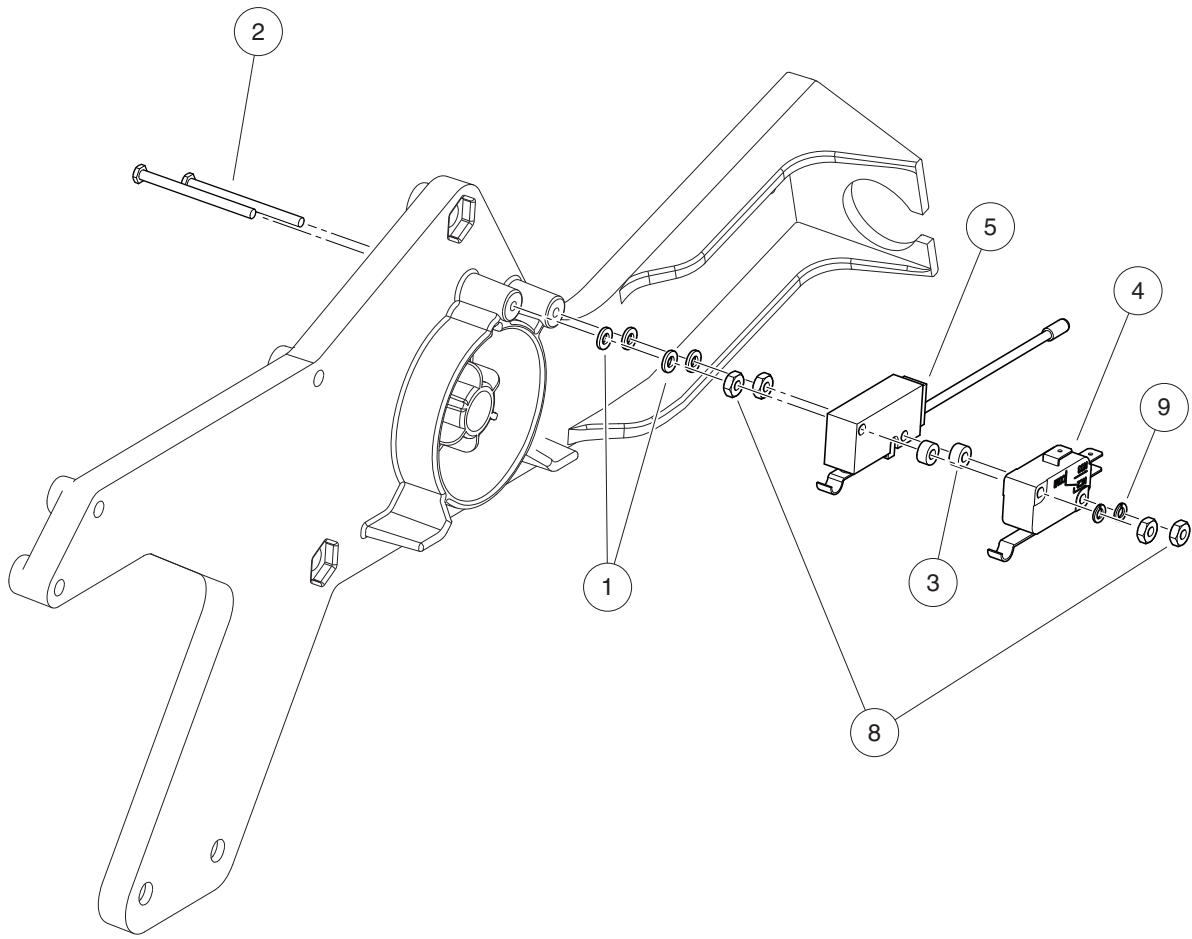


001013-001

FORWARD/REVERSE SHIFTER SWITCHES, PEDAL-START – EFI, CA100

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012431	Washer, #4 Flat	4
2	<u>1012594</u>	Screw, #4-40 Machine	2
3	<u>1014727</u>	Washer, Flat, #4, Nylon	2
4	<u>1014807</u>	Switch, Limit	1
5	<u>101979101</u>	Switch, Limit, Assembly, Sealed	1
6	<u>105102601</u>	Switch, Limit, Sealed, with 3-Wire Lead	1
7	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2
8	<u>8057</u>	Nut, #4-40 Hex Machine	6
9	<u>8058</u>	Lockwasher, #4 Split	4

7


G

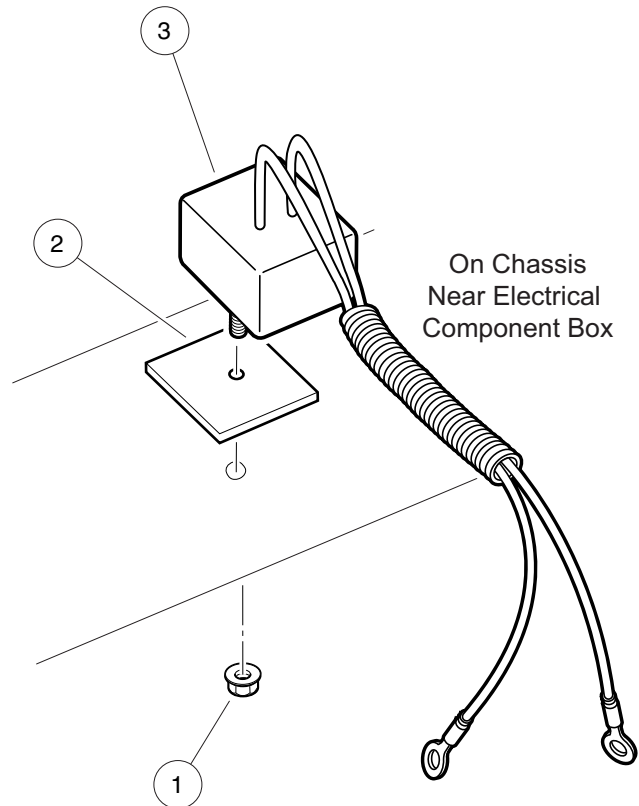

001015-001

7
G

7
G

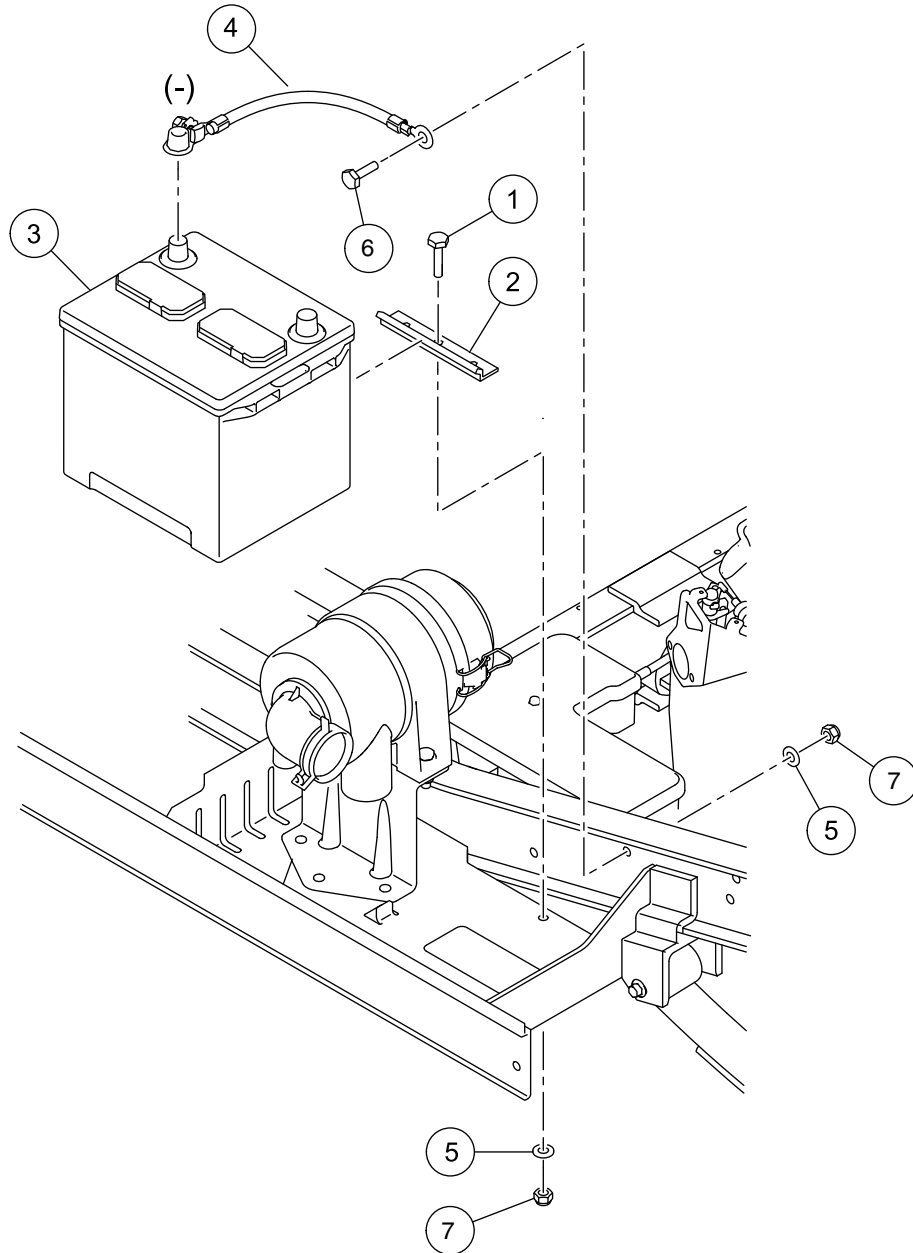

000250-001

TOP-POST BATTERY – GASOLINE UTILITY VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	7
		1 2 3 4		G
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1	
2	<u>101898001</u>	Clamp, Battery	1	
3	<u>105237301</u>	Battery, Start, 12v, Type 26	1	
4	<u>105256701</u>	Wire Assy, 4ga, Battery, (top-post) B-, Gas	1	
5	<u>1241</u>	Washer, 5/16 Type A Flat	2	
6	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1	
7	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	


7

G


ENGINE (SUBARU EX40)

8

G

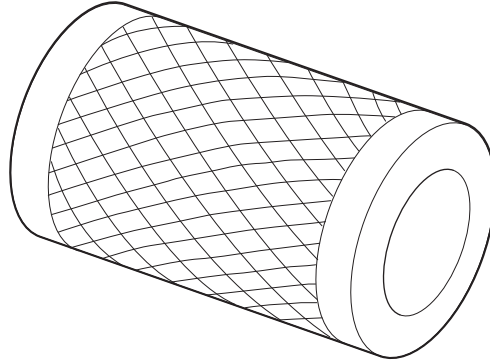

1

 


2

000992-003


8
G

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>102558201</u>	1 2 3 4 Air Filter, 4 Inch	1
2	<u>47539956001</u>	Spark Plug, Ex40, Brp4hs	1

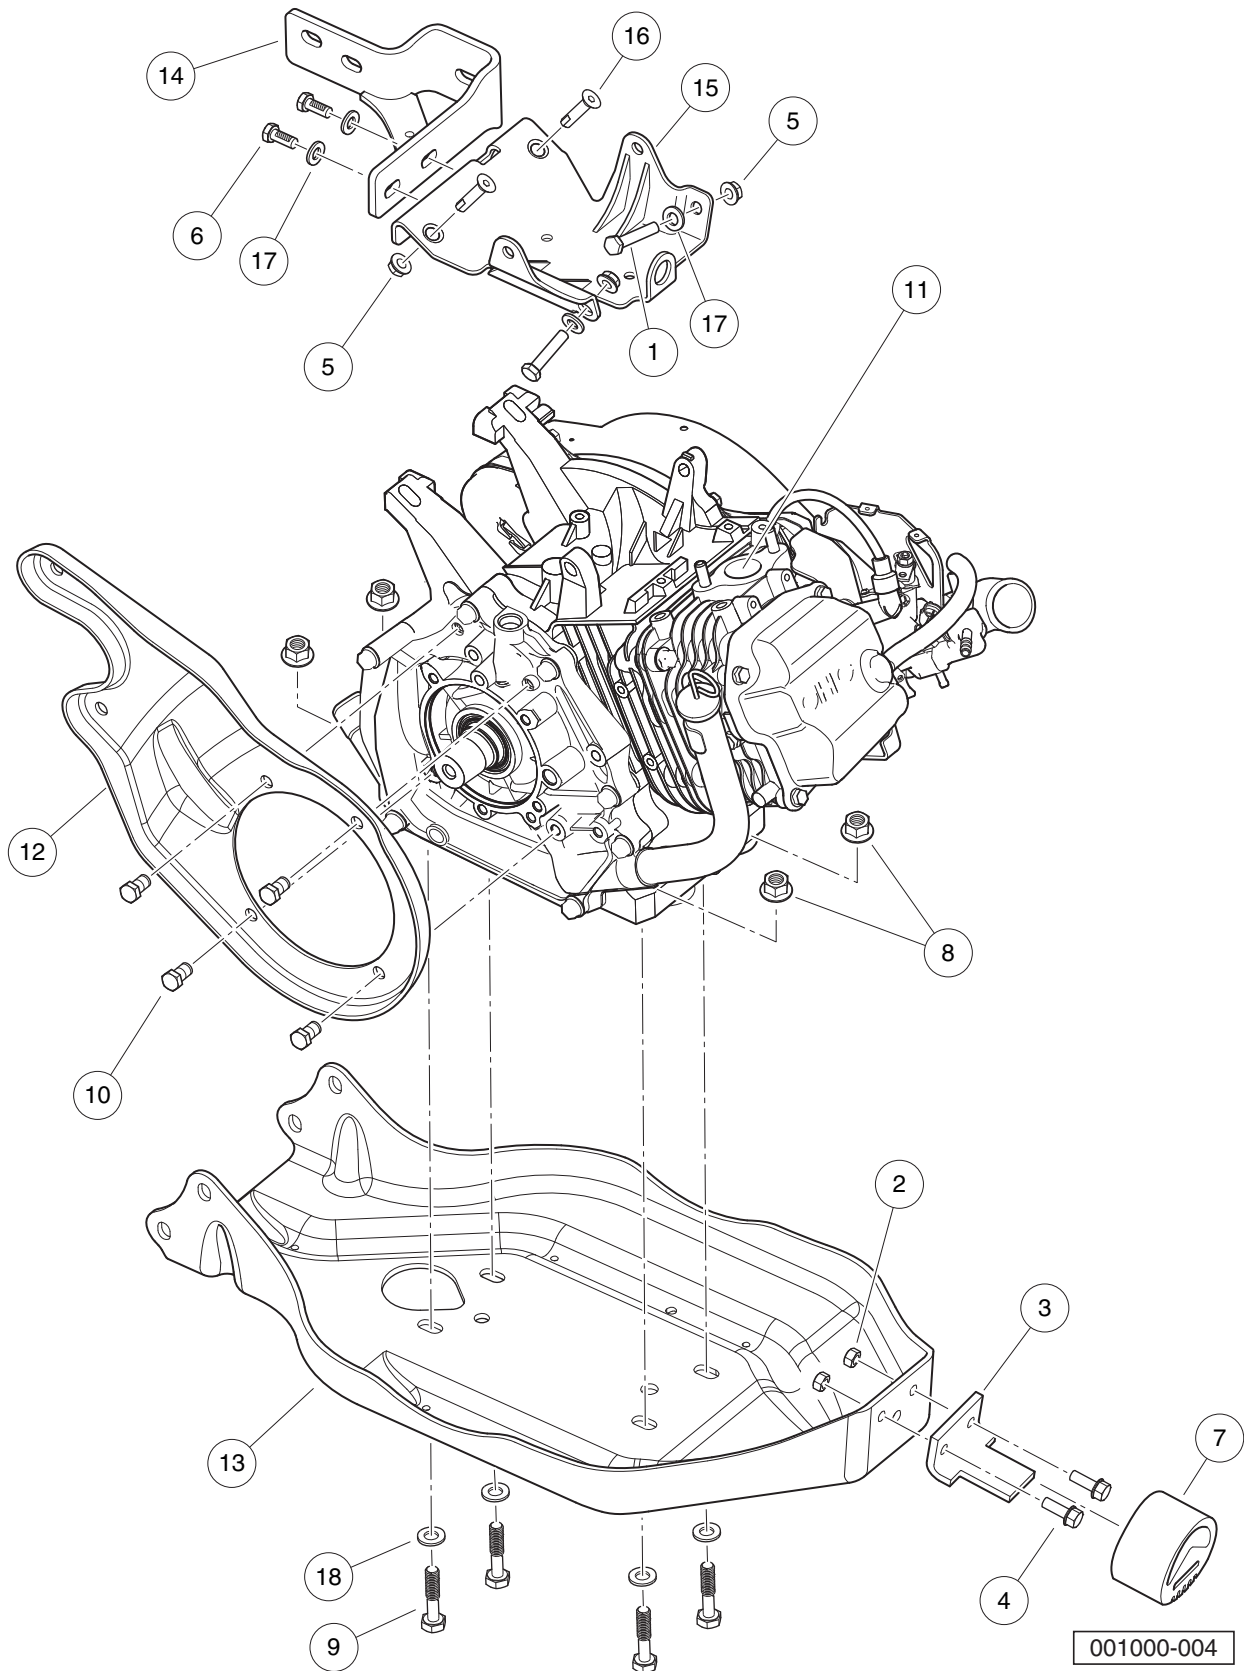

ENGINE AND ENGINE MOUNTING, UTILITY


ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	2	
2	<u>1013924</u>	Nut, 5/16-24, Hex Head Cone	2	
3	<u>101834602</u>	Bracket, Snubber, Tall	1	
4	<u>101884801</u>	Screw, 5/16-24 X 0.875, Grade-8	2	
5	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4	
6	<u>102242101</u>	Screw, 5/16-18 X 3/4 Hex-Head with Patch	2	
7	<u>102540301</u>	Snubber, Inner Frame	1	
8	<u>102617201</u>	Nut, Flanged, M10 X 1.5, Mechanically Deformed	4	
9	<u>102732401</u>	Bolt, M10 X 45, Zn-Ni (Black)	4	
10	<u>103508101</u>	Bolt, 3/8-16 X .75 Lock Patch	4	
11	<u>103882802</u>	Engine, Gas, Subaru EX40, EFI, with Compression Release	1	
12	<u>103979401</u>	Plate, Mounting, CVT, Center	1	
13	<u>103982201</u>	Plate, Engine/Axle Mounting	1	
14	<u>105134601</u>	Bracket, Mounting, Transaxle/Exhaust, EX40	1	
15	<u>105149301</u>	Bracket, Mounting, Starter/Generator, EX40	1	
16	<u>105262401</u>	Screw, 5/16-18 X 1.25, Cs, Lck	2	
17	<u>1241</u>	Washer, 5/16 Type A Flat	4	
18	<u>96741046</u>	Washer, M10, Hard	4	

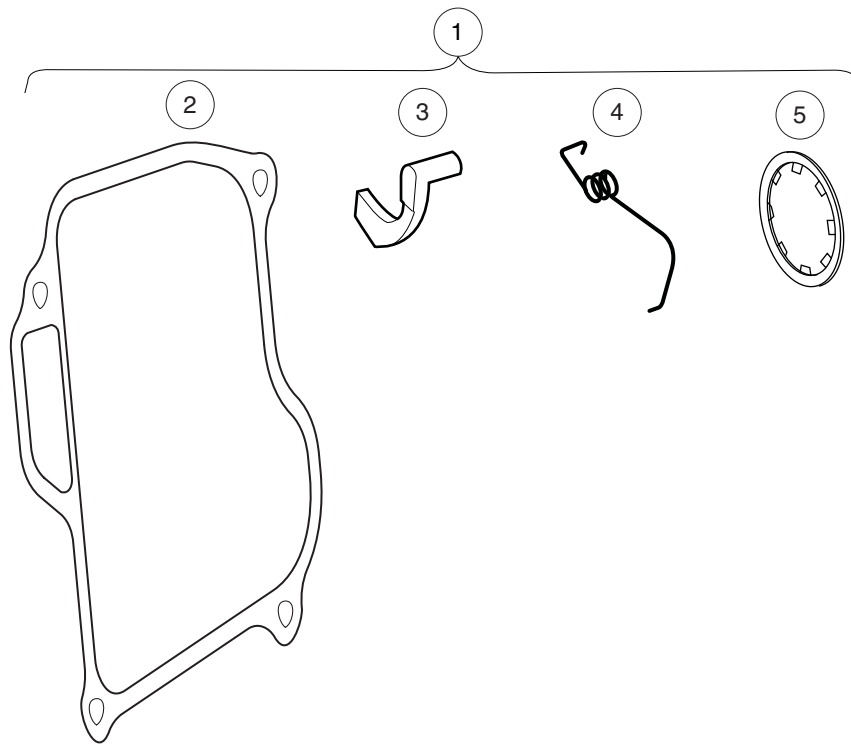

001441-001

AUTOMATIC COMPRESSION RELEASE (ACR) SERVICE KIT – SUBARU EX40


ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	47599382001	Kit, Acr, Subaru, Ex40 (includes items 2 through 5)	1	
2	47540040001	Gasket, Rocker Cover, Sub	1	
3	47600421001	Lever, Release, Acr, Ex40	1	
4	47600422001	Spring, Return, Acr, Ex40	1	
5	47600423001	Clip, Retaining, Acr, Ex40	1	

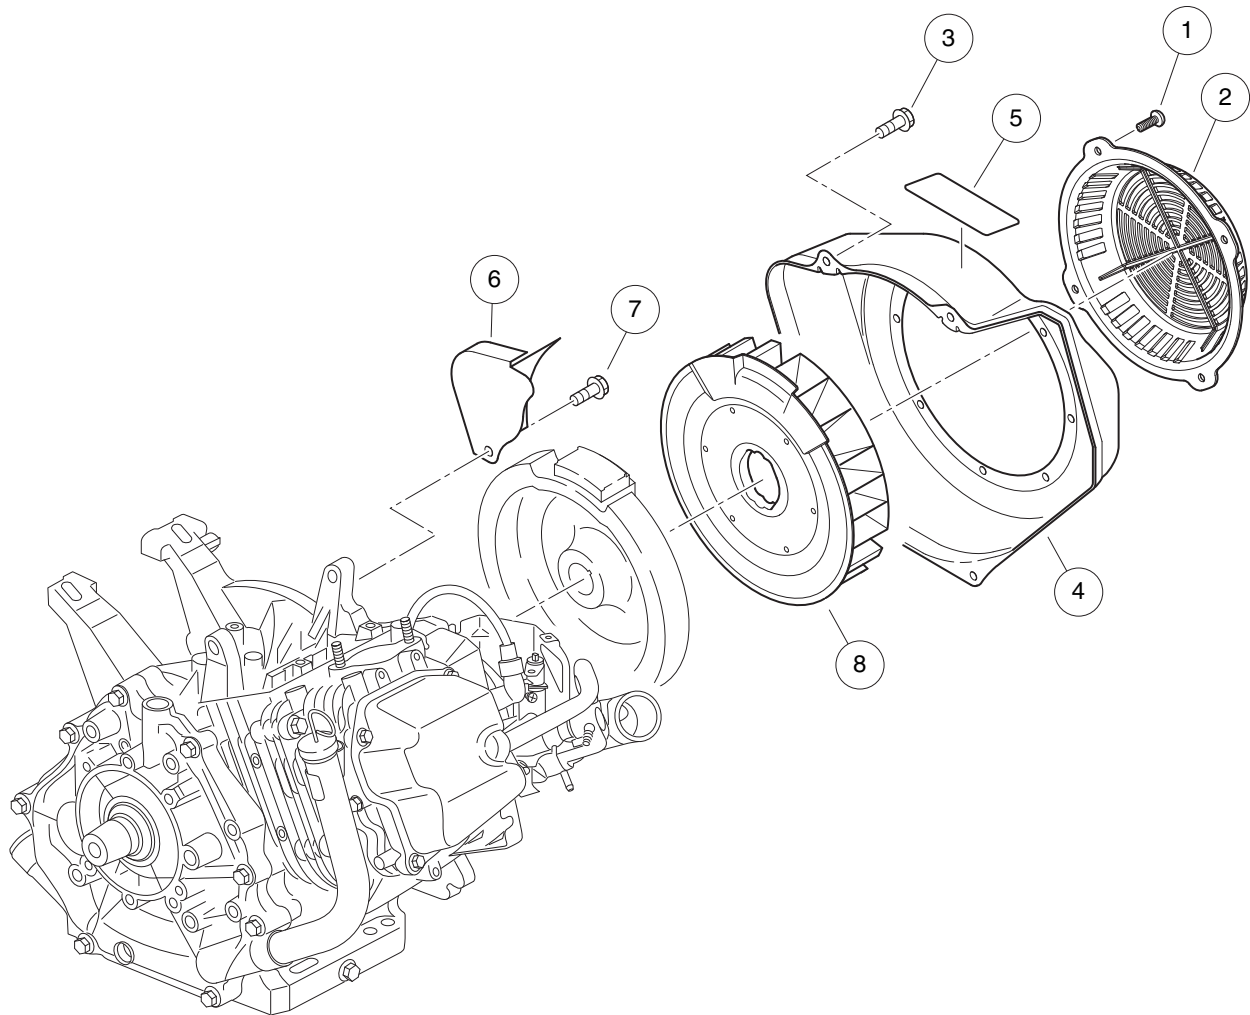

001001-001

FAN AND SHROUD – EX40


ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>1015969</u>	Screw, M6-1.00 X 10mm, Pan Hd	4	
2	<u>103995901</u>	Cover, Fan, EX40	1	
3	<u>105012601</u>	Bolt, Flange, M6x1.0x12, EX40	4	
4	<u>105016701</u>	Housing, Fan, EX40	1	
5	<u>105016801</u>	Label, Engine Warning, EX40	1	
6	<u>105016901</u>	Baffle, Crankcase, EX40	1	
7	<u>105017001</u>	Bolt, Baffle, M8x1.25x12 Ex40	1	
8	<u>105017101</u>	Fan, Cooling, EX40	1	

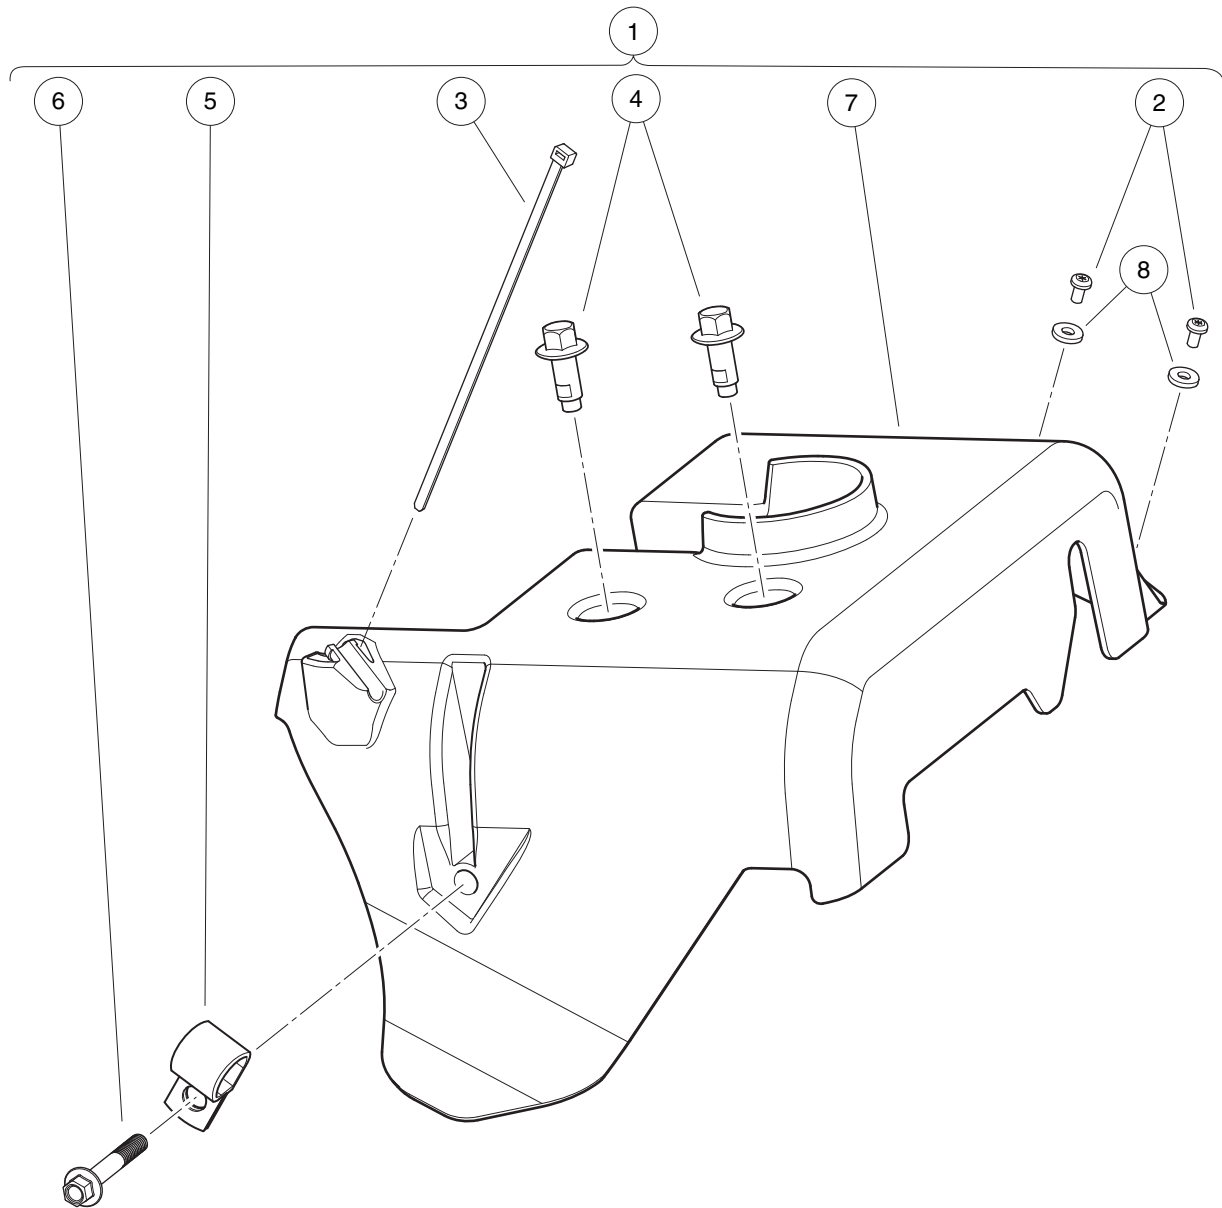

001002-001

AIR DEFLECTOR – EX40


ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>105084801</u>	Kit, Air Deflector, Subaru EX40 (includes items 2 through 8)	1	
2	<u>1016103</u>	Screw, Pan Hd Tx, Taptite 6-32	2	
3	<u>101824101</u>	Tie Wrap, Black	1	
4	<u>102298116</u>	Bolt, Flanged Head, M8 X 16.0	2	
5	<u>102410604</u>	P-clamp, Insulated, 0.625 Inch	1	
6	<u>102541402</u>	Bolt, M6x1.0x40, Hex Flange Head, Blk-I	1	
7	<u>105075301</u>	Deflector, Air, Subaru EX40	1	
8	<u>7591</u>	Washer, #6, Flat	2	

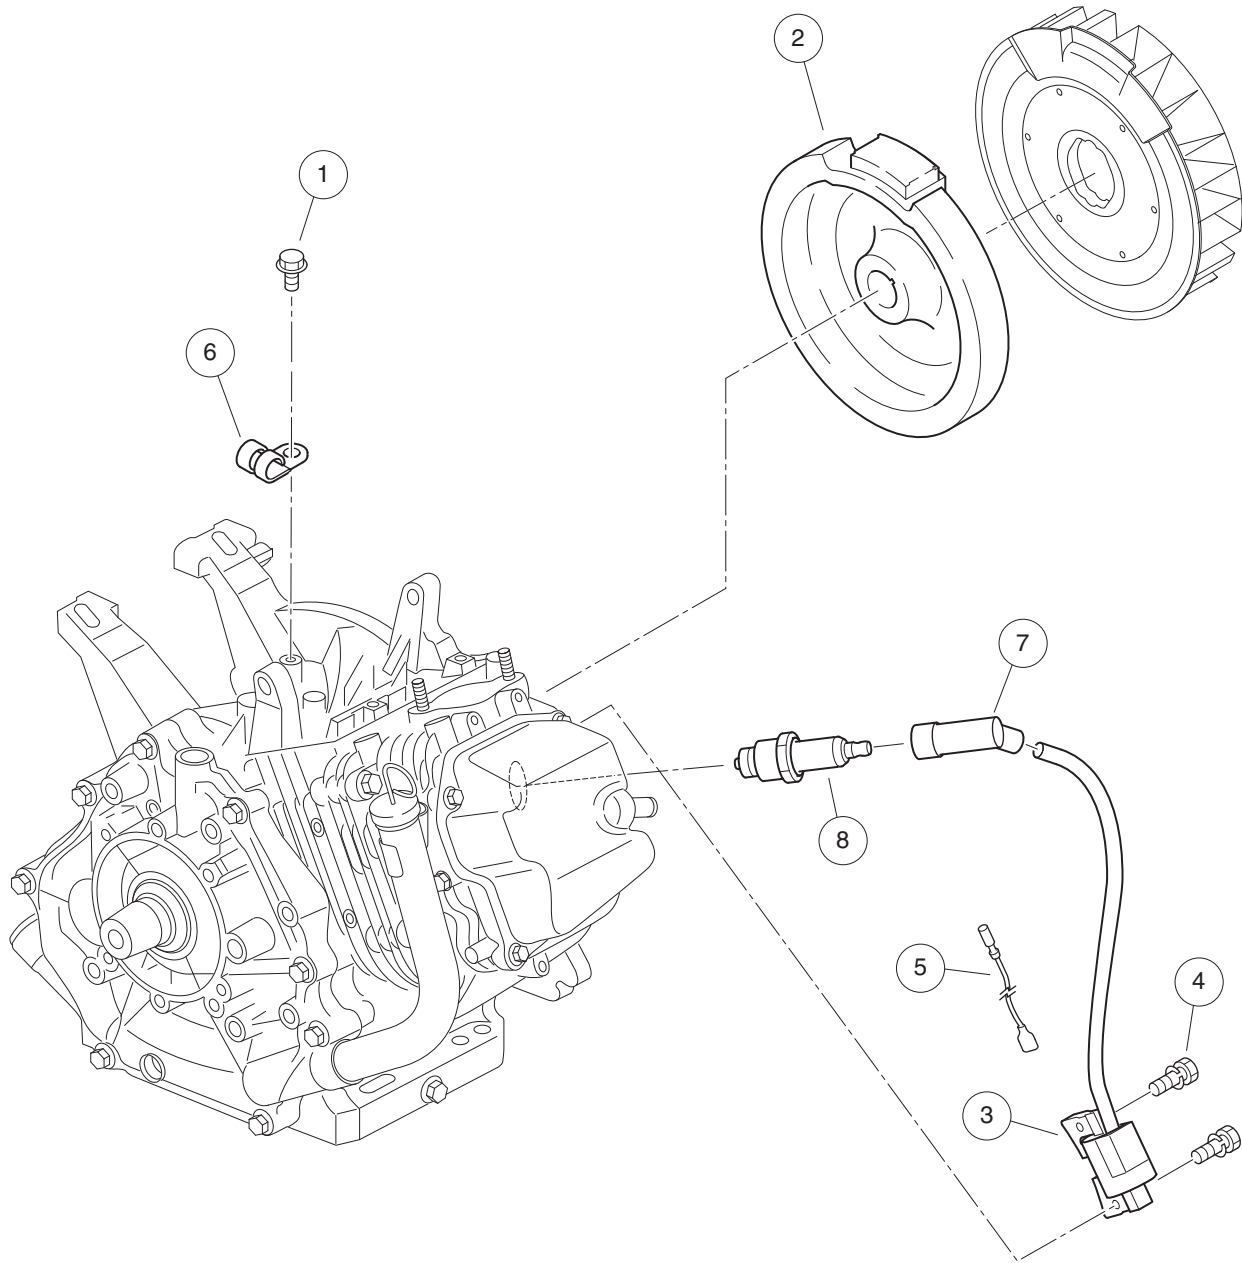

001003-002

IGNITION COMPONENTS AND FLYWHEEL – EX40

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>105016001</u>	Bolt, Flange, M6x1.0x8, EX40	1	
2	<u>105017301</u>	Flywheel, EX40	1	
3	<u>105017401</u>	Coil, Ignition, CDI, EX40	1	
4	<u>105017501</u>	Asm, Bolt-Washer, Coil, EX40	2	
5	<u>105017601</u>	Asm, Wire, Coil Control, EX40	1	
6	<u>105017701</u>	Clamp, Coil Control Wire, EX40	1	
7	<u>105017901</u>	Cap, Spark Plug, EX40	1	
8	<u>47539956001</u>	Spark Plug, Ex40, Brp4hs	1	

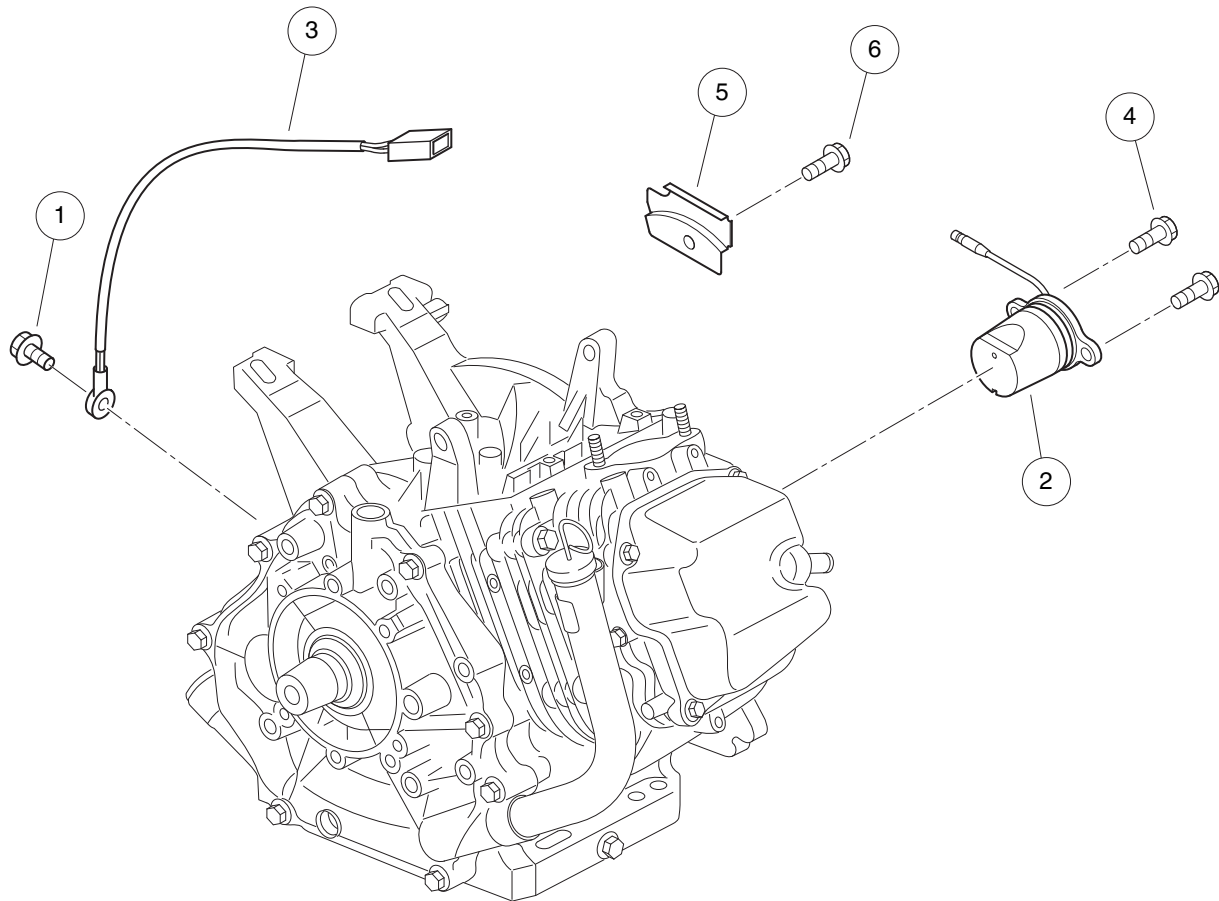


001004-001

SENSORS – EX40

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>105012601</u>	Bolt, Flange, M6x1.0x12, EX40	1
2	<u>105018001</u>	Sensor, Oil Level, EX40	1
3	<u>105018101</u>	Sensor, Temperature, EX40	1
4	<u>105018201</u>	Bolt, Oil Sensor, M6x1.0x14, EX40	2
5	<u>105018301</u>	Clamp, Oil Sensor Wire, EX40	1
6	<u>105018401</u>	Bolt, Tap, Oil Wire Clamp, EX40	1

8


G

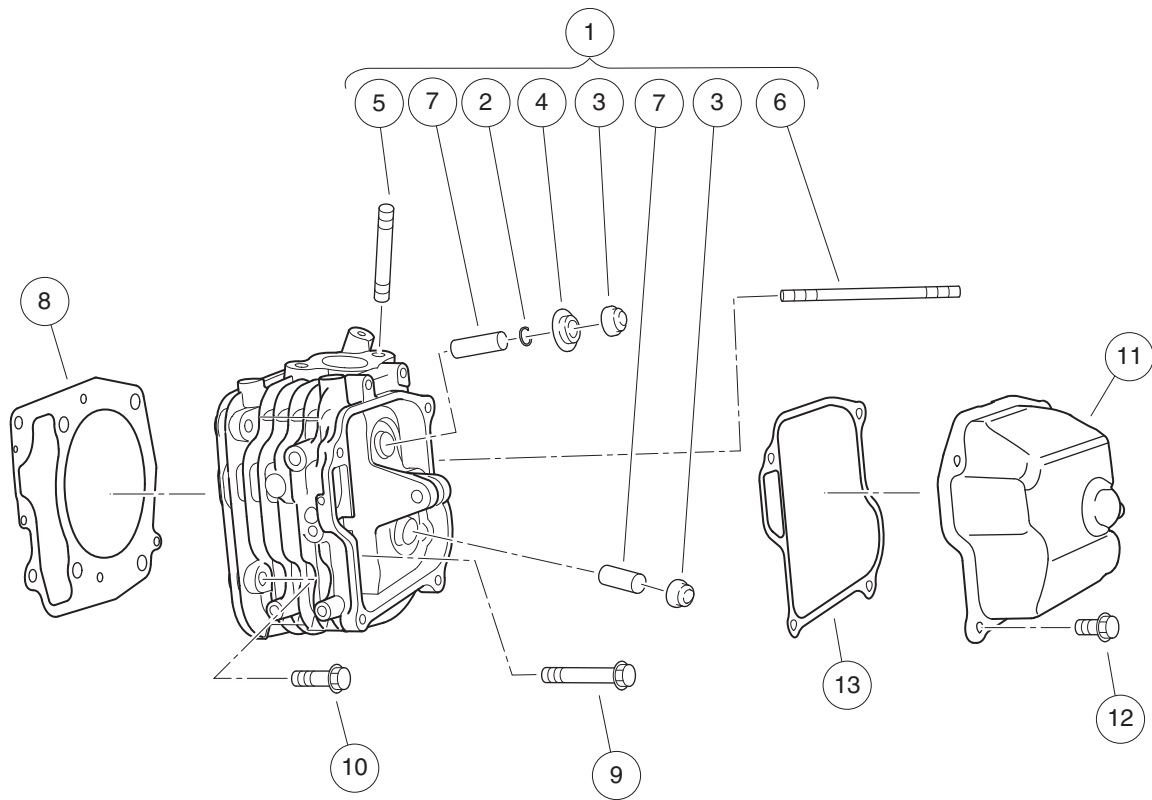

001005-002

CYLINDER HEAD – EX40

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>105011901</u>	Asm, Cylinder Head, EX40 (includes items 2 through 7)	1	
2	<u>105010101</u>	Clip, Retainer Plate, EX40	1	
3	<u>105010201</u>	Seal, Valve, EX40	2	
4	<u>105010301</u>	Plate, Retainer, EX40	1	
5	<u>105010801</u>	Stud, Mounting, Exhaust, EX40	2	
6	<u>105010901</u>	Stud, Mounting, Intake, EX40	2	
7	<u>105018501</u>	Guide, Valve, EX40	2	
8	<u>105012001</u>	Gasket, Head, EX40	1	
9	<u>105012101</u>	Bolt, Head, M10x1.25x75, EX40	4	
10	<u>105012201</u>	Bolt, Head, M8x1.25x35, EX40	2	
11	<u>105012301</u>	Cover, Rocker, EX40	1	
12	<u>105012601</u>	Bolt, Flange, M6x1.0x12, EX40	4	
13	47540040001	Gasket, Rocker Cover, Sub	1	

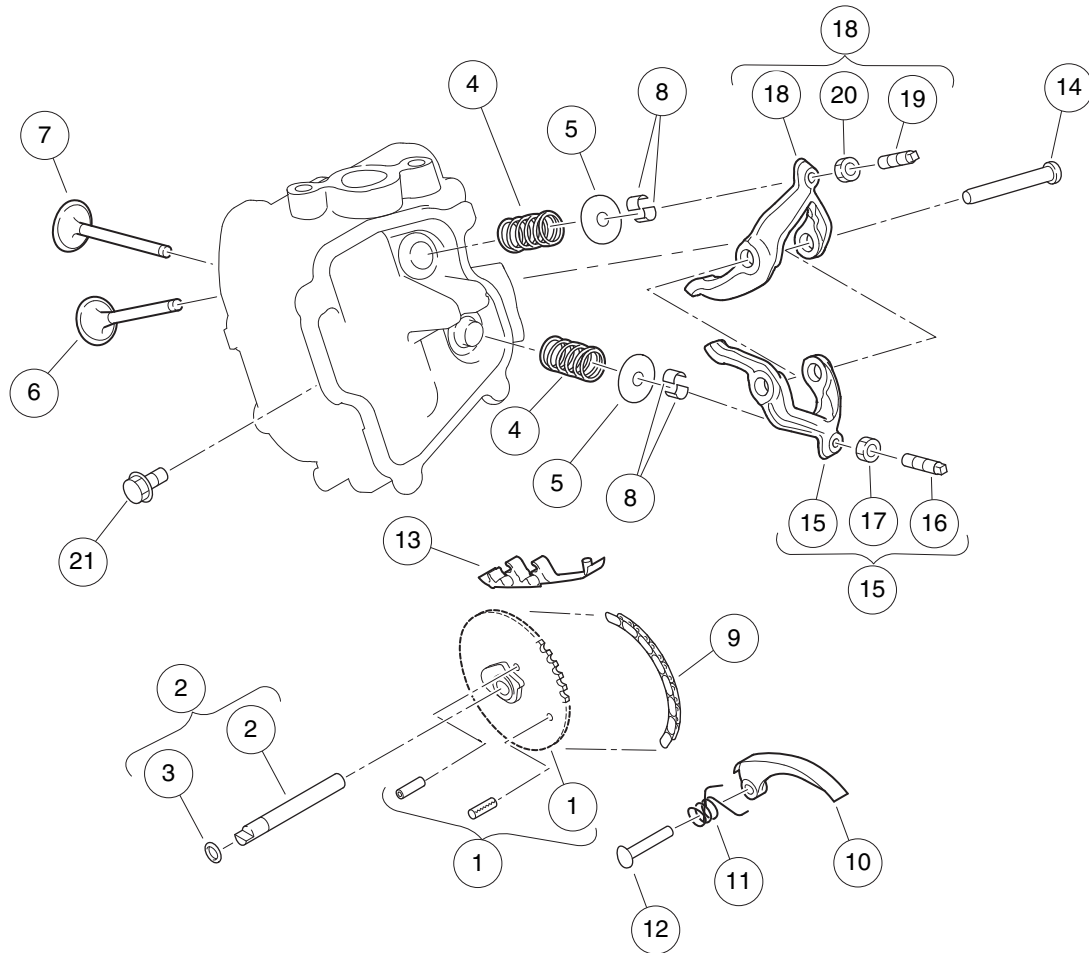


001006-001

VALVETRAIN AND TIMING CHAIN – EX40

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>105014201</u>	Asm, Cam/Chain Sprocket, EX40	1
2	<u>105014301</u>	Asm, Camshaft and O-ring, EX40 (includes item 3)	1
3	<u>105014401</u>	O-ring, Camshaft, EX40	1
4	<u>105014501</u>	Spring, Valve, EX40	2
5	<u>105014601</u>	Retainer, Spring, EX40	2
6	<u>105014701</u>	Valve, Intake, EX40	1
7	<u>105014801</u>	Valve, Exhaust, EX40	1
8	<u>105014901</u>	Collet, Valve, EX40	4
9	<u>105015001</u>	Chain, Timing, EX40	1
10	<u>105015101</u>	Tensioner, Chain, EX40	1
11	<u>105015201</u>	Spring, Tension, EX40	1
12	<u>105015301</u>	Pin, Tensioner, EX40	1
13	<u>105015401</u>	Guide, Chain, EX40	1
14	<u>105015501</u>	Shaft, Rocker, EX40	1
15	<u>105015601</u>	Asm, Rocker Arm, Intake, EX40 (includes items 16 and 17)	1
16	<u>105015801</u>	Screw, Adjust, Valve, EX40	1
17	<u>105015901</u>	Nut, Adjust, Valve, EX40	1
18	<u>105015701</u>	Asm, Rocker Arm, Exhaust, EX40 (includes items 19 and 20)	1
19	<u>105015801</u>	Screw, Adjust, Valve, EX40	1
20	<u>105015901</u>	Nut, Adjust, Valve, EX40	1
21	<u>105016001</u>	Bolt, Flange, M6x1.0x8, EX40	1

8

G

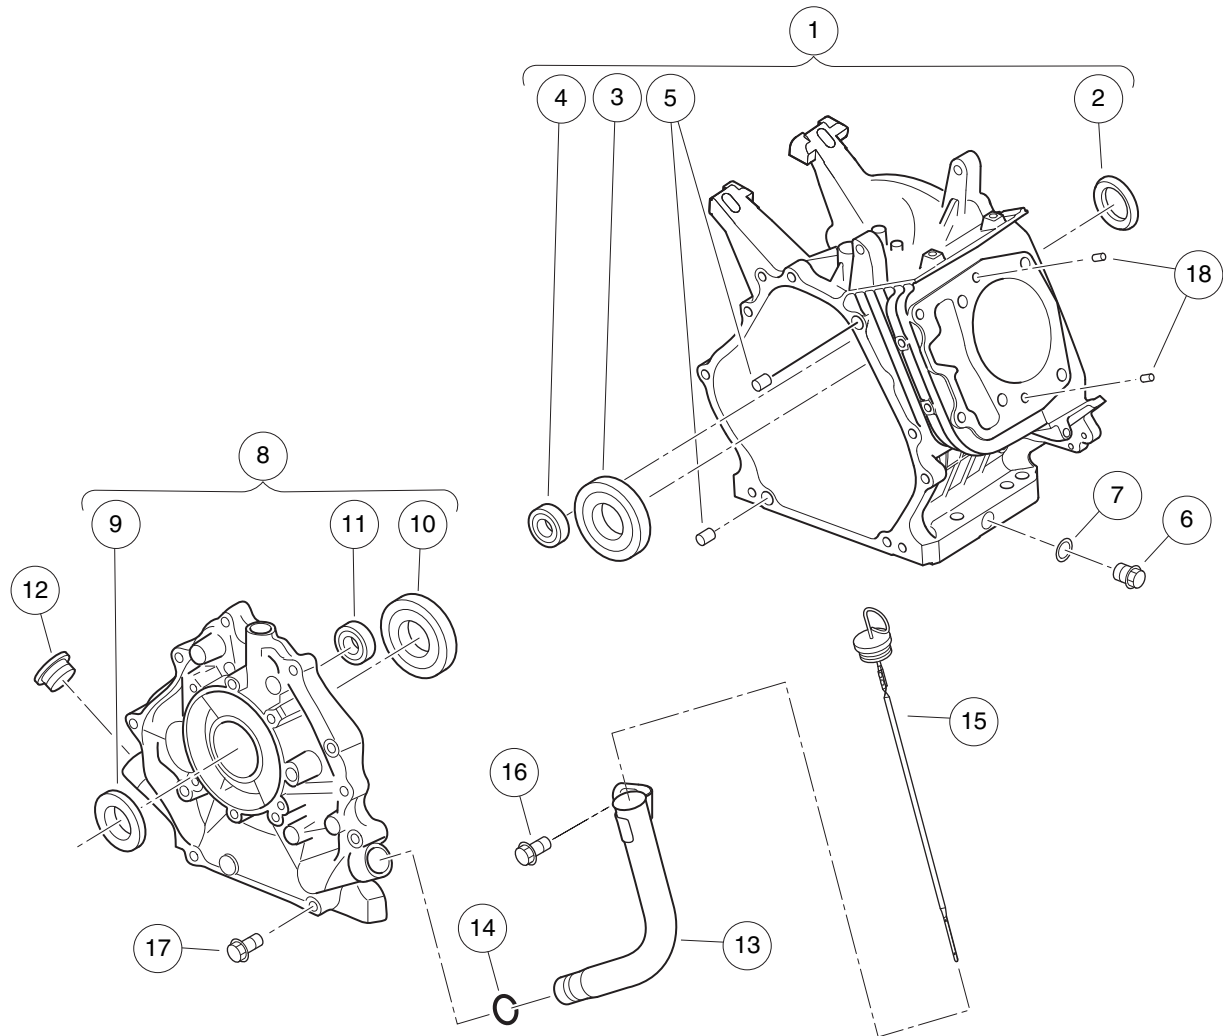


001007-001

CRANKCASE – EX40

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	105010001	Crankcase, EX40 (includes items 2 through 5)	1
2	<u>105010401</u>	Seal, Oil, Crankshaft, EX40	1
3	<u>105010501</u>	Bearing, Crankshaft, EX40	1
4	105010601	Bearing, Balance Shaft, EX40	1
5	<u>105010701</u>	Pin, Guide, Crankcase, EX40	2
6	105011001	Plug, Oil Drain, EX40	2
7	<u>105011101</u>	Gasket, Oil Drain Plug, EX40	2
8	105011201	Asm, Cover, Crankcase, EX40 (includes items 9 through 11)	1
9	<u>105010401</u>	Seal, Oil, Crankshaft, EX40	1
10	<u>105010501</u>	Bearing, Crankshaft, EX40	1
11	105010601	Bearing, Balance Shaft, EX40	1
12	<u>105011301</u>	Plug, Rubber, Crankcase, EX40	1
13	<u>105011401</u>	Tube, Oil Filler, EX40	1
14	<u>105011501</u>	O-ring, Oil Filler Tube, EX40	1
15	<u>105011601</u>	Dipstick, EX40	1
16	<u>105011701</u>	Bolt, Filler Tube, M8x1.25x12, EX40	1
17	<u>105011801</u>	Bolt, Case Cover, M8x1.25x38, EX40	8
18	<u>105012501</u>	Pin, Guide, Head, EX40	2

8
G

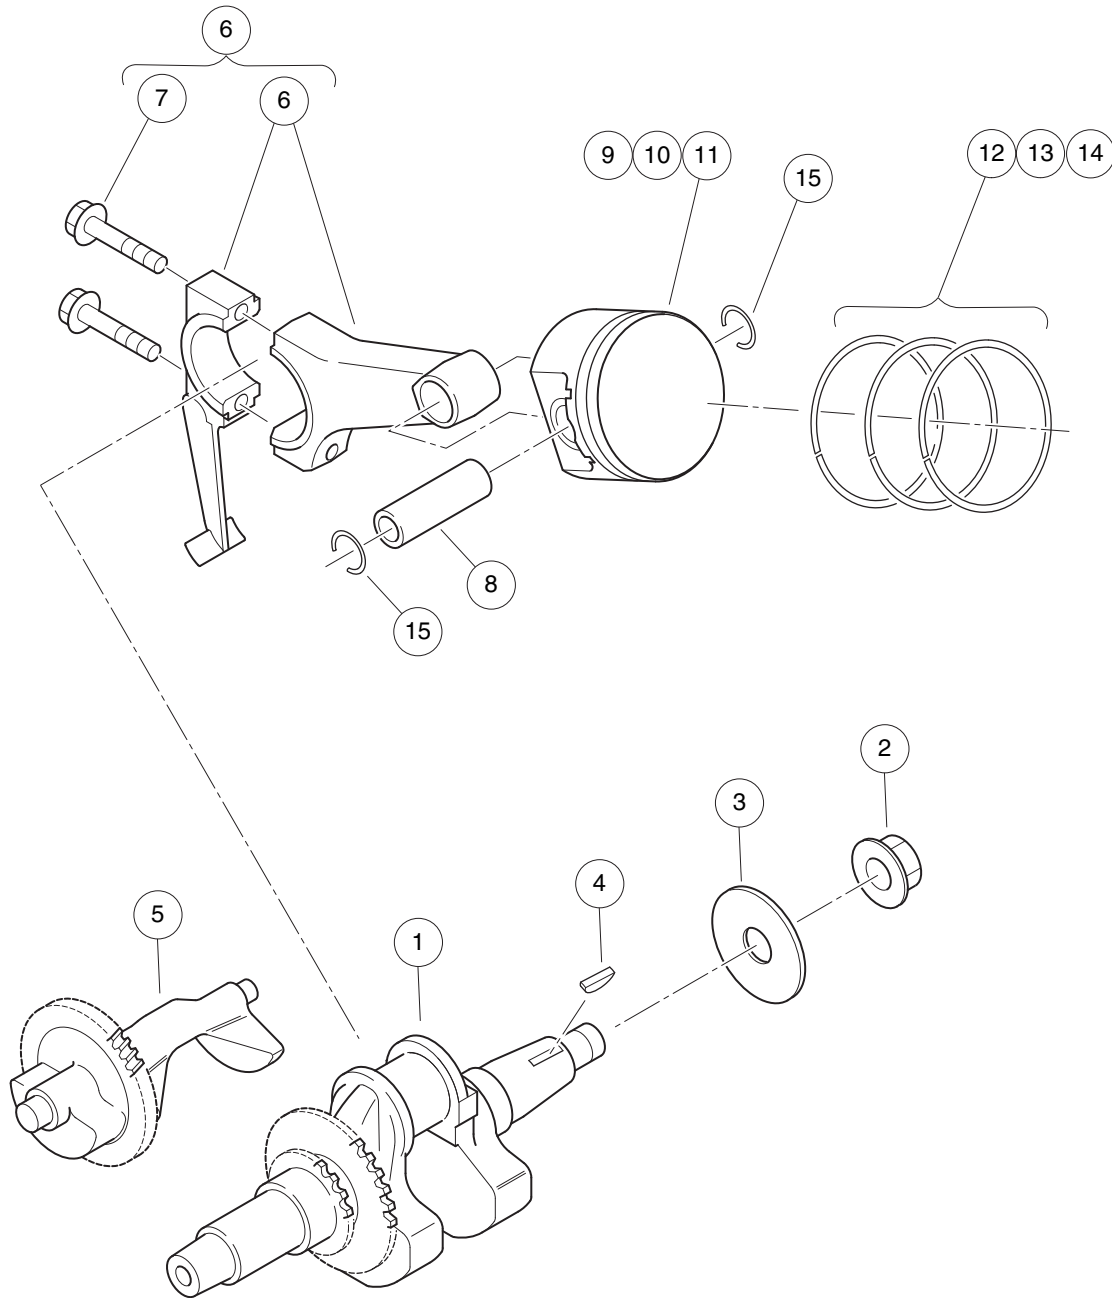

001008-001

CRANKSHAFT AND PISTON – EX40

ITEM	PART NO.	DESCRIPTION	QTY	8	G
		1 2 3 4			
1	105012701	Crankshaft, EX40	1		
2	105012801	Nut, Crankshaft M18x1.5 Ex40	1		
3	105012901	Washer, Crankshaft Ex40	1		
4	105013001	Key, Woodruff, Crankshaft, EX40	1		
5	105013101	Shaft, Balance, EX40	1		
6	105013201	Asm, Rod, Connecting, EX40 (includes item 7)	1		
7	105013301	Bolt, Rod M8x1.25x40 Ex40	2		
8	105013401	Pin, Piston, EX40	1		
9	105013501	Piston, Standard, EX40	1		
10	105013601	Piston, 0.25 mm Oversize, EX40	1		
11	105013701	Piston, 0.50 mm Oversize, EX40	1		
12	105013801	Set, Piston Ring, Standard, EX40	1		
13	105013901	Set, Piston Ring, 0.25 mm Oversize, EX40	1		
14	105014001	Set, Piston Ring, 0.50 mm Oversize, EX40	1		
15	105014101	Clip, Piston Pin, EX40	2		

 
8

G

FUEL SYSTEM – EFI

9

G




FUEL SYSTEM WITH SENDING UNIT, TOP FILL – EFI

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014116</u>	Nut, 1/4-20 Speed	1
2	<u>102411203</u>	Clamp, Hose, Ctb 14mm Dia.	1
3	<u>103306301</u>	Screw, Bhsc, 1/4-20 X 2.0	1
4	<u>105043501</u>	Asm, Fuel Line, Utility	1
5	<u>105093601</u>	Retention Strap, Tank	1
6	<u>105215401</u>	Asm, Tank, Fuel, Top, Complete, w/Sending Unit (includes items 7 through 10)	1
7	<u>103372101</u>	Cap, Fuel Tank, Gas, Ratchet	1
8	<u>103905201</u>	Assembly, Vent, Fuel, 1/4 Inch O.D.	1
9	<u>103944301</u>	Grommet, Fuel Tank, Vent	1
10	<u>105143301</u>	Wire, Ground, Fuel Tank	1

9


G

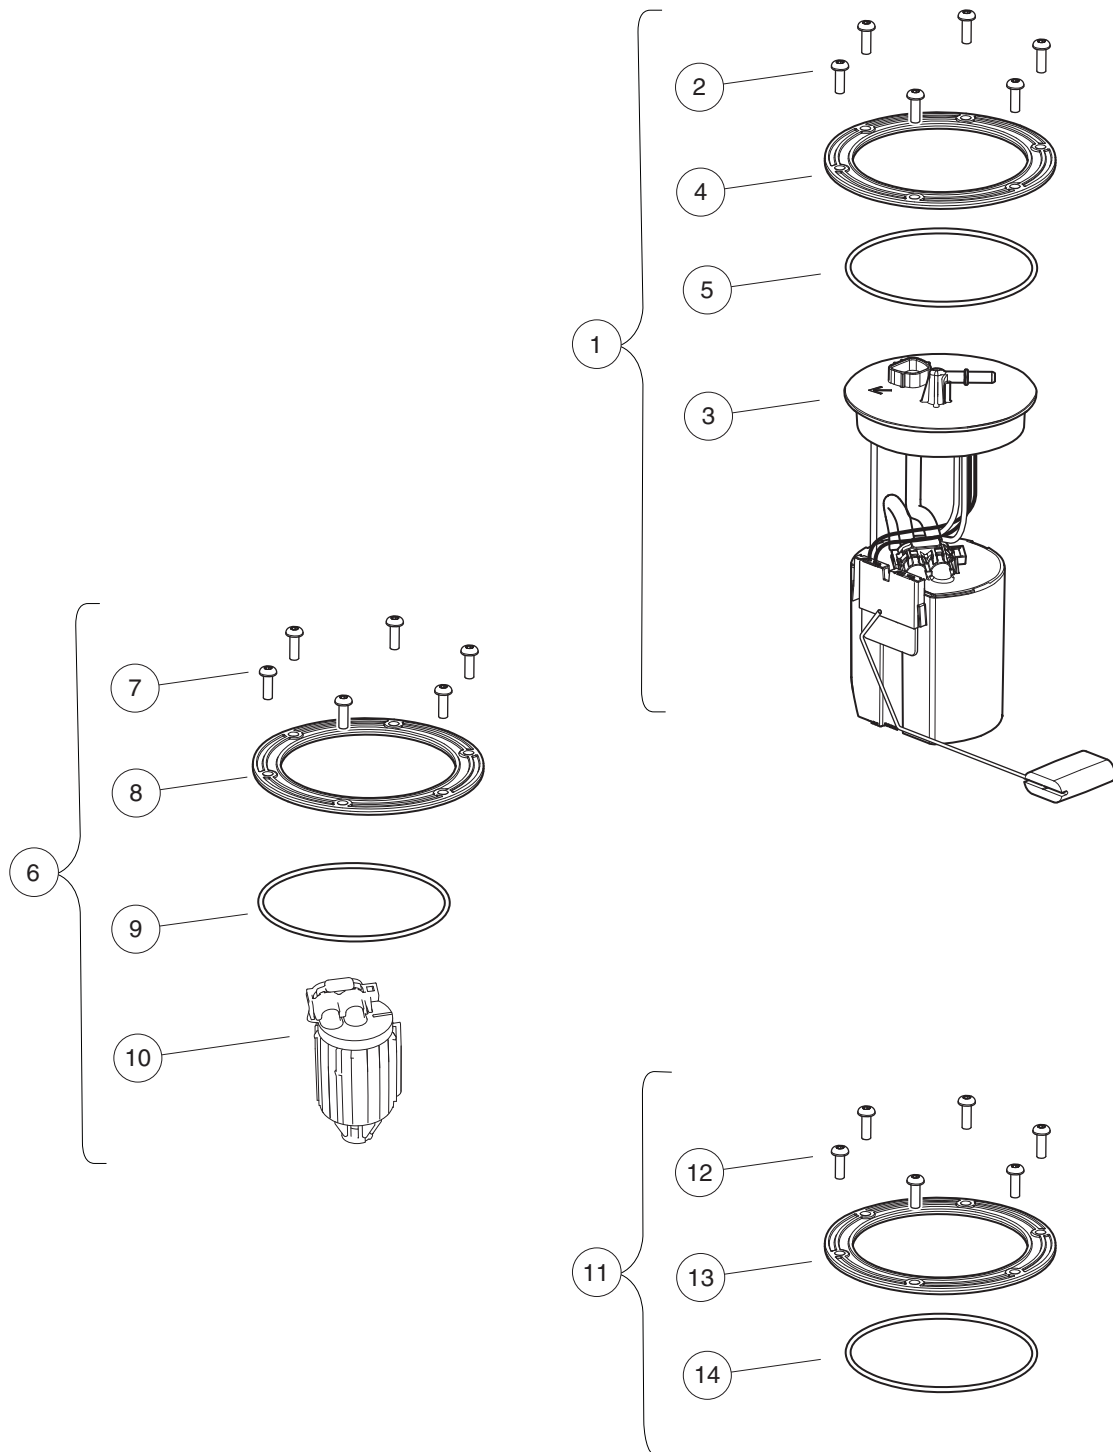

000977-005

FUEL TANK KITS – EFI

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>105282901</u>	Kit, Fuel Pump Module (includes items 2 through 5)	1	
2	<u>102025801</u>	Screw, 1/4-20 X .75 Torx Pn Hd	6	
3	<u>105043401</u>	Fuel Pump Module, with Sending Unit	1	
4	<u>105043801</u>	Fuel Module, Hold Down Ring	1	
5	<u>105043901</u>	O-Ring, Fuel Module	1	
6	<u>105282902</u>	Kit, Fuel Filter (includes items 7 through 10)	1	
7	<u>102025801</u>	Screw, 1/4-20 X .75 Torx Pn Hd	6	
8	<u>105043801</u>	Fuel Module, Hold Down Ring	1	
9	<u>105043901</u>	O-Ring, Fuel Module	1	
10	<u>105073001</u>	Fuel Filter, EX40, EFI	1	
11	<u>105282903</u>	Kit, O-ring (includes items 12 through 14)	1	
12	<u>102025801</u>	Screw, 1/4-20 X .75 Torx Pn Hd	6	
13	<u>105043801</u>	Fuel Module, Hold Down Ring	1	
14	<u>105043901</u>	O-Ring, Fuel Module	1	

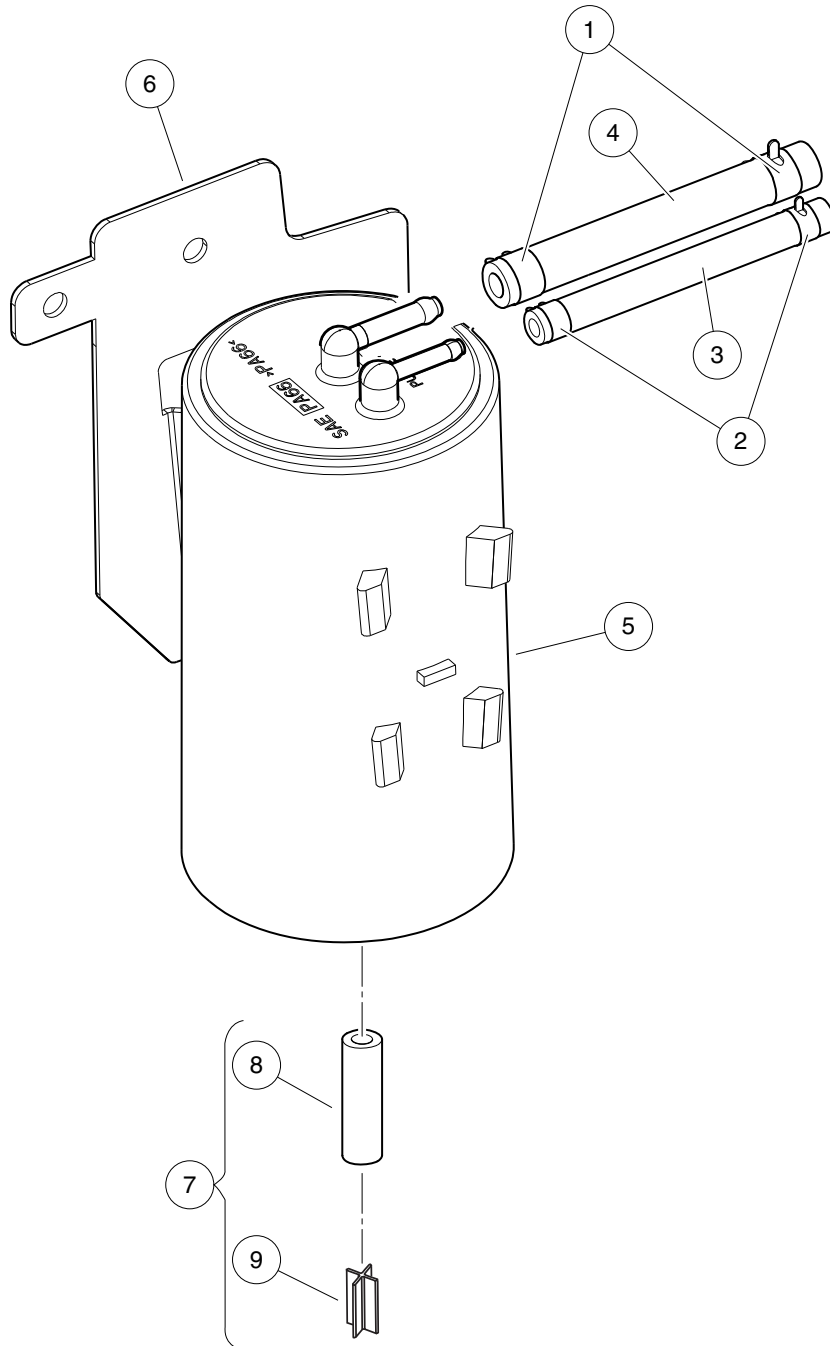


000980-005

CARBON CANISTER – EFI, CARRYALL 100

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>1012649</u>	Clamp, 0.460 Red Hose	2	
2	<u>1013746</u>	Clamp, 0.301 ID Hose	2	
3	<u>1015137</u>	Fuel Line, 3/16 (available by the foot)	1	
4	<u>102865101</u>	Fuel Line, 1/4 (available by the foot)	1	
5	<u>103372401</u>	Canister, Carbon	1	
6	<u>103452001</u>	Brkt, Mtg, Carbon Canister	1	
7	<u>103756401</u>	Asm, Vent Line, Carbon Canister (includes items 8 and 9)	1	
8	N/A	Hose, Vent, 5/16 I.D., Bulk	1	
9	N/A	Vent, Barb, 5/16 I.D. Hose	1	


1

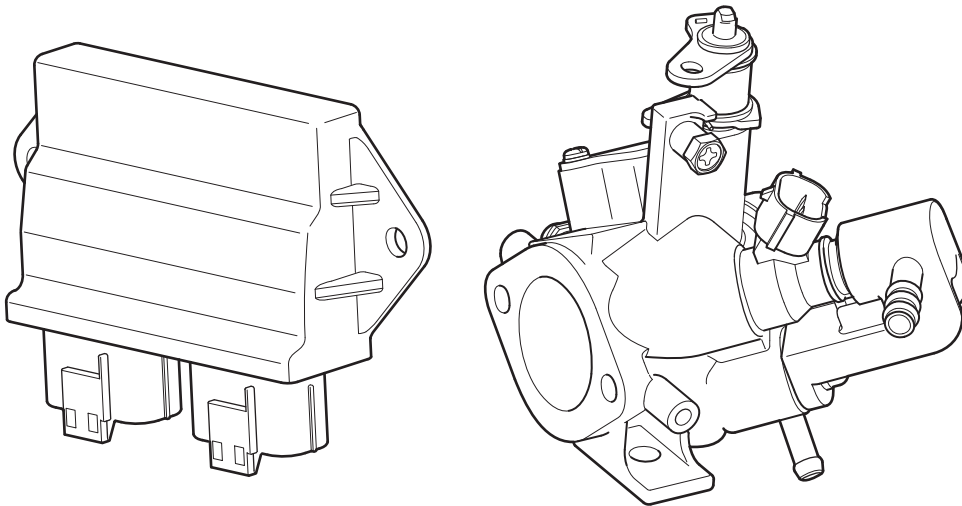

000964-001

THROTTLE BODY AND ECU – EFI


ITEM	PART NO.	DESCRIPTION	QTY	9
1	<u>105017201</u>	1 2 3 4 Asm, Throttle Body/Fuel Injector with ECU, EX40	1	G

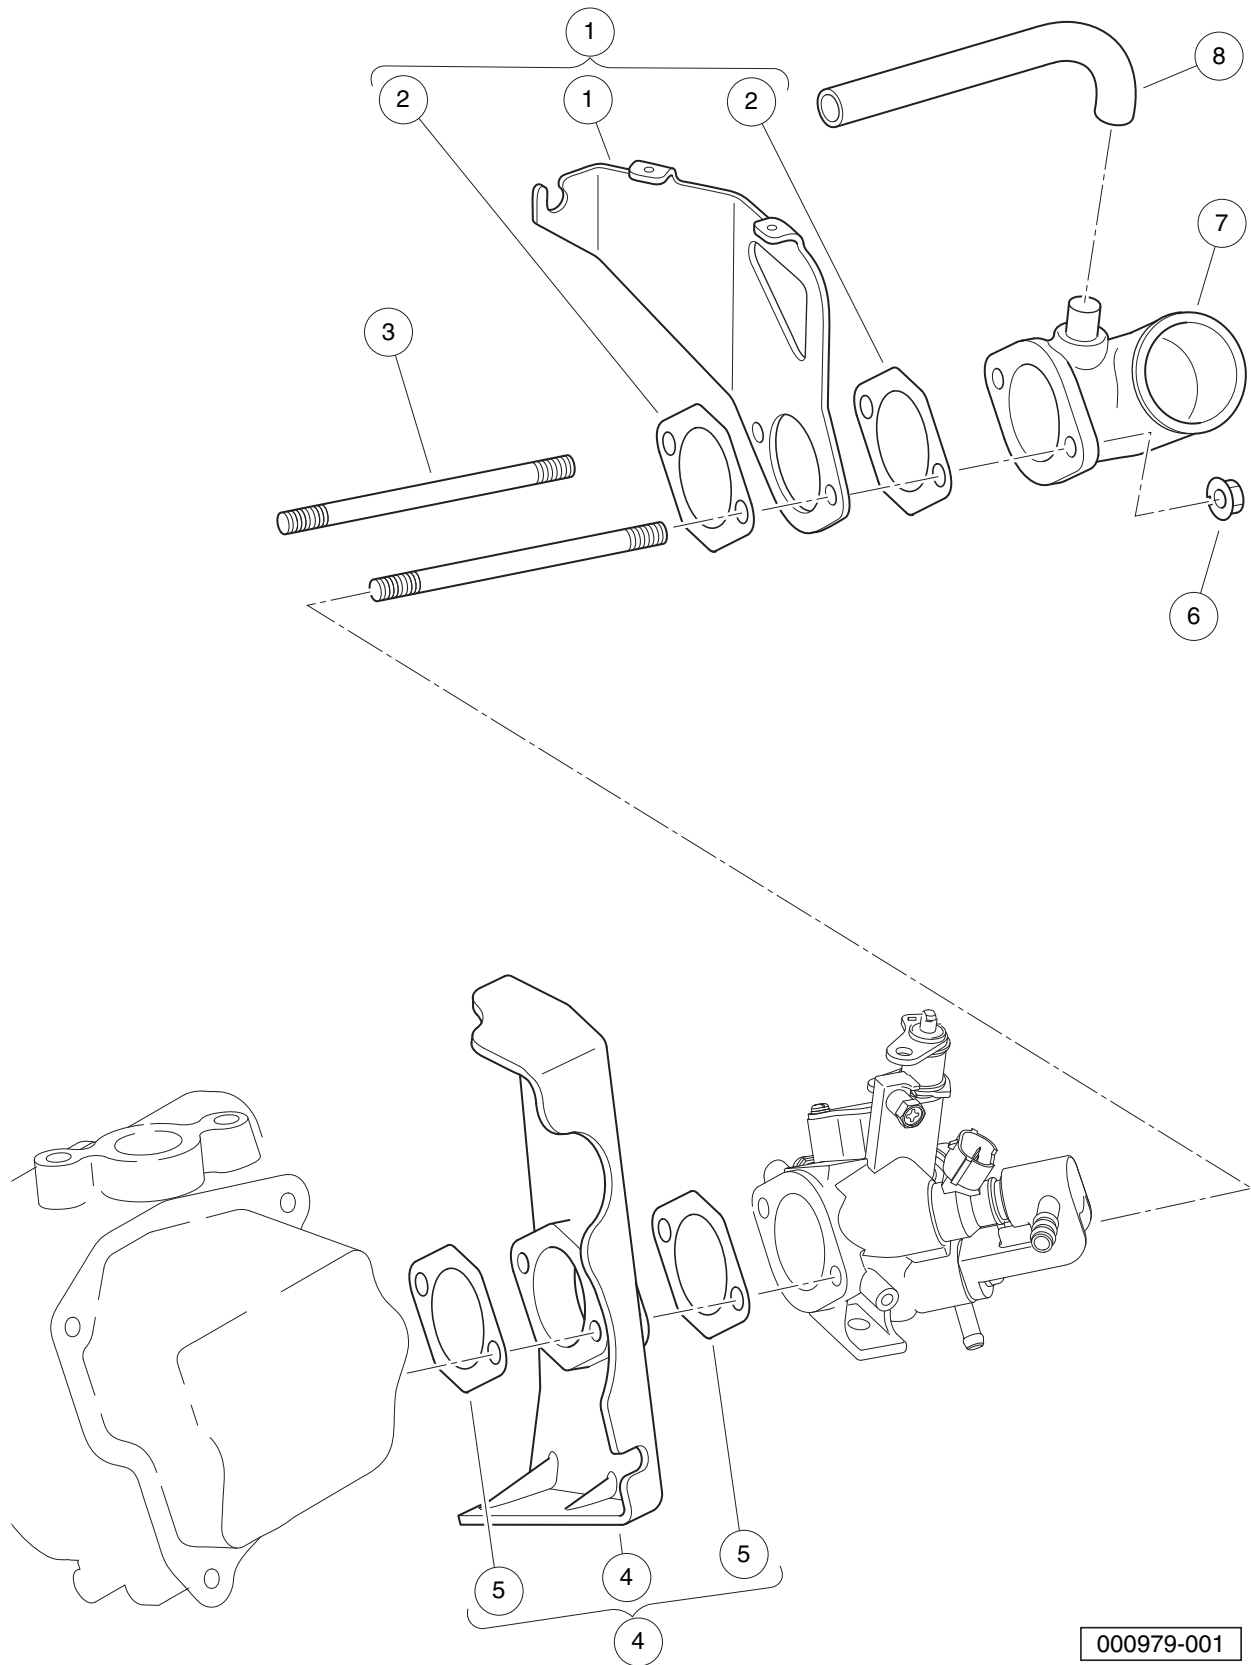

000979-001

THROTTLE BODY MOUNTING – EFI


ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>103983501</u>	Bracket, Operation, EX40 (includes item 2)	1	
2	<u>105016201</u>	Gasket, Insulator, EX40	2	
3	<u>105010901</u>	Stud, Mounting, Intake, EX40	2	
4	<u>105016101</u>	Insulator, EX40 (includes item 5)	1	
5	<u>105016201</u>	Gasket, Insulator, EX40	2	
6	<u>105016301</u>	Nut, Intake Adapter, M6x1.0, EX40	2	
7	<u>105016401</u>	Adapter, Air Intake, EX40	1	
8	<u>105016501</u>	Hose, Breather, EX40	1	

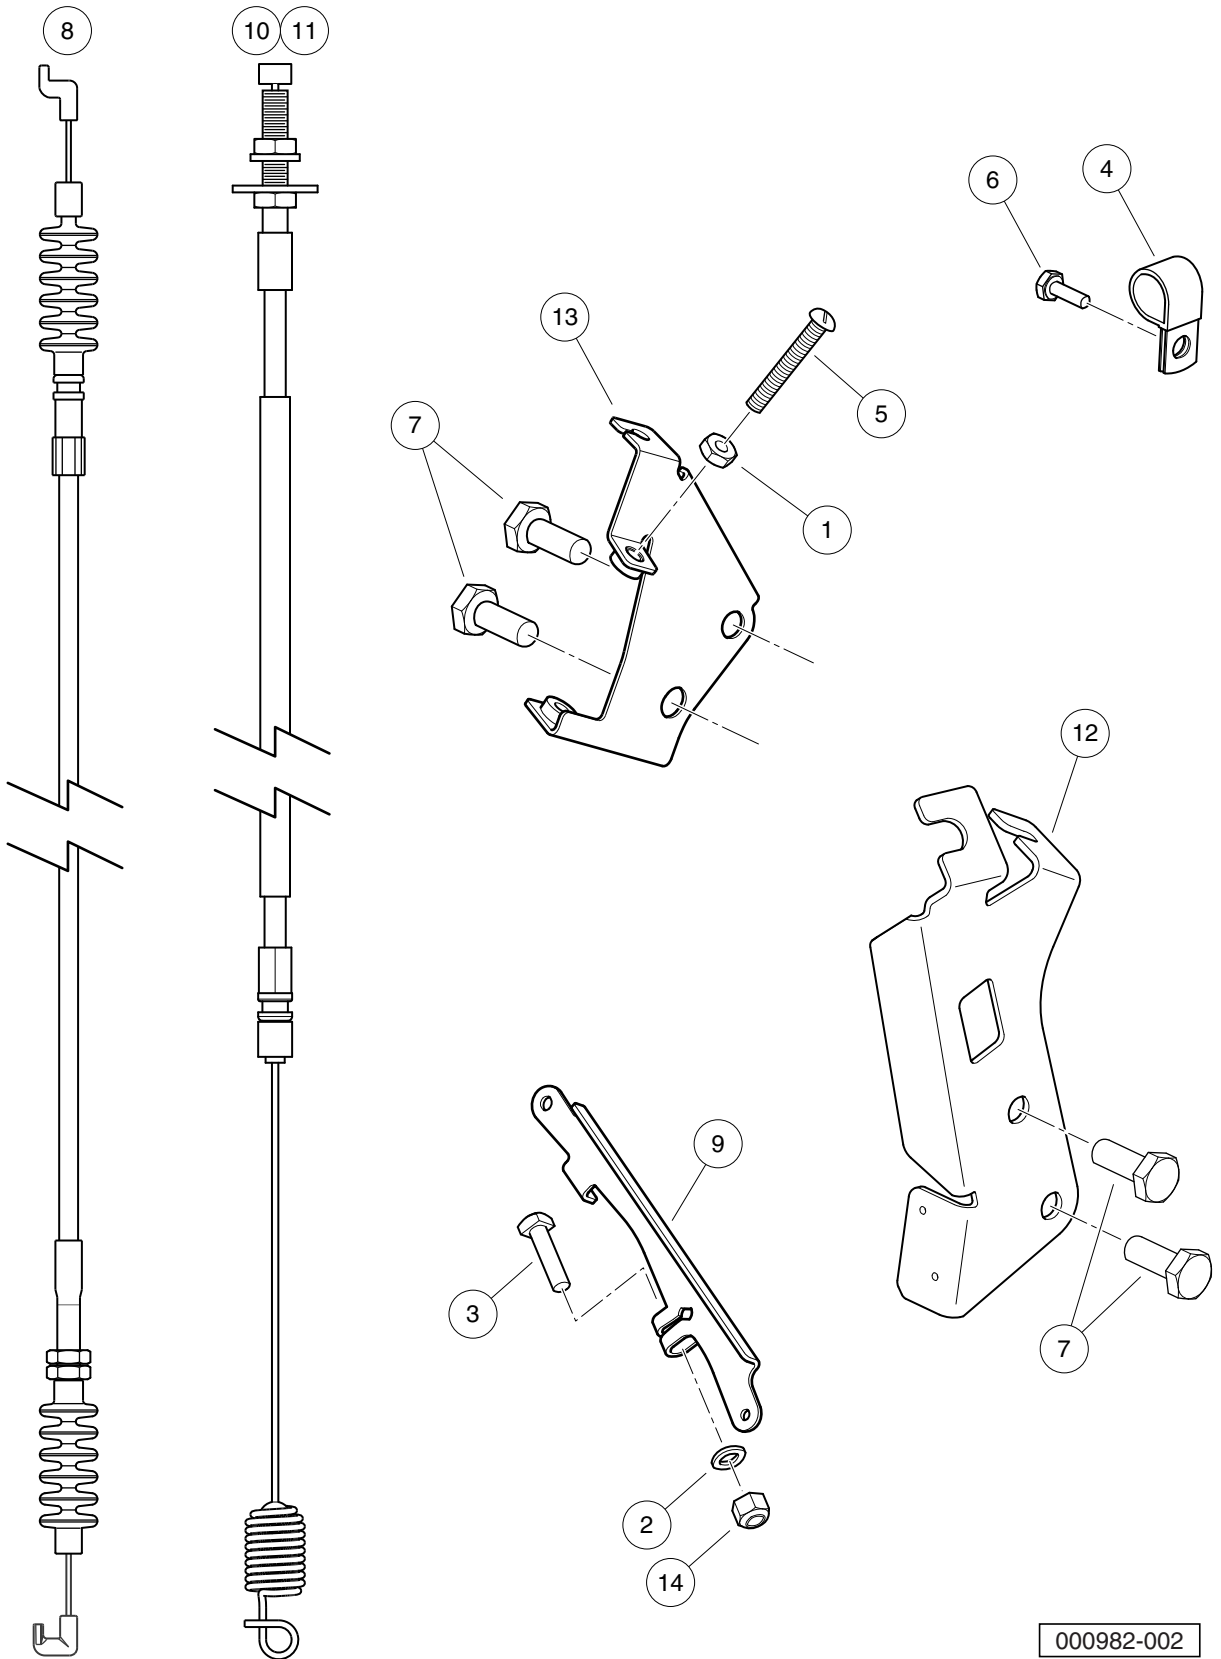

000982-002

GOVERNOR AND ACCELERATOR CABLES – EFI

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>1011114</u>	Nut, M6-1.00 Hex	1	
2	<u>1014007</u>	Washer, 1/4, Flat	1	
3	<u>101886101</u>	Screw, 1/4-20 X 1.00, Square-Head	1	
4	<u>102410604</u>	P-clamp, Insulated, 0.625 Inch	1	
5	<u>102476401</u>	Bolt, Stop, Pedal	1	
6	<u>102490301</u>	Bolt, M6 X 1 X 16, Loctite	1	
7	<u>102498201</u>	Bolt, M10 X 1.25 X 25, Loctite	4	
8	<u>103978001</u>	Cable, Governor, EX40	1	
9	<u>104023501</u>	Arm, Governor, ED65	1	
10	<u>105007402</u>	Cable, Accelerator, Utility, Low-Speed	1	
11	<u>105007403</u>	Cable, Accelerator, Utility, Std-Speed	1	
12	<u>105135101</u>	Bracket, Cable, FNR/Accelerator, ED65	1	
13	<u>105144401</u>	Weldment, Governor Bracket	1	
14	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	1	

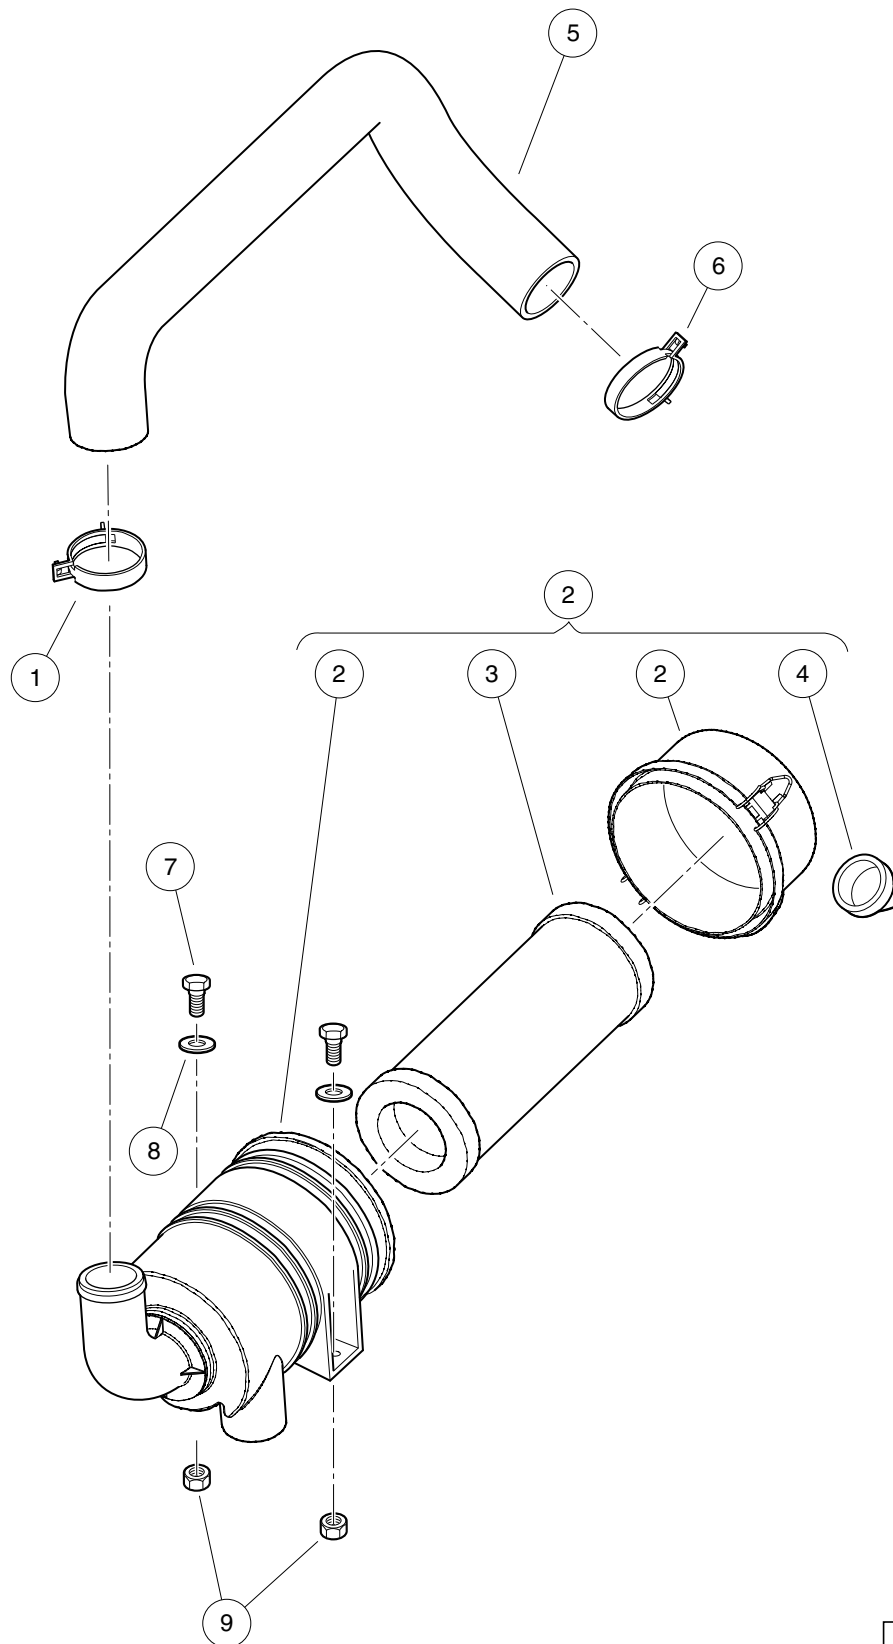

000983-001

AIR FILTER SYSTEM AND INTAKE HOSE – EFI

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>102411209</u>	Clamp, Hose, Ctb 55mm Dia.	1	
2	<u>105009101</u>	Air Cleaner, Utility with EFI (includes items 3 and 4)	1	
3	<u>102558201</u>	Air Filter, 4 Inch	1	
4	<u>102725501</u>	Valve, Evacuator, Filter Air	1	
5	<u>105043001</u>	Hose, Air Intake, Utility with EFI	1	
6	<u>105088501</u>	Clamp, Ctb, 49mm Dia, W/clip	1	
7	1218	Screw, 5/16-18 X 1.25 Hex-Head Cap	2	
8	<u>1241</u>	Washer, 5/16 Type A Flat	2	
9	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	


9

G

EXHAUST SYSTEM – EX40 ENGINE

10

G

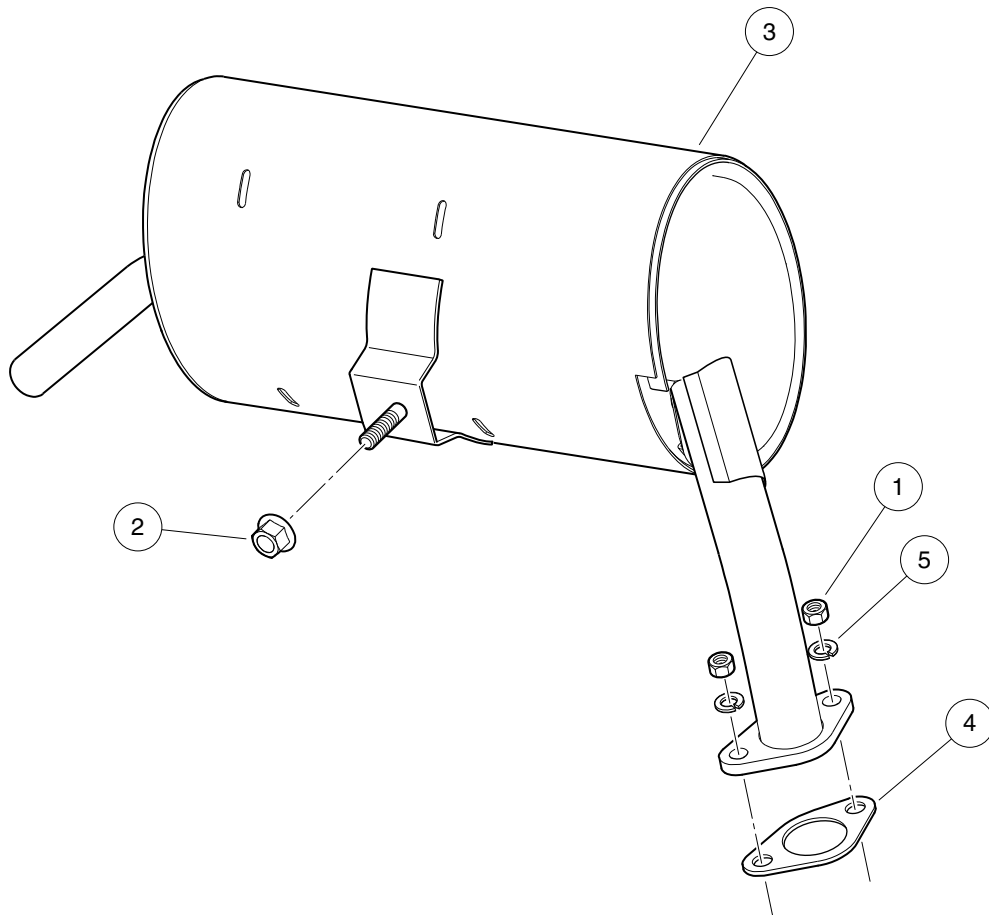

000948-001

EXHAUST SYSTEM – UTILITY

ITEM	PART NO.	DESCRIPTION	QTY	10
		1 2 3 4		G
1	<u>1012528</u>	Nut, M8-1.25 Hex	2	
2	<u>102617201</u>	Nut, Flanged, M10 X 1.5, Mechanically Deformed	1	
3	<u>105214101</u>	Exhaust, Low, Ex40, Utl	1	
4	<u>47539957001</u>	Gasket, Exhaust, Ex40, Graphite	1	
5	<u>7174</u>	Lockwasher, 5/16 Split	2	


10

G

DRIVE BELT AND CLUTCHES – EX40

11

G

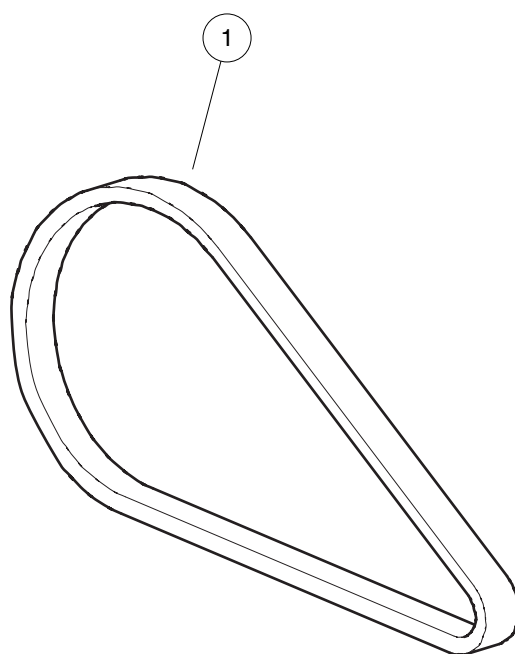


000918-001

DRIVE BELT – KEY-START VEHICLES WITH EFI

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>103974102</u>	1 2 3 4 Belt, Drive, Key-Start	1

11


G

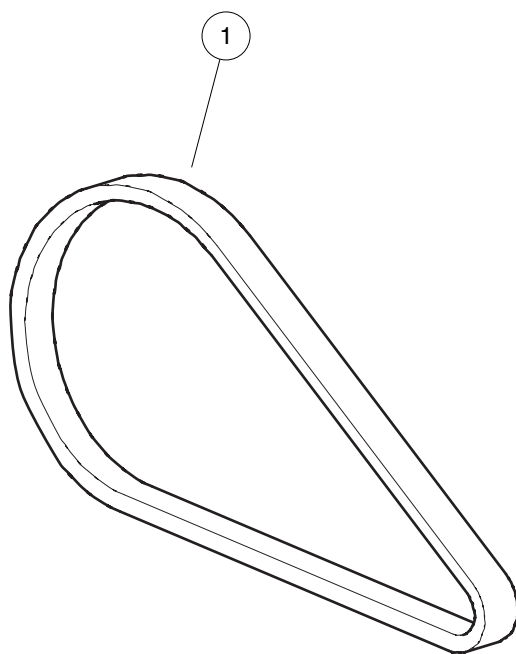

000918-001

DRIVE BELT – PEDAL-START VEHICLES WITH EFI

ITEM	PART NO.	DESCRIPTION	QTY	11
1	<u>105245801</u>	1 2 3 4 Belt, Drive, Pedal-Start	1	G

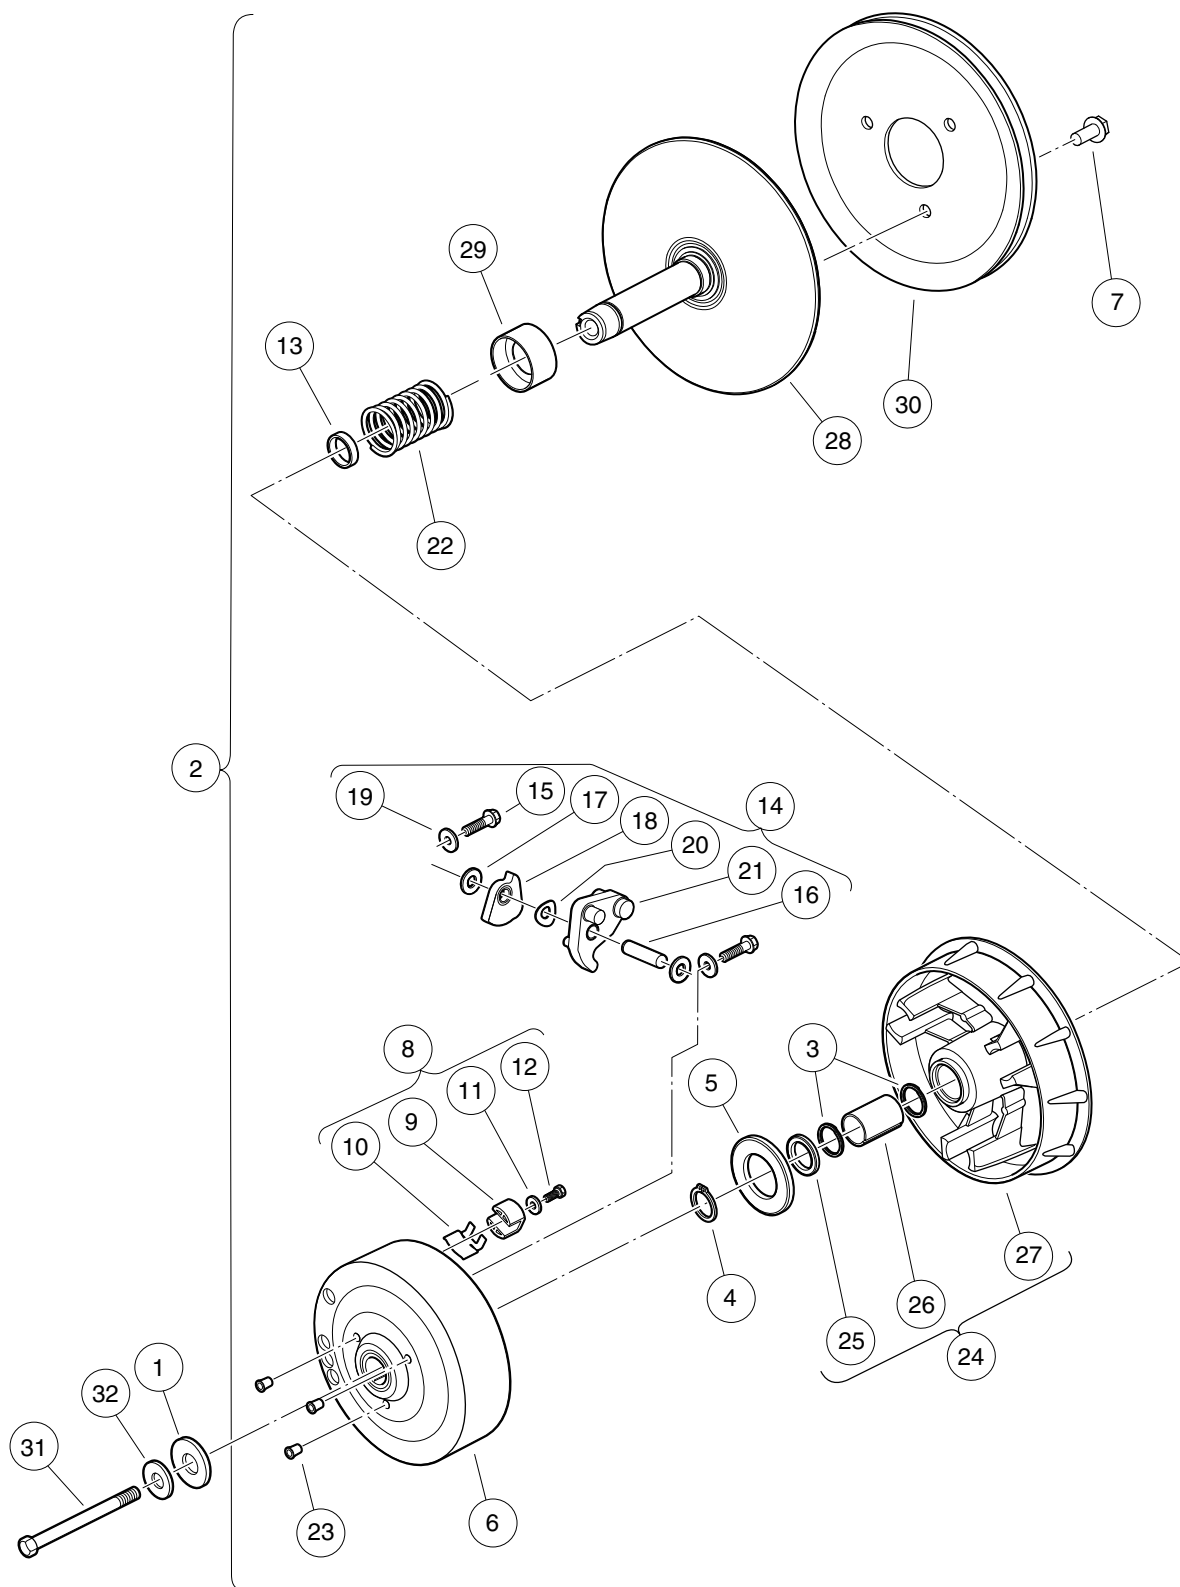


000958-002

DRIVE CLUTCH – KEY-START VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102491501</u>	Washer, Hard, M10	1
2	<u>103973902</u>	Clutch, Drive, Key-Start (includes items 3 through 30)	1
3	<u>1014056</u>	Ring, Spiral Backup	2
4	<u>1014057</u>	Ring, 0.810" Internal Retaining	1
5	<u>1014058</u>	Thrust Washer	1
6	<u>1014059</u>	Drive Hub Assy, Drive Clutch	1
7	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	3
8	<u>1014453</u>	Kit, Drive Clutch Button (includes items 9 through 12)	1
9	<u>1014062</u>	Driver, Drive Clutch	3
10	<u>1014287</u>	Spring, Drive Button	3
11	<u>183</u>	Washer, #10, Type A, Flat	3
12	<u>8450</u>	Screw, #10-24 X 0.50, Hex-Head	3
13	<u>1016289</u>	Spacer, Fixed Face Shaft	1
14	<u>1016801</u>	Kit, Drive Clutch Weight (includes items 15 through 21)	1
15	<u>1014063</u>	Screw, 1/4-20 X 1.00, Hex Head	6
16	N/A	Pin, Dowel, 0.3752 x 1.50	3
17	<u>1014065</u>	Washer, Flat, 0.38" ID, Delrin	6
18	N/A	Clutch Weight, Secondary	3
19	N/A	Washer	6
20	<u>1016201</u>	Washer, Wave	3
21	N/A	Weight, Primary	3
22	<u>1016901</u>	Spring, Drive Clutch	1
23	N/A	Cap Plug	3
24	<u>103974201</u>	Asm, Sheave, Moveable, Drive, Wr (includes items 25 through 27)	1
25	<u>1014055</u>	Retainer	1
26	N/A	Bushing, Split, Drive Clutch	1
27	N/A	Sheave, Moveable, Drive, Wr	1
28	<u>103974401</u>	Sheave, Fixed, Drive, Wr	1
29	<u>103984601</u>	Spacer, Idler, Drive	1
30	<u>105096101</u>	Pulley, 7.3 Inch Effective Dia	1
31	<u>103976101</u>	Screw, 3/8-24x5.75, Patch	1
32	<u>334</u>	Washer, 3/8, Type A, Flat	1

11

G

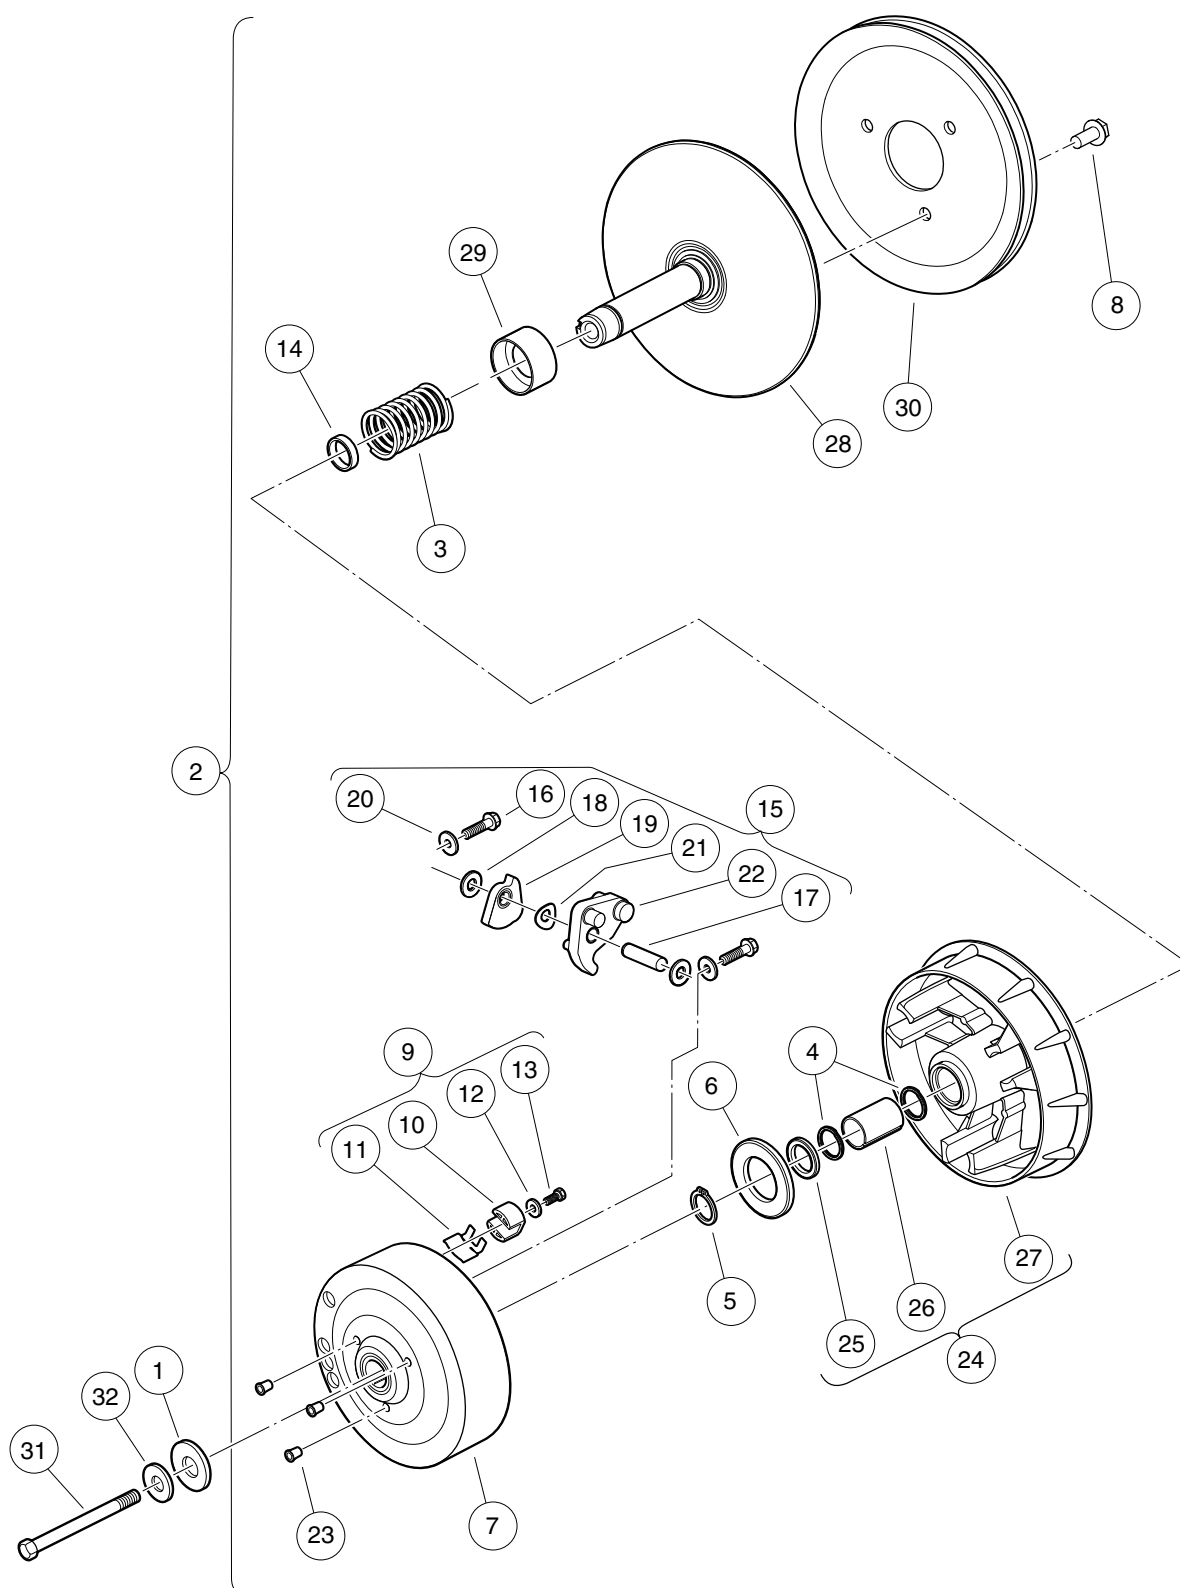


000958-001

DRIVE CLUTCH – PEDAL-START VEHICLES WITH EFI

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102491501</u>	Washer, Hard, M10	1
2	<u>103973901</u>	Clutch, Drive, Pedal-Start (includes items 3 through 30)	1
3	<u>1014051</u>	Spring, Drive Clutch	1
4	<u>1014056</u>	Ring, Spiral Backup	2
5	<u>1014057</u>	Ring, 0.810" Internal Retaining	1
6	<u>1014058</u>	Thrust Washer	1
7	<u>1014059</u>	Drive Hub Assy, Drive Clutch	1
8	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	3
9	<u>1014453</u>	Kit, Drive Clutch Button (includes items 10 through 13)	1
10	<u>1014062</u>	Driver, Drive Clutch	3
11	<u>1014287</u>	Spring, Drive Button	3
12	<u>183</u>	Washer, #10, Type A, Flat	3
13	<u>8450</u>	Screw, #10-24 X 0.50, Hex-Head	3
14	<u>1016289</u>	Spacer, Fixed Face Shaft	1
15	<u>1016801</u>	Kit, Drive Clutch Weight (includes items 16 through 22)	1
16	<u>1014063</u>	Screw, 1/4-20 X 1.00, Hex Head	6
17	N/A	Pin, Dowel, 0.3752 x 1.50	3
18	<u>1014065</u>	Washer, Flat, 0.38" ID, Delrin	6
19	N/A	Clutch Weight, Secondary	3
20	N/A	Washer	6
21	<u>1016201</u>	Washer, Wave	3
22	N/A	Weight, Primary	3
23	N/A	Cap Plug	3
24	<u>103974201</u>	Asm, Sheave, Moveable, Drive, Wr (includes items 25 through 27)	1
25	<u>1014055</u>	Retainer	1
26	N/A	Bushing, Split, Drive Clutch	1
27	N/A	Sheave, Moveable, Drive, Wr	1
28	<u>103974401</u>	Sheave, Fixed, Drive, Wr	1
29	<u>103984601</u>	Spacer, Idler, Drive	1
30	<u>105096101</u>	Pulley, 7.3 Inch Effective Dia	1
31	<u>103976101</u>	Screw, 3/8-24x5.75, Patch	1
32	<u>334</u>	Washer, 3/8, Type A, Flat	1

11

G

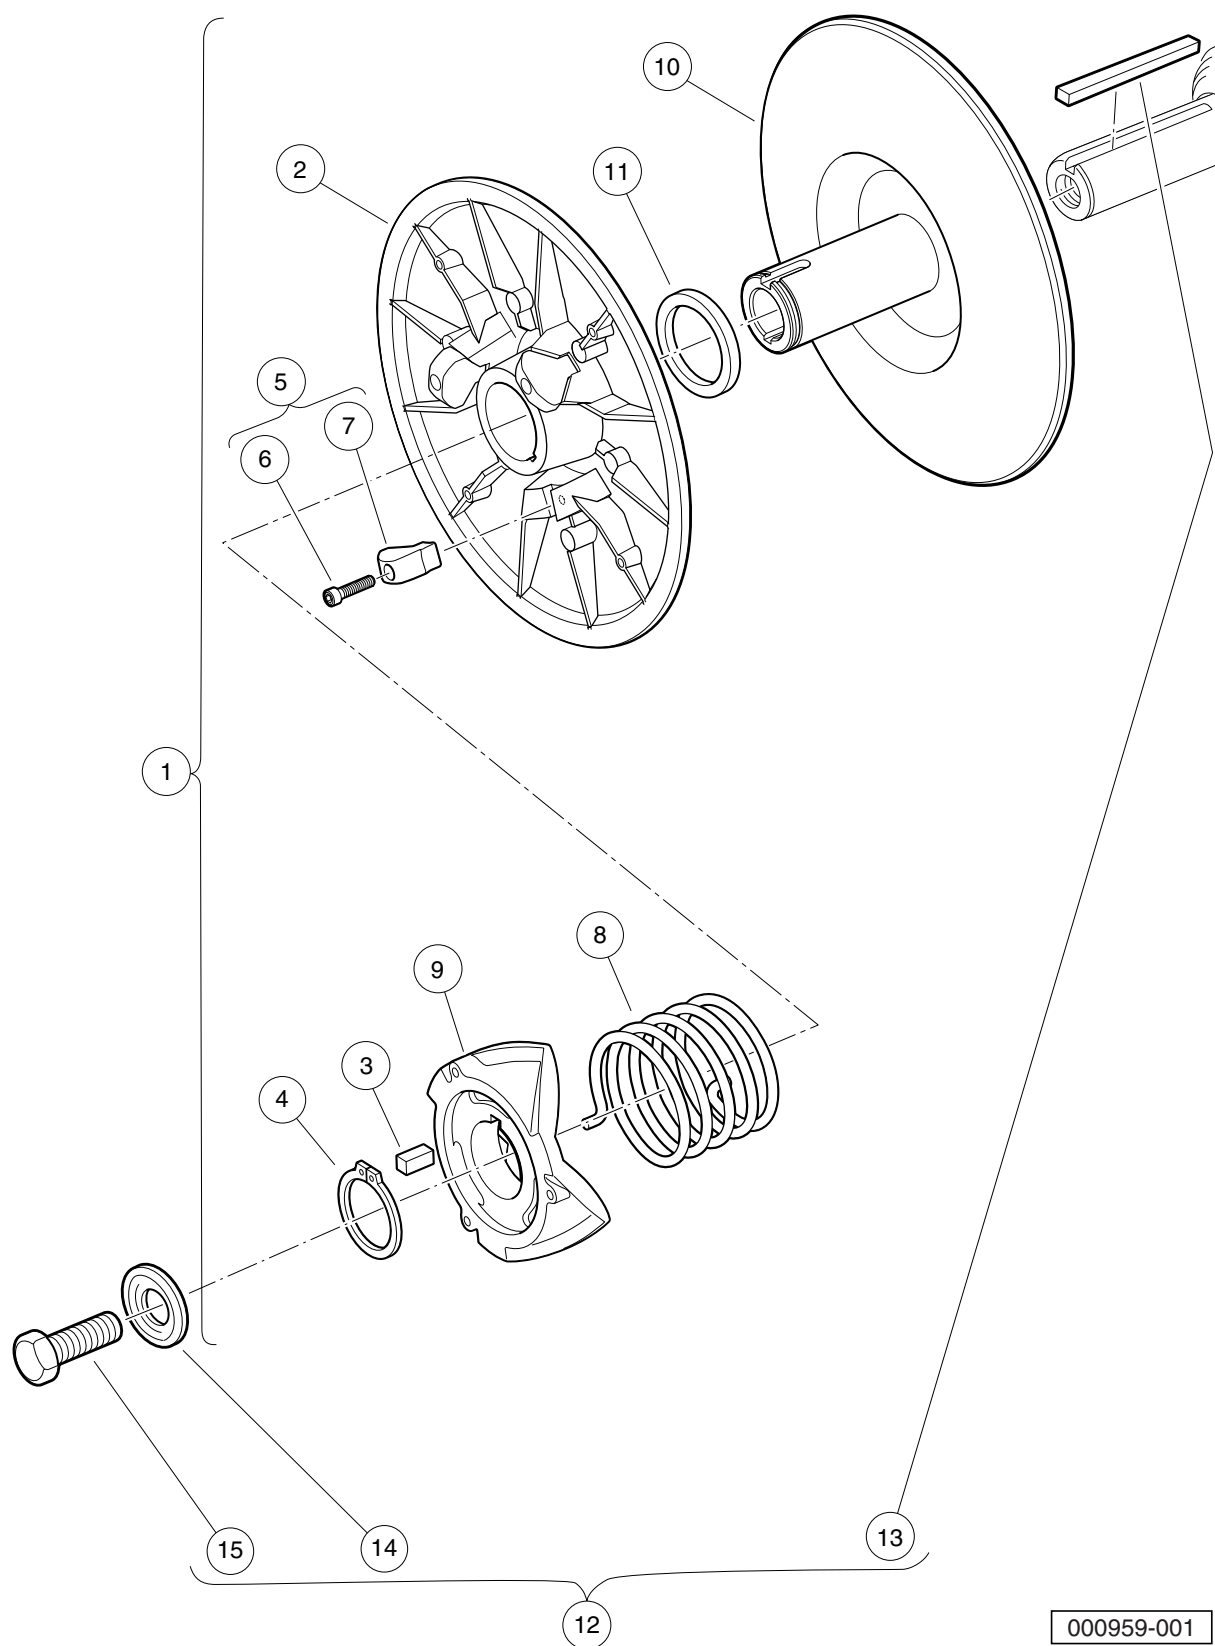

000959-001

DRIVEN CLUTCH (STANDARD SPEED) – KEY START AND PEDAL START

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103974002</u>	Clutch, Driven, Std-Speed, Key and Pedal Start (includes items 2 through 11)	1
2	<u>1014072</u>	Movable-Face Assembly with Bushing	1
3	<u>1014078</u>	Key, Driven Clutch	1
4	<u>1014080</u>	Ring, Retaining	1
5	<u>1014454</u>	Kit, Driven Clutch Button (includes items 6 and 7)	1
6	<u>1012836</u>	Screw, #8-32 X 3/4, Socket-Head Cap	3
7	N/A	Button, Drive	3
8	<u>1017145</u>	Spring, Driven Clutch, 55 Degree	1
9	<u>1017686</u>	Cam, Driven Clutch	1
10	<u>103975301</u>	Sheave, Fixed, Driven, Wr	1
11	<u>104025101</u>	Washer, Acetal, Driven Clutch	1
12	<u>AM10419</u>	Kit, Clutch Repair (includes items 13 through 15)	1
13	<u>101833401</u>	Key, 3/16 Sq X 1.50"	1
14	<u>102155801</u>	Washer, Driven Clutch	1
15	<u>102242101</u>	Screw, 5/16-18 X 3/4 Hex-Head with Patch	1

11

G


11

G

TRANSAXLE (FUJI ED65)

12

G

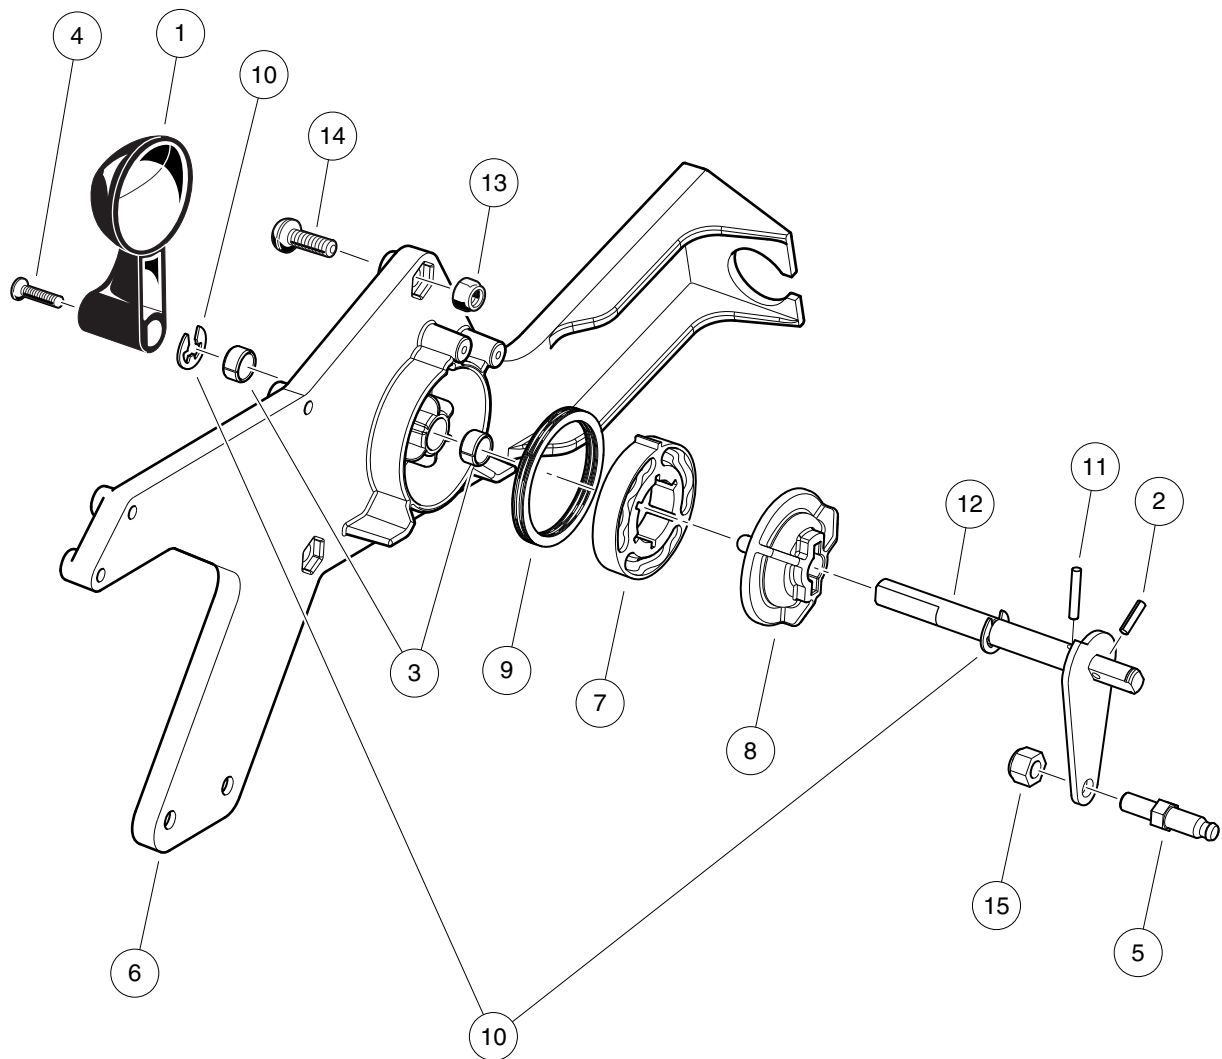


001012-001

FORWARD/REVERSE SHIFTER – EFI

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012987</u>	Handle, FNR	1
2	<u>1013591</u>	Pin, Roll, 1/8 X 1/2	1
3	<u>1014145</u>	Bushing, Secondary Weight, Split	2
4	<u>1015064</u>	Screw, #8-32 X 0.63 Machine	1
5	<u>102526201</u>	Stud, Thread, 1/4-28	1
6	<u>105037501</u>	Housing, Gas FNR Body Shift	1
7	<u>105037601</u>	Cam, FNR Detent, 45 Degree	1
8	<u>105037701</u>	Follower, FNR Detent	1
9	<u>105038501</u>	Spring, Wave, Gas FNR Shifter	1
10	<u>105039801</u>	E-Clip, External, 8mm Groove	2
11	<u>105040401</u>	Pin, Round, 0.125 Dia x 0.625	1
12	<u>105041201</u>	Weldment, Shaft, FNR, Dash	1
13	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	3
14	<u>8248</u>	Screw, 1/4-20 X 0.75, Truss-Head Machine	3
15	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1

12
G

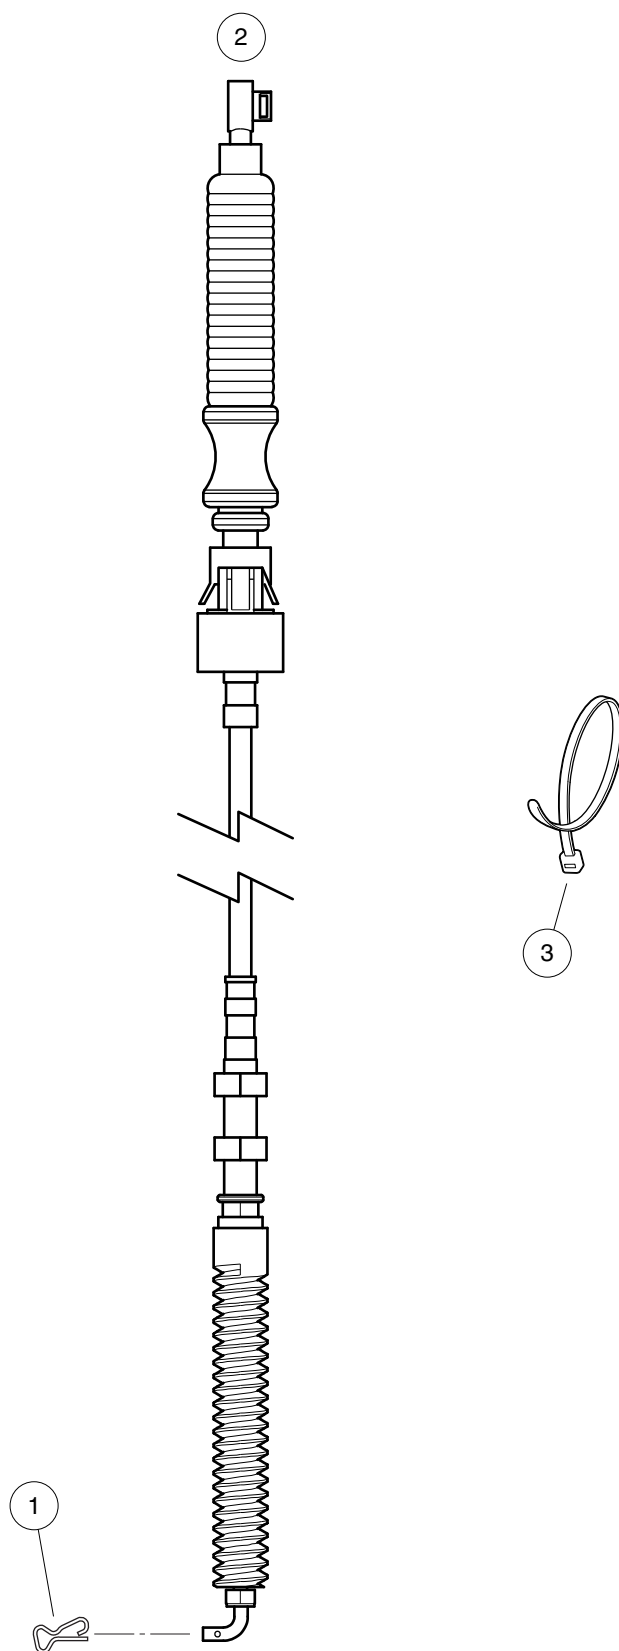


000988-001

SHIFTER CABLE

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>103886601</u>	1 2 3 4 Clip, Bowtie	1
2	<u>105038801</u>	Cable, Shifter	1
3	<u>8990</u>	Tie Wrap, 8" Nylon	A/R

12


G

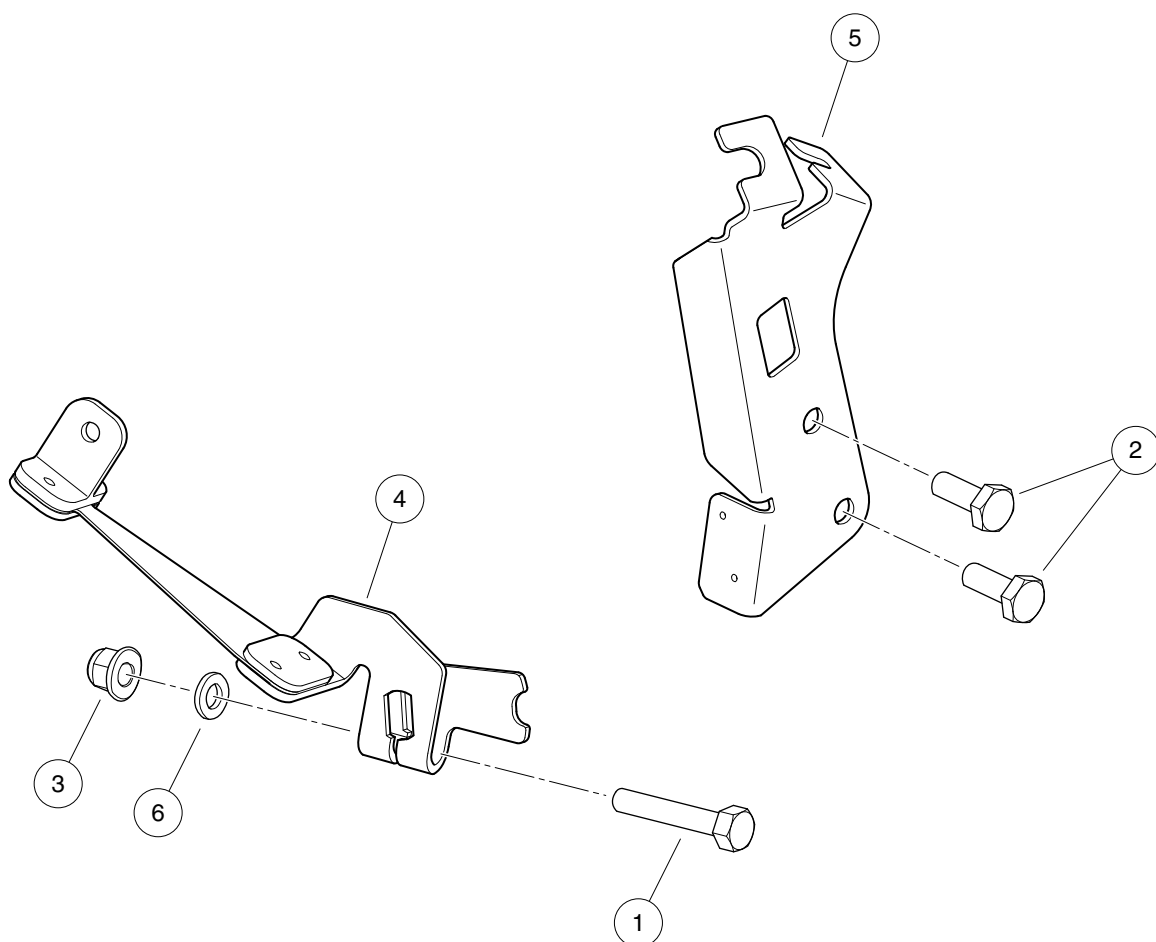

000965-001

SHIFT LEVER AND BRACKET – PEDAL-START ENGINES



ITEM	PART NO.	DESCRIPTION	QTY	12
		1 2 3 4		G
1	<u>102059501</u>	Screw, 6M-1.00 X 35mm, Hex Head	1	
2	<u>102498201</u>	Bolt, M10 X 1.25 X 25, Loctite	2	
3	<u>102621501</u>	Nut, Flange, M6 X 1.0, Nylon	1	
4	<u>105040901</u>	Lever, Shift, Flex, Transaxle, Pedal-Start	1	
5	<u>105135101</u>	Bracket, Cable, FNR/Accelerator, ED65	1	
6	<u>96705199</u>	Washer, M6	1	

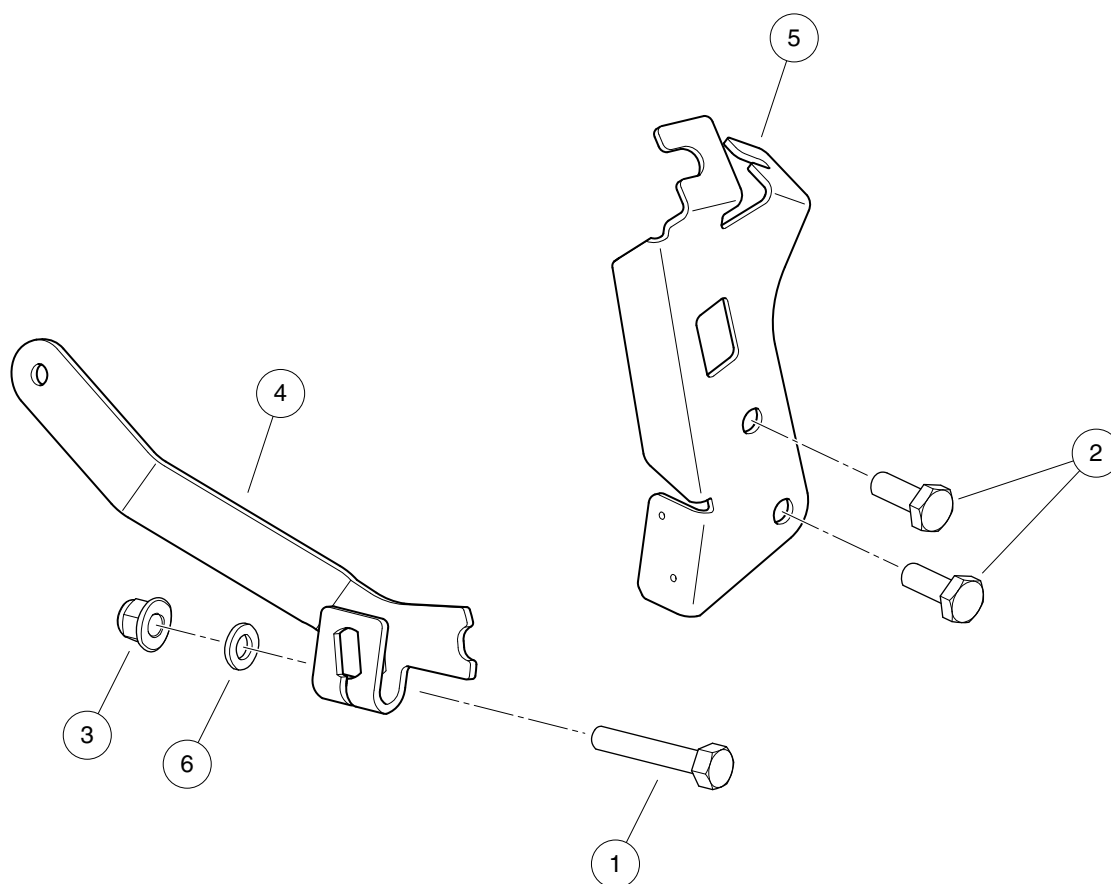

000965-002

SHIFT LEVER AND BRACKET – KEY-START ENGINES

ITEM	PART NO.	DESCRIPTION	QTY	12
		1 2 3 4		G
1	<u>102059501</u>	Screw, 6M-1.00 X 35mm, Hex Head	1	
2	<u>102498201</u>	Bolt, M10 X 1.25 X 25, Loctite	2	
3	<u>102621501</u>	Nut, Flange, M6 X 1.0, Nylon	1	
4	<u>105134901</u>	Lever, Shift, Transaxle, Key-Start	1	
5	<u>105135101</u>	Bracket, Cable, FNR/Accelerator, ED65	1	
6	<u>96705199</u>	Washer, M6	1	

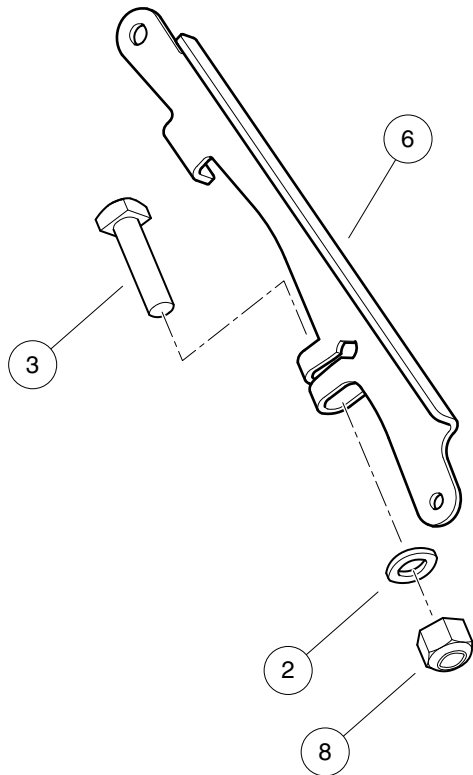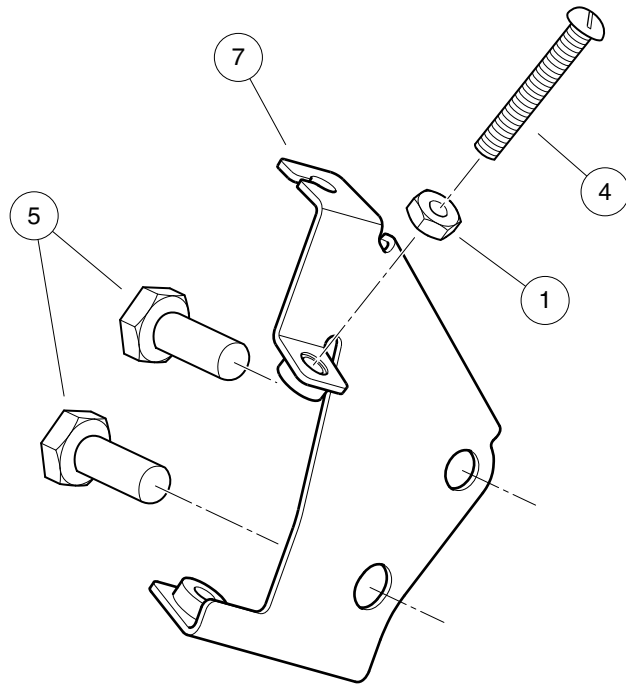


000966-002

GOVERNOR ARM AND BRACKETS – UTILITY VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011114</u>	Nut, M6-1.00 Hex	1
2	<u>1014007</u>	Washer, 1/4, Flat	1
3	<u>101886101</u>	Screw, 1/4-20 X 1.00, Square-Head	1
4	<u>102476401</u>	Bolt, Stop, Pedal	1
5	<u>102498201</u>	Bolt, M10 X 1.25 X 25, Loctite	2
6	<u>104023501</u>	Arm, Governor, ED65	1
7	<u>105144401</u>	Weldment, Governor Bracket	1
8	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	1

12
G

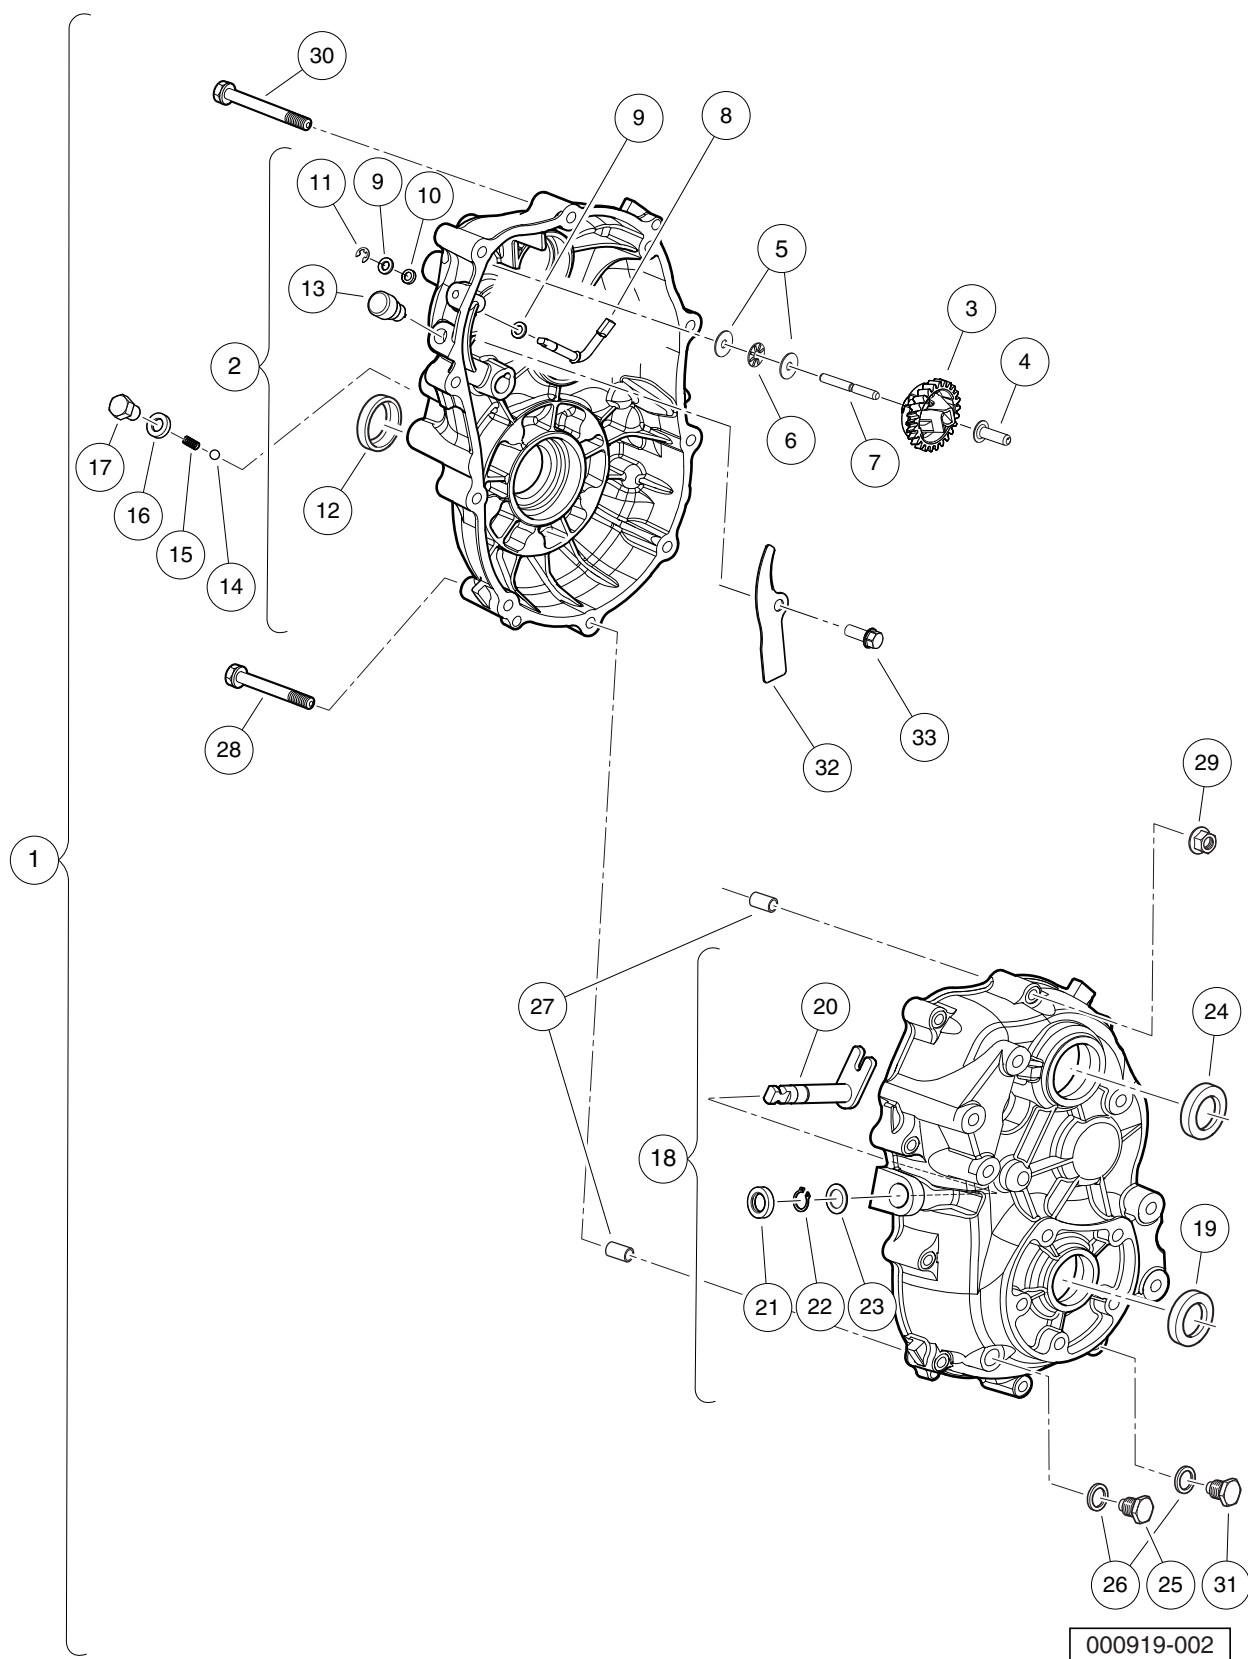


TRANSAXLE (ED65), LIMITED SLIP – PAGE 1 OF 3

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103879702</u>	Transaxle, ED65, Limited-Slip Differential (includes items 2 through 33)	1
2	<u>105025001</u>	Case, Transaxle, Left, Complete, ED65 (includes items 3 through 13)	1
3	<u>105025101</u>	Gear, Governor, Complete, ED65	1
4	<u>105025201</u>	Sleeve, Governor, ED65	1
5	<u>105025301</u>	Washer, ED65	2
6	<u>105025401</u>	Bearing, Thrust, ED65	1
7	<u>105025501</u>	Shaft, Governor Gear, ED65	1
8	<u>105025601</u>	Shaft, Governor, ED65	1
9	<u>105025701</u>	Washer, 6mm, ED65	2
10	<u>105025801</u>	Seal, Oil, 6x10x2.5, ED65	1
11	<u>105025901</u>	Retaining Ring, E5, ED65	1
12	<u>105026001</u>	Seal, Oil, 24x40x9, ED65	1
13	<u>105027101</u>	Vent, Breather, ED65	1
14	<u>105026101</u>	Ball, Steel, ED65	1
15	<u>105026201</u>	Spring, ED65	1
16	<u>105026301</u>	Gasket, 10, ED65	1
17	<u>105026401</u>	Bolt, M10-1.25x12mm Lg, ED65	1
18	<u>105026501</u>	Case, Transaxle, Right, Complete, ED65 (includes items 19 through 24)	1
19	<u>105026001</u>	Seal, Oil, 24x40x9, ED65	1
20	<u>105026601</u>	Shaft, Select, ED65	1
21	<u>105026701</u>	Seal, Oil, 13x22x5, ED65	1
22	<u>105026801</u>	Snap Ring, 13mm, ED65	1
23	<u>105026901</u>	Spacer, 13x1, ED65	1
24	<u>105027001</u>	Seal, Oil, 25x45x7, ED65	1
25	<u>105027201</u>	Plug, Oil Drain, ED65	1
26	<u>105027301</u>	Gasket, 14, ED65	2
27	<u>105028301</u>	Pin, Guide, ED65	2
28	<u>105028501</u>	Bolt, Flange, M8-1.25x65mm, ED65	1
29	<u>105030001</u>	Nut, Flange, M8-1.25, ED65	10
30	<u>105030701</u>	Bolt, Flanged, M8-1.25x80mm, ED65	9
31	<u>105063501</u>	Plug, Oil Drain, Magnetic, ED65	1
32	<u>105234801</u>	Plate, Ed65 Splash	1
33	<u>105234901</u>	Bolt, M6-1 X 12mm Lg, Ed65	1
Note: Fuji transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube.			

12

G

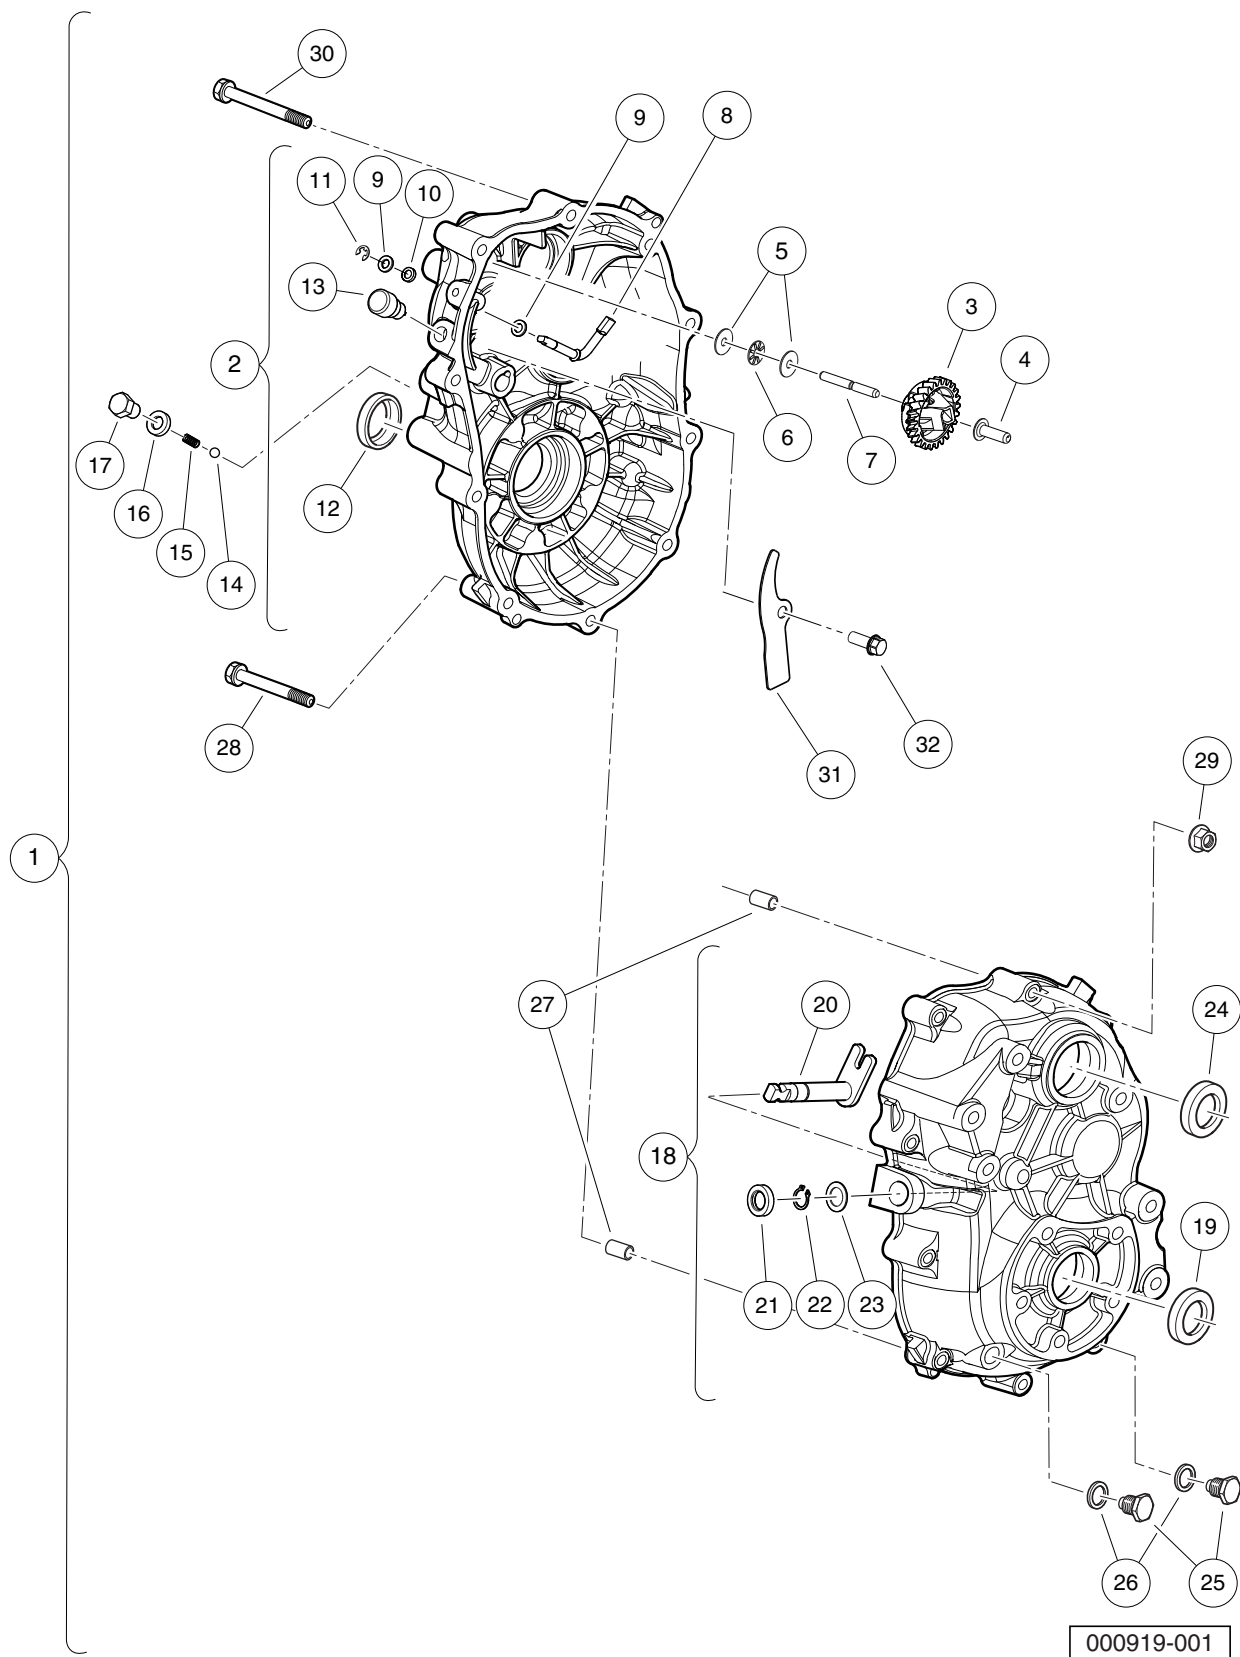


TRANSAXLE (ED65), OPEN – PAGE 1 OF 3

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103879701</u>	Transaxle, ED65, Open Differential (includes items 2 through 32)	1
2	<u>105025001</u>	Case, Transaxle, Left, Complete, ED65 (includes items 3 through 13)	1
3	<u>105025101</u>	Gear, Governor, Complete, ED65	1
4	<u>105025201</u>	Sleeve, Governor, ED65	1
5	<u>105025301</u>	Washer, ED65	2
6	<u>105025401</u>	Bearing, Thrust, ED65	1
7	<u>105025501</u>	Shaft, Governor Gear, ED65	1
8	<u>105025601</u>	Shaft, Governor, ED65	1
9	<u>105025701</u>	Washer, 6mm, ED65	2
10	<u>105025801</u>	Seal, Oil, 6x10x2.5, ED65	1
11	<u>105025901</u>	Retaining Ring, E5, ED65	1
12	<u>105026001</u>	Seal, Oil, 24x40x9, ED65	1
13	<u>105027101</u>	Vent, Breather, ED65	1
14	<u>105026101</u>	Ball, Steel, ED65	1
15	<u>105026201</u>	Spring, ED65	1
16	<u>105026301</u>	Gasket, 10, ED65	1
17	<u>105026401</u>	Bolt, M10-1.25x12mm Lg, ED65	1
18	<u>105026501</u>	Case, Transaxle, Right, Complete, ED65 (includes items 19 through 24)	1
19	<u>105026001</u>	Seal, Oil, 24x40x9, ED65	1
20	<u>105026601</u>	Shaft, Select, ED65	1
21	<u>105026701</u>	Seal, Oil, 13x22x5, ED65	1
22	<u>105026801</u>	Snap Ring, 13mm, ED65	1
23	<u>105026901</u>	Spacer, 13x1, ED65	1
24	<u>105027001</u>	Seal, Oil, 25x45x7, ED65	1
25	<u>105027201</u>	Plug, Oil Drain, ED65	2
26	<u>105027301</u>	Gasket, 14, ED65	2
27	<u>105028301</u>	Pin, Guide, ED65	2
28	<u>105028501</u>	Bolt, Flange, M8-1.25x65mm, ED65	1
29	<u>105030001</u>	Nut, Flange, M8-1.25, ED65	10
30	<u>105030701</u>	Bolt, Flanged, M8-1.25x80mm, ED65	9
31	<u>105234801</u>	Plate, Ed65 Splash	1
32	<u>105234901</u>	Bolt, M6-1 X 12mm Lg, Ed65	1
Note: Fuji transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube.			

12


G

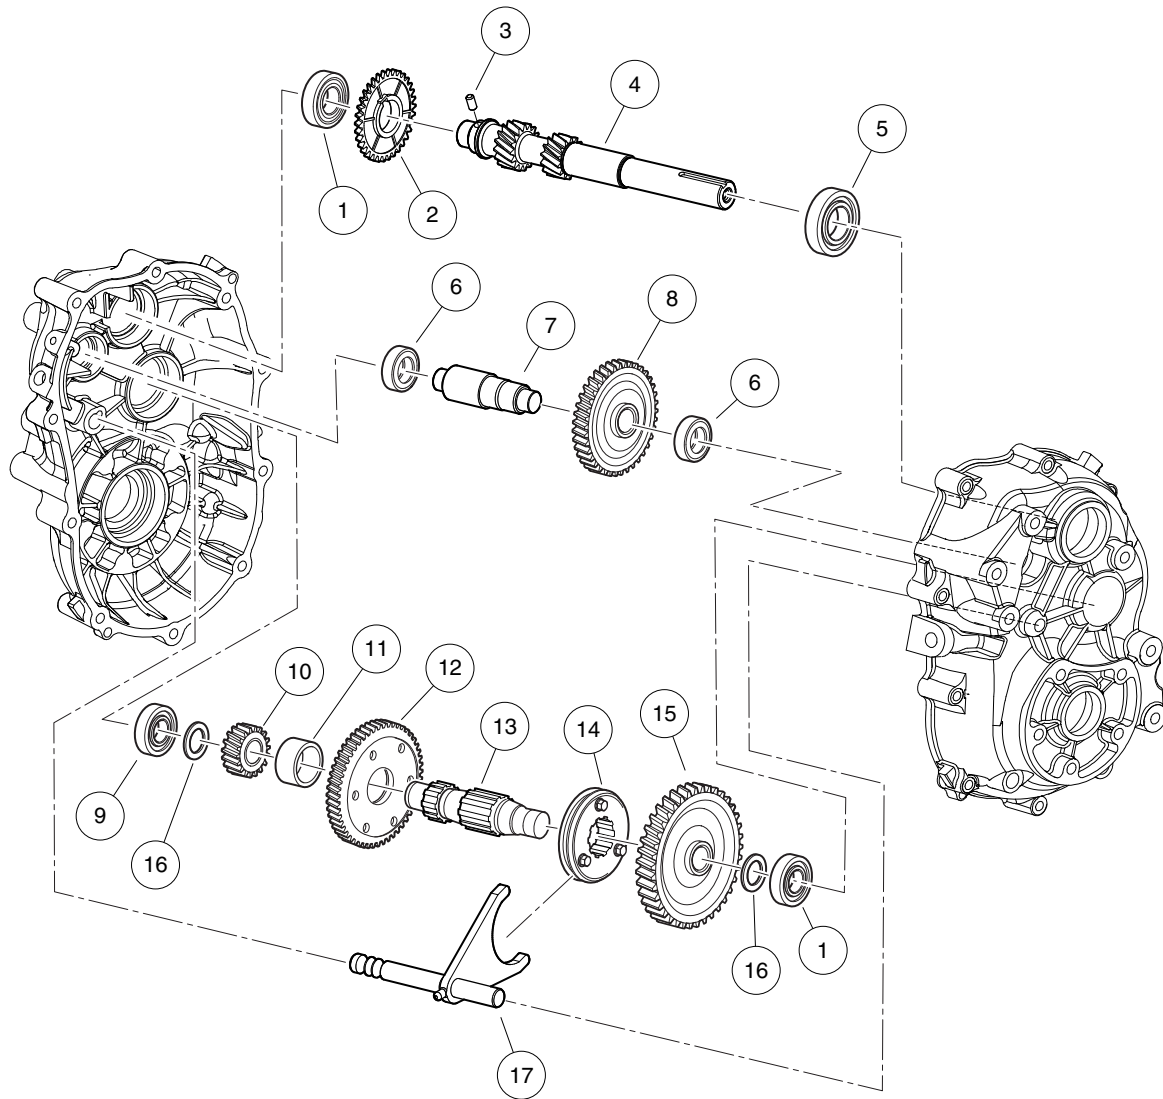

000919-003

TRANSAXLE (ED65), LIMITED SLIP AND OPEN – PAGE 2 OF 3

ITEM	PART NO.	DESCRIPTION	QTY	12	G
		1 2 3 4			
1	<u>105027401</u>	Bearing, Ball (6204)	2		
2	<u>105027501</u>	Gear, Governor, 34 Tooth, ED65	1		
3	<u>105027601</u>	Pin, 6x12 Long, ED65	1		
4	<u>105027701</u>	Shaft, Input, ED65	1		
5	<u>105027801</u>	Bearing, Ball (6205 seal)	1		
6	<u>105027901</u>	Bearing, Ball (6202)	2		
7	<u>105028001</u>	Shaft, Counter, ED65	1		
8	<u>105028201</u>	Gear, 34 Tooth, ED65	1		
9	<u>105028401</u>	Bearing, Ball (6304)	1		
10	<u>105028601</u>	Gear, 17 Tooth, ED65	1		
11	<u>105028701</u>	Collar, 24 x 12, ED65	1		
12	<u>105028801</u>	Gear, 52 Tooth, ED65	1		
13	<u>105028901</u>	Shaft, Center, ED65	1		
14	<u>105029001</u>	Clutch, Pin, ED65	1		
15	<u>105029101</u>	Gear, 62 Tooth, ED65	1		
16	<u>105029201</u>	Spacer, 20x2, ED65	2		
17	<u>105030901</u>	Shaft, Shift, ED65	1		
		Note: To identify your transaxle, locate the serial number decal on the axle tube.			

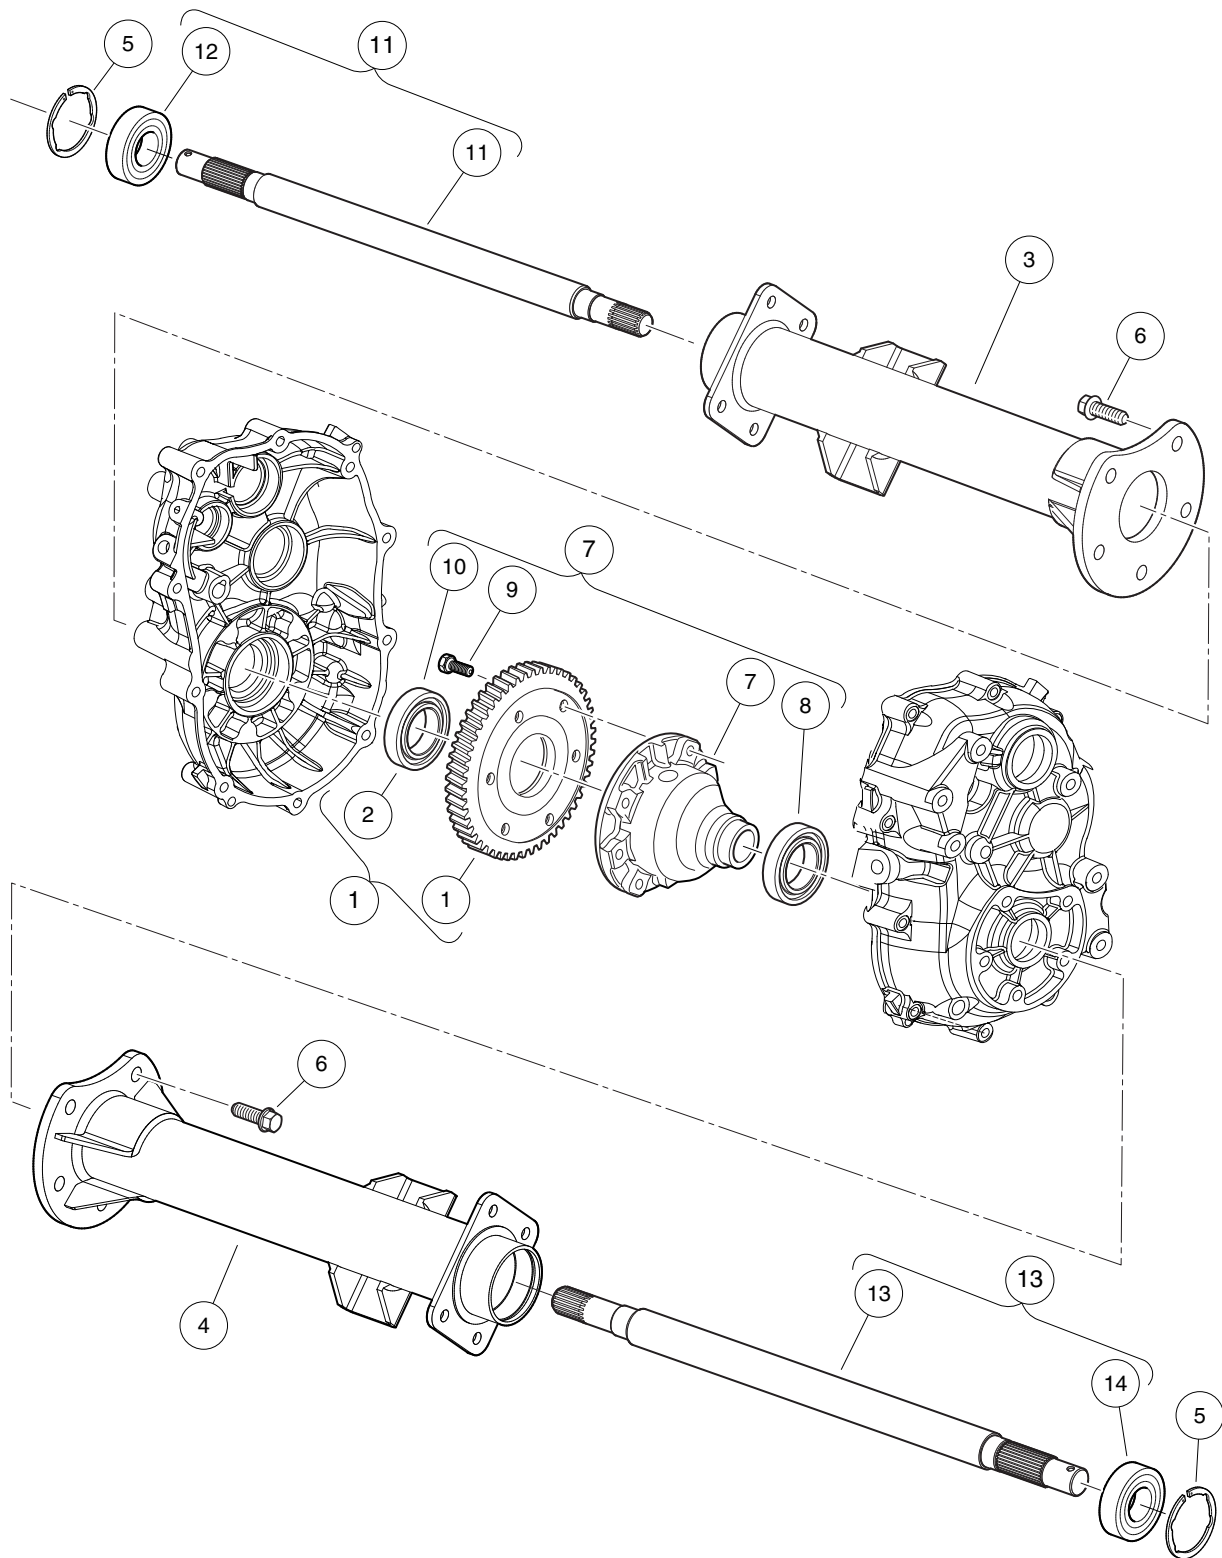


000919-005

TRANSAXLE (ED65), LIMITED SLIP – PAGE 3 OF 3

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	105029901	Gear, 60 Tooth, Complete, ED65 (includes item 2)	1
2	<u>105029801</u>	Bearing, Ball (6007)	1
3	105030401	Axle Tube, Driver-Side, ED65	1
4	105030501	Axle Tube, Passenger-Side, ED65	1
5	<u>105030601</u>	Snap Ring, 52mm, ED65	2
6	<u>105030801</u>	Bolt, Flange, M10-1.25x25, ED65	10
7	<u>105063601</u>	Differential, Limited-Slip, ED65 (includes items 8 through 10)	1
8	<u>105028101</u>	Bearing, Ball (6006)	1
9	<u>105029501</u>	Bolt, M10-1.25x26mm Lg, ED65	6
10	<u>105029801</u>	Bearing, Ball (6007)	1
11	<u>105066001</u>	Axle Shaft, Driver-Side, Complete, ED65 (includes item 12)	1
12	<u>105030301</u>	Bearing, Ball (6205DD)	1
13	<u>105066101</u>	Axle Shaft, Passenger-Side, Complete, ED65 (includes item 14)	1
14	<u>105030301</u>	Bearing, Ball (6205DD)	1
Note: To identify your transaxle, locate the serial number decal on the axle tube.			

12
G

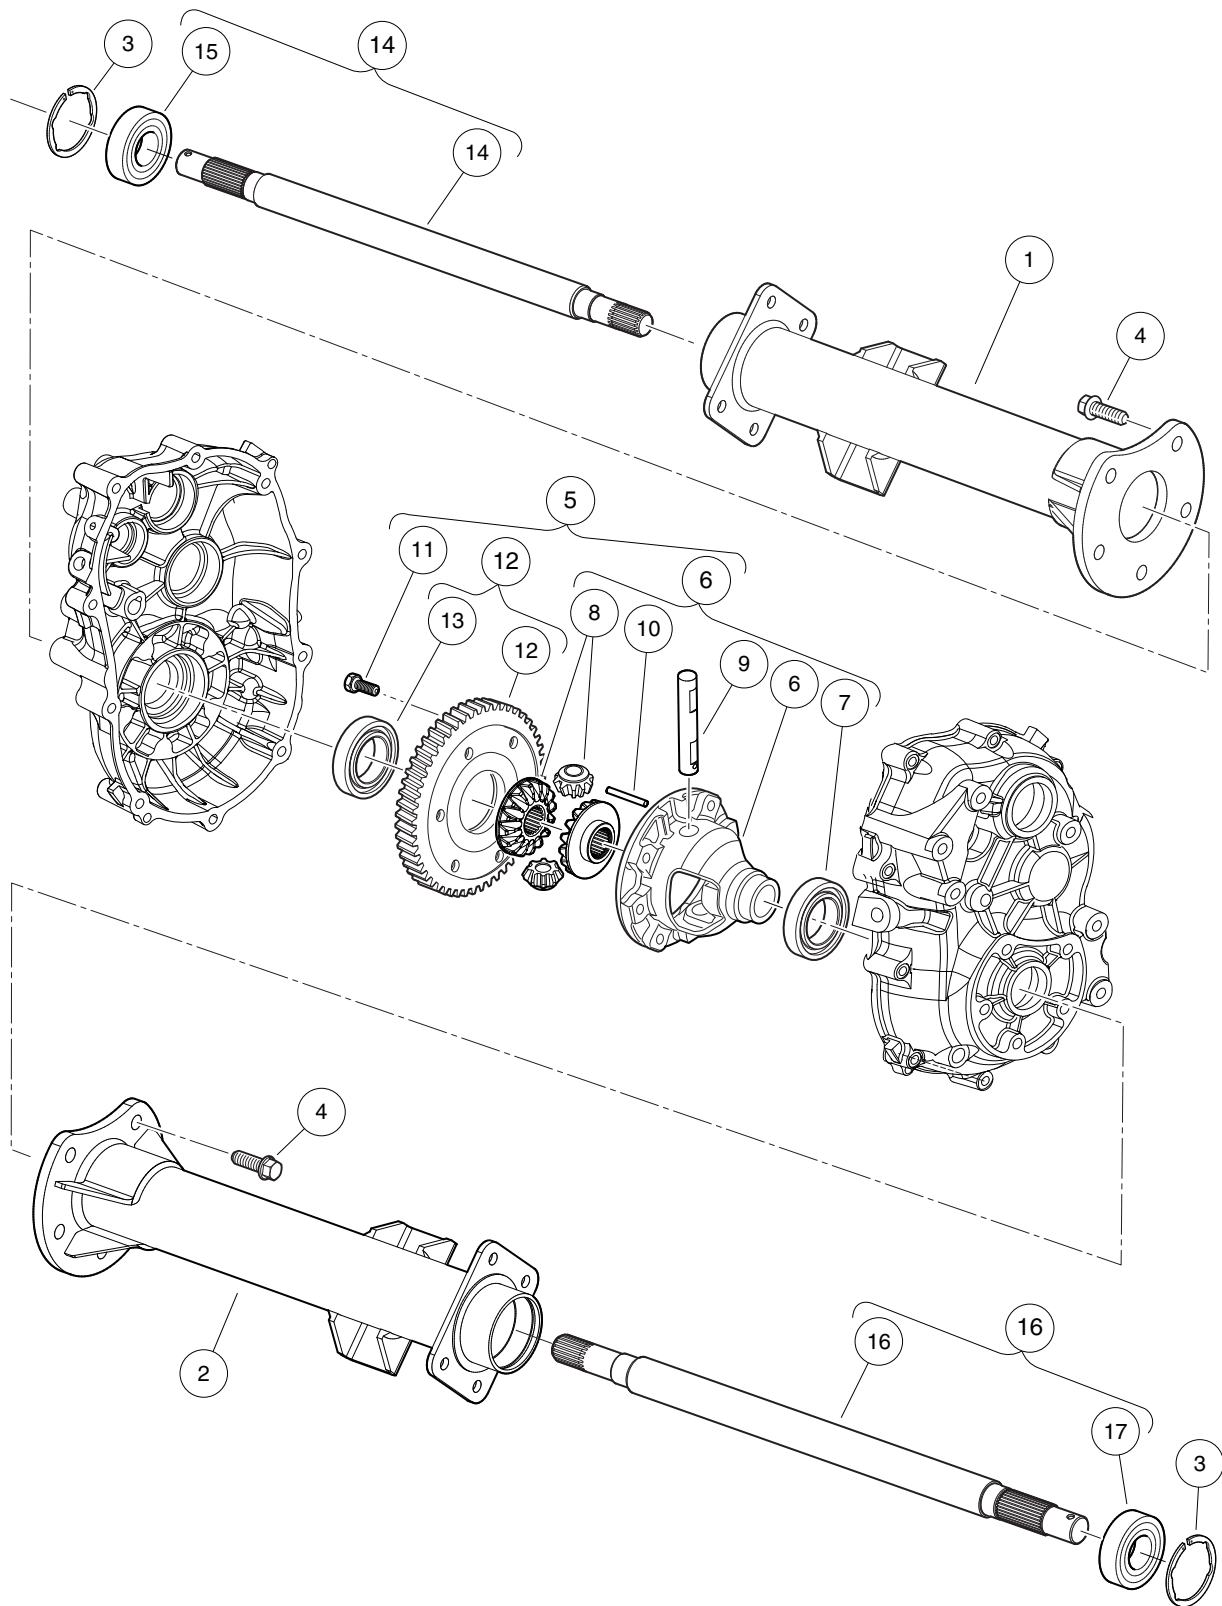


000919-004

TRANSAXLE (ED65), OPEN – PAGE 3 OF 3

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	105030401	Axle Tube, Driver-Side, ED65	1
2	105030501	Axle Tube, Passenger-Side, ED65	1
3	<u>105030601</u>	Snap Ring, 52mm, ED65	2
4	<u>105030801</u>	Bolt, Flange, M10-1.25x25, ED65	10
5	<u>105031001</u>	Differential, Open, ED65 (includes items 6 through 12)	1
6	<u>105029301</u>	Case, Differential, Complete, ED65 (includes items 7 through 10)	1
7	<u>105028101</u>	Bearing, Ball (6006)	1
8	105029401	Gear Set, Differential, ED65	1
9	<u>105029601</u>	Shaft, Differential, ED65	1
10	<u>105029701</u>	Pin, 4x40 Long, ED65	1
11	<u>105029501</u>	Bolt, M10-1.25x26mm Lg, ED65	6
12	105029901	Gear, 60 Tooth, Complete, ED65 (includes item 13)	1
13	<u>105029801</u>	Bearing, Ball (6007)	1
14	<u>105066001</u>	Axle Shaft, Driver-Side, Complete, ED65 (includes item 15)	1
15	<u>105030301</u>	Bearing, Ball (6205DD)	1
16	<u>105066101</u>	Axle Shaft, Passenger-Side, Complete, ED65 (includes item 17)	1
17	<u>105030301</u>	Bearing, Ball (6205DD)	1
Note: To identify your transaxle, locate the serial number decal on the axle tube.			

12

G

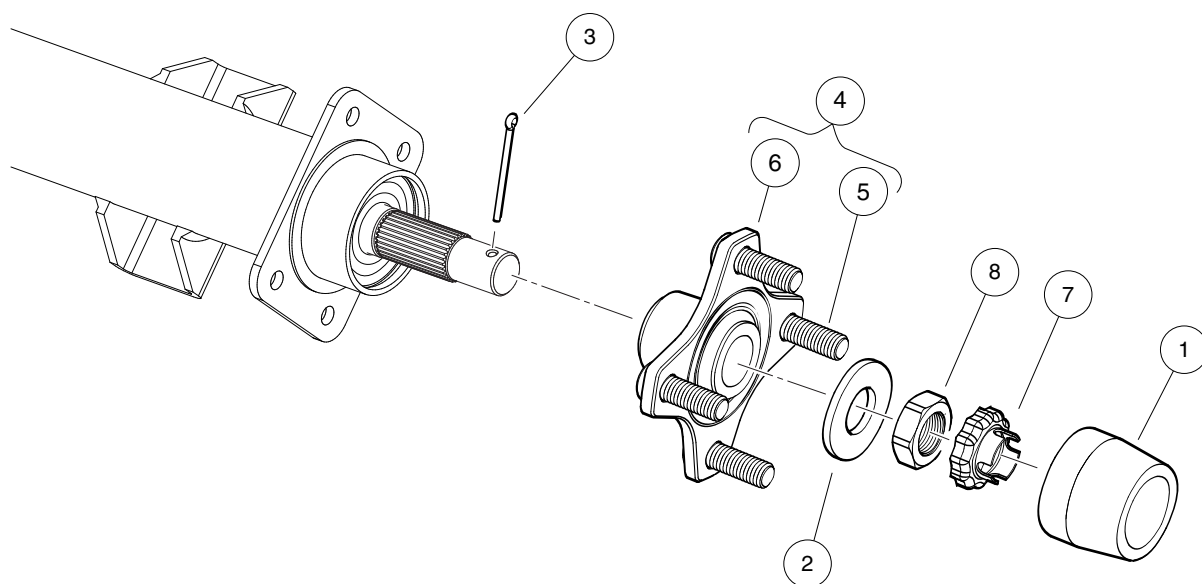


000919-006

HUB, REAR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102274101	Center Cap, Rubber	2
2	102617801	Washer, Hard, M22	2
3	103989501	Pin, Cotter, 9/64 X 1.75"	2
4	103995001	Asm, Hub, Machined (includes items 5 and 6)	2
5	103951501	Lug Stud, 1/2-20 UNF, SAE J1102	4
6	103979301	Hub, Machined	1
7	104021701	Retaining Ring, Hex Nut, M22	2
8	104027101	Nut, Hex, M22x1.5, Thin	2

12

G

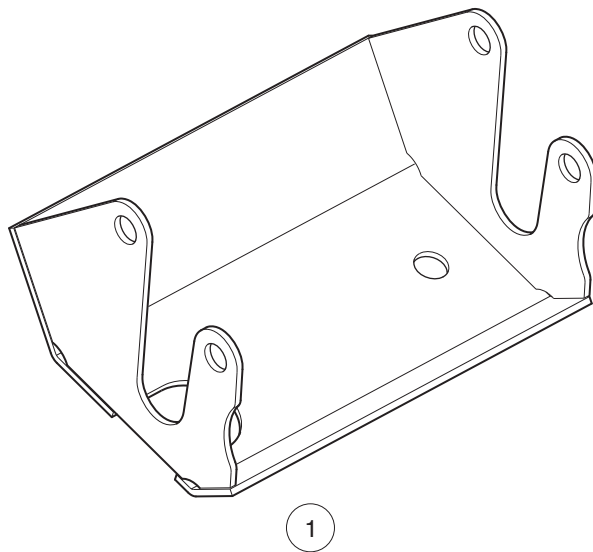

001436-001

DIFFERENTIAL GUARD, ED65 – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>103989901</u>	1 2 3 4 Weldment, Diff Guard, Ed65	1

 
12

G

ELECTRICAL SYSTEM – ELECTRIC VEHICLES

13


E



FORWARD/REVERSE SWITCH, TOW/RUN SWITCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3
2	101855002	Case, FNR Switch	1
3	<u>101856002</u>	Switch, Rocker, Single-Pole	1
4	<u>101908101</u>	Switch Assembly, Tow/Run	1
5	<u>101908401</u>	Boot, Switch	1
6	<u>101922501</u>	Bracket, Tow/Run Switch Mounting	1
7	<u>101932401</u>	Kit, 4-Pin Receptacle and Wedge Lock	1
8	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
9	<u>102266601</u>	Wire Assembly, FNR Switch (includes items 10 through 13)	1
10	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
11	N/A	Wire Assembly, #18 Blue	1
12	N/A	Wire Assembly, #18 Orange	1
13	N/A	Wire Assembly, #18 Brown	1
14	102266701	Wire Assembly, IQDM Port (includes items 15 through 21)	1
15	<u>101932501</u>	Kit, 4-Pin Wedge Lock	1
16	<u>102196901</u>	Dust Cap	1
17	N/A	Connector Mount, Four-Pin	1
18	N/A	Wire Assembly, #18 Red/Yellow	1
19	N/A	Wire Assembly, #18 Black/Yellow	1
20	N/A	Wire Assembly, #18 Blue/Yellow	1
21	N/A	Wire Assembly, #18 Green/Yellow	1
22	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
23	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2
24	<u>8248</u>	Screw, 1/4-20 X 0.75, Truss-Head Machine	2
25	<u>8990</u>	Tie Wrap, 8" Nylon	1

13
E

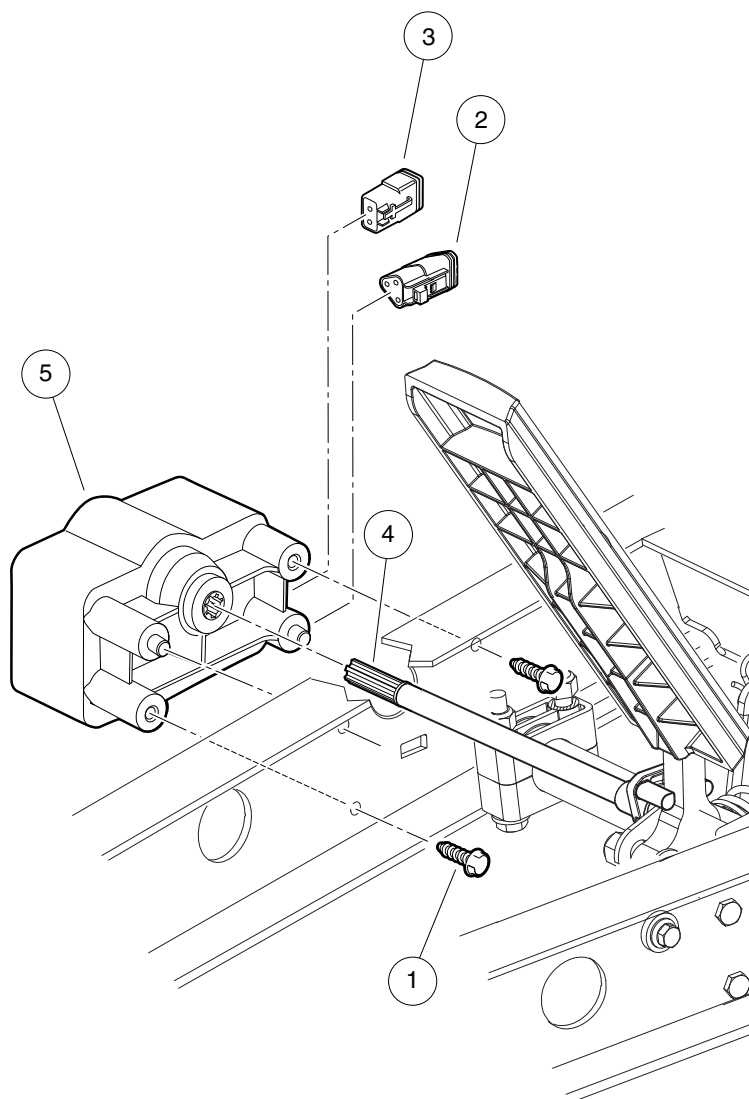


001070-001

MOTOR CONTROLLER OUTPUT REGULATOR (MCOR)

ITEM	PART NO.	DESCRIPTION	QTY	13
		1 2 3 4		
1	<u>1015752</u>	Screw, #12-16 X 0.625, Hi-Lo	2	
2	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1	E
3	<u>101936801</u>	Kit, 2-Pin Wedge Lock	1	
4	<u>102101001</u>	Bar, Drive, Cast	1	
5	<u>102101101</u>	MCOR	1	

13

E

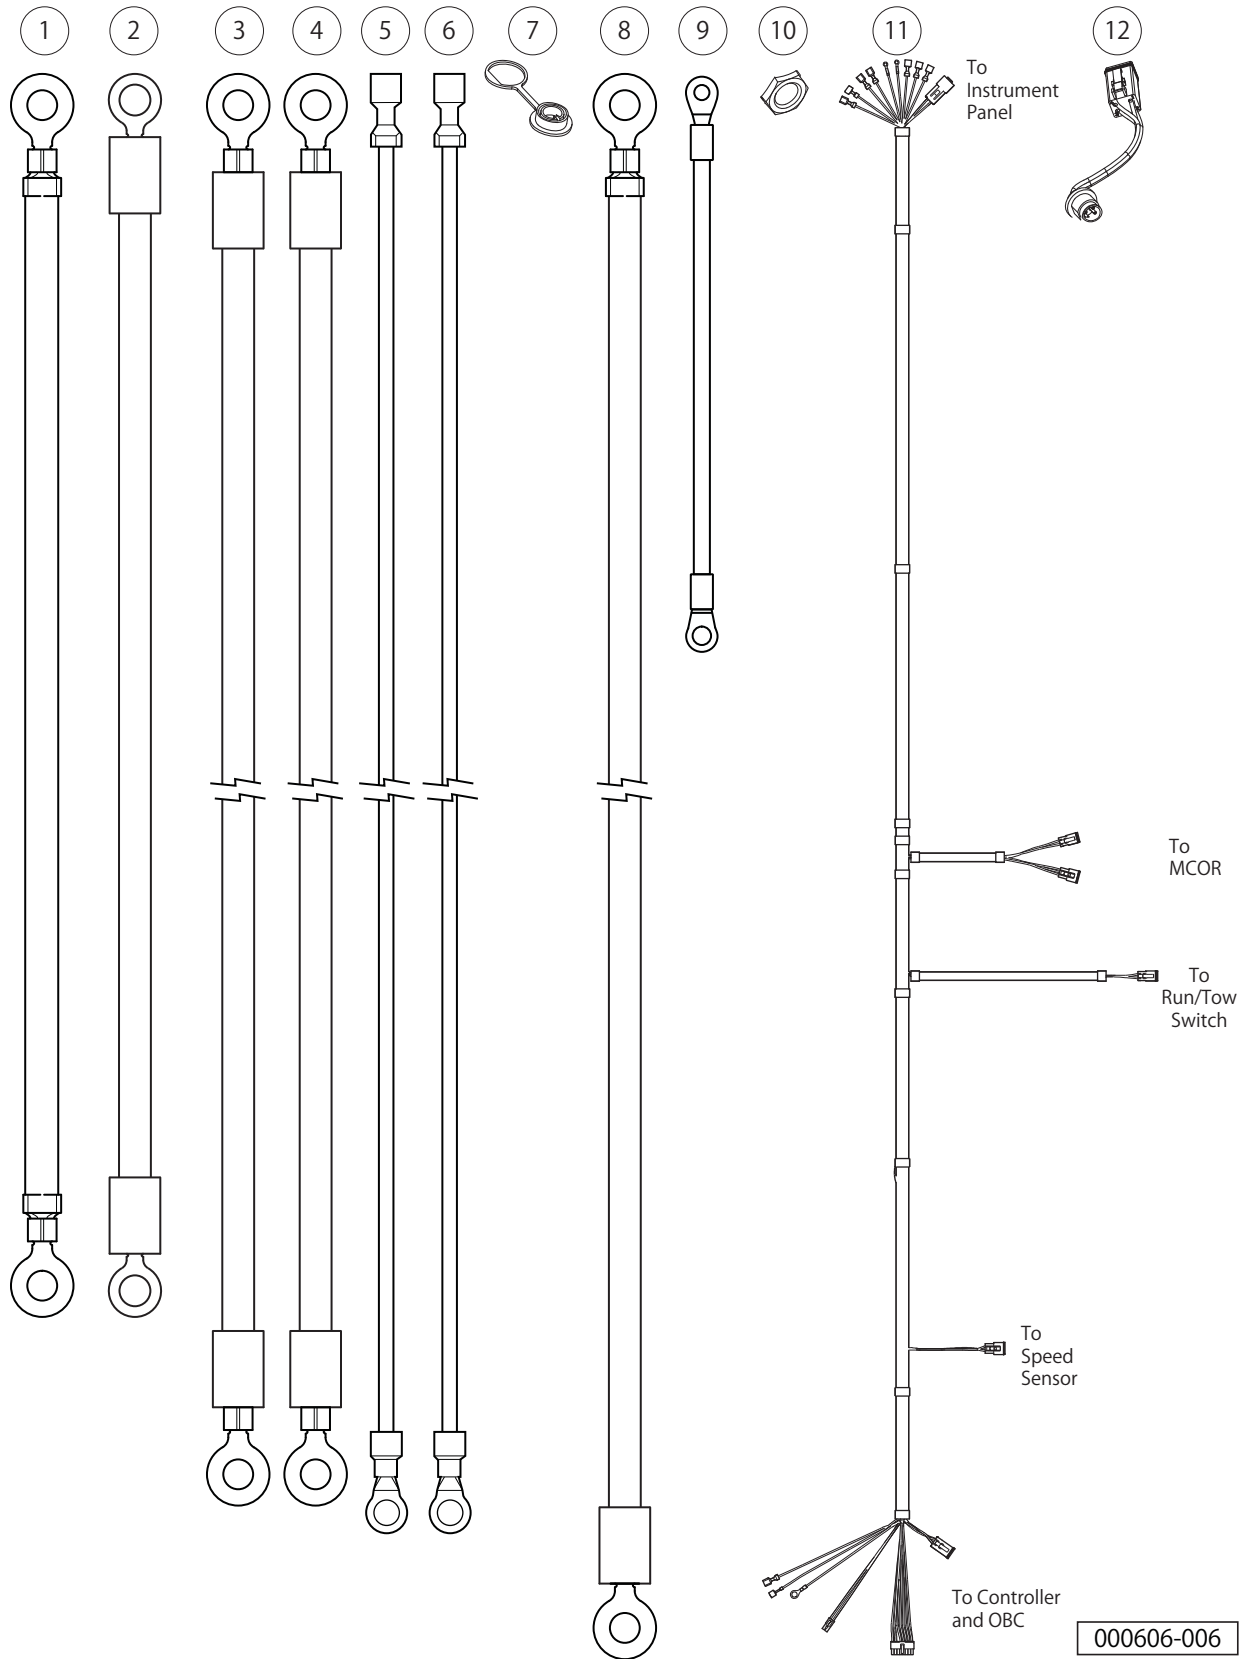


WIRING – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	13
		1 2 3 4		
1	<u>101795701</u>	Asm, Wire, #6blk, 15 In	3	
2	<u>101903001</u>	Wire Assembly #6 Yellow	1	E
3	<u>101968701</u>	Wire Assy, #6 White	1	
4	<u>101978001</u>	Wire Assy, #6 Green	1	
5	<u>101978101</u>	Asm, Wire, #10 Orange 5/16	1	
6	<u>101978201</u>	Asm, Wire, #10 Blue 5/16	1	
7	<u>102196901</u>	Dust Cap	1	
8	<u>102199601</u>	Wire Asm, #6 Red, 37.7	1	
9	<u>102263601</u>	Wire Assy, #10 Black	1	
10	<u>102572401</u>	Nut, Diagnostic Port	1	
11	<u>102810501</u>	Wire Harness, Electric Vehicle	1	
12	<u>103218601</u>	Harness, Diagnostic Port	1	

13

E

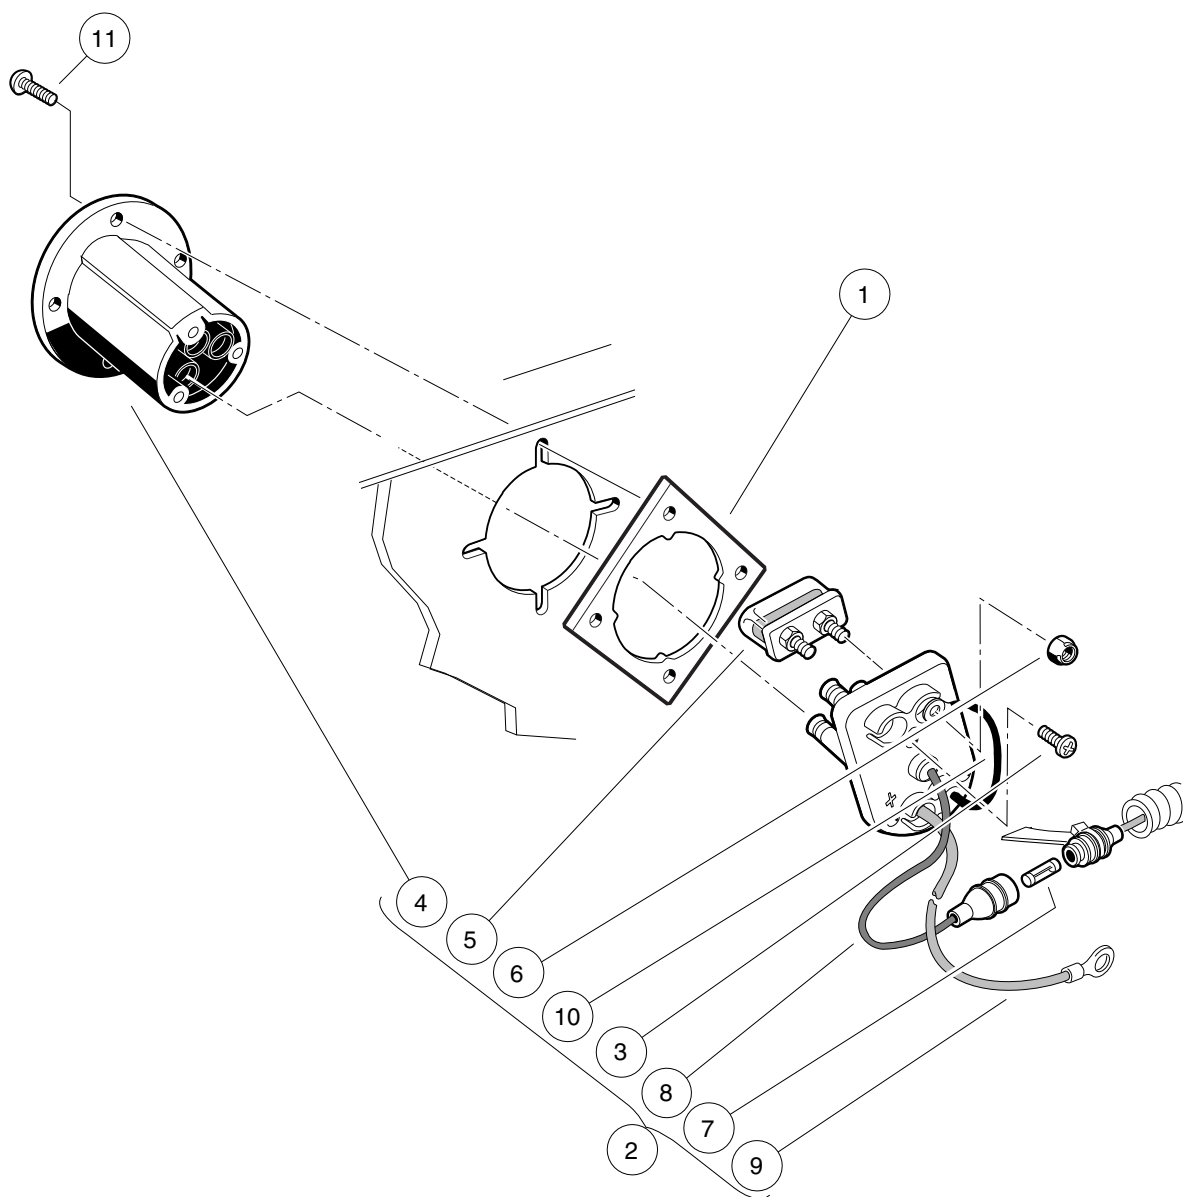


000369-001

BATTERY CHARGER RECEPTACLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101801001</u>	Plate, Receptacle Backing	1
2	<u>101802101</u>	Fuse and Receptacle Assembly (includes items 3 through 10)	1
3	<u>1017705</u>	Screw, #8 X 5/8 Phillips Pan-Head Type AB	3
4	<u>101796501</u>	Receptacle	1
5	<u>101796801</u>	Fuse Assembly (includes item 6)	1
6	<u>1013061</u>	Locknut, #10-32 Nylon Insert	2
7	<u>101894901</u>	Fuse, 3/8-Amp	1
8	N/A	Wire Assembly, Sense Lead, Gray	1
9	N/A	Wire Assembly, #10 Red	1
10	N/A	Wire Assembly, #10 Black	1
11	<u>101832001</u>	Screw, #7-19 X 0.625 Phillips Pan-Head Tap	4

13

E

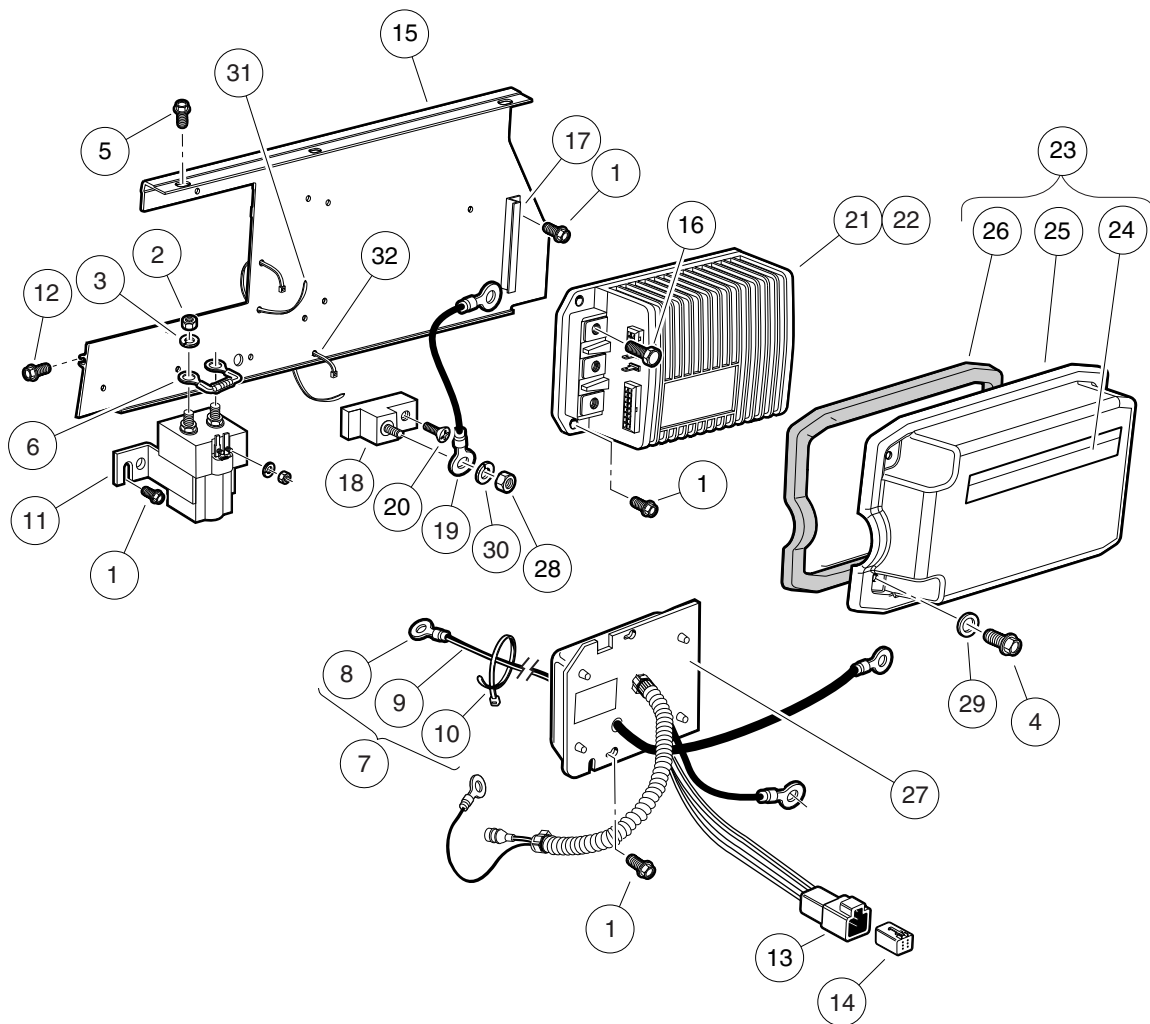


000607-003

COMPUTER, CONTROLLER, AND SOLENOID

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	14
2	<u>1012528</u>	Nut, M8-1.25 Hex	2
3	<u>1013734</u>	Lockwasher, 8mm Split	2
4	<u>1014063</u>	Screw, 1/4-20 X 1.00, Hex Head	2
5	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	2
6	<u>1014947</u>	Resistor Assembly	1
7	101827801	Ground Wire Kit, 48-Volt (includes items 8 through 10)	1
8	101826801	Compression Lug	1
9	N/A	Wire Assembly, Black	1
10	<u>8990</u>	Tie Wrap, 8" Nylon	3
11	<u>101908703</u>	Solenoid, 48v W/ Diode	1
12	<u>101910401</u>	Screw, 5/16-18 X 1.25 Thrd Frm	2
13	<u>101932601</u>	Kit, 6-Pin Wedge Lock	1
14	<u>101932701</u>	Kit, 6-Pin Receptacle and Wedge Lock	1
15	<u>101965205</u>	Plate, Component Mounting	1
16	<u>102240501</u>	Bolt, Controller, Terminal	3
17	<u>102243101</u>	Extrusion, Cover Support	1
18	<u>102259801</u>	Terminal Block	1
19	<u>102263601</u>	Wire Assy, #10 Black	1
20	<u>102263701</u>	Screw, #10-24 X 0.75 Phillips, Thread-Forming	1
21	<u>102806201</u>	Controller, IQ, 48-volt	1
22	<u>102806203</u>	Controller, IQ, 48-volt, CE	1
23	<u>103316901</u>	Cover Asm - Controller (includes items 24 through 26)	1
24	<u>101931501</u>	Decal, Component Cover	1
25	<u>103316701</u>	Cover - Controller, Deep	1
26	<u>103316801</u>	Gasket - Controller Cover	1
27	103403101	Asm, Obc, Iq, V3.0	1
28	<u>1242</u>	Nut, 5/16-18 Hex	1
29	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
30	<u>7174</u>	Lockwasher, 5/16 Split	1
31	<u>8639</u>	Tie Wrap, 11" Nylon	1
32	<u>8990</u>	Tie Wrap, 8" Nylon	1

13

E

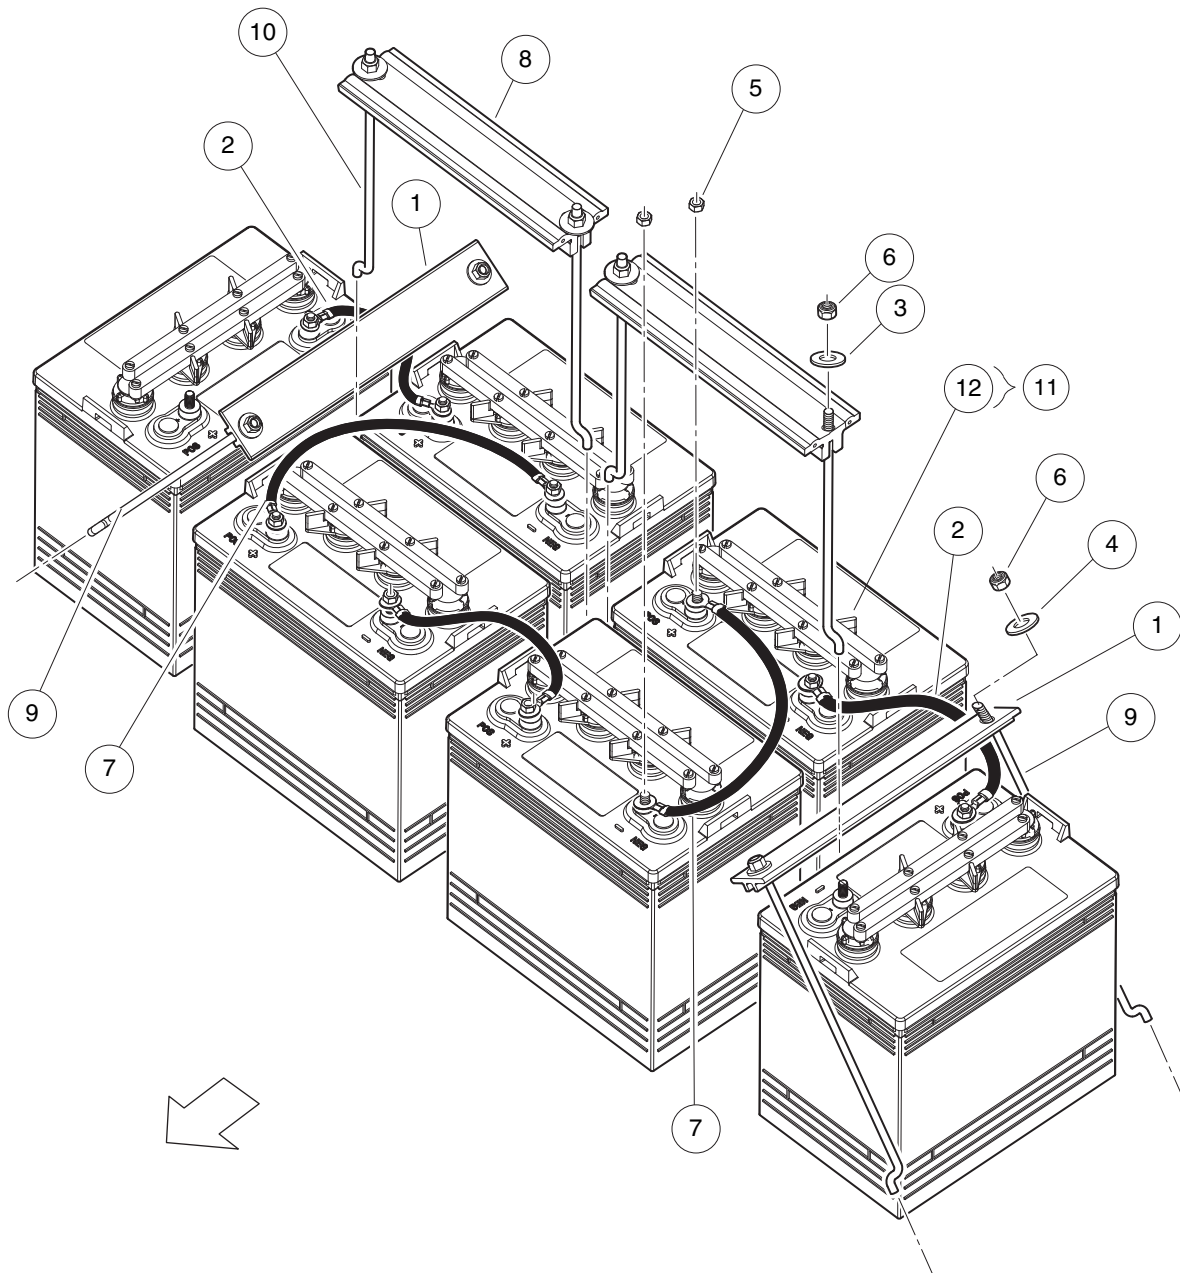


002515-002

BATTERIES 8-VOLT, HEAVY DUTY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101090802</u>	Hold-Down, Battery	2
2	<u>1010958</u>	Asm, Wire, #6blk 8in	3
3	<u>1011578</u>	Washer, 5/16 Type B Flat	4
4	<u>1011697</u>	Washer, 5/16 Flat	4
5	<u>1014304</u>	Nut, 5/16-18 Stainless-Steel Hex	12
6	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	8
7	<u>101795701</u>	Asm, Wire, #6blk, 15 In	2
8	<u>103504301</u>	Tee, Batt Ret Ctr Short	2
9	<u>103696801</u>	J Bolt, Batt Hold Down 12"	4
10	<u>103958101</u>	J-bolt 10.75"	4
11	<u>105138301</u>	Battery, 8-Volt, JCI GC8 Type E (includes item 12)	6
12	<u>103765601</u>	Cap, Spin, 8-Volt Battery	1

13
E

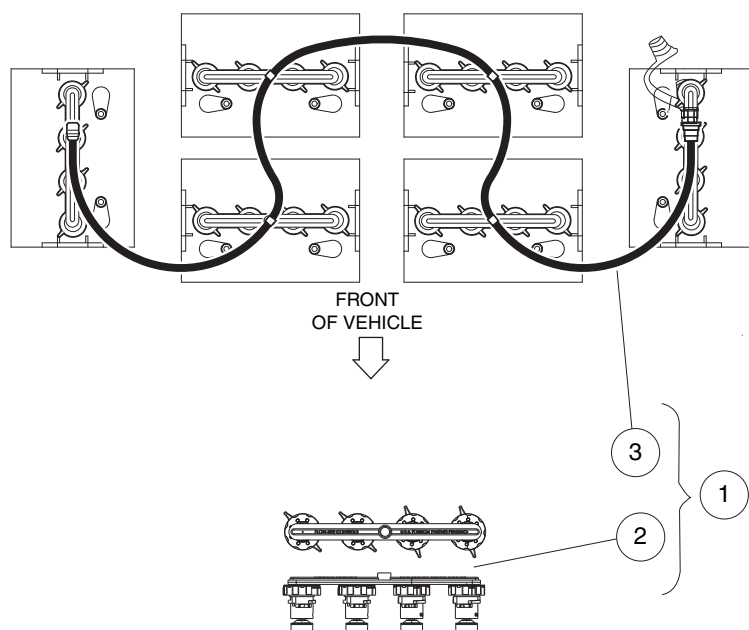


002526-001

SINGLE POINT WATERING SYSTEM (SPWS)

ITEM	PART NO.	DESCRIPTION	QTY	13
1	<u>103711302</u>	1 2 3 4 Kit, Spws, Us 8v, Ds (includes items 2 and 3)	1	
2	<u>103510602</u>	Spws, Manifold Asm, 8v Non-Trojan	6	E
3	<u>103864601</u>	Asm, Hose, Spws, Ds 8v	1	

13


E

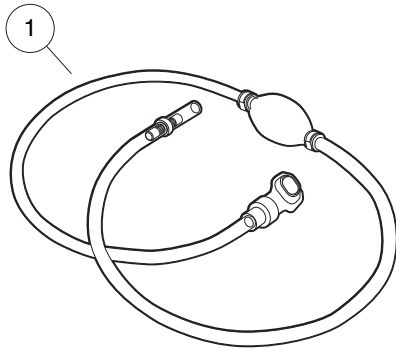

11



12

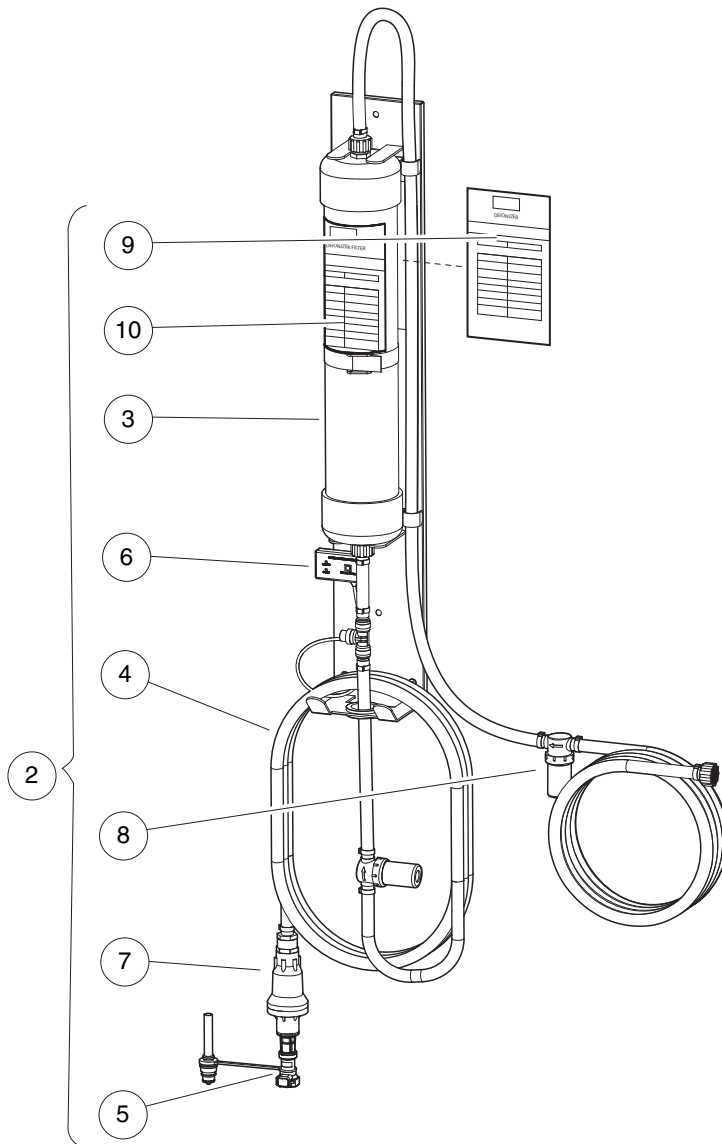

002523-003

HAND PUMP AND DEIONIZER (BATTERY-POWERED QUALITY LIGHT)

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>104006101</u>	Kit, Hand Pump, Spws	1
2	<u>105166801</u>	Deionizer, w/Battery-Powered Water Quality Light (includes items 3 through 10)	1
3	<u>104005901</u>	Cartridge, Deionizer	1
4	<u>105166901</u>	Hose,outlet,deionizer	1
5	<u>105167001</u>	Flow Ind, W/coupler, Deionizer	1
6	<u>105167101</u>	Light, Quality, Battery-Powered, w/T-Fitting	1
7	<u>105168501</u>	Regulator, Pressure, Deionizer	1
8	<u>105168601</u>	Strainer, In-line, Deionizer	1
9	<u>AM1300001</u>	Decal, Filter Log, Blue	1
10	<u>AM1300201</u>	Decal, Inspect Log, Yellow	1
11	AM1300101	Decal, Filter Log, Blue, Pack of 100	A/R
12	AM1300301	Decal, Inspect Log, Yellow, Pack of 100	A/R


13

E

ELECTRIC MOTOR

14

E

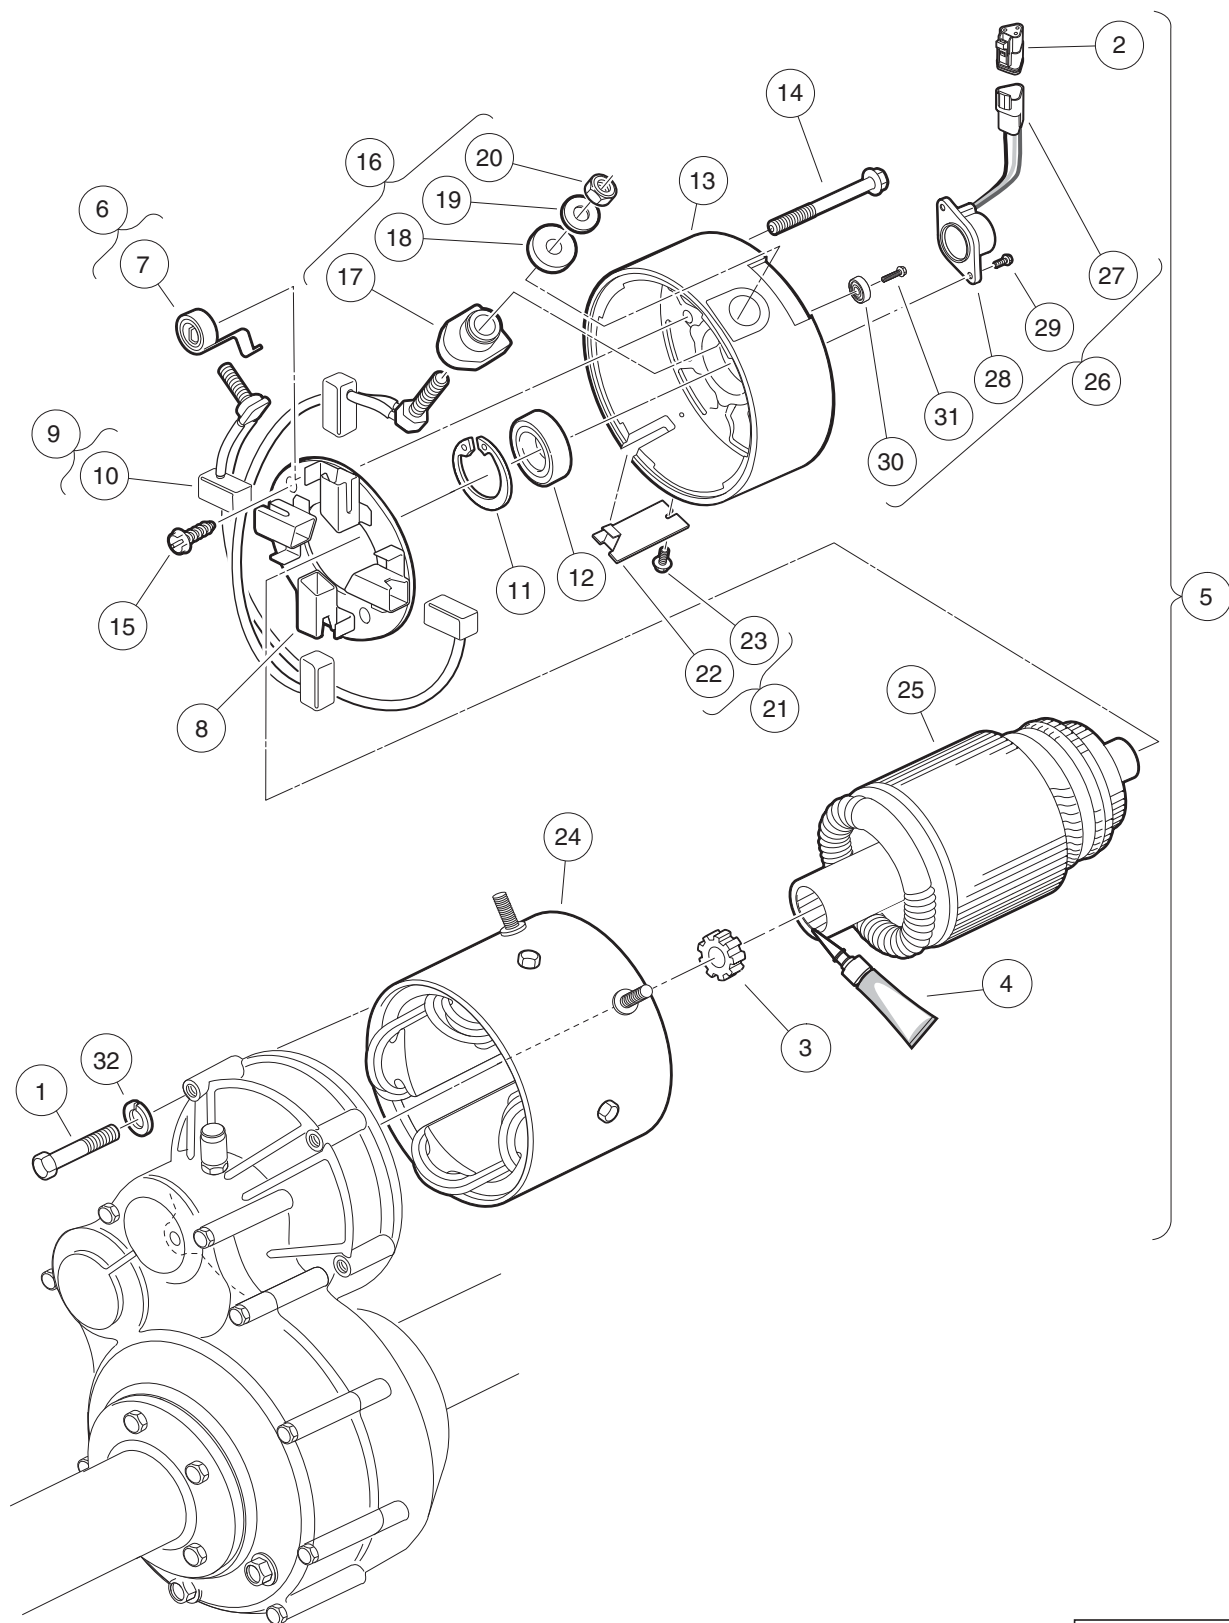

000185-002

MOTOR (MODEL EJ8-4001A) – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1014201	Screw, 1/4-20 X 2.25 Hex Cap	3
2	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
3	<u>102235201</u>	Bumper, Drive Unit	1
4	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
5	<u>103572501</u>	IQ Electric Motor, 48-VDC 3.3 hp (includes items 6 through 26)	1
6	<u>102186001</u>	Spring Kit, Motor Brush (includes item 7)	1
7	N/A	Spring, Brush, S-g	4
8	<u>102186101</u>	Brush Box Assembly	1
9	<u>102186201</u>	Brush Kit, Motor (includes item 10)	1
10	N/A	Assembly, Brush and Terminal	2
11	N/A	Ring, 2.24" Internal Retaining	1
12	<u>102186401</u>	Bearing, Ball	1
13	<u>102186701</u>	End Cap, Motor	1
14	N/A	Screw, 1/4-20 X 2.25 Hex-Head Washer	2
15	<u>102186901</u>	Screw, #8-32 X .5 Hex-Head	2
16	<u>102187101</u>	Hardware Kit, Motor Terminal (includes items 17 through 20)	2
17	N/A	Bushing, Nylon	2
18	N/A	Washer, Nylon Flat	2
19	N/A	Washer, Flat, 5/16 Steel	2
20	N/A	Nut, Brass Hex, 5/16 - 18	2
21	<u>102187201</u>	Plate Kit, Motor Cover (includes items 22 and 23)	1
22	N/A	Assembly, Cover Plate	1
23	N/A	Screw, #8-32 x 0.375, Taptite Thread	1
24	<u>102704701</u>	Frame and Field Assembly	1
25	<u>102704801</u>	Armature Assembly	1
26	<u>102704901</u>	Kit, Speed Sensor (includes items 27 through 31)	1
27	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
28	N/A	Sensor, Motor Speed, ADC	1
29	N/A	Screw, #8-32, Taptite Thread	2
30	N/A	Magnet, ADC Motor	1
31	N/A	Screw, 1/4-20 x 0.5	1
32	<u>451</u>	Lockwasher, 1/4 Split	3
Note: The F1 and F2 terminal posts on the EJ8-4001A motor have 1/4 - 20			


14

E

TRANSAXLE – ELECTRIC VEHICLES

15

E

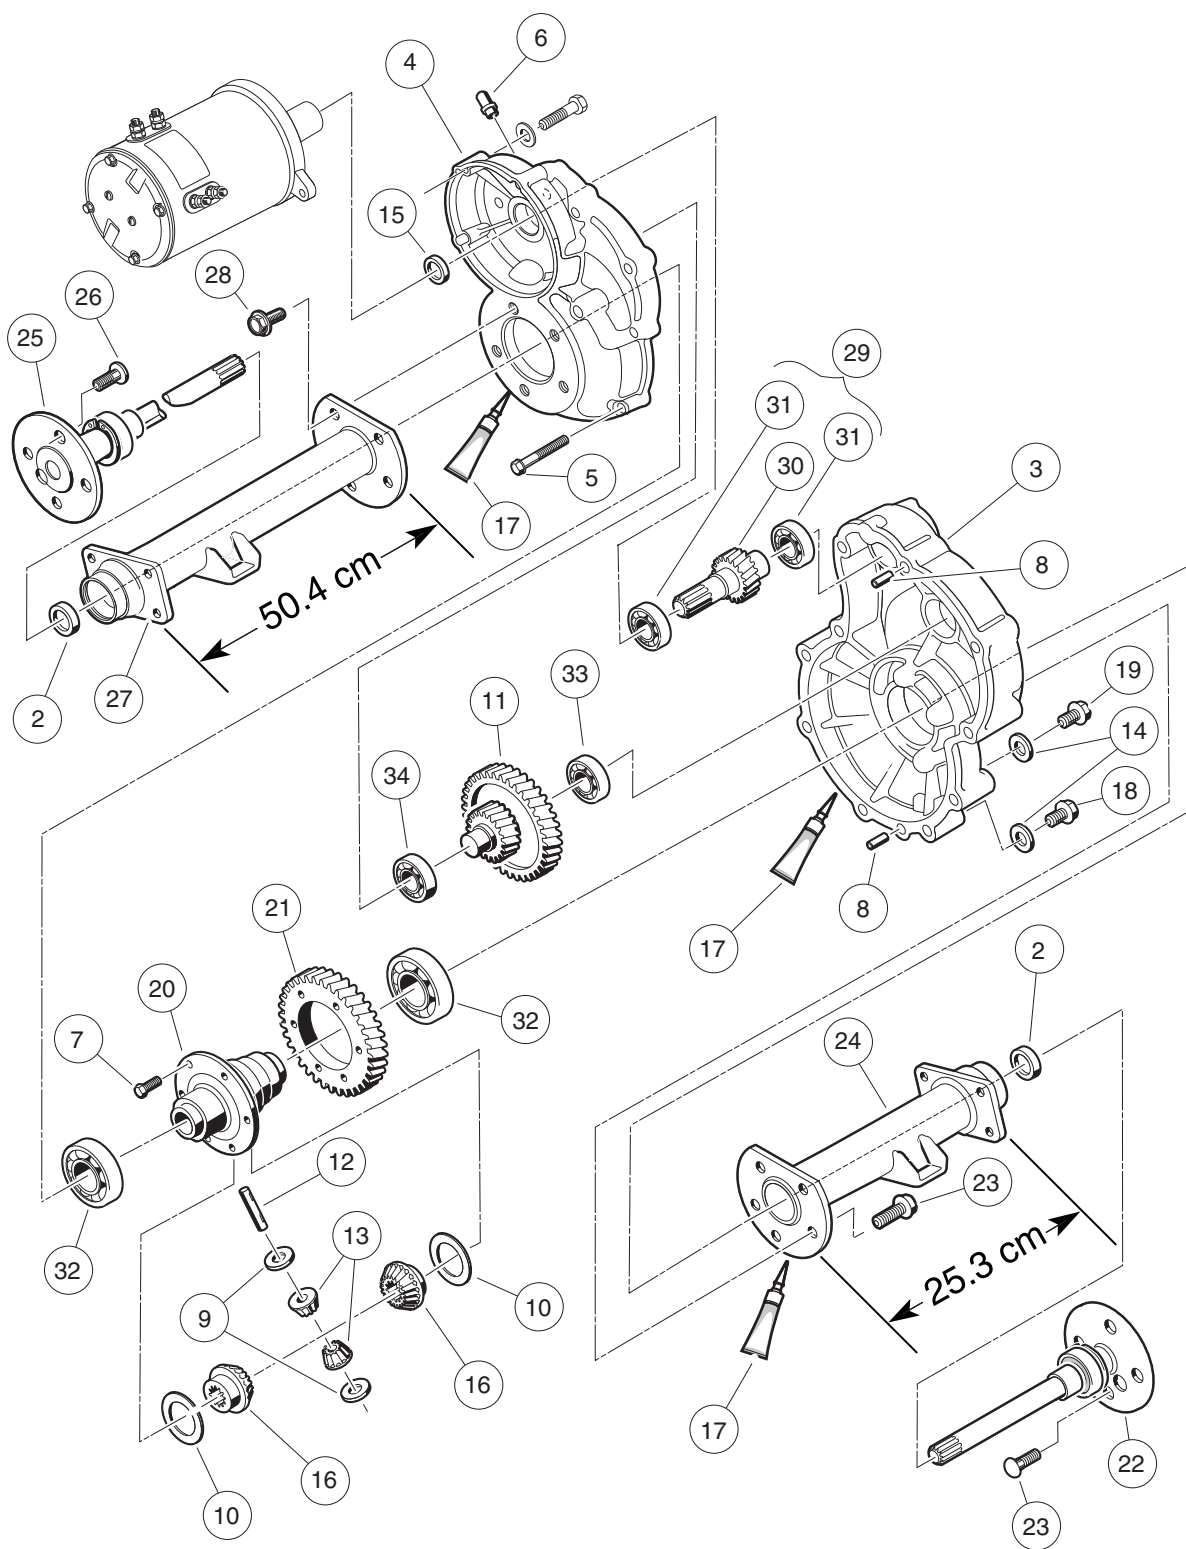


000223-005

TRANSAXLE – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102771701</u>	Transaxle, Electric (includes items 2 through 34)	1
2	<u>1013794</u>	Axle Shaft Oil Seal	2
3	<u>101895401</u>	Gear Case, Driver-Side	1
4	<u>101895501</u>	Gear Case, Passenger-Side	1
5	<u>101897001</u>	Screw, M8-1.25 X 60mm Hex-Head	11
6	<u>101897201</u>	Breather	1
7	<u>101897401</u>	Screw, M10-1.25 X 25mm	6
8	<u>101897601</u>	Pin, 11mm OD X 8.5mm ID X 10mm	2
9	<u>101903601</u>	Washer, Thrust	2
10	<u>101903701</u>	Washer, Thrust	2
11	<u>101906901</u>	Intermediate Shaft Assembly	1
12	<u>101922101</u>	Pin, 15.99mm X 88.7mm Dowel	1
13	<u>101923001</u>	Gear, Differential Idler	2
14	<u>101923201</u>	Gasket	2
15	<u>101923501</u>	Seal, Lip	1
16	<u>101923901</u>	Gear, Differential	2
17	<u>101928701</u>	Liquid Gasket (Transaxle case)	1
18	<u>101972101</u>	Plug, M14-1.5 X 12mm Magnetic	1
19	<u>101972201</u>	Plug, M14-1.5 X 12mm Hex	1
20	<u>102356601</u>	Housing, Differential, 6 Bolt	6
21	<u>102356801</u>	Gear, Differential Output, 6-Bolt	6
22	<u>102886301</u>	Axle Assembly, Driver-Side (includes item 23)	1
23	<u>101922201</u>	Lug Stud	4
24	<u>102886401</u>	Tube, Axle, Driver-Side	1
25	<u>102886501</u>	Axle Assembly, Passenger-Side (includes item 26)	1
26	<u>101922201</u>	Lug Stud	4
27	<u>102886601</u>	Tube, Axle, Passenger-Side	1
28	<u>102902801</u>	Screw, M10 X 30	10
29	<u>103582801</u>	Asm, E Trans Shaft/bearing (includes items 30 and 31)	1
30	N/A	Shaft, Input	1
31	<u>7335</u>	Bearing	2
32	<u>7330</u>	Inner Axle Tube Bearing	2
33	<u>7335</u>	Bearing	1
34	<u>7336</u>	Bearing	1

15

E

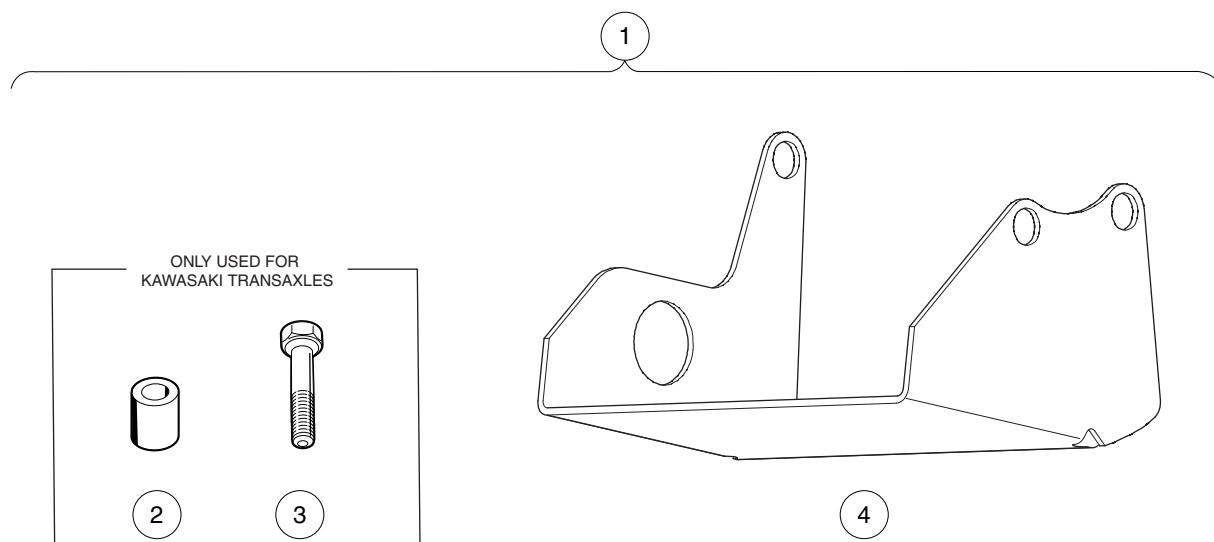

000365-002

DIFFERENTIAL GUARD – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	15
		1 2 3 4		
1	<u>101611402</u>	Kit, Differential Guard, Elec Vehicles (includes items 2 through 4)	1	
2	<u>101914001</u>	Spacer, Steel	2	E
3	<u>101936101</u>	Screw, M10-1.50 X 60mm Hex Cap	2	
4	<u>101978601</u>	Guard, Differential, Electric Vehicle Transaxle	1	


15

E

BATTERY CHARGERS

16

E

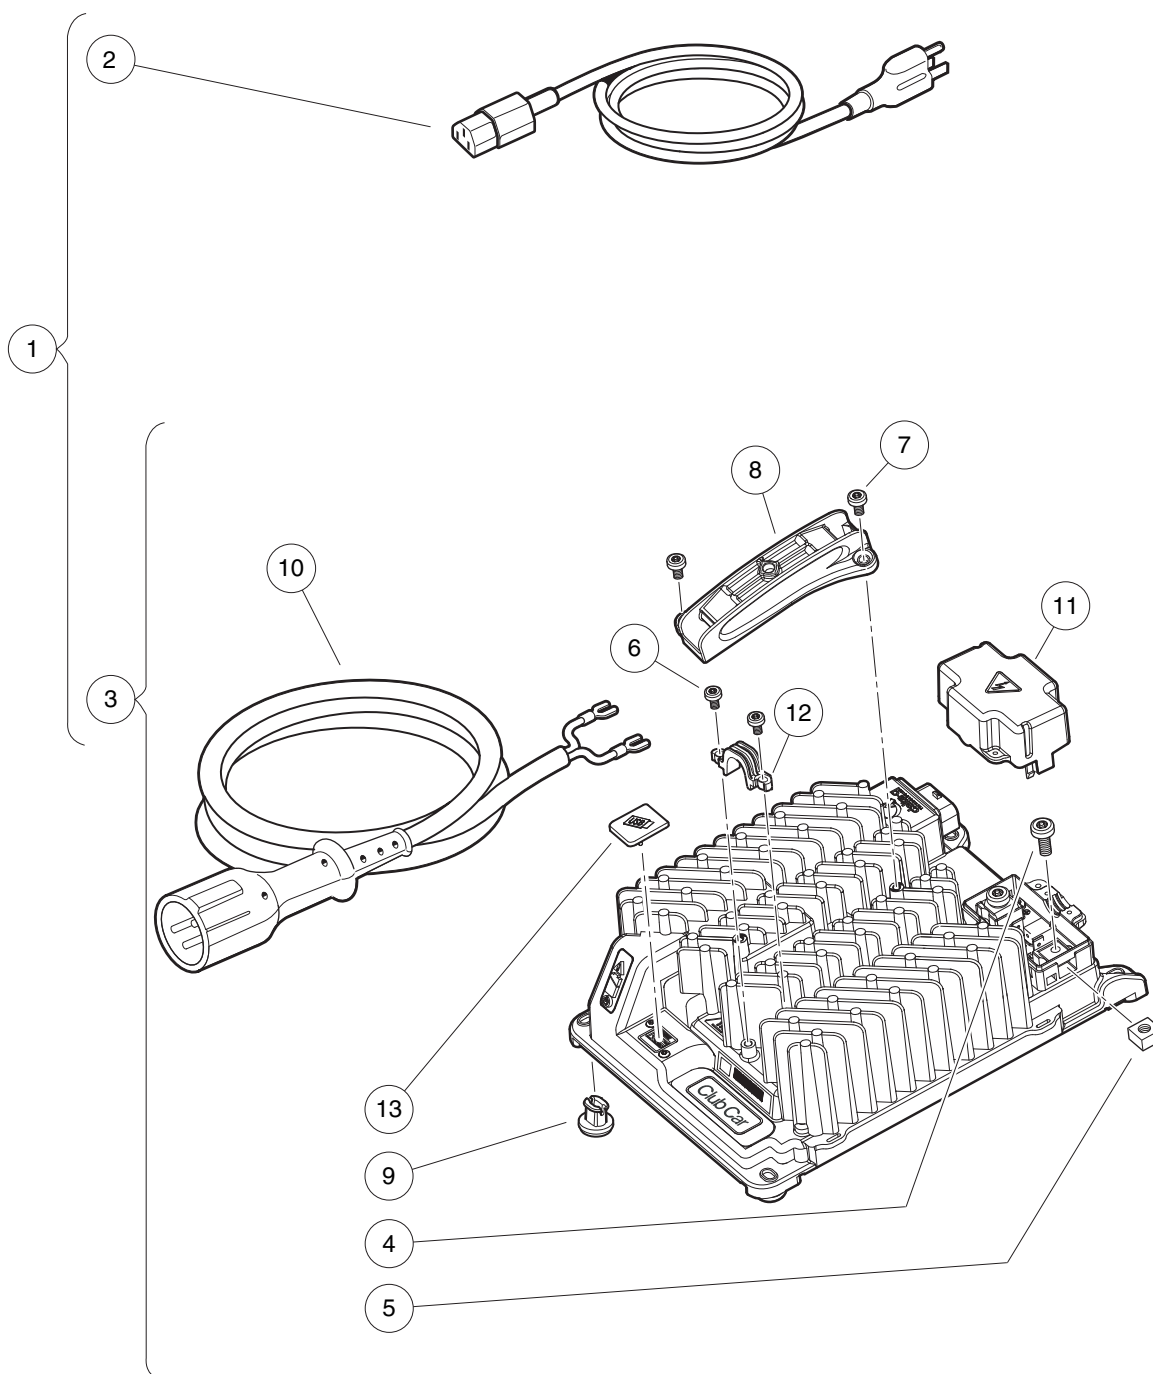


000610-002

BATTERY CHARGER, HIGH-FREQUENCY – U.S./CANADA

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>105095201</u>	Charger, High-Freq, Service, 9ft Yel DC, 6ft AC, US/Canada (includes items 2 and 3)	1
2	<u>104024201</u>	Cord, AC, Nema To Iec320, 6ft (1.83 m), U.S./Canada	1
3	<u>104029601</u>	Charger, Asm, High-Freq, 9ft (2.74 m) Yellow DC Cord (includes items 4 through 13)	1
4	<u>104024501</u>	Screw, M6, Torx Head	2
5	<u>104024601</u>	Nut, M6, Square, Captured	2
6	<u>104028901</u>	Screw, M4 X .70, Pan Hd, Torx	2
7	<u>104029001</u>	Screw, M5 X .80, Pan Hd, Torx	2
8	<u>105003601</u>	Handle, Charger, High-Freq	1
9	<u>105003701</u>	Foot, Charger, High-Freq	4
10	<u>105070101</u>	Cord, DC, Yellow, 9ft (2.74 m)	1
11	<u>105092301</u>	Cover, DC Terminal Block, High-Freq Charger	1
12	<u>105093101</u>	Strain Relief, High-Freq, External, Charger	1
13	<u>105123801</u>	Cover, USB	1
Note: This charger includes both an AC cord and DC cord. For additional cord lengths that may be used with this charger, see the Battery Charger Cords page.			

16
E

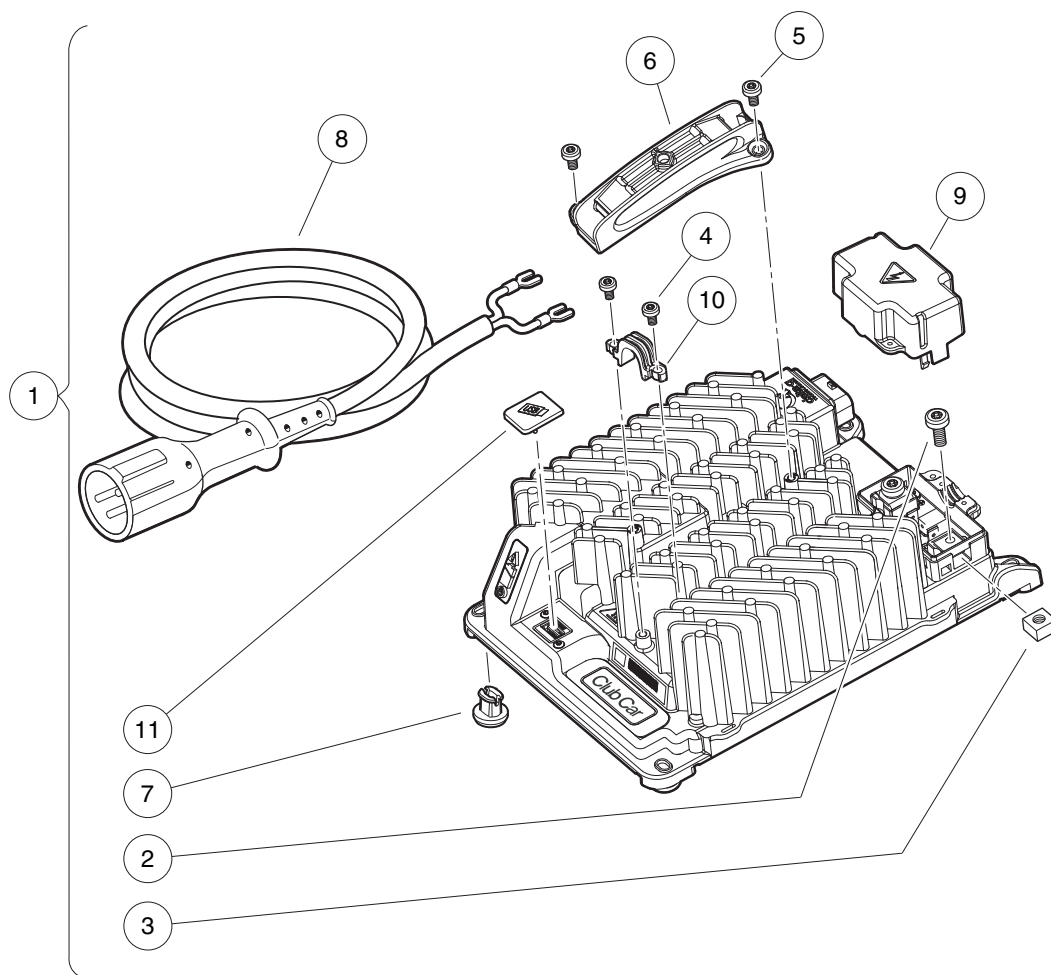


000610-003

BATTERY CHARGER, HIGH-FREQ., 2.74 M DC CORD – GLOBAL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>104029601</u>	Charger, Asm, High-Freq, 9ft (2.74 m) Yellow DC Cord (includes items 2 through 11)	1
2	<u>104024501</u>	Screw, M6, Torx Head	2
3	<u>104024601</u>	Nut, M6, Square, Captured	2
4	<u>104028901</u>	Screw, M4 X .70, Pan Hd, Torx	2
5	<u>104029001</u>	Screw, M5 X .80, Pan Hd, Torx	2
6	<u>105003601</u>	Handle, Charger, High-Freq	1
7	<u>105003701</u>	Foot, Charger, High-Freq	4
8	<u>105070101</u>	Cord, DC, Yellow, 9ft (2.74 m)	1
9	<u>105092301</u>	Cover, DC Terminal Block, High-Freq Charger	1
10	<u>105093101</u>	Strain Relief, High-Freq, External, Charger	1
11	<u>105123801</u>	Cover, USB	1
Note: This charger does not include the AC cord. To complete the charger, choose the appropriate type and length of AC cord found on the Battery Charger Cords page.			

16
E

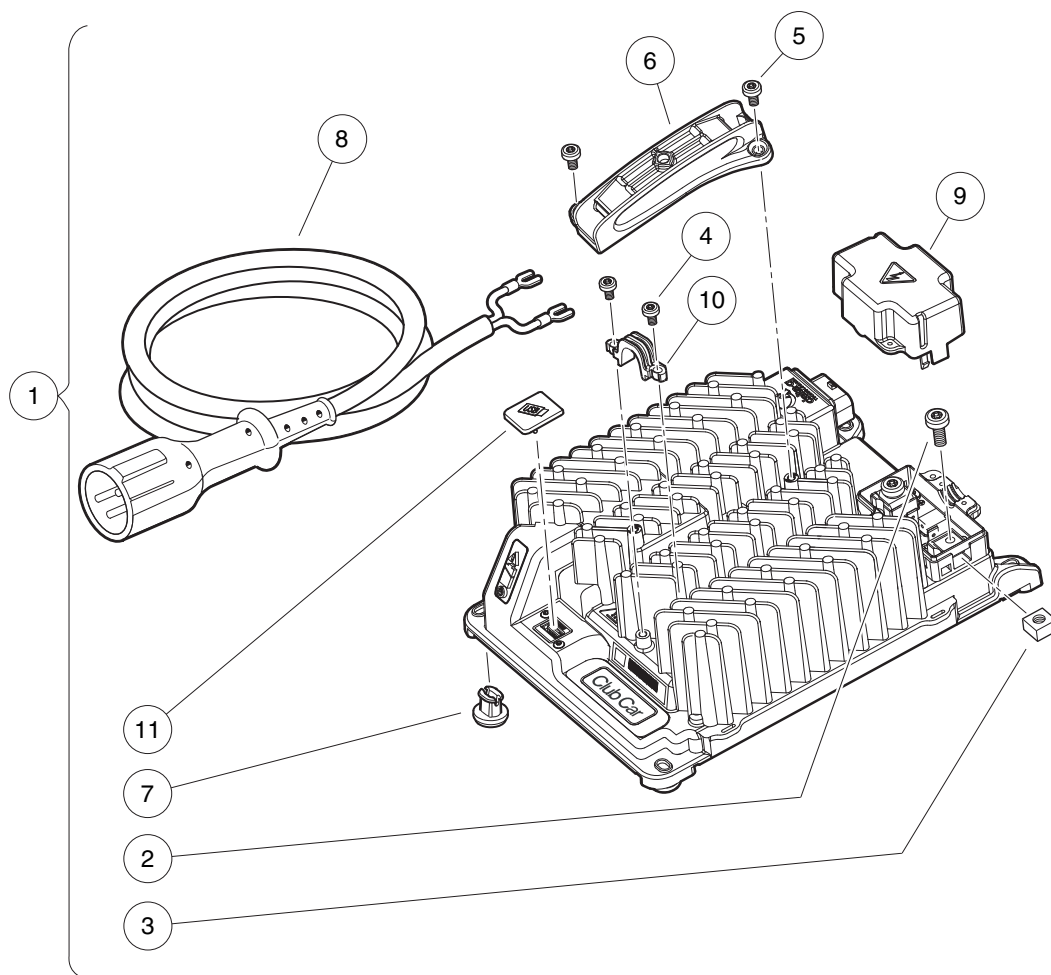


000610-003

BATTERY CHARGER, HIGH-FREQ., 3.66 M DC CORD – GLOBAL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>104029602</u>	Charger, Asm, High-Freq, 12ft (3.66 m) Yellow DC Cord (includes items 2 through 11) ..	1
2	<u>104024501</u>	Screw, M6, Torx Head	2
3	<u>104024601</u>	Nut, M6, Square, Captured	2
4	<u>104028901</u>	Screw, M4 X .70, Pan Hd, Torx	2
5	<u>104029001</u>	Screw, M5 X .80, Pan Hd, Torx	2
6	<u>105003601</u>	Handle, Charger, High-Freq	1
7	<u>105003701</u>	Foot, Charger, High-Freq	4
8	<u>105070102</u>	Cord, DC, Yellow, 12ft (3.66 m)	1
9	<u>105092301</u>	Cover, DC Terminal Block, High-Freq Charger	1
10	<u>105093101</u>	Strain Relief, High-Freq, External, Charger	1
11	<u>105123801</u>	Cover, USB	1
Note: This charger does not include the AC cord. To complete the charger, choose the appropriate type and length of AC cord found on the Battery Charger Cords page.			

16

E

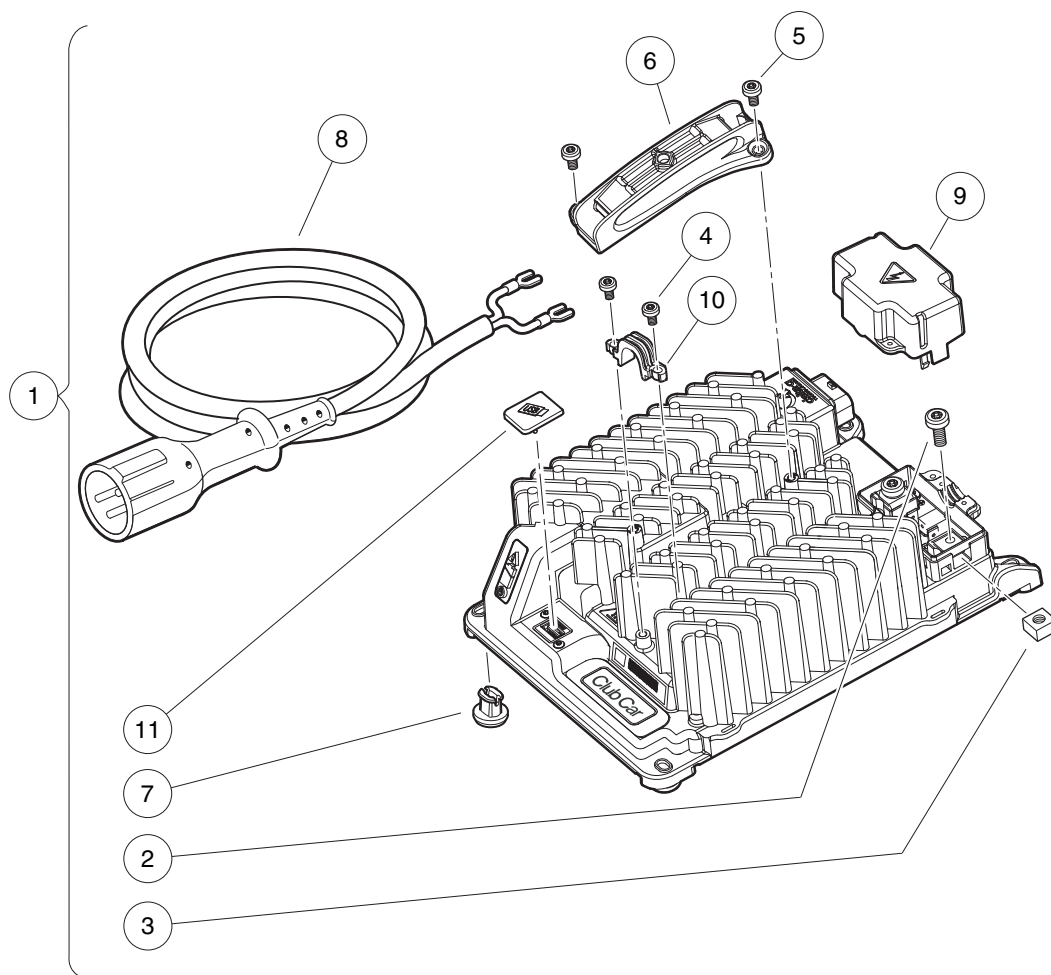









000610-003

BATTERY CHARGER, HIGH-FREQ., 6.1 M DC CORD – GLOBAL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>104029603</u>	Charger, Asm, High-Freq, 20ft (6.1 m) Yellow DC Cord (includes items 2 through 11)	1
2	<u>104024501</u>	Screw, M6, Torx Head	2
3	<u>104024601</u>	Nut, M6, Square, Captured	2
4	<u>104028901</u>	Screw, M4 X .70, Pan Hd, Torx	2
5	<u>104029001</u>	Screw, M5 X .80, Pan Hd, Torx	2
6	<u>105003601</u>	Handle, Charger, High-Freq	1
7	<u>105003701</u>	Foot, Charger, High-Freq	4
8	<u>105070103</u>	Cord, DC, Yellow, 20ft (6.1 m)	1
9	<u>105092301</u>	Cover, DC Terminal Block, High-Freq Charger	1
10	<u>105093101</u>	Strain Relief, High-Freq, External, Charger	1
11	<u>105123801</u>	Cover, USB	1
Note: This charger does not include the AC cord. To complete the charger, choose the appropriate type and length of AC cord found on the Battery Charger Cords page.			

16

E

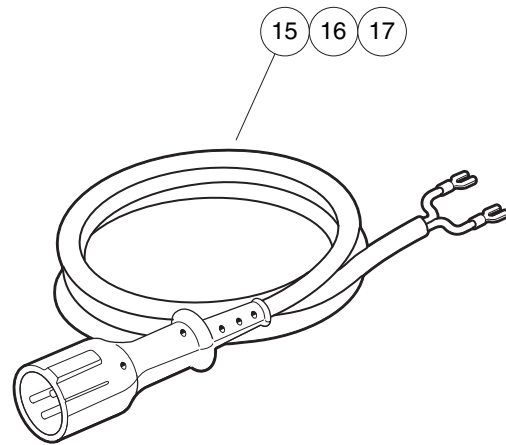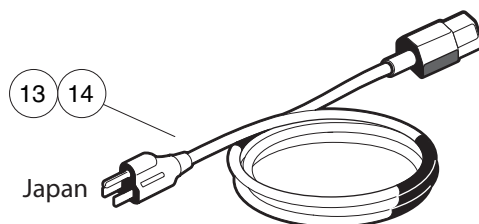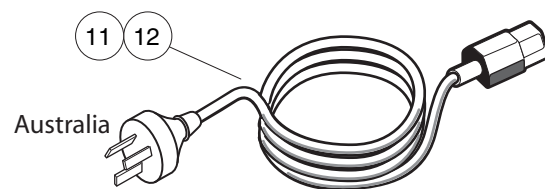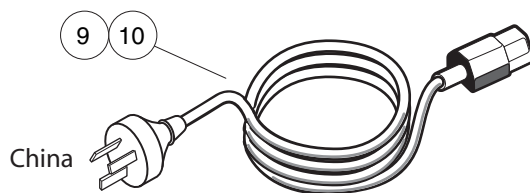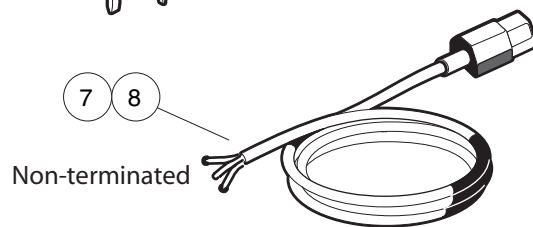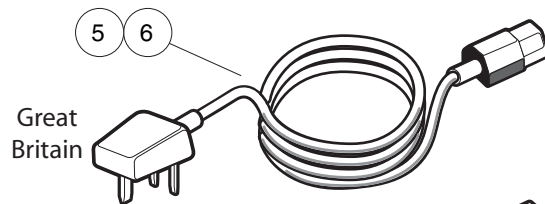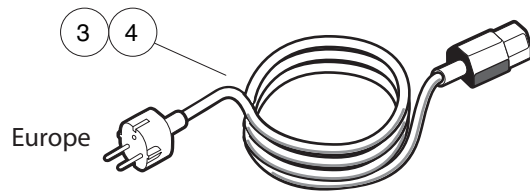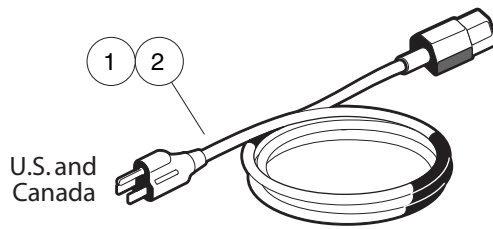

000610-004

CORDS – BATTERY CHARGER, HIGH-FREQUENCY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	104024201	Cord, AC, Nema To lec320, 6ft (1.83 m), U.S./Canada	A/R
2	104024202	Cord, AC, Nema To lec320, 9ft (2.74 m), U.S./Canada	A/R
3	<u>104024401</u>	Cord, AC, lec320, 6ft (1.83 m), Europe	A/R
4	<u>104024402</u>	Cord, AC, lec320, 9ft (2.74 m), Europe	A/R
5	<u>104028501</u>	Cord, AC, lec320, 6ft (1.83 m), Great Britain	A/R
6	<u>104028502</u>	Cord, AC, lec320, 9ft (2.74 m), Great Britain	A/R
7	104028601	Cord, AC, lec320, 6ft (1.83 m), Non-terminated	A/R
8	104028602	Cord, AC, lec320, 9ft (2.74 m), Non-terminated	A/R
9	105068201	Cord, AC, lec320, 6ft (1.83 m), China	A/R
10	105068202	Cord, AC, lec320, 9ft (2.74 m), China	A/R
11	105068301	Cord, AC, lec320, 6ft (1.83 m), Australia	A/R
12	105068302	Cord, AC, lec320, 9ft (2.74 m), Australia	A/R
13	105068401	Cord, AC, lec320, 6ft (1.83 m), Japan	A/R
14	105068402	Cord, AC, lec320, 9ft (2.74 m), Japan	A/R
15	<u>105070101</u>	Cord, DC, Yellow, 9ft (2.74 m)	A/R
16	<u>105070102</u>	Cord, DC, Yellow, 12ft (3.66 m)	A/R
17	<u>105070103</u>	Cord, DC, Yellow, 20ft (6.1 m)	A/R

16
E


MAINTENANCE AND SERVICE TOOLS

17

G

E

D

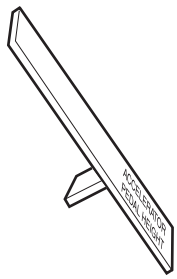


1



2



3

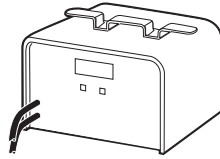


4




5



6

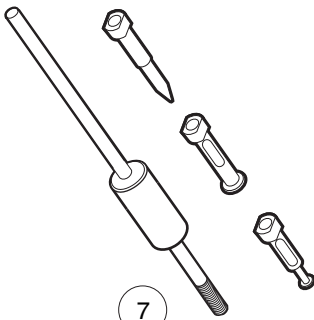


7

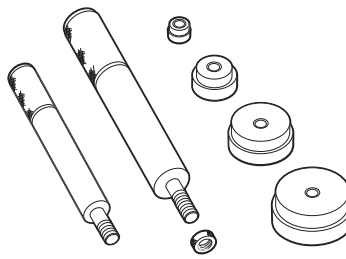

8




9

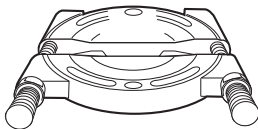


10




11

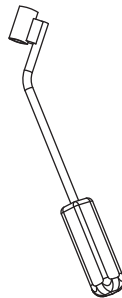

12

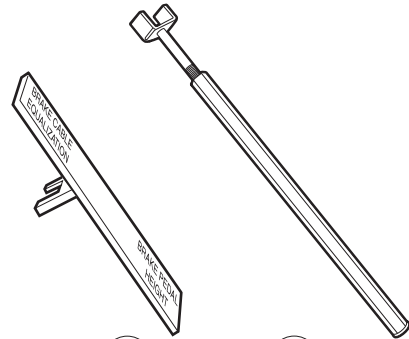


13

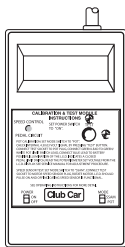


16



 17



18

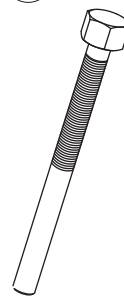

19

MAINTENANCE AND SERVICE TOOLS





ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17 G E D
		1 2 3 4 The following tool list includes all tools available from Club Car for maintenance and service procedures for gasoline, electric, and/or diesel vehicles, both past and present models. Be sure to carefully examine the tool list for applicability to your vehicle before ordering.				
1	<u>101871001</u>	Accelerator Pedal Adjustment Tool		1	1	
2	<u>101813202</u>	Adhesive, Guide Ring, 3-Gram Tube			1	
3	<u>101641202</u>	Arbor		1		
4	<u>101831901</u>	Battery Discharge Machine, 36/48 Volt			1	
5	<u>1014305</u>	Battery Terminal Protector Spray	1	1	1	
6	<u>1011767</u>	Battery Thermometer	1	1	1	
7	<u>1016417</u>	Bearing and Oil Seal Remover Assembly	1	1	1	
8	<u>1016416</u>	Bearing Driver Set	1	1	1	
9	<u>1012811</u>	Bearing Puller	1	1	1	
10	<u>1012812</u>	Bearing Puller Wedge Attachment	1	1	1	
11	<u>1013582</u>	Brake Adjustment Tool (used only on vehicles with manually adjusted mechanical brakes)		1	1	
12	<u>102555501</u>	Brake Cable Release Tool	1	1	1	
13	<u>102249901</u>	Brake Pedal Adjustment Tool Kit (used for the Carryall Electric Industrial Truck only) (includes items 14 and 15).....			1	
14	****	Brake Pedal Adjustment Tool			1	
15	****	Brake Pedal Tension Tool			1	
16	<u>101887101</u>	Calibration Test Module			1	
17	<u>101808401</u>	Cam Installation Tool		1		
18	<u>102562401</u>	Charger Bezel Tool			1	
19	<u>102686101</u>	Clutch Removal Tool (for 4x4 vehicles)	1	1		
		Please refer to the maintenance and service manual for proper tool application. **** Special order item available upon request				

17

G

E

D

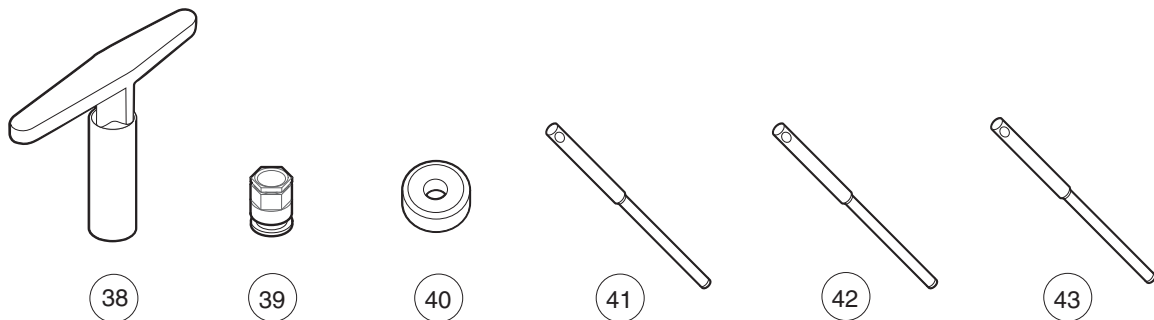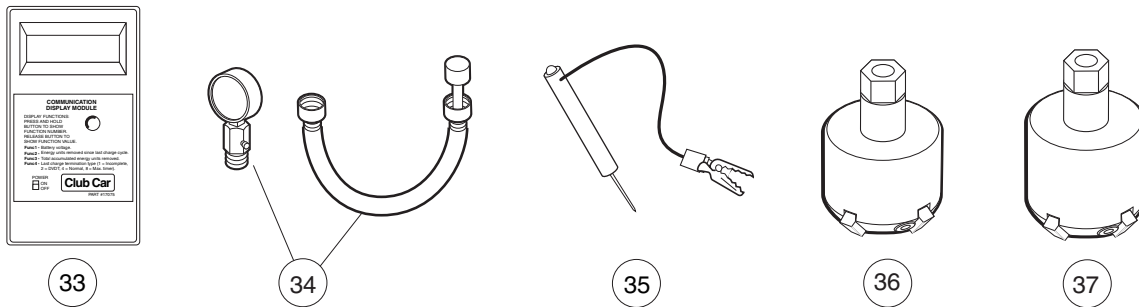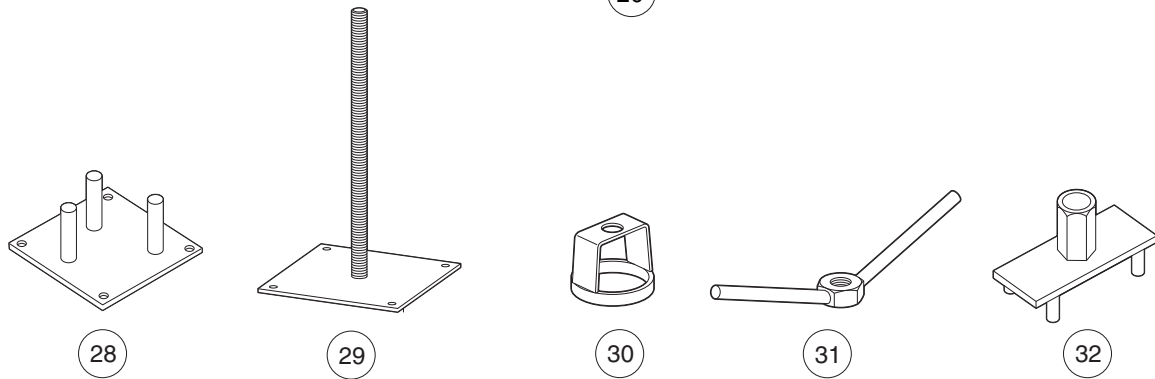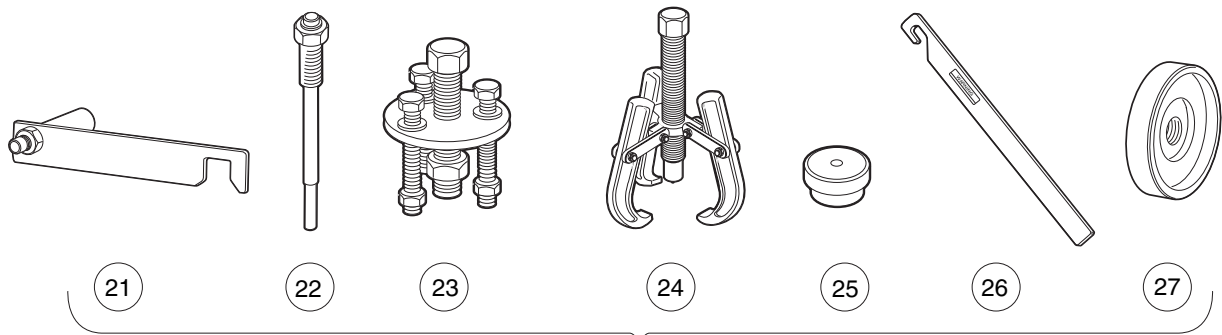

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17 G E D
		1 2 3 4				
20	<u>1014510</u>	Clutch Tool Kit (includes items 21 - 27)		1		
21	<u>1014498</u>	Clutch Alignment Tool (for pre-unitized transaxle vehicles built prior to 1997 model year)		1		
22	<u>1014496</u>	Drive Clutch Puller (for Kawasaki engines only)		1		
23	<u>1014497</u>	Drive Clutch Hub Puller (for Kawasaki engines only)		1		
24	<u>1014508</u>	Driven Clutch Cam Puller (for Kawasaki engines only)		1		
25	<u>1014507</u>	Driven Clutch Puller Plug (for Kawasaki engines only)		1		
26	<u>1015524</u>	Drive Clutch Holder Tool Assembly (for Kawasaki engines only)		1		
27	<u>101809101</u>	Press Weldment (for Kawasaki engines only)		1		
28	<u>102601501</u>	Drive ClutchFixed Sheave Tool (for 4x4 vehicles)	1	1		
29	<u>102603501</u>	Driven Clutch Spring Compression Base (for use with items 30 and 31) (for 4x4 vehicles)	1	1		
30	<u>102605201</u>	Driven Clutch Spring Compression Collar (for use with items 29 and 31) (for 4x4 vehicles)	1	1		
31	<u>102606101</u>	Driven Clutch Spring Compression Nut (for use with items 29 and 30) (for 4x4 vehicles)	1	1		
32	<u>102607501</u>	Drive Clutch Spider Removal Tool (for 4x4 vehicles)	1	1		
33	101831801	Communication Display Module			1	
34	101641002	Compression Gauge and Adapter		1		
35	1011273	Continuity Tester		1	1	
36	<u>102773801</u>	Cutter, Valve Seat, #122		1		
37	<u>102773901</u>	Cutter, Valve Seat #115		1		
38	<u>102774101</u>	Wrench, T, #505.....		1		
39	<u>102774101</u>	Adapter, T-Wrench		1		
40	102675401	Cutter, Valve Seat, 60 Degree (requires item 51) (for Honda GX620 Gasoline Engines)		1		
41	<u>102774201</u>	Pilot, 6.6 MM		1		
42	<u>102774301</u>	Pilot, 6.62 MM.....		1		
43	<u>102774401</u>	Pilot, 6.65 MM.....		1		
		Please refer to the maintenance and service manual for proper tool application.				

17


G

E

 
D




44

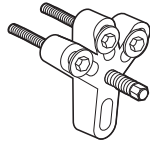

45

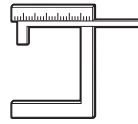


46

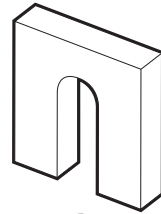


47



 48




49

 

50



51

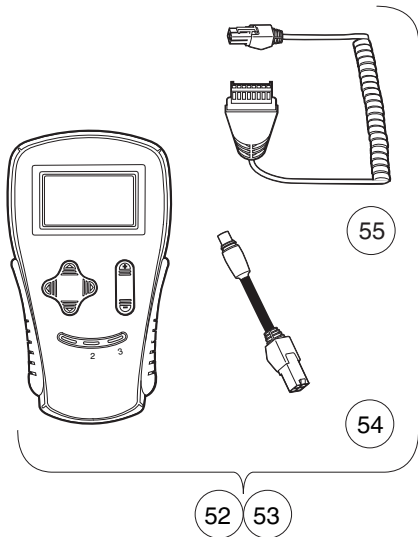


52

53

55

54

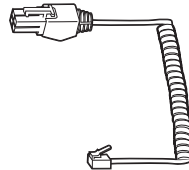

56



58




59

60



61

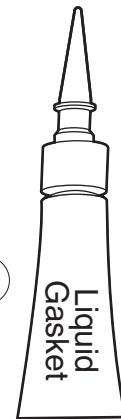


57

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17 G E D
		1 2 3 4				
44	<u>1012151</u>	Dry Moly Lubricant	1	1	1	
45	<u>1016627</u>	Flywheel Puller Kit (for Kawasaki Engines)		1		
46	<u>102669901</u>	Gauge, Carburetor Float Level (for Honda GX620 Gasoline Engines)		1		
47	<u>1016418</u>	Gear Yoke	1	1	1	
48	<u>101933101</u>	Governor Shaft Installation Tool (for Kawasaki Engine Vehicles)		1		
49	<u>102169401</u>	Hydraulic Brake Adjuster (for Turf/CA 272/472, Pioneer/XRT 1200, Bobcat 2100, HUV 4213)			1	
50	<u>1011478</u>	Hydrometer	1	1	1	
51	<u>1013593</u>	Internal Retaining Ring Pliers	1	1	1	
52	<u>102248803</u>	IQ Display Module (IQDM) Kit (IQ System and IQ Plus vehicles)			1	
		(includes items 54 and 55)				
53	<u>102248804</u>	IQ Display Module (IQDM-P) Kit (IQ System and IQ Plus vehicles)			1	
		(includes items 54 and 55)				
54	<u>102251501</u>	Adaptor, Cable			1	
55	<u>102241502</u>	IQDM Series 2 Cable			1	
56	<u>102241501</u>	IQDM Series 1 Cable (replacement)			1	
57	<u>101928701</u>	Liquid Gasket (transaxle case)	1	1	1	
58	<u>102243402</u>	Moly-Teflon Lubricant (4-oz. (113-gram) tube)			1	
59	<u>101997201</u>	Paint, Touch-Up – Beige*		1	1	
59	<u>101997207</u>	Paint, Touch-Up – Black*		1	1	
59	<u>101997212</u>	Paint, Touch-Up – Burgundy*		1	1	
59	<u>101997211</u>	Paint, Touch-Up – Classic Blue (Navy)*		1	1	
59	<u>101997205</u>	Paint, Touch-Up – Dark Gray*	1	1	1	
59	<u>101997209</u>	Paint, Touch-Up – Dark Green*	1	1	1	
59	<u>101997204</u>	Paint, Touch-Up – Gray*	1	1	1	
59	<u>101997203</u>	Paint, Touch-Up – Red*	1	1	1	
59	<u>101997206</u>	Paint, Touch-Up – Royal Blue (Pacific Blue)*		1	1	
59	<u>101997202</u>	Paint, Touch-Up – White*	1	1	1	
60	<u>102562301</u>	Paint, Precedent Underbody – Gray		1	1	
61	<u>102587201</u>	Paint Pen, Touch-Up, Precedent Underbody – Black		1	1	
Please refer to the maintenance and service manual for proper tool application. * Item 59 is not for use on Surlyn[®] body material, which is used on Precedent vehicles.						



62

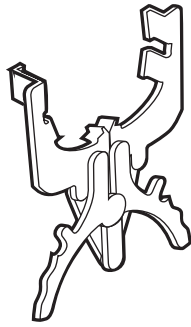

63

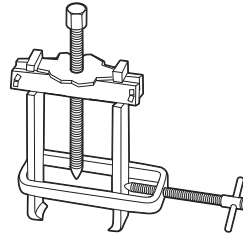


64



65



 66



67



68




69



70




71

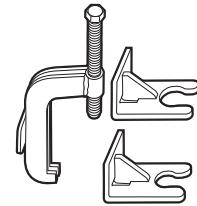

72



73

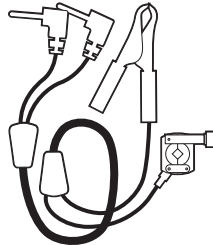


74




75



76

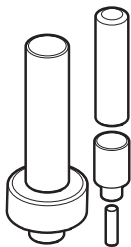

77

 

83



84



85




86

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17
		1 2 3 4				G
62	<u>1016414</u>	Piston Ring Compressor Kit (FE290, FE350 and FE400 engines)		1		E
63	<u>1016415</u>	Piston Ring Pliers (for Kawasaki Engines)		1		D
64	<u>102668801</u>	Puller, Special Use (for Kubota D722 Diesel Engines)	1			
65	<u>1012549</u>	Retaining Ring Pliers, 45° External	1	1	1	
66	<u>1012560</u>	Retaining Ring Pliers, 90° Internal	1	1	1	
67	<u>101823101</u>	Safety First Card (50 per pack)	1	1	1	
68	<u>1012809</u>	Seal Puller	1	1	1	
69	<u>102330901</u>	Spanner Wrench (for coil over shock front suspension vehicles only)	1	1		
70	<u>1014264</u>	Steering Column Bearing Press Tool		1	1	
71	<u>1014259</u>	Steering Column Retaining Ring Tool		1	1	
72	<u>102061201</u>	Steering Wheel Puller Tool	1	1	1	
73	<u>AM10753</u>	Tachometer (includes gasoline engine pick up lead only)	1	1		
74	<u>AM10771</u>	Tachometer Diesel Probe (for use with item 73)	1			
75	<u>1014162</u>	Transaxle Axle Seal Tool		1		
76	<u>1014161</u>	Transaxle Pinion Seal Tool		1		
77	<u>1014115</u>	Transmission Tool Kit		1		
78	<u>101611003</u>	Tune-Up Kit, All OHV (for FE290, FE350, FE400 only) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
79	<u>AM11804</u>	Tune-Up Kit, Gx620 (for Honda Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
80	<u>AM11805</u>	Tune-Up Kit, D722 (for Kubota Engines) (includes air filter, oil filter, fuel filters, water separator filter) (not shown)	1			
81	<u>AM1220301</u>	Tune-Up Kit, Precedent (for FE290/350 Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
82	<u>AM1232401</u>	Tune-Up Kit, FH680D (for Kawasaki V-Twin Engines) (includes oil filter, fuel filter, air filter, and spark plugs) (not shown).....		1		
83	<u>1016413</u>	Valve Clearance Adjuster Screw Holder (for FE290 engines only)		1		
84	<u>102674601</u>	Valve Guide Driver (for Honda GX620 Gasoline Engines)		1		
85	<u>101641201</u>	Valve Guide Reamer (FE290, FE350, and FE400 only)		1		
86	<u>102674401</u>	Valve Guide Reamer, 6.6 mm (for Honda GX620 Gasoline Engines)		1		




87

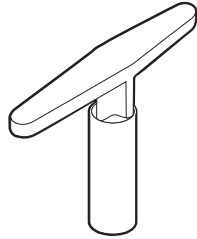


88

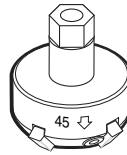


89

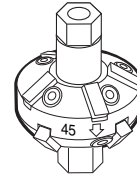


90

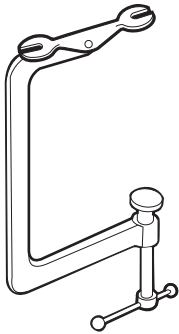


91

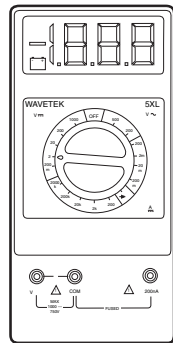


92

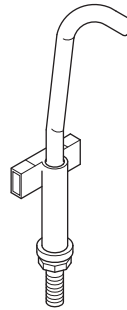


93

 

94

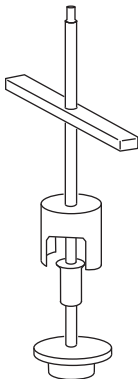

95

 

96

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17 G E D
		1 2 3 4				
87	<u>1016552</u>	Valve Seat Cutter Guide		1		
88	<u>1016551</u>	Valve Seat Cutter T-Wrench		1		
89	<u>1016553</u>	Valve Seat Cutter, 45° (32 mm diameter) (for FE290 engines only)		1		
90	<u>1016554</u>	Valve Seat Cutter, 45°/30° (35 mm diameter)		1		
91	<u>101641101</u>	Valve Spring Compressor		1		
92	<u>1011480</u>	Volt Ohm Meter	1	1	1	
93	<u>102570401</u>	Tool, Tensioning, Starter Generator (For Precedent vehicles)		1		
94	<u>103601401</u>	Puller, Drive Clutch, XRT 950*		1		
95	<u>103601701</u>	Tool, Disassembly, Driven Clutch, XRT 950		1		
96	<u>103600501</u>	Screw, Driven Clutch Disassembly, M6, XRT 950		1		
*Note: The XRT 950 Drive Clutch Puller requires the use of Screw, Driven Clutch Disassembly, CCI Part Number <u>103600501</u>.						

INDEX

Part Number and Page

AM10753	17-9	8067	6-13	1011694	5-5, 5-7
AM10771	17-9	8104	4-9	1011697	6-5, 13-13
AM10419	11-11	8233	1-3, 1-23, 1-25, 1-29, 1-33, 4-23, 4-25, 4-29, 4-31, 5-5, 5-7, 9-13, 12-3, 12-11, 13-3	1011734	5-9
AM1243501	4-27	8248	12-3, 13-3	1011767	17-3
AM1243701	4-23, 4-25, 4-27	8251	1-23, 1-25	1011779	5-13
AM1243801	4-23, 4-25, 4-27	8294	4-29	1011825	4-29
AM1300001	13-17	8450	11-7, 11-9	101187702	5-3
AM1300101	13-17	8639	4-27, 7-13, 7-15, 13-11	1011895	6-7
AM1300201	13-17	8717	5-7, 7-13, 7-15, 12-3	1011930	6-7
AM1300301	13-17	8754	1-21, 5-5, 5-7, 5-13, 6-5, 6-7, 6-9, 6-11, 6-15, 7-11	1011931	1-29, 5-5, 5-7
183	4-5, 4-7, 4-9, 4-21, 4-27, 11-7, 11-9	8755	1-33, 6-9, 6-15	1011990	1-21
304	1-31, 4-29	8861	6-11	1012151	17-7
320	1-21, 1-31, 1-33	8990	4-9, 4-19, 4-25, 4-31, 6-7, 12-5, 13-3, 13-11	1012285	4-31, 13-3, 13-11
324	4-23, 4-25	1010124	6-9	1012295	7-13, 7-15
332	1-3, 1-23, 1-25, 1-27, 1-33, 4-23, 4-25, 4-29, 13-3, 13-11	1010138	1-31, 6-11	1012303	1-33, 6-9, 6-15
334	1-33, 5-5, 5-7, 6-5, 6-7, 11-7, 11-9	1010145	6-15	1012304	6-15
357	6-9	1010150	6-9	1012412	1-23, 1-25
451	14-3	1010436	1-17	1012431	4-11, 7-15, 7-17, 7-19
706	6-9	1010543	1-27	1012438	4-7, 4-27
1016	4-5, 4-9, 4-21	1010545	1-31	1012467	6-7
1017	4-3	1010577	8-5	1012528	10-3, 13-11
1028	5-3	1010805	5-3	1012549	17-9
1032	5-3	1010829	5-13	1012560	17-9
1035	6-7	1010850	5-11	1012594	7-17, 7-19
1218	9-15	1010877	5-3	1012604	6-5
1241	1-5, 1-29, 4-5, 4-7, 5-3, 5-5, 5-7, 5-13, 7-13, 7-15, 7-23, 8-5, 9-15	1010878	1-33, 5-3	1012605	6-5
1242	4-19, 5-13, 7-11, 7-13, 7-15, 13-11	101090802	13-13	1012649	9-7
1624	5-5, 5-7, 6-7, 7-11	1010909	4-5, 4-21	1012809	17-9
2402	6-11	1010921	5-3	1012811	17-3
4029	4-29	1010927	5-3	1012812	17-3
7048	6-13	1010932	5-3	1012836	11-11
7173	4-5, 4-7, 7-23	1010933	5-3	1012986	4-13
7174	6-5, 7-11, 10-3, 13-11	1010934	7-23	1012987	12-3
7251	1-11	1010954	7-13, 7-15	101303202	1-7
7310	2-3	1010958	13-13	1013035	6-7
7311	1-29	1010984	2-3	1013042	6-7, 6-11
7330	15-3	1010993	1-23, 1-25	1013044	6-7
7335	15-3	1011084	5-9	1013052	6-7
7336	15-3	1011114	9-13, 12-11	1013061	13-9
7473	1-11, 4-5, 4-7, 5-3, 5-5, 5-7, 5-13, 7-13, 7-15, 7-23, 9-15	1011229	4-5, 4-7	1013164	6-15
7540	6-7	1011273	17-5	1013357	4-5, 4-7
7555	6-7	1011280	4-5, 4-7	1013461	4-3
7591	4-5, 4-7, 8-11	1011402	5-3	1013509	4-23, 4-25
7602	6-7	1011415	6-15	1013531	5-13
7716	5-3, 5-5, 5-7	1011418	5-3	1013547	4-31
7818	7-13, 7-15	1011439	4-5, 4-7	1013579	4-31
7820	4-29	1011466	5-11	1013582	17-3
7847	1-23, 1-25, 1-29, 1-33, 4-33	1011478	17-7	1013589	7-13, 7-15
7893	4-5, 4-9, 4-21, 7-13, 7-15	1011480	17-11	1013591	12-3
8056	4-11, 7-19	1011557	4-5, 4-7	1013593	17-7
8057	4-11, 7-15, 7-17, 7-19	1011578	1-31, 6-5, 13-13	1013609	7-13, 7-15
8058	7-15, 7-17, 7-19	1011582	4-33	1013734	13-11
		1011590	4-9	1013746	9-7
		1011652	1-27	1013794	15-3
				1013857	4-13, 4-15
				1013869	5-3

INDEX

1013870	5-3	1014808	7-15	1016366	4-7
1013871	5-5, 5-7	1014901	6-15	1016384	6-9
1013876	1-31, 5-3	1014902	6-15	1016385	6-11
1013924	5-11, 8-5	1014947	13-11	1016386	6-9
1013983	1-19	1015010	4-27	1016387	6-9
1014007	5-5, 5-7, 9-13, 12-11	101503202	1-3	1016389	6-9
1014051	11-9	1015064	12-3	101641002	17-5
1014055	11-7, 11-9	1015072	13-13	101641101	17-11
1014056	11-7, 11-9	1015137	9-7	101641201	17-9
1014057	11-7, 11-9	1015153	4-23	101641202	17-3
1014058	11-7, 11-9	1015154	4-23	1016413	17-9
1014059	11-7, 11-9	1015156	4-23, 4-25, 4-27	1016414	17-9
1014062	11-7, 11-9	1015157	4-23, 4-25	1016415	17-9
1014063	11-7, 11-9, 13-11	1015160	4-23, 4-25	1016416	17-3
1014065	7-13, 7-15, 11-7, 11-9	1015162	4-23	1016417	17-3
1014072	11-11	1015167	4-27	1016418	17-7
1014078	11-11	1015170	4-27	1016423	4-5, 4-7
1014080	11-11	1015172	4-23, 4-25	1016551	17-11
1014115	17-9	1015187	4-23, 4-25, 4-27	1016552	17-11
1014116	9-3	1015332	7-3, 7-5	1016553	17-11
1014125	6-5	1015373	7-13, 7-15	1016554	17-11
1014126	6-5	1015391	1-31	1016627	17-7
1014145	7-13, 7-15, 12-3	1015405	7-13, 7-15	1016630	4-13
1014153	5-11	101547601	3-7	1016717	4-33
1014161	17-9	1015524	17-5	1016801	11-7, 11-9
1014162	17-9	1015526	4-23, 4-25, 4-27	1016837	4-23, 4-25
1014201	14-3	1015583	1-33, 6-15	1016851	4-11
1014213	6-5	101558302	6-9	1016868	1-11
1014214	6-5	1015597	6-7, 6-13	1016879	4-3
1014217	6-5	1015737	7-13, 7-15	1016880	4-3
1014259	17-9	1015741	4-5, 4-7, 7-13, 7-15	1016901	11-7
1014264	17-9	1015752	4-33, 7-13, 7-15, 13-5	1016916	1-27
1014276	6-9	1015765	4-23	1016929	4-23, 4-25, 4-27
1014287	11-7, 11-9	1015768	4-27	1016952	1-23, 1-25
1014288	6-5, 11-7, 11-9, 13-11	1015770	4-27	1016967	1-11
1014289	7-7, 7-9	1015878	7-15	1017029	5-3
1014304	13-13	1015932	7-11	1017062	4-3
1014305	17-3	1015969	8-9	1017064	4-3
1014306	1-23, 1-25, 4-31	1016103	8-11	1017065	4-3
1014453	11-7, 11-9	101611003	17-9	101707402	4-9
1014454	11-11	101611402	15-5	1017075	4-9
1014496	17-5	1016183	6-5	1017080	1-11
1014497	17-5	1016201	11-7, 11-9	1017141	1-23, 1-25
1014498	17-5	1016230	4-27	1017145	11-11
1014507	17-5	1016267	4-27	1017226	6-5
1014508	17-5	1016269	6-5	1017235	6-15
1014510	17-5	1016287	4-27	1017266	6-11
1014530	4-29	1016289	11-7, 11-9	1017273	6-3
1014540	4-31	1016346	6-11	1017313	6-5
101454902	6-15	1016349	6-11	1017314	6-5
1014555	6-15	1016350	6-11	1017315	6-5
1014573	6-15	1016351	6-11	1017317	6-5
1014675	6-15	1016353	6-11	1017378	5-5, 5-7
1014727	7-17, 7-19	1016356	4-5, 4-7	1017380	5-5, 5-7
1014789	7-3, 7-5	1016363	4-7	1017424	5-5, 5-7
1014807	7-15, 7-17, 7-19	1016365	4-19	1017686	11-11

INDEX

1017696	5-5, 5-7	101879601	6-7	101936801	13-5
1017705	13-9	101879701	6-7	101942301	13-3, 14-3
1017721	4-5, 4-21	101879801	6-7	101953101	5-13
1017724	4-9	101879901	6-7	101954301	1-3, 1-27
1017774	1-29	101880001	6-7	101955101	4-29
1017853	4-5, 4-7	101880101	6-7	101957101	4-5, 4-7
101791101	5-11	101880201	6-7	101960501	1-7, 3-7
101795701	13-7, 13-13	101880301	6-7	101963401	7-21, 8-5
101796201	5-5, 5-7	101881501	4-31	101965205	13-11
101796501	13-9	101881601	4-31	101968701	13-7
101796801	13-9	101884801	8-5	101969701	4-29
101801001	13-9	101886101	9-13, 12-11	101972001	17-7
101802101	13-9	101887101	17-3	101972002	17-7
101806901	1-7	101894901	13-9	101972003	17-7
101808401	17-3	101895401	15-3	101972004	17-7
101809101	17-5	101895501	15-3	101972005	17-7
101810501	4-7	101897001	15-3	101972006	17-7
101813202	17-3	101897201	15-3	101972007	17-7
101814601	4-25	101897401	15-3	101972009	17-7
101815501	5-11	101897601	15-3	101972011	17-7
101815502	5-11	101898001	7-23	101972012	17-7
101816301	5-11	101903001	13-7	101972101	15-3
101816501	5-11	101903101	6-9	101972201	15-3
101816502	5-11	101903601	15-3	101978001	13-7
101817401	5-5, 5-7	101903701	15-3	101978101	13-7
101818801	5-7	101906901	15-3	101978201	13-7
101821601	4-27	101908101	13-3	101978601	15-5
101823101	17-9	101908401	13-3	101979101	7-17, 7-19
101823201	5-11	101908601	3-11	101984801	6-5
101823301	5-11	101908703	13-11	101987901	4-3
101823302	5-11	101910401	1-29, 13-11	101988001	4-3
101823801	5-11	101912401	5-9	101988002	4-3
101823901	5-11	101914001	15-5	101988101	4-3
101824001	5-11	101914401	4-5	101988201	4-3
101824002	5-11	101915201	3-7	101990703	4-13
101824101	8-11	101918501	5-3	101990801	5-13
101826801	13-11	101919801	5-5, 5-7	101991101	4-13
101827801	13-11	101920101	13-3, 13-5, 14-3	101997802	4-31
101830701	4-15	101922101	15-3	101997803	4-31
101831801	17-5	101922201	15-3	101997902	4-31
101831901	17-3	101922501	13-3	101997903	4-31
101832001	13-9	101923001	15-3	101998211	1-27
101833401	11-11	101923201	15-3	101998212	1-27
101834602	8-5	101923501	15-3	101998214	1-27
101835601	1-33, 4-19, 4-33	101923901	15-3	101998215	1-27
101855002	13-3	101926501	6-15	101998501	1-27
101855801	1-23, 1-25	101928701	15-3, 17-7	102022101	5-13
101856002	13-3	101929401	6-15	102022601	6-11
101856102	7-13, 7-15	101931501	3-11, 13-11	102022602	6-11
101861901	5-5, 5-7	101932201	4-5, 4-7	102025801	1-3, 9-5
101862001	5-5	101932401	13-3	102025901	4-13
101871001	17-3	101932501	13-3	102026001	5-5, 5-7
101878201	5-3	101932601	13-11	102044702	4-13
101878302	6-7	101932701	13-11	102044801	4-13
101879401	6-7	101933101	17-7	102045001	1-3
101879501	6-7	101936101	15-5	102048401	1-3

INDEX

102051601	4-13	102292801	5-13	102669901	17-7
102051701	4-13, 4-15	102296530	1-29	102674001	17-5
102051901	4-13, 4-15	102298116	8-11	102674101	17-5
102059501	12-7, 12-9	102298240	1-9, 1-13	102674201	17-5
102061201	17-9	102310701	1-19	102674401	17-9
102065901	1-33	102323101	5-3	102674601	17-9
102066201	5-13	102323201	5-3	102675001	17-5
102101001	13-5	102330901	17-9	102675101	17-5
102101101	13-5	102352201	4-19	102675201	17-5
102155801	11-11	102353201	6-13	102675301	17-5
102158901	5-5, 5-7	102353301	6-13	102675401	17-5
102169401	17-7	102353401	6-13	102686101	17-3
102174201	1-27	102354104	6-13	102704701	14-3
102174202	1-27	102354204	6-13	102704801	14-3
102174204	1-27	102354901	4-19	102704901	14-3
102174205	1-27	102355001	4-19	102711201	7-13, 7-15
102186001	14-3	102355102	1-21	102725501	9-15
102186101	14-3	102356601	15-3	102732401	8-5
102186201	14-3	102356801	15-3	102766701	1-3
102186401	14-3	102357501	4-19	102771701	15-3
102186701	14-3	102357701	6-13	102777601	1-23, 1-25
102186901	14-3	102410604	8-11, 9-13	102777602	1-23, 1-25
102187101	14-3	102411203	9-3	102778501	1-3
102187201	14-3	102411209	9-15	102778502	1-3
102196901	13-3, 13-7	102476401	9-13, 12-11	102778503	1-3
102198001	4-13, 4-15	102490301	9-13	102778504	1-3
102198701	4-5	102491501	11-7, 11-9	102778505	1-3
102199001	4-5	102498201	9-13, 12-7, 12-9, 12-11	102778507	1-3
102199201	4-5	102499001	4-15	102778509	1-3
102199301	4-5	102503221	1-29	102778601	1-3
102199401	4-5	102503222	1-29	102778901	1-31
102199601	13-7	102503224	1-29	102779001	1-31
102221201	1-23, 1-25	102508601	4-15	102779201	1-31
102235201	14-3	102508701	4-15	102779301	1-31
102240501	13-11	102526201	12-3	102779401	1-31
102241501	17-7	102529201	4-9	102779501	1-31
102241502	17-7	102540301	8-5	102779601	1-31
102242101	1-5, 8-5, 11-11	102541402	8-11	102796101	1-29
102243101	13-11	102544201	1-29	102796201	6-3
102243402	17-7	102555501	17-3	102796301	1-29
102243403	14-3	102558201	8-3, 9-15	102796302	1-29
102248803	17-7	102562401	17-3	102796501	1-17
102249901	17-3	102570401	17-11	102796701	1-3
102251501	17-7	102572401	13-7	102796801	1-23
102259801	13-11	102581201	1-29	102796802	1-23
102263601	13-7, 13-11	102588501	6-15	102796803	1-23
102263701	13-11	102601501	17-5	102796804	1-23
102266601	13-3	102603501	17-5	102796805	1-23
102266701	13-3	102605201	17-5	102797201	1-33
102269701	7-21	102606101	17-5	102804501	4-13
102274101	12-23	102607501	17-5	102804502	4-13
102278001	6-5	102617201	8-5, 10-3	102804503	4-15
102289001	1-33	102617801	12-23	102804504	4-15
102289002	1-9, 1-13	102618601	1-9, 1-13	102806201	13-11
102289201	6-11	102621501	12-7, 12-9	102806203	13-11
102289301	1-33	102668801	17-9	102810301	1-15

INDEX

102810501	13-7	102913101	1-29	103653601	6-11
102815801	2-3	102913102	1-29	103696801	13-13
102815901	2-3	102913601	6-9	103711302	13-15
102816201	1-29	102914301	1-3	103756401	9-7
102818301	1-25	102959401	1-17	103765601	13-13
102818302	1-25	102967901	1-3, 4-13, 4-15	103864601	13-15
102818303	1-25	103189901	1-31	103879701	12-15
102818305	1-25	103200701	4-15	103879702	12-13
102819101	2-3	103218601	13-7	103882802	8-5
102820301	1-33	103234303	3-3	103886601	12-5
102820501	1-33	103246701	1-27	103905201	9-3
102821101	1-33	103246801	1-27	103924801	7-3, 7-5
102822001	1-3	103255601	4-5	103944301	9-3
102822002	1-3	103255701	4-7	103951501	12-23
102822401	6-3	103256901	4-5	103953301	7-7, 7-9
102823201	1-33	103257001	4-7	103958101	13-13
102825401	3-9	103257603	4-17	103973901	11-9
102825402	3-9	103257701	4-17	103973902	11-7
102825501	3-13	103257801	4-17	103974002	11-11
102825502	3-13	103293501	1-31	103974102	11-3
102825601	3-9	103306301	9-3	103974201	11-7, 11-9
102825701	3-13	103313301	1-5	103974401	11-7, 11-9
102828701	1-3, 1-17	103316701	13-11	103975301	11-11
102829703	1-21	103316801	13-11	103976101	11-7, 11-9
102829704	1-21	103316901	13-11	103978001	9-13
102829802	1-21	103317501	1-31	103979301	12-23
102830201	1-13	103344501	1-15	103979401	8-5
102830401	1-13, 6-9	103347101	7-7, 7-9	103982201	8-5
102830501	1-9	103347301	7-7, 7-9	103983501	9-11
102830701	1-31	103347601	7-7, 7-9	103984601	11-7, 11-9
102830801	4-15	103347701	7-7, 7-9	103989501	12-23
102831901	3-5, 3-13	103347801	7-7, 7-9	103989901	12-25
102832001	3-5, 3-13	103347901	7-7, 7-9	103995001	12-23
102833301	3-5, 3-11	103348202	4-17	103995901	8-9
102838701	7-7, 7-9	103351001	6-11	104005301	7-11
102838801	7-7, 7-9	103354401	4-17	104005901	13-17
102838901	7-7, 7-9	103354701	6-11	104006101	13-17
102839001	7-7, 7-9	103372101	9-3	104021701	12-23
102839301	7-7, 7-9	103372401	9-7	104023501	9-13, 12-11
102840301	1-29	103377201	5-13	104024201	16-3, 16-11
102841101	7-7, 7-9	103377301	5-13	104024202	16-11
102844601	7-7, 7-9	103397901	4-7	104024401	16-11
102844701	7-7, 7-9	103403101	13-11	104024402	16-11
102852401	1-13	103414901	4-7	104024501	16-3, 16-5, 16-7, 16-9
102852501	4-33	103452001	9-7	104024601	16-3, 16-5, 16-7, 16-9
102857401	1-3	103477901	6-13	104025101	11-11
102861401	2-5	103502601	6-9	104027101	12-23
102865101	9-7	103504301	13-13	104028501	16-11
102869401	4-5, 4-7	103507001	6-9	104028502	16-11
102886301	15-3	103508101	8-5	104028601	16-11
102886401	15-3	103510602	13-15	104028602	16-11
102886501	15-3	103572501	14-3	104028901	16-3, 16-5, 16-7, 16-9
102886601	15-3	103582801	15-3	104029001	16-3, 16-5, 16-7, 16-9
102902801	15-3	103601601	6-5	104029601	16-3, 16-5
102909901	4-33	103628701	6-9	104029602	16-7
102911601	4-33	103653501	6-11	104029603	16-9

INDEX

105000301	7-13, 7-15	105014901	8-19	105027101	12-13, 12-15
105000401	7-13, 7-15	105015001	8-19	105027201	12-13, 12-15
105003601	16-3, 16-5, 16-7, 16-9	105015101	8-19	105027301	12-13, 12-15
105003701	16-3, 16-5, 16-7, 16-9	105015201	8-19	105027401	12-17
105007402	9-13	105015301	8-19	105027501	12-17
105007403	9-13	105015401	8-19	105027601	12-17
105008101	7-3, 7-5	105015501	8-19	105027701	12-17
105009101	9-15	105015601	8-19	105027801	12-17
105010001	8-21	105015701	8-19	105027901	12-17
105010101	8-17	105015801	8-19	105028001	12-17
105010201	8-17	105015901	8-19	105028101	12-19, 12-21
105010301	8-17	105016001	8-13, 8-19	105028201	12-17
105010401	8-21	105016101	9-11	105028301	12-13, 12-15
105010501	8-21	105016201	9-11	105028401	12-17
105010601	8-21	105016301	9-11	105028501	12-13, 12-15
105010701	8-21	105016401	9-11	105028601	12-17
105010801	8-17	105016501	9-11	105028701	12-17
105010901	8-17, 9-11	105016701	8-9	105028801	12-17
105011001	8-21	105016801	8-9	105028901	12-17
105011101	8-21	105016901	8-9	105029001	12-17
105011201	8-21	105017001	8-9	105029101	12-17
105011301	8-21	105017101	8-9	105029201	12-17
105011401	8-21	105017201	9-9	105029301	12-21
105011501	8-21	105017301	8-13	105029401	12-21
105011601	8-21	105017401	8-13	105029501	12-19, 12-21
105011701	8-21	105017501	8-13	105029601	12-21
105011801	8-21	105017601	8-13	105029701	12-21
105011901	8-17	105017701	8-13	105029801	12-19, 12-21
105012001	8-17	105017901	8-13	105029901	12-19, 12-21
105012101	8-17	105018001	8-15	105030001	12-13, 12-15
105012201	8-17	105018101	8-15	105030301	12-19, 12-21
105012301	8-17	105018201	8-15	105030401	12-19, 12-21
105012501	8-21	105018301	8-15	105030501	12-19, 12-21
105012601	8-9, 8-15, 8-17	105018401	8-15	105030601	12-19, 12-21
105012701	8-23	105018501	8-17	105030701	12-13, 12-15
105012801	8-23	105025001	12-13, 12-15	105030801	12-19, 12-21
105012901	8-23	105025101	12-13, 12-15	105030901	12-17
105013001	8-23	105025201	12-13, 12-15	105031001	12-21
105013101	8-23	105025301	12-13, 12-15	105037201	7-21
105013201	8-23	105025401	12-13, 12-15	105037401	7-13, 7-15
105013301	8-23	105025501	12-13, 12-15	105037501	12-3
105013401	8-23	105025601	12-13, 12-15	105037601	12-3
105013501	8-23	105025701	12-13, 12-15	105037701	12-3
105013601	8-23	105025801	12-13, 12-15	105038501	12-3
105013701	8-23	105025901	12-13, 12-15	105038801	12-5
105013801	8-23	105026001	12-13, 12-15	105039801	12-3
105013901	8-23	105026101	12-13, 12-15	105040401	12-3
105014001	8-23	105026201	12-13, 12-15	105040901	12-7
105014101	8-23	105026301	12-13, 12-15	105041201	12-3
105014201	8-19	105026401	12-13, 12-15	105043001	9-15
105014301	8-19	105026501	12-13, 12-15	105043401	9-5
105014401	8-19	105026601	12-13, 12-15	105043501	9-3
105014501	8-19	105026701	12-13, 12-15	105043801	9-5
105014601	8-19	105026801	12-13, 12-15	105043901	9-5
105014701	8-19	105026901	12-13, 12-15	105063501	12-13
105014801	8-19	105027001	12-13, 12-15	105063601	12-19

INDEX

105066001 12-19, 12-21
 105066101 12-19, 12-21
 105068201 16-11
 105068202 16-11
 105068301 16-11
 105068302 16-11
 105068401 16-11
 105068402 16-11
 105070101 16-3, 16-5, 16-11
 105070102 16-7, 16-11
 105070103 16-9, 16-11
 105073001 9-5
 105075301 8-11
 105081501 7-3, 7-5
 105081601 7-3, 7-5
 105084801 8-11
 105088501 9-15
 105092301 16-3, 16-5, 16-7, 16-9
 105093101 16-3, 16-5, 16-7, 16-9
 105093601 9-3
 105095201 16-3
 105096101 11-7, 11-9
 105102601 7-19
 105123801 16-3, 16-5, 16-7, 16-9
 105134601 8-5
 105134901 12-9
 105135101 9-13, 12-7, 12-9
 105135901 7-3, 7-5
 105136001 7-3, 7-5
 105138301 13-13
 105143301 7-3, 7-5, 9-3
 105144401 9-13, 12-11
 105149301 8-5
 105151001 7-3
 105151101 7-5
 105153201 3-11
 105153202 3-11
 105153301 3-9
 105153302 3-9
 105161701 7-3, 7-5, 7-7, 7-9
 105166801 13-17
 105166901 13-17
 105167001 13-17
 105167101 13-17
 105168501 13-17
 105168601 13-17
 105190101 7-9
 105190102 7-7
 105199601 3-3
 105214101 10-3
 105215401 9-3
 105234801 12-13, 12-15
 105234901 12-13, 12-15
 105237301 7-23
 105245701 7-3, 7-5
 105245801 11-5

105256701 7-3, 7-5, 7-23
 105256801 7-3, 7-5
 105262401 8-5
 105282901 9-5
 105282902 9-5
 105282903 9-5
 47539338001 7-11
 47539956001 8-3, 8-13
 47539957001 10-3
 47540040001 8-7, 8-17
 47599382001 8-7
 47600421001 8-7
 47600422001 8-7
 47600423001 8-7
 96705199 12-7, 12-9
 96741046 8-5

A

absorber, rear shock 6-15
 AC cord 16-3, 16-11
 accelerator bracket and bearing assembly 5-5, 5-7
 accelerator cable 9-13
 accelerator pedal 5-5, 5-7
 accelerator pedal adjustment tool 17-3
 accelerator pivot rod 5-5, 5-7
 accelerator return spring 5-5, 5-7
 accelerator rod 5-9
 accessory receptacle 4-13, 4-15
 adapter
 air intake 9-11
 cable (IQDM) 17-7
 adhesive, guide ring 17-3
 adjuster
 hydraulic brake 17-7
 air cleaner assembly 9-15
 air deflector 8-11
 air filter 8-3, 9-15
 air filter evacuator 9-15
 air intake adapter 9-11
 air intake hose 9-15
 angled bumper mount 6-15
 A-plate strap 6-11
 A-plate, delta 6-11
 arbor 17-3
 arm
 governor 9-13, 12-11
 armature 14-3
 assembly
 accelerator bracket and bearing 5-5, 5-7
 accelerator pivot rod 5-5, 5-7
 bearing, steering shaft 6-5
 brake lever 5-11
 delta A-plate 6-11
 delta shock and gear support 6-11
 drive hub 11-7, 11-9

driven clutch 11-11
 frame and field (motor) 14-3
 fuel cap 9-3
 fuel pump 9-5
 headlight 4-3
 headlight harness 4-3
 inner ball joint 6-7
 kingpin 6-9
 moveable-face 11-7, 11-9, 11-11
 ratchet 5-3
 secondary clutch weight 11-7, 11-9
 steering shaft 6-5
 turn signal lens 4-3

axle 15-3
 axle guard 15-5
 axle shaft 12-19, 12-21
 axle shaft oil seal 15-3
 axle tube 12-19, 12-21, 15-3

B

backing plate, brake 5-11
 backrest, beige 1-29
 backrest, gray 1-29
 backrest, white 1-29
 baffle
 crankcase 8-9
 balance shaft 8-23
 ball bearing 7-7, 7-9, 12-17, 12-19, 12-21
 ball joint 5-3, 5-9, 6-7
 ball joint, left-hand thread 6-7
 ball stud 7-13, 7-15
 ball, bearing 6-13
 bar, drive 13-5
 battery
 12-volt, top-post 7-23
 8-volt, GC8 Type E 13-13
 battery charger 16-3, 16-5, 16-7, 16-9
 battery charger receptacle 13-9
 battery clamp 7-23
 battery condition indicator 4-17
 battery condition indicator kit 4-17
 battery condition indicator, 48-volt 4-15
 battery discharge machine 17-3
 battery hold-down 13-13
 battery light 4-15
 battery terminal protector spray 17-3
 battery thermometer 17-3
 battery, top-post, wire, 4ga, 8+ 7-3, 7-5
 battery, top-post, wire, 8- 4ga, 7-3, 7-5, 7-23
 bearing 15-3
 balance shaft 8-21
 ball 6-13, 7-7, 7-9, 12-17, 12-19, 12-21
 ball (motor) 14-3
 ball (steering pinion) 6-7
 crankshaft 8-21
 inner axle tube 15-3

INDEX

- lower pinion (steering) 6-7
 - pivot support 5-5, 5-7
 - steering shaft 6-5
 - thrust 6-9, 12-13, 12-15
 - bearing and oil seal remover 17-3
 - bearing driver set 17-3
 - bearing puller 17-3
 - bearing puller wedge 17-3
 - bearing seat 6-5
 - bed support 1-29
 - bed support stiffener 1-33
 - bed, cargo 1-31
 - bellows 6-7
 - belt, drive 11-3, 11-5
 - belt, starter/generator 7-11
 - bezel, headlight 4-3
 - block, brake-mounting 5-3
 - block, fuse 4-5, 4-7, 7-13, 7-15
 - block, terminal 4-5, 4-7
 - body kick plate 1-23, 1-25
 - body, front 1-3
 - body, rear 1-23, 1-25
 - bolt, U- 6-15
 - boot, steering column 6-5
 - boot, switch 13-3
 - box
 - dash 1-15
 - glove 1-17
 - steering gear 6-7
 - box lock kit, glove 1-17
 - brace, canopy 1-5
 - brace, seat support cross 1-29
 - bracket 4-13, 6-15
 - accel.cable 9-13, 12-7, 12-9
 - brake light switch 4-5, 4-7
 - carbon canister 9-7
 - FNR cable 9-13, 12-7, 12-9
 - governor 9-13, 12-11
 - headlight mounting 4-3
 - horn 4-29
 - hour meter 4-31
 - mounting, starter/generator 8-5
 - mounting, transaxle/exhaust 8-5
 - snubber 8-5
 - starter/generator adjusting 7-11
 - steering column 6-5
 - steering column mounting 6-5
 - Tow/Run switch 13-3
 - brake adjusting mechanism 5-11
 - brake adjustment tool 17-3
 - brake backing plate 5-11
 - brake cable 5-13
 - brake cable equalizer 5-13
 - brake cable release tool 17-3
 - brake cluster 5-11
 - brake drum 5-11
 - brake lever 5-11
 - brake light switch bracket 4-5, 4-7
 - brake mounting block 5-3
 - brake pedal 5-3
 - brake pedal adjustment tool 17-3
 - brake pedal pad 5-3
 - brake pedal tension tool 17-3
 - brake relay kit, 12-volt 4-5
 - brake return spring 5-13
 - brake self-adjusting mechanism 5-11
 - brake shoe 5-11
 - brake spring 5-11
 - breather 12-13, 12-15, 15-3
 - breather hose 9-11
 - brush 14-3
 - brush box assembly 14-3
 - brush cover kit, starter/generator 7-7, 7-9
 - brush guard 1-13
 - brush guard support 1-13, 6-9
 - brush inspection port cover 7-7, 7-9
 - brush rigging 14-3
 - brush spring 7-7, 7-9, 14-3
 - brush spring set 7-7, 7-9
 - brush spring, starter/generator 7-7, 7-9
 - brush terminal, starter/generator 7-7, 7-9
 - bulb, headlight 4-3
 - bulb, strobe light 4-23, 4-25, 4-27
 - bulb, tail light 4-33
 - bumper
 - cast 1-9
 - drive unit (motor) 14-3
 - front 1-11
 - front, kit 1-11
 - jounce 6-15
 - rubber 1-17, 1-33, 5-3
 - side trim 1-19
 - spring return 5-5, 5-7
 - bumper mount, angled 6-15
 - bushing 7-13, 7-15, 11-7, 11-9, 12-3
 - bronze 6-13
 - nylon 5-3
 - spindle 6-13
 - steel 1-33, 6-9, 6-15
 - urethane 1-33, 6-9, 6-11, 6-15
 - button, drive 11-11
 - buzzer, reverse 4-11
- ## C
- cable
 - accelerator 9-13
 - brake 5-13
 - FNR shifter 12-5
 - governor 9-13
 - IQDM 17-7
 - cable retainer 1-23, 1-25
 - cable, cargo bed 1-31
 - calibration test module 17-3
 - cam
 - driven clutch 11-11
 - electrical component box 7-13, 7-15
 - cam installation tool 17-3
 - cam, engine 8-19
 - camshaft 8-19
 - camshaft o-ring 8-19
 - canister, carbon, fuel tank 9-7
 - canopy brace 1-5
 - cap
 - dust 13-3, 13-7
 - front hub 6-13
 - fuel, gas, ratchet 9-3
 - rubber 12-23
 - carbon canister 9-7
 - carburetor float level tool 17-7
 - card, safety first 17-9
 - cargo bed 1-31
 - cargo bed hinge 1-33
 - case
 - FNR switch 13-3
 - gear 15-3
 - transaxle 12-13, 12-15
 - cast bumper 1-9
 - catch, tilt bed 1-31
 - CE mark controller 13-11
 - center shaft 12-17
 - center, steering wheel 6-3
 - chain, timing 8-19
 - charger bezel tool 17-3
 - charger receptacle 13-9
 - charger, battery, Hi-Freq 16-3, 16-5, 16-7, 16-9
 - charging diode 7-21
 - clamp
 - battery 7-23
 - hose 9-3, 9-7, 9-15
 - p- (fuel filter) 8-11, 9-13
 - clevis, upper delta 6-9
 - clip
 - retainer plate 8-17
 - clip, piston pin 8-23
 - cluster, brake 5-11
 - clutch
 - pin 12-17
 - clutch alignment tool 17-5
 - clutch removal tool 17-3
 - clutch repair kit 11-11
 - clutch tool kit 17-5
 - clutch weight 11-7, 11-9
 - clutch, drive 11-7, 11-9
 - clutch, driven 11-11
 - coil, ignition 8-13
 - collar 12-17
 - collet 8-19
 - column, steering 6-5

INDEX

communication display module 17-5
 component mounting plate 13-11
 compression gauge 17-5
 compression lug 13-11
 compressor, piston ring 17-9
 compressor, valve spring 17-11
 computer, onboard 13-11
 conduit 4-27
 connecting rod 8-23
 connector, four-pin 13-3
 continuity tester 17-5
 controller cover 13-11
 controller cover gasket 13-11
 controller, motor speed
 IQ 13-11
 controller, motor speed (CE) 13-11
 converter, DC/DC 4-19
 cooling fan 8-9
 cord set, DC 16-3, 16-5, 16-7, 16-9, 16-11
 cord, AC 16-3, 16-11
 counter shaft 12-17
 cover
 brush inspection port 7-7, 7-9
 cowl 1-3
 crankcase 8-21
 DC terminal block 16-3, 16-5, 16-7, 16-9
 dust 5-11
 fan 8-9
 fuse block 4-7
 steering column 6-5
 USB 16-3, 16-5, 16-7, 16-9
 cover gasket, controller 13-11
 cover plate 14-3
 cover, controller 13-11
 cover, rocker 8-17
 cover, speed controller 13-11
 cover, steering column 4-9
 cover, valve 8-17
 cowl 1-3
 cowl cover 1-3
 cowl support 1-3
 crankcase 8-21
 crankcase baffle 8-9
 crankcase cover 8-21
 crankshaft 8-23
 cross brace, seat support 1-29
 C-type stop ring 6-7
 cup, spring 5-5, 5-7
 cushion, shock absorber 6-15
 cutter, valve seat 17-5, 17-11
 cylinder head 8-17

D

dash 1-3
 dash box 1-15
 DC cord set 16-3, 16-5, 16-7, 16-9, 16-11

DC/DC converter 4-19
 decal
 component cover 3-11, 13-11
 crush area 3-5, 3-13
 crush warning 3-5, 3-13
 driver/passenger 3-7
 engine warning 8-9
 filter log 13-17
 frame ground 3-7
 inspect log 13-17
 instrument panel warning 3-9, 3-13
 operating instructions 3-9, 3-13
 owner notice 3-5, 3-11
 rotating parts 1-7, 3-7
 Tow/Run switch warning 3-11
 deflector
 air 8-11
 deionizer 13-17
 cartridge 13-17
 delta A-plate 6-11
 delta A-plate sub-assembly 6-11
 delta shock and gear support 6-11
 diagnostic port 13-7
 diesel tachometer probe 17-9
 differential 12-21
 limited-slip 12-19
 open 12-21
 differential drive unit 15-3
 differential gear 15-3
 differential gear set 12-21
 differential guard 15-5
 differential housing 15-3
 differential shaft 12-21
 diode 7-3, 7-5
 diode, charging 7-21
 dipstick 8-21
 drain plug 8-21, 12-13, 12-15
 drain plug gasket 8-21
 drain plug, rubber 7-7, 7-9
 drive bar 13-5
 drive belt 11-3, 11-5
 drive button 11-11
 drive clutch 11-7, 11-9
 drive clutch button 11-7, 11-9
 drive clutch fixed sheave tool 17-5
 drive clutch holder tool 17-5
 drive clutch hub puller 17-5
 drive clutch puller 17-5
 drive clutch spider removal tool 17-5
 drive clutch spring 11-7, 11-9
 drive clutch weight 11-7, 11-9
 drive hub 11-7, 11-9
 drive unit bumper 14-3
 drive unit guard 15-5
 driven clutch 11-11
 driven clutch button 11-11

driven clutch cam 11-11
 driven clutch cam puller 17-5
 driven clutch puller plug 17-5
 driven clutch spring compression base tool 17-5
 driven clutch spring compression collar tool 17-5
 driven clutch spring compression nut tool 17-5
 driver, drive clutch 11-7, 11-9
 drum, brake 5-11
 dry moly lubricant 17-7
 dust cap 13-3, 13-7
 dust cover 5-11

E

eccentric bolt 6-9
 E-clip 5-13
 ECU 9-9
 end cap, motor 14-3
 end, tie rod 6-11
 engine
 air cleaner 9-15
 air deflector 8-11
 air filter 8-3, 9-15
 air intake hose 9-15
 balance shaft 8-23
 bearing, balance shaft 8-21
 bearing, crankshaft 8-21
 breather hose 9-11
 cam 8-19
 camshaft 8-19
 camshaft O-ring 8-19
 connecting rod 8-23
 crankcase 8-21
 crankcase baffle 8-9
 crankcase cover 8-21
 crankcase plug 8-21
 crankshaft 8-23
 crankshaft key 8-23
 cylinder head 8-17
 dipstick 8-21
 drain plug gasket 8-21
 ECU 9-9
 exhaust valve 8-19
 fan 8-9
 fan housing 8-9
 flywheel 8-13
 fuel injector 9-9
 guide pin 8-21
 head gasket 8-17
 ignition coil 8-13
 insulator, throttle body 9-11
 intake valve 8-19
 oil drain plug 8-21
 oil filler tube 8-21

INDEX

oil filler tube O-ring 8-21
oil level sensor 8-15
oil seal 8-21
piston 8-23
piston pin 8-23
piston pin clip 8-23
piston ring set 8-23
retainer plate 8-17
retainer plate clip 8-17
rocker arm 8-19
rocker cover 8-17
rocker shaft 8-19
spark plug 8-3, 8-13
temperature sensor 8-15
throttle body 9-9
timing chain 8-19
timing chain guide 8-19
timing chain sprocket 8-19
timing chain tensioner 8-19
valve collet 8-19
valve guide 8-17
valve seal 8-17
valve spring 8-19
valve spring retainer 8-19
warning decal 8-9
engine warning decal 8-9
engine, EX40 8-5
equalizer rod 5-13
equalizer, brake cable 5-13
exhaust valve 8-19
extension, spring latch 1-31
extrusion, cover support 13-11

F

face, moveable 11-11
fan
cooling 8-9
fan cover 8-9
fan housing 8-9
fender 1-23, 1-25
field coil housing 7-7, 7-9
filter
air 8-3, 9-15
fuel 9-5
fitting, thread-forming grease 6-7, 6-13
floor mat 1-3
flywheel 8-13
flywheel puller 17-7
FNR handle 12-3
FNR shift lever 12-7, 12-9
FNR shifter base 12-3
FNR shifter cable 12-5
FNR switch case 13-3
foam, seat 1-27
frame and field assembly (motor) 14-3
frame and field, starter/generator 7-7, 7-9

front body 1-3
front body support 1-23, 1-25
front bumper 1-11
front bumper kit 1-11
front hub 6-13
front spring retainer plate 6-9
fuel filter 9-5
Fuel Filter Kit 9-5
fuel gauge/hour meter 4-13
fuel injector 9-9
fuel line 9-7
Fuel Module, Hold-Down Ring 9-5
Fuel Pump 9-5
fuel pump 9-5
fuse 13-9
10-amp 7-3, 7-5, 7-13, 7-15
20-amp 4-5, 4-7
2-amp 7-3, 7-5
3/8-amp 13-9
5-amp 7-3, 7-5
fuse block 4-5, 4-7, 7-13, 7-15
fuse block cover 4-7

G

gasket 12-13, 12-15
drain plug 8-21
insulator 9-11
liquid 15-3, 17-7
plug 15-3
seat 1-27
taillight 4-33
gasket, controller cover 13-11
gasket, head 8-17
gauge, battery condition 4-17
gauge, compression 17-5
gauge, fuel/hour 4-13
gear
17 tooth 12-17
34 tooth 12-17
52 tooth 12-17
60 tooth 12-19, 12-21
62 tooth 12-17
differential 15-3
differential idler 15-3
differential output 15-3
governor 12-13, 12-15
governor, 34 tooth 12-17
set, differential 12-21
gear yoke 17-7
gearcase 15-3
glove box 1-17
glove box lock 1-17
glove box lock kit 1-17
governor arm 9-13, 12-11
governor cable 9-13
governor gear shaft 12-13, 12-15

governor shaft 12-13, 12-15
governor shaft installation tool 17-7
grommet 9-3
guard, brush 1-13
guard, differential 15-5
guide
valve 8-17
valve seat cutter 17-11
guide pin 8-21, 12-13, 12-15
guide ring adhesive 17-3
guide, timing chain 8-19

H

handle, FNR 12-3
harness, headlight 4-5, 4-7
harness, main 7-5
harness, wire 4-19, 4-23, 4-25, 4-33, 13-7
harness, wire, gas engine-ECU 7-3, 7-5
harness, wire, lighting 4-7
head gasket 8-17
head, cylinder 8-17
headlight 4-3
headlight assembly 4-3
headlight bulb 4-3
headlight harness 4-3
headlight retainer 4-3
headlight wire harness 4-5, 4-7
hill brake rod 5-3
hill brake weld assembly 5-3
hinge plate 1-23, 1-25, 1-27
hinge support 1-33
hinge, cargo bed 1-33
hold-down, battery 13-13
holder, object 1-3
horn 4-29
horn bracket 4-29
horn button and wire assembly 4-29
hose
air intake 9-15
engine breather 9-11
fuel 9-7
vent 9-7
hour meter 4-31
hour meter, 36-48 volt 4-31
hour meter/fuel gauge 4-13
housing
2-pin 13-5
3-pin 13-3, 13-5, 14-3
4-pin 13-3
6-pin 13-11
differential 15-3
fan 8-9
field coil 7-7, 7-9
hub 6-13, 12-23
hub and spindle 6-13
hub cap 6-13

INDEX

hub, front 6-13
hydraulic brake adjuster 17-7
hydrometer 17-7

I

idler gear, differential 15-3
ignition coil 8-13
indicator, battery condition 4-17
inner frame snubber 8-5
input shaft 12-17, 15-3
instrument panel 4-13, 4-15
insulator 9-11
insulator gasket 9-11
intake valve 8-19
intermediate shaft 15-3
internal retaining ring pliers 17-7
IQ display module (IQDM) 17-7

J

joint
 ball 5-3, 5-9
 left-hand thread ball 6-7
jounce bumper 6-15
jumper harness, run/maint 7-3, 7-5

K

key 4-15
 driven clutch 11-11
 square 11-11
key (pair) 4-13
key switch 4-13, 4-15
key switch spacer 4-13
key,crankshaft 8-23
keyswitch nut 4-13, 4-15
kick plate, body 1-23, 1-25
kingpin 6-9
kit
 2-pin housing 13-5
 3-pin housing 13-3, 13-5, 14-3
 4-pin housing 13-3
 6-pin housing 13-11
 accelerator pivot rod 5-5, 5-7
 battery condition indicator 4-17
 brake cable 5-13
 brake pedal 5-3
 brake pedal adjustment tool 17-3
 brake relay 4-5
 brake shoe retainer 5-11
 clutch repair 11-11
 deflector, air 8-11
 drive clutch button 11-7, 11-9
 drive clutch weight 11-7, 11-9
 driven clutch button 11-11
 front bumper 1-11
 front hub replacement 6-13

hand pump, SPWS 13-17
hour meter 4-31
IQ display module (IQDM) 17-7
motor brush 14-3
motor brush spring 14-3
motor cover plate 14-3
motor speed sensor 14-3
motor terminal hardware 14-3
park brake latch 5-3
park brake pedal 5-3
relay, 48V 4-7
shock absorber 6-15
shock absorber cushion 6-15
shoe retainer 5-11
steering column mounting bracket 6-5
strobe light 4-23, 4-25, 4-27
tune-up 17-9
turn signal 4-9
knob, light switch 4-13, 4-15

L

lamp, strobe light 4-23, 4-25, 4-27
lamp, turn signal and socket 4-9
latch spring 1-31
latch, park brake 5-3
leaf spring 6-15
lens, headlight 4-3
lens, strobe light 4-23, 4-25, 4-27
lens, taillight 4-33
lever
 transaxle shift 12-7, 12-9
light
 battery 4-15
 oil 4-13
 tail 4-33
 water quality 13-17
light switch 4-13, 4-15
light switch knob 4-13, 4-15
light, strobe 4-23, 4-25, 4-27
limit switch 4-5, 4-7, 7-15, 7-17, 7-19
limiter
 voltage 4-5, 4-7, 4-21
line, fuel 9-7
link, rack and pinion drag 6-7
link, rod 1-31
liquid gasket 15-3, 17-7
lock kit, glove box 1-17
lock, glove box 1-17
low oil warning light 4-13
lubricant, dry moly 17-7
lubricant, moly-teflon 14-3, 17-7
lug nut 2-3
lug stud 6-13, 12-23, 15-3
lug, compression 13-11

M

magnet, speed sensor 14-3
main harness 7-5
mat, floor 1-3
MCOR 13-5
mechanism, brake adjusting 5-11
meter, hour 4-31
meter, volt ohm 17-11
module
 calibration test 17-3
 communication display 17-5
moly-teflon lubricant 17-7
motor
 48-volt IQ 14-3
motor brush kit 14-3
motor brush spring kit 14-3
motor bumper 14-3
motor end cap 14-3
motor magnet, speed sensor 14-3
motor speed controller
 CE 13-11
 IQ 13-11
motor speed sensor 14-3
motor speed sensor kit 14-3
motor terminal hardware kit 14-3
mounting block, brake 5-3
moveable-face 11-7, 11-9, 11-11

N

nerf bar 1-21
non-skid tape 1-21
nut, keyswitch 4-13, 4-15
nut, lug 2-3

O

OBC 13-11
object holder 1-3
oil filler tube 8-21
oil level sensor 8-15
oil seal 8-21, 12-13, 12-15
oil warning light, low 4-13
onboard computer 13-11
O-ring 8-19, 8-21
O-ring Kit, Fuel Module 9-5
O-Ring, Fuel Module 9-5
overload bumper spacer 6-15

P

pad
 accelerator pedal 5-5, 5-7
 brake pedal 5-3
 park brake 5-3
 thermal 7-21
 wear 1-23, 1-25
paint, touch-up 17-7

INDEX

panel
 instrument 4-13
 panel, instrument 4-13, 4-15
 park brake latch 5-3
 park brake pedal 5-3
 park brake rod sleeve 5-3
 park brake spacer 5-3
 park brake torsion spring 5-3
 pawl 5-3
 p-clamp (fuel filter) 8-11, 9-13
 pedal, accelerator 5-5, 5-7
 pedal, brake 5-3
 pedal, park brake 5-3
 pin
 bow tie locking 5-13
 clevis 5-13
 differential 12-21
 guide 8-21, 12-13, 12-15
 input shaft 12-17
 piston 8-23
 pinion, steering 6-7
 piston 8-23
 piston pin 8-23
 piston pin clip 8-23
 piston ring 8-23
 piston ring compressor 17-9
 piston ring pliers 17-9
 piston ring set 8-23
 pivot support bearing 5-5, 5-7
 plate
 backing (brake) 5-11
 body kick 1-23, 1-25
 component mounting 13-11
 cover 14-3
 front spring retainer 6-9
 hinge 1-23, 1-25, 1-27
 mounting, CVT, center 8-5
 mounting, engine/axle 8-5
 receptacle backing 13-9
 retainer 8-17
 spring mounting 6-9
 pliers
 internal retaining ring 17-7
 piston ring 17-9
 retaining ring 17-9
 plug
 4-pin 13-3
 6-pin 13-11
 drain 12-13, 12-15
 driven clutch puller 17-5
 oil drain 8-21
 rubber drain 7-7, 7-9
 rubber, crankcase 8-21
 spark 8-3, 8-13
 port, diagnostic 13-7
 press weldment 17-5

protector spray, battery terminal 17-3
 puller
 bearing 17-3
 clutch 17-3
 drive clutch 17-5
 drive clutch hub 17-5
 driven clutch cam 17-5
 flywheel 17-7
 seal 17-9
 special use tool 17-9
 pulley
 starter-generator 7-7, 7-9
 v-belt 7-7, 7-9
 pump
 fuel 9-5

R

rack and pinion drag link 6-7
 rack guide pressure spring 6-7
 rack, steering 6-7
 ratchet, park brake 5-3
 reamer, valve guide 17-9
 rear body 1-23
 rear spring shackle 6-15
 receptacle 13-9
 receptacle backing plate 13-9
 receptacle, accessory 4-13, 4-15
 receptacle, battery charger 13-9
 regulator, voltage 7-13, 7-15
 relay 4-7
 relay, 12-volt 4-5
 relay, 48V 4-7
 relay, brake, kit, 12-volt 4-5
 remover, bearing and oil seal 17-3
 resistor assembly 13-11
 retainer
 accelerator pedal spring 5-5, 5-7
 brake shoe 5-11
 cable 1-23, 1-25
 headlight 4-3
 shock absorber cushion 6-15
 spring 6-15
 valve spring 8-19
 retainer plate 8-17
 retaining ring 6-5
 retaining ring pliers 17-9
 return spring bumper 5-5, 5-7
 reverse buzzer 4-11
 rim, wheel 2-3
 ring
 C-type stop 6-7
 piston 8-23
 retaining 6-5, 7-13, 7-15, 11-7, 11-9, 11-11, 12-13, 12-15, 12-23
 snap 6-7
 spiral backup 11-7, 11-9

rivet, blind push 1-11
 Rivet, Removable 1-3, 4-13, 4-15
 rock guard 15-5
 rocker arm 8-19
 rocker cover 8-17
 rocker shaft 8-19
 rocker switch 13-3
 rocker switch (lights) 4-5, 4-7
 rod
 accelerator 5-9
 accelerator pivot 5-5, 5-7
 connecting 8-23
 equalizer 5-13
 hill brake 5-3
 link 1-31
 rubber bumper 1-17

S

safety first card 17-9
 screw, valve clearance adjuster 17-9
 seal
 lip 15-3
 oil 8-21, 12-13, 12-15, 15-3
 steering pinion dust 6-7
 valve 8-17
 vertical socket dust 6-7
 seal puller 17-9
 sealant 15-3
 seat back, beige 1-29
 seat back, gray 1-29
 seat back, white 1-29
 seat bottom assembly 1-27
 seat bottom cover 1-27
 seat cover, vinyl 1-27
 seat cover, white 1-27
 seat foam 1-27
 seat gasket 1-27
 seat support 1-29
 seat support cross brace 1-29
 seat, bearing 6-5
 select shaft 12-13, 12-15
 sensor
 oil level 8-15
 temperature 8-15
 sensor, motor speed 14-3
 shackle, rear spring 6-15
 shaft
 axle 12-19, 12-21
 balance 8-23
 center 12-17
 counter 12-17
 differential 12-21
 governor 12-13, 12-15
 governor gear 12-13, 12-15
 input 12-17, 15-3
 intermediate 15-3

INDEX

- rocker 8-19
- select 12-13, 12-15
- shift 12-17
- steering column 6-5
- shift lever 12-7, 12-9
- shift shaft 12-17
- shock absorber 6-11
- shock absorber (rear) 6-15
- shock absorber cushion 6-15
- shock absorber cushion retainer 6-15
- shoe retainer kit 5-11
- shoe, brake 5-11
- side bar 1-21
- signal, turn 4-9
- sleeve 12-13, 12-15
 - delta A-plate 6-11
 - park brake rod 5-3
- snap ring 6-7
- snubber bracket 8-5
- snubber, inner frame 8-5
- socket 6-7
- solenoid 13-11
- solenoid, 12-volt 7-13, 7-15
- spacer 12-13, 12-15, 12-17
 - accelerator pivot rod 5-5, 5-7
 - key switch 4-13
 - overload bumper 6-15
 - park brake 5-3
- spanner wrench 17-9
- spark plug 8-3, 8-13
- speed controller
 - CE 13-11
 - IQ 13-11
- speed controller cover 13-11
- speed sensor 14-3
- speed sensor magnet 14-3
- speed sensor, motor 14-3
- spindle 6-13
- spindle and hub 6-13
- spiral backup ring 11-7, 11-9
- spray, battery terminal protector 17-3
- spring 1-31, 12-13, 12-15
 - accelerator return 5-5, 5-7
 - brake 5-11
 - brake return 5-13
 - brush 7-7, 7-9, 14-3
 - drive button 11-7, 11-9
 - drive clutch 11-7, 11-9
 - driven clutch 11-11
 - extension 1-31
 - leaf 6-15
 - park brake torsion 5-3
 - rack guide pressure 6-7
 - steering shaft compression 6-5
 - valve 8-19
- spring cup 5-5, 5-7

- spring mounting plate 6-9
- spring retainer 6-15, 8-19
- spring, leaf 6-9
- starter/generator 7-7, 7-9
- starter/generator brush cover kit 7-7, 7-9
- starter/generator brush spring 7-7, 7-9
- starter/generator brush terminal 7-7, 7-9
- starter/generator frame and field 7-7, 7-9
- starter/generator pulley 7-7, 7-9
- steel bushing 1-33, 6-9, 6-15
- steering column 6-5
- steering column bearing press tool 17-9
- steering column cover 4-9
- steering column retaining ring tool 17-9
- steering gear box 6-7
- steering pinion 6-7
- steering pinion dust seal 6-7
- steering rack 6-7
- steering shaft assembly 6-5
- steering shaft compression spring 6-5
- steering wheel 6-3
- steering wheel center 6-3
- steering wheel puller tool 17-9
- stem, valve 2-3
- stiffener, bed support 1-33
- strap, A-plate 6-11
- strobe light 4-23, 4-25, 4-27
- strobe light lens 4-23, 4-25, 4-27
- stud
 - exhaust mounting
 - engine
 - exhaust mounting stud 8-17
 - intake mounting
 - engine
 - intake mounting stud 8-17, 9-11
 - lug 6-13, 12-23, 15-3
- stud, ball 7-13, 7-15
- support
 - bed 1-29
 - brush guard 1-13, 6-9
 - cowl 1-3
 - hinge 1-33
 - latch link 1-31
 - seat 1-29
- support yoke (steering) 6-7
- support, front body 1-23, 1-25
- support, seat 1-29
- suppressor, voltage 4-5
- switch plate cover 4-23, 4-25, 4-27
- switch
 - key 4-13, 4-15
 - light 4-13, 4-15
 - light rocker 4-5, 4-7
 - limit 4-5, 4-7, 7-15, 7-17, 7-19
 - rocker 13-3
 - Tow/Run 13-3

- turn signal 4-9
- switch assembly 4-23, 4-25, 4-27
- switch rubber boot 13-3

T

- 12-volt solenoid 7-13, 7-15
- tachometer 17-9
- tachometer probe, diesel 17-9
- tail light bulb 4-33
- taillight 4-33
- taillight gasket 4-33
- taillight kit 4-33
- taillight lens 4-33
- taligate 1-31
- tape, non-skid 1-21
- temperature sensor 8-15
- tensioner, timing chain 8-19
- terminal block 4-5, 4-7, 13-11
- terminal, 1/4 quick-disconnect 4-19
- tester, continuity 17-5
- thermal pad 7-21
- thermometer, battery 17-3
- thread-forming grease fitting 6-7, 6-13
- throttle body 9-9
- thrust bearing 6-9
- tie rod 6-11
- tie rod end 6-11
- tie wrap 4-9, 4-19, 4-25, 4-27, 4-31, 6-7, 7-13, 7-15, 12-5, 13-3, 13-11
- tilt bed catch 1-31
- tilt latch 1-31
- timing chain 8-19
- timing chain guide 8-19
- tire 2-3
- tool
 - accelerator pedal adjustment 17-3
 - belt tensioning, starter/generator 17-11
 - brake adjustment 17-3
 - brake cable release 17-3
 - brake pedal adjustment 17-3
 - brake pedal tension 17-3
 - cam installation 17-3
 - carburetor float level 17-7
 - charger bezel 17-3
 - clutch alignment 17-5
 - cT-wrench 17-5
 - drive clutch fixed sheave 17-5
 - drive clutch holder 17-5
 - drive clutch spider removal 17-5
 - driven clutch spring compression base 17-5
 - driven clutch spring compression collar 17-5
 - driven clutch spring compression nut 17-5
 - governor shaft installation 17-7
 - puller, special use 17-9

INDEX

steering column bearing press 17-9
steering column retaining ring 17-9
steering wheel puller 17-9
transaxle axle seal 17-9
transaxle pinion seal 17-9
transmission 17-9
valve guide driver 17-9
valve seat cutter 17-5
tool kit, clutch 17-5
touch-up paint 17-7
Tow/Run switch 13-3
Tow/Run switch bracket 13-3
transaxle (Electric Vehicle) 15-3
transaxle axle seal tool 17-9
transaxle guard 15-5
transaxle pinion seal tool 17-9
transaxle, limited-slip (Gas Vehicle) 12-13
transaxle, open-diff (Gas Vehicle) 12-15
transmission tool 17-9
tube
 axle 12-19, 12-21, 15-3
 oil filler 8-21
Tuflok 1-3, 4-13, 4-15
tune-up kit 17-9
turn signal 4-9
turn signal conversion kit 4-9
turn signal lens 4-3
turn signal socket and lamp 4-9
T-wrench tool 17-5

U

U-bolt 6-15
upper delta clevis 6-9
urethane bushing 1-33, 6-9, 6-11, 6-15
USB
 cover 16-3, 16-5, 16-7, 16-9
USB cover 16-3, 16-5, 16-7, 16-9

V

valve 9-15
 exhaust 8-19
 intake 8-19
valve clearance adjuster screw 17-9
valve collet 8-19
valve cover 8-17
valve guide 8-17
valve guide driver tool 17-9
valve guide reamer 17-9
valve seal 8-17
valve seat cutter 17-5, 17-11
valve seat cutter guide 17-11
valve seat cutter tool 17-5
valve seat t-wrench 17-11
valve spring 8-19
valve spring compressor 17-11

valve stem 2-3
vent
 fuel tank 9-3
 transaxle 12-13, 12-15
vent, barb 9-7
vertical socket dust seal 6-7
volt ohm meter 17-11
voltage limiter 4-5, 4-7, 4-21
voltage regulator 7-13, 7-15
voltage suppressor 4-5

W

warning light, low oil 4-13
water quality light 13-17
wear pad 1-23, 1-25
wedge, bearing puller 17-3
weight
 clutch 11-7, 11-9
 secondary clutch 11-7, 11-9
weldment
 governor bracket 9-13, 12-11
 press 17-5
wheel cover 2-5
wheel rim 2-3
wheel, steering 6-3
wire
 green, starter/generator 7-3, 7-5, 7-7, 7-9
 ground, fuel tank 7-3, 7-5, 9-3
wire harness 4-19, 4-23, 4-25, 4-33, 7-3, 7-5, 13-7
wire harness, headlight 4-5, 4-7
wire harness, lighting 4-7
wrap, tie 4-9, 4-19, 4-25, 4-27, 4-31, 6-7, 7-13, 7-15, 12-5, 13-3, 13-11
wrench, spanner 17-9

Y

yoke, gear 17-7
yoke, support (steering) 6-7



Club Car, Inc.
P.O. Box 204658
Augusta, GA 30917-4658
USA

Web	www.clubcar.com
Phone	1.706.863.3000
	1.800.ClubCar
Int'l	+1 706.863.3000
Fax	1.706.863.5808