 




**2006
XRT800/XRT810
Illustrated Parts List**

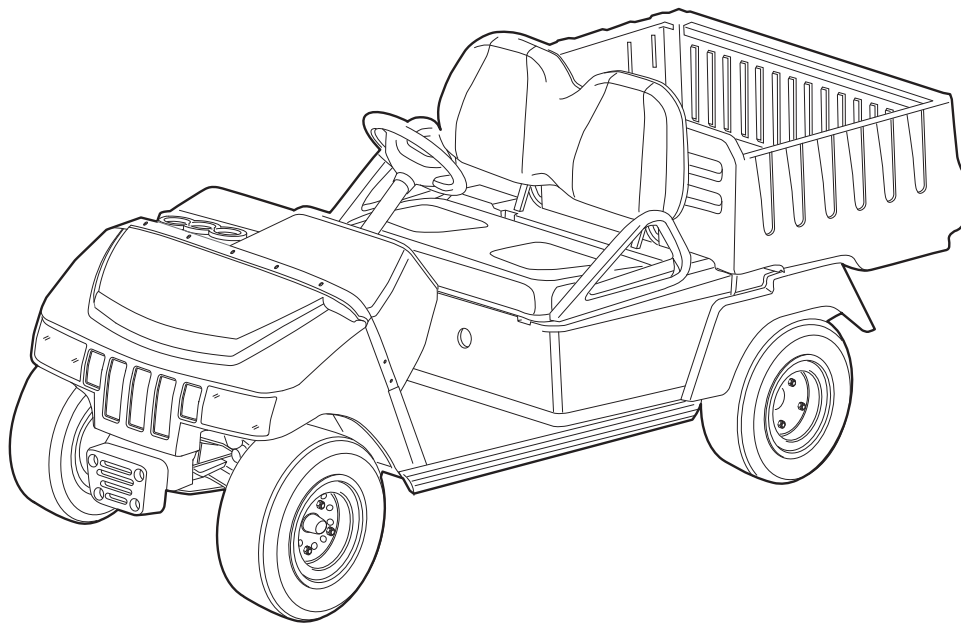

Gasoline and Electric Vehicles

Manual Number 102907614
Edition Code 0705T0112R

USING THE ILLUSTRATED PARTS LIST

WARNING

- **This manual is to be used only for identification and ordering of service parts. Be sure to read and use the maintenance and service manual before attempting any vehicle repairs.**

This manual covers all 2006 XRT800 and XRT810 gasoline and electric vehicles.

The manual is divided into 16 sections. Sections 1 through 15 pertain to the vehicles, and Section 16 pertains to tools that are used on all Club Car products. Note that there are flags on the outside edge of each page. The first flag contains the section number of which that page is a part. The other flags contain the letters G or E, signifying that the page pertains to either the gasoline vehicle, the electric vehicle, or both.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section numbers, and under them, the individual page titles and numbers to be found in that section. The index can be used to find specific parts and assemblies. The index is divided into numerical and alphabetical listings with the page numbers in italic text.

There is a two-page spread for each individual page title in the Table of Contents. On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used.

Note that a part description may be indented. This indentation corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to *level 2* is a component of the *level 1* part (assembly) that it is listed under. A *level 3* part is a component of the *level 2* part that it is listed under, and a *level 4* part is a component of the *level 3* part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part is *the quantity used per next higher level assembly of which it is a component*. A part that is not indented is a *level 1* part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.

HOW TO ORDER PARTS

Replacement parts and accessories can be obtained from our network of authorized dealers and distributors. You can obtain the name and phone number of your closest authorized Club Car dealer or distributor by visiting our web site at www.clubcar.com and clicking on the "Distributor Search" link or by calling our toll-free Service Parts and Technical Assistance hotline at (800) 872-2246 or (706) 863-3000, extension 3887.



P. O. Box 204658
Augusta, Georgia 30917-4658 USA
Telephone 706-863-3000
Service Parts Fax 706-855-7413
www.clubcar.com

NOTE: *This illustrated parts list represents the most current information at the time of publication. Club Car, Inc. is continually working to further improve its vehicles and other products. These improvements may affect the parts used to service the vehicle. Any modification and/or significant change in specifications will be forwarded to all Club Car and Carryall distributors/dealers and will, when applicable, appear in future editions of this illustrated parts list.*

Club Car, Inc. reserves the right to change specifications and designs at any time without notice and without the obligation of making changes to units previously sold.

Copyright © 2005, 2006 Club Car, Inc.
Club Car and ArmorFlex
are registered trademarks of Club Car, Inc.
This manual effective July 18, 2005.

2006 XRT800/XRT810 Gasoline & Electric Vehicle Illustrated Parts List

CONTENTS

SECTION 1 – BODY AND TRIM

Front Body	1-3
Canopy Support System	1-5
Bumper – XRT800 and XRT800-E	1-7
Brush Guard – HUV4210-GX	1-9
Dash Box – XRT800 and XRT800-E	1-11
Glove Box – XRT810 and XRT810-E	1-13
Side Trim – XRT800 and XRT800-E	1-15
Nerf Bar – XRT810 and XRT810-E	1-17
Rear Body and Fender – Gasoline Vehicle	1-19
Rear Body and Fender – Electric Vehicle	1-21
Front Seat Bottom and Armrests	1-23
Seat Back	1-25
Cargo Bed	1-27
Bed Hinge	1-29
Access Panel and Heat Shield	1-31

SECTION 2 – WHEELS AND TIRES

Wheels and Tires	2-3
Hubcap – XRT810 and XRT810-E	2-5

SECTION 3 – DECALS

Safety Decals – Gasoline Vehicles	3-3
Safety Decals – Gasoline Vehicles, Continued	3-5
Safety Decals – Gasoline Vehicles, Continued	3-7
Logo Decals – Gasoline Vehicles	3-9
Safety Decals – Electric Vehicles	3-11
Safety Decals – Electric Vehicles, Continued	3-13
Logo Decals	3-15

SECTION 4 – BRAKE SYSTEMS

Rear Brake Assembly, Self-Adjusting – Vehicle with 2-Wheel Brakes	4-3
Brake Pedal Assembly	4-5
Brake Cable, Equalizer, and Equalizer Rod – Vehicles with Two-Wheel Brakes	4-7
Accelerator Pedal – Gasoline Vehicles	4-9
Accelerator Pedal Assembly – Electric Vehicles with MCOR	4-11
Accelerator Rod – Gasoline Vehicles	4-13

CONTENTS

SECTION 5 – STEERING AND SUSPENSIONS

Steering Column	5-3
Steering Wheel	5-5
Steering Gear Assembly	5-7
Front Suspension, Upper	5-9
Front Suspension, Lower	5-11
Front Spindles and Hubs – Earlier Style	5-13
Front Spindles and Hubs – Later Style	5-15
Rear Suspension	5-17

SECTION 6 – ELECTRICAL SYSTEM – GASOLINE VEHICLES

Wiring – Gasoline Vehicle	6-5
Headlights	6-7
Electrical Component Box – Gasoline Vehicle	6-9
Electrical Components, Front Body – Gasoline Vehicle	6-11
Starter/Generator Assembly Model G425419 – Gasoline Vehicles	6-13
FE290 Starter/Generator Mounting – Gasoline Vehicle	6-15
FE350 Starter/Generator Mounting – Gasoline Vehicles	6-17
Battery – Gasoline Vehicle	6-19

SECTION 7 – FE290 ENGINE

FE290 Engine – Shrouds and Brackets	7-3
FE290 Engine – Ignition Components and Flywheel	7-5
FE290 Engine – Oil Circulation	7-7
FE290 Engine – Cylinder Head	7-9
FE290 Engine – Crankcase, Camshaft, and Oil Sensor	7-11
FE290 Engine – Crankcase and Crankshaft	7-13
FE290 Engine Mounting	7-15

SECTION 8 – AS11 FE350 ENGINE

AS11 FE350 Engine without ACR (Automatic Compression Release) – Shrouds and Brackets	8-3
AS11 FE350 Engine – Ignition Components and Flywheel	8-5
FE350 Engine – Oil Circulation	8-7
AS11 FE350 Engine – Cylinder Head	8-9
AS11 FE350 Engine without ACR – Crankcase, Camshaft, and Oil Sensor	8-11
AS11 FE350 Engine – Crankcase and Crankshaft	8-13
FE350 Engine Mounting	8-15

CONTENTS

SECTION 9 – FUEL, INTAKE, AND GOVERNOR SYSTEMS

Fuel System	9-3
Fuel Tank with Fuel Level Sending Unit	9-5
Carburetor Assembly – FE290	9-7
Carburetor Assembly – FE350	9-9
Carburetor Installation – FE290	9-11
Carburetor Installation – FE350	9-13
Governor and Accelerator Cables	9-15
Intake Duct, Choke, and Air Box Assembly	9-17

SECTION 10 – EXHAUST SYSTEM

Exhaust System – FE290 Engine	10-3
Exhaust System – FE350 Engine	10-5

SECTION 11 – TORQUE CONVERTER

Drive Clutch	11-3
Drive Belt – FE290	11-5
Drive Belt – FE350	11-7
Driven Clutch	11-9

SECTION 12 – TRANSAXLE AND FNR SHIFTER- GASOLINE VEHICLE

Transaxle – Gasoline Vehicles, Gear Cases and Brackets	12-3
Transaxle – Gasoline Vehicles, Transmission and Gear Reduction	12-5
Transaxle – Gasoline Vehicles, Differential and Axles	12-7
Forward/Reverse Shifter Assembly – Gasoline Vehicles	12-9
Forward/Reverse Shifter Cable – Gasoline Vehicles	12-11
Differential Guard – XRT810	12-13

SECTION 13 – ELECTRICAL SYSTEM – ELECTRIC VEHICLES

Wiring – Electric Vehicle	13-5
Headlights	13-7
Electrical Components, Front Body – Electric Vehicle	13-9
Motor Controller Output Regulator (MCOR)	13-11
Forward/Reverse Switch, Tow/Run Switch	13-13
Battery Charger Receptacle	13-15
Batteries, Electric Vehicle	13-17
OBC, Controller, and Solenoid – Electric Vehicle	13-19
Reverse Buzzer	13-21

CONTENTS

SECTION 14 – ELECTRIC MOTOR

Motor (Model 5BC59JBS6365) – Electric Vehicle	14-3
Motor (Model 5BC59JBS6390) – Electric Vehicle	14-5
Motor (Model EJ4-4001) – Electric Vehicle	14-7
Motor (Model EJ8-4001A) – Electric Vehicle	14-9

SECTION 15 – TRANSAXLE – ELECTRIC VEHICLES

Transaxle – Electric Vehicles (Earlier Style)	15-3
Transaxle – Electric Vehicles (Later Style)	15-5
Differential Guard – XRT810-E	15-7

SECTION 16 – BATTERY CHARGER

PowerDrive 3 Battery Charger, Domestic	16-3
PowerDrive 2 Battery Charger (Model 22110), Domestic	16-5

SECTION 17 – MAINTENANCE AND SERVICE TOOLS

Maintenance and Service Tools	17-3
Maintenance and Service Tools, Continued	17-5
Maintenance and Service Tools, Continued	17-7
Maintenance and Service Tools, Continued	17-9
Maintenance and Service Tools, Continued	17-11

 
SECTION i – INDEX

BODY AND TRIM

1

G

E

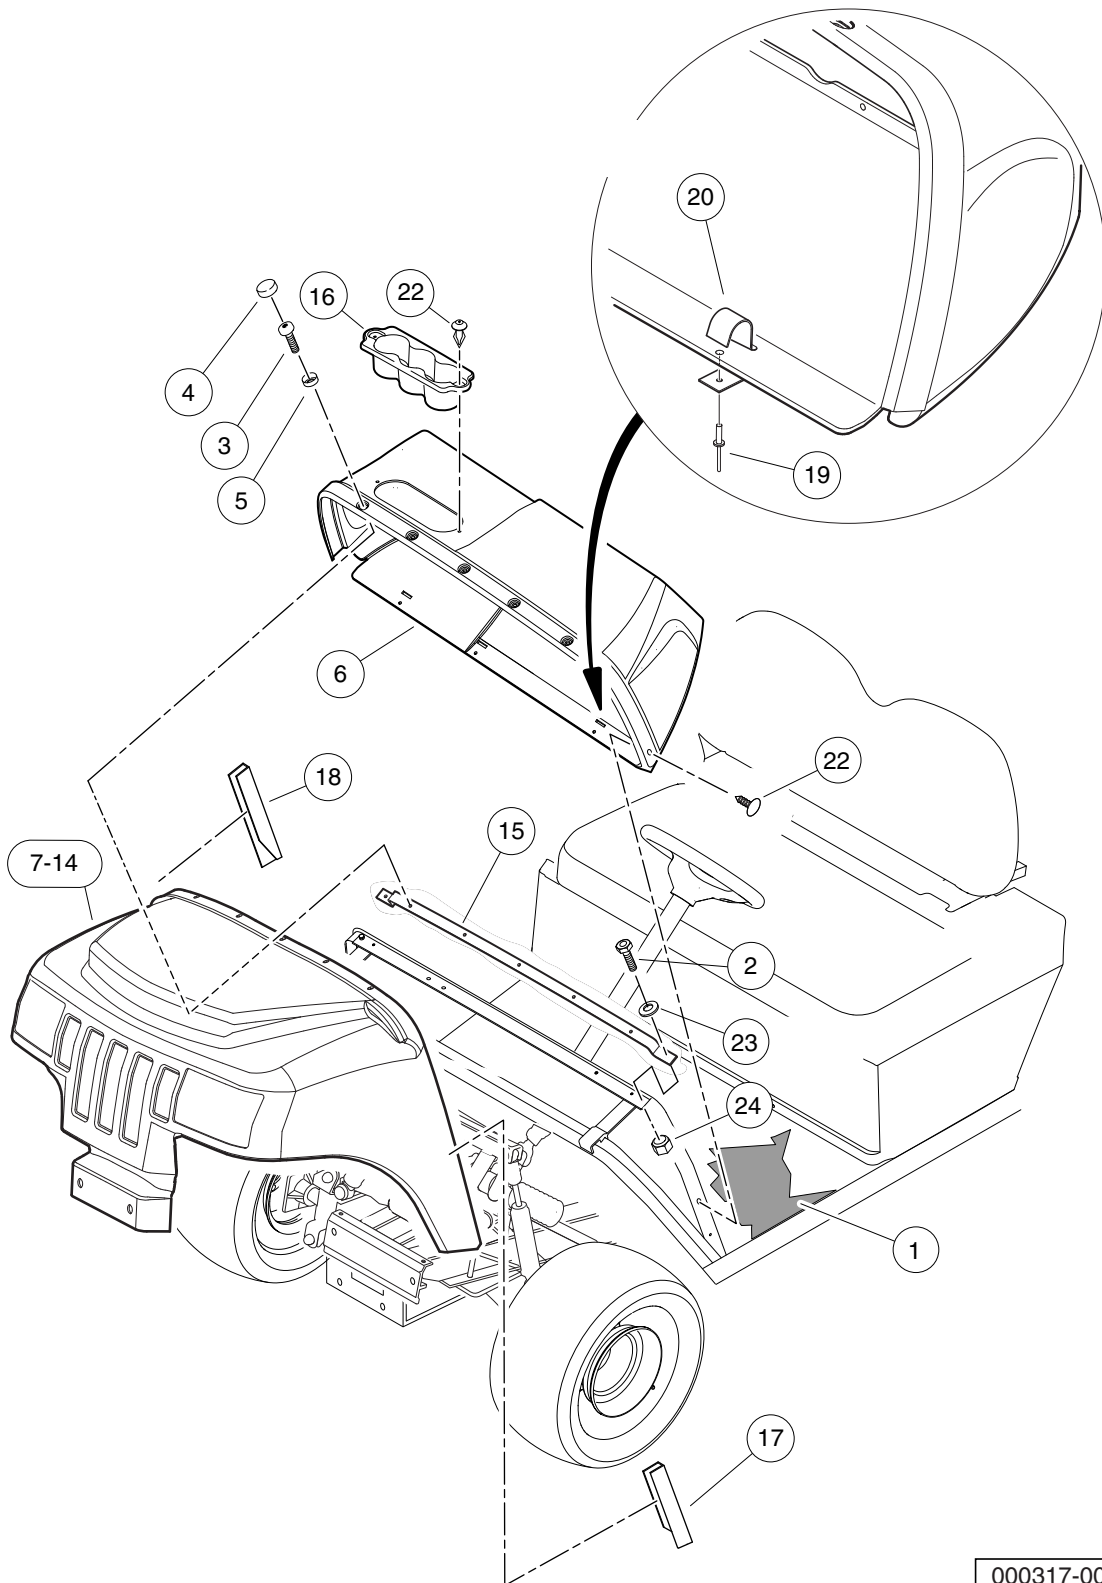1**G****E**

000317-002

FRONT BODY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101503202</u>	Floormat	1
2	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2
3	<u>102025801</u>	Screw, 1/4-20 X .75 Torx Pn Hd	5
4	<u>102045001</u>	Cap, 1/4" Plastic Screw Head	5
5	<u>102048401</u>	Washer, 1/4 Id Scalloped Plast	5
6	<u>102766701</u>	Dash	1
7	<u>102778501</u>	Cowl, Red	1
8	<u>102778502</u>	Cowl, Green	1
9	<u>102778503</u>	Cowl, Camouflage (Husqvarna)	1
10	<u>102778504</u>	Cowl, Classic Blue	1
11	<u>102778505</u>	Cowl, XRT- Black	1
12	<u>102778507</u>	Cowl, XRT- Camo Hard Wood HD (Standard camo for XRT850)	1
13	N/A	Cowl, XRT- Camo Max4 HD	1
14	<u>102778509</u>	Cowl, XRT- Silver	1
15	<u>102778601</u>	Support, Upper Cowl	1
16	<u>102796701</u>	Object Holder	1
17	<u>102822001</u>	Cowl Cover, Driver-Side	1
18	<u>102822002</u>	Cowl Cover, Passenger-Side	1
19	<u>102828701</u>	Rivet	10
20	<u>102857401</u>	Clip, Dash	3
21	<u>102914301</u>	Push Pin, Black	2
22	<u>102967901</u>	Rivet, Removable, Tuflok 1/4"	2
23	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
24	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2

1

 
G

E

1

G

E

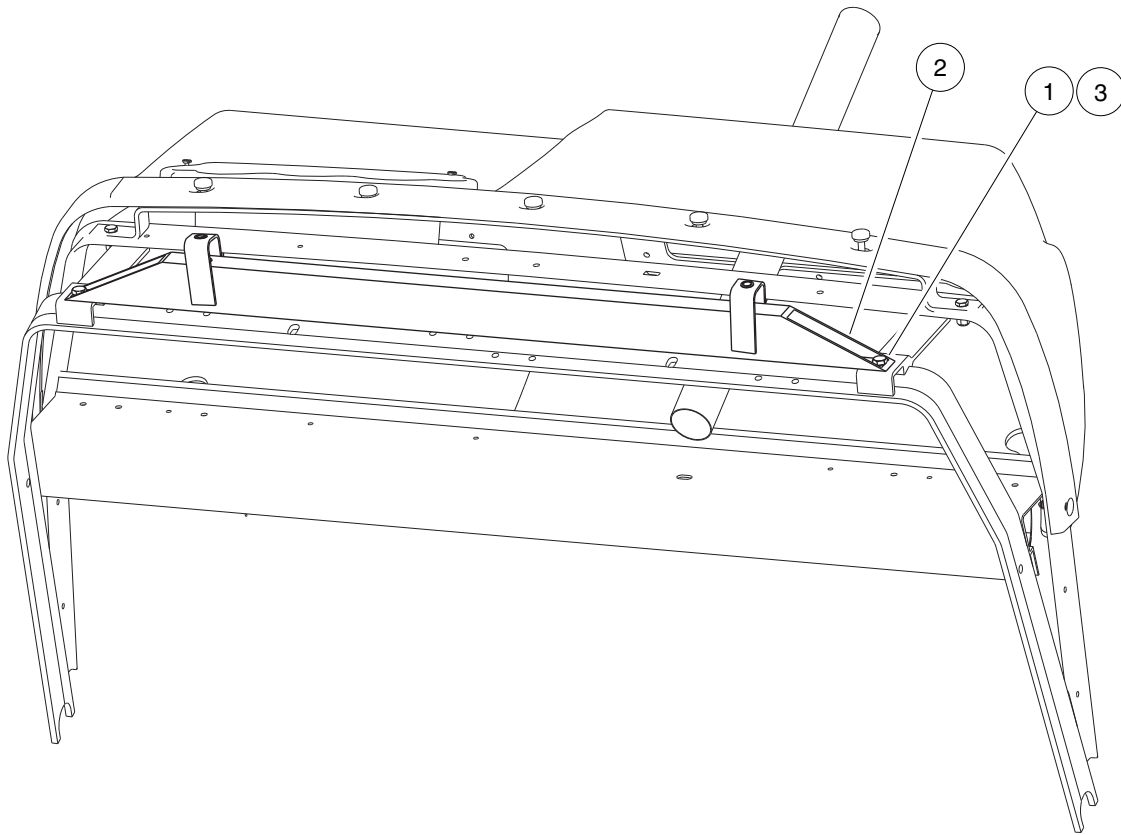

000582-001

CANOPY SUPPORT SYSTEM

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102242101	Screw, 5/16-18 X 3/4 Hex-Head with Patch	2
2	103313301	Asm, Brace, Canopy, Tube, Xrt	1
3	1241	Washer, 5/16 Type A Flat	1

1

 
G

E

1

G

E

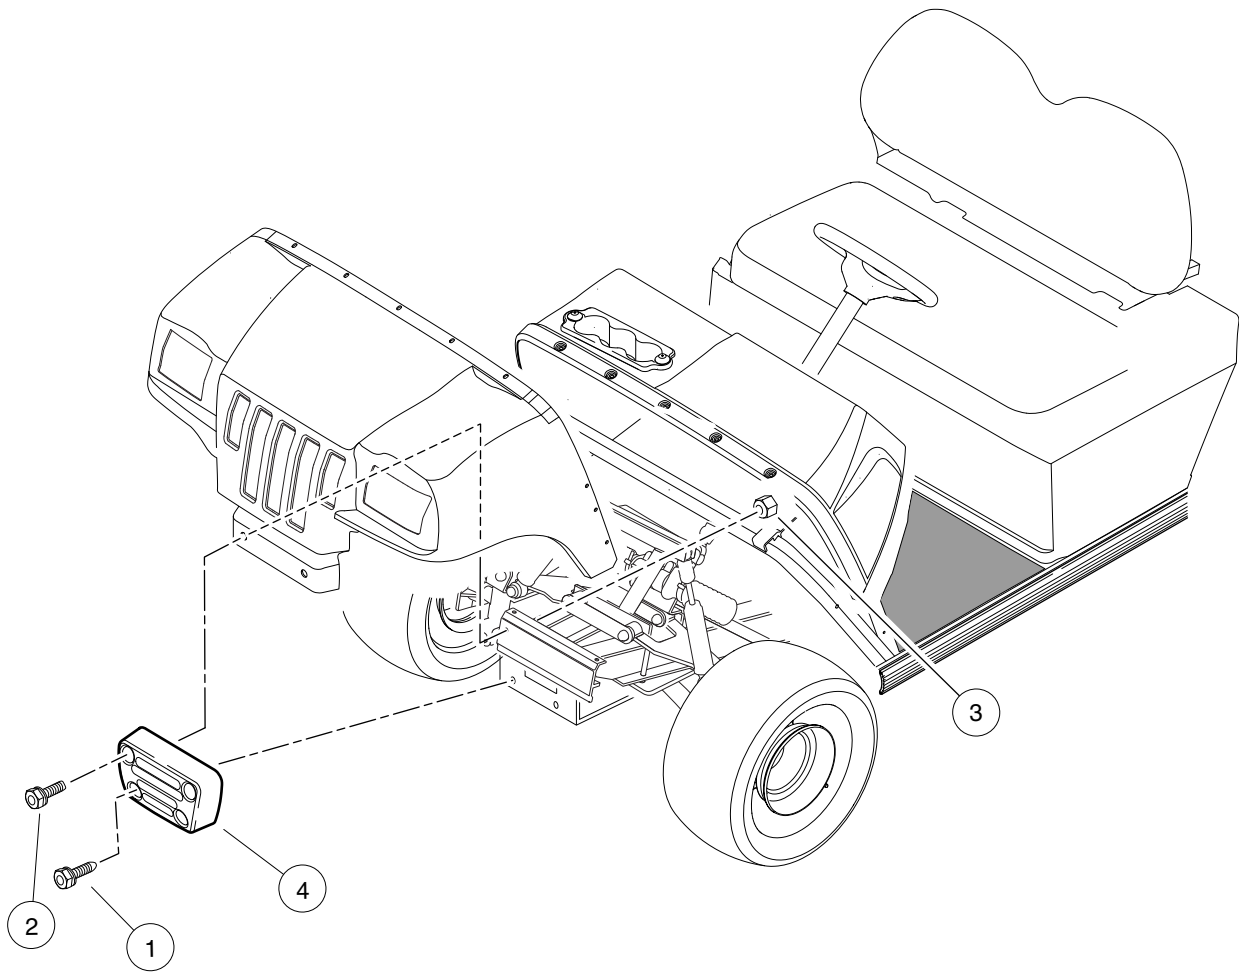

000357-002

BUMPER – XRT800 AND XRT800-E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102289002</u>	Screw, M8 X 1.25 X 30 Tri, Blk	2
2	<u>102298240</u>	Bolt, Flange Head, M8-1.25 X 40	2
3	<u>102618601</u>	Lock Nut, Flg M8 X 1.25 Nylon	2
4	<u>102830501</u>	Bumper, Cast	1

1

 
G

E

1

G

E

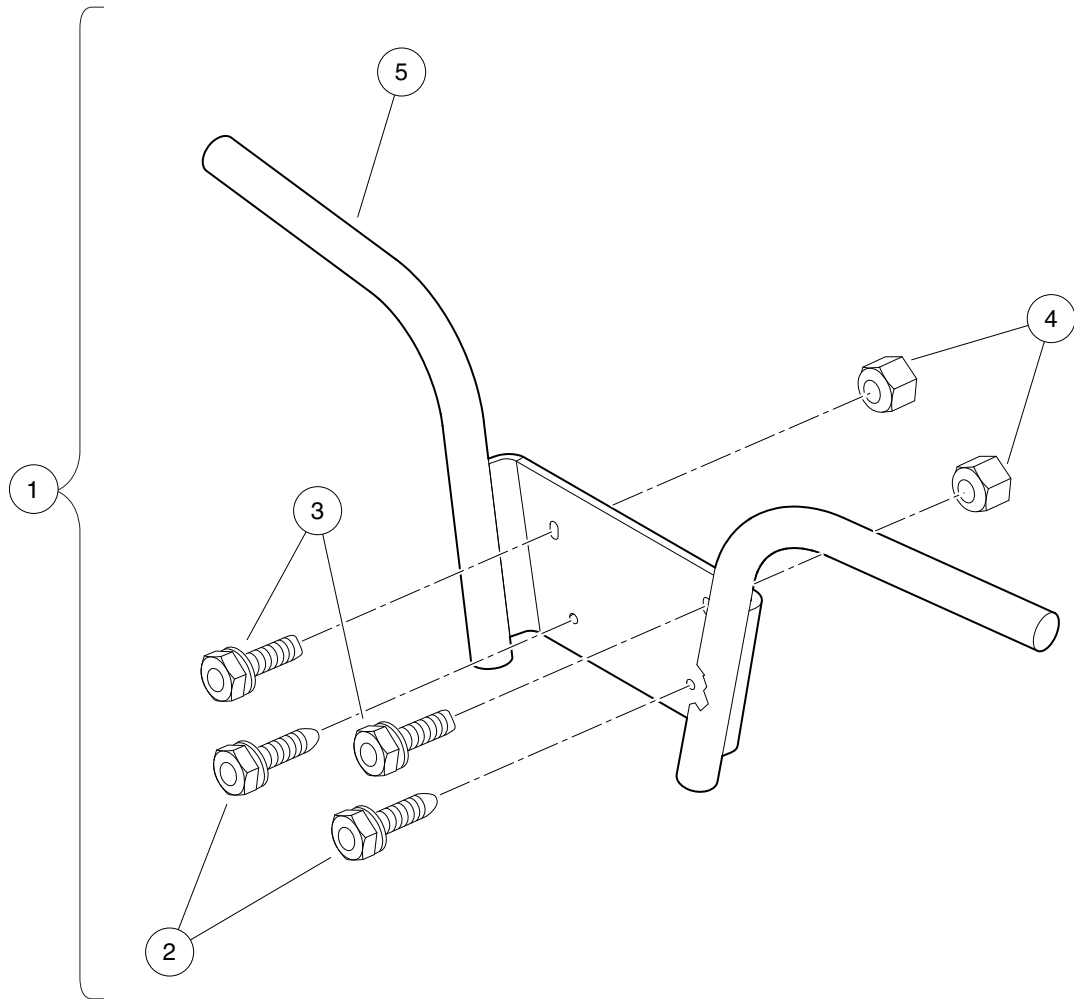

000356-001


BRUSH GUARD – HUV4210-GX

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	<u>102852401</u>	1 2 3 4 Kit, Brush Guard (includes items 2 through 6)	1	
2	<u>102289002</u>	Screw, M8 X 1.25 X 30 Tri, Blk	2	
3	<u>102298240</u>	Bolt, Flange Head, M8-1.25 X 40	2	
4	102618601	Lock Nut, Flg M8 X 1.25 Nylon	2	
5	102830201	Guard, Brush	1	
6	N/A	Instr, Brush Guard	1	

1

G

 E

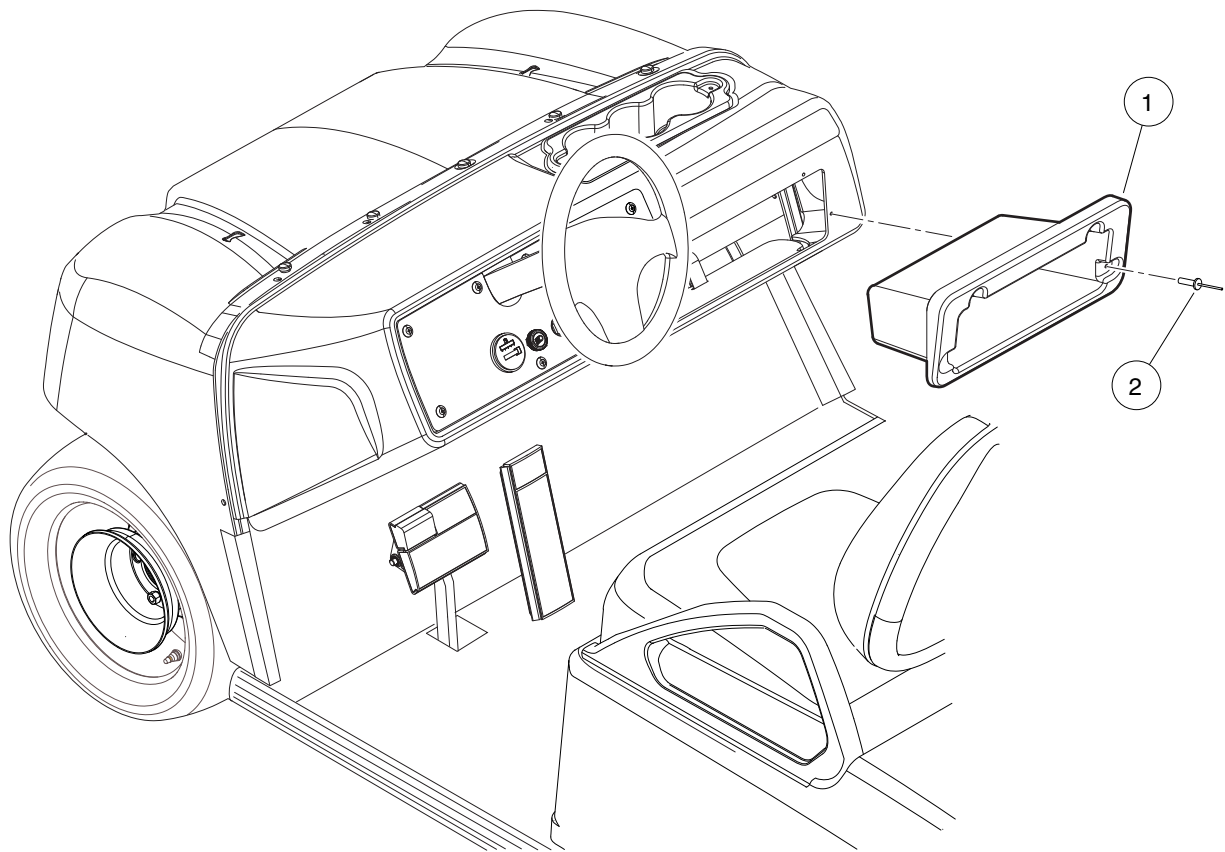

000358-001


DASH BOX – XRT800 AND XRT800-E

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	<u>102810301</u>	1 2 3 4 Box, Dash	1	
2	<u>102828701</u>	Rivet	4	

1

G

 E

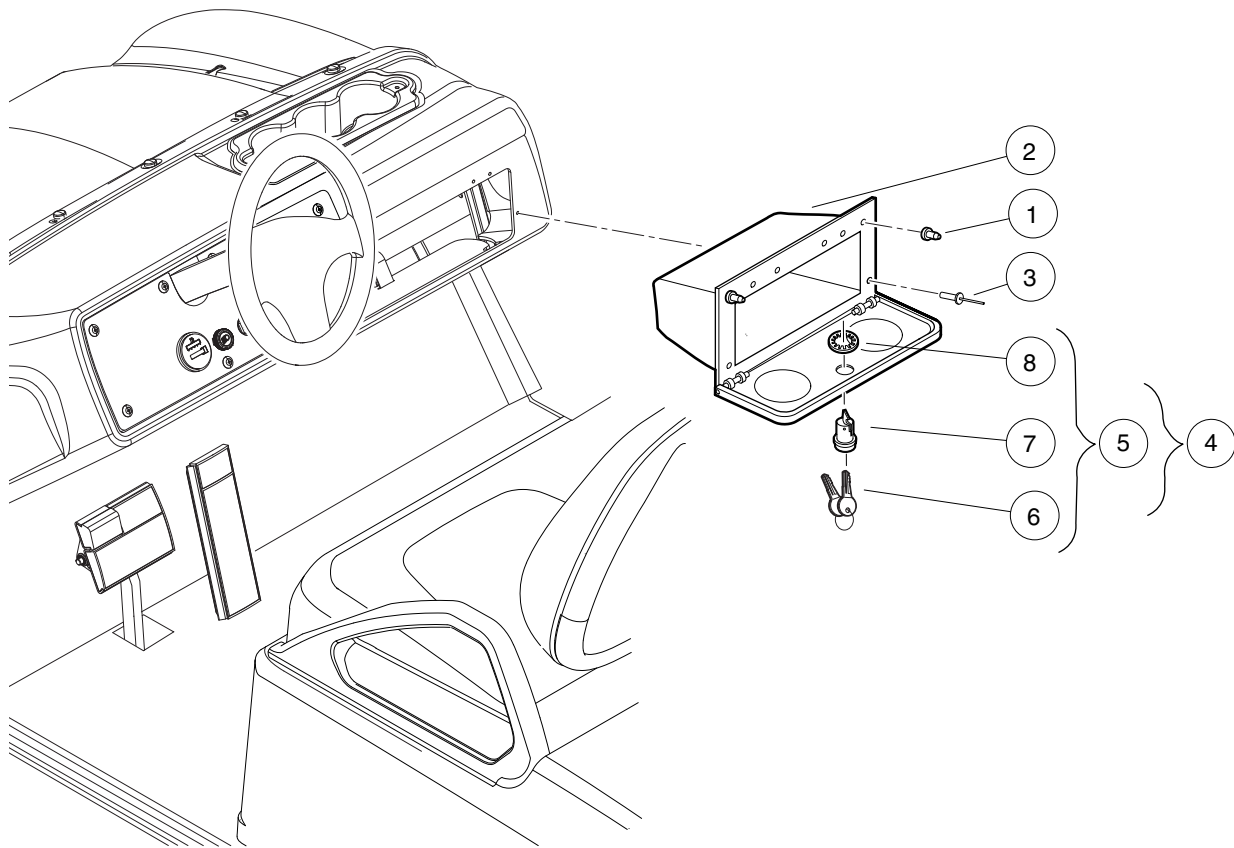

000359-001

GLOVE BOX – XRT810 AND XRT810-E


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010436	Bumper, Rubber	2
2	102796501	Glove Box	1
3	102828701	Rivet	6
4	102959401	Glove Box Lock / Key Kit (includes item 5)	1
5	N/A	Asm, Glove Box Lock / Key (includes items 6 through 8)	1
6	N/A	Key	2
7	N/A	Lock	1
8	N/A	Nut	1

1
G
E

1

G

 E

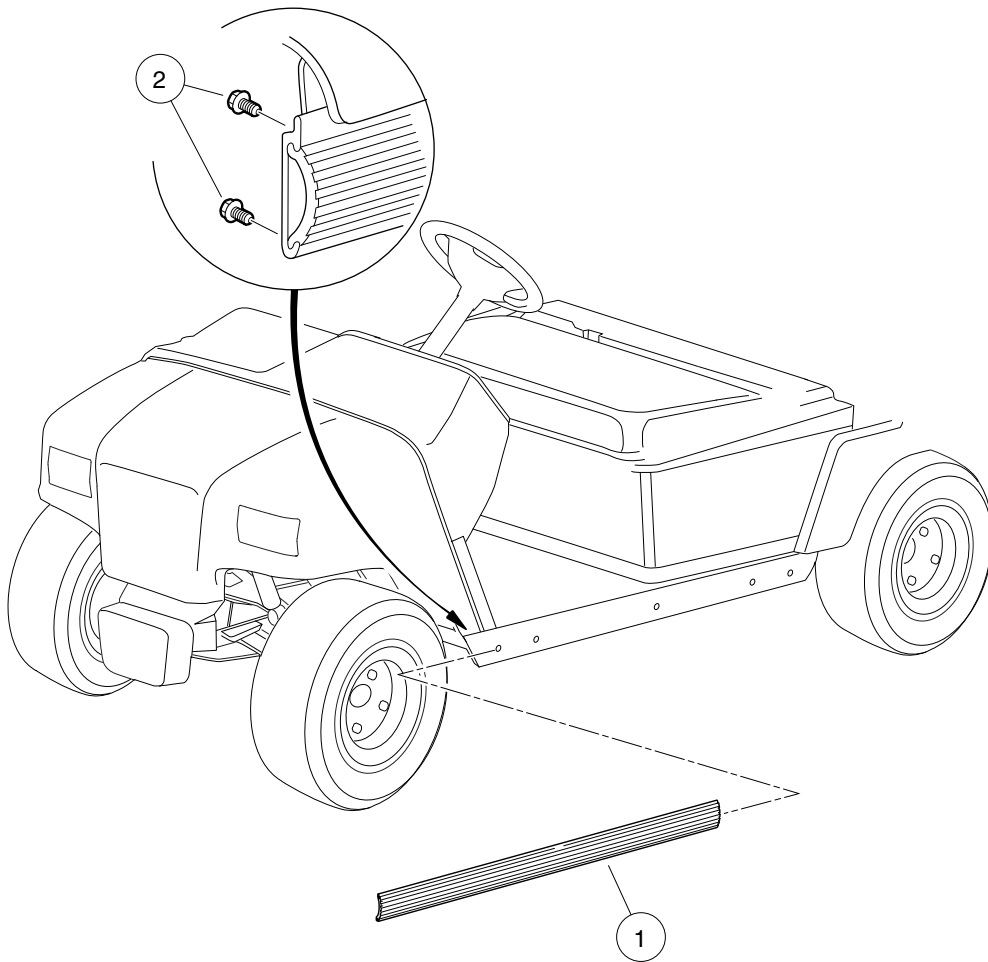

000361-002

SIDE TRIM – XRT800 AND XRT800-E

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>1013983</u>	Bumper, Side Trim	2
2	<u>102310701</u>	Screw, #8-18 x 0.375, Hex-Head Washer	8

1

 
G

E

1

G


E

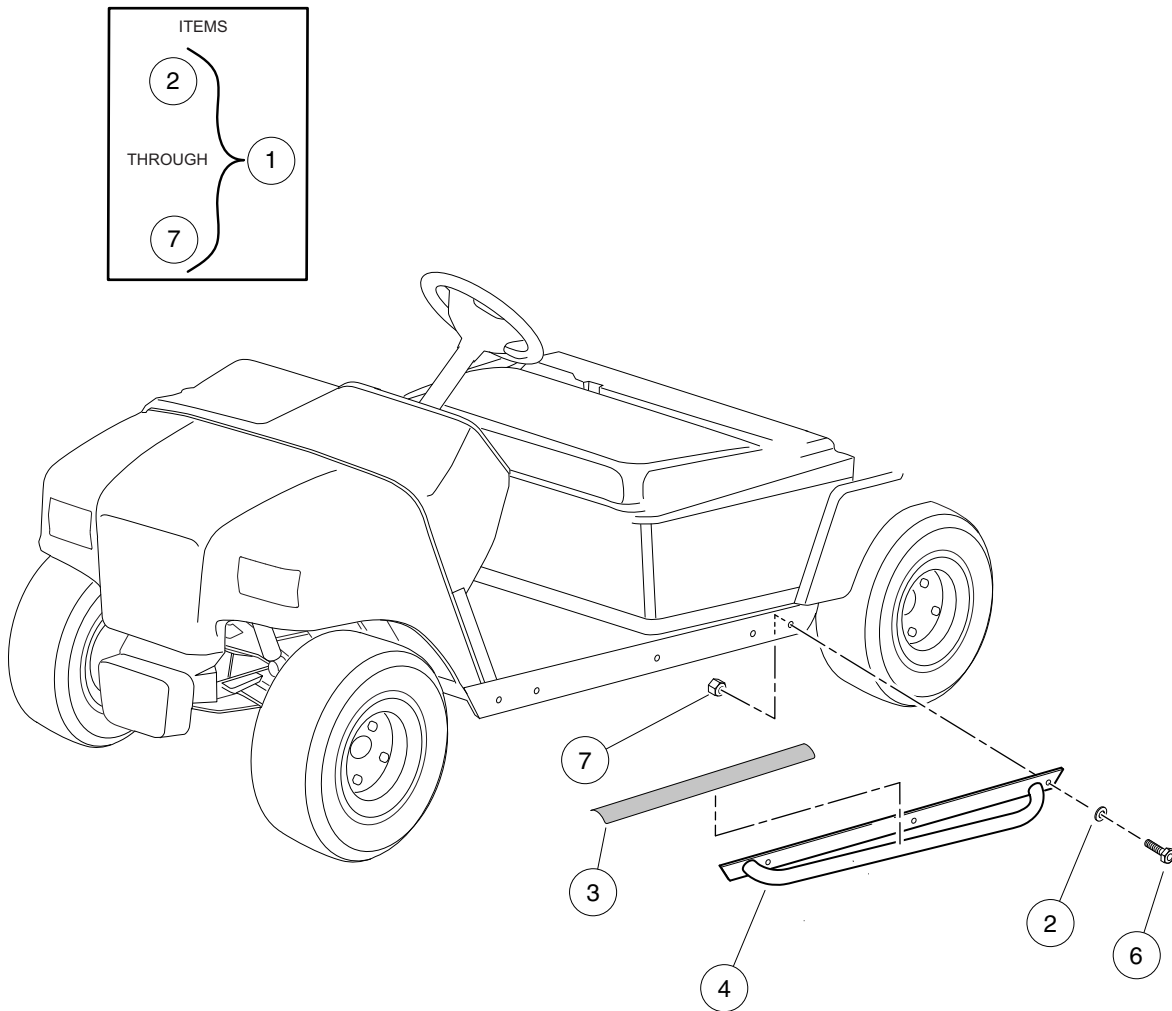

000360-002

NERF BAR – XRT810 AND XRT810-E


ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>102829802</u>	Kit, Nerf Bar (black) (includes items 2 through 7)	1	
2	<u>1011990</u>	Washer, 3/8 Flat	6	
3	<u>102355102</u>	Tape, Non-skid	2	
4	<u>102829703</u>	Nerf Bar Assy, Driver	1	
5	<u>102829704</u>	Nerf Bar Assy, Passngr	1	
6	320	Screw, 3/8-16 X 1.00 Hex-Head Cap	6	
7	<u>8754</u>	Locknut, 3/8-16 Hex	6	

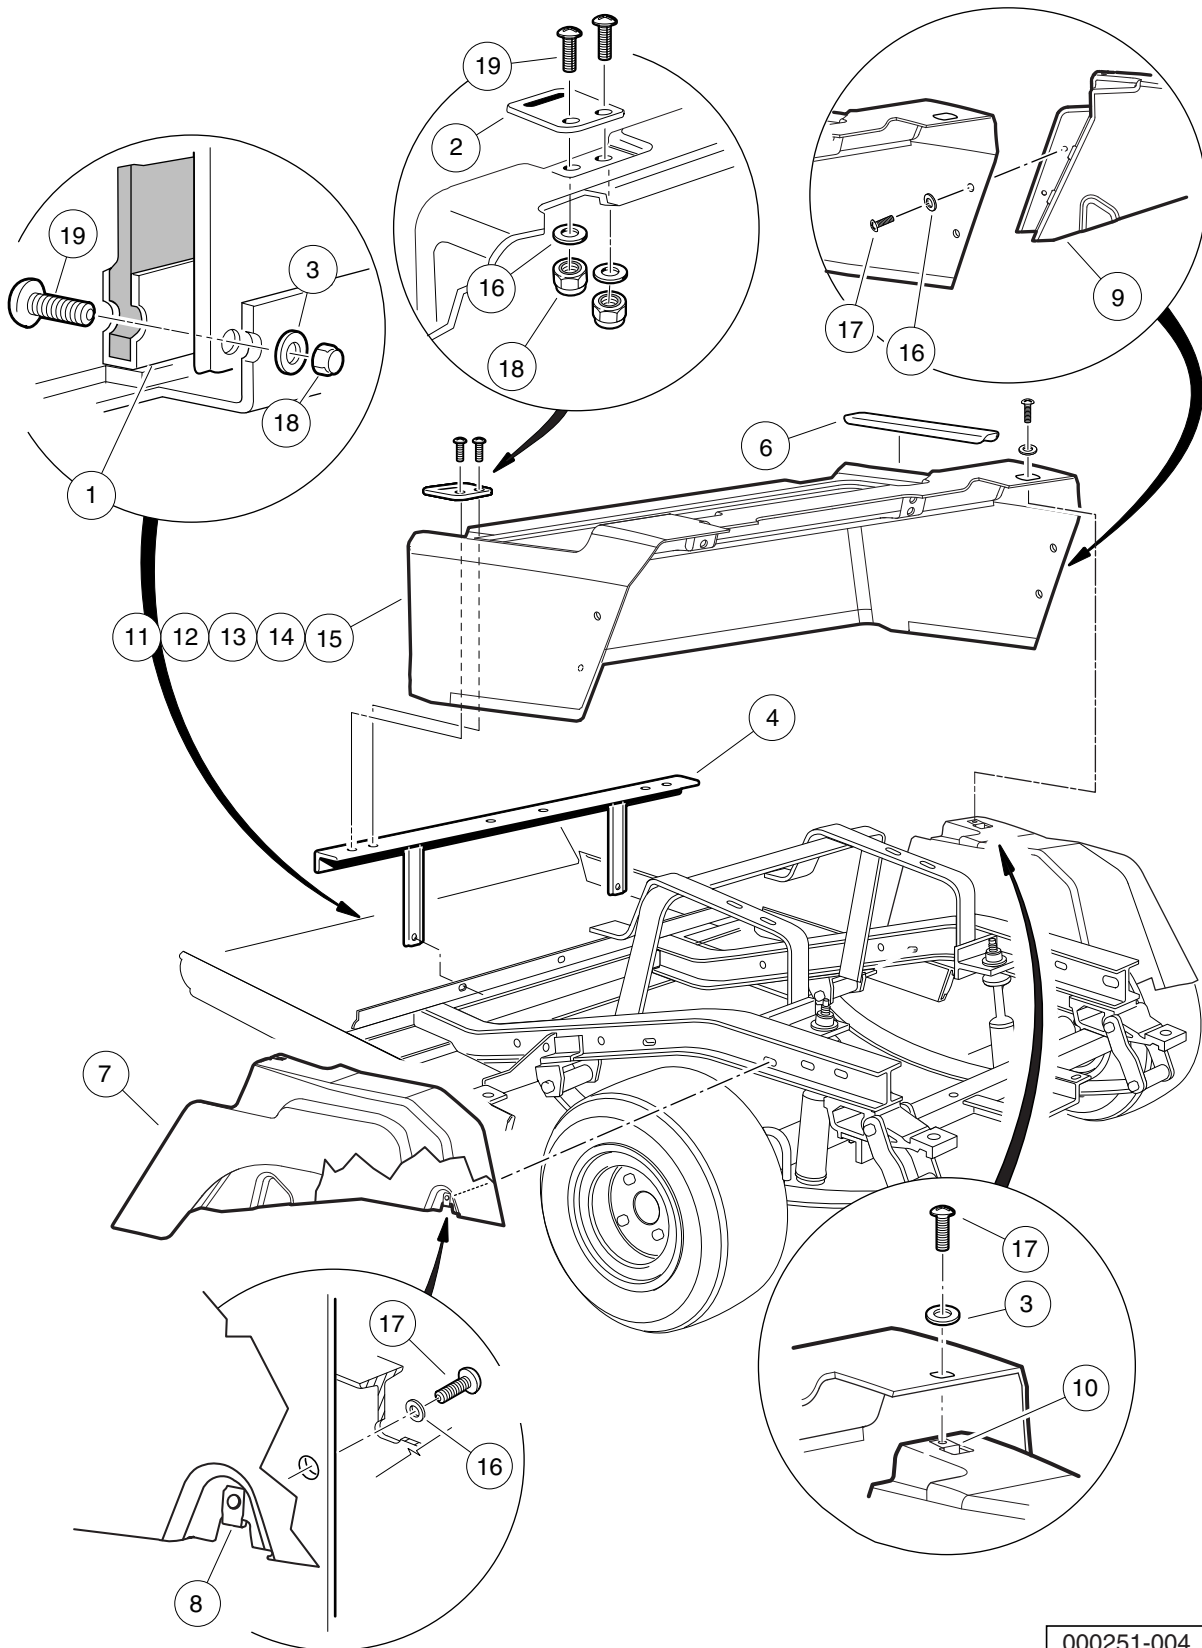 1**G****E**

000251-004

REAR BODY AND FENDER – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010993</u>	Body Kick Plate	1	
2	<u>1012412</u>	Body, Hinge Plate	2	
3	<u>1014306</u>	Washer, 1/4" Type B Flat	8	
4	<u>1017141</u>	Body Support Weldment	1	
5	<u>101855801</u>	Cable Retainer	1	
6	<u>102221201</u>	Wear Pad	2	
7	<u>102777601</u>	Fender, Driver Side (includes item 8)	1	
8	<u>1016952</u>	U-Nut, 1/4-20	4	
9	<u>102777602</u>	Fender, Passenger Side (includes item 10)	1	
10	<u>1016952</u>	U-Nut, 1/4-20	4	
11	<u>102796801</u>	Body, Rear, Gas, Red	1	
12	<u>102796802</u>	Body, Rear, Gas, Orange	1	
13	<u>102796803</u>	Body, Rear, Gas, Green	1	
14	<u>102796804</u>	Body, Rear, Gas, Classic Blue	1	
15	<u>102796805</u>	Body, Rear, Gas, Olive Green	1	
16	<u>332</u>	Washer, 1/4 Type A Narrow Flat	6	
17	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
18	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	6	
19	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	6	

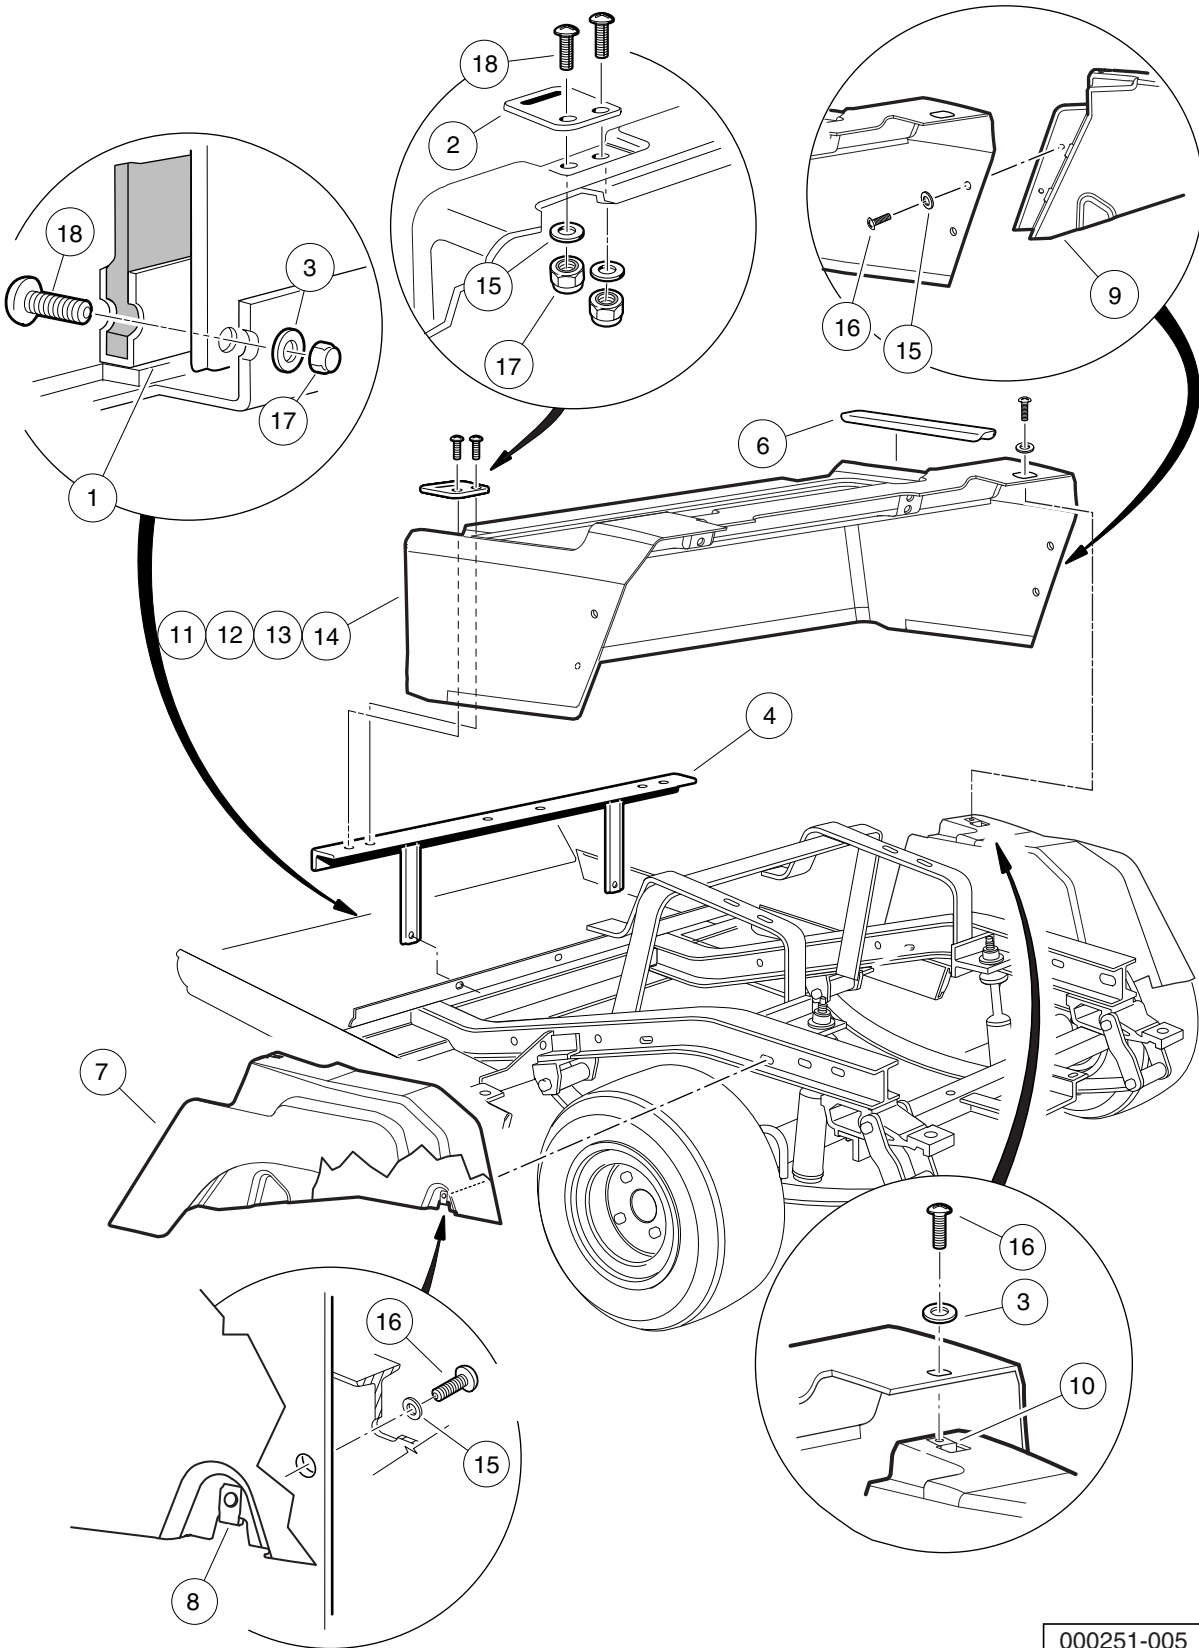 1**G****E**

000251-005


REAR BODY AND FENDER – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010993</u>	Body Kick Plate	1	
2	<u>1012412</u>	Body, Hinge Plate	2	
3	<u>1014306</u>	Washer, 1/4" Type B Flat	8	
4	<u>1017141</u>	Body Support Weldment	1	
5	<u>101855801</u>	Cable Retainer	1	
6	<u>102221201</u>	Wear Pad	2	
7	<u>102777601</u>	Fender, Driver Side (includes item 8)	1	
8	<u>1016952</u>	U-Nut, 1/4-20	4	
9	<u>102777602</u>	Fender, Passenger Side (includes item 10)	1	
10	<u>1016952</u>	U-Nut, 1/4-20	4	
11	<u>102818301</u>	Body, Rear, Electric, Red	1	
12	<u>102818302</u>	Body, Rear, Electric, Orange	1	
13	<u>102818303</u>	Body, Rear, Electric, Green	1	
14	<u>102818305</u>	Body, Rear, Electric, Olive Green	1	
15	<u>332</u>	Washer, 1/4 Type A Narrow Flat	6	
16	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
17	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	6	
18	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	6	

1

G

 E

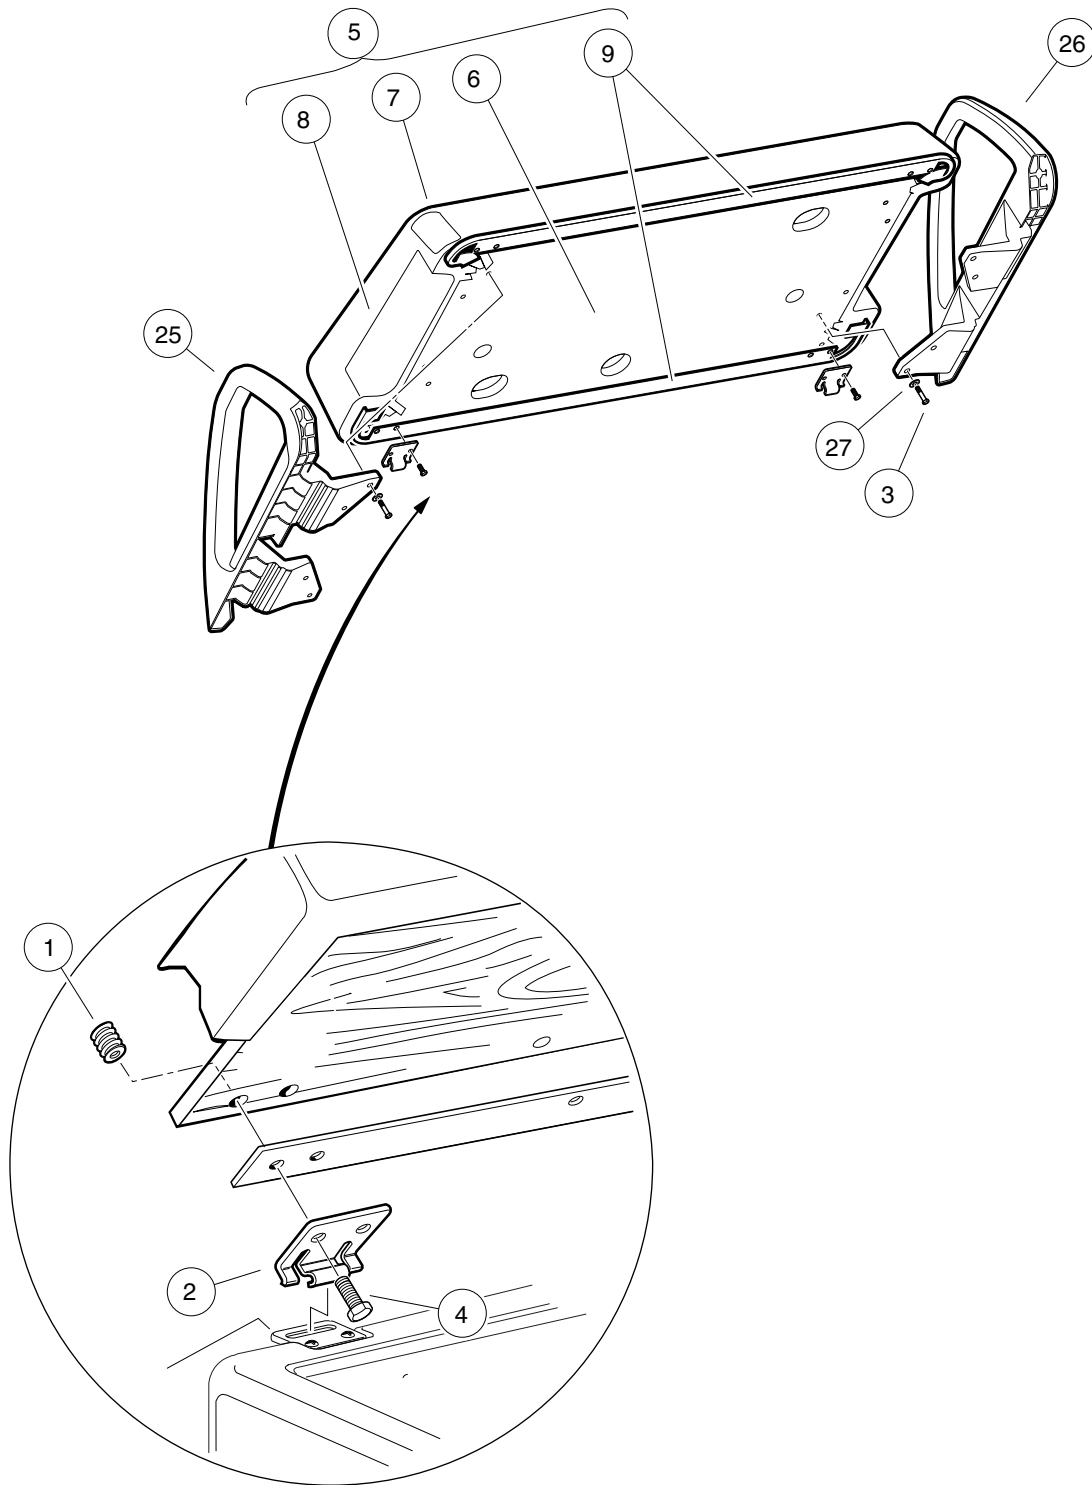

000364-003

FRONT SEAT BOTTOM AND ARMRESTS


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010543	Insert - Wood	4
2	<u>1011652</u>	Hinge Plate	2
3	1016916	Screw, 1/4-20 X 1.50 Hex-Head Cap	8
4	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
5	<u>102174201</u>	Seat Bottom Assembly, Buff (includes items 6 through 9)	1
6	N/A	Plywood Assy	1
7	<u>101998211</u>	Vinyl Cover Seat Btm - Buffsvc	1
8	N/A	Foam, Seat	1
9	<u>101998501</u>	Gasket, Seat	2
10	<u>102174202</u>	Seat Bottom Assembly, White (includes items 11 through 14)	1
11	N/A	Plywood Assy	1
12	<u>101998212</u>	Vinyl Cover, Seat Bottom, White	1
13	N/A	Foam, Seat	1
14	<u>101998501</u>	Gasket, Seat	2
15	<u>102174204</u>	Seat Bottom Assembly, Black (includes items 16 through 19)	1
16	N/A	Plywood Assy	1
17	<u>101998214</u>	Vinyl Cover, Seat Bottom, Black	1
18	N/A	Foam, Seat	1
19	<u>101998501</u>	Gasket, Seat	2
20	<u>102174205</u>	Seat Bottom Assembly, Gray (includes items 21 through 24)	1
21	N/A	Plywood Assy	1
22	<u>101998215</u>	Vinyl Cover, Seat Bottom, Gray	1
23	N/A	Foam, Seat	1
24	<u>101998501</u>	Gasket, Seat	2
25	<u>103246701</u>	Hip Restraint, Drvr Side	1
26	<u>103246801</u>	Hip Restraint, Pass Side	1
27	<u>332</u>	Washer, 1/4 Type A Narrow Flat	8
Note: Sub-components contained in items 10, 15, and 20 are the same as those shown for item 5, except for the vinyl seat covers.			

1
G
E

1

G

 
E

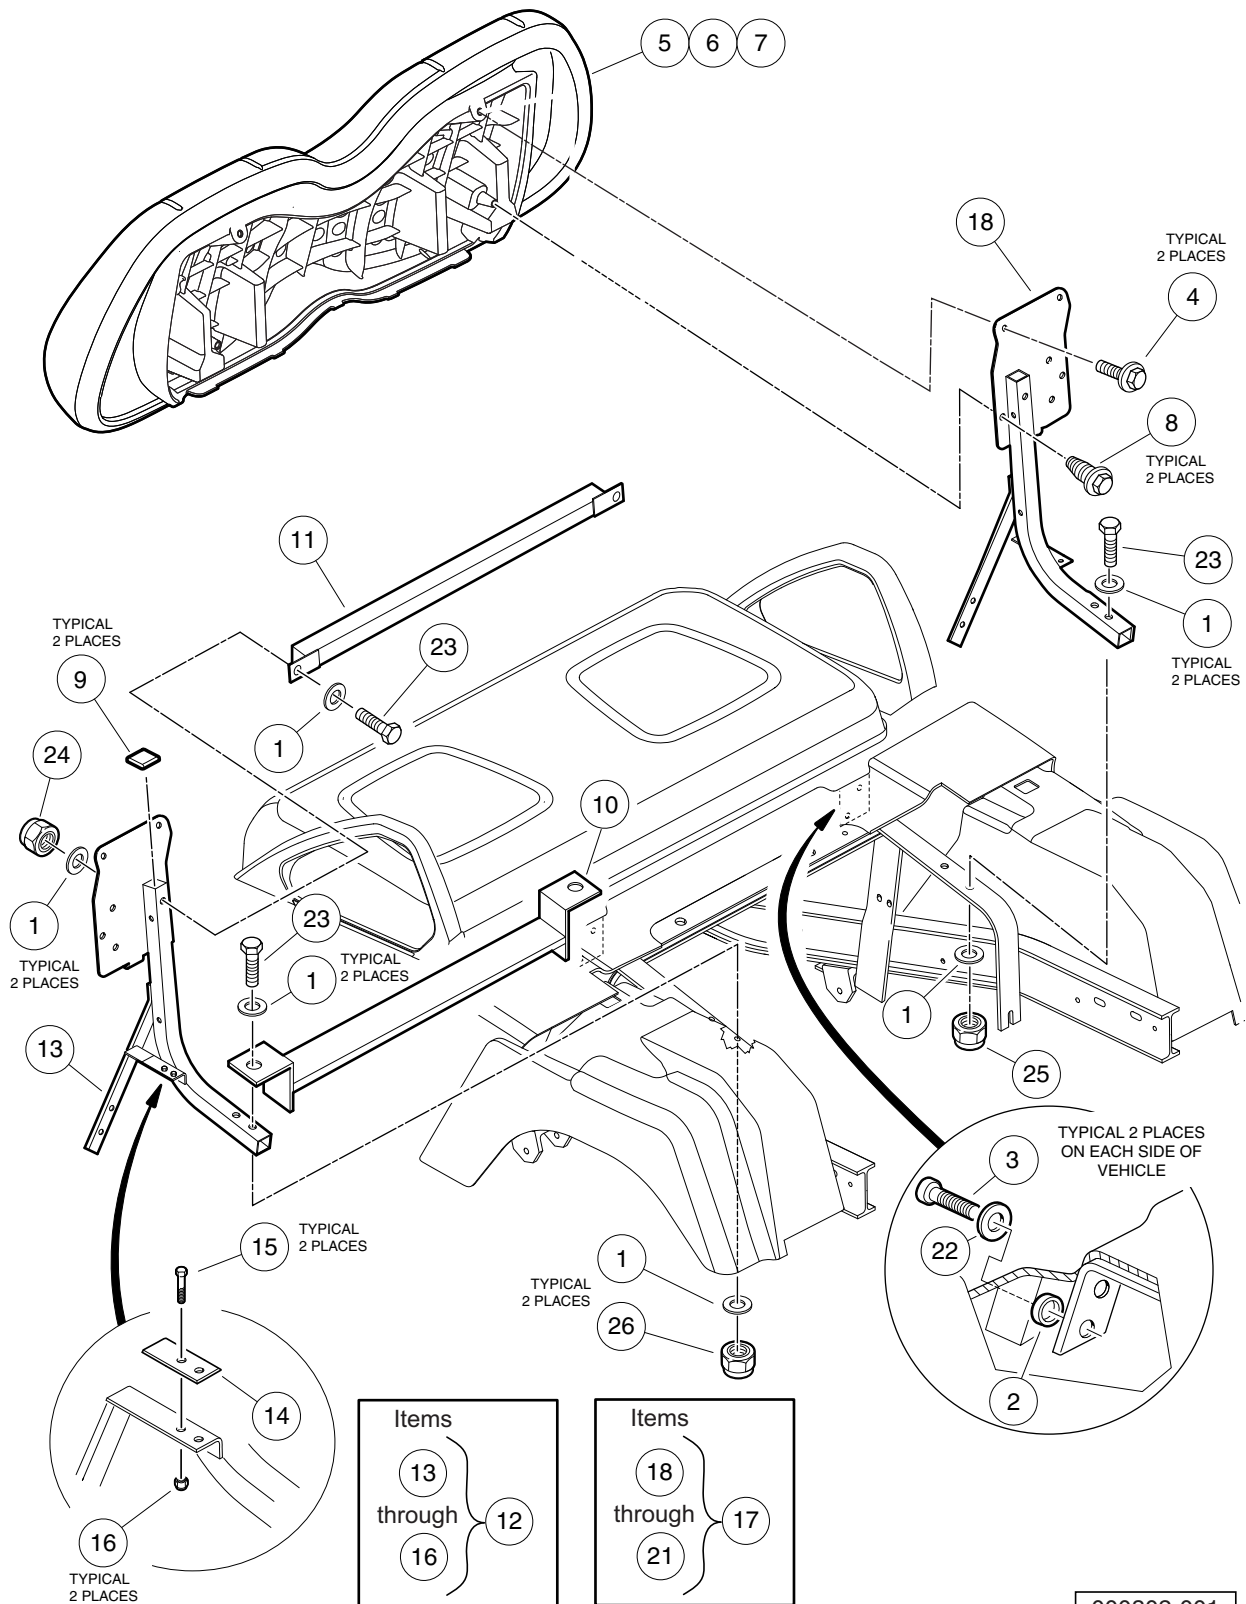

000302-001

SEAT BACK


ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	<u>1011931</u>	Washer, 1/4 Flat	12			
2	<u>1017774</u>	Body Spacer	4			
3	<u>101910401</u>	Screw, 5/16-18 X 1.25 Thrd Frm	4			
4	<u>102296530</u>	Screw - M6 X 1.0 X 30 Sems	2			
5	<u>102503221</u>	Service Backrest Asm, Beige	1			
6	<u>102503222</u>	Service Backrest Asm, White	1			
7	<u>102503224</u>	Service Backrest Asm, Gray	1			
8	<u>102544201</u>	Screw, M6 Hex	2			
9	<u>102581201</u>	Plug, Square - 25.4 mm	2			
10	<u>102796101</u>	Weldment, Bed Support	1			
11	<u>102816201</u>	Seat Support, Cross Brace	1			
12	<u>102913101</u>	Seat Support W/striker, Drv (includes items 13 through 16)	1			
13	<u>102796301</u>	Seat Support, Driver-Side	1			
14	<u>102840301</u>	Striker Plate	1			
15	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2			
16	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2			
17	<u>102913102</u>	Support, Seat, Right (passenger) (includes items 18 through 21)	1			
18	<u>102796302</u>	Seat Support, Passenger-Side	1			
19	<u>102840301</u>	Striker Plate	1			
20	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2			
21	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2			
22	<u>1241</u>	Washer, 5/16 Type A Flat	4			
23	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	6			
24	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2			
25	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	6			
26	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	2			

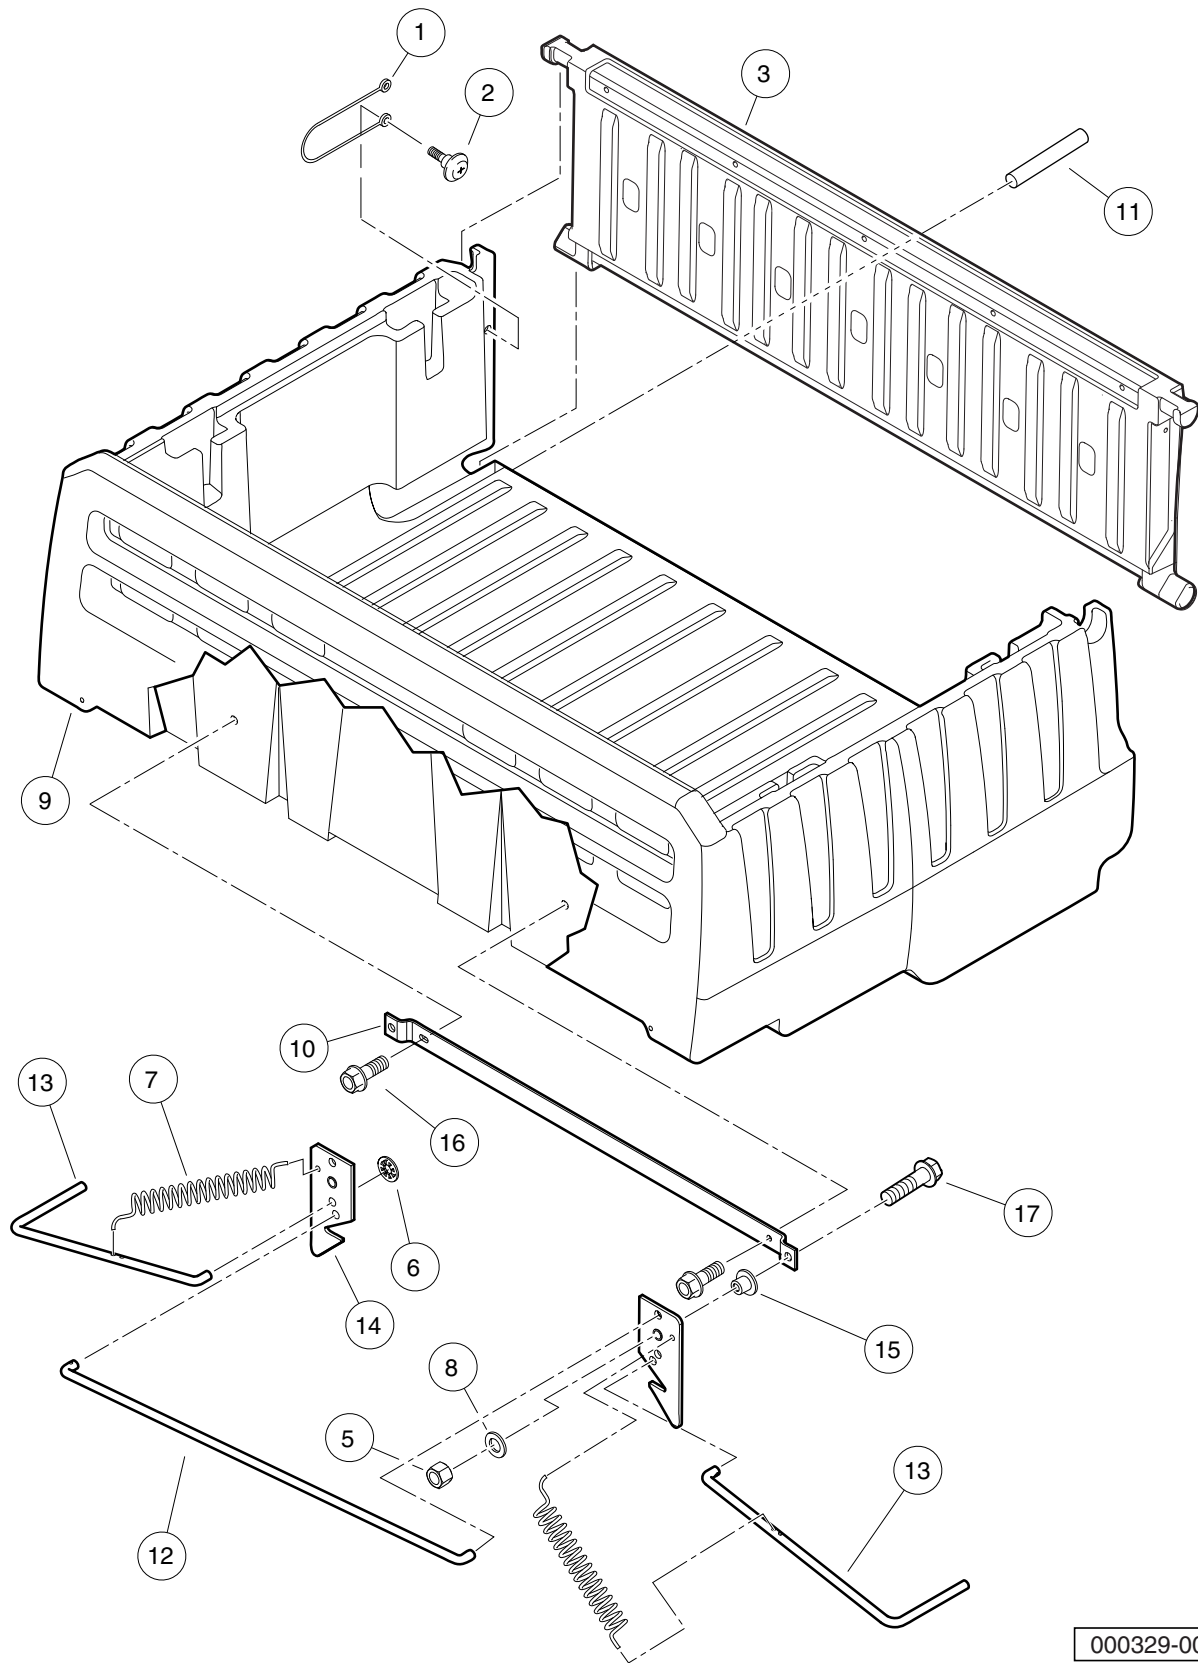 1**G****E**

000329-002

CARGO BED

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>102779001</u>	Lanyard, Tailgate	2	
2	<u>102779401</u>	Bolt Lanyard	2	
3	<u>102779501</u>	Tailgate	1	
4	<u>103189901</u>	Bed Assembly (includes items 5 through 17)	1	
5	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2	
6	<u>1013876</u>	Pushnut, 3/8	4	
7	N/A	Extension, Spring Latch	2	
8	N/A	Washer, 3/8 Flat Type A	2	
9	N/A	Bed	1	
10	N/A	Support, Latch Link	1	
11	N/A	Pin, Support	2	
12	N/A	Rod, Long Link	1	
13	N/A	Rod, Bed Lift, Short Bent	2	
14	N/A	Catch, Tilt Bed	2	
15	N/A	Bearing, Bronze, 1/2x9/32	2	
16	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	2	
17	320	Screw, 3/8-16 X 1.00 Hex-Head Cap	1	
18	<u>103317501</u>	Kit, Plastic Bed Box Latch (includes items 19 through 22)	1	
19	<u>1010545</u>	Screw, Hex Washer Head 1/4-14 X .75	2	
20	<u>1011578</u>	Washer, 5/16 Type B Flat	2	
21	103293501	Spring, Tilt Latch 3.4 Lb/in	2	
22	103317601	Instr, Bed Box Field Kit	1	

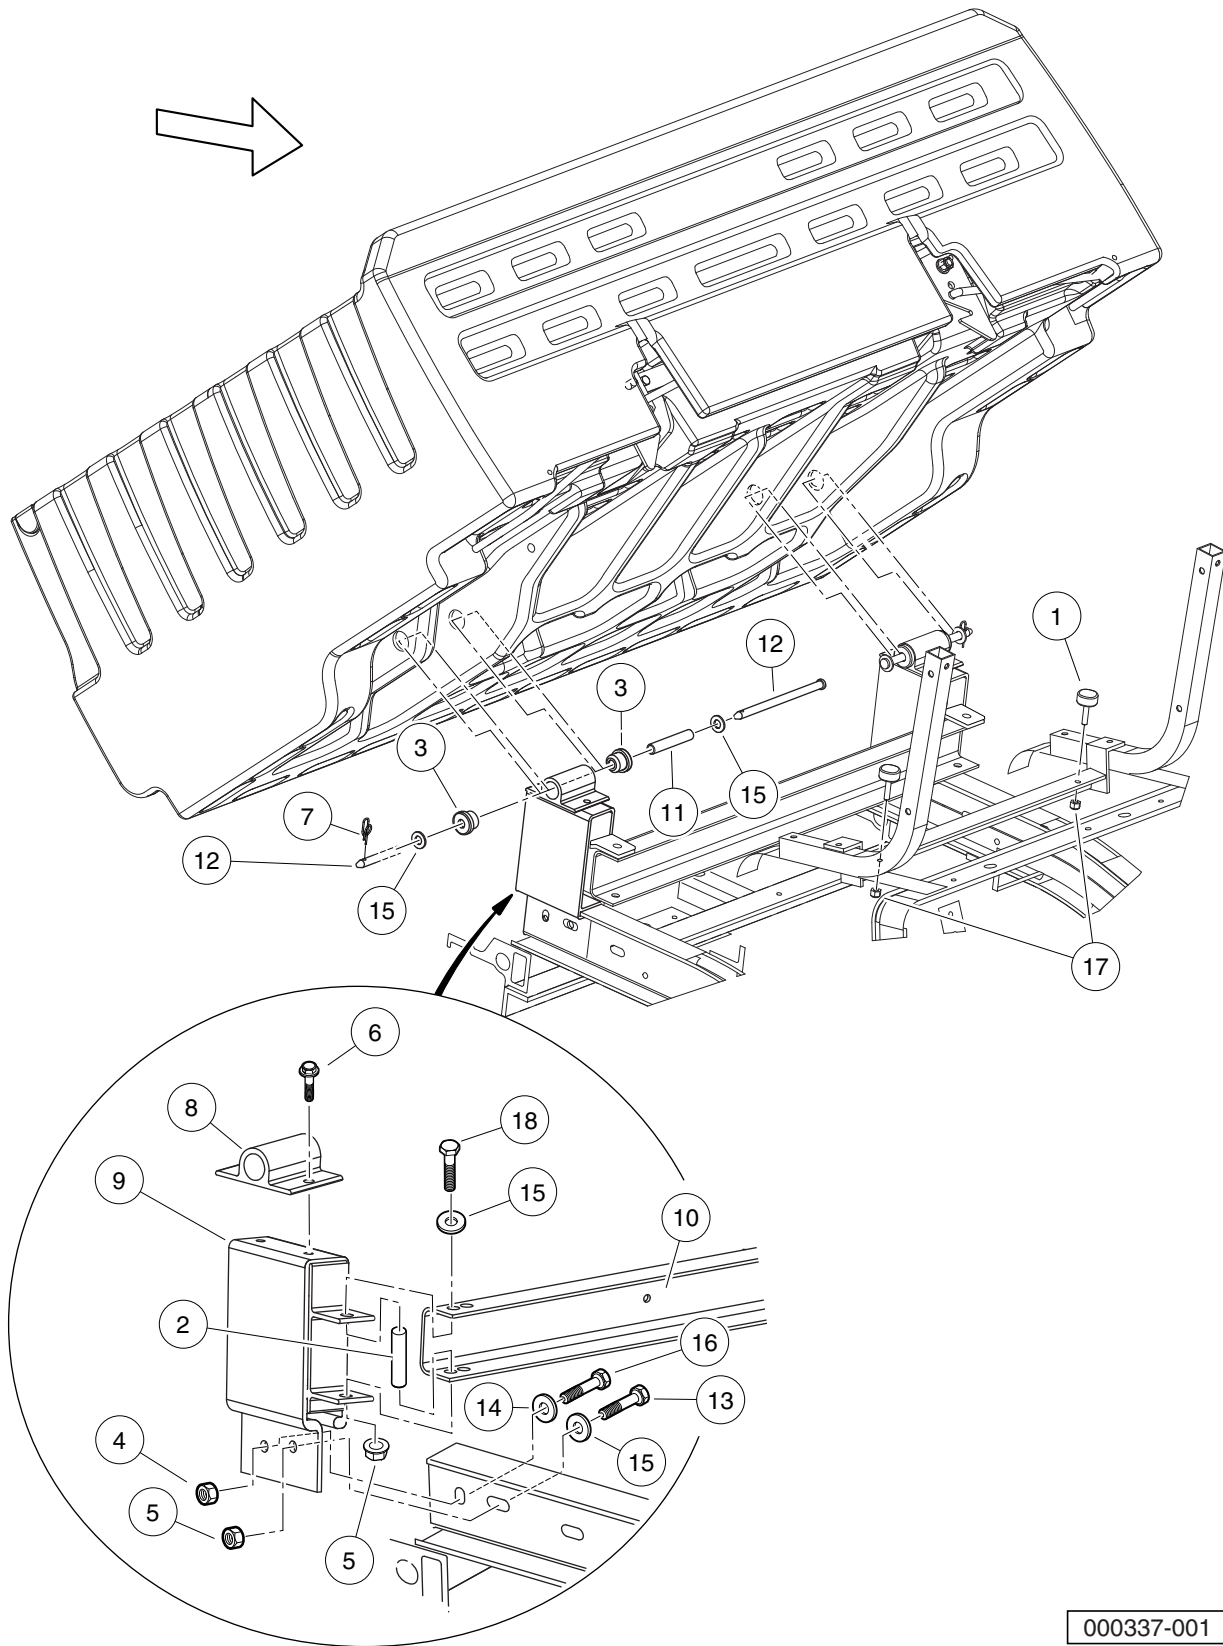 1**G****E**

000337-001


BED HINGE

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	<u>1010878</u>	Bumper, Rubber	2			
2	<u>1012303</u>	Bushing, Steel	2			
3	<u>1015583</u>	Bushing, Urethane	4			
4	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	2			
5	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4			
6	<u>102289001</u>	Screw, M8X1.25X30, Hex	4			
7	<u>102289301</u>	Rue Ring - 1/2"	2			
8	<u>102797201</u>	Hinge, Roto Bed	2			
9	<u>102820301</u>	Support, Hinge	2			
10	<u>102820501</u>	Stiffener, Bed Support	1			
11	<u>102821101</u>	Bushing, Steel	2			
12	<u>102823201</u>	Pin, Clevis, 3/8	2			
13	<u>320</u>	Screw, 3/8-16 X 1.00 Hex-Head Cap	2			
14	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2			
15	<u>334</u>	Washer, 3/8 Type A Flat	8			
16	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2			
17	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2			
18	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2			

1

G

 E

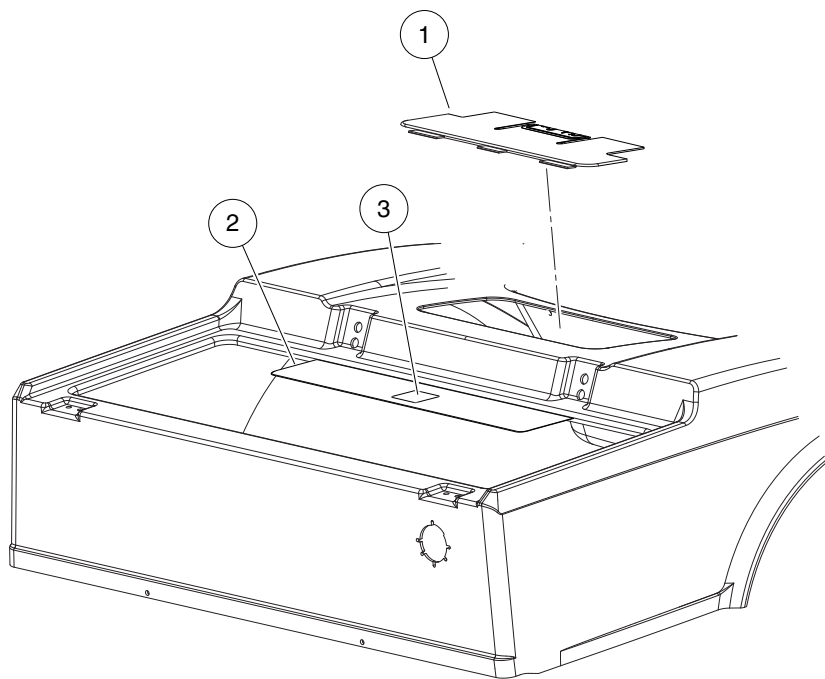

000819-002

ACCESS PANEL AND HEAT SHIELD

ITEM	PART NO.	DESCRIPTION	QTY
1	N/A	Access Panel - Black, Cut	1
2	101806901	Shield, Heat	1
3	101960501	Decal, Rotating Parts/Hot Manifold	1

1

G

E

1

G

E

WHEELS AND TIRES

2

 
 
G

E

2

G

E

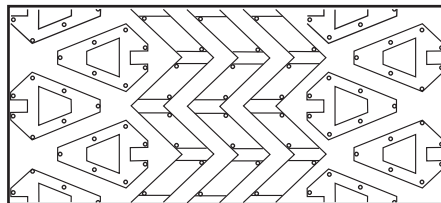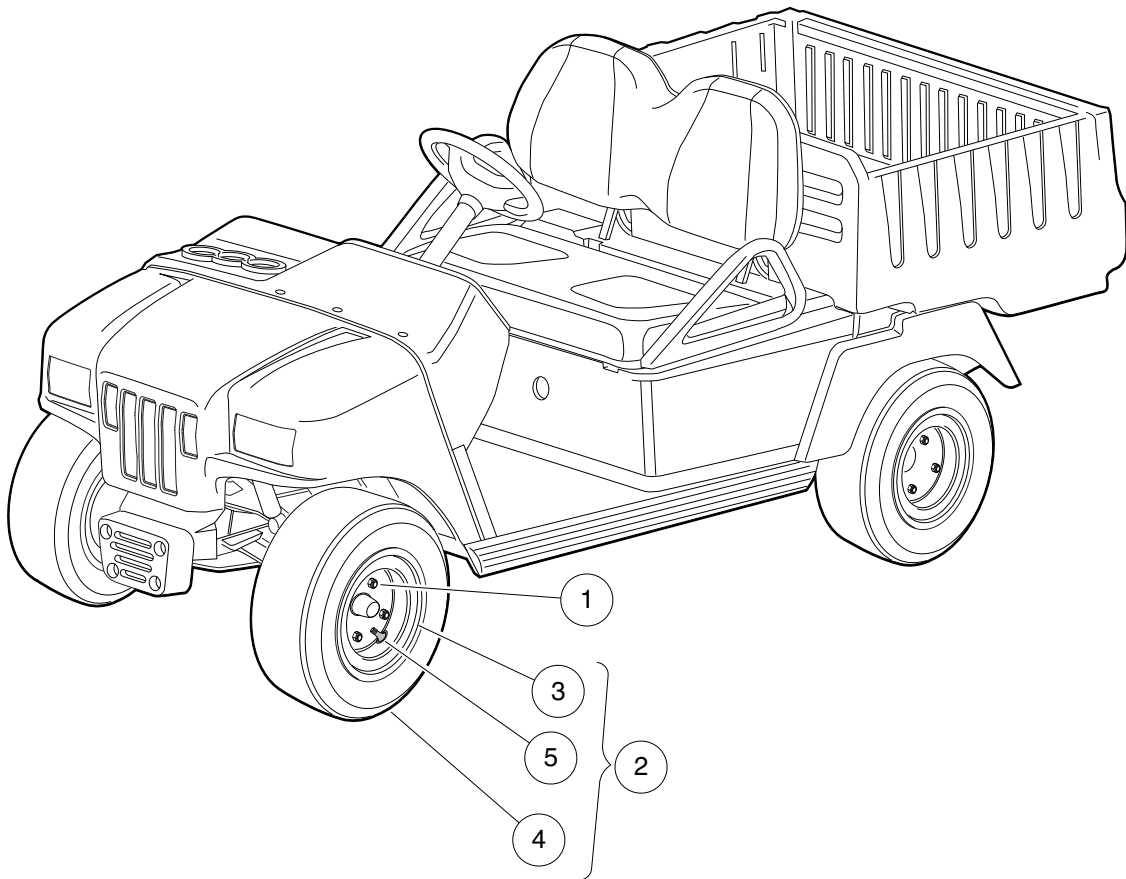

000224-002


WHEELS AND TIRES

ITEM	PART NO.	DESCRIPTION	QTY	2
		1 2 3 4		G
1	<u>1010984</u>	.500-20 Unf Lug Nut	16	E
2	<u>102819101</u>	Tire Assembly, All Trail II (includes items 3 through 5)	4	
3	<u>102815801</u>	Wheel Rim, Gray	1	
4	<u>102815901</u>	Tire, Unmounted, All Trail II	1	
5	<u>7310</u>	Valve Stem	1	

2

G

 E

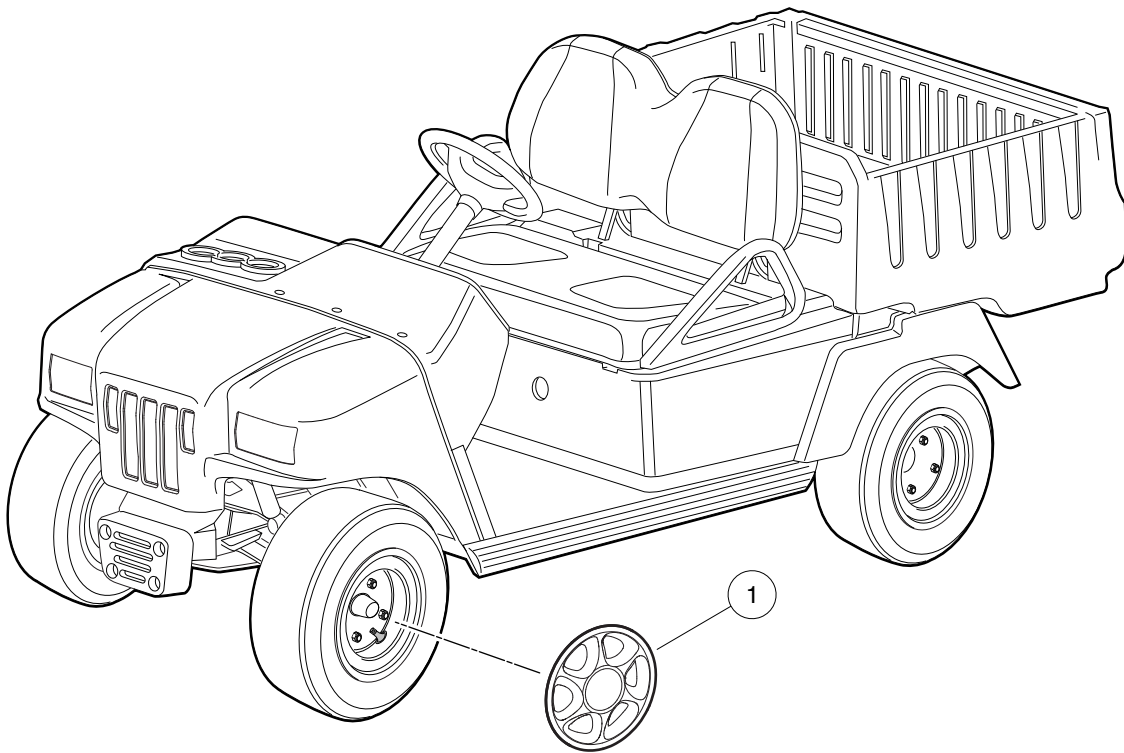

000318-002

HUBCAP – XRT810 AND XRT810-E

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>102861401</u>	1 2 3 4 Wheel Cover, Chrome Elite	4

2

G

E

2

G

E

DECALS

3

 
G

E

3

G

E

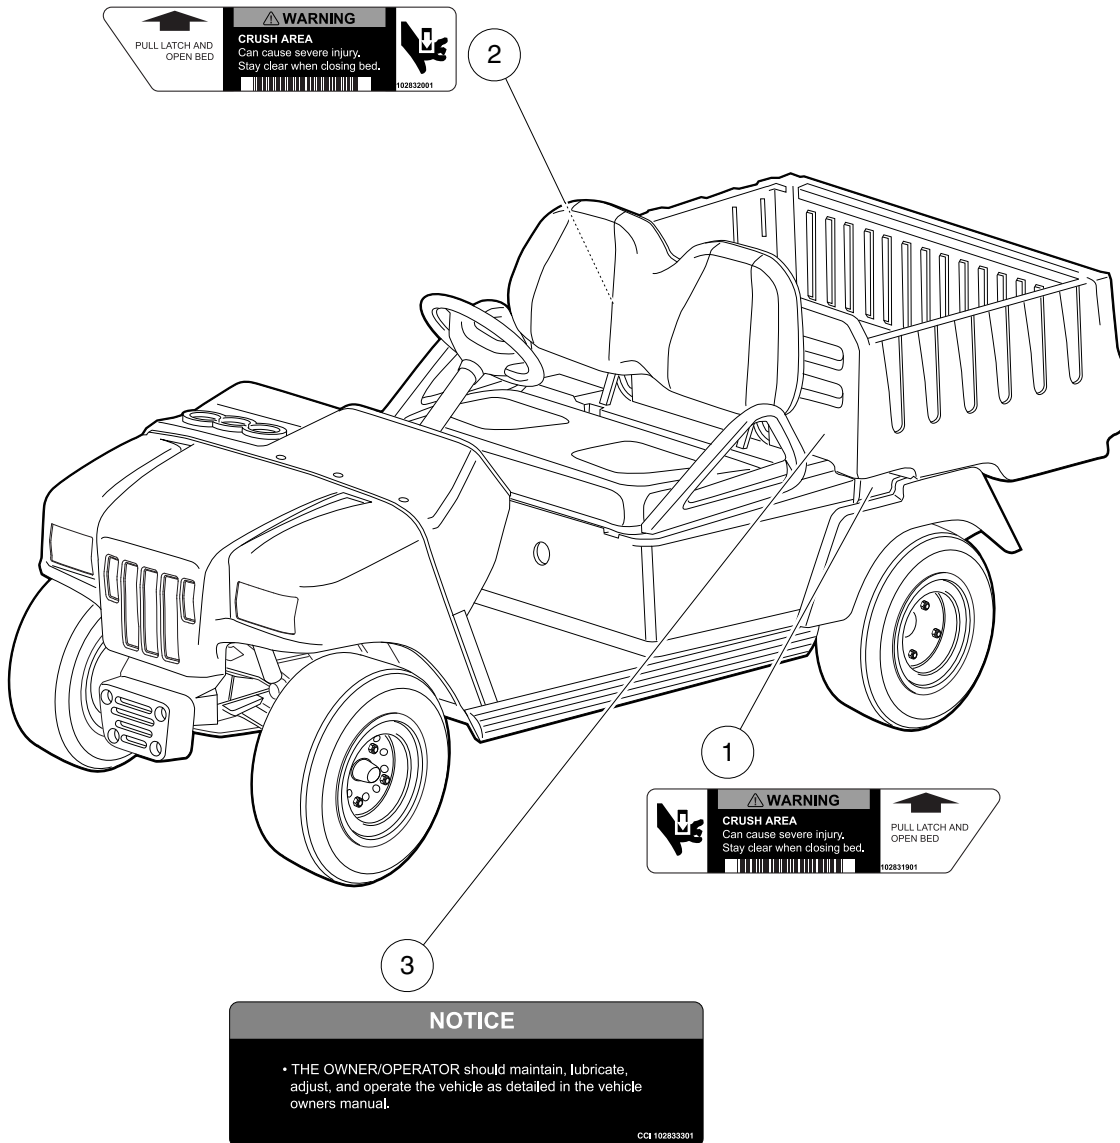

000225-002



SAFETY DECALS – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
1	<u>102831901</u>	1 2 3 4 Decal, Crush Warning, Driver-Side	1	
2	<u>102832001</u>	Decal, Crush Warning, Passenger-Side	1	
3	<u>102833301</u>	Decal, Maintenance	1	

3

G

  E

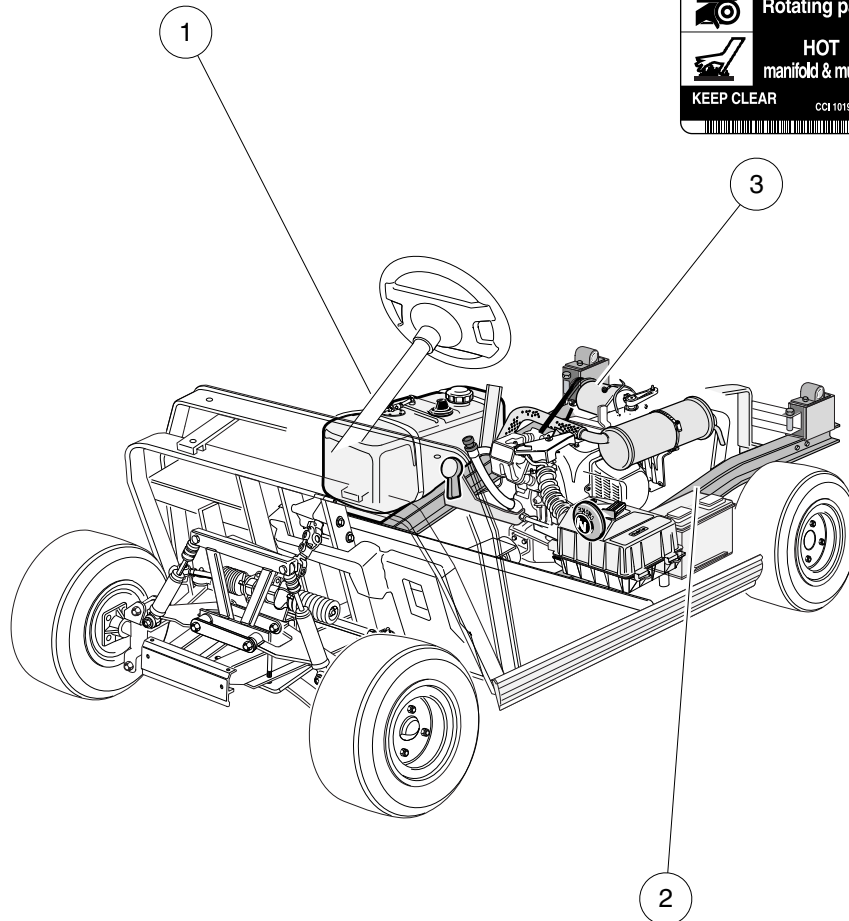

000226-001

SAFETY DECALS – GASOLINE VEHICLES, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>101547601</u>	Decal, Gasoline Explosion/Fire Warning	1
2	<u>101915201</u>	Decal, Frame Ground and Governor Warning	1
3	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	1

3

G

E

OPERATING INSTRUCTIONS

- Read owner's manual and dash-mounted safety warnings prior to driving.
- Study and understand controls.

TO START ENGINE

- Place shift lever in "N" – Neutral position.
- Press brake pedal.
- Turn key switch to "START" position and release.

TO OPERATE VEHICLE

- Turn wheels to desired direction and ensure path is clear.
- Engine must be at idle before moving shift lever.
- While vehicle is stopped, and engine is at idle, place Forward/Reverse switch in desired position:
F – Forward N – Neutral R – Reverse (Buzzer will sound)
- Park brake will release and vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and push brake pedal.

BEFORE LEAVING

- Press park brake pedal until it locks and holds vehicle.
- Place Forward/Reverse switch in NEUTRAL position.
- Turn key to "OFF" position and remove key when not in use.

102825601

 
WARNING

ROLLOVER OR FALLING OFF MAY CAUSE SERIOUS INJURY OR DEATH

- Before using vehicle, read operating instructions.
- Do not start vehicle until all occupants are seated.
- Operate from driver side only and not on public roads.
- Drive slowly in turns and straight up and down slopes.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Remain seated while moving.
- Hold on to seat handle while moving.
- Two (2) persons per seat maximum.
- Never stand in front of or behind vehicle.
- Do not leave children unattended on vehicle.
- Keep entire body inside vehicle while moving.

OFF ON
START

102825401

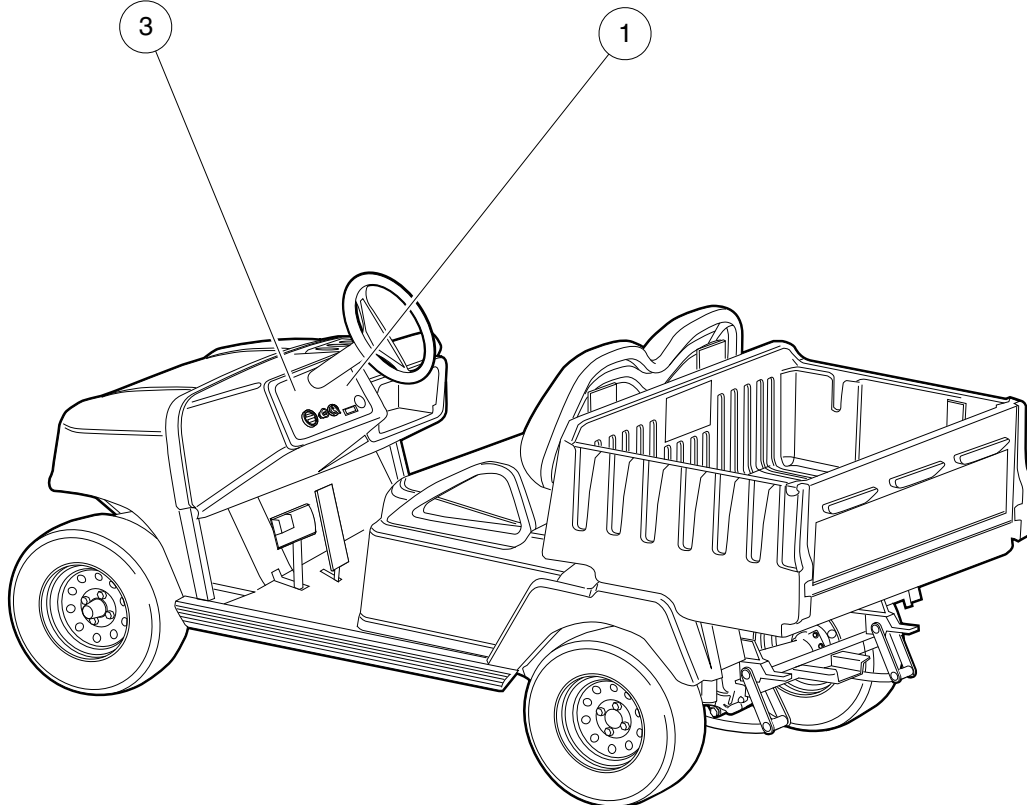

000227-002




SAFETY DECALS – GASOLINE VEHICLES, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102825401</u>	Decal, Warning, Instrument Panel	1
2	<u>102825402</u>	Decal, Warning, Instrument Panel	1
3	<u>102825601</u>	Decal, Operating Instructions, Instrument Panel	1
Note: Item 2 is for use on vehicles equipped with a 12-volt accessory outlet.			

3

G

   E

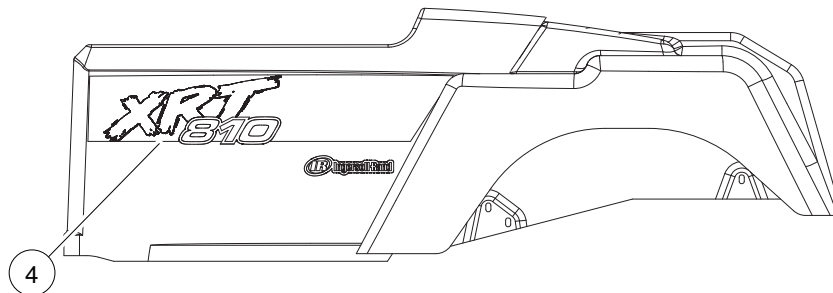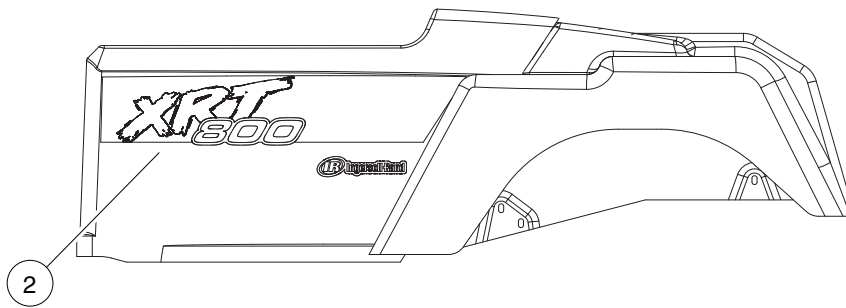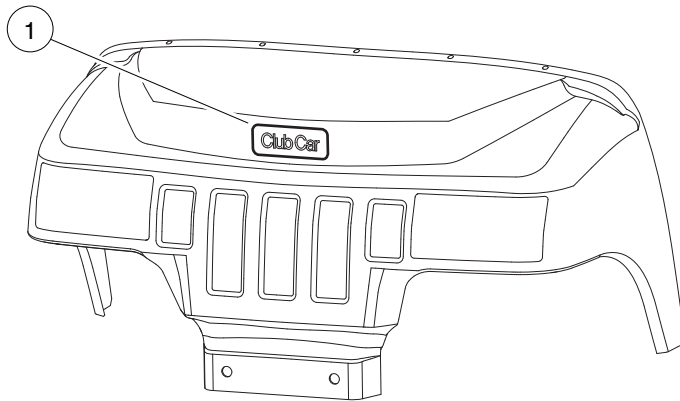

000300-002

LOGO DECALS – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>102278801</u>	Decal, Club Car	1	
2	<u>102850801</u>	Decal, 800 Drv	1	
3	<u>102850901</u>	Decal, 800 Pass	1	
4	<u>102851201</u>	Decal, 810 Drv	1	
5	<u>102851301</u>	Decal, 810 Pass	1	

NOTICE

Do not operate vehicle without this cover properly installed.
Do not direct water stream in this area; will cause damage to components.

CCI 101031501

**WARNING**

TOW


RUN

Place Tow/Run switch in TOW position before:

- Disconnecting or connecting batteries
- Towing
- Extended storage
- Servicing

**FAILURE TO HEED THIS
WARNING COULD RESULT
IN A BATTERY EXPLOSION**

 CCI 101008601

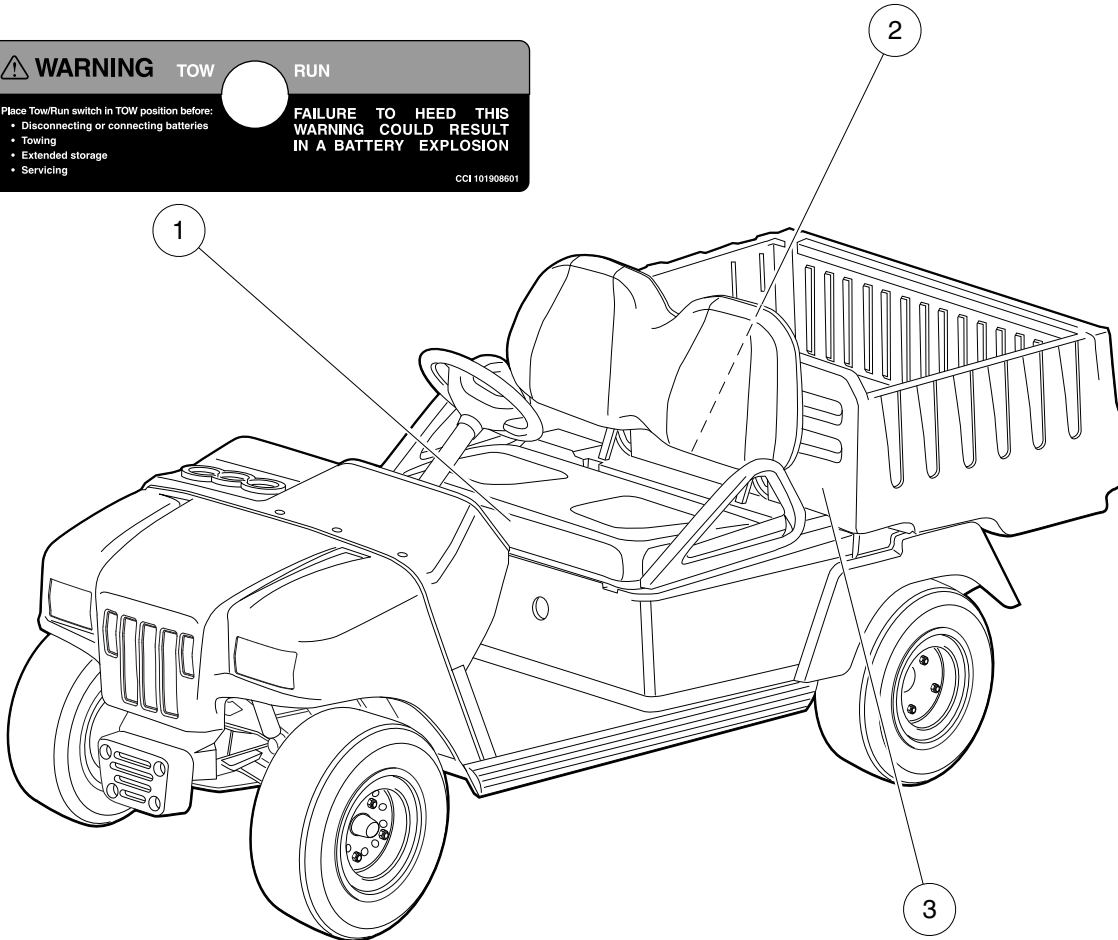**NOTICE**

• THE OWNER/OPERATOR should maintain, lubricate, adjust, and operate the vehicle as detailed in the vehicle owners manual.

CCI 102833301

000228-002



SAFETY DECALS – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
1	<u>101908601</u>	1 2 3 4 Decal, Tow/Run Switch Warning	1	
2	<u>101931501</u>	Decal, Component Cover	1	
3	<u>102833301</u>	Decal, Maintenance	1	

3

G

  E

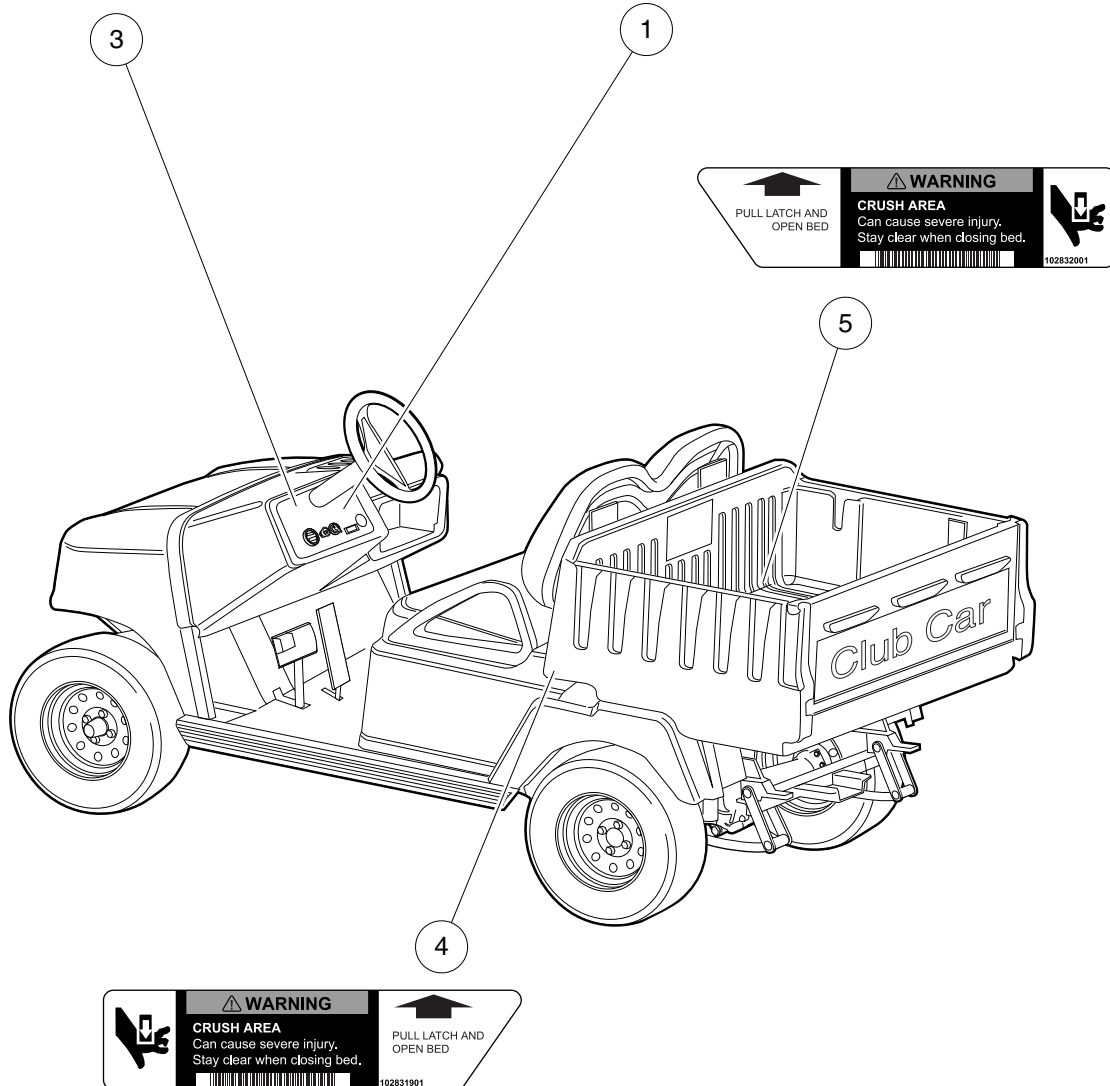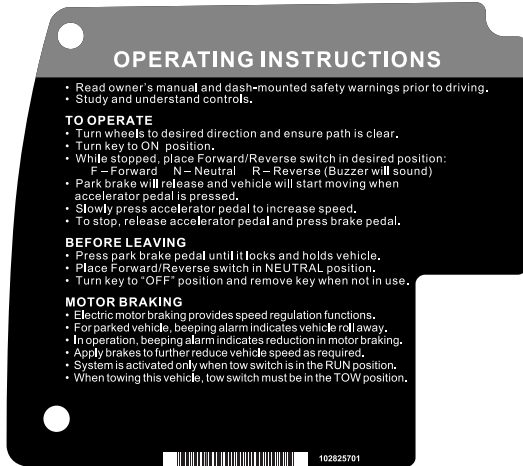

000229-002



SAFETY DECALS – ELECTRIC VEHICLES, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>102825501</u>	Decal, Warning, Instrument Panel	1	
2	<u>102825502</u>	Decal, Warning, Instrument Panel	1	
3	<u>102825701</u>	Decal, Operating Instructions, Instrument Panel	1	
4	<u>102831901</u>	Decal, Crush Warning, Driver-Side	1	
5	<u>102832001</u>	Decal, Crush Warning, Passenger-Side	1	
Note: Item 2 is for use on vehicles equipped with a 12-volt accessory outlet.				

3

G

  E

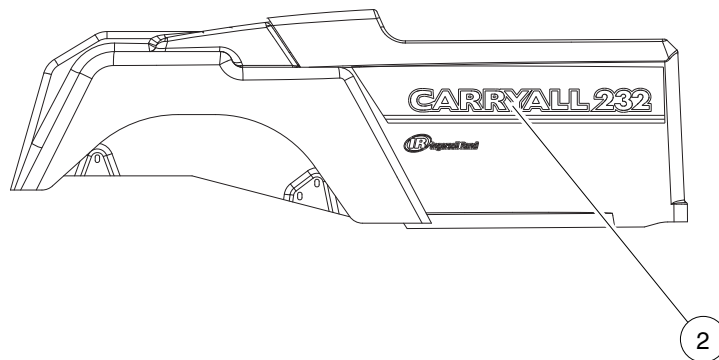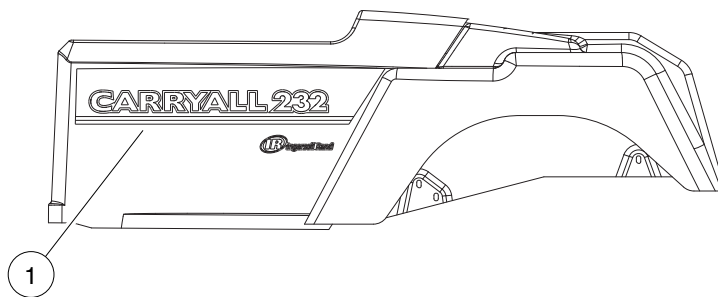

000299-003

LOGO DECALS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102278801</u>	Decal, Club Car	1
2	<u>102851001</u>	Decal, 800E, Drv	1
3	<u>102851101</u>	Decal, 800E, Pass	1
4	<u>102851401</u>	Decal, 810E, Drv	1
5	<u>102851501</u>	Decal, 810E, Pass	1

3

G

E

3

G

 
E

BRAKE SYSTEMS

4

G


E

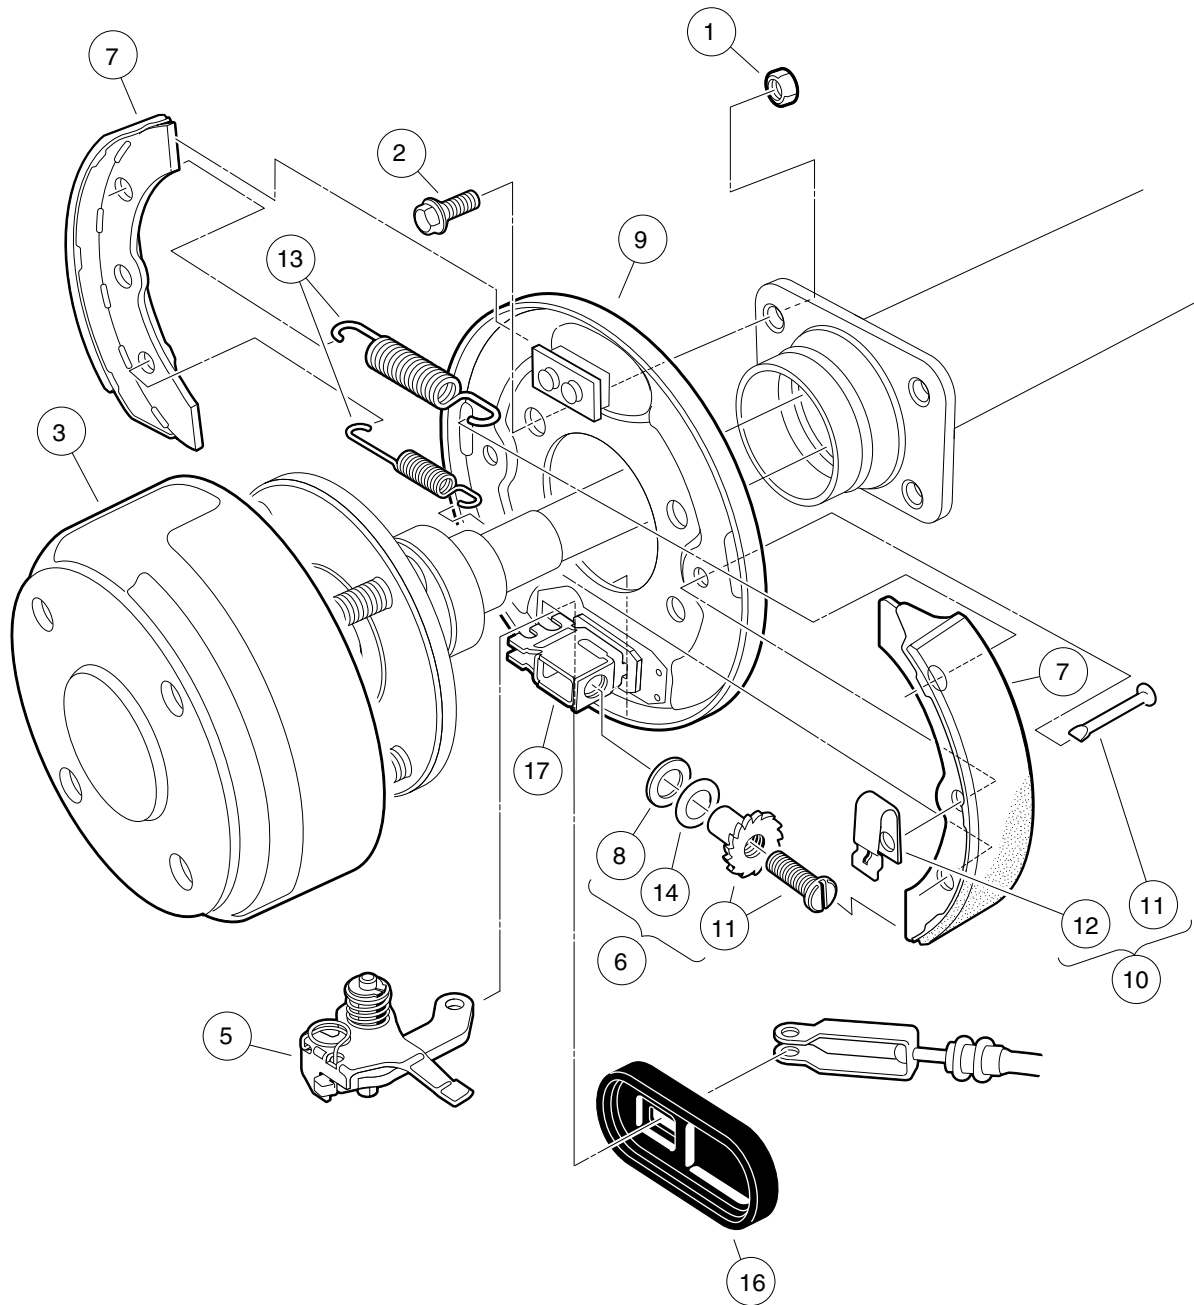4**G****E**

000186-001

REAR BRAKE ASSEMBLY, SELF-ADJUSTING – VEHICLE WITH 2-WHEEL BRAKES


ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	8	
2	<u>1014153</u>	Bolt, Brake Cluster Mounting	8	
3	<u>101791101</u>	Drum without Center Hole, Brake	2	
4	<u>103380201</u>	Asm, Brake Cluster, Mech, Drvr (includes items 5 through 17)	1	
5	<u>101815501</u>	Lever Assembly, Self-Adjusting Brake, Right (Passenger)	1	
6	<u>101816501</u>	Adj Mechanism, S.A. Brakes, Right (Passenger)	1	
7	<u>101823201</u>	Package, Brake Shoe, Self-Adjusting	1	
8	<u>101823801</u>	Plate, Washer, Brake, Self-Adjusting	1	
9	<u>103483101</u>	Back Plate, Rh	1	
10	<u>103483201</u>	Kit, Shoe Retainer (includes items 11 and 12)	1	
11	<u>1010953</u>	Pin	2	
12	<u>103483301</u>	Spring, Shoe, Clamp	2	
13	<u>103483401</u>	Package Brake Spring Self Adj (includes items 14 and 15)	1	
14	<u>101816401</u>	Brake Spring Self Adj	2	
15	<u>103483501</u>	Spring Brake	2	
16	<u>103483601</u>	Cover, Dust	1	
17	<u>103483701</u>	Brake Block	1	
18	<u>103380202</u>	Asm, Brake Cluster, Mech, Pass (includes items 19 through 31)	1	
19	<u>101815502</u>	Lever Assembly, Self-Adjusting Brake, Left	1	
20	<u>101816502</u>	Adjusting Mechanism, Self-Adjusting Brake, Left	1	
21	<u>101823201</u>	Package, Brake Shoe, Self-Adjusting	1	
22	<u>101823801</u>	Plate, Washer, Brake, Self-Adjusting	1	
23	<u>103483102</u>	Back Plate, Lh	1	
24	<u>103483201</u>	Kit, Shoe Retainer (includes items 25 and 26)	1	
25	<u>1010953</u>	Pin	2	
26	<u>103483301</u>	Spring, Shoe, Clamp	2	
27	<u>103483401</u>	Package Brake Spring Self Adj (includes items 28 and 29)	1	
28	<u>101816401</u>	Brake Spring Self Adj	2	
29	<u>103483501</u>	Spring Brake	2	
30	<u>103483601</u>	Cover, Dust	1	
31	<u>103483701</u>	Brake Block	1	
Note: Driver-side brake cluster not shown. Components have a similar appearance to passenger-side brake cluster components.				

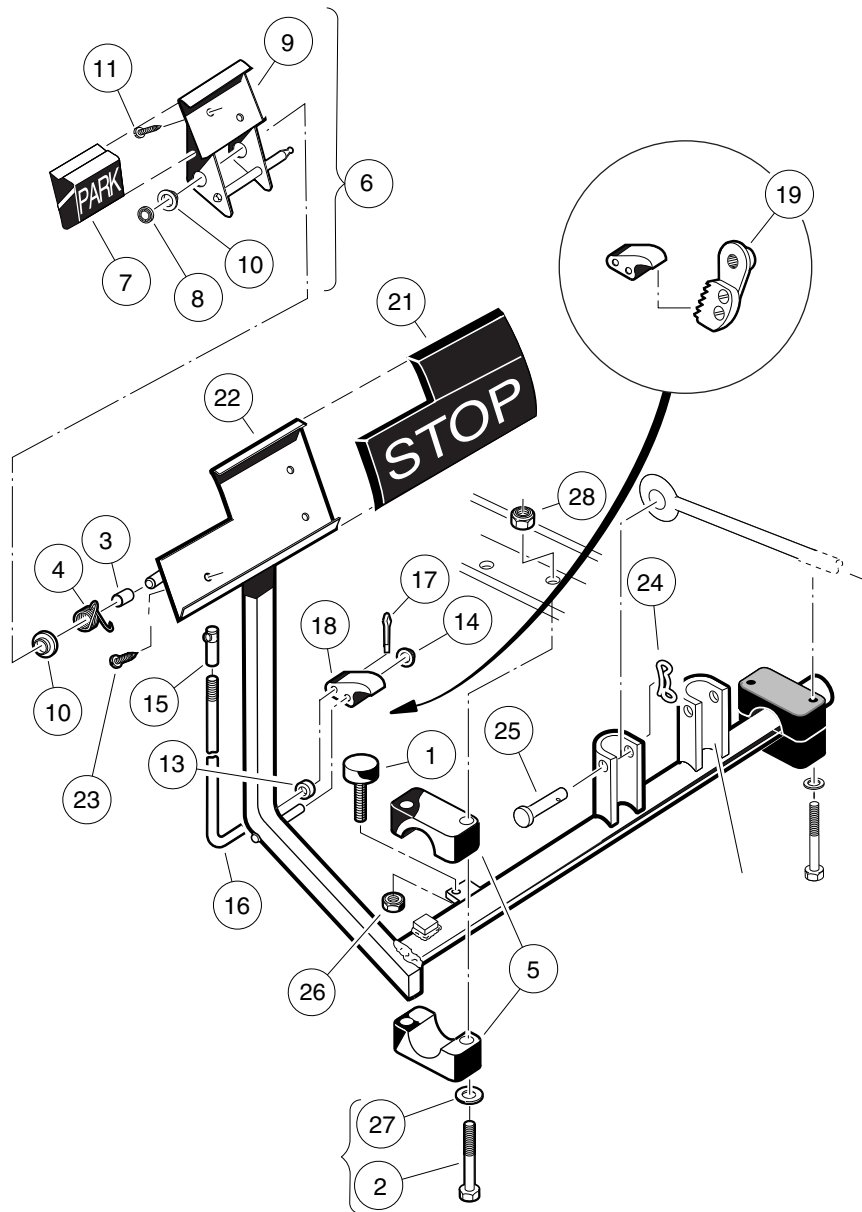 

000187-001

BRAKE PEDAL ASSEMBLY


ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>1010878</u>	Bumper, Rubber	1	E
2	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	4	
3	<u>1010927</u>	Hill Brake Spacer	1	
4	<u>1010933</u>	Spring, Hill Brake Torsion	1	
5	<u>1011402</u>	Package, Brake Mounting Block	1	
6	<u>1011418</u>	Kit, Hill Brake Pedal (includes items 7 through 11)	1	
7	<u>1013870</u>	Pad, Hill Brake	1	
8	<u>1013876</u>	Pushnut, 3/8	1	
9	N/A	Hill Brake Weld Assembly	1	
10	<u>1032</u>	Bushing, Nylon	2	
11	7716	Screw, #10-16 Type AB, Sheet Metal	2	
12	<u>101187702</u>	Kit, Hill Brake Latch (includes items 13 through 19)	1	
13	<u>1010805</u>	Sleeve, Hill Brake Rod	1	
14	<u>1010877</u>	Pushnut, 3/8	1	
15	1010932	Ball Joint, 1/4-28	1	
16	N/A	Rod, Hill Brake	1	
17	<u>1017029</u>	Pin, Cotter, 7/64 x 1/2 Stainless-Steel	1	
18	N/A	Pawl, Hill Brake	1	
19	101918501	Ratchet Assembly	1	
20	<u>101878201</u>	Brake Pedal Kit (includes items 21 through 23)	1	
21	<u>1013869</u>	Pad, Brake Pedal	1	
22	N/A	Weldment, Brake Pedal 4wb Std	1	
23	7716	Screw, #10-16 Type AB, Sheet Metal	3	
24	<u>102323101</u>	Pin, Bow Tie Locking	1	
25	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1	
26	<u>1028</u>	Nut, 1/4-20 Hex	1	
27	<u>1241</u>	Washer, 5/16 Type A Flat	4	
28	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4	

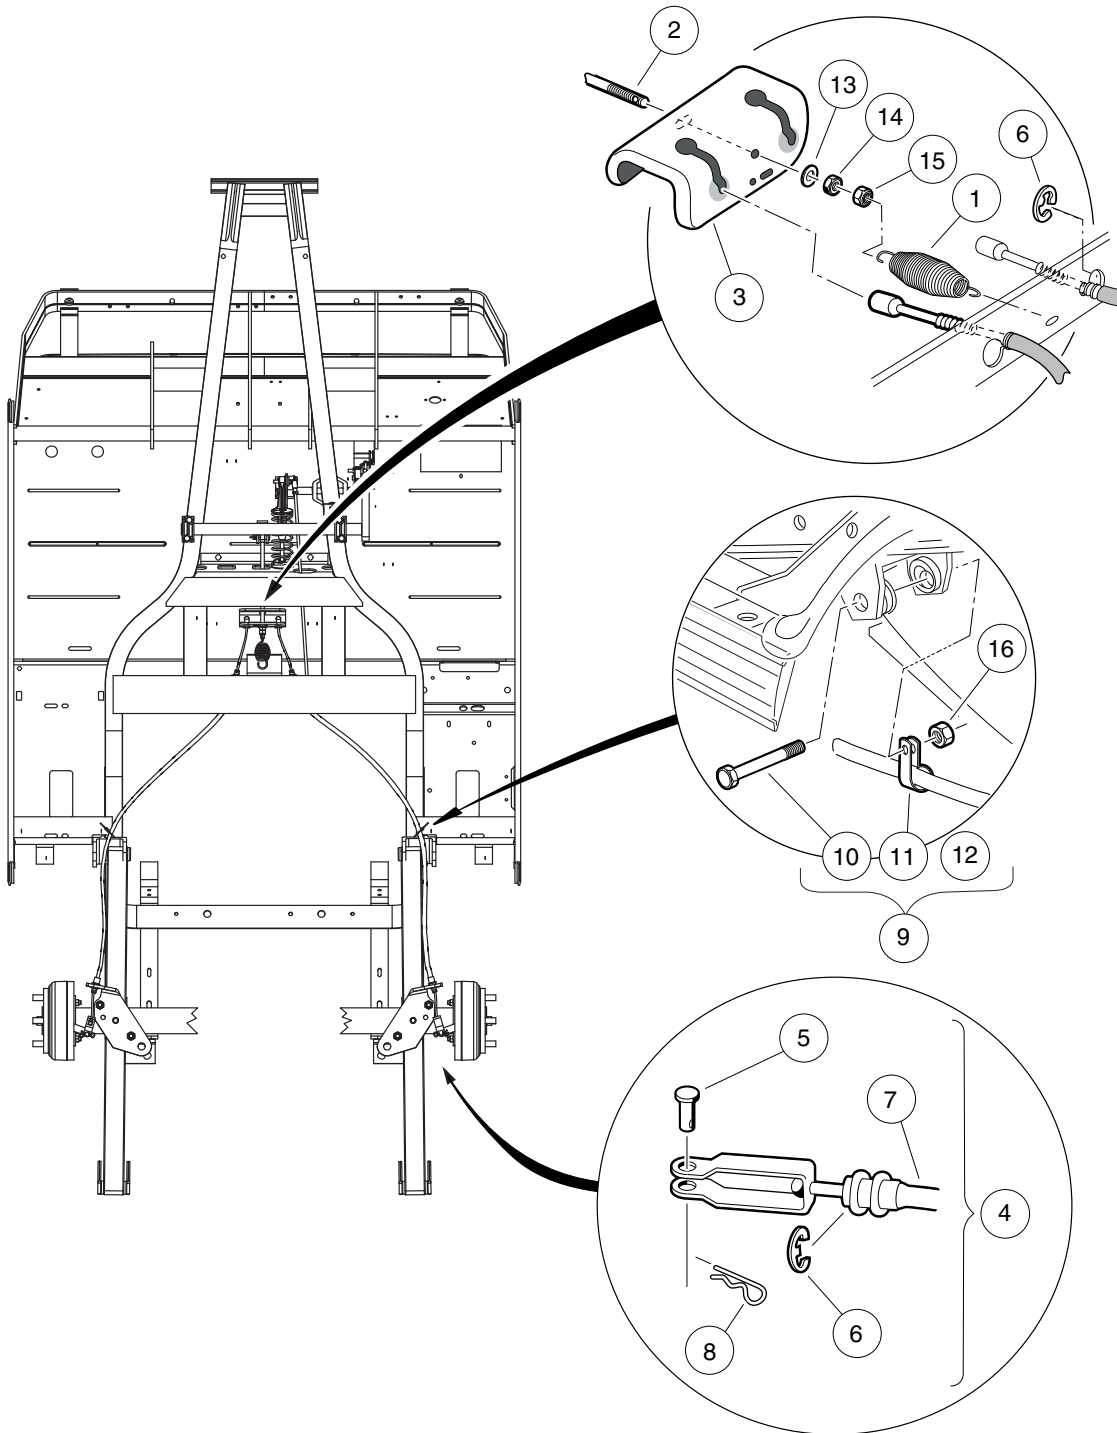 

000245-002

BRAKE CABLE, EQUALIZER, AND EQUALIZER ROD – VEHICLES WITH TWO-WHEEL BRAKES


ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1013531</u>	Spring, Brake Return	1	
2	<u>101953101</u>	Rod, Equalizer, 8.91"	1	
3	<u>101990801</u>	Equalizer Bracket	1	
4	<u>102022101</u>	Brake Cable Kit (includes items 5 through 8)	2	
5	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	1	
6	<u>1011779</u>	E-Clip, 1/2	2	
7	N/A	Cable, Brake, 41"	1	
8	<u>1035</u>	Cotter Pin, 3/32 x 1	1	
9	<u>103377301</u>	Kit, Field P-clamp, Brake Line (includes items 10 through 12)	1	
10	<u>102066201</u>	Screw, 3/8-16 X 3.50 Hex Cap	2	
11	<u>103377201</u>	P-clamp, Brake Line	2	
12	N/A	Instr Fd. P-clamp, Brake Line	1	
13	<u>1241</u>	Washer, 5/16 Type A Flat	5	
14	<u>1242</u>	Nut, 5/16-18 Hex	1	
15	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	5	
16	<u>8754</u>	Locknut, 3/8-16 Hex	2	

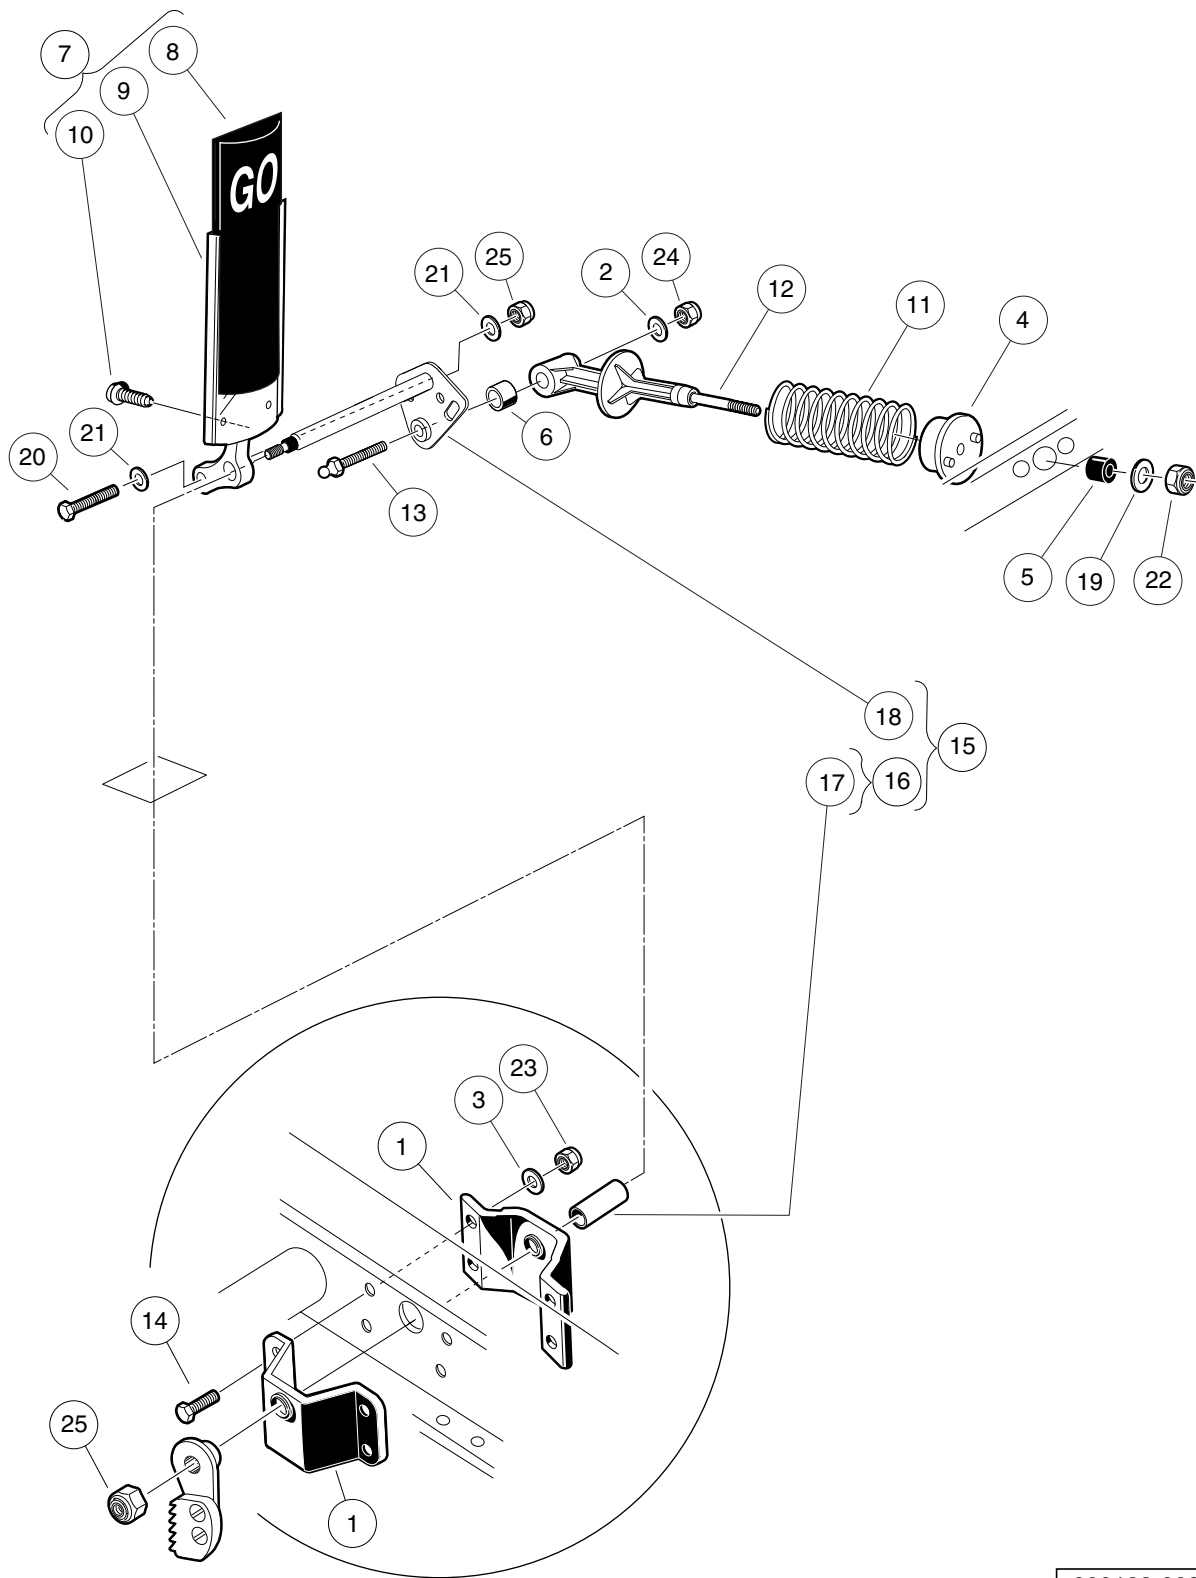 

000188-003

ACCELERATOR PEDAL – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2	
2	<u>1011931</u>	Washer, 1/4 Flat	1	
3	<u>1014007</u>	Washer, 1/4 Flat	4	
4	<u>1017378</u>	Cup, Spring	1	
5	<u>1017380</u>	Bumper, Spring Return	1	
6	<u>1017424</u>	Bearing, Pivot Support	1	
7	<u>1017696</u>	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1	
8	1013871	Pad, Accelerator Pedal	1	
9	N/A	Accelerator Pedal Weldment	1	
10	7716	Screw, #10-16 Type AB, Sheet Metal	4	
11	101796201	Spring, Accelerator Return	1	
12	<u>101817401</u>	Retainer, Spring	1	
13	101818801	Stud, 1/4-28 X 1.35 Ball	1	
14	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4	
15	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 16 through 18)	1	
16	<u>1011700</u>	Spacer Assembly (includes item 17)	1	
17	101919801	Spacer, Accelerator	1	
18	N/A	Pivot Rod Weldment	1	
19	<u>1241</u>	Washer, 5/16 Type A Flat	1	
20	<u>1624</u>	Screw, 3/8-16 X 1.50 Hex-Head Cap	1	
21	<u>334</u>	Washer, 3/8 Type A Flat	2	
22	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	
23	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4	
24	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1	
25	<u>8754</u>	Locknut, 3/8-16 Hex	2	

 


ACCELERATOR PEDAL ASSEMBLY – ELECTRIC VEHICLES WITH MCOR

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2	
2	<u>1011931</u>	Washer, 1/4 Flat	1	
3	<u>1014007</u>	Washer, 1/4 Flat	4	
4	<u>1017378</u>	Cup, Spring	1	
5	<u>1017380</u>	Bumper, Spring Return	1	
6	<u>1017424</u>	Bearing, Pivot Support	1	
7	<u>1017696</u>	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1	
8	1013871	Pad, Accelerator Pedal	1	
9	N/A	Accelerator Pedal Weldment	1	
10	7716	Screw, #10-16 Type AB, Sheet Metal	4	
11	101796201	Spring, Accelerator Return	1	
12	<u>101817401</u>	Retainer, Spring	1	
13	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4	
14	<u>101862001</u>	Screw, 1/4-20 X 1.500 Flange	1	
15	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 16 through 18)	1	
16	<u>1011700</u>	Spacer Assembly (includes item 17)	1	
17	101919801	Spacer, Accelerator	1	
18	N/A	Pivot Rod Weldment	1	
19	<u>1241</u>	Washer, 5/16 Type A Flat	1	
20	<u>1624</u>	Screw, 3/8-16 X 1.50 Hex-Head Cap	1	
21	<u>334</u>	Washer, 3/8 Type A Flat	2	
22	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	
23	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4	
24	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1	
25	<u>8754</u>	Locknut, 3/8-16 Hex	2	

4

G

 E

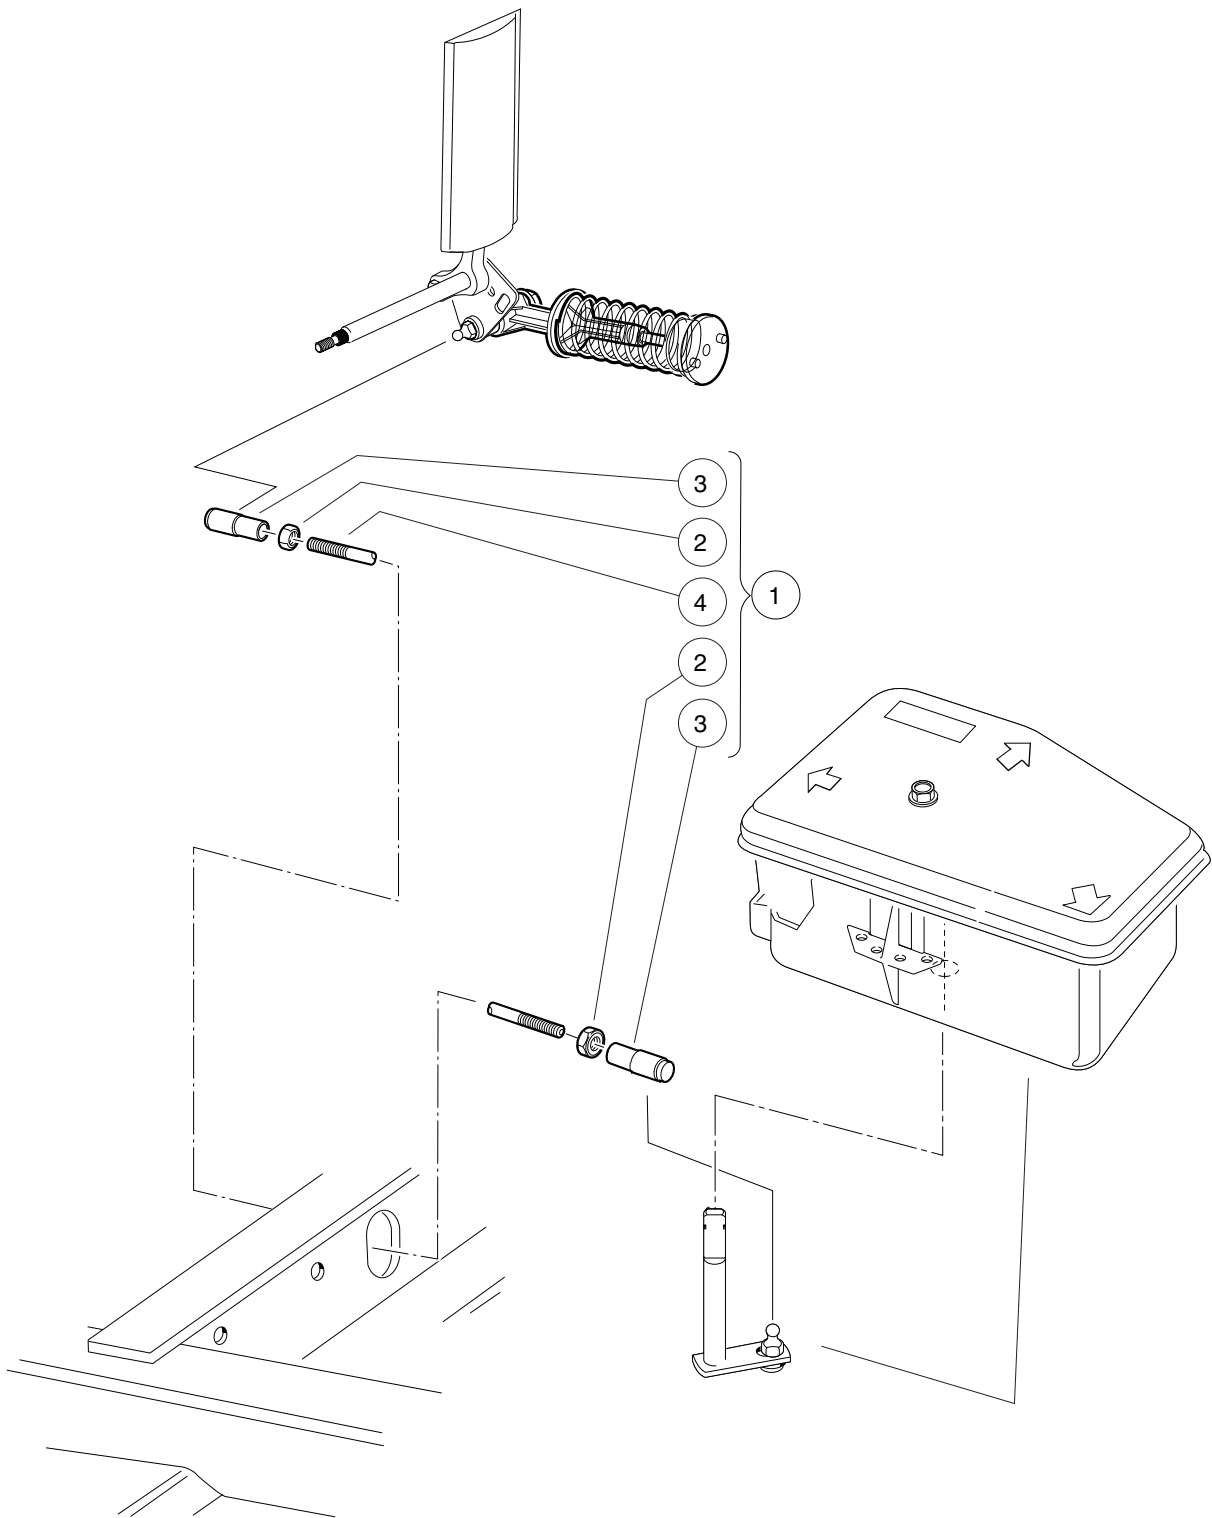

000362-001

ACCELERATOR ROD – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101912401	Rod, Accelerator (includes items 2 through 4)	1
2	<u>1011084</u>	Nut, 1/4-28 Hex Jam	2
3	<u>1011734</u>	Joint, Ball	2
4	N/A	Accelerator Rod	1

4

G

E

4
G
E

STEERING AND SUSPENSIONS

5

 
G

E

5

G

E

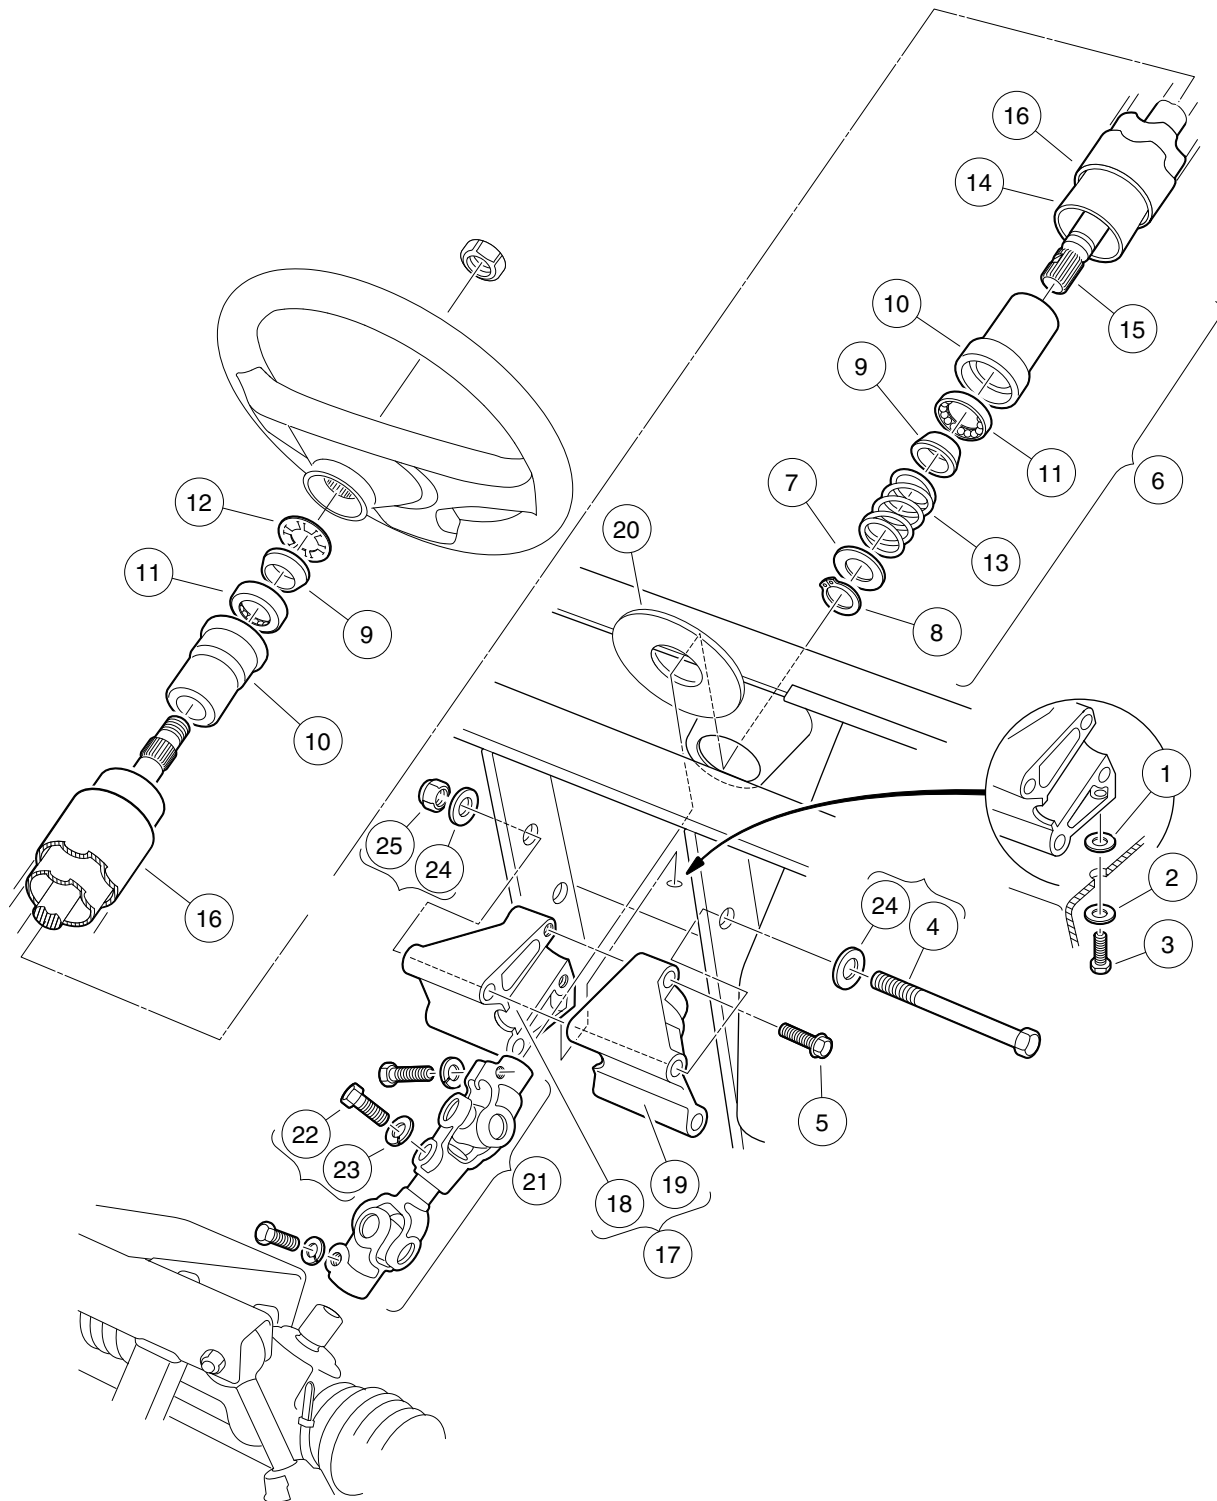

000247-001

STEERING COLUMN


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011578</u>	Washer, 5/16 Type B Flat	1
2	<u>1011697</u>	Washer, 5/16 Flat	1
3	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	1
4	<u>1016183</u>	Screw, 3/8-16 X 7.00 Hex Cap	2
5	<u>1016269</u>	Screw, 5/16-18 Thrd Forming	2
6	<u>1017313</u>	Steering Shaft Assembly (includes items 7 through 15)	1
7	<u>1012604</u>	Washer, 0.675 ID X 1.19 OD	1
8	<u>1012605</u>	Ring, 0.579 Internal Retaining	1
9	<u>1014125</u>	Wedge, Molded	2
10	<u>1014126</u>	Seat, Plastic Bearing	2
11	<u>1014213</u>	Bearing, Ball	2
12	<u>1014214</u>	Ring, Retaining	1
13	<u>1014217</u>	Spring, Steering Shaft	1
14	<u>1017314</u>	Column, Aluminum Steering	1
15	<u>1017315</u>	Shaft Steering Column	1
16	<u>1017317</u>	Tube Cover, Steering Column	1
17	101984801	Kit, Steering Column Mounting Bracket (includes items 18 and 19)	1
18	N/A	Bracket, RH Steering Column Mount	1
19	N/A	Bracket, LH Steering column mount	1
20	<u>102278001</u>	Boot, Steering Column Round	1
21	<u>103601601</u>	Shaft, Intermediate Steering (includes items 22 and 23)	1
22	<u>1017226</u>	Bolt, Hex-Head, 8mm X 1.25 - 30	3
23	<u>7174</u>	Lockwasher, 5/16 Split	3
24	<u>334</u>	Washer, 3/8 Type A Flat	4
25	<u>8754</u>	Locknut, 3/8-16 Hex	2

5
G
E

5

G

 E

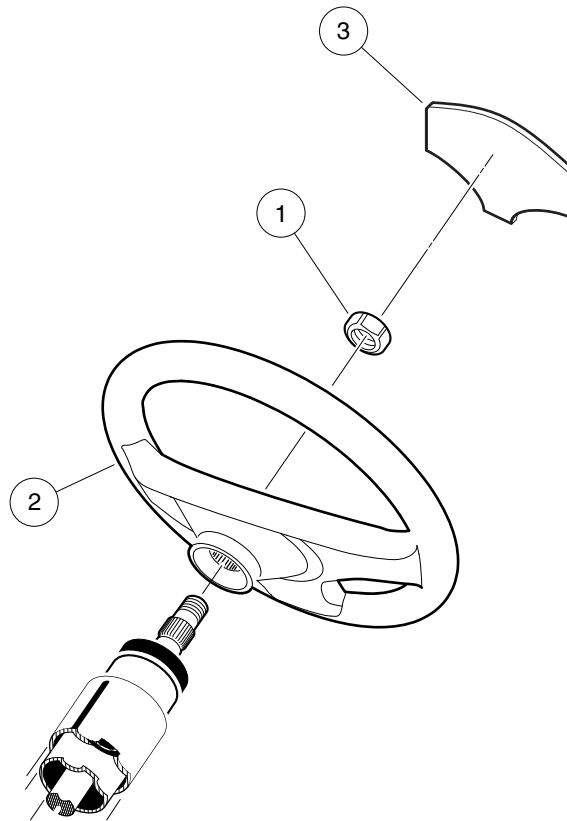

000246-001


STEERING WHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1017273</u>	Nut, 5/8-18 Nylon Insert Jam	1
2	<u>102796201</u>	Steering Wheel, Spline	1
3	<u>102822401</u>	Wheel Center	1

5

G

 
E

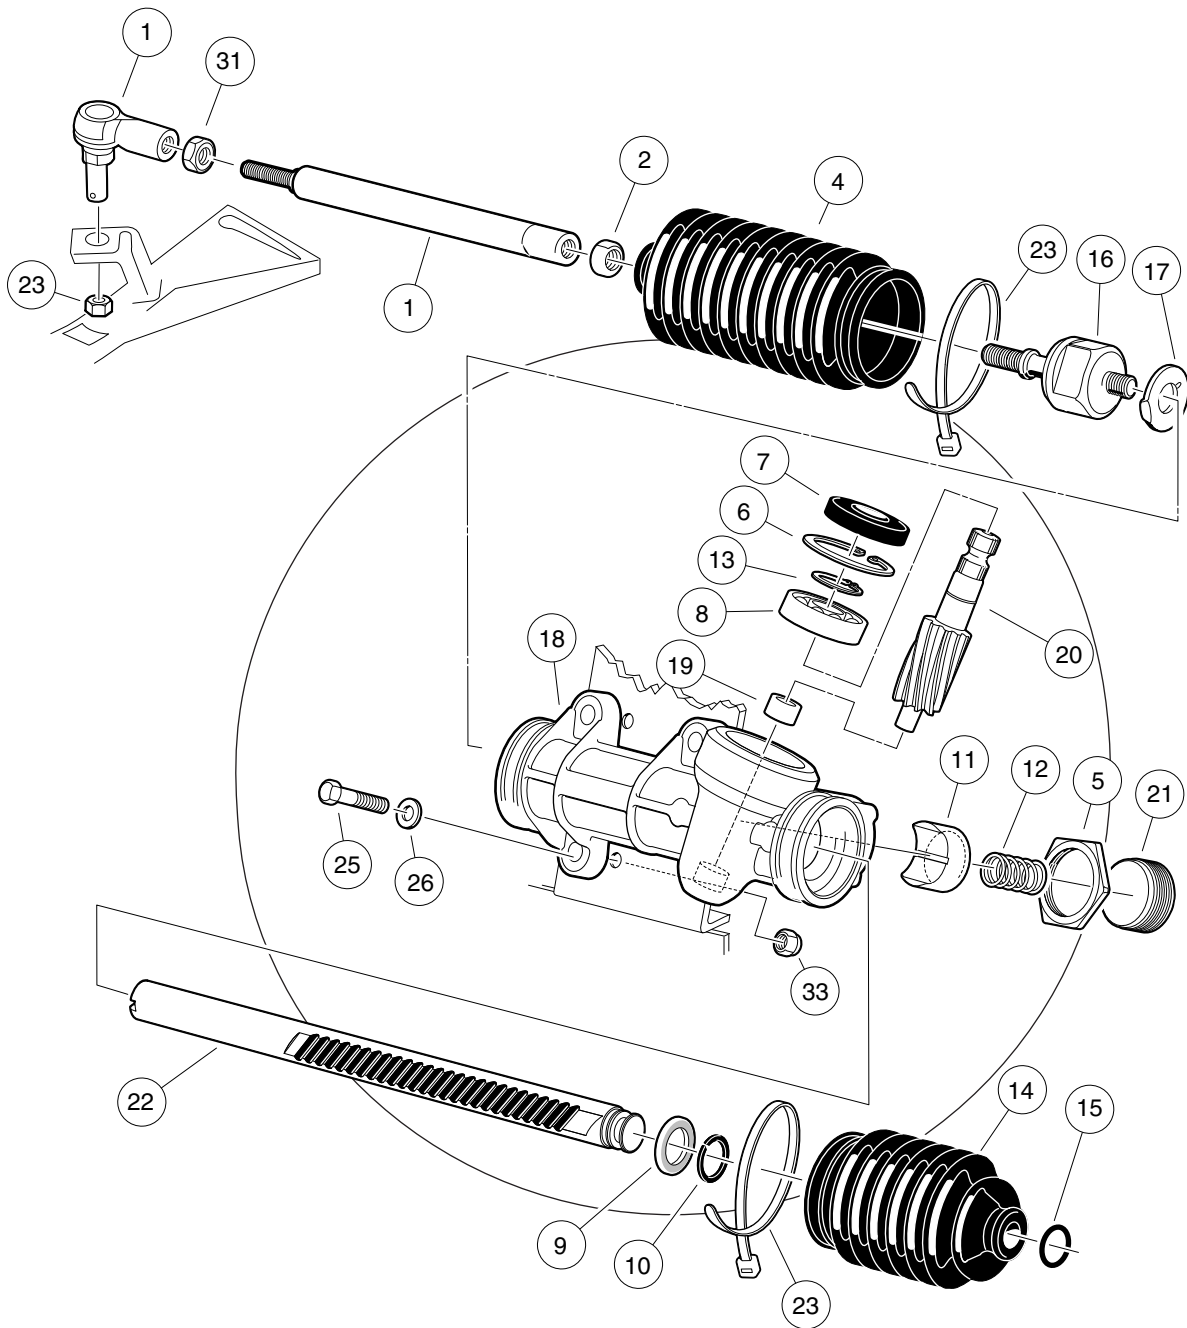5**G****E**

000189-001

STEERING GEAR ASSEMBLY


ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1012467</u>	Link, Rack and Pinion Drag	1	
2	<u>1013042</u>	Nut, 12mm Hex	1	
3	<u>101878302</u>	Steering Gear Assembly (without yoke) (includes items 4 through 23)	1	
4	<u>1013035</u>	Bellows, Long	1	
5	<u>1013044</u>	Rack Screw Locknut	1	
6	<u>1013051</u>	Snap Ring	1	
7	<u>1013052</u>	Seal, Steering Pinion Dust	1	
8	<u>101879401</u>	Bearing, Ball	1	
9	<u>101879501</u>	Stop Washer	1	
10	<u>101879601</u>	Stop Ring, C-Type	1	
11	<u>101879701</u>	Support Yoke	1	
12	<u>101879801</u>	Rack Guide Pressure Spring	1	
13	<u>101879901</u>	Ring, Stop, C-Type	1	
14	<u>101880001</u>	Bellows, Short	1	
15	<u>101880101</u>	Dust Seal Retaining Ring	1	
16	<u>101880201</u>	Inner Ball Joint Asm	1	
17	<u>101880301</u>	Washer, Tab	1	
18	N/A	Box, Steering Gear	1	
19	N/A	Bearing, Lower Pinion	1	
20	N/A	Pinion, Steering	1	
21	N/A	Screw, Rack Guide	1	
22	N/A	Rack, Steering	1	
23	<u>8990</u>	Tie Wrap, 8" Nylon	2	
24	<u>1035</u>	Cotter Pin, 3/32 x 1	1	
25	<u>1624</u>	Screw, 3/8-16 X 1.50 Hex-Head Cap	3	
26	<u>334</u>	Washer, 3/8 Type A Flat	3	
27	<u>7540</u>	Ball Joint, Left (includes items 28 through 31)	1	
28	<u>1011895</u>	Socket, LH Vertical	1	
29	<u>1011930</u>	Seal, Vertical Socket Dust	1	
30	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
31	<u>7602</u>	Nut, 3/8-24 UNF Hex	1	
32	<u>7555</u>	Nut, 1/2-20 Hex, Left-Hand Thread	1	
33	<u>8754</u>	Locknut, 3/8-16 Hex	3	

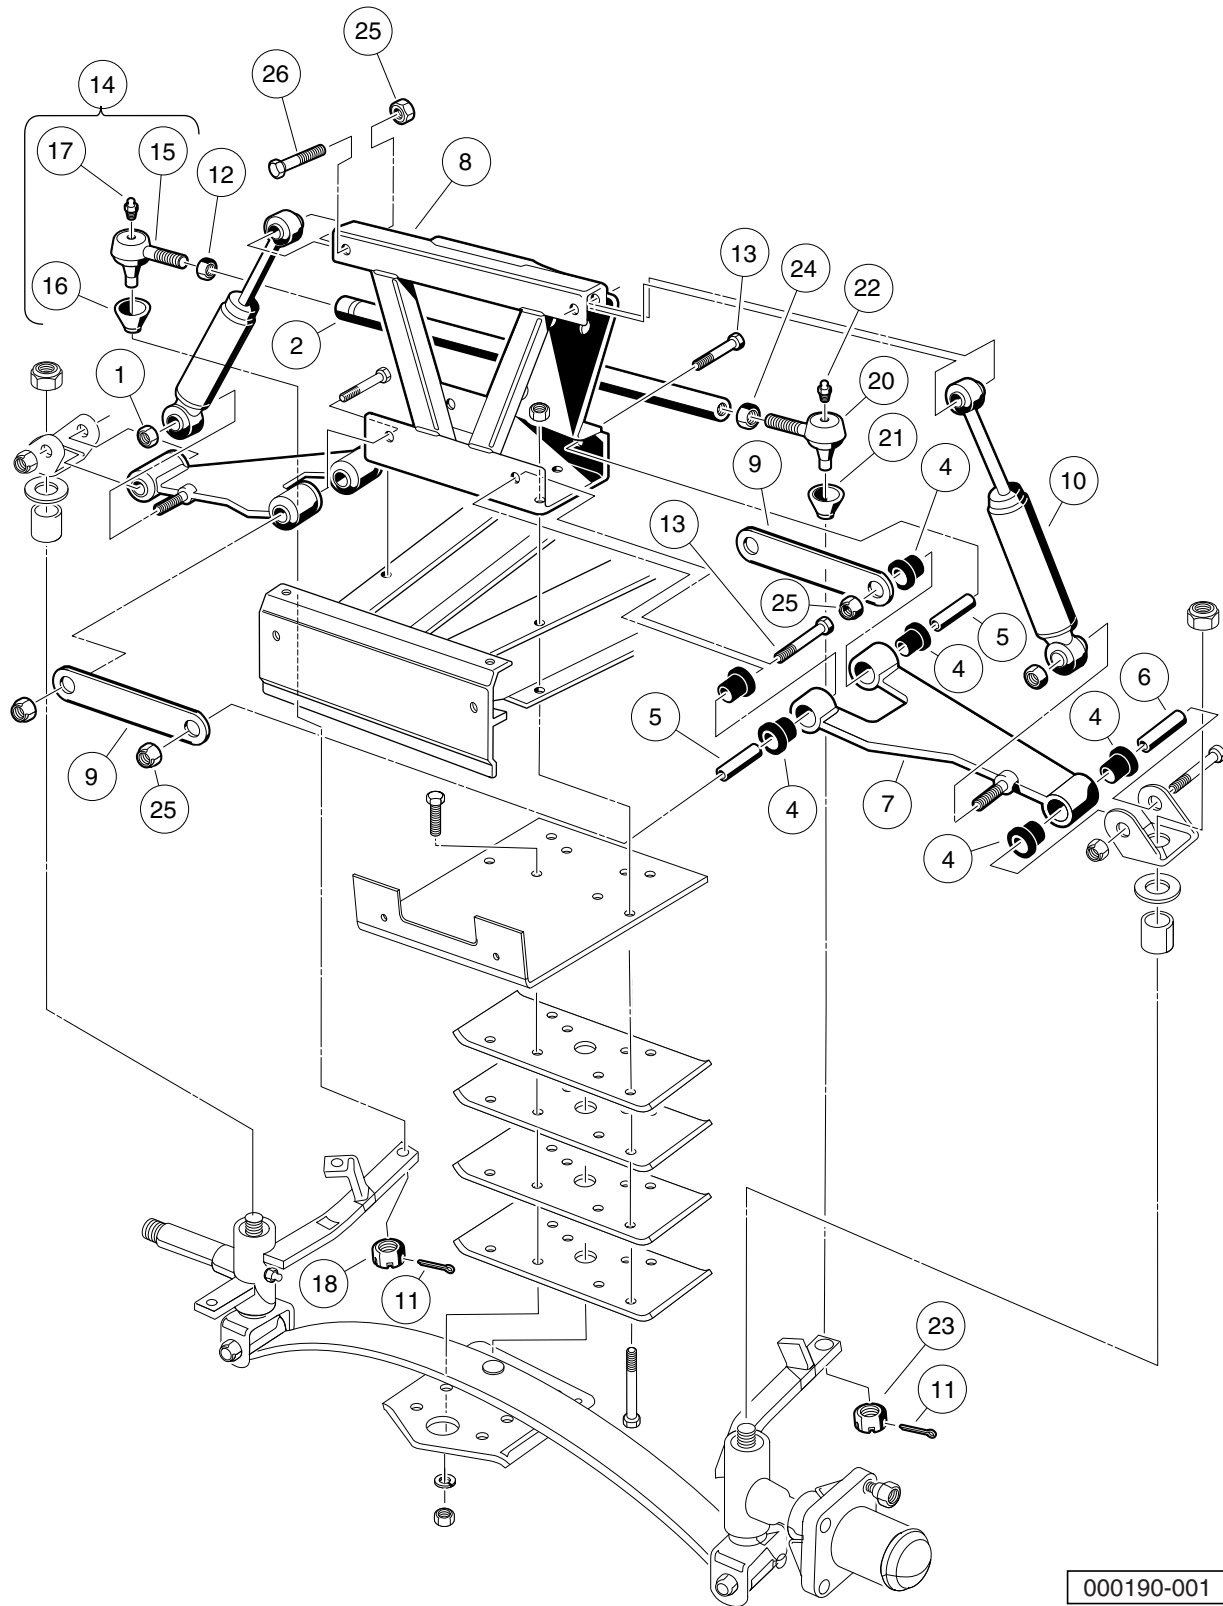 

000190-001

FRONT SUSPENSION, UPPER

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2	
2	<u>1010219</u>	Tie Rod	1	
3	<u>1016353</u>	Sub-Assembly, Delta A-Plate (includes items 4 through 7)	2	
4	<u>1016346</u>	Bushing, Urethane	6	
5	<u>1016349</u>	Sleeve, Delta Inner	2	
6	<u>1016350</u>	Sleeve, Delta Outer	1	
7	<u>1016351</u>	Delta A-Plate	1	
8	<u>1016385</u>	Delta Shock and Gear Support Assembly	1	
9	<u>1017266</u>	A-Plate Strap	2	
10	<u>103351001</u>	Shock Absorber, Front, Common	2	
11	<u>1035</u>	Cotter Pin, 3/32 x 1	2	
12	<u>1308</u>	Nut, 1/2-20 Hex	1	
13	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4	
14	<u>7539</u>	Ball Joint, Right-Hand (includes items 15 through 18)	1	
15	1011893	Socket, RH Vertical	1	
16	<u>1011930</u>	Seal, Vertical Socket Dust	1	
17	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
18	7602	Nut, 3/8-24 UNF Hex	1	
19	<u>7540</u>	Ball Joint, Left (includes items 20 through 23)	1	
20	1011895	Socket, LH Vertical	1	
21	<u>1011930</u>	Seal, Vertical Socket Dust	1	
22	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
23	7602	Nut, 3/8-24 UNF Hex	1	
24	<u>7555</u>	Nut, 1/2-20 Hex, Left-Hand Thread	1	
25	<u>8754</u>	Locknut, 3/8-16 Hex	10	
26	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	2	

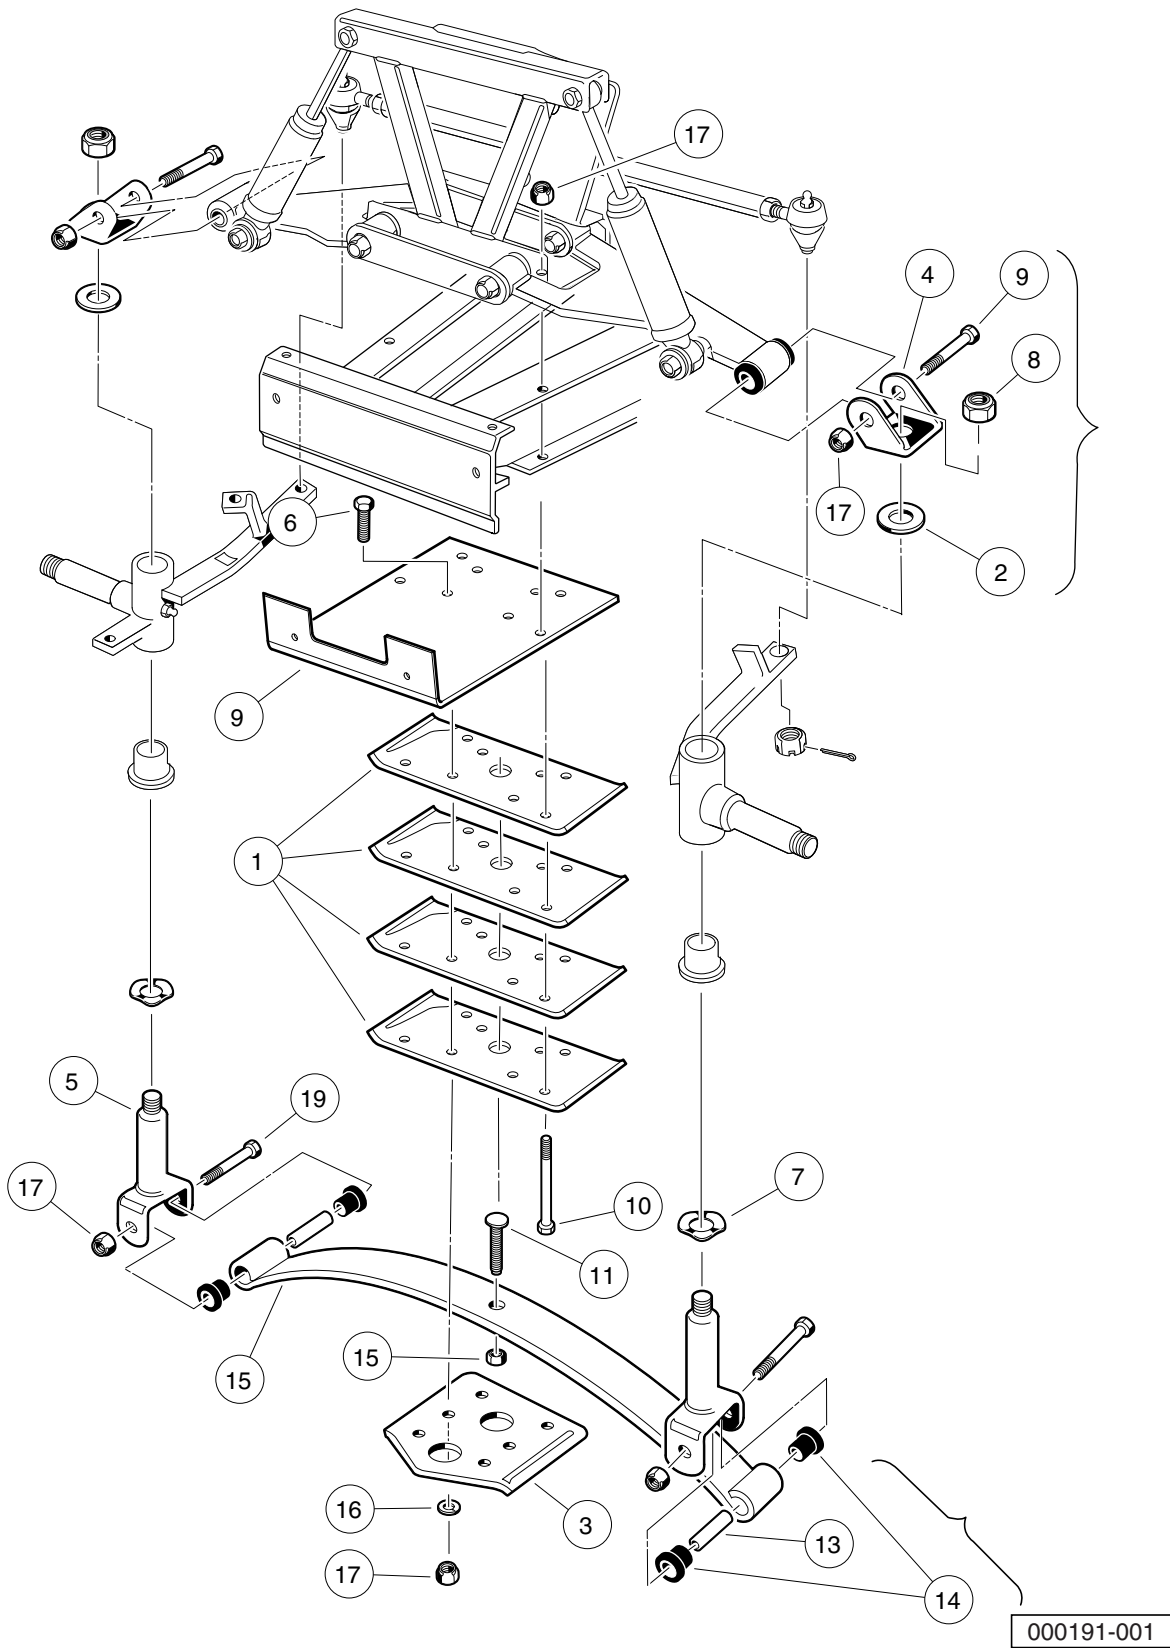 5**G****E**

FRONT SUSPENSION, LOWER


ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1010124</u>	Plate, Spring Mount	4	
2	<u>1010150</u>	Bearing, Thrust	2	
3	<u>1014276</u>	Plate, Front Spring Retainer	1	
4	<u>1016384</u>	Clevis, Delta Upper	2	
5	<u>1016386</u>	King Pin Assembly	2	
6	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	6	
7	<u>1016389</u>	Washer, 1.125 Od Wave	2	
8	<u>101903101</u>	Locknut, 1/2-20 Nylon Insert	2	
9	<u>102830401</u>	Support, Brush Guard	1	
10	<u>102913601</u>	Screw, 3/8-16 X 5.50 Hx Hd Cap	4	
11	<u>103507001</u>	Eccentric Bolt Common	1	
12	N/A	Spring Asm, Front, 1 Leaf (includes items 13 through 15)	1	
13	<u>1012303</u>	Bushings, Steel	2	
14	<u>1015583</u>	Bushings, Urethane	4	
15	N/A	Spring, Front, 1 Leaf	1	
16	<u>357</u>	Lockwasher, 3/8 Split	4	
17	<u>706</u>	Nut, Hex 3/8-16	1	
18	<u>8754</u>	Locknut, 3/8-16 Hex	8	
19	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2	

5


G

E

 
PASSENGER SIDE

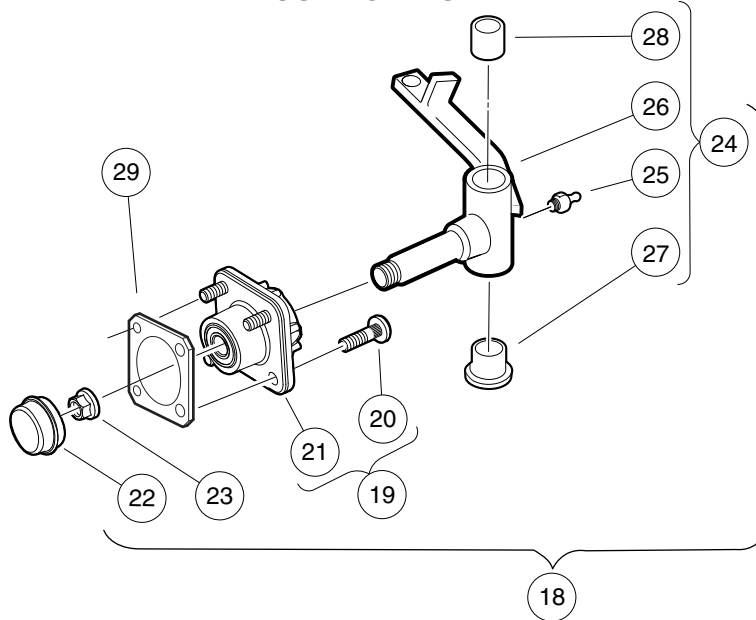

DRIVER SIDE

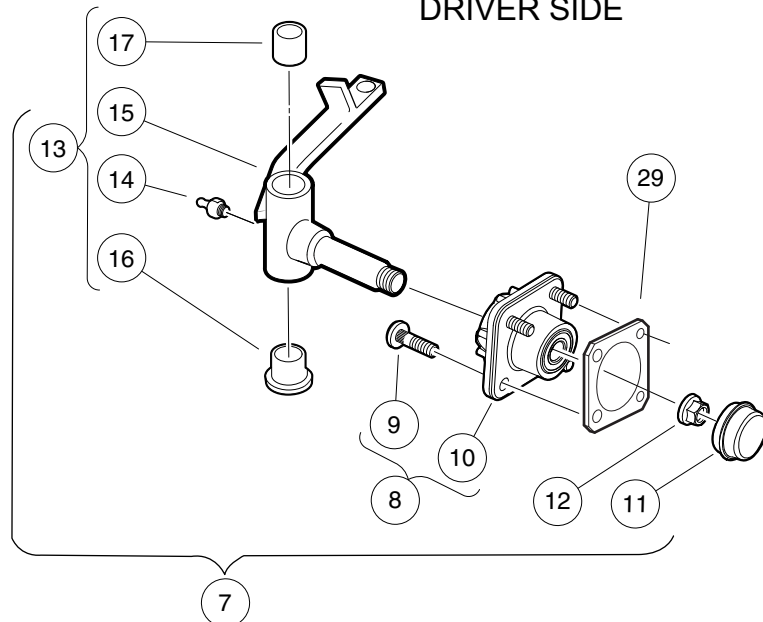 

 
REPLACEMENT HUB
FOR DRIVER OR
PASSENGER SIDE

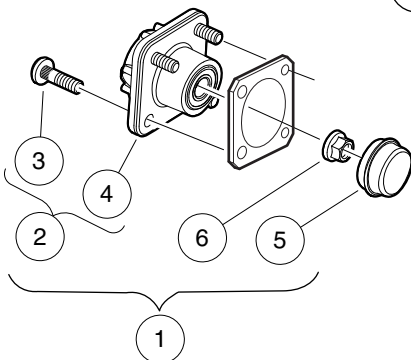

000301-001

FRONT SPINDLES AND HUBS – EARLIER STYLE



ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	N/A	Replacement Kit, Front Hub (includes items 2 through 4)	2	
2	<u>102353201</u>	Cap, Front Hub	1	
3	<u>102353301</u>	Hex Nut, Locking Flange, M14x2	1	
4	N/A	Asm, Front Hub, Bb, Long Stud (includes items 5 through 8)	1	
5	N/A	Bearing, Ball, 6204	2	
6	N/A	Spacer, Bearing, Front Hub, Pm	1	
7	<u>103477901</u>	Lug Stud, 1/2-20 Unf, 4037	4	
8	N/A	Front Hub, Ball Brg, Long Stud	1	
9	N/A	Asm, Front Hub And Spindle, Left-Hand (includes items 10 through 15)	1	
10	102352801	Front Hub Assembly, Ball Bearing (includes items 11 and 12)	1	
11	<u>102353401</u>	Lug Stud, 1/2-20 UNF, 4037 Stl	4	
12	N/A	Hub, Front	1	
13	<u>102353201</u>	Cap, Front Hub	1	
14	<u>102353301</u>	Hex Nut, Locking Flange, M14x2	1	
15	<u>102354203</u>	Assembly, Spindle, Left-Hand (includes items 16 through 19)	1	
16	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
17	N/A	Sub-Assembly, Spindle, Left-Hand	1	
18	<u>7048</u>	Bushing, Flanged Bronze	1	
19	<u>8067</u>	Bushing, Bronze Spindle	1	
20	N/A	Asm, Front Hub And Spindle, Right-Hand (includes items 21 through 26)	1	
21	102352801	Front Hub Assembly, Ball Bearing (includes items 22 and 23)	1	
22	<u>102353401</u>	Lug Stud, 1/2-20 UNF, 4037 Stl	4	
23	N/A	Hub, Front	1	
24	<u>102353201</u>	Cap, Front Hub	1	
25	<u>102353301</u>	Hex Nut, Locking Flange, M14x2	1	
26	<u>102354103</u>	Assembly, Spindle, Right-Hand (includes items 27 through 30)	1	
27	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
28	N/A	Sub-Assembly, Spindle, Right-Hand	1	
29	<u>7048</u>	Bushing, Flanged Bronze	1	
30	<u>8067</u>	Bushing, Bronze Spindle	1	
31	<u>AM1209101</u>	Spacer, Wheel	2	

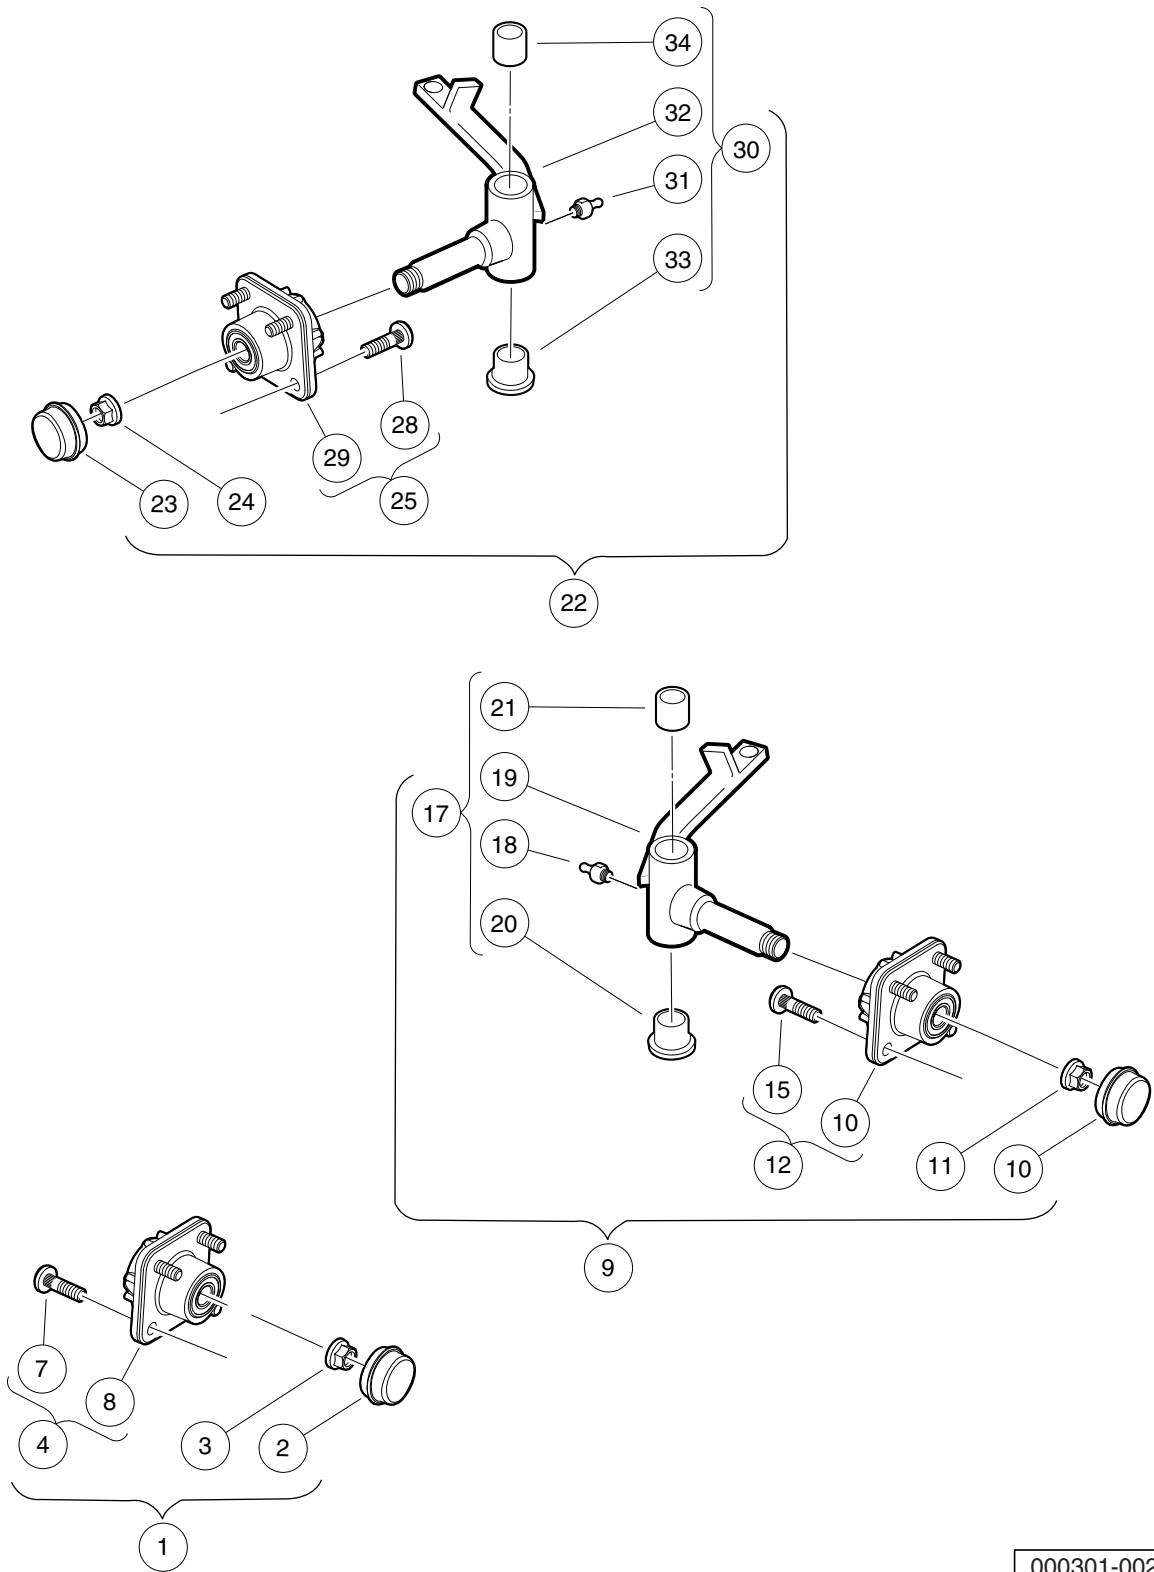 

000301-002

FRONT SPINDLES AND HUBS – LATER STYLE

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	N/A	Replacement Kit, Front Hub (includes items 2 through 4)	2	
2	<u>102353201</u>	Cap, Front Hub	1	
3	<u>102353301</u>	Hex Nut, Locking Flange, M14x2	1	
4	N/A	Asm, Front Hub, Bb, Long Stud (includes items 5 through 8)	1	
5	N/A	Bearing, Ball, 6204	2	
6	N/A	Spacer, Bearing, Front Hub, Pm	1	
7	<u>103477901</u>	Lug Stud, 1/2-20 Unf, 4037	4	
8	N/A	Front Hub, Ball Brg, Long Stud	1	
9	N/A	Asm, Hub And Spindle, Left-Hand Ext (includes items 10 through 15)	1	
10	102352801	Front Hub Assembly, Ball Bearing (includes items 11 and 12)	1	
11	<u>102353401</u>	Lug Stud, 1/2-20 UNF, 4037 Stl	4	
12	N/A	Hub, Front	1	
13	<u>102353201</u>	Cap, Front Hub	1	
14	<u>102353301</u>	Hex Nut, Locking Flange, M14x2	1	
15	<u>102354204</u>	Asm, Spindle, LH, Ext (includes items 16 through 19)	1	
16	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
17	N/A	Subasm, Spindle, LH, Ext	1	
18	<u>7048</u>	Bushing, Flanged Bronze	1	
19	<u>8067</u>	Bushing, Bronze Spindle	1	
20	N/A	Asm, Hub And Spindle, Right-Hand Ext (includes items 21 through 26)	1	
21	102352801	Front Hub Assembly, Ball Bearing (includes items 22 and 23)	1	
22	<u>102353401</u>	Lug Stud, 1/2-20 UNF, 4037 Stl	4	
23	N/A	Hub, Front	1	
24	<u>102353201</u>	Cap, Front Hub	1	
25	<u>102353301</u>	Hex Nut, Locking Flange, M14x2	1	
26	<u>102354104</u>	Asm, Spindle, RH, Ext (includes items 27 through 30)	1	
27	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
28	N/A	Subasm, Spindle, RH, Ext	1	
29	<u>7048</u>	Bushing, Flanged Bronze	1	
30	<u>8067</u>	Bushing, Bronze Spindle	1	

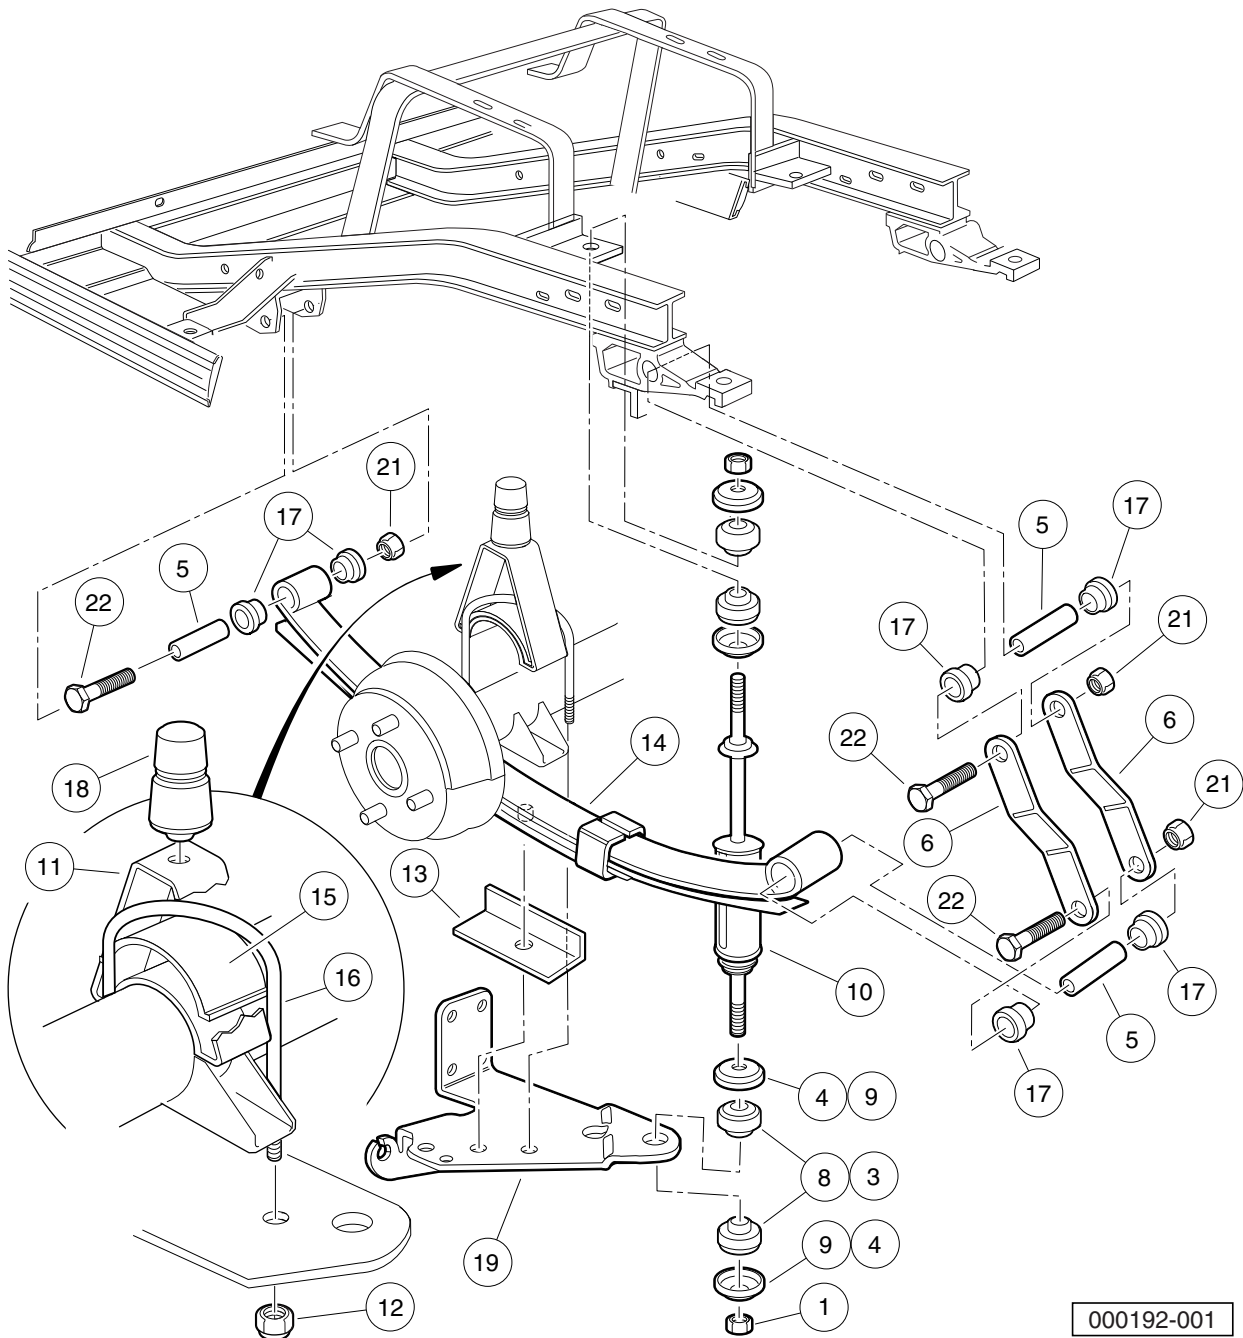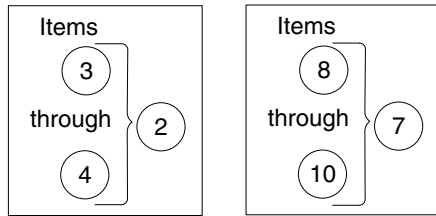  5**G****E**

000192-001

REAR SUSPENSION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010145</u>	Nut, 3/8-24 Hex	4
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4
3	<u>1010142</u>	Cushion, Shock Absorber	2
4	<u>1010144</u>	Retainer, Shock Absorber Cushion	2
5	<u>1012303</u>	Bushing, Steel	6
6	<u>1012304</u>	Shackle, Rear Spring	4
7	<u>1013164</u>	Shock Absorber Kit (includes items 8 through 10)	1
8	<u>1010142</u>	Cushion, Shock Absorber	8
9	<u>1010144</u>	Retainer, Shock Absorber Cushion	8
10	<u>102588501</u>	Shock Absorber Rear Prv Spd	2
11	<u>101454902</u>	Bumper Mount, Angled	2
12	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4
13	<u>1014573</u>	Spring Retainer	2
14	<u>1014675</u>	Rear Leaf Spring	2
15	<u>1014901</u>	Spacer, Overload Bumper	2
16	<u>1014902</u>	U-Bolt	2
17	<u>1015583</u>	Bushing, Urethane	12
18	<u>1017235</u>	Bumper, Jounce	2
19	<u>101926501</u>	Bracket, Left-Hand	1
20	<u>101929401</u>	Bracket, Right	1
21	<u>8754</u>	Locknut, 3/8-16 Hex	6
22	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	6

5

G

E

5

 
G

E


ELECTRICAL SYSTEM – GASOLINE VEHICLES

6

G

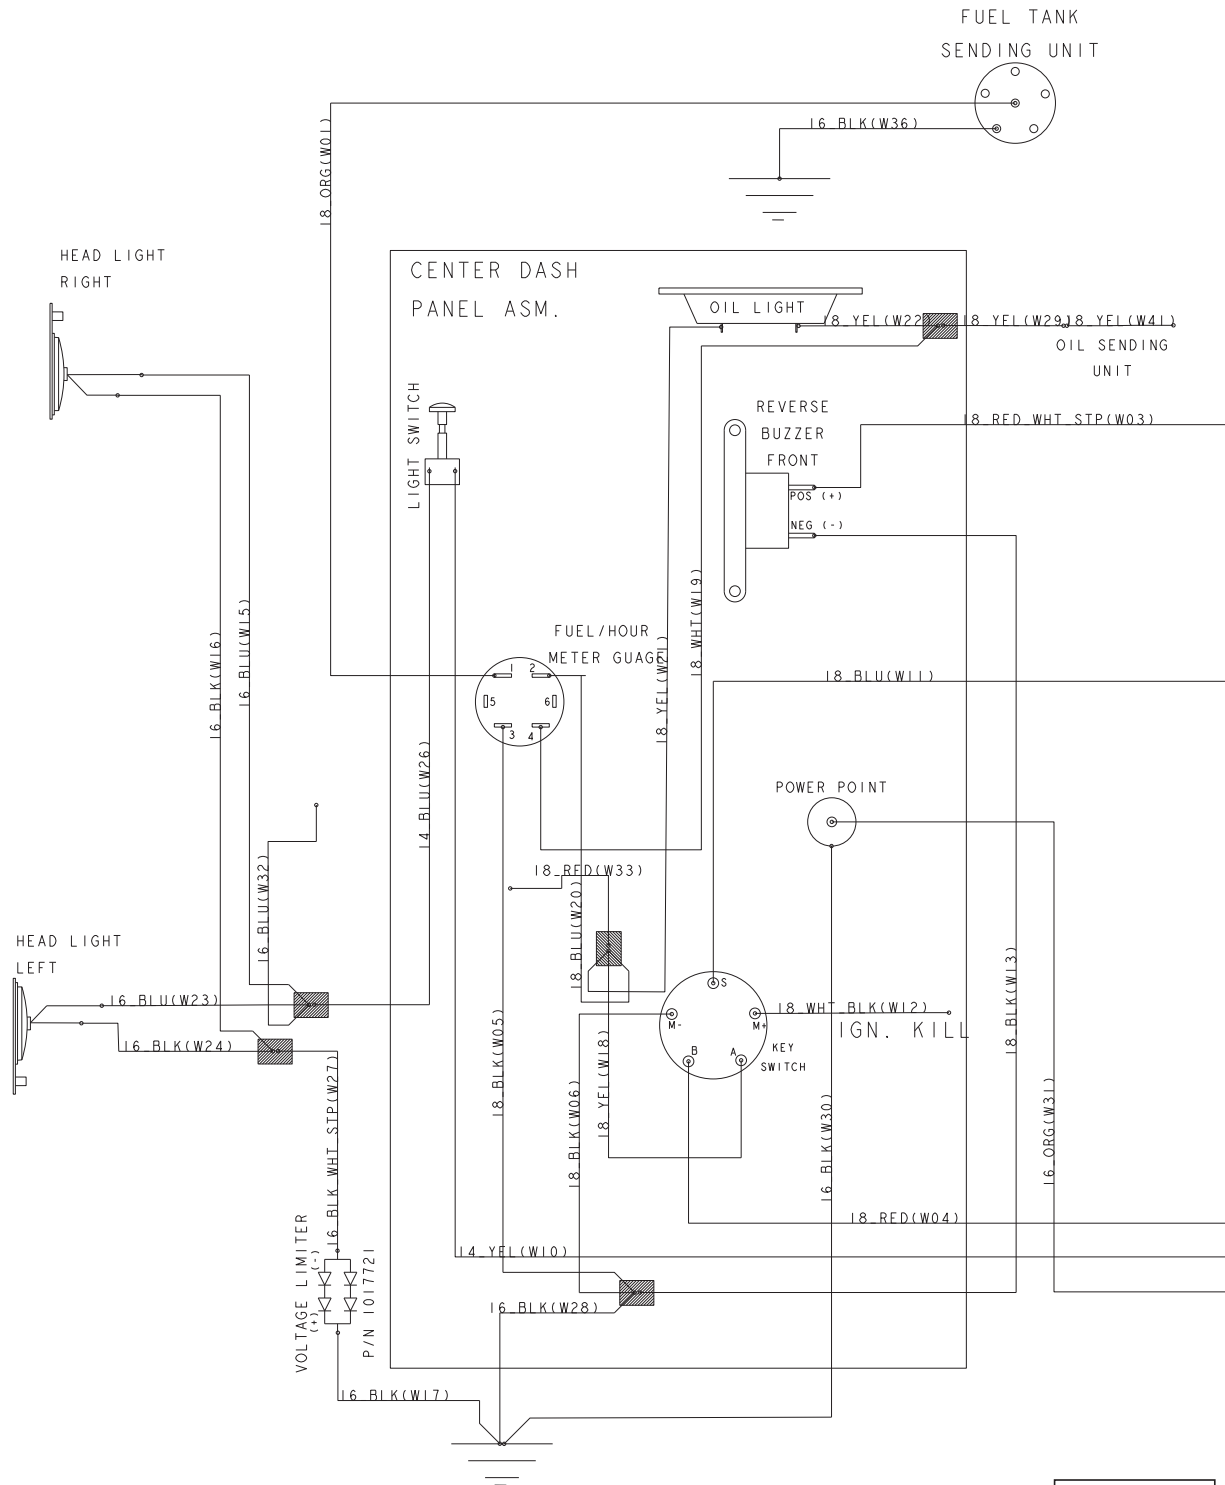

000234-001

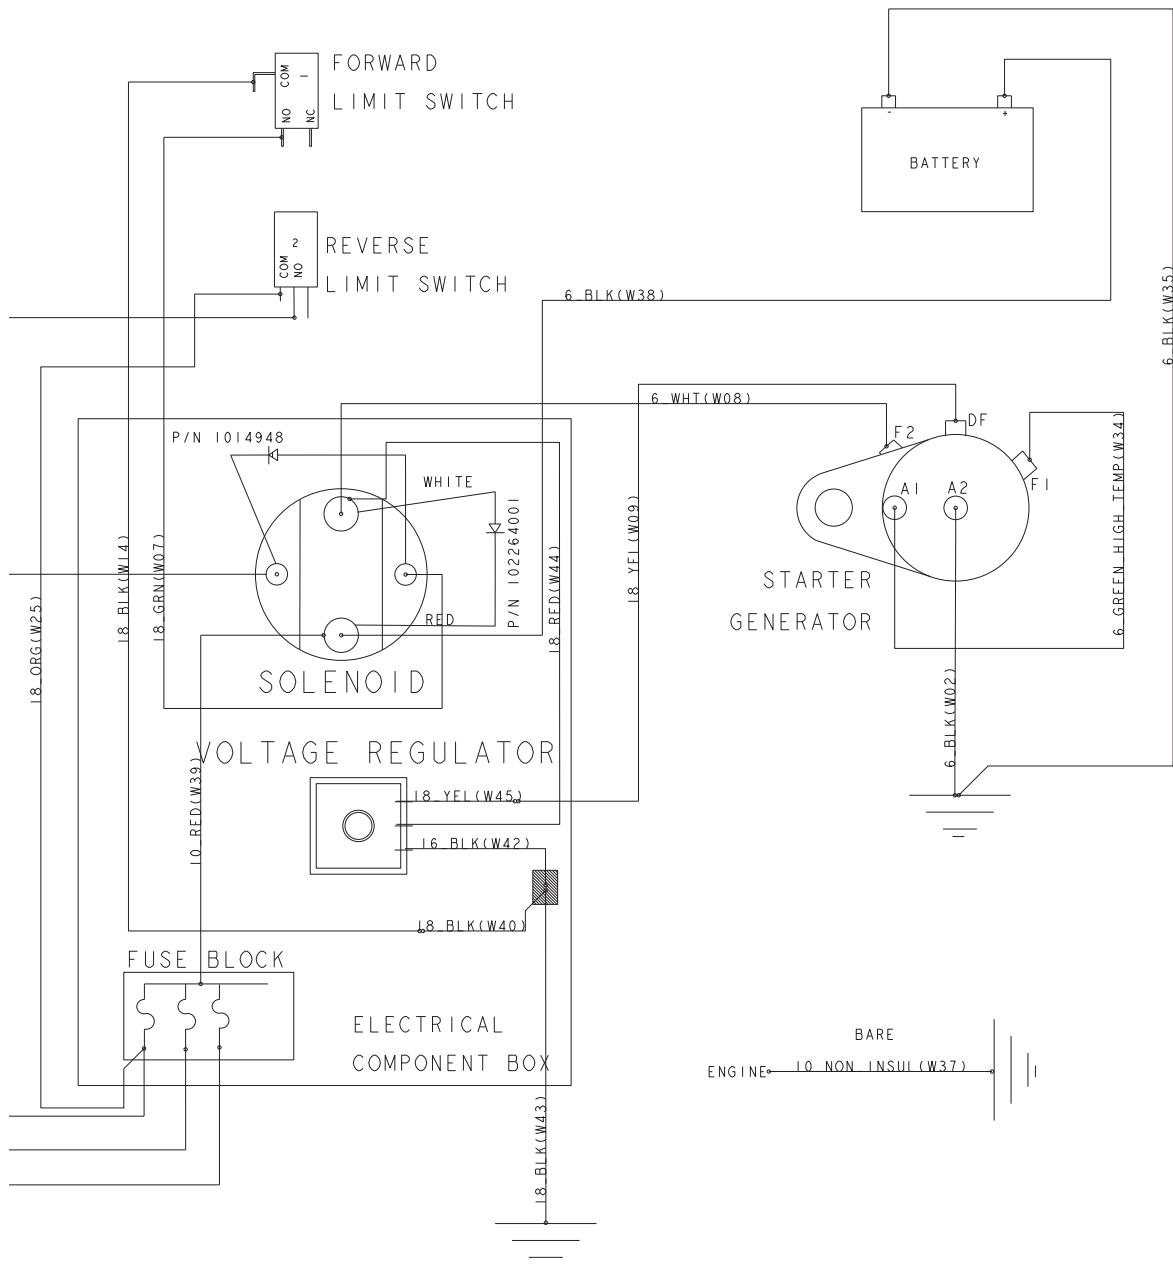 

000234-001


See previous two pages for illustration.

WIRING – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>102803001</u>	1 2 3 4 Wire Harness, Gasoline Vehicle	1

6

 G

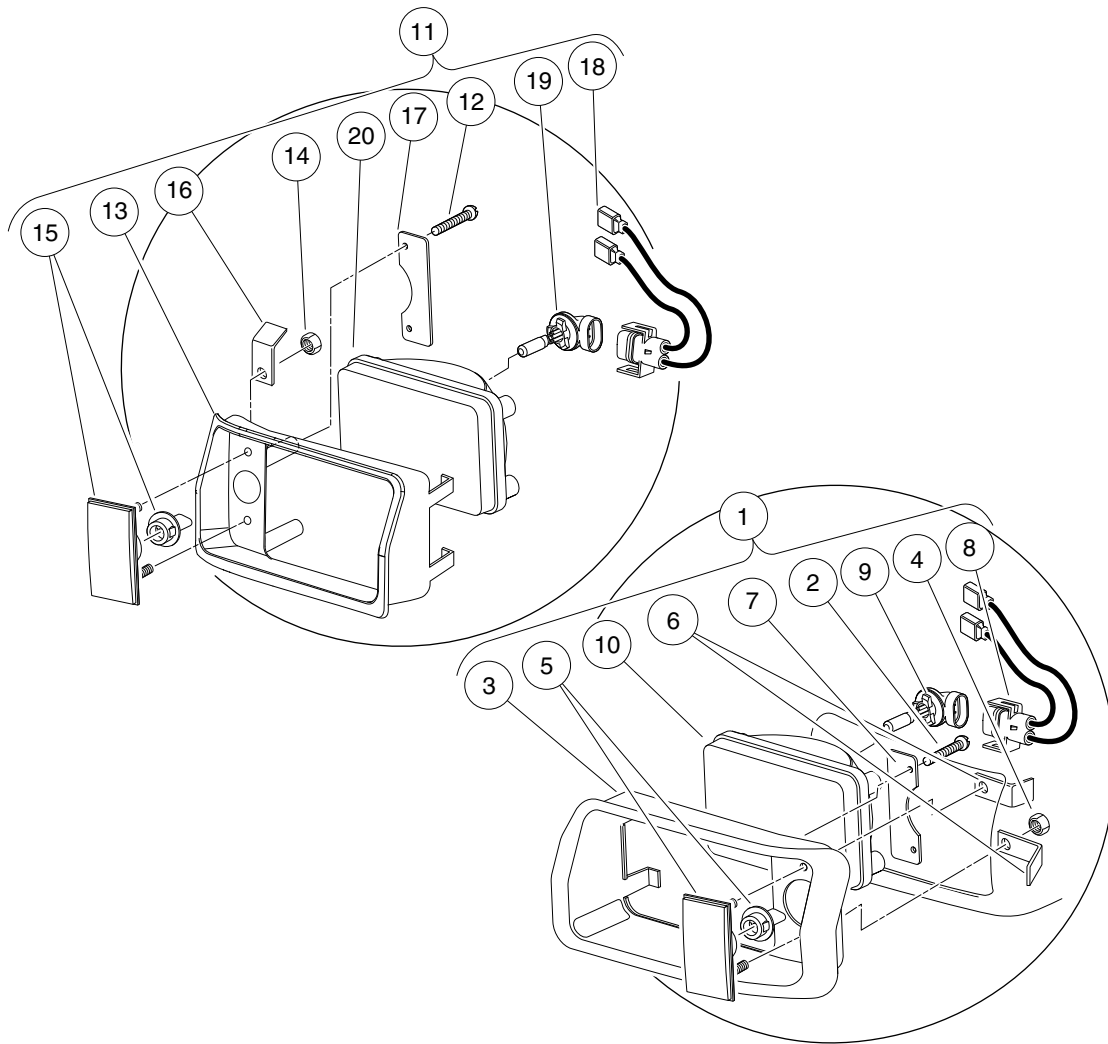


000073-001

HEADLIGHTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101988001</u>	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	1
2	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2
3	<u>1016880</u>	Headlight Bezel, Left	1
4	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
5	<u>1017062</u>	Turn Signal Lens Assy	1
6	<u>1017064</u>	Mounting Bracket	2
7	<u>1017065</u>	Retainer, Headlight	1
8	<u>101987901</u>	Connector Harness Assembly, Headlight	1
9	<u>101988101</u>	Bulb, Headlight	1
10	<u>101988201</u>	Lens, Headlight	1
11	<u>101988002</u>	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	1
12	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2
13	<u>1016879</u>	Headlight Bezel, Right	1
14	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
15	<u>1017062</u>	Turn Signal Lens Assy	1
16	<u>1017064</u>	Mounting Bracket	2
17	<u>1017065</u>	Retainer, Headlight	1
18	<u>101987901</u>	Connector Harness Assembly, Headlight	1
19	<u>101988101</u>	Bulb, Headlight	1
20	<u>101988201</u>	Lens, Headlight	1

6

 G

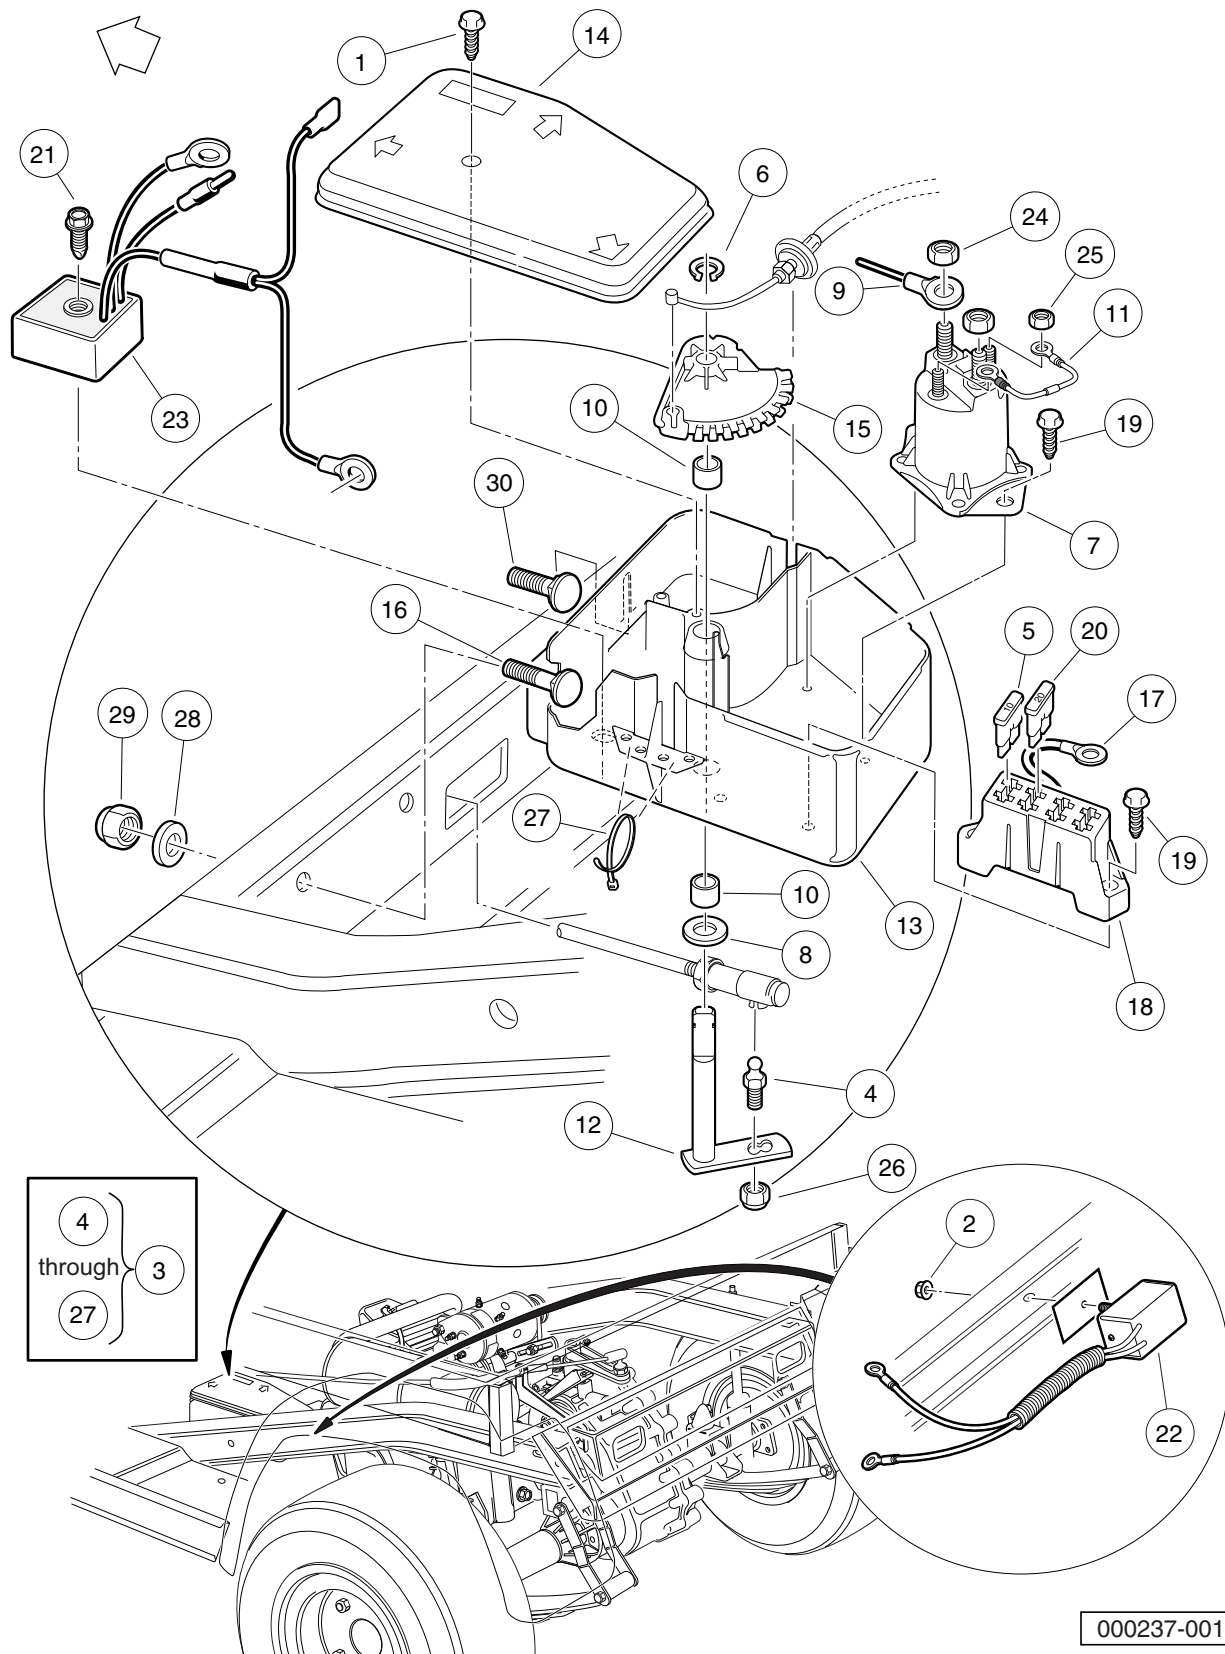


000237-001

ELECTRICAL COMPONENT BOX – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	1
2	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	1
3	N/A	Assembly, Electrical Component Box (includes items 4 through 27)	1
4	<u>1010954</u>	Stud, 1/4-28 X 0.560 Ball	1
5	<u>1012295</u>	Fuse, 10-Amp	1
6	<u>1013589</u>	Ring, 0.338" Internal Retaining	1
7	<u>1013609</u>	Solenoid, 12-Volt	1
8	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	1
9	<u>1014119</u>	Wire Assembly #6 Red	1
10	<u>1014145</u>	Bushing, Secondary Weight, Split	2
11	<u>1014948</u>	Diode	1
12	<u>1015345</u>	Bell Crank and Shaft Assembly	1
13	<u>1015371</u>	Box, Electrical Component	1
14	<u>1015372</u>	Cover, Electric Box	1
15	<u>1015373</u>	Cam, Electric Box	1
16	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	1
17	<u>1015737</u>	Wire Assy, #10 Red	1
18	<u>1015741</u>	Fuse Block	1
19	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	4
20	<u>1016423</u>	Fuse, 20-Amp	1
21	<u>101856102</u>	Screw, 1/4-15 X 1.50 Hi-lo Hex	1
22	<u>102264001</u>	Diode Assembly	1
23	<u>102711201</u>	Voltage Regulator	1
24	<u>1242</u>	Nut, 5/16-18 Hex	2
25	<u>7893</u>	Nut, #10-32 Hex	2
26	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1
27	<u>8990</u>	Tie Wrap, 8" Nylon	2
28	<u>1241</u>	Washer, 5/16 Type A Flat	2
29	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
30	<u>7818</u>	Bolt, Carriage, 5/16-18 X 1.5	1

6

 G




ELECTRICAL COMPONENTS, FRONT BODY – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012986</u>	Lockwasher, M4	2
2	<u>1013857</u>	Knob, Light Switch	1
3	<u>1016630</u>	Light, Oil	1
4	<u>101990703</u>	Gauge, Fuel/Hour, with Bracket (includes items 5 and 6)	1
5	102025901	Bracket, Fuel Gauge/Hour Meter	1
6	N/A	Gauge, Fuel/Hour	1
7	<u>101991101</u>	Nut, M4-0.7	2
8	<u>102044702</u>	Key Switch 12v Key Start	1
9	102044801	Key Set	1
10	<u>102051601</u>	Spacer, Keyswitch	1
11	<u>102051701</u>	Nut, Key Switch	1
12	<u>102051901</u>	Switch, Light	1
13	<u>102198001</u>	Receptacle, Accessory	1
14	<u>102804501</u>	Panel, Instrument	1
15	<u>102804502</u>	Panel, Instrument (with 12-Volt Accessory Outlet Cutout)	1
16	<u>102967901</u>	Rivet, Removable, Tuflok 1/4"	7

6

 G

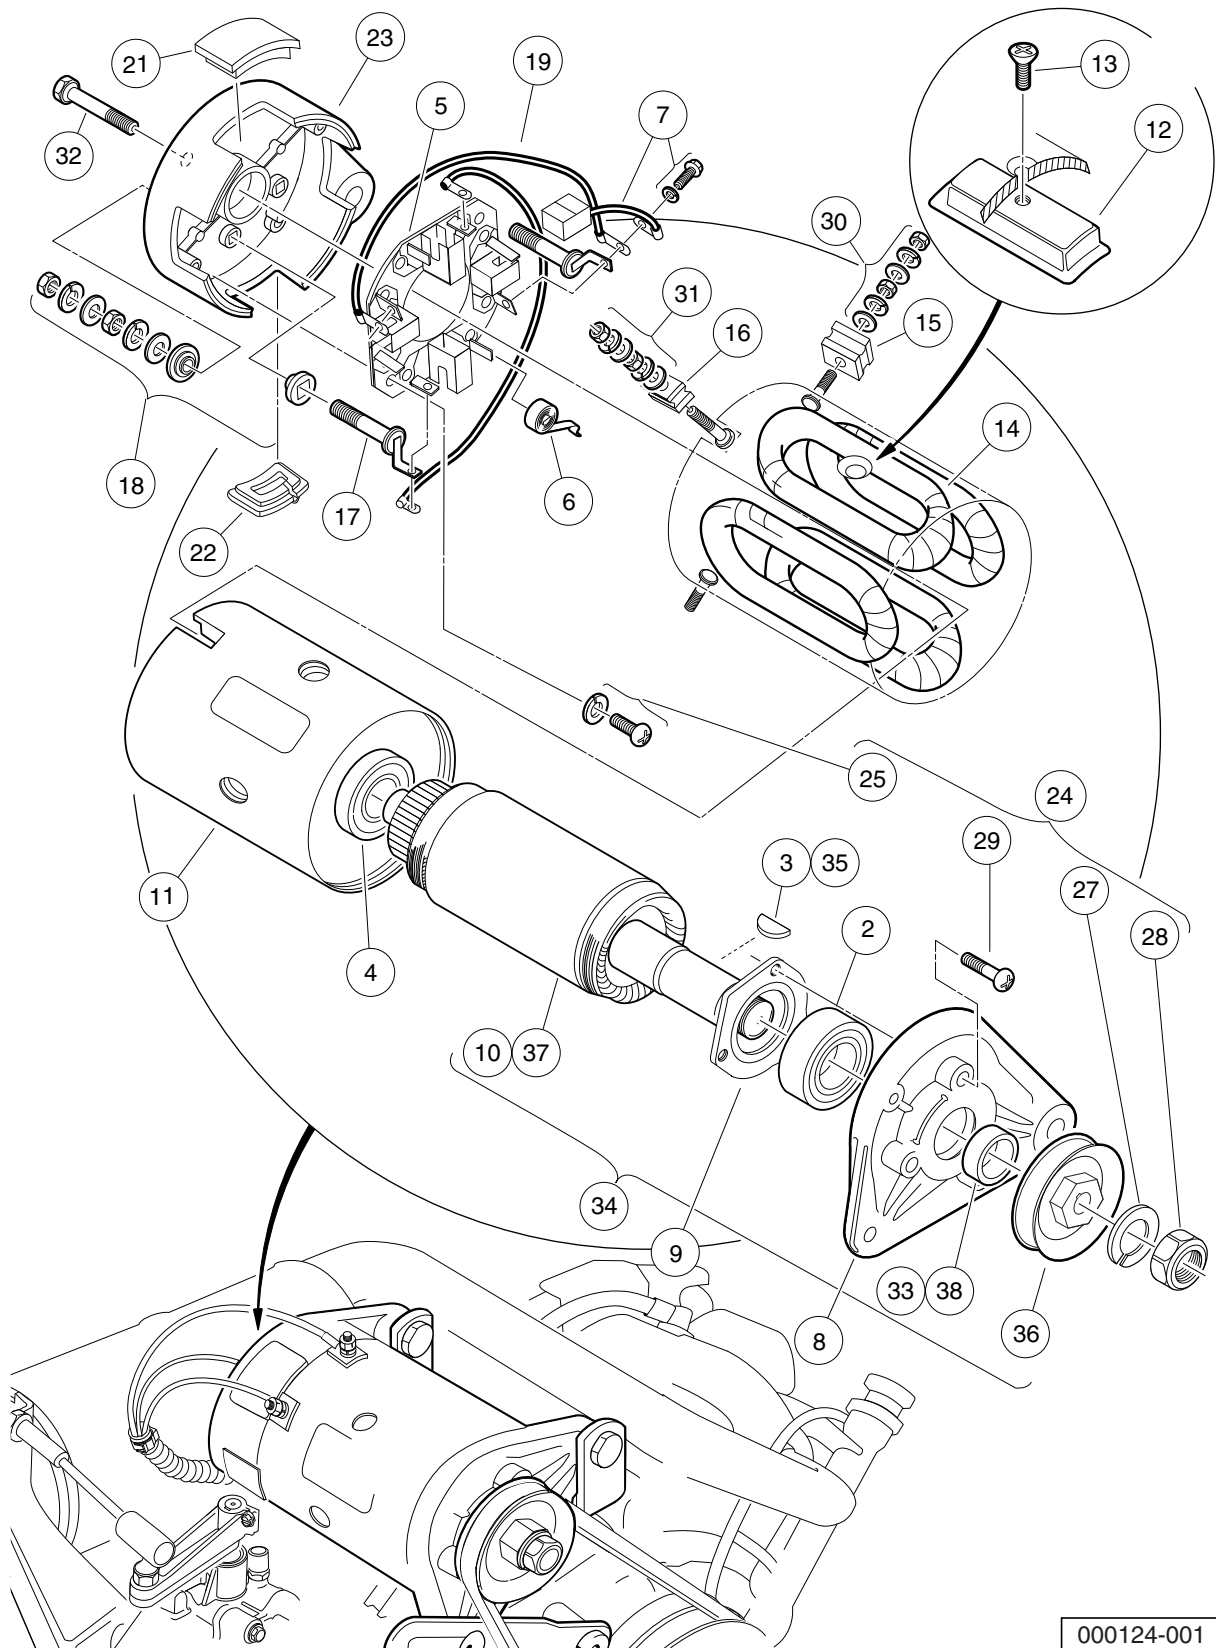


000124-001

STARTER/GENERATOR ASSEMBLY MODEL G425419 – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101833701</u>	Starter/Generator (cw) (includes items 2 through 33)	1
2	<u>1013001</u>	Bearing, Output Shaft Ball	1
3	<u>1013003</u>	Key, Starter/Generator	1
4	<u>1013005</u>	Bearing, Ball	1
5	<u>101301102</u>	Brush Holder Assembly (cw) (includes item 6)	1
6	<u>101878101</u>	Brush Spring Set	4
7	<u>101869302</u>	Brush and Screw Set (cw)	1
8	<u>101874901</u>	Front Bracket	1
9	<u>101875001</u>	Retainer	1
10	<u>101875101</u>	Armature	1
11	<u>101875201</u>	Field Coil Housing	1
12	<u>101875301</u>	Pole Set	1
13	<u>101875401</u>	Screw Set	1
14	<u>101875501</u>	Field Stator Coil Assembly	1
15	<u>101875601</u>	F Insulator Set	2
16	<u>101875701</u>	DF Insulator	1
17	<u>101875802</u>	A Connector (cw)	1
18	<u>101876001</u>	Screw and Mold Assembly	2
19	<u>101876202</u>	Brush Connector Assembly (cw)	2
20	<u>101876301</u>	Cover Set (includes items 21 and 22)	1
21	<u>1012991</u>	Brush Inspection Port Cover	3
22	<u>1017653</u>	Brush Port Cover w/Drain	1
23	<u>101876402</u>	Rear Bracket (cw)	1
24	<u>101876501</u>	Nut and Screw Set (includes items 25 through 29)	1
25	<u>101896501</u>	Brush Holder Asm Screw	2
26	N/A	Washer, M5 Flat	1
27	N/A	Washer, M14 Lock	1
28	N/A	Nut, Hex, M14 x 2	1
29	N/A	Screw, M5 x 0.8 x 18mm	3
30	<u>101877601</u>	Nut and Washer Set	2
31	<u>101877701</u>	Nut and Washer Set	1
32	<u>101879001</u>	Through Bolt Set	2
33	<u>101939901</u>	Spacer	1
34	<u>101875102</u>	Armature Asm Conversion Kit (includes items 35 through 38)	1
35	<u>1013003</u>	Key, Starter/Generator	1
36	<u>1014289</u>	Pulley, Starter/Generator	1
37	<u>101875101</u>	Armature	1
38	<u>101939901</u>	Spacer	1
		Note: Item 36 will ONLY fit Model G425419 Starter/Generator.	


6

 G

G

FE290 STARTER/GENERATOR MOUNTING – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	2	
2	<u>101524001</u>	Bracket, Starter/Generator Mounting (FE290)	1	
3	<u>1015932</u>	Bolt, Carriage, 5/16-18	1	
4	<u>1016074</u>	Screw, M8-1.25 X 18mm Torx	1	
5	<u>1016883</u>	Bracket, Starter/Generator Adjustment	1	
6	<u>101837301</u>	Wire Assy, #6 Green	1	
7	<u>101916701</u>	V-Belt	1	
8	<u>1241</u>	Washer, 5/16 Type A Flat	1	
9	<u>1242</u>	Nut, 5/16-18 Hex	1	
10	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	2	
11	<u>7174</u>	Lockwasher, 5/16 Split	3	
12	<u>8754</u>	Locknut, 3/8-16 Hex	2	

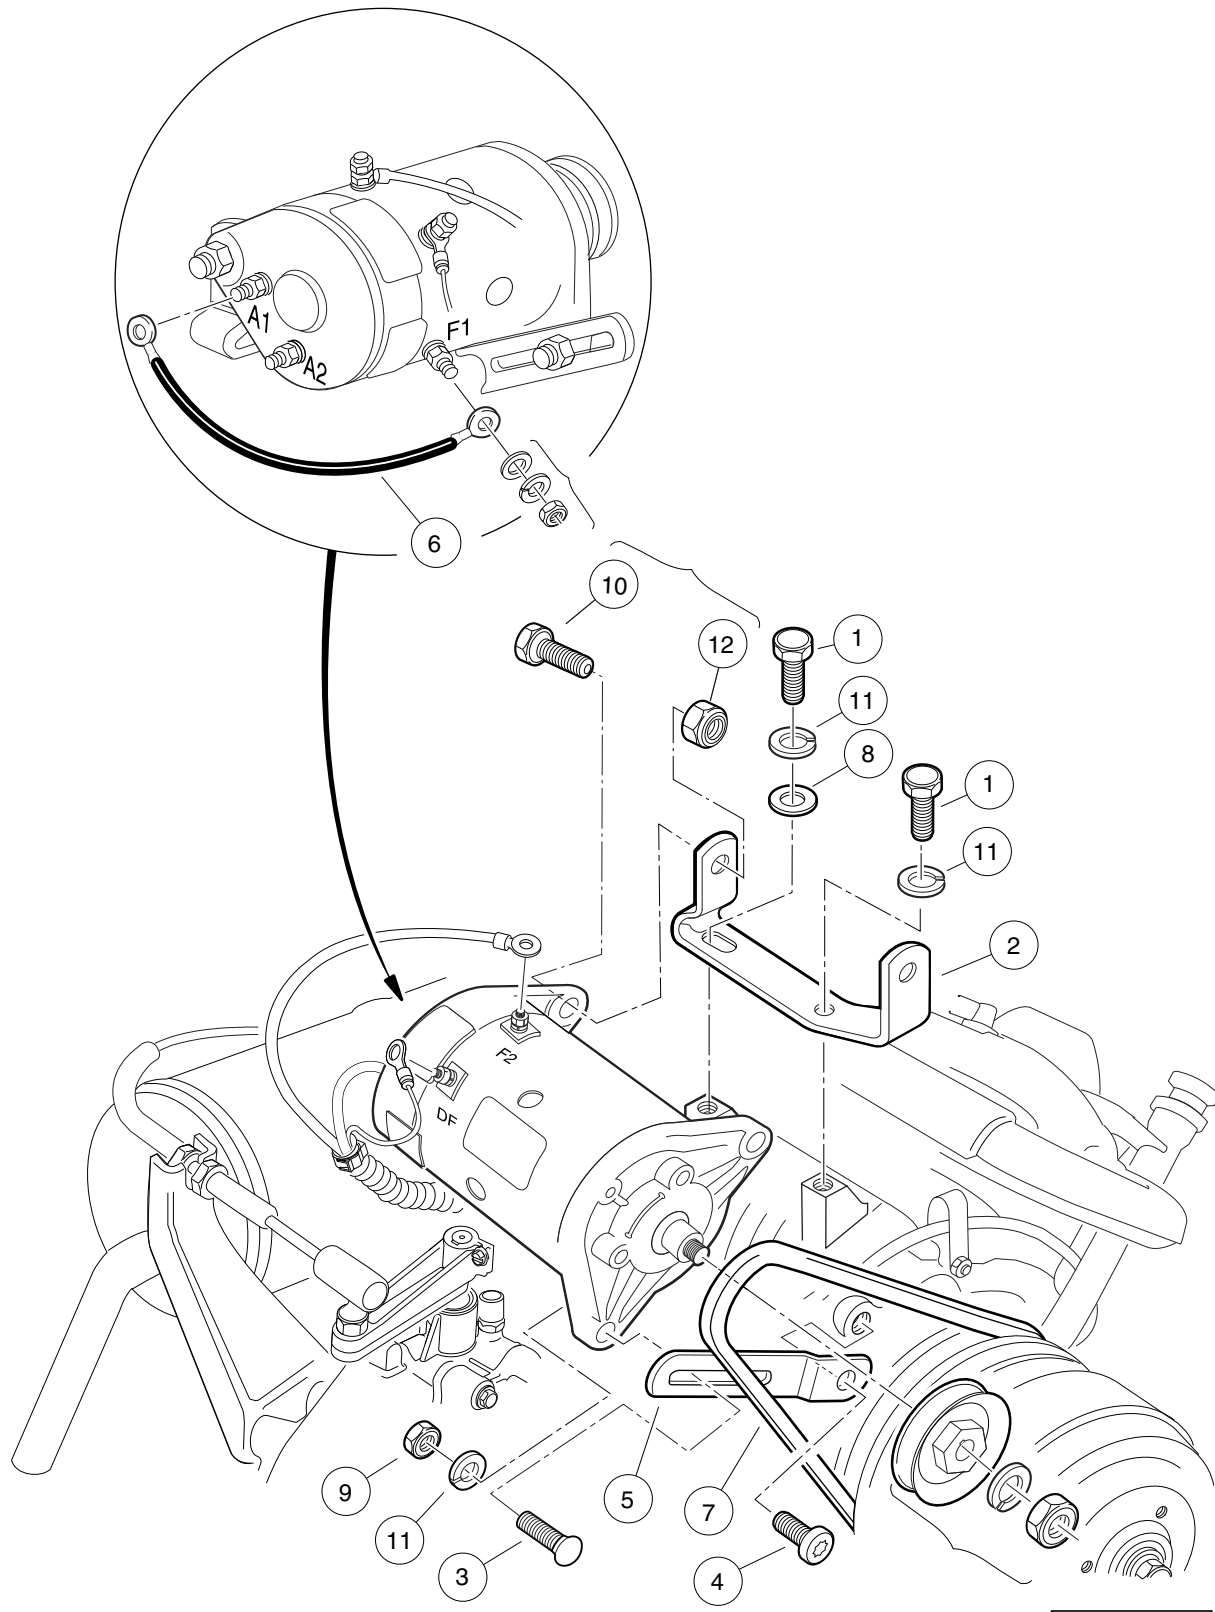 


000239-001

FE350 STARTER/GENERATOR MOUNTING – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	2
2	<u>101524002</u>	Bracket, Starter/Generator Mounting	1
3	<u>1015932</u>	Bolt, Carriage, 5/16-18	1
4	<u>1016074</u>	Screw, M8-1.25 X 18mm Torx	1
5	<u>1016883</u>	Bracket, Starter/Generator Adjustment	1
6	<u>101837301</u>	Wire Assy, #6 Green	1
7	<u>101916701</u>	V-Belt	1
8	<u>1241</u>	Washer, 5/16 Type A Flat	1
9	<u>1242</u>	Nut, 5/16-18 Hex	1
10	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	2
11	<u>7174</u>	Lockwasher, 5/16 Split	3
12	<u>8754</u>	Locknut, 3/8-16 Hex	2

 6
G

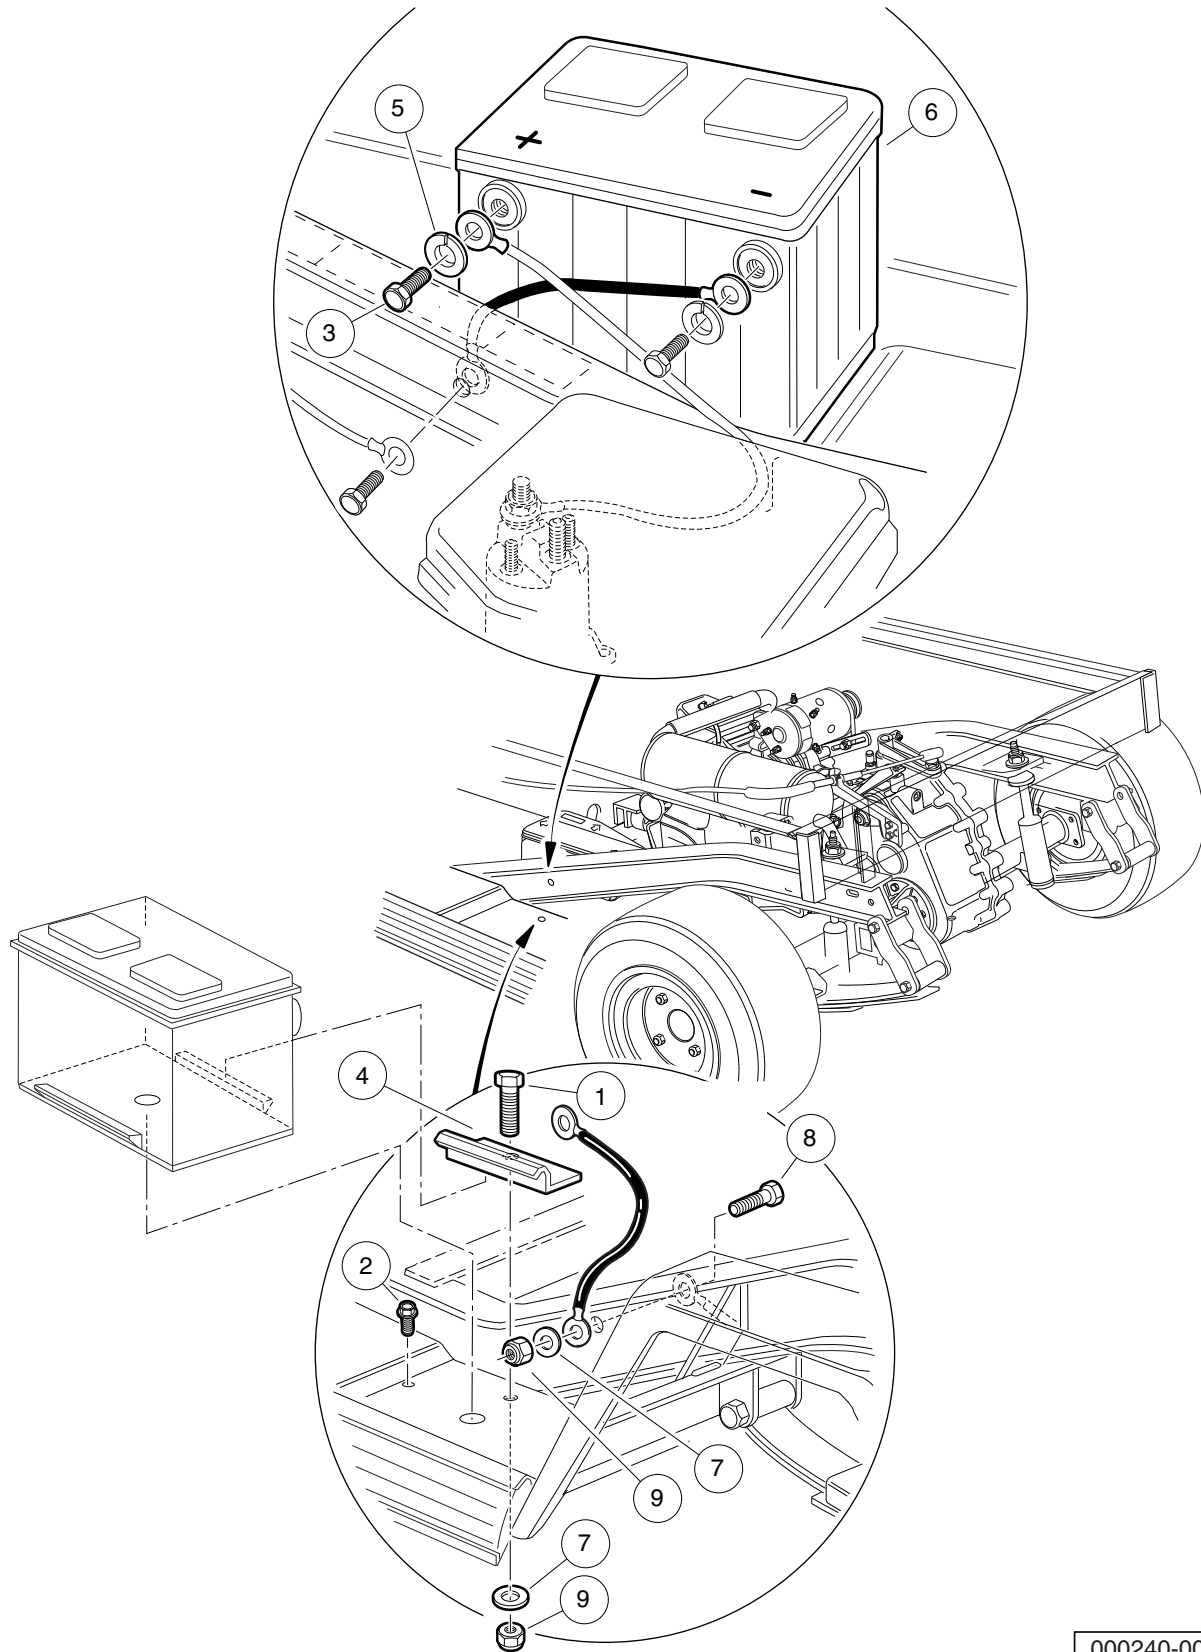

000240-001

BATTERY – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1	
2	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	1	
3	<u>1014375</u>	Screw, 3/8-16 X 0.50 Stainless Steel Hex-Head	2	
4	<u>101898001</u>	Clamp, Battery	1	
5	<u>102355301</u>	Lockwasher, #10 Split Ss	2	
6	N/A	Battery, Start, 12v	1	
7	<u>1241</u>	Washer, 5/16 Type A Flat	2	
8	<u>7173</u>	Screw, 5/16-18 X 0.75 Hex-Head Cap	1	
9	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	

 
6

G

FE290 ENGINE

7

G

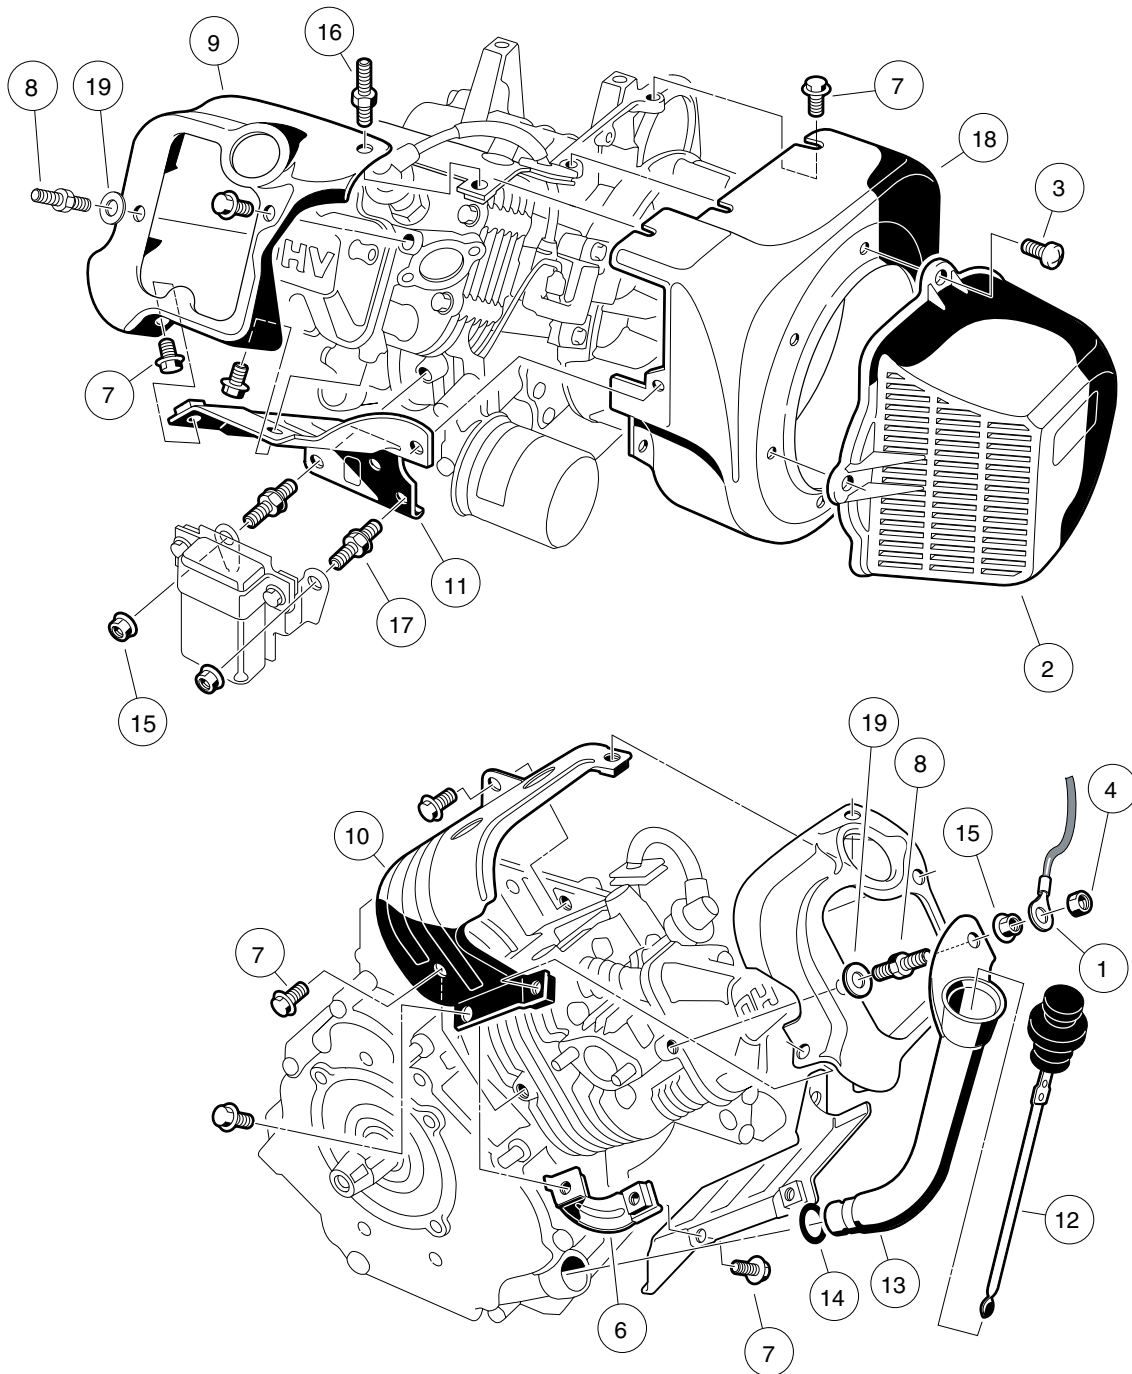


000194-001

FE290 ENGINE – SHROUDS AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015332</u>	Wire Assembly, #10, Uninsulated	1
2	<u>1015649</u>	Shroud, Fan	1
3	<u>1015969</u>	Screw, M6-1.00 X 10mm Pan Hd	4
4	<u>101887601</u>	Locknut, M6-1.00 Nylon Insert	1
5	<u>101953901</u>	Engine, FE290 (cw) * (includes items 6 through 19)	1
6	<u>1016443</u>	Bracket	1
7	<u>1016456</u>	Bolt, Flange Head, M6 x 1 x 12 mm	15
8	<u>1016507</u>	Bolt, Two-Ended	1
9	<u>1016524</u>	Shroud, Engine, FE290D	1
10	<u>1016525</u>	Shroud, Engine, FE290D	1
11	<u>1016526</u>	Shroud, Engine, FE290D	1
12	<u>1016531</u>	Dipstick	1
13	<u>1016536</u>	Tube, Oil Filler, FE290D	1
14	<u>1016539</u>	O-Ring	1
15	<u>1016547</u>	Nut, M6 Flange	3
16	<u>1017221</u>	Screw, M6-1.00 Stud	1
17	<u>101909701</u>	Stud, M6-1.00, Two-Ended	2
18	<u>101915601</u>	Housing, FE290 Fan	1
19	N/A	Washer, 6 mm Flat	1
* Note: FE290 engine component listings span several pages.			

 7
G

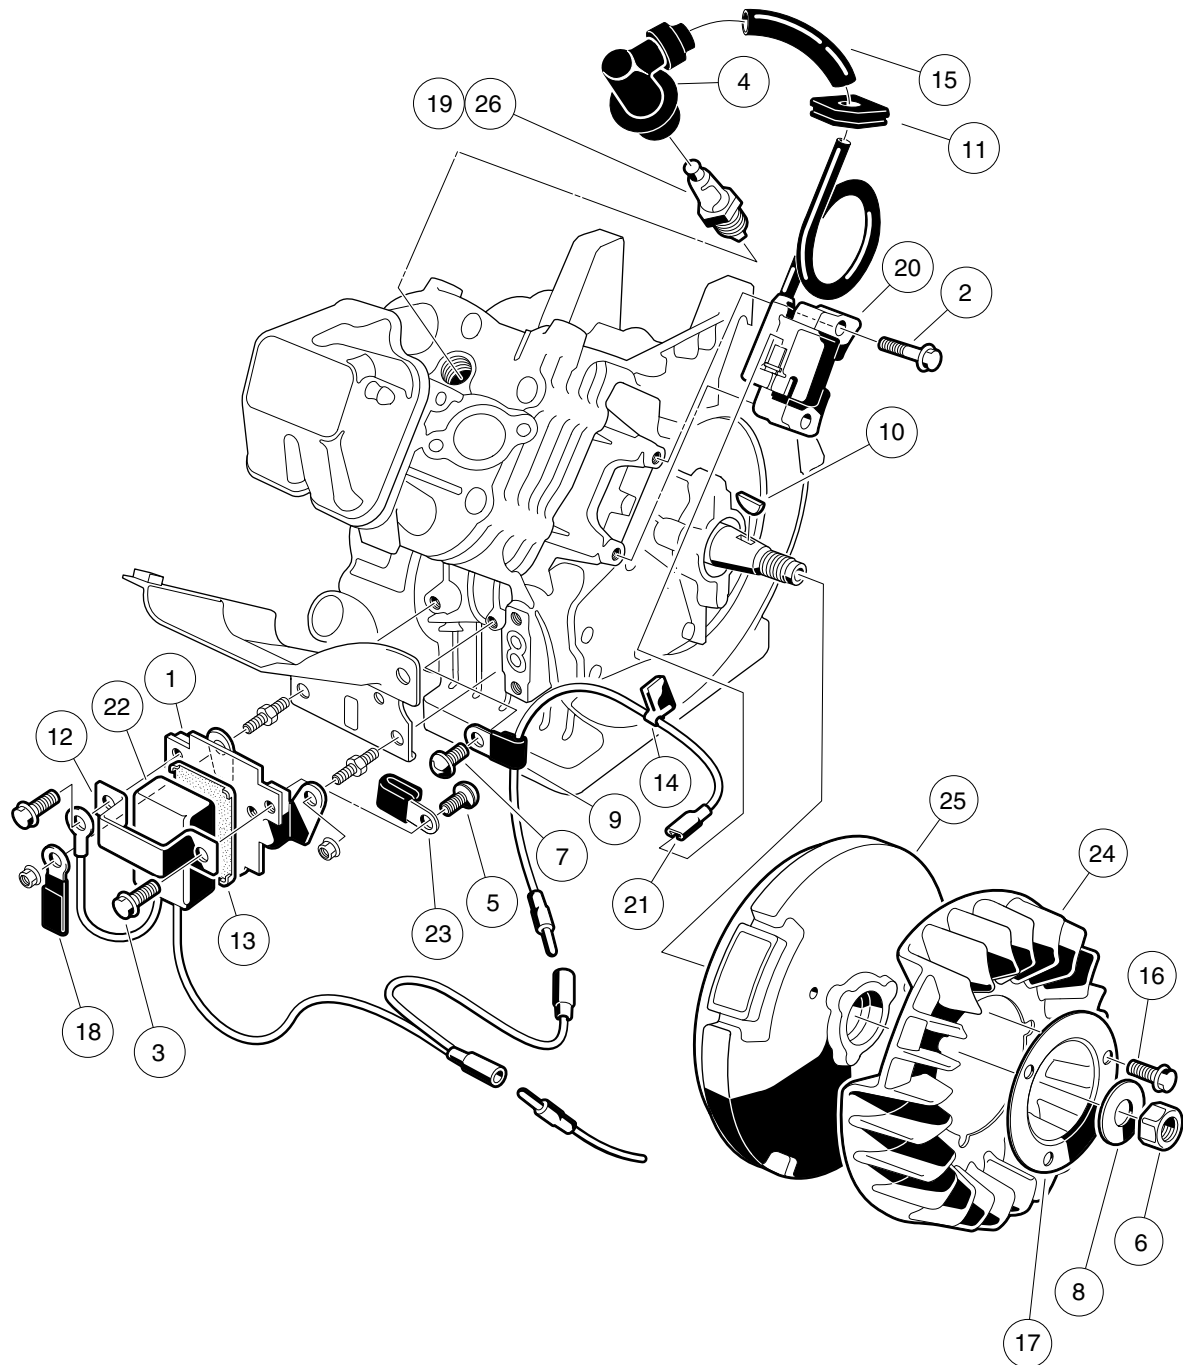


000195-001

FE290 ENGINE – IGNITION COMPONENTS AND FLYWHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016445	Bracket, RPM Limiter	1
2	<u>1016455</u>	Bolt, Flange Head	2
3	1016456	Bolt, Flange Head, M6 x 1 x 12 mm	2
4	<u>1016493</u>	Cap, Spark Plug	1
5	<u>1016497</u>	Screw, Pan WP Cross	1
6	<u>1016505</u>	Nut, Hex, Fine	1
7	<u>1016544</u>	Screw	1
8	<u>1016548</u>	Washer, M16 Flat	1
9	<u>1016561</u>	Clamp	1
10	<u>1016562</u>	Key	1
11	<u>1016578</u>	Ignition, Grommet	1
12	<u>1016579</u>	Band, RPM Limiter Mount	1
13	1016586	Damper, RPM Limiter	1
14	<u>1016587</u>	Clamp	1
15	<u>1016588</u>	Tube, 7mm X 10mm X 70mm	1
16	<u>1017448</u>	Bolt, Flanged	3
17	<u>1017455</u>	Plate, Flywheel Fan	1
18	<u>1017468</u>	Clamp	1
19	<u>101881101</u>	Spark Plug, OHV (Autolite)	1
20	<u>101909201</u>	Coil, Ignition	1
21	<u>101909301</u>	Lead Wire Assy	1
22	101909401	Limiter, RPM	1
23	101909501	Clamp, Steel	1
24	<u>101915801</u>	Fan, FE290 (cw)	1
25	<u>101929301</u>	Flywheel, Complete	1
26	<u>AM10724</u>	Spark Plug, OHV (NGK)	1

7

 
G

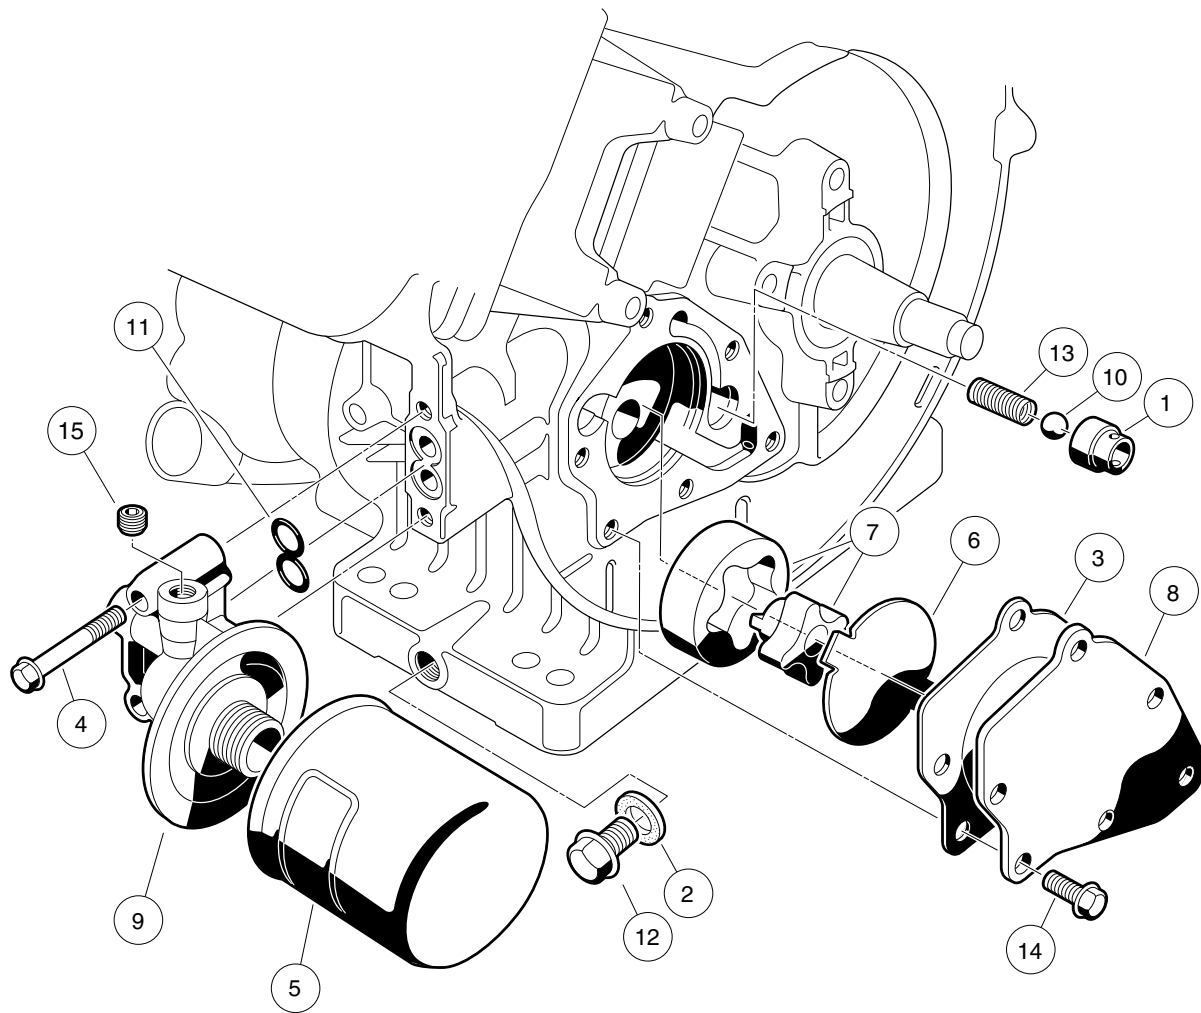

000196-001

FE290 ENGINE – OIL CIRCULATION


ITEM	PART NO.	DESCRIPTION	QTY	7
		1 2 3 4		G
1	1016429	Seat, Value Oil Press Relief	1	
2	<u>1016432</u>	Gasket, Drain Plug	1	
3	<u>1016435</u>	Gasket, Oil Pump	1	
4	<u>1016457</u>	Bolt, Flange Head	2	
5	<u>1016467</u>	Filter, Oil	1	
6	<u>1016473</u>	Plate, Oil Pump	1	
7	<u>101648203</u>	Oil Pump And Rotor	1	
8	<u>1016484</u>	Cover, Pump	1	
9	<u>1016502</u>	Bracket, Oil Filter Mount	1	
10	<u>1016537</u>	Ball, Steel, Press, Relief	1	
11	<u>1016570</u>	O-Ring	1	
12	<u>1016576</u>	Plug, Drain	1	
13	<u>1016581</u>	Spring	1	
14	<u>1017456</u>	Bolt, Flanged	6	
15	<u>1017507</u>	Plug	2	

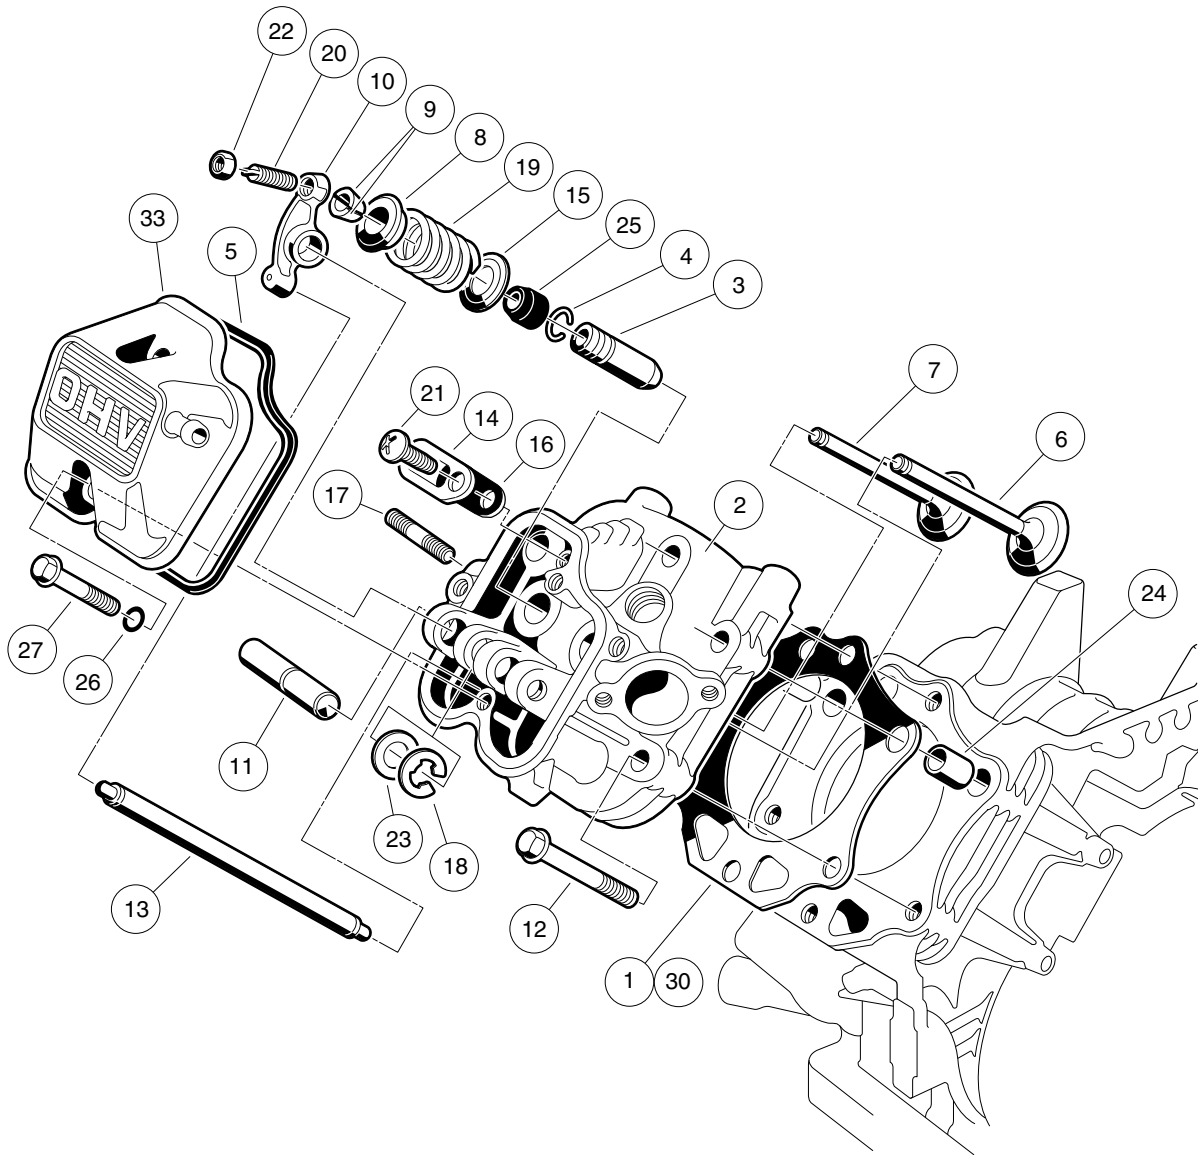 

000197-001

FE290 ENGINE – CYLINDER HEAD

ITEM	PART NO.	DESCRIPTION	QTY	7	G
		1 2 3 4			
1	<u>1016430</u>	Gasket, Head, FE290	1		
2	<u>1016431</u>	Head Assembly, FE290 Cylinder (includes items 3 and 4)	1		
3	<u>1016519</u>	Guide, Valve	2		
4	<u>1016560</u>	Snap Ring	2		
5	<u>1016436</u>	Gasket, Rocker Case	1		
6	<u>1016447</u>	Valve, Intake	1		
7	<u>1016448</u>	Valve, Exhaust	1		
8	<u>1016449</u>	Retainer, Valve Spring	2		
9	<u>1016450</u>	Collet	4		
10	<u>1016451</u>	Arm, Rocker	2		
11	<u>1016452</u>	Shaft, Rocker	1		
12	<u>1016458</u>	Bolt, Flange Head, M8 x 1.25 x 45 mm	6		
13	<u>1016471</u>	Rod, Push	2		
14	<u>1016474</u>	Plate	1		
15	<u>1016479</u>	Seat, Spring	2		
16	<u>1016483</u>	Valve	1		
17	<u>1016489</u>	Stud, Two-Ended, M8-1.25	2		
18	<u>1016517</u>	Circlip, Type-E	1		
19	<u>1016523</u>	Spring, Engine Valve	2		
20	<u>1016542</u>	Screw	2		
21	<u>1016544</u>	Screw	1		
22	<u>1016545</u>	Nut	2		
23	<u>1016549</u>	Washer, 12.1x19x1.8	1		
24	<u>1016563</u>	Pin	2		
25	<u>1016566</u>	Seal, Oil	2		
26	<u>1016569</u>	O-Ring	2		
27	<u>1016583</u>	Bolt, 6x35	2		
28	<u>102304701</u>	Kit, Gasket, FE290 (includes items 29 through 32)	1		
29	<u>1015330</u>	Gasket, Exhaust	1		
30	<u>1016430</u>	Gasket, Head, FE290	1		
31	<u>1016440</u>	Gasket, Engine to Insulator	1		
32	<u>1016446</u>	Gasket, Crankcase Cover	1		
33	<u>102753401</u>	Case, Rocker	1		

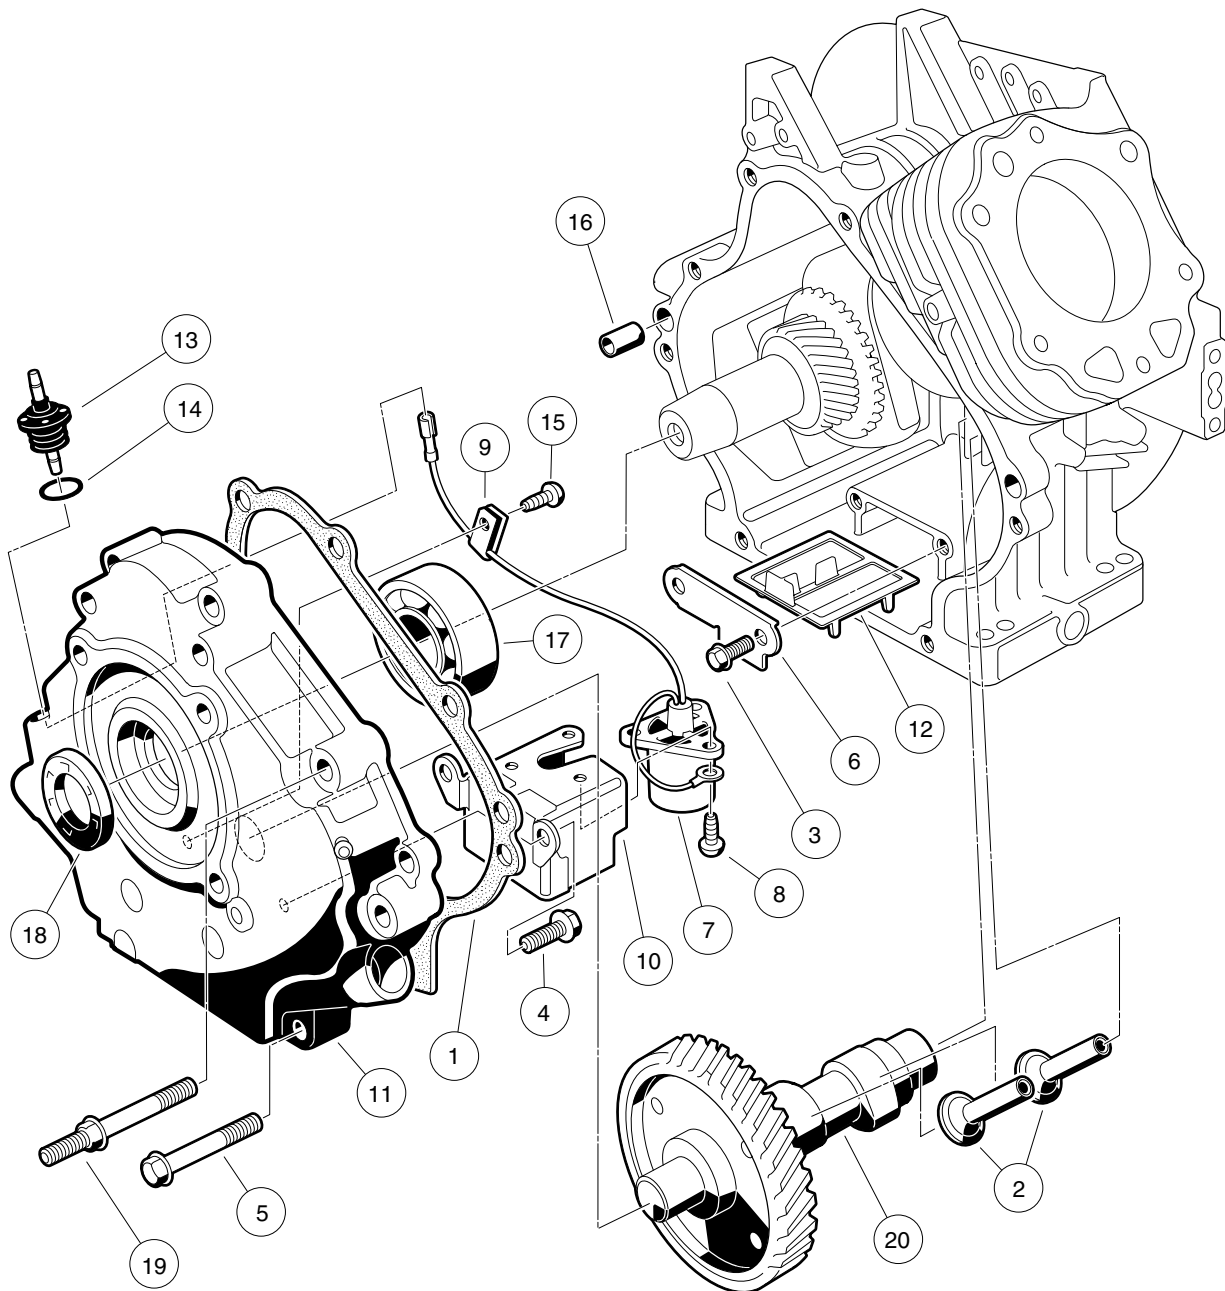 


000198-001

FE290 ENGINE – CRANKCASE, CAMSHAFT, AND OIL SENSOR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016446</u>	Gasket, Crankcase Cover	1
2	<u>1016453</u>	Tappet	2
3	<u>1016454</u>	Bolt, Flange Head, M5 x 0.8 x 8 mm	2
4	<u>1016456</u>	Bolt, Flange Head, M6 x 1 x 12 mm	2
5	<u>1016458</u>	Bolt, Flange Head, M8 x 1.25 x 45 mm	6
6	<u>1016472</u>	Plate, Oil Filter Screen	1
7	<u>1016494</u>	Sensor, Oil Level	1
8	<u>1016496</u>	Screw, Cross Pan-Head, M4 x 0.7 x 8 mm	3
9	<u>1016506</u>	Clamp	1
10	<u>1016510</u>	Bracket, Switch, Oil Level	1
11	<u>1016520</u>	Cover, Crankcase	1
12	<u>1016521</u>	Screen, Oil Filter	1
13	<u>1016535</u>	Connector, Cord	1
14	<u>1016538</u>	O-Ring	1
15	<u>1016544</u>	Screw	1
16	<u>1016564</u>	Pin	2
17	<u>1016565</u>	Bearing, Ball	1
18	<u>1016567</u>	Seal, Crankshaft	1
19	<u>1016584</u>	Bolt, Two-Ended, M8 x 1.25 x 69 mm	2
20	<u>101915401</u>	Camshaft Complete, FE290	1

7

 G

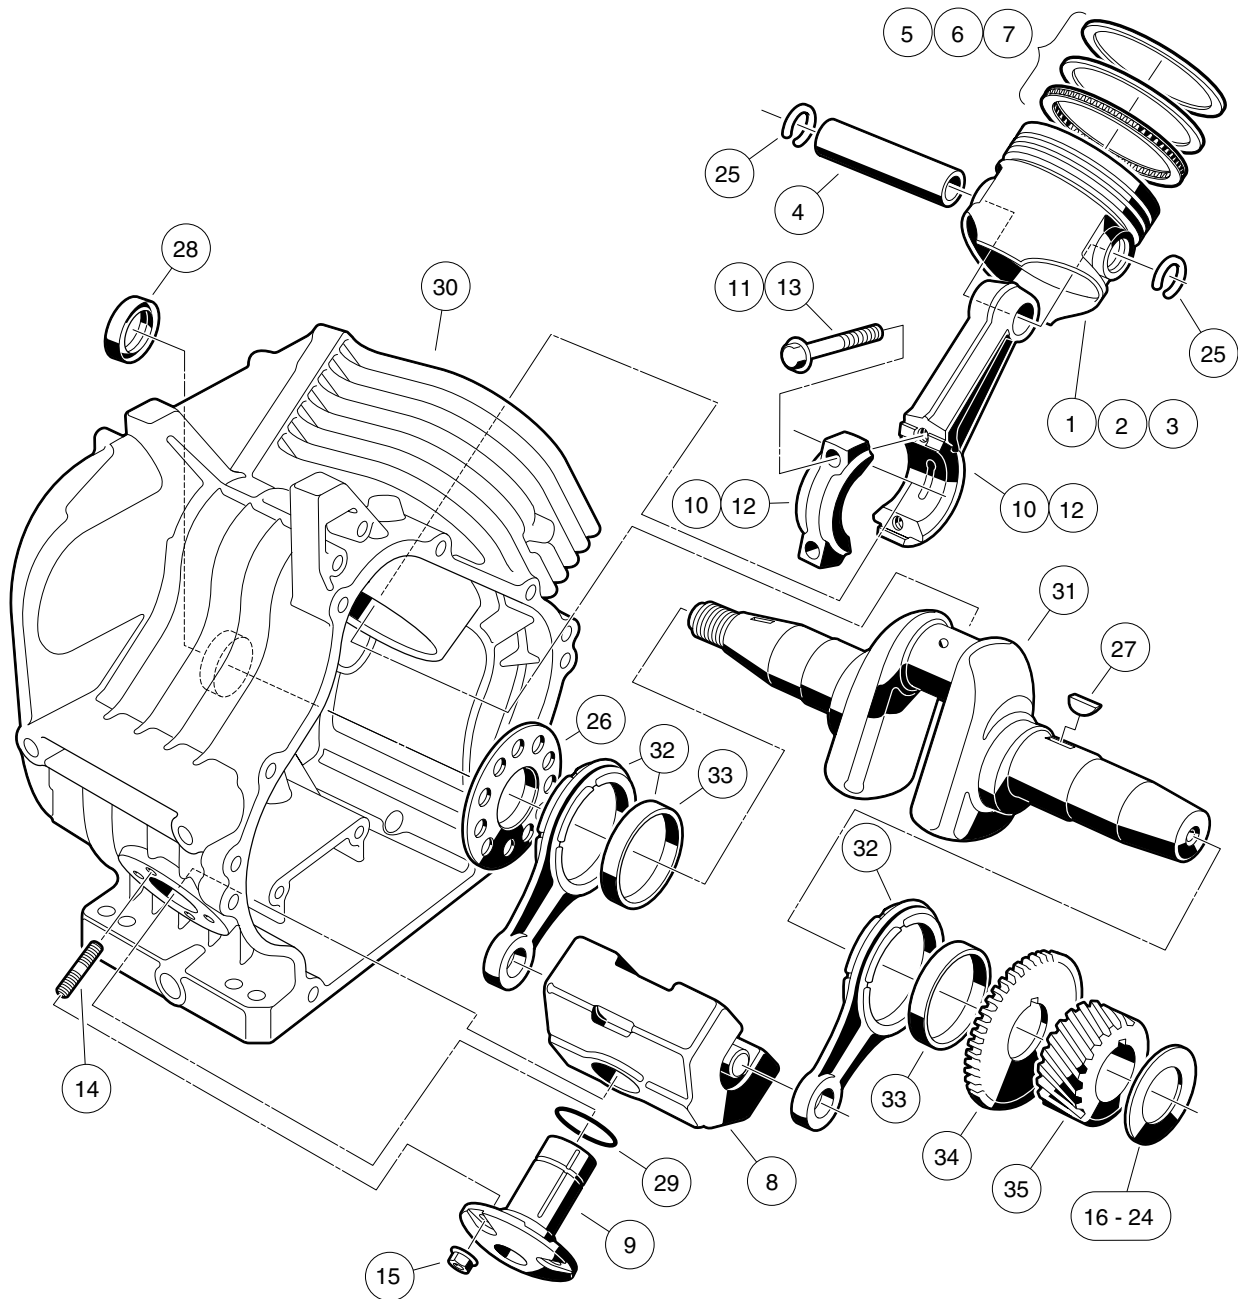


000199-001

FE290 ENGINE – CRANKCASE AND CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101645901</u>	Piston	1
2	<u>101645902</u>	Piston, Engine 0.25 mm Over	1
3	<u>101645903</u>	Piston, Engine 0.50 mm Over	1
4	<u>1016460</u>	Pin, Piston	1
5	<u>101646101</u>	Ring Set, Piston	1
6	<u>101646102</u>	Ring Set, Piston 0.25 mm Over	1
7	<u>101646103</u>	Ring Set, Piston 0.50 mm Over	1
8	<u>1016469</u>	Weight, Counterbalance	1
9	<u>1016470</u>	Shaft, Guide, Counterbalance	1
10	<u>101647501</u>	Rod Assembly (includes item 11)	1
11	<u>1016509</u>	Bolt	2
12	<u>101647502</u>	Rod Assembly, Connecting 0.50 mm Under (includes item 13)	1
13	<u>1016509</u>	Bolt	2
14	<u>1016541</u>	Stud, 6x14	4
15	<u>1016547</u>	Nut, M6 Flange	4
16	<u>101655001</u>	Shim, Crankshaft T=1.13	1
17	<u>101655002</u>	Shim, Crankshaft T=1.18	1
18	<u>101655003</u>	Shim, Crankshaft T=1.23	1
19	<u>101655004</u>	Shim, Crankshaft T=1.28	1
20	<u>101655005</u>	Shim, Crankshaft T=1.33	1
21	<u>101655006</u>	Shim, Crankshaft T=1.38	1
22	<u>101655007</u>	Shim, Crankshaft T=1.43	1
23	<u>101655008</u>	Shim, Crankshaft T=1.48	1
24	<u>101655009</u>	Shim, Crankshaft T=1.53	1
25	<u>1016558</u>	Ring, Snap	2
26	<u>1016559</u>	Spacer	1
27	<u>1016562</u>	Key	1
28	<u>1016568</u>	Seal, Oil	1
29	<u>1016571</u>	O-Ring	1
30	<u>101915501</u>	Crankcase Complete, FE290 (cw)	1
31	<u>101922301</u>	Crankshaft, FE290 Left-Hand Thread (includes items 32 through 35)	1
32	<u>1016516</u>	Rod (includes item 33)	2
33	<u>1016580</u>	Bearing, Plane	1
34	<u>1016532</u>	Gear, Spur	1
35	<u>1016533</u>	Gear, Helical	1

7

 G

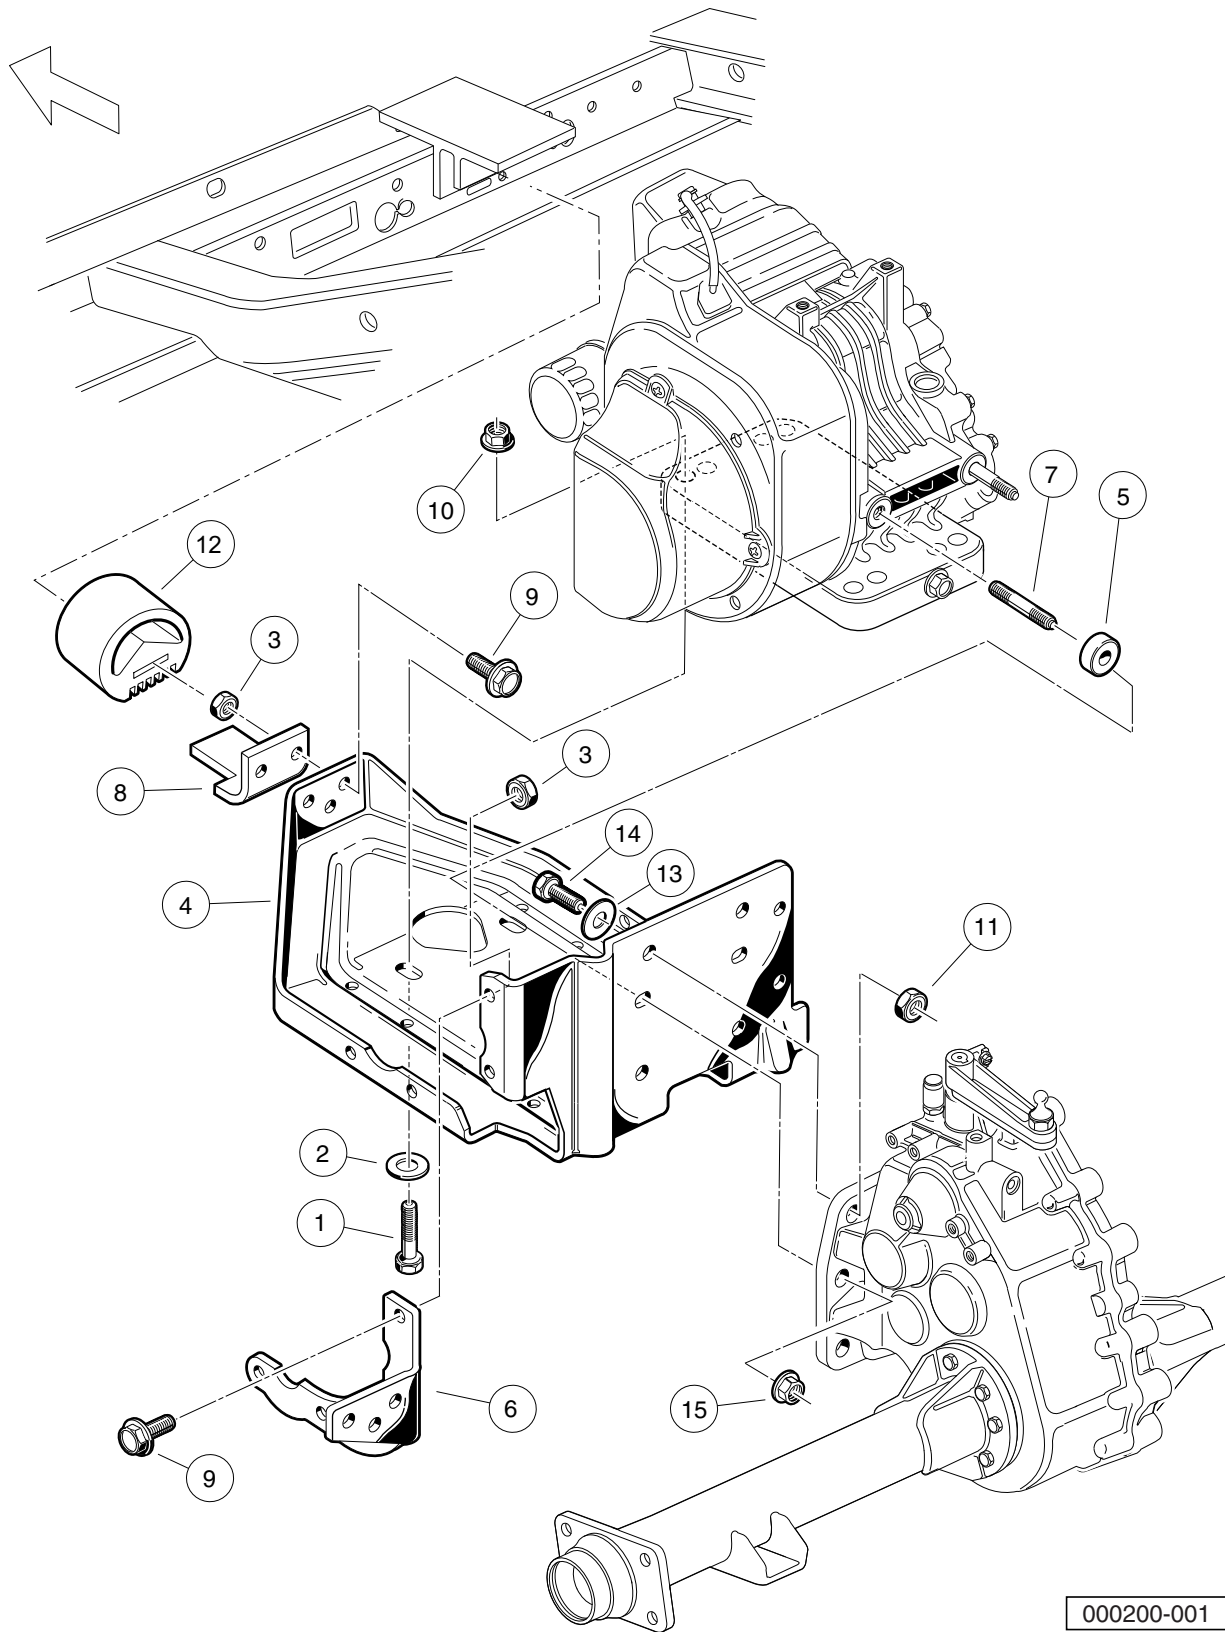7**G**

000200-001

FE290 ENGINE MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	4
2	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	4
3	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	6
4	<u>101827101</u>	Plate, Engine Mounting	1
5	<u>101832101</u>	Spacer, Powdered Metal	2
6	<u>101832701</u>	Stiffener (Flywheel Side)	1
7	<u>101833201</u>	Stud, M8-1.25 X 60mm Two-Ended	2
8	<u>101834601</u>	Snubber Bracket	1
9	<u>101884801</u>	Screw, 5/16-24 X 0.875 Grade-8	6
10	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4
11	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4
12	<u>102540301</u>	Inner Frame Snubber	1
13	<u>334</u>	Washer, 3/8 Type A Flat	4
14	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	4
15	<u>96704416</u>	Nut Flg, M8 X 1.25 Serrated	2

7

G

 
 
7

G

AS11 FE350 ENGINE

8

G

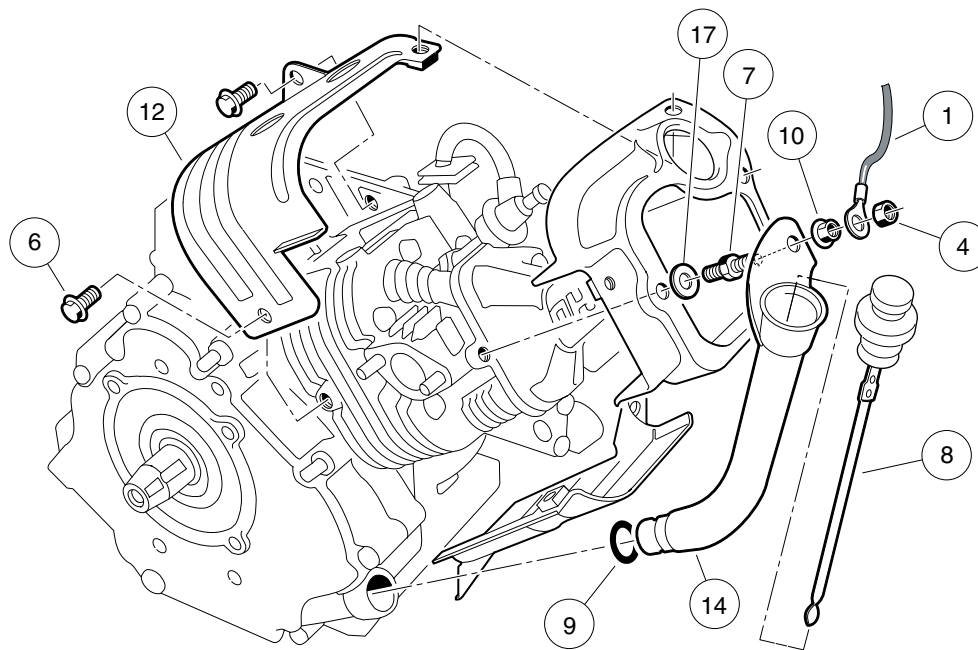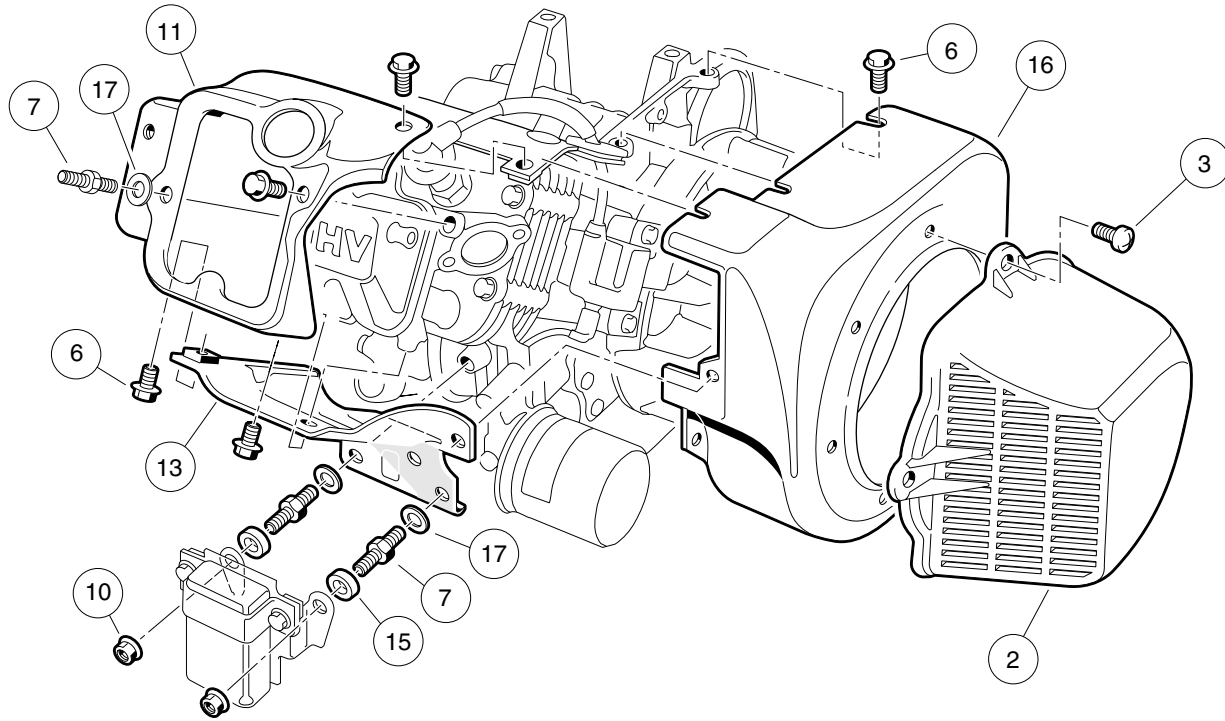


000201-001

AS11 FE350 ENGINE WITHOUT ACR (AUTOMATIC COMPRESSION RELEASE) – SHROUDS AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015332</u>	Wire Assembly, #10, Uninsulated	1
2	<u>1015649</u>	Shroud, Fan	1
3	<u>1015969</u>	Screw, M6-1.00 X 10mm Pan Hd	4
4	<u>101887601</u>	Locknut, M6-1.00 Nylon Insert	1
5	<u>101953802</u>	Engine, FE350 (cw) without ACR * (includes items 6 through 17)	1
6	<u>1016456</u>	Bolt, Flange Head, M6 x 1 x 12 mm	14
7	<u>1016507</u>	Bolt, Two-Ended	3
8	<u>1016531</u>	Dipstick	1
9	<u>1016539</u>	O-Ring	1
10	<u>1016547</u>	Nut, M6 Flange	3
11	<u>1017474</u>	Shroud, Engine	1
12	<u>1017475</u>	Shroud, Engine	1
13	<u>1017476</u>	Shroud, Engine	1
14	<u>1017486</u>	Tube, Oil Filler	1
15	<u>1017500</u>	Spacer 6.50 X 12 X 5.5	2
16	<u>101916101</u>	Housing, FE350 Fan	1
17	N/A	Washer, 6mm Flat	3
* Note: FE350 engine component listings span several pages.			

 8
G




AS11 FE350 ENGINE – IGNITION COMPONENTS AND FLYWHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016445	Bracket, RPM Limiter	1
2	<u>1016455</u>	Bolt, Flange Head	2
3	1016456	Bolt, Flange Head, M6 x 1 x 12 mm	2
4	<u>1016497</u>	Screw, Pan WP Cross	1
5	<u>1016544</u>	Screw	1
6	<u>1016561</u>	Clamp	1
7	<u>1016562</u>	Key	1
8	<u>1016578</u>	Ignition, Grommet	1
9	<u>1016579</u>	Band, RPM Limiter Mount	1
10	1016586	Damper, RPM Limiter	1
11	<u>1016587</u>	Clamp	1
12	<u>1016588</u>	Tube, 7mm X 10mm X 70mm	1
13	<u>1017448</u>	Bolt, Flanged	3
14	<u>1017455</u>	Plate, Flywheel Fan	1
15	<u>1017463</u>	Cap Asm Plug	1
16	<u>1017468</u>	Clamp	1
17	<u>1017490</u>	Washer, Flat	1
18	<u>101881101</u>	Spark Plug, OHV (Autolite)	1
19	<u>101909201</u>	Coil, Ignition	1
20	<u>101909301</u>	Lead Wire Assy	1
21	101909401	Limiter, RPM	1
22	101909501	Clamp, Steel	1
23	<u>101916201</u>	Flywheel	1
24	<u>101916301</u>	Fan (cw)	1
25	N/A	Nut, Hex, 18 mm Fine	1
26	<u>AM10724</u>	Spark Plug, OHV (NGK)	1

8

 
G

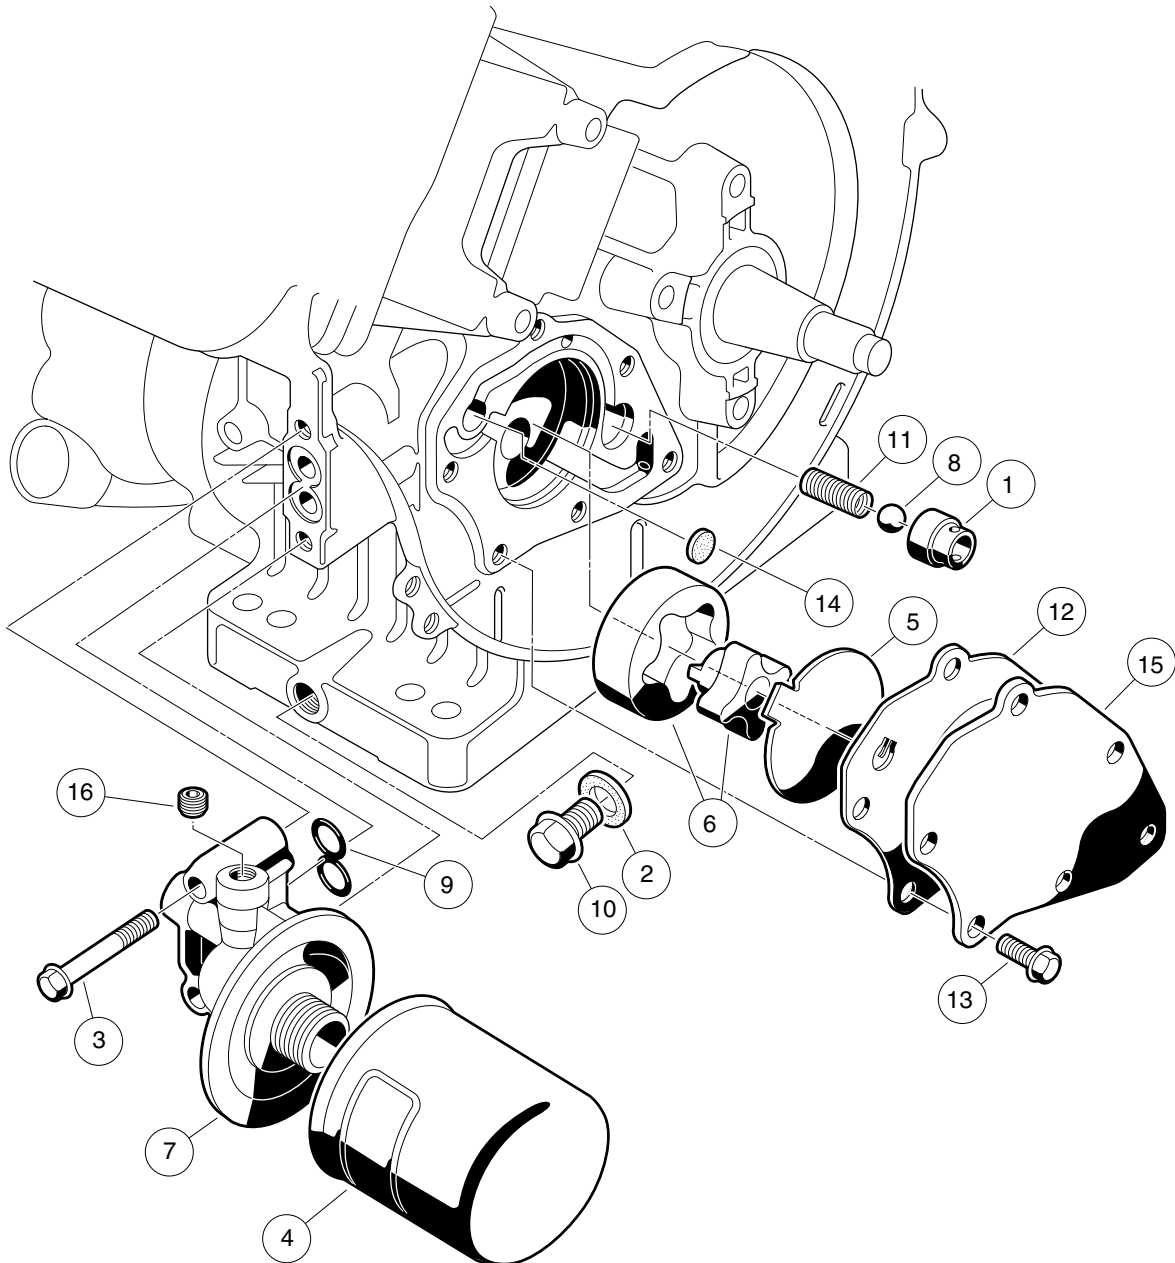

000203-001

FE350 ENGINE – OIL CIRCULATION

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	1016429	Seat, Value Oil Press Relief	1	
2	<u>1016432</u>	Gasket, Drain Plug	1	
3	<u>1016457</u>	Bolt, Flange Head	2	
4	<u>1016467</u>	Filter, Oil	1	
5	<u>1016473</u>	Plate, Oil Pump	1	
6	<u>101648203</u>	Oil Pump And Rotor	1	
7	<u>1016502</u>	Bracket, Oil Filter Mount	1	
8	<u>1016537</u>	Ball, Steel, Press, Relief	1	
9	<u>1016570</u>	O-Ring	1	
10	1016576	Plug, Drain	1	
11	<u>1016581</u>	Spring	1	
12	<u>1017442</u>	Gasket	1	
13	<u>1017456</u>	Bolt, Flanged	6	
14	<u>1017458</u>	Filter	1	
15	<u>1017460</u>	Cover, Pump	1	
16	<u>1017507</u>	Plug	2	

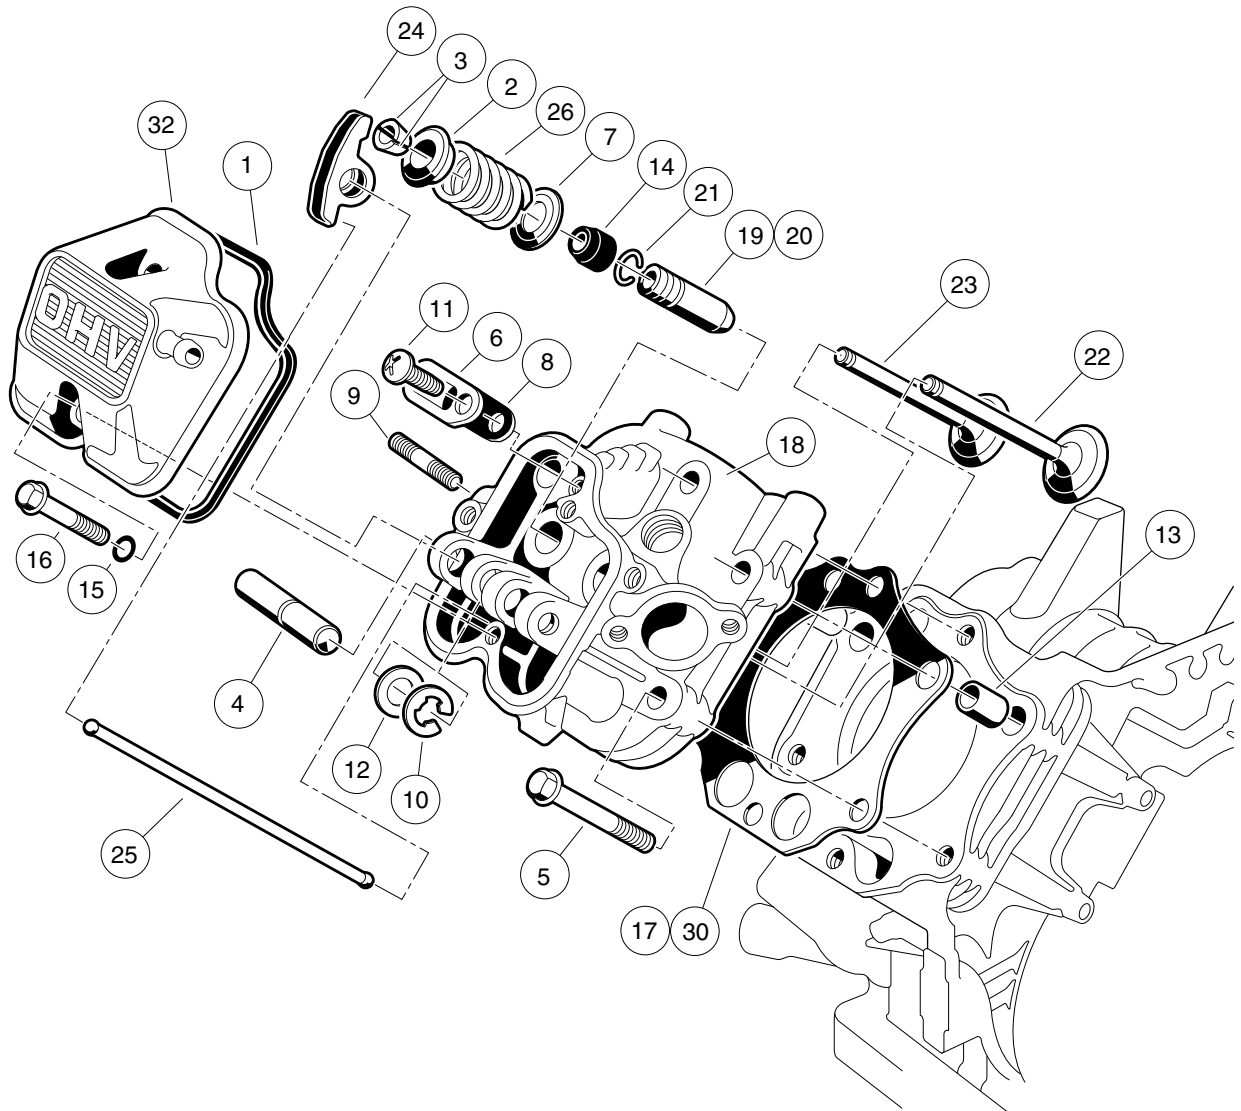 


000204-001

AS11 FE350 ENGINE – CYLINDER HEAD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016436</u>	Gasket, Rocker Case	1
2	<u>1016449</u>	Retainer, Valve Spring	2
3	<u>1016450</u>	Collet	4
4	<u>1016452</u>	Shaft, Rocker	1
5	<u>1016458</u>	Bolt, Flange Head, M8 x 1.25 x 45 mm	6
6	<u>1016474</u>	Plate	1
7	<u>1016479</u>	Seat, Spring	2
8	<u>1016483</u>	Valve	1
9	<u>1016489</u>	Stud, Two-Ended, M8-1.25	2
10	<u>1016517</u>	Circlip, Type-E	1
11	<u>1016544</u>	Screw	1
12	<u>1016549</u>	Washer, 12.1x19x1.8	1
13	<u>1016563</u>	Pin	2
14	<u>1016566</u>	Seal, Oil	2
15	<u>1016569</u>	O-Ring	2
16	<u>1016583</u>	Bolt, 6x35	2
17	<u>1017434</u>	Gasket, Head	1
18	<u>1017435</u>	Assembly, Cylinder Head, FE350 (includes items 19 through 21)	1
19	<u>1016518</u>	Guide, Valve, Exhaust	1
20	<u>1016519</u>	Guide, Valve	1
21	<u>1016560</u>	Snap Ring	2
22	<u>1017444</u>	Valve, Intake	1
23	<u>1017445</u>	Valve, Exhaust	1
24	<u>1017446</u>	Arm, Rocker	2
25	<u>1017454</u>	Rod, Push	2
26	<u>1017473</u>	Spring, Engine Valve	2
27	<u>102304801</u>	Kit, Gasket, FE350 (includes items 28 through 31)	1
28	<u>1016440</u>	Gasket, Engine to Insulator	1
29	<u>1016904</u>	Gasket, Exhaust	1
30	<u>1017434</u>	Gasket, Head	1
31	<u>1017443</u>	Gasket, Crankcase Cover	1
32	<u>102753401</u>	Case, Rocker	1
		Note: Item 28 is not a component of the FE350 engine.	

8

 G

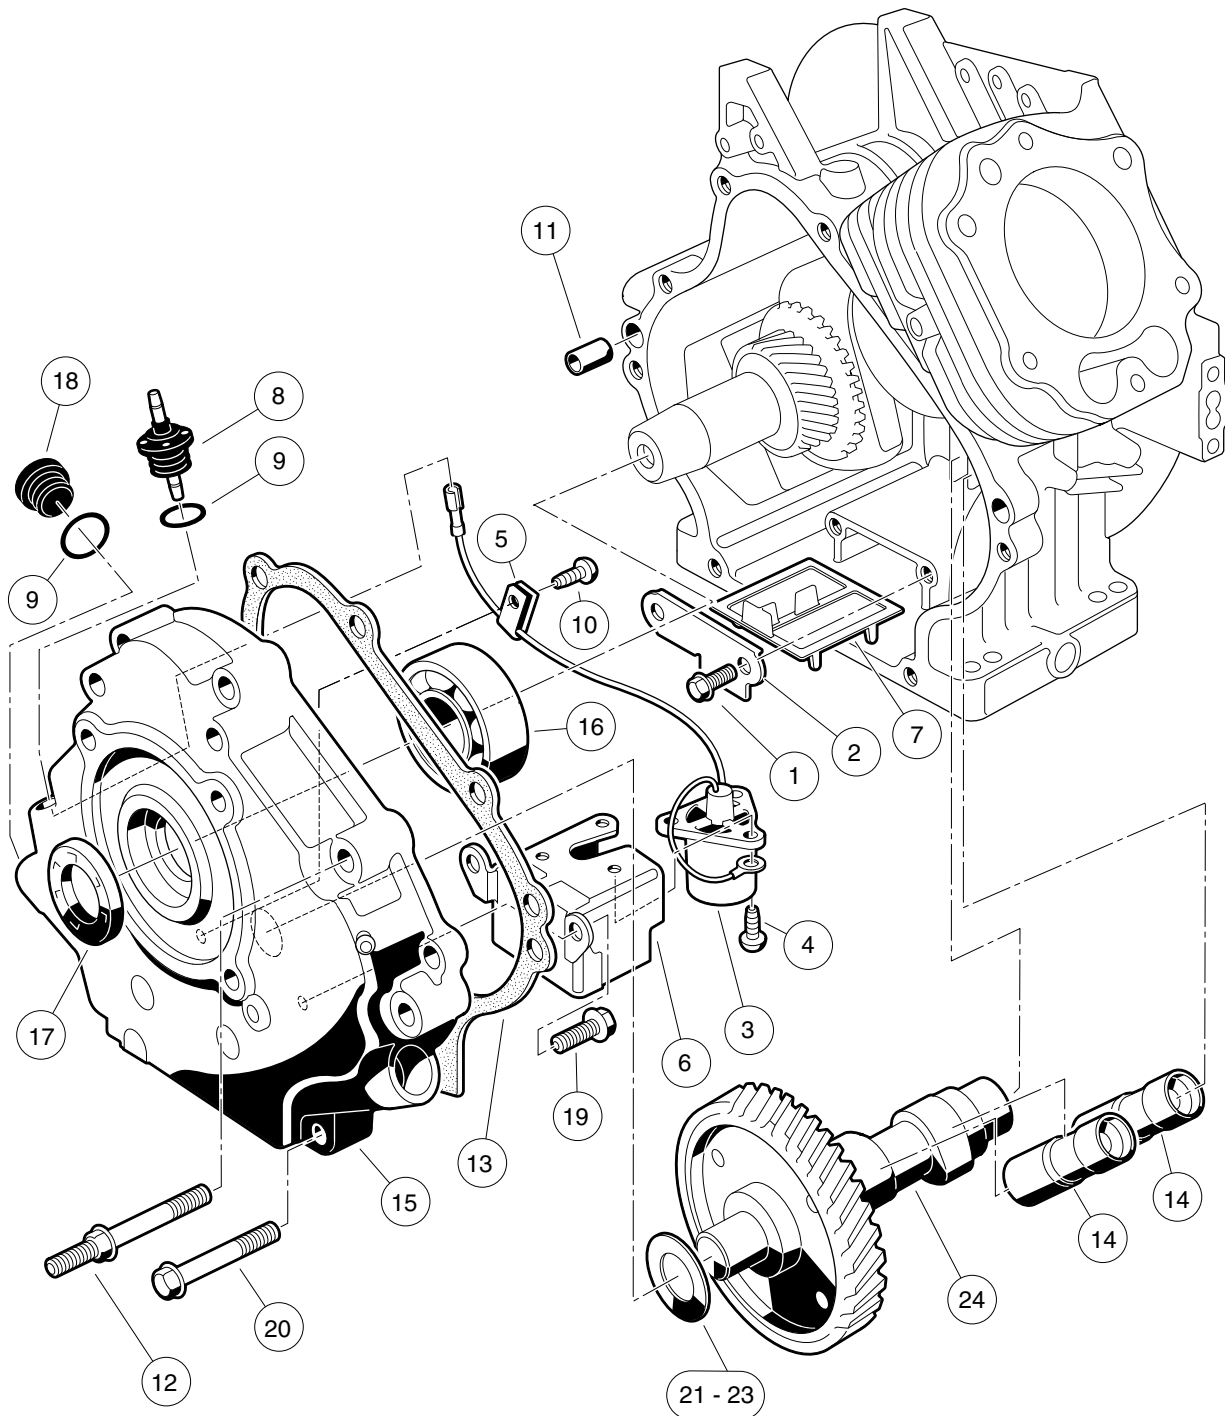


000205-002

AS11 FE350 ENGINE WITHOUT ACR – CRANKCASE, CAMSHAFT, AND OIL SENSOR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016454</u>	Bolt, Flange Head, M5 x 0.8 x 8 mm	2
2	<u>1016472</u>	Plate, Oil Filter Screen	1
3	<u>1016494</u>	Sensor, Oil Level	1
4	<u>1016496</u>	Screw, Cross Pan-Head, M4 x 0.7 x 8 mm	3
5	<u>1016506</u>	Clamp	1
6	<u>1016510</u>	Bracket, Switch, Oil Level	1
7	<u>1016521</u>	Screen, Oil Filter	1
8	<u>1016535</u>	Connector, Cord	1
9	<u>1016538</u>	O-Ring	2
10	<u>1016544</u>	Screw	1
11	<u>1016564</u>	Pin	2
12	<u>1016584</u>	Bolt, Two-Ended, M8 x 1.25 x 69 mm	2
13	<u>1017443</u>	Gasket, Crankcase Cover	1
14	<u>1017447</u>	Adjuster, Lash	2
15	<u>1017472</u>	Cover Crankcase	1
16	<u>1017487</u>	Bearing, Ball	1
17	<u>1017504</u>	Seal, Oil	1
18	<u>1017508</u>	Plug	1
19	<u>1017513</u>	Bolt Switch Bracket	2
20	<u>1017514</u>	Screw, M8-1.25 X 45mm Hex	6
21	<u>101751801</u>	Shim, 0.3	1
22	<u>101751802</u>	Shim, 0.4	1
23	<u>101751803</u>	Shim, 0.5	1
24	<u>102431001</u>	Camshaft, FE350 without ACR, 44-Tooth	1

 8
G

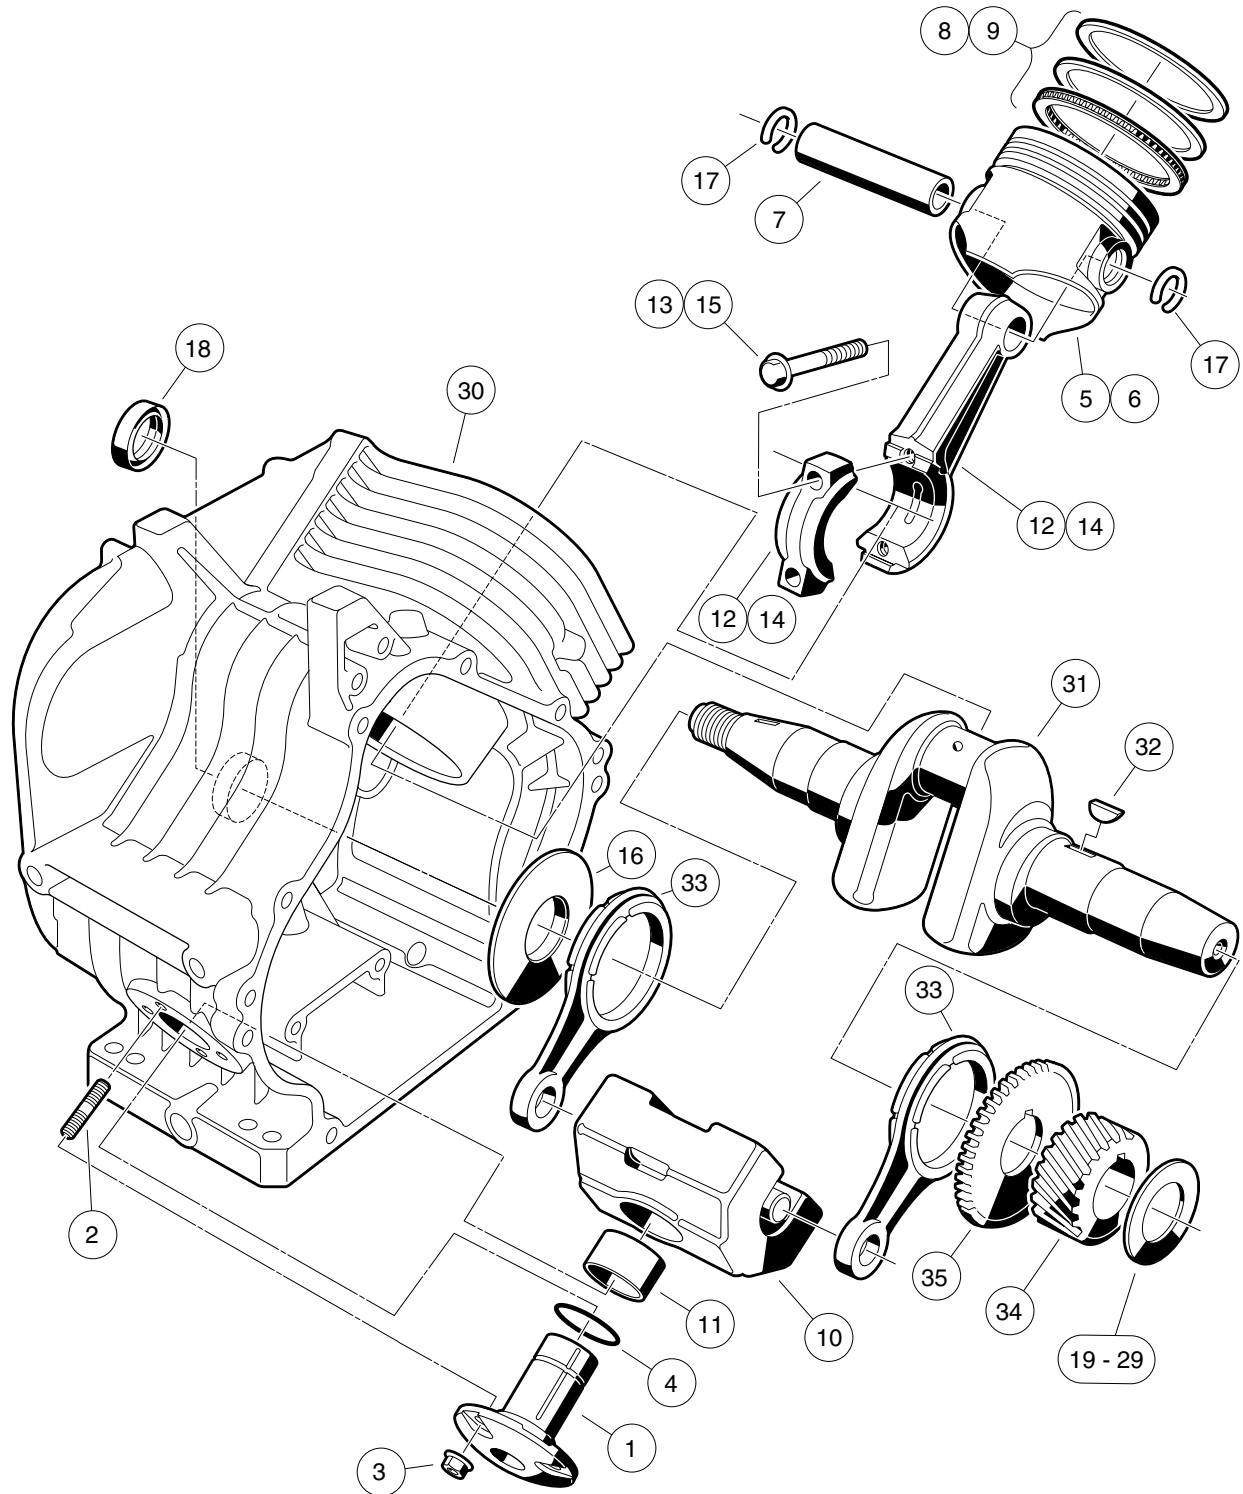


000206-001

AS11 FE350 ENGINE – CRANKCASE AND CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY	8	G
		1 2 3 4			
1	1016470	Shaft, Guide, Counterbalance	1		
2	<u>1016541</u>	Stud, 6x14	4		
3	1016547	Nut, M6 Flange	4		
4	<u>1016571</u>	O-Ring	1		
5	<u>101744901</u>	Piston, Standard	1		
6	<u>101744902</u>	Piston, 0.50 mm Oversize	1		
7	1017450	Pin, Piston	1		
8	<u>101745101</u>	Ring Set, Standard Piston	1		
9	<u>101745102</u>	Ring Set, Piston, 0.50 mm Oversize	1		
10	<u>1017453</u>	Fe400 Counterbalance Weight (includes item 11)	1		
11	1017510	Bearing, Plain	1		
12	101745701	Asm, Con. Rod Std (includes item 13)	1		
13	<u>1017512</u>	Bolt	2		
14	<u>101745702</u>	Rod Assembly Connecting Rod 0.5mm (includes item 15)	1		
15	<u>1017512</u>	Bolt	2		
16	1017501	Spacer	1		
17	<u>1017502</u>	Snap Ring	2		
18	<u>1017503</u>	Seal, Oil	1		
19	<u>101773301</u>	Shim, Crankshaft, 1.18mm	1		
20	<u>101773302</u>	Shim, Crankshaft, 1.25mm	1		
21	<u>101773303</u>	Shim, Crankshaft, 1.32mm	1		
22	<u>101773304</u>	Shim, Crankshaft, 1.39mm	1		
23	<u>101773305</u>	Shim, Crankshaft, 1.46mm	1		
24	<u>101773306</u>	Shim, Crankshaft, 1.53mm	1		
25	<u>101773307</u>	Shim, Crankshaft, 1.60mm	1		
26	<u>101773308</u>	Shim, Crankshaft, 1.67mm	1		
27	<u>101773309</u>	Shim, Crankshaft, 1.74mm	1		
28	<u>101773310</u>	Shim, Crankshaft, 1.11mm	1		
29	<u>101773311</u>	Shim, Crankshaft, 1.81mm	1		
30	<u>101916001</u>	Crankcase Complete, FE350 (cw)	1		
31	<u>102430901</u>	Crankshaft, FE350 Left-Hand, 22-Tooth (includes items 32 through 35)	1		
32	<u>1016562</u>	Key	1		
33	<u>1017471</u>	Rod	2		
34	N/A	Gear, Helical	1		
35	N/A	Gear, Spur	1		

8

 G

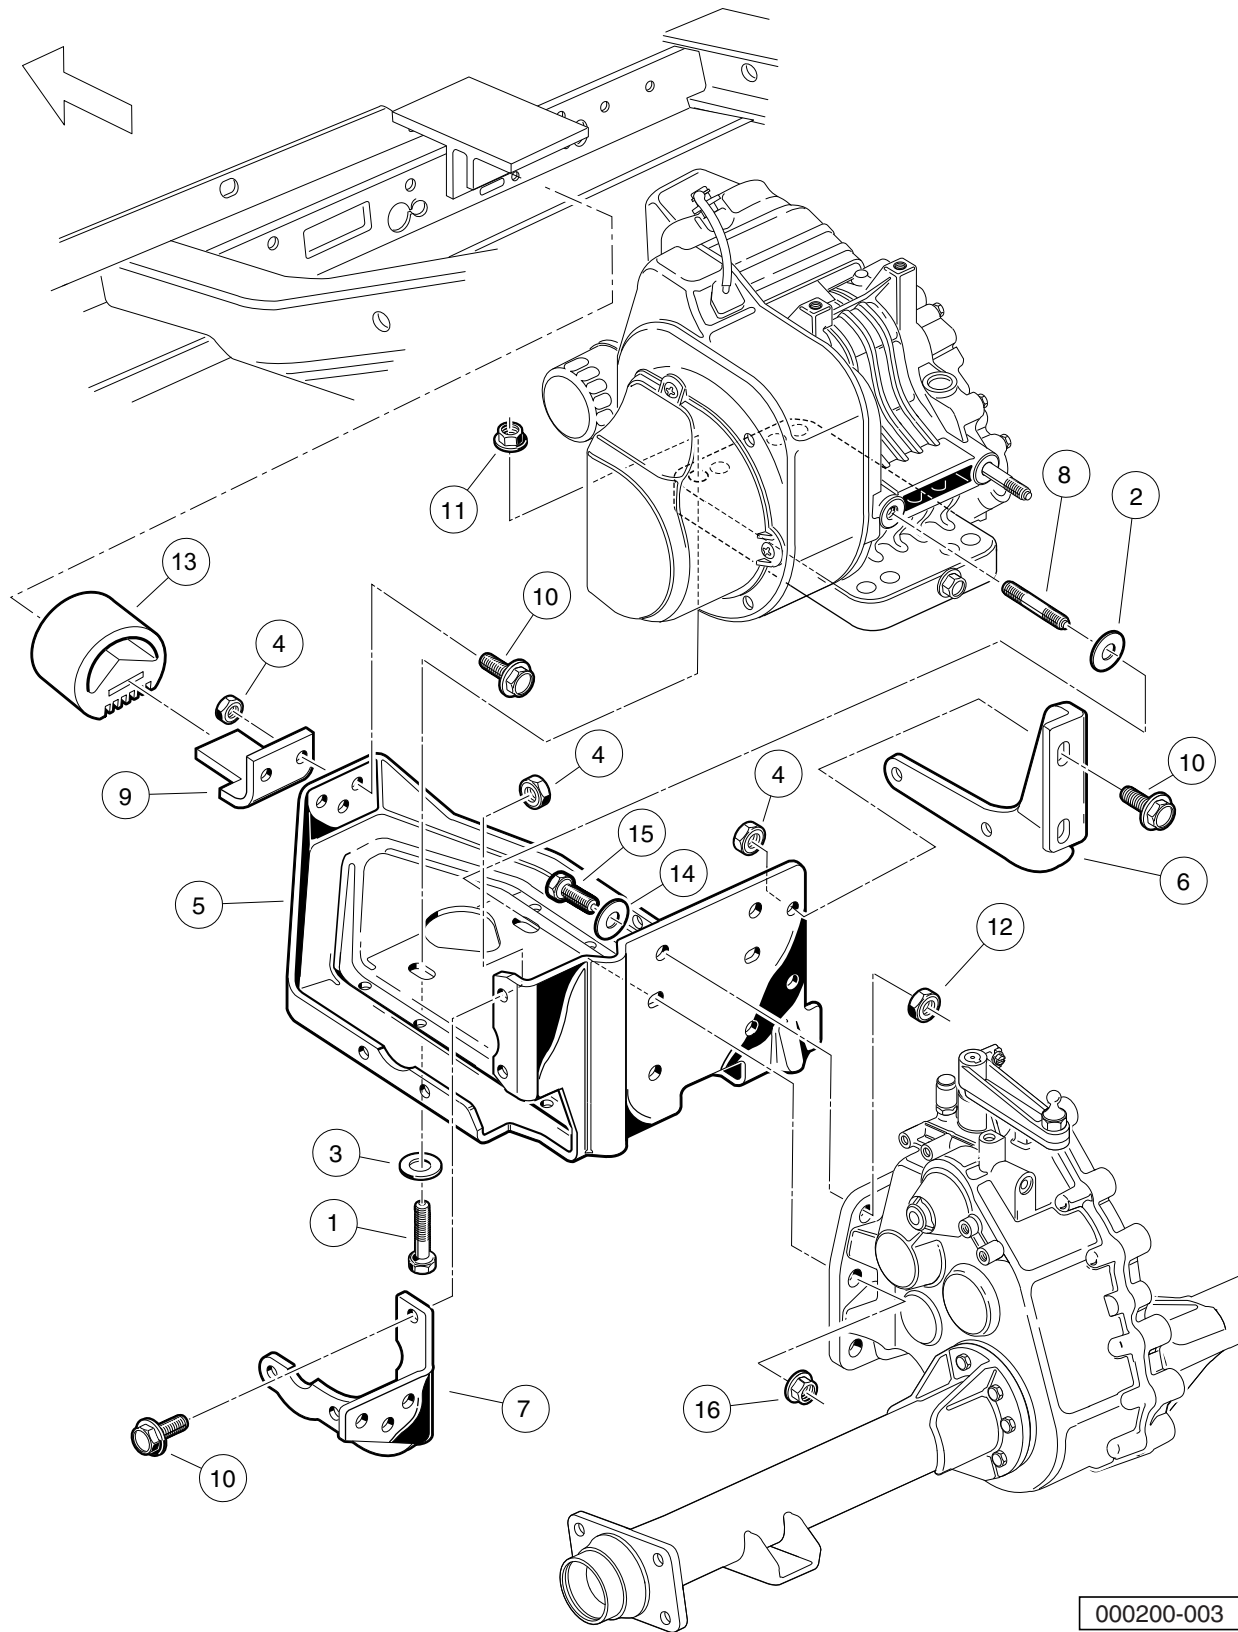

000200-003

FE350 ENGINE MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	4	
2	<u>1011697</u>	Washer, 5/16 Flat	2	
3	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	4	
4	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	10	
5	<u>101827101</u>	Plate, Engine Mounting	1	
6	<u>101832601</u>	Stiffener (PTO Side)	1	
7	<u>101832701</u>	Stiffener (Flywheel Side)	1	
8	<u>101833101</u>	Stud, M8-1.25 X 50 mm Two-Ended	2	
9	<u>101834601</u>	Snubber Bracket	1	
10	<u>101884801</u>	Screw, 5/16-24 X 0.875 Grade-8	10	
11	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4	
12	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4	
13	<u>102540301</u>	Inner Frame Snubber	1	
14	<u>334</u>	Washer, 3/8 Type A Flat	4	
15	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	4	
16	<u>96704416</u>	Nut Flg, M8 X 1.25 Serrated	2	

 
8

G

FUEL, INTAKE, AND GOVERNOR SYSTEMS

9

G

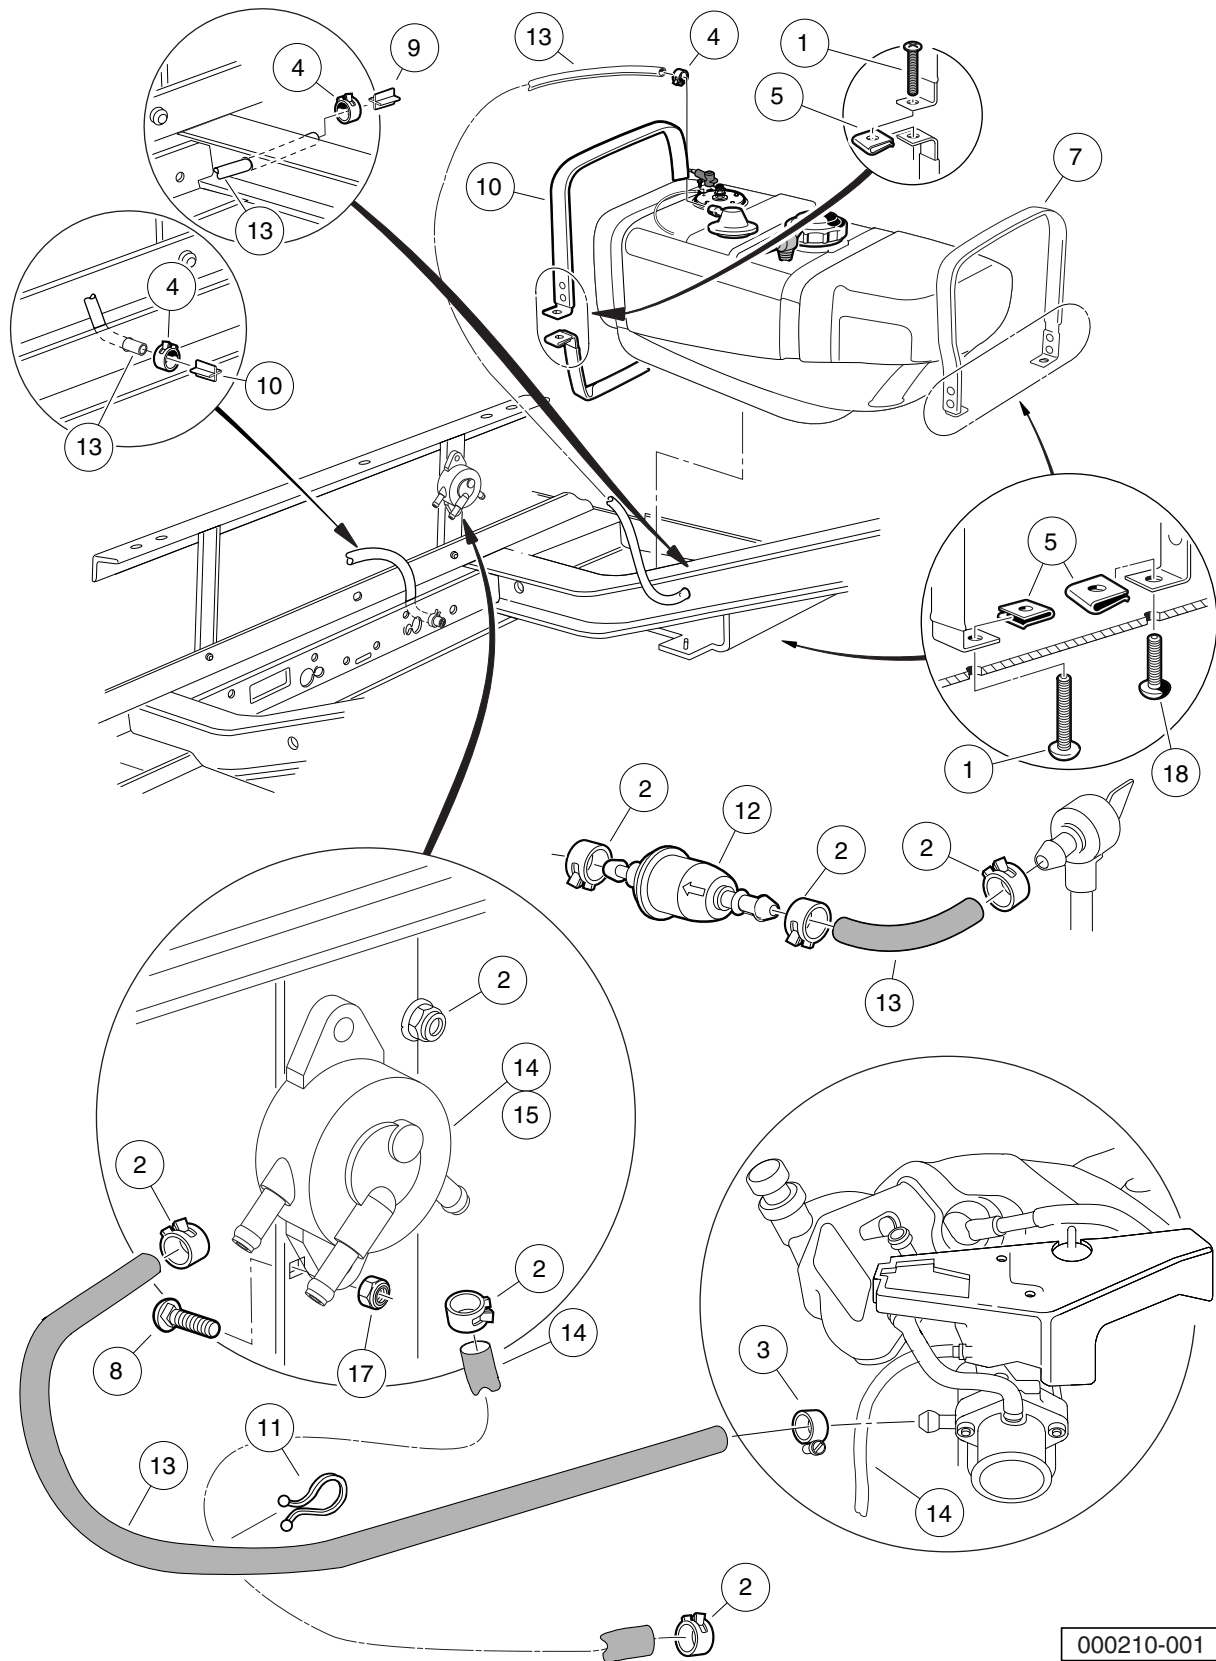


000210-001

FUEL SYSTEM

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011988</u>	Screw, 1/4-20 X 2.00 Phillips Truss-Head	2
2	<u>1012649</u>	Clamp, 0.460 Red Hose	7
3	<u>1013687</u>	Clamp, 3/8" Hose (screw type)	1
4	<u>1013746</u>	Clamp, 0.301 ID Hose	3
5	<u>1014116</u>	Nut, 1/4-20 Speed	3
6	<u>1014524</u>	Kit, Impulse Pump Rebuild	1
7	<u>1014928</u>	Fuel Strap Assembly Rear	1
8	<u>1017203</u>	Carriage Bolt	2
9	<u>101824401</u>	Vent Barb	2
10	<u>101955301</u>	Fuel Strap Assy, Front	1
11	<u>101987701</u>	Clamp, Plastic Tie	1
12	<u>102003201</u>	Filter, Fuel, 30 Micron	1
13	<u>102865101</u>	Fuel Line	1
14	<u>103781101</u>	Kit, Fuel Pump Retrofit (includes items 15 and 16)	1
15	<u>103010101</u>	Pump, Fuel, Impulse, Fh	1
16	<u>103781201</u>	Instr, Fuel Pump Retrofit	1
17	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2
18	<u>8248</u>	Screw, 1/4-20 X 0.75 Truss-Head Machine	1

9

 
G

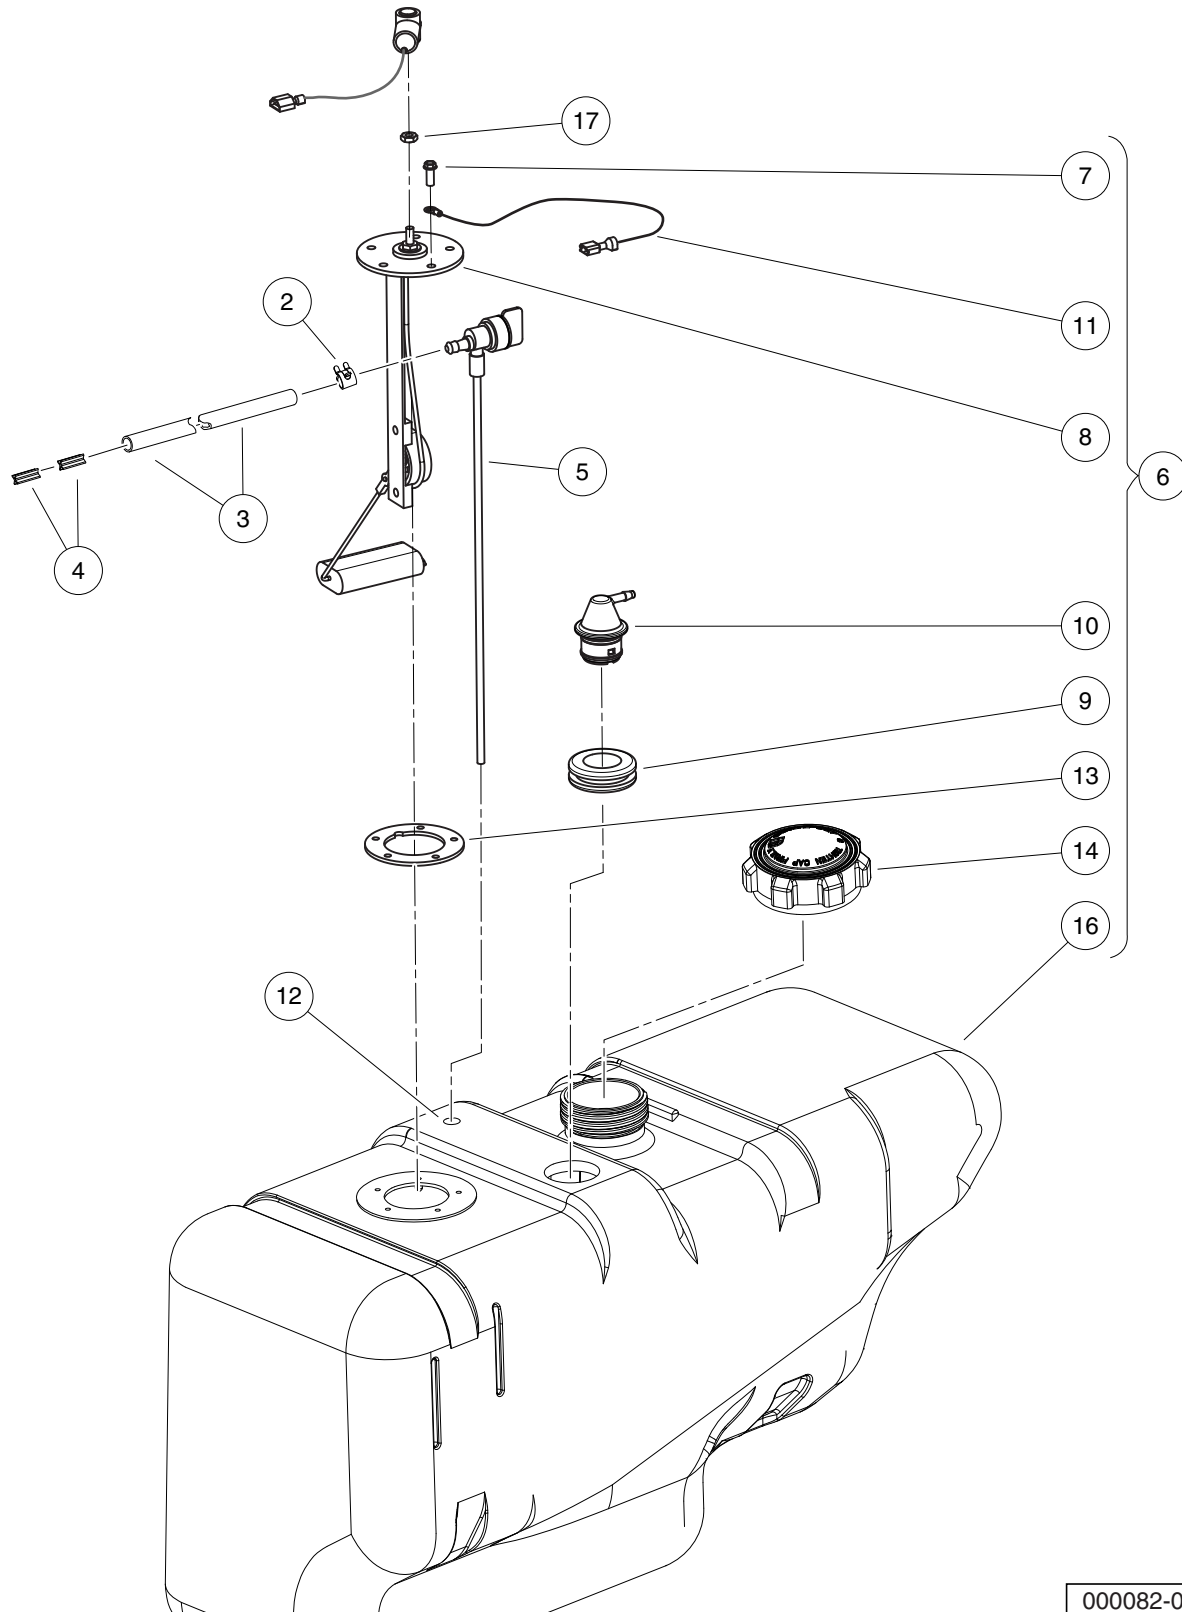

000082-003

FUEL TANK WITH FUEL LEVEL SENDING UNIT

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	1016004	Tank Kit w/Sending Unit (includes items 2 through 6)	1	
2	<u>1013746</u>	Clamp, 0.301 ID Hose	2	
3	<u>1015137</u>	Fuel Line (available by the foot)	1	
4	<u>101824401</u>	Vent Barb	2	
5	101896901	Fuel Pickup w/Shut-Off Valve	1	
6	<u>103651901</u>	Asm, Tank, Ds Utl W/su† Nano (includes items 7 through 16)	1	
7	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	5	
8	<u>1013462</u>	Sending Unit, Fuel Level *	1	
9	<u>1015139</u>	Insulation Grommet	1	
10	<u>1015143</u>	Vent, Fuel Tank	1	
11	1015921	Wire Assembly #16 Black	1	
12	<u>102406701</u>	Bushing, Line, Return	1	
13	<u>102522001</u>	Gasket, Rubber	1	
14	<u>103372101</u>	Cap, Fuel Tank, Gas, Ratchet	1	
15	<u>103372302</u>	Fuel Pickup w/Shut-Off Valve, 288mm	1	
16	103776901	Tank, Fuel, Top, W/su Nano	1	
17	<u>8797</u>	Nut, #10-32 Brass Hex	1	
* Note: Must replace fuel sending unit gasket when servicing this component.				

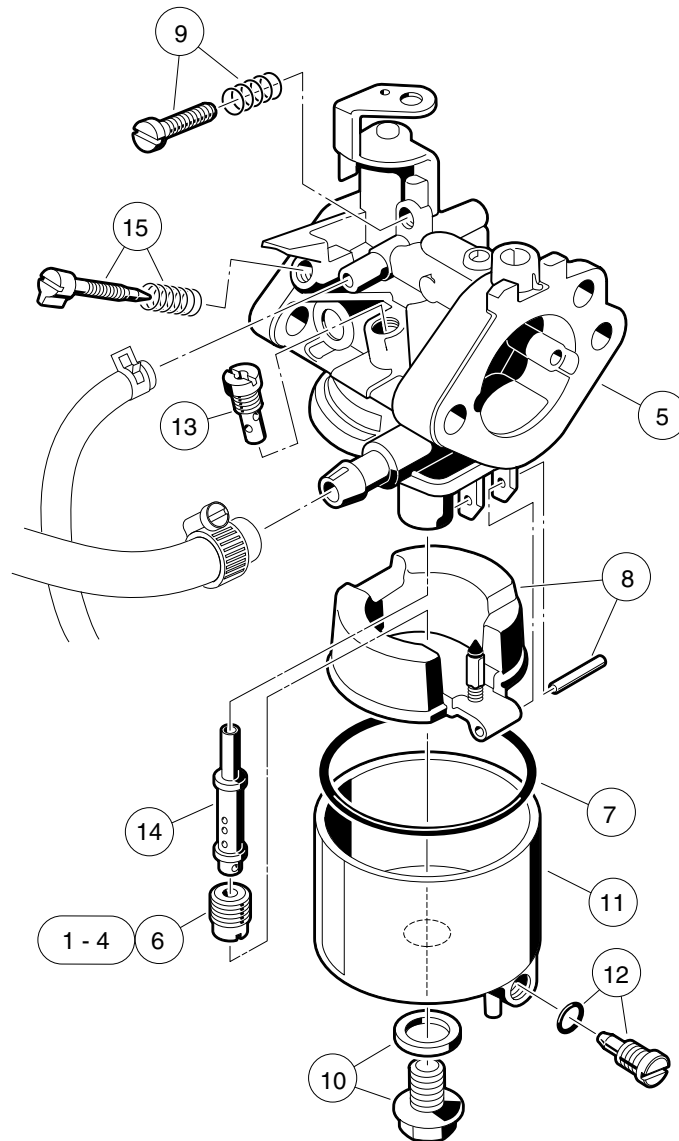 


000211-001

CARBURETOR ASSEMBLY – FE290

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101642572</u>	Jet, Altitude, # 72	1
2	<u>101642575</u>	Jet, Altitude, # 75	1
3	<u>101642578</u>	Jet, Altitude, # 78	1
4	<u>101642580</u>	Jet, Altitude, # 80	1
5	<u>101905601</u>	Carburetor Assembly, FE290D (includes items 6 through 15)	1
6	<u>101642582</u>	Jet, Altitude, # 82	1
7	<u>1016437</u>	Gasket, Carburetor Bowl OHV	1
8	<u>1016486</u>	Float Assembly	1
9	<u>1016501</u>	Screw Assembly	1
10	<u>1016585</u>	Bolt	1
11	<u>1017461</u>	Chamber Assembly, Float (includes item 12)	1
12	<u>1016499</u>	Screw Assembly	1
13	<u>101973101</u>	Jet, #40 Pilot	1
14	<u>101973201</u>	Nozzle, Main	1
15	N/A	Assembly, Pilot Air Screw	1
Note: <u>101642582</u> for 0 - 3,000 feet; <u>101642580</u> for 3,000 - 5,000 feet; <u>101642578</u> for 5,000 - 8,000 feet; <u>101642575</u> for 8,000 - 10,000 feet; <u>101642572</u> for 10,000 feet and higher.			

9

 G

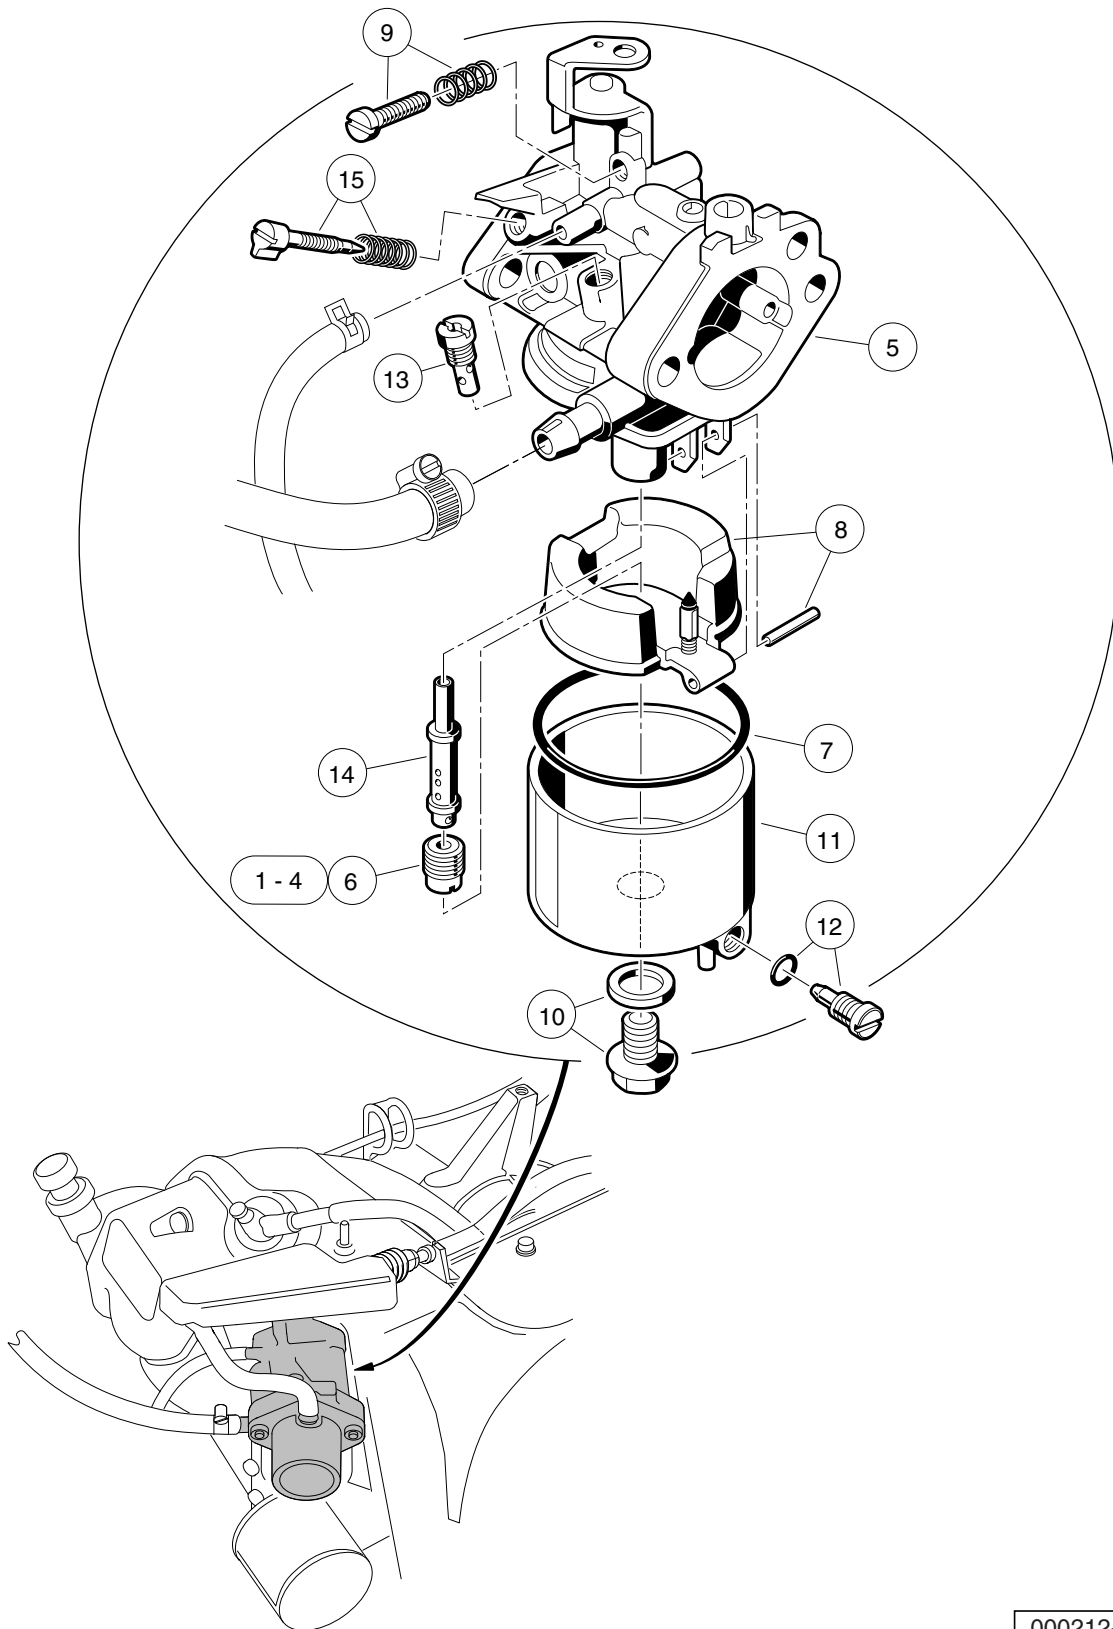


000212-001

CARBURETOR ASSEMBLY – FE350

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101642575</u>	Jet, Altitude, # 75	1
2	<u>101642578</u>	Jet, Altitude, # 78	1
3	<u>101642580</u>	Jet, Altitude, # 80	1
4	<u>101642582</u>	Jet, Altitude, # 82	1
5	<u>101905901</u>	Carburetor, FE350D (includes items 6 through 15)	1
6	<u>101642585</u>	Jet, Altitude, # 85	1
7	<u>1016437</u>	Gasket, Carburetor Bowl OHV	1
8	<u>1016486</u>	Float Assembly	1
9	<u>1016501</u>	Screw Assembly	1
10	<u>1016585</u>	Bolt	1
11	<u>1017461</u>	Chamber Assembly, Float (includes item 12)	1
12	<u>1016499</u>	Screw Assembly	1
13	<u>101973101</u>	Jet, #40 Pilot	1
14	<u>101973301</u>	Nozzle, Main	1
15	N/A	Assembly, Pilot Air Screw	1
Note: <u>101642585</u> for 0 - 3,000 feet; <u>101642582</u> for 3,000 - 5,000 feet; <u>101642580</u> for 5,000 - 8,000 feet; <u>101642578</u> for 8,000 - 10,000 feet; <u>101642575</u> for 10,000 feet and higher.			


9

 G



CARBURETOR INSTALLATION – FE290


ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>1011697</u>	Washer, 5/16 Flat	1	
2	<u>1013746</u>	Clamp, 0.301 ID Hose	1	
3	<u>1015137</u>	Fuel Line (available by the foot)	1	
4	<u>1016103</u>	Screw, Pan Hd Tx, Taptite 6-32	2	
5	<u>1016438</u>	Gasket, Carb To Intake Manifold	1	
6	<u>1016439</u>	Gasket, Insulator	1	
7	<u>1016440</u>	Gasket, Engine to Insulator	1	
8	<u>1016441</u>	Gasket, Sprg Brkt To Carb OHV	1	
9	<u>1016444</u>	Bracket, Throttle Spring Return	1	
10	1016480	Pipe, Intake Manifold	1	
11	101648102	Insulator, Carburetor	1	
12	<u>101649002</u>	Stud, M6-1.00 Two-Ended	2	
13	1016547	Nut, M6 Flange	2	
14	<u>1016572</u>	Tube, Crankcase Vent	1	
15	<u>1016582</u>	Spring, Throttle Return	1	
16	<u>1017466</u>	Clamp	2	
17	101820201	Shield, Governor	1	
18	<u>101887601</u>	Locknut, M6-1.00 Nylon Insert	1	

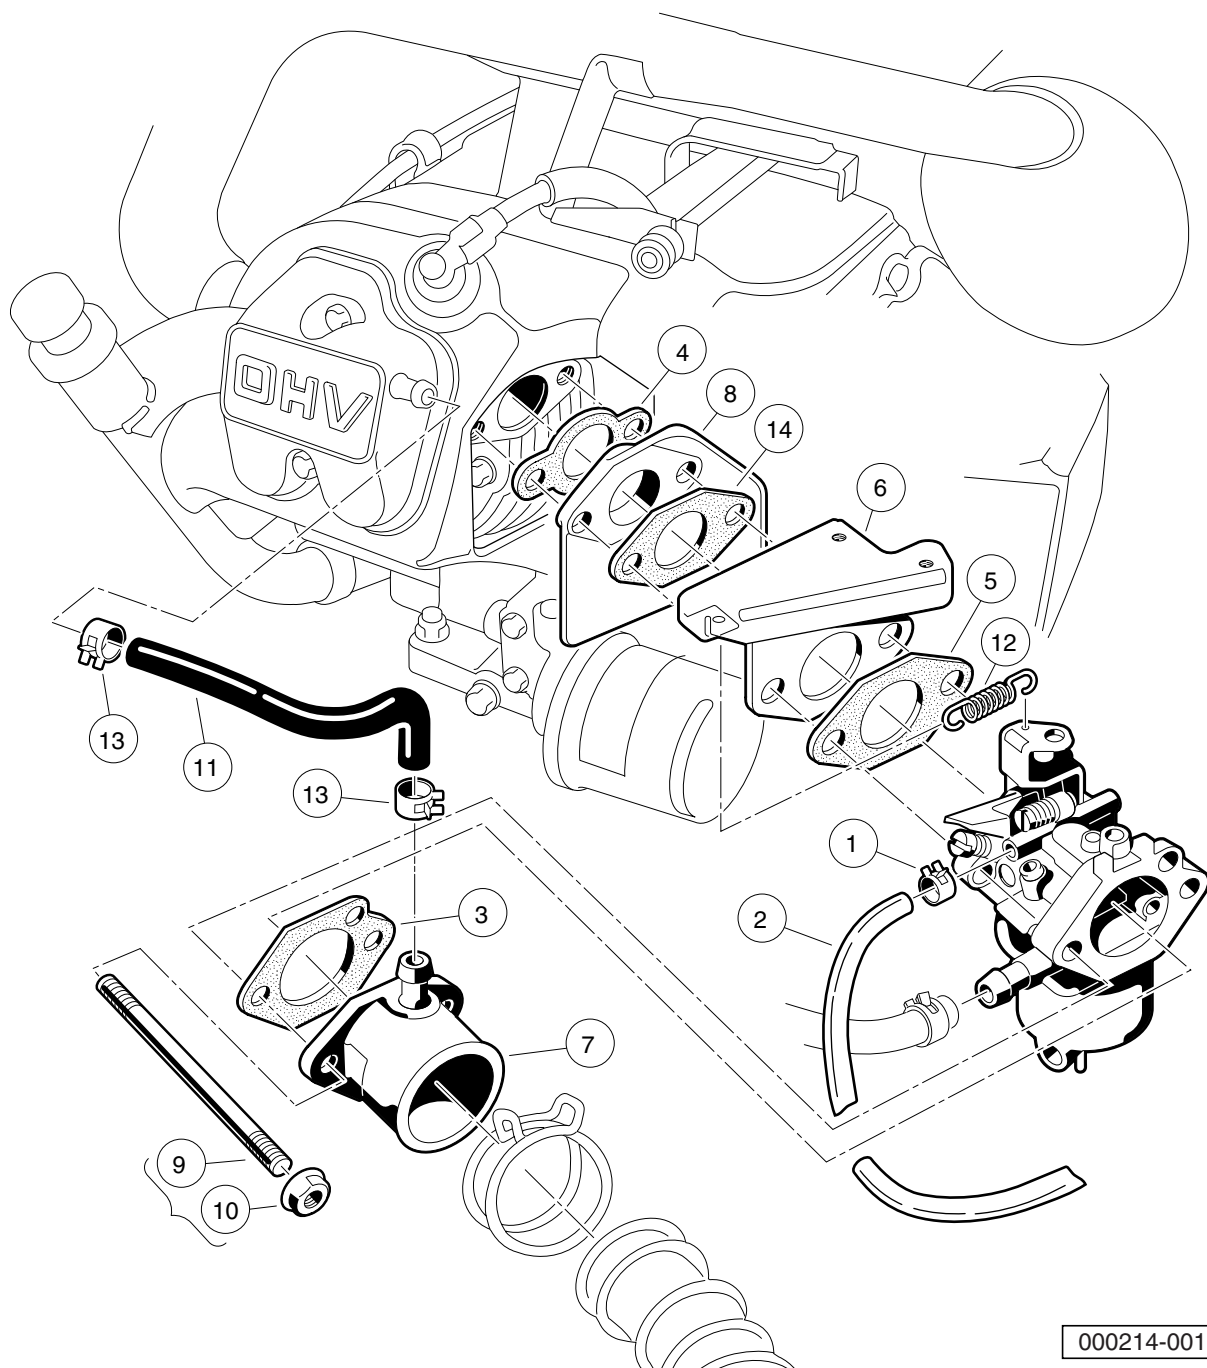 

000214-001

CARBURETOR INSTALLATION – FE350


ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>1013746</u>	Clamp, 0.301 ID Hose	1	
2	<u>1015137</u>	Fuel Line (available by the foot)	1	
3	<u>1016438</u>	Gasket, Carb To Intake Manifold	1	
4	<u>1016440</u>	Gasket, Engine to Insulator	1	
5	<u>1016441</u>	Gasket, Sprg Brkt To Carb OHV	1	
6	<u>1016444</u>	Bracket, Throttle Spring Return	1	
7	1016480	Pipe, Intake Manifold	1	
8	101648102	Insulator, Carburetor	1	
9	<u>101649002</u>	Stud, M6-1.00 Two-Ended	2	
10	1016547	Nut, M6 Flange	2	
11	<u>1016572</u>	Tube, Crankcase Vent	1	
12	<u>1016582</u>	Spring, Throttle Return	1	
13	<u>1017466</u>	Clamp	2	
14	<u>101973401</u>	Gasket, Insulator To Bracket	1	

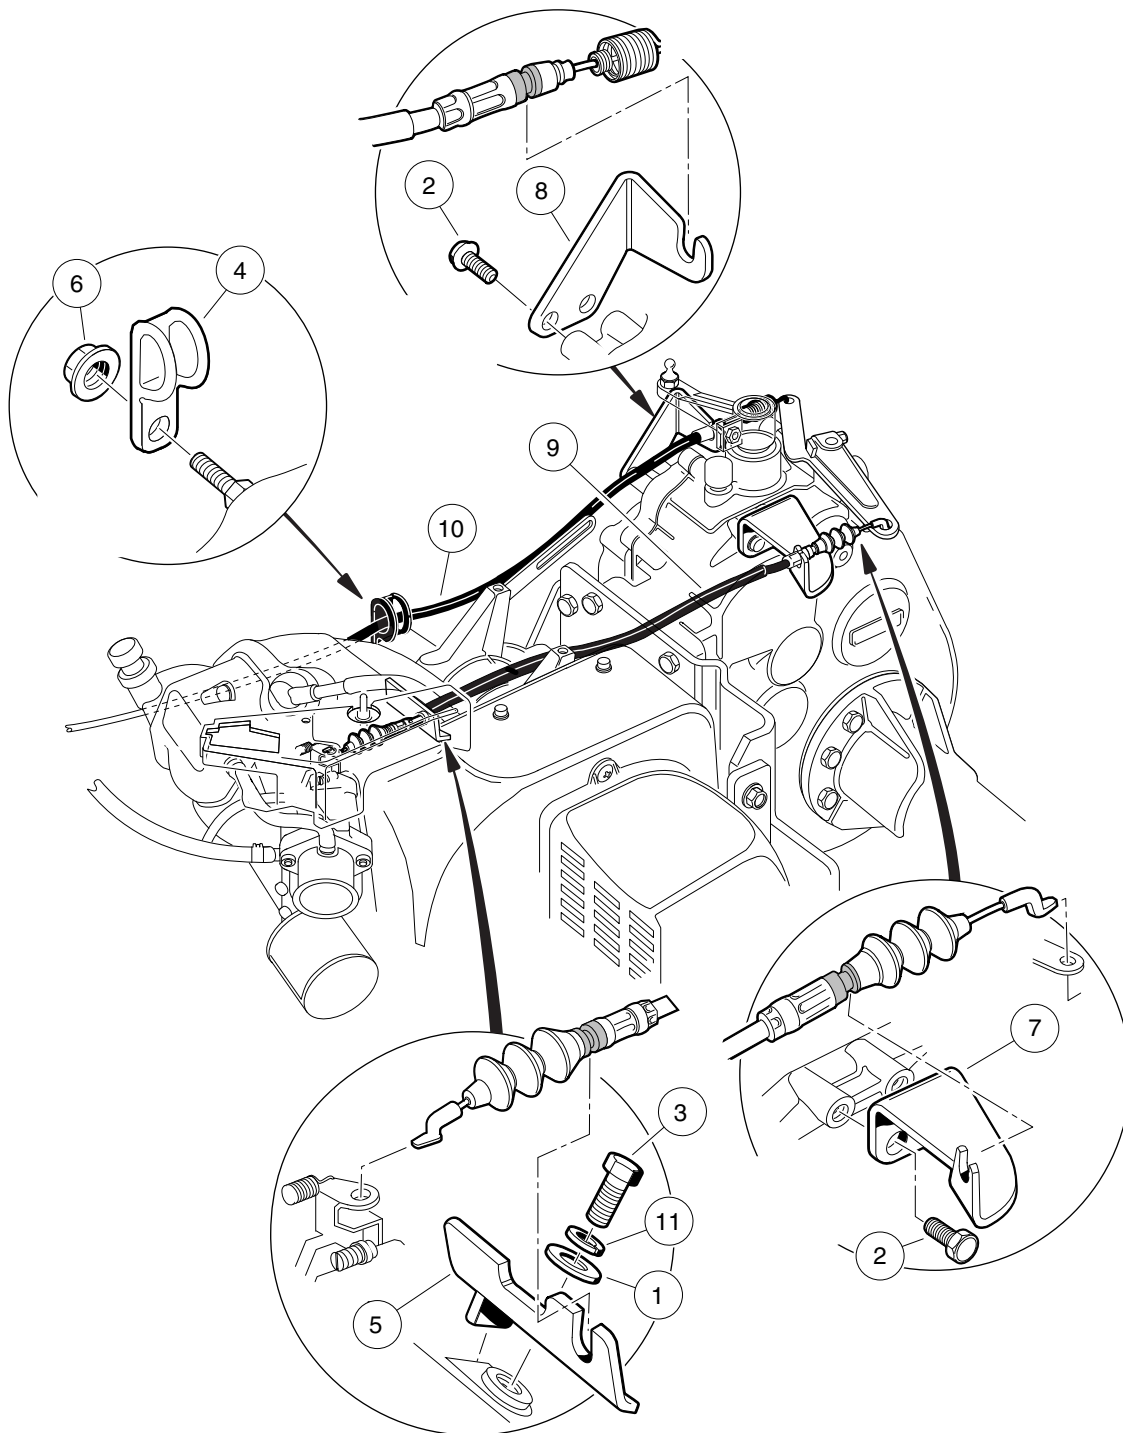 

000215-001

GOVERNOR AND ACCELERATOR CABLES

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>1011697</u>	Washer, 5/16 Flat	1	
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4	
3	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	1	
4	<u>1013700</u>	Clamp	2	
5	<u>101584502</u>	Bracket, Governor Cable Snap-In	1	
6	<u>1016546</u>	Nut	2	
7	<u>101832202</u>	Bracket, Rear Governor Cable Snap-In	1	
8	<u>101832302</u>	Bracket, Rear Accelerator Cable Snap-In	1	
9	<u>102336001</u>	Cable, Governor, Snap-In	1	
10	<u>102336101</u>	Cable, Accelerator, Snap-In	1	
11	<u>7174</u>	Lockwasher, 5/16 Split	1	

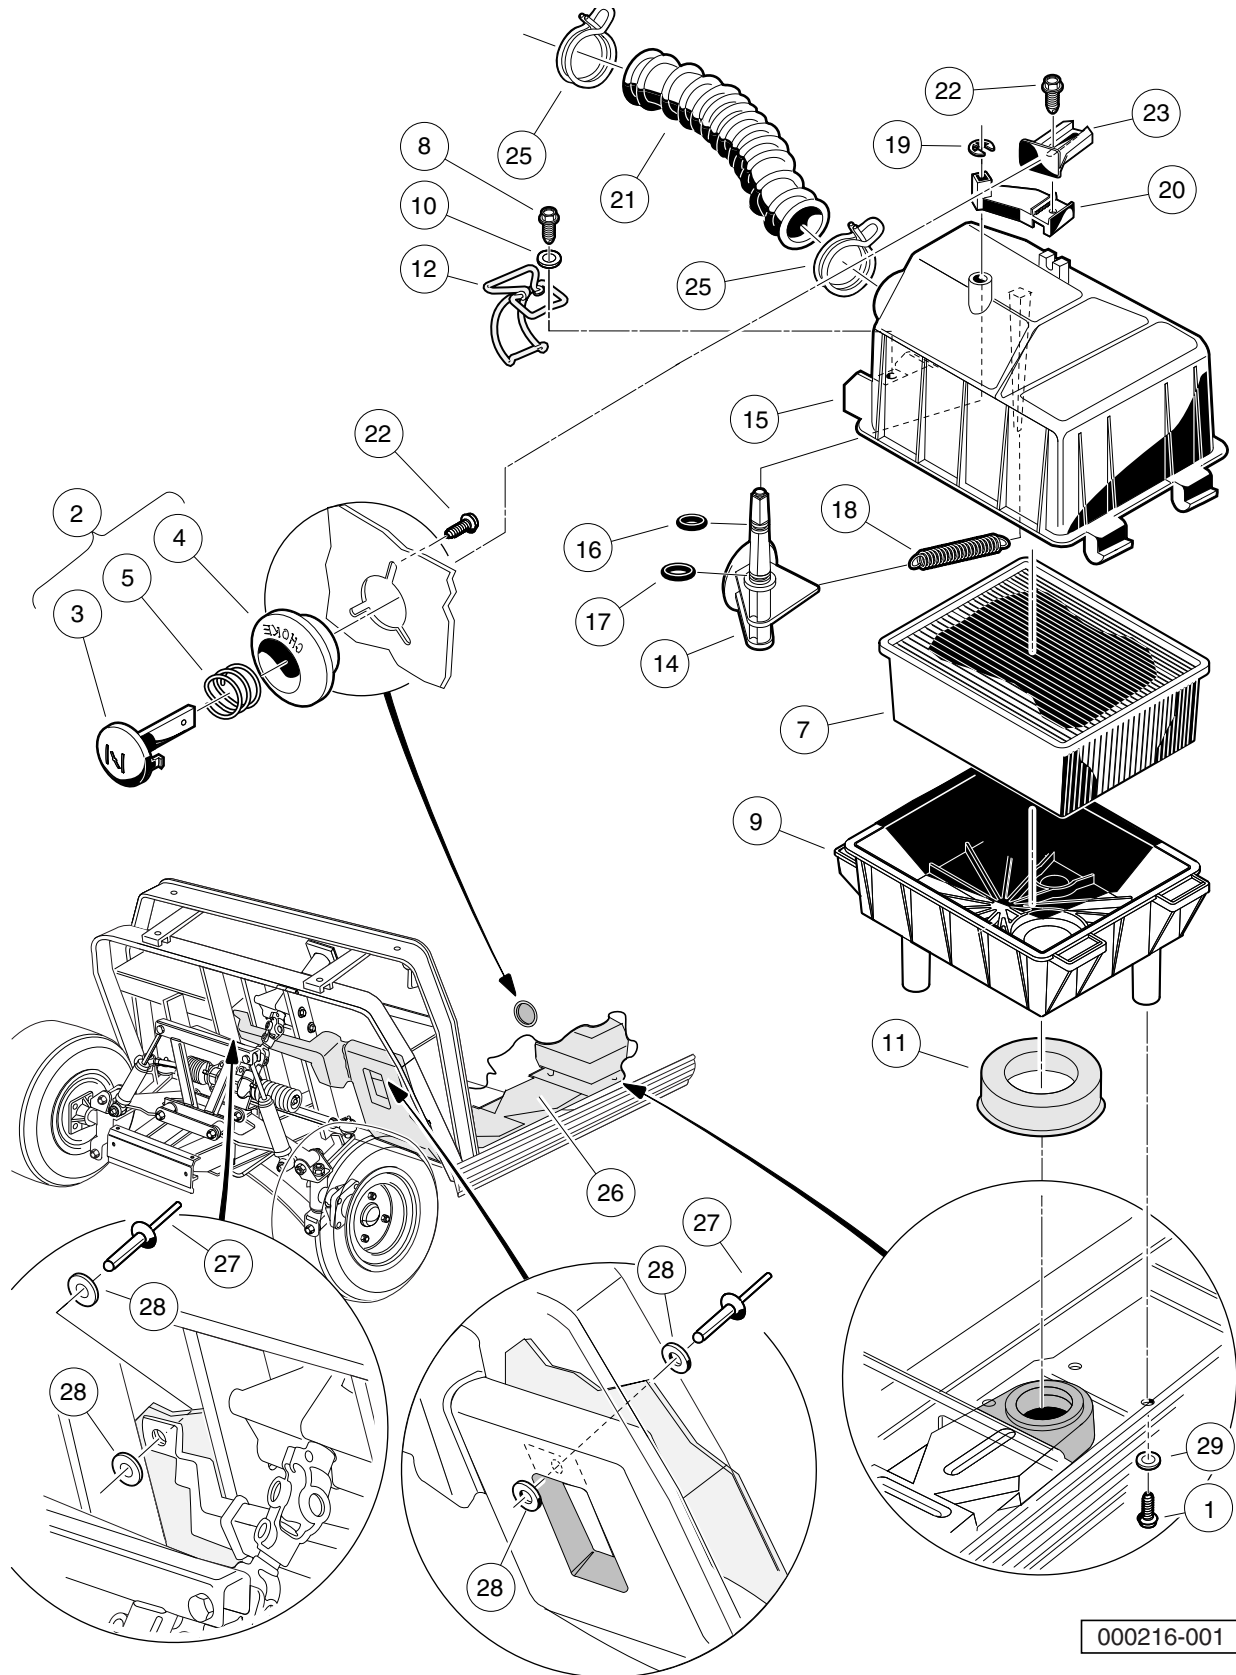 

000216-001

INTAKE DUCT, CHOKE, AND AIR BOX ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	3
2	<u>101805701</u>	Button Assembly, Choke (includes items 3 through 5)	1
3	<u>101811401</u>	Lever, Choke	1
4	<u>101811501</u>	Guide, Choke Lever	1
5	<u>101856201</u>	Compression Spring	1
6	<u>101821501</u>	Assembly, Air Box (includes items 7 through 13)	1
7	<u>1015426</u>	Filter, Air	1
8	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	2
9	<u>101811901</u>	Bottom, Air Box	1
10	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	2
11	<u>101921501</u>	Seal, Intake	1
12	<u>101925701</u>	Latch, Wireform	2
13	<u>101972801</u>	Top Assy, Air Box (includes items 14 through 20)	1
14	N/A	Valve, Choke	1
15	101811801	Top, Air Box	1
16	N/A	O-Ring, 5/16	1
17	N/A	O-Ring, 3/8	1
18	<u>101812301</u>	Spring, Extension Return	1
19	<u>101813001</u>	Retaining Ring 0.25, Shaft	1
20	<u>101917601</u>	Lever, Choke	1
21	<u>101837101</u>	Hose, Air Intake	1
22	<u>101850301</u>	Screw, #12-16 X 0.50 Washer-Head Hi-Lo	4
23	<u>101917701</u>	Choke Positioner	1
24	<u>101971001</u>	Tape Kit, Air Duct Repair	1
25	<u>101971301</u>	Clamp, 1.58" ID Hose	2
26	<u>103520301</u>	Duct, Air Intake, Ds	1
27	<u>1606</u>	Rivet, 3/16 X .500 Alum Pop	2
28	<u>183</u>	Washer, #10 Type A Flat	4
29	<u>332</u>	Washer, 1/4 Type A Narrow Flat	3
Note: Item 25 is not illustrated.			

9

G

9

G


EXHAUST SYSTEM

10

G

EXHAUST SYSTEM – FE290 ENGINE

ITEM	PART NO.	DESCRIPTION	QTY	10	G
		1 2 3 4			
1	<u>1012528</u>	Nut, M8-1.25 Hex	2		
2	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	1		
3	<u>1013734</u>	Lockwasher, 8mm Split	2		
4	<u>1015330</u>	Gasket, Exhaust	1		
5	<u>1015814</u>	Bracket, Muffler Mounting	1		
6	<u>1017689</u>	Clamp, 5" Muffler Hose	1		
7	<u>101859301</u>	Exhaust System, FE290	1		
8	<u>1241</u>	Washer, 5/16 Type A Flat	1		
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2		
10	<u>451</u>	Lockwasher, 1/4 Split	2		
11	<u>7174</u>	Lockwasher, 5/16 Split	1		
12	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2		

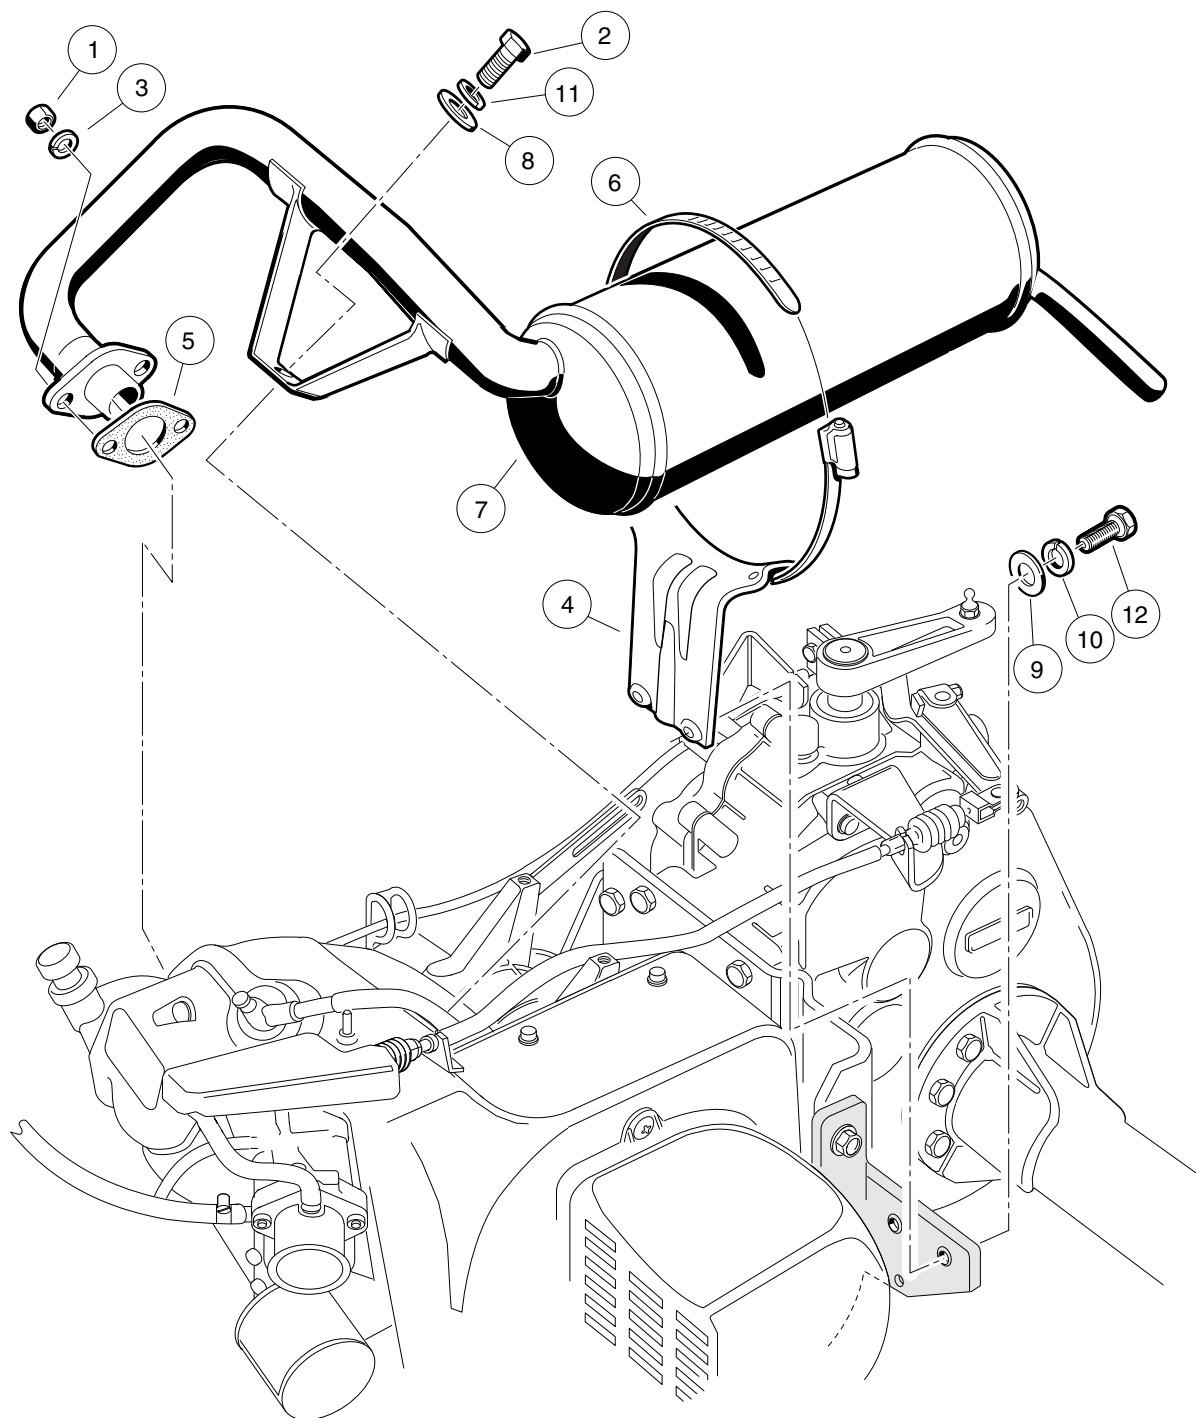 

000209-001

EXHAUST SYSTEM – FE350 ENGINE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012528</u>	Nut, M8-1.25 Hex	2
2	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	1
3	<u>1013734</u>	Lockwasher, 8mm Split	2
4	<u>1015814</u>	Bracket, Muffler Mounting	1
5	<u>1016904</u>	Gasket, Exhaust	1
6	<u>1017689</u>	Clamp, 5" Muffler Hose	1
7	<u>101859401</u>	Exhaust System, FE350	1
8	<u>1241</u>	Washer, 5/16 Type A Flat	1
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
10	<u>451</u>	Lockwasher, 1/4 Split	2
11	<u>7174</u>	Lockwasher, 5/16 Split	1
12	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2

10
G

 
10

G

TORQUE CONVERTER

11

G

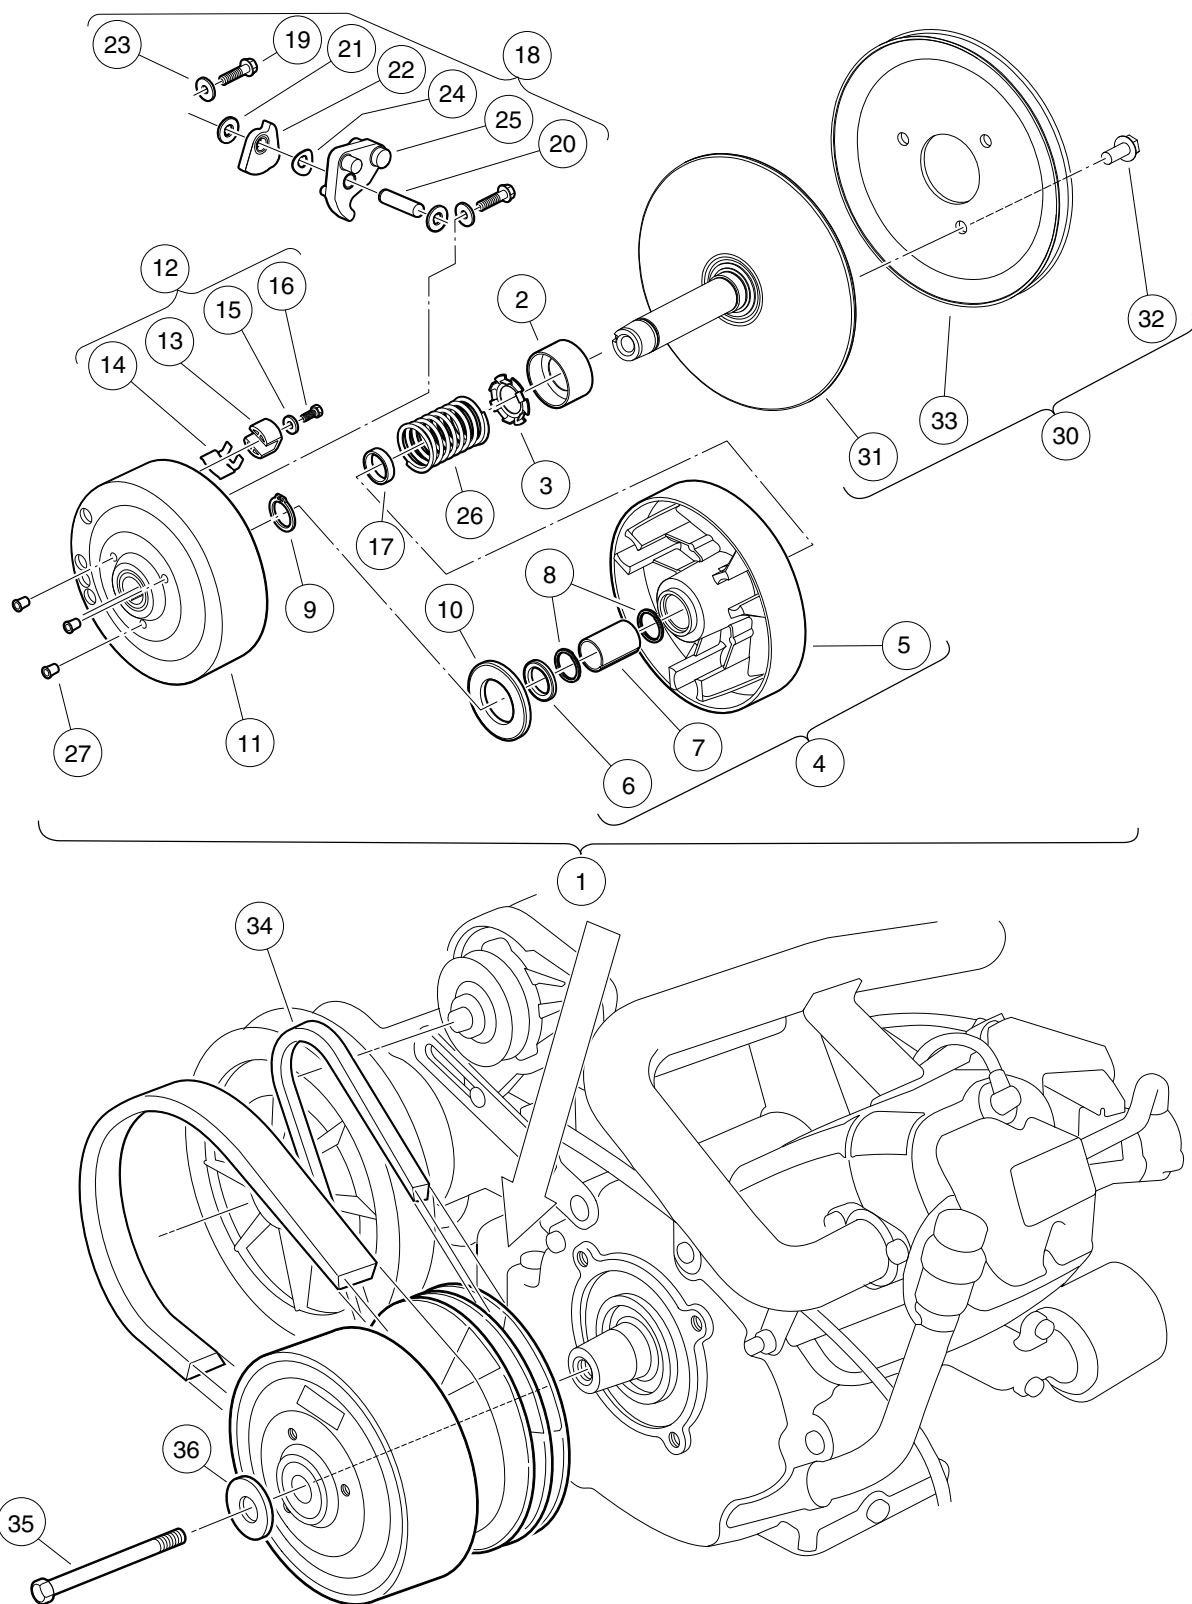


000217-003

DRIVE CLUTCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101833906</u>	Drive Clutch Assy. FE 350/272 (includes items 2 through 28)	1
2	<u>1014049</u>	Bearing, Idler	1
3	<u>1014050</u>	Retainer, Spring	1
4	<u>1014052</u>	Movable-Face Assembly (includes items 5 through 7)	1
5	N/A	Drive Clutch Movable Face	1
6	<u>1014055</u>	Retainer	1
7	N/A	Bushing, Split, Drive Clutch	1
8	<u>1014056</u>	Ring, Spiral Backup	2
9	<u>1014057</u>	Ring, 0.810" Internal Retaining	1
10	<u>1014058</u>	Thrust Washer	1
11	<u>1014059</u>	Drive Hub Assy, Drive Clutch	1
12	<u>1014453</u>	Kit, Drive Clutch Button (includes items 13 through 16)	1
13	<u>1014062</u>	Driver, Drive Clutch	3
14	<u>1014287</u>	Spring, Drive Button	3
15	<u>183</u>	Washer, #10 Type A Flat	3
16	<u>8450</u>	Screw, #10-24 X 0.50 Hex-Head	3
17	<u>1016289</u>	Spacer, Fixed Face Shaft	1
18	<u>1016801</u>	Kit, Drive Clutch Weight (includes items 19 through 25)	1
19	<u>1014063</u>	Screw, 1/4-20 X 1.00 Hex Head	6
20	N/A	Pin, 0.3752 X 1.50 Dowel	3
21	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	6
22	N/A	Clutch Weight, Secondary	3
23	N/A	Washer	6
24	<u>1016201</u>	Washer, Wave	3
25	N/A	Weight, Primary	3
26	<u>1016901</u>	Spring, Drive Clutch	1
27	N/A	Cap Plug	3
28	<u>101929802</u>	Kit, Fxd Face Dr Asm Fe290/350 (includes items 29 and 30)	1
29	N/A	Desiccant Bag (Not Shown)	1
30	<u>101929801</u>	Assembly, Fixed-Face Drive (includes items 31 through 33)	1
31	N/A	Fixed Face Assembly, Drive Clutch	1
32	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	3
33	N/A	Pulley, Clutch	1
34	<u>101916701</u>	V-Belt	1
35	<u>103345701</u>	Screw 3/8-24x5.5 Hex Loc Ptch	1
36	<u>808</u>	Washer, 3/8 Type B Flat	1
		Note: Item 29 not shown.	

11

 G

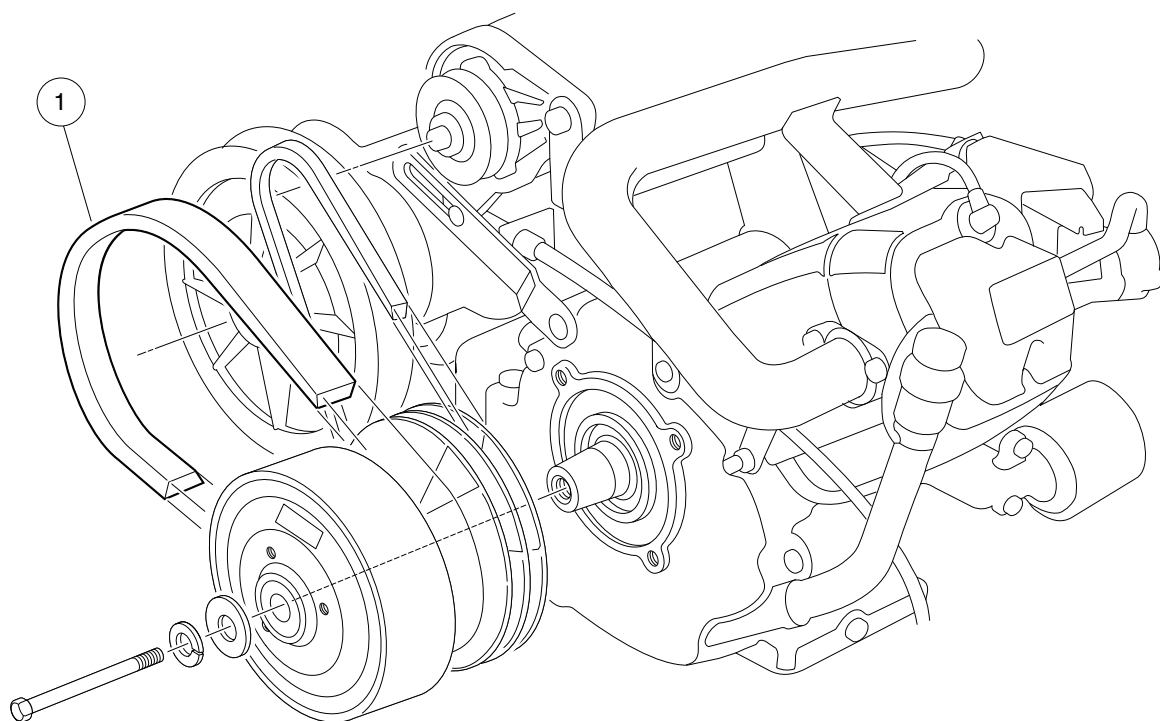


000218-001

DRIVE BELT – FE290

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>1016203</u>	1 2 3 4 Belt, Drive	1

11

 G

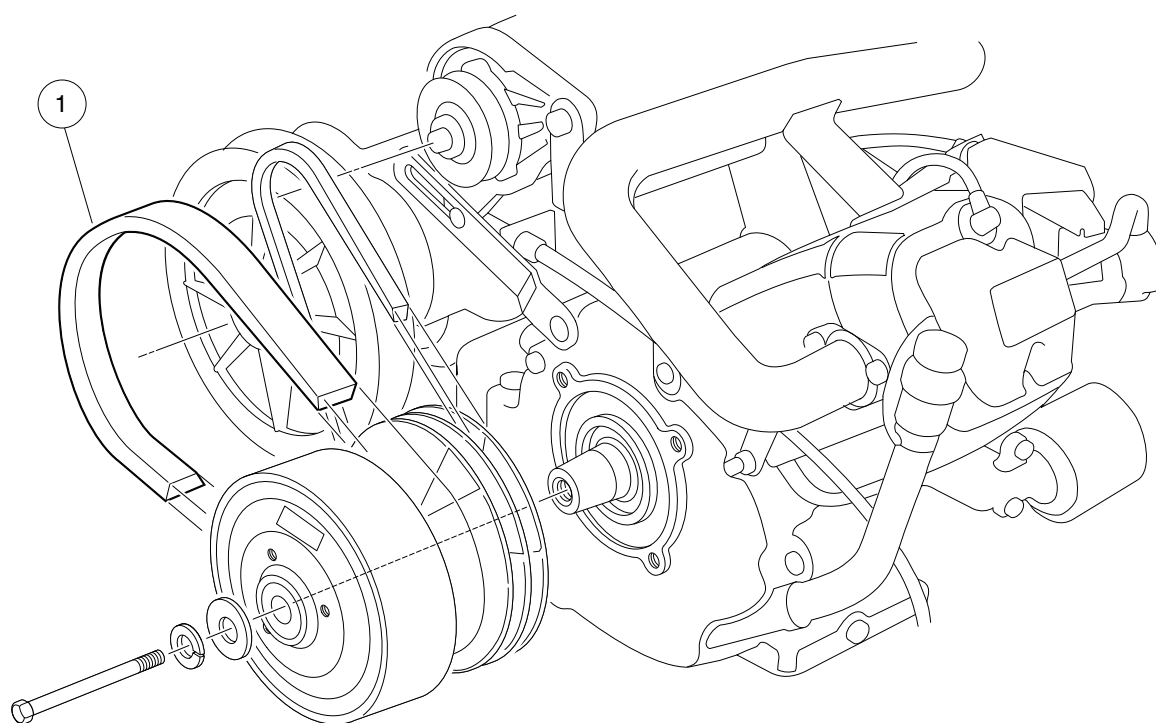


000218-001

DRIVE BELT – FE350

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>1017188</u>	1 2 3 4 Belt, Drive (FE350)	1

11

 G

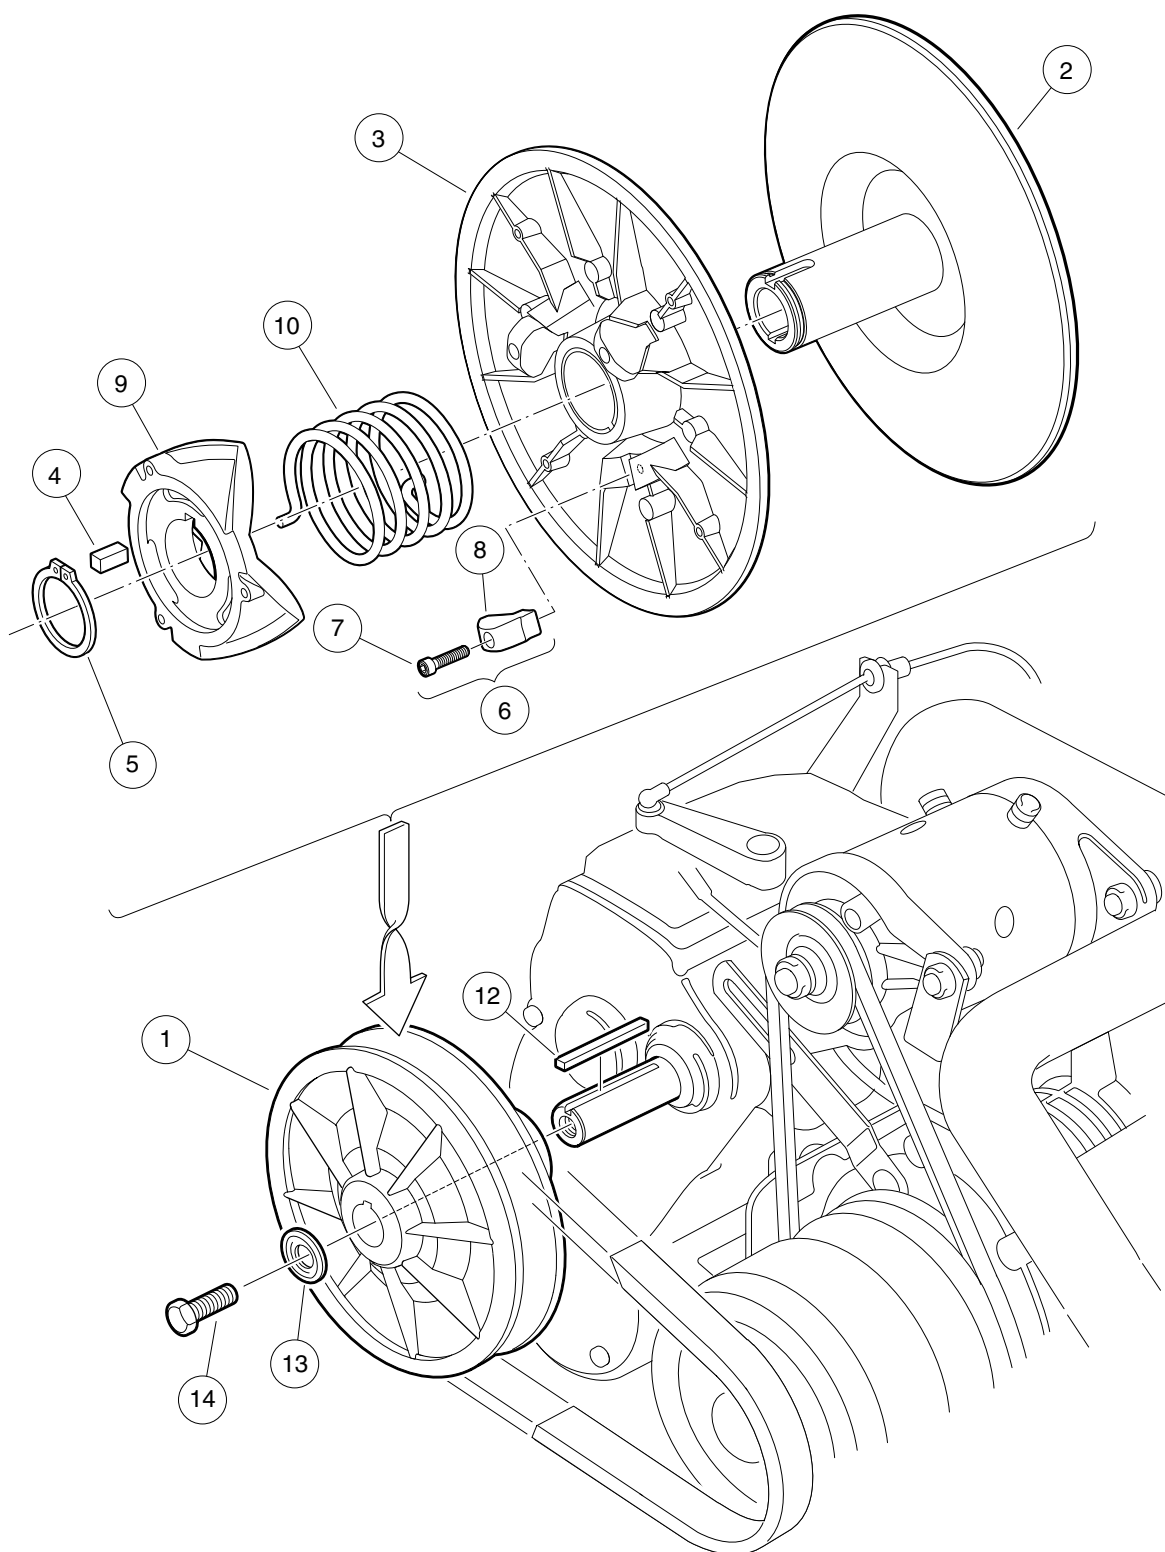

000219-001

DRIVEN CLUTCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101834001</u>	Assembly, Driven Clutch (includes items 2 through 10)	1
2	<u>1014070</u>	Fixed Face Assy, Driven Clutch	1
3	<u>1014072</u>	Movable-Face Assembly with Bushing	1
4	<u>1014078</u>	Key, Driven Clutch	1
5	<u>1014080</u>	Ring, Retaining	1
6	<u>1014454</u>	Kit, Driven Clutch Button (includes items 7 and 8)	1
7	<u>1012836</u>	Screw, #8-32 X 3/4 Socket-Head Cap	3
8	<u>1014076</u>	Button, Drive	3
9	<u>1017686</u>	Cam, Driven Clutch	1
10	<u>101836201</u>	Spring, Driven Clutch, Reversed	1
11	<u>AM10419</u>	Kit, Clutch Repair (includes items 12 through 14)	1
12	<u>101833401</u>	Key, 3/16 Sq X 1.50"	1
13	<u>102155801</u>	Washer, Driven Clutch	1
14	<u>102242101</u>	Screw, 5/16-18 X 3/4 Hex-Head with Patch	1

 
11

G

TRANSAXLE AND FNR SHIFTER- GASOLINE VEHICLE

12

G

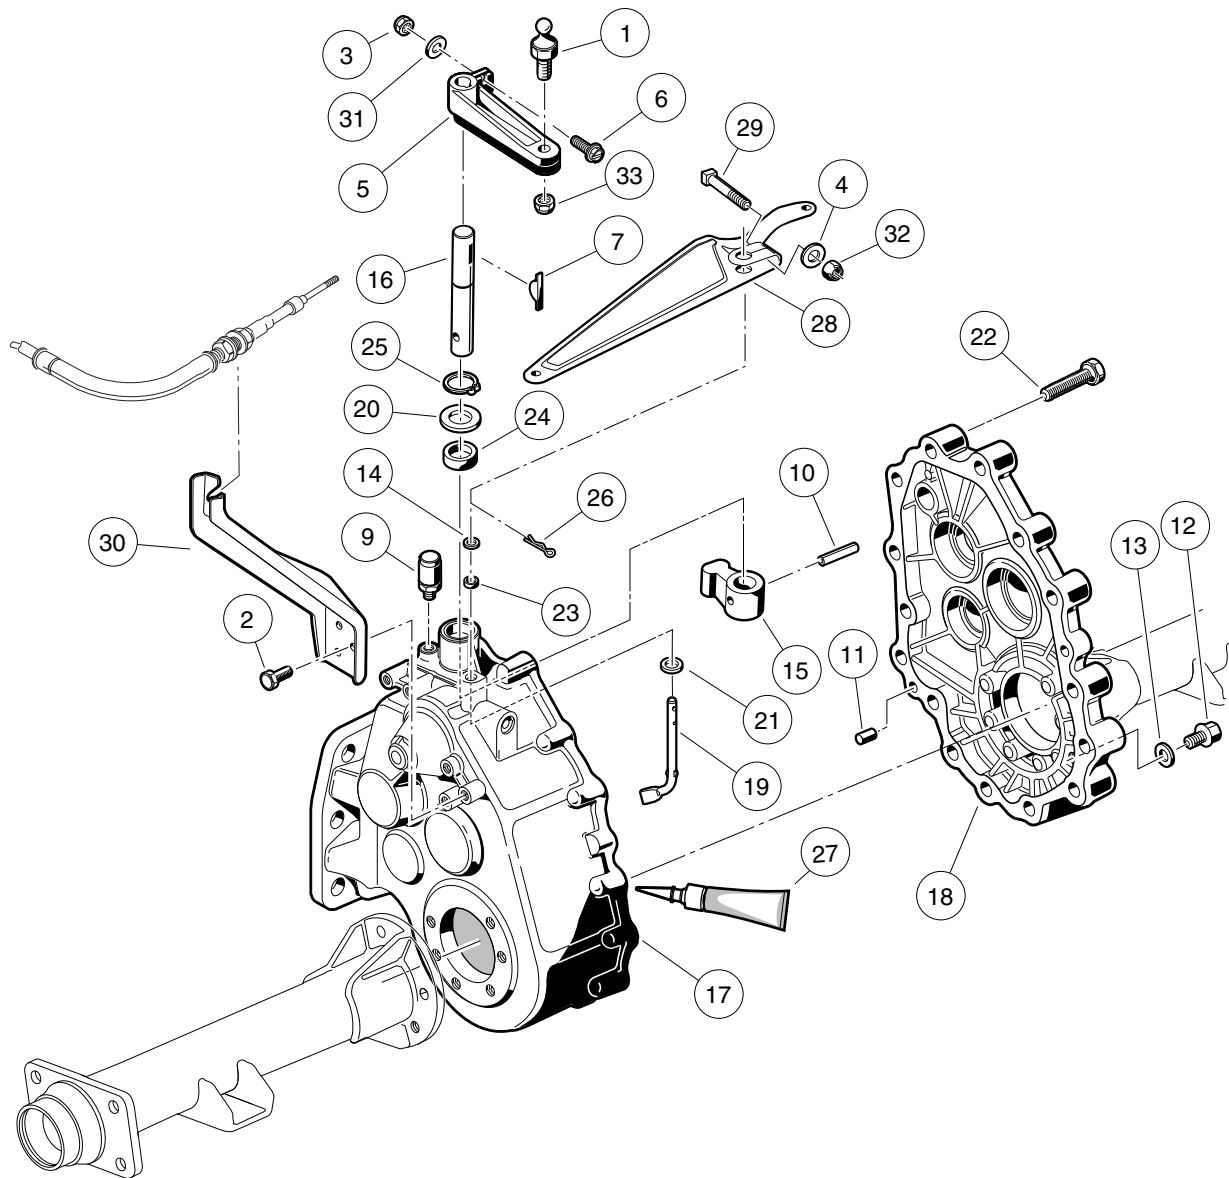


000220-001

TRANSAXLE – GASOLINE VEHICLES, GEAR CASES AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010954</u>	Stud, 1/4-28 X 0.560 Ball	1
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3
3	<u>1013061</u>	Locknut, #10-32 Nylon Insert	1
4	<u>1014007</u>	Washer, 1/4 Flat	1
5	<u>1016341</u>	Lever, Transmission Shift	1
6	<u>1017082</u>	Screw, #10-32 X 0.75, Hex-Head Machine	1
7	<u>1017231</u>	Key, Woodruff	1
8	<u>101833601</u>	Transaxle, 11.77 Ratio (includes items 9 through 27)	1
9	<u>1012711</u>	Breather	1
10	<u>1012752</u>	Roll Pin	1
11	<u>1012896</u>	Pin, Dowel	2
12	<u>1013760</u>	Fill Plug	2
13	<u>1016432</u>	Gasket, Drain Plug	1
14	<u>1016513</u>	Washer, M6 Flat	1
15	<u>101890101</u>	Lever, Change	1
16	<u>101890201</u>	Shaft - Change	1
17	<u>101890501</u>	Gear Case (driver side)	1
18	<u>101890601</u>	Gear Case (passenger side)	1
19	<u>101891301</u>	Arm Pivot	1
20	<u>101892901</u>	Washer	1
21	<u>101893801</u>	Washer	1
22	<u>101926901</u>	Screw, M8-1.25 X 40mm Hex-Head	15
23	<u>101927101</u>	Seal, Oil	1
24	<u>101927201</u>	Seal, Oil	1
25	<u>101927301</u>	Snap Ring	1
26	<u>101928601</u>	Pin, Cotter	1
27	<u>101928701</u>	Liquid Gasket (Transaxle case)	1
28	<u>101834801</u>	Arm, Governor	1
29	<u>101886101</u>	Screw, 1/4-20 X 1.00 Square-Head	1
30	<u>102045901</u>	Bracket, Shifter	1
31	<u>183</u>	Washer, #10 Type A Flat	1
32	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	1
33	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1

 12
G

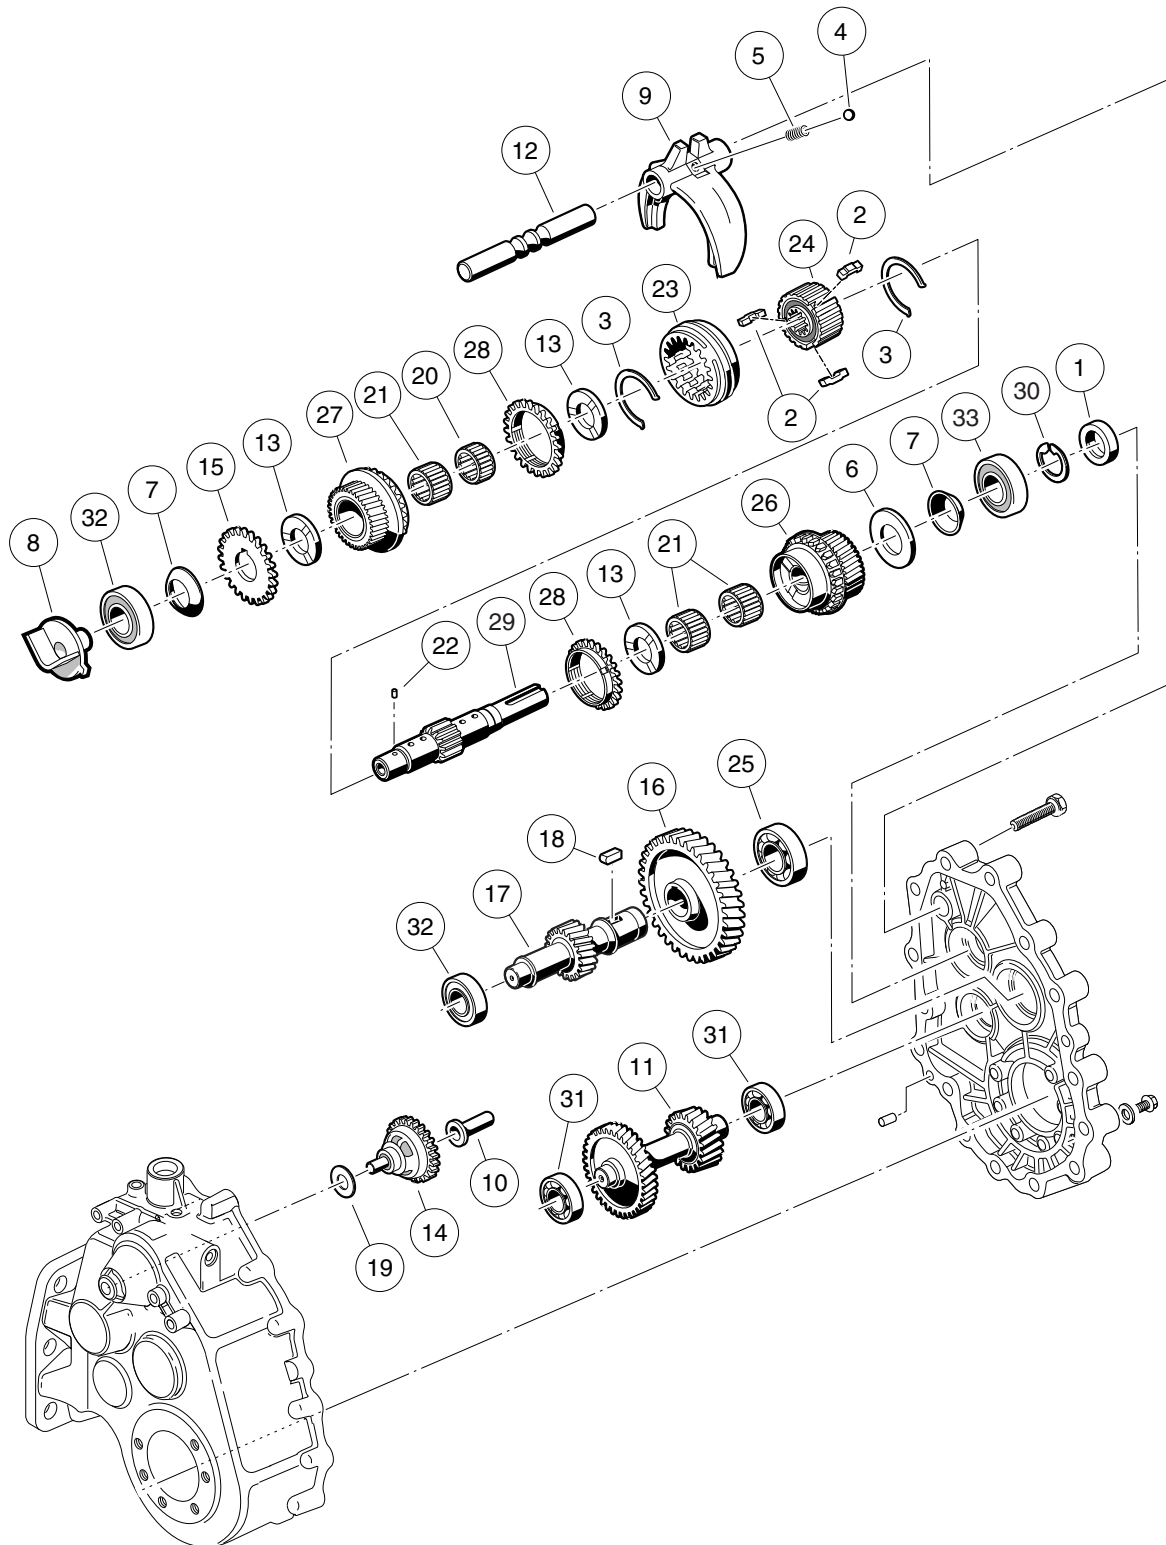


000221-001

TRANSAXLE – GASOLINE VEHICLES, TRANSMISSION AND GEAR REDUCTION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012714</u>	Oil Seal	1
2	<u>1012740</u>	Synchro Insert	3
3	<u>1012741</u>	Synchro Spring	2
4	<u>1012747</u>	Shifter Ball	1
5	<u>1012748</u>	Shifter Spring	1
6	<u>1016337</u>	Washer, Thrust	1
7	<u>1016338</u>	Washer, Spring	2
8	<u>101889401</u>	Guide	1
9	<u>101890001</u>	Fork - Shift	1
10	<u>101891601</u>	Sleeve, Governor	1
11	<u>101891901</u>	Gear, Cluster	1
12	<u>101892001</u>	Rod, Shift	1
13	<u>101892201</u>	Plate, Thrust	3
14	<u>101892301</u>	Governor Assembly	1
15	<u>101892401</u>	Gear, Spur	1
16	<u>101892501</u>	Gear, Helical (61 Tooth)	1
17	<u>101892601</u>	Gear, Helical (17 Tooth)	1
18	<u>101893201</u>	Key Sunk	1
19	<u>101893901</u>	Washer	1
20	<u>101927501</u>	Needle Bearing	1
21	<u>101927601</u>	Needle Bearing	3
22	<u>101927701</u>	Pin, .116" Dia X 0.264 Dowel	1
23	<u>101927901</u>	Sleeve, Synchro	1
24	<u>101928001</u>	Hub, Synchro Clutch	1
25	<u>101928101</u>	Bearing, Ball	1
26	<u>101980801</u>	Gear Assembly, 16-Degree Synchro (25 Tooth)	1
27	<u>101980901</u>	Gear Assembly, 16-Degree Rear Synchro (28 Tooth)	1
28	<u>101981001</u>	Ring, 16-Degree Synchronizer	2
29	<u>102453001</u>	Shaft, Trans, with Circlip	1
30	<u>102453101</u>	Circlip	1
31	<u>7335</u>	Bearing	2
32	<u>AM10080</u>	Bearing, Ball, Sealed	2
33	<u>AM10081</u>	Bearing, Ball, Sealed	1
Note: Items listed on this page are components of the unitized transaxle.			

 12
G

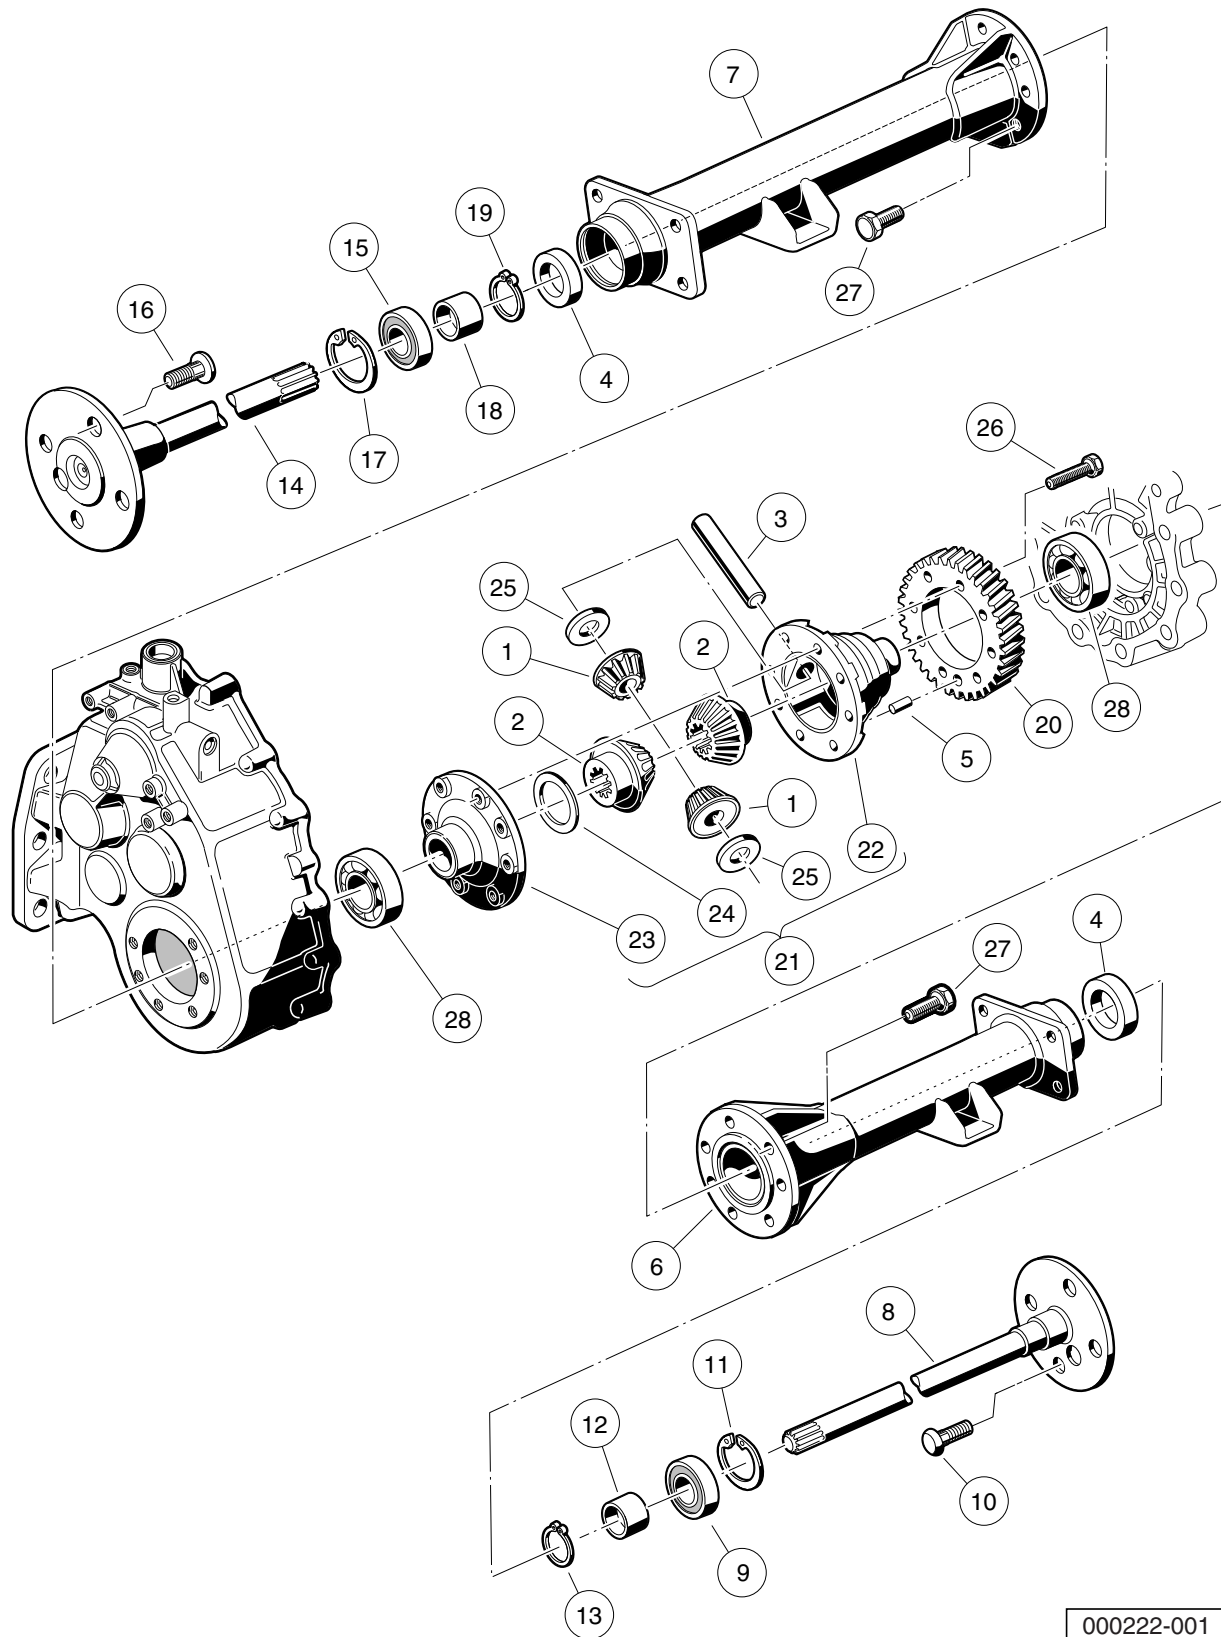


000222-001

TRANSAXLE – GASOLINE VEHICLES, DIFFERENTIAL AND AXLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013770</u>	Differential Idler Gear	2
2	<u>1013771</u>	Gear, Differential	2
3	<u>1013772</u>	Pin, Differential	1
4	<u>1013794</u>	Axle Shaft Oil Seal	2
5	<u>1014193</u>	Dowel Pin	1
6	<u>101890901</u>	Pipe	1
7	<u>101891001</u>	Pipe	1
8	<u>101891401</u>	Axle Assembly, Passenger Side (includes items 9 through 13)	1
9	<u>1011291</u>	Outer Axle, Tube Bearing	1
10	<u>1013787</u>	Lug Stud	4
11	<u>1013792</u>	Circlip Type C	1
12	<u>1014207</u>	Bushing	1
13	<u>1016672</u>	Retaining Ring	1
14	<u>101891501</u>	Axle Assembly, Driver-Side (includes items 15 through 19)	1
15	<u>1011291</u>	Outer Axle, Tube Bearing	1
16	<u>1013787</u>	Lug Stud	4
17	<u>1013792</u>	Circlip Type C	1
18	<u>1014207</u>	Bushing	1
19	<u>1016672</u>	Retaining Ring	1
20	<u>101892701</u>	Gear, Helical	1
21	<u>101910501</u>	Kit, Differential Gear Case (includes items 22 through 25)	1
22	<u>1013768</u>	Differential Gear Case, Left-Hand	1
23	<u>1013769</u>	Differential Gear Case, Right-Hand	1
24	<u>1013773</u>	Plate, Thrust (Differential Gear)	1
25	<u>1013774</u>	Plate, Thrust (Idler Gear)	2
26	<u>101928301</u>	Screw, M8-1.25 X 35mm Hex Head	8
27	<u>102031901</u>	Bolt, M10 X 1.5 X 30mm	14
28	<u>7330</u>	Inner Axle Tube Bearing	2

12

 G

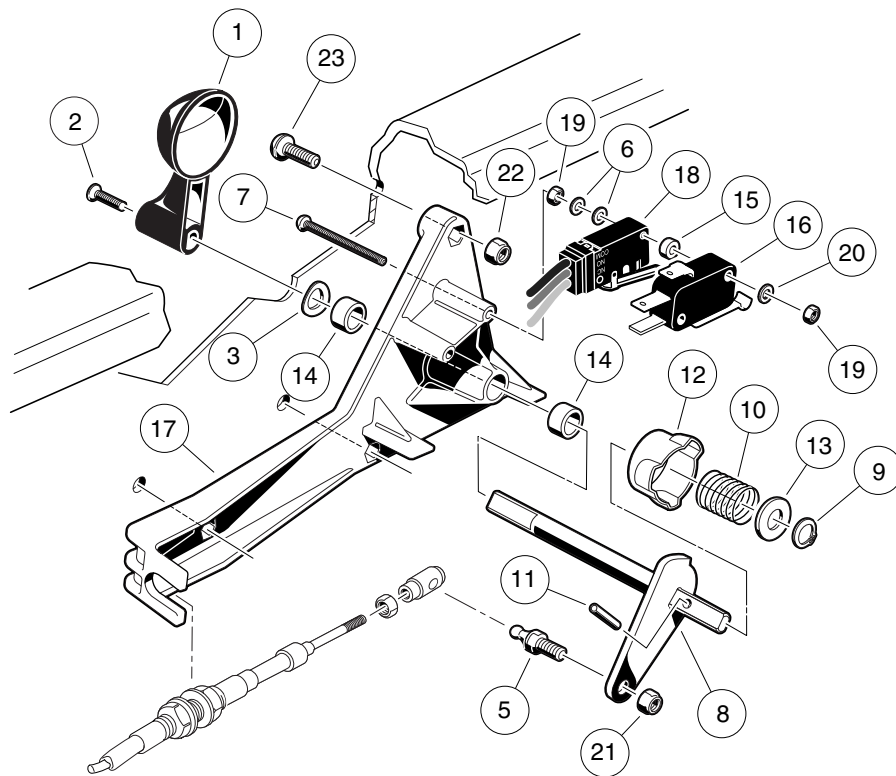


000236-001

FORWARD/REVERSE SHIFTER ASSEMBLY – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012987</u>	Handle, FNR	1
2	<u>1015064</u>	Screw, #8-32 X 0.63 Machine	1
3	<u>1016201</u>	Washer, Wave	1
4	<u>1016947</u>	Assembly, FNR Shifter (includes items 5 through 21)	1
5	<u>1010954</u>	Stud, 1/4-28 X 0.560 Ball	1
6	<u>1012431</u>	Washer, #4 Flat	4
7	<u>1012594</u>	Screw, #4-40 Machine	2
8	<u>1013587</u>	FNR Bell Crank Weldment	1
9	<u>1013589</u>	Ring, 0.338" Internal Retaining	1
10	<u>1013590</u>	Spring, FNR Cam	1
11	<u>1013591</u>	Pin, 1/8 X 1/2 Roll	1
12	<u>1014089</u>	Neutral Lockout Cam Kit (includes item 13)	1
13	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	1
14	<u>1014145</u>	Bushing, Secondary Weight, Split	2
15	<u>1014727</u>	Washer, #4 Nylon Flat	2
16	<u>1014807</u>	Switch, Limit	1
17	<u>1016342</u>	FNR Shifter Base	1
18	<u>101979101</u>	Assembly, Switch, Limit	1
19	<u>8057</u>	Nut, #4-40 Hex Machine	4
20	<u>8058</u>	Lockwasher, #4 Split	2
21	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1
22	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
23	<u>8248</u>	Screw, 1/4-20 X 0.75 Truss-Head Machine	4

12

 G

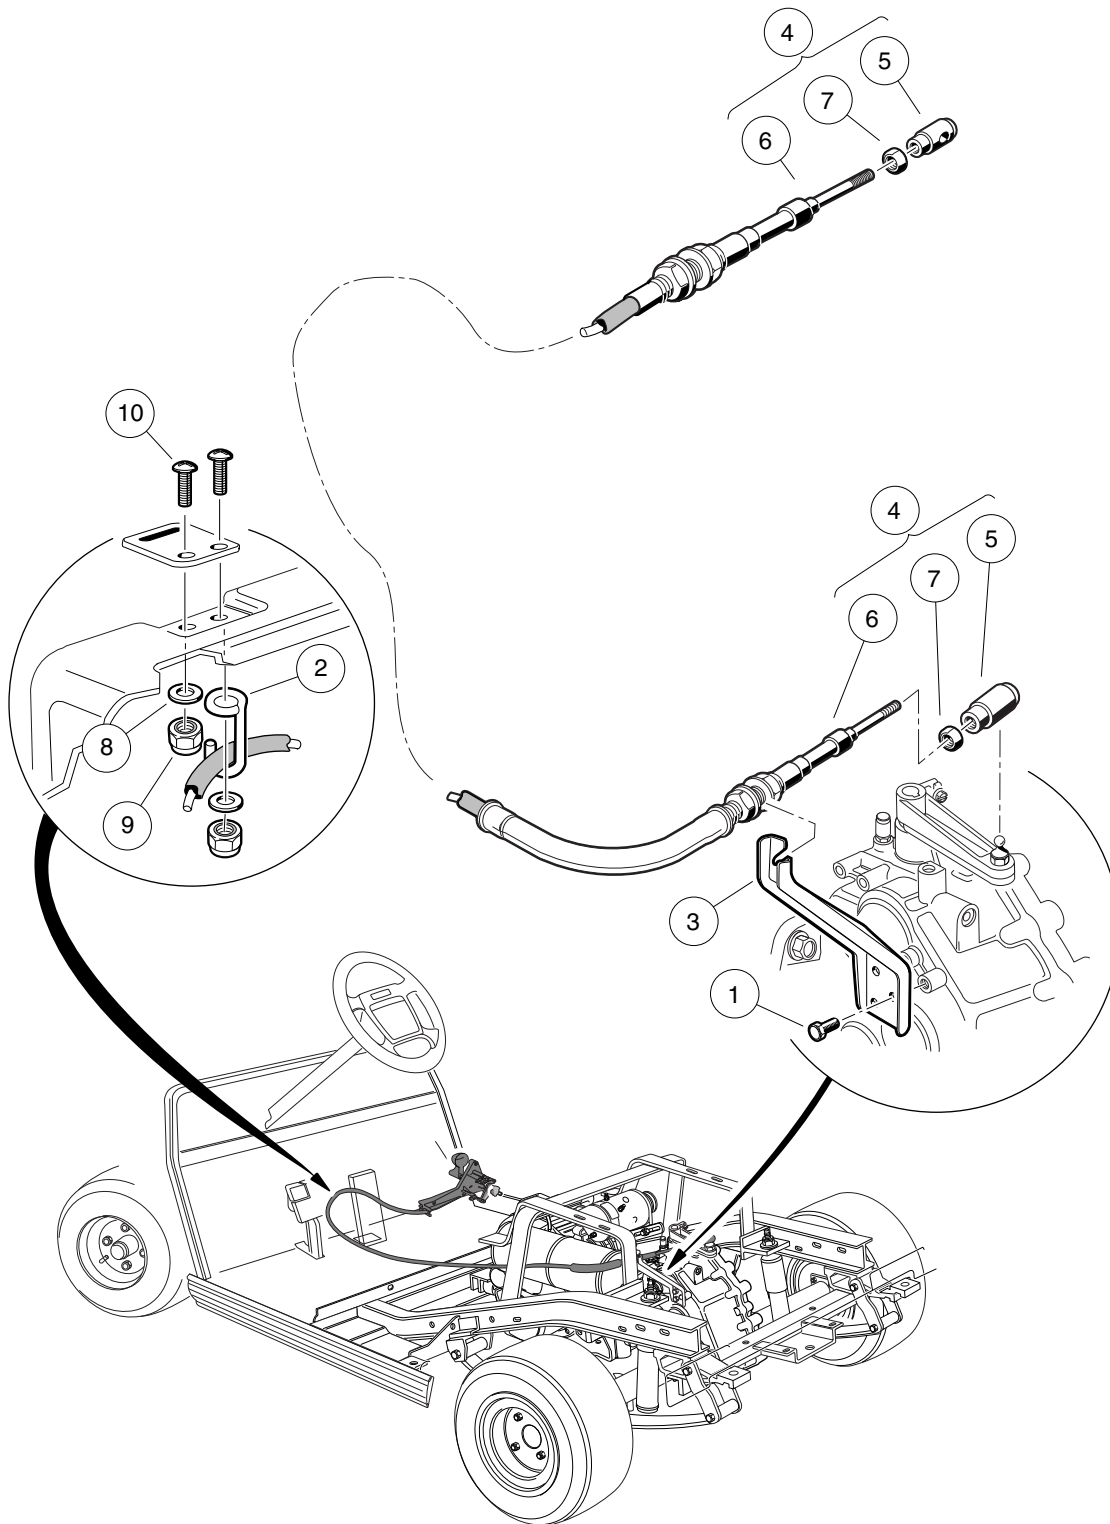


000248-001

FORWARD/REVERSE SHIFTER CABLE – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3
2	<u>101855801</u>	Cable Retainer	1
3	<u>101922601</u>	Bracket, Shifter	1
4	<u>101951501</u>	FNR Shifter Cable (includes items 5 through 7)	1
5	<u>1012333</u>	Joint, #10-32 Ball	2
6	<u>103379501</u>	Cable, Transmission Shifter Ds	1
7	<u>7893</u>	Nut, #10-32 Hex	2
8	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4
9	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
10	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	4

12

 G

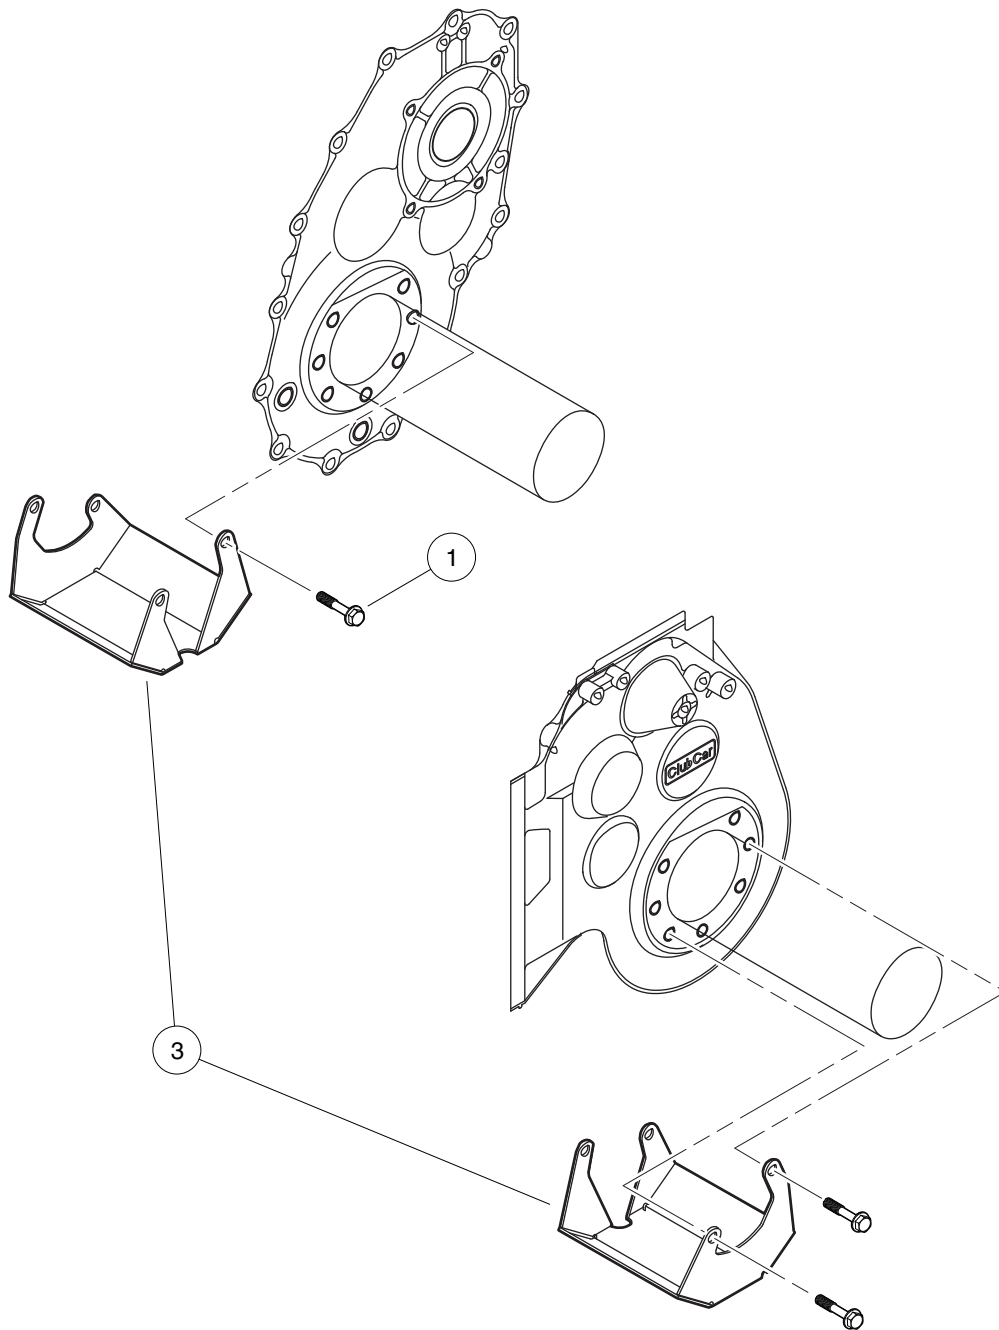

000366-001

DIFFERENTIAL GUARD – XRT810

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>101926901</u>	Screw, M8-1.25 X 40mm Hex-Head	4
2	<u>101932902</u>	Diff Guard Unitized Kit (Includes Instructions) (includes item 3)	1
3	N/A	Guard, Unitized Differential	1

 
12

G


ELECTRICAL SYSTEM – ELECTRIC VEHICLES

13

E

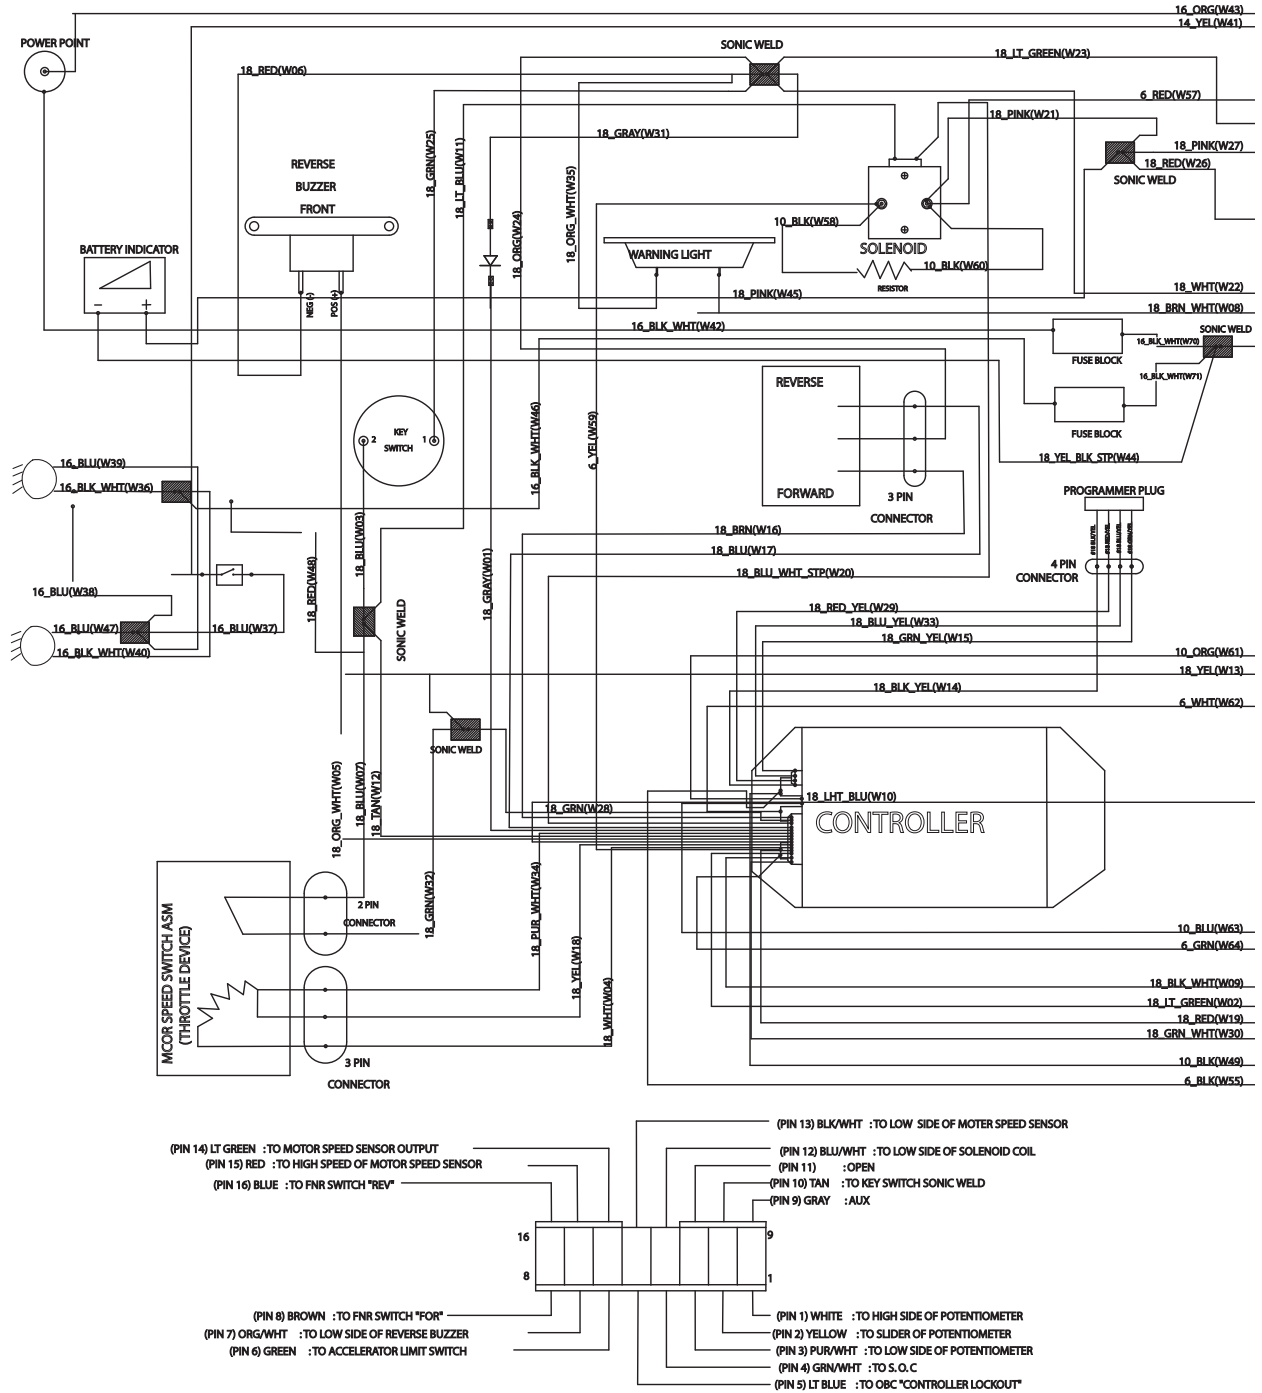

000233-001

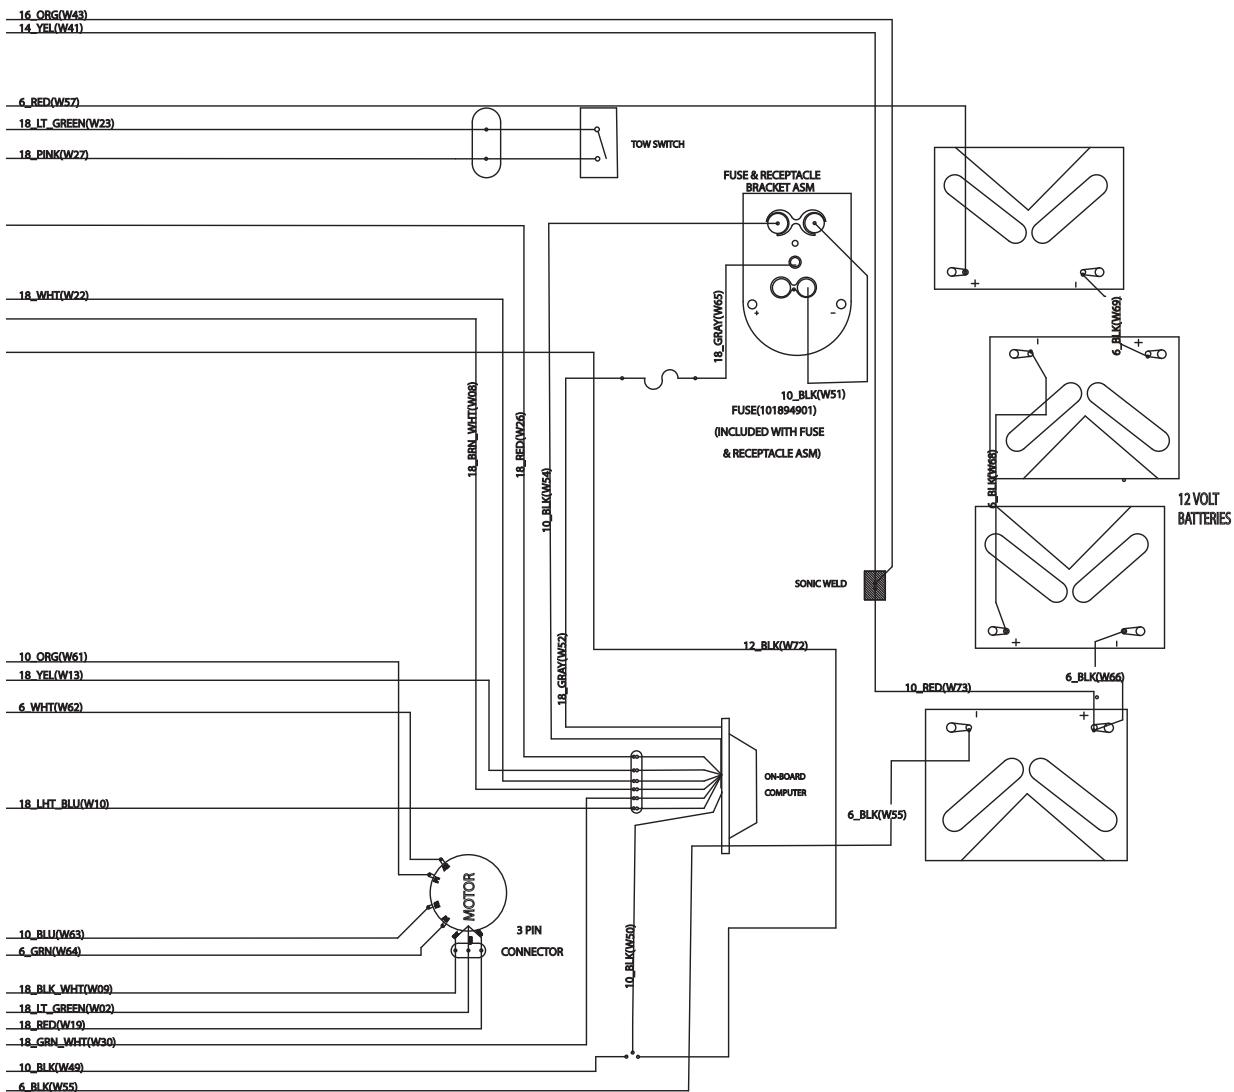 

000233-001


See previous two pages for illustration.

WIRING – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>102810501</u>	1 2 3 4 Wire Harness, Electric Vehicle	1

13

 E

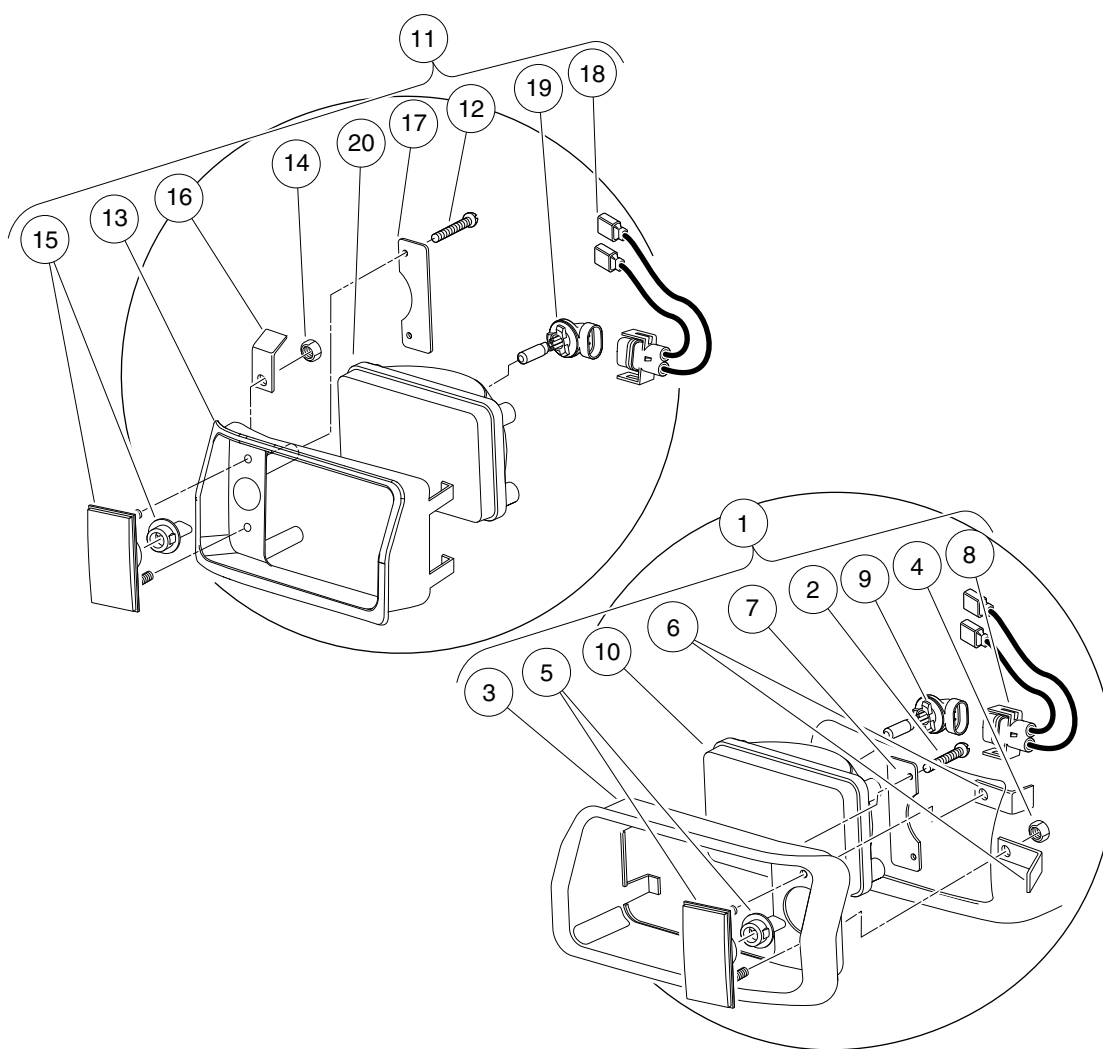


000073-001

HEADLIGHTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101988001</u>	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	1
2	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2
3	<u>1016880</u>	Headlight Bezel, Left	1
4	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
5	<u>1017062</u>	Turn Signal Lens Assy	1
6	<u>1017064</u>	Mounting Bracket	2
7	<u>1017065</u>	Retainer, Headlight	1
8	<u>101987901</u>	Connector Harness Assembly, Headlight	1
9	<u>101988101</u>	Bulb, Headlight	1
10	<u>101988201</u>	Lens, Headlight	1
11	<u>101988002</u>	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	1
12	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2
13	<u>1016879</u>	Headlight Bezel, Right	1
14	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
15	<u>1017062</u>	Turn Signal Lens Assy	1
16	<u>1017064</u>	Mounting Bracket	2
17	<u>1017065</u>	Retainer, Headlight	1
18	<u>101987901</u>	Connector Harness Assembly, Headlight	1
19	<u>101988101</u>	Bulb, Headlight	1
20	<u>101988201</u>	Lens, Headlight	1

13

 E




ELECTRICAL COMPONENTS, FRONT BODY – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013857</u>	Knob, Light Switch	1
2	<u>101830701</u>	Nut, Key Switch	1
3	<u>102051701</u>	Nut, Key Switch	1
4	<u>102051901</u>	Switch, Light	1
5	<u>102198001</u>	Receptacle, Accessory	1
6	<u>102499001</u>	Rivet, Micro Tuflok	2
7	<u>102508601</u>	Key Switch, Electric	1
8	<u>102508701</u>	Light, Battery	1
9	<u>102804503</u>	Panel, Instrument	1
10	<u>102804504</u>	Panel, Instrument (With 12-Volt Accessory Outlet Cutout) *	1
11	<u>102830801</u>	Set, Key	1
12	<u>102967901</u>	Rivet, Removable, Tuflok 1/4"	7
13	<u>103200701</u>	Battery Condition Indicator - 48V	1
Note: Items marked with an asterisk (*) are to be used only on vehicles equipped with a 12-volt accessory outlet.			

13

 
E

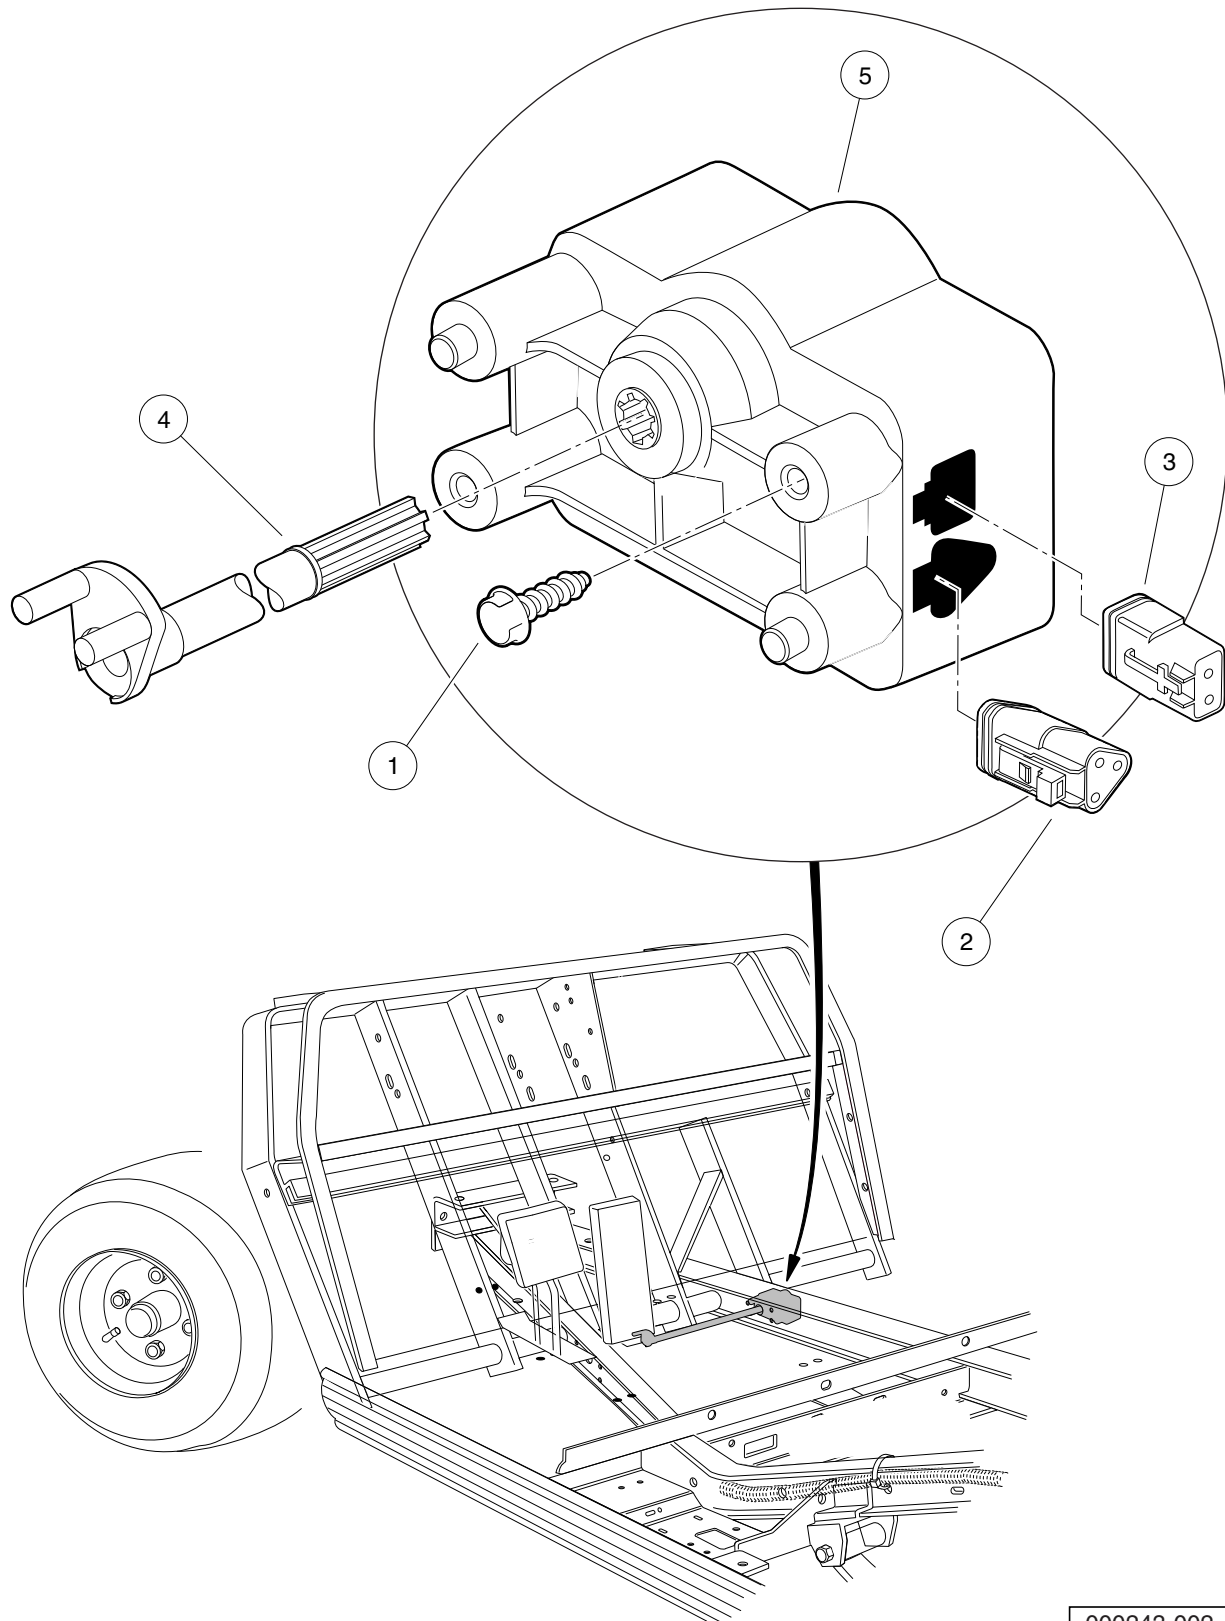

000243-002

MOTOR CONTROLLER OUTPUT REGULATOR (MCOR)

ITEM	PART NO.	DESCRIPTION	QTY	13
		1 2 3 4		
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	2	
2	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1	E
3	<u>101936801</u>	Kit, 2-Pin Wedge Lock	1	
4	<u>102101001</u>	Bar, Drive, Cast	1	
5	<u>102101101</u>	MCOR	1	

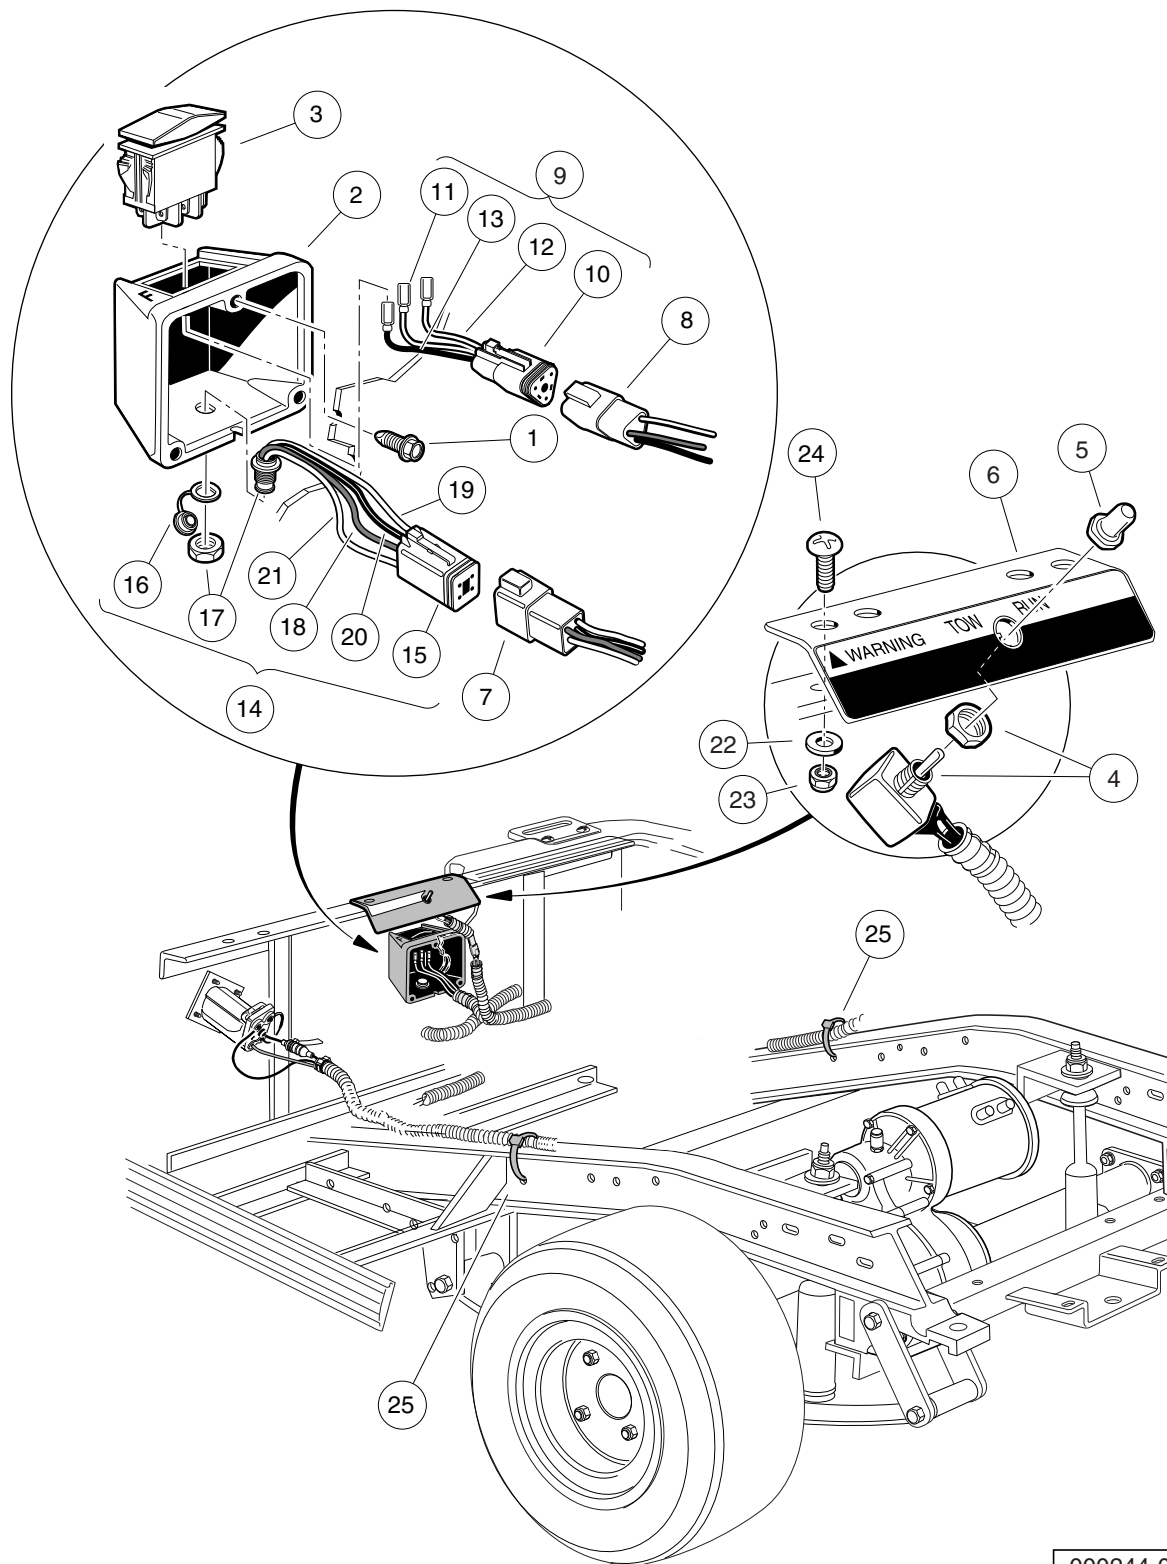 

000244-001

FORWARD/REVERSE SWITCH, TOW/RUN SWITCH


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3
2	101855002	Case, FNR Switch	1
3	<u>101856002</u>	Switch, Rocker, Single-Pole	1
4	<u>101908101</u>	Switch Assembly, Tow/Run	1
5	<u>101908401</u>	Boot, Switch	1
6	<u>101922501</u>	Bracket, Tow/Run Switch Mounting	1
7	<u>101932401</u>	Kit, 4-Pin Receptacle and Wedge Lock	1
8	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
9	<u>102266601</u>	Wire Assembly, FNR Switch (includes items 10 through 13)	1
10	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
11	N/A	Wire Assembly, #18 Blue	1
12	N/A	Wire Assembly, #18 Orange	1
13	N/A	Wire Assembly, #18 Brown	1
14	102266701	Wire Assembly, IQDM Port (includes items 15 through 21)	1
15	<u>101932501</u>	Kit, 4-Pin Wedge Lock	1
16	<u>102196901</u>	Dust Cap	1
17	N/A	Connector Mount, Four-Pin	1
18	N/A	Wire Assembly, #18 Red/Yellow	1
19	N/A	Wire Assembly, #18 Black/Yellow	1
20	N/A	Wire Assembly, #18 Blue/Yellow	1
21	N/A	Wire Assembly, #18 Green/Yellow	1
22	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
23	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2
24	<u>8248</u>	Screw, 1/4-20 X 0.75 Truss-Head Machine	2
25	<u>8990</u>	Tie Wrap, 8" Nylon	1

13

E

13

 E

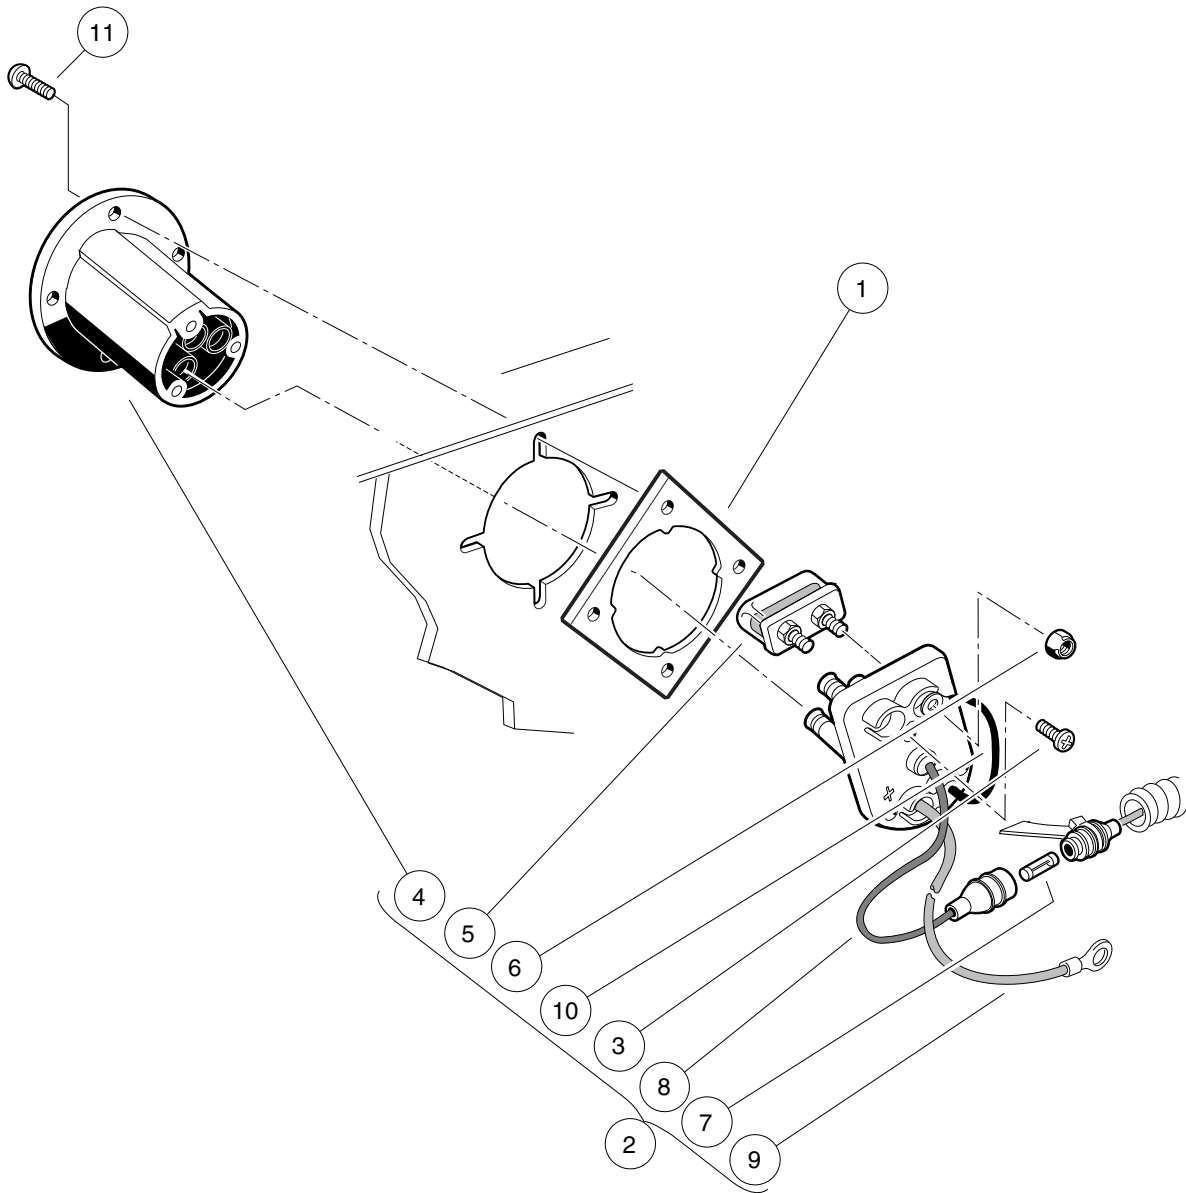


000369-001

BATTERY CHARGER RECEPTACLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101801001</u>	Plate, Receptacle Backing	1
2	<u>101802101</u>	Fuse and Receptacle Assembly (includes items 3 through 10)	1
3	<u>1017705</u>	Screw, #8 X 5/8 Phillips Pan-Head Type AB	3
4	<u>101796501</u>	Receptacle	1
5	<u>101796801</u>	Fuse Assembly (includes item 6)	1
6	<u>1013061</u>	Locknut, #10-32 Nylon Insert	2
7	N/A	Fuse, 3/8-Amp	1
8	N/A	Wire Assembly, Sense Lead, Gray	1
9	N/A	Wire Assembly, #10 Red	1
10	N/A	Wire Assembly, #10 Black	1
11	<u>101832001</u>	Screw, #7-19 X 0.625 Phillips Pan-Head Tap	4

13

 E

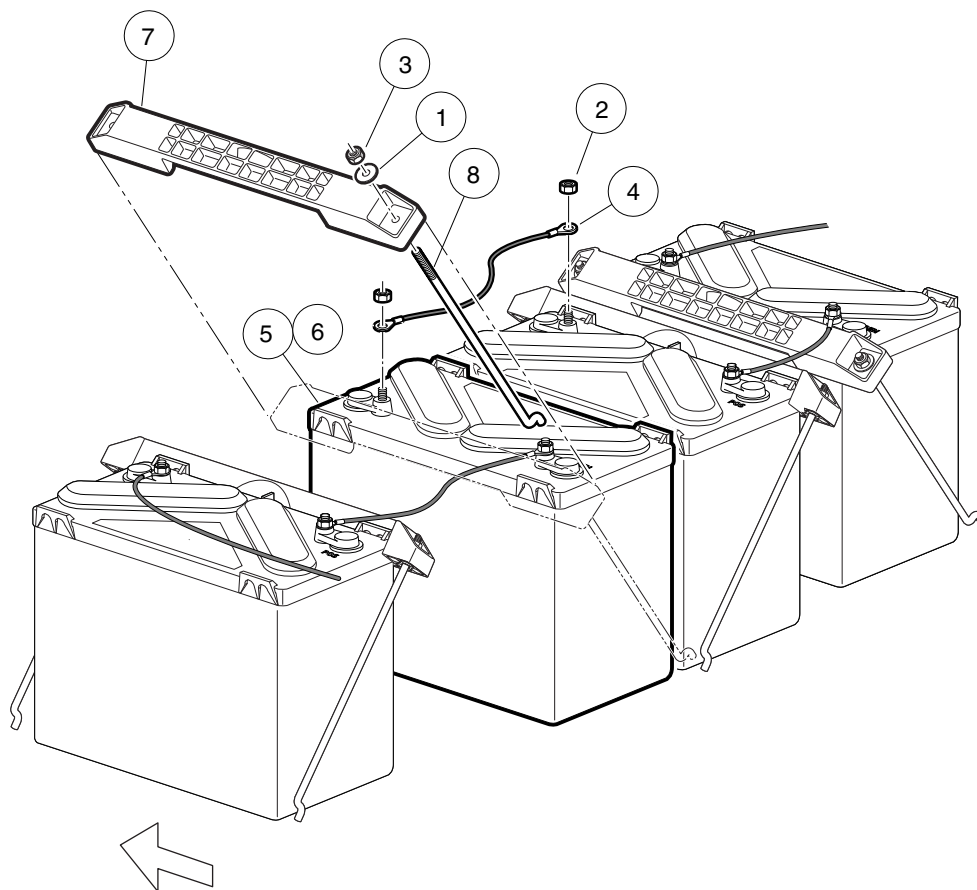


000241-002

BATTERIES, ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011697</u>	Washer, 5/16 Flat	8
2	<u>1014304</u>	Nut, 5/16-18 Stainless-Steel Hex	8
3	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	8
4	<u>101795701</u>	Asm, Wire, #6blk 13in	3
5	<u>102511301</u>	Battery, Ventmaster 12-Volt (Wet)	4
6	<u>102511302</u>	Battery, Ventmaster 12-Volt (Dry, also known as moist)	4
7	<u>102777401</u>	Battery Hold-Down	4
8	<u>102832601</u>	Bolt, Battery, J-	8

13

 E

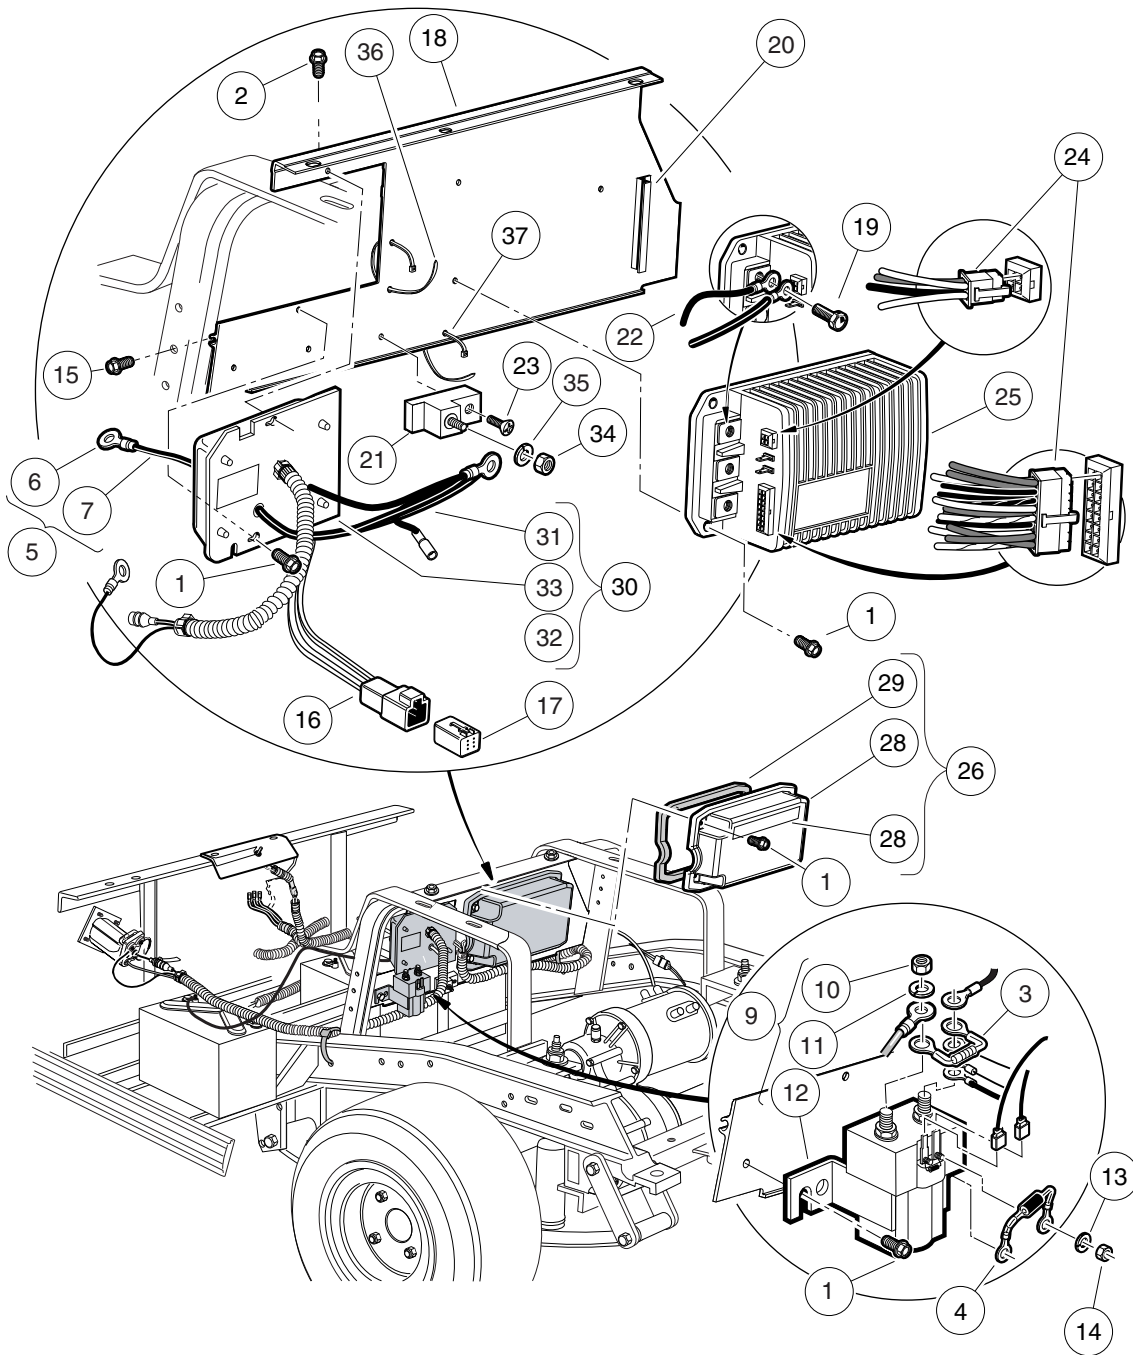


000242-006

OBC, CONTROLLER, AND SOLENOID – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	9
2	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	2
3	<u>1014947</u>	Resistor Assembly	1
4	<u>1014948</u>	Diode	1
5	<u>101827801</u>	Ground Wire Kit, 48-Volt (includes items 6 through 8)	1
6	<u>101826801</u>	Compression Lug	1
7	N/A	Wire Assembly, Black	1
8	<u>8990</u>	Tie Wrap, 8" Nylon	3
9	<u>101908701</u>	Solenoid, 48-Volt (includes items 10 through 14)	1
10	<u>1012528</u>	Nut, M8-1.25 Hex	2
11	<u>1013734</u>	Lockwasher, 8mm Split	2
12	N/A	Solenoid, 48-Volt	1
13	N/A	Washer, Lock	2
14	N/A	Nut	2
15	<u>101910401</u>	Screw, 5/16-18 X 1.25 Thrd Frm	2
16	<u>101932601</u>	Kit, 6-Pin Wedge Lock	1
17	<u>101932701</u>	Kit, 6-Pin Receptacle and Wedge Lock	1
18	<u>101965205</u>	Plate, Component Mounting	1
19	<u>102240501</u>	Bolt, Controller, Terminal	3
20	****	Extrusion, Cover Support	1
21	<u>102259801</u>	Terminal Block	1
22	<u>102263601</u>	Wire Assy, #10 Black	1
23	<u>102263701</u>	Screw, #10-24 X 0.75 Phillips, Thread-Forming	1
24	<u>102266501</u>	Kit, Connector, IQ Controller	1
25	<u>102806201</u>	Controller, IQ, 48-volt	1
26	<u>103316901</u>	Cover Asm - Controller (includes items 27 through 29)	1
27	<u>101931501</u>	Decal, Component Cover	1
28	<u>103316701</u>	Cover - Controller, Deep	1
29	<u>103316801</u>	Gasket - Controller Cover	1
30	N/A	Kit, OBC, DS and Util IQ (includes items 31 through 33)	1
31	<u>103282601</u>	Wire Assembly Black #10	1
32	N/A	Instr Obc Ds Pre 01-28-2007	1
33	<u>103403101</u>	Asm, Obc, Iq, V3.0	1
34	<u>1242</u>	Nut, 5/16-18 Hex	1
35	<u>7174</u>	Lockwasher, 5/16 Split	1
36	<u>8639</u>	Tie Wrap, 11" Nylon	1
37	<u>8990</u>	Tie Wrap, 8" Nylon	1
		**** Special order item available upon request.	

13

 E

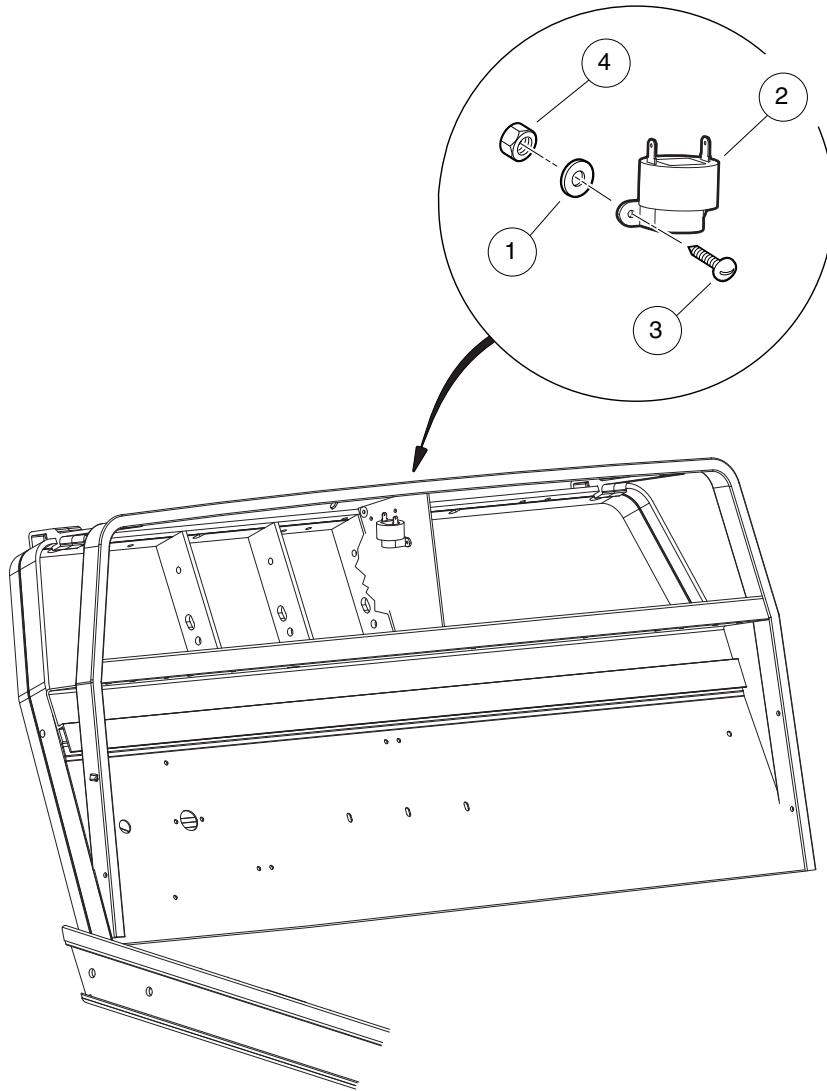

000363-001

REVERSE BUZZER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012431	Washer, #4 Flat	1
2	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
3	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	1
4	<u>8057</u>	Nut, #4-40 Hex Machine	1

 
13

E

ELECTRIC MOTOR

14

E

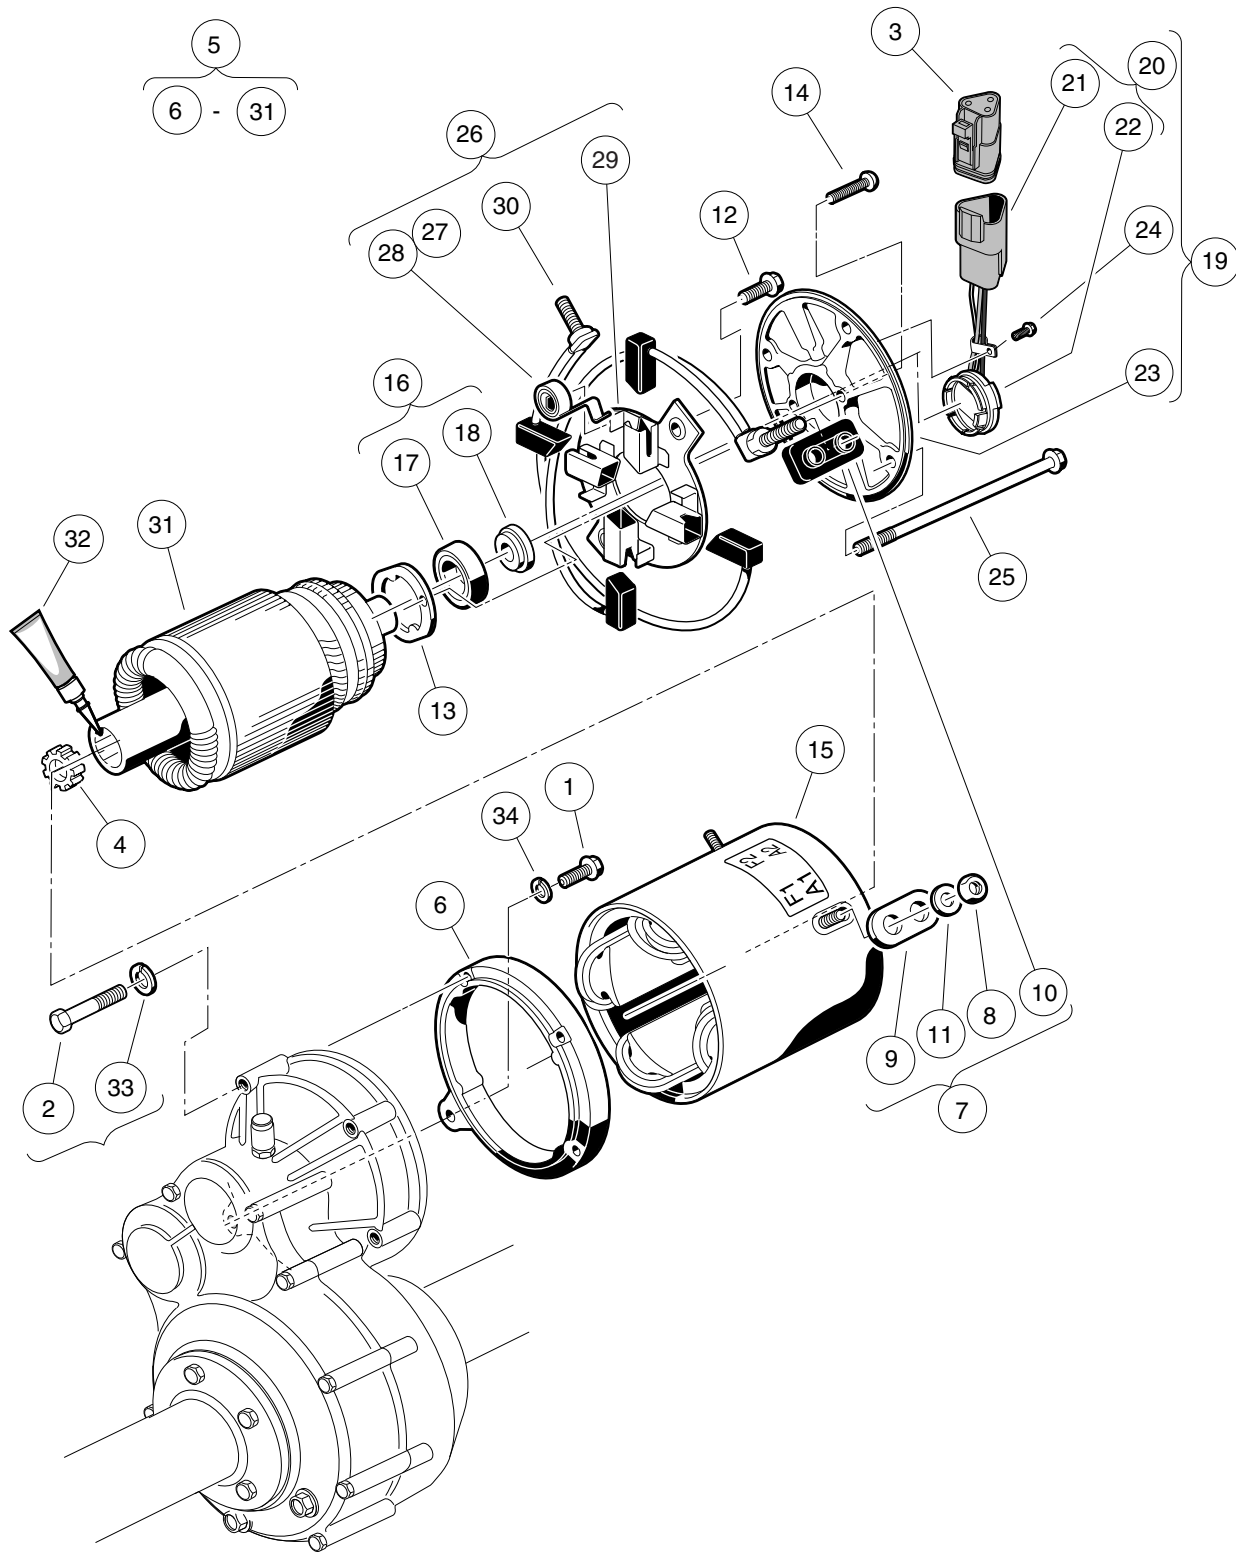


000349-001

MOTOR (MODEL 5BC59JBS6365) – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1
2	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	3
3	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
4	<u>102235201</u>	Bumper, Drive Unit	1
5	<u>102240102</u>	Motor, 48-Volt Shunt-Wound * (includes items 6 through 31)	1
6	<u>1017944</u>	End Shield	1
7	<u>1017947</u>	Hardware Package (includes items 8 through 11)	1
8	<u>1011280</u>	Locknut, 5/16-18	4
9	N/A	Insulator Bushing	2
10	N/A	Insulated Bushing	2
11	<u>1241</u>	Washer, 5/16 Type A Flat	4
12	<u>1017949</u>	Screw, #6-32 X 0.480 Hex-Head	2
13	<u>1017950</u>	Bearing Retainer	1
14	<u>1017953</u>	Screw, Bearing Retainer	2
15	<u>102265501</u>	Stator Shell and Winding	1
16	<u>102265701</u>	Kit, Bearing and Magnet (includes items 17 and 18)	1
17	<u>1011290</u>	Ball Bearing	1
18	<u>102265801</u>	Magnet	1
19	<u>102265901</u>	Motor End Shield Asm (includes items 20 through 24)	1
20	<u>102265601</u>	Speed Sensor Assembly (includes items 21 and 22)	1
21	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
22	N/A	Sensor, Speed, without Connector	1
23	<u>102266001</u>	End Shield, Motor	1
24	<u>102267001</u>	Screw, #8-32 X 0.375 Hex-Head	1
25	<u>102266101</u>	Screw, #10 - 32 X 8.250	4
26	<u>102327801</u>	Brush Assembly, Beveled (includes items 27 through 30)	1
27	<u>1011411</u>	Kit, Brush Spring (ge Motor) (includes item 28)	1
28	<u>1011285</u>	Brush Spring	4
29	<u>1017948</u>	Brush Rigging	1
30	<u>102251901</u>	Brush Kit, Motor	1
31	N/A	Armature	1
32	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
33	<u>451</u>	Lockwasher, 1/4 Split	3
34	<u>7174</u>	Lockwasher, 5/16 Split	1
* Note: The model 5BC59JBS6365 motor has been discontinued. To replace the motor, use motor model EJ8-4001A.			

 
14
E



MOTOR (MODEL 5BC59JBS6390) – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1
2	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	3
3	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
4	<u>102235201</u>	Bumper, Drive Unit	1
5	<u>102240104</u>	Motor, 48-Volt Non-Skew IQ * (includes items 6 through 27)	1
6	<u>1017944</u>	End Shield	1
7	<u>1017947</u>	Hardware Package (includes items 8 through 11)	1
8	<u>1011280</u>	Locknut, 5/16-18	4
9	N/A	Insulator Bushing	2
10	N/A	Insulated Bushing	2
11	<u>1241</u>	Washer, 5/16 Type A Flat	4
12	<u>1017949</u>	Screw, #6-32 X 0.480 Hex-Head	2
13	<u>1017950</u>	Bearing Retainer	1
14	<u>1017953</u>	Screw, Bearing Retainer	2
15	<u>102265701</u>	Kit, Bearing and Magnet (includes items 16 and 17)	1
16	<u>1011290</u>	Ball Bearing	1
17	<u>102265801</u>	Magnet	1
18	<u>102265901</u>	Motor End Shield Asm (includes items 19 through 23)	1
19	<u>102265601</u>	Speed Sensor Assembly (includes items 20 and 21)	1
20	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
21	N/A	Sensor, Speed, without Connector	1
22	<u>102266001</u>	End Shield, Motor	1
23	<u>102267001</u>	Screw, #8-32 X 0.375 Hex-Head	1
24	<u>102266101</u>	Screw, #10 - 32 X 8.250	4
25	<u>103325701</u>	Stator Shell and Winding	1
26	<u>103325801</u>	Non Skew Armature	1
27	<u>103337601</u>	Brush Assembly, IQ Motor, Non-Skew (includes items 28 through 31)	1
28	<u>1011411</u>	Kit, Brush Spring (ge Motor) (includes item 29)	1
29	<u>1011285</u>	Brush Spring	4
30	<u>103325501</u>	Brush Rigging, Non-Skew Motor	1
31	<u>103325601</u>	Brush Set, Non-Skew	1
32	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
33	<u>451</u>	Lockwasher, 1/4 Split	3
34	<u>7174</u>	Lockwasher, 5/16 Split	1
* Note: The model 5BC59JBS6390 motor has been discontinued. To replace the motor, use motor model EJ8-4001A.			

 14
E

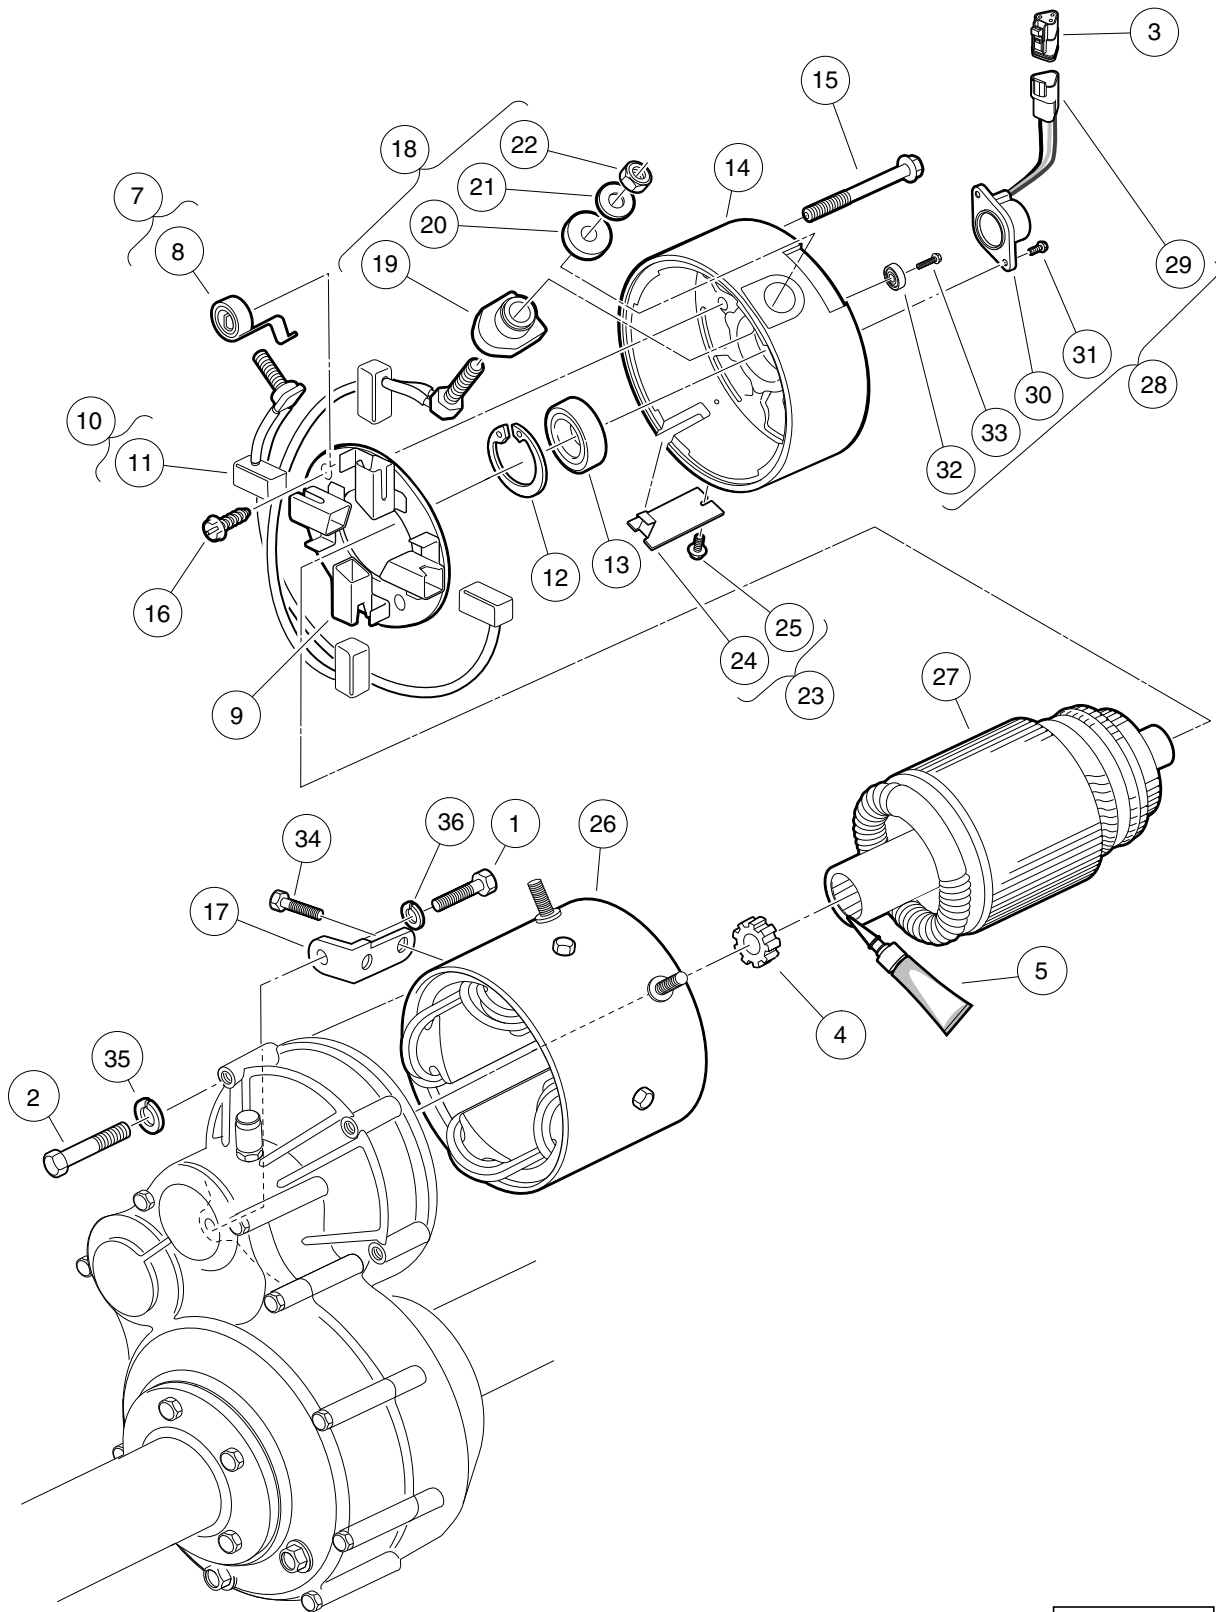


000185-001

MOTOR (MODEL EJ4-4001) – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1
2	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	3
3	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
4	<u>102235201</u>	Bumper, Drive Unit	1
5	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
6	<u>102705001</u>	IQ Electric Motor, 48-VDC 3.3 hp * (includes items 7 through 34)	1
7	<u>102186001</u>	Spring Kit, Motor Brush (includes item 8)	1
8	N/A	Spring, Brush, S-g	4
9	<u>102186101</u>	Brush Box Assembly	1
10	<u>102186201</u>	Brush Kit, Motor (includes item 11)	1
11	N/A	Assembly, Brush and Terminal	2
12	<u>102186301</u>	Ring, 2.24" Internal Retaining	1
13	<u>102186401</u>	Bearing, Ball	1
14	<u>102186701</u>	End Cap, Motor	1
15	N/A	Screw, 1/4-20 X 2.25 Hex-Head Washer	2
16	<u>102186901</u>	Screw, #8-32 X .5 Hex-Head	2
17	<u>102187001</u>	L-Bracket, Motor	1
18	<u>102187101</u>	Hardware Kit, Motor Terminal (includes items 19 through 22)	2
19	N/A	Bushing, Nylon	2
20	N/A	Washer, Nylon Flat	2
21	N/A	Washer, Flat, 5/16 Steel	2
22	N/A	Nut, Brass Hex, 5/16 - 18	2
23	<u>102187201</u>	Plate Kit, Motor Cover (includes items 24 and 25)	1
24	N/A	Assembly, Cover Plate	1
25	N/A	Screw, #8-32 x 0.375, Taptite Thread	1
26	<u>102704701</u>	Frame and Field Assembly	1
27	<u>102704801</u>	Armature Assembly	1
28	<u>102704901</u>	Kit, Speed Sensor (includes items 29 through 33)	1
29	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
30	N/A	Sensor, Motor Speed, ADC	1
31	N/A	Screw, #8-32, Taptite Thread	2
32	N/A	Magnet, ADC Motor	1
33	N/A	Screw, 1/4-20 x 0.5	1
34	N/A	Bolt, 1/4 - 20 x 0.73 Thread-Forming	2
35	<u>451</u>	Lockwasher, 1/4 Split	3
36	<u>7174</u>	Lockwasher, 5/16 Split	1
* Note: The model EJ4-4001 motor has been discontinued. To replace the motor, use motor model EJ8-4001A.			

 14
E

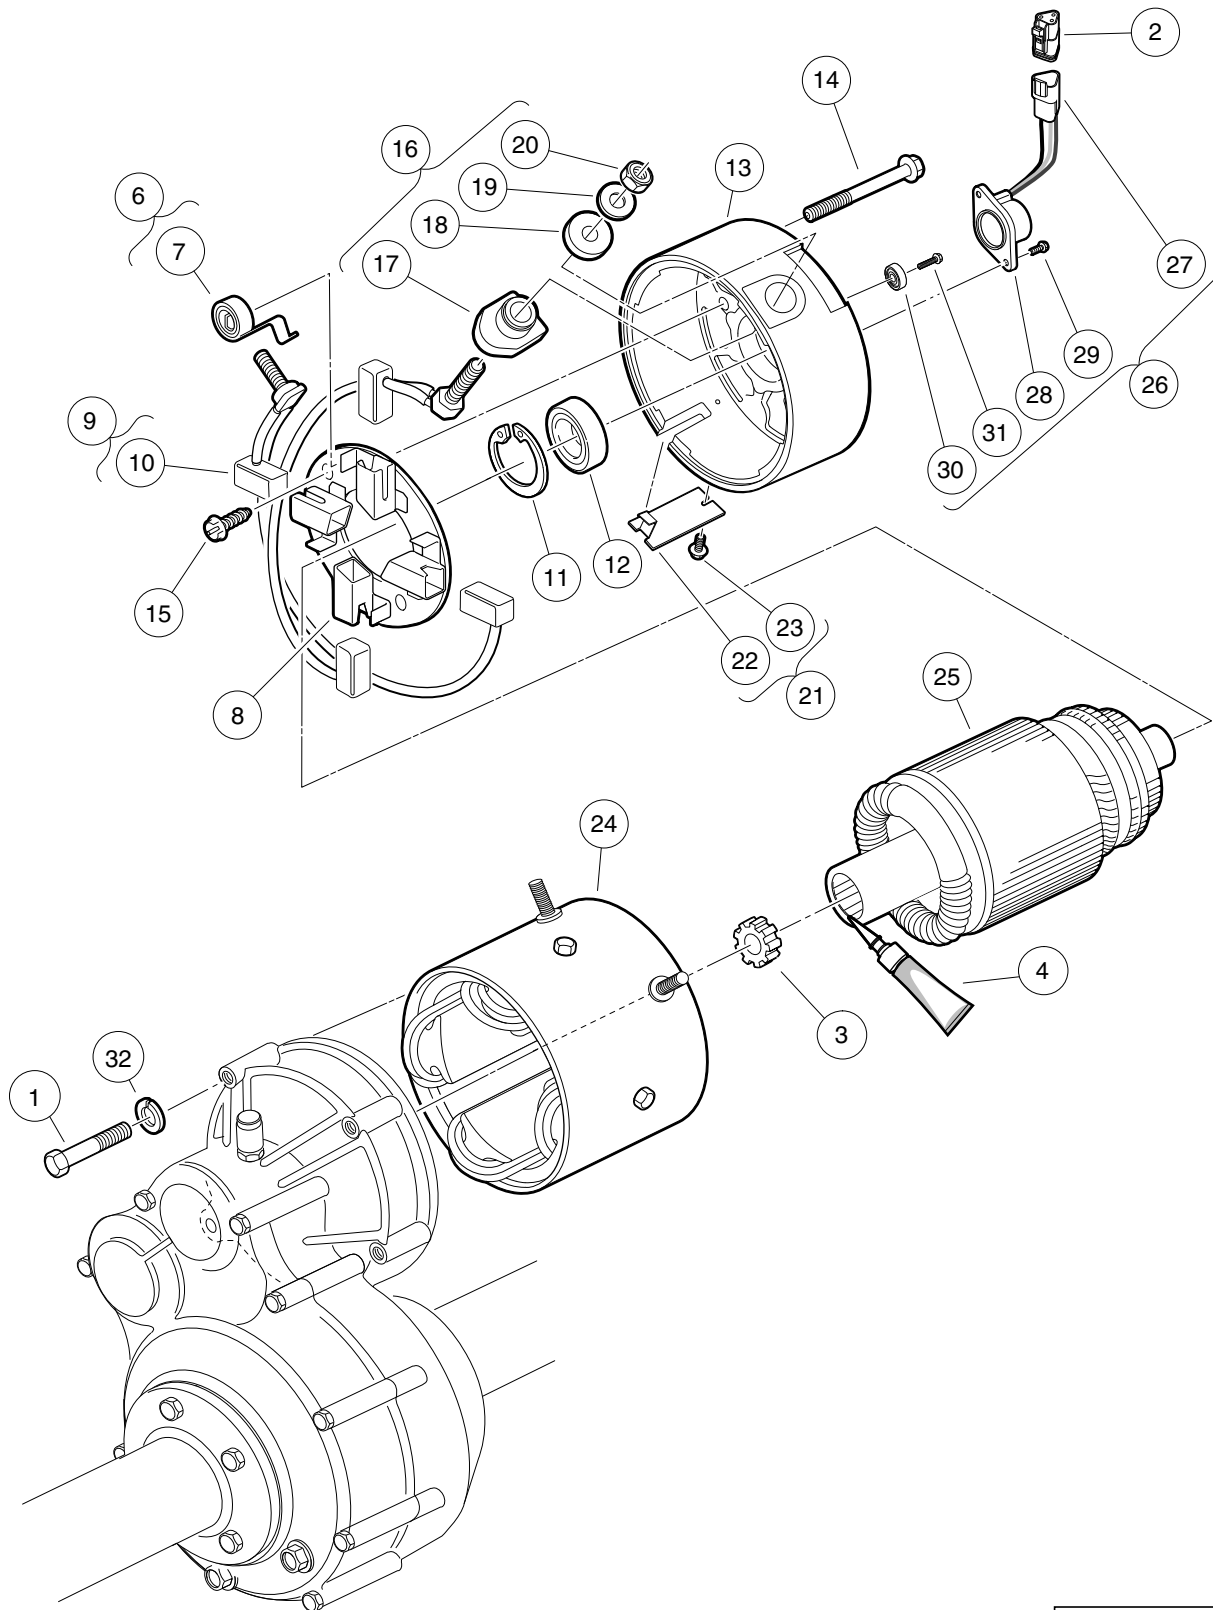

000185-002

MOTOR (MODEL EJ8-4001A) – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1014201	Screw, 1/4-20 X 2.25 Hex Cap	3
2	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
3	<u>102235201</u>	Bumper, Drive Unit	1
4	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
5	N/A	IQ Electric Motor, 48-VDC 3.3 hp (includes items 6 through 26)	1
6	<u>102186001</u>	Spring Kit, Motor Brush (includes item 7)	1
7	N/A	Spring, Brush, S-g	4
8	<u>102186101</u>	Brush Box Assembly	1
9	<u>102186201</u>	Brush Kit, Motor (includes item 10)	1
10	N/A	Assembly, Brush and Terminal	2
11	<u>102186301</u>	Ring, 2.24" Internal Retaining	1
12	<u>102186401</u>	Bearing, Ball	1
13	<u>102186701</u>	End Cap, Motor	1
14	N/A	Screw, 1/4-20 X 2.25 Hex-Head Washer	2
15	<u>102186901</u>	Screw, #8-32 X .5 Hex-Head	2
16	<u>102187101</u>	Hardware Kit, Motor Terminal (includes items 17 through 20)	2
17	N/A	Bushing, Nylon	2
18	N/A	Washer, Nylon Flat	2
19	N/A	Washer, Flat, 5/16 Steel	2
20	N/A	Nut, Brass Hex, 5/16 - 18	2
21	<u>102187201</u>	Plate Kit, Motor Cover (includes items 22 and 23)	1
22	N/A	Assembly, Cover Plate	1
23	N/A	Screw, #8-32 x 0.375, Taptite Thread	1
24	<u>102704701</u>	Frame and Field Assembly	1
25	<u>102704801</u>	Armature Assembly	1
26	<u>102704901</u>	Kit, Speed Sensor (includes items 27 through 31)	1
27	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
28	N/A	Sensor, Motor Speed, ADC	1
29	N/A	Screw, #8-32, Taptite Thread	2
30	N/A	Magnet, ADC Motor	1
31	N/A	Screw, 1/4-20 x 0.5	1
32	<u>451</u>	Lockwasher, 1/4 Split	3

14

 
E

TRANSAXLE – ELECTRIC VEHICLES

15

E

Note: This transaxle (as a complete unit) has been discontinued. To replace the entire transaxle, use the transaxle shown on the following pages.

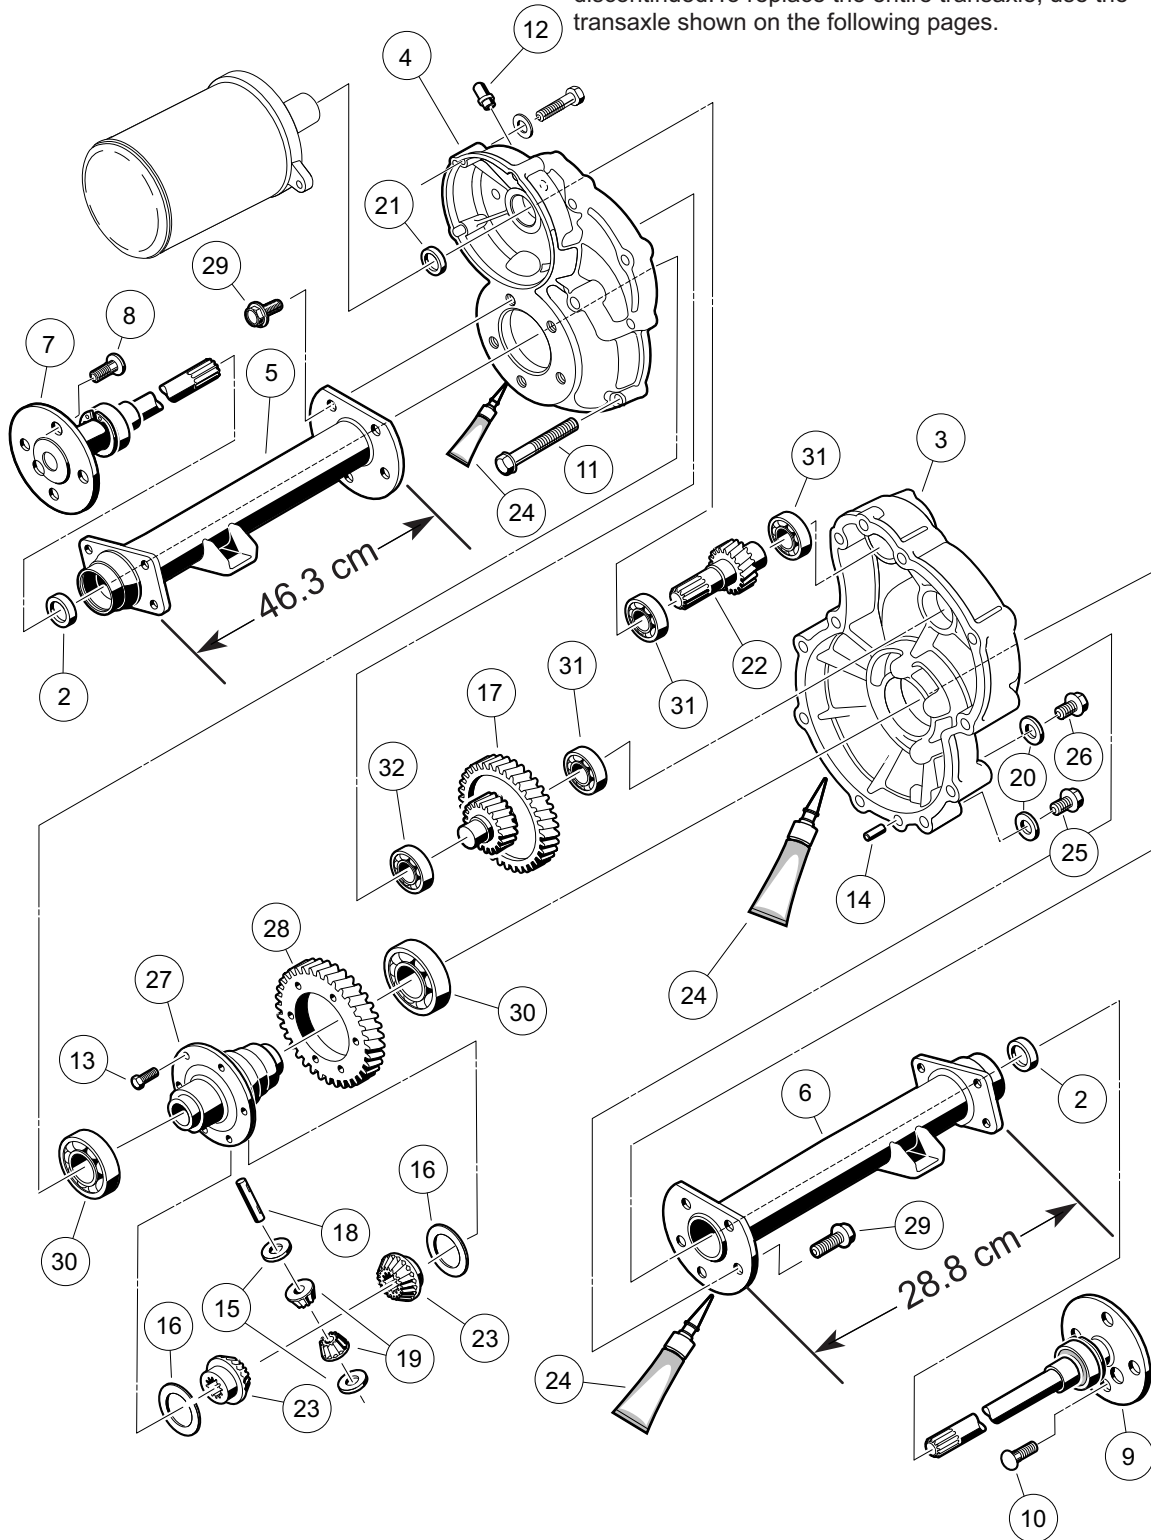


000223-001

TRANSAXLE – ELECTRIC VEHICLES (EARLIER STYLE)

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>101896001</u>	1 2 3 4 Transaxle -12.3 Note: If either the Differential Output Gear (item 28) or the Differential Housing (item 27) require replacement, both must be purchased at the same time. Items 27 and 28 are replacements for all gear and differential housing combinations in this transaxle.	1

15

 E

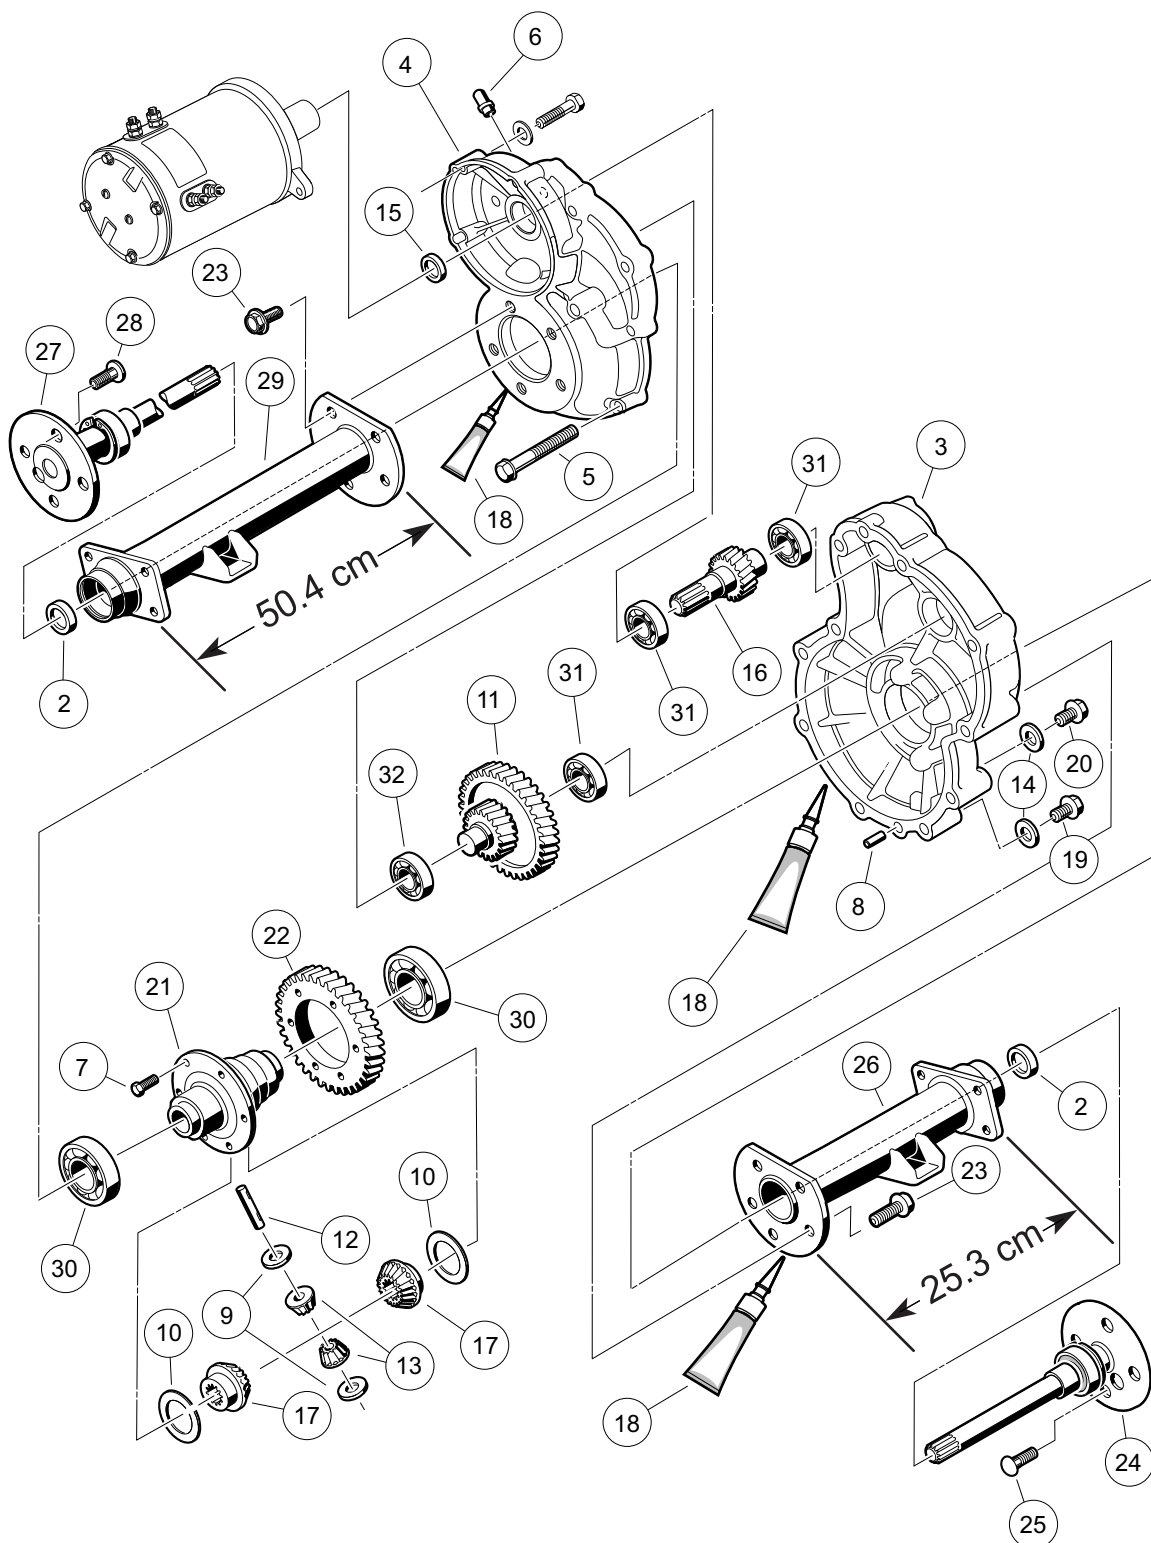


000223-002

TRANSAXLE – ELECTRIC VEHICLES (LATER STYLE)

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102771701</u>	Transaxle, Electric (includes items 2 through 32)	1
2	<u>1013794</u>	Axle Shaft Oil Seal	2
3	<u>101895401</u>	Gear Case, Left-Hand	1
4	<u>101895501</u>	Gear Case, Passenger-Side	1
5	<u>101897001</u>	Screw, M8-1.25 X 60mm Hex-Head	11
6	<u>101897201</u>	Breather	1
7	<u>101897401</u>	Screw, M10-1.25 X 25mm	6
8	<u>101897601</u>	Pin, 11mm OD X 8.5mm ID X 10mm	2
9	<u>101903601</u>	Washer, Thrust	2
10	<u>101903701</u>	Washer, Thrust	2
11	<u>101906901</u>	Intermediate Shaft Assembly	1
12	<u>101922101</u>	Pin, 15.99mm X 88.7mm Dowel	1
13	<u>101923001</u>	Gear, Differential Idler	2
14	<u>101923201</u>	Gasket	2
15	<u>101923501</u>	Seal, Lip	1
16	<u>101923701</u>	Shaft, Input	1
17	<u>101923901</u>	Gear, Differential	2
18	<u>101928701</u>	Liquid Gasket (Transaxle case)	1
19	<u>101972101</u>	Plug, M14-1.5 X 12mm Magnetic	1
20	<u>101972201</u>	Plug, M14-1.5 X 12mm Hex	1
21	<u>102356601</u>	Housing, Differential, 6 Bolt	1
22	<u>102356801</u>	Gear, Differential Output, 6-Bolt	1
23	<u>102357001</u>	Screw, Flg Hd M10 X 1.5 X 30	10
24	<u>102886301</u>	Axle Assembly, Driver-Side (includes item 25)	1
25	<u>101922201</u>	Lug Stud	4
26	<u>102886401</u>	Tube, Axle, Driver-Side	1
27	<u>102886501</u>	Axle Assembly, Passenger-Side (includes item 28)	1
28	<u>101922201</u>	Lug Stud	4
29	<u>102886601</u>	Tube, Axle, Passenger-Side	1
30	<u>7330</u>	Inner Axle Tube Bearing	2
31	<u>7335</u>	Bearing	3
32	<u>7336</u>	Bearing	1

15

 E

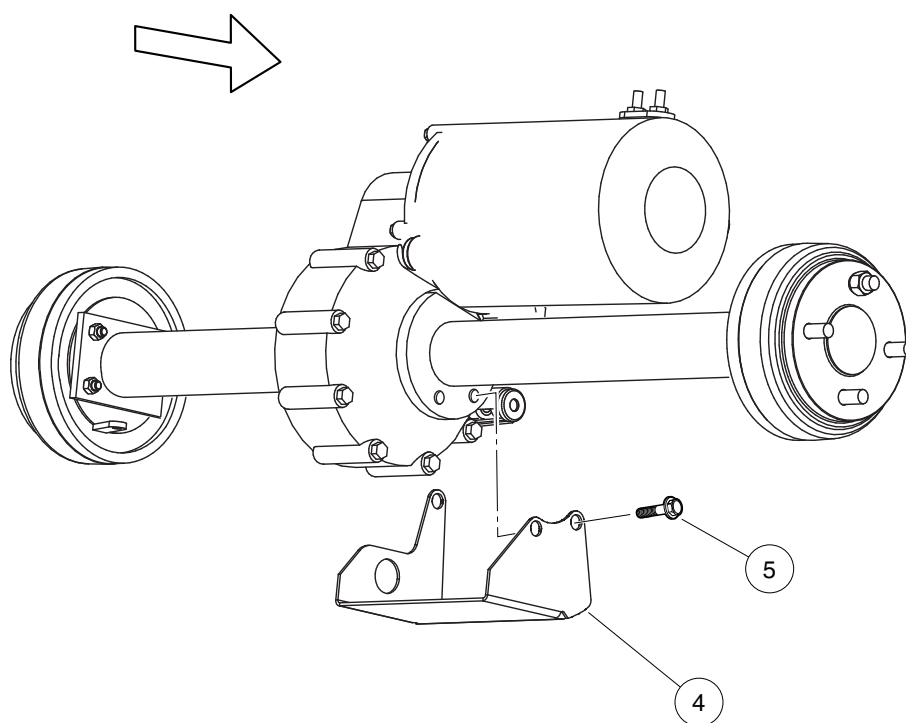

000365-001

DIFFERENTIAL GUARD – XRT810-E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101611402</u>	Differential Guard Kit (includes items 2 through 4)	1
2	<u>101911401</u>	Kit - Support Brace	2
3	<u>101936101</u>	Screw, M10-1.50 X 60mm Hex Cap	2
4	<u>101978601</u>	Guard, Elect.axle Differential	1
5	<u>102357001</u>	Screw, Flg Hd M10 X 1.5 X 30	3

15

E

15

E

 
BATTERY CHARGER

16

E

16

E

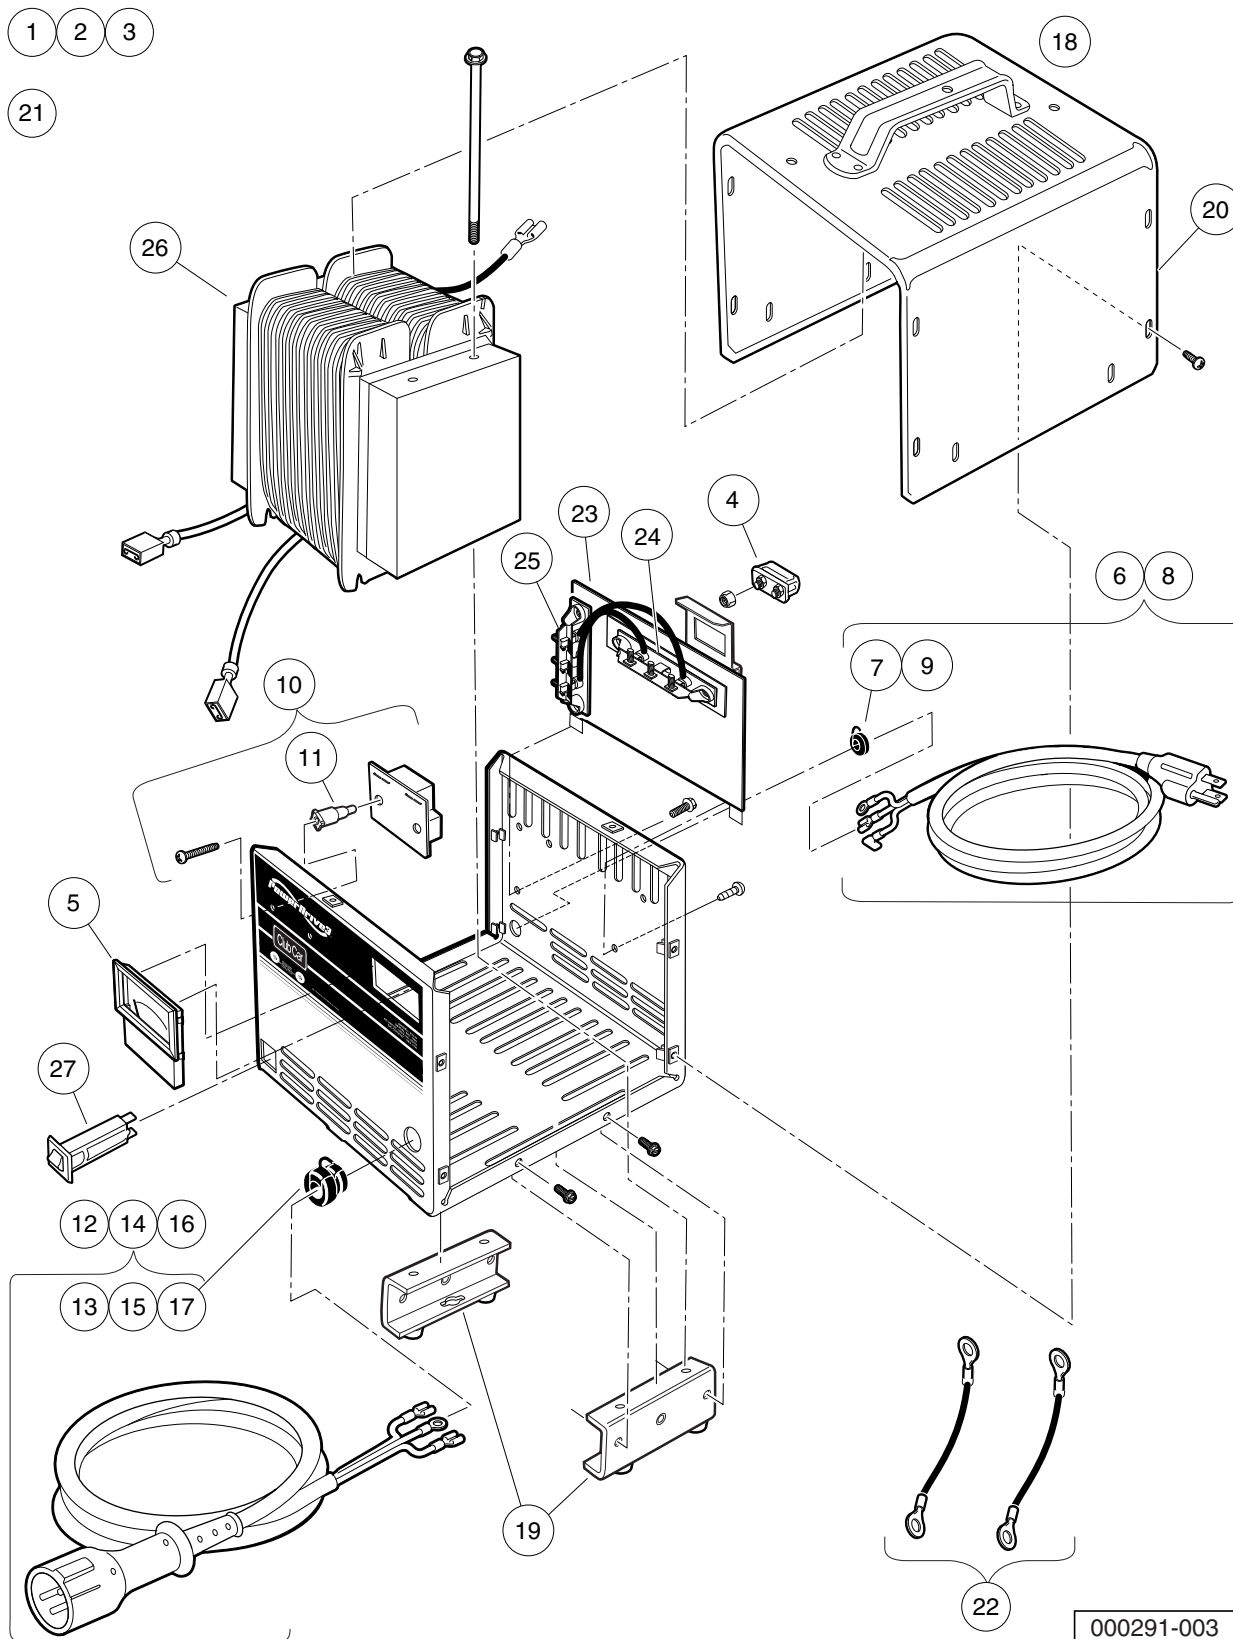


000291-003

POWERDRIVE 3 BATTERY CHARGER, DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103717001</u>	Chgr, Pd3 Stnry, 9Dc6'Ac'	1
2	<u>103717002</u>	Chgr, Pd3 Stnry, 12Dc9'Ac'	1
3	<u>103717003</u>	Chgr, Pd3 Stnry, 20Dc9'Ac'(includes items 4 through 27)	1
4	<u>102273701</u>	PD2 Fuse Asm	1
5	<u>102273801</u>	PD2 Ammeter	1
6	<u>103428501</u>	Kit, PD3 Cordset - AC 80" (includes item 7)	1
7	<u>102273901</u>	PD2 AC Cord Bushing	1
8	<u>103428601</u>	Kit, PD3 Cordset, - AC 114" (includes item 9)	1
9	<u>102273901</u>	PD2 AC Cord Bushing	1
10	<u>103428701</u>	Asm, PD3 Board Relay (includes item 11)	1
11	<u>103429701</u>	PD3 Plastic Stand-Offs	2
12	<u>103429001</u>	PD3 Cordset - DC 113" (includes item 13)	1
13	<u>1012098</u>	Bushing, DC Cord	1
14	<u>103429101</u>	PD3 Cordset - DC 154" (includes item 15)	1
15	<u>1012098</u>	Bushing, DC Cord	1
16	<u>103429201</u>	PD3 Cordset - DC 205" (includes item 17)	1
17	<u>1012098</u>	Bushing, DC Cord	1
18	<u>103429301</u>	Asm, PD3 Case (includes items 19 and 20)	1
19	<u>103434001</u>	Asm, PD3 Legs	1
20	<u>103439901</u>	PD3Case Top (Includes Handle)	1
21	<u>103429501</u>	Kit, PD3 Hardware	1
22	<u>103513001</u>	Wire Asm Kit Blk Pd3	1
23	<u>103517401</u>	Kit Pd3 Button Diode (includes items 24 and 25)	1
24	<u>103512801</u>	Asm Diode Top	1
25	<u>103512901</u>	Asm Diode Side	1
26	<u>103779601</u>	Transformer, Pd3, Al	1
27	<u>CCX8506</u>	Circuit Breaker, 15-Amp/120-Volt	1

16

 E

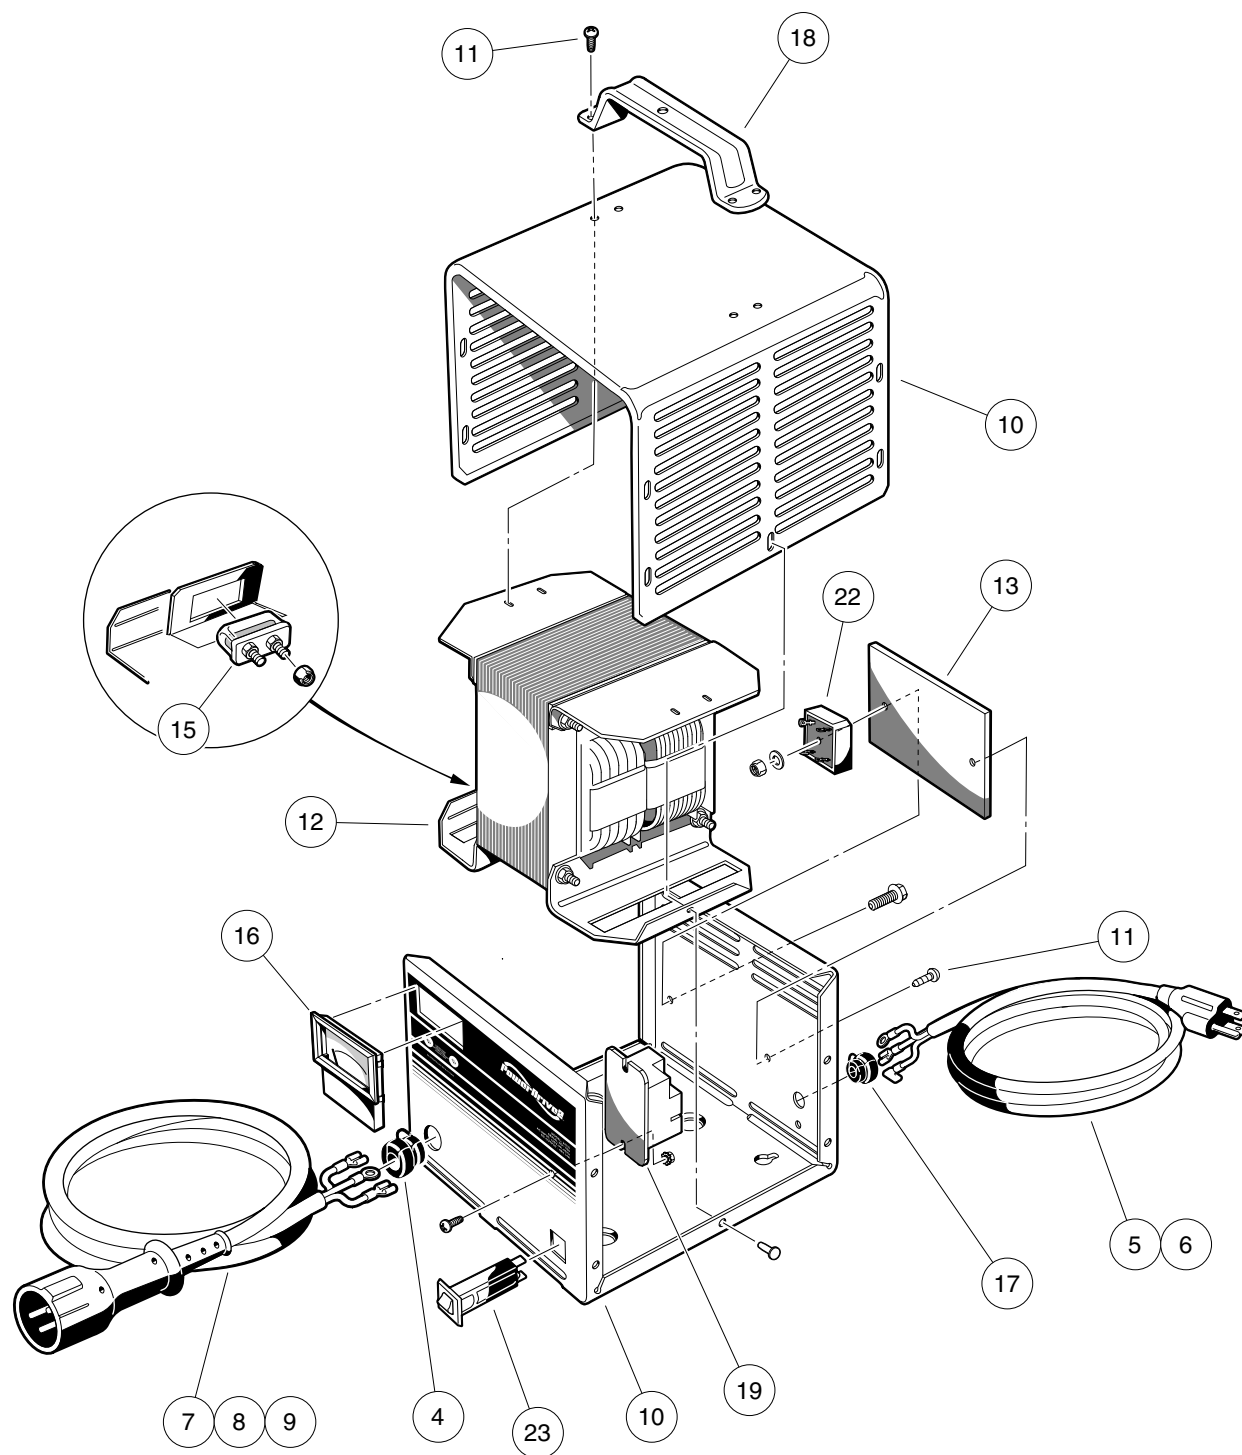

000291-001

POWERDRIVE 2 BATTERY CHARGER (MODEL 22110), DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101802204</u>	48-V/13-A PowerDrive 2 (9-ft. DC, 6-ft. AC)	1
2	<u>101802205</u>	48-V/13-A PowerDrive 2 (12-ft. DC, 9-ft. AC)	1
3	<u>101802206</u>	48-V/13-A PowerDrive 2 (20-ft. DC, 9-ft. AC) (includes items 4 through 23)	1
4	<u>1012098</u>	Bushing, DC Cord	1
5	<u>101828801</u>	Cord, AC, 80-Inch (203 cm)	1
6	<u>101828802</u>	Cord, AC, 108-Inch (274 cm)	1
7	<u>101828904</u>	PD2 DC Cordset, 113-inch	1
8	<u>101828905</u>	PD2 DC Cordset, 154-inch	1
9	<u>101828906</u>	Pd2 Dc Cordset 250 Inch	1
10	<u>102273201</u>	PD2 Case (includes item 11)	1
11	7577	Screw, #10 X 0.50 Phillips Pan-Head	12
12	<u>102273301</u>	PD2 Transformer Asm	1
13	<u>102273401</u>	PD2 Heatsink	1
14	<u>102273601</u>	PD2 Wire Asm	1
15	<u>102273701</u>	PD2 Fuse Asm	1
16	<u>102273801</u>	PD2 Ammeter	1
17	<u>102273901</u>	PD2 AC Cord Bushing	1
18	<u>102274001</u>	PD2 Handle	1
19	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes items 20 and 21)	1
20	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
21	N/A	Kit, Relay, 48v 30a Instrns	1
22	<u>103517601</u>	Pd2 Rectifier Kit	1
23	<u>CCX8506</u>	Circuit Breaker, 15-Amp/120-Volt	1
Note: Item 16 not shown. Level 1 Battery Charger part numbers include one AC and one DC cord. They do not include all of the level 2 cords listed.			

16

E

MAINTENANCE AND SERVICE TOOLS

17

G

E

 
D

17

G

E

D

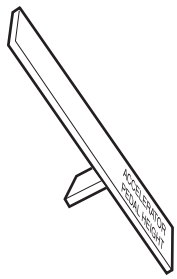


1



2



 3

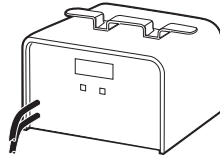


4




5



 6

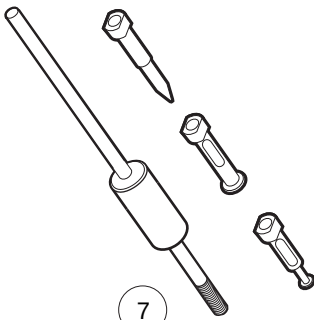


7

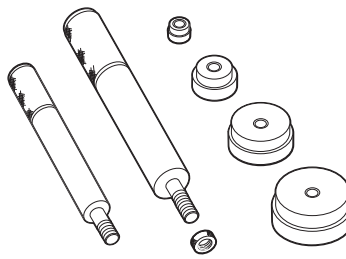 

8



 
9

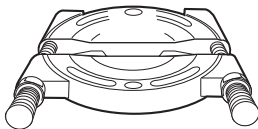


10



 
11

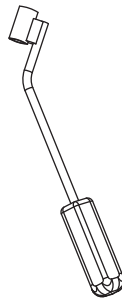


12

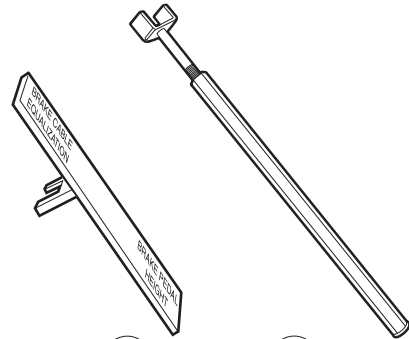 


14 15
13

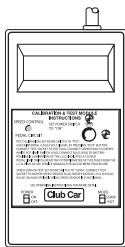 


16

 

17

 

18

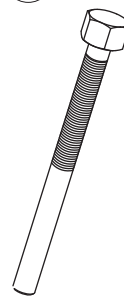 

19

MAINTENANCE AND SERVICE TOOLS


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17 G E D
		1 2 3 4 The following tool list includes all tools available from Club Car for maintenance and service procedures for gasoline, electric, and/or diesel vehicles, both past and present models. Be sure to carefully examine the tool list for applicability to your vehicle before ordering.				
1	<u>101871001</u>	Accelerator Pedal Adjustment Tool		1	1	
2	<u>101813202</u>	Adhesive, Guide Ring, 3-Gram Tube			1	
3	<u>101641202</u>	Arbor		1		
4	<u>101831901</u>	Battery Discharge Machine, 36/48 Volt			1	
5	<u>1014305</u>	Battery Terminal Protector Spray	1	1	1	
6	<u>1011767</u>	Battery Thermometer	1	1	1	
7	<u>1016417</u>	Bearing and Oil Seal Remover Assembly	1	1	1	
8	<u>1016416</u>	Bearing Driver Set	1	1	1	
9	<u>1012811</u>	Bearing Puller	1	1	1	
10	<u>1012812</u>	Bearing Puller Wedge Attachment	1	1	1	
11	<u>1013582</u>	Brake Adjustment Tool (used only on vehicles with manually adjusted mechanical brakes)		1	1	
12	<u>102555501</u>	Brake Cable Release Tool	1	1	1	
13	<u>102249901</u>	Brake Pedal Adjustment Tool Kit (used for the Carryall Electric Industrial Truck only) (includes items 14 and 15).....			1	
14	****	Brake Pedal Adjustment Tool			1	
15	****	Brake Pedal Tension Tool			1	
16	<u>101887101</u>	Calibration Test Module			1	
17	<u>101808401</u>	Cam Installation Tool		1		
18	<u>102562401</u>	Charger Bezel Tool			1	
19	<u>102686101</u>	Clutch Removal Tool (for 4x4 vehicles)	1	1		
		Please refer to the maintenance and service manual for proper tool application. **** Special order item available upon request				

17











G

E

 D

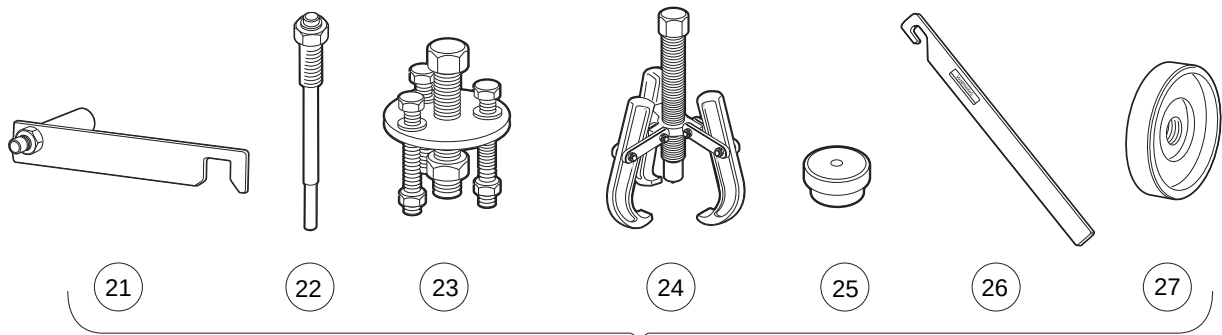

20

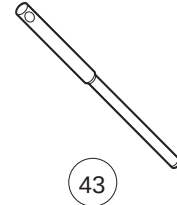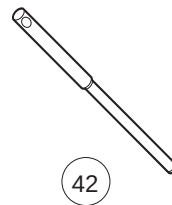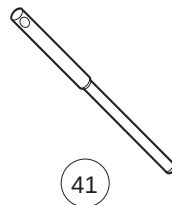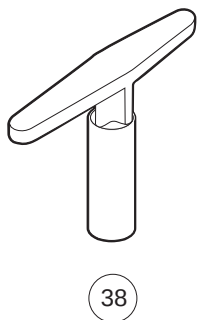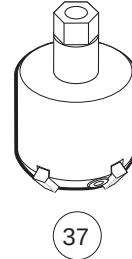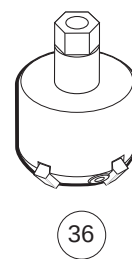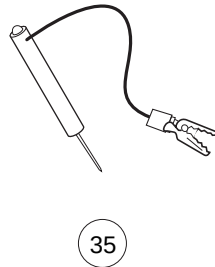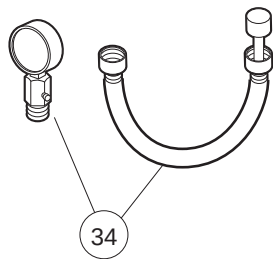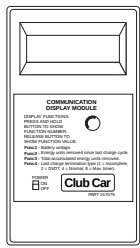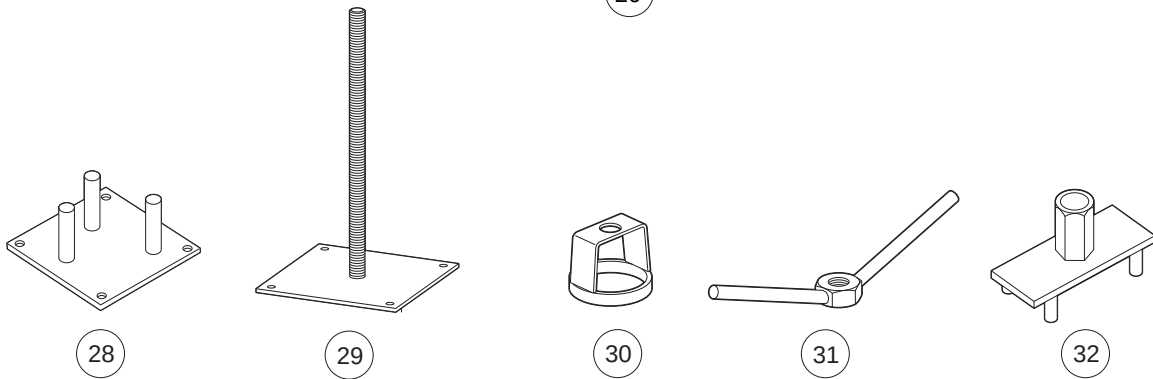          

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17 G E D
		1 2 3 4				
20	<u>1014510</u>	Clutch Tool Kit (includes items 21 - 27)		1		
21	<u>1014498</u>	Clutch Alignment Tool (for pre-unitized transaxle vehicles built prior to 1997 model year)		1		
22	<u>1014496</u>	Drive Clutch Puller (for Kawasaki engines only)		1		
23	<u>1014497</u>	Drive Clutch Hub Puller (for Kawasaki engines only)		1		
24	<u>1014508</u>	Driven Clutch Cam Puller (for Kawasaki engines only)		1		
25	<u>1014507</u>	Driven Clutch Puller Plug (for Kawasaki engines only)		1		
26	<u>1015524</u>	Drive Clutch Holder Tool Assembly (for Kawasaki engines only)		1		
27	<u>101809101</u>	Press Weldment (for Kawasaki engines only)		1		
28	<u>102601501</u>	Drive ClutchFixed Sheave Tool (for 4x4 vehicles)	1	1		
29	<u>102603501</u>	Driven Clutch Spring Compression Base (for use with items 30 and 31) (for 4x4 vehicles)	1	1		
30	<u>102605201</u>	Driven Clutch Spring Compression Collar (for use with items 29 and 31) (for 4x4 vehicles)	1	1		
31	<u>102606101</u>	Driven Clutch Spring Compression Nut (for use with items 29 and 30) (for 4x4 vehicles)	1	1		
32	<u>102607501</u>	Drive Clutch Spider Removal Tool (for 4x4 vehicles)	1	1		
33	101831801	Communication Display Module			1	
34	101641002	Compression Gauge and Adapter		1		
35	1011273	Continuity Tester		1	1	
36	<u>102773801</u>	Cutter, Valve Seat, #122		1		
37	<u>102773901</u>	Cutter, Valve Seat #115		1		
38	<u>102774101</u>	Wrench, T, #505.....		1		
39	<u>102774101</u>	Adapter, T-Wrench		1		
40	102675401	Cutter, Valve Seat, 60 Degree (requires item 51) (for Honda GX620 Gasoline Engines)		1		
41	<u>102774201</u>	Pilot, 6.6 MM		1		
42	<u>102774301</u>	Pilot, 6.62 MM.....		1		
43	<u>102774401</u>	Pilot, 6.65 MM.....		1		
		Please refer to the maintenance and service manual for proper tool application.				

17


G

E

 
D




44

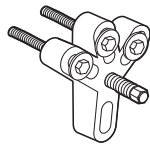 

45

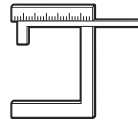 


46

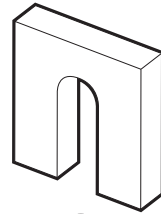 


47



 48




49

 

50



 51

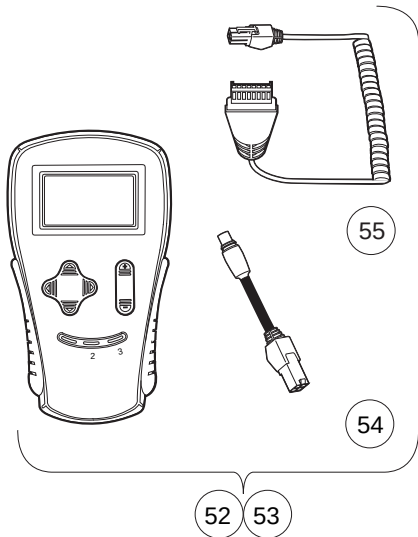


52

53

55

 54

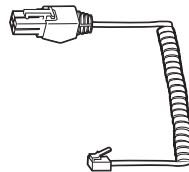

56



58

 


59

60



61



57

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17 G E D
		1 2 3 4				
44	<u>1012151</u>	Dry Moly Lubricant	1	1	1	
45	<u>1016627</u>	Flywheel Puller Kit (for Kawasaki Engines)		1		
46	<u>102669901</u>	Gauge, Carburetor Float Level (for Honda GX620 Gasoline Engines)		1		
47	<u>1016418</u>	Gear Yoke	1	1	1	
48	<u>101933101</u>	Governor Shaft Installation Tool (for Kawasaki Engine Vehicles)		1		
49	<u>102169401</u>	Hydraulic Brake Adjuster (for Turf/CA 272/472, Pioneer/XRT 1200, Bobcat 2100, HUV 4213)			1	
50	<u>1011478</u>	Hydrometer	1	1	1	
51	<u>1013593</u>	Internal Retaining Ring Pliers	1	1	1	
52	<u>102248803</u>	IQ Display Module (IQDM) Kit (IQ System and IQ Plus vehicles)			1	
		(includes items 54 and 55)				
53	<u>102248804</u>	IQ Display Module (IQDM-P) Kit (IQ System and IQ Plus vehicles)			1	
		(includes items 54 and 55)				
54	<u>102251501</u>	Adaptor, Cable			1	
55	<u>102241502</u>	IQDM Series 2 Cable			1	
56	<u>102241501</u>	IQDM Series 1 Cable (replacement)			1	
57	<u>101928701</u>	Liquid Gasket (transaxle case)	1	1	1	
58	<u>102243402</u>	Moly-Teflon Lubricant (4-oz. (113-gram) tube)			1	
59	<u>101997201</u>	Paint, Touch-Up – Beige*		1	1	
59	<u>101997207</u>	Paint, Touch-Up – Black*		1	1	
59	<u>101997212</u>	Paint, Touch-Up – Burgundy*		1	1	
59	<u>101997211</u>	Paint, Touch-Up – Classic Blue (Navy)*		1	1	
59	<u>101997205</u>	Paint, Touch-Up – Dark Gray*	1	1	1	
59	<u>101997209</u>	Paint, Touch-Up – Dark Green*	1	1	1	
59	<u>101997204</u>	Paint, Touch-Up – Gray*	1	1	1	
59	<u>101997203</u>	Paint, Touch-Up – Red*	1	1	1	
59	<u>101997206</u>	Paint, Touch-Up – Royal Blue (Pacific Blue)*		1	1	
59	<u>101997202</u>	Paint, Touch-Up – White*	1	1	1	
60	<u>102562301</u>	Paint, Precedent Underbody – Gray		1	1	
61	<u>102587201</u>	Paint Pen, Touch-Up, Precedent Underbody – Black		1	1	
Please refer to the maintenance and service manual for proper tool application. * Item 59 is not for use on Surlyn[®] body material, which is used on Precedent vehicles.						

17

 
G

E


D



62

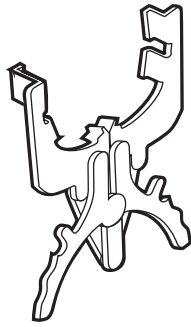

63

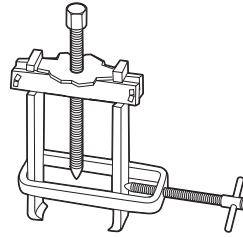 


64



65



 66



67



68



 
69



70




71

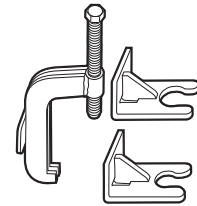

72



 73

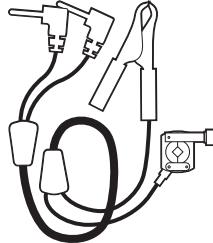


74




75



 76

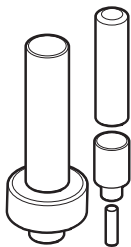

77

 

83



84



85




86

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17
		1 2 3 4				G
62	<u>1016414</u>	Piston Ring Compressor Kit (FE290, FE350 and FE400 engines)		1		E
63	<u>1016415</u>	Piston Ring Pliers (for Kawasaki Engines)		1		D
64	<u>102668801</u>	Puller, Special Use (for Kubota D722 Diesel Engines)	1			
65	<u>1012549</u>	Retaining Ring Pliers, 45° External	1	1	1	
66	<u>1012560</u>	Retaining Ring Pliers, 90° Internal	1	1	1	
67	<u>101823101</u>	Safety First Card (50 per pack)	1	1	1	
68	<u>1012809</u>	Seal Puller	1	1	1	
69	<u>102330901</u>	Spanner Wrench (for coil over shock front suspension vehicles only)	1	1		
70	<u>1014264</u>	Steering Column Bearing Press Tool		1	1	
71	<u>1014259</u>	Steering Column Retaining Ring Tool		1	1	
72	<u>102061201</u>	Steering Wheel Puller Tool	1	1	1	
73	<u>AM10753</u>	Tachometer (includes gasoline engine pick up lead only)	1	1		
74	<u>AM10771</u>	Tachometer Diesel Probe (for use with item 73)	1			
75	<u>1014162</u>	Transaxle Axle Seal Tool		1		
76	<u>1014161</u>	Transaxle Pinion Seal Tool		1		
77	<u>1014115</u>	Transmission Tool Kit		1		
78	<u>101611003</u>	Tune-Up Kit, All OHV (for FE290, FE350, FE400 only) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
79	<u>AM11804</u>	Tune-Up Kit, Gx620 (for Honda Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
80	<u>AM11805</u>	Tune-Up Kit, D722 (for Kubota Engines) (includes air filter, oil filter, fuel filters, water separator filter) (not shown)	1			
81	<u>AM1220301</u>	Tune-Up Kit, Precedent (for FE290/350 Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
82	<u>AM1232401</u>	Tune-Up Kit, FH680D (for Kawasaki V-Twin Engines) (includes oil filter, fuel filter, air filter, and spark plugs) (not shown)		1		
83	<u>1016413</u>	Valve Clearance Adjuster Screw Holder (for FE290 engines only)		1		
84	<u>102674601</u>	Valve Guide Driver (for Honda GX620 Gasoline Engines)		1		
85	<u>101641201</u>	Valve Guide Reamer (FE290, FE350, and FE400 only)		1		
86	<u>102674401</u>	Valve Guide Reamer, 6.6 mm (for Honda GX620 Gasoline Engines)		1		



 
87

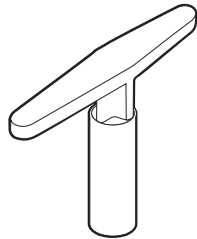


88

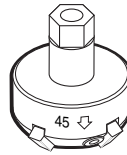 


89

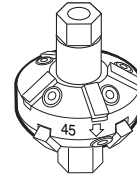 


90

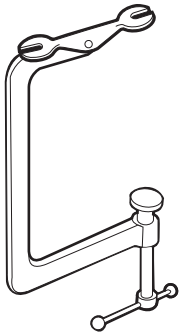 

91

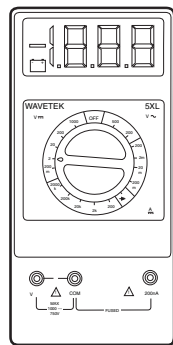 


92

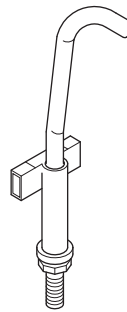 


93



 94

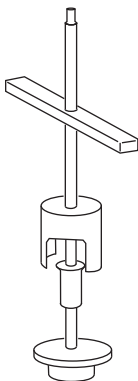

95

 

96

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17 G E D
		1 2 3 4				
87	<u>1016552</u>	Valve Seat Cutter Guide		1		
88	<u>1016551</u>	Valve Seat Cutter T-Wrench		1		
89	<u>1016553</u>	Valve Seat Cutter, 45° (32 mm diameter) (for FE290 engines only)		1		
90	<u>1016554</u>	Valve Seat Cutter, 45°/30° (35 mm diameter)		1		
91	<u>101641101</u>	Valve Spring Compressor		1		
92	<u>1011480</u>	Volt Ohm Meter	1	1	1	
93	<u>102570401</u>	Tool, Tensioning, Starter Generator (For Precedent vehicles)		1		
94	<u>103601401</u>	Puller, Drive Clutch, XRT 950*		1		
95	<u>103601701</u>	Tool, Disassembly, Driven Clutch, XRT 950		1		
96	<u>103600501</u>	Screw, Driven Clutch Disassembly, M6, XRT 950		1		
*Note: The XRT 950 Drive Clutch Puller requires the use of Screw, Driven Clutch Disassembly, CCI Part Number <u>103600501</u>.						

INDEX

Part Number and Page

AM10753	17-9	8248	9-3, 12-9, 13-13	101187702	4-5
AM10771	17-9	8251	1-19, 1-21, 12-11	1011893	5-9
AM10080	12-5	8450	11-3	1011895	5-7, 5-9
AM10081	12-5	8639	13-19	1011930	5-7, 5-9
AM10419	11-9	8717	4-9, 4-11, 6-9, 12-3, 12-9	1011931	1-25, 4-9, 4-11
AM10724	7-5, 8-5	8754	1-17, 4-7, 4-9, 4-11, 5-3, 5-7, 5-9, 5-11, 5-17, 6-15, 6-17	1011988	9-3
AM1209101	5-13	8755	1-29, 5-11, 5-17	1011990	1-17
CCX8506	16-3, 16-5	8797	9-5	1012098	16-3, 16-5
183	9-17, 11-3, 12-3	8861	5-9	1012151	17-7
304	1-27	8963	1-25	1012285	9-15, 12-3, 12-11, 13-13, 13-19
320	1-17, 1-27, 1-29	8990	5-7, 6-9, 13-13, 13-19	1012295	6-9
332	1-3, 1-19, 1-21, 1-23, 1-29, 9-17, 10-3, 10-5, 12-11, 13-13	1010124	5-11	1012303	1-29, 5-11, 5-17
334	1-29, 4-9, 4-11, 5-3, 5-7, 7-15, 8-15	1010138	1-27, 5-9	1012304	5-17
357	5-11	1010142	5-17	1012333	12-11
451	10-3, 10-5, 14-3, 14-5, 14-7, 14-9	1010144	5-17	1012412	1-19, 1-21
705	6-15, 6-17, 7-15, 8-15	1010145	5-17	1012431	12-9, 13-21
706	5-11	1010150	5-11	1012467	5-7
808	11-3	1010219	5-9	1012528	10-3, 10-5, 13-19
1017	6-7, 13-7	1010436	1-13	1012549	17-9
1028	4-5	1010543	1-23	1012560	17-9
1032	4-5	1010545	1-27	1012571	7-15, 8-15
1035	4-7, 5-7, 5-9	1010577	7-15, 8-15	1012594	12-9
1241	1-5, 1-25, 4-5, 4-7, 4-9, 4-11, 6-9, 6-15, 6-17, 6-19, 10-3, 10-5, 14-3, 14-5	1010805	4-5	1012604	5-3
1242	4-7, 6-9, 6-15, 6-17, 13-19	1010829	4-7	1012605	5-3
1308	5-9	1010877	4-5	1012649	9-3
1606	9-17	1010878	1-29, 4-5	1012711	12-3
1624	4-9, 4-11, 5-7	1010921	4-5	1012714	12-5
2402	5-9	1010927	4-5	1012740	12-5
7048	5-13, 5-15	1010932	4-5	1012741	12-5
7173	6-19	1010933	4-5	1012747	12-5
7174	5-3, 6-15, 6-17, 9-15, 10-3, 10-5, 13-19, 14-3, 14-5, 14-7	1010934	6-19, 14-3, 14-5, 14-7	1012752	12-3
7310	2-3	1010953	4-3	1012809	17-9
7311	1-25	1010954	6-9, 12-3, 12-9	1012811	17-3
7330	12-7, 15-5	1010984	2-3	1012812	17-3
7335	12-5, 15-5	1010993	1-19, 1-21	1012830	6-15, 6-17, 9-15, 10-3, 10-5
7336	15-5	1011084	4-13	1012836	11-9
7473	1-25, 4-5, 4-7, 4-9, 4-11, 6-9, 6-19	1011273	17-5	1012896	12-3
7539	5-9	1011280	14-3, 14-5	1012986	6-11
7540	5-7, 5-9	1011285	14-3, 14-5	1012987	12-9
7555	5-7, 5-9	1011290	14-3, 14-5	1012991	6-13
7577	16-5	1011291	12-7	1013001	6-13
7602	5-7, 5-9	1011402	4-5	1013003	6-13
7716	4-5, 4-9, 4-11	1011411	14-3, 14-5	1013005	6-13
7818	6-9	1011415	5-17	101301102	6-13
7847	1-19, 1-21, 1-25, 1-29, 10-3, 10-5	1011418	4-5	1013035	5-7
7893	6-9, 12-11	1011478	17-7	1013042	5-7
8056	13-21	1011480	17-11	1013044	5-7
8057	12-9, 13-21	1011578	1-27, 5-3	1013051	5-7
8058	12-9	1011652	1-23	1013052	5-7
8067	5-13, 5-15	1011694	4-9, 4-11	1013061	12-3, 13-15
8233	1-3, 1-19, 1-21, 1-25, 1-29, 4-9, 4-11, 9-3, 12-3, 12-9, 12-11, 13-13	1011697	5-3, 8-15, 9-11, 9-15, 13-17	1013164	5-17
		1011700	4-9, 4-11	1013461	6-7, 9-5, 13-7
		1011734	4-13	1013462	9-5
		1011767	17-3	1013531	4-7
		1011779	4-7	1013582	17-3

INDEX

1013587	12-9	1014201	14-3, 14-5, 14-7, 14-9	1015737	6-9
1013589	6-9, 12-9	1014207	12-7	1015741	6-9
1013590	12-9	1014213	5-3	1015752	6-9, 9-17, 13-11
1013591	12-9	1014214	5-3	1015814	10-3, 10-5
1013593	17-7	1014217	5-3	101584502	9-15
1013609	6-9	1014259	17-9	1015921	9-5
1013687	9-3	1014264	17-9	1015932	6-15, 6-17
1013700	9-15	1014276	5-11	1015969	7-3, 8-3
1013734	10-3, 10-5, 13-19	1014287	11-3	1016004	9-5
1013746	9-3, 9-5, 9-11, 9-13	1014288	5-3, 6-19, 11-3, 13-19	1016074	6-15, 6-17
1013760	12-3	1014289	6-13	1016103	9-11
1013768	12-7	1014304	13-17	101611003	17-9
1013769	12-7	1014305	17-3	101611402	15-7
1013770	12-7	1014306	1-19, 1-21	1016183	5-3
1013771	12-7	1014375	6-19	1016201	11-3, 12-9
1013772	12-7	1014453	11-3	1016203	11-5
1013773	12-7	1014454	11-9	1016269	5-3
1013774	12-7	1014496	17-5	1016289	11-3
1013787	12-7	1014497	17-5	1016337	12-5
1013792	12-7	1014498	17-5	1016338	12-5
1013794	12-7, 15-5	1014507	17-5	1016341	12-3
1013857	6-11, 13-9	1014508	17-5	1016342	12-9
1013869	4-5	1014510	17-5	1016346	5-9
1013870	4-5	1014524	9-3	1016349	5-9
1013871	4-9, 4-11	101454902	5-17	1016350	5-9
1013876	1-27, 4-5	1014555	5-17	1016351	5-9
1013924	4-3, 7-15, 8-15	1014573	5-17	1016353	5-9
1013983	1-15	1014675	5-17	1016384	5-11
1014007	4-9, 4-11, 12-3	1014727	12-9	1016385	5-9
1014049	11-3	1014807	12-9	1016386	5-11
1014050	11-3	1014901	5-17	1016387	5-11
1014052	11-3	1014902	5-17	1016389	5-11
1014055	11-3	1014928	9-3	101641002	17-5
1014056	11-3	1014947	13-19	101641101	17-11
1014057	11-3	1014948	6-9, 13-19	101641201	17-9
1014058	11-3	101503202	1-3	101641202	17-3
1014059	11-3	1015064	12-9	1016413	17-9
1014062	11-3	1015072	13-17	1016414	17-9
1014063	11-3	1015137	9-5, 9-11, 9-13	1016415	17-9
1014065	6-9, 11-3, 12-9	1015139	9-5	1016416	17-3
1014070	11-9	1015143	9-5	1016417	17-3
1014072	11-9	101524001	6-15	1016418	17-7
1014076	11-9	101524002	6-17	1016423	6-9
1014078	11-9	1015330	7-9, 10-3	101642572	9-7
1014080	11-9	1015332	7-3, 8-3	101642575	9-7, 9-9
1014089	12-9	1015345	6-9	101642578	9-7, 9-9
1014115	17-9	1015371	6-9	101642580	9-7, 9-9
1014116	9-3	1015372	6-9	101642582	9-7, 9-9
1014119	6-9	1015373	6-9	101642585	9-9
1014125	5-3	1015405	6-9	1016429	7-7, 8-7
1014126	5-3	1015426	9-17	1016430	7-9
1014145	6-9, 12-9	101547601	3-5	1016431	7-9
1014153	4-3	1015524	17-5	1016432	7-7, 8-7, 12-3
1014161	17-9	1015583	1-29, 5-11, 5-17	1016435	7-7
1014162	17-9	1015597	5-7, 5-9, 5-13, 5-15	1016436	7-9, 8-9
1014193	12-7	1015649	7-3, 8-3	1016437	9-7, 9-9

INDEX

1016438	9-11, 9-13	1016510	7-11, 8-11	1016576	7-7, 8-7
1016439	9-11	1016513	12-3	1016578	7-5, 8-5
1016440	7-9, 8-9, 9-11, 9-13	1016516	7-13	1016579	7-5, 8-5
1016441	9-11, 9-13	1016517	7-9, 8-9	1016580	7-13
1016443	7-3	1016518	8-9	1016581	7-7, 8-7
1016444	9-11, 9-13	1016519	7-9, 8-9	1016582	9-11, 9-13
1016445	7-5, 8-5	1016520	7-11	1016583	7-9, 8-9
1016446	7-9, 7-11	1016521	7-11, 8-11	1016584	7-11, 8-11
1016447	7-9	1016523	7-9	1016585	9-7, 9-9
1016448	7-9	1016524	7-3	1016586	7-5, 8-5
1016449	7-9, 8-9	1016525	7-3	1016587	7-5, 8-5
1016450	7-9, 8-9	1016526	7-3	1016588	7-5, 8-5
1016451	7-9	1016531	7-3, 8-3	1016627	17-7
1016452	7-9, 8-9	1016532	7-13	1016630	6-11
1016453	7-11	1016533	7-13	1016672	12-7
1016454	7-11, 8-11	1016535	7-11, 8-11	1016801	11-3
1016455	7-5, 8-5	1016536	7-3	1016851	13-21
1016456	7-3, 7-5, 7-11, 8-3, 8-5	1016537	7-7, 8-7	1016879	6-7, 13-7
1016457	7-7, 8-7	1016538	7-11, 8-11	1016880	6-7, 13-7
1016458	7-9, 7-11, 8-9	1016539	7-3, 8-3	1016883	6-15, 6-17
101645901	7-13	1016541	7-13, 8-13	1016901	11-3
101645902	7-13	1016542	7-9	1016904	8-9, 10-5
101645903	7-13	1016544	7-5, 7-9, 7-11, 8-5, 8-9, 8-11	1016916	1-23
1016460	7-13	1016545	7-9	1016947	12-9
101646101	7-13	1016546	9-15	1016952	1-19, 1-21
101646102	7-13	1016547	7-3, 7-13, 8-3, 8-13, 9-11, 9-13	1017029	4-5
101646103	7-13	1016548	7-5	1017062	6-7, 13-7
1016467	7-7, 8-7	1016549	7-9, 8-9	1017064	6-7, 13-7
1016469	7-13	101655001	7-13	1017065	6-7, 13-7
1016470	7-13, 8-13	101655002	7-13	1017082	12-3
1016471	7-9	101655003	7-13	1017141	1-19, 1-21
1016472	7-11, 8-11	101655004	7-13	1017188	11-7
1016473	7-7, 8-7	101655005	7-13	1017203	9-3
1016474	7-9, 8-9	101655006	7-13	1017221	7-3
101647501	7-13	101655007	7-13	1017226	5-3
101647502	7-13	101655008	7-13	1017231	12-3
1016479	7-9, 8-9	101655009	7-13	1017235	5-17
1016480	9-11, 9-13	1016551	17-11	1017266	5-9
101648102	9-11, 9-13	1016552	17-11	1017273	5-5
101648203	7-7, 8-7	1016553	17-11	1017313	5-3
1016483	7-9, 8-9	1016554	17-11	1017314	5-3
1016484	7-7	1016558	7-13	1017315	5-3
1016486	9-7, 9-9	1016559	7-13	1017317	5-3
1016489	7-9, 8-9	1016560	7-9, 8-9	1017378	4-9, 4-11
101649002	9-11, 9-13	1016561	7-5, 8-5	1017380	4-9, 4-11
1016493	7-5	1016562	7-5, 7-13, 8-5, 8-13	1017424	4-9, 4-11
1016494	7-11, 8-11	1016563	7-9, 8-9	1017434	8-9
1016496	7-11, 8-11	1016564	7-11, 8-11	1017435	8-9
1016497	7-5, 8-5	1016565	7-11	1017442	8-7
1016499	9-7, 9-9	1016566	7-9, 8-9	1017443	8-9, 8-11
1016501	9-7, 9-9	1016567	7-11	1017444	8-9
1016502	7-7, 8-7	1016568	7-13	1017445	8-9
1016505	7-5	1016569	7-9, 8-9	1017446	8-9
1016506	7-11, 8-11	1016570	7-7, 8-7	1017447	8-11
1016507	7-3, 8-3	1016571	7-13, 8-13	1017448	7-5, 8-5
1016509	7-13	1016572	9-11, 9-13	101744901	8-13

INDEX

101744902	8-13	101791101	4-3	101832601	8-15
1017450	8-13	1017944	14-3, 14-5	101832701	7-15, 8-15
101745101	8-13	1017947	14-3, 14-5	101833101	8-15
101745102	8-13	1017948	14-3	101833201	7-15
1017453	8-13	1017949	14-3, 14-5	101833401	11-9
1017454	8-9	1017950	14-3, 14-5	101833601	12-3
1017455	7-5, 8-5	1017953	14-3, 14-5	101833701	6-13
1017456	7-7, 8-7	101795701	13-17	101833906	11-3
101745701	8-13	101796201	4-9, 4-11	101834001	11-9
101745702	8-13	101796501	13-15	101834601	7-15, 8-15
1017458	8-7	101796801	13-15	101834801	12-3
1017460	8-7	101801001	13-15	101835601	1-29
1017461	9-7, 9-9	101802101	13-15	101836201	11-9
1017463	8-5	101802204	16-5	101837101	9-17
1017466	9-11, 9-13	101802205	16-5	101837301	6-15, 6-17
1017468	7-5, 8-5	101802206	16-5	101850301	9-17
1017471	8-13	101804301	9-17	101855002	13-13
1017472	8-11	101805701	9-17	101855801	1-19, 1-21, 12-11
1017473	8-9	101806901	1-31	101856002	13-13
1017474	8-3	101808401	17-3	101856102	6-9
1017475	8-3	101809101	17-5	101856201	9-17
1017476	8-3	101811401	9-17	101859301	10-3
1017486	8-3	101811501	9-17	101859401	10-5
1017487	8-11	101811801	9-17	101861901	4-9, 4-11
1017490	8-5	101811901	9-17	101862001	4-11
1017500	8-3	101812301	9-17	101869302	6-13
1017501	8-13	101813001	9-17	101871001	17-3
1017502	8-13	101813202	17-3	101874901	6-13
1017503	8-13	101815501	4-3	101875001	6-13
1017504	8-11	101815502	4-3	101875101	6-13
1017507	7-7, 8-7	101816401	4-3	101875102	6-13
1017508	8-11	101816501	4-3	101875201	6-13
1017510	8-13	101816502	4-3	101875301	6-13
1017512	8-13	101817401	4-9, 4-11	101875401	6-13
1017513	8-11	101818801	4-9	101875501	6-13
1017514	8-11	101820201	9-11	101875601	6-13
101751801	8-11	101821501	9-17	101875701	6-13
101751802	8-11	101823101	17-9	101875802	6-13
101751803	8-11	101823201	4-3	101876001	6-13
1017653	6-13	101823801	4-3	101876202	6-13
1017686	11-9	101824401	9-3, 9-5	101876301	6-13
1017689	10-3, 10-5	101826801	13-19	101876402	6-13
1017696	4-9, 4-11	101827101	7-15, 8-15	101876501	6-13
1017705	13-15	101827801	13-19	101877601	6-13
101773301	8-13	101828801	16-5	101877701	6-13
101773302	8-13	101828802	16-5	101878101	6-13
101773303	8-13	101828904	16-5	101878201	4-5
101773304	8-13	101828905	16-5	101878302	5-7
101773305	8-13	101828906	16-5	101879001	6-13
101773306	8-13	101830701	13-9	101879401	5-7
101773307	8-13	101831801	17-5	101879501	5-7
101773308	8-13	101831901	17-3	101879601	5-7
101773309	8-13	101832001	13-15	101879701	5-7
101773310	8-13	101832101	7-15	101879801	5-7
101773311	8-13	101832202	9-15	101879901	5-7
1017774	1-25	101832302	9-15	101880001	5-7

INDEX

101880101	5-7	101909501	7-5, 8-5	101932902	12-13
101880201	5-7	101909701	7-3	101933101	17-7
101880301	5-7	101910401	1-25, 13-19	101936101	15-7
101881101	7-5, 8-5	101910501	12-7	101936801	13-11
101881701	9-17	101911401	15-7	101939901	6-13
101884801	7-15, 8-15	101912401	4-13	101942301	13-13, 14-3, 14-5, 14-7, 14-9
101886101	12-3	101915201	3-5	101951501	12-11
101887101	17-3	101915401	7-11	101953101	4-7
101887601	7-3, 8-3, 9-11	101915501	7-13	101953802	8-3
101889401	12-5	101915601	7-3	101953901	7-3
101890001	12-5	101915801	7-5	101954301	1-3, 1-23
101890101	12-3	101916001	8-13	101955301	9-3
101890201	12-3	101916101	8-3	101960501	1-31, 3-5
101890501	12-3	101916201	8-5	101963401	6-9, 7-15, 8-15
101890601	12-3	101916301	8-5	101965205	13-19
101890901	12-7	101916701	6-15, 6-17, 11-3	101971001	9-17
101891001	12-7	101917601	9-17	101971301	9-17
101891301	12-3	101917701	9-17	101972001	17-7
101891401	12-7	101918501	4-5	101972002	17-7
101891501	12-7	101919801	4-9, 4-11	101972003	17-7
101891601	12-5	101920101	13-11, 13-13, 14-3, 14-5, 14-7, 14-9	101972004	17-7
101891901	12-5	101921501	9-17	101972005	17-7
101892001	12-5	101922101	15-5	101972006	17-7
101892201	12-5	101922201	15-5	101972007	17-7
101892301	12-5	101922301	7-13	101972009	17-7
101892401	12-5	101922501	13-13	101972011	17-7
101892501	12-5	101922601	12-11	101972012	17-7
101892601	12-5	101923001	15-5	101972101	15-5
101892701	12-7	101923201	15-5	101972201	15-5
101892901	12-3	101923501	15-5	101972801	9-17
101893201	12-5	101923701	15-5	101973101	9-7, 9-9
101893801	12-3	101923901	15-5	101973201	9-7
101893901	12-5	101925701	9-17	101973301	9-9
101895401	15-5	101926501	5-17	101973401	9-13
101895501	15-5	101926901	12-3, 12-13	101978601	15-7
101896001	15-3	101927101	12-3	101979101	12-9
101896501	6-13	101927201	12-3	101980801	12-5
101896901	9-5	101927301	12-3	101980901	12-5
101897001	15-5	101927501	12-5	101981001	12-5
101897201	15-5	101927601	12-5	101984801	5-3
101897401	15-5	101927701	12-5	101987701	9-3
101897601	15-5	101927901	12-5	101987901	6-7, 13-7
101898001	6-19	101928001	12-5	101988001	6-7, 13-7
101903101	5-11	101928101	12-5	101988002	6-7, 13-7
101903601	15-5	101928301	12-7	101988101	6-7, 13-7
101903701	15-5	101928601	12-3	101988201	6-7, 13-7
101905601	9-7	101928701	12-3, 15-5, 17-7	101990703	6-11
101905901	9-9	101929301	7-5	101990801	4-7
101906901	15-5	101929401	5-17	101991101	6-11
101908101	13-13	101929801	11-3	101998211	1-23
101908401	13-13	101929802	11-3	101998212	1-23
101908601	3-11	101931501	3-11, 13-19	101998214	1-23
101908701	13-19	101932401	13-13	101998215	1-23
101909201	7-5, 8-5	101932501	13-13	101998501	1-23
101909301	7-5, 8-5	101932601	13-19	102003201	9-3
101909401	7-5, 8-5	101932701	13-19	102022101	4-7

INDEX

102025801	1-3	102265801	14-3, 14-5	102511301	13-17
102025901	6-11	102265901	14-3, 14-5	102511302	13-17
102026001	4-9, 4-11	102266001	14-3, 14-5	102522001	9-5
102031901	12-7	102266101	14-3, 14-5	102540301	7-15, 8-15
102044702	6-11	102266501	13-19	102544201	1-25
102044801	6-11	102266601	13-13	102555501	17-3
102045001	1-3	102266701	13-13	102562401	17-3
102045901	12-3	102267001	14-3, 14-5	102570401	17-11
102048401	1-3	102273201	16-5	102581201	1-25
102051601	6-11	102273301	16-5	102588501	5-17
102051701	6-11, 13-9	102273401	16-5	102601501	17-5
102051901	6-11, 13-9	102273601	16-5	102603501	17-5
102061201	17-9	102273701	16-3, 16-5	102605201	17-5
102065901	1-29, 7-15, 8-15	102273801	16-3, 16-5	102606101	17-5
102066201	4-7	102273901	16-3, 16-5	102607501	17-5
102101001	13-11	102274001	16-5	102618601	1-7, 1-9
102101101	13-11	102278001	5-3	102668801	17-9
102155801	11-9	102278801	3-9, 3-15	102669901	17-7
102169401	17-7	102289001	1-29	102674001	17-5
102174201	1-23	102289002	1-7, 1-9	102674101	17-5
102174202	1-23	102289301	1-29	102674201	17-5
102174204	1-23	102296530	1-25	102674401	17-9
102174205	1-23	102298240	1-7, 1-9	102674601	17-9
102186001	14-7, 14-9	102304701	7-9	102675001	17-5
102186101	14-7, 14-9	102304801	8-9	102675101	17-5
102186201	14-7, 14-9	102310701	1-15	102675201	17-5
102186301	14-7, 14-9	102323101	4-5	102675301	17-5
102186401	14-7, 14-9	102323201	4-5	102675401	17-5
102186701	14-7, 14-9	102327801	14-3	102686101	17-3
102186901	14-7, 14-9	102330901	17-9	102704701	14-7, 14-9
102187001	14-7	102336001	9-15	102704801	14-7, 14-9
102187101	14-7, 14-9	102336101	9-15	102704901	14-7, 14-9
102187201	14-7, 14-9	102352801	5-13, 5-15	102705001	14-7
102196901	13-13	102353201	5-13, 5-15	102711201	6-9
102198001	6-11, 13-9	102353301	5-13, 5-15	102753401	7-9, 8-9
102221201	1-19, 1-21	102353401	5-13, 5-15	102766701	1-3
102235201	14-3, 14-5, 14-7, 14-9	102354103	5-13	102771701	15-5
102240102	14-3	102354104	5-15	102777401	13-17
102240104	14-5	102354203	5-13	102777601	1-19, 1-21
102240501	13-19	102354204	5-15	102777602	1-19, 1-21
102241501	17-7	102355102	1-17	102778501	1-3
102241502	17-7	102355301	6-19	102778502	1-3
102242101	1-5, 11-9	102356601	15-5	102778503	1-3
102243402	17-7	102356801	15-5	102778504	1-3
102243403	14-3, 14-5, 14-7, 14-9	102357001	15-5, 15-7	102778505	1-3
102248803	17-7	102406701	9-5	102778507	1-3
102249901	17-3	102430901	8-13	102778509	1-3
102251501	17-7	102431001	8-11	102778601	1-3
102251901	14-3	102453001	12-5	102779001	1-27
102259801	13-19	102453101	12-5	102779401	1-27
102263601	13-19	102499001	13-9	102779501	1-27
102263701	13-19	102503221	1-25	102796101	1-25
102264001	6-9	102503222	1-25	102796201	5-5
102265501	14-3	102503224	1-25	102796301	1-25
102265601	14-3, 14-5	102508601	13-9	102796302	1-25
102265701	14-3, 14-5	102508701	13-9	102796501	1-13

INDEX

102796701 1-3
 102796801 1-19
 102796802 1-19
 102796803 1-19
 102796804 1-19
 102796805 1-19
 102797201 1-29
 102803001 6-5
 102804501 6-11
 102804502 6-11
 102804503 13-9
 102804504 13-9
 102806201 13-19
 102810301 1-11
 102810501 13-5
 102815801 2-3
 102815901 2-3
 102816201 1-25
 102818301 1-21
 102818302 1-21
 102818303 1-21
 102818305 1-21
 102819101 2-3
 102820301 1-29
 102820501 1-29
 102821101 1-29
 102822001 1-3
 102822002 1-3
 102822401 5-5
 102823201 1-29
 102825401 3-7
 102825402 3-7
 102825501 3-13
 102825502 3-13
 102825601 3-7
 102825701 3-13
 102828701 1-3, 1-11, 1-13
 102829703 1-17
 102829704 1-17
 102829802 1-17
 102830201 1-9
 102830401 5-11
 102830501 1-7
 102830801 13-9
 102831901 3-3, 3-13
 102832001 3-3, 3-13
 102832601 13-17
 102833301 3-3, 3-11
 102840301 1-25
 102850801 3-9
 102850901 3-9
 102851001 3-15
 102851101 3-15
 102851201 3-9
 102851301 3-9
 102851401 3-15

102851501 3-15
 102852401 1-9
 102857401 1-3
 102861401 2-5
 102865101 9-3
 102886301 15-5
 102886401 15-5
 102886501 15-5
 102886601 15-5
 102913101 1-25
 102913102 1-25
 102913601 5-11
 102914301 1-3
 102959401 1-13
 102967901 1-3, 6-11, 13-9
 103010101 9-3
 103189901 1-27
 103200701 13-9
 103246701 1-23
 103246801 1-23
 103282601 13-19
 103293501 1-27
 103313301 1-5
 103316701 13-19
 103316801 13-19
 103316901 13-19
 103317501 1-27
 103317601 1-27
 103325501 14-5
 103325601 14-5
 103325701 14-5
 103325801 14-5
 103337601 14-5
 103345701 11-3
 103351001 5-9
 103372101 9-5
 103372302 9-5
 103377201 4-7
 103377301 4-7
 103379501 12-11
 103380201 4-3
 103380202 4-3
 103397901 16-5
 103403101 13-19
 103414901 16-5
 103428501 16-3
 103428601 16-3
 103428701 16-3
 103429001 16-3
 103429101 16-3
 103429201 16-3
 103429301 16-3
 103429501 16-3
 103429701 16-3
 103434001 16-3
 103439901 16-3

103477901 5-13, 5-15
 103483101 4-3
 103483102 4-3
 103483201 4-3
 103483301 4-3
 103483401 4-3
 103483501 4-3
 103483601 4-3
 103483701 4-3
 103507001 5-11
 103512801 16-3
 103512901 16-3
 103513001 16-3
 103517401 16-3
 103517601 16-5
 103520301 9-17
 103601601 5-3
 103651901 9-5
 103717001 16-3
 103717002 16-3
 103717003 16-3
 103776901 9-5
 103779601 16-3
 103781101 9-3
 103781201 9-3
 96704416 7-15, 8-15

A

absorber, rear shock 5-17
 AC cord 16-5
 AC cord bushing 16-3, 16-5
 AC cordset 16-3
 accelerator bracket and bearing assembly 4-9, 4-11
 accelerator cable 9-15
 accelerator pedal 4-9, 4-11
 accelerator pedal adjustment tool 17-3
 accelerator pivot rod 4-9, 4-11
 accelerator return spring 4-9, 4-11
 accelerator rod 4-13
 accessory receptacle 6-11, 13-9
 adapter
 cable (IQDM) 17-7
 adhesive, guide ring 17-3
 adjuster
 hydraulic brake 17-7
 adjuster, lash 8-11
 air box 9-17
 air box top 9-17
 air filter 9-17
 air intake hose 9-17
 ammeter 16-3, 16-5
 angled bumper mount 5-17
 A-plate strap 5-9
 A-plate, delta 5-9
 arbor 17-3

INDEX

- arm
 - governor 12-3
 - pivot 12-3
 - rocker 7-9, 8-9
- armature 6-13, 14-3, 14-5, 14-7, 14-9
- armature conversion kit 6-13
- assembly
 - accelerator bracket and bearing 4-9, 4-11
 - accelerator pivot rod 4-9, 4-11
 - air box 9-17
 - air box top 9-17
 - armature 6-13
 - axle 12-7
 - bearing, steering shaft 5-3
 - bell crank and shaft 6-9
 - brake lever 4-3
 - brush connector 6-13
 - brush holder 6-13
 - carburetor 9-7, 9-9
 - connecting rod 7-13, 8-13
 - cylinder head 8-9
 - delta A-plate 5-9
 - delta shock and gear support 5-9
 - drive hub 11-3
 - driven clutch 11-9
 - driven clutch fixed-face 11-9
 - field coil 6-13
 - float 9-7, 9-9
 - Forward/Reverse shifter 12-9
 - frame and field (motor) 14-7, 14-9
 - fuel tank vent 9-5
 - governor 12-5
 - headlight 6-7, 13-7
 - headlight harness 6-7, 13-7
 - idle screw 9-7, 9-9
 - inner ball joint 5-7
 - kingpin 5-11
 - moveable-face 11-3, 11-9
 - pilot air screw 9-7, 9-9
 - plug cap 8-5
 - ratchet 4-5
 - secondary clutch weight 11-3
 - steering shaft 5-3
 - turn signal lens 6-7, 13-7
- axle 12-7, 15-3, 15-5
- axle guard 12-13, 15-7
- axle shaft oil seal 12-7, 15-5
- axle tube 15-5
- B**
- backrest 1-25
- bag, desiccant 11-3
- ball bearing 8-11
- ball joint 4-5, 4-13, 5-7, 5-9, 12-11
- ball joint, left-hand thread 5-7, 5-9
- ball stud 6-9, 12-3, 12-9
- ball, bearing 5-13, 5-15
- ball, shifter 12-5
- ball, steel pressure relief 7-7, 8-7
- band, RPM limiter mount 7-5, 8-5
- bar, drive 13-11
- barb, vent 9-3, 9-5
- battery 6-19
- battery charger 16-5
- battery charger case 16-5
- battery charger handle 16-5
- battery charger receptacle 13-15
- battery charger transformer 16-5
- battery clamp 6-19
- battery condition indicator, 48-volt 13-9
- battery discharge machine 17-3
- battery hold-down, 12-volt 13-17
- battery light 13-9
- battery terminal protector spray 17-3
- battery thermometer 17-3
- battery, 12-volt, Trojan T1275, moist 13-17
- battery, 12-volt, Trojan T1275, wet 13-17
- bearing 15-5
 - ball 5-13, 5-15, 8-11
 - ball (motor) 14-7, 14-9
 - ball (steering pinion) 5-7
 - idler 11-3
 - inner axle tube 12-7, 15-5
 - lower pinion (steering) 5-7
 - needle 12-5
 - outer axle tube 12-7
 - pivot support 4-9, 4-11
 - steering shaft 5-3
 - thrust 5-11
- bearing and oil seal remover 17-3
- bearing driver set 17-3
- bearing puller 17-3
- bearing puller wedge 17-3
- bearing retainer 14-3, 14-5
- bearing seat 5-3
- bed support 1-25
- bed support stiffener 1-29
- bed, cargo 1-27
- bell crank 12-9
- bell crank and shaft 6-9
- bellows 5-7
- belt, drive 11-5, 11-7
- belt, starter/generator 6-15, 6-17, 11-3
- bezel, headlight 6-7, 13-7
- block, brake-mounting 4-5
- block, fuse 6-9
- body kick plate 1-19, 1-21
- body, front 1-3
- body, rear 1-19, 1-21
- bolt, J- 13-17
- bolt, U- 5-17
- boot, steering column 5-3
- boot, switch 13-13
- bottom, air box 9-17
- box
 - air 9-17
 - dash 1-11
 - electrical component 6-9
 - glove 1-13
 - steering gear 5-7
- box lock kit, glove 1-13
- brace, canopy 1-5
- brace, seat support cross 1-25
- bracket 5-17, 6-11, 7-3
 - accelerator cable 9-15
 - adjustable starter/generator 6-15, 6-17
 - governor cable 9-15
 - headlight mounting 6-7, 13-7
 - muffler mounting 10-3, 10-5
 - oil filter mount 7-7, 8-7
 - oil level switch 7-11, 8-11
 - RPM limiter 7-5, 8-5
 - shifter 12-3, 12-11
 - snubber 7-15, 8-15
 - starter/generator mounting 6-15, 6-17
 - steering column 5-3
 - steering column mounting 5-3
 - throttle spring return 9-11, 9-13
 - Tow/Run switch 13-13
- brake adjusting mechanism 4-3
- brake adjustment tool 17-3
- brake cable 4-7
- brake cable equalizer 4-7
- brake cable release tool 17-3
- brake drum 4-3
- brake lever 4-3
- brake mounting block 4-5
- brake pedal 4-5
- brake pedal adjustment tool 17-3
- brake pedal pad 4-5
- brake pedal tension tool 17-3
- brake return spring 4-7
- brake self-adjusting mechanism 4-3
- brake shoe 4-3
- brake spring 4-3
- breaker, circuit 16-3, 16-5
- breather 12-3, 15-5
- brush 14-3, 14-5, 14-7, 14-9
- brush and screw set 6-13
- brush box assembly 14-7, 14-9
- brush connector 6-13
- brush guard 1-9
- brush guard support 5-11
- brush holder 6-13
- brush inspection port cover 6-13
- brush port cover 6-13
- brush rigging 14-3, 14-5, 14-7, 14-9
- brush spring 14-3, 14-5, 14-7, 14-9

INDEX

brush spring set 6-13
 bulb, headlight 6-7, 13-7
 bumper
 cast 1-7
 drive unit (motor) 14-3, 14-5, 14-7, 14-9
 jounce 5-17
 rubber 1-13, 1-29, 4-5
 side trim 1-15
 spring return 4-9, 4-11
 bumper mount, angled 5-17
 bushing 11-3
 AC cord 16-3, 16-5
 bronze 5-13, 5-15
 nylon 4-5
 return line 9-5
 spindle 5-13, 5-15
 steel 1-29, 5-11, 5-17
 urethane 1-29, 5-9, 5-11, 5-17
 bushing, insulated 14-3, 14-5
 button, choke 9-17
 button, drive 11-9
 buzzer, reverse 13-21

C

cable
 accelerator 9-15
 brake 4-7
 governor 9-15
 IQDM 17-7
 transmission 12-11
 cable retainer 1-19, 1-21, 12-11
 cable, cargo bed 1-27
 calibration test module 17-3
 cam
 driven clutch 11-9
 electrical component box 6-9
 neutral lockout 12-9
 cam installation tool 17-3
 camshaft 7-11, 8-11
 camshaft shim 8-11
 canopy brace 1-5
 cap
 dust 13-13
 plug 8-5
 spark plug 7-5
 carburetor 9-7, 9-9
 carburetor float level tool 17-7
 carburetor gasket 9-13
 carburetor insulator 9-11, 9-13, 14-3, 14-5
 carburetor mounting gasket 9-11, 9-13
 card, safety first 17-9
 cargo bed 1-27
 cargo bed hinge 1-29
 case
 battery charger 16-5
 differential gear 12-7

 FNR switch 13-13
 gear 12-3, 15-5
 rocker 7-9, 8-9
 case, charger 16-3
 cast bumper 1-7
 catch, tilt bed 1-27
 center, steering wheel 5-5
 charger bezel tool 17-3
 charger board relay 16-3
 charger case 16-3
 charger hardware 16-3
 charger legs 16-3
 charger receptacle 13-15
 charger, battery 16-5
 choke button 9-17
 choke lever 9-17
 choke lever guide 9-17
 choke positioner 9-17
 choke valve 9-17
 circuit breaker 16-3, 16-5
 clamp
 battery 6-19
 cable retaining 9-15
 hose 9-3, 9-5, 9-11, 9-13, 9-17
 muffler hose 10-3, 10-5
 clevis, upper delta 5-11
 cluster idler gear 12-5
 clutch alignment tool 17-5
 clutch pulley 11-3
 clutch removal tool 17-3
 clutch repair kit 11-9
 clutch tool kit 17-5
 clutch weight 11-3
 clutch, drive 11-3
 clutch, driven 11-9
 coil, field 6-13
 coil, ignition 7-5, 8-5
 collet 7-9, 8-9
 column, steering 5-3
 communication display module 17-5
 component box, electrical 6-9
 component mounting plate 13-19
 compression gauge 17-5
 compression lug 13-19
 compression spring 9-17
 compressor, piston ring 17-9
 compressor, valve spring 17-11
 computer, onboard 13-19
 connecting rod 7-13, 8-13
 connector, a- 6-13
 connector, four-pin 13-13
 connector, speed controller 13-19
 continuity tester 17-5
 controller cover 13-19
 controller cover gasket 13-19
 controller, motor speed 13-19

cord connector 7-11, 8-11
 cord set, DC 16-5
 cord, AC 16-5
 Cordset
 PD3, AC 114" 16-3
 PD3, AC 80" 16-3
 PD3, DC 113" 16-3
 PD3, DC 154" 16-3
 PD3, DC 205" 16-3
 counterbalance guide shaft 7-13, 8-13
 counterbalance weight 7-13, 8-13
 cover
 brush inspection port 6-13
 brush port 6-13
 cowl 1-3
 crankcase 7-11, 8-11
 electrical box 6-9
 oil pump 7-7, 8-7
 steering column 5-3
 cover gasket, controller 13-19
 cover plate 14-7, 14-9
 cover, controller 13-19
 cover, speed controller 13-19
 cowl 1-3
 cowl cover 1-3
 cowl support 1-3
 crank, bell 12-9
 crankcase 7-13, 8-13
 crankcase cover 8-11
 crankcase cover gasket 7-9, 7-11
 crankcase vent tube 9-11, 9-13
 crankshaft 7-13, 8-13
 crankshaft rod 8-13
 crankshaft seal 7-11
 crankshaft shim 7-13, 8-13
 cross brace, seat support 1-25
 C-type stop ring 5-7
 cup, spring 4-9, 4-11
 cushion, shock absorber 5-17
 cutter, valve seat 17-5, 17-11

D

damper, RPM limiter 7-5, 8-5
 dash 1-3
 dash box 1-11
 DC cord set 16-5
 DC cordset 16-3
 decal
 800 3-9
 810 3-9
 810E 3-15
 Club Car 3-9, 3-15
 component cover 3-11, 13-19
 crush area 3-3, 3-13
 crush warning 3-3, 3-13
 driver/passenger 3-5

INDEX

frame ground 3-5
instrument panel warning 3-7, 3-13
operating instructions 3-7, 3-13
owner notice 3-3, 3-11
rotating parts 1-31, 3-5
Tow/Run switch warning 3-11
delta A-plate 5-9
delta A-plate sub-assembly 5-9
delta shock and gear support 5-9
desiccant bag 11-3
DF-terminal insulator 6-13
diesel tachometer probe 17-9
differential 15-3
drive unit 15-5
differential gear 12-7, 15-5
differential gear case 12-7
differential guard 12-13, 15-7
differential housing 15-5
differential idler gear 12-7
differential pin 12-7
diode 6-9, 13-19
dipstick 7-3, 8-3
drain plug 7-7, 8-7
drain plug gasket 7-7, 8-7, 12-3
drive bar 13-11
drive belt 11-5, 11-7
drive button 11-9
drive clutch 11-3
drive clutch button 11-3
drive clutch fixed sheave tool 17-5
drive clutch fixed-face 11-3
drive clutch holder tool 17-5
drive clutch hub puller 17-5
drive clutch puller 17-5
drive clutch spider removal tool 17-5
drive clutch spring 11-3
drive clutch weight 11-3
drive hub 11-3
drive unit 15-3
drive unit bumper 14-3, 14-5, 14-7, 14-9
drive unit guard 12-13, 15-7
driven clutch 11-9
driven clutch button 11-9
driven clutch cam 11-9
driven clutch cam puller 17-5
driven clutch fixed-face assembly 11-9
driven clutch puller plug 17-5
driven clutch spring compression base tool 17-5
driven clutch spring compression collar tool 17-5
driven clutch spring compression nut tool 17-5
driver, drive clutch 11-3
drum, brake 4-3
dry moly lubricant 17-7

dust cap 13-13

E

E-clip 4-7
electrical box cover 6-9
electrical component box 6-9
end bell, commutator 6-13
end bell, output shaft 6-13
end cap, motor 14-3, 14-5, 14-7, 14-9
end shield
motor 14-3, 14-5
engine 7-3
engine mounting plate 7-15, 8-15
engine shroud 7-3, 8-3
engine valve spring 7-9
engine, FE350 CW without ACR 8-3
equalizer rod 4-7
equalizer, brake cable 4-7
exhaust system 10-3, 10-5
exhaust valve 7-9, 8-9
extension, spring latch 1-27
extrusion 13-19

F

face, moveable 11-3, 11-9
fan housing 7-3, 8-3
fan shroud 7-3, 8-3
fan, flywheel 7-5, 8-5
fender 1-19, 1-21
field coil 6-13
field coil housing 6-13
fill plug 12-3
filter
air 9-17
fuel 9-3
oil 7-7, 8-7
oil pump 8-7
fitting, thread-forming grease 5-7, 5-9, 5-13, 5-15
fixed-face, drive clutch 11-3
fixed-face, driven clutch 11-9
float 9-7, 9-9
floor mat 1-3
flywheel 7-5, 8-5
flywheel fan 8-5
flywheel fan plate 7-5, 8-5
flywheel puller 17-7
FNR handle 12-9
FNR shifter base 12-9
FNR switch case 13-13
foam, seat 1-23
fork, shift 12-5
Forward/Reverse shifter 12-9
frame and field assembly (motor) 14-7, 14-9
front body 1-3
front body support 1-19, 1-21

front hub 5-13, 5-15
front spring retainer plate 5-11
F-terminal hardware 6-13
f-terminal insulator 6-13
fuel filter 9-3
fuel gauge sending unit 9-5
fuel gauge/hour meter 6-11
fuel line 9-3, 9-5, 9-11, 9-13
fuel tank 9-5
fuel tank strap 9-3
fuel tank vent 9-5
fuse 13-15
10-amp 6-9
20-amp 6-9
3/8-amp 13-15
charger 16-3, 16-5
fuse block 6-9

G

gasket 15-5
carburetor 9-13
carburetor mounting 9-7, 9-9, 9-11, 9-13
crankcase cover 7-9, 7-11, 8-9, 8-11
drain plug 7-7, 8-7, 12-3
exhaust 7-9, 8-9, 10-3, 10-5
head 7-9, 8-9
insulator 7-9, 8-9, 9-11, 9-13
liquid 12-3, 15-5, 17-7
oil pump 7-7
rocker case 7-9, 8-9
seat 1-23
sending unit 9-5
gasket kit, FE290 7-9
gasket kit, FE350 8-9
gasket, controller cover 13-19
gauge, compression 17-5
gauge, fuel/hour 6-11
gear
case 12-3, 15-5
cluster idler 12-5
differential 12-7, 15-5
differential idler 12-7, 15-5
differential output 15-5
helical 7-13, 8-13, 12-5, 12-7
spur 7-13, 8-13, 12-5
synchro 12-5
gear yoke 17-7
glove box 1-13
glove box key 1-13
glove box lock 1-13
glove box lock kit 1-13
governor 12-5
governor arm 12-3
governor cable 9-15
governor cable bracket 9-15
governor shaft installation tool 17-7

INDEX

governor shield 9-11
grommet 9-5
guard, brush 1-9
guard, differential 12-13, 15-7
guide
 choke lever 9-17
 intake valve 7-9, 8-9
 valve 8-9
 valve seat cutter 17-11
guide ring adhesive 17-3

H

handle, battery charger 16-5
handle, FNR 12-9
hardware kit, charger 16-3
hardware, F-terminal 6-13
harness, wire 13-5
 gasoline 6-5
head gasket 7-9, 8-9
head, cylinder 8-9
head, FE290 7-9
headlight assembly 6-7, 13-7
headlight bulb 6-7, 13-7
headlight harness 6-7, 13-7
headlight retainer 6-7, 13-7
heatsink 16-5
helical gear 7-13, 8-13, 12-5, 12-7
hill brake rod 4-5
hill brake weld assembly 4-5
hinge plate 1-19, 1-21, 1-23
hinge support 1-29
hinge, cargo bed 1-29
hold-down, battery, 12-volt 13-17
holder, object 1-3
hose, air intake 9-17
hose, fuel 9-3
hour meter/fuel gauge 6-11
housing
 2-pin 13-11
 3-pin 13-11, 13-13, 14-3, 14-5, 14-7, 14-9
 4-pin 13-13
 6-pin 13-19
 differential 15-5
 fan 7-3, 8-3
 field coil 6-13
hub 5-13, 5-15
hub and spindle 5-13, 5-15
hub, front 5-13, 5-15
hub, synchronizer clutch 12-5
hubcap 5-13, 5-15
hydraulic brake adjuster 17-7
hydrometer 17-7

I

idle screw assembly 9-7, 9-9

idler bearing 11-3
idler gear, differential 15-5
ignition coil 7-5, 8-5
inner frame snubber 7-15, 8-15
input shaft 15-5
insert, synchronizer 12-5
instrument panel 6-11, 13-9
insulated bushing 14-3, 14-5
insulator gasket 7-9, 8-9, 9-11, 9-13
insulator, carburetor 9-11, 9-13, 14-3, 14-5
intake pipe 9-11, 9-13
intake valve 7-9, 8-9
intermediate shaft 15-5
internal retaining ring pliers 17-7
IQ display module (IQDM) 17-7

J

J-bolt 13-17
jet, main 9-7, 9-9
jet, pilot 9-7, 9-9
joint
 ball 4-5, 4-13, 5-9, 12-11
 left-hand thread ball 5-7, 5-9
jounce bumper 5-17

K

key 13-9
 crankshaft 7-5, 7-13, 8-5, 8-13
 driven clutch 11-9
 square 11-9
 starter/generator 6-13
 woodruff 12-3
key (pair) 6-11
key switch 6-11, 13-9
key switch spacer 6-11
key, glove box 1-13
keyswitch nut 6-11, 13-9
kick plate, body 1-19, 1-21
kingpin 5-11
kit
 2-pin housing 13-11
 3-pin housing 13-11, 13-13, 14-3, 14-5, 14-7, 14-9
 4-pin housing 13-13
 6-pin housing 13-19
 accelerator pivot rod 4-9, 4-11
 air duct repair tape 9-17
 brake cable 4-7
 brake pedal 4-5
 brake pedal adjustment tool 17-3
 clutch repair 11-9
 differential gear case 12-7
 drive clutch button 11-3
 drive clutch weight 11-3
 driven clutch button 11-9
 front hub replacement 5-13, 5-15

fuel tank 9-5
impulse fuel pump rebuild 9-3
IQ display module (IQDM) 17-7
magnet and bearing 14-3, 14-5
motor brush 14-7, 14-9
motor brush spring 14-7, 14-9
motor cover plate 14-7, 14-9
motor speed sensor 14-7, 14-9
motor terminal hardware 14-7, 14-9
neutral lockout cam 12-9
park brake latch 4-5
park brake pedal 4-5
PD3 Cordest, AC 114" 16-3
PD3 Cordest, AC 80" 16-3
PD3 Cordest, DC 113" 16-3
PD3 Cordest, DC 154" 16-3
PD3 Cordest, DC 205" 16-3
PD3 hardware 16-3
shock absorber 5-17
shock absorber cushion 5-17
tune-up 17-9
knob, light switch 6-11, 13-9

L

lash adjuster 8-11
latch spring 1-27
latch, air box 9-17
latch, park brake 4-5
L-bracket, motor 14-7
leaf spring 5-17
legs, charger 16-3
lens, headlight 6-7, 13-7
lever
 change 12-3
 choke 9-17
 transmission shifter 12-3
light
 battery 13-9
 oil 6-11
light switch 6-11, 13-9
light switch knob 6-11, 13-9
limit switch 12-9
limiter
 RPM 7-5, 8-5
line, fuel 9-3, 9-5, 9-11, 9-13
link, rack and pinion drag 5-7
link, rod 1-27
liquid gasket 12-3, 15-5, 17-7
lock kit, glove box 1-13
lock, glove box 1-13
low oil warning light 6-11
lubricant, dry moly 17-7
lubricant, moly-teflon 14-3, 14-5, 14-7, 14-9, 17-7
lug nut 2-3
lug stud 5-13, 5-15, 12-7, 15-5

INDEX

lug, compression 13-19

M

magnet and bearing kit 14-3, 14-5
magnet, speed sensor 14-3, 14-5, 14-7, 14-9
main jet 9-7, 9-9
main nozzle 9-7
mat, floor 1-3
MCOR 13-11
mechanism, brake adjusting 4-3
meter, volt ohm 17-11
module
 calibration test 17-3
 communication display 17-5
moly-teflon lubricant 17-7
motor
 48-volt 14-5
 48-volt IQ 14-3, 14-7, 14-9
motor armature 14-3, 14-5
motor brush 14-3, 14-5
motor brush kit 14-7, 14-9
motor brush spring kit 14-7, 14-9
motor bumper 14-3, 14-5, 14-7, 14-9
motor end cap 14-3, 14-5, 14-7, 14-9
motor end shield 14-3, 14-5
motor L-bracket 14-7
motor magnet, speed sensor 14-3, 14-5, 14-7, 14-9
motor speed controller 13-19
motor speed sensor 14-3, 14-5, 14-7, 14-9
motor speed sensor kit 14-7, 14-9
motor stator shell and winding 14-3, 14-5
motor terminal hardware kit 14-7, 14-9
mounting block, brake 4-5
moveable-face 11-3, 11-9
muffler hose clamp 10-3, 10-5

N

needle bearing 12-5
nerf bar 1-17
neutral lockout cam 12-9
non-skid tape 1-17
nozzle, main 9-7, 9-9
nut, keyswitch 6-11, 13-9
nut, lug 2-3

O

OBC 13-19
OBC, onboard computer 13-19
object holder 1-3
oil filler tube 7-3, 8-3
oil filter 7-7, 8-7
oil filter mount bracket 7-7, 8-7
oil filter screen 7-11, 8-11
oil filter screen plate 7-11, 8-11

oil level sensor 7-11, 8-11
oil level switch bracket 7-11, 8-11
oil pump and rotor 7-7, 8-7
oil pump cover 7-7, 8-7
oil pump filter 8-7
oil pump gasket 7-7
oil pump plate 7-7, 8-7
oil seal 7-9, 7-13, 8-9, 8-11, 8-13, 12-3, 12-5
oil warning light, low 6-11
onboard computer 13-19
O-ring 7-3, 7-9, 7-11, 7-13, 8-3, 8-9, 8-11, 8-13
overload bumper spacer 5-17

P

pad
 accelerator pedal 4-9, 4-11
 brake pedal 4-5
 park brake 4-5
 wear 1-19, 1-21
paint, touch-up 17-7
panel
 instrument 6-11
panel, instrument 6-11, 13-9
park brake latch 4-5
park brake pedal 4-5
park brake rod sleeve 4-5
park brake spacer 4-5
park brake torsion spring 4-5
pawl 4-5
pedal, accelerator 4-9, 4-11
pedal, brake 4-5
pedal, park brake 4-5
pilot air screw 9-7
pilot air screw assembly 9-9
pilot jet 9-7, 9-9
pin, differential 12-7
pin, piston 7-13, 8-13
pinion, steering 5-7
pipe, intake 9-11, 9-13
piston 7-13, 8-13
piston pin 8-13
piston ring 7-13, 8-13
piston ring compressor 17-9
piston ring pliers 17-9
piston ring set 8-13
pivot arm 12-3
pivot support bearing 4-9, 4-11
plate
 body kick 1-19, 1-21
 component mounting 13-19
 cover 14-7, 14-9
 engine mounting 7-15, 8-15
 flywheel fan 7-5, 8-5
 front spring retainer 5-11
 hinge 1-19, 1-21, 1-23
 oil filter screen 7-11, 8-11

oil pump 7-7, 8-7
receptacle backing 13-15
spring mounting 5-11
thrust 12-5, 12-7

pliers

 internal retaining ring 17-7
 piston ring 17-9
 retaining ring 17-9

plug

 4-pin 13-13
 6-pin 13-19
 drain 7-7, 8-7
 driven clutch puller 17-5
 fill 12-3
 spark 7-5, 8-5

plug cap 8-5

pole set 6-13

positioner, choke 9-17

press weldment 17-5

protector spray, battery terminal 17-3

puller

 bearing 17-3
 clutch 17-3
 drive clutch 17-5
 drive clutch hub 17-5
 driven clutch cam 17-5
 flywheel 17-7
 seal 17-9
 special use tool 17-9

pulley

 clutch 11-3
 starter-generator 6-13

push rod 7-9, 8-9

R

rack and pinion drag link 5-7
rack guide pressure spring 5-7
rack, steering 5-7
ratchet, park brake 4-5
reamer, valve guide 17-9
rear body 1-19
rear spring shackle 5-17
receptacle 13-15
receptacle backing plate 13-15
receptacle, accessory 6-11, 13-9
receptacle, battery charger 13-15
regulator, voltage 6-9
relay, charger board 16-3
remover, bearing and oil seal 17-3
resistor assembly 13-19
retainer
 accelerator pedal spring 4-9, 4-11
 bearing 14-3, 14-5
 cable 1-19, 1-21, 12-11
 headlight 6-7, 13-7
 shock absorber cushion 5-17

INDEX

- spring 5-17
 - spring (drive clutch) 11-3
 - valve spring 7-9, 8-9
 - retaining ring 5-3
 - retaining ring pliers 17-9
 - return spring bumper 4-9, 4-11
 - reverse buzzer 13-21
 - rigging, brush 14-3, 14-5
 - rim, wheel 2-3
 - ring
 - piston 7-13, 8-13
 - retaining 5-3, 6-9, 11-3, 11-9, 12-9
 - snap 5-7, 7-9, 7-13, 8-9, 8-13
 - spiral backup 11-3
 - synchronizer 12-5
 - ring, C-type stop 5-7
 - ring, piston 8-13
 - rock guard 12-13, 15-7
 - rocker arm 7-9, 8-9
 - rocker case 7-9, 8-9
 - rocker case gasket 7-9, 8-9
 - rocker shaft 7-9, 8-9
 - rocker switch 13-13
 - rod
 - accelerator 4-13
 - accelerator pivot 4-9, 4-11
 - connecting 7-13, 8-13
 - crankshaft 7-13, 8-13
 - equalizer 4-7
 - hill brake 4-5
 - link 1-27
 - push 7-9, 8-9
 - shift 12-5
 - tie 5-9
 - rotor, oil pump and 7-7, 8-7
 - RPM limiter 7-5, 8-5
 - RPM limiter bracket 7-5, 8-5
 - RPM limiter damper 7-5, 8-5
 - RPM limiter mount band 7-5, 8-5
 - rubber bumper 1-13
- S**
- safety first card 17-9
 - screen, oil filter 7-11, 8-11
 - screw, valve clearance adjuster 17-9
 - seal
 - crankshaft 7-11
 - intake 9-17
 - lip 15-5
 - oil 7-9, 7-13, 8-9, 8-11, 8-13, 12-3, 12-5, 12-7, 15-5
 - steering pinion dust 5-7
 - vertical socket dust 5-7, 5-9
 - seal puller 17-9
 - sealant 12-3, 15-5
 - seat
 - spring 7-9, 8-9
 - valve 7-7, 8-7
 - seat bottom assembly 1-23
 - seat bottom cover 1-23
 - seat cover, vinyl 1-23
 - seat cover, white 1-23
 - seat foam 1-23
 - seat gasket 1-23
 - seat support 1-25
 - seat support cross brace 1-25
 - seat, bearing 5-3
 - sending unit, fuel gauge 9-5
 - sensor, motor speed 14-3, 14-5, 14-7, 14-9
 - sensor, oil level 7-11, 8-11
 - sensor, speed 14-3, 14-5
 - set, brush and screw 6-13
 - set, pole 6-13
 - shackle, rear spring 5-17
 - shaft
 - change 12-3
 - counterbalance guide 7-13, 8-13
 - input 15-5
 - intermediate 15-5
 - rocker 7-9, 8-9
 - steering column 5-3
 - transmission 12-5
 - shield, governor 9-11
 - shift fork 12-5
 - shift rod 12-5
 - shifter base, FNR 12-9
 - shifter bracket 12-3, 12-11
 - shim, camshaft 8-11
 - shim, crankshaft 7-13, 8-13
 - shock absorber 5-9
 - shock absorber (rear) 5-17
 - shock absorber cushion 5-17
 - shock absorber cushion retainer 5-17
 - shoe, brake 4-3
 - shroud 8-3
 - shroud, engine 7-3, 8-3
 - shroud, fan 7-3, 8-3
 - side bar 1-17
 - sleeve
 - delta A-plate 5-9
 - governor 12-5
 - park brake rod 4-5
 - synchronizer 12-5
 - snap ring 5-7, 7-9, 7-13, 8-9, 8-13
 - snubber bracket 7-15, 8-15
 - snubber, inner frame 7-15, 8-15
 - socket 5-7, 5-9
 - solenoid, 12-volt 6-9
 - solenoid, 48-volt 13-19
 - spacer
 - accelerator pivot rod 4-9, 4-11
 - key switch 6-11
 - overload bumper 5-17
 - park brake 4-5
 - spacer, wheel 5-13
 - spanner wrench 17-9
 - spark plug 7-5, 8-5
 - spark plug cap 7-5
 - speed controller 13-19
 - speed controller connector 13-19
 - speed controller cover 13-19
 - speed sensor 14-3, 14-5, 14-7, 14-9
 - speed sensor magnet 14-3, 14-5, 14-7, 14-9
 - speed sensor, motor 14-3, 14-5, 14-7, 14-9
 - spindle 5-13, 5-15
 - spindle and hub 5-13, 5-15
 - spiral backup ring 11-3
 - spray, battery terminal protector 17-3
 - spring 1-27
 - accelerator return 4-9, 4-11
 - brake return 4-7
 - brush 6-13, 14-3, 14-5, 14-7, 14-9
 - compression 9-17
 - drive button 11-3
 - drive clutch 11-3
 - driven clutch 11-9
 - engine valve 7-9
 - extension return 9-17
 - forward/reverse cam 12-9
 - leaf 5-17
 - park brake torsion 4-5
 - rack guide pressure 5-7
 - shifter 12-5
 - steering shaft compression 5-3
 - synchronizer 12-5
 - throttle return 9-11, 9-13
 - valve 8-9
 - spring cup 4-9, 4-11
 - spring mounting plate 5-11
 - spring retainer 5-17
 - spur gear 7-13, 8-13, 12-5
 - stand-offs, plastic 16-3
 - starter/generator 6-13
 - starter/generator belt 6-15, 6-17, 11-3
 - starter/generator mounting bracket 6-15
 - starter/generator pulley 6-13
 - stator shell and winding 14-3, 14-5
 - steel bushing 1-29, 5-11, 5-17
 - steel pressure relief ball 7-7, 8-7
 - steering column 5-3
 - steering column bearing press tool 17-9
 - steering column retaining ring tool 17-9
 - steering gear box 5-7
 - steering pinion 5-7
 - steering pinion dust seal 5-7
 - steering rack 5-7
 - steering shaft assembly 5-3
 - steering shaft compression spring 5-3

INDEX

steering wheel 5-5
steering wheel center 5-5
steering wheel puller tool 17-9
stem, valve 2-3
stiffener, bed support 1-29
stiffener, flywheel side 7-15, 8-15
stiffener, PTO side 8-15
strap, A-plate 5-9
strap, fuel tank 9-3
stud 7-15, 8-15
 lug 5-13, 5-15, 12-7, 15-5
stud, ball 6-9, 12-3, 12-9
support
 bed 1-25
 brush guard 5-11
 cowl 1-3
 hinge 1-29
 latch link 1-27
 seat 1-25
support yoke (steering) 5-7
support, front body 1-19, 1-21
support, seat 1-25
switch
 key 6-11, 13-9
 light 6-11, 13-9
 limit 12-9
 rocker 13-13
 Tow/Run 13-13
switch rubber boot 13-13
synchro gear 12-5
synchronizer clutch hub 12-5
synchronizer insert 12-5
synchronizer sleeve 12-5
synchronizer spring 12-5
system, exhaust 10-3, 10-5

T

12-volt solenoid 6-9
tachometer 17-9
tachometer probe, diesel 17-9
taligate 1-27
tank, fuel 9-5
tape, non-skid 1-17
tappet 7-11
terminal block 13-19
tester, continuity 17-5
thermometer, battery 17-3
thread-forming grease fitting 5-7, 5-9, 5-13, 5-15
throttle return spring 9-11, 9-13
throttle spring return bracket 9-11, 9-13
thrust bearing 5-11
thrust plate 12-5, 12-7
tie rod 5-9
tie wrap 5-7, 6-9, 13-13, 13-19
tilt bed catch 1-27

tilt latch 1-27
tire 2-3
tool
 accelerator pedal adjustment 17-3
 belt tensioning, starter/generator 17-11
 brake adjustment 17-3
 brake cable release 17-3
 brake pedal adjustment 17-3
 brake pedal tension 17-3
 cam installation 17-3
 carburetor float level 17-7
 charger bezel 17-3
 clutch alignment 17-5
 cT-wrench 17-5
 drive clutch fixed sheave 17-5
 drive clutch holder 17-5
 drive clutch spider removal 17-5
 driven clutch spring compression base 17-5
 driven clutch spring compression collar 17-5
 driven clutch spring compression nut 17-5
 governor shaft installation 17-7
 puller, special use 17-9
 steering column bearing press 17-9
 steering column retaining ring 17-9
 steering wheel puller 17-9
 transaxle axle seal 17-9
 transaxle pinion seal 17-9
 transmission 17-9
 valve guide driver 17-9
 valve seat cutter 17-5
tool kit, clutch 17-5
touch-up paint 17-7
Tow/Run switch 13-13
Tow/Run switch bracket 13-13
transaxle 15-3, 15-5
transaxle axle seal tool 17-9
transaxle guard 12-13, 15-7
transaxle housing 15-5
transaxle pinion seal tool 17-9
transaxle, unitized 12-3
transformer, battery charger 16-5
transmission cable 12-11
transmission shaft 12-5
transmission tool 17-9
tube
 crankcase vent 9-11, 9-13
 oil filler 7-3, 8-3
tune-up kit 17-9
turn signal lens 6-7, 13-7
T-wrench tool 17-5

U

U-bolt 5-17
unitized transaxle 12-3

upper delta clevis 5-11
urethane bushing 1-29, 5-9, 5-11, 5-17

V

valve
 choke 9-17
 exhaust 7-9, 8-9
 fuel pickup tube 9-5
 intake 7-9, 8-9
 reed 7-9, 8-9
valve clearance adjuster screw 17-9
valve guide 8-9
valve guide driver tool 17-9
valve guide reamer 17-9
valve guide, intake 7-9, 8-9
valve seat 7-7, 8-7
valve seat cutter 17-5, 17-11
valve seat cutter guide 17-11
valve seat cutter tool 17-5
valve seat t-wrench 17-11
valve spring 8-9
valve spring compressor 17-11
valve spring retainer 7-9, 8-9
valve stem 2-3
vent barb 9-3, 9-5
vertical socket dust seal 5-7, 5-9
volt ohm meter 17-11
voltage regulator 6-9

W

warning light, low oil 6-11
wear pad 1-19, 1-21
wedge, bearing puller 17-3
weight
 clutch 11-3
 counterbalance 7-13, 8-13
 secondary clutch 11-3
weldment
 press 17-5
wheel cover 2-5
wheel rim 2-3
wheel spacer 5-13
wheel, steering 5-5
wire harness 13-5
wire harness, gasoline 6-5
woodruff key 12-3
wrap, tie 5-7, 6-9, 13-13, 13-19
wrench, spanner 17-9

Y

yoke, gear 17-7
yoke, support (steering) 5-7



Club Car, Inc.
P.O. Box 204658
Augusta, GA 30917-4658
USA

Web	www.clubcar.com
Phone	1.706.863.3000 1.800.ClubCar
Int'l	+1 706.863.3000
Fax	1.706.863.5808