




**2004
Limo Golf Car
Illustrated Parts List**

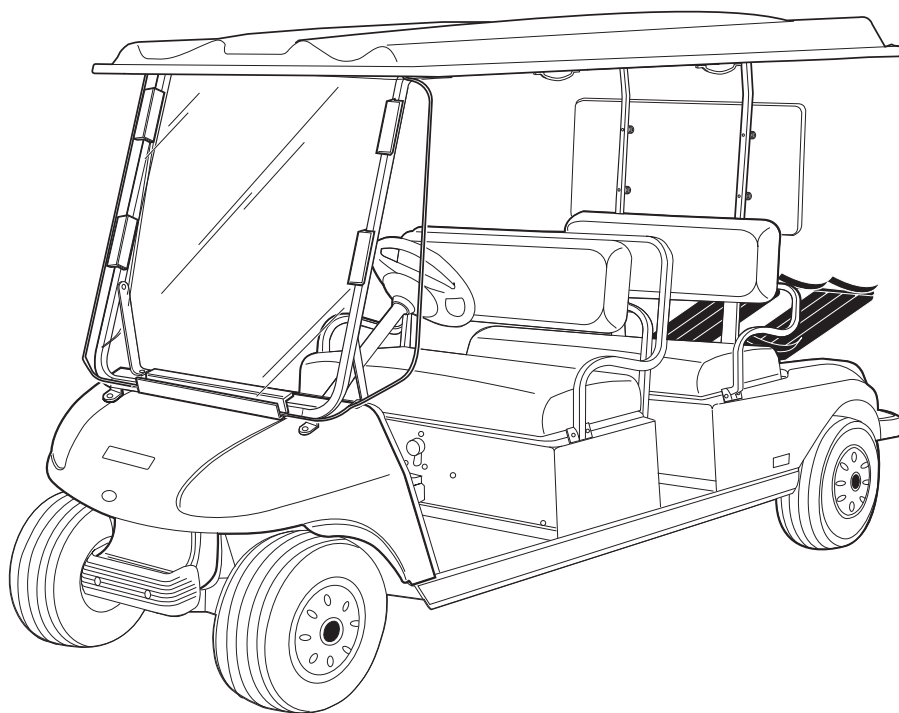

**Gasoline and Electric
Vehicles**

Manual Number 102397504
Edition Code 0307P0112N

USING THE ILLUSTRATED PARTS LIST

WARNING

- **This manual is to be used only for identification and ordering of service parts. Be sure to read and use the maintenance and service manual before attempting any vehicle repairs.**

This manual covers all 2004 Limo golf cars.

The manual is divided into sections. Note that there are two or three flags on the outside edge of each page. The first flag contains the section number of which that page is a part. The other flag (or flags) contains the letter G or E, signifying that the page pertains to the electric or gasoline vehicles only.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section numbers, and under them, the individual page titles and numbers to be found in that section. The index can be used to find specific parts and assemblies.

There is a two-page spread for each individual page title in the Table of Contents. On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used.

Note that a part description may be indented. This indentation corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to *level 2* is a component of the *level 1* part (assembly) that it is listed under. A *level 3* part is a component of the *level 2* part that it is listed under, and a *level 4* part is a component of the *level 3* part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part is the quantity used per next higher level assembly of which it is a component. A part that is not indented is a *level 1* part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.

HOW TO ORDER PARTS

Replacement parts and accessories can be obtained from our network of authorized dealers and distributors. You can obtain the name and phone number of your closest authorized Club Car dealer or distributor by visiting our web site at www.clubcar.com and clicking on the "Distributor Search" link or by calling our toll-free Service Parts and Technical Assistance hotline at (800) 872-2246 or (706) 863-3000, extension 3887.



P. O. Box 204658
Augusta, Georgia 30917-4658 USA
Telephone 706-863-3000
Service Parts Fax 706-855-7413
www.clubcar.com

NOTE: *This illustrated parts list represents the most current information at the time of publication. Club Car, Inc. is continually working to further improve its vehicles and other products. These improvements may affect the parts used to service the vehicle. Any modification and/or significant change in specifications will be forwarded to all Club Car and Carryall distributors/dealers and will, when applicable, appear in future editions of this illustrated parts list.*

Club Car, Inc. reserves the right to change specifications and designs at any time without notice and without the obligation of making changes to units previously sold.

CONTENTS

SECTION 1 – BODY AND TRIM

Windshield – Style B	1-3
Windshield – Style A	1-5
Front Body and Trim	1-7
Dash Pockets and Floormat	1-9
Ashtrays	1-11
Beverage Holder	1-13
Front Seat Bottom	1-15
Rear Seat Bottom	1-17
Rear Seat Bottom	1-19
Rear Access Door	1-21
Front Seat Back and Armrests	1-23
Center Body and Floormat	1-25
Rear Beverage Holder	1-27
Armrest (4-Passenger)	1-29
Armrest (5-Passenger)	1-31
Rear Body and Fender	1-33
Heat Shield – Gasoline Vehicles	1-35
Battery Insulator – Electric Vehicles	1-37
Rear Bumper	1-39
Bag Rack	1-41
Canopy Kit (White)	1-43
Canopy Kit (Beige)	1-45
Canopy Hardware Kit	1-47
Canopy Kit, White	1-49
Canopy Kit, Beige	1-51
Canopy Hardware Kit	1-53

SECTION 2 – WHEELS AND TIRES

Wheels and Tires, Front (White Rims)	2-3
Wheels and Tires, Front (Beige Rims)	2-5
Wheels and Tires, Rear (White Rims)	2-7
Wheels and Tires, Rear (Beige Rims)	2-9

SECTION 3 – DECALS

Decals – Electric Limo	3-3
Decals – Electric Limo, Continued	3-5
Decals – Gasoline Limo	3-7

CONTENTS

Decals – Gasoline Limo, Continued	3-9
---	-----

SECTION 4 – BRAKES, PEDAL, AND CABLE ASSEMBLIES

Rear Brake Assembly, Manually-Adjusted – Vehicles with 4-Wheel Brakes	4-3
Brake Pedal Assembly – Vehicles with Four-Wheel Brakes	4-5
Front Brake Assembly – Vehicles with Four-Wheel Brakes	4-7
Front Brake Cables and Equalizer – Vehicles with Four-Wheel Brakes	4-9
Front Brake Cable Clips and Hardware – Vehicles with Front-Wheel Brakes	4-11
Rear Brake Cables, Equalizer, and Equalizer Rod	4-13
Accelerator Pedal Assembly – Gasoline Vehicle	4-15
Accelerator Pedal Assembly – Electric Vehicles with MCOR	4-17
Accelerator Rod	4-19

SECTION 5 – STEERING, FRONT AND REAR SUSPENSION

Steering Column	5-3
Steering Wheel	5-5
Steering Gear Assembly	5-7
Front Suspension, Upper	5-9
Front Suspension, Lower	5-11
Front Spindles and Hubs – Vehicles with Four-Wheel Brakes	5-13
Rear Suspension Components – Gasoline Vehicles	5-15
Rear Suspension Components – Electric Vehicles	5-17

SECTION 6 – ELECTRICAL SYSTEM – GASOLINE VEHICLE

Wiring – Gasoline Vehicle	6-5
Electrical Component Box – Gasoline Vehicles	6-7
Controls and Indicators – Gasoline Vehicles	6-9
Starter/Generator Assembly Model G425419 – Gasoline Vehicles	6-11
FE350 Starter/Generator Mounting – Gasoline Vehicles	6-13
Battery – Gasoline Vehicle	6-15
Rear Reverse Buzzer – Villager 6 and 8	6-17

SECTION 7 – FE350 ENGINE WITHOUT ACR

AS11 FE350 Engine without ACR (Automatic Compression Release) – Shrouds and Brackets	7-3
AS11 FE350 Engine – Ignition Components and Flywheel	7-5
FE350 Engine – Oil Circulation	7-7
AS11 FE350 Engine – Cylinder Head	7-9
AS11 FE350 Engine without ACR – Crankcase, Camshaft, and Oil Sensor	7-11

CONTENTS

AS11 FE350 Engine – Crankcase and Crankshaft	7-13
FE350 Engine Mounting	7-15
FE350 Engine Mounting	7-17

SECTION 8 – EXHAUST SYSTEM

Exhaust System – FE350 Engine	8-3
-------------------------------------	-----

SECTION 9 – FUEL, INTAKE, AND GOVERNOR SYSTEMS

Fuel System with Electric Fuel Pump	9-3
Fuel Tank with Fuel Level Sending Unit	9-5
Carburetor Assembly – FE350	9-7
Carburetor Installation – FE350	9-9
Governor and Accelerator Cables	9-11
Air Box and Intake Hose	9-13
Intake System	9-15

SECTION 10 – TORQUE CONVERTER

Drive Clutch	10-3
Drive Belt – FE350	10-5
Driven Clutch	10-7

SECTION 11 – UNITIZED TRANSAXLE

Transaxle – Gasoline Vehicles, Gear Cases and Brackets	11-3
Transaxle – Gasoline Vehicles, Transmission and Gear Reduction	11-5
Transaxle – Gasoline Vehicles, Differential and Axles	11-7
Forward/Reverse Shifter Assembly – Gasoline Vehicles	11-9
Forward/Reverse Cable	11-13

SECTION 12 – ELECTRICAL SYSTEM – ELECTRIC VEHICLE

Wiring – Electric Limo	12-5
Instrument Panel and Electrical Components	12-7
Motor Controller Output Regulator (MCOR)	12-9
Forward/Reverse Switch	12-11
Electrical Installation	12-13
Battery Charger Receptacle	12-15
Electrical Components	12-19
Hour Meter	12-21
Tow/Run Switch	12-23

CONTENTS

Batteries	12-25
Rear Reverse Buzzer	12-27

SECTION 13 – ELECTRIC MOTOR

Motor (Model 5BC49JB2057A) – Electric Vehicle	13-3
Motor (Model ET6-4001) – Electric Vehicle	13-5

SECTION 14 – TRANSAXLE – ELECTRIC VEHICLE

Transaxle – Electric Vehicles	14-3
Transaxle – Electric Vehicles	14-5

SECTION 15 – BATTERY CHARGER

PowerDrive 3 Battery Charger, Domestic	15-3
PowerDrive 2 Battery Charger (Model 22110), Domestic	15-5
PowerDrive Battery Charger (Model 17930), Domestic	15-7
PowerDrive Battery Charger (Model 18780), Export	15-9
PowerDrive Battery Charger (Model 20310), European	15-11

SECTION 16 – MAINTENANCE AND SERVICE TOOLS

Maintenance and Service Tools	16-3
Maintenance and Service Tools, Continued	16-5
Maintenance and Service Tools, Continued	16-7
Maintenance and Service Tools, Continued	16-9
Maintenance and Service Tools, Continued	16-11

SECTION i – INDEX

BODY AND TRIM

1


G

E

1

G

E

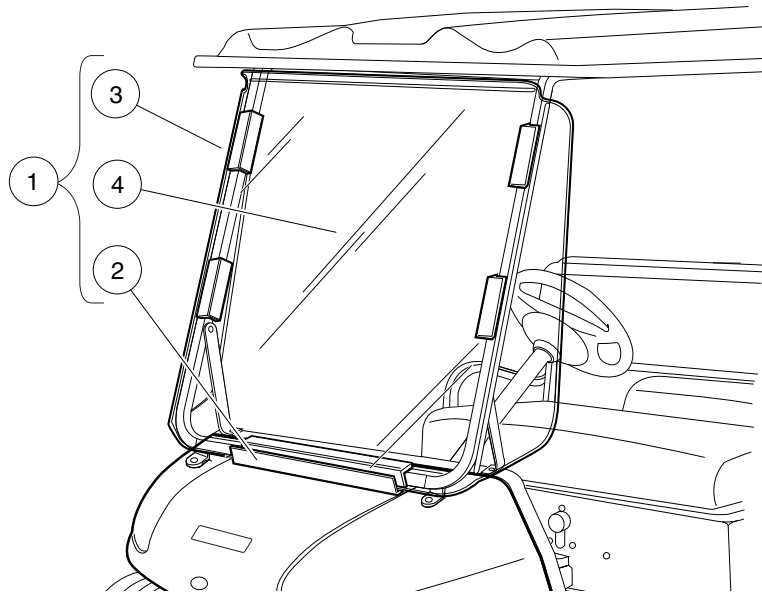

000658-001


WINDSHIELD – STYLE B

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>102361501</u>	Winged Windshield Kit (includes items 2 through 4)	1	
2	<u>101444101</u>	21" Plastic Extrusion	1	
3	Channel_Windshield_5-Inch	Channel, Windshield, 5-Inch	4	
4	Winged_Windshield	winged windshield	1	

1

G

E

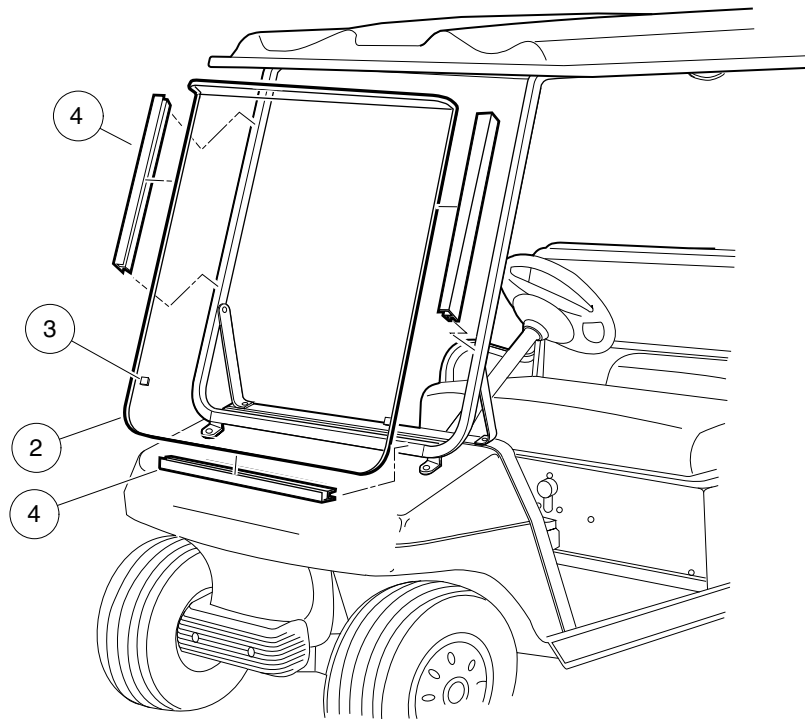

000658-003


WINDSHIELD – STYLE A

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	1014435	Windshield Tinted One-Piece (includes items 2 through 4)	1	
2	N/A	Windshield	1	
3	<u>1011897</u>	Bumper, Protective	2	
4	<u>101444101</u>	21" Plastic Extrusion	3	

1

G

E

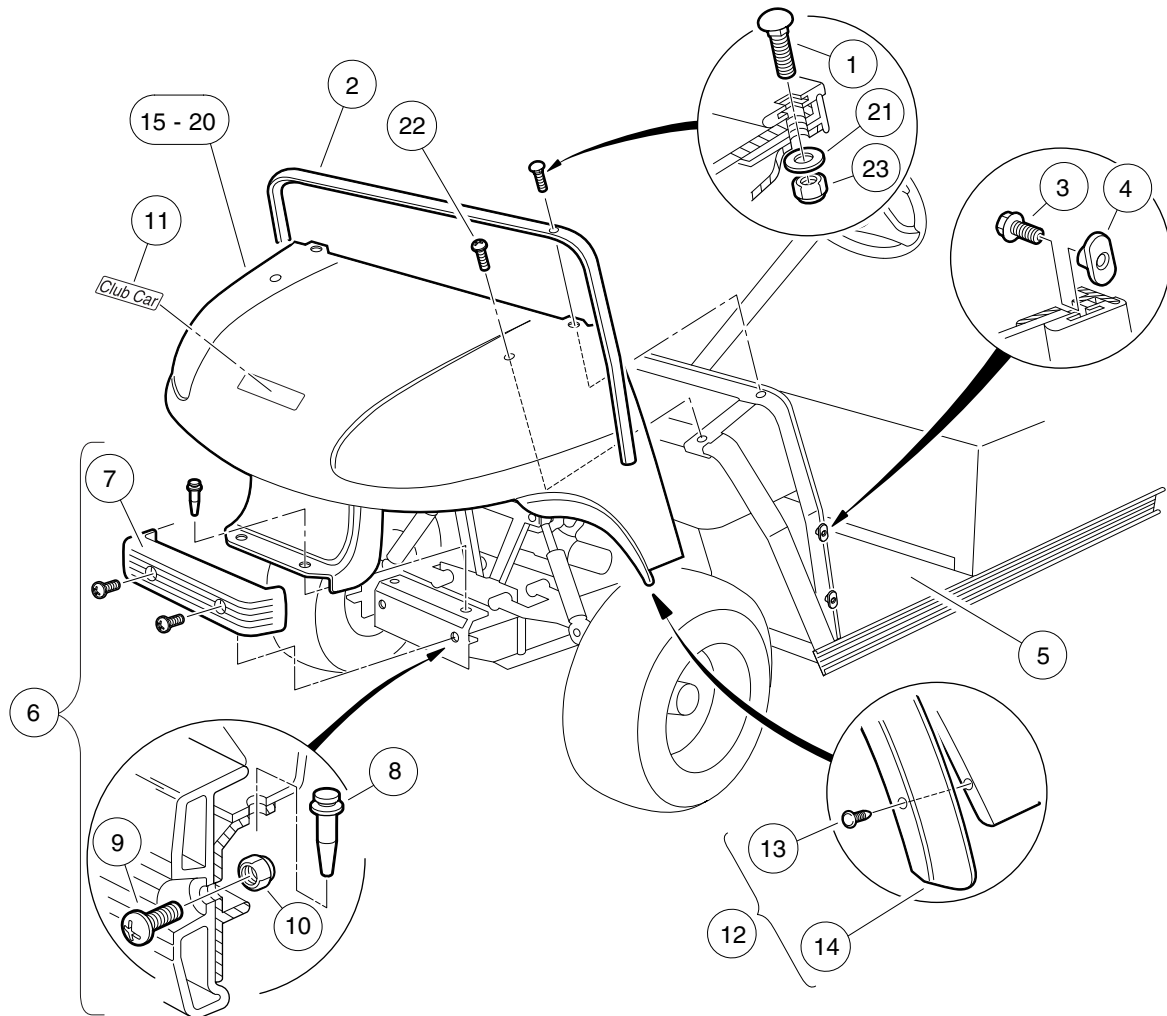

000665-001

FRONT BODY AND TRIM

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	2
2	<u>1011014</u>	Trim, Cowl	1
3	<u>1011017</u>	Screw, #8-32 X 0.375	6
4	<u>1011394</u>	T-Nut Package (Set of 4)	1
5	<u>101503202</u>	Floormat	1
6	<u>1017080</u>	Kit, Front Bumper (includes items 7 through 10)	1
7	<u>1016868</u>	Front Bumper	1
8	<u>1016967</u>	Blind Rivet, Push Type	2
9	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2
10	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
11	<u>102278801</u>	Decal, Club Car	1
12	<u>102363301</u>	Kit, Fender Extrusion (includes items 13 and 14)	1
13	<u>1010434</u>	Barrel - Plastic	14
14	<u>102360001</u>	Fender Extrusion, Limo	2
15	<u>102363901</u>	Cowl, Indio-(beige) W/o Lgt	1
16	<u>102363902</u>	Cowl, Indio-(white) W/o Lgt	1
17	<u>102363903</u>	Cowl, Indio-(gray) W/o Lgt	1
18	<u>102363904</u>	Cowl, Indio-(pac Blue) W/o Lgt	1
19	<u>102363905</u>	Cowl, Indio-(dk Green) W/o Lgt	1
20	<u>102363906</u>	Cowl, Indio-(burgundy) W/o Lgt	1
21	<u>1241</u>	Washer, 5/16 Type A Flat	2
22	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2
23	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2

1


G

E

1

G


E

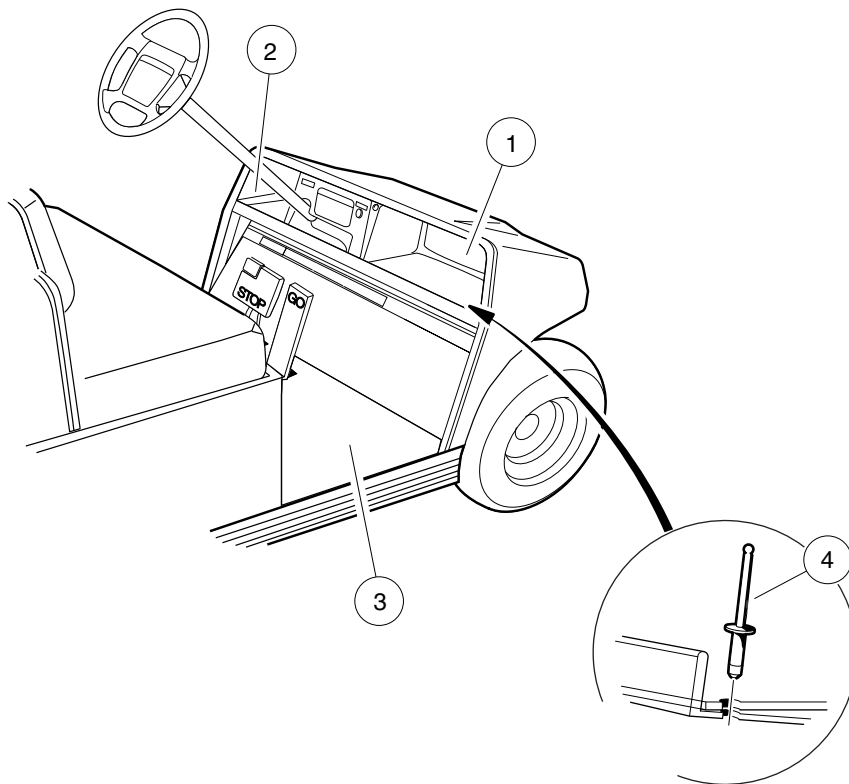

000252-002

DASH POCKETS AND FLOORMAT

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1013343</u>	Dash Component, Passenger-Side, Black	1	
2	<u>1013344</u>	Dash Component, Driver-Side	1	
3	<u>101503202</u>	Floormat	1	
4	<u>7973</u>	Rivet, 3/16 X .400 Blind	5	

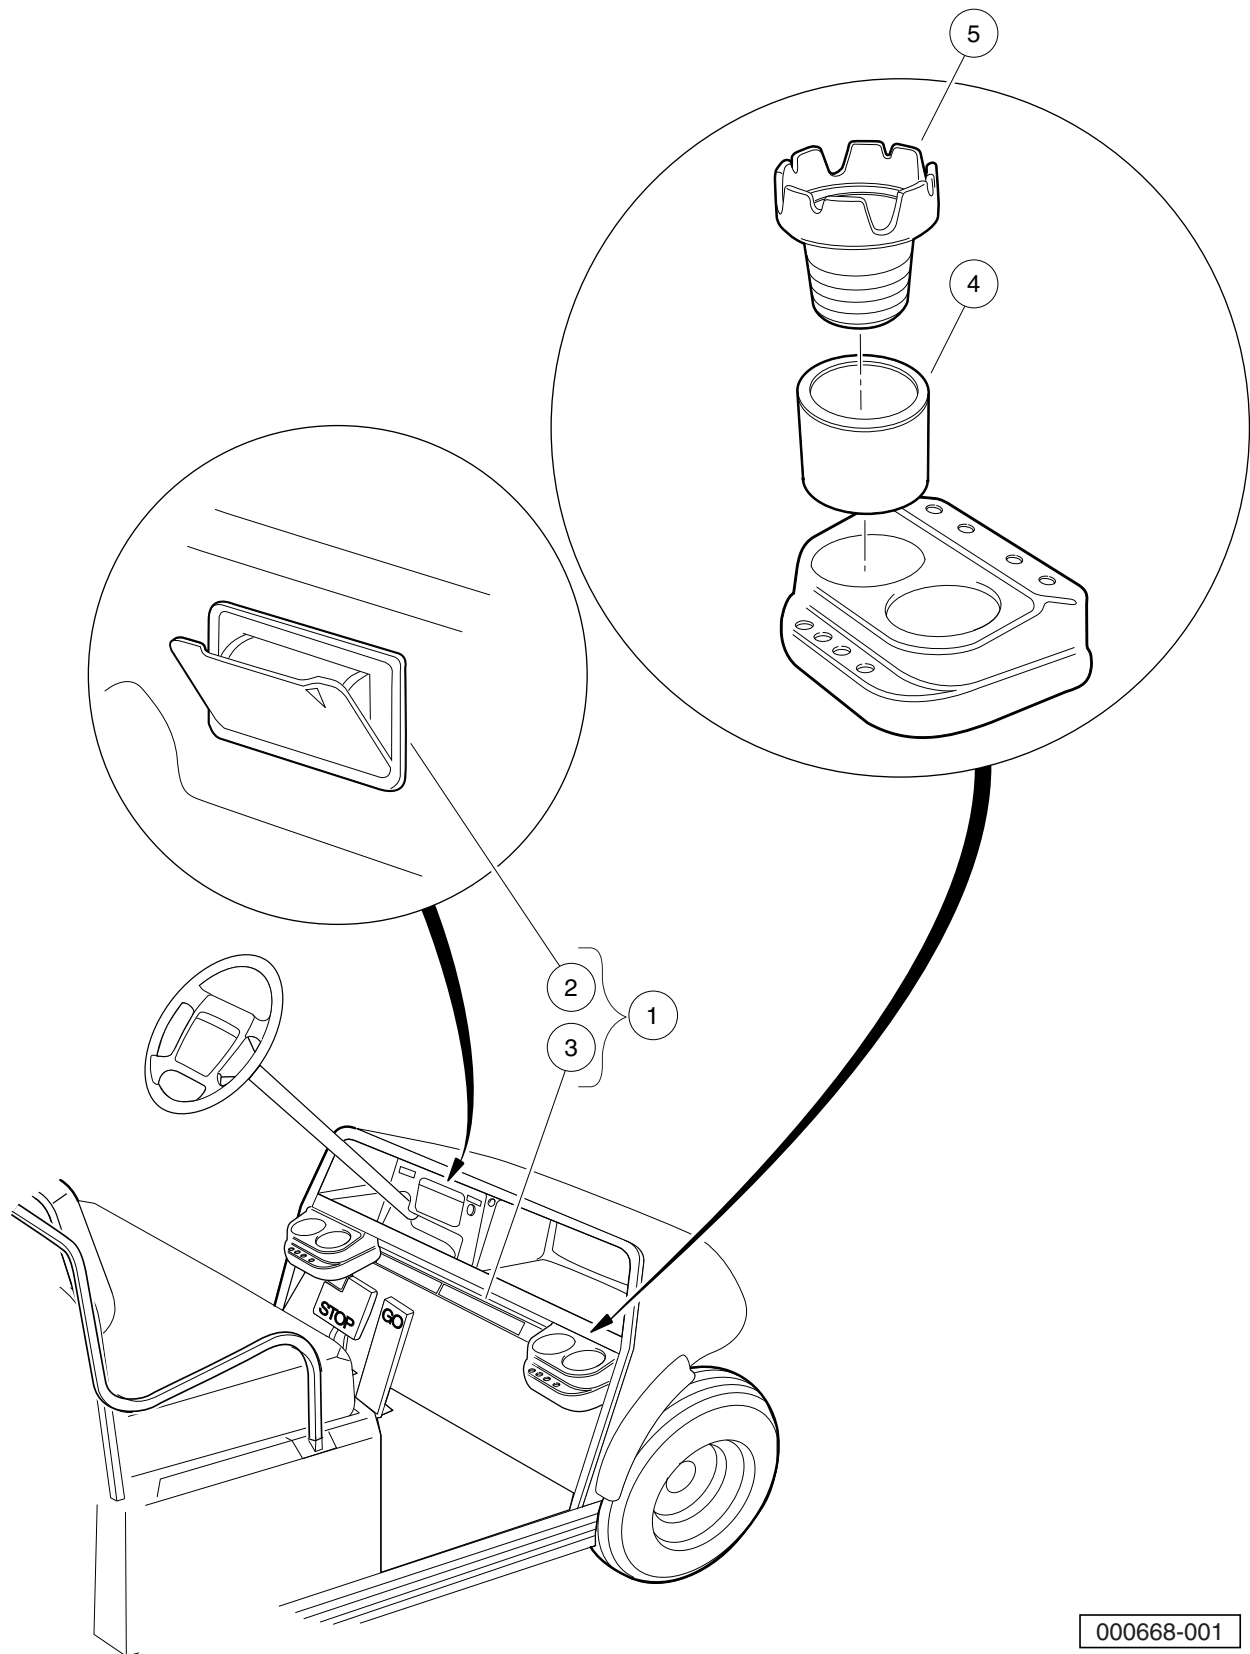

000668-001


ASHTRAYS

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	1011230	Ashtray Kit (includes items 2 and 3)	1			
2	N/A	Ashtray Assy	1			
3	<u>101965001</u>	Decal, Operator Warning	1			
4	102361401	Ashtray, Courtesy Cup	1			
5	<u>102365401</u>	Insert, Ashtray Retention	1			

1

G

E

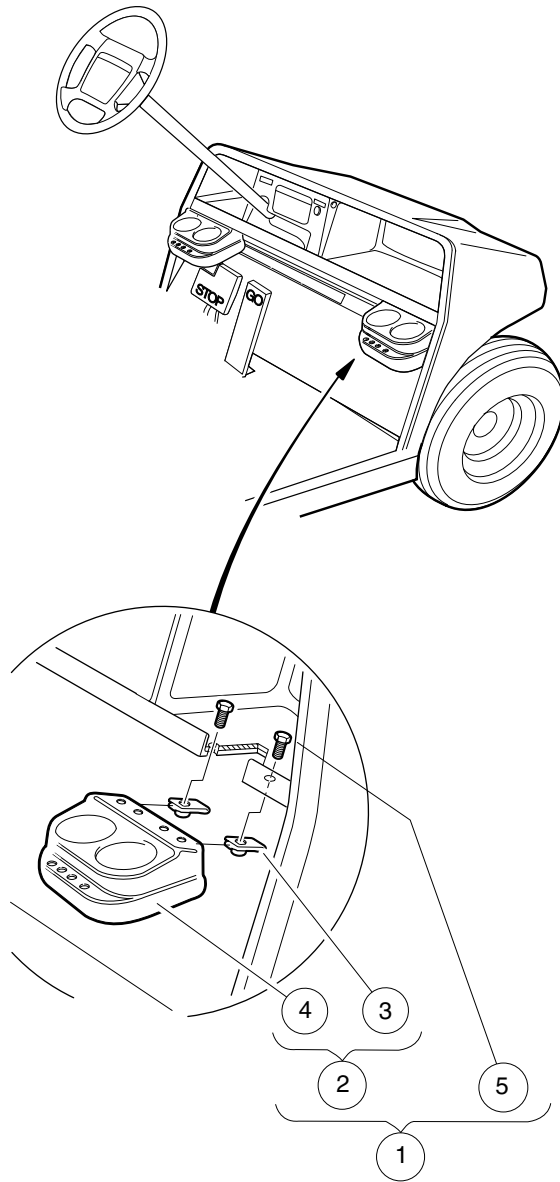

000253-002

BEVERAGE HOLDER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101708301	Drink Holder Kit (includes items 2 through 5)	2
2	1016811	Holder, Dual Cup (includes items 3 and 4)	1
3	1016952	U-Nut, 1/4-20	2
4	N/A	Cup Holder, Dual	1
5	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	2

1


G

E

1

G


E

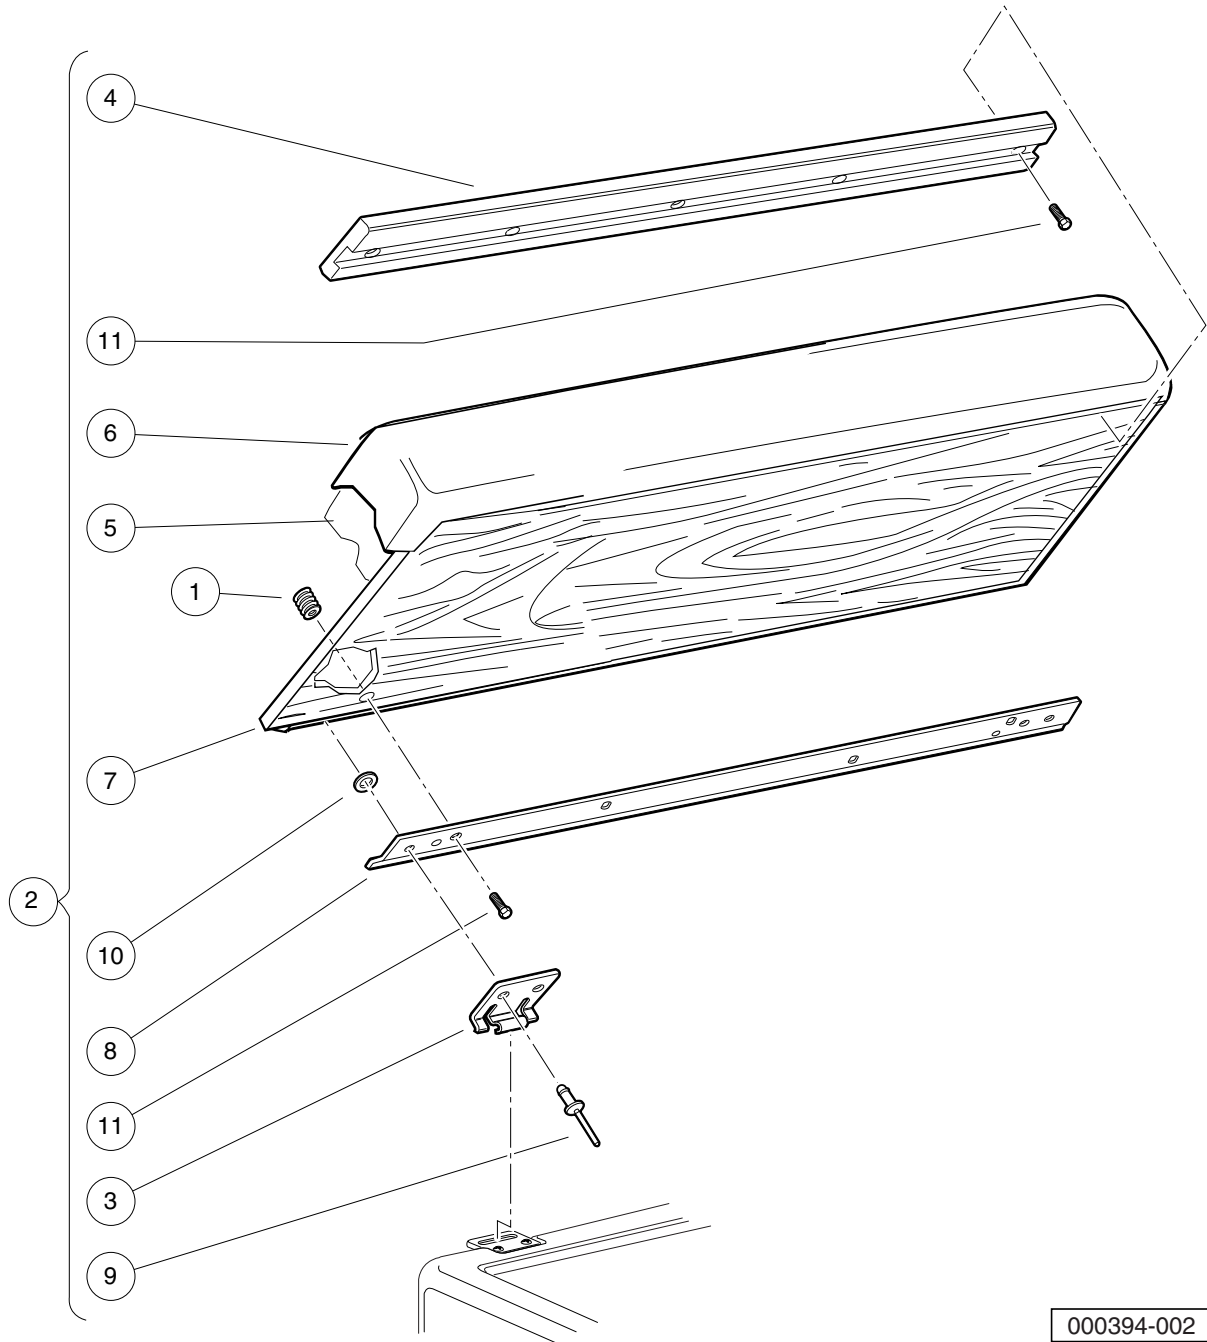

000394-002

FRONT SEAT BOTTOM

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	1010543	Insert - Wood	8	
2	<u>101728201</u>	Seat Bottom Assembly, Front, White (includes items 3 through 11)	1	
3	<u>1011652</u>	Hinge Plate	2	
4	<u>1013312</u>	Bumper, Seat, Long	1	
5	N/A	Foam, Seat	1	
6	<u>101562712</u>	Vinyl Cover, Seat Bottom, White	1	
7	N/A	Plywood Assy	1	
8	<u>1017695</u>	Seat Support Bracket	2	
9	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
10	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
11	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
12	<u>101728203</u>	Seat Bottom Assembly, Front, Beige (includes items 13 through 21)	1	
13	<u>1011652</u>	Hinge Plate	2	
14	<u>1013312</u>	Bumper, Seat, Long	1	
15	N/A	Foam, Seat	1	
16	<u>101562711</u>	Vinyl Cover, Seat Bottom, Buff	1	
17	N/A	Plywood Assy	1	
18	<u>1017695</u>	Seat Support Bracket	2	
19	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
20	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
21	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
22	<u>101728210</u>	Seat Bottom Assembly, Front, Black (includes items 23 through 31)	1	
23	<u>1011652</u>	Hinge Plate	2	
24	<u>1013312</u>	Bumper, Seat, Long	1	
25	N/A	Foam, Seat	1	
26	<u>101562714</u>	Vinyl Cover, Seat Bottom, Black	1	
27	N/A	Plywood Assy	1	
28	<u>1017695</u>	Seat Support Bracket	2	
29	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
30	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
31	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
32	<u>101728213</u>	Seat Bottom Assembly, Rear, Gray (includes items 33 through 41)	1	
33	<u>1011652</u>	Hinge Plate	2	
34	<u>1013312</u>	Bumper, Seat, Long	1	
35	N/A	Foam, Seat	1	
36	<u>101562715</u>	Vinyl Cover, Seat Bottom, Gray	1	
37	N/A	Plywood Assy	1	
38	<u>1017695</u>	Seat Support Bracket	2	
39	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
40	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
41	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
		Note: Sub-components contained in items 12, 22, and 32 are the same as those shown for item 2, except for the vinyl seat covers.		

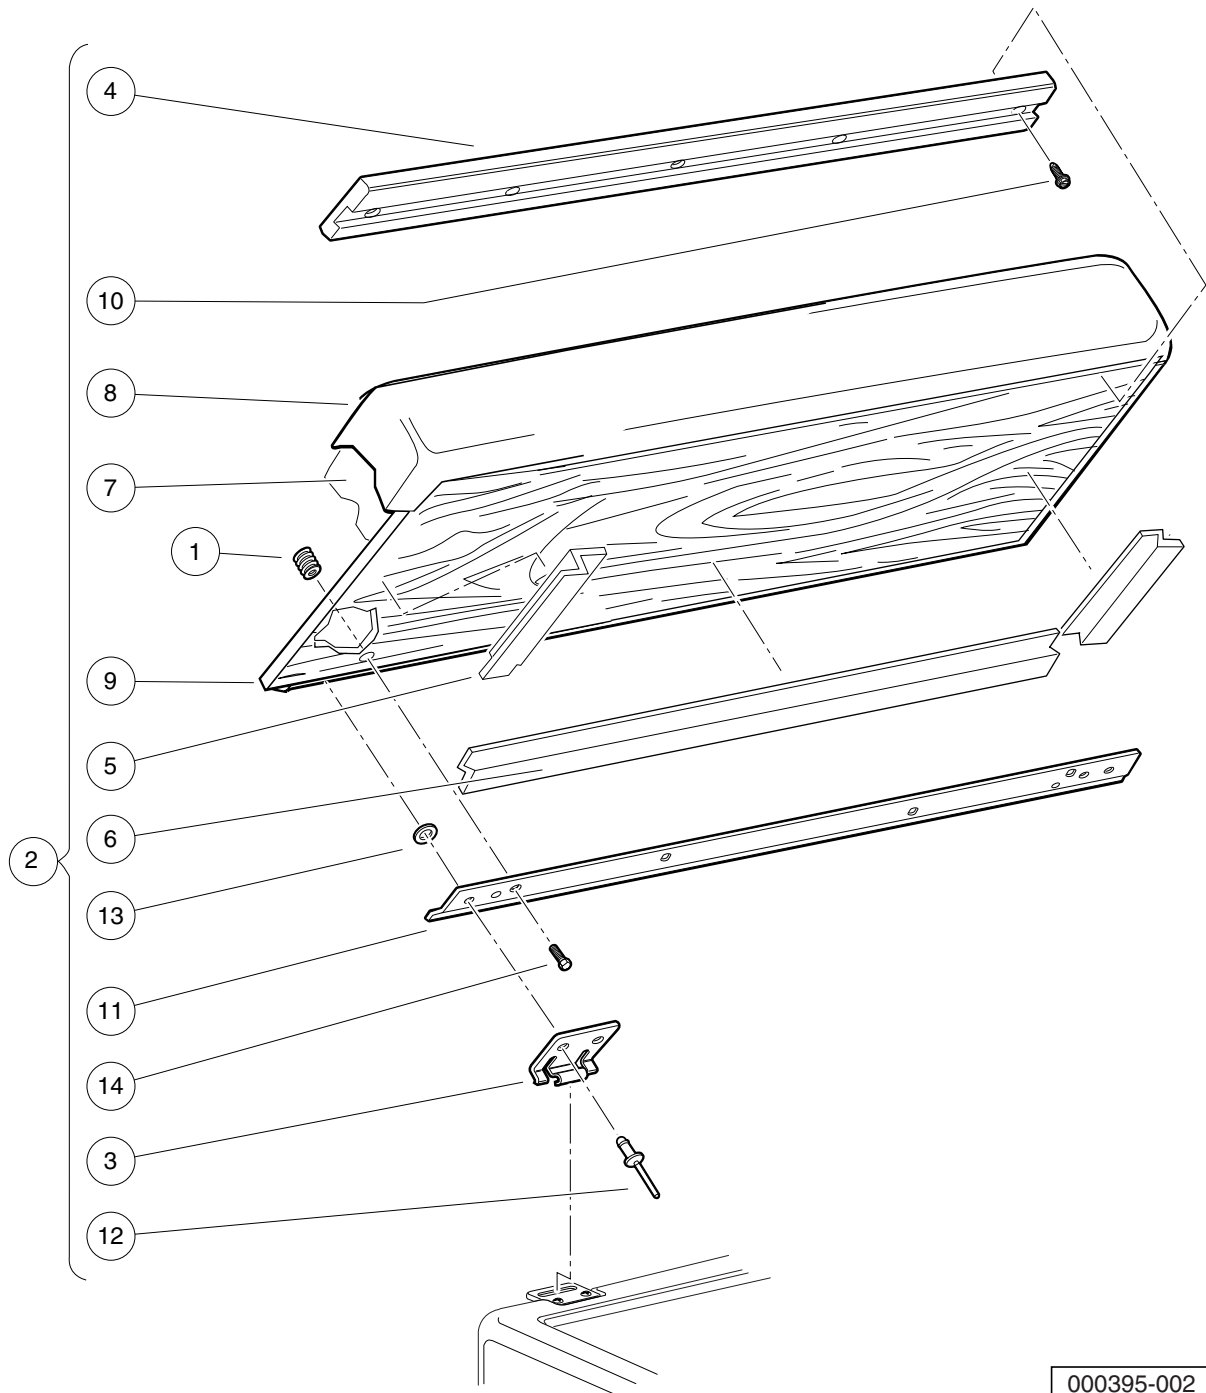1**G****E**

000395-002


REAR SEAT BOTTOM

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	1010543	Insert - Wood	8	
2	<u>101728202</u>	Seat Bottom Assembly, Rear, White (includes items 3 through 14)	1	
3	<u>1011652</u>	Hinge Plate	2	
4	<u>1012597</u>	Seat Bumper	1	
5	<u>1012656</u>	Seat Gasket, Short	2	
6	<u>1012657</u>	Seat Gasket, Long	1	
7	N/A	Foam, Seat	1	
8	<u>101562712</u>	Vinyl Cover, Seat Bottom, White	1	
9	N/A	Plywood Assy	1	
10	<u>1017384</u>	Screw, #12 X .50 Hex, Washer-Head	5	
11	<u>1017695</u>	Seat Support Bracket	2	
12	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
13	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
14	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
15	<u>101728204</u>	Seat Bottom Assembly, Rear, Beige (includes items 16 through 27)	1	
16	<u>1011652</u>	Hinge Plate	2	
17	<u>1012597</u>	Seat Bumper	1	
18	<u>1012656</u>	Seat Gasket, Short	2	
19	<u>1012657</u>	Seat Gasket, Long	1	
20	N/A	Foam, Seat	1	
21	<u>101562711</u>	Vinyl Cover, Seat Bottom, Buff	1	
22	N/A	Plywood Assy	1	
23	<u>1017384</u>	Screw, #12 X .50 Hex, Washer-Head	5	
24	<u>1017695</u>	Seat Support Bracket	2	
25	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
26	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
27	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
Note: Sub-components contained in item 15 are the same as those shown for item 2, except for the vinyl seat cover.				

1

G

E

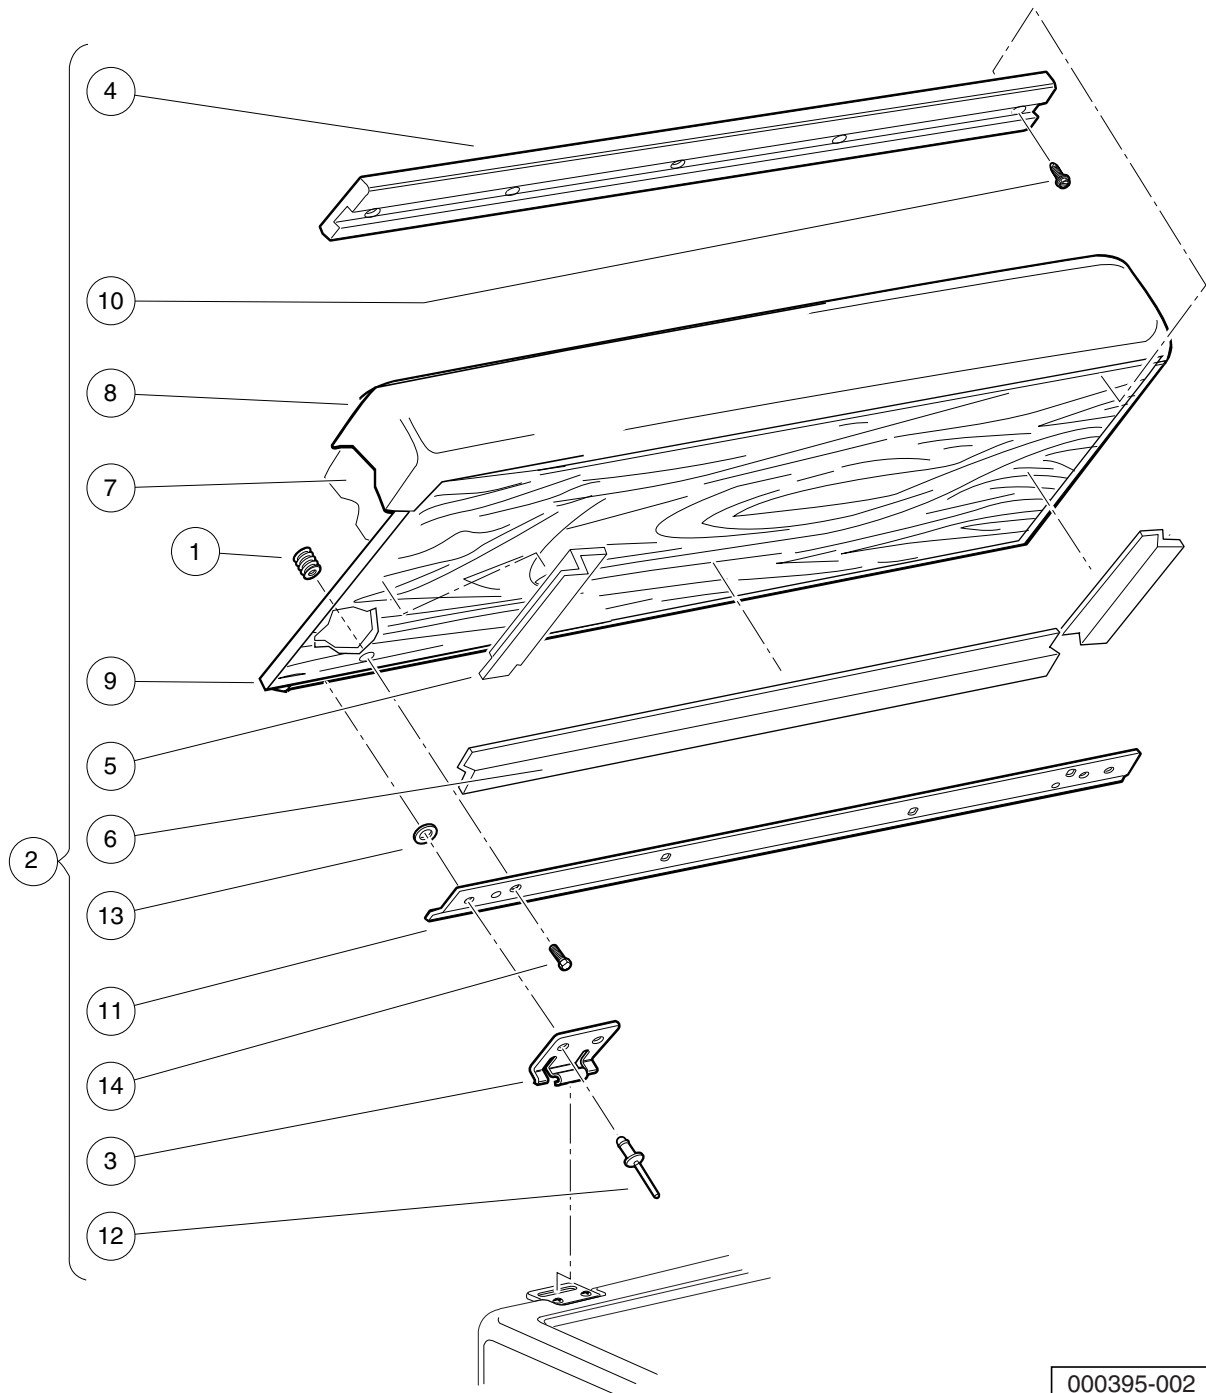

000395-002


REAR SEAT BOTTOM

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	1010543	Insert - Wood	8	
2	<u>101728211</u>	Seat Bottom Assembly, Rear, Black (includes items 3 through 14)	1	
3	<u>1011652</u>	Hinge Plate	2	
4	<u>1012597</u>	Seat Bumper	1	
5	<u>1012656</u>	Seat Gasket, Short	2	
6	<u>1012657</u>	Seat Gasket, Long	1	
7	N/A	Foam, Seat	1	
8	<u>101562714</u>	Vinyl Cover, Seat Bottom, Black	1	
9	N/A	Plywood Assy	1	
10	<u>1017384</u>	Screw, #12 X .50 Hex, Washer-Head	5	
11	<u>1017695</u>	Seat Support Bracket	2	
12	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
13	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
14	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
15	<u>101728214</u>	Seat Bottom Assembly, Rear, Gray (includes items 16 through 27)	1	
16	<u>1011652</u>	Hinge Plate	2	
17	<u>1012597</u>	Seat Bumper	1	
18	<u>1012656</u>	Seat Gasket, Short	2	
19	<u>1012657</u>	Seat Gasket, Long	1	
20	N/A	Foam, Seat	1	
21	<u>101562715</u>	Vinyl Cover, Seat Bottom, Gray	1	
22	N/A	Plywood Assy	1	
23	<u>1017384</u>	Screw, #12 X .50 Hex, Washer-Head	5	
24	<u>1017695</u>	Seat Support Bracket	2	
25	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
26	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
27	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
Note: Sub-components contained in item 15 are the same as those shown for item 2, except for the vinyl seat cover.				

1

G

E

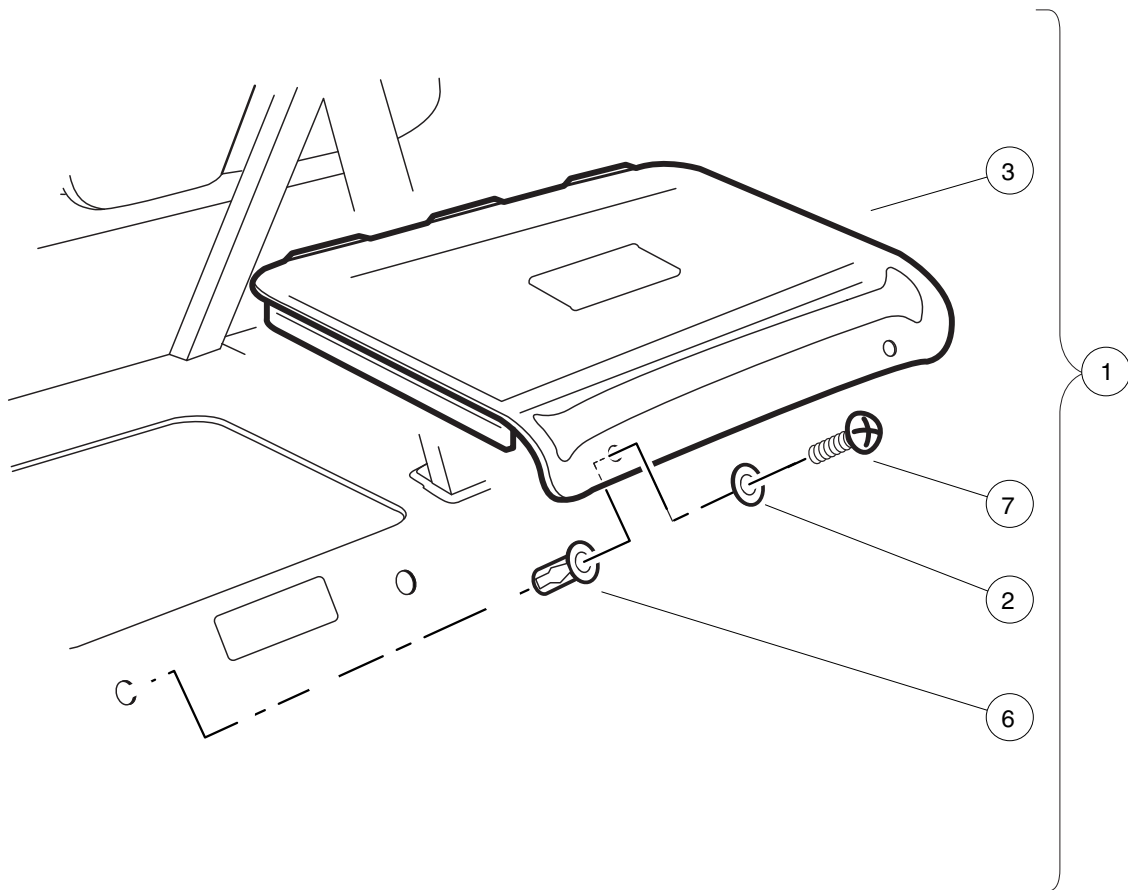

000783-001


REAR ACCESS DOOR

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	<u>1013218</u>	Kit, Access Door Black (includes items 2 through 7)	1			
2	<u>1012581</u>	Washer, 0.609-inch OD, Nylon Cup	2			
3	<u>1013032</u>	Molded Access Door Black	1			
4	<u>1013216</u>	Plug, Button	2			
5	N/A	Instruction Sheet Access Door	1			
6	<u>1015525</u>	Nut, 1/4-20 Blind	2			
7	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	2			

1

G

E

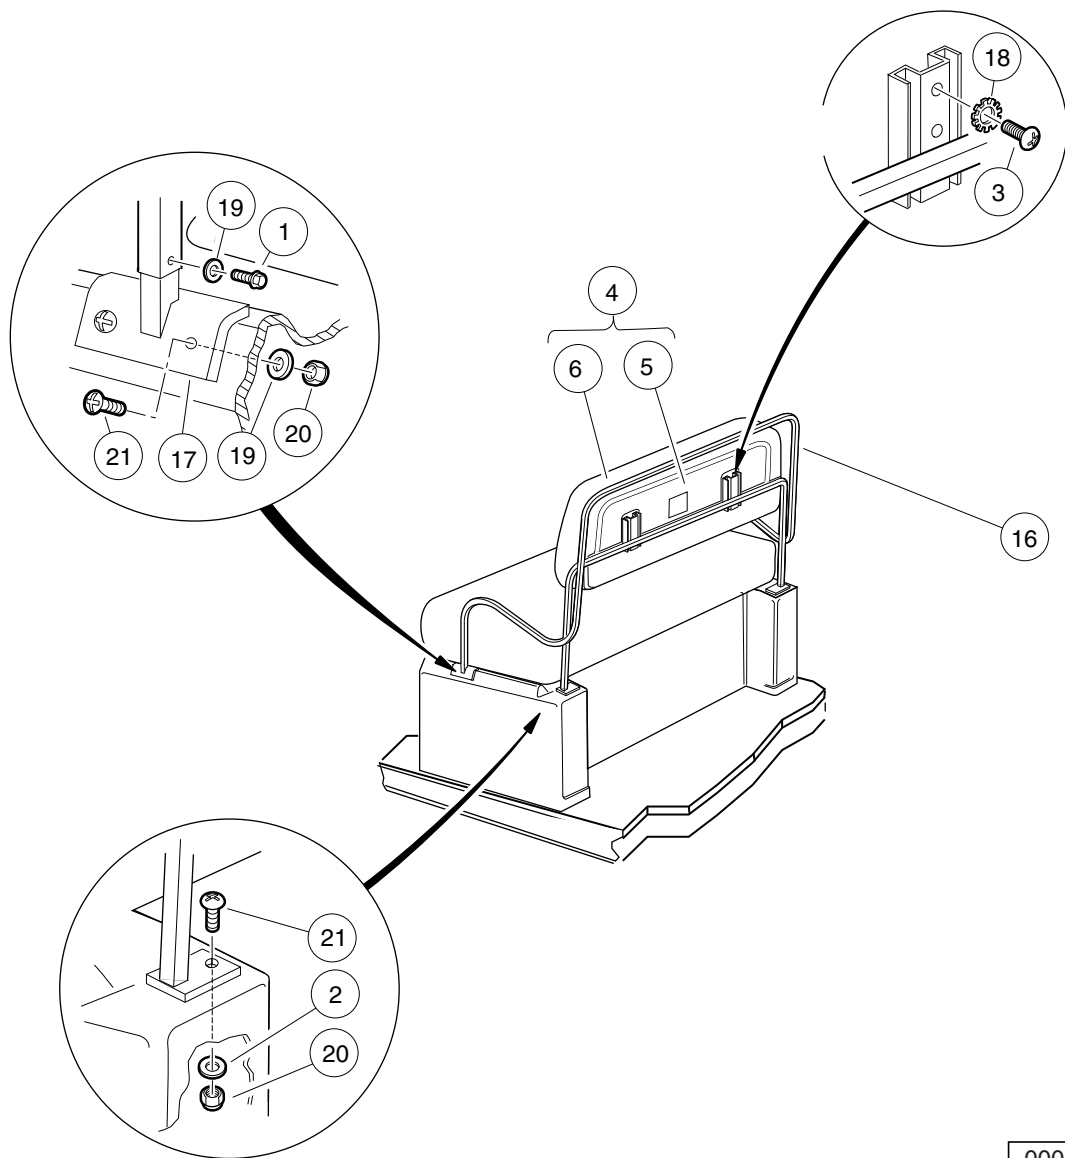

000396-002


FRONT SEAT BACK AND ARMRESTS

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4	
2	<u>1014306</u>	Washer, 1/4" Type B Flat	2	
3	<u>1015902</u>	Screw, 1/4-20 X 1.25 Truss-Head	4	
4	<u>101677701</u>	Seat Back Assembly, White (includes items 5 and 6)	1	
5	1016751	Cap, Seat Back	1	
6	<u>101675512</u>	Vinyl Seat Back, White	1	
7	<u>101677702</u>	Seat Back Assembly, Black (includes items 8 and 9)	1	
8	1016751	Cap, Seat Back	1	
9	<u>101675514</u>	Vinyl Seat Back, Black	1	
10	<u>101677703</u>	Seat Back Assembly, Beige (includes items 11 and 12)	1	
11	1016751	Cap, Seat Back	1	
12	<u>101675511</u>	Vinyl Seat Back, Beige	1	
13	<u>101677705</u>	Seat Back Assembly, Gray (includes items 14 and 15)	1	
14	1016751	Cap, Seat Back	1	
15	<u>101675515</u>	Vinyl Seat Back-nstd Svc	1	
16	<u>1017259</u>	Armrest Weld Asm Front	1	
17	<u>1017310</u>	Armrest Mounting Weldment	2	
18	<u>101946201</u>	Washer, Lock, 0.250 External-Tooth	4	
19	<u>332</u>	Washer, 1/4 Type A Narrow Flat	6	
20	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	6	
21	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	6	

1

G

E

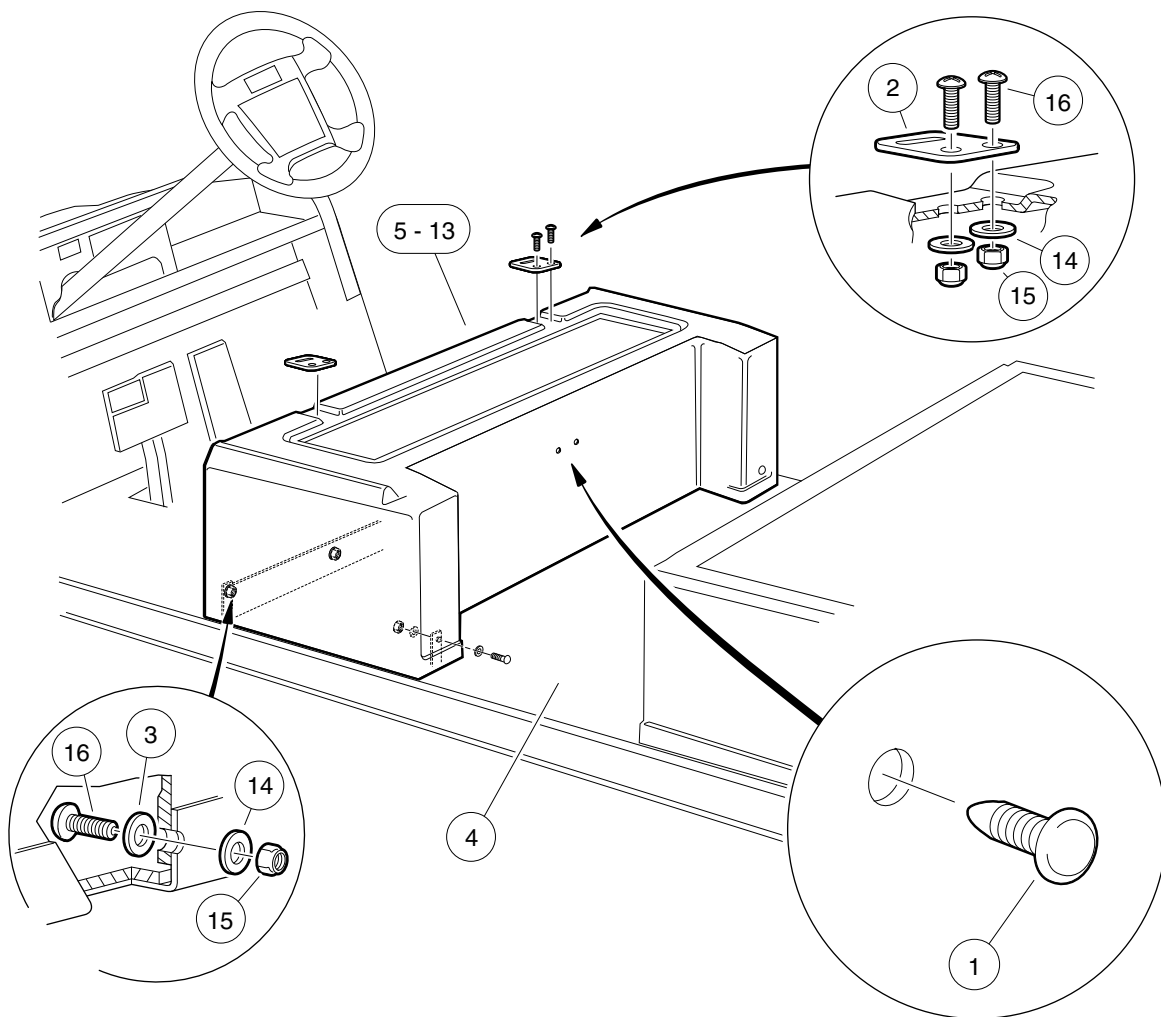

000389-003


CENTER BODY AND FLOORMAT

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	<u>1010434</u>	Barrel - Plastic	2			
2	<u>1012412</u>	Body, Hinge Plate	2			
3	<u>1012581</u>	Washer, 0.609-inch OD, Nylon Cup	6			
4	<u>1017289</u>	Rear Floormat Limo	1			
5	<u>101731601</u>	Body, Beige, Center	1			
6	<u>101731602</u>	Body, White, Center	1			
7	<u>101731604</u>	Body, Gray, Center	1			
8	<u>101731606</u>	Body, Red, Center	1			
9	<u>101731608</u>	Body, Pacific Blue, Center	1			
10	<u>101731609</u>	Body, Dark Green, Center	1			
11	<u>101731610</u>	Body, Black, Center	1			
12	<u>101731611</u>	Body, Classic Blue, Center	1			
13	<u>101731612</u>	Body, Burgundy, Center	1			
14	<u>332</u>	Washer, 1/4 Type A Narrow Flat	10			
15	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	10			
16	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	10			

1

G


E

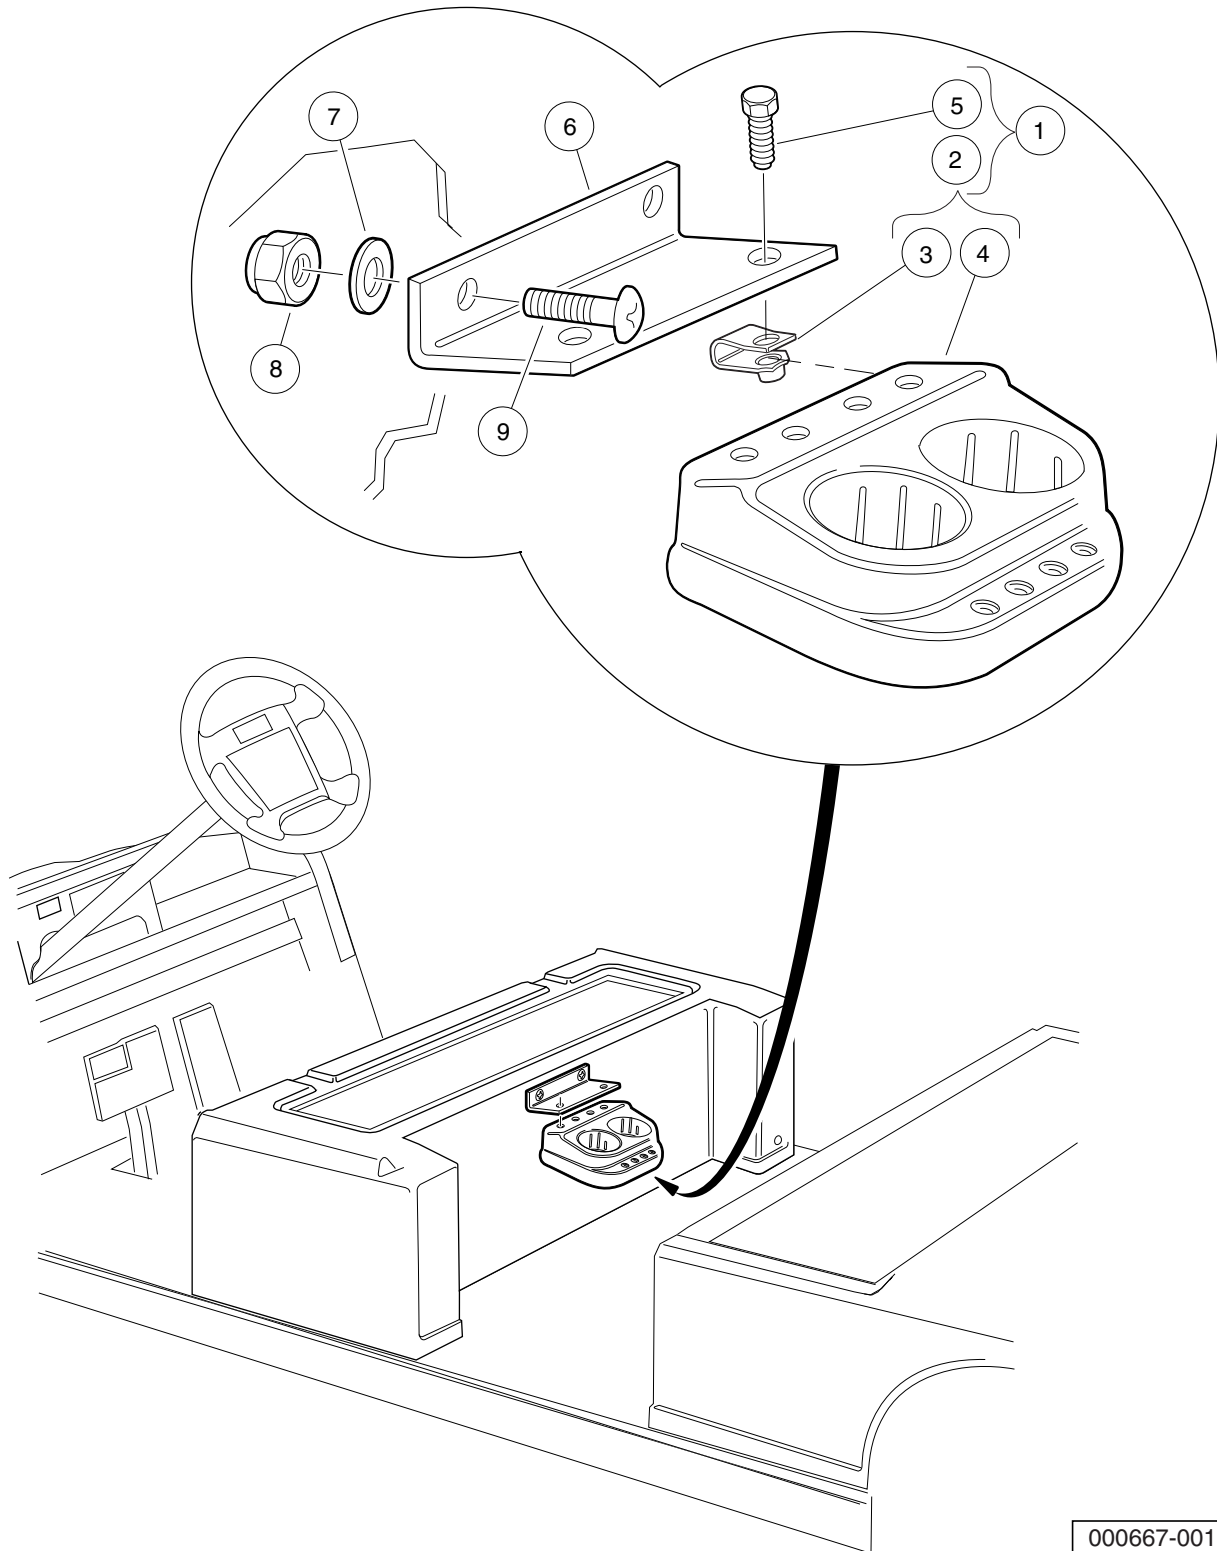

000667-001

REAR BEVERAGE HOLDER

ITEM	PART NO.	DESCRIPTION	QTY	1
		1 2 3 4		G
1	<u>101708301</u>	Drink Holder Kit (includes items 2 through 5)	1	E
2	<u>1016811</u>	Holder, Dual Cup (includes items 3 and 4)	1	
3	<u>1016952</u>	U-Nut, 1/4-20	2	
4	N/A	Cup Holder, Dual	1	
5	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2	
6	<u>1017832</u>	Cup Holder Mtg Plate	1	
7	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2	
8	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2	
9	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	2	

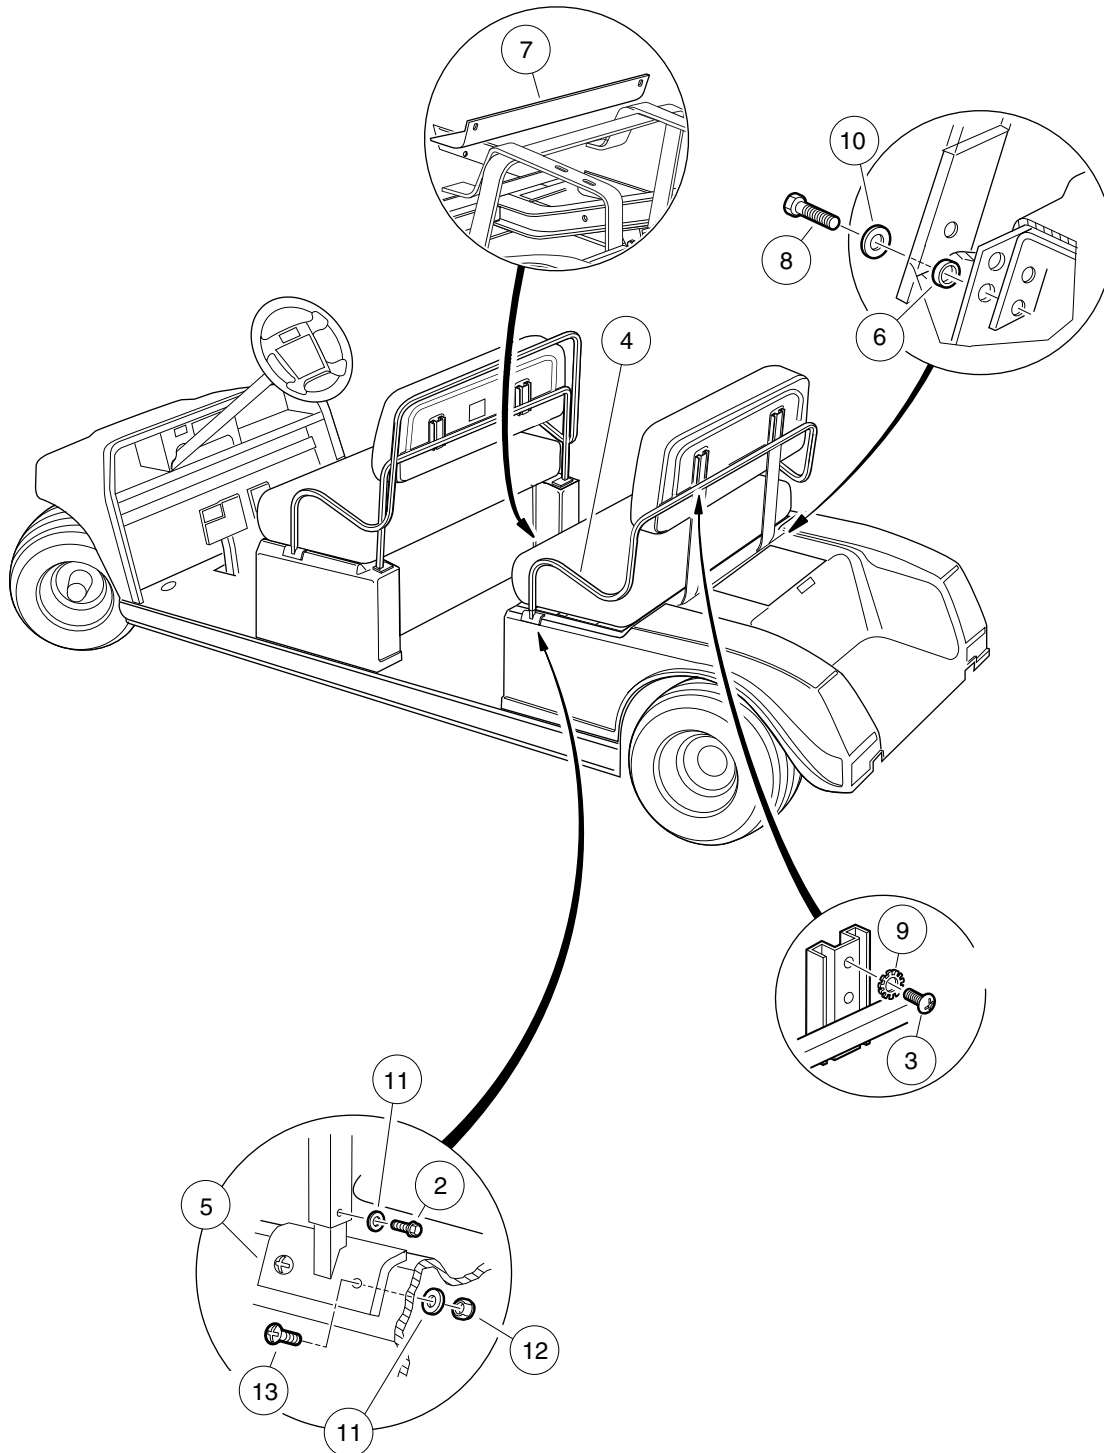1**G****E**

000664-002


ARMREST (4-PASSENGER)

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	N/A	Armrest Instl Rear Std (includes items 2 through 13)	1	
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	2	
3	<u>1015902</u>	Screw, 1/4-20 X 1.25 Truss-Head	4	
4	<u>1017262</u>	Armrest Weld Asm Rear	1	
5	<u>1017310</u>	Armrest Mounting Weldment	2	
6	<u>1017774</u>	Body Spacer	4	
7	<u>101806901</u>	Shield, Heat	1	
8	<u>101910401</u>	Screw, 5/16-18 X 1.25 Thrd Frm	4	
9	<u>101946201</u>	Washer, Lock, 0.250 External-Tooth	4	
10	<u>1241</u>	Washer, 5/16 Type A Flat	4	
11	<u>332</u>	Washer, 1/4 Type A Narrow Flat	6	
12	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4	
13	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	4	

1

G


E

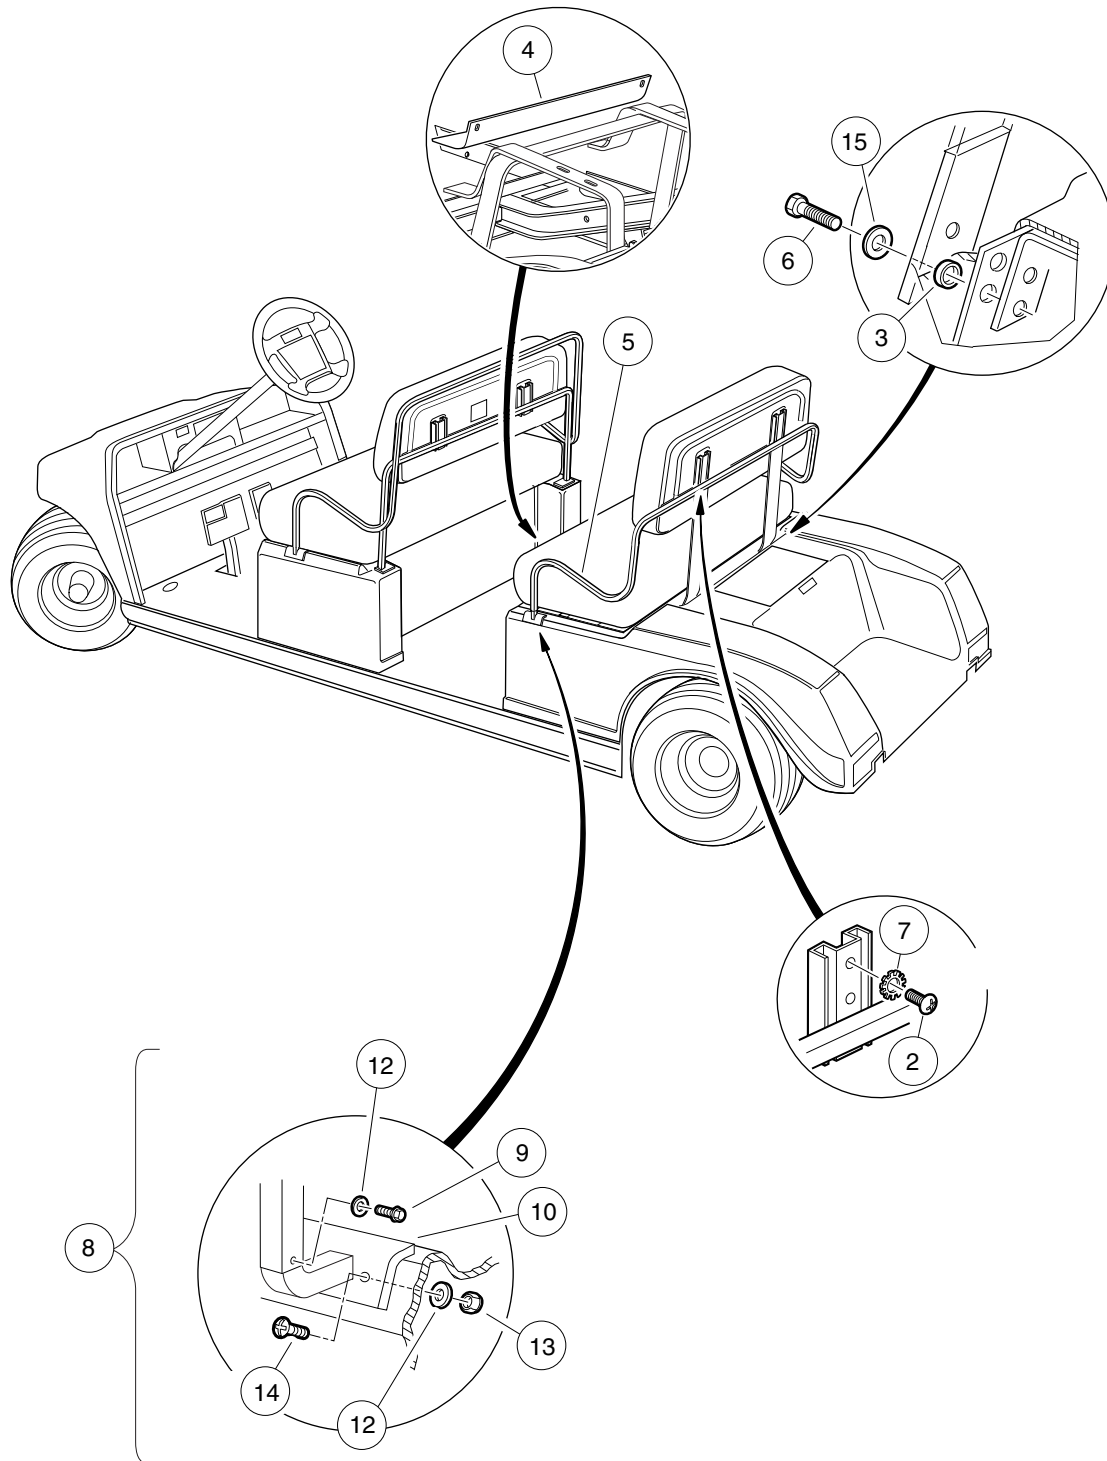

000663-002

ARMREST (5-PASSENGER)

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	N/A	Armrest Instl Rear Wide (includes items 2 through 15)	1			
2	<u>1015902</u>	Screw, 1/4-20 X 1.25 Truss-Head	4			
3	<u>1017774</u>	Body Spacer	4			
4	<u>101806901</u>	Shield, Heat	1			
5	<u>101850901</u>	Armrest Weld Asm Rear	1			
6	<u>101910401</u>	Screw, 5/16-18 X 1.25 Thrd Frm	4			
7	<u>101946201</u>	Washer, Lock, 0.250 External-Tooth	4			
8	<u>102626401</u>	Kit, Hardware, Armrest Wide (includes items 9 through 14)	1			
9	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	2			
10	<u>101850701</u>	Armrest Mtg Weldment	2			
11	N/A	Armrest Installation Inst Sht	1			
12	<u>332</u>	Washer, 1/4 Type A Narrow Flat	6			
13	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4			
14	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	4			
15	<u>1241</u>	Washer, 5/16 Type A Flat	4			

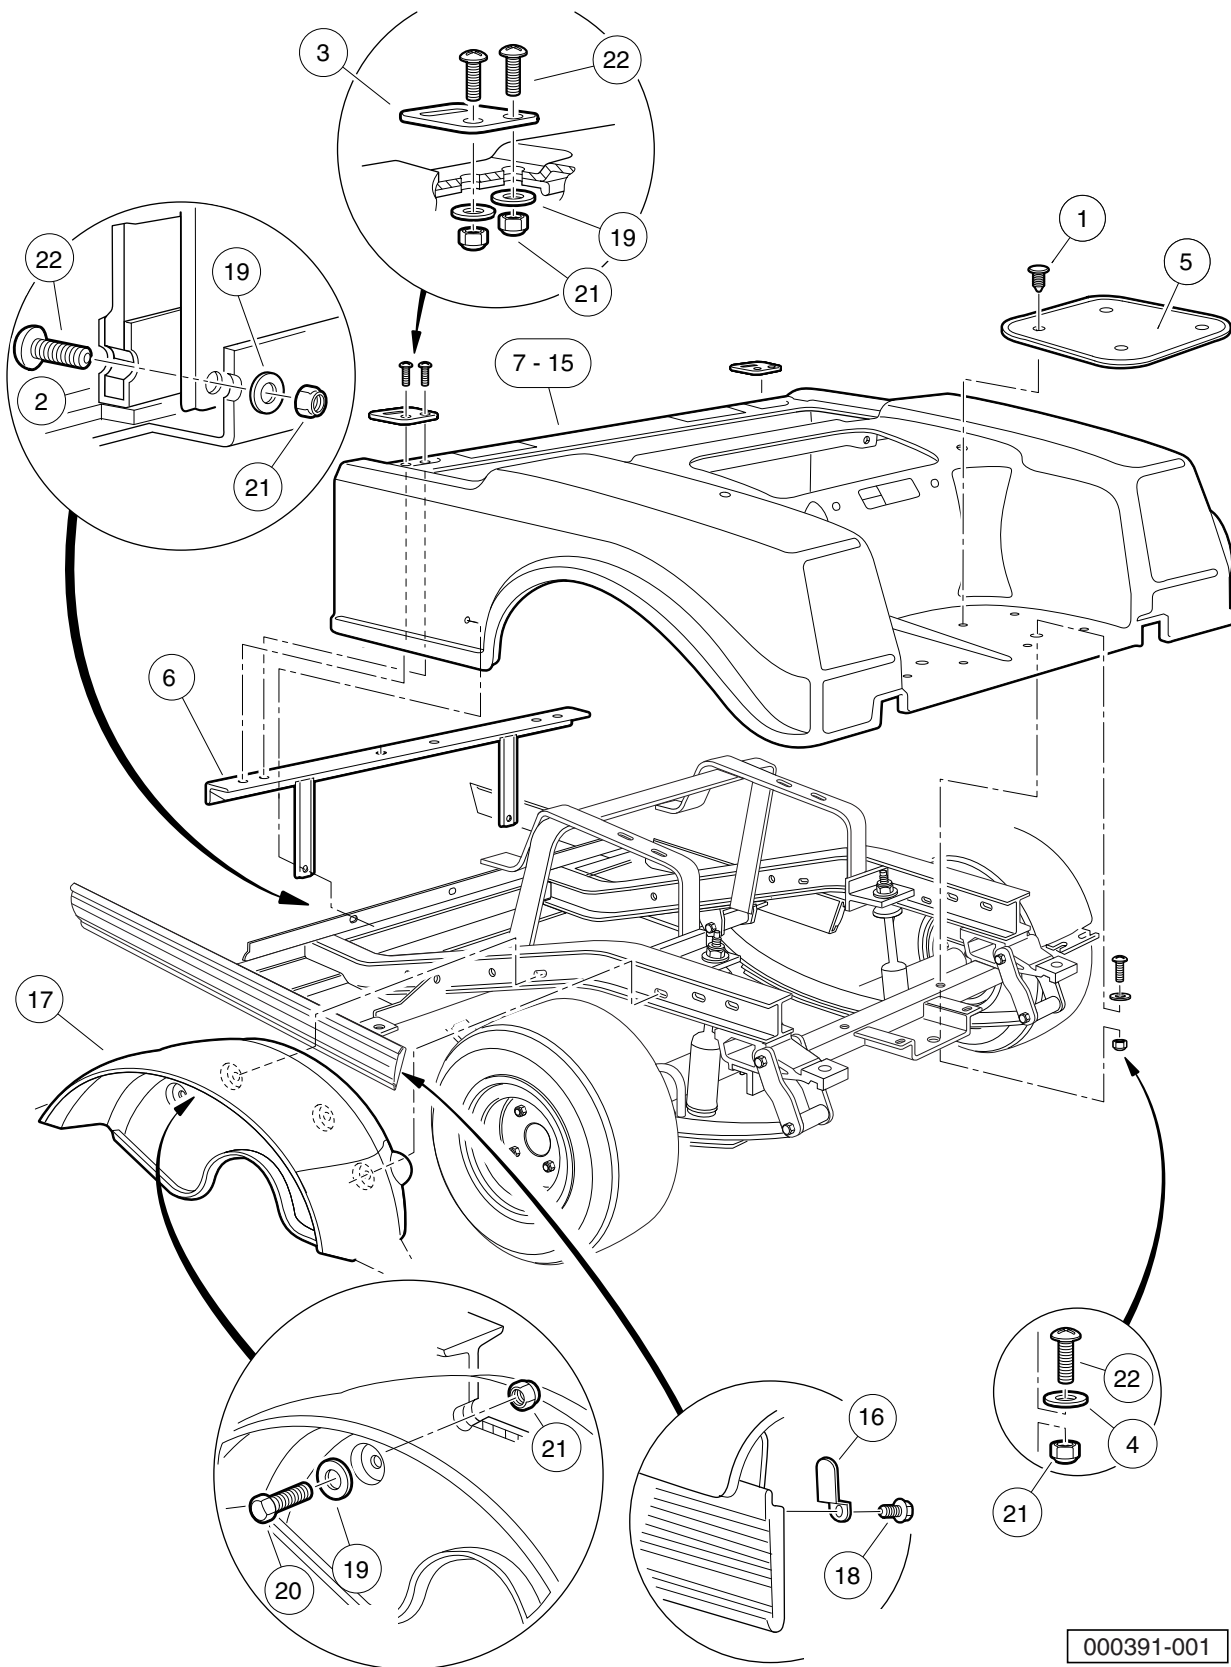1**G****E**



REAR BODY AND FENDER

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	<u>1010434</u>	Barrel - Plastic	8			
2	<u>1010993</u>	Body Kick Plate	1			
3	<u>1012412</u>	Body, Hinge Plate	2			
4	<u>1014306</u>	Washer, 1/4" Type B Flat	2			
5	<u>1014392</u>	Bag Rest Mat	2			
6	<u>1017141</u>	Body Support Weldment	1			
7	<u>101728701</u>	Body, Beige, TPO, Rear	1			
8	<u>101728702</u>	Body, White, TPO, Rear	1			
9	<u>101728704</u>	Body, Gray, TPO, Rear	1			
10	<u>101728706</u>	Body, Red, TPO, Rear	1			
11	<u>101728708</u>	Body, Royal Blue, TPO, Rear	1			
12	<u>101728709</u>	Body, Dark Green, TPO, Rear	1			
13	<u>101728710</u>	Body, Black, TPO, Rear	1			
14	<u>101728711</u>	Body, Classic Blue, TPO, Rear	1			
15	<u>101728712</u>	Body, Burgundy, TPO, Rear	1			
16	<u>1017748</u>	Body Keeper Clip	2			
17	<u>1017936</u>	Fender, Inner	2			
18	<u>102310701</u>	Screw, #8-18 x 0.375, Hex-Head Washer	2			
19	<u>332</u>	Washer, 1/4 Type A Narrow Flat	10			
20	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4			
21	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	12			
22	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	8			

1

G

E

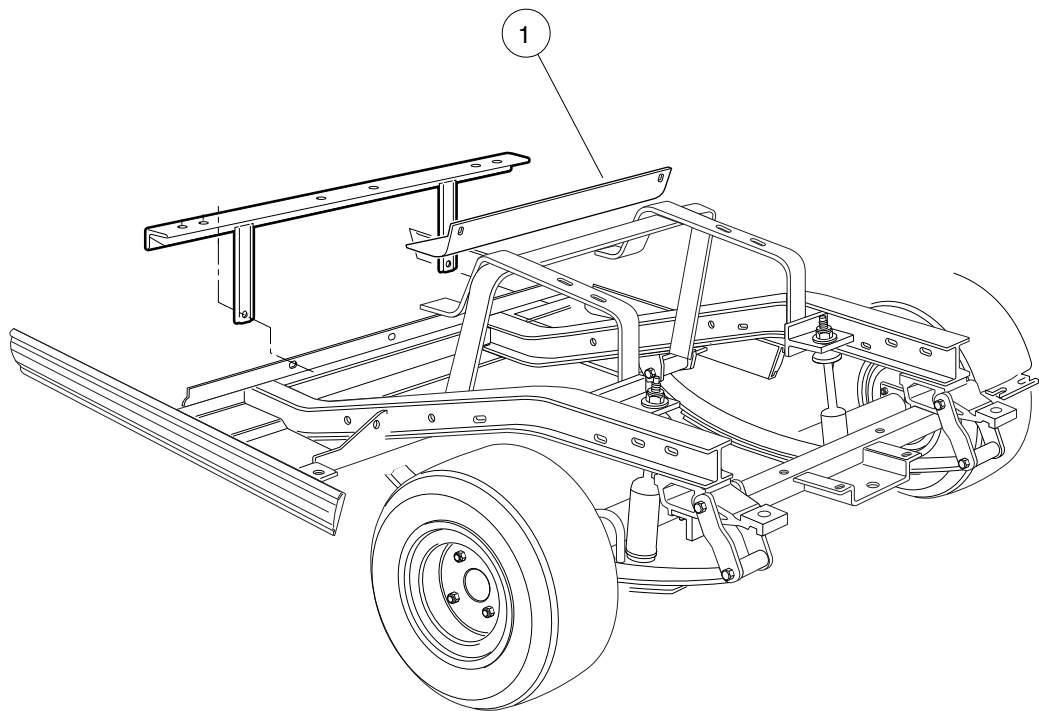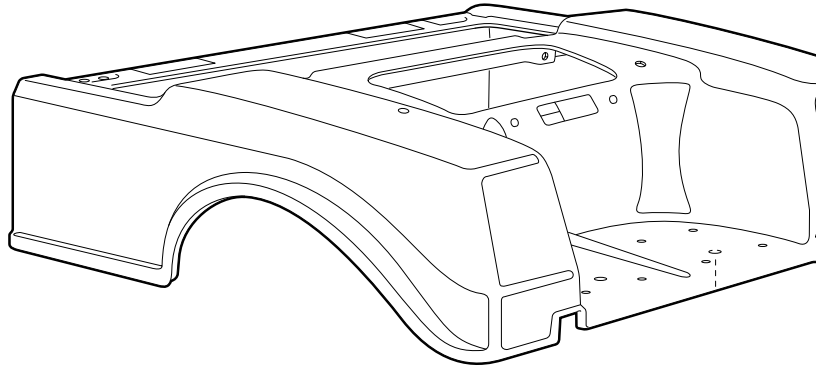

[



HEAT SHIELD – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>101806901</u>	1 2 3 4 Shield, Heat	1

1

G

E

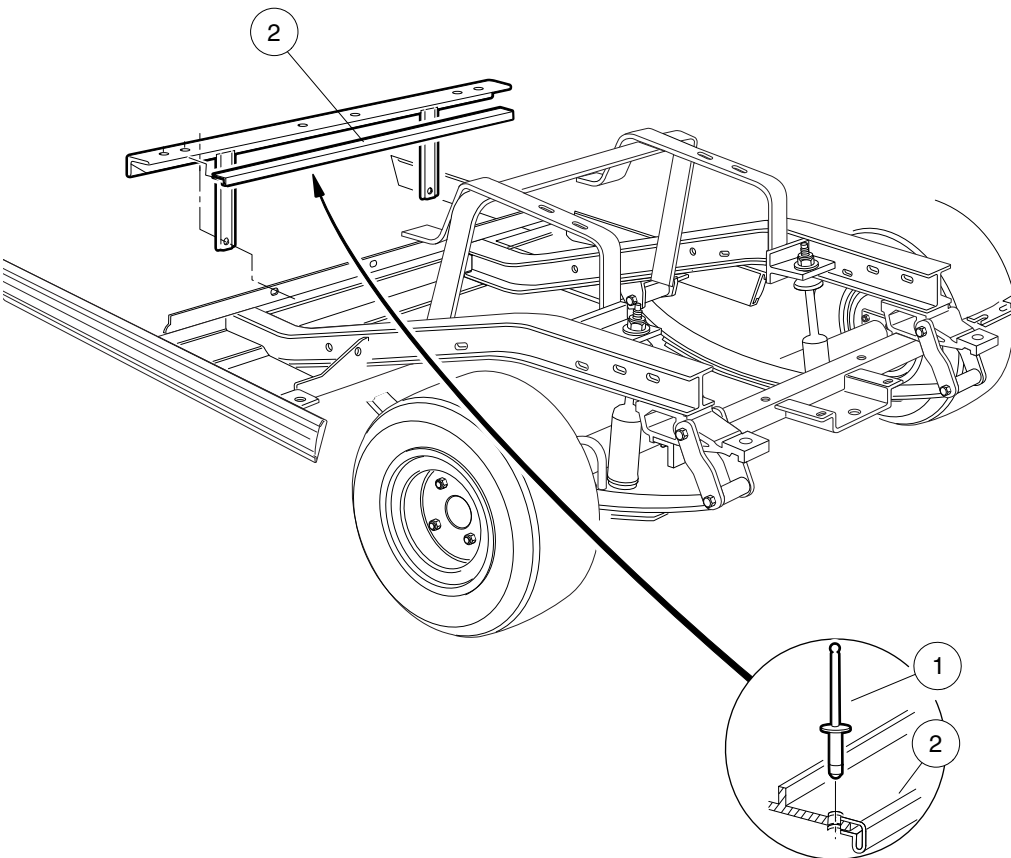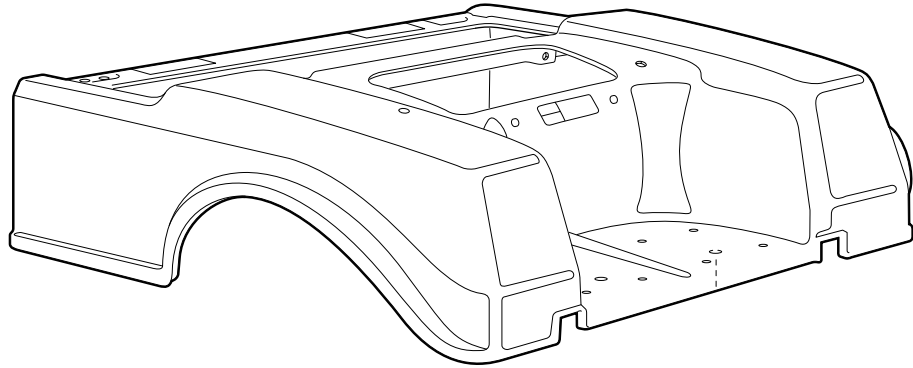

000393-001


BATTERY INSULATOR – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	1
1	<u>1013357</u>	1 2 3 4 Rivet, 5/32 Aluminum Pop	2	G
2	<u>101837001</u>	Battery Insulator	1	E

1

G


E

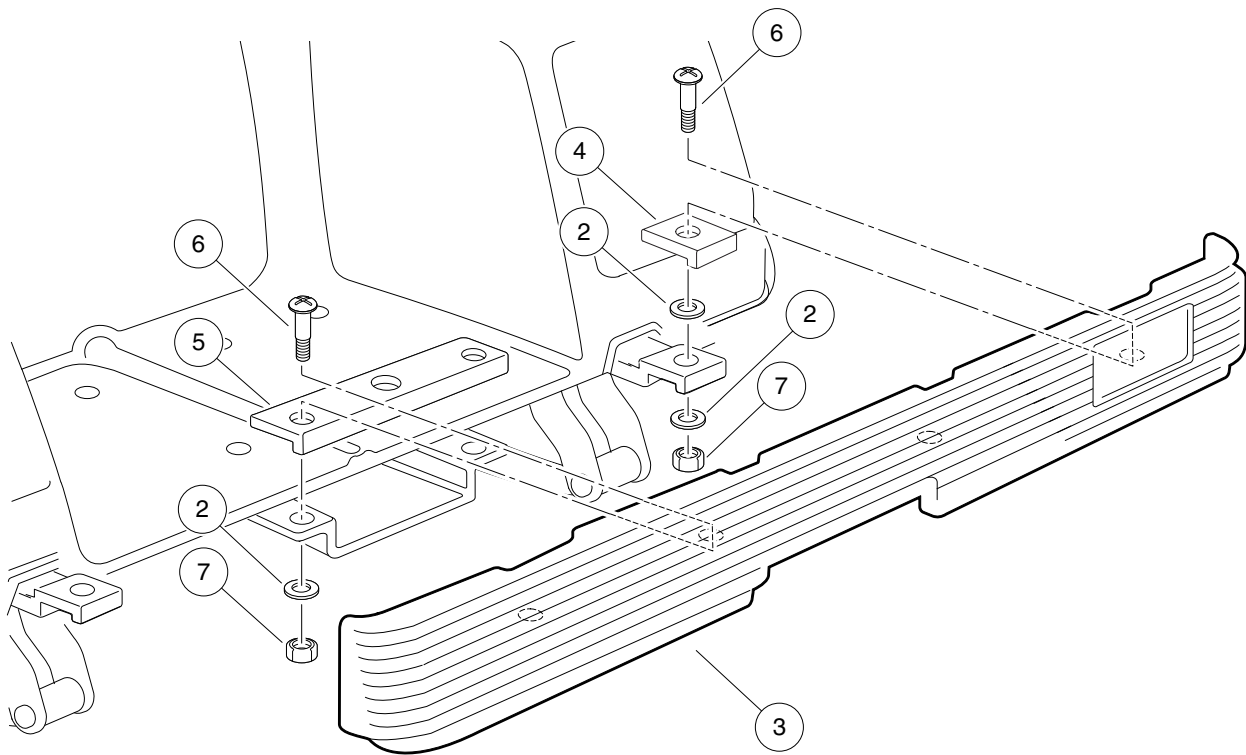

000666-001

REAR BUMPER

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1017079</u>	Kit, Rear Bumper (includes items 2 through 7)	1	
2	<u>1011697</u>	Washer, 5/16 Flat	6	
3	<u>1016379</u>	Bumper, Rear	1	
4	<u>1016874</u>	Plate, Bumper Mounting, Short	2	
5	<u>1016875</u>	Plate, Bumper Mounting, Long	1	
6	<u>1016876</u>	Bolt, 3/8 Shoulder	4	
7	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4	
Note: Item 4 not used in all applications.				

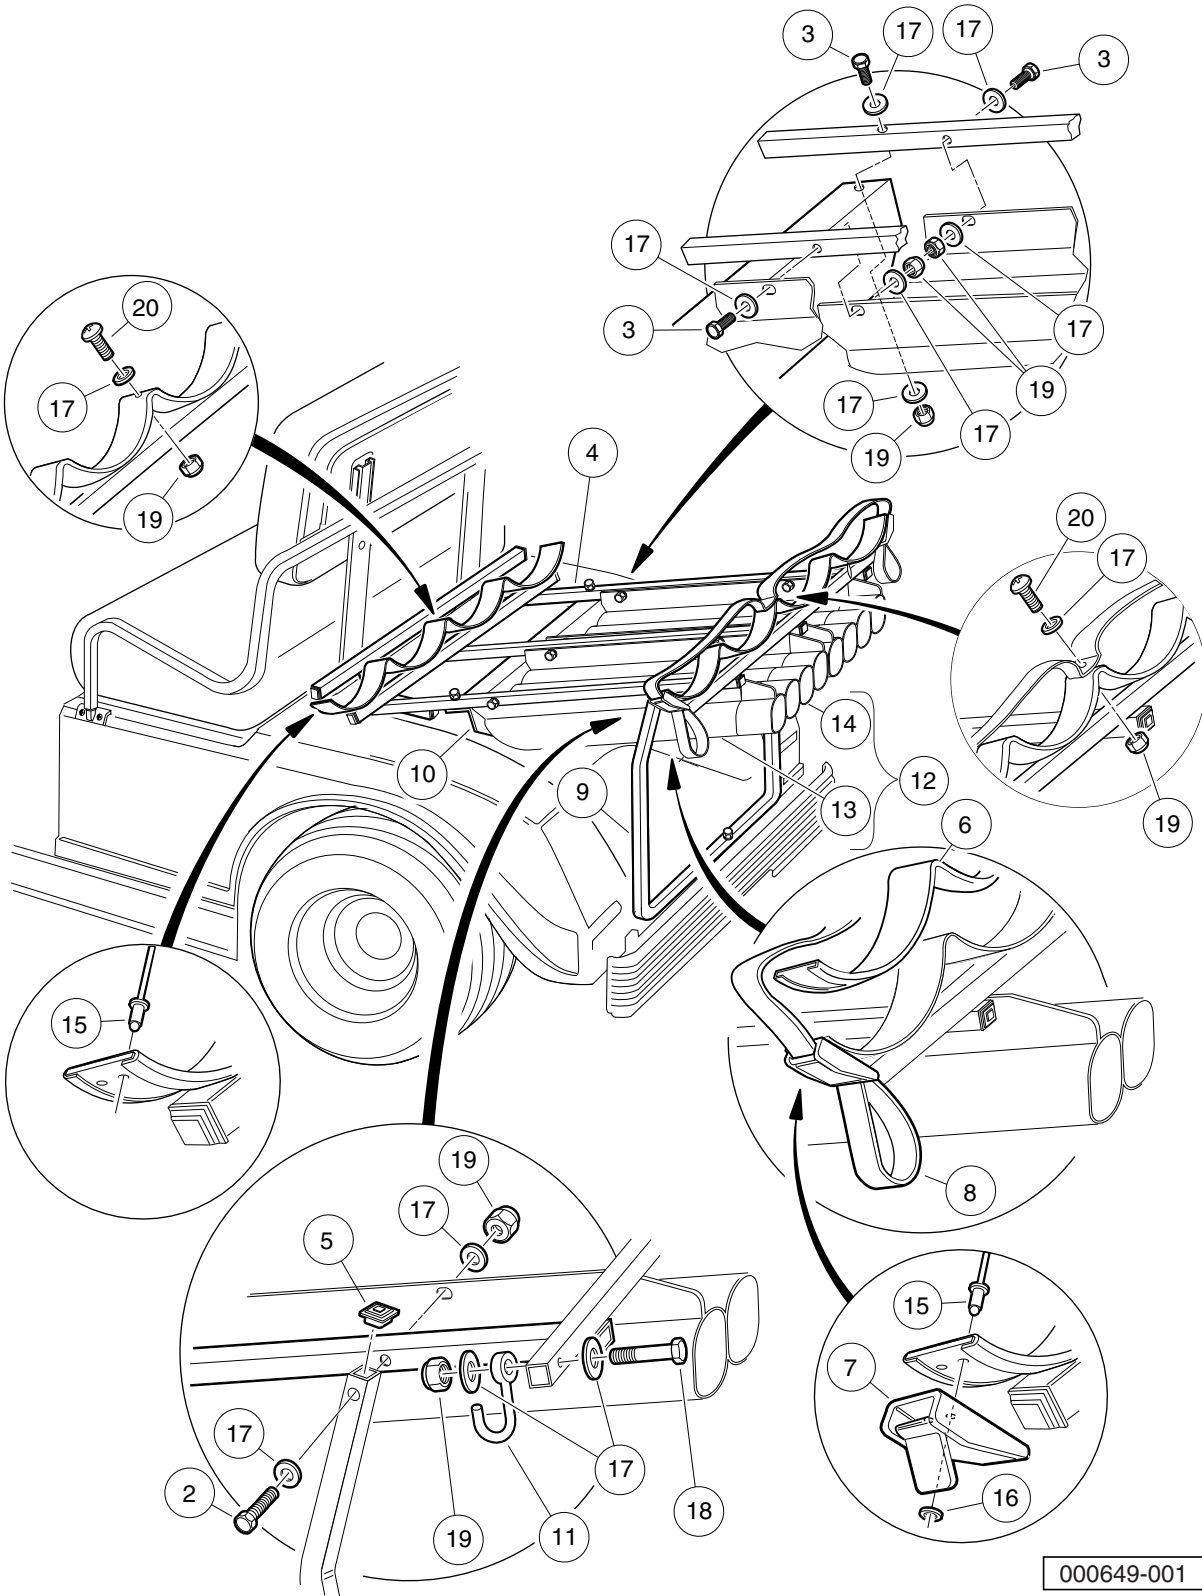1**G****E**

000649-001


BAG RACK

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Bag Rack Asm, Limo (includes items 2 through 20)	1
2	<u>1012159</u>	Bolt, 1/4-20 X 2.75 Hex-Head	2
3	<u>1013509</u>	Screw, 1/4-20 X 1.75 Hx Hd Cap	6
4	<u>1017249</u>	Bag rack Weld Assembly	1
5	<u>1017271</u>	Finishing Plug	14
6	<u>1017281</u>	Vinyl Rack Cover	2
7	<u>1017284</u>	Strap Buckle	2
8	<u>1017299</u>	Bag Strap Limo	1
9	<u>1017672</u>	Bag Rack Support	1
10	<u>102359101</u>	Limo Putter Tube Backstop	1
11	<u>102359301</u>	Limo Bag Hook	1
12	N/A	Assembly, Putter Tube / Endcap (includes items 13 and 14)	2
13	<u>102359001</u>	Limo Putter Tube	1
14	<u>102397301</u>	Endcap, Putter Tube	1
15	<u>1606</u>	Rivet, 3/16 X .500 Alum Pop	8
16	<u>183</u>	Washer, #10 Type A Flat	4
17	<u>332</u>	Washer, 1/4 Type A Narrow Flat	20
18	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	1
19	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	11
20	<u>8248</u>	Screw, 1/4-20 X 0.75 Truss-Head Machine	2

1

G


E

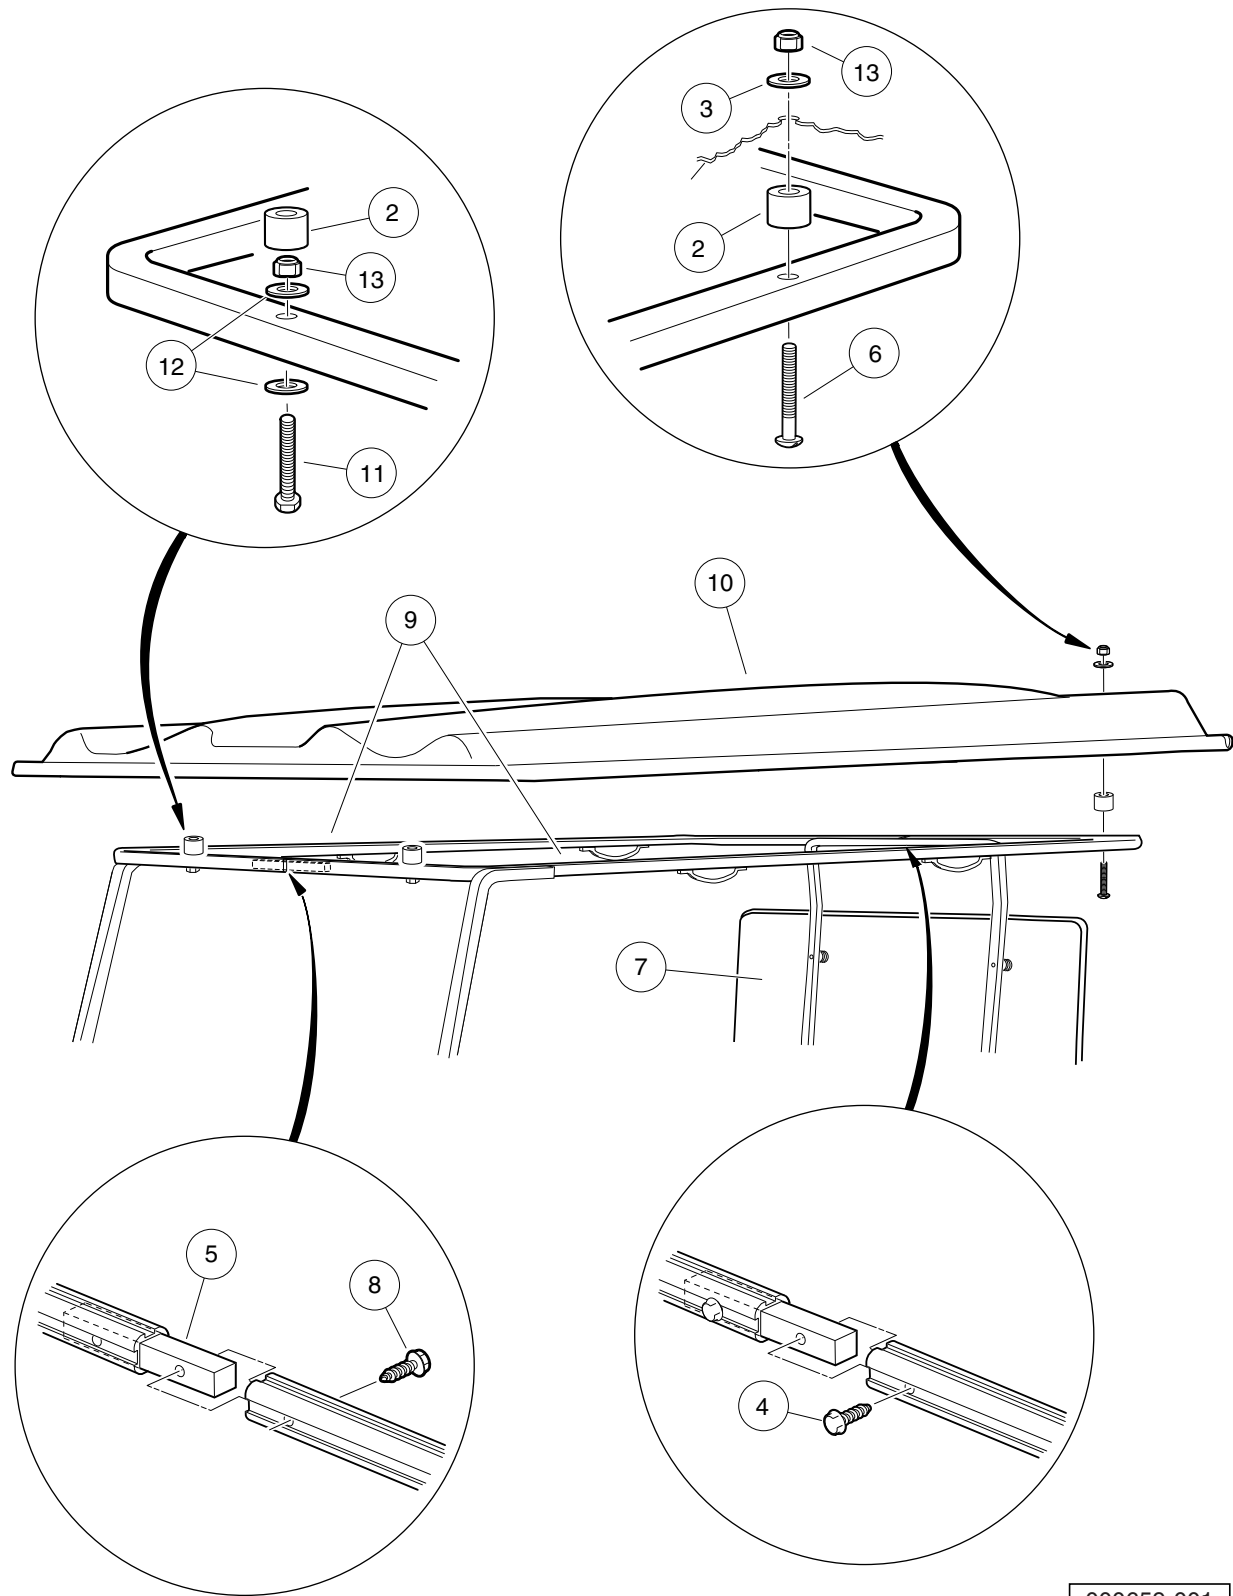

000659-001

CANOPY KIT (WHITE)


ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>102358001</u>	Sub-asm, Canopy, White Limo II (includes items 2 through 13)	1	
2	<u>1010142</u>	Cushion, Shock Absorber	8	
3	<u>1014306</u>	Washer, 1/4" Type B Flat	6	
4	<u>1016269</u>	Screw, 5/16-18 Thrd Forming	2	
5	<u>1016795</u>	Splice Bar	2	
6	<u>1016845</u>	Screw, 1/4-20 X 2.125 Truss-Head	6	
7	<u>1017417</u>	Window, Limo Rear	1	
8	<u>101910401</u>	Screw, 5/16-18 X 1.25 Thrd Frm	2	
9	N/A	Frame Half, Canopy Limo li	2	
10	N/A	Canopy, White, Limo II	1	
11	<u>1703</u>	Screw, 1/4-20 X 1.50 Hx Hd Cap	2	
12	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4	
13	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	8	

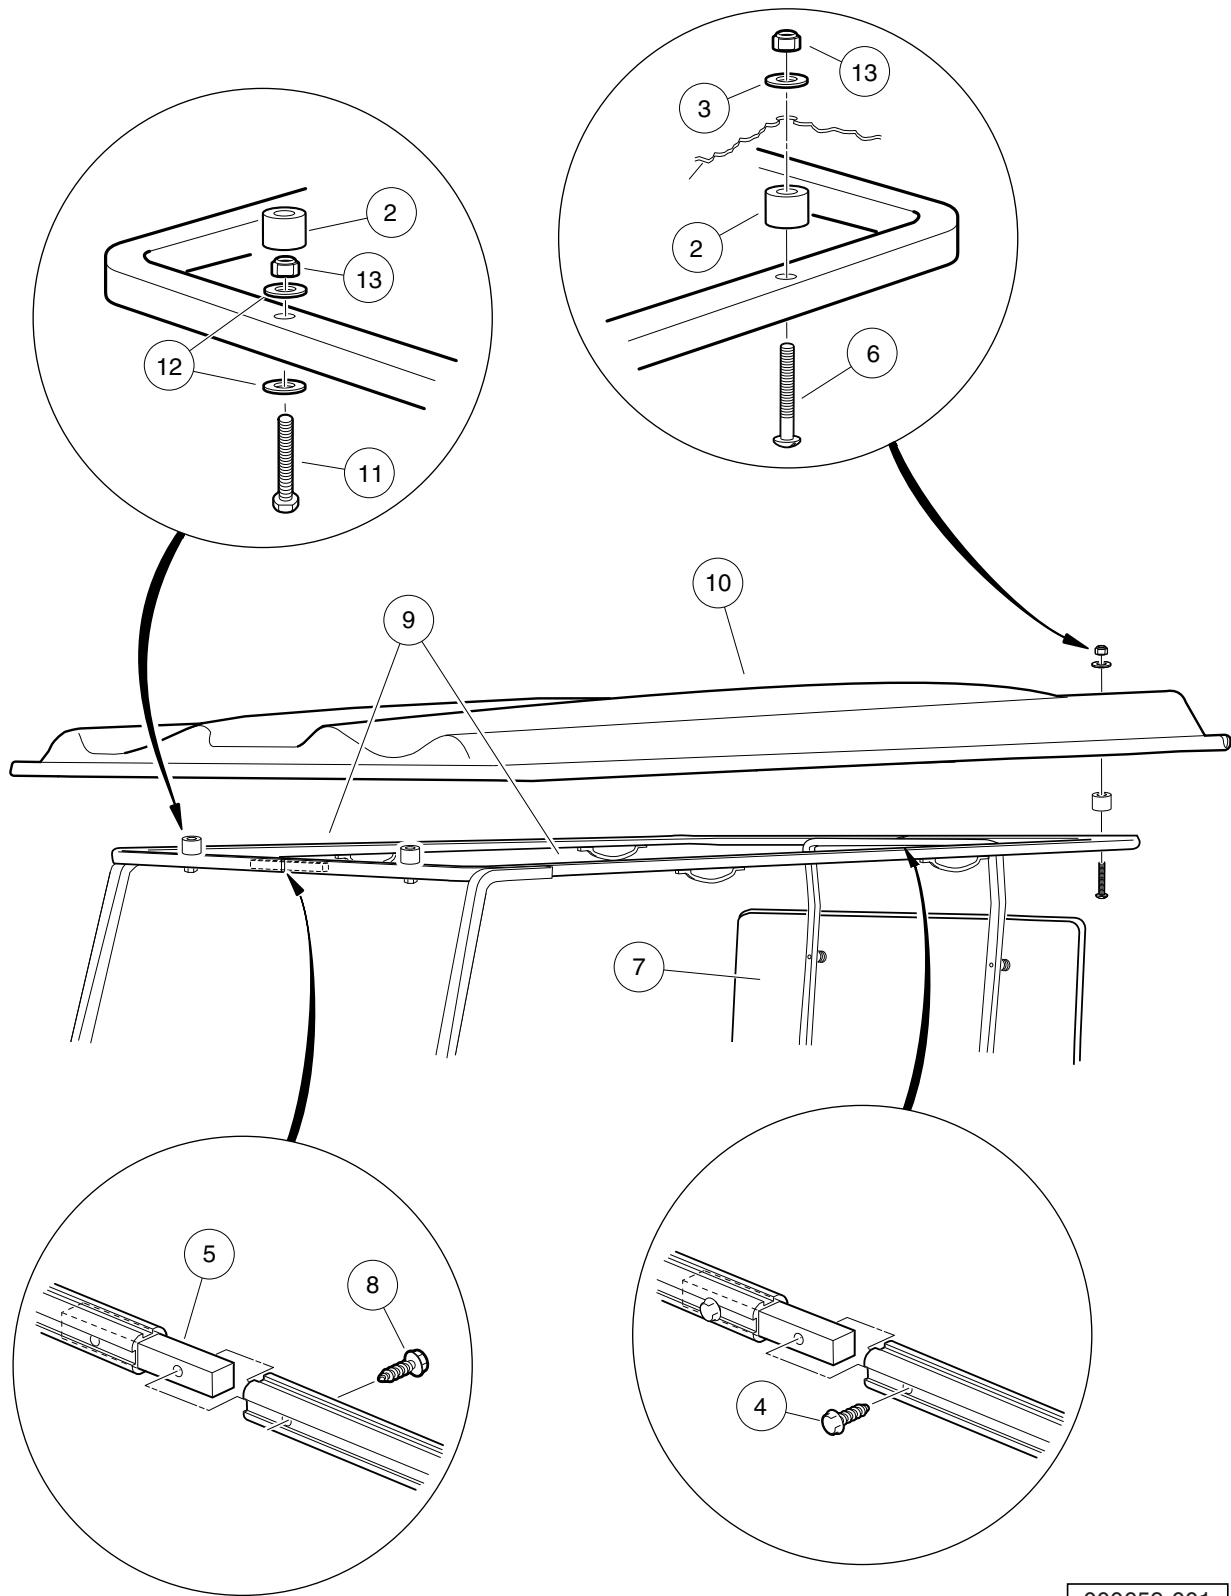

000659-001

CANOPY KIT (BEIGE)

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>102358002</u>	Sub-asm, Canopy, Beige Limo II (includes items 2 through 13)	1	
2	<u>1010142</u>	Cushion, Shock Absorber	8	
3	<u>1014306</u>	Washer, 1/4" Type B Flat	6	
4	<u>1016269</u>	Screw, 5/16-18 Thrd Forming	2	
5	<u>1016795</u>	Splice Bar	2	
6	<u>1016845</u>	Screw, 1/4-20 X 2.125 Truss-Head	6	
7	<u>1017417</u>	Window, Limo Rear	1	
8	<u>101910401</u>	Screw, 5/16-18 X 1.25 Thrd Frm	2	
9	N/A	Frame Half, Canopy Limo li	2	
10	N/A	Canopy, Beige, Limo II	1	
11	<u>1703</u>	Screw, 1/4-20 X 1.50 Hx Hd Cap	2	
12	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4	
13	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	8	

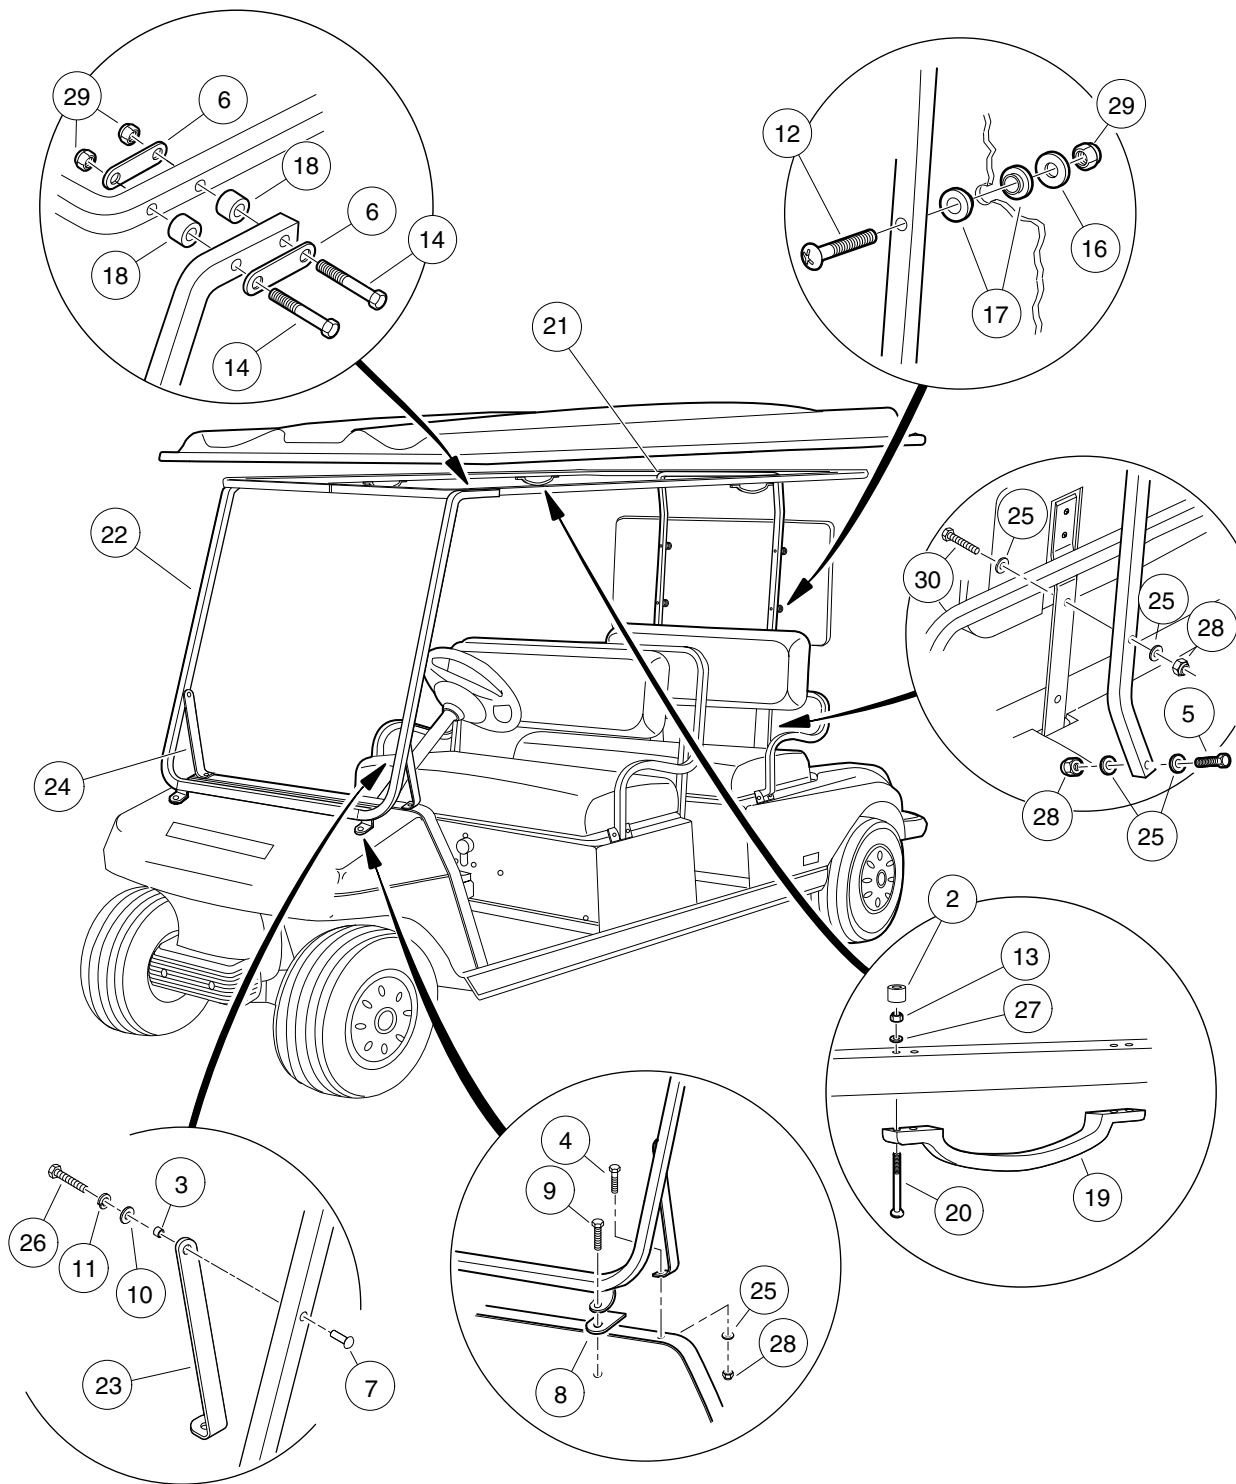
1**G****E**

000661-001

CANOPY HARDWARE KIT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102357901	Kit, Canopy Hardware -limo li (includes items 2 through 30)	1
2	<u>1010142</u>	Cushion, Shock Absorber	8
3	<u>1010237</u>	Bushing	2
4	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	2
5	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	2
6	1011852	Plate, Canopy Trim	4
7	1011878	T-nut, 1/4-20 X .310 Capped	2
8	<u>1011883</u>	Pad, Windshield Frame Mounting	2
9	<u>1011937</u>	Bolt, 5/16-18 X 1.25 Hex Head	2
10	1011964	Washer, 1/4 Flat	2
11	<u>1011965</u>	Lockwasher, 1/4 Split Ss	2
12	<u>1011988</u>	Screw, 1/4-20 X 2.00 Phillips Truss-Head	4
13	<u>1012438</u>	Locknut, #10-24 Nylon Insert	14
14	<u>1012462</u>	Bolt, 1/4-20 X 3.50 Hex Head	4
15	N/A	Plastic Bag, 9" X 12"	1
16	<u>1014306</u>	Washer, 1/4" Type B Flat	4
17	<u>1015453</u>	Compression Mount	8
18	<u>1016848</u>	Spacer	4
19	<u>1017420</u>	Limo Canopy Handle	3
20	<u>1017789</u>	Screw, #10-24 X 1.75 Phil Cs	14
21	<u>101987301</u>	Support, Rear Canopy	1
22	<u>102358101</u>	Limo li Windshield Frame Asm	1
23	<u>102358501</u>	Knee Br Lh Canopy Mtg Limo li	1
24	<u>102358601</u>	Knee Br Rh Canopy Mtg Limo li	1
25	<u>1241</u>	Washer, 5/16 Type A Flat	10
26	<u>1703</u>	Screw, 1/4-20 X 1.50 Hx Hd Cap	2
27	<u>183</u>	Washer, #10 Type A Flat	14
28	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	6
29	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	8
30	8916	Screw, 5/16-18 X 2.0 Hex Cap	2


1
G
E

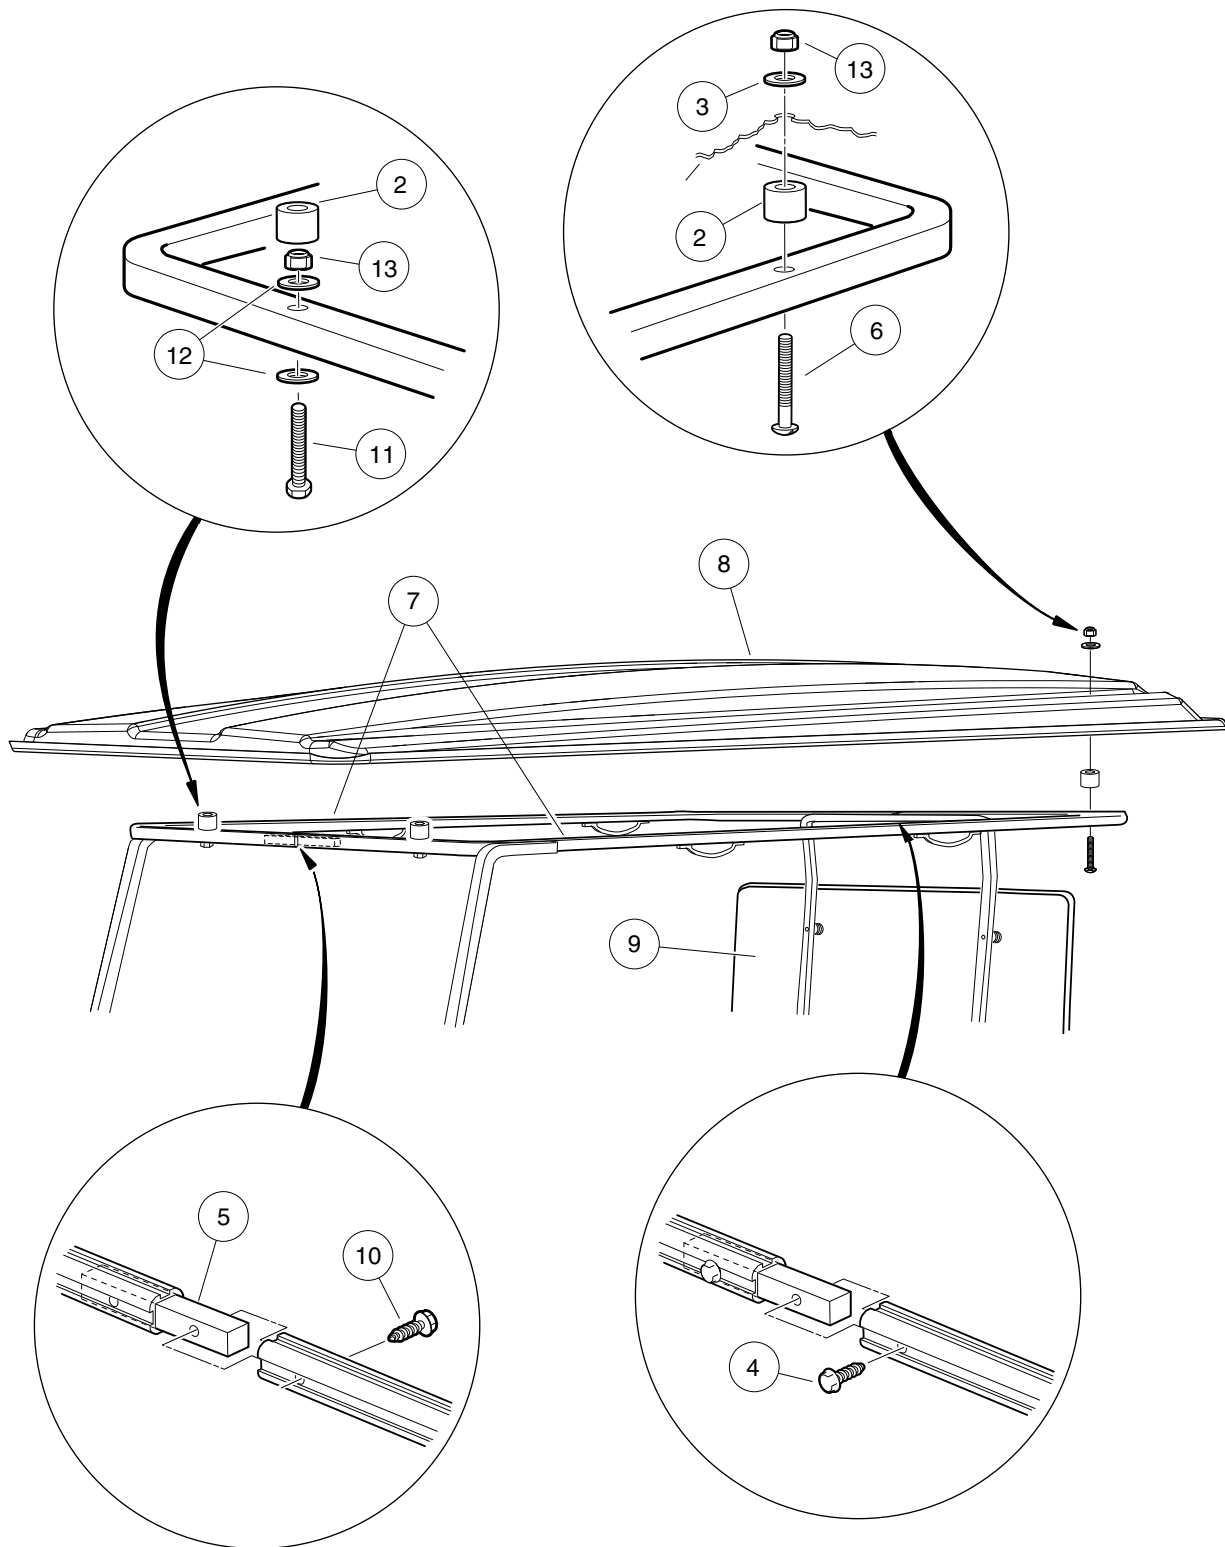1**G****E**

000660-001

CANOPY KIT, WHITE


ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	<u>101736001</u>	Canopy Sub Assembly White (includes items 2 through 13)	1			
2	<u>1010142</u>	Cushion, Shock Absorber	8			
3	<u>1014306</u>	Washer, 1/4" Type B Flat	6			
4	<u>1016269</u>	Screw, 5/16-18 Thrd Forming	2			
5	<u>1016795</u>	Splice Bar	2			
6	<u>1016845</u>	Screw, 1/4-20 X 2.125 Truss-Head	6			
7	<u>1017350</u>	Frame Half, Canopy	2			
8	N/A	Canopy, White Limo/4-passenger	1			
9	<u>1017417</u>	Window, Limo Rear	1			
10	<u>101910401</u>	Screw, 5/16-18 X 1.25 Thrd Frm	2			
11	<u>1703</u>	Screw, 1/4-20 X 1.50 Hx Hd Cap	2			
12	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4			
13	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	8			

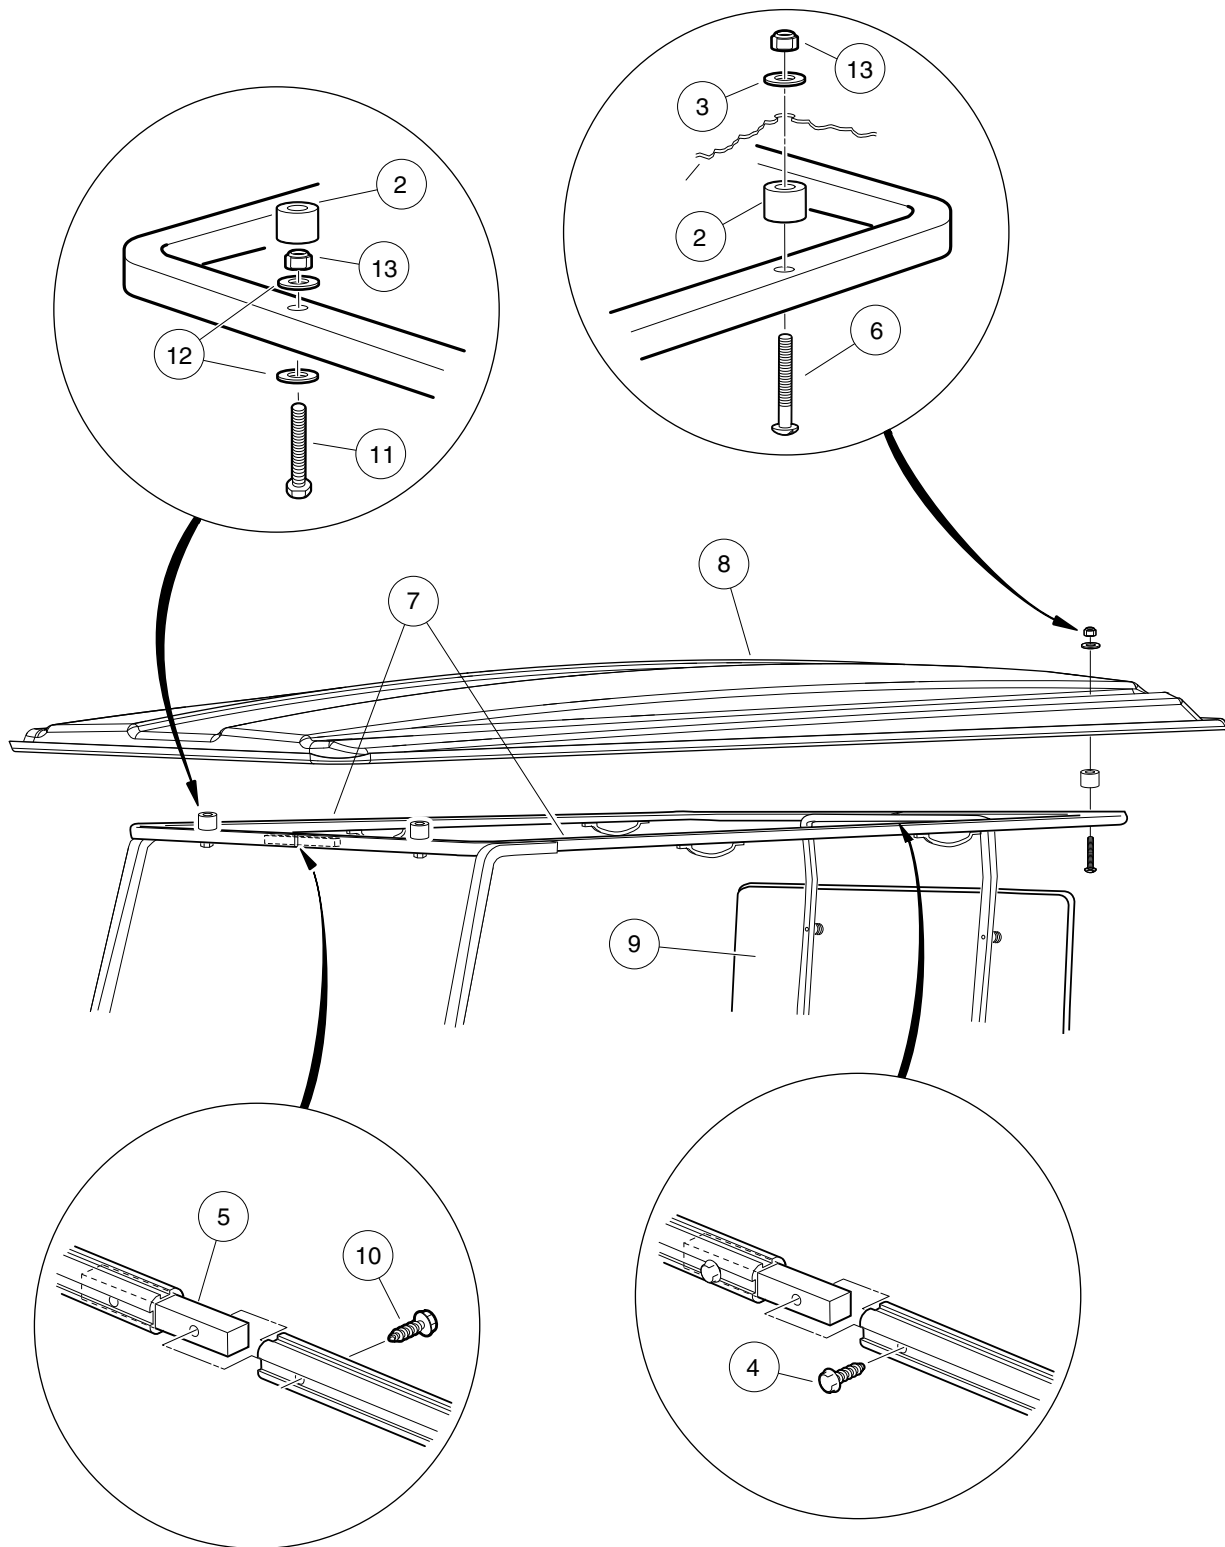1**G****E**

000660-001

CANOPY KIT, BEIGE

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>101736002</u>	Canopy Sub Assembly Beige Limo (includes items 2 through 13)	1	
2	<u>1010142</u>	Cushion, Shock Absorber	8	
3	<u>1014306</u>	Washer, 1/4" Type B Flat	6	
4	<u>1016269</u>	Screw, 5/16-18 Thrd Forming	2	
5	<u>1016795</u>	Splice Bar	2	
6	<u>1016845</u>	Screw, 1/4-20 X 2.125 Truss-Head	6	
7	<u>1017350</u>	Frame Half, Canopy	2	
8	N/A	Canopy, Beige Limo/4-passenger	1	
9	<u>1017417</u>	Window, Limo Rear	1	
10	<u>101910401</u>	Screw, 5/16-18 X 1.25 Thrd Frm	2	
11	<u>1703</u>	Screw, 1/4-20 X 1.50 Hx Hd Cap	2	
12	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4	
13	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	8	

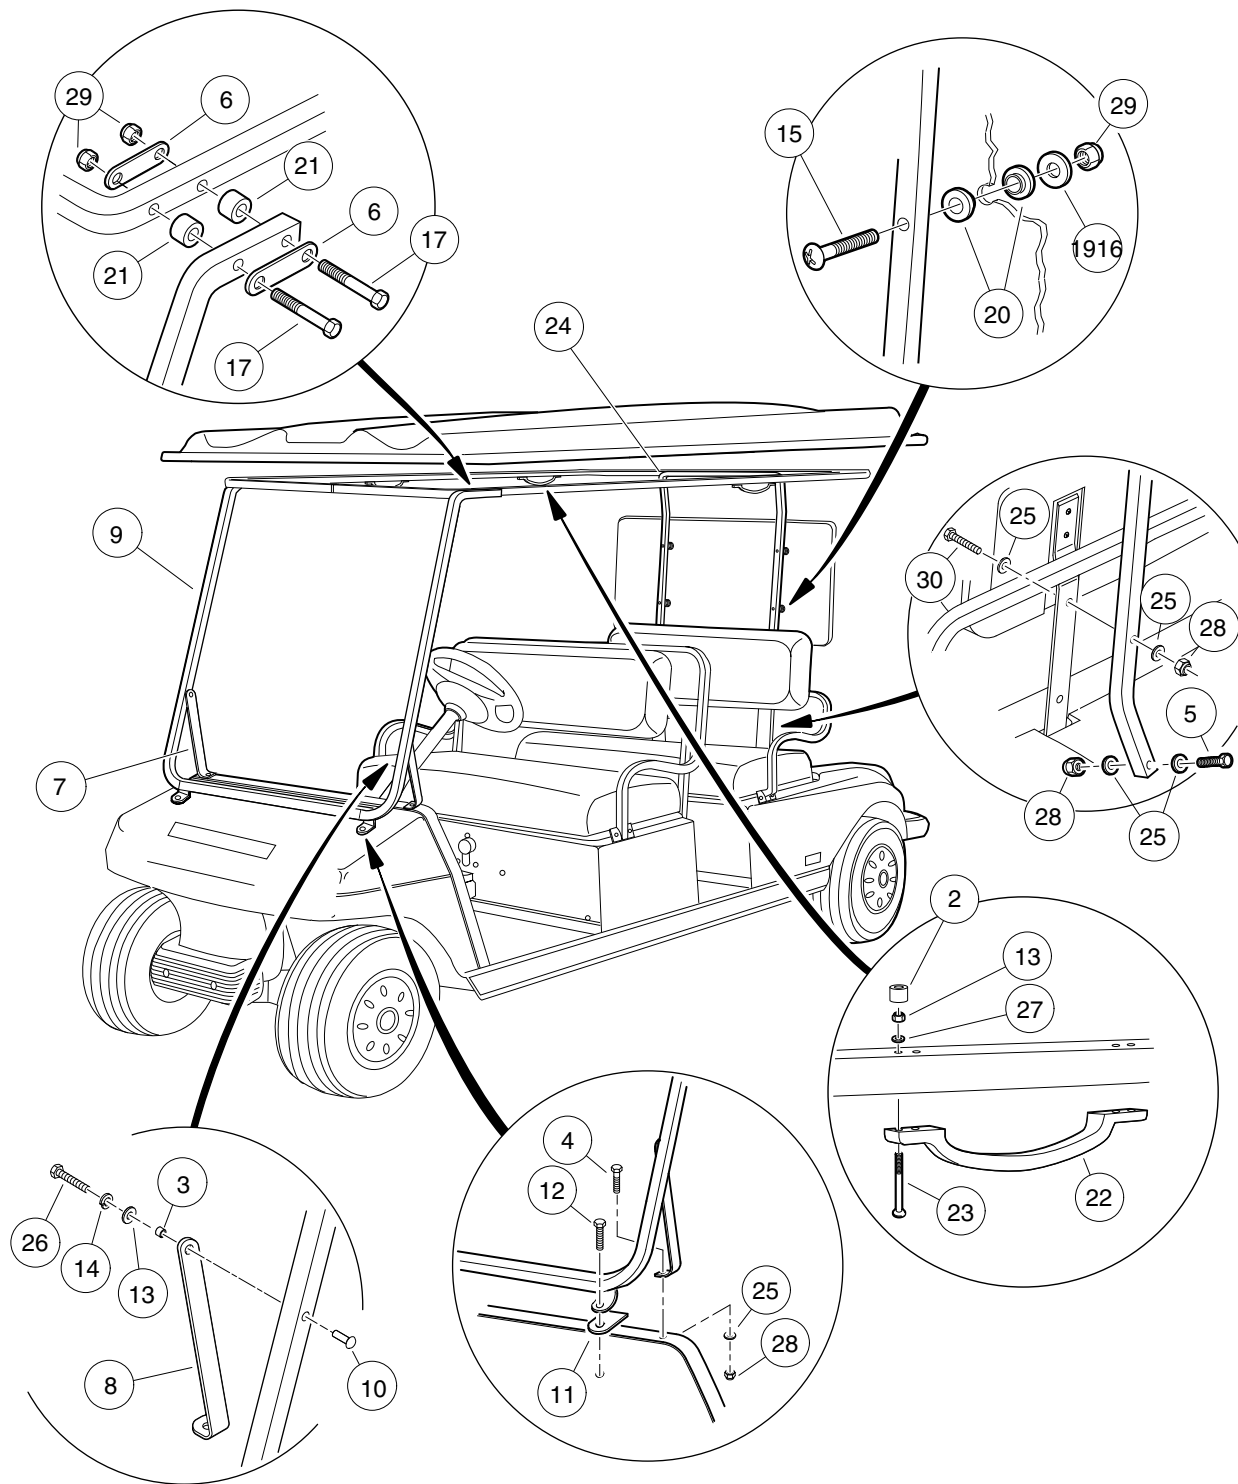1**G****E**

000661-002

CANOPY HARDWARE KIT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101735701</u>	Canopy Hardware Kit (includes items 2 through 30)	1
2	<u>1010142</u>	Cushion, Shock Absorber	8
3	<u>1010237</u>	Bushing	2
4	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	2
5	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	2
6	<u>1011852</u>	Plate, Canopy Trim	4
7	<u>1011862</u>	Brace, Right-Hand Canopy Mount Knee	1
8	<u>1011865</u>	Brace, Left-Hand Canopy Mount Knee	1
9	<u>1011868</u>	Weldment, Windshield Frame	1
10	<u>1011878</u>	T-nut, 1/4-20 X .310 Capped	2
11	<u>1011883</u>	Pad, Windshield Frame Mounting	2
12	<u>1011937</u>	Bolt, 5/16-18 X 1.25 Hex Head	2
13	<u>1011964</u>	Washer, 1/4 Flat	2
14	<u>1011965</u>	Lockwasher, 1/4 Split Ss	2
15	<u>1011988</u>	Screw, 1/4-20 X 2.00 Phillips Truss-Head	4
16	<u>1012438</u>	Locknut, #10-24 Nylon Insert	16
17	<u>1012462</u>	Bolt, 1/4-20 X 3.50 Hex Head	4
18	N/A	Plastic Bag, 9" X 12"	1
19	<u>1014306</u>	Washer, 1/4" Type B Flat	4
20	<u>1015453</u>	Compression Mount	8
21	<u>1016848</u>	Spacer	4
22	<u>1017420</u>	Limo Canopy Handle	4
23	<u>1017789</u>	Screw, #10-24 X 1.75 Phil Cs	16
24	<u>101987301</u>	Support, Rear Canopy	1
25	<u>1241</u>	Washer, 5/16 Type A Flat	10
26	<u>1703</u>	Screw, 1/4-20 X 1.50 Hx Hd Cap	2
27	<u>183</u>	Washer, #10 Type A Flat	16
28	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	6
29	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	8
30	<u>8916</u>	Screw, 5/16-18 X 2.0 Hex Cap	2

1
G
E

1

G







E

WHEELS AND TIRES

2

G


E

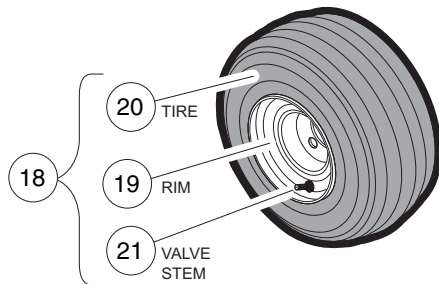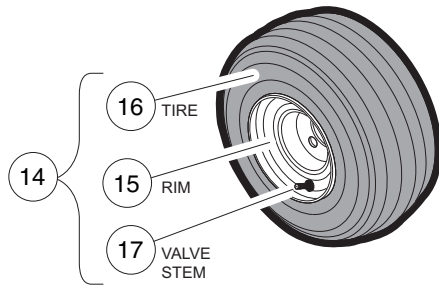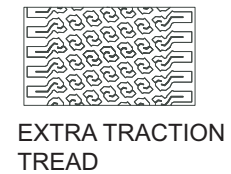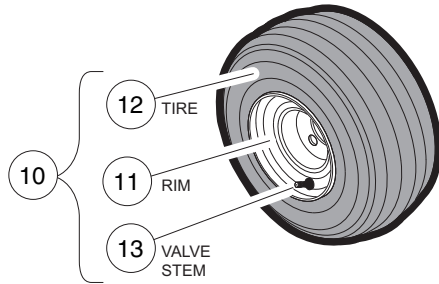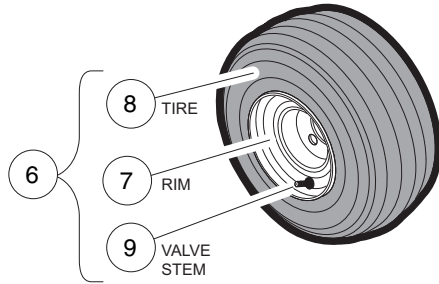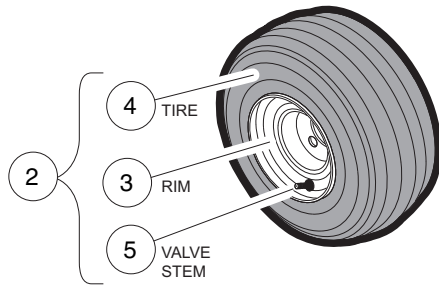

000269-008








WHEELS AND TIRES, FRONT (WHITE RIMS)

ITEM	PART NO.	DESCRIPTION	QTY	2 G E
		1 2 3 4		
1	<u>1010984</u>	.500-20 Unf Lug Nut	8	
2	<u>101651406</u>	Tire/Wheel Asm, White, Premium Tread, 6-Ply (includes items 3 through 5)	2	
3	<u>1014771</u>	Wheel Rim, White	1	
4	<u>101737002</u>	Tire, Unmounted	1	
5	<u>7310</u>	Valve Stem	1	
6	<u>101651407</u>	Tire/Wheel Asm, White, Extra-Traction, 6-Ply (includes items 7 through 9)	2	
7	<u>1014771</u>	Wheel Rim, White	1	
8	N/A	Tire, Unmounted Xtrac 18 x 8.50-8	1	
9	<u>7310</u>	Valve Stem	1	
10	<u>101651415</u>	Tire/Wheel Asm, White, Kenda Premium Tread, 6-Ply (includes items 11 through 13)	2	
11	<u>101918401</u>	Wheel Rim, Beige	1	
12	N/A	Tire, Unmounted Kenda Extra Traction 6-Ply	1	
13	<u>7310</u>	Valve Stem	1	
14	<u>101651416</u>	Tire/Wheel Asm, White, Kenda Premium Tread, 6-Ply (includes items 15 through 17)	2	
15	<u>101918401</u>	Wheel Rim, Beige	1	
16	N/A	Tire, Unmounted Kenda Premium Tread 6-Ply	1	
17	<u>7310</u>	Valve Stem	1	
18	<u>102311802</u>	Asm, Tire, 6-Ply Dot K368 White (includes items 19 through 21)	2	
19	<u>1014771</u>	Wheel Rim, White	1	
20	<u>102364002</u>	Tire, Unmounted - 215/60-8 6-Ply	1	
21	<u>7310</u>	Valve Stem	1	

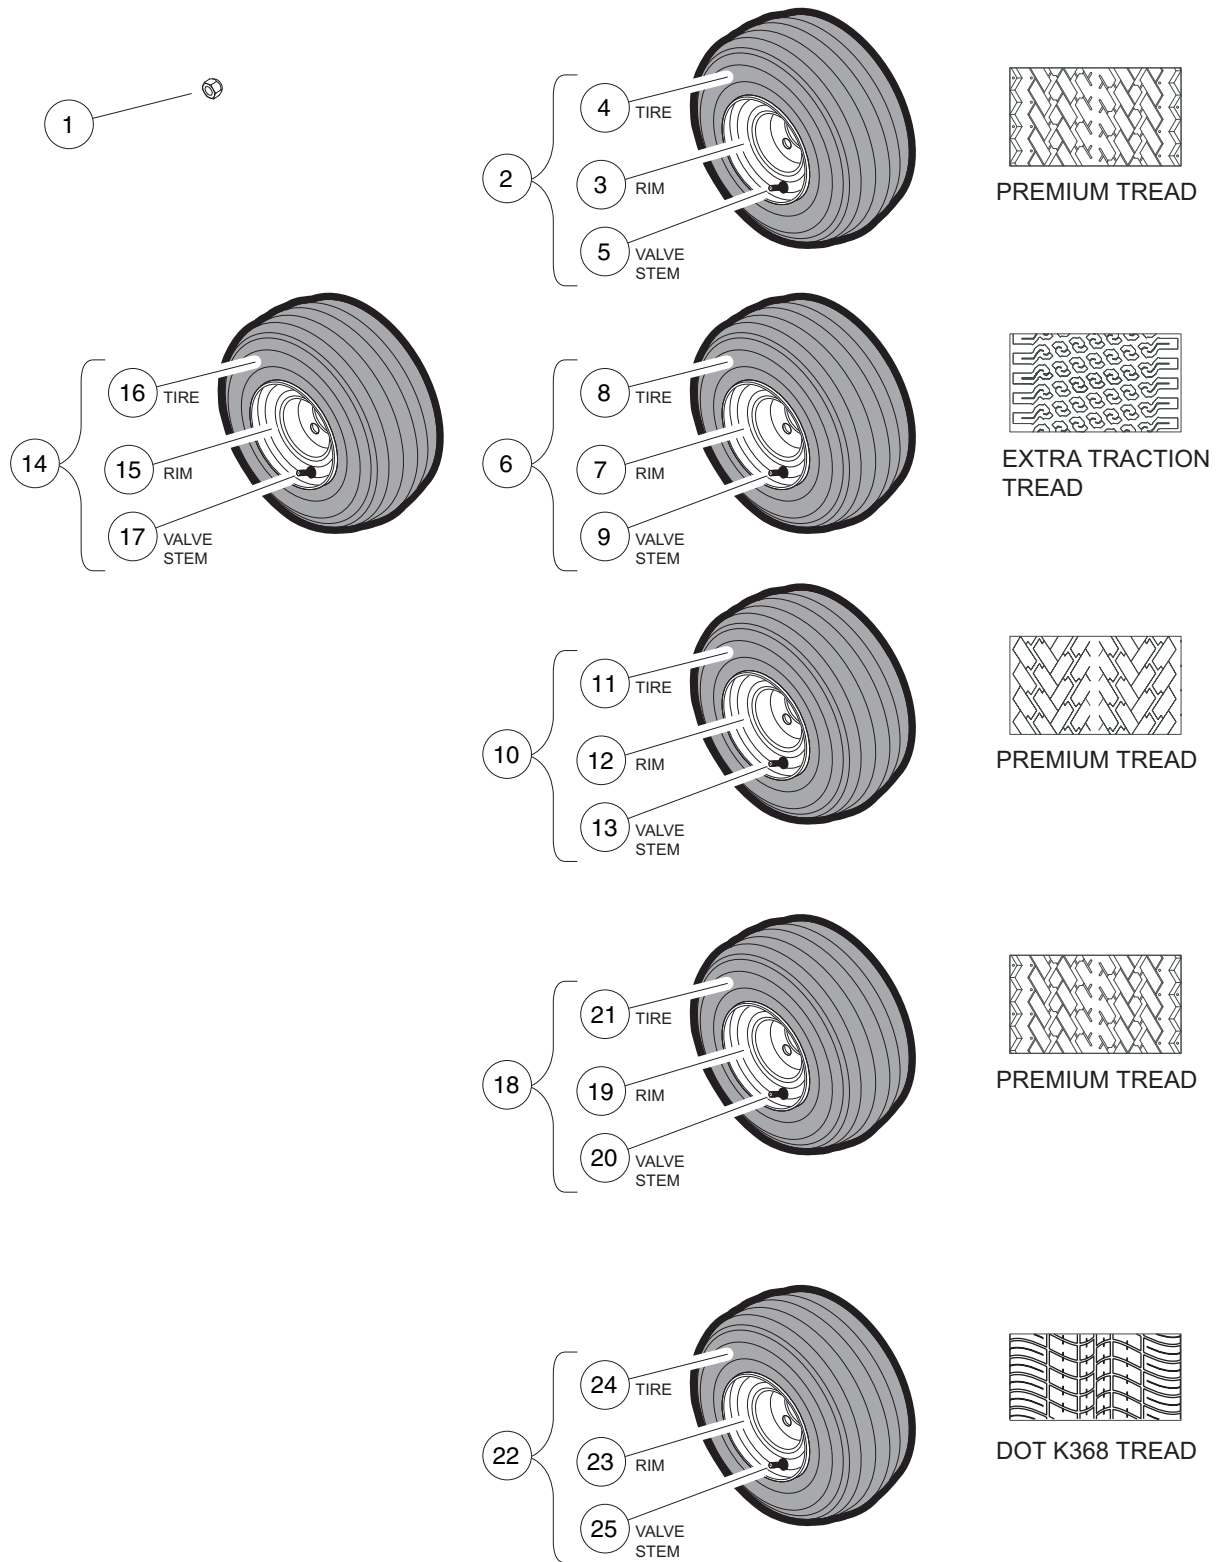

WHEELS AND TIRES, FRONT (BEIGE RIMS)








ITEM	PART NO.	DESCRIPTION	QTY	2	G	E
		1 2 3 4				
1	<u>1010984</u>	.500-20 Unf Lug Nut	8			
2	<u>101570506</u>	Tire/Wheel Asm, Beige, Premium Tread, 6-ply (includes items 3 through 5)	2			
3	<u>1015707</u>	Wheel Rim, Beige	1			
4	<u>101737002</u>	Tire, Unmounted	1			
5	<u>7310</u>	Valve Stem	1			
6	<u>101570507</u>	Tire/Wheel Asm, Beige, Xtrac Tread, 6-ply (includes items 7 through 9)	2			
7	<u>1015707</u>	Wheel Rim, Beige	1			
8	N/A	Tire, Unmounted Xtrac 18 x 8.50-8	1			
9	<u>7310</u>	Valve Stem	1			
10	<u>101570509</u>	Tire/Wheel Asm, Beige, Premium Tread, 6.5 (includes items 11 through 13)	2			
11	<u>101884901</u>	Tire, Unmounted, Power Rib 18 x 6.50-8	1			
12	<u>101918401</u>	Wheel Rim, Beige	1			
13	<u>7310</u>	Valve Stem	1			
14	<u>101570515</u>	Tire/Wheel Asm, Beige, Kenda Xtrac Tread, 6-ply (includes items 15 through 17)	2			
15	<u>101918401</u>	Wheel Rim, Beige	1			
16	<u>7310</u>	Valve Stem	1			
17	N/A	Tire, Extra Traction	1			
18	<u>101570516</u>	Tire/Wheel Asm, Beige, Kenda Premium Tread, 6-ply (includes items 19 through 21)	2			
19	<u>101918401</u>	Wheel Rim, Beige	1			
20	<u>7310</u>	Valve Stem	1			
21	N/A	Tire, Premium Tread	1			
22	<u>102311803</u>	Asm, Tire, 6-Ply Dot K368 Beige (includes items 23 through 25)	2			
23	<u>1015707</u>	Wheel Rim, Beige	1			
24	<u>102364002</u>	Tire, Unmounted - 215/60-8 6-Ply	1			
25	<u>7310</u>	Valve Stem	1			

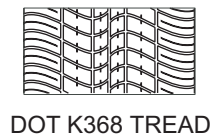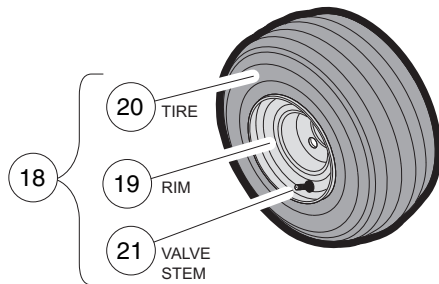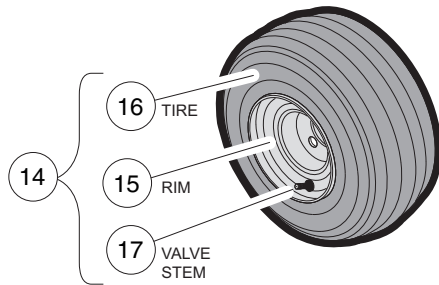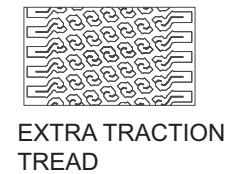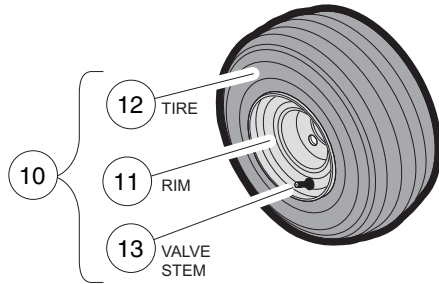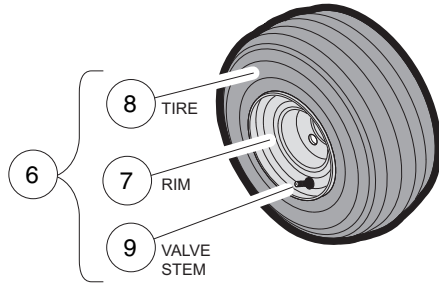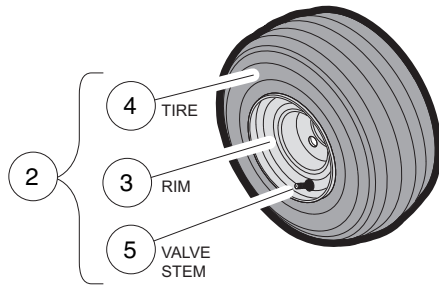

000269-010

WHEELS AND TIRES, REAR (WHITE RIMS)

ITEM	PART NO.	DESCRIPTION	QTY	2
		1 2 3 4		G
1	<u>1010984</u>	.500-20 Unf Lug Nut	8	E
2	<u>101651406</u>	Tire/Wheel Asm, White, Premium Tread, 6-Ply (includes items 3 through 5)	2	
3	<u>1014771</u>	Wheel Rim, White	1	
4	<u>101737002</u>	Tire, Unmounted	1	
5	<u>7310</u>	Valve Stem	1	
6	<u>101651407</u>	Tire/Wheel Asm, White, Extra-Traction, 6-Ply (includes items 7 through 9)	2	
7	<u>1014771</u>	Wheel Rim, White	1	
8	N/A	Tire, Unmounted Xtrac 18 x 8.50-8	1	
9	<u>7310</u>	Valve Stem	1	
10	<u>101651415</u>	Tire/Wheel Asm, White, Kenda Premium Tread, 6-Ply (includes items 11 through 13)	2	
11	<u>101918401</u>	Wheel Rim, Beige	1	
12	N/A	Tire, Unmounted Kenda Extra Traction 6-Ply	1	
13	<u>7310</u>	Valve Stem	1	
14	<u>101651416</u>	Tire/Wheel Asm, White, Kenda Premium Tread, 6-Ply (includes items 15 through 17)	2	
15	<u>101918401</u>	Wheel Rim, Beige	1	
16	N/A	Tire, Unmounted Kenda Premium Tread 6-Ply	1	
17	<u>7310</u>	Valve Stem	1	
18	<u>102311802</u>	Asm, Tire, 6-Ply Dot K368 White (includes items 19 through 21)	2	
19	<u>1014771</u>	Wheel Rim, White	1	
20	<u>102364002</u>	Tire, Unmounted - 215/60-8 6-Ply	1	
21	<u>7310</u>	Valve Stem	1	

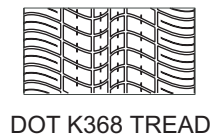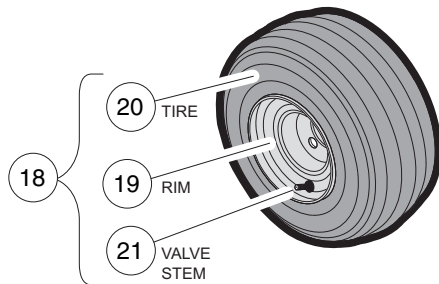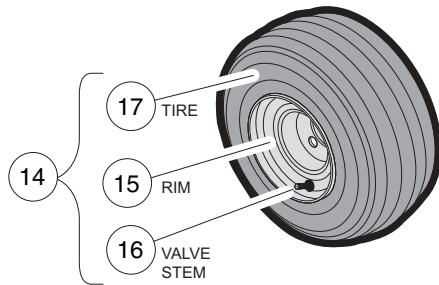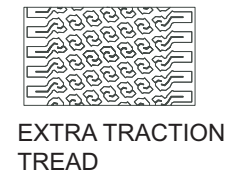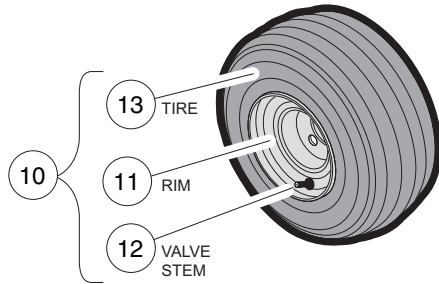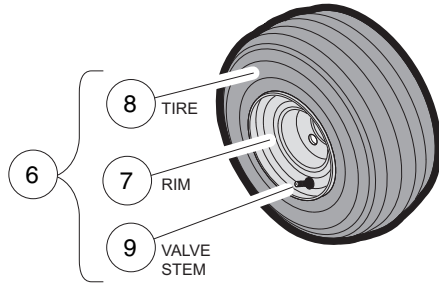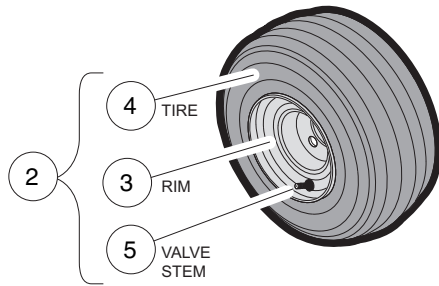

000269-011

WHEELS AND TIRES, REAR (BEIGE RIMS)

ITEM	PART NO.	DESCRIPTION	QTY	2 G E
		1 2 3 4		
1	<u>1010984</u>	.500-20 Unf Lug Nut	8	
2	<u>101570506</u>	Tire/Wheel Asm, Beige, Premium Tread, 6-ply (includes items 3 through 5)	2	
3	<u>1015707</u>	Wheel Rim, Beige	1	
4	<u>101737002</u>	Tire, Unmounted	1	
5	<u>7310</u>	Valve Stem	1	
6	<u>101570507</u>	Tire/Wheel Asm, Beige, Xtrac Tread, 6-ply (includes items 7 through 9)	2	
7	<u>1015707</u>	Wheel Rim, Beige	1	
8	<u>N/A</u>	Tire, Unmounted Xtrac 18 x 8.50-8	1	
9	<u>7310</u>	Valve Stem	1	
10	<u>101570515</u>	Tire/Wheel Asm, Beige, Kenda Xtrac Tread, 6-ply (includes items 11 through 13)	2	
11	<u>101918401</u>	Wheel Rim, Beige	1	
12	<u>7310</u>	Valve Stem	1	
13	<u>N/A</u>	Tire, Extra Traction	1	
14	<u>101570516</u>	Tire/Wheel Asm, Beige, Kenda Premium Tread, 6-ply (includes items 15 through 17)	2	
15	<u>101918401</u>	Wheel Rim, Beige	1	
16	<u>7310</u>	Valve Stem	1	
17	<u>N/A</u>	Tire, Premium Tread	1	
18	<u>102311803</u>	Asm, Tire, 6-Ply Dot K368 Beige (includes items 19 through 21)	2	
19	<u>1015707</u>	Wheel Rim, Beige	1	
20	<u>102364002</u>	Tire, Unmounted - 215/60-8 6-Ply	1	
21	<u>7310</u>	Valve Stem	1	

2

G

E

DECALS

3

G

E



WARNING

ROLLOVER OR FALLING OFF MAY CAUSE DEATH.

- Before using vehicle, read operating instructions.
- Remain seated and hold on to seat handle while moving.
- Do not start vehicle until all occupants are seated.
- Two (2) persons per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not leave children unattended on vehicle.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Never stand in front of or behind vehicle.

CCI 101960601

OPERATING INSTRUCTIONS

- Read owner's manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.

TO OPERATE


- Turn wheels to desired direction and ensure path is clear.
- Turn key to ON position.
- While stopped, place shift lever in desired position:
F – Forward N – Neutral R – Reverse (Buzzer will sound)
- Park brake will release and vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and press brake pedal.

BEFORE LEAVING

- Press park brake pedal until it locks and holds vehicle.
- Place Forward/Reverse switch in NEUTRAL position.
- Turn key OFF and remove key when not in use.

CCI 10259201

OFF ON

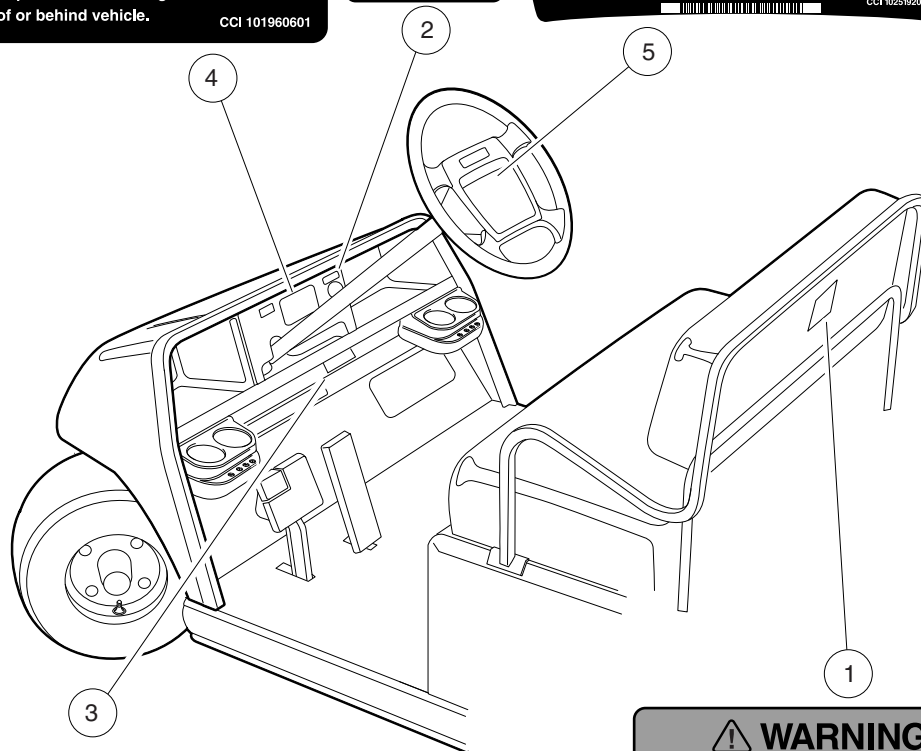

IMPORTANT NOTICE

VEHICLE EQUIPPED TO LIMIT DOWNHILL SPEED

- Maximum vehicle speed is limited during downhill operation with accelerator pedal depressed.
- Vehicle will brake gently when accelerator pedal is released.
- System is activated only when tow switch is in the "RUN" position.
- When towing vehicle, tow switch must be in the "TOW" position.

CCI 101959901



WARNING

FALLING OFF COULD RESULT IN SEVERE INJURY OR DEATH

- Remain seated with entire body inside vehicle and hold on to seat handle or handrail at all times.
- Two (2) persons per bench seat maximum.
- One (1) person per bucket seat maximum.
- Do not leave children unattended on vehicle at anytime.
- Never stand in front of or behind vehicle.

CCI 101705701

000642-001

DECALS – ELECTRIC LIMO

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>101705701</u>	Decal, Warning	1	
2	<u>101825101</u>	Decal, Off/On	1	
3	<u>101959901</u>	Decal, Motor Braking, Regen li	1	
4	<u>101960601</u>	Decal, Dash Warning	1	
5	<u>102519201</u>	Decal, Operating Instr, Gas	1	

 **WARNING**

TOW




RUN

Place Tow/Run switch in TOW position before:

- Disconnecting or connecting batteries
- Towing
- Extended storage
- Servicing

FAILURE TO HEED THIS WARNING COULD RESULT IN A BATTERY EXPLOSION OR SEVERE PERSONAL INJURY.

CCI 101908601

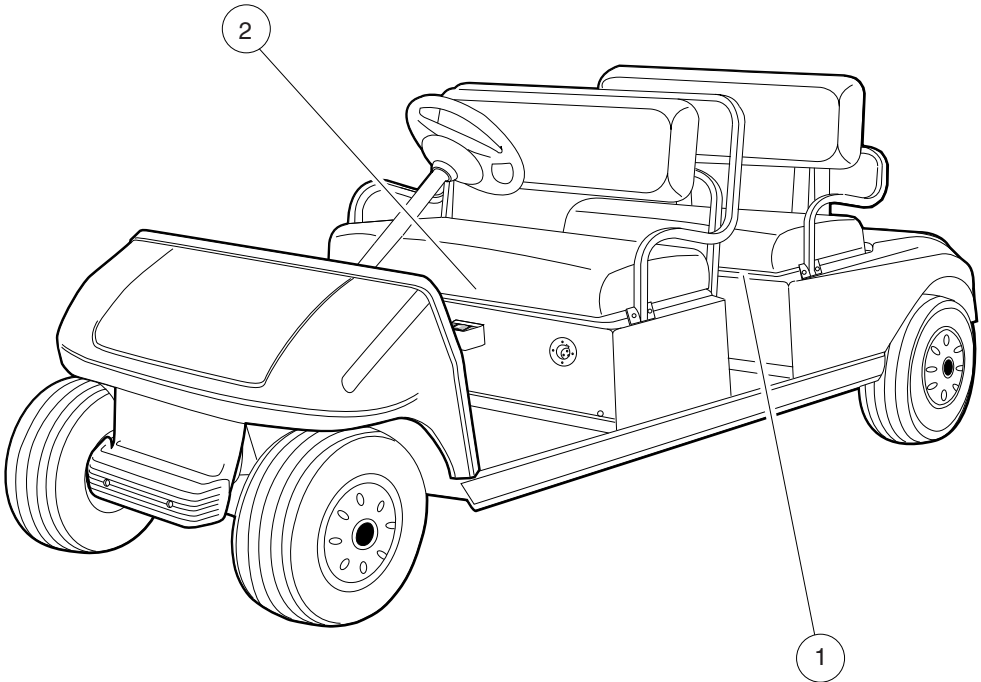

 **DANGER / POISON**



EXPLOSIVE
GASES CAN CAUSE
BLINDNESS OR INJURY



SHIELD
EYES



NO
• SPARKS
• FLAMES
• SMOKING



SULFURIC
ACID
CAN CAUSE
BLINDNESS OR
SEVERE BURNS



FLUSH EYES
IMMEDIATELY
WITH WATER

GET
MEDICAL
HELP
FAST

KEEP OUT OF THE REACH OF CHILDREN – DO NOT TIP – KEEP VENT CAPS TIGHT AND LEVEL

000643-001

DECALS – ELECTRIC LIMO, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
1	<u>1013677</u>	1 2 3 4 Decal, Battery Danger	1	
2	<u>101908601</u>	Decal, Tow/Run Switch Warning	1	



WARNING

ROLLOVER OR FALLING OFF MAY CAUSE DEATH.

- Before using vehicle, read operating instructions.
- Remain seated and hold on to seat handle while moving.
- Do not start vehicle until all occupants are seated.
- Two (2) persons per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not leave children unattended on vehicle.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Never stand in front of or behind vehicle.

CCI 101960601

OFF | ON

OPERATING INSTRUCTIONS

- Read owner's manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.


TO OPERATE

- Turn wheels to desired direction and ensure path is clear.
- Turn key to ON position.
- While stopped, place shift lever in desired position:
F—Forward N—Neutral R—Reverse (Buzzer will sound)
- Park brake will release and vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and press brake pedal.

BEFORE LEAVING

- Press park brake pedal until it locks and holds vehicle.
- Place Forward/Reverse switch in NEUTRAL position.
- Turn key OFF and remove key when not in use.

CCI 102519201

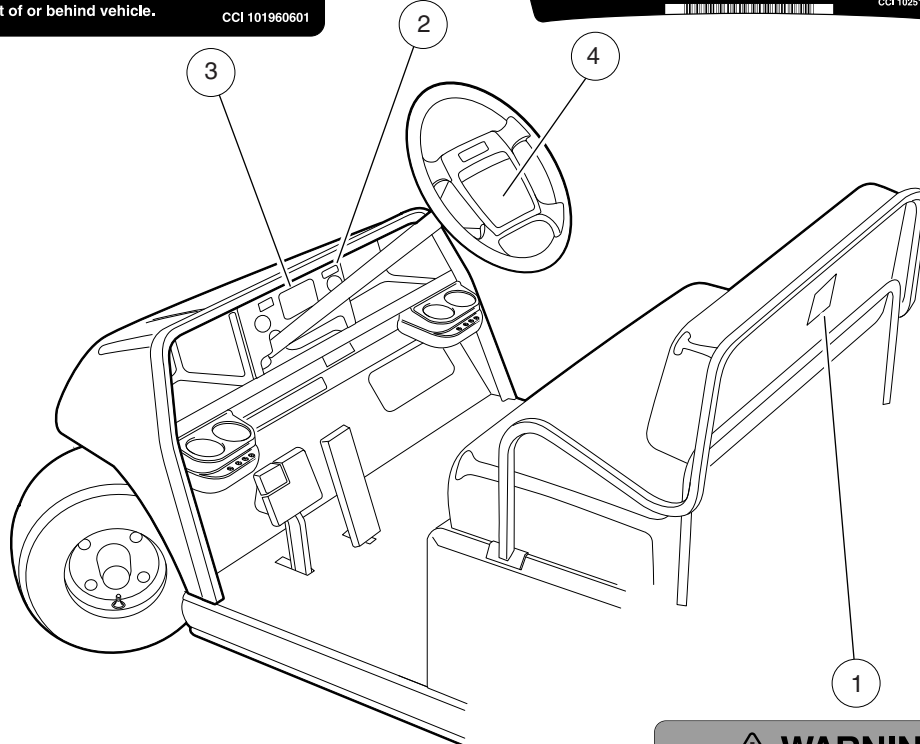

WARNING

FALLING OFF COULD RESULT IN SEVERE INJURY OR DEATH



- Remain seated with entire body inside vehicle and hold on to seat handle or handrail at all times.
- Two (2) persons per bench seat maximum.
- One (1) person per bucket seat maximum.
- Do not leave children unattended on vehicle at anytime.
- Never stand in front of or behind vehicle.

CCI 101705701

000644-001

DECALS – GASOLINE LIMO

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>101705701</u>	Decal, Warning	1	
2	<u>101825101</u>	Decal, Off/On	1	
3	<u>101960601</u>	Decal, Dash Warning	1	
4	<u>102519201</u>	Decal, Operating Instr, Gas	1	

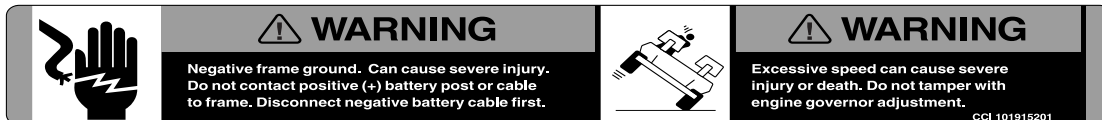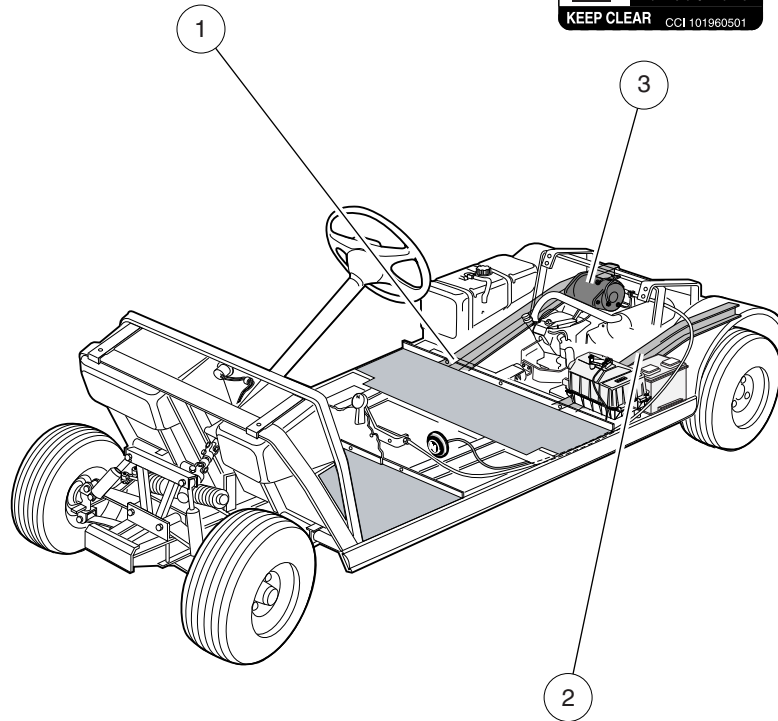

000645-001

DECALS – GASOLINE LIMO, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
1	<u>101547601</u>	1 2 3 4 Decal, Gasoline Explosion/Fire Warning	1	
2	<u>101915201</u>	Decal, Frame Ground and Governor Warning	1	
3	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	2	

3

G


E

BRAKES, PEDAL, AND CABLE ASSEMBLIES

4

G

E

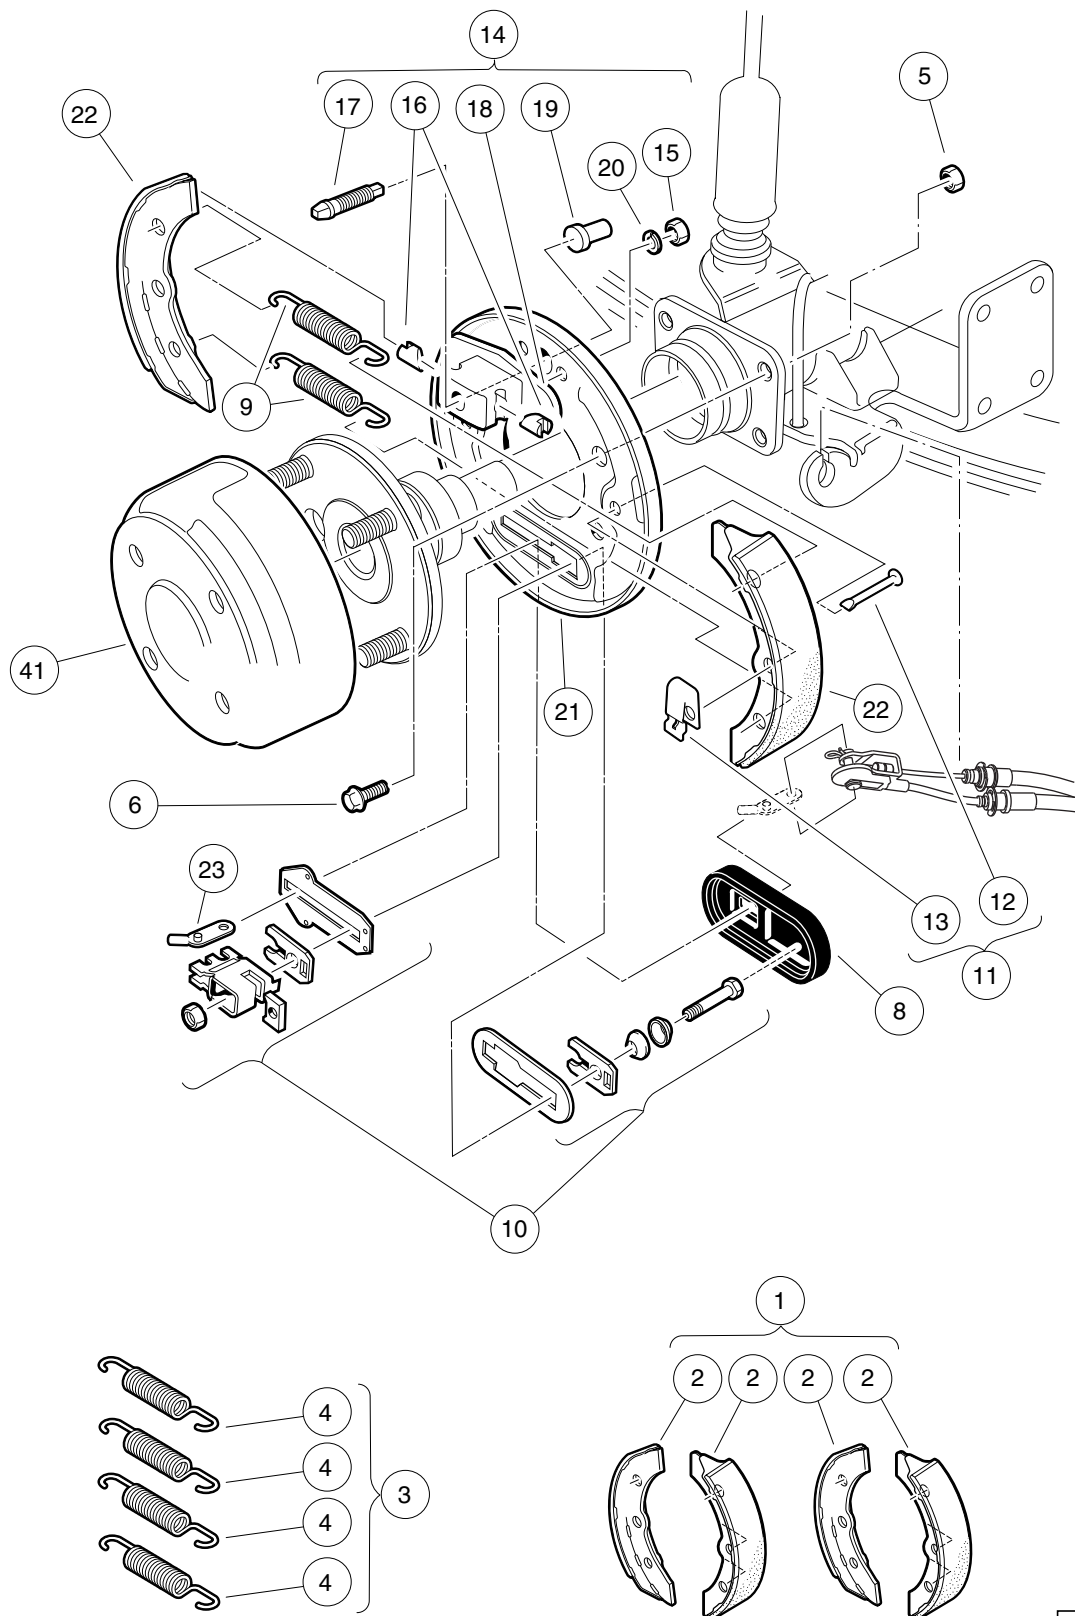


000293-002

REAR BRAKE ASSEMBLY, MANUALLY-ADJUSTED – VEHICLES WITH 4-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101146302</u>	Kit, Non-Asbestos Brake Shoe (includes item 2)	1
2	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	4
3	<u>1011464</u>	Package, Brake Spring (includes item 4)	1
4	1011314	Brake Spring	4
5	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	8
6	<u>1014153</u>	Bolt, Brake Cluster Mounting	8
7	<u>1016557</u>	Cluster, Brake, Driver-Side (includes items 8 through 23)	1
8	<u>1010850</u>	Dust Cover	1
9	1011314	Brake Spring	2
10	<u>1011465</u>	Kit, Brake Actuator	1
11	<u>1011466</u>	Kit, Shoe Retainer (includes items 12 and 13)	1
12	1010953	Pin	2
13	1011301	Shoe Clamp Spring	2
14	<u>1011467</u>	Kit, Anchor Body (includes items 15 through 20)	1
15	<u>1011114</u>	Nut, M6-1.00 Hex	2
16	1011298	Anchor Piston	2
17	N/A	Adjustment Bolt	1
18	N/A	Anchor Body Component	1
19	<u>1011303</u>	Adjustment Bolt Cap	1
20	<u>451</u>	Lockwasher, 1/4 Split	2
21	1011494	Backing Plate, Left-Hand	1
22	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2
23	N/A	Arm, Brake Lever	1
24	<u>1016573</u>	Cluster, Brake, Passenger-Side (includes items 25 through 40)	1
25	<u>1010850</u>	Dust Cover	1
26	<u>1011154</u>	Backing Plate, Right-Hand	1
27	1011314	Brake Spring	2
28	<u>1011465</u>	Kit, Brake Actuator	1
29	<u>1011466</u>	Kit, Shoe Retainer (includes items 30 and 31)	1
30	1010953	Pin	2
31	1011301	Shoe Clamp Spring	2
32	<u>1011467</u>	Kit, Anchor Body (includes items 33 through 38)	1
33	<u>1011114</u>	Nut, M6-1.00 Hex	2
34	1011298	Anchor Piston	2
35	N/A	Adjustment Bolt	1
36	N/A	Anchor Body Component	1
37	<u>1011303</u>	Adjustment Bolt Cap	1
38	<u>451</u>	Lockwasher, 1/4 Split	2
39	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2
40	N/A	Arm, Brake Lever	1
41	<u>101791101</u>	Drum without Center Hole, Brake	2
		Note: Passenger-side brake cluster not shown. Components have a similar appearance to driver-side brake cluster components.	


4
G
E

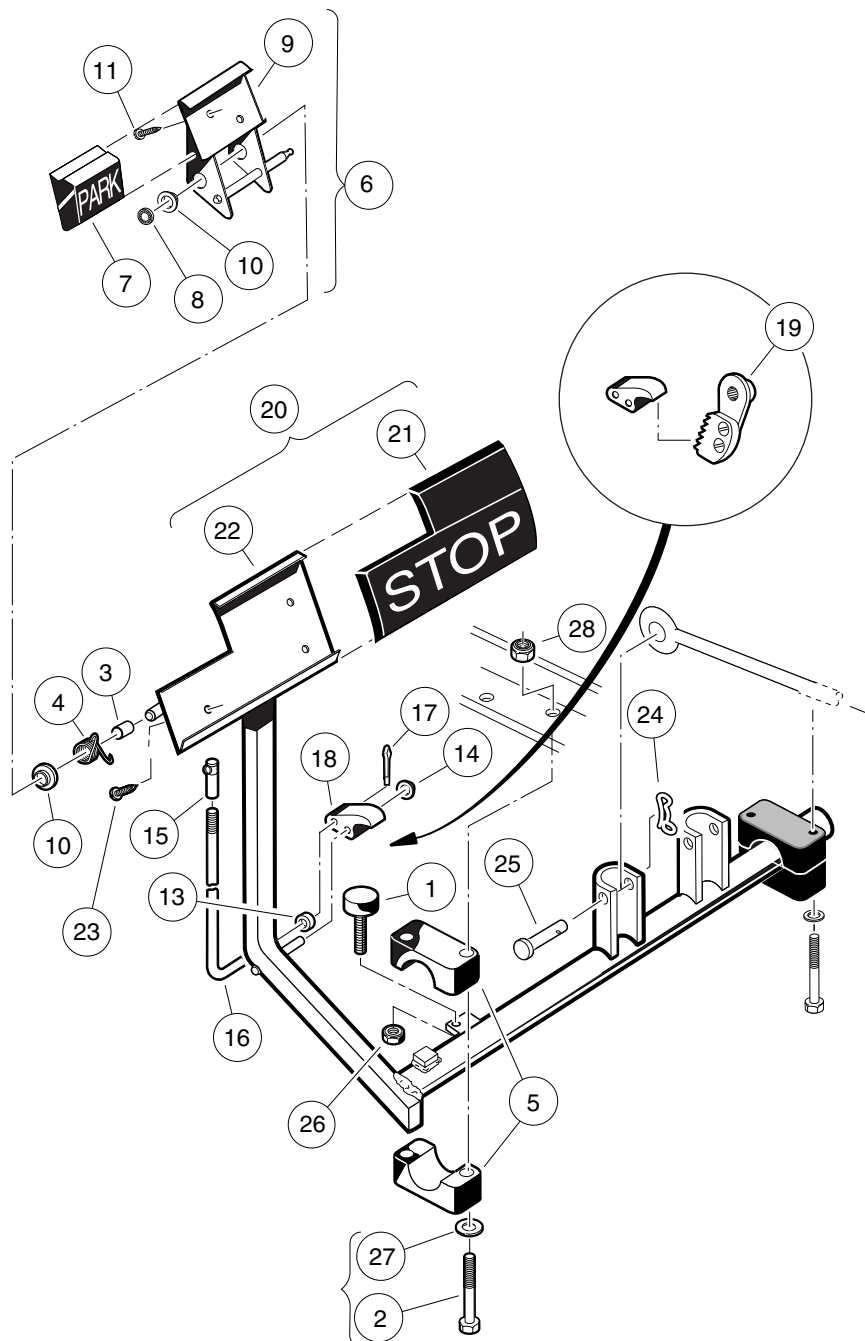

000187-003

BRAKE PEDAL ASSEMBLY – VEHICLES WITH FOUR-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>1010878</u>	Bumper, Rubber	1	E
2	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	4	
3	<u>1010927</u>	Hill Brake Spacer	1	
4	<u>1010933</u>	Spring, Hill Brake Torsion	1	
5	<u>1011402</u>	Package, Brake Mounting Block	1	
6	<u>1011418</u>	Kit, Hill Brake Pedal (includes items 7 through 11)	1	
7	<u>1013870</u>	Pad, Hill Brake	1	
8	<u>1013876</u>	Pushnut, 3/8	1	
9	N/A	Hill Brake Weld Assembly	1	
10	<u>1032</u>	Bushing, Nylon	2	
11	7716	Screw, #10-16 Type AB, Sheet Metal	2	
12	<u>101187702</u>	Kit, Hill Brake Latch (includes items 13 through 19)	1	
13	<u>1010805</u>	Sleeve, Hill Brake Rod	1	
14	<u>1010877</u>	Pushnut, 3/8	1	
15	1010932	Ball Joint, 1/4-28	1	
16	N/A	Rod, Hill Brake	1	
17	<u>1017029</u>	Pin, Cotter, 7/64 x 1/2 Stainless-Steel	1	
18	N/A	Pawl, Hill Brake	1	
19	101918501	Ratchet Assembly	1	
20	<u>101878201</u>	Brake Pedal Kit (includes items 21 through 23)	1	
21	<u>1013869</u>	Pad, Brake Pedal	1	
22	N/A	Weldment, Brake Pedal 4wb Std	1	
23	7716	Screw, #10-16 Type AB, Sheet Metal	3	
24	<u>102323101</u>	Pin, Bow Tie Locking	2	
25	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	2	
26	<u>1028</u>	Nut, 1/4-20 Hex	1	
27	<u>1241</u>	Washer, 5/16 Type A Flat	4	
28	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4	

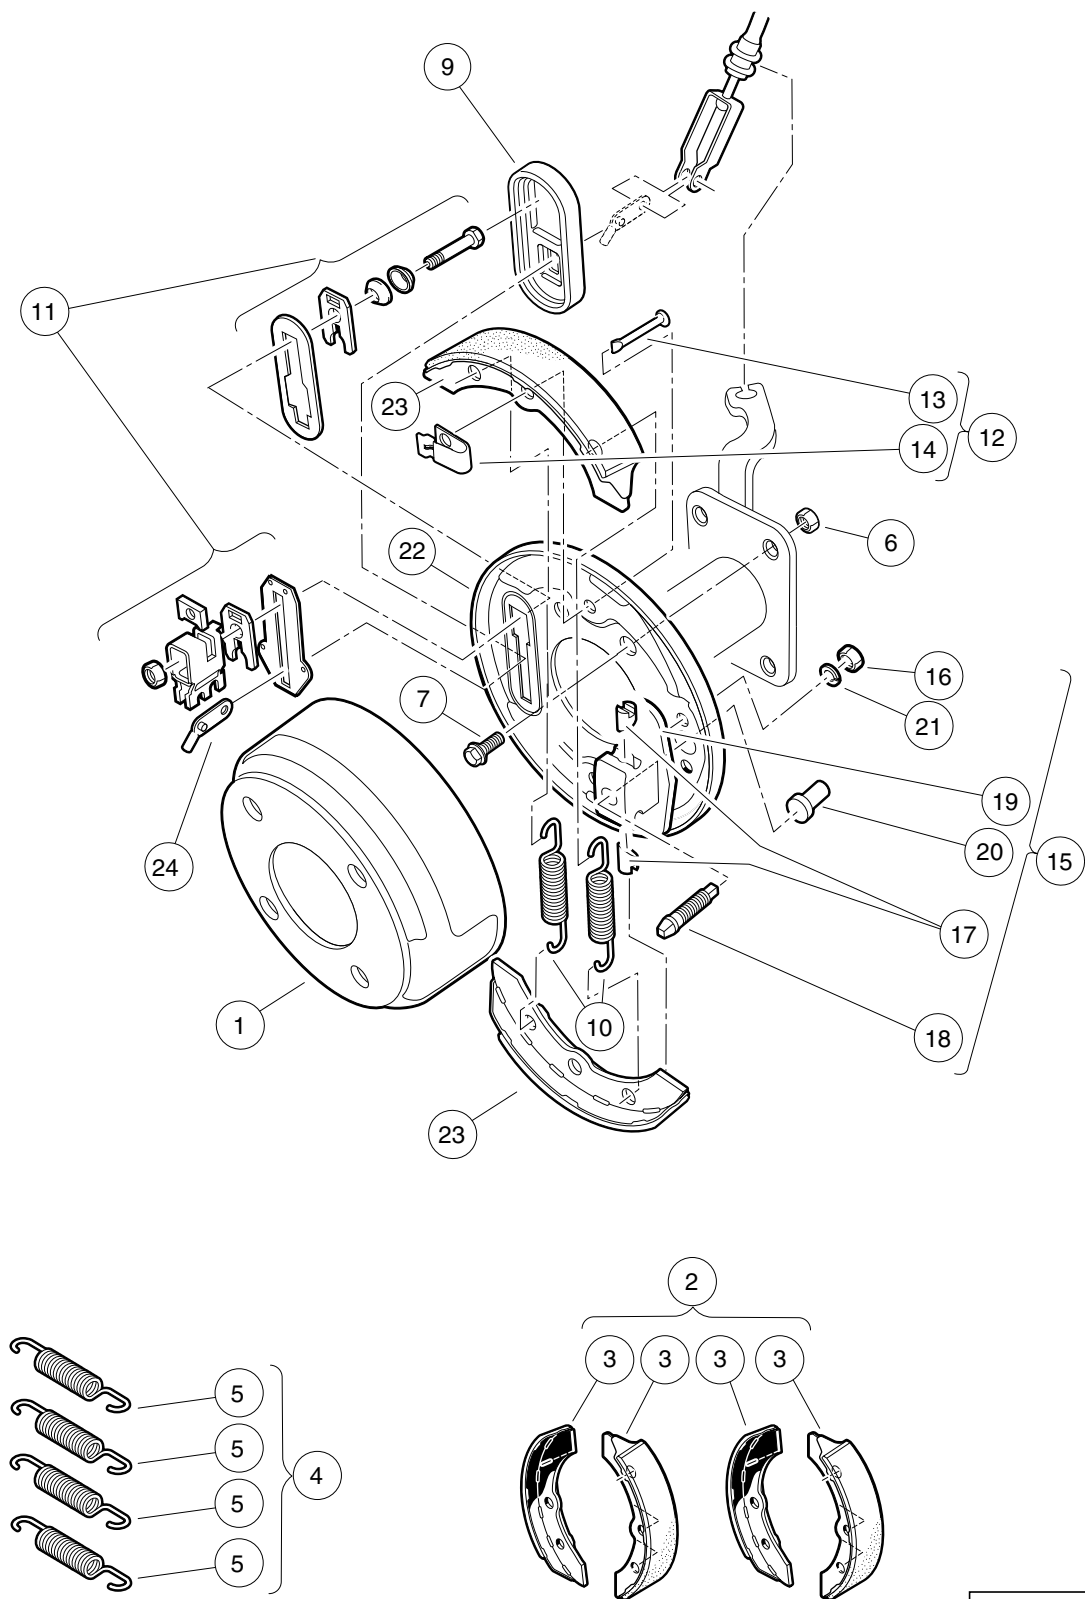

000298-001

FRONT BRAKE ASSEMBLY – VEHICLES WITH FOUR-WHEEL BRAKES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011137</u>	Drum, Brake	2
2	<u>101146302</u>	Kit, Non-Asbestos Brake Shoe (includes item 3)	1
3	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	4
4	<u>1011464</u>	Package, Brake Spring (includes item 5)	1
5	1011314	Brake Spring	4
6	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	8
7	<u>1014153</u>	Bolt, Brake Cluster Mounting	8
8	<u>1016557</u>	Cluster, Brake, Driver-Side (includes items 9 through 24)	1
9	<u>1010850</u>	Dust Cover	1
10	1011314	Brake Spring	2
11	<u>1011465</u>	Kit, Brake Actuator	1
12	<u>1011466</u>	Kit, Shoe Retainer (includes items 13 and 14)	1
13	1010953	Pin	2
14	1011301	Shoe Clamp Spring	2
15	<u>1011467</u>	Kit, Anchor Body (includes items 16 through 21)	1
16	<u>1011114</u>	Nut, M6-1.00 Hex	2
17	1011298	Anchor Piston	2
18	N/A	Adjustment Bolt	1
19	N/A	Anchor Body Component	1
20	<u>1011303</u>	Adjustment Bolt Cap	1
21	<u>451</u>	Lockwasher, 1/4 Split	2
22	1011494	Backing Plate, Left-Hand	1
23	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2
24	N/A	Arm, Brake Lever	1
25	<u>1016573</u>	Cluster, Brake, Passenger-Side (includes items 26 through 41)	1
26	<u>1010850</u>	Dust Cover	1
27	<u>1011154</u>	Backing Plate, Right-Hand	1
28	1011314	Brake Spring	2
29	<u>1011465</u>	Kit, Brake Actuator	1
30	<u>1011466</u>	Kit, Shoe Retainer (includes items 31 and 32)	1
31	1010953	Pin	2
32	1011301	Shoe Clamp Spring	2
33	<u>1011467</u>	Kit, Anchor Body (includes items 34 through 39)	1
34	<u>1011114</u>	Nut, M6-1.00 Hex	2
35	1011298	Anchor Piston	2
36	N/A	Adjustment Bolt	1
37	N/A	Anchor Body Component	1
38	<u>1011303</u>	Adjustment Bolt Cap	1
39	<u>451</u>	Lockwasher, 1/4 Split	2
40	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2
41	N/A	Arm, Brake Lever	1
		Note: Passenger-side brake cluster not shown. Components have a similar appearance to driver-side brake cluster components.	

4
G
E

4

G

E

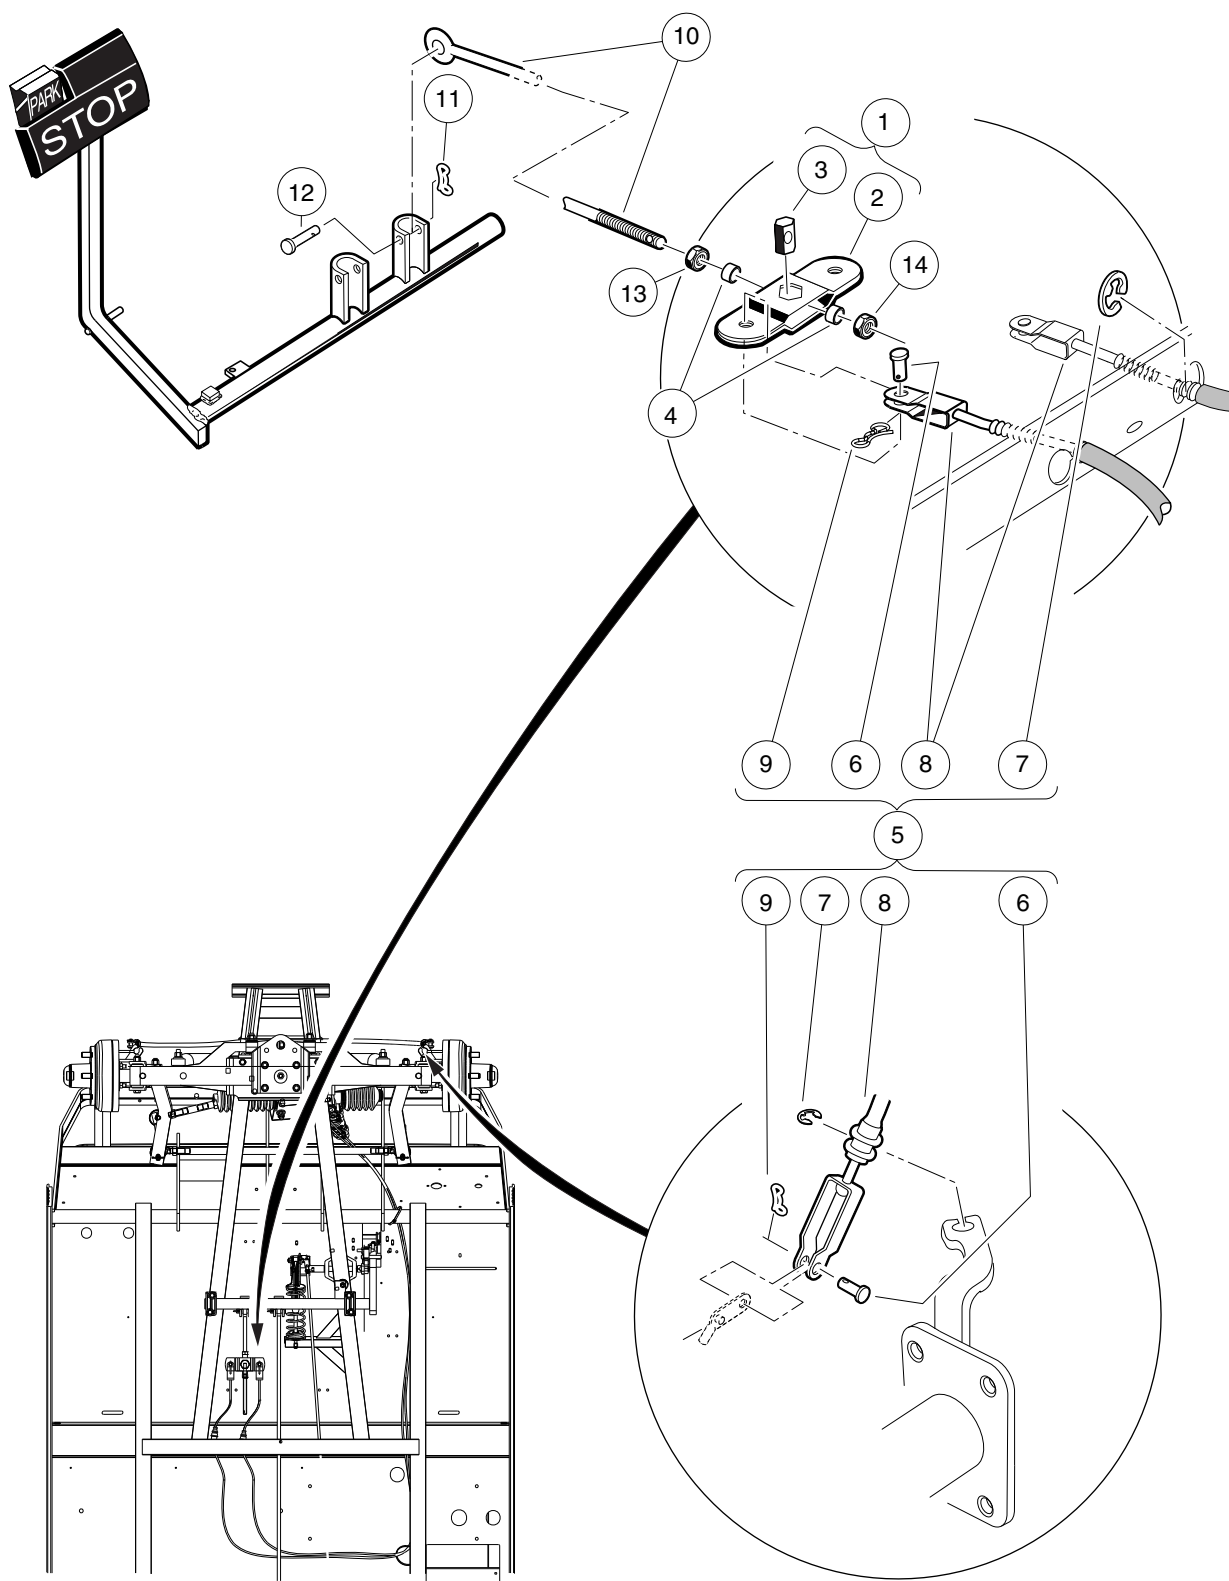

000294-001


FRONT BRAKE CABLES AND EQUALIZER – VEHICLES WITH FOUR-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1017211</u>	Kit, Equalizer and Pivot Limiter (includes items 2 and 3)	1	
2	<u>1016319</u>	Equalizer Weld Assembly	1	
3	<u>1016320</u>	Equalizer, Pivot Limiter	1	
4	<u>101865301</u>	Spacer	2	
5	<u>101874601</u>	Kit, Brake Cable (includes items 6 through 9)	1	
6	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	4	
7	<u>1011779</u>	E-Clip, 1/2	4	
8	N/A	Brake Cable	2	
9	<u>102292801</u>	Pin, Bow Tie Locking - .072	4	
10	<u>101953106</u>	Rod, Equalizer, 9.75"	1	
11	<u>102323101</u>	Pin, Bow Tie Locking	1	
12	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1	
13	<u>1242</u>	Nut, 5/16-18 Hex	1	
14	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	

4

G

E

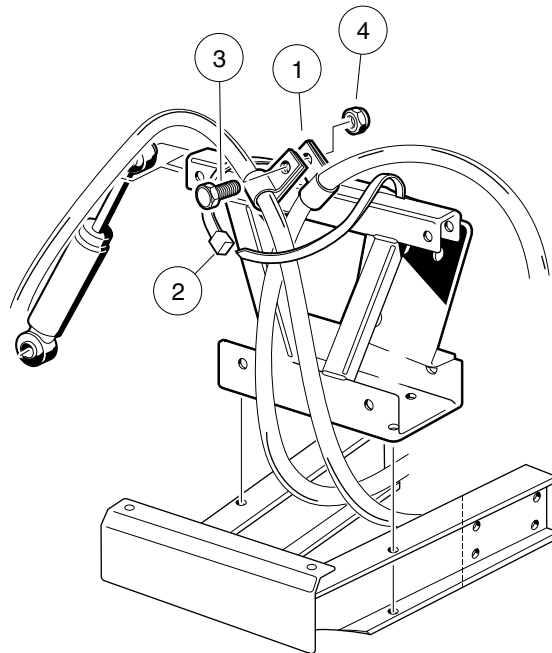

000305-001


FRONT BRAKE CABLE CLIPS AND HARDWARE – VEHICLES WITH FRONT-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>101935301</u>	Clamp, Brake Cable	2	E
2	<u>102025401</u>	Tie Wrap, Heavy Duty	1	
3	320	Screw, 3/8-16 X 1.00 Hex-Head Cap	1	
4	<u>8754</u>	Locknut, 3/8-16 Hex	1	

4

G


E

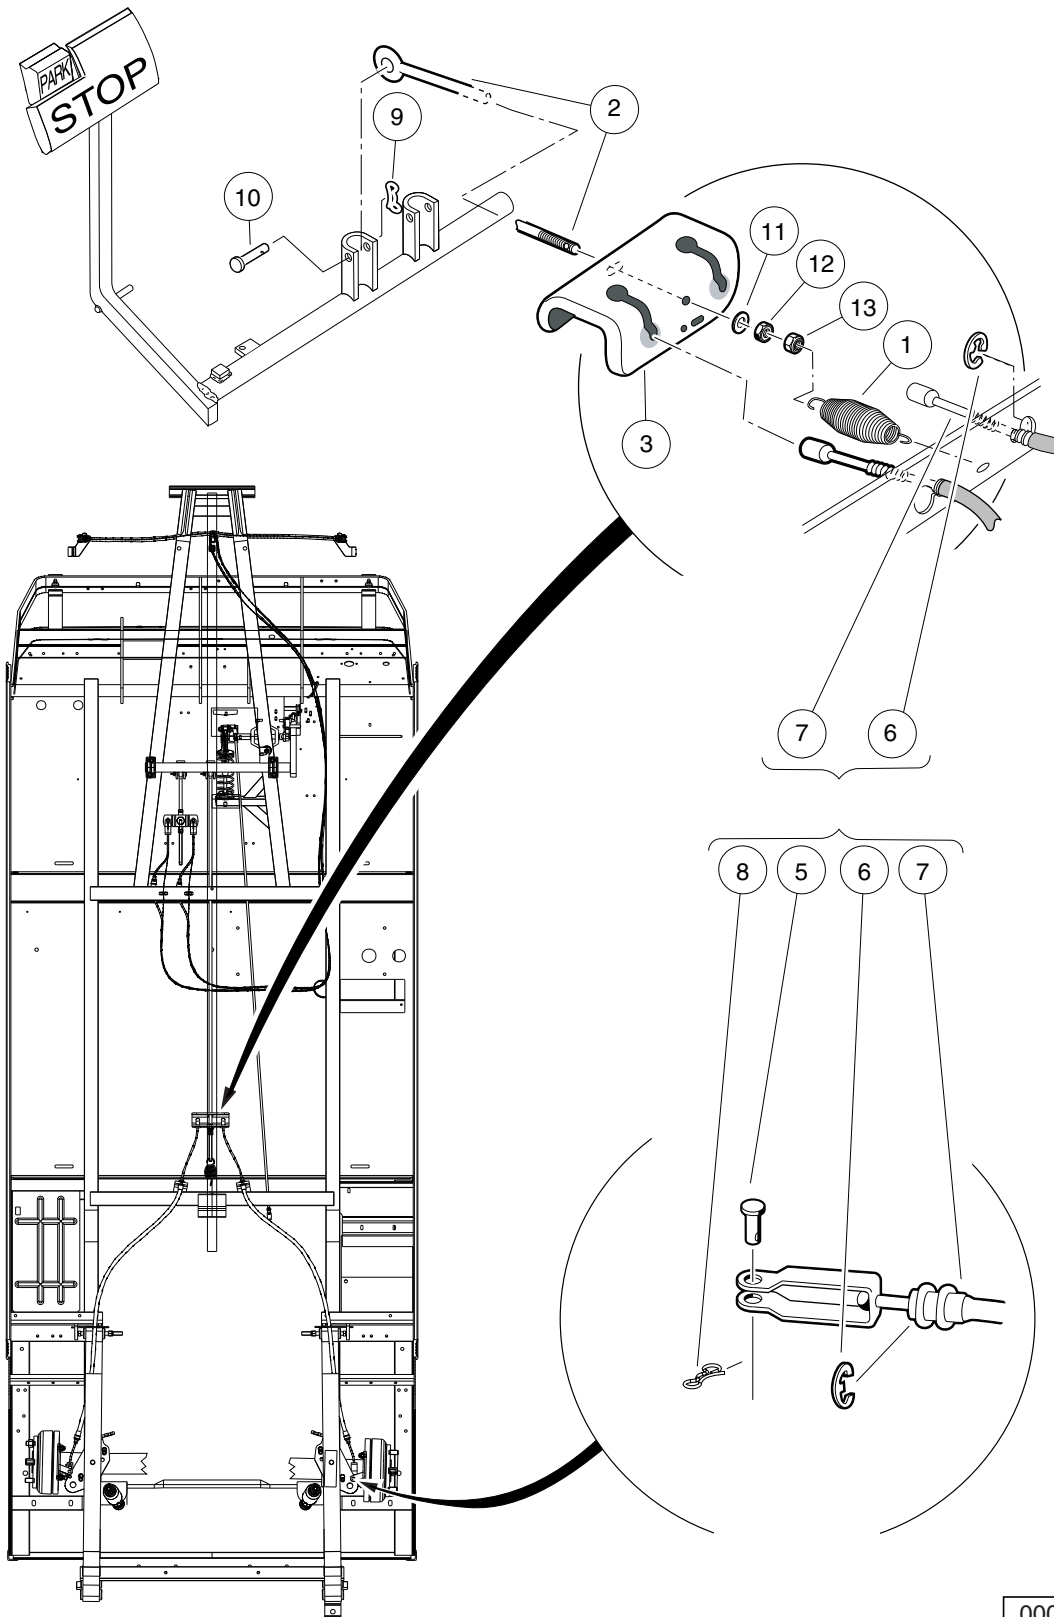

000296-004

REAR BRAKE CABLES, EQUALIZER, AND EQUALIZER ROD


ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>1013531</u>	Spring, Brake Return	1	E
2	<u>101953103</u>	Rod, Equalizer	1	
3	<u>101990801</u>	Equalizer Bracket	1	
4	<u>102166901</u>	Kit, Brake Cable Rear (includes items 5 through 8)	1	
5	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	2	
6	<u>1011779</u>	E-Clip, 1/2	4	
7	<u>102162601</u>	Cable, Brake	2	
8	<u>102292801</u>	Pin, Bow Tie Locking - .072	2	
9	<u>102323101</u>	Pin, Bow Tie Locking	1	
10	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1	
11	<u>1241</u>	Washer, 5/16 Type A Flat	1	
12	<u>1242</u>	Nut, 5/16-18 Hex	1	
13	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	

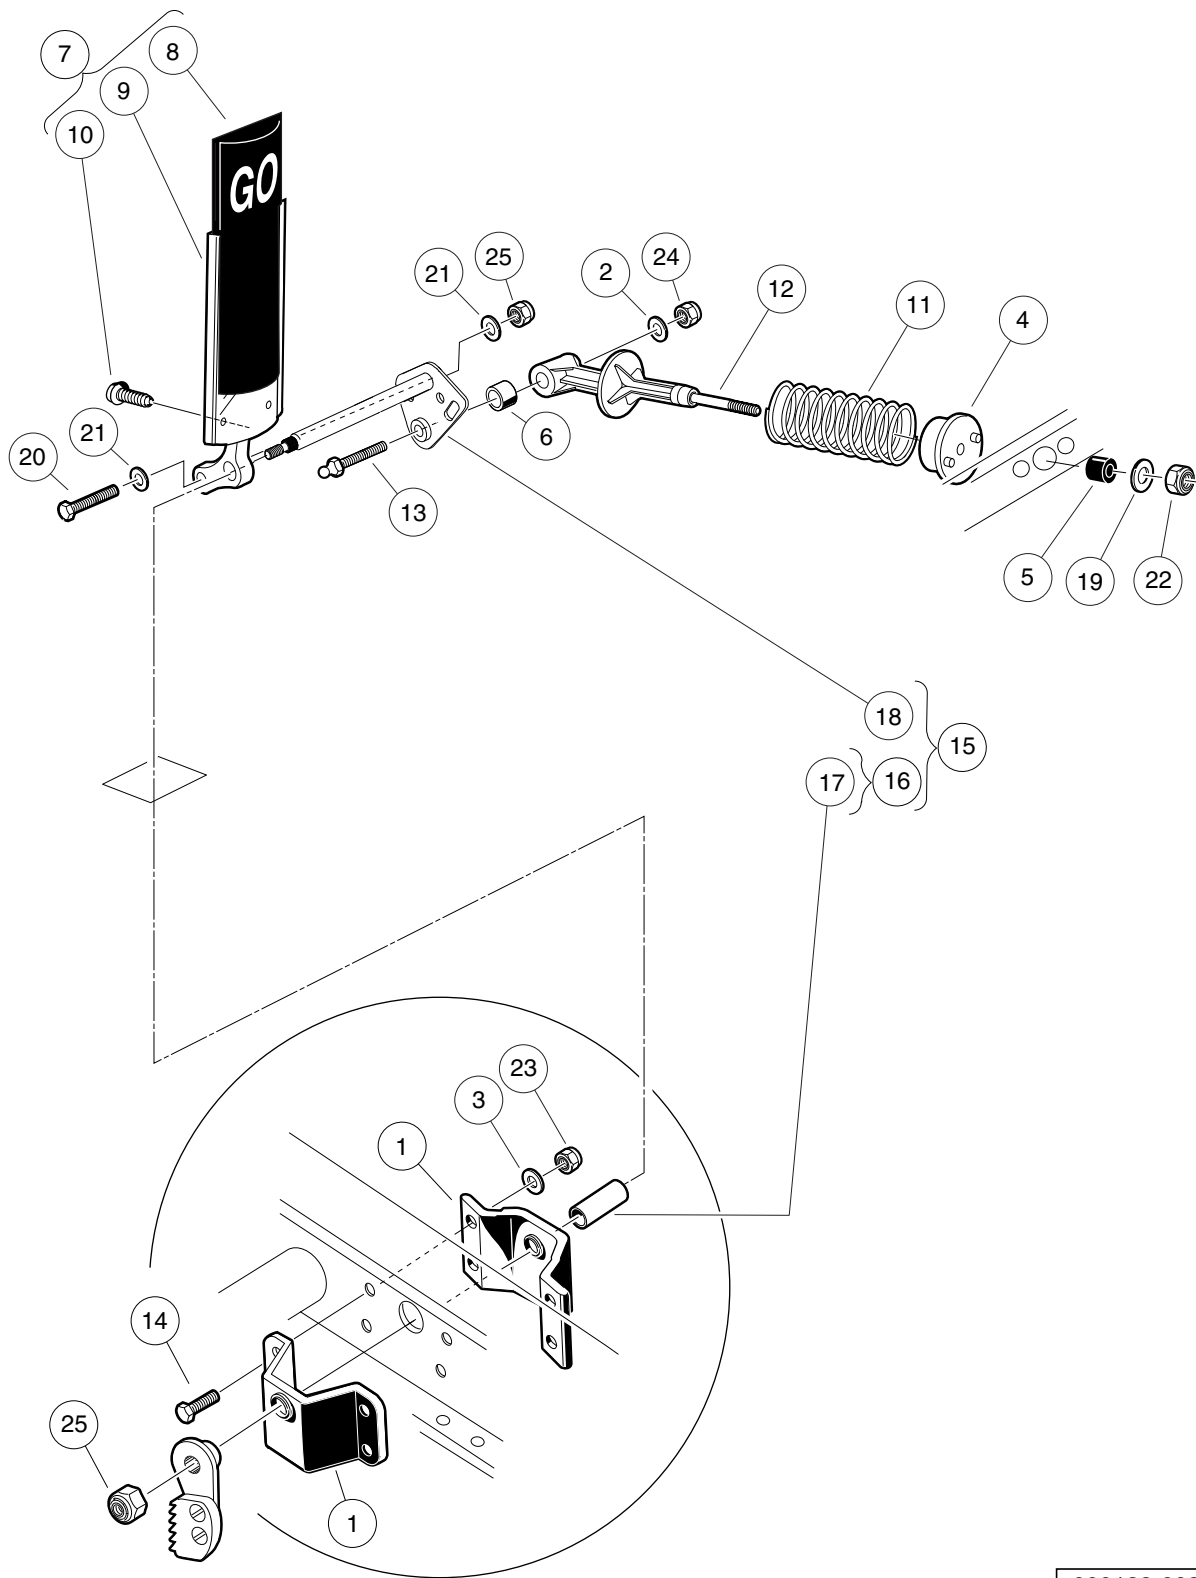

000188-003

ACCELERATOR PEDAL ASSEMBLY – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2	
2	<u>1011931</u>	Washer, 1/4 Flat	1	
3	<u>1014007</u>	Washer, 1/4 Flat	4	
4	<u>1017378</u>	Cup, Spring	1	
5	<u>1017380</u>	Bumper, Spring Return	1	
6	<u>1017424</u>	Bearing, Pivot Support	1	
7	<u>1017696</u>	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1	
8	1013871	Pad, Accelerator Pedal	1	
9	N/A	Accelerator Pedal Weldment	1	
10	7716	Screw, #10-16 Type AB, Sheet Metal	4	
11	101796201	Spring, Accelerator Return	1	
12	<u>101817401</u>	Retainer, Spring	1	
13	101818801	Stud, 1/4-28 X 1.35 Ball	1	
14	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4	
15	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 16 through 18)	1	
16	<u>1011700</u>	Spacer Assembly (includes item 17)	1	
17	101919801	Spacer, Accelerator	1	
18	N/A	Pivot Rod Weldment	1	
19	<u>1241</u>	Washer, 5/16 Type A Flat	1	
20	<u>1624</u>	Screw, 3/8-16 X 1.50 Hex-Head Cap	1	
21	<u>334</u>	Washer, 3/8 Type A Flat	2	
22	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	
23	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4	
24	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1	
25	<u>8754</u>	Locknut, 3/8-16 Hex	2	

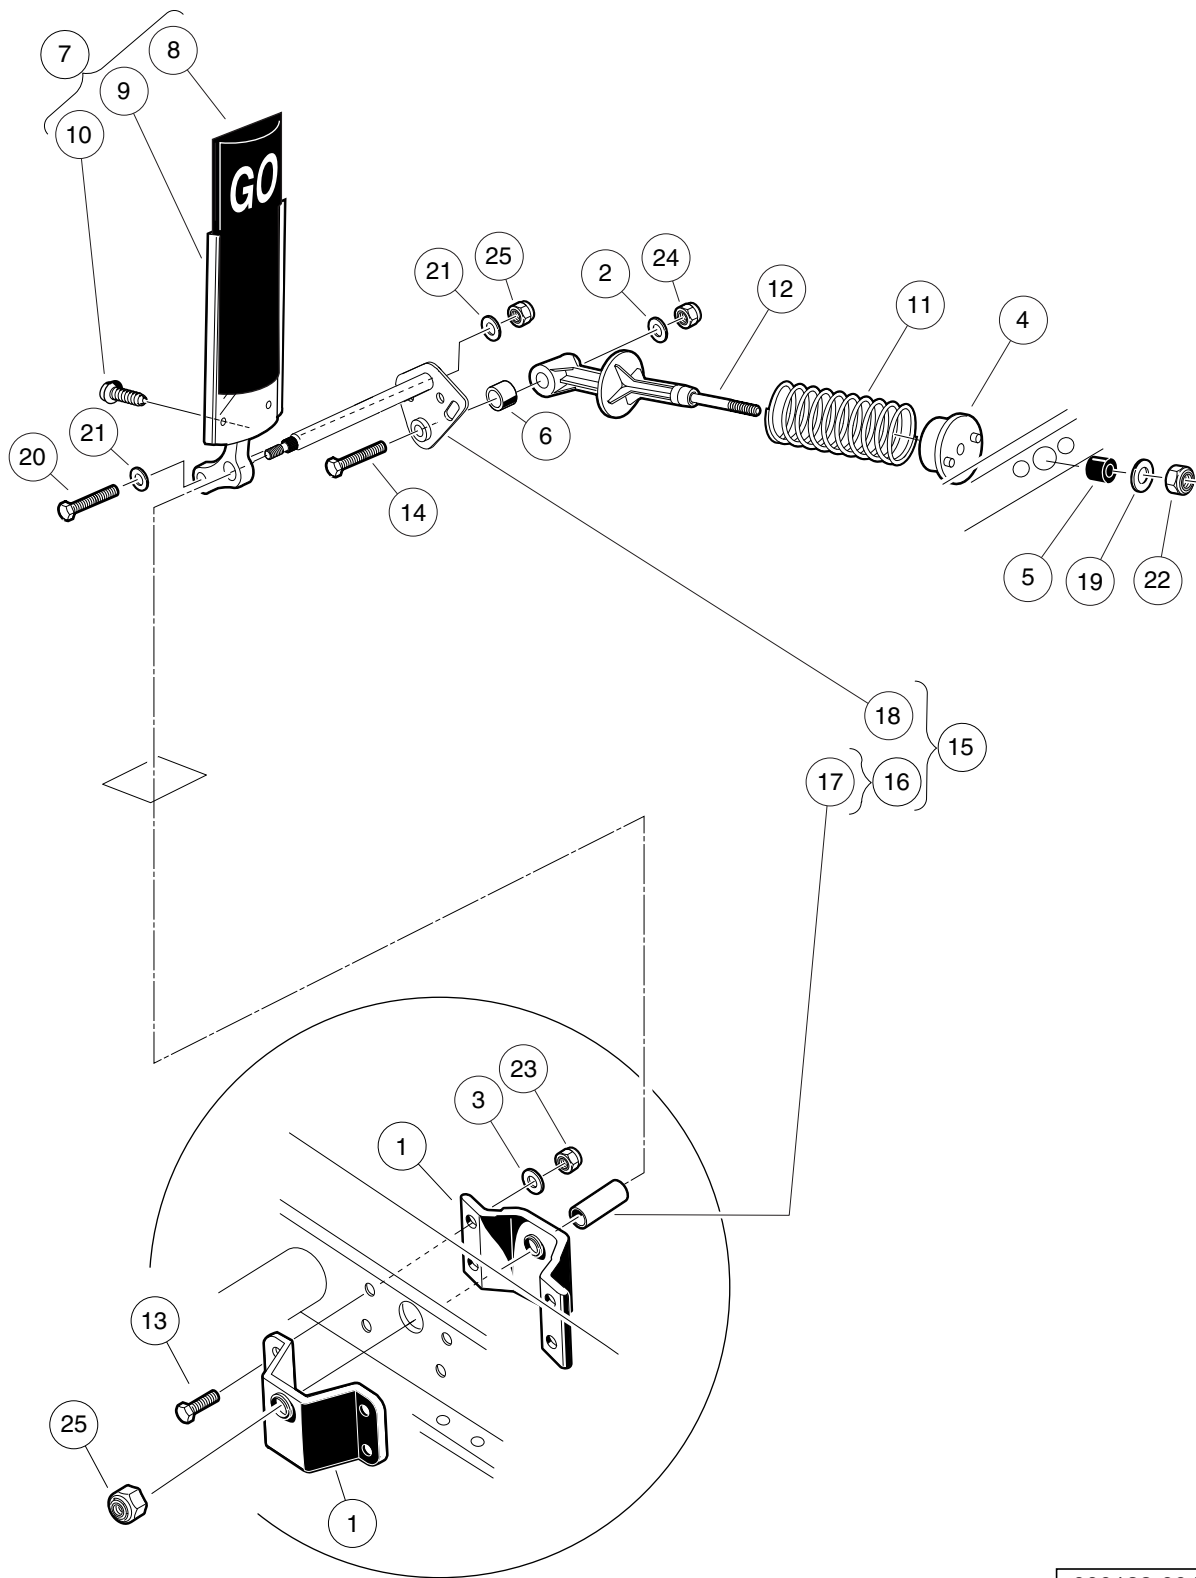

000188-004

ACCELERATOR PEDAL ASSEMBLY – ELECTRIC VEHICLES WITH MCOR


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2
2	<u>1011931</u>	Washer, 1/4 Flat	1
3	<u>1014007</u>	Washer, 1/4 Flat	4
4	<u>1017378</u>	Cup, Spring	1
5	<u>1017380</u>	Bumper, Spring Return	1
6	<u>1017424</u>	Bearing, Pivot Support	1
7	<u>1017696</u>	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1
8	1013871	Pad, Accelerator Pedal	1
9	N/A	Accelerator Pedal Weldment	1
10	7716	Screw, #10-16 Type AB, Sheet Metal	4
11	101796201	Spring, Accelerator Return	1
12	<u>101817401</u>	Retainer, Spring	1
13	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4
14	<u>101862001</u>	Screw, 1/4-20 X 1.500 Flange	1
15	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 16 through 18)	1
16	<u>1011700</u>	Spacer Assembly (includes item 17)	1
17	101919801	Spacer, Accelerator	1
18	N/A	Pivot Rod Weldment	1
19	<u>1241</u>	Washer, 5/16 Type A Flat	1
20	<u>1624</u>	Screw, 3/8-16 X 1.50 Hex-Head Cap	1
21	<u>334</u>	Washer, 3/8 Type A Flat	2
22	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1
23	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
24	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1
25	<u>8754</u>	Locknut, 3/8-16 Hex	2

4
G
E

4

G

E

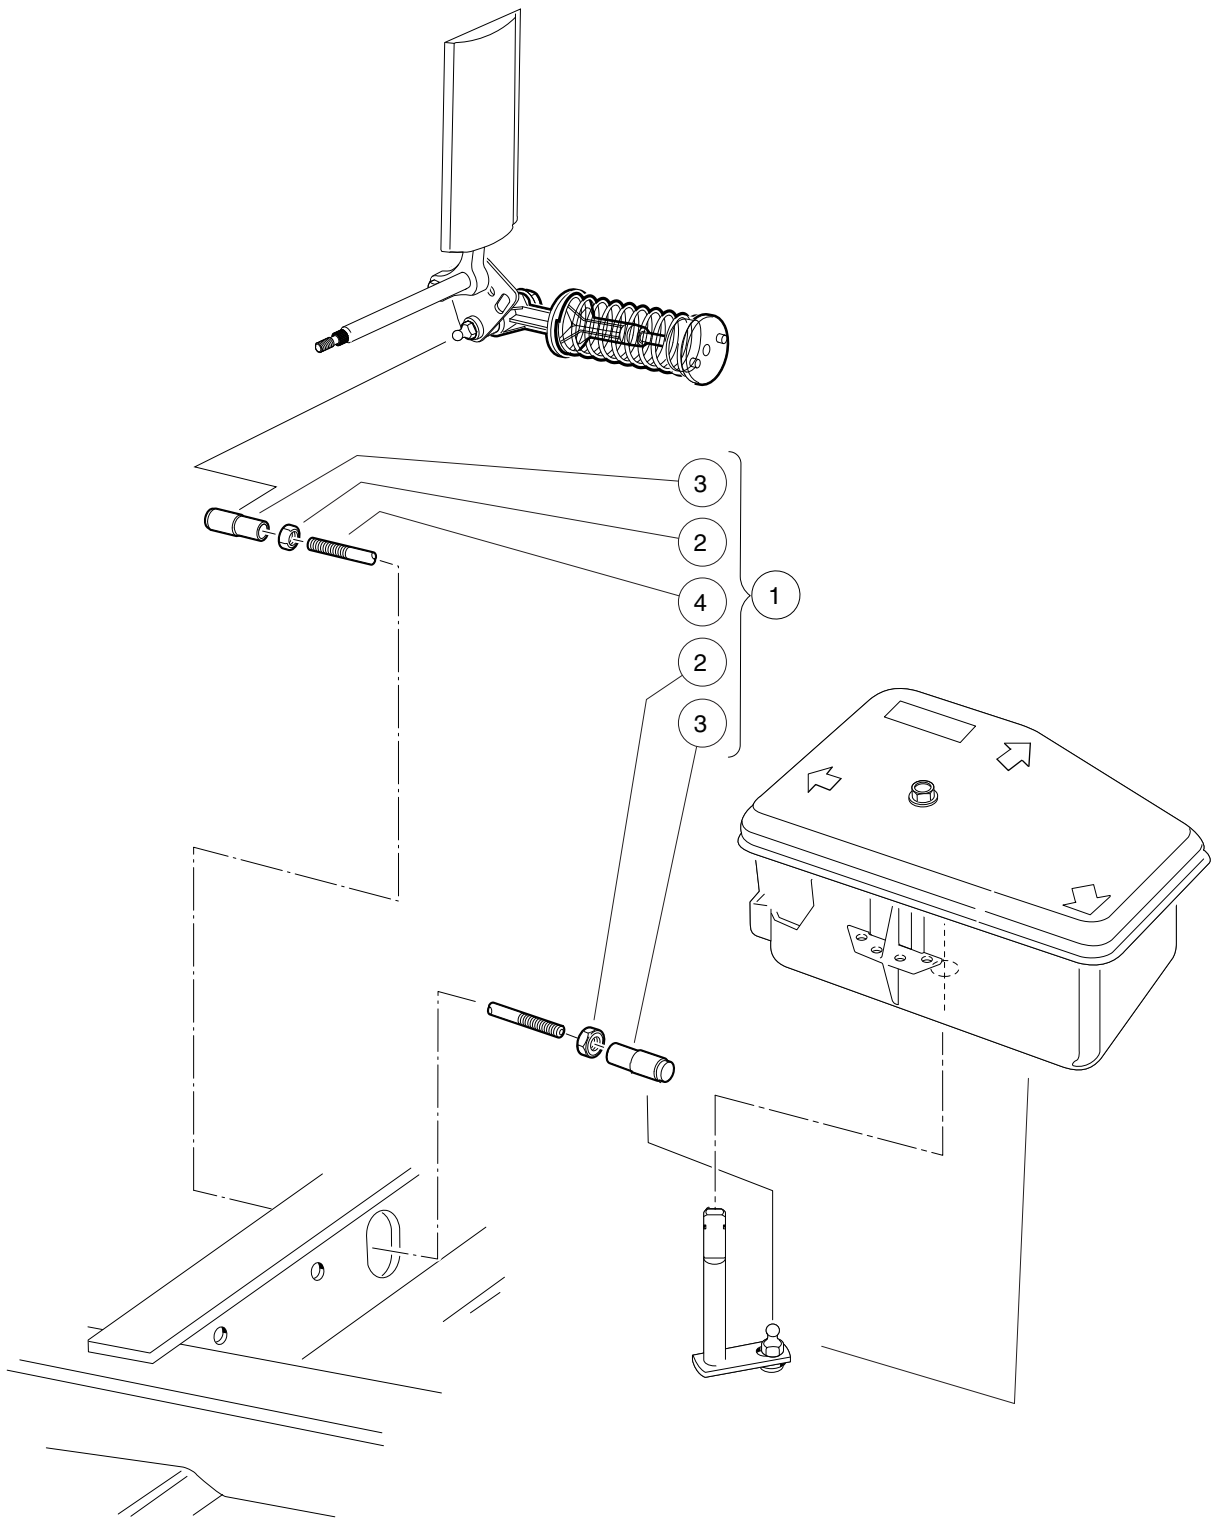

000362-001

ACCELERATOR ROD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101674702	Rod, Accelerator (includes items 2 through 4)	1
2	1011084	Nut, 1/4-28 Hex Jam	2
3	1011734	Joint, Ball	2
4	N/A	Accelerator Rod Elec Stretch	1

4

G

E

4
G
E

STEERING, FRONT AND REAR SUSPENSION

5


G

E

5

G

E

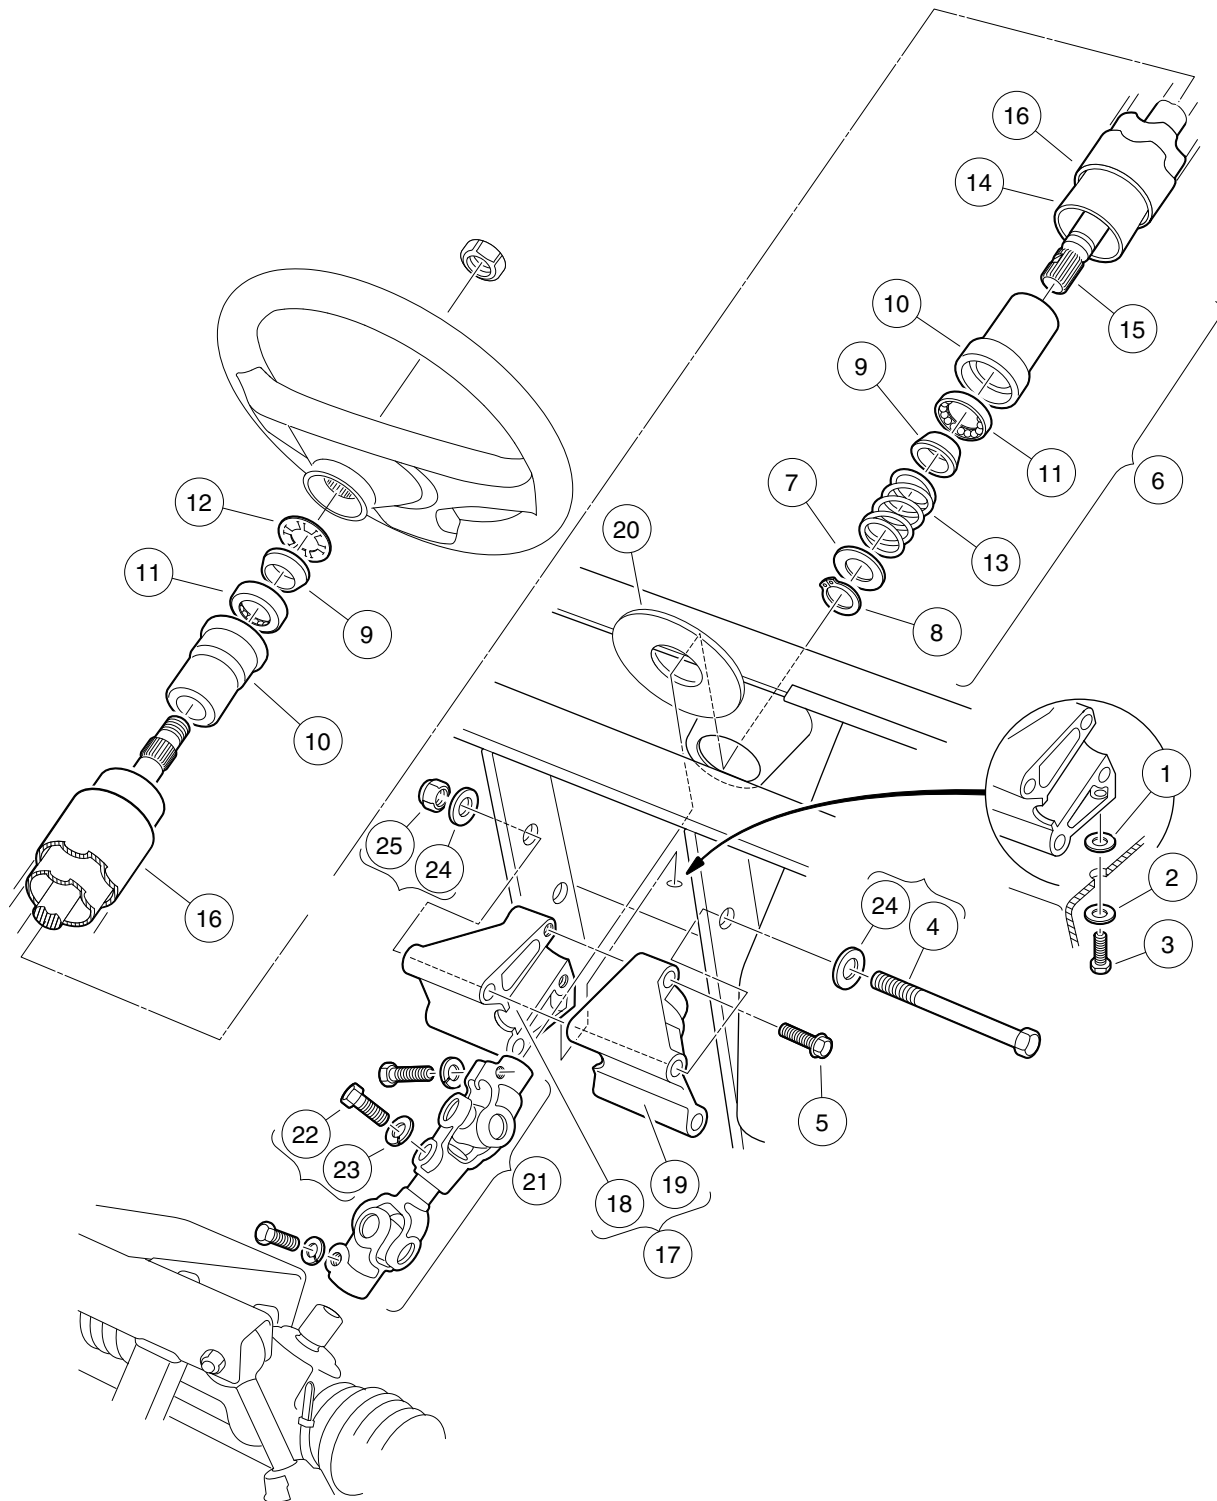

000247-001

STEERING COLUMN

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011578</u>	Washer, 5/16 Type B Flat	1
2	<u>1011697</u>	Washer, 5/16 Flat	1
3	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	1
4	<u>1016183</u>	Screw, 3/8-16 X 7.00 Hex Cap	2
5	<u>1016269</u>	Screw, 5/16-18 Thrd Forming	2
6	<u>1017313</u>	Steering Shaft Assembly (includes items 7 through 15)	1
7	<u>1012604</u>	Washer, 0.675 ID X 1.19 OD	1
8	<u>1012605</u>	Ring, 0.579 Internal Retaining	1
9	<u>1014125</u>	Wedge, Molded	2
10	<u>1014126</u>	Seat, Plastic Bearing	2
11	<u>1014213</u>	Bearing, Ball	2
12	<u>1014214</u>	Ring, Retaining	1
13	<u>1014217</u>	Spring, Steering Shaft	1
14	<u>1017314</u>	Column, Aluminum Steering	1
15	<u>1017315</u>	Shaft Steering Column	1
16	<u>1017317</u>	Tube Cover, Steering Column	1
17	101984801	Kit, Steering Column Mounting Bracket (includes items 18 and 19)	1
18	N/A	Bracket, RH Steering Column Mount	1
19	N/A	Bracket, LH Steering column mount	1
20	<u>102278001</u>	Boot, Steering Column Round	1
21	<u>103601601</u>	Shaft, Intermediate Steering (includes items 22 and 23)	1
22	<u>1017226</u>	Bolt, Hex-Head, 8mm X 1.25 - 30	3
23	<u>7174</u>	Lockwasher, 5/16 Split	3
24	<u>334</u>	Washer, 3/8 Type A Flat	4
25	<u>8754</u>	Locknut, 3/8-16 Hex	2

5


G

E

5

G

E

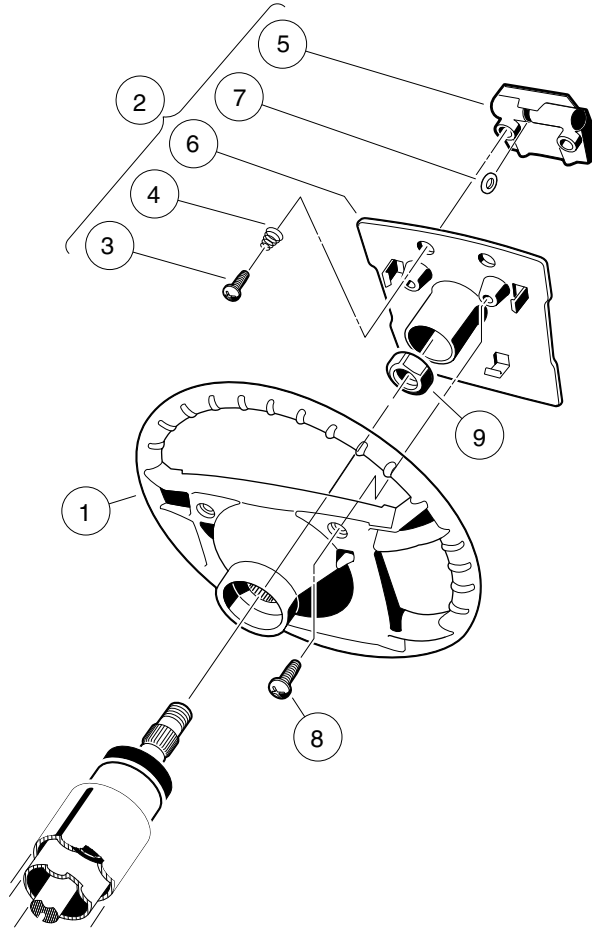

000246-002


STEERING WHEEL

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1016156</u>	Wheel, Steering	1	
2	<u>1016219</u>	Plate, Scorecard (includes items 3 through 7)	1	
3	<u>1012565</u>	Screw, #12 Phillips Round Head	2	
4	<u>1012566</u>	Tapered Compression Spring	2	
5	<u>1016154</u>	Clip, Scorecard	1	
6	N/A	Plate, Score Card	1	
7	N/A	Pencil Grip	1	
8	<u>1016663</u>	Screw, #12-14 X 0.625	2	
9	<u>1017273</u>	Nut, 5/8-18 Nylon Insert Jam	1	

5

G


E

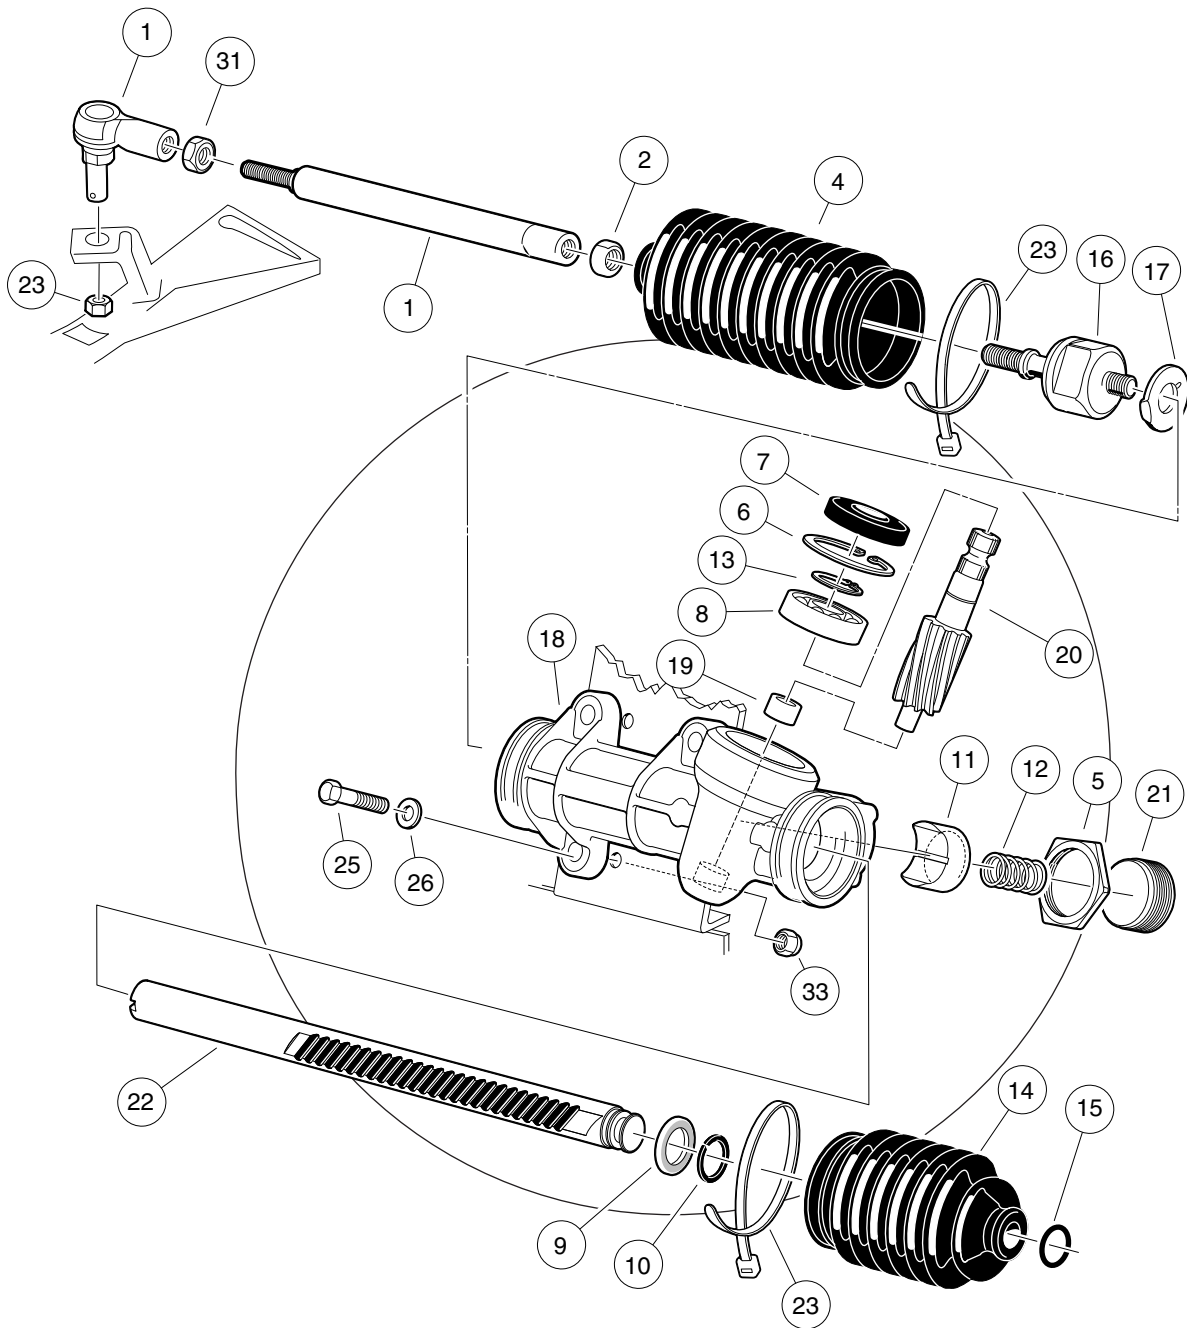

000189-001

STEERING GEAR ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1012467</u>	Link, Rack and Pinion Drag	1	
2	<u>1013042</u>	Nut, 12mm Hex	1	
3	<u>101878302</u>	Steering Gear Assembly (without yoke) (includes items 4 through 23)	1	
4	<u>1013035</u>	Bellows, Long	1	
5	<u>1013044</u>	Rack Screw Locknut	1	
6	<u>1013051</u>	Snap Ring	1	
7	<u>1013052</u>	Seal, Steering Pinion Dust	1	
8	<u>101879401</u>	Bearing, Ball	1	
9	<u>101879501</u>	Stop Washer	1	
10	<u>101879601</u>	Stop Ring, C-Type	1	
11	<u>101879701</u>	Support Yoke	1	
12	<u>101879801</u>	Rack Guide Pressure Spring	1	
13	<u>101879901</u>	Ring, Stop, C-Type	1	
14	<u>101880001</u>	Bellows, Short	1	
15	<u>101880101</u>	Dust Seal Retaining Ring	1	
16	<u>101880201</u>	Inner Ball Joint Asm	1	
17	<u>101880301</u>	Washer, Tab	1	
18	N/A	Box, Steering Gear	1	
19	N/A	Bearing, Lower Pinion	1	
20	N/A	Pinion, Steering	1	
21	N/A	Screw, Rack Guide	1	
22	N/A	Rack, Steering	1	
23	<u>8990</u>	Tie Wrap, 8" Nylon	2	
24	<u>1035</u>	Cotter Pin, 3/32 x 1	1	
25	<u>1624</u>	Screw, 3/8-16 X 1.50 Hex-Head Cap	3	
26	<u>334</u>	Washer, 3/8 Type A Flat	3	
27	<u>7540</u>	Ball Joint, Left (includes items 28 through 31)	1	
28	<u>1011895</u>	Socket, LH Vertical	1	
29	<u>1011930</u>	Seal, Vertical Socket Dust	1	
30	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
31	<u>7602</u>	Nut, 3/8-24 UNF Hex	1	
32	<u>7555</u>	Nut, 1/2-20 Hex, Left-Hand Thread	1	
33	<u>8754</u>	Locknut, 3/8-16 Hex	3	

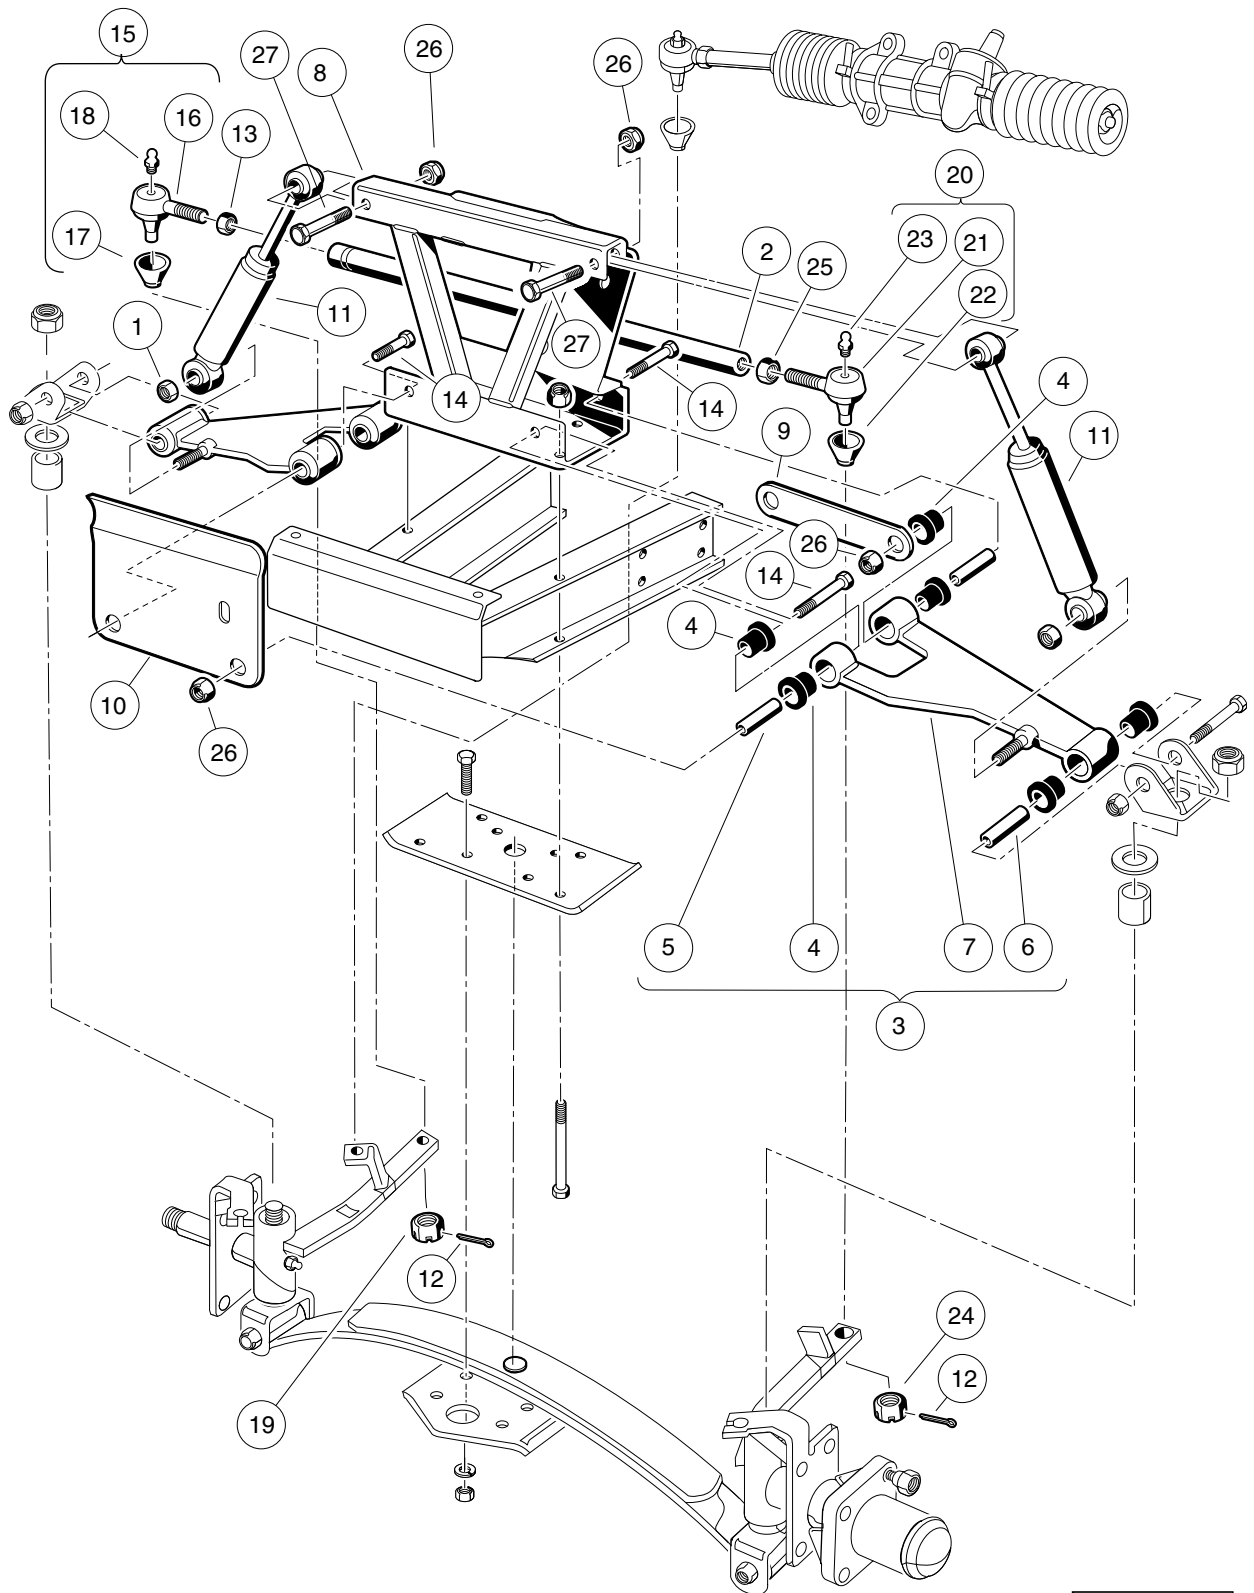5**G****E**

000314-001


FRONT SUSPENSION, UPPER

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2	
2	<u>1010219</u>	Tie Rod	1	
3	<u>1016353</u>	Sub-Assembly, Delta A-Plate (includes items 4 through 7)	2	
4	<u>1016346</u>	Bushing, Urethane	6	
5	<u>1016349</u>	Sleeve, Delta Inner	2	
6	<u>1016350</u>	Sleeve, Delta Outer	1	
7	<u>1016351</u>	Delta A-Plate	1	
8	<u>1016385</u>	Delta Shock and Gear Support Assembly	1	
9	<u>1017266</u>	A-Plate Strap	1	
10	<u>101955001</u>	Brake Cable Guide Bracket	1	
11	<u>103351001</u>	Shock Absorber, Front, Common	2	
12	<u>1035</u>	Cotter Pin, 3/32 x 1	2	
13	<u>1308</u>	Nut, 1/2-20 Hex	1	
14	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4	
15	<u>7539</u>	Ball Joint, Right-Hand (includes items 16 through 19)	1	
16	1011893	Socket, RH Vertical	1	
17	<u>1011930</u>	Seal, Vertical Socket Dust	1	
18	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
19	7602	Nut, 3/8-24 UNF Hex	1	
20	<u>7540</u>	Ball Joint, Left (includes items 21 through 24)	1	
21	1011895	Socket, LH Vertical	1	
22	<u>1011930</u>	Seal, Vertical Socket Dust	1	
23	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
24	7602	Nut, 3/8-24 UNF Hex	1	
25	<u>7555</u>	Nut, 1/2-20 Hex, Left-Hand Thread	1	
26	<u>8754</u>	Locknut, 3/8-16 Hex	6	
27	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	2	

5

G

E

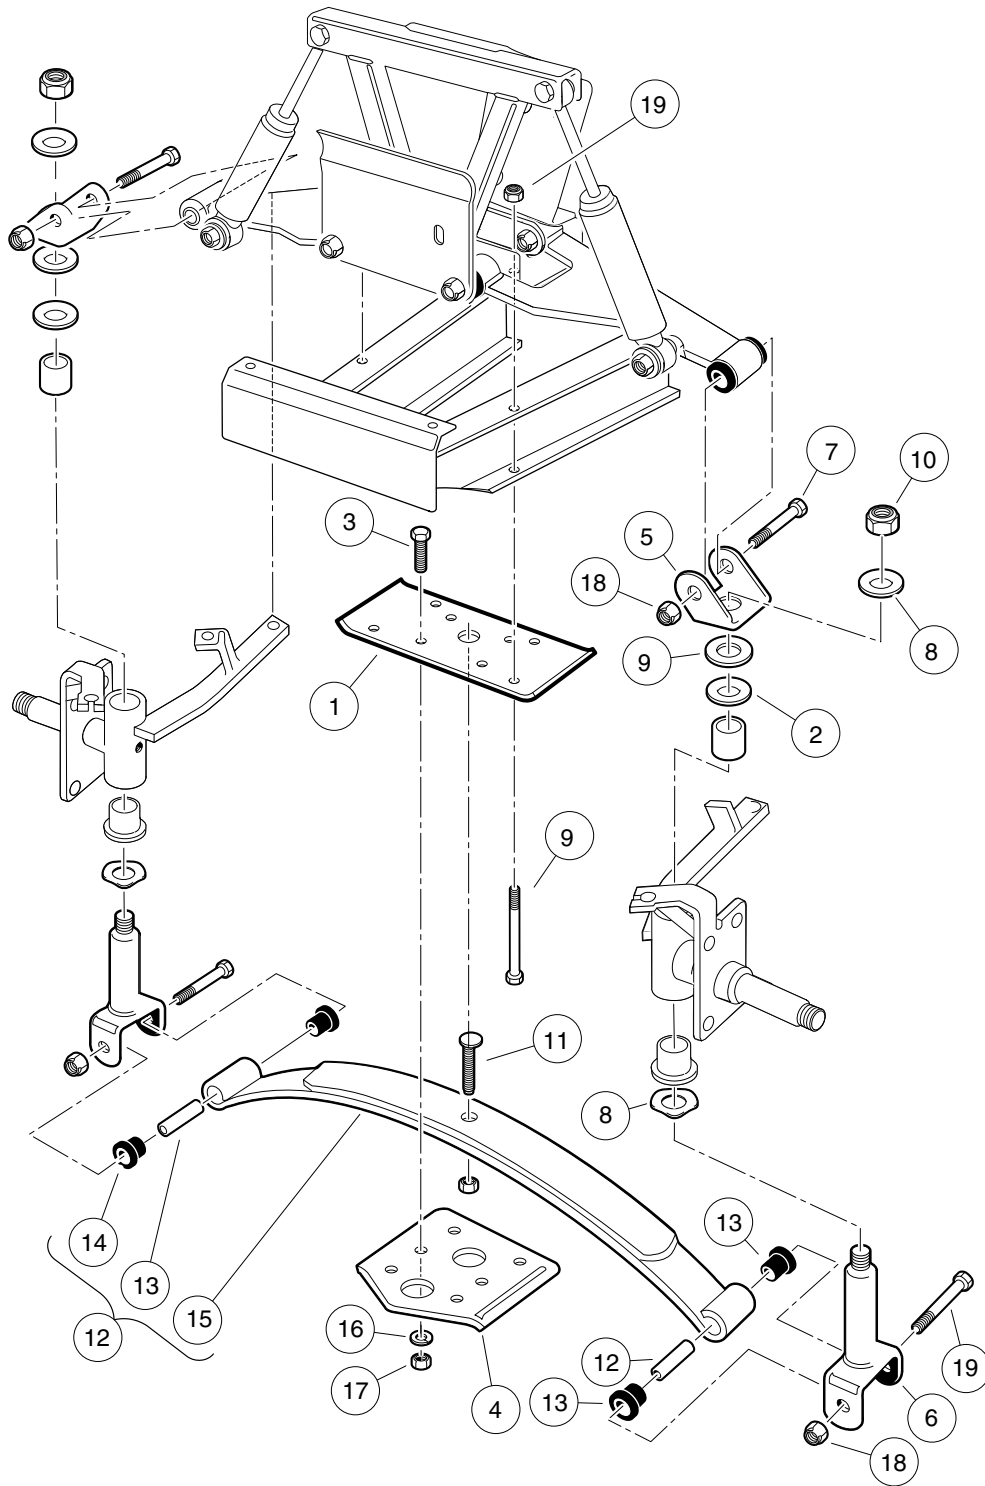

000313-001



FRONT SUSPENSION, LOWER

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1010124</u>	Plate, Spring Mount	1	
2	<u>1010150</u>	Bearing, Thrust	2	
3	<u>1010177</u>	Bolt, 3/8-16 X 2.00 Hex Head	4	
4	<u>1014276</u>	Plate, Front Spring Retainer	1	
5	<u>1016384</u>	Clevis, Delta Upper	2	
6	<u>1016386</u>	King Pin Assembly	2	
7	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	2	
8	<u>1016389</u>	Washer, 1.125 Od Wave	2	
9	<u>101870501</u>	Screw, 3/8-16 X 4.75 Hx Hd Cap	4	
10	<u>102766301</u>	Nut, 1/2-20, Center Lock	2	
11	<u>103507001</u>	Eccentric Bolt Common	1	
12	<u>103628801</u>	Spring Asm, Front, 2 Leaf (includes items 13 through 15)	1	
13	<u>1012303</u>	Bushings, Steel	2	
14	<u>1015583</u>	Bushings, Urethane	4	
15	<u>103502701</u>	Spring, Front, 2 Leaf	1	
16	<u>357</u>	Lockwasher, 3/8 Split	4	
17	<u>706</u>	Nut, Hex 3/8-16	4	
18	<u>8754</u>	Locknut, 3/8-16 Hex	8	
19	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2	

5

G


E

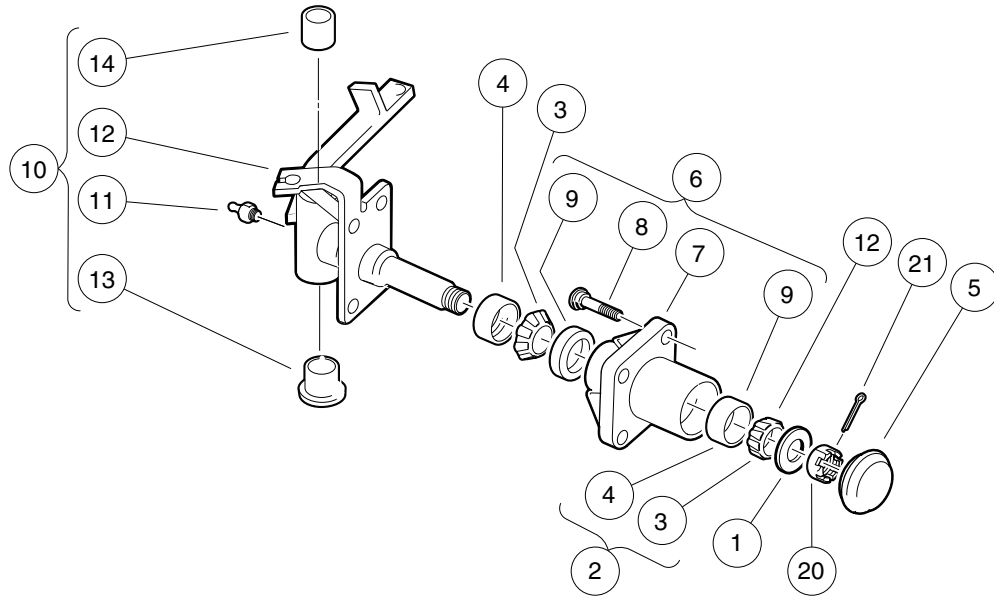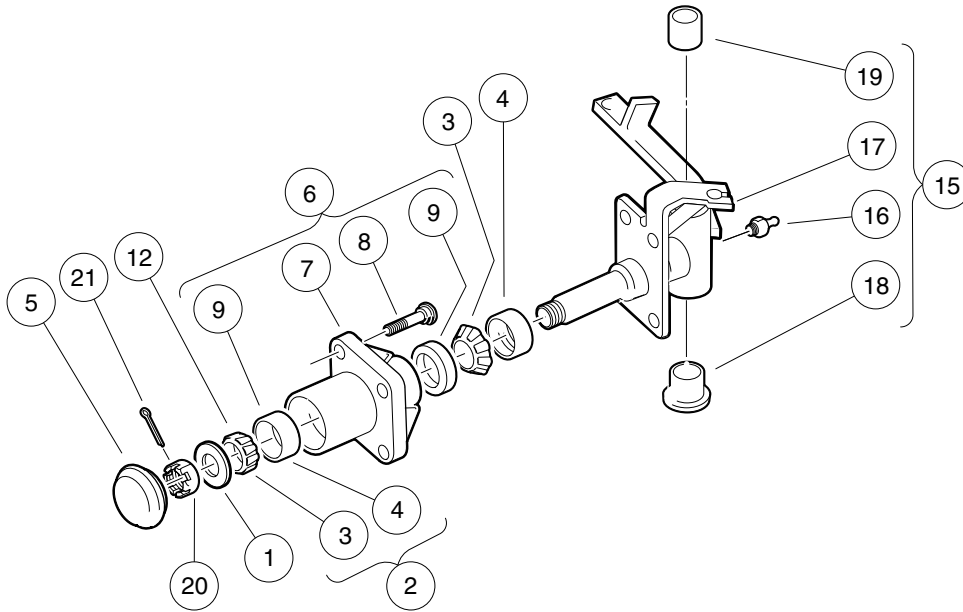

000310-002


FRONT SPINDLES AND HUBS – VEHICLES WITH FOUR-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1010005</u>	Washer, 3/4 Flat	2	
2	<u>1011393</u>	Hub Bearing Package (includes items 3 and 4)	4	
3	<u>7274</u>	Bearing, Front Hub Wheel	1	
4	<u>7308</u>	Race, Front Hub Bearing	1	
5	<u>1011887</u>	Dust Cover	2	
6	<u>1011889</u>	Hub (includes items 7 through 9)	2	
7	<u>1011153</u>	Front Hub	1	
8	<u>103477901</u>	Lug Stud, 1/2-20 Unf, 4037	4	
9	<u>7308</u>	Race, Front Hub Bearing	2	
10	<u>103717302</u>	Asm, Spindle, Lh, 4wb, Sp (includes items 11 through 14)	1	
11	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
12	<u>N/A</u>	Subasm, Spindle, Lh, 4wb	1	
13	<u>7048</u>	Bushing, Flanged Bronze	1	
14	<u>8067</u>	Bushing, Bronze Spindle	1	
15	<u>103717402</u>	Asm, Spindle, Rh, 4wb, Sp (includes items 16 through 19)	1	
16	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
17	<u>N/A</u>	Subasm, Spindle, Rh, 4wb	1	
18	<u>7048</u>	Bushing, Flanged Bronze	1	
19	<u>8067</u>	Bushing, Bronze Spindle	1	
20	<u>7840</u>	Nut, 3/4-16 Hex Slotted	2	
21	<u>7910</u>	Pin, 5/32 X 1.00 Cotter	2	

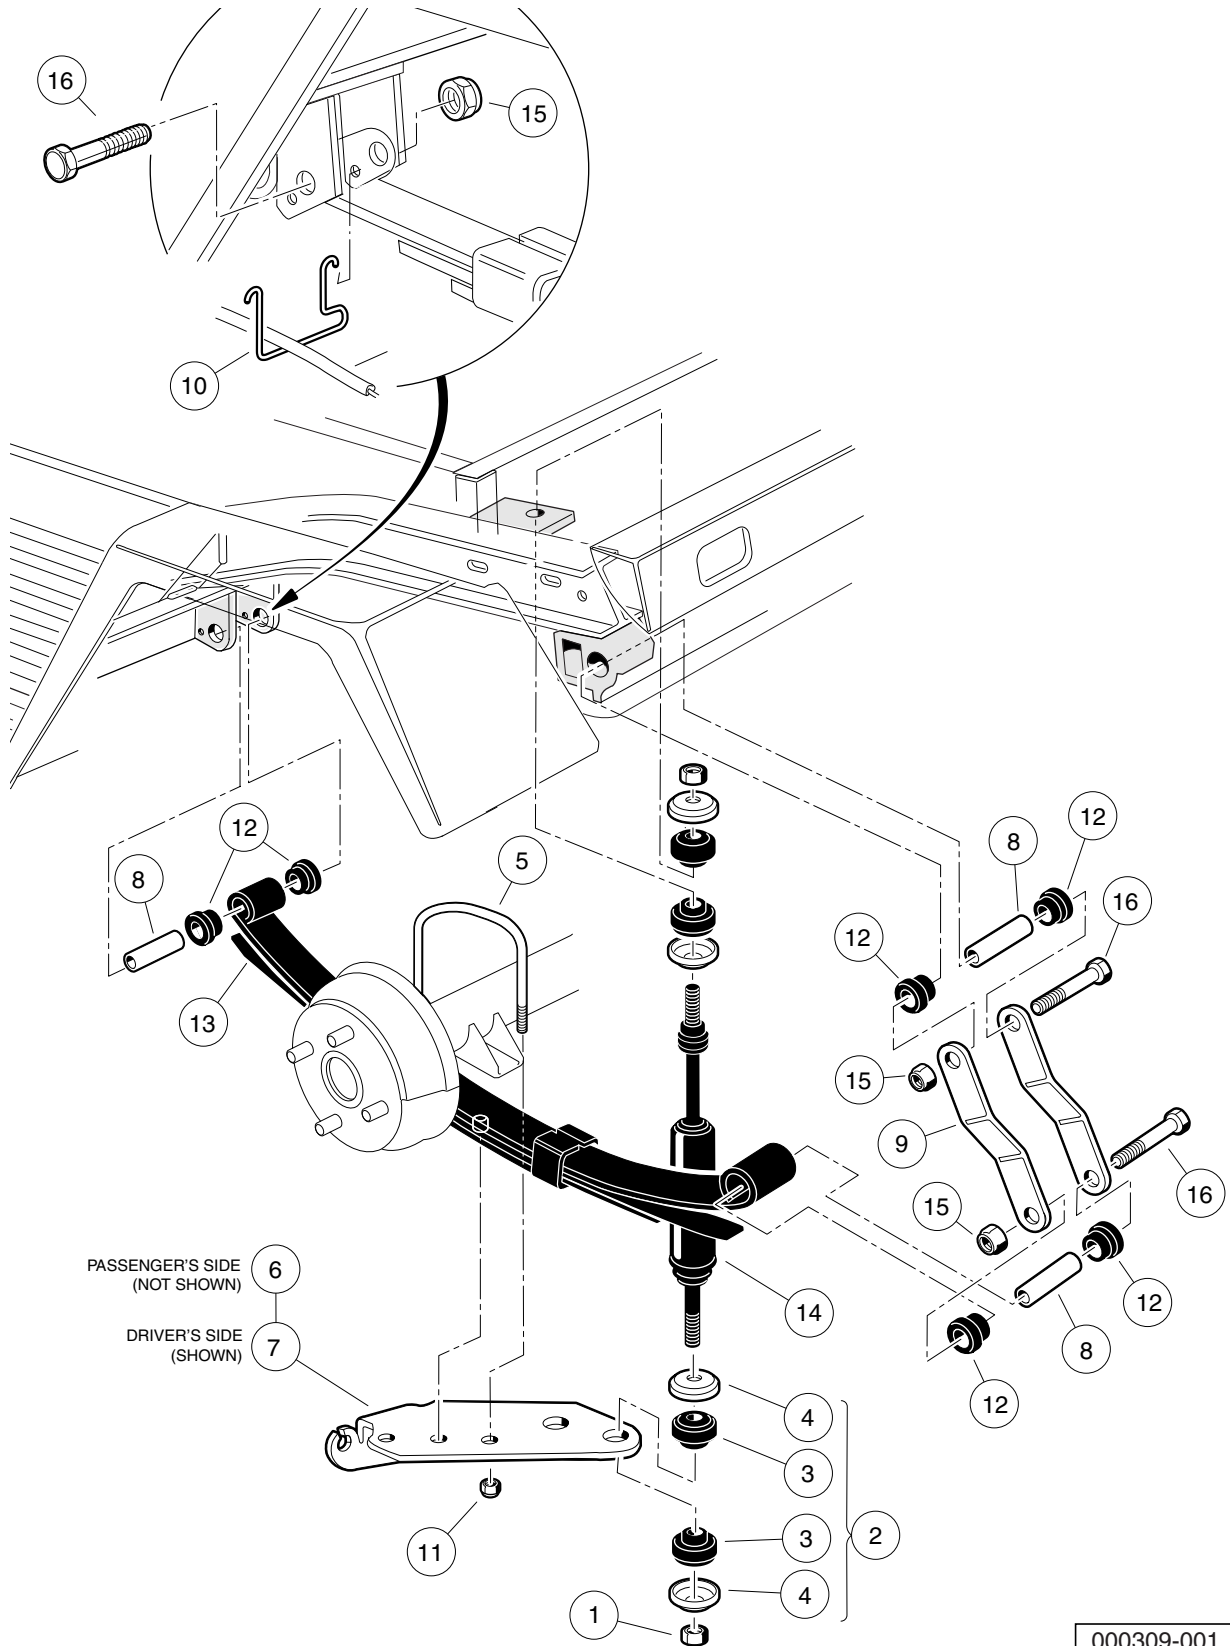5**G****E**

REAR SUSPENSION COMPONENTS – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1010145</u>	Nut, 3/8-24 Hex	4	
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4	
3	<u>1010142</u>	Cushion, Shock Absorber	2	
4	<u>1010144</u>	Retainer, Shock Absorber Cushion	2	
5	<u>1012180</u>	U-Bolt	2	
6	<u>1012181</u>	Bracket, Shock Mounting, Right (Passenger)	1	
7	<u>1012182</u>	Bracket, Shock Mounting, Left (Driver)	1	
8	<u>1012303</u>	Bushing, Steel	6	
9	<u>1012304</u>	Shackle, Rear Spring	4	
10	<u>1013207</u>	Hanger, Brake Cable	2	
11	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4	
12	<u>1015583</u>	Bushing, Urethane	12	
13	<u>102871801</u>	Spring, Multi Leaf	2	
14	<u>103350901</u>	Shock Absorber, Rear, Utility	2	
15	<u>8754</u>	Locknut, 3/8-16 Hex	6	
16	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	6	

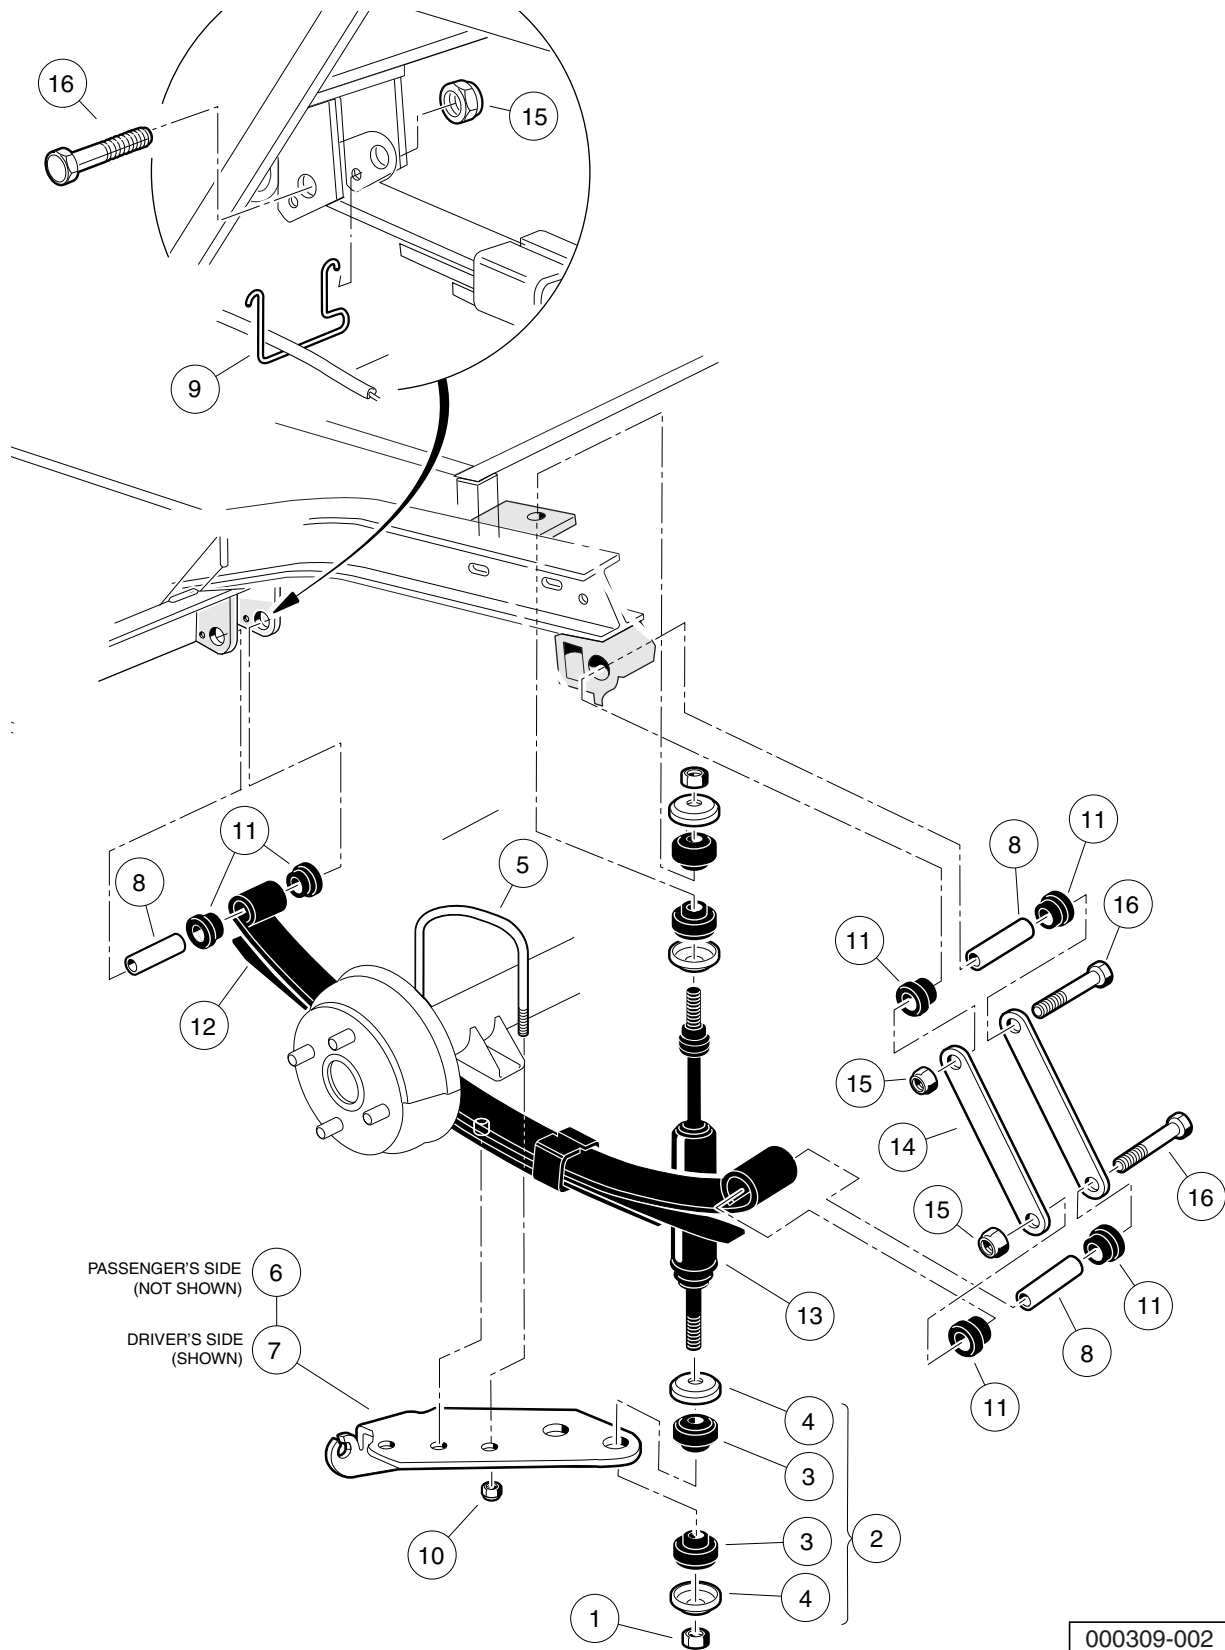5**G****E**

000309-002

REAR SUSPENSION COMPONENTS – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1010145</u>	Nut, 3/8-24 Hex	4	
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4	
3	<u>1010142</u>	Cushion, Shock Absorber	2	
4	<u>1010144</u>	Retainer, Shock Absorber Cushion	2	
5	<u>1012180</u>	U-Bolt	2	
6	<u>1012181</u>	Bracket, Shock Mounting, Right (Passenger)	1	
7	<u>1012182</u>	Bracket, Shock Mounting, Left (Driver)	1	
8	<u>1012303</u>	Bushing, Steel	6	
9	<u>1013207</u>	Hanger, Brake Cable	2	
10	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4	
11	<u>1015583</u>	Bushing, Urethane	12	
12	<u>102871801</u>	Spring, Multi Leaf	2	
13	<u>103350901</u>	Shock Absorber, Rear, Utility	2	
14	<u>7569</u>	Shackle, Rear Spring	4	
15	<u>8754</u>	Locknut, 3/8-16 Hex	6	
16	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	6	
Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock mounting plate.				

5


G

E


ELECTRICAL SYSTEM – GASOLINE VEHICLE

6

G

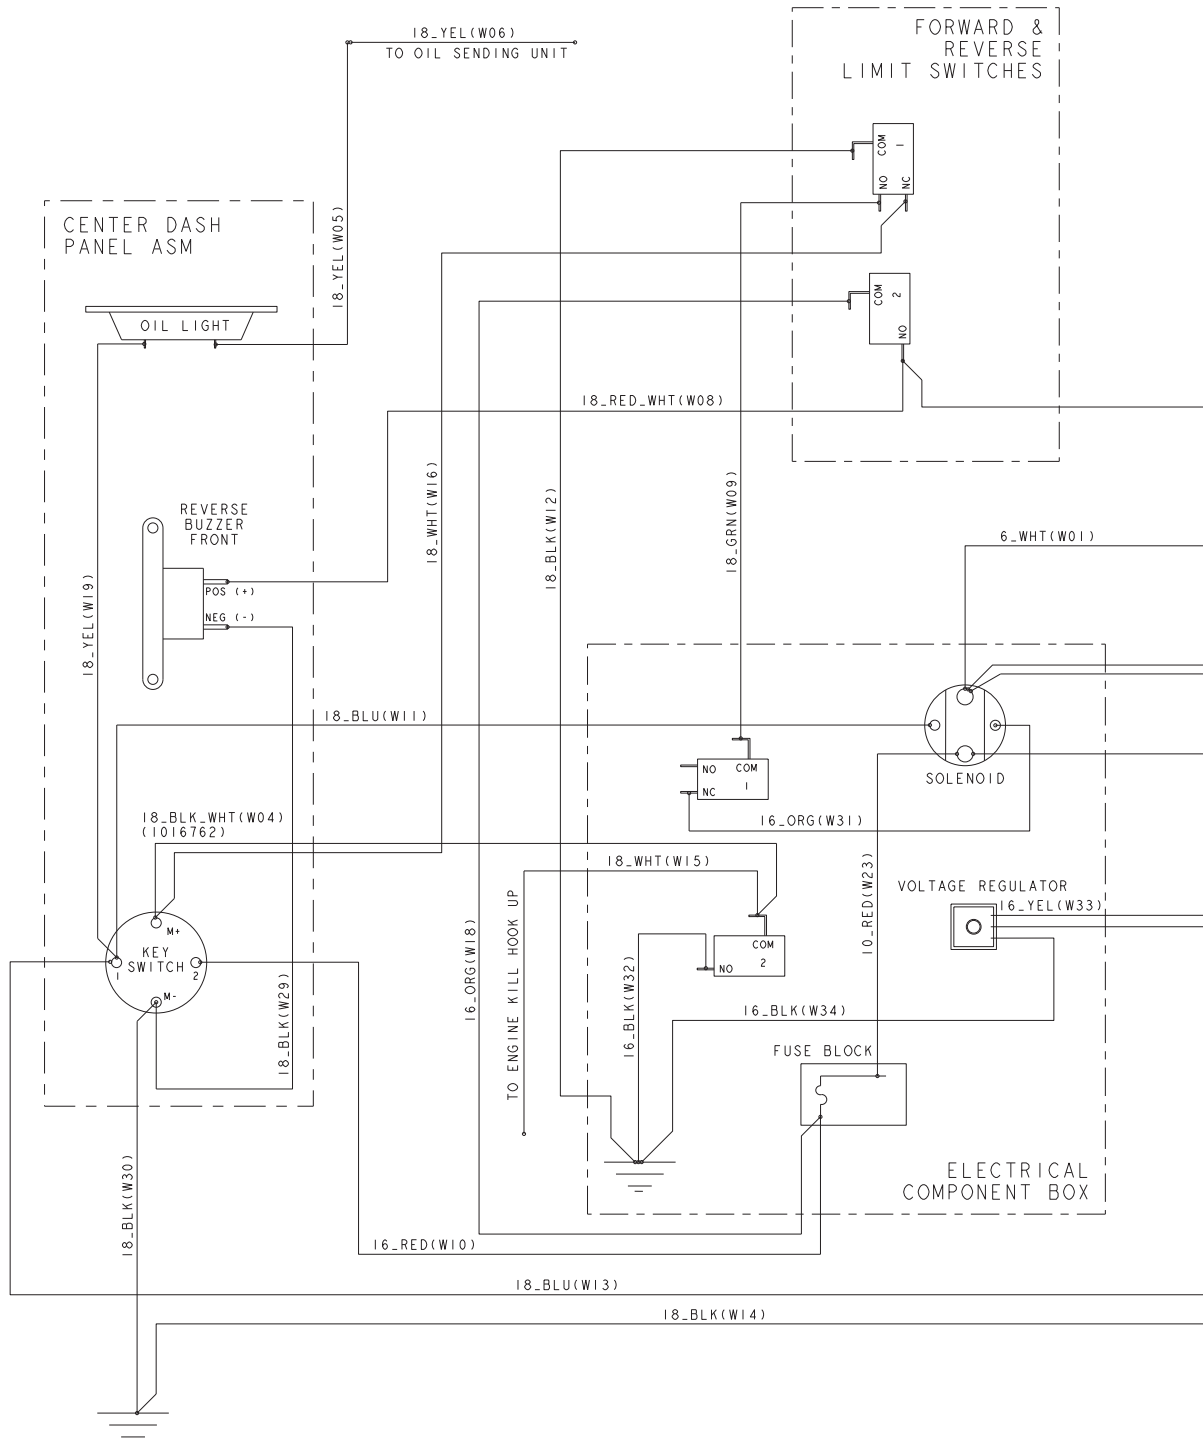

000657-001

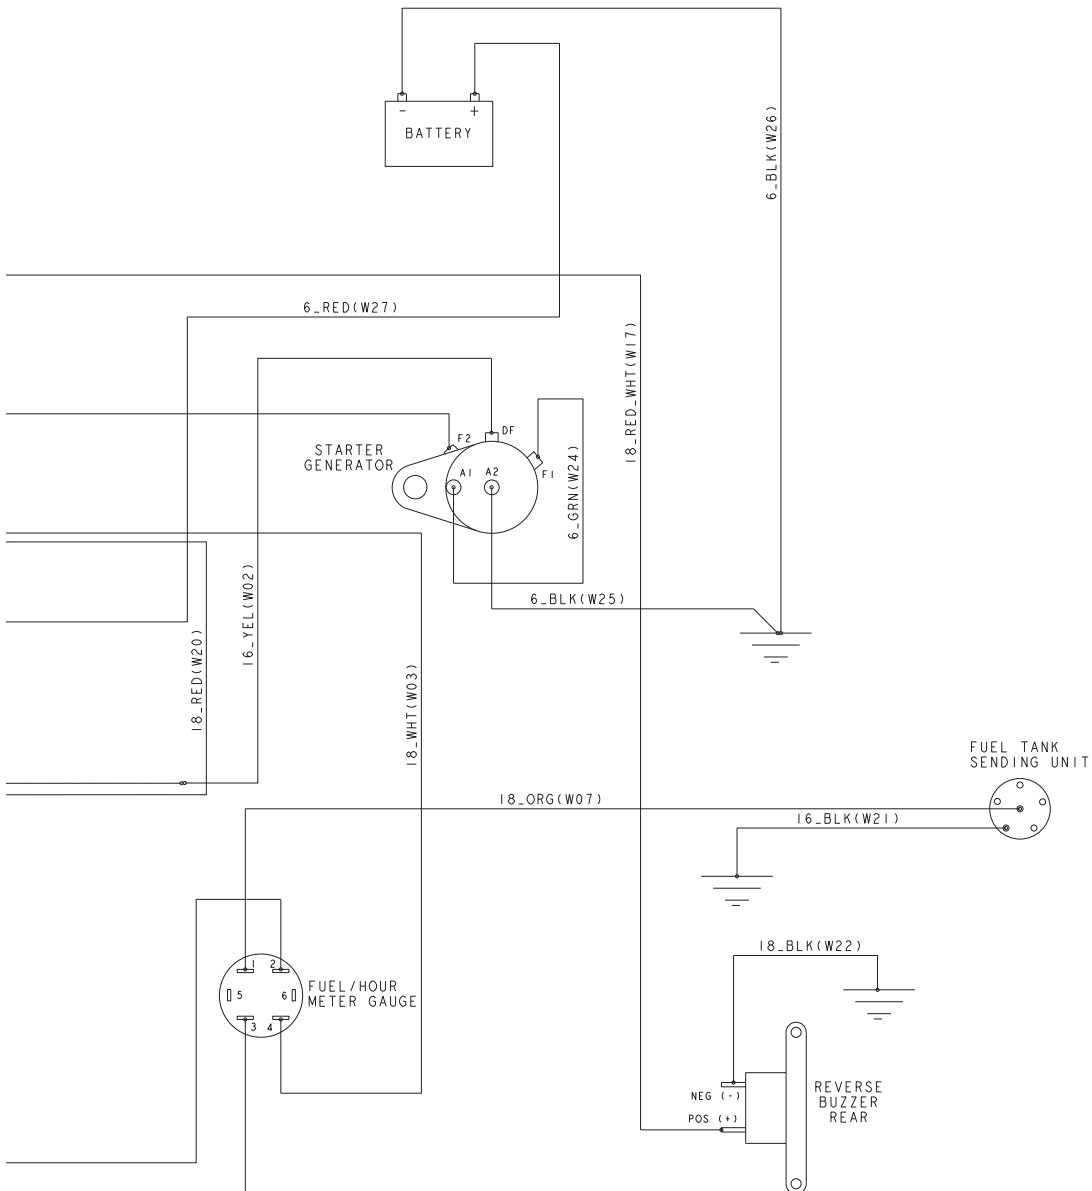

000657-001


See previous two pages for illustration.

WIRING – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101990201</u>	Wire Harness Assy, Limo Gas * (includes item 2)	1
2	<u>1015769</u>	Wire Assy, #6 White	1
3	N/A	Fuel System Harness	1
		* Note: The harnes contains several wires that are not available for order as individual items.	

6


G

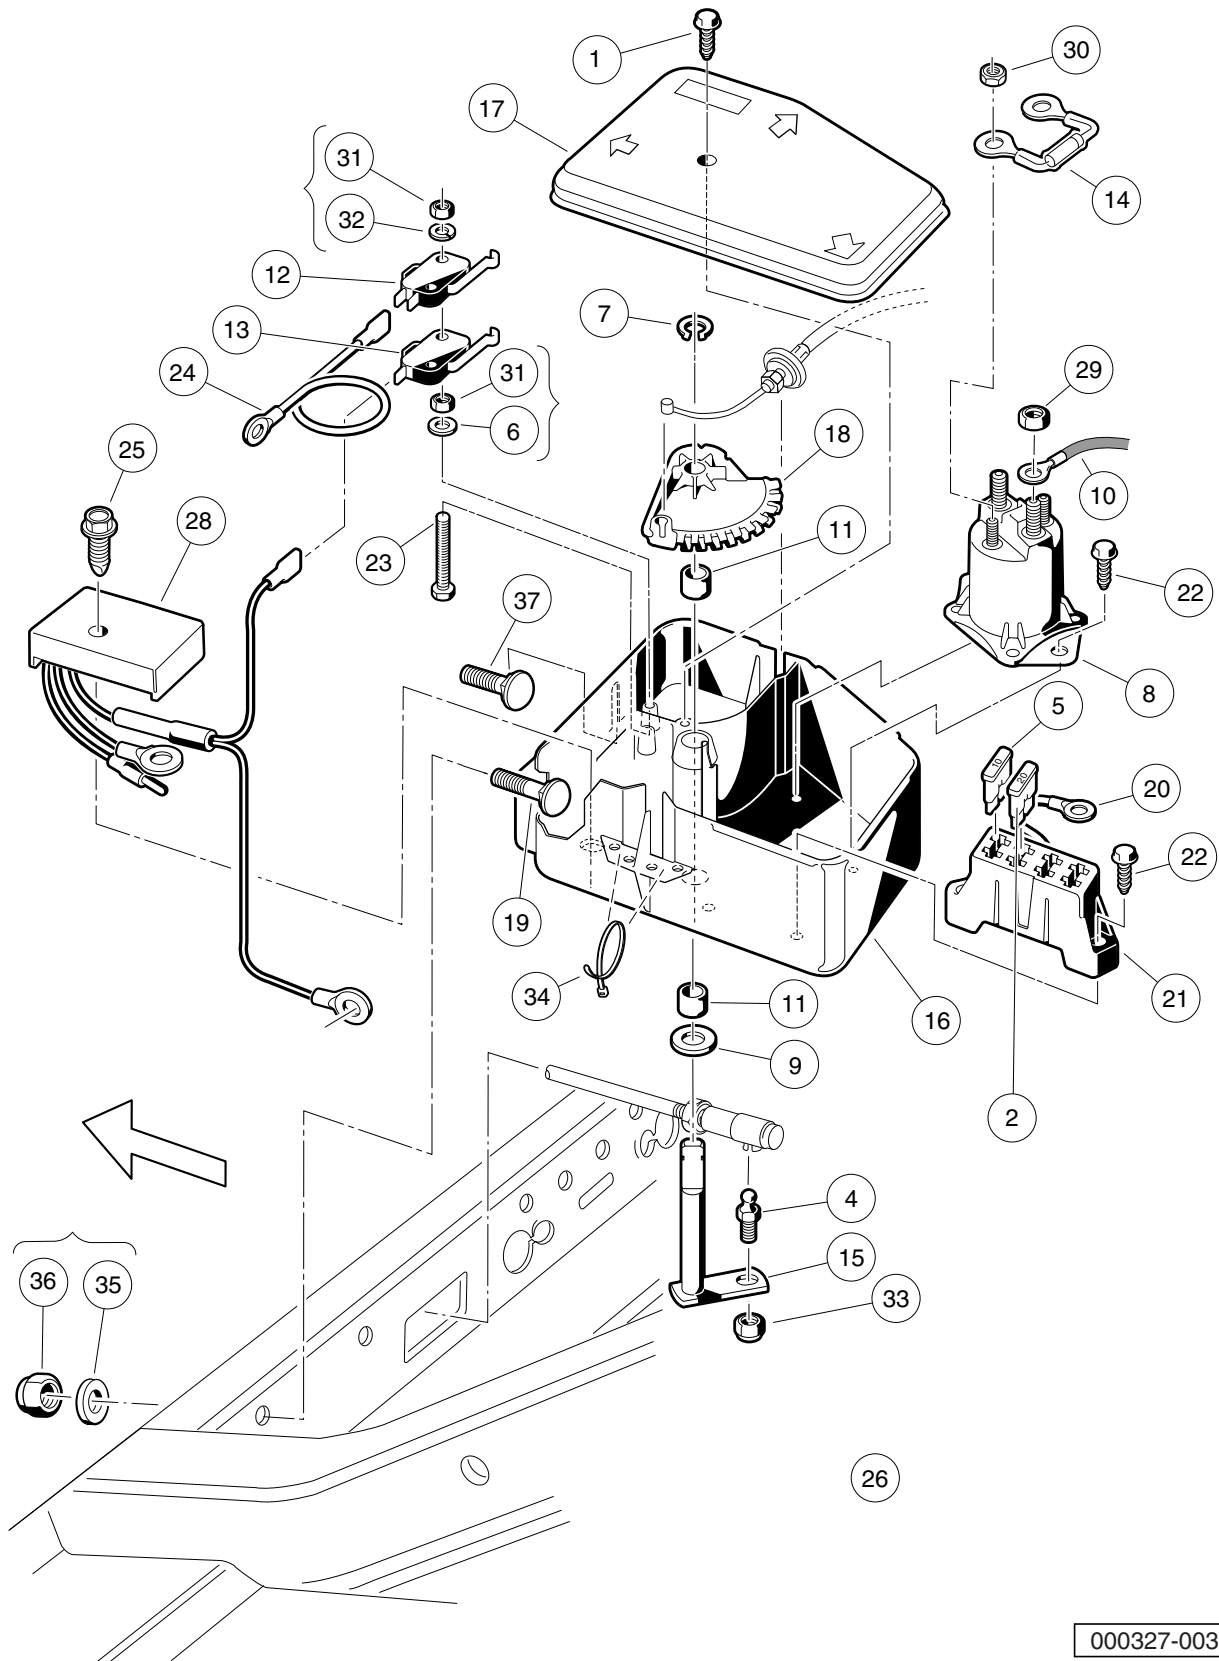

000327-003

ELECTRICAL COMPONENT BOX – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	6	G
		1 2 3 4			
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	1		
2	<u>1016423</u>	Fuse, 20-Amp	1		
3	N/A	Elec Component Box Asm , Limo (includes items 4 through 34)	1		
4	<u>1010954</u>	Stud, 1/4-28 X 0.560 Ball	1		
5	<u>1012295</u>	Fuse, 10-Amp	1		
6	<u>1012431</u>	Washer, #4 Flat	2		
7	<u>1013589</u>	Ring, 0.338" Internal Retaining	1		
8	<u>1013609</u>	Solenoid, 12-Volt	1		
9	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	1		
10	<u>1014119</u>	Wire Assembly #6 Red	1		
11	<u>1014145</u>	Bushing, Secondary Weight, Split	2		
12	<u>1014807</u>	Switch, Limit	1		
13	<u>1014808</u>	Switch, Limit	1		
14	<u>1014948</u>	Diode	1		
15	<u>1015345</u>	Bell Crank and Shaft Assembly	1		
16	<u>1015371</u>	Box, Electrical Component	1		
17	<u>1015372</u>	Cover, Electric Box	1		
18	<u>1015373</u>	Cam, Electric Box	1		
19	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	1		
20	<u>1015737</u>	Wire Assy, #10 Red	1		
21	<u>1015741</u>	Fuse Block	1		
22	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	4		
23	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2		
24	<u>1016401</u>	Wire Assy, #16 Orange	1		
25	<u>101856102</u>	Screw, 1/4-15 X 1.50 Hi-lo Hex	1		
26	<u>101990201</u>	Wire Harness Assy, Limo Gas * (includes item 27)	1		
27	<u>1015769</u>	Wire Assy, #6 White	1		
28	<u>102711201</u>	Voltage Regulator	1		
29	<u>1242</u>	Nut, 5/16-18 Hex	2		
30	<u>7893</u>	Nut, #10-32 Hex	2		
31	<u>8057</u>	Nut, #4-40 Hex Machine	4		
32	<u>8058</u>	Lockwasher, #4 Split	2		
33	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1		
34	<u>8990</u>	Tie Wrap, 8" Nylon	2		
35	<u>1241</u>	Washer, 5/16 Type A Flat	2		
36	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2		
37	<u>7818</u>	Bolt, Carriage, 5/16-18 X 1.5	1		
		* Note: The harness contains several wires that are not available for order as individual items.			

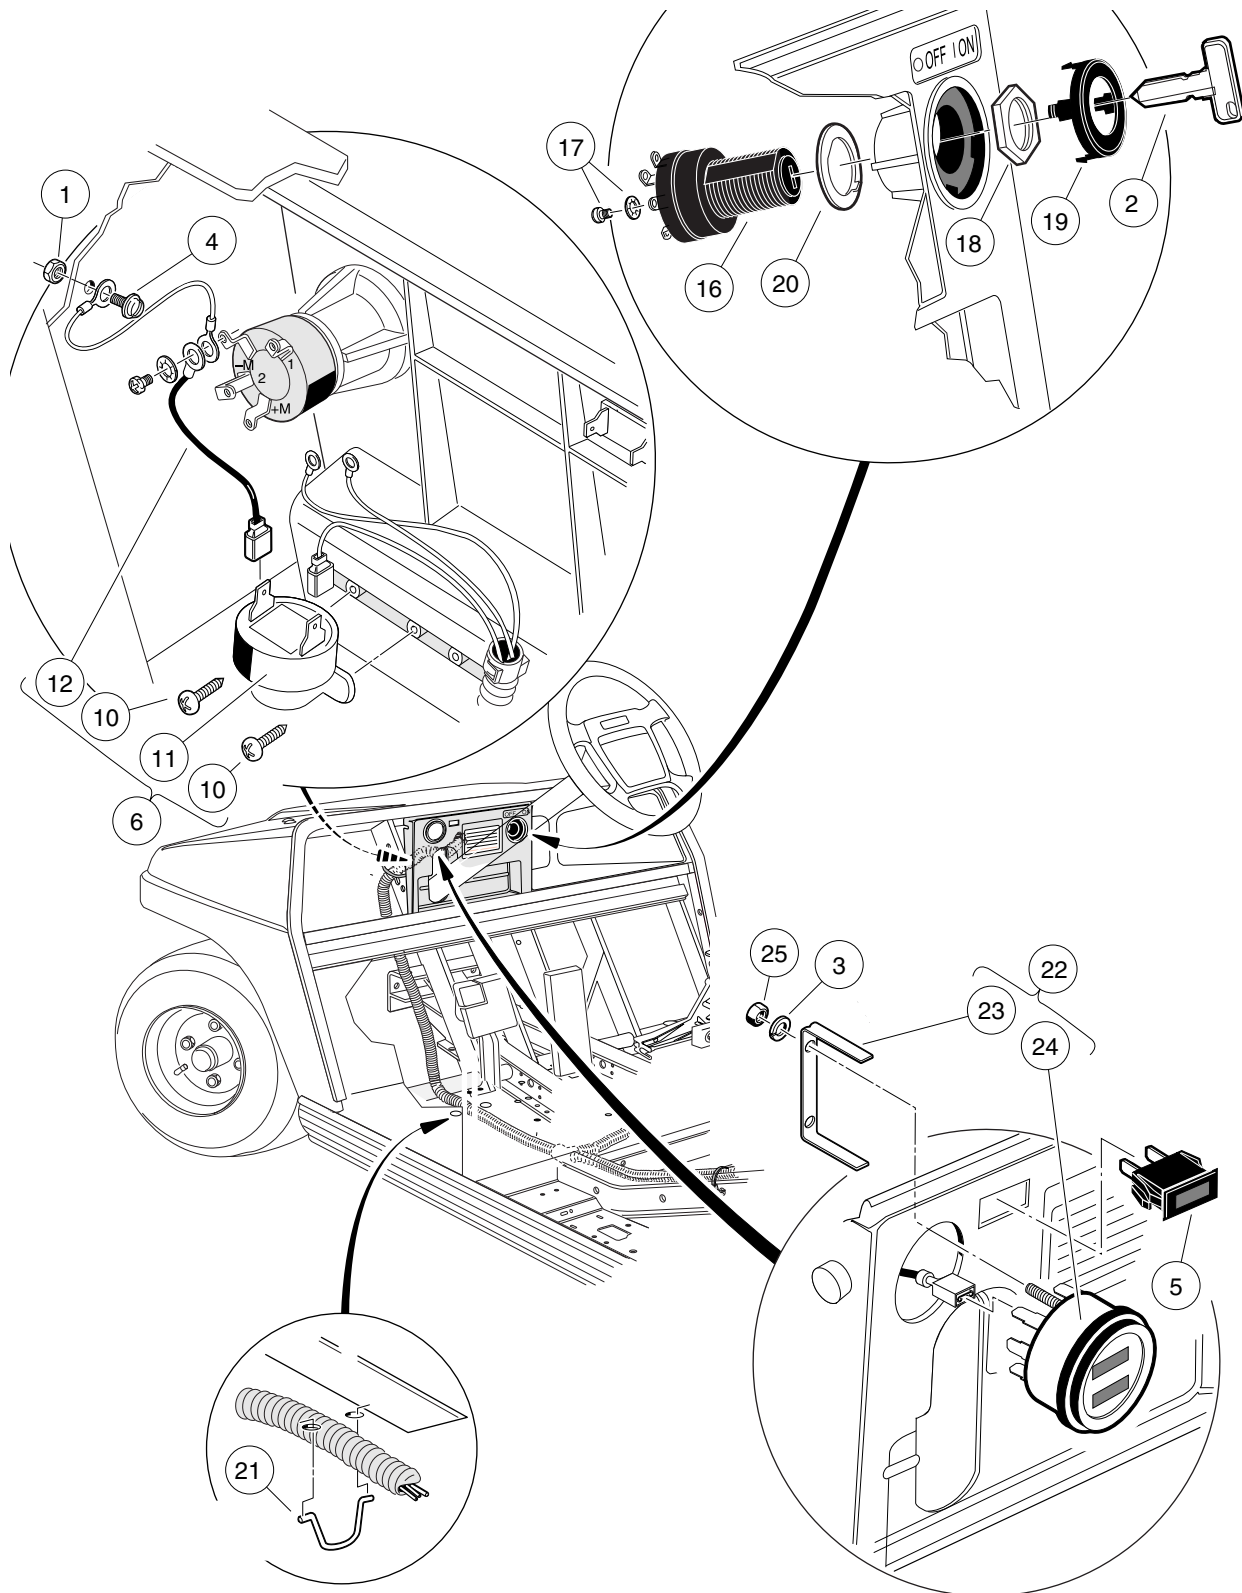


000330-001

CONTROLS AND INDICATORS – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011229</u>	Locknut, #6-32 Whiz	1
2	<u>1012505</u>	Keys (set of 2)	2
3	<u>1012986</u>	Lockwasher, M4	2
4	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
5	<u>1016630</u>	Light, Oil	1
6	<u>1016859</u>	Kit, Reverse Buzzer (includes items 7 through 15)	1
7	<u>1011229</u>	Locknut, #6-32 Whiz	1
8	<u>1012431</u>	Washer, #4 Flat	2
9	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
10	<u>1016849</u>	Screw, #4-24 X 0.33 Pan-Head Machine	2
11	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
12	<u>1016857</u>	Wire Assembly Black #18	1
13	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2
14	<u>8057</u>	Nut, #4-40 Hex Machine	2
15	<u>8058</u>	Lockwasher, #4 Split	2
16	<u>101826301</u>	Key Switch, 12-Volt, Off/On	1
17	<u>101830601</u>	Screw and Washer Assembly	4
18	<u>101830701</u>	Nut, Key Switch	1
19	<u>101834502</u>	Cap, Black Key Switch	1
20	<u>101851101</u>	Washer, Key Switch	1
21	<u>101900901</u>	Harness Retainer	3
22	<u>101990703</u>	Gauge, Fuel/Hour, with Bracket (includes items 23 and 24)	1
23	<u>102025901</u>	Bracket, Fuel Gauge/Hour Meter	1
24	N/A	Gauge, Fuel/Hour	1
25	<u>101991101</u>	Nut, M4-0.7	2
Note: Items 7 through 9, and 13 through 15 are included in the reverse buzzer kit, but are not used in this application.			

6

G

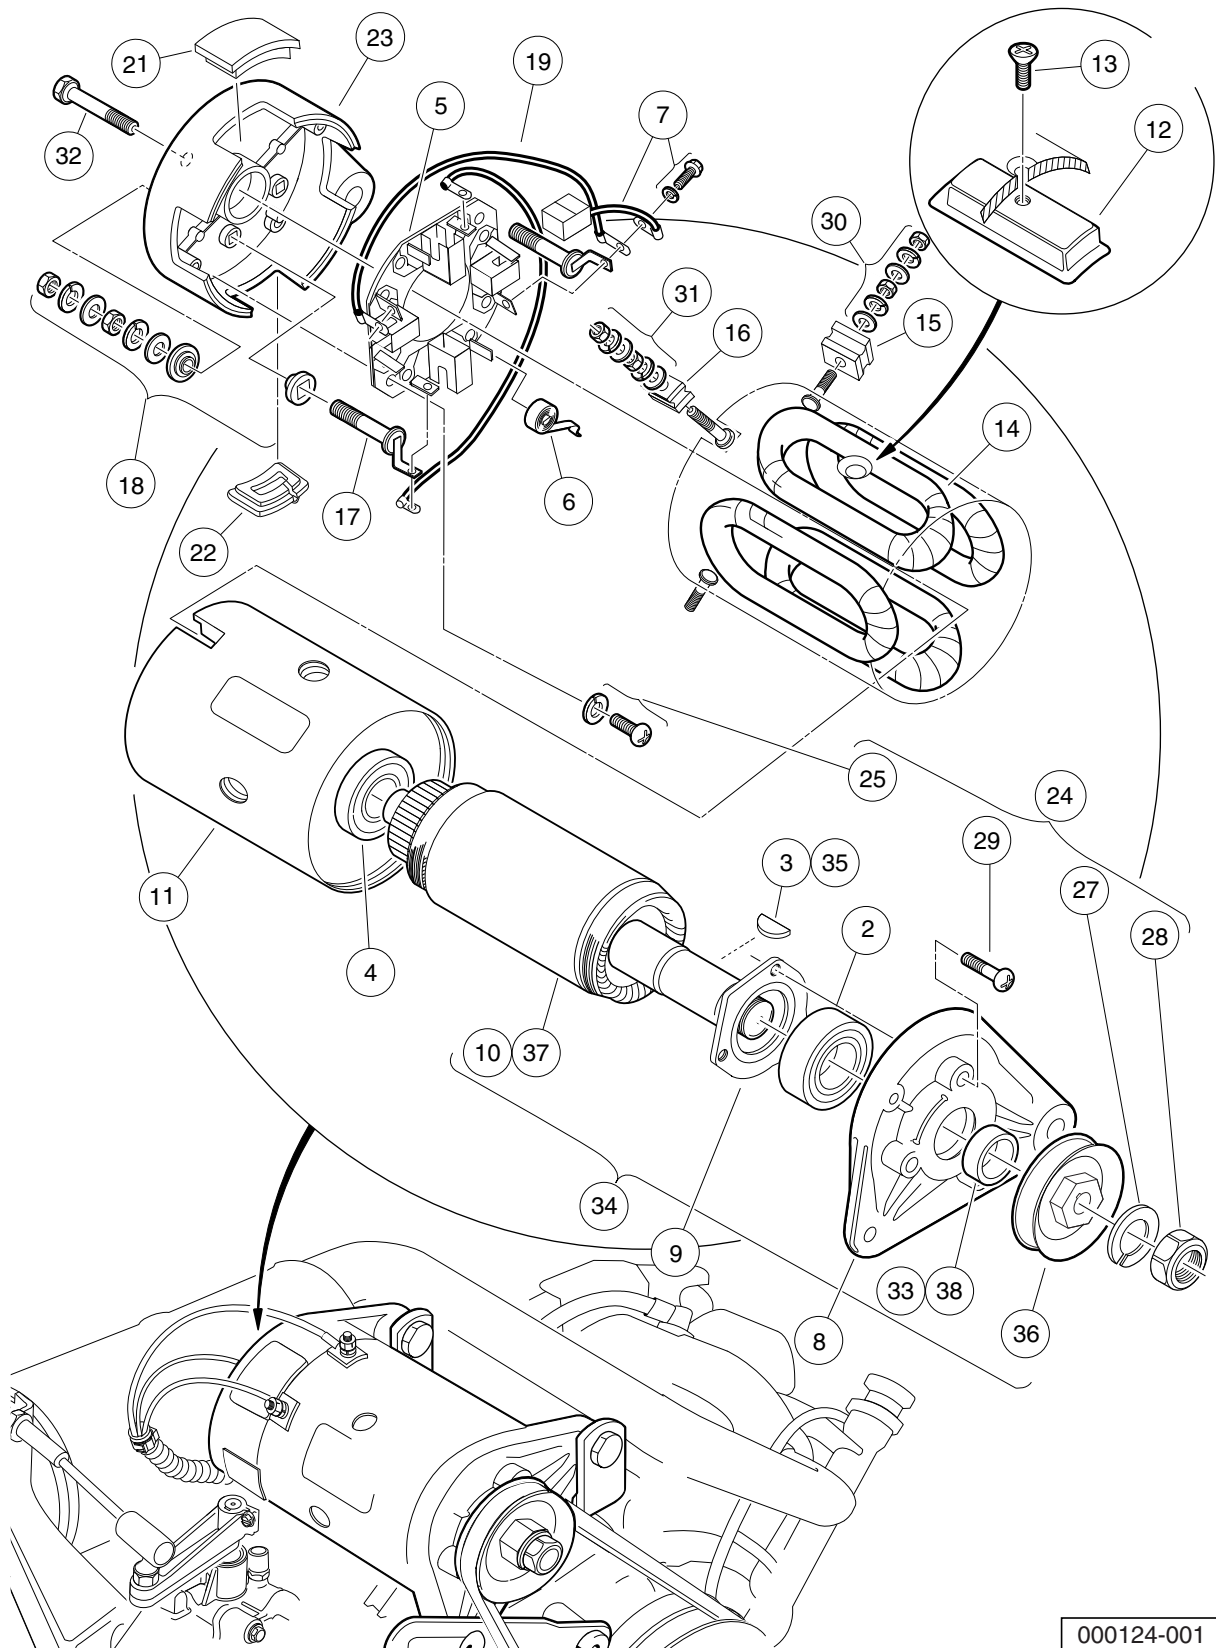


000124-001

STARTER/GENERATOR ASSEMBLY MODEL G425419 – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101833701</u>	Starter/Generator (cw) (includes items 2 through 33)	1
2	<u>1013001</u>	Bearing, Output Shaft Ball	1
3	<u>1013003</u>	Key, Starter/Generator	1
4	<u>1013005</u>	Bearing, Ball	1
5	<u>101301102</u>	Brush Holder Assembly (cw) (includes item 6)	1
6	<u>101878101</u>	Brush Spring Set	4
7	<u>101869302</u>	Brush and Screw Set (cw)	1
8	<u>101874901</u>	Front Bracket	1
9	<u>101875001</u>	Retainer	1
10	<u>101875101</u>	Armature	1
11	<u>101875201</u>	Field Coil Housing	1
12	<u>101875301</u>	Pole Set	1
13	<u>101875401</u>	Screw Set	1
14	<u>101875501</u>	Field Stator Coil Assembly	1
15	<u>101875601</u>	F Insulator Set	2
16	<u>101875701</u>	DF Insulator	1
17	<u>101875802</u>	A Connector (cw)	1
18	<u>101876001</u>	Screw and Mold Assembly	2
19	<u>101876202</u>	Brush Connector Assembly (cw)	2
20	<u>101876301</u>	Cover Set (includes items 21 and 22)	1
21	<u>1012991</u>	Brush Inspection Port Cover	3
22	<u>1017653</u>	Brush Port Cover w/Drain	1
23	<u>101876402</u>	Rear Bracket (cw)	1
24	<u>101876501</u>	Nut and Screw Set (includes items 25 through 29)	1
25	<u>101896501</u>	Brush Holder Asm Screw	2
26	N/A	Washer, M5 Flat	1
27	N/A	Washer, M14 Lock	1
28	N/A	Nut, Hex, M14 x 2	1
29	N/A	Screw, M5 x 0.8 x 18mm	3
30	<u>101877601</u>	Nut and Washer Set	2
31	<u>101877701</u>	Nut and Washer Set	1
32	<u>101879001</u>	Through Bolt Set	2
33	<u>101939901</u>	Spacer	1
34	<u>101875102</u>	Armature Asm Conversion Kit (includes items 35 through 38)	1
35	<u>1013003</u>	Key, Starter/Generator	1
36	<u>1014289</u>	Pulley, Starter/Generator	1
37	<u>101875101</u>	Armature	1
38	<u>101939901</u>	Spacer	1
		Note: Item 36 will ONLY fit Model G425419 Starter/Generator.	

6


G

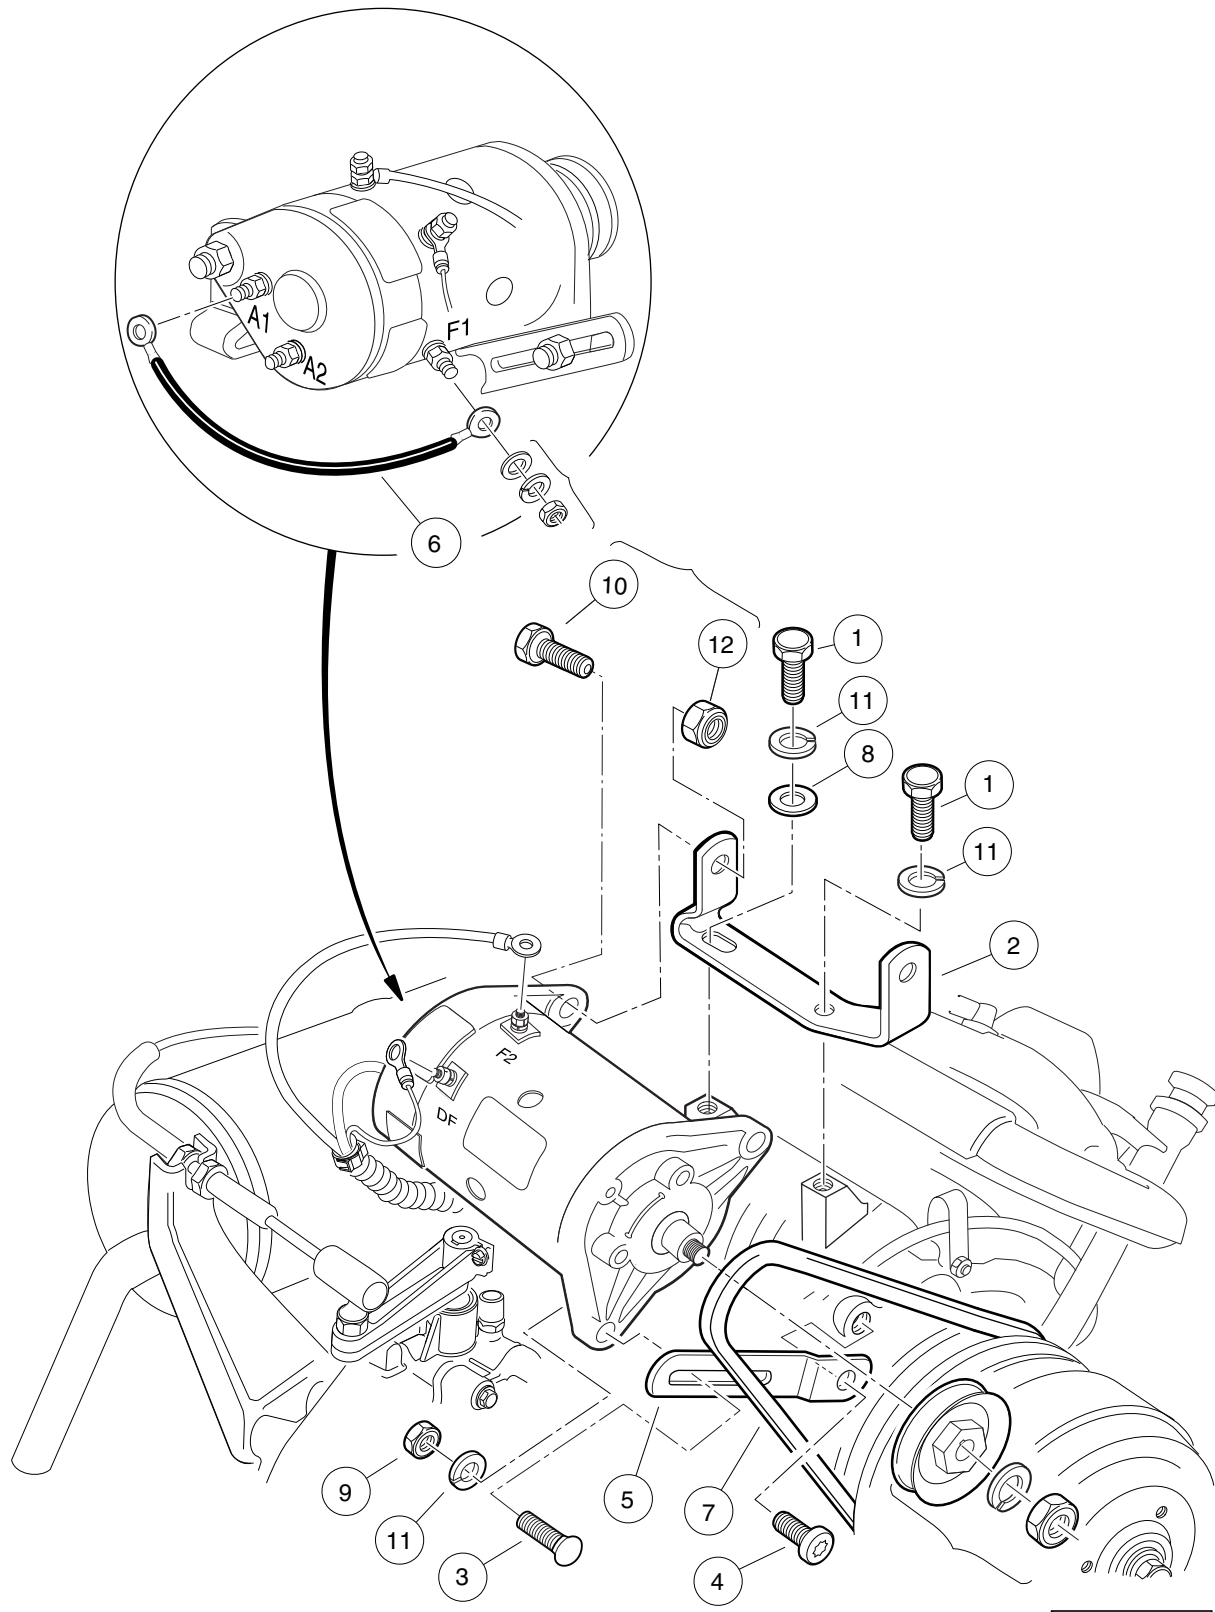

000239-001

FE350 STARTER/GENERATOR MOUNTING – GASOLINE VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY	6	G
		1 2 3 4			
1	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	2		
2	<u>101524002</u>	Bracket, Starter/Generator Mounting	1		
3	<u>1015932</u>	Bolt, Carriage, 5/16-18	1		
4	<u>1016074</u>	Screw, M8-1.25 X 18mm Torx	1		
5	<u>1016883</u>	Bracket, Starter/Generator Adjustment	1		
6	<u>101837301</u>	Wire Assy, #6 Green	1		
7	<u>101916701</u>	V-Belt	1		
8	<u>1241</u>	Washer, 5/16 Type A Flat	1		
9	<u>1242</u>	Nut, 5/16-18 Hex	1		
10	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	2		
11	<u>7174</u>	Lockwasher, 5/16 Split	3		
12	<u>8754</u>	Locknut, 3/8-16 Hex	2		

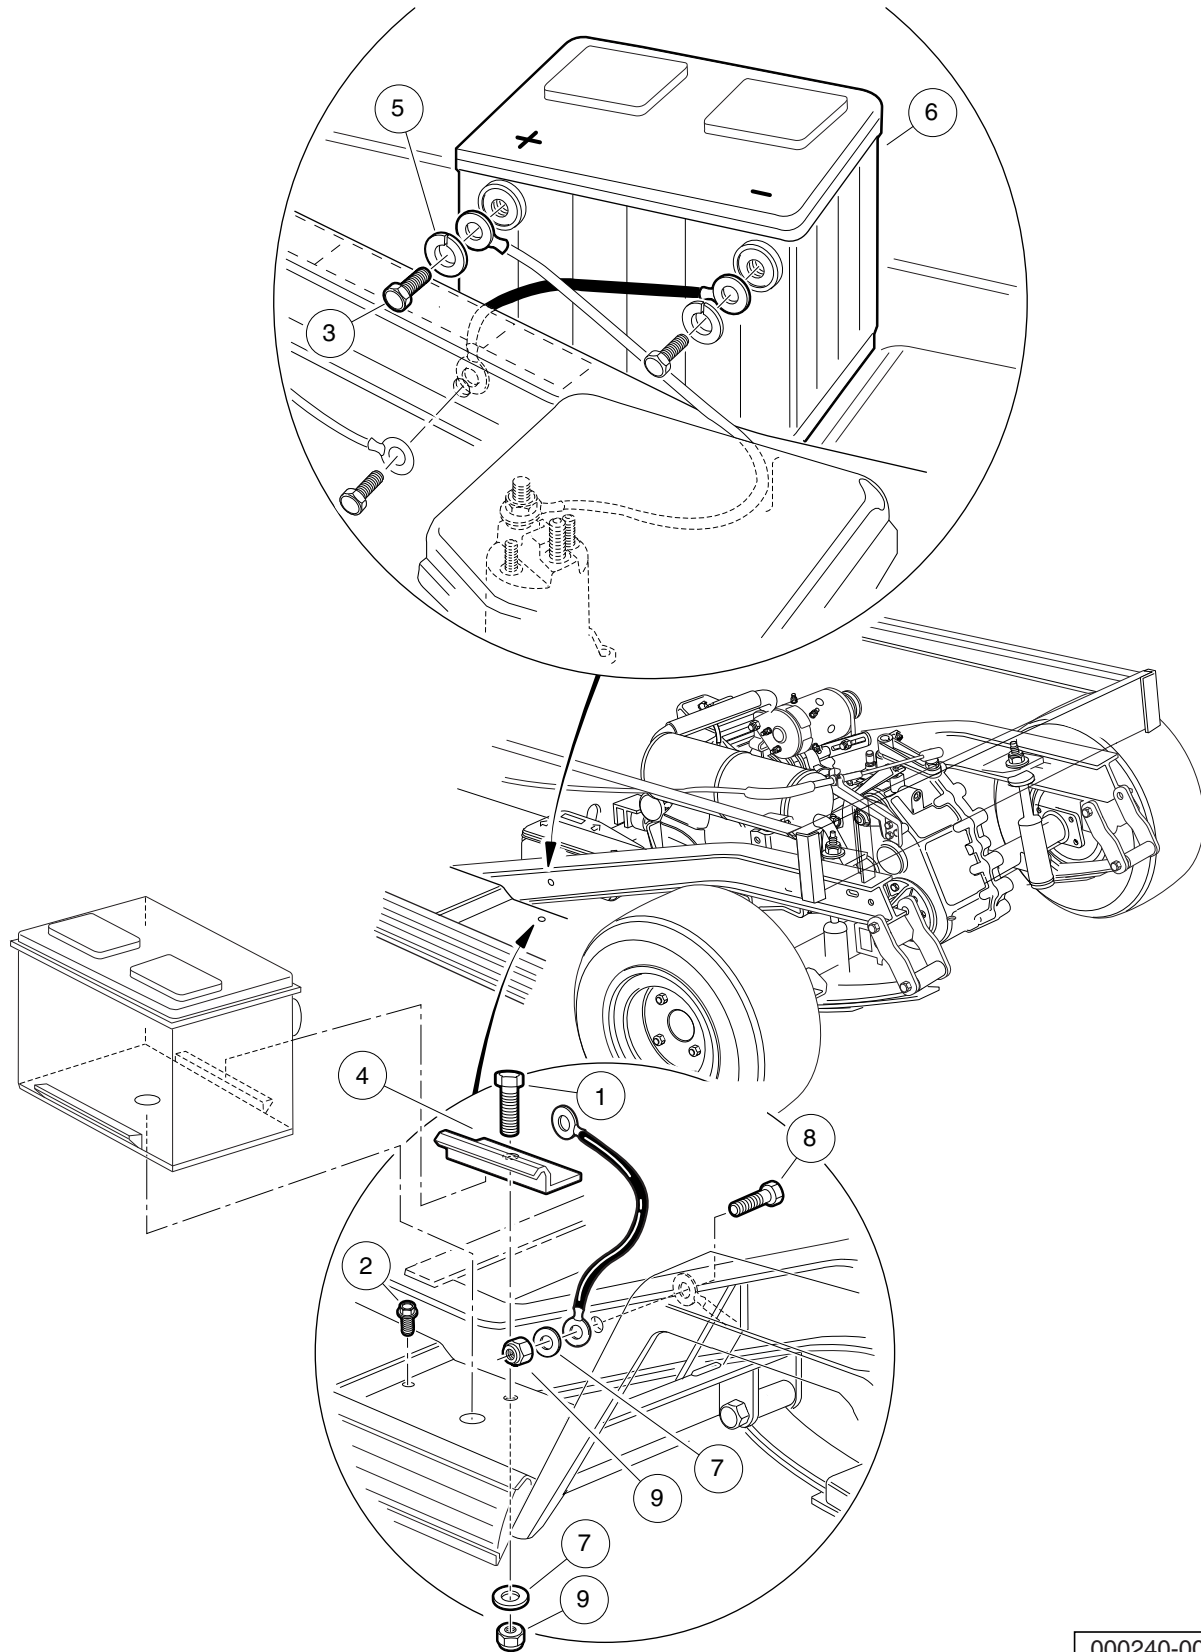

000240-001

BATTERY – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1	
2	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	1	
3	<u>1014375</u>	Screw, 3/8-16 X 0.50 Stainless Steel Hex-Head	2	
4	<u>101898001</u>	Clamp, Battery	1	
5	<u>102355301</u>	Lockwasher, #10 Split Ss	2	
6	N/A	Battery, Start, 12v	1	
7	<u>1241</u>	Washer, 5/16 Type A Flat	2	
8	<u>7173</u>	Screw, 5/16-18 X 0.75 Hex-Head Cap	1	
9	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	

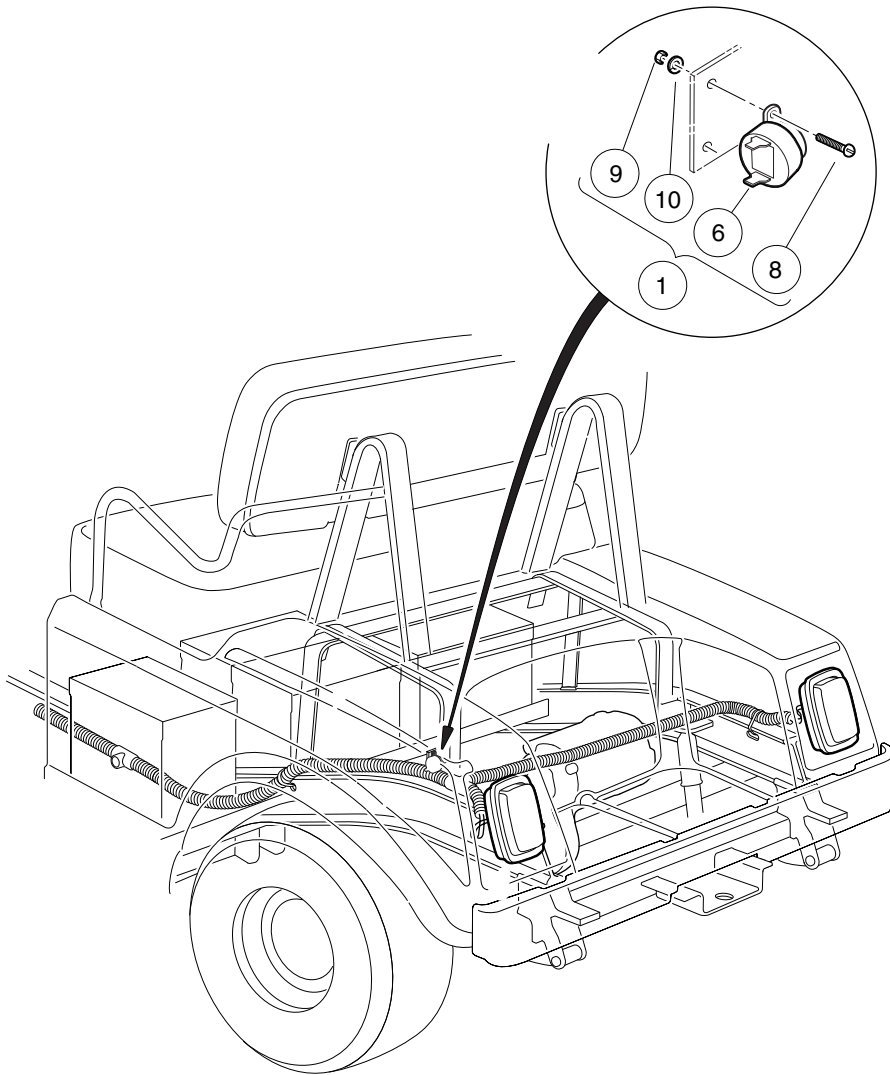

000433-001

REAR REVERSE BUZZER – VILLAGER 6 AND 8

ITEM	PART NO.	DESCRIPTION	QTY	6	G
		1 2 3 4			
1	<u>1016859</u>	Kit, Reverse Buzzer (includes items 2 through 10)	1		
2	<u>1011229</u>	Locknut, #6-32 Whiz	1		
3	<u>1012431</u>	Washer, #4 Flat	2		
4	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1		
5	<u>1016849</u>	Screw, #4-24 X 0.33 Pan-Head Machine	2		
6	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1		
7	<u>1016857</u>	Wire Assembly Black #18	1		
8	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2		
9	<u>8057</u>	Nut, #4-40 Hex Machine	2		
10	<u>8058</u>	Lockwasher, #4 Split	2		
Note: Note: Items 2 through 5 and 7 are included in the kit, but are not used in this application.					



6

G

FE350 ENGINE WITHOUT ACR

7

G

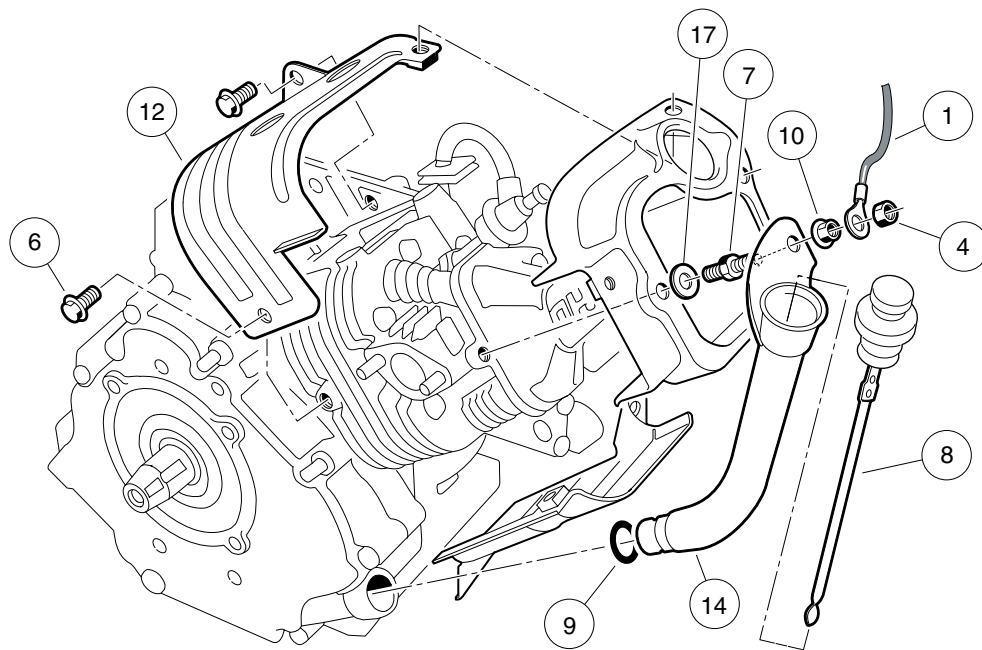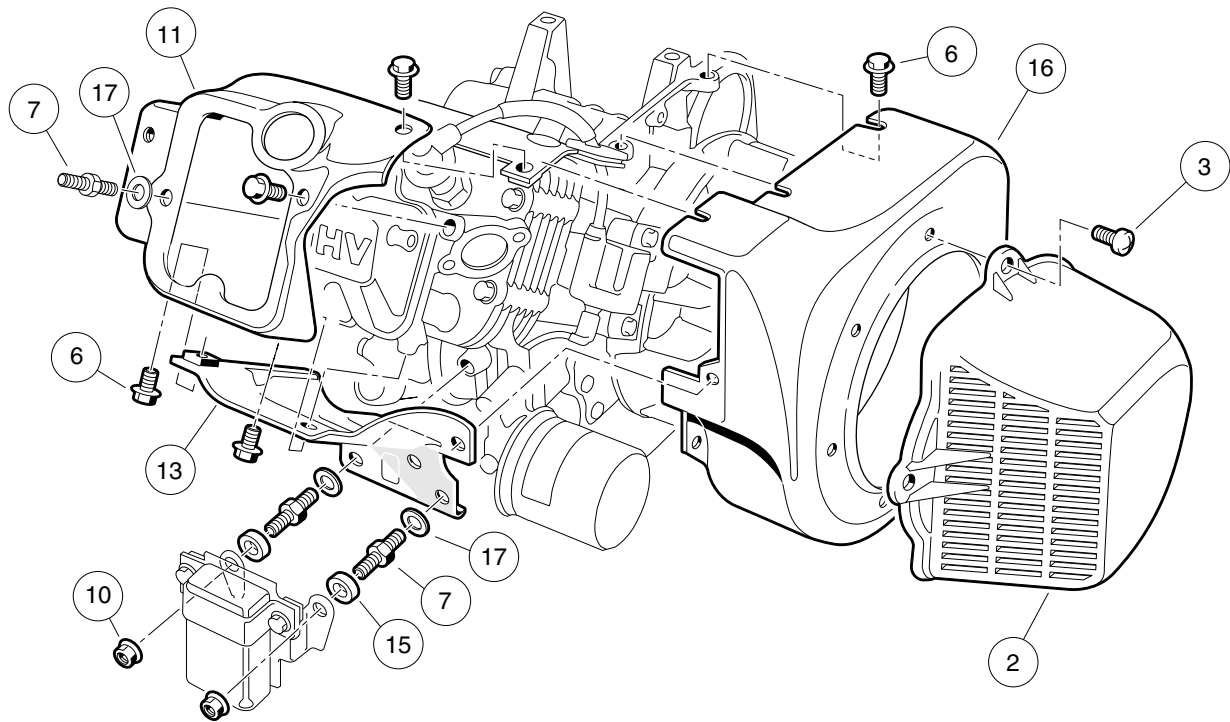


000201-001

AS11 FE350 ENGINE WITHOUT ACR (AUTOMATIC COMPRESSION RELEASE) – SHROUDS AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015332</u>	Wire Assembly, #10, Uninsulated	1
2	<u>1015649</u>	Shroud, Fan	1
3	<u>1015969</u>	Screw, M6-1.00 X 10mm Pan Hd	4
4	<u>101887601</u>	Locknut, M6-1.00 Nylon Insert	1
5	<u>101953802</u>	Engine, FE350 (cw) without ACR * (includes items 6 through 17)	1
6	<u>1016456</u>	Bolt, Flange Head, M6 x 1 x 12 mm	14
7	<u>1016507</u>	Bolt, Two-Ended	3
8	<u>1016531</u>	Dipstick	1
9	<u>1016539</u>	O-Ring	1
10	<u>1016547</u>	Nut, M6 Flange	3
11	<u>1017474</u>	Shroud, Engine	1
12	<u>1017475</u>	Shroud, Engine	1
13	<u>1017476</u>	Shroud, Engine	1
14	<u>1017486</u>	Tube, Oil Filler	1
15	<u>1017500</u>	Spacer 6.50 X 12 X 5.5	2
16	<u>101916101</u>	Housing, FE350 Fan	1
17	N/A	Washer, 6mm Flat	3
* Note: FE350 engine component listings span several pages.			

7
G

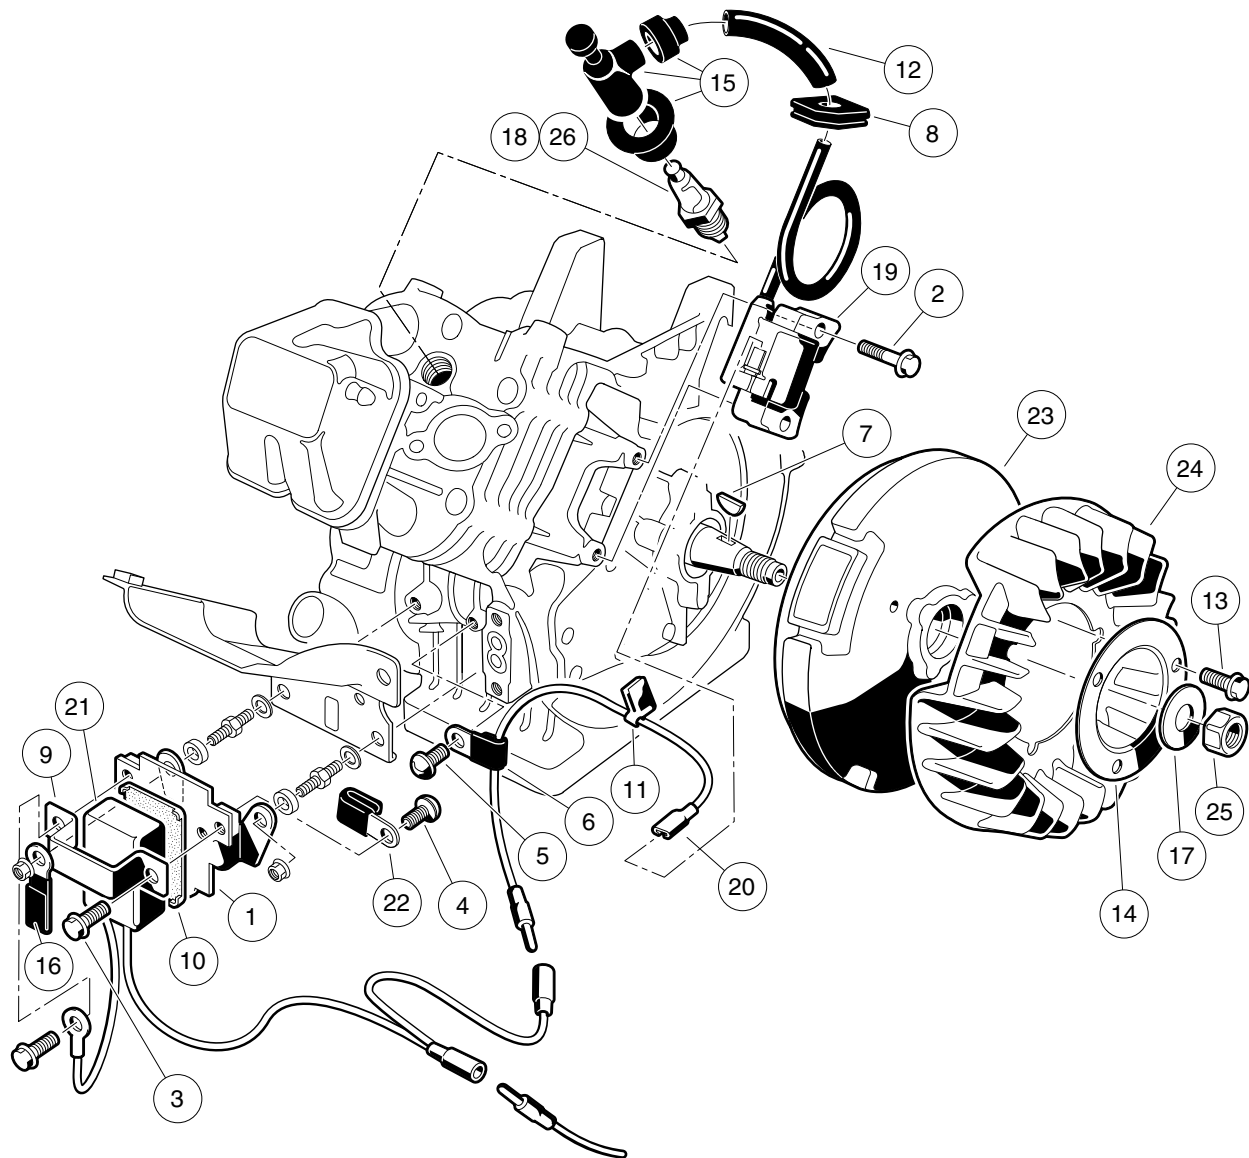


000202-001

AS11 FE350 ENGINE – IGNITION COMPONENTS AND FLYWHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016445	Bracket, RPM Limiter	1
2	<u>1016455</u>	Bolt, Flange Head	2
3	1016456	Bolt, Flange Head, M6 x 1 x 12 mm	2
4	<u>1016497</u>	Screw, Pan WP Cross	1
5	<u>1016544</u>	Screw	1
6	<u>1016561</u>	Clamp	1
7	<u>1016562</u>	Key	1
8	<u>1016578</u>	Ignition, Grommet	1
9	<u>1016579</u>	Band, RPM Limiter Mount	1
10	1016586	Damper, RPM Limiter	1
11	<u>1016587</u>	Clamp	1
12	<u>1016588</u>	Tube, 7mm X 10mm X 70mm	1
13	<u>1017448</u>	Bolt, Flanged	3
14	<u>1017455</u>	Plate, Flywheel Fan	1
15	<u>1017463</u>	Cap Asm Plug	1
16	<u>1017468</u>	Clamp	1
17	<u>1017490</u>	Washer, Flat	1
18	<u>101881101</u>	Spark Plug, OHV (Autolite)	1
19	<u>101909201</u>	Coil, Ignition	1
20	<u>101909301</u>	Lead Wire Assy	1
21	101909401	Limiter, RPM	1
22	101909501	Clamp, Steel	1
23	<u>101916201</u>	Flywheel	1
24	<u>101916301</u>	Fan (cw)	1
25	N/A	Nut, Hex, 18 mm Fine	1
26	<u>AM10724</u>	Spark Plug, OHV (NGK)	1

7


G

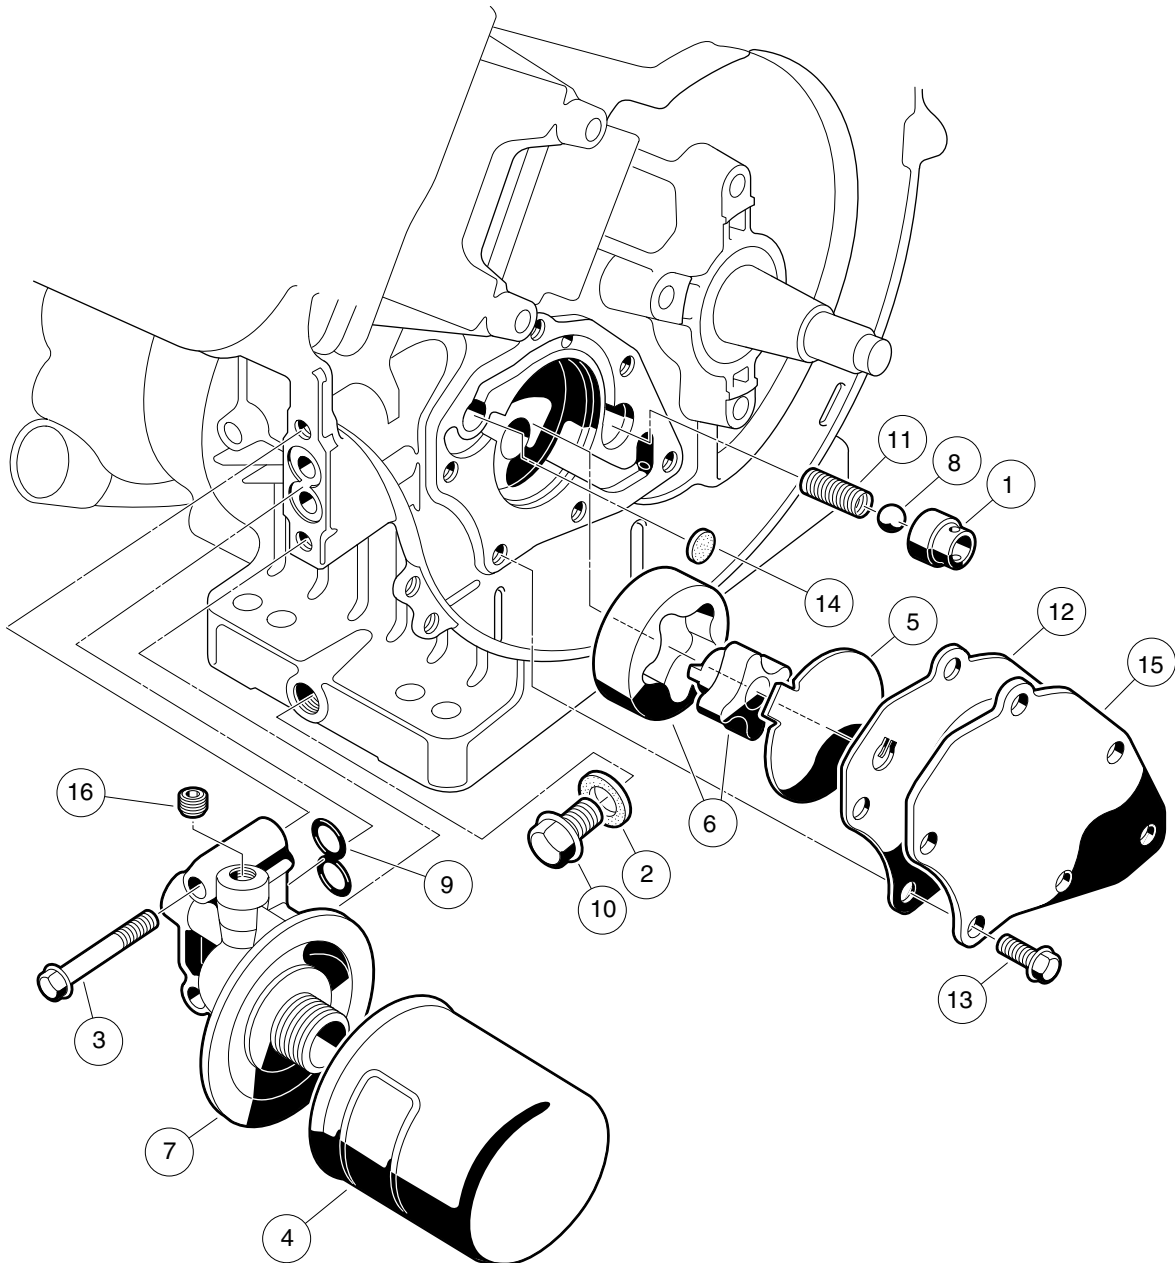

000203-001

FE350 ENGINE – OIL CIRCULATION

ITEM	PART NO.	DESCRIPTION	QTY	7	G
		1 2 3 4			
1	1016429	Seat, Value Oil Press Relief	1		
2	<u>1016432</u>	Gasket, Drain Plug	1		
3	<u>1016457</u>	Bolt, Flange Head	2		
4	<u>1016467</u>	Filter, Oil	1		
5	<u>1016473</u>	Plate, Oil Pump	1		
6	<u>101648203</u>	Oil Pump And Rotor	1		
7	<u>1016502</u>	Bracket, Oil Filter Mount	1		
8	<u>1016537</u>	Ball, Steel, Press, Relief	1		
9	<u>1016570</u>	O-Ring	1		
10	1016576	Plug, Drain	1		
11	<u>1016581</u>	Spring	1		
12	<u>1017442</u>	Gasket	1		
13	<u>1017456</u>	Bolt, Flanged	6		
14	<u>1017458</u>	Filter	1		
15	<u>1017460</u>	Cover, Pump	1		
16	<u>1017507</u>	Plug	2		

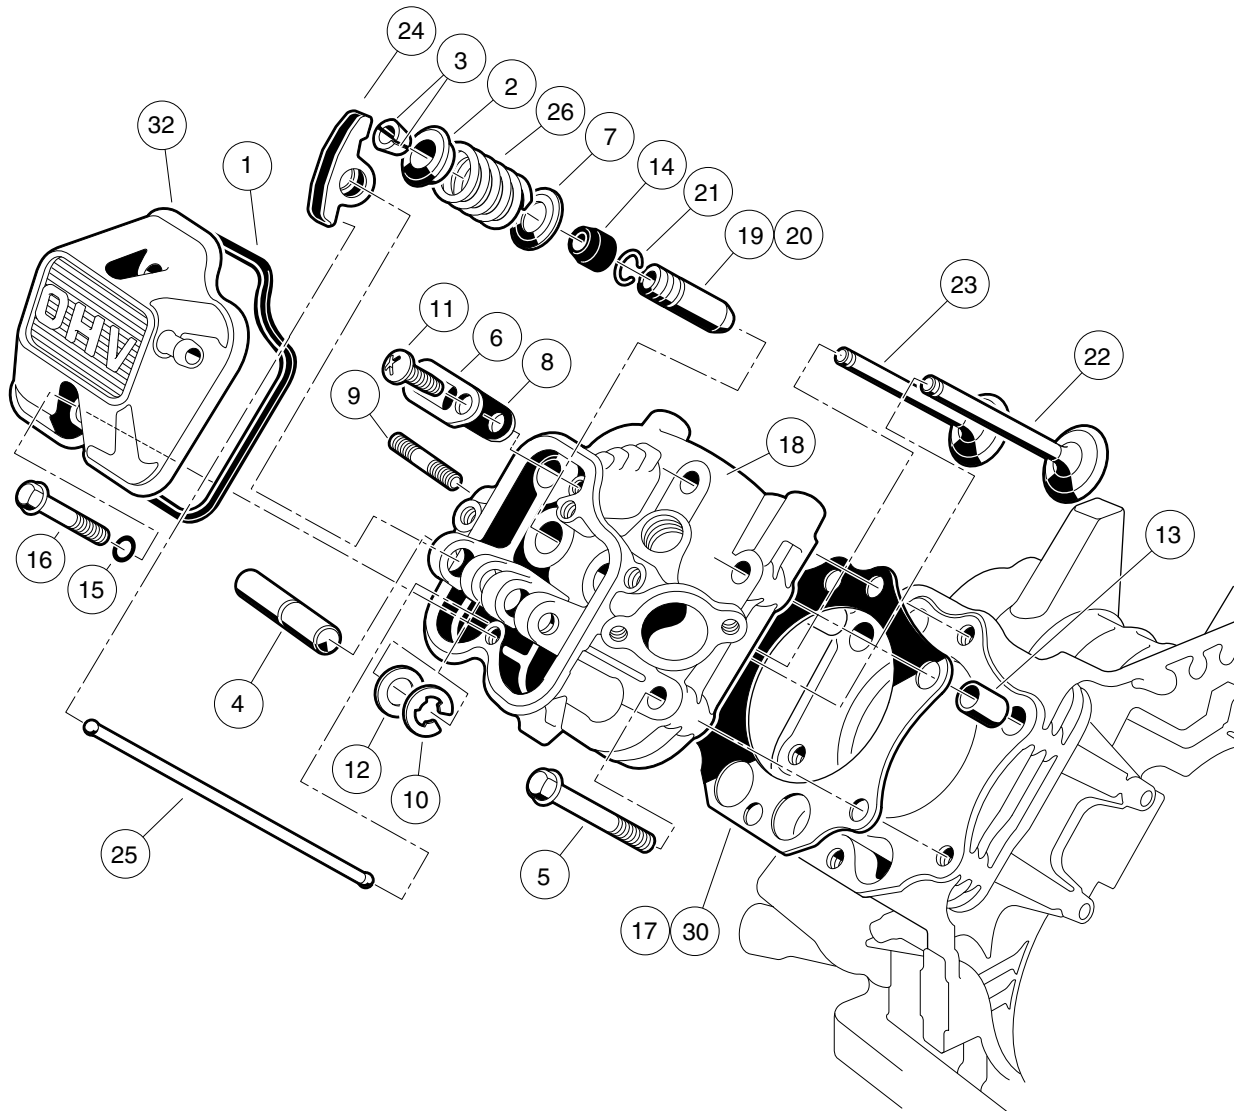


000204-001

AS11 FE350 ENGINE – CYLINDER HEAD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016436</u>	Gasket, Rocker Case	1
2	<u>1016449</u>	Retainer, Valve Spring	2
3	<u>1016450</u>	Collet	4
4	<u>1016452</u>	Shaft, Rocker	1
5	<u>1016458</u>	Bolt, Flange Head, M8 x 1.25 x 45 mm	6
6	<u>1016474</u>	Plate	1
7	<u>1016479</u>	Seat, Spring	2
8	<u>1016483</u>	Valve	1
9	<u>1016489</u>	Stud, Two-Ended, M8-1.25	2
10	<u>1016517</u>	Circlip, Type-E	1
11	<u>1016544</u>	Screw	1
12	<u>1016549</u>	Washer, 12.1x19x1.8	1
13	<u>1016563</u>	Pin	2
14	<u>1016566</u>	Seal, Oil	2
15	<u>1016569</u>	O-Ring	2
16	<u>1016583</u>	Bolt, 6x35	2
17	<u>1017434</u>	Gasket, Head	1
18	<u>1017435</u>	Assembly, Cylinder Head, FE350 (includes items 19 through 21)	1
19	<u>1016518</u>	Guide, Valve, Exhaust	1
20	<u>1016519</u>	Guide, Valve	1
21	<u>1016560</u>	Snap Ring	2
22	<u>1017444</u>	Valve, Intake	1
23	<u>1017445</u>	Valve, Exhaust	1
24	<u>1017446</u>	Arm, Rocker	2
25	<u>1017454</u>	Rod, Push	2
26	<u>1017473</u>	Spring, Engine Valve	2
27	<u>102304801</u>	Kit, Gasket, FE350 (includes items 28 through 31)	1
28	<u>1016440</u>	Gasket, Engine to Insulator	1
29	<u>1016904</u>	Gasket, Exhaust	1
30	<u>1017434</u>	Gasket, Head	1
31	<u>1017443</u>	Gasket, Crankcase Cover	1
32	<u>102753401</u>	Case, Rocker	1
		Note: Item 28 is not a component of the FE350 engine.	

7

G

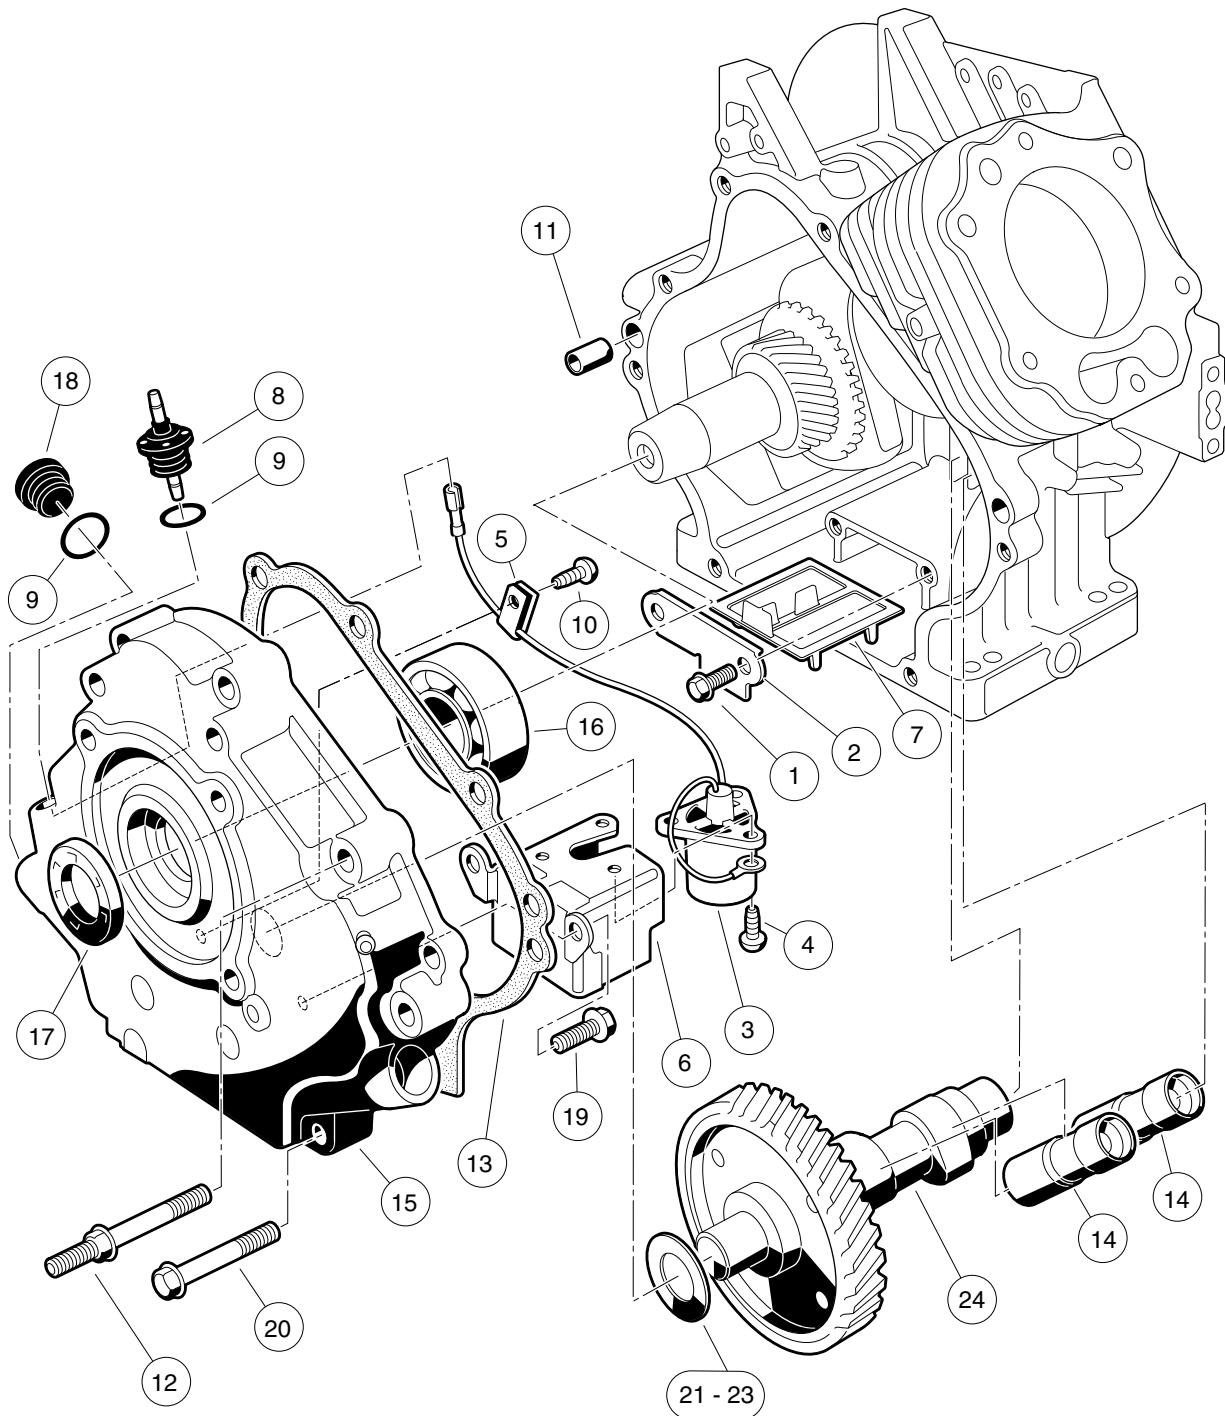


000205-002

AS11 FE350 ENGINE WITHOUT ACR – CRANKCASE, CAMSHAFT, AND OIL SENSOR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016454</u>	Bolt, Flange Head, M5 x 0.8 x 8 mm	2
2	<u>1016472</u>	Plate, Oil Filter Screen	1
3	<u>1016494</u>	Sensor, Oil Level	1
4	<u>1016496</u>	Screw, Cross Pan-Head, M4 x 0.7 x 8 mm	3
5	<u>1016506</u>	Clamp	1
6	<u>1016510</u>	Bracket, Switch, Oil Level	1
7	<u>1016521</u>	Screen, Oil Filter	1
8	<u>1016535</u>	Connector, Cord	1
9	<u>1016538</u>	O-Ring	2
10	<u>1016544</u>	Screw	1
11	<u>1016564</u>	Pin	2
12	<u>1016584</u>	Bolt, Two-Ended, M8 x 1.25 x 69 mm	2
13	<u>1017443</u>	Gasket, Crankcase Cover	1
14	<u>1017447</u>	Adjuster, Lash	2
15	<u>1017472</u>	Cover Crankcase	1
16	<u>1017487</u>	Bearing, Ball	1
17	<u>1017504</u>	Seal, Oil	1
18	<u>1017508</u>	Plug	1
19	<u>1017513</u>	Bolt Switch Bracket	2
20	<u>1017514</u>	Screw, M8-1.25 X 45mm Hex	6
21	<u>101751801</u>	Shim, 0.3	1
22	<u>101751802</u>	Shim, 0.4	1
23	<u>101751803</u>	Shim, 0.5	1
24	<u>102431001</u>	Camshaft, FE350 without ACR, 44-Tooth	1

7

G

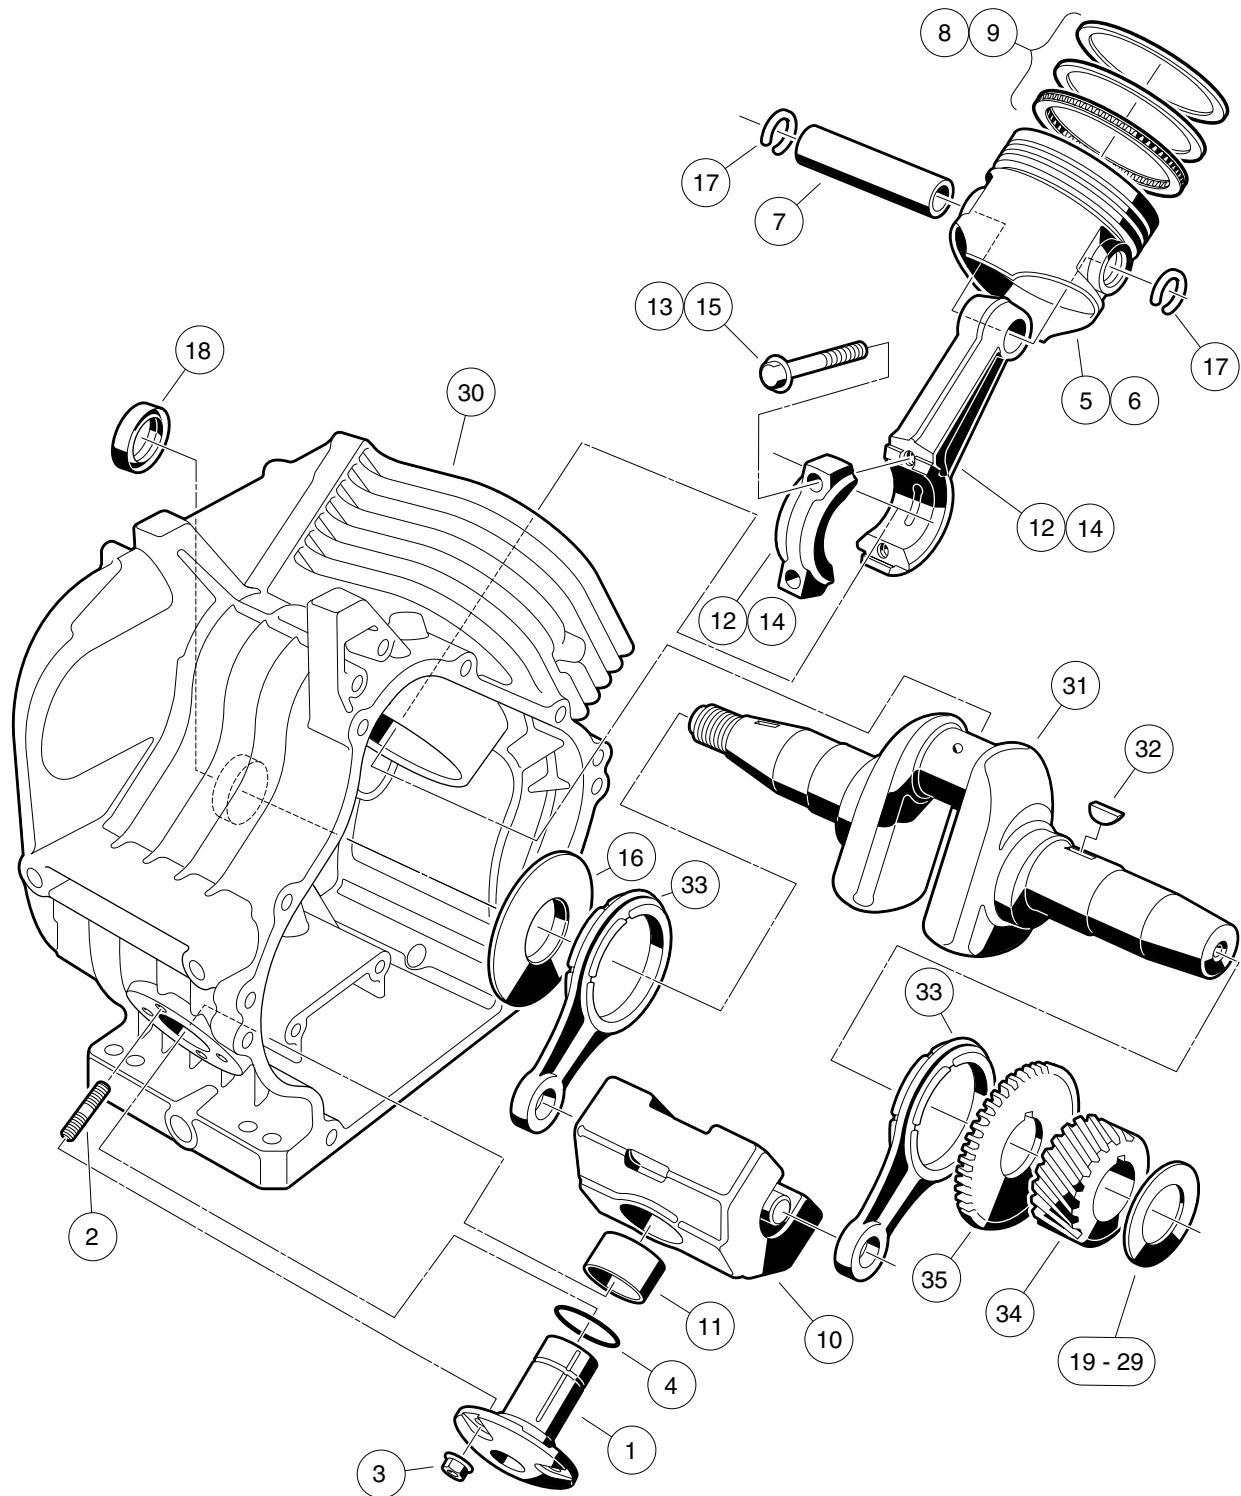

000206-001

AS11 FE350 ENGINE – CRANKCASE AND CRANKSHAFT


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016470	Shaft, Guide, Counterbalance	1
2	<u>1016541</u>	Stud, 6x14	4
3	1016547	Nut, M6 Flange	4
4	<u>1016571</u>	O-Ring	1
5	<u>101744901</u>	Piston, Standard	1
6	<u>101744902</u>	Piston, 0.50 mm Oversize	1
7	1017450	Pin, Piston	1
8	<u>101745101</u>	Ring Set, Standard Piston	1
9	<u>101745102</u>	Ring Set, Piston, 0.50 mm Oversize	1
10	<u>1017453</u>	Fe400 Counterbalance Weight (includes item 11)	1
11	1017510	Bearing, Plain	1
12	101745701	Asm, Con. Rod Std (includes item 13)	1
13	<u>1017512</u>	Bolt	2
14	<u>101745702</u>	Rod Assembly Connecting Rod 0.5mm (includes item 15)	1
15	<u>1017512</u>	Bolt	2
16	1017501	Spacer	1
17	<u>1017502</u>	Snap Ring	2
18	<u>1017503</u>	Seal, Oil	1
19	<u>101773301</u>	Shim, Crankshaft, 1.18mm	1
20	<u>101773302</u>	Shim, Crankshaft, 1.25mm	1
21	<u>101773303</u>	Shim, Crankshaft, 1.32mm	1
22	<u>101773304</u>	Shim, Crankshaft, 1.39mm	1
23	<u>101773305</u>	Shim, Crankshaft, 1.46mm	1
24	<u>101773306</u>	Shim, Crankshaft, 1.53mm	1
25	<u>101773307</u>	Shim, Crankshaft, 1.60mm	1
26	<u>101773308</u>	Shim, Crankshaft, 1.67mm	1
27	<u>101773309</u>	Shim, Crankshaft, 1.74mm	1
28	<u>101773310</u>	Shim, Crankshaft, 1.11mm	1
29	<u>101773311</u>	Shim, Crankshaft, 1.81mm	1
30	<u>101916001</u>	Crankcase Complete, FE350 (cw)	1
31	<u>102430901</u>	Crankshaft, FE350 Left-Hand, 22-Tooth (includes items 32 through 35)	1
32	<u>1016562</u>	Key	1
33	<u>1017471</u>	Rod	2
34	N/A	Gear, Helical	1
35	N/A	Gear, Spur	1

7

G

7

G

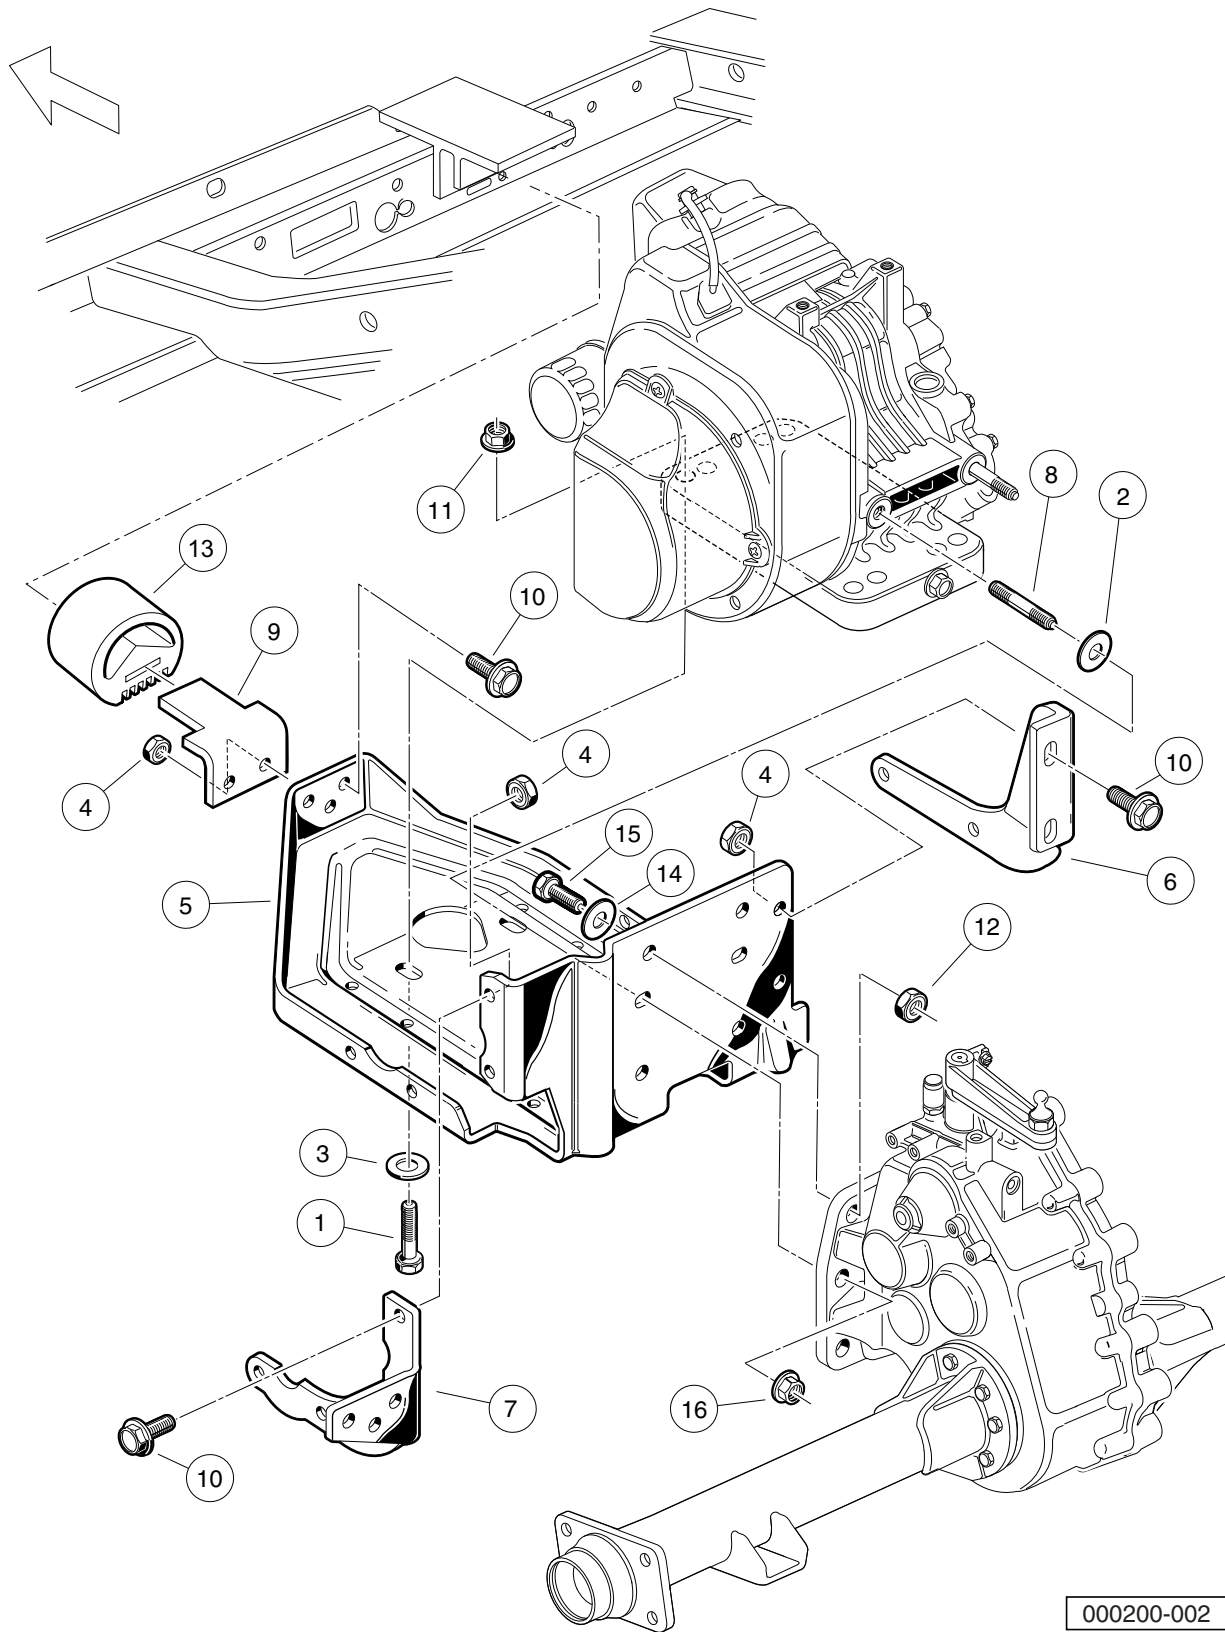

000200-002

FE350 ENGINE MOUNTING


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	4
2	<u>1011697</u>	Washer, 5/16 Flat	2
3	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	4
4	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	10
5	<u>101827101</u>	Plate, Engine Mounting	1
6	<u>101832601</u>	Stiffener (PTO Side)	1
7	<u>101832701</u>	Stiffener (Flywheel Side)	1
8	<u>101833101</u>	Stud, M8-1.25 X 50 mm Two-Ended	2
9	<u>101834601</u>	Snubber Bracket	1
10	<u>101884801</u>	Screw, 5/16-24 X 0.875 Grade-8	10
11	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4
12	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4
13	<u>102540301</u>	Inner Frame Snubber	1
14	<u>334</u>	Washer, 3/8 Type A Flat	4
15	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	4
16	<u>96704416</u>	Nut Flg, M8 X 1.25 Serrated	2

7

G

7

G

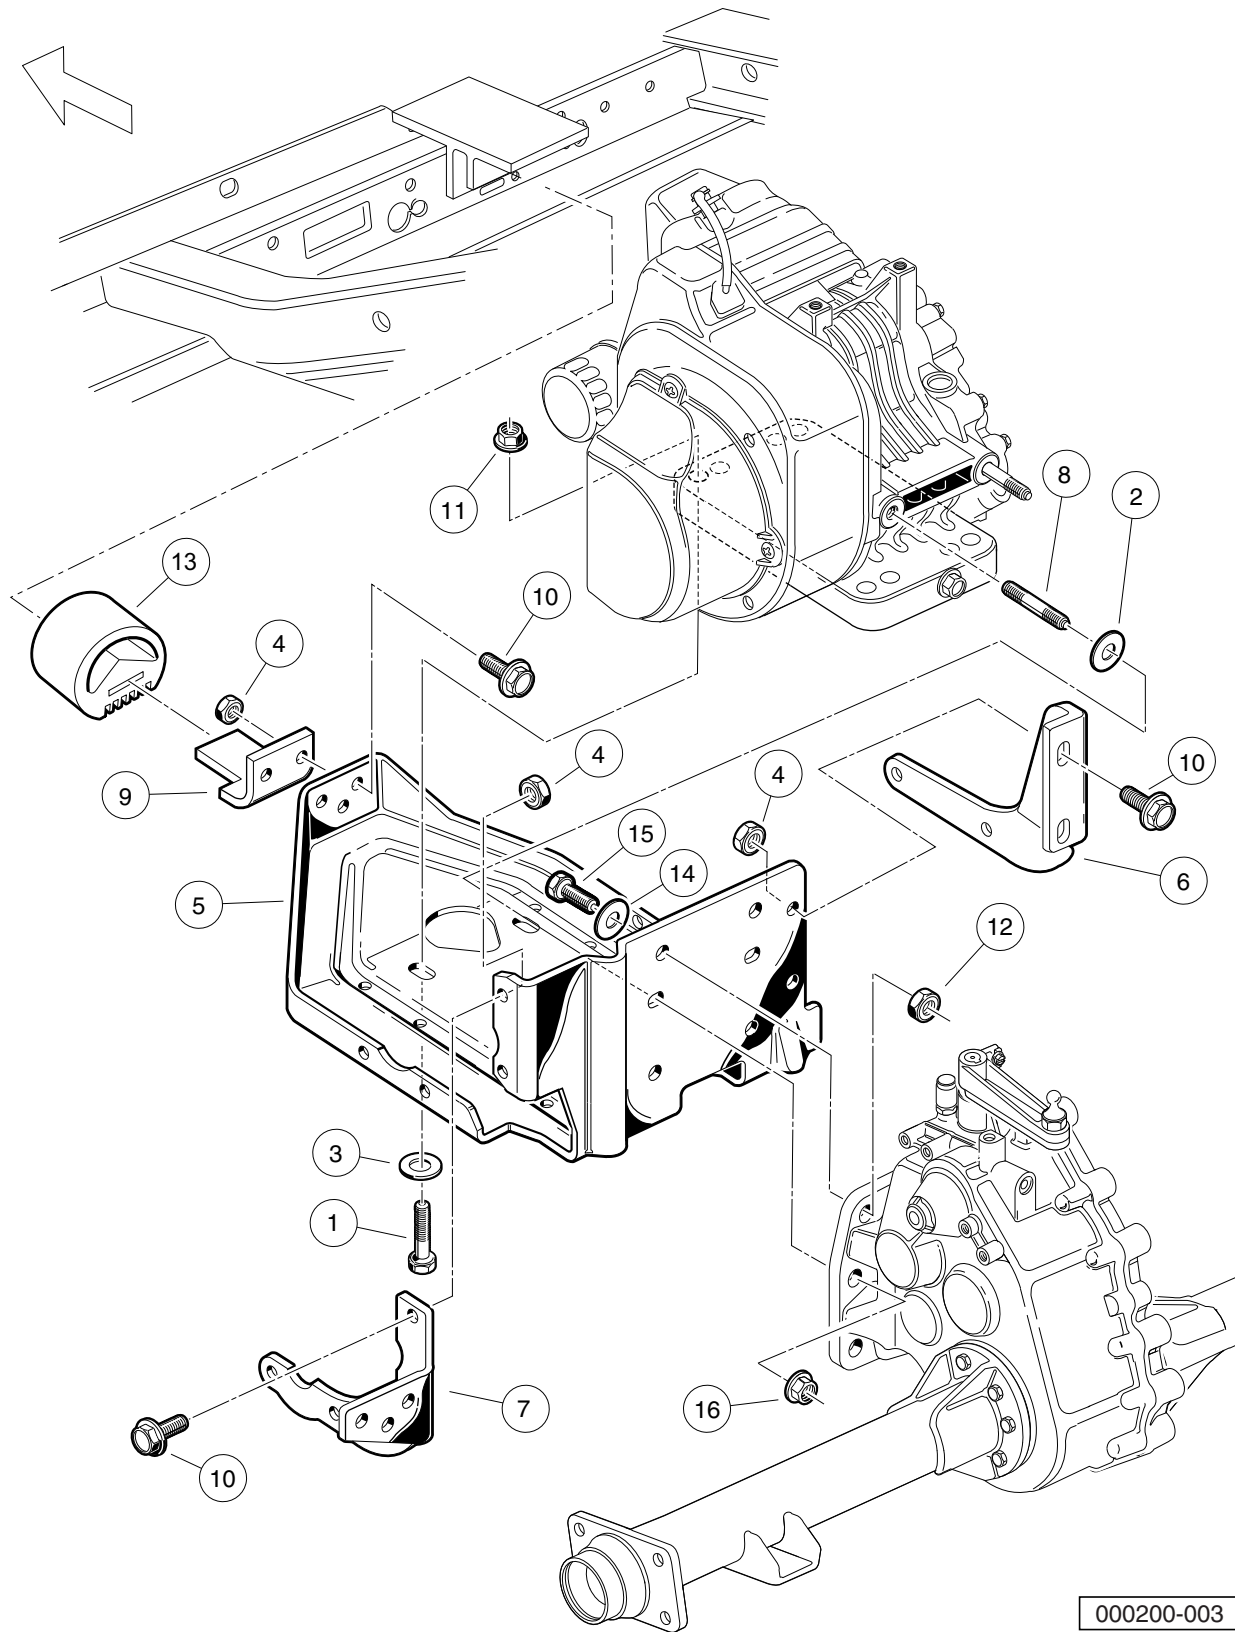

000200-003

FE350 ENGINE MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	4
2	<u>1011697</u>	Washer, 5/16 Flat	2
3	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	4
4	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	10
5	<u>101827101</u>	Plate, Engine Mounting	1
6	<u>101832601</u>	Stiffener (PTO Side)	1
7	<u>101832701</u>	Stiffener (Flywheel Side)	1
8	<u>101833101</u>	Stud, M8-1.25 X 50 mm Two-Ended	2
9	<u>101834601</u>	Snubber Bracket	1
10	<u>101884801</u>	Screw, 5/16-24 X 0.875 Grade-8	10
11	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4
12	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4
13	<u>102540301</u>	Inner Frame Snubber	1
14	<u>334</u>	Washer, 3/8 Type A Flat	4
15	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	4
16	<u>96704416</u>	Nut Flg, M8 X 1.25 Serrated	2

7

G


7

G

EXHAUST SYSTEM

8

G

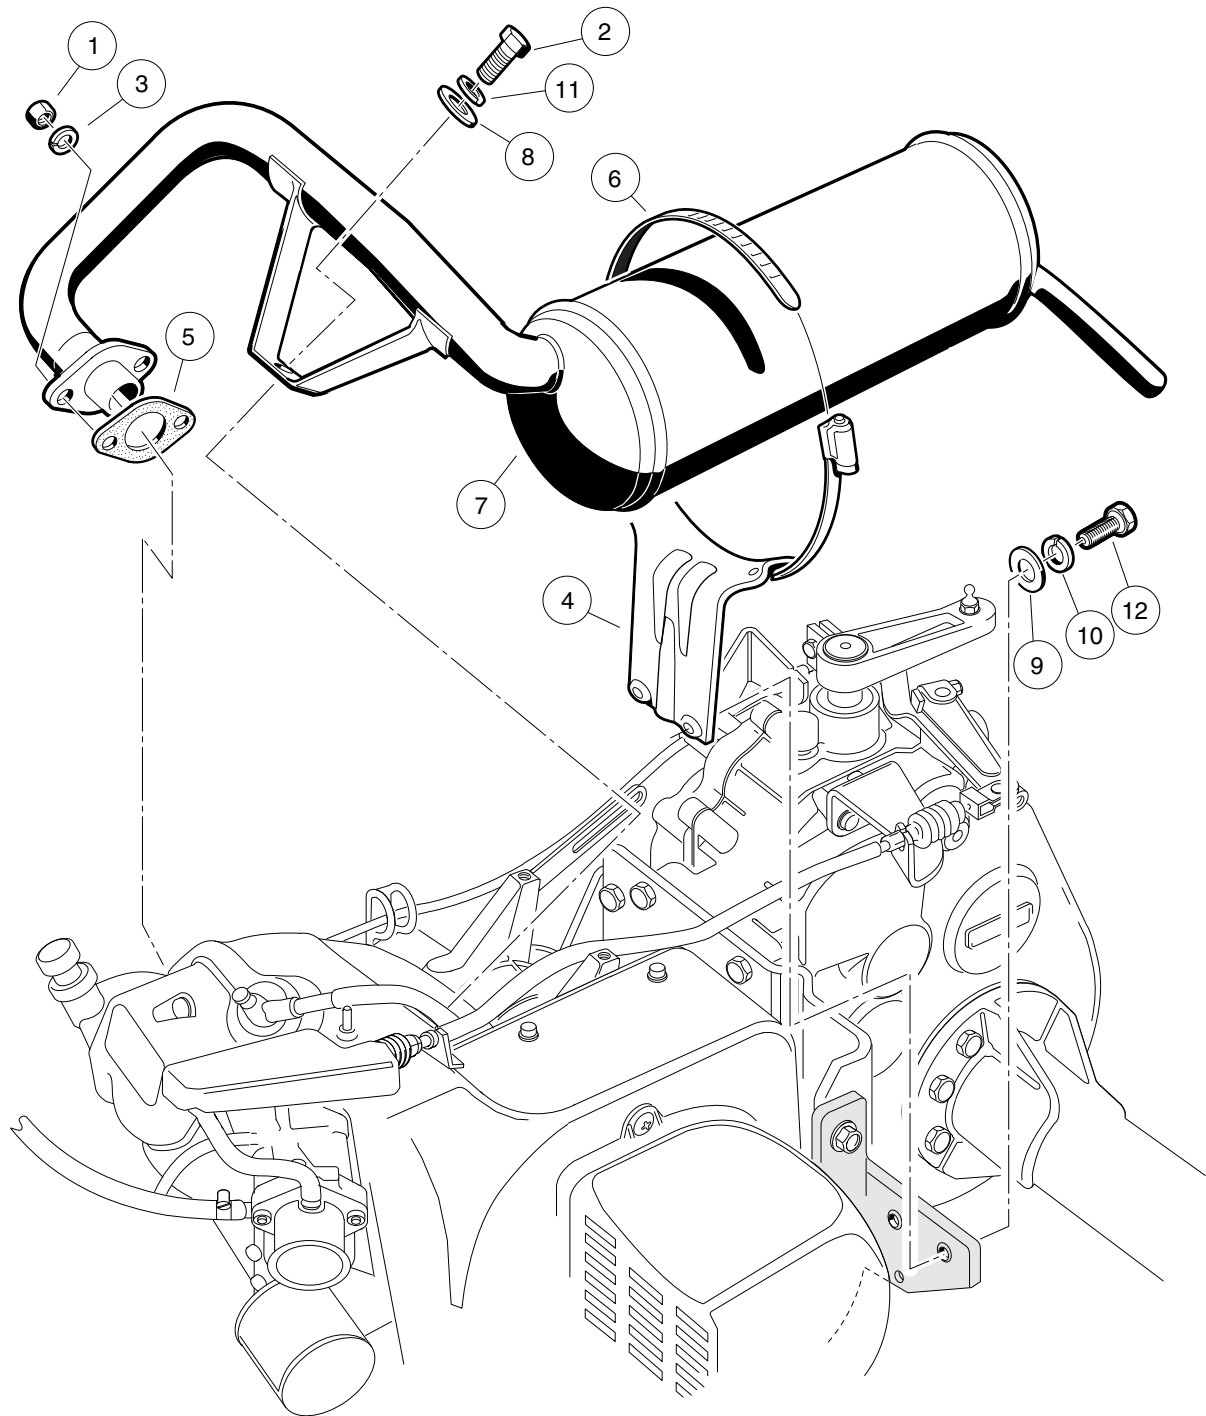

000209-001

EXHAUST SYSTEM – FE350 ENGINE

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>1012528</u>	Nut, M8-1.25 Hex	2	
2	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	1	
3	<u>1013734</u>	Lockwasher, 8mm Split	2	
4	<u>1015814</u>	Bracket, Muffler Mounting	1	
5	<u>1016904</u>	Gasket, Exhaust	1	
6	<u>1017689</u>	Clamp, 5" Muffler Hose	1	
7	<u>101859401</u>	Exhaust System, FE350	1	
8	<u>1241</u>	Washer, 5/16 Type A Flat	1	
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2	
10	<u>451</u>	Lockwasher, 1/4 Split	2	
11	<u>7174</u>	Lockwasher, 5/16 Split	1	
12	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2	


8

G

FUEL, INTAKE, AND GOVERNOR SYSTEMS

9

G

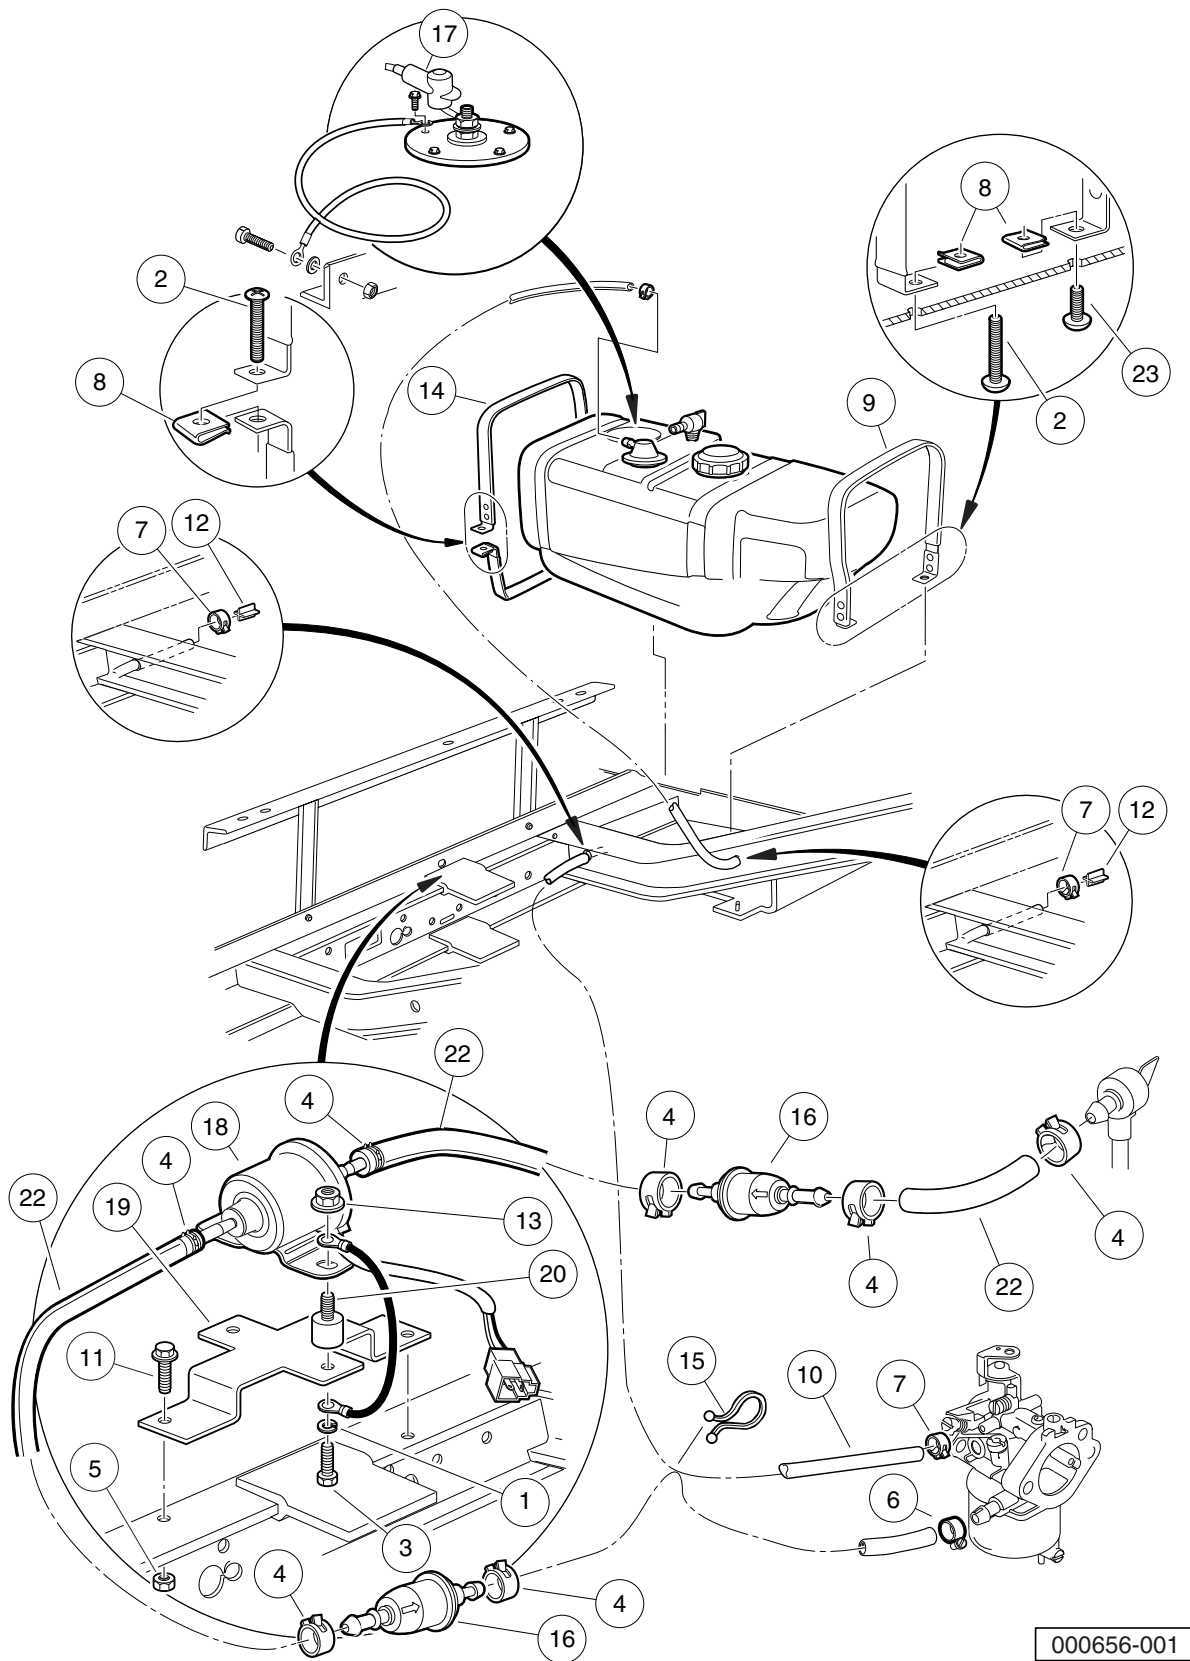


000656-001

FUEL SYSTEM WITH ELECTRIC FUEL PUMP

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011965</u>	Lockwasher, 1/4 Split Ss	2
2	<u>1011988</u>	Screw, 1/4-20 X 2.00 Phillips Truss-Head	2
3	<u>1012124</u>	Screw, 1/4-20 X .50 Hex Hd Cap	2
4	<u>1012649</u>	Clamp, 0.460 Red Hose	7
5	<u>1013061</u>	Locknut, #10-32 Nylon Insert	2
6	<u>1013687</u>	Clamp, 3/8" Hose (screw type)	1
7	<u>1013746</u>	Clamp, 0.301 ID Hose	2
8	<u>1014116</u>	Nut, 1/4-20 Speed	3
9	<u>1014928</u>	Fuel Strap Assembly Rear	1
10	<u>1015137</u>	Fuel Line (available by the foot)	1
11	<u>1017082</u>	Screw, #10-32 X 0.75, Hex-Head Machine	2
12	<u>101824401</u>	Vent Barb	1
13	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	2
14	<u>101955301</u>	Fuel Strap Assy, Front	1
15	<u>101987701</u>	Clamp, Plastic Tie	1
16	<u>102003201</u>	Filter, Fuel, 30 Micron	2
17	N/A	Boot Terminal, Insul	1
18	<u>102225101</u>	Electric Fuel Pump	1
19	<u>102227101</u>	Fuel Pump Bracket	1
20	<u>102227501</u>	Sandwich Mount	2
21	N/A	Fuel System Harness	1
22	<u>102865101</u>	Fuel Line	1
23	<u>8248</u>	Screw, 1/4-20 X 0.75 Truss-Head Machine	1
Note: Item 21 not shown.			


9

 G



FUEL TANK WITH FUEL LEVEL SENDING UNIT


ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	1016004	Tank Kit w/Sending Unit (includes items 2 through 6)	1	
2	<u>1013746</u>	Clamp, 0.301 ID Hose	2	
3	<u>1015137</u>	Fuel Line (available by the foot)	1	
4	<u>101824401</u>	Vent Barb	2	
5	101896901	Fuel Pickup w/Shut-Off Valve	1	
6	<u>103651901</u>	Asm, Tank, Ds Utl W/su† Nano (includes items 7 through 16)	1	
7	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	5	
8	<u>1013462</u>	Sending Unit, Fuel Level *	1	
9	<u>1015139</u>	Insulation Grommet	1	
10	<u>1015143</u>	Vent, Fuel Tank	1	
11	1015921	Wire Assembly #16 Black	1	
12	<u>102406701</u>	Bushing, Line, Return	1	
13	<u>102522001</u>	Gasket, Rubber	1	
14	<u>103372101</u>	Cap, Fuel Tank, Gas, Ratchet	1	
15	<u>103372302</u>	Fuel Pickup w/Shut-Off Valve, 288mm	1	
16	103776901	Tank, Fuel, Top, W/su Nano	1	
17	<u>8797</u>	Nut, #10-32 Brass Hex	1	
* Note: Must replace fuel sending unit gasket when servicing this component.				

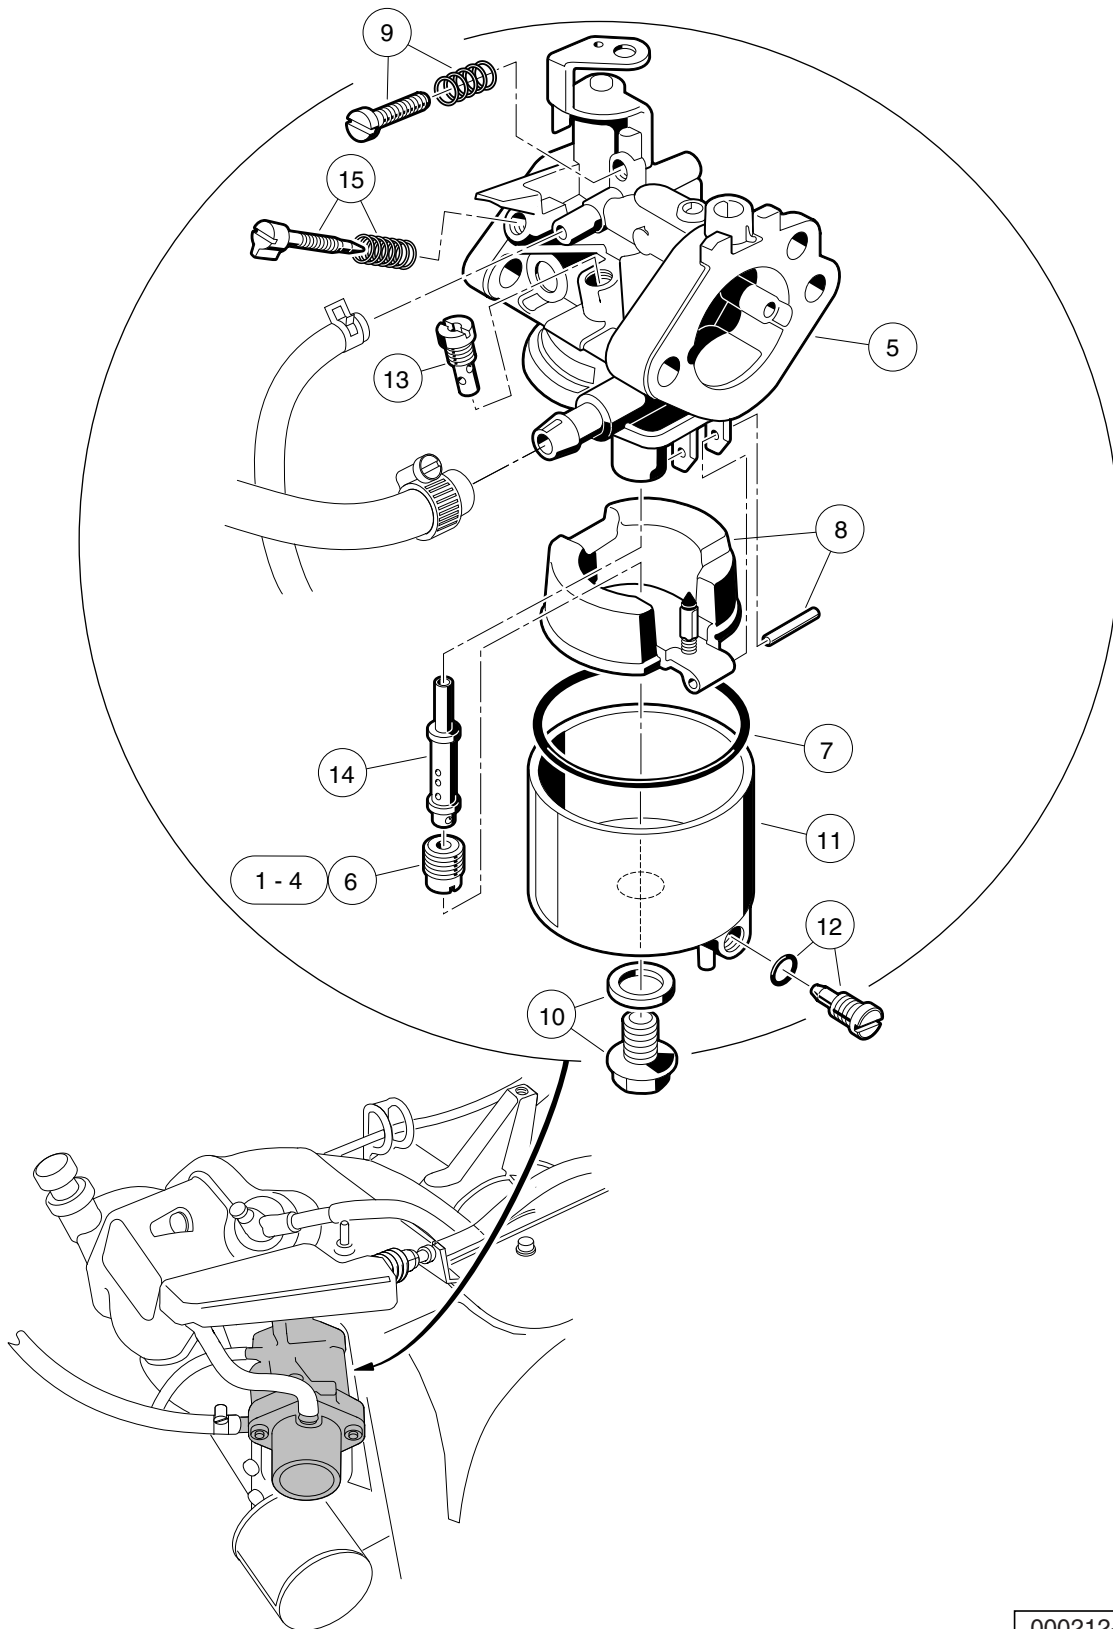

000212-001

CARBURETOR ASSEMBLY – FE350


ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>101642575</u>	Jet, Altitude, # 75	1	
2	<u>101642578</u>	Jet, Altitude, # 78	1	
3	<u>101642580</u>	Jet, Altitude, # 80	1	
4	<u>101642582</u>	Jet, Altitude, # 82	1	
5	<u>101905901</u>	Carburetor, FE350D (includes items 6 through 15)	1	
6	<u>101642585</u>	Jet, Altitude, # 85	1	
7	<u>1016437</u>	Gasket, Carburetor Bowl OHV	1	
8	<u>1016486</u>	Float Assembly	1	
9	<u>1016501</u>	Screw Assembly	1	
10	<u>1016585</u>	Bolt	1	
11	<u>1017461</u>	Chamber Assembly, Float (includes item 12)	1	
12	<u>1016499</u>	Screw Assembly	1	
13	<u>101973101</u>	Jet, #40 Pilot	1	
14	<u>101973301</u>	Nozzle, Main	1	
15	N/A	Assembly, Pilot Air Screw	1	
Note: <u>101642585</u> for 0 - 3,000 feet; <u>101642582</u> for 3,000 - 5,000 feet; <u>101642580</u> for 5,000 - 8,000 feet; <u>101642578</u> for 8,000 - 10,000 feet; <u>101642575</u> for 10,000 feet and higher.				

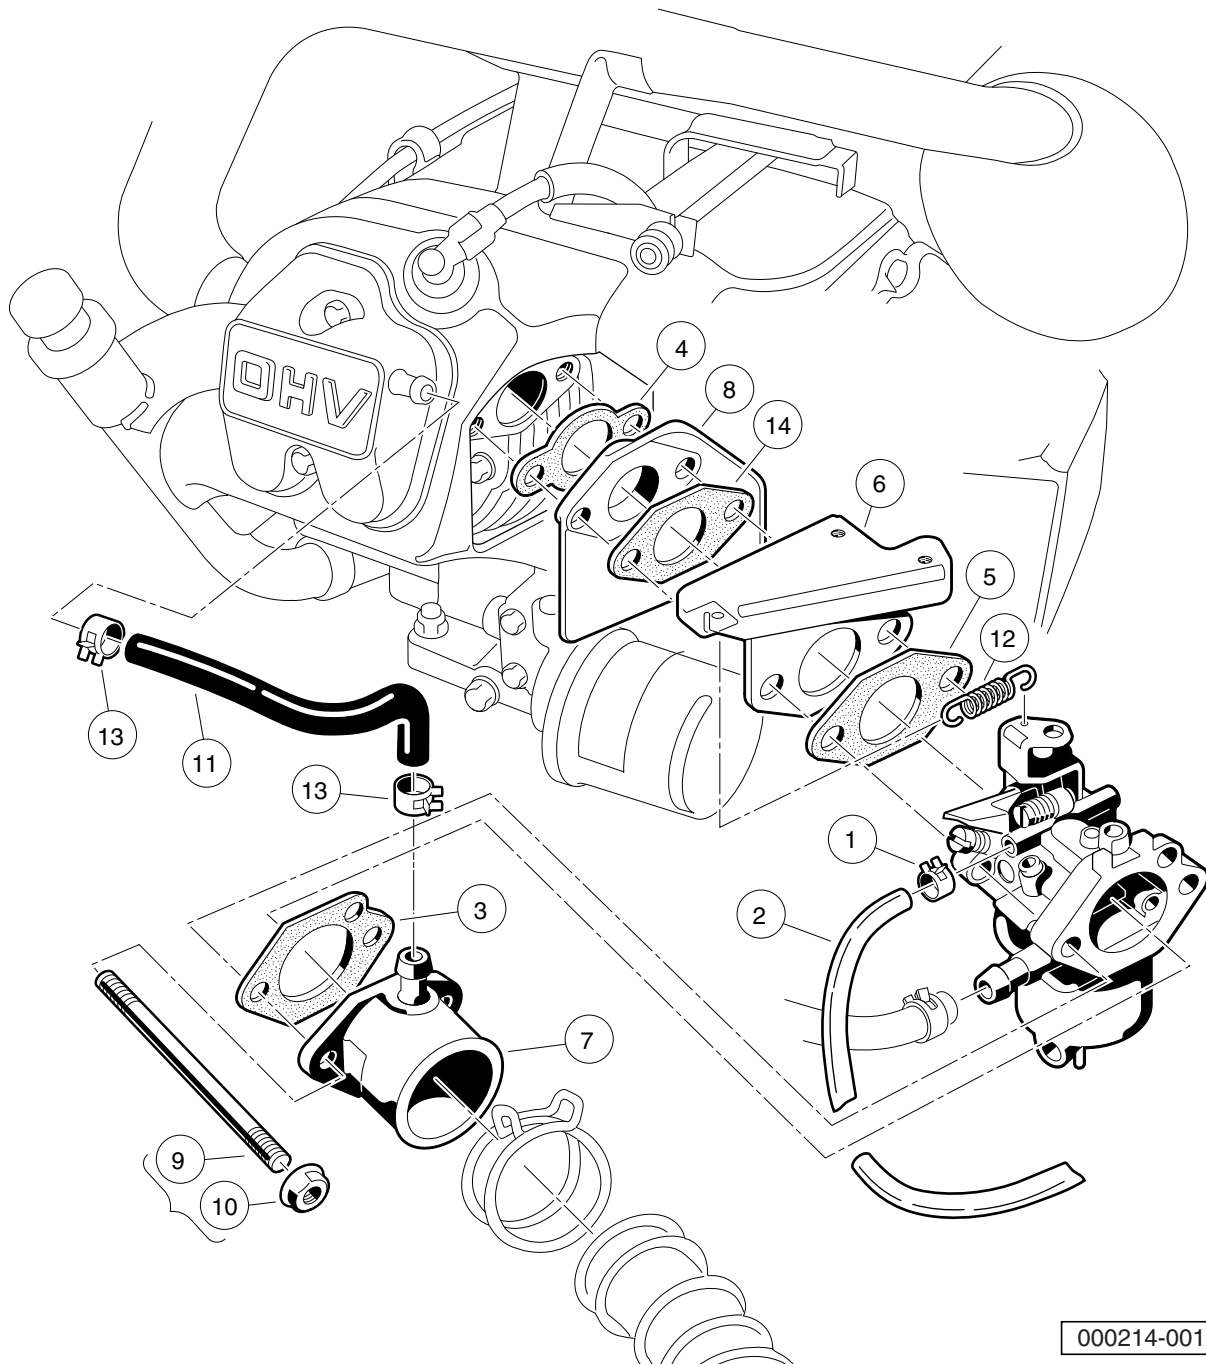

000214-001

CARBURETOR INSTALLATION – FE350

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>1013746</u>	Clamp, 0.301 ID Hose	1	
2	<u>1015137</u>	Fuel Line (available by the foot)	1	
3	<u>1016438</u>	Gasket, Carb To Intake Manifold	1	
4	<u>1016440</u>	Gasket, Engine to Insulator	1	
5	<u>1016441</u>	Gasket, Sprg Brkt To Carb OHV	1	
6	<u>1016444</u>	Bracket, Throttle Spring Return	1	
7	1016480	Pipe, Intake Manifold	1	
8	101648102	Insulator, Carburetor	1	
9	<u>101649002</u>	Stud, M6-1.00 Two-Ended	2	
10	1016547	Nut, M6 Flange	2	
11	<u>1016572</u>	Tube, Crankcase Vent	1	
12	<u>1016582</u>	Spring, Throttle Return	1	
13	<u>1017466</u>	Clamp	2	
14	<u>101973401</u>	Gasket, Insulator To Bracket	1	

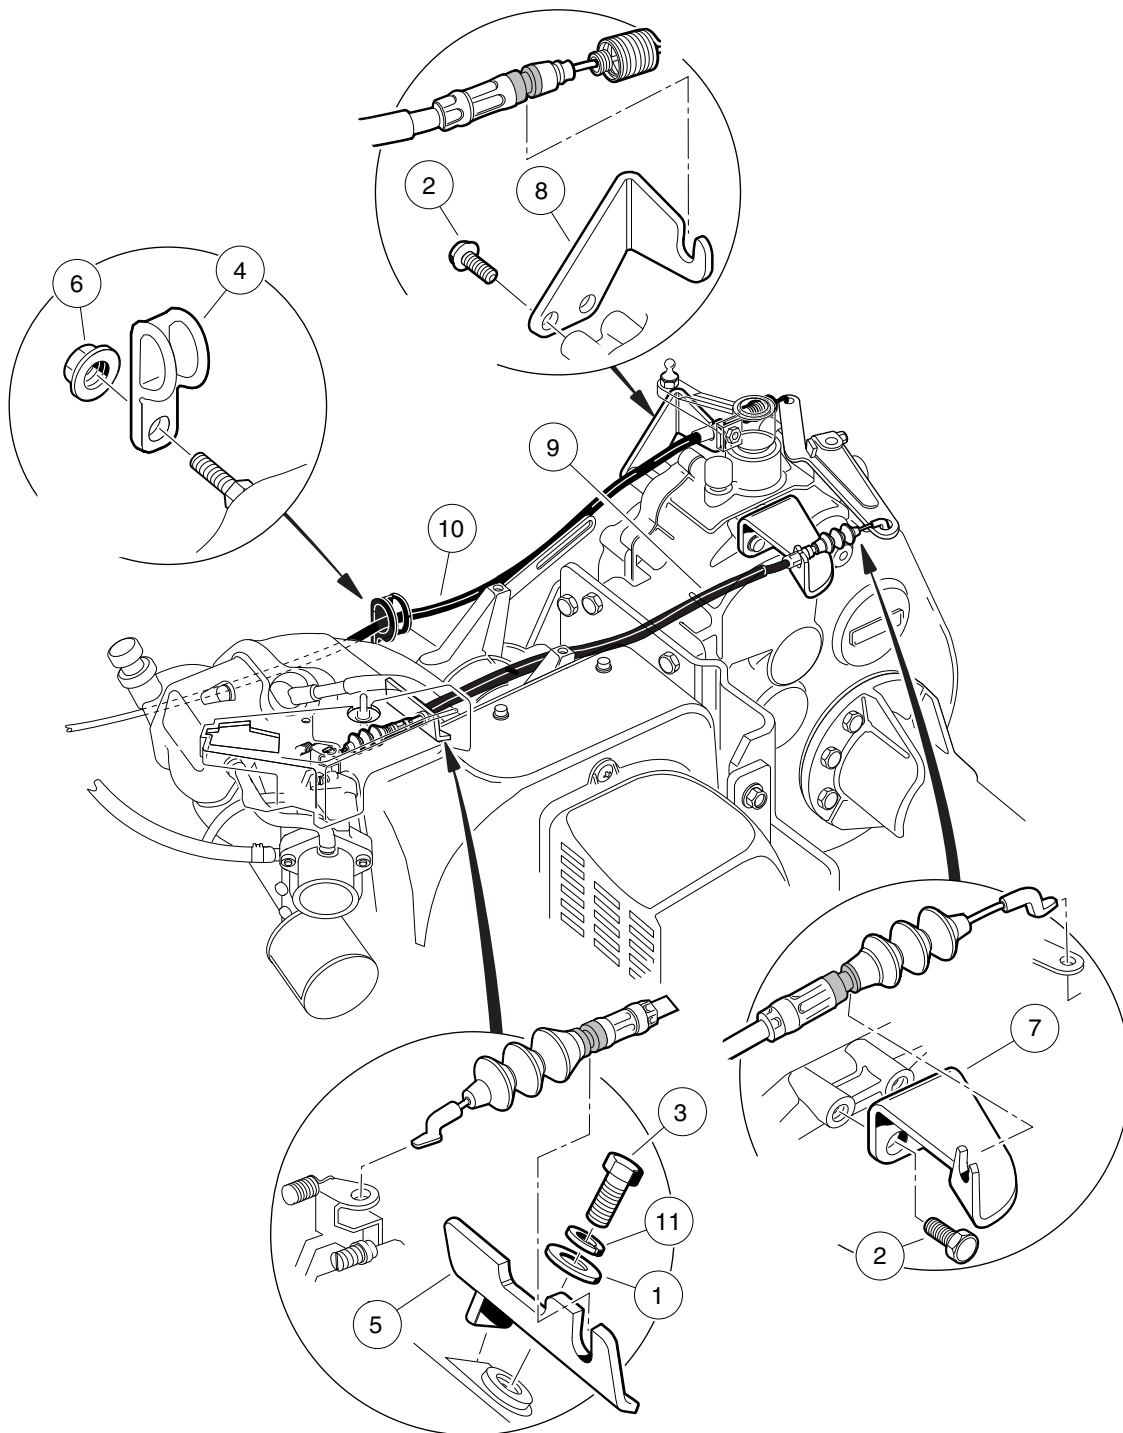


000215-001

GOVERNOR AND ACCELERATOR CABLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011697</u>	Washer, 5/16 Flat	1
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4
3	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	1
4	<u>1013700</u>	Clamp	2
5	<u>101584502</u>	Bracket, Governor Cable Snap-In	1
6	<u>1016546</u>	Nut	2
7	<u>101832202</u>	Bracket, Rear Governor Cable Snap-In	1
8	<u>101832302</u>	Bracket, Rear Accelerator Cable Snap-In	1
9	<u>102336001</u>	Cable, Governor, Snap-In	1
10	<u>102336101</u>	Cable, Accelerator, Snap-In	1
11	<u>7174</u>	Lockwasher, 5/16 Split	1

9

G

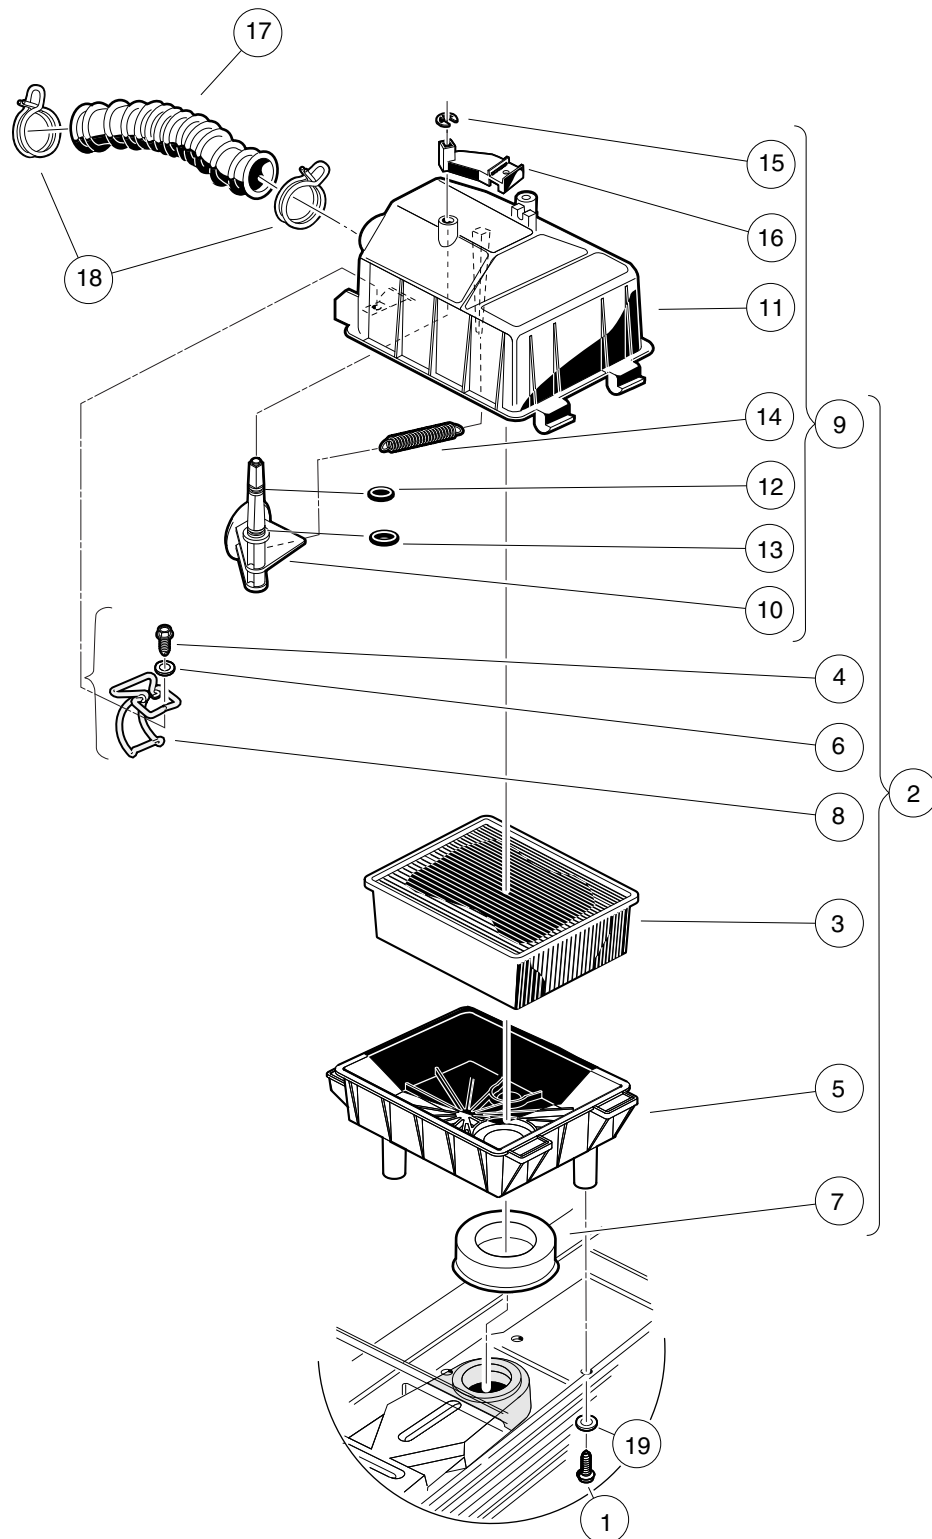


000332-001

AIR BOX AND INTAKE HOSE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	3
2	<u>101821501</u>	Assembly, Air Box (includes items 3 through 9)	1
3	<u>1015426</u>	Filter, Air	1
4	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	2
5	<u>101811901</u>	Bottom, Air Box	1
6	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	2
7	<u>101921501</u>	Seal, Intake	1
8	<u>101925701</u>	Latch, Wireform	2
9	<u>101972801</u>	Top Assy, Air Box (includes items 10 through 16)	1
10	N/A	Valve, Choke	1
11	101811801	Top, Air Box	1
12	N/A	O-Ring, 5/16	1
13	N/A	O-Ring, 3/8	1
14	<u>101812301</u>	Spring, Extension Return	1
15	<u>101813001</u>	Retaining Ring 0.25, Shaft	1
16	<u>101917601</u>	Lever, Choke	1
17	<u>101837101</u>	Hose, Air Intake	1
18	<u>101971301</u>	Clamp, 1.58" ID Hose	2
19	<u>332</u>	Washer, 1/4 Type A Narrow Flat	3

9

G

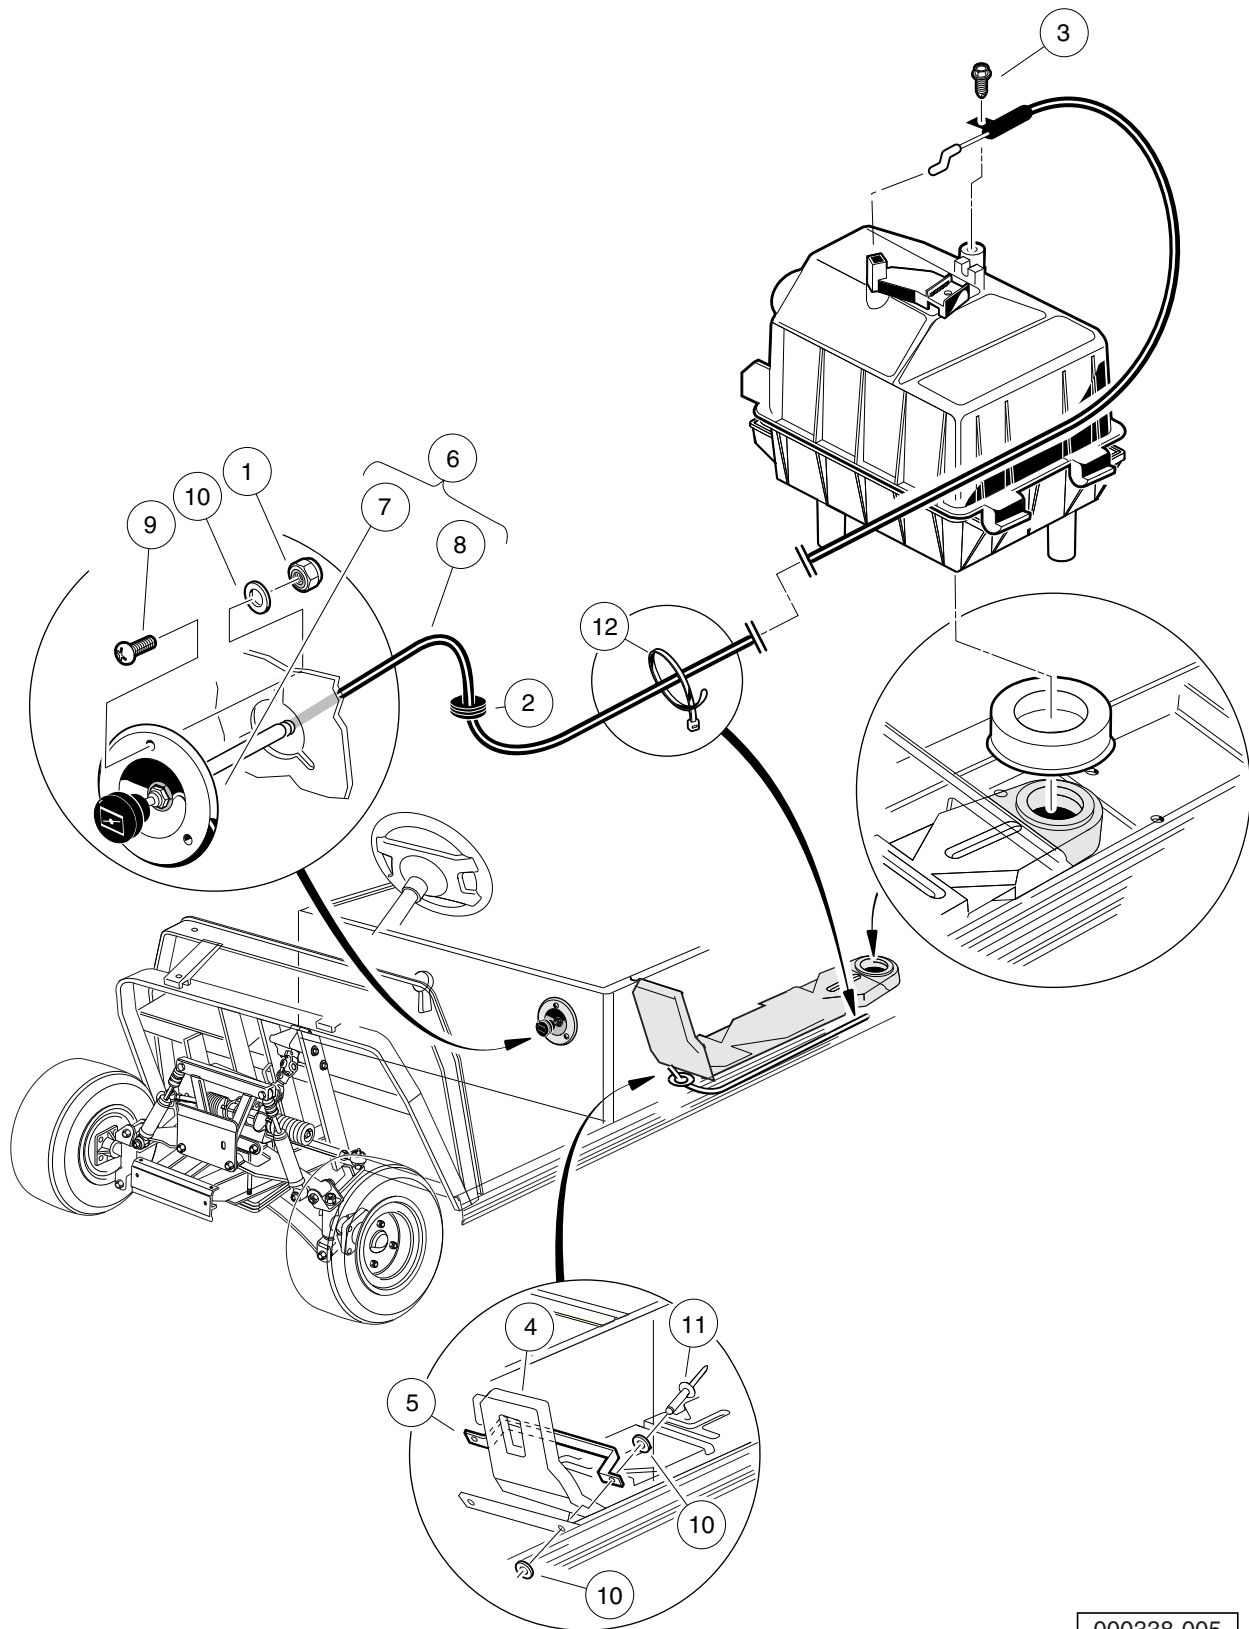

000338-005

INTAKE SYSTEM

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>1012438</u>	Locknut, #10-24 Nylon Insert	3	
2	<u>1015139</u>	Insulation Grommet	1	
3	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	1	
4	<u>101811301</u>	Duct, Intake	1	
5	<u>101825701</u>	Retaining Bracket	1	
6	<u>101926802</u>	Cable, Choke (includes items 7 and 8)	1	
7	<u>101933701</u>	Bezel, Choke Cable	1	
8	N/A	Choke Cable without Bezel, Long	1	
9	<u>1631</u>	Screw, #10-24 X 0.75 Phillips Pan-Head	3	
10	<u>183</u>	Washer, #10 Type A Flat	7	
11	<u>7973</u>	Rivet, 3/16 X .400 Blind	2	
12	<u>8639</u>	Tie Wrap, 11" Nylon	2	


9

G

TORQUE CONVERTER

10

G

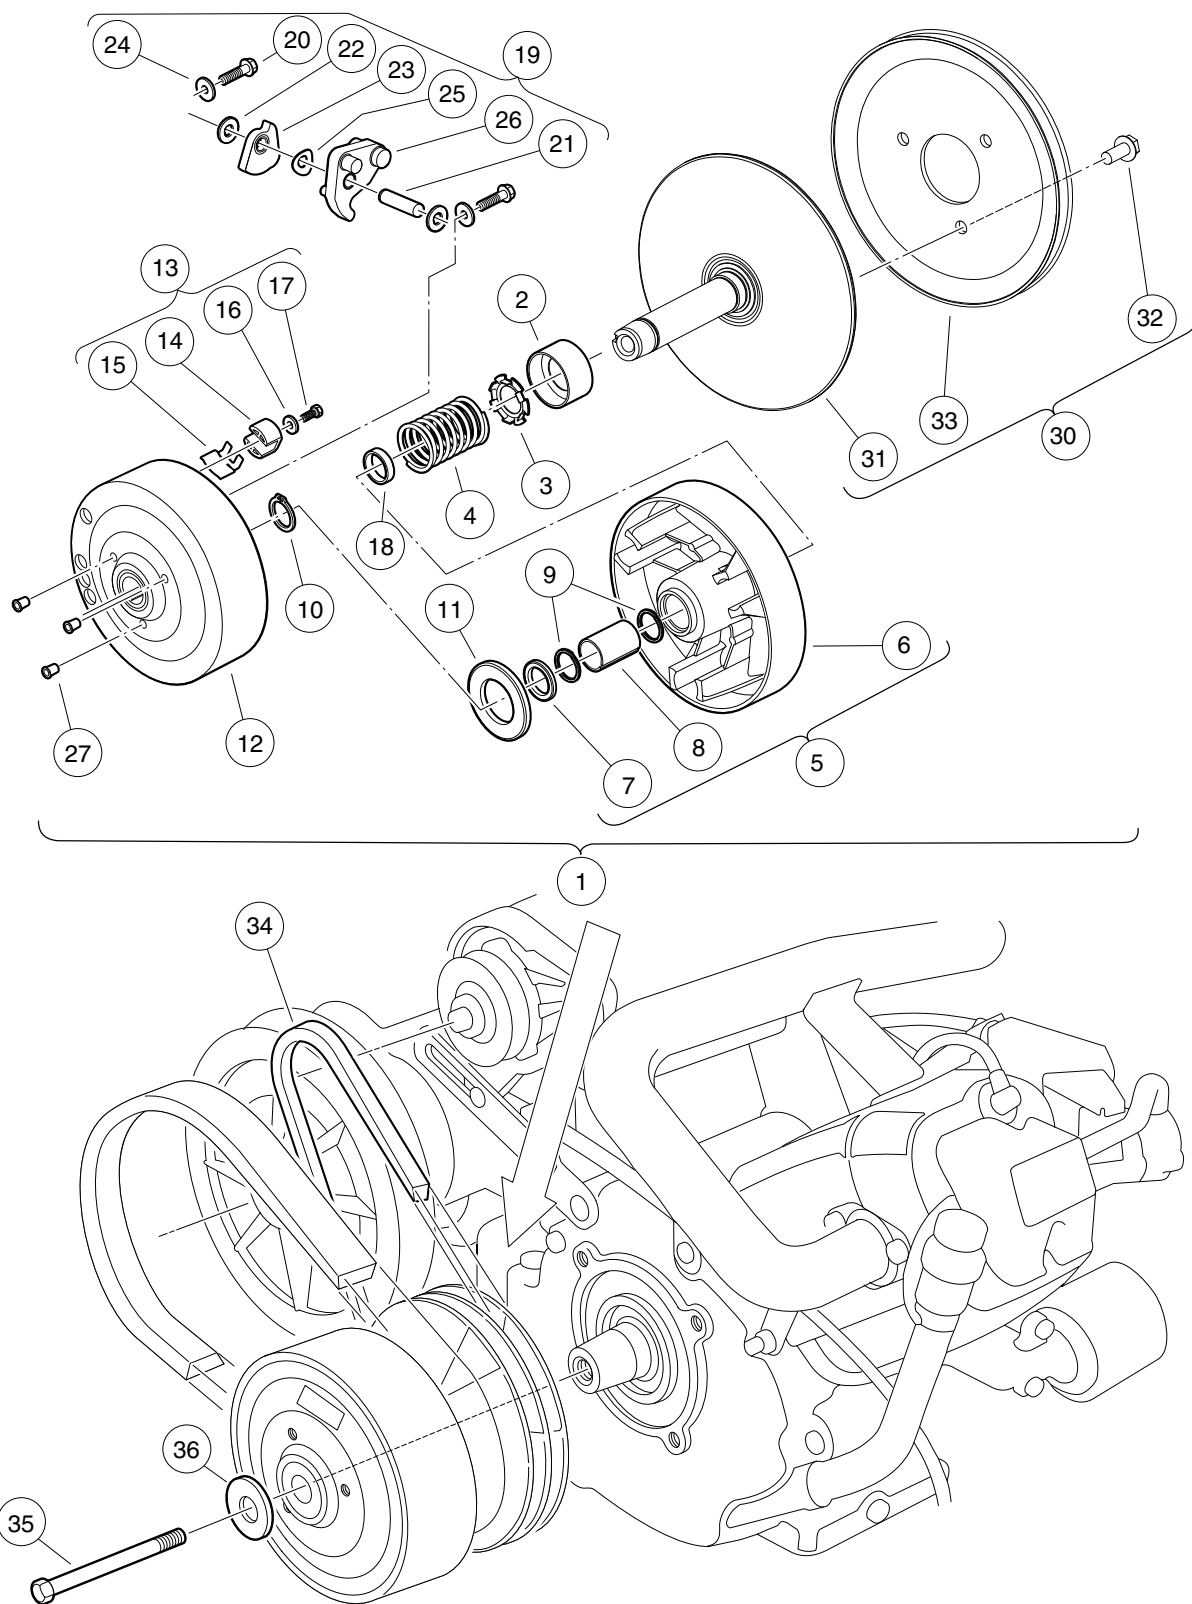


000217-001

DRIVE CLUTCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101833902</u>	Clutch, Drive (includes items 2 through 28)	1
2	1014049	Bearing, Idler	1
3	<u>1014050</u>	Retainer, Spring	1
4	<u>1014051</u>	Spring, Drive Clutch	1
5	1014052	Movable-Face Assembly (includes items 6 through 8)	1
6	N/A	Drive Clutch Movable Face	1
7	<u>1014055</u>	Retainer	1
8	N/A	Bushing, Split, Drive Clutch	1
9	<u>1014056</u>	Ring, Spiral Backup	2
10	<u>1014057</u>	Ring, 0.810" Internal Retaining	1
11	1014058	Thrust Washer	1
12	1014059	Drive Hub Assy, Drive Clutch	1
13	<u>1014453</u>	Kit, Drive Clutch Button (includes items 14 through 17)	1
14	<u>1014062</u>	Driver, Drive Clutch	3
15	<u>1014287</u>	Spring, Drive Button	3
16	<u>183</u>	Washer, #10 Type A Flat	3
17	<u>8450</u>	Screw, #10-24 X 0.50 Hex-Head	3
18	<u>1016289</u>	Spacer, Fixed Face Shaft	1
19	<u>1016801</u>	Kit, Drive Clutch Weight (includes items 20 through 26)	1
20	<u>1014063</u>	Screw, 1/4-20 X 1.00 Hex Head	6
21	N/A	Pin, 0.3752 X 1.50 Dowel	3
22	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	6
23	N/A	Clutch Weight, Secondary	3
24	N/A	Washer	6
25	<u>1016201</u>	Washer, Wave	3
26	N/A	Weight, Primary	3
27	<u>101925601</u>	Plug, Drive Clutch	3
28	<u>101929802</u>	Kit, Fxd Face Dr Asm Fe290/350 (includes items 29 and 30)	1
29	N/A	Desiccant Bag (Not Shown)	1
30	101929801	Assembly, Fixed-Face Drive (includes items 31 through 33)	1
31	N/A	Fixed Face Assembly, Drive Clutch	1
32	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	3
33	N/A	Pulley, Clutch	1
34	<u>101916701</u>	V-Belt	1
35	<u>103345701</u>	Screw 3/8-24x5.5 Hex Loc Ptch	1
36	<u>808</u>	Washer, 3/8 Type B Flat	1
		Note: Item 29 not shown.	

10

G

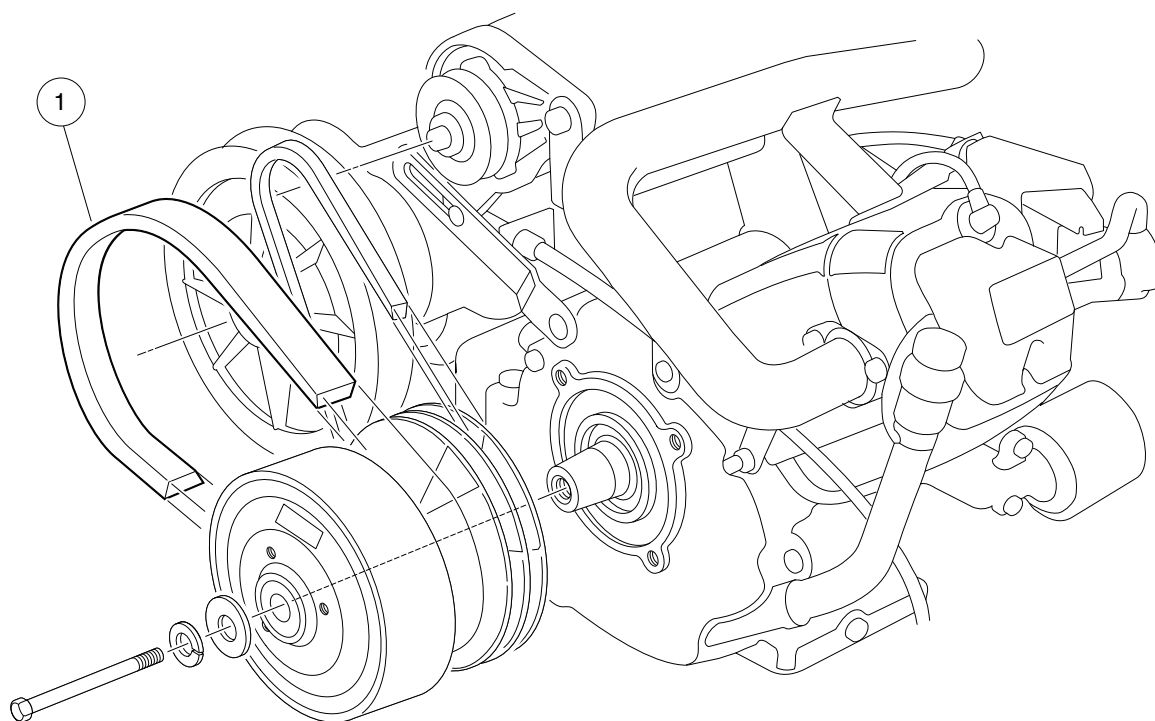


000218-001

DRIVE BELT – FE350

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>1017188</u>	1 2 3 4 Belt, Drive (FE350)	1

10

G

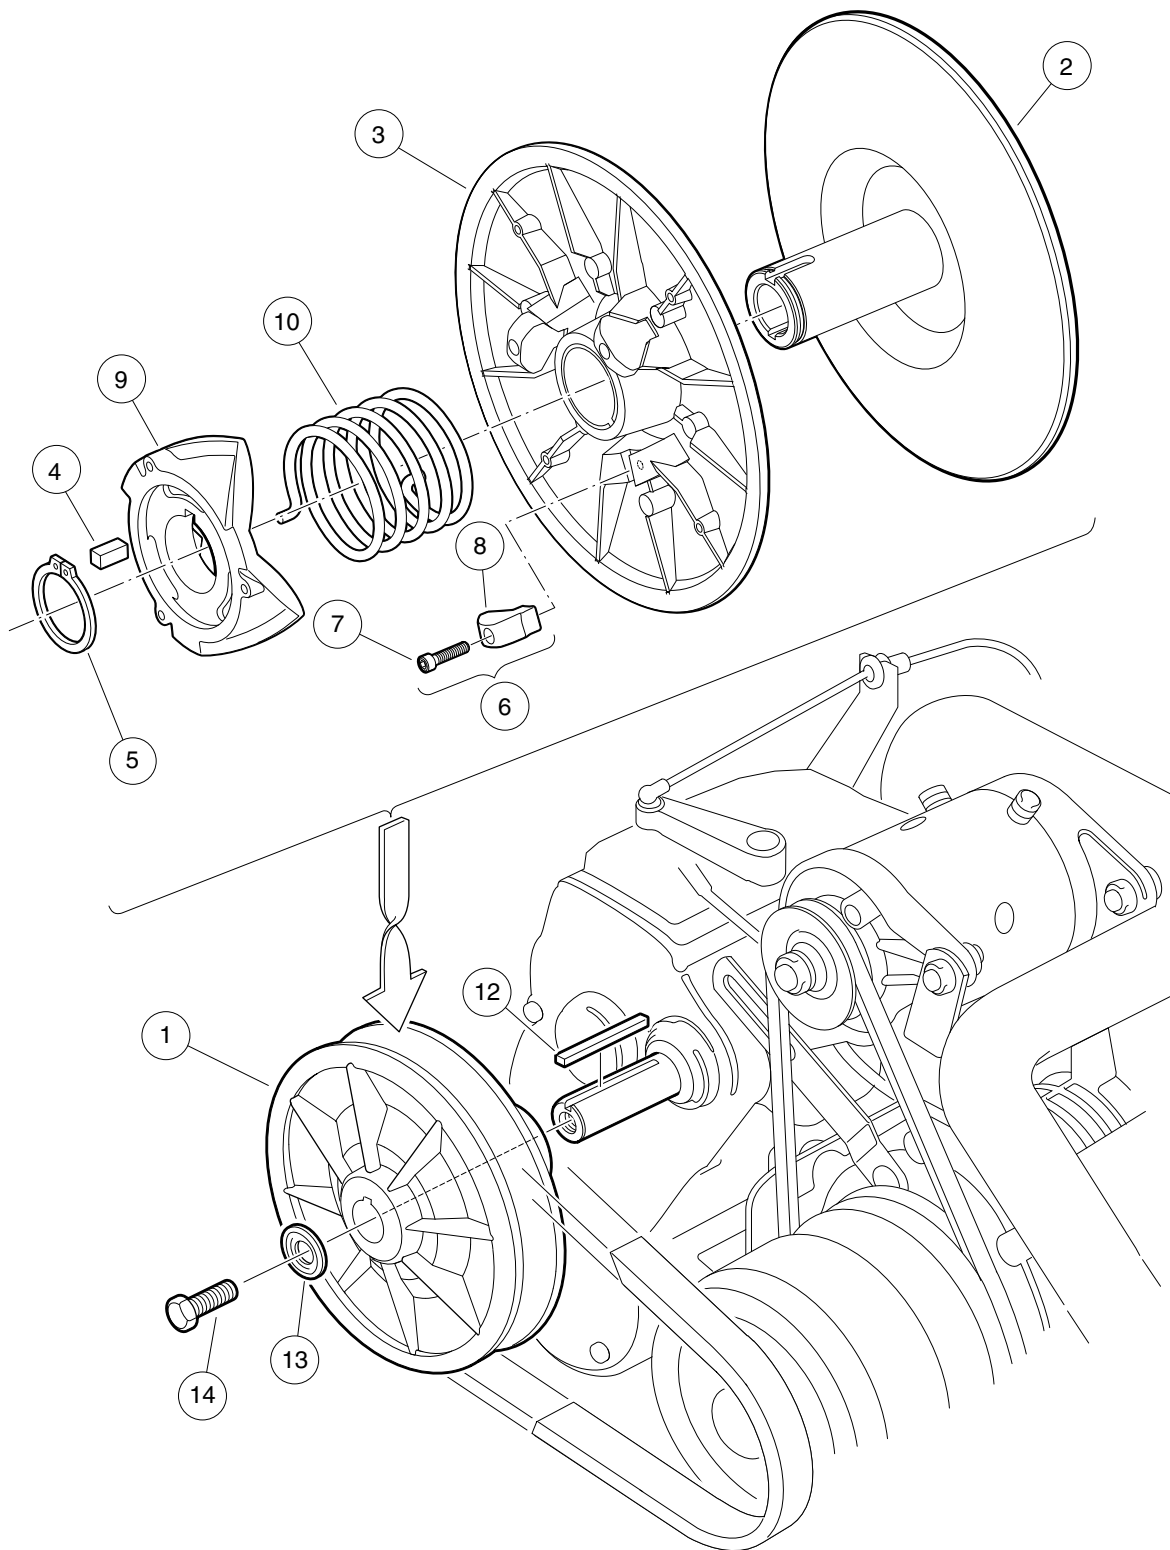

000219-001

DRIVEN CLUTCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101834001</u>	Assembly, Driven Clutch (includes items 2 through 10)	1
2	<u>1014070</u>	Fixed Face Assy, Driven Clutch	1
3	<u>1014072</u>	Movable-Face Assembly with Bushing	1
4	<u>1014078</u>	Key, Driven Clutch	1
5	<u>1014080</u>	Ring, Retaining	1
6	<u>1014454</u>	Kit, Driven Clutch Button (includes items 7 and 8)	1
7	<u>1012836</u>	Screw, #8-32 X 3/4 Socket-Head Cap	3
8	<u>1014076</u>	Button, Drive	3
9	<u>1017686</u>	Cam, Driven Clutch	1
10	<u>101836201</u>	Spring, Driven Clutch, Reversed	1
11	<u>AM10419</u>	Kit, Clutch Repair (includes items 12 through 14)	1
12	<u>101833401</u>	Key, 3/16 Sq X 1.50"	1
13	<u>102155801</u>	Washer, Driven Clutch	1
14	<u>102242101</u>	Screw, 5/16-18 X 3/4 Hex-Head with Patch	1

10

G


10

G

UNITIZED TRANSAXLE

11

G

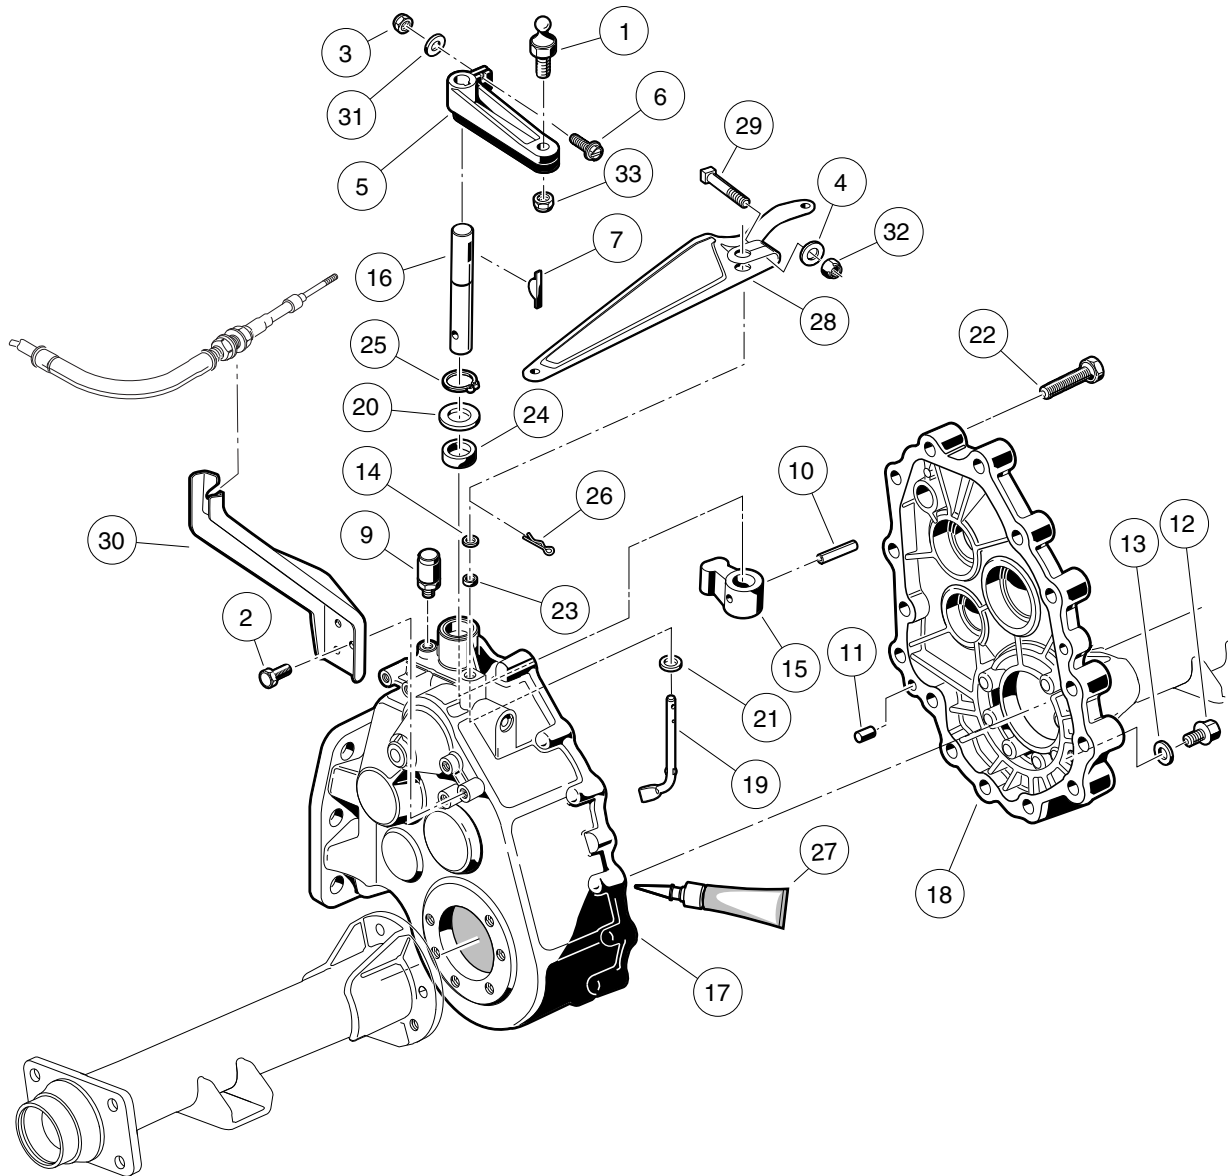


000220-001

TRANSAXLE – GASOLINE VEHICLES, GEAR CASES AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010954</u>	Stud, 1/4-28 X 0.560 Ball	1
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3
3	<u>1013061</u>	Locknut, #10-32 Nylon Insert	1
4	<u>1014007</u>	Washer, 1/4 Flat	1
5	<u>1016341</u>	Lever, Transmission Shift	1
6	<u>1017082</u>	Screw, #10-32 X 0.75, Hex-Head Machine	1
7	<u>1017231</u>	Key, Woodruff	1
8	<u>101833601</u>	Transaxle, 11.77 Ratio (includes items 9 through 27)	1
9	<u>1012711</u>	Breather	1
10	<u>1012752</u>	Roll Pin	1
11	<u>1012896</u>	Pin, Dowel	2
12	<u>1013760</u>	Fill Plug	2
13	<u>1016432</u>	Gasket, Drain Plug	1
14	<u>1016513</u>	Washer, M6 Flat	1
15	<u>101890101</u>	Lever, Change	1
16	<u>101890201</u>	Shaft - Change	1
17	<u>101890501</u>	Gear Case (driver side)	1
18	<u>101890601</u>	Gear Case (passenger side)	1
19	<u>101891301</u>	Arm Pivot	1
20	<u>101892901</u>	Washer	1
21	<u>101893801</u>	Washer	1
22	<u>101926901</u>	Screw, M8-1.25 X 40mm Hex-Head	15
23	<u>101927101</u>	Seal, Oil	1
24	<u>101927201</u>	Seal, Oil	1
25	<u>101927301</u>	Snap Ring	1
26	<u>101928601</u>	Pin, Cotter	1
27	<u>101928701</u>	Liquid Gasket (Transaxle case)	1
28	<u>101834801</u>	Arm, Governor	1
29	<u>101886101</u>	Screw, 1/4-20 X 1.00 Square-Head	1
30	<u>102045901</u>	Bracket, Shifter	1
31	<u>183</u>	Washer, #10 Type A Flat	1
32	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	1
33	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1

11
G

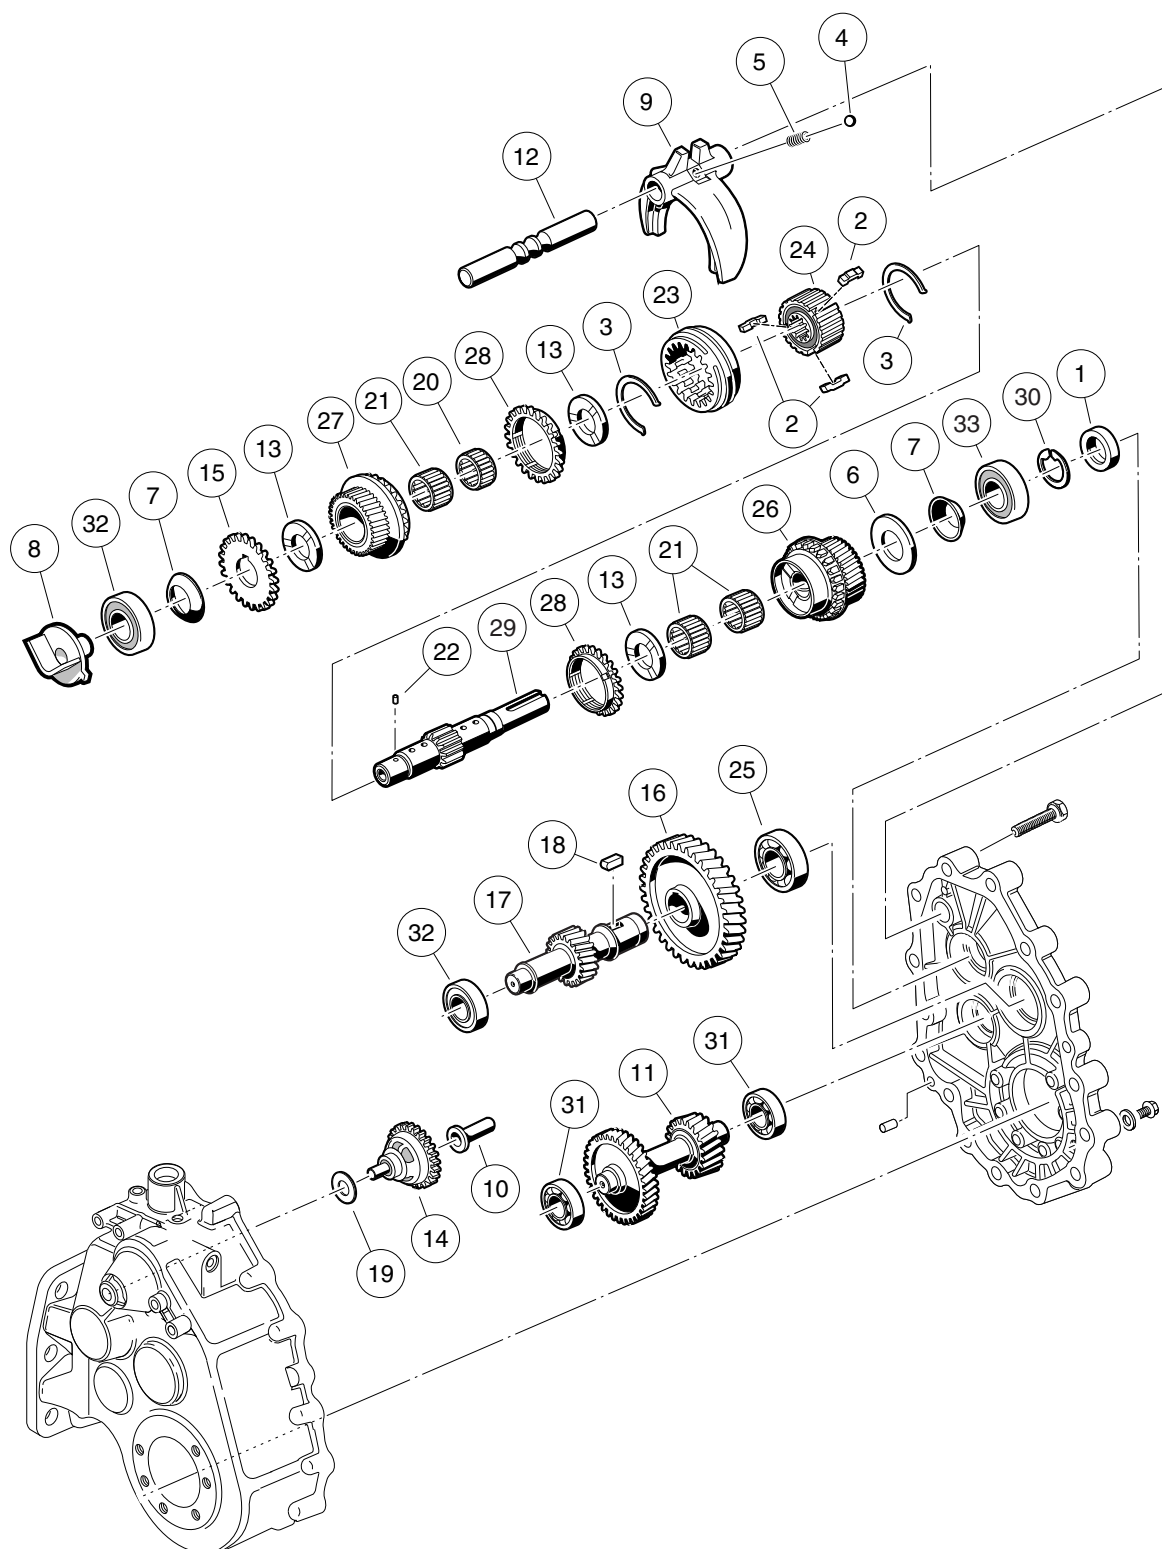


000221-001

TRANSAXLE – GASOLINE VEHICLES, TRANSMISSION AND GEAR REDUCTION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012714</u>	Oil Seal	1
2	<u>1012740</u>	Synchro Insert	3
3	<u>1012741</u>	Synchro Spring	2
4	<u>1012747</u>	Shifter Ball	1
5	<u>1012748</u>	Shifter Spring	1
6	<u>1016337</u>	Washer, Thrust	1
7	<u>1016338</u>	Washer, Spring	2
8	<u>101889401</u>	Guide	1
9	<u>101890001</u>	Fork - Shift	1
10	<u>101891601</u>	Sleeve, Governor	1
11	<u>101891901</u>	Gear, Cluster	1
12	<u>101892001</u>	Rod, Shift	1
13	<u>101892201</u>	Plate, Thrust	3
14	<u>101892301</u>	Governor Assembly	1
15	<u>101892401</u>	Gear, Spur	1
16	<u>101892501</u>	Gear, Helical (61 Tooth)	1
17	<u>101892601</u>	Gear, Helical (17 Tooth)	1
18	<u>101893201</u>	Key Sunk	1
19	<u>101893901</u>	Washer	1
20	<u>101927501</u>	Needle Bearing	1
21	<u>101927601</u>	Needle Bearing	3
22	<u>101927701</u>	Pin, .116" Dia X 0.264 Dowel	1
23	<u>101927901</u>	Sleeve, Synchro	1
24	<u>101928001</u>	Hub, Synchro Clutch	1
25	<u>101928101</u>	Bearing, Ball	1
26	<u>101980801</u>	Gear Assembly, 16-Degree Synchro (25 Tooth)	1
27	<u>101980901</u>	Gear Assembly, 16-Degree Rear Synchro (28 Tooth)	1
28	<u>101981001</u>	Ring, 16-Degree Synchronizer	2
29	<u>102453001</u>	Shaft, Trans, with Circlip	1
30	<u>102453101</u>	Circlip	1
31	<u>7335</u>	Bearing	2
32	<u>AM10080</u>	Bearing, Ball, Sealed	2
33	<u>AM10081</u>	Bearing, Ball, Sealed	1
Note: Items listed on this page are components of the unitized transaxle.			

11
G

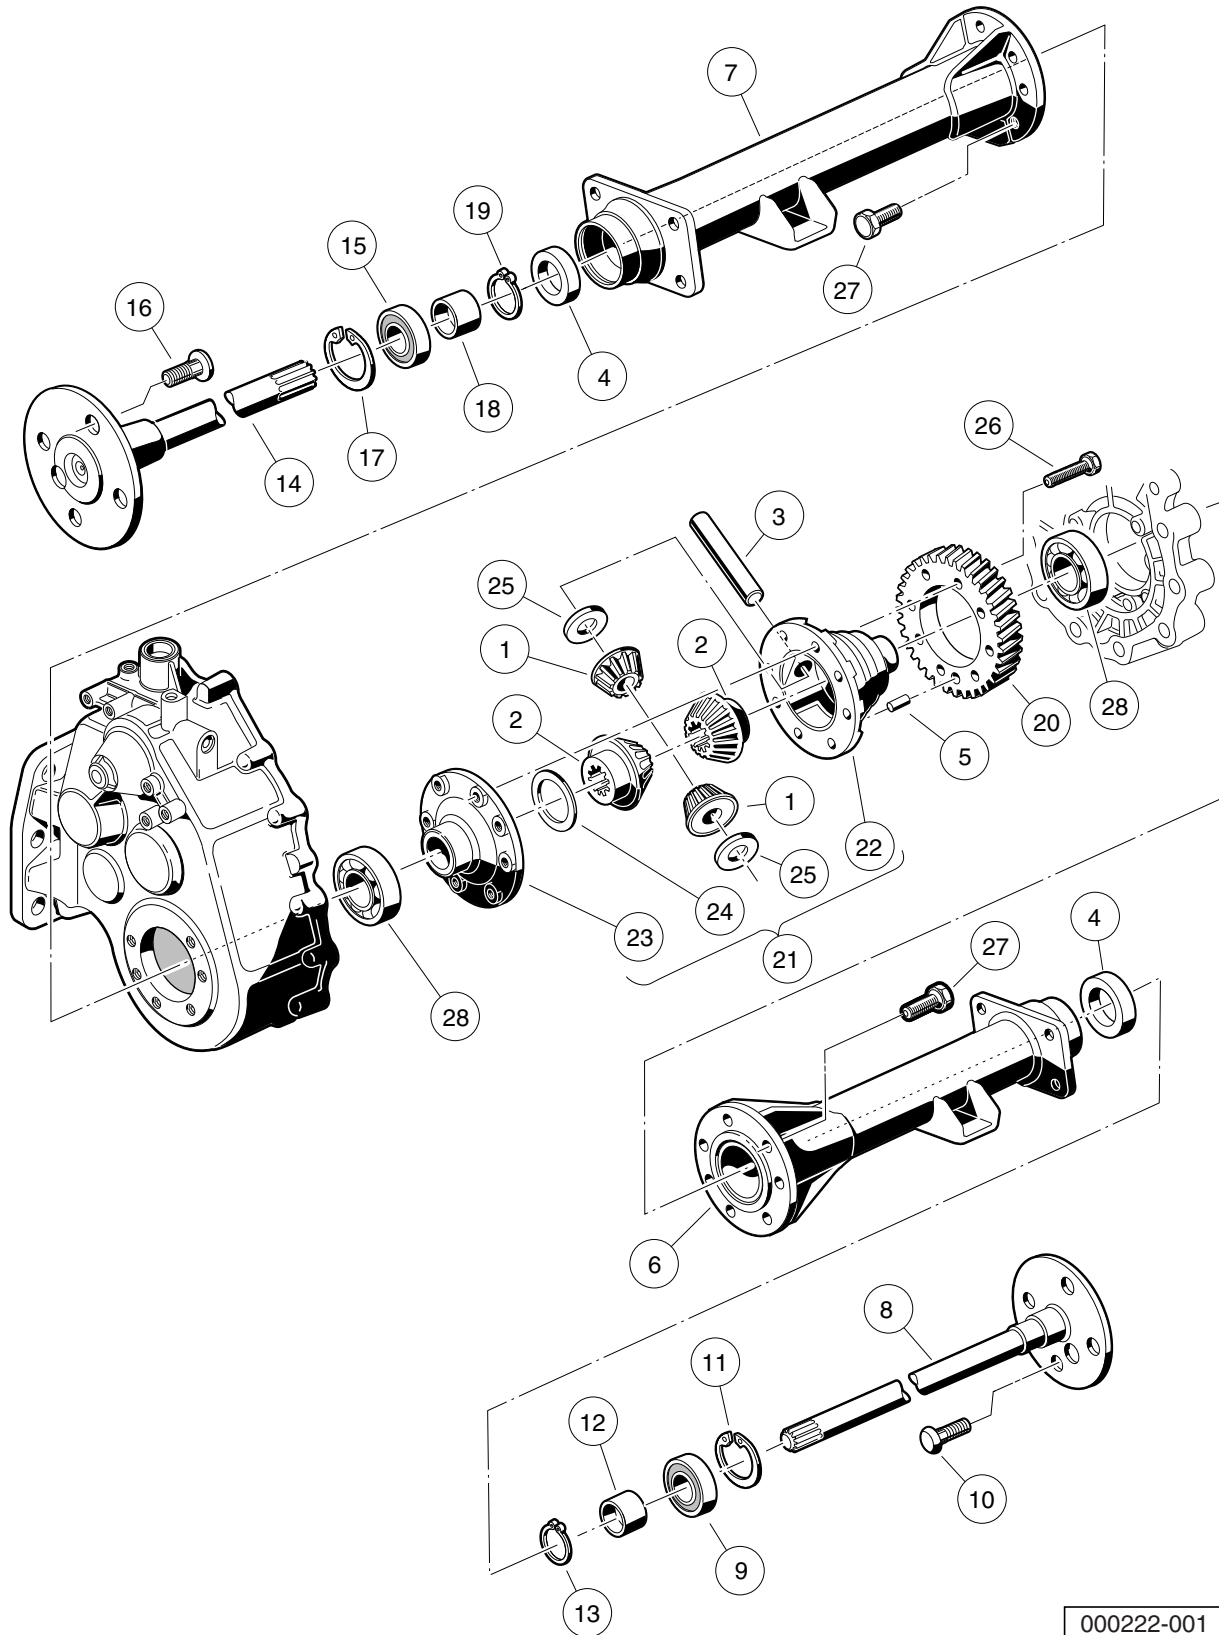


000222-001

TRANSAXLE – GASOLINE VEHICLES, DIFFERENTIAL AND AXLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013770</u>	Differential Idler Gear	2
2	<u>1013771</u>	Gear, Differential	2
3	<u>1013772</u>	Pin, Differential	1
4	<u>1013794</u>	Axle Shaft Oil Seal	2
5	<u>1014193</u>	Dowel Pin	1
6	<u>101890901</u>	Pipe	1
7	<u>101891001</u>	Pipe	1
8	<u>101891401</u>	Axle Assembly, Passenger Side (includes items 9 through 13)	1
9	<u>1011291</u>	Outer Axle, Tube Bearing	1
10	<u>1013787</u>	Lug Stud	4
11	<u>1013792</u>	Circlip Type C	1
12	<u>1014207</u>	Bushing	1
13	<u>1016672</u>	Retaining Ring	1
14	<u>101891501</u>	Axle Assembly, Driver-Side (includes items 15 through 19)	1
15	<u>1011291</u>	Outer Axle, Tube Bearing	1
16	<u>1013787</u>	Lug Stud	4
17	<u>1013792</u>	Circlip Type C	1
18	<u>1014207</u>	Bushing	1
19	<u>1016672</u>	Retaining Ring	1
20	<u>101892701</u>	Gear, Helical	1
21	<u>101910501</u>	Kit, Differential Gear Case (includes items 22 through 25)	1
22	<u>1013768</u>	Differential Gear Case, Left-Hand	1
23	<u>1013769</u>	Differential Gear Case, Right-Hand	1
24	<u>1013773</u>	Plate, Thrust (Differential Gear)	1
25	<u>1013774</u>	Plate, Thrust (Idler Gear)	2
26	<u>101928301</u>	Screw, M8-1.25 X 35mm Hex Head	8
27	<u>102031901</u>	Bolt, M10 X 1.5 X 30mm	14
28	<u>7330</u>	Inner Axle Tube Bearing	2

11
G


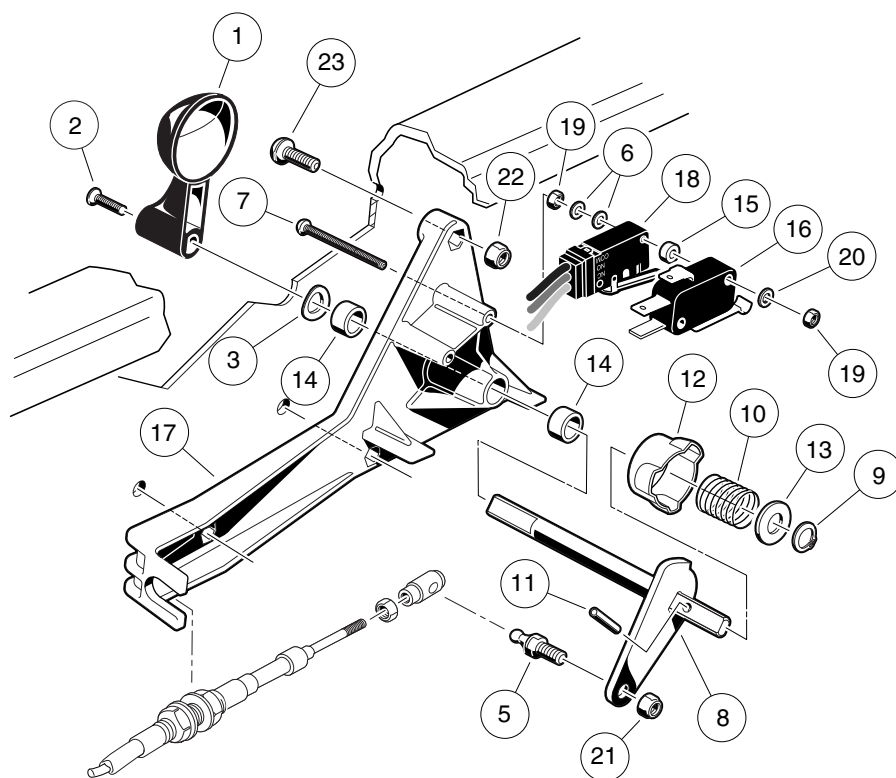


000236-001





FORWARD/REVERSE SHIFTER ASSEMBLY – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012987</u>	Handle, FNR	1
2	<u>1015064</u>	Screw, #8-32 X 0.63 Machine	1
3	<u>1016201</u>	Washer, Wave	1
4	<u>1016947</u>	Assembly, FNR Shifter (includes items 5 through 21)	1
5	<u>1010954</u>	Stud, 1/4-28 X 0.560 Ball	1
6	<u>1012431</u>	Washer, #4 Flat	4
7	<u>1012594</u>	Screw, #4-40 Machine	2
8	<u>1013587</u>	FNR Bell Crank Weldment	1
9	<u>1013589</u>	Ring, 0.338" Internal Retaining	1
10	<u>1013590</u>	Spring, FNR Cam	1
11	<u>1013591</u>	Pin, 1/8 X 1/2 Roll	1
12	<u>1014089</u>	Neutral Lockout Cam Kit (includes item 13)	1
13	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	1
14	<u>1014145</u>	Bushing, Secondary Weight, Split	2
15	<u>1014727</u>	Washer, #4 Nylon Flat	2
16	<u>1014807</u>	Switch, Limit	1
17	<u>1016342</u>	FNR Shifter Base	1
18	<u>101979101</u>	Assembly, Switch, Limit	1
19	<u>8057</u>	Nut, #4-40 Hex Machine	4
20	<u>8058</u>	Lockwasher, #4 Split	2
21	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1
22	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
23	<u>8248</u>	Screw, 1/4-20 X 0.75 Truss-Head Machine	4

11
G

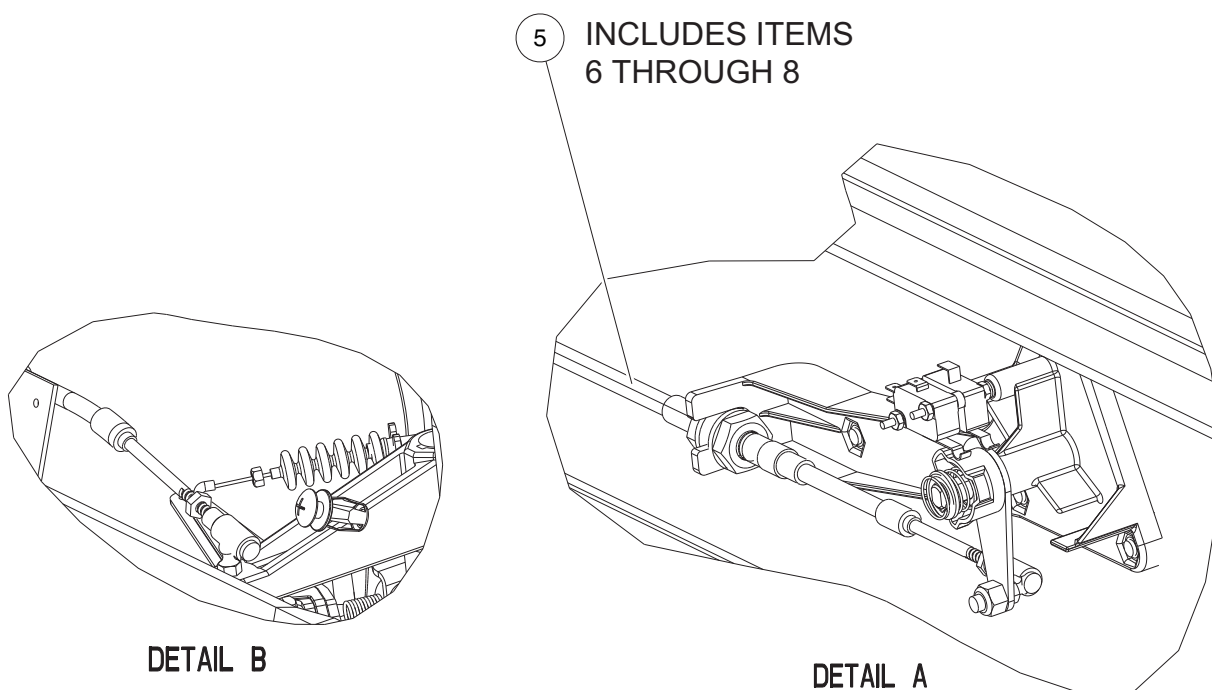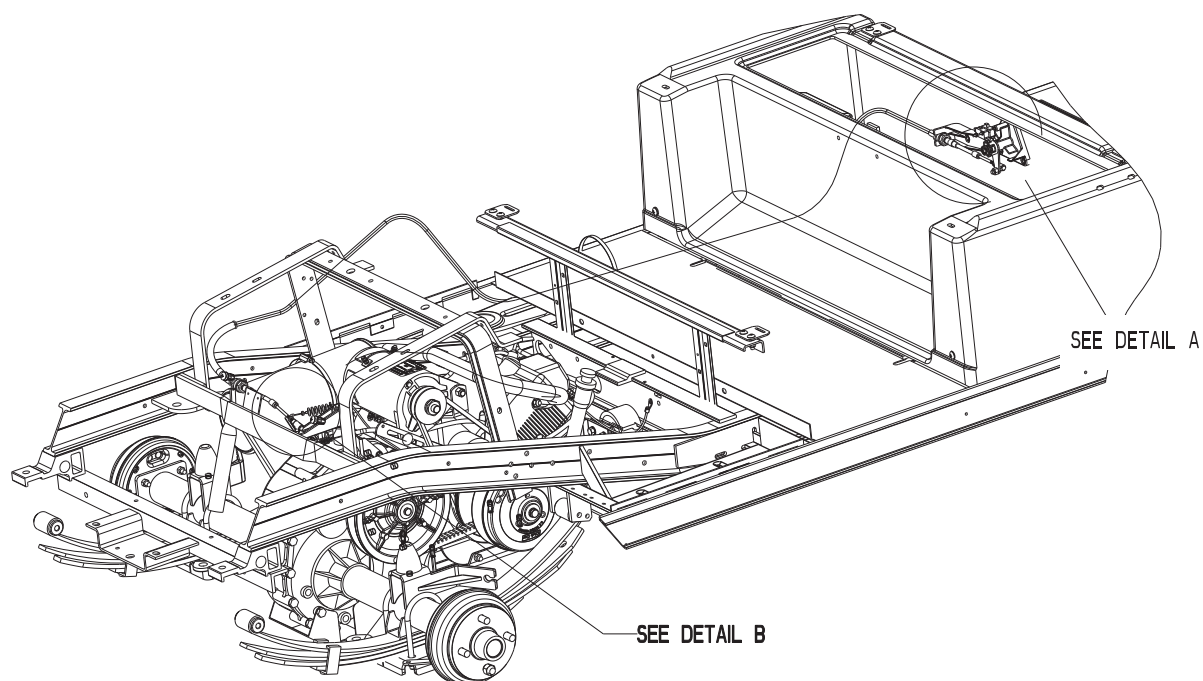

000650-001

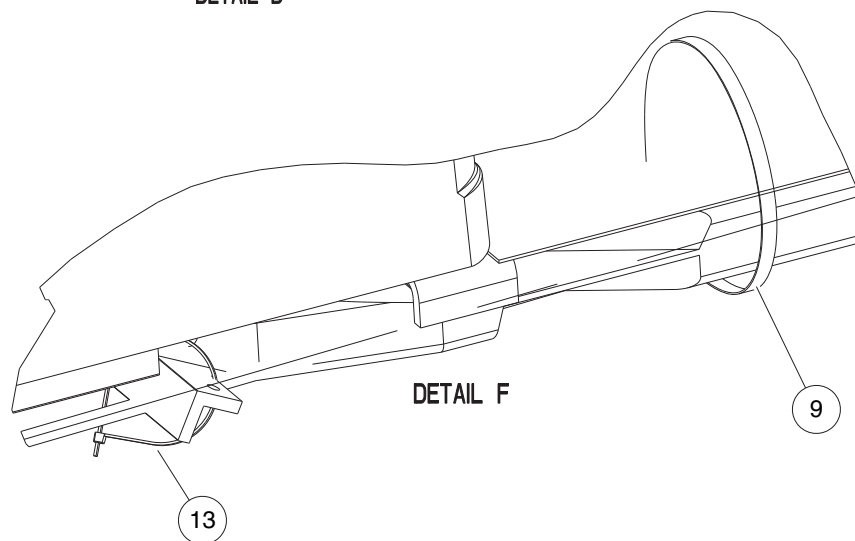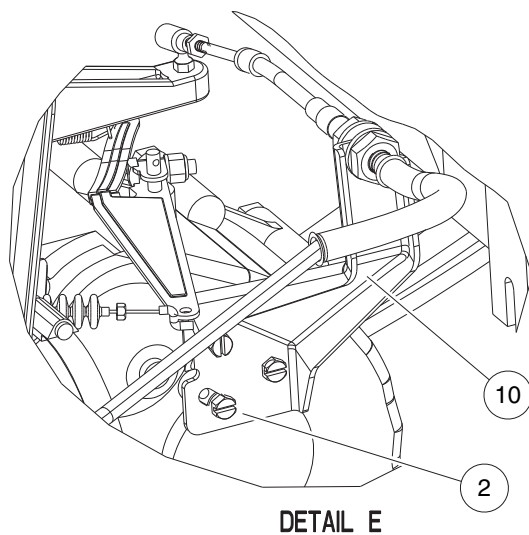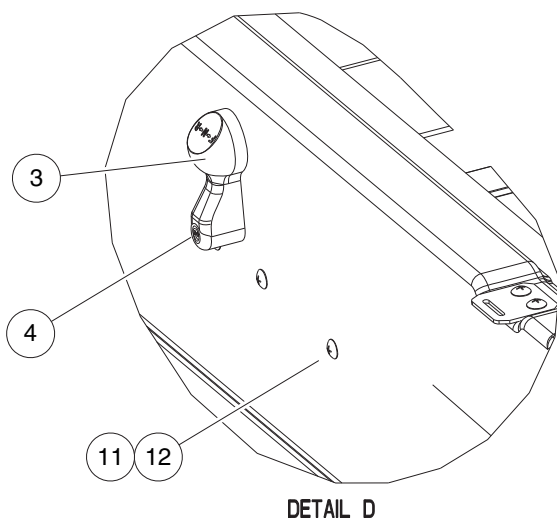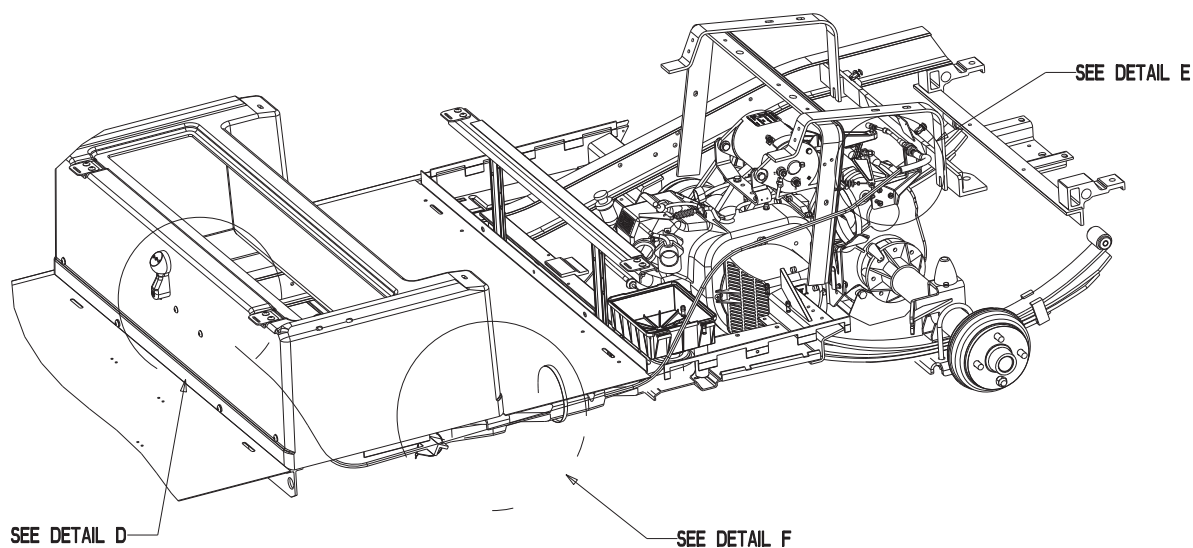

000650-001

See previous two pages for illustration.

FORWARD/REVERSE CABLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Fnr Cable Instl, Limo (includes items 2 through 13)	1
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3
3	<u>1012987</u>	Handle, FNR	1
4	<u>1015064</u>	Screw, #8-32 X 0.63 Machine	1
5	<u>101672701</u>	Cable, FNR Shifter (includes items 6 through 8)	1
6	<u>1012333</u>	Joint, #10-32 Ball	2
7	101539802	Cable, Transmission Shifter	1
8	<u>7893</u>	Nut, #10-32 Hex	2
9	<u>102025401</u>	Tie Wrap, Heavy Duty	1
10	<u>102045901</u>	Bracket, Shifter	1
11	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
12	<u>8248</u>	Screw, 1/4-20 X 0.75 Truss-Head Machine	4
13	<u>8990</u>	Tie Wrap, 8" Nylon	1


11

G


ELECTRICAL SYSTEM – ELECTRIC VEHICLE

12

E

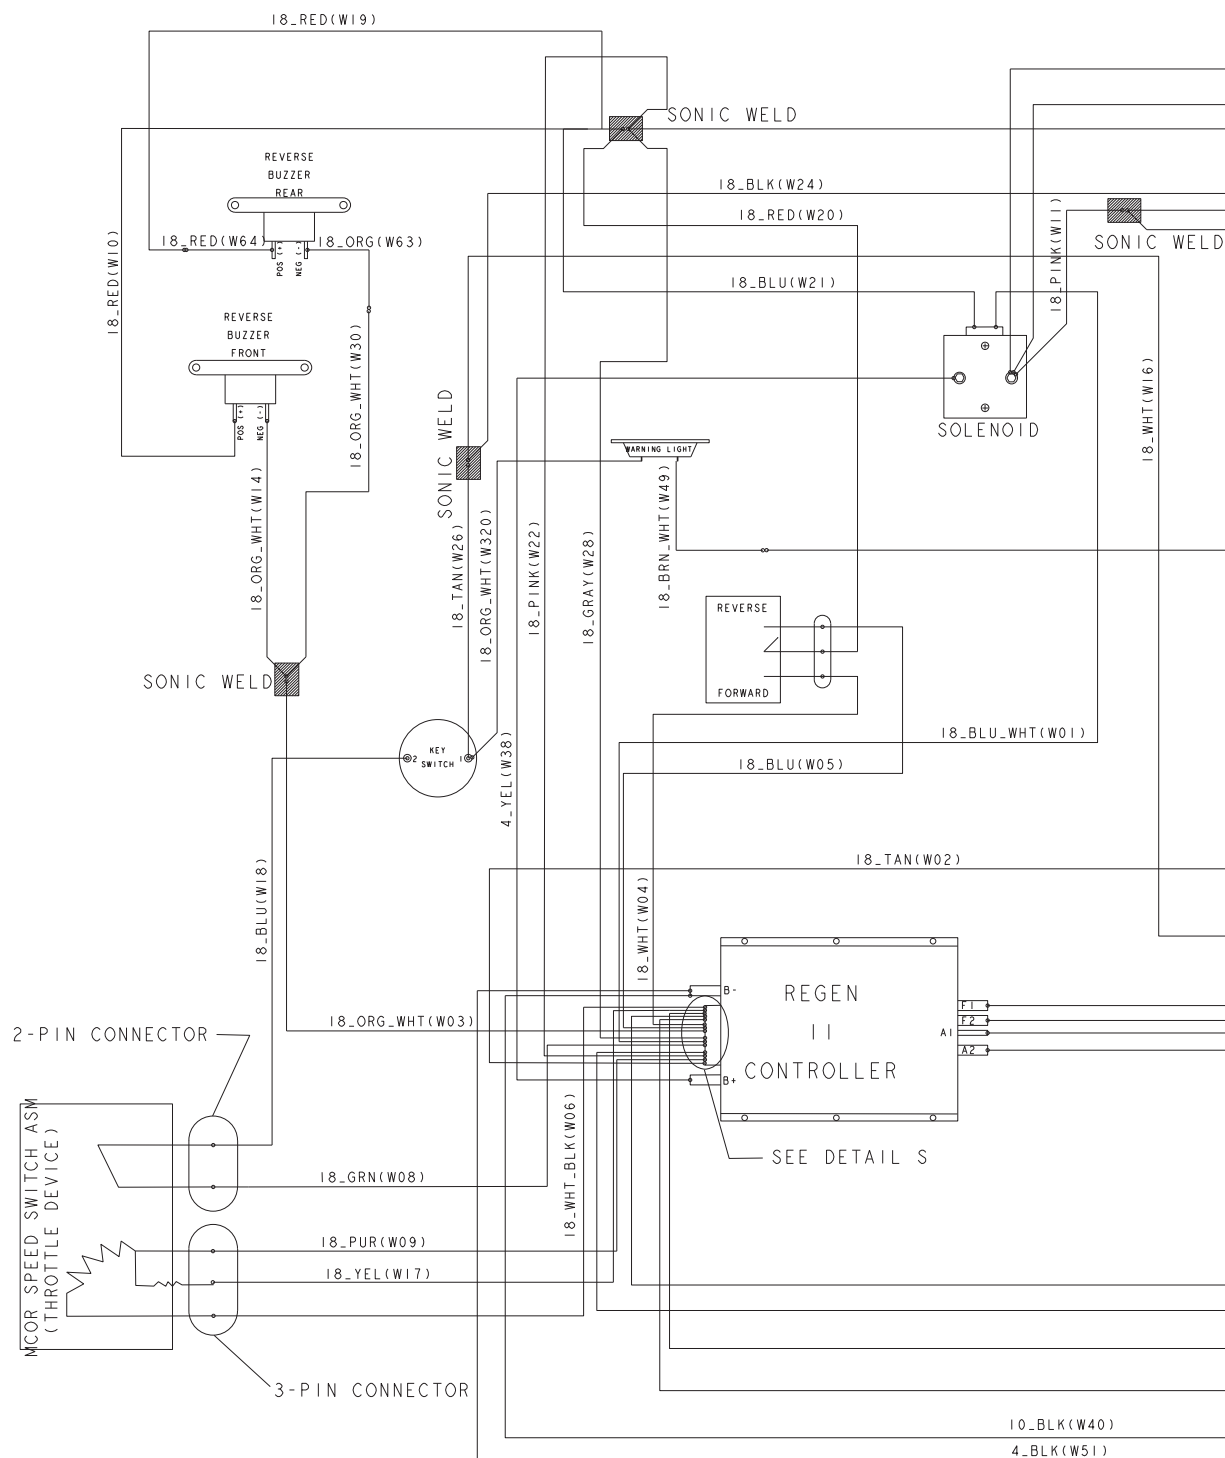

000652-001

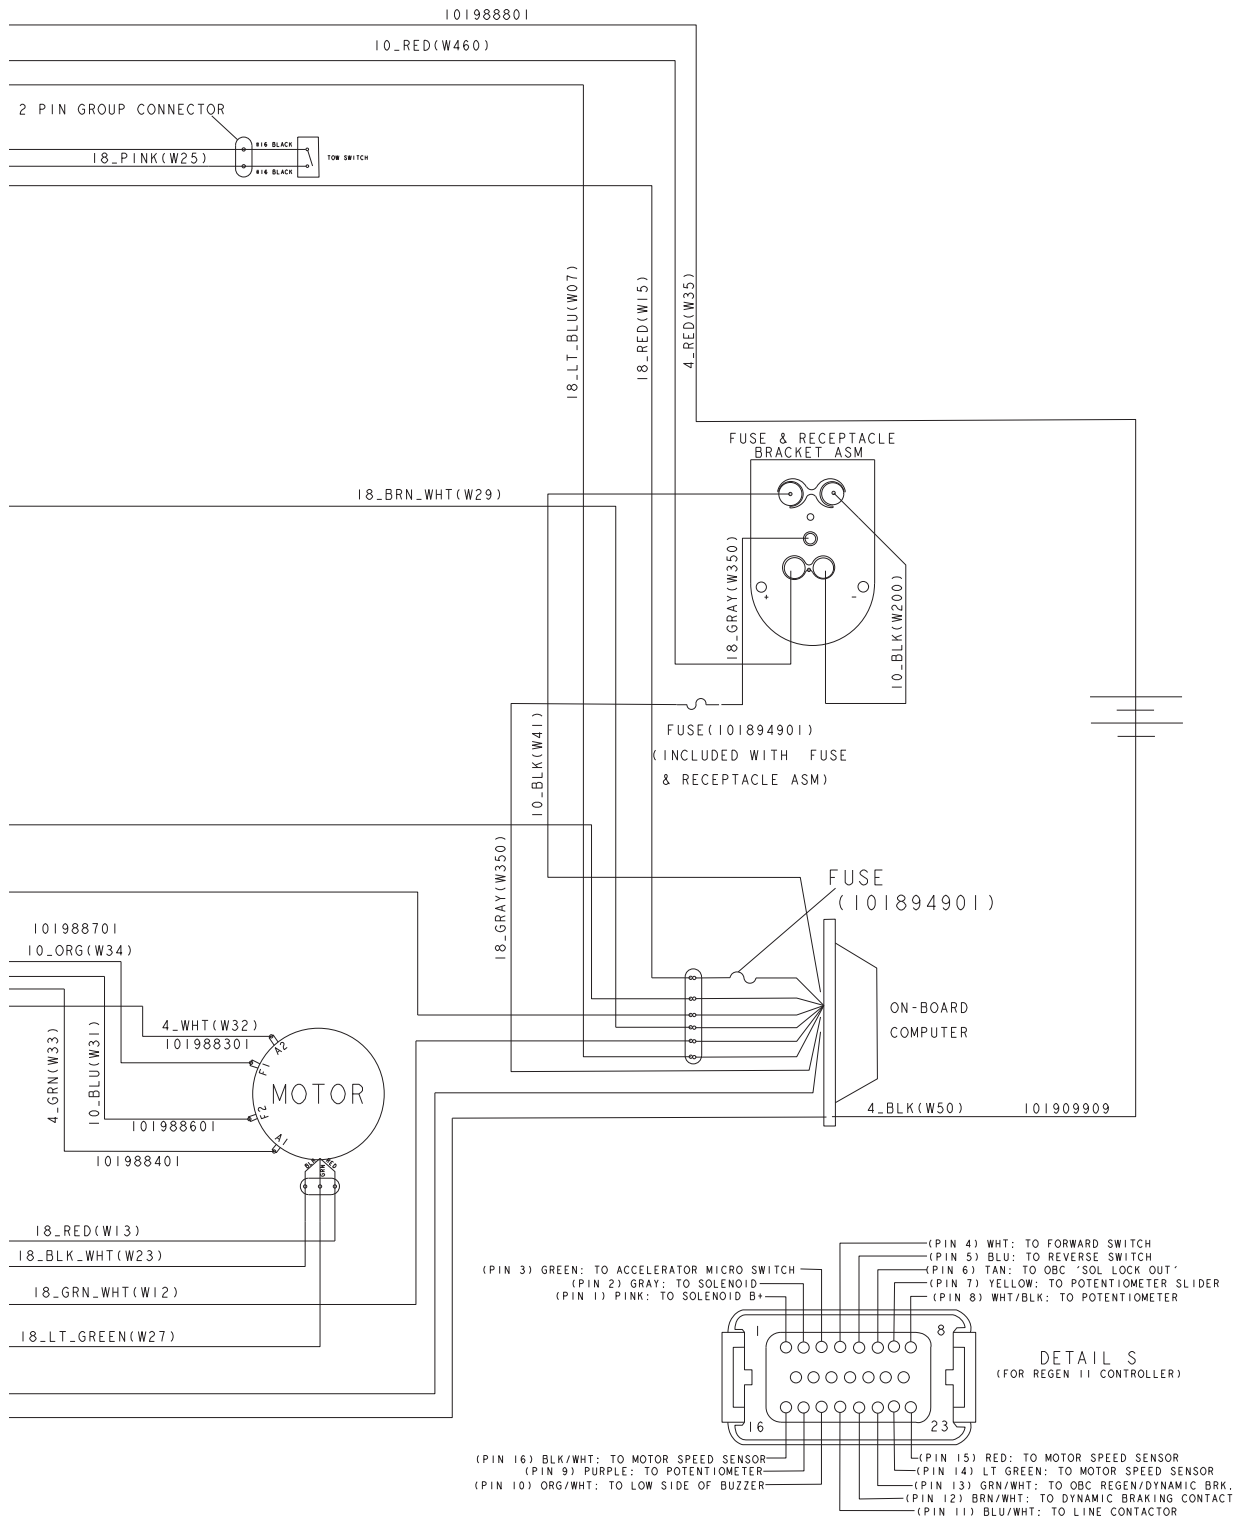


000652-001

See previous two pages for illustration.

WIRING – ELECTRIC LIMO

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>101919001</u>	Wire Harness Assy, Rev. Buzzer	1
2	<u>102361201</u>	Asm, Power Harness - Limo	1
3	<u>102361301</u>	Asm, Control Harness - Limo	1

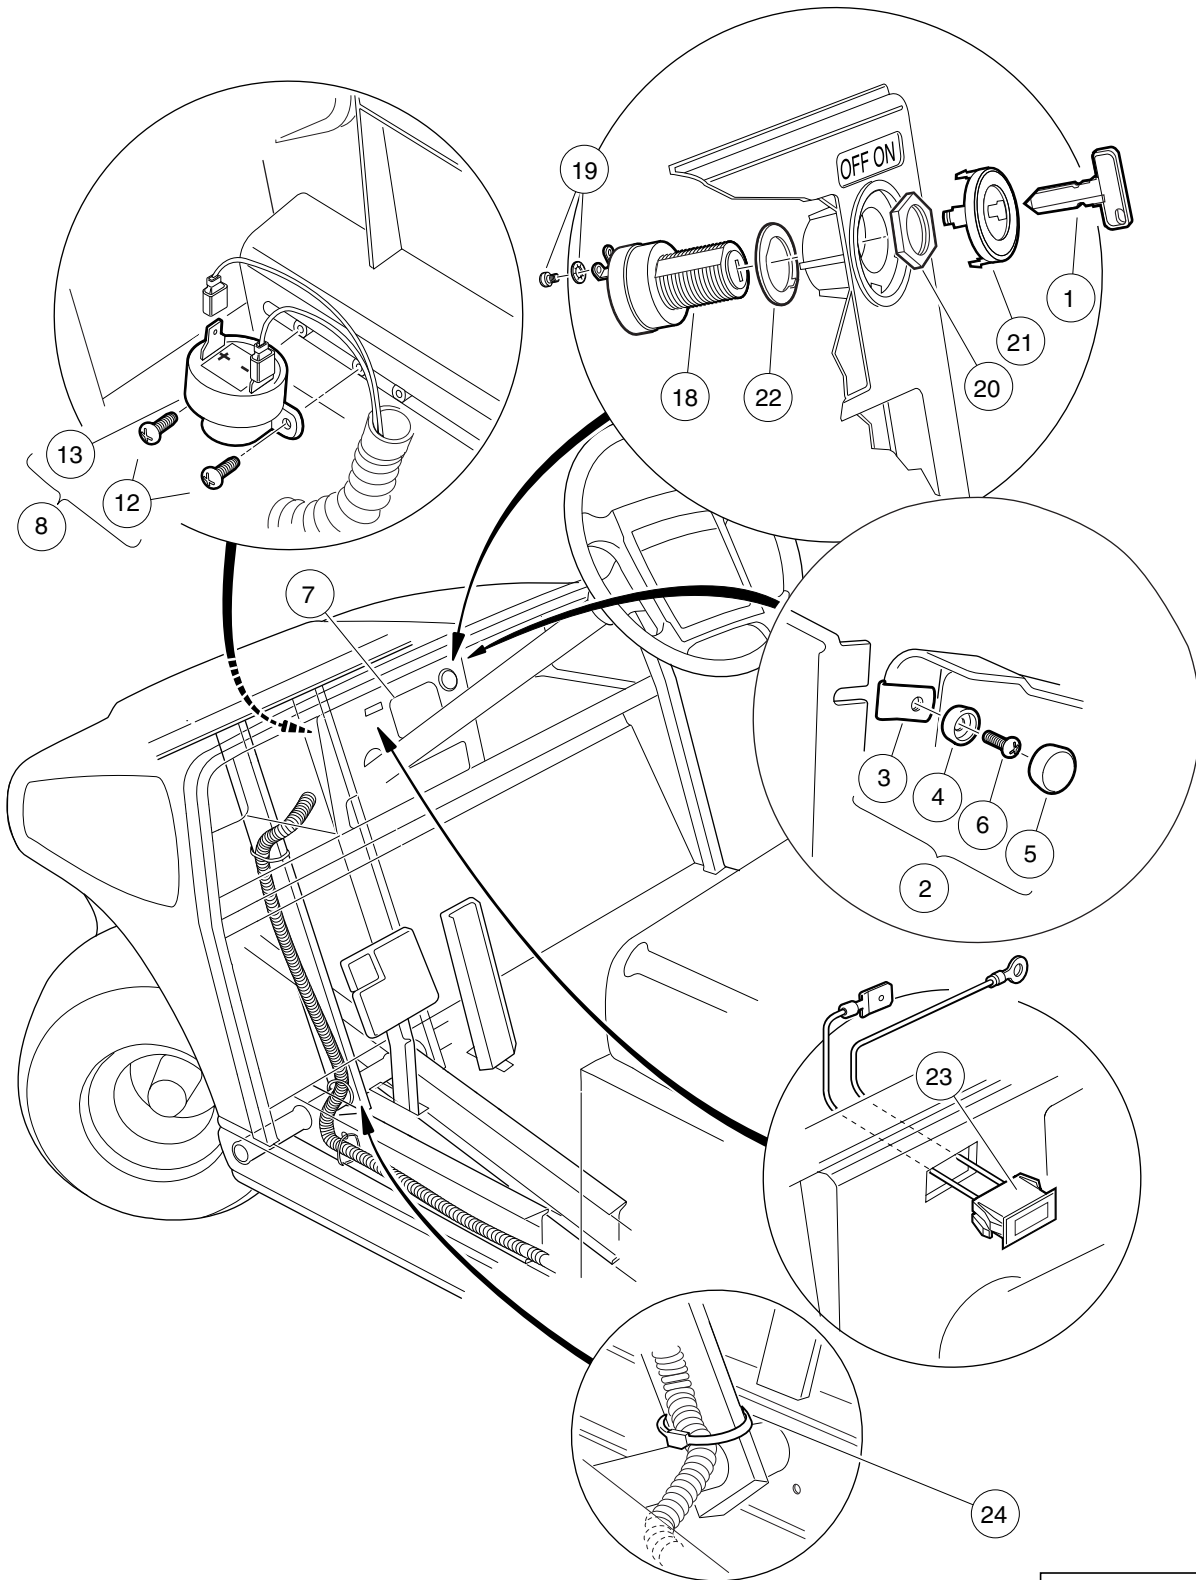


000655-001

INSTRUMENT PANEL AND ELECTRICAL COMPONENTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012505</u>	Keys (set of 2)	1
2	<u>1014645</u>	Snap Washer Kit, Black (includes items 3 through 6)	2
3	<u>1011019</u>	Nut, Speed	1
4	1011382	Washer, #10 Pan-Head Screw	1
5	<u>1013494</u>	Cover, Screw Head	1
6	1620	Screw, #10-16 X 0.75 Pan-Head Tap	1
7	101660404	Dash Panel, Black Center	1
8	<u>1016859</u>	Kit, Reverse Buzzer (includes items 9 through 17)	1
9	<u>1011229</u>	Locknut, #6-32 Whiz	1
10	1012431	Washer, #4 Flat	2
11	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
12	<u>1016849</u>	Screw, #4-24 X 0.33 Pan-Head Machine	2
13	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
14	1016857	Wire Assembly Black #18	1
15	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2
16	<u>8057</u>	Nut, #4-40 Hex Machine	2
17	<u>8058</u>	Lockwasher, #4 Split	2
18	<u>101826201</u>	Key Switch, On/Off	1
19	101830601	Screw and Washer Assembly	2
20	<u>101830701</u>	Nut, Key Switch	1
21	<u>101834502</u>	Cap, Black Key Switch	1
22	<u>101851101</u>	Washer, Key Switch	1
23	<u>101935501</u>	Light, Battery (Amber)	1
24	<u>8990</u>	Tie Wrap, 8" Nylon	2
Note: Item 8 contains parts that are not used in this application.			

12


E

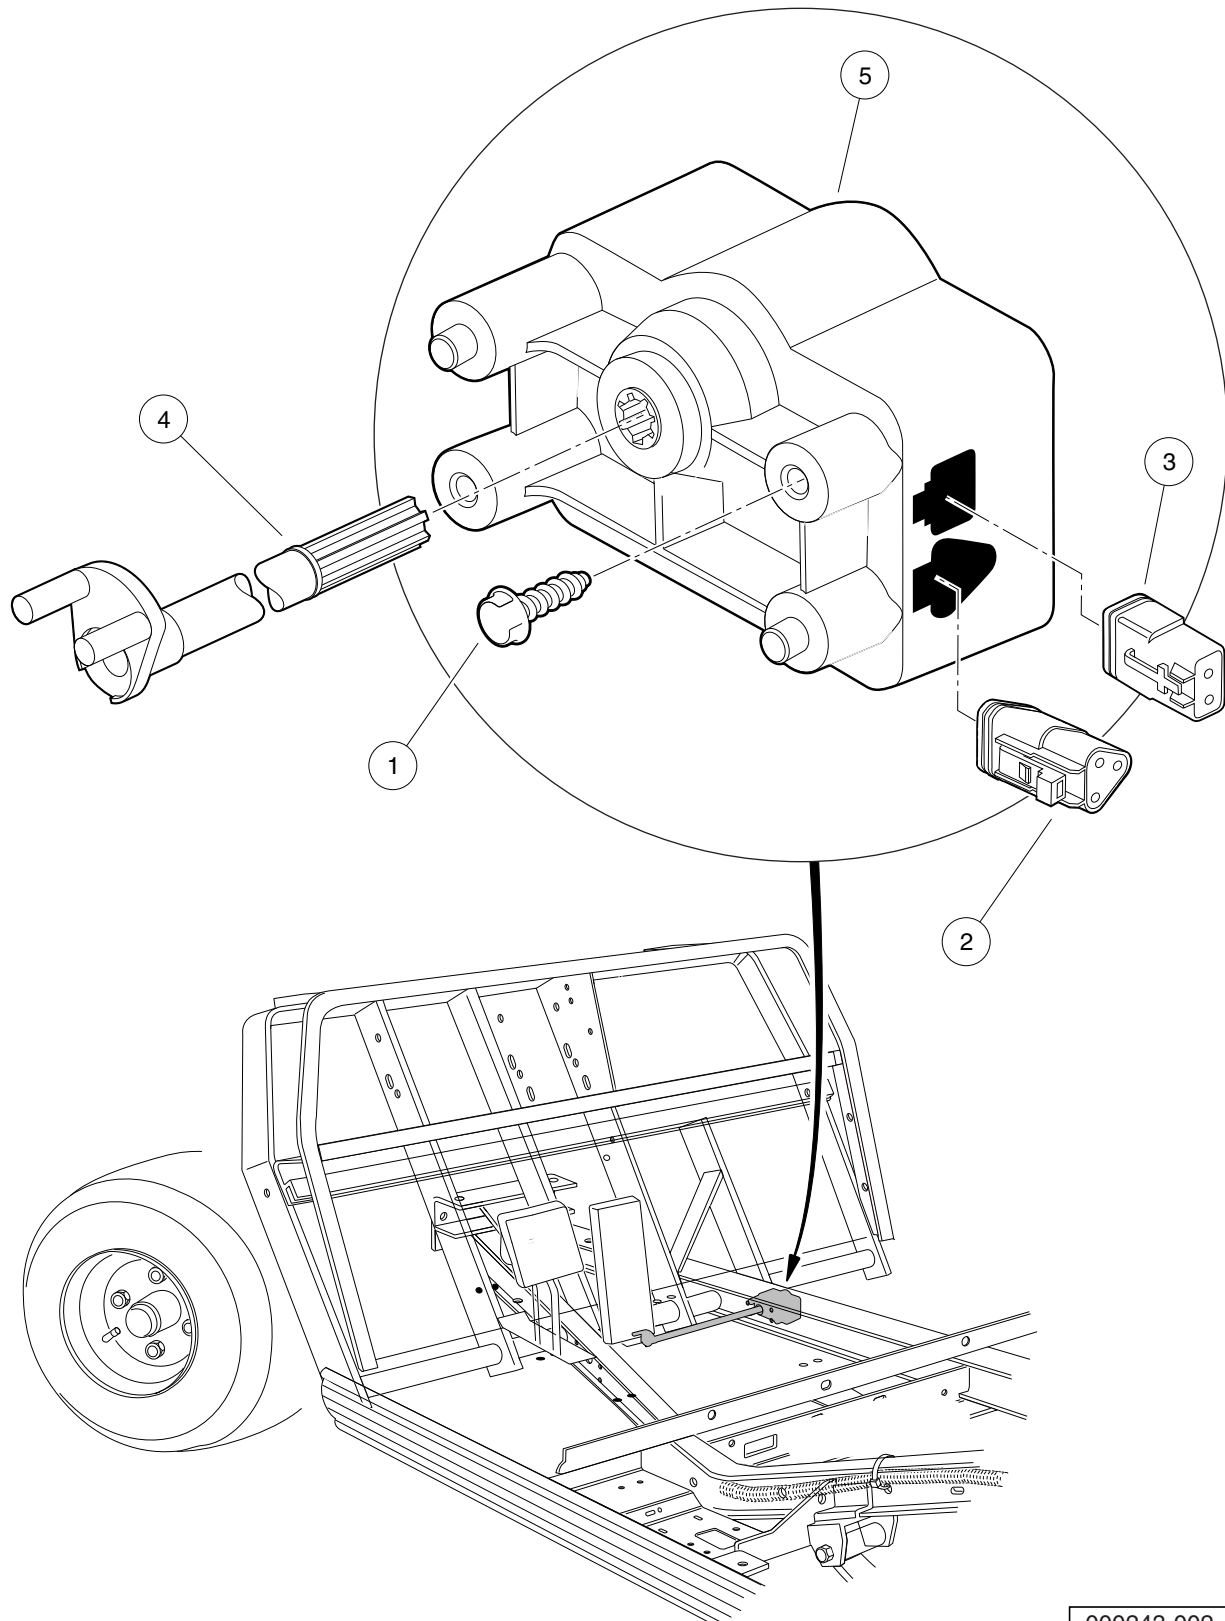

000243-002

MOTOR CONTROLLER OUTPUT REGULATOR (MCOR)


ITEM	PART NO.	DESCRIPTION	QTY	12
		1 2 3 4		
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	2	
2	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1	E
3	<u>101936801</u>	Kit, 2-Pin Wedge Lock	1	
4	<u>102101001</u>	Bar, Drive, Cast	1	
5	<u>102101101</u>	MCOR	1	

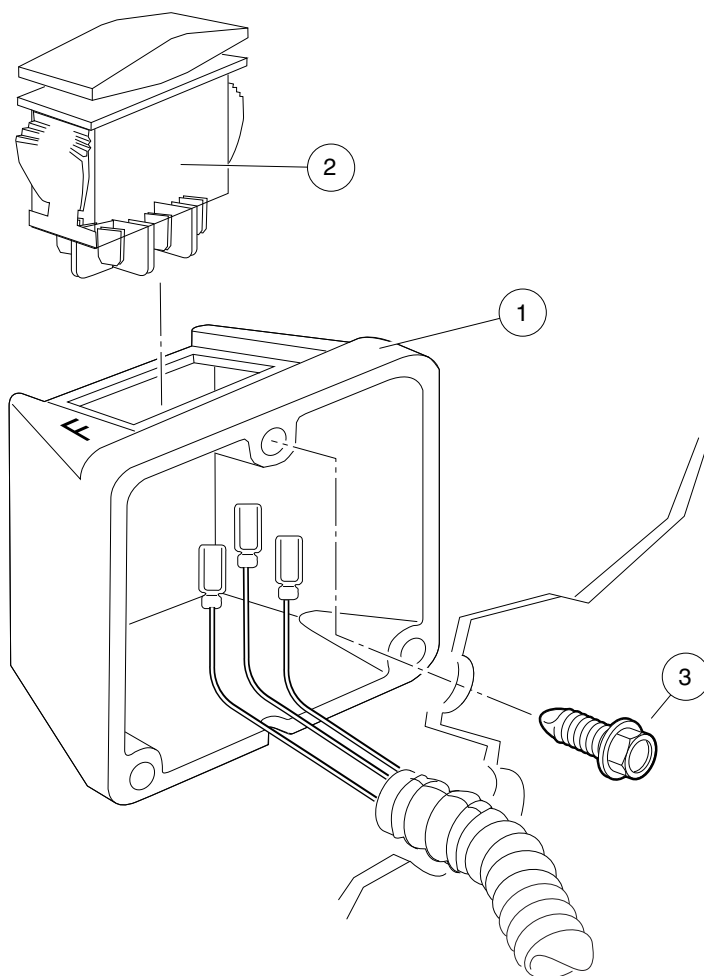

000653-001

FORWARD/REVERSE SWITCH

ITEM	PART NO.	DESCRIPTION	QTY	12
		1 2 3 4		
1	<u>101855001</u>	Case, FNR Switch	1	
2	<u>101856002</u>	Switch, Rocker, Single-Pole	1	E
3	<u>101856102</u>	Screw, 1/4-15 X 1.50 Hi-lo Hex	3	

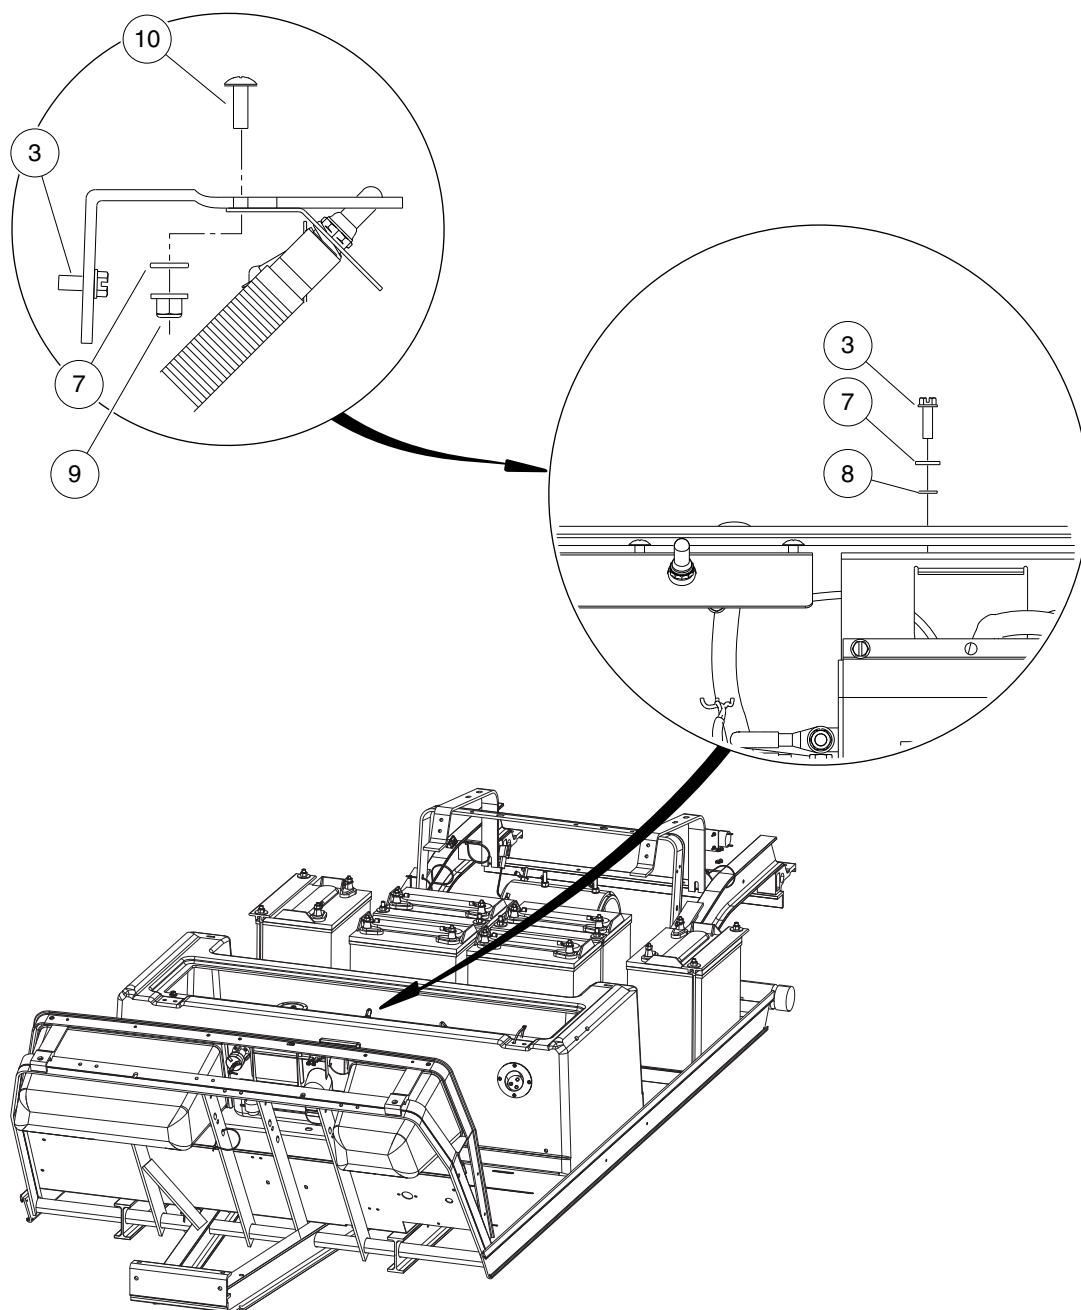

000651-001

ELECTRICAL INSTALLATION


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Elec Sys Instl Limo Regen (includes items 2 through 6)	1
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	5
3	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4
4	<u>451</u>	Lockwasher, 1/4 Split	2
5	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2
6	<u>8248</u>	Screw, 1/4-20 X 0.75 Truss-Head Machine	2

12

E

12

E

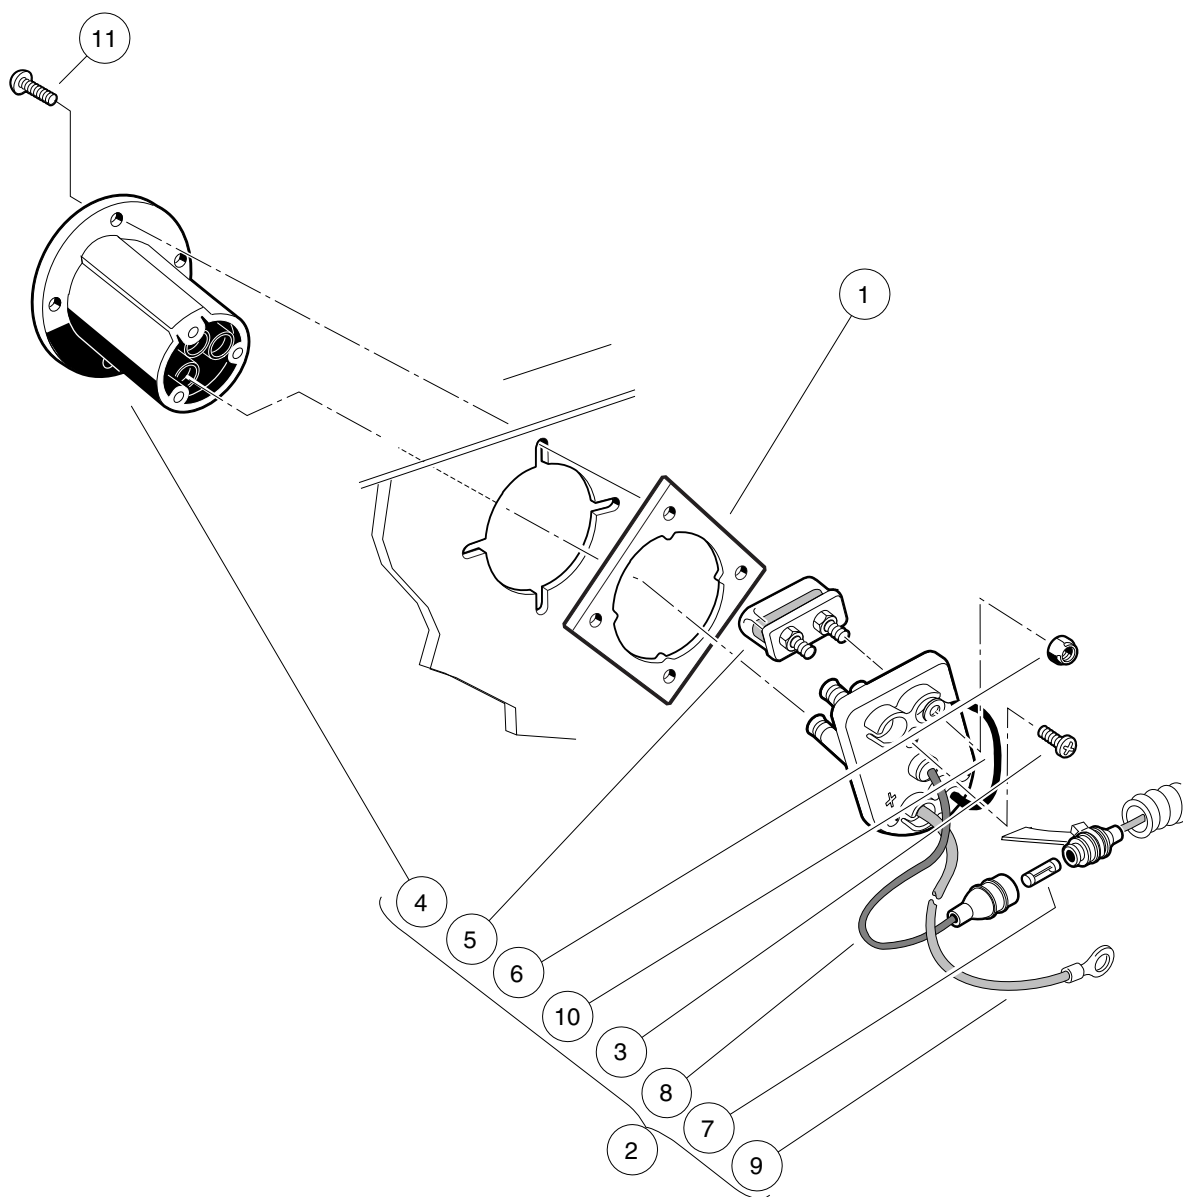


000369-001

BATTERY CHARGER RECEPTACLE



ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101801001</u>	Plate, Receptacle Backing	1
2	<u>101802101</u>	Fuse and Receptacle Assembly (includes items 3 through 10)	1
3	<u>1017705</u>	Screw, #8 X 5/8 Phillips Pan-Head Type AB	3
4	<u>101796501</u>	Receptacle	1
5	<u>101796801</u>	Fuse Assembly (includes item 6)	1
6	<u>1013061</u>	Locknut, #10-32 Nylon Insert	2
7	N/A	Fuse, 3/8-Amp	1
8	N/A	Wire Assembly, Sense Lead, Gray	1
9	N/A	Wire Assembly, #10 Red	1
10	N/A	Wire Assembly, #10 Black	1
11	<u>101832001</u>	Screw, #7-19 X 0.625 Phillips Pan-Head Tap	4

12

E

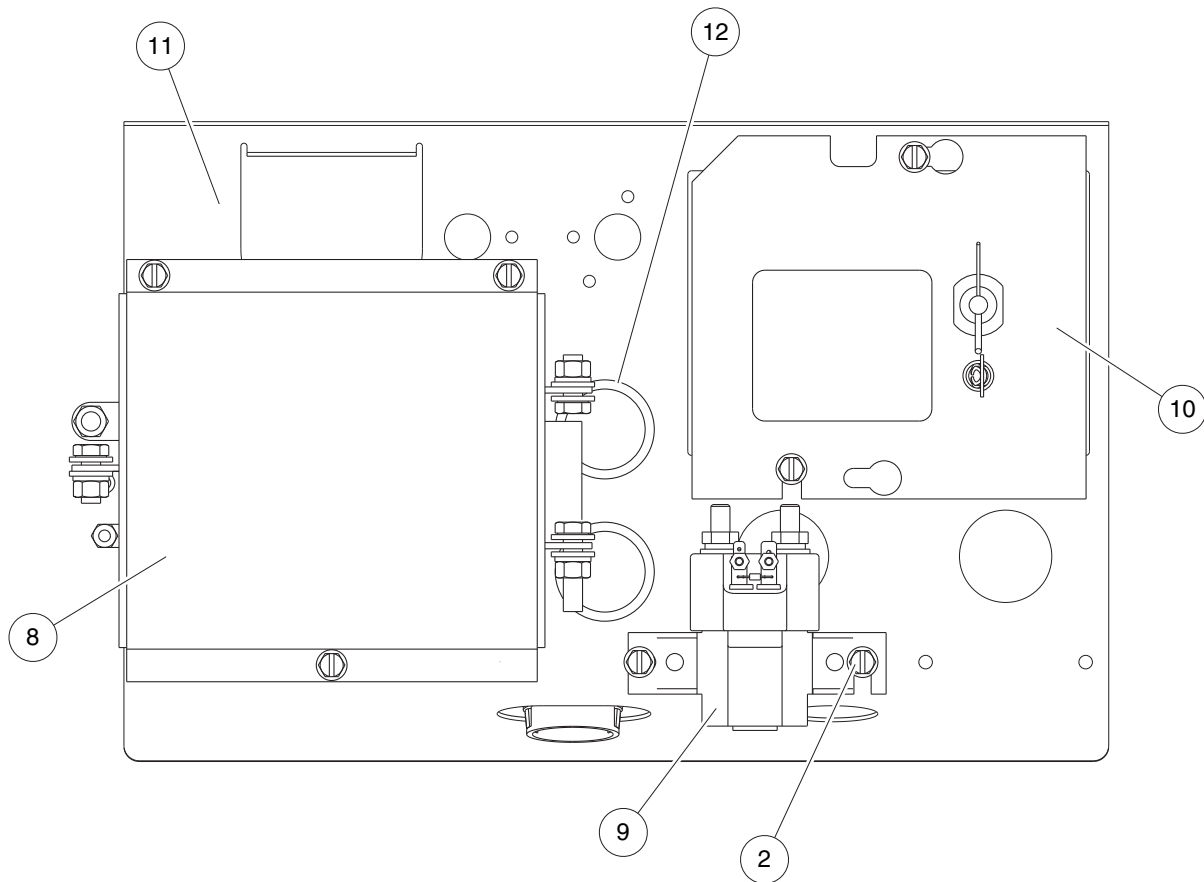

000654-001

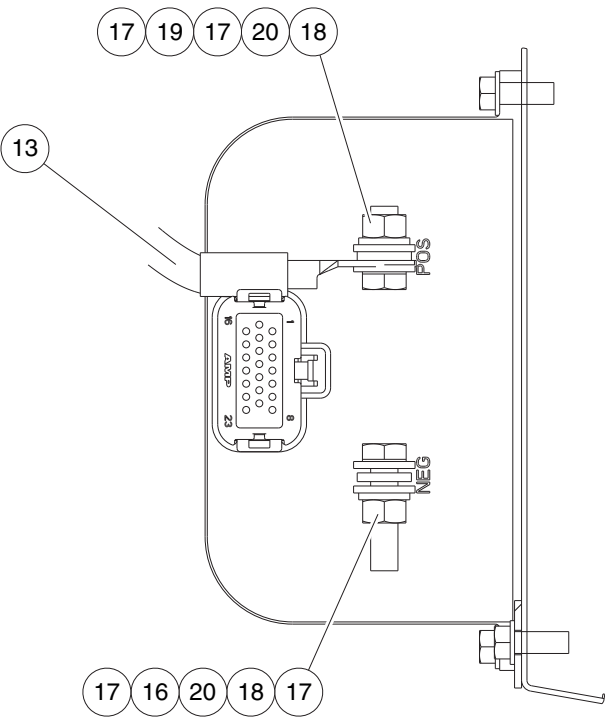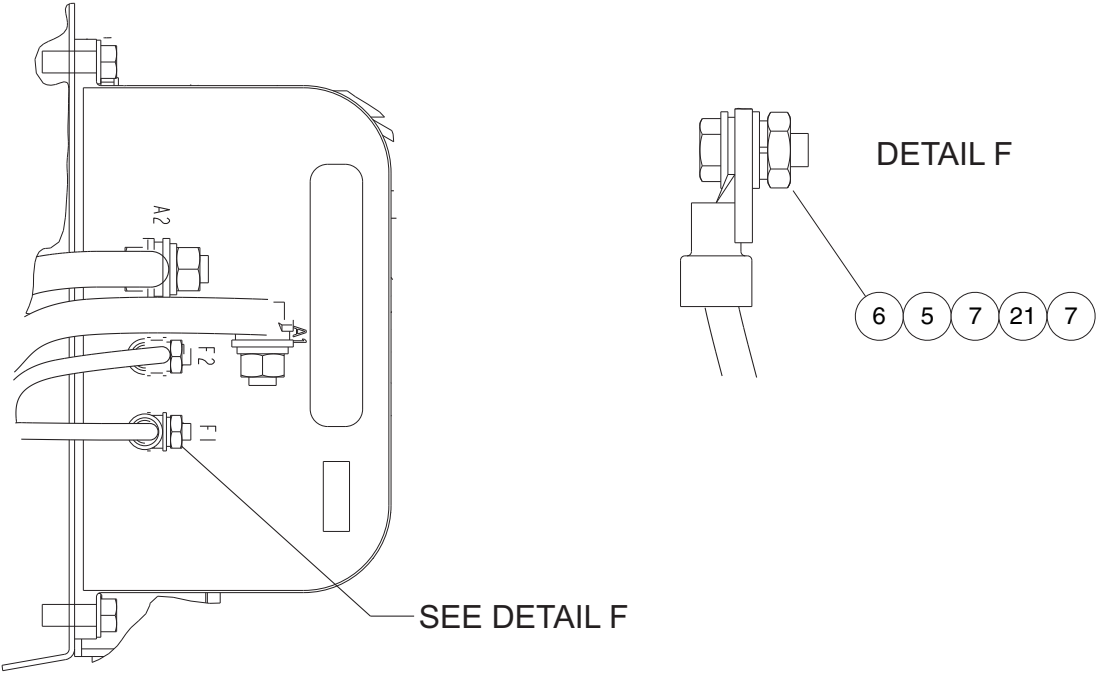

000654-001


See previous two pages for illustration.

ELECTRICAL COMPONENTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Components Mounting Plate Assembly, HD Regen Limo (includes items 2 through 19)	1
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	7
3	<u>1012528</u>	Nut, M8-1.25 Hex	1
4	<u>1013734</u>	Lockwasher, 8mm Split	1
5	<u>1016</u>	Lockwasher, #10 Split	2
6	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
7	<u>1018038</u>	Washer, #10 Narrow Type 13 Flt	4
8	<u>101887906</u>	Controller, Regen 350-Amp 100V	1
9	<u>101908703</u>	Solenoid, 48v W/ Diode	1
10	101909909	Asm, OBC (Onboard Computer) Regen Limo	1
11	<u>101911701</u>	Plate, Electrical Component Mounting	1
12	<u>101924301</u>	Bushing, Snap	3
13	<u>101981301</u>	Wire Assy, #4 Yellow	1
14	1218	Screw, 5/16-18 X 1.25 Hex-Head Cap	1
15	<u>1241</u>	Washer, 5/16 Type A Flat	8
16	<u>1242</u>	Nut, 5/16-18 Hex	4
17	<u>7173</u>	Screw, 5/16-18 X 0.75 Hex-Head Cap	8
18	<u>7174</u>	Lockwasher, 5/16 Split	4
19	<u>8450</u>	Screw, #10-24 X 0.50 Hex-Head	2

12


E

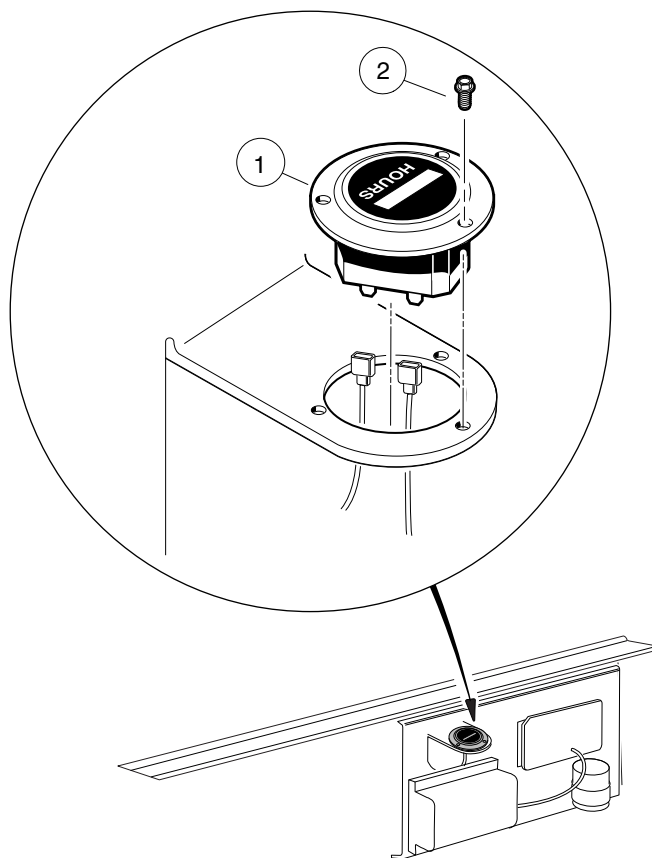

000346-003

HOUR METER

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>1014540</u>	1 2 3 4 Screw, #6-32 X 3/8 Taptite	3
2	N/A	Hour Meter	1

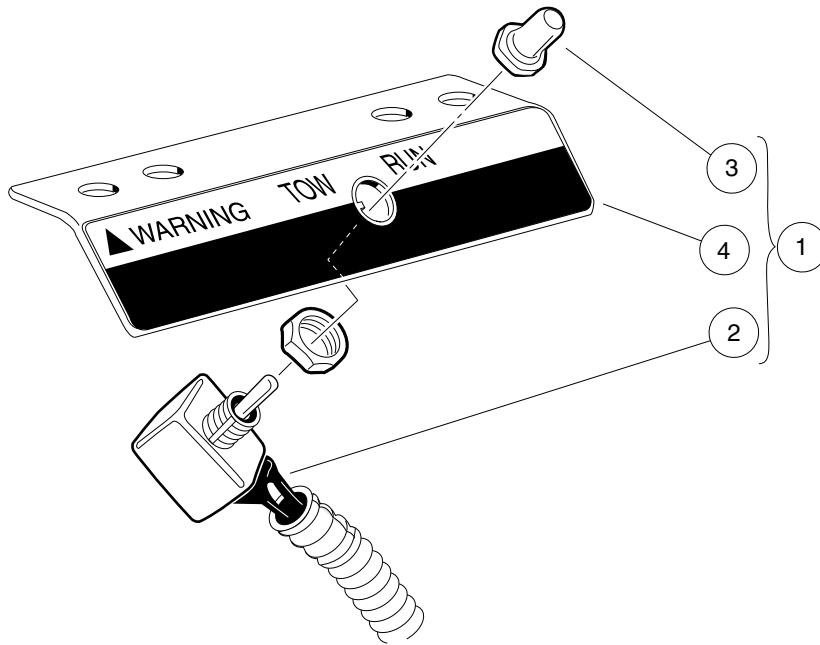


000605-001

TOW/RUN SWITCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Tow Switch Assembly (includes items 2 through 4)	1
2	<u>101908101</u>	Switch Assembly, Tow/Run	1
3	<u>101908401</u>	Boot, Switch	1
4	<u>101922501</u>	Bracket, Tow/Run Switch Mounting	1

12

E

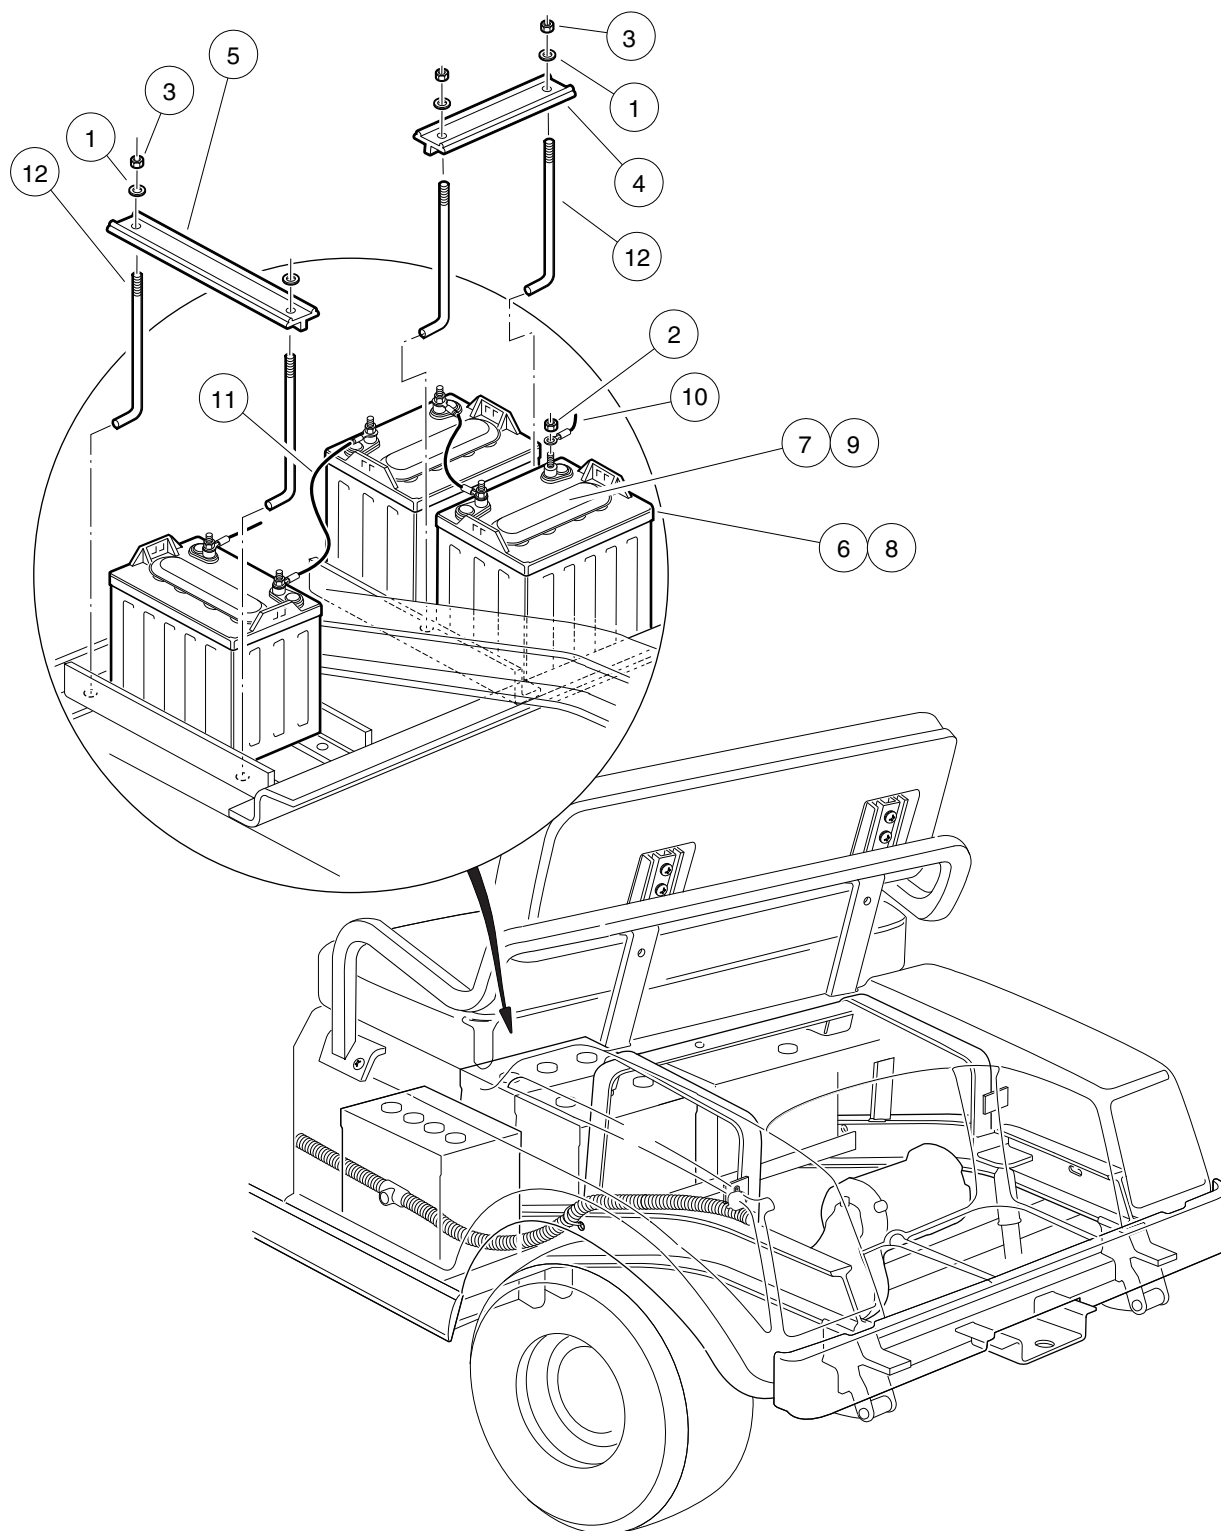


000348-004

BATTERIES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011578</u>	Washer, 5/16 Type B Flat	8
2	<u>1014304</u>	Nut, 5/16-18 Stainless-Steel Hex	12
3	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	8
4	<u>101803001</u>	Battery Holddown 48v	2
5	<u>101803002</u>	Battery Holddown	2
6	<u>101964201</u>	Battery, 8v Trojan T890 (Wet) (includes item 7)	6
7	<u>101797801</u>	Cap, 4-Gang Battery	1
8	<u>101964202</u>	Battery, 8v Trojan T890 (Dry, also known as moist) (includes item 9)	6
9	<u>101797801</u>	Cap, 4-Gang Battery	1
10	<u>102002801</u>	Wire Assy, #4 Black	4
11	<u>102002901</u>	Wire Assy, #4 Black	1
12	<u>102845203</u>	Rod, Battery Hold Down 10.7"	8

12

E

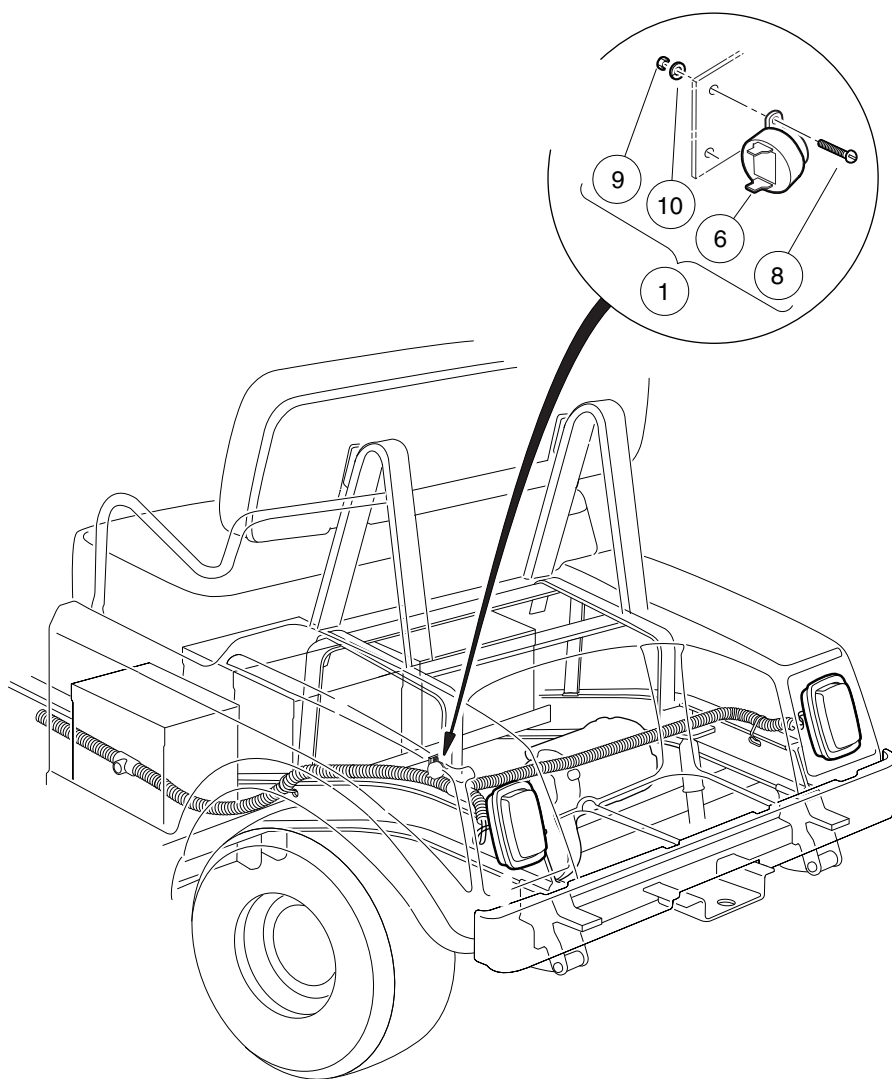

000433-001

REAR REVERSE BUZZER


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016859</u>	Kit, Reverse Buzzer (includes items 2 through 10)	1
2	<u>1011229</u>	Locknut, #6-32 Whiz	1
3	<u>1012431</u>	Washer, #4 Flat	2
4	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
5	<u>1016849</u>	Screw, #4-24 X 0.33 Pan-Head Machine	2
6	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
7	<u>1016857</u>	Wire Assembly Black #18	1
8	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2
9	<u>8057</u>	Nut, #4-40 Hex Machine	2
10	<u>8058</u>	Lockwasher, #4 Split	2
Note: Note: Items 2 through 5 and 7 are included in the kit, but are not used in this application.			

12
E

ELECTRIC MOTOR

13

E

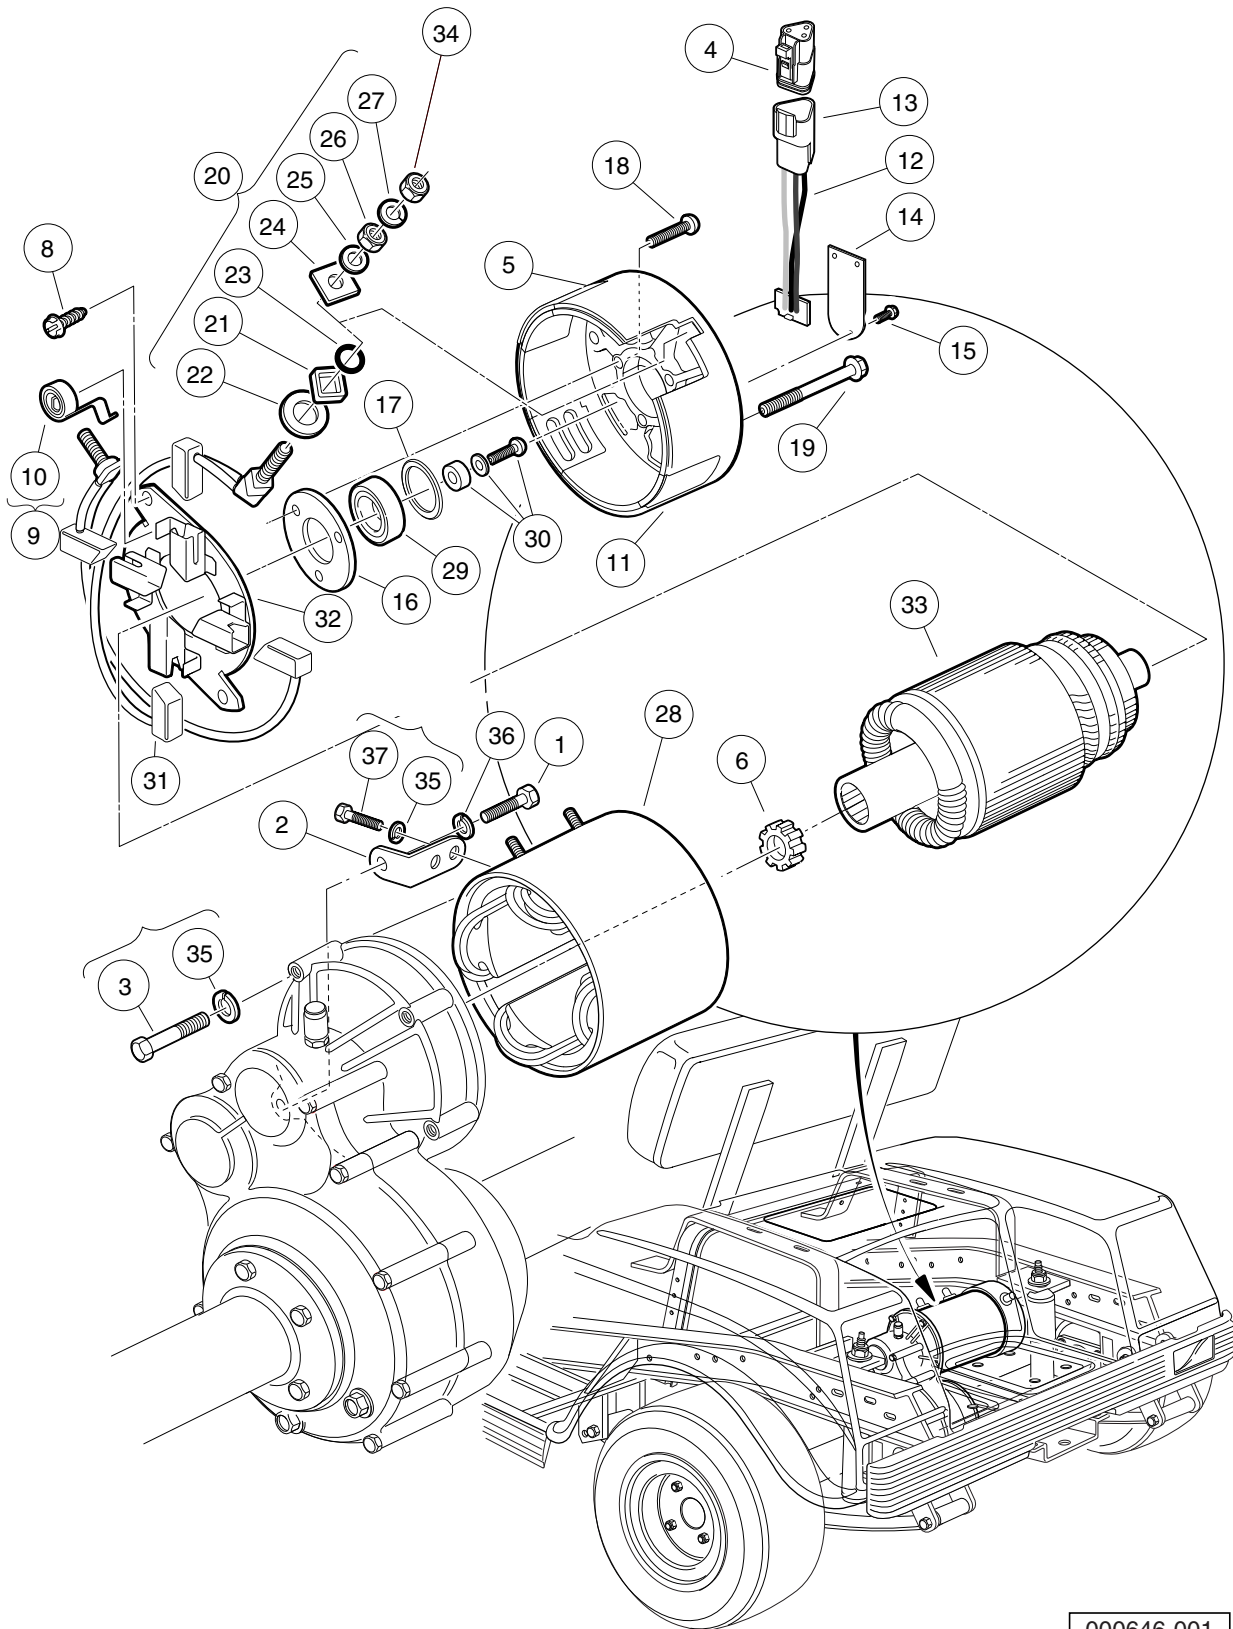


000646-001

MOTOR (MODEL 5BC49JB2057A) – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1
2	<u>1012177</u>	Motor Axle Clip	1
3	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	3
4	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
5	<u>102064501</u>	Cap, Hd Shunt Motor Dust	4
6	<u>102235201</u>	Bumper, Drive Unit	1
7	<u>102237302</u>	Motor, 48-Volt HD CPR Brush * (includes items 8 through 33)	1
8	<u>1011283</u>	Screw, #6-32 X.50 Hex Thrd Rol	2
9	<u>1011411</u>	Kit, Brush Spring (ge Motor) (includes item 10)	1
10	<u>1011285</u>	Brush Spring	4
11	<u>102061901</u>	Shield, HD Shunt Motor End (includes items 12 through 15)	1
12	<u>101925801</u>	Sensor, Hall Effect (includes item 13)	1
13	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
14	N/A	Plate, Retaining	1
15	N/A	Screw	3
16	<u>102062101</u>	Retainer, Bearing	1
17	<u>102063301</u>	Spacer	1
18	<u>102063501</u>	Screw, #8-32 X .750 Slot Rd Hd	3
19	<u>102063601</u>	Screw, 1/4-20 X 3.25 Hex Cap	2
20	<u>102063701</u>	Hardware Package (includes items 21 through 27)	1
21	N/A	Bushing, Insulator	4
22	<u>102078301</u>	Spacer	4
23	N/A	O-Ring	4
24	N/A	Bushing, Insulator	4
25	<u>1241</u>	Washer, 5/16 Type A Flat	4
26	<u>1242</u>	Nut, 5/16-18 Hex	4
27	<u>7174</u>	Lockwasher, 5/16 Split	4
28	<u>102064301</u>	Stator Shell and Winding	1
29	<u>102064401</u>	Bearing, Hd Shunt Motor Ball	1
30	<u>102176401</u>	Speed Sensor Magnet Kit	1
31	<u>102302201</u>	Brush Package	1
32	<u>102302301</u>	Brush Rigging	1
33	N/A	Armature, Limo Motor	1
34	<u>1242</u>	Nut, 5/16-18 Hex	4
35	<u>451</u>	Lockwasher, 1/4 Split	5
36	<u>7174</u>	Lockwasher, 5/16 Split	1
37	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2
* Note: The model 5BC49JB2057A motor has been discontinued. To replace the motor, use motor model ET6-4001.			

13
E

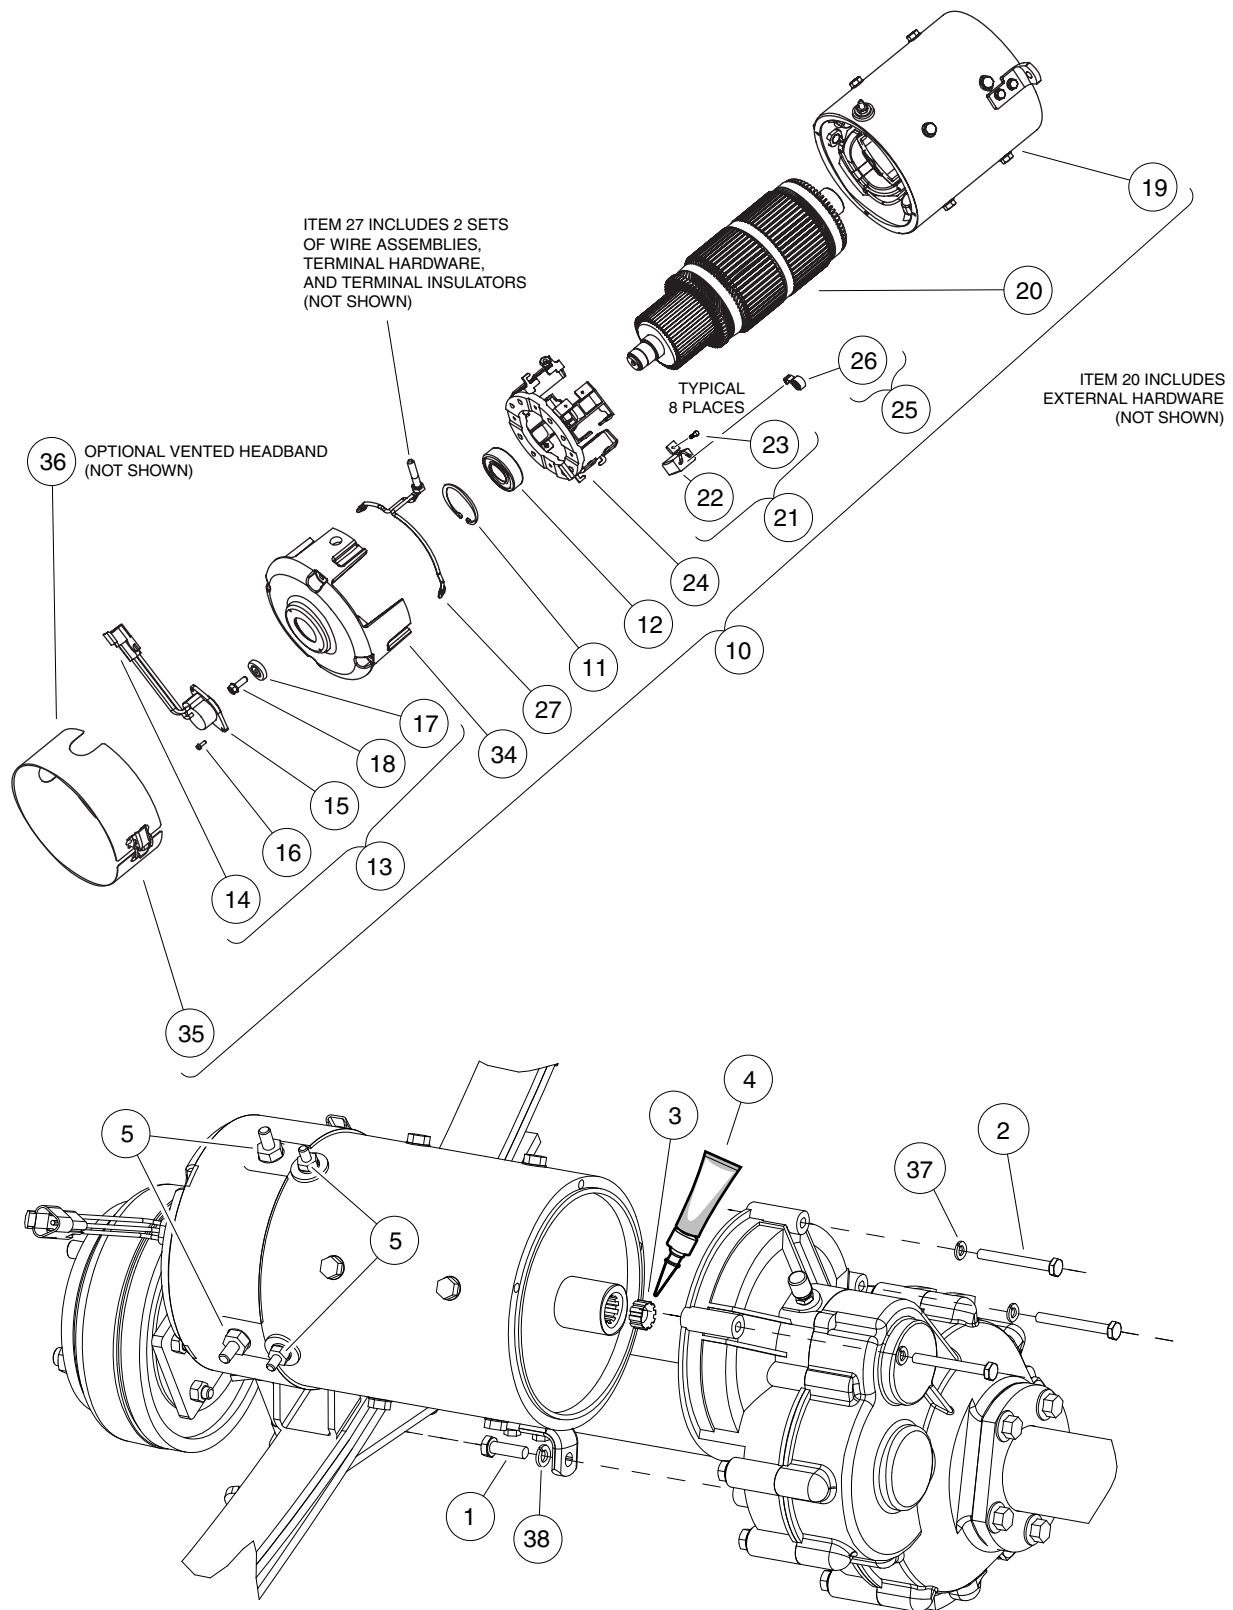

000411-002

MOTOR (MODEL ET6-4001) – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1
2	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	3
3	<u>102235201</u>	Bumper, Drive Unit	1
4	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
5	<u>102951701</u>	Pkg, Terminal Hardware, 3.7hp (includes items 6 through 9)	1
6	N/A	Nut, 5/16, Steel	2
7	N/A	Lockwasher, 5/16, Steel	2
8	N/A	Nut, 1/4-20, Steel	2
9	N/A	Lockwasher, 1/4-20, Steel	2
10	<u>102989201</u>	Motor, 48-Volt HD Limo (includes items 11 through 35)	1
11	<u>102186301</u>	Ring, 2.24" Internal Retaining	1
12	<u>102186401</u>	Bearing, Ball	1
13	<u>102704901</u>	Kit, Speed Sensor (includes items 14 through 18)	1
14	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
15	N/A	Sensor, Motor Speed, ADC	1
16	N/A	Screw, #8-32, Taptite Thread	2
17	N/A	Magnet, ADC Motor	1
18	N/A	Screw, 1/4-20 x 0.5	1
19	N/A	Asm, Frame and Field, Limo HD Motor (includes item 20)	1
20	N/A	Armature, Motor	1
21	N/A	Kit, Brush, Limo ADC Motor (includes items 22 and 23)	1
22	N/A	Brush, Motor, ADC Motor	8
23	N/A	Screw, Taptite, ADC Motor	8
24	N/A	Asm, Brush Box, Motor	1
25	N/A	Kit, Brush Spring, ADC Motor (includes item 26)	1
26	N/A	Brush Spring, ADC Motor	8
27	N/A	Kit, Brush Lead Asm, ADC Motor (includes items 28 through 33)	1
28	N/A	Terminal & Lead, ADC Motor	2
29	N/A	Insulator, Term. ADC Motor	2
30	N/A	Washer, Insulating, Motor	2
31	N/A	Washer, Flat, 5/16	2
32	N/A	Nut, 5/16 ADC Motor	4
33	N/A	Lockwasher, 5/16 ADC Motor	2
34	N/A	Commutator End Head, Motor	1
35	N/A	Sealed Headband, Motor	1
36	N/A	Vented Headband, Motor	1
37	<u>451</u>	Lockwasher, 1/4 Split	3
38	<u>7174</u>	Lockwasher, 5/16 Split	1

13


E

TRANSAXLE – ELECTRIC VEHICLE

14

E

Note: This transaxle (as a complete unit) has been discontinued. To replace the entire transaxle, use the transaxle shown on the following pages.

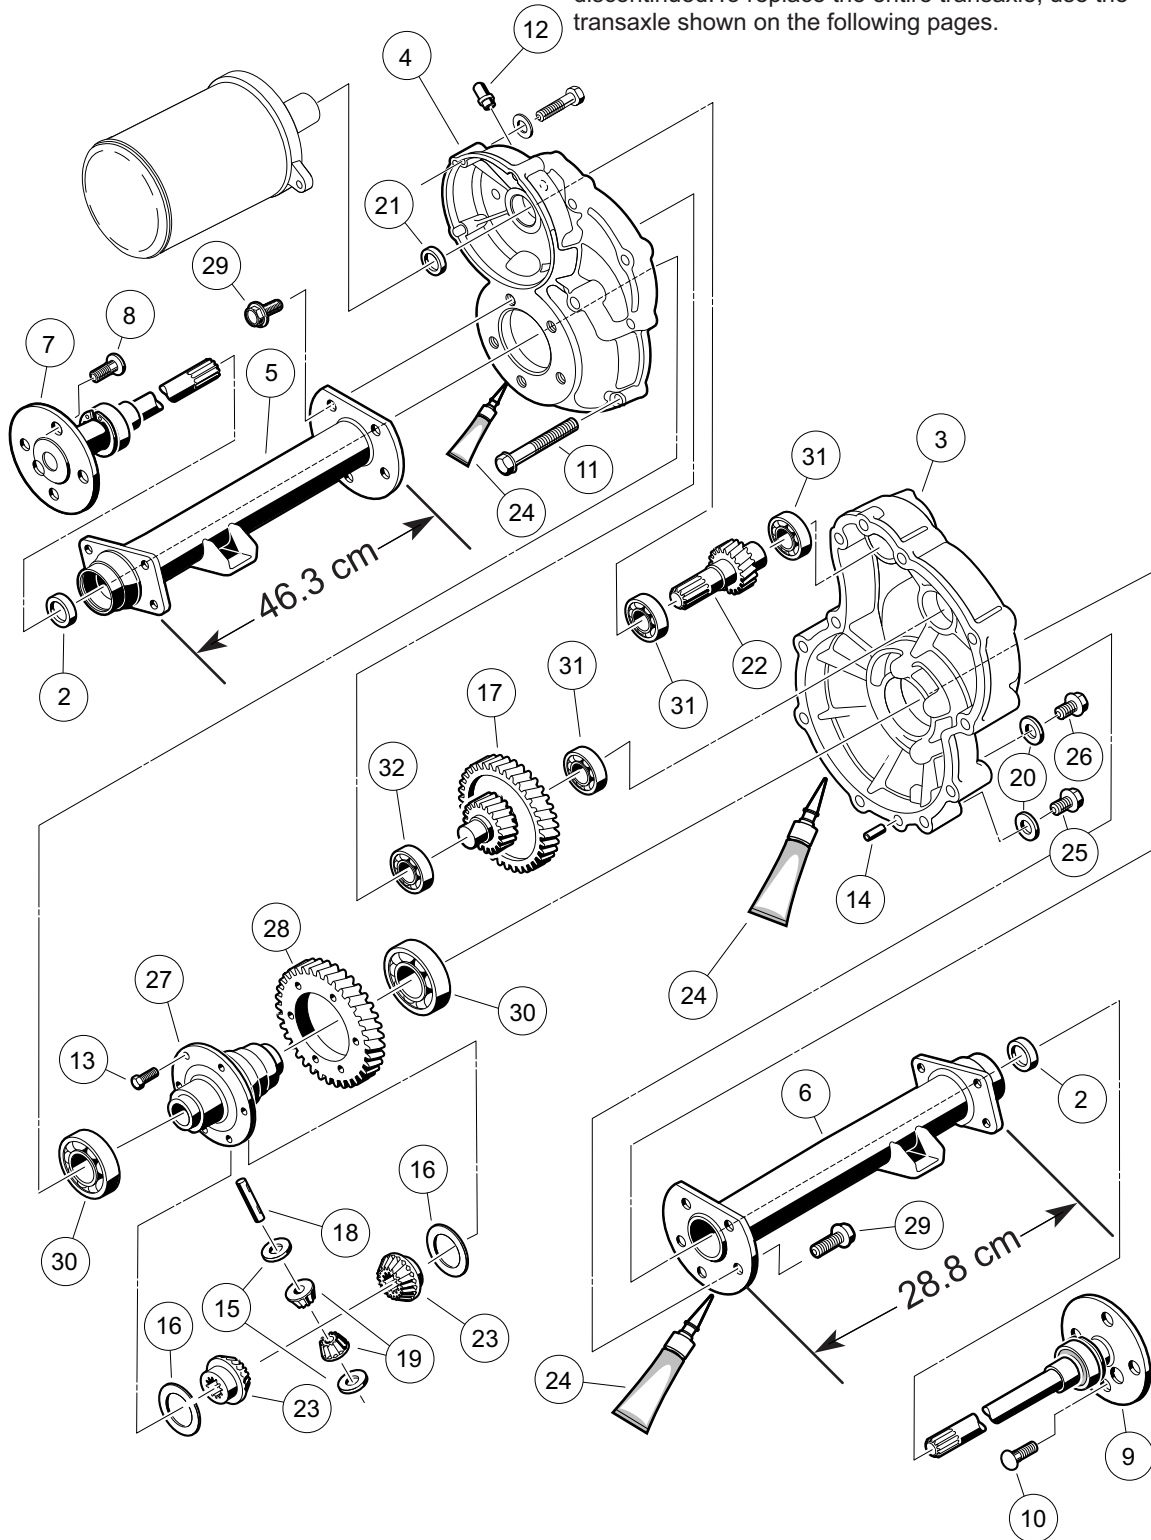


000223-001

TRANSAXLE – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>101896001</u>	1 2 3 4 Transaxle -12.3 Note: If either the Differential Output Gear (item 28) or the Differential Housing (item 27) require replacement, both must be purchased at the same time. Items 27 and 28 are replacements for all gear and differential housing combinations in this transaxle.	1

14

E

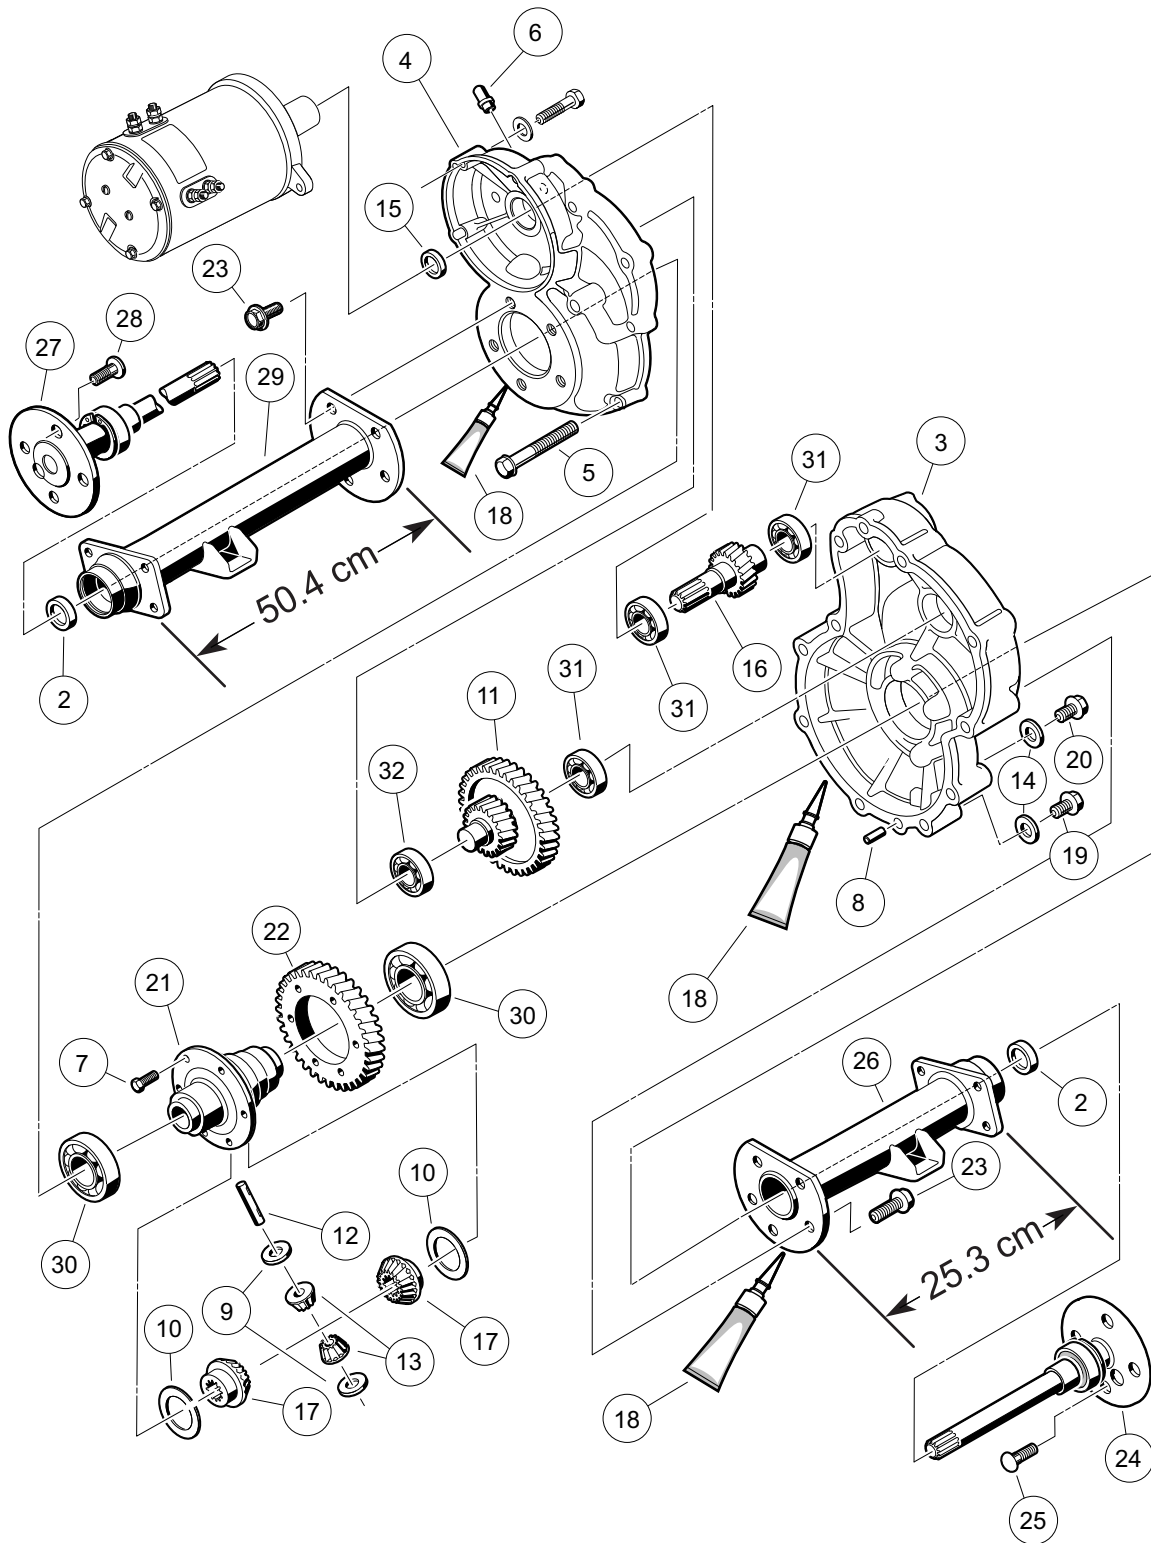

000223-002

TRANSAXLE – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102771701</u>	Transaxle, Electric (includes items 2 through 32)	1
2	<u>1013794</u>	Axle Shaft Oil Seal	2
3	<u>101895401</u>	Gear Case, Left-Hand	1
4	<u>101895501</u>	Gear Case, Passenger-Side	1
5	<u>101897001</u>	Screw, M8-1.25 X 60mm Hex-Head	11
6	<u>101897201</u>	Breather	1
7	<u>101897401</u>	Screw, M10-1.25 X 25mm	6
8	<u>101897601</u>	Pin, 11mm OD X 8.5mm ID X 10mm	2
9	<u>101903601</u>	Washer, Thrust	2
10	<u>101903701</u>	Washer, Thrust	2
11	<u>101906901</u>	Intermediate Shaft Assembly	1
12	<u>101922101</u>	Pin, 15.99mm X 88.7mm Dowel	1
13	<u>101923001</u>	Gear, Differential Idler	2
14	<u>101923201</u>	Gasket	2
15	<u>101923501</u>	Seal, Lip	1
16	<u>101923701</u>	Shaft, Input	1
17	<u>101923901</u>	Gear, Differential	2
18	<u>101928701</u>	Liquid Gasket (Transaxle case)	1
19	<u>101972101</u>	Plug, M14-1.5 X 12mm Magnetic	1
20	<u>101972201</u>	Plug, M14-1.5 X 12mm Hex	1
21	<u>102356601</u>	Housing, Differential, 6 Bolt	1
22	<u>102356801</u>	Gear, Differential Output, 6-Bolt	1
23	<u>102357001</u>	Screw, Flg Hd M10 X 1.5 X 30	10
24	<u>102886301</u>	Axle Assembly, Driver-Side (includes item 25)	1
25	<u>101922201</u>	Lug Stud	4
26	<u>102886401</u>	Tube, Axle, Driver-Side	1
27	<u>102886501</u>	Axle Assembly, Passenger-Side (includes item 28)	1
28	<u>101922201</u>	Lug Stud	4
29	<u>102886601</u>	Tube, Axle, Passenger-Side	1
30	<u>7330</u>	Inner Axle Tube Bearing	2
31	<u>7335</u>	Bearing	3
32	<u>7336</u>	Bearing	1

14

E


BATTERY CHARGER

15

E

15

E

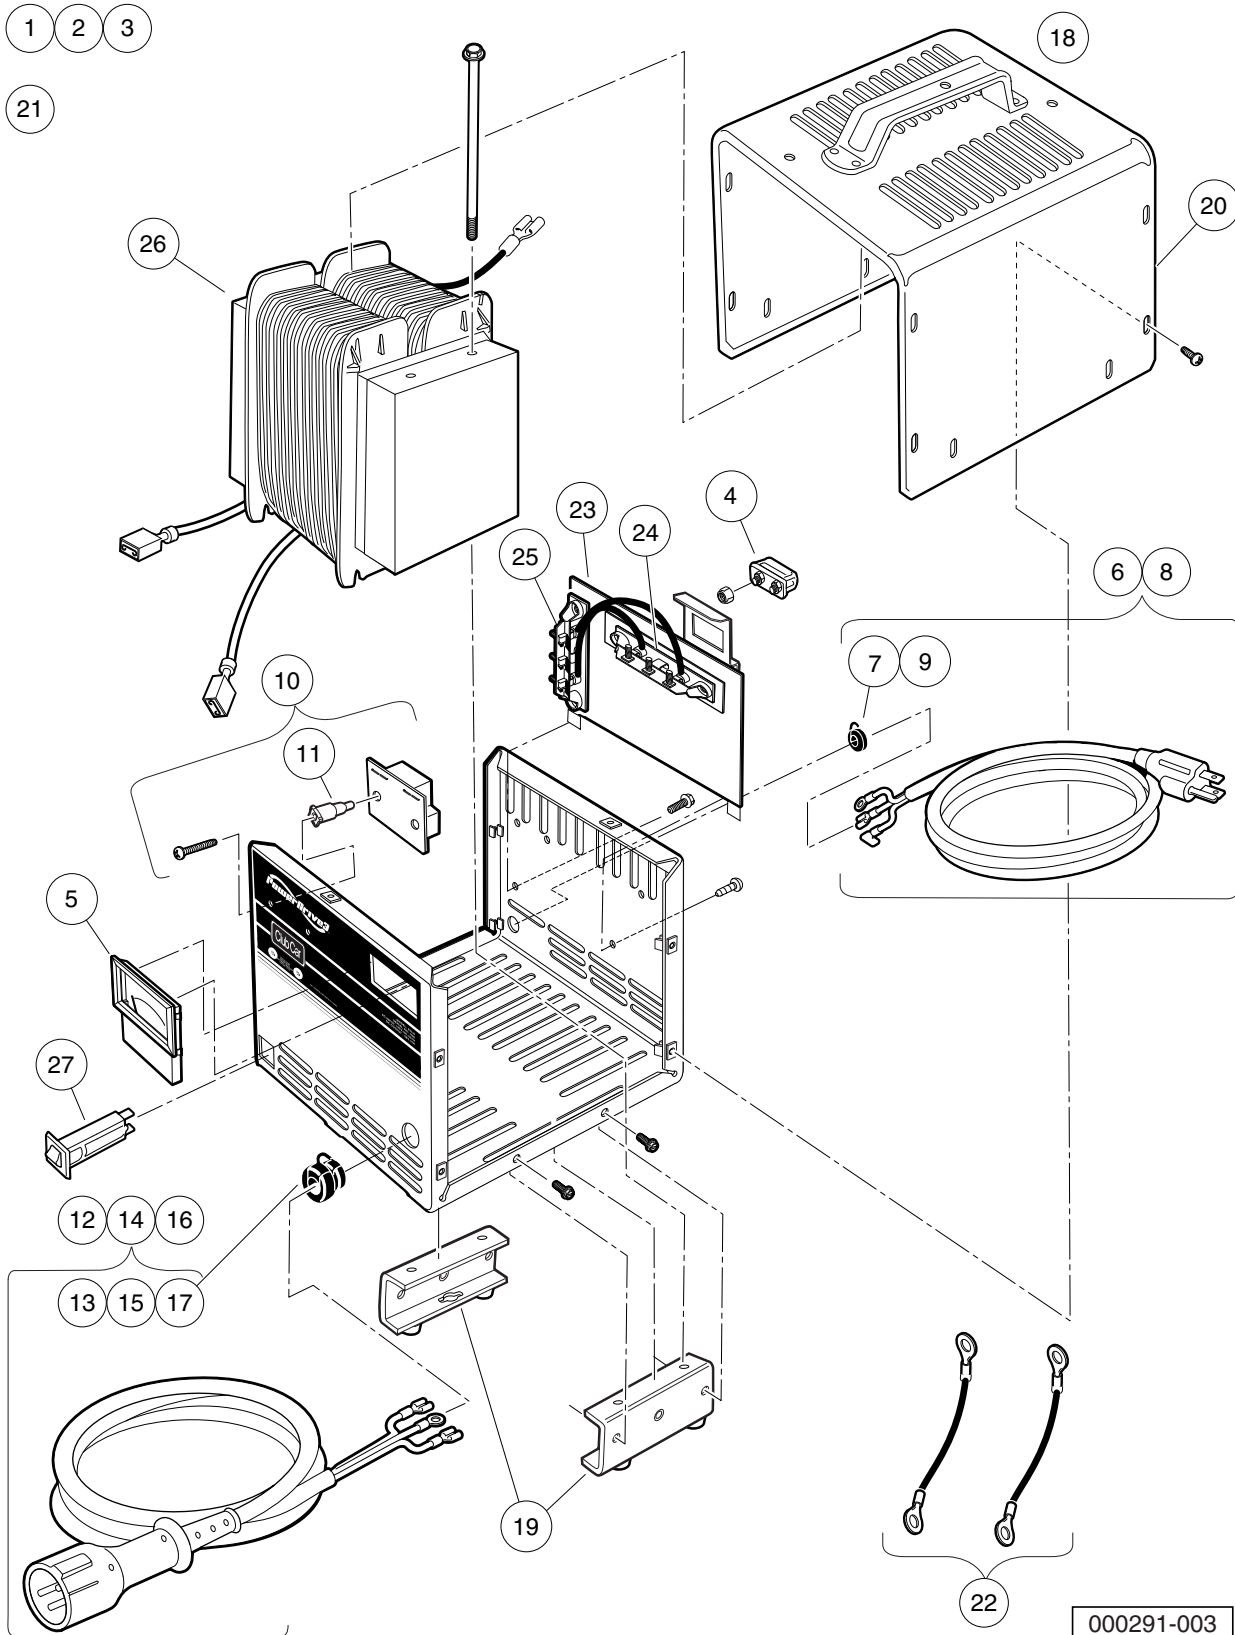


000291-003

POWERDRIVE 3 BATTERY CHARGER, DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103717001</u>	Chgr, Pd3 Stnry, 9Dc6'Ac'	1
2	<u>103717002</u>	Chgr, Pd3 Stnry, 12Dc9'Ac'	1
3	<u>103717003</u>	Chgr, Pd3 Stnry, 20Dc9'Ac'(includes items 4 through 27)	1
4	<u>102273701</u>	PD2 Fuse Asm	1
5	<u>102273801</u>	PD2 Ammeter	1
6	<u>103428501</u>	Kit, PD3 Cordset - AC 80" (includes item 7)	1
7	<u>102273901</u>	PD2 AC Cord Bushing	1
8	<u>103428601</u>	Kit, PD3 Cordset, - AC 114" (includes item 9)	1
9	<u>102273901</u>	PD2 AC Cord Bushing	1
10	<u>103428701</u>	Asm, PD3 Board Relay (includes item 11)	1
11	<u>103429701</u>	PD3 Plastic Stand-Offs	2
12	<u>103429001</u>	PD3 Cordset - DC 113" (includes item 13)	1
13	<u>1012098</u>	Bushing, DC Cord	1
14	<u>103429101</u>	PD3 Cordset - DC 154" (includes item 15)	1
15	<u>1012098</u>	Bushing, DC Cord	1
16	<u>103429201</u>	PD3 Cordset - DC 205" (includes item 17)	1
17	<u>1012098</u>	Bushing, DC Cord	1
18	<u>103429301</u>	Asm, PD3 Case (includes items 19 and 20)	1
19	<u>103434001</u>	Asm, PD3 Legs	1
20	<u>103439901</u>	PD3Case Top (Includes Handle)	1
21	<u>103429501</u>	Kit, PD3 Hardware	1
22	<u>103513001</u>	Wire Asm Kit Blk Pd3	1
23	<u>103517401</u>	Kit Pd3 Button Diode (includes items 24 and 25)	1
24	<u>103512801</u>	Asm Diode Top	1
25	<u>103512901</u>	Asm Diode Side	1
26	<u>103779601</u>	Transformer, Pd3, Al	1
27	<u>CCX8506</u>	Circuit Breaker, 15-Amp/120-Volt	1

15

E

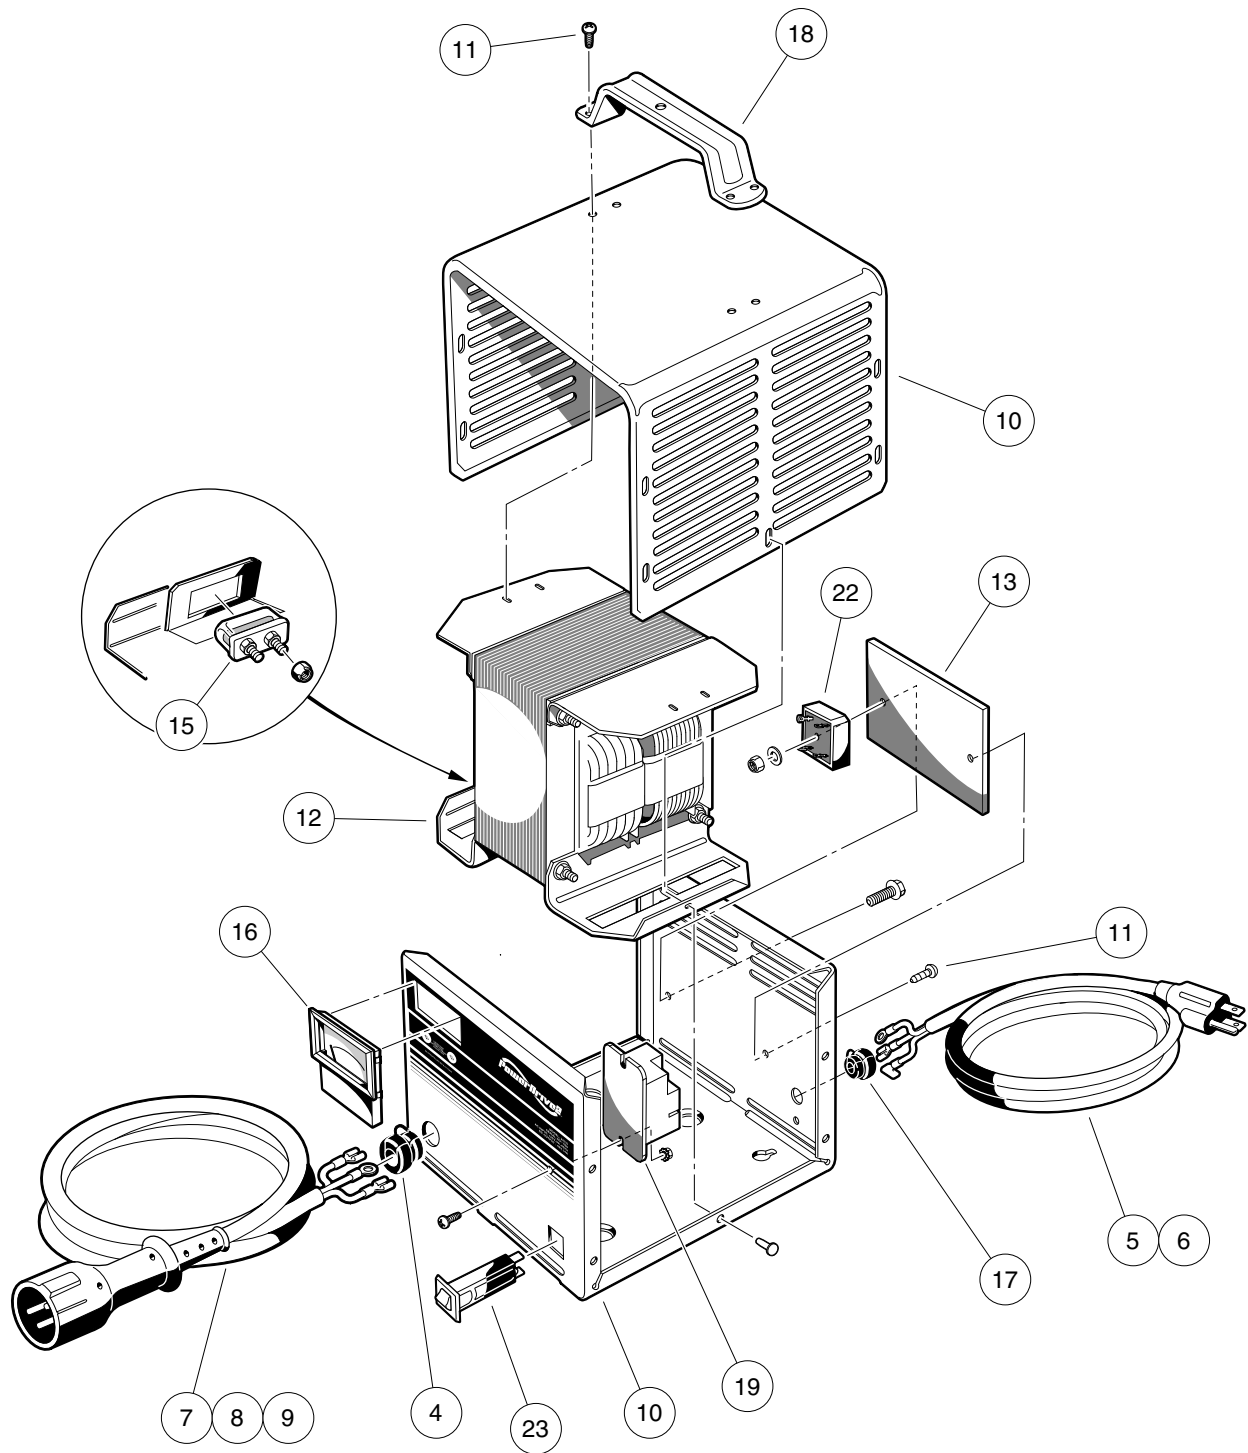


000291-001

POWERDRIVE 2 BATTERY CHARGER (MODEL 22110), DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101802204</u>	48-V/13-A PowerDrive 2 (9-ft. DC, 6-ft. AC)	1
2	<u>101802205</u>	48-V/13-A PowerDrive 2 (12-ft. DC, 9-ft. AC)	1
3	<u>101802206</u>	48-V/13-A PowerDrive 2 (20-ft. DC, 9-ft. AC) (includes items 4 through 23)	1
4	<u>1012098</u>	Bushing, DC Cord	1
5	<u>101828801</u>	Cord, AC, 80-Inch (203 cm)	1
6	<u>101828802</u>	Cord, AC, 108-Inch (274 cm)	1
7	<u>101828904</u>	PD2 DC Cordset, 113-inch	1
8	<u>101828905</u>	PD2 DC Cordset, 154-inch	1
9	<u>101828906</u>	Pd2 Dc Cordset 250 Inch	1
10	<u>102273201</u>	PD2 Case (includes item 11)	1
11	7577	Screw, #10 X 0.50 Phillips Pan-Head	12
12	<u>102273301</u>	PD2 Transformer Asm	1
13	<u>102273401</u>	PD2 Heatsink	1
14	<u>102273601</u>	PD2 Wire Asm	1
15	<u>102273701</u>	PD2 Fuse Asm	1
16	<u>102273801</u>	PD2 Ammeter	1
17	<u>102273901</u>	PD2 AC Cord Bushing	1
18	<u>102274001</u>	PD2 Handle	1
19	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes items 20 and 21)	1
20	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
21	N/A	Kit, Relay, 48v 30a Instrns	1
22	<u>103517601</u>	Pd2 Rectifier Kit	1
23	<u>CCX8506</u>	Circuit Breaker, 15-Amp/120-Volt	1
Note: Item 16 not shown. Level 1 Battery Charger part numbers include one AC and one DC cord. They do not include all of the level 2 cords listed.			

15

E

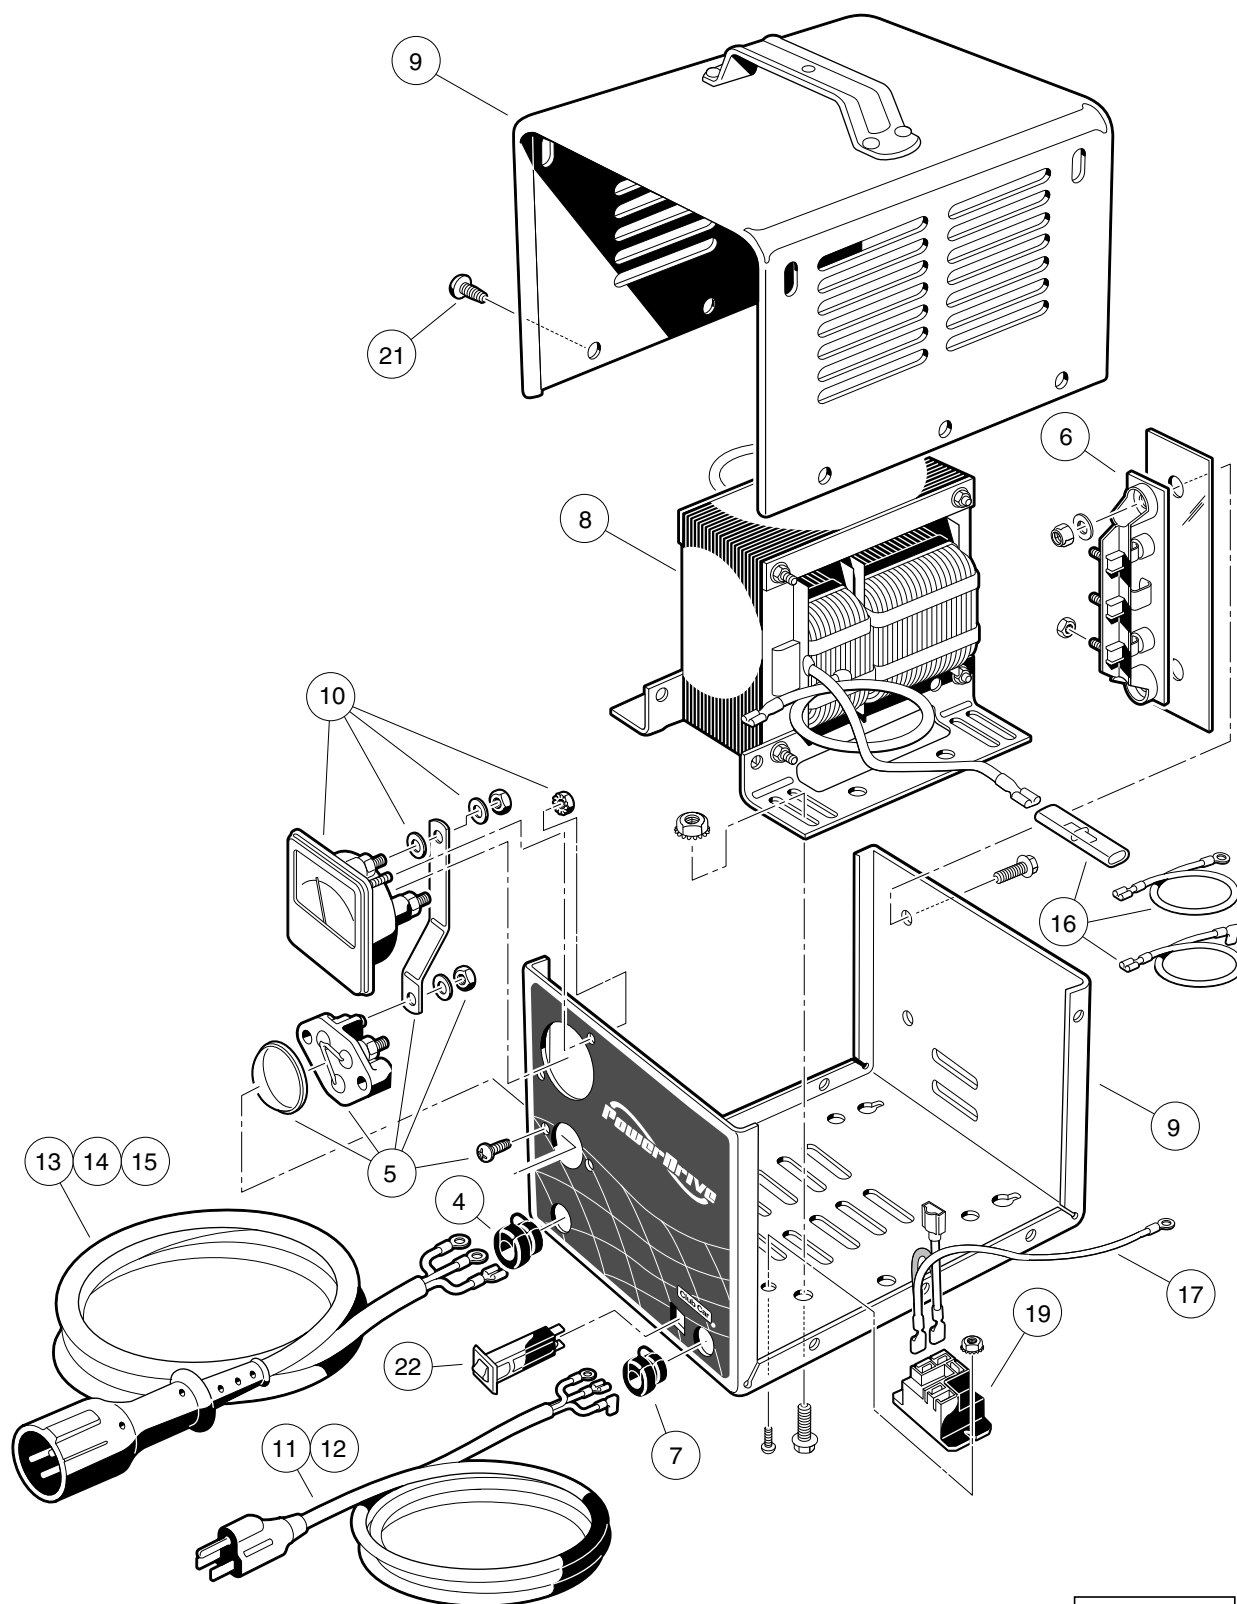


000351-001

POWERDRIVE BATTERY CHARGER (MODEL 17930), DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101802201</u>	48V/17A PowerDrive (9-ft DC, 6-ft AC Cord)	1
2	<u>101802202</u>	48V/17A PowerDrive (12-ft DC, 9-ft AC Cord)	1
3	<u>101802203</u>	48V/17A PowerDrive (20-ft DC, 9-ft AC Cord) (includes items 4 through 22)	1
4	<u>1012098</u>	Bushing, DC Cord	1
5	<u>1012101</u>	Fuse Assembly	1
6	<u>1015914</u>	Rectifier with Heatsink Assembly	1
7	<u>1015917</u>	Bushing, AC Cord	1
8	****	Transformer, Battery Charger	1
9	<u>101828301</u>	Case Assembly	1
10	<u>101828501</u>	Ammeter	1
11	<u>101828801</u>	Cord, AC, 80-Inch (203 cm)	1
12	<u>101828802</u>	Cord, AC, 108-Inch (274 cm)	1
13	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
14	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
15	<u>101828903</u>	Cord, DC, 250-Inch (635 cm)	1
16	<u>101831101</u>	Wire Assembly Kit	1
17	101914401	Assembly, Voltage Suppressor	1
18	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes items 19 and 20)	1
19	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
20	N/A	Kit, Relay, 48v 30a Instrns	1
21	7577	Screw, #10 X 0.50 Phillips Pan-Head	10
22	<u>CCX8506</u>	Circuit Breaker, 15-Amp/120-Volt	1
**** Special order item available upon request. Note: Level 1 Battery Charger part numbers include one AC and one DC cord. They do not include all of the level 2 cords listed.			

15
E

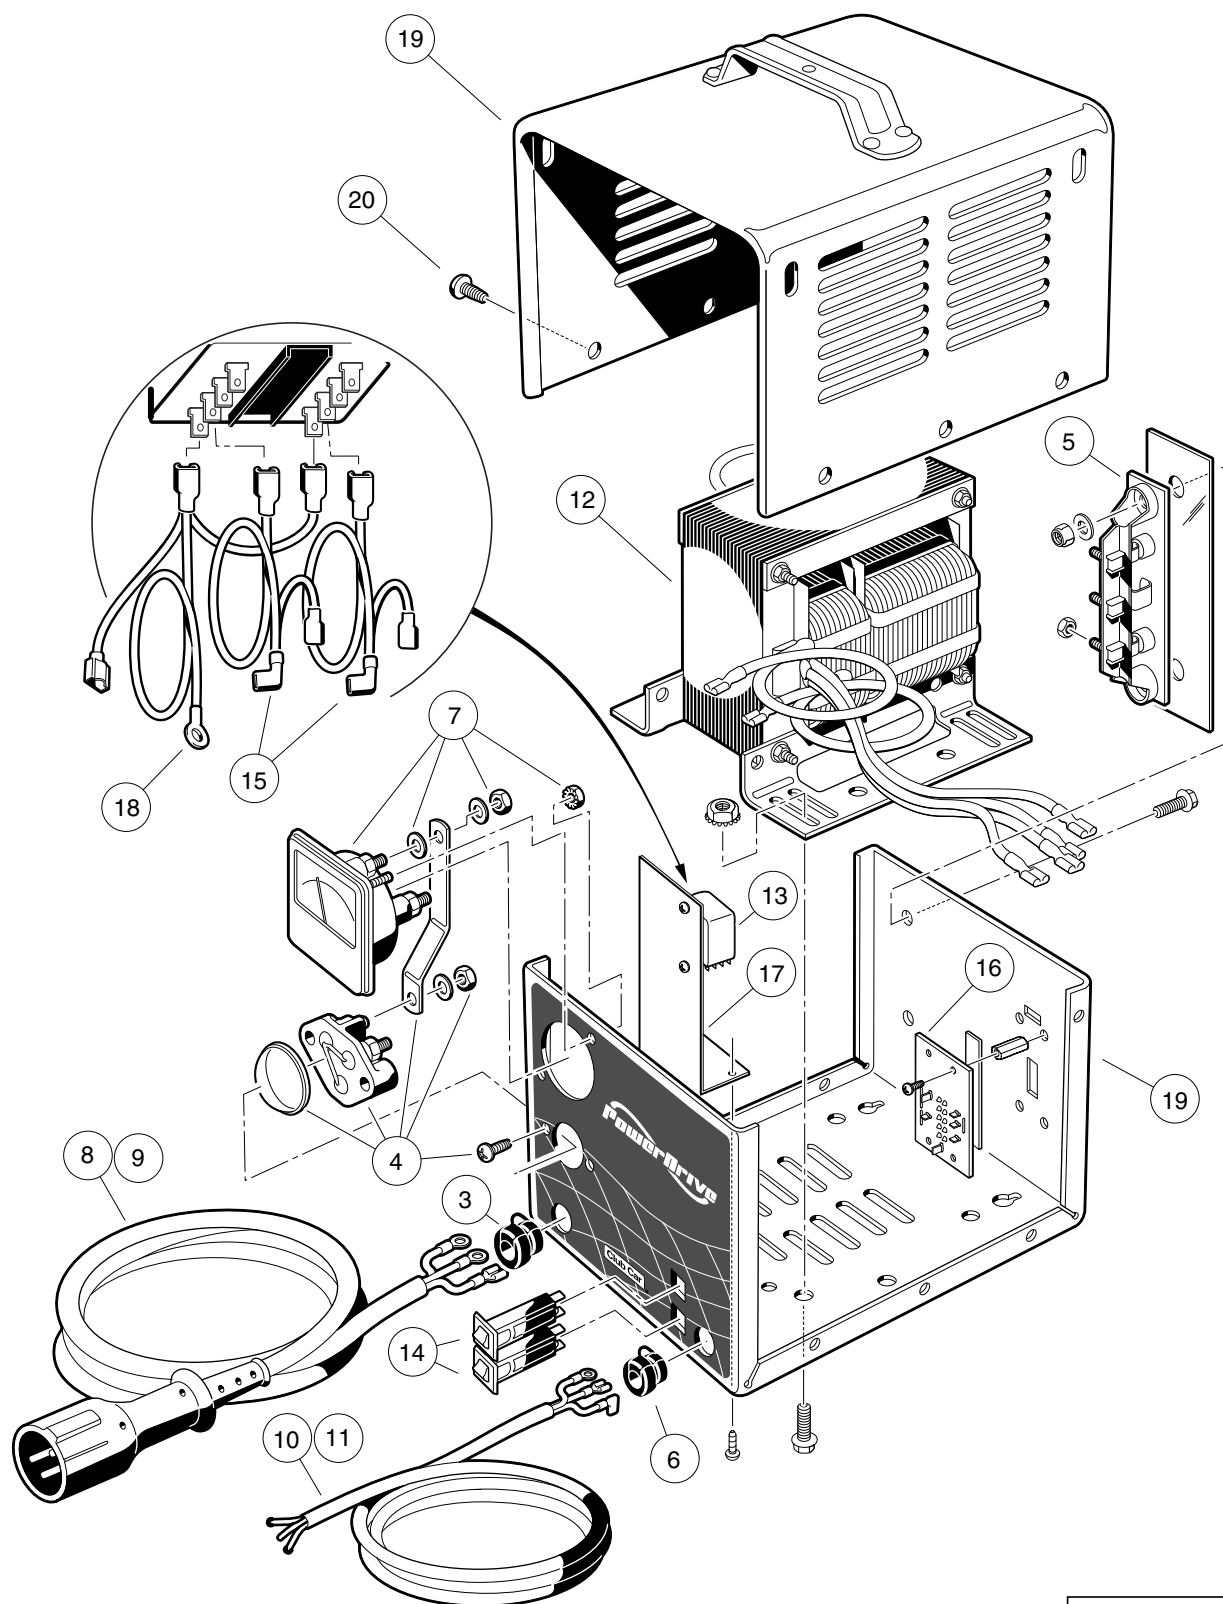


000352-001

POWERDRIVE BATTERY CHARGER (MODEL 18780), EXPORT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101831503	Battery Charger, 48-Volt DC (8.5-ft DC, 6-ft AC)	1
2	101831504	Battery Charger, 48-Volt DC (12-ft DC, 9-ft AC) (includes items 3 through 20)	1
3	<u>1012098</u>	Bushing, DC Cord	1
4	<u>1012101</u>	Fuse Assembly	1
5	<u>1015914</u>	Rectifier with Heatsink Assembly	1
6	<u>1015917</u>	Bushing, AC Cord	1
7	<u>101828501</u>	Ammeter	1
8	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
9	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
10	<u>101831701</u>	Cord, AC, 80-Inch (203 cm), without Plug	1
11	<u>101831702</u>	Cord, AC, 118-Inch (203 cm), without Plug	1
12	101838201	Transformer, Export Battery Charger	1
13	<u>101838301</u>	Relay, Export Charger	1
14	101838401	Circuit Breaker	2
15	101838501	Kit, Wire Assembly	1
16	101838601	Four-Position Switch	1
17	****	Mounting Bracket, Relay	1
18	101914401	Assembly, Voltage Suppressor	1
19	N/A	Case, Charger	1
20	7577	Screw, #10 X 0.50 Phillips Pan-Head	10
**** Special order item available upon request. Note: Level 1 Battery Charger part numbers include one AC and one DC cord. They do not include all of the level 2 cords listed.			

15

E

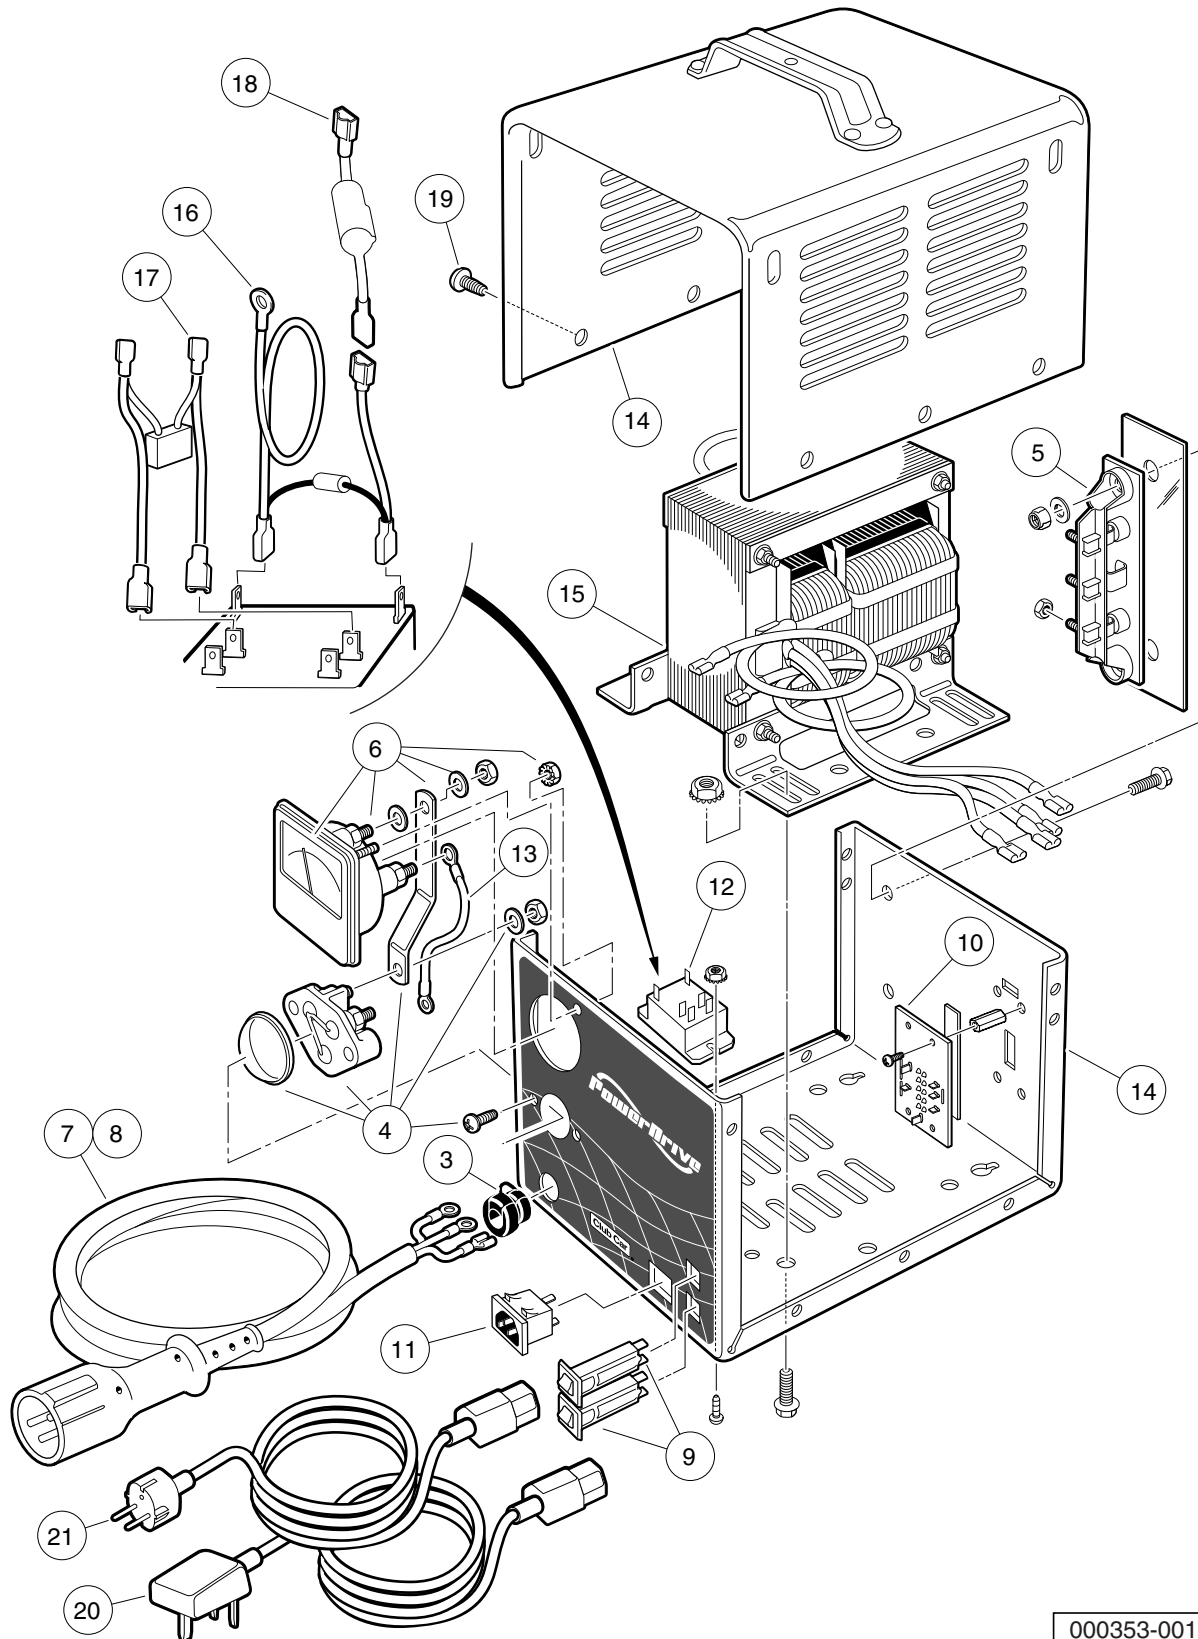

000353-001

POWERDRIVE BATTERY CHARGER (MODEL 20310), EUROPEAN

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101956201</u>	Battery Charger, 48-Volt w/ 4-Position Switch (8.5-ft DC)	1
2	<u>101956202</u>	Battery Charger, 48-Volt w/ 4-Pos. Switch (12-ft DC) (includes items 3 through 19)	1
3	<u>1012098</u>	Bushing, DC Cord	1
4	<u>1012101</u>	Fuse Assembly	1
5	<u>1015914</u>	Rectifier with Heatsink Assembly	1
6	<u>101828501</u>	Ammeter	1
7	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
8	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
9	<u>101838401</u>	Circuit Breaker	2
10	<u>101838601</u>	Four-Position Switch	1
11	<u>101973501</u>	Receptacle, AC Cord	1
12	<u>101987501</u>	Relay	1
13	N/A	Wire, Jumper	1
14	N/A	Case, Charger	1
15	****	Transformer, European Battery Charger	1
16	****	Suppressor, AC Voltage	1
17	****	Assembly, Wire	1
18	****	Limiter, Current	1
19	7577	Screw, #10 X 0.50 Phillips Pan-Head	10
20	<u>101958201</u>	Cord, UK, AC, Battery Charger	1
21	<u>101958301</u>	Cord, European AC, Battery Charger	1
**** Special order item available upon request.			
Note: Level 1 Battery Charger part numbers include one AC and one DC cord. They do not include all of the level 2 cords listed.			

15

E

15

E

MAINTENANCE AND SERVICE TOOLS

16

G

E


D

16

G

E

D

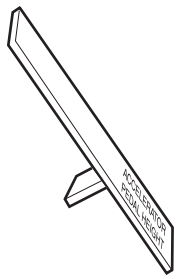


1



2



3

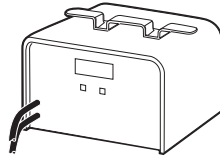


4




5



6

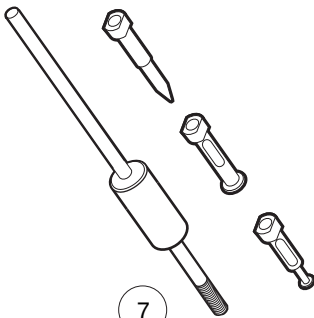


7

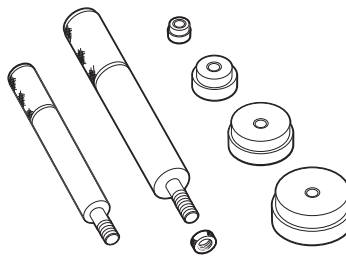

8




9

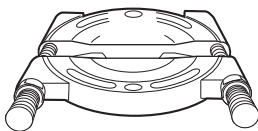


10



11

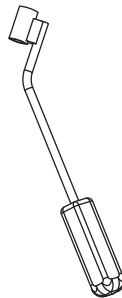


12

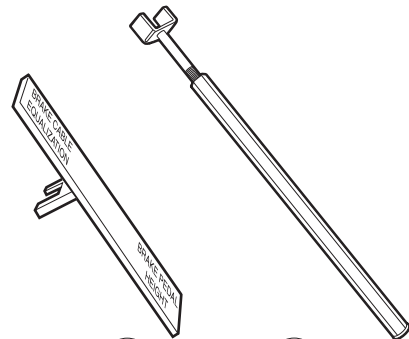

14

15


13

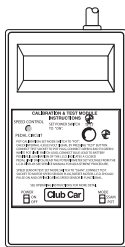


16



 17



18

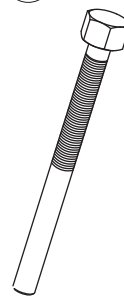

19

MAINTENANCE AND SERVICE TOOLS


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	16 G E D
		1 2 3 4 The following tool list includes all tools available from Club Car for maintenance and service procedures for gasoline, electric, and/or diesel vehicles, both past and present models. Be sure to carefully examine the tool list for applicability to your vehicle before ordering.				
1	<u>101871001</u>	Accelerator Pedal Adjustment Tool		1	1	
2	<u>101813202</u>	Adhesive, Guide Ring, 3-Gram Tube			1	
3	<u>101641202</u>	Arbor		1		
4	<u>101831901</u>	Battery Discharge Machine, 36/48 Volt			1	
5	<u>1014305</u>	Battery Terminal Protector Spray	1	1	1	
6	<u>1011767</u>	Battery Thermometer	1	1	1	
7	<u>1016417</u>	Bearing and Oil Seal Remover Assembly	1	1	1	
8	<u>1016416</u>	Bearing Driver Set	1	1	1	
9	<u>1012811</u>	Bearing Puller	1	1	1	
10	<u>1012812</u>	Bearing Puller Wedge Attachment	1	1	1	
11	<u>1013582</u>	Brake Adjustment Tool (used only on vehicles with manually adjusted mechanical brakes)		1	1	
12	<u>102555501</u>	Brake Cable Release Tool	1	1	1	
13	<u>102249901</u>	Brake Pedal Adjustment Tool Kit (used for the Carryall Electric Industrial Truck only) (includes items 14 and 15).....			1	
14	****	Brake Pedal Adjustment Tool			1	
15	****	Brake Pedal Tension Tool			1	
16	<u>101887101</u>	Calibration Test Module			1	
17	<u>101808401</u>	Cam Installation Tool		1		
18	<u>102562401</u>	Charger Bezel Tool			1	
19	<u>102686101</u>	Clutch Removal Tool (for 4x4 vehicles)	1	1		
		Please refer to the maintenance and service manual for proper tool application. **** Special order item available upon request				

16











G

E

D

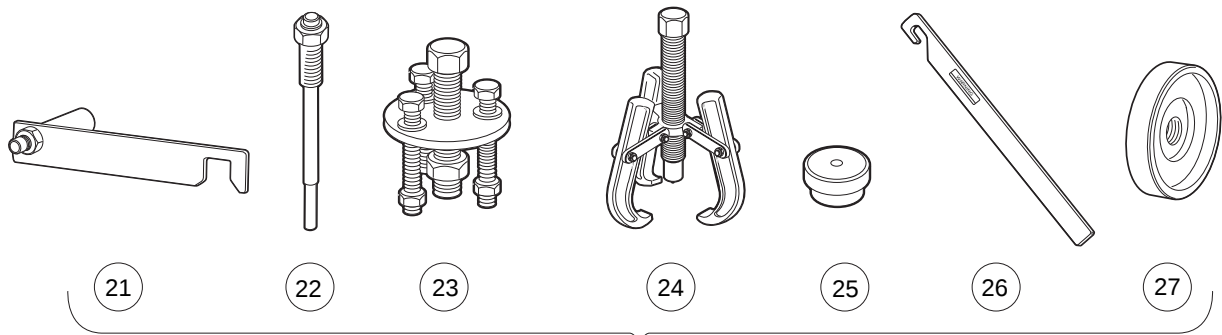

20

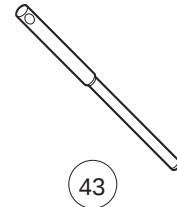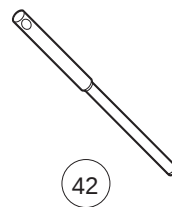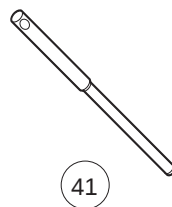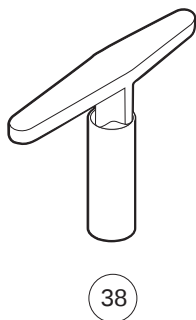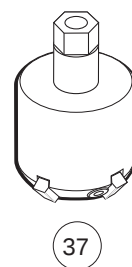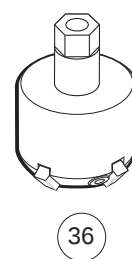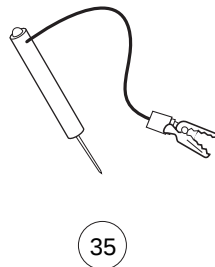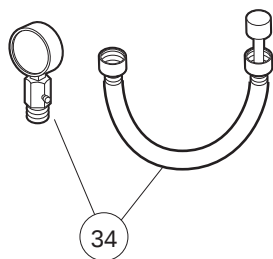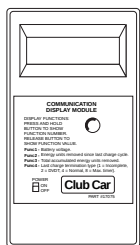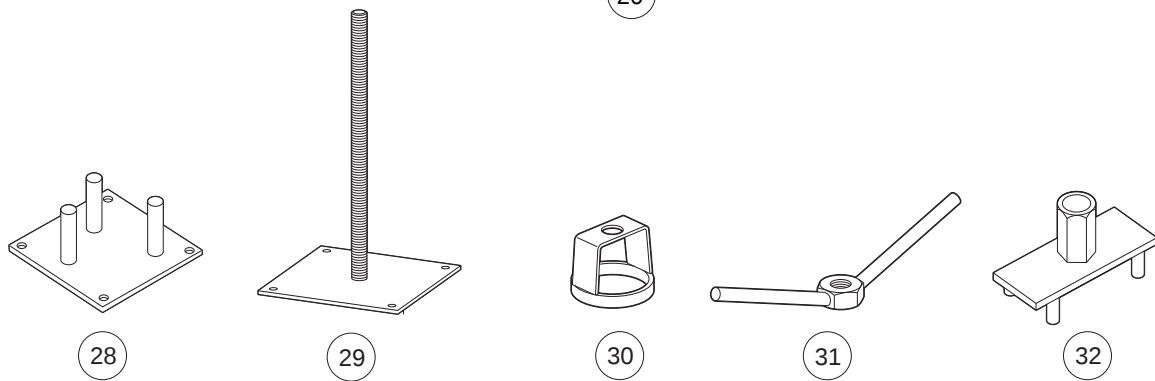

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	16 G E D
		1 2 3 4				
20	<u>1014510</u>	Clutch Tool Kit (includes items 21 - 27)		1		
21	<u>1014498</u>	Clutch Alignment Tool (for pre-unitized transaxle vehicles built prior to 1997 model year)		1		
22	<u>1014496</u>	Drive Clutch Puller (for Kawasaki engines only)		1		
23	<u>1014497</u>	Drive Clutch Hub Puller (for Kawasaki engines only)		1		
24	<u>1014508</u>	Driven Clutch Cam Puller (for Kawasaki engines only)		1		
25	<u>1014507</u>	Driven Clutch Puller Plug (for Kawasaki engines only)		1		
26	<u>1015524</u>	Drive Clutch Holder Tool Assembly (for Kawasaki engines only)		1		
27	<u>101809101</u>	Press Weldment (for Kawasaki engines only)		1		
28	<u>102601501</u>	Drive ClutchFixed Sheave Tool (for 4x4 vehicles)	1	1		
29	<u>102603501</u>	Driven Clutch Spring Compression Base (for use with items 30 and 31) (for 4x4 vehicles)	1	1		
30	<u>102605201</u>	Driven Clutch Spring Compression Collar (for use with items 29 and 31) (for 4x4 vehicles)	1	1		
31	<u>102606101</u>	Driven Clutch Spring Compression Nut (for use with items 29 and 30) (for 4x4 vehicles)	1	1		
32	<u>102607501</u>	Drive Clutch Spider Removal Tool (for 4x4 vehicles)	1	1		
33	101831801	Communication Display Module			1	
34	101641002	Compression Gauge and Adapter		1		
35	1011273	Continuity Tester		1	1	
36	<u>102773801</u>	Cutter, Valve Seat, #122		1		
37	<u>102773901</u>	Cutter, Valve Seat #115		1		
38	<u>102774101</u>	Wrench, T, #505.....		1		
39	<u>102774101</u>	Adapter, T-Wrench		1		
40	102675401	Cutter, Valve Seat, 60 Degree (requires item 51) (for Honda GX620 Gasoline Engines)		1		
41	<u>102774201</u>	Pilot, 6.6 MM		1		
42	<u>102774301</u>	Pilot, 6.62 MM.....		1		
43	<u>102774401</u>	Pilot, 6.65 MM.....		1		
		Please refer to the maintenance and service manual for proper tool application.				

16


G

E

 
D




44

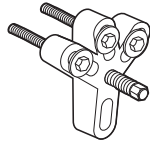

45

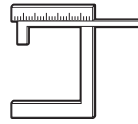


46

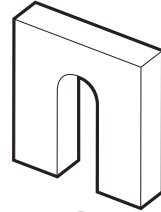


47



 48




49

 

50



51

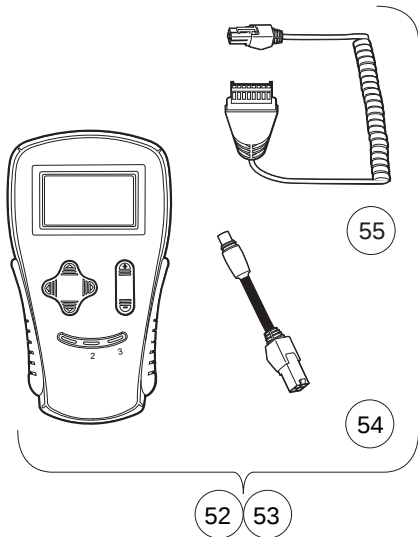


52

53

55

54

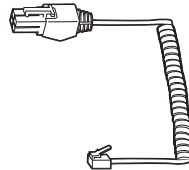

56



58




59

60



61

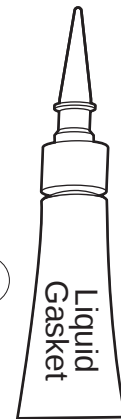

57

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	16 G E D
		1 2 3 4				
44	<u>1012151</u>	Dry Moly Lubricant	1	1	1	
45	<u>1016627</u>	Flywheel Puller Kit (for Kawasaki Engines)		1		
46	<u>102669901</u>	Gauge, Carburetor Float Level (for Honda GX620 Gasoline Engines)		1		
47	<u>1016418</u>	Gear Yoke	1	1	1	
48	<u>101933101</u>	Governor Shaft Installation Tool (for Kawasaki Engine Vehicles)		1		
49	<u>102169401</u>	Hydraulic Brake Adjuster (for Turf/CA 272/472, Pioneer/XRT 1200, Bobcat 2100, HUV 4213)			1	
50	<u>1011478</u>	Hydrometer	1	1	1	
51	<u>1013593</u>	Internal Retaining Ring Pliers	1	1	1	
52	<u>102248803</u>	IQ Display Module (IQDM) Kit (IQ System and IQ Plus vehicles)			1	
		(includes items 54 and 55)				
53	<u>102248804</u>	IQ Display Module (IQDM-P) Kit (IQ System and IQ Plus vehicles)			1	
		(includes items 54 and 55)				
54	<u>102251501</u>	Adaptor, Cable			1	
55	<u>102241502</u>	IQDM Series 2 Cable			1	
56	<u>102241501</u>	IQDM Series 1 Cable (replacement)			1	
57	<u>101928701</u>	Liquid Gasket (transaxle case)	1	1	1	
58	<u>102243402</u>	Moly-Teflon Lubricant (4-oz. (113-gram) tube)			1	
59	<u>101997201</u>	Paint, Touch-Up – Beige*		1	1	
59	<u>101997207</u>	Paint, Touch-Up – Black*		1	1	
59	<u>101997212</u>	Paint, Touch-Up – Burgundy*		1	1	
59	<u>101997211</u>	Paint, Touch-Up – Classic Blue (Navy)*		1	1	
59	<u>101997205</u>	Paint, Touch-Up – Dark Gray*	1	1	1	
59	<u>101997209</u>	Paint, Touch-Up – Dark Green*	1	1	1	
59	<u>101997204</u>	Paint, Touch-Up – Gray*	1	1	1	
59	<u>101997203</u>	Paint, Touch-Up – Red*	1	1	1	
59	<u>101997206</u>	Paint, Touch-Up – Royal Blue (Pacific Blue)*		1	1	
59	<u>101997202</u>	Paint, Touch-Up – White*	1	1	1	
60	<u>102562301</u>	Paint, Precedent Underbody – Gray		1	1	
61	<u>102587201</u>	Paint Pen, Touch-Up, Precedent Underbody – Black		1	1	
Please refer to the maintenance and service manual for proper tool application. * Item 59 is not for use on Surlyn[®] body material, which is used on Precedent vehicles.						

16


G

E


D



62

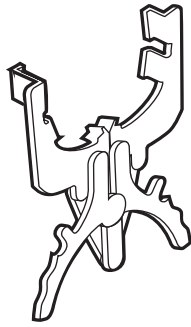

63

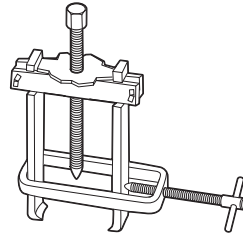


64



65



 66



67



68




69



70




71

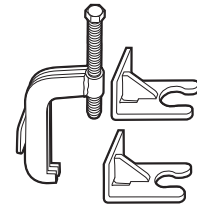

72



73

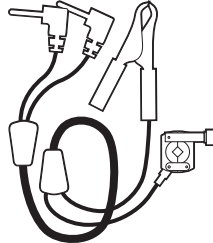


74




75



76

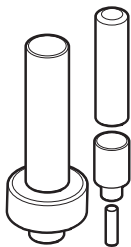

77

 

83



84



85




86

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	16 G E D
		1 2 3 4				
62	<u>1016414</u>	Piston Ring Compressor Kit (FE290, FE350 and FE400 engines)		1		
63	<u>1016415</u>	Piston Ring Pliers (for Kawasaki Engines)		1		
64	<u>102668801</u>	Puller, Special Use (for Kubota D722 Diesel Engines)	1			
65	<u>1012549</u>	Retaining Ring Pliers, 45° External	1	1	1	
66	<u>1012560</u>	Retaining Ring Pliers, 90° Internal	1	1	1	
67	<u>101823101</u>	Safety First Card (50 per pack)	1	1	1	
68	<u>1012809</u>	Seal Puller	1	1	1	
69	<u>102330901</u>	Spanner Wrench (for coil over shock front suspension vehicles only)	1	1		
70	<u>1014264</u>	Steering Column Bearing Press Tool		1	1	
71	<u>1014259</u>	Steering Column Retaining Ring Tool		1	1	
72	<u>102061201</u>	Steering Wheel Puller Tool	1	1	1	
73	<u>AM10753</u>	Tachometer (includes gasoline engine pick up lead only)	1	1		
74	<u>AM10771</u>	Tachometer Diesel Probe (for use with item 73)	1			
75	<u>1014162</u>	Transaxle Axle Seal Tool		1		
76	<u>1014161</u>	Transaxle Pinion Seal Tool		1		
77	<u>1014115</u>	Transmission Tool Kit		1		
78	<u>101611003</u>	Tune-Up Kit, All OHV (for FE290, FE350, FE400 only) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
79	<u>AM11804</u>	Tune-Up Kit, Gx620 (for Honda Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
80	<u>AM11805</u>	Tune-Up Kit, D722 (for Kubota Engines) (includes air filter, oil filter, fuel filters, water separator filter) (not shown)	1			
81	<u>AM1220301</u>	Tune-Up Kit, Precedent (for FE290/350 Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
82	<u>AM1232401</u>	Tune-Up Kit, FH680D (for Kawasaki V-Twin Engines) (includes oil filter, fuel filter, air filter, and spark plugs) (not shown).....		1		
83	<u>1016413</u>	Valve Clearance Adjuster Screw Holder (for FE290 engines only)		1		
84	<u>102674601</u>	Valve Guide Driver (for Honda GX620 Gasoline Engines)		1		
85	<u>101641201</u>	Valve Guide Reamer (FE290, FE350, and FE400 only)		1		
86	<u>102674401</u>	Valve Guide Reamer, 6.6 mm (for Honda GX620 Gasoline Engines)		1		




87

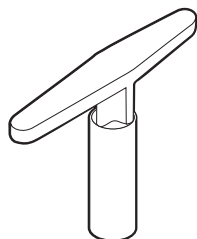


88

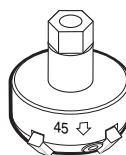


89

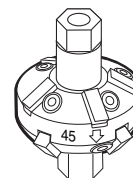


90

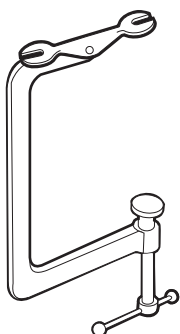

91

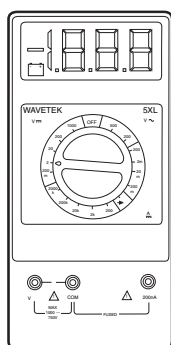


92

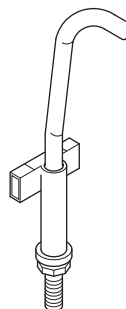


93



94

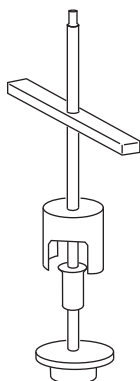

95

 

96

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	16 G E D
		1 2 3 4				
87	<u>1016552</u>	Valve Seat Cutter Guide		1		
88	<u>1016551</u>	Valve Seat Cutter T-Wrench		1		
89	<u>1016553</u>	Valve Seat Cutter, 45° (32 mm diameter) (for FE290 engines only)		1		
90	<u>1016554</u>	Valve Seat Cutter, 45°/30° (35 mm diameter)		1		
91	<u>101641101</u>	Valve Spring Compressor		1		
92	<u>1011480</u>	Volt Ohm Meter	1	1	1	
93	<u>102570401</u>	Tool, Tensioning, Starter Generator (For Precedent vehicles)		1		
94	<u>103601401</u>	Puller, Drive Clutch, XRT 950*		1		
95	<u>103601701</u>	Tool, Disassembly, Driven Clutch, XRT 950		1		
96	<u>103600501</u>	Screw, Driven Clutch Disassembly, M6, XRT 950		1		
*Note: The XRT 950 Drive Clutch Puller requires the use of Screw, Driven Clutch Disassembly, CCI Part Number <u>103600501</u>.						

INDEX

Part Number and Page

AM10753	16-9	7847	1-13, 1-27, 1-33, 8-3, 13-3	1011114	4-3, 4-7
AM10771	16-9	7893	6-7, 11-13	1011137	4-7
AM10080	11-5	7910	5-13	1011153	5-13
AM10081	11-5	7973	1-9, 9-15	1011154	4-3, 4-7
AM10419	10-7	8056	6-9, 6-17, 12-7, 12-27	1011229	6-9, 6-17, 12-7, 12-27
AM10724	7-5	8057	6-7, 6-9, 6-17, 11-9, 12-7, 12-27	1011230	1-11
CCX8506	15-3, 15-5, 15-7	8058	6-7, 6-9, 6-17, 11-9, 12-7, 12-27	1011273	16-5
183	1-41, 1-47, 1-53, 9-15, 10-3, 11-3	8067	5-13	1011283	13-3
320	4-11	8233	1-23, 1-25, 1-27, 1-29, 1-31, 1-33, 1-41, 1-43, 1-45, 1-47, 1-49, 1-51, 1-53, 4-15, 4-17, 11-3, 11-9, 11-13, 12-13	1011285	13-3
332	1-23, 1-25, 1-27, 1-29, 1-31, 1-33, 1-41, 1-43, 1-45, 1-49, 1-51, 8-3, 9-13, 12-13	8248	1-41, 9-3, 11-9, 11-13, 12-13	1011291	11-7
334	4-15, 4-17, 5-3, 5-7, 7-15, 7-17	8251	1-21, 1-23, 1-25, 1-27, 1-29, 1-31, 1-33	1011298	4-3, 4-7
357	5-11	8450	10-3, 12-19	1011301	4-3, 4-7
451	4-3, 4-7, 8-3, 12-13, 13-3, 13-5	8639	9-15	1011303	4-3, 4-7
705	6-13, 7-15, 7-17	8717	4-15, 4-17, 6-7, 11-3, 11-9	1011314	4-3, 4-7
706	5-11	8754	4-11, 4-15, 4-17, 5-3, 5-7, 5-9, 5-11, 5-15, 5-17, 6-13	1011382	12-7
808	10-3	8755	5-11, 5-15, 5-17	1011393	5-13
1016	12-19	8797	9-5	1011394	1-7
1017	12-19	8861	5-9	1011402	4-5
1028	4-5	8916	1-47, 1-53	1011411	13-3
1032	4-5	8990	5-7, 6-7, 11-13, 12-7	1011415	5-15, 5-17
1035	5-7, 5-9	1010005	5-13	1011418	4-5
1218	12-19	1010124	5-11	101146302	4-3, 4-7
1241	1-7, 1-29, 1-31, 1-47, 1-53, 4-5, 4-13, 4-15, 4-17, 6-7, 6-13, 6-15, 8-3, 12-19, 13-3	1010138	5-9	1011464	4-3, 4-7
1242	4-9, 4-13, 6-7, 6-13, 12-19, 13-3	1010142	1-43, 1-45, 1-47, 1-49, 1-51, 1-53, 5-15, 5-17	1011465	4-3, 4-7
1308	5-9	1010144	5-15, 5-17	1011466	4-3, 4-7
1606	1-41	1010145	5-15, 5-17	1011467	4-3, 4-7
1620	12-7	1010150	5-11	1011478	16-7
1624	4-15, 4-17, 5-7	1010177	5-11	1011480	16-11
1631	9-15	1010219	5-9	1011494	4-3, 4-7
1703	1-43, 1-45, 1-47, 1-49, 1-51, 1-53	1010237	1-47, 1-53	1011578	5-3, 12-25
2402	5-9	1010434	1-7, 1-25, 1-33	1011652	1-15, 1-17, 1-19
7048	5-13	1010435	1-7	1011694	4-15, 4-17
7173	6-15, 12-19	1010543	1-15, 1-17, 1-19	1011697	1-39, 5-3, 7-15, 7-17, 9-11
7174	5-3, 6-13, 8-3, 9-11, 12-19, 13-3, 13-5	1010577	1-47, 1-53, 7-15, 7-17	1011700	4-15, 4-17
7251	1-7	1010805	4-5	1011734	4-19
7274	5-13	1010829	4-9, 4-13	1011767	16-3
7308	5-13	1010850	4-3, 4-7	1011779	4-9, 4-13
7310	2-3, 2-5, 2-7, 2-9	1010877	4-5	1011852	1-47, 1-53
7311	1-41	1010878	4-5	1011862	1-53
7330	11-7, 14-5	1010921	1-47, 1-53, 4-5	1011865	1-53
7335	11-5, 14-5	1010927	4-5	1011868	1-53
7336	14-5	1010932	4-5	101187702	4-5
7473	1-7, 1-39, 1-47, 1-53, 4-5, 4-9, 4-13, 4-15, 4-17, 6-7, 6-15	1010933	4-5	1011878	1-47, 1-53
7539	5-9	1010934	6-15, 13-3, 13-5	1011883	1-47, 1-53
7540	5-7, 5-9	1010953	4-3, 4-7	1011887	5-13
7555	5-7, 5-9	1010954	6-7, 11-3, 11-9	1011889	5-13
7569	5-17	1010984	2-3, 2-5, 2-7, 2-9	1011893	5-9
7577	15-5, 15-7, 15-9, 15-11	1010993	1-33	1011895	5-7, 5-9
7602	5-7, 5-9	1011014	1-7	1011897	1-5
7716	4-5, 4-15, 4-17	1011017	1-7	1011930	5-7, 5-9
7818	6-7	1011019	12-7	1011931	4-15, 4-17
7840	5-13	1011084	4-19	1011937	1-47, 1-53
				1011964	1-47, 1-53
				1011965	1-47, 1-53, 9-3
				1011988	1-47, 1-53, 9-3
				1012098	15-3, 15-5, 15-7, 15-9, 15-11

INDEX

1012101	15-7, 15-9, 15-11	1013042	5-7	1014063	10-3
1012124	9-3	1013044	5-7	1014065	6-7, 10-3, 11-9
1012151	16-7	1013051	5-7	1014070	10-7
1012159	1-41	1013052	5-7	1014072	10-7
1012177	13-3	1013061	9-3, 11-3, 12-15	1014076	10-7
1012180	5-15, 5-17	1013207	5-15, 5-17	1014078	10-7
1012181	5-15, 5-17	1013216	1-21	1014080	10-7
1012182	5-15, 5-17	1013218	1-21	1014089	11-9
1012285	1-23, 1-29, 1-31, 9-11, 11-3, 11-13, 12-13, 12-19	1013312	1-15	1014115	16-9
1012295	6-7	1013343	1-9	1014116	9-3
1012303	5-11, 5-15, 5-17	1013344	1-9	1014119	6-7
1012304	5-15	1013357	1-37	1014125	5-3
1012333	11-13	1013461	9-5	1014126	5-3
1012412	1-25, 1-33	1013462	9-5	1014145	6-7, 11-9
1012431	6-7, 6-9, 6-17, 11-9, 12-7, 12-27	1013494	12-7	1014153	4-3, 4-7
1012438	1-47, 1-53, 9-15	1013509	1-41	1014161	16-9
1012462	1-47, 1-53	1013531	4-13	1014162	16-9
1012467	5-7	1013582	16-3	1014193	11-7
1012505	6-9, 12-7	1013587	11-9	1014201	13-3, 13-5
1012528	8-3, 12-19	1013589	6-7, 11-9	1014207	11-7
1012549	16-9	1013590	11-9	1014213	5-3
1012560	16-9	1013591	11-9	1014214	5-3
1012565	5-5	1013593	16-7	1014217	5-3
1012566	5-5	1013609	6-7	1014259	16-9
1012571	7-15, 7-17	1013677	3-5	1014264	16-9
1012581	1-21, 1-25	1013687	9-3	1014276	5-11
1012594	11-9	1013700	9-11	1014287	10-3
1012597	1-17, 1-19	1013734	8-3, 12-19	1014288	5-3, 6-15, 10-3
1012604	5-3	1013746	9-3, 9-5, 9-9	1014289	6-11
1012605	5-3	1013760	11-3	1014304	12-25
1012649	9-3	1013768	11-7	1014305	16-3
1012656	1-17, 1-19	1013769	11-7	1014306	1-23, 1-33, 1-43, 1-45, 1-47, 1-49, 1-51, 1-53
1012657	1-17, 1-19	1013770	11-7	1014375	6-15
1012711	11-3	1013771	11-7	1014392	1-33
1012714	11-5	1013772	11-7	1014435	1-5
1012740	11-5	1013773	11-7	101444101	1-3, 1-5
1012741	11-5	1013774	11-7	1014453	10-3
1012747	11-5	1013787	11-7	1014454	10-7
1012748	11-5	1013792	11-7	1014496	16-5
1012752	11-3	1013794	11-7, 14-5	1014497	16-5
1012809	16-9	1013869	4-5	1014498	16-5
1012811	16-3	1013870	4-5	1014507	16-5
1012812	16-3	1013871	4-15, 4-17	1014508	16-5
1012830	6-13, 8-3, 9-11	1013876	4-5	1014510	16-5
1012836	10-7	1013924	4-3, 4-7, 7-15, 7-17	1014540	12-21
1012896	11-3	1014007	4-15, 4-17, 11-3	1014555	5-15, 5-17
1012986	6-9	1014049	10-3	1014645	12-7
1012987	11-9, 11-13	1014050	10-3	1014727	11-9
1012991	6-11	1014051	10-3	1014771	2-3, 2-7
1013001	6-11	1014052	10-3	1014807	6-7, 11-9
1013003	6-11	1014055	10-3	1014808	6-7
1013005	6-11	1014056	10-3	1014928	9-3
101301102	6-11	1014057	10-3	1014948	6-7
1013032	1-21	1014058	10-3	101503202	1-7, 1-9
1013035	5-7	1014059	10-3	1015064	11-9, 11-13
		1014062	10-3		

INDEX

1015072	12-25	1016337	11-5	101648102	9-9
1015137	9-3, 9-5, 9-9	1016338	11-5	101648203	7-7
1015139	9-5, 9-15	1016341	11-3	1016483	7-9
1015143	9-5	1016342	11-9	1016486	9-7
101524002	6-13	1016346	5-9	1016489	7-9
1015332	7-3	1016349	5-9	101649002	9-9
1015345	6-7	1016350	5-9	1016494	7-11
1015371	6-7	1016351	5-9	1016496	7-11
1015372	6-7	1016353	5-9	1016497	7-5
1015373	6-7	1016379	1-39	1016499	9-7
101539802	11-13	1016384	5-11	1016501	9-7
1015405	6-7	1016385	5-9	1016502	7-7
1015426	9-13	1016386	5-11	1016506	7-11
1015453	1-47, 1-53	1016387	5-11	1016507	7-3
101547601	3-9	1016389	5-11	1016510	7-11
1015524	16-5	1016401	6-7	1016513	11-3
1015525	1-21	101641002	16-5	101651406	2-3, 2-7
1015583	5-11, 5-15, 5-17	101641101	16-11	101651407	2-3, 2-7
1015597	5-7, 5-9, 5-13	101641201	16-9	101651415	2-3, 2-7
101562711	1-15, 1-17	101641202	16-3	101651416	2-3, 2-7
101562712	1-15, 1-17	1016413	16-9	1016517	7-9
101562714	1-15, 1-19	1016414	16-9	1016518	7-9
101562715	1-15, 1-19	1016415	16-9	1016519	7-9
1015649	7-3	1016416	16-3	1016521	7-11
101570506	2-5, 2-9	1016417	16-3	1016531	7-3
101570507	2-5, 2-9	1016418	16-7	1016535	7-11
101570509	2-5	1016423	6-7	1016537	7-7
101570515	2-5, 2-9	101642575	9-7	1016538	7-11
101570516	2-5, 2-9	101642578	9-7	1016539	7-3
1015707	2-5, 2-9	101642580	9-7	1016541	7-13
1015720	6-9, 6-17, 12-7, 12-27	101642582	9-7	1016544	7-5, 7-9, 7-11
1015737	6-7	101642585	9-7	1016546	9-11
1015741	6-7	1016429	7-7	1016547	7-3, 7-13, 9-9
1015752	6-7, 9-13, 12-9	1016432	7-7, 11-3	1016549	7-9
1015769	6-5, 6-7	1016436	7-9	1016551	16-11
1015814	8-3	1016437	9-7	1016552	16-11
101584502	9-11	1016438	9-9	1016553	16-11
1015878	6-7	1016440	7-9, 9-9	1016554	16-11
1015902	1-23, 1-29, 1-31	1016441	9-9	1016557	4-3, 4-7
1015914	15-7, 15-9, 15-11	1016444	9-9	1016560	7-9
1015917	15-7, 15-9	1016445	7-5	1016561	7-5
1015921	9-5	1016449	7-9	1016562	7-5, 7-13
1015932	6-13	1016450	7-9	1016563	7-9
1015969	7-3	1016452	7-9	1016564	7-11
1016004	9-5	1016454	7-11	1016566	7-9
1016074	6-13	1016455	7-5	1016569	7-9
101611003	16-9	1016456	7-3, 7-5	1016570	7-7
1016154	5-5	1016457	7-7	1016571	7-13
1016156	5-5	1016458	7-9	1016572	9-9
1016183	5-3	1016467	7-7	1016573	4-3, 4-7
1016201	10-3, 11-9	1016470	7-13	1016576	7-7
1016219	5-5	1016472	7-11	1016578	7-5
1016269	1-43, 1-45, 1-49, 1-51, 5-3	1016473	7-7	1016579	7-5
1016289	10-3	1016474	7-9	1016581	7-7
1016319	4-9	1016479	7-9	1016582	9-9
1016320	4-9	1016480	9-9	1016583	7-9

INDEX

1016584	7-11	1017281	1-41	101744902	7-13
1016585	9-7	101728201	1-15	1017450	7-13
1016586	7-5	101728202	1-17	101745101	7-13
1016587	7-5	101728203	1-15	101745102	7-13
1016588	7-5	101728204	1-17	1017453	7-13
101660404	12-7	101728210	1-15	1017454	7-9
1016627	16-7	101728211	1-19	1017455	7-5
1016630	6-9	101728213	1-15	1017456	7-7
1016663	5-5	101728214	1-19	101745701	7-13
1016672	11-7	1017284	1-41	101745702	7-13
101672701	11-13	101728701	1-33	1017458	7-7
101674702	4-19	101728702	1-33	1017460	7-7
1016751	1-23	101728704	1-33	1017461	9-7
101675511	1-23	101728706	1-33	1017463	7-5
101675512	1-23	101728708	1-33	1017466	9-9
101675514	1-23	101728709	1-33	1017468	7-5
101675515	1-23	101728710	1-33	1017471	7-13
101677701	1-23	101728711	1-33	1017472	7-11
101677702	1-23	101728712	1-33	1017473	7-9
101677703	1-23	1017289	1-25	1017474	7-3
101677705	1-23	1017299	1-41	1017475	7-3
1016795	1-43, 1-45, 1-49, 1-51	1017310	1-23, 1-29	1017476	7-3
1016801	10-3	1017313	5-3	1017486	7-3
1016811	1-13, 1-27	1017314	5-3	1017487	7-11
1016845	1-43, 1-45, 1-49, 1-51	1017315	5-3	1017490	7-5
1016848	1-47, 1-53	101731601	1-25	1017500	7-3
1016849	6-9, 6-17, 12-7, 12-27	101731602	1-25	1017501	7-13
1016851	6-9, 6-17, 12-7, 12-27	101731604	1-25	1017502	7-13
1016857	6-9, 6-17, 12-7, 12-27	101731606	1-25	1017503	7-13
1016859	6-9, 6-17, 12-7, 12-27	101731608	1-25	1017504	7-11
1016868	1-7	101731609	1-25	1017507	7-7
1016874	1-39	101731610	1-25	1017508	7-11
1016875	1-39	101731611	1-25	1017510	7-13
1016876	1-39	101731612	1-25	1017512	7-13
1016883	6-13	1017317	5-3	1017513	7-11
1016904	7-9, 8-3	1017350	1-49, 1-51	1017514	7-11
1016947	11-9	101735701	1-53	101751801	7-11
1016952	1-13, 1-27	101736001	1-49	101751802	7-11
1016967	1-7	101736002	1-51	101751803	7-11
1017029	4-5	101737002	2-3, 2-5, 2-7, 2-9	1017653	6-11
101705701	3-3, 3-7	1017378	4-15, 4-17	1017672	1-41
1017079	1-39	1017380	4-15, 4-17	1017686	10-7
1017080	1-7	1017384	1-17, 1-19	1017689	8-3
1017082	9-3, 11-3	1017417	1-43, 1-45, 1-49, 1-51	1017695	1-15, 1-17, 1-19
101708301	1-13, 1-27	1017420	1-47, 1-53	1017696	4-15, 4-17
1017141	1-33	1017424	4-15, 4-17	1017705	12-15
1017188	10-5	1017434	7-9	101773301	7-13
1017211	4-9	1017435	7-9	101773302	7-13
1017226	5-3	1017442	7-7	101773303	7-13
1017231	11-3	1017443	7-9, 7-11	101773304	7-13
1017249	1-41	1017444	7-9	101773305	7-13
1017259	1-23	1017445	7-9	101773306	7-13
1017262	1-29	1017446	7-9	101773307	7-13
1017266	5-9	1017447	7-11	101773308	7-13
1017271	1-41	1017448	7-5	101773309	7-13
1017273	5-5	101744901	7-13	101773310	7-13

INDEX

101773311	7-13	101831504	15-9	101876301	6-11
1017748	1-33	101831701	15-9	101876402	6-11
1017774	1-29, 1-31	101831702	15-9	101876501	6-11
1017789	1-47, 1-53	101831801	16-5	101877601	6-11
1017832	1-27	101831901	16-3	101877701	6-11
101791101	4-3	101832001	12-15	101878101	6-11
1017936	1-33	101832202	9-11	101878201	4-5
101796201	4-15, 4-17	101832302	9-11	101878302	5-7
101796501	12-15	101832601	7-15, 7-17	101879001	6-11
101796801	12-15	101832701	7-15, 7-17	101879401	5-7
101797801	12-25	101833101	7-15, 7-17	101879501	5-7
101801001	12-15	101833401	10-7	101879601	5-7
101802101	12-15	101833601	11-3	101879701	5-7
101802201	15-7	101833701	6-11	101879801	5-7
101802202	15-7	101833902	10-3	101879901	5-7
101802203	15-7	101834001	10-7	101880001	5-7
101802204	15-5	101834502	6-9, 12-7	101880101	5-7
101802205	15-5	101834601	7-15, 7-17	101880201	5-7
101802206	15-5	101834801	11-3	101880301	5-7
101803001	12-25	101835601	9-3	101880701	4-3, 4-7
101803002	12-25	101836201	10-7	101880901	1-15, 1-17, 1-19
1018038	12-19	101837001	1-37	101881101	7-5
101804301	9-13, 9-15	101837101	9-13	101881701	1-15, 1-17, 1-19, 9-13
101806901	1-29, 1-31, 1-35	101837301	6-13	101884801	7-15, 7-17
101808401	16-3	101838201	15-9	101884901	2-5
101809101	16-5	101838301	15-9	101886101	11-3
101811301	9-15	101838401	15-9, 15-11	101887101	16-3
101811801	9-13	101838501	15-9	101887601	7-3
101811901	9-13	101838601	15-9, 15-11	101887906	12-19
101812301	9-13	101850701	1-31	101889401	11-5
101813001	9-13	101850901	1-31	101890001	11-5
101813202	16-3	101851101	6-9, 12-7	101890101	11-3
101817401	4-15, 4-17	101855001	12-11	101890201	11-3
101818801	4-15	101856002	12-11	101890501	11-3
101821501	9-13	101856102	6-7, 12-11	101890601	11-3
101823101	16-9	101859401	8-3	101890901	11-7
101824401	9-3, 9-5	101861901	4-15, 4-17	101891001	11-7
101825101	3-3, 3-7	101862001	4-17	101891301	11-3
101825701	9-15	101865301	4-9	101891401	11-7
101826201	12-7	101869302	6-11	101891501	11-7
101826301	6-9	101870501	5-11	101891601	11-5
101827101	7-15, 7-17	101871001	16-3	101891901	11-5
101828301	15-7	101874601	4-9	101892001	11-5
101828501	15-7, 15-9, 15-11	101874901	6-11	101892201	11-5
101828801	15-5, 15-7	101875001	6-11	101892301	11-5
101828802	15-5, 15-7	101875101	6-11	101892401	11-5
101828901	15-7, 15-9, 15-11	101875102	6-11	101892501	11-5
101828902	15-7, 15-9, 15-11	101875201	6-11	101892601	11-5
101828903	15-7	101875301	6-11	101892701	11-7
101828904	15-5	101875401	6-11	101892901	11-3
101828905	15-5	101875501	6-11	101893201	11-5
101828906	15-5	101875601	6-11	101893801	11-3
101830601	6-9, 12-7	101875701	6-11	101893901	11-5
101830701	6-9, 12-7	101875802	6-11	101895401	14-5
101831101	15-7	101876001	6-11	101895501	14-5
101831503	15-9	101876202	6-11	101896001	14-3

INDEX

101896501	6-11	101927601	11-5	101981001	11-5
101896901	9-5	101927701	11-5	101981301	12-19
101897001	14-5	101927901	11-5	101984801	5-3
101897201	14-5	101928001	11-5	101987301	1-47, 1-53
101897401	14-5	101928101	11-5	101987501	15-11
101897601	14-5	101928301	11-7	101987701	9-3
101898001	6-15	101928601	11-3	101990201	6-5, 6-7
101900901	6-9	101928701	11-3, 14-5, 16-7	101990703	6-9
101903601	14-5	101929801	10-3	101990801	4-13
101903701	14-5	101929802	10-3	101991101	6-9
101905901	9-7	101933101	16-7	102002801	12-25
101906901	14-5	101933701	9-15	102002901	12-25
101908101	12-23	101935301	4-11	102003201	9-3
101908401	12-23	101935501	12-7	102025401	4-11, 11-13
101908601	3-5	101936801	12-9	102025901	6-9
101908703	12-19	101939901	6-11	102026001	4-15, 4-17
101909201	7-5	101942301	13-3, 13-5	102031901	11-7
101909301	7-5	101946201	1-23, 1-29, 1-31	102045901	11-3, 11-13
101909401	7-5	101953103	4-13	102061201	16-9
101909501	7-5	101953106	4-9	102061901	13-3
101909909	12-19	101953802	7-3	102062101	13-3
101910401	1-29, 1-31, 1-43, 1-45, 1-49, 1-51	101954301	1-15, 1-17, 1-19	102063301	13-3
101910501	11-7	101955001	5-9	102063501	13-3
101911701	12-19	101955301	9-3	102063601	13-3
101914401	15-7, 15-9	101956201	15-11	102063701	13-3
101915201	3-9	101956202	15-11	102064301	13-3
101916001	7-13	101958201	15-11	102064401	13-3
101916101	7-3	101958301	15-11	102064501	13-3
101916201	7-5	101959901	3-3	102065901	7-15, 7-17
101916301	7-5	101960501	3-9	102078301	13-3
101916701	6-13, 10-3	101960601	3-3, 3-7	102101001	12-9
101917601	9-13	101963401	7-15, 7-17	102101101	12-9
101918401	2-3, 2-5, 2-7, 2-9	101964201	12-25	102155801	10-7
101918501	4-5	101964202	12-25	102162601	4-13
101919001	12-5	101965001	1-11	102166901	4-13
101919801	4-15, 4-17	101971301	9-13	102169401	16-7
101920101	12-9, 13-3	101972001	16-7	102176401	13-3
101921501	9-13	101972002	16-7	102186301	13-5
101922101	14-5	101972003	16-7	102186401	13-5
101922201	14-5	101972004	16-7	102225101	9-3
101922501	12-23	101972005	16-7	102227101	9-3
101923001	14-5	101972006	16-7	102227501	9-3
101923201	14-5	101972007	16-7	102235201	13-3, 13-5
101923501	14-5	101972009	16-7	102237302	13-3
101923701	14-5	101972011	16-7	102241501	16-7
101923901	14-5	101972012	16-7	102241502	16-7
101924301	12-19	101972101	14-5	102242101	10-7
101925601	10-3	101972201	14-5	102243402	16-7
101925701	9-13	101972801	9-13	102243403	13-5
101925801	13-3	101973101	9-7	102248803	16-7
101926802	9-15	101973301	9-7	102249901	16-3
101926901	11-3	101973401	9-9	102251501	16-7
101927101	11-3	101973501	15-11	102273201	15-5
101927201	11-3	101979101	11-9	102273301	15-5
101927301	11-3	101980801	11-5	102273401	15-5
101927501	11-5	101980901	11-5	102273601	15-5

INDEX

102273701 15-3, 15-5
 102273801 15-3, 15-5
 102273901 15-3, 15-5
 102274001 15-5
 102278001 5-3
 102278801 1-7
 102292801 4-9, 4-13
 102302201 13-3
 102302301 13-3
 102304801 7-9
 102310701 1-33
 102311802 2-3, 2-7
 102311803 2-5, 2-9
 102323101 4-5, 4-9, 4-13
 102323201 4-5, 4-9, 4-13
 102330901 16-9
 102336001 9-11
 102336101 9-11
 102355301 6-15
 102356601 14-5
 102356801 14-5
 102357001 14-5
 102357901 1-47
 102358001 1-43
 102358002 1-45
 102358101 1-47
 102358501 1-47
 102358601 1-47
 102359001 1-41
 102359101 1-41
 102359301 1-41
 102360001 1-7
 102361201 12-5
 102361301 12-5
 102361401 1-11
 102361501 1-3
 102363301 1-7
 102363901 1-7
 102363902 1-7
 102363903 1-7
 102363904 1-7
 102363905 1-7
 102363906 1-7
 102364002 2-3, 2-5, 2-7, 2-9
 102365401 1-11
 102397301 1-41
 102406701 9-5
 102430901 7-13
 102431001 7-11
 102453001 11-5
 102453101 11-5
 102519201 3-3, 3-7
 102522001 9-5
 102540301 7-15, 7-17
 102555501 16-3
 102562401 16-3

102570401 16-11
 102601501 16-5
 102603501 16-5
 102605201 16-5
 102606101 16-5
 102607501 16-5
 102626401 1-31
 102668801 16-9
 102669901 16-7
 102674001 16-5
 102674101 16-5
 102674201 16-5
 102674401 16-9
 102674601 16-9
 102675001 16-5
 102675101 16-5
 102675201 16-5
 102675301 16-5
 102675401 16-5
 102686101 16-3
 102704901 13-5
 102711201 6-7
 102753401 7-9
 102766301 5-11
 102771701 14-5
 102845203 12-25
 102865101 9-3
 102871801 5-15, 5-17
 102886301 14-5
 102886401 14-5
 102886501 14-5
 102886601 14-5
 102951701 13-5
 102989201 13-5
 103345701 10-3
 103350901 5-15, 5-17
 103351001 5-9
 103372101 9-5
 103372302 9-5
 103397901 15-5, 15-7
 103414901 15-5, 15-7
 103428501 15-3
 103428601 15-3
 103428701 15-3
 103429001 15-3
 103429101 15-3
 103429201 15-3
 103429301 15-3
 103429501 15-3
 103429701 15-3
 103434001 15-3
 103439901 15-3
 103477901 5-13
 103502701 5-11
 103507001 5-11
 103512801 15-3

103512901 15-3
 103513001 15-3
 103517401 15-3
 103517601 15-5
 103601601 5-3
 103628801 5-11
 103651901 9-5
 103717001 15-3
 103717002 15-3
 103717003 15-3
 103717302 5-13
 103717402 5-13
 103776901 9-5
 103779601 15-3
 96704416 7-15, 7-17

A

AC cord 15-5, 15-7, 15-9, 15-11
 AC cord bushing 15-3, 15-5
 AC cord receptacle 15-11
 AC cordset 15-3
 accelerator bracket and bearing assembly 4-15, 4-17
 accelerator cable 9-11
 accelerator pedal 4-15, 4-17
 accelerator pedal adjustment tool 16-3
 accelerator pivot rod 4-15, 4-17
 accelerator return spring 4-15, 4-17
 accelerator rod 4-19
 access door 1-21
 adapter
 cable (IQDM) 16-7
 adhesive, guide ring 16-3
 adjuster
 hydraulic brake 16-7
 adjuster, lash 7-11
 air box 9-13
 air box top 9-13
 air filter 9-13
 air intake hose 9-13
 ammeter 15-3, 15-5, 15-7, 15-9, 15-11
 anchor body 4-3, 4-7
 anchor body kit 4-3, 4-7
 anchor, piston 4-3, 4-7
 A-plate strap 5-9
 A-plate, delta 5-9
 arbor 16-3
 arm
 governor 11-3
 pivot 11-3
 rocker 7-9
 armature 6-11, 13-3, 13-5
 armature conversion kit 6-11
 armrest 1-23, 1-29, 1-31
 ashtray 1-11
 assembly

INDEX

accelerator bracket and bearing 4-15, 4-17
 accelerator pivot rod 4-15, 4-17
 air box 9-13
 air box top 9-13
 armature 6-11
 axle 11-7
 bearing, steering shaft 5-3
 bell crank and shaft 6-7
 brush connector 6-11
 brush holder 6-11
 carburetor 9-7
 connecting rod 7-13
 cylinder head 7-9
 delta A-plate 5-9
 delta shock and gear support 5-9
 drive hub 10-3
 driven clutch 10-7
 driven clutch fixed-face 10-7
 field coil 6-11
 float 9-7
 Forward/Reverse shifter 11-9
 fuel tank vent 9-5
 governor 11-5
 idle screw 9-7
 inner ball joint 5-7
 kingpin 5-11
 moveable-face 10-3, 10-7
 pilot air screw 9-7
 plug cap 7-5
 ratchet 4-5
 score card plate 5-5
 secondary clutch weight 10-3
 steering shaft 5-3
 steering wheel 5-5
 axle 11-7, 14-3, 14-5
 axle shaft oil seal 11-7, 14-5
 axle tube 14-5

B

backing plate, brake 4-3, 4-7
 bag hook 1-41
 bag rack 1-41
 bag rack support 1-41
 bag rest mat 1-33
 bag strap 1-41
 bag, desiccant 10-3
 ball bearing 7-11
 ball joint 4-5, 4-19, 5-7, 5-9, 11-13
 ball joint, left-hand thread 5-7, 5-9
 ball stud 6-7, 11-3, 11-9
 ball, bearing 13-3
 ball, shifter 11-5
 ball, steel pressure relief 7-7
 band, RPM limiter mount 7-5
 bar, drive 12-9
 barb, vent 9-3, 9-5

barrel, plastic 1-7, 1-25, 1-33
 battery 6-15
 battery cap 12-25
 battery charger 15-5, 15-7, 15-9, 15-11
 battery charger case 15-5, 15-7, 15-9, 15-11
 battery charger handle 15-5
 battery charger receptacle 12-15
 battery charger transformer 15-5, 15-7, 15-9, 15-11
 battery clamp 6-15
 battery discharge machine 16-3
 battery hold-down 12-25
 battery hold-down rod 12-25
 battery insulator 1-37
 battery terminal protector spray 16-3
 battery thermometer 16-3
 battery warning light 12-7
 battery, 8-volt, Trojan T890 12-25
 battery, 8-volt, Trojan T890, moist 12-25
 bearing 14-5
 ball 7-11, 13-3
 ball (motor) 13-5
 ball (steering pinion) 5-7
 front wheel hub 5-13
 hub 5-13
 idler 10-3
 inner axle tube 11-7, 14-5
 lower pinion (steering) 5-7
 needle 11-5
 outer axle tube 11-7
 pivot support 4-15, 4-17
 steering shaft 5-3
 thrust 5-11
 bearing and oil seal remover 16-3
 bearing driver set 16-3
 bearing puller 16-3
 bearing puller wedge 16-3
 bearing retainer 13-3
 bearing seat 5-3
 bell crank 11-9
 bell crank and shaft 6-7
 bellows 5-7
 belt, drive 10-5
 belt, starter/generator 6-13, 10-3
 beverage holder 1-13, 1-27
 beverage holder mounting plate 1-27
 bezel, choke cable 9-15
 block, brake-mounting 4-5
 block, fuse 6-7
 body kick plate 1-25, 1-33
 body, anchor 4-3, 4-7
 body, center 1-25
 body, front 1-7
 body, rear 1-33
 boot, steering column 5-3
 boot, switch 12-23

bottom, air box 9-13
 box
 air 9-13
 electrical component 6-7
 steering gear 5-7
 bracket 6-9
 accelerator cable 9-11
 adjustable starter/generator 6-13
 brake cable guide 5-9
 fuel pump 9-3
 governor cable 9-11
 muffler mounting 8-3
 oil filter mount 7-7
 oil level switch 7-11
 relay mounting 15-9
 retaining 9-15
 RPM limiter 7-5
 shifter 11-3, 11-13
 shock absorber 5-15, 5-17
 shock mounting 5-15, 5-17
 snubber 7-15, 7-17
 starter/generator mounting 6-13
 steering column 5-3
 steering column mounting 5-3
 throttle spring return 9-9
 Tow/Run switch 12-23
 brake actuator kit 4-3, 4-7
 brake adjustment tool 16-3
 brake backing plate 4-3, 4-7
 brake cable 4-9, 4-13
 brake cable equalizer 4-9, 4-13
 brake cable hanger 5-15, 5-17
 brake cable release tool 16-3
 brake cluster 4-3, 4-7
 brake drum 4-3, 4-7
 brake lever arm 4-3, 4-7
 brake mounting block 4-5
 brake pedal 4-5
 brake pedal adjustment tool 16-3
 brake pedal pad 4-5
 brake pedal tension tool 16-3
 brake return spring 4-13
 brake shoe 4-3, 4-7
 brake spring 4-3, 4-7
 breaker, circuit 15-3, 15-5, 15-7, 15-9, 15-11
 breather 11-3, 14-5
 brush and screw set 6-11
 brush box assembly 13-5
 brush connector 6-11
 brush holder 6-11
 brush inspection port cover 6-11
 brush package 13-3
 brush port cover 6-11
 brush rigging 13-3
 brush spring 13-3
 brush spring set 6-11

INDEX

brush, motor 13-5
 buckle strap 1-41
 bumper 1-5
 drive unit (motor) 13-3, 13-5
 front 1-7
 front, kit 1-7
 rear 1-39
 rubber 4-5
 seal, long 1-15
 spring return 4-15, 4-17
 bumper mounting 1-39
 bumper, seat 1-17, 1-19
 bushing 10-3, 13-3
 AC cord 15-3, 15-5
 bronze 5-13
 nylon 4-5
 return line 9-5
 spindle 5-13
 steel 5-11, 5-15, 5-17
 urethane 5-9, 5-11, 5-15, 5-17
 button, drive 10-7
 buzzer, reverse 6-9, 6-17, 12-7, 12-27

C

cable
 accelerator 9-11
 brake 4-9, 4-13
 choke 9-15
 FNR shifter 11-13
 governor 9-11
 IQDM 16-7
 calibration test module 16-3
 cam
 driven clutch 10-7
 electrical component box 6-7
 neutral lockout 11-9
 cam installation tool 16-3
 camshaft 7-11
 camshaft shim 7-11
 canopy 1-43, 1-45, 1-49, 1-51
 canopy brace 1-47, 1-53
 canopy frame 1-49, 1-51
 canopy handle 1-47, 1-53
 canopy hardware 1-47, 1-53
 canopy support 1-47, 1-53
 canopy trim plate 1-47, 1-53
 cap
 battery 12-25
 key switch 6-9, 12-7
 plug 7-5
 seat back 1-23
 carburetor 9-7
 carburetor float level tool 16-7
 carburetor gasket 9-9
 carburetor insulator 9-9
 carburetor mounting gasket 9-9

card, safety first 16-9
 case
 battery charger 15-5, 15-7, 15-9, 15-11
 differential gear 11-7
 FNR 12-11
 gear 11-3, 14-5
 rocker 7-9
 case, charger 15-3
 center body 1-25
 Channel_Windshield_5-Inch 1-3
 charger bezel tool 16-3
 charger board relay 15-3
 charger case 15-3
 charger hardware 15-3
 charger legs 15-3
 charger receptacle 12-15
 charger, battery 15-5, 15-7
 choke cable 9-15
 choke cable bezel 9-15
 choke valve 9-13
 circuit breaker 15-3, 15-5, 15-7, 15-9, 15-11
 clamp
 battery 6-15
 cable retaining 9-11
 hose 9-3, 9-5, 9-9, 9-13
 muffler hose 8-3
 clevis, upper delta 5-11
 clip, score card 5-5
 cluster idler gear 11-5
 cluster, brake 4-3, 4-7
 clutch alignment tool 16-5
 clutch pulley 10-3
 clutch removal tool 16-3
 clutch repair kit 10-7
 clutch tool kit 16-5
 clutch weight 10-3
 clutch, drive 10-3
 clutch, driven 10-7
 coil, field 6-11
 coil, ignition 7-5
 collet 7-9
 column, steering 5-3
 communication display module 16-5
 component box, electrical 6-7
 component mounting plate 12-19
 compression gauge 16-5
 compression mount 1-47, 1-53
 compressor, piston ring 16-9
 compressor, valve spring 16-11
 computer, onboard 12-19
 connecting rod 7-13
 connector, a- 6-11
 continuity tester 16-5
 controller, speed 12-19
 cord connector 7-11
 cord set, DC 15-5

cord, AC 15-5, 15-7, 15-9, 15-11
 cord, DC 15-7, 15-9, 15-11
 Cordset
 PD3, AC 114" 15-3
 PD3, AC 80" 15-3
 PD3, DC 113" 15-3
 PD3, DC 154" 15-3
 PD3, DC 205" 15-3
 counterbalance guide shaft 7-13
 counterbalance weight 7-13
 cover
 brush inspection port 6-11
 brush port 6-11
 crankcase 7-11
 dust 4-3, 4-7, 5-13
 electrical box 6-7
 oil pump 7-7
 rack 1-41
 screw head 12-7
 steering column 5-3
 cowl 1-7
 crank, bell 11-9
 crankcase 7-13
 crankcase cover 7-11
 crankcase vent tube 9-9
 crankshaft 7-13
 crankshaft rod 7-13
 crankshaft shim 7-13
 C-type stop ring 5-7
 cup holder 1-13, 1-27
 cup holder mounting plate 1-27
 cup, spring 4-15, 4-17
 current limiter 15-11
 cushion, shock absorber 1-43, 1-45, 1-47, 1-49,
 1-51, 1-53, 5-15, 5-17
 cutter, valve seat 16-5, 16-11

D

damper, RPM limiter 7-5
 dash component 1-9
 dash panel 12-7
 DC cord 15-7, 15-9, 15-11
 DC cord set 15-5
 DC cordset 15-3
 decal
 battery danger 3-5
 Club Car 1-7
 dash warning 3-3, 3-7
 driver/passenger 3-9
 four-passenger warning 3-3, 3-7
 frame ground 3-9
 motor braking 3-3
 on/off 3-3, 3-7
 operating instructions (gas) 3-3, 3-7
 operator warning 1-11
 rotating parts 3-9

INDEX

Tow/Run switch warning 3-5
delta A-plate 5-9
delta A-plate sub-assembly 5-9
delta shock and gear support 5-9
desiccant bag 10-3
DF-terminal insulator 6-11
diesel tachometer probe 16-9
differential 14-3
 drive unit 14-5
differential gear 11-7, 14-5
differential gear case 11-7
differential housing 14-5
differential idler gear 11-7
differential pin 11-7
diode 6-7
dipstick 7-3
door, access 1-21
drain plug 7-7
drain plug gasket 7-7, 11-3
drink holder 1-13, 1-27
drive bar 12-9
drive belt 10-5
drive button 10-7
drive clutch 10-3
drive clutch button 10-3
drive clutch fixed sheave tool 16-5
drive clutch fixed-face 10-3
drive clutch holder tool 16-5
drive clutch puller 16-5
drive clutch spider removal tool 16-5
drive clutch spring 10-3
drive clutch weight 10-3
drive hub 10-3
drive unit 14-3
drive unit bumper 13-3, 13-5
driven clutch 10-7
driven clutch button 10-7
driven clutch cam 10-7
driven clutch cam puller 16-5
driven clutch fixed-face assembly 10-7
driven clutch puller plug 16-5
driven clutch spring compression base tool 16-5
driven clutch spring compression collar tool 16-5
driven clutch spring compression nut tool 16-5
driver, drive clutch 10-3
drum, brake 4-3, 4-7
dry moly lubricant 16-7
duct, intake 9-15
dust cover 4-3, 4-7, 5-13

E

E-clip 4-9, 4-13

electric fuel pump 9-3
electrical box cover 6-7
electrical component box 6-7
electrical component mounting plate 12-19
end bell, commutator 6-11
end bell, output shaft 6-11
end cap, putter tube 1-41
engine mounting plate 7-15, 7-17
engine shroud 7-3
engine, FE350 CW without ACR 7-3
equalizer pivot 4-9
equalizer rod 4-9, 4-13
equalizer, brake cable 4-9, 4-13
exhaust system 8-3
exhaust valve 7-9
extrusion, plastic 1-3, 1-5

F

face, moveable 10-3, 10-7
fan housing 7-3
fan shroud 7-3
fan, flywheel 7-5
fender, inner 1-33
field coil 6-11
field coil housing 6-11
fill plug 11-3
filter
 air 9-13
 fuel 9-3
 oil 7-7
 oil pump 7-7
finishing plug 1-41
fitting, thread-forming grease 5-7, 5-9, 5-13
fixed-face, drive clutch 10-3
fixed-face, driven clutch 10-7
float 9-7
floor mat 1-7, 1-9, 1-25
flywheel 7-5
flywheel fan 7-5
flywheel fan plate 7-5
flywheel puller 16-7
FNR case 12-11
FNR handle 11-9, 11-13
FNR shifter base 11-9
FNR shifter cable 11-13
foam, seat 1-15, 1-17, 1-19
fork, shift 11-5
Forward/Reverse shifter 11-9
front body 1-7
front body support 1-33
front bumper 1-7
front bumper kit 1-7
front spring retainer plate 5-11
F-terminal hardware 6-11
f-terminal insulator 6-11
fuel filter 9-3

fuel gauge sending unit 9-5
fuel gauge/hour meter 6-9
fuel line 9-3, 9-5, 9-9
fuel pump bracket 9-3
fuel pump, electric 9-3
fuel tank 9-5
fuel tank strap 9-3
fuel tank vent 9-5
fuse 12-15, 15-7, 15-9, 15-11
 10-amp 6-7
 20-amp 6-7
 3/8-amp 12-15
 charger 15-3, 15-5
fuse block 6-7

G

gasket 14-5
 carburetor 9-9
 carburetor mounting 9-7, 9-9
 crankcase cover 7-9, 7-11
 drain plug 7-7, 11-3
 exhaust 7-9, 8-3
 head 7-9
 insulator 7-9, 9-9
 liquid 11-3, 14-5, 16-7
 rocker case 7-9
 seat 1-17, 1-19
 sending unit 9-5
gasket kit, FE350 7-9
gauge, compression 16-5
gauge, fuel/hour 6-9
gear
 case 11-3, 14-5
 cluster idler 11-5
 differential 11-7, 14-5
 differential idler 11-7, 14-5
 differential output 14-5
 helical 7-13, 11-5, 11-7
 spur 7-13, 11-5
 synchro 11-5
gear yoke 16-7
governor 11-5
governor arm 11-3
governor cable 9-11
governor cable bracket 9-11
governor shaft installation tool 16-7
grip, pencil 5-5
grommet 9-5, 9-15
guide
 intake valve 7-9
 valve 7-9
 valve seat cutter 16-11
guide ring adhesive 16-3

INDEX

H

handle, battery charger 15-5
handle, FNR 11-9, 11-13
hanger, brake cable 5-15, 5-17
hardware kit, charger 15-3
hardware, F-terminal 6-11
harness, wire 6-5, 6-7, 9-3, 12-5
head gasket 7-9
head, cylinder 7-9
headband, motor 13-5
heatsink 15-5
heatsink and rectifier 15-7, 15-9, 15-11
helical gear 7-13, 11-5, 11-7
hill brake rod 4-5
hill brake weld assembly 4-5
hinge plate 1-15, 1-17, 1-19, 1-25, 1-33
hold-down rod, battery 12-25
hold-down, battery 12-25
holder, cup 1-13, 1-27
hose, air intake 9-13
hose, fuel 9-3
hour meter 12-21
hour meter/fuel gauge 6-9
housing
 2-pin 12-9
 3-pin 12-9, 13-3, 13-5
 differential 14-5
 fan 7-3
 field coil 6-11
hub 5-13
hub bearing 5-13
hub, synchronizer clutch 11-5
hydraulic brake adjuster 16-7
hydrometer 16-7

I

idle screw assembly 9-7
idler bearing 10-3
idler gear, differential 14-5
ignition coil 7-5
inner frame snubber 7-15, 7-17
input shaft 14-5
insert, synchronizer 11-5
instrument panel 12-7
insulator gasket 7-9, 9-9
insulator, battery 1-37
insulator, carburetor 9-9
insulator, terminal 13-5
intake duct 9-15
intake pipe 9-9
intake valve 7-9
intermediate shaft 14-5
internal retaining ring pliers 16-7
IQ display module (IQDM) 16-7

J

jet, main 9-7
jet, pilot 9-7
joint
 ball 4-5, 4-19, 5-9, 11-13
 left-hand thread ball 5-7, 5-9

K

key
 crankshaft 7-5, 7-13
 driven clutch 10-7
 On/Off 6-9, 12-7
 square 10-7
 starter/generator 6-11
 woodruff 11-3
key switch 6-9
key switch cap 6-9, 12-7
key switch, On/Off 12-7
kick plate, body 1-25, 1-33
kingpin 5-11
kit
 2-pin housing 12-9
 3-pin housing 12-9, 13-3, 13-5
 accelerator pivot rod 4-15, 4-17
 anchor body 4-3, 4-7
 brake pedal 4-5
 brake pedal adjustment tool 16-3
 brake shoe retainer 4-3, 4-7
 clutch repair 10-7
 differential gear case 11-7
 drive clutch button 10-3
 drive clutch weight 10-3
 driven clutch button 10-7
 fuel tank 9-5
 IQ display module (IQDM) 16-7
 motor brush 13-5
 motor brush spring 13-5
 motor speed sensor 13-5
 neutral lockout cam 11-9
 park brake latch 4-5
 park brake pedal 4-5
 PD3 Cordest, AC 114" 15-3
 PD3 Cordest, AC 80" 15-3
 PD3 Cordest, DC 113" 15-3
 PD3 Cordest, DC 154" 15-3
 PD3 Cordest, DC 205" 15-3
 PD3 hardware 15-3
 reverse buzzer 6-9, 6-17, 12-7, 12-27
 shock absorber cushion 5-15, 5-17
 tune-up 16-9

L

lash adjuster 7-11
latch, air box 9-13
latch, park brake 4-5

leaf spring 5-15, 5-17
legs, charger 15-3
lever
 change 11-3
 choke 9-13
 transmission shifter 11-3
light
 battery warning 12-7
 oil 6-9
limit switch 6-7, 11-9
limiter
 current 15-11
 RPM 7-5
line, fuel 9-3, 9-5, 9-9
link, rack and pinion drag 5-7
liquid gasket 11-3, 14-5, 16-7
low oil warning light 6-9
lubricant, dry moly 16-7
lubricant, moly-teflon 13-5, 16-7
lug nut 2-3, 2-5, 2-7, 2-9
lug stud 11-7, 14-5

M

magnet, speed sensor 13-5
main jet 9-7
mat, floor 1-7, 1-9, 1-25
MCOR 12-9
meter, hour 12-21
meter, volt ohm 16-11
module
 calibration test 16-3
 communication display 16-5
moly-teflon lubricant 16-7
motor
 heavy-duty, 48-volt 13-3, 13-5
motor armature 13-3, 13-5
motor brush 13-5
motor brush box 13-5
motor brush kit 13-5
motor brush spring 13-5
motor brush spring kit 13-5
motor bumper 13-3, 13-5
motor controller 12-19
motor frame and field 13-5
motor headband 13-5
motor magnet, speed sensor 13-5
motor speed sensor 13-3, 13-5
motor speed sensor kit 13-5
motor speed sensor magnet kit 13-3
motor terminal and lead 13-5
mount, compression 1-47, 1-53
mounting block, brake 4-5
moveable-face 10-3, 10-7
muffler hose clamp 8-3

INDEX

N

needle bearing 11-5
neutral lockout cam 11-9
nozzle, main 9-7
nut, lug 2-3, 2-5, 2-7, 2-9

O

OBC 12-19
oil filler tube 7-3
oil filter 7-7
oil filter mount bracket 7-7
oil filter screen 7-11
oil filter screen plate 7-11
oil level sensor 7-11
oil level switch bracket 7-11
oil pump and rotor 7-7
oil pump cover 7-7
oil pump filter 7-7
oil pump plate 7-7
oil seal 7-9, 7-11, 7-13, 11-3, 11-5
oil warning light, low 6-9
onboard computer 12-19
O-ring 7-3, 7-9, 7-11, 7-13, 13-3

P

pad
 accelerator pedal 4-15, 4-17
 brake pedal 4-5
 park brake 4-5
paint, touch-up 16-7
park brake latch 4-5
park brake pedal 4-5
park brake rod sleeve 4-5
park brake spacer 4-5
park brake torsion spring 4-5
pawl 4-5
pedal, accelerator 4-15, 4-17
pedal, brake 4-5
pedal, park brake 4-5
pencil grip 5-5
pilot air screw assembly 9-7
pilot jet 9-7
pin, differential 11-7
pin, piston 7-13
pinion, steering 5-7
pipe, intake 9-9
piston 7-13
piston anchor 4-3, 4-7
piston pin 7-13
piston ring 7-13
piston ring compressor 16-9
piston ring pliers 16-9
piston ring set 7-13
pivot arm 11-3
pivot support bearing 4-15, 4-17

plate
 body kick 1-33
 bumper mounting 1-39
 component mounting 12-19
 engine mounting 7-15, 7-17
 flywheel fan 7-5
 front spring retainer 5-11
 hinge 1-15, 1-17, 1-19, 1-25, 1-33
 oil filter screen 7-11
 oil pump 7-7
 receptacle backing 12-15
 score card 5-5
 shackle 5-17
 spring mounting 5-11
 thrust 11-5, 11-7
plate, canopy trim 1-47, 1-53
pliers
 internal retaining ring 16-7
 piston ring 16-9
 retaining ring 16-9
plug 1-41
 drain 7-7
 driven clutch puller 16-5
 fill 11-3
 spark 7-5
plug cap 7-5
pole set 6-11
press weldment 16-5
protector spray, battery terminal 16-3
puller
 bearing 16-3
 clutch 16-3
 drive clutch 16-5
 drive clutch hub 16-5
 driven clutch cam 16-5
 flywheel 16-7
 seal 16-9
 special use tool 16-9
pulley
 clutch 10-3
 starter-generator 6-11
pump, fuel, electric 9-3
push rod 7-9
putter tube 1-41
putter tube end cap 1-41

R

race, front hub bearing 5-13
rack and pinion drag link 5-7
rack cover 1-41
rack guide pressure spring 5-7
rack, steering 5-7
rame and field, motor 13-5
ratchet, park brake 4-5
reamer, valve guide 16-9
rear bumper 1-39

rear spring shackle 5-15
receptacle 12-15
receptacle backing plate 12-15
receptacle, AC cord 15-11
receptacle, battery charger 12-15
rectifier with heatsink 15-7, 15-9, 15-11
regulator, voltage 6-7
relay 15-9, 15-11
relay mounting bracket 15-9
relay, charger board 15-3
remover, bearing and oil seal 16-3
retainer
 accelerator pedal spring 4-15, 4-17
 bearing 13-3
 brake shoe 4-3, 4-7
 shock absorber cushion 5-15, 5-17
 spring (drive clutch) 10-3
 valve spring 7-9
retaining bracket 9-15
retaining ring 5-3
retaining ring pliers 16-9
return spring bumper 4-15, 4-17
reverse buzzer 6-9, 6-17, 12-7, 12-27
rim, wheel, white 2-3, 2-7
ring
 piston 7-13
 retaining 5-3, 6-7, 10-3, 10-7, 11-9
 snap 5-7, 7-9, 7-13
 spiral backup 10-3
 synchronizer 11-5
ring, C-type stop 5-7
ring, piston 7-13
rivet, blind push 1-7
rocker arm 7-9
rocker case 7-9
rocker case gasket 7-9
rocker shaft 7-9
rocker switch 12-11
rod
 accelerator 4-19
 accelerator pivot 4-15, 4-17
 battery hold-down 12-25
 connecting 7-13
 crankshaft 7-13
 equalizer 4-9, 4-13
 hill brake 4-5
 push 7-9
 shift 11-5
 tie 5-9
rotor, oil pump and 7-7
RPM limiter 7-5
RPM limiter bracket 7-5
RPM limiter damper 7-5
RPM limiter mount band 7-5

INDEX

S

- safety first card 16-9
- score card clip 5-5
- score card plate 5-5
- screen, oil filter 7-11
- screw, valve clearance adjuster 16-9
- seal
 - intake 9-13
 - lip 14-5
 - oil 7-9, 7-11, 7-13, 11-3, 11-5, 11-7, 14-5
 - steering pinion dust 5-7
 - vertical socket dust 5-7, 5-9
- seal puller 16-9
- sealant 11-3, 14-5
- seat
 - spring 7-9
 - valve 7-7
- seat back 1-23
- seat back assembly 1-23
- seat back cap 1-23
- seat back, white 1-23
- seat bottom assembly 1-15, 1-17, 1-19
- seat bumper 1-17, 1-19
- seat cover, vinyl 1-15, 1-17, 1-19
- seat foam 1-15, 1-17, 1-19
- seat gasket 1-17, 1-19
- seat support 1-15, 1-17, 1-19
- seat, bearing 5-3
- sending unit, fuel gauge 9-5
- sensor, motor speed 13-3, 13-5
- sensor, oil level 7-11
- set, brush and screw 6-11
- set, pole 6-11
- shackle plate 5-17
- shackle, rear spring 5-15
- shaft
 - change 11-3
 - counterbalance guide 7-13
 - input 14-5
 - intermediate 14-5
 - rocker 7-9
 - steering column 5-3
 - transmission 11-5
- shift fork 11-5
- shift rod 11-5
- shifter base, FNR 11-9
- shifter bracket 11-3, 11-13
- shim, camshaft 7-11
- shim, crankshaft 7-13
- shock absorber 5-9, 5-15, 5-17
- shock absorber cushion 1-43, 1-45, 1-47, 1-49, 1-51, 1-53, 5-15, 5-17
- shock absorber cushion retainer 5-15, 5-17
- shock mounting bracket 5-15, 5-17
- shoe, brake 4-3, 4-7
- shroud 7-3
- shroud, engine 7-3
- shroud, fan 7-3
- sleeve
 - delta A-plate 5-9
 - governor 11-5
 - park brake rod 4-5
 - synchronizer 11-5
- snap ring 5-7, 7-9, 7-13
- snubber bracket 7-15, 7-17
- snubber, inner frame 7-15, 7-17
- socket 5-7, 5-9
- solenoid 12-19
- solenoid, 12-volt 6-7
- spacer
 - accelerator pivot rod 4-15, 4-17
 - park brake 4-5
- spanner wrench 16-9
- spark plug 7-5
- speed controller 12-19
- speed sensor 13-5
- speed sensor magnet 13-5
- speed sensor magnet kit 13-3
- speed sensor, motor 13-3, 13-5
- spiral backup ring 10-3
- spray, battery terminal protector 16-3
- spring
 - accelerator return 4-15, 4-17
 - brake 4-3, 4-7
 - brake return 4-13
 - brush 6-11, 13-3
 - compression 5-5
 - drive button 10-3
 - drive clutch 10-3
 - driven clutch 10-7
 - extension return 9-13
 - forward/reverse cam 11-9
 - leaf 5-15, 5-17
 - park brake torsion 4-5
 - rack guide pressure 5-7
 - shifter 11-5
 - steering shaft compression 5-3
 - synchronizer 11-5
 - throttle return 9-9
 - valve 7-9
- spring cup 4-15, 4-17
- spring mounting plate 5-11
- spring, motor brush 13-5
- spur gear 7-13, 11-5
- stand-offs, plastic 15-3
- starter/generator 6-11
- starter/generator belt 6-13, 10-3
- starter/generator pulley 6-11
- stator and shell winding 13-3
- steel bushing 5-11, 5-15, 5-17
- steel pressure relief ball 7-7
- steering column 5-3
- steering column bearing press tool 16-9
- steering column retaining ring tool 16-9
- steering gear box 5-7
- steering pinion 5-7
- steering pinion dust seal 5-7
- steering rack 5-7
- steering shaft assembly 5-3
- steering shaft compression spring 5-3
- steering wheel 5-5
- steering wheel puller tool 16-9
- stem, valve 2-3, 2-5, 2-7, 2-9
- stiffener, flywheel side 7-15, 7-17
- stiffener, PTO side 7-15, 7-17
- strap buckle 1-41
- strap, A-plate 5-9
- strap, bag 1-41
- strap, fuel tank 9-3
- stud 7-15, 7-17
 - lug 11-7, 14-5
- stud, ball 6-7, 11-3, 11-9
- support yoke (steering) 5-7
- support, front body 1-33
- suppressor, voltage 15-7, 15-9, 15-11
- switch
 - four-position 15-9, 15-11
 - key 6-9, 12-7
 - limit 6-7, 11-9
 - rocker 12-11
 - Tow/Run 12-23
- switch rubber boot 12-23
- synchro gear 11-5
- synchronizer clutch hub 11-5
- synchronizer insert 11-5
- synchronizer sleeve 11-5
- synchronizer spring 11-5
- system, exhaust 8-3

T

- 12-volt solenoid 6-7
- tachometer 16-9
- tachometer probe, diesel 16-9
- tank, fuel 9-5
- terminal and lead, motor 13-5
- terminal insulator 13-5
- tester, continuity 16-5
- thermometer, battery 16-3
- thread-forming grease fitting 5-7, 5-9, 5-13
- throttle return spring 9-9
- throttle spring return bracket 9-9
- thrust bearing 5-11
- thrust plate 11-5, 11-7
- tie rod 5-9
- tie wrap 5-7, 6-7, 9-15, 11-13, 12-7
- tire 2-3, 2-5, 2-7, 2-9
- tire and wheel assembly 2-3, 2-5, 2-7, 2-9
- tool

INDEX

accelerator pedal adjustment 16-3
belt tensioning, starter/generator 16-11
brake adjustment 16-3
brake cable release 16-3
brake pedal adjustment 16-3
brake pedal tension 16-3
cam installation 16-3
carburetor float level 16-7
charger bezel 16-3
clutch alignment 16-5
cT-wrench 16-5
drive clutch fixed sheave 16-5
drive clutch holder 16-5
drive clutch spider removal 16-5
driven clutch spring compression base 16-5
driven clutch spring compression collar 16-5
driven clutch spring compression nut 16-5
governor shaft installation 16-7
puller, special use 16-9
steering column bearing press 16-9
steering column retaining ring 16-9
steering wheel puller 16-9
transaxle axle seal 16-9
transaxle pinion seal 16-9
transmission 16-9
valve guide driver 16-9
valve seat cutter 16-5
tool kit, clutch 16-5
touch-up paint 16-7
Tow/Run switch 12-23
Tow/Run switch bracket 12-23
transaxle 14-3, 14-5
transaxle axle seal tool 16-9
transaxle housing 14-5
transaxle pinion seal tool 16-9
transaxle, unitized 11-3
transformer, battery charger 15-5, 15-7, 15-9, 15-11
transmission shaft 11-5
transmission tool 16-9
trim
 cowl 1-7
tube
 crankcase vent 9-9
 oil filler 7-3
tube, putter 1-41
tune-up kit 16-9
T-wrench tool 16-5

U

u-bolt 5-15, 5-17
unitized transaxle 11-3
upper delta clevis 5-11
urethane bushing 5-9, 5-11, 5-15, 5-17

V

valve
 choke 9-13
 exhaust 7-9
 fuel pickup tube 9-5
 intake 7-9
 reed 7-9
valve clearance adjuster screw 16-9
valve guide 7-9
valve guide driver tool 16-9
valve guide reamer 16-9
valve guide, intake 7-9
valve seat 7-7
valve seat cutter 16-5, 16-11
valve seat cutter guide 16-11
valve seat cutter tool 16-5
valve seat t-wrench 16-11
valve spring 7-9
valve spring compressor 16-11
valve spring retainer 7-9
valve stem 2-3, 2-5, 2-7, 2-9
vent barb 9-3, 9-5
vertical socket dust seal 5-7, 5-9
volt ohm meter 16-11
voltage regulator 6-7
voltage suppressor 15-7, 15-9, 15-11

W

warning light, low oil 6-9
wedge, bearing puller 16-3
weight
 clutch 10-3
 counterbalance 7-13
 secondary clutch 10-3
weldment
 press 16-5
wheel 2-3, 2-5, 2-7, 2-9
wheel and tire assembly 2-3, 2-5, 2-7, 2-9
wheel rim, white 2-3, 2-7
wheel, steering 5-5
window 1-43, 1-45, 1-49, 1-51
windshield 1-3, 1-5
 one-piece 1-5
windshield frame 1-47, 1-53
windshield frame pad 1-47, 1-53
Winged_Windshield 1-3
wire harness 6-5, 6-7, 9-3, 12-5
woodruff key 11-3
wrap, tie 5-7, 6-7, 9-15, 11-13, 12-7
wrench, spanner 16-9

Y

yoke, gear 16-7
yoke, support (steering) 5-7



Club Car, Inc.
P.O. Box 204658
Augusta, GA 30917-4658
USA

Web	www.clubcar.com
Phone	1.706.863.3000 1.800.ClubCar
Int'l	+1 706.863.3000
Fax	1.706.863.5808