

The word "Pioneer" is written in a large, bold, black script font. To its right, the number "900" is written in a smaller, bold, black sans-serif font. The background features a large, light gray, stylized graphic that resembles a wing or a swoosh, curving around the text.

Pioneer
900

The Club Car logo consists of a black, stylized, curved shape resembling a wing or a swoosh. To its right, the words "Club Car" are written in a bold, black sans-serif font, with a small "TM" trademark symbol to the upper right of "Car". Below this, the words "Performance Utility Vehicles" are written in a smaller, black sans-serif font.

Club CarTM
Performance Utility Vehicles

2001 ILLUSTRATED PARTS LIST

Manual No. 102189909 Edition Code 1000B0602A

USING THE ILLUSTRATED PARTS LIST

WARNING

- This manual is to be used only for identification and ordering of service parts. Be sure to read and use the maintenance and service manual before attempting any vehicle repairs.

This manual covers all 2001 Pioneer 900 vehicles.

The manual is divided into 13 sections. Sections 1 through 12 pertain to the Pioneer 900 vehicle, and section 13 pertains to tools that are used on all Club Car products. Note that there are two flags on the outside edge of each page. The first flag contains the section number of which that page is a part. The other flag contains the letter G, signifying that the page pertains to the gasoline vehicle only.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section numbers, and under them, the individual page titles and numbers to be found in that section. The index can be used to find specific parts and assemblies. The index is divided into numerical and alphabetical listings with the page numbers in italic text.

There is a two-page spread for each individual page title in the Table of Contents. On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used. Some item numbers have more than one part number because several configurations of a component are represented together on one spread.

Note that a part description may be indented. This indentation corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to *level 2* is a component of the *level 1* part (assembly) that it is listed under. A *level 3* part is a component of the *level 2* part that it is listed under, and a *level 4* part is a component of the *level 3* part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part *is the quantity used per next higher level assembly of which it is a component*. A part that is not indented is a *level 1* part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.

HOW TO ORDER PARTS: Replacement parts and accessories can be obtained from our network of authorized dealers and distributors. You can obtain the name and phone number of your closest Club Car contact by visiting our web site at www.clubcar.com and clicking on the “*Distributor Search*” link or by calling our toll-free Service Parts and Technical Assistance hotline at (800) 872-2246.



P. O. Box 204658
Augusta, Georgia 30917-4658 USA
Telephone 706-863-3000
Service Parts Fax 706-855-7413
www.clubcar.com
Copyright © 2000, 2002 CLUB CAR, INC.
All rights reserved.
This manual effective October 2, 2000

CONTENTS

BODY AND TRIM	SECTION	1
FRONT BODY AND TRIM	1-3	
SEATS AND SUPPORT STRUCTURE	1-5	
TILT BED, HINGE, AND LATCH	1-7	
LATCH PLATE AND PROP ROD	1-9	
CARGO BOX	1-11	
REAR BODY TRIM	1-13	
WHEELS AND TIRES	SECTION	2
WHEELS AND TIRES	2-3	
DECALS	SECTION	3
DECALS	3-3	
DECALS, CONTINUED	3-5	
BRAKE ASSEMBLIES	SECTION	4
FRONT BRAKE ASSEMBLY	4-3	
REAR BRAKE ASSEMBLY	4-5	
PEDAL GROUP	SECTION	5
BRAKE PEDAL ASSEMBLY	5-3	
ACCELERATOR PEDAL ASSEMBLY	5-5	
STEERING, FRONT AND REAR SUSPENSION	SECTION	6
STEERING COLUMN	6-3	
STEERING GEAR ASSEMBLY	6-5	
FRONT SUSPENSION, UPPER	6-7	
FRONT SUSPENSION, LOWER	6-9	
REAR SUSPENSION	6-11	
STABILIZER BAR	6-13	
ELECTRICAL SYSTEM	SECTION	7
WIRING	7-3	
FORWARD/REVERSE SHIFTER ASSEMBLY	7-5	
ELECTRICAL COMPONENT BOX	7-7	
ELECTRICAL COMPONENTS, FRONT BODY	7-9	
HEADLIGHTS	7-11	
STARTER/GENERATOR ASSEMBLY	7-13	
STARTER/GENERATOR MOUNTING	7-15	
BATTERY	7-17	
FE350 ENGINE	SECTION	8
FE350 ENGINE – SHROUDS AND BRACKETS	8-3	
FE350 ENGINE – IGNITION COMPONENTS AND FLYWHEEL	8-5	
FE350 ENGINE – OIL CIRCULATION	8-7	

CONTENTS

FE350 ENGINE – CYLINDER HEAD	8-9
FE350 ENGINE – CRANKCASE, CAMSHAFT AND OIL SENSOR	8-11
FE350 ENGINE – CRANKCASE AND CRANKSHAFT	8-13
ENGINE MOUNTING	8-15

FUEL, INTAKE, AND GOVERNOR SYSTEMS

SECTION

9

FUEL SYSTEM	9-3
CARBURETOR ASSEMBLY	9-5
CARBURETOR INSTALLATION	9-7
GOVERNOR AND ACCELERATOR CABLES	9-9
INTAKE DUCT, CHOKE, AND AIR BOX ASSEMBLY	9-11

EXHAUST SYSTEM

SECTION

10

EXHAUST SYSTEM	10-3
----------------------	------

TORQUE CONVERTER

SECTION

11

DRIVE CLUTCH	11-3
DRIVEN CLUTCH	11-5

UNITIZED TRANSAXLE

SECTION

12

UNITIZED TRANSAXLE – GEAR CASES AND BRACKETS	12-3
UNITIZED TRANSAXLE – F&R TRANSMISSION AND GEAR REDUCTION	12-5
UNITIZED TRANSAXLE – DIFFERENTIAL AND AXLES	12-7

MAINTENANCE AND SERVICE TOOLS

SECTION

13

MAINTENANCE AND SERVICE TOOLS	13-3
MAINTENANCE AND SERVICE TOOLS, CONTINUED	13-5
MAINTENANCE AND SERVICE TOOLS, CONTINUED	13-7

INDEX


SECTION

i

BODY AND TRIM

1

G

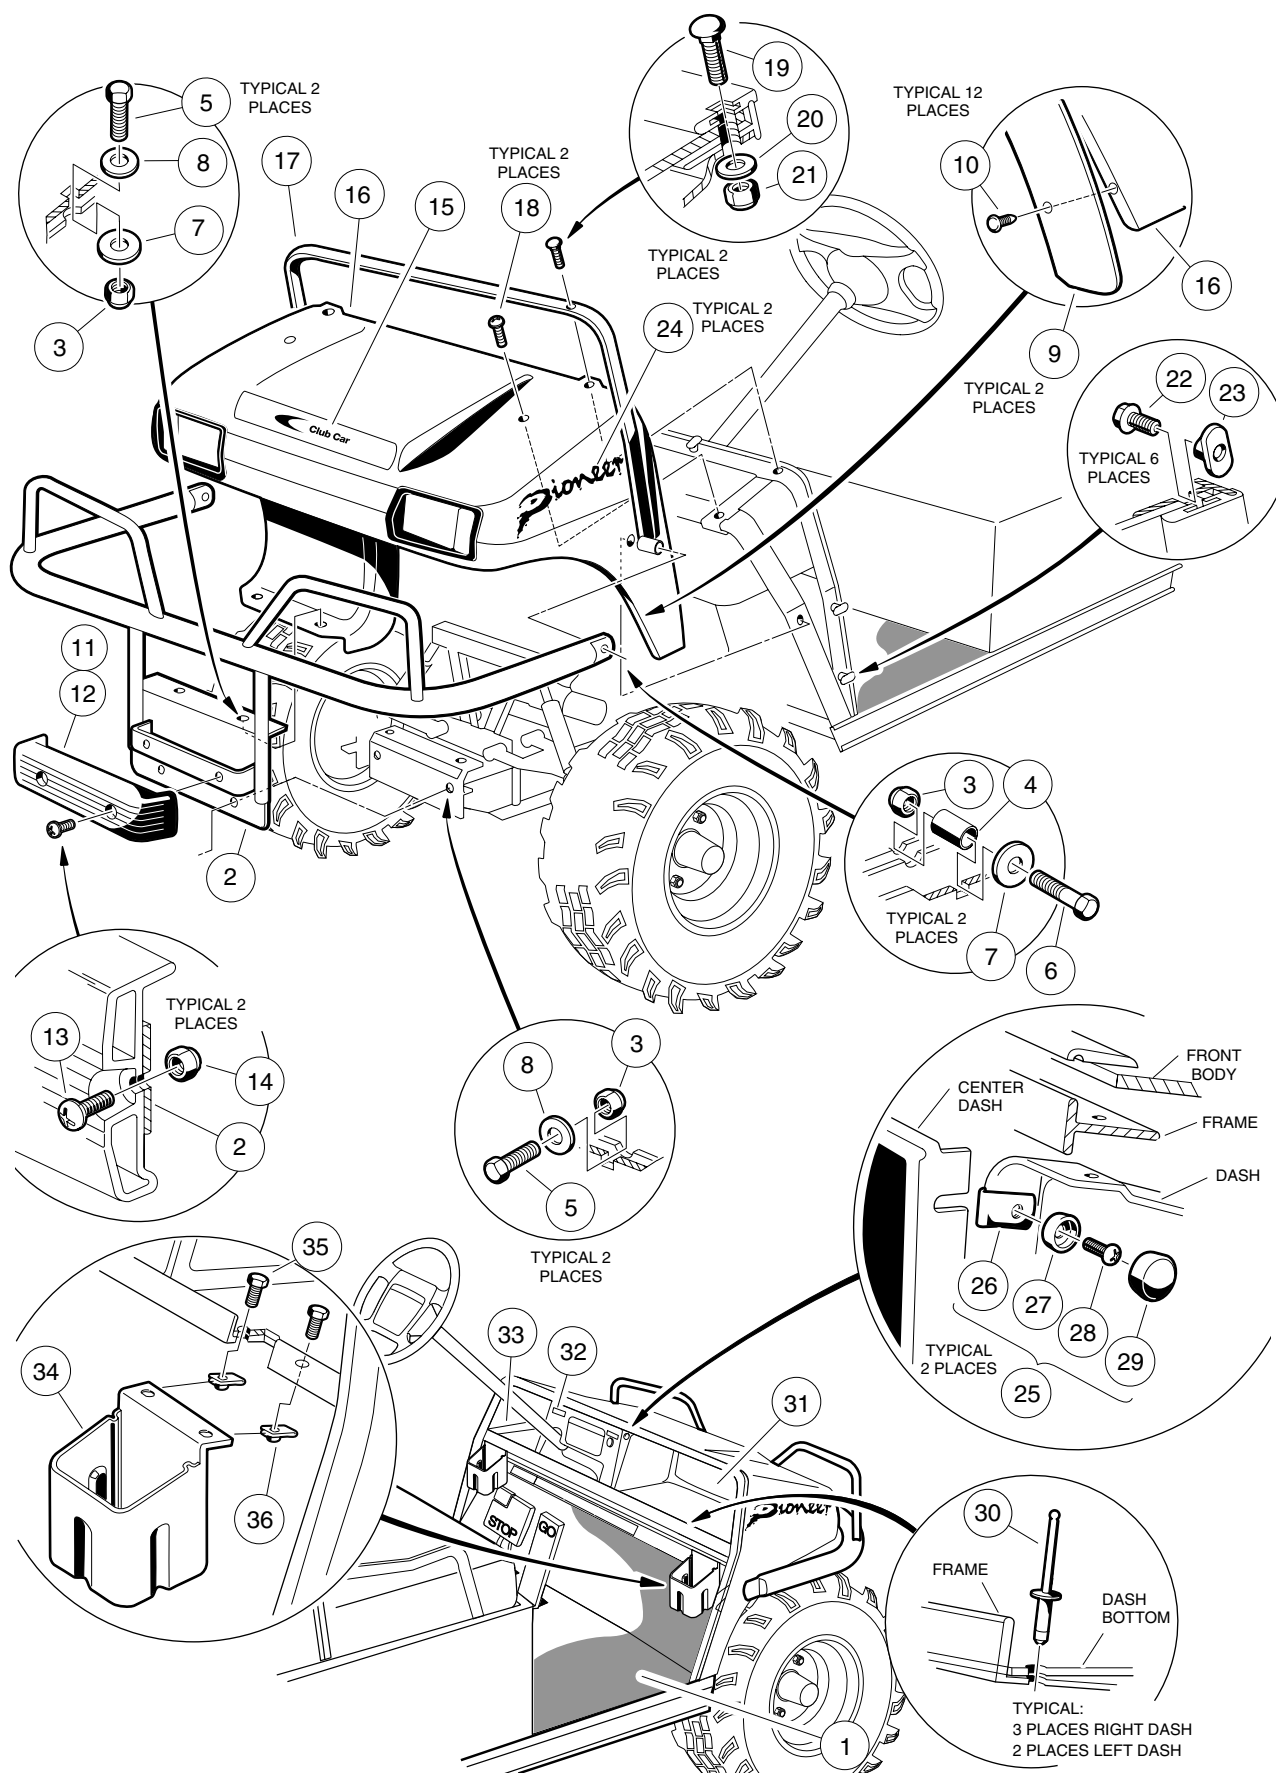


FRONT BODY AND TRIM

1

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102160101	Mat, Floor, Front	1
2	<u>102004301</u>	Guard, Brush	1
3	<u>7473</u>	Nut, Nylon Lock, 5/16-18	6
4	<u>1015608</u>	Spacer	2
5	<u>1010934</u>	Screw, Hex Head, 5/16-18 x 1	4
6	<u>8935</u>	Screw, Hex Head, 5/16-18 x 2-1/4	2
7	<u>1011578</u>	Washer, Flat, Type B, 5/16	4
8	<u>1241</u>	Washer, Flat, 5/16	4
9	<u>102004401</u>	Fender, Front	2
10	<u>1010434</u>	Barrel, Plastic	12
11	<u>1017080</u>	Kit, Front Bumper (Includes Items 12 - 14)	1
12	<u>1016868</u>	Bumper, Front	1
13	<u>7251</u>	Screw, Phillips Truss Head, 5/16-18 x 1	2
14	<u>7473</u>	Nut, Nylon Lock, 5/16-18	2
15	<u>102228001</u>	Decal, Club Car Nameplate	1
16	<u>101693906</u>	Body, Front With Headlight Opening (Red)	1
17	<u>1011014</u>	Trim, Front Body	1
18	<u>7251</u>	Screw, Phillips Truss Head, 5/16-18 x 1	2
19	<u>1010435</u>	Screw, Round-Head Square-Neck, 5/16-18 x 1	2
20	<u>1241</u>	Washer, Flat, 5/16	2
21	<u>7473</u>	Nut, Nylon Lock, 5/16-18	2
22	<u>1011017</u>	Screw, Flange Lock	6
23	1011394	Nut, Slab Base "T" (Package of 4)	1
24	102228101	Decal, Pioneer	2
25	<u>1014645</u>	Kit, Snap Washer, Black (Includes Items 26 - 29)	2
26	N/A	Nut, Speed, 10-32	1
27	N/A	Washer, Cup, No. 10	1
28	N/A	Screw, Sheet Metal, 10 x 3/4	1
29	N/A	Cover, Screw Head	1
30	<u>7973</u>	Rivet, Aluminum Pop, 3/16	5
31	<u>1013343</u>	Component, Dash, Passenger Side (Black)	1
32	101660404	Panel, Center Dash (Black)	1
33	1013344	Component, Dash, Driver Side (Black)	1
34	1013422	Kit, Cup Holder (Includes Items 35 and 36)	2
35	<u>1010545</u>	Screw, Hex Head, 1/4-20 x 3/4	2
36	1016952	Nut, "U", 1/4-20	2

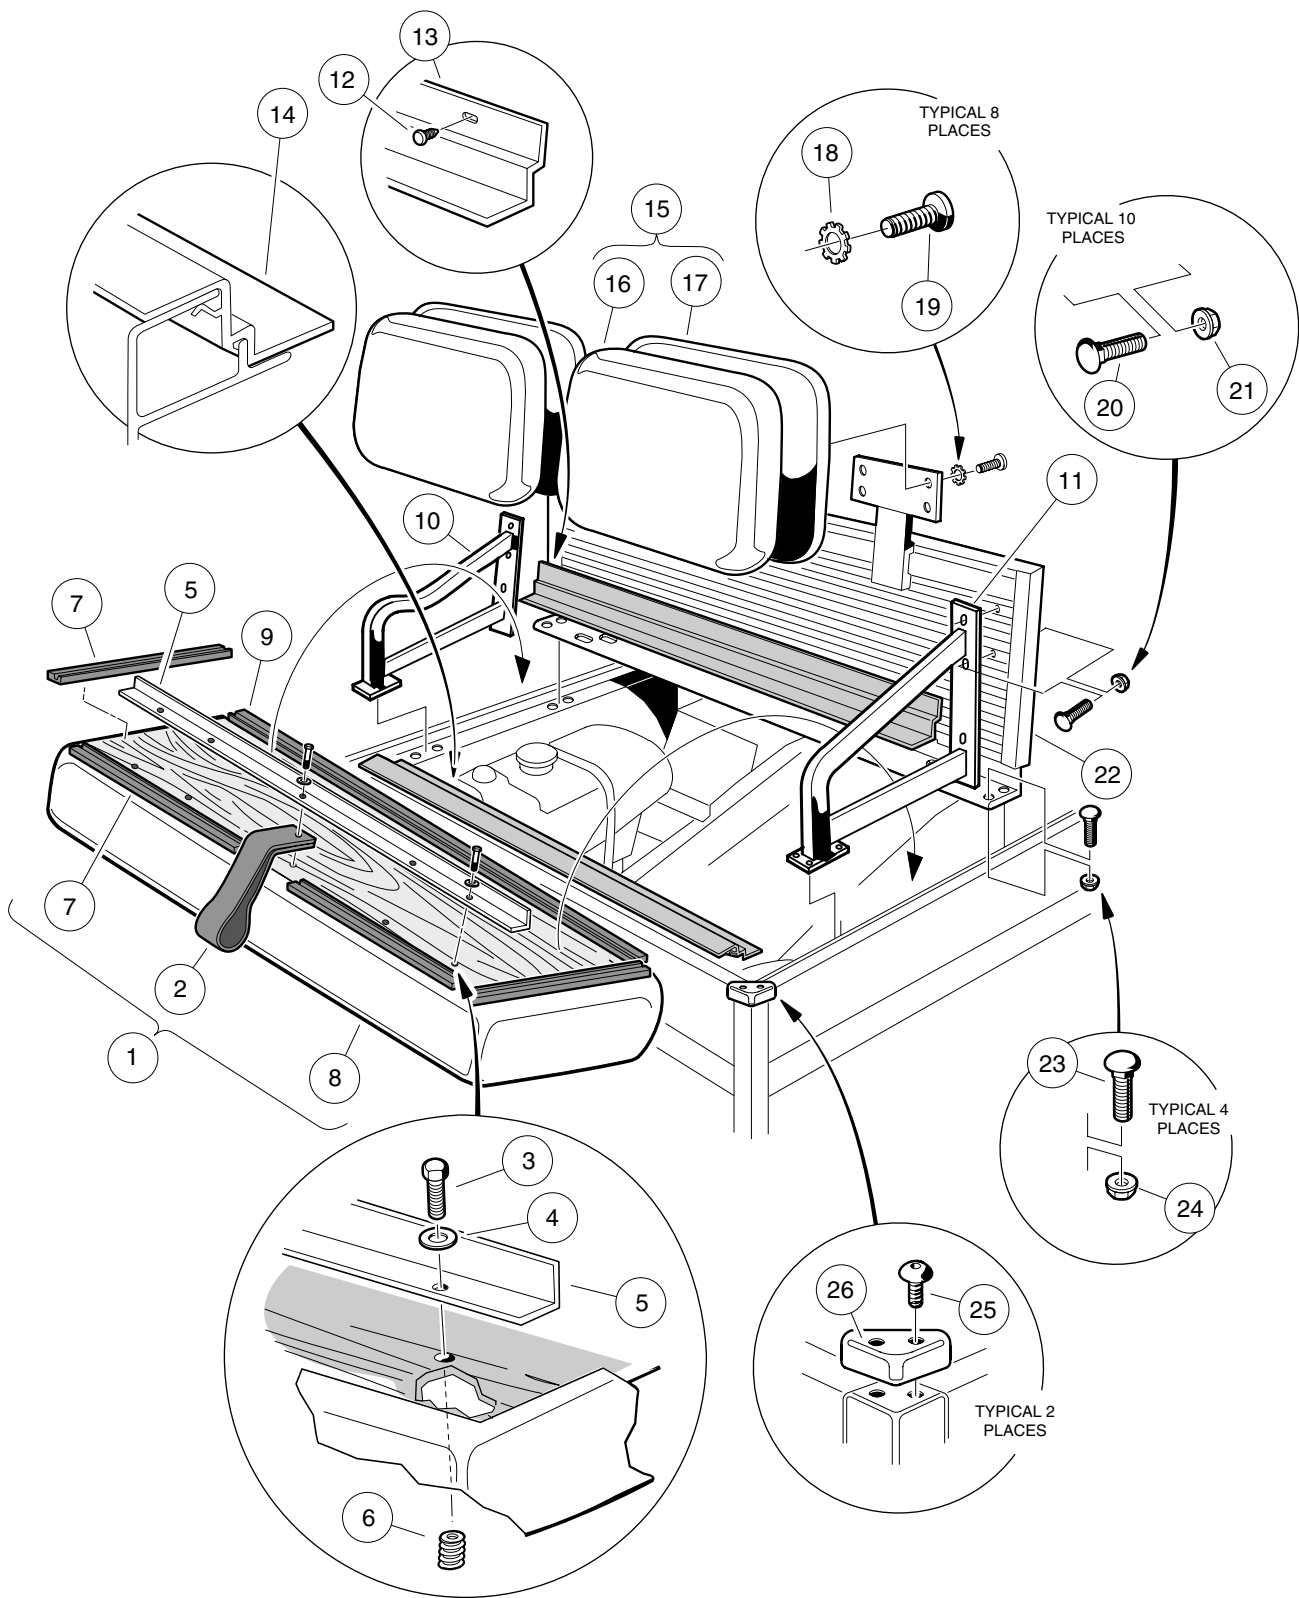


SEATS AND SUPPORT STRUCTURE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101564502</u>	Assembly, Seat Bottom (White) (Includes Items 2 - 9)	1
1	<u>101564503</u>	Assembly, Seat Bottom (Black) (Includes Items 2 - 9)	1
1	<u>101564505</u>	Assembly, Seat Bottom (Gray) (Includes Items 2 - 9)	1
2	<u>1013309</u>	Strap, Seat Bottom	1
3	<u>101954301</u>	Screw, Hex Head Cap, 1/4-20 x 1	5
4	<u>332</u>	Washer, Flat, 1/4	5
5	<u>101894303</u>	Stiffener, Seat	1
6	<u>1010543</u>	Insert, Wood	5
7	<u>1013311</u>	Bumper, Seat, Short	4
8	<u>101562702</u>	Cover, Vinyl Seat Bottom (White)	1
8	<u>101562704</u>	Cover, Vinyl Seat Bottom (Black)	1
8	<u>101562710</u>	Cover, Vinyl Seat Bottom (Gray)	1
9	<u>1013312</u>	Bumper, Seat, Long	1
10	<u>101888501</u>	Assembly, Arm Rest, Passenger	1
11	<u>101888502</u>	Assembly, Arm Rest, Driver	1
12	<u>1010434</u>	Barrel, Plastic.....	5
13	<u>101963901</u>	Trim, Seat Bottom, Rear	1
14	<u>101964001</u>	Trim, Seat Bottom, Front	1
15	<u>101565202</u>	Assembly, Seat Back (White) (Includes Items 16 and 17)	2
15	<u>101565205</u>	Assembly, Seat Back (Black) (Includes Items 16 and 17)	2
15	<u>101565206</u>	Assembly, Seat Back (Gray) (Includes Items 16 and 17)	2
16	<u>101562602</u>	Cover, Vinyl Seat Back (White)	1
16	<u>101562604</u>	Cover, Vinyl Seat Back (Black)	1
16	<u>101562605</u>	Cover, Vinyl Seat Back (Gray)	1
17	<u>1013335</u>	Cap, Seat Back (Black)	1
18	<u>101946201</u>	Washer, External Tooth Lock, 1/4	8
19	<u>8248</u>	Screw, Phillips Truss Head, 1/4-20 x 3/4	8
20	<u>101958601</u>	Screw, Round-Head Square-Neck, 1/4-20 x 3/4	10
21	<u>101835601</u>	Nut, Flange, 1/4-20	10
22	<u>1015239</u>	Panel, Seat Support	1
23	<u>101963301</u>	Screw, Round-Head Square-Neck, 5/16-18 x 3/4	4
24	<u>101963401</u>	Nut, Flange, 5/16-18	4
25	<u>1014321</u>	Screw, Truss Torx Head, 1/4-14 x 3/4	4
26	<u>1014387</u>	Cap, Corner	2

1


G

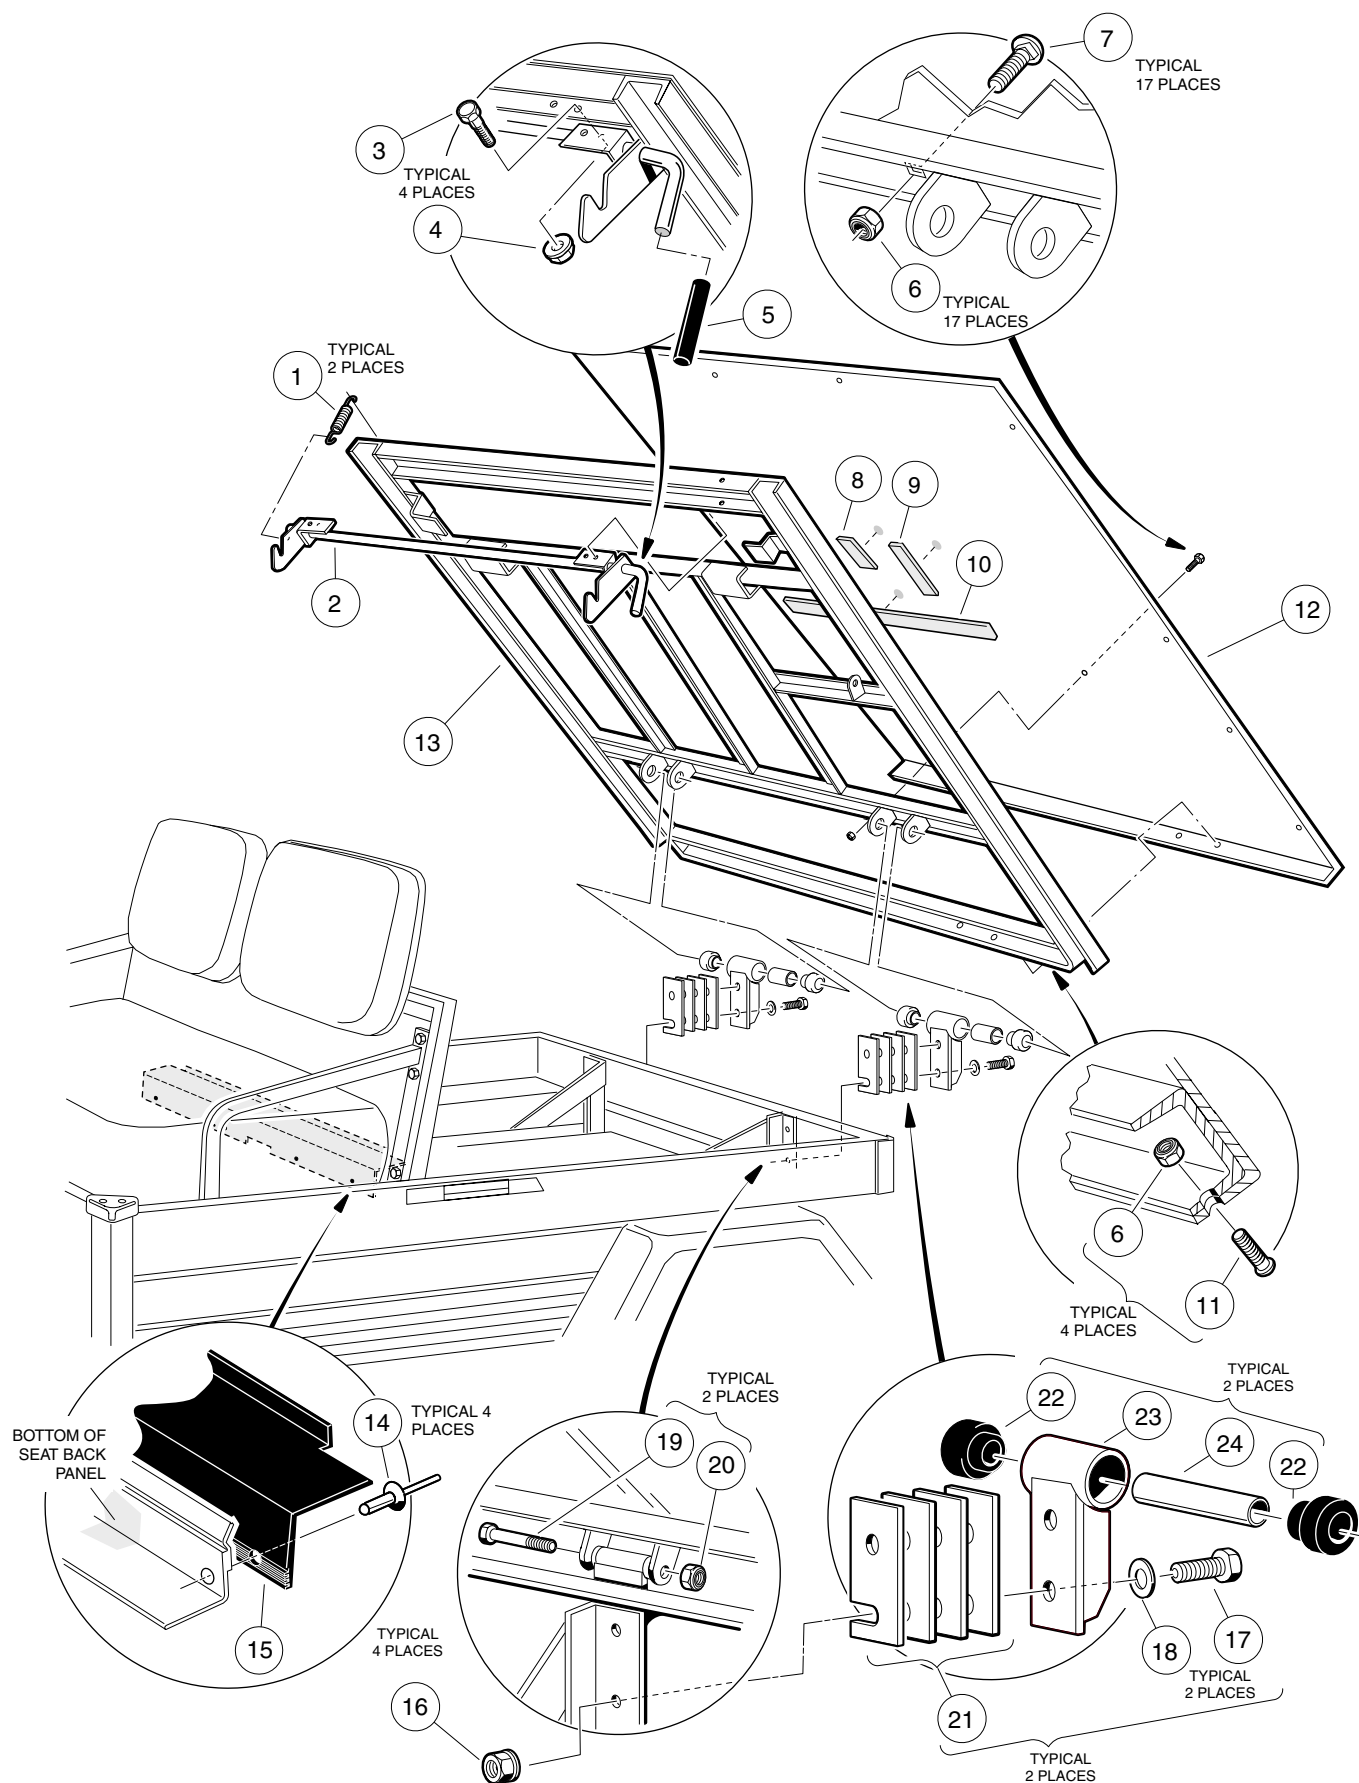

TILT BED, HINGE, AND LATCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>101542901</u>	Assembly, Tilt Bed, Manual Lift (Includes Items 1 - 13)	1
1	<u>1015391</u>	Spring, Latch Extension	2
2	<u>1015252</u>	Assembly, Latch Weld	1
3	<u>403</u>	Screw, Hex Head Cap, 1/4-20 x 5/8	4
4	<u>101835601</u>	Nut, Flanged Lock, 1/4-20	4
5	<u>1015400</u>	Hand Grip, Tilt Latch	1
6	<u>7473</u>	Nut, Nylon Lock, 5/16-18	21
7	<u>1010435</u>	Screw, Round-Head Square-Neck, 5/16-18 x 1	17
8	<u>1014471</u>	Insulation, Bulk (4 In. Long)	A/R
9	<u>1014471</u>	Insulation, Bulk (8 In. Long)	A/R
10	<u>1014471</u>	Insulation, Bulk (43 In. Long)	A/R
11	<u>1015399</u>	Screw, Torx Truss Head, 5/16-18 x 5/8	4
12	N/A	Plate, Floor	1
13	N/A	Assembly, Frame Weldment, Tilt Bed	1
14	<u>7532</u>	Rivet, 3/16	4
15	<u>1017976</u>	Seal, Bed	1
16	<u>102065901</u>	Nut, Dimpled Flange Lock, 3/8-16	4
17	<u>705</u>	Screw, Hex Head Cap, 3/8-16 x 1-1/4	4
18	<u>102066001</u>	Washer, Flat, Type B, 3/8	4
19	<u>8755</u>	Screw, Hex Head Cap, 3/8-16 x 3-3/8	2
20	<u>8754</u>	Nut, Nylon Lock, 3/8-16	2
21	<u>1015507</u>	Shim, Tilt Bed Pivot.....	A/R
22	<u>1015583</u>	Bushing, Urethane	4
23	<u>1015356</u>	Assembly, Tilt Bed Hinge Weld	2
24	<u>1012303</u>	Bushing, Steel	2
		For latch plate and prop rod components, see page 1-9.	

1
G

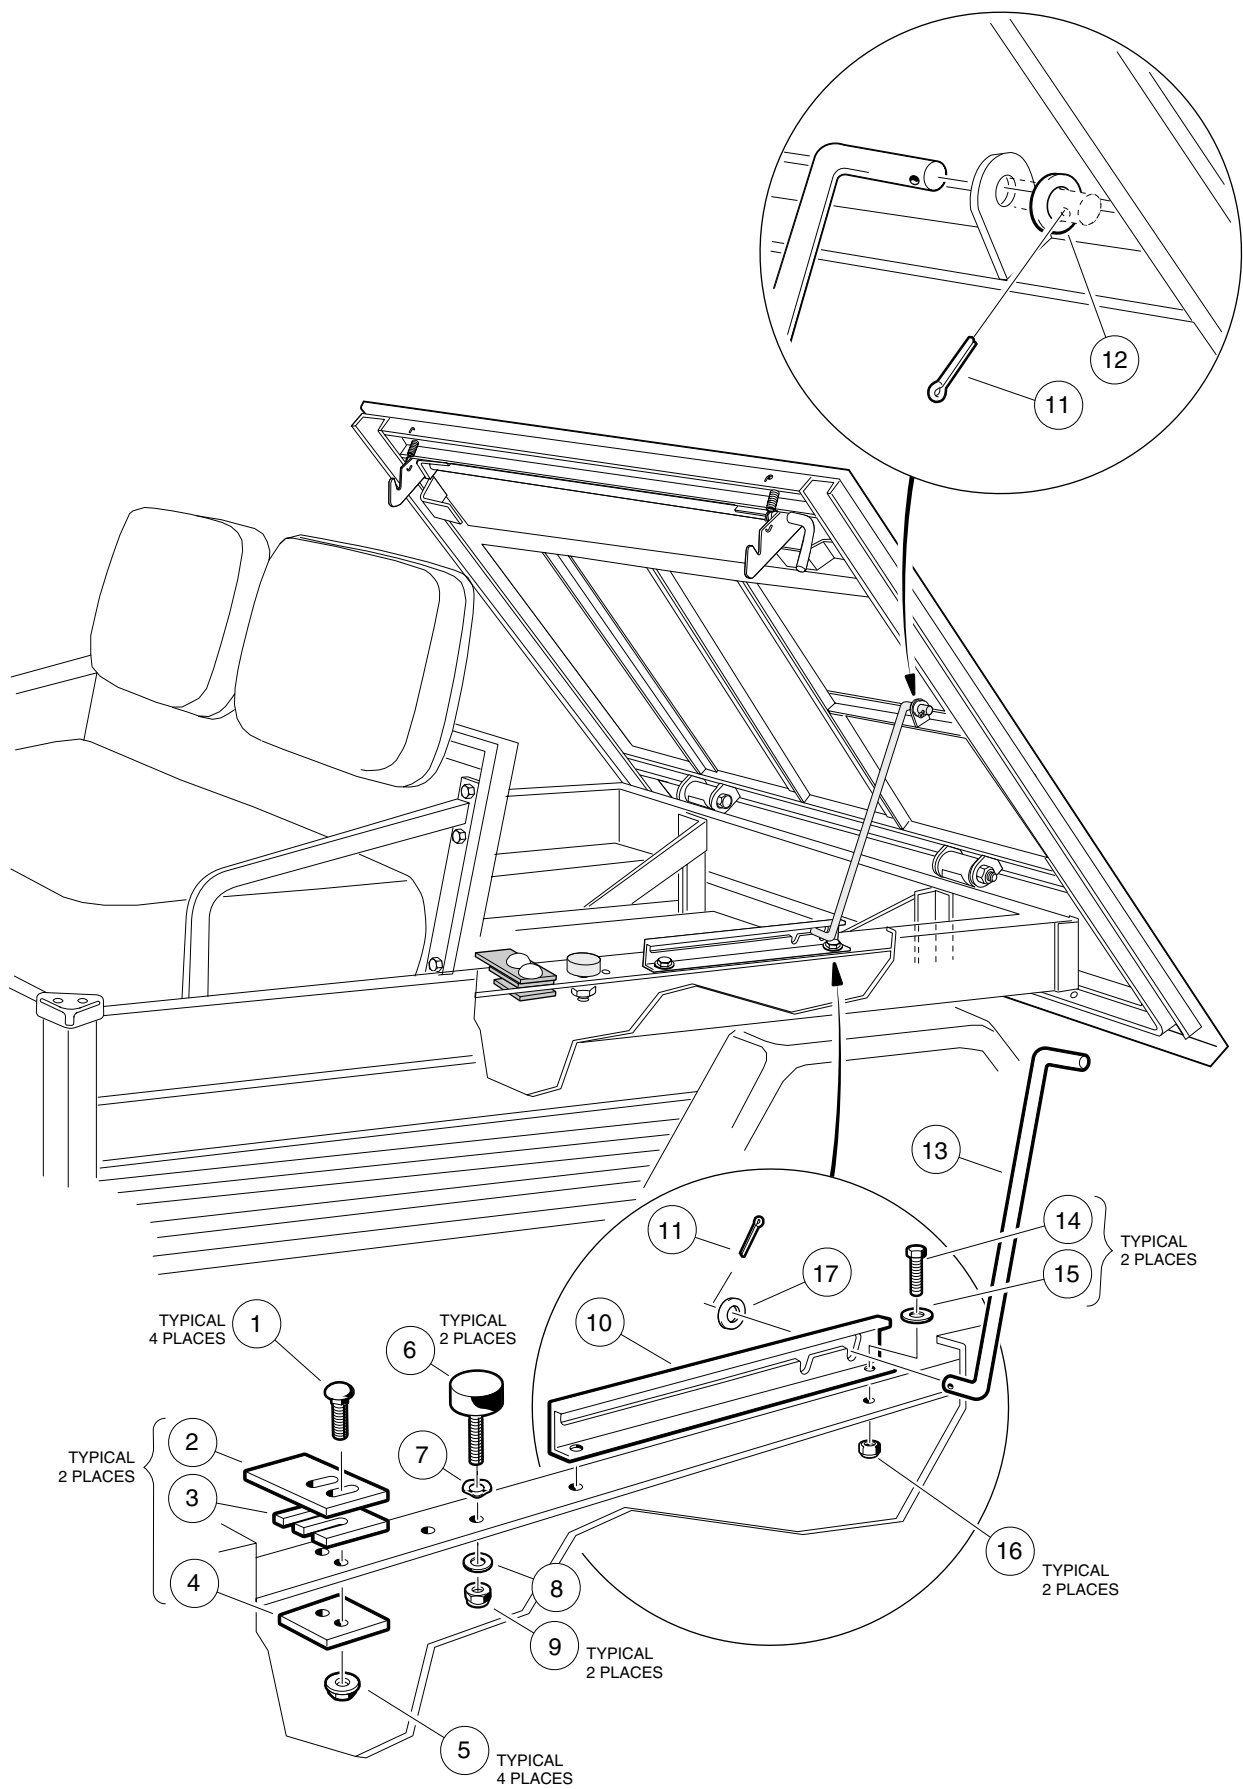


LATCH PLATE AND PROP ROD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101958601</u>	Screw, Round-Head Square-Neck, 1/4-20 x 1	4
2	<u>1015277</u>	Plate, Tilt Bed Latch	2
3	<u>1016078</u>	Shim, Latch Plate	A/R
4	<u>1016060</u>	Support, Latch Plate	2
5	<u>101835601</u>	Nut, Flange, 1/4-20	4
6	<u>1010878</u>	Bumper, Rubber	2
7	<u>1016201</u>	Washer, Wave	2
8	<u>332</u>	Washer, Flat, 1/4	2
9	<u>8233</u>	Nut, Nylon Lock, 1/4-20	2
	<u>101922801</u>	Kit, Prop Rod (Includes Items 10 - 17)	1
10	N/A	Track, Prop Rod	1
11	<u>1035</u>	Pin, Cotter, 3/32 x 1	2
12	<u>334</u>	Washer, Flat, 3/8	1
13	N/A	Rod, Prop	1
14	<u>7847</u>	Screw, Hex Head Cap, 1/4-20 x 3/4	2
15	<u>332</u>	Washer, Flat, 1/4	2
16	<u>8233</u>	Nut, Nylon Lock, 1/4-20	2
17	<u>1017328</u>	Washer, Convex, 3/8	1

1


G

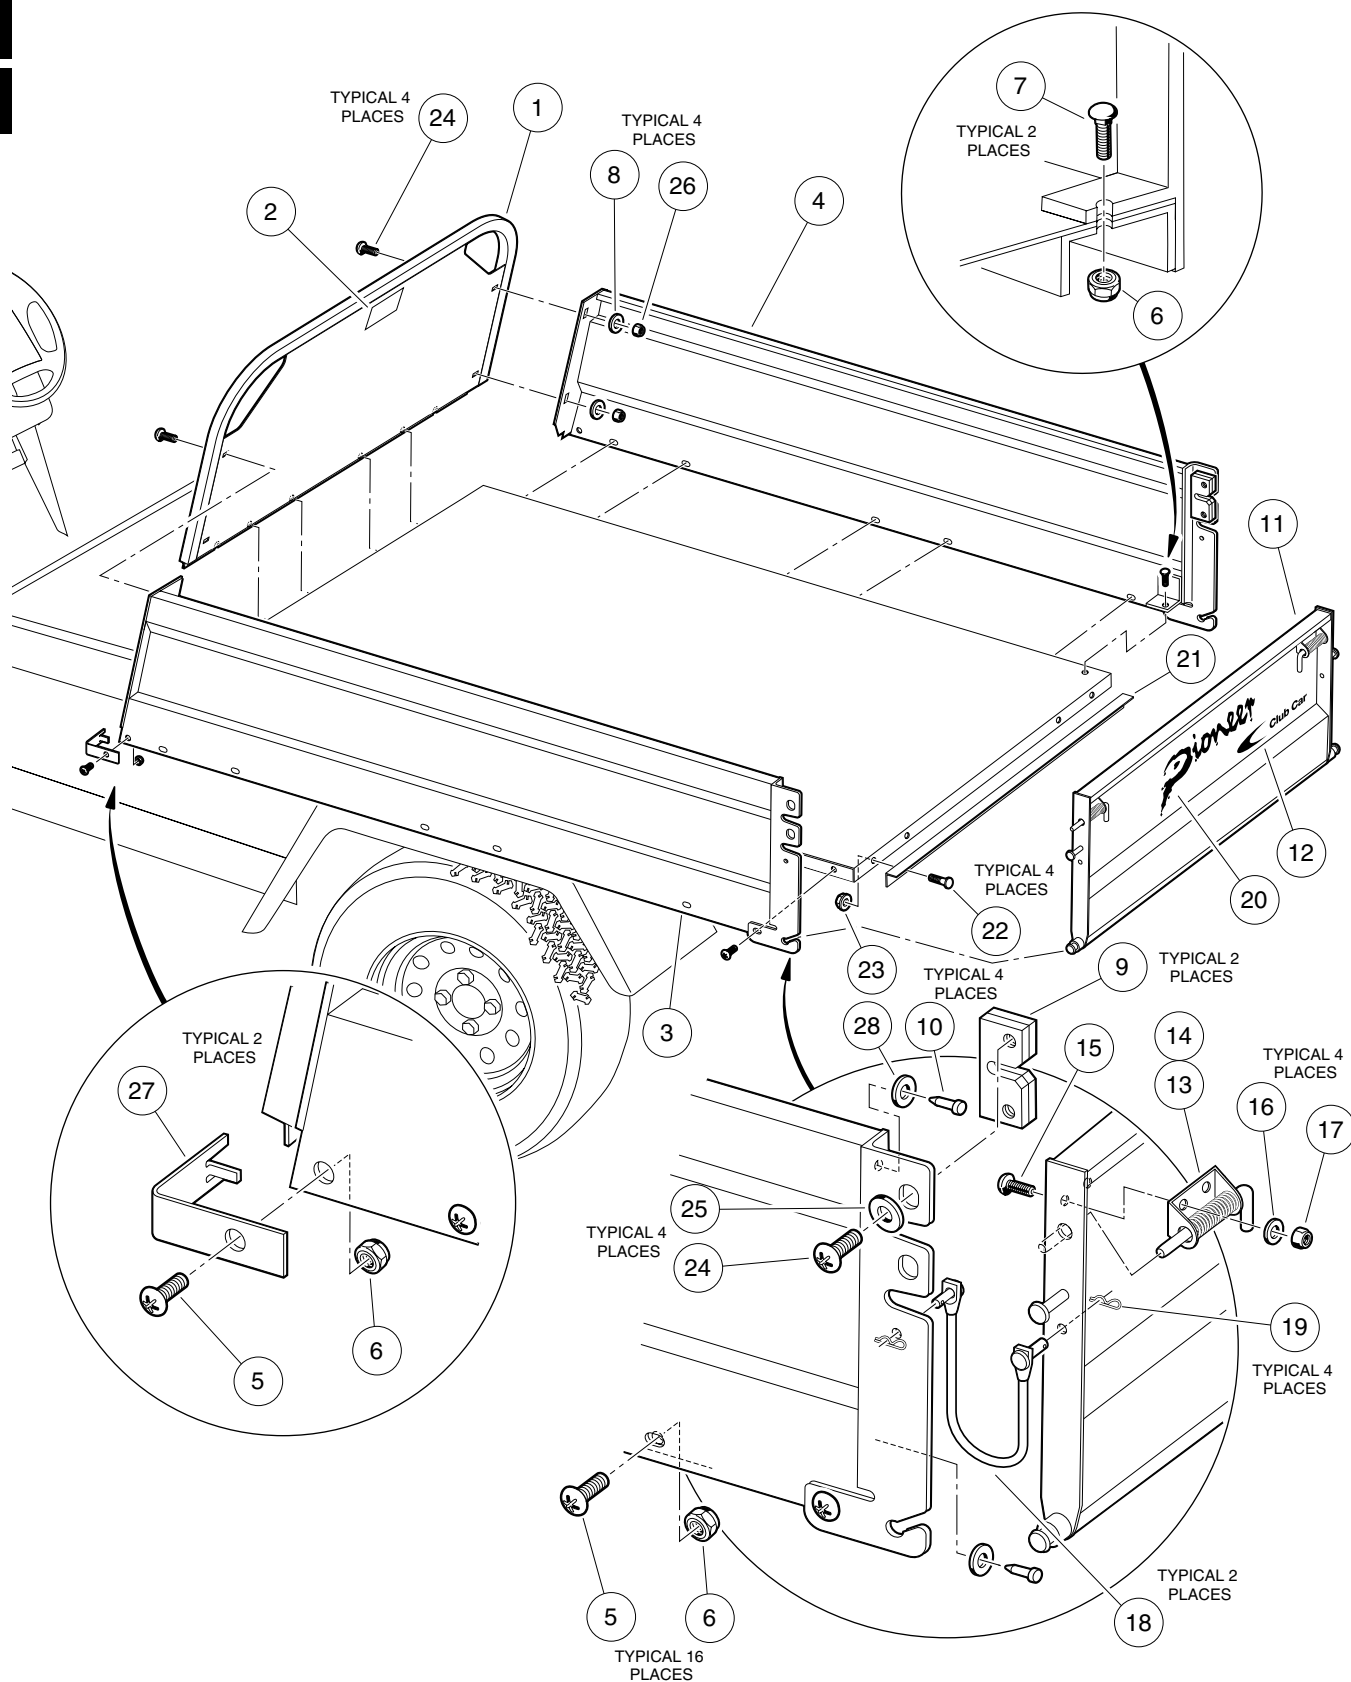

CARGO BOX

1
G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>102230601</u>	Kit, Steel Box (Includes Items 1 - 26)	1
1	<u>102221301</u>	Front Panel Assembly (Includes Item 2)	1
2	<u>101553901</u>	Decal, Bed Load	1
3	<u>102221401</u>	Side Panel Assembly, Driver Side	1
4	<u>102221501</u>	Side Panel Assembly, Passenger Side	1
5	1015399	Screw, Torx Truss Head, 5/16-18 x 7/8	18
6	<u>7473</u>	Nut, Nylon Lock, 5/16 - 18	20
7	<u>1010435</u>	Bolt, Round-Head Square-Neck, 5/16-18 x 1	2
8	<u>332</u>	Washer, Flat, Type A 1/4	4
9	<u>102222001</u>	Latch, Slam	2
10	<u>1010436</u>	Bumper	4
11	102229901	Tailgate Assembly (Includes Items 12 - 20)	1
12	102234901	Decal, Club Car Tailgate	1
13	<u>102222101</u>	Spring Latch, Driver Side	1
14	<u>102222201</u>	Spring Latch, Passenger Side	1
15	8419	Screw, Torx Truss Head, 1/4-20 x 5/8	4
16	<u>332</u>	Washer, Flat, 1/4	4
17	<u>8233</u>	Nut, Nylon Lock, 1/4-20	4
18	<u>102221801</u>	Tether	2
19	<u>1013366</u>	Pin, Hair Spring Cotter	4
20	<u>102234801</u>	Decal, Pioneer Tailgate	1
21	<u>101894304</u>	Kit, Tailgate Angle	1
22	<u>1014537</u>	Stud, Flush Head	4
23	<u>101963401</u>	Nut, Flange Lock, 5/16-18	4
24	<u>1014415</u>	Screw, Torx Truss Head, 1/4-20 x 3/4	8
25	<u>1014306</u>	Washer, Flat, Type B, 1/4	4
26	<u>8233</u>	Nut, Nylon Lock, 1/4-20	4
27	<u>102221701</u>	Cap, Front Corner	2
28	<u>102239901</u>	Washer, Rubber, 3/8	4

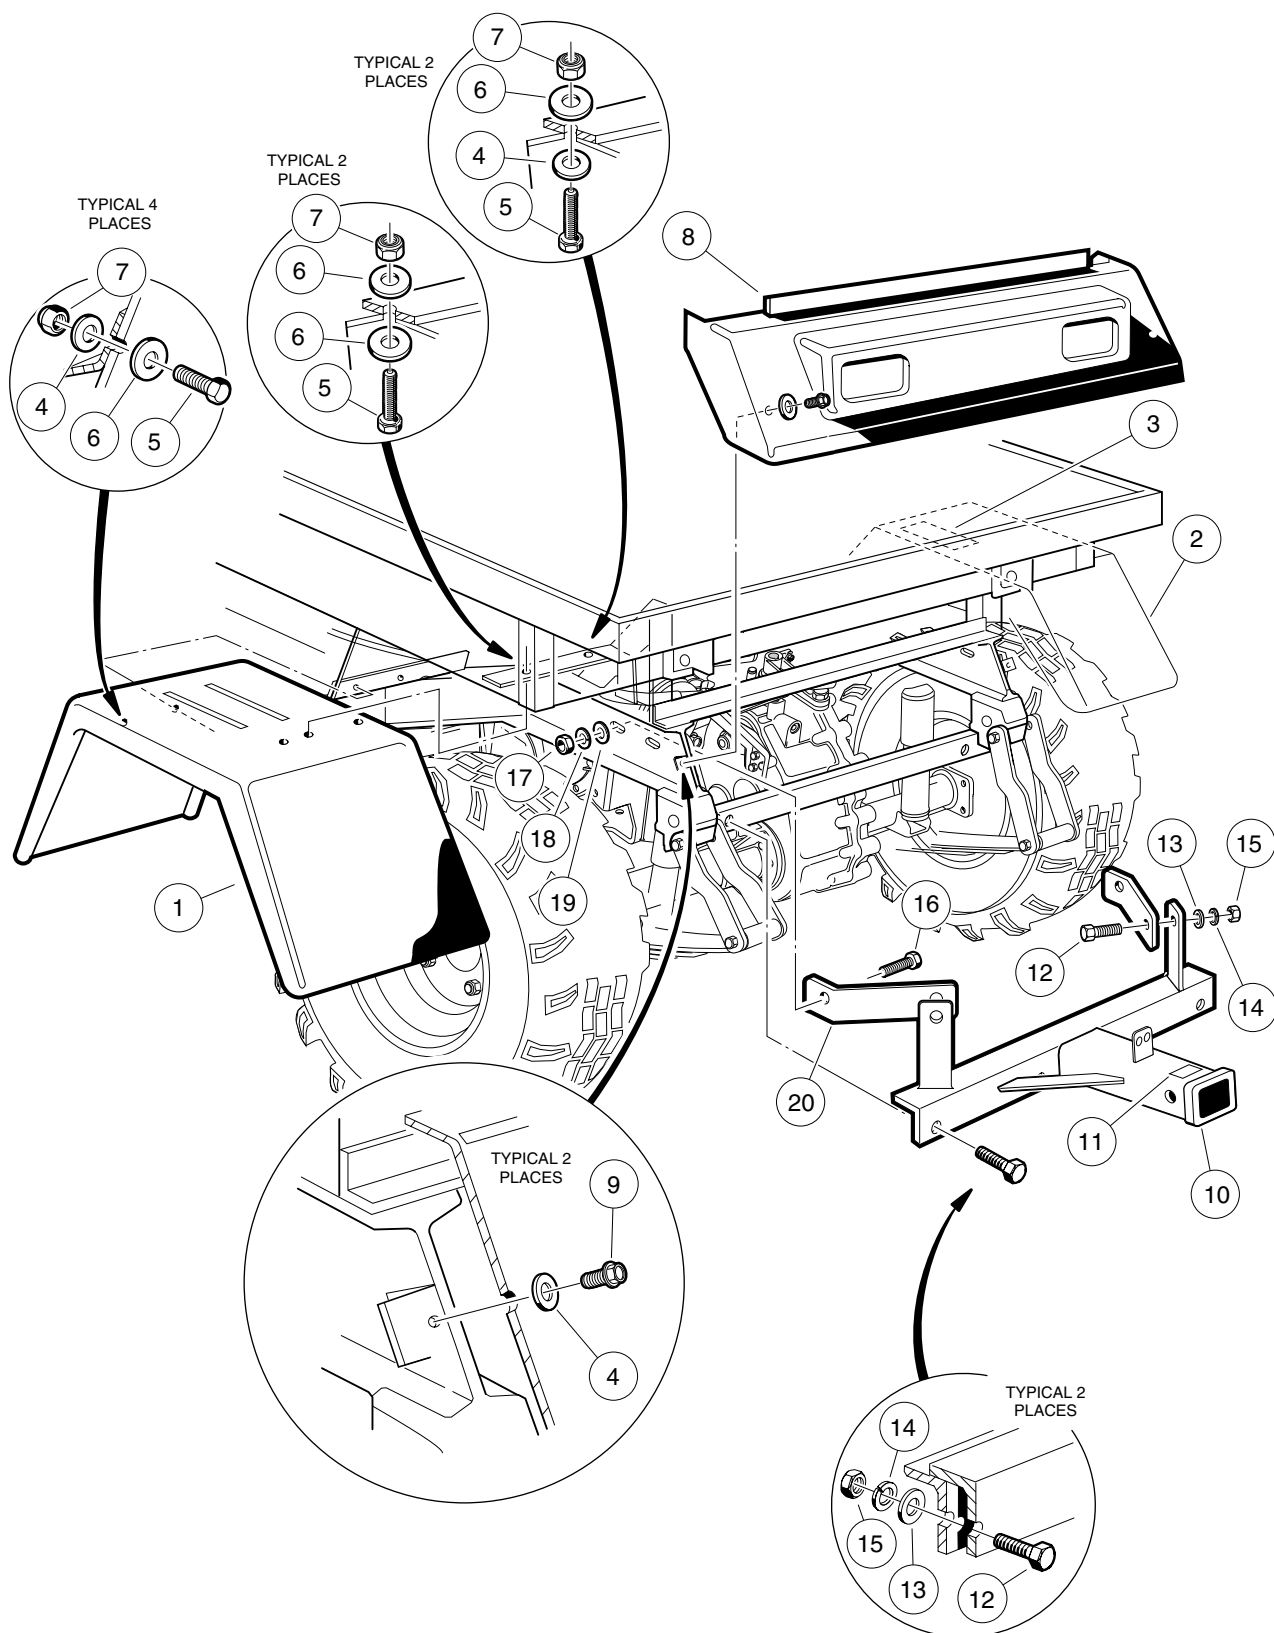

REAR BODY TRIM



1
G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102004601</u>	Fender, Rear (driver-side)	1
2	<u>102004602</u>	Fender, Rear (passenger-side) (Includes Item 3)	1
3	<u>102224001</u>	Decal, Rotating Parts	1
4	<u>332</u>	Washer, Flat, 1/4	8
5	<u>304</u>	Screw, Hex-Head Cap, 1/4-20 x 1	8
6	<u>1014306</u>	Washer, Flat, Type B, 1/4	10
7	<u>8233</u>	Nut, Nylon Lock, 1/4-20	8
8	<u>1015530</u>	Tailskirt	1
9	<u>1012285</u>	Screw, Thread-Rolling, 1/4-20 x 5/8	2
10	<u>58644956</u>	Hitch, Receiver Trailer (Includes Item 11)	1
11	<u>1011553</u>	Decal, Trailer Hitch	1
12	<u>1010934</u>	Screw, Hex-Head Cap, 5/16-18 x 1	4
13	<u>1241</u>	Washer, Flat, 5/16	4
14	<u>7174</u>	Washer, Lock, 5/16	4
15	<u>1242</u>	Nut, Hex, 5/16-18	4
16	<u>705</u>	Screw, Hex-Head Cap, 3/8-16 x 1-1/4.....	2
17	<u>706</u>	Nut, Hex, 3/8-16	2
18	<u>357</u>	Washer, Lock, 3/8	2
19	<u>1011990</u>	Washer, Flat, 3/8	2
20	<u>1013483</u>	Brace, Trailer Hitch	2


WHEELS AND TIRES

2

G

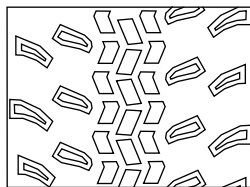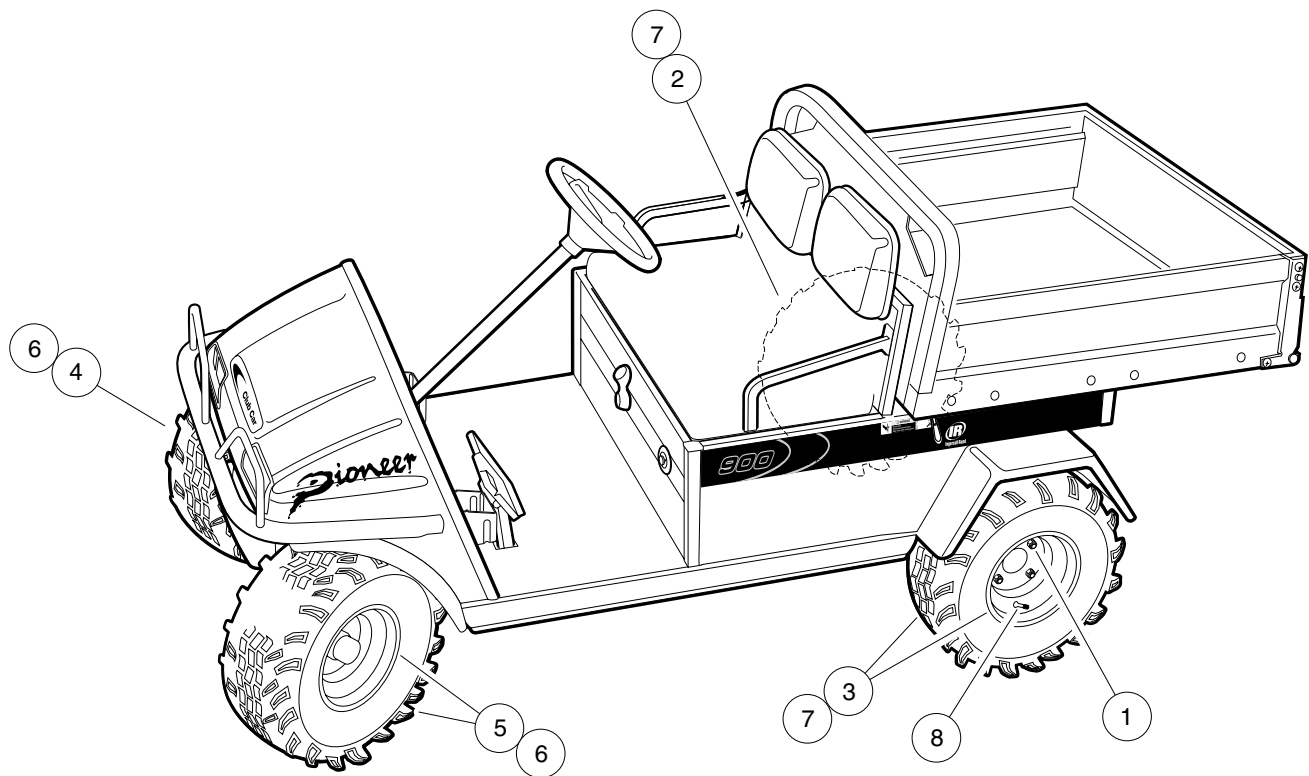

OFF-ROAD
TREAD

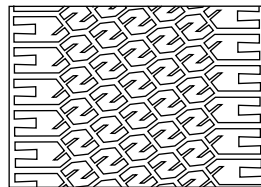

TURF
TREAD

WHEELS AND TIRES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010984</u>	Nut, Lug	16
2	<u>102009402</u>	Assembly, Wheel (Gray) and Tire, Passenger Side Rear, Off-Road Tread, 6-Ply Rated (22 x 11.00 - 10)	1
3	102009502	Assembly, Wheel (Gray) and Tire, Driver Side Rear, Off-Road Tread, 6-Ply Rated (22 x 11.00 - 10)	1
4	<u>102009202</u>	Assembly, Wheel (Gray) and Tire, Passenger Side Front, Off-Road Tread, 6-Ply Rated (22 x 11.00 - 10)	1
5	<u>102009302</u>	Assembly, Wheel (Gray) and Tire, Driver Side Front, Off-Road Tread, 6-Ply Rated (22 x 11.00 - 10)	1
6	<u>102009902</u>	Assembly, Wheel (Gray) and Tire, Front, Turf Tread, 4-Ply Rated (23 x 10.50 - 12)	2
7	<u>102010002</u>	Assembly, Wheel (Gray) and Tire, Rear, Turf Tread, 4-Ply Rated (23 x 10.50 - 12)	2
8	<u>7310</u>	Stem, Valve	4

2

G

DECALS

WARNING

ROLLOVER OR FALLING OFF MAY CAUSE DEATH.




- Before using vehicle, read operating instructions.
- Remain seated and hold on to seat handle while moving.
- Do not start vehicle until all occupants are seated.
- Two (2) persons per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not leave children unattended on vehicle.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Never stand in front of or behind vehicle.

CCI 1019606-01

OPERATING INSTRUCTIONS

- Read Owner's Manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.
- To start engine:
 - Place shift lever in "N" – Neutral position.
 - Depress brake pedal.
 - Turn key switch to "START" position and release.
- To operate vehicle:
 - Make sure wheels are turned in desired direction.
 - Be sure nothing is in your path.
 - While vehicle is stopped, select vehicle direction by placing shift lever or switch in desired position.
 - F – Forward N – Neutral R – Reverse (Buzzer will sound)
 - Park brake will release when accelerator pedal is pushed.
 - Slowly push accelerator pedal to increase speed.
 - Accelerator pedal must be released to shift vehicle to neutral.
- To stop vehicle:
 - Release accelerator pedal and push brake pedal.
 - After stopping, firmly push park brake until it locks.
 - Turn key to "OFF" position, remove key and place shift lever in straight up neutral position when not in use.

  CCI 1016932-01

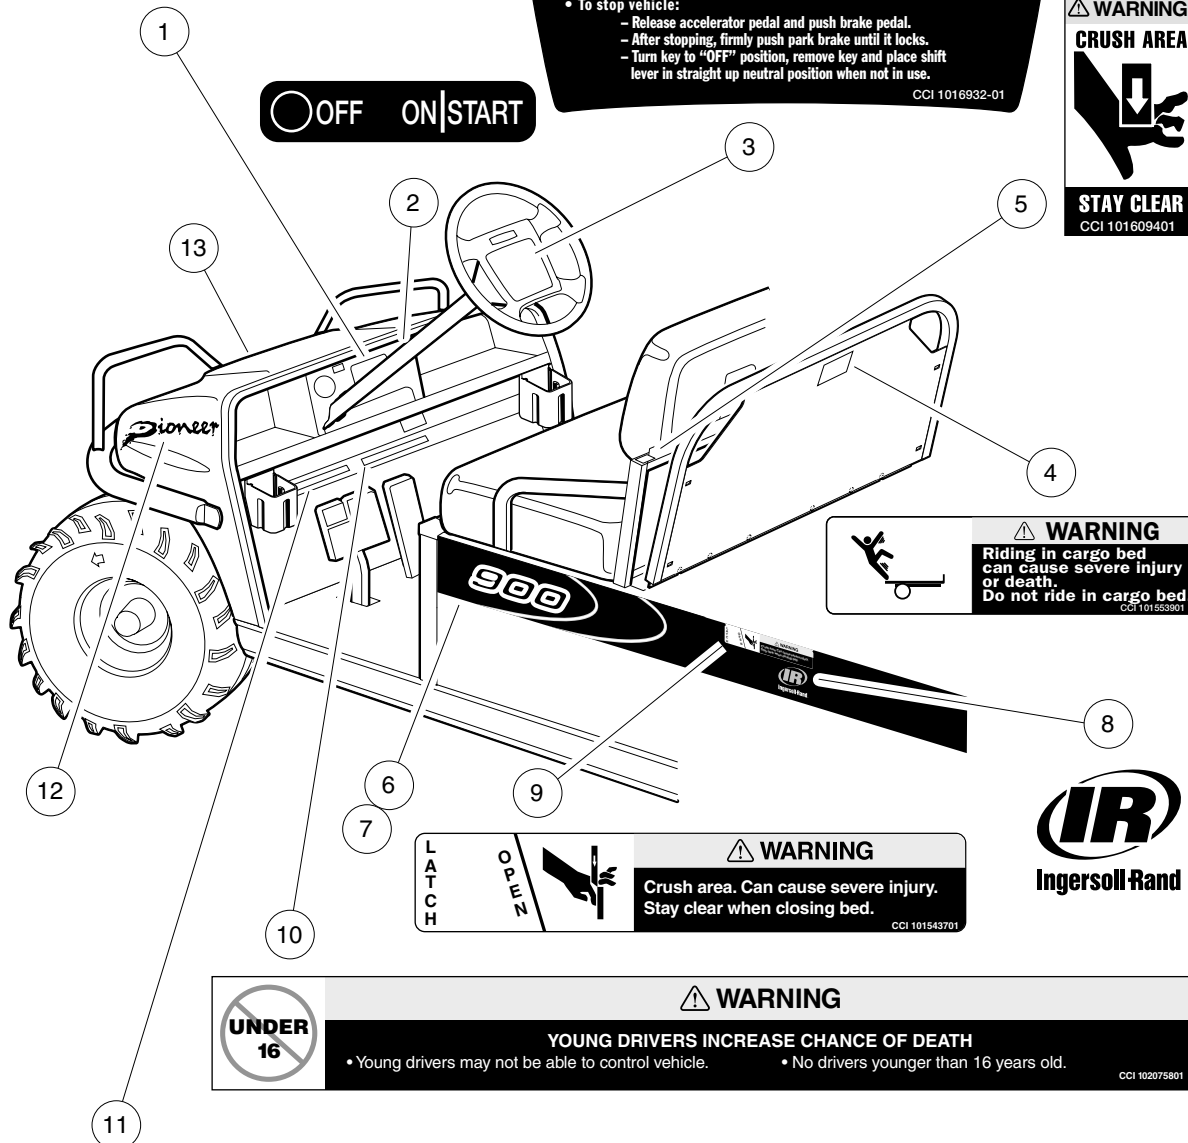

VEHICLE LOADING

Read Owner's Manual and warnings on dash.

- Vehicle rated capacity - 900 lbs. on level surface only. Weight to include passengers, cargo bed load, and gross trailer weight. See Owner's Manual.
- Maximum cargo load - 500 lbs. Weight to include cargo bed load and gross trailer weight.
- Maximum trailer hitch tongue weight - 150 lbs.

- Cargo should be evenly spread over the floor of the cargo bed as far forward as possible and secured.
- For vehicle stability, when fully loaded, drive slowly and avoid stopping on or backing down steep hills.
- Avoid top heavy loads. See Owner's Manual.
- When driving on uneven terrain or down steep hills, reduce speed and load.

CCI 102006701

DECALS

3

G


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101960601	Decal, Driver/Passenger Warning	1
2	<u>101825102</u>	Decal, Key Switch	1
3	<u>101693201</u>	Decal, Operating Instructions	1
4	<u>101553901</u>	Decal, Bed Load Warning	1
5	<u>101609401</u>	Decal, Crush Area	2
6	<u>102228601</u>	Decal, Pioneer 900 (Driver Side) (Includes Items 8 and 9)	1
7	<u>102227901</u>	Decal, Pioneer 900 (Passenger Side) (Includes Item 8)	1
8	N/A	Decal, Ingersoll-Rand	1
9	N/A	Decal, Bed Latch Warning	1
10	<u>102075801</u>	Decal, Under Age Warning	1
11	<u>101960201</u>	Decal, Vehicle Loading	1
12	<u>102228101</u>	Decal, Pioneer	2
13	<u>102228001</u>	Decal, Club Car	1





(ON STARTER/GENERATOR AND ENGINE)




(ON FRAME)

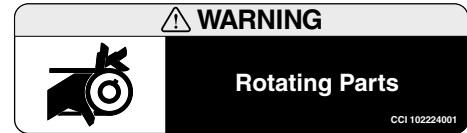


(ON PASSENGER SIDE FENDER)

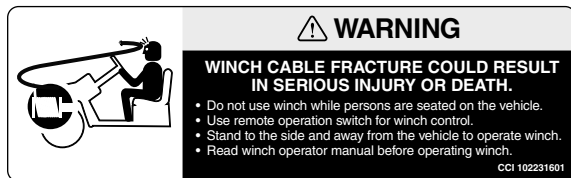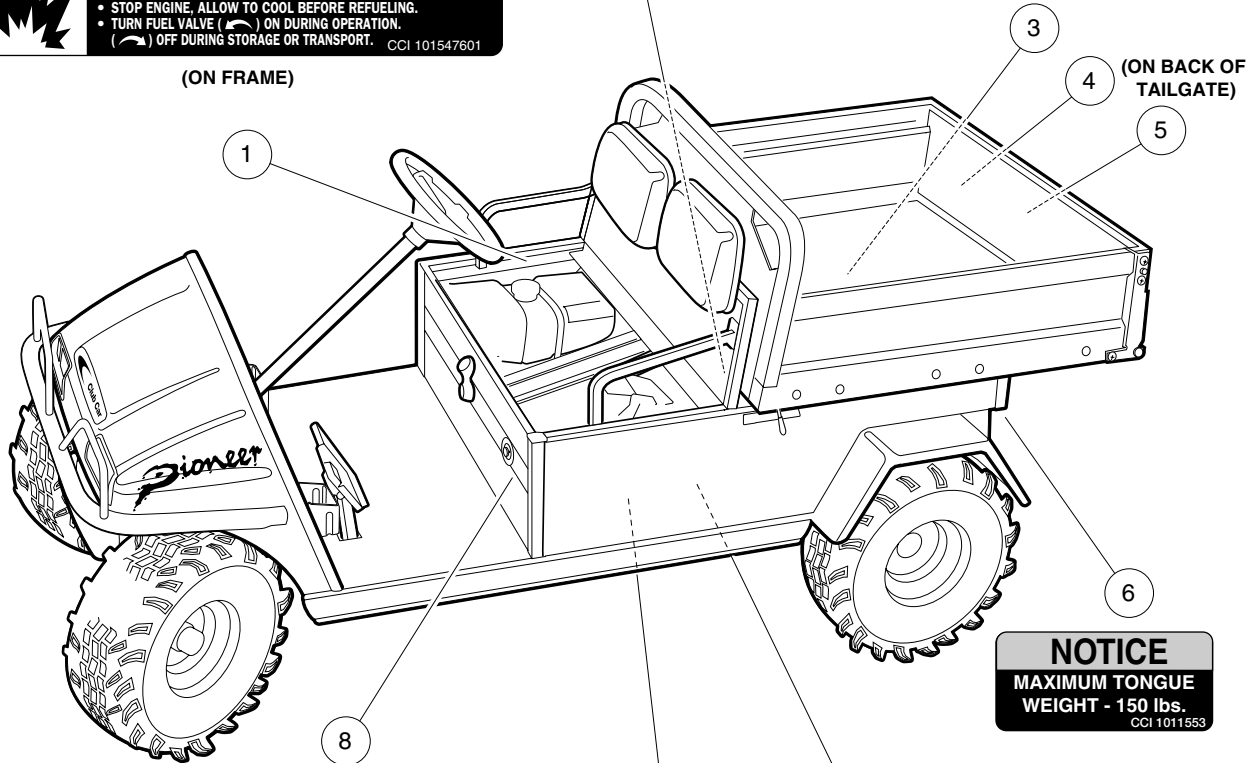

(ON SEAT SUPPORT PANEL)

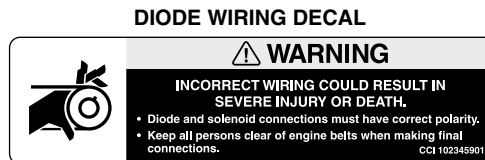

(ON FRAME)

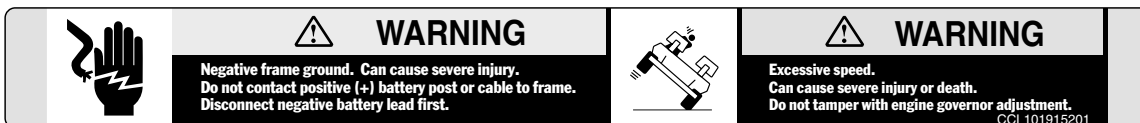

DECALS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101547601</u>	Decal, Gasoline Warning	1
2	<u>101960501</u>	Decal, Rotating Parts and Hot Manifold	2
3	<u>102224001</u>	Decal, Rotating Parts	1
4	<u>102234901</u>	Decal, Club Car Tailgate	1
5	<u>102234801</u>	Decal, Pioneer Tailgate	1
6	<u>1011553</u>	Decal, Trailer Hitch	1
7	<u>101915201</u>	Decal, Frame Ground	1
8	<u>102231601</u>	Decal, Winch Cable Warning	1
9	<u>102345901</u>	Decal, Diode Wiring	1

3
G

BRAKE ASSEMBLIES

4

G

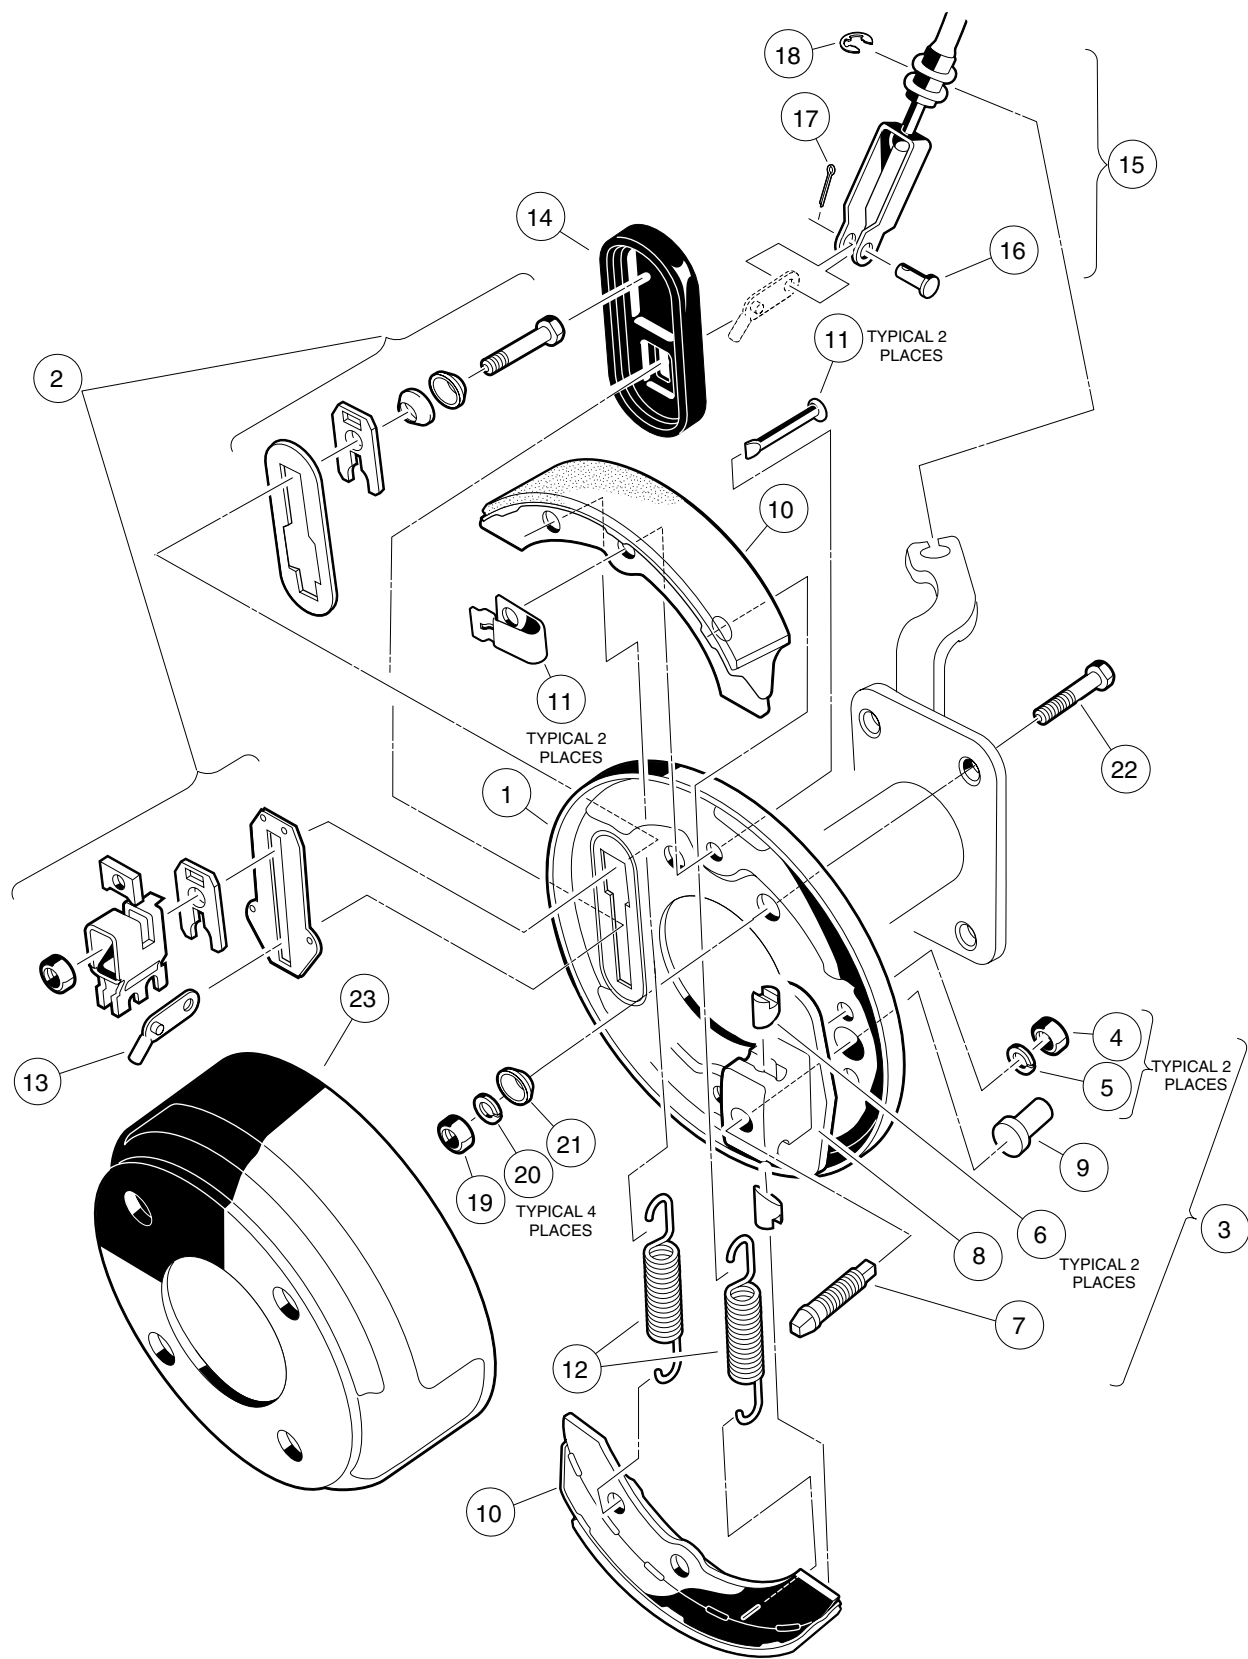


FRONT BRAKE ASSEMBLY

4

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>1016573</u>	Cluster, Brake, Passenger Side, Without Brake Drum (Includes Items 1 - 14)	1
	<u>1016557</u>	Cluster, Brake, Driver Side, Without Brake Drum (Includes Items 1 - 14)	1
1	<u>1011154</u>	Plate, Backing, Passenger Side	1
1	<u>1011494</u>	Plate, Backing, Driver Side	1
2	<u>1011465</u>	Kit, Brake Actuator	1
3	<u>1011467</u>	Kit, Anchor Body (Includes Items 4 - 9)	1
4	<u>1011114</u>	Nut, M6 x 1	2
5	<u>451</u>	Washer, Lock, 1/4	2
6	N/A	Piston, Anchor	2
7	N/A	Bolt, Adjustment	1
8	N/A	Body, Anchor	1
9	<u>1011303</u>	Cap, Adjustment Bolt	1
10	<u>101146302</u>	Package, Brake Shoe (Four Pieces)	1
11	<u>1011466</u>	Kit, Shoe Retainer (Four Pieces)	1
12	<u>1011464</u>	Package, Brake Spring (Four Pieces)	1
13	N/A	Arm, Brake Lever	1
14	<u>1010850</u>	Cover, Dust	1
15	<u>101874601</u>	Kit, Brake Cable, Front (Includes Two Cables) (Includes Items 16, 17 and 18)	1
16	<u>1010829</u>	Pin, Clevis, 5/16	2
17	<u>1035</u>	Pin, Cotter, 3/32 x 1	2
18	<u>1011779</u>	E-Clip, 1/2	2
19	<u>101872701</u>	Nut, Hex, 5/16-24	8
20	<u>7174</u>	Washer, Lock, 5/16 x 24	8
21	<u>101869001</u>	Washer, Cone, 5/16	8
22	<u>1017232</u>	Screw, Hex Head Cap, 5/16-24 x 1	8
23	<u>1011137</u>	Drum, Brake	2
		Note: see page 5-11 for front brake cable clamp and bracket.	

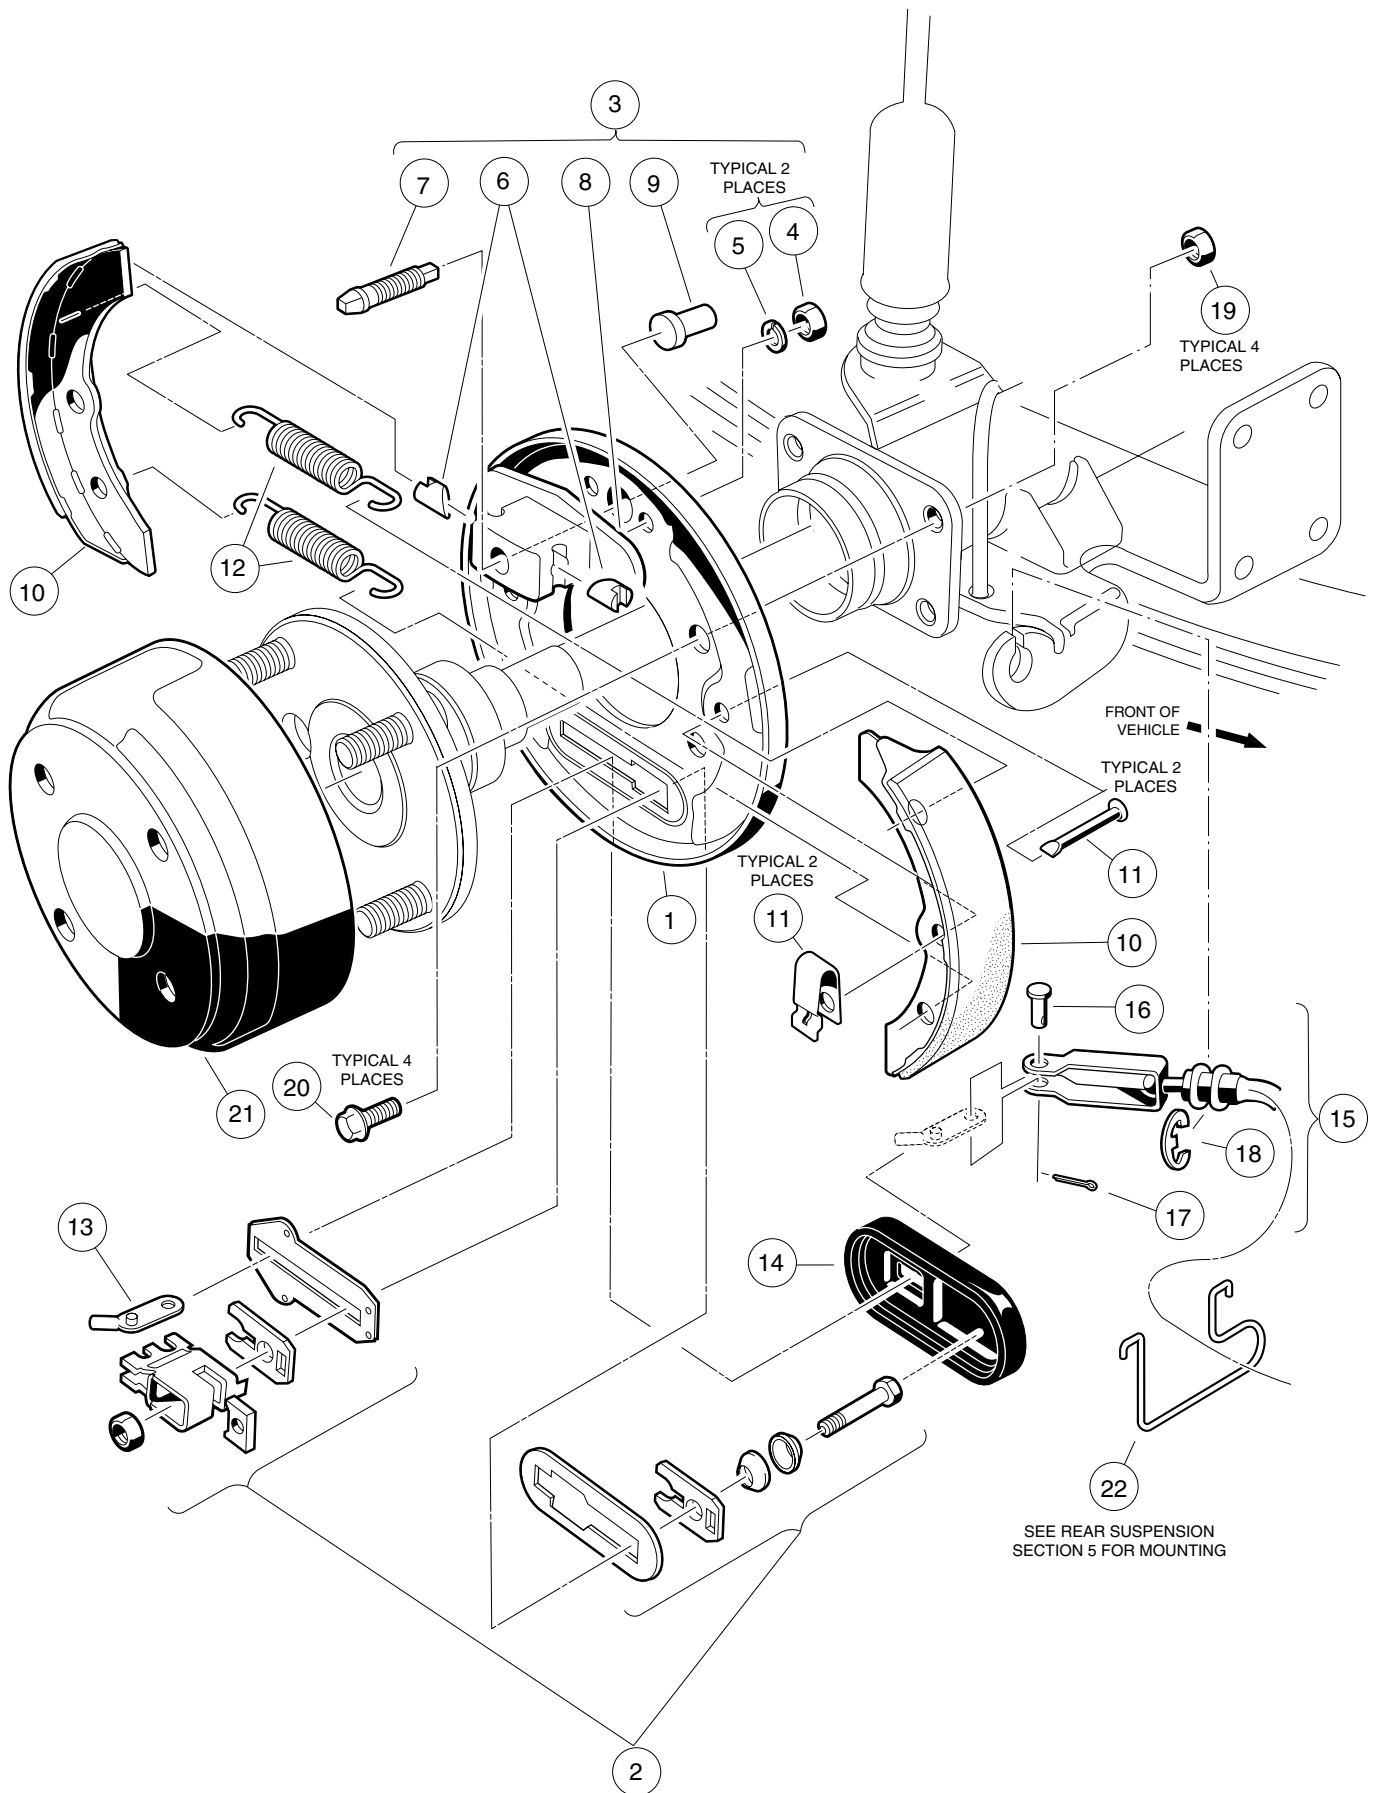


REAR BRAKE ASSEMBLY

4

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>1016573</u>	Cluster, Brake, Passenger Side, Without Brake Drum (Includes Items 1 - 14)	1
	<u>1016557</u>	Cluster, Brake, Driver Side, Without Brake Drum (Includes Items 1 - 14)	1
1	<u>1011494</u>	Plate, Backing, Driver Side	1
1	<u>1011154</u>	Plate, Backing, Passenger Side	1
2	<u>1011465</u>	Kit, Brake Actuator	1
3	<u>1011467</u>	Kit, Anchor Body (Includes Items 4 - 9)	1
4	<u>1011114</u>	Nut, M6 x 1	2
5	<u>451</u>	Washer, Lock, 1/4	2
6	N/A	Piston, Anchor	2
7	N/A	Bolt, Adjustment	1
8	N/A	Body, Anchor	1
9	<u>1011303</u>	Cap, Adjustment Bolt	1
10	<u>101146302</u>	Package, Brake Shoe (Four Pieces)	1
11	<u>1011466</u>	Kit, Shoe Retainer (Four Pieces)	1
12	<u>1011464</u>	Package, Brake Spring (Four Pieces)	1
13	N/A	Arm, Brake Lever	1
14	<u>1010850</u>	Cover, Dust	1
15	<u>102166901</u>	Kit, Brake Cable (Includes Two Cables) (Includes One Each of Items 16, 17 and Two Each of Item 18)	1
16	<u>1010829</u>	Pin, Clevis, 5/16	2
17	<u>1035</u>	Pin, Cotter, 3/32 x 1	2
18	<u>1011779</u>	E-Clip, 1/2	2
19	<u>1013924</u>	Nut, Cone Lock, Grade 8, 5/16-24	8
20	<u>1014153</u>	Bolt, Brake Cluster Mounting, Grade 8, 5/16-24 x 7/8	8
21	<u>101791101</u>	Drum, Brake	2
22	<u>1013207</u>	Hanger, Brake Cable	2

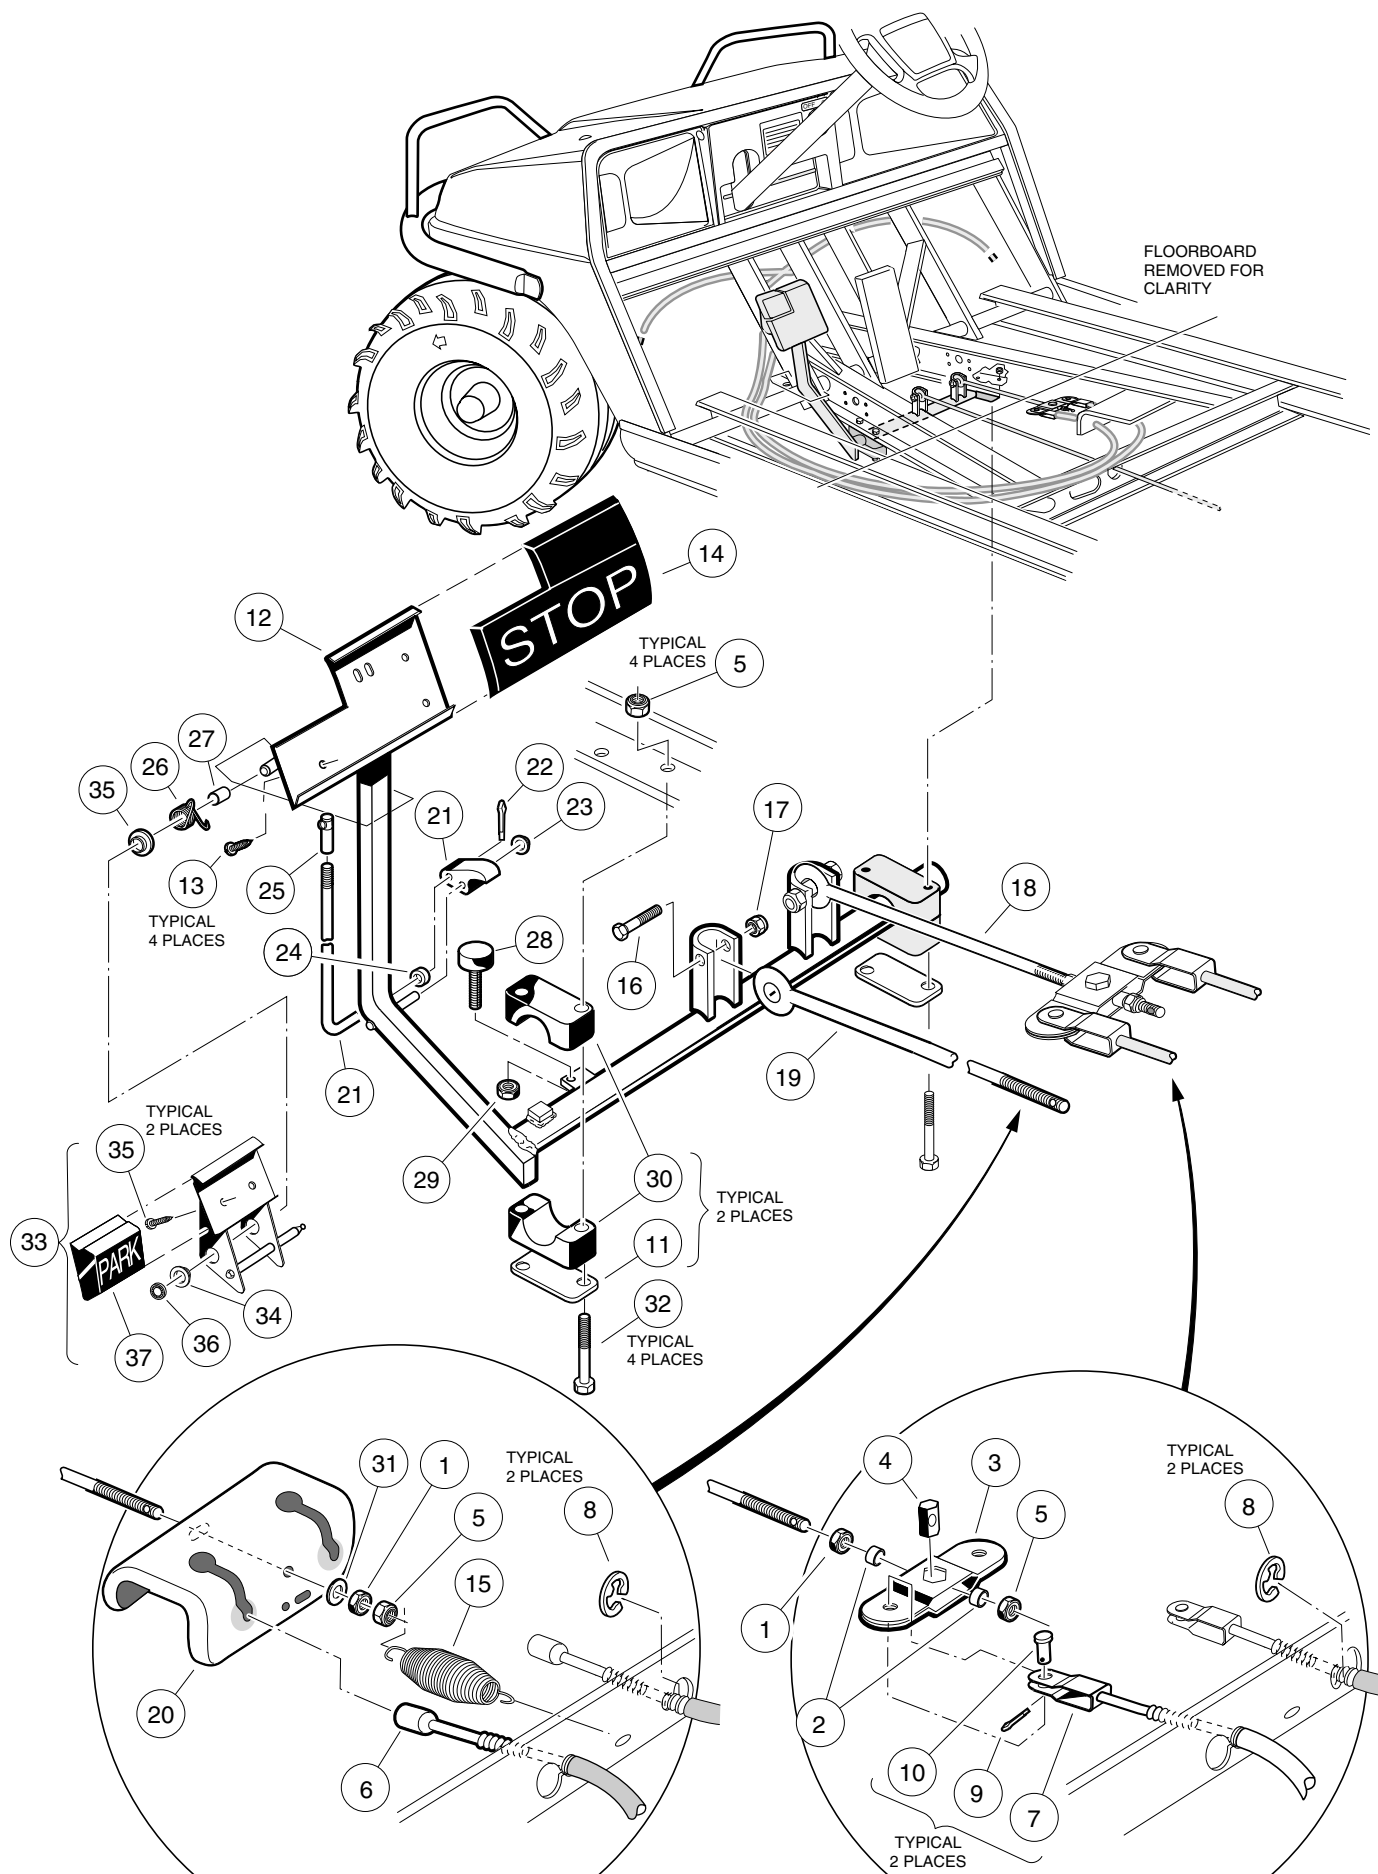


BRAKE PEDAL ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1242</u>	Nut, Hex, 5/16-18	2
2	<u>101865301</u>	Spacer, Equalizer	2
3	<u>1017211</u>	Kit, Equalizer and Pivot Limiter (Includes Item 4)	1
4	N/A	Pin, Equalizer Pivot	1
5	<u>7473</u>	Nut, Nylon Lock, 5/16-18	5
6	<u>102166901</u>	Kit, Brake Cable, Rear (Includes Two Cables, Four Each of Item 8 and Two Each of Items 9 and 10)	1
7	<u>101874601</u>	Kit, Brake Cable, Front (Includes Two Cables and Items 8 - 10)	1
8	<u>1011779</u>	E-Clip, 1/2	4
9	<u>1035</u>	Pin, Cotter, 3/32 X 1	4
10	<u>1010829</u>	Pin, Clevis, 5/16	4
11	<u>101976301</u>	Plate, Retainer	2
12	<u>101878201</u>	Kit, Brake Pedal (Includes Items 13 and 14)	1
13	<u>7716</u>	Screw, Slotted Hex Washer Head, #10-16 x 1/2	3
14	<u>1013869</u>	Pad, Brake Pedal	1
15	<u>1013531</u>	Spring, Brake Return	1
16	<u>101953001</u>	Bolt, Hex Head Shoulder, 3/8 x 1	2
17	<u>7473</u>	Nut, Nylon Lock, 5/16-18	2
18	<u>101953106</u>	Rod, Equalizer, Front	1
19	<u>101953102</u>	Rod, Equalizer, Rear	1
20	<u>101990801</u>	Equalizer	1
	<u>101187702</u>	Kit, Park Brake Latch (Includes Items 21 - 25 Below and Item 25 on Page 5-5)	1
21	N/A	Rod and Pawl	1
22	<u>1017029</u>	Pin, Cotter, 7/64 x 1/2	1
23	<u>1010877</u>	Nut, Push, 5/16	1
24	<u>1010805</u>	Sleeve, Park Brake Rod	1
25	<u>1010932</u>	Joint, Ball, 1/4-28	1
26	<u>1010933</u>	Spring, Park Brake Torsion	1
27	<u>1010927</u>	Spacer, Park Brake	1
28	<u>1010878</u>	Bumper, Rubber	1
29	<u>1028</u>	Nut, Hex, 1/4-20	1
30	<u>1011402</u>	Package, Brake Mounting Block (Contains Upper and Lower for Left and Right Sides)	1
31	<u>1241</u>	Washer, Flat, 5/16	1
32	<u>1010921</u>	Screw, Hex Head Cap, 5/16-18 x 2-1/2	4
33	<u>1011418</u>	Kit, Park Brake Pedal (Includes Items 34 - 37)	1
34	<u>1032</u>	Bushing, Nylon	2
35	<u>8626</u>	Screw, Slotted Hex Washer Head, #10-16 x 1/2	2
36	<u>1013876</u>	Nut, Push, 3/8	1
37	<u>1013870</u>	Pad, Park Brake	1

5

G

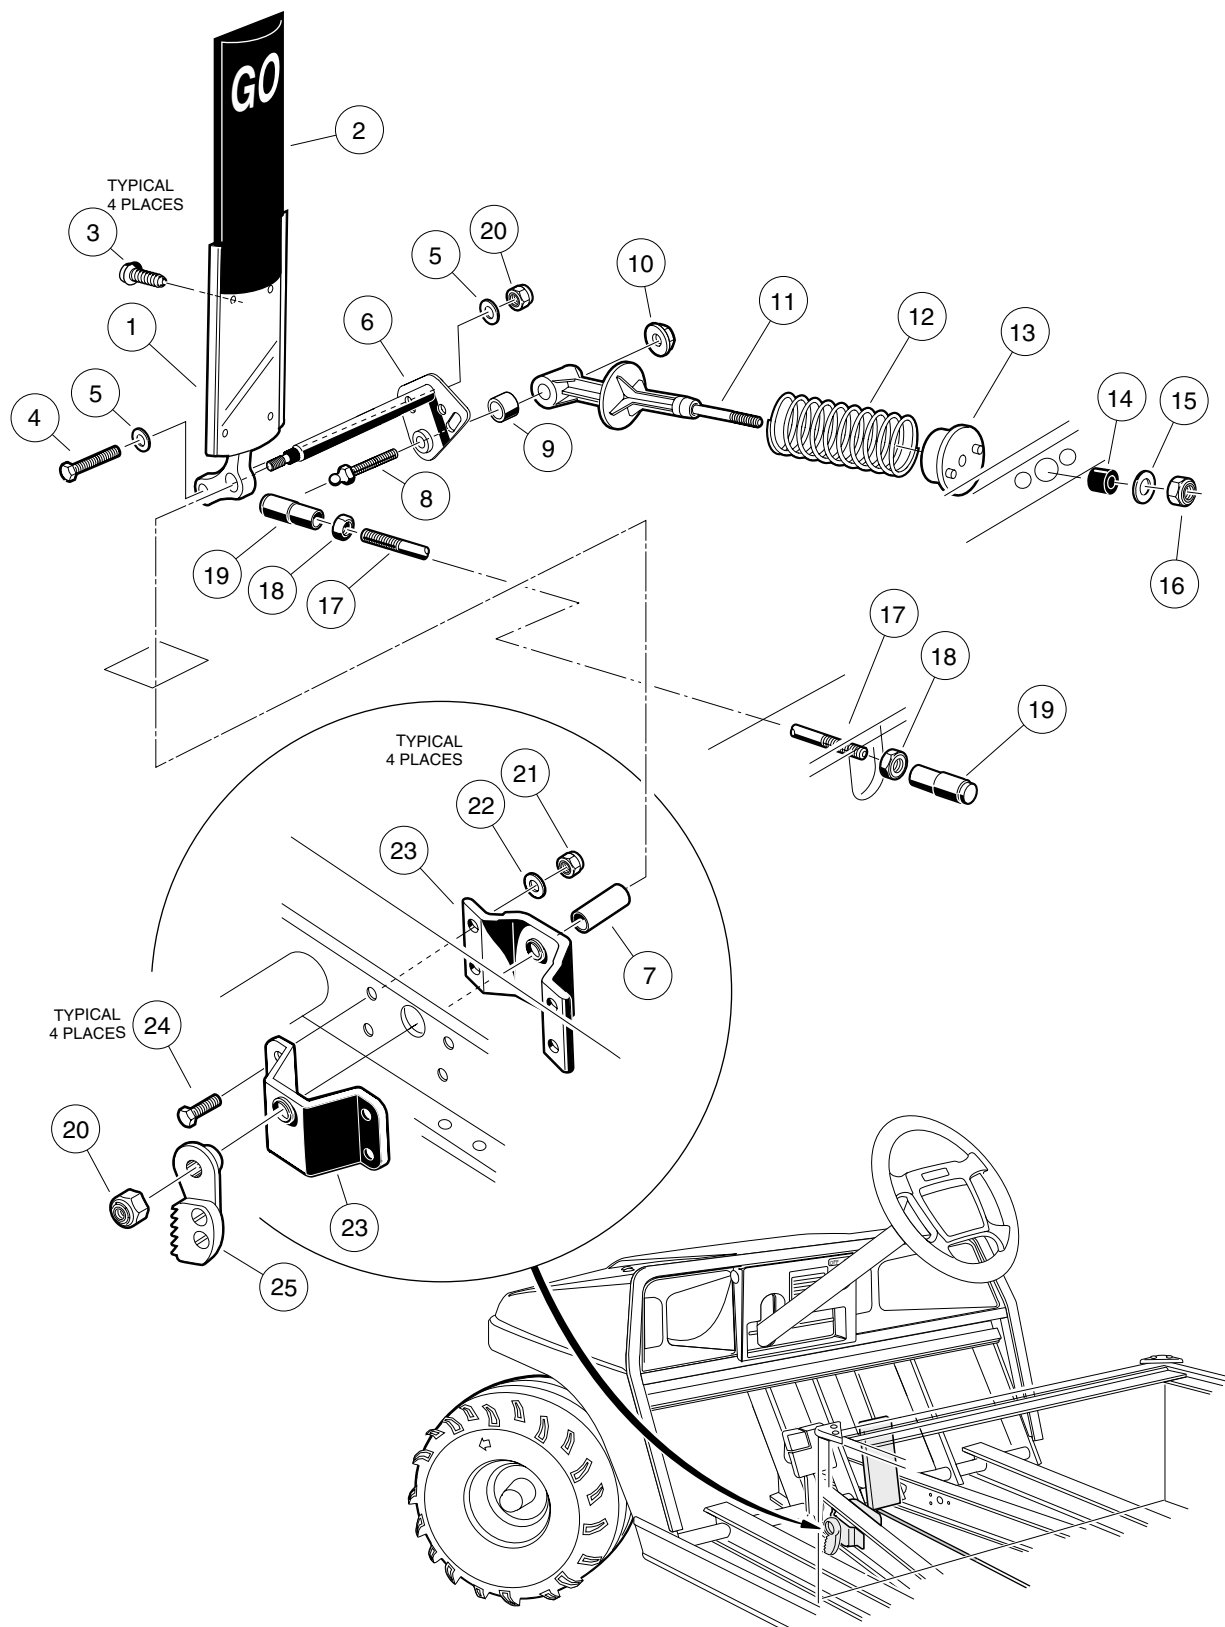

ACCELERATOR PEDAL ASSEMBLY


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1017696</u>	Sub-Assembly, Accelerator Pedal (Includes Items 2 and 3)	1
2	<u>1013871</u>	Pad, Accelerator Pedal	1
3	<u>7716</u>	Screw, Slotted Hex Washer Head, #10-16 x 1/2	4
4	<u>1624</u>	Screw, Hex Cap, 3/8-16 x 1-1/2	1
5	<u>334</u>	Washer, Flat, 3/8	2
6	<u>102026001</u>	Kit, Accelerator Pivot Rod (Includes Item 7)	1
7	<u>1011700</u>	Spacer	1
8	<u>101818801</u>	Stud, Ball	1
9	<u>1017424</u>	Bearing, Pivot Support	1
10	<u>101966901</u>	Nut, Flange, 1/4-28	1
11	<u>101817401</u>	Retainer, Spring	1
12	<u>101796201</u>	Spring, Return	1
13	<u>1017378</u>	Cup, Spring	1
14	<u>1017380</u>	Bumper, Return Spring	1
15	<u>1241</u>	Washer, Flat, 5/16	1
16	<u>7473</u>	Nut, Nylon Lock, 5/16-18	1
17	<u>101822001</u>	Assembly, Accelerator Rod (Includes Items 18 and 19)	1
18	<u>1011084</u>	Nut, UNF Hex Jam, 1/4-28	2
19	<u>1011734</u>	Joint, Spring-Loaded Ball	2
20	<u>8754</u>	Nut, Nylon Lock, 3/8-16	2
21	<u>8233</u>	Nut, Nylon Lock, 1/4-20	4
22	<u>1014007</u>	Washer, Flat, Type B, 1/4	4
23	<u>1011694</u>	Support, Accelerator Pivot Rod	2
24	<u>101861901</u>	Screw, Hex Cap, 1/4-20 x 1-1/8	4
	<u>101187702</u>	Kit, Park Brake Latch (Includes Item 25 Below, and Items 21-25 on Page 5-3)	1
25	N/A	Ratchet, Park Brake	1

5
G

STEERING, FRONT AND REAR SUSPENSION

6

G

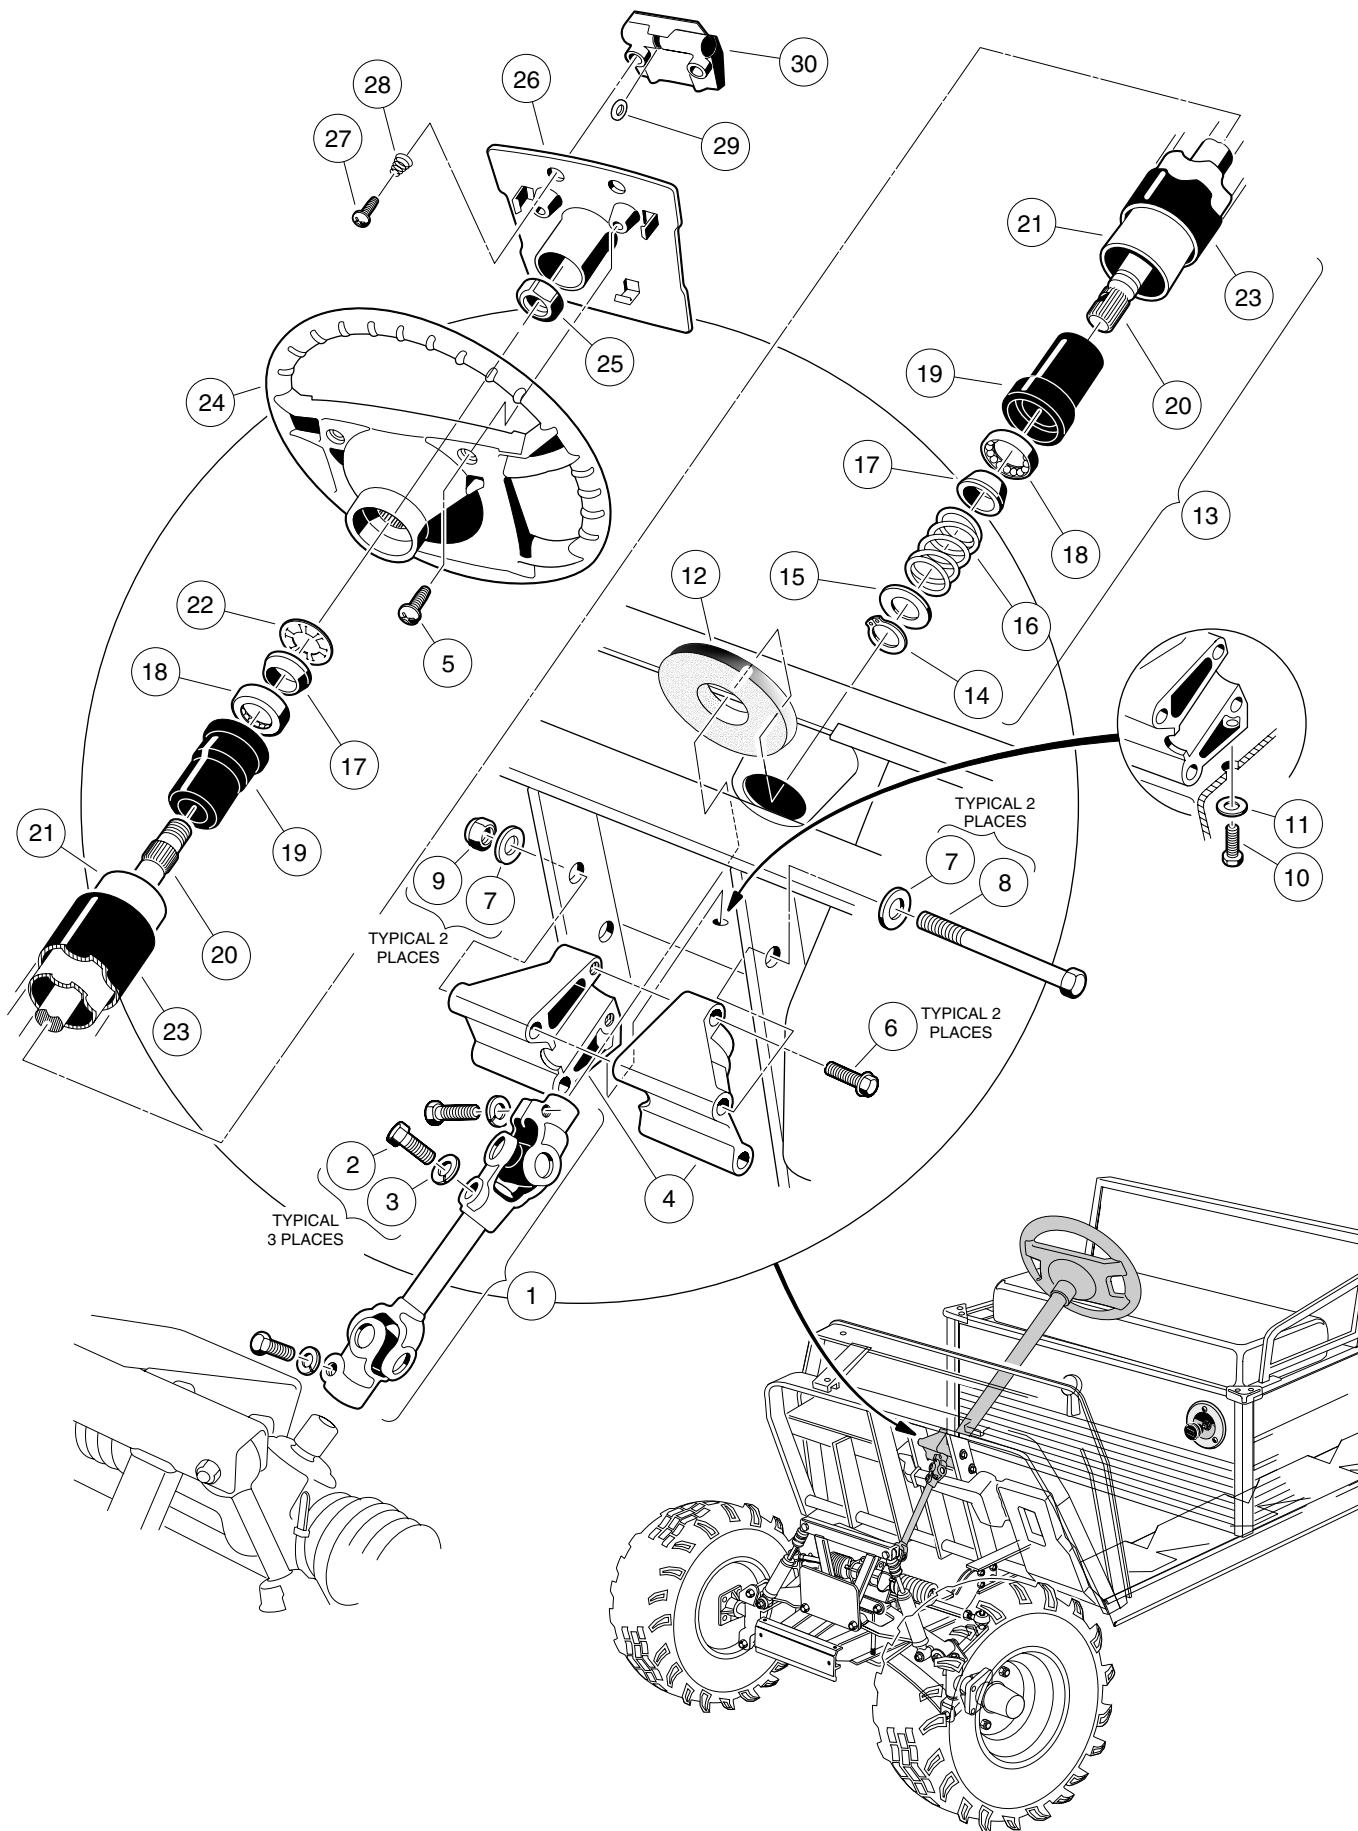


STEERING COLUMN

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102004101</u>	Joint, Compound Steering (Includes Items 2 and 3)	1
2	<u>1017226</u>	Screw, Hex Head Cap, M8 x 1.25 x 30MM	3
3	<u>7174</u>	Washer, Lock, 5/16	3
4	<u>101984801</u>	Kit, Steering Column Mounting Bracket	1
5	<u>1016663</u>	Screw, Phillips, Type A, #12-11 x 5/8	2
6	<u>1016269</u>	Screw, Hex Washer Head Thread-Forming, 5/16-18 x 2	2
7	<u>334</u>	Washer, Flat, 3/8	4
8	<u>1016183</u>	Screw, Hex Head Cap, 3/8-16 x 7	2
9	<u>8754</u>	Nut, Nylon Lock, 3/8-16	2
10	<u>1014288</u>	Screw, Hex Washer Head Thread-Forming, 5/16-18 x 3/4	1
11	<u>1011697</u>	Washer, Flat, 5/16	1
12	<u>102278001</u>	Boot, Steering Column	1
13	<u>1016181</u>	Assembly, Steering Column (Includes Items 14 - 22)	1
14	<u>1012605</u>	Ring, Retaining	1
15	<u>1012604</u>	Washer, Steel, 5/8	1
16	<u>1014217</u>	Spring, Compression	1
17	<u>1014125</u>	Wedge	2
18	<u>1014213</u>	Assembly, Bearing	2
19	<u>1014126</u>	Seat, Bearing	2
20	<u>1015545</u>	Shaft, Steering Column	1
21	<u>1016622</u>	Column, Aluminum Steering	1
22	<u>1014214</u>	Ring, Retaining	1
23	<u>1016263</u>	Cover, Steering Column	1
24	<u>1016156</u>	Wheel, Steering	1
25	<u>1017273</u>	Nut, Nylon Lock, 5/8-18	1
26	<u>1016219</u>	Assembly, Scorecard Plate (Includes Items 27 - 30)	1
27	<u>1012565</u>	Screw, Round Head, #12-14 x 1	2
28	<u>1012566</u>	Spring, Tapered Compression	2
29	<u>1016214</u>	Grip, Pencil	1
30	<u>1016154</u>	Clip, Score Card	1

6

G

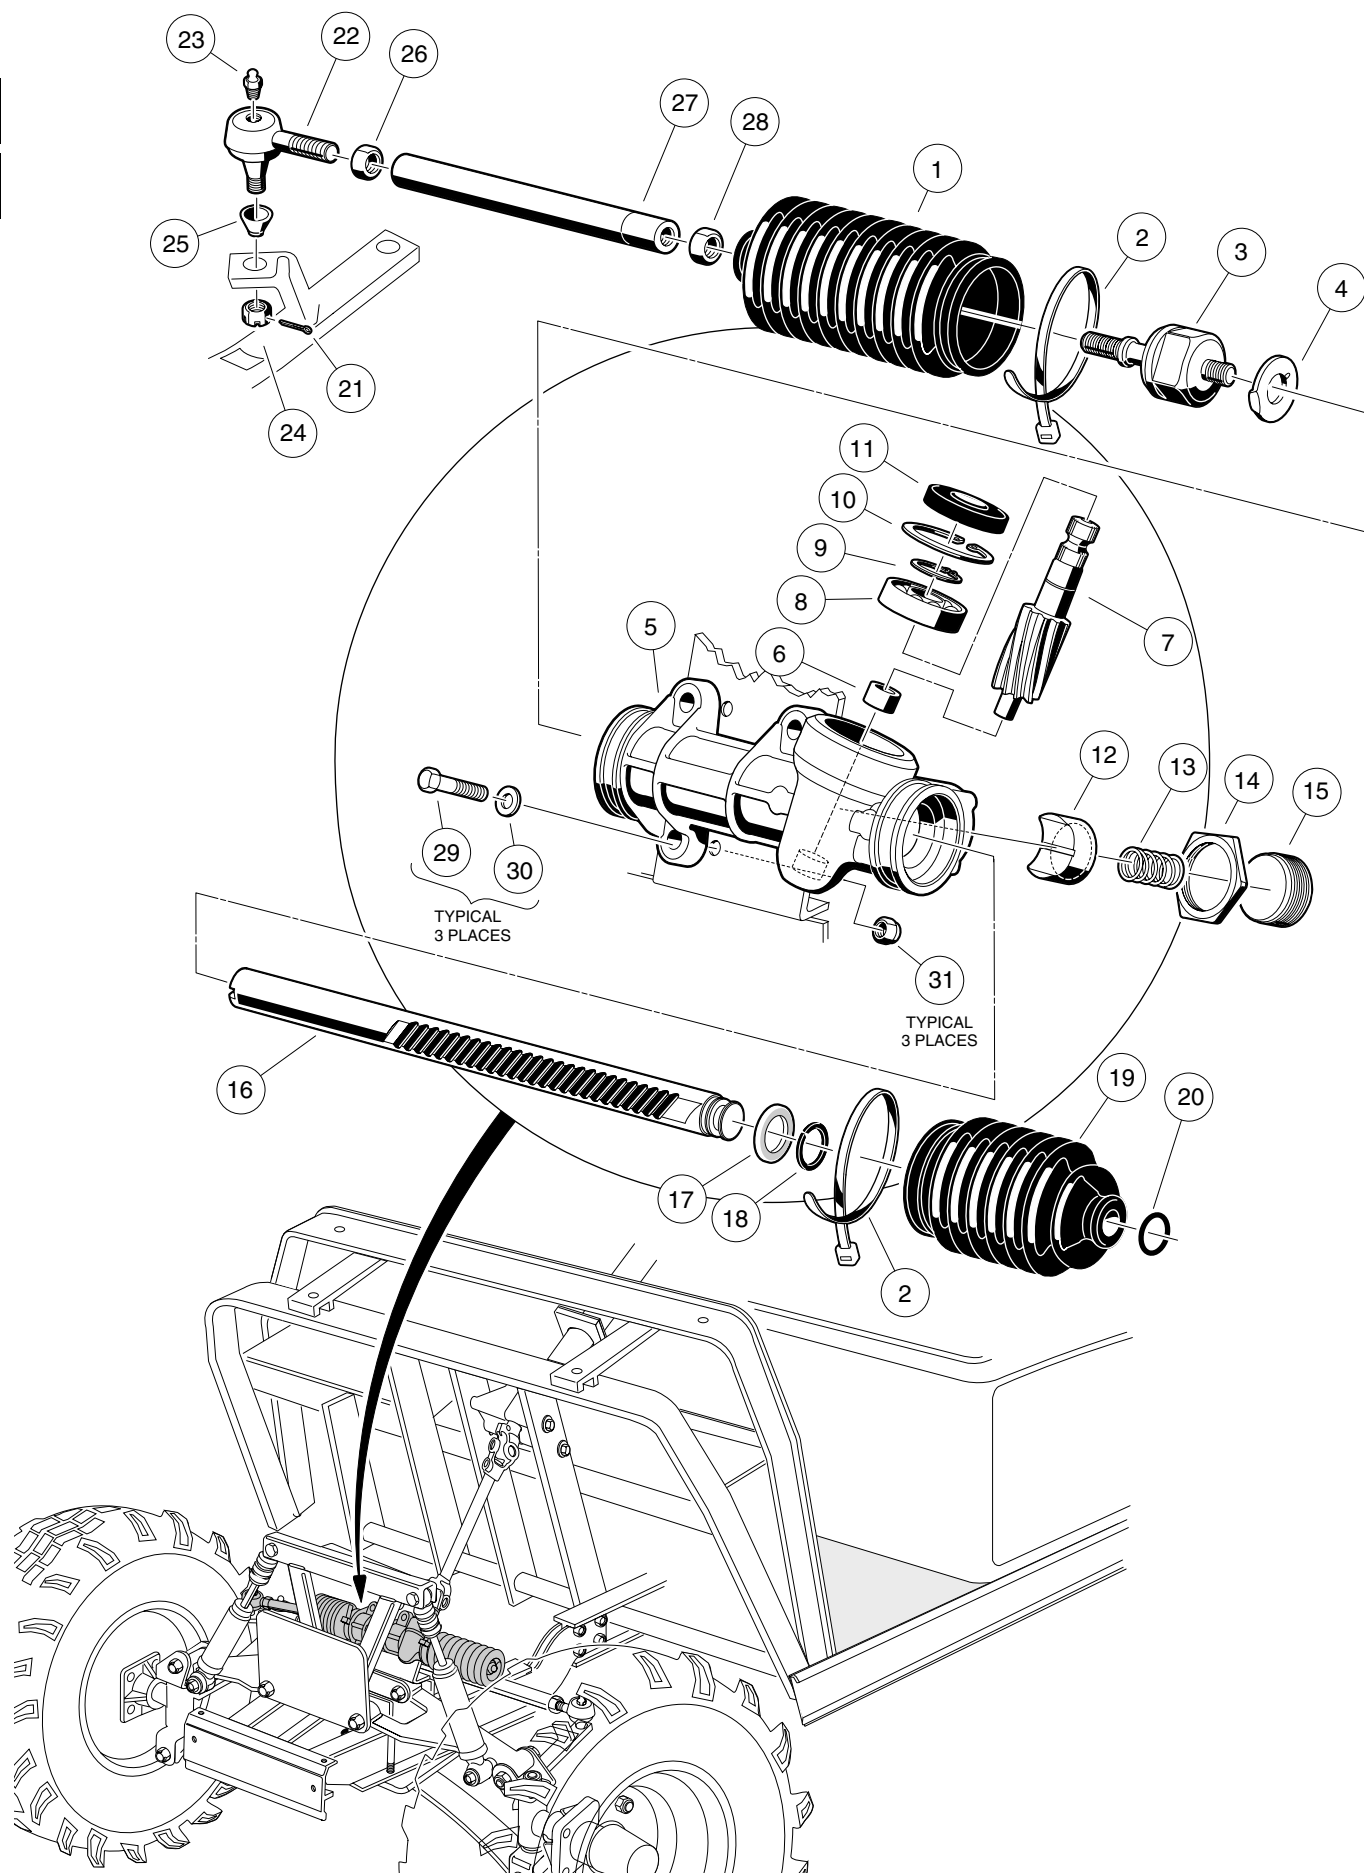


STEERING GEAR ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>101878302</u>	Assembly, Steering Gear Box (Includes Items 1 - 20)	1
1	<u>1013035</u>	Seal, Dust, Passenger Side	1
2	<u>8990</u>	Tie, Wire	2
3	<u>101880201</u>	Assembly, Inner Ball Joint	1
4	<u>101880301</u>	Washer, Tab	1
5	N/A	Box, Steering Gear	1
6	N/A	Bearing, Lower Pinion	1
7	N/A	Pinion, Steering	1
8	<u>101879401</u>	Bearing, Upper Pinion	1
9	<u>101879901</u>	Ring, C-Type Stop	1
10	<u>1013051</u>	Ring, Snap	1
11	<u>1013052</u>	Seal, Dust, Steering Pinion	1
12	<u>101879701</u>	Guide, Steering Rack	1
13	<u>101879801</u>	Spring, Yoke	1
14	<u>1013044</u>	Nut, Lock, Rack Screw	1
15	N/A	Screw, Rack Guide	1
16	N/A	Rack, Steering	1
17	<u>101879501</u>	Washer, Stop	1
18	<u>101879601</u>	Ring, C-Type Stop	1
19	<u>101880001</u>	Seal, Dust, Driver Side	1
20	<u>101880101</u>	Ring, Retaining	1
21	<u>1035</u>	Pin, Cotter, 3/32 x 1	1
22	<u>7540</u>	Ball Joint, Left-Hand Thread (Includes Items 23, 24 and 25)	1
23	<u>1015597</u>	Fitting, Thread-Forming Grease, 1/4-28	1
24	<u>7602</u>	Nut, Hex Slotted, 3/8-24	1
25	<u>1011930</u>	Boot, Dust	1
26	<u>7555</u>	Nut, Hex, Left-Hand Thread, 1/2-20	1
27	<u>1012467</u>	Link, Rack and Pinion Drag	1
28	<u>1013042</u>	Nut, Hex, M12 x 1.75	1
29	<u>1624</u>	Screw, Hex Head Cap, 3/8-16 x 1-1/2	3
30	<u>334</u>	Washer, Flat, 3/8	3
31	<u>8754</u>	Nut, Nylon Lock, 3/8-16	3

6

G

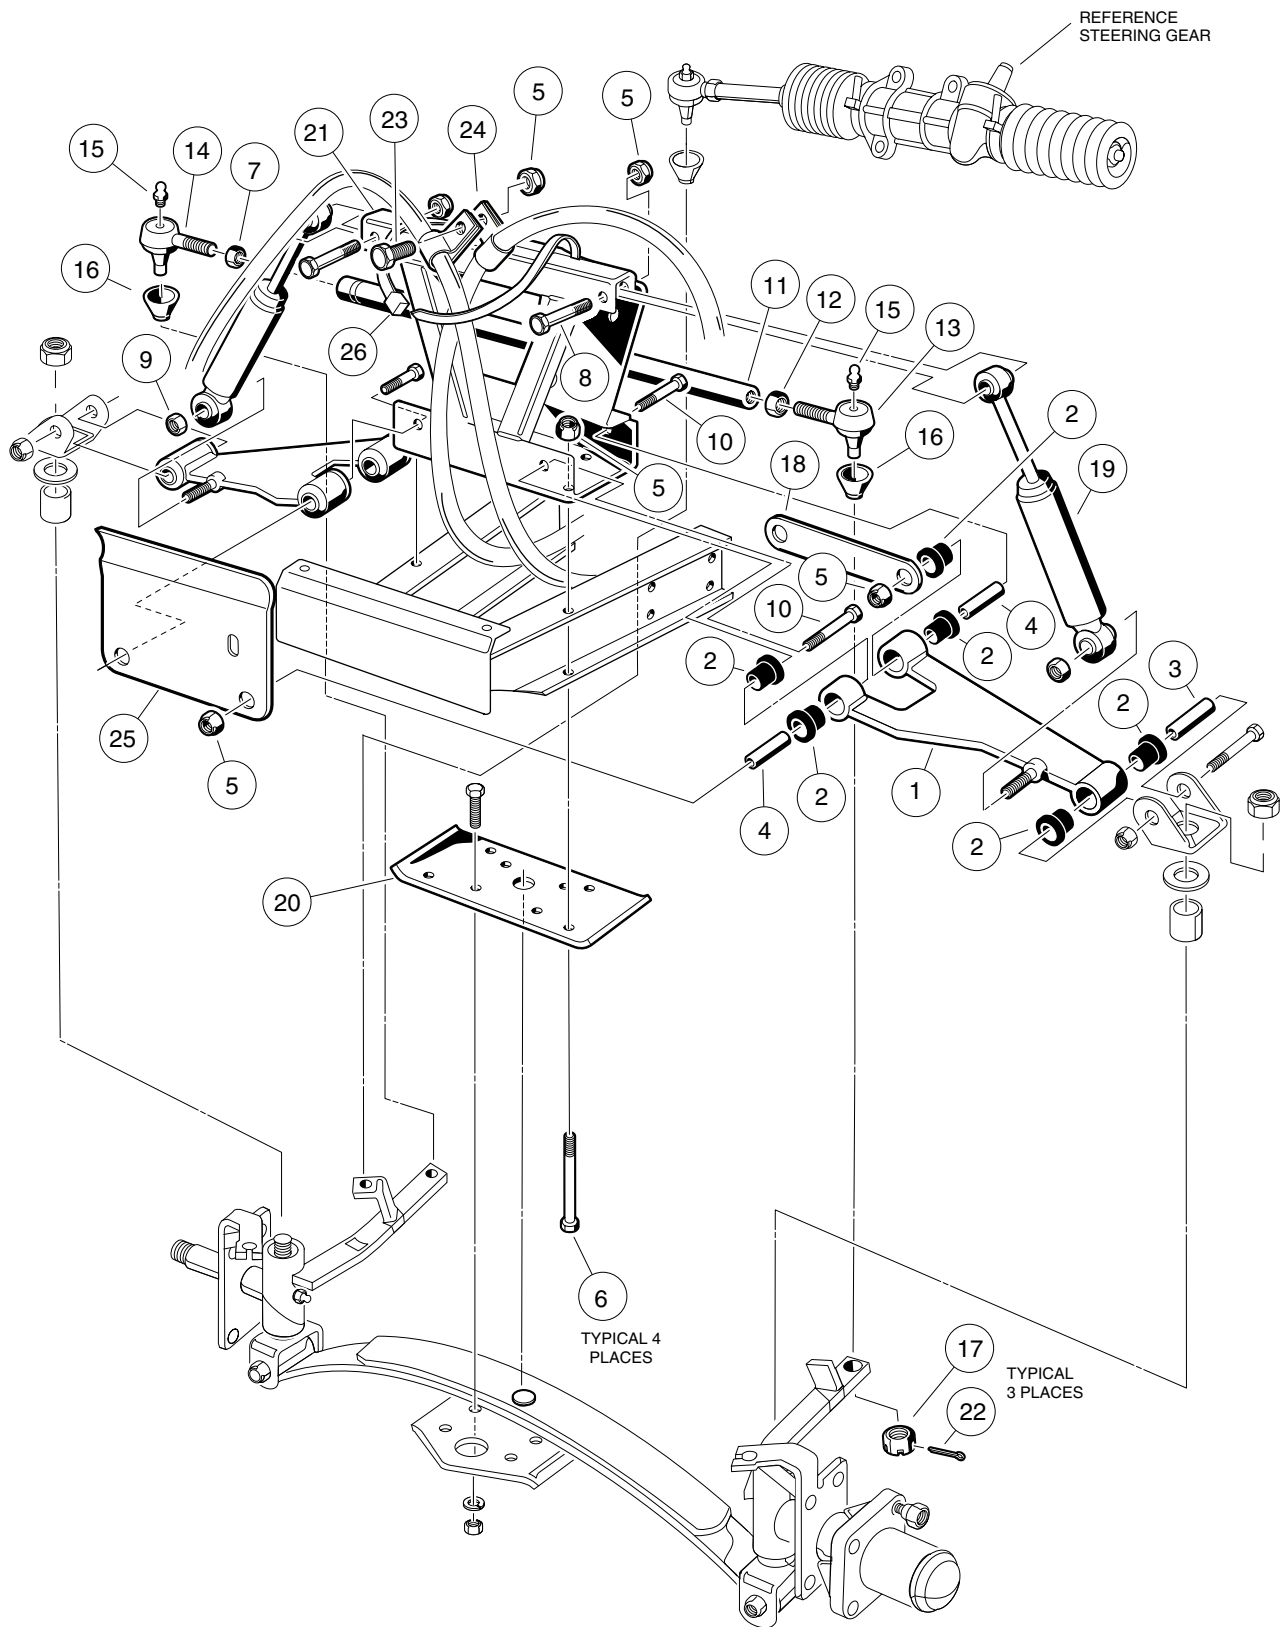


FRONT SUSPENSION, UPPER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016353</u>	Assembly, Delta A-Plate (Includes Items 2, 3 and 4)	2
2	<u>1016346</u>	Bushing, Urethane	6
3	<u>1016350</u>	Sleeve, Delta Outer	1
4	<u>1016349</u>	Sleeve, Delta Inner	2
5	<u>8754</u>	Nut, Nylon Lock, 3/8-16	11
6	<u>101870501</u>	Screw, Hex Head Cap, 3/8-16 x 4-3/4	4
7	<u>1308</u>	Nut, Hex, 1/2-20	1
8	<u>8861</u>	Screw, Hex Head Cap, 3/8-16 x 1-3/4	2
9	<u>1010138</u>	Nut, Dimpled Lock, 3/8-16	2
10	<u>2402</u>	Screw, Hex Head Cap, 3/8-16 x 2-1/4	4
11	<u>1010219</u>	Rod, Tie	1
12	<u>7555</u>	Nut, Hex, Left-Hand Thread, 1/2-20	1
13	<u>7540</u>	Ball Joint, Left-Hand Thread (Includes Items 15, 16 and 17)	1
14	<u>7539</u>	Ball Joint (Includes Items 15, 16 and 17)	1
15	<u>1015597</u>	Fitting, Thread-Forming Grease, 1/4-28	1
16	<u>1011930</u>	Seal, Dust	1
17	<u>7602</u>	Nut, Slotted Hex, 3/8-24	1
18	<u>1017266</u>	Strap, A-Plate	1
19	<u>1014235</u>	Shock Absorber, Front	2
20	<u>1010124</u>	Plate, Spring Mounting	1
21	<u>1016385</u>	Assembly, Delta Shock and Gear Support	1
22	<u>1035</u>	Pin, Cotter, 3/32 X 1	3
23	<u>320</u>	Screw, Hex Head Cap, 3/8-16 x 1	1
24	<u>101935301</u>	Clamp, Brake Cable (Part of Brake Cable Assembly)	2
25	<u>101955001</u>	Bracket, Brake Cable Guide	1
26	<u>102025401</u>	Tie, Wire	1

6

G

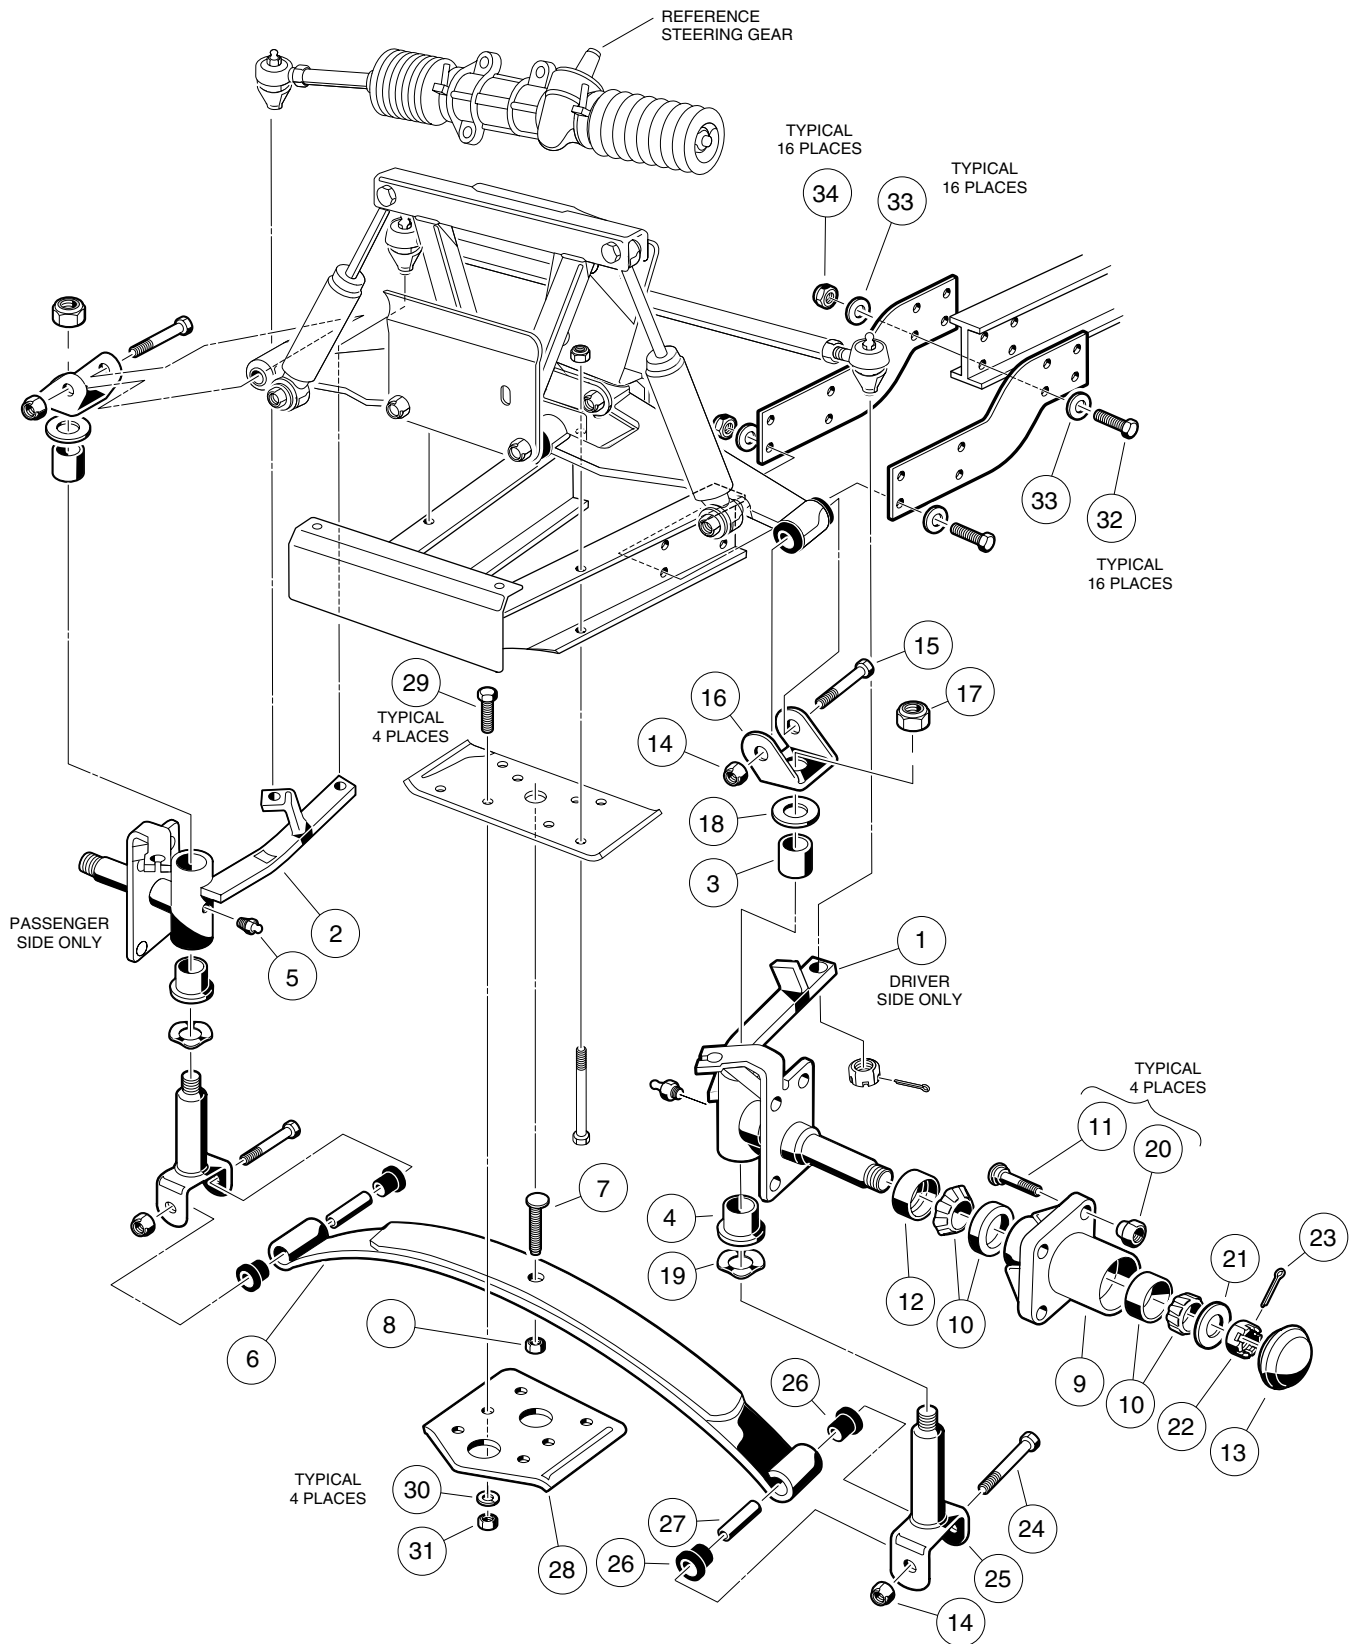


FRONT SUSPENSION, LOWER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101876901	Assembly, Spindle, Driver Side (Includes Items 3, 4 and 5)	1
2	<u>101877001</u>	Assembly, Spindle, Passenger Side (Includes Items 3, 4 and 5)	1
3	<u>8067</u>	Bushing, Bronze Spindle	1
4	<u>7048</u>	Bushing, Bronze	1
5	<u>1015597</u>	Fitting, Grease, 1/4-28	1
6	<u>102004001</u>	Spring, Tapered Leaf	1
7	<u>8745</u>	Assembly, Eccentric	1
8	<u>706</u>	Nut, Hex, 3/8-16	1
9	<u>1011892</u>	Assembly, Hub (Includes Items 10 - 13)	2
10	<u>1011393</u>	Package, Hub Bearing	2
11	<u>1011304</u>	Stud, Lug, 1/2-20	4
12	<u>1013135</u>	Seal, Double Lip	1
13	<u>1011887</u>	Cover, Dust	1
14	<u>8754</u>	Nut, Nylon Lock, 3/8-16	4
15	<u>1016387</u>	Screw, Hex Head Cap, 3/8-16 x 2-3/4	2
16	<u>1016384</u>	Clevis, Upper Delta	2
17	<u>101903101</u>	Nut, Nylon Lock, 1/2-20	2
18	<u>1010150</u>	Bearing, Thrust	2
19	<u>1016389</u>	Washer, Kingpin Wave	2
20	<u>1010984</u>	Nut, Lug	8
21	<u>1010005</u>	Washer, Flat, 3/4	2
22	<u>7840</u>	Nut, Hex Slotted, 3/4-16	2
23	<u>7910</u>	Pin, Cotter, 5/32 X 1	2
24	<u>8755</u>	Screw, Hex Head Cap, 3/8 - 16 x 3-3/8	2
25	<u>1016386</u>	Kingpin	2
26	<u>1015583</u>	Bushing, Urethane	4
27	<u>1012303</u>	Bushing, Steel	2
28	<u>1014276</u>	Plate, Front Spring Retainer	1
29	<u>1010177</u>	Screw, Hex Head Cap, 3/8-16 x 2	4
30	<u>357</u>	Washer, Lock, 3/8	4
31	<u>706</u>	Nut, Hex, 3/8-16	4
32	1218	Screw, Hex Head Cap, 5/16-18 x 1-1/4	16
33	1241	Washer, Flat, 5/16	32
34	<u>7473</u>	Nut, Hex, 5/16-18	16

6

G

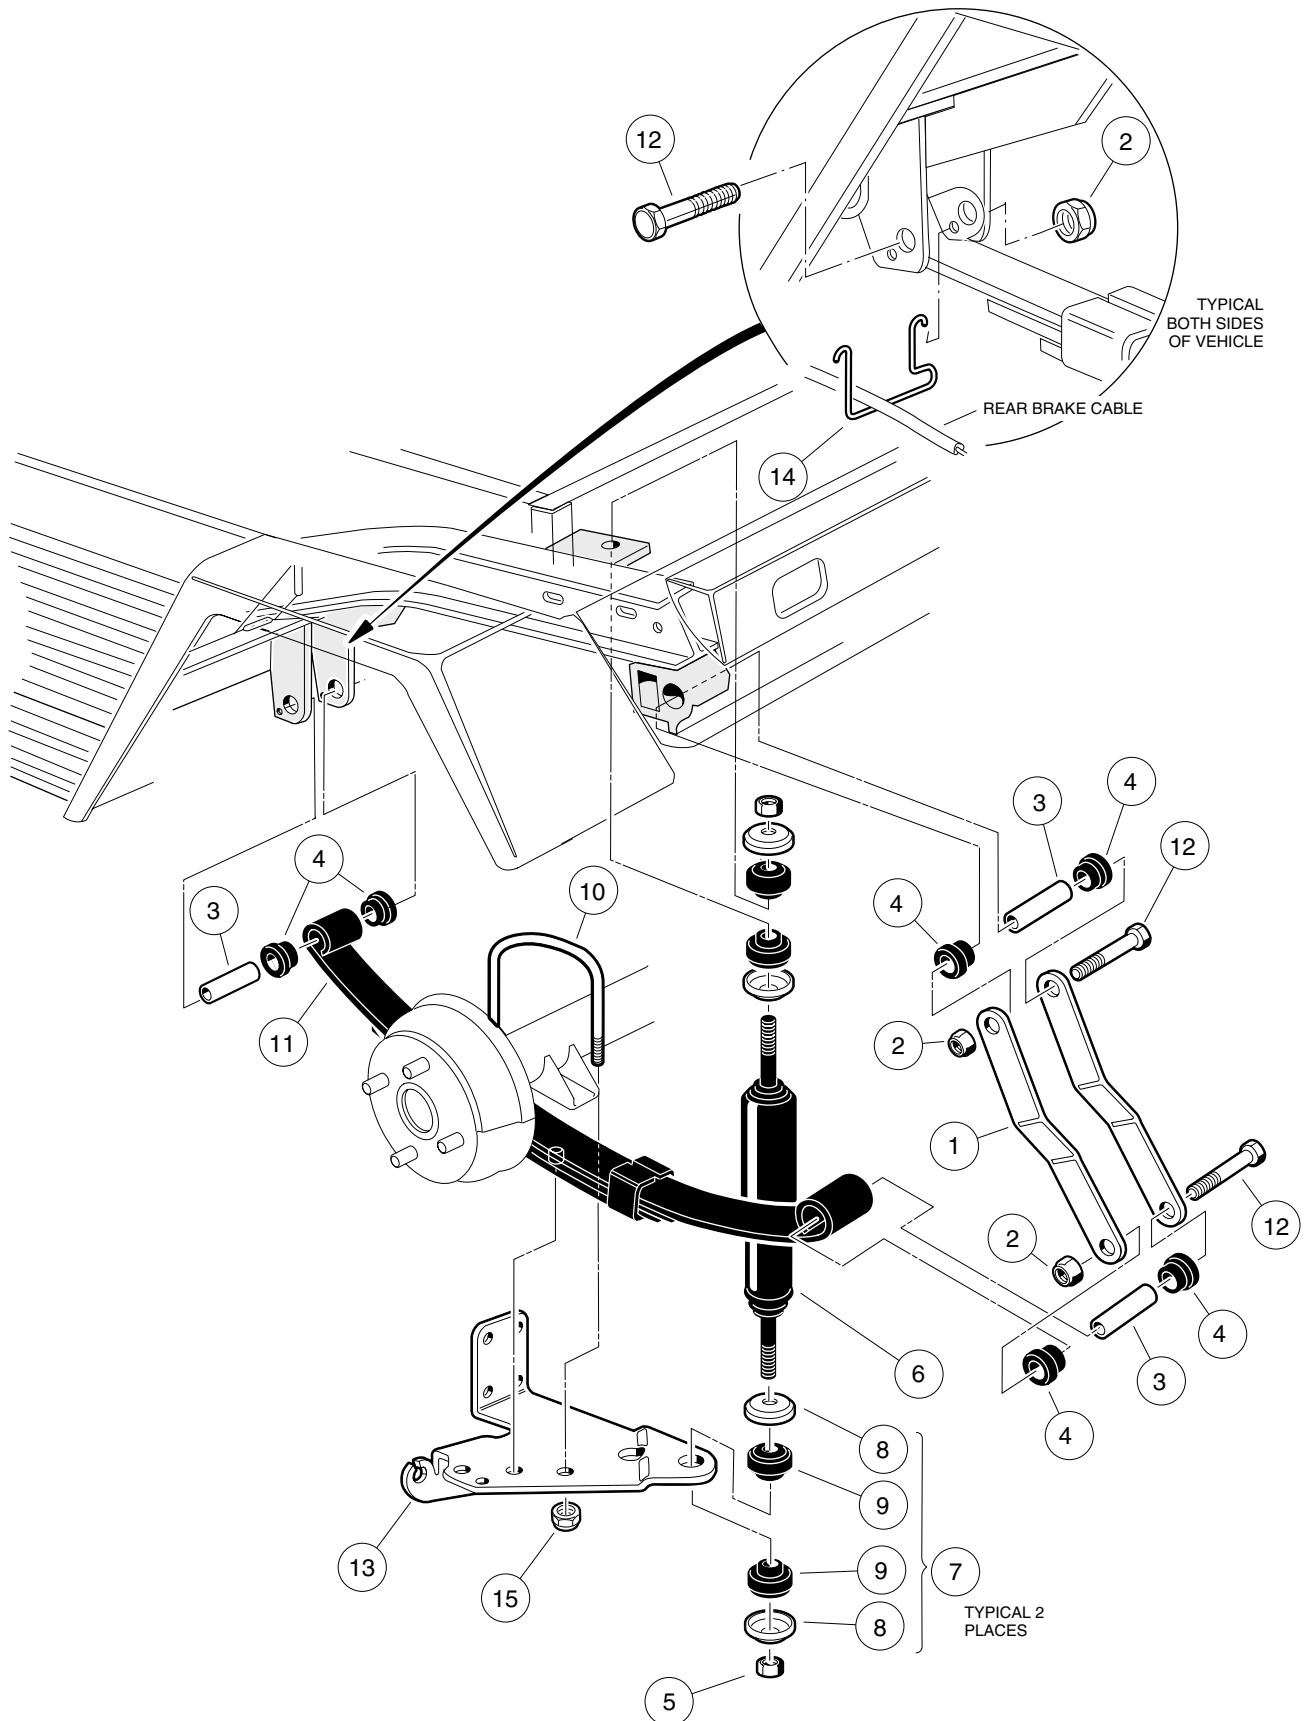


REAR SUSPENSION

6

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102004201</u>	Shackle, Rear Spring (Gasoline Vehicle)	4
2	<u>8754</u>	Nut, Nylon Lock, 3/8-16	6
3	<u>1012303</u>	Bushing, Steel	6
4	<u>1015583</u>	Bushing, Urethane	12
5	<u>1010145</u>	Nut, UNF Hex, 3/8-24	4
6	<u>102006601</u>	Shock Absorber, Rear	2
7	<u>1011415</u>	Kit, Shock Absorber Cushion (Includes 2 Each of Items 8 and 9)	4
8	N/A	Retainer, Shock Absorber Cushion	8
9	N/A	Cushion, Shock Absorber	8
10	<u>1014902</u>	U-Bolt	2
11	<u>101975201</u>	Spring, Rear Leaf	2
12	<u>8755</u>	Screw, Hex Head Cap, 3/8-16 x 3-3/8	6
13	<u>101926501</u>	Pad, Spring, Driver Side	1
13	<u>101929401</u>	Pad, Spring, Passenger Side	1
14	<u>1013207</u>	Hanger, Brake Cable	2
15	<u>1014555</u>	Nut, Nylon Lock, 7/16-24	4

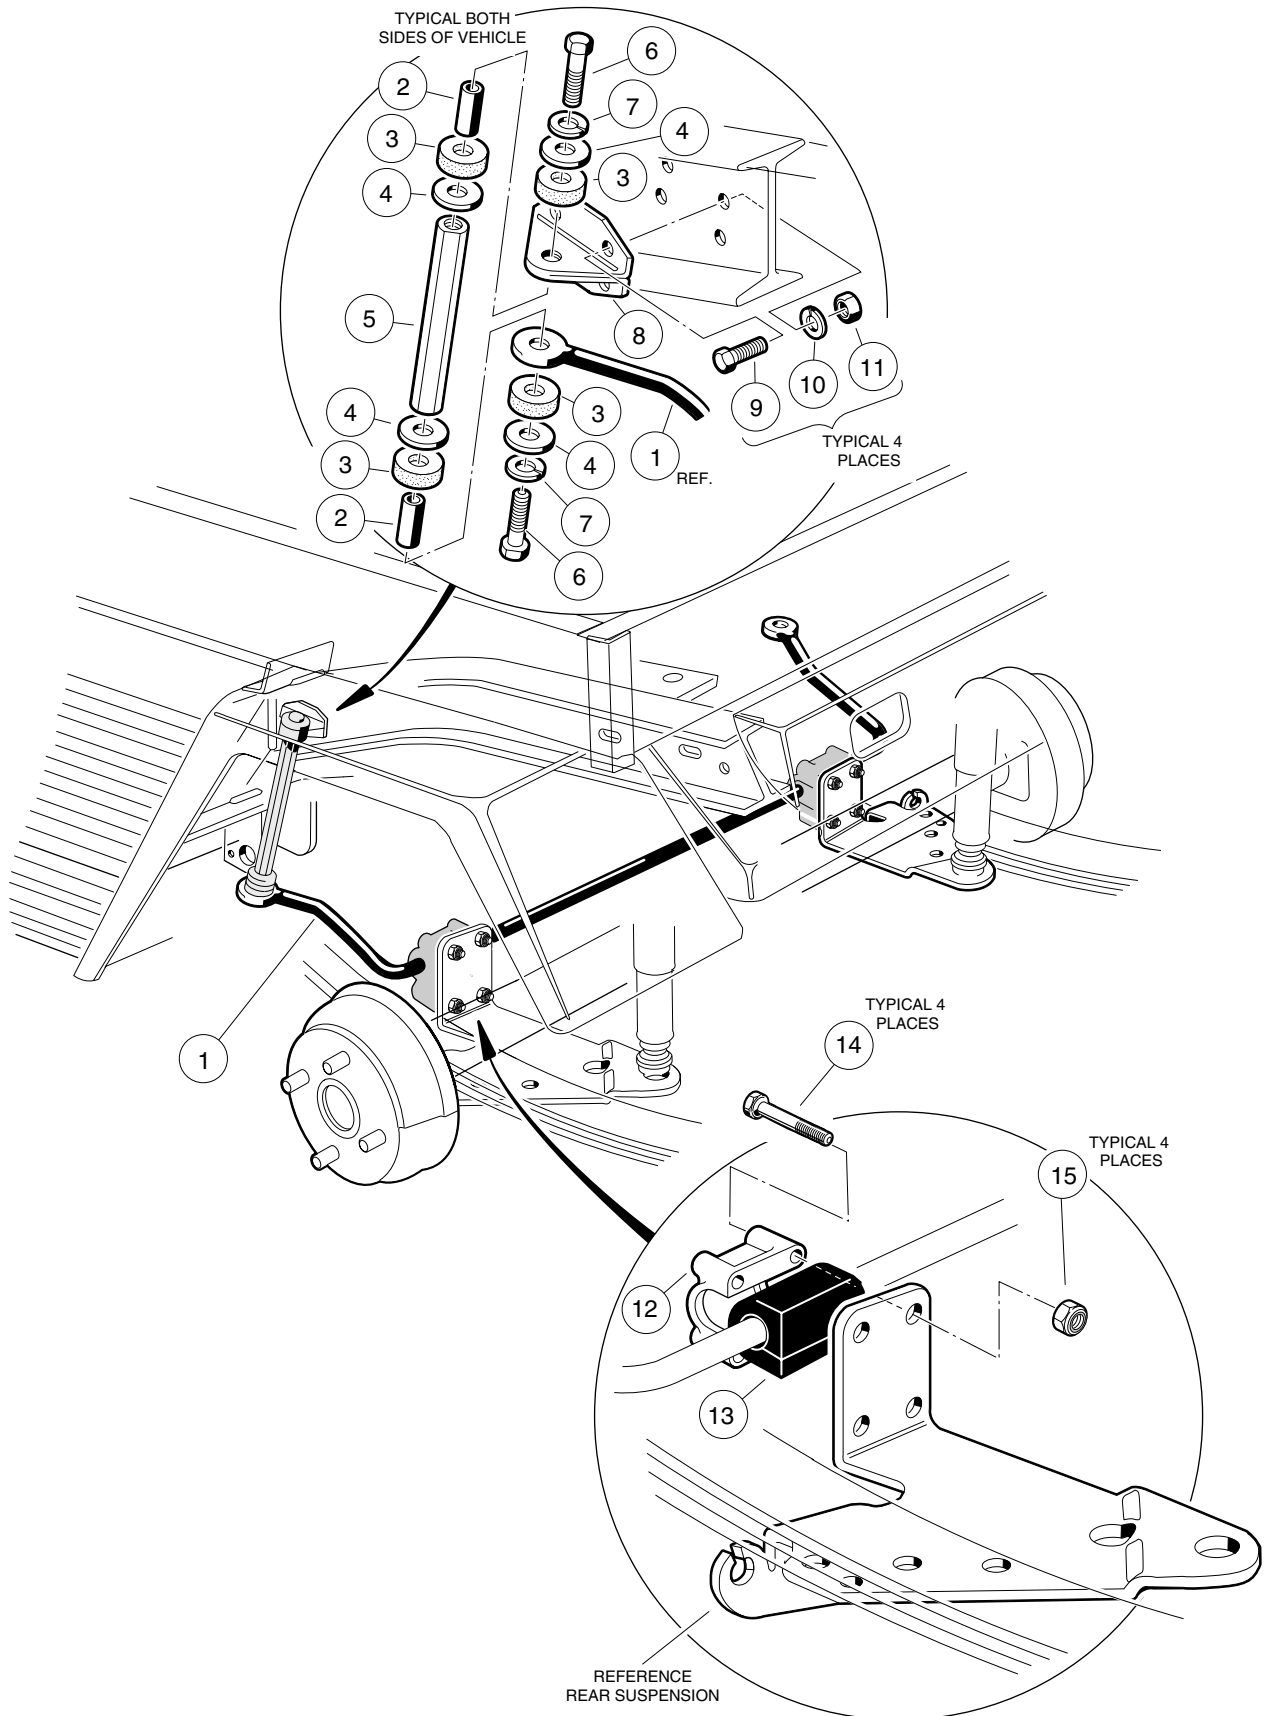

STABILIZER BAR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015760</u>	Bar, Stabilizer, 3/4 Diameter	1
2	<u>1015457</u>	Spacer	4
3	<u>1015453</u>	Mount, Compression	8
4	<u>808</u>	Washer, Flat, 3/8	8
5	<u>102004901</u>	Link, Stabilizer Bar	2
6	<u>8861</u>	Screw, Hex Head Cap, 3/8-16 x 1-3/4	4
7	<u>357</u>	Washer, Lock, 3/8	4
8	<u>1016813</u>	Bracket, Stabilizer Bar Mounting	2
9	<u>7173</u>	Screw, Hex Head Cap, 5/16-18 x 3/4	8
10	<u>7174</u>	Washer, Lock, 5/16	8
11	<u>1242</u>	Nut, Hex, 5/16-18	8
12	<u>1015614</u>	Support, Stabilizer Bar Bushing	2
13	<u>1015613</u>	Bushing, Stabilizer Bar	2
14	<u>7311</u>	Screw, Hex Head Cap, 1/4-20 x 2	8
15	<u>8233</u>	Nut, Nylon Lock, 1/4-20	8


6

G

ELECTRICAL SYSTEM

7

G

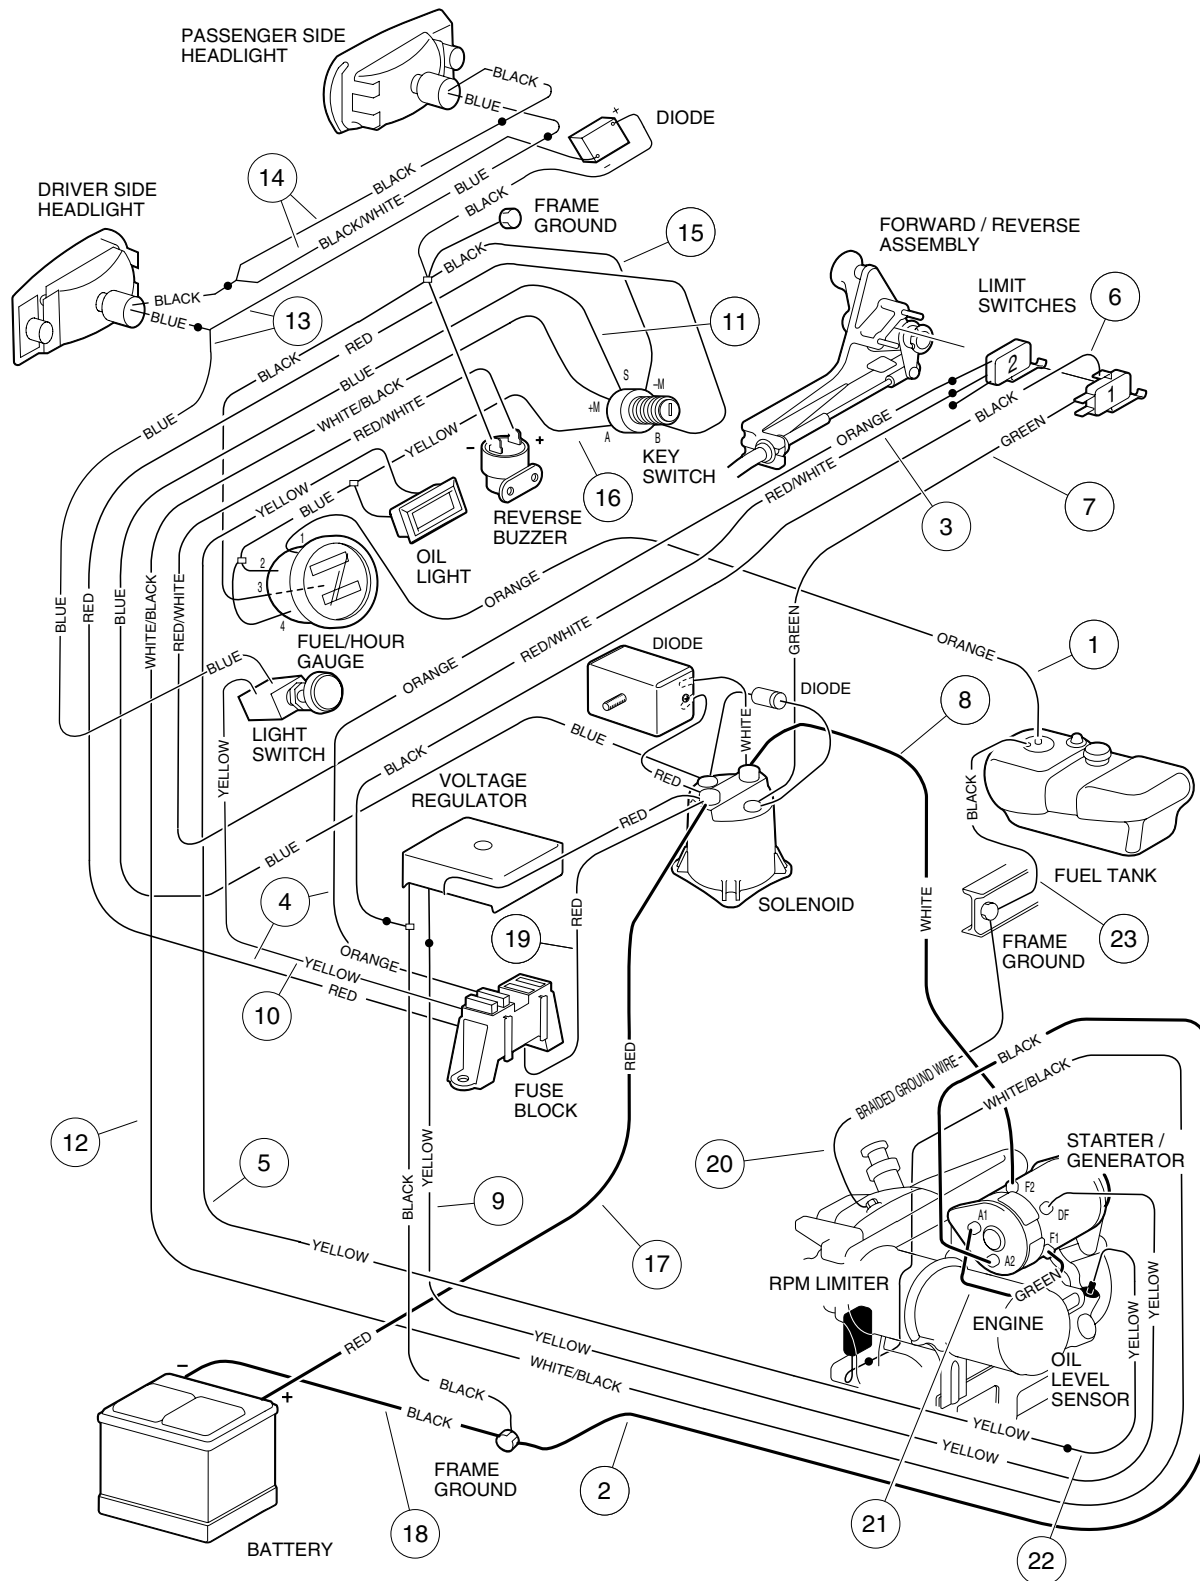


WIRING

7

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>102223801</u>	Wire Harness Assembly (Includes Items 1 - 18)	1
1	N/A	Wire Assembly, #18 Orange	1
2	<u>1016380</u>	Wire Assembly, #6 Black	1
3	N/A	Wire Assembly, #18 Red/White	1
4	N/A	Wire Assembly, #18 Red, #18 Orange	1
5	N/A	Wire Assembly, #18 Yellow	1
6	N/A	Wire Assembly, #18 Black	1
7	N/A	Wire Assembly, #18 Green	1
8	<u>1015769</u>	Wire Assembly, #6 White	1
9	N/A	Wire Assembly, #18 Yellow	1
10	N/A	Wire Assembly, #14 Yellow	1
11	N/A	Wire Assembly, #18 Blue	1
12	N/A	Wire Assembly, #18 White/Black	1
13	N/A	Wire Assembly, #14 Blue, #16 Blue	1
14	N/A	Wire Assembly, #16 Black, #16 Black/White	1
15	N/A	Wire Assembly, #16 Black, #18 Black	1
16	N/A	Wire Assembly, #18 Yellow, #18 Blue, #18 White	1
17	<u>1014119</u>	Wire Assembly, #6 Red	1
18	<u>1012382</u>	Wire Assembly, #6 Black	1
19	<u>1015737</u>	Wire Assembly, #10 Red (Part of Electrical Component Box)	1
20	<u>1015332</u>	Wire Assembly, #10 Braided Ground	1
21	<u>101837301</u>	Wire Assembly, #6 Green	1
22	N/A	Wire Assembly, #18 Yellow	1
23	N/A	Wire Assembly, #16 Black	1

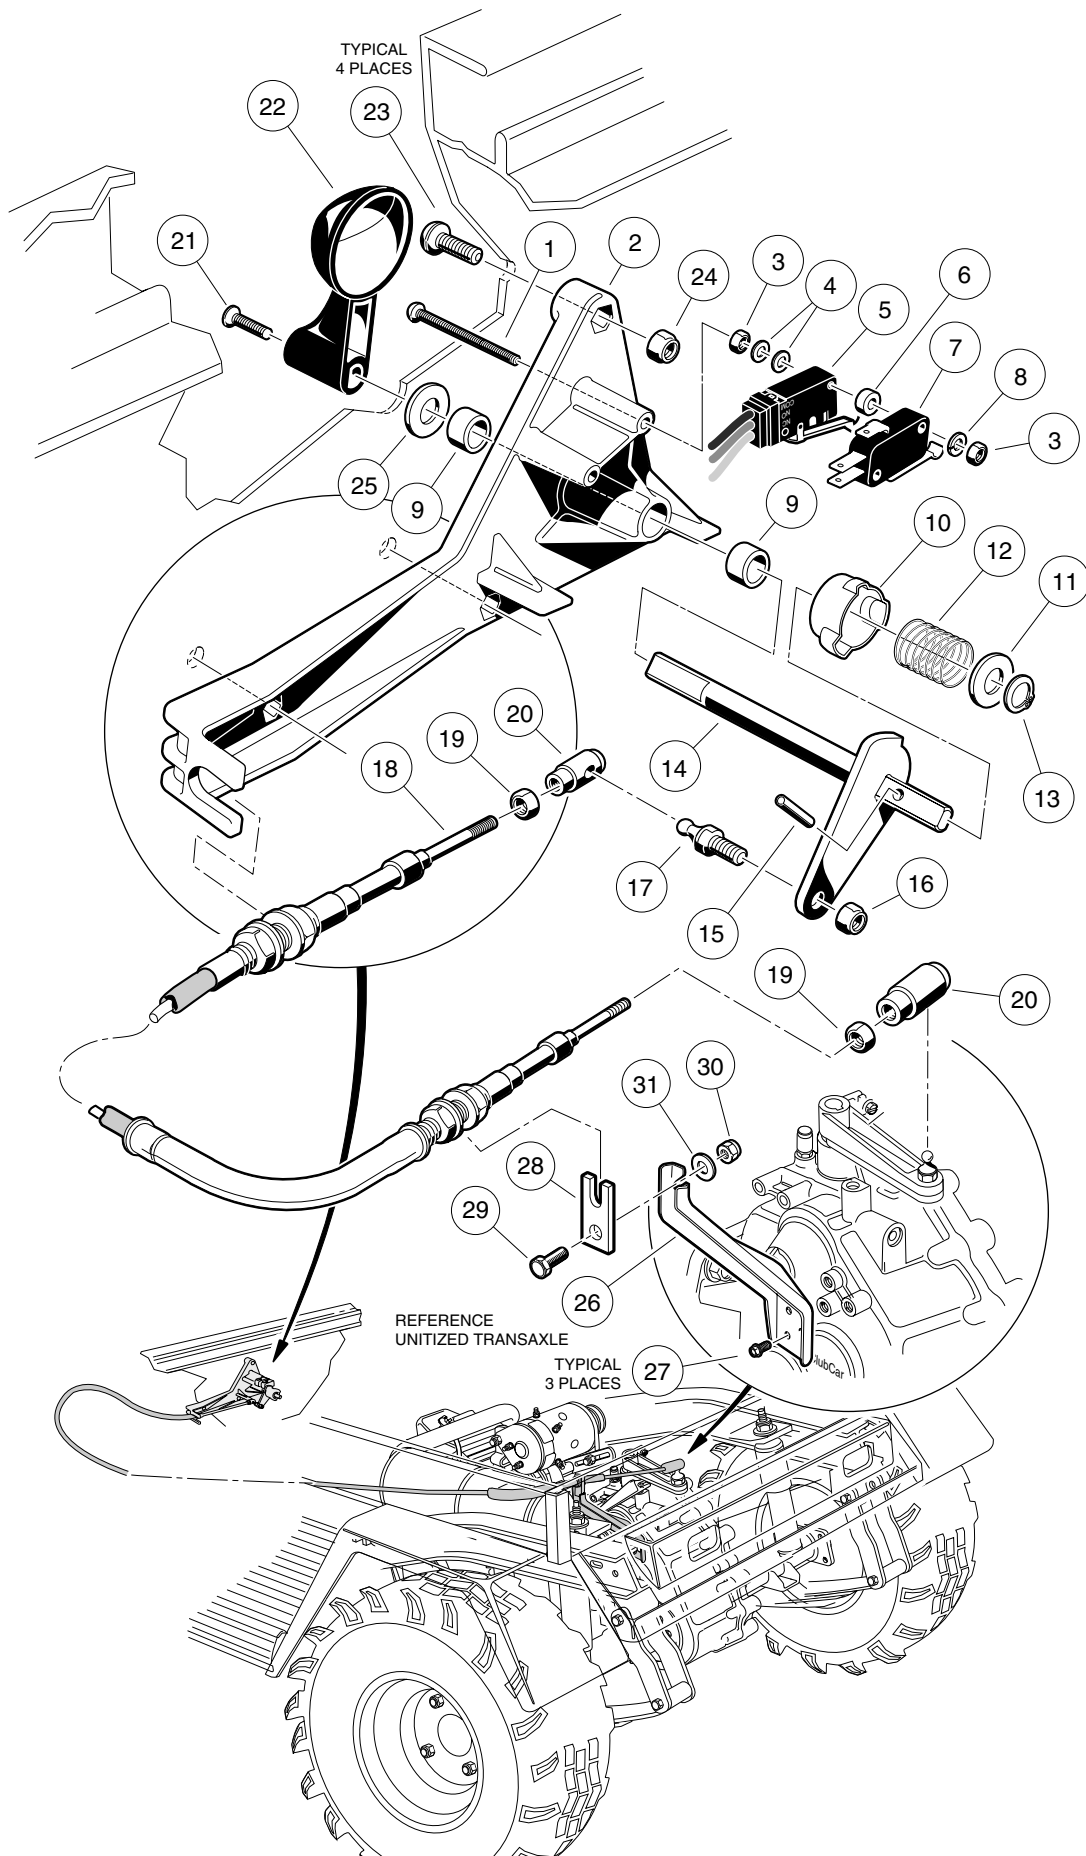


FORWARD/REVERSE SHIFTER ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	1016947	Assembly, Forward/Reverse Shifter (Includes Items 1 - 17)	1
1	<u>1012594</u>	Screw, Machine, #4-40 x 1-1/2	2
2	<u>1016342</u>	Base, Forward/Reverse Shifter	1
3	<u>8057</u>	Nut, Hex Head, #4-40	4
4	1012431	Washer, Flat, #4	4
5	<u>101979101</u>	Switch, Limit	1
6	<u>1014727</u>	Washer, Nylon Flat, #4	2
7	<u>1014807</u>	Switch, Limit	1
8	<u>8058</u>	Washer, Lock, #4	2
9	<u>1014145</u>	Bushing, Bronze	2
10	1014089	Kit, Service Cam (Includes Item 11)	1
11	<u>1014065</u>	Washer, Flat, Delrin	1
12	<u>1013590</u>	Spring, Forward/Reverse Cam	1
13	<u>1013589</u>	Ring, Retaining	1
14	1013587	Weldment, Forward/Reverse Bell Crank	1
15	<u>1013591</u>	Pin, Roll, 1/8	1
16	<u>8717</u>	Nut, Nylon Lock, 1/4-28	1
17	<u>1010954</u>	Stud, Ball, 1/4-28 X 1/4	1
18	<u>1015409</u>	Cable, Transmission (Includes Items 19 and 20)	1
19	<u>7893</u>	Nut, Hex, #10-32	2
20	<u>1012333</u>	Joint, Ball	2
21	<u>1013198</u>	Screw, Phillips Oval Countersunk Machine, #8-32 x 5/8	1
22	<u>1012987</u>	Handle, Forward/Reverse Switch	1
23	<u>8248</u>	Screw, Phillips Truss Head, 1/4-20 x 3/4	4
24	8233	Nut, Nylon Lock, 1/4-20	4
25	<u>1016201</u>	Washer, Wave, 3/8	1
26	101922601	Bracket, Transmission Cable Support	1
27	<u>1012285</u>	Screw, Thread-Rolling, 1/4-20 x 5/8	3
28	<u>102004801</u>	Extension, Shifter Bracket	1
29	320	Screw, Hex Head, 3/8-16 x 1	1
30	<u>8754</u>	Locknut, Nylon, 3/8-16	1
31	<u>808</u>	Washer, Flat, 3/8	1

7

G

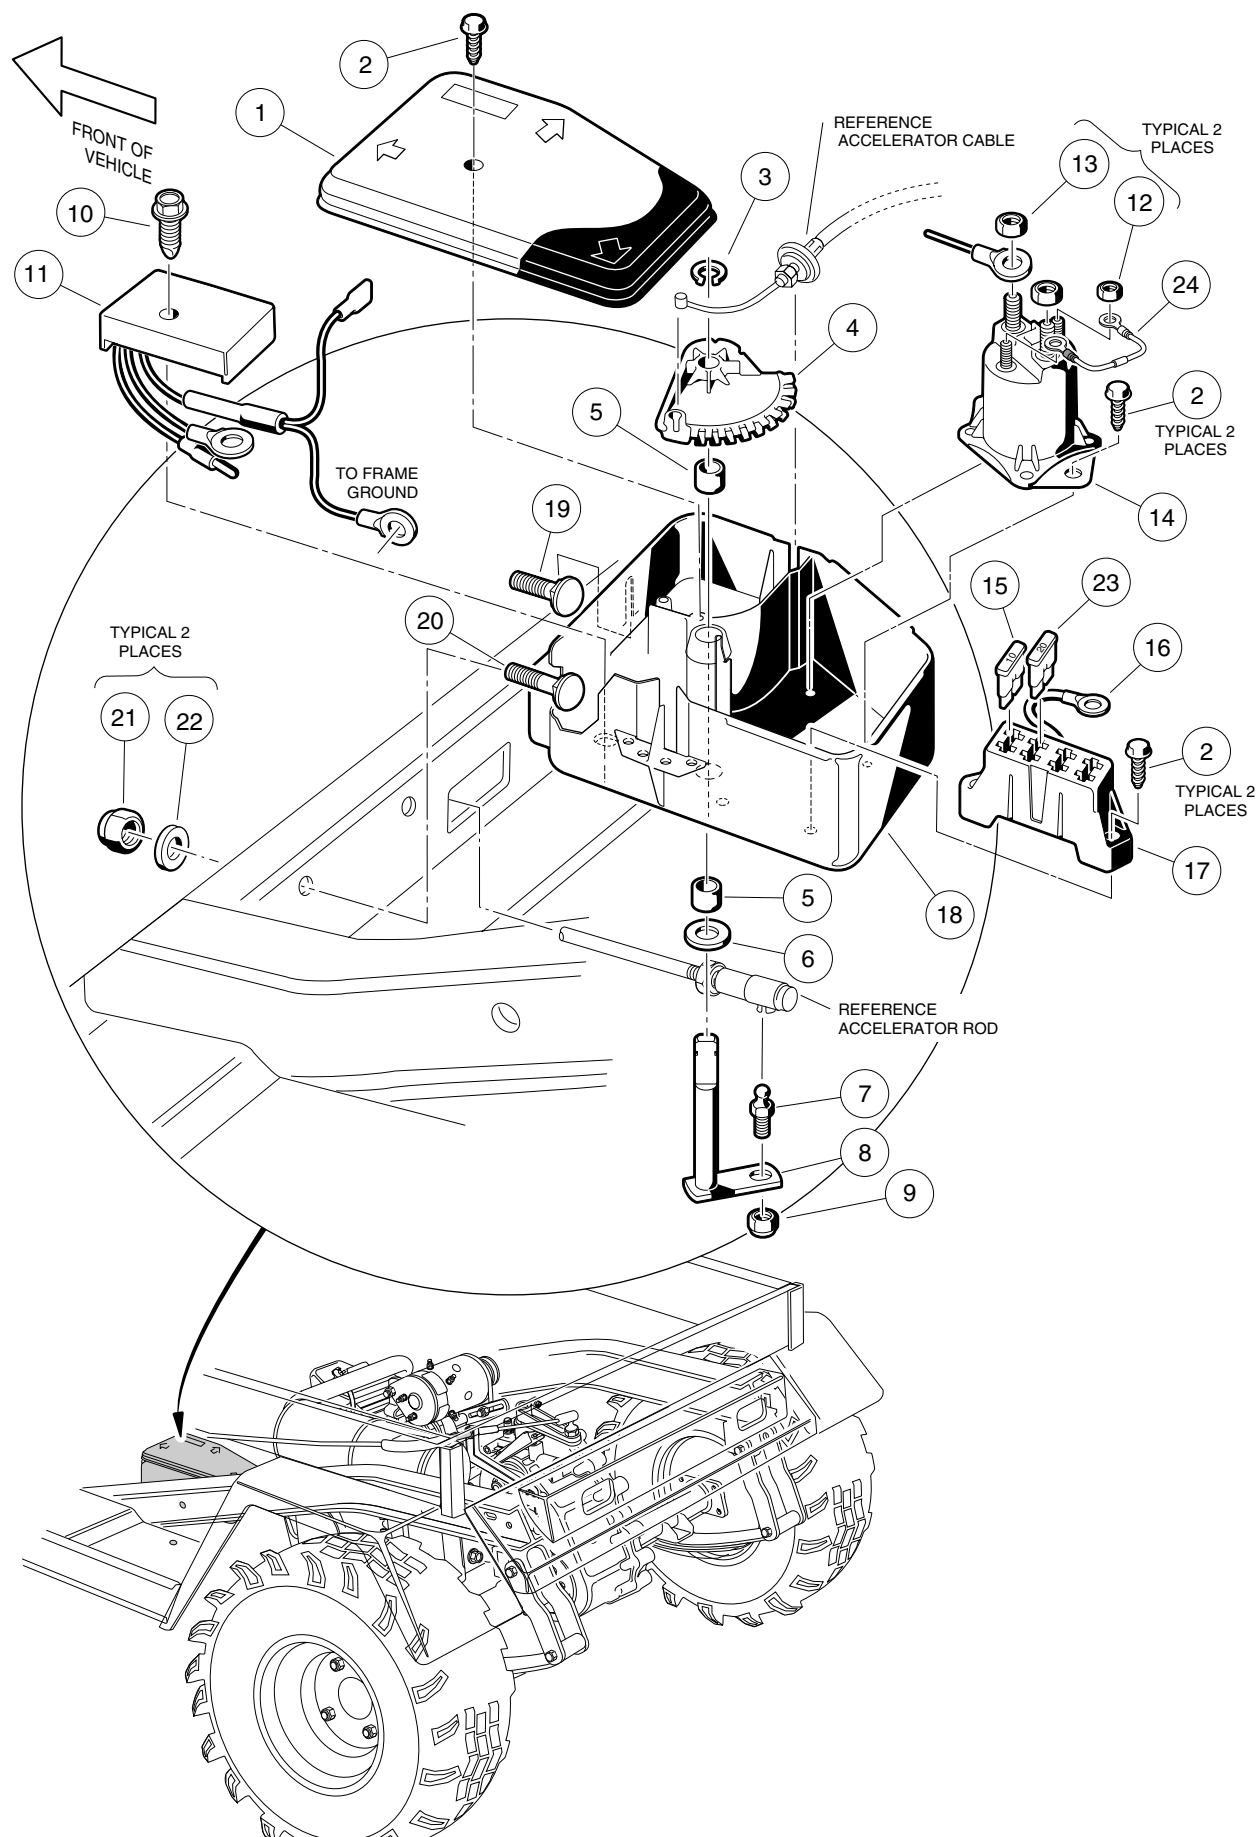


ELECTRICAL COMPONENT BOX

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	N/A	Box, Electrical Component, Complete (Includes Items 1 - 18).....	1
1	<u>1015372</u>	Cover, Electrical Component Box	1
2	<u>1015752</u>	Screw, Hi-Lo, #12-16 x 5/8	5
3	<u>1013589</u>	Ring, Retaining	1
4	<u>1015373</u>	Cam, Electrical Box	1
5	<u>1014145</u>	Bushing, Bronze	2
6	<u>1014065</u>	Washer, Flat, Delrin	1
7	<u>1010954</u>	Stud, Ball, 1/4-28	1
8	<u>1015345</u>	Assembly, Bell Crank And Shaft	1
9	<u>8717</u>	Nut, Nylon Lock, 1/4-28	1
10	<u>101856102</u>	Screw, Hex Washer Head Hi-Lo, 1/4-15 x 1-1/2	1
11	<u>1015777</u>	Assembly, Voltage Regulator	1
12	<u>7893</u>	Nut, Hex, #10-32	2
13	<u>1242</u>	Nut, Hex, 5/16-18	2
14	<u>1013609</u>	Solenoid, 12-volt	1
15	<u>1012295</u>	Fuse, 10-amp	1
16	<u>1015737</u>	Wire Assembly, #10 Red	1
17	<u>1015741</u>	Block, Fuse	1
18	<u>1015371</u>	Box, Electrical Component	1
19	<u>7818</u>	Screw, Round-Head Square-Neck, 5/16-18 x 1-1/2	1
20	<u>1015405</u>	Screw, Round-Head Square-Neck, 5/16-18 x 2	1
21	<u>7473</u>	Nut, Nylon Lock, 5/16-18	2
22	<u>1241</u>	Washer, Flat, 5/16	2
23	<u>1016423</u>	Fuse, 20-amp	1
24	<u>1014948</u>	Diode, Flyback	1

7

G

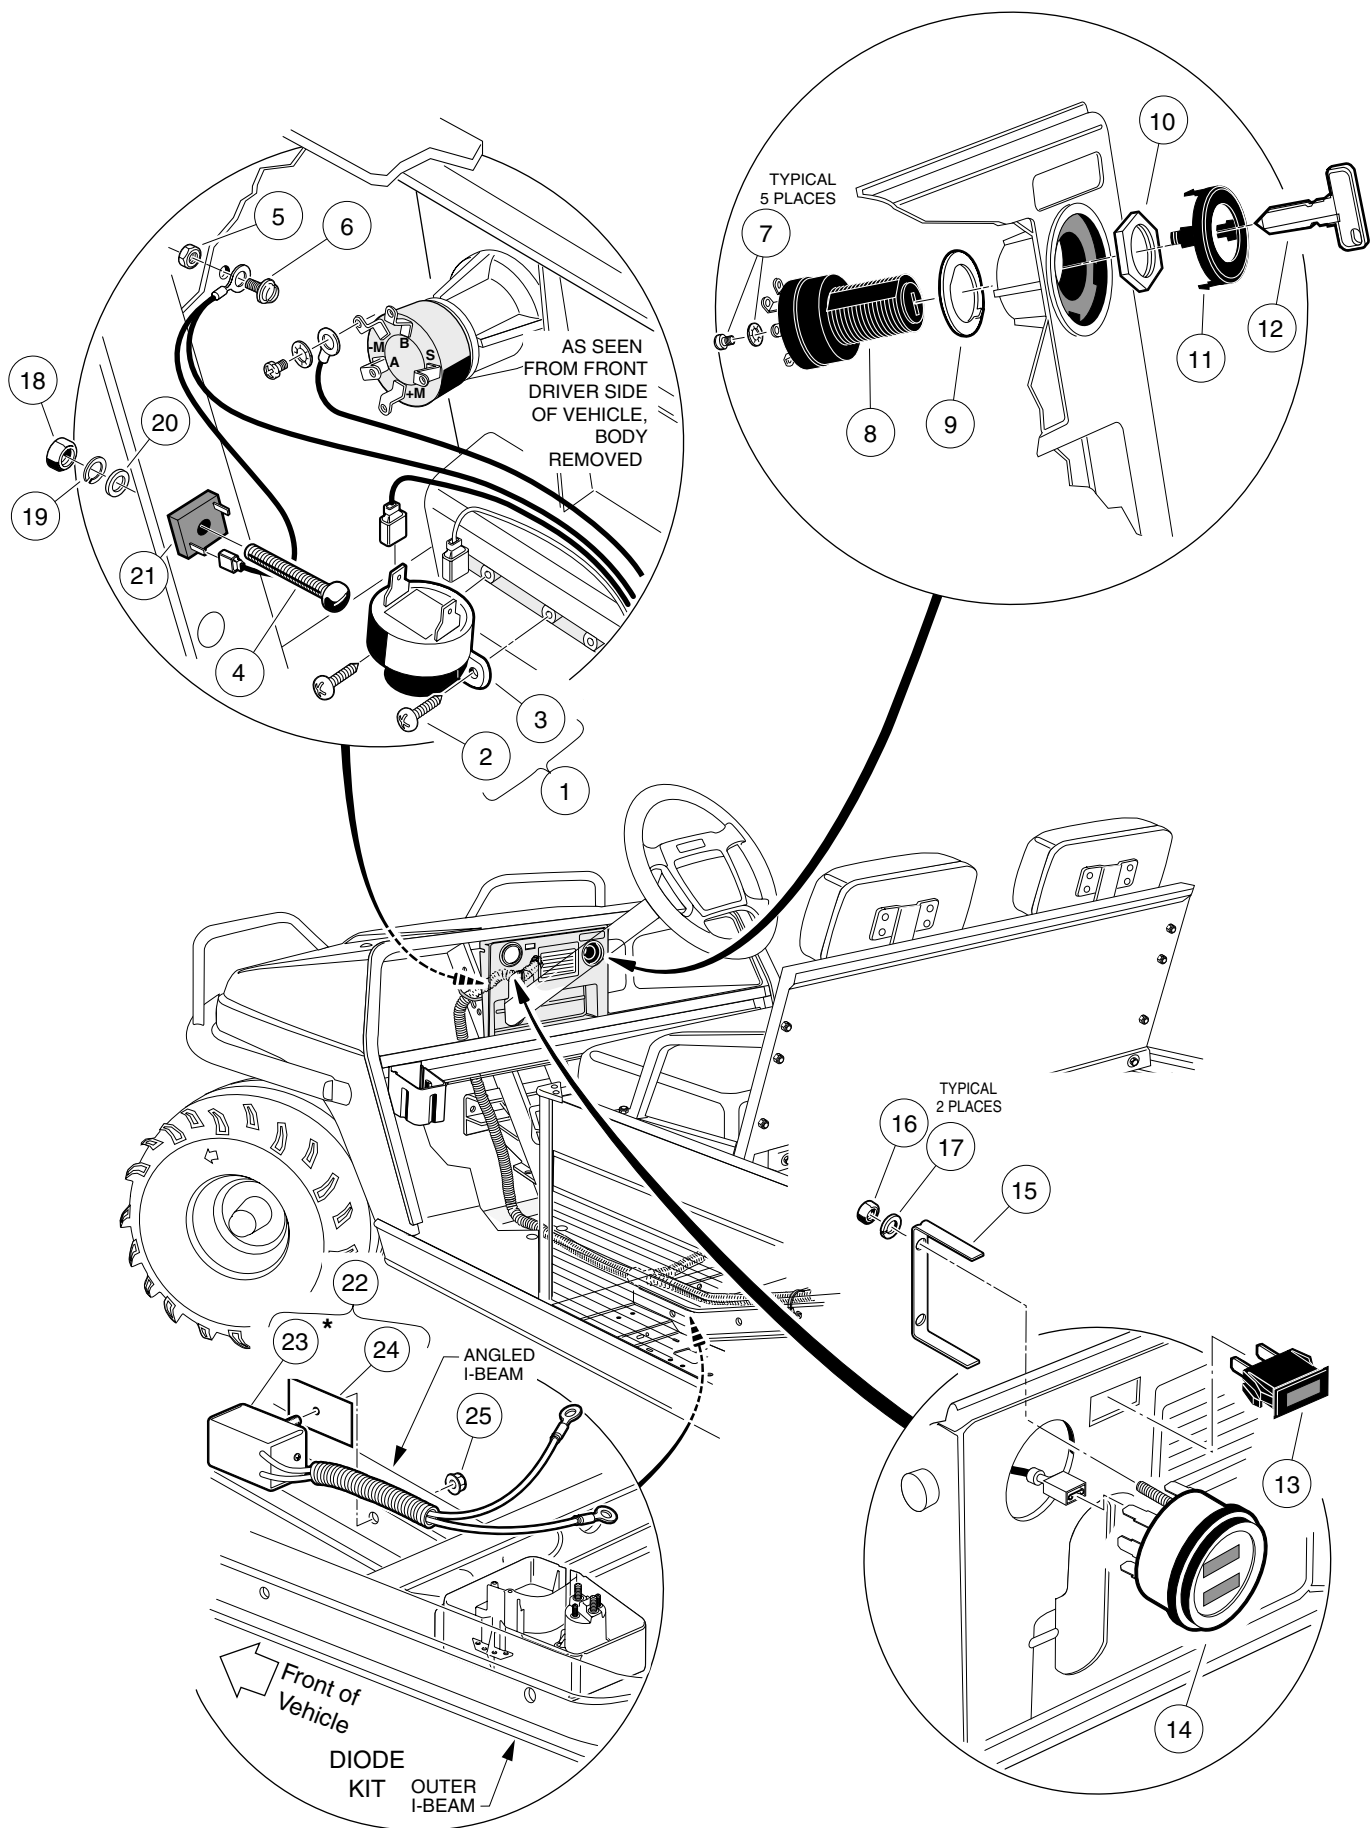


ELECTRICAL COMPONENTS, FRONT BODY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016859</u>	Kit, Reverse Buzzer (Includes Items 2 and 3)	1
2	<u>1016849</u>	Screw, Pan Head Hi-Lo, #4-24 x 5/16	2
3	<u>1016851</u>	Buzzer, Reverse	1
4	<u>1010909</u>	Screw, Hex Head Machine, #10-32 x 1-1/4	1
5	<u>1011229</u>	Nut, K-Lock, #6-32	1
6	<u>1015720</u>	Screw, Hex Washer Head, #6-32 x 1/2	1
7	<u>101830601</u>	Assembly, Screw and Washer	5
8	<u>101826401</u>	Switch, Key	1
9	<u>101851101</u>	Washer	1
10	<u>101830701</u>	Nut, Key Switch	1
11	<u>101834502</u>	Cap, Key Switch	1
12	<u>1012505</u>	Key (Pair)	1
13	<u>1016630</u>	Light, Oil Warning	1
14	<u>101990701</u>	Gauge, Fuel/Hour (Includes Item 15)	1
15	N/A	Bracket	1
16	<u>101991101</u>	Nut, M4 x .7	2
17	<u>1012986</u>	Washer, Lock, M4	2
18	<u>7893</u>	Nut, Hex, #10-32	1
19	<u>1016</u>	Washer, Lock, #10	1
20	<u>183</u>	Washer, Flat, #10	1
21	<u>1017721</u>	Diode, Headlight	1
22	<u>102272501</u>	Kit, Diode (includes items 23 - 25)	1
23	<u>102264001</u>	Assembly, Diode	1
24	<u>102269701</u>	Pad, Thermal	1
25	<u>101963401</u>	Nut, Hex Flanged Lock	1
* Some vehicles have as standard equipment a diode that looks different from that shown for item 23 in the illustration.			

7

G

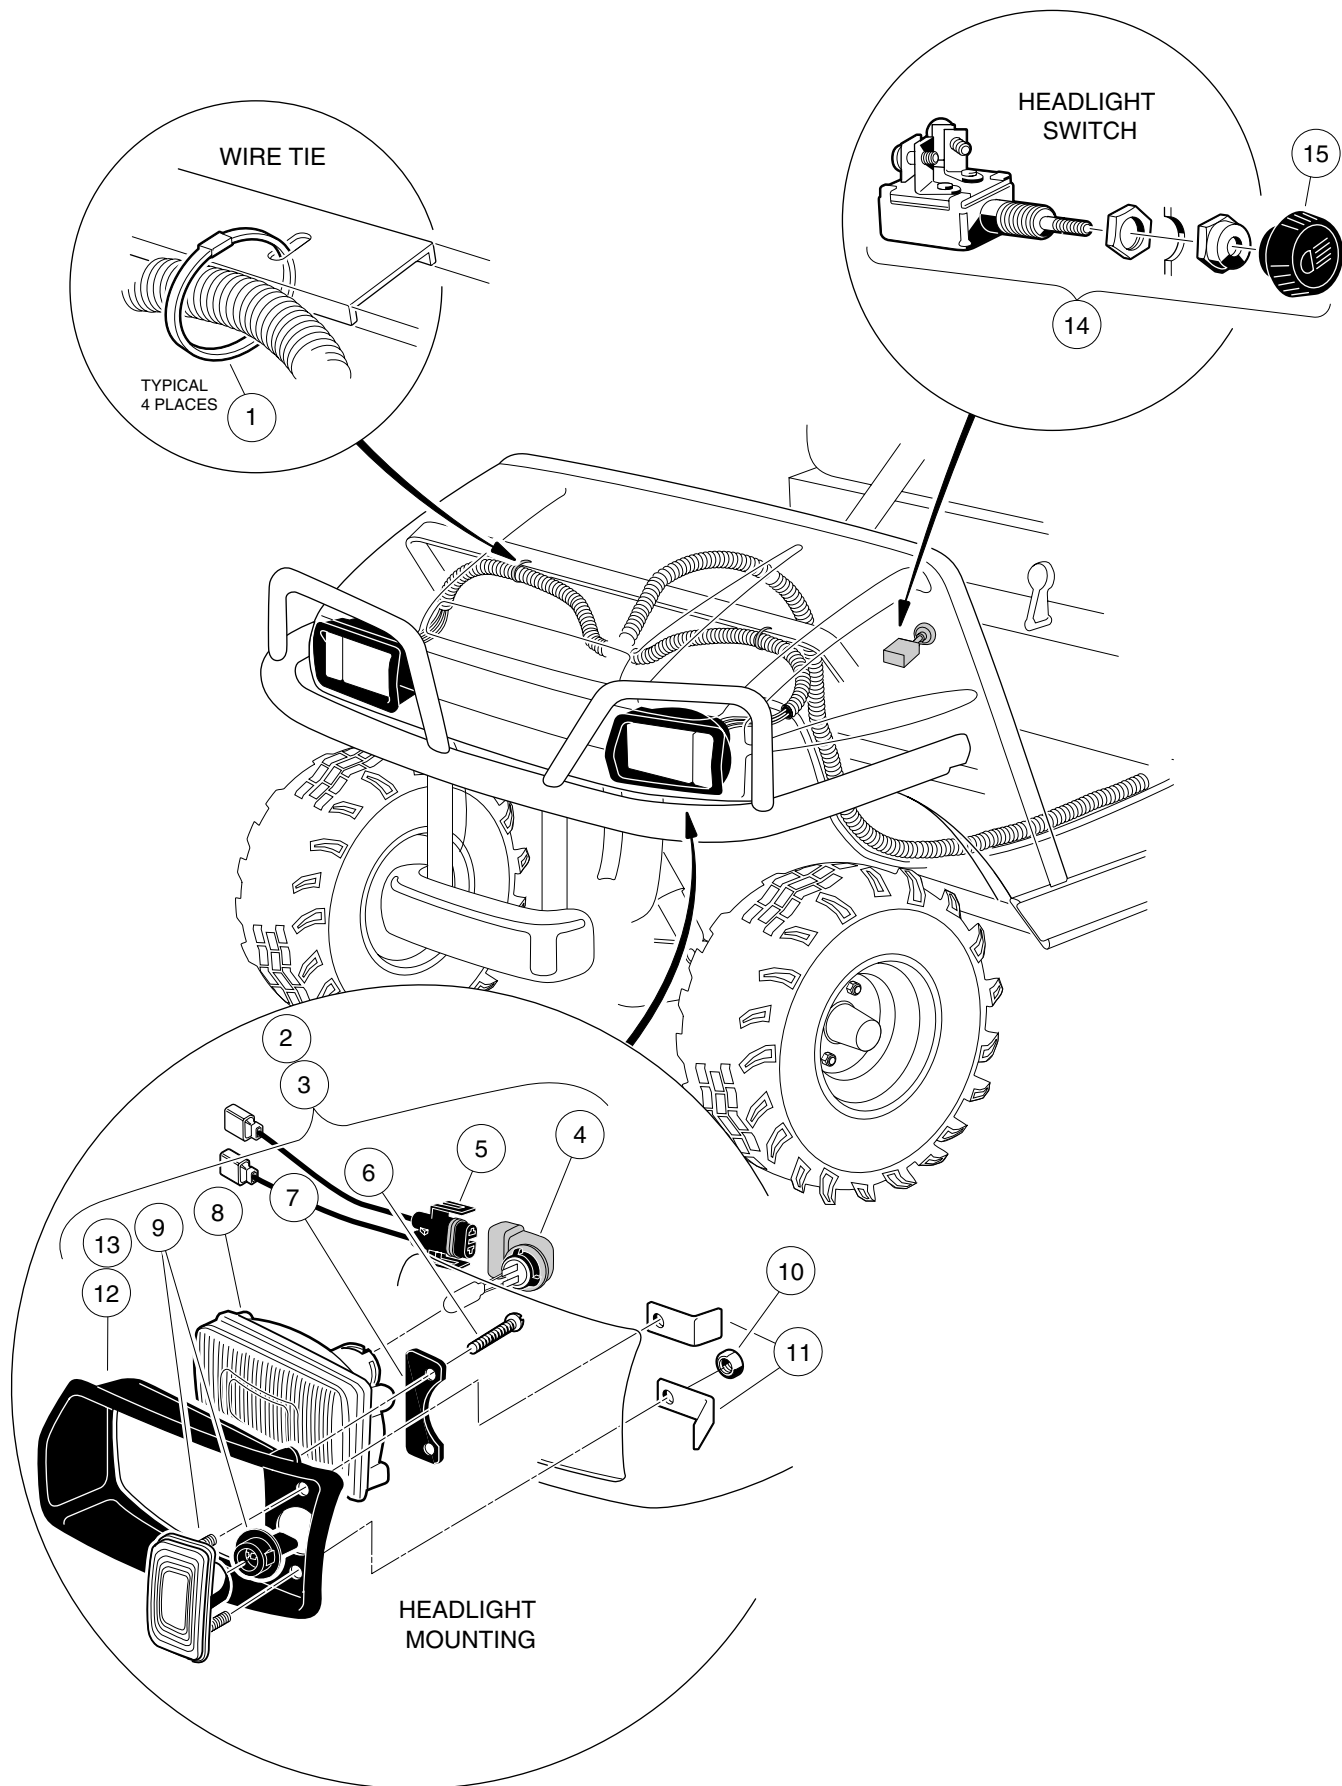


HEADLIGHTS

7

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>8990</u>	Tie, Wire	4
2	<u>101988001</u>	Assembly, Headlight, Driver Side (Includes Items 4 - 12)	1
3	<u>101988002</u>	Assembly, Headlight, Passenger Side (Includes Items 4 - 11 and 13)	1
4	<u>101988101</u>	Bulb, Halogen	1
5	<u>101987901</u>	Harness, Headlight Wire	1
6	<u>1013461</u>	Screw, Hi-Lo, #10-16	2
7	<u>1017065</u>	Retainer, Headlight	1
8	<u>101988201</u>	Lens, Headlight	1
9	<u>1017062</u>	Assembly, Turn Signal Lens	1
10	<u>7893</u>	Nut, Hex, #10-32	2
11	<u>1017064</u>	Bracket, Mounting	2
12	<u>1016880</u>	Bezel, Headlight, Driver Side	1
13	<u>1016879</u>	Bezel, Headlight, Passenger Side	1
14	<u>4034</u>	Switch, Light (Includes Item 15)	1
15	<u>1013857</u>	Knob, Light Switch	1

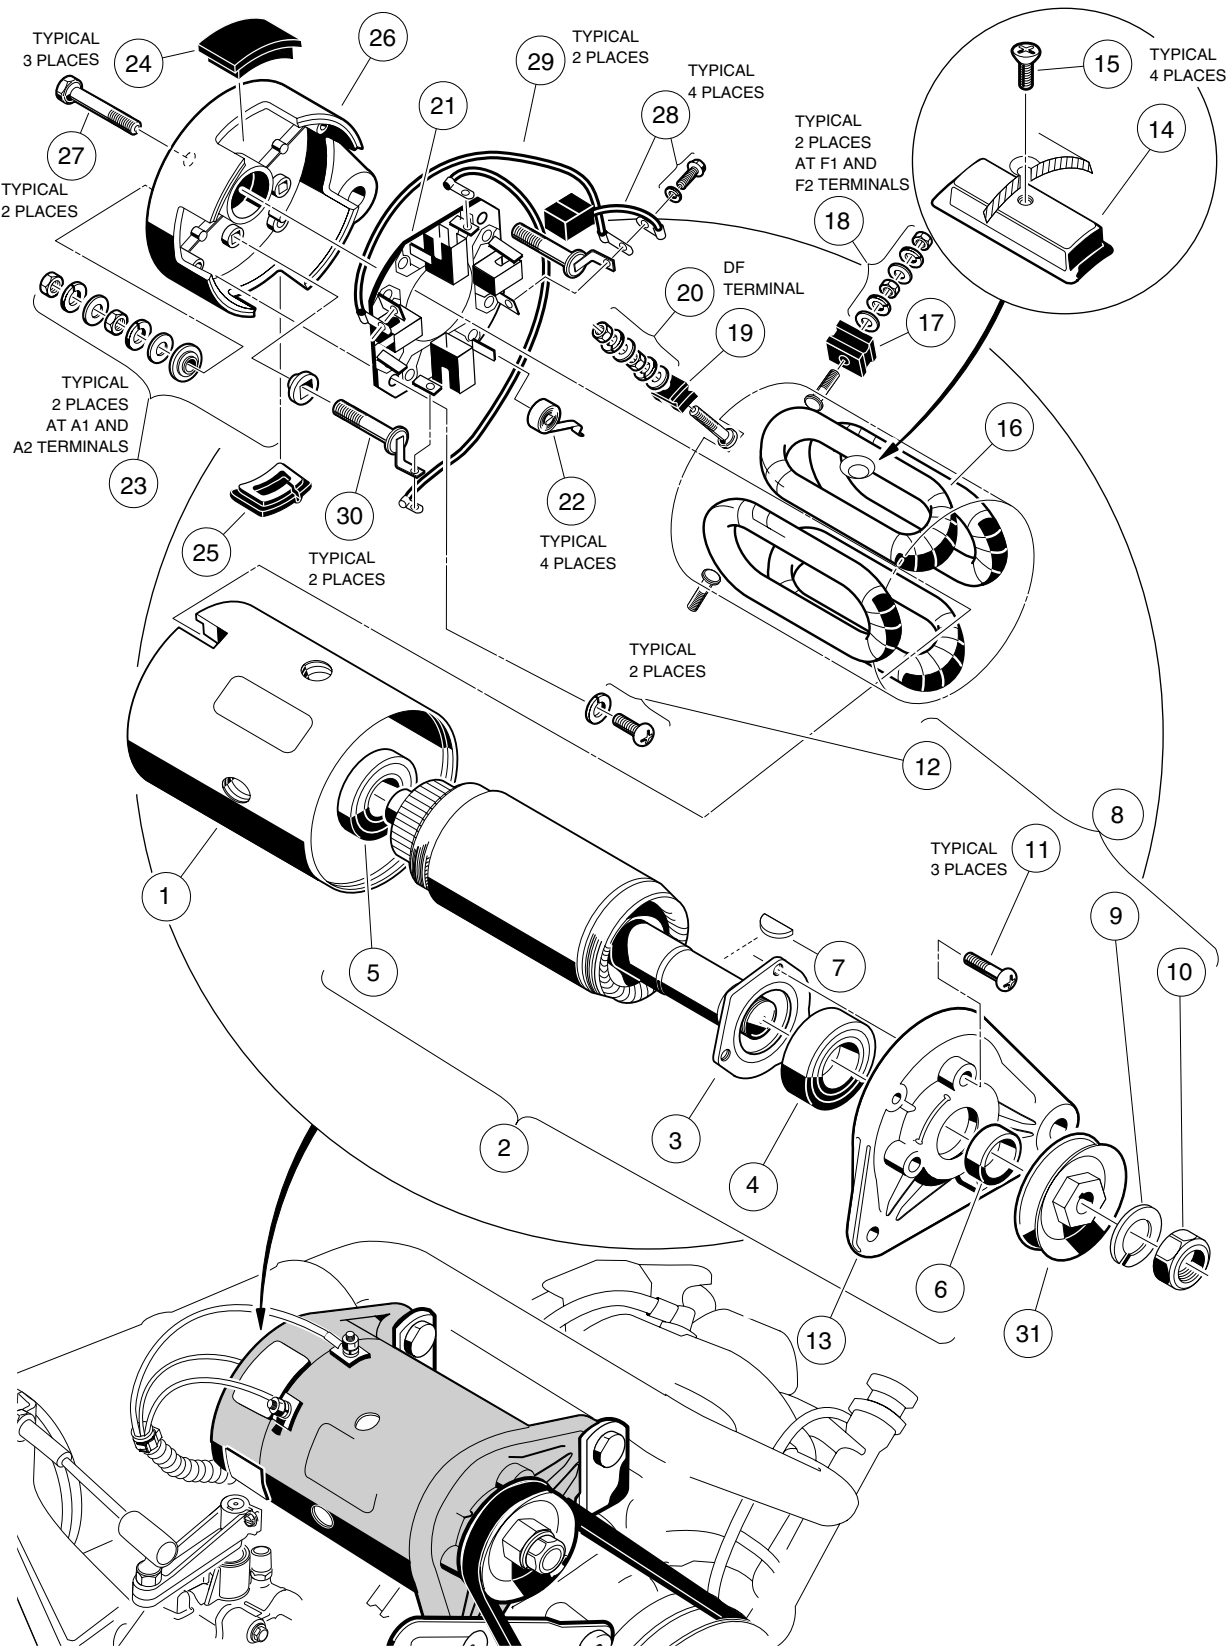


STARTER/GENERATOR ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>101833701</u>	Starter/Generator (Clockwise Rotation) (Includes Items 1 - 30)	1
1	<u>101875201</u>	Housing, Field Coil	1
2	<u>101875101</u>	Assembly, Armature (Includes Items 3 - 6)	1
3	<u>101875001</u>	Retainer, Bearing	1
4	<u>1013001</u>	Ball Bearing, Output Shaft	1
5	<u>1013005</u>	Commutator, Ball Bearing	1
6	<u>101939901</u>	Spacer, 5/16	1
7	<u>1013003</u>	Key, Woodruff	1
8	<u>101876501</u>	Kit, Pulley Nut and Screw (Includes Items 9 - 12)	1
9	N/A	Washer, Lock, M14	1
10	N/A	Nut, Hex, M14 x 2	1
11	N/A	Screw, Cross-Recessed, M5 x .8 x 18mm	3
12	<u>101896501</u>	Screw, Cross-Recessed, M5 x .8 x 16mm (with Lock Washer)	2
13	<u>101874901</u>	End Bell, Output Shaft	1
14	<u>101875301</u>	Set, Pole (Set of 4)	1
15	<u>101875401</u>	Screw, Pole Piece (Set of 4)	1
16	<u>101875501</u>	Assembly, Field Coil	1
17	<u>101875601</u>	Insulator, F Terminal	2
18	<u>101877601</u>	Package, Terminal Hardware (F1 and F2)	2
19	<u>101875701</u>	Insulator, DF Terminal	1
20	<u>101877701</u>	Package, Terminal Hardware (DF)	1
21	<u>101301102</u>	Holder, Brush (Includes Item 22)	1
22	<u>101878101</u>	Spring, Brush	4
23	<u>101876001</u>	Package, Terminal Hardware (A1 and A2)	2
24	<u>101876301</u>	Cover, Brush Inspection Port (Set of 4) (Includes Item 25)	1
25	<u>1017653</u>	Cover, Brush Inspection Port, with Drain	1
26	<u>101876402</u>	End Bell, Commutator	1
27	<u>101879001</u>	Bolt, Clamp, M6 x 1 x 180mm	2
28	<u>101869302</u>	Package, Brush (Includes 4 Brushes, 4 Screws, 4 Washers)	1
29	<u>101876202</u>	Assembly, Brush Connector	2
30	<u>101875802</u>	A Connector (Set of 2)	1
31	<u>1014289</u>	Pulley	1

7


G

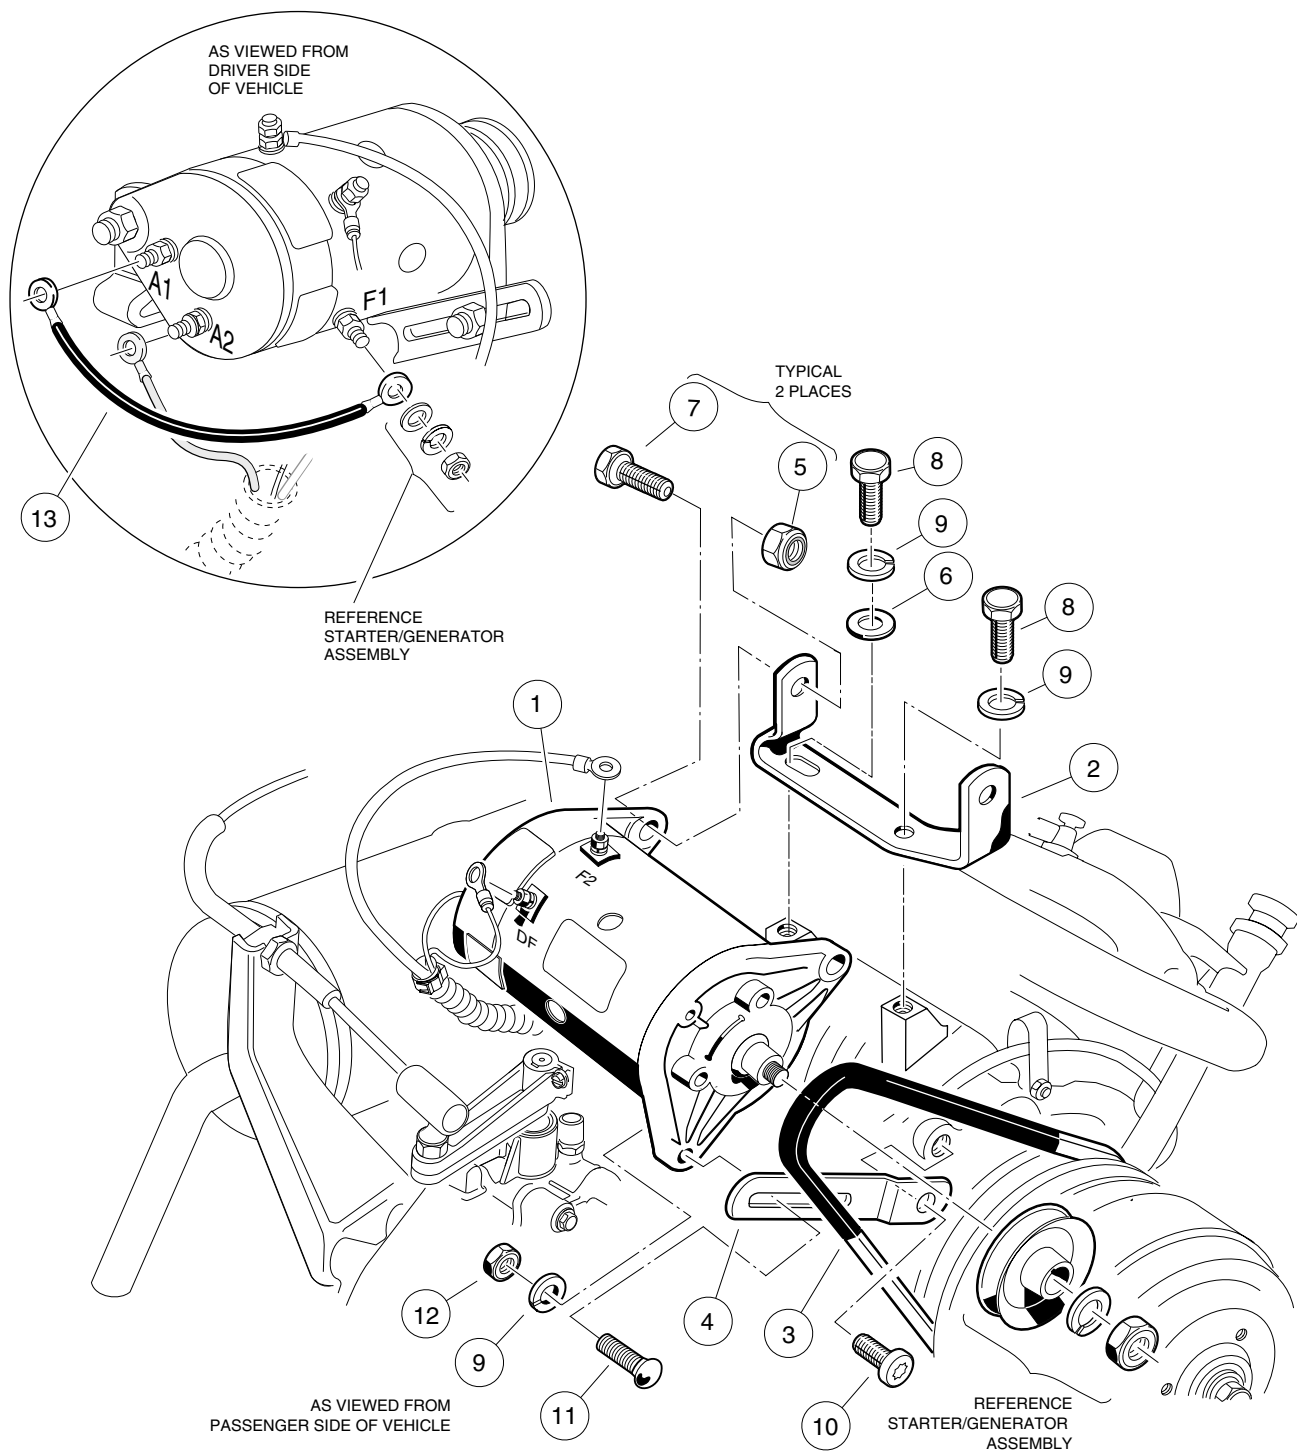

STARTER/GENERATOR MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101833701</u>	Starter/Generator (Clockwise Rotation)	1
2	<u>101524002</u>	Bracket, Mounting, FE350	1
3	<u>101916701</u>	Belt, Starter/Generator	1
4	<u>1016883</u>	Bracket, Adjusting	1
5	<u>8754</u>	Nut, Nylon Lock, 3/8-16	2
6	<u>1015075</u>	Washer, Flat, 5/16	1
7	<u>705</u>	Screw, Hex Head Cap, 3/8-16 x 1-1/4	2
8	<u>1012830</u>	Screw, Hex Head Cap, M8 x 1.25 x 22mm	2
9	<u>7174</u>	Washer, Lock, 5/16	3
10	<u>1016074</u>	Screw, Torx Head, M8 x 1.25 x 18mm	1
11	<u>1015932</u>	Screw, Round-Head Square-Neck, 5/16-18 x 1	1
12	<u>1242</u>	Nut, Hex, 5/16-18	1
13	<u>101837301</u>	Wire Assembly, #6 Green	1

7
G

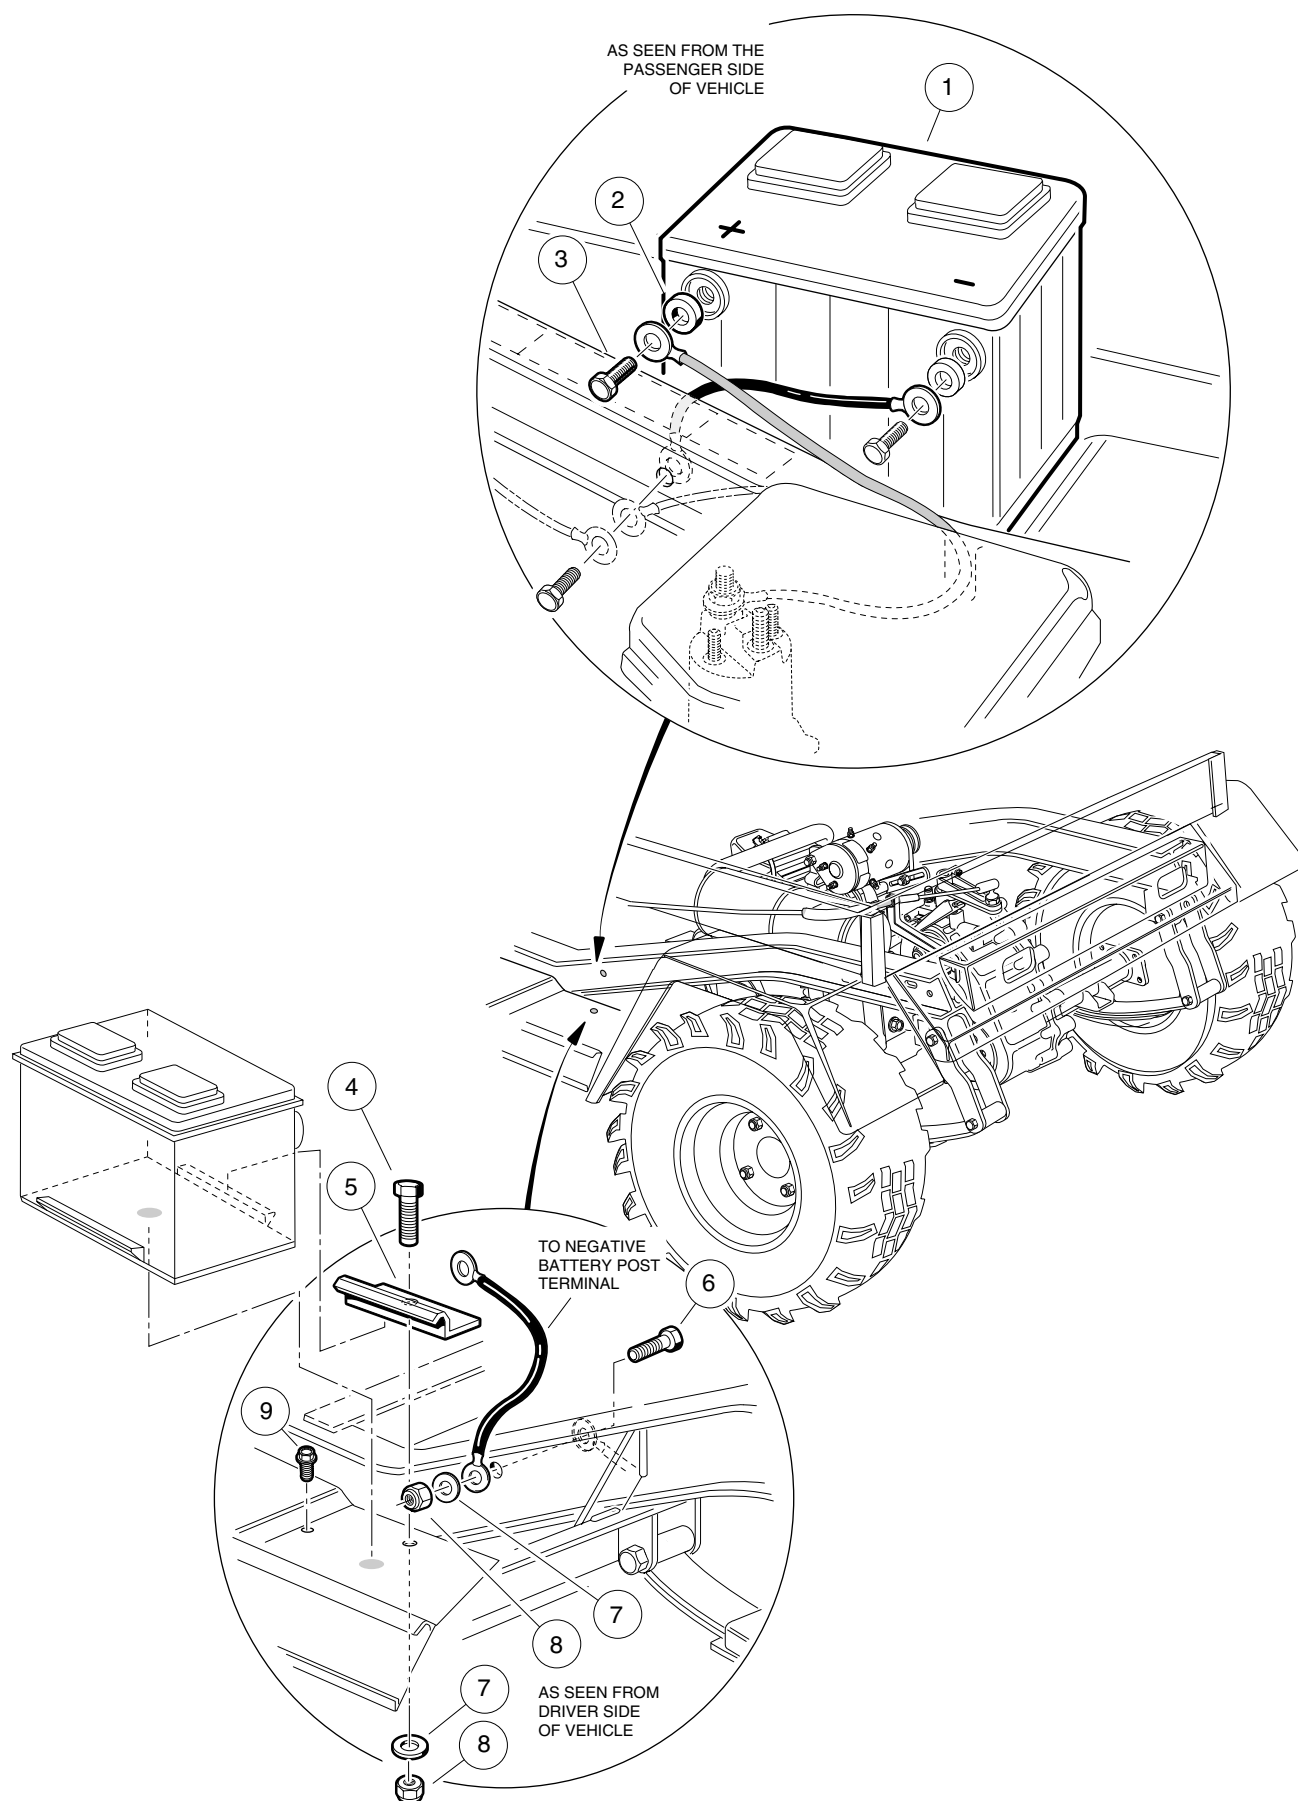

BATTERY


7
G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012328</u>	Battery, 12-Volt	1
2	<u>1014374</u>	Spacer, Battery Terminal Bolt	2
3	<u>1014375</u>	Screw, Hex Head Cap, Stainless Steel, 3/8-16 x 1/2	2
4	<u>1010934</u>	Screw, Hex Head Cap, 5/16-18 x 1	1
5	<u>101898001</u>	Clamp, Battery	1
6	<u>7173</u>	Screw, Hex Head Cap, 5/16-18 x 3/4	1
7	<u>1241</u>	Washer, Flat, 5/16	2
8	<u>7473</u>	Nut, Nylon Lock, 5/16-18	2
9	<u>1014288</u>	Screw, Thread-Forming, 5/16-18 x 3/4	1

FE350 ENGINE

8

G

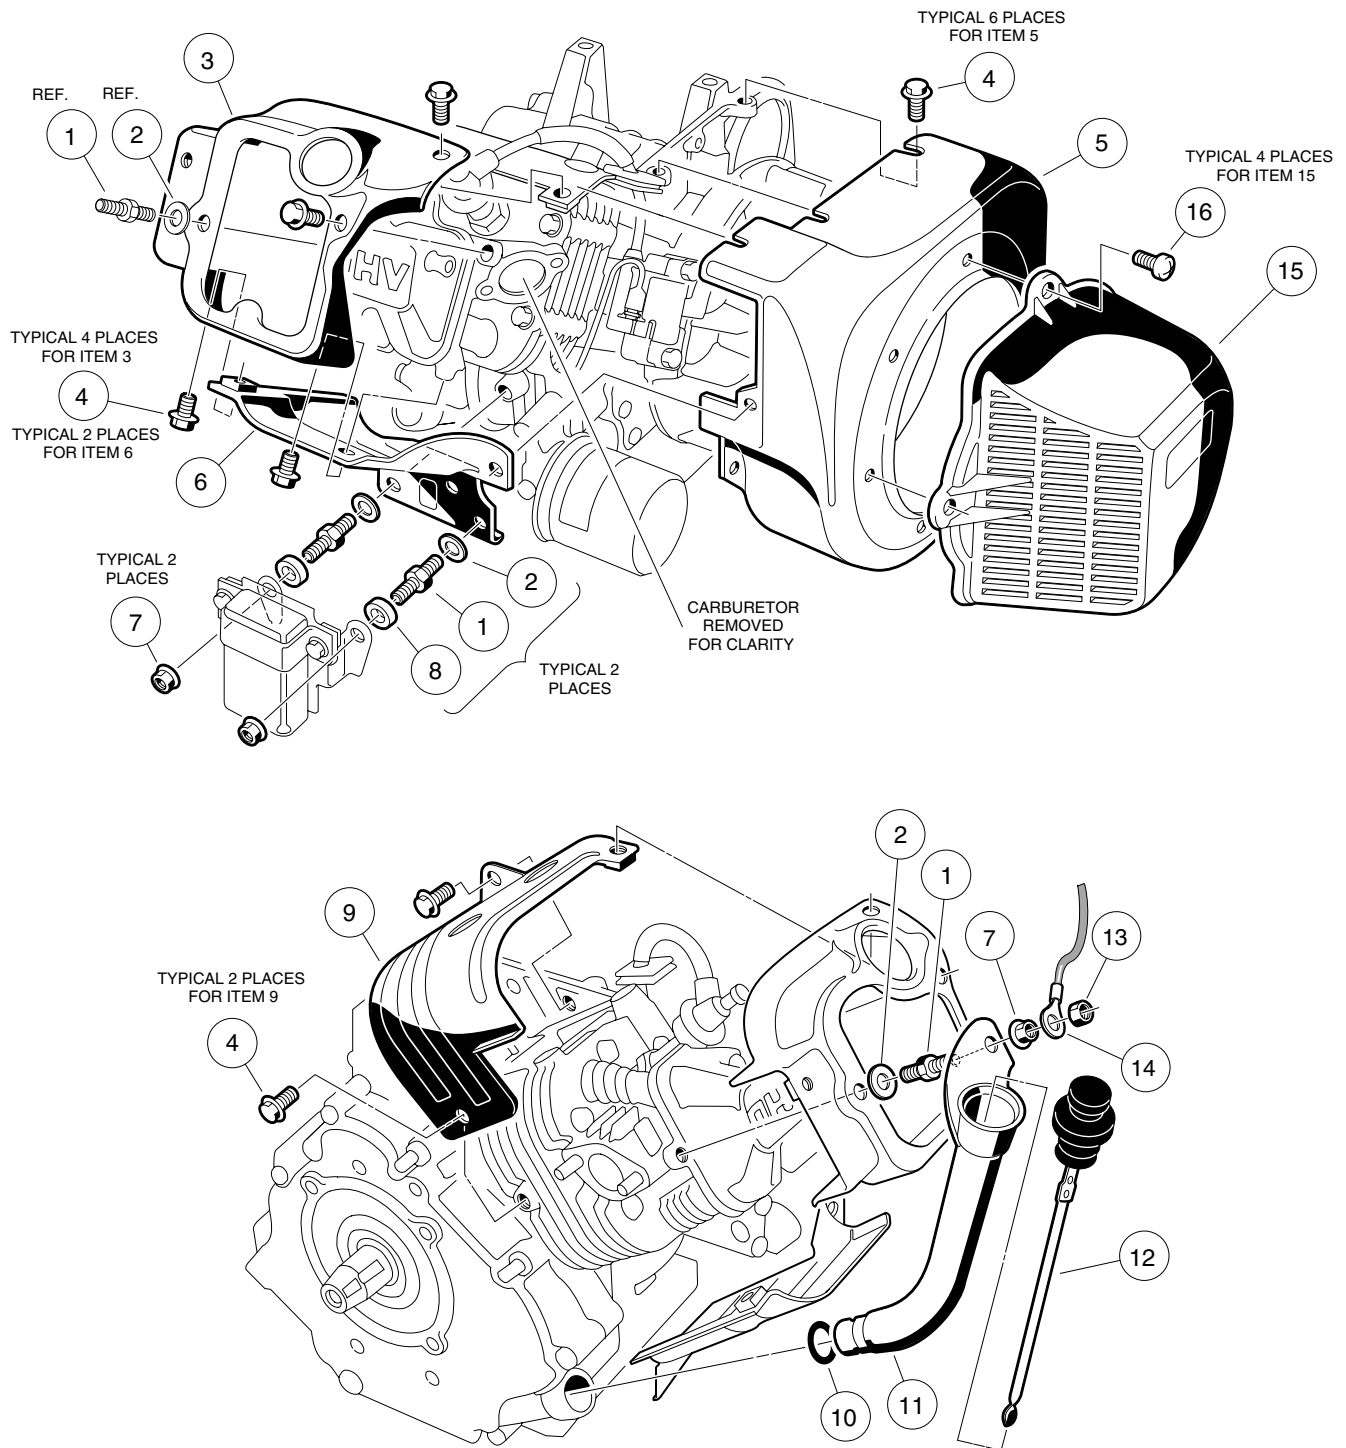


FE350 ENGINE – SHROUDS AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>101953801</u>	FE350 OHV Gasoline Engine, Complete (Clockwise Rotation) with Carburetor (With Compression Release) (Does Not Include Items 13 - 16)	1
1	<u>1016507</u>	Bolt, 2-Ended, M6 x 1 x 29 mm	3
2	<u>1016512</u>	Washer, Flat, 6 mm	3
3	<u>1017474</u>	Shroud, Cylinder Head	1
4	<u>1016456</u>	Bolt, Flanged, M6 x 1 x 12 mm	14
5	<u>101916101</u>	Housing, Fan	1
6	<u>1017476</u>	Shroud, Lower Cylinder	1
7	<u>1016547</u>	Nut, Flanged, M6 x 1	3
8	<u>1017500</u>	Spacer	2
9	<u>1017475</u>	Shroud, Upper Cylinder	1
10	<u>1016539</u>	O-Ring	1
11	<u>1017486</u>	Tube, Oil Filler	1
12	<u>1016531</u>	Dipstick	1
13	<u>101887601</u>	Nut, Nylon Lock, M6 x 1	1
14	<u>1015332</u>	Wire Assembly, #10 Braided Ground	1
15	<u>1015649</u>	Shroud, Fan	1
16	<u>1015969</u>	Screw, Pan Head, M6 x 1 x 14 mm	4

8


G

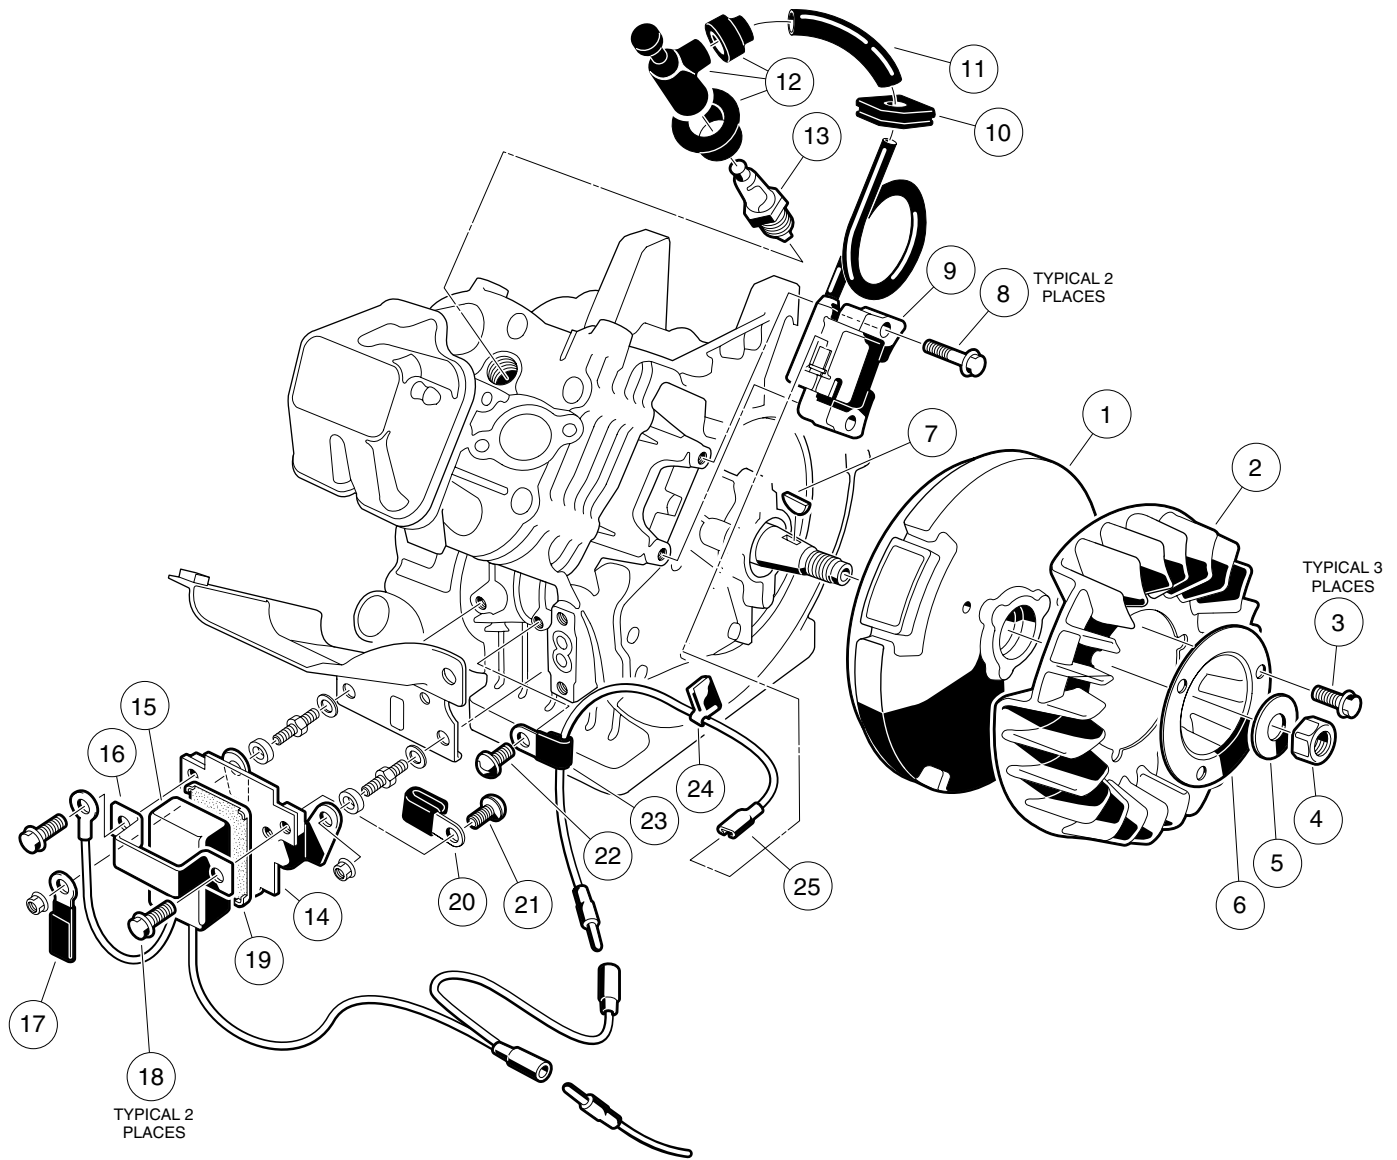

FE350 ENGINE – IGNITION COMPONENTS AND FLYWHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101916201</u>	Flywheel	1
2	<u>101916301</u>	Fan, Flywheel – Gray	1
3	<u>1017448</u>	Screw, Flanged Hex Head, M6 x 1 x 10 mm	3
4	<u>1017467</u>	Nut, Hex, 18 mm Fine	1
5	<u>1017490</u>	Washer, Flat, 18 mm	1
6	<u>1017455</u>	Plate, Flywheel Fan	1
7	<u>1016562</u>	Key	1
8	<u>1016455</u>	Screw, Hex Head Flanged, M5 x 0.8 x 25 mm	2
9	<u>101909201</u>	Coil, Ignition (with Internal Igniter)	1
10	<u>1016578</u>	Grommet	1
11	<u>1016588</u>	Tube, 7 mm I.D. x 10 mm O.D. x 70 mm Long	1
12	<u>1017463</u>	Cap, Plug	1
13	<u>101881101</u>	Plug, Spark, OHV (Autolite®)	1
13	S01010502	Plug, Spark, OHV (NGK®)	1
14	1016445	Bracket, RPM Limiter	1
15	101909401	Limiter, RPM	1
16	<u>1016579</u>	Band, RPM Limiter Mount	1
17	<u>1012981</u>	Clamp	1
18	1016456	Screw, Flanged Hex Head, M6 x 1 x 12 mm	2
19	1016586	Damper	1
20	101909501	Clamp	1
21	<u>1016497</u>	Screw, Cross Pan Head, M5 x .08 x 8 mm	1
22	<u>1016544</u>	Screw, Cross Pan Head Self-Tapping, M5 x 12 mm	1
23	<u>1016561</u>	Clamp	1
24	<u>1016587</u>	Clamp	1
25	<u>101909301</u>	Wire, Lead	1


8
G

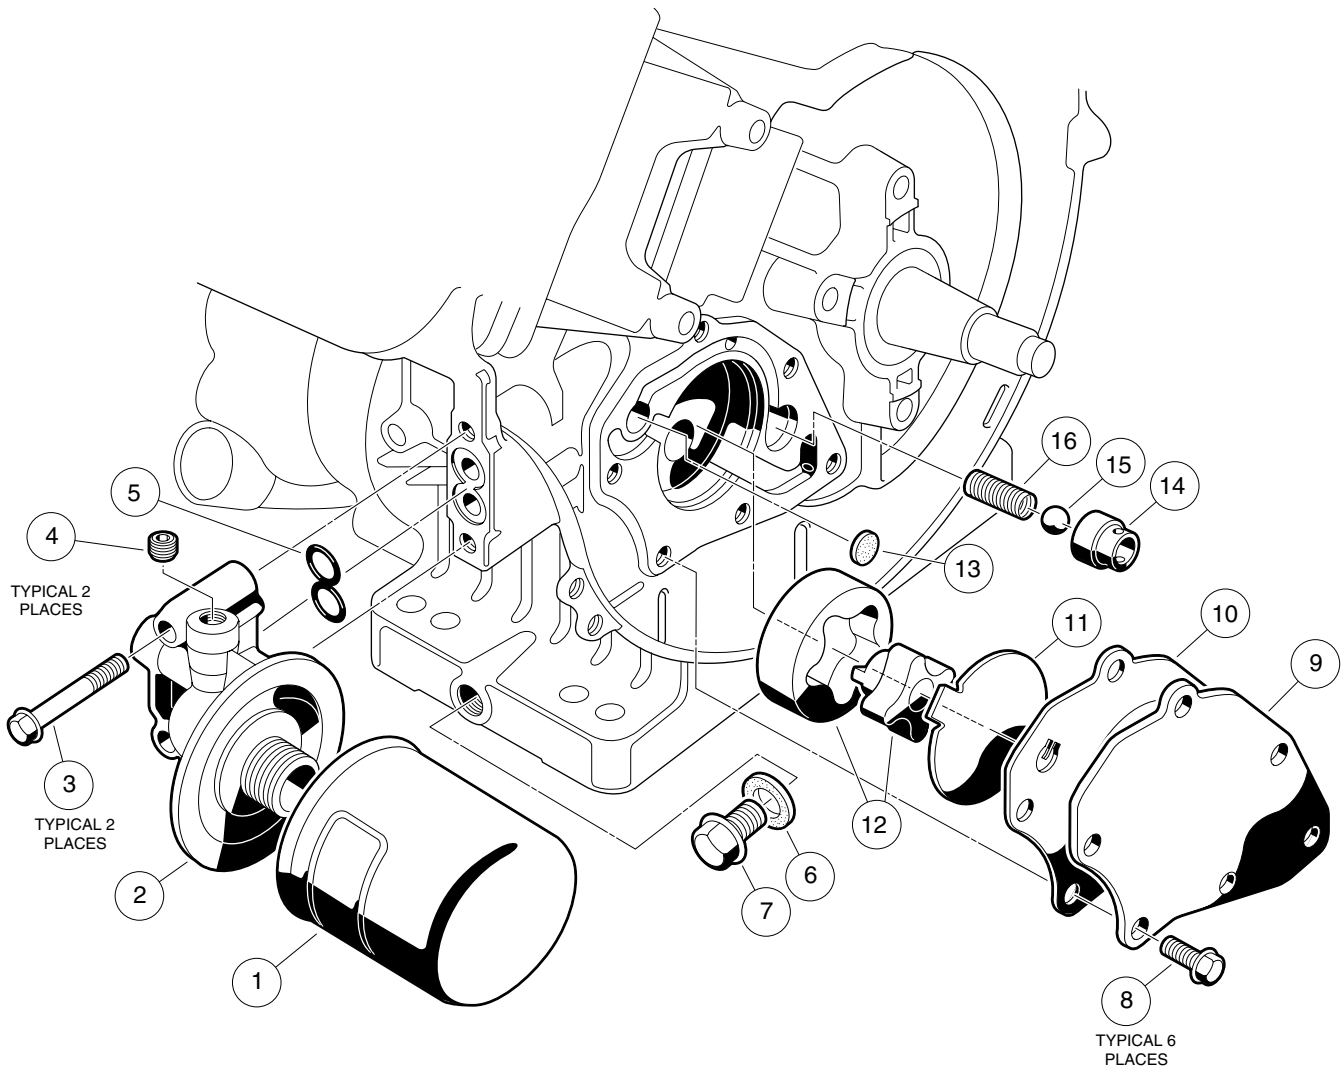

FE350 ENGINE – OIL CIRCULATION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016467</u>	Oil Filter	1
2	<u>1016502</u>	Bracket, Oil Filter	1
3	<u>1016457</u>	Bolt, Flanged Hex Head, M6 x 1 x 40 mm	2
4	<u>1017507</u>	Plug	2
5	<u>1016570</u>	O-Ring	1
6	<u>1016432</u>	Gasket, Drain Plug	1
7	<u>1016576</u>	Plug, Drain	1
8	<u>1017456</u>	Screw, Flanged Hex Head, M6 x 1 x 12 mm	6
9	<u>1017460</u>	Cover, Pump	1
10	<u>1017442</u>	Gasket, Oil Pump	1
11	<u>1016473</u>	Plate, Oil Pump	1
12	<u>101648203</u>	Pump, Oil and Rotor	1
13	<u>1017458</u>	Filter	1
14	<u>1016429</u>	Seat, Valve	1
15	<u>1016537</u>	Ball, Steel Pressure Relief	1
16	<u>1016581</u>	Spring	1


8
G

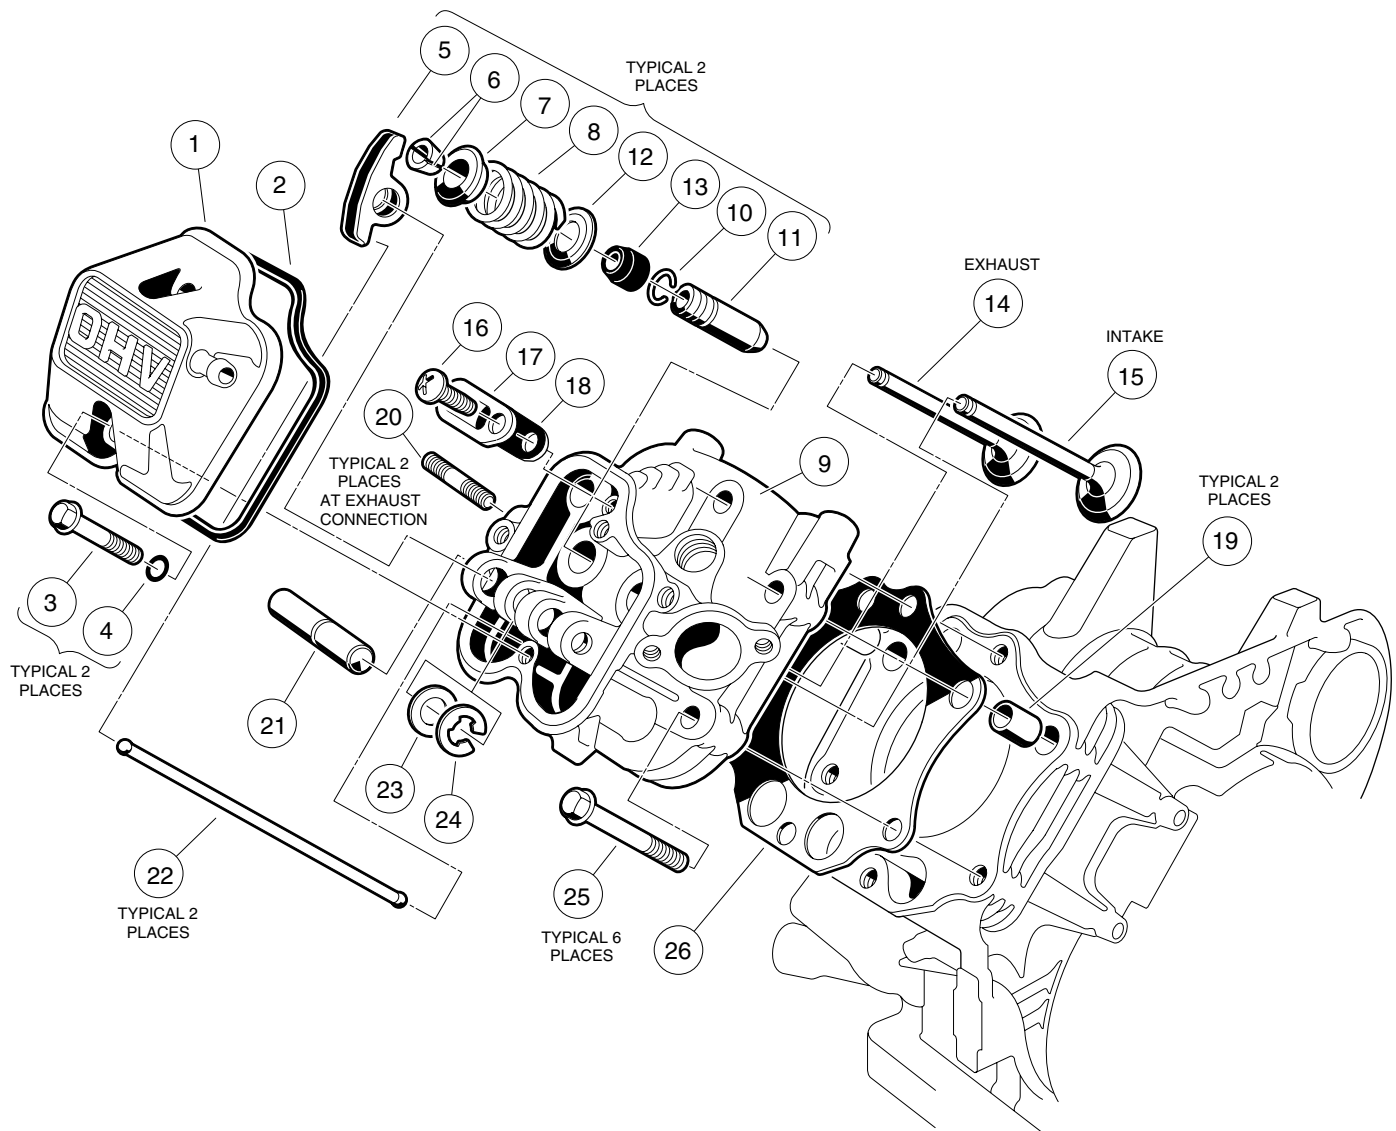

FE350 ENGINE – CYLINDER HEAD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016442</u>	Case, Rocker	1
2	<u>1016436</u>	Gasket, Rocker Case	1
3	<u>1016583</u>	Bolt, Flanged, M6 x 1 x 35 mm	2
4	<u>1016569</u>	O-Ring	2
5	<u>1017446</u>	Arm, Rocker	2
6	<u>1016450</u>	Collet	4
7	<u>1016449</u>	Retainer, Valve Spring	2
8	<u>1017473</u>	Spring, Engine Valve	2
9	<u>1017435</u>	Assembly, Cylinder Head, FE350 (Includes Items 10 and 11)	1
10	<u>1016560</u>	Ring, Snap	2
11	<u>1016519</u>	Guide, Valve	2
12	<u>1016479</u>	Seat, Spring	2
13	<u>1016566</u>	Seal, Valve	2
14	<u>1017445</u>	Valve, Exhaust	1
15	<u>1017444</u>	Valve, Intake	1
16	<u>1016544</u>	Screw, Cross Pan Head Self-Tapping, M5 x .8 x 12 mm	1
17	<u>1016474</u>	Plate	1
18	<u>1016483</u>	Valve	1
19	<u>1016563</u>	Pin, Hollow	2
20	<u>1016489</u>	Bolt, Stud, M8 x 1.25 x 29 mm	2
21	<u>1016452</u>	Shaft, Rocker	1
22	<u>1017454</u>	Rod, Push	2
23	<u>1016549</u>	Washer, Flat, M12	1
24	<u>1016517</u>	Circlip, Type-E	1
25	<u>1016458</u>	Bolt, Flanged, M8 x 1.25 x 45 mm	6
26	<u>1017434</u>	Gasket, Head	1


8
G

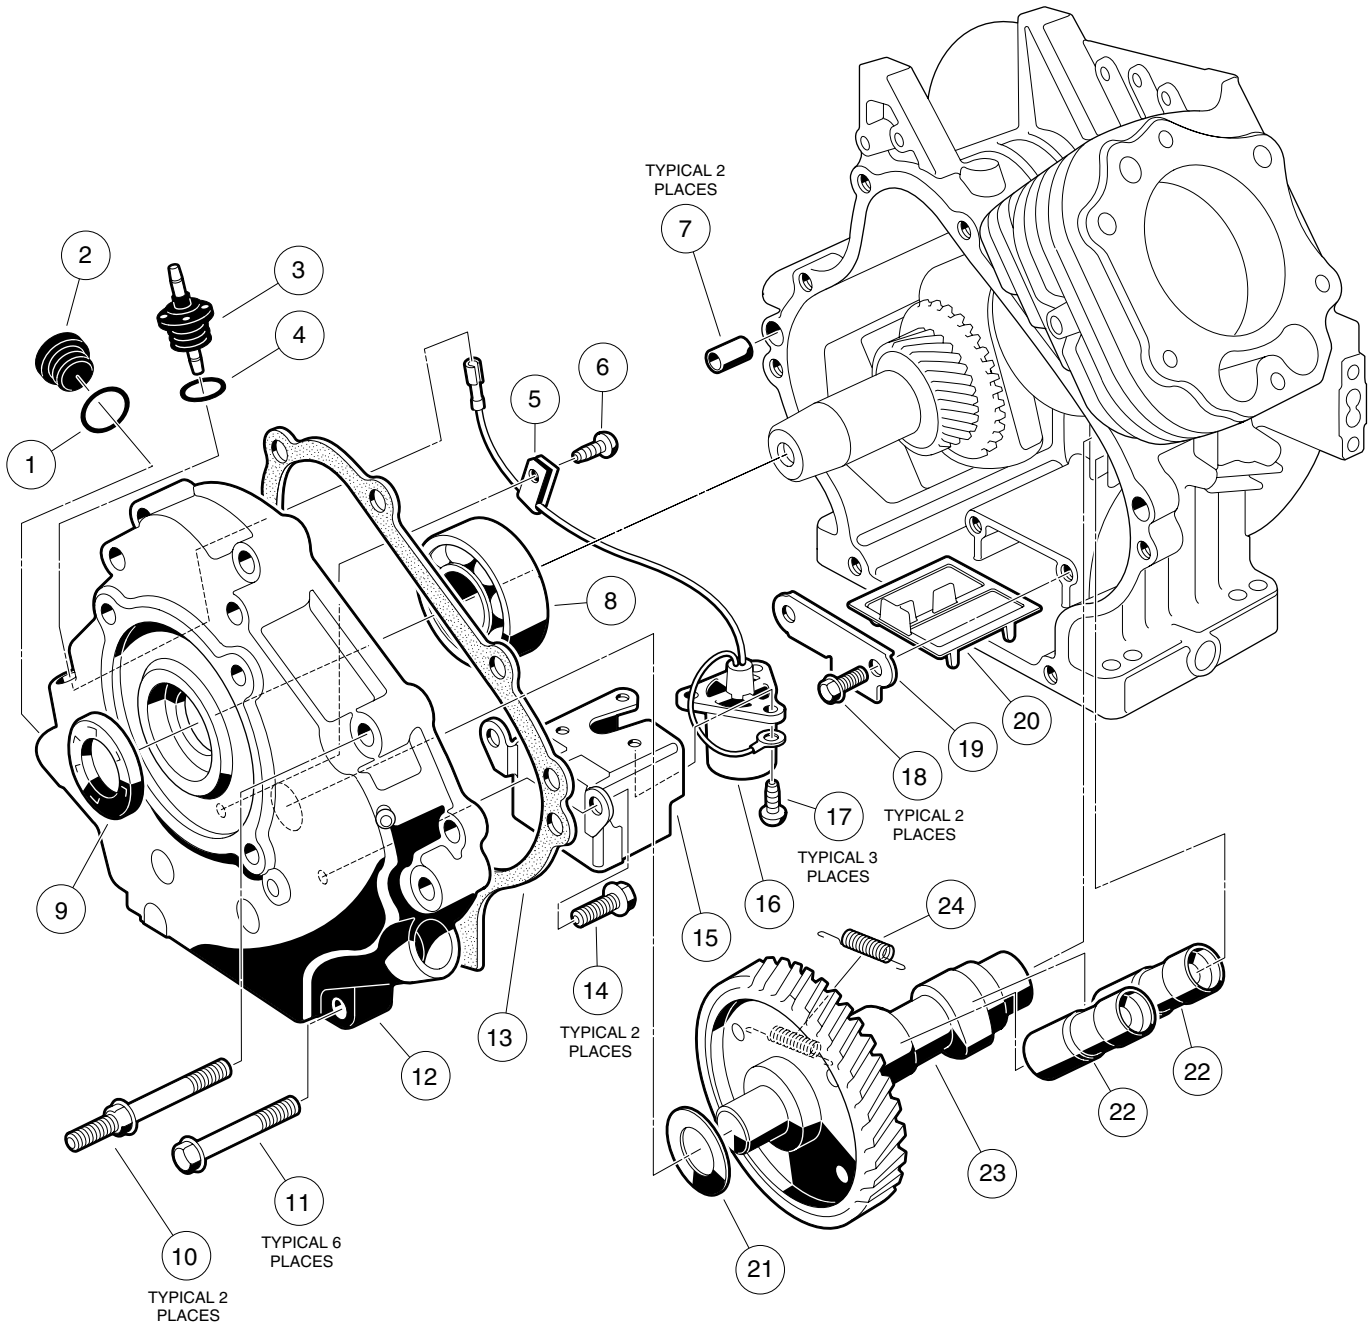

FE350 ENGINE – CRANKCASE, CAMSHAFT AND OIL SENSOR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016538</u>	O-Ring	1
2	<u>1017508</u>	Plug	1
3	<u>1016535</u>	Connector, Oil Sending Unit	1
4	<u>1016538</u>	O-Ring	1
5	<u>1016506</u>	Clamp	1
6	<u>1016544</u>	Screw, Cross Pan Head Self-Tapping, M5 x .8 x 12 mm	1
7	<u>1016564</u>	Pin, Hollow	2
8	<u>1017487</u>	Bearing, Crankshaft	1
9	<u>1017504</u>	Seal, Crankshaft	1
10	<u>1016584</u>	Bolt, 2-Ended Flanged, M8 x 1.25 x 69 mm	2
11	<u>1017514</u>	Bolt, Flanged, M8 x 1.25 x 45 mm	6
12	<u>1017472</u>	Cover, Crankcase	1
13	<u>1017443</u>	Gasket, Crankcase Cover	1
14	<u>1017513</u>	Bolt, Flanged, M6 x 1 x 12 mm	2
15	<u>1016510</u>	Bracket, Oil Level Switch	1
16	<u>1016494</u>	Sensor, Oil Level	1
17	<u>1016496</u>	Screw, Cross Pan Head, M4 x .7 x 8 mm	3
18	<u>1016454</u>	Bolt, Flanged, M5 x .8 x 8 mm	2
19	<u>1016472</u>	Plate, Oil Filter Screen	1
20	<u>1016521</u>	Screen, Oil Filter	1
21	<u>101751801</u>	Shim, 0.3 mm Thick	A/R
21	<u>101751802</u>	Shim, 0.4 mm Thick	A/R
21	<u>101751803</u>	Shim, 0.5 mm Thick	A/R
22	<u>1017447</u>	Lifter, Hydraulic	2
23	<u>101915901</u>	Camshaft (With Compression Release) (Includes Item 24)	1
24	<u>1017511</u>	Spring	1

8
G

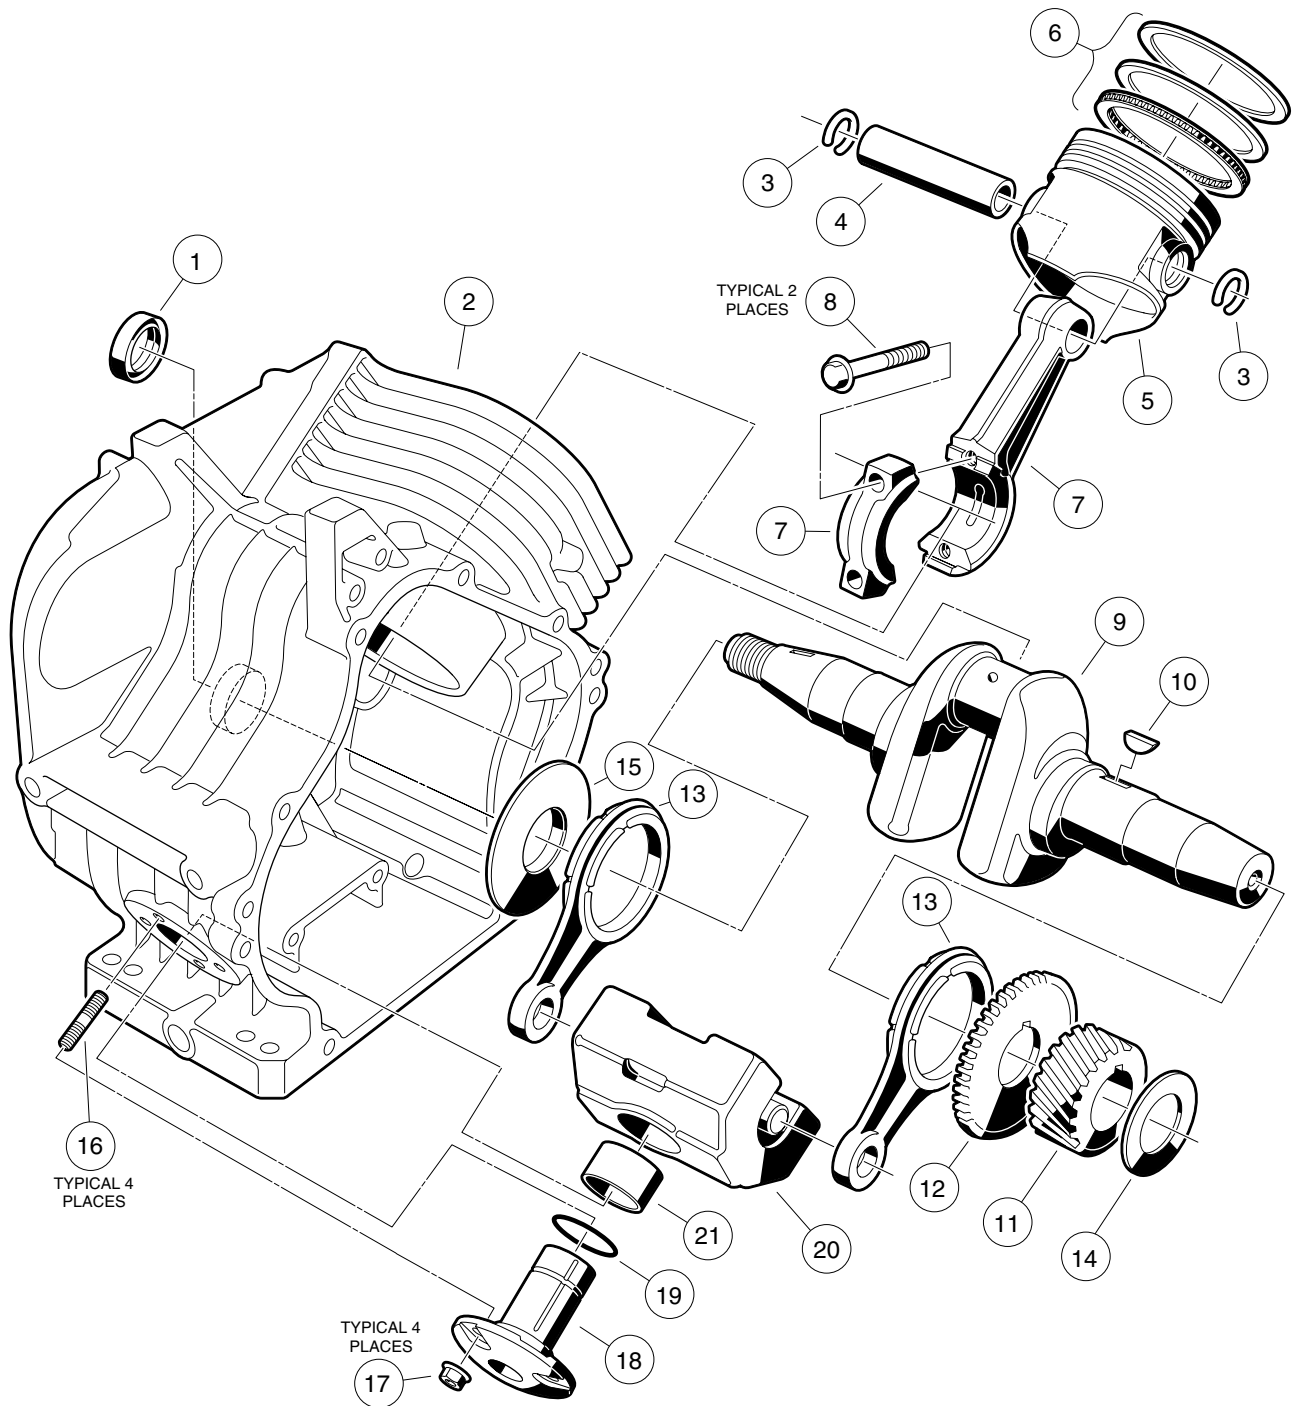

FE350 ENGINE – CRANKCASE AND CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1017503</u>	Seal, Oil	1
2	<u>101916001</u>	Crankcase, FE350 (Clockwise Rotation)	1
3	<u>1017502</u>	Ring, Snap	2
4	<u>1017450</u>	Pin, Piston	1
5	<u>101744901</u>	Piston, Standard	1
5	<u>101744902</u>	Piston, .50 mm Oversized	1
6	<u>101745101</u>	Ring Set, Piston, Standard	1
6	<u>101745102</u>	Ring Set, Piston, .50 mm Oversized	1
7	<u>101745701</u>	Assembly, Connecting Rod, Standard (Includes 2 Each of Item 8)	1
7	<u>101745702</u>	Assembly, Connecting Rod, .50 mm Undersized (Includes 2 Each of Item 8)	1
8	<u>1017512</u>	Bolt, Hex Head, M7 x 1 x 36 mm	2
9	<u>101922302</u>	Crankshaft, FE350 (Left-Hand Threads) (Includes Items 10 - 12 and One Each of Item 13)	1
10	<u>1016562</u>	Key	1
11	<u>1017484</u>	Gear, Helical	1
12	<u>1017483</u>	Gear, Spur	1
13	<u>1017471</u>	Rod, Connecting	2
14	<u>101773301</u>	Shim, Crankshaft, 1.18 mm Thick	A/R
14	<u>101773302</u>	Shim, Crankshaft, 1.25 mm Thick	A/R
14	<u>101773303</u>	Shim, Crankshaft, 1.32 mm Thick	A/R
14	<u>101773304</u>	Shim, Crankshaft, 1.39 mm Thick	A/R
14	<u>101773305</u>	Shim, Crankshaft, 1.46 mm Thick	A/R
14	<u>101773306</u>	Shim, Crankshaft, 1.53 mm Thick	A/R
14	<u>101773307</u>	Shim, Crankshaft, 1.60 mm Thick	A/R
14	<u>101773308</u>	Shim, Crankshaft, 1.67 mm Thick	A/R
14	<u>101773309</u>	Shim, Crankshaft, 1.74 mm Thick	A/R
14	<u>101773310</u>	Shim, Crankshaft, 1.11 mm Thick	A/R
14	<u>101773311</u>	Shim, Crankshaft, 1.81 mm Thick	A/R
15	<u>1017501</u>	Spacer	1
16	<u>1016541</u>	Bolt, Stud, M6 x 1 x 22 mm	4
17	<u>1016547</u>	Nut, Flanged, M6 x 1	4
18	<u>1016470</u>	Shaft, Guide Counterbalance	1
19	<u>1016571</u>	O-Ring	1
20	<u>1017453</u>	Weight, Counterbalance (Includes Item 21)	1
21	<u>1017510</u>	Bearing	1

8
G



ENGINE MOUNTING

8


G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012164	Snubber	1
2	<u>1013924</u>	Nut, Hex Lock, 5/16-24, UNF	10
3	<u>101834601</u>	Bracket, Snubber	1
4	<u>101827101</u>	Plate, Mounting	1
5	101833001	Nut, Flanged, M8 x 1.25	6
6	<u>101884801</u>	Screw, Hex Washer, 5/16-24 x 7/8	10
7	<u>101833301</u>	Screw, Hex Head Cap, M10 x 1.25 x 30 mm	4
8	<u>101833101</u>	Stud, M8 x 1.25 x 50 mm	2
9	<u>101832101</u>	Washer, Flat, 5/16	2
10	<u>101832901</u>	Nut, Flanged, M10 x 1.25	4
11	1012571	Washer, Heavy Flat, 5/16	4
12	<u>101855901</u>	Screw, Hex Head Cap, M8 x 1.25 x 43 mm	4
13	<u>101832701</u>	Stiffener, Flywheel Side	1
14	<u>101832601</u>	Stiffener, PTO Side	1

FUEL, INTAKE, AND GOVERNOR SYSTEMS

9

G

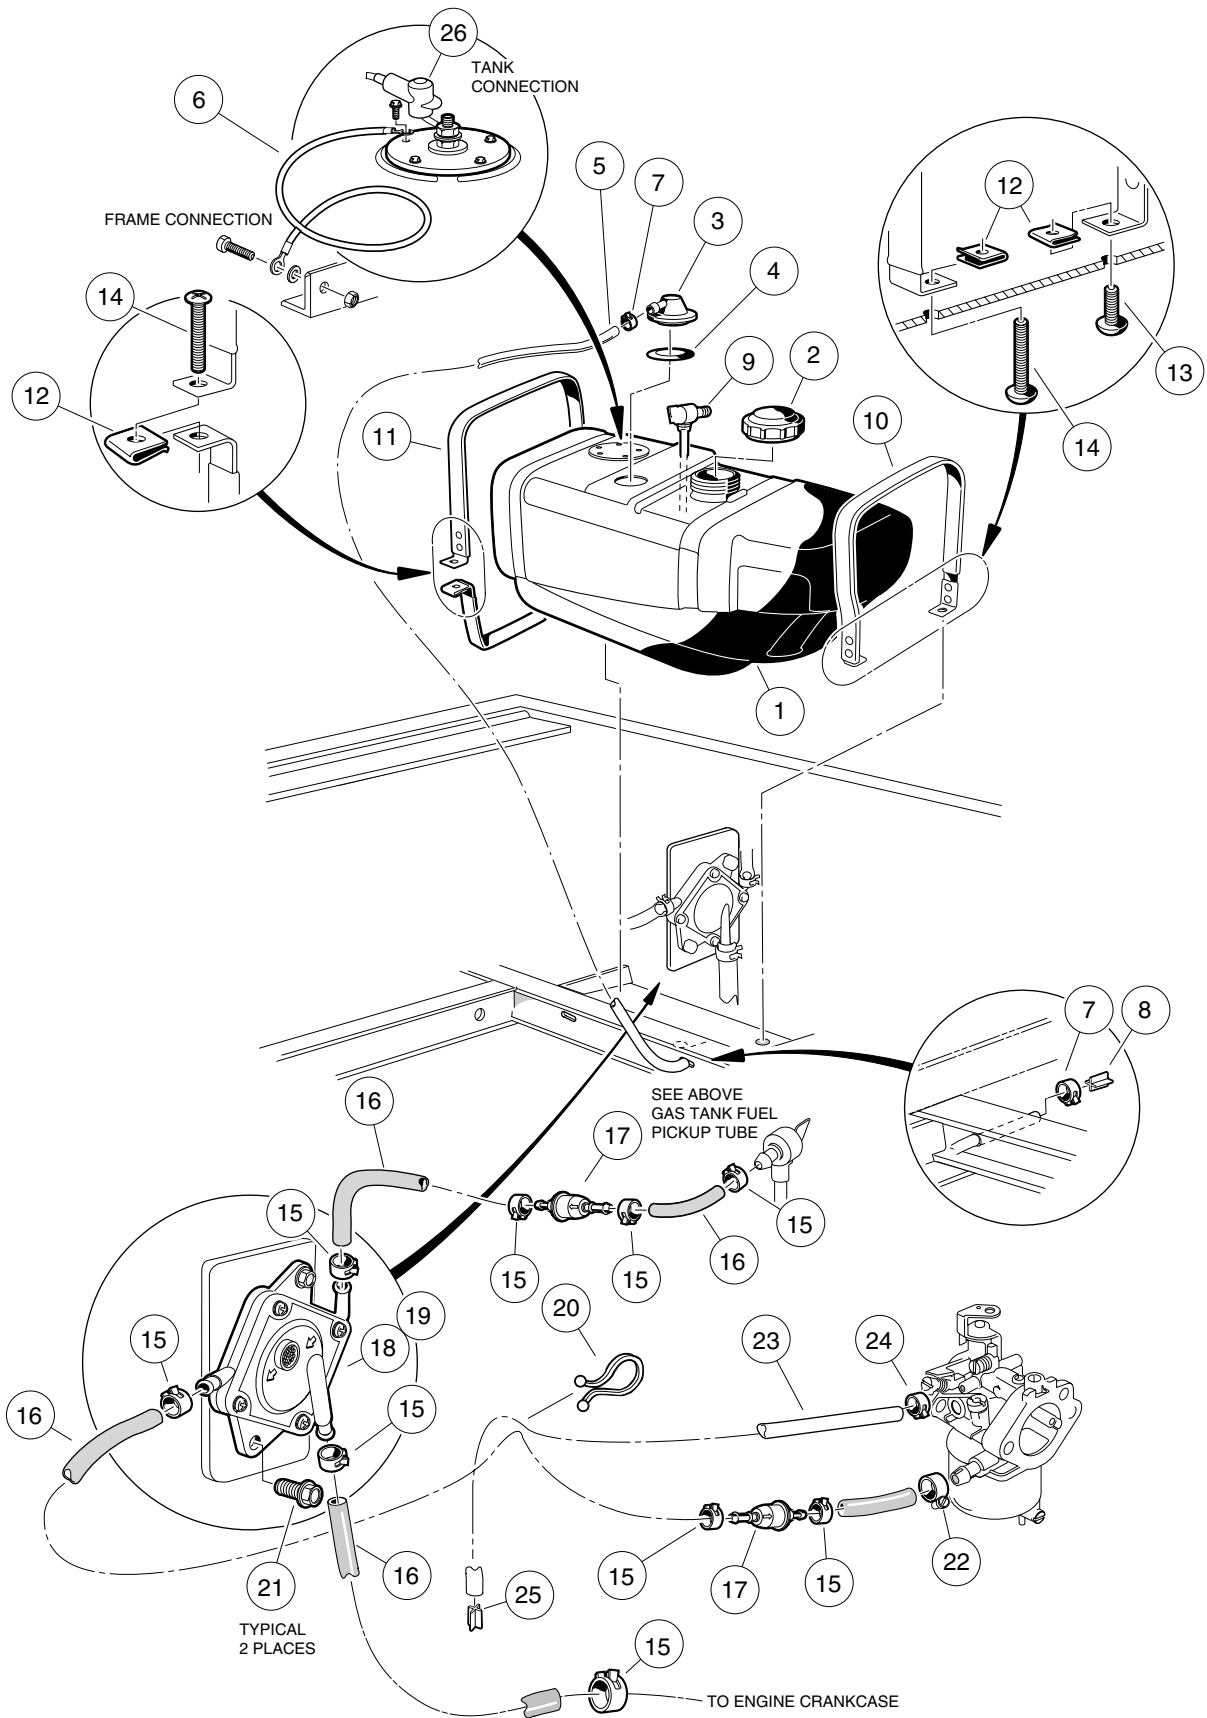


FUEL SYSTEM

9

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016004	Kit, Fuel Tank, with Sending Unit (Includes Items 2 - 9)	1
2	<u>1015188</u>	Cap, Fuel Tank, Nonvented	1
3	<u>1015143</u>	Vent, Fuel Tank	1
4	<u>1015139</u>	Grommet, Insulation	1
5	<u>1015137</u>	Line, Bulk Vent (Available by the Foot)	A/R
6	N/A	Wire Assembly, #16 Black	1
7	<u>1013746</u>	Clamp, Hose (Gray)	2
8	<u>101824401</u>	Barb, Vent	1
9	101896901	Valve, Fuel Pickup Tube with Shut-Off	1
10	<u>1014928</u>	Fuel Strap, Rear	1
11	<u>101955301</u>	Fuel Strap, Front	1
12	<u>1014116</u>	Nut, U-Type Speed, 1/4-20	3
13	<u>8248</u>	Screw, Phillips Truss Head, 1/4-20 x 3/4	1
14	<u>1011988</u>	Screw, Phillips Truss Head, 1/4-20 x 2	2
15	<u>1012649</u>	Clamp, Hose (Red)	9
16	<u>1013692</u>	Line, Bulk Fuel	A/R
17	<u>102003201</u>	Filter, Fuel	2
18	<u>1014523</u>	Pump, Fuel Impulse	1
19	<u>1014524</u>	Kit, Rebuild, Fuel Impulse Pump	A/R
20	<u>101987701</u>	Clamp, Plastic	1
21	<u>1012285</u>	Screw, Thread-Rolling, 1/4-20 x 5/8	2
22	<u>1013687</u>	Clamp, Hose (Screw Type)	1
23	<u>1015137</u>	Line, Bulk Vent (Available by the Foot)	A/R
24	<u>1013746</u>	Clamp, Hose (Gray)	1
25	<u>101824401</u>	Barb, Vent	1
26	N/A	Boot, Rubber	1

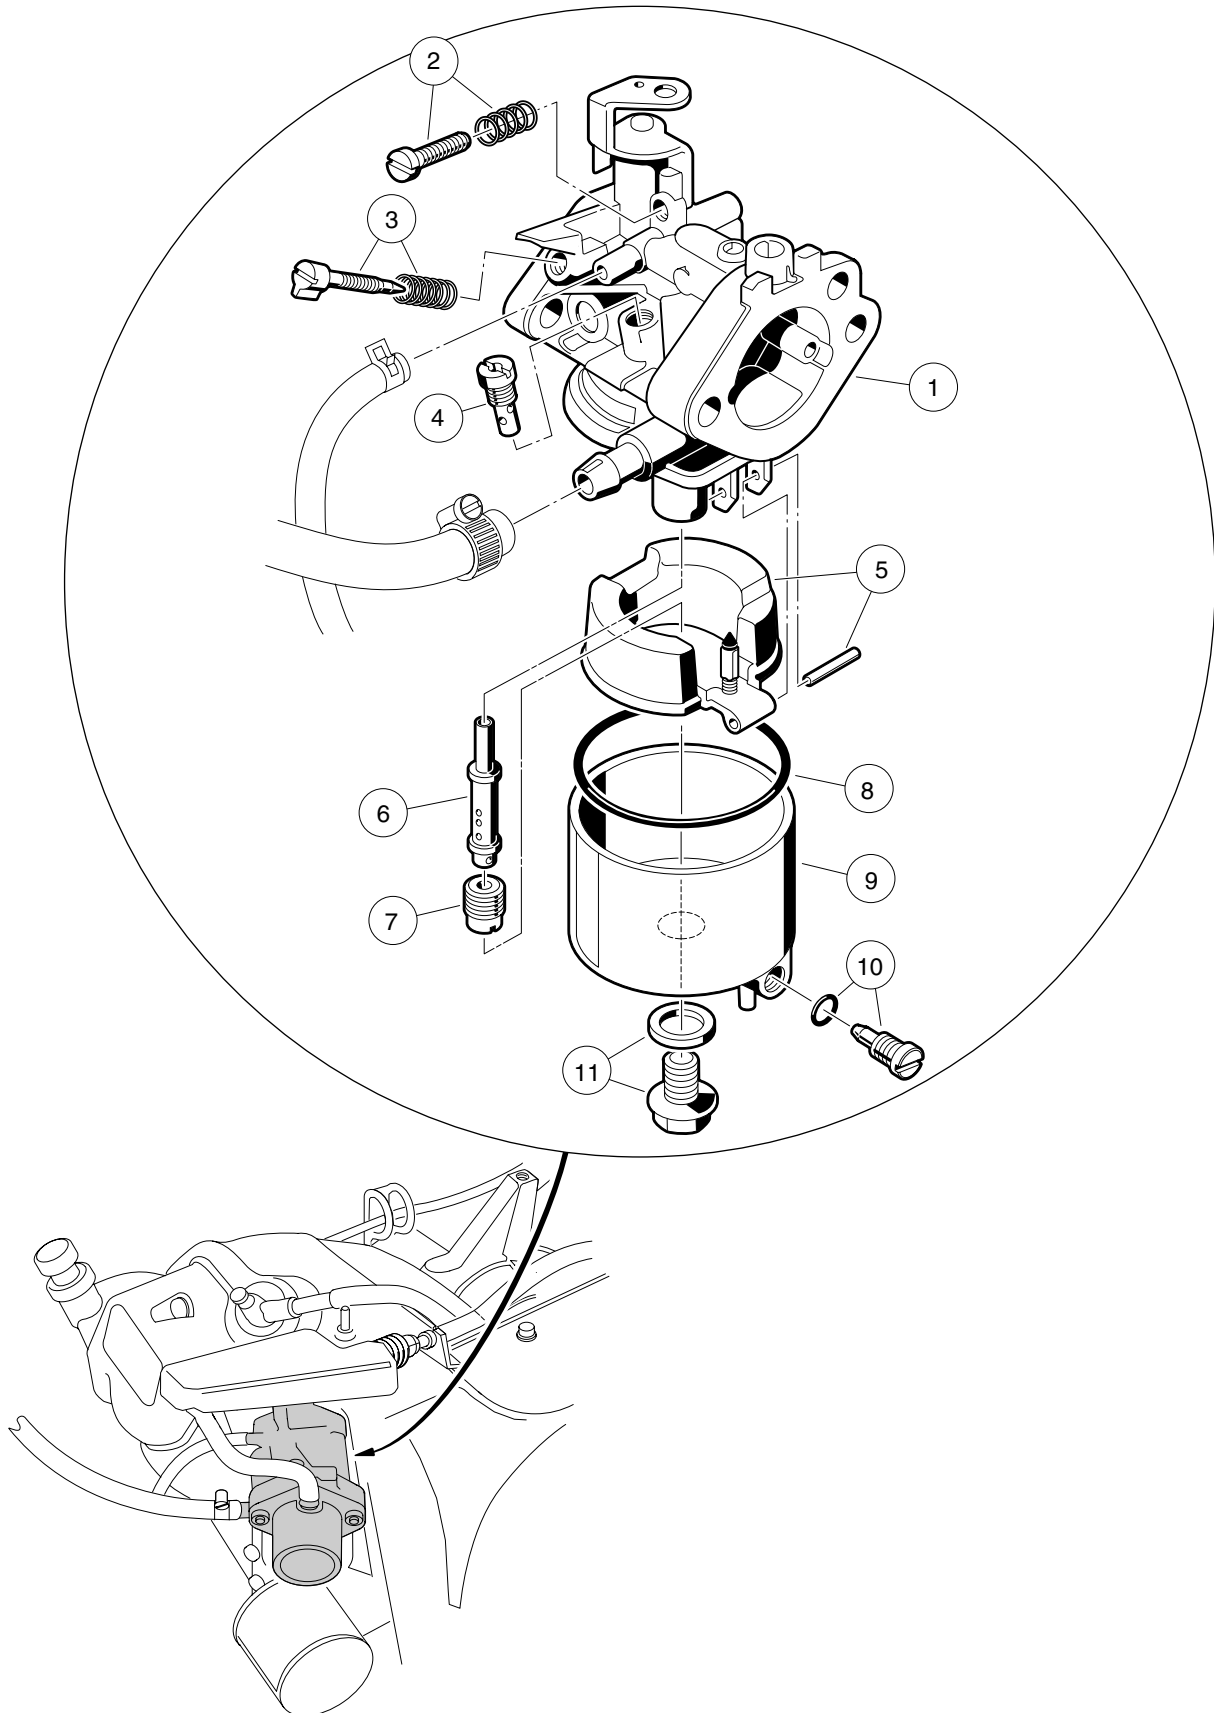


CARBURETOR ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101905901</u>	Assembly, Carburetor (Includes Items 2 - 11)	1
2	<u>1016501</u>	Assembly, Idle Screw	1
3	N/A	Assembly, Pilot Air Screw	1
4	<u>101973101</u>	Jet, Pilot, #40	1
5	1016486	Assembly, Float	1
6	<u>101973301</u>	Nozzle, Main	1
		Standard Jetting:	
7	<u>101642585</u>	Jet, Main, 0 - 3,000 feet	1
7	<u>101642582</u>	Jet, Main, 3,000 - 5,000 feet	A/R
7	<u>101642580</u>	Jet, Main, 5,000 - 8,000 feet	A/R
7	<u>101642578</u>	Jet, Main, 8,000 - 10,000 feet	A/R
7	<u>101642575</u>	Jet, Main, 10,000 Feet and Above	A/R
8	<u>1016437</u>	Gasket, Float Chamber	1
9	<u>1017461</u>	Assembly, Float Chamber (Includes Item 10)	1
10	<u>1016499</u>	Assembly, Screw	1
11	1016585	Assembly, Bolt	1

9

G

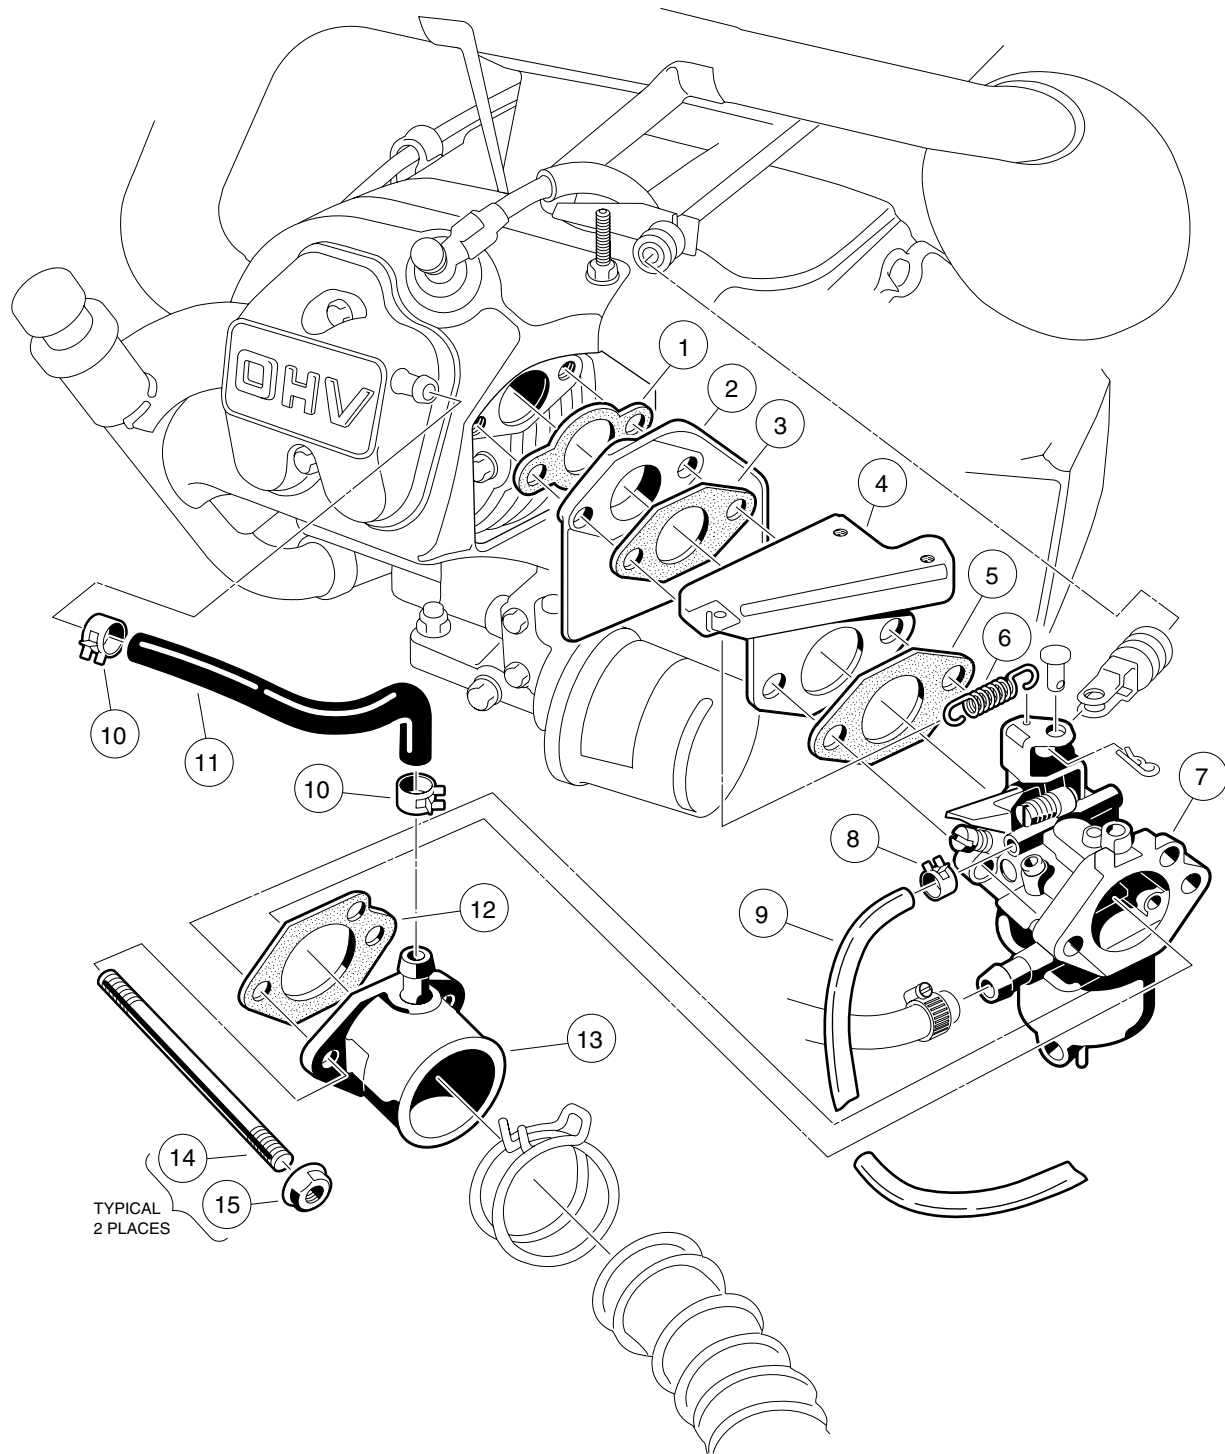


CARBURETOR INSTALLATION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016440</u>	Gasket, Insulator	1
2	<u>101648102</u>	Insulator, Carburetor	1
3	<u>101973401</u>	Gasket, Carburetor Insulator to Throttle Bracket	1
4	<u>1016444</u>	Bracket, Throttle	1
5	<u>1016441</u>	Gasket, Throttle Bracket to Carburetor	1
6	<u>1016582</u>	Spring, Throttle Return	1
7	<u>101905901</u>	Assembly, Carburetor	1
8	<u>1013746</u>	Clamp, Hose (Gray)	1
9	<u>1015137</u>	Line, Bulk Vent (Available by the Foot)	A/R
10	<u>1017466</u>	Clamp, Hose (Bronze)	2
11	<u>1016572</u>	Tube, Crankcase Vent	1
12	<u>1016438</u>	Gasket, Carburetor to Intake Manifold	1
13	<u>1016480</u>	Pipe, Intake	1
14	<u>101649002</u>	Screw, 2-Ended Stud, M6 x 1 x 90mm	2
15	<u>1016547</u>	Nut, Flanged, M6 x 1	2

9

G

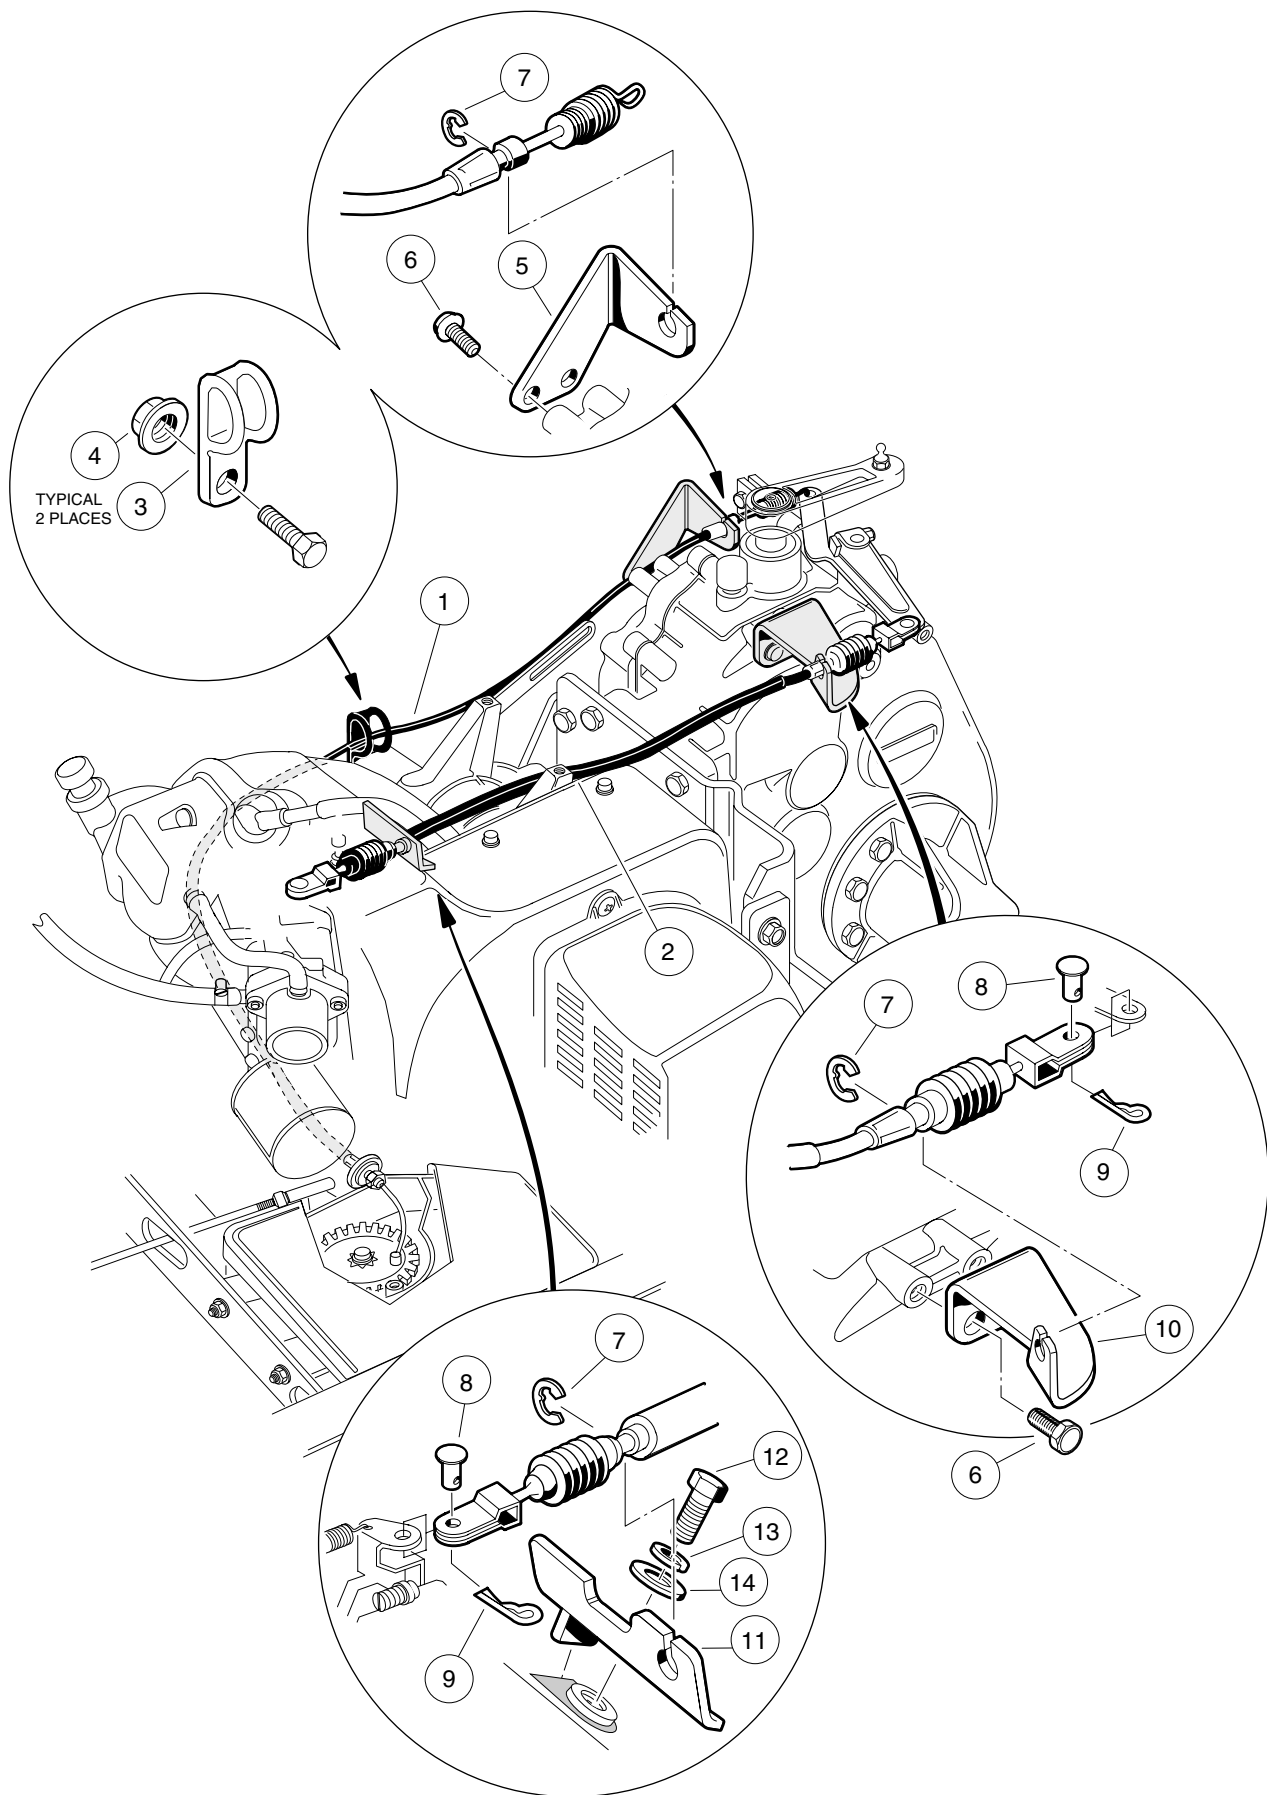


GOVERNOR AND ACCELERATOR CABLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101832501</u>	Cable, Accelerator	1
2	<u>101832402</u>	Cable, Governor	1
3	<u>1013700</u>	Clamp, Cable Retaining	2
4	<u>1016546</u>	Nut, Flanged Hex, M8 x 1.25	2
5	101832301	Bracket, Accelerator Support	1
6	<u>1012285</u>	Screw, Thread-Rolling, 1/4-20 x 5/8	4
7	<u>1016202</u>	E-Ring	3
8	<u>1015408</u>	Pin, Governor Cable Clevis	2
9	<u>1014413</u>	Pin, Hair Spring Cotter, 1/8 I.D. x 5/8	2
10	101832201	Bracket, Support	1
11	<u>1015845</u>	Bracket, Governor Cable Engine	1
12	101903501	Screw, Hex Head Cap, M8 x 1.25 x 24 mm	1
13	<u>7174</u>	Washer, Lock, 5/16	1
14	<u>1011697</u>	Washer, Flat, 5/16	1

9

G

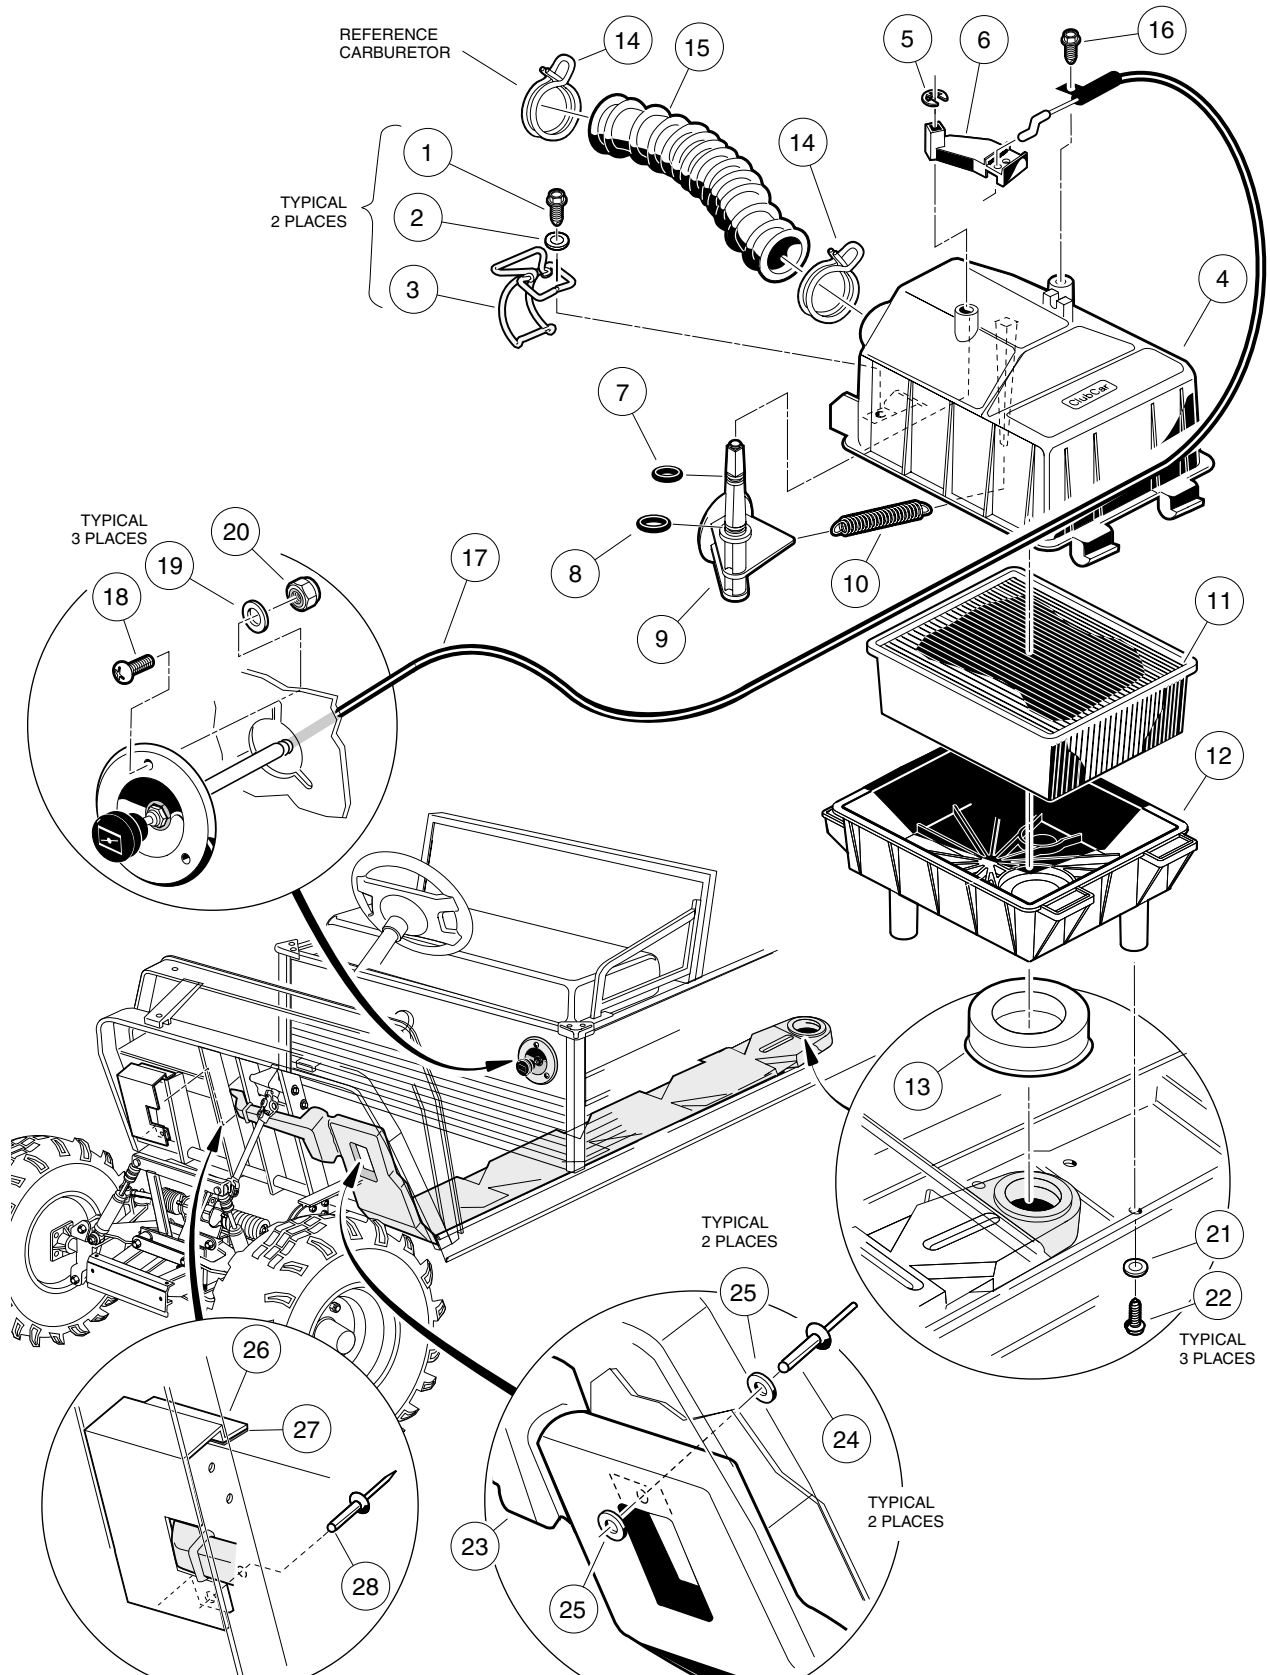

INTAKE DUCT, CHOKE, AND AIR BOX ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>101821501</u>	Assembly, Air Box (Includes Items 1 - 13).....	1
1	<u>101804301</u>	Screw, Hi-Lo Hex Head, #8 x 1/2	2
2	<u>101881701</u>	Washer, Stainless Steel, #8	2
3	<u>101925701</u>	Latch, Wire	2
4	<u>101972801</u>	Assembly, Air Box Top (Includes Items 5 - 10)	1
5	<u>101813001</u>	E-Clip	1
6	<u>101917601</u>	Lever, Choke	1
7	N/A	O-Ring, 5/16 (Red)	1
8	N/A	O-Ring, 3/8 (Green)	1
9	N/A	Valve, Choke	1
10	<u>101812301</u>	Spring, Return	1
11	<u>1015426</u>	Filter, Air	1
12	<u>101811901</u>	Bottom, Air Box	1
13	<u>101921501</u>	Seal, Intake	1
14	<u>101971301</u>	Clamp, Hose (Air Intake)	2
15	<u>101837101</u>	Hose, Intake	1
16	<u>101804301</u>	Screw, Hex Head Hi-Lo, #8 x 1/2	1
17	<u>101926801</u>	Cable, Choke	1
18	<u>1631</u>	Screw, Pan Head, #10-24 x 3/4	3
19	<u>183</u>	Washer, #10	3
20	<u>1012438</u>	Nut, Nylon Lock, #10-24	3
21	<u>332</u>	Washer, Flat, 1/4	3
22	1015752	Screw, Hi-Lo, #12-16 x 5/8	3
23	<u>101958102</u>	Duct, Air	1
24	1606	Rivet, Pop, 3/16	2
25	<u>183</u>	Washer, Flat, #10	4
26	102195201	Shield, Air Duct (Includes Item 27)	1
27	N/A	Tape, VHB 4950, 4-1/2 inches	1
28	<u>7973</u>	Rivet, Pop, 3/16	1
	101971001	Air Duct Repair Kit (Not Shown)	A/R


9

G

EXHAUST SYSTEM

10

G

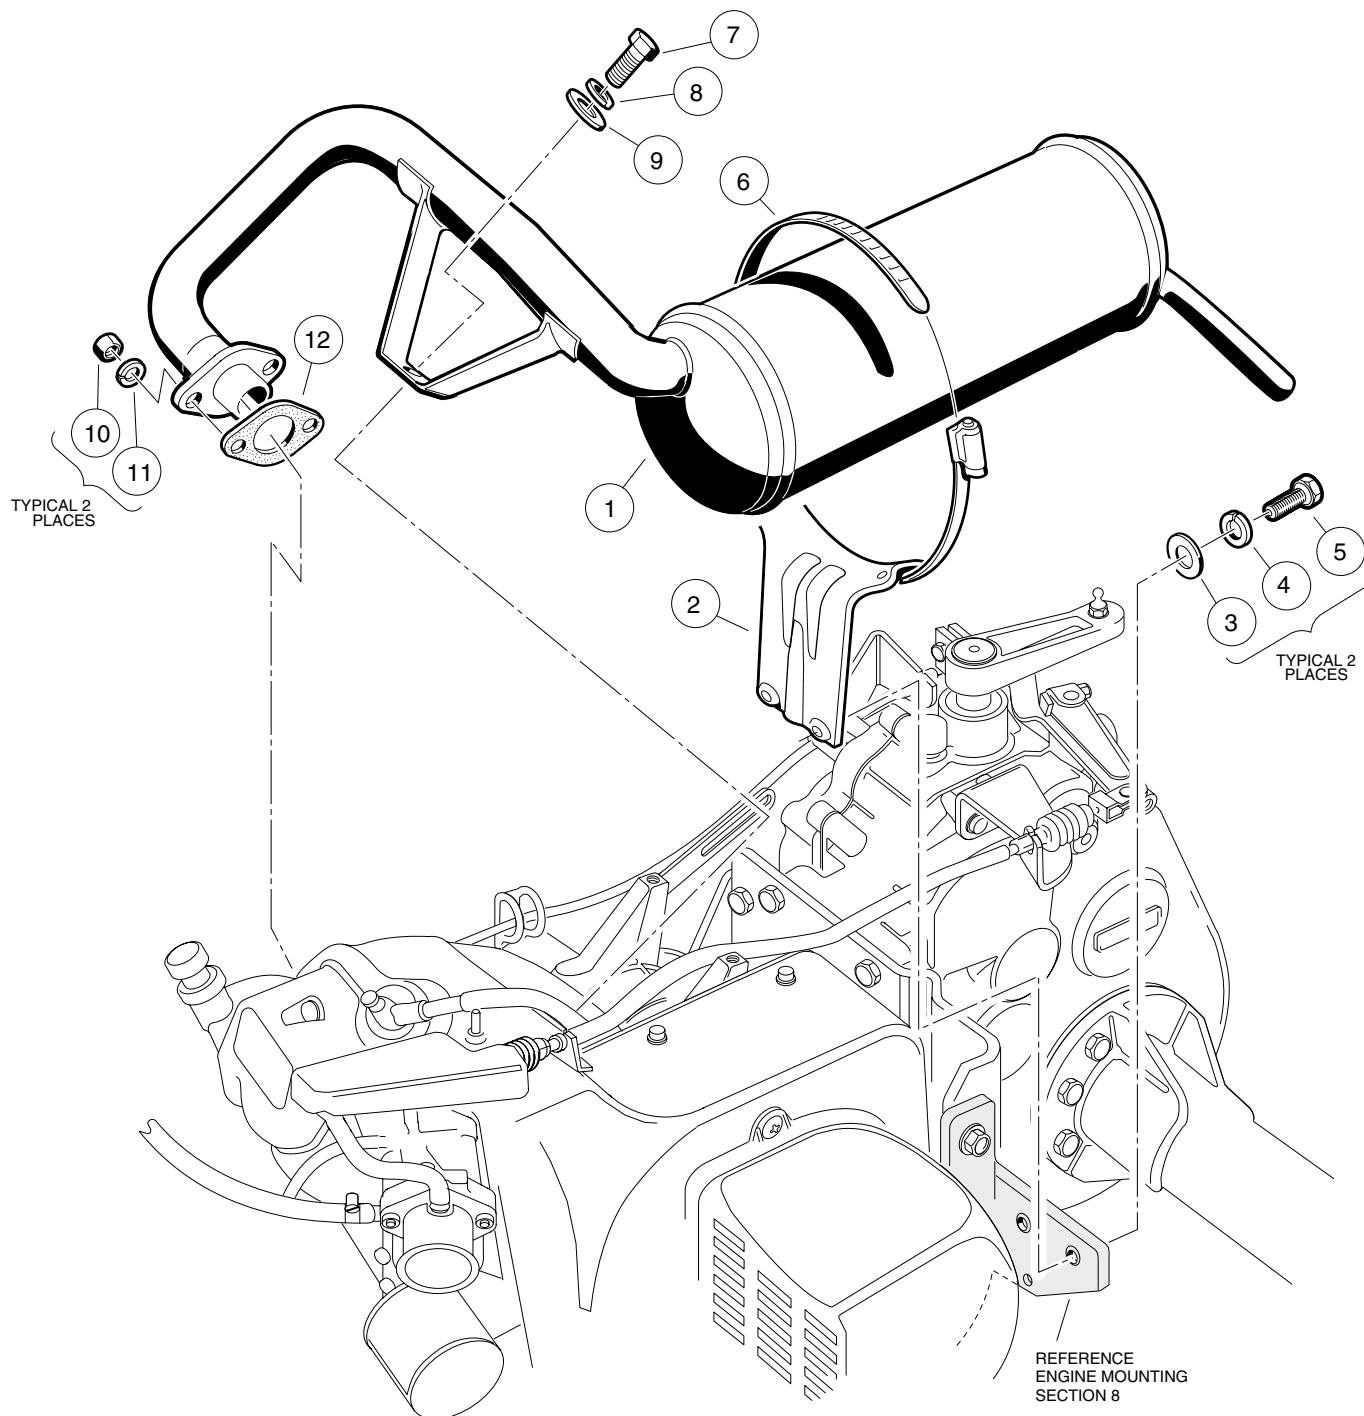

EXHAUST SYSTEM

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101859401</u>	System, Exhaust	1
2	<u>1015814</u>	Bracket, Muffler Mounting	1
3	<u>332</u>	Washer, Flat, 1/4	2
4	<u>451</u>	Washer, Lock, 1/4	2
5	<u>7847</u>	Screw, Hex Head, 1/4-20 x 3/4	2
6	1017689	Clamp, Muffler	1
7	<u>1012830</u>	Screw, Hex Head Cap, M8 x 1.25 x 22 mm	1
8	<u>7174</u>	Washer, Lock, 5/16	1
9	1015075	Washer, Flat, 5/16	1
10	<u>1012528</u>	Nut, Hex, M8 x 1.25	2
11	<u>1013734</u>	Washer, Lock, 8 mm	2
12	<u>1016904</u>	Gasket, Exhaust	1



10

G

TORQUE CONVERTER

11

G

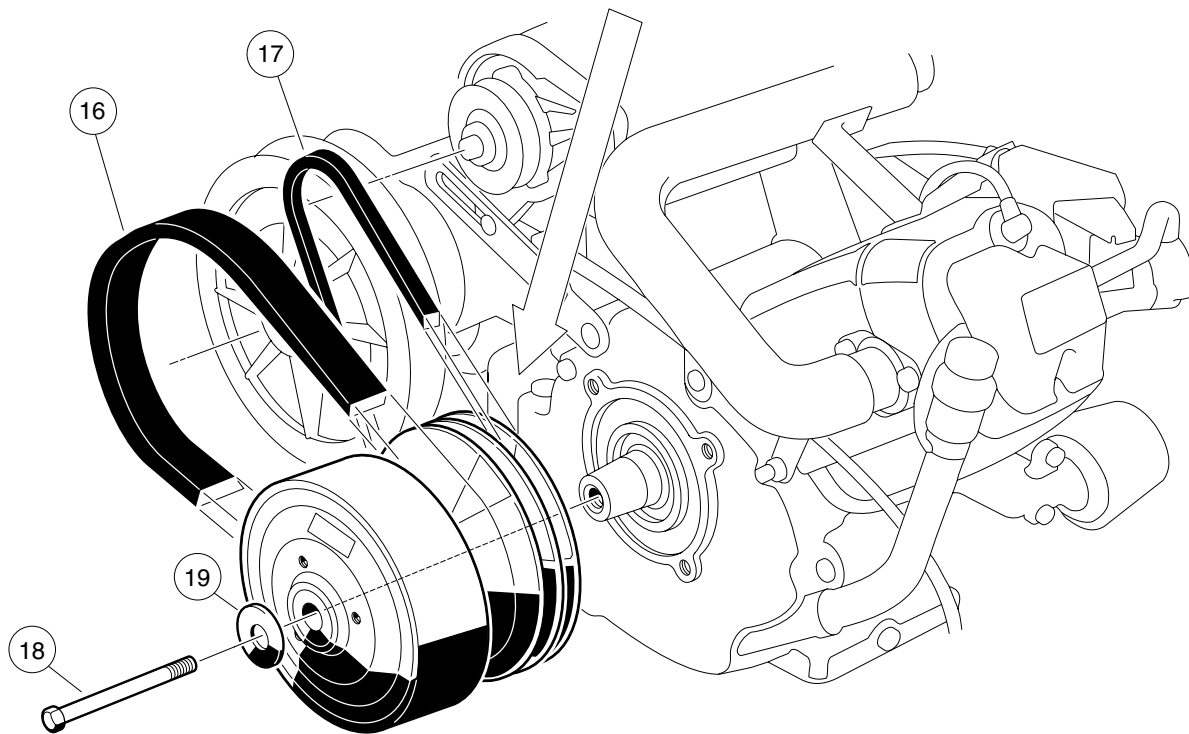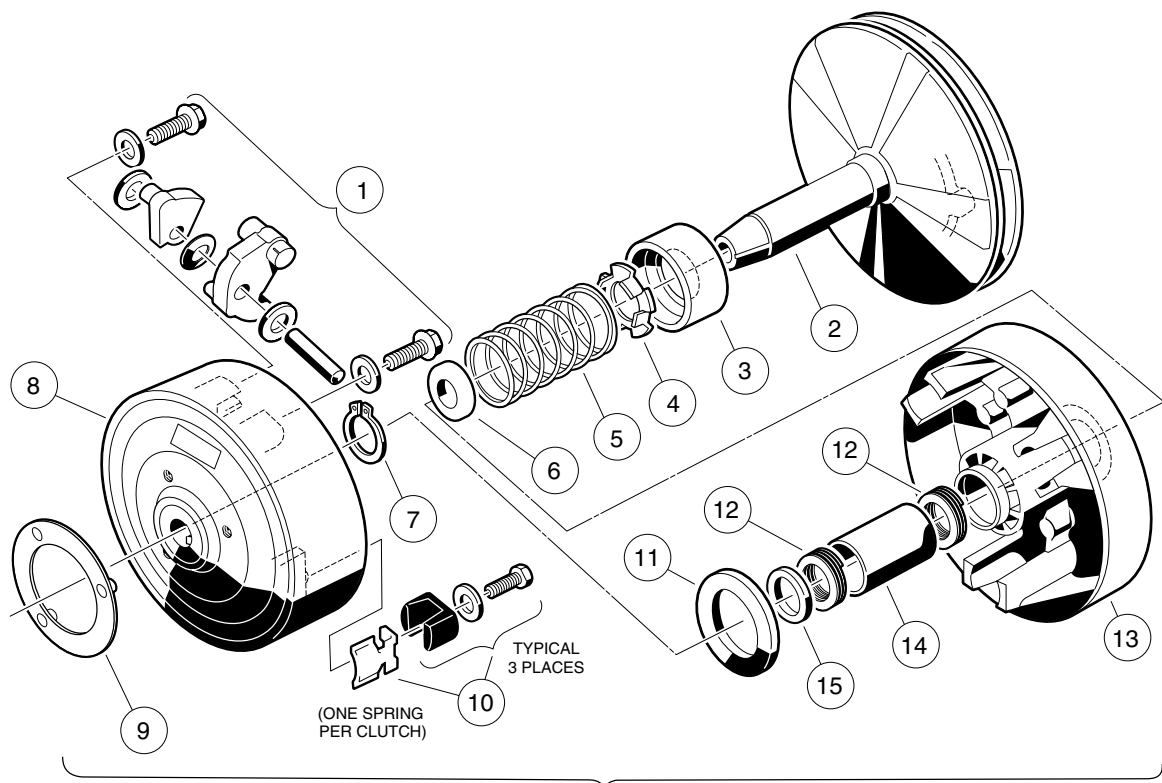


DRIVE CLUTCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>101833904</u>	Assembly, Drive Clutch (Includes Items 1 - 15)	1
1	<u>1016801</u>	Kit, Drive Clutch Weight	1
2	<u>101929801</u>	Assembly, Fixed Face	1
3	<u>1014049</u>	Bearing, Idler	1
4	<u>1014050</u>	Retainer, Spring	1
5	<u>1016901</u>	Spring, Drive Clutch – Green	1
6	<u>1016289</u>	Spacer, Fixed Face Shaft	1
7	<u>1014057</u>	Ring, Retaining	1
8	<u>1014059</u>	Assembly, Drive Hub	1
9	<u>101925601</u>	Plug, Drive Clutch	1
10	<u>1014453</u>	Kit, Drive Clutch Button (Includes One Spring and Three Each of the Screw, Washer, and Button)	1
11	<u>1014058</u>	Washer, Thrust	1
12	<u>1014056</u>	Ring, Spiral Back-Up	2
13	<u>1014052</u>	Assembly, Moveable Face (Includes Items 14 and 15)	1
14	N/A	Bushing	1
15	<u>1014055</u>	Retainer	1
16	<u>102188401</u>	Belt, Drive	1
17	<u>101916701</u>	Belt, Starter/Generator	1
18	<u>101916501</u>	Screw, Hex Head Cap, (Left-Hand Threads) 3/8-24 x 5-1/2	1
19	<u>1017328</u>	Washer, Drive Clutch – Green	1

11

G

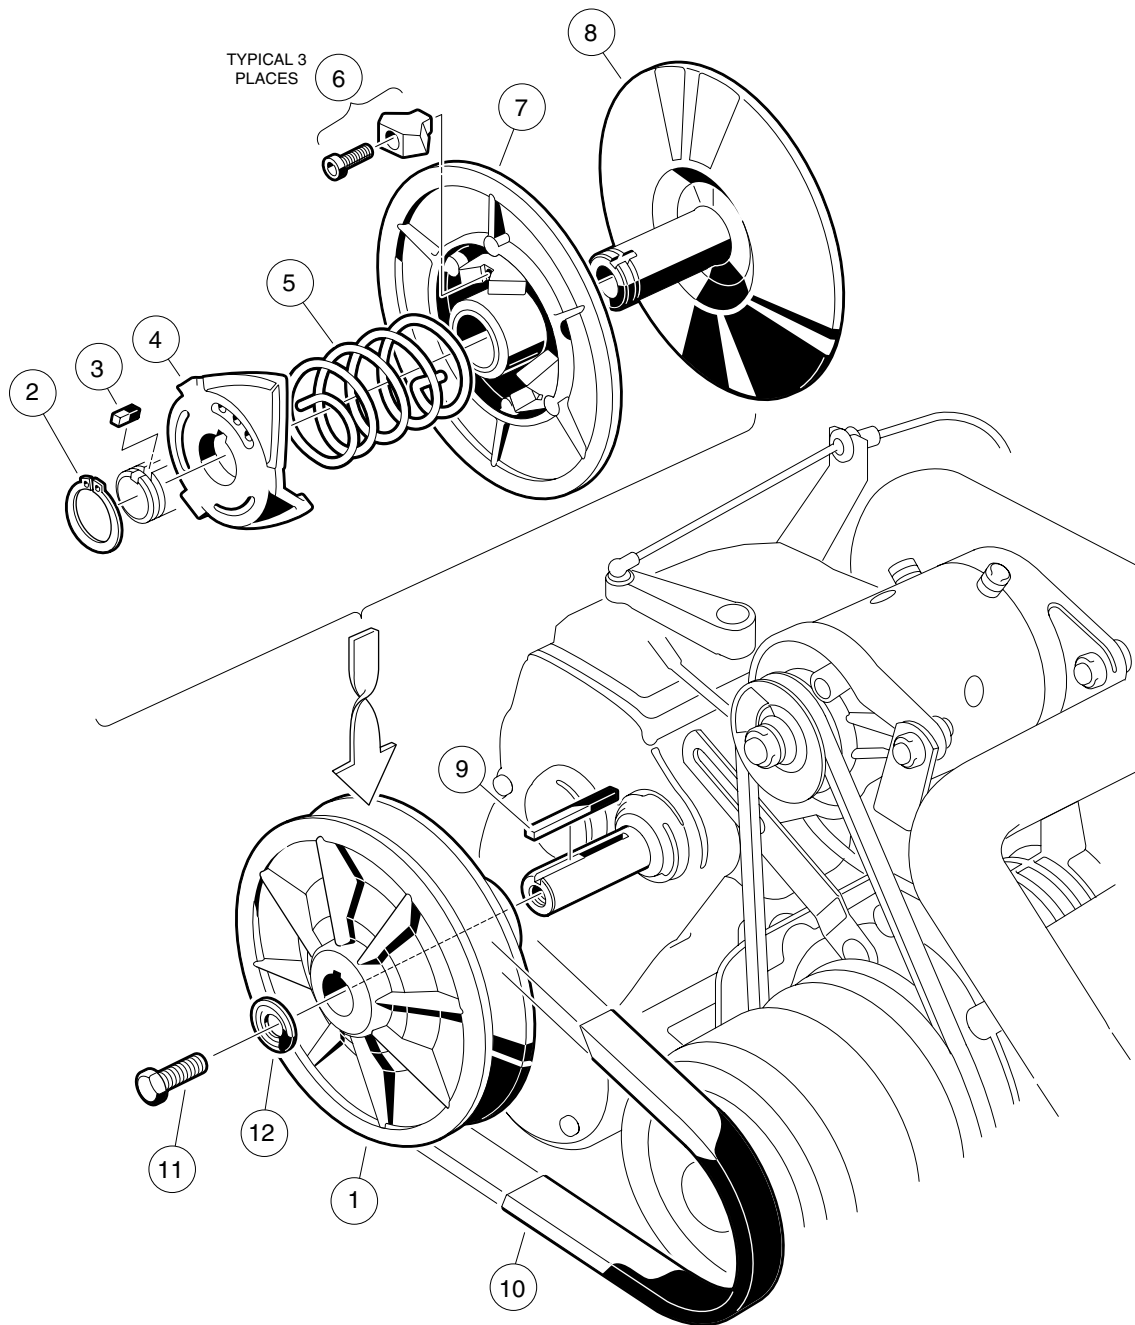

DRIVEN CLUTCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101834001</u>	Assembly, Driven Clutch (Includes Items 2 - 8)	1
2	<u>1014080</u>	Ring, Retaining	1
3	<u>1014078</u>	Key	1
4	<u>1017686</u>	Cam	1
5	<u>101836201</u>	Spring – Green	1
6	<u>1014454</u>	Kit, Button (Includes 3 Screws and 3 Buttons).....	1
7	<u>1014072</u>	Assembly, Moveable Face, with Bushing	1
8	<u>1014070</u>	Fixed Face	1
9	<u>101833401</u>	Key, Square Transmission	1
10	<u>102188401</u>	Belt, Drive	1
11	<u>102242101</u>	Screw, Hex Head Cap, Thread-Locking Patch, 5/16-18 x 3/4	1
12	<u>102155801</u>	Washer, Driven Clutch	1


11

G

UNITIZED TRANSAXLE

12


G

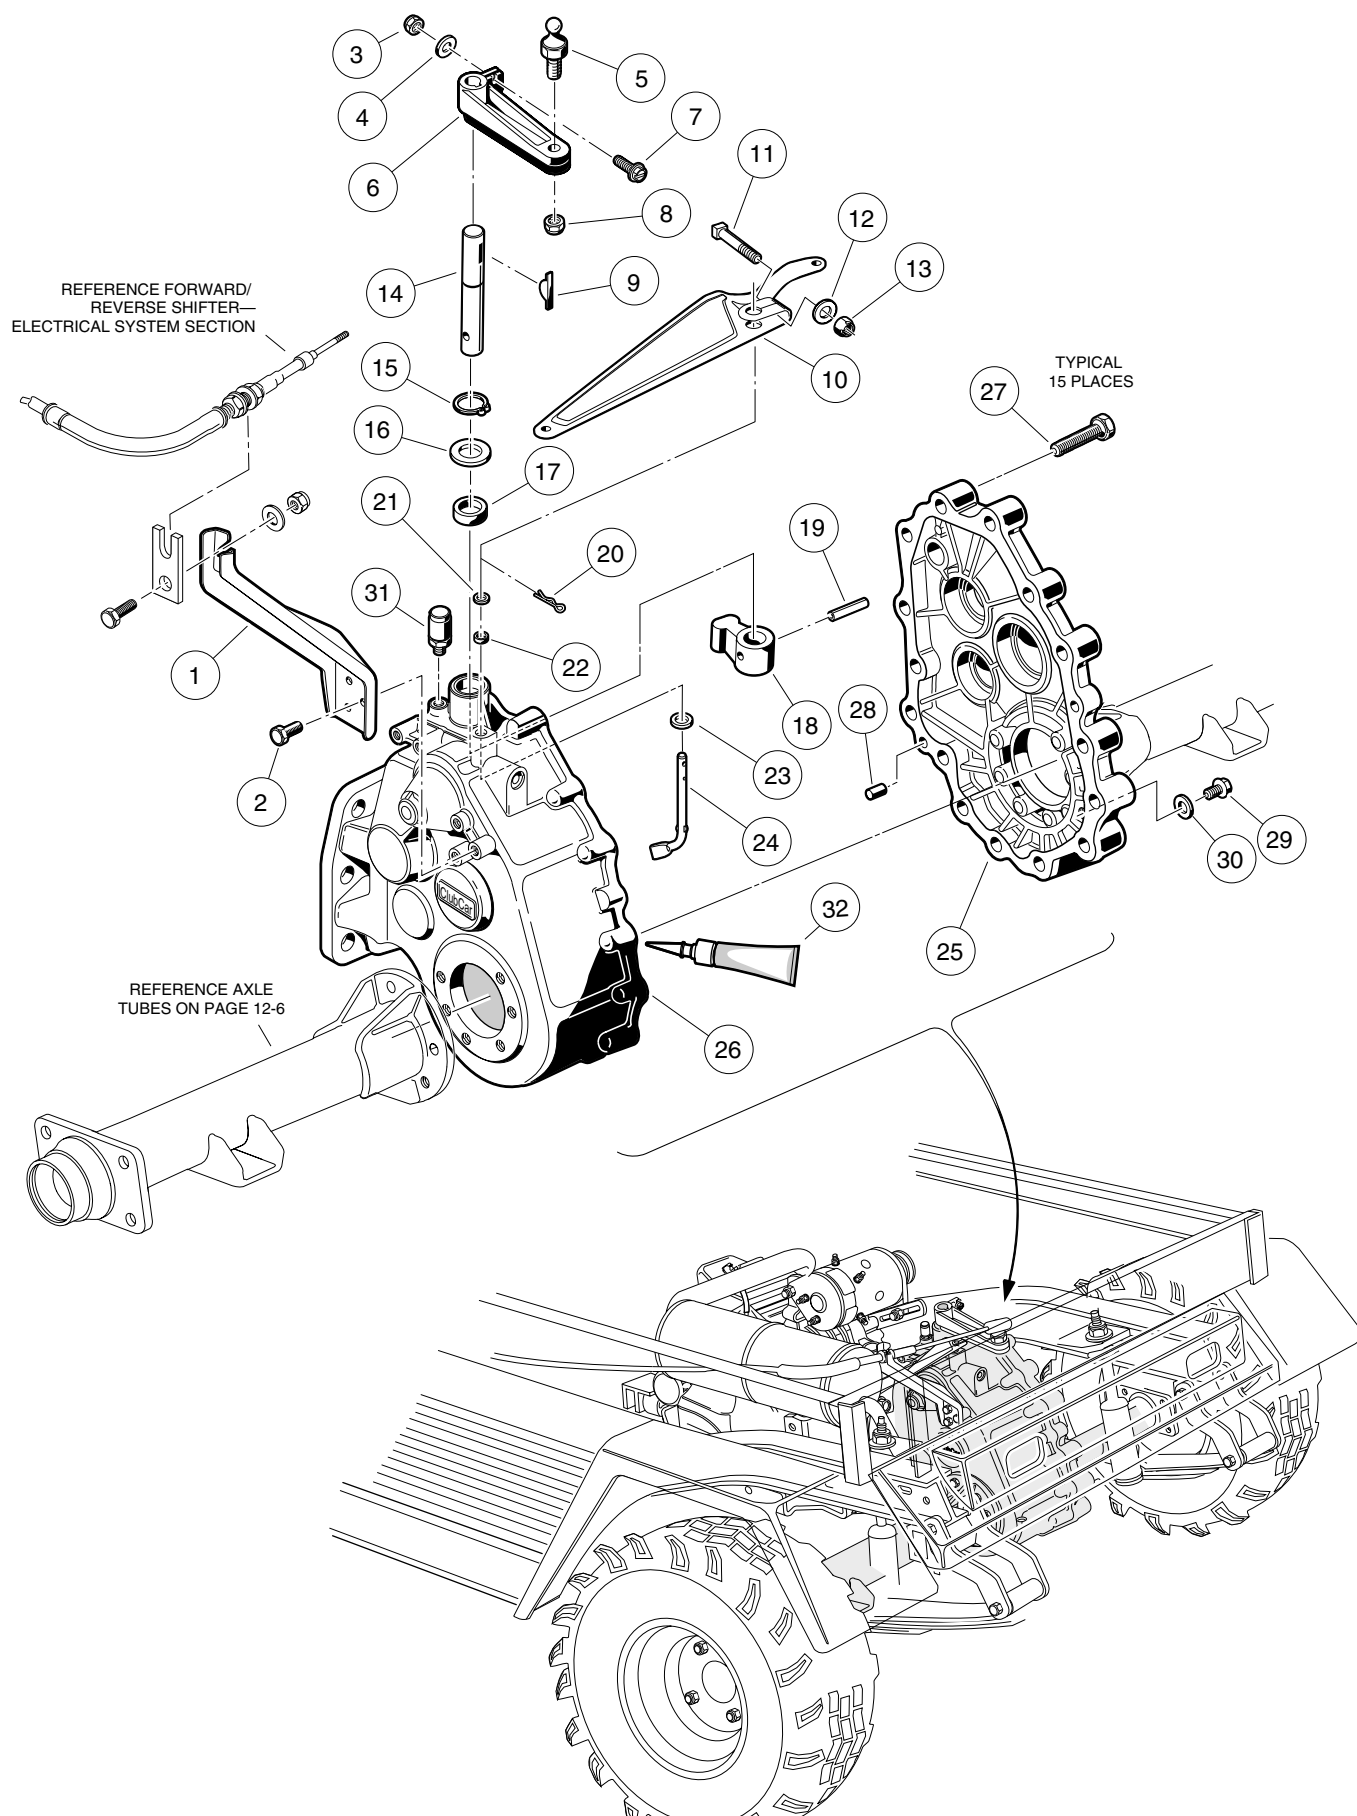

UNITIZED TRANSAXLE – GEAR CASES AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101922601	Bracket, Transmission Cable Support	1
2	<u>1012285</u>	Screw, Thread-Rolling, 1/4-20 x 5/8	3
3	<u>1013061</u>	Nut, Nylon Lock, #10-32	1
4	<u>183</u>	Washer, Flat, #10	1
5	<u>1010954</u>	Stud, Ball, 1/4-28 x 9/16	1
6	<u>1016341</u>	Lever, Transmission Shifter	1
7	<u>1017082</u>	Screw, Hex Washer Head, #10-32 x 3/4	1
8	<u>8717</u>	Nut, Nylon Lock, 1/4-28	1
9	<u>1017231</u>	Key, Woodruff	1
10	<u>101834801</u>	Arm, Governor Lever	1
11	<u>101886101</u>	Screw, Square Head, 1/4-20 x 1	1
12	<u>1014007</u>	Washer, Type B, 1/4	1
13	<u>8233</u>	Nut, Nylon Lock, 1/4-20	1
	<u>101833601</u>	Transaxle, Unitized (Includes Items 14 - 90)	1
14	<u>101890201</u>	Shaft, Shifter	1
15	<u>101927301</u>	Ring, Snap	1
16	<u>101892901</u>	Washer, Flat	1
17	<u>101927201</u>	Seal, Oil	1
18	<u>101890101</u>	Lever, Shifter	1
19	<u>1012752</u>	Pin, Roll	1
20	<u>101928601</u>	Pin, Cotter	1
21	<u>1016513</u>	Washer, Flat	1
22	<u>101927101</u>	Seal, Oil	1
23	<u>101893801</u>	Washer	1
24	<u>101891301</u>	Arm, Pivot	1
25	<u>101890601</u>	Gear Case (Passenger Side)	1
26	<u>101890501</u>	Gear Case (Driver Side)	1
27	<u>101926901</u>	Bolt, Flanged, M8 x 1.25 x 40mm	15
28	<u>1012896</u>	Pin, Dowel	2
29	<u>1013759</u>	Plug, Drain (Includes Item 30)	2
30	<u>1016432</u>	Gasket	1
31	<u>1012711</u>	Breather	1
32	<u>101928701</u>	Gasket, Liquid, 8.8 oz. (250 Grams)	A/R


12
G

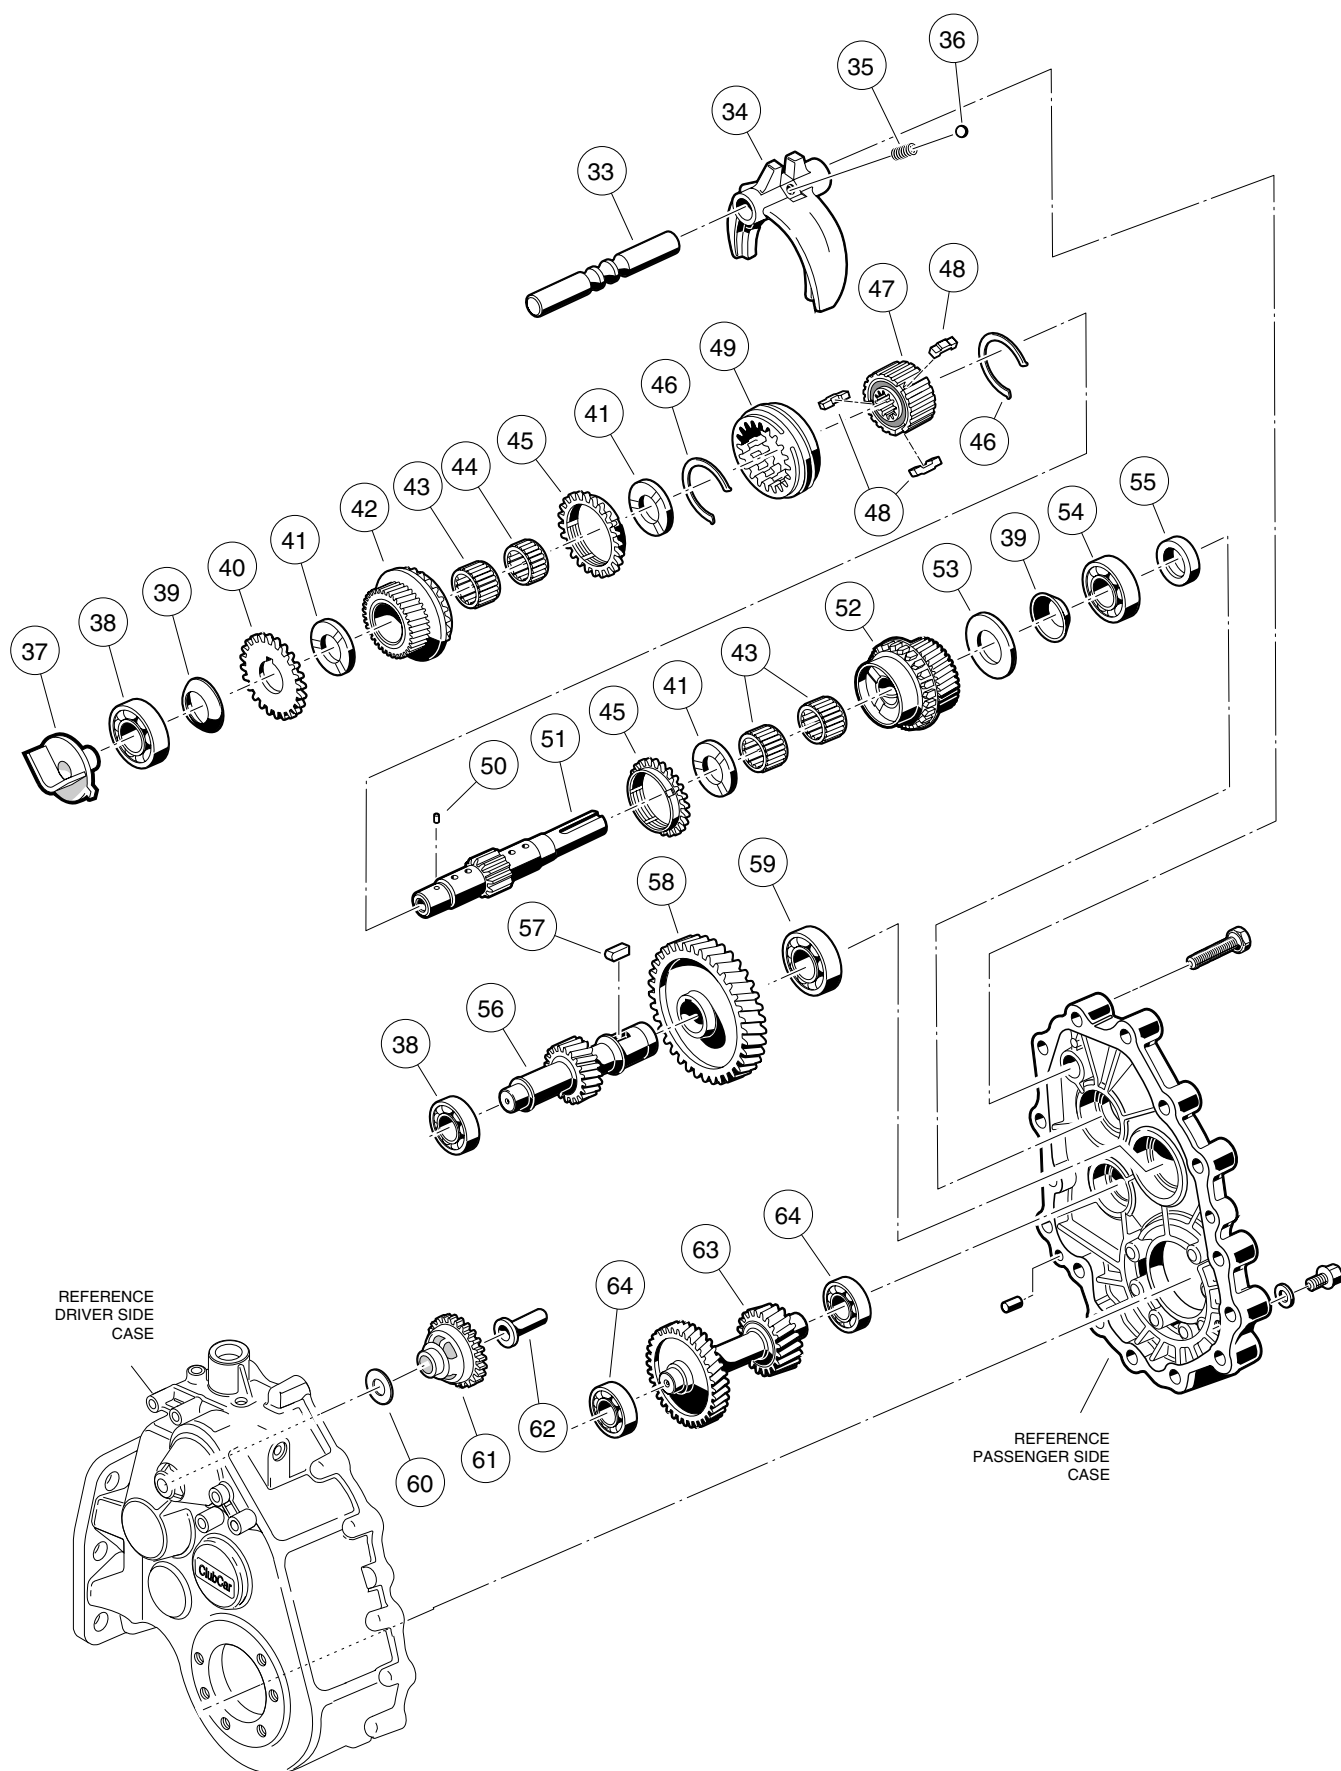

UNITIZED TRANSAXLE – F&R TRANSMISSION AND GEAR REDUCTION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
33	101892001	Rod, Shift	1
34	<u>101890001</u>	Fork, Shift	1
35	<u>1012748</u>	Spring	1
36	<u>1012747</u>	Ball, Steel	1
37	<u>101889401</u>	Guide	1
38	<u>7336</u>	Bearing, Ball	2
39	<u>1016338</u>	Washer, Spring	2
40	<u>101892401</u>	Gear, Spur	1
41	<u>101892201</u>	Plate, Thrust	3
42	<u>101980901</u>	Gear Assembly, Input, 28 Tooth (16°)	1
43	<u>101927601</u>	Bearing, Needle	3
44	<u>101927501</u>	Bearing, Needle	1
45	<u>101981001</u>	Ring, Synchronizer (16°)	2
46	<u>1012741</u>	Spring, Synchronizer	2
47	<u>101928001</u>	Hub, Synchronizer Clutch	1
48	<u>1012740</u>	Insert, Synchronizer	3
49	<u>101927901</u>	Sleeve, Synchronizer	1
50	<u>101927701</u>	Pin, Dowel	1
51	<u>101889901</u>	Shaft, Input	1
52	<u>101980801</u>	Gear Assembly, Input, 25 Tooth (16°)	1
53	<u>1016337</u>	Washer, Thrust	1
54	<u>101927801</u>	Bearing, Ball	1
55	<u>1012714</u>	Seal, Oil, Input Shaft	1
56	<u>101892601</u>	Gear, 17 Tooth	1
57	<u>101893201</u>	Key	1
58	<u>101892501</u>	Gear, 61 Tooth	1
59	<u>101928101</u>	Bearing, Ball	1
60	<u>101893901</u>	Washer.....	1
61	<u>101892301</u>	Governor Assembly	1
62	<u>101891601</u>	Sleeve	1
63	<u>101891901</u>	Gear, Cluster Idler	1
64	<u>7335</u>	Bearing, Ball	2

12
G

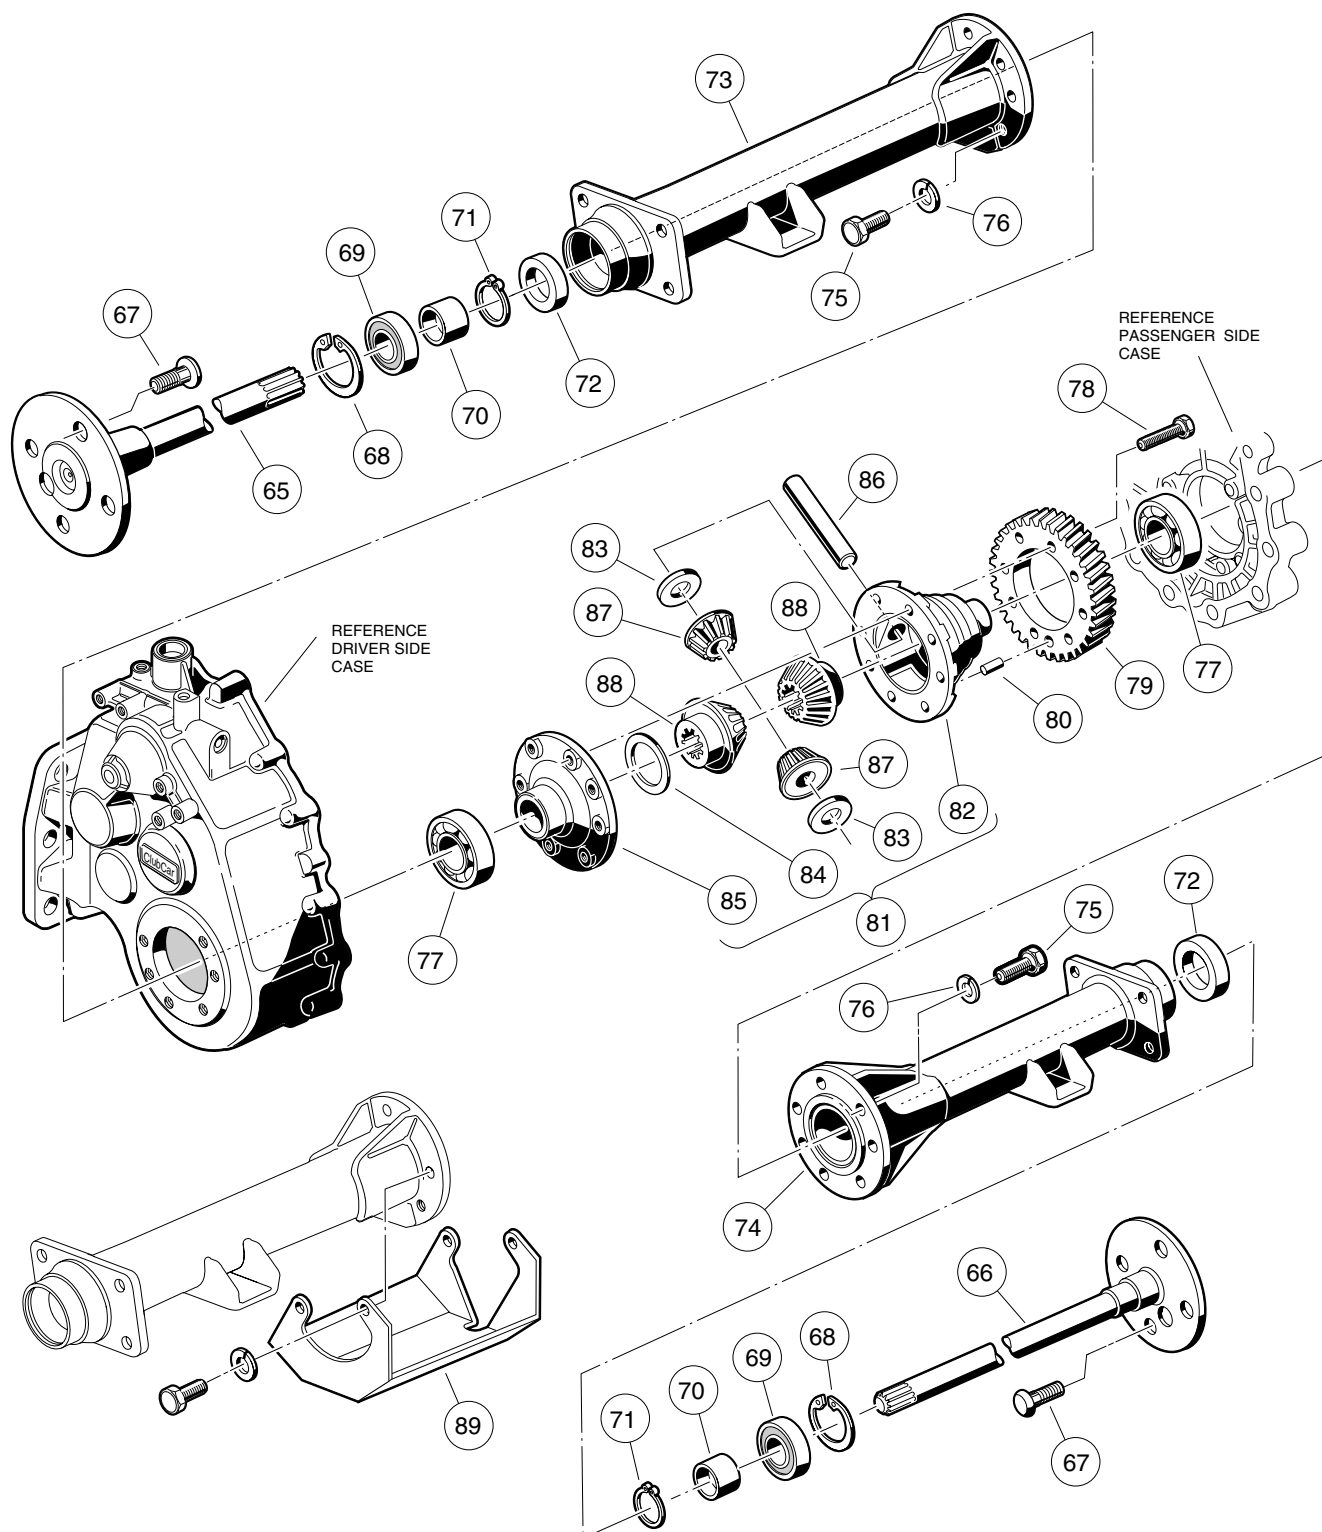

UNITIZED TRANSAXLE – DIFFERENTIAL AND AXLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
65	<u>101891501</u>	Axle Assembly, Driver Side (Includes Items 69 - 73)	1
66	<u>101891401</u>	Axle Assembly, Passenger Side (Includes Items 69 - 73)	1
67	<u>1013787</u>	Stud, Lug	4
68	<u>1013792</u>	Ring, Retaining	1
69	<u>1011291</u>	Bearing, Outer Axle Tube	1
70	<u>1014207</u>	Collar, 25 mm I. D.	1
71	<u>1016672</u>	Ring, Retaining	1
72	<u>1013794</u>	Seal, Oil	2
73	<u>101891001</u>	Assembly, Axle Tube, Driver Side	1
74	<u>101890901</u>	Assembly, Axle Tube, Passenger Side	1
75	<u>1013790</u>	Bolt, M10 x 1.5 x 30mm	14
76	<u>1013791</u>	Washer, Lock, M10	14
77	<u>7330</u>	Bearing, Inner Axle Tube	2
78	<u>101928301</u>	Bolt, M8 x 1.25 x 37mm	8
79	<u>101892701</u>	Gear, Output	1
80	<u>1014193</u>	Pin, Dowel	1
81	<u>101910501</u>	Kit, Differential Gear Case (Includes Items 82 - 85)	1
82	<u>1013768</u>	Case, Gear Carrier	1
83	<u>1013774</u>	Plate, Thrust (Idle Gear)	2
84	<u>1013773</u>	Plate, Thrust (Differential Gear)	1
85	<u>1013769</u>	Cover, Gear Case	1
86	<u>1013772</u>	Pin, Differential	1
87	<u>1013770</u>	Gear, Differential Idler	2
88	<u>1013771</u>	Gear, Differential	2
89	<u>101932902</u>	Guard, Unitized Transaxle	1


12
G

MAINTENANCE AND SERVICE TOOLS

13

G

E

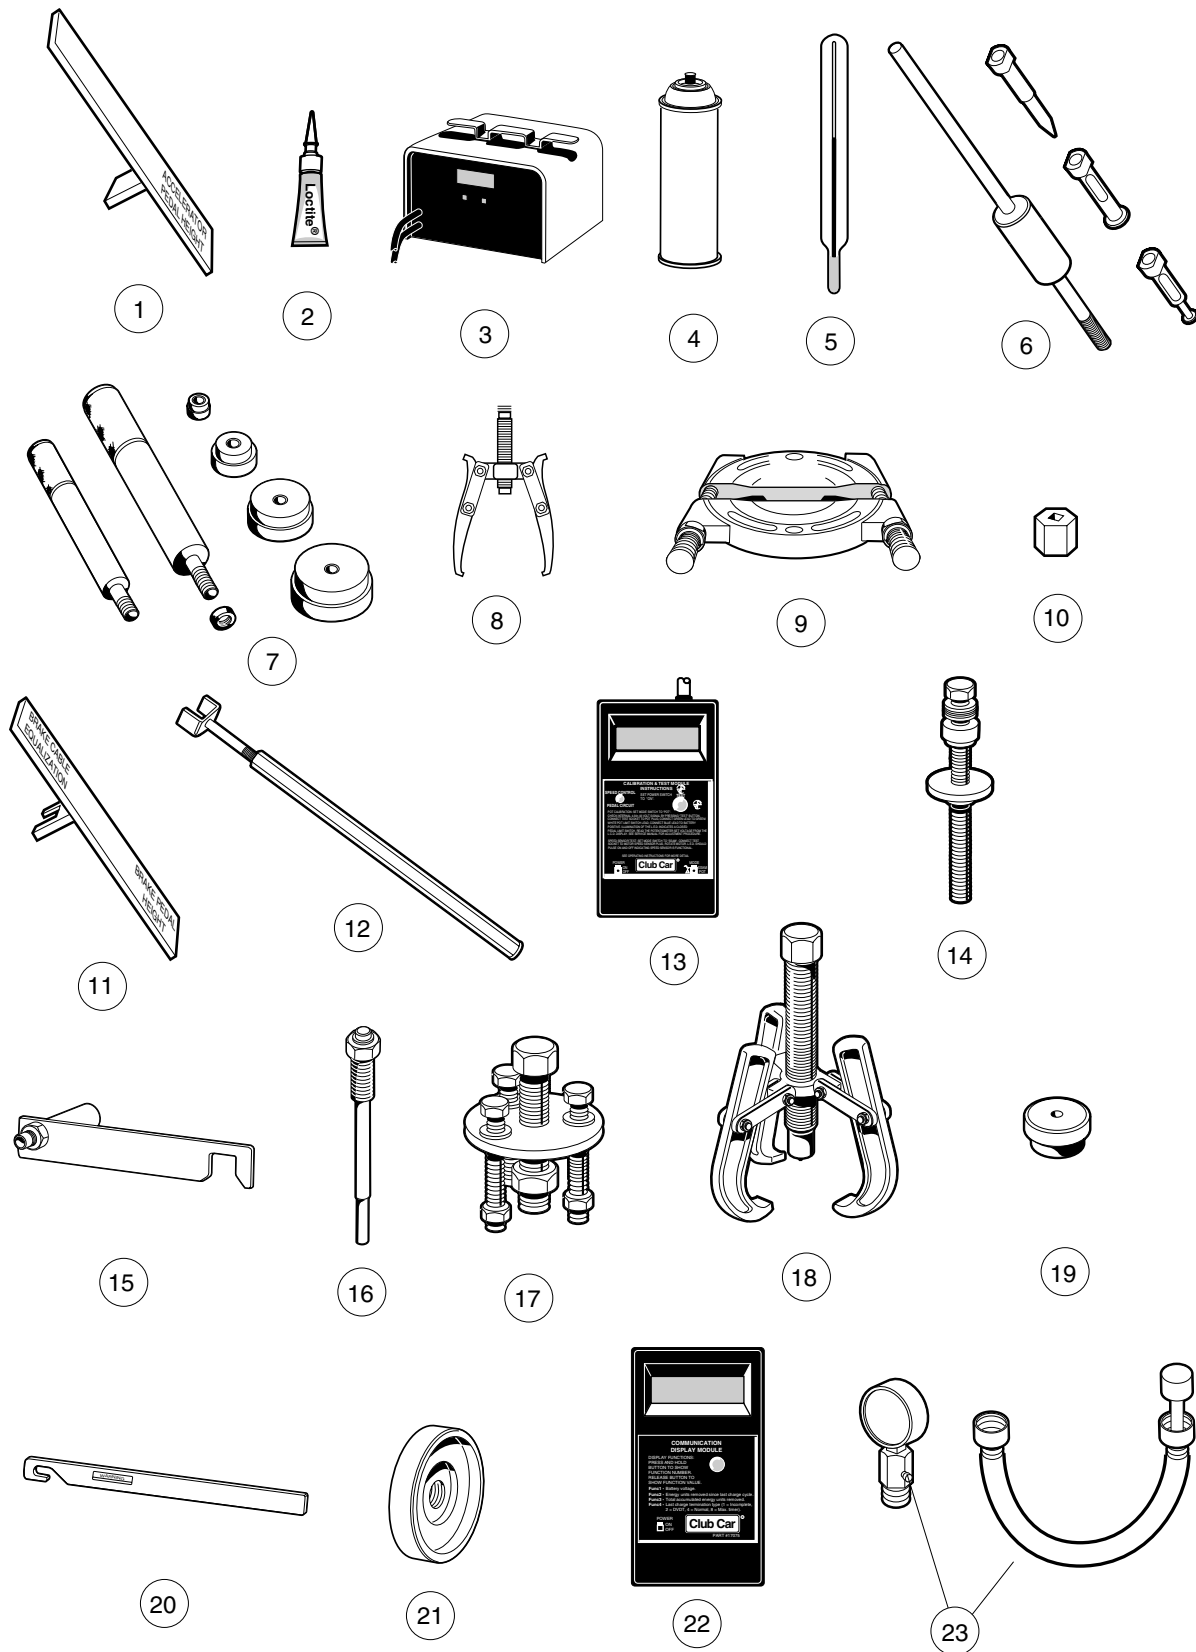13**G****E**


MAINTENANCE AND SERVICE TOOLS

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	13 G E
		1 2 3 4 The following tool list includes all tools available from Club Car for maintenance and service procedures for gasoline and/or electric vehicles, both past and present models. Be sure to carefully examine the tool list for applicability to your vehicle before ordering.			
1	<u>101871001</u>	Accelerator Pedal Adjustment Tool	1	1	
2	<u>101813202</u>	Adhesive, Guide Ring, 3-Gram Tube	1	1	
3	<u>101831901</u>	Battery Discharge Machine, 36/48 Volt		1	
4	<u>1014305</u>	Battery Terminal Protector Spray	1	1	
5	<u>1011767</u>	Battery Thermometer		1	
6	<u>1016417</u>	Bearing and Oil Seal Remover Assembly	1	1	
7	<u>1016416</u>	Bearing Driver Set	1	1	
8	<u>1012811</u>	Bearing Puller	1	1	
9	<u>1012812</u>	Bearing Puller Wedge Attachment	1	1	
10	<u>1013582</u>	Brake Adjustment Tool (used only on vehicles with manually adjusted mechanical brakes)	1	1	
	<u>102249901</u>	Brake Pedal Adjustment Tool Kit (used for the Carryall electric industrial truck only) (includes items 11 and 12)		1	
11	****	Brake Pedal Adjustment Tool		1	
12	****	Brake Pedal Tension Tool		1	
13	<u>101887101</u>	Calibration Test Module		1	
14	<u>101808401</u>	Cam Installation Tool	1		
	<u>1014510</u>	Clutch Tool Kit (includes items 15 - 21)	1		
15	<u>1014498</u>	Clutch Alignment Tool (for pre-unitized transaxle vehicles built prior to 1997 model year)	1		
16	<u>1014496</u>	Drive Clutch Puller	1		
17	<u>1014497</u>	Drive Clutch Hub Puller	1		
18	<u>1014508</u>	Driven Clutch Cam Puller	1		
19	<u>1014507</u>	Driven Clutch Puller Plug	1		
20	<u>1015524</u>	Drive Clutch Holder Tool Assembly	1		
21	<u>101809101</u>	Press Weldment	1		
22	<u>101831801</u>	Communication Display Module		1	
23	<u>101641002</u>	Compression Gauge and Adapter	1		
		Please refer to the maintenance and service manual for proper tool application. **** Special order item available upon request			

13

G


E

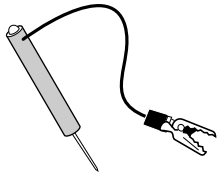


24



25

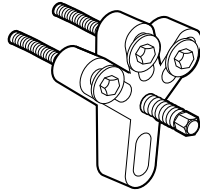


26

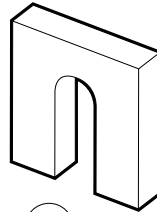


27



 28




29

 


30




31

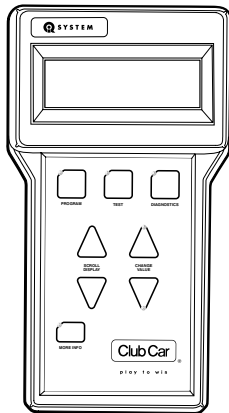


32

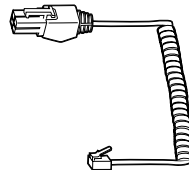

33

 


34

 


35



36

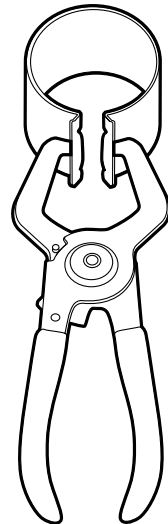


37

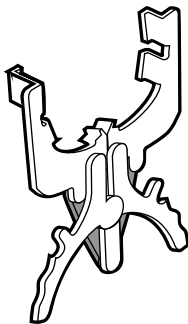

38



 39



40



41



42



43



44


MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	13 G E
		1 2 3 4			
24	1011273	Continuity Tester	1	1	
25	<u>1012151</u>	Dry Moly Lubricant	1	1	
26	<u>1016627</u>	Flywheel Puller Kit	1		
27	<u>1016418</u>	Gear Yoke	1	1	
28	<u>101933101</u>	Governor Shaft Installation Tool	1		
29	102169401	Hydraulic Brake Adjuster (for vehicles equipped with hydraulic brakes)	1		
30	<u>1011478</u>	Hydrometer	1	1	
31	<u>1013593</u>	Internal Retaining Ring Pliers	1	1	
32	102248801	IQ Display Module (IQDM) Kit (for IQ System vehicles only) (includes items 33 and 34)		1	
33	<u>102241501</u>	Cable, IQDM		1	
34	<u>102251501</u>	Adaptor, Cable		1	
35	<u>101928701</u>	Liquid Gasket (transaxle case)	1	1	
36	<u>102243402</u>	Moly-Teflon Lubricant (4-oz. (113-gram) tube)		1	
37	<u>1016414</u>	Piston Ring Compressor Kit	1		
38	<u>1016415</u>	Piston Ring Pliers	1		
39	<u>1012549</u>	Retaining Ring Pliers, 45° External	1	1	
40	<u>1012560</u>	Retaining Ring Pliers, 90° Internal	1	1	
41	<u>101823101</u>	Safety First Card (50 per pack)	1	1	
42	<u>1012809</u>	Seal Puller	1	1	
43	<u>1014264</u>	Steering Column Bearing Press Tool	1	1	
44	<u>1014259</u>	Steering Column Retaining Ring Tool	1	1	


13

G

E

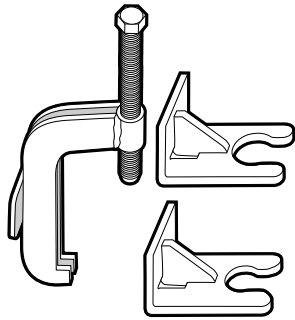


45

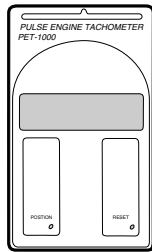


46




47

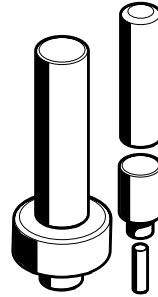

48

 

49

 

50




51




52




53

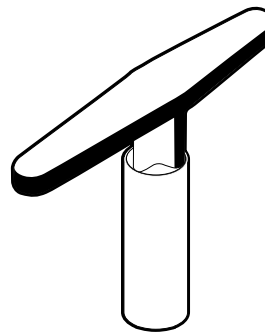


54

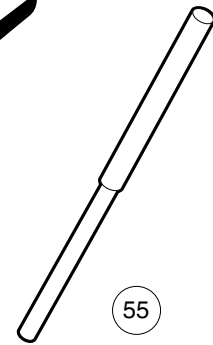


55

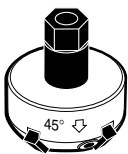


56

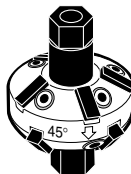


57

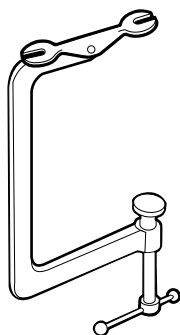

58

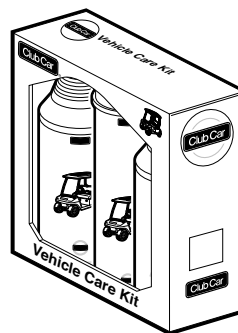

59

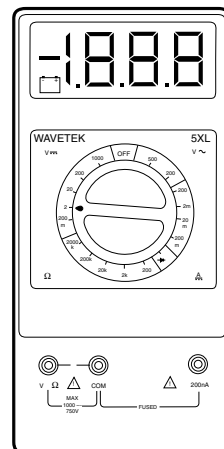

60

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	13 G E
		1 2 3 4			
45	102061201	Steering Wheel Puller Tool	1	1	
46	1016112	Tachometer	1		
47	101997201	Paint, Touch-Up – Beige	1	1	
47	101997202	Paint, Touch-Up – White	1	1	
47	101997203	Paint, Touch-Up – Red	1	1	
47	101997204	Paint, Touch-Up – Gray	1	1	
47	101997205	Paint, Touch-Up – Dark Gray	1	1	
47	101997206	Paint, Touch-Up – Royal Blue (Pacific Blue)	1	1	
47	101997207	Paint, Touch-Up – Black	1	1	
47	101997209	Paint, Touch-Up – Dark Green	1	1	
47	101997211	Paint, Touch-Up – Classic Blue (Navy)	1	1	
47	101997212	Paint, Touch-Up – Burgundy	1	1	
48	1014115	Transmission Tool Kit	1		
49	1014161	Transaxle Pinion Seal Tool	1		
50	1014162	Transaxle Axle Seal Tool	1		
51	1016413	Valve Clearance Adjuster Screw Holder (for FE290 engines only)	1		
52	101641201	Valve Guide Reamer	1		
53	101641202	Arbor	1		
54	1016551	Valve Seat Cutter T-Wrench	1		
55	1016552	Valve Seat Cutter Guide	1		
56	1016553	Valve Seat Cutter, 45° (32 mm diameter) (for FE290 engines only)	1		
57	1016554	Valve Seat Cutter, 45°/30° (35 mm diameter)	1		
58	101641101	Valve Spring Compressor	1		
59	AM10021	Vehicle Care Kit	1	1	
60	1011480	Volt Ohm Meter	1	1	
61	101611003	Tune-Up Kit, All OHV (includes air filter, spark plug, oil filter, fuel filters) (not shown)	1		
Please refer to the maintenance and service manual for proper tool application.					

13

G

E

INDEX

Part Number and Page

am10021 13-7	8745 6-9	1011494 4-3, 4-5
183 7-9, 9-11, 12-3	8754 1-7, 5-5, 6-3, 6-5, 6-7, 6-9, 6-11, 7-5, 7-15	1011553 1-13, 3-5
304 1-13	8755 1-7, 6-9	1011578 1-3
320 6-7, 7-5	8861 6-7, 6-13	1011694 5-5
332 1-5, 1-9, 1-11, 1-13, 9-11, 10-3	8935 1-3	1011697 6-3, 9-9
334 1-9, 5-5, 6-3, 6-5	8990 6-5, 7-11	1011700 5-5
357 1-13, 6-9, 6-13	8755 6-11	1011734 5-5
403 1-7	1010005 6-9	1011767 13-3
451 4-3, 4-5, 10-3	1010124 6-7	1011779 4-3, 4-5, 5-3
705 1-7, 1-13, 7-15	1010138 6-7	101187702 5-3, 5-5
706 1-13, 6-9	1010145 6-11	1011887 6-9
808 6-13, 7-5	1010150 6-9	1011892 6-9
1016 7-9	1010177 6-9	1011930 6-5, 6-7
1028 5-3	1010219 6-7	1011988 9-3
1032 5-3	1010434 1-3, 1-5	1011990 1-13
1035 1-9, 4-3, 4-5, 5-3, 6-5, 6-7	1010435 1-3, 1-7, 1-11	1012151 13-5
1218 6-9	1010436 1-11	1012164 8-15
1241 1-3, 1-13, 5-3, 5-5, 6-9, 7-7, 7-17	1010543 1-5	1012285 1-13, 7-5, 9-3, 9-9, 12-3
1242 1-13, 5-3, 6-13, 7-7, 7-15	1010545 1-3	1012295 7-7
1308 6-7	1010805 5-3	1012303 1-7, 6-9, 6-11
1606 9-11	1010829 4-3, 4-5, 5-3	1012328 7-17
1624 5-5, 6-5	1010850 4-3, 4-5	1012333 7-5
1631 9-11	1010877 5-3	1012382 7-3
2402 6-7	1010878 1-9, 5-3	1012431 7-5
4034 7-11	1010909 7-9	1012438 9-11
7048 6-9	1010921 5-3	1012467 6-5
7173 6-13, 7-17	1010927 5-3	1012505 7-9
7174 1-13, 4-3, 6-3, 6-13, 7-15, 9-9, 10-3	1010932 5-3	1012528 10-3
7251 1-3	1010933 5-3	1012549 13-5
7310 2-3	1010934 1-3, 1-13, 7-17	1012560 13-5
7311 6-13	1010954 7-5, 7-7, 12-3	1012565 6-3
7330 12-7	1010984 2-3, 6-9	1012566 6-3
7335 12-5	1011014 1-3	1012571 8-15
7336 12-5	1011017 1-3	1012594 7-5
7473 1-3, 1-7, 1-11, 5-3, 5-5, 6-9, 7-7, 7-17	1011084 5-5	1012604 6-3
7532 1-7	1011114 4-3, 4-5	1012605 6-3
7539 6-7	1011137 4-3	1012649 9-3
7540 6-5, 6-7	1011154 4-3, 4-5	1012711 12-3
7555 6-5, 6-7	1011229 7-9	1012714 12-5
7602 6-5, 6-7	1011273 13-5	1012740 12-5
7716 5-3, 5-5	1011291 12-7	1012741 12-5
7818 7-7	1011303 4-3, 4-5	1012747 12-5
7840 6-9	1011304 6-9	1012748 12-5
7847 1-9, 10-3	1011393 6-9	1012752 12-3
7893 7-5, 7-7, 7-9, 7-11	1011394 1-3	1012809 13-5
7910 6-9	1011402 5-3	1012811 13-3
7973 1-3, 9-11	1011415 6-11	1012812 13-3
8057 7-5	1011418 5-3	1012830 7-15, 10-3
8058 7-5	101146302 4-3, 4-5	1012896 12-3
8067 6-9	1011464 4-3, 4-5	1012981 8-5
8233 1-9, 1-11, 1-13, 5-5, 6-13, 7-5, 12-3	1011465 4-3, 4-5	1012986 7-9
8248 1-5, 7-5, 9-3	1011466 4-3, 4-5	1012987 7-5
8419 1-11	1011467 4-3, 4-5	1013001 7-13
8626 5-3	1011478 13-5	1013003 7-13
8717 7-5, 7-7, 12-3	1011480 13-7	1013005 7-13
		101301102 7-13

INDEX

1013035 6-5	1014056 11-3	1014948 7-7
1013042 6-5	1014057 11-3	1015075 7-15, 10-3
1013044 6-5	1014058 11-3	1015137 9-3, 9-7
1013051 6-5	1014059 11-3	1015139 9-3
1013052 6-5	1014065 7-5, 7-7	1015143 9-3
1013061 12-3	1014070 11-5	1015188 9-3
1013135 6-9	1014072 11-5	1015239 1-5
1013198 7-5	1014078 11-5	101524002 7-15
1013207 4-5, 6-11	1014080 11-5	1015252 1-7
1013309 1-5	1014089 7-5	1015277 1-9
1013311 1-5	1014115 13-7	1015332 7-3, 8-3
1013312 1-5	1014116 9-3	1015345 7-7
1013335 1-5	1014119 7-3	1015356 1-7
1013343 1-3	1014125 6-3	1015371 7-7
1013344 1-3	1014126 6-3	1015372 7-7
1013366 1-11	1014145 7-5, 7-7	1015373 7-7
1013422 1-3	1014153 4-5	1015391 1-7
1013461 7-11	1014161 13-7	1015399 1-7, 1-11
1013483 1-13	1014162 13-7	1015400 1-7
1013531 5-3	1014193 12-7	1015405 7-7
1013582 13-3	1014207 12-7	1015408 9-9
1013587 7-5	1014213 6-3	1015409 7-5
1013589 7-5, 7-7	1014214 6-3	1015426 9-11
1013590 7-5	1014217 6-3	101542901 1-7
1013591 7-5	1014235 6-7	1015453 6-13
1013593 13-5	1014259 13-5	1015457 6-13
1013609 7-7	1014264 13-5	101547601 3-5
1013687 9-3	1014276 6-9	1015507 1-7
1013692 9-3	1014288 6-3, 7-17	1015524 13-3
1013700 9-9	1014289 7-13	1015530 1-13
1013734 10-3	1014305 13-3	101553901 1-11, 3-3
1013746 9-3, 9-7	1014306 1-11, 1-13	1015545 6-3
1013759 12-3	1014321 1-5	1015583 1-7, 6-9, 6-11
1013768 12-7	1014374 7-17	1015597 6-5, 6-7, 6-9
1013769 12-7	1014375 7-17	1015608 1-3
1013770 12-7	1014387 1-5	1015613 6-13
1013771 12-7	1014413 9-9	1015614 6-13
1013772 12-7	1014415 1-11	101562602 1-5
1013773 12-7	1014453 11-3	101562604 1-5
1013774 12-7	1014454 11-5	101562605 1-5
1013787 12-7	1014471 1-7	101562702 1-5
1013790 12-7	1014496 13-3	101562704 1-5
1013791 12-7	1014497 13-3	101562710 1-5
1013792 12-7	1014498 13-3	101564502 1-5
1013794 12-7	1014507 13-3	101564503 1-5
1013857 7-11	1014508 13-3	101564505 1-5
1013869 5-3	1014510 13-3	1015649 8-3
1013870 5-3	1014523 9-3	101565202 1-5
1013871 5-5	1014524 9-3	101565205 1-5
1013876 5-3	1014537 1-11	101565206 1-5
1013924 4-5, 8-15	1014555 6-11	1015720 7-9
1014007 5-5, 12-3	1014645 1-3	1015737 7-3, 7-7
1014049 11-3	1014727 7-5	1015741 7-7
1014050 11-3	1014807 7-5	1015752 7-7, 9-11
1014052 11-3	1014902 6-11	1015760 6-13
1014055 11-3	1014928 9-3	1015769 7-3

INDEX

1015777 7-7	1016437 9-5	1016557 4-3, 4-5
1015814 10-3	1016438 9-7	1016560 8-9
1015845 9-9	1016440 9-7	1016561 8-5
1015932 7-15	1016441 9-7	1016562 8-5, 8-13
1015969 8-3	1016442 8-9	1016563 8-9
1016004 9-3	1016444 9-7	1016564 8-11
1016060 1-9	1016445 8-5	1016566 8-9
1016074 7-15	1016449 8-9	1016569 8-9
1016078 1-9	1016450 8-9	1016570 8-7
101609401 3-3	1016452 8-9	1016571 8-13
101611003 13-7	1016454 8-11	1016572 9-7
1016112 13-7	1016455 8-5	1016573 4-3, 4-5
1016154 6-3	1016456 8-3, 8-5	1016576 8-7
1016156 6-3	1016457 8-7	1016578 8-5
1016181 6-3	1016458 8-9	1016579 8-5
1016183 6-3	1016467 8-7	1016581 8-7
1016201 1-9, 7-5	1016470 8-13	1016582 9-7
1016202 9-9	1016472 8-11	1016583 8-9
1016214 6-3	1016473 8-7	1016584 8-11
1016219 6-3	1016474 8-9	1016585 9-5
1016263 6-3	1016479 8-9	1016586 8-5
1016269 6-3	1016480 9-7	1016587 8-5
1016289 11-3	101648102 9-7	1016588 8-5
1016337 12-5	101648203 8-7	101660404 1-3
1016338 12-5	1016483 8-9	1016622 6-3
1016341 12-3	1016486 9-5	1016627 13-5
1016342 7-5	1016489 8-9	1016630 7-9
1016346 6-7	101649002 9-7	1016663 6-3
1016349 6-7	1016494 8-11	1016672 12-7
1016350 6-7	1016496 8-11	1016801 11-3
1016353 6-7	1016497 8-5	1016813 6-13
1016380 7-3	1016499 9-5	1016849 7-9
1016384 6-9	1016501 9-5	1016851 7-9
1016385 6-7	1016502 8-7	1016859 7-9
1016386 6-9	1016506 8-11	1016868 1-3
1016387 6-9	1016507 8-3	1016879 7-11
1016389 6-9	1016510 8-11	1016880 7-11
101641002 13-3	1016512 8-3	1016883 7-15
101641101 13-7	1016513 12-3	1016901 11-3
101641201 13-7	1016517 8-9	1016904 10-3
101641202 13-7	1016519 8-9	101693201 3-3
1016413 13-7	1016521 8-11	101693906 1-3
1016414 13-5	1016531 8-3	1016947 7-5
1016415 13-5	1016535 8-11	1016952 1-3
1016416 13-3	1016537 8-7	1017029 5-3
1016417 13-3	1016538 8-11	1017062 7-11
1016418 13-5	1016539 8-3	1017064 7-11
1016423 7-7	1016541 8-13	1017065 7-11
101642575 9-5	1016544 8-5, 8-9, 8-11	1017080 1-3
101642578 9-5	1016546 9-9	1017082 12-3
101642580 9-5	1016547 8-3, 8-13, 9-7	1017211 5-3
101642582 9-5	1016549 8-9	1017226 6-3
101642585 9-5	1016551 13-7	1017231 12-3
1016429 8-7	1016552 13-7	1017232 4-3
1016432 8-7, 12-3	1016553 13-7	1017266 6-7
1016436 8-9	1016554 13-7	1017273 6-3

INDEX

1017328 1-9, 11-3	1017653 7-13	101834601 8-15
1017378 5-5	1017686 11-5	101834801 12-3
1017380 5-5	1017689 10-3	101835601 1-5, 1-7, 1-9
1017424 5-5	1017696 5-5	101836201 11-5
1017434 8-9	1017721 7-9	101837101 9-11
1017435 8-9	101773301 8-13	101837301 7-3, 7-15
1017442 8-7	101773302 8-13	101851101 7-9
1017443 8-11	101773303 8-13	101855901 8-15
1017444 8-9	101773304 8-13	101856102 7-7
1017445 8-9	101773305 8-13	101859401 10-3
1017446 8-9	101773306 8-13	101861901 5-5
1017447 8-11	101773307 8-13	101865301 5-3
1017448 8-5	101773308 8-13	101869001 4-3
101744901 8-13	101773309 8-13	101869302 7-13
101744902 8-13	101773310 8-13	101870501 6-7
1017450 8-13	101773311 8-13	101871001 13-3
101745101 8-13	101791101 4-5	101872701 4-3
101745102 8-13	101796201 5-5	101874601 4-3, 5-3
1017453 8-13	1017976 1-7	101874901 7-13
1017454 8-9	101804301 9-11	101875001 7-13
1017455 8-5	101808401 13-3	101875101 7-13
1017456 8-7	101809101 13-3	101875201 7-13
101745701 8-13	101811901 9-11	101875301 7-13
101745702 8-13	101812301 9-11	101875401 7-13
1017458 8-7	101813001 9-11	101875501 7-13
1017460 8-7	101813202 13-3	101875601 7-13
1017461 9-5	101817401 5-5	101875701 7-13
1017463 8-5	101818801 5-5	101875802 7-13
1017466 9-7	101821501 9-11	101876001 7-13
1017467 8-5	101822001 5-5	101876202 7-13
1017471 8-13	101823101 13-5	101876301 7-13
1017472 8-11	101824401 9-3	101876402 7-13
1017473 8-9	101825102 3-3	101876501 7-13
1017474 8-3	101826401 7-9	101876901 6-9
1017475 8-3	101827101 8-15	101877001 6-9
1017476 8-3	101830601 7-9	101877601 7-13
1017483 8-13	101830701 7-9	101877701 7-13
1017484 8-13	101831801 13-3	101878101 7-13
1017486 8-3	101831901 13-3	101878201 5-3
1017487 8-11	101832101 8-15	101878302 6-5
1017490 8-5	101832201 9-9	101879001 7-13
1017500 8-3	101832301 9-9	101879401 6-5
1017501 8-13	101832402 9-9	101879501 6-5
1017502 8-13	101832501 9-9	101879601 6-5
1017503 8-13	101832601 8-15	101879701 6-5
1017504 8-11	101832701 8-15	101879801 6-5
1017507 8-7	101832901 8-15	101879901 6-5
1017508 8-11	101833001 8-15	101880001 6-5
1017510 8-13	101833101 8-15	101880101 6-5
1017511 8-11	101833301 8-15	101880201 6-5
1017512 8-13	101833401 11-5	101880301 6-5
1017513 8-11	101833601 12-3	101881101 8-5
1017514 8-11	101833701 7-13, 7-15	101881701 9-11
101751801 8-11	101833906 11-3	101884801 8-15
101751802 8-11	101834001 11-5	101886101 12-3
101751803 8-11	101834502 7-9	101887101 13-3

INDEX

101887601	8-3	101926501	6-11	101988101	7-11
101888501	1-5	101926801	9-11	101988201	7-11
101888502	1-5	101926901	12-3	101990701	7-9
101889401	12-5	101927101	12-3	101990801	5-3
101889901	12-5	101927201	12-3	101991101	7-9
101890001	12-5	101927301	12-3	101997201	13-7
101890101	12-3	101927501	12-5	101997202	13-7
101890201	12-3	101927601	12-5	101997203	13-7
101890501	12-3	101927801	12-5	101997204	13-7
101890601	12-3	101927901	12-5	101997205	13-7
101890901	12-7	101928001	12-5	101997206	13-7
101891001	12-7	101928101	12-5	101997207	13-7
101891301	12-3	101928301	12-7	101997209	13-7
101891401	12-7	101928601	12-3	101997211	13-7
101891501	12-7	101928701	12-3, 13-5	101997212	13-7
101891601	12-5	101929401	6-11	102003201	9-3
101891901	12-5	101929801	11-3	102004001	6-9
101892001	12-5	101932902	12-7	102004101	6-3
101892201	12-5	101933101	13-5	102004201	6-11
101892301	12-5	101935301	6-7	102004301	1-3
101892401	12-5	101939901	7-13	102004401	1-3
101892501	12-5	101946201	1-5	102004601	1-13
101892601	12-5	101953001	5-3	102004602	1-13
101892701	12-7	101953102	5-3	102004801	7-5
101892901	12-3	101953106	5-3	102004901	6-13
101893201	12-5	101953801	8-3	102006601	6-11
101893801	12-3	101954301	1-5	102009202	2-3
101893901	12-5	101955001	6-7	102009302	2-3
101894303	1-5	101955301	9-3	102009402	2-3
101894304	1-11	101958102	9-11	102009502	2-3
101896501	7-13	101958601	1-5, 1-9	102009902	2-3
101896901	9-3	101960201	3-3	102010002	2-3
101898001	7-17	101960501	3-5	102025401	6-7
101903101	6-9	101960601	3-3	102026001	5-5
101903501	9-9	101963301	1-5	102061201	13-7
101905901	9-5, 9-7	101963401	1-5, 1-11, 7-9	102065901	1-7
101909201	8-5	101963901	1-5	102066001	1-7
101909301	8-5	101964001	1-5	102075801	3-3
101909401	8-5	101966901	5-5	102155801	11-5
101909501	8-5	101971001	9-11	102160101	1-3
101910501	12-7	101971301	9-11	102166901	4-5, 5-3
101915201	3-5	101972801	9-11	102169401	13-5
101915901	8-11	101973101	9-5	102188401	11-3, 11-5
101916001	8-13	101973301	9-5	102195201	9-11
101916101	8-3	101973401	9-7	102221301	1-11
101916201	8-5	101975201	6-11	102221401	1-11
101916301	8-5	101976301	5-3	102221501	1-11
101916501	11-3	101979101	7-5	102221701	1-11
101916701	7-15, 11-3	101980801	12-5	102221801	1-11
101917601	9-11	101980901	12-5	102222001	1-11
101921501	9-11	101981001	12-5	102222101	1-11
101922302	8-13	101984801	6-3	102222201	1-11
101922601	7-5, 12-3	101987701	9-3	102223801	7-3
101922801	1-9	101987901	7-11	102224001	1-13, 3-5
101925601	11-3	101988001	7-11	102227901	3-3
101925701	9-11	101988002	7-11	102228001	1-3, 3-3

INDEX

102228101 1-3, 3-3
 102228601 3-3
 102229901 1-11
 102230601 1-11
 102231601 3-5
 102234801 1-11, 3-5
 102234901 1-11, 3-5
 102239901 1-11
 102241501 13-5
 102242101 11-5
 102243402 13-5
 102248801 13-5
 102249901 13-3
 102251501 13-5
 102264001 7-9
 102269701 7-9
 102272501 7-9
 102278001 6-3
 102345901 3-5
 58644956 1-13
 s01010502 8-5

A

accelerator cable 9-9
 accelerator pedal 5-5
 accelerator pedal adjustment tool 13-3
 adaptor, cable (iqdm) 13-5
 adhesive, guide ring 13-3
 adjuster, hydraulic brake 13-5
 air box 9-11
 air duct 9-11
 air filter 9-11
 anchor body 4-3, 4-5
 a-plate strap 6-7
 arbor 13-7
 arm
 brake lever 4-3, 4-5
 governor lever 12-3
 pivot 12-3
 rocker 8-9
 arm rest 1-5
 armature 7-13
 assembly
 accelerator rod 5-5
 air box 9-11
 air box top 9-11
 armature 7-13
 axle 12-7
 bearing (steering column) 6-3
 bolt (float chamber) 9-5
 brush connector 7-13
 carburetor 9-5, 9-7
 connecting rod 8-13
 drive clutch 11-3
 drive hub 11-3
 eccentric 6-9

fe350 cylinder head 8-9
 field coil (starter/generator) 7-13
 fixed face (drive clutch) 11-3
 float (carburetor) 9-5
 float chamber 9-5
 forward/reverse shifter 7-5
 headlight 7-11
 hub 6-9
 idle screw 9-5
 moveable face (drive clutch) 11-3
 moveable face (driven clutch) 11-5
 pilot air screw 9-5
 screw (float chamber) 9-5
 spindle 6-9
 steering column 6-3
 turn signal lens 7-11
 voltage regulator 7-7
 wheel and tire 2-3
 wire 7-3, 7-15
 wire harness 7-3
 axle 12-7
 axle tube 12-7

B

ball bearing (transaxle) 12-5
 ball bearing, output shaft 7-13
 ball joint 6-5
 ball joint (tie rod) 6-7
 ball joint, left-hand thread 6-5, 6-7
 ball stud 12-3
 ball stud (component box) 7-7
 ball, steel (transaxle) 12-5
 ball, steel pressure relief 8-7
 band, rpm limiter mount 8-5
 bar, stabilizer 6-13
 barb, vent 9-3
 barrel, plastic 1-5
 base, forward/reverse shifter 7-5
 battery discharge machine 13-3
 battery terminal protector spray 13-3
 battery thermometer 13-3
 battery, 12-volt 7-17
 bearing
 ball (transaxle) 12-5
 ball, output shaft 7-13
 crankshaft 8-11
 idler (drive clutch) 11-3
 inner axle tube 12-7
 lower pinion 6-5
 needle 12-5
 outer axle tube 12-7
 pivot support 5-5
 thrust 6-9
 upper pinion 6-5
 bearing and oil seal remover 13-3
 bearing driver set 13-3
 bearing puller 13-3
 bearing puller wedge 13-3
 bell crank
 forward/reverse 7-5
 bell crank and shaft 7-7
 belt, drive 11-3, 11-5
 belt, starter/generator 7-15, 11-3
 bezel, headlight 7-11
 block, fuse 7-7
 body, front 1-3
 boot, dust 6-5
 boot, rubber 9-3
 boot, steering column 6-3
 box, electrical component 7-7
 brace, trailer hitch 1-13
 bracket
 accelerator support 9-9
 brake cable guide 6-7
 governor cable engine 9-9
 mounting (headlight) 7-11
 mounting (starter/generator) 7-15
 muffler mounting 10-3
 oil filter 8-7
 oil level switch 8-11
 rpm limiter 8-5
 snubber 8-15
 stabilizer bar mounting 6-13
 support (governor cable) 9-9
 throttle 9-7
 transmission cable support 7-5
 transmission cable support 12-3
 bracket (fuel/hour gauge) 7-9
 bracket, adjusting (starter/generator) 7-15
 cluster, brake 4-3, 4-5
 brake actuator 4-3, 4-5
 brake adjustment tool 13-3
 brake cable 4-5, 5-3
 brake cable clamp 6-7
 brake cable hanger 6-11
 brake cable, front 4-3
 brake mounting block 5-3
 brake pedal 5-3
 brake pedal adjustment tool 13-3
 brake pedal tension tool 13-3
 brake shoe 4-3, 4-5
 brake spring 4-3, 4-5
 breather (transaxle) 12-3
 bronze bushing 7-5, 7-7
 brush (starter/generator) 7-13
 brush connector (starter/generator) 7-13
 brush guard 1-3
 brush spring (starter/generator) 7-13
 bulb, halogen 7-11
 bumper, front 1-3
 bumper, return spring 5-5
 bumper, rubber 1-9, 5-3

INDEX

bumper, seat 1-5
bushing
 bronze 6-9, 7-5, 7-7
 stabilizer bar 6-13
 steel 1-7, 6-9, 6-11
 urethane 1-7, 6-7, 6-9, 6-11
buzzer, reverse 7-9

C

cable
 accelerator 9-9
 choke 9-11
 governor 9-9
 iqdm 13-5
 transmission 7-5
calibration test module 13-3
cam (driven clutch) 11-5
cam installation tool 13-3
cam, electrical box 7-7
cam, service 7-5
camshaft 8-11
cap
 corner 1-5
 front corner 1-11
 fuel tank 9-3
 key switch 7-9
 plug 8-5
 seat back 1-5
carburetor 9-5, 9-7
card, safety first 13-5
front panel 1-11
side panel 1-11
case, gear 12-3
case, gear carrier 12-7
case, rocker 8-9
choke cable 9-11
circlip, type-e 8-9
clamp
 battery 7-17
 brake cable 6-7
 cable retaining 9-9
 hose 9-3
 hose (air intake) 9-11
 hose (bronze) 9-7
 hose (gray) 9-3, 9-7
 hose (red) 9-3
 muffler 10-3
 plastic (fuel line) 9-3
clevis, upper delta 6-9
clip 6-3
clutch alignment tool 13-3
clutch tool kit 13-3
clutch, drive 11-3
coil, ignition 8-5
collet (cylinder head) 8-9
column, steering 6-3

communication display module 13-3
compression gauge 13-3
compression mount 6-13
compressor, piston ring 13-5
compressor, valve spring 13-7
connecting rod 8-13
connecting rod (crankshaft) 8-13
connector (starter/generator) 7-13
connector, oil sending unit 8-11
continuity tester 13-5
counterbalance weight 8-13
cover
 brush inspection (starter/generator) 7-13
 crankcase 8-11
 dust 4-3, 4-5, 6-9
 electrical component box 7-7
 gear case 12-7
 pump 8-7
 steering column 6-3
 vinyl seat back 1-5
 vinyl seat bottom 1-5
crankcase, fe350 8-13
crankshaft, fe350 8-13
cup holder 1-3
cup, spring 5-5
cutter, valve seat 13-7
cylinder head shroud 8-3
cylinder head, fe350 8-9

D

damper 8-5
panel, center dash 1-3
dash, driver side 1-3
dash, passenger side 1-3
decal
 bed latch warning 3-3
 bed load warning 1-11, 3-3
 club car tailgate 1-11, 3-5
 crush area 3-3
 diode wiring 3-5
 driver/passenger warning 3-3
 frame ground 3-5
 gasoline warning 3-5
 ingersoll-rand 3-3
 key switch 3-3
 operating instructions 3-3
 pioneer 900 3-3
 pioneer tailgate 1-11, 3-5
 rotating parts 1-13, 3-5
 rotating parts and hot manifold 3-5
 trailer hitch 1-13, 3-5
 under age warning 3-3
 vehicle loading 3-3
 winch cable warning 3-5
delta a-plate 6-7
delta shock and gear support 6-7

differential gear 12-7
differential gear case 12-7
differential pin 12-7
diode 7-9
diode, flyback 7-7
diode, headlight 7-9
dipstick 8-3
double lip seal 6-9
drag link, rack and pinion 6-5
drain plug 8-7
drain plug (transaxle) 12-3
drive belt 11-3, 11-5
drive clutch 11-3
drive clutch holder tool 13-3
drive clutch hub puller 13-3
drive clutch puller 13-3
drive hub 11-3
driven clutch 11-5
driven clutch cam puller 13-3
driven clutch puller plug 13-3
drum, brake 4-3, 4-5
dry moly lubricant 13-5
duct, air 9-11
dust cover 4-3, 4-5, 6-9

E

eccentric 6-9
e-clip (air box top) 9-11
end bell, commutator 7-13
end bell, output shaft 7-13
engine, fe350 ohv gasoline 8-3
equalizer 5-3
equalizer and pivot limiter 5-3
e-ring (governor cable) 9-9
exhaust system 10-3
exhaust valve 8-9

F

fan housing 8-3
fan shroud 8-3
fan, flywheel 8-5
fe350 ohv gasoline engine 8-3
fender, front 1-3
fender, rear (driver-side) 1-13
field coil (starter/generator) 7-13
field coil housing (starter/generator) 7-13
filter, air 9-11
filter, fuel 9-3
filter, oil 8-7
fitting, grease 6-7, 6-9
fitting, thread-forming grease 6-5
fixed face 11-5
fixed face (drive clutch) 11-3
float (carburetor) 9-5
float chamber 9-5
floor mat 1-3

INDEX

flywheel 8-5
flywheel puller 13-5
fork, shift 12-5
forward/reverse shifter 7-5
frame, tilt bed 1-7
front spring retainer plate 6-9
fuel impulse pump 9-3
fuel line 9-3
fuel strap 9-3
fuel tank 9-3
fuel/hour gauge 7-9
fuse block 7-7
fuse, 10-amp 7-7
fuse, 20-amp 7-7

G

gasket
 carburetor 9-7
 crankcase cover 8-11
 drain plug 8-7
 exhaust 10-3
 float chamber 9-5
 head 8-9
 insulator 9-7
 liquid 12-3, 13-5
 oil pump 8-7
 rocker case 8-9
 throttle bracket 7-7
gauge, compression 13-3
gauge, fuel/hour 7-9
gear
 17 tooth 12-5
 cluster idler 12-5
 differential 12-7
 differential idler 12-7
 helical (crankshaft) 8-13
 input 12-5
 output 12-7
 spur (crankshaft) 8-13
 spur (transaxle) 12-5
gear case 12-3
gear case cover 12-7
gear yoke 13-5
governor 12-5
governor cable 9-9
governor lever arm 12-3
governor shaft installation tool 13-5
grease fitting 6-9
grip, pencil 6-3
grommet (flywheel) 8-5
grommet, insulation 9-3
guard, brush 1-3
guard, unitized transaxle 12-7
guide (transaxle) 12-5
guide ring adhesive 13-3
guide, steering rack 6-5

guide, valve 8-9
guide, valve seat cutter 13-7

H

halogen bulb 7-11
hand grip, tilt latch 1-7
handle, forward/reverse switch 7-5
hanger, brake cable 4-5, 6-11
hardware, terminal (stator/generator) 7-13
harness, headlight wire 7-11
headlight 7-11
headlight wire harness 7-11
hitch, receiver trailer 1-13
holder, brush (starter/generator) 7-13
hose, intake 9-11
housing, fan 8-3
housing, field coil (starter/generator) 7-13
hub 6-9
hub, drive 11-3
hub, synchronizer clutch 12-5
hydraulic brake adjuster 13-5
hydraulic lifter 8-11
hydrometer 13-5

I

idle screw 9-5
ignition coil 8-5
insert, synchronizer 12-5
insert, wood 1-5
insulation, bulk 1-7
insulator, carburetor 9-7
insulator, f terminal 7-13
intake valve 8-9
internal retaining ring pliers 13-5
iq display module (iqdm) 13-5

J

jet, main 9-5
jet, pilot 9-5
joint
 ball (tie rod) 6-7
 ball (transmission cable) 7-5
 ball left-hand thread 6-5, 6-7
 compound steering 6-3
 spring-loaded ball (accelerator rod) 5-5

K

key
 square transmission 11-5
 switch 7-9
 woodruff 12-3
 woodruff (starter/generator) 7-13
key (crankshaft) 8-13
key (driven clutch) 11-5
key (flywheel) 8-5

key (vehicle) 7-9
kingpin 6-9
kingpin wave washer 6-9
kit
 accelerator pedal rod 5-5
 air duct repair 9-11
 brake pedal adjustment tool 13-3
 diode 7-9
 drive clutch button 11-3
 drive clutch weight 11-3
 driven clutch button 11-5
 fuel tank 9-3
 iq display module (iqdm) 13-5
 park brake latch 5-5
 pulley nut and screw 7-13
 reverse buzzer 7-9
 service cam 7-5
 shock absorber cushion 6-11
 steel box 1-11
 tune-up 13-7
knob, light switch 7-11

L

latch 1-7
latch, slam 1-11
latch, wire 9-11
lead wire 8-5
lens, headlight 7-11
lever
 choke 9-11
 shifter 12-3
 transmission shifter 12-3
lifter, hydraulic 8-11
light switch 7-11
light switch knob 7-11
light, oil warning 7-9
limit switch 7-5
limiter, rpm 8-5
line
 fuel 9-3
 vent 9-3, 9-7
link, rack and pinion drag 6-5
link, stabilizer bar 6-13
liquid gasket 13-5
lower pinion bearing 6-5
lubricant, dry moly 13-5
lubricant, moly-teflon 13-5
lug nut 2-3
lug stud 6-9, 12-7

M

main jet 9-5
mat, floor 1-3
meter, volt ohm 13-7
module, calibration test 13-3
module, communication display 13-3

INDEX

moly-teflon lubricant 13-5
mount, compression 6-13
mounting bracket (headlight) 7-11
moveable face (drive clutch) 11-3
moveable face (driven clutch) 11-5

N

nozzle, main 9-5
nut
 key switch 7-9
 lug 2-3

O

oil and rotor pump 8-7
oil filler tube 8-3
oil filter 8-7
oil level sensor 8-11
oil seal 8-13, 12-3
oil seal (axle tube) 12-7
oil warning light 7-9
o-ring 8-7, 8-11, 8-13, 9-11

P

package, hub bearing 6-9
pad
 accelerator pedal 5-5
 brake pedal 5-3
 park brake 5-3
 spring 6-11
pad, thermal 7-9
paint, touch-up 13-7
panel, seat support 1-5
park brake latch 5-3
park brake pedal 5-3
park brake ratchet 5-5
pedal, accelerator 5-5
pencil grip 6-3
pilot air screw 9-5
pilot jet 9-5
pin
 differential 12-7
 governor cable clevis 9-9
 hair spring cotter 9-9
 piston 8-13
pinion, steering 6-5
pipe, intake 9-7
piston 8-13
piston pin 8-13
piston ring compressor 13-5
piston ring pliers 13-5
piston ring set 8-13
pivot arm 12-3
pivot support bearing 5-5
plate 8-9
 backing 4-3, 4-5

floor 1-7
flywheel fan 8-5
front spring retainer 6-9
mounting 8-15
oil filter screen 8-11
oil pump 8-7
scorecard 6-3
spring mounting 6-7
thrust 12-5
thrust (differential gear) 12-7
thrust (idler gear) 12-7
tilt bed latch 1-9
pliers
 internal retaining ring 13-5
 piston ring 13-5
 retaining ring 13-5
plug
 drain 8-7
 drain (transaxle) 12-3
 drive clutch 11-3
 driven clutch puller 13-3
 spark (ohv) 8-5
plug cap 8-5
pop rivet 9-11
press weldment 13-3
prop rod 1-9
protector spray, battery terminal 13-3
puller
 bearing 13-3
 drive clutch 13-3
 drive clutch hub 13-3
 driven clutch cam 13-3
 flywheel 13-5
 seal 13-5
pulley (stator/generator) 7-13
pump cover 8-7
pump, fuel implus 9-3
pump, oil and rotor 8-7
push rod 8-9

R

rack, steering 6-5
ratchet, park brake 5-5
reamer, valve guide 13-7
rear leaf spring 6-11
rear spring shackle 6-11
remover, bearing and oil seal 13-3
retainer
 headlight 7-11
 shock absorber cushion 6-11
 spring (accelerator pivot) 5-5
 spring (drive clutch) 11-3
 valve spring 8-9
retainer, bearing (starter/generator) 7-13
retaining ring 7-5, 7-7
retaining ring (drive clutch) 11-3

retaining ring (driven clutch) 11-5
retaining ring pliers 13-5
return spring 5-5
return spring bumper 5-5
reverse buzzer 7-9
ring
 c-type stop 6-5
 retaining 7-5, 7-7
 retaining (drive clutch) 11-3
 retaining (driven clutch) 11-5
 retaining (steering gear box) 6-5
 snap 6-5
 snap 8-13
 spiral back-up 11-3
 synchronizer 12-5
ring set, piston 8-13
ring, retaining (steering column) 6-3
rivet, pop 9-11
rocker arm 8-9
rocker case 8-9
rocker shaft 8-9
rod
 connecting 8-13
 connecting (crankshaft) 8-13
 equalizer 5-3
 push 8-9
 shift 12-5
 tie 6-7
rpm limiter 8-5
rubber boot 9-3

S

safety first card 13-5
score card 6-3
score card clip 6-3
scorecard plate 6-3
screen, oil filter 8-11
screw
 idle 9-5
 pilot air 9-5
 pole piece (starter/generator) 7-13
 valve clearance adjuster 13-7
seal
 bed 1-7
 crankshaft 8-11
 double lip 6-9
 dust (ball joint) 6-7
 dust (steering gear box) 6-5
 dust, steering pinion 6-5
 input shaft oil 12-5
 intake (air box) 9-11
 oil 8-13, 12-3
 oil (axle tube) 12-7
 valve 8-9
seal puller 13-5
seat back 1-5

INDEX

seat bottom 1-5
seat, bearing 6-3
seat, spring 8-9
sensor, oil level 8-11
set, pole 7-13
shackle, rear spring 6-11
shaft
 guide counterbalance 8-13
 input (synchronizer) 12-5
 rocker 8-9
 shifter 12-3
 steering column 6-3
shield, air duct 9-11
shift fork 12-5
shift rod 12-5
shifter shaft 12-3
shim (camshaft) 8-11
shim, crankshaft 8-13
shim, latch plate 1-9
shim, tilt bed pivot 1-7
shock absorber 6-7
shock absorber cushion 6-11
shock absorber cushion retainer 6-11
shock absorber, rear 6-11
shoe retainer 4-3, 4-5
shroud
 cylinder head 8-3
 fan 8-3
 lower cylinder 8-3
 upper cylinder 8-3
slam latch 1-11
sleeve (governor) 12-5
sleeve, delta 6-7
sleeve, synchronizer 12-5
snap ring 6-5, 8-13
snubber 8-15
solenoid, 12-volt 7-7
spacer
 5/16 (stater/generator) 7-13
 battery terminal 7-17
 fixed face shaft 11-3
spacer (accelerator pivot rod) 5-5
spacer (stabilizer bar) 6-13
spark plug (ohv) 8-5
spindle 6-9
spray, battery terminal protector 13-3
spring
 brake return 5-3
 brush (starter/generator) 7-13
 compression 6-3
 drive clutch 11-3
 engine valve 8-9
 forward/reverse cam 7-5
 latch extension 1-7
 rear leaf 6-11
 return 5-5

 return (air box) 9-11
 synchronizer 12-5
 tapered compression 6-3
 tapered leaf 6-9
 throttle return 9-7
 yoke 6-5
spring (compression release) 8-11
spring mounting plate 6-7
spring seat 8-9
spring, park brake torsion 5-3
stabilizer bar 6-13
stabilizer bar link 6-13
starter/generator 7-13, 7-15
steel ball (transaxle) 12-5
steel box kit 1-11
steel bushing 1-7, 6-9, 6-11
steering column 6-3
steering column bearing press tool 13-5
steering column mounting bracket 6-3
steering column retaining ring tool 13-5
steering column shaft 6-3
steering gear box 6-5
steering wheel 6-3
steering wheel puller tool 13-7
stem, valve 2-3
stiffener, flywheel side 8-15
stiffener, pto side 8-15
stiffener, seat 1-5
strap, a-plate 6-7
strap, seat bottom 1-5
stud
 ball 12-3
 ball (accelerator rod) 5-5
 ball (component box) 7-7
 ball (forward/reverse shifter) 7-5
 lug 6-9, 12-7
support
 accelerator pivot rod 5-5
 stabilizer bar bushing 6-13
support, latch plate 1-9
switch
 key 7-9
 light 7-11
 limit 7-5
synchronizer clutch hub 12-5
synchronizer ring 12-5
system, exhaust 10-3

T

10-amp fuse 7-7
12-volt solenoid 7-7
20-amp fuse 7-7
tachometer 13-7
tailgate 1-11
tailgate angle 1-11
tailskirt 1-13

tape, vhb (air duct shield) 9-11
tapered compression spring 6-3
tapered leaf spring 6-9
terminal hardware (starter/generator) 7-13
tester, continuity 13-5
tether (tailgate) 1-11
thermal pad 7-9
thermometer, battery 13-3
thrust bearing 6-9
thrust plate 12-5
thrust plate (differential gear) 12-7
thrust plate (idler gear) 12-7
tie rod 6-7
tie, wire 6-5, 6-7, 7-11
tilt bed 1-7
tilt bed hinge 1-7
tire and wheel assembly 2-3
tool
 accelerator pedal adjustment 13-3
 brake adjustment 13-3
 brake pedal adjustment 13-3
 brake pedal tension 13-3
 cam installation 13-3
 clutch alignment 13-3
 drive clutch holder 13-3
 governor shaft installation 13-5
 steering column bearing press 13-5
 steering column retaining ring 13-5
 steering wheel puller 13-7
 transaxle axle seal 13-7
 transaxle pinion seal 13-7
 transmission 13-7
tool kit, clutch 13-3
top, air box 9-11
touch-up paint 13-7
track, prop rod 1-9
trailer hitch, receiver 1-13
transaxle axle seal tool 13-7
transaxle pinion seal tool 13-7
transaxle, unitized 12-3
transmission shifter lever 12-3
transmission tool 13-7
trim, front body 1-3
trim, seat bottom 1-5
tube
 7 mm (flywheel) 8-5
 axle 12-7
 crankcase vent 9-7
 oil filler 8-3
tune-up kit 13-7
turn signal lens 7-11

U

u-bolt 6-11
unitized transaxle 12-3
upper pinion bearing 6-5

INDEX

urethane bushing 1-7, 6-7, 6-9, 6-11

V

valve 8-9

choke 9-11

exhaust 8-9

fuel pickup tube 9-3

intake 8-9

stem 2-3

valve clearance adjuster screw 13-7

valve guide 8-9

valve guide reamer 13-7

valve seal 8-9

valve seat cutter 13-7

valve seat cutter guide 13-7

valve seat t-wrench 13-7

valve spring compressor 13-7

vehicle care kit 13-7

vent, fuel tank 9-3

volt ohm meter 13-7

voltage regulator 7-7

W

washer

drive clutch 11-3

driven clutch 11-5

flat, delrin 7-5, 7-7

kingpin wave 6-9

nylon flat 7-5

spring 12-5

thrust 12-5

wave 7-5

wedge (steering column) 6-3

wedge, bearing puller 13-3

weight, counterbalance 8-13

weight, drive clutch 11-3

weldment

press 13-3

wheel and tire assembly 2-3

wheel, steering 6-3

wire assembly 7-3, 7-15

wire harness 7-3

wire latch 9-11

wire tie 6-5, 6-7, 7-11

wire, lead 8-5

woodruff key 12-3

woodruff key (stator/generator) 7-13

Y

yoke spring 6-5

yoke, gear 13-5



Club Car, Inc.
P.O. Box 204658
Augusta, GA 30917-4658
USA

Web	www.clubcar.com
Phone	1.706.863.3000
	1.800.ClubCar
Int'l	+1 706.863.3000
Fax	1.706.863.5808

