

1997
ILLUSTRATED
PARTS LIST



**CARRYALL I, CARRYALL II,
CARRYALL II PLUS, AND
CARRYALL VI VEHICLES**

MANUAL NUMBER 1019285-02
PRINT CODE 0896D0808C

USING THE ILLUSTRATED PARTS LIST

WARNING

- **THIS MANUAL IS TO BE USED ONLY FOR IDENTIFICATION AND ORDERING OF SERVICE PARTS. BE SURE TO READ AND USE THE MAINTENANCE AND SERVICE MANUAL BEFORE ATTEMPTING ANY VEHICLE REPAIRS.**

This manual covers all 1997 Club Car Carryall® vehicles. See Important Notice on the following page.

The manual is divided into 15 sections. Sections 1 through 5 pertain to both gasoline and PowerDrive® electric vehicles, sections 6 through 11 pertain to gasoline vehicles only, and sections 12 through 15 pertain to PowerDrive electric vehicles only. Note that there are two or three flags on the outside edge of each page. The first flag will contain the section number of which that page is a part. The other flag (or flags) will contain either the letter G or E, signifying that the page pertains to either the gasoline or PowerDrive electric vehicle only, or to both the gasoline and PowerDrive electric vehicles.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section titles and numbers, and under them, the individual page titles and numbers to be found in that section. Unless a page title specifies a particular vehicle(s), the page applies to all Carryall vehicles.

You will also find vehicle models and serial numbers specified within the listings for individual page titles. These model and serial number specifications identify the vehicles on which parts usage as described on a particular page either began or ended. Have the serial number(s) of your vehicle(s) at hand and read the listings carefully when using the table of contents.

Typically, there is a two-page spread for each individual page title in the Table of Contents (however, some titles required several spreads). On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used. Some item numbers have more than one part number because several models and/or configurations of a component are represented together on one spread.

Note that a part description may be indented. This indentation corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to level 2 is a component of the level 1 part (assembly) that it is listed under. A level 3 part is a component of the level 2 part that it is listed under, and a level 4 part is a component of the level 3 part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part is the quantity used per next higher level assembly of which it is a component. A part that is not indented is a level 1 part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.




P. O. Box 204658
Augusta, Georgia 30917-4658 USA
Telephone 706-863-3000
Service Parts Fax 706-855-7413

© 1996, CLUB CAR INC.
All rights reserved.
This manual effective August 1, 1996
Manual print code: 0896A00000

⚠ IMPORTANT NOTICE!

- ALL EARLY 1997 CLUB CAR VEHICLES WITH 350 ENGINES (INCLUDING CARRYALL II PLUS AND CARRYALL VI) MAINTAINED THE 1996 POWERTRAIN CONFIGURATION UTILIZING SEPARATE TRANSMISSION AND TRANSAXLE UNITS. VEHICLES PRODUCED LATER IN 1997 UTILIZED THE UNITIZED TRANSAXLE POWERTRAIN THAT IS ILLUSTRATED IN SECTION 11 OF THIS MANUAL. IF YOUR VEHICLE HAS THE UNITIZED TRANSAXLE ILLUSTRATED ON PAGES 11-2 THROUGH 11-7, USE THIS MANUAL WHEN ORDERING PARTS. IF YOUR VEHICLE HAS SEPARATE TRANSMISSION AND TRANSAXLE UNITS AS SHOWN BELOW, USE THE 1996 CARRYALL ILLUSTRATED PARTS LIST, CLUB CAR PART NUMBER 1018862-02.

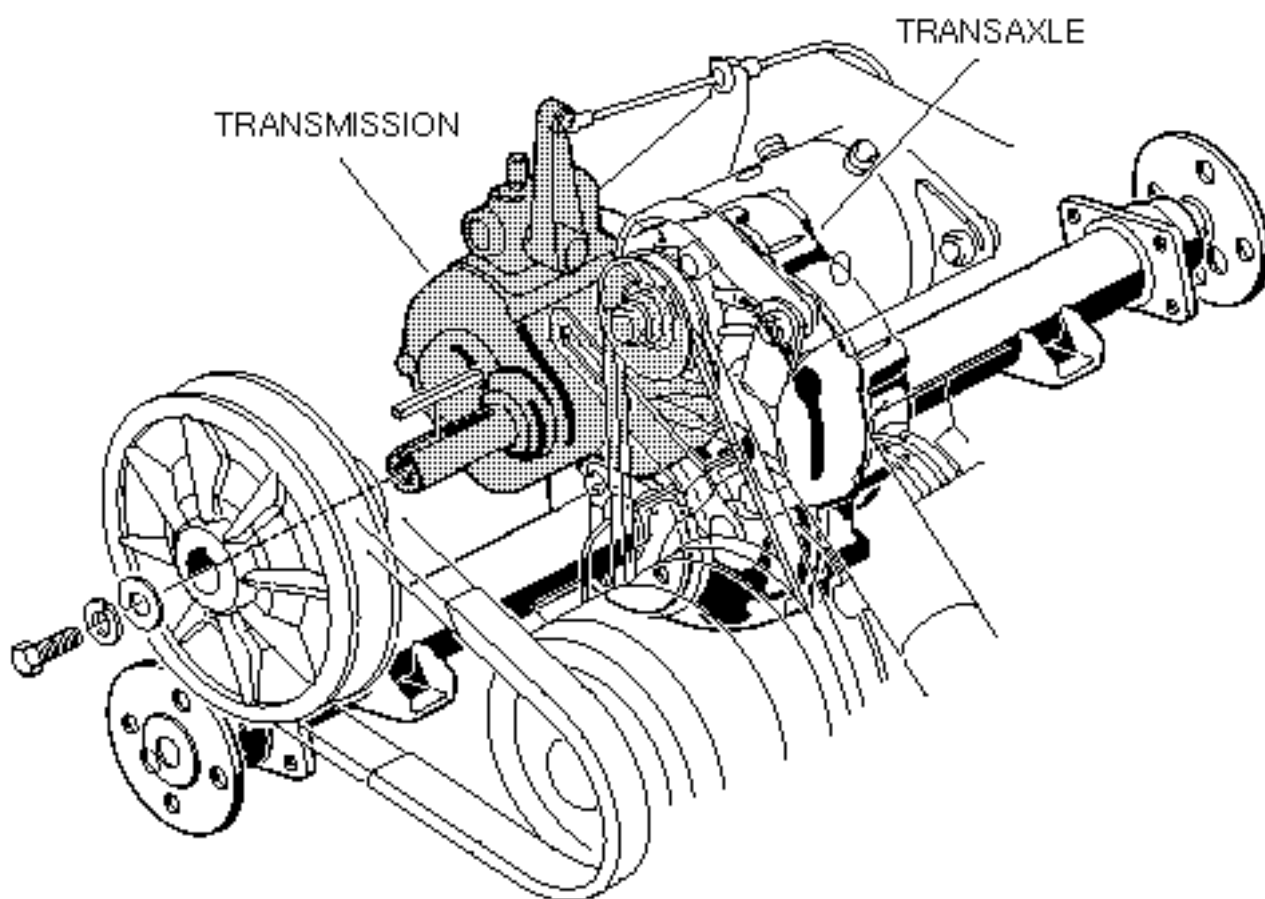

CONTENTS

MAINTENANCE AND SERVICE TOOLS

SECTION

1

THIS SECTION OF THIS MANUAL CONTAINS A LIST OF MAINTENANCE AND SERVICE TOOLS AVAILABLE FROM CLUB CAR	1-2
--	-----

BODY AND TRIM

SECTION

2

FRONT BODY	2-3
SEATS AND SUPPORT STRUCTURE - CARRYALL I, II AND II PLUS	2-5
SEATS AND SUPPORT STRUCTURE - CARRYALL VI	2-7
TILT BED AND LATCH - CARRYALL I	2-9
TILT BED HINGE AND PROP ROD - CARRYALL I, II AND II PLUS	2-11
TILT BED AND LATCH - CARRYALL II AND II PLUS	2-13
ACCESS DOOR AND SIDE DOORS - CARRYALL VI	2-15
FLAT BED ASSEMBLY - CARRYALL VI	2-17
FLAT BED TRIM - CARRYALL VI	2-19
REAR COVER - CARRYALL I, II AND II PLUS	2-21
REAR COVER - CARRYALL VI	2-23
WHEELS AND TIRES	2-25

SAFETY DECALS

SECTION

3

SAFETY DECALS - CARRYALL I, II AND II PLUS	3-3 - 3-5
SAFETY DECALS - CARRYALL VI	3-7 - 3-9

BRAKES, PEDAL, AND CABLE ASSEMBLIES

SECTION

4

REAR BRAKE ASSEMBLY, SELF-ADJUSTING - CARRYALL I	4-3
REAR BRAKE ASSEMBLY, MANUALLY ADJUSTED - CARRYALL II, II PLUS, AND VI	4-5
BRAKE PEDAL AND CABLE ASSEMBLY - VEHICLE WITH 2-WHEEL BRAKING	4-7
BRAKE PEDAL AND CABLE ASSEMBLY - VEHICLE WITH 4-WHEEL BRAKING	4-9
FRONT BRAKE ASSEMBLY - VEHICLE WITH 4-WHEEL BRAKING	4-11
ACCELERATOR PEDAL ASSEMBLY - GASOLINE VEHICLE	4-13
ACCELERATOR PEDAL ASSEMBLY - POWERDRIVE ELECTRIC VEHICLE	4-15

STEERING, FRONT AND REAR SUSPENSION

SECTION

5

STEERING COLUMN	5-3
STEERING GEAR ASSEMBLY	5-5
FRONT SUSPENSION, UPPER - VEHICLE WITH 2-WHEEL BRAKING	5-7
FRONT SUSPENSION, LOWER - VEHICLE WITH 2-WHEEL BRAKING	5-9
FRONT SUSPENSION, UPPER - VEHICLE WITH 4-WHEEL BRAKING	5-11
FRONT SUSPENSION, LOWER - VEHICLE WITH 4-WHEEL BRAKING	5-13
REAR SUSPENSION	5-15
STABILIZER BAR, GASOLINE VEHICLE - CARRYALL II, II PLUS AND VI	5-17

ELECTRICAL SYSTEM - GASOLINE VEHICLE

SECTION

6

FORWARD AND REVERSE SHIFTER ASSEMBLY - GASOLINE VEHICLE	6-3
WIRING, GASOLINE VEHICLE - CARRYALL I	6-5
WIRING, GASOLINE VEHICLE - CARRYALL II	6-7
ELECTRICAL COMPONENT BOX, GASOLINE VEHICLE - CARRYALL I AND II	6-9
ELECTRICAL COMPONENTS, GASOLINE VEHICLE - CARRYALL I, II AND II PLUS	6-11
WIRING, GASOLINE VEHICLE - CARRYALL II PLUS	6-13
WIRING, GASOLINE VEHICLE - CARRYALL VI	6-15
ELECTRICAL COMPONENT BOX, GASOLINE VEHICLE - CARRYALL II PLUS AND VI	6-17

CONTENTS

ELECTRICAL SYSTEM - GASOLINE VEHICLE, CONTINUED

ELECTRICAL COMPONENTS, FRONT BODY, GASOLINE - CARRYALL VI	6-19
CONTROLS AND GAUGES, GASOLINE VEHICLE - CARRYALL VI	6-21
ELECTRICAL COMPONENTS, REAR BODY, GASOLINE VEHICLE - CARRYALL VI	6-23
STARTER/GENERATOR ASSEMBLY	6-25
STARTER/GENERATOR MOUNTING	6-27
BATTERY MOUNTING - GASOLINE VEHICLE	6-29

ENGINE

SECTION

7

FE 290 ENGINE - CARRYALL I AND II	7-3 - 7-13
FE 350 ENGINE - CARRYALL II PLUS AND VI	7-14 - 7-25
ENGINE MOUNTING	7-27

FUEL, INTAKE, AND GOVERNOR SYSTEMS

SECTION

8

FUEL SYSTEM	8-3
CARBURETOR ASSEMBLY, FE 290 - CARRYALL I AND II	8-5
CARBURETOR ASSEMBLY, FE 350 - CARRYALL II PLUS AND VI	8-7
CARBURETOR INSTALLATION	8-9
GOVERNOR AND ACCELERATOR CABLES	8-11
EXPANSION CHAMBER, CHOKE, AND FILTER - CARRYALL I, II AND II PLUS	8-13
EXPANSION CHAMBER, CHOKE, AND FILTER - CARRYALL VI	8-15

EXHAUST SYSTEM

SECTION

9

EXHAUST SYSTEM, FE 290 - CARRYALL I AND II	9-3
EXHAUST SYSTEM, FE 350 - CARRYALL II PLUS AND VI	9-5

TORQUE CONVERTER

SECTION

10

DRIVE CLUTCH	10-3
DRIVEN CLUTCH	10-5

UNITIZED TRANSAXLE - GASOLINE VEHICLE

SECTION

11

UNITIZED TRANSAXLE - GASOLINE VEHICLE	11-3 - 11-7
---	-------------

ELECTRICAL SYSTEM - POWERDRIVE ELECTRIC VEHICLE

SECTION

12

FORWARD AND REVERSE SWITCH - POWERDRIVE ELECTRIC VEHICLE	12-3
CONTINUOUSLY VARIABLE POTENTIOMETER - POWERDRIVE ELECTRIC VEHICLE	12-5
WIRING - CARRYALL I POWERDRIVE ELECTRIC VEHICLE	12-7
ELECTRICAL COMPONENTS, FRONT BODY - CARRYALL I POWERDRIVE ELECTRIC VEHICLE	12-9
ELECTRICAL COMPONENTS, REAR BODY - CARRYALL I POWERDRIVE VEHICLE	12-11 - 12-15
WIRING - CARRYALL II POWERDRIVE ELECTRIC VEHICLE	12-17
ELECTRICAL COMPONENTS, FRONT BODY - CARRYALL II POWERDRIVE ELECTRIC VEHICLE	12-19
ELECTRICAL COMPONENTS, REAR BODY - CARRYALL II POWERDRIVE ELECTRIC VEHICLE	12-21 - 12-25
WIRING - CARRYALL VI POWERDRIVE ELECTRIC VEHICLE	12-27
ELECTRICAL COMPONENTS, FRONT BODY - CARRYALL VI POWERDRIVE ELECTRIC VEHICLE	12-29
CONTROLS AND GAUGES - CARRYALL VI POWERDRIVE ELECTRIC VEHICLE	12-31
ELECTRICAL COMPONENTS, CENTER BODY - CARRYALL VI POWERDRIVE ELECTRIC VEHICLE	12-33 - 12-37
ELECTRICAL COMPONENTS, REAR BODY - CARRYALL VI POWERDRIVE ELECTRIC VEHICLE	12-39

BATTERY CHARGER

SECTION

13

POWERDRIVE BATTERY CHARGER, DOMESTIC - CARRYALL I AND II	13-3
POWERDRIVE BATTERY CHARGER, EXPORT - CARRYALL I AND II	13-5

CONTENTS

ON-BOARD POWERDRIVE BATTERY CHARGER, DOMESTIC - CARRYALL VI	13-7	
ON-BOARD POWERDRIVE BATTERY CHARGER, EXPORT - CARRYALL VI	13-9	
MOTOR - POWERDRIVE ELECTRIC VEHICLE	SECTION	14
MOTOR - POWERDRIVE ELECTRIC VEHICLE	14-3	
TRANSAXLE - POWERDRIVE ELECTRIC VEHICLE	SECTION	15
TRANSAXLE - POWERDRIVE ELECTRIC VEHICLE	15-3	

MAINTENANCE AND SERVICE TOOLS

1

G

E

MAINTENANCE AND SERVICE TOOLS

DESCRIPTION	PART NUMBER
ACCELERATOR PEDAL ADJUSTMENT TOOL	1018710-01
ADAPTER PLUG ASSEMBLY	1018945-01
ADHESION PROMOTER - ARMORFLEX®	1016985
ADHESIVE, GUIDE RING, 3 GRAM TUBE	1018132-02
ARMORFLEX REPAIR KIT	1017295
BATTERY DISCHARGE MACHINE, 36/48 VOLT	1018319-01
BATTERY TERMINAL PROTECTOR SPRAY	1014305
BATTERY THERMOMETER	1011767
BEARING AND OIL SEAL REMOVER ASSEMBLY	1016417
BEARING DRIVER SET	1016416
BEARING PULLER	1012811
BEARING PULLER WEDGE ATTACHMENT	1012812
CALIBRATION TEST MODULE	1018871-01
CAM INSTALLATION TOOL	1018084-01
CLUTCH TOOL KIT	1014510
CLUTCH ALIGNMENT TOOL (USED ON VEHICLES PRIOR TO SERIAL NUMBER 9701)	1014498
DRIVE CLUTCH PULLER	1014496
CLUTCH DRIVE HUB PULLER	1014497
DRIVEN CLUTCH CAM PULLER	1014508
DRIVEN CLUTCH PULLER PLUG	1014507
DRIVE CLUTCH HOLDER TOOL ASSEMBLY.....	1015524
CAM PRESS TOOL	1018091-01
COMMUNICATION DISPLAY MODULE	1018318-01
COMPRESSION GAUGE WITH ADAPTER	1016410-02
CONTINUITY TESTER	1011273
DRY MOLY LUBRICANT	1012151
FLY WHEEL PULLER KIT	1016627
GEAR YOKE	1016418
GOVERNOR SHAFT INSTALLATION TOOL	1019331-01
HEAT SINK COMPOUND.....	1018367-02
HYDROMETER	1011478
INTERNAL RETAINING RING PLIERS	1013593
LIQUID GASKET (TRANSAXLE CASE)	1019287-01
PISTON RING COMPRESSOR KIT	1016414
PISTON RING PLIERS	1016415
RETAINING RING PLIERS - 45° EXTERNAL	1012549
RETAINING RING PLIERS - 90° INTERNAL	1012560
SAFETY FIRST CARD (50 PER PACK)	1018231-01
SEAL PULLER	1012809
STARTER/GENERATOR BELT TENSION TOOL	1016867
STEERING COLUMN BEARING PRESS TOOL	1014264
STEERING COLUMN RETAINING RING TOOL	1014259
STEERING WHEEL PULLER	102061201
TACHOMETER	1016112
TOUCH-UP PAINT, LACQUER - GRAY	1017097-04

MAINTENANCE AND SERVICE TOOLS

1

G

E

DESCRIPTION	PART NUMBER
TRANSAXLE PINION SEAL TOOL	1014161
TRANSAXLE AXLE SEAL TOOL	1014162
TUNE-UP KIT (FE 290)	1016110-02
TUNE-UP KIT (FE 350)	1016110-03
VALVE CLEARANCE ADJUSTER SCREW HOLDER	1016413
VALVE GUIDE REAMER	1016412-01
ARBOR	1016412-02
VALVE SEAT CUTTER T-WRENCH	1016551
VALVE SEAT CUTTER HOLDER	1016552
VALVE SEAT CUTTER 45° (32MM DIAMETER)	1016553
VALVE SEAT CUTTER 45°/30° (35MM DIAMETER)	1016554
VALVE SPRING COMPRESSOR	1016411-01
VOLT OHM METER	1011480


PLEASE REFER TO THE MAINTENANCE AND SERVICE MANUAL FOR PROPER TOOL APPLICATION.

BODY AND TRIM

2

G

E

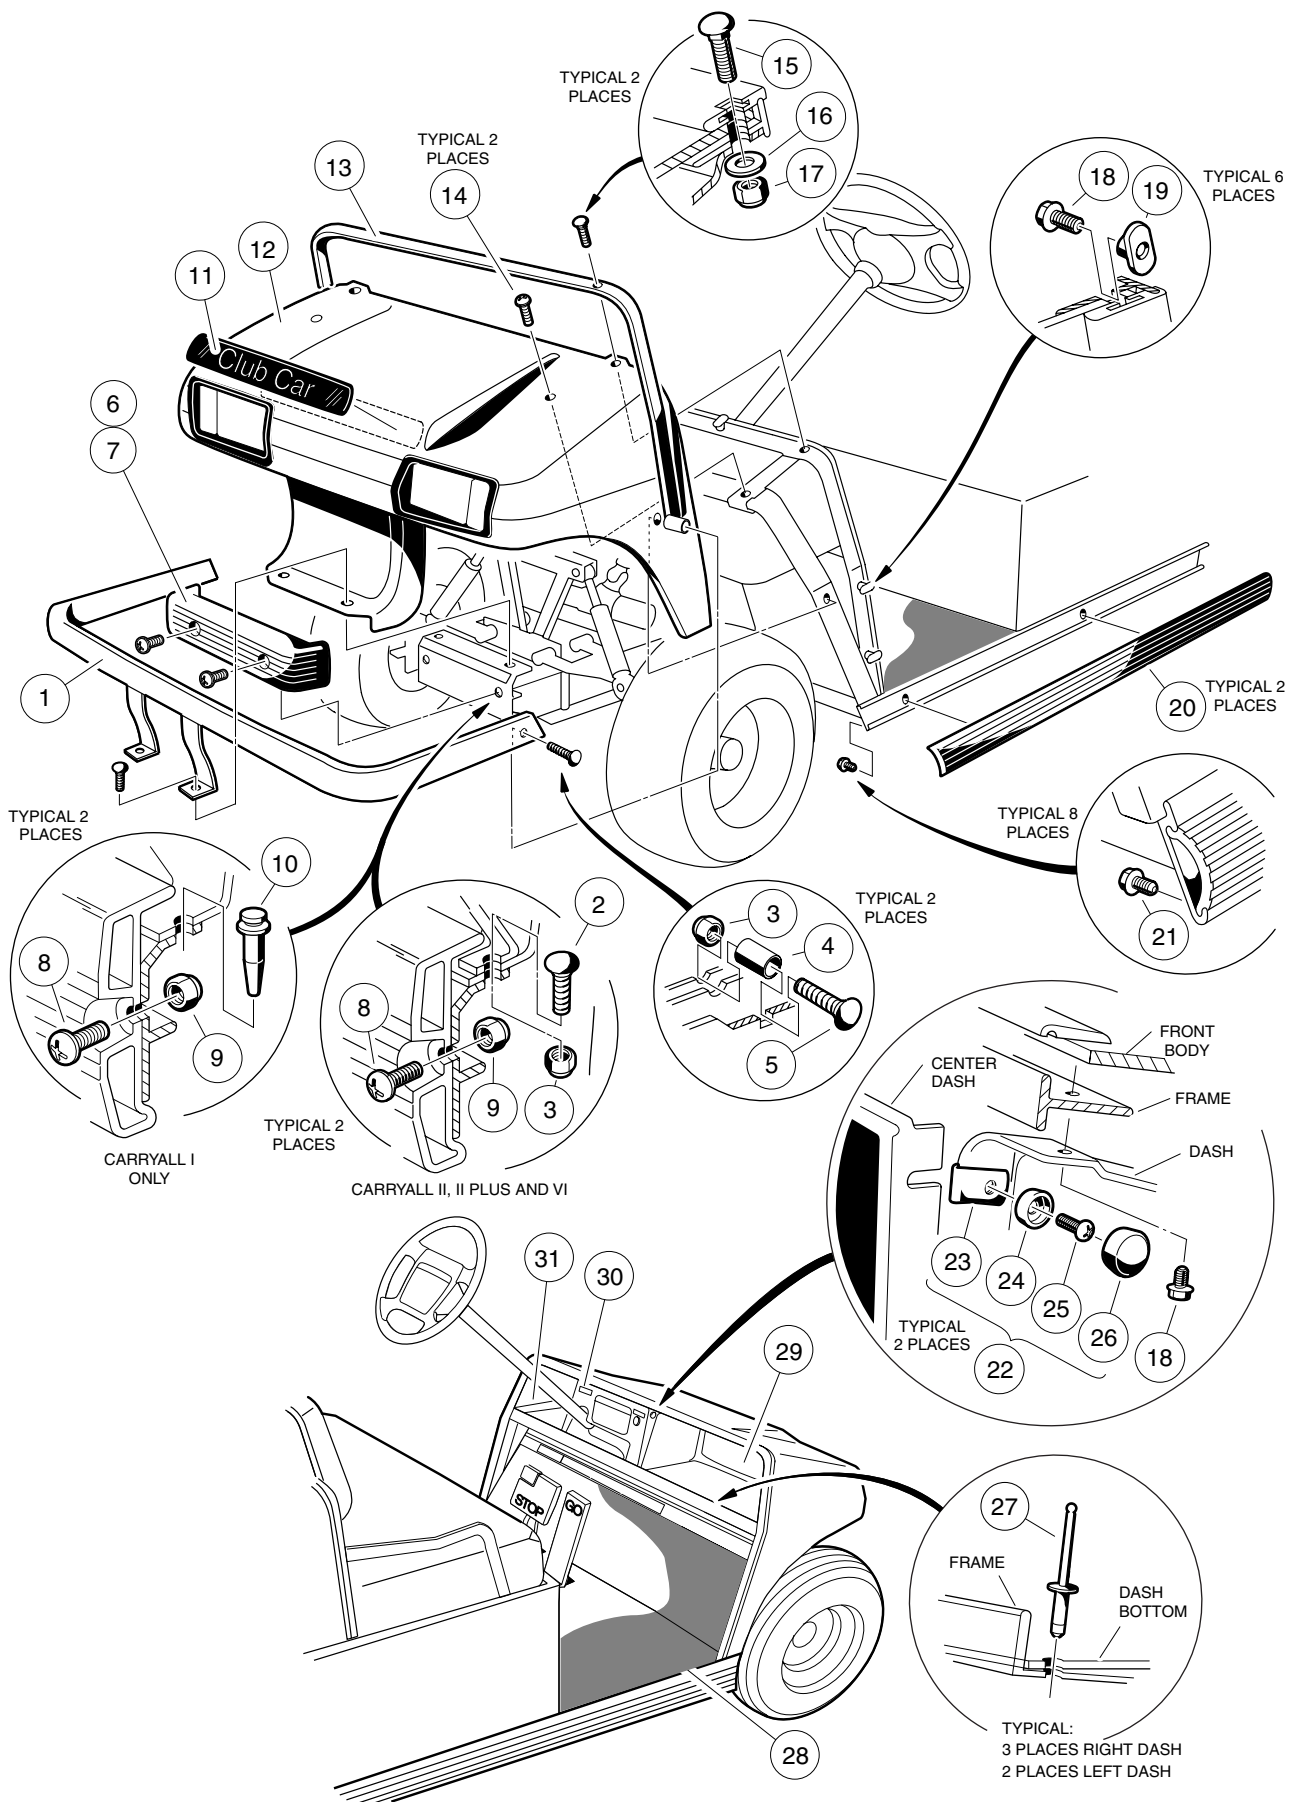


FRONT BODY

2

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	<u>1017348-02</u>	KIT, HEAVY DUTY BUMPER (INCLUDES ITEMS 2 - 5) (CARRYALL II, II PLUS AND VI)	1	1
2	<u>1010435</u>	BOLT, CARRIAGE, 5/16 - 18 x 1	2	2
3	0007473	NUT, NYLON LOCK, 5/16 - 18	4	4
4	<u>1010546</u>	SPACER	2	2
5	<u>1015405</u>	BOLT, CARRIAGE, 5/16 - 18 x 2	2	2
6	<u>1017080</u>	KIT, FRONT BUMPER (INCLUDES ITEMS 7 - 10)	1	1
7	<u>1016868</u>	BUMPER, FRONT	1	1
8	0007251	SCREW, PHILLIPS TRUSS HEAD, 5/16 - 18 x 1	2	2
9	0007473	NUT, NYLON LOCK, 5/16 - 18	2	2
10	<u>1016967</u>	RIVET, BLIND PUSH TYPE	2	2
11	<u>1016702-01</u>	NAMEPLATE - SILVER	1	1
12	<u>1016925-04</u>	BODY, FRONT - GRAY	1	1
12	<u>1016939-04</u>	BODY, FRONT WITH HEADLIGHT OPENING - GRAY (CARRYALL VI ONLY) ..	1	1
13	<u>1011014</u>	TRIM, FRONT BODY	1	1
14	0007251	SCREW, PHILLIPS TRUSS HEAD, 5/16 - 18 x 1	2	2
15	<u>1010435</u>	BOLT, CARRIAGE, 5/16 - 18 x 1	2	2
16	0001241	WASHER, FLAT, 5/16	2	2
17	0007473	NUT, NYLON LOCK, 5/16 - 18	2	2
18	<u>1011017</u>	SCREW, FLANGE LOCK	6	6
19	1011394	NUT, SLAB BASE "T" (PACKAGE OF 4)	1	1
20	<u>1013983</u>	TRIM, SIDE BUMPER GUARD (CARRYALL I ONLY)	2	2
20	1013985	TRIM, SIDE BUMPER GUARD (CARRYALL II AND II PLUS)	2	2
20	<u>1016711</u>	TRIM, SIDE BUMPER GUARD (CARRYALL VI ONLY)	2	2
21	<u>1012047</u>	SCREW, SELF-TAPPING, #8 - 32 x 3/8	8	8
22	<u>1014645</u>	KIT, SNAP WASHER, BLACK (INCLUDES ITEMS 23 - 26)	1	1
23	N/A	NUT, SPEED, #10 - 32	1	1
24	N/A	WASHER, CUP, #10	1	1
25	N/A	SCREW, SHEET METAL, #10 x 3/4	1	1
26	N/A	COVER, SCREW HEAD	1	1
27	0007973	RIVET, ALUMINUM POP, 3/16	5	5
28	<u>1015032</u>	MAT, FLOOR, FRONT	1	1
29	<u>1013343</u>	COMPONENT, RIGHT DASH - BLACK	1	1
30	1016604-04	PANEL, CENTER DASH - BLACK	1	1
31	1013344	COMPONENT, LEFT DASH - BLACK	1	1

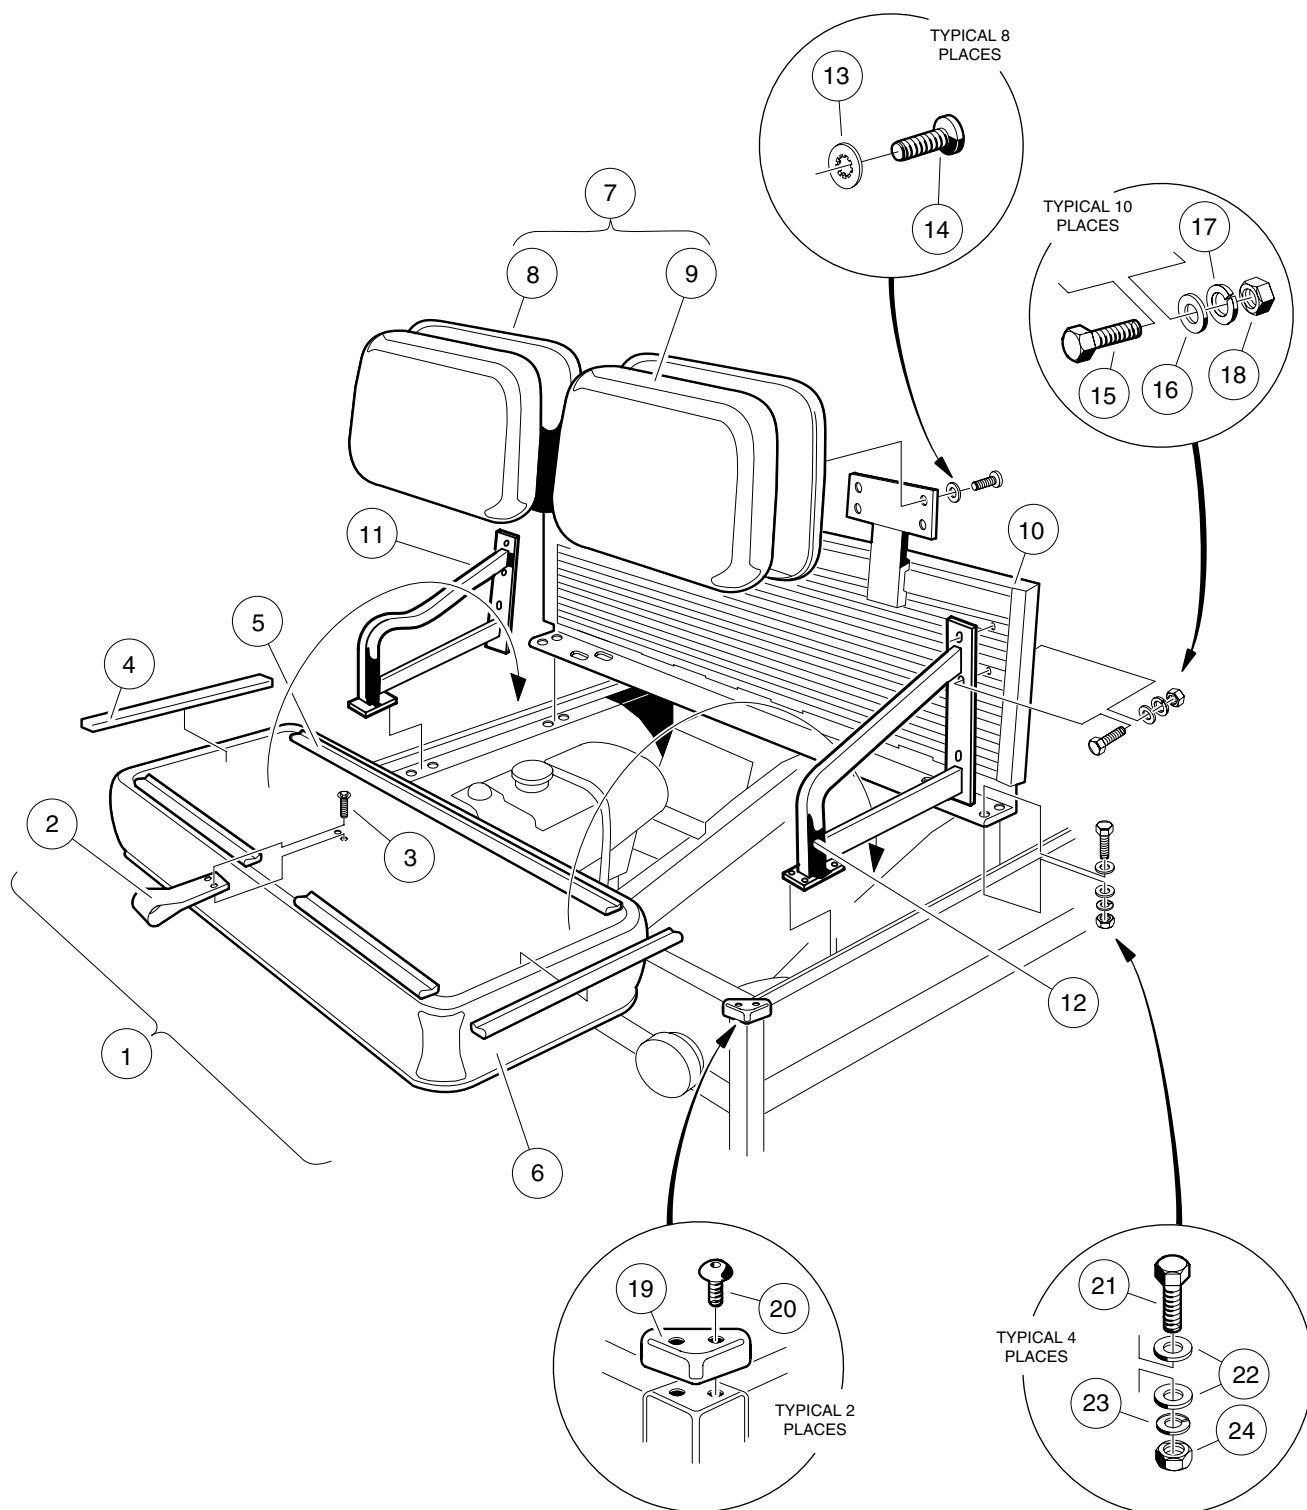


SEATS AND SUPPORT STRUCTURE CARRYALL I, II AND II PLUS

2

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	<u>1015645-02</u>	ASSEMBLY, SEAT BOTTOM - WHITE (INCLUDES ITEMS 2 - 6)	1	1
1	<u>1015645-03</u>	ASSEMBLY, SEAT BOTTOM - BLACK (INCLUDES ITEMS 2 - 6)	1	1
1	<u>1015645-05</u>	ASSEMBLY, SEAT BOTTOM - GRAY (INCLUDES ITEMS 2 - 6)	1	1
2	<u>1013309</u>	STRAP, SEAT BOTTOM	1	1
3	<u>1010545</u>	SCREW, HEX HEAD WASHER, 1/4 - 14 x 3/4	2	2
4	<u>1013311</u>	BUMPER, SEAT, SHORT	4	4
5	<u>1013312</u>	BUMPER, SEAT, LONG	1	1
6	<u>1015627-02</u>	COVER, VINYL SEAT BOTTOM - WHITE	1	1
6	<u>1015627-04</u>	COVER, VINYL SEAT BOTTOM - BLACK	1	1
6	<u>1015627-10</u>	COVER, VINYL SEAT BOTTOM - GRAY	1	1
7	<u>1015652-02</u>	ASSEMBLY, SEAT BACK - WHITE (INCLUDES ITEMS 8 AND 9)	1	1
7	<u>1015652-05</u>	ASSEMBLY, SEAT BACK - BLACK (INCLUDES ITEMS 8 AND 9)	1	1
7	<u>1015652-06</u>	ASSEMBLY, SEAT BACK - GRAY (INCLUDES ITEMS 8 AND 9)	1	1
8	<u>1013335</u>	CAP, SEAT BACK - BLACK	1	1
9	<u>1015626-02</u>	COVER, VINYL SEAT BACK - WHITE	1	1
9	<u>1015626-04</u>	COVER, VINYL SEAT BACK - BLACK	1	1
9	<u>1015626-05</u>	COVER, VINYL SEAT BACK - GRAY	1	1
10	<u>1015239</u>	PANEL, SEAT SUPPORT	1	1
11	<u>1018885-01</u>	ASSEMBLY, ARM REST, PASSENGER	1	1
12	<u>1018885-02</u>	ASSEMBLY, ARM REST, DRIVER	1	1
13	0008304	WASHER, INTERNAL TOOTH LOCK, 1/4	8	8
14	0008248	SCREW, PHILLIPS TRUSS HEAD, 1/4 - 20 x 3/4	8	8
15	0000304	SCREW, HEX HEAD CAP, 1/4 - 20 x 1	8	8
16	0000332	WASHER, FLAT, 1/4	8	8
17	0000451	WASHER, LOCK, 1/4	8	8
18	0001028	NUT, HEX, 1/4 - 20	8	8
19	<u>1014387</u>	CAP, CORNER	2	2
20	<u>1014321</u>	SCREW, TRUSS TORX HEAD, 1/4 - 14 x 3/4	4	4
21	<u>1010934</u>	SCREW, HEX HEAD CAP, 5/16 - 18 x 1	4	4
22	0001241	WASHER, FLAT, 5/16	8	8
23	0007174	WASHER, LOCK, 5/16	4	4
24	0001242	NUT, HEX, 5/16 - 18	4	4

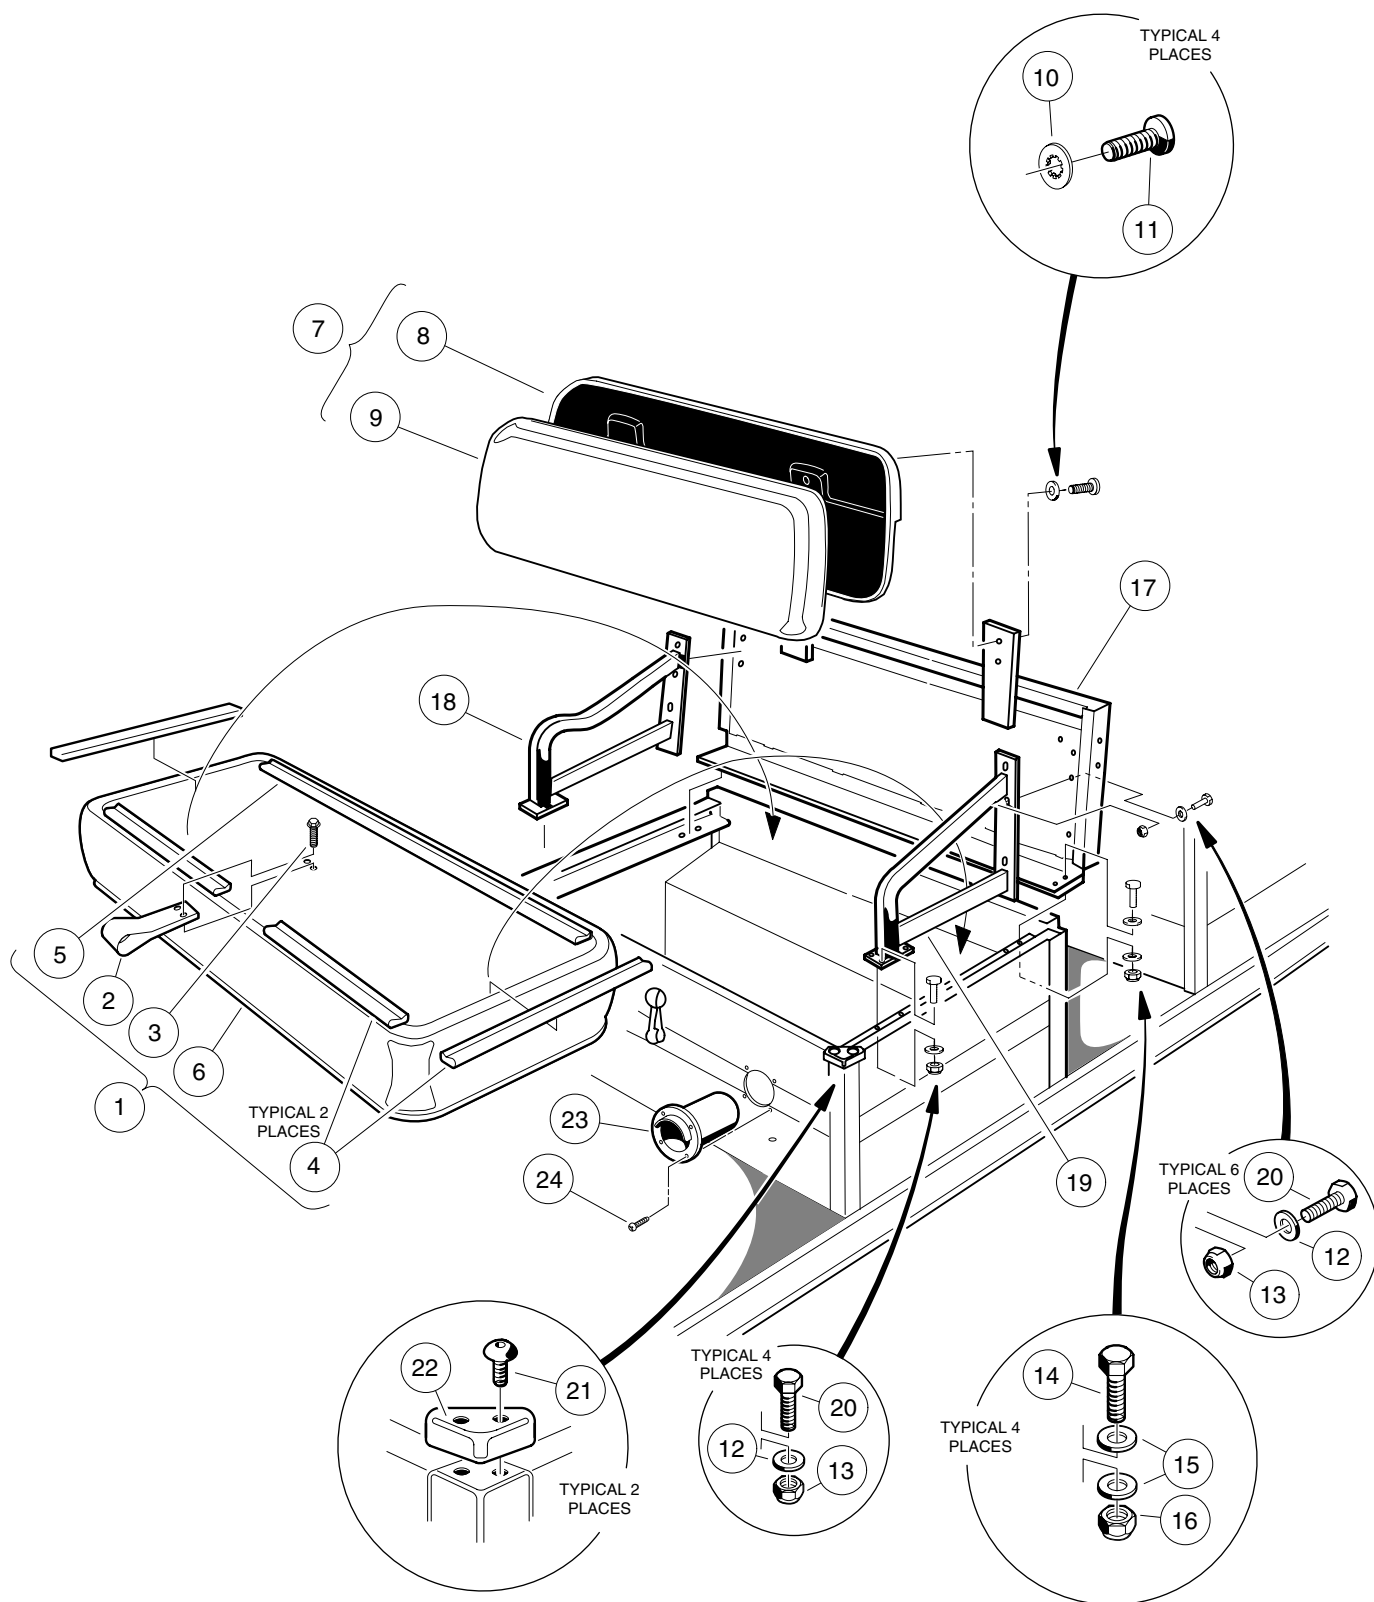


SEATS AND SUPPORT STRUCTURE CARRYALL VI

2

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	<u>1015645-02</u>	ASSEMBLY, SEAT BOTTOM - WHITE (INCLUDES ITEMS 2 - 6)	1	1
1	<u>1015645-03</u>	ASSEMBLY, SEAT BOTTOM - BLACK (INCLUDES ITEMS 2 - 6)	1	1
1	<u>1015645-05</u>	ASSEMBLY, SEAT BOTTOM - GRAY (INCLUDES ITEMS 2 - 6)	1	1
2	<u>1013309</u>	STRAP, SEAT BOTTOM	1	1
3	<u>1010545</u>	SCREW, HEX WASHER HEAD, 1/4 - 14 x 3/4	2	2
4	<u>1013311</u>	BUMPER, SEAT, SHORT	4	4
5	<u>1013312</u>	BUMPER, SEAT, LONG	1	1
6	<u>1015627-02</u>	COVER, VINYL SEAT BOTTOM - WHITE	1	1
6	<u>1015627-04</u>	COVER, VINYL SEAT BOTTOM - BLACK	1	1
6	<u>1015627-10</u>	COVER, VINYL SEAT BOTTOM - GRAY	1	1
7	<u>1016777-01</u>	ASSEMBLY, SEAT BACK - WHITE (INCLUDES ITEMS 8 AND 9)	1	1
7	<u>1016777-02</u>	ASSEMBLY, SEAT BACK - BLACK (INCLUDES ITEMS 8 AND 9)	1	1
7	<u>1016777-05</u>	ASSEMBLY, SEAT BACK - GRAY (INCLUDES ITEMS 8 AND 9)	1	1
8	<u>1016751</u>	CAP, SEAT BACK	1	1
9	<u>1016755-02</u>	COVER, VINYL SEAT BACK - WHITE	1	1
9	<u>1016755-04</u>	COVER, VINYL SEAT BACK - BLACK	1	1
9	<u>1016755-06</u>	COVER, VINYL SEAT BACK - GRAY	1	1
10	<u>0008304</u>	WASHER, INTERNAL TOOTH LOCK, 1/4	4	4
11	<u>0008248</u>	SCREW, PHILLIPS TRUSS HEAD, 1/4 - 20 x 3/4	4	4
12	<u>0000332</u>	WASHER, FLAT, 1/4	10	10
13	<u>0008233</u>	NUT, NYLON LOCK, 1/4 - 20	10	10
14	<u>1010934</u>	SCREW, HEX HEAD CAP, 5/16 - 18 x 1	4	4
15	<u>0001241</u>	WASHER, FLAT, 5/16	8	8
16	<u>0007473</u>	NUT, NYLON LOCK, 5/16 - 18	4	4
17	<u>1016723</u>	ASSEMBLY, SEAT SUPPORT PANEL	1	1
18	<u>1018885-01</u>	ASSEMBLY, ARMREST, PASSENGER	1	1
19	<u>1018885-02</u>	ASSEMBLY, ARMREST, DRIVER	1	1
20	<u>0000304</u>	SCREW, HEX HEAD CAP, 1/4 - 20 x 1	10	10
21	<u>1014321</u>	SCREW, TORX TRUSS HEAD, #10 - 24 x 3/8	4	4
22	<u>1014387</u>	CAP, CORNER	2	2
23	<u>1016673</u>	HOUSING, CORD		1
24	<u>0008796</u>	SCREW, PHILLIPS HEAD, #7 - 19 x 3/4		4

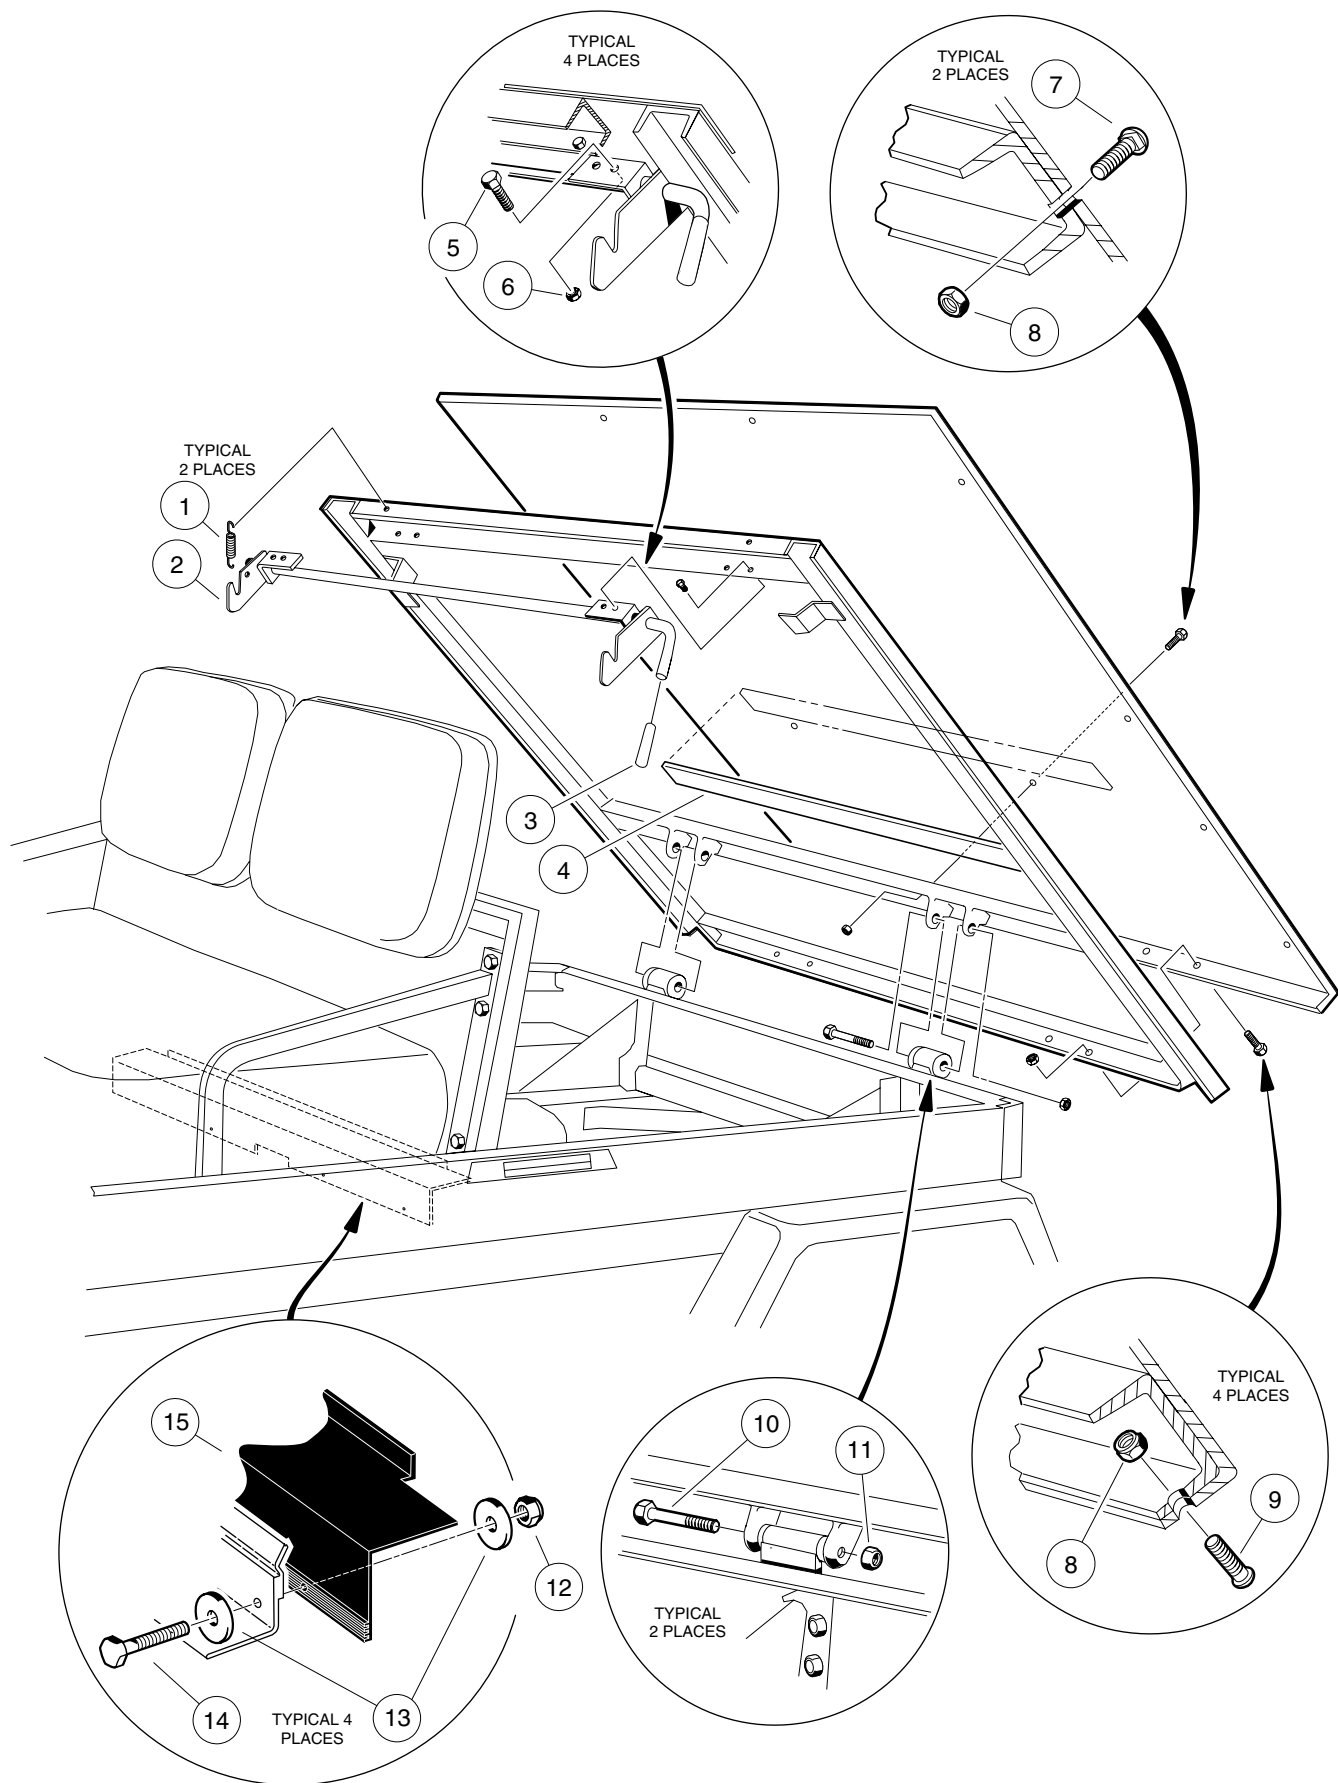


TILT BED AND LATCH - CARRYALL I

2

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
	1015427	ASSEMBLY, TILT BED AND LATCH, CARRYALL I (INCLUDES ITEMS 1 - 9)	1	1
1	<u>1015391</u>	SPRING, LATCH EXTENSION	2	2
2	1015252	ASSEMBLY, LATCH WELD	1	1
3	<u>1015400</u>	HAND GRIP, TILT LATCH	1	1
4	<u>1014471</u>	INSULATION, BULK, (42 LONG)	A/R	A/R
5	0000403	SCREW, HEX HEAD CAP, 1/4 - 20 x 5/8	4	4
6	0001108	NUT, DIMPLED LOCK, 1/4 - 20	4	4
7	<u>1010435</u>	BOLT, CARRIAGE, 5/16 - 18 x 1	2	2
8	0007473	NUT, NYLON LOCK, 5/16 - 18	6	6
9	1015399	SCREW, TORX TRUSS HEAD, 5/16 - 18 x 3/4	4	4
10	0008755	SCREW, HEX HEAD CAP, 3/8 - 16 x 3 3/8	2	2
11	0008754	NUT, NYLON LOCK, 3/8 - 16	2	2
12	0008233	NUT, NYLON LOCK, 1/4 - 20	4	4
13	<u>1014306</u>	WASHER, FLAT, TYPE B, 1/4	8	8
14	0007847	SCREW, HEX HEAD CAP, 1/4 - 20 x 3/4	4	4
15	<u>1017976</u>	SEAL, BED	1	1
		FOR HINGE AND LATCH PLATE COMPONENTS, SEE PAGE 2 - 11.		

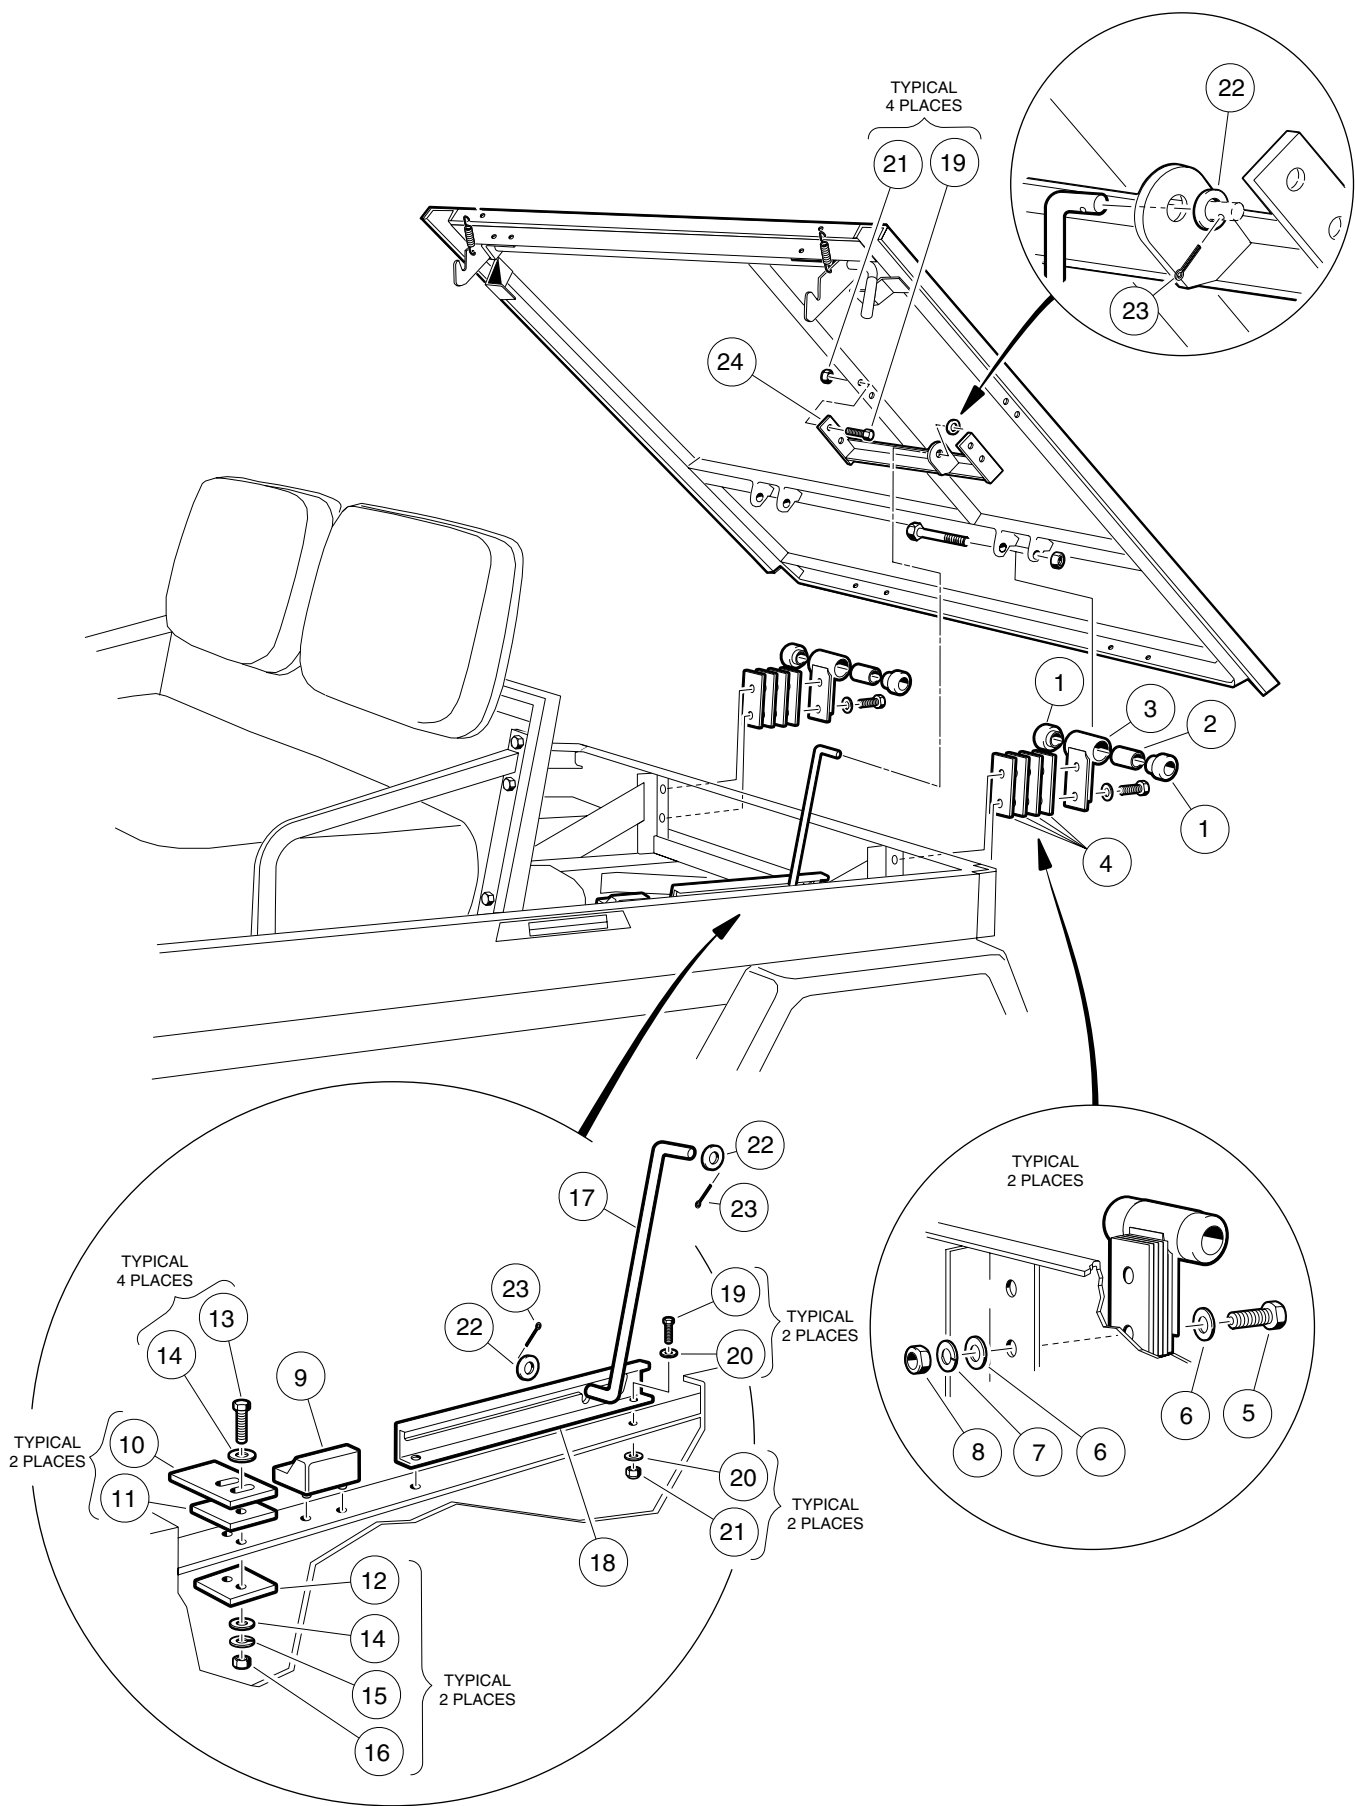


TILT BED HINGE AND PROP ROD CARRYALL I, II AND II PLUS

2

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	<u>1015583</u>	BUSHING, URETHANE	4	4
2	<u>1012303</u>	BUSHING, STEEL	2	2
3	<u>1015356</u>	ASSEMBLY, TILT BED HINGE WELD	2	2
4	<u>1015507</u>	SHIM, TILT BED PIVOT	A/R	A/R
5	0008861	SCREW, HEX HEAD CAP, 3/8 - 16 x 1 3/4	4	4
6	<u>1011990</u>	WASHER, FLAT, 3/8	8	8
7	0000357	WASHER, LOCK, 3/8	4	4
8	0000706	NUT, HEX, 3/8 - 16	4	4
9	1015242	BUMPER, BED	2	2
10	<u>1015277</u>	PLATE, TILT BED LATCH	2	2
11	<u>1016078</u>	SHIM, LATCH PLATE	A/R	A/R
12	<u>1016060</u>	SUPPORT, LATCH PLATE	2	2
13	0000304	SCREW, HEX HEAD CAP, 1/4 - 20 x 1	4	4
14	0000332	WASHER, FLAT, 1/4	8	8
15	0000451	WASHER, LOCK, 1/4	4	4
16	0001028	NUT, HEX, 1/4 - 20	4	4
		ITEMS 17 - 24: CARRYALL II AND II PLUS ONLY		
17	1015348	ROD, PROP	1	1
18	1015700	TRACK, PROP ROD	1	1
19	0007847	SCREW, HEX HEAD CAP, 1/4 - 20 x 3/4	6	6
20	0000332	WASHER, FLAT, 1/4	4	4
21	0008233	NUT, NYLON LOCK, 1/4 - 20	6	6
22	0000334	WASHER, FLAT, 3/8	2	2
23	<u>0001035</u>	PIN, COTTER, 3/32 x 1	2	2
24	<u>1019216-01</u>	SUPPORT, PROP ROD	1	1

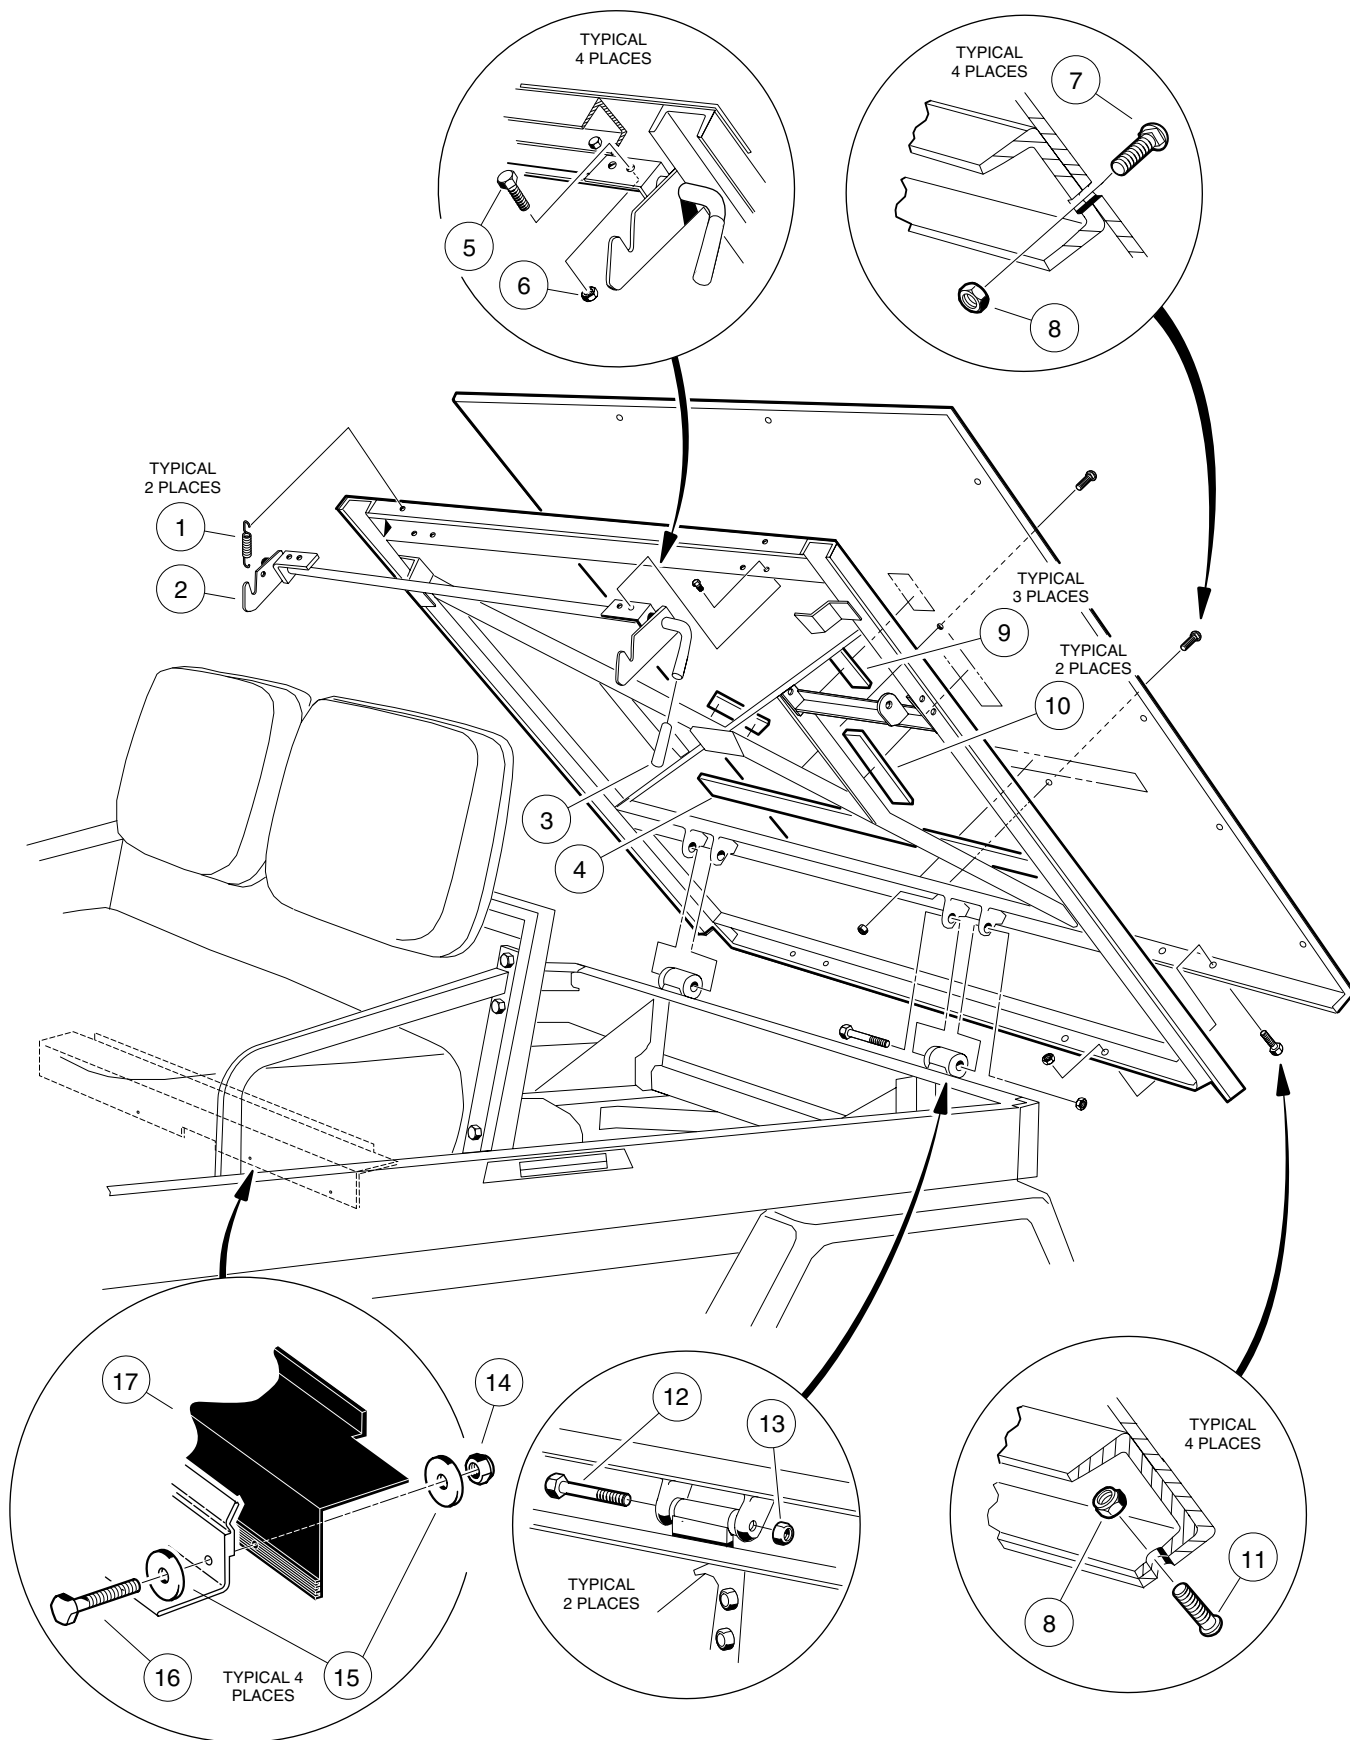


TILT BED AND LATCH - CARRYALL II AND II PLUS

2

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
	<u>1015429-01</u>	ASSEMBLY, TILT BED, MANUAL LIFT, CARRYALL II AND II PLUS (INCLUDES ITEMS 1 - 11)	1	1
1	<u>1015391</u>	SPRING, LATCH EXTENSION	2	2
2	<u>1015252</u>	ASSEMBLY, LATCH WELD	1	1
3	<u>1015400</u>	HAND GRIP, TILT LATCH	1	1
4	<u>1014471</u>	INSULATION, BULK (46 LONG)	A/R	A/R
5	<u>0000403</u>	SCREW, HEX HEAD CAP, 1/4 - 20 x 5/8	4	4
6	<u>0001108</u>	NUT, DIMPLED LOCK, 1/4 - 20	4	4
7	<u>1010435</u>	BOLT, CARRIAGE, 5/16 - 18 x 1	4	4
8	<u>0007473</u>	NUT, NYLON LOCK, 5/16 - 18	8	8
9	<u>1014471</u>	INSULATION, BULK (4 LONG)	A/R	A/R
10	<u>1014471</u>	INSULATION, BULK (8 LONG)	A/R	A/R
11	<u>1015399</u>	SCREW, TORX TRUSS HEAD, 5/16 - 18 x 5/8	4	4
12	<u>0008755</u>	SCREW, HEX HEAD CAP, 3/8 - 16 x 3 3/8	2	2
13	<u>0008754</u>	NUT, NYLON LOCK, 3/8 - 16	2	2
14	<u>0008233</u>	NUT, NYLON LOCK, 1/4 - 20	6	6
15	<u>1014306</u>	WASHER, FLAT, 1/4	8	8
16	<u>0007847</u>	SCREW, HEX HEAD CAP, 1/4 - 20 x 3/4	4	4
17	<u>1017976</u>	SEAL, BED	1	1
		FOR HINGE, LATCH PLATE AND PROP ROD COMPONENTS, SEE PAGE 2 - 11.		

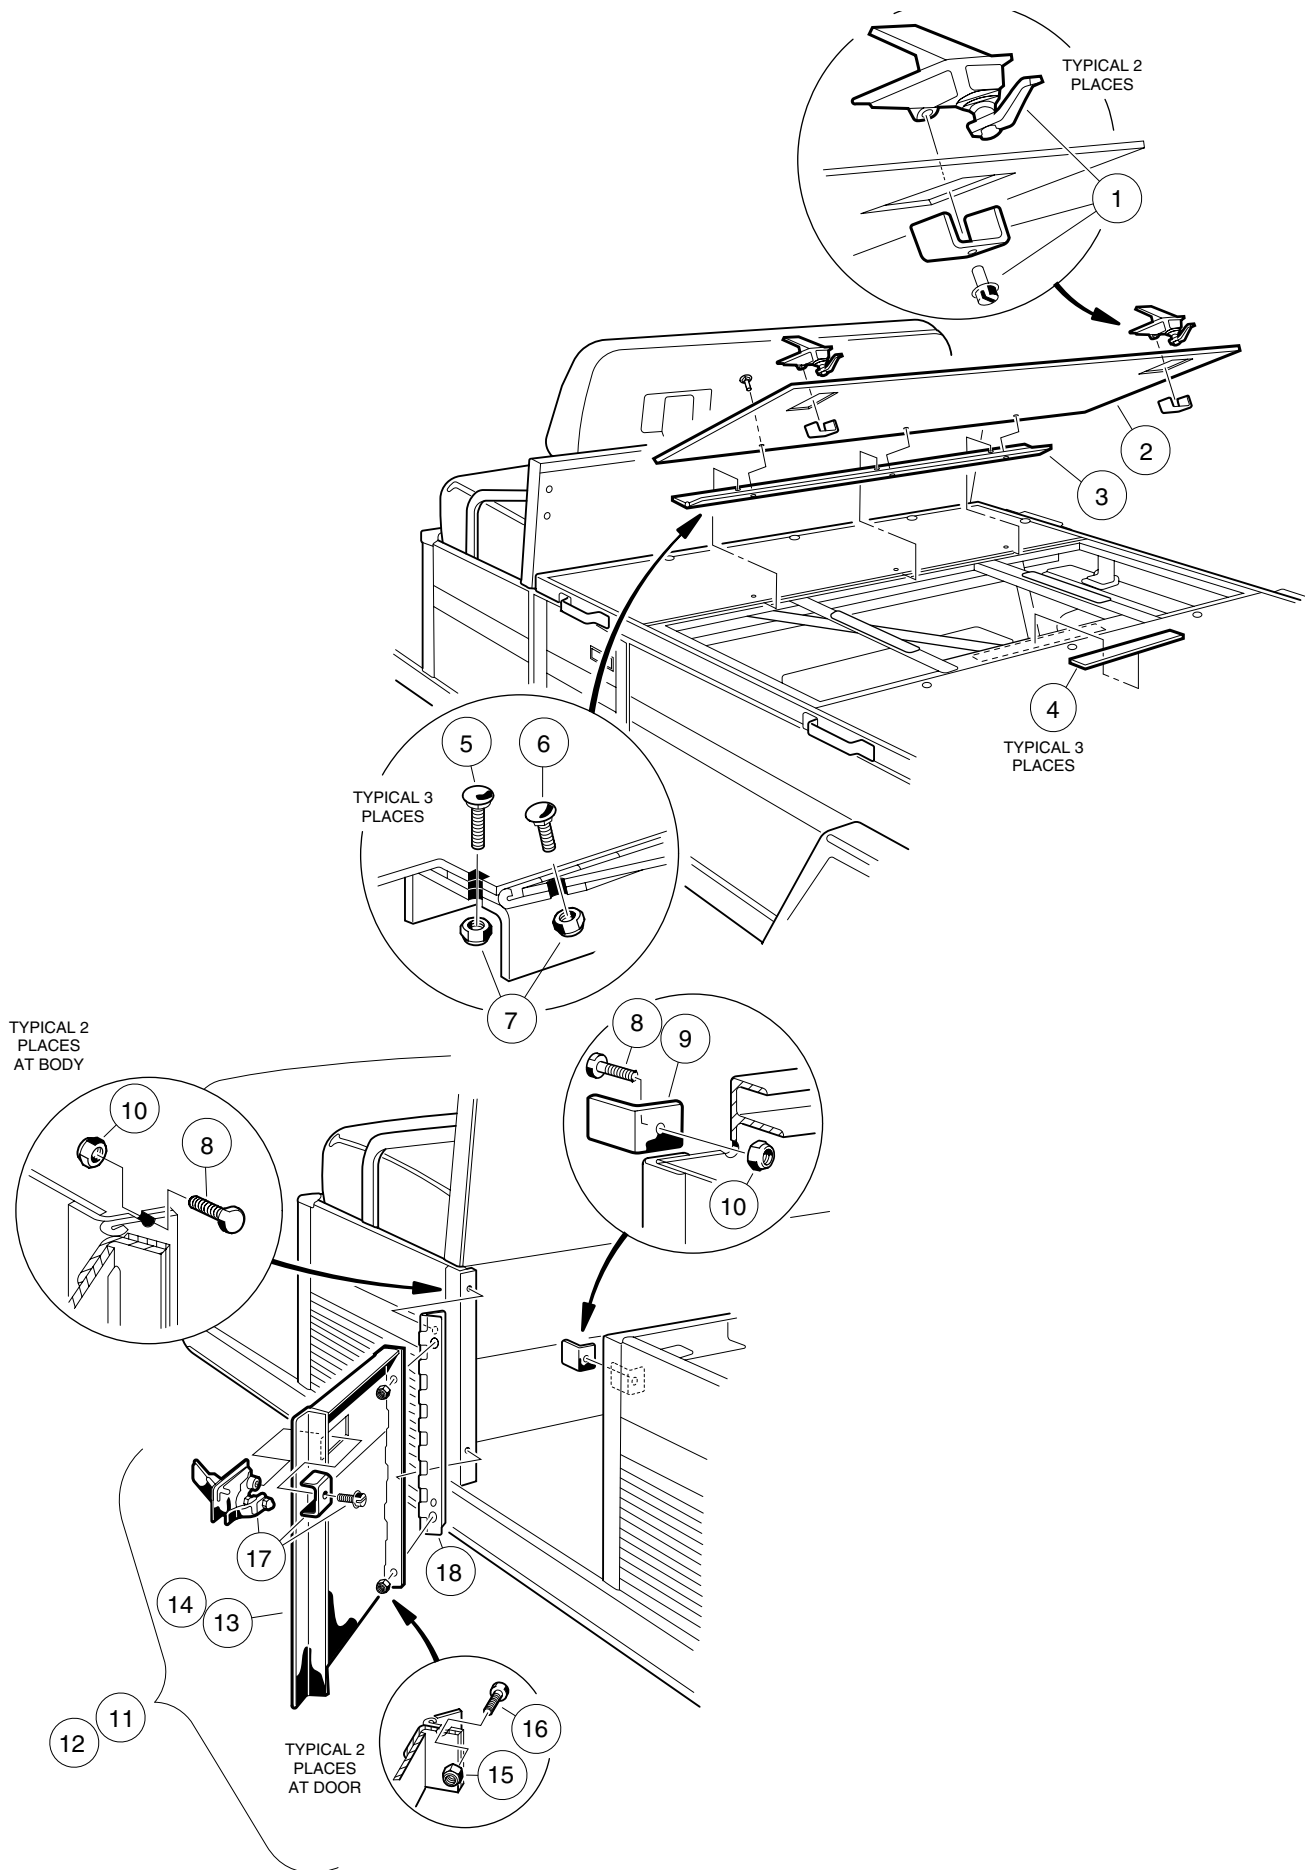


ACCESS DOOR AND SIDE DOORS - CARRYALL VI

2

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	1016914	LATCH, COMPARTMENT DOOR	2	2
2	1016891	PLATE, LONG BED ACCESS DOOR	1	1
3	<u>1016881</u>	HINGE, LONG BED ACCESS DOOR	1	1
4	<u>1014471</u>	INSULATION, BULK (8-1/2 LONG)	A/R	A/R
5	<u>1010435</u>	BOLT, CARRIAGE, 5/16 - 18 x 1	3	3
6	<u>1017077</u>	BOLT, CARRIAGE, 5/16 - 18 x 5/8	3	3
7	0007473	NUT, NYLON LOCK, 5/16 - 18	6	6
8	0000403	SCREW, HEX HEAD CAP, 1/4 - 20 x 5/8	2	2
9	<u>1013280</u>	CLIP, ANGLE, CARRYALL	4	4
10	0008233	NUT, NYLON LOCK, 1/4 - 20	4	4
11	1016955	ASSEMBLY, COMPARTMENT DOOR, LEFT HAND (INCLUDES ITEMS 13, 15 - 18)	1	1
12	<u>1016954</u>	ASSEMBLY, COMPARTMENT DOOR, RIGHT HAND (INCLUDES ITEMS 14 - 18)	1	1
13	<u>1016918</u>	ASSEMBLY, COMPARTMENT DOOR WELD, LEFT HAND	1	1
14	1016909	ASSEMBLY, COMPARTMENT DOOR WELD, RIGHT HAND	1	1
15	0008233	NUT, NYLON LOCK, 1/4 - 20	2	2
16	0000403	SCREW, HEX HEAD CAP, 1/4 - 20 x 5/8	2	2
17	1016914	LATCH, COMPARTMENT DOOR	2	2
18	<u>1016920</u>	HINGE, COMPARTMENT DOOR	2	2

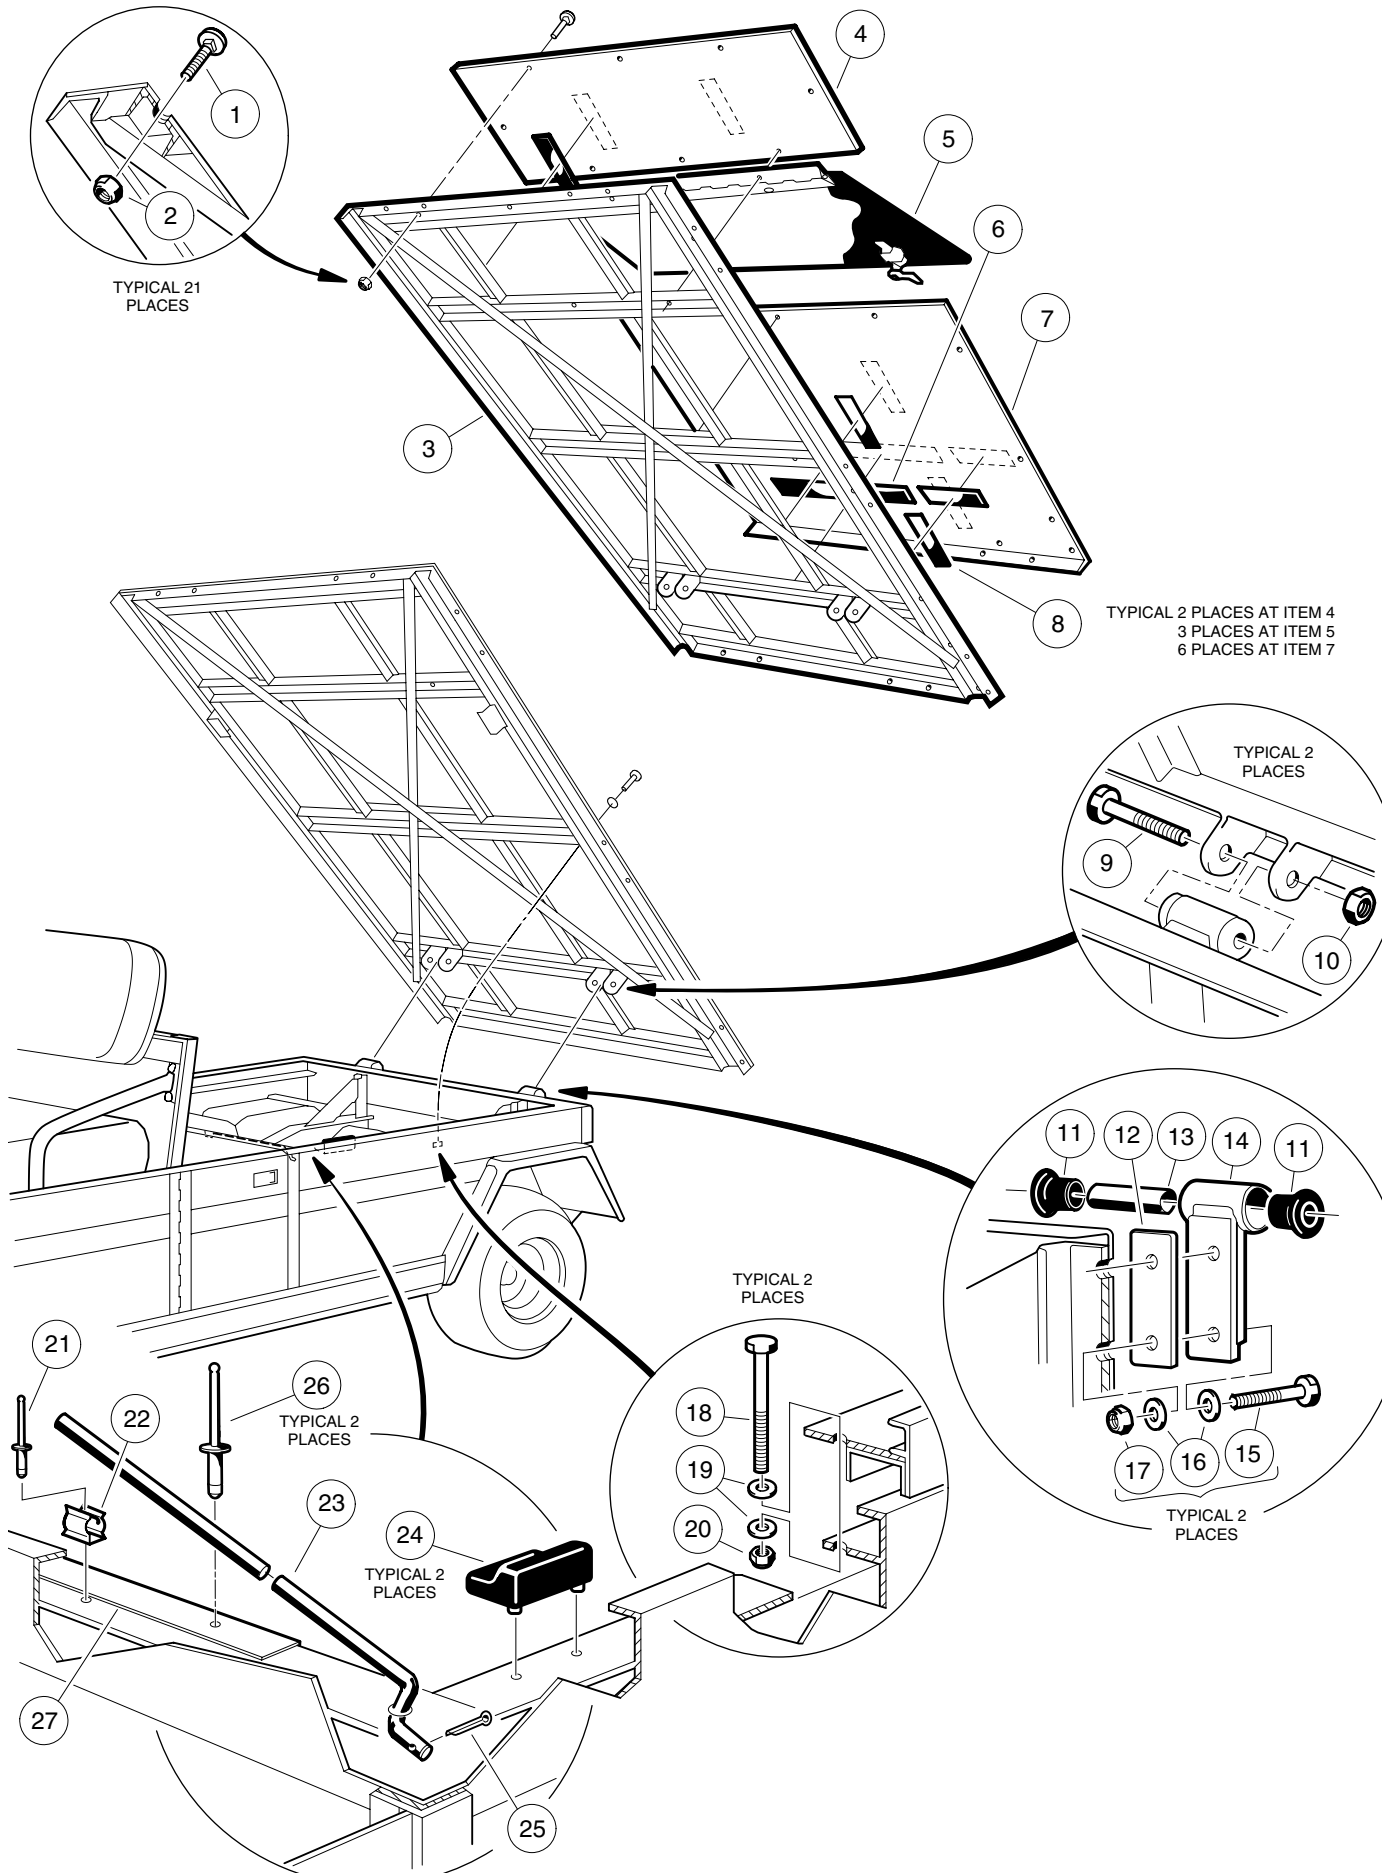


FLAT BED ASSEMBLY - CARRYALL VI

2

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
	<u>1016942</u>	ASSEMBLY, FLAT BED (INCLUDES ITEMS 1 - 8)	1	1
1	<u>1010435</u>	BOLT, CARRIAGE, 5/16 - 18 x 1	21	21
2	<u>0007473</u>	NUT, NYLON LOCK, 5/16 - 18	21	21
3	<u>1016878</u>	FRAME, BED	1	1
4	<u>1016892</u>	PLATE, FORWARD FLOOR	1	1
5		ACCESS DOOR, LATCH, AND MOUNTING HARDWARE (SEE PAGE 2-15)		
6	<u>1014471</u>	INSULATION, BULK (20 LONG)	A/R	A/R
7	<u>1016893</u>	PLATE, REAR FLOOR	1	1
8	<u>1014471</u>	INSULATION, BULK (8 LONG)	A/R	A/R
9	<u>0008755</u>	SCREW, HEX HEAD CAP, 3/8 - 16 x 3-3/8	2	2
10	<u>1010138</u>	NUT, DIMPLED LOCK, 3/8 - 16	2	2
11	<u>1015583</u>	BUSHING, URETHANE	4	4
12	<u>1015507</u>	SHIM, TILT BED PIVOT	A/R	A/R
13	<u>1012303</u>	BUSHING, STEEL	2	2
14	<u>1015356</u>	ASSEMBLY, TILT BED HINGE WELD	2	2
15	<u>0008861</u>	SCREW, HEX HEAD CAP, 3/8 - 16 x 1 3/4	4	4
16	<u>1011990</u>	WASHER, FLAT, 3/8	8	8
17	<u>0008754</u>	NUT, NYLON LOCK, 3/8 - 16	4	4
18	<u>1013872</u>	SCREW, HEX HEAD CAP, 1/4 - 20 x 4	2	2
19	<u>0000332</u>	WASHER, FLAT, 1/4	4	4
20	<u>0008233</u>	NUT, NYLON LOCK, 1/4 - 20	2	2
21	<u>1015727</u>	RIVET, POP	1	1
22	<u>1013413</u>	CLIP, ROD, CARRYALL, 3/8	1	1
23	<u>1017032</u>	ROD, PROP, LONG BED	1	1
24	<u>1015242</u>	BUMPER, BED	2	2
25	<u>0001035</u>	PIN, COTTER, 3/32 x 1	1	1
26	<u>1013357</u>	RIVET, POP		2
27	<u>1018370-01</u>	INSULATOR, BATTERY		1

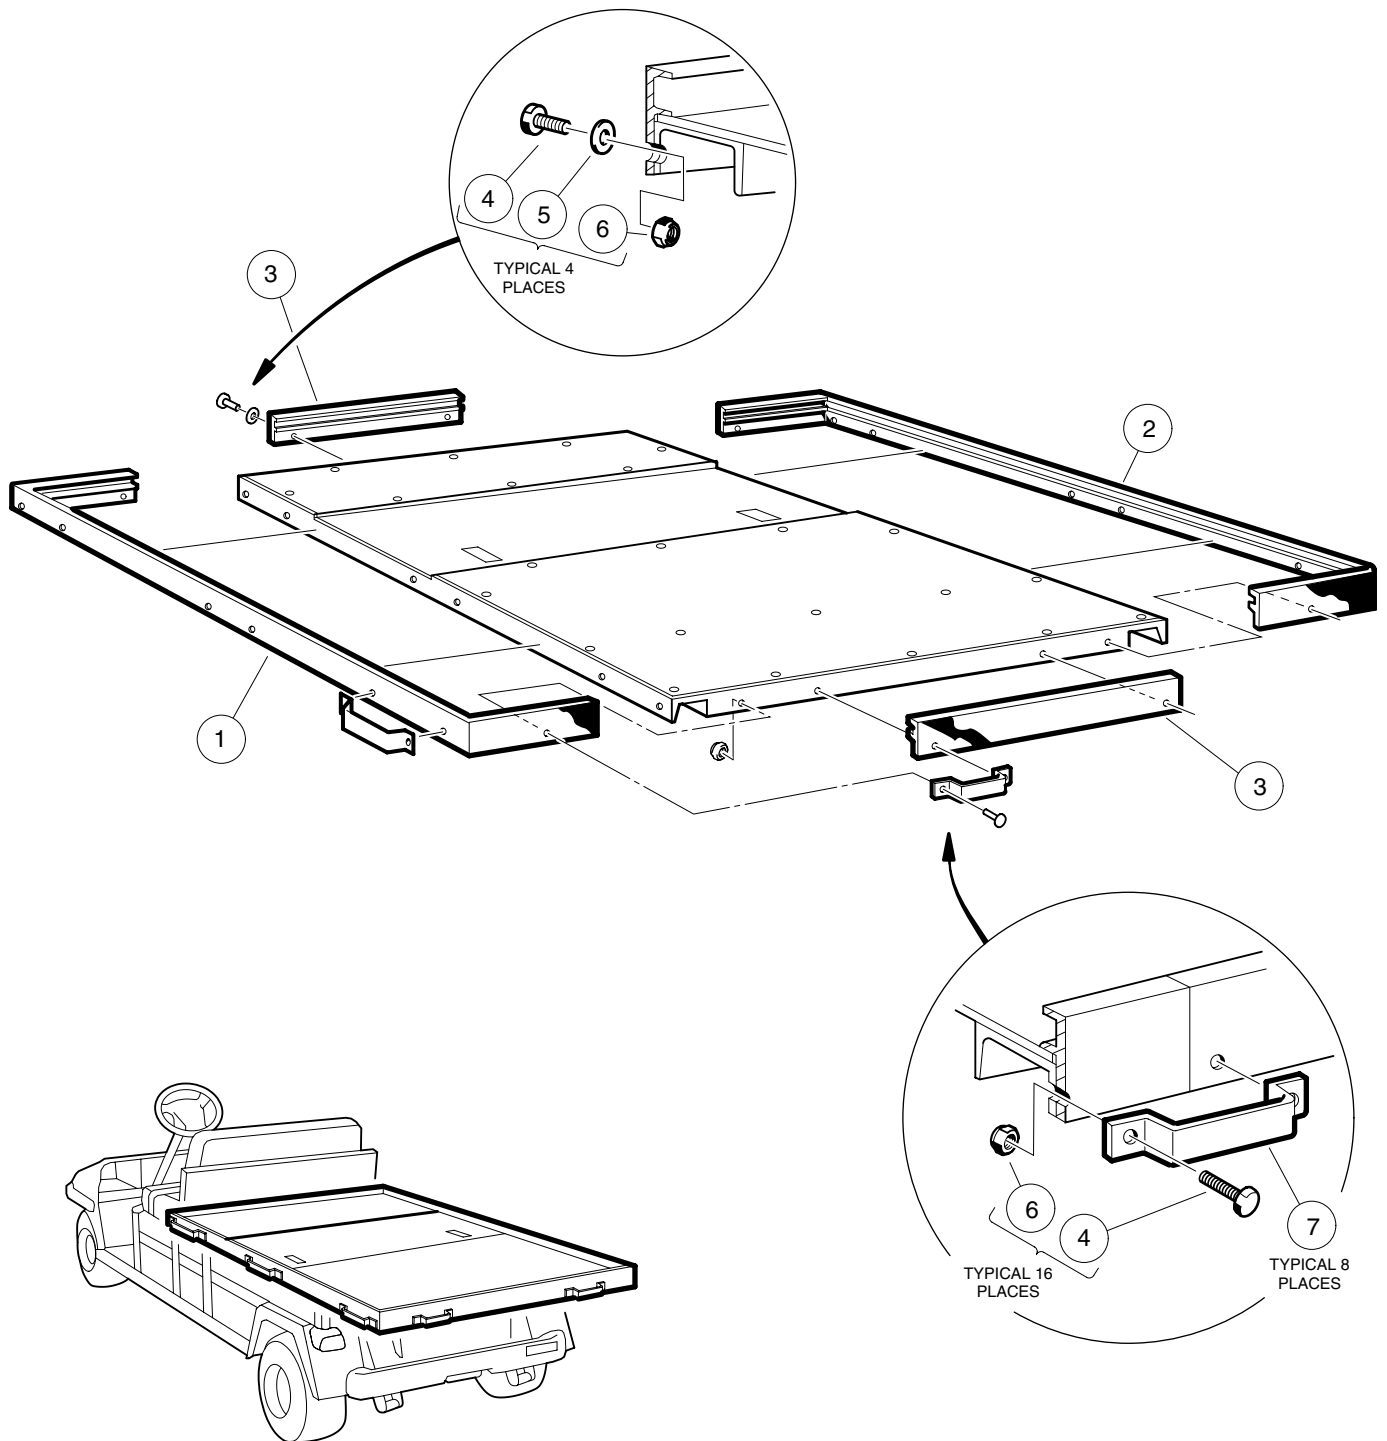


FLAT BED TRIM - CARRYALL VI

2

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	<u>1016944</u>	TRIM, LONG BED, LEFT	1	1
2	<u>1016948</u>	TRIM, LONG BED, RIGHT.....	1	1
3	<u>1016943</u>	TRIM, LONG BED, FRONT AND REAR	2	2
4	<u>1010934</u>	BOLT, HEX HEAD, 5/16 - 18 x 1	20	20
5	0001241	WASHER, FLAT, 5/16	4	4
6	0007473	NUT, NYLON LOCK, 5/16 - 18.....	20	20
7	<u>1016077</u>	BRACKET, STAKE SIDE	8	8

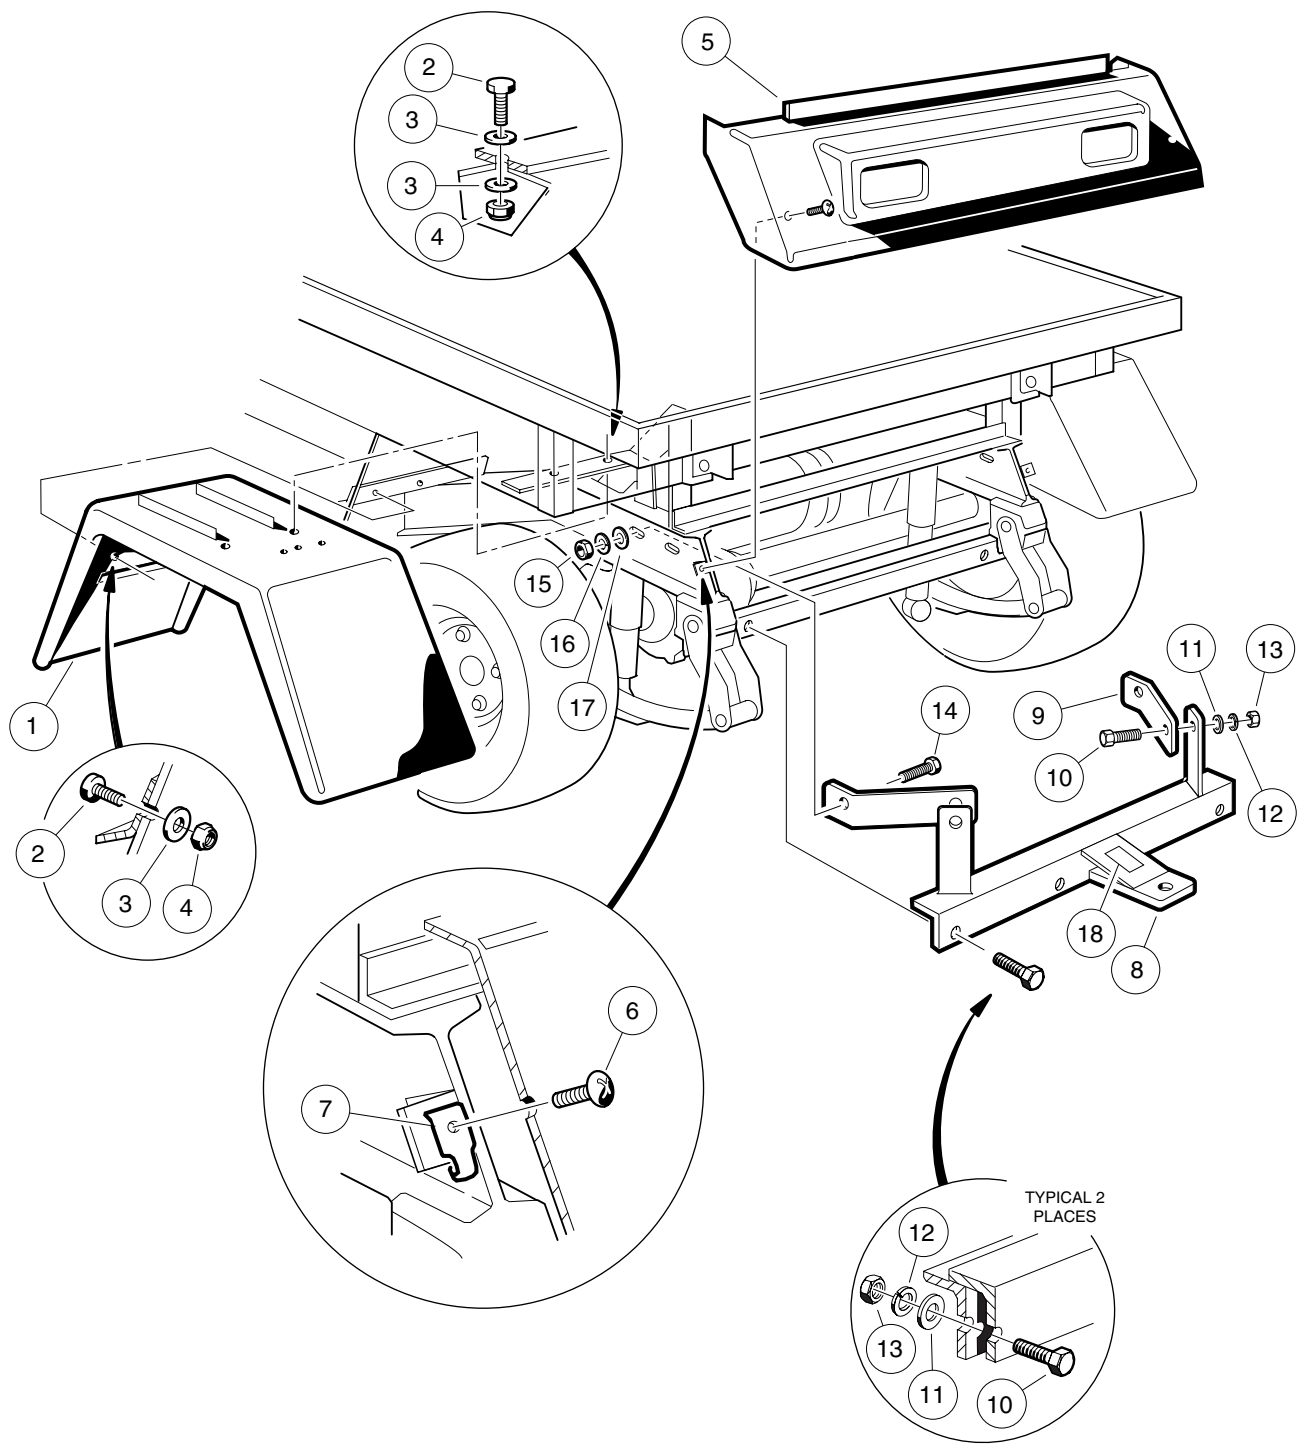


REAR COVER - CARRYALL I, II AND II PLUS

2

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	<u>1016679</u>	FENDER, REAR	2	2
2	0000304	SCREW, HEX HEAD CAP, 1/4 - 20 x 1	8	8
3	<u>1014306</u>	WASHER, FLAT, TYPE B, 1/4	8	8
4	0008233	NUT, NYLON LOCK, 1/4 - 20	8	8
5	<u>1015530</u>	TAILSKIRT	1	1
6	0008248	SCREW, PHILLIPS HEAD, 1/4 - 20 x 3/4	2	2
7	1015529	NUT, TINNERMAN "U", 1/4 - 20	2	2
8	<u>1015445</u>	KIT, TRAILER HITCH (CARRYALL II AND II PLUS ONLY) (INCLUDES ITEMS 9 - 18)	1	1
9	<u>1013483</u>	BRACE, TRAILER HITCH	2	2
10	<u>1010934</u>	SCREW, HEX HEAD CAP, 5/16 - 18 x 1	4	4
11	0001241	WASHER, FLAT, 5/16	4	4
12	0007174	WASHER, LOCK, 5/16	4	4
13	0001242	NUT, HEX, 5/16 - 18	4	4
14	0000320	SCREW, HEX HEAD CAP, 3/8 - 16 x 1	2	2
15	0000706	NUT, HEX, 3/8 - 16	2	2
16	0000357	WASHER, LOCK, 3/8	2	2
17	<u>1011990</u>	WASHER, FLAT, 3/8	2	2
18	<u>1011553</u>	DECAL	1	1

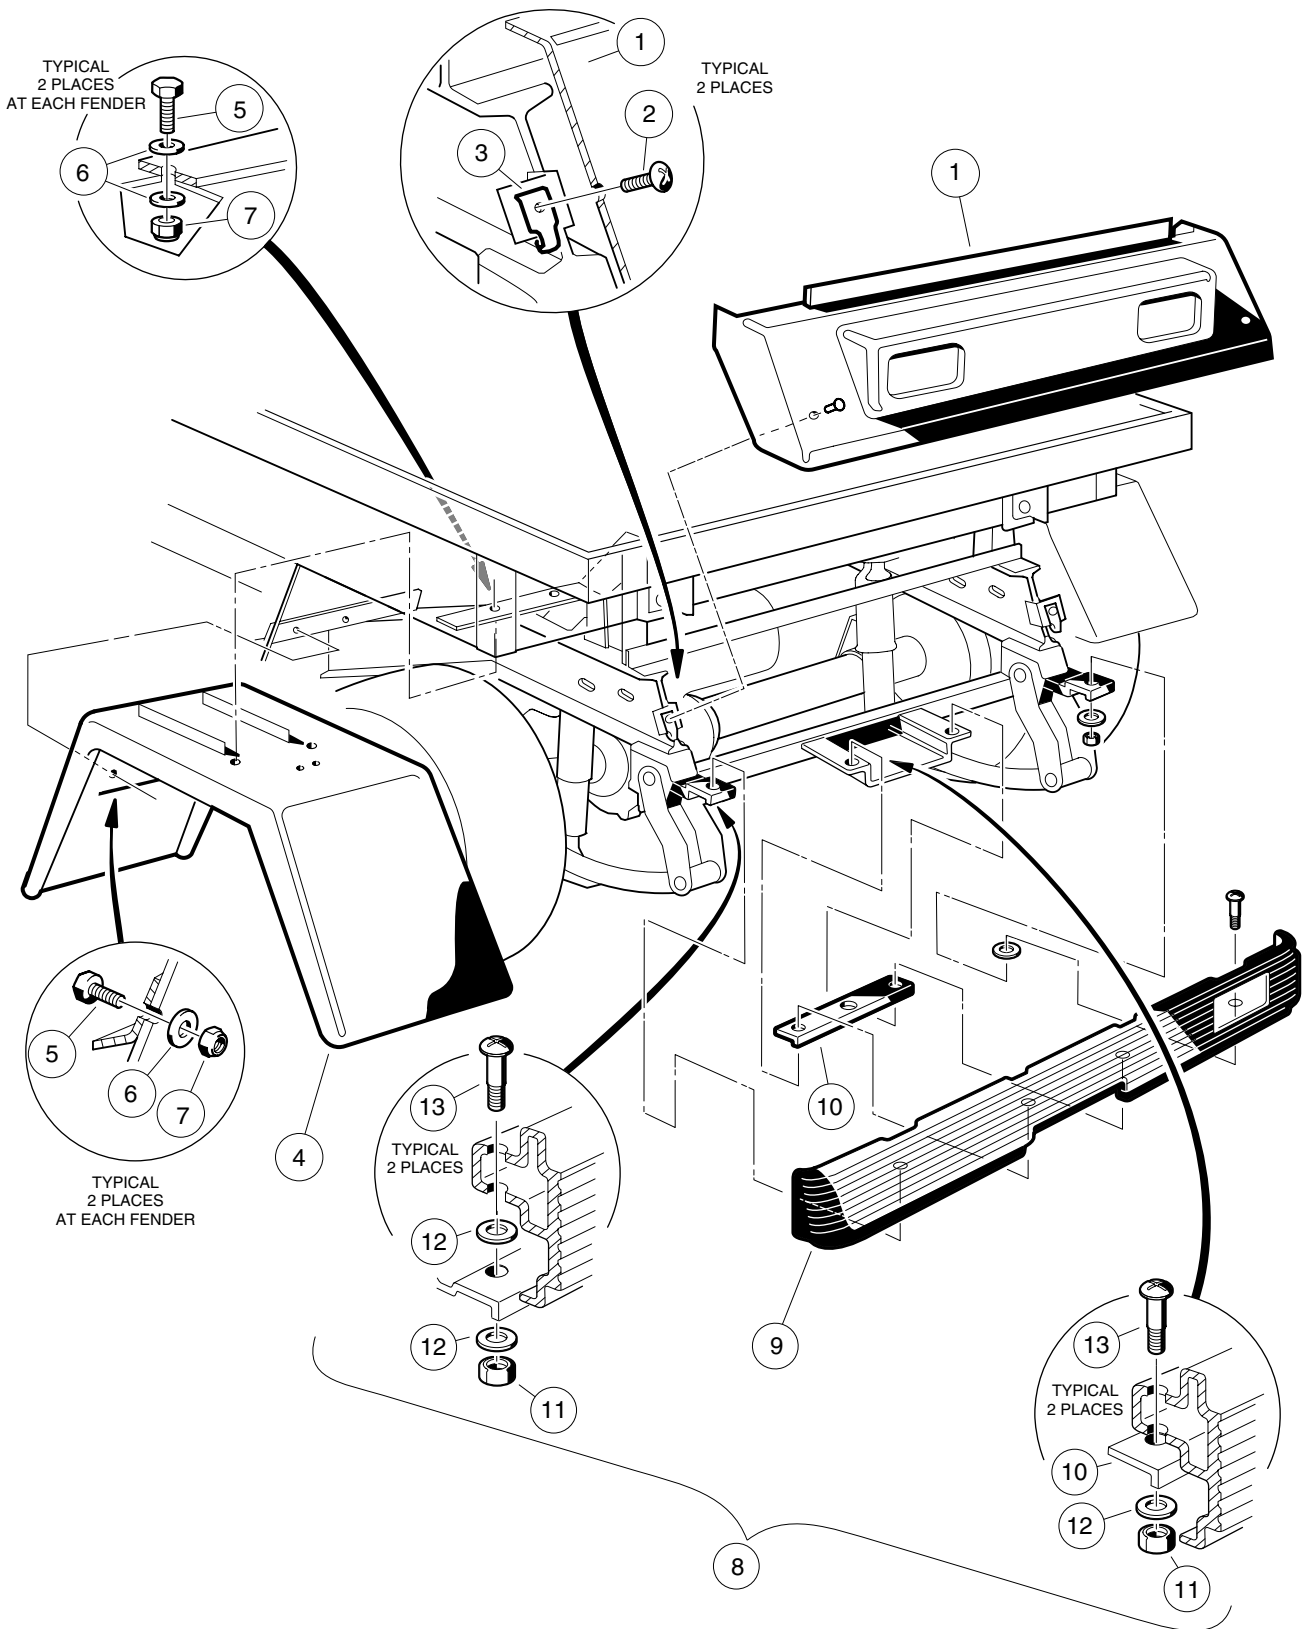



REAR COVER - CARRYALL VI

2


G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	<u>1015530</u>	TAILSKIRT, TILT BED	1	1
2	0008248	SCREW, PHILLIPS TRUSS HEAD, 1/4 - 20 x 3/4	2	2
3	1015529	NUT, TINNEMAN, "U", 1/4 - 20	2	2
4	<u>1016679</u>	FENDER, REAR	2	2
5	0000304	SCREW, HEX HEAD CAP, 1/4 - 20 x 1	8	8
6	<u>1014306</u>	WASHER, FLAT, 1/4	12	12
7	0008233	NUT, NYLON LOCK, 1/4 - 20	8	8
8	<u>1017079</u>	KIT, REAR BUMPER (INCLUDES ITEMS 9 - 13)	1	1
9	<u>1016379</u>	BUMPER, REAR	1	1
10	<u>1016875</u>	PLATE, MOUNTING, LONG	1	1
11	0007473	NUT, NYLON LOCK, 5/16 - 18	4	4
12	<u>1011697</u>	WASHER, FLAT, 5/16	6	6
13	<u>1016876</u>	BOLT, PHILLIPS TRUSS HEAD SHOULDER, 3/8 - 18 x 2	4	4

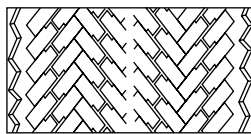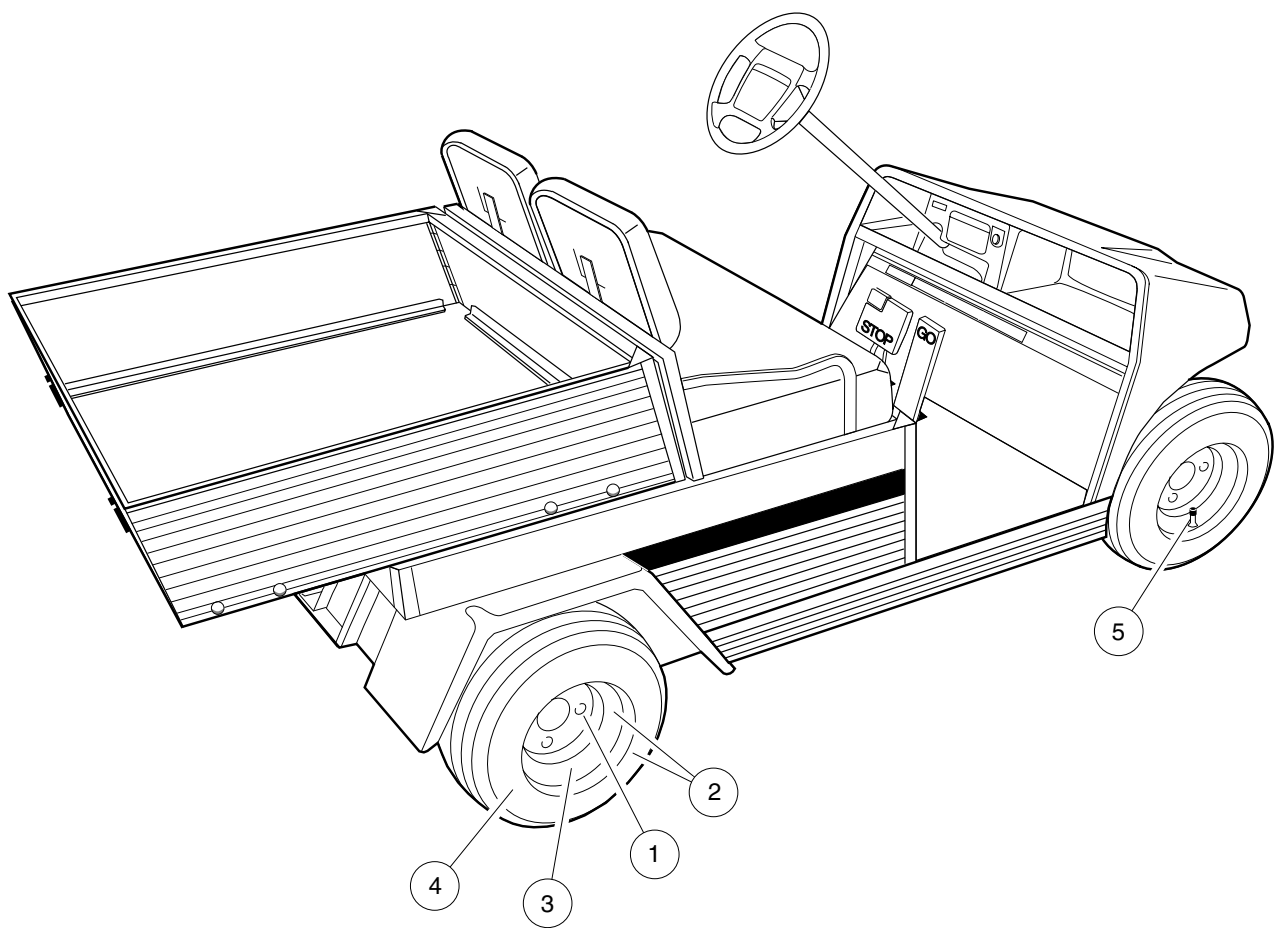

PREMIUM TREAD

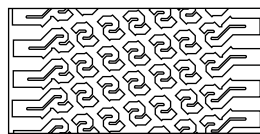

EXTRA TRACTION

WHEELS AND TIRES

2

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	<u>1010984</u>	NUT, LUG	16	16
2	<u>1016514-02</u>	ASSEMBLY, WHITE WHEEL AND TIRE, PREMIUM TREAD, 4-PLY (18 x 8.5 - 8) (CARRYALL I ONLY)	2	2
2	<u>1016514-06</u>	ASSEMBLY, WHITE WHEEL AND TIRE, PREMIUM TREAD, 6-PLY (18 x 8.5 - 8)	2	2
2	<u>1016514-07</u>	ASSEMBLY, WHITE WHEEL AND TIRE, EXTRA TRACTION, 6-PLY (18 x 8.5 - 8)	2	2
2	1014983	ASSEMBLY, WHITE WHEEL AND INDUSTRIAL TIRE (18.5 x 5.7 - 8) (CARRYALL I ONLY)	2	2
3	<u>1014771</u>	WHEEL RIM, WHITE (8 INCHES WIDE)	4	4
4	<u>1015672-02</u>	TIRE, UNMOUNTED, PREMIUM TREAD, 4-PLY (18 x 8.5 - 8) (CARRYALL I ONLY)	2	2
4	<u>1017370-02</u>	TIRE, UNMOUNTED, PREMIUM TREAD, 6-PLY (18 x 8.5 - 8)	2	2
4	<u>1017693-02</u>	TIRE, UNMOUNTED, EXTRA TRACTION, 6-PLY (18 x 8.5 - 8)	2	2
5	0007310	STEM, VALVE	4	4

SAFETY DECALS

3

G

E

VEHICLE LOADING DECAL

VEHICLE LOADING

- Vehicle rated capacity - 800 lbs. on level surface only. Weight to include passengers, cargo bed load, and gross trailer weight. See Owner's Manual.
- Maximum cargo load - 300 lbs. Weight to include cargo bed load and gross trailer weight.
- Maximum trailer hitch tongue weight - 150 lbs.
- No more than two people in each passenger seat.
- Cargo should be evenly spread over the floor of cargo bed as far forward as possible and secured.
- For vehicle stability, drive slowly and avoid stopping or backing down steep hills when fully loaded.
- Avoid top heavy loads. See Owner's Manual.
- When driving on uneven terrain, reduce speed and load.

CARRYALL I

VEHICLE LOADING

- Vehicle rated capacity - 1200 lbs. on level surface only. Weight to include passengers, cargo bed load, and gross trailer weight. See Owner's Manual.
- Maximum cargo load - 800 lbs. Weight to include cargo bed load and gross trailer weight.
- Maximum trailer hitch tongue weight - 150 lbs.
- No more than two people in each passenger seat.
- Cargo should be evenly spread over the floor of cargo bed as far forward as possible and secured.
- For vehicle stability, drive slowly and avoid stopping or backing down steep hills when fully loaded.
- Avoid top heavy loads. See Owner's Manual.
- When driving on uneven terrain, reduce speed and load.

CARRYALL II AND II PLUS

KEY SWITCH DECAL

OFF ON

CARRYALL I AND II

OFF ON START

CARRYALL II PLUS

OPERATING INSTRUCTIONS DECAL

OPERATING INSTRUCTIONS

- Read owner's manual prior to operation.
- Study and understand controls. Be sure everyone is seated.
- Before driving, read safety warnings located above pedals.
- To start engine:
 - Place shift lever in "N" - Neutral position.
 - Depress brake pedal.
 - Turn key switch to "START" position and release.
- To operate vehicle:
 - Be sure nothing is in your path.
 - Select vehicle direction by placing shift lever in desired position.
 - F - Forward N - Neutral R - Reverse
 - Park brake will release when accelerator pedal is pushed.
 - Slowly push accelerator pedal to increase speed.
 - Accelerator pedal must be released to shift vehicle to neutral.
- To stop vehicle:
 - Release accelerator pedal and push brake pedal.
 - After stopping, firmly push park brake until it locks.
 - Turn key to "OFF" position, remove key and place shift lever in straight up neutral position when not in use.

CARRYALL I AND II

OPERATING INSTRUCTIONS

- Read owner's manual prior to operation.
- Study and understand controls. Be sure everyone is seated.
- Before driving, read safety warnings located above pedals.
- Make sure wheels are turned in desired direction.
- Turn key to "ON" position and be sure nothing is in your path.
- Select direction by placing shift lever in desired position:
 - F - Forward N - Neutral R - Reverse
- Vehicle will start moving when accelerator pedal is depressed.
- Slowly depress accelerator pedal to increase speed. Park brake will release when accelerator pedal is depressed.
- To stop, release accelerator pedal and depress brake pedal.
- After stopping, firmly depress park brake until it locks.
- Place forward and reverse switch in neutral position. Turn key "OFF" and remove key when not in use.

CARRYALL II PLUS



WARNING

No persons in cargo bed.

BED LOAD WARNING DECAL

WARNING



Pinch point

PINCH WARNING DECAL



WARNING

Keep hands, body and other persons away when closing bed.

LATCH

BED LATCH WARNING DECAL



WARNING

Failure to follow these instructions can cause severe injury or death.

- Read operating instructions before using vehicle.
- Never stand in front or behind vehicle.
- Vehicle should be driven only in specified areas by trained persons.

- Do not use on public roads.
- Only two persons per front seat.
- Operate vehicle from driver's side only.
- Do not start vehicle until all people are seated.

- Remain seated and hold on in moving vehicle.
- Keep arms, legs, feet and body inside vehicle.
- Stop vehicle before changing direction. Buzzer will sound in reverse.
- Drive slowly in turns.

- Drive slowly straight up and down slopes.
- Set park brake before leaving vehicle.
- Remove key when vehicle is not in use.
- Place shift lever in neutral when vehicle is not in use.

SAFETY WARNING DECAL

SAFETY DECALS CARRYALL I, II AND II PLUS

3

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	<u>1015884</u>	DECAL, VEHICLE LOADING (CARRYALL I)	1	1
1	<u>1015717</u>	DECAL, VEHICLE LOADING (CARRYALL II AND II PLUS)	1	1
2	<u>1018251-01</u>	DECAL, KEY SWITCH (CARRYALL I AND II)	1	1
2	<u>1018251-02</u>	DECAL, KEY SWITCH (CARRYALL II PLUS)	1	
3	1016216	DECAL, OPERATING INSTRUCTIONS (CARRYALL I AND II)	1	1
3	1016932	DECAL, OPERATING INSTRUCTIONS (CARRYALL II PLUS)	1	
4	1015539	DECAL, BED LOAD WARNING	1	1
5	1016094	DECAL, PINCH WARNING	1	1
6	1015437	DECAL, BED LATCH WARNING	1	1
7	<u>1014883</u>	DECAL, SAFE OPERATION WARNING	1	1
8	<u>1015397</u>	DECAL, CARRYALL I (LEFT SIDE)	1	1
8	<u>1015396</u>	DECAL, CARRYALL I (RIGHT SIDE)	1	1
8	<u>1015394</u>	DECAL, CARRYALL II (LEFT SIDE)	1	1
8	<u>1015395</u>	DECAL, CARRYALL II (RIGHT SIDE)	1	1
8	1016086	DECAL, CARRYALL II PLUS (LEFT SIDE)	1	
8	1016085	DECAL, CARRYALL II PLUS (RIGHT SIDE)	1	


CAUTION
Do not operate vehicle without this cover properly installed.
See vehicle Maintenance and Service Manual before servicing.

ELECTRIC COVER CAUTION DECAL

DANGER / POISON
EXPLOSIVE GASES CAN CAUSE BLINDNESS OR INJURY. SHIELD EYES. NO SPARKS, FLAMES, CIGARETTES. SULFURIC ACID CAN CAUSE BLINDNESS OR SEVERE BURNS. FLUSH & YES IMMEDIATELY WITH WATER. GET MEDICAL HELP FAST.
KEEP OUT OF THE REACH OF CHILDREN - DO NOT TIP - KEEP VENT CAPS TIGHT AND LEVEL.

BATTERY DANGER DECAL

ELECTRIC VEHICLE

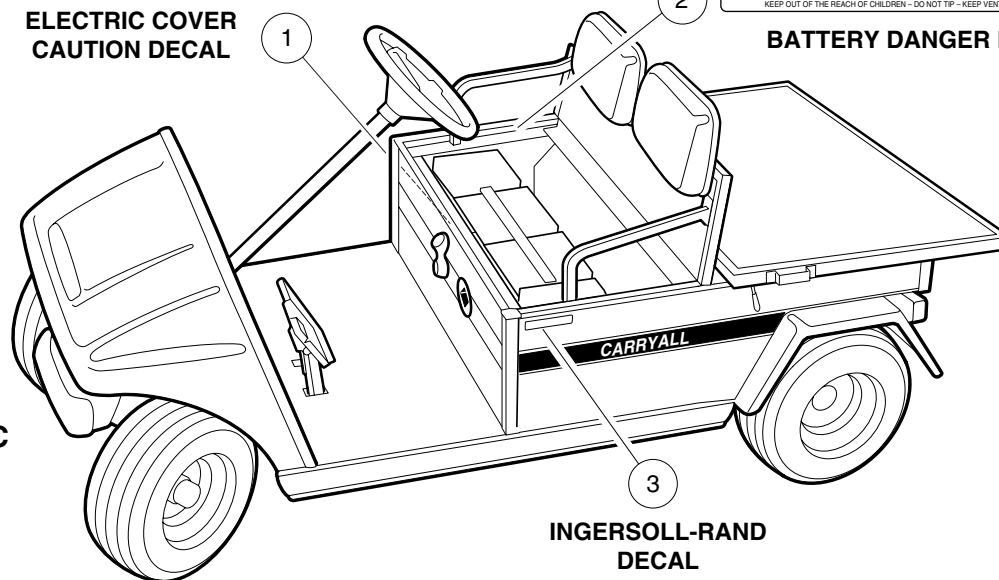

INGERSOLL-RAND DECAL

GASOLINE DANGER DECAL

DANGER
• Gasoline – extremely flammable.
• Keep heat, sparks and open flame away from fuel tank and fuel lines.
• Do not add fuel while engine is running or hot.
• Service by trained personnel.

WARNING
MOVING PARTS

(ON FRAME BESIDE FENDER)

TRAILER HITCH DECAL


MAXIMUM TONGUE
WEIGHT - 150 LBS.

HOT MANIFOLD AND MUFFLER DECAL

WARNING
HOT manifold and muffler
can cause severe burns.

(ON ENGINE)

GASOLINE VEHICLE

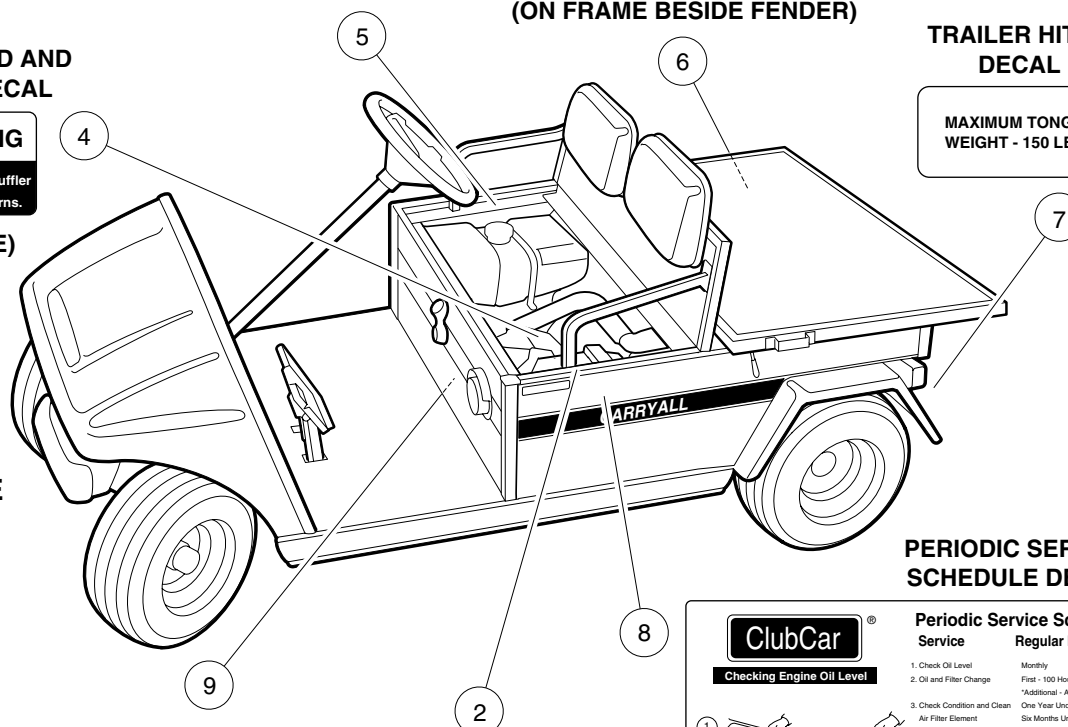

FRAME GROUND WARNING DECAL

WARNING
Negative frame ground. Do not contact positive (+) battery post or cable to frame as this can cause battery explosion, electrical shocks, and burns.

(ON FRAME)

BATTERY DANGER DECAL

DANGER / POISON
EXPLOSIVE GASES CAN CAUSE BLINDNESS OR INJURY. SHIELD EYES. NO SPARKS, FLAMES, CIGARETTES. SULFURIC ACID CAN CAUSE BLINDNESS OR SEVERE BURNS. FLUSH EYES IMMEDIATELY WITH WATER. GET MEDICAL HELP FAST.
KEEP OUT OF THE REACH OF CHILDREN - DO NOT TIP - KEEP VENT CAPS TIGHT AND LEVEL.

PERIODIC SERVICE SCHEDULE DECAL

ClubCar®

Checking Engine Oil Level

Periodic Service Schedule

Service	Regular Interval
1. Check Oil Level	Monthly
2. Oil and Filter Change	First - 100 Hours *Additional - Annually or 200 Hours
3. Check Condition and Clean Air Filter Element	One Year Under Normal Use Six Months Under Dusty Conditions
4. Change Air Filter	* Two Years or 300 Hours
5. Check Tire Pressure	Monthly (See Manual)
6. Replace Fuel Filters	* Two Years or 300 Hours
7. Check / Fill Drive Unit	* One Year or 150 Hours
8. Check / Fill Transmission	* One Year or 150 Hours

WARNING
Governor in factory adjusted for 12 - 15 mph max. Do not tamper with adjustment. To do so:
1) will void the warranty; 2) may result in damage to the engine or components; 3) could result in severe personal injury.

SAE 30 above 32°F (0°C) or
SAE 5 W20 below 32°F (0°C)
Classification SE, SF, SG or Higher
*Whichever comes first

(ON INTAKE BOX)

SAFETY DECALS

CARRYALL I, II AND II PLUS

3

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	<u>1019315-01</u>	DECAL, ELECTRIC COVER CAUTION (CARRYALL II ONLY)		1
2	<u>1013677</u>	DECAL, BATTERY DANGER/POISON	1	1
3	<u>1019219-01</u>	DECAL, INGERSOLL-RAND	2	2
4	1017257	DECAL, HOT MANIFOLD AND MUFFLER WARNING	1	
5	1015476	DECAL, GASOLINE DANGER	1	
6	1015475	DECAL, MOVING PARTS WARNING	1	
7	<u>1011553</u>	DECAL, TRAILER HITCH (CARRYALL II AND II PLUS ONLY)	1	1
8	1016062	DECAL, PERIODIC SERVICE SCHEDULE	1	
9	1015474	DECAL, FRAME GROUND WARNING	1	

OPERATING
INSTRUCTIONS
DECAL

OPERATING INSTRUCTIONS

- Read owner's manual prior to operation.
- Study and understand controls. Be sure everyone is seated.
- Before driving, read safety warnings located above pedals.
- To start engine:
 - Place shift lever in "N" - Neutral position.
 - Depress brake pedal.
 - Turn key switch to "START" position and release.
- To operate vehicle:
 - Be sure nothing is in your path.
 - Select vehicle direction by placing shift lever in desired position.
 - F - Forward N - Neutral R - Reverse
 - Park brake will release when accelerator pedal is pushed.
 - Slowly push accelerator pedal to increase speed.
 - Accelerator pedal must be released to shift vehicle to neutral.
- To stop vehicle:
 - Release accelerator pedal and push brake pedal.
 - After stopping, firmly push park brake until it locks.
 - Turn key to "OFF" position, remove key and place shift lever in straight up neutral position when not in use.

GASOLINE VEHICLE

KEY SWITCH
DECAL

OFF ON START

GASOLINE VEHICLE

OFF ON

ELECTRIC VEHICLE

VEHICLE LOADING
DECAL


VEHICLE LOADING

- Vehicle rated capacity - 1500 lbs. on level surface only. Weight to include passengers, cargo bed load, and gross trailer weight. See Owner's Manual.
- Maximum cargo load - 1000 lbs. Weight to include cargo bed load (500 lbs. MAX) and gross trailer weight.
- Maximum trailer hitch tongue weight - 150 lbs.
- No more than two people in each passenger seat.
- Cargo should be evenly spread over the floor of cargo bed as far forward as possible and secured.
- For vehicle stability, drive slowly and avoid stopping or backing down steep hills when fully loaded.
- Avoid top heavy loads. See Owner's Manual.
- When driving on uneven terrain, reduce speed and load.

OPERATING INSTRUCTIONS

- Read owner's manual prior to operation.
- Study and understand controls. Be sure everyone is seated.
- Before driving, read safety warnings located above pedals.
- Make sure wheels are turned in desired direction.
- Turn key to "ON" position and be sure nothing is in your path.
- Select direction by placing shift lever in desired position:
 - F - Forward N - Neutral R - Reverse
- Vehicle will start moving when accelerator pedal is depressed.
- Slowly depress accelerator pedal to increase speed. Park brake will release when accelerator pedal is depressed.
- To stop, release accelerator pedal and depress brake pedal.
- After stopping, firmly depress park brake until it locks.
- Place forward and reverse switch in neutral position. Turn key "OFF" and remove key when not in use.

ELECTRIC VEHICLE

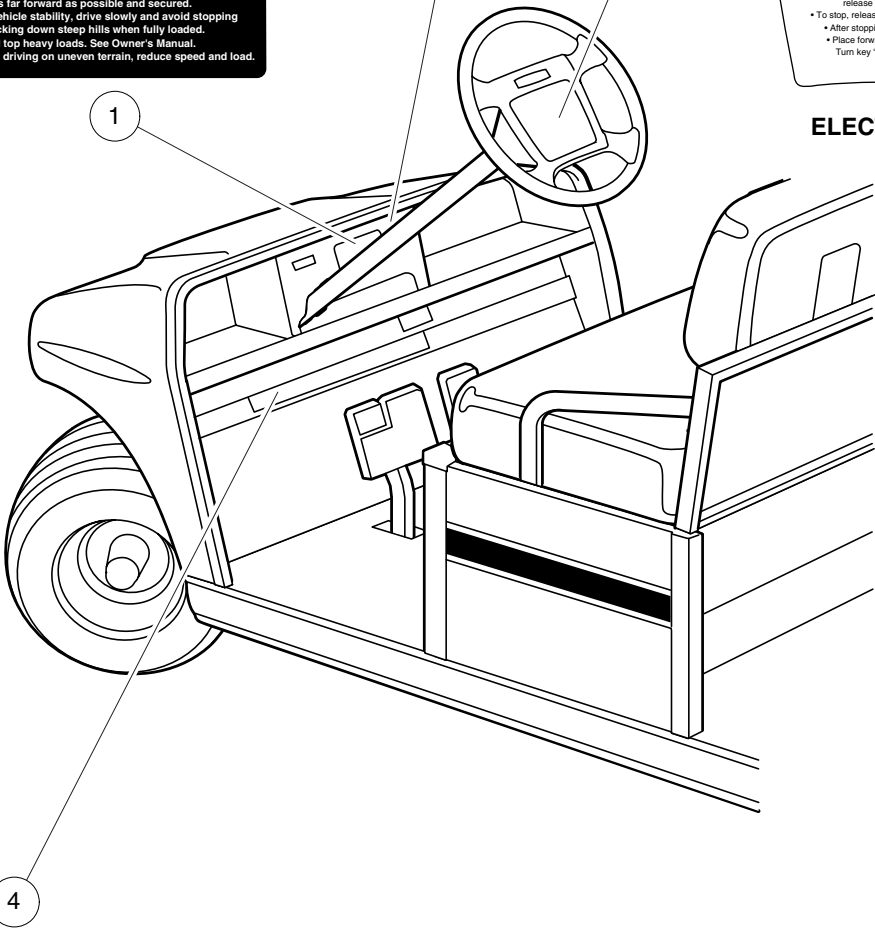

WARNING

Failure to follow these instructions can cause severe injury or death.

- Read operating instructions before using vehicle.
- Never stand in front or behind vehicle.
- Vehicle should be driven only in specified areas by trained persons.

- Do not use on public roads.
- Only two persons per front seat.
- Operate vehicle from driver's side only.
- Do not start vehicle until all people are seated.

- Remain seated and hold on in moving vehicle.
- Keep arms, legs, feet and body inside vehicle.
- Stop vehicle before changing direction.
- Buzzer will sound in reverse.
- Drive slowly in turns.

- Drive slowly straight up and down slopes.
- Set park brake before leaving vehicle.
- Remove key when vehicle is not in use.
- Place shift lever in neutral when vehicle is not in use.

SAFETY WARNING
DECAL

SAFETY DECALS
CARRYALL VI

3
G
E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	<u>1017160</u>	DECAL, VEHICLE LOADING	1	1
2	<u>1018251-02</u>	DECAL, KEY SWITCH (GASOLINE VEHICLE ONLY)	1	
2	<u>1018251-01</u>	DECAL, KEY SWITCH (ELECTRIC VEHICLE ONLY)		1
3	1016932	DECAL, OPERATING INSTRUCTIONS (GASOLINE VEHICLE ONLY)	1	
3	1016216	DECAL, OPERATING INSTRUCTIONS (ELECTRIC VEHICLE ONLY)		1
4	<u>1014883</u>	DECAL, SAFE OPERATION WARNING	1	1

CAUTION
Do not operate vehicle without this cover properly installed.
See vehicle Maintenance and Service Manual before servicing.

**ELECTRIC COVER
CAUTION DECAL**

WARNING
Bed hold down bolts must be
securely fastened before loading.

**BED BOLT
WARNING DECAL**

DANGER / POISON
EXPLOSIVE GASES CAN CAUSE
BURNING OR EXPLOSION
SHIELD EYES
NO
-SPARKS
-FLAMES
-SMOKING
SULFURIC
ACID
CAN CAUSE
BURNING OR
SEVERE BURNS
PLUSH EYES,
IMMEDIATELY
WITH WATER
GET
MEDICAL
HELP
FAST
KEEP OUT OF THE REACH OF CHILDREN - DO NOT TIP - KEEP VENT CAPS TIGHT AND LEVEL

**BATTERY DANGER DECAL
(ON FRAME)**

**BED LOAD
WARNING DECAL**

WARNING
No persons in
cargo bed.

**ELECTRIC
VEHICLE**

**SIDE FRONT
DECAL**

**INGERSOLL-RAND
DECAL**

**CARRYALL VI
DECAL**

DANGER
• Gasoline - extremely flammable.
• Keep heat, sparks and open flame away from fuel
tank and fuel lines.
• Do not add fuel while engine is running or hot.
• Service by trained personnel.

**GASOLINE DANGER DECAL
(ON FRAME ADJACENT
TO FUEL TANK)**

WARNING
HOT manifold and muffler
can cause severe burns.

**HOT MANIFOLD
AND
MUFFLER DECAL
(ON ENGINE)**

**GASOLINE
VEHICLE**

WARNING
MOVING PARTS

**MOVING PARTS
WARNING DECAL
(ON FRAME ADJACENT
TO DRIVE CLUTCH)**

ClubCar®

Periodic Service Schedule

Service	Regular Interval
1. Check Oil Level	Monthly
2. Oil and Filter Change	First - 100 Hours *Additional - Annually or 200 Hours
3. Check Condition and Clean Air Filter Element	One Year Under Normal Use Six Months Under Duty Conditions
4. Change Air Filter	* Two Years or 300 Hours
5. Check Tire Pressure	Monthly (See Manual)
6. Replace Fuel Filter	* Two Years or 300 Hours
7. Check / Fill Drive Unit	* One Year or 150 Hours
8. Check / Fill Transmission	* One Year or 150 Hours

WARNING
Governor is factory adjusted for 12 - 15 mph max. Do not tamper with adjustment. To do so:
1) will void the warranty; 2) may result in damage to the engine or components; 3) could result in severe personal injury.
*Whichever comes first

SAE 30 above 32°F (0°C) or
SAE 5 W20 below 32°F (0°C)
Classification SE, SF, SG or Higher

**PERIODIC SERVICE
SCHEDULE DECAL
(ON INTAKE BOX)**

DANGER / POISON
EXPLOSIVE GASES CAN CAUSE
BURNING OR EXPLOSION
SHIELD EYES
NO
-SPARKS
-FLAMES
-SMOKING
SULFURIC
ACID
CAN CAUSE
BURNING OR
SEVERE BURNS
PLUSH EYES,
IMMEDIATELY
WITH WATER
GET
MEDICAL
HELP
FAST
KEEP OUT OF THE REACH OF CHILDREN - DO NOT TIP - KEEP VENT CAPS TIGHT AND LEVEL

**BATTERY DANGER
DECAL
(ON FRAME)**

WARNING
Negative frame ground. Do not contact positive (+)
battery post or cable to frame as this can cause
battery explosion, electrical shocks, and burns.

**FRAME GROUND
WARNING DECAL
(ON FRAME)**

SAFETY DECALS
CARRYALL VI

3
G
E


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	<u>1019315-01</u>	DECAL, ELECTRIC COVER CAUTION		1
2	1017078	DECAL, BED BOLT WARNING	1	1
3	<u>1013677</u>	DECAL, BATTERY DANGER/POISON	1	1
4	1015539	DECAL, BED LOAD WARNING	1	1
5	<u>1016971-02</u>	DECAL, CARRYALL VI (LEFT SIDE)	1	1
6	<u>1016726-01</u>	DECAL, CARRYALL VI (RIGHT SIDE)	1	1
7	<u>1019219-01</u>	DECAL, INGERSOLL-RAND	2	2
8	<u>1016757</u>	DECAL, SIDE FRONT	4	4
9	1015476	DECAL, GASOLINE DANGER	1	
10	1017257	DECAL, HOT MANIFOLD WARNING	1	
11	1015475	DECAL, MOVING PARTS WARNING	1	
12	1015474	DECAL, FRAME GROUND WARNING	1	
13	1016062	DECAL, PERIODIC SERVICE SCHEDULE	1	

BRAKES, PEDAL, AND CABLE ASSEMBLIES

4

G

E

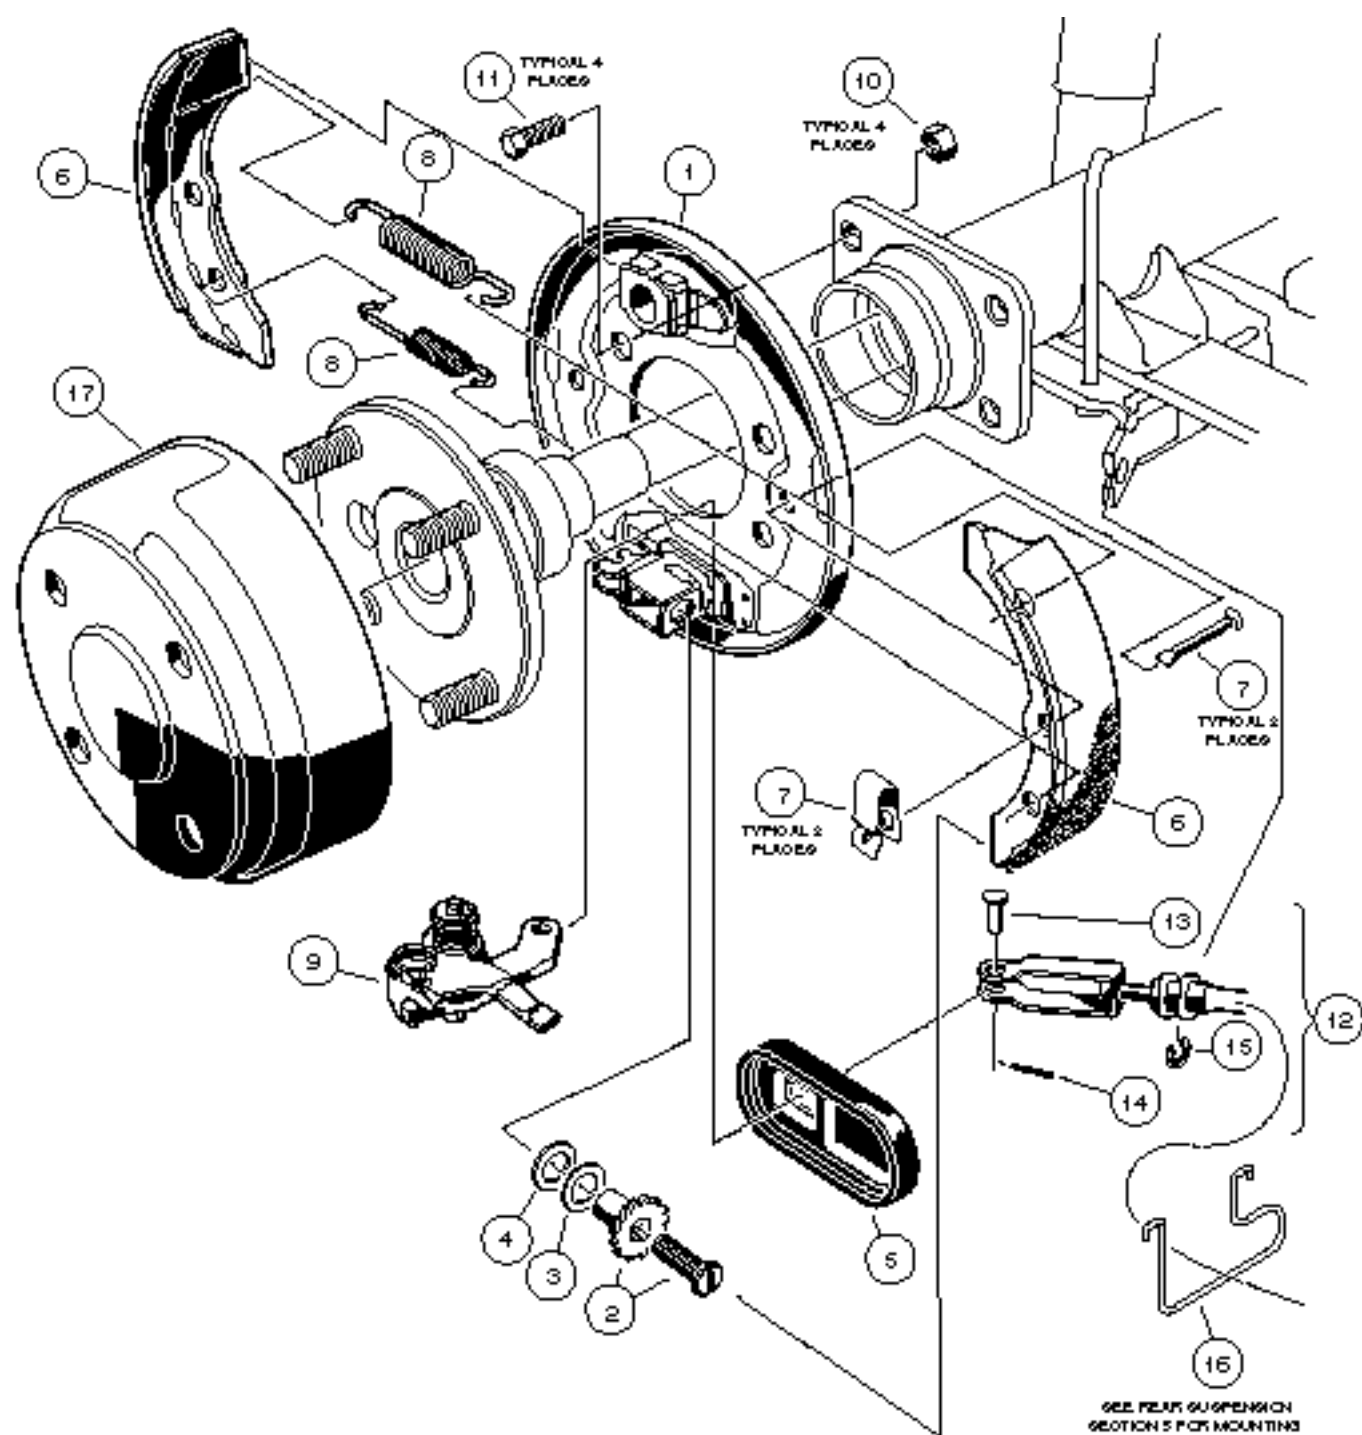


REAR BRAKE ASSEMBLY, SELF-ADJUSTING CARRYALL I

4

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
	<u>1018233-01</u>	CLUSTER, RIGHT BRAKE (INCLUDES ITEMS 1 - 9)	1	1
	<u>1018233-02</u>	CLUSTER, LEFT BRAKE (INCLUDES ITEMS 1 - 9)	1	1
1	<u>1018240-01</u>	ASSEMBLY, BACKING PLATE, RIGHT (INCLUDES ITEMS 2, 3 AND 4)	1	1
1	<u>1018240-02</u>	ASSEMBLY, BACKING PLATE, LEFT (INCLUDES ITEMS 2, 3 AND 4)	1	1
2	<u>1018165-01</u>	MECHANISM, ADJUSTING, RIGHT	1	1
2	<u>1018165-02</u>	MECHANISM, ADJUSTING, LEFT	1	1
3	<u>1018239-01</u>	WASHER	1	1
4	<u>1018238-01</u>	WASHER, PLATE	1	1
5	<u>1010850</u>	COVER, DUST	1	1
6	<u>1018232-01</u>	PACKAGE, BRAKE SHOE (FOUR PIECES)	1	1
7	<u>1011466</u>	KIT, SHOE RETAINER (FOUR PIECES)	1	1
8	<u>1018163-01</u>	PACKAGE, BRAKE SPRING (FOUR PIECES)	1	1
9	<u>1018155-01</u>	ASSEMBLY, LEVER, RIGHT	1	1
9	<u>1018155-02</u>	ASSEMBLY, LEVER, LEFT	1	1
10	<u>1013924</u>	NUT, HEX CONE, 5/16 - 24	8	8
11	<u>1014153</u>	BOLT, BRAKE CLUSTER MOUNTING	8	8
12	<u>1017211</u>	KIT, EQUALIZER AND PIVOT LIMITER (INCLUDES ITEMS 13, 14 AND 15)	2	2
13	<u>1010829</u>	PIN, CLEVIS, 5/16	2	2
14	<u>0001035</u>	PIN, COTTER, 3/32 x 1	2	2
15	<u>1011779</u>	CLIP, "E", 1/2	2	2
16	<u>1013207</u>	HANGER, BRAKE CABLE	2	2
17	<u>1017911-01</u>	DRUM, BRAKE	2	2

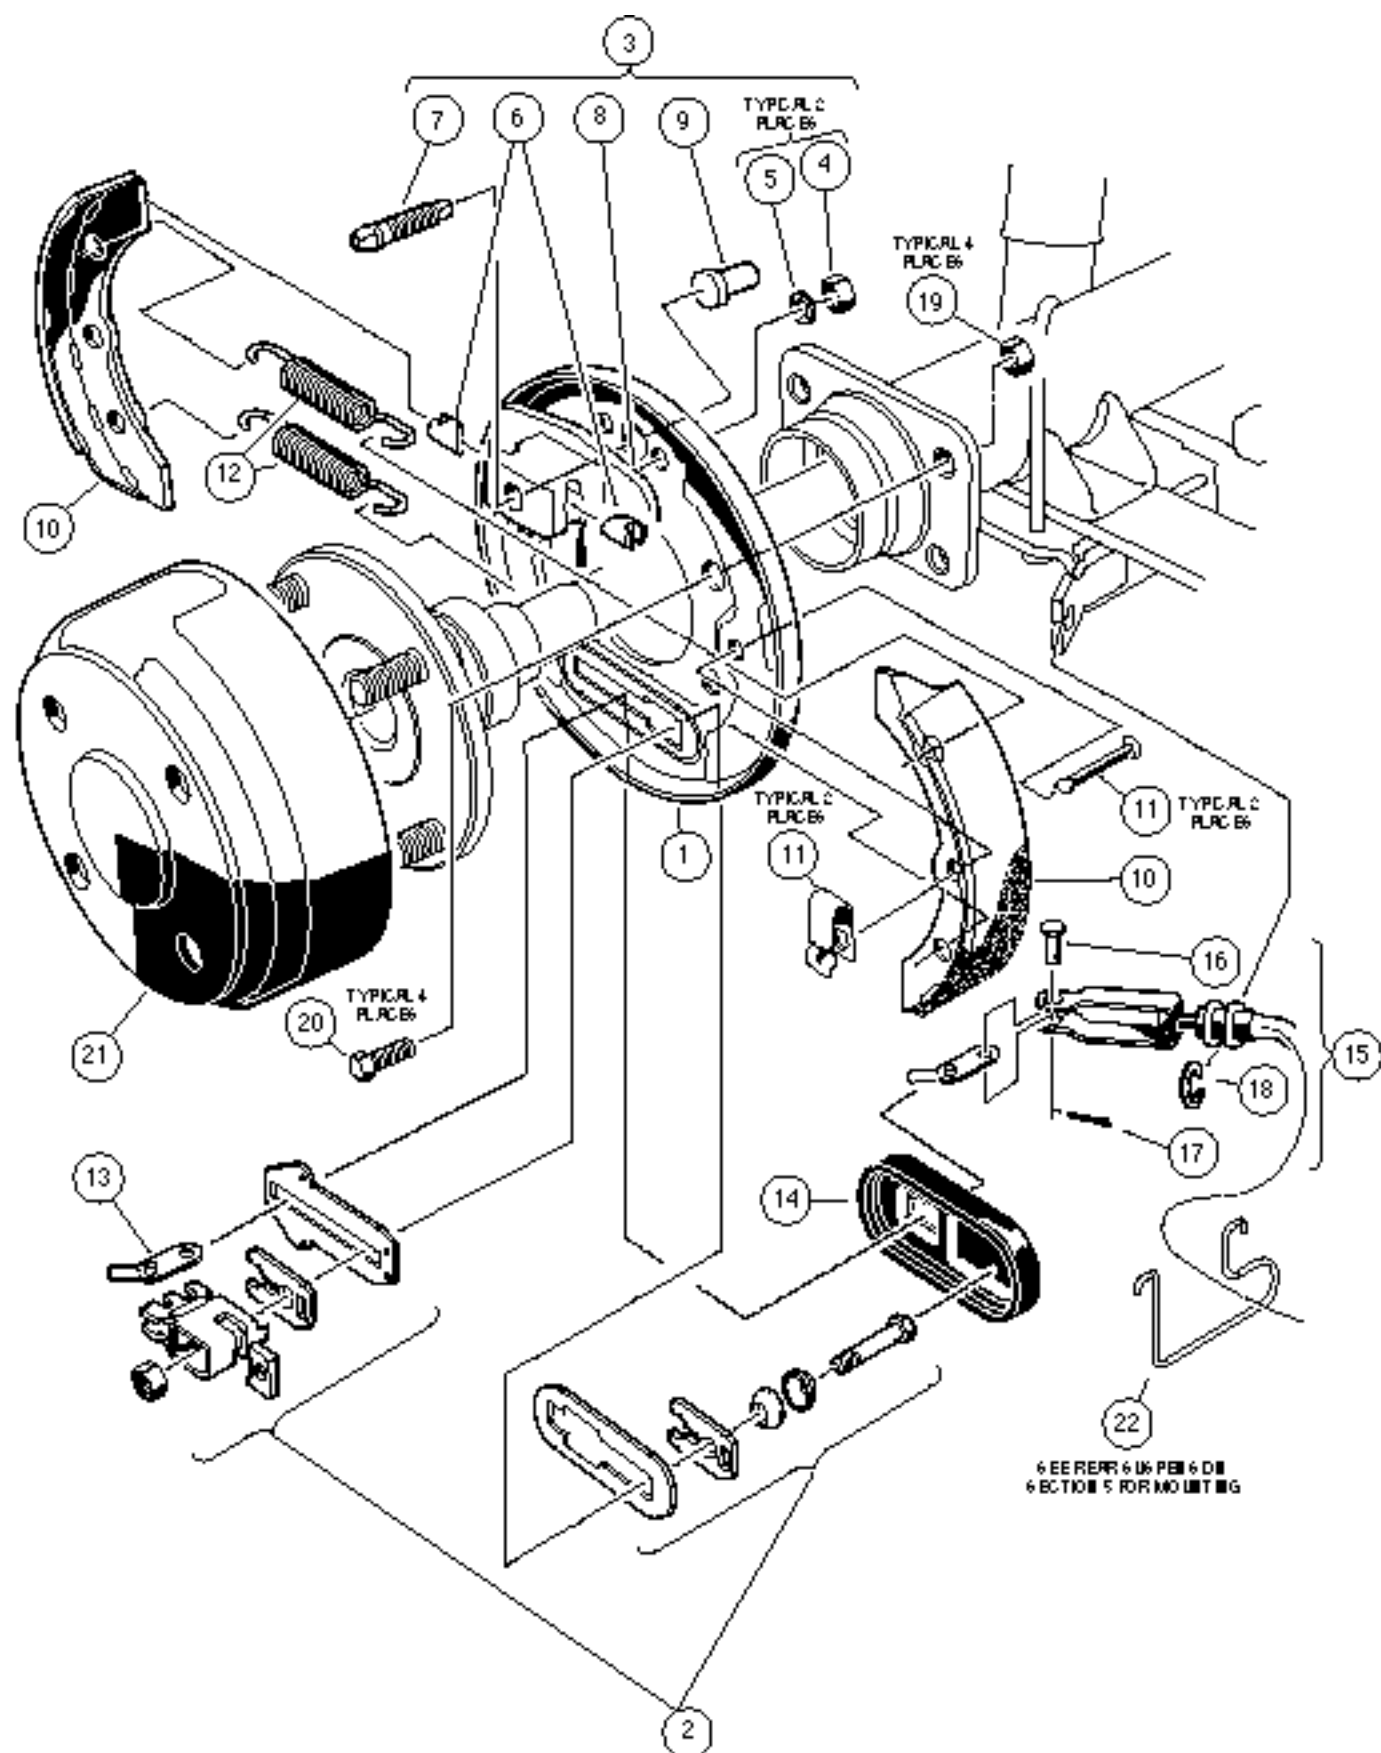


REAR BRAKE ASSEMBLY, MANUALLY ADJUSTED CARRYALL II, II PLUS AND VI

4

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
	<u>1016573</u>	CLUSTER, RIGHT BRAKE, WITHOUT BRAKE DRUM (INCLUDES ITEMS 1 - 14)	1	1
	<u>1016557</u>	CLUSTER, LEFT BRAKE, WITHOUT BRAKE DRUM (INCLUDES ITEMS 1 - 14)	1	1
1	<u>1011494</u>	PLATE, BACKING, LEFT SIDE	1	1
1	<u>1011154</u>	PLATE, BACKING, RIGHT SIDE	1	1
2	<u>1011465</u>	KIT, BRAKE ACTUATOR	1	1
3	<u>1011467</u>	KIT, ANCHOR BODY (INCLUDES ITEMS 4 - 9)	1	1
4	<u>1011114</u>	NUT, M6 x 1	2	2
5	<u>0000451</u>	WASHER, LOCK, 1/4	2	2
6	N/A	PISTON, ANCHOR	2	2
7	N/A	BOLT, ADJUSTMENT	1	1
8	N/A	BODY, ANCHOR	1	1
9	<u>1011303</u>	CAP, ADJUSTMENT BOLT	1	1
10	<u>1011463-02</u>	PACKAGE, BRAKE SHOE (FOUR PIECES)	1	1
11	<u>1011466</u>	KIT, SHOE RETAINER (FOUR PIECES)	1	1
12	<u>1011464</u>	PACKAGE, BRAKE SPRING (FOUR PIECES)	1	1
13	N/A	ARM, BRAKE LEVER	1	1
14	<u>1010850</u>	COVER, DUST	1	1
15	<u>1011403</u>	KIT, EQUALIZER AND PIVOT LIMITER (INCLUDES ITEMS 16, 17 AND 18)	2	2
16	<u>1010829</u>	PIN, CLEVIS, 5/16	2	2
17	<u>0001035</u>	PIN, COTTER, 3/32 x 1	2	2
18	<u>1011779</u>	CLIP, "E", 1/2	2	2
19	<u>1013924</u>	NUT, CONE LOCK, GRADE 8, 5/16 - 24	8	8
20	<u>1014153</u>	BOLT, BRAKE CLUSTER MOUNTING	8	8
21	<u>1017911-01</u>	DRUM, BRAKE	2	2
22	<u>1013207</u>	HANGER, BRAKE CABLE	2	2

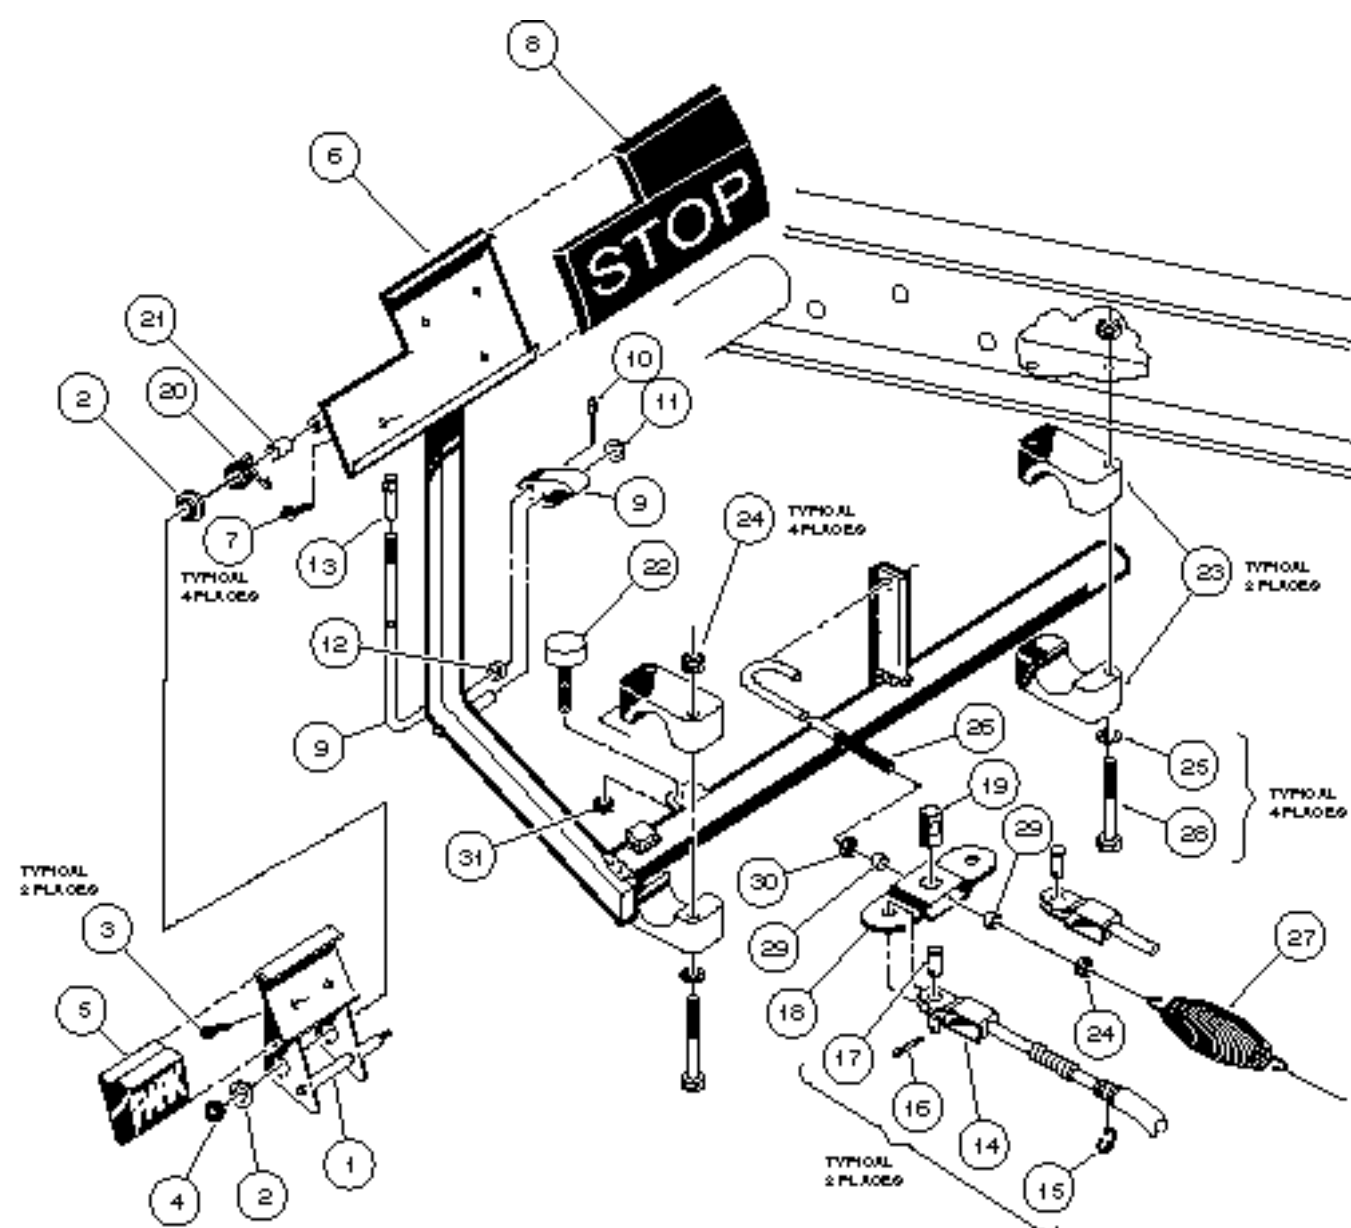


BRAKE PEDAL AND CABLE ASSEMBLY VEHICLE WITH 2-WHEEL BRAKING

4

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	<u>1011418</u>	KIT, PARK BRAKE PEDAL (INCLUDES ITEMS 2 - 5)	1	1
2	<u>0001032</u>	BUSHING, NYLON	2	2
3	<u>0007716</u>	SCREW, SLOTTED HEX WASHER HEAD, #10 - 16 x 1/2	2	2
4	<u>1013876</u>	NUT, PUSH, 3/8	1	1
5	<u>1013870</u>	PAD, PARK BRAKE	1	1
6	<u>1011406</u>	KIT, BRAKE PEDAL (INCLUDES ITEMS 7 AND 8)	1	1
7	<u>0007716</u>	SCREW, SLOTTED HEX WASHER HEAD, #10 - 16 x 1/2	4	4
8	<u>1013869</u>	PAD, BRAKE PEDAL	1	1
9	<u>1016173</u>	KIT, PARK BRAKE ROD AND PAWL (INCLUDES ITEMS 10 - 13)	1	1
10	<u>1017029</u>	PIN, COTTER, 7/64 x 1/2	1	1
11	<u>1010877</u>	NUT, PUSH, 5/16	1	1
12	<u>1010805</u>	SLEEVE, PARK BRAKE ROD	1	1
13	<u>1010932</u>	JOINT, BALL, 1/4 - 28	1	1
14	<u>1011403</u>	KIT, BRAKE CABLE, REAR (INCLUDES ITEMS 15 - 17)	2	2
15	<u>1011779</u>	CLIP, "E", 1/2	2	2
16	<u>0001035</u>	PIN, COTTER, 3/32 x 1	2	2
17	<u>1010829</u>	PIN, CLEVIS, 5/16	2	2
18	<u>1017211</u>	KIT, EQUALIZER AND PIVOT LIMITER (INCLUDES ITEM 19)	1	1
19	N/A	PIN, EQUALIZER PIVOT	1	1
20	<u>1010933</u>	SPRING, PARK BRAKE TORSION	1	1
21	<u>1010927</u>	SPACER, PARK BRAKE	1	1
22	<u>1010878</u>	STOP, BRAKE	1	1
23	<u>1011402</u>	PACKAGE, BRAKE MOUNTING BLOCK (CONTAINS UPPER AND LOWER FOR LEFT AND RIGHT SIDES)	1	1
24	<u>0008986</u>	NUT, DIMPLED LOCK, 5/16 - 18	5	5
25	<u>0001241</u>	WASHER, FLAT, 5/16	4	4
26	<u>1010808</u>	ROD, EQUALIZER, REAR (CARRYALL I)	1	1
26	<u>1013236</u>	ROD, EQUALIZER, REAR (CARRYALL II)	1	1
27	<u>1013532</u>	SPRING, BRAKE RETURN (GASOLINE CARRYALL I AND CARRYALL II)	1	
27	<u>1013531</u>	SPRING, BRAKE RETURN (ELECTRIC CARRYALL I ONLY)		1
28	<u>1010921</u>	SCREW, HEX HEAD CAP, 5/16 - 18 x 2 1/2	4	4
29	<u>1018653-01</u>	SPACER, EQUALIZER	2	2
30	<u>0001242</u>	NUT, HEX, 5/16 - 18	1	1
31	<u>0001028</u>	NUT, HEX, 1/4 - 20	1	1

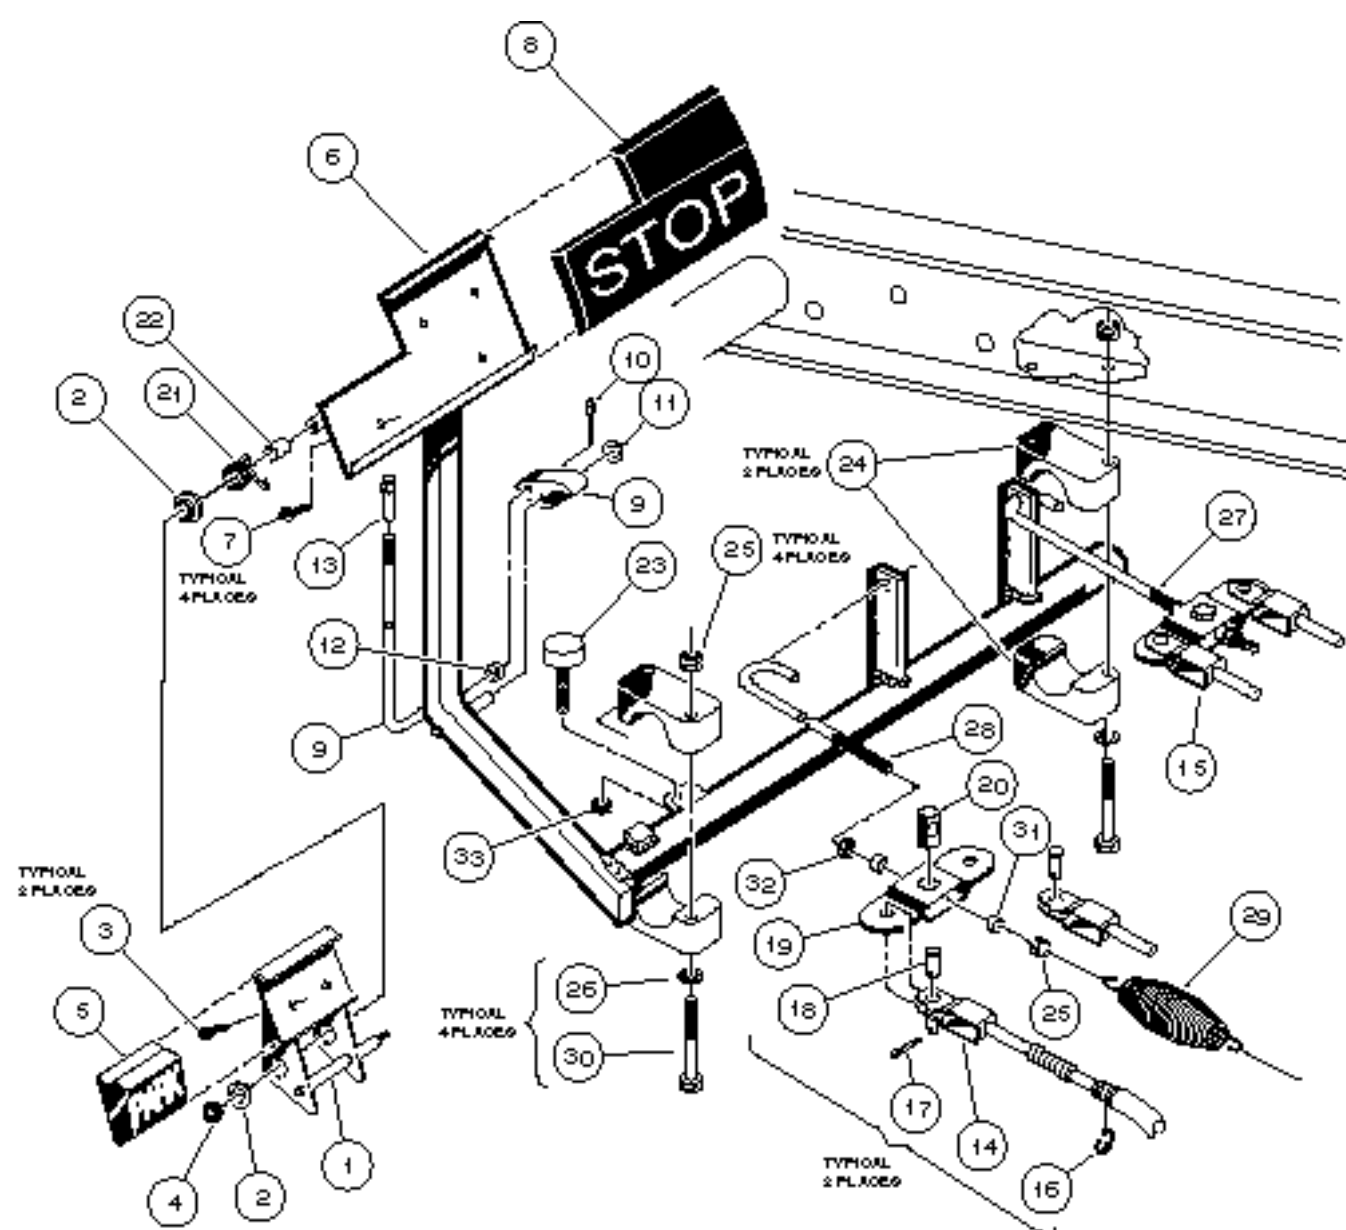


BRAKE PEDAL AND CABLE ASSEMBLY VEHICLE WITH 4-WHEEL BRAKING

4

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	<u>1011418</u>	KIT, PARK BRAKE PEDAL (INCLUDES ITEMS 2 - 5)	1	1
2	<u>0001032</u>	BUSHING, NYLON	2	2
3	<u>0007716</u>	SCREW, SLOTTED HEX WASHER HEAD, #10 - 16 x 1/2	2	2
4	<u>1013876</u>	NUT, PUSH, 3/8	1	1
5	<u>1013870</u>	PAD, PARK BRAKE	1	1
6	<u>1018782-01</u>	KIT, BRAKE PEDAL (INCLUDES ITEMS 7 AND 8)	1	1
7	<u>0007716</u>	SCREW, SLOTTED HEX WASHER HEAD, #10 - 16 x 1/2	4	4
8	<u>1013869</u>	PAD, BRAKE PEDAL	1	1
9	<u>1016173</u>	KIT, PARK BRAKE ROD AND PAWL (INCLUDES ITEMS 10 - 13)	1	1
10	<u>1017029</u>	PIN, COTTER, 7/64 x 1/2	1	1
11	<u>1010877</u>	NUT, PUSH, 5/16	1	1
12	<u>1010805</u>	SLEEVE, PARK BRAKE ROD	1	1
13	<u>1010932</u>	JOINT, BALL, 1/4 - 28	1	1
14	<u>1011403</u>	KIT, BRAKE CABLE, REAR (INCLUDES ITEMS 16, 17 AND 18)	2	2
15	<u>1018746-01</u>	KIT, BRAKE CABLE, FRONT (INCLUDES ITEMS 16, 17 AND 18)	2	2
16	<u>1011779</u>	CLIP, "E", 1/2	2	2
17	<u>0001035</u>	PIN, COTTER, 3/32 x 1	2	2
18	<u>1010829</u>	PIN, CLEVIS, 5/16	2	2
19	<u>1017211</u>	KIT, EQUALIZER AND PIVOT LIMITER (INCLUDES ITEM 20)	2	2
20	N/A	PIN, EQUALIZER PIVOT	1	1
21	<u>1010933</u>	SPRING, PARK BRAKE TORSION	1	1
22	<u>1010927</u>	SPACER, PARK BRAKE	1	1
23	<u>1010878</u>	STOP, BRAKE	1	1
24	<u>1011402</u>	PACKAGE, BRAKE MOUNTING BLOCK (CONTAINS UPPER AND LOWER FOR LEFT AND RIGHT SIDES)	1	1
25	<u>0007473</u>	NUT, NYLON LOCK, 5/16 - 18	6	6
26	<u>0001241</u>	WASHER, FLAT, 5/16	4	4
27	<u>1018687-01</u>	ROD, EQUALIZER, FRONT	1	1
28	<u>1013236</u>	ROD, EQUALIZER, REAR (CARRYALL II AND CARRYALL II PLUS)	1	1
28	<u>1016708-01</u>	ROD, EQUALIZER, REAR (CARRYALL VI)	1	1
29	<u>1013532</u>	SPRING, BRAKE RETURN	1	1
30	<u>1010921</u>	SCREW, HEX HEAD CAP, 5/16 - 18 x 2 1/2	4	4
31	<u>1018653-01</u>	SPACER, EQUALIZER	4	4
32	<u>0001242</u>	NUT, HEX, 5/16 - 18	2	2
33	<u>0001028</u>	NUT, HEX, 1/4 - 20	1	1

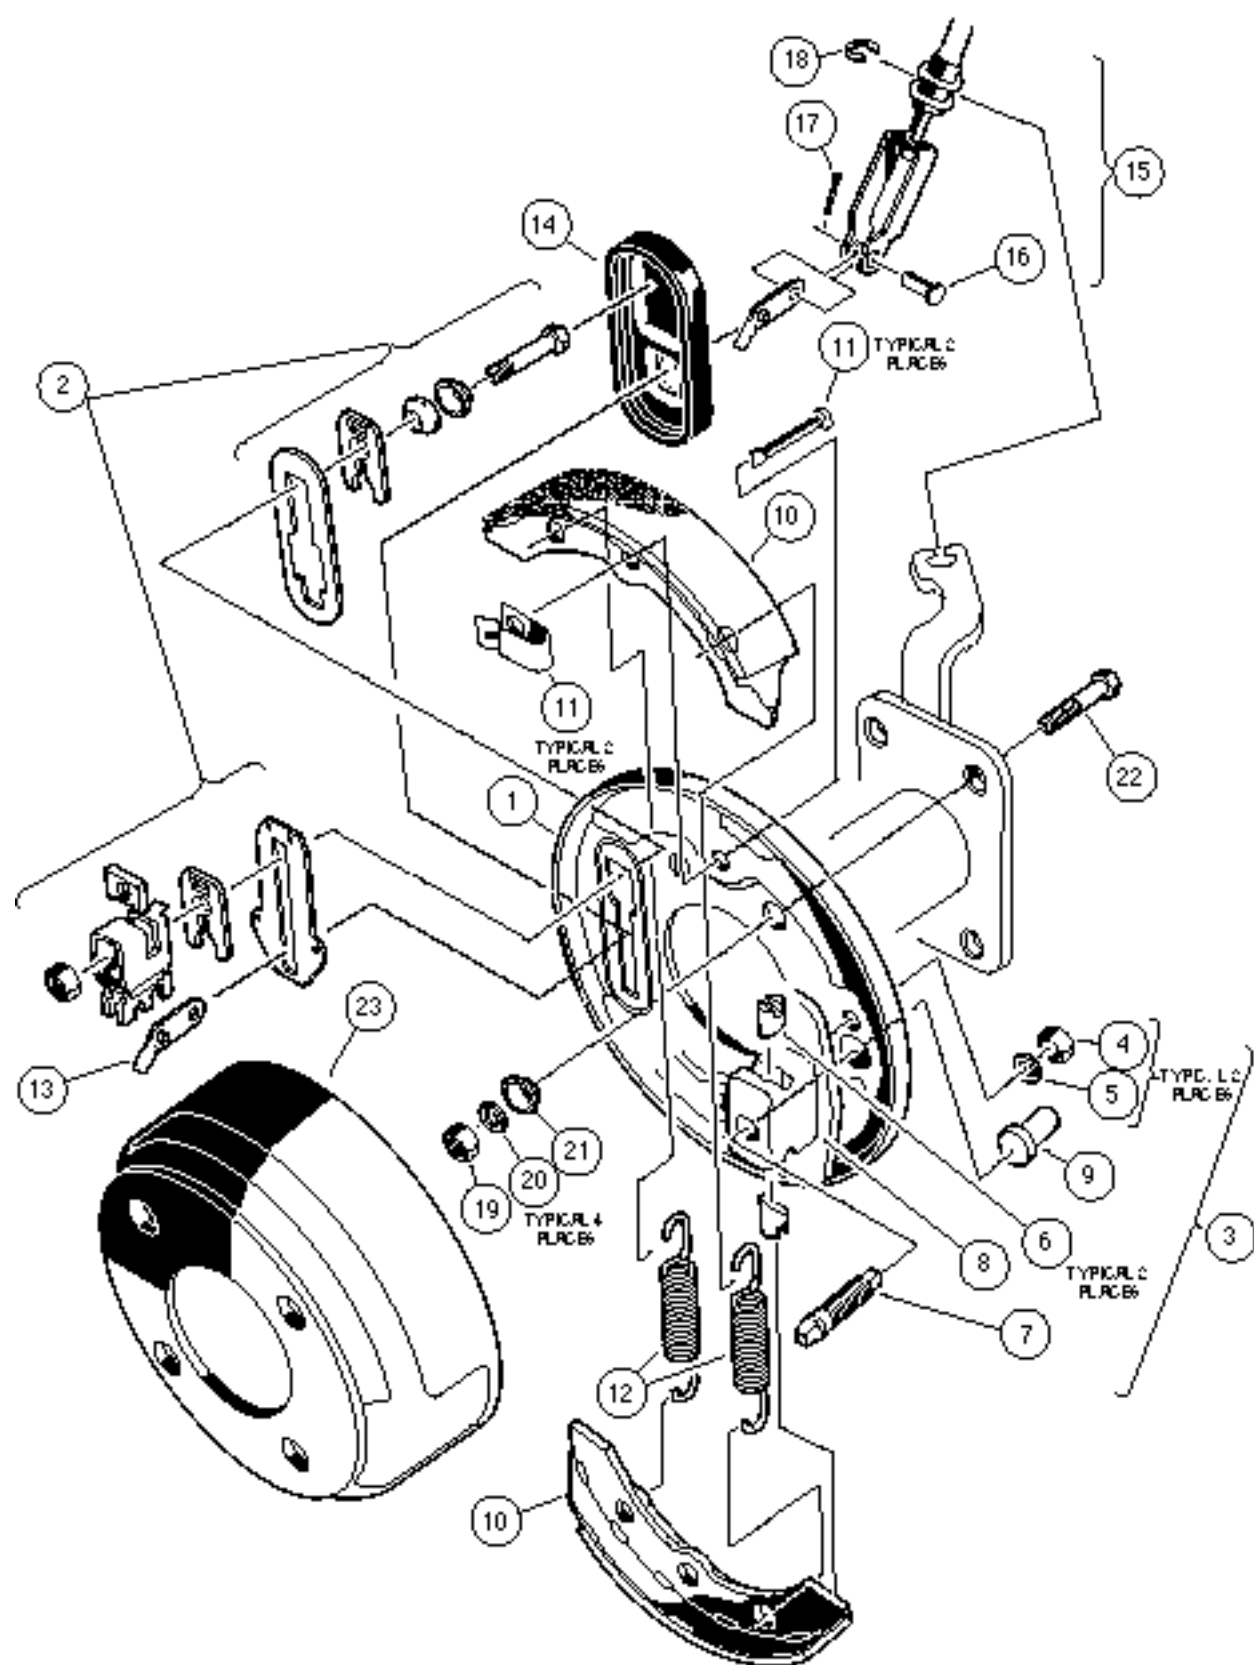


FRONT BRAKE ASSEMBLY VEHICLE WITH 4-WHEEL BRAKING

4

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
	<u>1016573</u>	CLUSTER, RIGHT BRAKE, WITHOUT BRAKE DRUM (INCLUDES ITEMS 1 - 14)	1	1
	<u>1016557</u>	CLUSTER, LEFT BRAKE, WITHOUT BRAKE DRUM (INCLUDES ITEMS 1 - 14)	1	1
1	<u>1011154</u>	PLATE, BACKING, RIGHT SIDE	1	1
1	<u>1011494</u>	PLATE, BACKING, LEFT SIDE	1	1
2	<u>1011465</u>	KIT, BRAKE ACTUATOR	1	1
3	<u>1011467</u>	KIT, ANCHOR BODY (INCLUDES ITEMS 4 - 9)	1	1
4	<u>1011114</u>	NUT, M6 x 1	2	2
5	<u>0000451</u>	WASHER, LOCK, 1/4	2	2
6	N/A	PISTON, ANCHOR	2	2
7	N/A	BOLT, ADJUSTMENT	1	1
8	N/A	BODY, ANCHOR	1	1
9	<u>1011303</u>	CAP, ADJUSTMENT BOLT	1	1
10	<u>1011463-02</u>	PACKAGE, BRAKE SHOE (FOUR PIECES)	1	1
11	<u>1011466</u>	KIT, SHOE RETAINER (FOUR PIECE)	1	1
12	<u>1011464</u>	PACKAGE, BRAKE SPRING (FOUR PIECES)	1	1
13	N/A	ARM, BRAKE LEVER	1	1
14	<u>1010850</u>	COVER, DUST	1	1
15	<u>1018746-01</u>	KIT, BRAKE CABLE (INCLUDES ITEMS 16, 17 AND 18)	2	2
16	<u>1010829</u>	PIN, CLEVIS, 5/16	2	2
17	<u>0001035</u>	PIN, COTTER, 3/32 x 1	2	2
18	<u>1011779</u>	CLIP, "E", 1/2	2	2
19	<u>1018727-01</u>	NUT, HEX, 5/16 - 24	8	8
20	<u>0007174</u>	WASHER, LOCK, 5/16 x 24	8	8
21	<u>1018690-01</u>	WASHER, CONE	8	8
22	<u>1017232</u>	BOLT, HEX HEAD, 5/16 - 24 x 1	8	8
23	<u>1011137</u>	DRUM, BRAKE	2	2

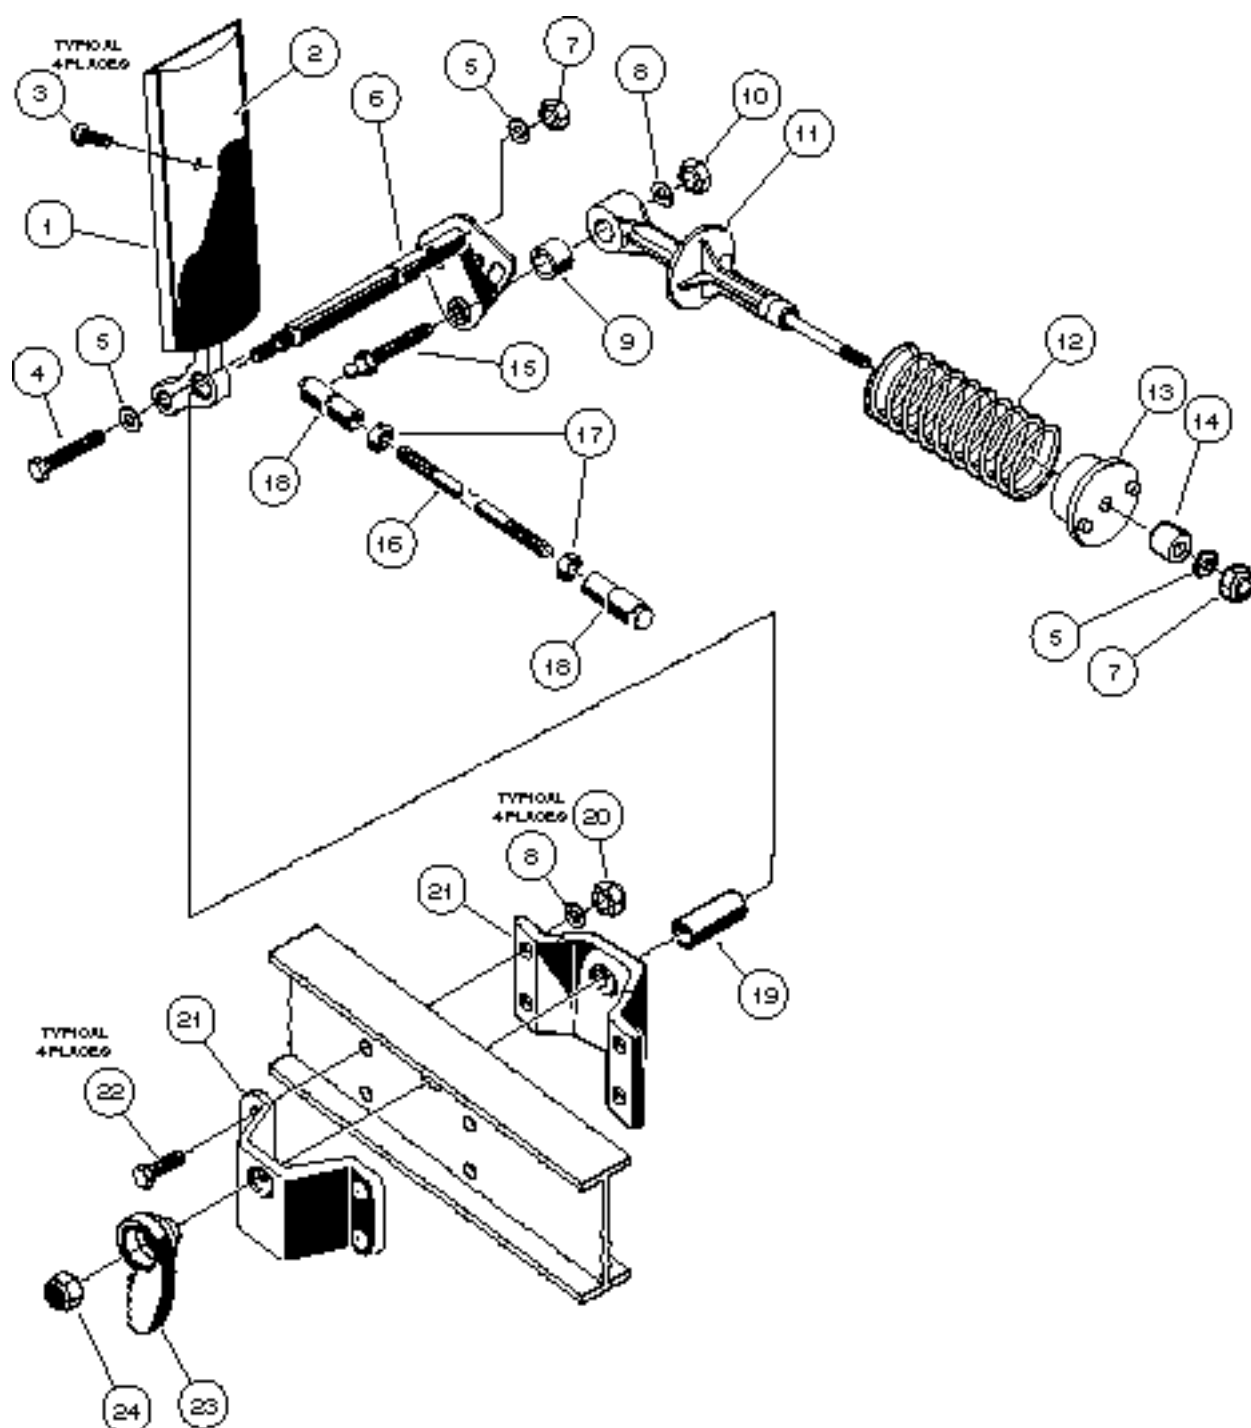


ACCELERATOR PEDAL ASSEMBLY GASOLINE VEHICLE

4

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	<u>1017696</u>	SUB-ASSEMBLY, ACCELERATOR PEDAL (INCLUDES ITEMS 2 AND 3)	1	
2	<u>1013871</u>	PAD, PEDAL	1	
3	<u>0007716</u>	SCREW, SLOTTED HEX WASHER HEAD, #10 - 16 x 1/2	4	
4	<u>0001218</u>	SCREW, HEX CAP, 5/16 - 18 x 1 1/4	1	
5	<u>0001241</u>	WASHER, FLAT, 5/16	3	
6	<u>1017325</u>	ASSEMBLY, ACCELERATOR PIVOT ROD	1	
7	<u>0007473</u>	NUT, NYLON LOCK, 5/16 - 18	2	
8	<u>0000332</u>	WASHER, FLAT, 1/4	5	
9	<u>1017424</u>	BEARING, PIVOT SUPPORT	1	
10	<u>0008717</u>	NUT, NYLON LOCK, 1/4 - 28	1	
11	<u>1018174-01</u>	RETAINER, SPRING	1	
12	<u>1017962-01</u>	SPRING, RETURN	1	
13	<u>1017378</u>	CUP, SPRING	1	
14	<u>1017380</u>	BUMPER, RETURN SPRING	1	
15	<u>1018188-01</u>	STUD, BALL	1	
16	<u>1016168</u>	ASSEMBLY, ACCELERATOR ROD (CARRYALL I) (INCLUDES ITEMS 17 AND 18)	1	
16	<u>1013233</u>	ASSEMBLY, ACCELERATOR ROD (CARRYALL II) (INCLUDES ITEMS 17 AND 18)	1	
16	<u>1018220-01</u>	ASSEMBLY, ACCELERATOR ROD (CARRYALL II PLUS) (INCLUDES ITEMS 17 AND 18)	1	
16	<u>1016747-02</u>	ASSEMBLY, ACCELERATOR ROD (CARRYALL VI) (INCLUDES ITEMS 17 AND 18)	1	
17	<u>1011084</u>	NUT, UNF HEX JAM, 1/4 - 28	2	
18	<u>1011734</u>	JOINT, SPRING-LOADED BALL	2	
19	<u>1011700</u>	SPACER	1	
20	<u>0008233</u>	NUT, NYLON LOCK, 1/4 - 20	4	
21	<u>1011694</u>	SUPPORT, ACCELERATOR PIVOT ROD	2	
22	<u>1018619-01</u>	SCREW, HEX CAP, 1/4 - 20 x 1 1/8	4	
23	<u>1017322</u>	RATCHET, PARK BRAKE	1	
24	<u>0008754</u>	NUT, NYLON LOCK, 3/8 x 16	1	

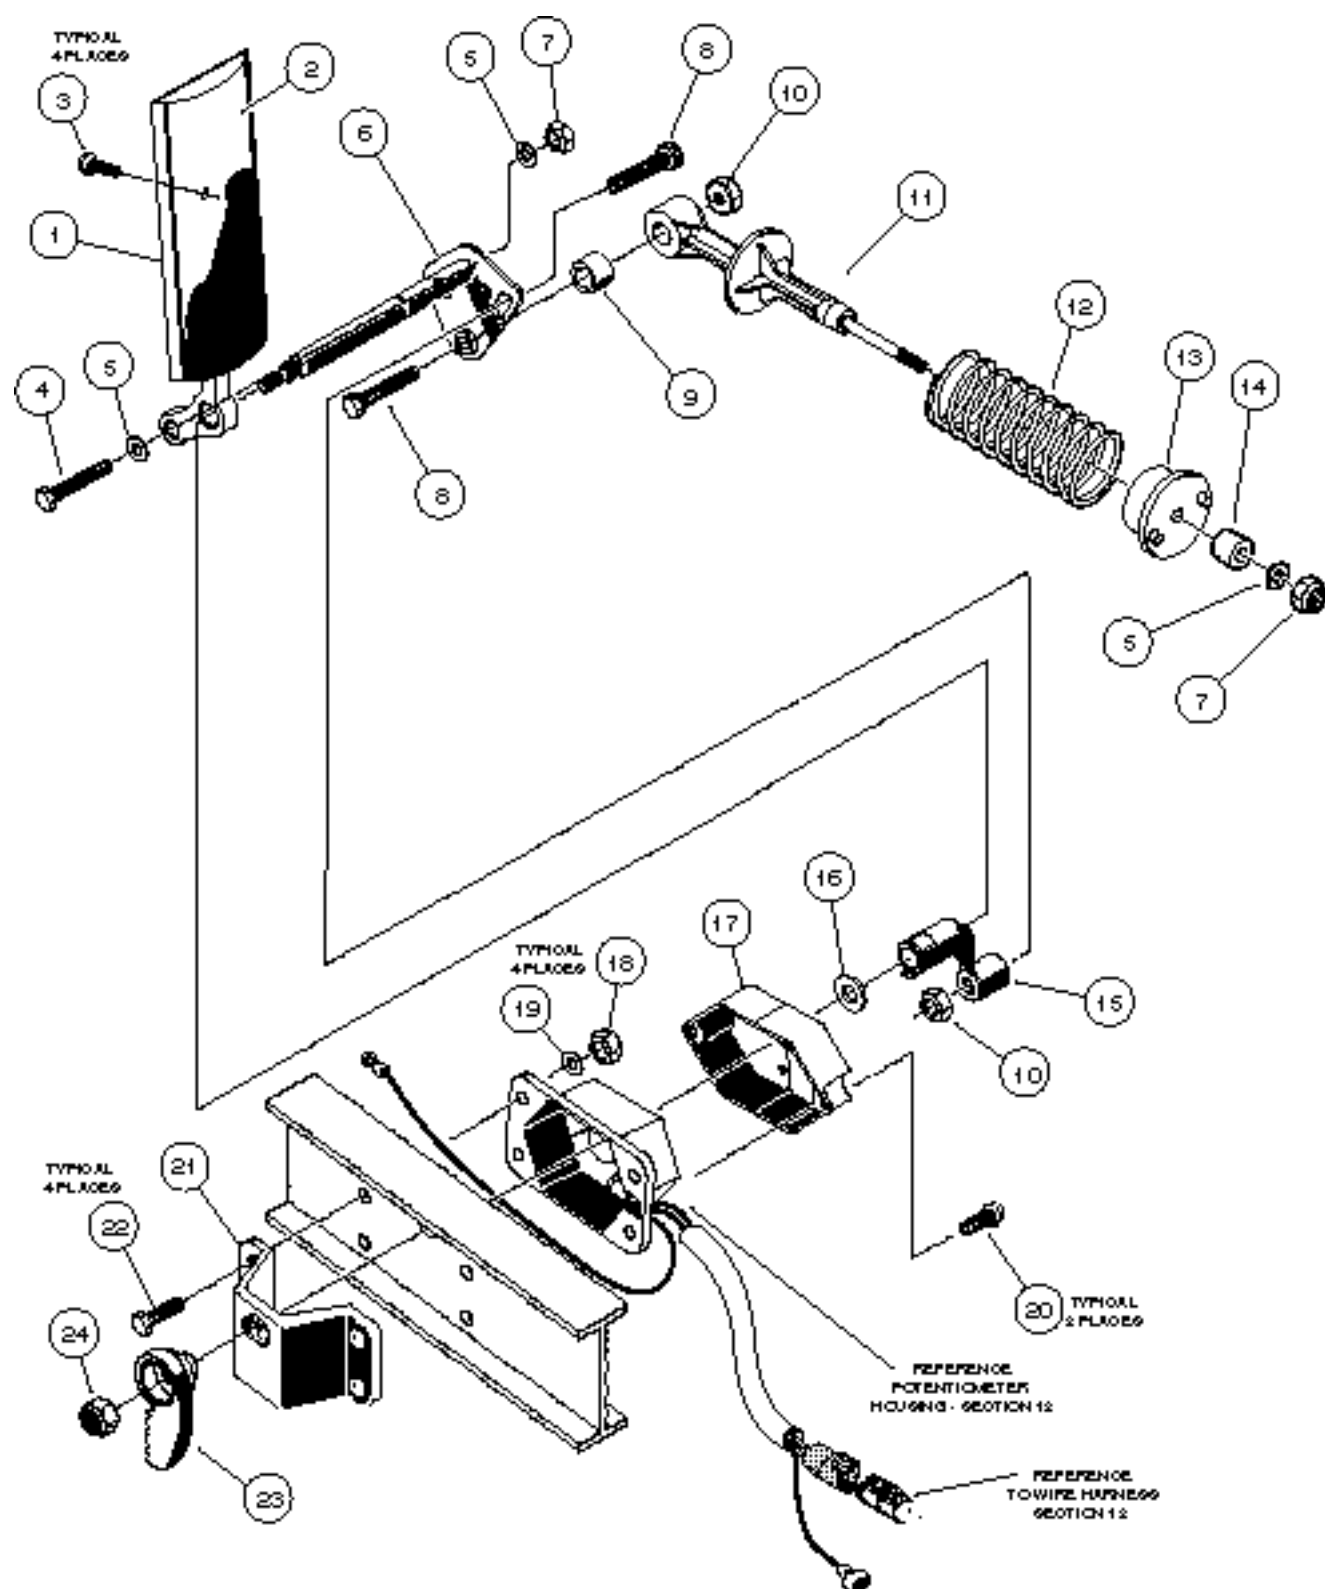

ACCELERATOR PEDAL ASSEMBLY POWERDRIVE ELECTRIC VEHICLE

4

G

E


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	<u>1017696</u>	SUB-ASSEMBLY, ACCELERATOR PEDAL (INCLUDES ITEMS 2 AND 3)		1
2	<u>1013871</u>	PAD, PEDAL		1
3	<u>0007716</u>	SCREW, SLOTTED HEX WASHER HEAD, #10 - 16 x 1/2		4
4	<u>0001218</u>	SCREW, HEX CAP, 5/16 - 18 x 1 1/4		1
5	<u>0001241</u>	WASHER, FLAT, 5/16		3
6	<u>1017325</u>	ASSEMBLY, ACCELERATOR PIVOT ROD		1
7	<u>0007473</u>	NUT, NYLON LOCK, 5/16 - 18		2
8	<u>1018620-01</u>	SCREW, HEX HEAD CAP, 1/4 - 20 x 1 3/8		2
9	<u>1017424</u>	BEARING, PIVOT SUPPORT		1
10	<u>1015661</u>	NUT, FLANGE LOCK, 1/4 - 20		2
11	<u>1018174-01</u>	RETAINER, SPRING		1
12	<u>1017962-01</u>	SPRING, RETURN		1
13	<u>1017378</u>	CUP, SPRING		1
14	<u>1017380</u>	BUMPER, RETURN SPRING		1
15	<u>1017400</u>	LEVER, ACTUATOR		1
16	<u>1018042-01</u>	WASHER, PLASTIC, 1/2		1
17	<u>1017743</u>	COVER, ACCELERATOR		1
18	<u>0008233</u>	NUT, NYLON LOCK, 1/4 - 20		4
19	<u>0000332</u>	WASHER, FLAT, 1/4		4
20	<u>1018043-01</u>	SCREW, HI-LO HEX HEAD, #8 - 18 x 1/2		2
21	<u>1011694</u>	SUPPORT, ACCELERATOR PIVOT ROD		1
22	<u>1018619-01</u>	SCREW, HEX CAP, 1/4 - 20 x 1 1/8		4
23	<u>1017322</u>	RATCHET, PARK BRAKE		1
24	<u>0008754</u>	NUT, NYLON LOCK, 3/8 x 16		1

STEERING, FRONT AND REAR SUSPENSION

5

G

E

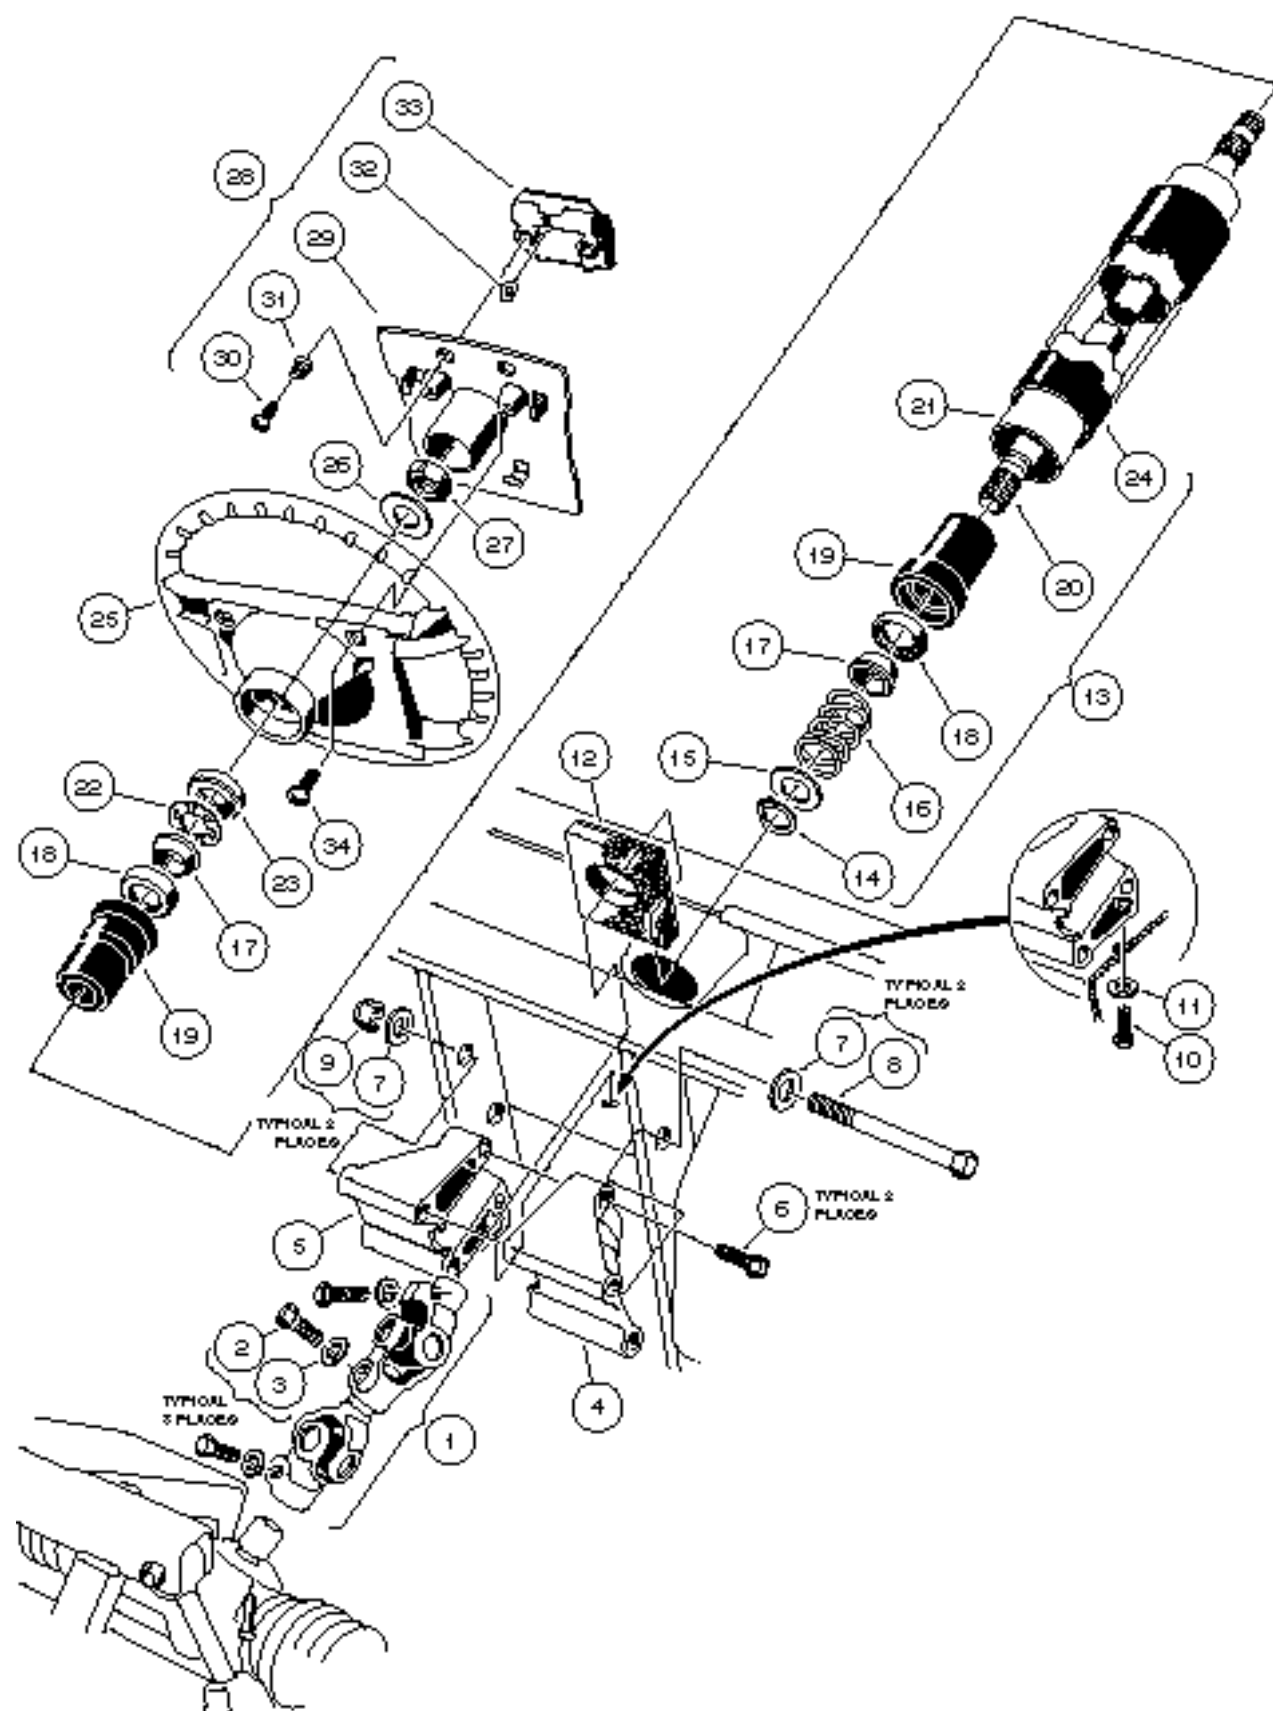


STEERING COLUMN

5

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	<u>1013861</u>	JOINT, COMPOUND STEERING (INCLUDES ITEMS 2 AND 3)	1	1
2	<u>1017226</u>	SCREW, HEX HEAD CAP, M8 x 1.25 x 30MM	3	3
3	<u>0007174</u>	WASHER, LOCK, 5/16	3	3
4	<u>1016185</u>	MOUNT, STEERING COLUMN, LEFT HAND	1	1
5	<u>1016184</u>	MOUNT, STEERING COLUMN, RIGHT HAND	1	1
6	<u>1016269</u>	SCREW, HEX WASHER HEAD THREAD FORMING, 5/16 - 18 x 2	2	2
7	<u>0000334</u>	WASHER, FLAT, 3/8	4	4
8	<u>1016183</u>	SCREW, HEX HEAD CAP, 3/8 - 16 x 6 3/4	2	2
9	<u>0008754</u>	NUT, NYLON LOCK, 3/8 - 16	2	2
10	<u>1014288</u>	SCREW, HEX WASHER HEAD THREAD FORMING, 5/16 - 18 x 3/4	1	1
11	<u>1011697</u>	WASHER, FLAT, 5/16	1	1
12	<u>1012499</u>	BOOT, STEERING COLUMN	1	1
13	<u>1016181</u>	ASSEMBLY, STEERING COLUMN (INCLUDES ITEMS 14 - 23)	1	1
14	<u>1012605</u>	RING, RETAINING	1	1
15	<u>1012604</u>	WASHER, STEEL, 5/8	1	1
16	<u>1014217</u>	SPRING, COMPRESSION	1	1
17	<u>1014125</u>	WEDGE	2	2
18	<u>1014213</u>	ASSEMBLY, BEARING	2	2
19	<u>1014126</u>	SEAT, BEARING	2	2
20	<u>1015545</u>	SHAFT, STEERING COLUMN	1	1
21	<u>1016622</u>	COLUMN, ALUMINUM STEERING	1	1
22	<u>1014214</u>	RING, RETAINING	1	1
23	<u>1014211</u>	SEAL, BEARING	1	1
24	<u>1016263</u>	COVER, STEERING COLUMN	1	1
25	<u>1016156</u>	WHEEL, STEERING	1	1
26	<u>1012604</u>	WASHER, STEEL, 5/8	1	1
27	<u>1017273</u>	NUT, NYLON LOCK, 5/8 - 18	1	1
28	<u>1016219</u>	ASSEMBLY, SCORECARD PLATE (INCLUDES ITEMS 29 - 33)	1	1
29	N/A	PLATE, STEERING WHEEL	1	1
30	<u>1012565</u>	SCREW, ROUND HEAD, #12 - 14 x 1	2	2
31	<u>1012566</u>	SPRING, TAPERED COMPRESSION	2	2
32	<u>1016214</u>	GRIP, PENCIL	2	2
33	<u>1016154</u>	CLIP, SCORE CARD	1	1
34	<u>1010715</u>	SCREW, PHILLIPS, #10 - 14 x 3/8	2	2

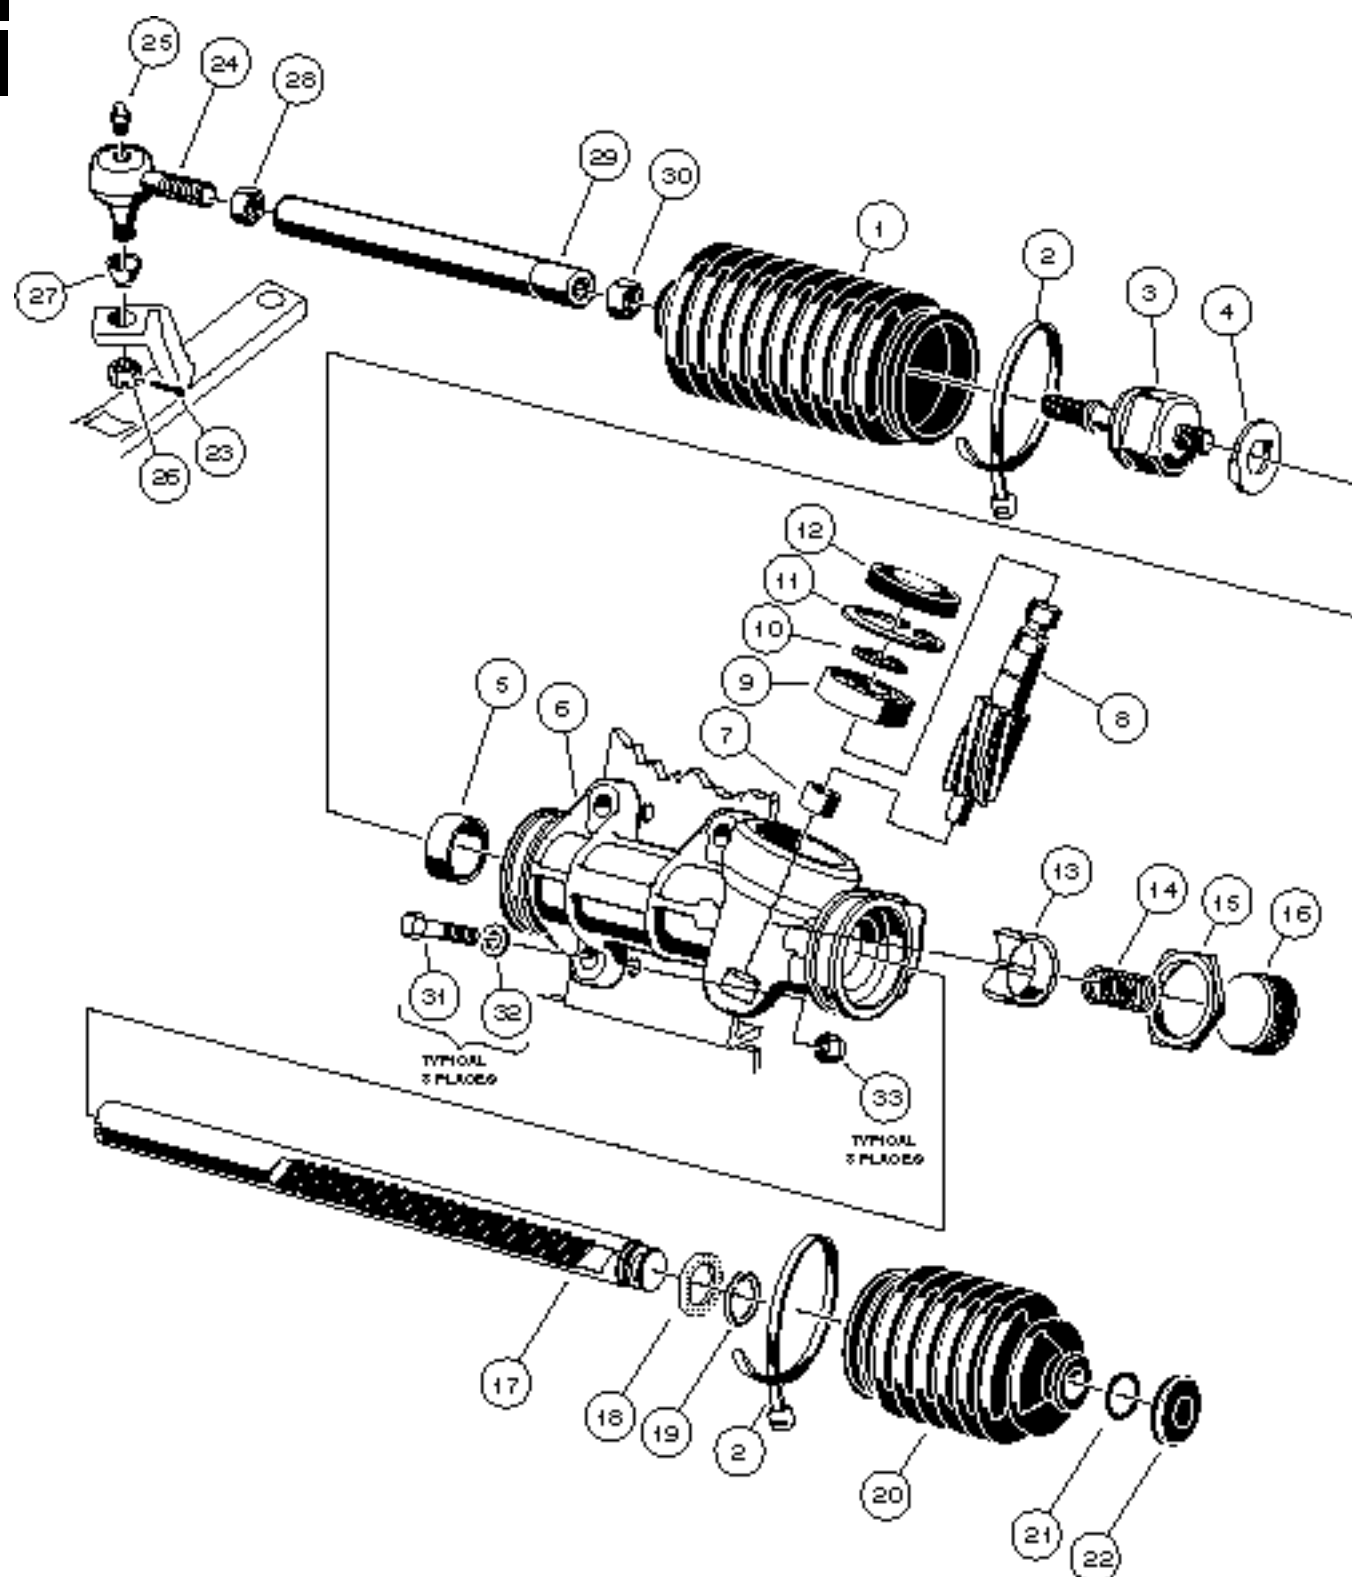


STEERING GEAR ASSEMBLY

5

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
	<u>1018783-02</u>	ASSEMBLY, STEERING GEAR BOX (INCLUDES ITEMS 1 - 22)	1	1
1	<u>1013035</u>	SEAL, DUST, RIGHT	1	1
2	0008990	WRAP, TIE	2	2
3	<u>1018802-01</u>	ASSEMBLY, INNER BALL JOINT	1	1
4	<u>1018803-01</u>	WASHER, TAB	2	2
5	N/A	BUSHING, RACK	1	1
6	N/A	BOX, STEERING GEAR	1	1
7	N/A	BEARING, LOWER PINION	1	1
8	N/A	PINION, STEERING	1	1
9	<u>1018794-01</u>	BEARING, UPPER PINION	1	1
10	<u>1018799-01</u>	RING, C-TYPE STOP	1	1
11	1013051	RING, SNAP	1	1
12	<u>1013052</u>	SEAL, DUST, STEERING PINION	1	1
13	<u>1018797-01</u>	GUIDE, STEERING RACK	1	1
14	<u>1018798-01</u>	SPRING, YOKE	1	1
15	<u>1013044</u>	NUT, LOCK, RACK SCREW	1	1
16	N/A	SCREW, RACK GUIDE	1	1
17	N/A	RACK, STEERING	1	1
18	<u>1018795-01</u>	WASHER, STOP	2	2
19	1018796-01	RING, C-TYPE STOP	1	1
20	<u>1018800-01</u>	SEAL, DUST, LEFT	1	1
21	1018801-01	O-RING, DUST SEAL RETAINING	1	1
22	1019260-01	CAP, RACK END DUST	1	1
23	<u>0001035</u>	PIN, COTTER, 3/32 x 1	1	1
24	0007540	BALL JOINT, LEFT HAND THREAD (INCLUDES ITEMS 25, 26 AND 27)	1	1
25	<u>1015597</u>	FITTING, THREAD FORM GREASE, 1/4 - 28	1	1
26	<u>0007602</u>	NUT, HEX SLOTTED, 3/8 - 24	1	1
27	<u>1011930</u>	BOOT, DUST	1	1
28	0007555	NUT, HEX, LEFT HAND THREAD, 1/2 - 20	1	1
29	<u>1012467</u>	LINK, RACK AND PINION DRAG	1	1
30	1013042	NUT, HEX, M12 x 1.75	1	1
31	0001624	BOLT, HEX HEAD, 3/8 - 16 x 1 1/2	3	3
32	0000334	WASHER, FLAT, 3/8	3	3
33	<u>1010138</u>	NUT, DIMPLED LOCK, 3/8 - 16	3	3

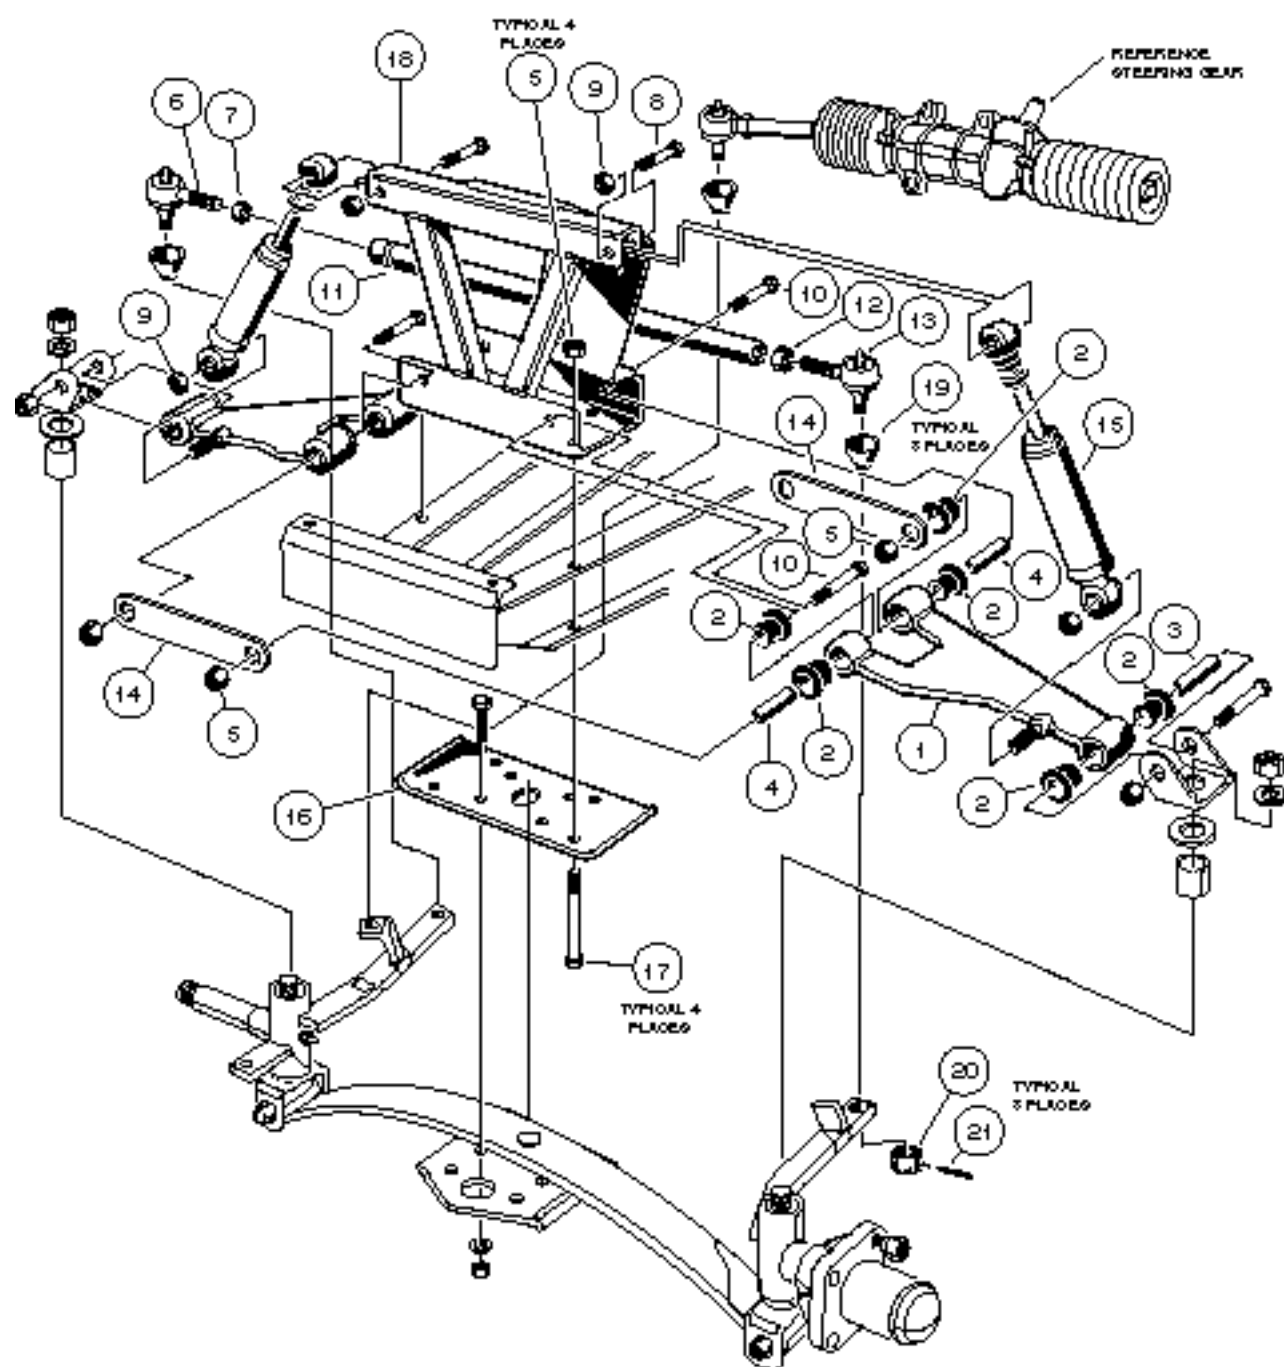


FRONT SUSPENSION, UPPER VEHICLE WITH 2-WHEEL BRAKING

5

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	<u>1016353</u>	ASSEMBLY, DELTA A-PLATE (INCLUDES ITEMS 2, 3 AND 4)	2	2
2	<u>1016346</u>	BUSHING, URETHANE	6	6
3	<u>1016350</u>	SLEEVE, DELTA OUTER	1	1
4	<u>1016349</u>	SLEEVE, DELTA INNER	2	2
5	0008754	NUT, NYLON LOCK, 3/8 - 16	8	8
6	0007539	BALL JOINT	1	1
7	0001308	NUT, HEX, 1/2 - 20	1	1
8	0001624	BOLT, HEX HEAD, 3/8 - 16 x 1 1/2	2	2
9	<u>1010138</u>	NUT, DIMPLED LOCK, 3/8 - 16	4	4
10	0002402	SCREW, HEX CAP, 3/8 - 16 x 2 1/4	4	4
11	<u>1010219</u>	ROD, TIE	1	1
12	0007555	NUT, HEX, LEFT HAND THREAD, 1/2 - 20	1	1
13	0007540	BALL JOINT, LEFT HAND THREAD	1	1
14	<u>1017266</u>	STRAP, A-PLATE	2	2
15	<u>1014235</u>	SHOCK ABSORBER, FRONT	2	2
16	<u>1010124</u>	PLATE, SPRING MOUNTING	1	1
17	<u>1010200</u>	BOLT, HEX HEAD, 3/8 - 16 x 4 1/4	4	4
18	<u>1016385</u>	ASSEMBLY, DELTA SHOCK AND GEAR SUPPORT	1	1
19	<u>1011930</u>	SEAL, DUST	3	3
20	<u>0007602</u>	NUT, SLOTTED HEX, 3/8 - 24	3	3
21	<u>0001035</u>	PIN, COTTER, 3/32 x 1	1	1

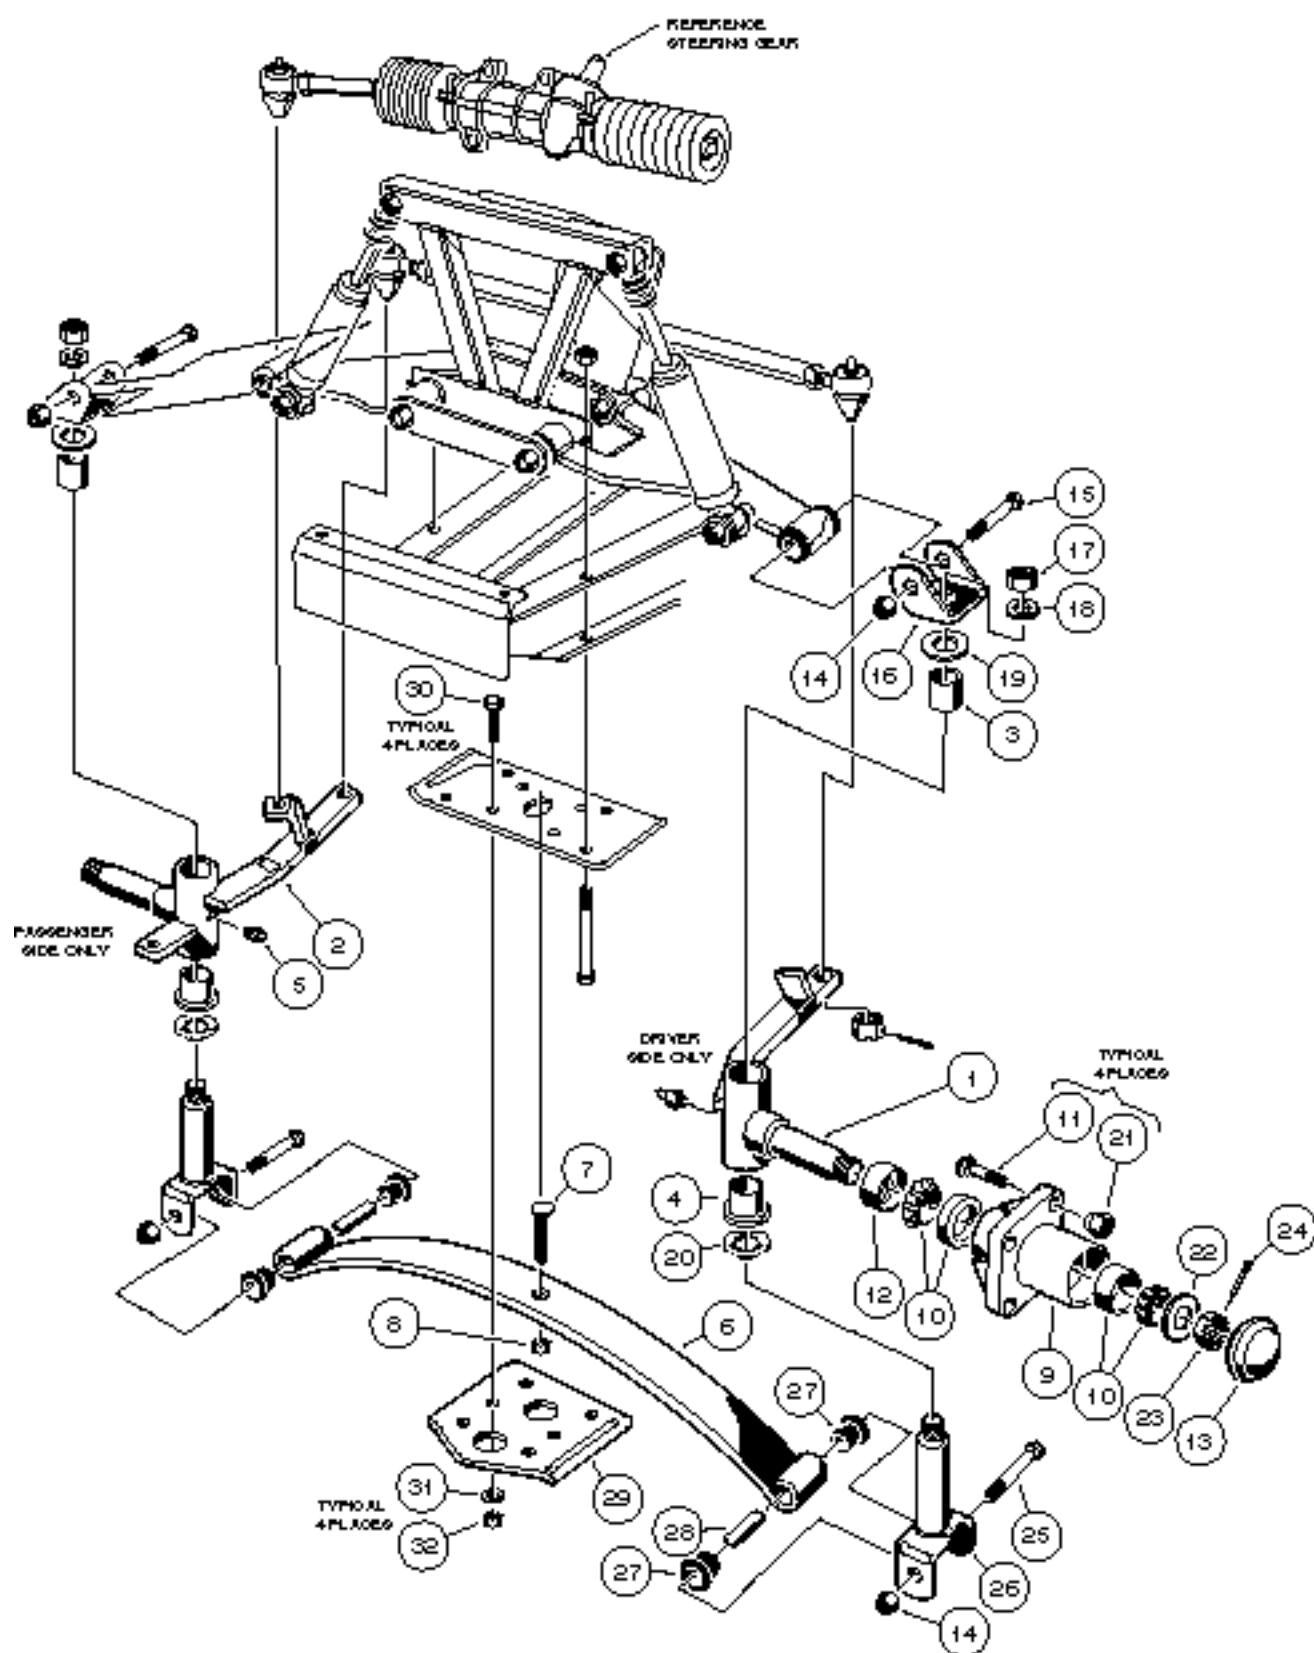


FRONT SUSPENSION, LOWER VEHICLE WITH 2-WHEEL BRAKING

5

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	<u>1010348</u>	ASSEMBLY, LEFT SPINDLE (INCLUDES ITEMS 3, 4 AND 5)	1	1
2	<u>1010347</u>	ASSEMBLY, RIGHT SPINDLE (INCLUDES ITEMS 3, 4 AND 5)	1	1
3	0008067	BUSHING, BRONZE SPINDLE	1	1
4	0007048	BUSHING, BRONZE	1	1
5	<u>1015597</u>	FITTING, GREASE, 1/4 - 28	1	1
6	<u>1012030</u>	SPRING, TAPERED LEAF	1	1
7	0008745	ASSEMBLY, ECCENTRIC	1	1
8	0000706	NUT, HEX, 3/8 - 16	1	1
9	<u>1011892</u>	ASSEMBLY, HUB (INCLUDES ITEMS 10 - 13)	2	2
10	<u>1011393</u>	PACKAGE, HUB BEARING	2	2
11	<u>1011304</u>	STUD, LUG, 1/2 - 20	4	4
12	<u>1013135</u>	SEAL, DOUBLE LIP	1	1
13	<u>1011887</u>	COVER, DUST	1	1
14	0008754	NUT, NYLON LOCK, 3/8 - 16	4	4
15	<u>1016387</u>	SCREW, HEX HEAD CAP, 3/8 - 16 x 2 3/4	2	2
16	<u>1016384</u>	CLEVIS, UPPER DELTA	2	2
17	0001308	NUT, HEX, 1/2 - 20	2	2
18	0000209	WASHER, SPLIT LOCK, 1/2	2	2
19	<u>1010150</u>	BEARING, THRUST	2	2
20	<u>1016389</u>	WASHER, KINGPIN WAVE	2	2
21	<u>1010984</u>	NUT, LUG	8	8
22	<u>1010005</u>	WASHER, FLAT, 3/4	2	2
23	0007840	NUT, HEX SLOTTED, 3/4 - 16	2	2
24	0007910	PIN, COTTER, 5/32 x 1	2	2
25	0008755	SCREW, HEX HEAD CAP, 3/8 - 16 x 3 3/8	2	2
26	<u>1016386</u>	KINGPIN	2	2
27	<u>1015583</u>	BUSHING, URETHANE	4	4
28	<u>1012303</u>	BUSHING, STEEL	2	2
29	<u>1014276</u>	PLATE, FRONT SPRING RETAINER	1	1
30	0001624	SCREW, HEX HEAD CAP, 3/8 - 16 x 1 1/2	4	4
31	0000357	WASHER, LOCK, 3/8	4	4
32	0000706	NUT, HEX, 3/8 - 16	4	4

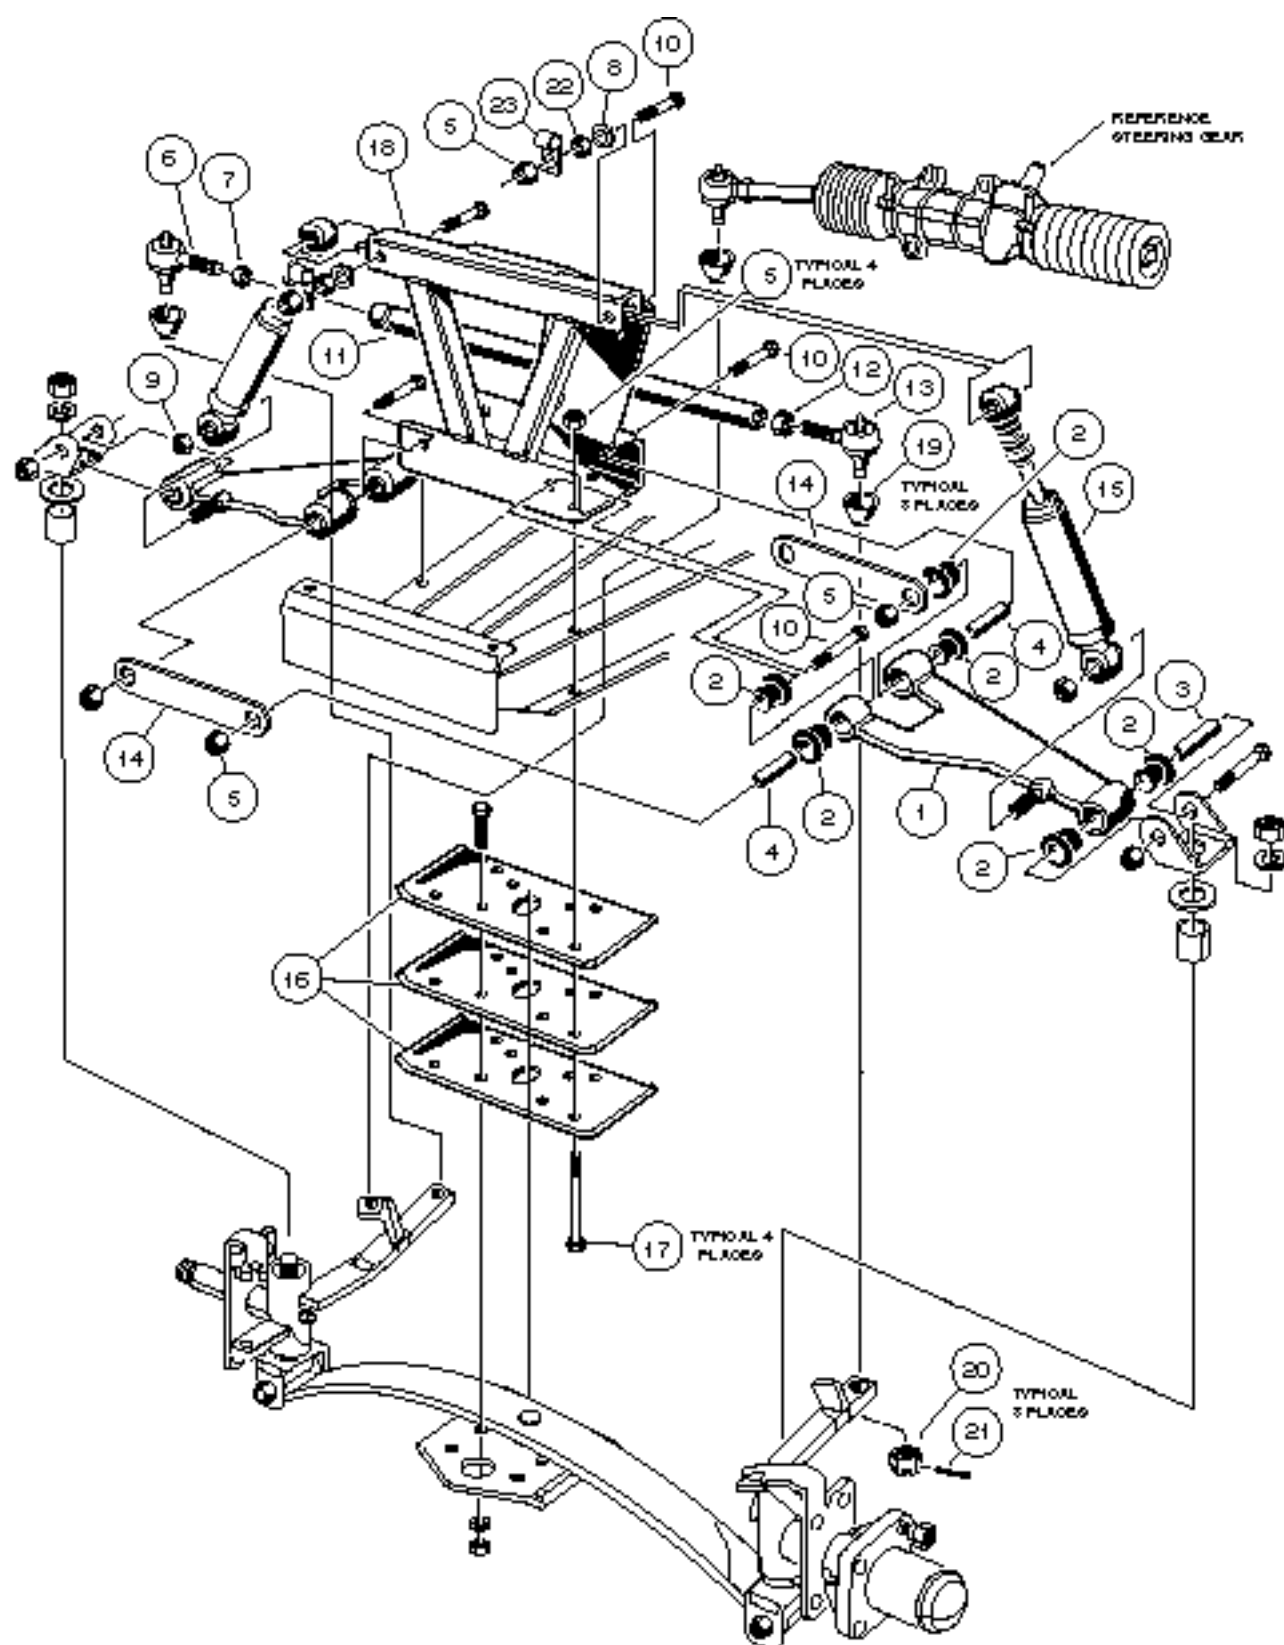


FRONT SUSPENSION, UPPER VEHICLE WITH 4-WHEEL BRAKING

5

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	<u>1016353</u>	ASSEMBLY, DELTA A-PLATE (INCLUDES ITEMS 2, 3 AND 4)	2	2
2	<u>1016346</u>	BUSHING, URETHANE	6	6
3	<u>1016350</u>	SLEEVE, DELTA OUTER	1	1
4	<u>1016349</u>	SLEEVE, DELTA INNER	2	2
5	0008754	NUT, NYLON LOCK, 3/8 - 16	10	10
6	0007539	BALL JOINT	1	1
7	0001308	NUT, HEX, 1/2 - 20	1	1
8	0000334	WASHER, FLAT, 3/8	2	2
9	<u>1010138</u>	NUT, DIMPLED LOCK, 3/8 - 16	2	2
10	0002402	BOLT, HEX HEAD, 3/8 - 16 x 2 1/4	6	6
11	<u>1010219</u>	ROD, TIE	1	1
12	0007555	NUT, HEX, LEFT HAND THREAD, 1/2 - 20	1	1
13	0007540	BALL JOINT, LEFT HAND THREAD	1	1
14	<u>1017266</u>	STRAP, A-PLATE	2	2
15	<u>1018706-01</u>	SHOCK ABSORBER, FRONT	2	2
16	<u>1010124</u>	PLATE, SPRING MOUNTING	3	3
17	<u>1018705-01</u>	BOLT, HEX HEAD, 3/8 - 16 x 4 3/4	4	4
18	<u>1016385</u>	ASSEMBLY, DELTA SHOCK AND GEAR SUPPORT	1	1
19	<u>1011930</u>	SEAL, DUST	3	3
20	<u>0007602</u>	NUT, SLOTTED HEX, 3/8 - 24	3	3
21	<u>0001035</u>	PIN, COTTER, 3/32 x 1	1	1
22	0000706	NUT, HEX, 3/8 - 16	2	2
23	<u>1019353-01</u>	CLAMP, BRAKE CABLE (PART OF BRAKE CABLE ASSEMBLY)	2	2

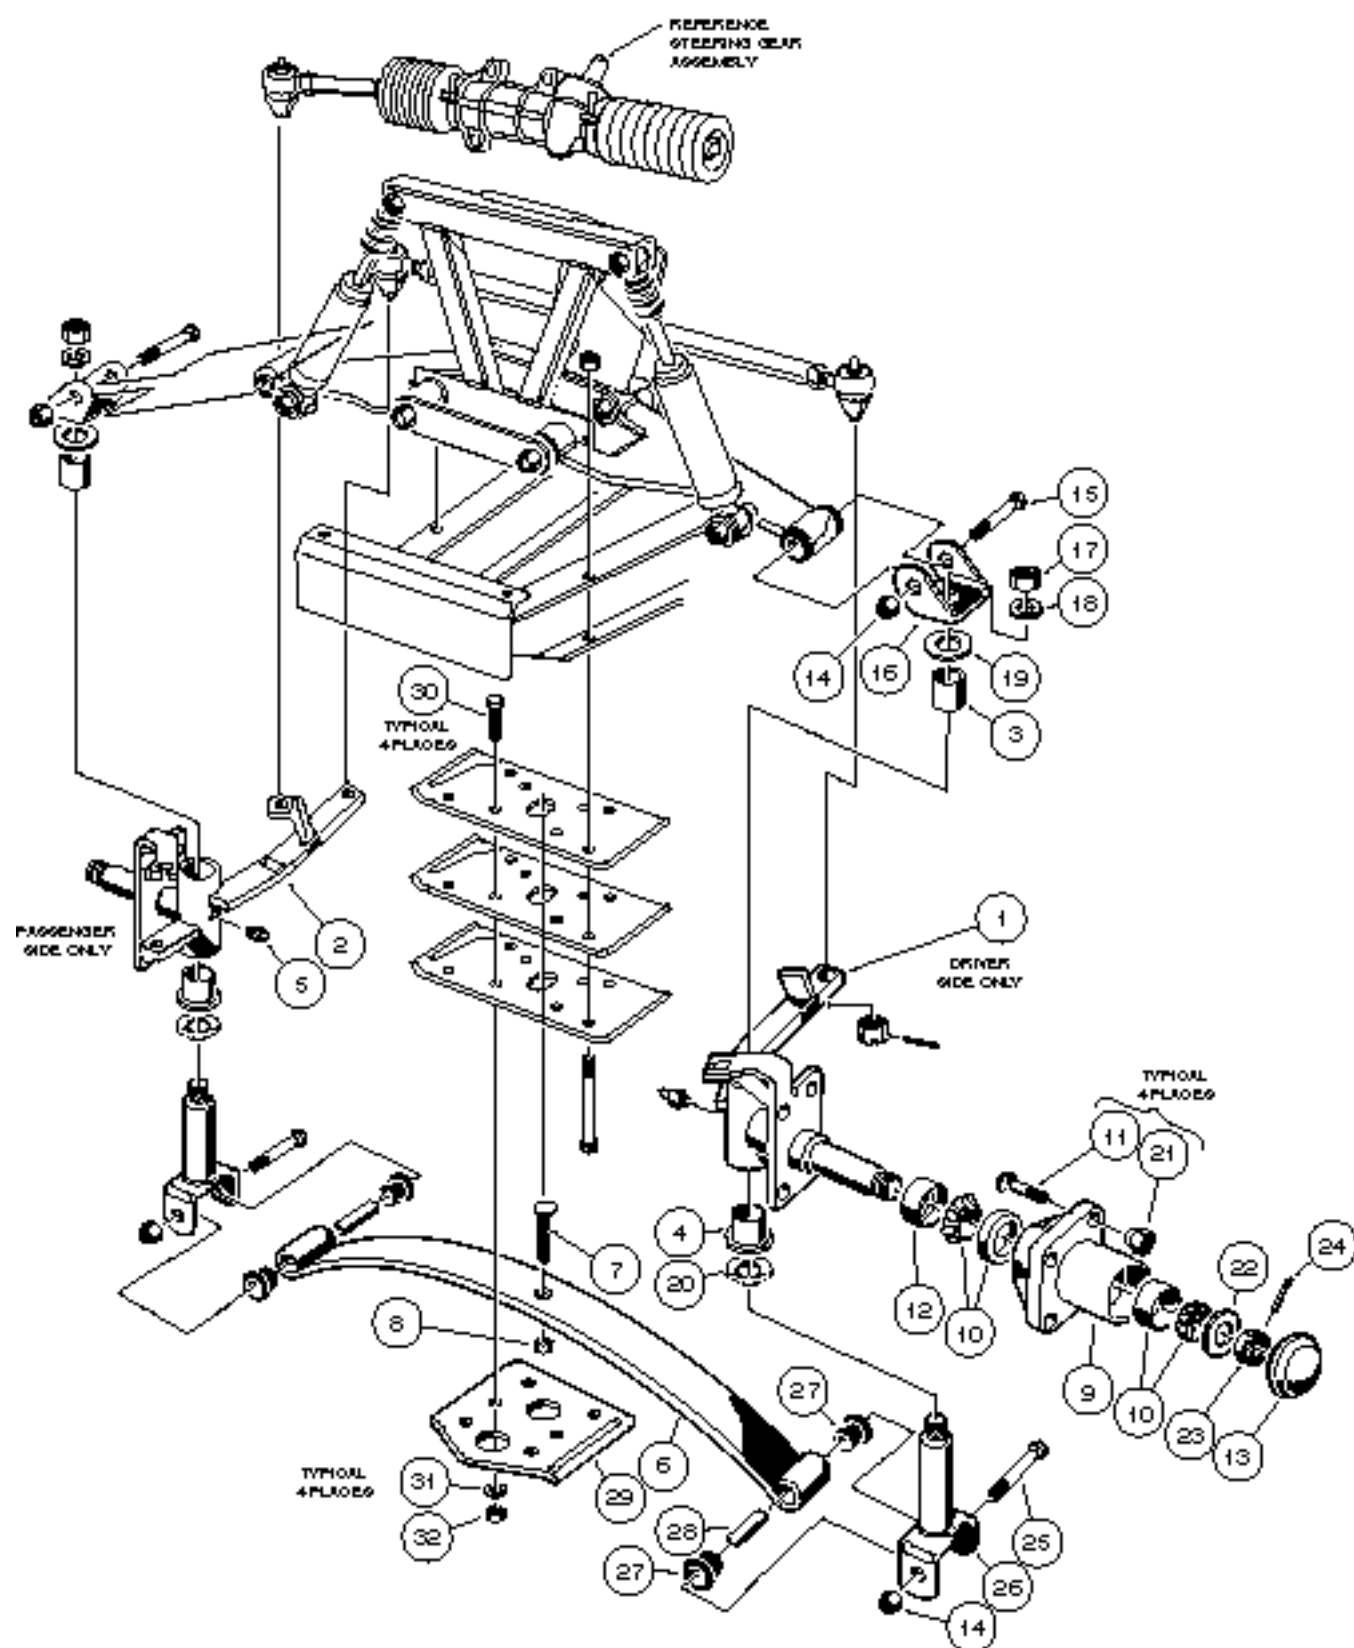

FRONT SUSPENSION, LOWER VEHICLE WITH 4-WHEEL BRAKING

5

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	1018769-01	ASSEMBLY, LEFT SPINDLE (INCLUDES ITEMS 3, 4 AND 5)	1	1
2	<u>1018770-01</u>	ASSEMBLY, RIGHT SPINDLE (INCLUDES ITEMS 3, 4 AND 5)	1	1
3	0008067	BUSHING, BRONZE SPINDLE	1	1
4	0007048	BUSHING, BRONZE	1	1
5	<u>1015597</u>	FITTING, GREASE, 1/4 - 28	1	1
6	<u>1012030</u>	SPRING, TAPERED LEAF	1	1
7	0008745	ASSEMBLY, ECCENTRIC	1	1
8	0000706	NUT, HEX, 3/8 - 16	1	1
9	<u>1011892</u>	ASSEMBLY, HUB (INCLUDES ITEMS 10 - 13)	2	2
10	<u>1011393</u>	PACKAGE, HUB BEARING	2	2
11	<u>1011304</u>	STUD, LUG, 1/2 - 20	4	4
12	<u>1013135</u>	SEAL, DOUBLE LIP	1	1
13	<u>1011887</u>	COVER, DUST	1	1
14	0008754	NUT, NYLON LOCK, 3/8 - 16	4	4
15	<u>1016387</u>	SCREW, HEX HEAD CAP, 3/8 - 16 x 2 3/4	2	2
16	<u>1016384</u>	CLEVIS, UPPER DELTA	2	2
17	0001308	NUT, HEX, 1/2 - 20	2	2
18	0000209	WASHER, SPLIT LOCK, 1/2	2	2
19	<u>1010150</u>	BEARING, THRUST	2	2
20	<u>1016389</u>	WASHER, KINGPIN WAVE	2	2
21	<u>1010984</u>	NUT, LUG	8	8
22	<u>1010005</u>	WASHER, FLAT, 3/4	2	2
23	0007840	NUT, HEX SLOTTED, 3/4 - 16	2	2
24	0007910	PIN, COTTER, 5/32 x 1	2	2
25	0008755	SCREW, HEX HEAD CAP, 3/8 - 16 x 3 3/8	2	2
26	<u>1016386</u>	KINGPIN	2	2
27	<u>1015583</u>	BUSHING, URETHANE	4	4
28	<u>1012303</u>	BUSHING, STEEL	2	2
29	<u>1014276</u>	PLATE, FRONT SPRING RETAINER	1	1
30	<u>1010177</u>	SCREW, HEX HEAD CAP, 3/8 - 16 x 2	4	4
31	0000357	WASHER, LOCK, 3/8	4	4
32	0000706	NUT, HEX, 3/8 - 16	4	4


REAR SUSPENSION

5

G

E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
		BEFORE ORDERING FROM THIS PAGE, SEE NOTE ON PAGE ii AT THE BEGINNING OF THIS MANUAL.		
1	<u>1012304</u>	SHACKLE, REAR SPRING (GASOLINE VEHICLE ONLY)	4	
1	0007569	SHACKLE, REAR SPRING (ELECTRIC VEHICLE ONLY)		4
2	0008754	NUT, NYLON LOCK, 3/8 - 16	6	6
3	<u>1012303</u>	BUSHING, STEEL	6	6
4	<u>1015583</u>	BUSHING, URETHANE	12	12
5	<u>1010145</u>	NUT, UNF HEX, 3/8 - 24	4	4
6	<u>1013164</u>	KIT, SHOCK ABSORBER (INCLUDES ITEMS 7, 9 AND 10)	1	1
7	<u>1014236</u>	SHOCK ABSORBER, REAR	2	2
8	<u>1011415</u>	KIT, SHOCK ABSORBER CUSHION (INCLUDES ITEMS 9 AND 10)	4	4
9	N/A	RETAINER, SHOCK ABSORBER CUSHION	8	8
10	N/A	CUSHION, SHOCK ABSORBER	8	8
11	<u>1014902</u>	BOLT, "U"	2	2
12	<u>1014675</u>	SPRING, REAR LEAF	2	2
13	<u>1014557</u>	WASHER, FLAT, 7/16	4	4
14	<u>1014555</u>	NUT, NYLON LOCK, 7/16 - 24	4	4
15	0008755	SCREW, HEX HEAD CAP, 3/8 - 16 x 3 3/8	6	6
16	1012182	BRACKET, SHOCK MOUNT, LEFT	1	1
16	1012181	BRACKET, SHOCK MOUNT, RIGHT	1	1
17	<u>1013207</u>	HANGER, BRAKE CABLE	2	2
18	1014573	RETAINER, SPRING	2	2
19	<u>1017235</u>	BUMPER, JOUNCE	2	2
20	1014546-02	MOUNT, BUMPER (GASOLINE VEHICLE ONLY)	2	
20	<u>1014549-02</u>	MOUNT, BUMPER (ELECTRIC VEHICLE ONLY)		2
21	<u>1014901</u>	SPACER, OVERLOAD BUMPER	2	2

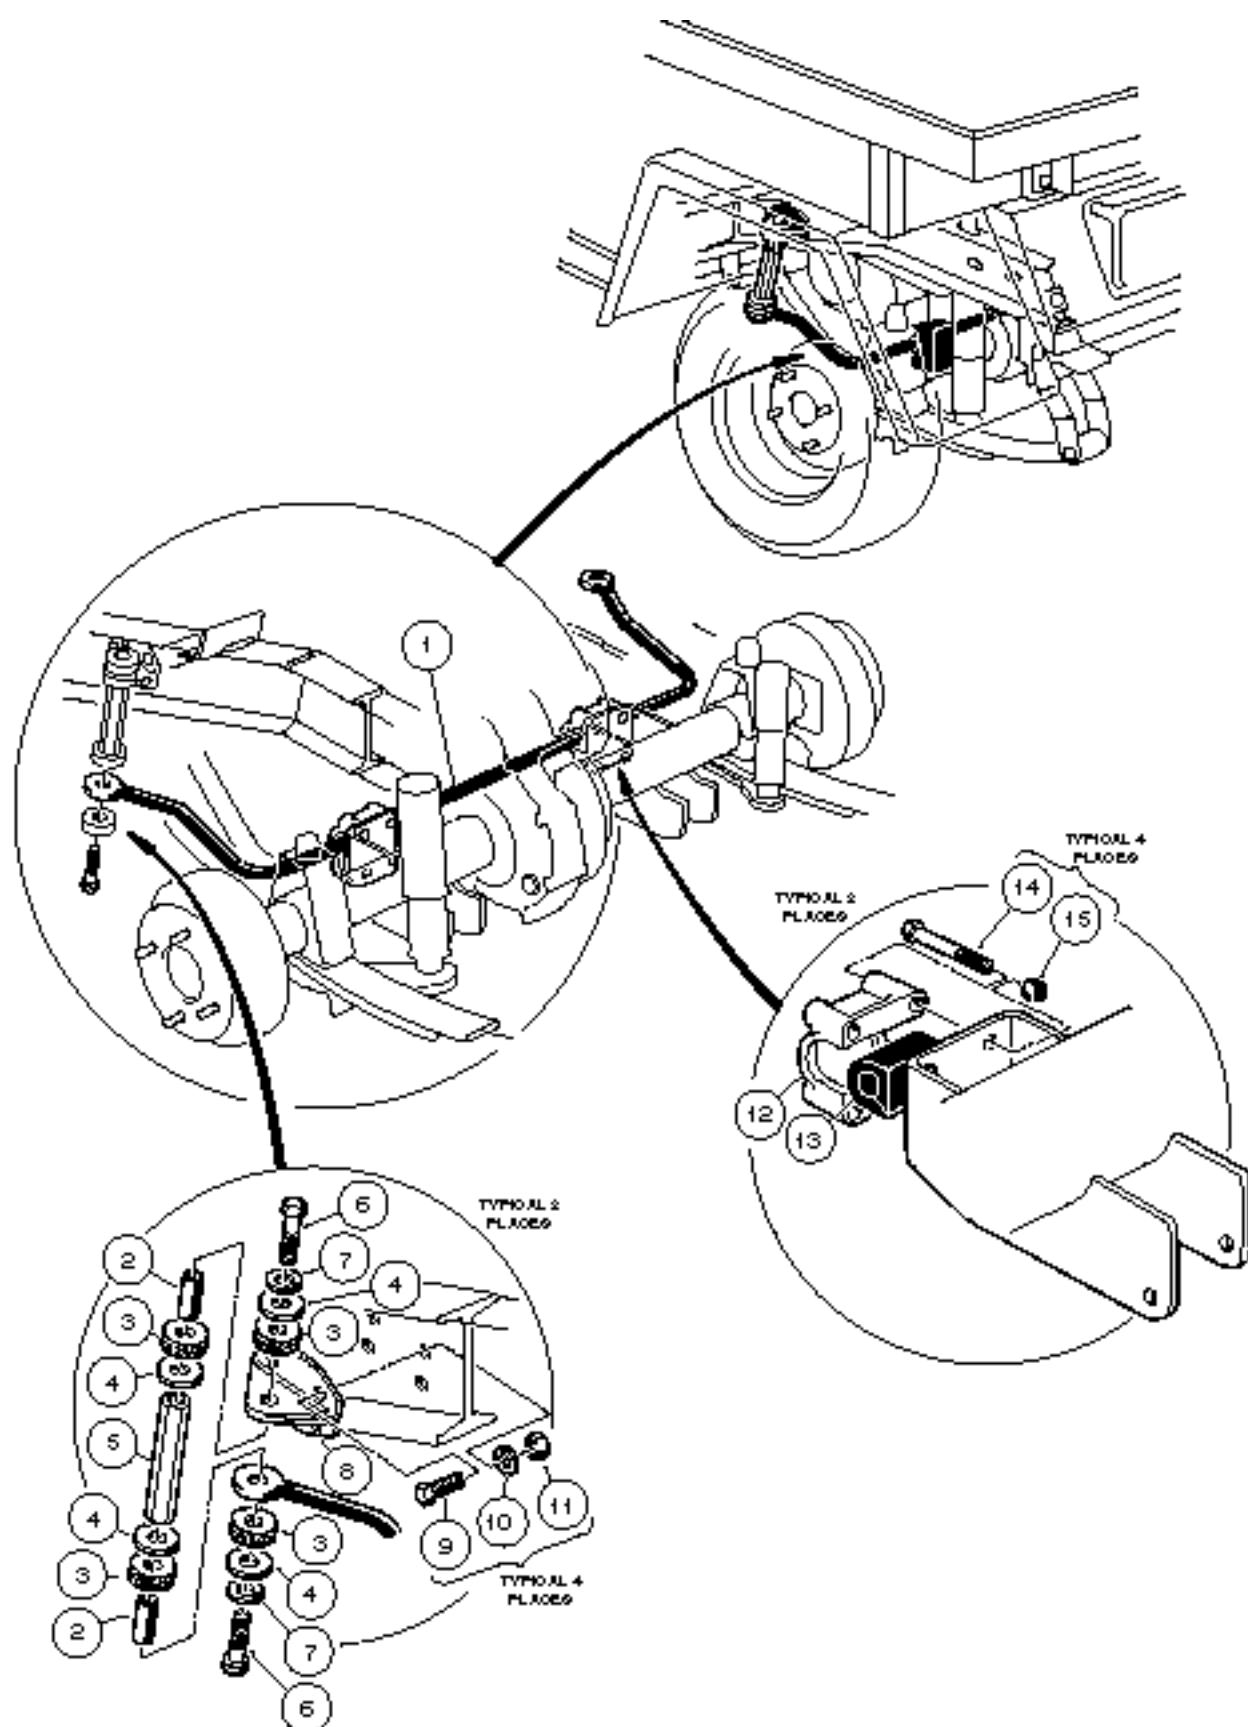

STABILIZER BAR, GASOLINE VEHICLE CARRYALL II, II PLUS AND VI

5

G


E

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4 BEFORE ORDERING FROM THIS PAGE, SEE NOTE ON PAGE <i>ii</i> AT THE BEGINNING OF THIS MANUAL.		
1	<u>1015760</u>	BAR, STABILIZER, 3/4 DIAMETER	1	
2	<u>1015457</u>	SPACER	4	
3	<u>1015453</u>	MOUNT, COMPRESSION	8	
4	0000808	WASHER, FLAT, 3/8	8	
5	<u>1016814</u>	LINK, STABILIZER BAR	2	
6	0008861	SCREW, HEX HEAD CAP, 3/8 - 16 x 1 3/4	4	
7	0000357	WASHER, LOCK, 3/8	4	
8	<u>1016813</u>	BRACKET, STABILIZER BAR MOUNTING	2	
9	0007173	SCREW, HEX HEAD CAP, 5/16 - 18 x 3/4	8	
10	0007174	WASHER, LOCK, 3/8	8	
11	0001242	NUT, HEX, 5/16 - 18	8	
12	<u>1015614</u>	SUPPORT, STABILIZER BAR BUSHING	2	
13	<u>1015613</u>	BUSHING, STABILIZER BAR	2	
14	0007311	SCREW, HEX HEAD CAP, 1/4 - 20 x 2	8	
15	0008233	NUT, NYLON LOCK, 1/4 - 20	8	

ELECTRICAL SYSTEM GASOLINE VEHICLE

6

G

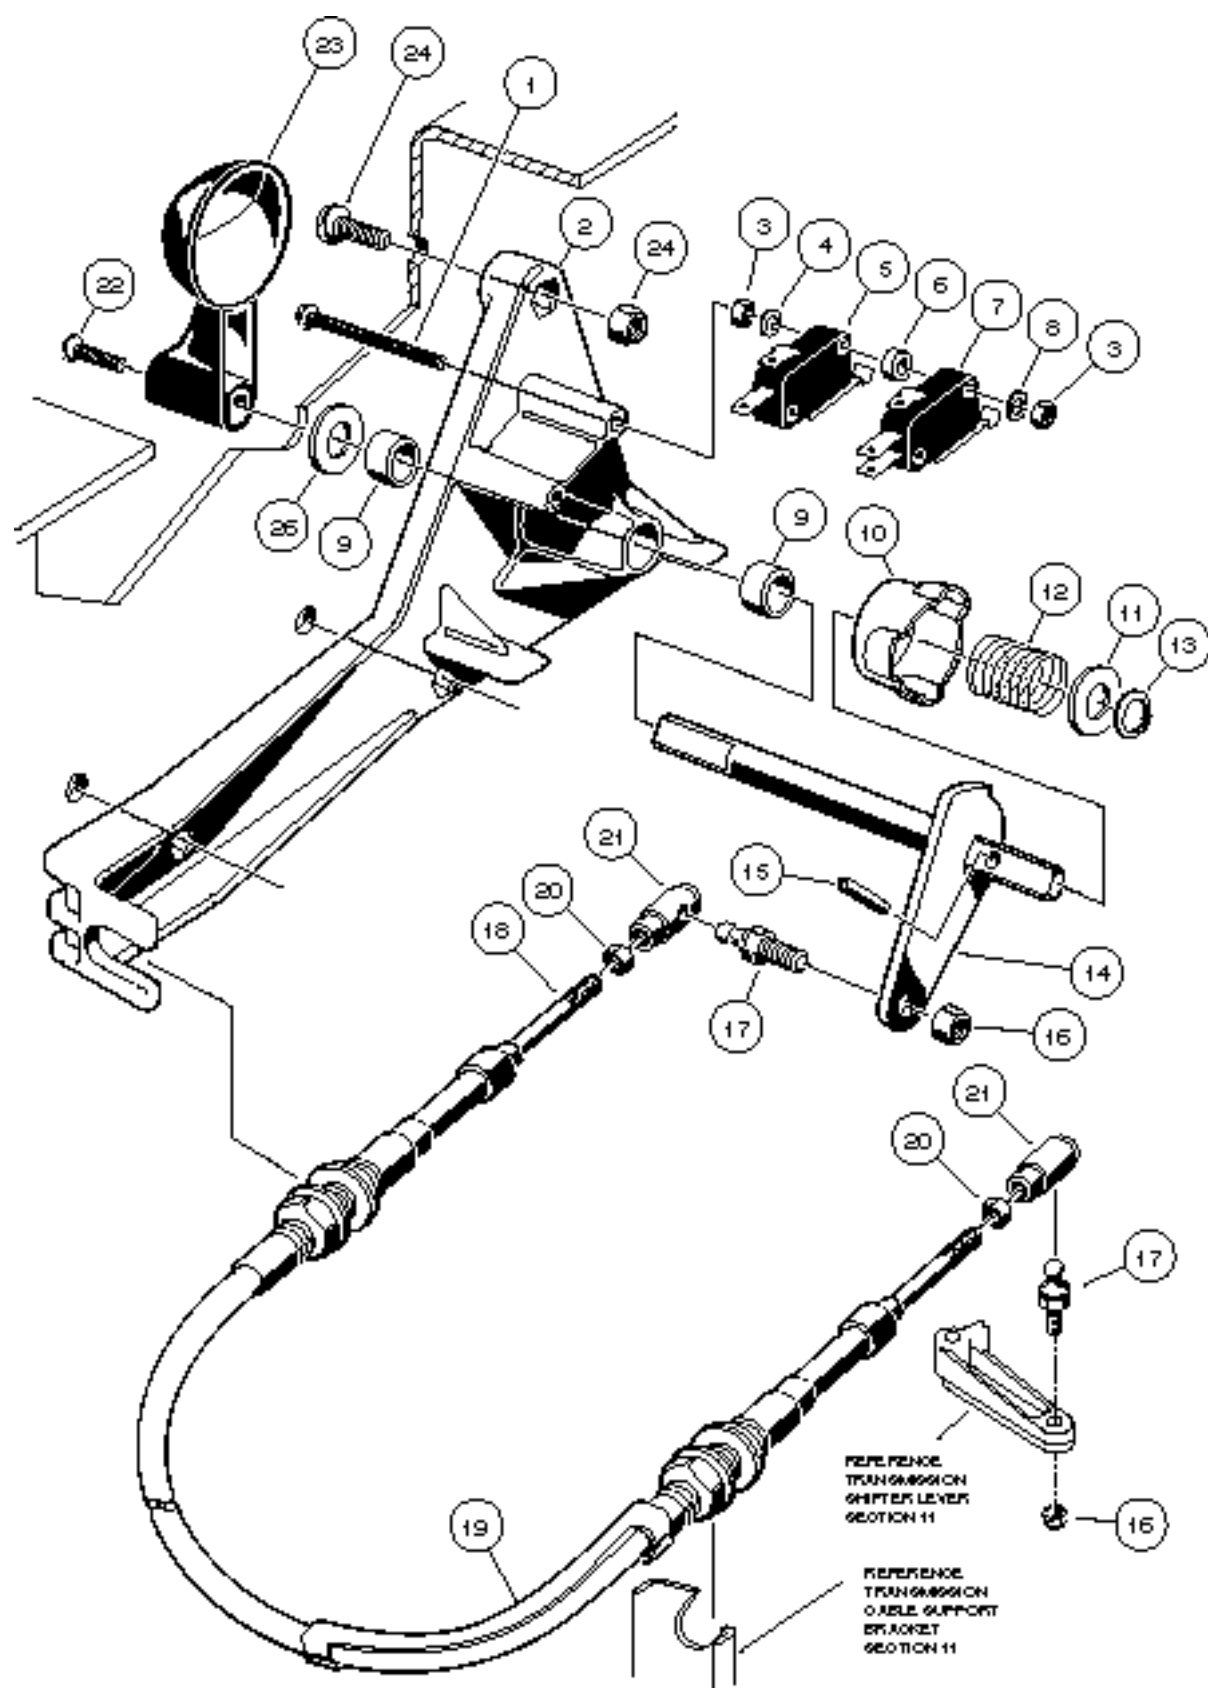


FORWARD AND REVERSE SHIFTER ASSEMBLY GASOLINE VEHICLE

6

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	1016947	ASSEMBLY, FORWARD AND REVERSE SHIFTER (INCLUDES ITEMS 1 - 17)	1
1	<u>1012594</u>	SCREW, MACHINE, #4 - 40 x 1 1/2	2
2	<u>1016342</u>	BASE, FORWARD AND REVERSE SHIFTER	1
3	0008057	NUT, HEX HEAD, #4 - 40	4
4	1012431	WASHER, FLAT, #4	2
5	<u>1014808</u>	SWITCH, LIMIT	1
6	<u>1014727</u>	WASHER, NYLON FLAT, #4	2
7	<u>1014807</u>	SWITCH, LIMIT	1
8	0008058	WASHER, LOCK, #4	2
9	<u>1014145</u>	BUSHING, BRONZE	2
10	1014089	KIT, NEUTRAL LOCK-OUT CAM (INCLUDES ITEM 11)	1
11	<u>1014065</u>	WASHER, FLAT	1
12	<u>1013590</u>	SPRING, FORWARD AND REVERSE CAM	1
13	<u>1013589</u>	RING, RETAINING	1
14	1013587	WELDMENT, FORWARD AND REVERSE BELL CRANK	1
15	<u>1013591</u>	PIN, ROLL, 1/8	1
16	0008717	NUT, NYLON LOCK, 1/4 - 28	2
17	<u>1010954</u>	STUD, BALL, 1/4 - 28 x 1/4	2
18	<u>1013085</u>	CABLE, TRANSMISSION (INCLUDES ITEMS 19 - 21) (CARRYALL I ONLY)	1
18	1015409-01	CABLE, TRANSMISSION (INCLUDES ITEMS 19 - 21) (CARRYALL II AND II PLUS)	1
18	<u>1016727-01</u>	CABLE, TRANSMISSION (INCLUDES ITEMS 19 - 21) (CARRYALL VI ONLY)	1
19	<u>1019319-01</u>	BRACE, SHIFTER CABLE	1
20	0007893	NUT, HEX, #10 - 32	2
21	<u>1012333</u>	JOINT, BALL	2
22	<u>1013198</u>	SCREW, PHILLIPS OVAL COUNTERSUNK MACHINE, #8 - 32 x 5/8	1
23	<u>1012987</u>	HANDLE, FORWARD AND REVERSE SHIFTER	1
24	0008248	SCREW, PHILLIPS TRUSS HEAD, 1/4 - 20 x 3/4	4
25	0008233	NUT, NYLON LOCK, 1/4 - 20	4
26	<u>1016201</u>	WASHER, WAVE.....	1

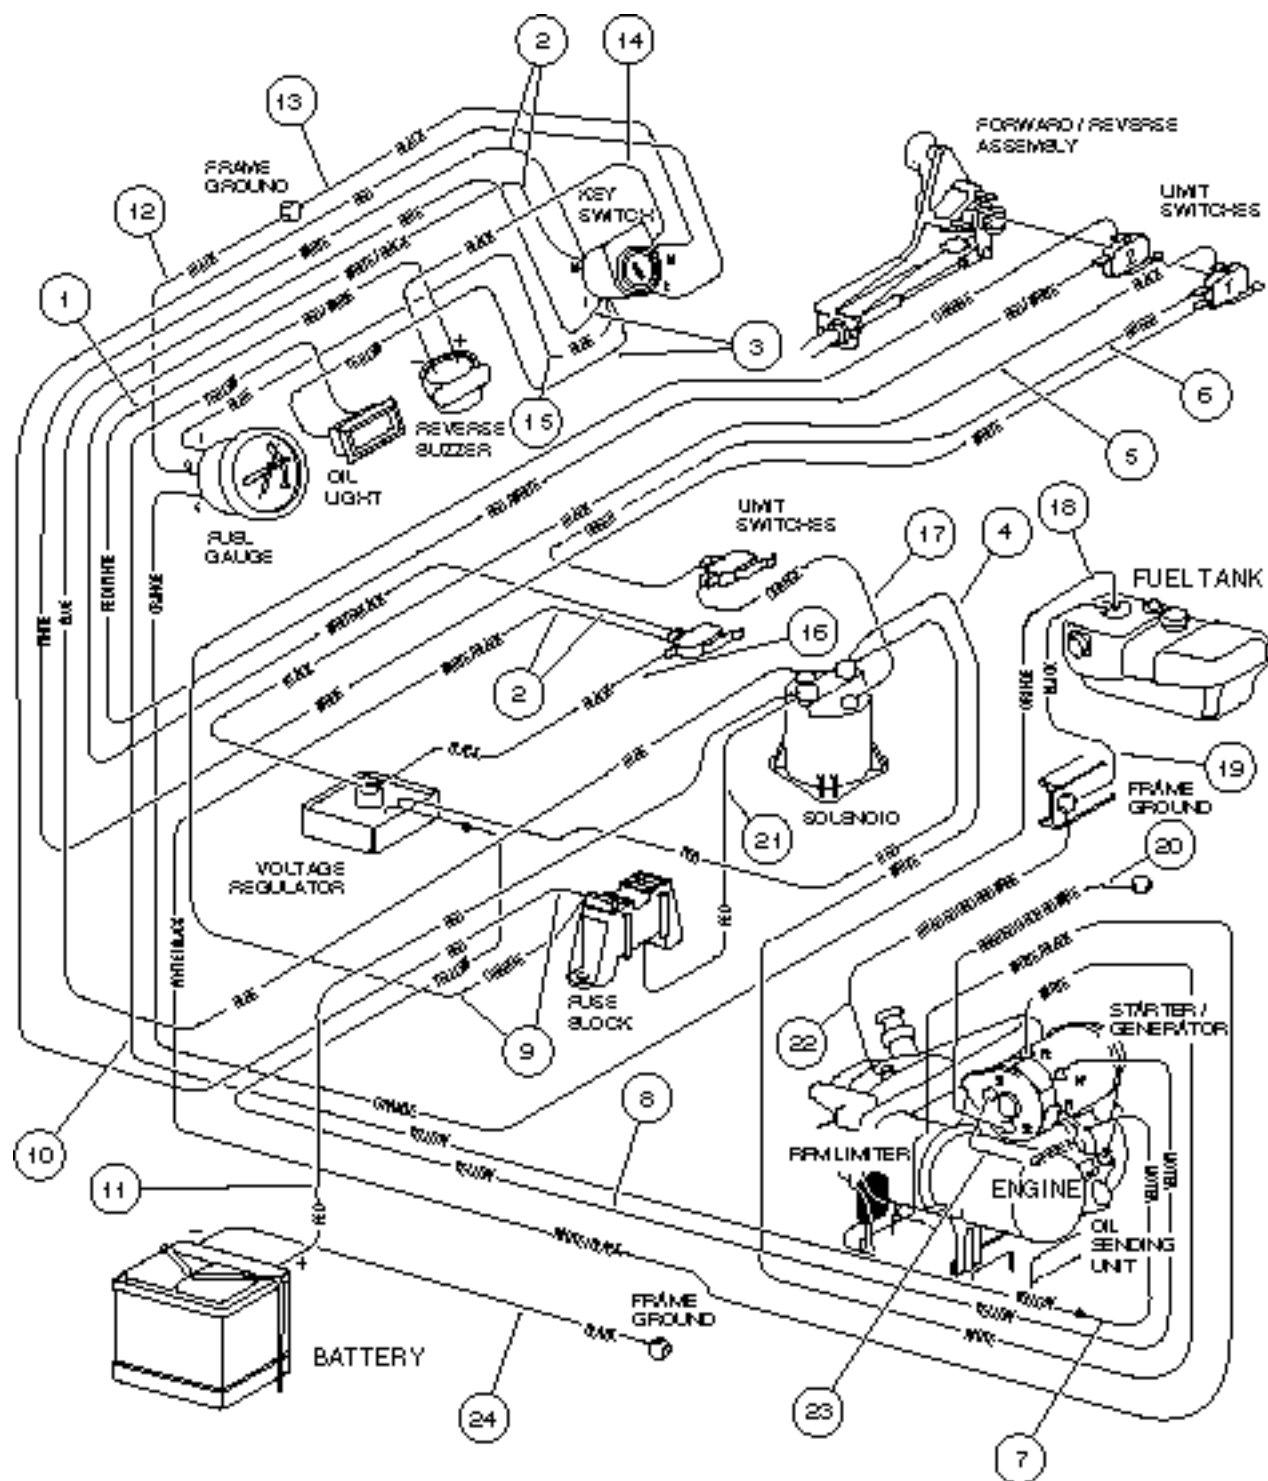


WIRING, GASOLINE VEHICLE - CARRYALL I

6

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	1018893-02	WIRE HARNESS ASSEMBLY (INCLUDES ITEMS 1 - 10)	1
1	1013723	WIRE ASSEMBLY, #18 RED/WHITE	1
2	<u>1015781</u>	WIRE ASSEMBLY, #18 WHITE, #18 WHITE/BLACK	1
3	1013601	WIRE ASSEMBLY, #18 YELLOW, #16 BLUE	1
4	<u>1015769</u>	WIRE ASSEMBLY, #6 WHITE	1
5	1015780	WIRE ASSEMBLY, #18 BLACK	1
6	1015779	WIRE ASSEMBLY, #18 GREEN	1
7	1018850-01	WIRE ASSEMBLY, #18 YELLOW	1
8	1015738	WIRE ASSEMBLY, #16 YELLOW	1
9	1018282-01	WIRE ASSEMBLY, #16 RED, #16 ORANGE	1
10	1018930-01	WIRE ASSEMBLY, #18 YELLOW	1
11	<u>1014119</u>	WIRE ASSEMBLY, #6 RED (PART OF ELECTRICAL COMPONENT BOX)	1
12	1013469	WIRE ASSEMBLY, #18 BLACK	1
13	1012396	WIRE ASSEMBLY, #18 BLACK	1
14	1016857	WIRE ASSEMBLY, #18 BLACK (PART OF REVERSE BUZZER KIT)	1
15	1013463	WIRE ASSEMBLY, #18 BLUE	1
16	1016402	WIRE ASSEMBLY, #18 BLACK (PART OF ELECTRICAL COMPONENT BOX)	1
17	1016401	WIRE ASSEMBLY, #18 ORANGE (PART OF ELECTRICAL COMPONENT BOX)	1
18	<u>1015035</u>	WIRE ASSEMBLY, #18 ORANGE	1
19	1015921	WIRE ASSEMBLY, #18 BLACK	1
20	<u>1015920</u>	WIRE ASSEMBLY, #6 BRAIDED GROUND	1
21	<u>1015737</u>	WIRE ASSEMBLY, #10 RED (PART OF ELECTRICAL COMPONENT BOX)	1
22	<u>1015332</u>	WIRE ASSEMBLY, #10 BRAIDED GROUND	1
23	<u>1018373-01</u>	WIRE ASSEMBLY, #6 GREEN	1
24	<u>1012382</u>	WIRE ASSEMBLY, #6 BLACK	1

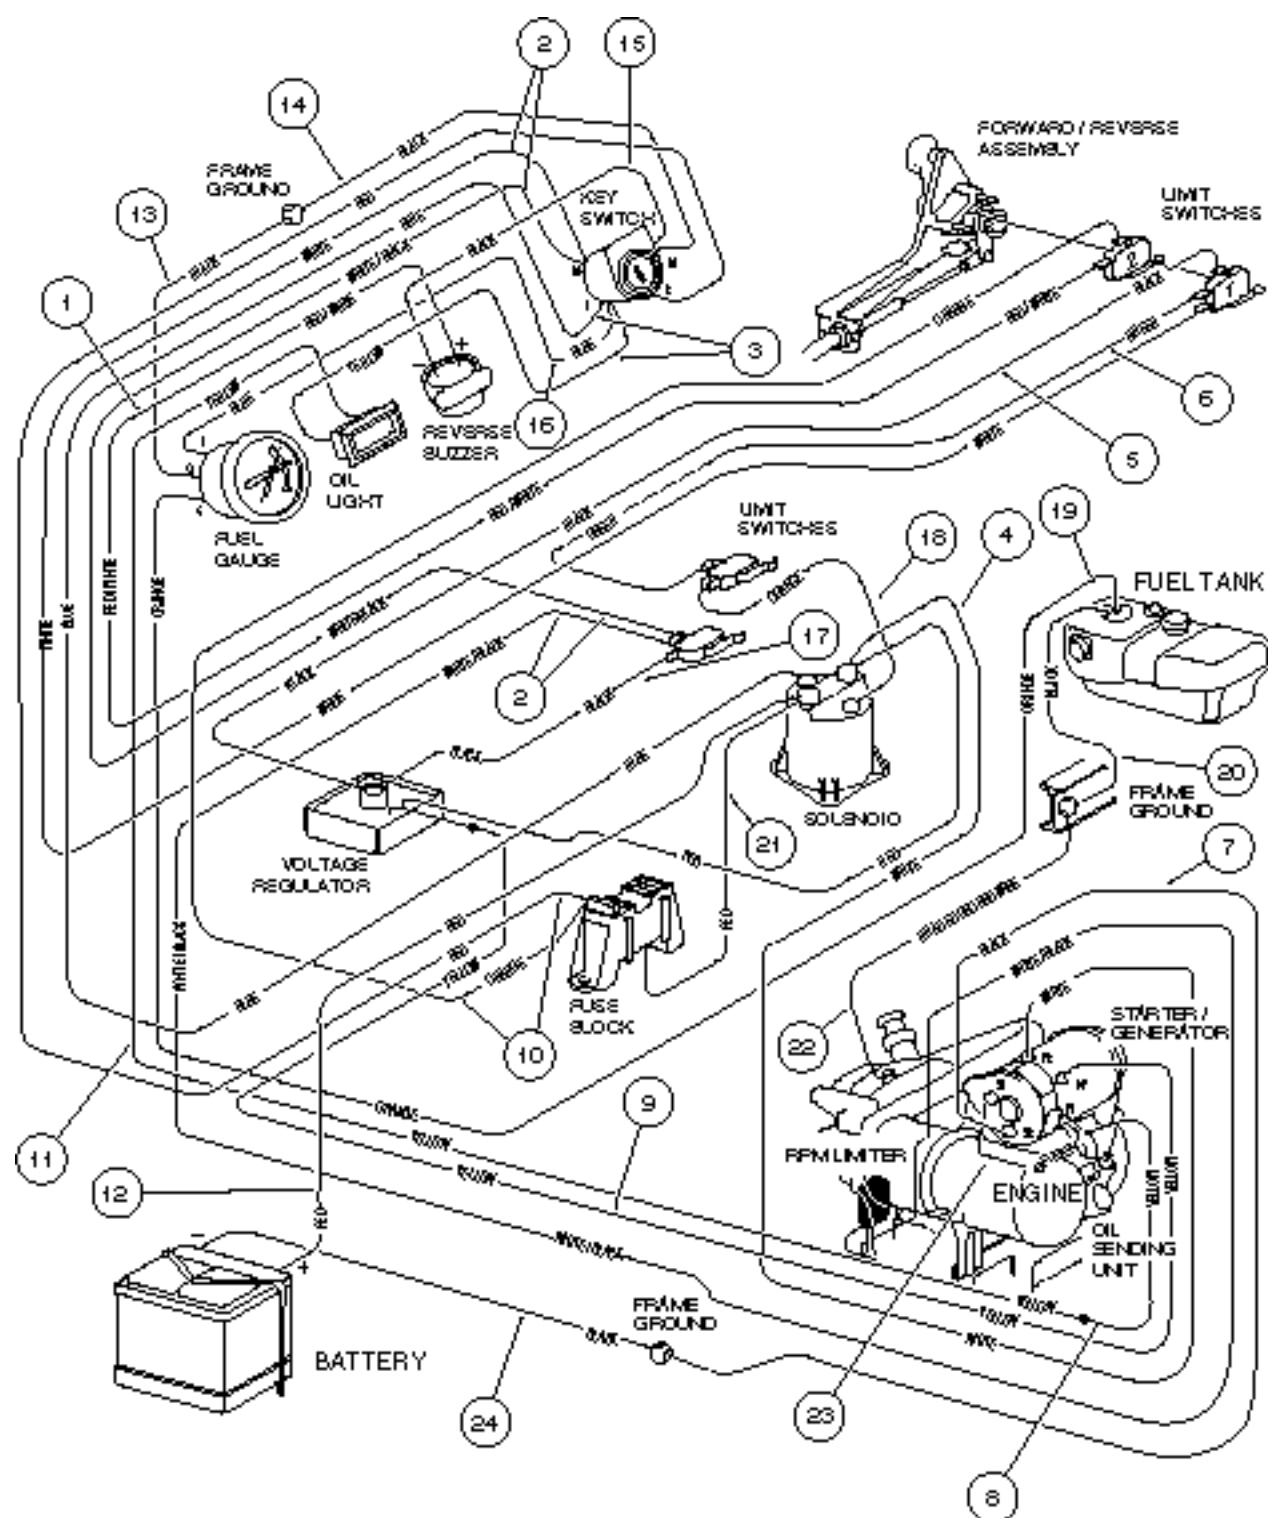


WIRING, GASOLINE VEHICLE - CARRYALL II

6

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>1016299-02</u>	WIRE HARNESS ASSEMBLY (INCLUDES ITEMS 1 - 11)	1
1	1016404	WIRE ASSEMBLY, #16 RED/WHITE	1
2	1016292	WIRE ASSEMBLY, #18 WHITE, #18 WHITE/BLACK	1
3	1016295	WIRE ASSEMBLY, #18 YELLOW, #16 BLUE	1
4	<u>1015769</u>	WIRE ASSEMBLY, #6 WHITE	1
5	1016297	WIRE ASSEMBLY, #16 BLACK	1
6	1016298	WIRE ASSEMBLY, #16 GREEN	1
7	<u>1016380</u>	WIRE ASSEMBLY, #6 BLACK	1
8	1018850-01	WIRE ASSEMBLY, #18 YELLOW	1
9	1015738	WIRE ASSEMBLY, #16 YELLOW	1
10	1018282-02	WIRE ASSEMBLY, #16 RED, #16 ORANGE	1
11	1016294	WIRE ASSEMBLY, #16 YELLOW	1
12	<u>1014119</u>	WIRE ASSEMBLY, #6 RED (PART OF ELECTRICAL COMPONENT BOX)	1
13	1013469	WIRE ASSEMBLY, #18 BLACK	1
14	1012396	WIRE ASSEMBLY, #18 BLACK	1
15	1016857	WIRE ASSEMBLY, #18 BLACK (PART OF REVERSE BUZZER KIT)	1
16	1013463	WIRE ASSEMBLY, #18 BLUE	1
17	1016402	WIRE ASSEMBLY, #18 BLACK (PART OF ELECTRICAL COMPONENT BOX)	1
18	1016401	WIRE ASSEMBLY, #18 ORANGE (PART OF ELECTRICAL COMPONENT BOX)	1
19	<u>1015035</u>	WIRE ASSEMBLY, #18 ORANGE	1
20	1015921	WIRE ASSEMBLY, #18 BLACK	1
21	<u>1015737</u>	WIRE ASSEMBLY, #10 RED (PART OF ELECTRICAL COMPONENT BOX)	1
22	<u>1015332</u>	WIRE ASSEMBLY, #10 BRAIDED GROUND	1
23	<u>1018373-01</u>	WIRE ASSEMBLY, #6 GREEN	1
24	<u>1012382</u>	WIRE ASSEMBLY, #6 BLACK	1

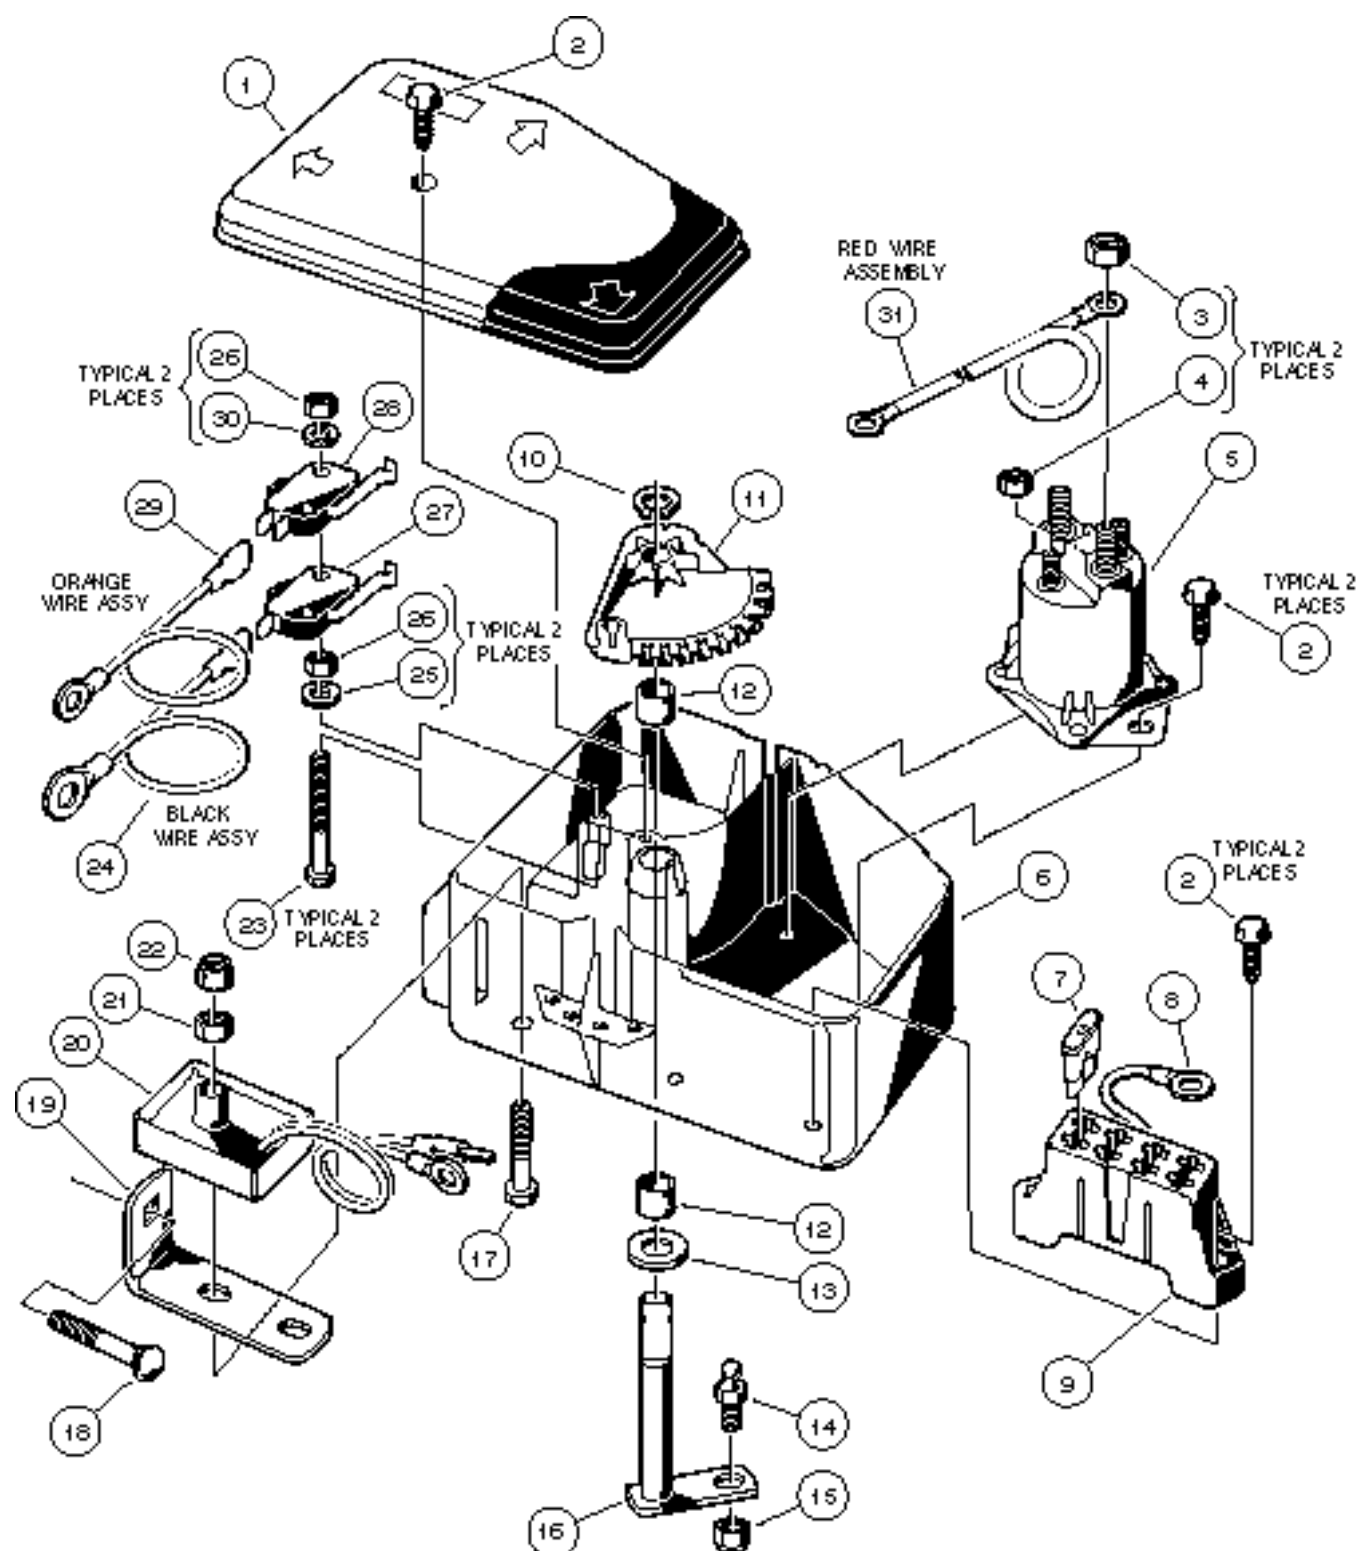


ELECTRICAL COMPONENT BOX, GASOLINE VEHICLE CARRYALL I AND CARRYALL II

6

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>1018276-01</u>	BOX, ELECTRICAL COMPONENT, COMPLETE (INCLUDES ITEMS 1 - 31 AND 1018893-02 - SEE PAGE 6-5) (CARRYALL I ONLY)	1
	<u>1018276-02</u>	BOX, ELECTRICAL COMPONENT, COMPLETE (INCLUDES ITEMS 1 - 31 AND 1016299-02 - SEE PAGE 6-7) (CARRYALL II ONLY)	1
1	<u>1015372</u>	COVER, ELECTRICAL COMPONENT BOX	1
2	<u>1015752</u>	SCREW, HILO, #12 - 16 x 5/8	5
3	0001242	NUT, HEX, 5/16 - 18	2
4	0007893	NUT, HEX, #10 - 32	2
5	<u>1013609</u>	SOLENOID, 12 VOLT	1
6	<u>1015371</u>	BOX, ELECTRICAL COMPONENT	1
7	<u>1012295</u>	FUSE, 10 AMP	1
8	<u>1015737</u>	WIRE ASSEMBLY, #10 RED	1
9	<u>1015741</u>	BLOCK, FUSE	1
10	<u>1013589</u>	RING, RETAINING	1
11	<u>1015373</u>	CAM, ELECTRICAL BOX	1
12	<u>1014145</u>	BUSHING, BRONZE	2
13	<u>1014065</u>	WASHER, FLAT	1
14	<u>1010954</u>	STUD, BALL, 1/4 - 28	1
15	0008717	NUT, NYLON LOCK, 1/4 - 28	1
16	<u>1018213-01</u>	ASSEMBLY, BELL CRANK SHAFT (CARRYALL I ONLY)	1
16	1015345	ASSEMBLY, BELL CRANK SHAFT (CARRYALL II ONLY)	1
17	<u>1013509</u>	SCREW, HEX HEAD CAP, 1/4 - 20 x 1 3/4	1
18	<u>1015405</u>	BOLT, CARRIAGE, 5/16 - 18 x 2	1
19	1015343	STRAP, GROUND	1
20	<u>1015777</u>	ASSEMBLY, VOLTAGE REGULATOR	1
21	<u>1015919</u>	NUT, HEX JAM, 1/4 - 20	1
22	0008233	NUT, NYLON LOCK, 1/4 - 20	1
23	<u>1015878</u>	SCREW, HEX HEAD MACHINE, #4 - 40 x 1 5/8	2
24	1016402	WIRE ASSEMBLY, #16 BLACK	1
25	1012431	WASHER, FLAT, #4	2
26	0008057	NUT, HEX, #4 - 40	4
27	<u>1014808</u>	SWITCH, LIMIT	1
28	<u>1014807</u>	SWITCH, LIMIT	1
29	1016401	WIRE ASSEMBLY, #16 ORANGE	1
30	0008058	WASHER, LOCK, #4	2
31	<u>1014119</u>	WIRE ASSEMBLY, #6 RED	1

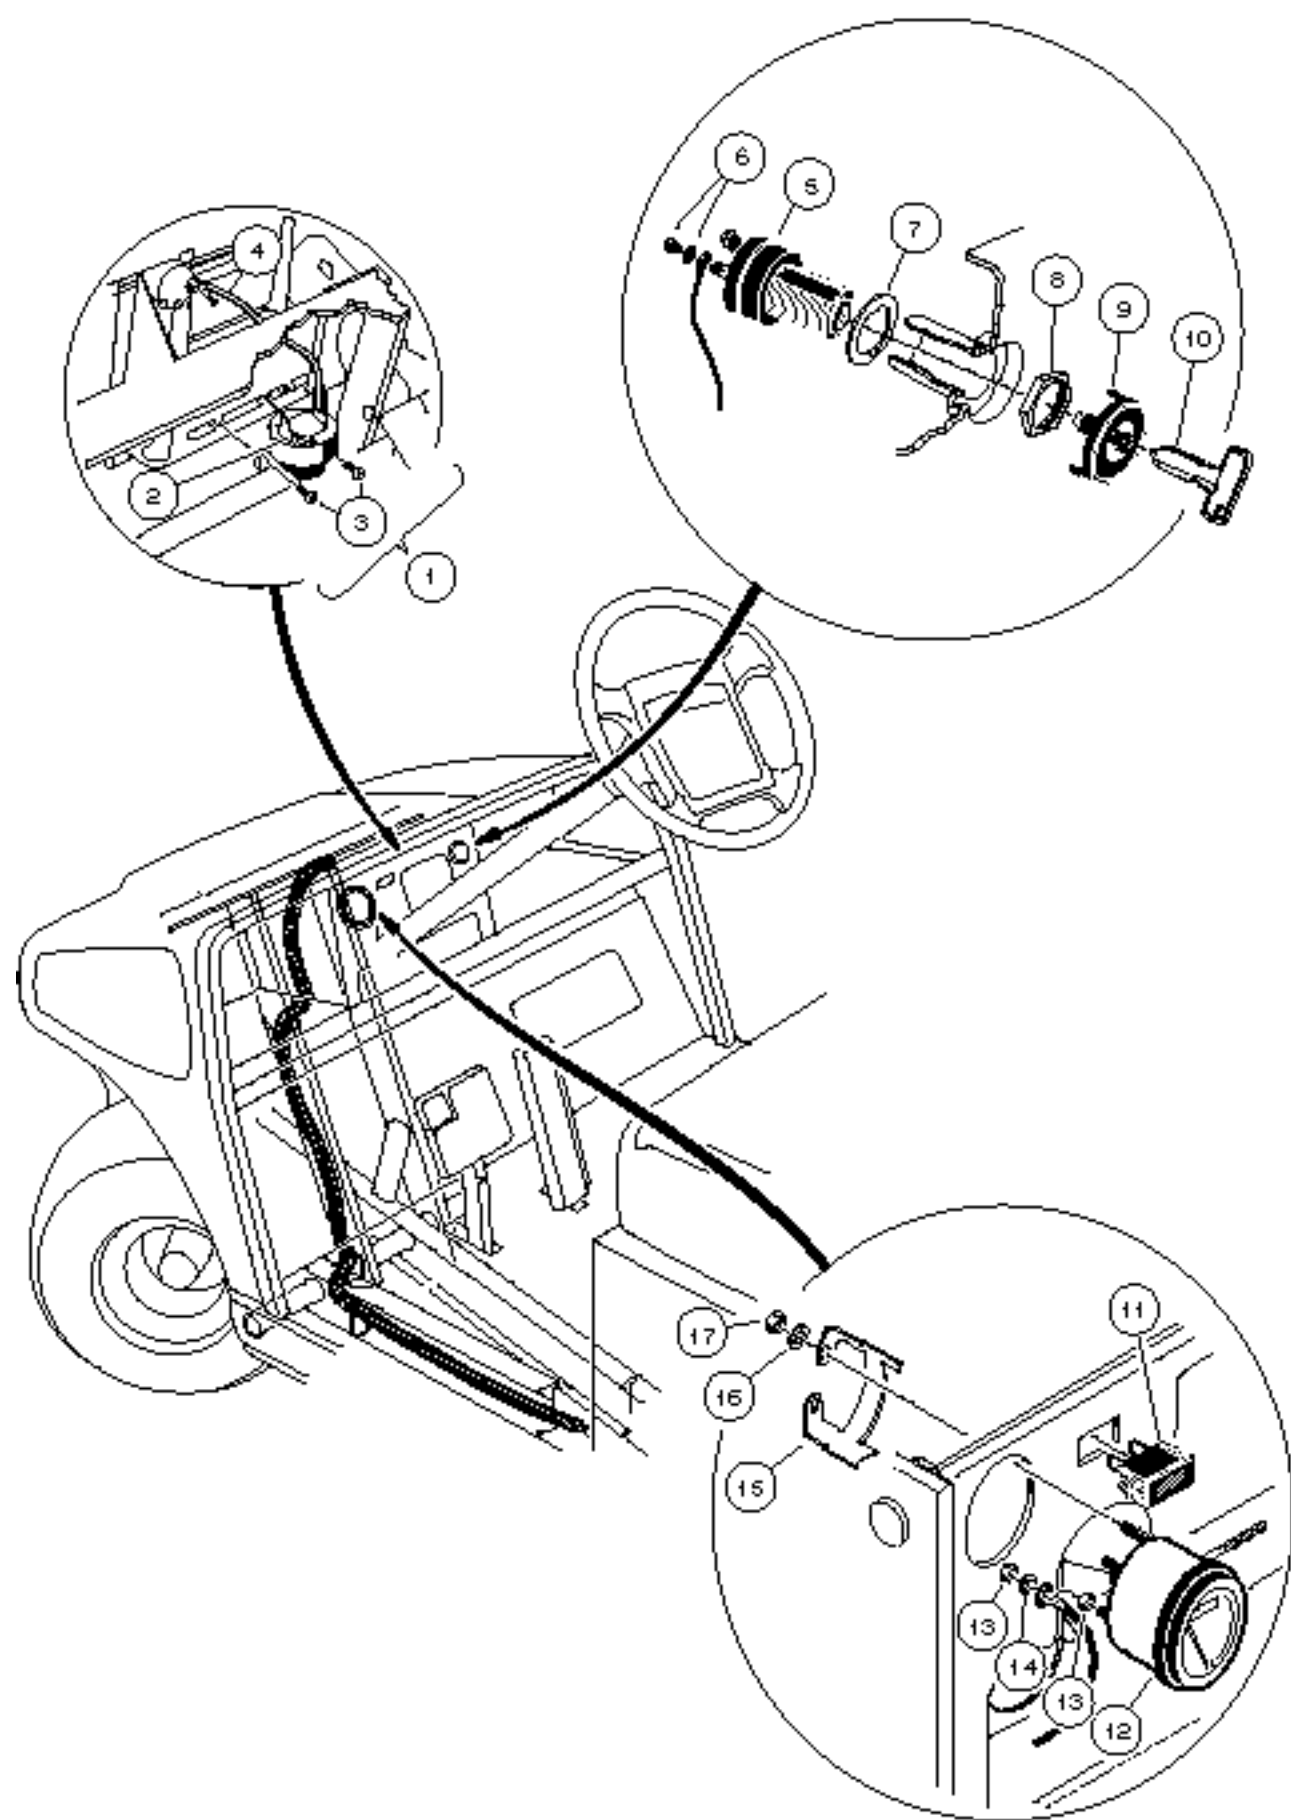

ELECTRICAL COMPONENTS

GASOLINE VEHICLE - CARRYALL I, II AND II PLUS

6

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016859</u>	KIT, REVERSE BUZZER (INCLUDES ITEMS 2, 3 AND 4)	1
2	<u>1016851</u>	BUZZER, REVERSE	1
3	<u>1016849</u>	SCREW, PAN HEAD HI-LO, #4 - 24 x 5/16	2
4	<u>1016857</u>	WIRE ASSEMBLY, #18 BLACK	1
5	<u>1018263-01</u>	SWITCH, KEY (CARRYALL I AND II)	1
5	<u>1018264-01</u>	SWITCH, KEY (CARRYALL II PLUS ONLY)	1
6	<u>1018306-01</u>	ASSEMBLY, SCREW AND WASHER (QUANTITY OF 5 FOR CARRYALL II PLUS)	4
7	<u>1018511-01</u>	WASHER	1
8	<u>1018307-01</u>	NUT, KEY SWITCH	1
9	<u>1018345-02</u>	CAP, KEY SWITCH	1
10	<u>1012505</u>	KEY (PAIR)	1
11	<u>1016630</u>	LIGHT, OIL WARNING (WITH INTERNAL RESISTOR)	1
12	<u>1015103</u>	GAUGE, FUEL (INCLUDES ITEMS 13 AND 14)	1
13	N/A	NUT, BRASS	6
14	N/A	WASHER, EXTERNAL TOOTH LOCK	3
15	<u>1015104</u>	BRACKET, FUEL GAUGE	1
16	<u>1011610</u>	WASHER, LOCK, #8	2
17	<u>1011571</u>	NUT, HEX, #8 - 32	2




WIRING, GASOLINE VEHICLE CARRYALL II PLUS

6

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4 BEFORE ORDERING FROM THIS PAGE, SEE NOTE ON PAGE ii AT THE BEGINNING OF THIS MANUAL.	
	1016895-02	WIRE HARNESS ASSEMBLY, CARRYALL II PLUS (INCLUDES ITEMS 1 - 12)	1
1	1016404	WIRE ASSEMBLY, #16 RED/WHITE	1
2	1017309	WIRE ASSEMBLY, #18 ORANGE/WHITE	1
3	1017007	WIRE ASSEMBLY, #18 YELLOW/#18 GREEN	1
4	1017009	WIRE ASSEMBLY, #18 RED	1
5	1017008	WIRE ASSEMBLY, #18 BROWN	1
6	<u>1015769</u>	WIRE ASSEMBLY, #6 WHITE	1
7	1017011	WIRE ASSEMBLY, #18 WHITE/BLACK	1
8	<u>1016380</u>	WIRE ASSEMBLY, #6 BLACK	1
9	1016294	WIRE ASSEMBLY, #16 YELLOW	1
10	1015738	WIRE ASSEMBLY, #16 YELLOW	1
11	1018282-02	WIRE ASSEMBLY, #16 RED, #16 ORANGE	1
12	1018850-01	WIRE ASSEMBLY, #18 YELLOW	1
13	<u>1014119</u>	WIRE ASSEMBLY, #6 RED (PART OF ELECTRICAL COMPONENT BOX)	1
14	1013469	WIRE ASSEMBLY, #18 BLACK	1
15	1012396	WIRE ASSEMBLY, #18 BLACK	1
16	1016857	WIRE ASSEMBLY, #18 BLACK	1
17	1013463	WIRE ASSEMBLY, #18 BLUE	1
18	1017006	WIRE ASSEMBLY, #18 ORANGE (PART OF ELECTRICAL COMPONENT BOX)	1
19	<u>1015035</u>	WIRE ASSEMBLY, #18 ORANGE	1
20	1015921	WIRE ASSEMBLY, #18 BLACK	1
21	<u>1015332</u>	WIRE ASSEMBLY, #10 BRAIDED GROUND	1
22	<u>1018373-01</u>	WIRE ASSEMBLY, #6 GREEN	1
23	<u>1012382</u>	WIRE ASSEMBLY, #6 BLACK	1
24	<u>1015737</u>	WIRE ASSEMBLY, #10 RED (PART OF ELECTRICAL COMPONENT BOX)	1
25	1017010	WIRE ASSEMBLY, #18 WHITE (PART OF ELECTRICAL COMPONENT BOX)	1
26	1017005	WIRE ASSEMBLY, #18 BLACK (PART OF ELECTRICAL COMPONENT BOX)	1

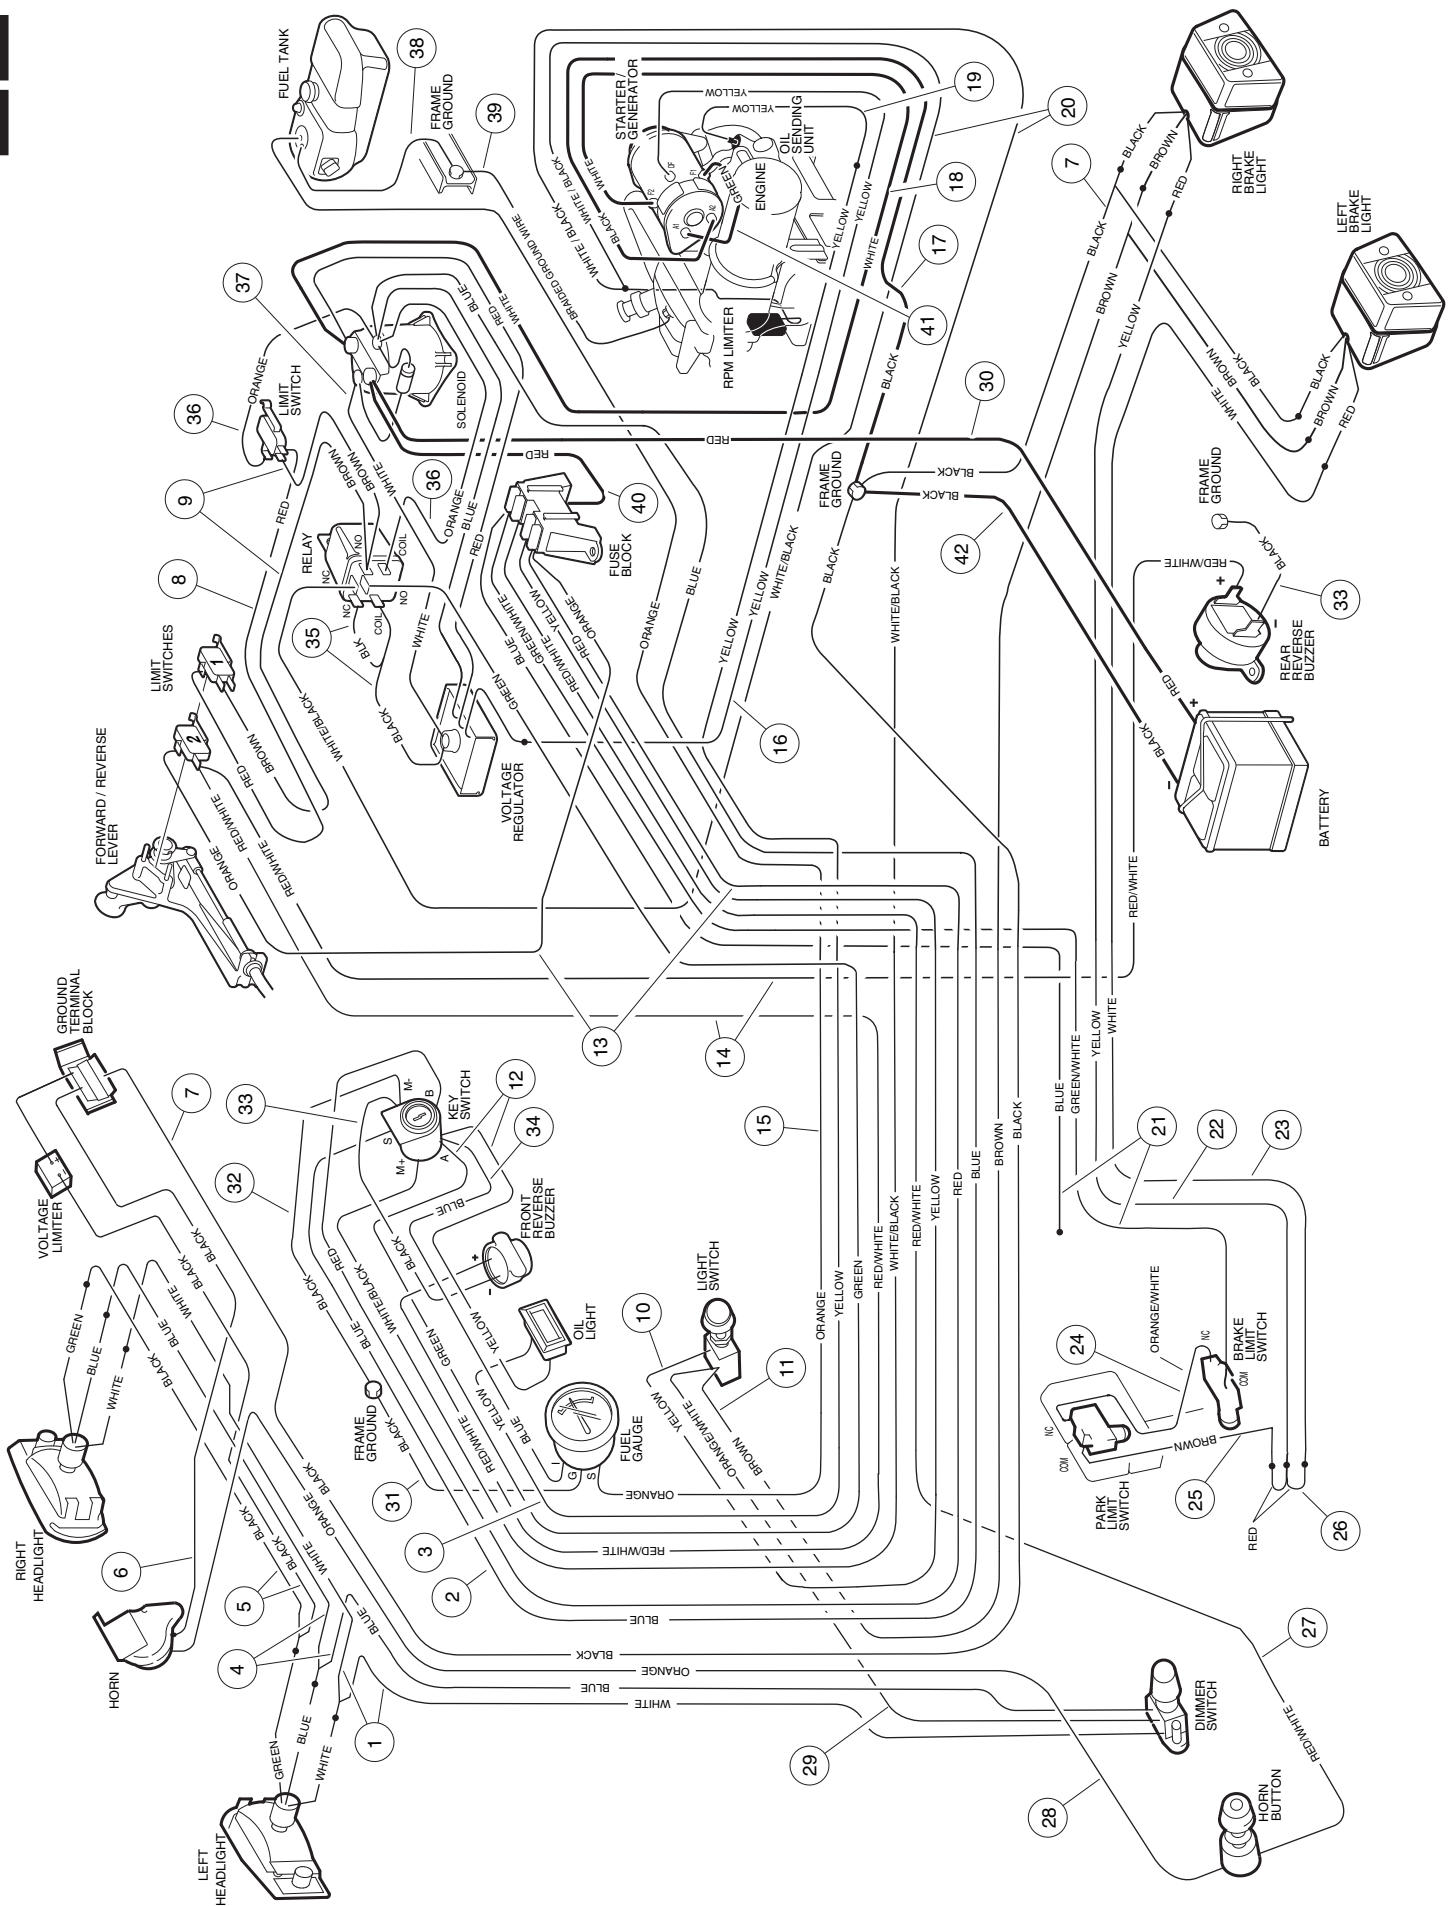


WIRING, GASOLINE VEHICLE CARRYALL VI

6

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
		BEFORE ORDERING FROM THIS PAGE, SEE NOTE ON PAGE ii AT THE BEGINNING OF THIS MANUAL.	
	<u>1017669-02</u>	HARNESS, WIRE (INCLUDES ITEMS 1 - 29)	1
1	1016323	WIRE ASSEMBLY, #16 WHITE	1
2	<u>1017679</u>	WIRE ASSEMBLY, #18 BLUE	1
3	1016763	WIRE ASSEMBLY, #18 YELLOW	1
4	1017052	WIRE ASSEMBLY, #18 BLUE	1
5	1016326	WIRE ASSEMBLY, #16 BLACK	1
6	1016308	WIRE ASSEMBLY, #16 BLACK	1
7	1016776	WIRE ASSEMBLY, #14 BLACK, #18 BLACK	1
8	1017681	WIRE ASSEMBLY, #18 RED	1
9	1017677	WIRE ASSEMBLY, #18 BROWN	1
10	1016770	WIRE ASSEMBLY, #14 YELLOW	1
11	1016775	WIRE ASSEMBLY, #18 BROWN	1
12	1017676	WIRE ASSEMBLY, #18 GREEN AND #18 YELLOW	1
13	1018282-03	WIRE ASSEMBLY, #16 RED AND #16 ORANGE	1
14	1016765	WIRE ASSEMBLY, #18 RED/WHITE	1
15	1016778	WIRE ASSEMBLY, #18 ORANGE	1
16	1015738	WIRE ASSEMBLY, #16 YELLOW	1
17	<u>1016380</u>	WIRE ASSEMBLY, # 6 BLACK	1
18	<u>1015769</u>	WIRE ASSEMBLY, # 6 WHITE	1
19	1018850-01	WIRE ASSEMBLY, #18 YELLOW	1
20	1017678	WIRE ASSEMBLY, #18 WHITE/BLACK	1
21	1016771	WIRE ASSEMBLY, #18 GREEN/WHITE AND #18 BLUE	1
22	1016774	WIRE ASSEMBLY, #18 YELLOW	1
23	1016773	WIRE ASSEMBLY, #18 WHITE	1
24	1016309	WIRE ASSEMBLY, #16 ORANGE/WHITE	1
25	1016314	WIRE ASSEMBLY, #16 BROWN	1
26	1016409	WIRE ASSEMBLY, #18 RED	1
27	1016772	WIRE ASSEMBLY, #16 RED/WHITE	1
28	1016307	WIRE ASSEMBLY, #16 ORANGE	1
29	1016315	WIRE ASSEMBLY, #16 ORANGE/WHITE	1
30	<u>1014119</u>	WIRE ASSEMBLY, #6 RED (PART OF ELECTRICAL COMPONENT BOX)	1
31	1013469	WIRE ASSEMBLY, #18 BLACK	1
32	1012396	WIRE ASSEMBLY, #18 BLACK	1
33	1016857	WIRE ASSEMBLY, #18 BLACK	2
34	1013463	WIRE ASSEMBLY, #18 BLUE	1
35	1017005	WIRE ASSEMBLY, #18 BLACK (PART OF ELECTRICAL COMPONENT BOX)	1
36	1017006	WIRE ASSEMBLY, #18 ORANGE (PART OF ELECTRICAL COMPONENT BOX)	1
37	1017010	WIRE ASSEMBLY, #18 WHITE (PART OF ELECTRICAL COMPONENT BOX)	1
38	1015921	WIRE ASSEMBLY, #18 BLACK	1
39	<u>1015332</u>	WIRE ASSEMBLY, #10 BRAIDED GROUND WIRE	1
40	<u>1015737</u>	WIRE ASSEMBLY, #10 RED (PART OF ELECTRICAL COMPONENT BOX)	1
41	<u>1018373-01</u>	WIRE ASSEMBLY, #6 GREEN	1
42	<u>1012382</u>	WIRE ASSEMBLY, #6 BLACK	1

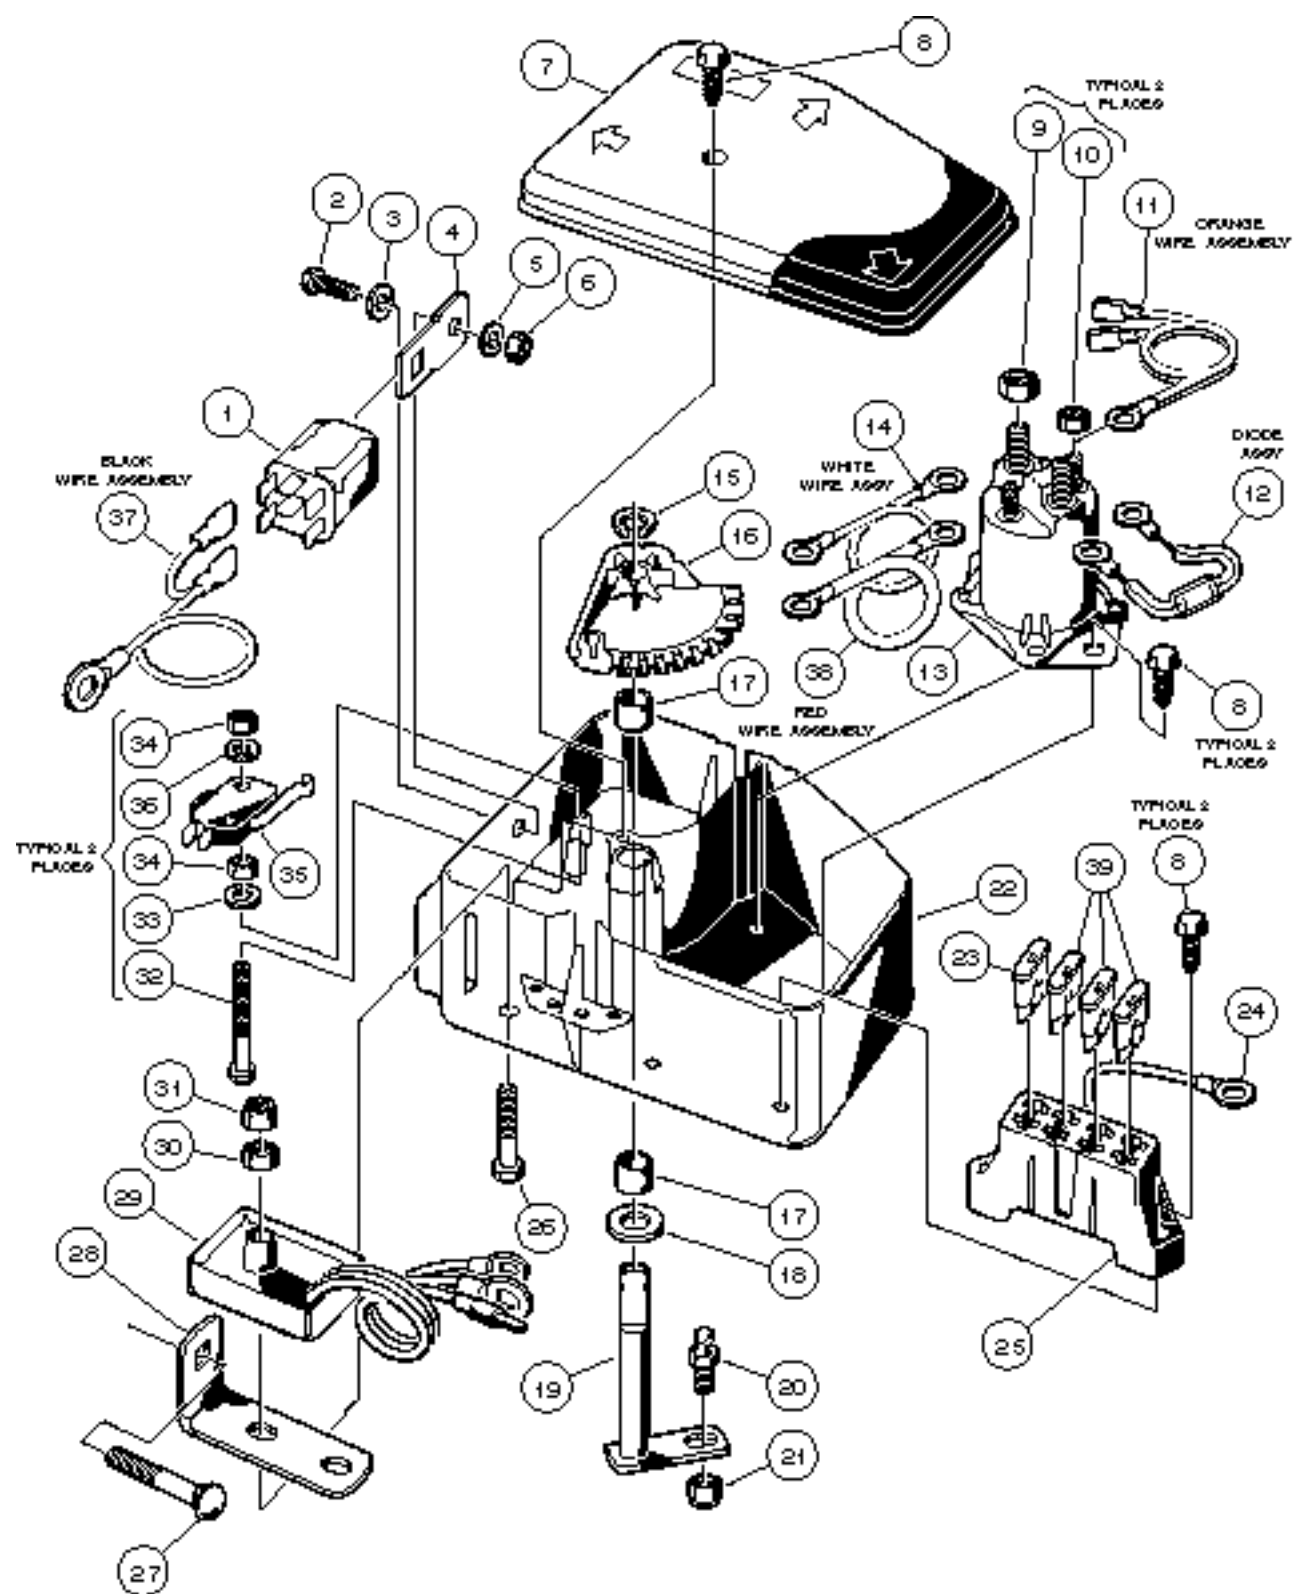


ELECTRICAL COMPONENT BOX, GASOLINE VEHICLE CARRYALL II PLUS AND VI

6

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
		BEFORE ORDERING FROM THIS PAGE, SEE NOTE ON PAGE ii AT THE BEGINNING OF THIS MANUAL.	
	<u>1018277-01</u>	BOX, ELECTRICAL COMPONENT, COMPLETE (INCLUDES ITEMS 1 - 38 AND WIRE HARNESS 1016895-02 - SEE PAGE 6-13) (FOR CARRYALL II PLUS ONLY)	1
	<u>1018277-02</u>	BOX, ELECTRICAL COMPONENT, COMPLETE (INCLUDES ITEMS 1 - 38 AND WIRE HARNESS 1017669-02 - SEE PAGE 6-15) (FOR CARRYALL VI ONLY)	1
1	<u>1017239</u>	RELAY	1
2	0008450	SCREW, HEX HEAD MACHINE, #10 - 24 x 1/2	1
3	0000183	WASHER, FLAT, #10	1
4	<u>1017243</u>	BRACKET, RELAY MOUNTING	1
5	0001016	WASHER, LOCK, #10	1
6	0001017	NUT, HEX, #10 - 24	1
7	<u>1015372</u>	COVER, ELECTRICAL COMPONENT BOX	1
8	<u>1015752</u>	SCREW, HILO, #12 - 16 x 5/8	5
9	0001242	NUT, HEX, 5/16 - 18	2
10	0007893	NUT, HEX, #10 - 32	2
11	1017006	WIRE ASSEMBLY, #18 ORANGE	1
12	1014948	ASSEMBLY, DIODE	1
13	<u>1013609</u>	SOLENOID	1
14	1017010	WIRE ASSEMBLY, #18 WHITE	1
15	<u>1013589</u>	RING, RETAINING	1
16	<u>1015373</u>	CAM, ELECTRICAL BOX	1
17	<u>1014145</u>	BUSHING, BRONZE	2
18	<u>1014065</u>	WASHER, FLAT	1
19	1015345	ASSEMBLY, BELL CRANK SHAFT	1
20	<u>1010954</u>	STUD, BALL, 1/4 - 28	1
21	0008717	NUT, NYLON LOCK, 1/4 - 28	1
22	<u>1016997</u>	BOX, ELECTRICAL COMPONENT	1
23	<u>1012295</u>	FUSE, 10 AMP	1
24	<u>1015737</u>	WIRE ASSEMBLY, #10 RED	1
25	<u>1015741</u>	BLOCK, FUSE	1
26	<u>1013509</u>	SCREW, HEX HEAD CAP, 1/4 - 20 x 1 3/4	1
27	<u>1015405</u>	BOLT, CARRIAGE, 5/16 - 18 x 2	1
28	1015343	STRAP, GROUND	1
29	<u>1017238</u>	REGULATOR, VOLTAGE	1
30	<u>1015919</u>	NUT, HEX JAM, 1/4 - 20	1
31	0008233	NUT, NYLON LOCK, 1/4 - 20	1
32	<u>1016896</u>	SCREW, HEX HEAD MACHINE, #4 - 40 x 1 1/8	2
33	1012431	WASHER, FLAT, #4	2
34	0008057	NUT, HEX, #4 - 40	4
35	<u>1014807</u>	SWITCH, LIMIT	1
36	0008058	WASHER, LOCK, #4	2
37	1017005	WIRE ASSEMBLY, #18 BLACK	1
38	<u>1014119</u>	WIRE ASSEMBLY, #6 RED	1
39	<u>1016423</u>	FUSE, 20 AMP (CARRYALL VI ONLY)	3

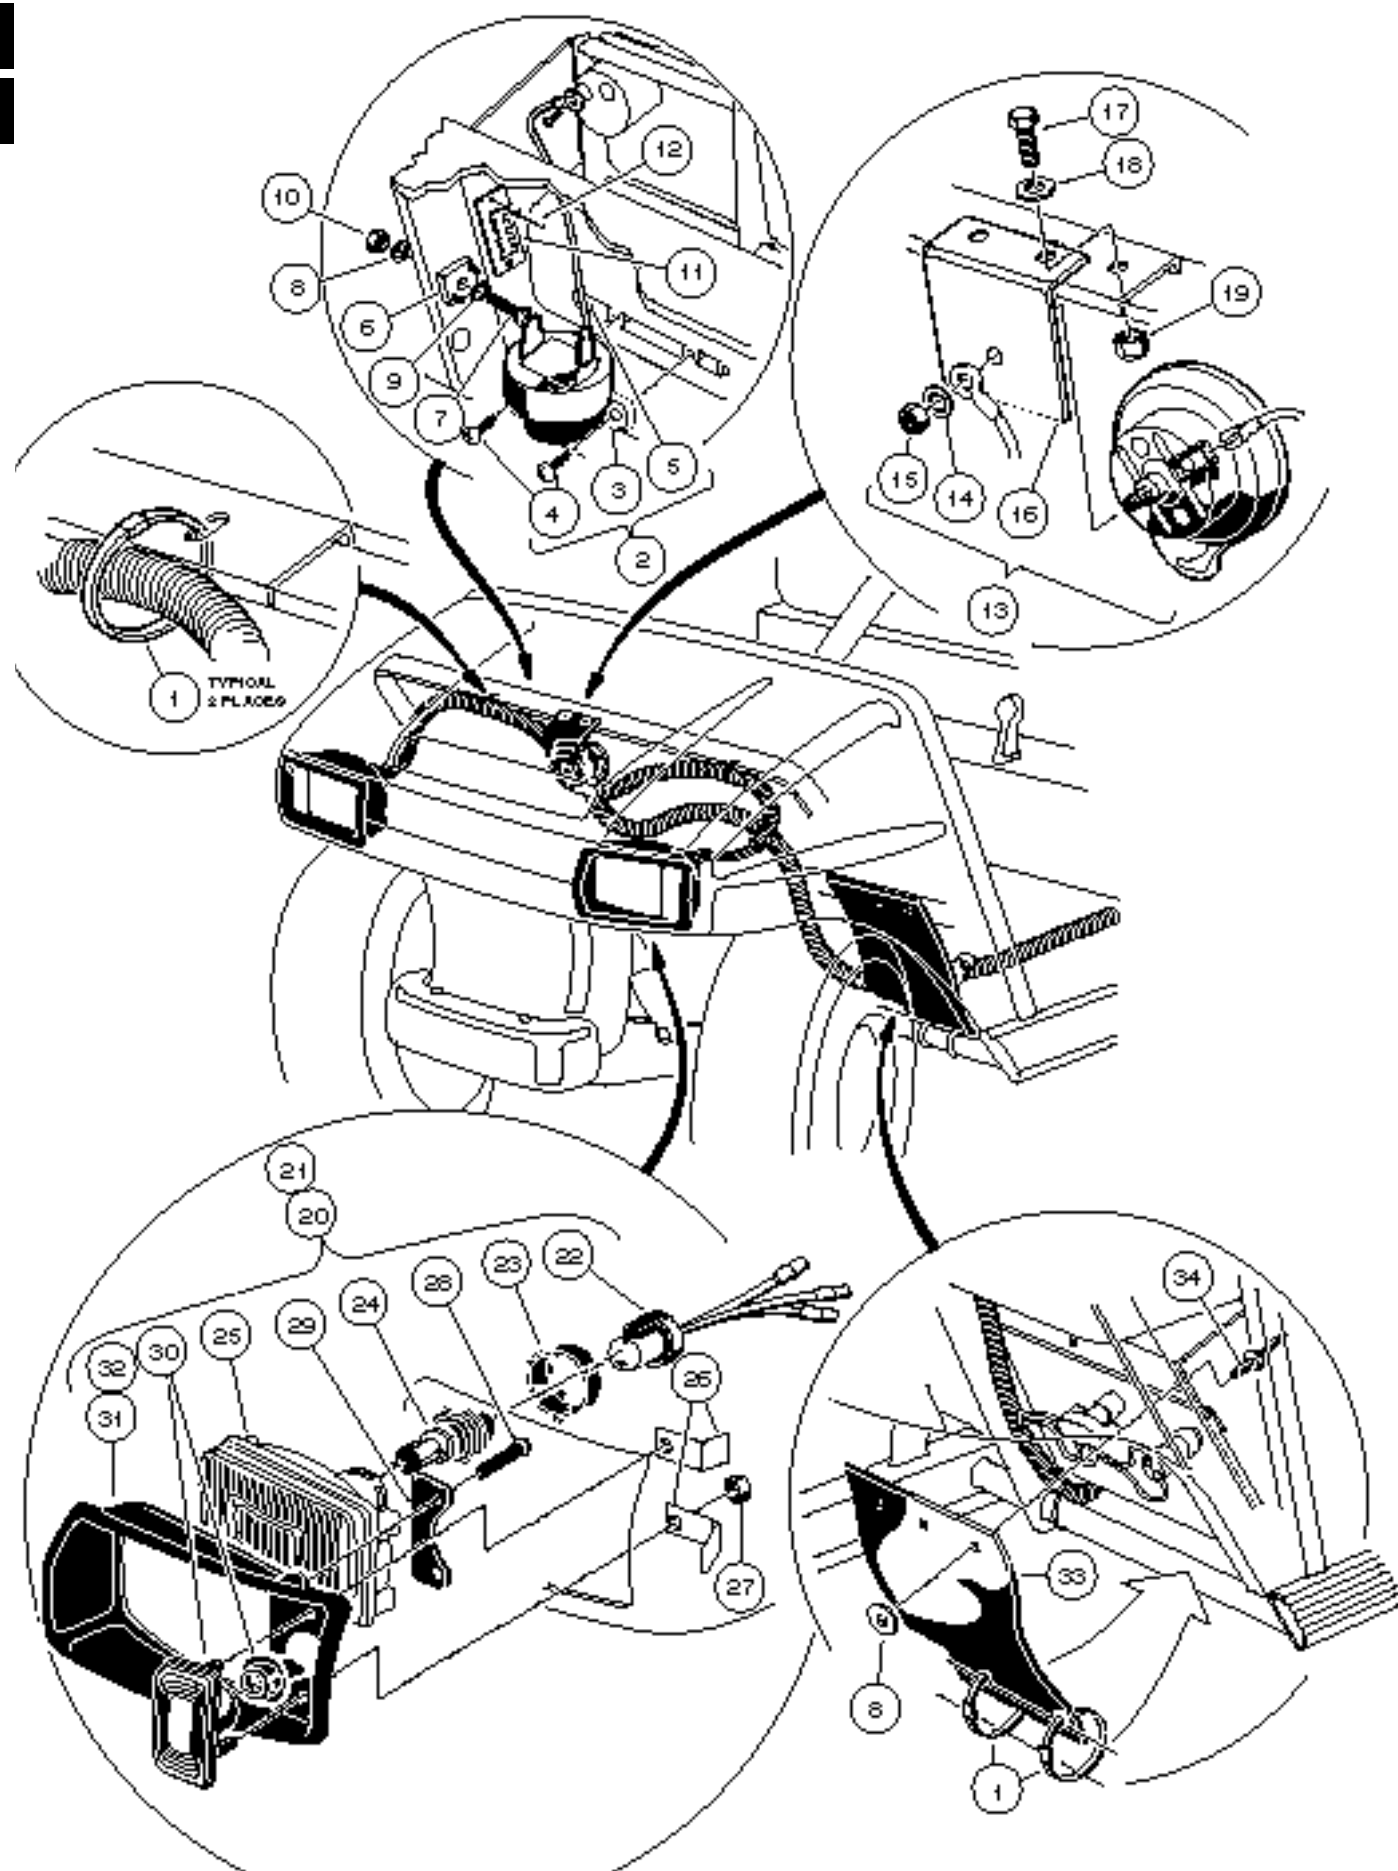


ELECTRICAL COMPONENTS, FRONT BODY GASOLINE VEHICLE - CARRYALL VI

6

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	0008639	WRAP, TIE	4
2	<u>1016859</u>	KIT, REVERSE BUZZER (INCLUDES ITEMS 3, 4 AND 5)	1
3	<u>1016851</u>	BUZZER, REVERSE	1
4	<u>1016849</u>	SCREW, PAN HEAD HILO, #4 - 24 x 5/16	2
5	<u>1016857</u>	WIRE ASSEMBLY, #18 BLACK	1
6	<u>1017721</u>	LIMITER, VOLTAGE (FOR GASOLINE VEHICLE LIGHTING INSTALLATION)	1
7	<u>1010909</u>	SCREW, MACHINE, #10 - 32 x 1 1/4	1
8	0000183	WASHER, FLAT, #10	4
9	0001016	WASHER, LOCK, #10	1
10	0007893	NUT, HEX, #10 - 32	1
11	<u>1016356</u>	BLOCK, TERMINAL	1
12	<u>1013357</u>	RIVET, ALUMINUM POP, 5/32	2
13	0004029	ASSEMBLY, HORN (INCLUDES ITEMS 14, 15 AND 16)	1
14	0007820	WASHER, INTERNAL TOOTH, 5/16	1
15	<u>1012528</u>	NUT, M8 x 1.25	1
16	<u>1011825</u>	BRACKET, HORN	1
17	0000304	BOLT, HEX HEAD, 1/4 - 20 x 1	2
18	0000332	WASHER, FLAT, 1/4	2
19	0008233	NUT, NYLON LOCK, 1/4 - 20	2
20	<u>1016897-01</u>	ASSEMBLY, HEADLIGHT, LEFT HAND (INCLUDES ITEMS 22 - 31)	1
21	<u>1016897-02</u>	ASSEMBLY, HEADLIGHT, RIGHT HAND (INCLUDES ITEMS 22 - 30 AND 32)	1
22	<u>1017066</u>	HARNESS, HEADLIGHT WIRE	1
23	1017059	LOCK, BULB COLLAR	1
24	<u>1017060</u>	BULB, HALOGEN	1
25	1017061	LENS, HEADLIGHT	1
26	<u>1017064</u>	BRACKET, MOUNTING	2
27	0007893	NUT, HEX, #10 - 32	2
28	<u>1013461</u>	SCREW, HI-LO, #10 - 16 x 7/16	2
29	<u>1017065</u>	RETAINER, HEADLIGHT	1
30	<u>1017062</u>	ASSEMBLY, TURN SIGNAL LENS	1
31	<u>1016880</u>	BEZEL, HEADLIGHT, LEFT HAND	1
32	<u>1016879</u>	BEZEL, HEADLIGHT, RIGHT HAND	1
33	1015787	FLAP, SWITCH PROTECTOR	1
34	0001606	RIVET, POP, 3/16	3

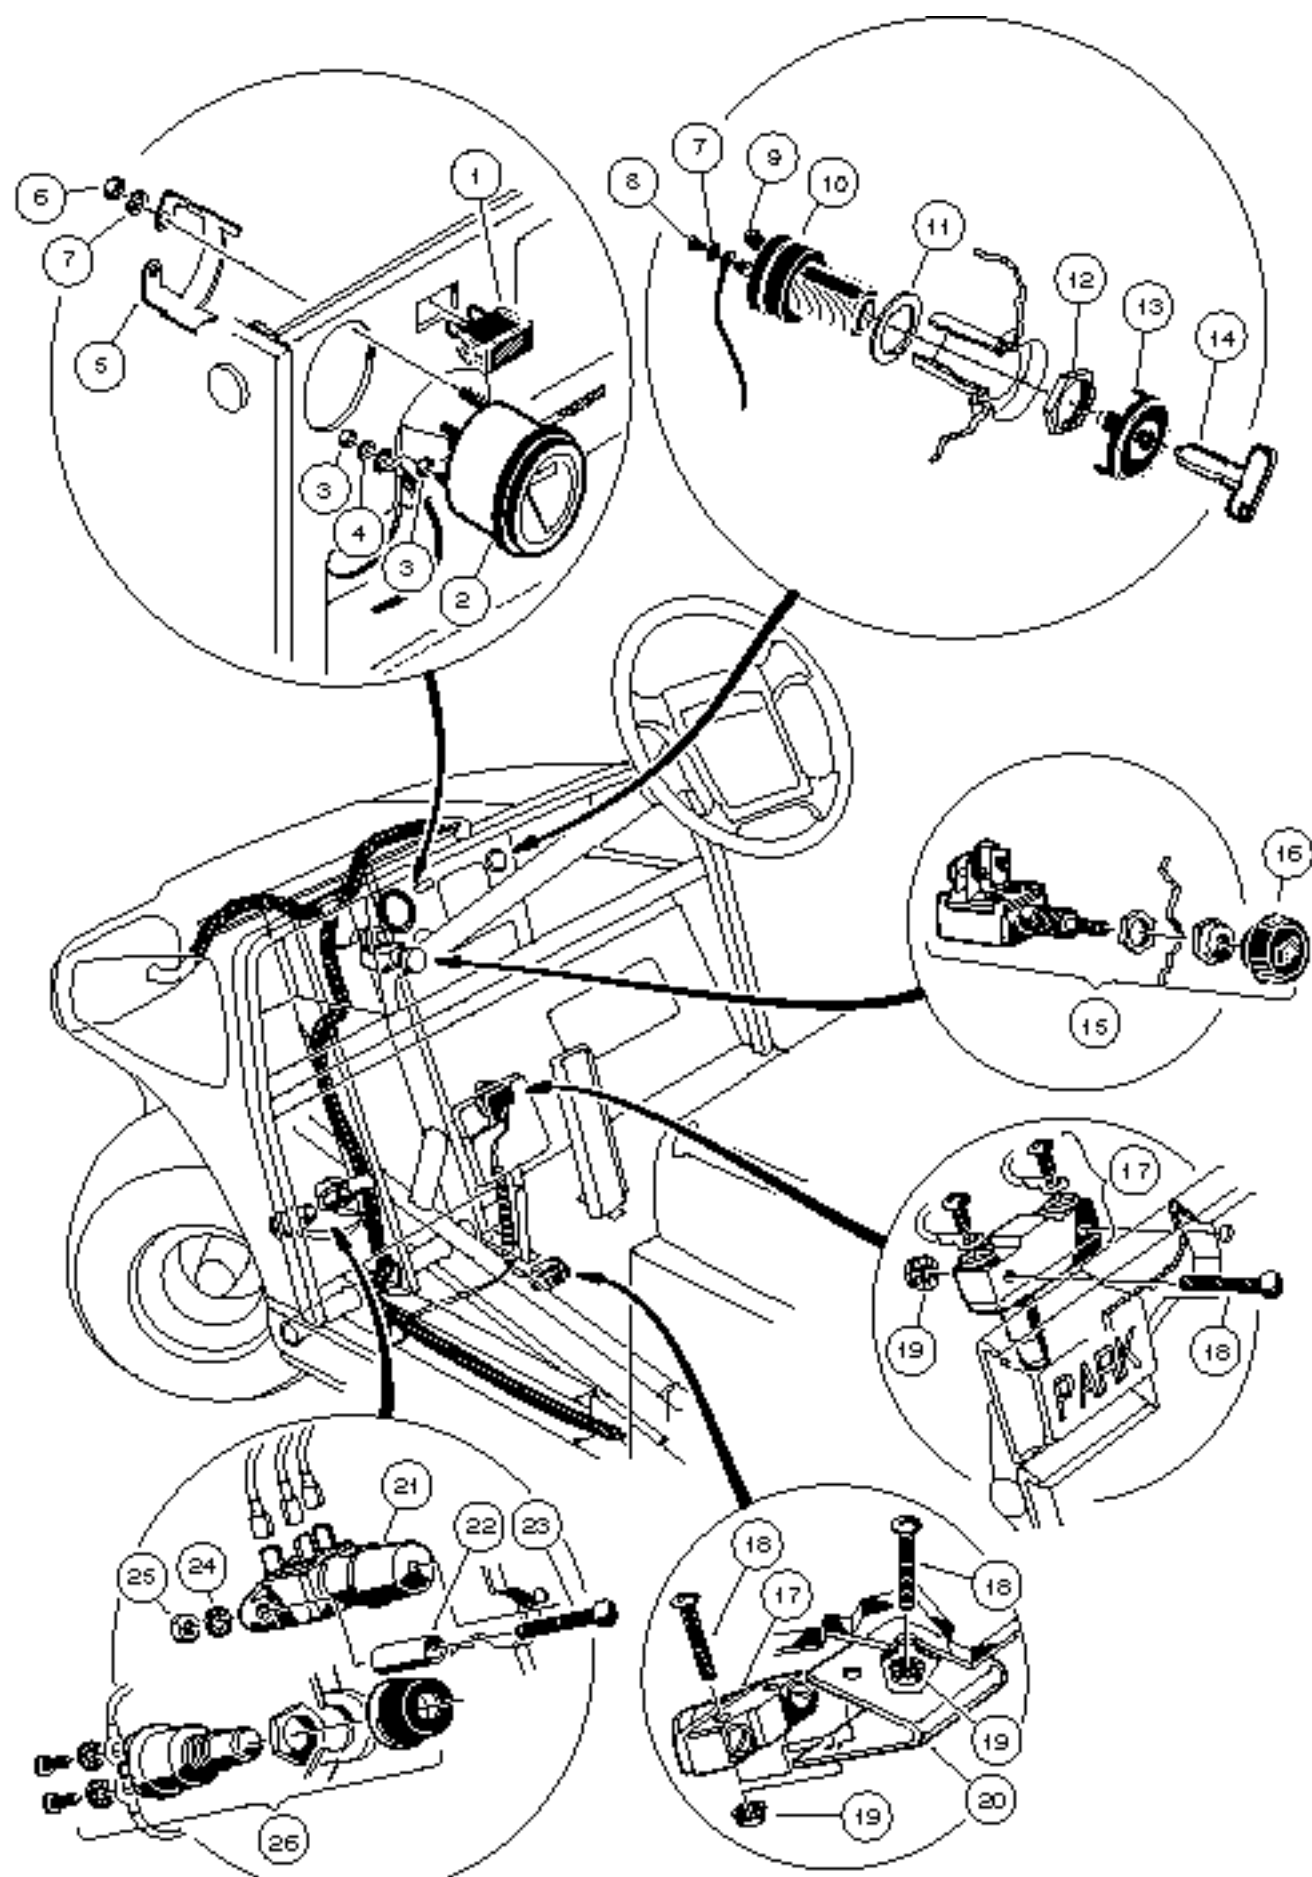


CONTROLS AND GAUGES, GASOLINE VEHICLE

CARRYALL VI

6

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016630</u>	LIGHT, OIL WARNING (WITH INTERNAL RESISTOR)	1
2	<u>1015103</u>	GAUGE, FUEL (INCLUDES ITEMS 3 AND 4)	1
3	N/A	NUT, BRASS	6
4	N/A	WASHER, EXTERNAL TOOTH LOCK	3
5	<u>1015104</u>	BRACKET, FUEL GAUGE	1
6	<u>1011571</u>	NUT, HEX, #8 - 32	2
7	<u>1011610</u>	WASHER, LOCK, #8	3
8	<u>1016092</u>	SCREW, PAN HEAD MACHINE, #8 - 32 x 7/16	1
9	1018306-01	ASSEMBLY, SCREW AND WASHER	4
10	1018264-01	SWITCH, KEY	1
11	<u>1018511-01</u>	WASHER	1
12	<u>1018307-01</u>	NUT, KEY SWITCH	1
13	<u>1018345-02</u>	CAP, KEY SWITCH	1
14	<u>1012505</u>	KEY (PAIR)	1
15	0004034	SWITCH, LIGHT (INCLUDES ITEM 16)	1
16	<u>1013857</u>	KNOB, LIGHT SWITCH	1
17	<u>1011439</u>	SWITCH, LIMIT	2
18	<u>1011557</u>	SCREW, MACHINE, #6 - 32 x 1	6
19	<u>1011229</u>	NUT, "K" LOCK, #6 - 32	6
20	1011742	BRACKET, BRAKE LIGHT SWITCH	1
21	1010889	SWITCH, DIMMER	1
22	<u>1018713-01</u>	STAND-OFF, DIMMER SWITCH	2
23	<u>1018712-01</u>	SCREW, MACHINE, #10 - 32 x 1	2
24	0008049	WASHER, INTERNAL TOOTH LOCK, #10	2
25	0007893	NUT, HEX, #10 - 32	2
26	<u>1013443</u>	BUTTON, HORN	1

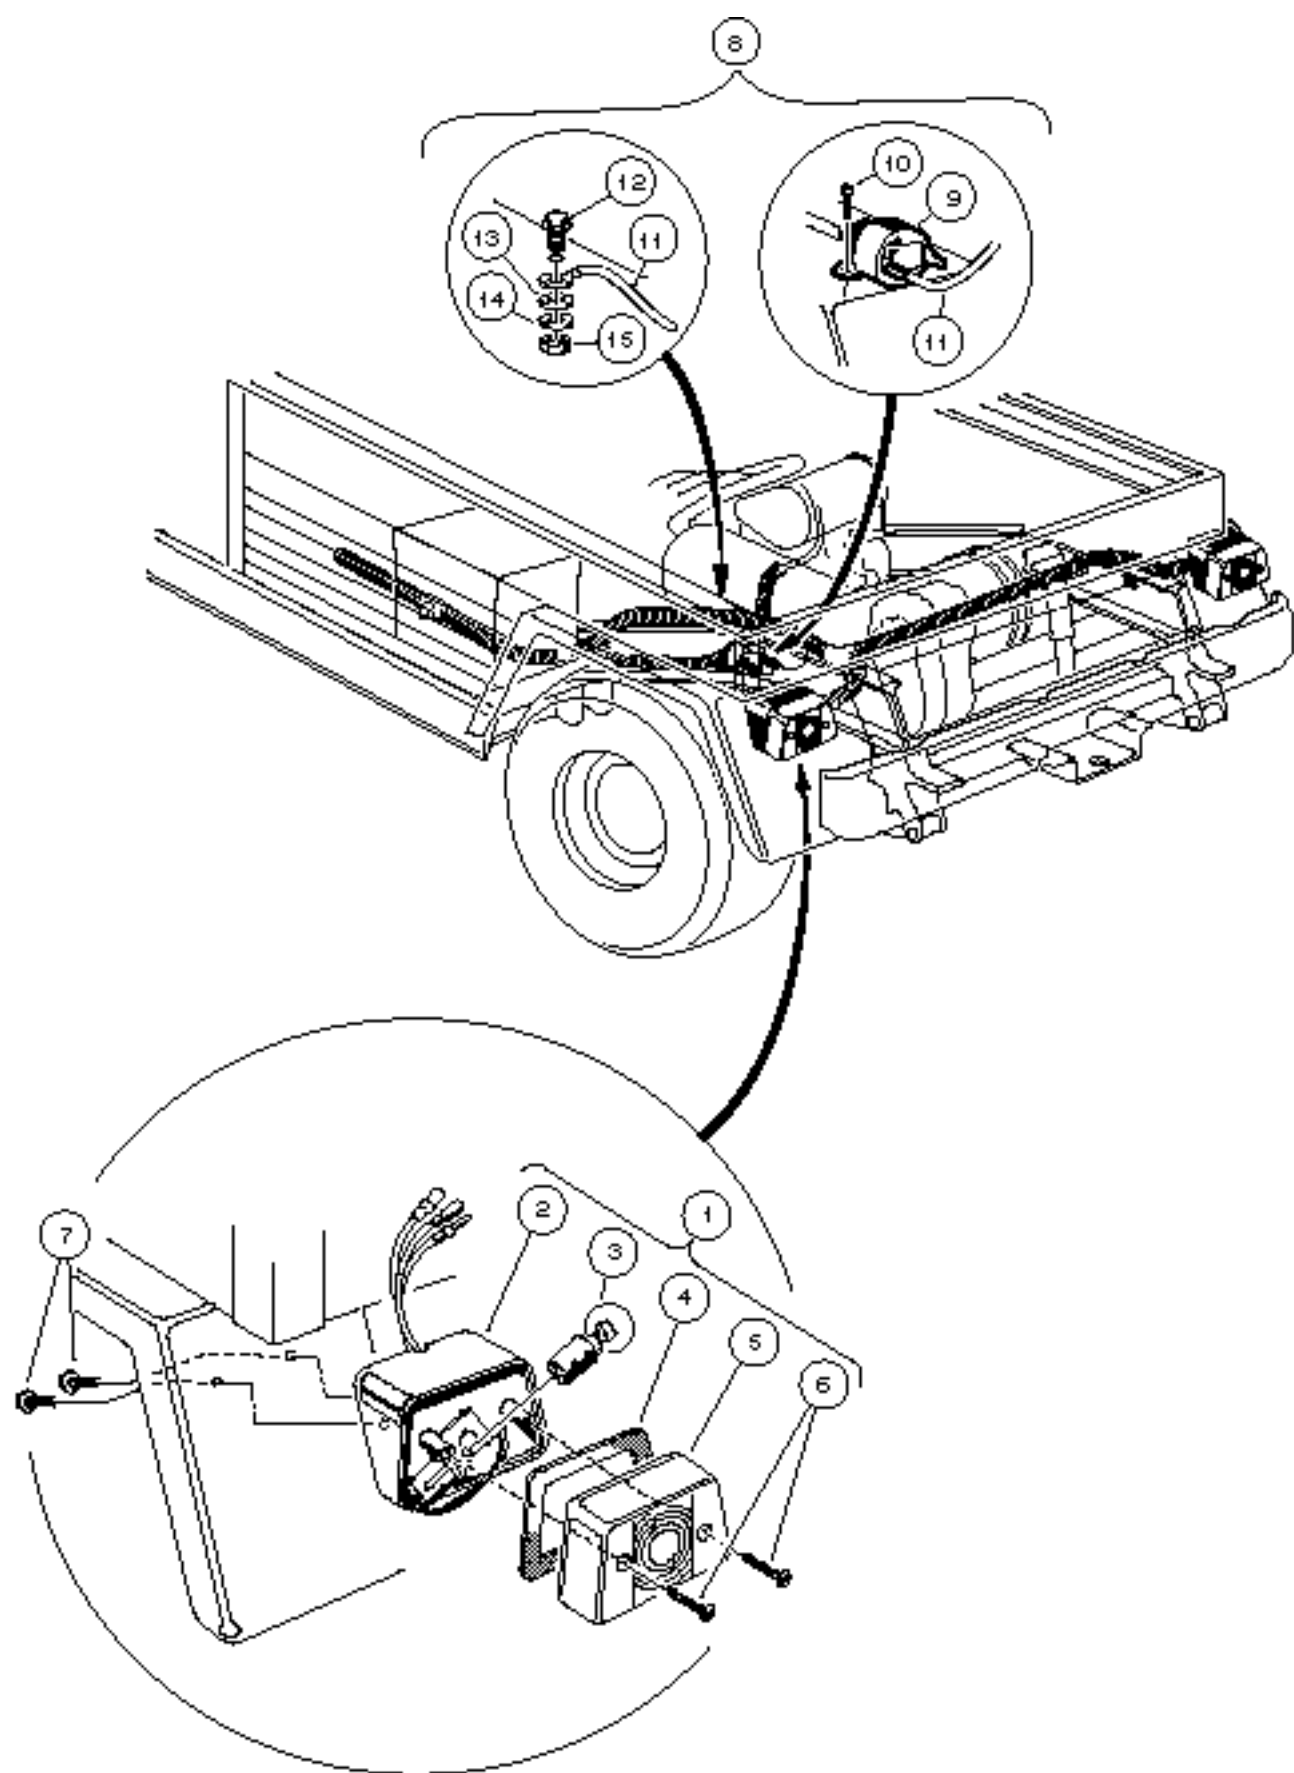


ELECTRICAL COMPONENTS, REAR BODY GASOLINE VEHICLE - CARRYALL VI

6

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016717</u>	ASSEMBLY, TAILLIGHT (INCLUDES ITEMS 2 - 6)	2
2	N/A	HOUSING, TAILLIGHT	1
3	<u>1011582</u>	BULB	1
4	N/A	GASKET	1
5	N/A	LENS	1
6	N/A	SCREW, LENS	2
7	<u>1015752</u>	SCREW, HEX WASHER HEAD, #12 - 16 x 1/2	4
8	<u>1016859</u>	KIT, REVERSE BUZZER (INCLUDES ITEMS 9 - 11)	1
9	<u>1016851</u>	BUZZER, REVERSE	1
10	<u>1016849</u>	SCREW, PAN HEAD HILO, #4 - 24 x 5/16	2
11	1016857	WIRE ASSEMBLY, #18 BLACK	1
12	<u>1015720</u>	SCREW, HEX WASHER HEAD, #6 - 32 x 1/2	1
13	0007591	WASHER, FLAT	1
14	<u>1011622</u>	WASHER, LOCK, #6	1
15	<u>1011558</u>	NUT, HEX, #6 - 32	1

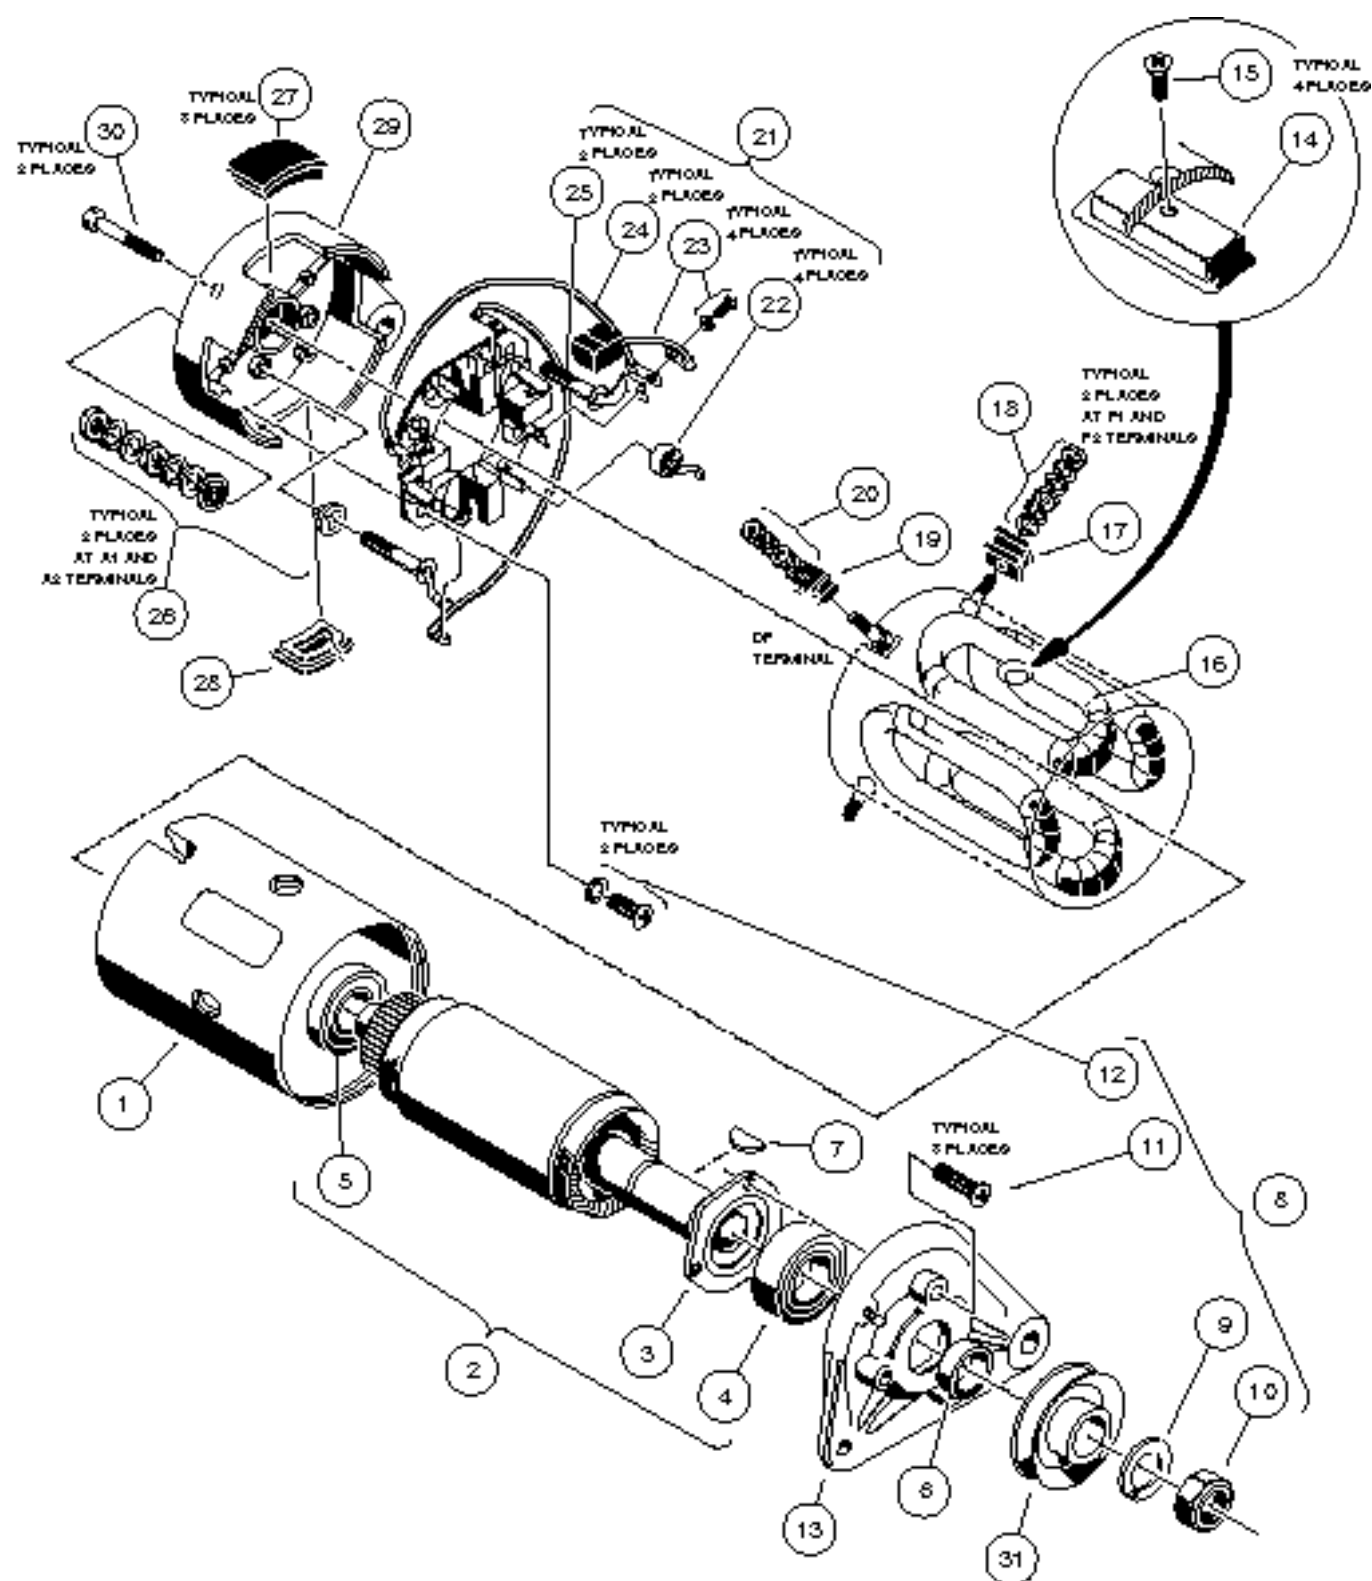


STARTER/GENERATOR ASSEMBLY

6

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
		BEFORE ORDERING FROM THIS PAGE, SEE NOTE ON PAGE ii AT THE BEGINNING OF THIS MANUAL.	
	<u>1018337-01</u>	STARTER/GENERATOR (CLOCKWISE ROTATION) (INCLUDES ITEMS 1 - 30)	1
1	<u>1018752-01</u>	HOUSING, FIELD COIL	1
2	<u>1018751-01</u>	ASSEMBLY, ARMATURE (INCLUDES ITEMS 3, 4 AND 5)	1
3	<u>1018750-01</u>	RETAINER, BEARING	1
4	<u>1013001</u>	BALL BEARING, OUTPUT SHAFT	1
5	<u>1013005</u>	COMMUTATOR, BALL BEARING	1
6	<u>1019399-01</u>	SPACER	1
7	<u>1013003</u>	KEY, WOODRUFF	1
8	<u>1018765-01</u>	KIT, PULLEY NUT AND SCREW (INCLUDES ITEMS 9 - 12)	1
9	N/A	WASHER, LOCK, M14	1
10	N/A	NUT, HEX, M14 x 2	1
11	N/A	SCREW, CROSS - RECESSED, M5 x .8 x 18MM	3
12	<u>1018965-01</u>	SCREW, CROSS - RECESSED, M5 x .8 x 16MM (WITH LOCK WASHER)	2
13	<u>1018749-01</u>	END BELL, OUTPUT SHAFT	1
14	<u>1018753-01</u>	SET, POLE (SET OF 4)	1
15	<u>1018754-01</u>	SCREW, POLE PIECE (SET OF 4)	1
16	<u>1018755-01</u>	ASSEMBLY, FIELD COIL	1
17	<u>1018756-01</u>	SET, F INSULATOR	2
18	<u>1018776-01</u>	PACKAGE, TERMINAL HARDWARE (F1 AND F2)	2
19	<u>1018757-01</u>	SET, DF INSULATOR	1
20	<u>1018777-01</u>	PACKAGE, TERMINAL HARDWARE (DF)	1
21	<u>1013011-02</u>	HOLDER, BRUSH (INCLUDES ITEMS 22 - 25)	1
22	<u>1018781-01</u>	SPRING, BRUSH	4
23	<u>1018693-02</u>	PACKAGE, BRUSH (INCLUDES 4 BRUSHES, 4 SCREWS, 4 WASHERS)	1
24	<u>1018762-02</u>	ASSEMBLY, BRUSH CONNECTOR	2
25	<u>1018758-02</u>	A CONNECTOR (SET OF 2)	1
26	<u>1018760-01</u>	PACKAGE, TERMINAL HARDWARE (A1 AND A2)	2
27	<u>1018763-01</u>	COVER, BRUSH INSPECTION PORT (SET OF 4) (INCLUDES ITEM 28)	1
28	<u>1017653</u>	COVER, BRUSH INSPECTION PORT, WITH DRAIN	1
29	<u>1018764-02</u>	END BELL, COMMUTATOR	1
30	<u>1018790-01</u>	BOLT, CLAMP, M6 x 1 x 180MM	2
31	<u>1014289</u>	PULLEY	1

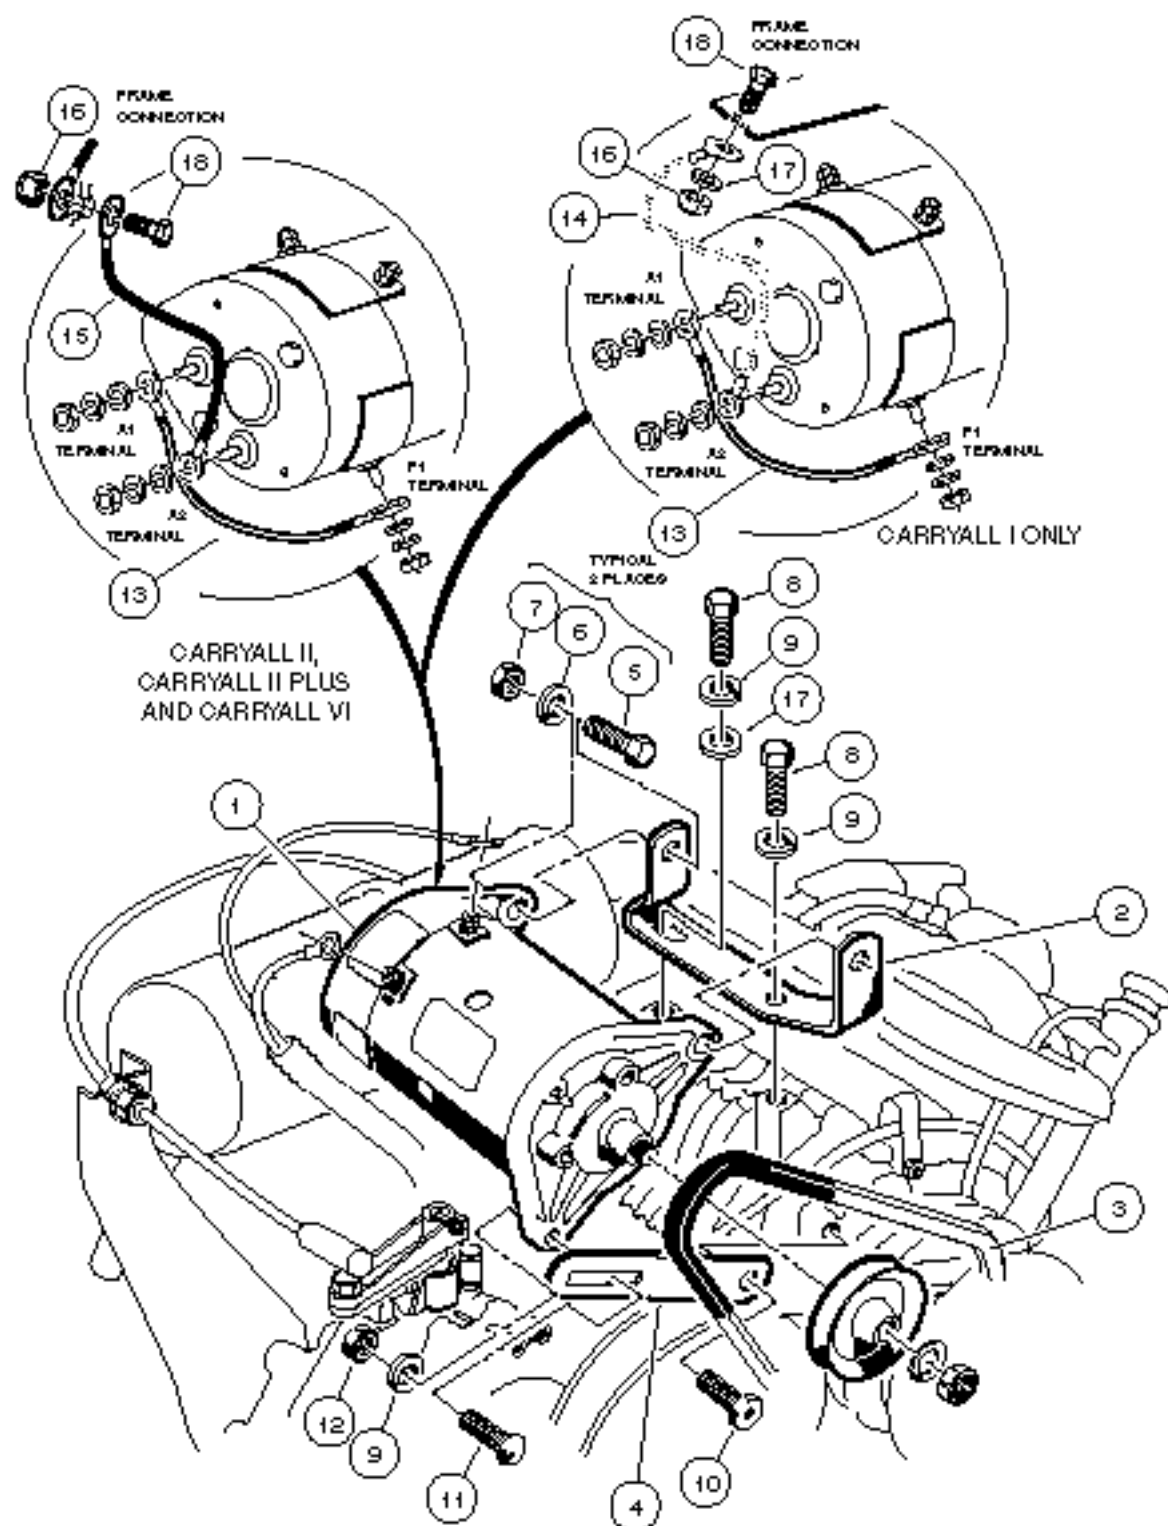


STARTER/GENERATOR MOUNTING

6

G


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
		BEFORE ORDERING FROM THIS PAGE, SEE NOTE ON PAGE ii AT THE BEGINNING OF THIS MANUAL.	
1	<u>1018337-01</u>	STARTER/GENERATOR (CLOCKWISE ROTATION)	1
2	<u>1015240-01</u>	BRACKET, MOUNTING, FE 290 (CARRYALL I AND II)	1
2	<u>1015240-02</u>	BRACKET, MOUNTING, FE 350 (CARRYALL II PLUS AND VI)	1
3	<u>1019167-01</u>	BELT	1
4	<u>1016883</u>	BRACKET, ADJUSTING	1
5	0000705	SCREW, HEX HEAD CAP, 3/8 - 16 x 1 1/4	2
6	0000357	WASHER, LOCK, 3/8	2
7	0000706	NUT, HEX, 3/8 - 16	2
8	1019035-01	SCREW, HEX HEAD CAP, M8 x 1.25 x 24MM	2
9	0007174	WASHER, LOCK, 5/16	3
10	<u>1016074</u>	SCREW, TORX HEAD, M8 x 1.25 x 18MM	1
11	<u>1015932</u>	BOLT, CARRIAGE, 5/16 - 18 x 1	1
12	0001242	NUT, HEX, 5/16 - 18	1
13	<u>1018373-01</u>	WIRE ASSEMBLY, #6 GREEN	1
14	<u>1015920</u>	WIRE ASSEMBLY, #6 BRAIDED GROUND (CARRYALL I ONLY)	1
15	<u>1016380</u>	WIRE ASSEMBLY, #6 GROUND (CARRYALL II, II PLUS, AND VI)	1
16	0007473	NUT, NYLON LOCK, 5/16 - 18	1
17	0001241	WASHER, FLAT, 5/16 (QUANTITY 2 FOR CARRYALL I ONLY)	1
18	0007173	SCREW, HEX HEAD CAP, 5/16 - 18 x 3/4	1

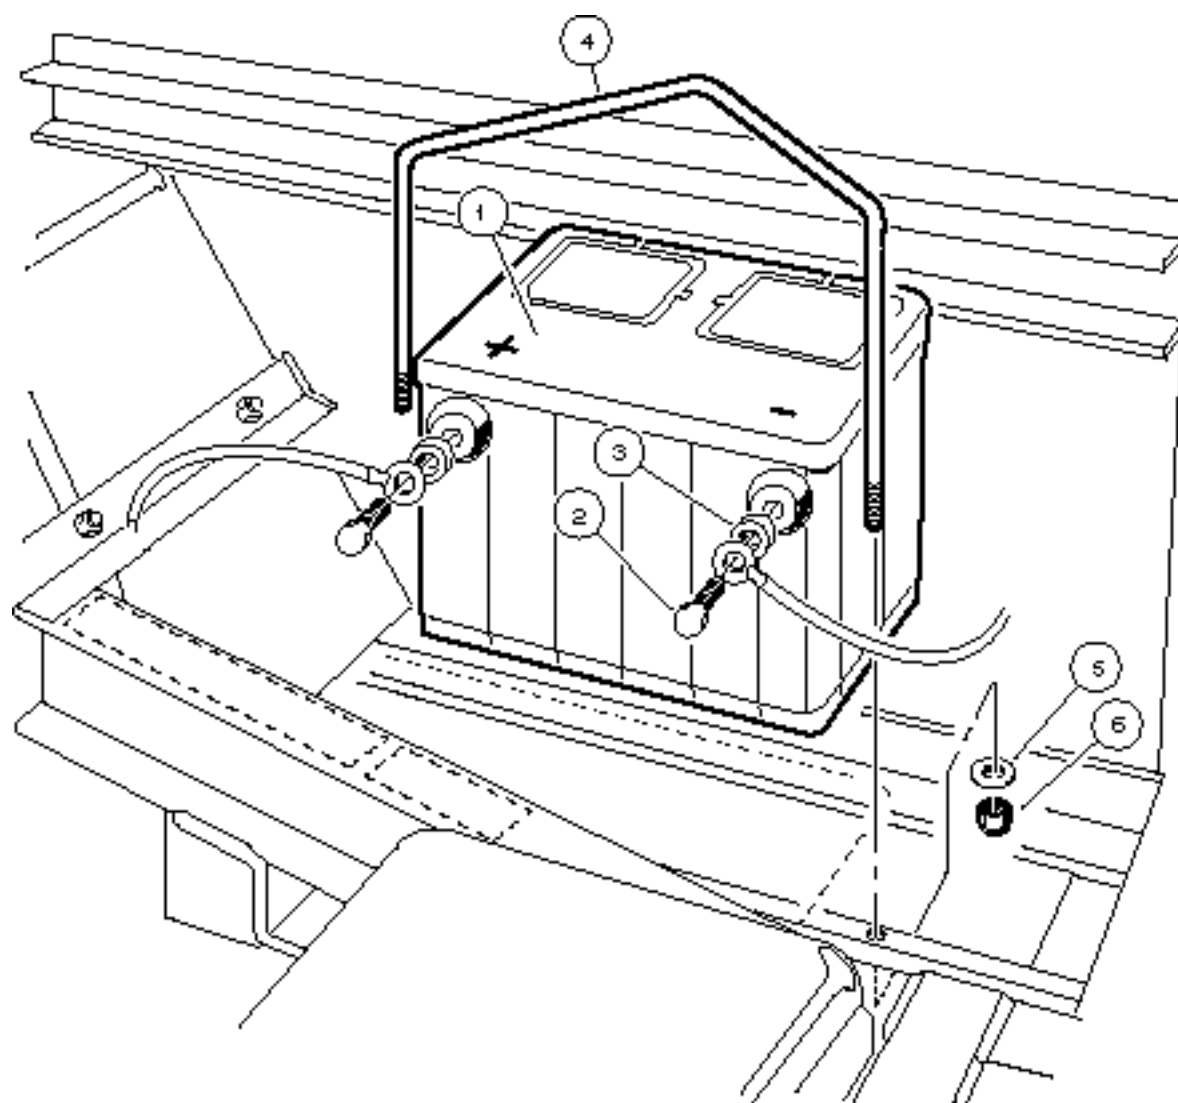

G

6-29

FE 290 ENGINE

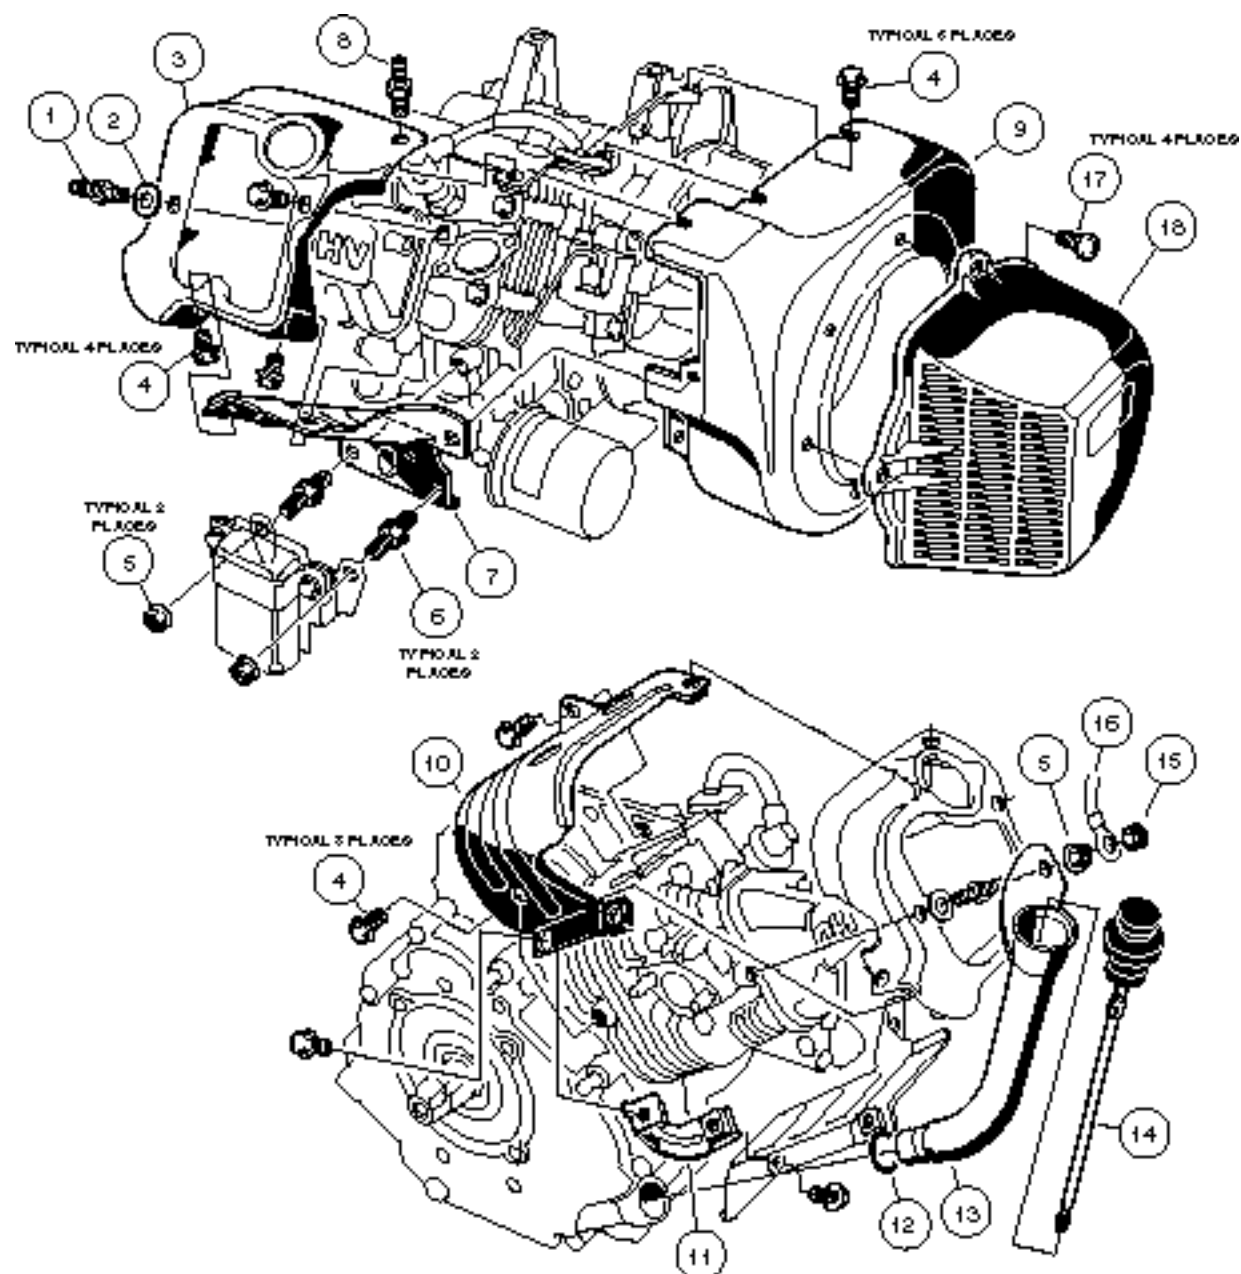


FE 290 ENGINE - CARRYALL I AND II

7

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	1018335-01	FE 290 OHV GASOLINE ENGINE, COMPLETE (CLOCKWISE ROTATION) (DOES NOT INCLUDE ITEMS 15 - 18).....	1
1	<u>1016507</u>	BOLT, 2-ENDED, M6 x 1 x 29MM	1
2	<u>1016512</u>	WASHER, FLAT, 6MM	1
3	<u>1016524</u>	SHROUD, ENGINE, FE 290	1
4	1016456	BOLT, FLANGED, M6 x 1 x 12MM	15
5	1016547	NUT, M6 x 1	3
6	<u>1019097-01</u>	BOLT, 2-ENDED, M6 x 1 x 27MM	2
7	1016526	SHROUD, ENGINE, FE 290 (LOWER)	1
8	<u>1017221</u>	SCREW, 2-ENDED, M6 x 1 x 46MM	1
9	1019156-01	HOUSING, FAN	1
10	<u>1016525</u>	SHROUD, ENGINE, FE 290 (UPPER)	1
11	<u>1016443</u>	BRACKET	1
12	<u>1016539</u>	O-RING	1
13	<u>1016536</u>	TUBE, OIL FILLER, FE 290	1
14	1016531	DIPSTICK	1
15	<u>1011114</u>	NUT, M6 x 1	1
16	<u>1015332</u>	WIRE ASSEMBLY, #10 BRAIDED GROUND	1
17	<u>1015969</u>	SCREW, PAN HEAD, M6 x 1 x 14MM	4
18	<u>1015649</u>	SHROUD, FAN	1

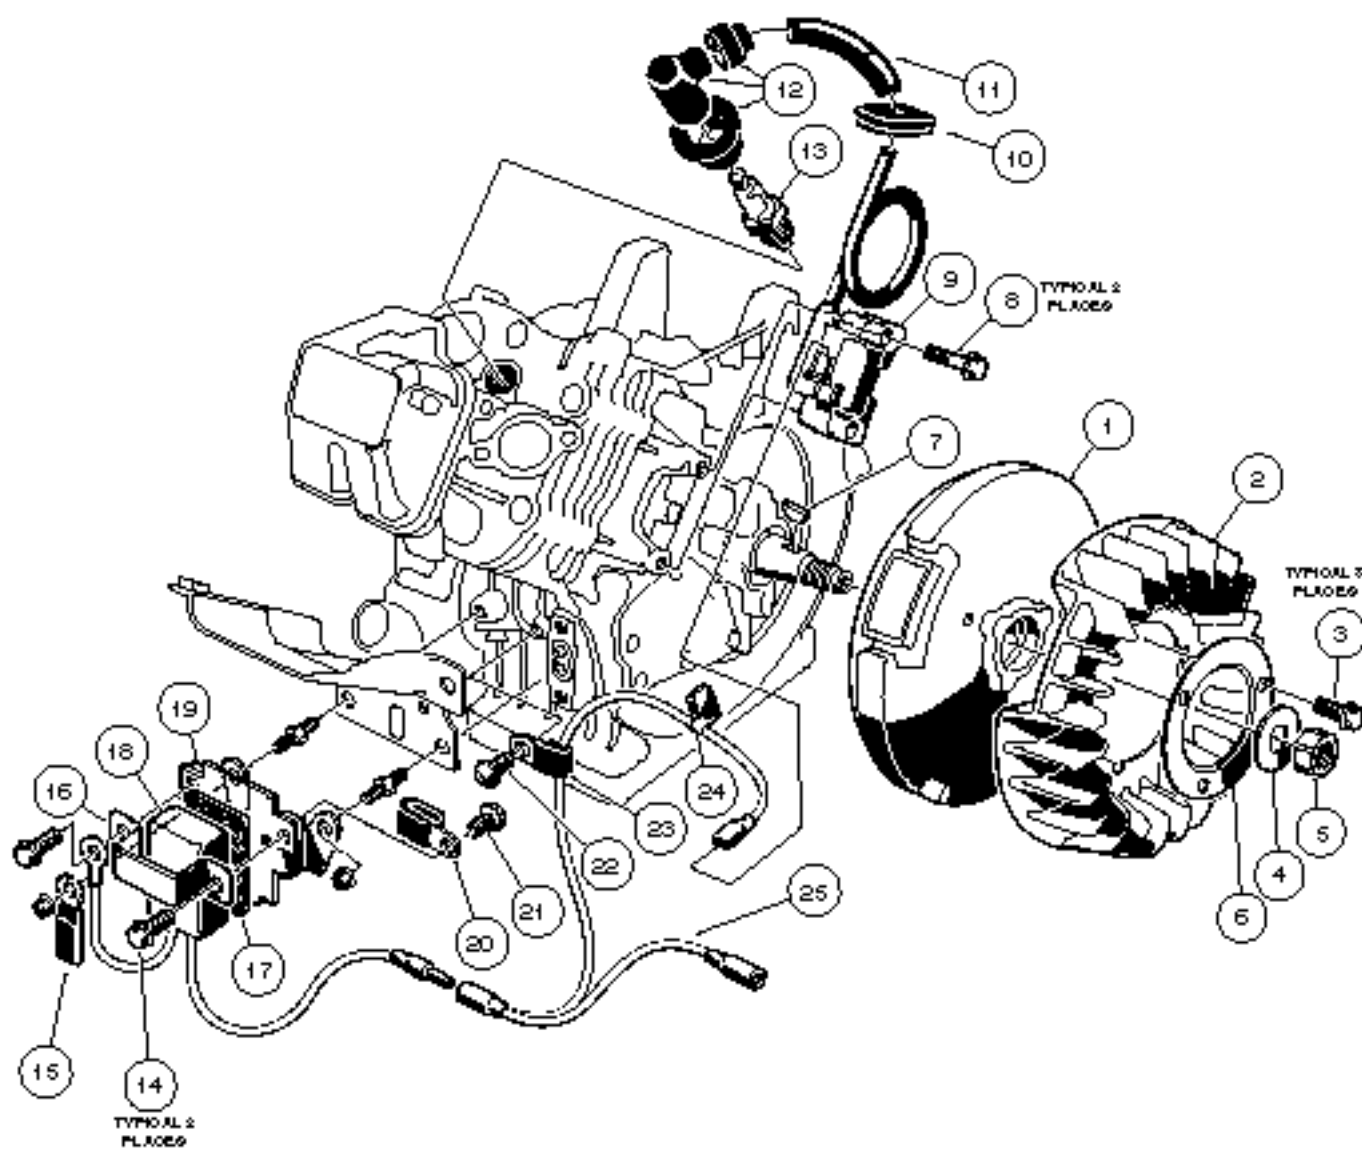


FE 290 ENGINE - CARRYALL I AND II

7

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1019157-01</u>	FLYWHEEL	1
2	<u>1019158-01</u>	FAN, FLYWHEEL, GRAY	1
3	<u>1017448</u>	SCREW, FLANGED HEX HEAD, M6 x 1 x 10MM	3
4	<u>1016548</u>	WASHER, FLAT, 16MM	1
5	<u>1016505</u>	NUT, HEX, M16 x 2	1
6	<u>1017455</u>	PLATE, FLYWHEEL FAN	1
7	<u>1016562</u>	KEY	1
8	<u>1016455</u>	BOLT, FLANGED, M5 x .8 x 25MM	2
9	<u>1019092-01</u>	COIL, IGNITION (WITH INTERNAL IGNITER)	1
10	<u>1016578</u>	GROMMET	1
11	<u>1016588</u>	TUBE, 7MM x 70MM	1
12	<u>1016493</u>	ASSEMBLY, PLUG CAP	1
13	<u>1016111</u>	SPARK PLUG - OHV	1
14	<u>1016456</u>	BOLT, FLANGED, M6 x 1 x 12MM	2
15	<u>1012981</u>	CLAMP	1
16	<u>1016579</u>	MOUNT, RPM LIMITER	1
17	<u>1016586</u>	DAMPER, RPM LIMITER	1
18	<u>1019094-01</u>	LIMITER, RPM - OHV	1
19	<u>1016445</u>	BRACKET, RPM LIMITER	1
20	<u>1019095-01</u>	CLAMP	1
21	<u>1016497</u>	SCREW, CROSS PAN HEAD, M5 x .8 x 8MM	1
22	<u>1016544</u>	SCREW, CROSS PAN HEAD SELF-TAPPING, M5 x .8 x 12MM	1
23	<u>1016561</u>	CLAMP	1
24	<u>1016587</u>	CLAMP	1
25	<u>1019093-01</u>	WIRE, LEAD	1

FE 290 ENGINE

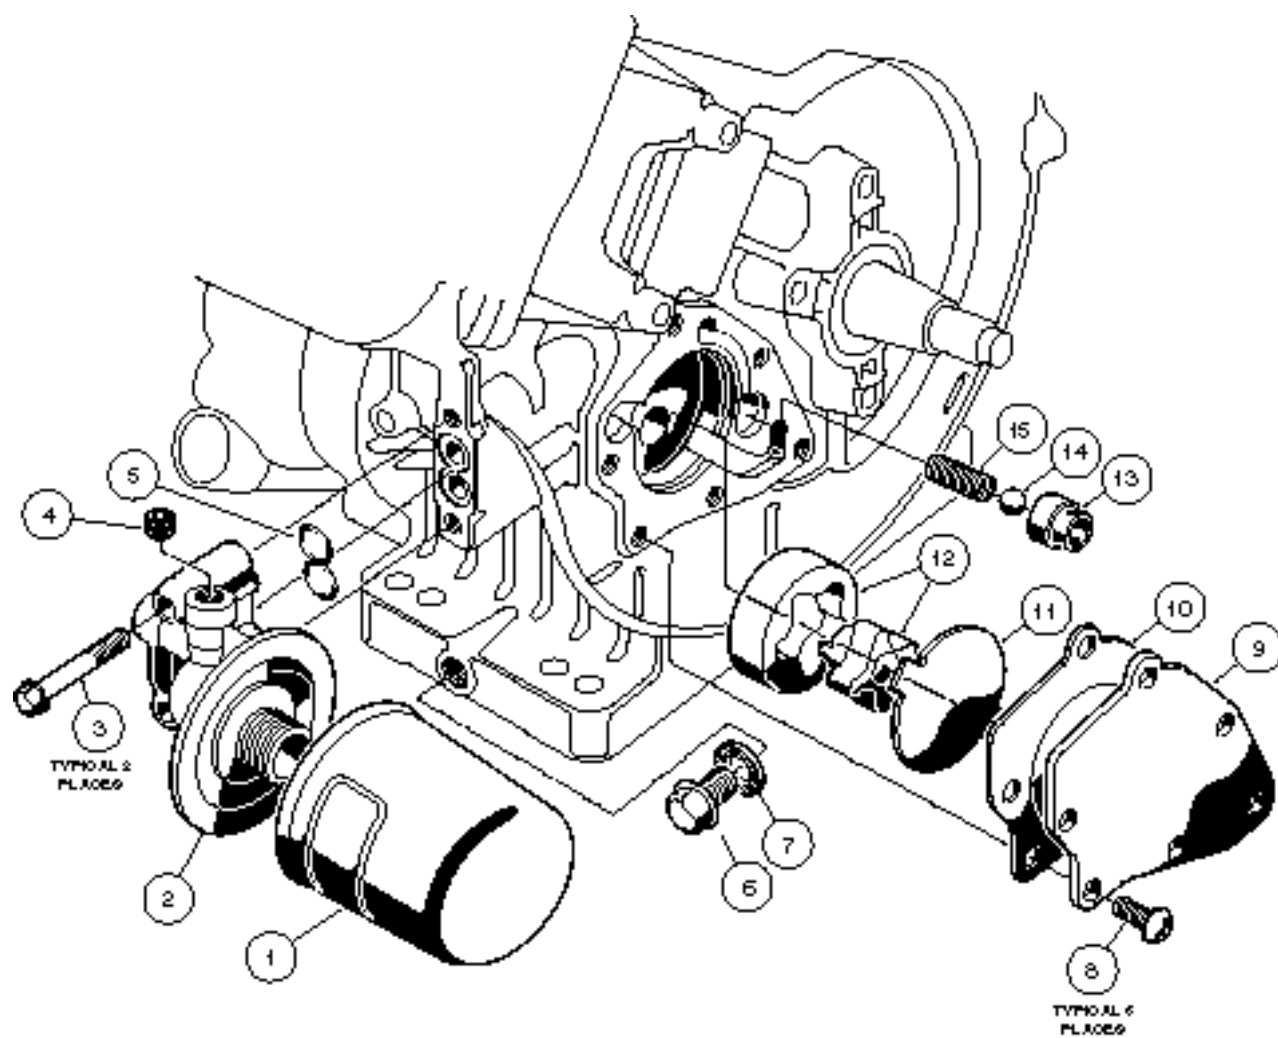


FE 290 ENGINE - CARRYALL I AND II

7

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016467</u>	ASSEMBLY, OIL FILTER, OHV	1
2	<u>1016502</u>	BRACKET, OIL FILTER	1
3	<u>1016457</u>	BOLT, FLANGED HEX HEAD, M6 x 1 x 40MM	2
4	<u>1017507</u>	PLUG	1
5	<u>1016570</u>	O-RING, OIL FILTER MOUNT	1
6	<u>1016576</u>	PLUG, DRAIN, FE 290	1
7	<u>1016432</u>	GASKET, DRAIN PLUG	1
8	<u>1016498</u>	SCREW, CROSS PAN HEAD, M6 x 1 x 12MM	6
9	<u>1016484</u>	COVER, PUMP	1
10	<u>1016435</u>	GASKET, OIL PUMP	1
11	<u>1016473</u>	PLATE, OIL PUMP	1
12	<u>1016482-03</u>	PUMP, OIL, AND ROTOR	1
13	<u>1016429</u>	SEAT, VALVE	1
14	<u>1016537</u>	BALL, STEEL, PRESSURE RELIEF	1
15	<u>1016581</u>	SPRING	1

FE 290 ENGINE

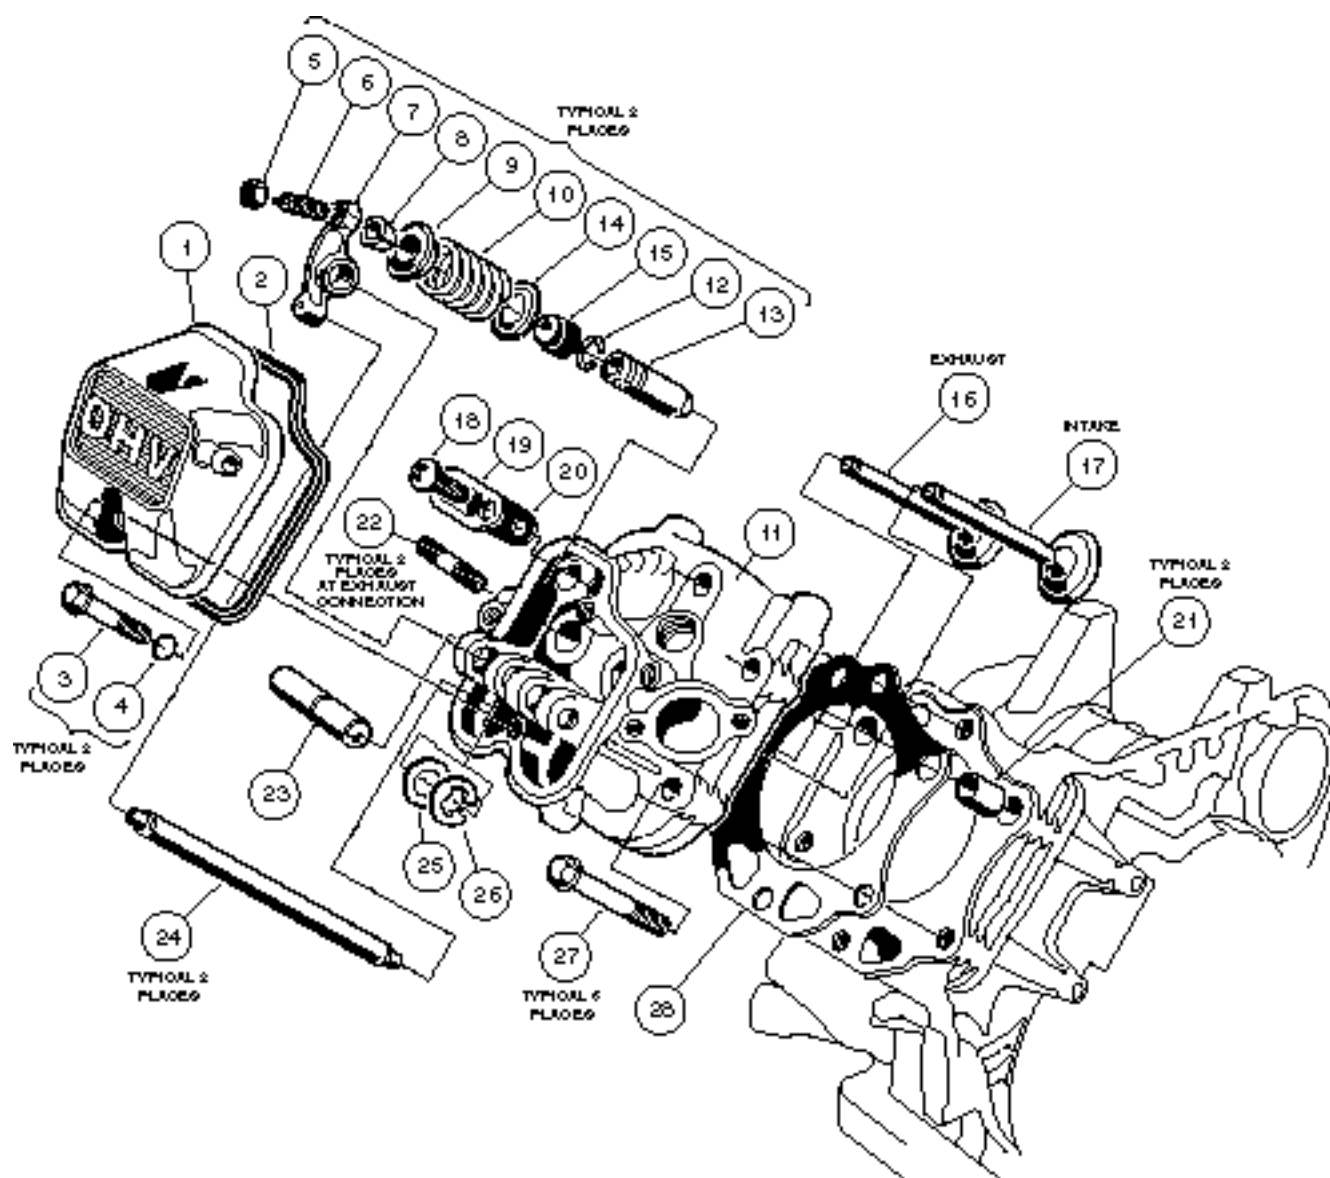


FE 290 ENGINE - CARRYALL I AND II

7

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016442</u>	CASE, ROCKER	1
2	<u>1016436</u>	GASKET, ROCKER CASE	1
3	<u>1016583</u>	BOLT, FLANGED, M6 x 1 x 35MM	2
4	<u>1016569</u>	O-RING	2
5	<u>1016545</u>	NUT, HEX, M5 x .8	2
6	<u>1016542</u>	SCREW, STUD, M5 x .8	2
7	<u>1016451</u>	ARM, ROCKER	2
8	<u>1016450</u>	COLLET	2
9	<u>1016449</u>	RETAINER, VALVE SPRING	2
10	<u>1016523</u>	SPRING, ENGINE VALVE	2
11	<u>1016431</u>	ASSEMBLY, CYLINDER HEAD, OHV (INCLUDES ITEMS 12 AND 13)	1
12	<u>1016560</u>	RING, SNAP	2
13	<u>1016519</u>	GUIDE, VALVE	2
14	<u>1016479</u>	SEAT, SPRING	2
15	<u>1016566</u>	SEAL, VALVE	2
16	<u>1016448</u>	VALVE, EXHAUST	1
17	<u>1016447</u>	VALVE, INTAKE	1
18	<u>1016544</u>	SCREW, CROSS PAN HEAD SELF-TAPPING, M5 x .8 x 12MM	1
19	<u>1016474</u>	PLATE	1
20	<u>1016483</u>	VALVE	1
21	<u>1016563</u>	PIN	2
22	<u>1016489</u>	BOLT, STUD, M8 x 1.25 x 29MM	2
23	<u>1016452</u>	SHAFT, ROCKER	1
24	<u>1016471</u>	ROD, PUSH	2
25	<u>1016549</u>	WASHER, FLAT, M12	1
26	<u>1016517</u>	CIRCLIP, TYPE-E	1
27	<u>1016458</u>	BOLT, FLANGED, M8 x 1.25 x 45MM	6
28	<u>1016430</u>	GASKET, HEAD	1

FE 290 ENGINE

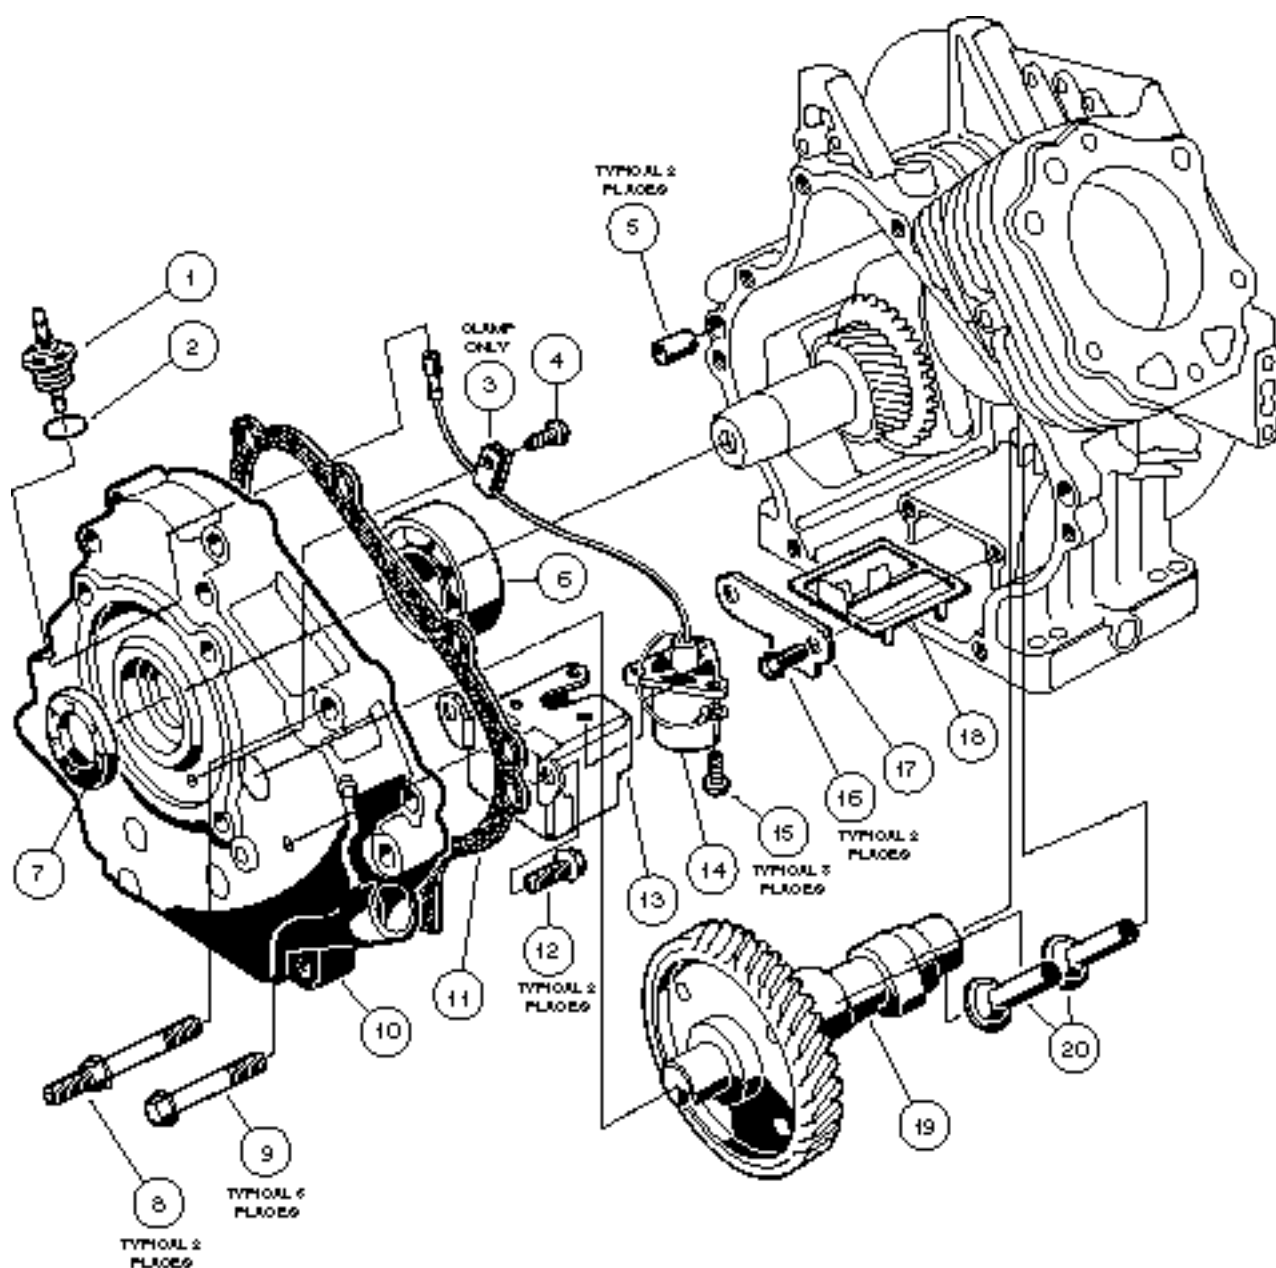


FE 290 ENGINE - CARRYALL I AND II

7

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016535</u>	CONNECTOR, CORD	1
2	<u>1016538</u>	O-RING	1
3	<u>1016506</u>	CLAMP	1
4	<u>1016544</u>	SCREW, CROSS PAN HEAD SELF-TAPPING, M5 x .8 x 12MM	1
5	<u>1016564</u>	PIN	2
6	<u>1016565</u>	BEARING, BALL	1
7	<u>1016567</u>	SEAL, CRANKSHAFT	1
8	<u>1016584</u>	BOLT, 2-ENDED, M8 x 1.25 x 69MM	2
9	<u>1016458</u>	BOLT, FLANGED, M8 x 1.25 x 45MM	6
10	<u>1016520</u>	COVER, CRANKCASE	1
11	<u>1016446</u>	GASKET, CRANKCASE COVER	1
12	<u>1016456</u>	BOLT, FLANGED, M6 x 1 x 12MM	2
13	<u>1016510</u>	BRACKET, OIL LEVEL SWITCH	1
14	<u>1016494</u>	SENSOR, OIL LEVEL	1
15	<u>1016496</u>	SCREW, CROSS PAN HEAD, M4 x .7 x 8MM	3
16	<u>1016454</u>	BOLT, FLANGED, M5 x .8 x 8MM	2
17	<u>1016472</u>	PLATE, OIL FILTER SCREEN	1
18	<u>1016521</u>	SCREEN, OIL FILTER	1
19	<u>1019154-01</u>	CAMSHAFT, COMPLETE	1
20	<u>1016453</u>	TAPPET	2

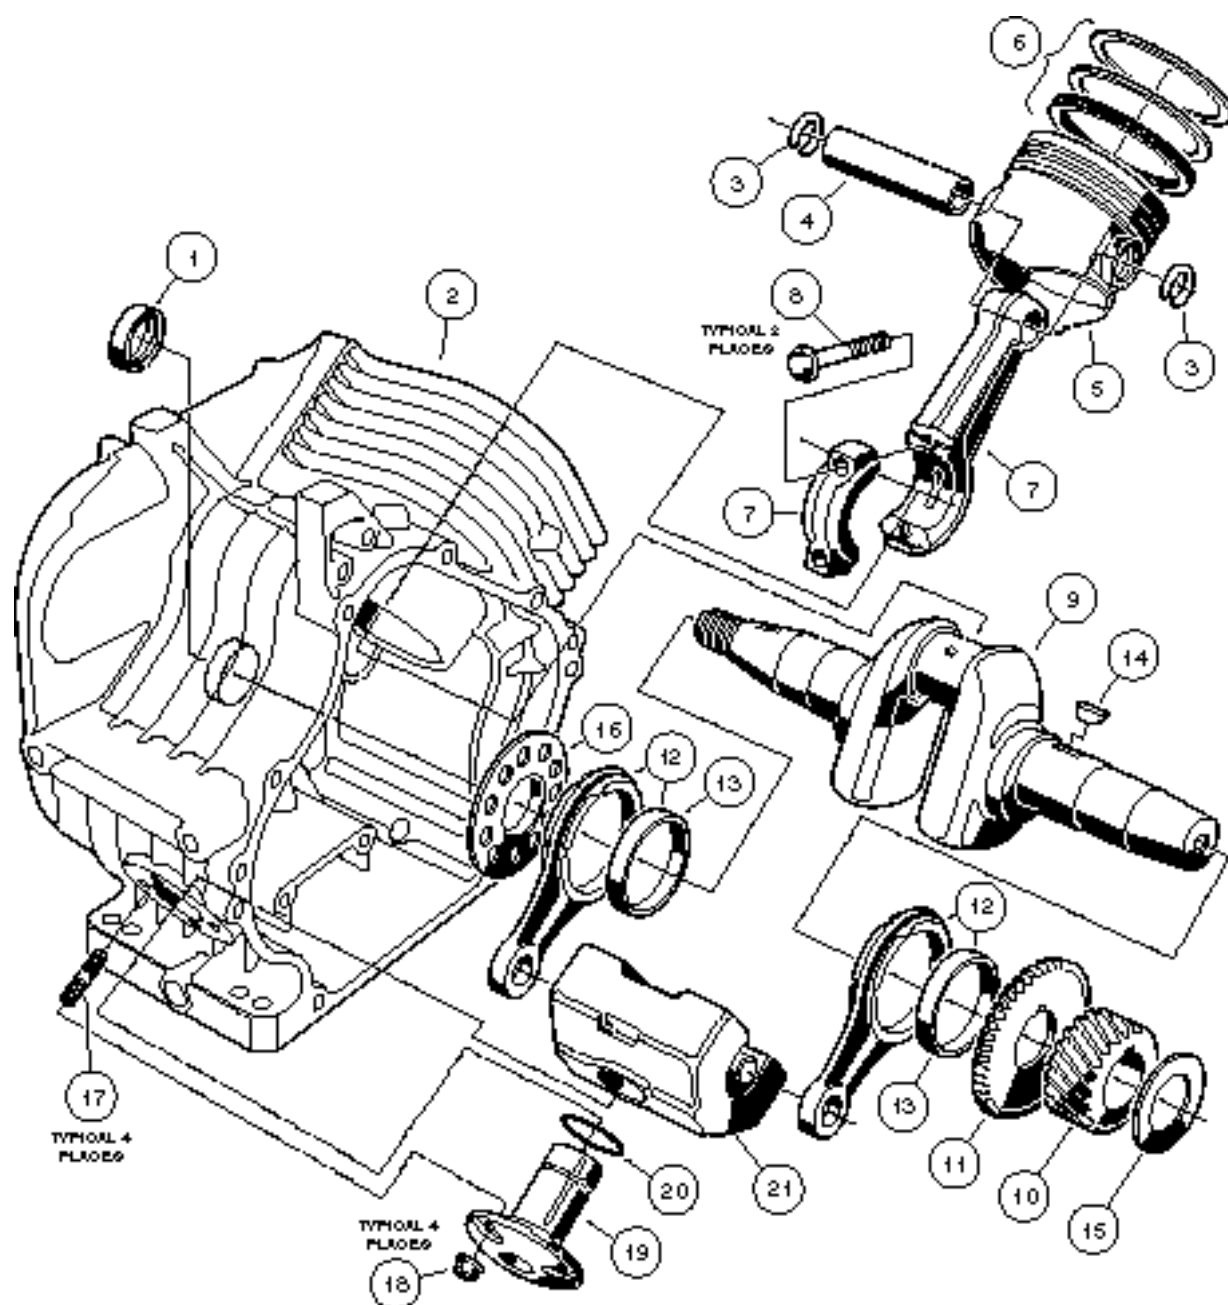



FE 290 ENGINE - CARRYALL I AND II

7

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016568</u>	SEAL, OIL	1
2	<u>1019155-01</u>	CRANKCASE, COMPLETE, OHV (CLOCKWISE ROTATION)	1
3	<u>1016558</u>	RING, SNAP	2
4	<u>1016460</u>	PIN, PISTON	1
5	<u>1016459-01</u>	PISTON, STANDARD	1
5	<u>1016459-02</u>	PISTON, .25MM OVERSIZED	1
5	<u>1016459-03</u>	PISTON, .50MM OVERSIZED	1
6	<u>1016461-01</u>	RING SET, PISTON, STANDARD	1
6	<u>1016461-02</u>	RING SET, PISTON, .25MM OVERSIZED	1
6	<u>1016461-03</u>	RING SET, PISTON, .50MM OVERSIZED	1
7	<u>1016475-01</u>	ASSEMBLY, CONNECTING ROD, STANDARD (INCLUDES 2 EACH OF ITEM 8)	1
7	<u>1016475-02</u>	ASSEMBLY, CONNECTING ROD, .50MM UNDERSIZED (INCLUDES 2 EACH OF ITEM 8)	1
8	<u>1016509</u>	BOLT, HEX HEAD, M7 x 1 x 36MM	2
9	<u>1019223-01</u>	CRANKSHAFT, OHV (INCLUDES ITEMS 10, 11 AND 12)	1
10	<u>1016533</u>	GEAR, HELICAL	1
11	<u>1016532</u>	GEAR, SPUR	1
12	<u>1016516</u>	ASSEMBLY, CONNECTING ROD (INCLUDES ITEM 13)	2
13	<u>1016580</u>	BEARING, PLAIN	2
14	<u>1016562</u>	KEY	1
15	<u>1016550-01</u>	SHIM, CRANKSHAFT, 1.13MM THICK	A/R
15	<u>1016550-02</u>	SHIM, CRANKSHAFT, 1.18MM THICK	A/R
15	<u>1016550-03</u>	SHIM, CRANKSHAFT, 1.23MM THICK	A/R
15	<u>1016550-04</u>	SHIM, CRANKSHAFT, 1.28MM THICK	A/R
15	<u>1016550-05</u>	SHIM, CRANKSHAFT, 1.33MM THICK	A/R
15	<u>1016550-06</u>	SHIM, CRANKSHAFT, 1.38MM THICK	A/R
15	<u>1016550-07</u>	SHIM, CRANKSHAFT, 1.43MM THICK	A/R
15	<u>1016550-08</u>	SHIM, CRANKSHAFT, 1.48MM THICK	A/R
15	<u>1016550-09</u>	SHIM, CRANKSHAFT, 1.53MM THICK	A/R
16	<u>1016559</u>	SPACER	1
17	<u>1016541</u>	BOLT, STUD, M6 x 1 x 22MM	4
18	<u>1016547</u>	NUT, FLANGED, M6 x 1	4
19	<u>1016470</u>	SHAFT, GUIDE COUNTERBALANCE	1
20	<u>1016571</u>	O-RING	1
21	<u>1016469</u>	WEIGHT, COUNTERBALANCE	1

FE 350 ENGINE

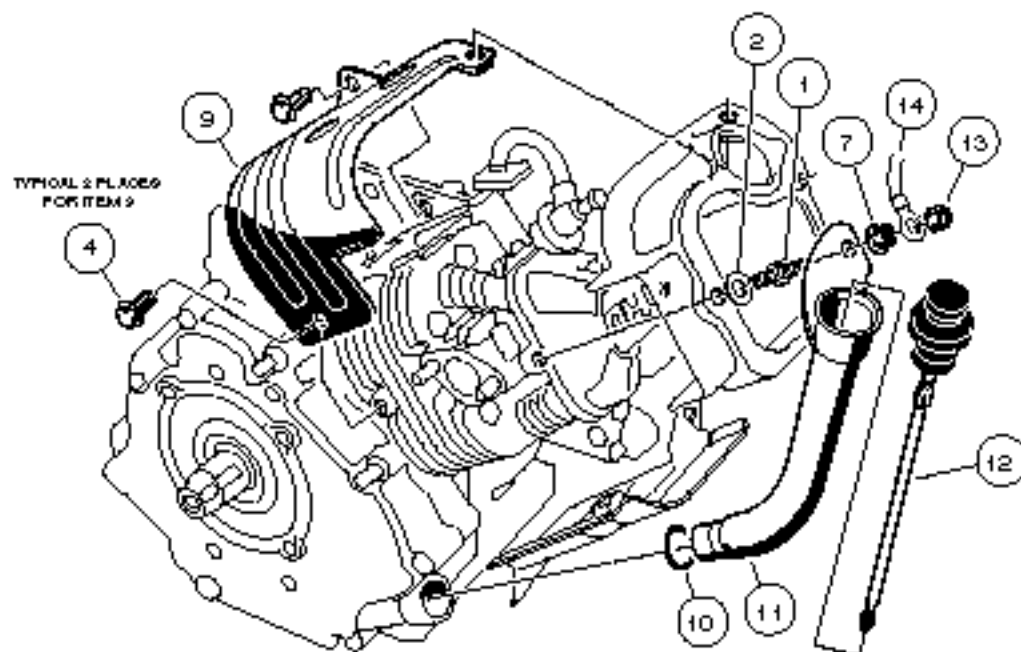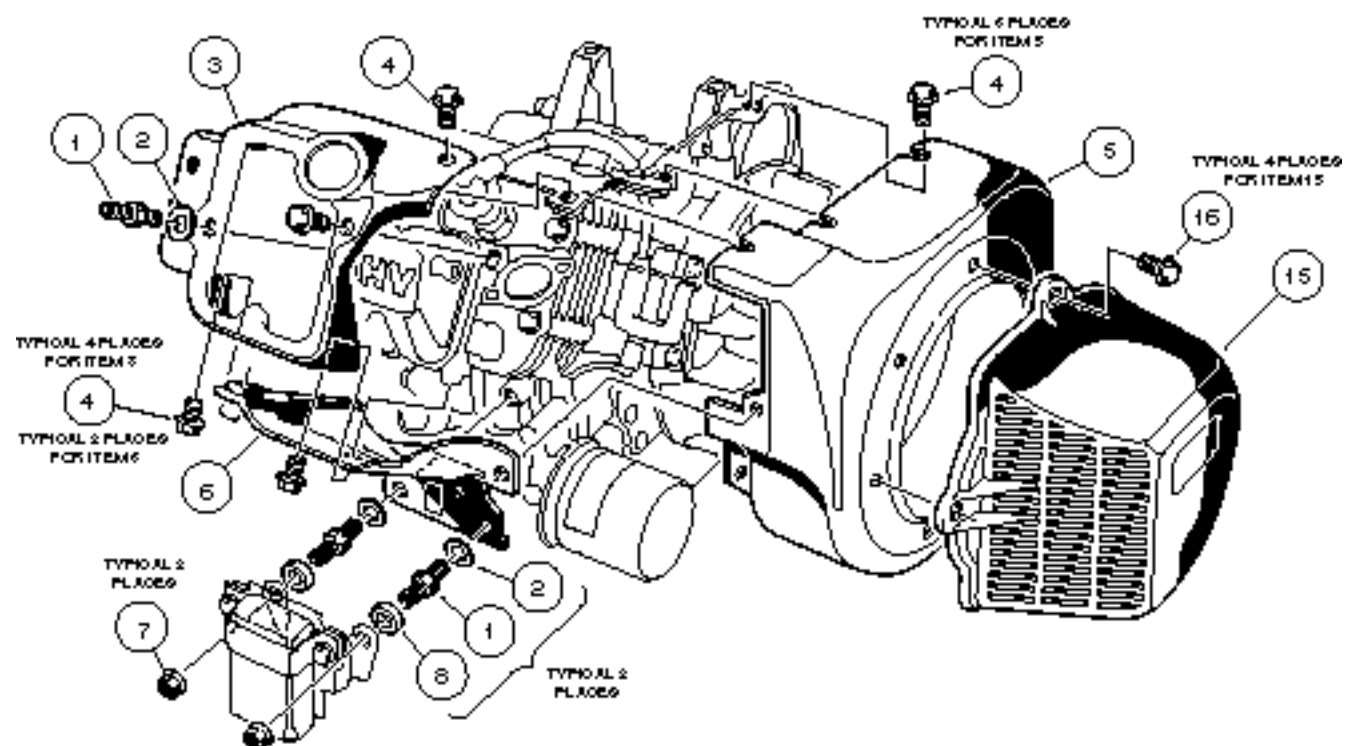


FE 350 ENGINE CARRYALL II PLUS AND VI

7

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
		BEFORE ORDERING FROM THIS PAGE, SEE NOTE ON PAGE ii AT THE BEGINNING OF THIS MANUAL.	
	1018338-01	FE 350 OHV GASOLINE ENGINE, COMPLETE (CLOCKWISE ROTATION) (DOES NOT INCLUDE ITEMS 13 - 16).....	1
1	<u>1016507</u>	SCREW, 2-ENDED, M6 x 1 x 29MM	3
2	<u>1016512</u>	WASHER, FLAT, 6 MM	3
3	<u>1017474</u>	SHROUD, CYLINDER HEAD	1
4	<u>1016456</u>	BOLT, FLANGED, M6 x 1 x 12MM	14
5	<u>1019161-01</u>	HOUSING, FAN	1
6	<u>1017476</u>	SHROUD, LOWER CYLINDER	1
7	<u>1016547</u>	NUT, M6 x 1	3
8	<u>1017500</u>	SPACER	2
9	<u>1017475</u>	SHROUD, UPPER CYLINDER	1
10	<u>1016539</u>	O-RING	1
11	<u>1017486</u>	TUBE, OIL FILLER	1
12	<u>1016531</u>	DIPSTICK	1
13	<u>1011114</u>	NUT, M6 x 1	1
14	<u>1015332</u>	WIRE ASSEMBLY, #10 BLACK	1
15	<u>1015649</u>	SHROUD, FAN	1
16	<u>1015969</u>	SCREW, PAN HEAD, M6 x 1 x 14 MM	4

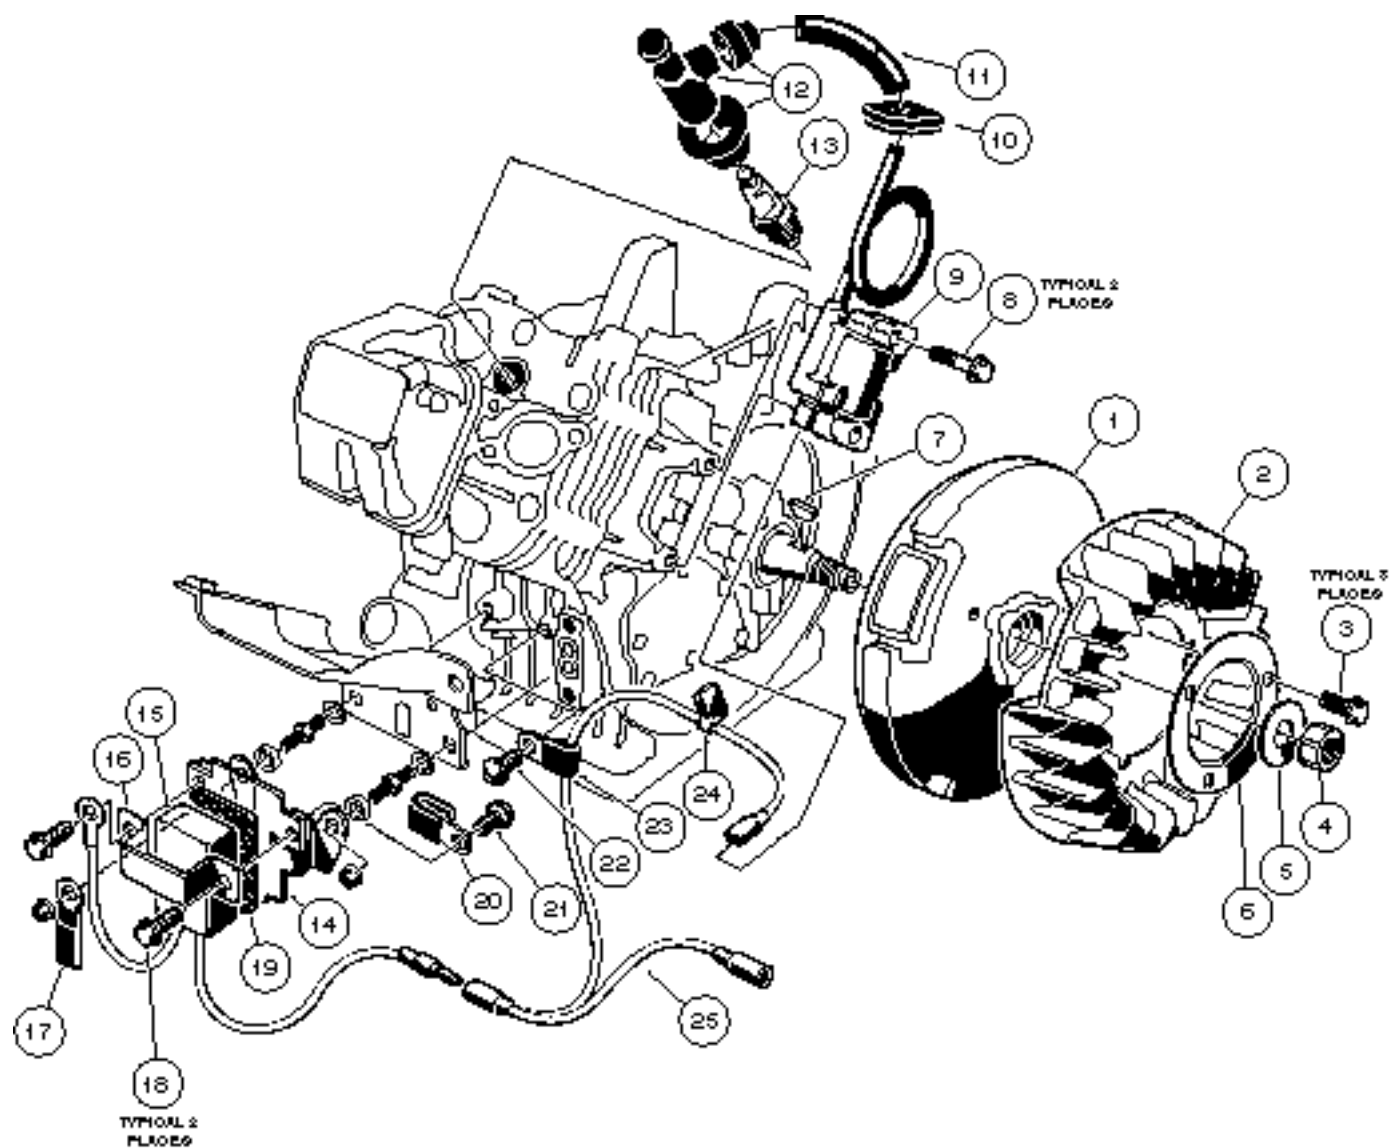


FE 350 ENGINE CARRYALL II PLUS AND VI

7

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4 BEFORE ORDERING FROM THIS PAGE, SEE NOTE ON PAGE ii AT THE BEGINNING OF THIS MANUAL.	
1	<u>1019162-01</u>	FLYWHEEL	1
2	<u>1019163-01</u>	FAN, FLYWHEEL	1
3	<u>1017448</u>	SCREW, FLANGED HEX HEAD, M6 x 1 x 10MM	3
4	<u>1017467</u>	NUT, HEX, 18MM FINE	1
5	<u>1017490</u>	WASHER, FLAT, 18MM	1
6	<u>1017455</u>	PLATE, FLYWHEEL FAN	1
7	<u>1016562</u>	KEY	1
8	<u>1016455</u>	SCREW, HEX HEAD FLANGED, M5 x 0.8 x 25MM	2
9	<u>1019092-01</u>	COIL, IGNITION (WITH INTERNAL IGNITER)	1
10	<u>1016578</u>	GROMMET	1
11	<u>1016588</u>	TUBE, 7MM I.D. x 10MM O.D. x 70MM LG.	1
12	<u>1017463</u>	ASSEMBLY, PLUG CAP	1
13	<u>1018811-01</u>	PLUG, SPARK	1
14	<u>1016445</u>	BRACKET, RPM LIMITER	1
15	<u>1019094-01</u>	LIMITER, RPM	1
16	<u>1016579</u>	BAND, RPM LIMITER MOUNT	1
17	<u>1012981</u>	CLAMP	1
18	<u>1016456</u>	SCREW, FLANGED HEX HEAD, M6 x 1 x 12MM	2
19	<u>1016586</u>	DAMPER	1
20	<u>1019095-01</u>	CLAMP	1
21	<u>1016497</u>	SCREW, CROSS PAN HEAD, M5 x .08 x 8MM	1
22	<u>1016544</u>	SCREW, CROSS PAN HEAD SELF-TAPPING, M5 x 12MM	1
23	<u>1016561</u>	CLAMP	1
24	<u>1016587</u>	CLAMP	1
25	<u>1019093-01</u>	WIRE, LEAD	1

FE 350 ENGINE

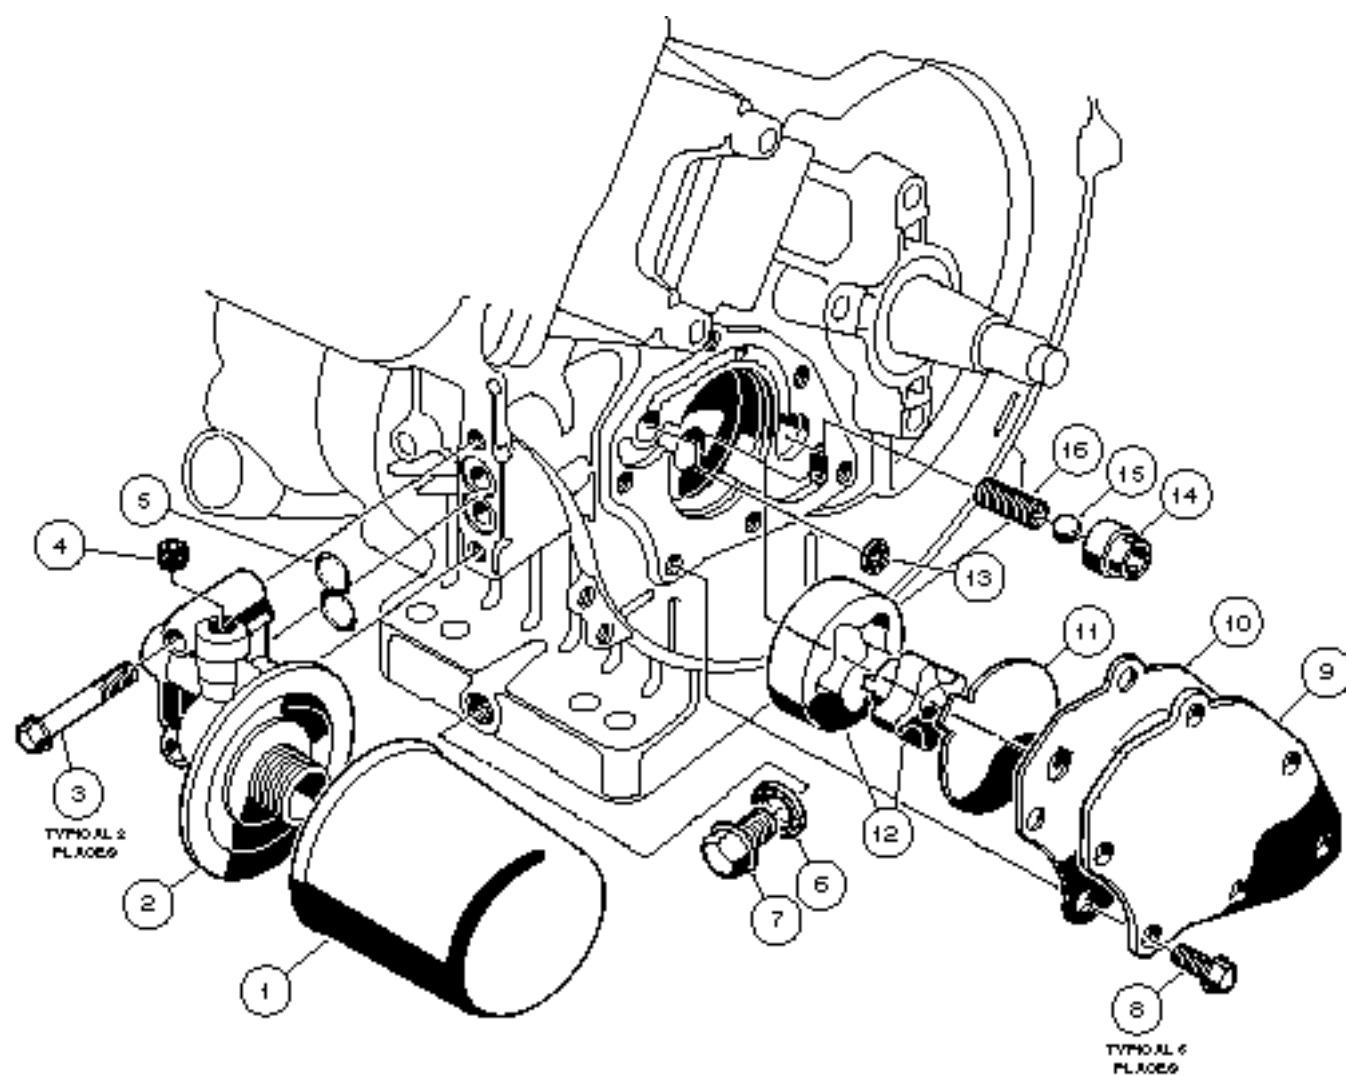


FE 350 ENGINE CARRYALL II PLUS AND VI

7

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4 BEFORE ORDERING FROM THIS PAGE, SEE NOTE ON PAGE ii AT THE BEGINNING OF THIS MANUAL.	
1	<u>1016467</u>	OIL FILTER	1
2	<u>1016502</u>	BRACKET, OIL FILTER	1
3	<u>1016457</u>	BOLT, FLANGED HEX HEAD, M6 x 1 x 40MM	2
4	<u>1017507</u>	PLUG	1
5	<u>1016570</u>	O-RING	1
6	<u>1016432</u>	GASKET, DRAIN PLUG	1
7	<u>1016576</u>	PLUG, DRAIN	1
8	<u>1017456</u>	SCREW, FLANGED HEX HEAD, M6 x 1 x 12MM	6
9	<u>1017460</u>	COVER, PUMP	1
10	<u>1017442</u>	GASKET, OIL PUMP	1
11	<u>1016473</u>	PLATE, OIL PUMP	1
12	<u>1016482-03</u>	PUMP, OIL, AND ROTOR	1
13	<u>1017458</u>	FILTER	1
14	<u>1016429</u>	SEAT, VALVE	1
15	<u>1016537</u>	BALL, STEEL, PRESSURE RELIEF	1
16	<u>1016581</u>	SPRING	1

FE 350 ENGINE

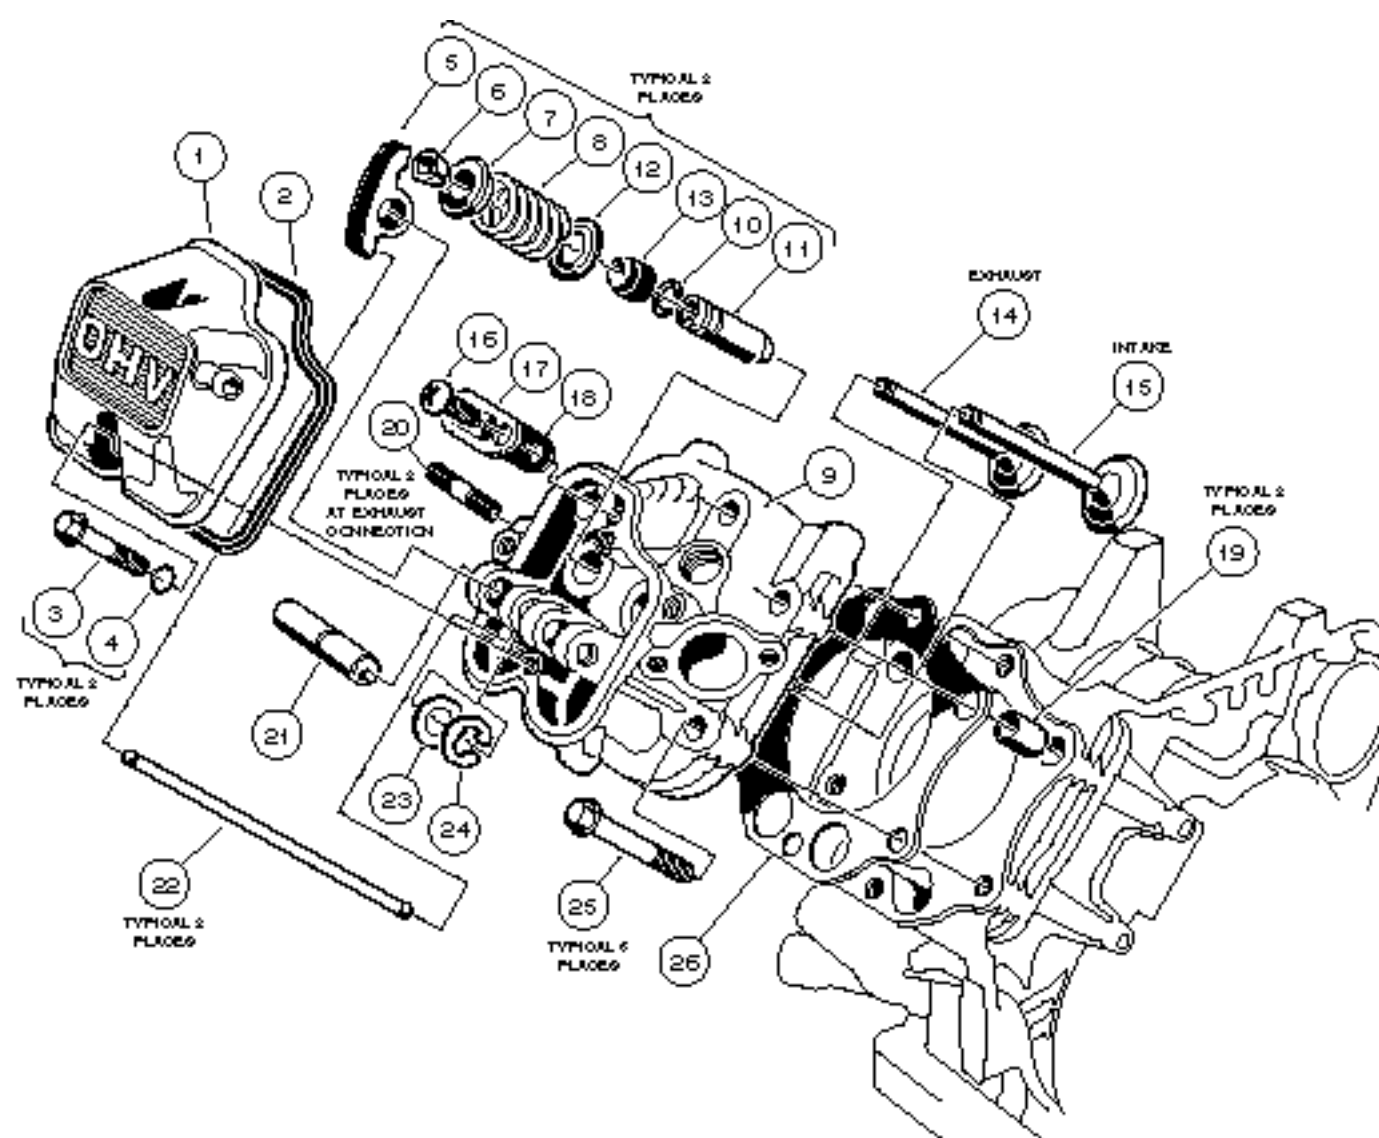


FE 350 ENGINE CARRYALL II PLUS AND VI

7

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4 BEFORE ORDERING FROM THIS PAGE, SEE NOTE ON PAGE ii AT THE BEGINNING OF THIS MANUAL.	
1	<u>1016442</u>	CASE, ROCKER	1
2	<u>1016436</u>	GASKET, ROCKER CASE	1
3	<u>1016583</u>	BOLT, FLANGED, M6 x 1 x 35MM	2
4	<u>1016569</u>	O-RING	2
5	<u>1017446</u>	ARM, ROCKER	2
6	<u>1016450</u>	COLLET	4
7	<u>1016449</u>	RETAINER, VALVE SPRING	2
8	<u>1017473</u>	SPRING, ENGINE VALVE	2
9	<u>1017435</u>	ASSEMBLY, CYLINDER HEAD, FE 350 (INCLUDES ITEMS 10 AND 11)	1
10	<u>1016560</u>	RING, SNAP	2
11	<u>1016519</u>	GUIDE, VALVE	2
12	<u>1016479</u>	SEAT, SPRING	2
13	<u>1016566</u>	SEAL, VALVE	2
14	<u>1017445</u>	VALVE, EXHAUST	1
15	<u>1017444</u>	VALVE, INTAKE	1
16	<u>1016544</u>	SCREW, CROSS PAN HEAD SELF-TAPPING, M5 x .8 x 12MM	1
17	<u>1016474</u>	PLATE	1
18	<u>1016483</u>	VALVE	1
19	<u>1016563</u>	PIN	2
20	<u>1016489</u>	BOLT, STUD, M8 x 1.25 x 29MM	2
21	<u>1016452</u>	SHAFT, ROCKER	1
22	<u>1017454</u>	ROD, PUSH	2
23	<u>1016549</u>	WASHER, FLAT, M12	1
24	<u>1016517</u>	CIRCLIP, TYPE-E	1
25	<u>1016458</u>	BOLT, FLANGED, M8 x 1.25 x 45MM	6
26	<u>1017434</u>	GASKET, HEAD	1

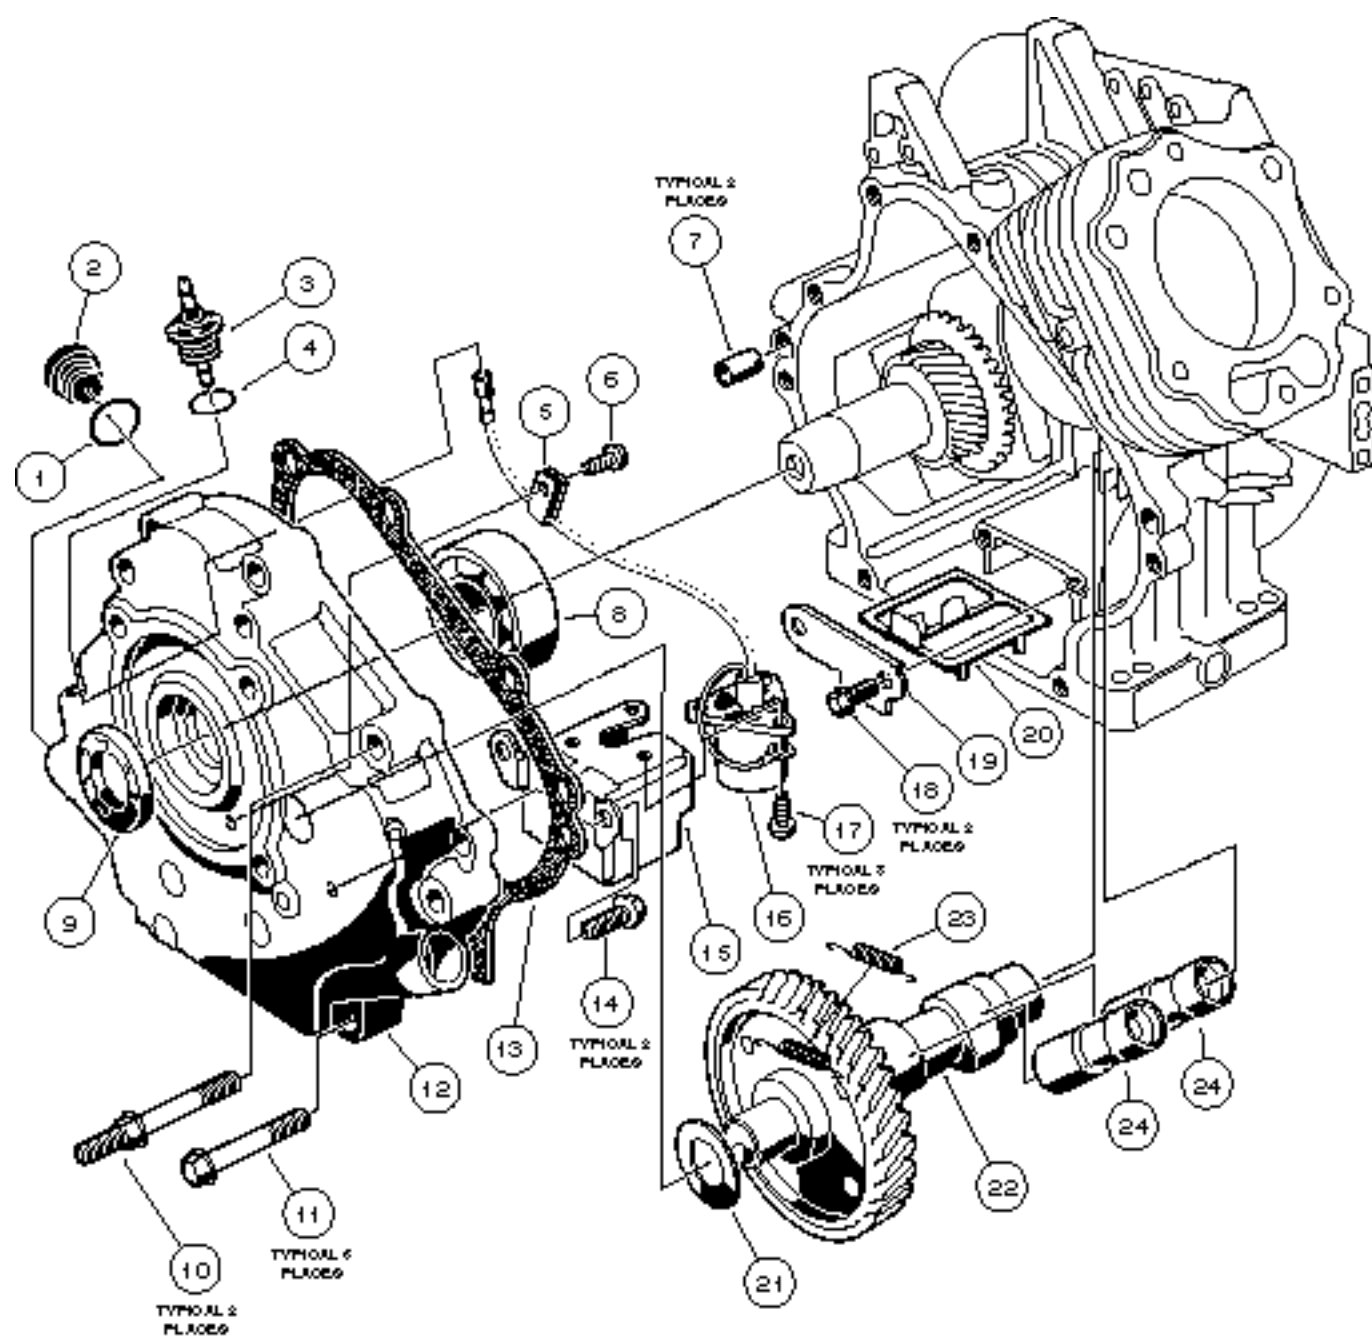


FE 350 ENGINE CARRYALL II PLUS AND VI

7

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
		BEFORE ORDERING FROM THIS PAGE, SEE NOTE ON PAGE ii AT THE BEGINNING OF THIS MANUAL.	
1	<u>1016538</u>	O-RING	1
2	<u>1017508</u>	PLUG	1
3	<u>1016535</u>	CONNECTOR, OIL SENDING UNIT	1
4	<u>1016538</u>	O-RING	1
5	<u>1016506</u>	CLAMP	1
6	<u>1016544</u>	SCREW, CROSS PAN HEAD SELF-TAPPING, M5 x .8 x 12MM	1
7	<u>1016564</u>	PIN	2
8	<u>1017487</u>	BEARING, CRANKSHAFT	1
9	<u>1017504</u>	SEAL, CRANKSHAFT	1
10	<u>1016584</u>	SCREW, 2-ENDED FLANGED, M8 x 1.25 x 69MM	2
11	<u>1017514</u>	BOLT, FLANGED, M8 x 1.25 x 45MM	6
12	<u>1017472</u>	COVER, CRANKCASE	1
13	<u>1017443</u>	GASKET, CRANKCASE COVER	1
14	<u>1017513</u>	BOLT, FLANGED, M6 x 1 x 12MM	2
15	<u>1016510</u>	BRACKET, OIL LEVEL SWITCH	1
16	<u>1016494</u>	SENSOR, OIL LEVEL	1
17	<u>1016496</u>	SCREW, CROSS PAN HEAD, M4 x .7 x 8MM	3
18	<u>1016454</u>	BOLT, FLANGED, M5 x .8 x 8MM	2
19	<u>1016472</u>	PLATE, OIL FILTER SCREEN	1
20	<u>1016521</u>	SCREEN, OIL FILTER	1
21	<u>1017518-01</u>	SHIM, 0.3MM THICK	A/R
21	<u>1017518-02</u>	SHIM, 0.4MM THICK	A/R
21	<u>1017518-03</u>	SHIM, 0.5MM THICK	A/R
22	<u>1019159-01</u>	CAMSHAFT, FE 350 (INCLUDES ITEM 23)	1
23	<u>1017511</u>	SPRING	1
24	<u>1017447</u>	LIFTER, HYDRAULIC	2

FE 350 ENGINE

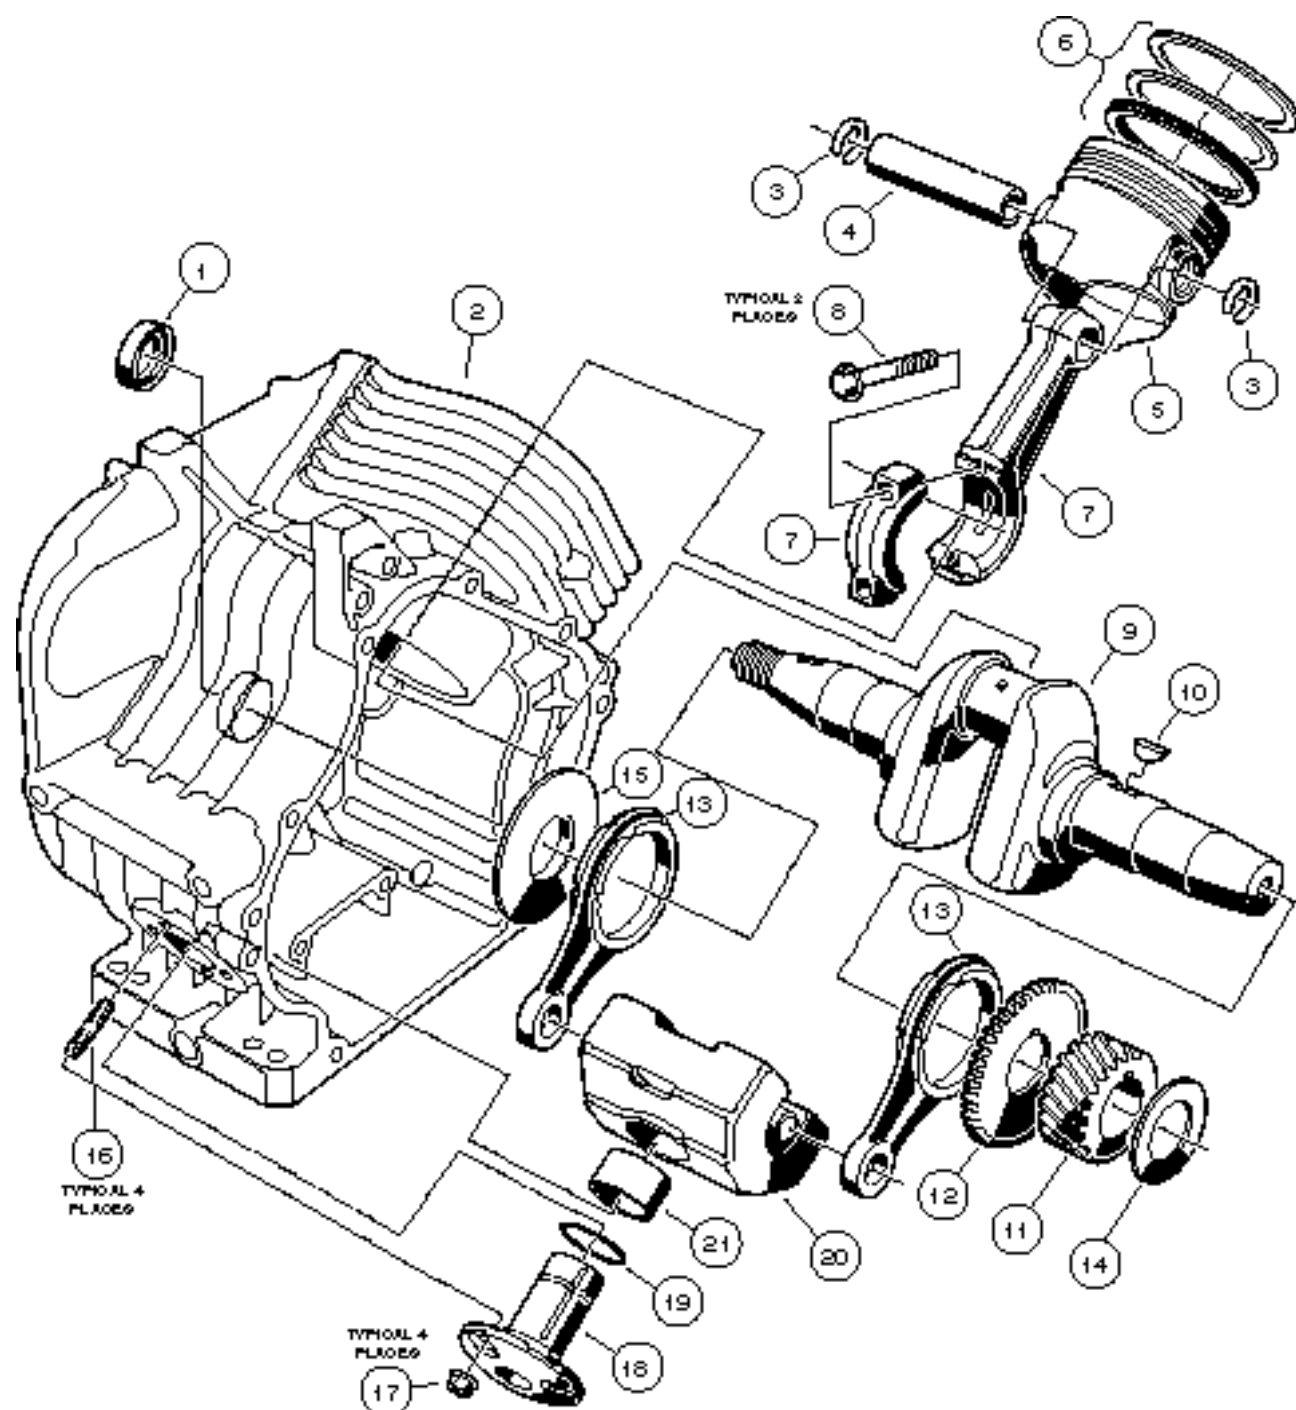


FE 350 ENGINE CARRYALL II PLUS AND VI

7

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
		BEFORE ORDERING FROM THIS PAGE, SEE NOTE ON PAGE ii AT THE BEGINNING OF THIS MANUAL.	
1	<u>1017503</u>	SEAL, OIL	1
2	<u>1019160-01</u>	CRANKCASE, COMPLETE, FE 350 (CLOCKWISE ROTATION)	1
3	<u>1017502</u>	RING, SNAP	2
4	<u>1017450</u>	PIN, PISTON	1
5	<u>1017449-01</u>	PISTON, STANDARD	1
5	<u>1017449-02</u>	PISTON, .50MM OVERSIZED	1
6	<u>1017451-01</u>	RING SET, PISTON, STANDARD	1
6	<u>1017451-02</u>	RING SET, PISTON, .50MM OVERSIZED	1
7	<u>1017457-01</u>	ASSEMBLY, CONNECTING ROD, STANDARD (INCLUDES 2 EACH OF ITEM 8)	1
7	<u>1017457-02</u>	ASSEMBLY, CONNECTING ROD, .50MM UNDERSIZED) (INCLUDES 2 EACH OF ITEM 8)	1
8	<u>1017512</u>	BOLT, HEX HEAD, M7 x 1 x 36MM	2
9	<u>1019223-02</u>	CRANKSHAFT, COMPLETE, FE 350 (INCLUDES ITEMS 10 - 13)	1
10	<u>1016562</u>	KEY	1
11	<u>1017484</u>	GEAR, HELICAL	1
12	<u>1017483</u>	GEAR, SPUR	1
13	<u>1017471</u>	ROD	2
14	<u>1017733-01</u>	SHIM, CRANKSHAFT, 1.18MM THICK	A/R
14	<u>1017733-02</u>	SHIM, CRANKSHAFT, 1.25MM THICK	A/R
14	<u>1017733-03</u>	SHIM, CRANKSHAFT, 1.32MM THICK	A/R
14	<u>1017733-04</u>	SHIM, CRANKSHAFT, 1.39MM THICK	A/R
14	<u>1017733-05</u>	SHIM, CRANKSHAFT, 1.46MM THICK	A/R
14	<u>1017733-06</u>	SHIM, CRANKSHAFT, 1.53MM THICK	A/R
14	<u>1017733-07</u>	SHIM, CRANKSHAFT, 1.60MM THICK	A/R
14	<u>1017733-08</u>	SHIM, CRANKSHAFT, 1.67MM THICK	A/R
14	<u>1017733-09</u>	SHIM, CRANKSHAFT, 1.74MM THICK	A/R
14	<u>1017733-10</u>	SHIM, CRANKSHAFT, 1.11MM THICK	A/R
14	<u>1017733-11</u>	SHIM, CRANKSHAFT, 1.81MM THICK	A/R
15	<u>1017501</u>	SPACER	1
16	<u>1016541</u>	BOLT, STUD, M6 x 1 x 22MM	4
17	<u>1016547</u>	NUT, FLANGED, M6 x 1	4
18	<u>1016470</u>	SHAFT, GUIDE COUNTERBALANCE	1
19	<u>1016571</u>	O-RING	1
20	<u>1017453</u>	WEIGHT, COUNTERBALANCE (INCLUDES ITEM 21)	1
21	<u>1017510</u>	BEARING	1

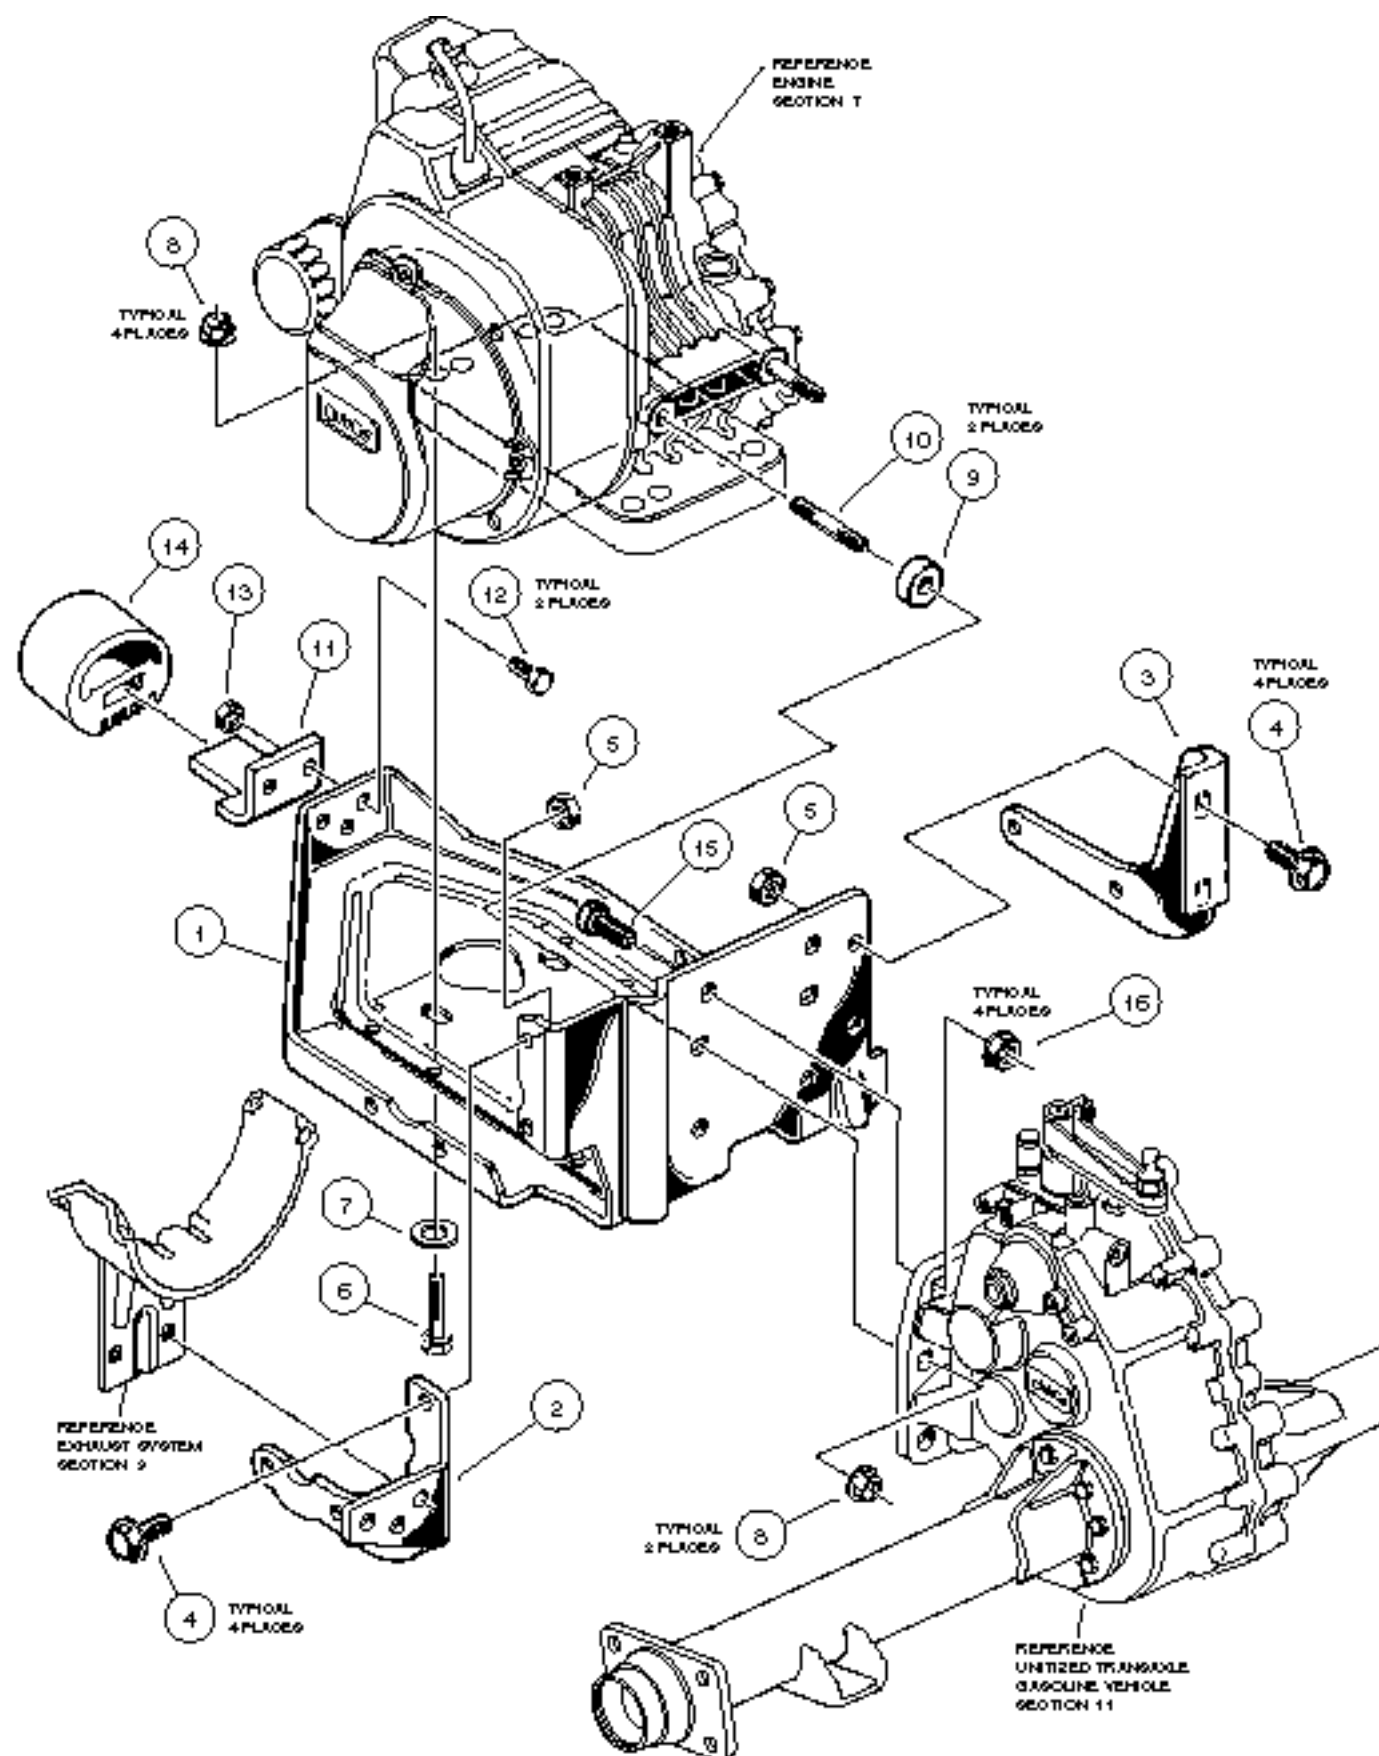


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
		BEFORE ORDERING FROM THIS PAGE, SEE NOTE ON PAGE ii AT THE BEGINNING OF THIS MANUAL.	
1	<u>1018271-01</u>	PLATE, MOUNTING	1
2	<u>1018327-01</u>	STIFFENER, FLYWHEEL SIDE	1
3	<u>1018326-01</u>	STIFFENER, DRIVE CLUTCH SIDE	1
4	<u>1018848-01</u>	SCREW, HEX HEAD, 5/16 - 24 x 7/8	8
5	<u>1013924</u>	NUT, HEX LOCK, CONE, 5/16 - 24	8
6	<u>1018559-01</u>	SCREW, HEX HEAD CAP, M8 x 1.25 x 43MM	4
7	1012571	WASHER, HEAVY FLAT, 5/16	4
8	1018330-01	NUT, FLANGE, M8 x 1.25	6
9	<u>1018321-01</u>	SPACER	2
10	<u>1018332-01</u>	STUD, M8 x 1.25	2
11	<u>1018346-01</u>	BRACKET, SNUBBER	1
12	1018347-01	SCREW, HEX HEAD CAP, 5/16 - 18 x 7/8	2
13	0007473	NUT, NYLON LOCK, 5/16 - 18	2
14	1012164	SNUBBER	1
15	<u>1018333-01</u>	SCREW, HEX HEAD CAP, M10 x 1.25 x 30MM	4
16	<u>1018329-01</u>	NUT, FLANGE, M10 x 1.25	4


FUEL, INTAKE, AND GOVERNOR SYSTEMS

8

G

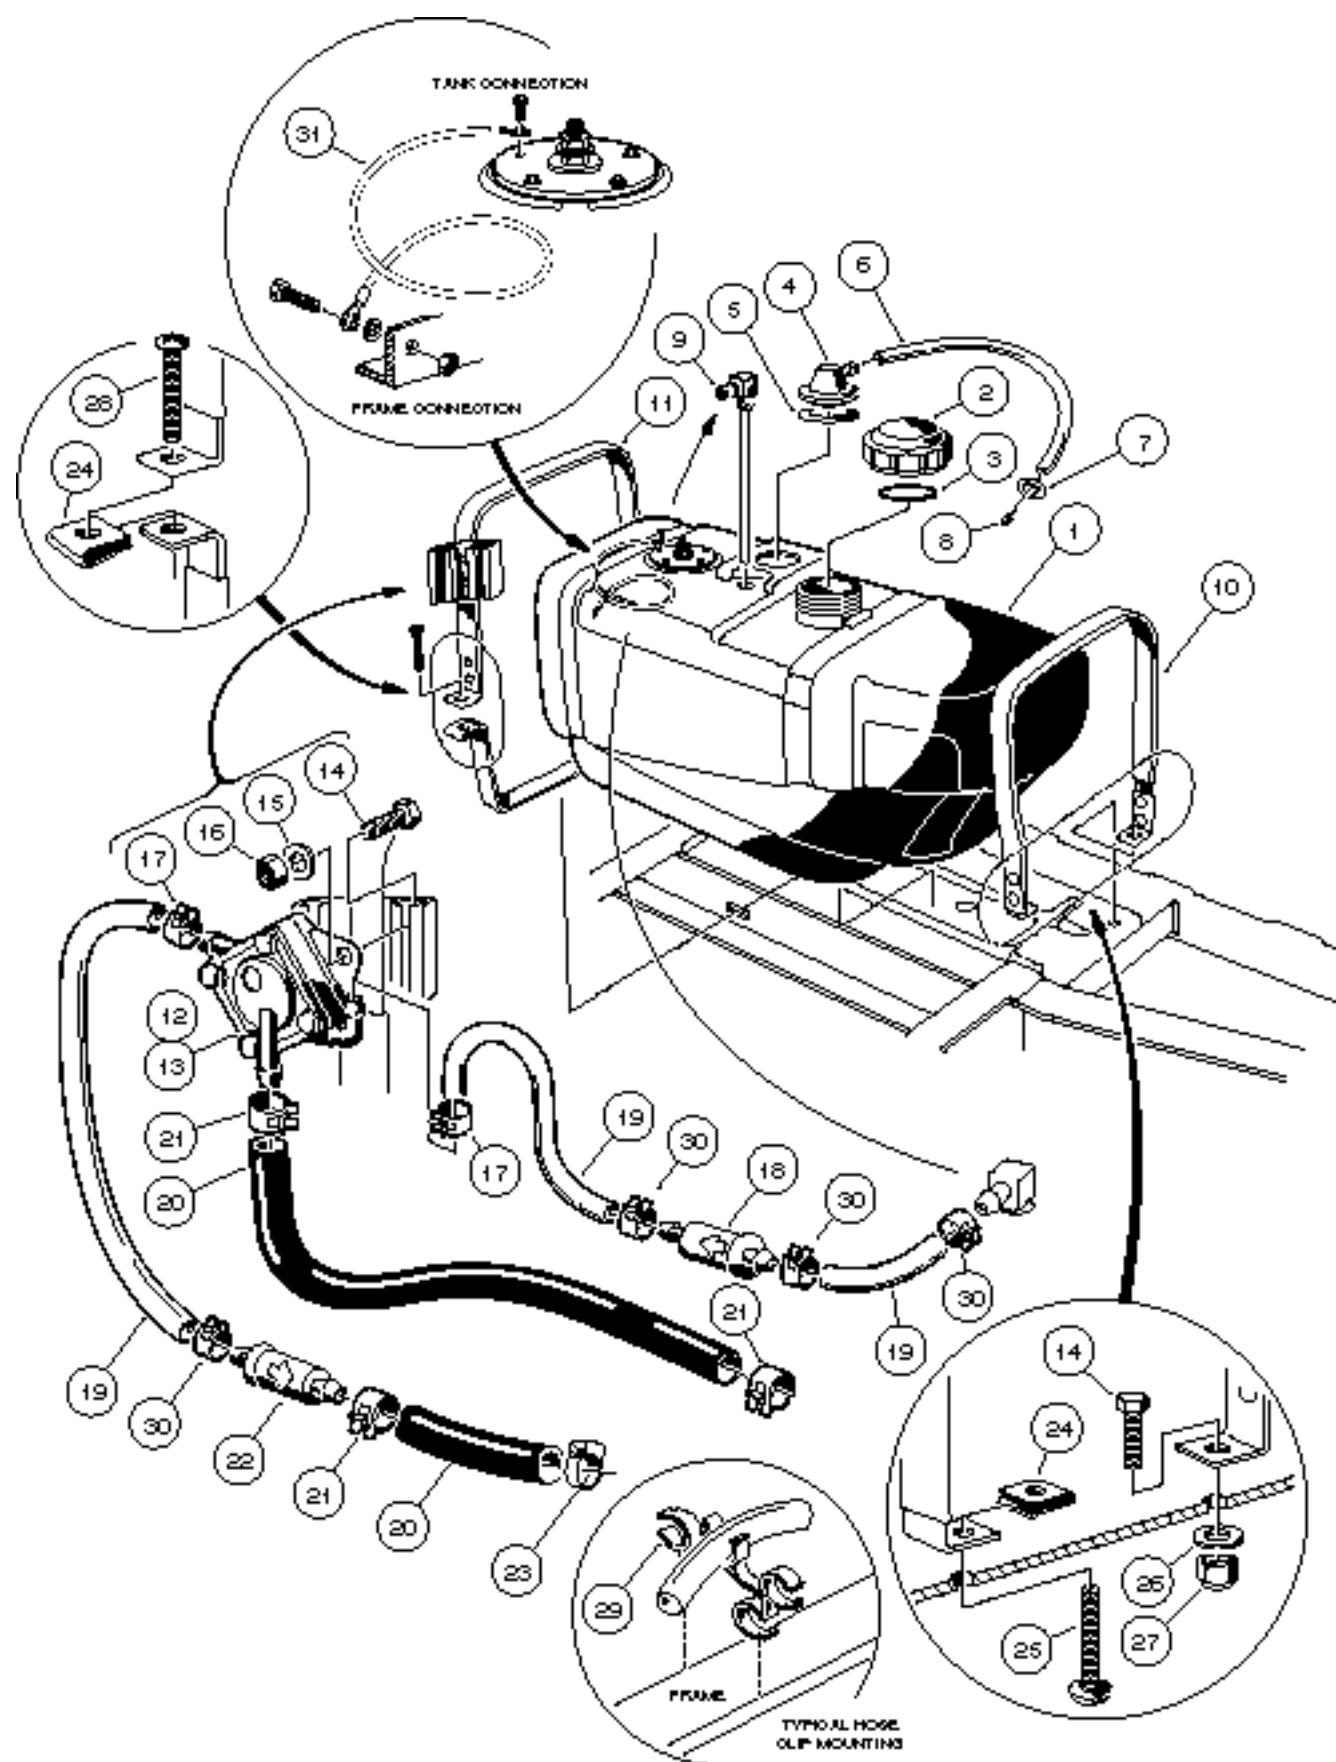

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016004	KIT, FUEL TANK, WITH SENDING UNIT (INCLUDES ITEMS 2 - 9)	1
2	<u>1015188</u>	CAP, FUEL TANK, NONVENTED (INCLUDES GASKET)	1
3	<u>1014535</u>	GASKET, FUEL CAP	1
4	<u>1015143</u>	ASSEMBLY, FUEL TANK VENT	1
5	<u>1015139</u>	GROMMET, INSULATION	1
6	<u>1015137</u>	LINE, BULK (FUEL TANK VENT)	A/R
7	<u>1016059</u>	CLIP, STUD	1
8	<u>1018244-01</u>	BARB, VENT	1
9	1012619	TUBE, FUEL PICK-UP	1
10	<u>1014928</u>	ASSEMBLY, REAR FUEL STRAP	1
11	<u>1014927</u>	ASSEMBLY, FRONT FUEL STRAP	1
12	<u>1014523</u>	PUMP, FUEL IMPULSE, SQUARE BODY	1
13	<u>1014524</u>	PUMP, FUEL IMPULSE, SQUARE BODY REBUILD KIT	1
14	0007847	SCREW, HEX HEAD CAP, 1/4 - 20 x 3/4	3
15	0000451	WASHER, LOCK, 1/4	2
16	0001028	NUT, HEX, 1/4 - 20	2
17	<u>1013134-01</u>	CLAMP, HOSE (BLACK)	2
18	1013684	FILTER , PRIMARY FUEL (WHITE)	1
19	<u>1012293</u>	LINE, BULK FUEL (YELLOW)	A/R
20	<u>1013692</u>	LINE, BULK FUEL (BLACK)	A/R
21	<u>1012649</u>	CLAMP, HOSE (RED)	3
22	1014522	FILTER, SECONDARY FUEL (BLUE)	1
23	<u>1013687</u>	CLAMP, HOSE, 3/8	1
24	<u>1014116</u>	NUT, U-TYPE SPEED, 1/4 - 20	2
25	<u>1013176</u>	SCREW, PHILLIPS TRUSS HEAD, 1/4 - 20 x 2 1/2	1
26	0000332	WASHER, FLAT, 1/4	1
27	0008233	NUT, NYLON LOCK, 1/4 - 20	1
28	<u>1011988</u>	SCREW, PHILLIPS TRUSS HEAD, 1/4 - 20 x 2	1
29	1016666	CLIP, BLACK FUEL (QUANTITY OF 4 FOR CARRYALL II AND II PLUS VEHICLES)	2
30	<u>1013134-02</u>	CLAMP, HOSE (GREEN)	4
31	1015921	WIRE ASSEMBLY, #16 BLACK	1
	<u>1015014</u>	KIT, FUEL TANK SERVICE (INCLUDES ITEMS 10, 11, 14, 15, 16, 19, 20, 24, 26, 27 AND 28)	1

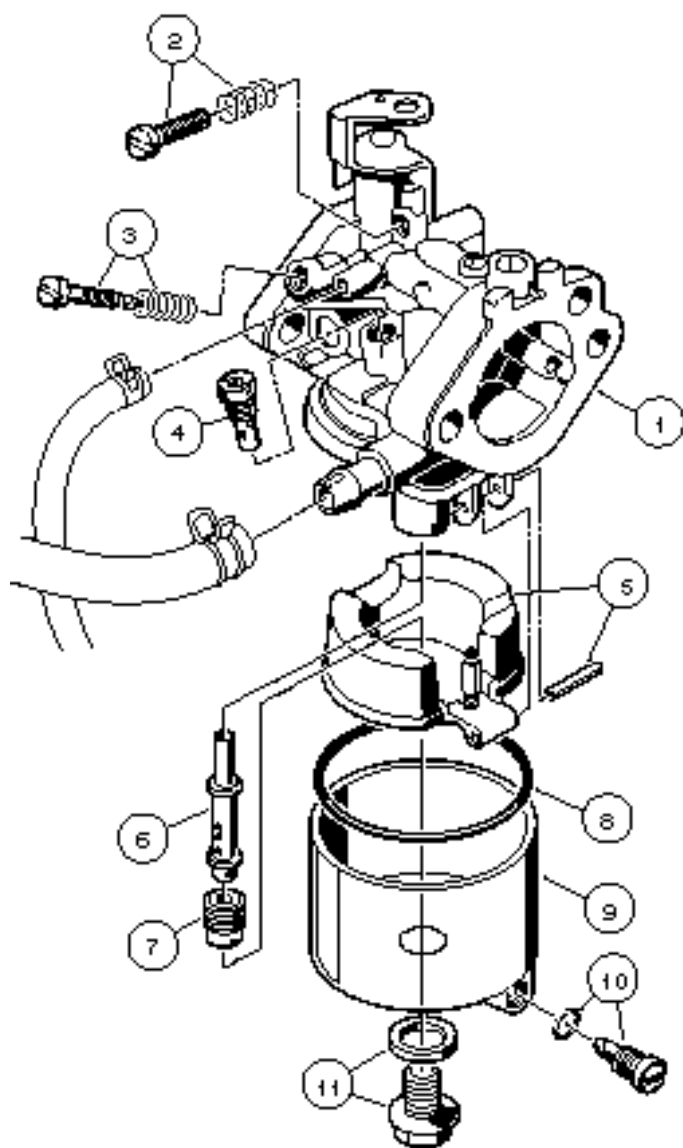


CARBURETOR ASSEMBLY, FE 290 CARRYALL I AND II

8

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016478</u>	ASSEMBLY, CARBURETOR (INCLUDES ITEMS 2 - 11)	1
2	<u>1016501</u>	ASSEMBLY, IDLE SCREW	1
3	<u>1016500</u>	ASSEMBLY, PILOT AIR SCREW	1
4	<u>1016574</u>	JET, PILOT, #45	1
5	<u>1016486</u>	ASSEMBLY, FLOAT	1
6	<u>1016530</u>	NOZZLE, MAIN	1
		STANDARD JETTING:	
7	<u>1016425-80</u>	JET, MAIN, 0 - 3,000 FEET	A/R
7	<u>1016425-78</u>	JET, MAIN, 3,000 - 5,000 FEET	A/R
7	<u>1016425-75</u>	JET, MAIN, 5,000 - 8,000 FEET	A/R
7	<u>1016425-72</u>	JET, MAIN, 8,000 - 10,000 FEET	A/R
7	<u>1016425-70</u>	JET, MAIN, 10,000 FEET AND ABOVE	A/R
		BEST COLD STARTING:	
7	<u>1016425-82</u>	JET, MAIN, 0 - 3,000 FEET	A/R
7	<u>1016425-80</u>	JET, MAIN, 3,000 - 5,000 FEET	A/R
7	<u>1016425-78</u>	JET, MAIN, 5,000 - 8,000 FEET	A/R
7	<u>1016425-75</u>	JET, MAIN, 8,000 - 10,000 FEET	A/R
7	<u>1016425-72</u>	JET, MAIN, 10,000 FEET AND ABOVE	A/R
8	<u>1016437</u>	GASKET, FLOAT CHAMBER	1
9	<u>1016487</u>	ASSEMBLY, FLOAT CHAMBER (INCLUDES ITEM 10)	1
10	<u>1016499</u>	ASSEMBLY, SCREW	1
11	<u>1016585</u>	ASSEMBLY, BOLT	1

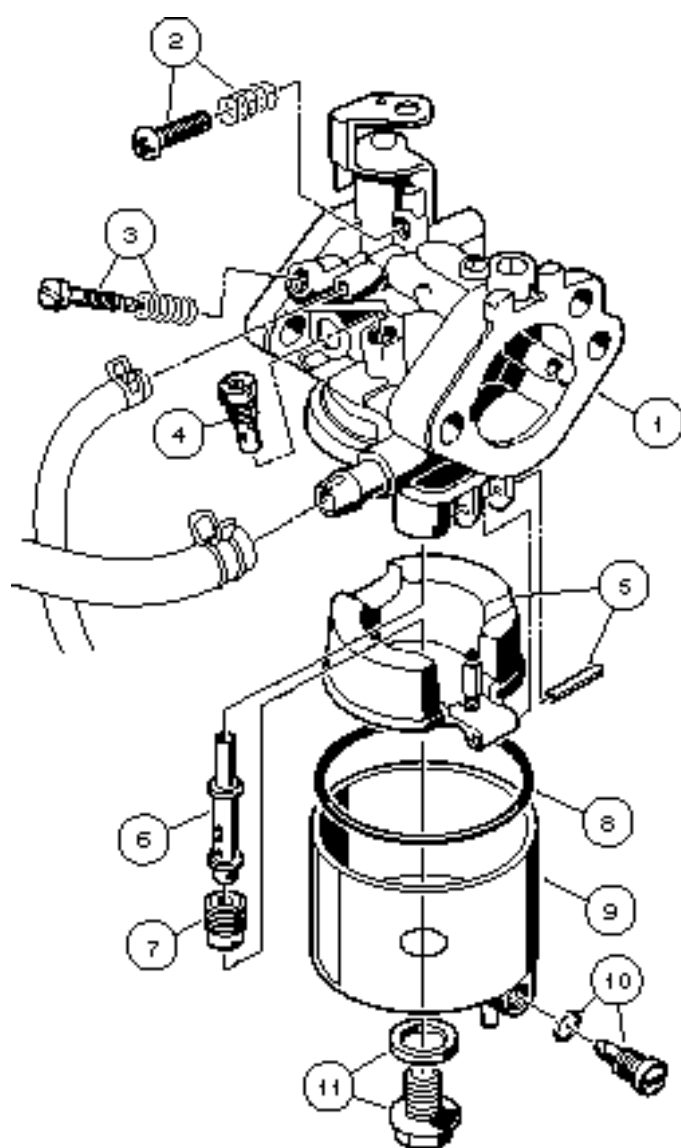


CARBURETOR ASSEMBLY, FE 350 CARRYALL II PLUS AND VI

8

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1017459	ASSEMBLY, CARBURETOR (INCLUDES ITEMS 2 - 11)	1
2	<u>1017465</u>	ASSEMBLY, IDLE SCREW	1
3	<u>1016500</u>	ASSEMBLY, PILOT AIR SCREW	1
4	<u>1016574</u>	JET, PILOT, #45	1
5	1016486	ASSEMBLY, FLOAT	1
6	<u>1017480</u>	NOZZLE, MAIN	1
7	<u>1016425-92</u>	JET, MAIN, 0 - 3000 FEET	A/R
7	<u>1016425-90</u>	JET, MAIN, 3000 - 5000 FEET	A/R
7	<u>1016425-88</u>	JET, MAIN, 5000 - 8000 FEET	A/R
7	<u>1016425-85</u>	JET, MAIN, 8000 - 10,000 FEET	A/R
7	<u>1016425-82</u>	JET, MAIN, 10,000 FEET AND HIGHER	A/R
8	<u>1016437</u>	GASKET, FLOAT CHAMBER	1
9	<u>1017461</u>	ASSEMBLY, FLOAT CHAMBER (INCLUDES ITEM 10)	1
10	<u>1016499</u>	ASSEMBLY, SCREW	1
11	1016585	ASSEMBLY, BOLT	1

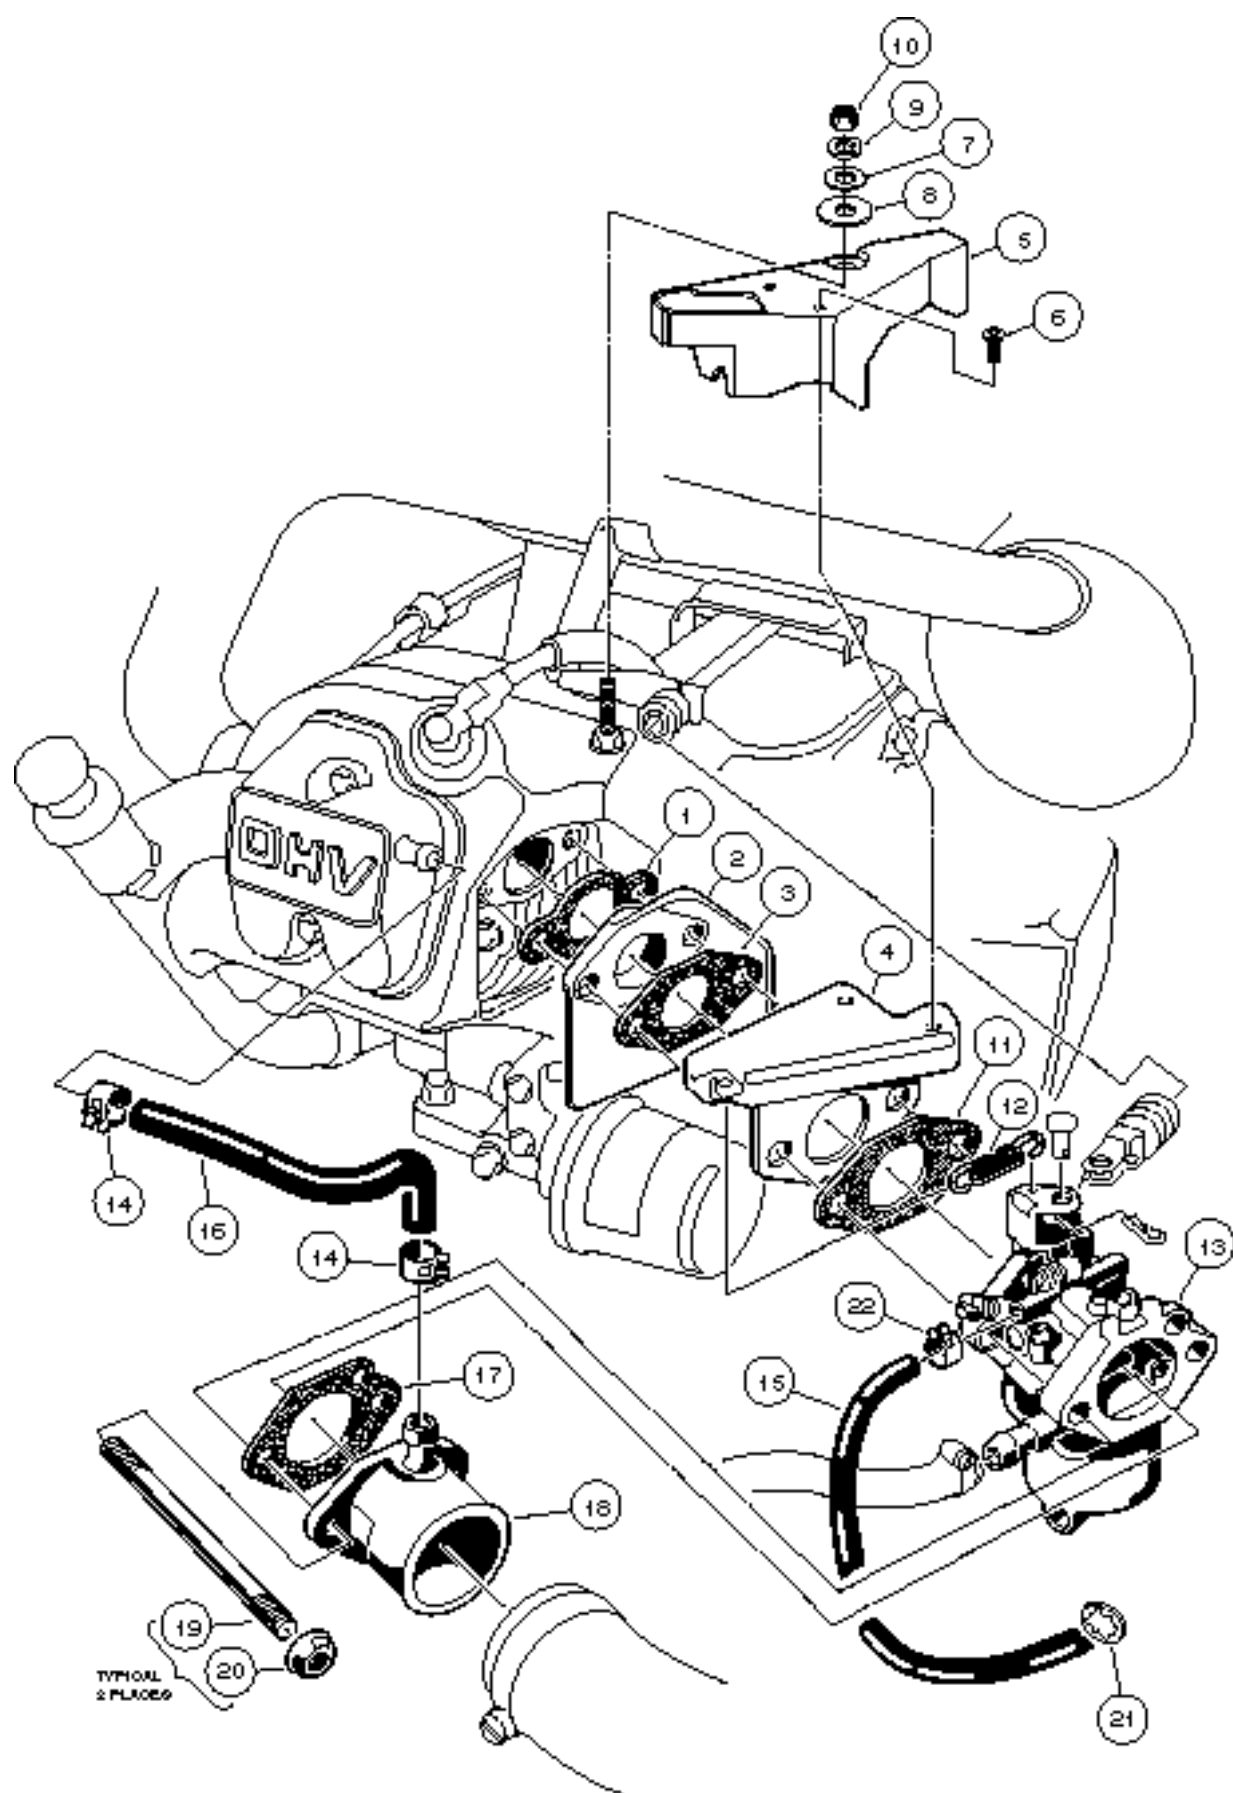


CARBURETOR INSTALLATION

8

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016440</u>	GASKET, INSULATOR	1
2	<u>1016481</u>	INSULATOR, CARBURETOR	1
3	<u>1016439</u>	GASKET, CARBURETOR INSULATOR TO THROTTLE BRACKET	1
4	<u>1016444</u>	BRACKET, THROTTLE	1
5	1018202-01	GUARD, GOVERNOR (CARRYALL I AND II)	1
6	<u>1016103</u>	SCREW, PAN/TORX HEAD SELF-TAPPING, #6 - 32 x 1/4 (CARRYALL I AND II)	2
7	0000332	WASHER, FLAT, 1/4 (CARRYALL I AND II)	1
8	0000334	WASHER, FLAT, 3/8 (CARRYALL I AND II)	1
9	0000451	WASHER, LOCK, 1/4 (CARRYALL I AND II)	1
10	<u>1018876-01</u>	NUT, NYLON LOCK, M6 x 1 (CARRYALL I AND II)	1
11	<u>1016441</u>	GASKET, THROTTLE BRACKET TO CARBURETOR	1
12	<u>1016582</u>	SPRING, THROTTLE RETURN	1
13	<u>1016478</u>	ASSEMBLY, CARBURETOR (FOR CARRYALL I AND II)	1
13	1017459	ASSEMBLY, CARBURETOR (FOR CARRYALL II PLUS AND VI)	1
14	<u>1017466</u>	CLAMP, HOSE	2
15	1015877-01	TUBE, AIR VENT	1
16	<u>1016572</u>	TUBE, CRANKCASE VENT	1
17	<u>1016438</u>	GASKET, CARBURETOR TO INTAKE MANIFOLD	1
18	1016480	PIPE, INTAKE	1
19	<u>1016490</u>	SCREW, 2-ENDED STUD, M6 x 1 x 92MM	2
20	1016547	NUT, FLANGED, M6 x 1	2
21	<u>1016059</u>	CLIP, STUD	1
22	<u>1013746</u>	CLAMP, HOSE	1

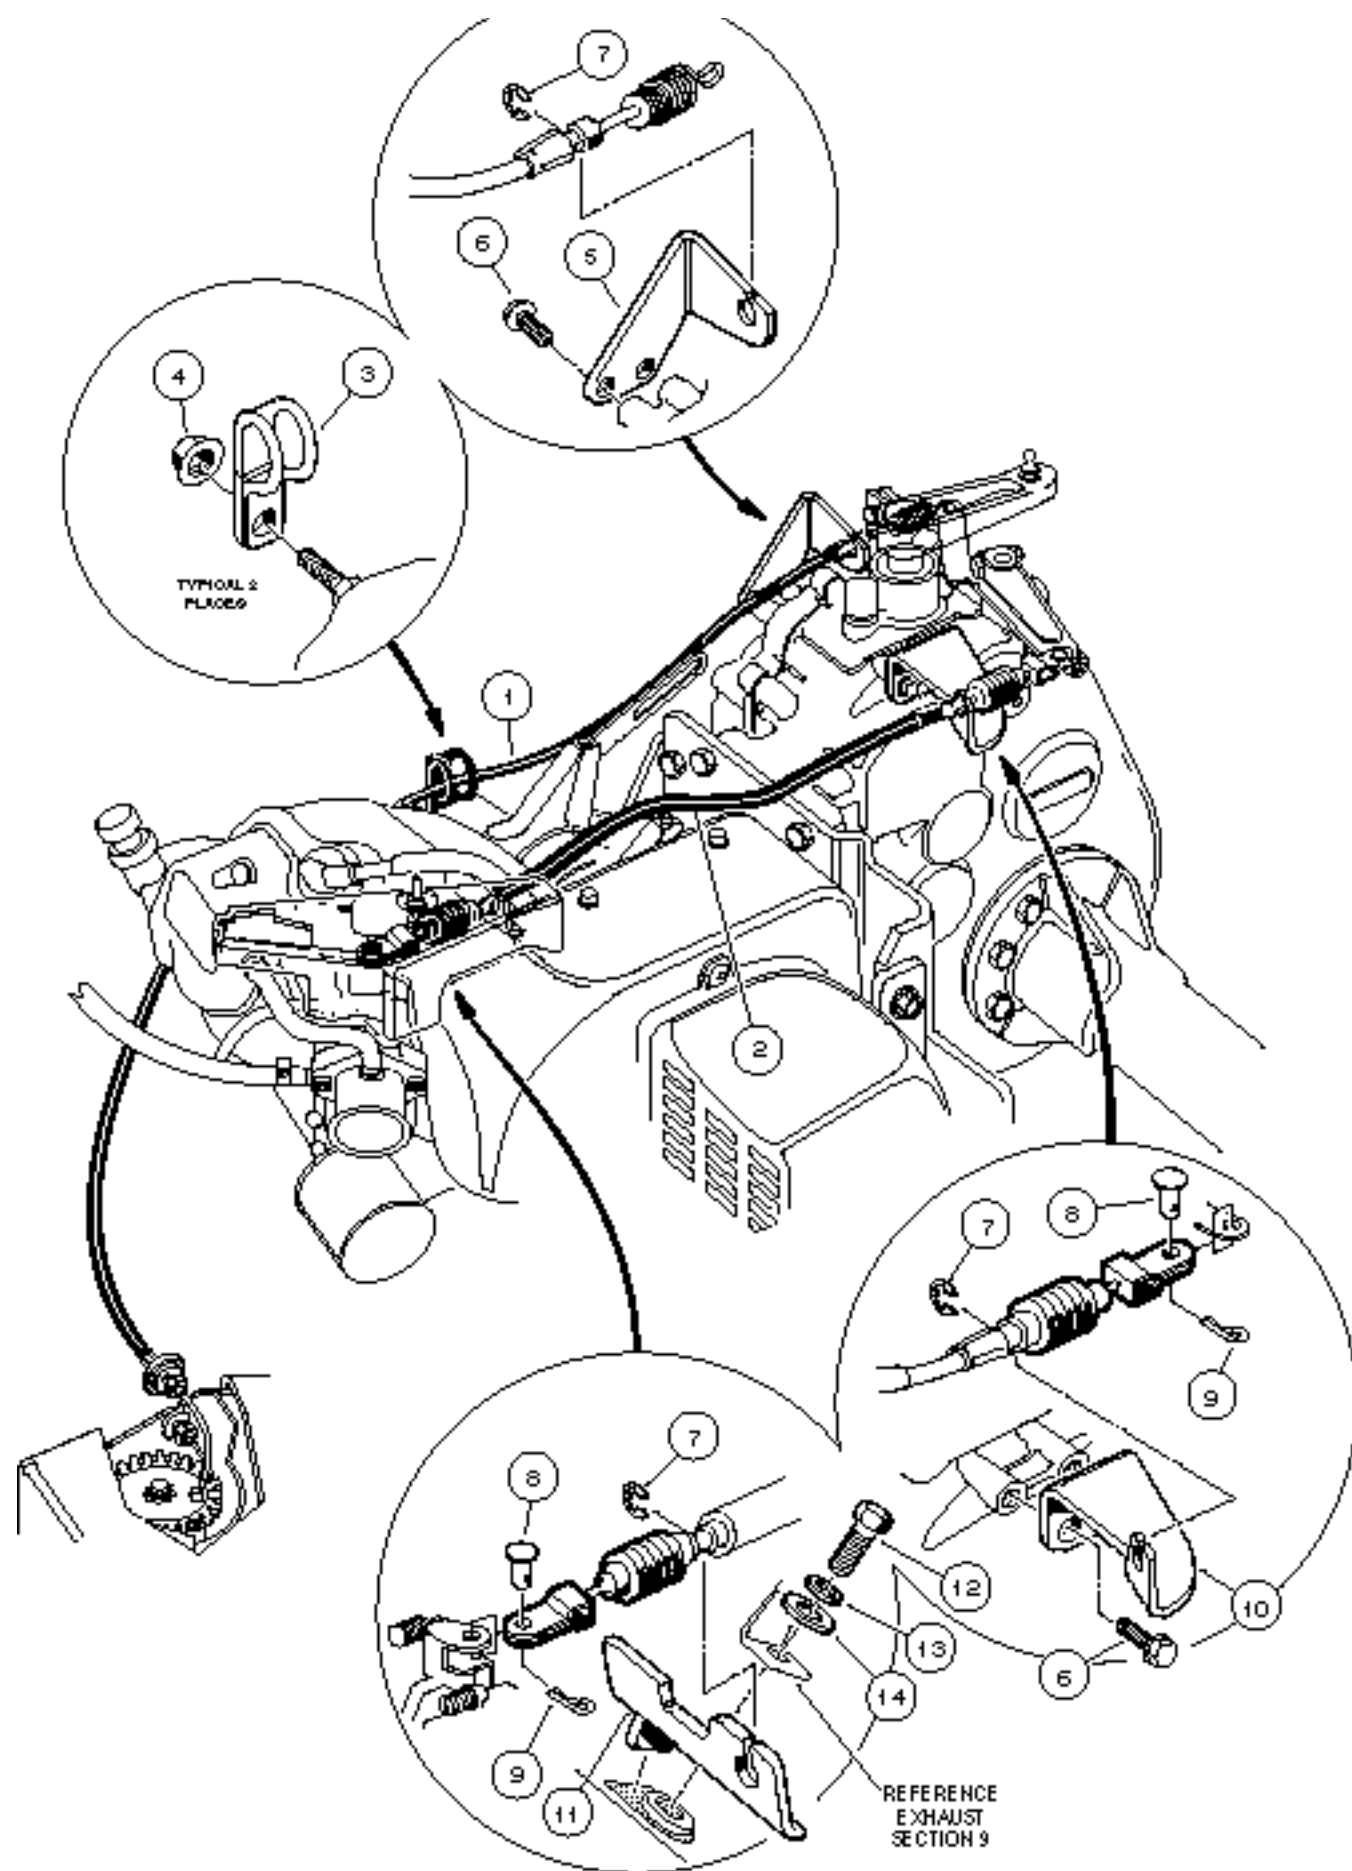


GOVERNOR AND ACCELERATOR CABLES

8

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
		BEFORE ORDERING FROM THIS PAGE, SEE NOTE ON PAGE ii AT THE BEGINNING OF THIS MANUAL.	
1	<u>1018325-01</u>	CABLE, ACCELERATOR	1
2	<u>1018324-01</u>	CABLE, GOVERNOR (CARRYALL I AND II)	1
2	<u>1018324-02</u>	CABLE, GOVERNOR, (CARRYALL II PLUS AND VI)	1
3	<u>1013700</u>	CLAMP, CABLE RETAINING	2
4	<u>1016546</u>	NUT, FLANGED HEX, M8 x 1.25	2
5	1018323-01	BRACKET, ACCELERATOR SUPPORT	1
6	<u>1012285</u>	SCREW, THREAD-ROLLING, 1/4 - 20 x 5/8	4
7	<u>1016202</u>	"E" RING	3
8	<u>1015408</u>	PIN, GOVERNOR CABLE CLEVIS	2
9	<u>1014413</u>	PIN, HAIR SPRING COTTER, 1/8 I.D. x 5/8	2
10	1018322-01	BRACKET, SUPPORT	1
11	<u>1015845</u>	BRACKET, GOVERNOR CABLE ENGINE	1
12	1019035-01	SCREW, HEX HEAD CAP, M8 x 1.25 x 24 MM	1
13	0007174	WASHER, LOCK, 5/16	1
14	<u>1011697</u>	WASHER, FLAT, 5/16	1

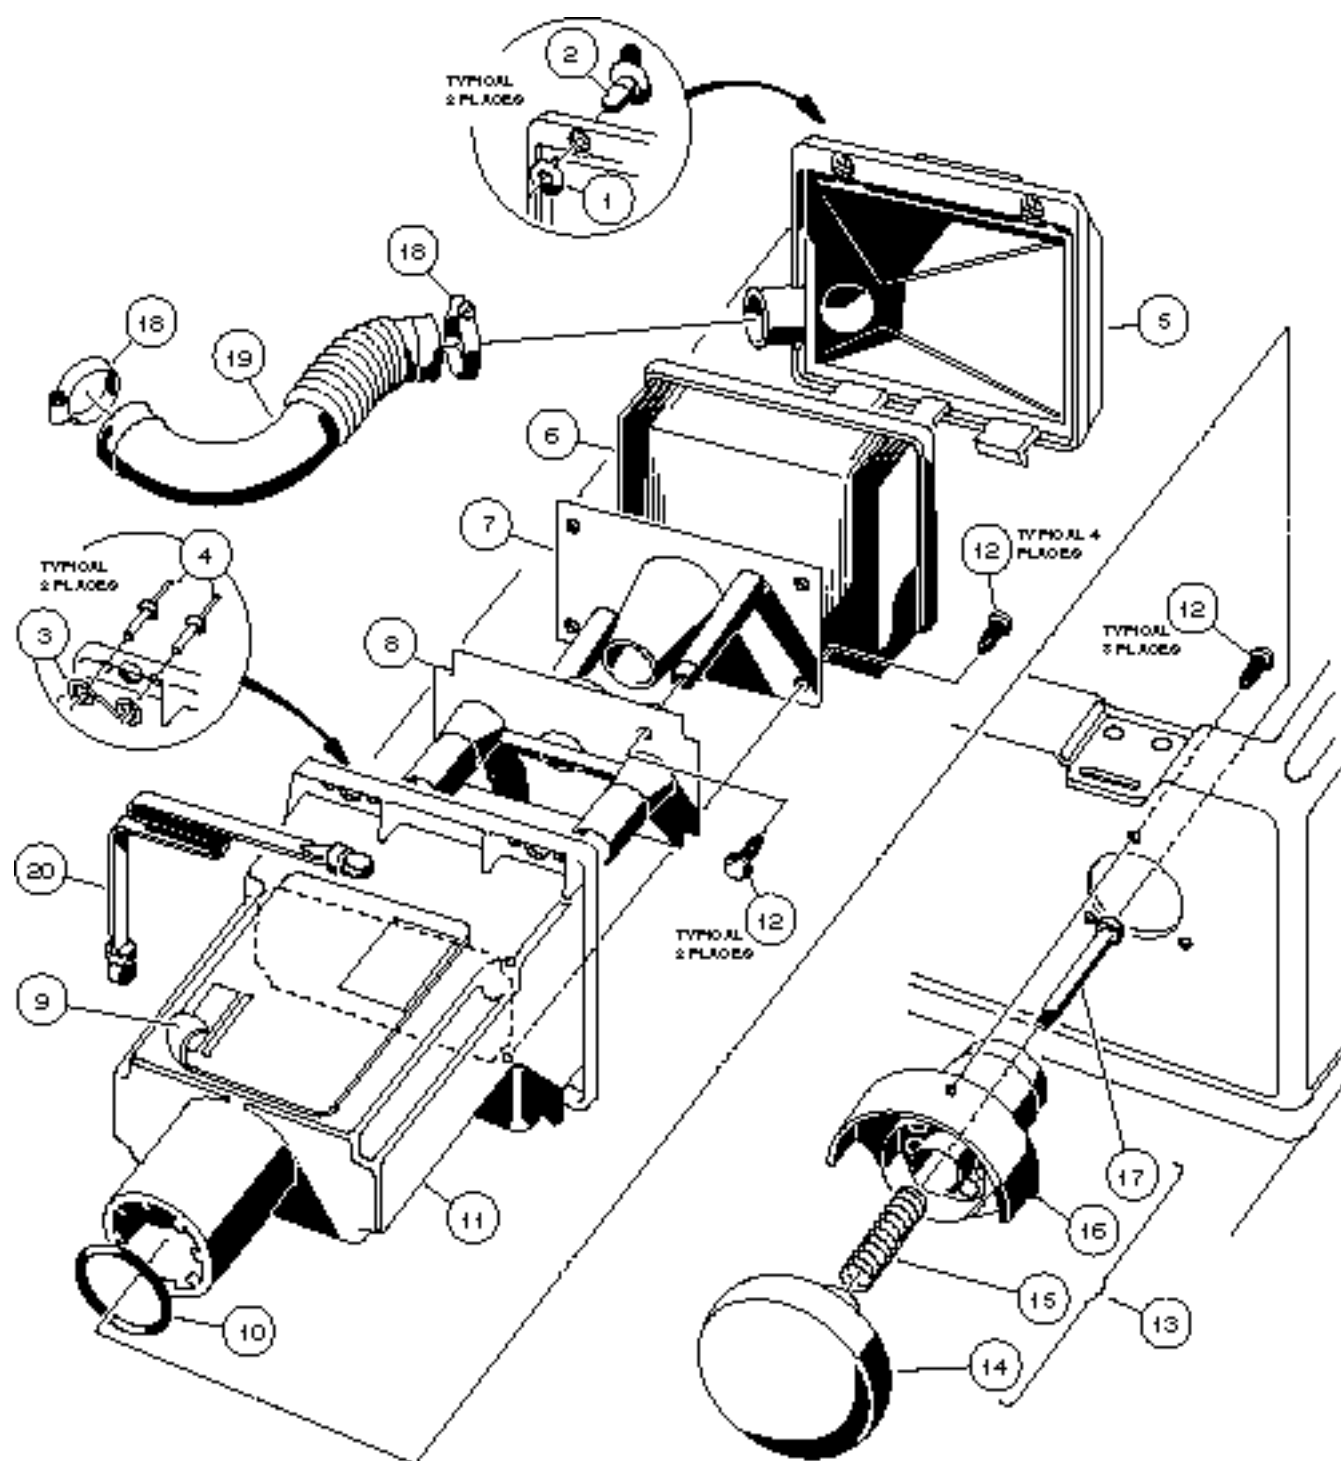


EXPANSION CHAMBER, CHOKE, AND FILTER CARRYALL I, II AND II PLUS

8

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>1015431</u>	ASSEMBLY, INTAKE EXPANSION CHAMBER (INCLUDES ITEMS 1 - 12)	1
1	<u>1015291</u>	RETAINER, STUD, #6	2
2	<u>1015290</u>	STUD, WING HEAD, #6	2
3	<u>1015292</u>	SPRING, RECEPTACLE, #6	2
4	<u>1015727</u>	RIVET, POP, 1/8	4
5	<u>1015293</u>	COVER, EXPANSION CHAMBER	1
6	<u>1015426</u>	ELEMENT, AIR FILTER	1
7	<u>1015542</u>	BAFFLE, SECONDARY AIR BOX	1
8	<u>1015541</u>	BAFFLE, PRIMARY AIR BOX	1
9	<u>1016062</u>	DECAL, SERVICE	1
10	<u>1015425</u>	O-RING	1
11	<u>1015540</u>	CHAMBER, EXPANSION	1
12	<u>1015289</u>	SCREW, HI-LO HEX, #10 - 16 x 5/8	9
13	<u>1015745</u>	ASSEMBLY, CHOKE (INCLUDES ITEMS 14 - 17)	1
14	<u>1012629</u>	COVER, CHOKE	1
15	<u>1012633</u>	SPRING, CHOKE	1
16	<u>1015485</u>	BASE, CHOKE	1
17	<u>1012634</u>	SCREW, HEX SOCKET HEAD SHOULDER, 1/4 - 20 x 2	1
18	<u>1015430</u>	CLAMP, AIR INTAKE HOSE	2
19	<u>1016228</u>	HOSE, INTAKE (CARRYALL I ONLY)	1
19	<u>1016300</u>	HOSE, INTAKE (CARRYALL II AND II PLUS)	1
20	<u>1015577</u>	STRAP, EXPANSION CHAMBER RETENSION	1

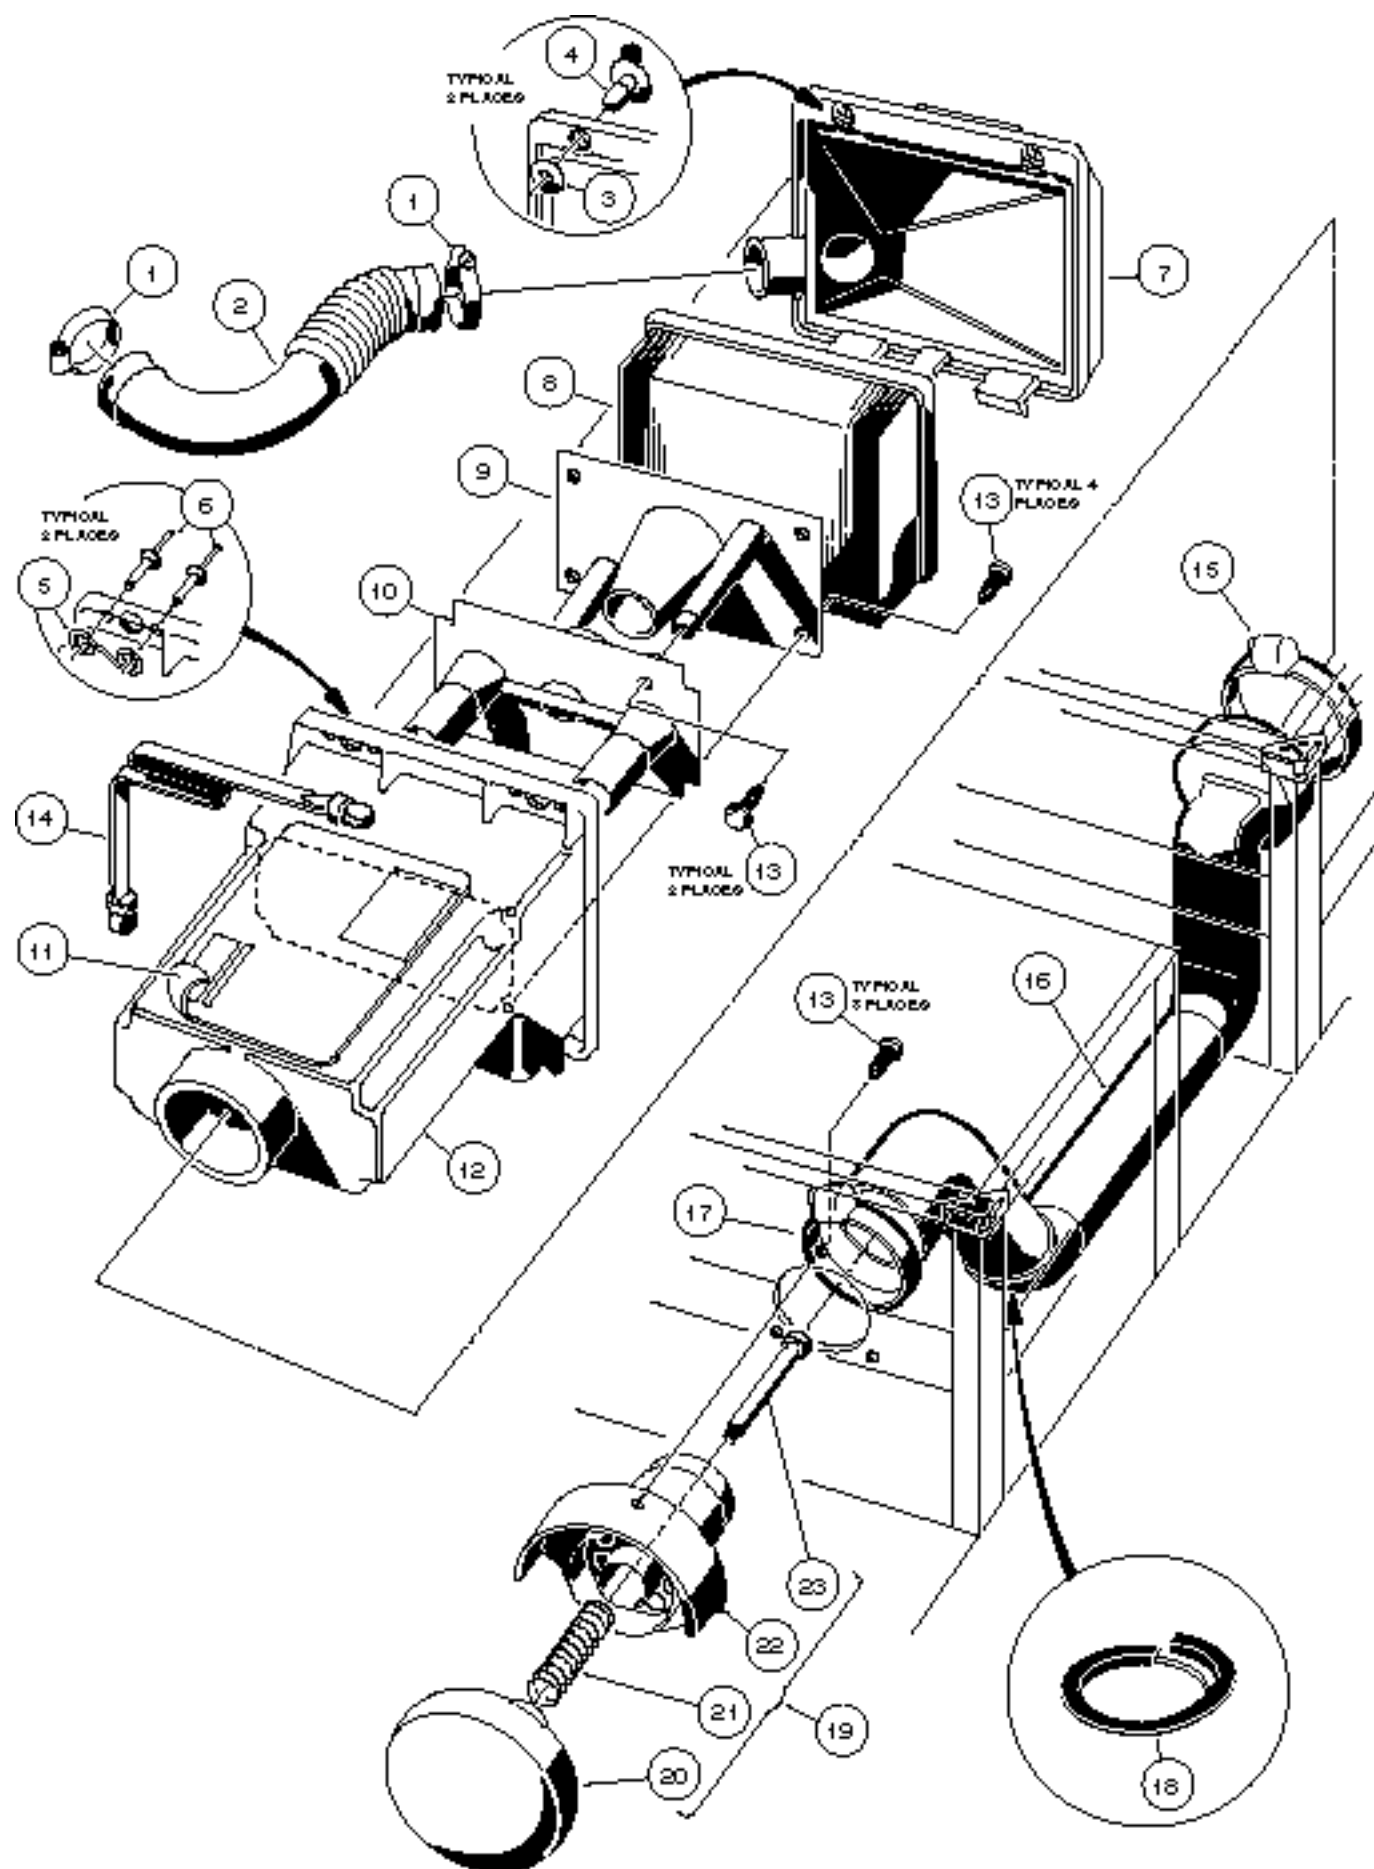

EXPANSION CHAMBER, CHOKE, AND FILTER CARRYALL VI

8


G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015430</u>	CLAMP, AIR INTAKE HOSE	2
2	<u>1016228</u>	HOSE, INTAKE	1
	1016787	ASSEMBLY, INTAKE EXPANSION CHAMBER (INCLUDES ITEMS 3 - 13)	1
3	<u>1015291</u>	RETAINER, STUD, #6	2
4	<u>1015290</u>	STUD, WING HEAD, #6	2
5	<u>1015292</u>	SPRING, RECEPTACLE, #6	2
6	<u>1015727</u>	RIVET, POP, 1/8	4
7	1015293	COVER, EXPANSION CHAMBER	1
8	<u>1015426</u>	ELEMENT, AIR FILTER	1
9	<u>1015542</u>	BAFFLE, SECONDARY AIR BOX	1
10	<u>1015541</u>	BAFFLE, PRIMARY AIR BOX	1
11	1016062	DECAL, SERVICE	1
12	1016788	CHAMBER, EXPANSION	1
13	<u>1015289</u>	SCREW, HI-LO HEX HEAD, #10 - 16 x 5/8	9
14	<u>1015577</u>	STRAP, EXPANSION CHAMBER RETENSION	1
15	<u>1015716</u>	CLAMP, AIR INTAKE HOSE	1
16	1016786	PLENUM, AIR INTAKE	1
17	<u>1012349</u>	CLAMP, HOSE	1
18	<u>1016804</u>	GROMMET, FLEXIBLE	A/R
19	1015745	ASSEMBLY, CHOKE (INCLUDES ITEMS 20 - 23)	1
20	<u>1012629</u>	COVER, CHOKE	1
21	<u>1012633</u>	SPRING, CHOKE	1
22	<u>1015485</u>	BASE, CHOKE	1
23	<u>1012634</u>	SCREW, HEX SOCKET HEAD SHOULDER, 1/4 - 20 x 2	1

EXHAUST SYSTEM

9

G

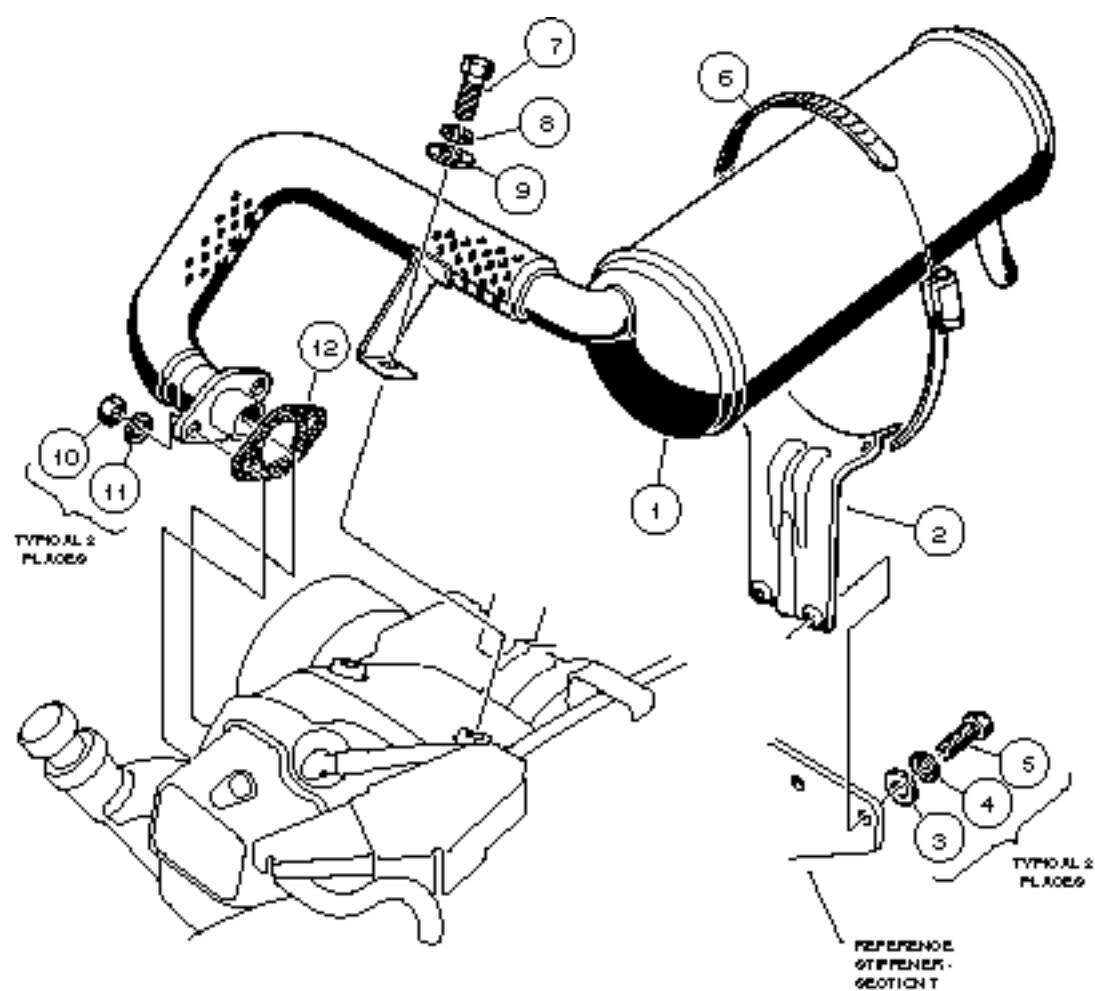


EXHAUST SYSTEM, FE 290 CARRYALL I AND II

9

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1018593-01</u>	SYSTEM, EXHAUST	1
2	<u>1015814</u>	BRACKET, MUFFLER MOUNTING	1
3	0000332	WASHER, FLAT, 1/4	2
4	0000451	WASHER, LOCK, 1/4	2
5	0007847	SCREW, HEX HEAD, 1/4 - 20 x 3/4	2
6	1017689	CLAMP, MUFFLER	1
7	1019035-01	SCREW, HEX HEAD CAP, M8 x 1.25 x 24MM	1
8	0007174	WASHER, LOCK, 5/16	1
9	<u>1011697</u>	WASHER, FLAT, 5/16	1
10	<u>1012528</u>	NUT, HEX, M8 x 1.25	2
11	<u>1013734</u>	WASHER, LOCK, 8MM	2
12	<u>1015330</u>	GASKET, EXHAUST	1

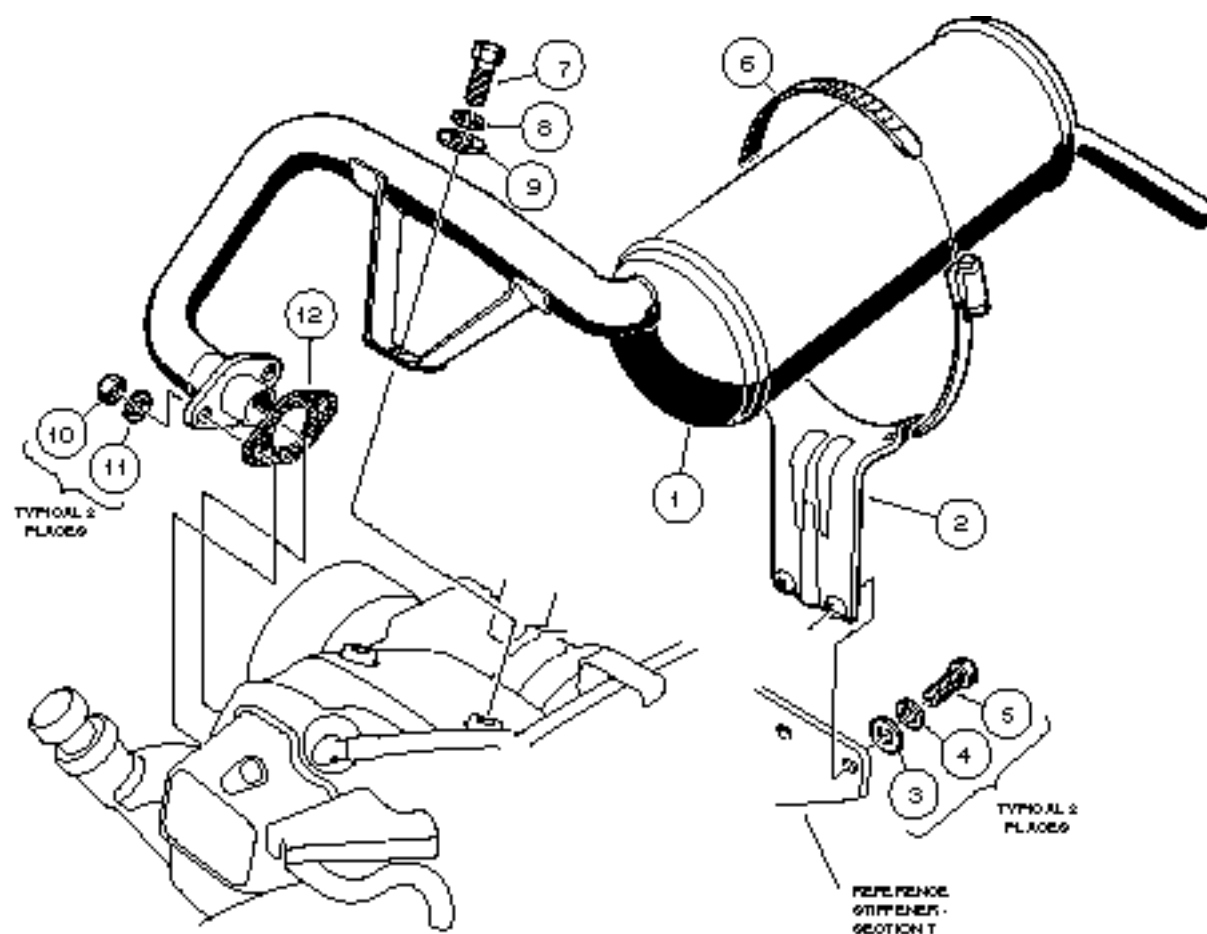



EXHAUST SYSTEM, FE 350
CARRYALL II PLUS AND VI

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1018594-01</u>	SYSTEM, EXHAUST	1
2	<u>1015814</u>	BRACKET, MUFFLER MOUNTING	1
3	0000332	WASHER, FLAT, 1/4	2
4	0000451	WASHER, LOCK, 1/4	2
5	0007847	SCREW, HEX HEAD, 1/4 - 20 x 3/4	2
6	1017689	CLAMP, MUFFLER	1
7	1019035-01	SCREW, HEX HEAD CAP, M8 x 1.25 x 24MM	1
8	0007174	WASHER, LOCK, 5/16	1
9	<u>1011697</u>	WASHER, FLAT, 5/16	1
10	<u>1012528</u>	NUT, HEX, M8 x 1.25	2
11	<u>1013734</u>	WASHER, LOCK, 8MM	2
12	<u>1016904</u>	GASKET, EXHAUST	1


TORQUE CONVERTER

10

G

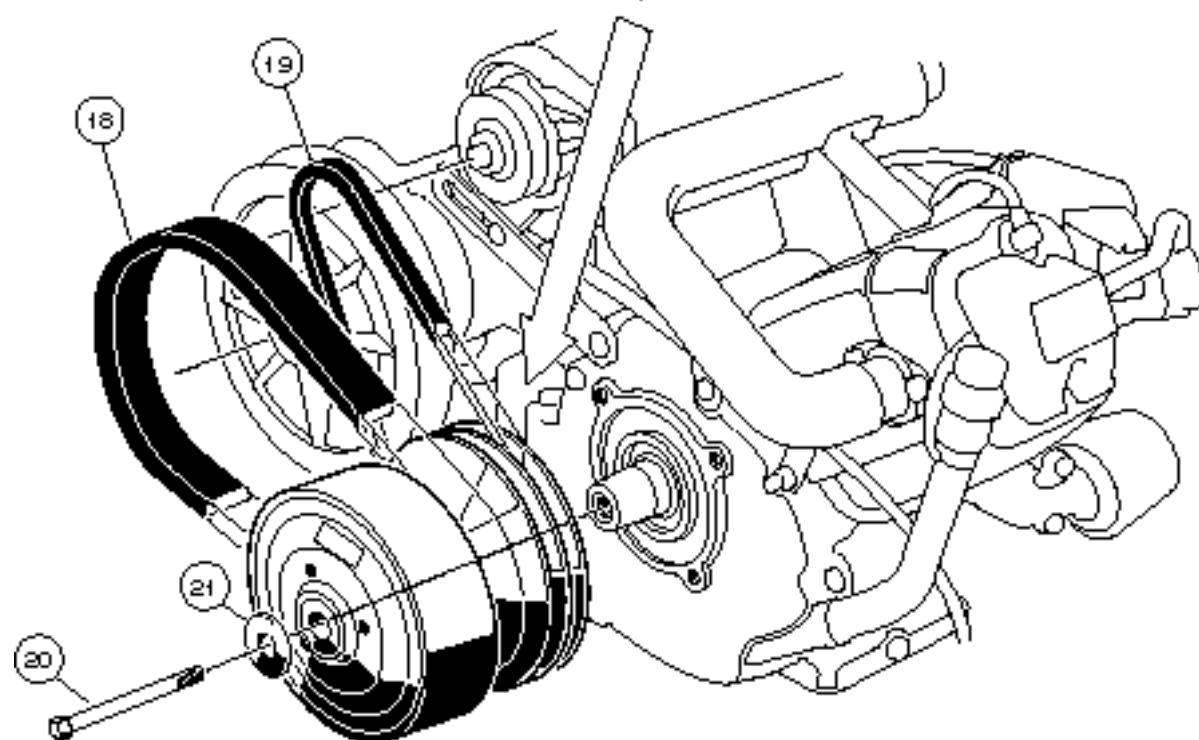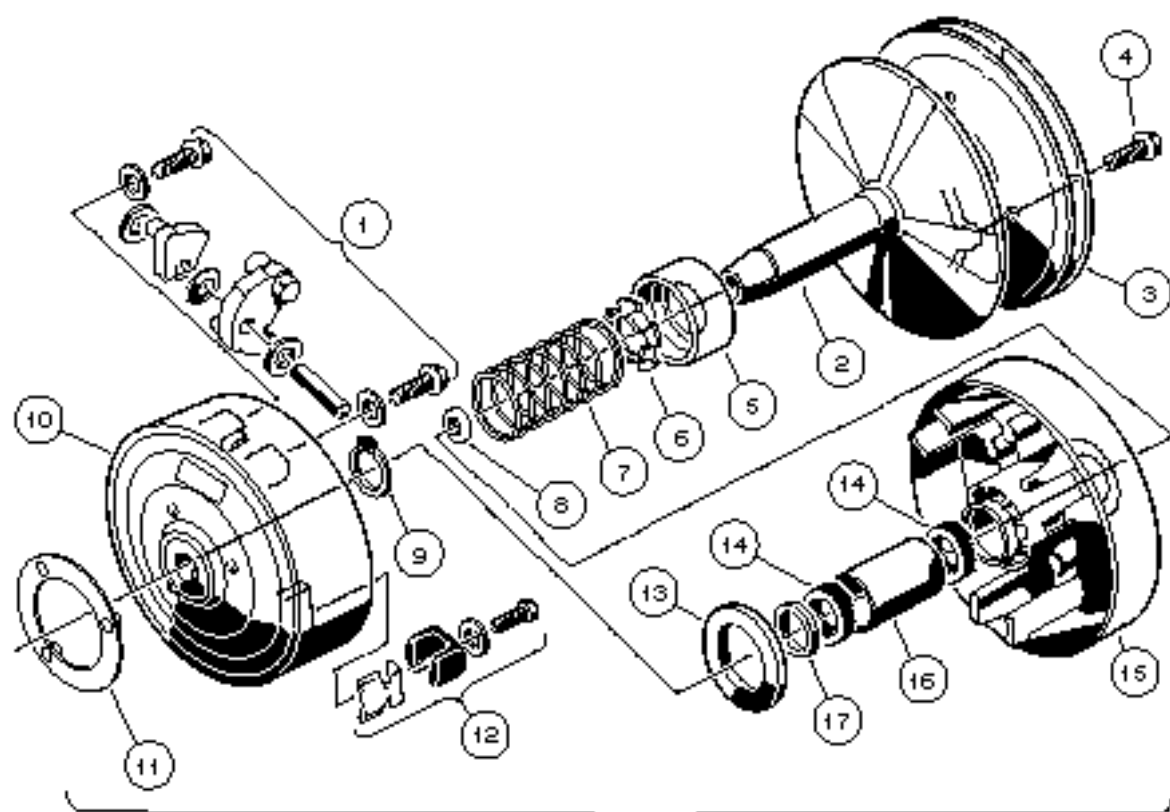

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
		BEFORE ORDERING FROM THIS PAGE, SEE NOTE ON PAGE ii AT THE BEGINNING OF THIS MANUAL.	
	<u>1018339-02</u>	ASSEMBLY, DRIVE CLUTCH (CARRYALL I AND II) (INCLUDES ITEMS 1 - 17)	1
	<u>1018339-04</u>	ASSEMBLY, DRIVE CLUTCH (CARRYALL II PLUS AND VI) (INCLUDES ITEMS 1 - 17)	1
1	<u>1016801</u>	KIT, DRIVE CLUTCH WEIGHT	1
2	<u>1019298-01</u>	ASSEMBLY, FIXED FACE (CARRYALL I AND II) (INCLUDES ITEMS 3 AND 4)	1
2	<u>1017383-01</u>	ASSEMBLY, FIXED FACE (CARRYALL II PLUS AND VI) (INCLUDES ITEMS 3 AND 4)	1
3	N/A	PULLEY	1
4	N/A	SCREW, WASHER HEAD HEX MACHINE	3
5	<u>1014049</u>	BEARING, IDLER	1
6	<u>1014050</u>	SPRING, RETAINER	1
7	<u>1014051</u>	SPRING, DRIVE CLUTCH, BLACK (CARRYALL I AND II)	1
7	<u>1016901</u>	SPRING, DRIVE CLUTCH, DARK GREEN (CARRYALL II PLUS AND VI)	1
8	<u>1016289</u>	SPACER, FIXED FACE SHAFT	1
9	<u>1014057</u>	RING, RETAINING	1
10	<u>1014059</u>	ASSEMBLY, DRIVE HUB	1
11	<u>1019256-01</u>	PLUG, DRIVE CLUTCH	1
12	<u>1014453</u>	KIT, DRIVE CLUTCH BUTTON	1
13	<u>1014058</u>	WASHER, THRUST	1
14	<u>1014056</u>	RING, SPIRAL BACK-UP	2
15	<u>1014052</u>	ASSEMBLY, MOVABLE FACE (INCLUDES ITEMS 16 AND 17)	1
16	N/A	BUSHING	1
17	<u>1014055</u>	RETAINER	1
18	<u>1016203</u>	BELT, DRIVE (CARRYALL I)	1
18	<u>1017188</u>	BELT, DRIVE (CARRYALL II, II PLUS AND VI)	1
19	<u>1019167-01</u>	BELT, STARTER/GENERATOR	1
20	<u>1019165-01</u>	SCREW, HEX HEAD CAP (LEFT HAND THREADS), 3/8 - 24 x 5 1/2	1
21	<u>1017328</u>	WASHER, MOUNTING	1

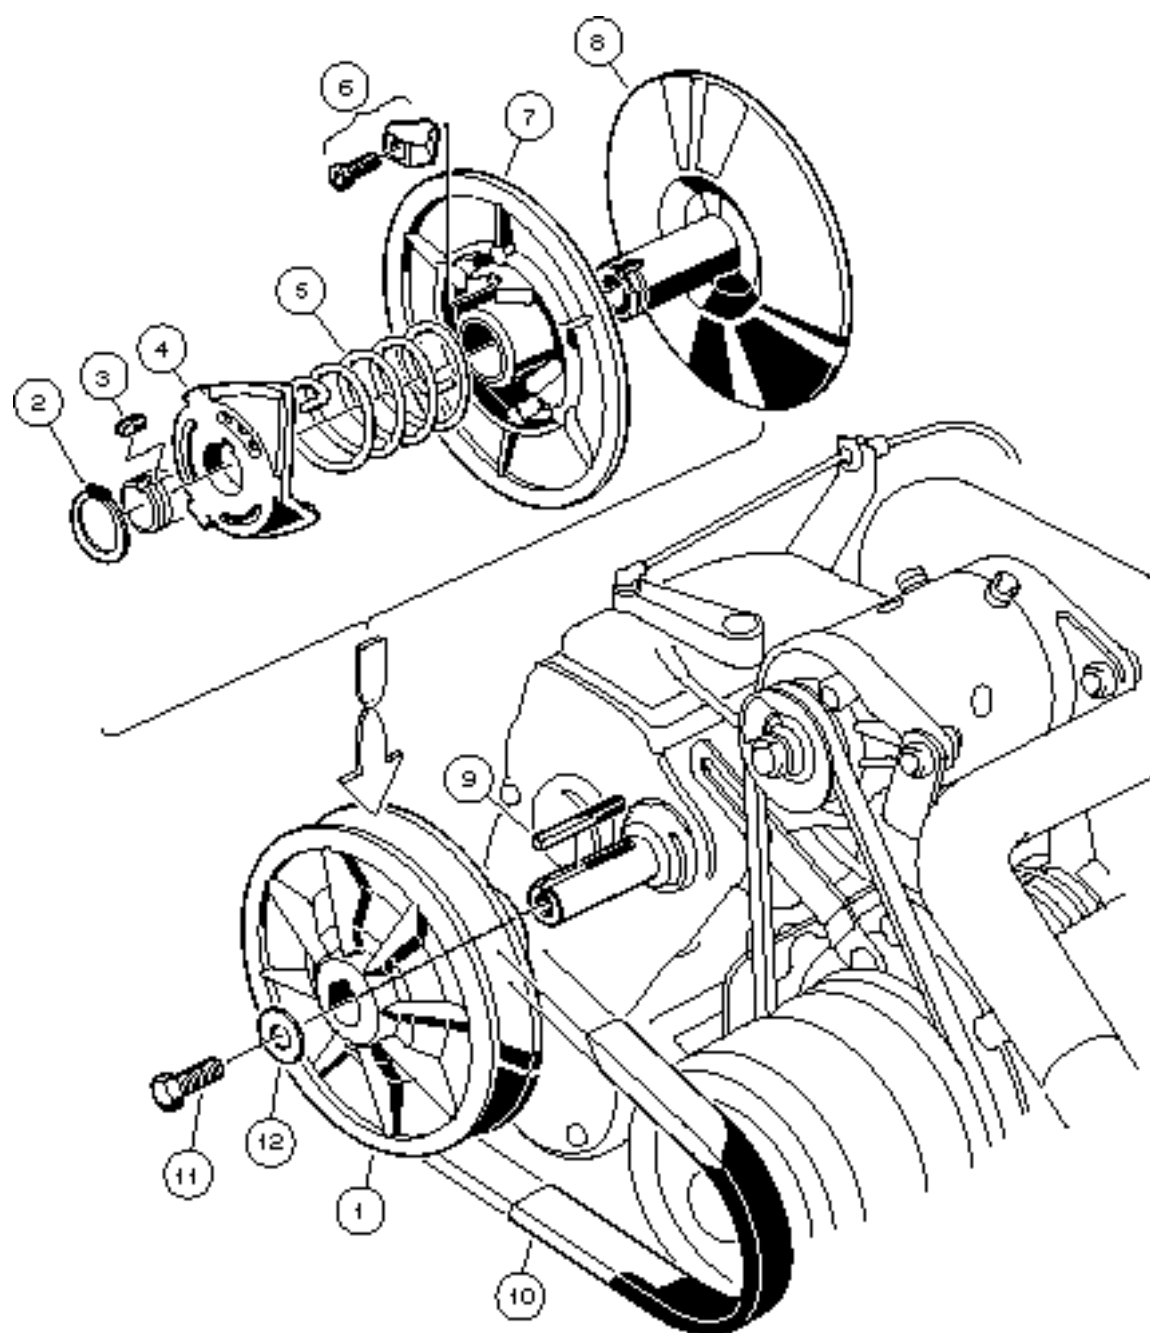


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
		BEFORE ORDERING FROM THIS PAGE, SEE NOTE ON PAGE ii AT THE BEGINNING OF THIS MANUAL.	
1	<u>1018340-01</u>	ASSEMBLY, DRIVEN CLUTCH (INCLUDES ITEMS 2 - 8) (CARRYALL I, II AND VI)	1
1	<u>1018340-03</u>	ASSEMBLY, DRIVEN CLUTCH (INCLUDES ITEMS 2 - 8) (CARRYALL II PLUS ONLY) ...	1
2	<u>1014080</u>	RING, RETAINING	1
3	<u>1014078</u>	KEY	1
4	<u>1017686</u>	CAM	1
5	<u>1018362-01</u>	SPRING (CARRYALL I, II AND VI)	1
5	<u>1018362-02</u>	SPRING (CARRYALL II PLUS ONLY)	1
6	<u>1014454</u>	KIT, BUTTON (INCLUDES 3 BUTTONS AND 3 SCREWS)	1
7	<u>1014072</u>	ASSEMBLY, MOVEABLE FACE, WITH BUSHING	1
8	<u>1014070</u>	ASSEMBLY, FIXED FACE	1
9	<u>1018334-01</u>	KEY, SQUARE TRANSMISSION	1
10	<u>1016203</u>	BELT, DRIVE (CARRYALL I ONLY)	1
10	<u>1017188</u>	BELT, DRIVE (CARRYALL II, II PLUS AND VI)	1
11	0007173	SCREW, HEX HEAD CAP, 5/16 - 18 x 3/4	1
12	<u>1017327</u>	WASHER, MOUNTING	1

UNITIZED TRANSAXLE GASOLINE VEHICLE

11

G

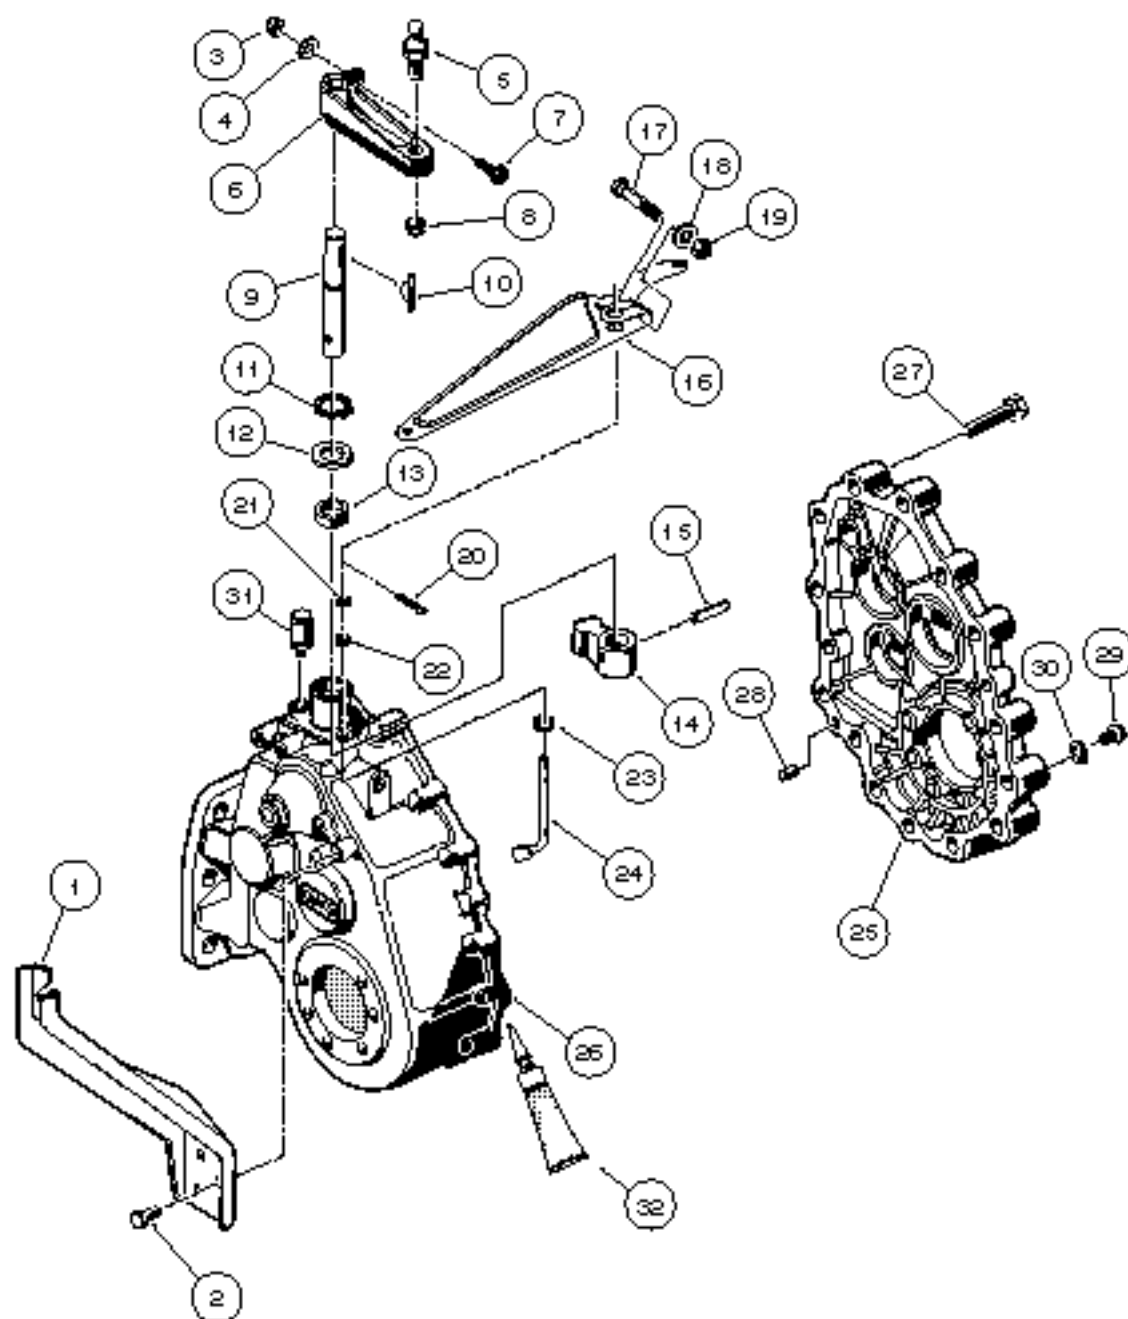


UNITIZED TRANSAXLE - GASOLINE VEHICLE

11

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
		BEFORE ORDERING FROM THIS PAGE, SEE NOTE ON PAGE ii AT THE BEGINNING OF THIS MANUAL.	
1	<u>1019226-01</u>	BRACKET, TRANSMISSION CABLE SUPPORT	1
2	<u>1012285</u>	SCREW, THREAD ROLLING, 1/4 - 20 x 5/8	3
	<u>1018336-01</u>	TRANSAXLE, UNITIZED (INCLUDES ITEMS 3 - 90) (CARRYALL I AND II)	1
	<u>1018336-02</u>	TRANSAXLE, UTILITY, UNITIZED (INCLUDES ITEMS 3 - 90) (CARRYALL II PLUS AND VI)	1
3	<u>1013061</u>	NUT, NYLON LOCK, #10 - 32	1
4	0000183	WASHER, FLAT, #10	1
5	<u>1010954</u>	STUD, BALL, 1/4 - 28 x 9/16	1
6	<u>1016341</u>	LEVER, TRANSMISSION SHIFTER	1
7	<u>1017082</u>	SCREW, HEX WASHER HEAD, #10 - 32 x 3/4	1
8	0008717	NUT, NYLON LOCK, 1/4 - 28	1
9	<u>1018902-01</u>	SHAFT, SHIFTER	1
10	<u>1017231</u>	KEY, WOODRUFF	1
11	<u>1019273-01</u>	RING, SNAP	1
12	<u>1018929-01</u>	WASHER, FLAT	1
13	<u>1019272-01</u>	SEAL, OIL	1
14	<u>1018901-01</u>	LEVER, SHIFTER	1
15	<u>1012752</u>	PIN, ROLL	1
16	<u>1018348-01</u>	ARM, GOVERNOR LEVER	1
17	<u>1018861-01</u>	SCREW, SQUARE HEAD, 1/4 - 20 x 1	1
18	0000332	WASHER, FLAT	1
19	0008233	NUT, NYLON LOCK, 1/4 - 20	1
20	<u>1019286-01</u>	PIN, COTTER	1
21	<u>1016513</u>	WASHER, FLAT	1
22	<u>1019271-01</u>	SEAL, OIL	1
23	<u>1018938-01</u>	WASHER	1
24	<u>1018913-01</u>	ARM, PIVOT	1
25	<u>1018906-01</u>	GEAR CASE (RIGHT)	1
26	<u>1018905-01</u>	GEAR CASE (LEFT)	1
27	<u>1019269-01</u>	BOLT, FLANGED, M8 x 1.25 x 40MM	15
28	<u>1012896</u>	PIN, DOWEL	2
29	<u>1013759</u>	PLUG, DRAIN (INCLUDES ITEM 30)	2
30	<u>1016432</u>	GASKET	1
31	<u>1012711</u>	BREATHER	1
32	<u>1019287-01</u>	GASKET, LIQUID, 8.8 OZ. (250 GRAMS)	A/R

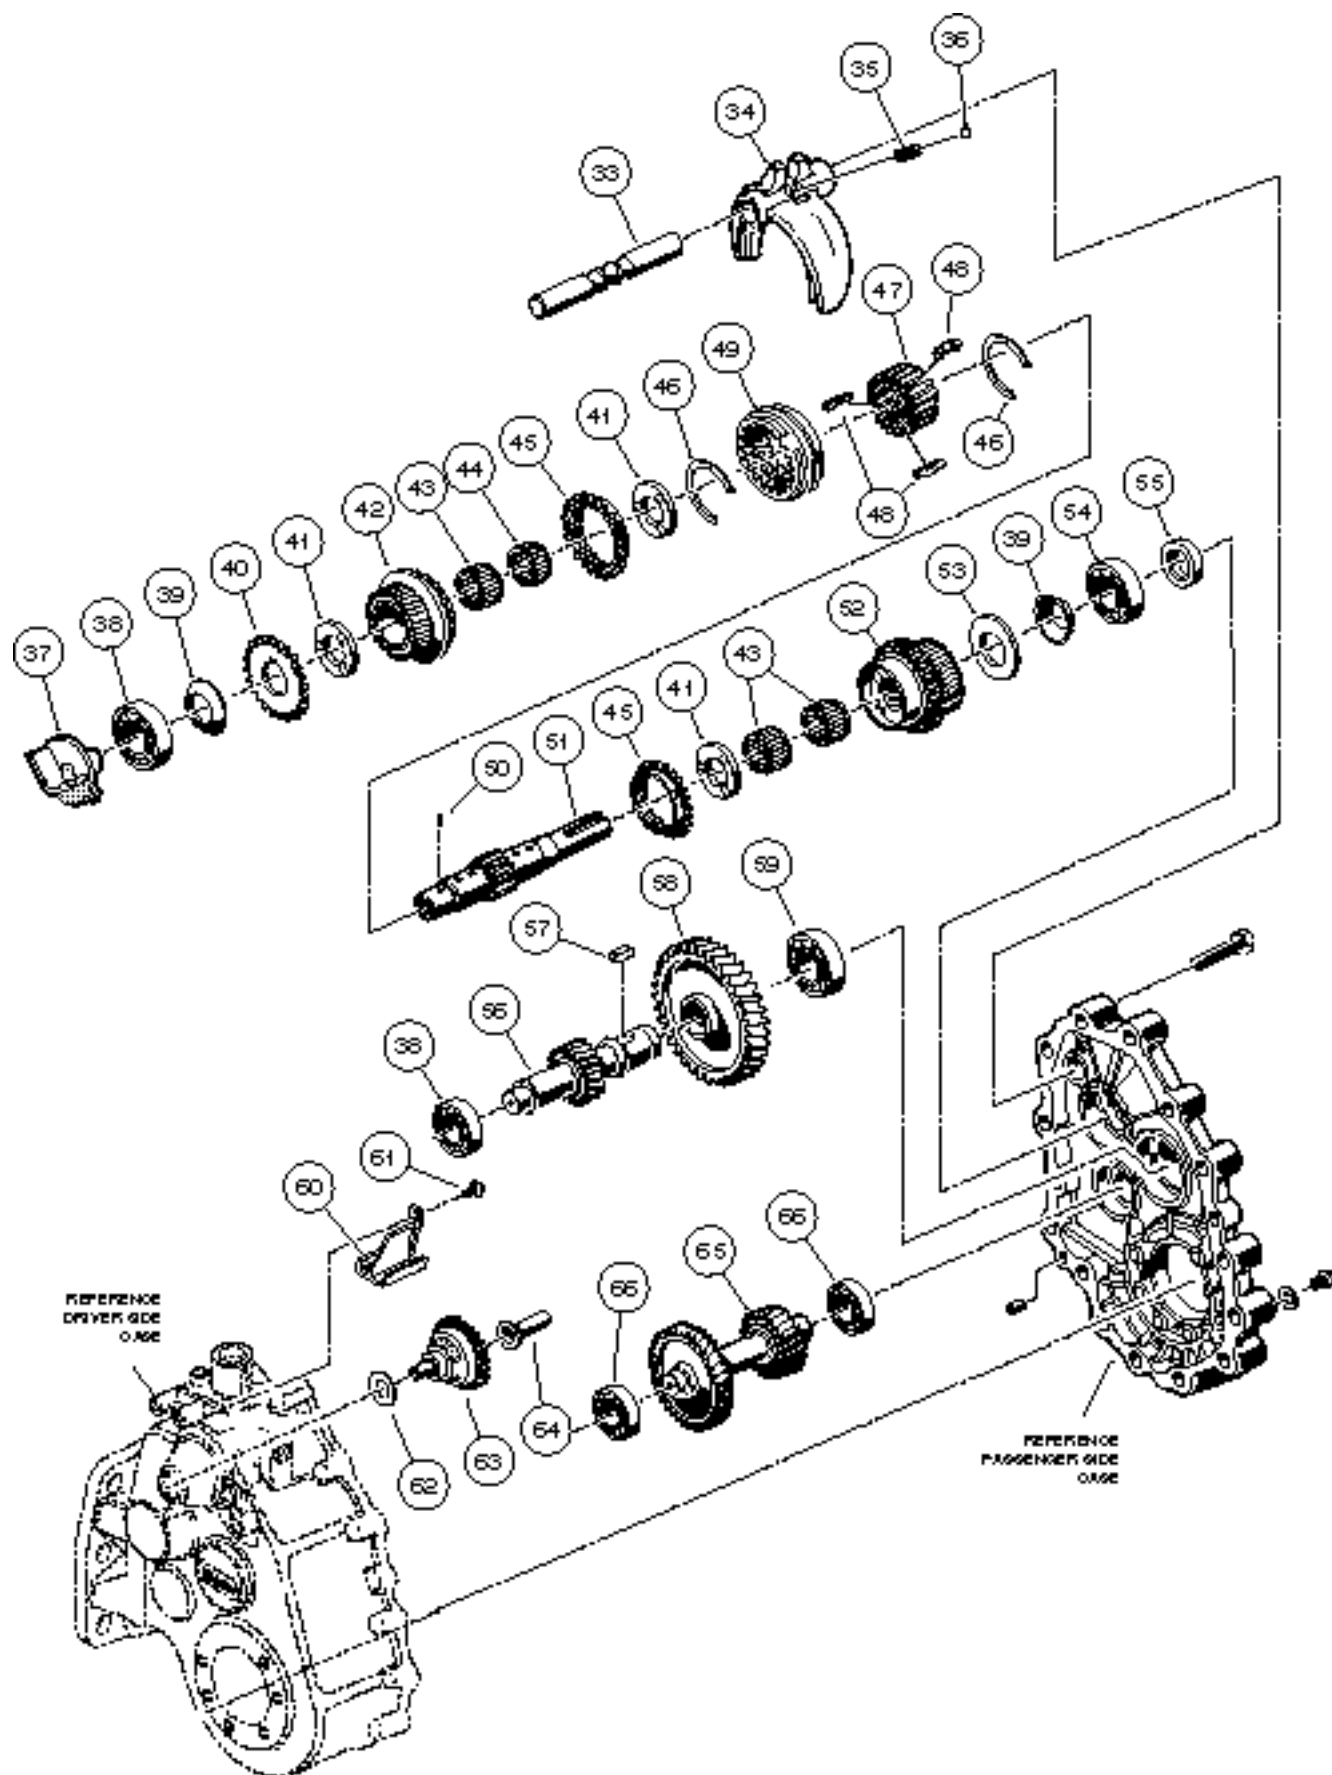


UNITIZED TRANSAXLE - GASOLINE VEHICLE

11

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
		BEFORE ORDERING FROM THIS PAGE, SEE NOTE ON PAGE // AT THE BEGINNING OF THIS MANUAL.	
33	1018920-01	ROD, SHIFT	1
34	<u>1018900-01</u>	FORK, SHIFT	1
35	<u>1012748</u>	SPRING	1
36	<u>1012747</u>	BALL, STEEL	1
37	<u>1018894-01</u>	GUIDE	1
38	0007336	BEARING, BALL	4
39	<u>1016338</u>	WASHER, SPRING	2
40	<u>1018924-01</u>	GEAR, SPUR	1
41	<u>1018922-01</u>	PLATE, THRUST	3
42	<u>1018897-01</u>	ASSEMBLY, GEAR, INPUT, 28 TOOTH	1
43	<u>1019276-01</u>	BEARING, NEEDLE	3
44	<u>1019275-01</u>	BEARING, NEEDLE	1
45	<u>1012742</u>	RING, SYNCHRONIZER	2
46	<u>1012741</u>	SPRING, SYNCHRONIZER	2
47	<u>1019280-01</u>	HUB, SYNCHRONIZER CLUTCH	1
48	<u>1012740</u>	INSERT, SYNCHRONIZER	3
49	<u>1019279-01</u>	SLEEVE, SYNCHRONIZER	1
50	<u>1019277-01</u>	PIN, DOWEL	1
51	<u>1018899-01</u>	SHAFT, INPUT	1
52	<u>1018896-01</u>	ASSEMBLY, GEAR, INPUT, 25 TOOTH	1
53	<u>1016337</u>	WASHER, THRUST	1
54	<u>1019278-01</u>	BEARING, BALL	1
55	<u>1012714</u>	SEAL, OIL, INPUT SHAFT	1
56	<u>1018926-01</u>	GEAR, 17 TOOTH	1
57	<u>1018932-01</u>	KEY	1
58	<u>1018925-01</u>	GEAR, 61 TOOTH	1
59	<u>1019281-01</u>	BEARING, BALL	1
60	<u>1018895-01</u>	GUIDE, OIL	1
61	<u>1019282-01</u>	SCREW, M8 x 1.25 x 10 MM	1
62	<u>1018939-01</u>	WASHER	1
63	<u>1018923-01</u>	ASSEMBLY, GOVERNOR	1
64	<u>1018916-01</u>	SLEEVE	1
65	<u>1018919-01</u>	GEAR, CLUSTER IDLER	1
66	0007335	BEARING, BALL	2

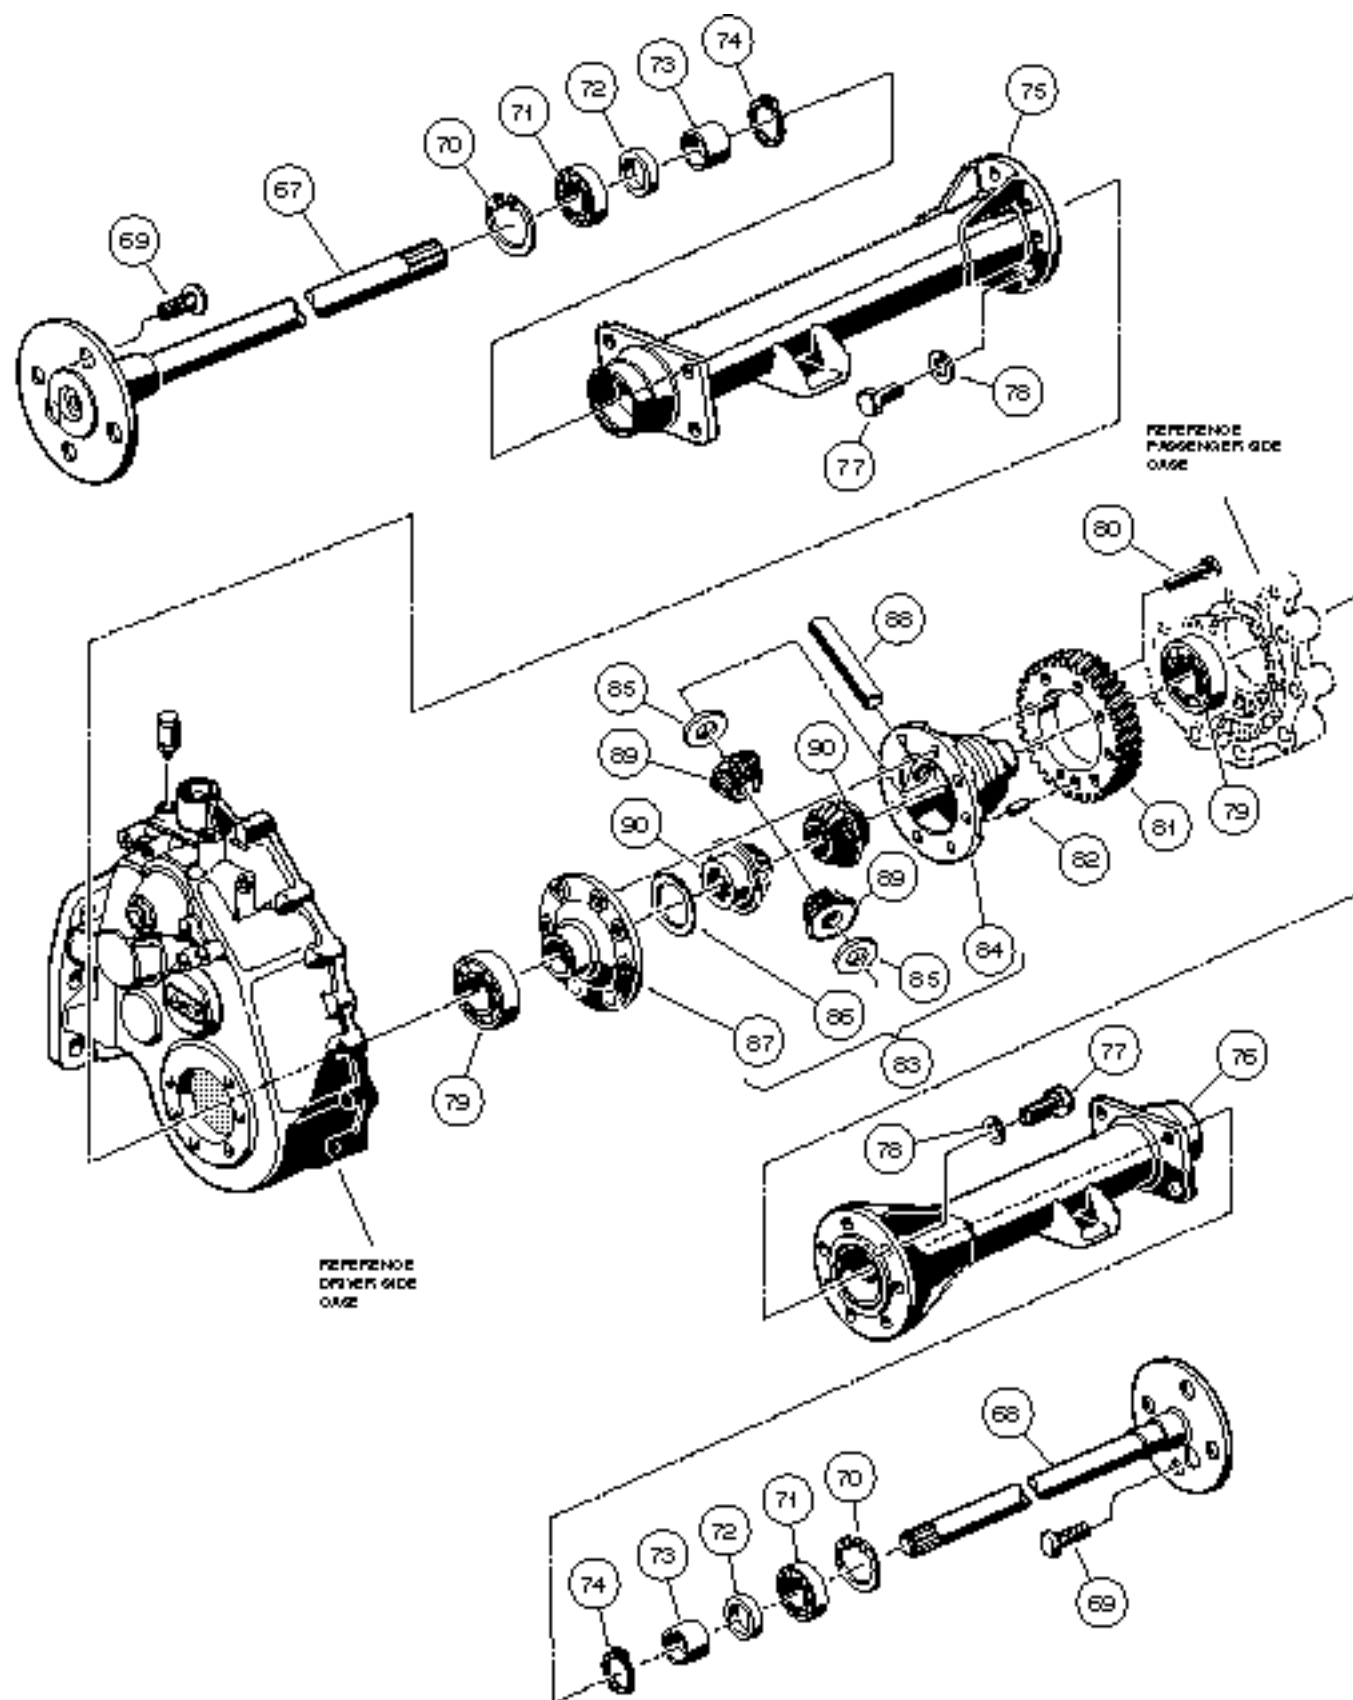

UNITIZED TRANSAXLE - GASOLINE VEHICLE

11


G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
		BEFORE ORDERING FROM THIS PAGE, SEE NOTE ON PAGE ii AT THE BEGINNING OF THIS MANUAL.	
67	<u>1018914-01</u>	ASSEMBLY, AXLE, RIGHT (INCLUDES ITEMS 69 - 74)	1
68	<u>1018915-01</u>	ASSEMBLY, AXLE, LEFT (INCLUDES ITEMS 69 - 74)	1
69	<u>1013787</u>	STUD, LUG	4
70	<u>1013792</u>	RING, RETAINING	1
71	<u>1011291</u>	BEARING, OUTER AXLE TUBE	1
72	<u>1013794</u>	SEAL, OIL	1
73	<u>1014207</u>	BUSHING, 25 MM I. D.	1
74	<u>1016672</u>	RING, RETAINING	1
75	<u>1018910-01</u>	ASSEMBLY, AXLE TUBE, LEFT SIDE (CARRYALL I)	1
75	<u>1018912-01</u>	ASSEMBLY, AXLE TUBE, LEFT SIDE (CARRYALL II, II PLUS AND VI)	1
76	<u>1018909-01</u>	ASSEMBLY, AXLE TUBE, RIGHT SIDE (CARRYALL I)	1
76	<u>1018911-01</u>	ASSEMBLY, AXLE TUBE, RIGHT SIDE (CARRYALL II, II PLUS AND VI)	1
77	<u>1013790</u>	BOLT, M10 x 1.5 x 30MM	14
78	<u>1013791</u>	WASHER, LOCK, M10	14
79	0007330	BEARING, INNER AXLE TUBE	2
80	<u>1019283-01</u>	BOLT, M8 x 1.25 x 37MM	8
81	<u>1018927-01</u>	GEAR, OUTPUT	1
82	<u>1014193</u>	PIN, DOWEL	1
83	<u>1019105-01</u>	KIT, DIFFERENTIAL GEAR CASE (INCLUDES ITEMS 84 - 87)	1
84	<u>1013768</u>	CASE, GEAR CARRIER	1
85	<u>1013774</u>	PLATE, THRUST (IDLER GEAR)	2
86	<u>1013773</u>	PLATE, THRUST (DIFFERENTIAL GEAR)	1
87	<u>1013769</u>	COVER, GEAR CASE	1
88	<u>1013772</u>	PIN, DIFFERENTIAL	1
89	<u>1013770</u>	GEAR, DIFFERENTIAL IDLER	2
90	<u>1013771</u>	GEAR, DIFFERENTIAL	2

ELECTRICAL SYSTEM POWERDRIVE ELECTRIC VEHICLE

12

E

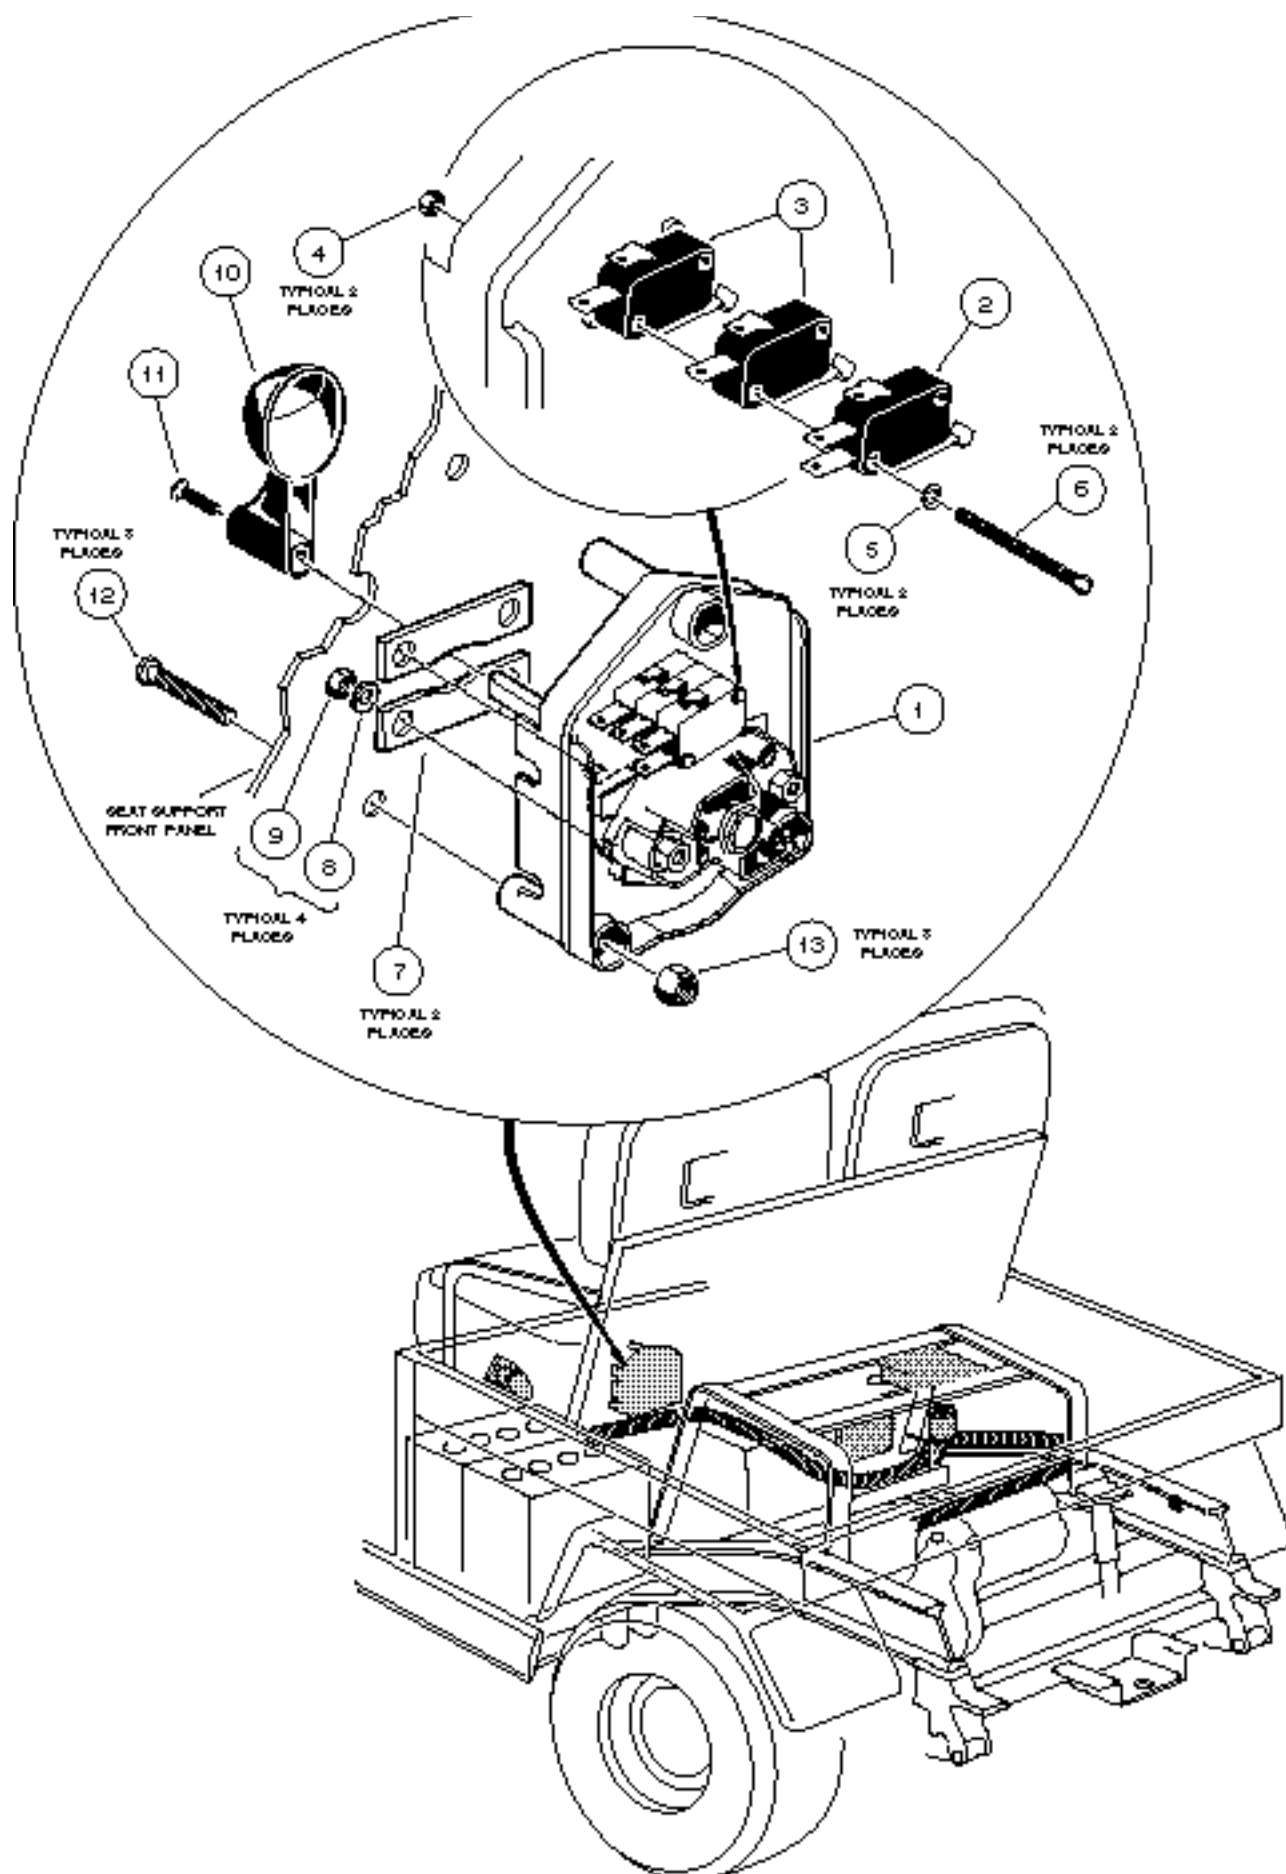


FORWARD AND REVERSE SWITCH POWERDRIVE ELECTRIC VEHICLE

12

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1017530-05</u>	ASSEMBLY, FORWARD AND REVERSE SWITCH (INCLUDES ITEMS 2 - 9)	1
2	<u>1014807</u>	SWITCH, LIMIT	1
3	<u>1014808</u>	SWITCH, LIMIT	2
4	0008057	NUT, HEX, #4 - 40	2
5	0008058	WASHER, LOCK, #4	2
6	<u>1014871</u>	SCREW, HEX WASHER HEAD, #4 - 40 x 2	2
7	<u>1017799</u>	BAR, BUS	2
8	0000451	WASHER, LOCK, 1/4	4
9	0001028	NUT, HEX, 1/4 - 20	4
10	<u>1012987</u>	HANDLE, FORWARD AND REVERSE SWITCH	1
11	<u>1013198</u>	SCREW, PHILLIPS HEAD MACHINE, #8 - 32 x 5/8	1
12	1016845	SCREW, PHILLIPS TRUSS HEAD, 1/4 - 20 x 2 1/8	3
13	0008233	NUT, NYLON LOCK, 1/4 - 20	3

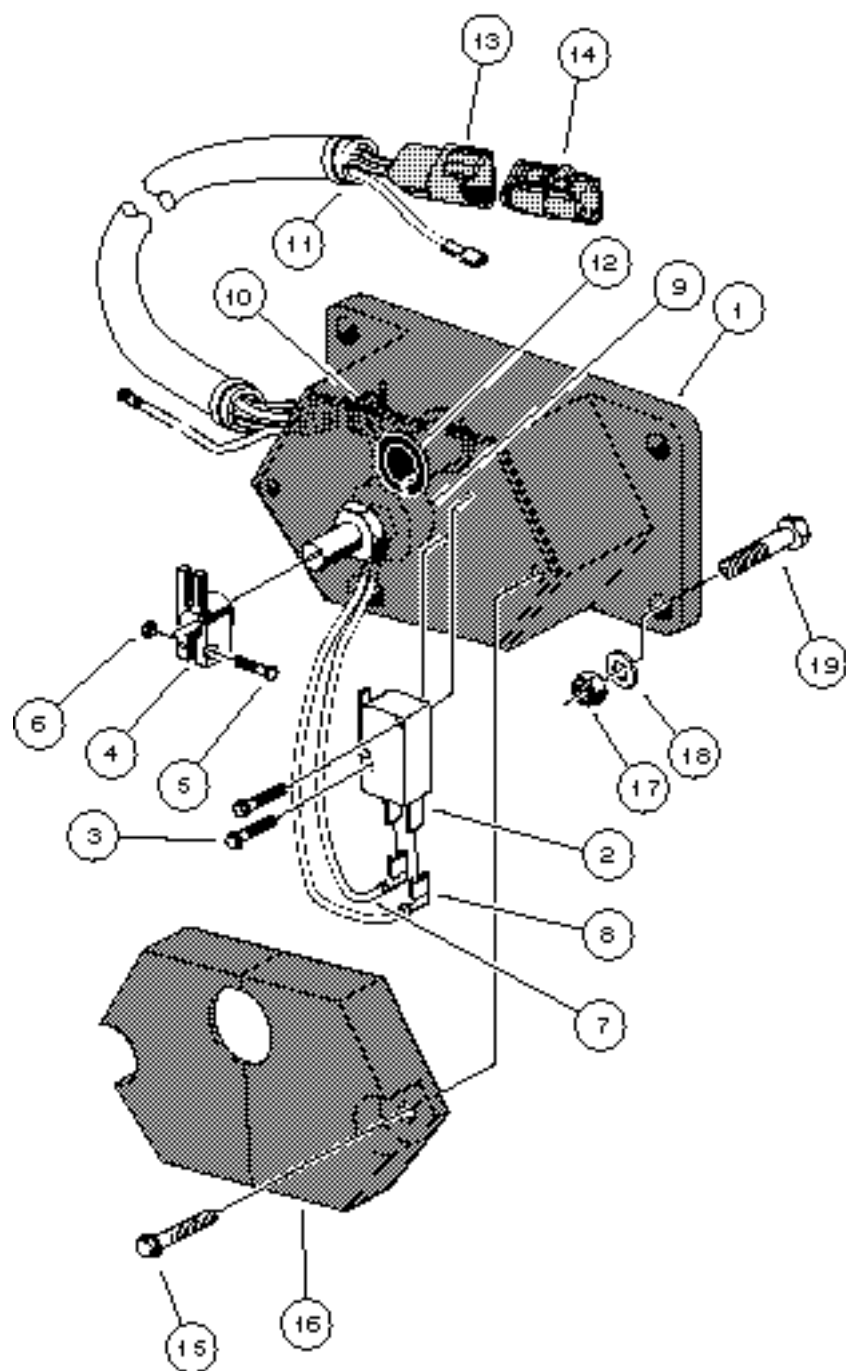

CONTINUOUSLY VARIABLE POTENTIOMETER POWERDRIVE ELECTRIC VEHICLE

12

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>1017392-01</u>	ASSEMBLY, POTENTIOMETER HOUSING WITH GRAY PLUG (INCLUDES ITEMS 1 - 13)	1
1	N/A	HOUSING, POTENTIOMETER	1
2	<u>1017830</u>	SWITCH, LIMIT	1
3	<u>1018226-01</u>	SCREW, HEX HEAD, #4 - 24	2
4	<u>1018090-01</u>	LEVER, POTENTIOMETER	1
5	<u>1017853</u>	SCREW, HEX HEAD, #6 - 32 x 3/4	1
6	<u>1011229</u>	NUT, LOCK, "K", #6 - 32	1
7	1017393	WIRE ASSEMBLY, #18 BLUE	1
8	1017394	WIRE ASSEMBLY, #18 GREEN/WHITE	1
9	N/A	POTENTIOMETER	1
10	0008168	WRAP, TIE	3
11	N/A	CONDUIT, ELECTRICAL	1
12	<u>1017424</u>	BEARING, PIVOT SUPPORT	1
13	<u>1018951-01</u>	HOUSING, FEMALE, 3-WIRE, GRAY	1
14	<u>1019201-01</u>	HOUSING, MALE, 3-WIRE, GRAY	1
15	<u>1018043-01</u>	SCREW, HI-LO HEX HEAD, #8 - 18 x 1/2	2
16	<u>1017743</u>	COVER, ACCELERATOR	1
17	0008233	NUT, NYLON LOCK, 1/4 - 20	4
18	0000332	WASHER, FLAT, 1/4	4
19	<u>1018619-01</u>	SCREW, HEX HEAD CAP, 1/4 - 20 x 1 1/8	4




WIRING - CARRYALL I POWERDRIVE ELECTRIC VEHICLE

12


E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	1017942-05	WIRE HARNESS (INCLUDES ITEMS 1 - 16)	1
1	1017956	WIRE ASSEMBLY, #18 BROWN	1
2	1016121	WIRE ASSEMBLY, #18 GREEN	1
3	1016135	WIRE ASSEMBLY, #18 RED	1
4	1016134	WIRE ASSEMBLY, #18 ORANGE	1
5	<u>1018651-01</u>	ASSEMBLY, 3-WIRE PLUG (INCLUDES #18 PURPLE, #18 YELLOW AND ITEM 6) ..	1
6	<u>1018830-02</u>	WIRE ASSEMBLY, #18 BLACK (INCLUDES RESISTOR AND #18 WHITE WIRE) ..	1
7	1018403-01	WIRE ASSEMBLY, #18 GREEN	1
8	1016122	WIRE ASSEMBLY, #18 WHITE/BLACK	1
9	<u>1018110</u>	WIRE ASSEMBLY, #6 BLUE	1
10	<u>1015856</u>	WIRE ASSEMBLY, #6 WHITE	1
11	<u>1014854</u>	WIRE ASSEMBLY, #6 ORANGE	1
12	1017993	WIRE ASSEMBLY, #18 RED/WHITE	1
13	<u>1015858</u>	WIRE ASSEMBLY, #6 YELLOW	1
14	<u>1018109</u>	WIRE ASSEMBLY, #6 BLUE	1
15	<u>1015860</u>	WIRE ASSEMBLY, #6 GREEN	1
16	1015865	WIRE ASSEMBLY, #18 RED	1
17	<u>1015861</u>	WIRE ASSEMBLY, #6 WHITE	1
18	1017393	WIRE ASSEMBLY, #18 BLUE (PART OF POTENTIOMETER ASSEMBLY)	1
19	1017967-01	WIRE ASSEMBLY, #18 ORANGE/WHITE	1
20	1017394	WIRE ASSEMBLY, #18 GREEN/WHITE (PART OF POTENTIOMETER ASSEMBLY)	1
21	N/A	WIRE ASSEMBLY, #10 BLACK (PART OF ON-BOARD COMPUTER ASSEMBLY)	1
22	N/A	WIRE ASSEMBLY, #18 GREY (PART OF ON-BOARD COMPUTER ASSEMBLY)	1
23	N/A	WIRE ASSEMBLY, #10 RED (PART OF FUSE AND RECEPTACLE ASSEMBLY)	1
24	N/A	WIRE ASSEMBLY, #18 YELLOW (PART OF ON-BOARD COMPUTER ASSEMBLY)	1
25	N/A	WIRE ASSEMBLY, #18 RED (PART OF ON-BOARD COMPUTER ASSEMBLY)	1
26	N/A	WIRE ASSEMBLY, #10 BLACK (PART OF ON-BOARD COMPUTER ASSEMBLY)	1
27	1018278-01	KIT, WIRE AND TERMINAL, #6 BLACK	1
28	<u>1018376-01</u>	WIRE ASSEMBLY, #6 RED	1
29	1014948	ASSEMBLY, DIODE	1
30	<u>1014947</u>	ASSEMBLY, RESISTOR	1
31	<u>1017957-01</u>	WIRE ASSEMBLY, #6 BLACK	5

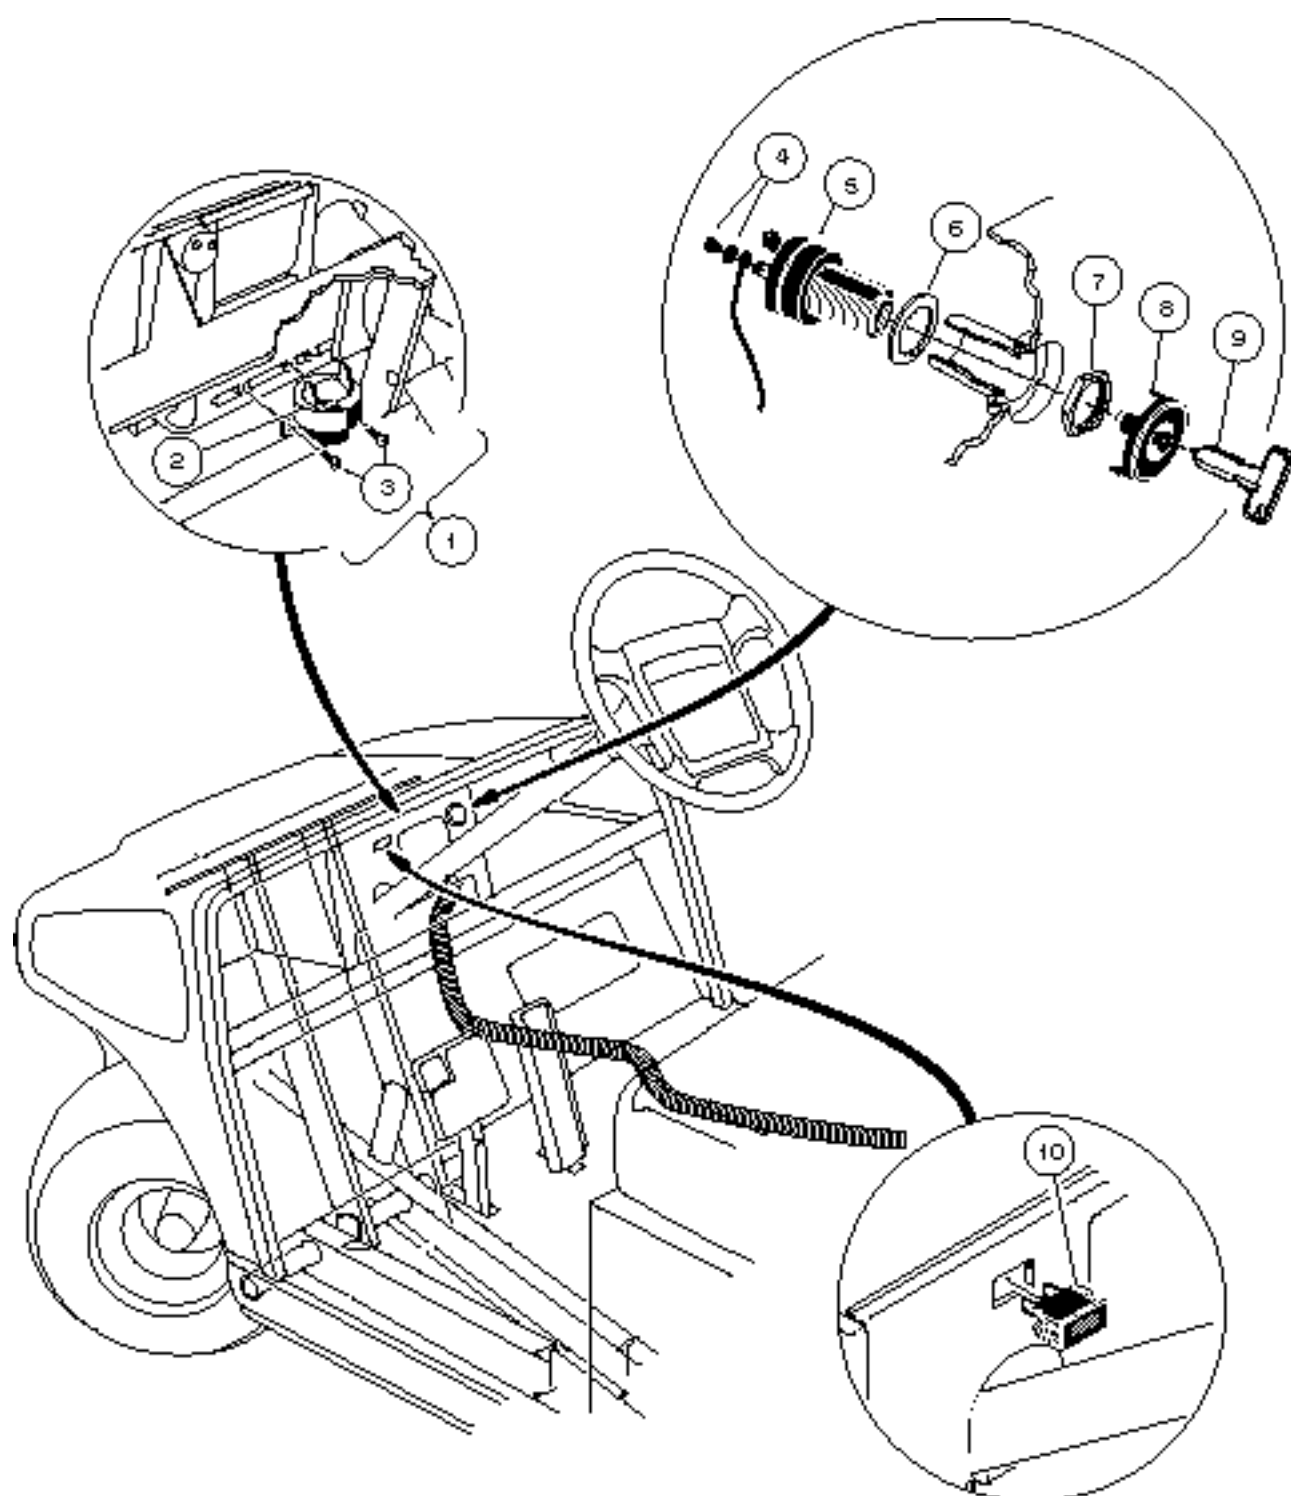

ELECTRICAL COMPONENTS, FRONT BODY
CARRYALL I POWERDRIVE ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016859</u>	KIT, REVERSE BUZZER (INCLUDES ITEMS 2 AND 3)	1
2	<u>1016851</u>	BUZZER, REVERSE	1
3	<u>1016849</u>	SCREW, PAN HEAD HI-LO, #4 - 24 x 5/16	2
4	<u>1018306-01</u>	ASSEMBLY, SCREW AND WASHER	2
5	<u>1018262-01</u>	SWITCH, KEY	1
6	<u>1018511-01</u>	WASHER	1
7	<u>1018307-01</u>	NUT, KEY SWITCH	1
8	<u>1018345-02</u>	CAP, KEY SWITCH	1
9	<u>1012505</u>	KEY (PAIR)	1
10	<u>1018025-01</u>	LIGHT, BATTERY WARNING	1

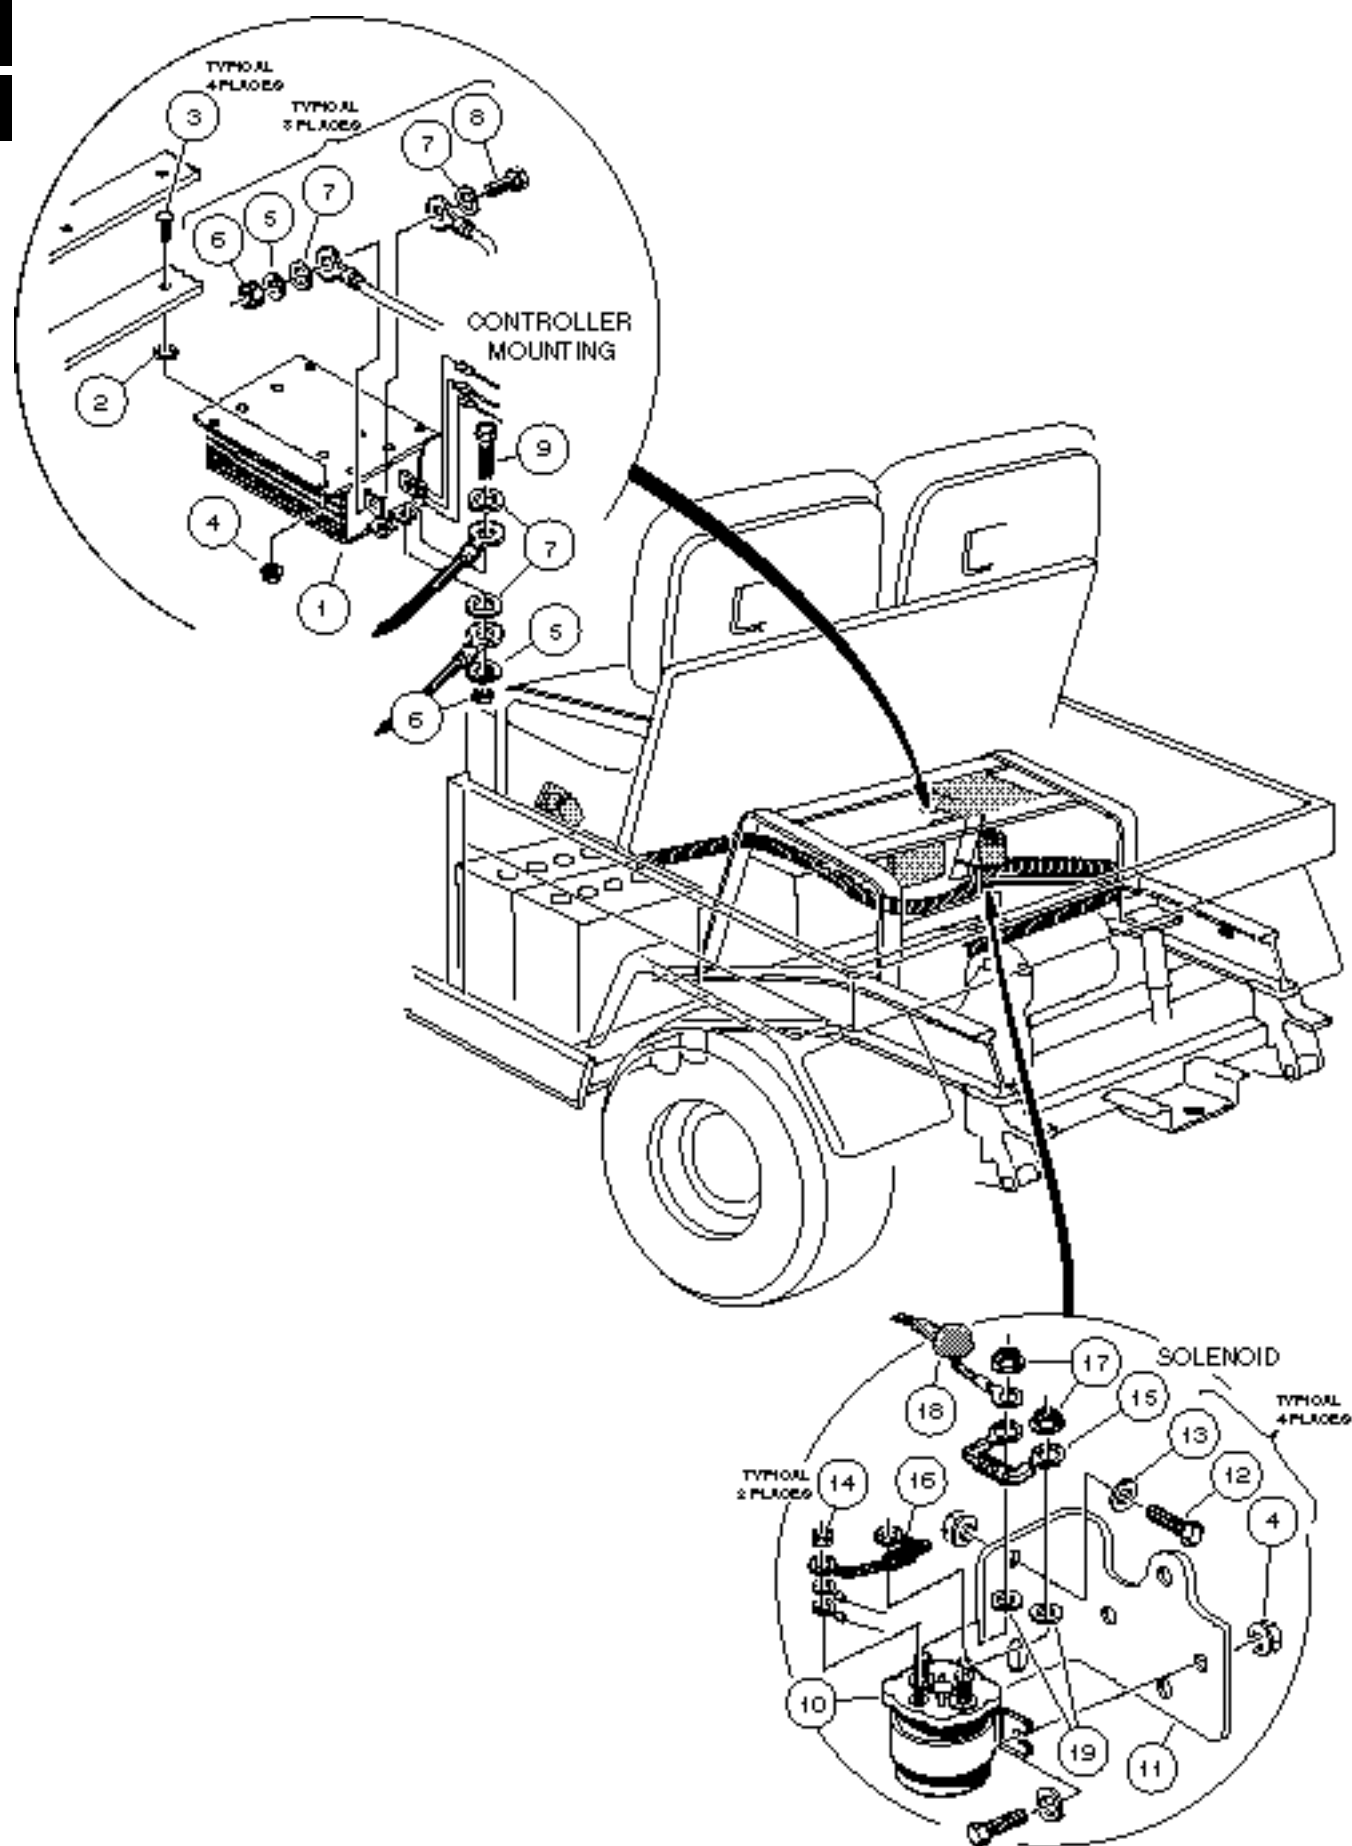


ELECTRICAL COMPONENTS, REAR BODY CARRYALL I POWERDRIVE ELECTRIC VEHICLE

12

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1018402-03</u>	CONTROLLER, 48 VOLT (300 AMP)	1
2	<u>1016631</u>	NUT, PUSH	4
3	<u>1017203</u>	BOLT, CARRIAGE, 1/4 - 20 x 1	4
4	<u>1018356-01</u>	NUT, HEX FLANGED LOCK, 1/4 - 20	8
5	0007174	WASHER, LOCK, 5/16	4
6	0001242	NUT, HEX, 5/16 - 18	4
7	0001241	WASHER, FLAT, 5/16	8
8	0007173	BOLT, HEX HEAD, 5/16 - 18 x 3/4	3
9	0001218	BOLT, HEX HEAD, 5/16 - 18 x 1 1/4	1
10	<u>1018836-01</u>	SOLENOID, 48 VOLT	1
11	<u>1018837-01</u>	BRACKET, SOLENOID MOUNTING	1
12	0007847	BOLT, HEX HEAD, 1/4 - 20 x 3/4	4
13	0000332	WASHER, FLAT, 1/4	4
14	0007893	NUT, HEX, #10 - 32	2
15	<u>1014947</u>	ASSEMBLY, RESISTOR	1
16	1014948	ASSEMBLY, DIODE	1
17	<u>1017237</u>	NUT, FLANGED LOCK, 5/16 - 24	2
18	<u>1019026-01</u>	BOOT, WIRE	1
19	<u>1019344-01</u>	WASHER, FLAT BRASS, 5/16	2

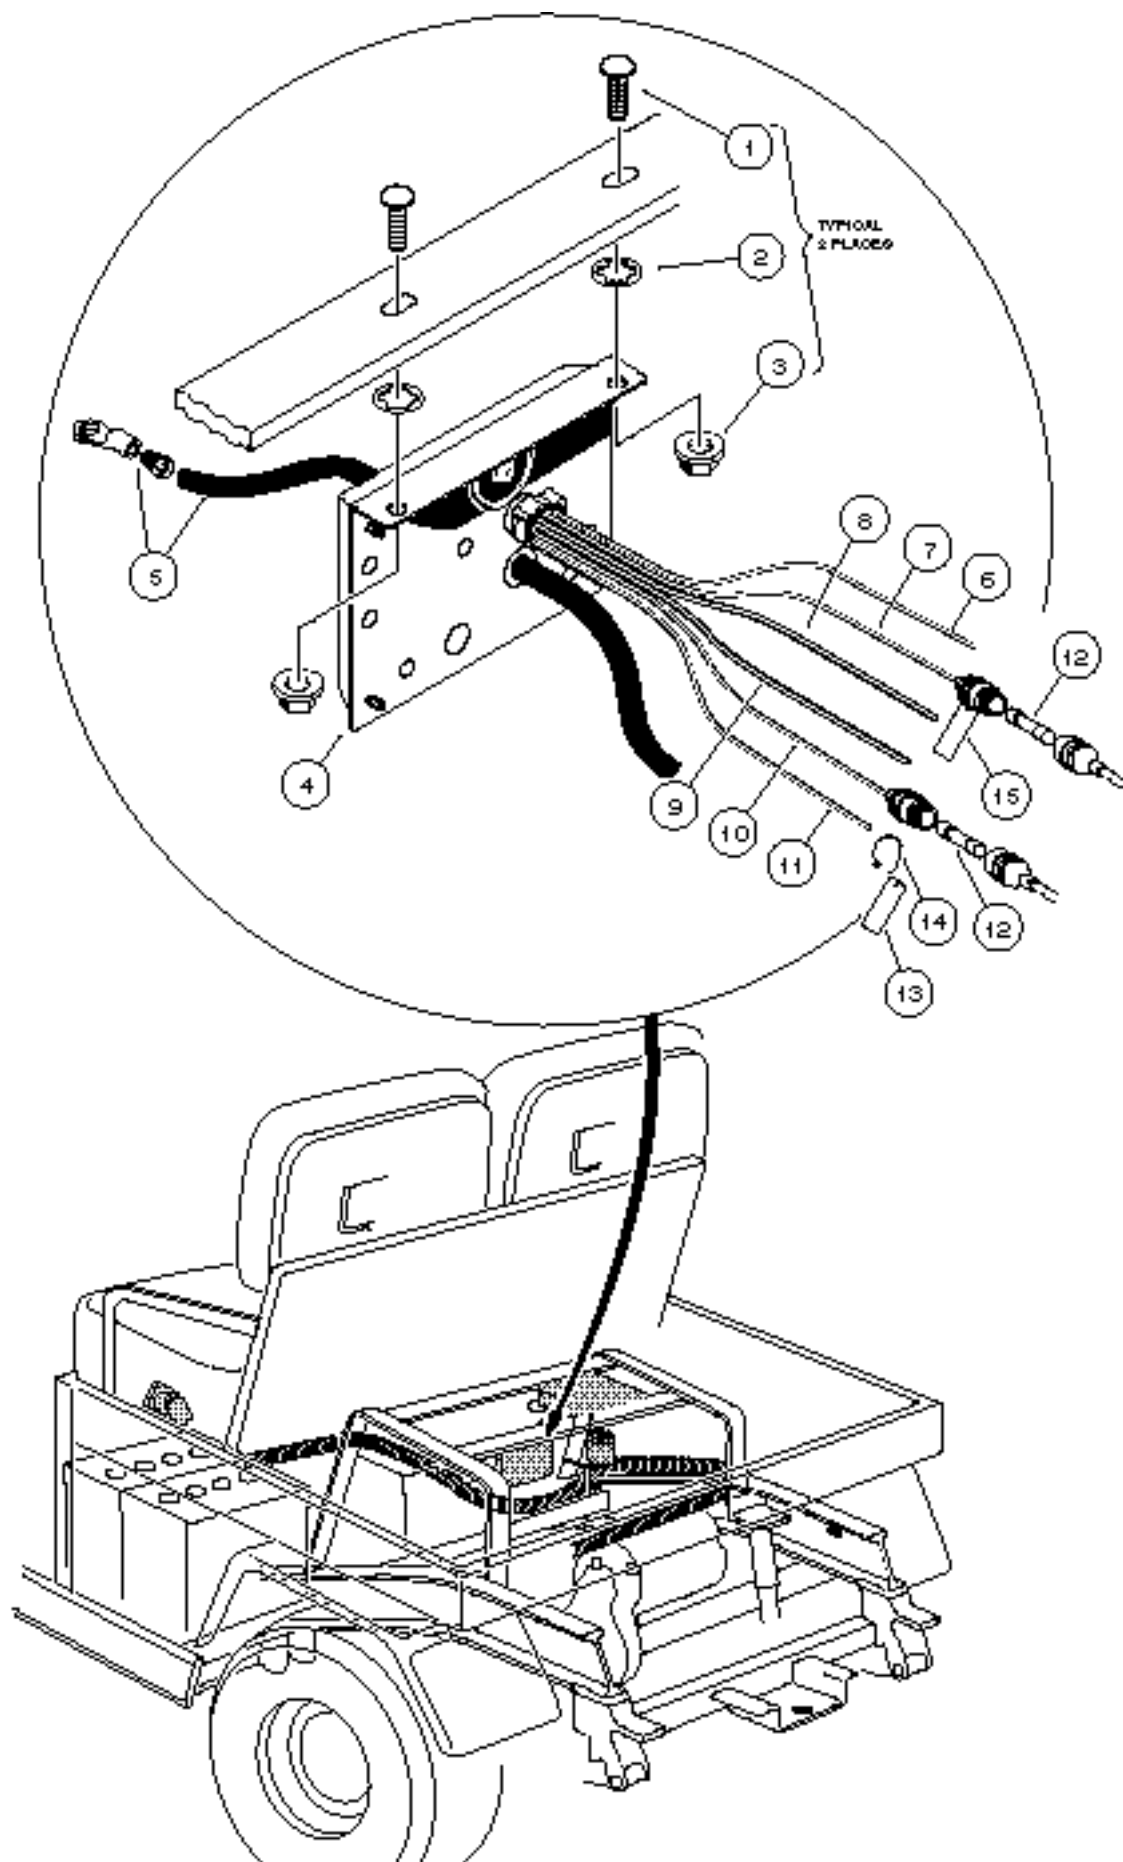


ELECTRICAL COMPONENTS, REAR BODY CARRYALL I POWERDRIVE ELECTRIC VEHICLE

12

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1017203</u>	BOLT, CARRIAGE, 1/4 - 20 x 1	2
2	<u>1016631</u>	NUT, PUSH, 3/16	2
3	<u>1018356-01</u>	NUT, HEX FLANGED LOCK, 1/4 - 20	2
4	<u>1018006-06</u>	COMPUTER, ON-BOARD (INCLUDES ITEMS 5 - 15)	1
5	1018278-01	KIT, WIRE AND TERMINAL, #6 BLACK	1
6	N/A	WIRE ASSEMBLY, #18 BROWN	1
7	N/A	WIRE ASSEMBLY, #18 GRAY	1
8	N/A	WIRE ASSEMBLY, #10 BLACK	1
9	N/A	WIRE ASSEMBLY, #10 BLACK	1
10	N/A	WIRE ASSEMBLY, #18 RED	1
11	N/A	WIRE ASSEMBLY, #18 YELLOW	1
12	<u>1018949-01</u>	FUSE ASSEMBLY, 3/8 AMP	2
13	1018844-01	LABEL	1
14	0008168	WRAP, TIE	2
15	1019349-01	LABEL	1

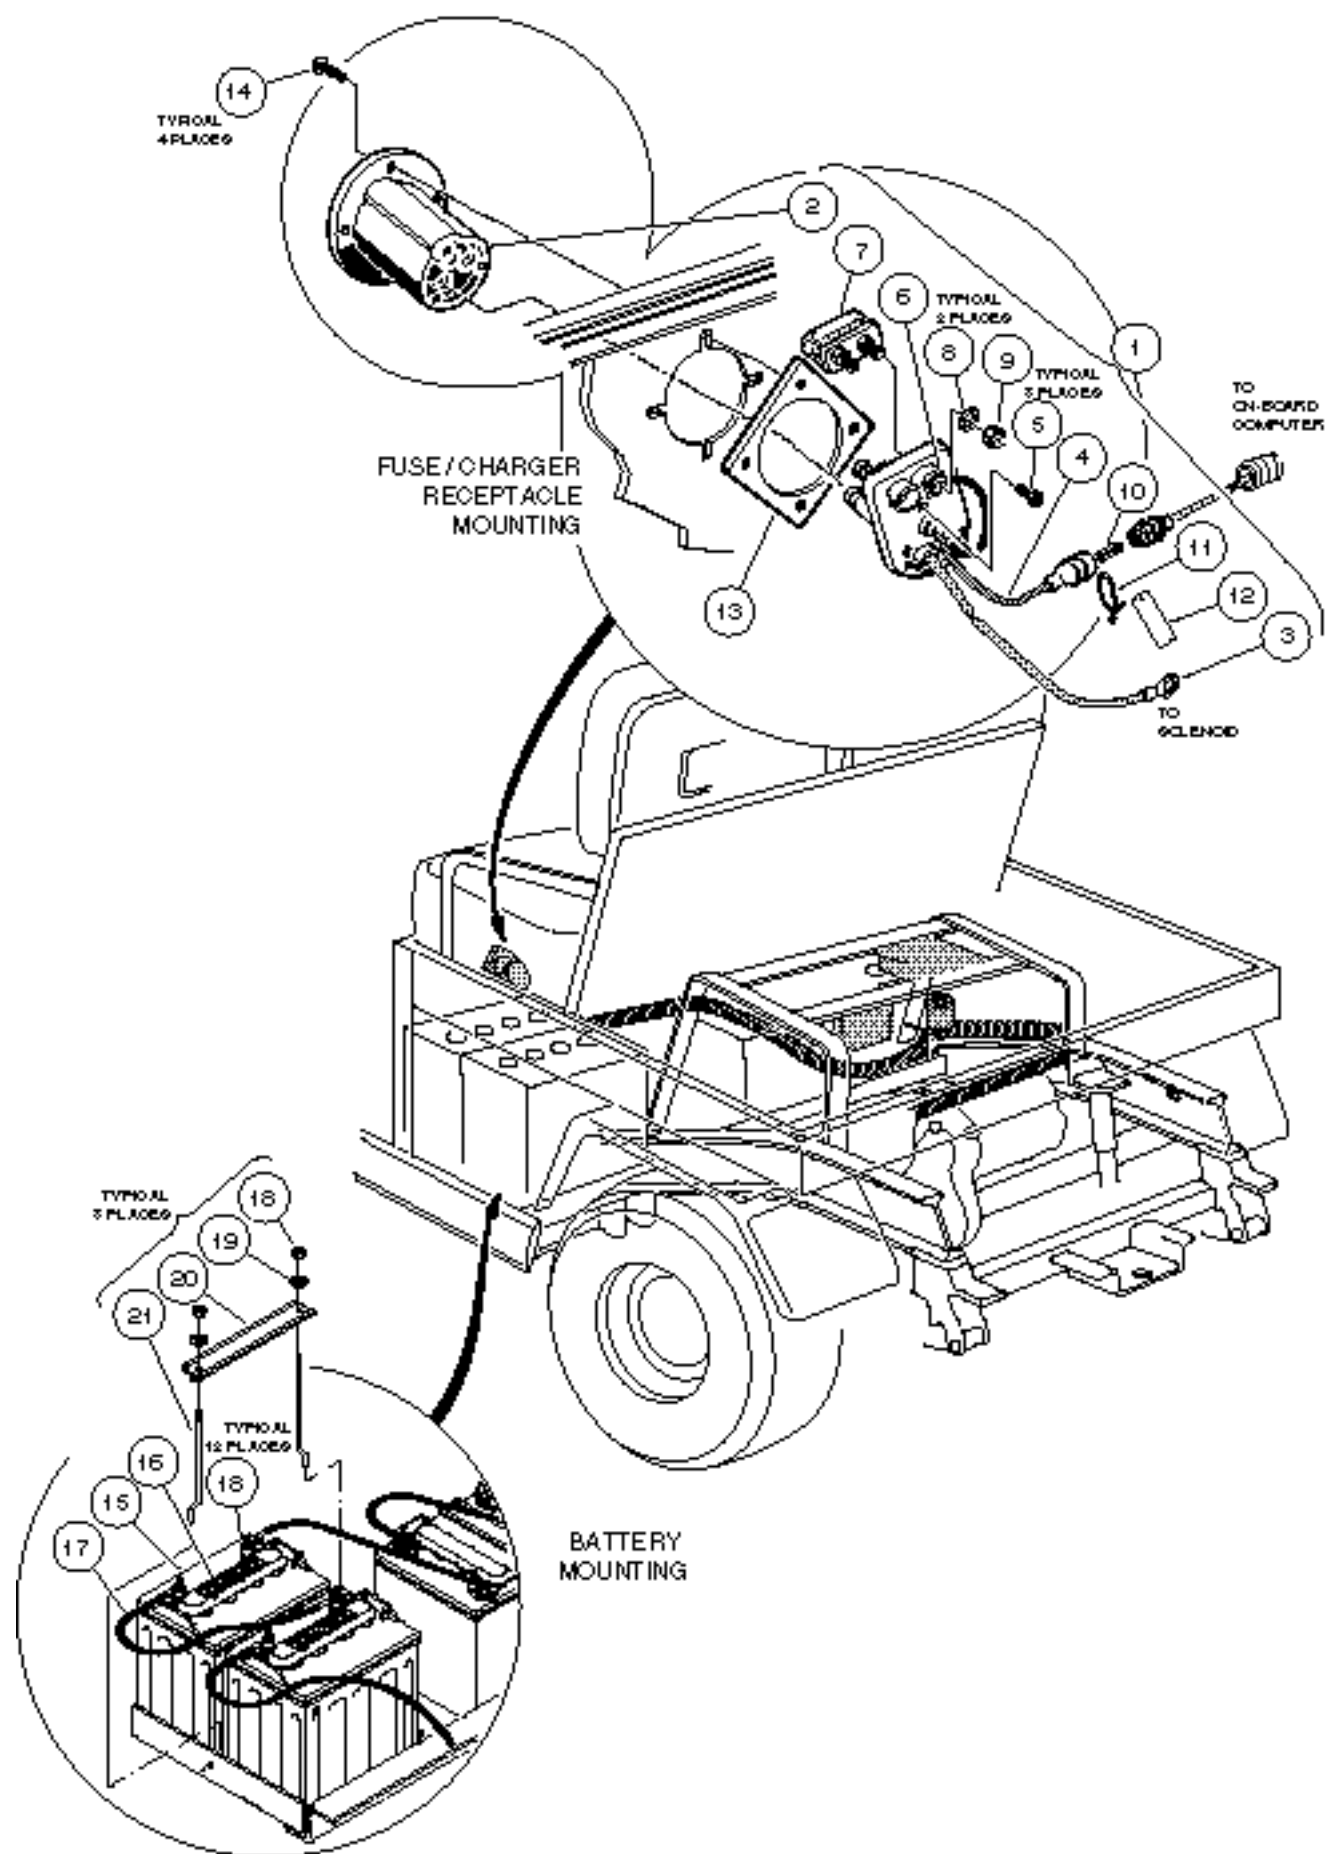


ELECTRICAL COMPONENTS, REAR BODY CARRYALL I POWERDRIVE ELECTRIC VEHICLE

12

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1018021-01</u>	KIT, FUSE AND RECEPTACLE (INCLUDES ITEMS 2 - 12)	1
2	<u>1017965-01</u>	BEZEL, RECEPTACLE	1
3	N/A	WIRE ASSEMBLY, #10 RED	1
4	N/A	WIRE ASSEMBLY, SENSE LEAD, GREY	1
5	<u>1017705</u>	SCREW, PHILLIPS PAN HEAD, #8 TYPE AB	3
6	N/A	WIRE ASSEMBLY, #10 BLACK	1
7	<u>1017968-01</u>	FUSE ASSEMBLY (INCLUDES ITEMS 8 AND 9)	1
8	<u>1018038</u>	WASHER, NARROW TYPE 13, #10	2
9	<u>1018028</u>	NUT, SERRATED, #10 - 32	2
10	<u>1018949-01</u>	FUSE ASSEMBLY, 3/8 AMP	1
11	0008168	WRAP, TIE	1
12	<u>1019349-01</u>	LABEL	1
13	<u>1018010-01</u>	PLATE, RECEPTACLE BACKING	1
14	<u>1018320-01</u>	SCREW, PHILLIPS PAN HEAD, #7 - 18 x 3/4	4
15	<u>1017977-01</u>	BATTERY, 8 VOLT POWERDRIVE	6
15	<u>1017977-02</u>	BATTERY, 8 VOLT POWERDRIVE, DRY	6
16	<u>1017978-01</u>	CAP, BATTERY, 4 PORT GANG	6
17	<u>1017957-01</u>	WIRE ASSEMBLY, #6 BLACK	5
18	<u>1014304</u>	NUT, HEX, STAINLESS STEEL, 5/16 - 18	18
19	<u>1011578</u>	WASHER, FLAT, TYPE B WIDE, 5/16	6
20	<u>1010908-01</u>	HOLD-DOWN, BATTERY	3
21	1013683	BOLT, "J"	6

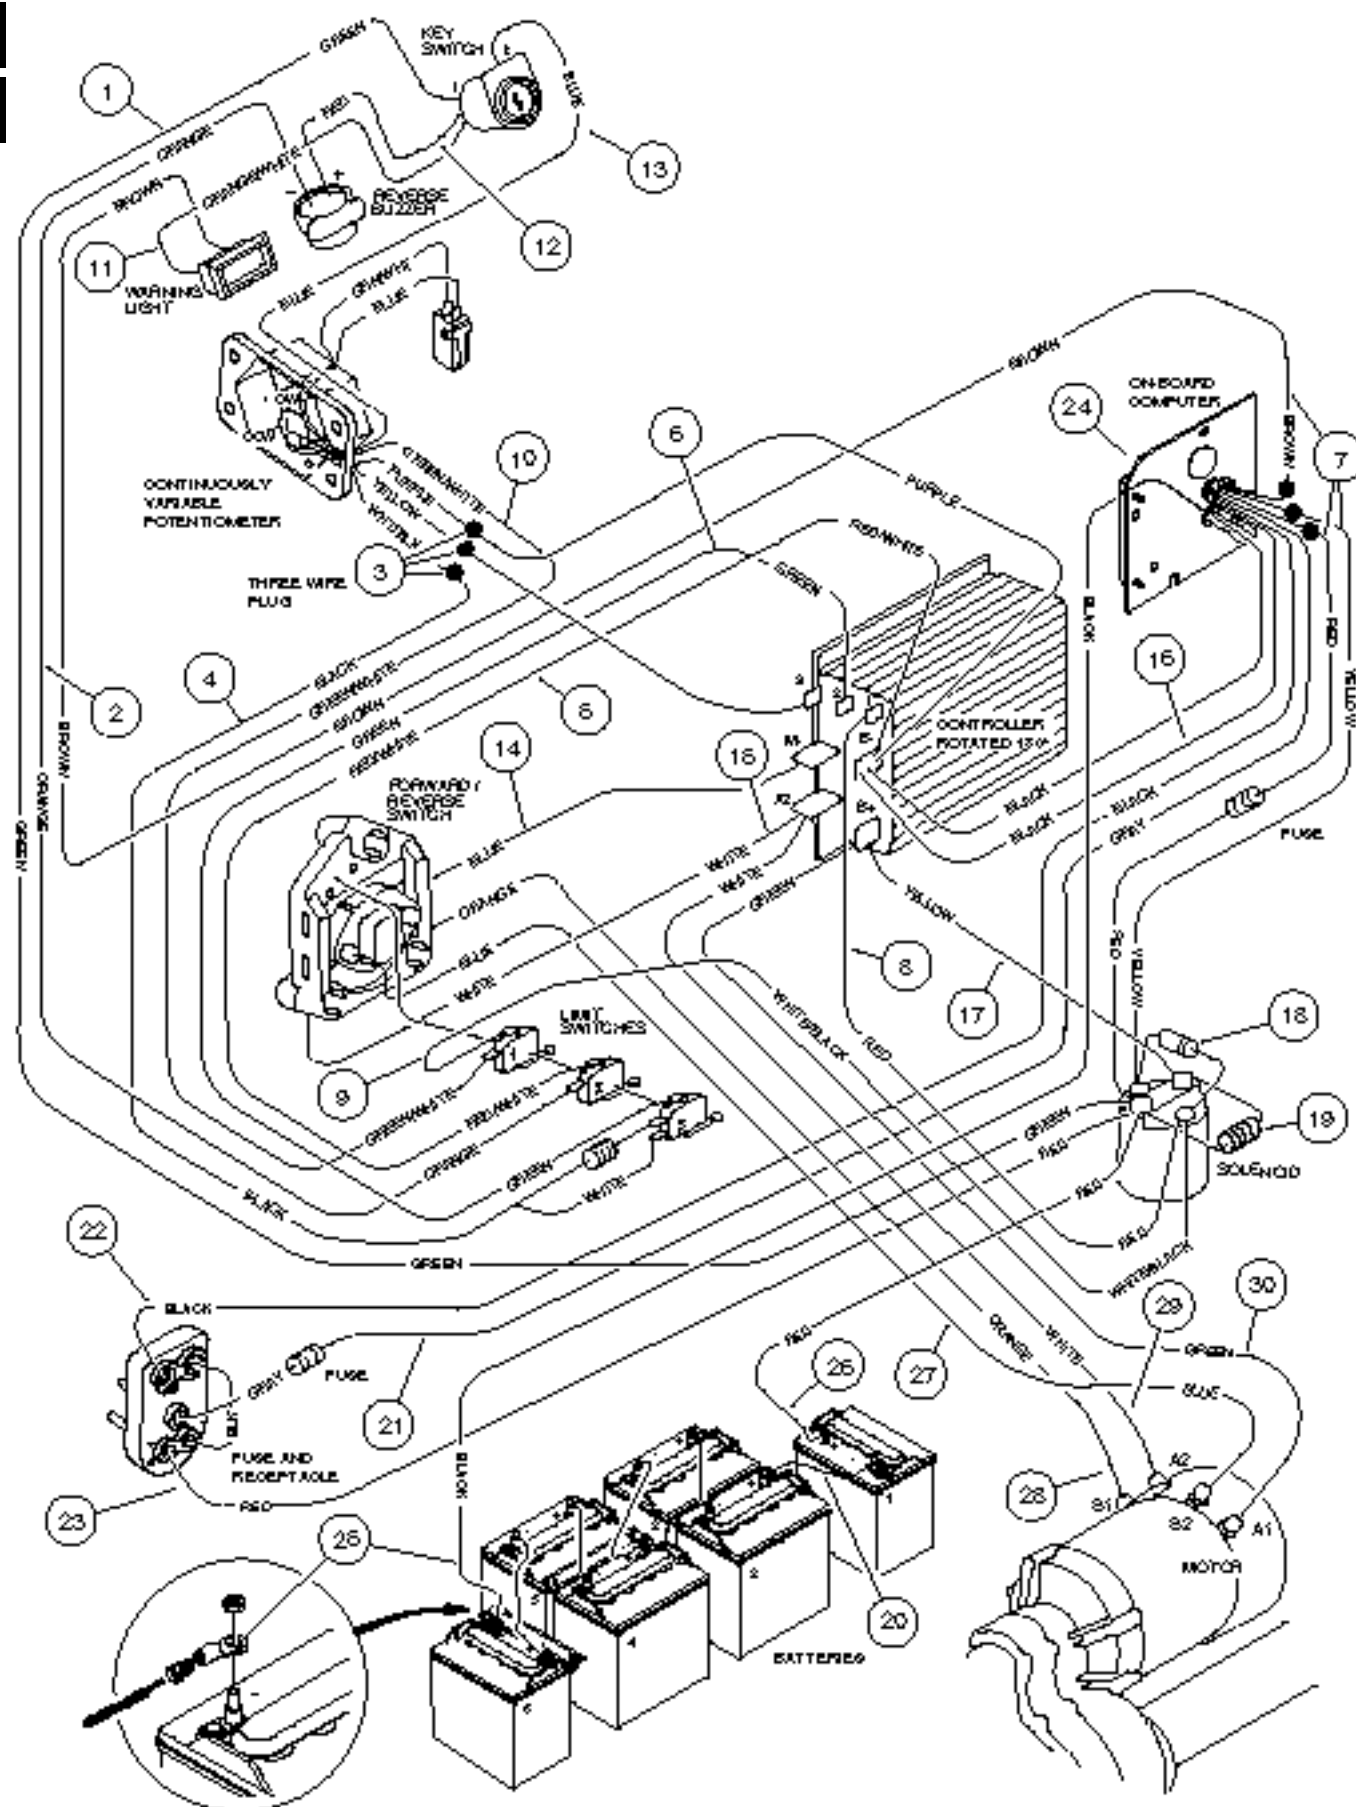


WIRING - CARRYALL II POWERDRIVE ELECTRIC VEHICLE

12


E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>1019116-01</u>	WIRE HARNESS (INCLUDES ITEMS 1 - 9)	1
1	<u>1019305-01</u>	WIRE ASSEMBLY, #18 GREEN	1
2	<u>1019306-01</u>	WIRE ASSEMBLY, #18 ORANGE	1
3	<u>1018651-06</u>	ASSEMBLY, 3-WIRE PLUG (INCLUDES #18 PURPLE, #18 YELLOW AND ITEM 4) ..	1
4	<u>1018830-02</u>	WIRE ASSEMBLY, #18 BLACK (INCLUDES RESISTOR AND #18 WHITE WIRE) ..	1
5	<u>1019307-01</u>	WIRE ASSEMBLY, #18 RED/WHITE	1
6	<u>1019309-01</u>	WIRE ASSEMBLY, #18 GREEN	1
7	<u>1019308-01</u>	ASSEMBLY, 4-WIRE PLUG (INCLUDES #18 BROWN, #18 YELLOW, AND #18 RED) ...	1
8	<u>1019310-01</u>	WIRE ASSEMBLY, #18 RED	1
9	<u>1019312-01</u>	WIRE ASSEMBLY, #18 WHITE/BLACK	1
10	<u>1017394</u>	WIRE ASSEMBLY, #18 GREEN/WHITE (PART OF POTENTIOMETER ASSEMBLY)	1
11	<u>1017967-01</u>	WIRE ASSEMBLY, #18 ORANGE/WHITE	1
12	<u>1019123-01</u>	WIRE ASSEMBLY, #18 RED	1
13	<u>1017393</u>	WIRE ASSEMBLY, #18 BLUE (PART OF POTENTIOMETER ASSEMBLY)	1
14	<u>1019088-01</u>	WIRE ASSEMBLY, #6 BLUE	1
15	<u>1016729</u>	WIRE ASSEMBLY, #6 WHITE	1
16	N/A	WIRE ASSEMBLY, #10 BLACK (PART OF ON-BOARD COMPUTER ASSEMBLY)	1
17	<u>1016732</u>	WIRE ASSEMBLY, #6 YELLOW	1
18	<u>1014948</u>	ASSEMBLY, DIODE	1
19	<u>1014947</u>	ASSEMBLY, RESISTOR	1
20	<u>1017957-01</u>	WIRE ASSEMBLY, #6 BLACK	5
21	N/A	WIRE ASSEMBLY, #18 GREY (PART OF ON-BOARD COMPUTER ASSEMBLY)	1
22	N/A	WIRE ASSEMBLY, #10 BLACK (PART OF ON-BOARD COMPUTER ASSEMBLY)	1
23	N/A	WIRE ASSEMBLY, #10 RED (PART OF FUSE AND RECEPTACLE ASSEMBLY)	1
	<u>1019101-06</u>	WIRE HARNESS (INCLUDES ITEMS 24 - 30)	1
24	<u>1019629-01</u>	COMPUTER, ON-BOARD (SEE PAGE 12-23) (INCLUDES ITEM 25)	1
25	<u>1018278-03</u>	KIT, WIRE AND TERMINAL, #6 BLACK	1
26	<u>1019045-01</u>	WIRE ASSEMBLY, #6 RED	1
27	<u>1019046-01</u>	WIRE ASSEMBLY, #6 BLUE	1
28	<u>1019047-01</u>	WIRE ASSEMBLY, #6 ORANGE	1
29	<u>1019089-01</u>	WIRE ASSEMBLY, #6 WHITE	1
30	<u>1019044-01</u>	WIRE ASSEMBLY, #6 GREEN	1

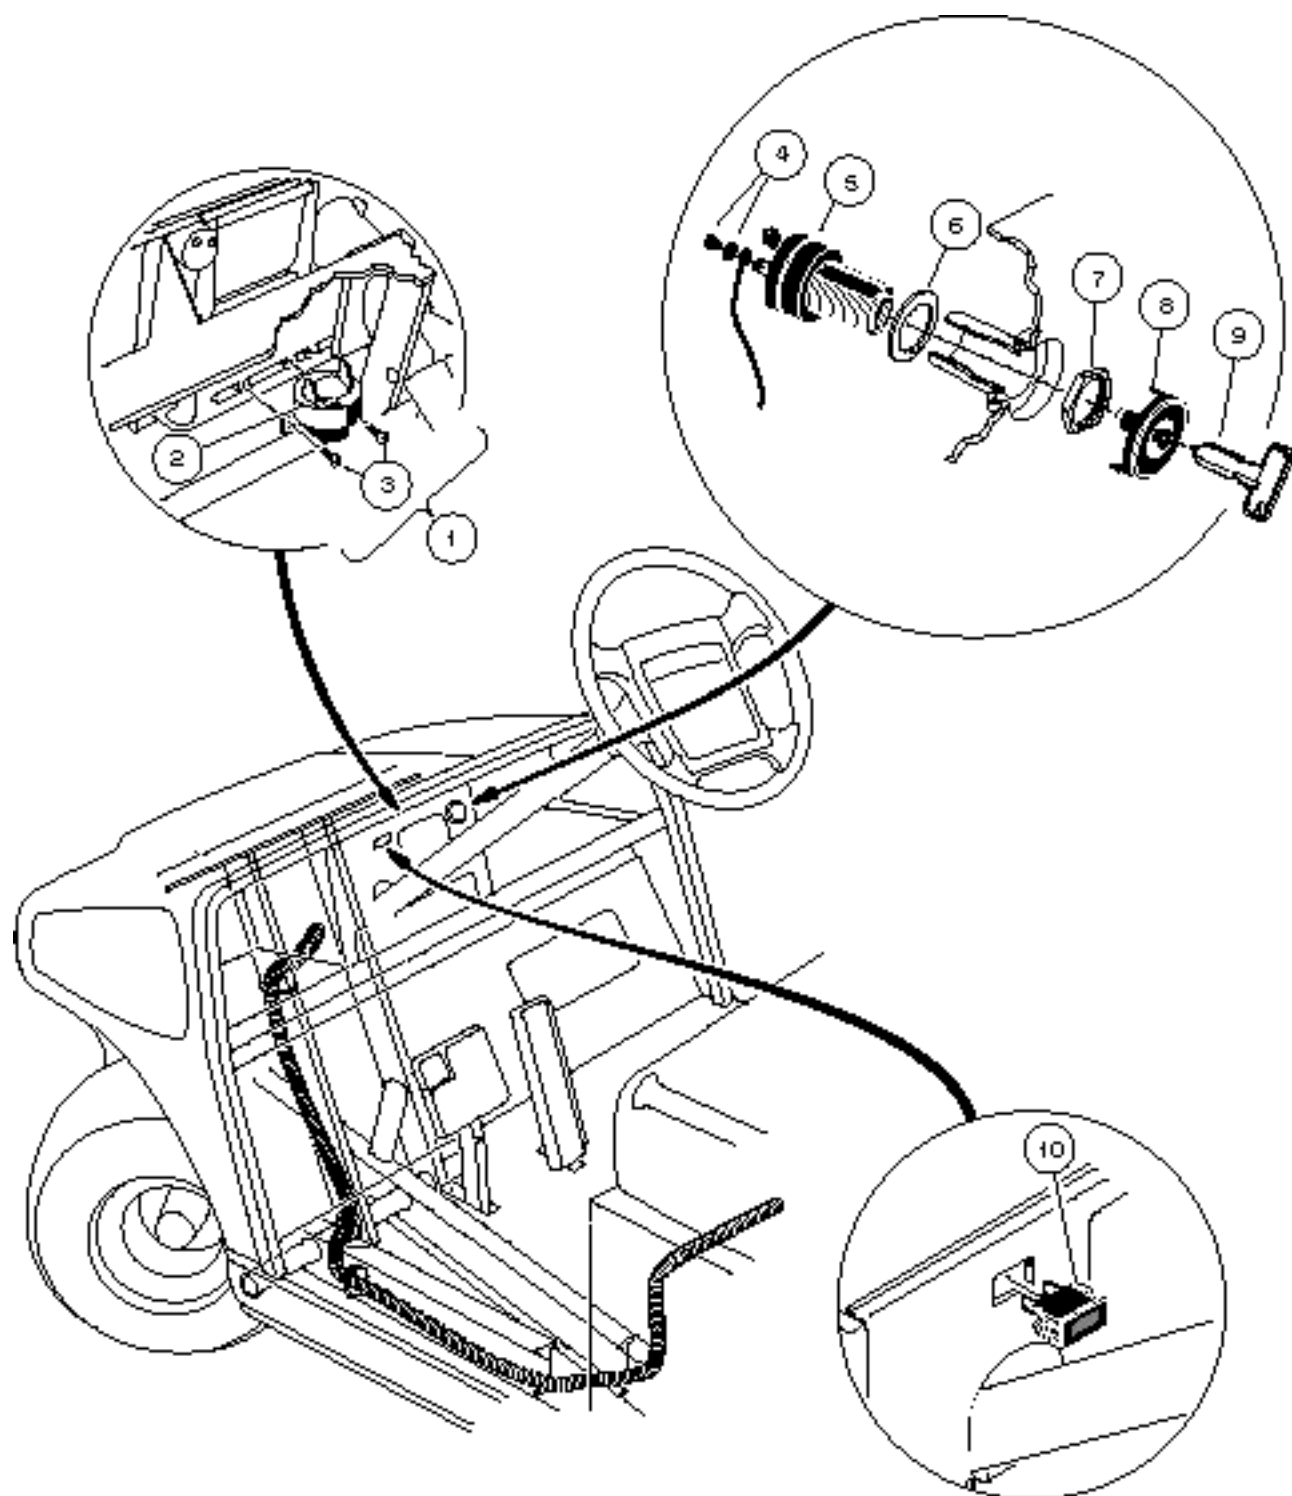

**ELECTRICAL COMPONENTS, FRONT BODY
CARRYALL II POWERDRIVE ELECTRIC VEHICLE**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016859</u>	KIT, REVERSE BUZZER (INCLUDES ITEMS 2 AND 3)	1
2	<u>1016851</u>	BUZZER, REVERSE	1
3	<u>1016849</u>	SCREW, PAN HEAD HI-LO, #4 - 24 x 5/16	2
4	<u>1018306-01</u>	ASSEMBLY, SCREW AND WASHER	2
5	<u>1018262-01</u>	SWITCH, KEY	1
6	<u>1018511-01</u>	WASHER	1
7	<u>1018307-01</u>	NUT, KEY SWITCH	1
8	<u>1018345-02</u>	CAP, KEY SWITCH	1
9	<u>1012505</u>	KEY (PAIR)	1
10	<u>1018025-01</u>	LIGHT, BATTERY WARNING	1

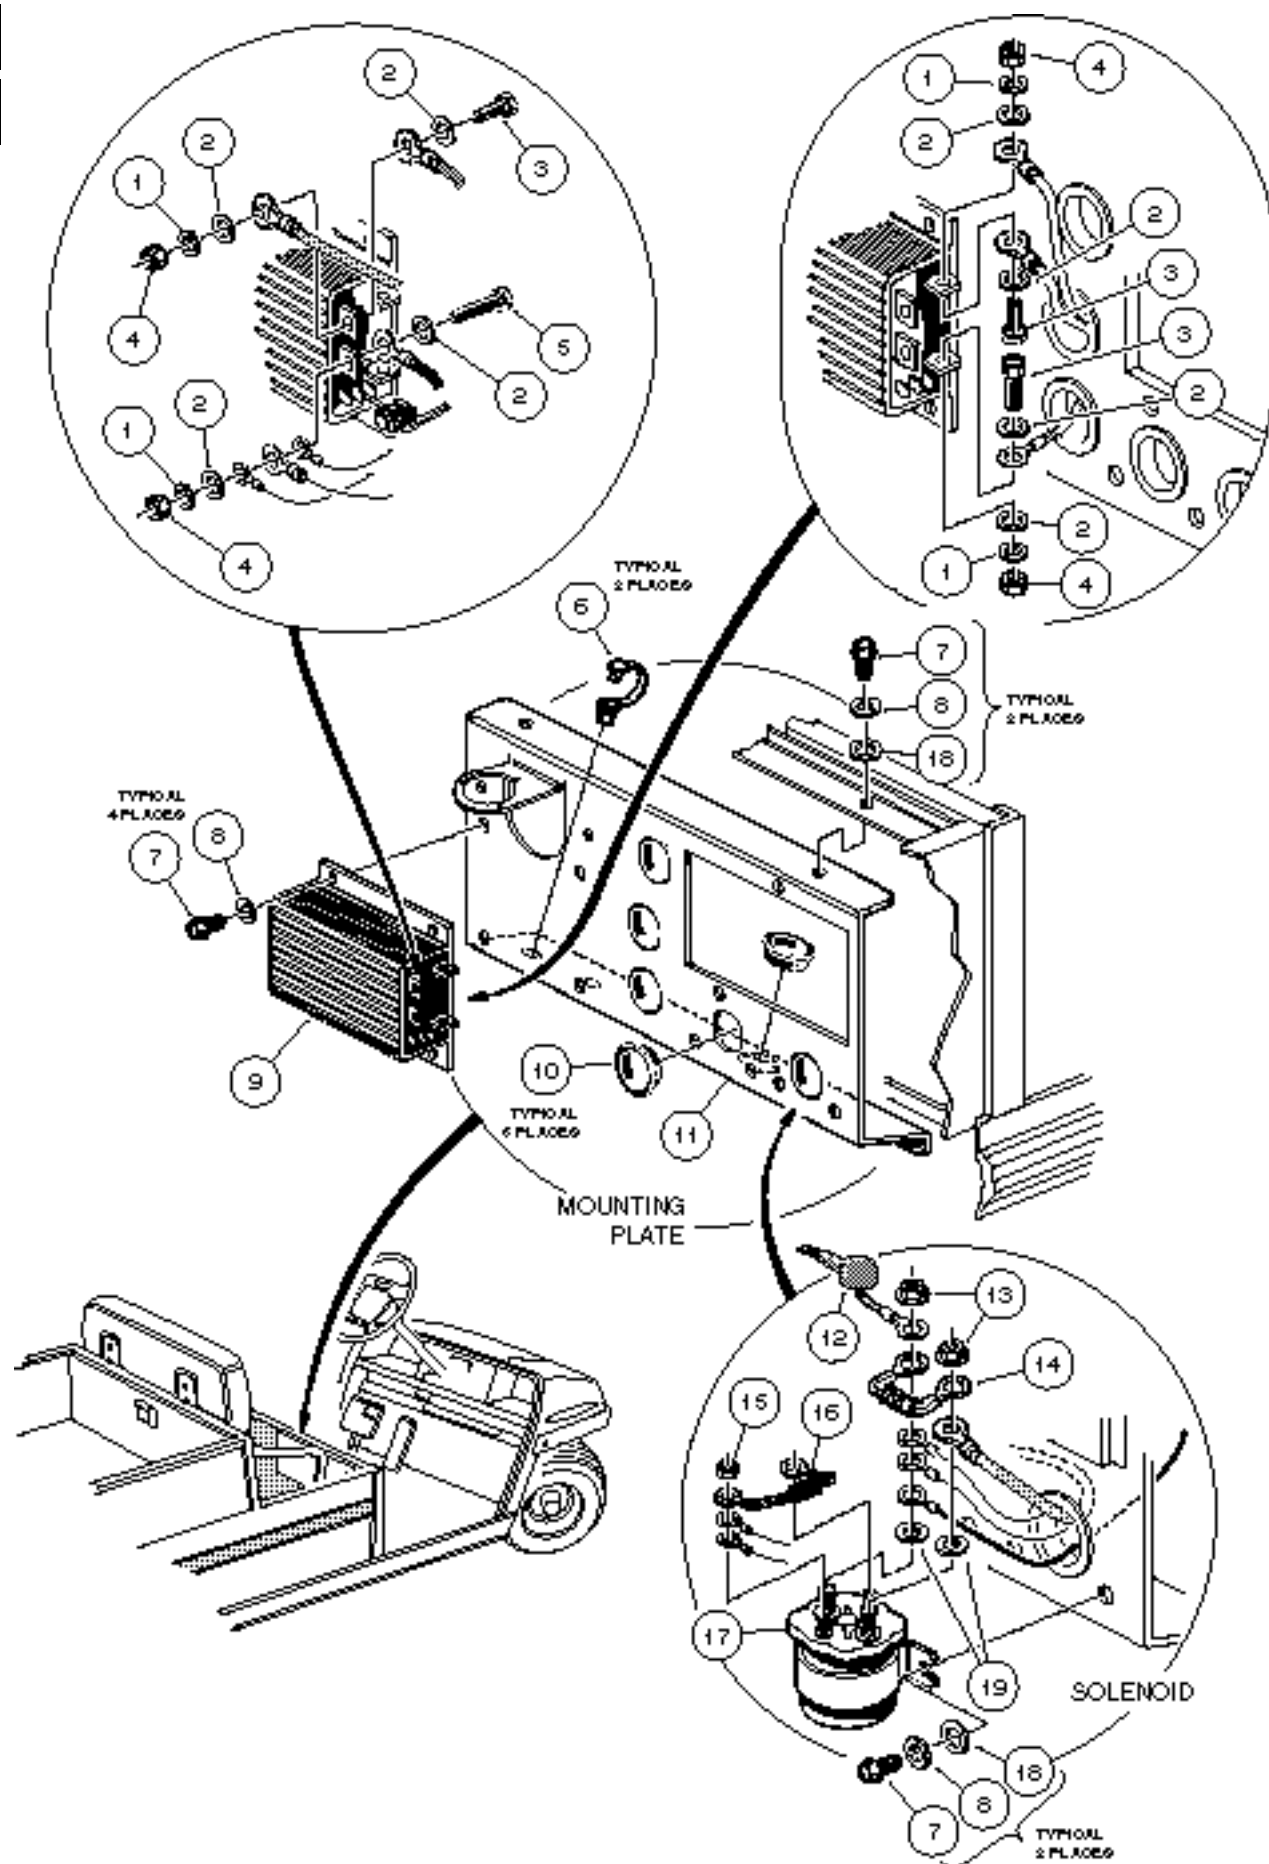


ELECTRICAL COMPONENTS, REAR BODY CARRYALL II POWERDRIVE ELECTRIC VEHICLE

12

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	0007174	WASHER, LOCK, 5/16	4
2	0001241	WASHER, FLAT, 5/16	8
3	0007173	BOLT, HEX HEAD, 5/16 - 18 x 3/4	3
4	0001242	NUT, HEX, 5/16 - 18	4
5	0001218	BOLT, HEX HEAD, 5/16 - 18 x 1 1/4	1
6	<u>1019183-01</u>	CLAMP, WIRE	2
7	<u>1012285</u>	SCREW, HEX HEAD THREAD ROLLING, 1/4 - 20 x 5/8	8
8	0000451	WASHER, LOCK, 1/4	8
9	<u>1018402-03</u>	CONTROLLER, 48 VOLT (300 AMP)	1
10	<u>1019243-01</u>	BUSHING, SNAP	6
11	<u>1019117-01</u>	PLATE, MOUNTING	1
12	<u>1019026-01</u>	BOOT, WIRE	1
13	<u>1017237</u>	NUT, FLANGED LOCK, 5/16 - 24	2
14	<u>1014947</u>	ASSEMBLY, RESISTOR	1
15	0007893	NUT, HEX, #10 - 32	2
16	1014948	ASSEMBLY, DIODE	1
17	<u>1018836-01</u>	SOLENOID, 48 VOLT	1
18	0000332	WASHER, FLAT, 1/4	4
19	<u>1019344-01</u>	WASHER, FLAT BRASS, 5/16	2

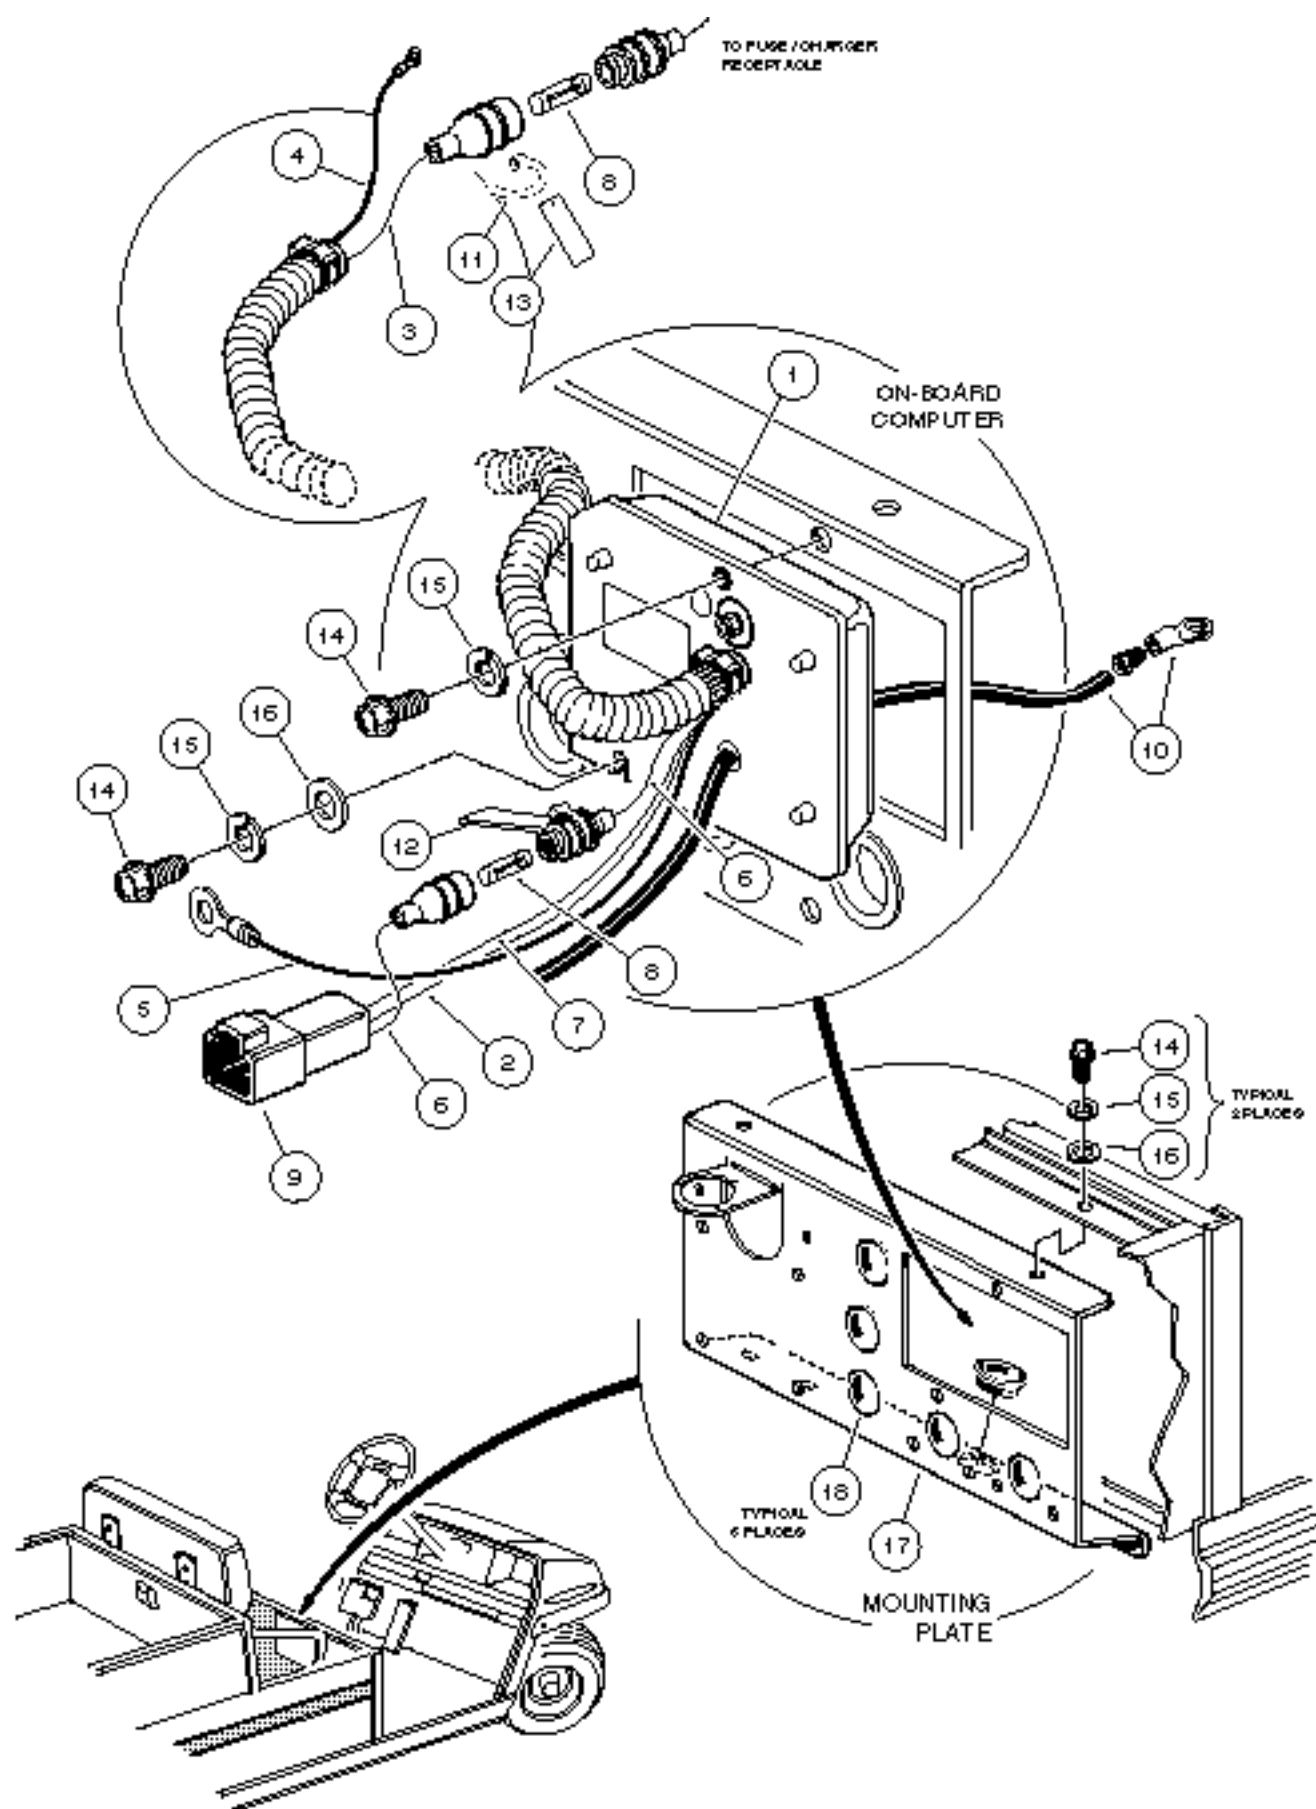


ELECTRICAL COMPONENTS, REAR BODY CARRYALL II POWERDRIVE ELECTRIC VEHICLE

12

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1019629-01</u>	COMPUTER, ON-BOARD (INCLUDES ITEMS 2 - 13)	1
2	N/A	WIRE ASSEMBLY, #18 BROWN	1
3	N/A	WIRE ASSEMBLY, #18 GRAY	1
4	N/A	WIRE ASSEMBLY, #10 BLACK	1
5	N/A	WIRE ASSEMBLY, #10 BLACK	1
6	N/A	WIRE ASSEMBLY, #18 RED	1
7	N/A	WIRE ASSEMBLY, #18 YELLOW	1
8	<u>1018949-01</u>	FUSE ASSEMBLY, 3/8 AMP	2
9	<u>1019324-01</u>	CONNECTOR, FOUR WIRE	1
10	1018278-03	KIT, WIRE AND TERMINAL, #6 BLACK	1
11	0008168	WRAP, TIE	2
12	1018844-01	LABEL	1
13	1019349-01	LABEL	1
14	<u>1012285</u>	SCREW, HEX HEAD THREAD ROLLING, 1/4 - 20 x 5/8	4
15	0000451	WASHER, LOCK, 1/4	4
16	0000332	WASHER, FLAT, 1/4	3
17	<u>1019117-01</u>	PLATE, MOUNTING	1
18	<u>1019243-01</u>	BUSHING, SNAP	6

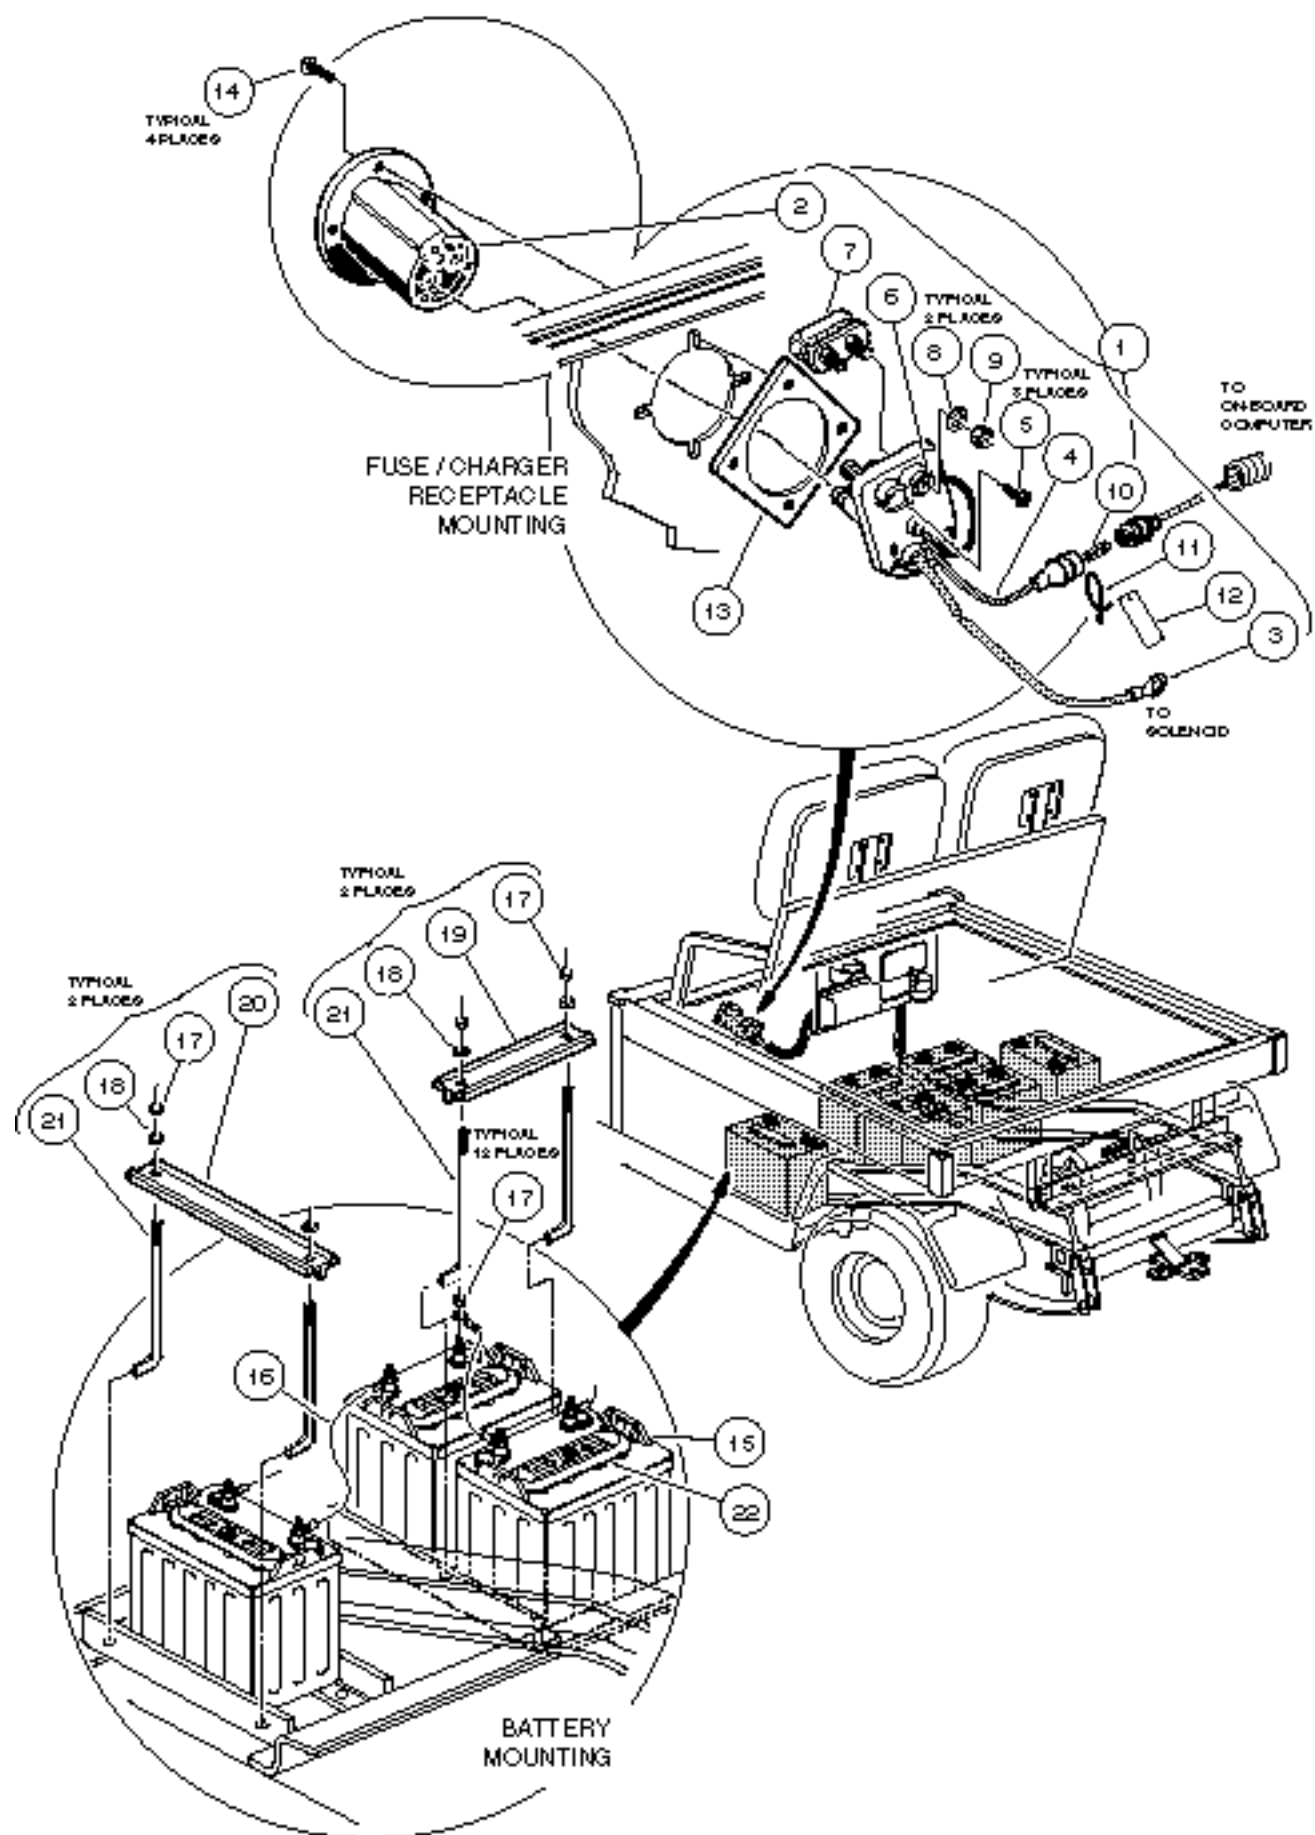


ELECTRICAL COMPONENTS, REAR BODY CARRYALL II POWERDRIVE ELECTRIC VEHICLE

12

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1018021-01</u>	KIT, FUSE AND RECEPTACLE (INCLUDES ITEMS 2 - 12)	1
2	<u>1017965-01</u>	BEZEL, RECEPTACLE	1
3	N/A	WIRE ASSEMBLY, #10 RED	1
4	N/A	WIRE ASSEMBLY, SENSE LEAD, GREY	1
5	<u>1017705</u>	SCREW, PHILLIPS PAN HEAD, #8 TYPE AB	3
6	N/A	WIRE ASSEMBLY, #10 BLACK	1
7	<u>1017968-01</u>	FUSE ASSEMBLY (INCLUDES ITEMS 8 AND 9)	1
8	<u>1018038</u>	WASHER, NARROW TYPE 13, #10	2
9	<u>1018028</u>	NUT, SERRATED, #10 - 32	2
10	<u>1018949-01</u>	FUSE ASSEMBLY, 3/8 AMP	1
11	0008168	WRAP, TIE	1
12	1019349-01	LABEL	1
13	<u>1018010-01</u>	PLATE, RECEPTACLE BACKING	1
14	<u>1018320-01</u>	SCREW, PHILLIPS PAN HEAD, #7 - 18 x 3/4	4
15	<u>1017977-01</u>	BATTERY, 8-VOLT POWERDRIVE	6
15	<u>1017977-02</u>	BATTERY, 8-VOLT POWERDRIVE, DRY.....	6
16	<u>1017957-01</u>	WIRE ASSEMBLY, #6 BLACK	5
17	<u>1014304</u>	NUT, HEX, STAINLESS STEEL, 5/16 -18	20
18	<u>1011578</u>	WASHER, FLAT, TYPE B WIDE, 5/16	8
19	<u>1010908-01</u>	HOLD-DOWN, BATTERY, SHORT	2
20	<u>1010908-02</u>	HOLD-DOWN, BATTERY, LONG	2
21	<u>1016682-01</u>	ROD, BATTERY HOLD-DOWN	8
22	<u>1017978-01</u>	CAP, BATTERY, 4 PORT GANG	6

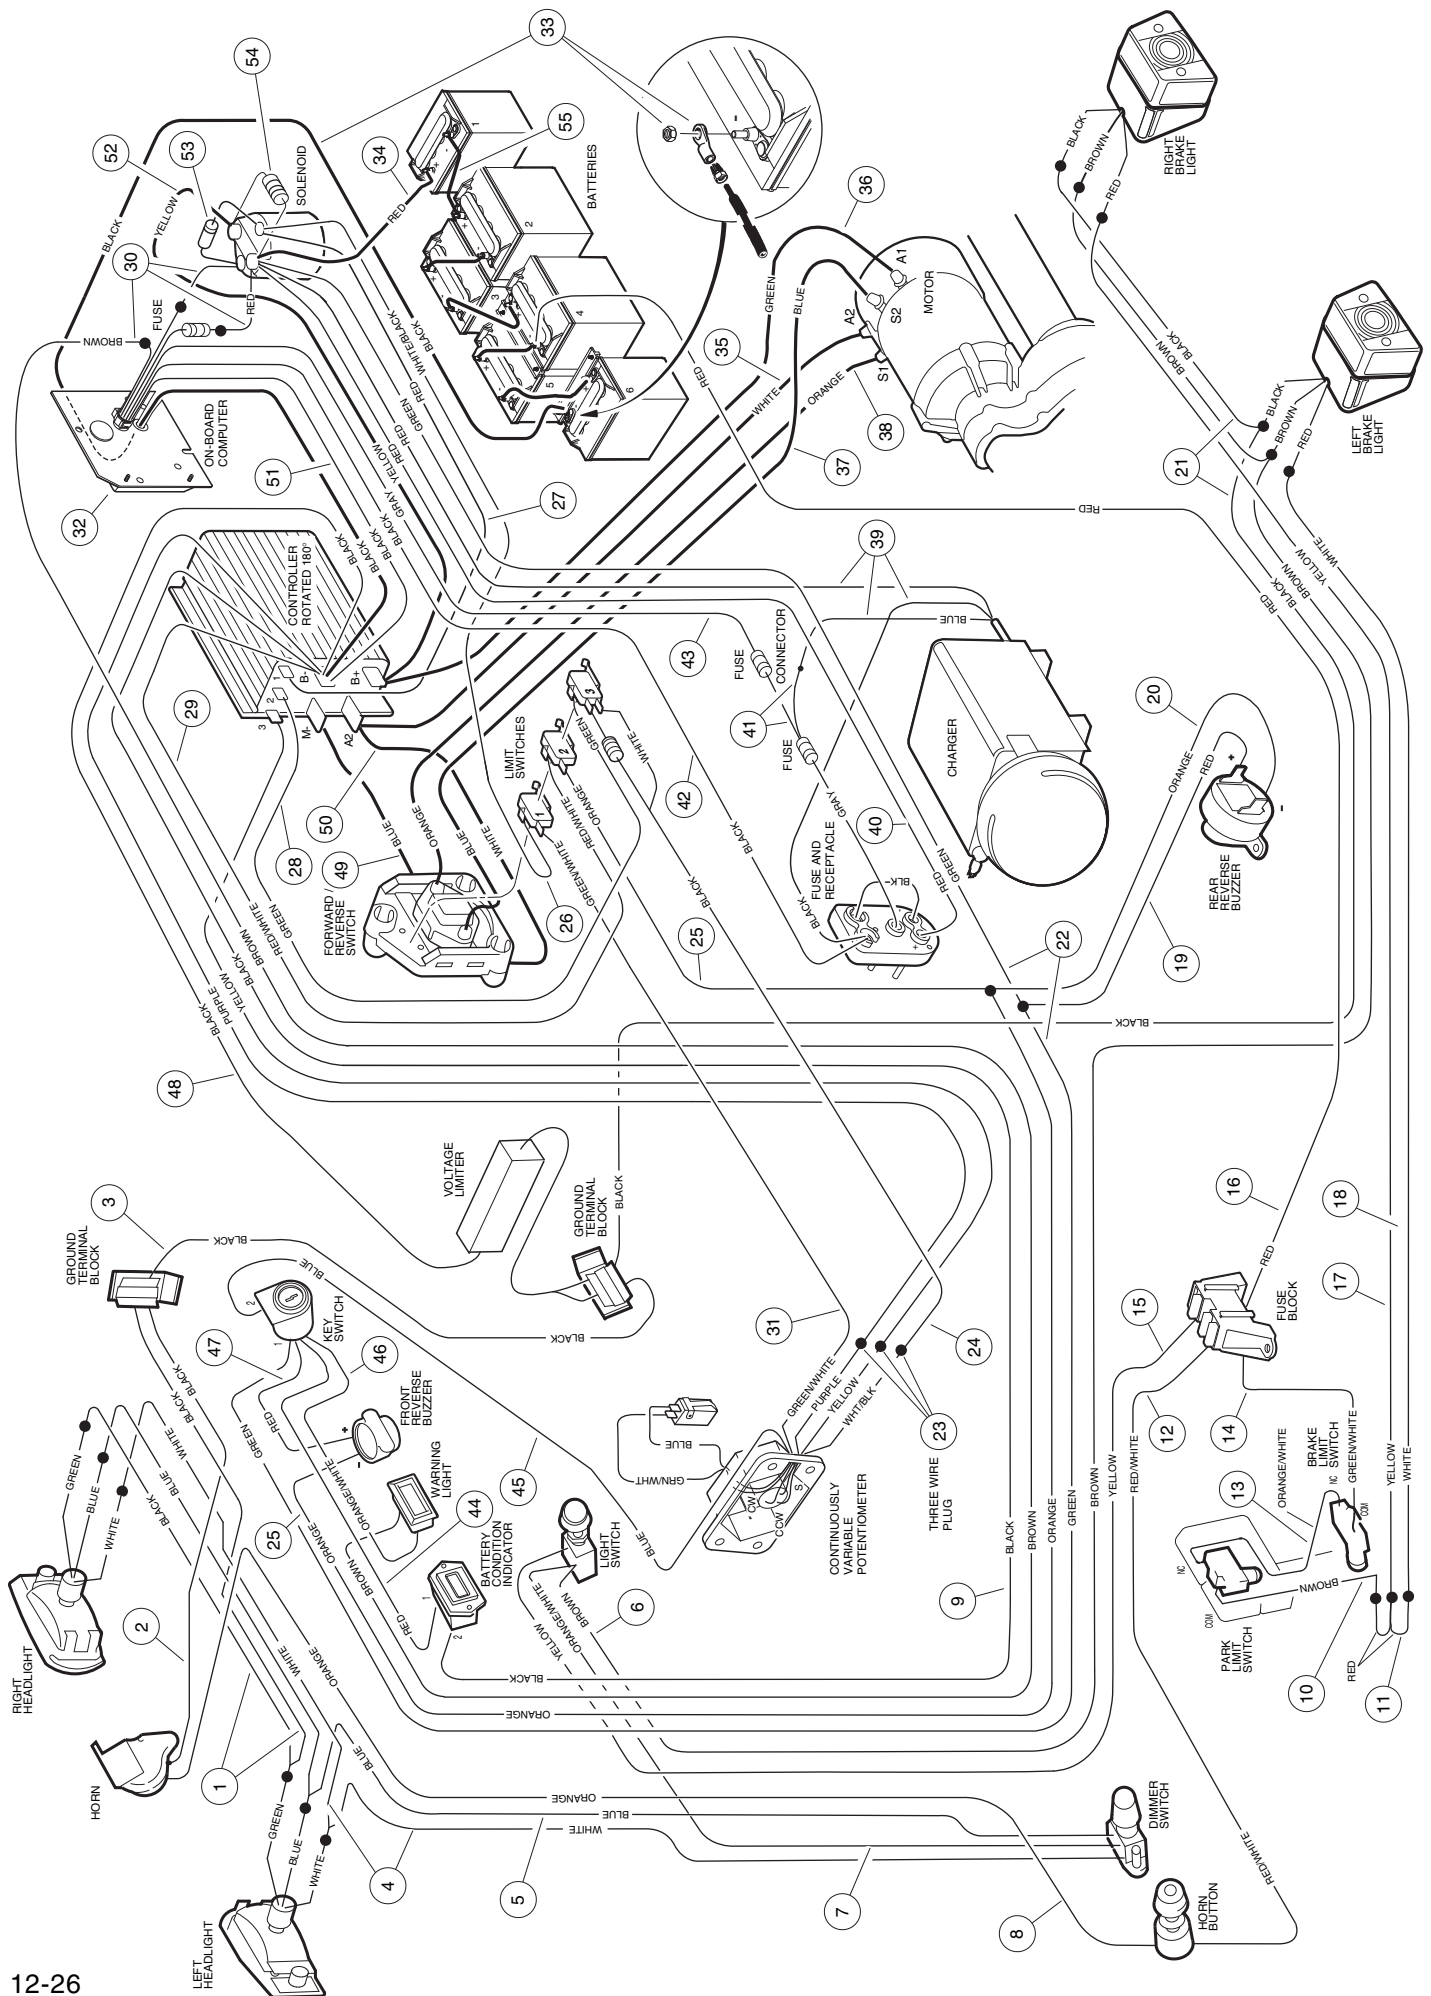


WIRING - CARRYALL VI

POWERDRIVE ELECTRIC VEHICLE

12

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>1019166-01</u>	WIRE HARNESS, LIGHTING (CONTAINS ITEMS 1 - 21)	1
1	<u>1016326</u>	WIRE ASSEMBLY, #16 BLACK	1
2	<u>1016308</u>	WIRE ASSEMBLY, #16 BLACK	1
3	<u>1019333-01</u>	WIRE ASSEMBLY, #14 BLACK	1
4	<u>1016323</u>	WIRE ASSEMBLY, #16 WHITE	1
5	<u>1017052</u>	WIRE ASSEMBLY, #18 BLUE	1
6	<u>1019334-01</u>	WIRE ASSEMBLY, #16 BROWN	1
7	<u>1016315</u>	WIRE ASSEMBLY, #16 ORANGE/WHITE	1
8	<u>1016307</u>	WIRE ASSEMBLY, #16 ORANGE	1
9	<u>1018182-01</u>	WIRE ASSEMBLY, #18 BLACK	1
10	<u>1016314</u>	WIRE ASSEMBLY, #16 BROWN	1
11	<u>1016409</u>	WIRE ASSEMBLY, #18 RED	1
12	<u>1016696</u>	WIRE ASSEMBLY, #16 RED/WHITE	1
13	<u>1016309</u>	WIRE ASSEMBLY, #16 ORANGE/WHITE	1
14	<u>1016700</u>	WIRE ASSEMBLY, #16 GREEN/WHITE	1
15	<u>1016697</u>	WIRE ASSEMBLY, #14 YELLOW	1
16	<u>1016698</u>	WIRE ASSEMBLY, #10 RED	1
17	<u>1016774</u>	WIRE ASSEMBLY, #18 YELLOW	1
18	<u>1016695</u>	WIRE ASSEMBLY, #18 WHITE	1
19	<u>1019340-01</u>	WIRE ASSEMBLY, #18 RED	1
20	<u>1019339-01</u>	WIRE ASSEMBLY, #18 ORANGE	1
21	<u>1019332-01</u>	WIRE ASSEMBLY, #16 BLACK	1
	<u>1019116-01</u>	WIRE HARNESS, POWER (INCLUDES ITEMS 22 - 30)	1
22	<u>1019305-01</u>	WIRE ASSEMBLY, #18 GREEN	1
23	<u>1018651-06</u>	ASSEMBLY, 3-WIRE PLUG (INCLUDES #18 PURPLE, #18 YELLOW AND ITEM 24)	1
24	<u>1018830-02</u>	WIRE ASSEMBLY, #18 BLACK (INCLUDES RESISTOR AND #18 WHITE WIRE)	1
25	<u>1019306-01</u>	WIRE ASSEMBLY, #18 ORANGE	1
26	<u>1019312-01</u>	WIRE ASSEMBLY, #18 WHITE/BLACK	1
27	<u>1019310-01</u>	WIRE ASSEMBLY, #18 RED	1
28	<u>1019309-01</u>	WIRE ASSEMBLY, #18 GREEN	1
29	<u>1019307-01</u>	WIRE ASSEMBLY, #18 RED/WHITE	1
30	<u>1019308-01</u>	ASSEMBLY, 4-WIRE PLUG (INCLUDES #18 BROWN, #18 YELLOW, AND #18 RED) ...	1
31	<u>1017394</u>	WIRE ASSEMBLY, #18 GREEN/WHITE (PART OF POTENTIOMETER ASSEMBLY)	1
	<u>1019101-02</u>	WIRE HARNESS, POWER (INCLUDES ITEMS 32 - 38)	1
32	<u>1019629-02</u>	COMPUTER, ON-BOARD (SEE PAGE 12-35) (INCLUDES ITEM 33)	1
33	<u>1018278-02</u>	KIT, WIRE AND TERMINAL, #6 BLACK	1
34	<u>1019045-02</u>	WIRE ASSEMBLY, #6 RED	1
35	<u>1019089-02</u>	WIRE ASSEMBLY, #6 WHITE	1
36	<u>1019044-02</u>	WIRE ASSEMBLY, #6 GREEN	1
37	<u>1019046-02</u>	WIRE ASSEMBLY, #6 BLUE	1
38	<u>1019047-02</u>	WIRE ASSEMBLY, #6 ORANGE	1
39	<u>1018291-01</u>	DC CORD, #10 BLUE, #10 RED, #10 BLACK (PART OF CHARGER)	1
40	N/A	WIRE ASSEMBLY, #10 RED (PART OF FUSE AND RECEPTACLE ASSEMBLY)	1
41	<u>1018968-01</u>	ASSEMBLY, FUSE HOLDER	1
42	N/A	WIRE ASSEMBLY, #10 BLACK (PART OF ON-BOARD COMPUTER ASSEMBLY)	1
43	N/A	WIRE ASSEMBLY, #18 GREY (PART OF ON-BOARD COMPUTER ASSEMBLY)	1
44	<u>1018181-01</u>	WIRE ASSEMBLY, #18 RED	1
45	<u>1017393</u>	WIRE ASSEMBLY, #18 BLUE (PART OF POTENTIOMETER ASSEMBLY)	1
46	<u>1017967-01</u>	WIRE ASSEMBLY, #18 ORANGE/WHITE	1
47	<u>1019123-01</u>	WIRE ASSEMBLY, #18 RED	1
48	N/A	WIRE ASSEMBLY, #10 BLACK (PART OF VOLTAGE LIMITER ASSEMBLY)	1
49	<u>1019088-01</u>	WIRE ASSEMBLY, #6 BLUE	1
50	<u>1016729</u>	WIRE ASSEMBLY, #6 WHITE	1
51	N/A	WIRE ASSEMBLY, #10 BLACK (PART OF ON-BOARD COMPUTER ASSEMBLY)	1
52	<u>1016732</u>	WIRE ASSEMBLY, #6 YELLOW	1
53	<u>1014948</u>	ASSEMBLY, DIODE	1
54	<u>1014947</u>	ASSEMBLY, RESISTOR	1
55	<u>1017957-01</u>	WIRE ASSEMBLY, #6 BLACK	5

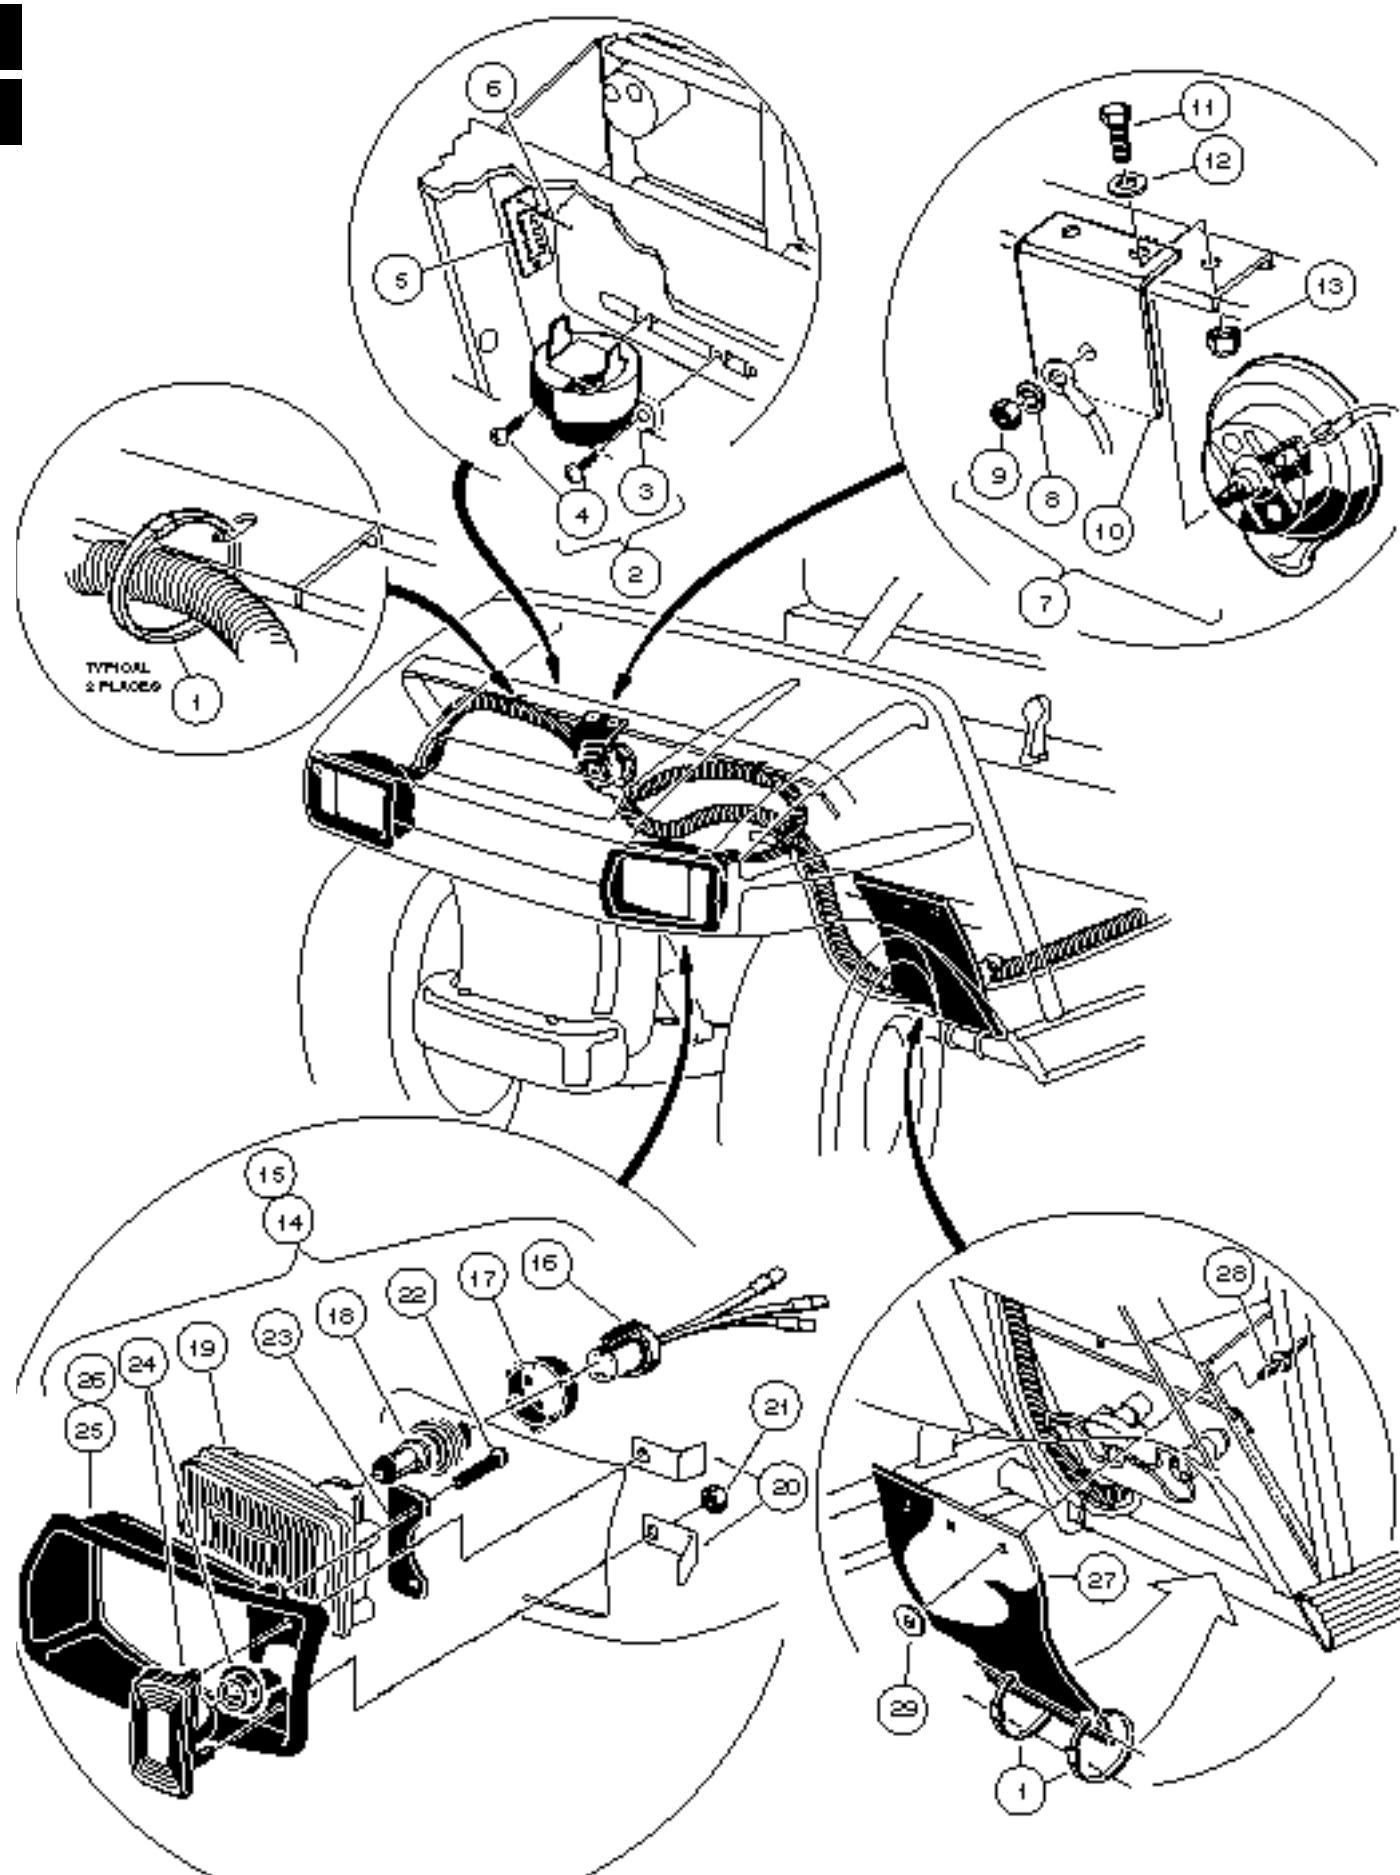


ELECTRICAL COMPONENTS, FRONT BODY CARRYALL VI POWERDRIVE ELECTRIC VEHICLE

12

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	0008639	WRAP, TIE	4
2	<u>1016859</u>	KIT, REVERSE BUZZER (INCLUDES ITEMS 3 AND 4)	1
3	<u>1016851</u>	BUZZER, REVERSE	1
4	<u>1016849</u>	SCREW, PAN HEAD HI-LO, #4 - 24 x 5/16	2
5	<u>1016356</u>	BLOCK, TERMINAL	1
6	<u>1013357</u>	RIVET, ALUMINUM POP, 5/32	2
7	0004029	ASSEMBLY, HORN (INCLUDES ITEMS 8, 9 AND 10)	1
8	0007820	WASHER, INTERNAL TOOTH, 5/16	1
9	<u>1012528</u>	NUT, M8 x 1 1/4	1
10	<u>1011825</u>	BRACKET, HORN	1
11	0000304	BOLT, HEX HEAD, 1/4 - 20 x 1	2
12	0000332	WASHER, FLAT, 1/4	2
13	0008233	NUT, NYLON LOCK, 1/4 - 20	2
14	<u>1016897-01</u>	ASSEMBLY, HEADLIGHT, LEFT HAND (INCLUDES ITEMS 16 - 25)	1
15	<u>1016897-02</u>	ASSEMBLY, HEADLIGHT, RIGHT HAND (INCLUDES ITEMS 16 - 24 AND 26)	1
16	<u>1017066</u>	HARNESS, HEADLIGHT WIRE	1
17	1017059	LOCK, BULB COLLAR	1
18	<u>1017060</u>	BULB, HALOGEN	1
19	1017061	LENS, HEADLIGHT	1
20	<u>1017064</u>	BRACKET, MOUNTING	2
21	0007893	NUT, HEX, #10 - 32	2
22	<u>1013461</u>	SCREW, HI-LO, #10 - 16	2
23	<u>1017065</u>	RETAINER, HEADLIGHT	1
24	<u>1017062</u>	ASSEMBLY, TURN SIGNAL LENS	1
25	<u>1016880</u>	BEZEL, HEADLIGHT, LEFT HAND	1
26	<u>1016879</u>	BEZEL, HEADLIGHT, RIGHT HAND	1
27	1015787	FLAP, SWITCH PROTECTOR	1
28	0001606	RIVET, POP, 3/16	3
29	0000183	WASHER, FLAT, #10	3

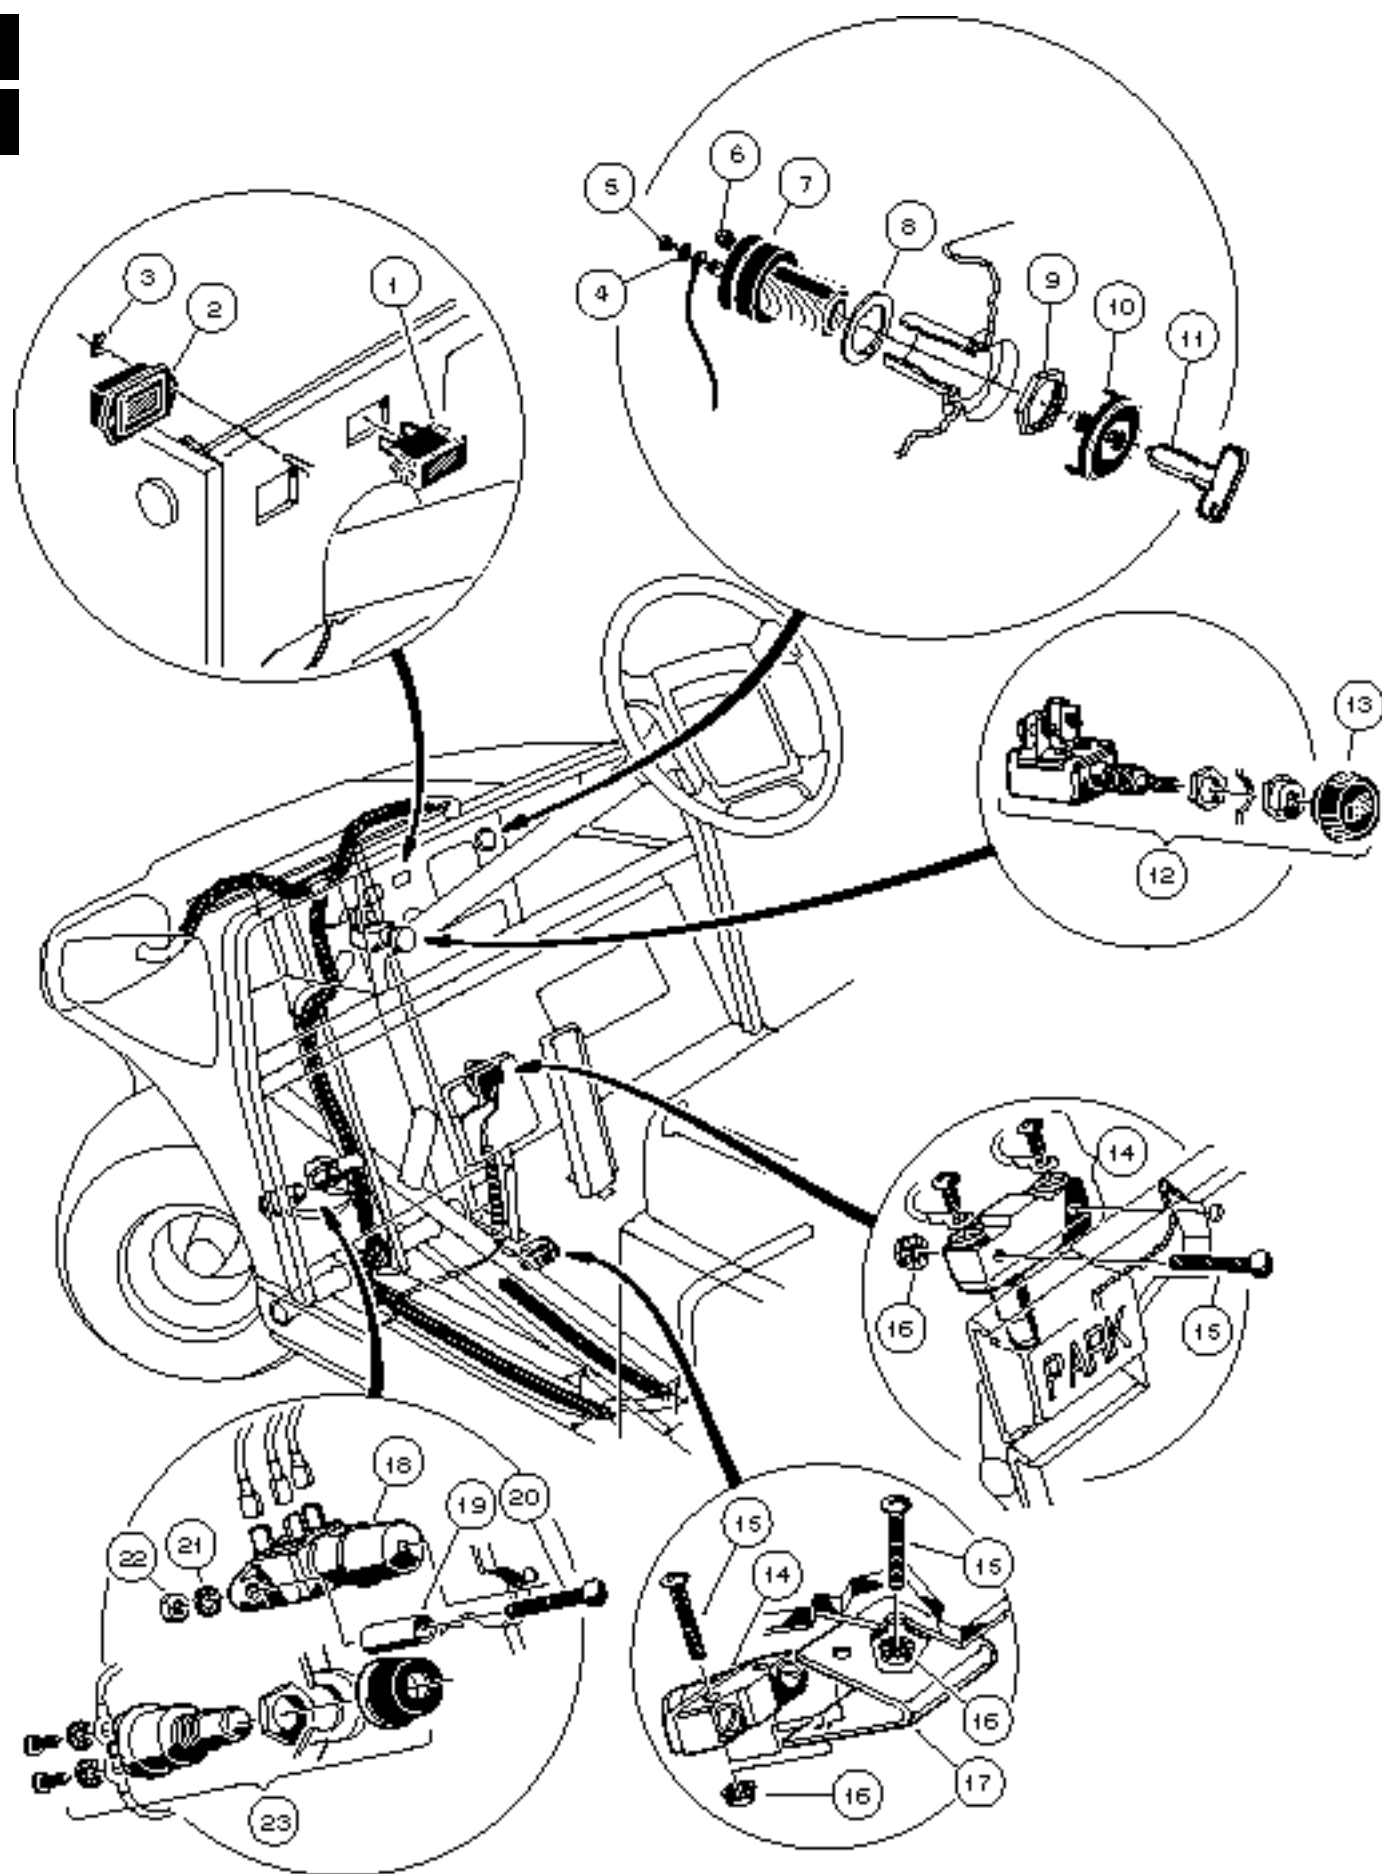


CONTROLS AND GAUGES

CARRYALL VI POWERDRIVE ELECTRIC VEHICLE

12

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1018025-01</u>	LIGHT, BATTERY WARNING	1
2	<u>1018142-01</u>	INDICATOR, BATTERY	1
3	<u>1018147-01</u>	RETAINER, PUSH ON	2
4	<u>1011610</u>	WASHER, LOCK, #8	1
5	<u>1016092</u>	SCREW, PAN HEAD MACHINE, #8 - 32 x 7/16	1
6	<u>1018306-01</u>	ASSEMBLY, SCREW AND WASHER	1
7	<u>1018262-01</u>	SWITCH, KEY	1
8	<u>1018511-01</u>	WASHER	1
9	<u>1018307-01</u>	NUT, KEY SWITCH	1
10	<u>1018345-02</u>	CAP, KEY SWITCH	1
11	<u>1012505</u>	KEY (PAIR)	1
12	0004034	SWITCH, LIGHT (INCLUDES ITEM 13)	1
13	<u>1013857</u>	KNOB, LIGHT SWITCH	1
14	<u>1011439</u>	SWITCH, LIMIT	2
15	<u>1011557</u>	SCREW, MACHINE, #6 - 32 x 1	6
16	<u>1011229</u>	NUT, "K" LOCK, #6 - 32	6
17	<u>1011742</u>	BRACKET, BRAKE LIGHT SWITCH	1
18	<u>1010889</u>	SWITCH, DIMMER	1
19	<u>1018713-01</u>	STAND-OFF, DIMMER SWITCH	2
20	<u>1018712-01</u>	SCREW, MACHINE, #10 - 32 x 1	2
21	0008049	WASHER, INTERNAL TOOTH LOCK, #10	2
22	0007893	NUT, HEX, #10 - 32	2
23	<u>1013443</u>	BUTTON, HORN	1

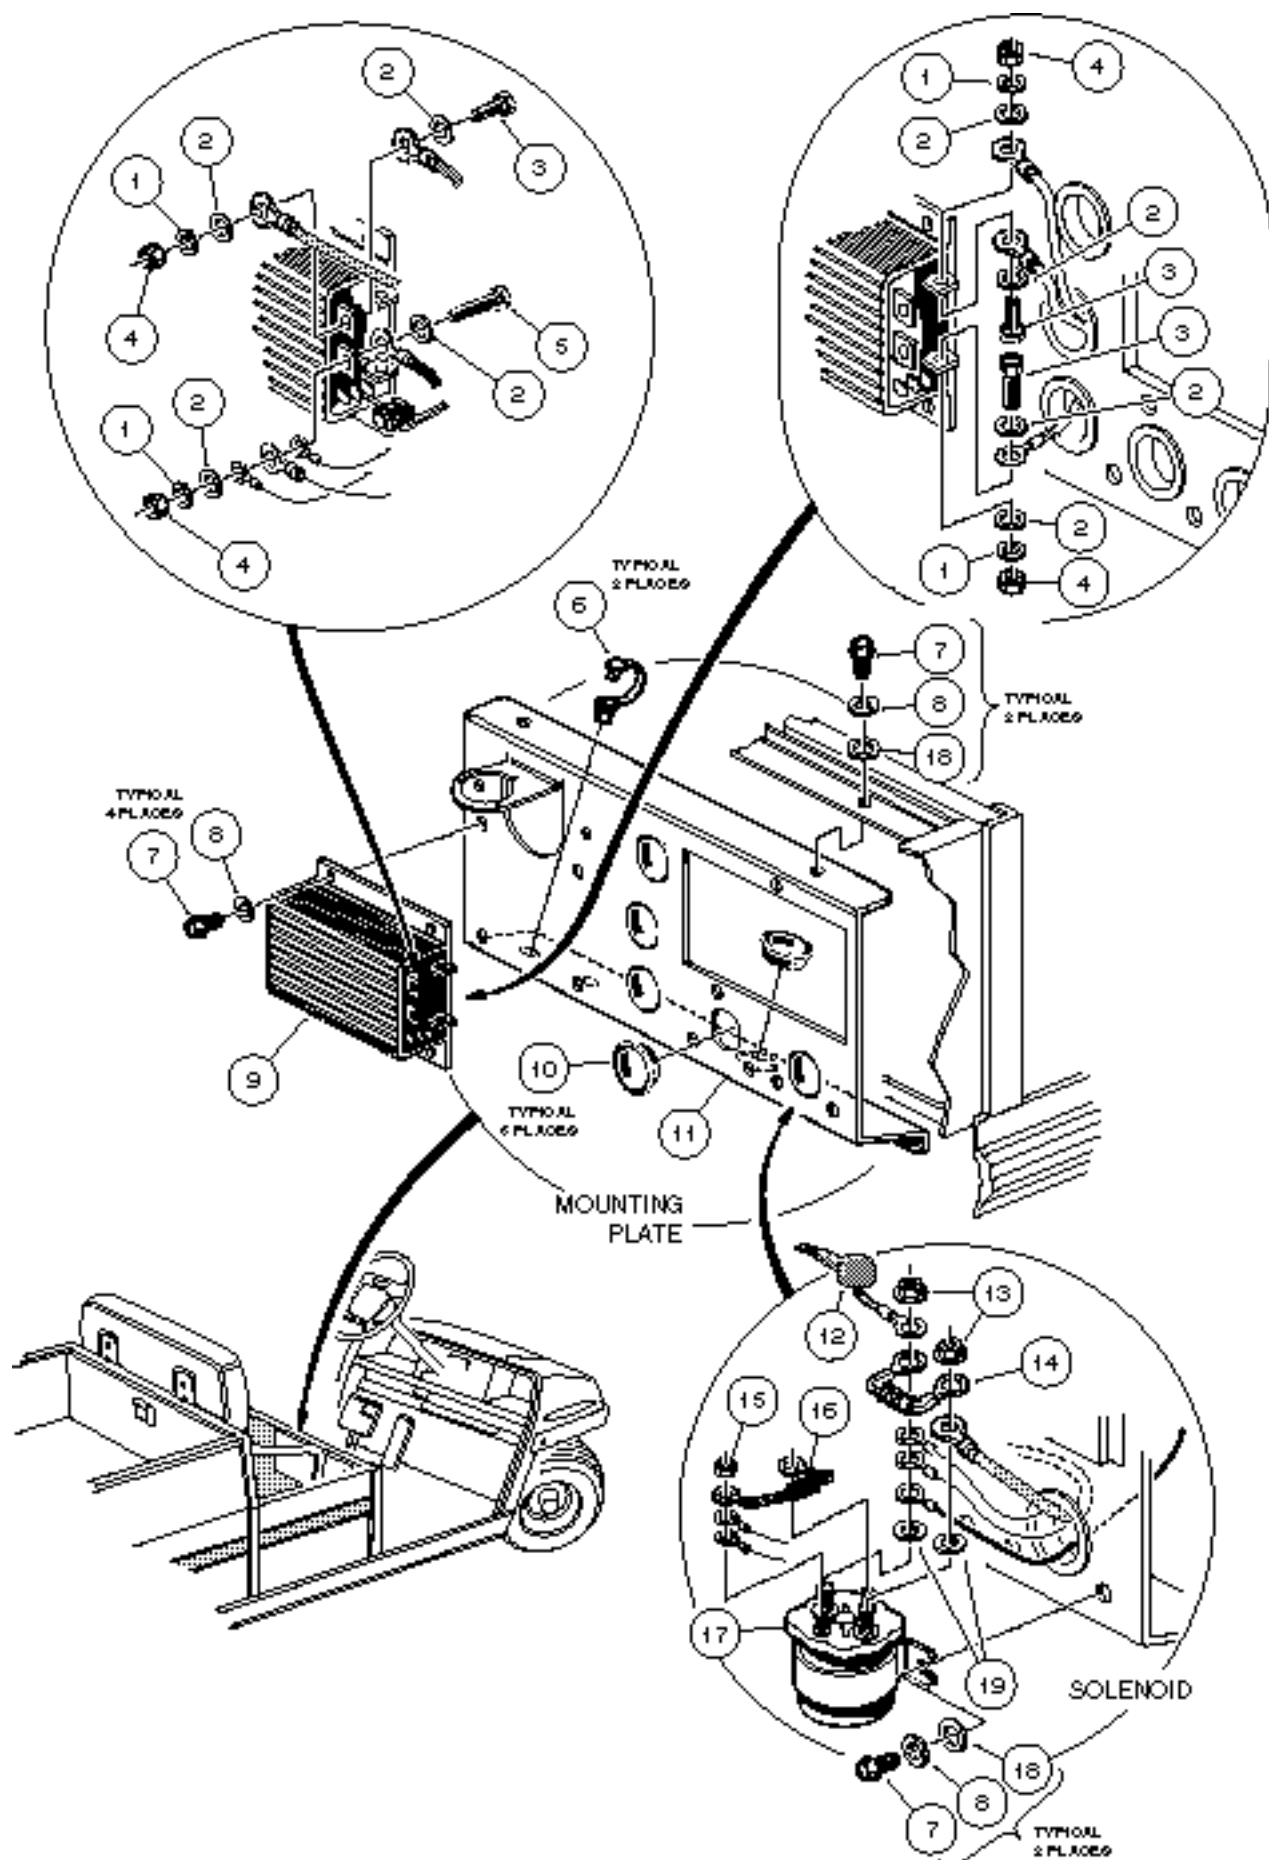


ELECTRICAL COMPONENTS, CENTER BODY CARRYALL VI POWERDRIVE ELECTRIC VEHICLE

12

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	0007174	WASHER, LOCK, 5/16	4
2	0001241	WASHER, FLAT, 5/16	8
3	0007173	BOLT, HEX HEAD, 5/16 - 18 x 3/4	3
4	0001242	NUT, HEX, 5/16 - 18	4
5	0001218	BOLT, HEX HEAD, 5/16 - 18 x 1 1/4	1
6	<u>1019183-01</u>	CLAMP, WIRE	2
7	<u>1012285</u>	SCREW, HEX HEAD THREAD ROLLING, 1/4 - 20 x 5/8	8
8	0000451	WASHER, LOCK, 1/4	8
9	<u>1018402-03</u>	CONTROLLER, 48 VOLT (300 AMP)	1
10	<u>1019243-01</u>	BUSHING, SNAP	6
11	<u>1019117-01</u>	PLATE, MOUNTING	1
12	<u>1019026-01</u>	BOOT, WIRE	1
13	<u>1017237</u>	NUT, FLANGED LOCK, 5/16 - 24	2
14	<u>1014947</u>	ASSEMBLY, RESISTOR	1
15	0007893	NUT, HEX, #10 - 32	2
16	1014948	ASSEMBLY, DIODE	1
17	<u>1018836-01</u>	SOLENOID, 48 VOLT	1
18	0000332	WASHER, FLAT, 1/4	4
19	<u>1019344-01</u>	WASHER, FLAT BRASS, 5/16	2

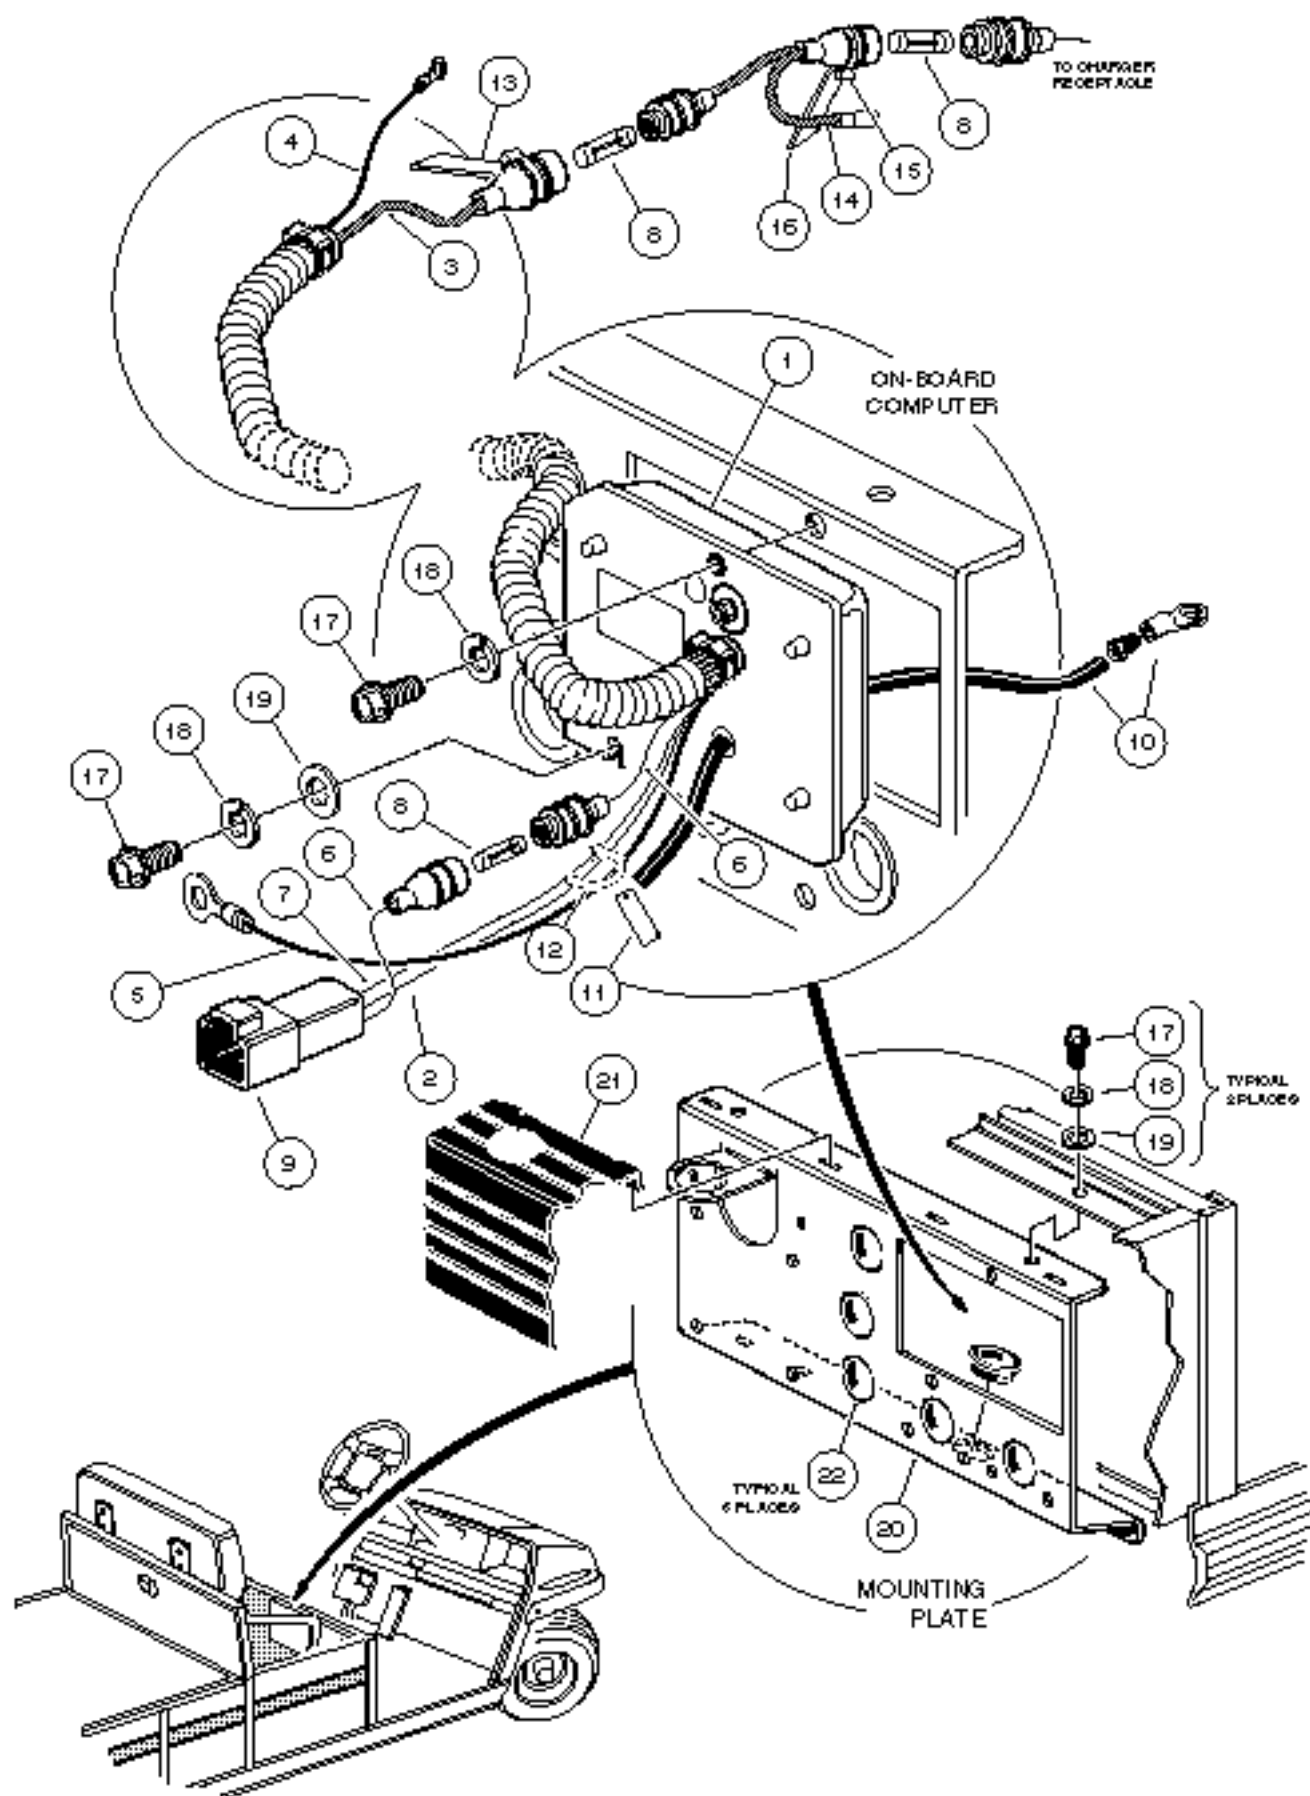


ELECTRICAL COMPONENTS, CENTER BODY CARRYALL VI POWERDRIVE ELECTRIC VEHICLE

12

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1019629-02</u>	COMPUTER, ON-BOARD (INCLUDES ITEMS 2 - 13)	1
2	N/A	WIRE ASSEMBLY, #18 BROWN	1
3	N/A	WIRE ASSEMBLY, #18 GRAY	1
4	N/A	WIRE ASSEMBLY, #10 BLACK	1
5	N/A	WIRE ASSEMBLY, #10 BLACK	1
6	N/A	WIRE ASSEMBLY, #18 RED	1
7	N/A	WIRE ASSEMBLY, #18 YELLOW	1
8	<u>1018949-01</u>	FUSE ASSEMBLY, 3/8 AMP	3
9	<u>1019324-01</u>	CONNECTOR, FOUR WIRE	1
10	<u>1018278-02</u>	KIT, WIRE AND TERMINAL, #6 BLACK	1
11	<u>1018844-01</u>	LABEL	1
12	0008168	WRAP, TIE	2
13	<u>1019349-01</u>	LABEL	1
14	<u>1018968-01</u>	ASSEMBLY, FUSE HOLDER (INCLUDES ITEMS 15 AND 16)	1
15	0008168	WRAP, TIE	1
16	<u>1019349-01</u>	LABEL	1
17	<u>1012285</u>	SCREW, HEX HEAD THREAD-ROLLING, 1/4 - 20 x 5/8	4
18	0000451	WASHER, LOCK, 1/4	4
19	0000332	WASHER, FLAT, 1/4	3
20	<u>1019117-01</u>	PLATE, MOUNTING	1
21	<u>1019316-01</u>	ASSEMBLY, COMPONENT COVER	1
22	<u>1019243-01</u>	BUSHING, SNAP	6

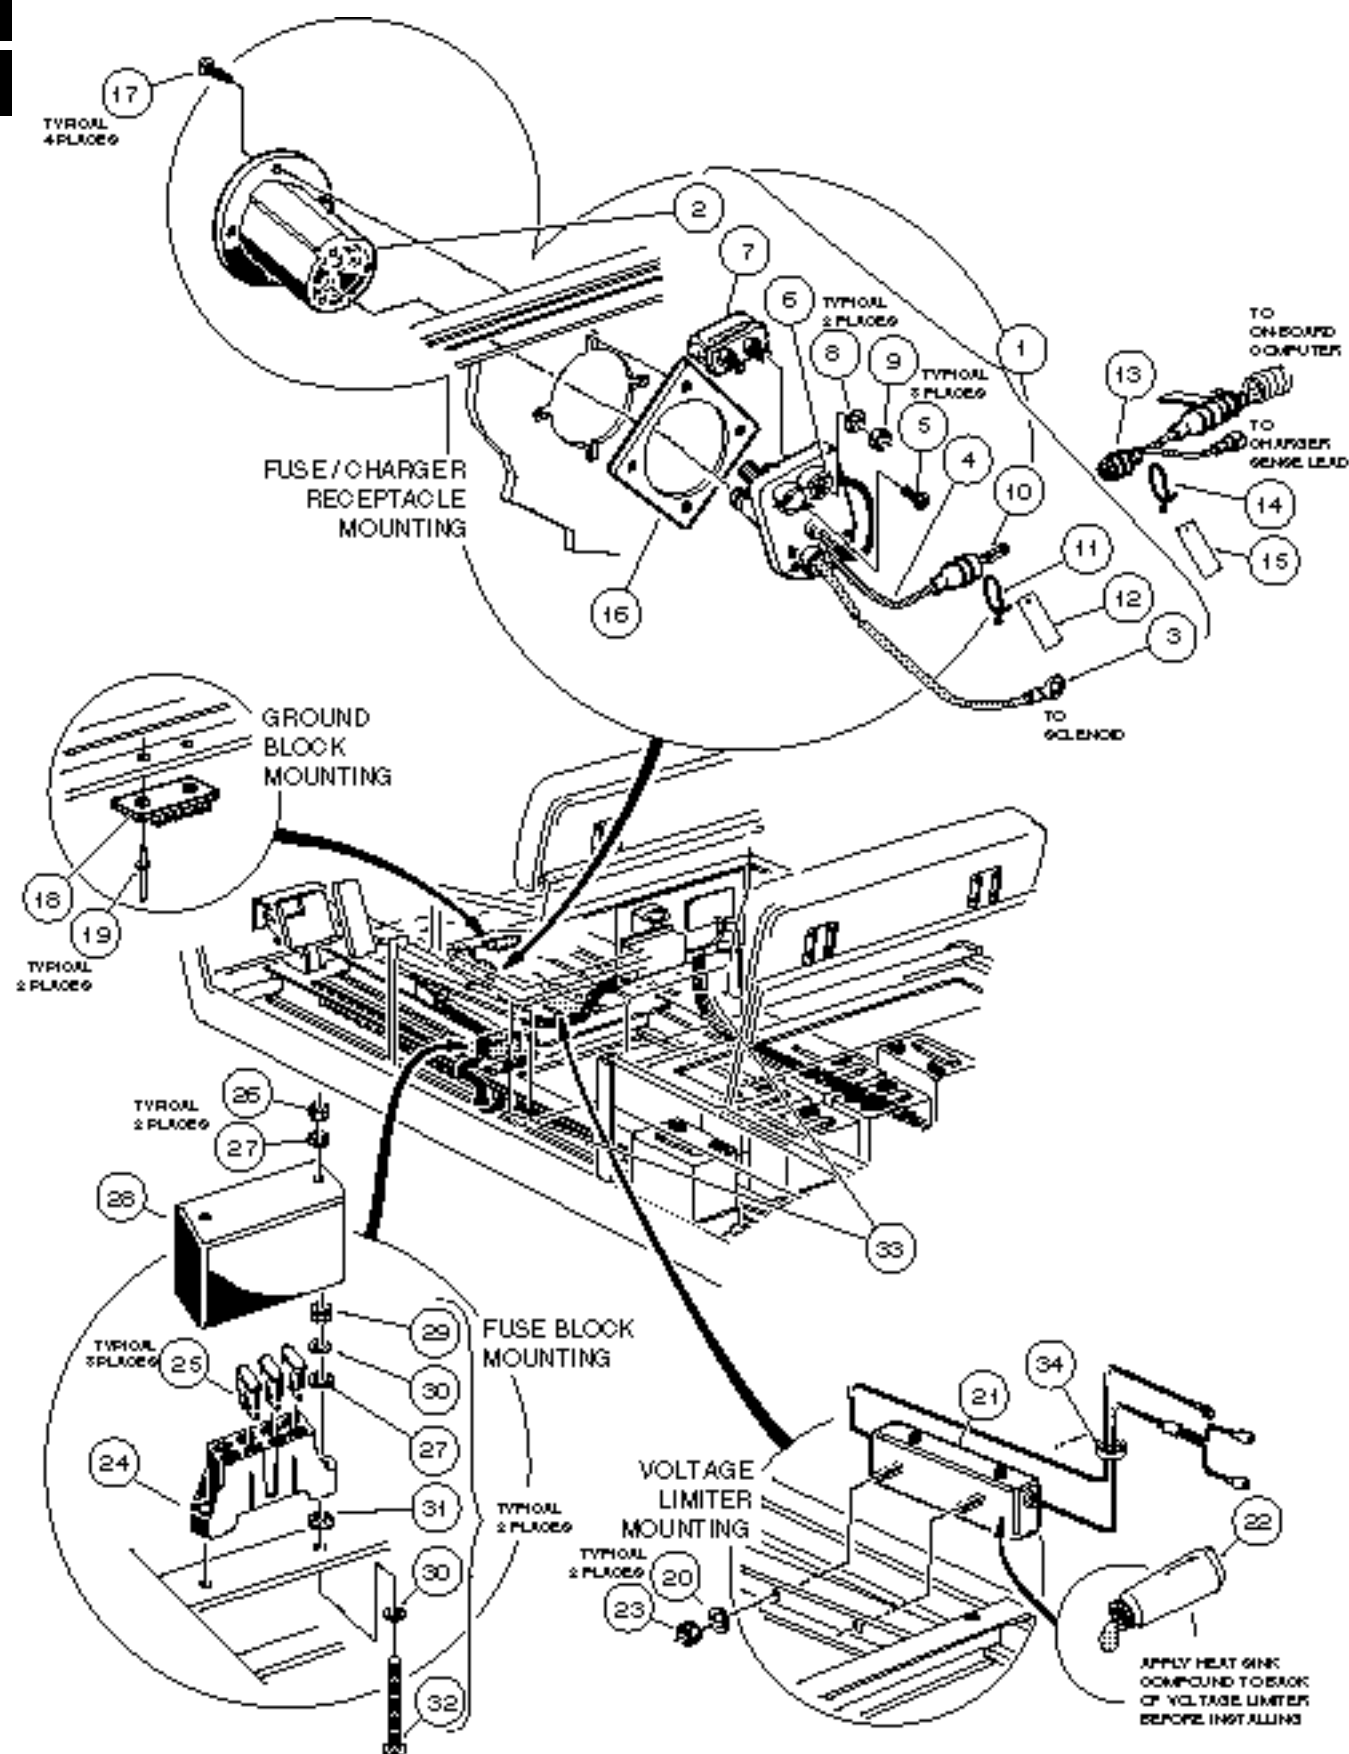


ELECTRICAL COMPONENTS, CENTER BODY CARRYALL VI POWERDRIVE ELECTRIC VEHICLE

12

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1018021-01</u>	KIT, FUSE AND RECEPTACLE (INCLUDES ITEMS 2 - 12)	1
2	<u>1017965-01</u>	BEZEL, RECEPTACLE	1
3	N/A	WIRE ASSEMBLY, #10 RED	1
4	N/A	WIRE ASSEMBLY, SENSE LEAD, GREY	1
5	<u>1017705</u>	SCREW, PHILLIPS PAN HEAD, #8 TYPE AB	3
6	N/A	WIRE ASSEMBLY, #10 BLACK	1
7	<u>1017968-01</u>	FUSE ASSEMBLY (INCLUDES ITEMS 8 AND 9)	1
8	<u>1018038</u>	WASHER, NARROW TYPE 13, #10	2
9	<u>1018028</u>	NUT, SERRATED, #10 - 32	2
10	<u>1018949-01</u>	FUSE ASSEMBLY, 3/8 AMP	1
11	0008168	WRAP, TIE	1
12	<u>1019349-01</u>	LABEL	1
13	<u>1018968-01</u>	ASSEMBLY, 3-WAY PLUG (INCLUDES ITEMS 14 AND 15)	1
14	0008168	WRAP, TIE	1
15	<u>1019349-01</u>	LABEL	1
16	<u>1018010-01</u>	PLATE, RECEPTACLE BACKING	1
17	<u>1018320-01</u>	SCREW, PHILLIPS PAN HEAD, #7 - 18 x 3/4	4
18	<u>1016356</u>	BLOCK, TERMINAL	1
19	<u>1013357</u>	RIVET, ALUMINUM POP, 5/32	2
20	0000332	WASHER, FLAT, 1/4	2
21	<u>1018108-01</u>	LIMITER, VOLTAGE (INCLUDES ITEM 22)	1
22	<u>1018367-02</u>	COMPOUND, HEAT SINK	A/R
23	0008233	NUT, NYLON LOCK, 1/4 - 20	2
24	<u>1015741</u>	BLOCK, FUSE	1
25	<u>1016423</u>	FUSE, 20 AMP	3
26	<u>1012438</u>	NUT, NYLON LOCK, #10 - 24	2
27	0000183	WASHER, FLAT, #10	4
28	<u>1016363</u>	COVER, FUSE BLOCK	1
29	0001017	NUT, HEX, #10 - 24	2
30	0001016	WASHER, LOCK, #10	4
31	<u>1016631</u>	NUT, PUSH	2
32	<u>1016366</u>	SCREW, ROUND HEAD, #10 - 24 x 3	2
33	<u>1016706</u>	GROMMET, 1 1/4	3
34	<u>1018024-01</u>	GROMMET, 5/8	1

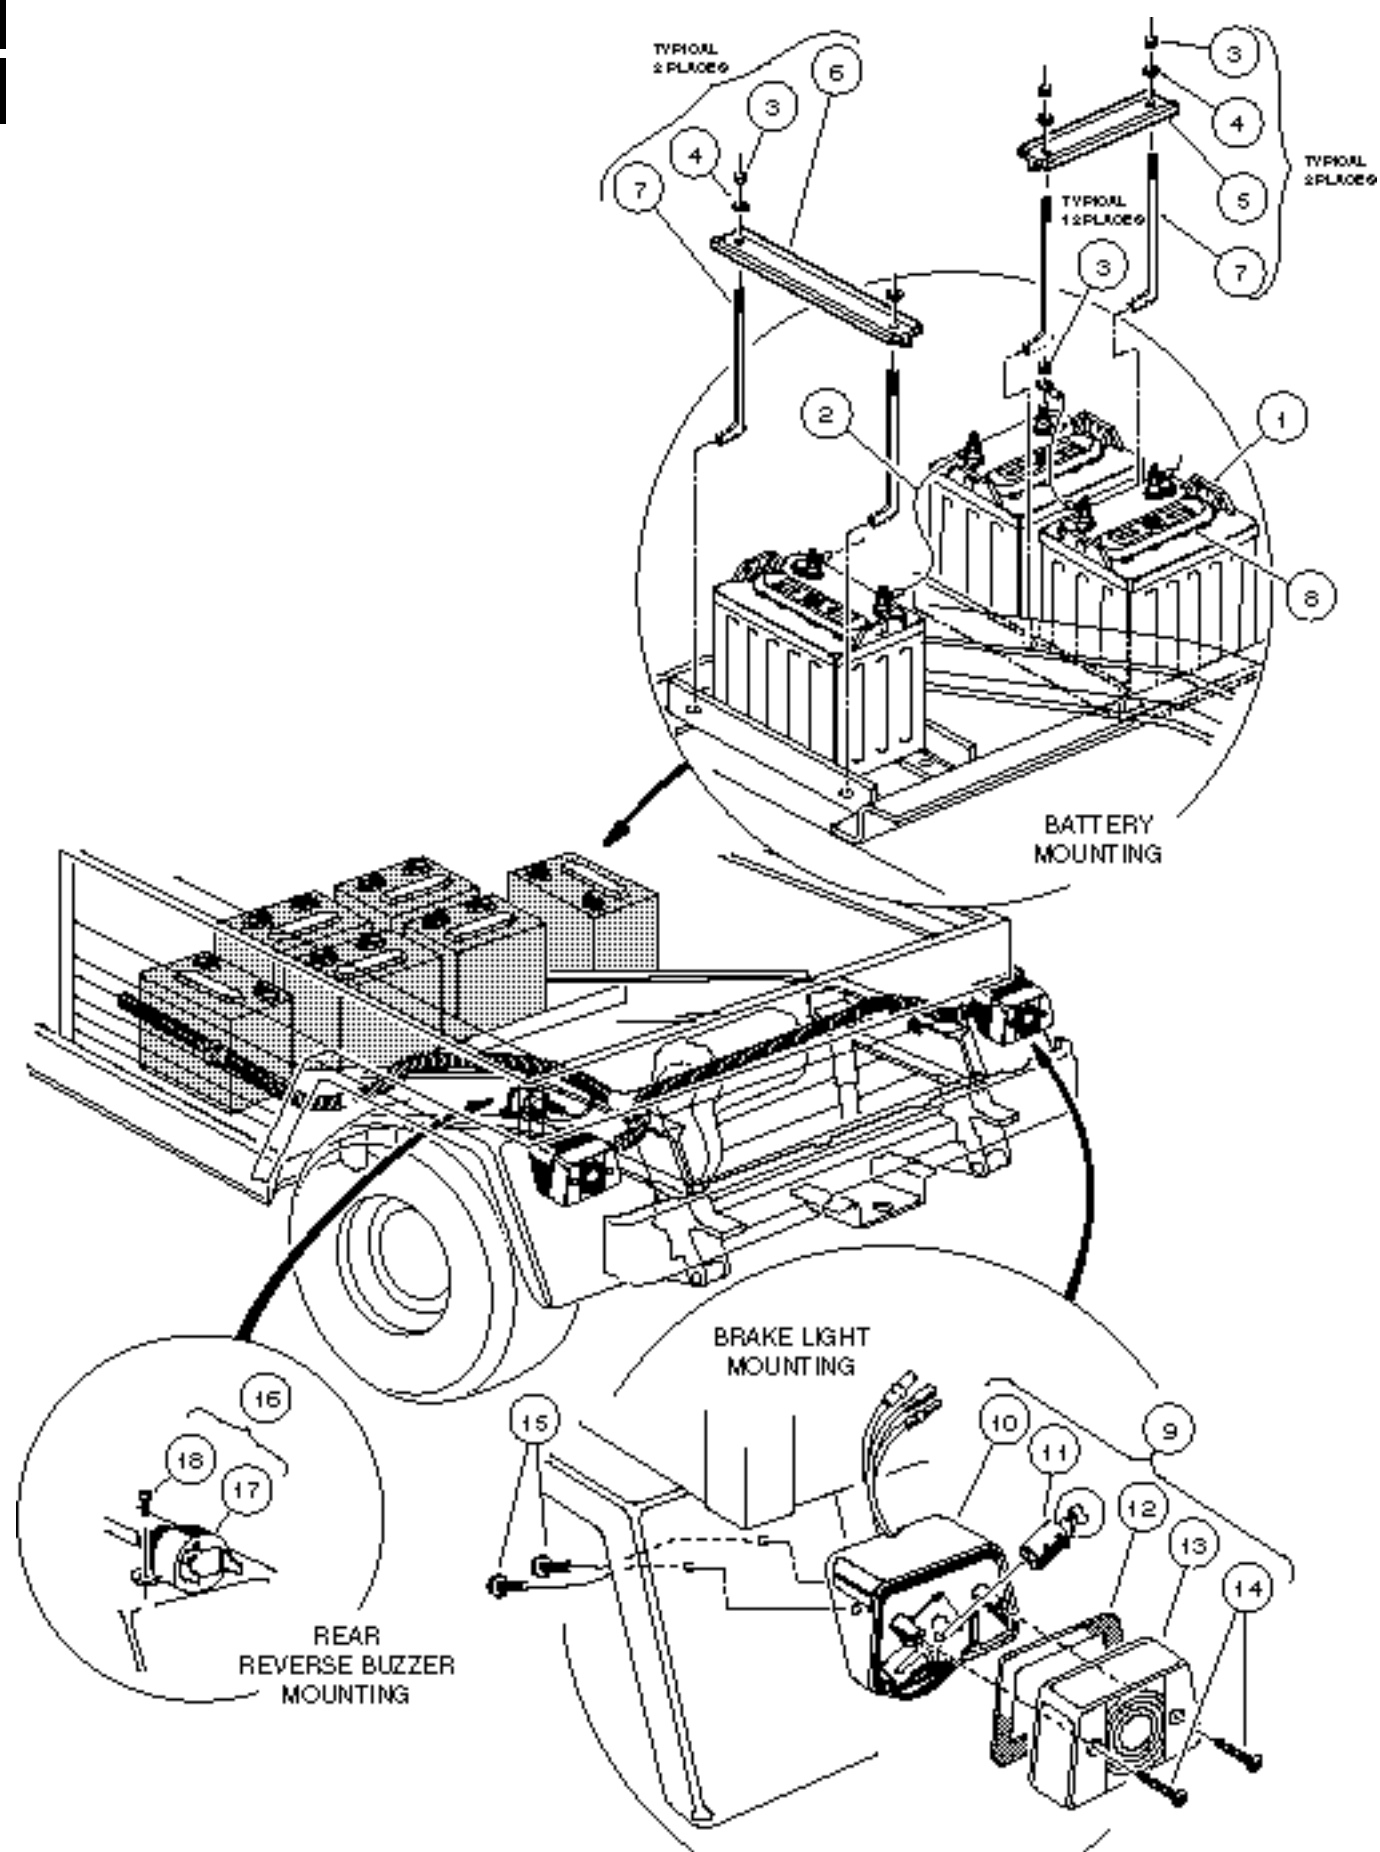

ELECTRICAL COMPONENTS, REAR BODY CARRYALL VI POWERDRIVE ELECTRIC VEHICLE

12


E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1017977-01</u>	BATTERY, 8-VOLT POWERDRIVE	6
1	<u>1017977-02</u>	BATTERY, 8-VOLT POWERDRIVE, DRY.....	6
2	<u>1017957-01</u>	WIRE ASSEMBLY, #6 BLACK	5
3	<u>1014304</u>	NUT, HEX, STAINLESS STEEL, 5/16 -18	20
4	<u>1011578</u>	WASHER, FLAT, TYPE B WIDE, 5/16	8
5	<u>1010908-01</u>	HOLD-DOWN, BATTERY, SHORT	2
6	<u>1010908-02</u>	HOLD-DOWN, BATTERY, LONG	2
7	<u>1016682-01</u>	ROD, BATTERY HOLD-DOWN	8
8	<u>1017978-01</u>	CAP, BATTERY, 4 PORT GANG	6
9	<u>1016717</u>	ASSEMBLY, TAILLIGHT (INCLUDES ITEMS 10 - 14)	2
10	N/A	HOUSING, TAILLIGHT	1
11	<u>1011582</u>	BULB	1
12	N/A	GASKET	1
13	N/A	LENS	1
14	N/A	SCREW, LENS	2
15	<u>1015752</u>	SCREW, HI-LO, #12 - 16 x 5/8	4
16	<u>1016859</u>	KIT, REVERSE BUZZER (INCLUDES ITEMS 17 AND 18)	1
17	<u>1016851</u>	BUZZER, REVERSE	1
18	<u>1016849</u>	SCREW, PAN HEAD HI-LO, #4 - 24 x 5/16	2

BATTERY CHARGER

13

E

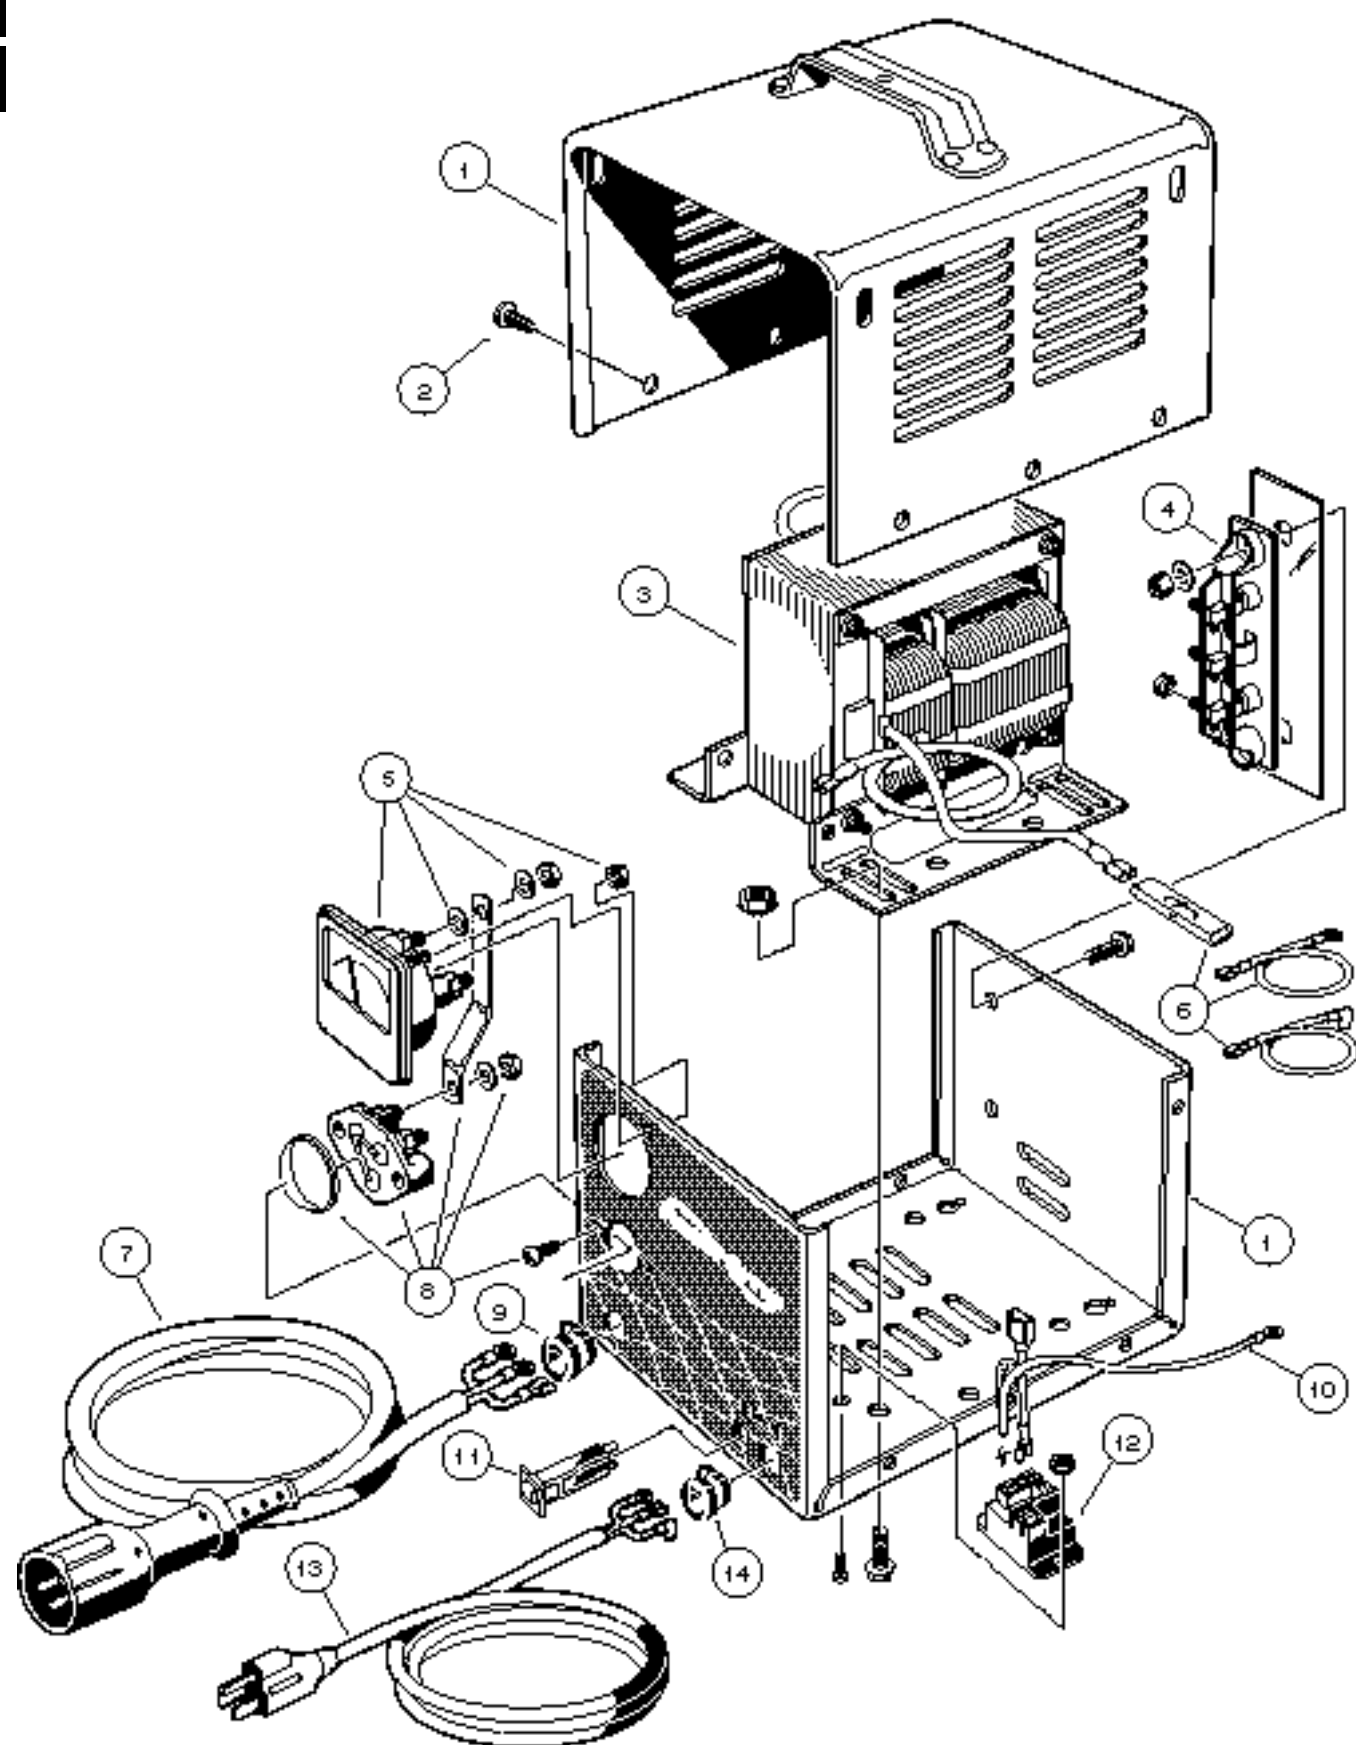


POWERDRIVE BATTERY CHARGER, DOMESTIC CARRYALL I AND II

13

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>1018022-01</u>	CHARGER, BATTERY, POWERDRIVE, DOMESTIC 120VAC 48VDC 60 HZ (MODEL NUMBER 17930-11) (INCLUDES ITEMS 1 - 14) 103 IN. DC CORD WITH MALE 3-PIN PLUG, 12 AWG 74 IN. AC CORD WITH MALE GROUNDED PLUG	1
	<u>1018022-02</u>	CHARGER, BATTERY, POWERDRIVE 120VAC 48VDC 60 HZ (MODEL NUMBER 17930-18) (INCLUDES ITEMS 1 - 14) 144 IN. DC CORD WITH MALE 3-PIN PLUG, 12 AWG 108 IN. AC CORD WITH MALE GROUNDED PLUG	1
	<u>1018022-03</u>	CHARGER, BATTERY, POWERDRIVE 120VAC 48VDC 60 HZ (MODEL NUMBER 17930-19) (INCLUDES ITEMS 1 - 14) 240 IN. DC CORD WITH MALE 3-PIN PLUG, 12 AWG 108 IN. AC CORD WITH MALE GROUNDED PLUG	1
1	<u>1018283-01</u>	ASSEMBLY, CASE (INCLUDES ITEM 2)	1
2	0007577	SCREW, PAN HEAD, SELF-TAPPING, #10 - 16 x 1/2	10
3	<u>1018197-01</u>	ASSEMBLY, TRANSFORMER	1
4	<u>1015914</u>	ASSEMBLY, HEATSINK, WITH DIODES (INCLUDES MOUNTING HARDWARE)	1
5	<u>1018285-01</u>	AMMETER (INCLUDES MOUNTING HARDWARE)	1
6	<u>1018311-01</u>	KIT, WIRE ASSEMBLY	1
7	<u>1018289-01</u>	CORDSET, DC, 113 INCHES LONG WITH MALE 3-PIN PLUG, 12 AWG	1
7	<u>1018289-02</u>	CORDSET, DC, 154 INCHES LONG WITH MALE 3-PIN PLUG, 12 AWG	1
7	<u>1018289-03</u>	CORDSET, DC, 250 INCHES LONG WITH MALE 3-PIN PLUG, 12 AWG	1
8	<u>1012101</u>	ASSEMBLY, FUSE (INCLUDES MOUNTING HARDWARE)	1
9	<u>1012098</u>	BUSHING, STRAIN RELIEF, DC CORD, 12 AWG	1
10	<u>1019144-01</u>	ASSEMBLY, VOLTAGE SUPPRESSOR	1
11	<u>1018287-01</u>	BREAKER, CIRCUIT, 15 AMP	1
12	<u>1018286-01</u>	RELAY, POWER, 48 VDC	1
13	<u>1018288-01</u>	CORDSET, AC, 80 INCHES LONG	1
13	<u>1018288-02</u>	CORDSET, AC, 116 INCHES LONG	1
14	<u>1015917</u>	BUSHING, STRAIN RELIEF, AC CORD	1

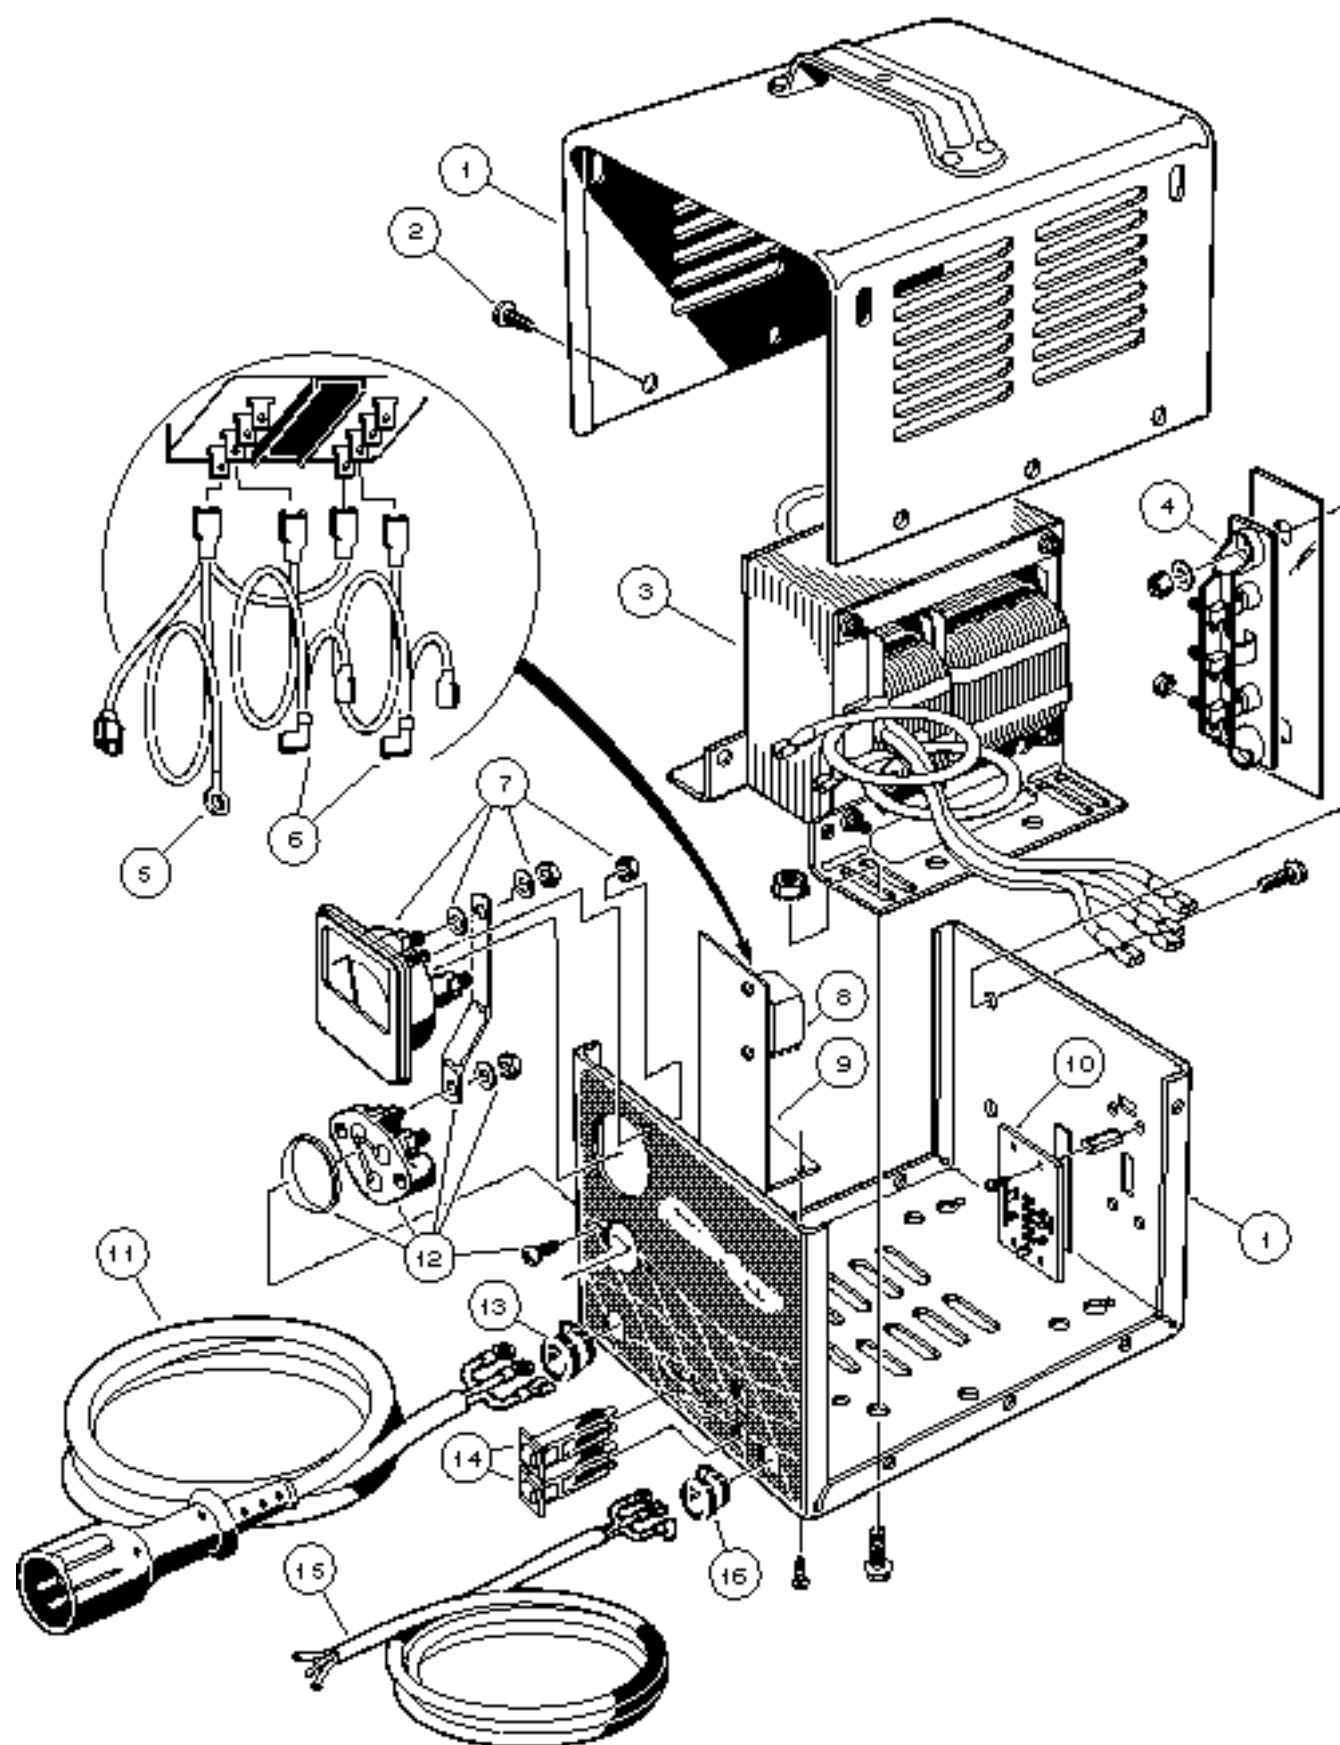


POWERDRIVE BATTERY CHARGER, EXPORT CARRYALL I AND II

13

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>1018315-03</u>	CHARGER, BATTERY, POWERDRIVE, EXPORT WITH 4-POSITION SWITCH 100 - 200 - 220 - 240 VAC, 48 VDC 50/60 HZ (MODEL NUMBER 18780-11) (INCLUDES ITEMS 1 - 16) 103 IN. DC CORD WITH MALE 3-PIN PLUG, 12 AWG 74 IN. AC CORD WITH NO PLUG	1
	<u>1018315-04</u>	CHARGER, BATTERY, POWERDRIVE EXPORT WITH 4-POSITION SWITCH 100 - 200 - 220 - 240 VAC, 48 VDC 50/60 HZ (MODEL NUMBER 18780-18) (INCLUDES ITEMS 1 - 16) 144 IN. DC CORD WITH MALE 3-PIN PLUG, 12 AWG 108 IN. AC CORD WITH NO PLUG	1
1	<u>1018381-01</u>	ASSEMBLY, CASE (INCLUDES ITEM 2)	1
2	<u>0007577</u>	SCREW, PAN HEAD, SELF-TAPPING, #10 - 16 x 1/2	10
3	<u>1018382-01</u>	ASSEMBLY, TRANSFORMER	1
4	<u>1015914</u>	ASSEMBLY, HEATSINK, WITH DIODES (INCLUDES MOUNTING HARDWARE)	1
5	<u>1019144-01</u>	ASSEMBLY, VOLTAGE SUPPRESSOR	1
6	<u>1018385-01</u>	KIT, WIRE ASSEMBLY	1
7	<u>1018285-01</u>	AMMETER (INCLUDES HARDWARE)	1
8	<u>1018383-01</u>	RELAY, POWER, 48 VDC (INCLUDES MOUNTING HARDWARE)	1
9	<u>1018387-01</u>	BRACKET, POWER RELAY MOUNTING	1
10	<u>1018386-01</u>	SWITCH, 4-POSITION, SLIDE	1
11	<u>1018289-01</u>	CORDSET, DC, 113 INCHES LONG WITH MALE 3-PIN PLUG, 12 AWG	1
11	<u>1018289-02</u>	CORDSET, DC, 154 INCHES LONG WITH MALE 3-PIN PLUG, 12 AWG	1
11	<u>1018289-03</u>	CORDSET, DC, 250 INCHES LONG WITH MALE 3-PIN PLUG, 12 AWG	1
12	<u>1012101</u>	ASSEMBLY, FUSE (INCLUDES HARDWARE)	1
13	<u>1012098</u>	BUSHING, STRAIN RELIEF, DC CORD, 12 AWG	1
14	<u>1018384-01</u>	BREAKER, CIRCUIT, 15 AMP	2
15	<u>1018317-01</u>	CORDSET, AC, 80 INCHES LONG, WITH LEADS (NO PLUG)	1
15	<u>1018317-02</u>	CORDSET, AC, 116 INCHES LONG, WITH LEADS (NO PLUG)	1
16	<u>1015917</u>	BUSHING, STRAIN RELIEF, AC CORD	1

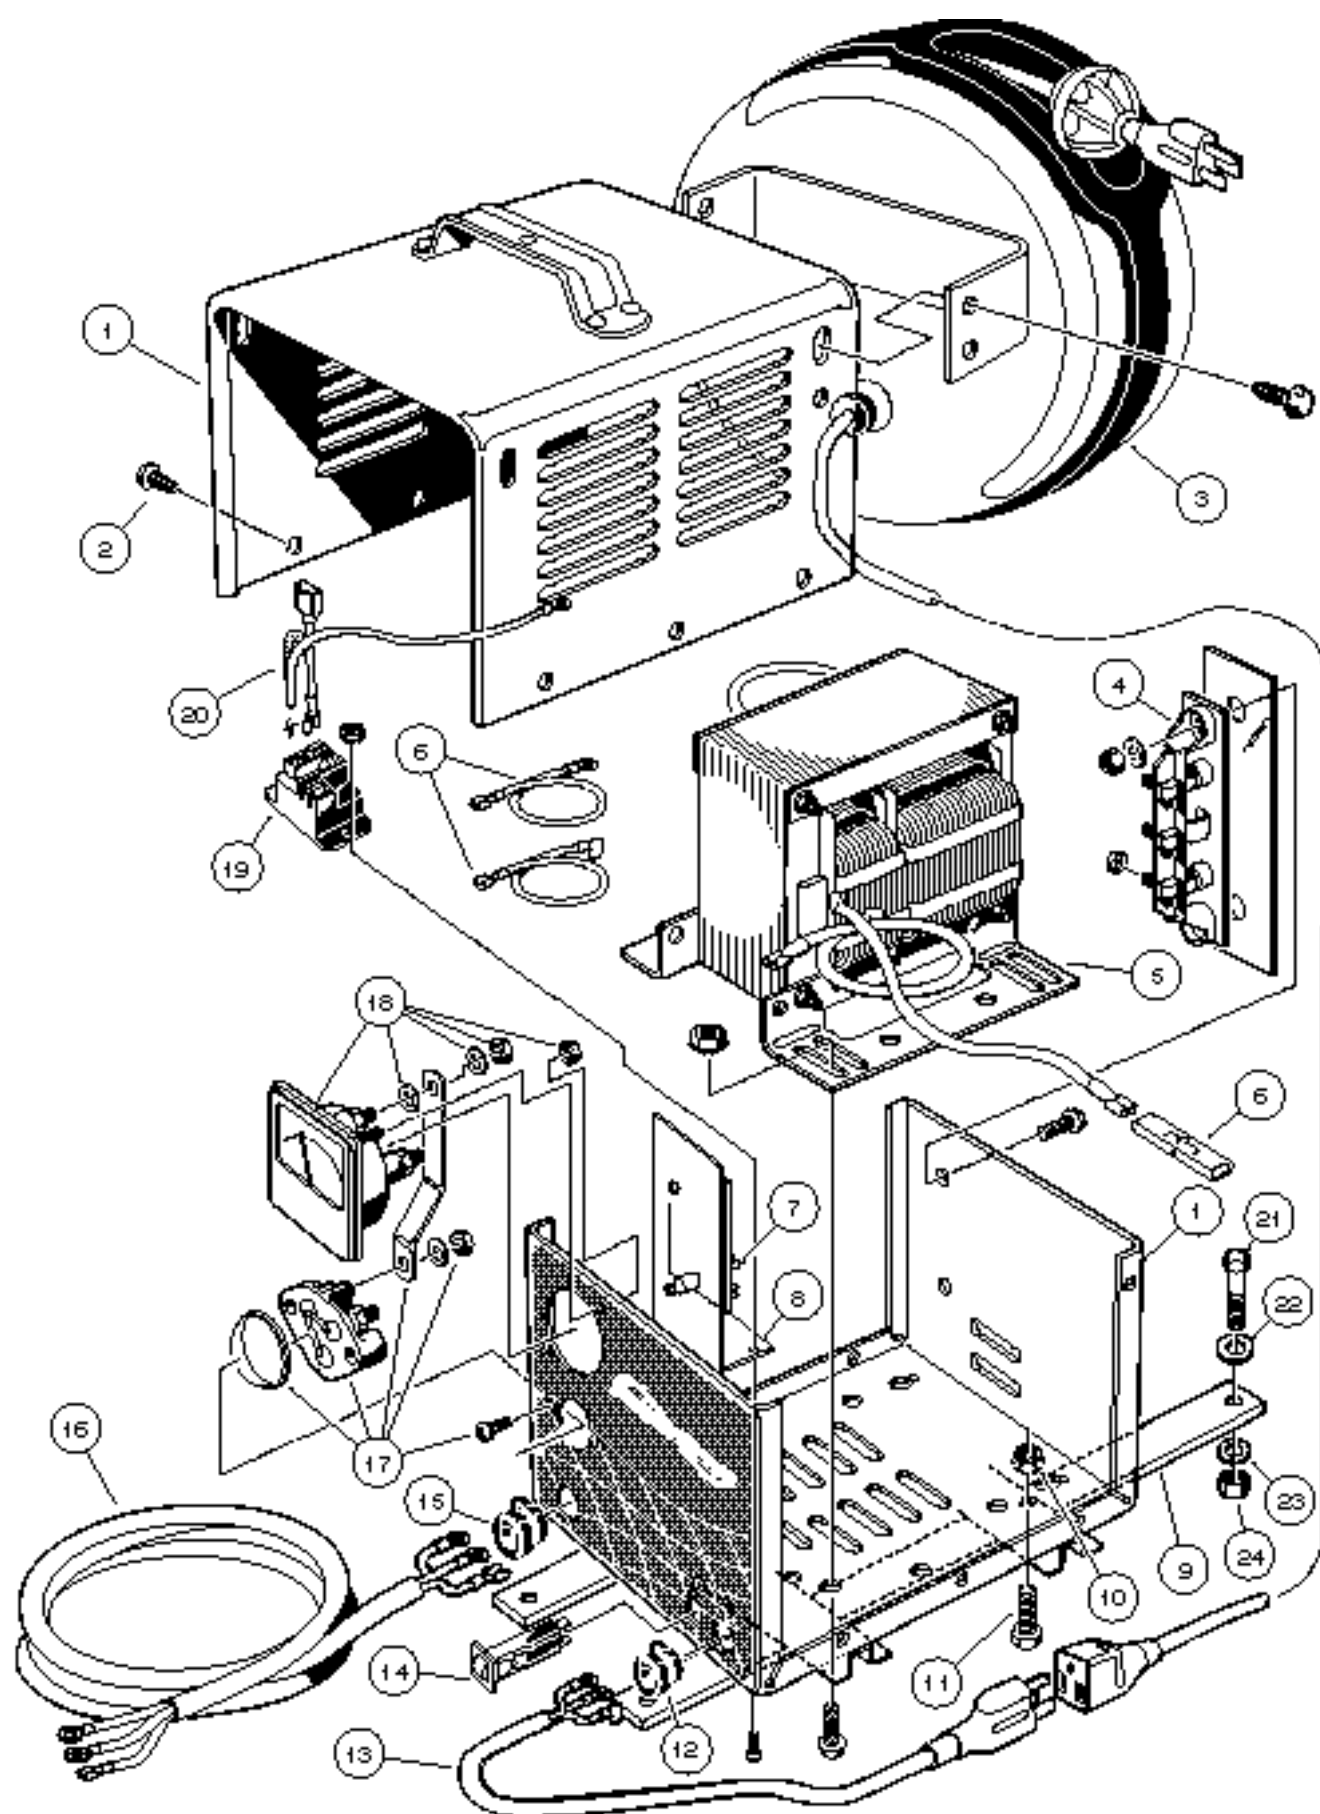


ON-BOARD POWERDRIVE BATTERY CHARGER DOMESTIC - CARRYALL VI

13

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>1018143-01</u>	ASSEMBLY, POWERDRIVE BATTERY CHARGER WITH REEL, ON-BOARD 120VAC 48VDC 60 HZ (INCLUDES ITEMS 1 - 20)	1
1	<u>1018161-01</u>	ASSEMBLY, CASE (INCLUDES ITEM 2)	1
2	<u>0007577</u>	SCREW, PAN HEAD, SELF-TAPPING, #10 - 16 x 1/2	10
3	<u>1017187</u>	ASSEMBLY, RETRACTABLE CORD REEL	1
4	<u>1015914</u>	ASSEMBLY, HEATSINK, WITH DIODES (INCLUDES HARDWARE)	1
5	<u>1018197-01</u>	ASSEMBLY, TRANSFORMER	1
6	<u>1018417-01</u>	KIT, WIRE ASSEMBLY	1
7	<u>1018419-01</u>	BOARD, CONTROL	1
8	<u>1018387-01</u>	BRACKET, RELAY AND RESET BOARD MOUNTING	1
9	<u>1011707</u>	BRACKET, MOUNTING	2
10	<u>0008233</u>	NUT, LOCK, 1/4 - 20	4
11	<u>0007847</u>	BOLT, HEX HEAD, 1/4 - 20 x 3/4	4
12	<u>1015917</u>	BUSHING, STRAIN RELIEF, AC CORD	1
13	<u>1018290-01</u>	CORDSET, AC, 24 INCHES WITH GROUNDED PLUG	1
14	<u>1018287-01</u>	BREAKER, CIRCUIT, 15 AMP	1
15	<u>1012098</u>	BUSHING, STRAIN RELIEF, DC CORD, 12 AWG	1
16	<u>1018291-01</u>	CORDSET, DC, 90 INCHES LONG WITH LEADS, 12 AWG	1
17	<u>1012101</u>	ASSEMBLY, FUSE (INCLUDES HARDWARE)	1
18	<u>1018285-01</u>	AMMETER (INCLUDES HARDWARE)	1
19	<u>1018286-01</u>	RELAY, POWER, 48 VDC	1
20	<u>1019144-01</u>	ASSEMBLY, VOLTAGE SUPPRESSOR	1
21	<u>0007479</u>	BOLT, HEX HEAD, 1/4 - 20 x 1 1/4	4
22	<u>1014306</u>	WASHER, FLAT, 1/4	4
23	<u>0000451</u>	WASHER, LOCK, 1/4	4
24	<u>0001028</u>	NUT, HEX, 1/4 - 20	4

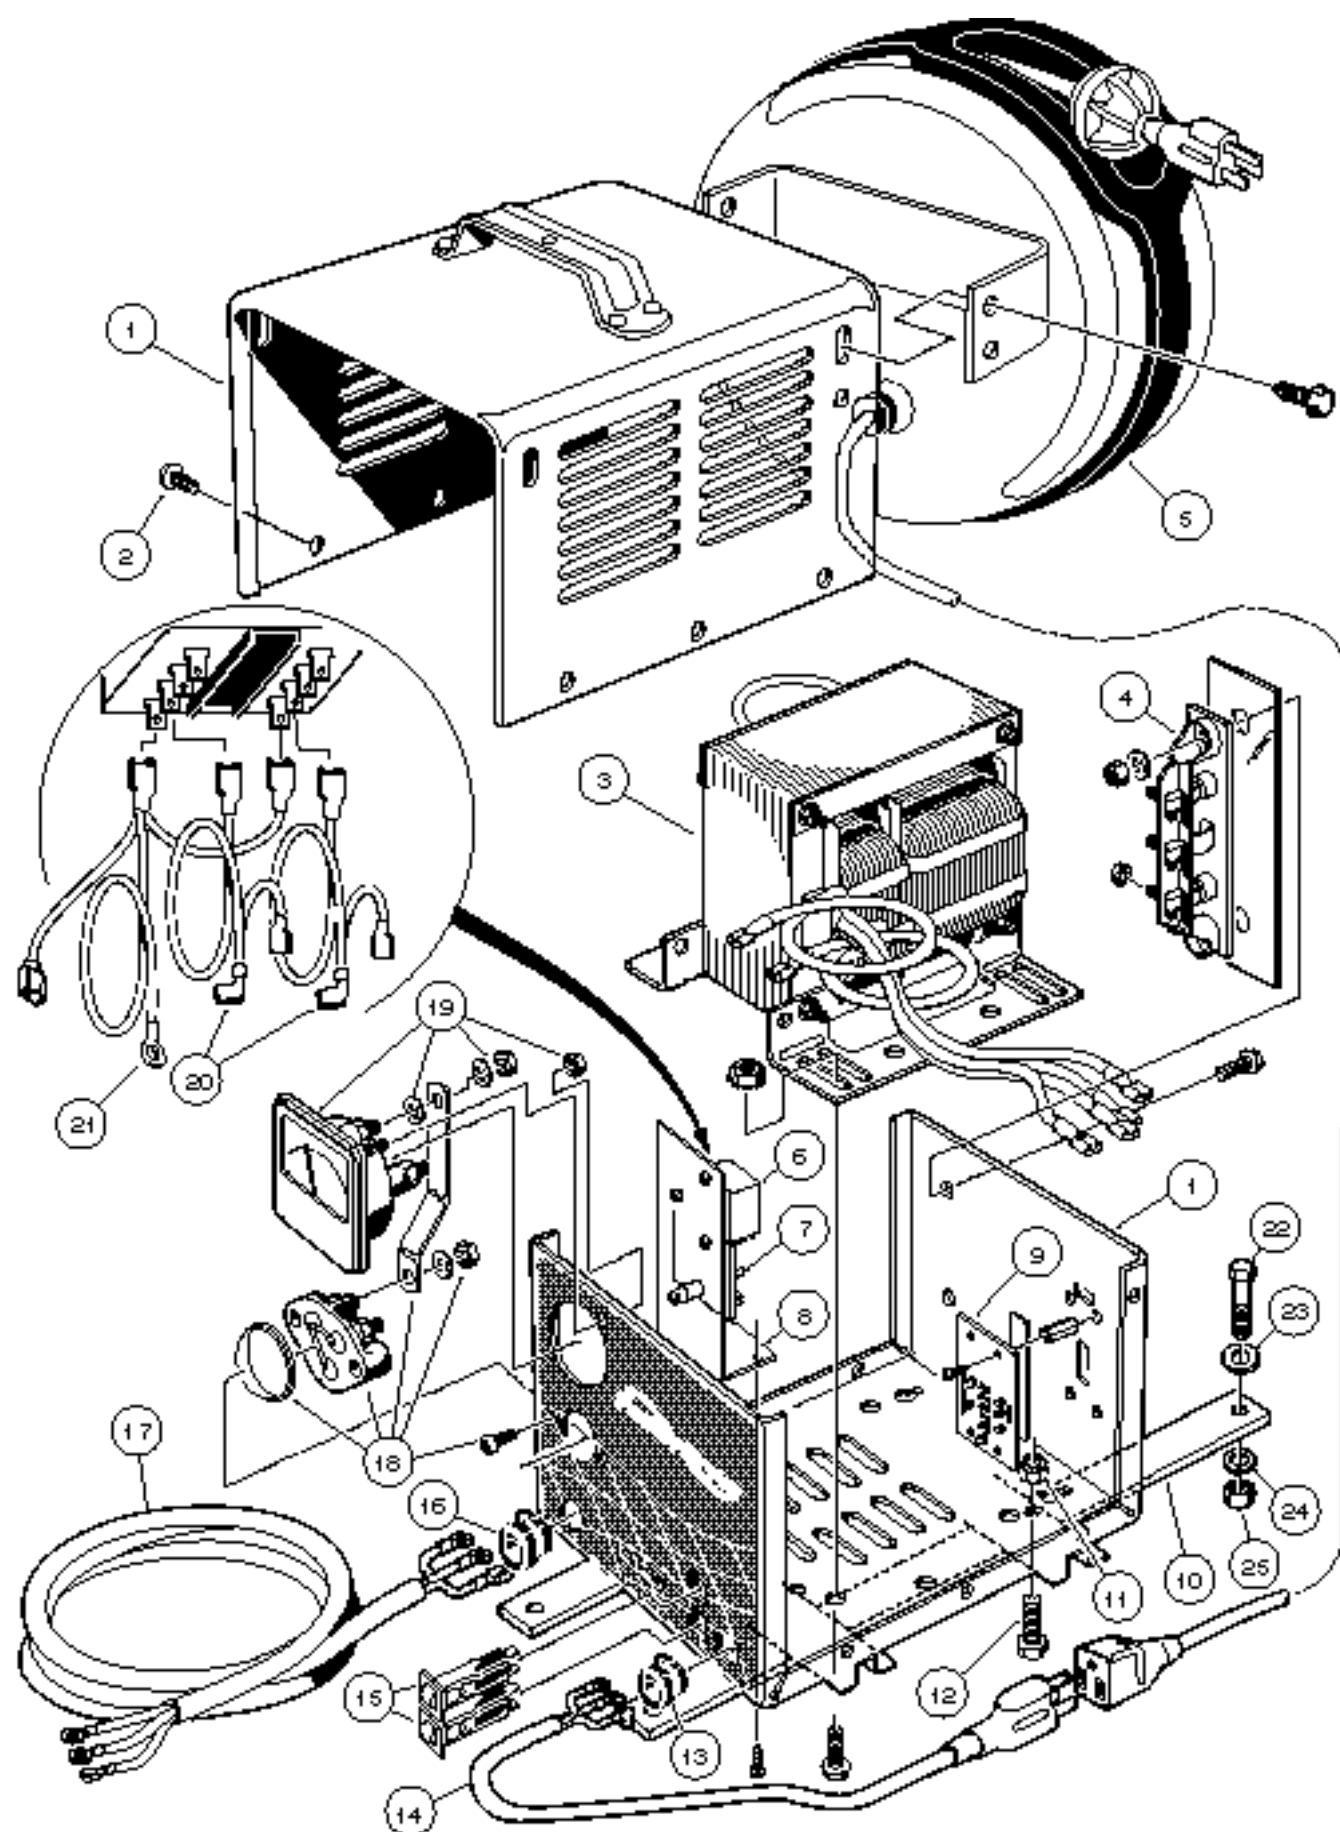

ON-BOARD POWERDRIVE BATTERY CHARGER EXPORT - CARRYALL VI

13


E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	<u>1018143-02</u>	ASSEMBLY, POWERDRIVE BATTERY CHARGER AND REEL, ON-BOARD WITH 4-POSITION SWITCH, 100 - 200 - 220 - 240 VAC, 48 VDC 50/60 HZ (INCLUDES ITEMS 1 - 21)	1
1	1018416-01	ASSEMBLY, CASE (INCLUDES ITEM 2)	1
2	0007577	SCREW, PAN HEAD, SELF-TAPPING, #10 - 16 x 1/2	10
3	1018382-01	ASSEMBLY, TRANSFORMER	1
4	<u>1015914</u>	ASSEMBLY, HEATSINK, WITH DIODES (INCLUDES MOUNTING HARDWARE)	1
5	<u>1017187</u>	ASSEMBLY, RETRACTABLE CORD REEL	1
6	<u>1018383-01</u>	RELAY, POWER (INCLUDES MOUNTING HARDWARE)	1
7	<u>1018419-01</u>	BOARD, CONTROL	1
8	<u>1018387-01</u>	BRACKET, MOUNTING, RELAY AND RESET BOARD	1
9	1018386-01	SWITCH, 4-POSITION, SLIDE	1
10	<u>1011707</u>	BRACKET, MOUNTING	2
11	0008233	NUT, LOCK, 1/4 - 20	4
12	0007847	BOLT, HEX HEAD, 1/4 - 20 x 3/4	4
13	<u>1015917</u>	BUSHING, STRAIN RELIEF, AC CORD	1
14	<u>1018290-01</u>	CORDSET, AC, 3 x 1.5MM x 24 INCHES LONG, WITH GROUNDED PLUG	1
15	1018384-01	BREAKER, CIRCUIT	2
16	<u>1012098</u>	BUSHING, STRAIN RELIEF, DC CORD, 12 AWG	1
17	<u>1018291-01</u>	CORDSET, DC, 90.5 INCHES LONG WITH LEADS, 12 AWG	1
18	<u>1012101</u>	ASSEMBLY, FUSE (INCLUDES HARDWARE)	1
19	<u>1018285-01</u>	AMMETER (INCLUDES HARDWARE)	1
20	1018418-01	KIT, WIRE ASSEMBLY	1
21	1019144-01	ASSEMBLY, VOLTAGE SUPPRESSOR	1
22	0007479	BOLT, HEX HEAD, 1/4 - 20 x 1 1/4	4
23	<u>1014306</u>	WASHER, FLAT, 1/4	4
24	0000451	WASHER, LOCK, 1/4	4
25	0001028	NUT, HEX, 1/4 - 20	4

MOTOR POWERDRIVE ELECTRIC VEHICLE

14

E

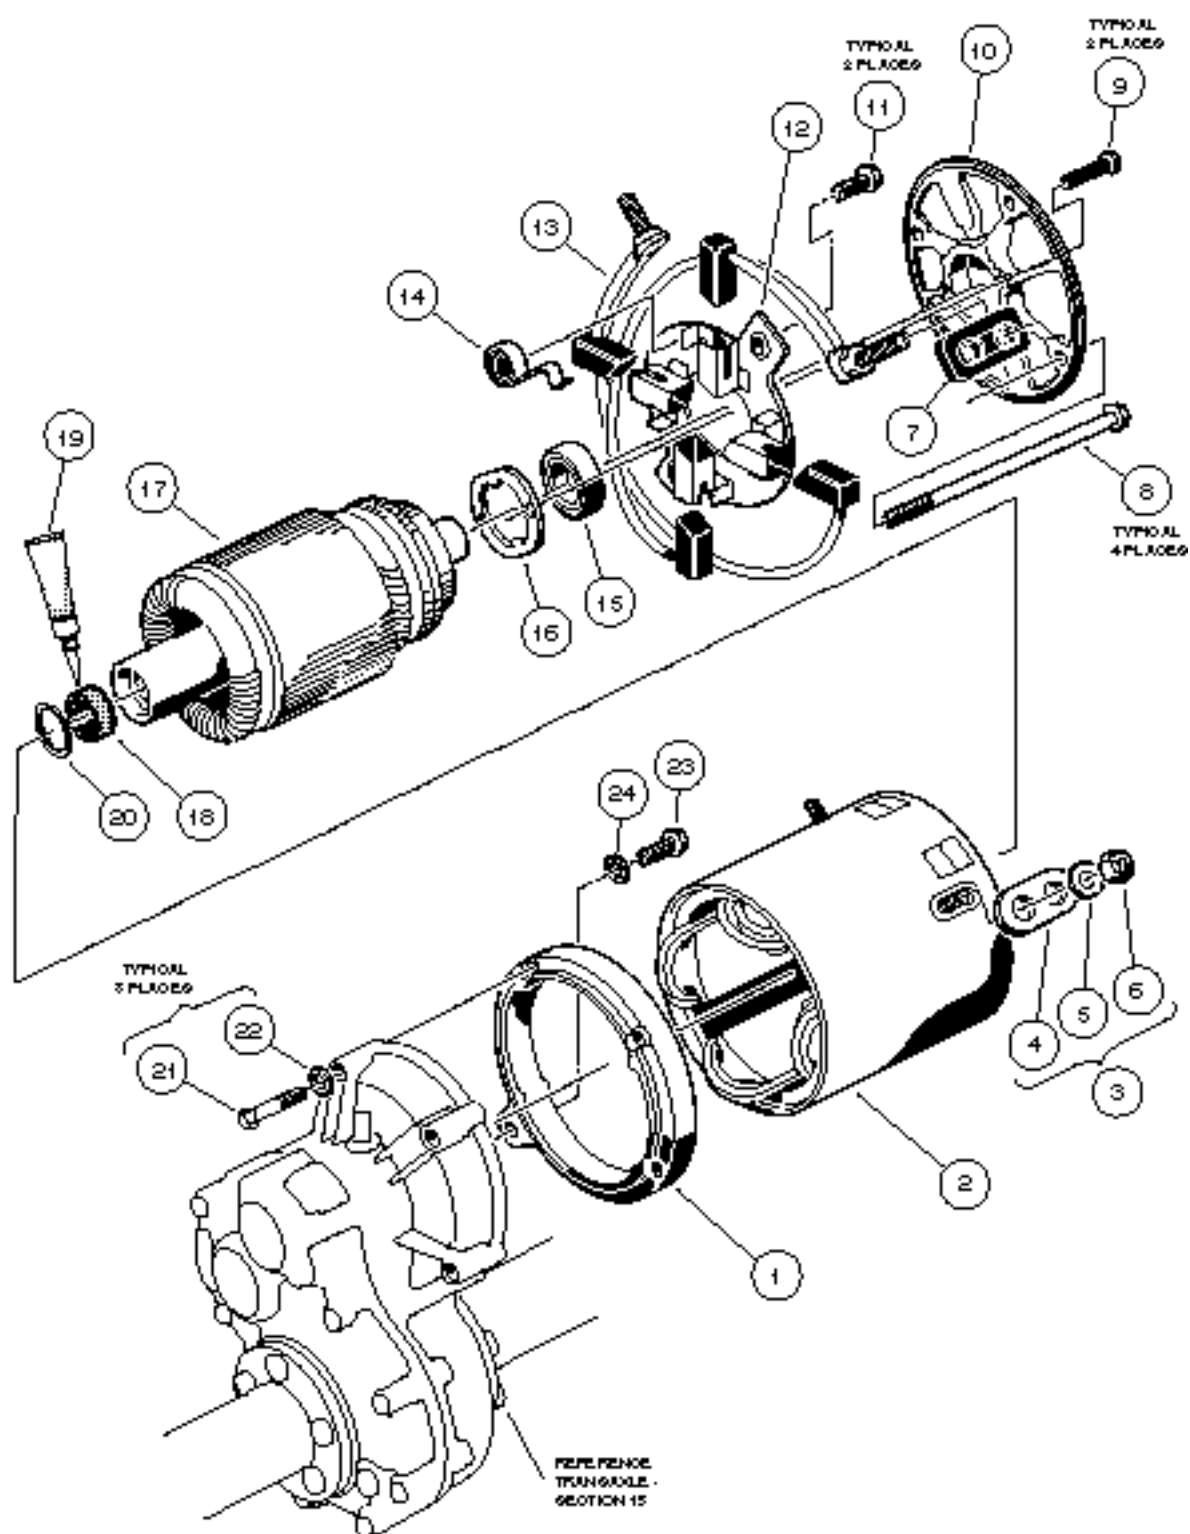

MOTOR - POWERDRIVE ELECTRIC VEHICLE

14


E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	1018133-01	ASSEMBLY, 48 VOLT MOTOR, 3.10 HP (INCLUDES ITEMS 1 - 20)	1
1	<u>1017944</u>	SHIELD, END	1
2	<u>1017958</u>	ASSEMBLY, STATOR SHELL AND WINDING	1
3	<u>1017947</u>	PACKAGE, HARDWARE (INCLUDES ITEMS 4 - 7)	1
4	N/A	BUSHING, INSULATOR	2
5	N/A	WASHER, FLAT, 5/16	4
6	N/A	NUT, HEX, 5/16 - 18	4
7	N/A	BUSHING, INSULATOR	2
8	<u>1017961</u>	SCREW, CLAMP	4
9	<u>1017953</u>	SCREW, BEARING RETAINER	2
10	<u>1017951</u>	SHIELD, END	1
11	<u>1017949</u>	SCREW, BRUSH HOLDER	2
12	<u>1017948</u>	RIGGING, BRUSH	1
13	<u>1017946</u>	PACKAGE, BRUSH (2 PIECES)	1
14	1011411	PACKAGE, BRUSH SPRING (4 PIECES)	1
15	<u>1011290</u>	BEARING, BALL	1
16	<u>1017950</u>	RETAINER, BEARING	1
17	N/A	ARMATURE	1
18	<u>1017891-01</u>	RING, GUIDE	1
19	<u>1018132-02</u>	ADHESIVE, GUIDE RING, 3 GRAM TUBE	A/R
20	<u>1018228-01</u>	RING, INTERNAL RETAINING	1
21	1014201	BOLT, HEX HEAD, 1/4 - 20 x 2 1/4	3
22	0000451	WASHER, LOCK, 1/4	3
23	<u>1010934</u>	BOLT, HEX HEAD, 5/16 - 18 x 1	1
24	0007174	WASHER, LOCK, 5/16	1

TRANSAXLE POWERDRIVE ELECTRIC VEHICLE

15

E

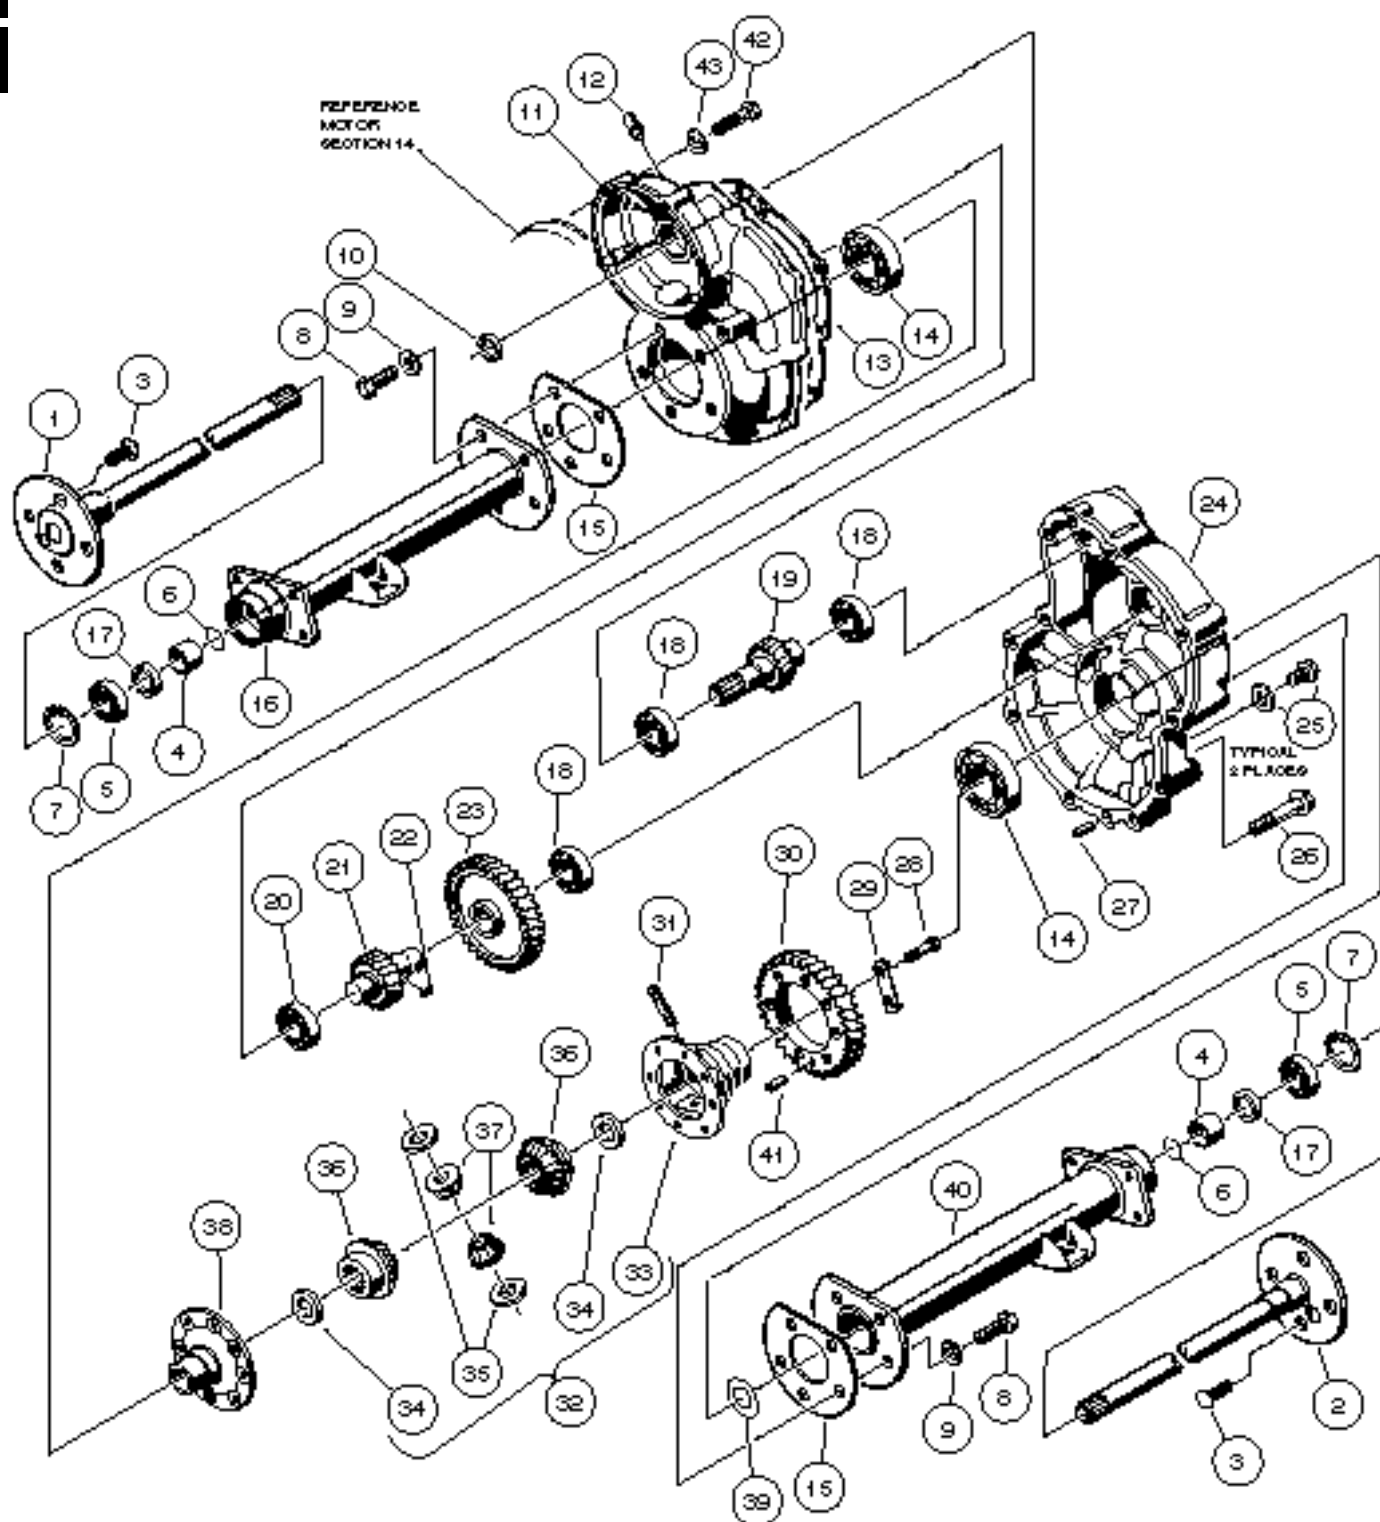

TRANSAXLE - POWERDRIVE ELECTRIC VEHICLE

15

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	1017683-02	TRANSAXLE (INCLUDES ITEMS 1 - 41)	1
1	1013785	AXLE ASSEMBLY, RIGHT (INCLUDES ITEMS 3 - 7)	1
2	1013786	AXLE ASSEMBLY, LEFT (INCLUDES ITEMS 3 - 7)	1
3	<u>1013787</u>	STUD, LUG	8
4	1014207	BUSHING, 25 MM I. D.	1
5	<u>1011291</u>	BEARING, OUTER AXLE TUBE	2
6	<u>1013792</u>	CIRCLIP, TYPE C	2
7	<u>1016672</u>	RING, RETAINING	2
8	<u>1013790</u>	BOLT, M10 x 1.5 x 30MM	10
9	<u>1013791</u>	WASHER, LOCK, 13/32	10
10	<u>1013775</u>	SEAL, INPUT SHAFT OIL	1
11	1013756	GEAR CASE, RIGHT	1
12	<u>1012711</u>	BREATHER	1
13	<u>1013758</u>	GASKET, CASE	1
14	0007330	BEARING, INNER AXLE TUBE	2
15	<u>1013789</u>	GASKET, AXLE TUBE	2
16	1017704	ASSEMBLY, AXLE TUBE, RIGHT SIDE	1
17	<u>1013794</u>	SEAL, AXLE SHAFT OIL	2
18	0007335	BEARING, INPUT GEAR	3
19	<u>1013764</u>	SHAFT, INPUT	1
20	0007336	BEARING, INTERMEDIATE GEAR	1
21	<u>1013766</u>	GEAR, INTERMEDIATE, SMALL	1
22	<u>1013780</u>	KEY, SUNK	1
23	1013765	GEAR, INTERMEDIATE, LARGE	1
24	1013757	GEAR CASE, LEFT	1
25	<u>1013759</u>	PLUG, FILL, WITH GASKET	2
26	<u>1013763</u>	BOLT, M6 x 1 x 50MM	10
27	<u>1012710</u>	PIN, DOWEL	2
28	<u>1013779</u>	BOLT, M8 x 1.25 x 37MM	8
29	<u>1013782</u>	PLATE, LOCK	4
30	<u>1013767</u>	GEAR, OUTPUT	1
31	<u>1013772</u>	PIN, DIFFERENTIAL	1
32	<u>1019105-01</u>	KIT, DIFFERENTIAL GEAR CASE (INCLUDES ITEMS 33 - 35 AND 38)	1
33	1013768	GEAR CASE, DIFFERENTIAL (LEFT)	1
34	<u>1013773</u>	PLATE, THRUST (DIFFERENTIAL GEAR)	2
35	<u>1013774</u>	PLATE, THRUST (IDLER GEAR)	2
36	1013771	GEAR, DIFFERENTIAL	2
37	<u>1013770</u>	GEAR, DIFFERENTIAL IDLER	2
38	1013769	GEAR CASE, DIFFERENTIAL (RIGHT)	1
39	<u>1013781</u>	SHIM	1
40	<u>1017703</u>	ASSEMBLY, AXLE TUBE, LEFT SIDE	1
41	<u>1014193</u>	PIN, DOWEL	1
42	1014201	BOLT, HEX HEAD, 1/4 - 20 x 2 1/4	3
43	0000451	WASHER, LOCK, 1/4	3

CLUB CAR

INGERSOLL-RAND

Transportation and Utility Vehicles
Club Car Inc.
P.O. Box 204658
Augusta, GA 30917-4658