




2006
Turf/Carryall
Illustrated Parts List

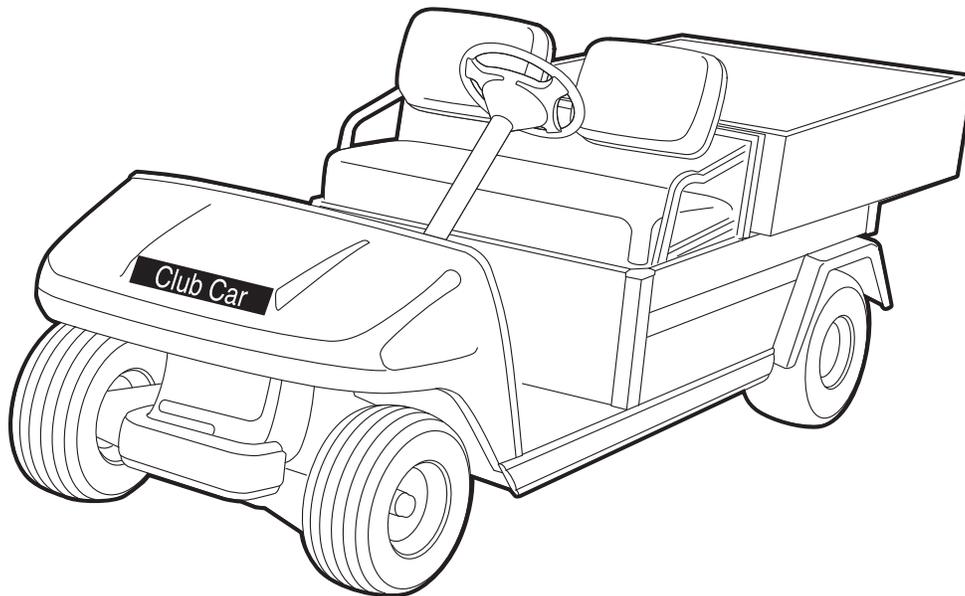

**Turf 1, Turf 2, Turf 252, Turf 6,
Carryall 1, Carryall 2, Carryall 2 Plus,
Carryall 252, Carryall 6
Gasoline and Electric Vehicles**

Manual Number 102907602
Edition Code 0905U0112T

USING THE ILLUSTRATED PARTS LIST

⚠ WARNING

- **This manual is to be used only for identification and ordering of service parts. Be sure to read and use the maintenance and service manual before attempting any vehicle repairs.**

This manual covers all 2006 Carryall[®] 1, Carryall 2, Carryall 252, Carryall 2 Plus, and Carryall 6; and Turf 1, Turf 2, Turf 252, and Turf 6 vehicles.

The manual is divided into sections. Note that there are two or three flags on the outside edge of each page. The first flag contains the section number of which that page is a part. The other flag (or flags) contains the letter G or E, signifying that the page pertains to the electric or gasoline vehicles only.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section numbers, and under them, the individual page titles and numbers to be found in that section. The index can be used to find specific parts and assemblies. The index is divided into numerical and alphabetical listings with the page numbers in italic text.

There is a two-page spread for each individual page title in the Table of Contents. On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used.

Note that a part description may be indented. This indentation corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to *level 2* is a component of the *level 1* part (assembly) that it is listed under. A *level 3* part is a component of the *level 2* part that it is listed under, and a *level 4* part is a component of the *level 3* part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part is *the quantity used per next higher level assembly of which it is a component*. A part that is not indented is a *level 1* part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.

HOW TO ORDER PARTS

Replacement parts and accessories can be obtained from our network of authorized dealers and distributors. You can obtain the name and phone number of your closest authorized Club Car dealer or distributor by visiting our web site at www.clubcar.com and clicking on the "Distributor Search" link or by calling our toll-free Service Parts and Technical Assistance hotline at (800) 872-2246 or (706) 863-3000, extension 3887.



P. O. Box 204658
Augusta, Georgia 30917-4658 USA
Telephone 706-863-3000
Service Parts Fax 706-855-7413
www.clubcar.com

NOTE: *This illustrated parts list represents the most current information at the time of publication. Club Car, Inc. is continually working to further improve its vehicles and other products. These improvements may affect the parts used to service the vehicle. Any modification and/or significant change in specifications will be forwarded to all Club Car and Carryall distributors/dealers and will, when applicable, appear in future editions of this illustrated parts list.*

Club Car, Inc. reserves the right to change specifications and designs at any time without notice and without the obligation of making changes to units previously sold.

Copyright © 2005 Club Car, Inc.
Club Car and *ArmorFlex*
are registered trademarks of Club Car, Inc.
This manual effective July 25, 2005.

2006 Turf/Carryall Gasoline and Electric Vehicle Illustrated Parts List

CONTENTS

SECTION 1 – BODY AND TRIM

Front Body and Trim – Turf 1	1-3
Front Body and Trim – Carryall 1	1-5
Front Body and Trim – Turf/Carryall 2, Carryall 2 Plus, and Carryall 6	1-7
Front Body and Trim – Turf/Carryall 252	1-9
Dash Components	1-11
Beverage Holder	1-13
Seat Bottom	1-15
Seat Back and Support Structure	1-17
Tilt Bed, Hinge, and Latch – Turf/Carryall 1	1-19
Tilt Bed, Hinge, and Latch – Turf/Carryall 2, 252, and Carryall 2 Plus	1-21
Latch Plate – Turf/Carryall 1, 2, 252, and Carryall 2 Plus	1-23
Prop Rod – Turf/Carryall 2, 252, and Carryall 2 Plus	1-25
Cargo Box – Turf/Carryall 1	1-27
Tailgate Bracket (Earlier Style)	1-29
Cargo Box Mounting – Turf/Carryall 1	1-31
Cargo Box – Turf/Carryall 2, 252, and 2 Plus	1-33
Cargo Box Mounting – Turf/Carryall 2, 252, and Carryall 2 Plus	1-35
Side Doors – Turf/Carryall 6	1-37
Flat Bed – Turf/Carryall 6	1-39
Flat Bed Mounting – Turf/Carryall 6	1-41
Trailer Hitch	1-43
Rear Body Trim – Turf/Carryall 1, 2, and Carryall 2 Plus	1-45
Rear Body Trim – Turf/Carryall 252	1-47
Rear Body Trim – Turf/Carryall 6	1-49

SECTION 2 – WHEELS AND TIRES

Wheels and Tires – Villager 6 and 8, and TransPorter 4 and 6	2-3
Wheels and Tires, Off-Road Tread – Turf/Carryall 252	2-5
Wheels and Tires – Turf/Carryall 6	2-7
Wheels and Tires, Off-Road Tread – Turf/Carryall 252, Turf/Carryall 2 XRT	2-9
Wheels and Tires, Turf Tread – Turf/Carryall 252	2-11

SECTION 3 – DECALS

Decals – Turf/Carryall 1 Gasoline and Electric Vehicles	3-3
Decals – Turf/Carryall 1 IQ System Vehicles	3-5
Decals – Turf/Carryall 1 Gasoline Vehicles	3-7
Decals – Turf/Carryall 2 Gasoline and Electric Vehicles	3-9

CONTENTS

Decals – Turf/Carryall 2 Gasoline Vehicles	3-11
Decals – Turf/Carryall 2 IQ Plus Electric Vehicles	3-13
Decals – Carryall 2 Plus	3-15
Decals – Carryall 2 Plus, Continued	3-17
Decals – Carryall 6 PowerDrive Vehicles	3-19
Decals – Carryall 6 PowerDrive Vehicles, Continued	3-21
Decals – Carryall 6 IQ Plus Vehicles	3-23
Decals – Carryall 6 IQ Plus Vehicles, Continued	3-25
Decals – Turf/Carryall 6 Gasoline Vehicles	3-27
Decals – Carryall 6 Gasoline Vehicles, Continued	3-29
Decals – Turf 6 Gasoline Vehicles, Continued	3-31
Decals – Turf/Carryall 252	3-33
Decals – Turf/Carryall 252, Continued	3-35
Decals, Logo – Turf/Carryall 1, 2, and Carryall 2 Plus	3-37
Decals, Logo – Turf/Carryall 6	3-39
Decals, Logo – Turf/Carryall 252	3-41
Logo Decal – IQ Plus Vehicles	3-43

SECTION 4 – BRAKES, PEDAL, AND CABLE ASSEMBLIES

Rear Brake Assembly, Self-Adjusting – Turf/Carryall 1 and 2	4-3
Rear Brake Assembly, Manually-Adjusted – Turf/Carryall 2, 252, 2 Plus, and 6	4-5
Brake Pedal Assembly – Vehicles with Two-Wheel Brakes	4-7
Brake Pedal Assembly – Vehicles with Four-Wheel Brakes (Except IQ Plus)	4-9
Brake Pedal Assembly – IQ Plus Vehicles	4-11
Front Brake Assembly – Vehicles with Four-Wheel Brakes	4-13
Front Brake Cables and Equalizer – Vehicles with Four-Wheel Brakes	4-15
Front Brake Cable Clips – Vehicles with Four-Wheel Brakes (Except IQ Plus Carryall 6)	4-17
Front Brake Cable Clips – IQ Plus Carryall 6 Vehicles	4-19
Brake Cable, Equalizer, and Equalizer Rod – Turf/Carryall 1 Vehicles	4-21
Rear Brake Cables – Turf/Carryall 2 (Except IQ Plus), 252, and 2 Plus with 4-Wheel Brakes	4-23
Rear Brake Cables and Equalizer – Turf/Carryall 2 IQ Plus Vehicles	4-25
Brake Cables and Equalizer – Turf/Carryall 2 Vehicles with Two-Wheel Brakes	4-27
Rear Brake Cables, Equalizer, and Equalizer Rod – Turf/Carryall 6 Vehicles	4-29
Accelerator Pedal Assembly – Gasoline Vehicle	4-31
Accelerator Pedal Assembly – Electric Vehicles with MCOR	4-33
Accelerator Rod – Gasoline Turf/Carryall 1	4-35
Accelerator Rod – Gasoline Turf/Carryall 2, 252, and 2 Plus	4-37
Accelerator Rod – Gasoline Turf/Carryall 6	4-39

CONTENTS

SECTION 5 – STEERING, FRONT AND REAR SUSPENSION

Steering Column – All Vehicles Except Turf/Carryall 252	5-3
Steering Column – Turf/Carryall 252 Vehicles	5-5
Steering Wheel – Turf Vehicles	5-7
Steering Wheel – Carryall Vehicles	5-9
Steering Gear Assembly	5-11
Front Frame Plates – Turf/Carryall 252	5-13
Front Suspension, Upper – Turf/Carryall 1 and Turf/Carryall 2 with Two-Wheel Brakes	5-15
Front Suspension, Lower – Turf/Carryall 1 and Turf/Carryall 2 with Two-Wheel Brakes	5-17
Front Suspension, Upper – Turf/Carryall 252	5-19
Front Suspension, Lower – Turf/Carryall 252	5-21
Front Suspension, Upper – Carryall 2 Plus and Turf/Carryall 2 with Four-Wheel Brakes	5-23
Front Suspension, Lower – Carryall 2 Plus and Turf/Carryall 2 with Four-Wheel Brakes	5-25
Front Suspension, Upper – Turf/Carryall 6 Vehicles	5-27
Front Suspension, Lower – Turf/Carryall 6 Vehicles	5-29
Front Spindles and Hubs – Vehicles with Two-Wheel Brakes	5-31
Front Spindles and Hubs – Vehicles with Four-Wheel Brakes	5-33
Rear Suspension Components – Turf/Carryall 1 Electric Vehicles	5-35
Rear Suspension Components – Turf/Carryall 1 Gasoline Vehicles	5-37
Rear Suspension Components – Carryall 2 Plus, Turf/Carryall 2, and 6 Gasoline with Stabilizer Bar	5-39
Rear Suspension Components – Turf/Carryall 252	5-41
Rear Suspension Components – Turf/Carryall 2 and 6 PowerDrive Vehicles	5-43
Rear Suspension Components – Turf/Carryall 2 and 6 IQ Plus Vehicles	5-45
Stabilizer Bar – Turf/Carryall 2, 6, and Carryall 2 Plus Gasoline Vehicles	5-47
Stabilizer Bar – Turf/Carryall 252	5-49

SECTION 6 – ELECTRICAL SYSTEM – GASOLINE VEHICLES

Wiring – Gasoline Turf/Carryall 1	6-5
Wiring – Gasoline Carryall 2 Plus	6-9
Wiring – Gasoline Turf/Carryall 2, and Turf/Carryall 252	6-13
Wiring – Gasoline Carryall 6	6-17
Wiring – Gasoline Turf 6	6-21
Wiring – Gasoline Turf 6 Lighting	6-25
Front Body Electrical Components – Gasoline Turf/Carryall 6	6-27
Headlights	6-29
Electrical Component Box – Gasoline Turf/Carryall 1 Vehicles	6-31
Electrical Component Box – Gasoline Turf/Carryall 2, and 252	6-33
Electrical Component Box – Gasoline Carryall 2 Plus	6-35
Electrical Component Box – Gasoline Carryall 6	6-37

CONTENTS

Electrical Component Box – Gasoline Turf 6	6-39
Controls and Indicators – Turf/Carryall 1, 2, and 252 Gasoline Vehicles	6-41
Headlight Components – Turf 2, and Turf/Carryall 252	6-43
Controls and Indicators – Gasoline Carryall 2 Plus	6-45
Controls and Indicators – Gasoline Carryall 6	6-47
Controls and Indicators – Gasoline Turf 6	6-49
Starter/Generator Assembly Model G425419 – Gasoline Vehicles	6-51
Starter/Generator Mounting – Gasoline Turf/Carryall 2, 252, 6, and Carryall 2 Plus Vehicles	6-53
Battery – Gasoline Vehicle	6-55
Electrical Components, Rear Body – Gasoline Turf/Carryall 6	6-57

SECTION 7 – FE350 ENGINE WITH ACR (KEY-START VEHICLES)

FE350 Engine with ACR (Automatic Compression Release) – Shrouds and Brackets	7-3
AS11 FE350 Engine – Ignition Components and Flywheel	7-5
FE350 Engine – Oil Circulation	7-7
AS11 FE350 Engine – Cylinder Head	7-9
FE350 Engine with ACR – Crankcase, Camshaft, and Oil Sensor	7-11
AS11 FE350 Engine – Crankcase and Crankshaft	7-13
FE350 Engine Mounting	7-15

SECTION 8 – FE350 ENGINE WITHOUT ACR (PEDAL-START VEHICLES)

AS11 FE350 Engine without ACR (Automatic Compression Release) – Shrouds and Brackets	8-3
AS11 FE350 Engine – Ignition Components and Flywheel	8-5
FE350 Engine – Oil Circulation	8-7
AS11 FE350 Engine – Cylinder Head	8-9
AS11 FE350 Engine without ACR – Crankcase, Camshaft, and Oil Sensor	8-11
AS11 FE350 Engine – Crankcase and Crankshaft	8-13
Engine Mounting – Turf/Carryall 252	8-15
FE350 Engine Mounting – All Vehicles Except Turf/Carryall 252	8-17

SECTION 9 – FUEL, INTAKE, AND GOVERNOR SYSTEMS

Fuel System – Turf/Carryall 1 and 6	9-3
Fuel System – Turf/Carryall 2, 252, and Carryall 2 Plus	9-5
Fuel Tank with Fuel Level Sending Unit	9-7
Carburetor Assembly – FE350	9-9
Carburetor Installation – FE350	9-11
Governor and Accelerator Cables	9-13
Air Box and Intake Hose	9-15
Intake System – Turf/Carryall 1	9-17

CONTENTS

Intake System – Turf/Carryall 2, 2, 252, and Carryall 2 Plus	9-19
Intake System – Turf/Carryall 6	9-21

SECTION 10 – EXHAUST SYSTEM

Exhaust System – Turf/Carryall 1 with FE350 Engine	10-3
Exhaust System – Turf/Carryall 2, 252, 6 and Carryall 2 Plus	10-5

SECTION 11 – TORQUE CONVERTER

Drive Clutch – Turf/Carryall 1, 2, and 252	11-3
Drive Clutch – Carryall 2 Plus, and Turf/Carryall 6	11-5
Drive Belt – FE350	11-7
Driven Clutch – Turf/Carryall 1, 2, 252, and Turf/Carryall 6	11-9
Driven Clutch – Carryall 2 Plus	11-11

SECTION 12 – UNITIZED TRANSAXLE AND FORWARD/REVERSE SHIFTER

Transaxle – Gasoline Vehicles, Gear Cases and Brackets	12-3
Transaxle – Gasoline Vehicles, Transmission and Gear Reduction	12-5
Transaxle – Gasoline Vehicles, Differential and Axles	12-7
Forward/Reverse Shifter Assembly – Gasoline Vehicles	12-9
Forward/Reverse Shifter Cable – Turf/Carryall 1 Vehicles	12-11
Forward/Reverse Shifter Cable – Turf/Carryall 2, and Carryall 2 Plus Vehicles	12-13
Forward/Reverse Shifter Cable – Turf/Carryall 252	12-15
Forward/Reverse Shifter Cable – Turf/Carryall 6	12-17

SECTION 13 – ELECTRICAL SYSTEM – ELECTRIC VEHICLES

Wiring – IQ System Electric Turf/Carryall 1	13-5
Wiring – PowerDrive Electric Turf/Carryall 2	13-9
Wiring – IQ Plus Electric Turf/Carryall 2	13-13
Headlights	13-15
Wiring – PowerDrive Electric Carryall 6	13-19
Wiring – IQ Plus TransPorter 4 and 6	13-23
Front Body Electrical Components – Carryall 6 PowerDrive Vehicles	13-25
Instrument Panel Components – Turf/Carryall 1 and 2	13-27
Headlight Components – Turf 2	13-29
Instrument Panel Components – Carryall 6 PowerDrive Vehicle	13-31
Motor Controller Output Regulator (MCOR)	13-33
Forward/Reverse Switch – PowerDrive	13-35
Forward/Reverse Switch and Tow/Run Switch – IQ System Turf/Carryall 1	13-37

CONTENTS

Forward/Reverse Switch – IQ Plus Vehicles	13-39
Battery Charger Receptacle – Turf/Carryall 1 Vehicles Only	13-41
Battery Charger Receptacle – Turf/Carryall 2 IQ Plus Vehicles	13-43
Center Body Electrical Components – Carryall 6 PowerDrive	13-45
Center Body Electrical Components, Continued – Carryall 6 PowerDrive	13-47
Electrical Installation – Carryall 6 IQ Plus Vehicles	13-51
Batteries – Turf/Carryall 2 PowerDrive Vehicles	13-53
Center Body Electrical Components – Carryall 6 IQ Plus Vehicles	13-57
Batteries – Turf/Carryall 1 with 6 8-Volt Batteries	13-59
Computer, Controller, and Solenoid – DS Villager 4 IQ System Vehicle	13-61
Computer, Controller, and Solenoid – Turf/Carryall 2 PowerDrive Vehicles	13-63
Elec System Installation – Turf/Carryall 2 IQ Plus	13-67
Tow/Run Switch – IQ Plus Vehicles	13-69
Computer, Controller, and Solenoid – Turf/Carryall 2 IQ Plus Vehicles	13-73
Hour Meter – Turf 1 Vehicles	13-75
Hour Meter – PowerDrive Turf 2 Vehicles	13-77
Hour Meter – IQ Plus Turf 2 Vehicles	13-79
Electrical Components, Rear Body – Carryall 6 PowerDrive	13-81
Rear Reverse Buzzer – Carryall 6	13-83
Carryall 2 IQ Plus with T-105 Batteries	13-85
Carryall 2 IQ Plus with T-145 Batteries	13-87
Carryall 6 IQ Plus with T-105 Batteries	13-89
Carryall 6 IQ Plus with T-145 Batteries	13-91

SECTION 14 – ELECTRIC MOTOR

Motor (Model 5BC59JBS6360) – PowerDrive	14-3
Motor (Model 5BC59JBS6365) – Electric Vehicle	14-5
Motor (Model 5BC59JBS6390) – Electric Vehicle	14-7
Motor (Model EJ4-4001) – Electric Vehicle	14-9
Motor (Model DA5-4006) – IQ Plus	14-11
Motor (Model EJ8-4001A) – Electric Vehicle	14-13

SECTION 15 – TRANSAXLES – ELECTRIC VEHICLES

Transaxle – Electric Vehicles (Earlier Version)	15-3
Transaxle – Electric Vehicles (Later Style)	15-5

SECTION 16 – BATTERY CHARGER

PowerDrive 3 Battery Charger, Domestic	16-3
PowerDrive Battery Charger (Model 17930), Domestic	16-5

CONTENTS

PowerDrive Battery Charger (Model 18780), Export	16-7
PowerDrive Battery Charger (Model 20310), European	16-9
Onboard PowerDrive Battery Charger (Model 17935), Domestic – Carryall 6 PowerDrive Vehicles	16-11
Onboard PowerDrive Battery Charger (Model 17790), Export – Carryall 6 PowerDrive Vehicles	16-13
IQ Plus Domestic Battery Charger (Model 25730)	16-15
IQ Plus Onboard Battery Charger (Model 25260) – IQ Plus Turf/Carryall 2 and Carryall 6 Vehicles	16-17
Onboard Charger (Model 25260) AC Reel Mounting – IQ Plus Carryall 6	16-19
Onboard Charger (Model 25260) Mounting – Carryall 6 IQ Plus Vehicles	16-21
Onboard Charger (Model 25260) and Reel Mounting – IQ Plus Turf/Carryall 2	16-23
Onboard Charger (Model 25260) and Reel Mounting – IQ Plus Turf/Carryall 2, Continued	16-27
IQ Plus Battery Charger (Model 25880), Export and European	16-29
IQ Plus Onboard Battery Charger (Model 25660), Export	16-31
Onboard Charger (Model 25660) and Reel Mounting – IQ Plus Turf/Carryall 2	16-33
Onboard Charger (Model 25660) and Reel Mounting – IQ Plus Turf/Carryall 2, Continued	16-37

SECTION 17 – MAINTENANCE AND SERVICE TOOLS

Maintenance and Service Tools	17-3
Maintenance and Service Tools, Continued	17-5
Maintenance and Service Tools, Continued	17-7
Maintenance and Service Tools, Continued	17-9
Maintenance and Service Tools, Continued	17-11

SECTION i – INDEX


BODY AND TRIM

1

G

E

1
G
E

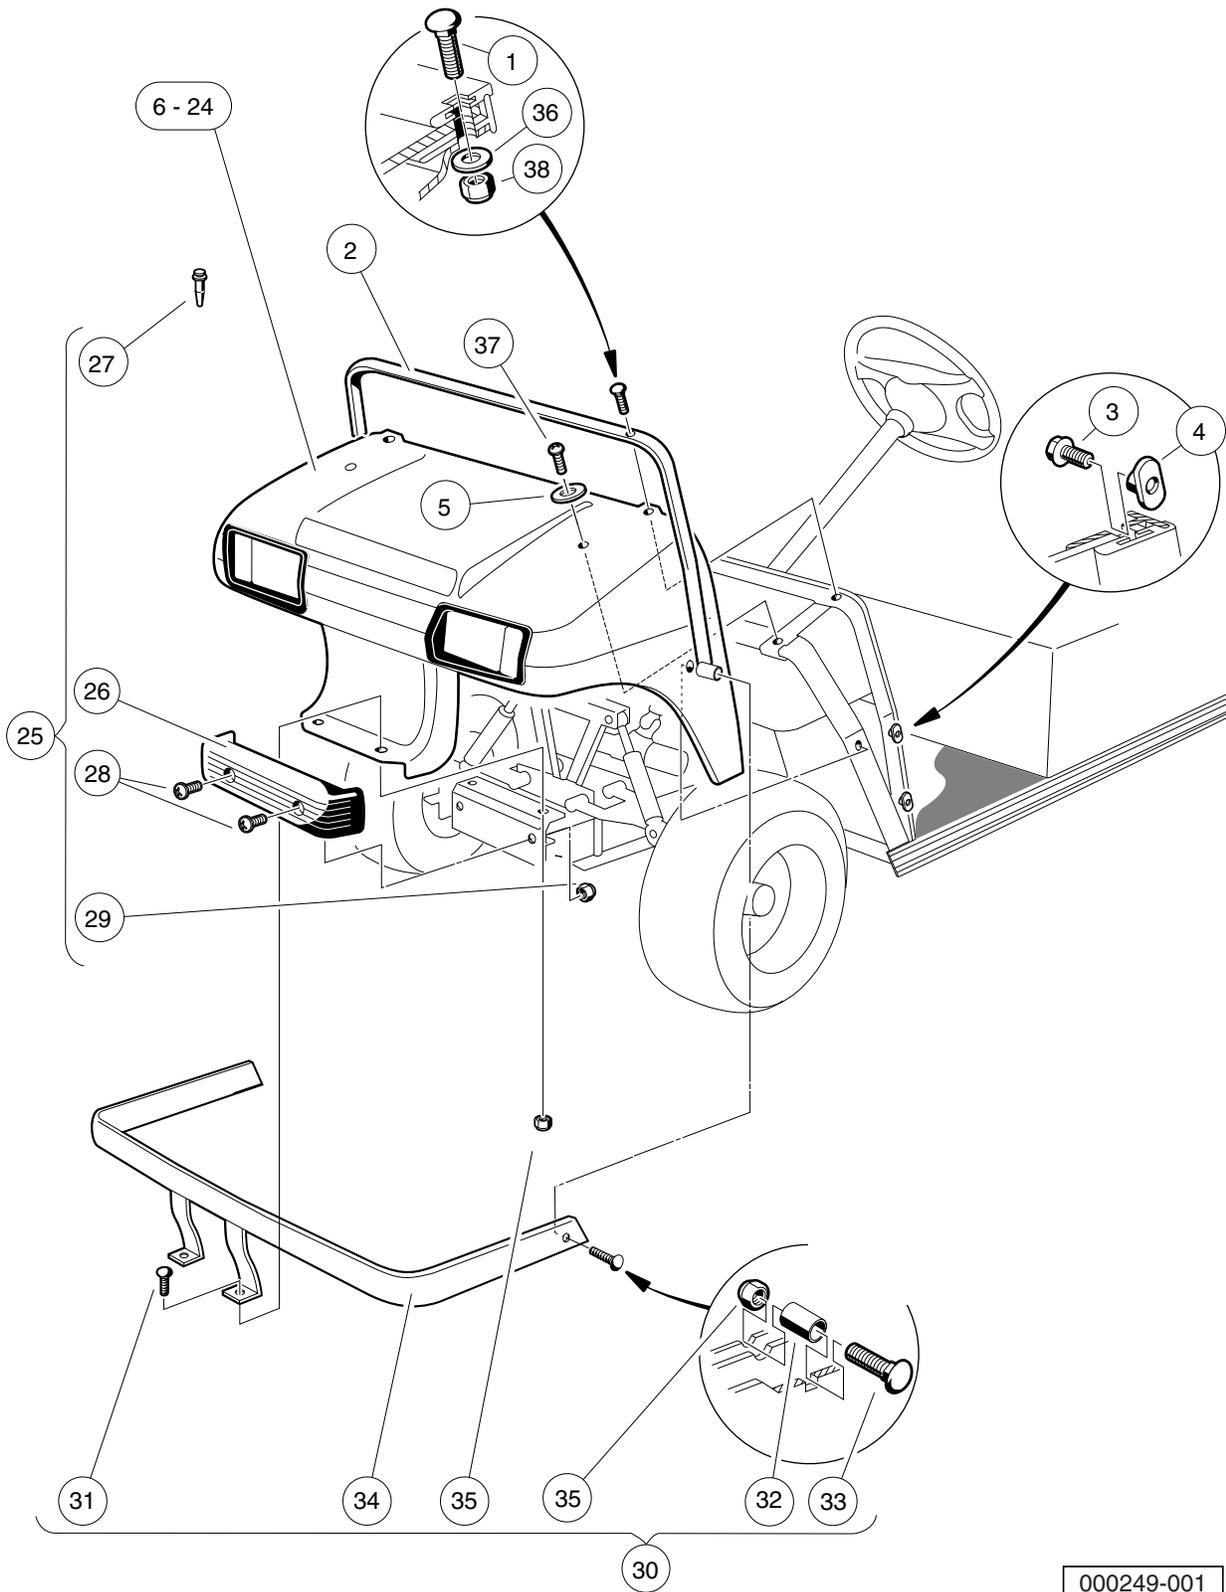


000249-001

FRONT BODY AND TRIM – TURF 1

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	2
2	<u>1011014</u>	Trim, Cowl	1
3	<u>1011017</u>	Screw, #8-32 X 0.375	6
4	1011394	T-Nut Package (Set of 4)	1
5	1015075	Washer, 5/16 Flat Type A	2
6	<u>101692501</u>	Cowl, TPO, Beige	1
7	<u>101692502</u>	Cowl, TPO, White	1
8	<u>101692506</u>	Cowl, TPO, Red	1
9	<u>101692509</u>	Cowl, TPO, Pacific Blue (Royal Blue)	1
10	<u>101692510</u>	Cowl, TPO, Dark Green	1
11	<u>101692511</u>	Cowl, TPO, Black	1
12	<u>101692512</u>	Cowl, TPO, Classic Blue (Navy)	1
13	<u>101692513</u>	Cowl, TPO, Burgundy	1
14	<u>101692514</u>	Cowl, TPO, Dark Gray	1
15	<u>101692515</u>	Cowl, TPO, Safety Yellow	1
16	<u>101693901</u>	Cowl with Headlight Opening, TPO, Beige	1
17	<u>101693902</u>	Cowl with Headlight Opening, TPO, White	1
18	<u>101693906</u>	Cowl with Headlight Opening, TPO, Red	1
19	<u>101693909</u>	Cowl with Headlight Opening, TPO, Dark Green	1
20	<u>101693910</u>	Cowl with Headlight Opening, TPO, Black	1
21	<u>101693911</u>	Cowl with Headlight Opening, TPO, Classic Blue (Navy)	1
22	<u>101693912</u>	Cowl with Headlight Opening, TPO, Burgundy	1
23	<u>101693913</u>	Cowl with Headlight Opening, TPO, Dark Gray	1
24	<u>101693914</u>	Cowl with Headlight Opening, TPO, Safety Yellow	1
25	<u>1017080</u>	Kit, Front Bumper (includes items 26 through 29)	1
26	<u>1016868</u>	Front Bumper	1
27	<u>1016967</u>	Blind Rivet, Push Type	2
28	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2
29	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
30	<u>101734802</u>	Kit, Heavy-Duty Bumper (includes items 31 through 35)	1
31	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	2
32	<u>1010546</u>	Spacer	2
33	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	2
34	N/A	Weldment, Heavy Duty Bumper	1
35	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4
36	<u>1241</u>	Washer, 5/16 Type A Flat	2
37	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2
38	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2

1
G
E

1
G
E

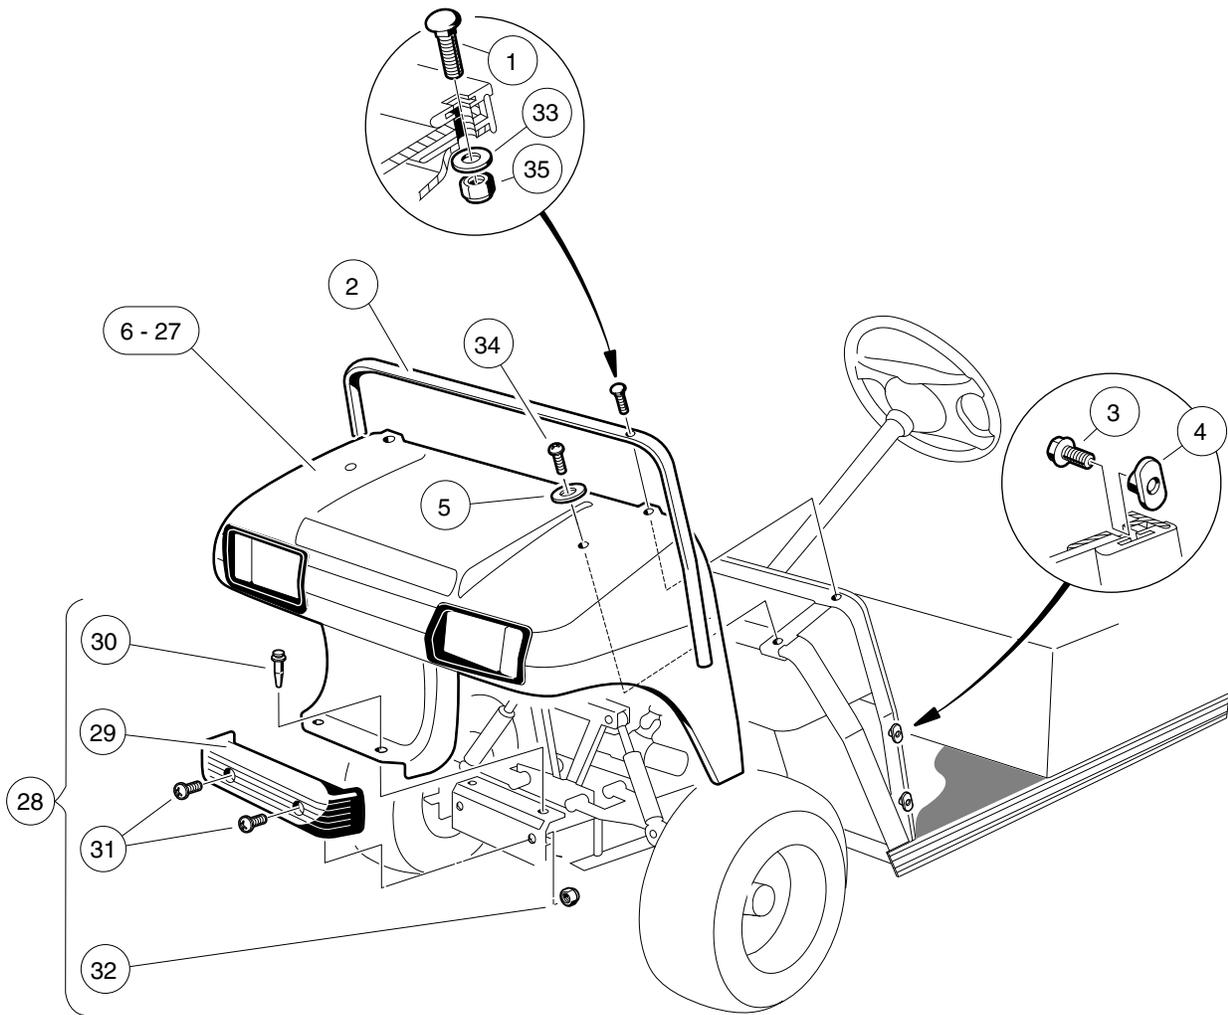


000249-002

FRONT BODY AND TRIM – CARRYALL 1

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	2
2	<u>1011014</u>	Trim, Cowl	1
3	<u>1011017</u>	Screw, #8-32 X 0.375	6
4	1011394	T-Nut Package (Set of 4)	1
5	1015075	Washer, 5/16 Flat Type A	2
6	<u>101692501</u>	Cowl, TPO, Beige	1
7	<u>101692502</u>	Cowl, TPO, White	1
8	<u>101692504</u>	Cowl, Tpo -gray	1
9	<u>101692506</u>	Cowl, TPO, Red	1
10	<u>101692509</u>	Cowl, TPO, Pacific Blue (Royal Blue)	1
11	<u>101692510</u>	Cowl, TPO, Dark Green	1
12	<u>101692511</u>	Cowl, TPO, Black	1
13	<u>101692512</u>	Cowl, TPO, Classic Blue (Navy)	1
14	<u>101692513</u>	Cowl, TPO, Burgundy	1
15	<u>101692514</u>	Cowl, TPO, Dark Gray	1
16	<u>101692515</u>	Cowl, TPO, Safety Yellow	1
17	<u>101693901</u>	Cowl with Headlight Opening, TPO, Beige	1
18	<u>101693902</u>	Cowl with Headlight Opening, TPO, White	1
19	<u>101693904</u>	Cowl with Headlight Opening, TPO, Gray	1
20	<u>101693906</u>	Cowl with Headlight Opening, TPO, Red	1
21	<u>101693908</u>	Cowl with Headlight Opening, TPO, Pacific Blue (Royal Blue)	1
22	<u>101693909</u>	Cowl with Headlight Opening, TPO, Dark Green	1
23	<u>101693910</u>	Cowl with Headlight Opening, TPO, Black	1
24	<u>101693911</u>	Cowl with Headlight Opening, TPO, Classic Blue (Navy)	1
25	<u>101693912</u>	Cowl with Headlight Opening, TPO, Burgundy	1
26	<u>101693913</u>	Cowl with Headlight Opening, TPO, Dark Gray	1
27	<u>101693914</u>	Cowl with Headlight Opening, TPO, Safety Yellow	1
28	<u>1017080</u>	Kit, Front Bumper (includes items 29 through 32)	1
29	<u>1016868</u>	Front Bumper	1
30	<u>1016967</u>	Blind Rivet, Push Type	2
31	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2
32	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
33	<u>1241</u>	Washer, 5/16 Type A Flat	2
34	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2
35	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2

1
G
E

1
G
E

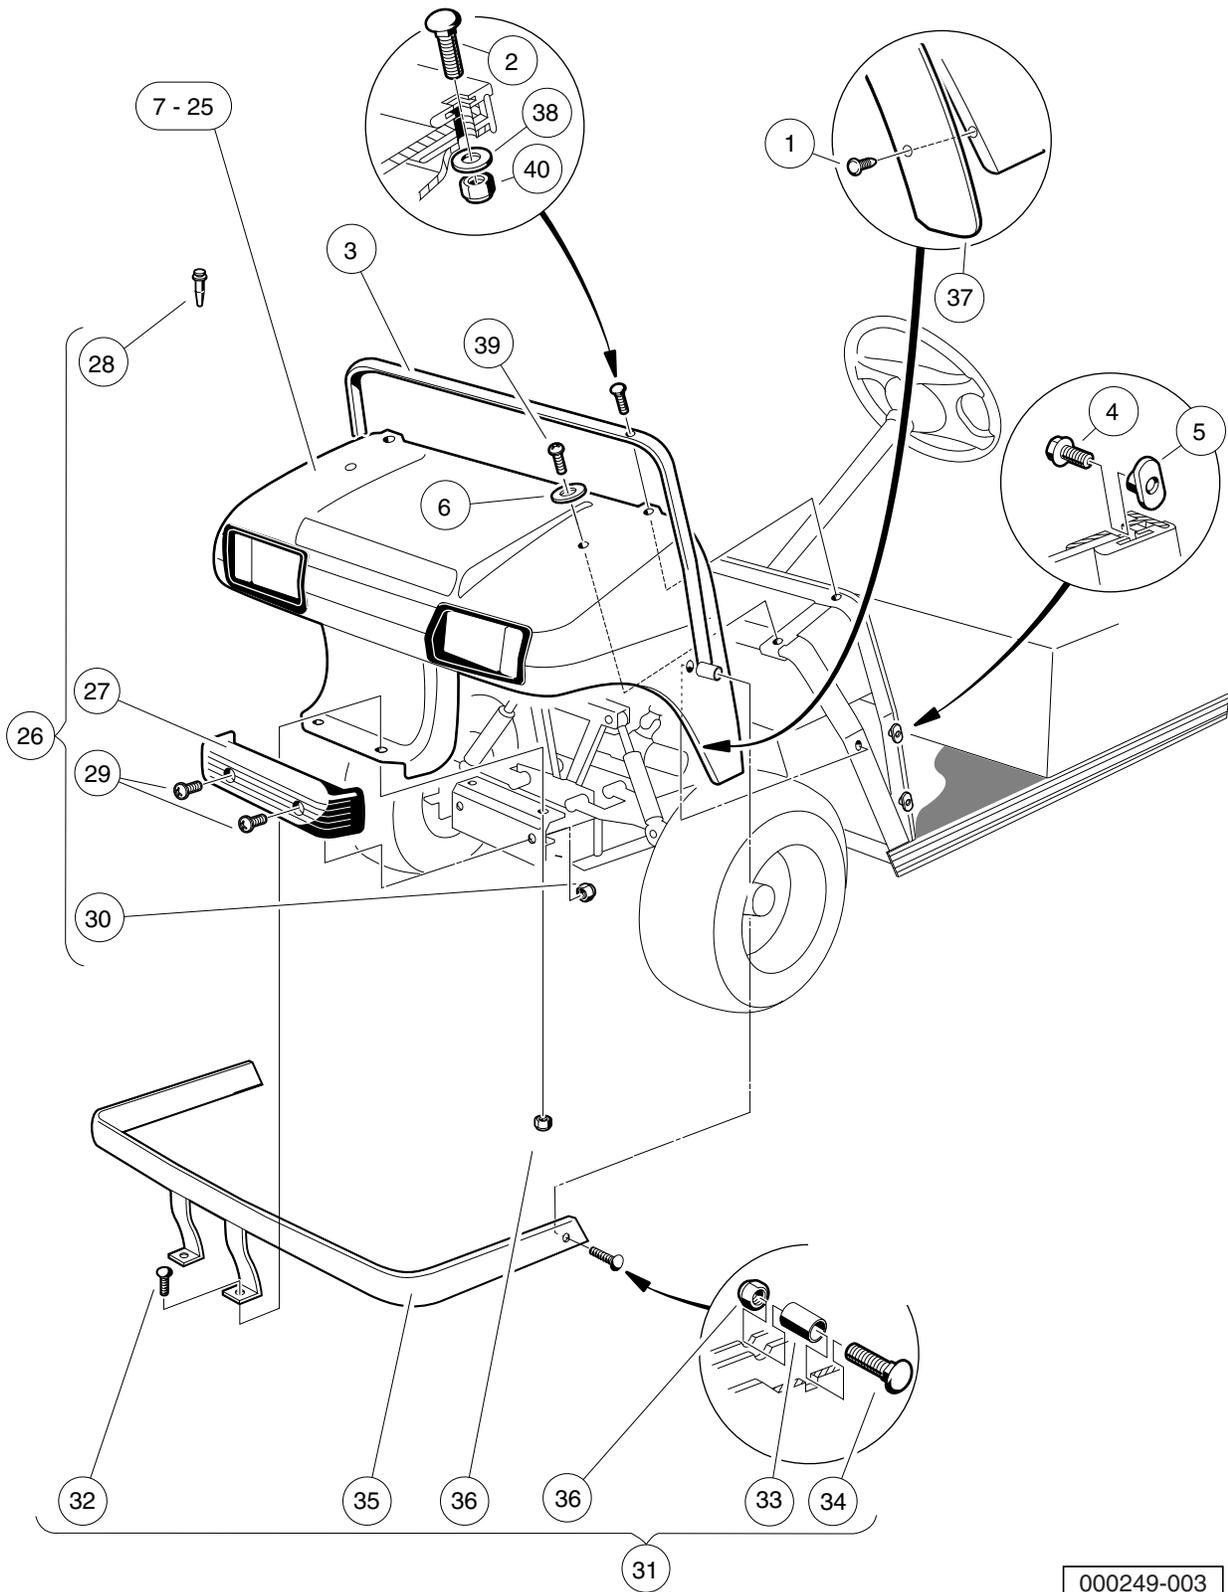


000249-003

FRONT BODY AND TRIM – TURF/CARRYALL 2, CARRYALL 2 PLUS, AND CARRYALL 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010434</u>	Barrel - Plastic	12
2	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	2
3	<u>1011014</u>	Trim, Cowl	1
4	<u>1011017</u>	Screw, #8-32 X 0.375	6
5	<u>1011394</u>	T-Nut Package (Set of 4)	1
6	<u>1015075</u>	Washer, 5/16 Flat Type A	2
7	<u>101692501</u>	Cowl, TPO, Beige	1
8	<u>101692502</u>	Cowl, TPO, White	1
9	<u>101692506</u>	Cowl, TPO, Red	1
10	<u>101692509</u>	Cowl, TPO, Pacific Blue (Royal Blue)	1
11	<u>101692510</u>	Cowl, TPO, Dark Green	1
12	<u>101692511</u>	Cowl, TPO, Black	1
13	<u>101692512</u>	Cowl, TPO, Classic Blue (Navy)	1
14	<u>101692513</u>	Cowl, TPO, Burgundy	1
15	<u>101692514</u>	Cowl, TPO, Dark Gray	1
16	<u>101692515</u>	Cowl, TPO, Safety Yellow	1
17	<u>101693901</u>	Cowl with Headlight Opening, TPO, Beige	1
18	<u>101693902</u>	Cowl with Headlight Opening, TPO, White	1
19	<u>101693906</u>	Cowl with Headlight Opening, TPO, Red	1
20	<u>101693909</u>	Cowl with Headlight Opening, TPO, Dark Green	1
21	<u>101693910</u>	Cowl with Headlight Opening, TPO, Black	1
22	<u>101693911</u>	Cowl with Headlight Opening, TPO, Classic Blue (Navy)	1
23	<u>101693912</u>	Cowl with Headlight Opening, TPO, Burgundy	1
24	<u>101693913</u>	Cowl with Headlight Opening, TPO, Dark Gray	1
25	<u>101693914</u>	Cowl with Headlight Opening, TPO, Safety Yellow	1
26	<u>1017080</u>	Kit, Front Bumper (includes items 27 through 30)	1
27	<u>1016868</u>	Front Bumper	1
28	<u>1016967</u>	Blind Rivet, Push Type	2
29	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2
30	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
31	<u>101734802</u>	Kit, Heavy-Duty Bumper (includes items 32 through 36)	1
32	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	2
33	<u>1010546</u>	Spacer	2
34	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	2
35	N/A	Weldment, Heavy Duty Bumper	1
36	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4
37	<u>101870401</u>	Fender Extrusion	2
38	<u>1241</u>	Washer, 5/16 Type A Flat	2
39	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2
40	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2

1
G
E

1
G
E

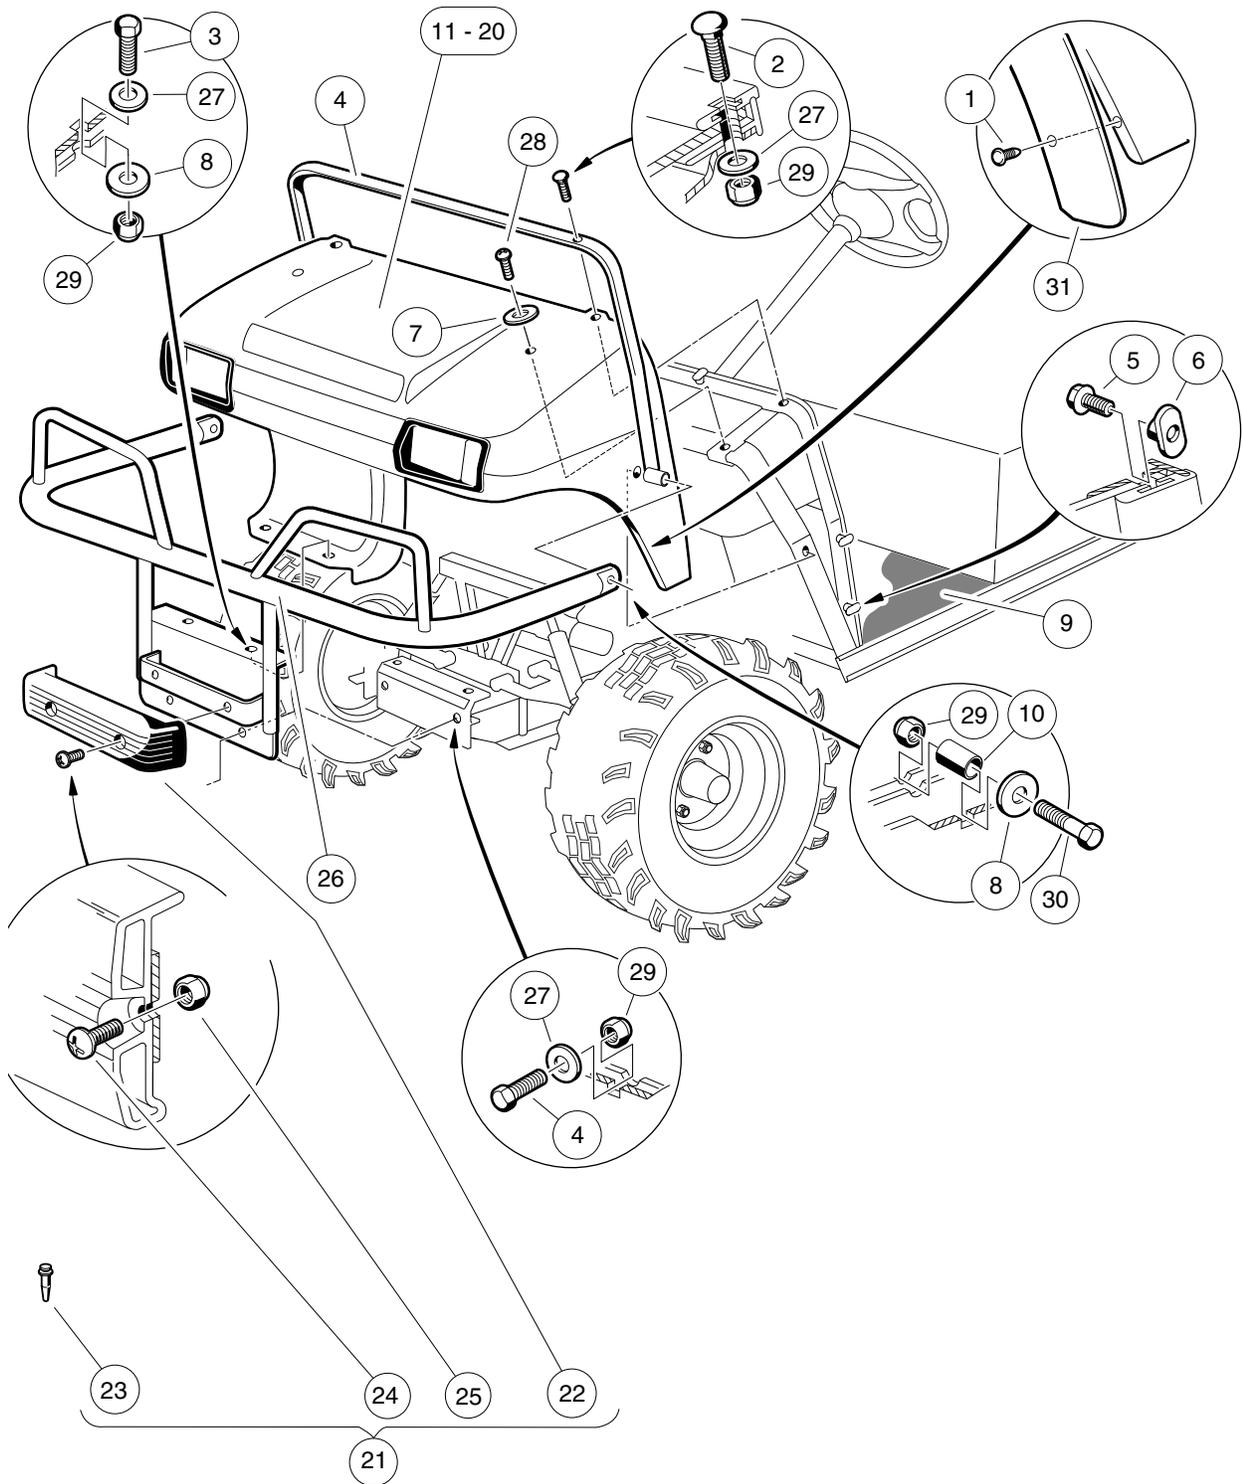


000249-004

FRONT BODY AND TRIM – TURF/CARRYALL 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010434</u>	Barrel - Plastic	12
2	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	2
3	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	4
4	<u>1011014</u>	Trim, Cowl	1
5	<u>1011017</u>	Screw, #8-32 X 0.375	6
6	<u>1011394</u>	T-Nut Package (Set of 4)	1
7	<u>1011578</u>	Washer, 5/16 Type B Flat	4
8	<u>101503202</u>	Floormat	1
9	<u>1015075</u>	Washer, 5/16 Flat Type A	2
10	<u>1015608</u>	Tube Spacer, Hydraulic Cylinder	2
11	<u>101693901</u>	Cowl with Headlight Opening, TPO, Beige	1
12	<u>101693902</u>	Cowl with Headlight Opening, TPO, White	1
13	<u>101693906</u>	Cowl with Headlight Opening, TPO, Red	1
14	<u>101693908</u>	Cowl with Headlight Opening, TPO, Pacific Blue (Royal Blue)	1
15	<u>101693909</u>	Cowl with Headlight Opening, TPO, Dark Green	1
16	<u>101693910</u>	Cowl with Headlight Opening, TPO, Black	1
17	<u>101693911</u>	Cowl with Headlight Opening, TPO, Classic Blue (Navy)	1
18	<u>101693912</u>	Cowl with Headlight Opening, TPO, Burgundy	1
19	<u>101693913</u>	Cowl with Headlight Opening, TPO, Dark Gray	1
20	<u>101693914</u>	Cowl with Headlight Opening, TPO, Safety Yellow	1
21	<u>1017080</u>	Kit, Front Bumper (includes items 22 through 25)	1
22	<u>1016868</u>	Front Bumper	1
23	<u>1016967</u>	Blind Rivet, Push Type	2
24	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2
25	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
26	<u>102004301</u>	Brush Guard	1
27	<u>1241</u>	Washer, 5/16 Type A Flat	6
28	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2
29	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	8
30	<u>8935</u>	Screw, 5/16-18 X 2.25 Hex-Head Cap	2
31	<u>AM10808</u>	Front Fender Extrusion - Lynx	2

1
G
E

1
G
E

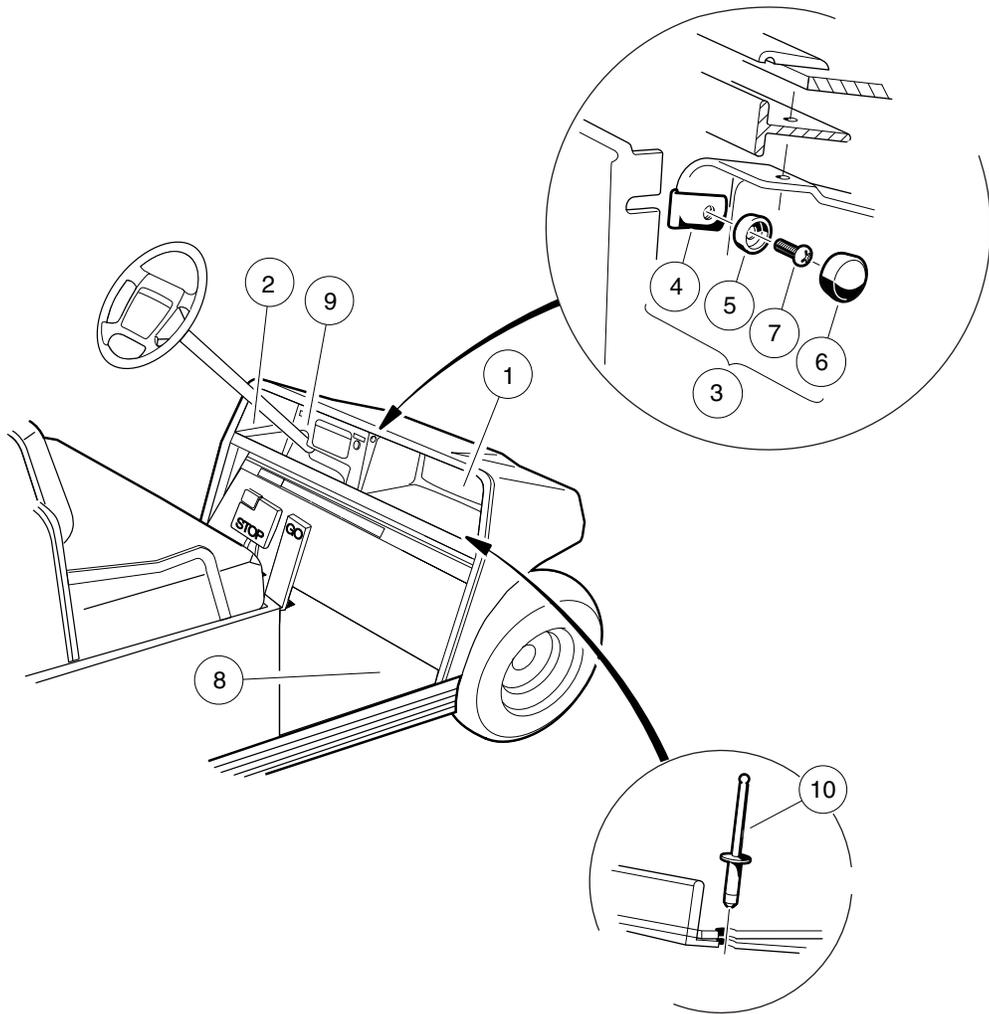


000252-001

DASH COMPONENTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013343</u>	Dash Component, Passenger-Side, Black	1
2	1013344	Dash Component, Driver-Side	1
3	<u>1014645</u>	Snap Washer Kit, Black (includes items 4 through 7)	2
4	<u>1011019</u>	Nut, Speed	1
5	1011382	Washer, #10 Pan-Head Screw	1
6	<u>1013494</u>	Cover, Screw Head	1
7	1620	Screw, #10-16 X 0.75 Pan-Head Tap	1
8	<u>101503202</u>	Floormat	1
9	101660404	Dash Panel, Black Center	1
10	<u>7973</u>	Rivet, 3/16 X .400 Blind	5

1
G
E

1
G
E

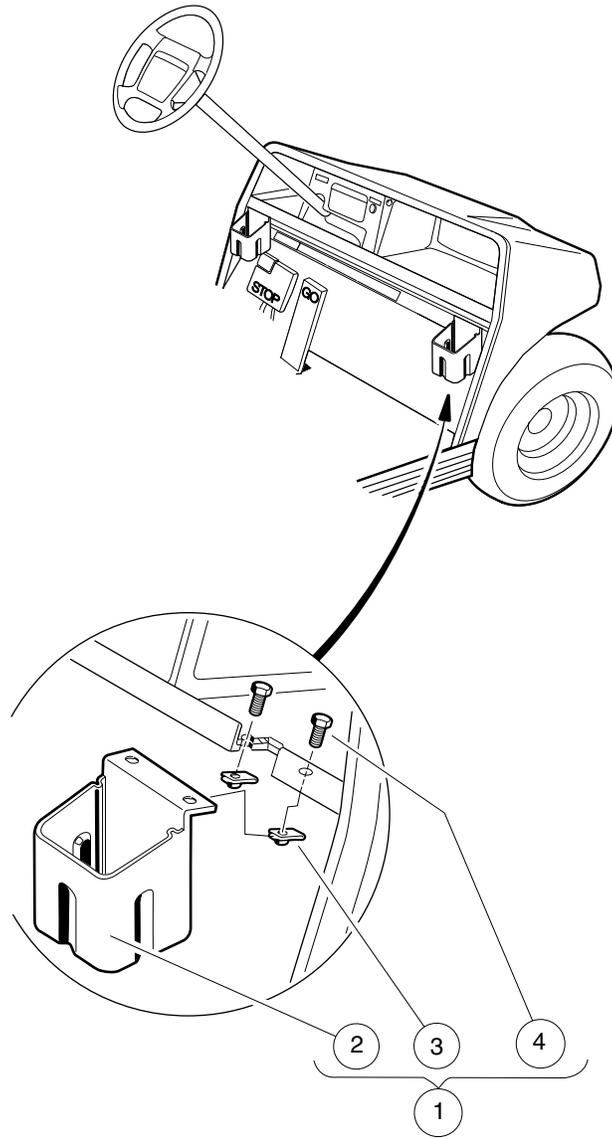





000253-001

BEVERAGE HOLDER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1013422	Cup Holder Kit (includes items 2 through 4)	2
2	1013420	Holder, Single Cup	1
3	1016952	U-Nut, 1/4-20	2
4	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2

1
G
E

1
G
E

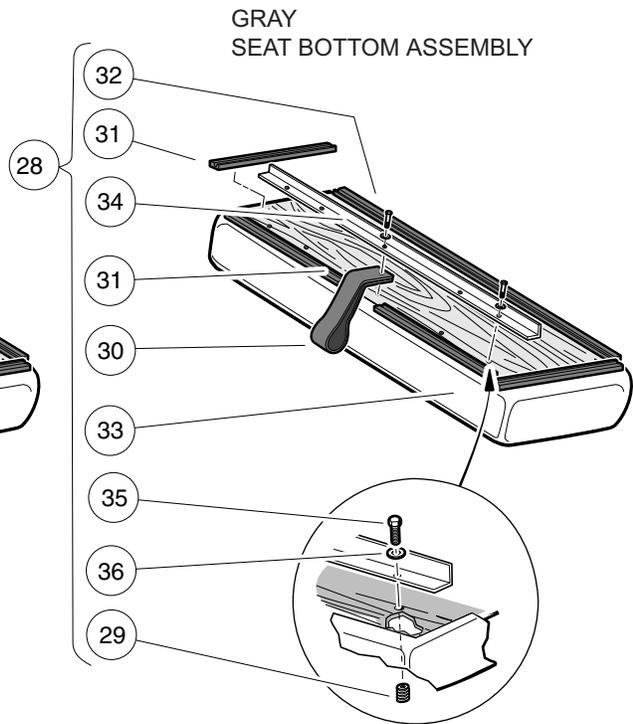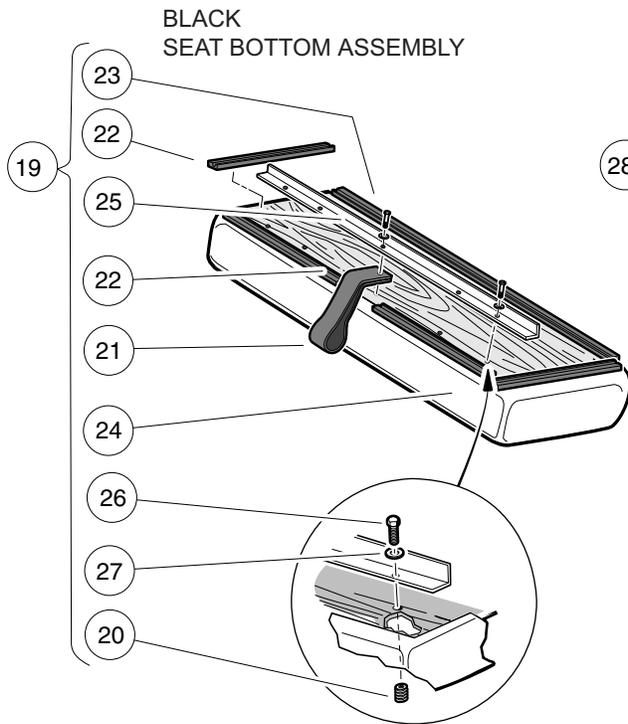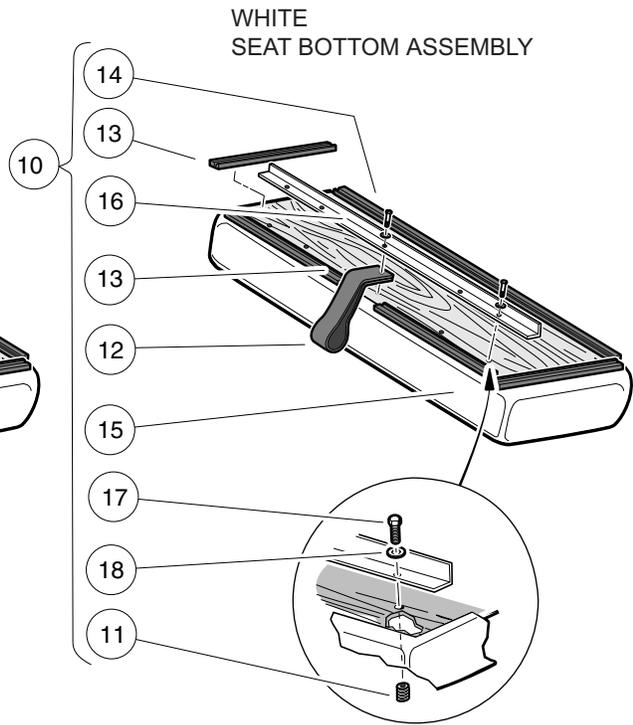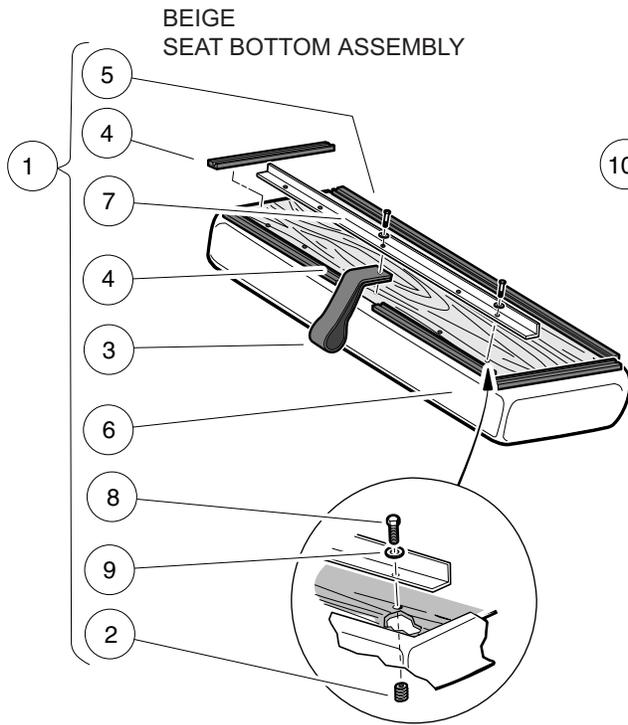


000254-001

SEAT BOTTOM

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101564501</u>	Seat Bottom Assembly, Beige (includes items 2 through 9)	1
2	1010543	Insert - Wood	5
3	<u>1013309</u>	Strap, Utility Seat	1
4	<u>1013311</u>	Bumper, Seat, Short	4
5	<u>1013312</u>	Bumper, Seat, Long	1
6	<u>101562711</u>	Vinyl Cover, Seat Bottom, Buff	1
7	<u>101894303</u>	Stiffener	1
8	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	5
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	5
10	<u>101564502</u>	Seat Bottom Assembly, White (includes items 11 through 18)	1
11	1010543	Insert - Wood	5
12	<u>1013309</u>	Strap, Utility Seat	1
13	<u>1013311</u>	Bumper, Seat, Short	4
14	<u>1013312</u>	Bumper, Seat, Long	1
15	<u>101562712</u>	Vinyl Cover, Seat Bottom, White	1
16	<u>101894303</u>	Stiffener	1
17	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	5
18	<u>332</u>	Washer, 1/4 Type A Narrow Flat	5
19	<u>101564503</u>	Seat Bottom Assembly, Black (includes items 20 through 27)	1
20	1010543	Insert - Wood	5
21	<u>1013309</u>	Strap, Utility Seat	1
22	<u>1013311</u>	Bumper, Seat, Short	4
23	<u>1013312</u>	Bumper, Seat, Long	1
24	<u>101562714</u>	Vinyl Cover, Seat Bottom, Black	1
25	<u>101894303</u>	Stiffener	1
26	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	5
27	<u>332</u>	Washer, 1/4 Type A Narrow Flat	5
28	<u>101564505</u>	Seat Bottom Assembly, Gray (includes items 29 through 36)	1
29	1010543	Insert - Wood	5
30	<u>1013309</u>	Strap, Utility Seat	1
31	<u>1013311</u>	Bumper, Seat, Short	4
32	<u>1013312</u>	Bumper, Seat, Long	1
33	<u>101562715</u>	Vinyl Cover, Seat Bottom, Gray	2
34	<u>101894303</u>	Stiffener	1
35	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	5
36	<u>332</u>	Washer, 1/4 Type A Narrow Flat	5

1
G
E

1
G
E

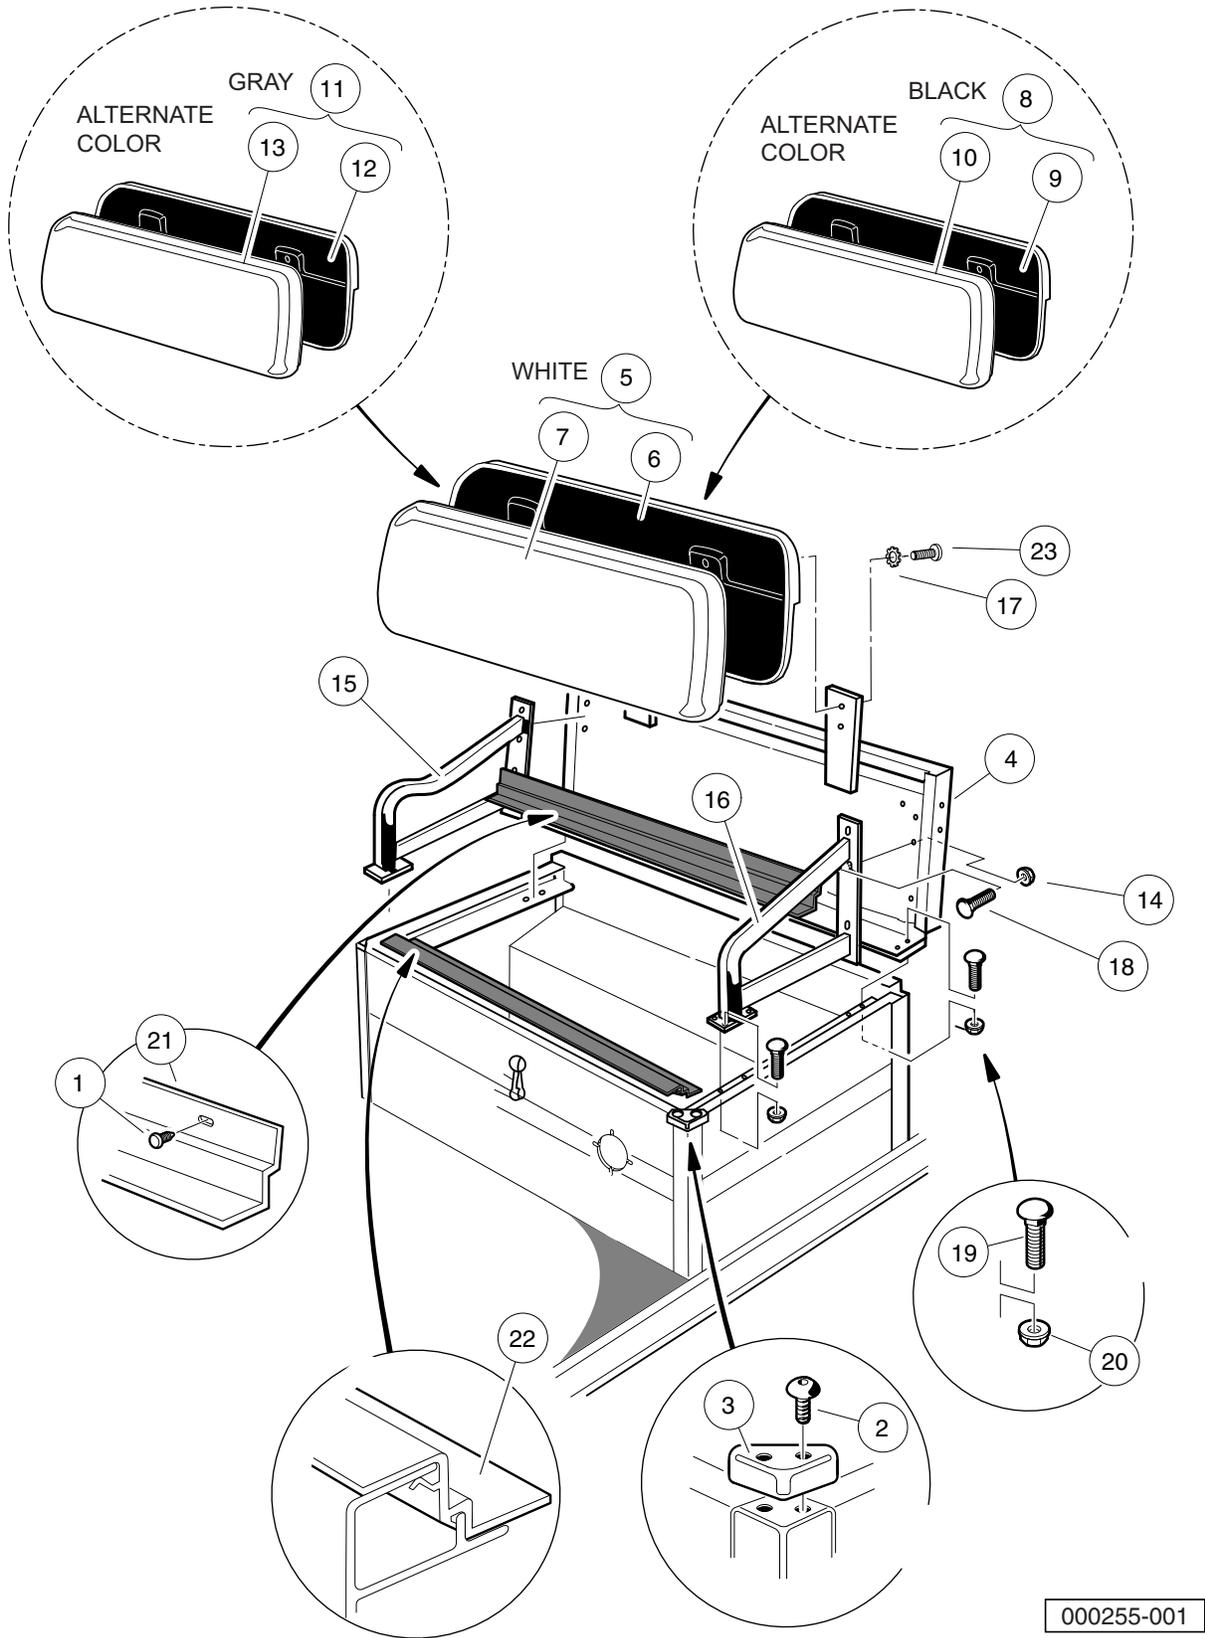


000255-001

SEAT BACK AND SUPPORT STRUCTURE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010434</u>	Barrel - Plastic	5
2	<u>1014321</u>	Screw, #10 Truss-Head Torx	4
3	<u>1014387</u>	Cap, Corner	2
4	1016723	Seat Support Panel Assembly	1
5	<u>101677701</u>	Seat Back Assembly, White (includes items 6 and 7)	1
6	1016751	Cap, Seat Back	1
7	<u>101675512</u>	Vinyl Seat Back, White	1
8	<u>101677702</u>	Seat Back Assembly, Black (includes items 9 and 10)	1
9	1016751	Cap, Seat Back	1
10	<u>101675514</u>	Vinyl Seat Back, Black	1
11	<u>101677705</u>	Seat Back Assembly, Gray (includes items 12 and 13)	1
12	1016751	Cap, Seat Back	1
13	<u>101675515</u>	Vinyl Seat Back-nstd Svc	1
14	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	10
15	<u>101888501</u>	Armrest Weldment, Passenger-Side	1
16	101888502	Armrest Weldment, Driver-Side	1
17	<u>101946201</u>	Washer, Lock, 0.250 External-Tooth	4
18	<u>101958601</u>	Carriage Bolt, 1/4-20 X 0.75	10
19	<u>101963301</u>	Bolt, 5/16-18 X 0.75 Round-Head	4
20	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4
21	<u>101963901</u>	Trim, Seat Bottom Rear	1
22	<u>101964001</u>	Trim, Seat Bottom Front	1
23	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	4
<p>Note: Sub-components contained in items 8 and 11 are the same as those shown for item 5, except for the vinyl seat covers.</p>			

1
G
E

1
G
E

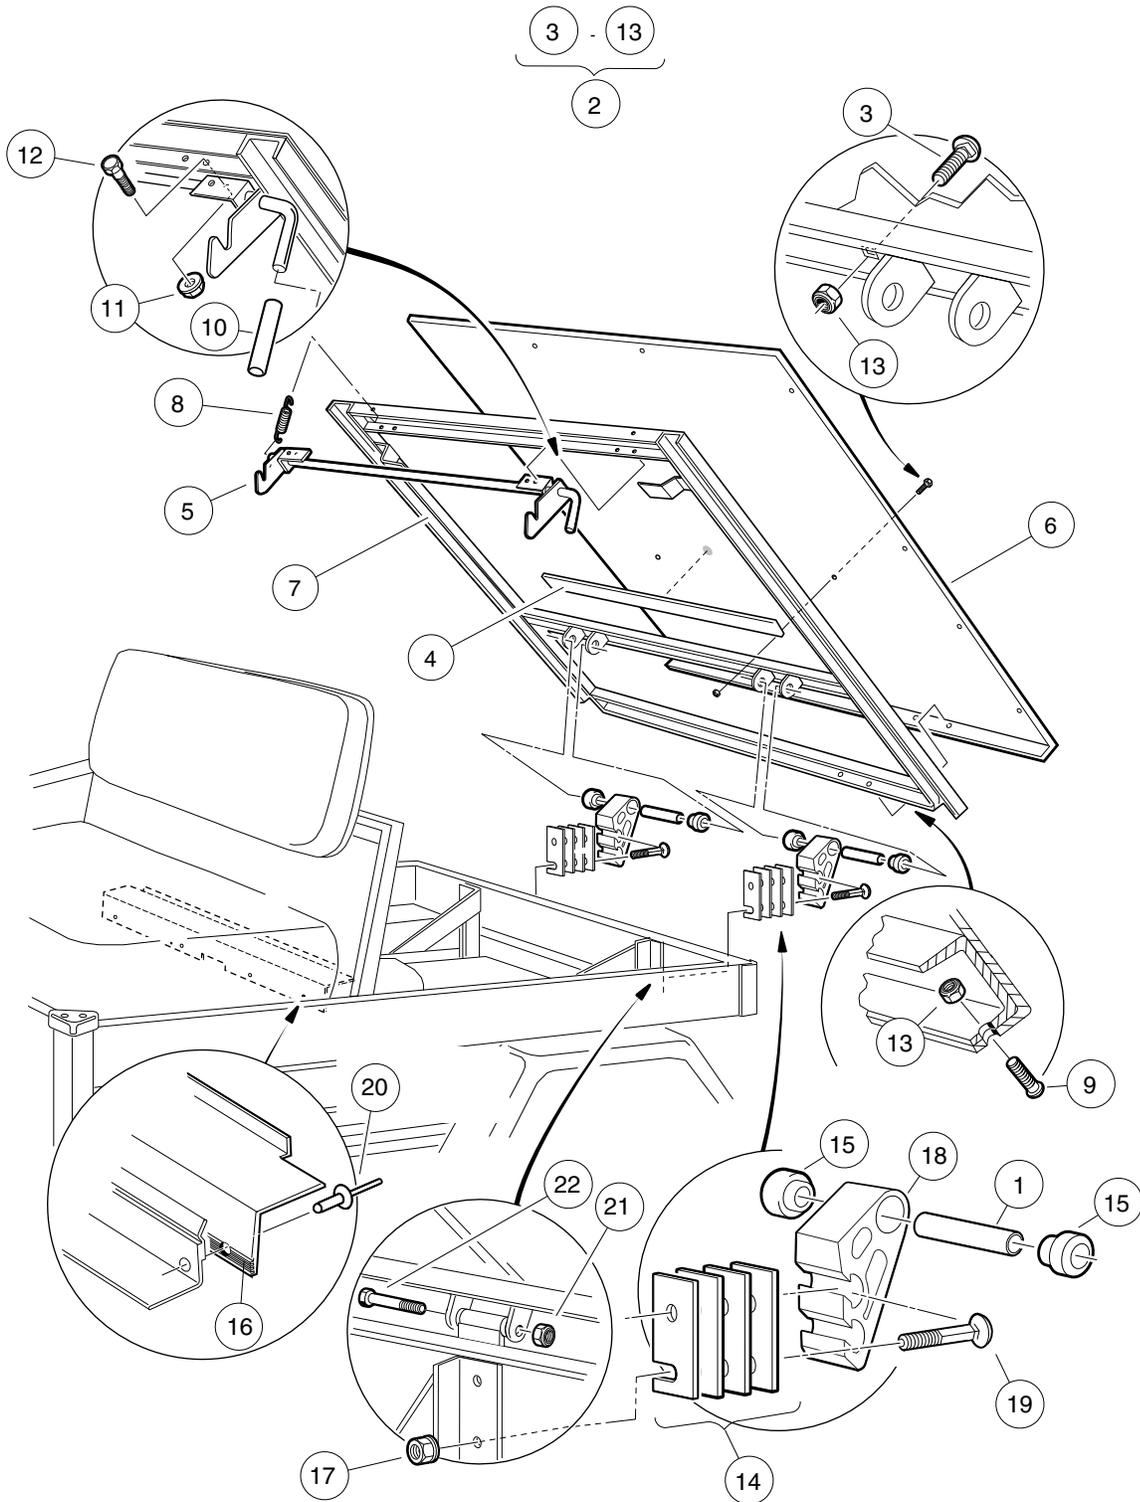


000256-002

TILT BED, HINGE, AND LATCH – TURF/CARRYALL 1

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012303</u>	Bushing, Steel	2
2	1015427	Tilt Bed, Carryall 1 (includes items 3 through 13)	1
3	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	2
4	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4" *	1
5	1015252	Latch Weld Assembly	1
6	N/A	Plate, Floor, Carryall 1 Flat bed	1
7	N/A	Frame Assembly, Tilt Bed	1
8	N/A	Extension, Spring Latch	2
9	1015399	Screw, 5/16-18 X 0.88 Torx Truss-Head	4
10	<u>1015400</u>	Grip, Tilt Latch Hand	1
11	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	4
12	<u>403</u>	Screw, 1/4-20 X 0.625 Hex-Head Cap	4
13	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	6
14	<u>1015507</u>	Shim, Tilt Bed Pivot	1
15	<u>1015583</u>	Bushing, Urethane	4
16	<u>1017976</u>	Bed Seal	1
17	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4
18	<u>103538701</u>	Extra, Bracket, Hinge, Bed	2
19	<u>103538901</u>	3/8-16 X 3.5 Carr Blt Gr5 Zn	4
20	7532	Rivet, 3/16 X 0.3125, Pop	4
21	<u>8754</u>	Locknut, 3/8-16 Hex	2
22	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2
		* Note: Item not shown.	

1
G
E

1
G
E

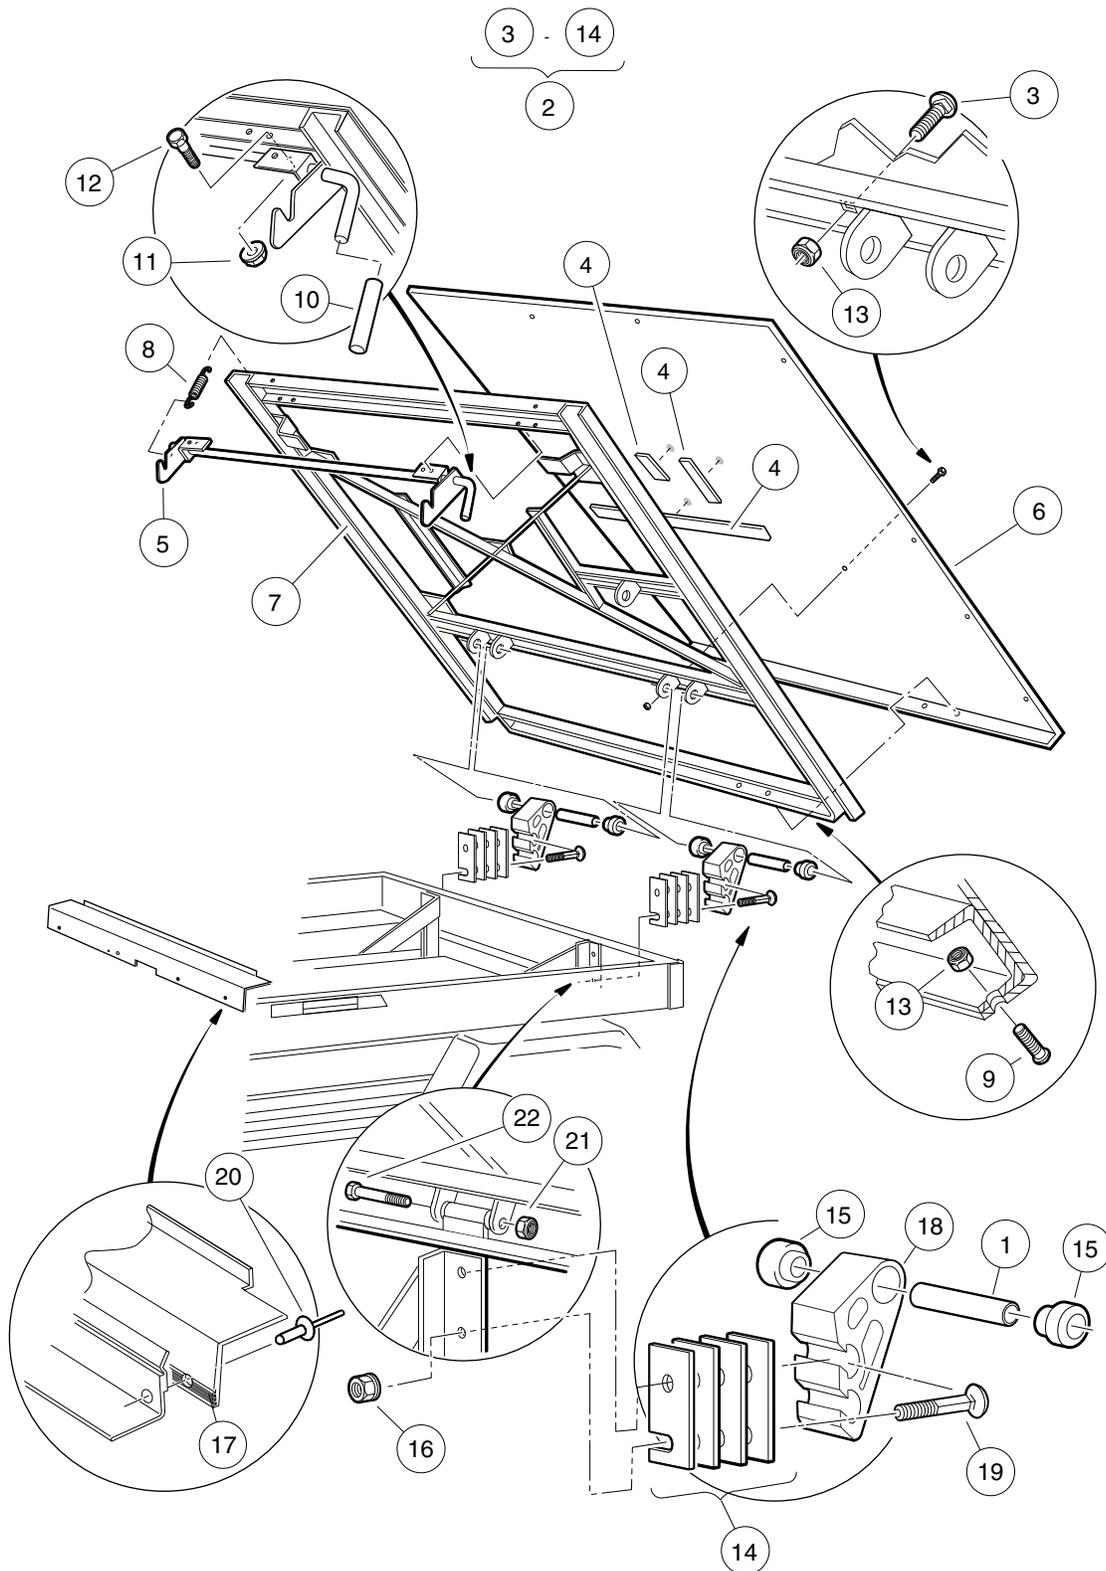


000257-003

TILT BED, HINGE, AND LATCH – TURF/ CARRYALL 2, 252, AND CARRYALL 2 PLUS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012303</u>	Bushing, Steel	2
2	<u>101542901</u>	Assembly, Tilt Bed (includes items 3 through 13)	1
3	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	4
4	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4" *	1
5	<u>1015252</u>	Latch Weld Assembly	1
6	<u>1015258</u>	Plate, Floor Bed	1
7	N/A	Frame Assembly	1
8	N/A	Extension, Spring Latch	2
9	<u>1015399</u>	Screw, 5/16-18 X 0.88 Torx Truss-Head	4
10	<u>1015400</u>	Grip, Tilt Latch Hand	1
11	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	4
12	<u>403</u>	Screw, 1/4-20 X 0.625 Hex-Head Cap	4
13	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	8
14	<u>1015507</u>	Shim, Tilt Bed Pivot	1
15	<u>1015583</u>	Bushing, Urethane	4
16	<u>1017976</u>	Bed Seal	1
17	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4
18	<u>103538701</u>	Extra, Bracket, Hinge, Bed	2
19	<u>103538901</u>	3/8-16 X 3.5 Carr Blt Gr5 Zn	4
20	<u>7532</u>	Rivet, 3/16 X 0.3125, Pop	1
21	<u>8754</u>	Locknut, 3/8-16 Hex	2
22	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2
		 * Note: Item not shown.	

1
G
E

1
G
E

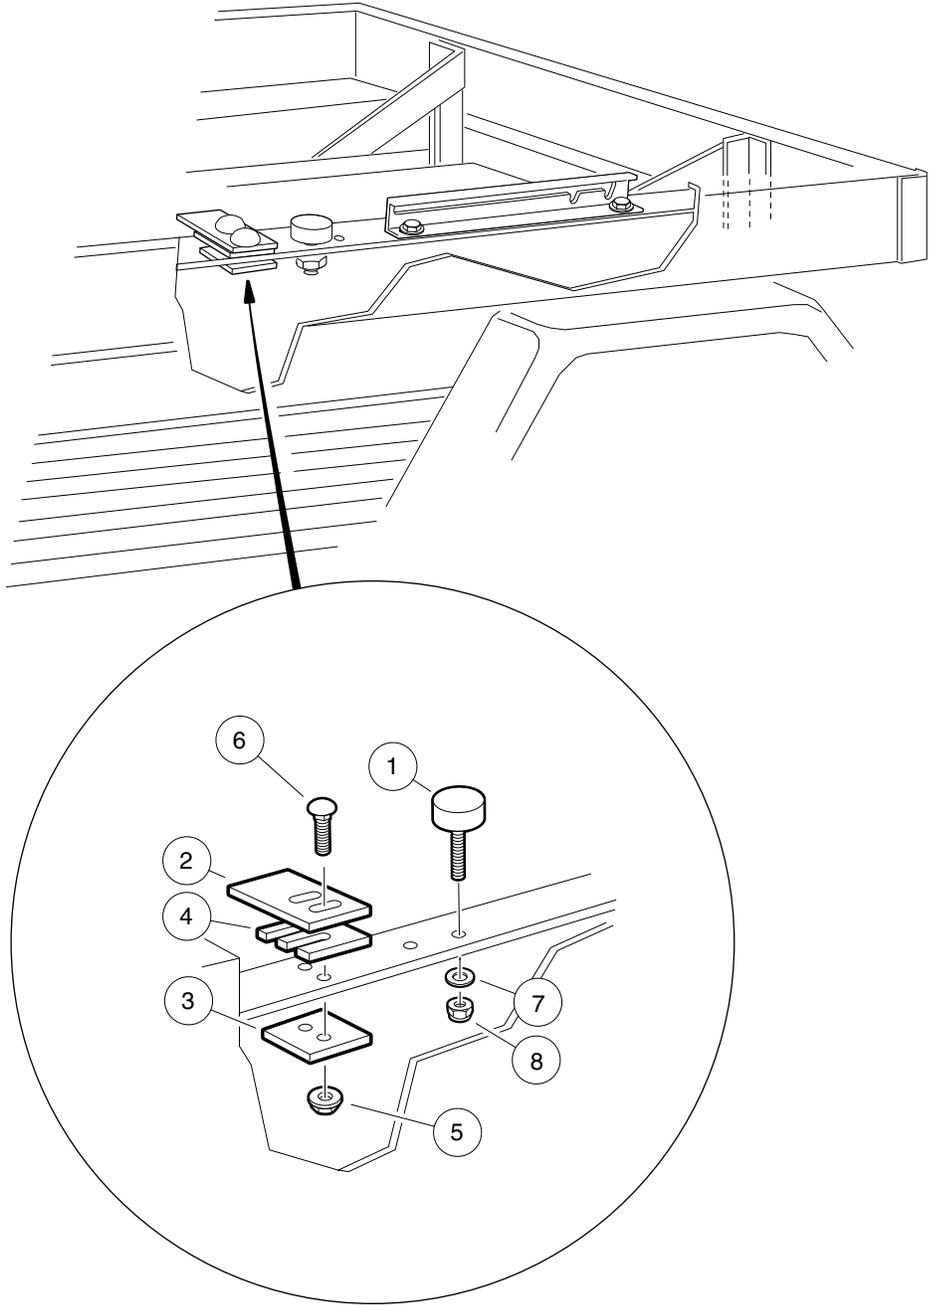


000258-002

LATCH PLATE – TURF/CARRYALL 1, 2, 252, AND CARRYALL 2 PLUS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010878</u>	Bumper, Rubber	2
2	<u>1015277</u>	Latch Plate, Tilt Bed	2
3	<u>1016060</u>	Plate, Latch Support	2
4	<u>1016078</u>	Latch Plate Shim	1
5	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	4
6	<u>101958601</u>	Carriage Bolt, 1/4-20 X 0.75	4
7	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4
8	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4

1
G
E

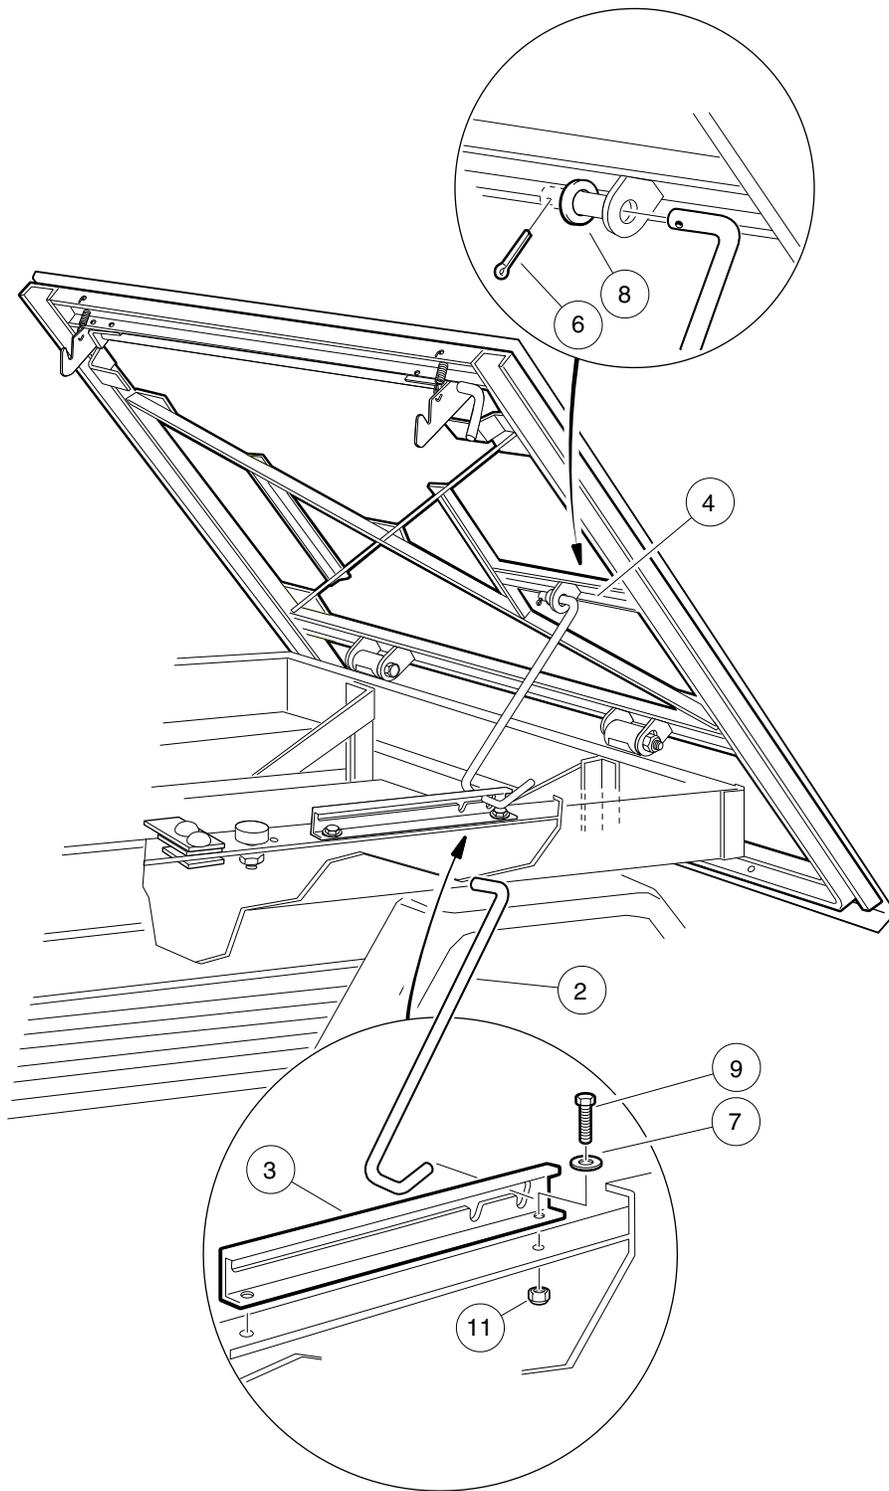


000259-002

PROP ROD – TURF/CARRYALL 2, 252, AND CARRYALL 2 PLUS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101922801</u>	Prop Rod Support Instl Kit (includes items 2 through 11)	1
2	1015348	Prop Rod Ca li	1
3	1015700	Track Prop Rod Ca li	1
4	N/A	Support Assy, Prop Rod	1
5	10192281	Instruction	1
6	<u>1035</u>	Cotter Pin, 3/32 x 1	2
7	<u>332</u>	Washer, 1/4 Type A Narrow Flat	5
8	<u>334</u>	Washer, 3/8 Type A Flat	1
9	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	6
10	<u>808</u>	Washer, 3/8 Type B Flat	1
11	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	6

1
G
E

1
G
E

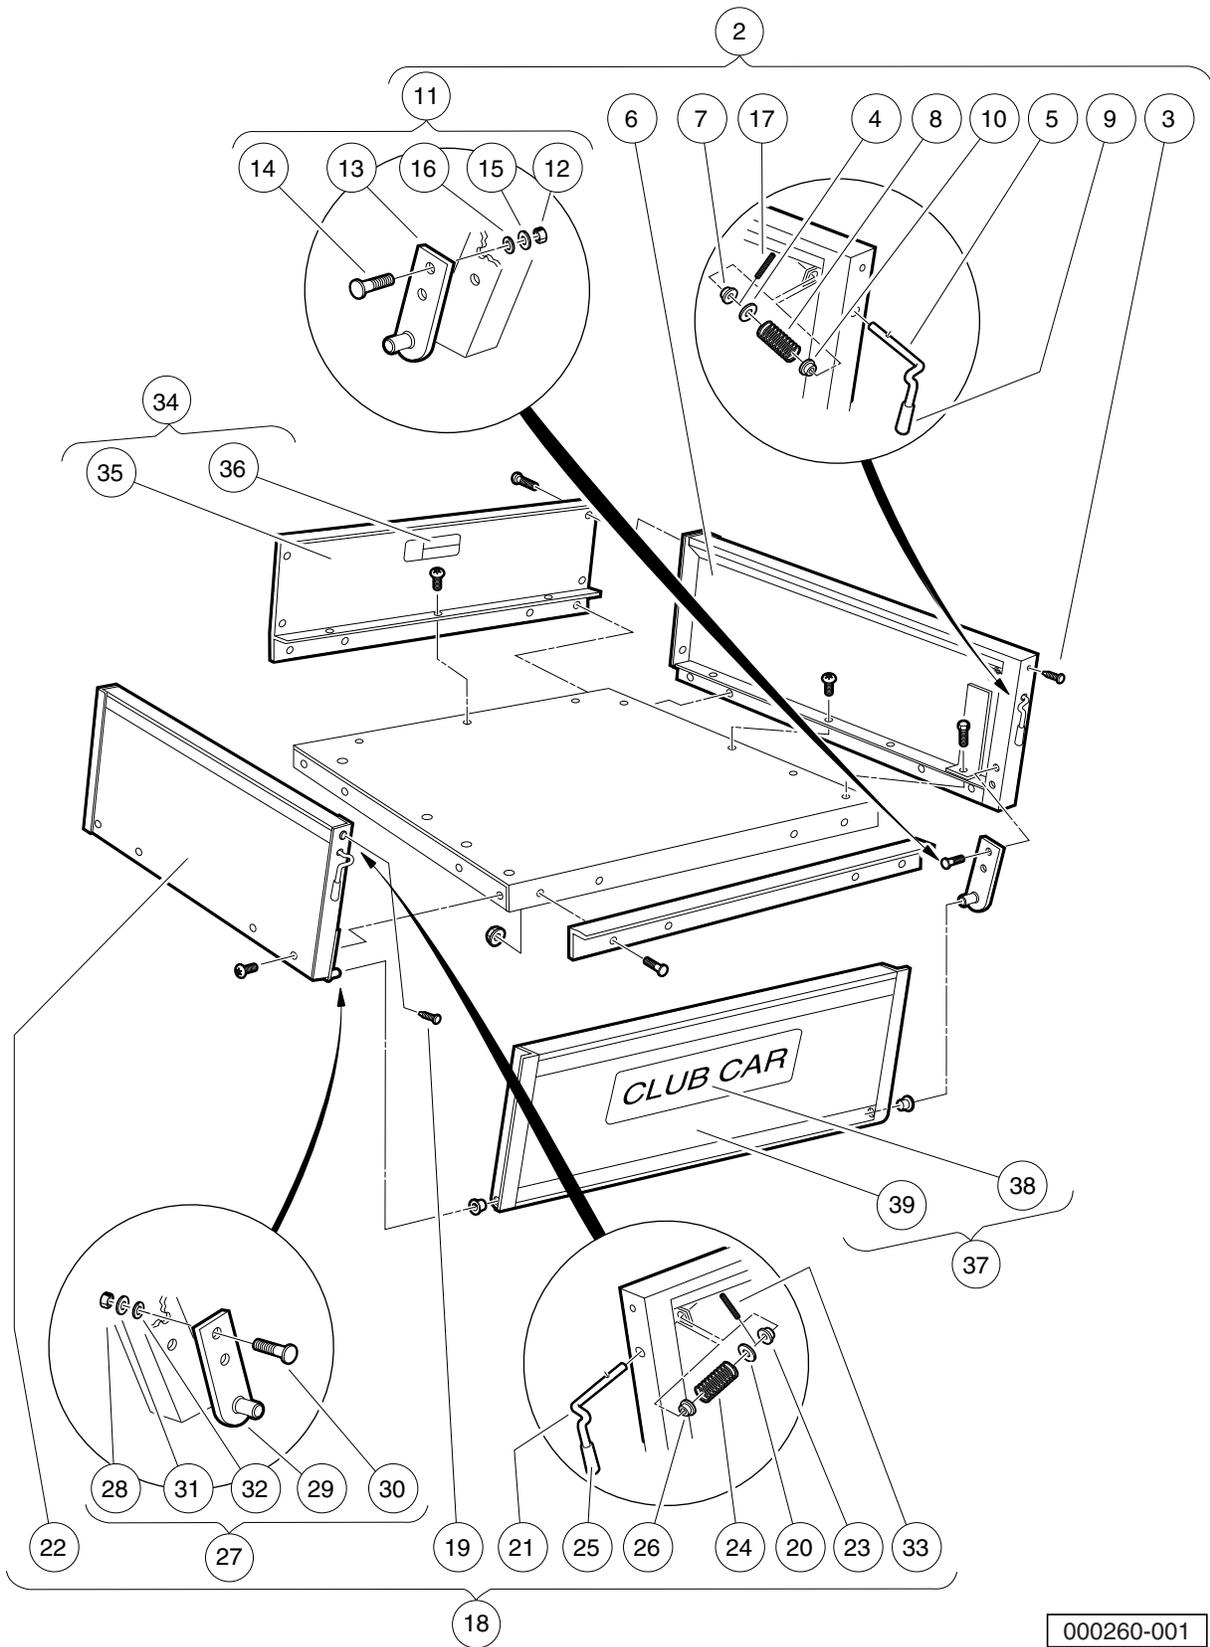


000260-001

CARGO BOX – TURF/CARRYALL 1

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015606</u>	Kit, Cargo Box (includes items 2 through 37)	1
2	<u>1015365</u>	Side Panel Assembly, Right-Hand (includes items 3 through 17)	1
3	<u>1010434</u>	Barrel - Plastic	1
4	<u>1011990</u>	Washer, 3/8 Flat	1
5	<u>1015245</u>	Latch, Tailgate, Right-Hand	1
6	N/A	Side-Panel Weldment, Right-Hand	1
7	<u>1015363</u>	Bushing, Snap-In	1
8	<u>1015390</u>	Compression Spring Latch Tilt	1
9	<u>1015400</u>	Grip, Tilt Latch Hand	1
10	<u>1032</u>	Bushing, Nylon	1
11	<u>103406502</u>	Kit, Tlgt Mtg Brkt, Ca Rh (includes items 12 through 16)	1
12	<u>1028</u>	Nut, 1/4-20 Hex	2
13	N/A	Asm, Tlgt, Mtg Brkt, Ca Rh	1
14	<u>103406601</u>	Stud, 1/4 Self-clnchg Flush	2
15	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
16	<u>451</u>	Lockwasher, 1/4 Split	2
17	1231	Pin, 1/8 X 1.00 Split Roll	1
18	<u>1015367</u>	Side Panel Assembly, Left-Hand (includes items 19 through 33)	1
19	<u>1010434</u>	Barrel - Plastic	1
20	<u>1011990</u>	Washer, 3/8 Flat	1
21	<u>1015313</u>	Latch, Tailgate, Left-Hand	1
22	N/A	Side-Panel Weldment	1
23	<u>1015363</u>	Bushing, Snap-In	1
24	<u>1015390</u>	Compression Spring Latch Tilt	1
25	<u>1015400</u>	Grip, Tilt Latch Hand	1
26	<u>1032</u>	Bushing, Nylon	1
27	<u>103406501</u>	Kit, Tlgt Mtg Brkt, Ca Lh (includes items 28 through 32)	1
28	<u>1028</u>	Nut, 1/4-20 Hex	2
29	N/A	Asm, Tlgt, Mtg Brkt, Ca Lh	1
30	<u>103406601</u>	Stud, 1/4 Self-clnchg Flush	2
31	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
32	<u>451</u>	Lockwasher, 1/4 Split	2
33	1231	Pin, 1/8 X 1.00 Split Roll	1
34	<u>1015413</u>	Assembly, Front Panel (includes items 35 and 36)	1
35	N/A	Front Panel Box	1
36	<u>101553901</u>	Decal, Bed Load Warning	1
37	1015414	Assembly, Tailgate (includes items 38 and 39)	1
38	<u>1013317</u>	Decal, Logo, Tailgate	1
39	N/A	Tailgate Weldment	1
		Note: Additional components in kit <u>1015606</u> are shown on the following two pages.	

1
G
E

1
G
E

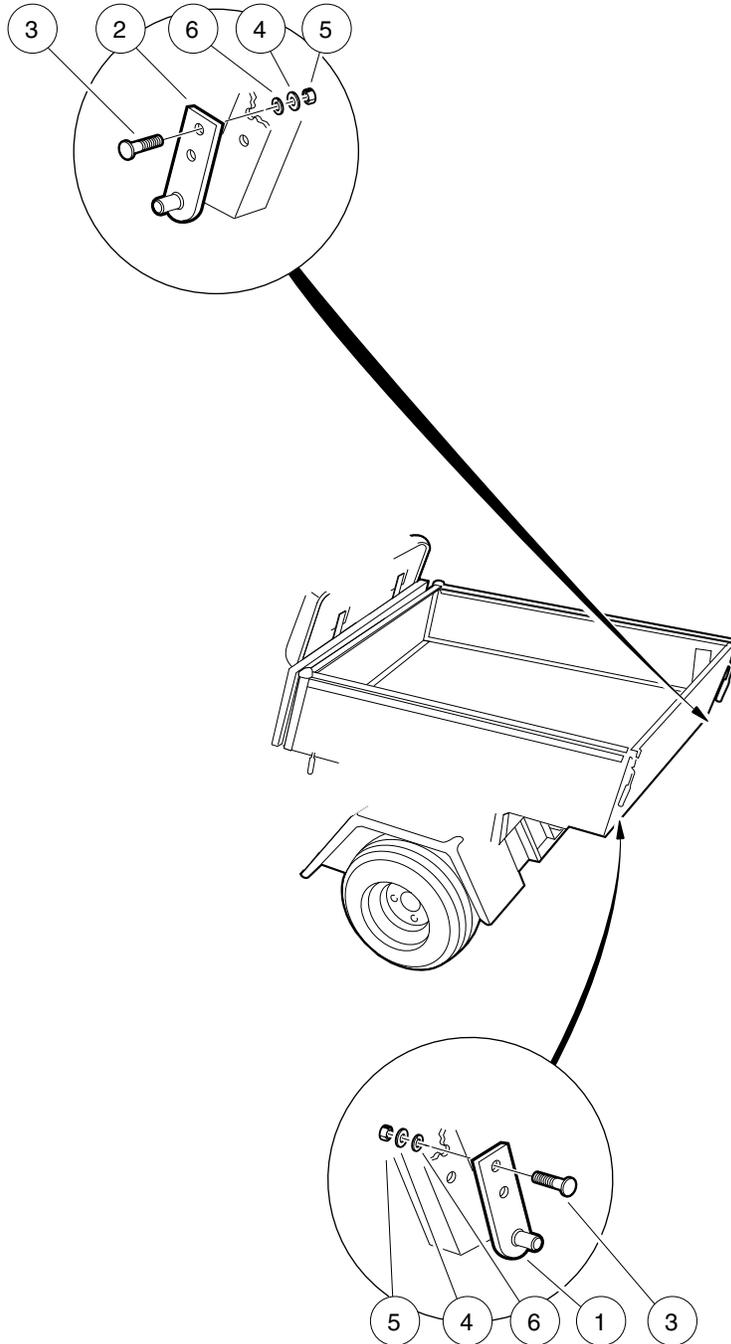


000797-001

TAILGATE BRACKET (EARLIER STYLE)

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014513</u>	Tailgate Mounting Bracket, Left-Hand	1
2	<u>1014514</u>	Tailgate Mounting Bracket, Right-Hand	1
3	<u>1014537</u>	Stud, Self-Clinching Flush Head	4
4	<u>1241</u>	Washer, 5/16 Type A Flat	4
5	<u>1242</u>	Nut, 5/16-18 Hex	4
6	<u>7174</u>	Lockwasher, 5/16 Split	4
		<p>Note: Additional components in kit 1015606 are shown on the following two pages.</p>	

1
G
E

1
G
E

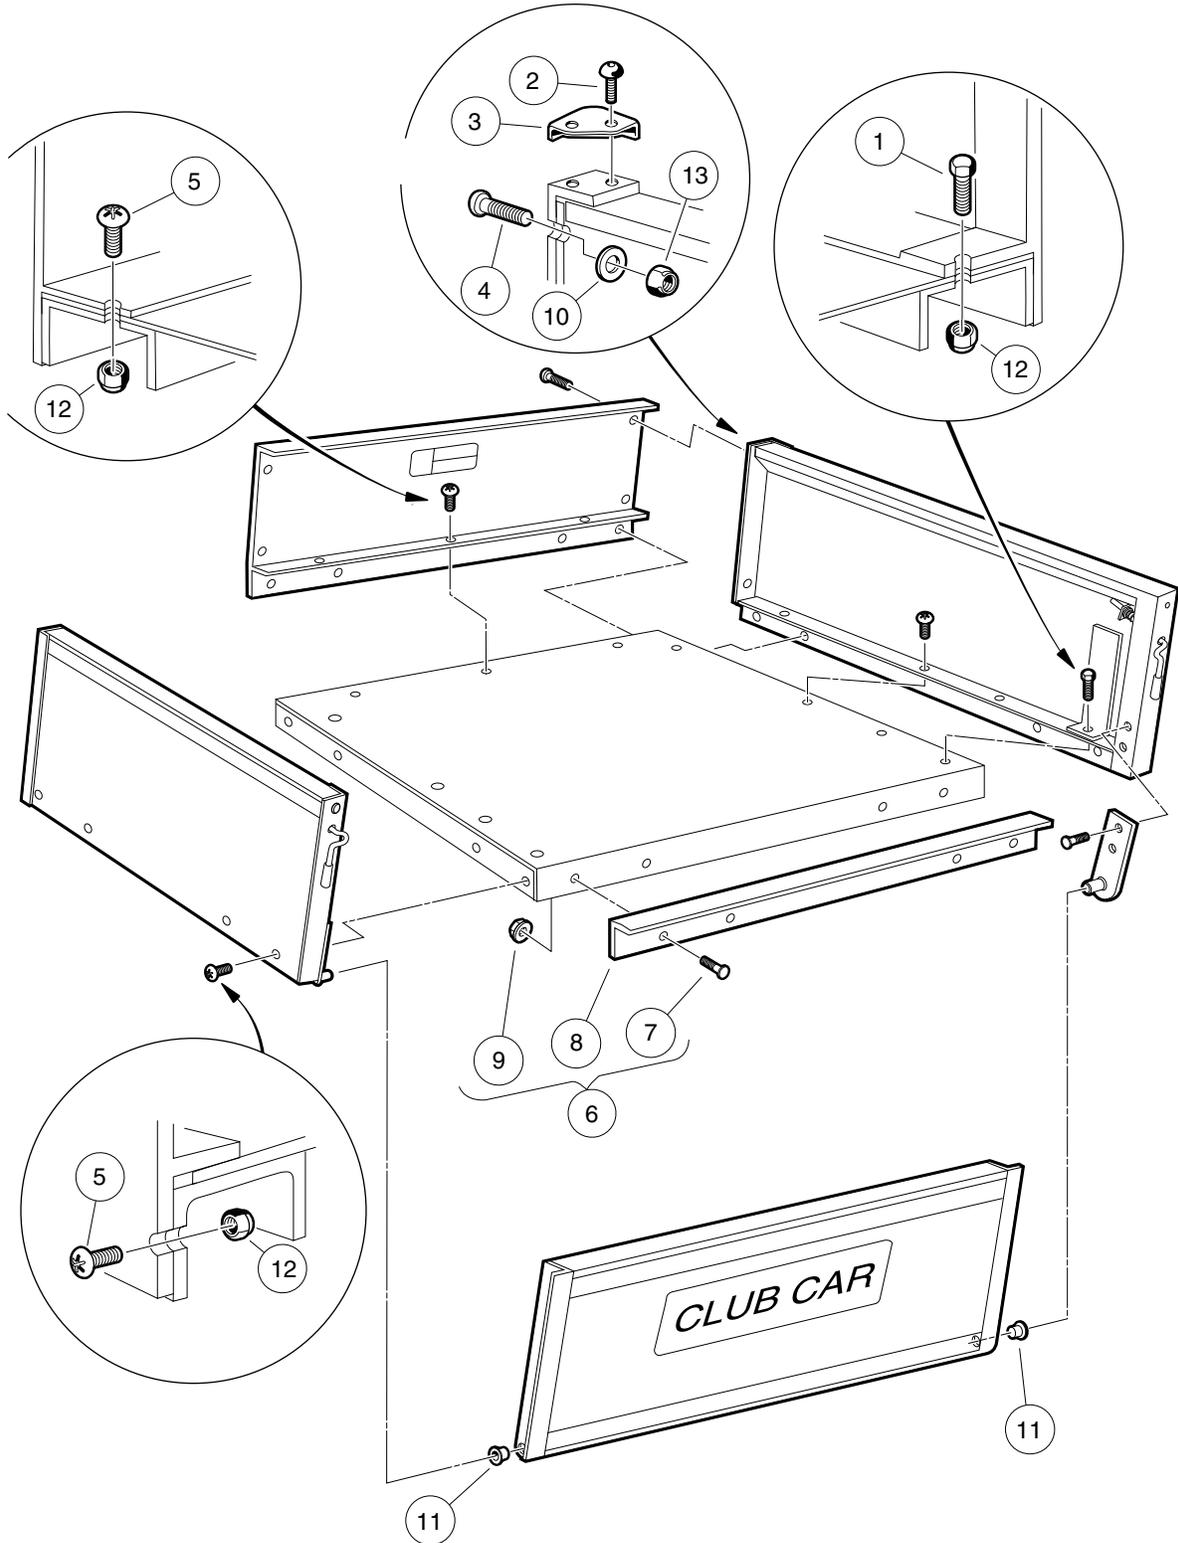


000261-001

CARGO BOX MOUNTING – TURF/CARRYALL 1

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	2
2	<u>1014321</u>	Screw, #10 Truss-Head Torx	4
3	<u>1014387</u>	Cap, Corner	2
4	<u>1014415</u>	Screw, 1/4-20 X 0.75 Torx Truss-Head	4
5	1015399	Screw, 5/16-18 X 0.88 Torx Truss-Head	17
6	****	Kit, Tailgate Angle (includes items 7 through 9)	1
7	<u>1014537</u>	Stud, Self-Clinching Flush Head	4
8	N/A	Box Bed Tailgate Angle	1
9	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4
10	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4
11	<u>7049</u>	Bushing, Nylon	2
12	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	19
13	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
		<p style="text-align: center;">**** Special order item available upon request.</p> <p style="text-align: center;">Note: All parts listed on this page are included in kit 1015606.</p>	

1
G
E

1
G
E

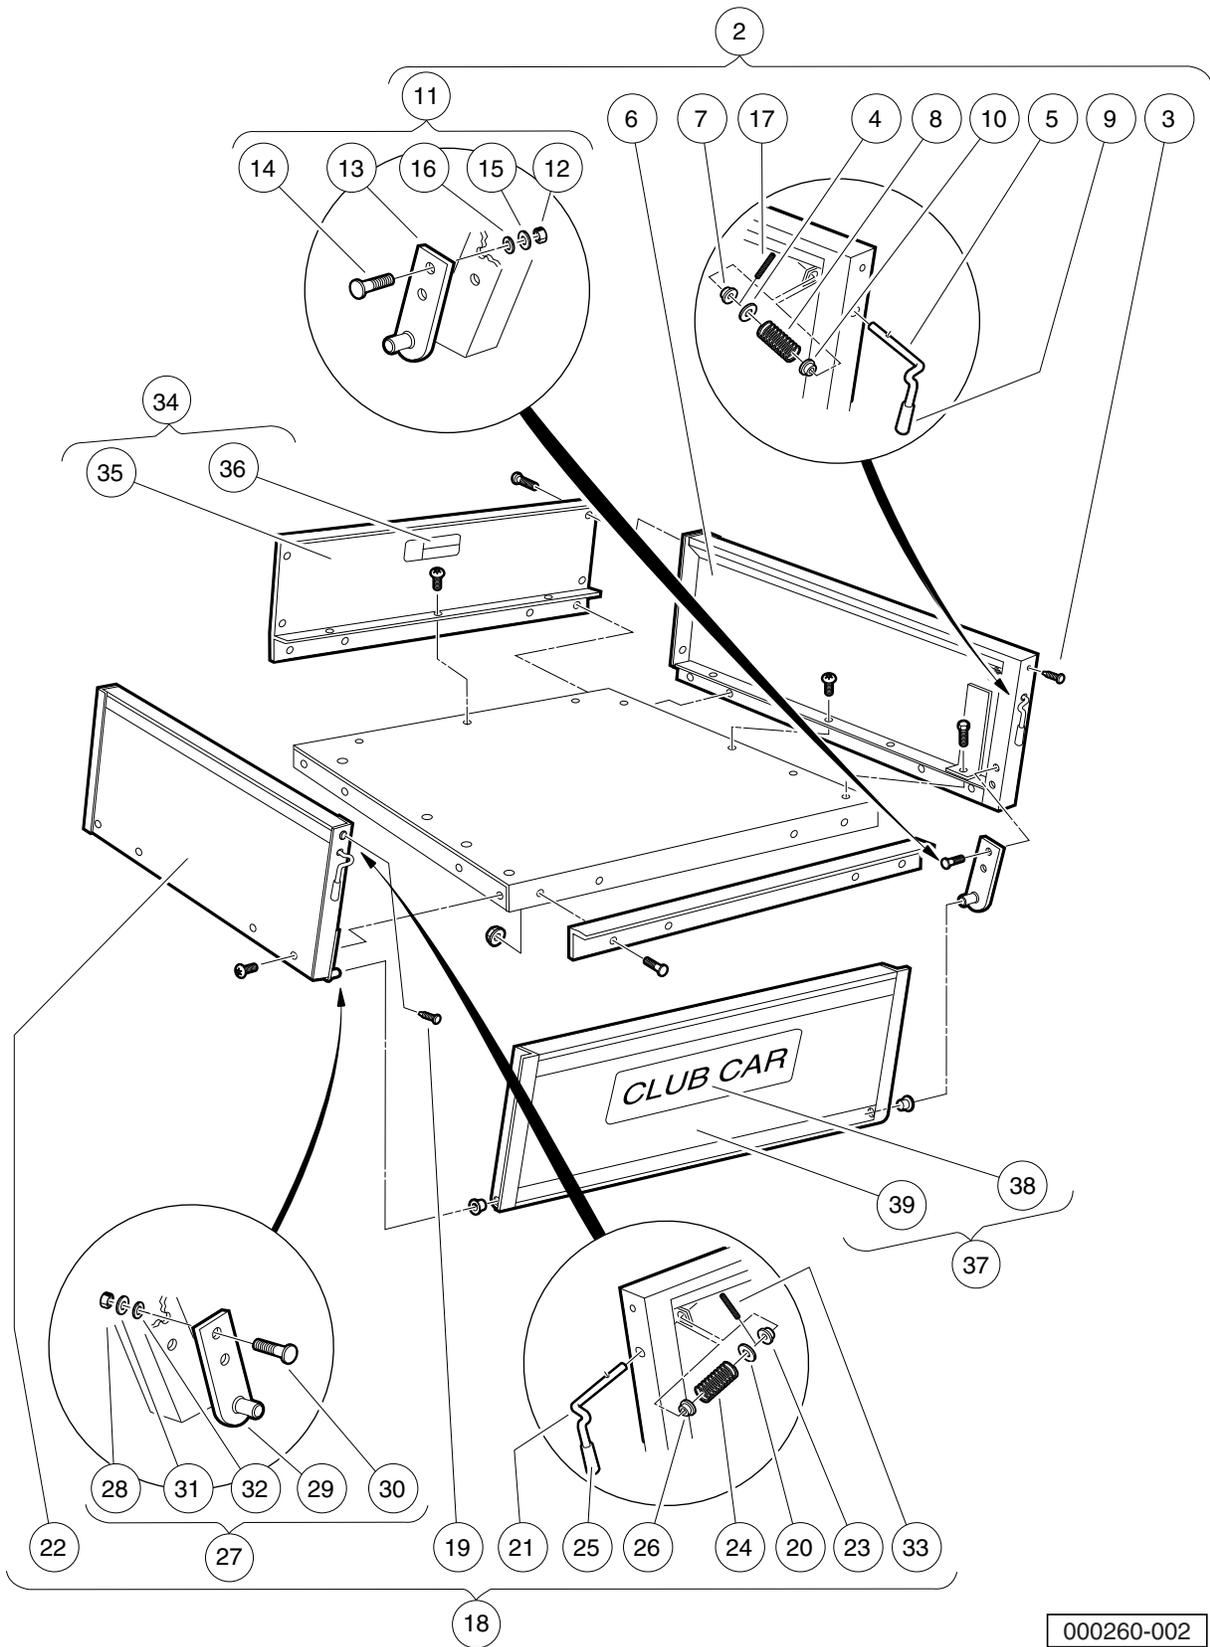


000260-002

CARGO BOX – TURF/CARRYALL 2, 252, AND 2 PLUS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015607</u>	Cargo Box Set (includes items 2 through 37)	1
2	<u>1015366</u>	Side-Panel Assembly, Right-Hand (includes items 3 through 17)	1
3	<u>1010434</u>	Barrel - Plastic	1
4	<u>1011990</u>	Washer, 3/8 Flat	1
5	<u>1015245</u>	Latch, Tailgate, Right-Hand	1
6	N/A	Side-Panel Weldment, Right-Hand	1
7	<u>1015363</u>	Bushing, Snap-In	1
8	<u>1015390</u>	Compression Spring Latch Tilt	1
9	<u>1015400</u>	Grip, Tilt Latch Hand	1
10	<u>1032</u>	Bushing, Nylon	1
11	<u>103406502</u>	Kit, Tlgt Mtg Brkt, Ca Rh (includes items 12 through 16)	1
12	<u>1028</u>	Nut, 1/4-20 Hex	2
13	N/A	Asm, Tlgt, Mtg Brkt, Ca Rh	1
14	<u>103406601</u>	Stud, 1/4 Self-clnchg Flush	2
15	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
16	<u>451</u>	Lockwasher, 1/4 Split	2
17	1231	Pin, 1/8 X 1.00 Split Roll	1
18	<u>1015368</u>	Side Panel Assembly, Left-Hand (includes items 19 through 33)	1
19	<u>1010434</u>	Barrel - Plastic	1
20	<u>1011990</u>	Washer, 3/8 Flat	1
21	<u>1015313</u>	Latch, Tailgate, Left-Hand	1
22	N/A	Side-Panel Weldment, Left-Hand	1
23	<u>1015363</u>	Bushing, Snap-In	1
24	<u>1015390</u>	Compression Spring Latch Tilt	1
25	<u>1015400</u>	Grip, Tilt Latch Hand	1
26	<u>1032</u>	Bushing, Nylon	1
27	<u>103406501</u>	Kit, Tlgt Mtg Brkt, Ca Lh (includes items 28 through 32)	1
28	<u>1028</u>	Nut, 1/4-20 Hex	2
29	N/A	Asm, Tlgt, Mtg Brkt, Ca Lh	1
30	<u>103406601</u>	Stud, 1/4 Self-clnchg Flush	2
31	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
32	<u>451</u>	Lockwasher, 1/4 Split	2
33	1231	Pin, 1/8 X 1.00 Split Roll	1
34	<u>1015412</u>	Front Panel Assembly (includes items 35 and 36)	1
35	N/A	Front Panel Box	1
36	<u>101553901</u>	Decal, Bed Load Warning	1
37	<u>1015424</u>	Tailgate Assembly (includes items 38 and 39)	1
38	<u>1013317</u>	Decal, Logo, Tailgate	1
39	N/A	Tailgate Weldment	1
		Note: Additional components in kit <u>1015607</u> are shown on the following two pages.	

1
G
E

1
G
E

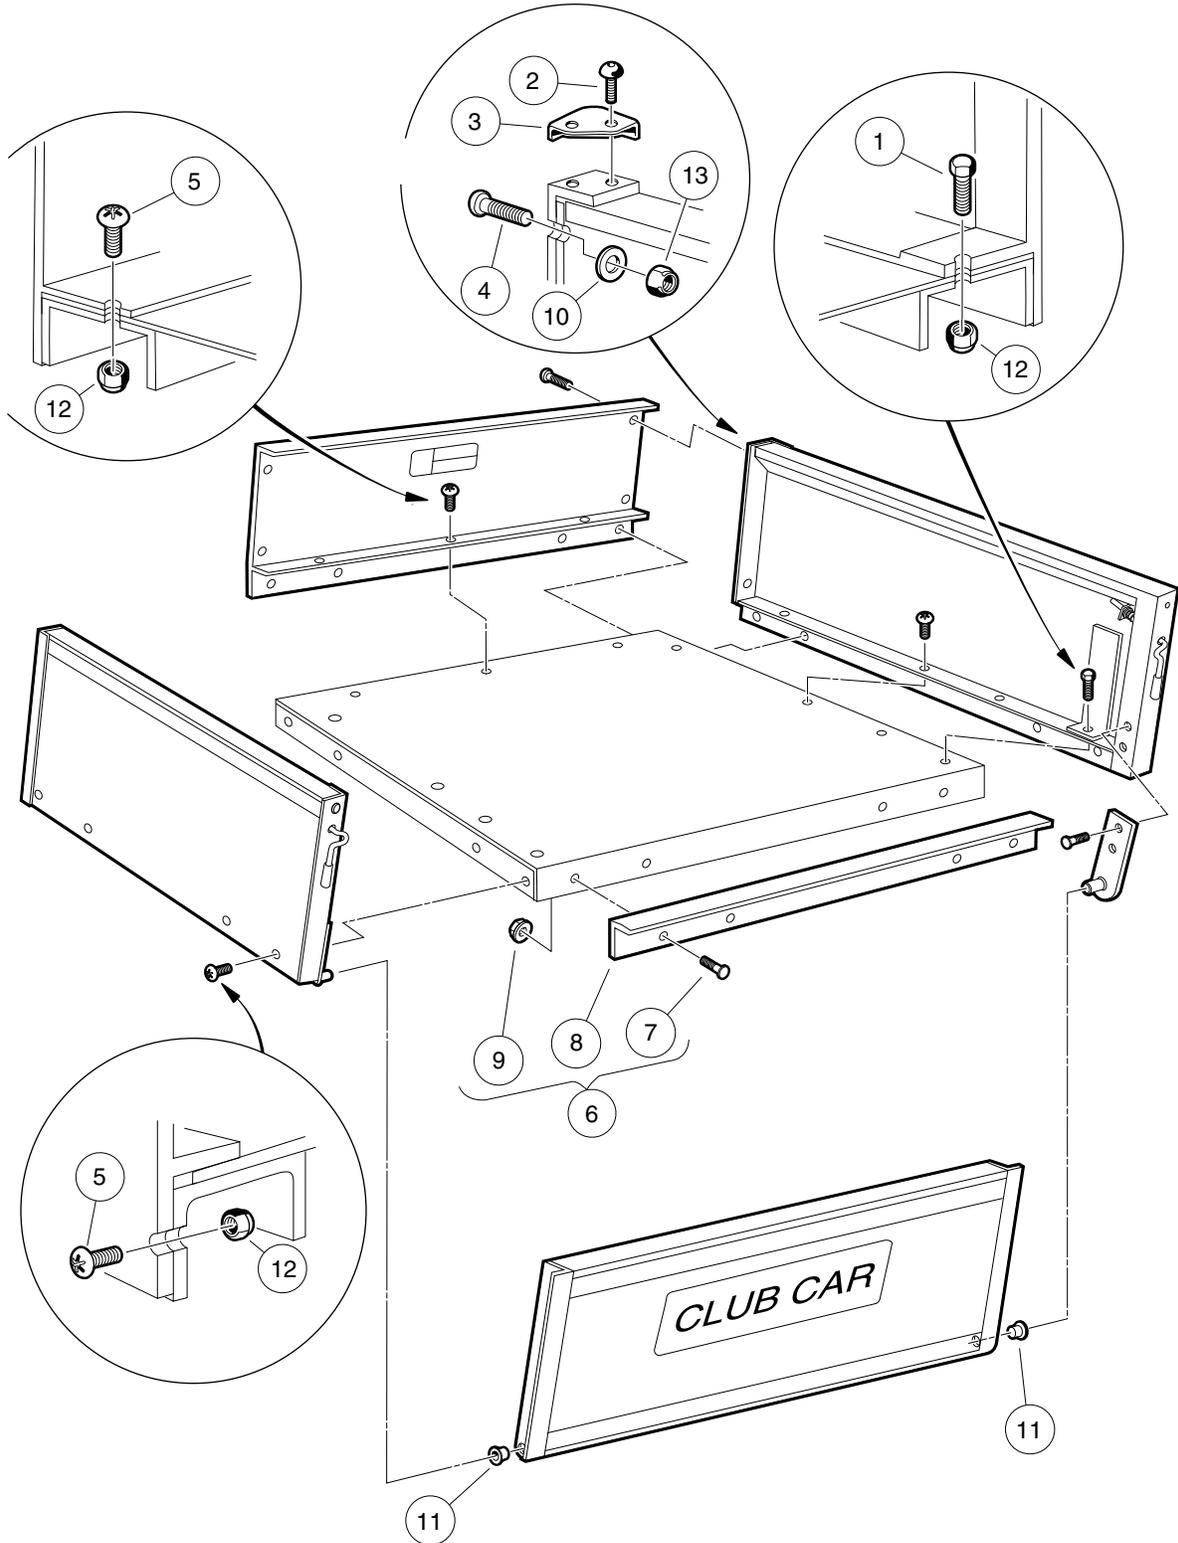


000261-001

CARGO BOX MOUNTING – TURF/CARRYALL 2, 252, AND CARRYALL 2 PLUS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	2
2	<u>1014321</u>	Screw, #10 Truss-Head Torx	4
3	<u>1014387</u>	Cap, Corner	2
4	<u>1014415</u>	Screw, 1/4-20 X 0.75 Torx Truss-Head	4
5	1015399	Screw, 5/16-18 X 0.88 Torx Truss-Head	23
6	<u>101894702</u>	Kit, Tailgate Angle (includes items 7 through 9)	1
7	<u>1014537</u>	Stud, Self-Clinching Flush Head	4
8	101894302	Box Bed Tailgate Angle	1
9	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4
10	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4
11	<u>7049</u>	Bushing, Nylon	2
12	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	25
13	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
<p>Note: All parts listed on this page are included in kit 1015607.</p>			

1
G
E

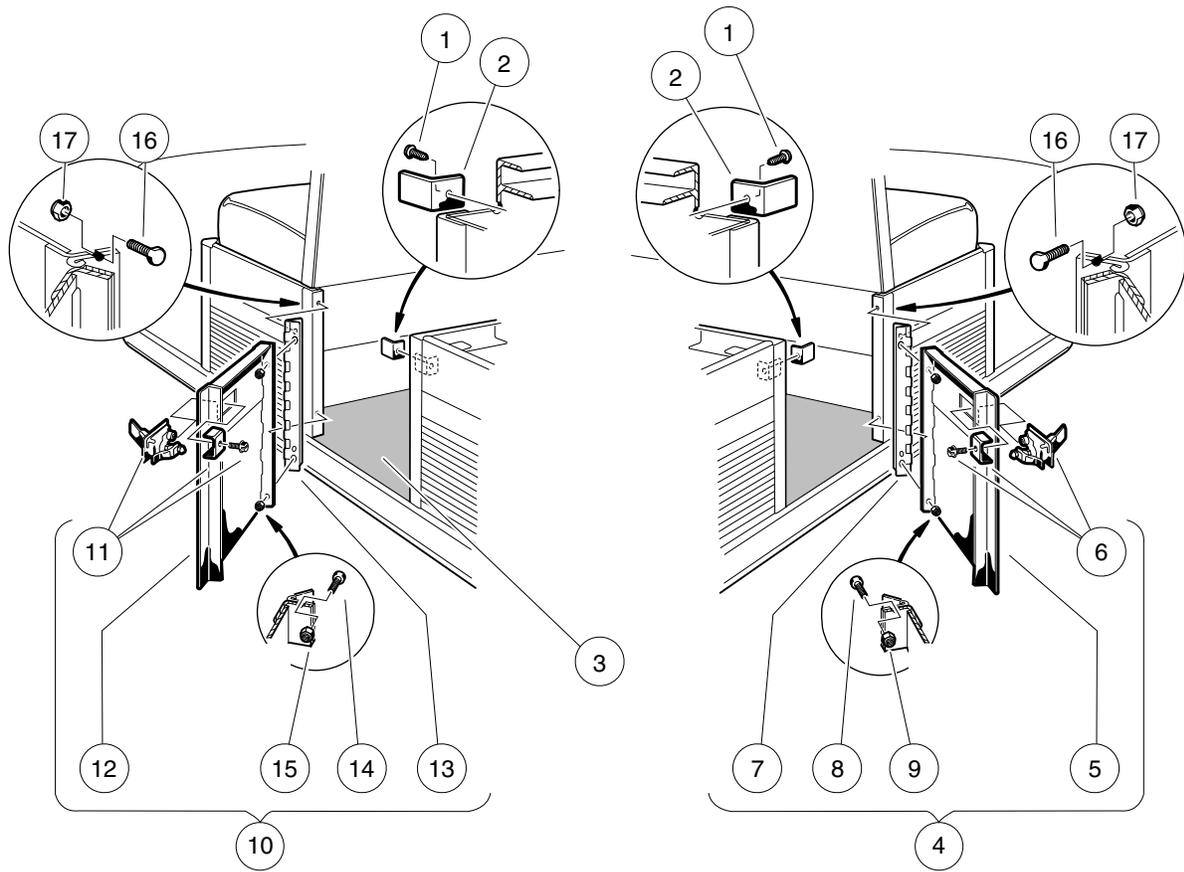


000262-001

SIDE DOORS – TURF/CARRYALL 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	2
2	<u>1013280</u>	Clip, Angle	2
3	<u>1016718</u>	Floormat, Rear	1
4	<u>1016954</u>	Assembly, Door, Passenger-Side (includes items 5 through 9)	1
5	1016909	Door, Passenger-Side	1
6	<u>101691401</u>	Latch, Door	1
7	<u>1016920</u>	Hinge, Door	1
8	<u>403</u>	Screw, 1/4-20 X 0.625 Hex-Head Cap	2
9	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2
10	1016955	Assembly, Door, Driver-Side (includes items 11 through 15)	1
11	<u>101691401</u>	Latch, Door	1
12	<u>1016918</u>	Door, Driver-Side	1
13	<u>1016920</u>	Hinge, Door	1
14	<u>403</u>	Screw, 1/4-20 X 0.625 Hex-Head Cap	2
15	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2
16	<u>403</u>	Screw, 1/4-20 X 0.625 Hex-Head Cap	4
17	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4

1
G
E

1
G
E

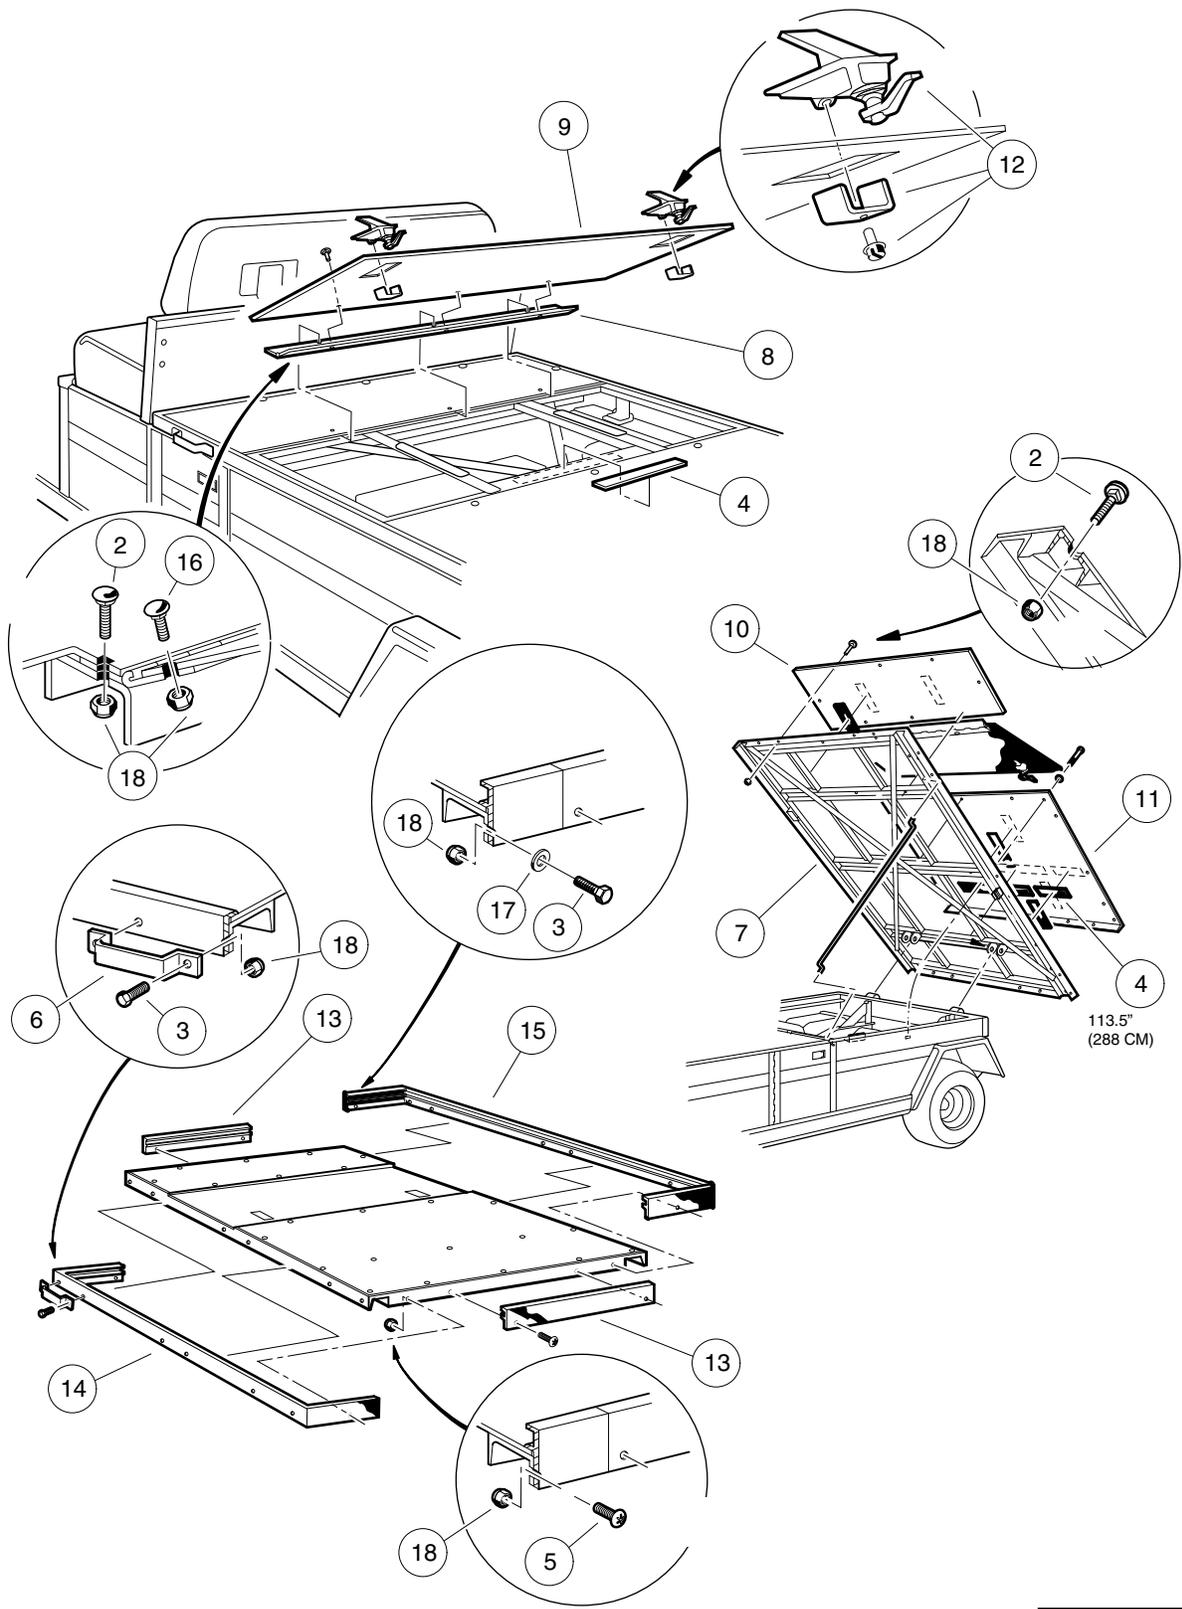


000264-001

FLAT BED – TURF/CARRYALL 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016942</u>	Assembly, Long Bed (includes items 2 through 18)	1
2	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	21
3	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	6
4	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4" *	1
5	<u>1015399</u>	Screw, 5/16-18 X 0.88 Torx Truss-Head	14
6	<u>1016077</u>	Bracket, Stake Side	1
7	<u>1016878</u>	Long Bed Frame Assembly	1
8	<u>1016881</u>	Hinge, Access Door	1
9	<u>101689101</u>	Plate, Access Door	1
10	****	Floor Plate Forward Long Bed	1
11	****	Plate Floor Rear Long Bed	1
12	<u>101691401</u>	Latch, Door	2
13	<u>1016943</u>	Trim, Long Bed, Front and Rear	2
14	<u>1016944</u>	Trim, Long Bed, Driver-Side	1
15	<u>1016948</u>	Trim, Long Bed, Passenger-Side	1
16	<u>1017077</u>	Bolt, Carriage, 5/16-18 X 0.625	3
17	<u>1241</u>	Washer, 5/16 Type A Flat	4
18	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	44
<p style="margin-left: 40px;">**** Special order item available upon request.</p> <p style="margin-left: 40px;">* Note: Item not shown.</p>			

1
G
E

1
G
E

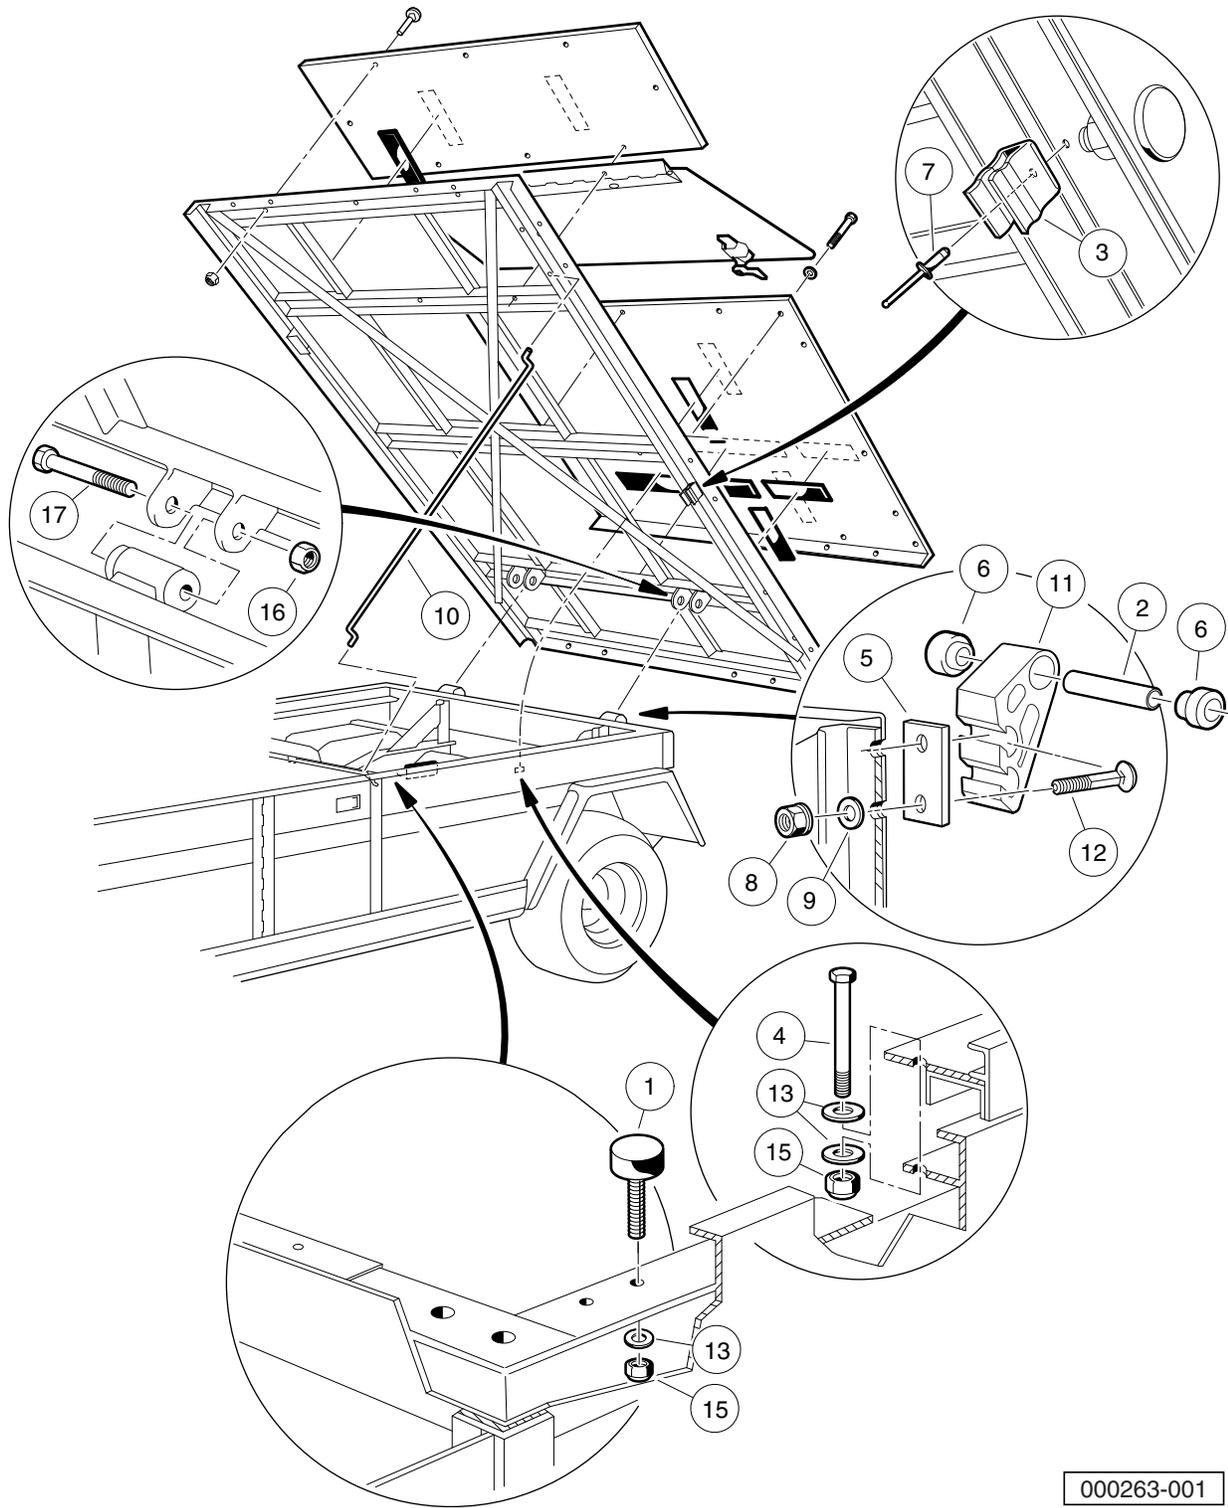


000263-001

FLAT BED MOUNTING – TURF/CARRYALL 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010878</u>	Bumper, Rubber	2
2	<u>1012303</u>	Bushing, Steel	2
3	<u>1013413</u>	Clip, Rod	1
4	<u>1013872</u>	Bolt, 1/4-20 X 4.00 Hex Head	2
5	<u>1015507</u>	Shim, Tilt Bed Pivot	1
6	<u>1015583</u>	Bushing, Urethane	4
7	<u>1015727</u>	Rivet, 1/8	1
8	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4
9	<u>102066001</u>	Washer, 3/8 Type B Hard Flat	4
10	<u>102259401</u>	Prop Rod, Long Bed	1
11	<u>103538701</u>	Extra, Bracket, Hinge, Bed	2
12	<u>103538901</u>	3/8-16 X 3.5 Carr Blt Gr5 Zn	4
13	<u>332</u>	Washer, 1/4 Type A Narrow Flat	6
14	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	4
15	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
16	<u>8754</u>	Locknut, 3/8-16 Hex	2
17	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2

1
G
E

1
G
E

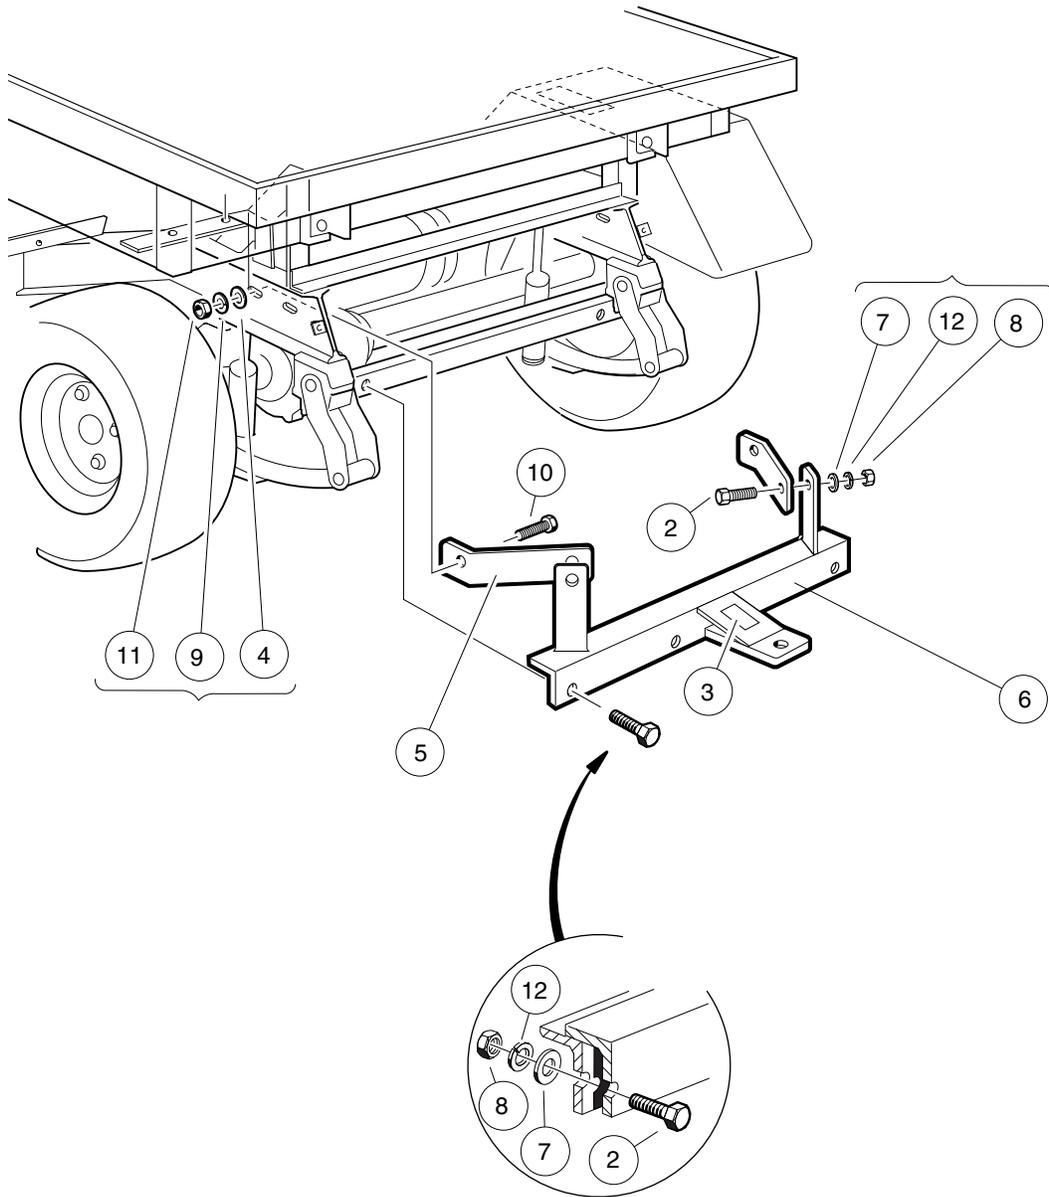


000265-001

TRAILER HITCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015445</u>	Kit, Trailer Hitch (includes items 2 through 12)	1
2	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	4
3	<u>1011553</u>	Decal, Trailer Hitch	1
4	<u>1011990</u>	Washer, 3/8 Flat	2
5	<u>1013483</u>	Brace, Trailer Hitch	2
6	N/A	Asm, Trailer Hitch	1
7	<u>1241</u>	Washer, 5/16 Type A Flat	4
8	<u>1242</u>	Nut, 5/16-18 Hex	4
9	<u>357</u>	Lockwasher, 3/8 Split	2
10	705	Screw, Cap-hex Hd 3/8-16x1.25	2
11	<u>706</u>	Nut, Hex 3/8-16	2
12	<u>7174</u>	Lockwasher, 5/16 Split	4

1
G
E

1
G
E

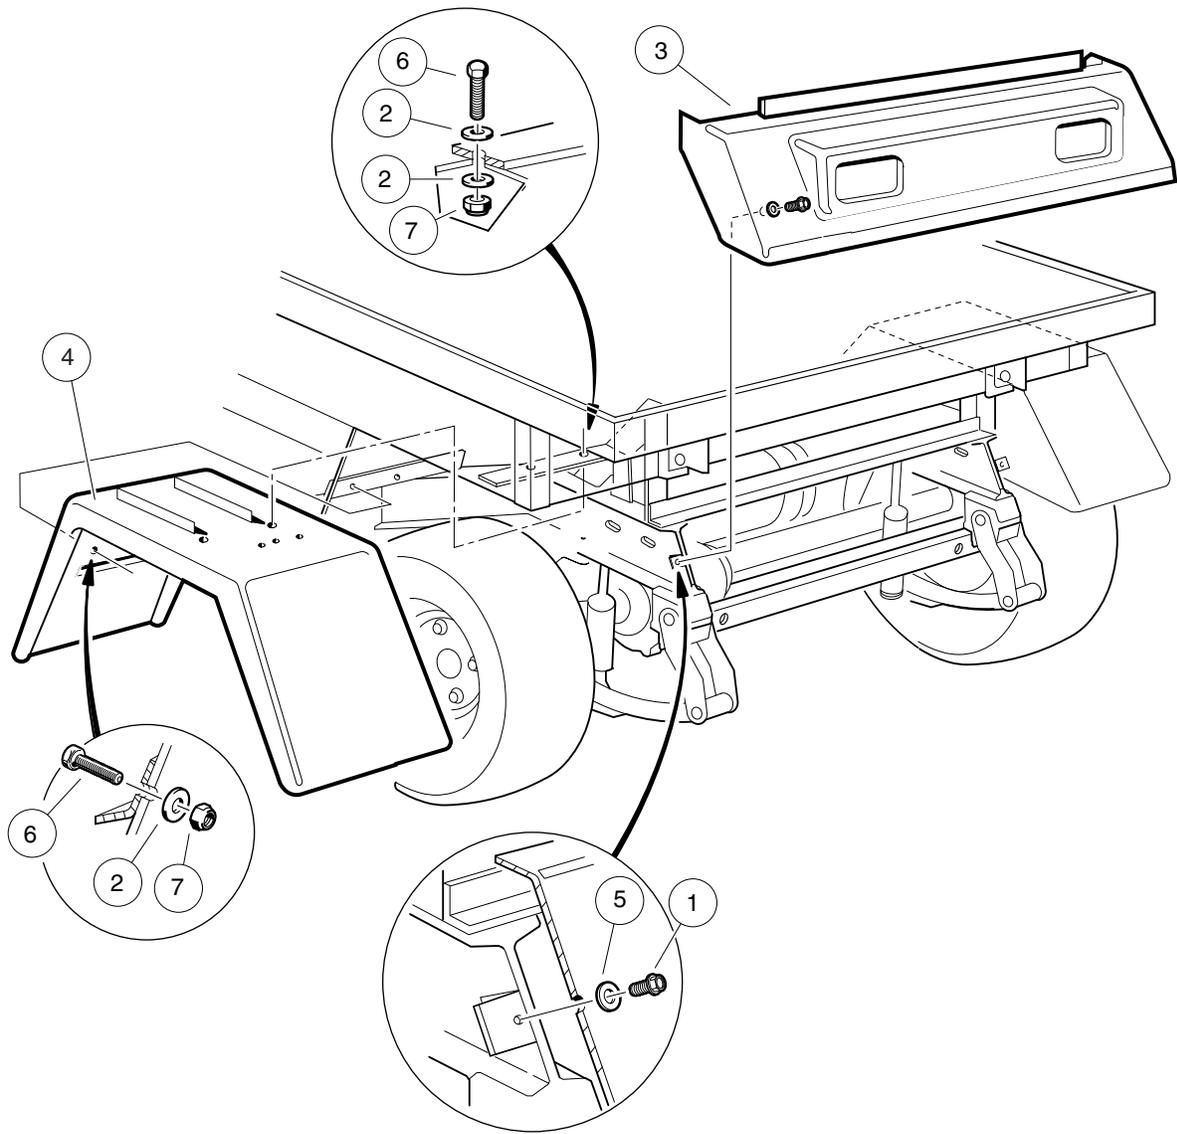


000266-001

REAR BODY TRIM – TURF/CARRYALL 1, 2, AND CARRYALL 2 PLUS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	2
2	<u>1014306</u>	Washer, 1/4" Type B Flat	12
3	<u>1015530</u>	Tailskirt	1
4	<u>1016679</u>	Rear Fender	2
5	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
6	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8
7	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	8

1
G
E

1
G
E

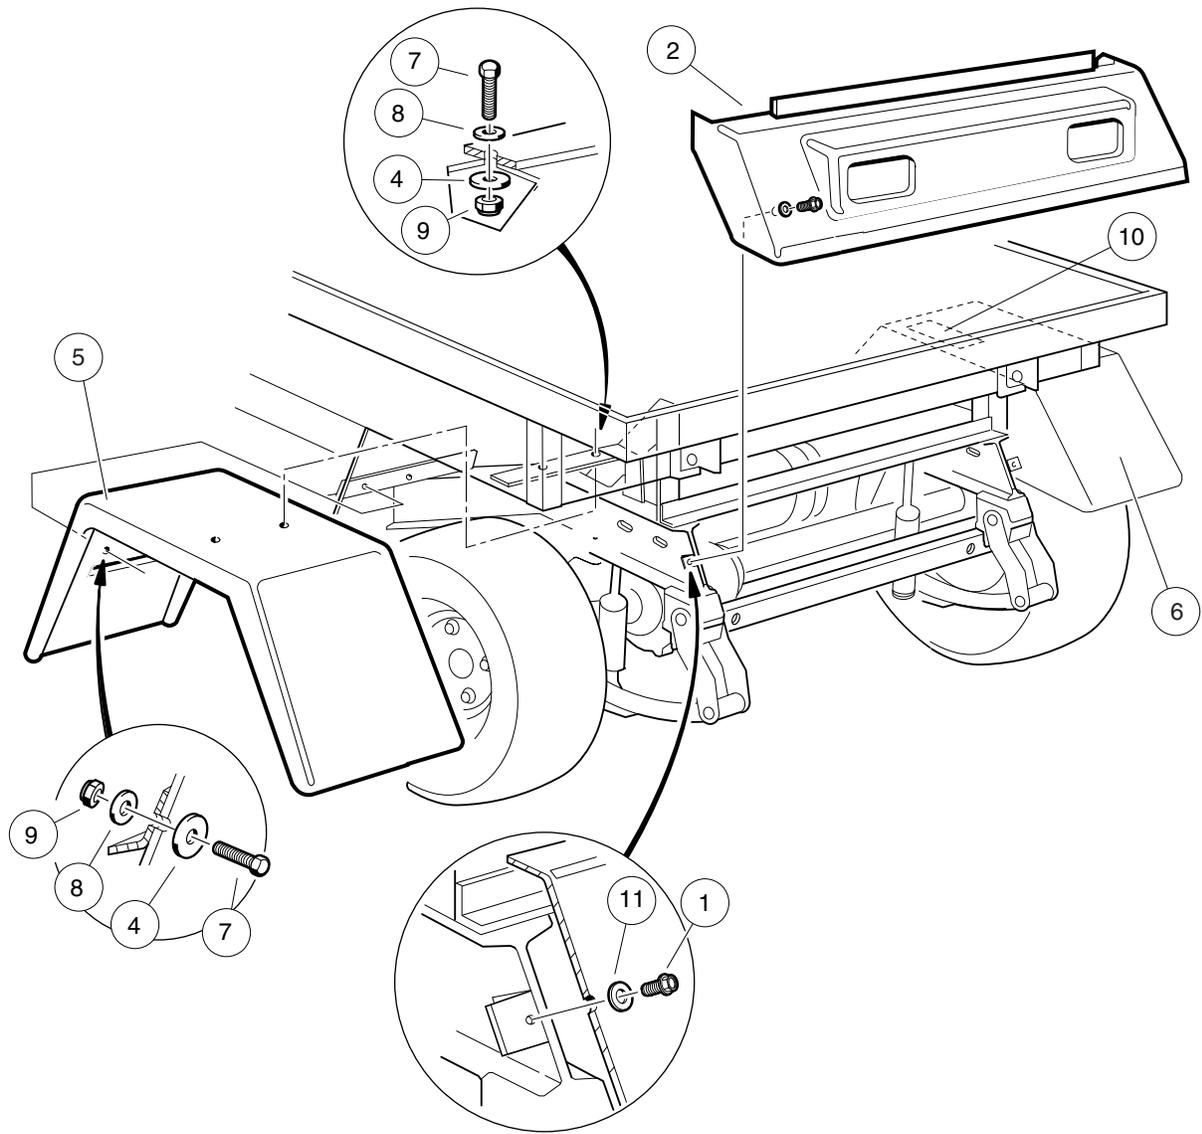


000267-001

REAR BODY TRIM – TURF/CARRYALL 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	2
2	<u>1015530</u>	Tailskirt	1
3	N/A	Rear Fender Kit (includes items 4 through 9)	1
4	<u>1014306</u>	Washer, 1/4" Type B Flat	10
5	<u>102004601</u>	Extended Fender, Rear, Left-Hand	1
6	<u>102004602</u>	Extended Fender, Rear, Right-Hand	1
7	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	8
8	<u>332</u>	Washer, 1/4 Type A Narrow Flat	6
9	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	8
10	<u>102224001</u>	Decal, Rotating Parts Warning	1
11	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2

1
G
E

1
G
E

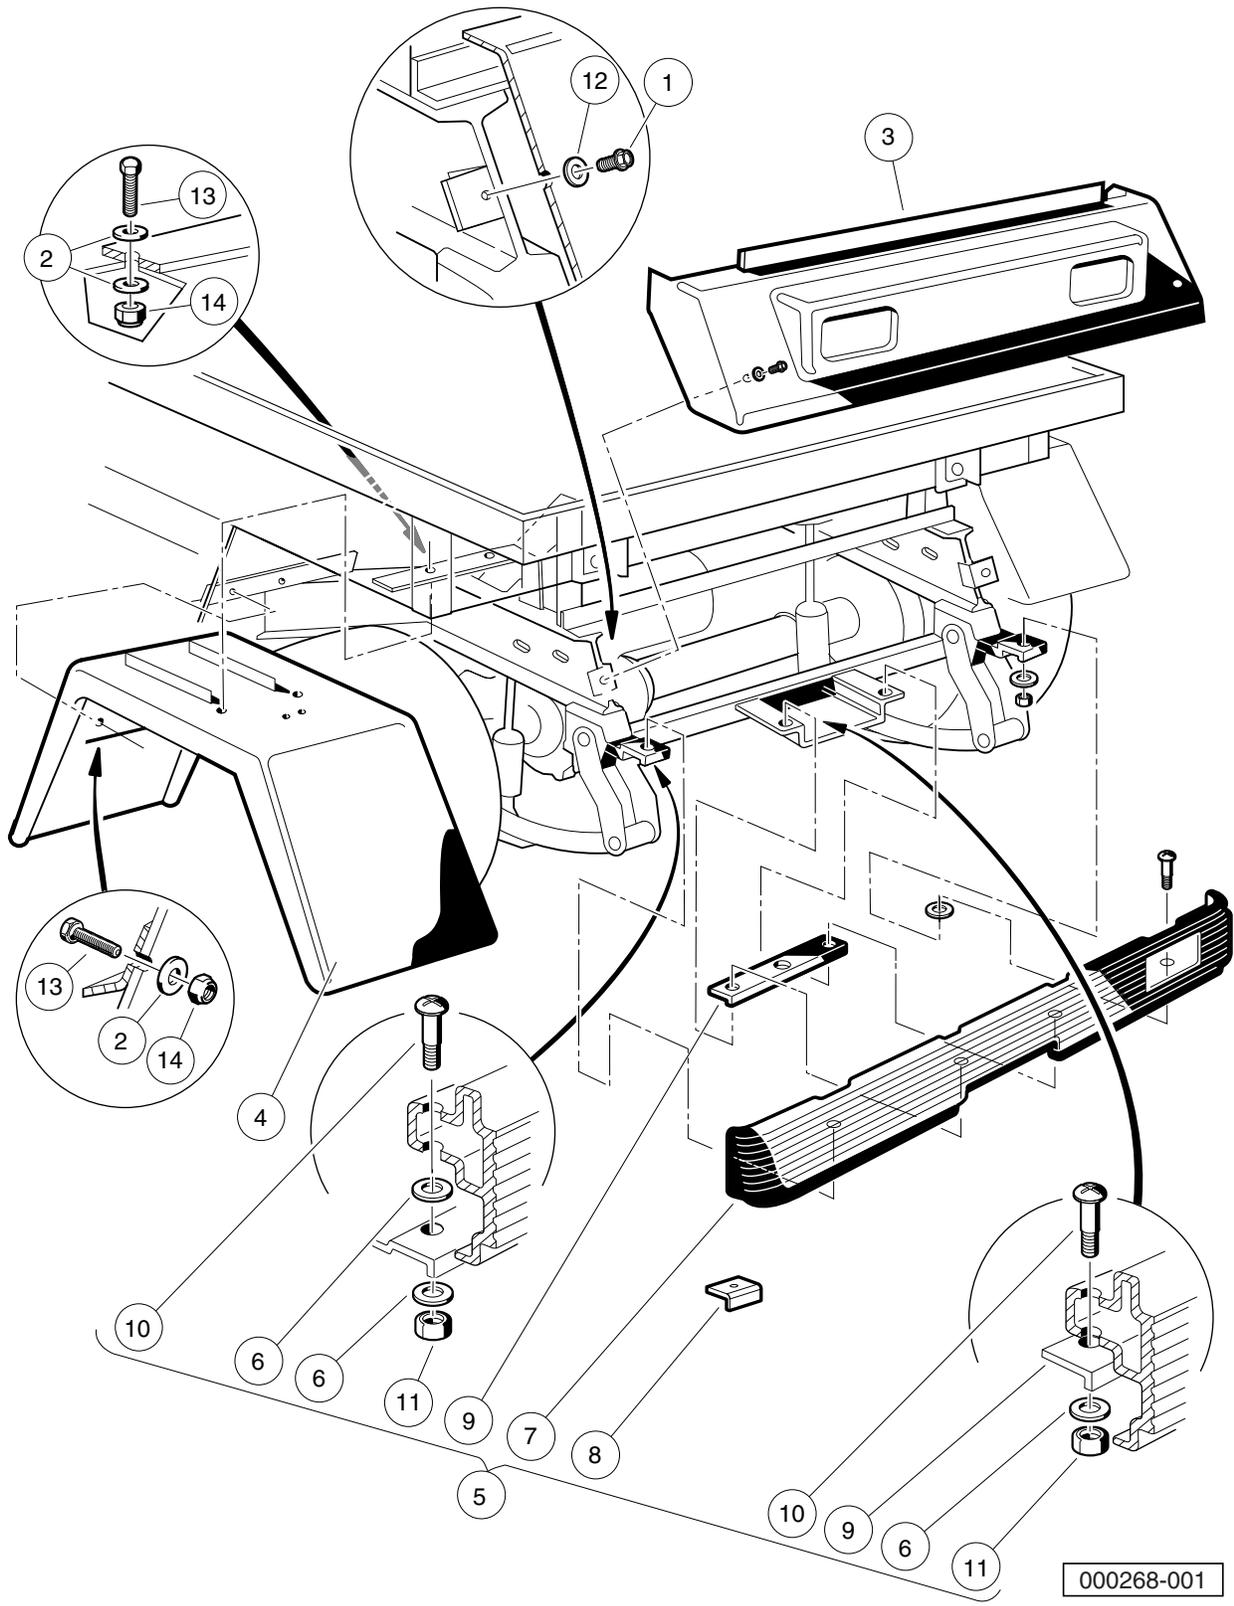

REAR BODY TRIM – TURF/CARRYALL 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	2
2	<u>1014306</u>	Washer, 1/4" Type B Flat	12
3	<u>1015530</u>	Tailskirt	1
4	<u>1016679</u>	Rear Fender	2
5	<u>1017079</u>	Kit, Rear Bumper (includes items 6 through 11)	1
6	<u>1011697</u>	Washer, 5/16 Flat	6
7	<u>1016379</u>	Bumper, Rear	1
8	<u>1016874</u>	Plate, Bumper Mounting, Short	2
9	<u>1016875</u>	Plate, Bumper Mounting, Long	1
10	<u>1016876</u>	Bolt, 3/8 Shoulder	4
11	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4
12	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
13	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8
14	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	8

1
G
E

1

G

E


WHEELS AND TIRES

2

G

E

2
G
E



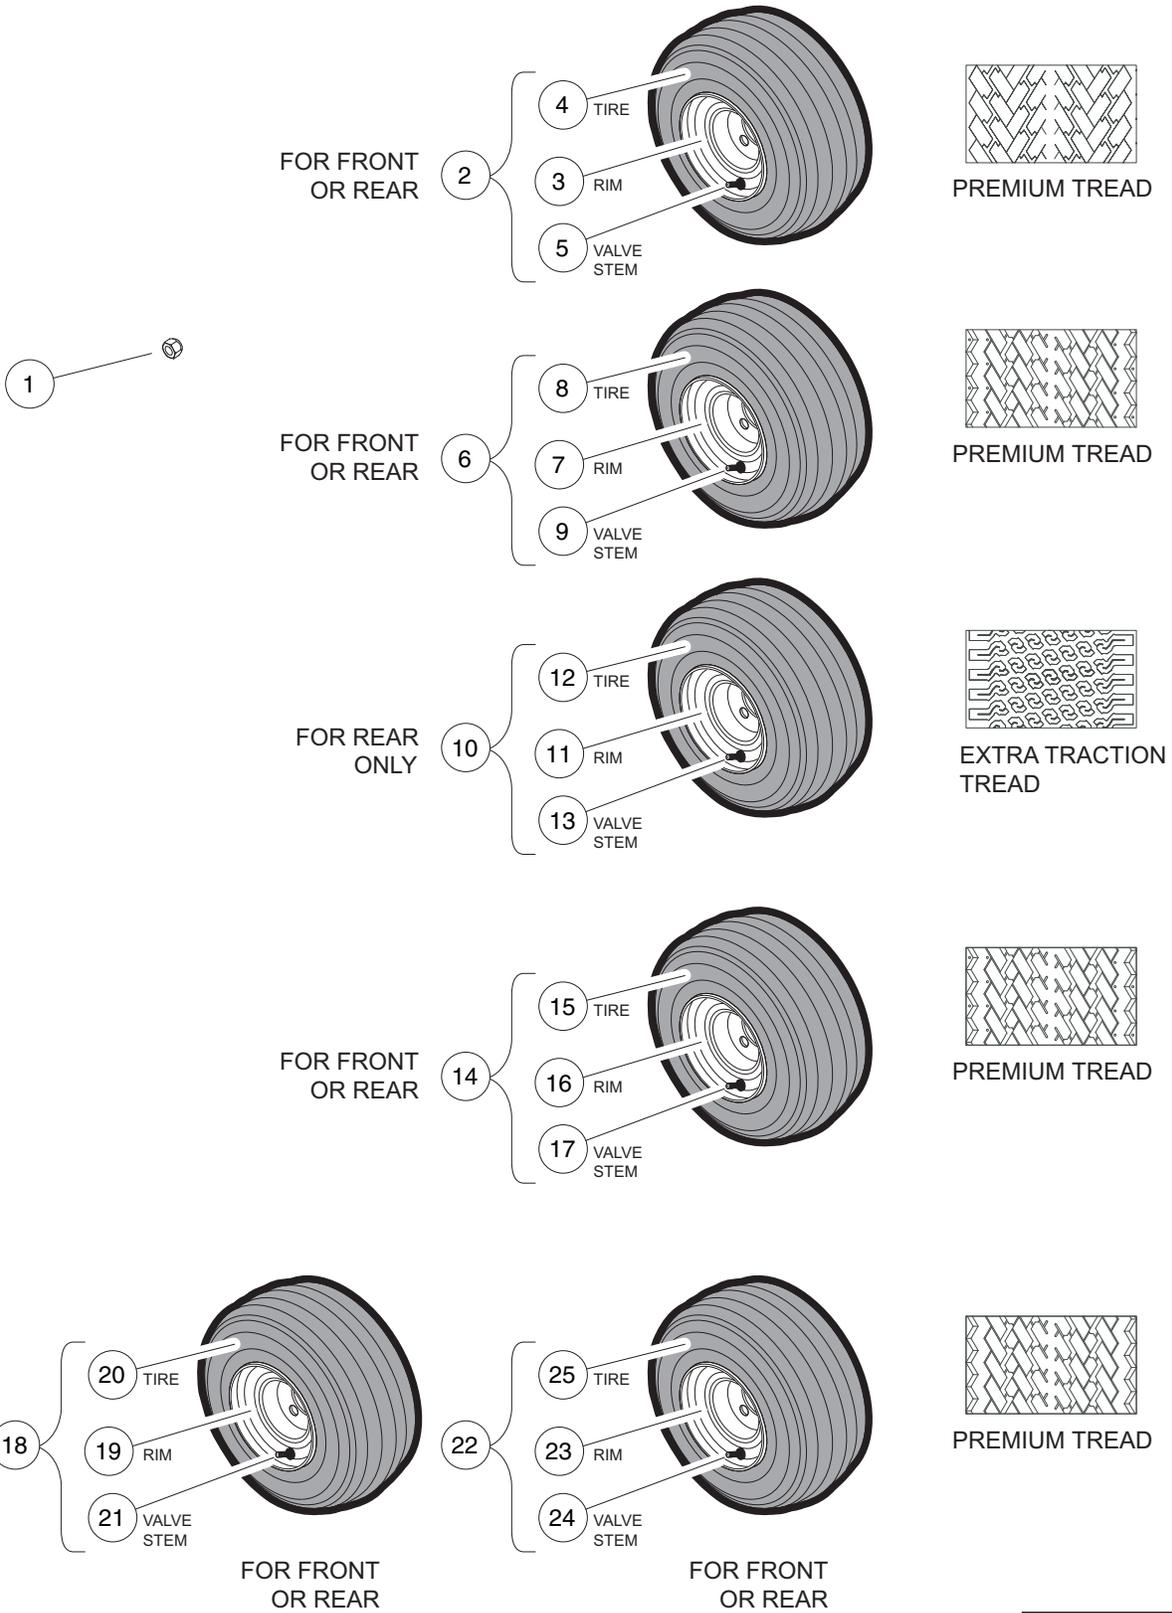


000269-001


WHEELS AND TIRES – VILLAGER 6 AND 8, AND TRANSPORTER 4 AND 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010984</u>	.500-20 Unf Lug Nut	16
2	<u>101651402</u>	Tire/Wheel Asm, White, Premium Tread (includes items 3 through 5)	4
3	<u>1014771</u>	Wheel Rim, White	1
4	<u>101567202</u>	Tire, Unmounted, Links 18 x 8.50-8	1
5	<u>7310</u>	Valve Stem	1
6	<u>101651406</u>	Tire/Wheel Asm, White, Premium Tread, 6-Ply (includes items 7 through 9)	4
7	<u>1014771</u>	Wheel Rim, White	1
8	<u>101737002</u>	Tire, Unmounted	1
9	<u>7310</u>	Valve Stem	1
10	<u>101651407</u>	Tire/Wheel Asm, White, Extra-Traction, 6-Ply (includes items 11 through 13)	2
11	<u>1014771</u>	Wheel Rim, White	1
12	N/A	Tire, Unmounted Xtrac 18 x 8.50-8	1
13	<u>7310</u>	Valve Stem	1
14	<u>101651409</u>	Tire/Wheel Asm, White, Premium Tread, 6.5-inch (includes items 15 through 17)	4
15	<u>101884901</u>	Tire, Unmounted, Power Rib 18 x 6.50-8	1
16	<u>101918401</u>	Wheel Rim, Beige	1
17	<u>7310</u>	Valve Stem	1
18	<u>101651412</u>	Tire/Wheel Asm, White, Duro Premium Tread (includes items 19 through 21)	4
19	<u>1014771</u>	Wheel Rim, White	1
20	<u>102569304</u>	Duro 18 X 8.5 X 8, 4-Ply	1
21	<u>7310</u>	Valve Stem	1
22	<u>101651413</u>	Tire/Wheel Asm, White, Kenda Premium Tread (includes items 23 through 25)	4
23	<u>1014771</u>	Wheel Rim, White	1
24	<u>7310</u>	Valve Stem	1
25	<u>AM10682</u>	Unmounted Prem Tire 18x8.50x8	1



2
G
E

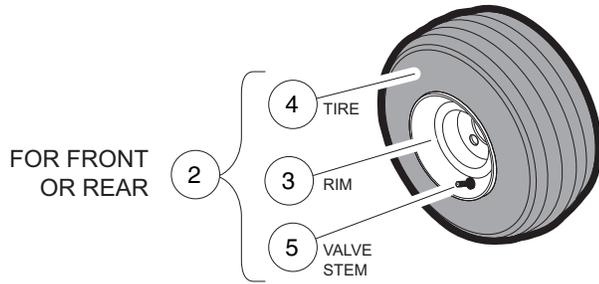



PREMIUM TREAD

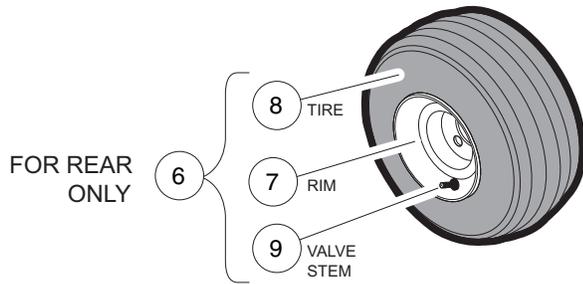

EXTRA TRACTION TREAD

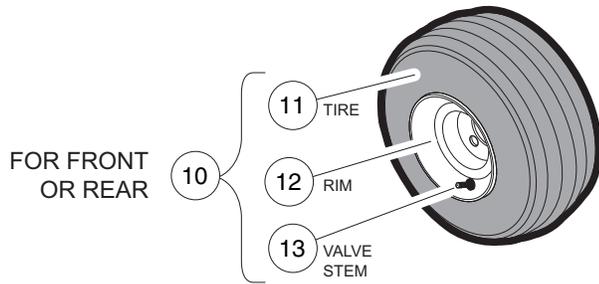

PREMIUM TREAD

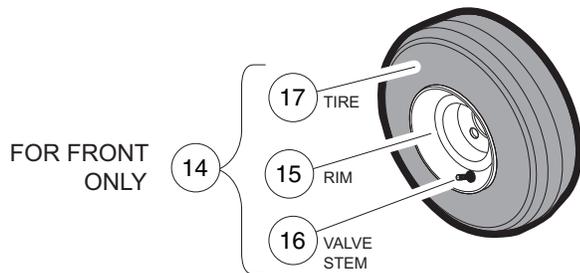


DURO HF 232 TREAD

000269-002

WHEELS AND TIRES, OFF-ROAD TREAD – TURF/CARRYALL 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010984</u>	.500-20 Unf Lug Nut	16
2	<u>101651406</u>	Tire/Wheel Asm, White, Premium Tread, 6-Ply (includes items 3 through 5)	4
3	<u>1014771</u>	Wheel Rim, White	1
4	<u>101737002</u>	Tire, Unmounted	1
5	<u>7310</u>	Valve Stem	1
6	<u>101651407</u>	Tire/Wheel Asm, White, Extra-Traction, 6-Ply (includes items 7 through 9)	2
7	<u>1014771</u>	Wheel Rim, White	1
8	N/A	Tire, Unmounted Xtrac 18 x 8.50-8	1
9	<u>7310</u>	Valve Stem	1
10	<u>101651409</u>	Tire/Wheel Asm, White, Premium Tread, 6.5-inch (includes items 11 through 13)	4
11	<u>101884901</u>	Tire, Unmounted, Power Rib 18 x 6.50-8	1
12	<u>101918401</u>	Wheel Rim, Beige	1
13	<u>7310</u>	Valve Stem	1
14	<u>101651414</u>	Tire/Wheel Asm, White, Duro HF 232 (includes items 15 through 17)	4
15	<u>101918402</u>	Wheel Rim, White	1
16	<u>7310</u>	Valve Stem	1
17	****	Tire, Unmounted, 6-Ply Rated (18.5 x 8.5 - 8) (Duro)	1
**** Special order item available upon request.			




2
G
E



FOR FRONT OR REAR

BEIGE RIMS

WHITE RIMS


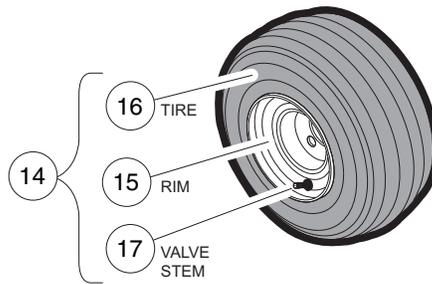
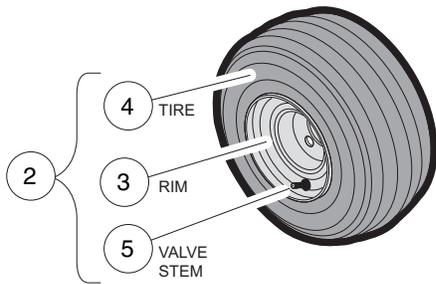


PREMIUM TREAD

FOR REAR ONLY

BEIGE RIMS

WHITE RIMS


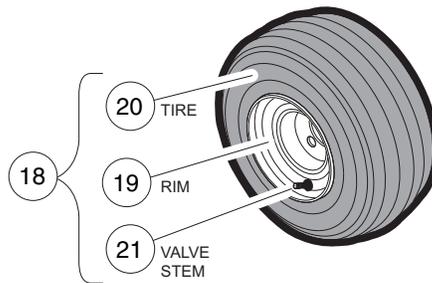
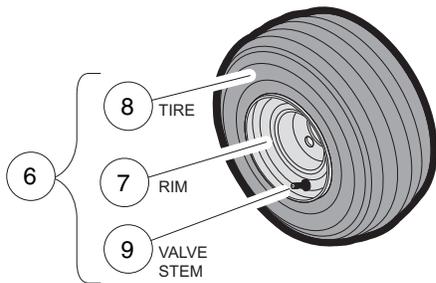


EXTRA TRACTION TREAD

FOR FRONT ONLY

BEIGE RIMS

WHITE RIMS

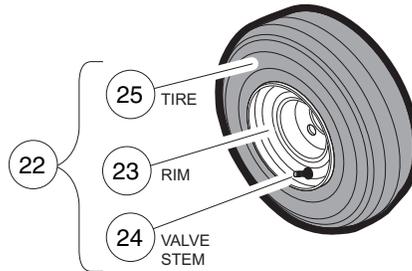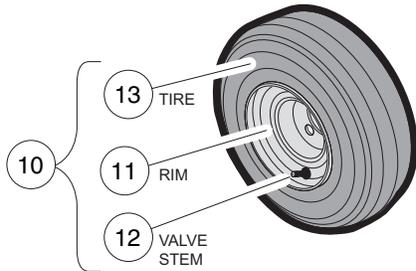

DURO HF 232 TREAD

000269-003

WHEELS AND TIRES – TURF/CARRYALL 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010984</u>	.500-20 Unf Lug Nut	16
2	<u>101570506</u>	Tire/Wheel Asm, Beige, Premium Tread, 6-ply (includes items 3 through 5)	4
3	1015707	Wheel Rim, Beige	1
4	<u>101737002</u>	Tire, Unmounted	1
5	<u>7310</u>	Valve Stem	1
6	<u>101570507</u>	Tire/Wheel Asm, Beige, Xtrac Tread, 6-ply (includes items 7 through 9)	2
7	1015707	Wheel Rim, Beige	1
8	N/A	Tire, Unmounted Xtrac 18 x 8.50-8	1
9	<u>7310</u>	Valve Stem	1
10	<u>101570514</u>	Tire/Wheel Asm, Beige, Duro HF 232 Tread (includes items 11 through 13)	2
11	1015707	Wheel Rim, Beige	1
12	<u>7310</u>	Valve Stem	1
13	****	Tire, Unmounted, 6-Ply Rated (18.5 x 8.5 - 8) (Duro)	1
14	<u>101651406</u>	Tire/Wheel Asm, White, Premium Tread, 6-Ply (includes items 15 through 17)	4
15	<u>1014771</u>	Wheel Rim, White	1
16	<u>101737002</u>	Tire, Unmounted	1
17	<u>7310</u>	Valve Stem	1
18	<u>101651407</u>	Tire/Wheel Asm, White, Extra-Traction, 6-Ply (includes items 19 through 21)	2
19	<u>1014771</u>	Wheel Rim, White	1
20	N/A	Tire, Unmounted Xtrac 18 x 8.50-8	1
21	<u>7310</u>	Valve Stem	1
22	<u>101651414</u>	Tire/Wheel Asm, White, Duro HF 232 (includes items 23 through 25)	2
23	<u>101918402</u>	Wheel Rim, White	1
24	<u>7310</u>	Valve Stem	1
25	****	Tire, Unmounted, 6-Ply Rated (18.5 x 8.5 - 8) (Duro)	1
		**** Special order item available upon request.	


2
G
E




WHITE RIMS

SILVER RIMS


PASSENGER FRONT

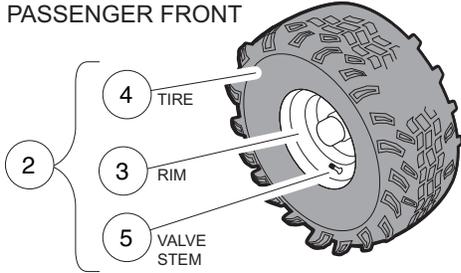


PASSENGER FRONT

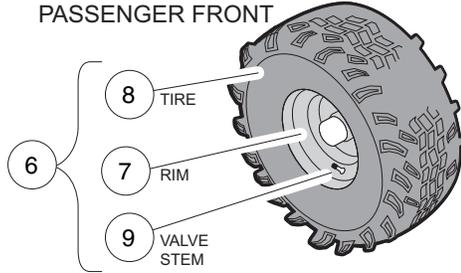


DRIVER FRONT

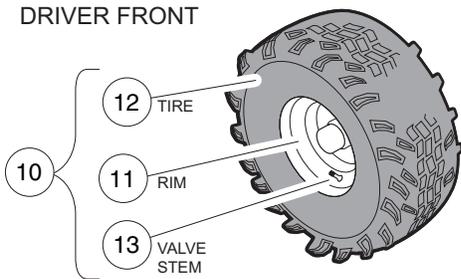


DRIVER FRONT

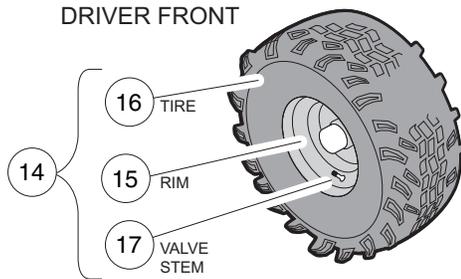


PASSENGER REAR

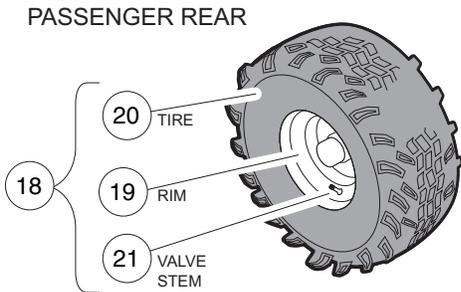


PASSENGER REAR

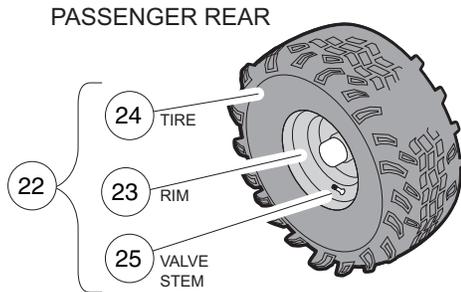

DRIVER REAR

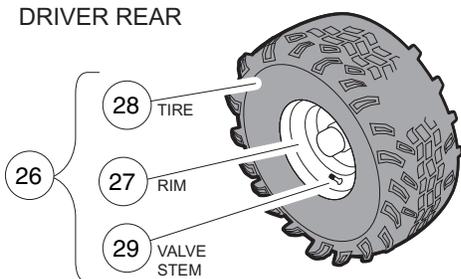

DRIVER REAR

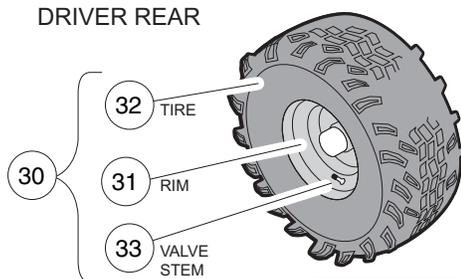


000269-004

WHEELS AND TIRES, OFF-ROAD TREAD – TURF/CARRYALL 252, TURF/CARRYALL 2 XRT







ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010984</u>	.500-20 Unf Lug Nut	16
2	<u>102009201</u>	Off-Road Tire and Wheel Asm, Right, Front (includes items 3 through 5)	1
3	N/A	Rim, Wheel, White	1
4	N/A	Tire, Unmounted, Duro, Off-Road Tire, 22 x 11-10, 6-Ply Rated	1
5	<u>7310</u>	Valve Stem	1
6	<u>102009202</u>	Off-Road Tire and Wheel Asm, Right, Front (includes items 7 through 9)	1
7	N/A	Wheel Rim, Silver	1
8	N/A	Tire, Unmounted, Duro, Off-Road Tire, 22 x 11-10, 6-Ply Rated	1
9	<u>7310</u>	Valve Stem	1
10	<u>102009301</u>	Off-Road Tire and Wheel Asm, Left, Front (includes items 11 through 13)	1
11	N/A	Rim, Wheel, White	1
12	N/A	Tire, Unmounted, Duro, Off-Road Tire, 22 x 11-10, 6-Ply Rated	1
13	<u>7310</u>	Valve Stem	1
14	<u>102009302</u>	Off-Road Tire and Wheel Asm, Left, Front (includes items 15 through 17)	1
15	N/A	Wheel Rim, Silver	1
16	N/A	Tire, Unmounted, Duro, Off-Road Tire, 22 x 11-10, 6-Ply Rated	1
17	<u>7310</u>	Valve Stem	1
18	<u>102009401</u>	Off-Road Tire and Wheel Asm, Right, Rear (includes items 19 through 21)	1
19	N/A	Rim, Wheel, White	1
20	N/A	Tire, Unmounted, Duro, Off-Road Tire, 22 x 11-10, 6-Ply Rated	1
21	<u>7310</u>	Valve Stem	1
22	<u>102009402</u>	Off-Road Tire and Wheel Asm, Right, Rear (includes items 23 through 25)	1
23	N/A	Wheel Rim, Silver	1
24	N/A	Tire, Unmounted, Duro, Off-Road Tire, 22 x 11-10, 6-Ply Rated	1
25	<u>7310</u>	Valve Stem	1
26	<u>102009501</u>	Off-Road Tire and Wheel Asm, Left, Rear (includes items 27 through 29)	1
27	N/A	Rim, Wheel, White	1
28	N/A	Tire, Unmounted, Duro, Off-Road Tire, 22 x 11-10, 6-Ply Rated	1
29	<u>7310</u>	Valve Stem	1
30	<u>102009502</u>	Off-Road Tire and Wheel Asm, Left, Rear (includes items 31 through 33)	1
31	N/A	Wheel Rim, Silver	1
32	N/A	Tire, Unmounted, Duro, Off-Road Tire, 22 x 11-10, 6-Ply Rated	1
33	<u>7310</u>	Valve Stem	1
		<p>Note: Front and rear wheels are NOT interchangeable. The rear wheels have a different offset than the front wheels. The rear wheels must be installed with the deeper offset facing out. Off-road tires are directional.</p>	

2
G
E



WHITE RIMS

SILVER RIMS

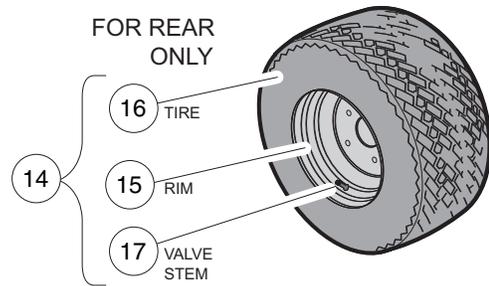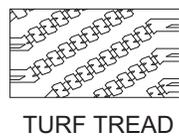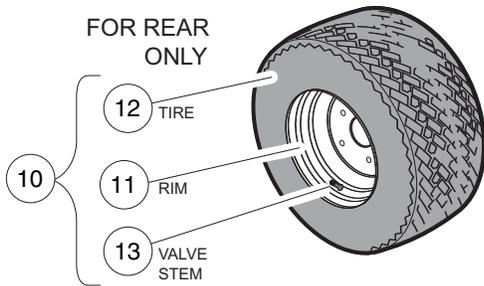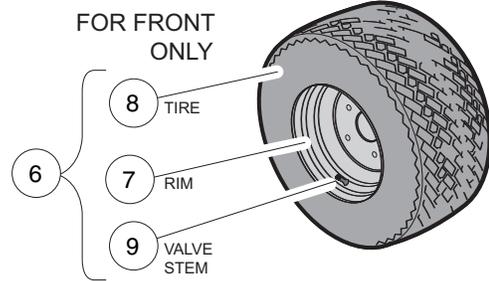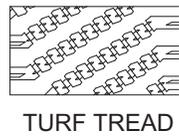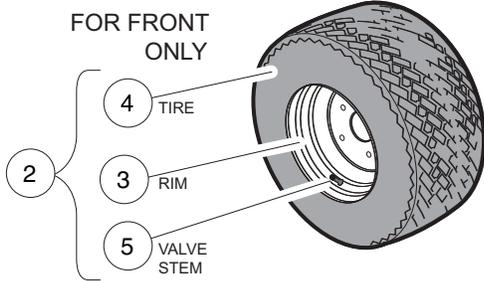

000269-005

WHEELS AND TIRES, TURF TREAD – TURF/CARRYALL 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010984</u>	.500-20 Unf Lug Nut	16
2	<u>102009901</u>	Turf Tire and Wheel Asm, Front (includes items 3 through 5)	2
3	N/A	Rim, Wheel, White	1
4	N/A	Tire, Front, Unmounted, Titan Turf Trac, 23 x 10.5-12, 4-Ply Rated	1
5	<u>7310</u>	Valve Stem	1
6	<u>102009902</u>	Turf Tire and Wheel Asm, Front (includes items 7 through 9)	2
7	N/A	Wheel Rim, Silver	1
8	N/A	Tire, Front, Unmounted, Titan Turf Trac, 23 x 10.5-12, 4-Ply Rated	1
9	<u>7310</u>	Valve Stem	1
10	<u>102010001</u>	Turf Tire and Wheel Asm, Rear (includes items 11 through 13)	2
11	N/A	Rim, Wheel, White	1
12	N/A	Tire, Rear, Unmounted, Titan Turf Trac, 23 x 10.5-12, 4-Ply Rated	1
13	<u>7310</u>	Valve Stem	1
14	<u>102010002</u>	Turf Tire and Wheel Asm, Rear (includes items 15 through 17)	2
15	N/A	Wheel Rim, Silver	1
16	N/A	Tire, Rear, Unmounted, Titan Turf Trac, 23 x 10.5-12, 4-Ply Rated	1
17	<u>7310</u>	Valve Stem	1

2
G
E

2

G

E

DECALS

3

G

E

**3
G
E**

WARNING

ROLLOVER OR FALLING OFF MAY CAUSE DEATH.

- Before using vehicle, read operating instructions.
- Remain seated and hold on to seat handle while moving.
- Do not start vehicle until all occupants are seated.
- Two (2) persons per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not leave children unattended on vehicle.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Never stand in front of or behind vehicle.

CCI 101960501

OPERATING INSTRUCTIONS

- Read owner's manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.

TO OPERATE

- Turn wheels to desired direction and ensure path is clear.
- Turn key to ON position.
- While stopped, place shift lever in desired position:
F - Forward N - Neutral R - Reverse (Buzzer will sound)
- Park brake will release and vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and press brake pedal.

BEFORE LEAVING

- Press park brake pedal until it locks and holds vehicle.
- Place Forward/Reverse switch in NEUTRAL position.
- Turn key OFF and remove key when not in use.


CCI 102519201

WARNING

CRUSH AREA

STAY CLEAR

CCI 1016094-01

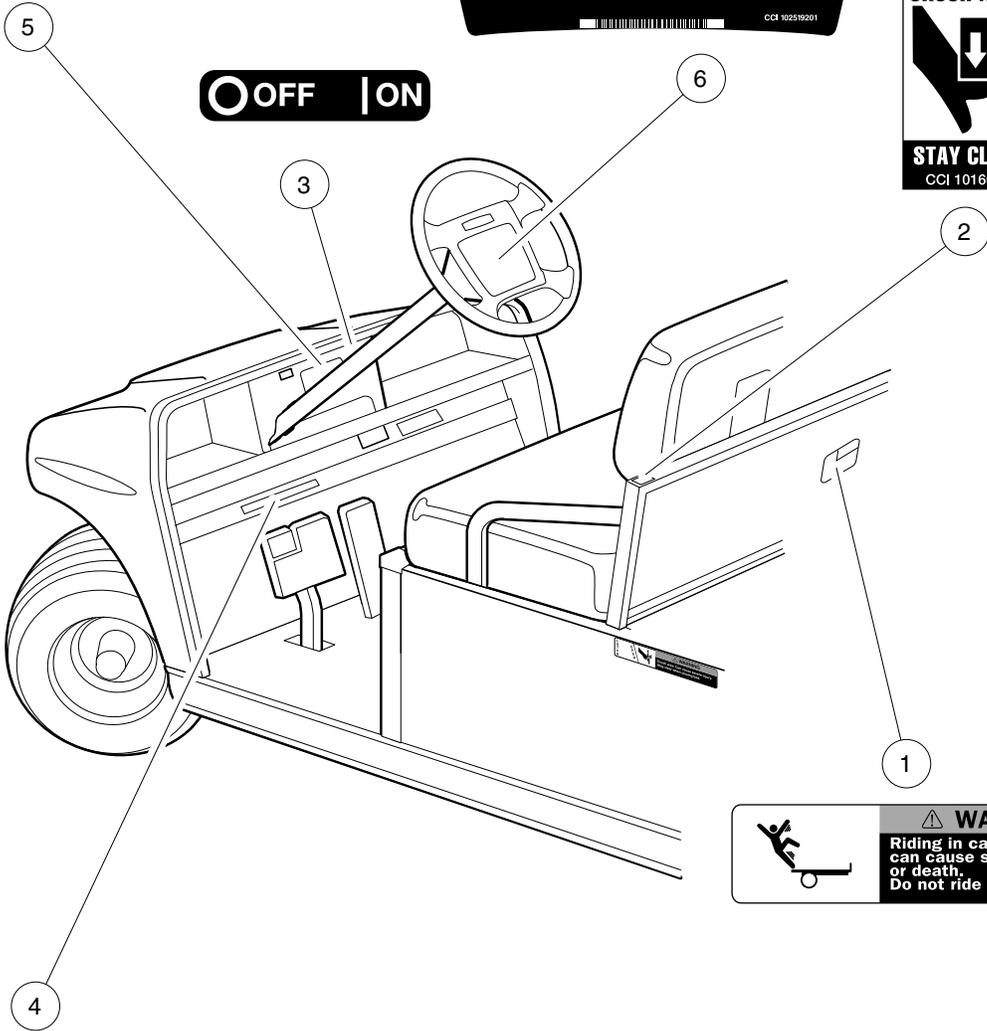

WARNING

Riding in cargo bed can cause severe injury or death. Do not ride in cargo bed.

CCI 1015639-01

VEHICLE LOADING

Read owner's manual and warnings on dash.

- Vehicle rated capacity - 800 lb on level surface only. Weight to include passengers, cargo bed load, and gross trailer weight. See owner's manual.
- Maximum cargo load - 300 lb. Weight to include cargo bed load and gross trailer weight.
- Maximum trailer hitch tongue weight - 150 lbs.
- Cargo should be evenly spread over the floor of the cargo bed as far forward as possible and secured.
- For vehicle stability, when fully loaded, drive slowly and avoid stopping on or backing down steep hills.
- Avoid top heavy loads. See owner's manual.
- When driving on uneven terrain or down steep hills, reduce speed and load.

CCI 101960101

000270-001

DECALS – TURF/CARRYALL 1 GASOLINE AND ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101553901</u>	Decal, Bed Load Warning	1
2	<u>101609401</u>	Decal, Crush Area Warning	2
3	<u>101825101</u>	Decal, Off/On	1
4	<u>101960101</u>	Decal, Vehicle Loading	1
5	<u>101960601</u>	Decal, Dash Warning	1
6	<u>102519201</u>	Decal, Operating Instr, Gas	1

3
G
E

⚠ DANGER / POISON

SHIELD EYES
EXPLOSIVE GASES: FUMES, FLAMES OR INJURY

NO SPARKS
FLAMES
SMOKING

SULFURIC ACID
CAN CAUSE BLINDNESS OR SEVERE BURNS

FLUSH EYES IMMEDIATELY WITH WATER
SEE MEDICAL HELP FAST

KEEP OUT OF THE REACH OF CHILDREN - DO NOT TIP - KEEP VENT CAPS TIGHT AND LEVEL

IMPORTANT NOTICE


- Maximum vehicle speed is limited by motor braking during downhill operation with accelerator pedal depressed.
- If motor brake enabled, vehicle motor will brake when accelerator pedal is released.
- Beeping alarm indicates reduction in motor braking. Apply brakes to reduce speed.
- System is activated only when tow switch is in the "RUN" position.
- When towing vehicle, tow switch must be in the "TOW" position.

101159902

NOTICE

Do not operate vehicle without this cover properly installed. Do not direct water stream in this area; will cause damage to components. See vehicle maintenance and service manual before servicing.

CCI 101931501

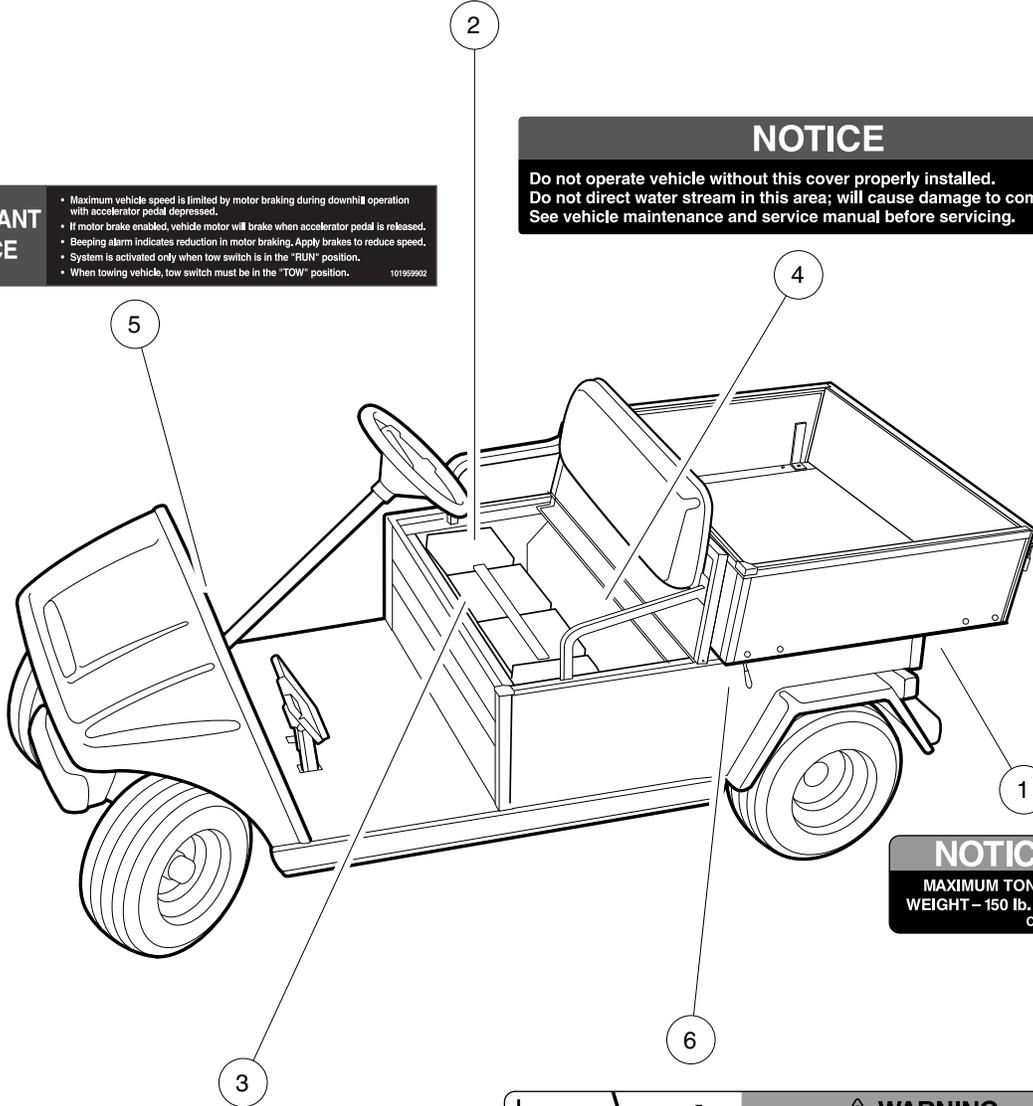

NOTICE

MAXIMUM TONGUE WEIGHT - 150 lb. (667 N)

CCI 1011553

⚠ WARNING TOW RUN

Place Tow/Run switch in TOW position before:

- Disconnecting or connecting batteries
- Towing
- Extended storage
- Servicing

FAILURE TO HEED THIS WARNING COULD RESULT IN A BATTERY EXPLOSION OR SEVERE PERSONAL INJURY.

CCI 10190801

LATCH OPEN

⚠ WARNING

Crush area. Can cause severe injury. Stay clear when closing bed.

CCI 10249301

000272-001

DECALS – TURF/CARRYALL 1 IQ SYSTEM VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011553</u>	Decal, Trailer Hitch	1
2	<u>1013677</u>	Decal, Battery Danger	6
3	<u>101908601</u>	Decal, Tow/Run Switch Warning	1
4	<u>101931501</u>	Decal, Component Cover	1
5	<u>101959902</u>	Decal, IQ System Motor Braking	1
6	<u>102459301</u>	Decal, Bed Crush Area Warning	1

3
G
E

⚠ WARNING

GASOLINE EXPLOSION / FIRE.

- Can cause severe injury or death.
- No smoking, sparks, or open flame.
- Stop engine, allow to cool before refueling.
- Turn fuel valve (←) on during operation. (→) off during storage or transport.

CCI 101547601

⚠ WARNING


CAN CAUSE SEVERE INJURY

Rotating parts

HOT manifold & muffler

KEEP CLEAR

CCI 101960501

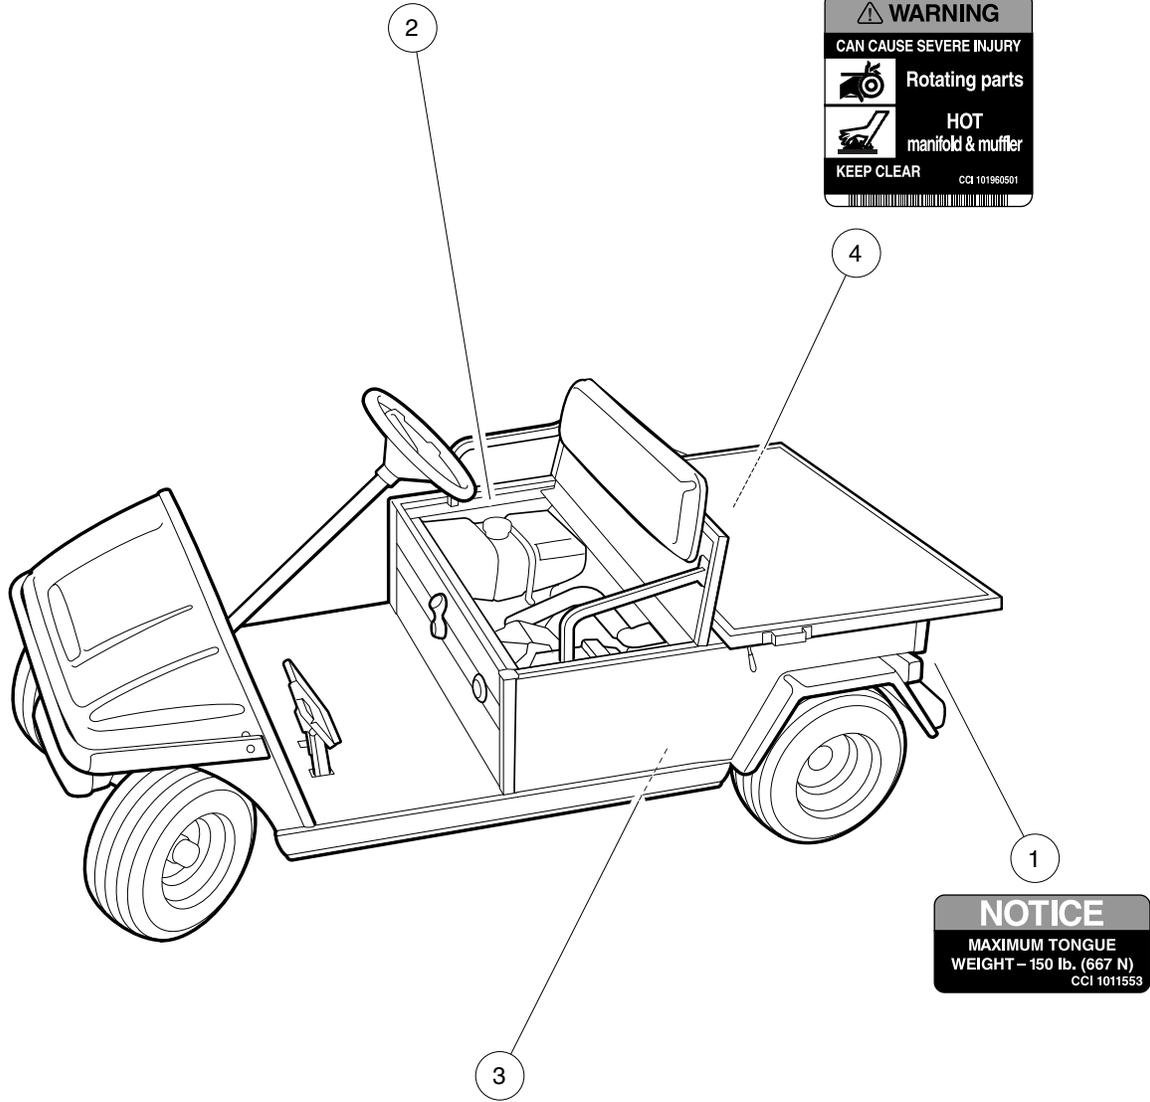

NOTICE

MAXIMUM TONGUE WEIGHT - 150 lb. (667 N)

CCI 1011553

	<p>⚠ WARNING</p> <p>Negative frame ground. Can cause severe injury. Do not contact positive (+) battery post or cable to frame. Disconnect negative battery cable first.</p>		<p>⚠ WARNING</p> <p>Excessive speed can cause severe injury or death. Do not tamper with engine governor adjustment.</p> <p>CCI 101915201</p>
--	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--	------------------------------------------------------------------------------------------------------------------------------------------------------

000273-001

DECALS – TURF/CARRYALL 1 GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011553</u>	Decal, Trailer Hitch	1
2	<u>101547601</u>	Decal, Gasoline Explosion/Fire Warning	1
3	<u>101915201</u>	Decal, Frame Ground and Governor Warning	1
4	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	2

3
G
E

3
G
E

⚠ WARNING
ROLLOVER OR FALLING OFF MAY CAUSE DEATH.

- Before using vehicle, read operating instructions.
- Remain seated and hold on to seat handle while moving.
- Do not start vehicle until all occupants are seated.
- Two (2) persons per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not leave children unattended on vehicle.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Never stand in front of or behind vehicle.


CCI 101960501

⚠ WARNING
CRUSH AREA



STAY CLEAR
CCI 1016094-01

OFF | ON

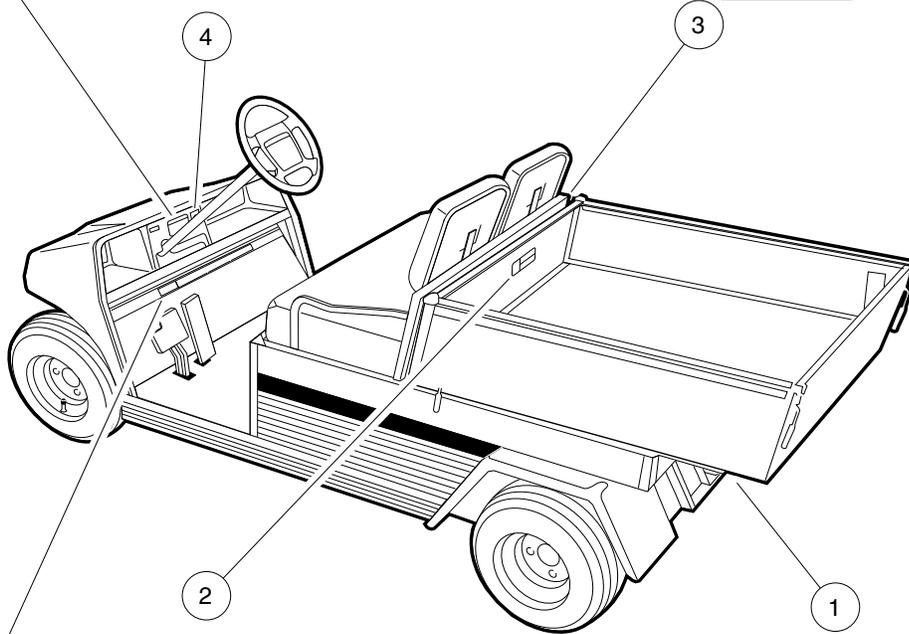

⚠ WARNING
Riding in cargo bed can cause severe injury or death. Do not ride in cargo bed.



CCI 1015539-01

NOTICE
MAXIMUM TONGUE WEIGHT - 150 lb. (667 N)
CCI 1011553

VEHICLE LOADING
Read Owner's Manual and warnings on dash.

- Vehicle rated capacity - 1200 lbs., on level surface only. Weight to include passengers, cargo bed load, and gross trailer weight. See Owner's Manual.
- Maximum cargo load - 800 lbs. Weight to include cargo bed load and gross trailer weight.
- Maximum trailer hitch tongue weight - 150 lbs.
- Cargo should be evenly spread over the floor of the cargo bed as far forward as possible and secured.
- For vehicle stability, when fully loaded, drive slowly and avoid stopping on or backing down steep hills.
- Avoid top heavy loads. See Owner's Manual.
- When driving on uneven terrain or down steep hills, reduce speed and load.

CCI 101960201

000274-002

DECALS – TURF/CARRYALL 2 GASOLINE AND ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011553</u>	Decal, Trailer Hitch	1
2	<u>101553901</u>	Decal, Bed Load Warning	1
3	<u>101609401</u>	Decal, Crush Area Warning	2
4	<u>101825101</u>	Decal, Off/On	1
5	<u>101960201</u>	Decal, Vehicle Loading	1
6	101960601	Decal, Dash Warning	1

3
G
E

OPERATING INSTRUCTIONS

- Read owner's manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.

TO OPERATE

- Turn wheels to desired direction and ensure path is clear.
- Turn key to ON position.
- While stopped, place shift lever in desired position:
F – Forward N – Neutral R – Reverse (Buzzer will sound)
- Park brake will release and vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and press brake pedal.

BEFORE LEAVING

- Press park brake pedal until it locks and holds vehicle.
- Place Forward/Reverse switch in NEUTRAL position.
- Turn key OFF and remove key when not in use.

CCI 102519201

WARNING

GASOLINE EXPLOSION / FIRE.

- Can cause severe injury or death.
- No smoking, sparks, or open flame.
- Stop engine, allow to cool before refueling.
- Turn fuel valve (←) on during operation. (→) off during storage or transport.

CCI 101547601

WARNING


CAN CAUSE SEVERE INJURY

Rotating parts

HOT manifold & muffler

KEEP CLEAR

CCI 101960501

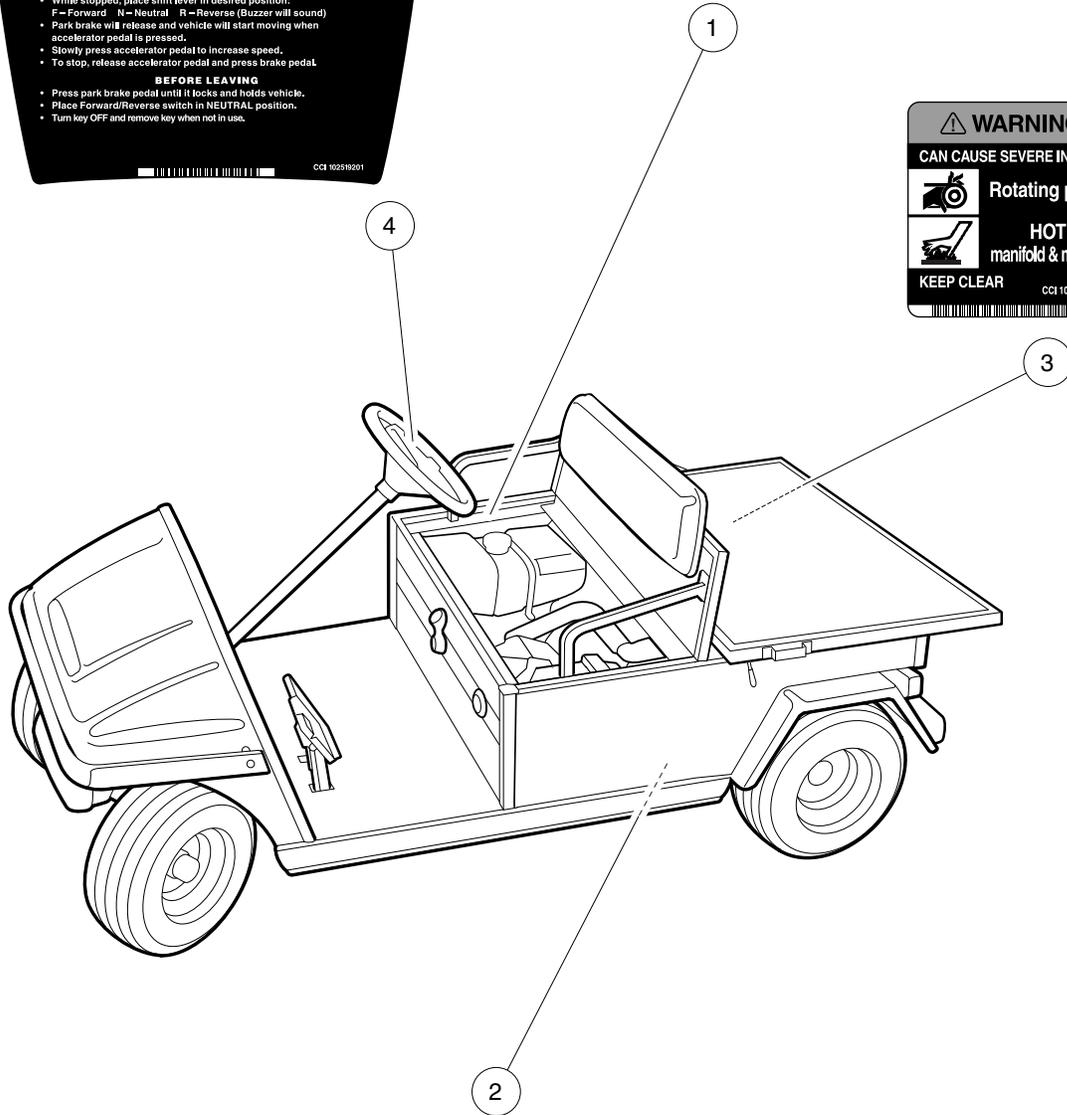

	<p>WARNING</p> <p>Negative frame ground. Can cause severe injury. Do not contact positive (+) battery post or cable to frame. Disconnect negative battery cable first.</p>		<p>WARNING</p> <p>Excessive speed can cause severe injury or death. Do not tamper with engine governor adjustment.</p>
--	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--	-------------------------------------------------------------------------------------------------------------------------------

CCI 101915201

000276-002

DECALS – TURF/CARRYALL 2 GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101547601</u>	Decal, Gasoline Explosion/Fire Warning	1
2	<u>101915201</u>	Decal, Frame Ground and Governor Warning	1
3	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	2
4	<u>102519201</u>	Decal, Operating Instr, Gas	1

3
G
E

**3
G
E**

OPERATING INSTRUCTIONS

- Read owner's manual and dash-mounted safety warnings prior to driving.
- Study and understand controls.

TO OPERATE

- Turn wheels to desired direction and ensure path is clear.
- Turn key to ON position.
- While stopped, place Forward/Reverse switch in desired position: F=Forward N=Neutral R=Reverse (Buzzer will sound)
- Park brake will release and vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and press brake pedal.

BEFORE LEAVING

- Press park brake pedal until it locks and holds vehicle.
- Place Forward/Reverse switch in NEUTRAL position.
- Turn key OFF and remove key when not in use.

MOTOR BRAKING

- Electric motor braking provides speed regulation functions.
- For parked vehicle, beeping alarm indicates vehicle roll away.
- In operation, beeping alarm indicates reduction in motor braking.
- Apply brakes to further reduce vehicle speed as required.
- System is activated only when tow switch is in the RUN position.
- When towing this vehicle, tow switch must be in the TOW position.

CC1 102518001

⚠ DANGER / POISON

SHIELD EYES


EXPLOSIVE GASES CAN CAUSE BURNING OR BLINDNESS

NO SPARKS
• FLAMES
• SMOKING

SULFURIC ACID CAN CAUSE BLINDNESS OR SEVERE BURNS

FLUSH EYES IMMEDIATELY WITH WATER (SEE MEDICAL HELP FIRST)

KEEP OUT OF THE REACH OF CHILDREN - DO NOT TIP - KEEP VENT CAPS TIGHT AND LEVEL

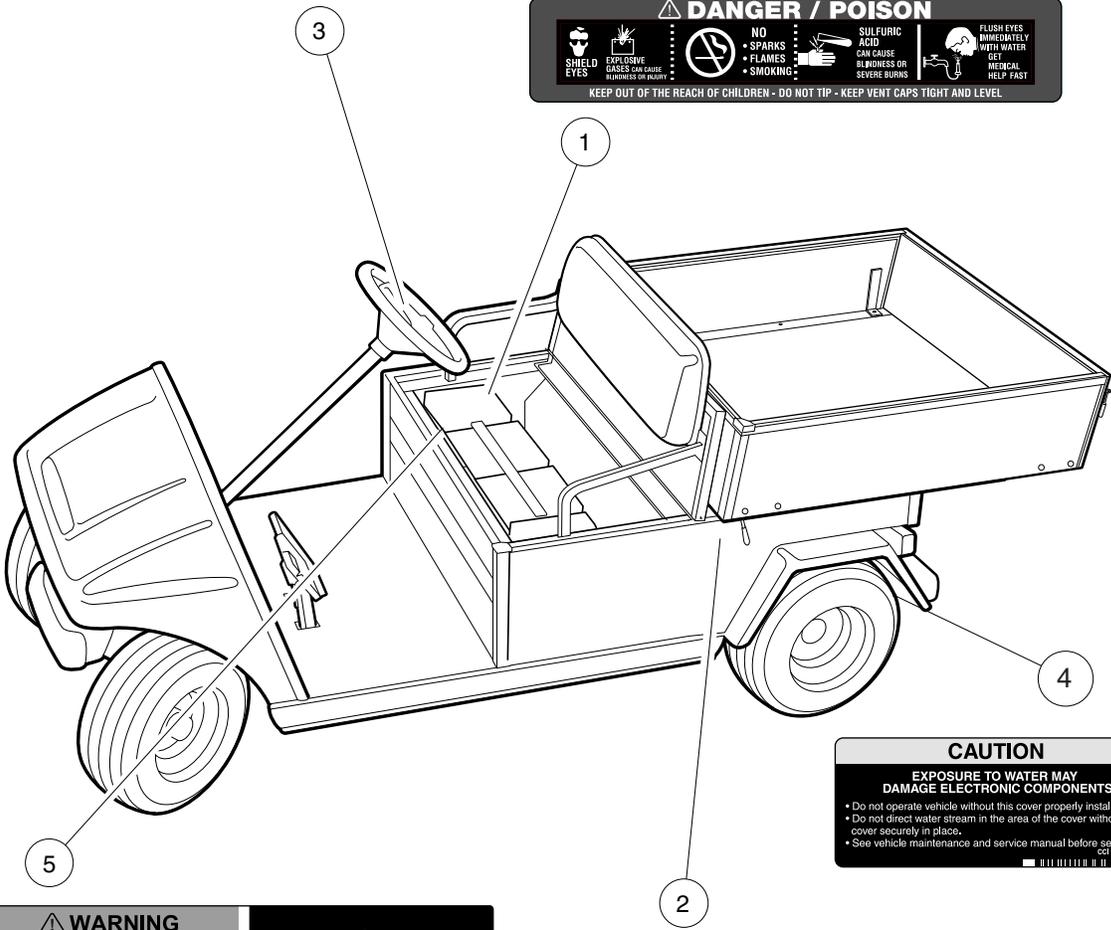

CAUTION

EXPOSURE TO WATER MAY DAMAGE ELECTRONIC COMPONENTS

- Do not operate vehicle without this cover properly installed.
- Do not direct water stream in the area of the cover without cover securely in place.
- See vehicle maintenance and service manual before servicing.

CC1 102518001

⚠ WARNING

BATTERY EXPLOSION COULD RESULT IN SEVERE PERSONAL INJURY.

- Do not store items in battery compartment.
- Place Run/Tow switch in TOW position before:
 - Disconnecting or connecting battery cables
 - Towing this vehicle
 - Extended storage
 - Servicing the vehicle

NORMAL

TOW

RUN

CC1 102845101

LATCH

/

OPEN

▶

⚠ WARNING

Crush area. Can cause severe injury. Stay clear when closing bed.

CC1 102459301

000275-002

DECALS – TURF/CARRYALL 2 IQ PLUS ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013677</u>	Decal, Battery Danger	6
2	<u>102459301</u>	Decal, Bed Crush Area Warning	1
3	<u>102518001</u>	Decal, Operating Instr, Elec	1
4	<u>102518301</u>	Decal, Caution, Electrical Component Cover	1
5	<u>102845101</u>	Decal, Tow Switch	1

3
G
E

⚠ WARNING

ROLLOVER OR FALLING OFF MAY CAUSE DEATH.

- Before using vehicle, read operating instructions.
- Remain seated and hold on to seat handle while moving.
- Do not start vehicle until all occupants are seated.
- Two (2) persons per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not leave children unattended on vehicle.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Never stand in front of or behind vehicle.

CCI 101960601

OPERATING INSTRUCTIONS

- Read Owner's Manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.

TO START ENGINE

- Place shift lever in "N" - Neutral position.
- Depress brake pedal.
- Turn key switch to "START" position and release.


TO OPERATE VEHICLE

- Make sure wheels are turned in desired direction.
- Be sure nothing is in your path.
- While vehicle is stopped, and engine is at idle, select vehicle direction by placing shift lever or switch in desired position.
- F - Forward N - Neutral R - Reverse (Buzzer will sound)
- Park brake will release when accelerator pedal is pushed.
- Slowly push accelerator pedal to increase speed.
- Engine must be at idle before moving shift lever.

TO STOP VEHICLE

- Release accelerator pedal and push brake pedal.
- After stopping, firmly push park brake until it locks.
- Turn key to "OFF" position, remove key and place shift lever in straight up neutral position when not in use.

CCI 101693201

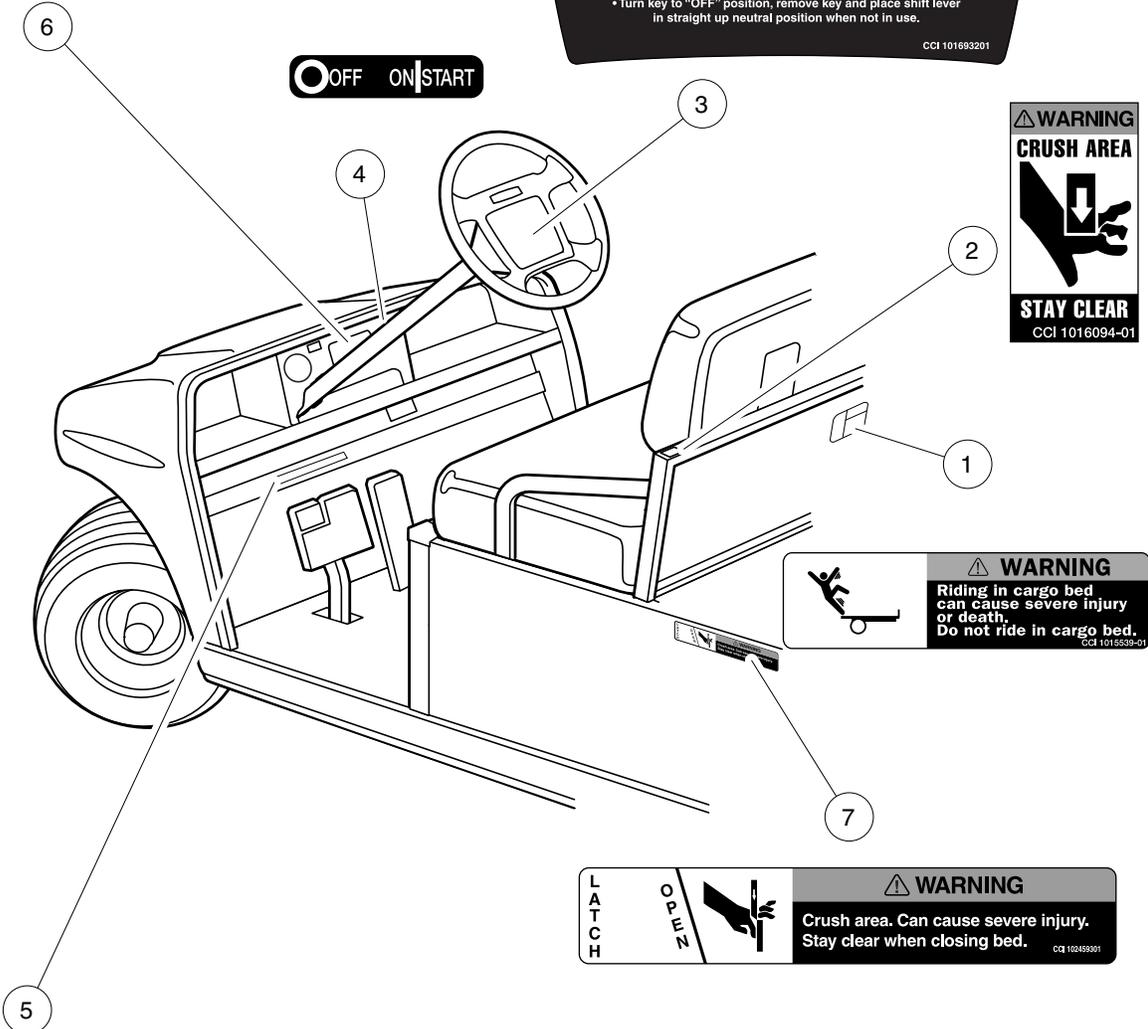

⚠ WARNING

CRUSH AREA

STAY CLEAR

CCI 1016094-01

⚠ WARNING

Riding in cargo bed can cause severe injury or death. Do not ride in cargo bed.

CCI 1015533-01

LATCH OPEN

⚠ WARNING

Crush area. Can cause severe injury. Stay clear when closing bed.

CCI 102459301

VEHICLE LOADING

Read Owner's Manual and warnings on dash.

- Vehicle rated capacity - 1200 lbs. on level surface only. Weight to include passengers, cargo bed load, and gross trailer weight. See Owner's Manual.
- Maximum cargo load - 800 lbs. Weight to include cargo bed load and gross trailer weight.
- Maximum trailer hitch tongue weight - 150 lbs.

- Cargo should be evenly spread over the floor of the cargo bed as far forward as possible and secured.
 - For vehicle stability, when fully loaded, drive slowly and avoid stopping on or backing down steep hills.
 - Avoid top heavy loads. See Owner's Manual.
 - When driving on uneven terrain or down steep hills, reduce speed and load.
- CCI 101960201

000277-001

DECALS – CARRYALL 2 PLUS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101553901</u>	Decal, Bed Load Warning	1
2	<u>101609401</u>	Decal, Crush Area Warning	2
3	<u>101693201</u>	Decal, Operating Instructions, Key-Start	1
4	<u>101825102</u>	Decal, Off/On/Start	1
5	<u>101960201</u>	Decal, Vehicle Loading	1
6	<u>101960601</u>	Decal, Dash Warning	1
7	<u>102459301</u>	Decal, Bed Crush Area Warning	1

3
G
E

⚠ WARNING

GASOLINE EXPLOSION / FIRE.

- Can cause severe injury or death.
- No smoking, sparks, or open flame.
- Stop engine, allow to cool before refueling.
- Turn fuel valve (←) on during operation, (→) off during storage or transport.

CCI 101547601

⚠ WARNING


CAN CAUSE SEVERE INJURY

Rotating parts

HOT manifold & muffler

KEEP CLEAR

CCI 101960501

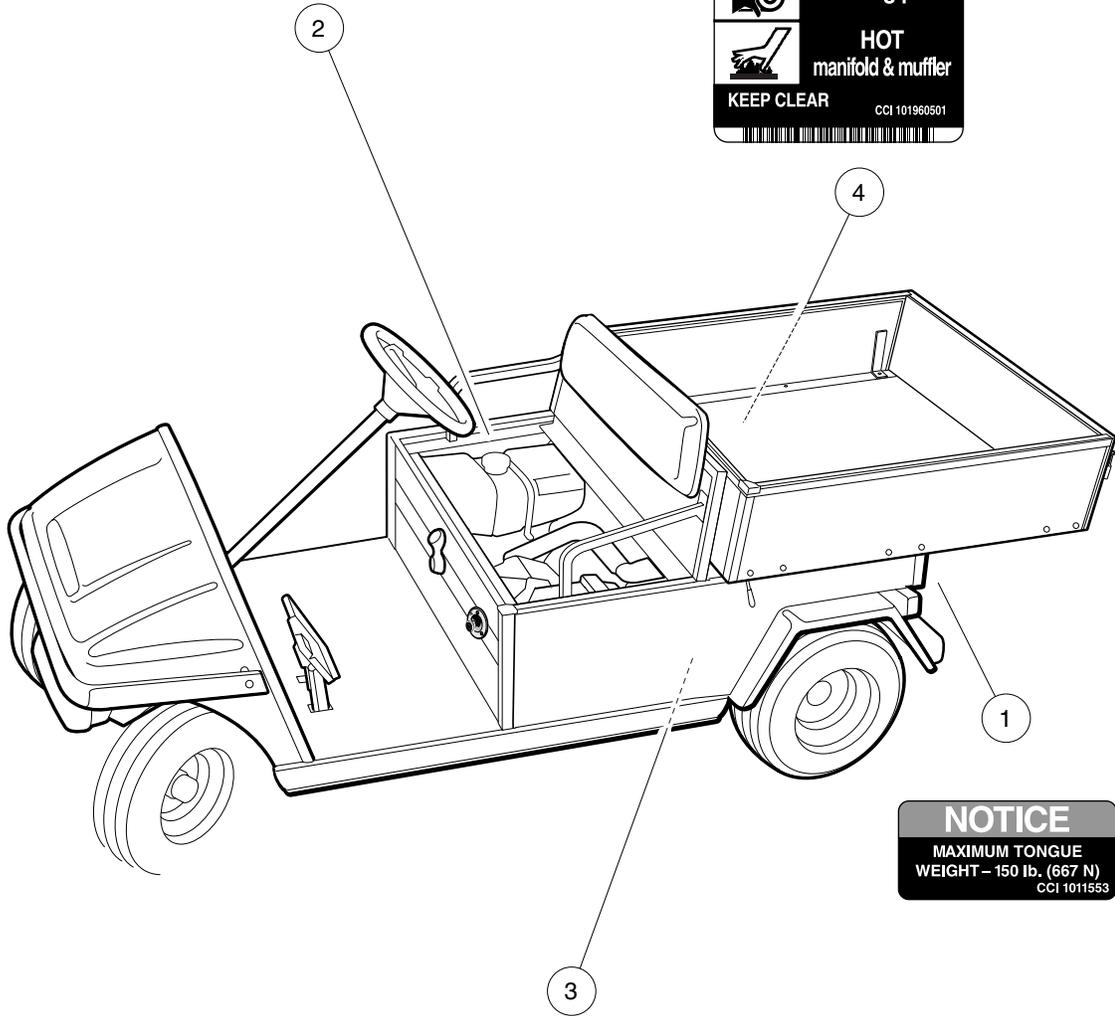

NOTICE

MAXIMUM TONGUE WEIGHT – 150 lb. (667 N)

CCI 1011553

	<p>⚠ WARNING</p> <p>Negative frame ground. Can cause severe injury. Do not contact positive (+) battery post or cable to frame. Disconnect negative battery cable first.</p>		<p>⚠ WARNING</p> <p>Excessive speed can cause severe injury or death. Do not tamper with engine governor adjustment.</p> <p>CCI 101915201</p>
--	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--	------------------------------------------------------------------------------------------------------------------------------------------------------

000278-001

DECALS – CARRYALL 2 PLUS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011553</u>	Decal, Trailer Hitch	1
2	<u>101547601</u>	Decal, Gasoline Explosion/Fire Warning	1
3	<u>101915201</u>	Decal, Frame Ground and Governor Warning	1
4	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	2

3
G
E

⚠ WARNING
ROLLOVER OR FALLING OFF MAY CAUSE DEATH.


- Before using vehicle, read operating instructions.
- Remain seated and hold on to seat handle while moving.
- Do not start vehicle until all occupants are seated.
- Two (2) persons per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not leave children unattended on vehicle.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Never stand in front of or behind vehicle.

CCI 101960601

⚠ WARNING
CRUSH AREA



STAY CLEAR
CCI 1016094-01

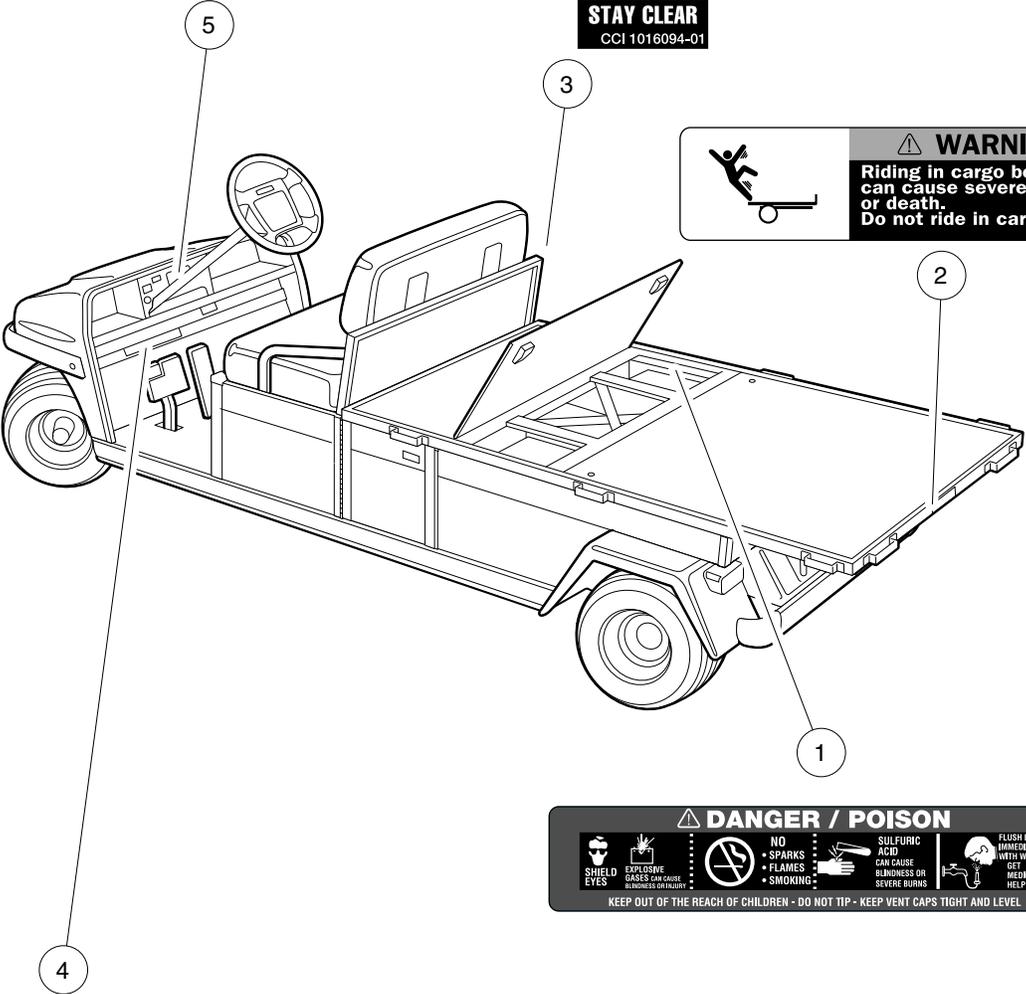

⚠ WARNING
Riding in cargo bed can cause severe injury or death. Do not ride in cargo bed.
CCI 1015639-01



⚠ DANGER / POISON

 SHIELD EYES	 EXPLOSIVE GASES CAN CAUSE BLINDNESS OR INJURY	 NO SPARKS • FLAMES • SMOKING	 SULFURIC ACID CAN CAUSE BLINDNESS OR SEVERE BURNS	 FLUSH EYES IMMEDIATELY WITH WATER GET MEDICAL HELP FAST
-------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------

KEEP OUT OF THE REACH OF CHILDREN - DO NOT TIP - KEEP VENT CAPS TIGHT AND LEVEL

VEHICLE LOADING
Read owner's manual and warnings on dash.

- Vehicle rated capacity - 1500 lb on level surface only. Weight to include passengers, cargo bed load, and gross trailer weight. See owner's manual.
- Maximum cargo load CARRYALL 6 or TURF 6 - 1000 lb, TRANSPORTER - 300 lb. Weight to include cargo bed load and gross trailer weight.
- Maximum trailer hitch tongue weight - 150 lbs.

- Cargo should be evenly spread over the floor of the cargo bed as far forward as possible and secured.
 - For vehicle stability, when fully loaded, drive slowly and avoid stopping on or backing down steep hills.
 - Avoid top heavy loads. See owner's manual.
 - When driving on uneven terrain or down steep hills, reduce speed and load.
- CCI 101960001

000279-001

DECALS – CARRYALL 6 POWERDRIVE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013677</u>	Decal, Battery Danger	6
2	<u>101553901</u>	Decal, Bed Load Warning	1
3	<u>101609401</u>	Decal, Crush Area Warning	2
4	<u>101960001</u>	Decal, Vehicle Loading	1
5	101960601	Decal, Dash Warning	1

3
G
E

OPERATING INSTRUCTIONS

- Read owner's manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.


TO OPERATE

- Turn wheels to desired direction and ensure path is clear.
- Turn key to **ON** position.
- While stopped, place shift lever in desired position:
F = Forward **N** = Neutral **R** = Reverse (Buzzer will sound)
- Park brake will release and vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and press brake pedal.

BEFORE LEAVING

- Press park brake pedal until it locks and holds vehicle.
- Place Forward/Reverse switch in **NEUTRAL** position.
- Turn key **OFF** and remove key when not in use.

CCI 10259201

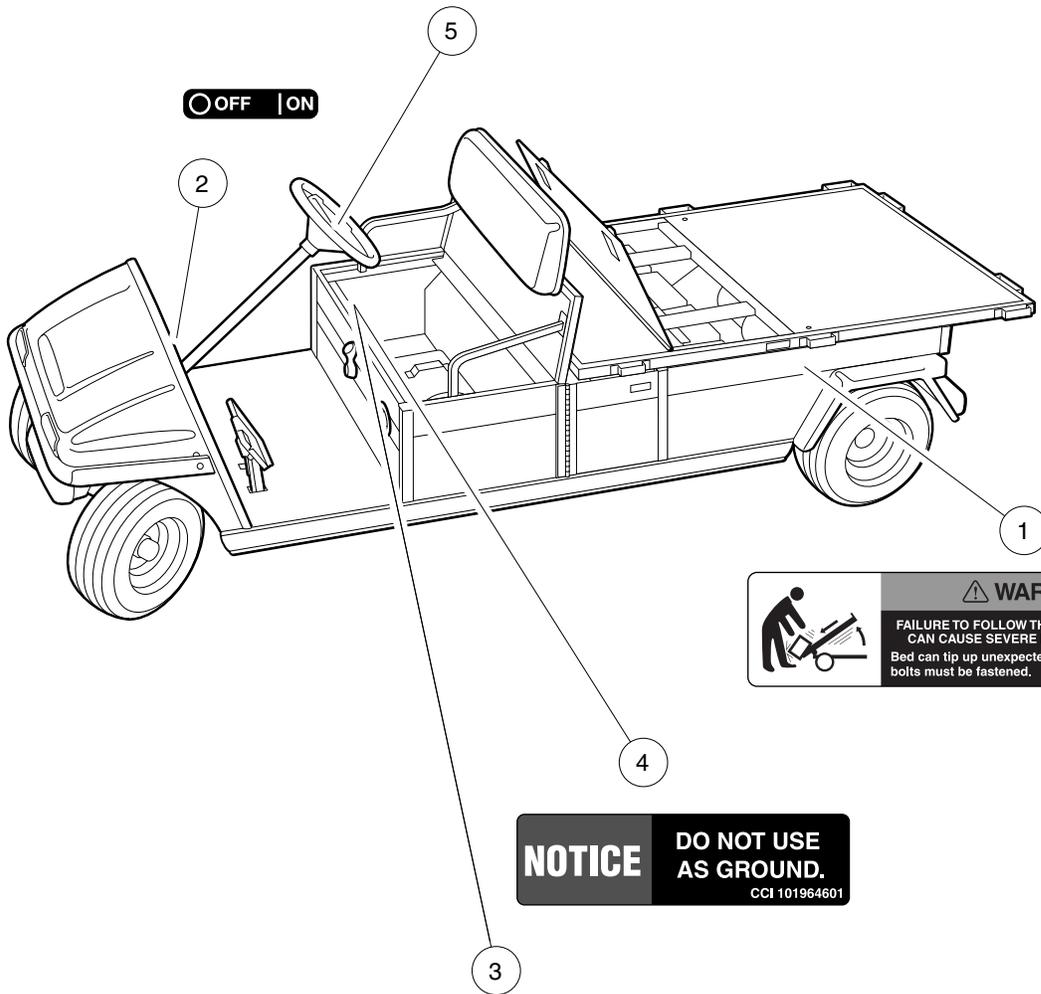

⚠ WARNING

FAILURE TO FOLLOW THESE INSTRUCTIONS
CAN CAUSE SEVERE INJURY OR DEATH.
Bed can tip up unexpectedly. Bed hold down
bolts must be fastened.

CCI 101707801

NOTICE **DO NOT USE
AS GROUND.**

CCI 101964601

NOTICE

Do not operate vehicle without this cover properly installed.
Do not direct water stream in this area; will cause damage to components.
See vehicle maintenance and service manual before servicing.

CCI 101931501

000280-001

DECALS – CARRYALL 6 POWERDRIVE VEHICLES, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101707801	Decal, Bed Hold-Down Bolts	1
2	<u>101825101</u>	Decal, Off/On	1
3	<u>101931501</u>	Decal, Component Cover	1
4	<u>101964601</u>	Decal, No Ground Warning	1
5	<u>102519201</u>	Decal, Operating Instr, Gas	1

3

G

E

⚠ WARNING
ROLLOVER OR FALLING OFF MAY CAUSE DEATH.


- Before using vehicle, read operating instructions.
- Remain seated and hold on to seat handle while moving.
- Do not start vehicle until all occupants are seated.
- Two (2) persons per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not leave children unattended on vehicle.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Never stand in front of or behind vehicle.

CCI 101960601

⚠ WARNING
CRUSH AREA



STAY CLEAR
CCI 1016094-01

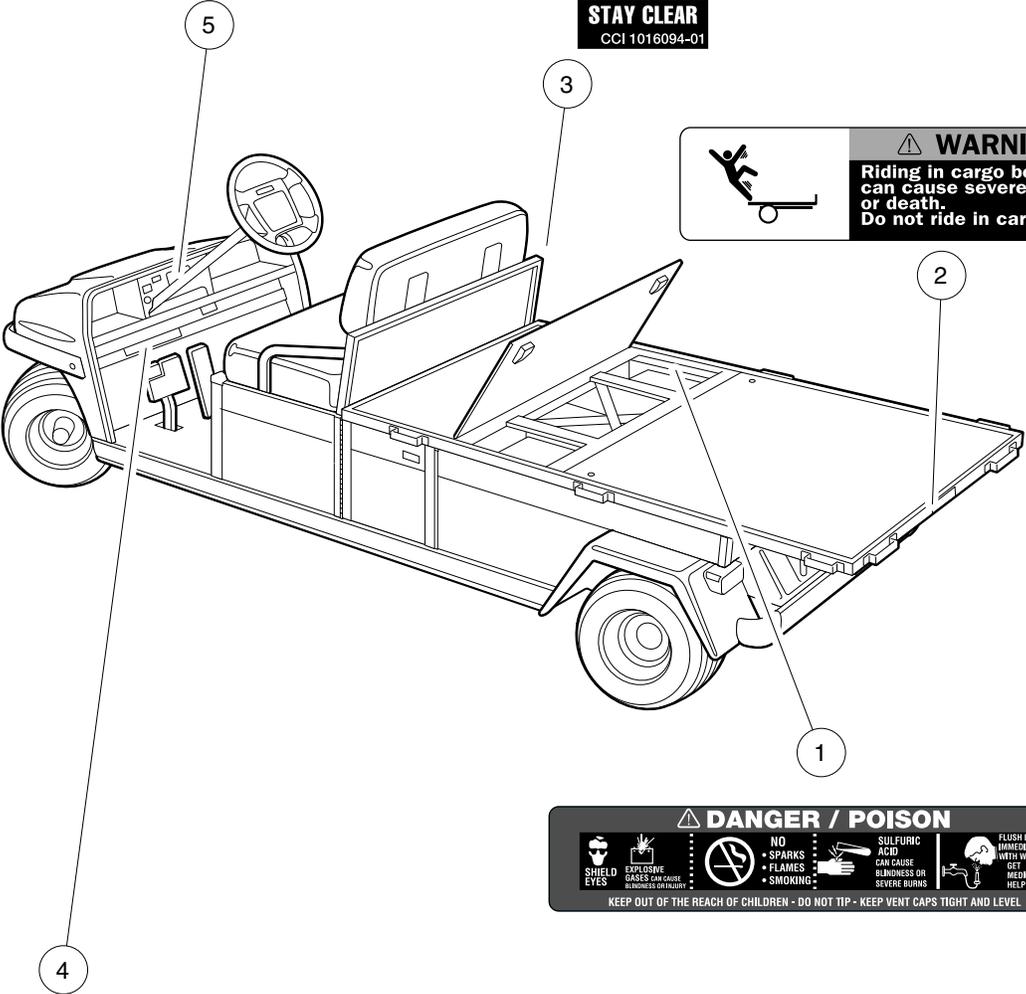

⚠ WARNING
Riding in cargo bed can cause severe injury or death. Do not ride in cargo bed.
CCI 1015639-01



⚠ DANGER / POISON

 SHIELD EYES	 EXPLOSIVE GASES CAN CAUSE BLINDNESS OR INJURY	 NO SPARKS • FLAMES • SMOKING	 SULFURIC ACID CAN CAUSE BLINDNESS OR SEVERE BURNS	 FLUSH EYES IMMEDIATELY WITH WATER GET MEDICAL HELP FAST
-------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------

KEEP OUT OF THE REACH OF CHILDREN - DO NOT TIP - KEEP VENT CAPS TIGHT AND LEVEL

VEHICLE LOADING
Read owner's manual and warnings on dash.

- Vehicle rated capacity - 1500 lb on level surface only. Weight to include passengers, cargo bed load, and gross trailer weight. See owner's manual.
- Maximum cargo load CARRYALL 6 or TURF 6 - 1000 lb, TRANSPORTER - 300 lb. Weight to include cargo bed load and gross trailer weight.
- Maximum trailer hitch tongue weight - 150 lbs.

- Cargo should be evenly spread over the floor of the cargo bed as far forward as possible and secured.
 - For vehicle stability, when fully loaded, drive slowly and avoid stopping on or backing down steep hills.
 - Avoid top heavy loads. See owner's manual.
 - When driving on uneven terrain or down steep hills, reduce speed and load.
- CCI 101960001

000279-001

DECALS – CARRYALL 6 IQ PLUS VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013677</u>	Decal, Battery Danger	8
2	<u>101553901</u>	Decal, Bed Load Warning	1
3	<u>101609401</u>	Decal, Crush Area Warning	2
4	<u>101960001</u>	Decal, Vehicle Loading	1
5	101960601	Decal, Dash Warning	1

3
G
E

OPERATING INSTRUCTIONS

- Read owner's manual and dash-mounted safety warnings prior to driving.
- Study and understand controls.

TO OPERATE

- Turn wheels to desired direction and ensure path is clear.
- Turn key to ON position.
- While stopped, place Forward/Reverse switch in desired position:
F – Forward N – Neutral R – Reverse (Buzzer will sound)
- Park brake will release and vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and press brake pedal.


BEFORE LEAVING

- Press park brake pedal until it locks and holds vehicle.
- Place Forward/Reverse switch in NEUTRAL position.
- Turn key OFF and remove key when not in use.

MOTOR BRAKING

- Electric motor braking provides speed regulation functions.
- For parked vehicle, beeping alarm indicates vehicle roll away.
- In operation, beeping alarm indicates reduction in motor braking.
- Apply brakes to further reduce vehicle speed as required.
- System is activated only when tow switch is in the RUN position.
- When towing this vehicle, tow switch must be in the TOW position.

CCI 102516001

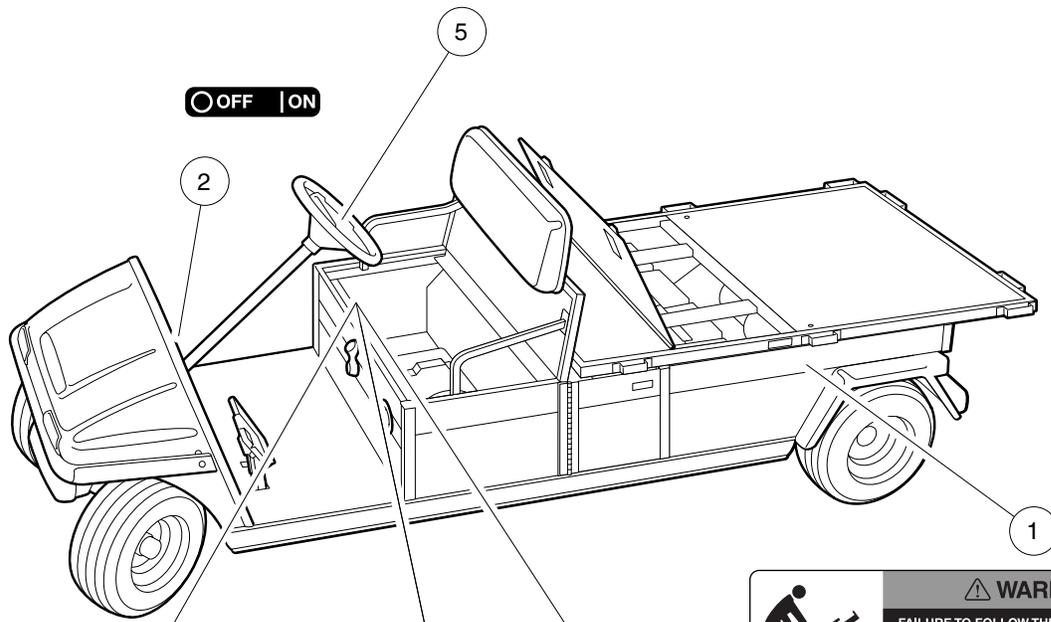

○ OFF | ON

WARNING

FAILURE TO FOLLOW THESE INSTRUCTIONS CAN CAUSE SEVERE INJURY OR DEATH. Bed can tip up unexpectedly. Bed hold down bolts must be fastened.

CCI 101707801

WARNING

BATTERY EXPLOSION COULD RESULT IN SEVERE PERSONAL INJURY.

- Do not store items in battery compartment.
- Place Run/Tow switch in TOW position before:
 - Disconnecting or connecting battery cables
 - Towing this vehicle
 - Extended storage
 - Servicing the vehicle

NORMAL	○	TRIPPED
TOW	○	RUN

CCI 102845101

NOTICE

DO NOT USE AS GROUND.

CCI 101964601

NOTICE

Do not operate vehicle without this cover properly installed. Do not direct water stream in this area; will cause damage to components. See vehicle maintenance and service manual before servicing.

CCI 101931501

000280-002

DECALS – CARRYALL 6 IQ PLUS VEHICLES, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101707801	Decal, Bed Hold-Down Bolts	1
2	<u>101825101</u>	Decal, Off/On	1
3	<u>101931501</u>	Decal, Component Cover	1
4	<u>101964601</u>	Decal, No Ground Warning	1
5	102518001	Decal, Operating Instr, Elec	1
6	<u>102845101</u>	Decal, Tow Switch	1

3
G
E

WARNING

ROLLOVER OR FALLING OFF MAY CAUSE DEATH.

- Before using vehicle, read operating instructions.
- Remain seated and hold on to seat handle while moving.
- Do not start vehicle until all occupants are seated.
- Two (2) persons per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not leave children unattended on vehicle.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Never stand in front of or behind vehicle.

CCI 101960601

WARNING

CRUSH AREA

STAY CLEAR


CCI 1016094-01

WARNING

GASOLINE EXPLOSION / FIRE.

- Can cause severe injury or death.
- No smoking, sparks, or open flame.
- Stop engine, allow to cool before refueling.
- Turn fuel valve (←) on during operation. (→) off during storage or transport.

CCI 101547601

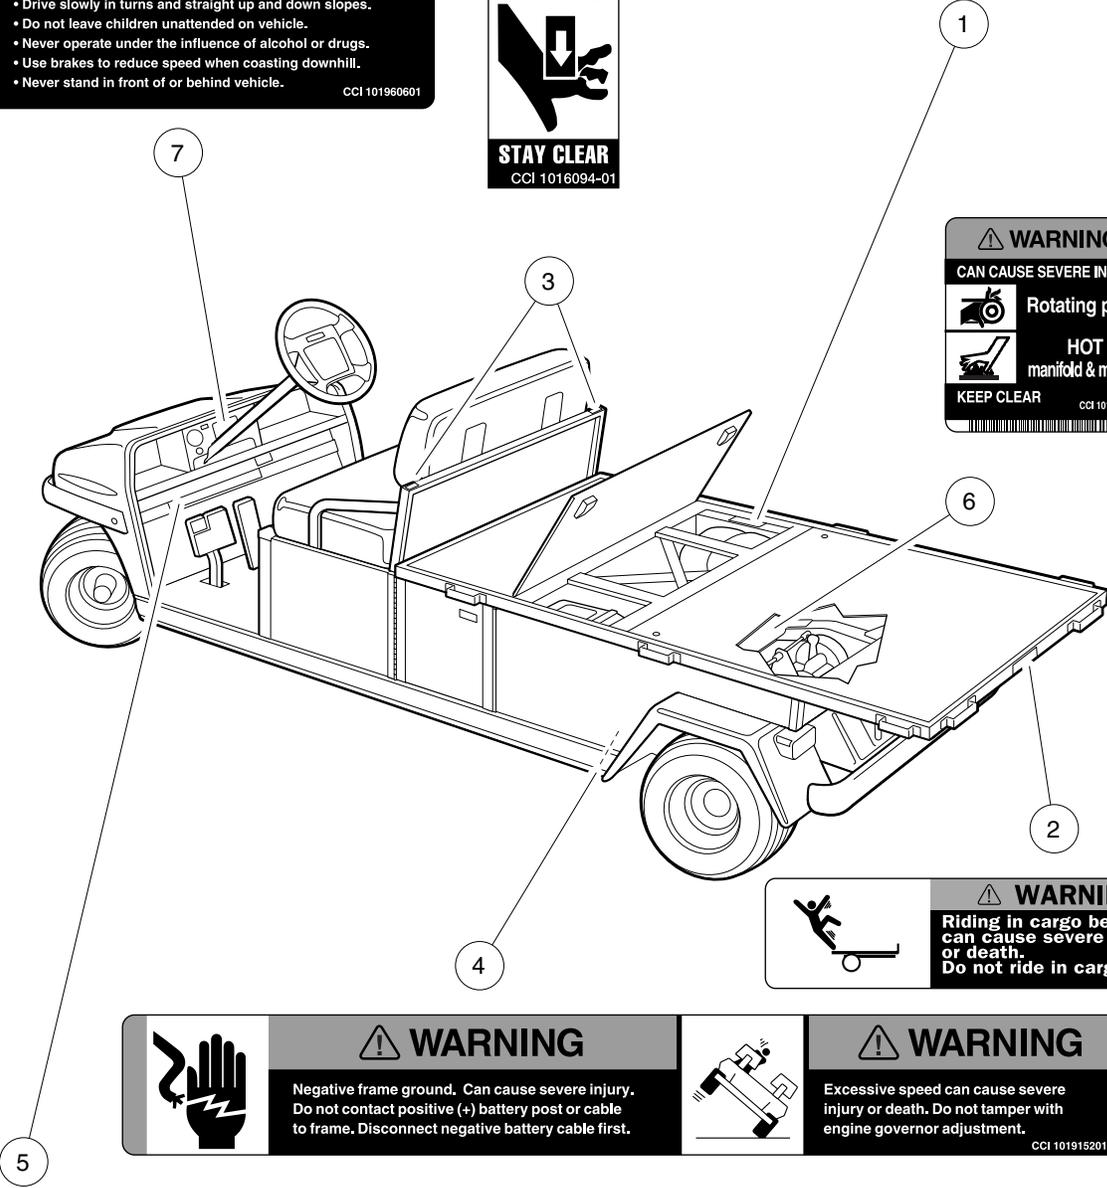

WARNING

CAN CAUSE SEVERE INJURY

Rotating parts

HOT manifold & muffler

KEEP CLEAR

CCI 101960501

WARNING

Riding in cargo bed can cause severe injury or death. Do not ride in cargo bed.

CCI 1015539-01

WARNING

Negative frame ground. Can cause severe injury. Do not contact positive (+) battery post or cable to frame. Disconnect negative battery cable first.

WARNING

Excessive speed can cause severe injury or death. Do not tamper with engine governor adjustment.

CCI 101915201

VEHICLE LOADING

Read owner's manual and warnings on dash.

- Vehicle rated capacity - 1500 lb on level surface only. Weight to include passengers, cargo bed load, and gross trailer weight. See owner's manual.
- Maximum cargo load CARRYALL 6 or TURF 6 - 1000 lb, TRANSPORTER - 300 lb. Weight to include cargo bed load and gross trailer weight.
- Maximum trailer hitch tongue weight - 150 lbs.

- Cargo should be evenly spread over the floor of the cargo bed as far forward as possible and secured.
- For vehicle stability, when fully loaded, drive slowly and avoid stopping on or backing down steep hills.
- Avoid top heavy loads. See owner's manual.
- When driving on uneven terrain or down steep hills, reduce speed and load.

CCI 101960001

000281-001

DECALS – TURF/CARRYALL 6 GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101547601</u>	Decal, Gasoline Explosion/Fire Warning	1
2	<u>101553901</u>	Decal, Bed Load Warning	1
3	<u>101609401</u>	Decal, Crush Area Warning	2
4	<u>101915201</u>	Decal, Frame Ground and Governor Warning	1
5	<u>101960001</u>	Decal, Vehicle Loading	1
6	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	2
7	101960601	Decal, Dash Warning	1

3
G
E

OPERATING INSTRUCTIONS

- Read Owner's Manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.

TO START ENGINE

- Place shift lever in "N" – Neutral position.
- Depress brake pedal.
- Turn key switch to "START" position and release.


TO OPERATE VEHICLE

- Make sure wheels are turned in desired direction.
- Be sure nothing is in your path.
- While vehicle is stopped, and engine is at idle, select vehicle direction by placing shift lever or switch in desired position.
 F – Forward N – Neutral R – Reverse (Buzzer will sound)
- Park brake will release when accelerator pedal is pushed.
- Slowly push accelerator pedal to increase speed.
- Engine must be at idle before moving shift lever.

TO STOP VEHICLE

- Release accelerator pedal and push brake pedal.
- After stopping, firmly push park brake until it locks.
- Turn key to "OFF" position, remove key and place shift lever in straight up neutral position when not in use.

CCI 101693201

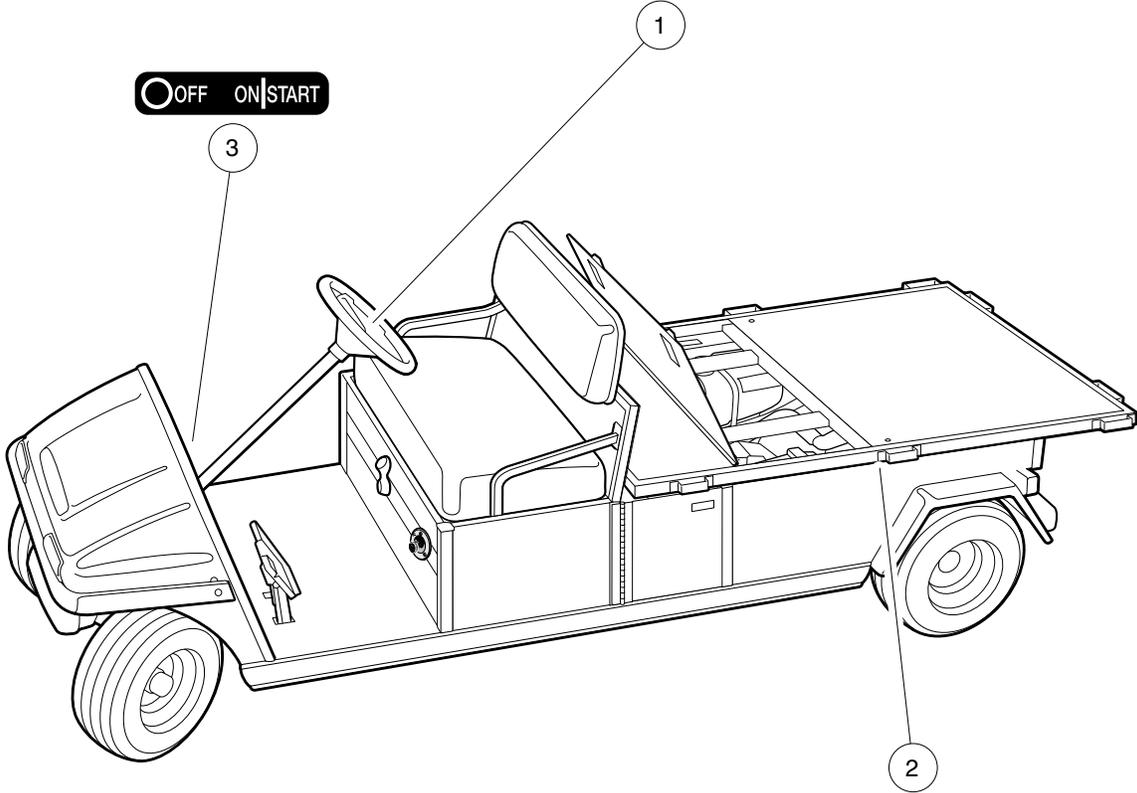

WARNING

**FAILURE TO FOLLOW THESE INSTRUCTIONS
CAN CAUSE SEVERE INJURY OR DEATH.**

Bed can tip up unexpectedly. Bed hold down bolts must be fastened.

CCI 101707801

000282-001

DECALS – CARRYALL 6 GASOLINE VEHICLES, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101693201</u>	Decal, Operating Instructions, Key-Start	1
2	101707801	Decal, Bed Hold-Down Bolts	1
3	<u>101825102</u>	Decal, Off/On/Start	1

3
G
E

OPERATING INSTRUCTIONS

- Read owner's manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.


TO OPERATE

- Turn wheels to desired direction and ensure path is clear.
- Turn key to ON position.
- While stopped, place shift lever in desired position:
F – Forward N – Neutral R – Reverse (Buzzer will sound)
- Park brake will release and vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and press brake pedal.

BEFORE LEAVING

- Press park brake pedal until it locks and holds vehicle.
- Place Forward/Reverse switch in NEUTRAL position.
- Turn key OFF and remove key when not in use.

CC1 102519201

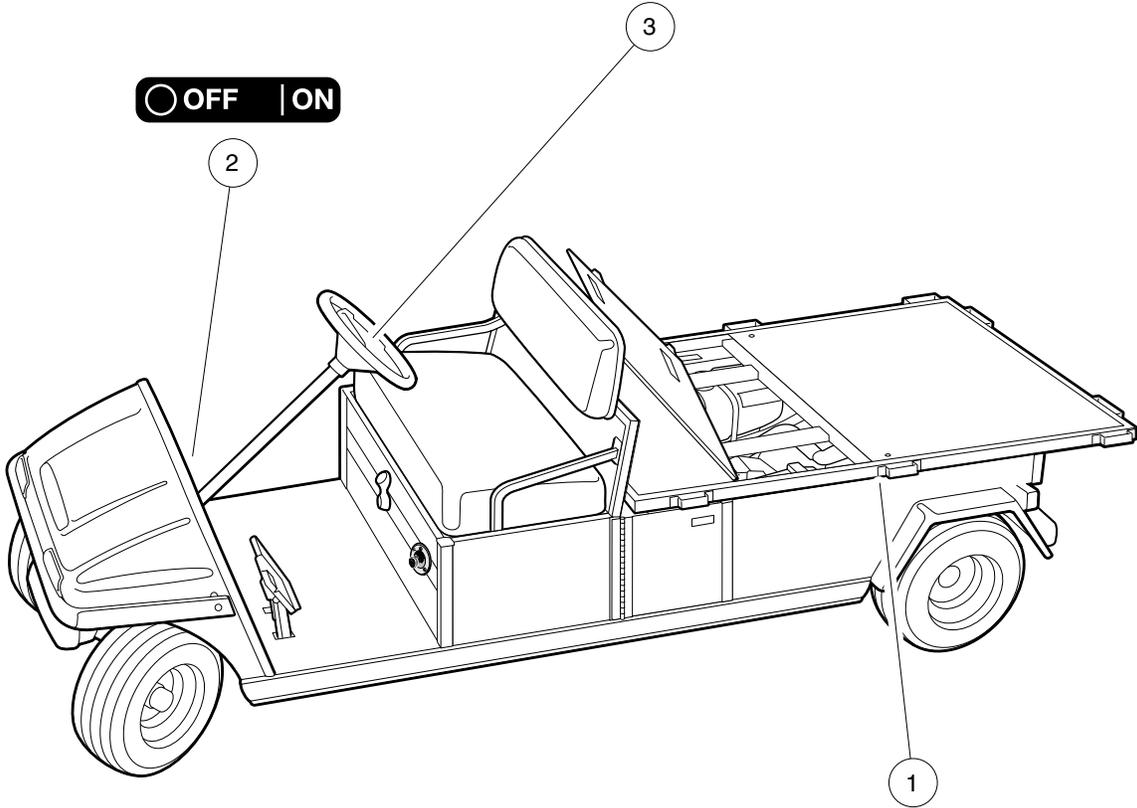

WARNING

FAILURE TO FOLLOW THESE INSTRUCTIONS CAN CAUSE SEVERE INJURY OR DEATH.
Bed can tip up unexpectedly. Bed hold down bolts must be fastened.

CC1 101707801

000282-002

DECALS – TURF 6 GASOLINE VEHICLES, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101707801	Decal, Bed Hold-Down Bolts	1
2	<u>101825101</u>	Decal, Off/On	1
3	<u>102519201</u>	Decal, Operating Instr, Gas	1

3
G
E

⚠ WARNING

ROLLOVER OR FALLING OFF MAY CAUSE DEATH.

- Before using vehicle, read operating instructions.
- Remain seated and hold on to seat handle while moving.
- Do not start vehicle until all occupants are seated.
- Two (2) persons per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not leave children unattended on vehicle.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Never stand in front of or behind vehicle.

CCI 101960601

OPERATING INSTRUCTIONS

- Read owner's manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.

TO OPERATE

- Turn wheels to desired direction and ensure path is clear.
- Turn key to ON position.
- While stopped, place shift lever in desired position:
F – Forward N – Neutral R – Reverse (Buzzer will sound)
- Park brake will release and vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and press brake pedal.

BEFORE LEAVING

- Press park brake pedal until it locks and holds vehicle.
- Place Forward/Reverse switch in NEUTRAL position.
- Turn key OFF and remove key when not in use.


CCI 10259201

⚠ WARNING

CRUSH AREA

STAY CLEAR

CCI 1016094-01

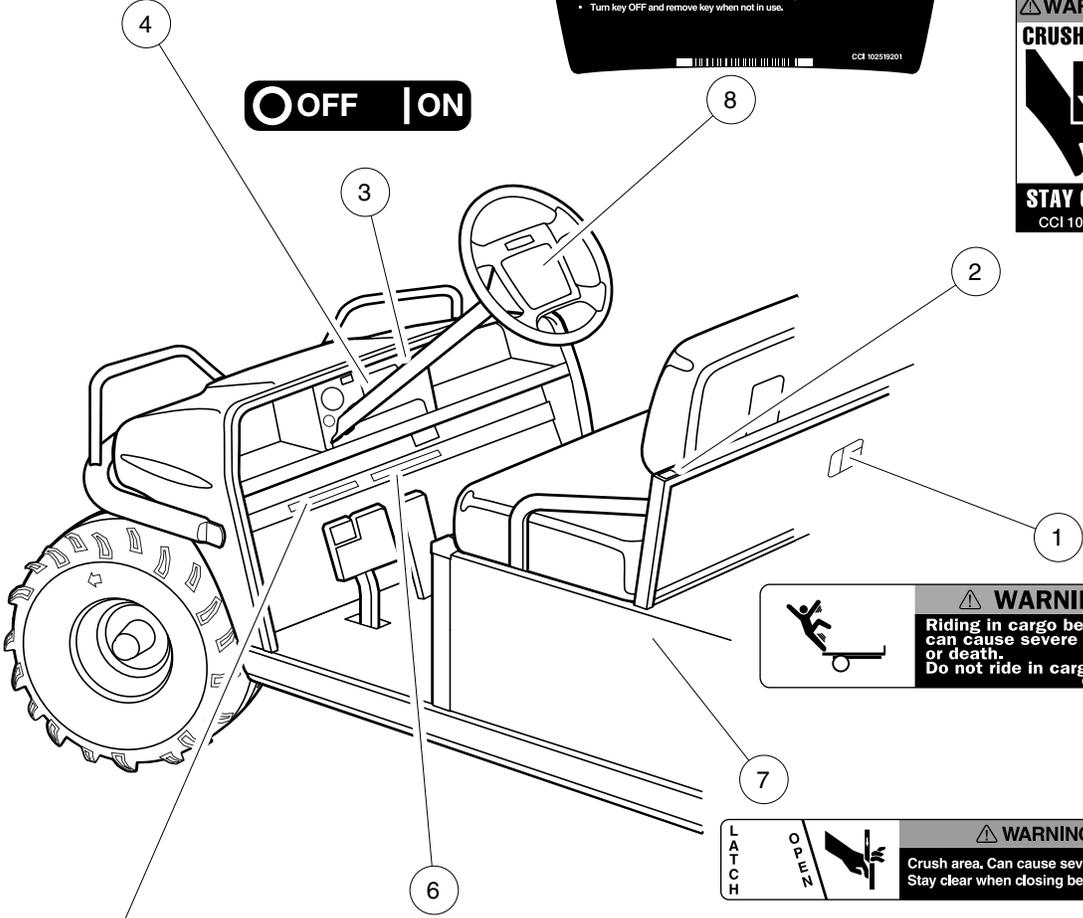

OFF | ON

⚠ WARNING

Riding in cargo bed can cause severe injury or death. Do not ride in cargo bed.

CCI 1015539-01

⚠ WARNING

Crush area. Can cause severe injury. Stay clear when closing bed.

CCI 10248501

⚠ WARNING

YOUNG DRIVERS INCREASE CHANCE OF DEATH

- Young drivers may not be able to control vehicle.
- No drivers younger than 16 years old.

CCI 102075801

VEHICLE LOADING

Read owner's manual and warnings on dash.

- Vehicle rated capacity - 900 lbs. on level surface only. Weight to include passengers, cargo bed load, and gross trailer weight. See Owner's Manual.
- Maximum cargo load - 500 lbs. Weight to include cargo bed load and gross trailer weight.
- Maximum trailer hitch tongue weight - 150 lbs.

- Cargo should be evenly spread over the floor of the cargo bed as far forward as possible and secured.
- For vehicle stability, when fully loaded, drive slowly and avoid stopping on or backing down steep hills.
- Avoid top heavy loads. See Owner's Manual.
- When driving on uneven terrain or down steep hills, reduce speed and load.

CCI 10206701

000283-001

DECALS – TURF/CARRYALL 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101553901</u>	Decal, Bed Load Warning	1
2	<u>101609401</u>	Decal, Crush Area Warning	2
3	<u>101825101</u>	Decal, Off/On	1
4	<u>101960601</u>	Decal, Dash Warning	1
5	<u>102006701</u>	Decal, Vehicle Loading	1
6	<u>102075801</u>	Decal, Young Driver Warning	1
7	<u>102459301</u>	Decal, Bed Crush Area Warning	1
8	<u>102519201</u>	Decal, Operating Instr, Gas	1

3
G
E

WARNING
GASOLINE EXPLOSION / FIRE.

- Can cause severe injury or death.
- No smoking, sparks, or open flame.
- Stop engine, allow to cool before refueling.
- Turn fuel valve (←) on during operation, (→) off during storage or transport.

CCI 101547601

WARNING
CAN CAUSE SEVERE INJURY

Rotating parts

HOT manifold & muffler


KEEP CLEAR

CCI 101960501

WARNING

Rotating Parts

CCI 102224001

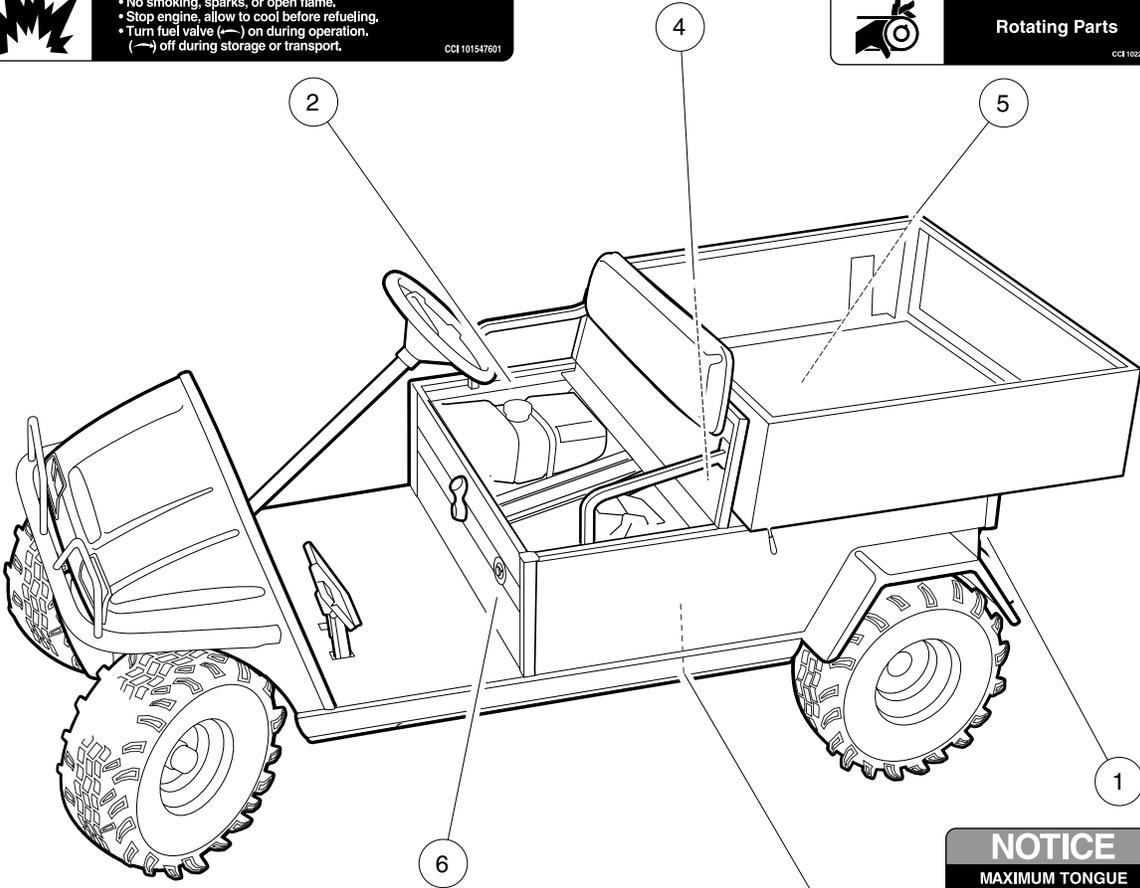

NOTICE
MAXIMUM TONGUE WEIGHT – 150 lb. (667 N)

CCI 1011553

WARNING

WINCH CABLE FRACTURE COULD RESULT IN SERIOUS INJURY OR DEATH.

- Do not use winch while persons are seated on the vehicle.
- Use remote operation switch for winch control.
- Stand to the side and away from the vehicle to operate winch.
- Read winch operator manual before operating winch.

CCI 102231601

	<p>WARNING</p> <p>Negative frame ground. Can cause severe injury. Do not contact positive (+) battery post or cable to frame. Disconnect negative battery cable first.</p>		<p>WARNING</p> <p>Excessive speed can cause severe injury or death. Do not tamper with engine governor adjustment.</p> <p>CCI 101915201</p>
--	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--	----------------------------------------------------------------------------------------------------------------------------------------------------


000284-001

DECALS – TURF/CARRYALL 252, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011553</u>	Decal, Trailer Hitch	1
2	<u>101547601</u>	Decal, Gasoline Explosion/Fire Warning	1
3	<u>101915201</u>	Decal, Frame Ground and Governor Warning	1
4	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	2
5	<u>102224001</u>	Decal, Rotating Parts Warning	1
6	<u>102231601</u>	Decal, Winch Cable Fracture Warning	1

3
G
E

LOGO DECALS

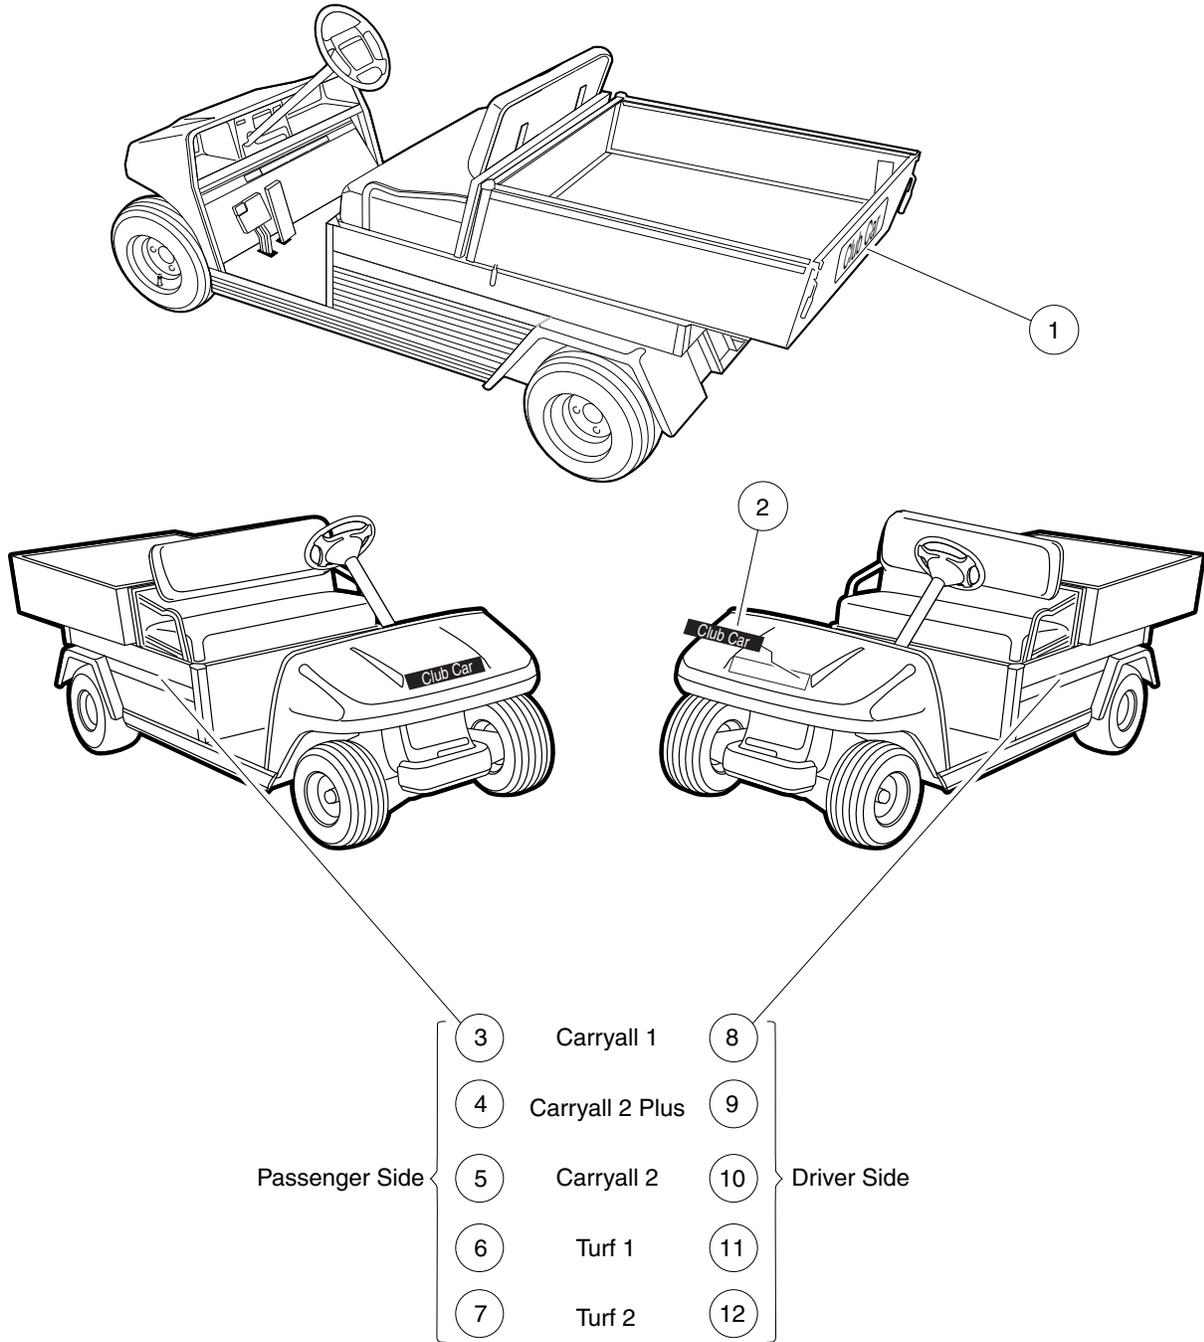


000287-002

DECALS, LOGO – TURF/CARRYALL 1, 2, AND CARRYALL 2 PLUS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013317</u>	Decal, Logo, Tailgate	1
2	<u>101670201</u>	Nameplate Kit (silver)	1
3	N/A	Decal, Carryall 1, Passenger-Side	1
4	N/A	Decal, Carryall 2 Plus, Passenger-Side	1
5	N/A	Decal, Carryall 2, Passenger-Side	1
6	N/A	Decal, Turf 1, Passenger-Side	1
7	N/A	Decal, Turf 2, Passenger-Side	1
8	N/A	Decal, Carryall 1, Driver-Side	1
9	N/A	Decal, Carryall 2 Plus, Driver-Side	1
10	N/A	Decal, Carryall 2, Driver-Side	1
11	N/A	Decal, Turf 1, Driver-Side	1
12	N/A	Decal, Turf 2, Driver-Side	1

3
G
E

LOGO DECALS

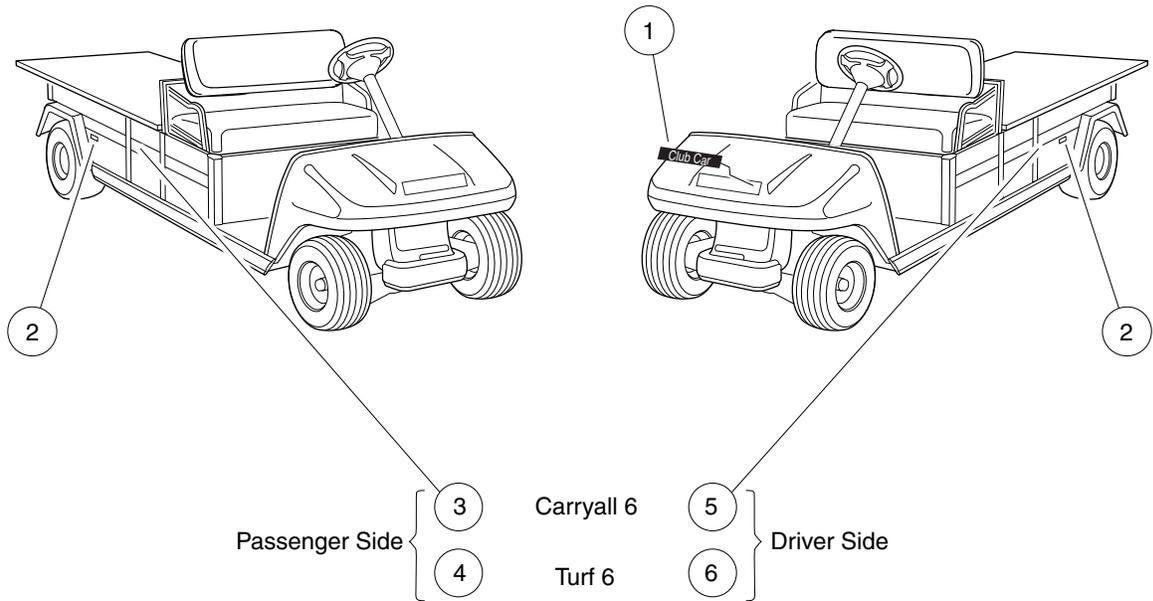

000288-001


DECALS, LOGO – TURF/CARRYALL 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101670201</u>	Nameplate Kit (silver)	1
2	<u>101921901</u>	Decal, Club Car/Ingersoll-Rand	2
3	N/A	Decal, Carryall 6, Passenger-Side	1
4	<u>102157301</u>	Decal, Turf 6, Passenger-Side	1
5	N/A	Decal, Carryall 6, Driver-Side	1
6	N/A	Decal, Turf 6, Driver-Side	1

3
G
E

3
G
E

LOGO DECALS

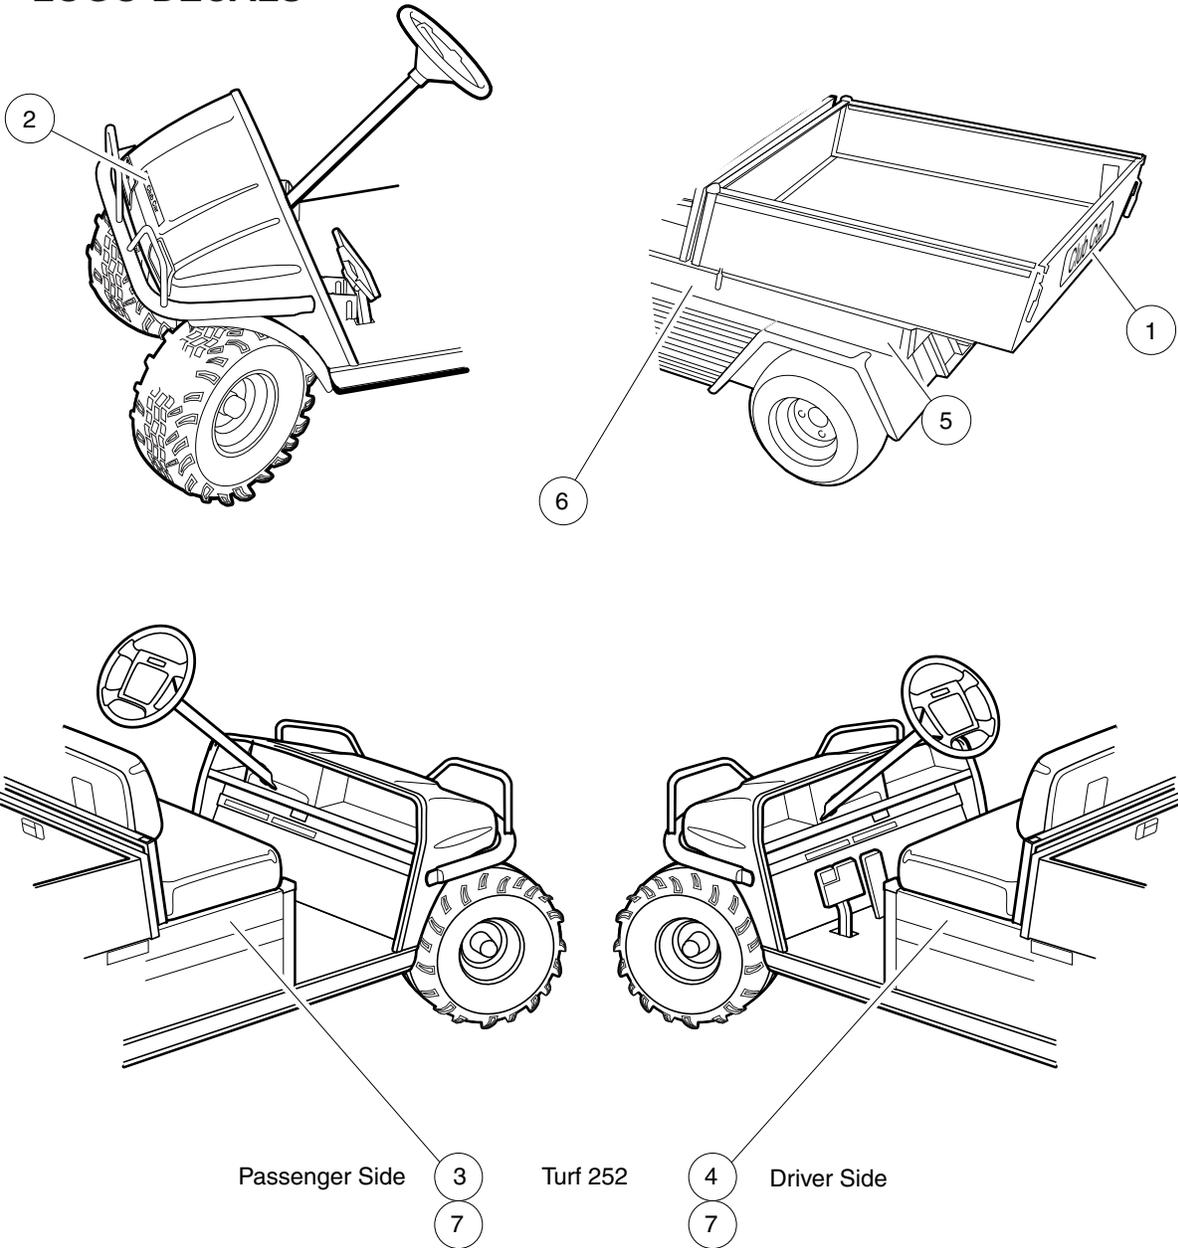

000289-002

DECALS, LOGO – TURF/CARRYALL 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013317</u>	Decal, Logo, Tailgate	1
2	<u>101670201</u>	Nameplate Kit (silver)	1
3	<u>102683201</u>	Decal, Turf 252, Passenger-Side	1
4	<u>102683301</u>	Decal, Turf 252, Driver-Side	1
5	<u>103234301</u>	Decal, Badge, IR	2
6	<u>103261301</u>	Decal Ca 252 Side Panel	2
7	<u>103284101</u>	Decal Ca2/ca2p/ca252/ca272 Bar	2

3
G
E

3

G

E



1

000422-002

LOGO DECAL – IQ PLUS VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>102842401</u>	1 2 3 4 Decal, IQ Plus	2

3
G
E

3

G

E


BRAKES, PEDAL, AND CABLE ASSEMBLIES

4

G

E

4
G
E

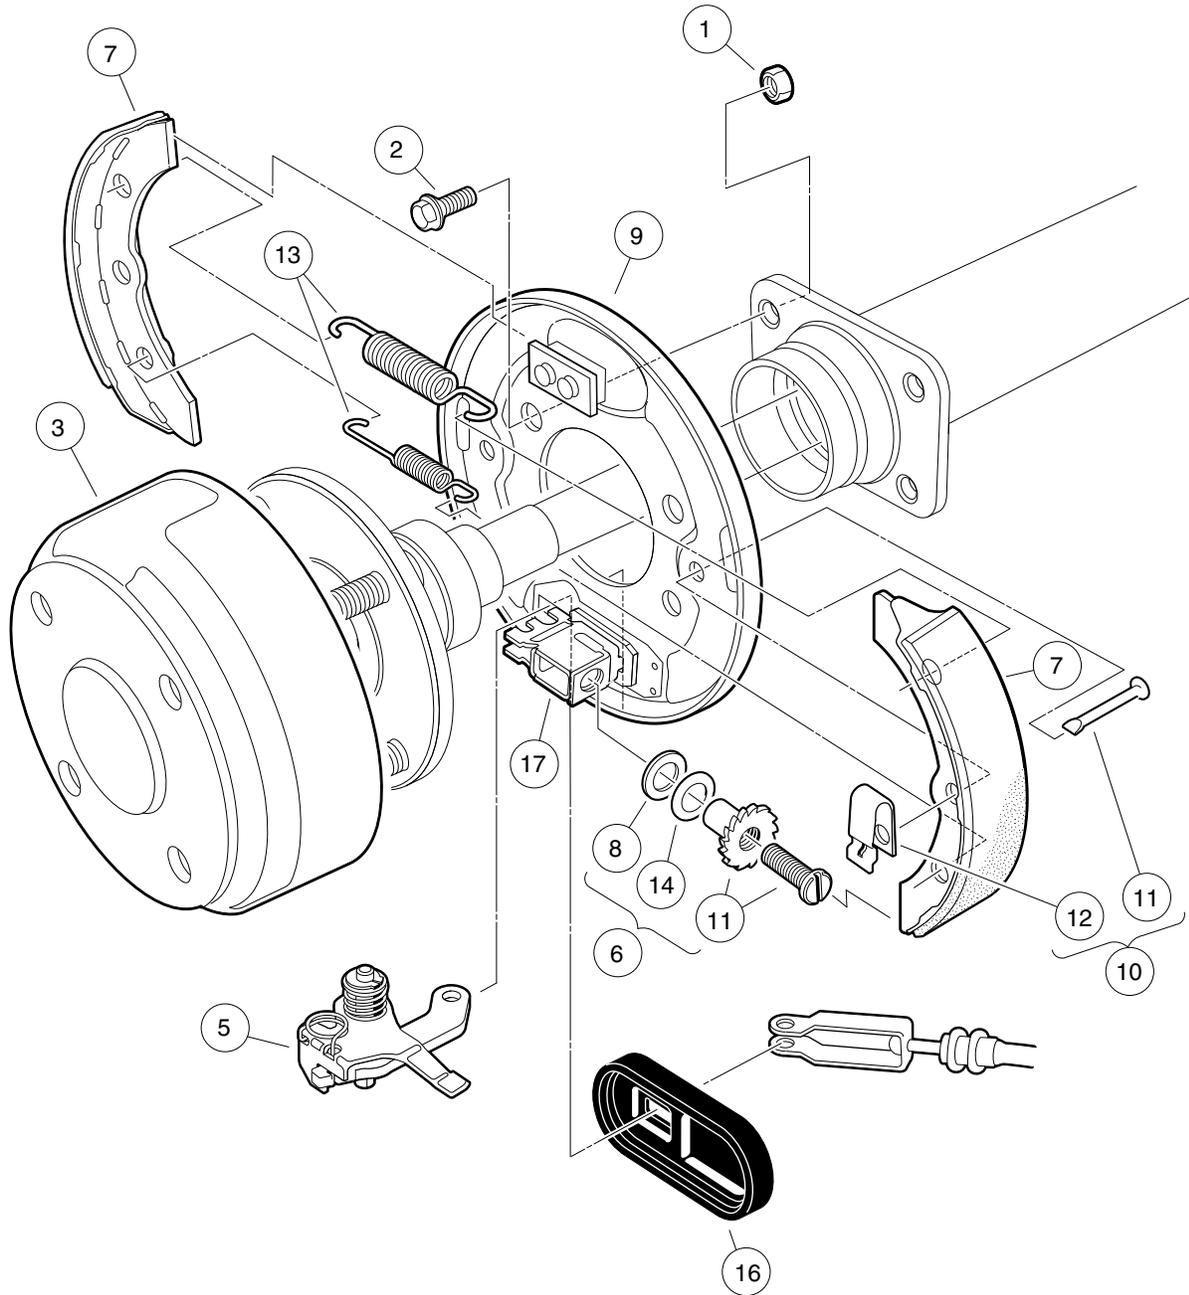



000186-001

REAR BRAKE ASSEMBLY, SELF-ADJUSTING – TURF/ CARRYALL 1 AND 2

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	8
2	<u>1014153</u>	Bolt, Brake Cluster Mounting	8
3	<u>101791101</u>	Drum without Center Hole, Brake	2
4	<u>103380201</u>	Asm, Brake Cluster, Mech, Drvr (includes items 5 through 17)	1
5	<u>101815501</u>	Lever Assembly, Self-Adjusting Brake, Right (Passenger)	1
6	<u>101816501</u>	Adj Mechanism, S.A. Brakes, Right (Passenger)	1
7	<u>101823201</u>	Package, Brake Shoe, Self-Adjusting	1
8	<u>101823801</u>	Plate, Washer, Brake, Self-Adjusting	1
9	<u>103483101</u>	Back Plate, Rh	1
10	<u>103483201</u>	Kit, Shoe Retainer (includes items 11 and 12)	1
11	<u>1010953</u>	Pin	2
12	<u>103483301</u>	Spring, Shoe, Clamp	2
13	<u>103483401</u>	Package Brake Spring Self Adj (includes items 14 and 15)	1
14	<u>101816401</u>	Brake Spring Self Adj	2
15	<u>103483501</u>	Spring Brake	2
16	<u>103483601</u>	Cover, Dust	1
17	<u>103483701</u>	Brake Block	1
18	<u>103380202</u>	Asm, Brake Cluster, Mech, Pass (includes items 19 through 31)	1
19	<u>101815502</u>	Lever Assembly, Self-Adjusting Brake, Left	1
20	<u>101816502</u>	Adjusting Mechanism, Self-Adjusting Brake, Left	1
21	<u>101823201</u>	Package, Brake Shoe, Self-Adjusting	1
22	<u>101823801</u>	Plate, Washer, Brake, Self-Adjusting	1
23	<u>103483102</u>	Back Plate, Lh	1
24	<u>103483201</u>	Kit, Shoe Retainer (includes items 25 and 26)	1
25	<u>1010953</u>	Pin	2
26	<u>103483301</u>	Spring, Shoe, Clamp	2
27	<u>103483401</u>	Package Brake Spring Self Adj (includes items 28 and 29)	1
28	<u>101816401</u>	Brake Spring Self Adj	2
29	<u>103483501</u>	Spring Brake	2
30	<u>103483601</u>	Cover, Dust	1
31	<u>103483701</u>	Brake Block	1
		Note: Driver-side brake cluster not shown. Components have a similar appearance to passenger-side brake cluster components.	

4
G
E

4
G
E

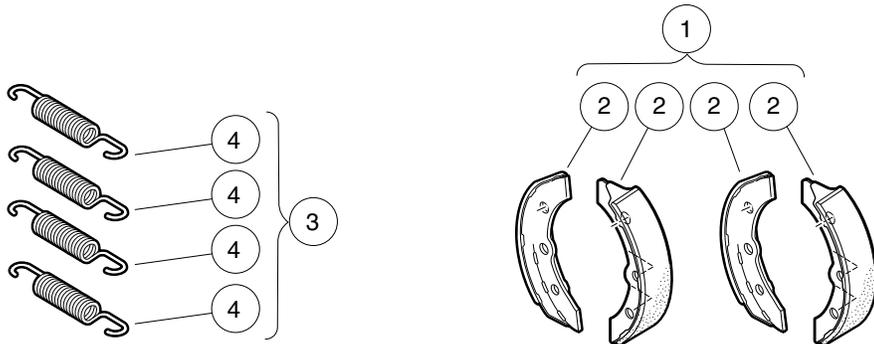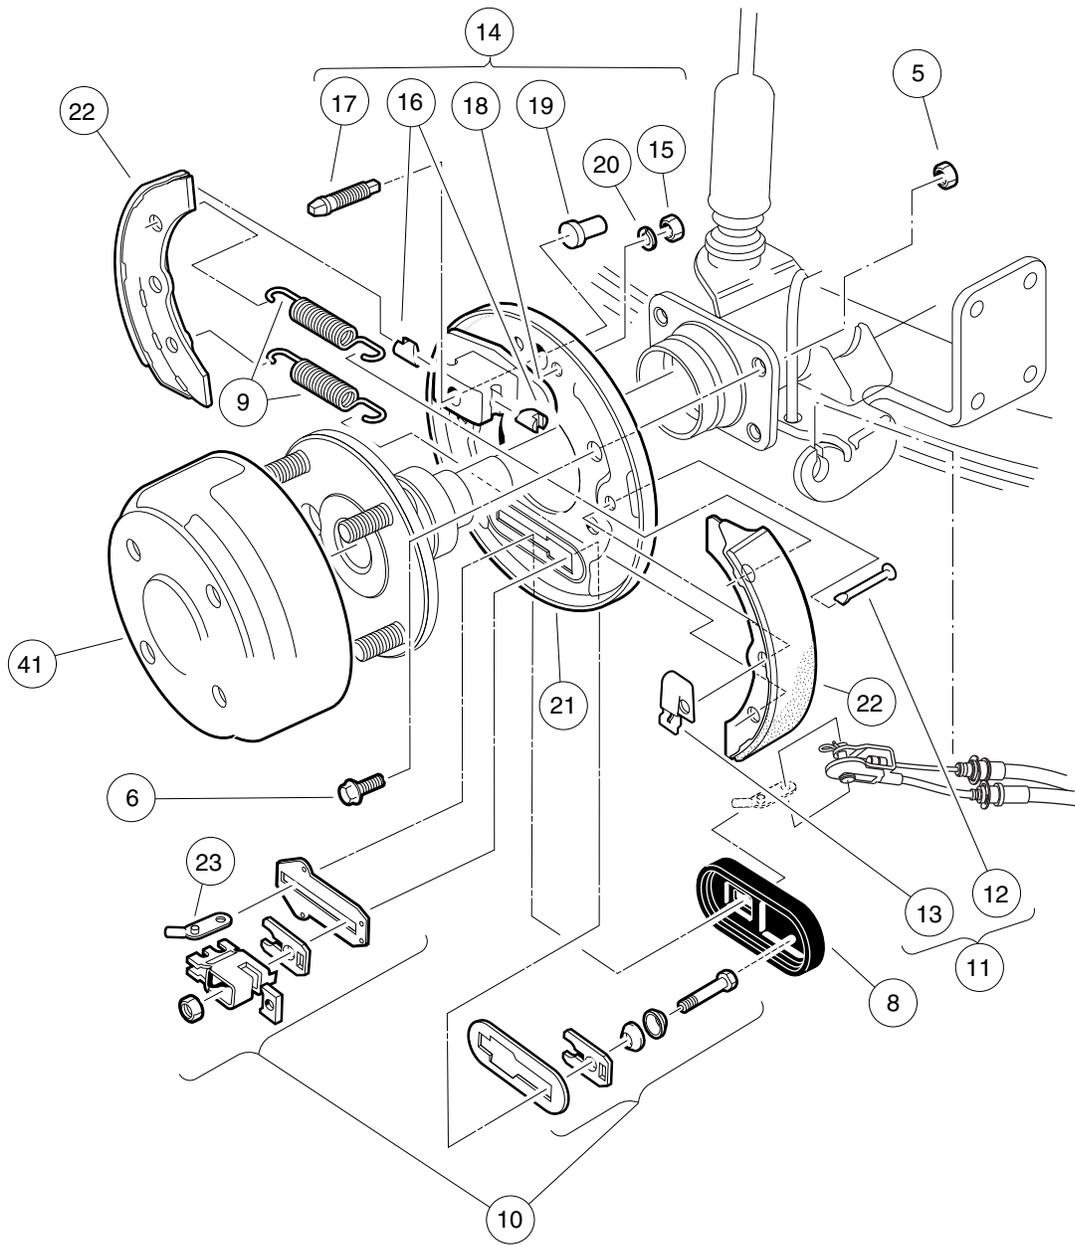


000293-002

REAR BRAKE ASSEMBLY, MANUALLY-ADJUSTED – TURF/ CARRYALL 2, 252, 2 PLUS, AND 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101146302</u>	Kit, Non-Asbestos Brake Shoe (includes item 2)	1
2	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	4
3	<u>1011464</u>	Package, Brake Spring (includes item 4)	1
4	1011314	Brake Spring	4
5	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	8
6	<u>1014153</u>	Bolt, Brake Cluster Mounting	8
7	<u>1016557</u>	Cluster, Brake, Driver-Side (includes items 8 through 23)	1
8	<u>1010850</u>	Dust Cover	1
9	1011314	Brake Spring	2
10	<u>1011465</u>	Kit, Brake Actuator	1
11	<u>1011466</u>	Kit, Shoe Retainer (includes items 12 and 13)	1
12	1010953	Pin	2
13	1011301	Shoe Clamp Spring	2
14	<u>1011467</u>	Kit, Anchor Body (includes items 15 through 20)	1
15	<u>1011114</u>	Nut, M6-1.00 Hex	2
16	1011298	Anchor Piston	2
17	N/A	Adjustment Bolt	1
18	N/A	Anchor Body Component	1
19	<u>1011303</u>	Adjustment Bolt Cap	1
20	<u>451</u>	Lockwasher, 1/4 Split	2
21	1011494	Backing Plate, Left-Hand	1
22	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2
23	N/A	Arm, Brake Lever	1
24	<u>1016573</u>	Cluster, Brake, Passenger-Side (includes items 25 through 40)	1
25	<u>1010850</u>	Dust Cover	1
26	<u>1011154</u>	Backing Plate, Right-Hand	1
27	1011314	Brake Spring	2
28	<u>1011465</u>	Kit, Brake Actuator	1
29	<u>1011466</u>	Kit, Shoe Retainer (includes items 30 and 31)	1
30	1010953	Pin	2
31	1011301	Shoe Clamp Spring	2
32	<u>1011467</u>	Kit, Anchor Body (includes items 33 through 38)	1
33	<u>1011114</u>	Nut, M6-1.00 Hex	2
34	1011298	Anchor Piston	2
35	N/A	Adjustment Bolt	1
36	N/A	Anchor Body Component	1
37	<u>1011303</u>	Adjustment Bolt Cap	1
38	<u>451</u>	Lockwasher, 1/4 Split	2
39	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2
40	N/A	Arm, Brake Lever	1
41	<u>101791101</u>	Drum without Center Hole, Brake	2
		Note: Passenger-side brake cluster not shown. Components have a similar appearance to driver-side brake cluster components.	

4
G
E

4
G
E

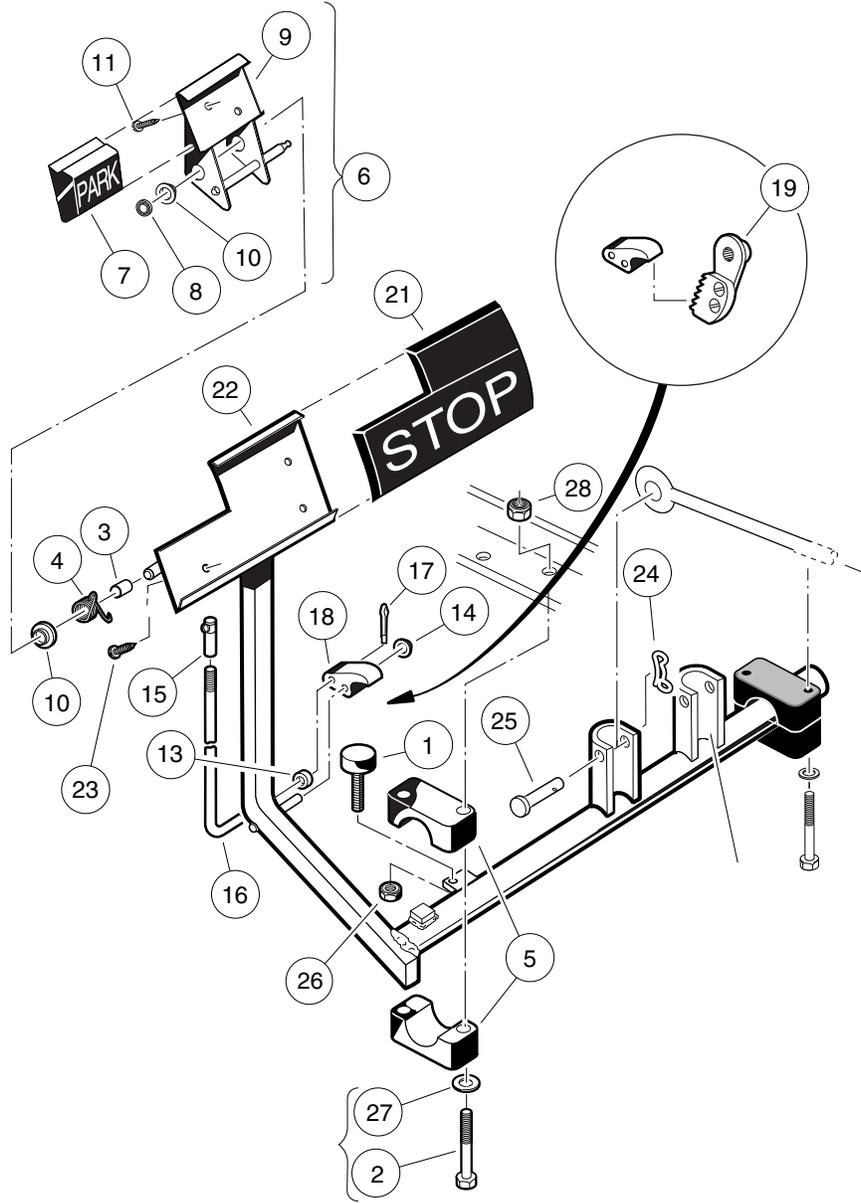


000187-001

BRAKE PEDAL ASSEMBLY – VEHICLES WITH TWO-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010878</u>	Bumper, Rubber	1
2	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	4
3	<u>1010927</u>	Hill Brake Spacer	1
4	<u>1010933</u>	Spring, Hill Brake Torsion	1
5	<u>1011402</u>	Package, Brake Mounting Block	1
6	<u>1011418</u>	Kit, Hill Brake Pedal (includes items 7 through 11)	1
7	<u>1013870</u>	Pad, Hill Brake	1
8	<u>1013876</u>	Pushnut, 3/8	1
9	N/A	Hill Brake Weld Assembly	1
10	<u>1032</u>	Bushing, Nylon	2
11	7716	Screw, #10-16 Type AB, Sheet Metal	2
12	<u>101187702</u>	Kit, Hill Brake Latch (includes items 13 through 19)	1
13	<u>1010805</u>	Sleeve, Hill Brake Rod	1
14	<u>1010877</u>	Pushnut, 3/8	1
15	1010932	Ball Joint, 1/4-28	1
16	N/A	Rod, Hill Brake	1
17	<u>1017029</u>	Pin, Cotter, 7/64 x 1/2 Stainless-Steel	1
18	N/A	Pawl, Hill Brake	1
19	101918501	Ratchet Assembly	1
20	<u>101878201</u>	Brake Pedal Kit (includes items 21 through 23)	1
21	<u>1013869</u>	Pad, Brake Pedal	1
22	N/A	Weldment, Brake Pedal 4wb Std	1
23	7716	Screw, #10-16 Type AB, Sheet Metal	3
24	<u>102323101</u>	Pin, Bow Tie Locking	1
25	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1
26	<u>1028</u>	Nut, 1/4-20 Hex	1
27	<u>1241</u>	Washer, 5/16 Type A Flat	4
28	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4

4
G
E

4
G
E

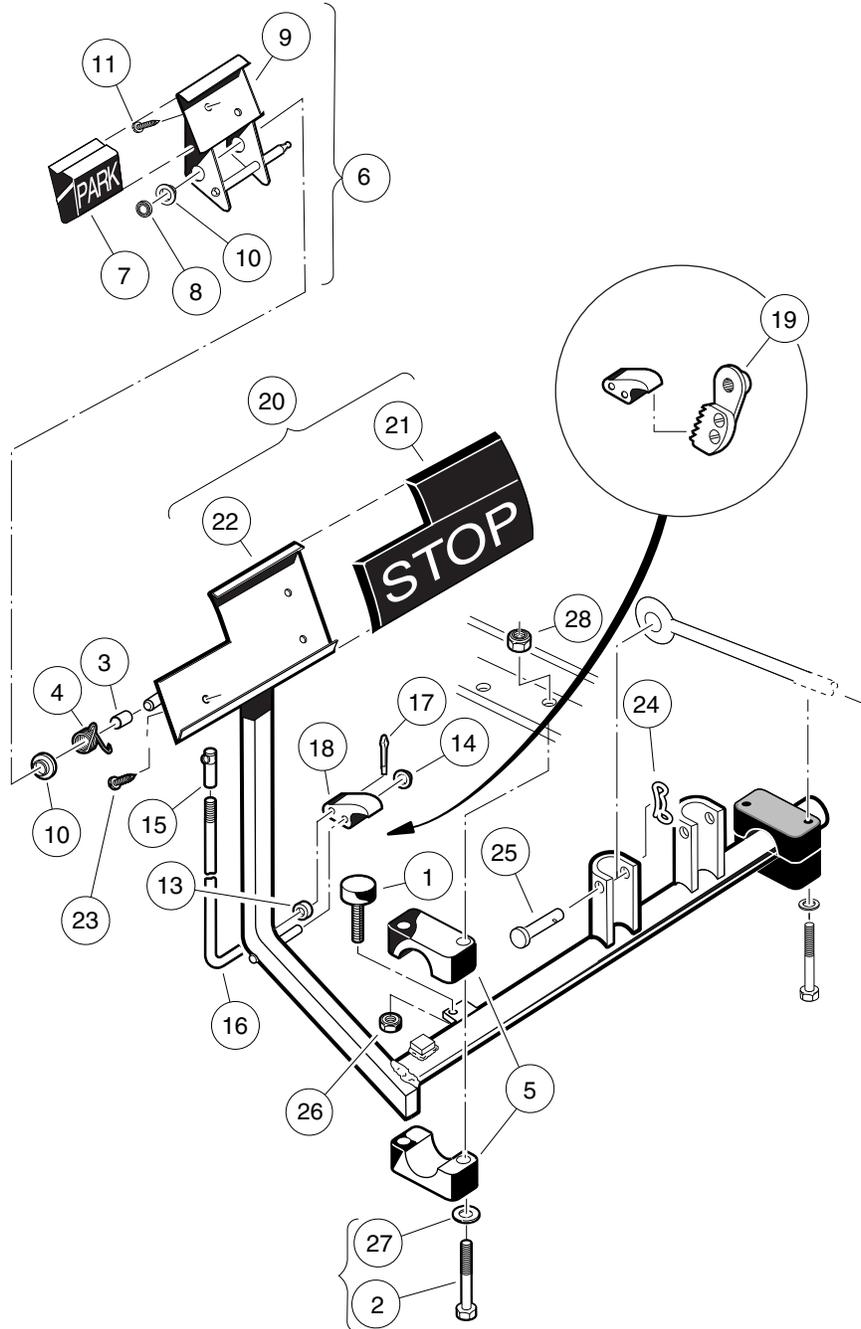


000187-003

BRAKE PEDAL ASSEMBLY – VEHICLES WITH FOUR-WHEEL BRAKES (EXCEPT IQ PLUS)

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010878</u>	Bumper, Rubber	1
2	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	4
3	<u>1010927</u>	Hill Brake Spacer	1
4	<u>1010933</u>	Spring, Hill Brake Torsion	1
5	<u>1011402</u>	Package, Brake Mounting Block	1
6	<u>1011418</u>	Kit, Hill Brake Pedal (includes items 7 through 11)	1
7	<u>1013870</u>	Pad, Hill Brake	1
8	<u>1013876</u>	Pushnut, 3/8	1
9	N/A	Hill Brake Weld Assembly	1
10	<u>1032</u>	Bushing, Nylon	2
11	7716	Screw, #10-16 Type AB, Sheet Metal	2
12	<u>101187702</u>	Kit, Hill Brake Latch (includes items 13 through 19)	1
13	<u>1010805</u>	Sleeve, Hill Brake Rod	1
14	<u>1010877</u>	Pushnut, 3/8	1
15	1010932	Ball Joint, 1/4-28	1
16	N/A	Rod, Hill Brake	1
17	<u>1017029</u>	Pin, Cotter, 7/64 x 1/2 Stainless-Steel	1
18	N/A	Pawl, Hill Brake	1
19	101918501	Ratchet Assembly	1
20	<u>101878201</u>	Brake Pedal Kit (includes items 21 through 23)	1
21	<u>1013869</u>	Pad, Brake Pedal	1
22	N/A	Weldment, Brake Pedal 4wb Std	1
23	7716	Screw, #10-16 Type AB, Sheet Metal	3
24	<u>102323101</u>	Pin, Bow Tie Locking	2
25	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	2
26	<u>1028</u>	Nut, 1/4-20 Hex	1
27	<u>1241</u>	Washer, 5/16 Type A Flat	4
28	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4

4
G
E

4
G
E

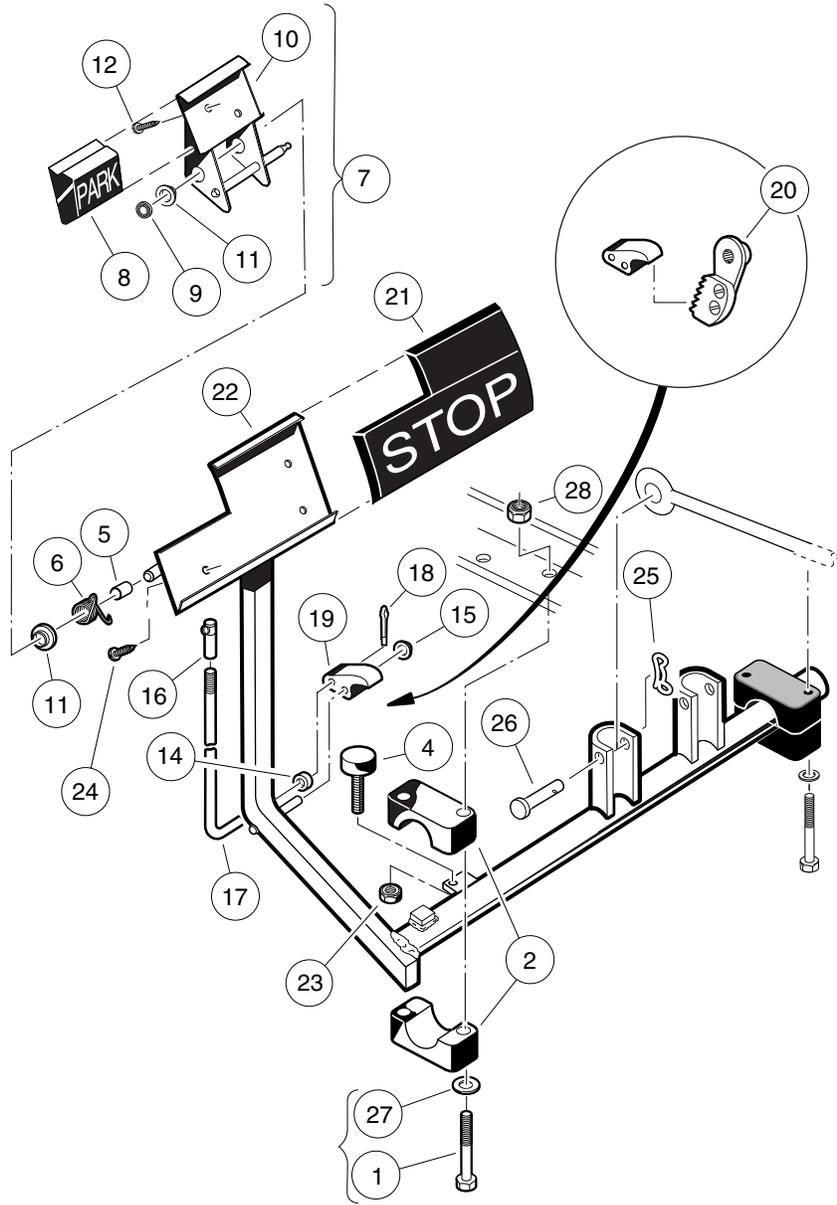



000187-002

BRAKE PEDAL ASSEMBLY – IQ PLUS VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	4
2	<u>1011402</u>	Package, Brake Mounting Block	1
3	N/A	Subasm, Pedal Group, 4-Wheel Brake (includes items 4 through 24)	1
4	<u>1010878</u>	Bumper, Rubber	1
5	<u>1010927</u>	Hill Brake Spacer	1
6	<u>1010933</u>	Spring, Hill Brake Torsion	1
7	<u>1011418</u>	Kit, Hill Brake Pedal (includes items 8 through 12)	1
8	<u>1013870</u>	Pad, Hill Brake	1
9	<u>1013876</u>	Pushnut, 3/8	1
10	N/A	Hill Brake Weld Assembly	1
11	<u>1032</u>	Bushing, Nylon	2
12	7716	Screw, #10-16 Type AB, Sheet Metal	2
13	<u>101187702</u>	Kit, Hill Brake Latch (includes items 14 through 20)	1
14	<u>1010805</u>	Sleeve, Hill Brake Rod	1
15	<u>1010877</u>	Pushnut, 3/8	1
16	1010932	Ball Joint, 1/4-28	1
17	N/A	Rod, Hill Brake	1
18	<u>1017029</u>	Pin, Cotter, 7/64 x 1/2 Stainless-Steel	1
19	N/A	Pawl, Hill Brake	1
20	101918501	Ratchet Assembly	1
21	<u>1013869</u>	Pad, Brake Pedal	1
22	N/A	Brake Pedal Weldment	1
23	<u>1028</u>	Nut, 1/4-20 Hex	1
24	7716	Screw, #10-16 Type AB, Sheet Metal	3
25	<u>102323101</u>	Pin, Bow Tie Locking	2
26	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	2
27	<u>1241</u>	Washer, 5/16 Type A Flat	4
28	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4

4
G
E

4
G
E

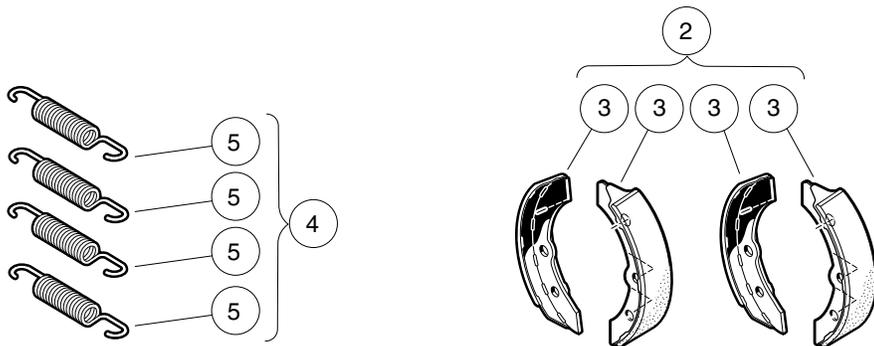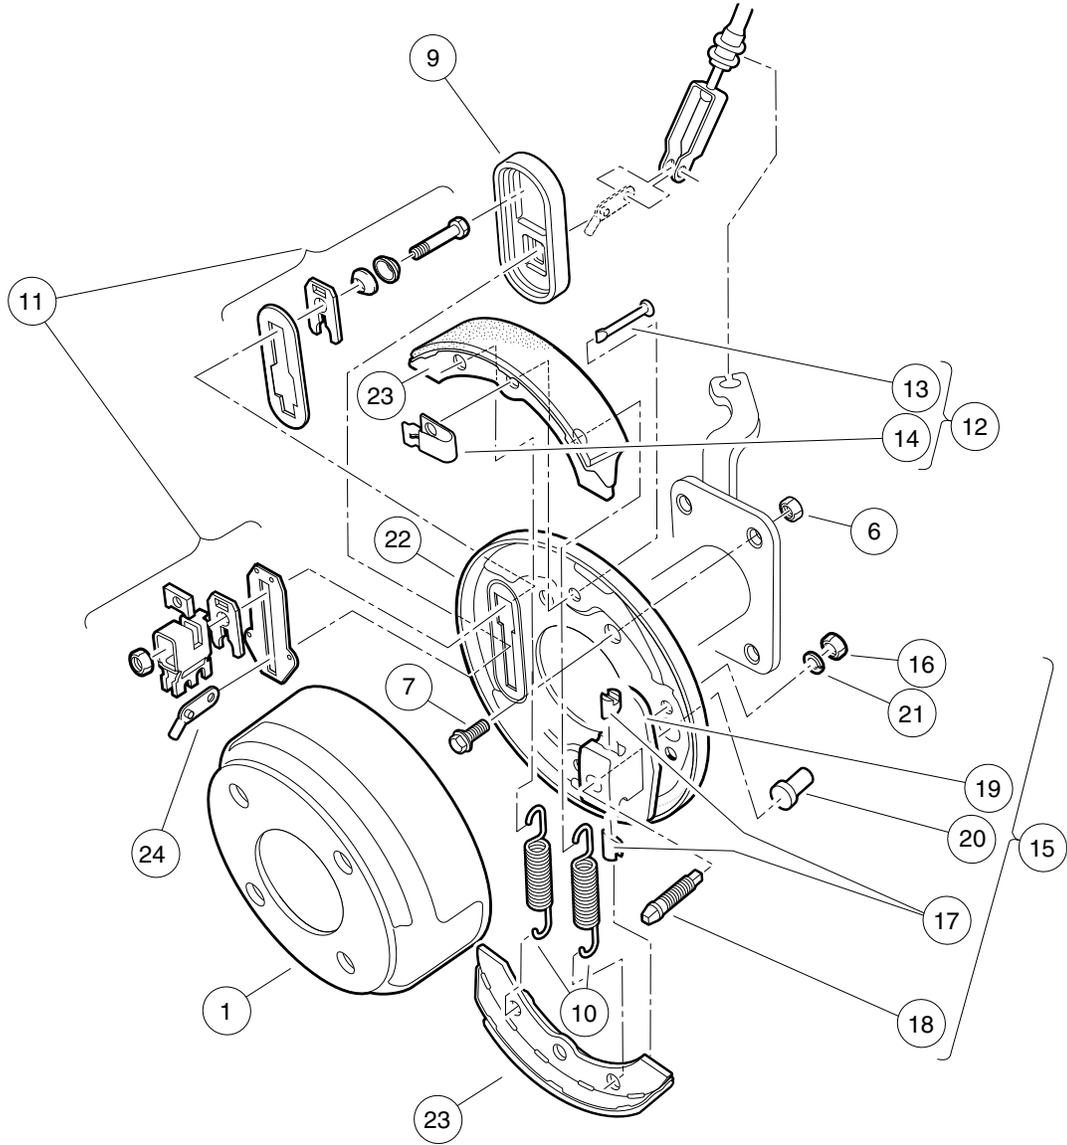

000298-001

FRONT BRAKE ASSEMBLY – VEHICLES WITH FOUR-WHEEL BRAKES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011137</u>	Drum, Brake	2
2	<u>101146302</u>	Kit, Non-Asbestos Brake Shoe (includes item 3)	1
3	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	4
4	<u>1011464</u>	Package, Brake Spring (includes item 5)	1
5	1011314	Brake Spring	4
6	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	8
7	<u>1014153</u>	Bolt, Brake Cluster Mounting	8
8	<u>1016557</u>	Cluster, Brake, Driver-Side (includes items 9 through 24)	1
9	<u>1010850</u>	Dust Cover	1
10	1011314	Brake Spring	2
11	<u>1011465</u>	Kit, Brake Actuator	1
12	<u>1011466</u>	Kit, Shoe Retainer (includes items 13 and 14)	1
13	1010953	Pin	2
14	1011301	Shoe Clamp Spring	2
15	<u>1011467</u>	Kit, Anchor Body (includes items 16 through 21)	1
16	<u>1011114</u>	Nut, M6-1.00 Hex	2
17	1011298	Anchor Piston	2
18	N/A	Adjustment Bolt	1
19	N/A	Anchor Body Component	1
20	<u>1011303</u>	Adjustment Bolt Cap	1
21	<u>451</u>	Lockwasher, 1/4 Split	2
22	1011494	Backing Plate, Left-Hand	1
23	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2
24	N/A	Arm, Brake Lever	1
25	<u>1016573</u>	Cluster, Brake, Passenger-Side (includes items 26 through 41)	1
26	<u>1010850</u>	Dust Cover	1
27	<u>1011154</u>	Backing Plate, Right-Hand	1
28	1011314	Brake Spring	2
29	<u>1011465</u>	Kit, Brake Actuator	1
30	<u>1011466</u>	Kit, Shoe Retainer (includes items 31 and 32)	1
31	1010953	Pin	2
32	1011301	Shoe Clamp Spring	2
33	<u>1011467</u>	Kit, Anchor Body (includes items 34 through 39)	1
34	<u>1011114</u>	Nut, M6-1.00 Hex	2
35	1011298	Anchor Piston	2
36	N/A	Adjustment Bolt	1
37	N/A	Anchor Body Component	1
38	<u>1011303</u>	Adjustment Bolt Cap	1
39	<u>451</u>	Lockwasher, 1/4 Split	2
40	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2
41	N/A	Arm, Brake Lever	1
<p>Note: Passenger-side brake cluster not shown. Components have a similar appearance to driver-side brake cluster components.</p>			

4

G

E

4
G
E

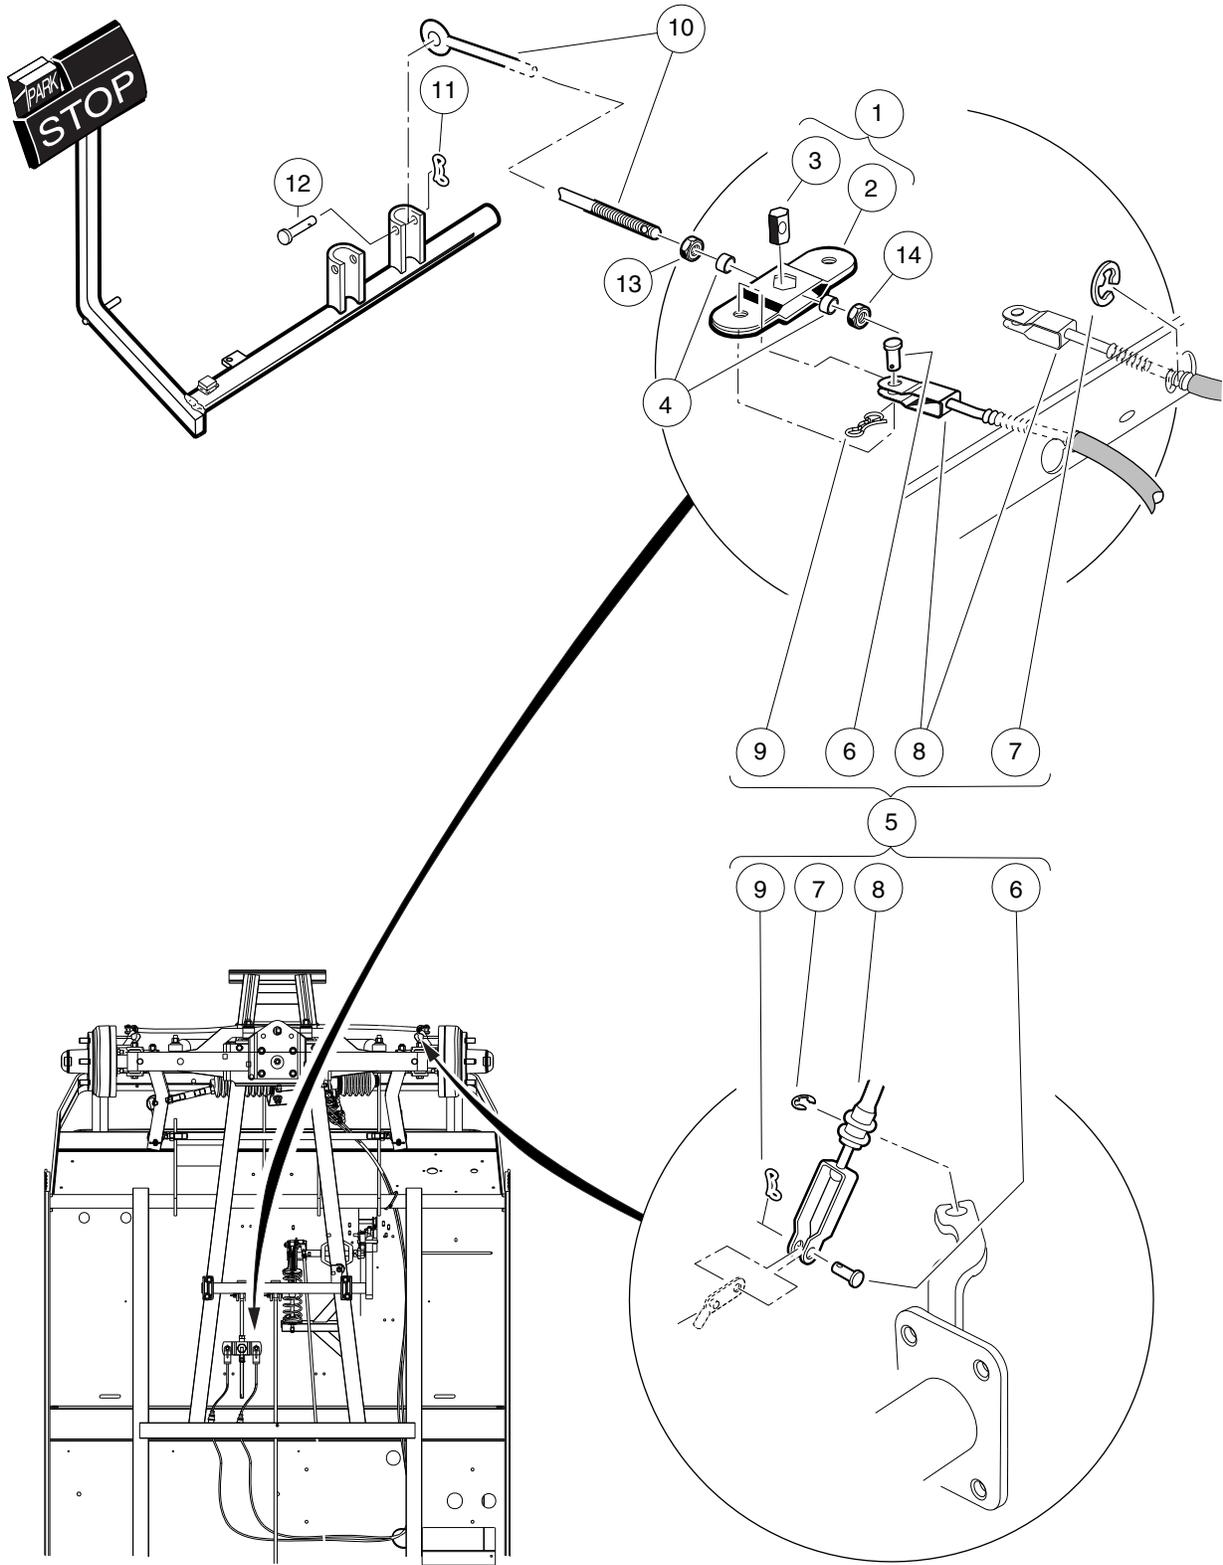

000294-001

FRONT BRAKE CABLES AND EQUALIZER – VEHICLES WITH FOUR-WHEEL BRAKES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1017211</u>	Kit, Equalizer and Pivot Limiter (includes items 2 and 3)	1
2	1016319	Equalizer Weld Assembly	1
3	1016320	Equalizer, Pivot Limiter	1
4	<u>101865301</u>	Spacer	2
5	<u>101874601</u>	Kit, Brake Cable (includes items 6 through 9)	1
6	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	4
7	<u>1011779</u>	E-Clip, 1/2	4
8	N/A	Brake Cable	2
9	<u>102292801</u>	Pin, Bow Tie Locking - .072	4
10	<u>101953106</u>	Rod, Equalizer, 9.75"	1
11	<u>102323101</u>	Pin, Bow Tie Locking	1
12	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1
13	<u>1242</u>	Nut, 5/16-18 Hex	1
14	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1

4
G
E

4

G

E

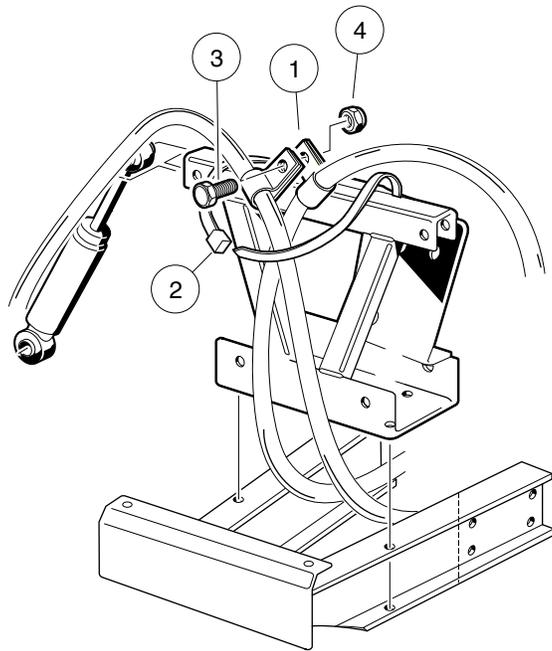

000305-001

FRONT BRAKE CABLE CLIPS – VEHICLES WITH FOUR-WHEEL BRAKES (EXCEPT IQ PLUS CARRYALL 6)


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101935301</u>	Clamp, Brake Cable	2
2	<u>102025401</u>	Tie Wrap, Heavy Duty	1
3	320	Screw, 3/8-16 X 1.00 Hex-Head Cap	1
4	<u>8754</u>	Locknut, 3/8-16 Hex	1

4

G


E

4
G
E

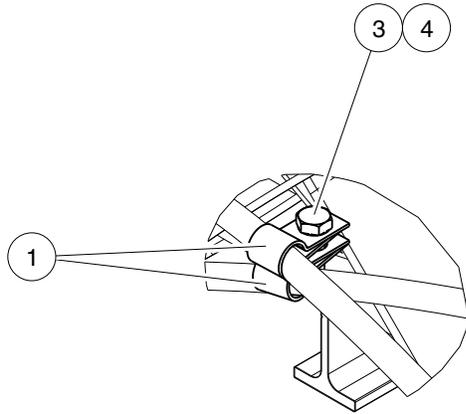

DETAIL G

See Detail G

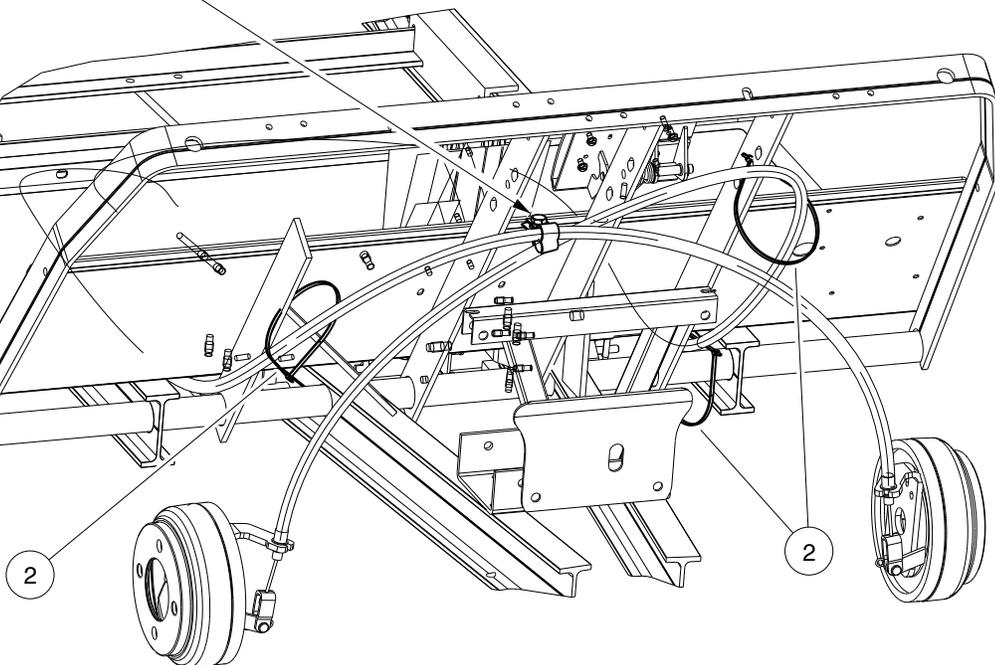

000305-002

FRONT BRAKE CABLE CLIPS – IQ PLUS CARRYALL 6 VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101935301</u>	Clamp, Brake Cable	2
2	<u>102025401</u>	Tie Wrap, Heavy Duty	3
3	320	Screw, 3/8-16 X 1.00 Hex-Head Cap	1
4	<u>8754</u>	Locknut, 3/8-16 Hex	1

4

G

E

4
G
E

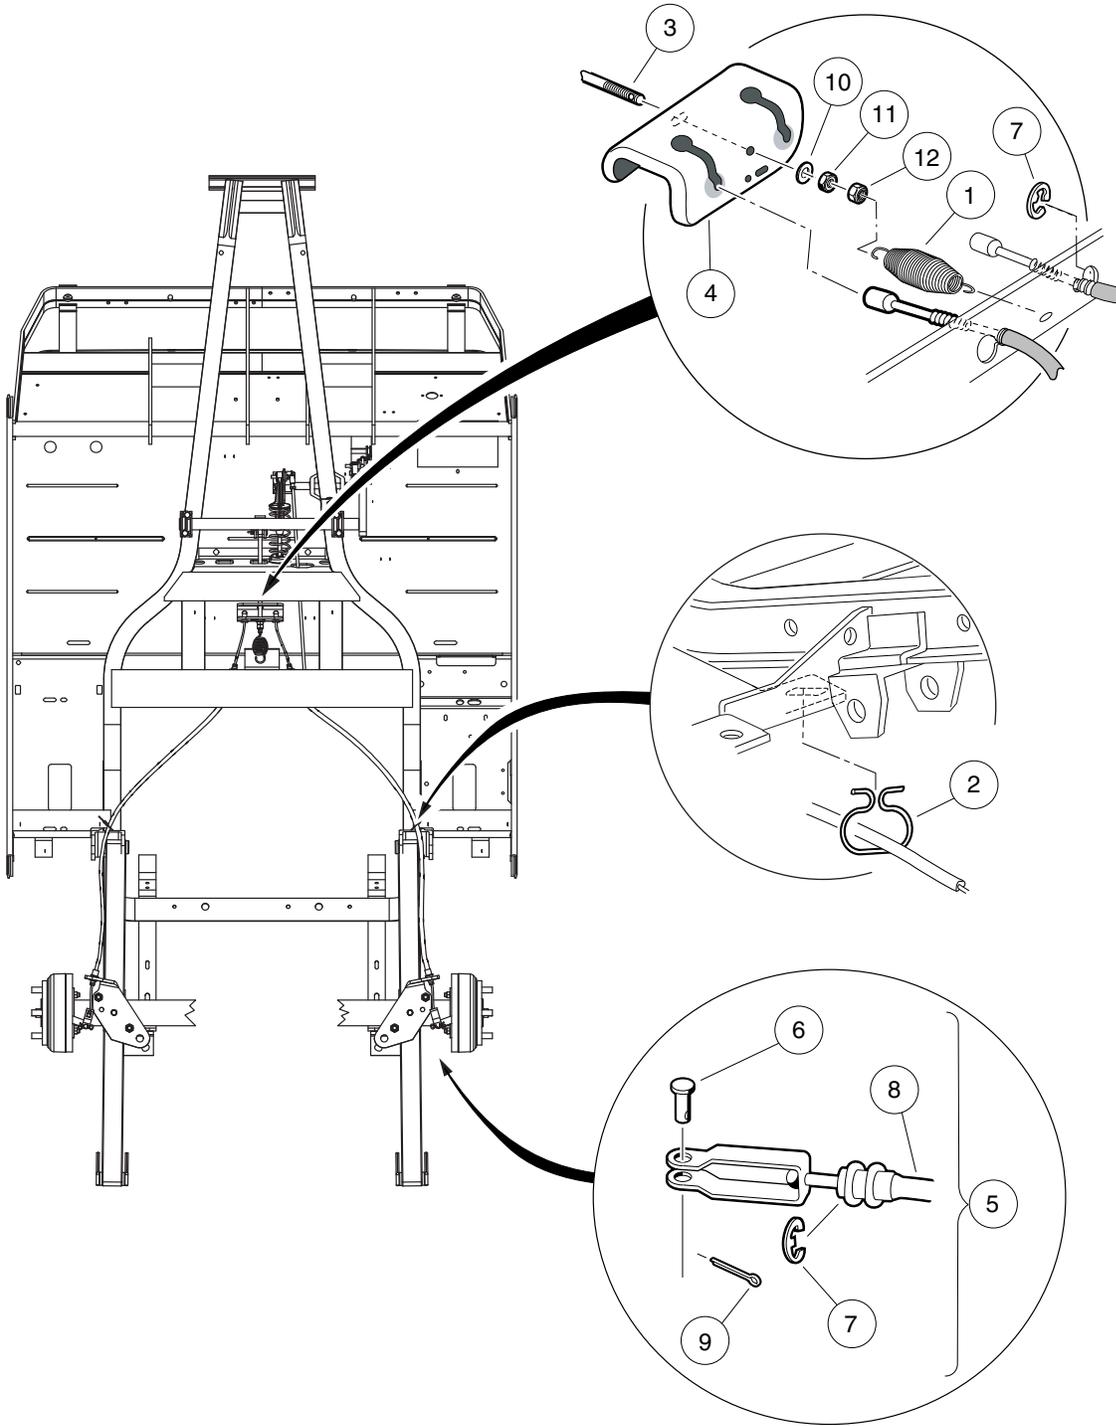


000245-001

BRAKE CABLE, EQUALIZER, AND EQUALIZER ROD – TURF/ CARRYALL 1 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013531</u>	Spring, Brake Return	1
2	101900801	Hanger, Brake Cable	2
3	<u>101953101</u>	Rod, Equalizer, 8.91"	1
4	<u>101990801</u>	Equalizer Bracket	1
5	<u>102022101</u>	Brake Cable Kit (includes items 6 through 9)	2
6	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	1
7	<u>1011779</u>	E-Clip, 1/2	2
8	N/A	Cable, Brake, 41"	1
9	<u>1035</u>	Cotter Pin, 3/32 x 1	1
10	<u>1241</u>	Washer, 5/16 Type A Flat	5
11	<u>1242</u>	Nut, 5/16-18 Hex	1
12	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	5

4
G
E

4
G
E

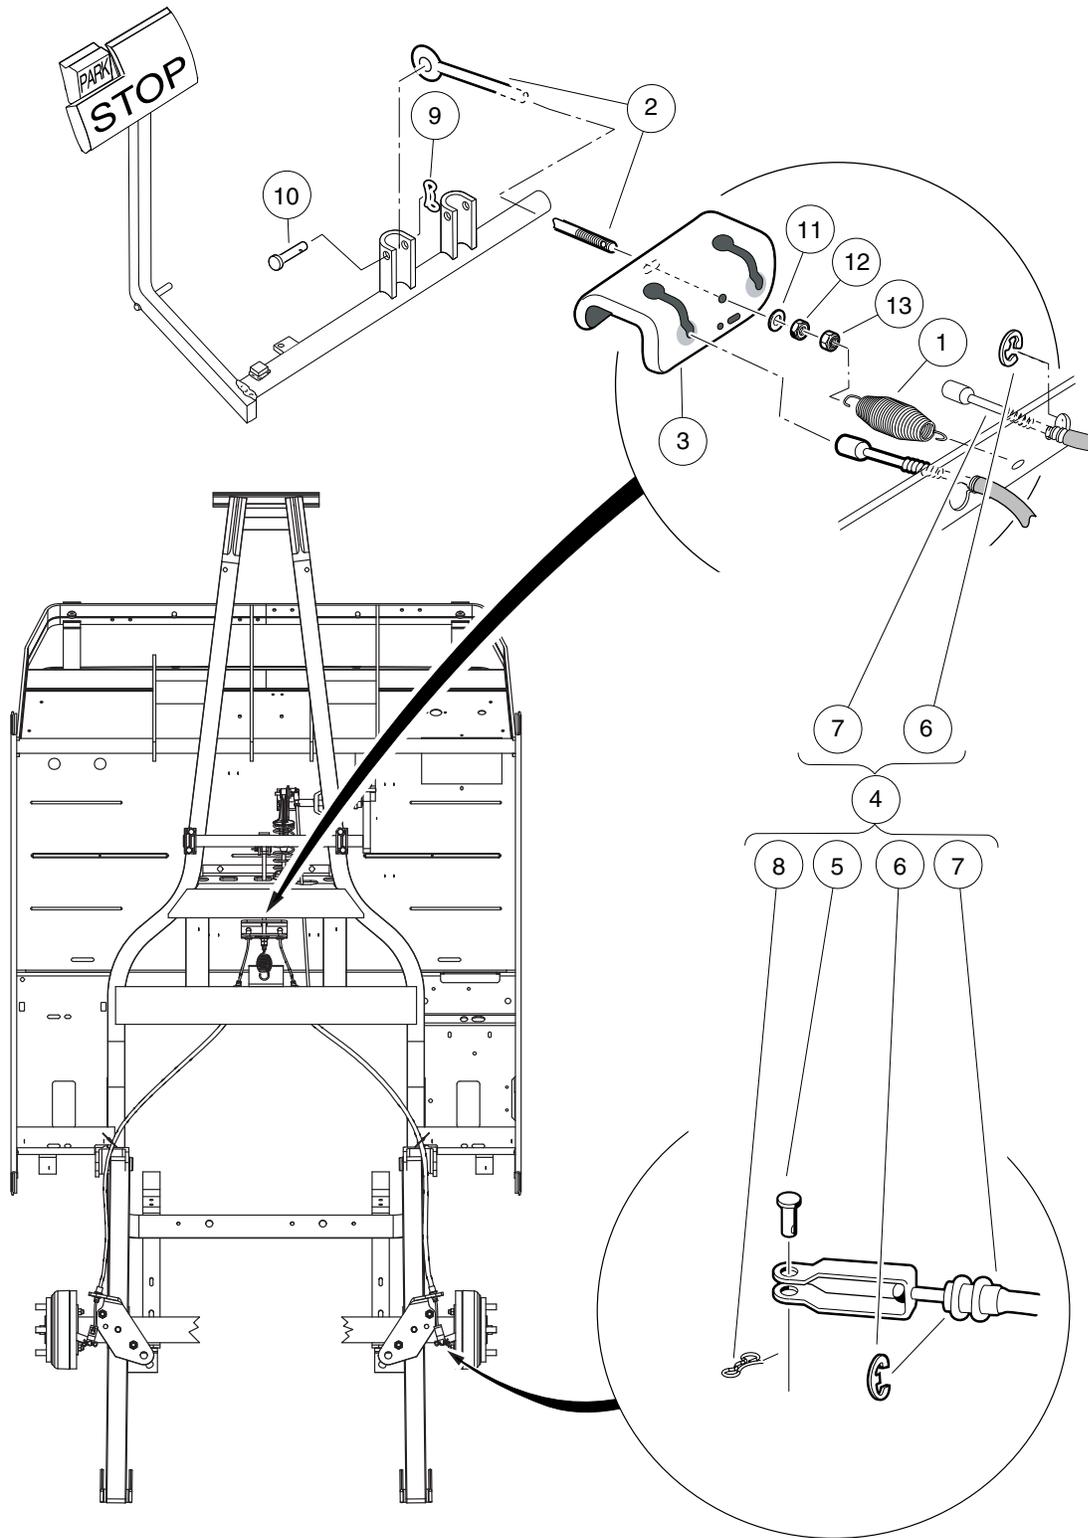


000295-001

REAR BRAKE CABLES – TURF/CARRYALL 2 (EXCEPT IQ PLUS), 252, AND 2 PLUS WITH 4-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013531</u>	Spring, Brake Return	1
2	101953102	Rod, Equalizer, 20.91"	1
3	<u>101990801</u>	Equalizer Bracket	1
4	<u>102166901</u>	Kit, Brake Cable Rear (includes items 5 through 8)	1
5	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	2
6	<u>1011779</u>	E-Clip, 1/2	4
7	102162601	Cable, Brake	2
8	<u>102292801</u>	Pin, Bow Tie Locking - .072	2
9	<u>102323101</u>	Pin, Bow Tie Locking	1
10	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1
11	<u>1241</u>	Washer, 5/16 Type A Flat	1
12	<u>1242</u>	Nut, 5/16-18 Hex	1
13	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1

4
G
E

4
G
E

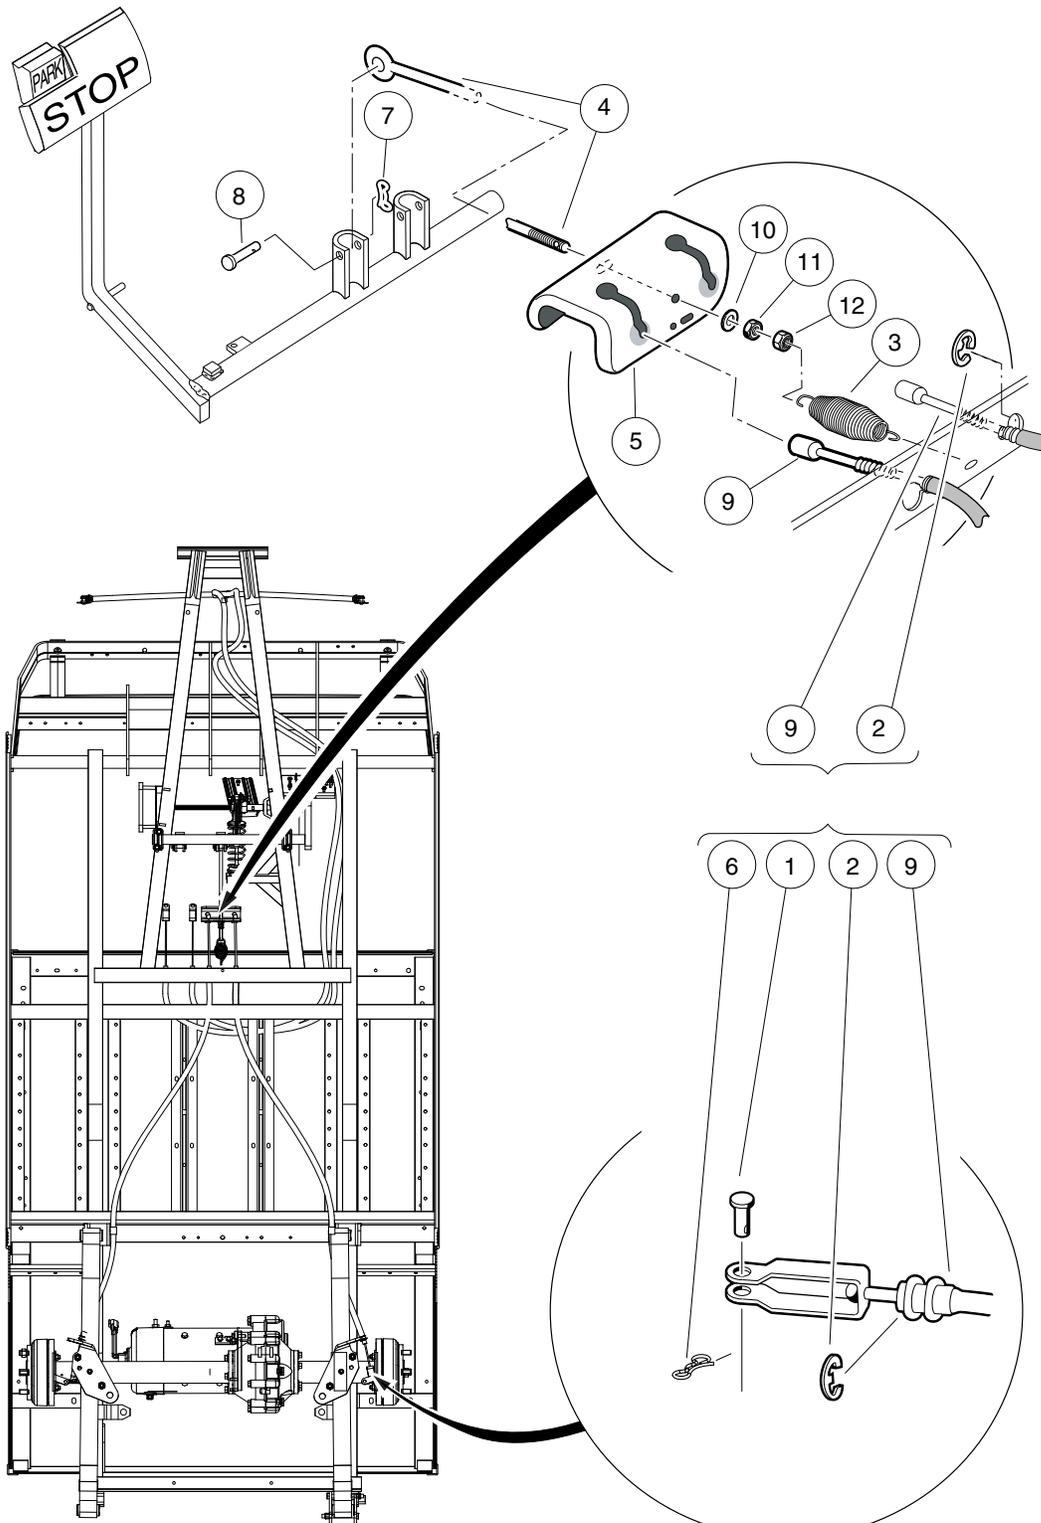


000295-002

REAR BRAKE CABLES AND EQUALIZER – TURF/CARRYALL 2 IQ PLUS VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	2
2	<u>1011779</u>	E-Clip, 1/2	4
3	<u>1013531</u>	Spring, Brake Return	1
4	<u>101953106</u>	Rod, Equalizer, 9.75"	1
5	<u>101990801</u>	Equalizer Bracket	1
6	<u>102292801</u>	Pin, Bow Tie Locking - .072	2
7	<u>102323101</u>	Pin, Bow Tie Locking	1
8	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1
9	<u>102852101</u>	Cable, Brake, 51-inch, Right	2
10	<u>1241</u>	Washer, 5/16 Type A Flat	1
11	<u>1242</u>	Nut, 5/16-18 Hex	1
12	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1

4
G
E

4
G
E

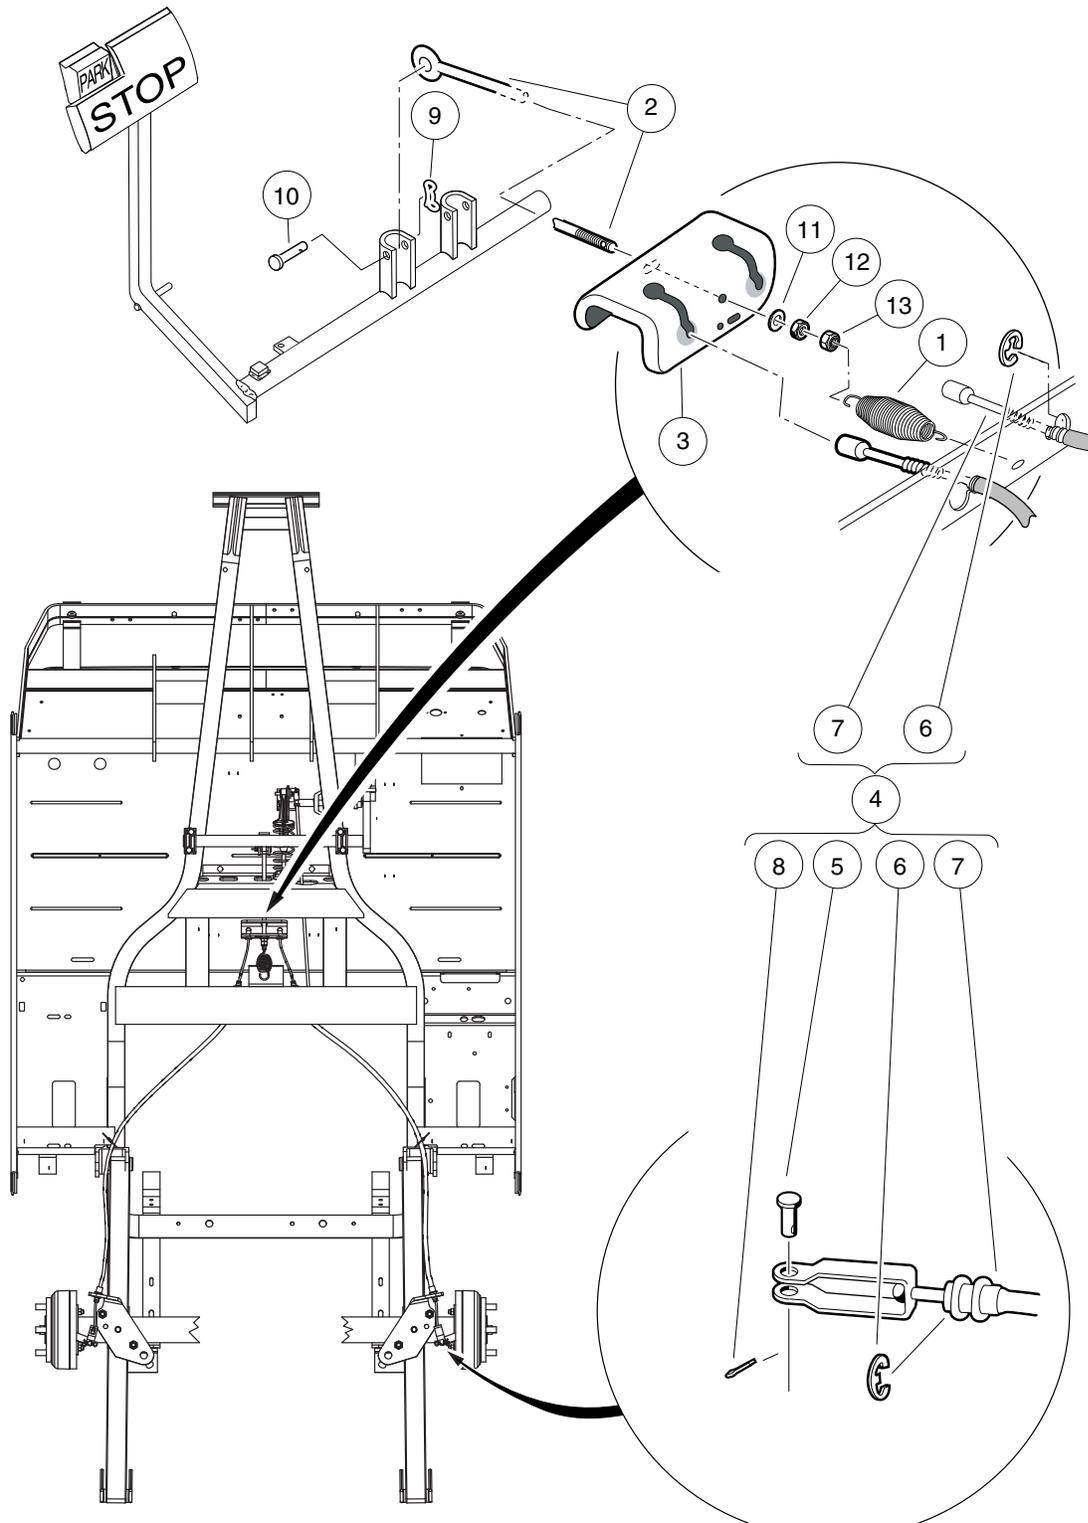


000296-001

BRAKE CABLES AND EQUALIZER – TURF/CARRYALL 2 VEHICLES WITH TWO-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013531</u>	Spring, Brake Return	1
2	101953102	Rod, Equalizer, 20.91"	1
3	<u>101990801</u>	Equalizer Bracket	1
4	<u>102022101</u>	Brake Cable Kit (includes items 5 through 8)	2
5	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	1
6	<u>1011779</u>	E-Clip, 1/2	2
7	N/A	Cable, Brake, 41"	1
8	<u>1035</u>	Cotter Pin, 3/32 x 1	1
9	<u>102323101</u>	Pin, Bow Tie Locking	1
10	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1
11	<u>1241</u>	Washer, 5/16 Type A Flat	1
12	<u>1242</u>	Nut, 5/16-18 Hex	1
13	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1

4
G
E

4
G
E

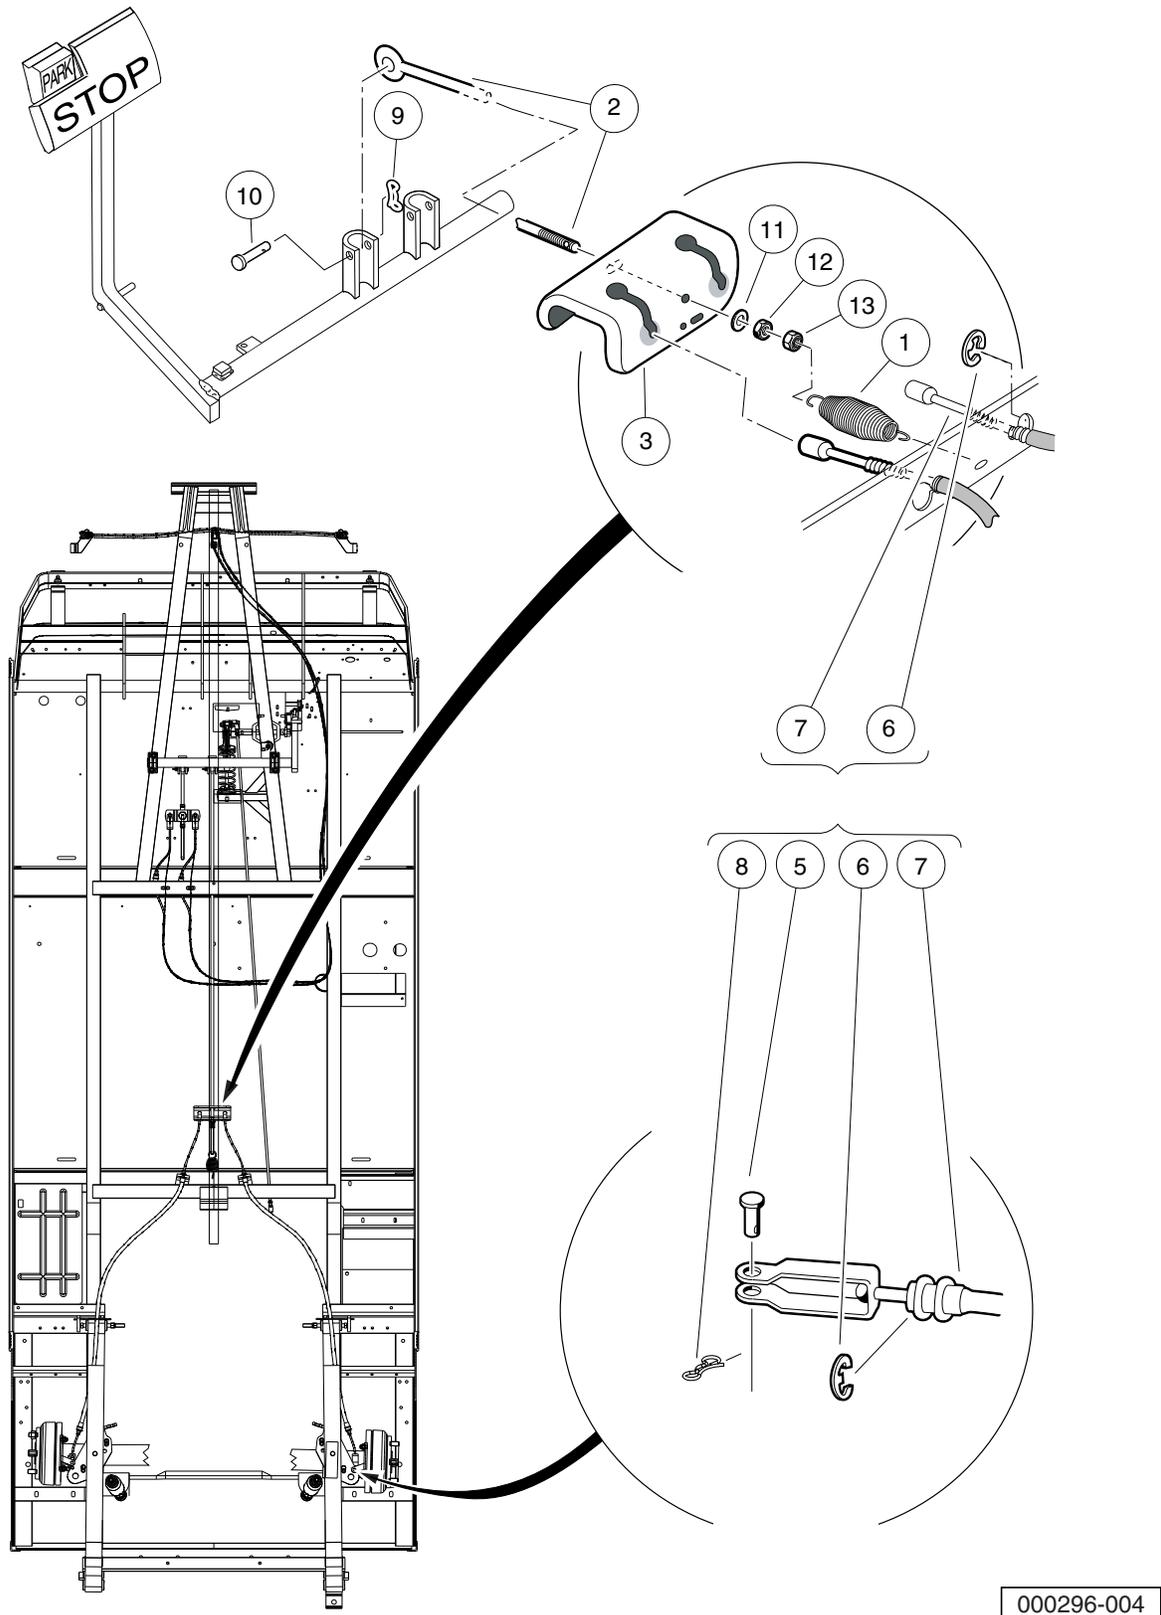


REAR BRAKE CABLES, EQUALIZER, AND EQUALIZER ROD – TURF/CARRYALL 6 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013531</u>	Spring, Brake Return	1
2	101953103	Rod, Equalizer	1
3	<u>101990801</u>	Equalizer Bracket	1
4	<u>102166901</u>	Kit, Brake Cable Rear (includes items 5 through 8)	1
5	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	2
6	<u>1011779</u>	E-Clip, 1/2	4
7	102162601	Cable, Brake	2
8	<u>102292801</u>	Pin, Bow Tie Locking - .072	2
9	<u>102323101</u>	Pin, Bow Tie Locking	1
10	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1
11	<u>1241</u>	Washer, 5/16 Type A Flat	1
12	<u>1242</u>	Nut, 5/16-18 Hex	1
13	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1

4
G
E

4
G
E

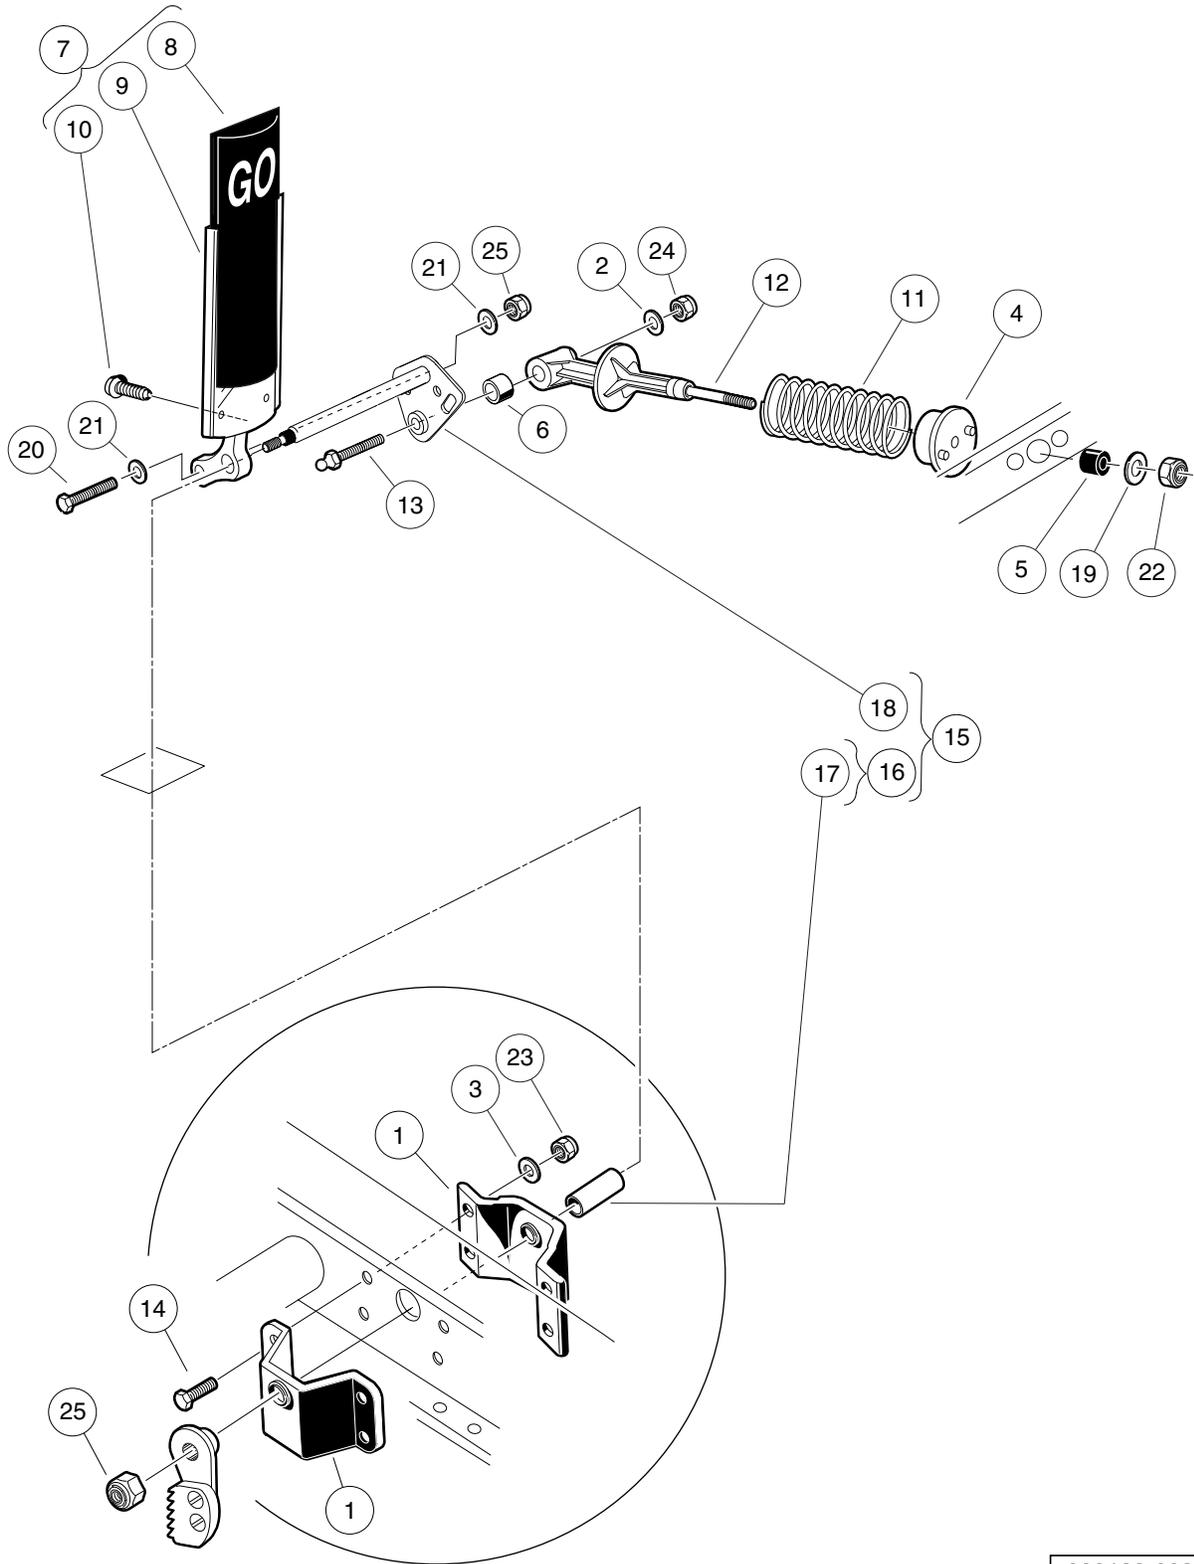


000188-003

ACCELERATOR PEDAL ASSEMBLY – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2
2	<u>1011931</u>	Washer, 1/4 Flat	1
3	<u>1014007</u>	Washer, 1/4 Flat	4
4	<u>1017378</u>	Cup, Spring	1
5	<u>1017380</u>	Bumper, Spring Return	1
6	<u>1017424</u>	Bearing, Pivot Support	1
7	<u>1017696</u>	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1
8	1013871	Pad, Accelerator Pedal	1
9	N/A	Accelerator Pedal Weldment	1
10	7716	Screw, #10-16 Type AB, Sheet Metal	4
11	101796201	Spring, Accelerator Return	1
12	<u>101817401</u>	Retainer, Spring	1
13	101818801	Stud, 1/4-28 X 1.35 Ball	1
14	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4
15	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 16 through 18)	1
16	<u>1011700</u>	Spacer Assembly (includes item 17)	1
17	101919801	Spacer, Accelerator	1
18	N/A	Pivot Rod Weldment	1
19	<u>1241</u>	Washer, 5/16 Type A Flat	1
20	<u>1624</u>	Screw, 3/8-16 X 1.50 Hex-Head Cap	1
21	<u>334</u>	Washer, 3/8 Type A Flat	2
22	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1
23	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
24	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1
25	<u>8754</u>	Locknut, 3/8-16 Hex	2

4
G
E

4
G
E

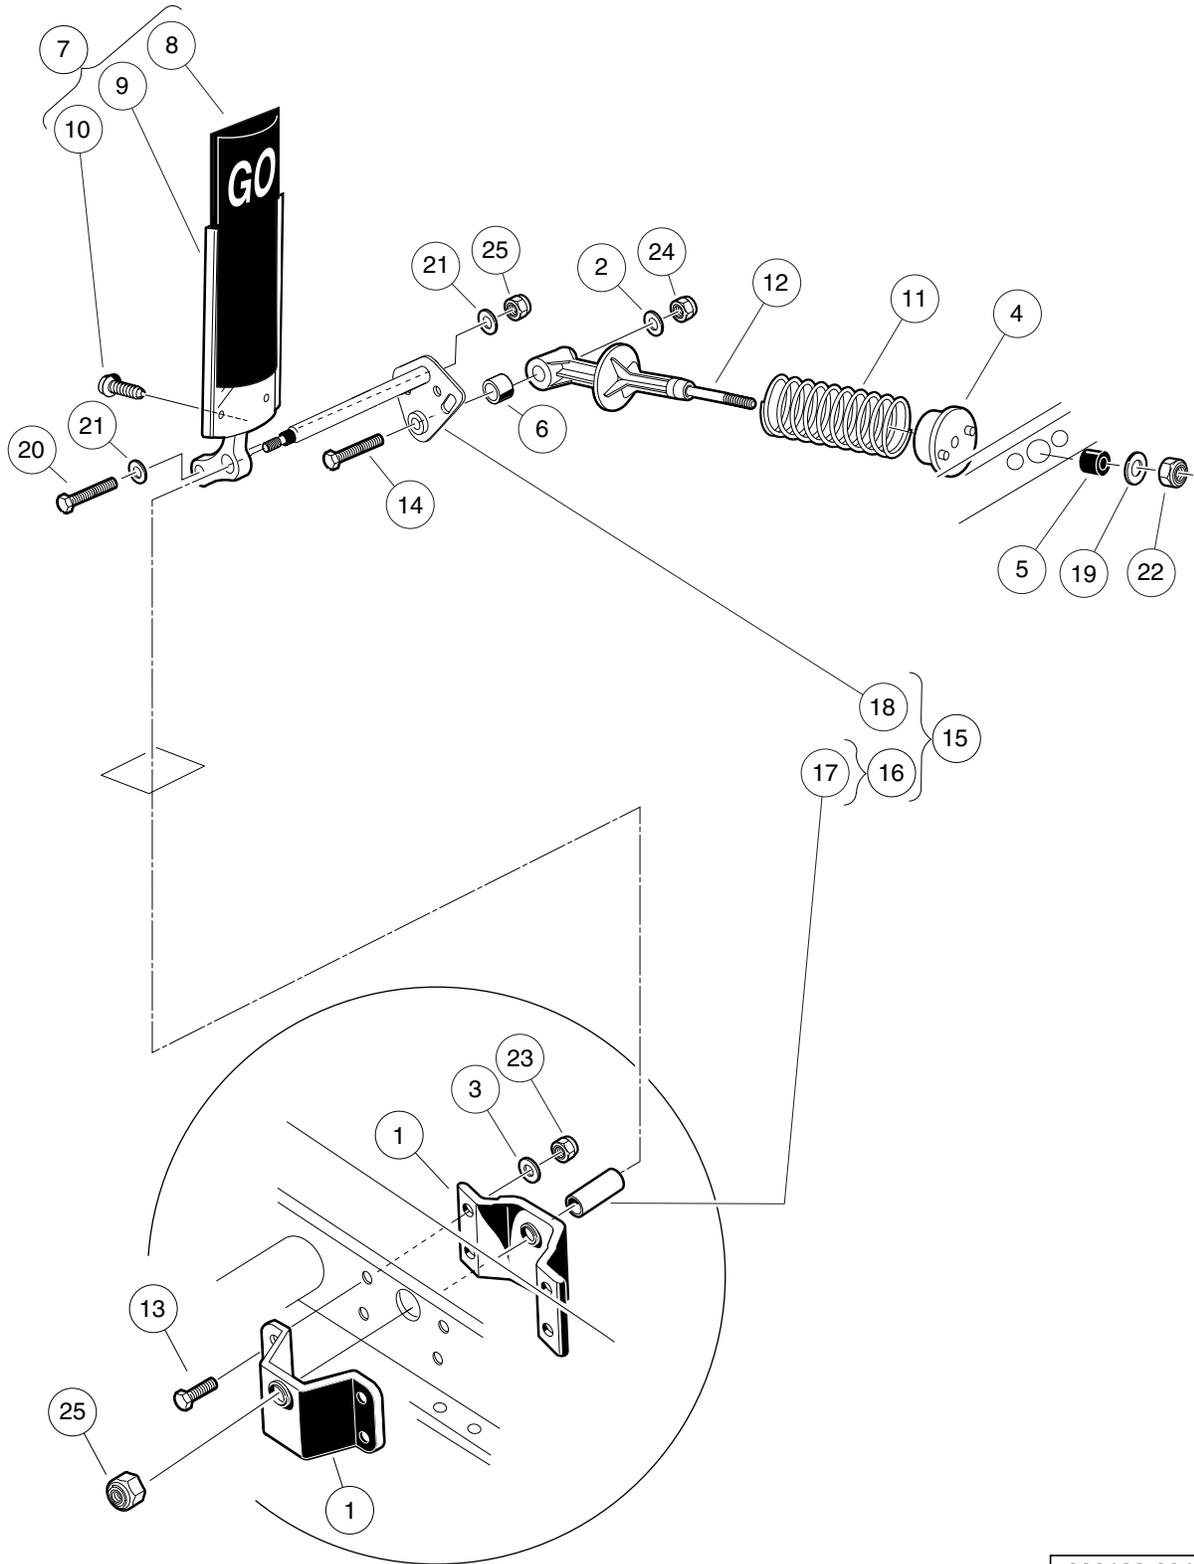


000188-004

ACCELERATOR PEDAL ASSEMBLY – ELECTRIC VEHICLES WITH MCOR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2
2	<u>1011931</u>	Washer, 1/4 Flat	1
3	<u>1014007</u>	Washer, 1/4 Flat	4
4	<u>1017378</u>	Cup, Spring	1
5	<u>1017380</u>	Bumper, Spring Return	1
6	<u>1017424</u>	Bearing, Pivot Support	1
7	<u>1017696</u>	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1
8	1013871	Pad, Accelerator Pedal	1
9	N/A	Accelerator Pedal Weldment	1
10	7716	Screw, #10-16 Type AB, Sheet Metal	4
11	101796201	Spring, Accelerator Return	1
12	<u>101817401</u>	Retainer, Spring	1
13	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4
14	<u>101862001</u>	Screw, 1/4-20 X 1.500 Flange	1
15	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 16 through 18)	1
16	<u>1011700</u>	Spacer Assembly (includes item 17)	1
17	101919801	Spacer, Accelerator	1
18	N/A	Pivot Rod Weldment	1
19	<u>1241</u>	Washer, 5/16 Type A Flat	1
20	<u>1624</u>	Screw, 3/8-16 X 1.50 Hex-Head Cap	1
21	<u>334</u>	Washer, 3/8 Type A Flat	2
22	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1
23	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
24	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1
25	<u>8754</u>	Locknut, 3/8-16 Hex	2

4
G
E

4
G
E

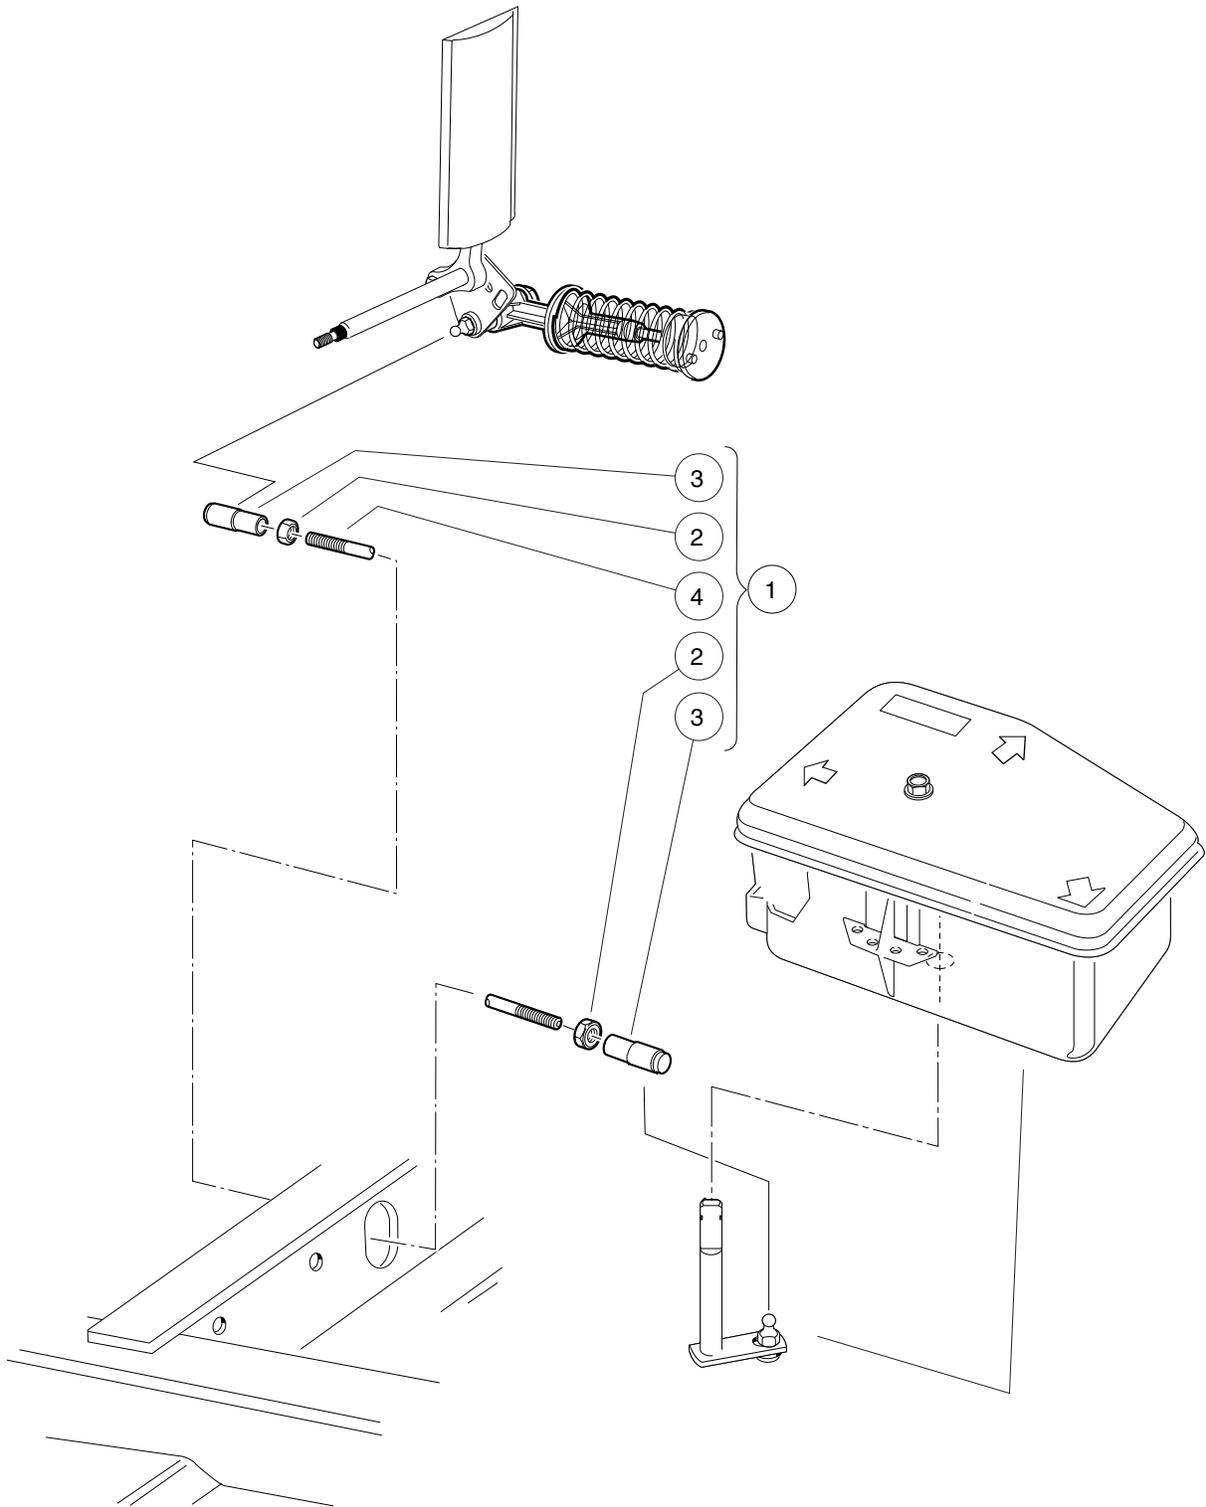

000362-001

ACCELERATOR ROD – GASOLINE TURF/CARRYALL 1


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101912401	Rod, Accelerator (includes items 2 through 4)	1
2	<u>1011084</u>	Nut, 1/4-28 Hex Jam	2
3	<u>1011734</u>	Joint, Ball	2
4	N/A	Accelerator Rod	1

4

G

E

4
G
E

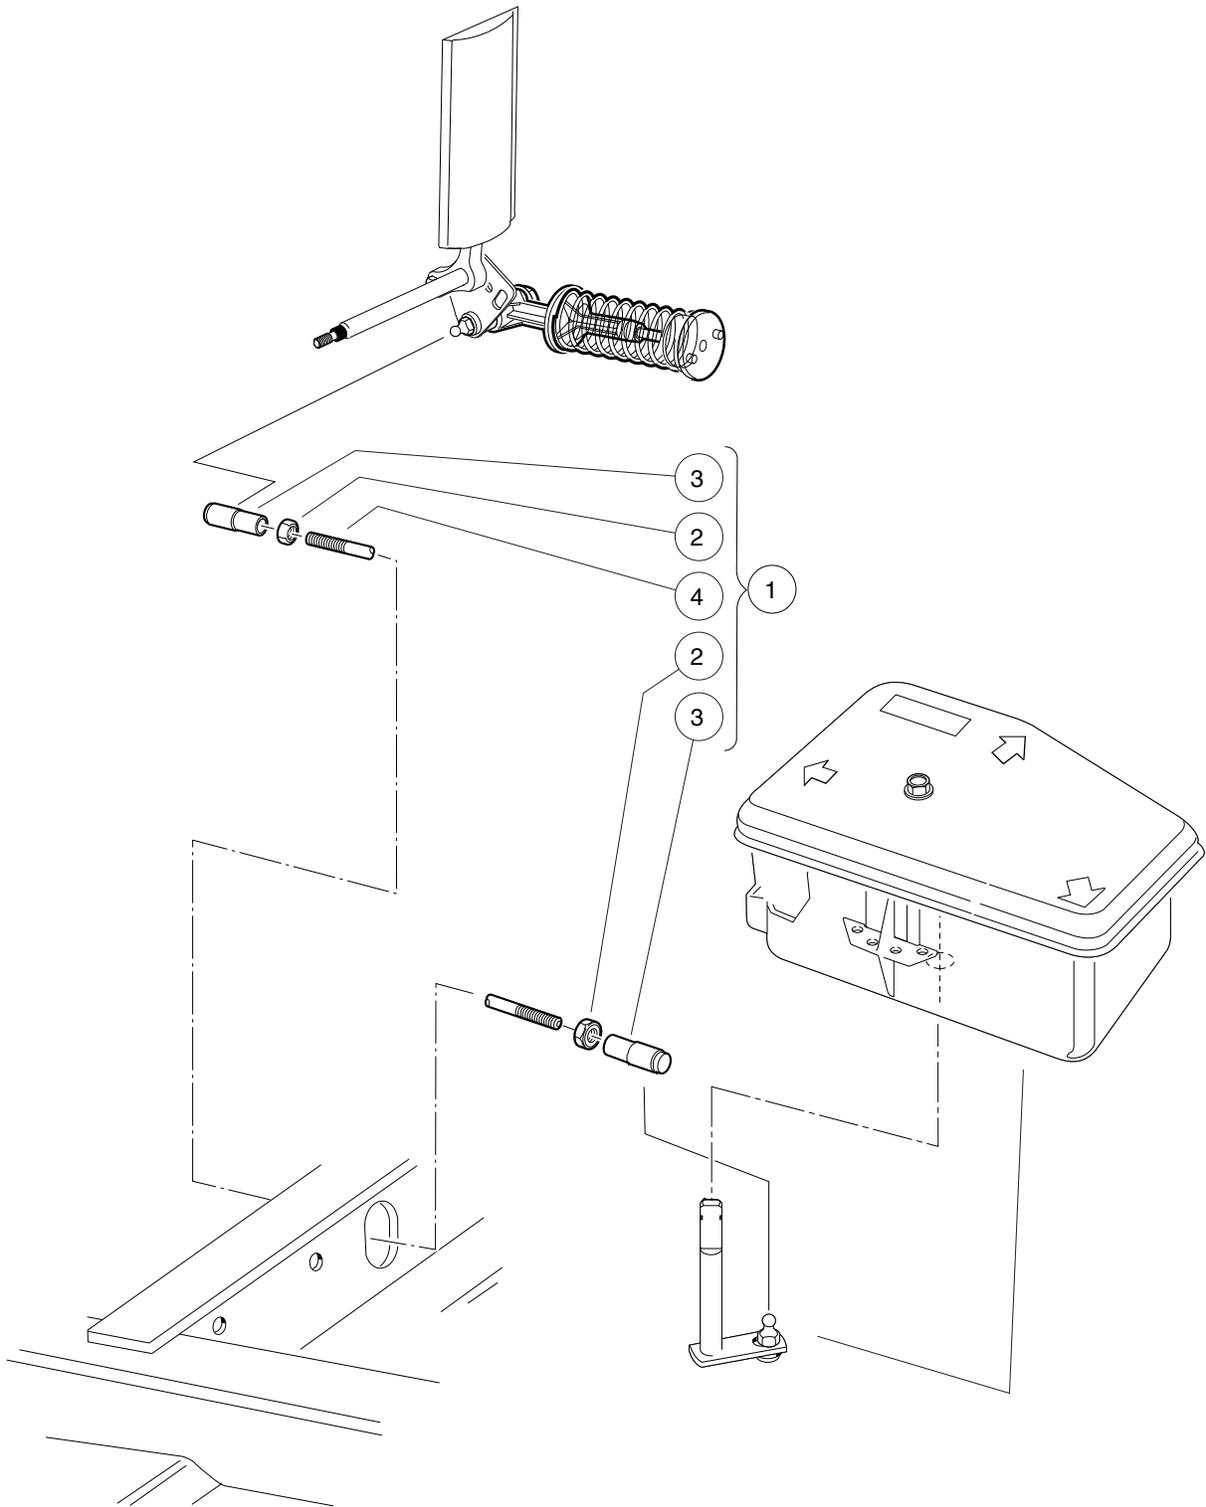

000362-001

ACCELERATOR ROD – GASOLINE TURF/CARRYALL 2, 252, AND 2 PLUS


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101822001</u>	Rod, Accelerator (includes items 2 through 4)	1
2	<u>1011084</u>	Nut, 1/4-28 Hex Jam	2
3	<u>1011734</u>	Joint, Ball	2
4	N/A	Accelerator Rod	1

4

G

E

4
G
E

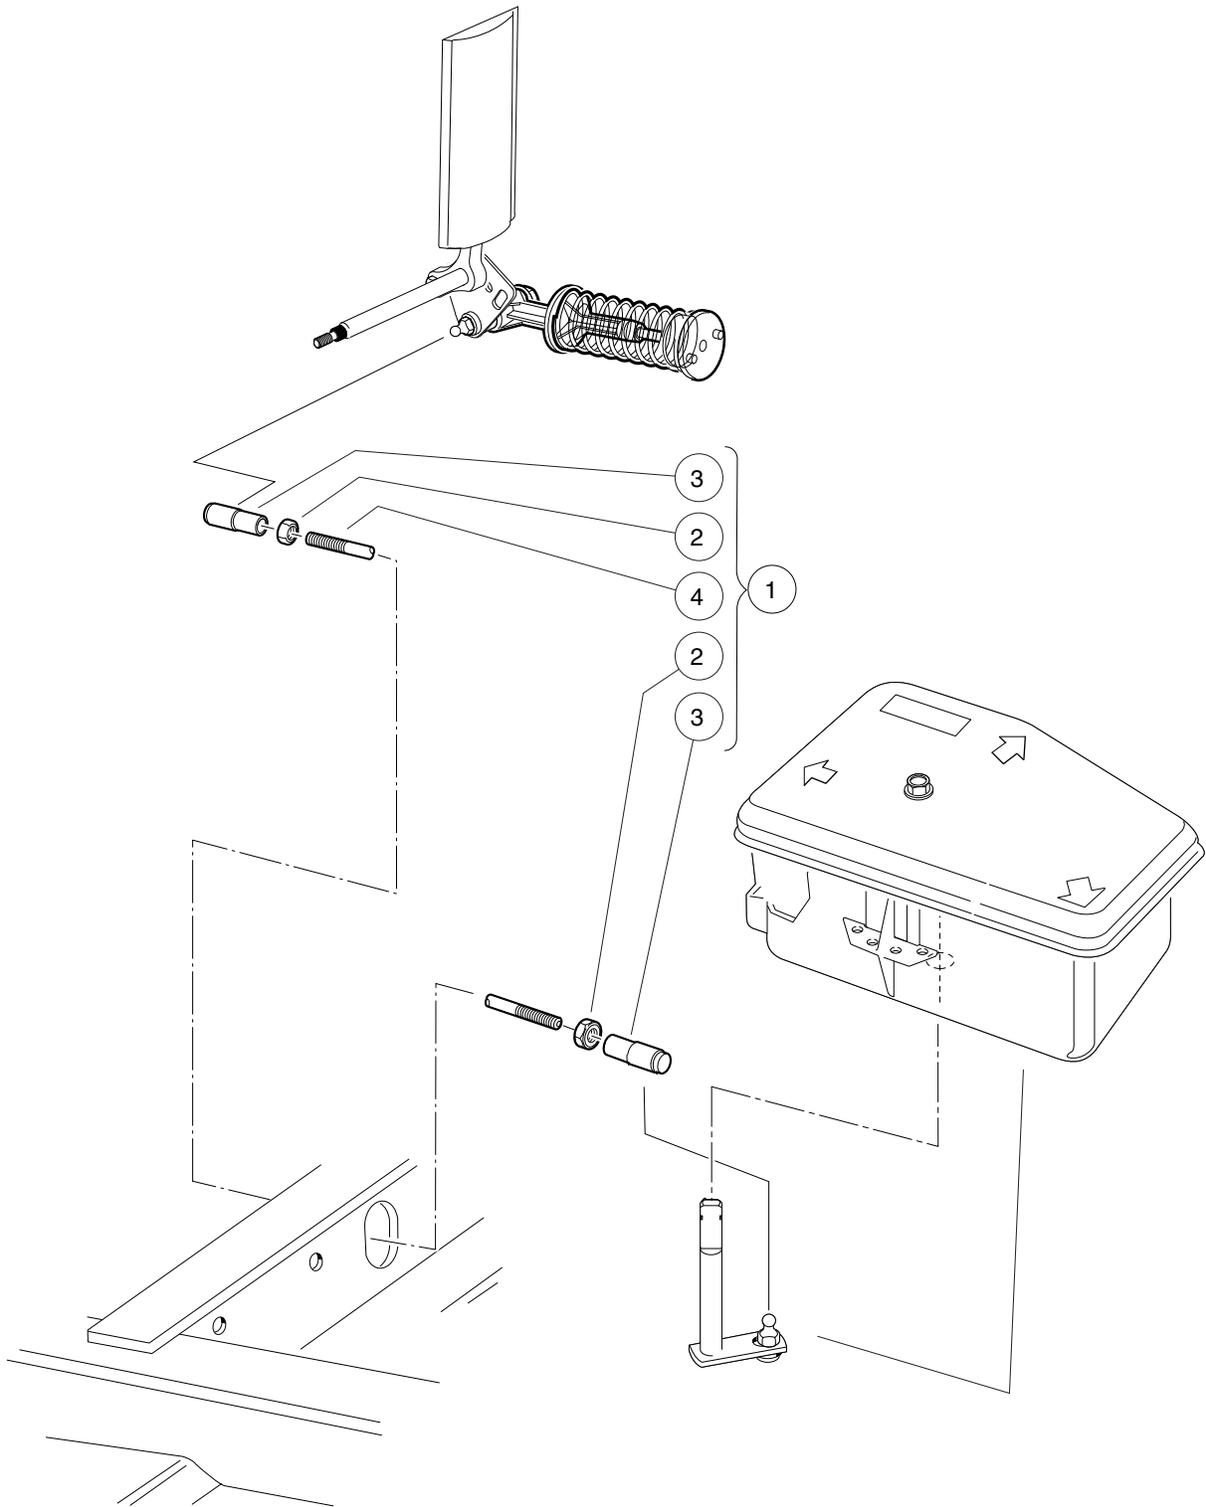

000362-001

ACCELERATOR ROD – GASOLINE TURF/CARRYALL 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101674702</u>	Rod, Accelerator (includes items 2 through 4)	1
2	<u>1011084</u>	Nut, 1/4-28 Hex Jam	2
3	<u>1011734</u>	Joint, Ball	2
4	N/A	Accelerator Rod Elec Stretch	1

4

G

E

4

G

E


STEERING, FRONT AND REAR SUSPENSION

5

G

E

5
G
E

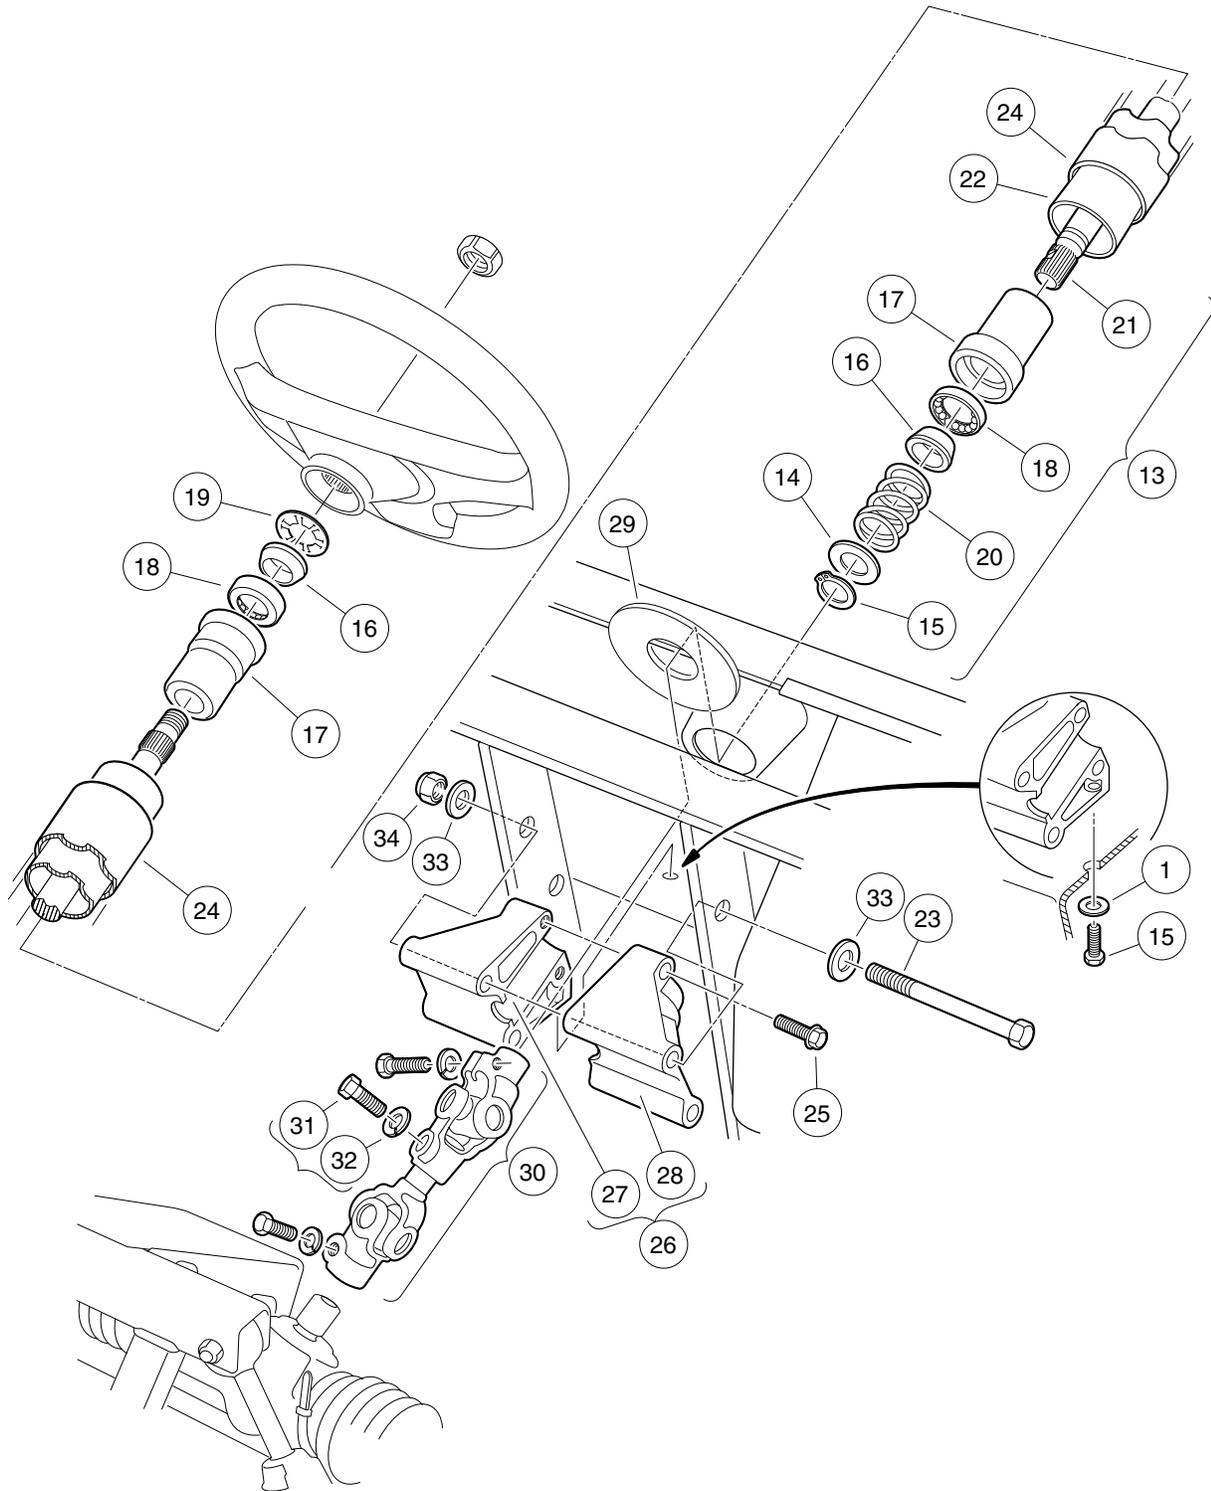


000247-002

STEERING COLUMN – ALL VEHICLES EXCEPT TURF/ CARRYALL 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011697</u>	Washer, 5/16 Flat	1
2	<u>1014216</u>	Steering Column Rebuild Kit (includes items 3 through 11)	1
3	<u>1012466</u>	Dust Cover	1
4	<u>1012605</u>	Ring, 0.579 Internal Retaining	1
5	1014125	Wedge, Molded	2
6	<u>1014126</u>	Seat, Plastic Bearing	2
7	<u>1014211</u>	Seal, Bearing	1
8	<u>1014212</u>	Spacer, Shaft	1
9	<u>1014213</u>	Bearing, Ball	2
10	1014214	Ring, Retaining	1
11	<u>1014217</u>	Spring, Steering Shaft	1
12	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	1
13	1016181	Steering Shaft Assembly (includes items 14 through 22)	1
14	<u>1012604</u>	Washer, 0.675 ID X 1.19 OD	1
15	<u>1012605</u>	Ring, 0.579 Internal Retaining	1
16	1014125	Wedge, Molded	2
17	<u>1014126</u>	Seat, Plastic Bearing	2
18	<u>1014213</u>	Bearing, Ball	2
19	1014214	Ring, Retaining	1
20	<u>1014217</u>	Spring, Steering Shaft	1
21	<u>1015545</u>	Shaft, Steering Column	1
22	1016622	Column, Aluminum Steering	1
23	<u>1016183</u>	Screw, 3/8-16 X 7.00 Hex Cap	2
24	1016263	Cover, Steering Column Tube	1
25	<u>1016269</u>	Screw, 5/16-18 Thrd Forming	2
26	101984801	Kit, Steering Column Mounting Bracket (includes items 27 and 28)	1
27	N/A	Bracket, RH Steering Column Mount	1
28	N/A	Bracket, LH Steering column mount	1
29	<u>102278001</u>	Boot, Steering Column Round	1
30	<u>103601601</u>	Shaft, Intermediate Steering (includes items 31 and 32)	1
31	<u>1017226</u>	Bolt, Hex-Head, 8mm X 1.25 - 30	3
32	<u>7174</u>	Lockwasher, 5/16 Split	3
33	<u>334</u>	Washer, 3/8 Type A Flat	4
34	<u>8754</u>	Locknut, 3/8-16 Hex	2

5
G
E

5
G
E

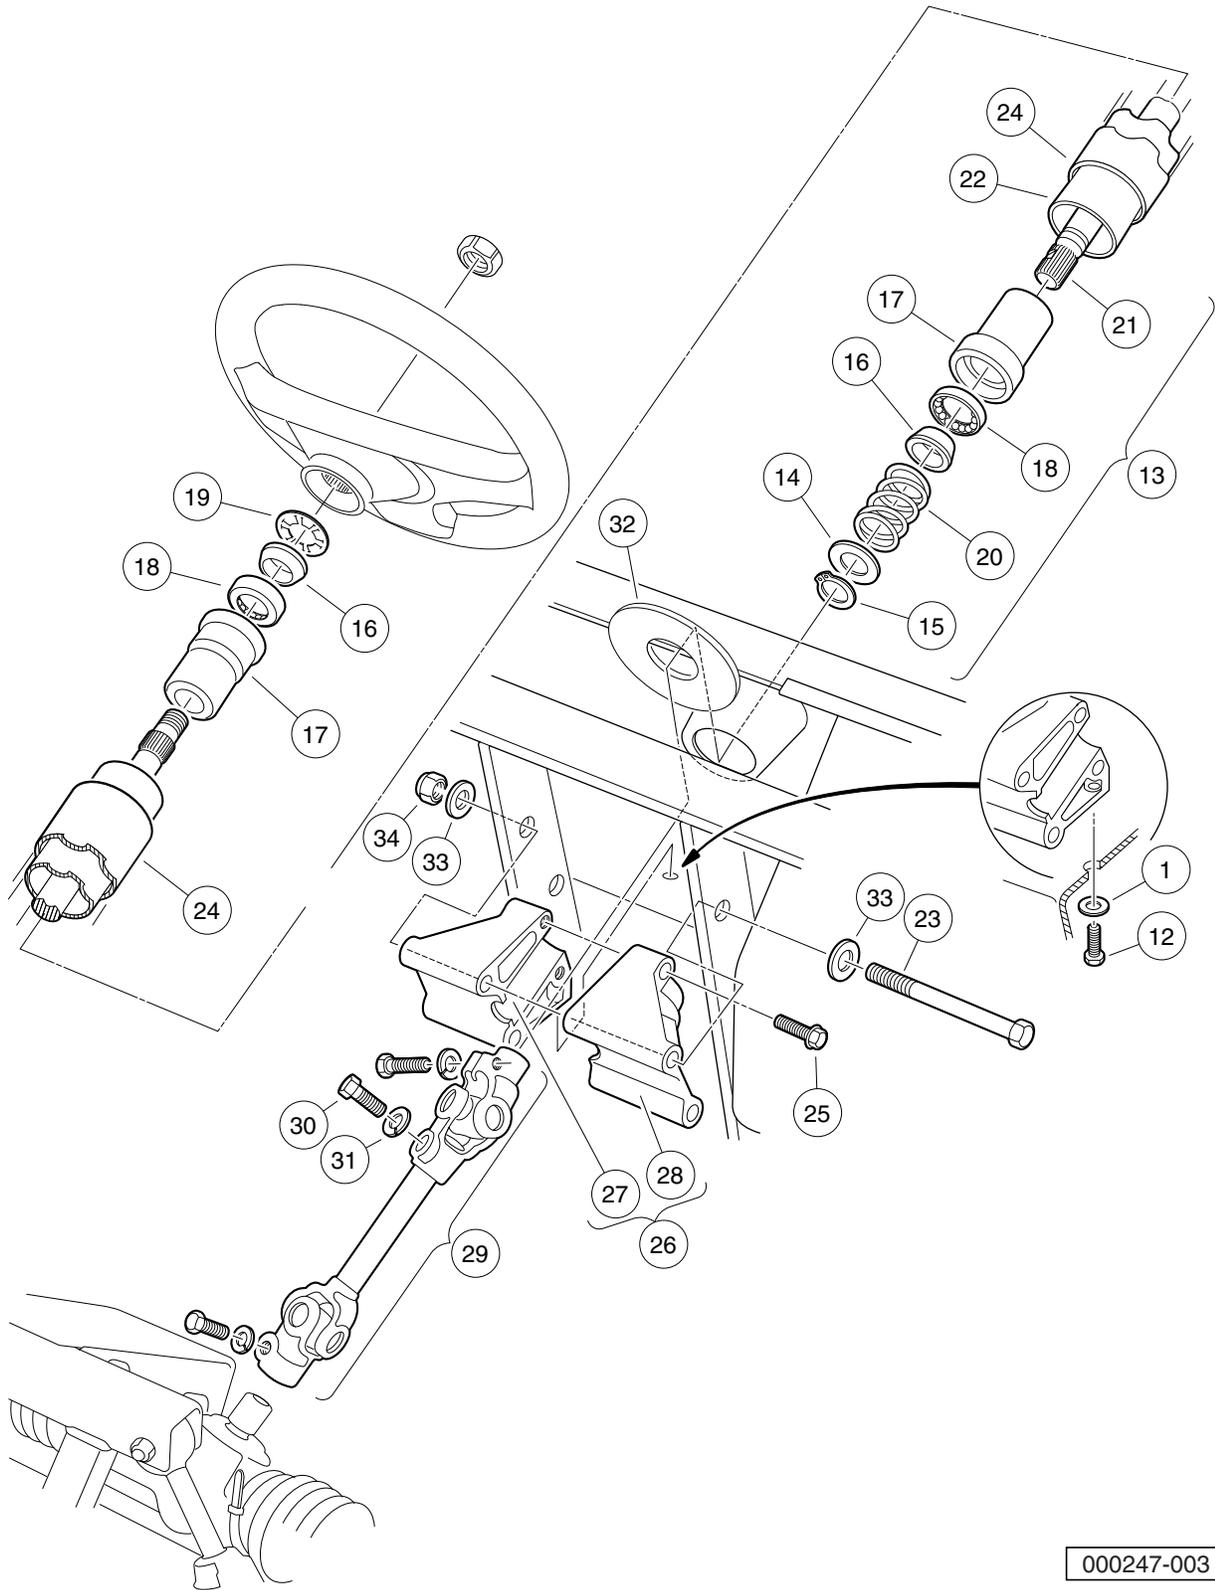


000247-003

STEERING COLUMN – TURF/CARRYALL 252 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011697</u>	Washer, 5/16 Flat	1
2	<u>1014216</u>	Steering Column Rebuild Kit (includes items 3 through 11)	1
3	<u>1012466</u>	Dust Cover	1
4	<u>1012605</u>	Ring, 0.579 Internal Retaining	1
5	1014125	Wedge, Molded	2
6	<u>1014126</u>	Seat, Plastic Bearing	2
7	<u>1014211</u>	Seal, Bearing	1
8	<u>1014212</u>	Spacer, Shaft	1
9	<u>1014213</u>	Bearing, Ball	2
10	1014214	Ring, Retaining	1
11	<u>1014217</u>	Spring, Steering Shaft	1
12	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	1
13	1016181	Steering Shaft Assembly (includes items 14 through 22)	1
14	<u>1012604</u>	Washer, 0.675 ID X 1.19 OD	1
15	<u>1012605</u>	Ring, 0.579 Internal Retaining	1
16	1014125	Wedge, Molded	2
17	<u>1014126</u>	Seat, Plastic Bearing	2
18	<u>1014213</u>	Bearing, Ball	2
19	1014214	Ring, Retaining	1
20	<u>1014217</u>	Spring, Steering Shaft	1
21	<u>1015545</u>	Shaft, Steering Column	1
22	1016622	Column, Aluminum Steering	1
23	<u>1016183</u>	Screw, 3/8-16 X 7.00 Hex Cap	2
24	1016263	Cover, Steering Column Tube	1
25	<u>1016269</u>	Screw, 5/16-18 Thrd Forming	2
26	101984801	Kit, Steering Column Mounting Bracket (includes items 27 and 28)	1
27	N/A	Bracket, RH Steering Column Mount	1
28	N/A	Bracket, LH Steering column mount	1
29	<u>102004101</u>	Joint, Steering (includes items 30 and 31)	1
30	<u>1017226</u>	Bolt, Hex-Head, 8mm X 1.25 - 30	3
31	<u>7174</u>	Lockwasher, 5/16 Split	3
32	<u>102278001</u>	Boot, Steering Column Round	1
33	<u>334</u>	Washer, 3/8 Type A Flat	4
34	<u>8754</u>	Locknut, 3/8-16 Hex	2
		Note: Item 5 is not illustrated.	

5
G
E

5
G
E

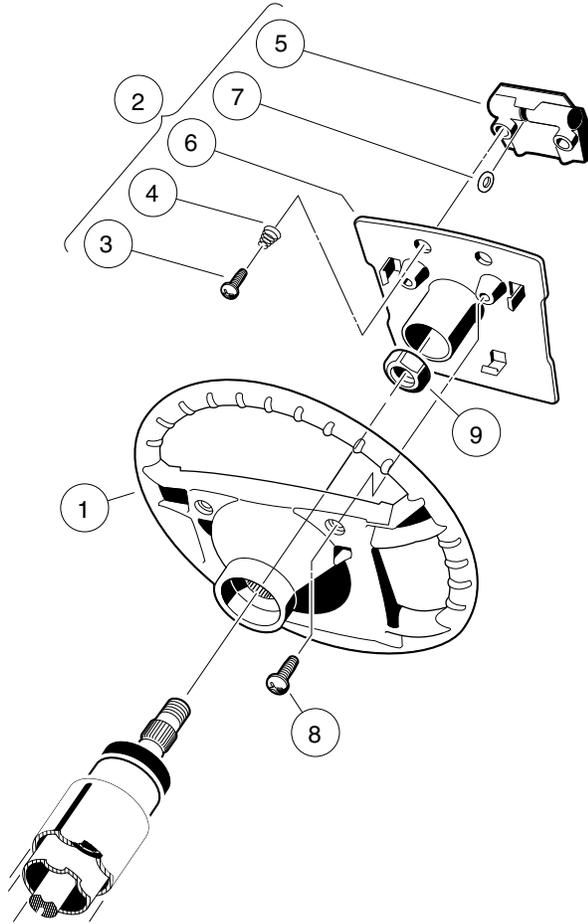


000246-002

STEERING WHEEL – TURF VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016156</u>	Wheel, Steering	1
2	1016219	Plate, Scorecard (includes items 3 through 7)	1
3	<u>1012565</u>	Screw, #12 Phillips Round Head	2
4	<u>1012566</u>	Tapered Compression Spring	2
5	1016154	Clip, Scorecard	1
6	N/A	Plate, Score Card	1
7	N/A	Pencil Grip	1
8	<u>1016663</u>	Screw, #12-14 X 0.625	2
9	<u>1017273</u>	Nut, 5/8-18 Nylon Insert Jam	1

5
G
E

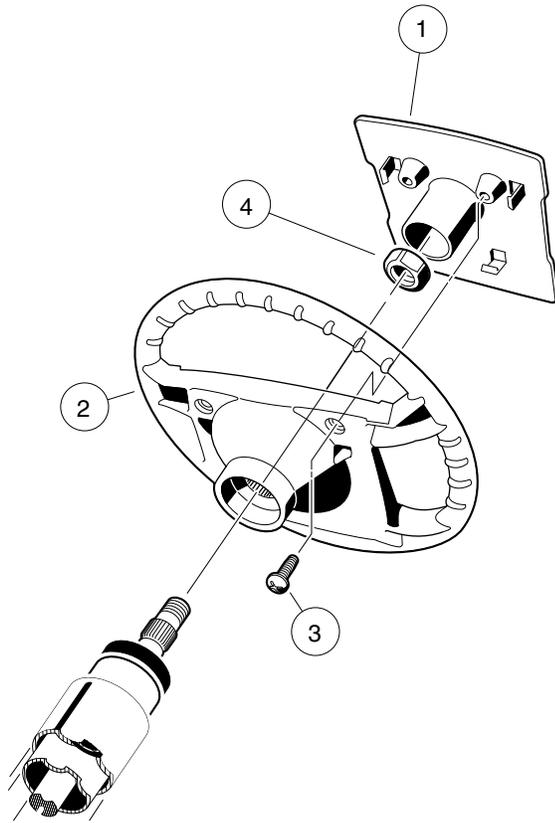


000246-003

STEERING WHEEL – CARRYALL VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101615504</u>	Plate, Scorecard	1
2	<u>1016156</u>	Wheel, Steering	1
3	<u>1016663</u>	Screw, #12-14 X 0.625	2
4	<u>1017273</u>	Nut, 5/8-18 Nylon Insert Jam	1

5
G
E


5
G
E

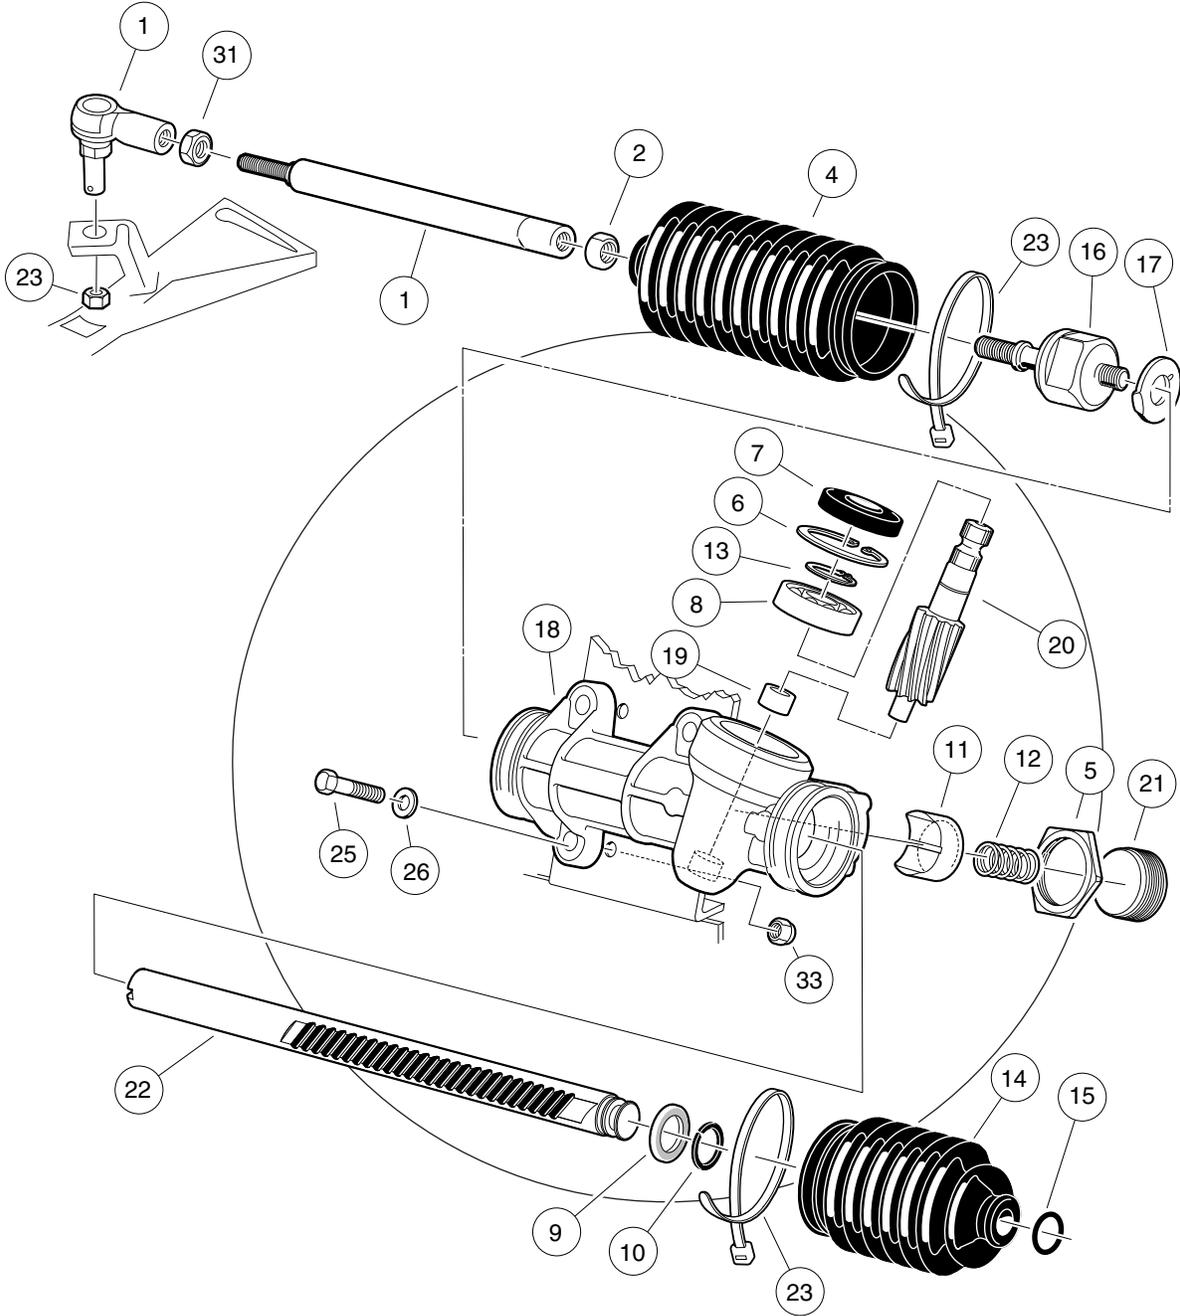

000189-001

STEERING GEAR ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		5
1	<u>1012467</u>	Link, Rack and Pinion Drag	1	G
2	1013042	Nut, 12mm Hex	1	E
3	<u>101878302</u>	Steering Gear Assembly (without yoke) (includes items 4 through 23)	1	
4	<u>1013035</u>	Bellows, Long	1	
5	<u>1013044</u>	Rack Screw Locknut	1	
6	1013051	Snap Ring	1	
7	<u>1013052</u>	Seal, Steering Pinion Dust	1	
8	<u>101879401</u>	Bearing, Ball	1	
9	<u>101879501</u>	Stop Washer	1	
10	101879601	Stop Ring, C-Type	1	
11	<u>101879701</u>	Support Yoke	1	
12	<u>101879801</u>	Rack Guide Pressure Spring	1	
13	<u>101879901</u>	Ring, Stop, C-Type	1	
14	<u>101880001</u>	Bellows, Short	1	
15	101880101	Dust Seal Retaining Ring	1	
16	<u>101880201</u>	Inner Ball Joint Asm	1	
17	101880301	Washer, Tab	1	
18	N/A	Box, Steering Gear	1	
19	N/A	Bearing, Lower Pinion	1	
20	N/A	Pinion, Steering	1	
21	N/A	Screw, Rack Guide	1	
22	N/A	Rack, Steering	1	
23	<u>8990</u>	Tie Wrap, 8" Nylon	2	
24	<u>1035</u>	Cotter Pin, 3/32 x 1	1	
25	<u>1624</u>	Screw, 3/8-16 X 1.50 Hex-Head Cap	3	
26	<u>334</u>	Washer, 3/8 Type A Flat	3	
27	<u>7540</u>	Ball Joint, Left (includes items 28 through 31)	1	
28	1011895	Socket, LH Vertical	1	
29	<u>1011930</u>	Seal, Vertical Socket Dust	1	
30	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
31	7602	Nut, 3/8-24 UNF Hex	1	
32	<u>7555</u>	Nut, 1/2-20 Hex, Left-Hand Thread	1	
33	<u>8754</u>	Locknut, 3/8-16 Hex	3	

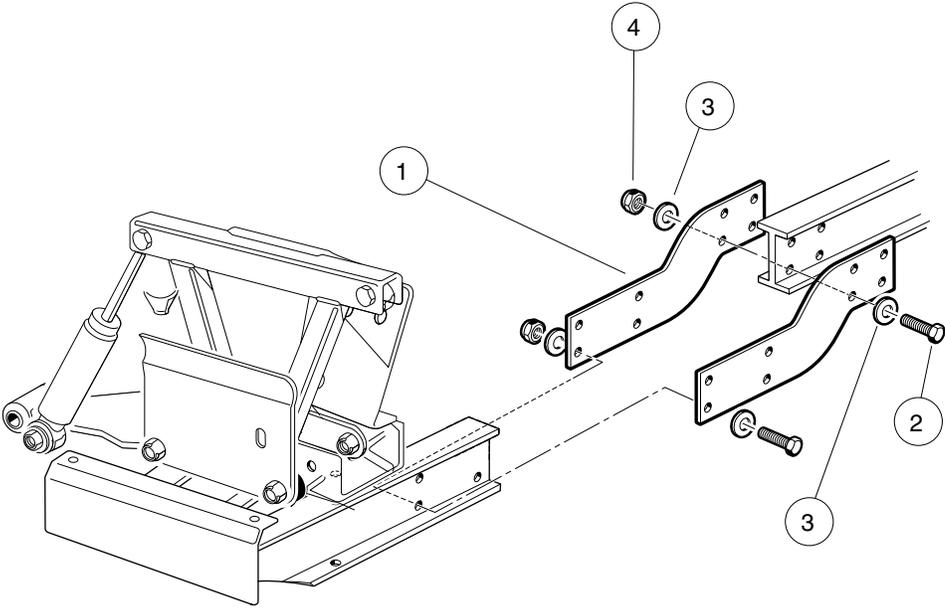


000304-001

FRONT FRAME PLATES – TURF/CARRYALL 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102003901</u>	Extension, I-Beam	4
2	1218	Screw, 5/16-18 X 1.25 Hex-Head Cap	16
3	<u>1241</u>	Washer, 5/16 Type A Flat	32
4	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	16

5
G
E

5
G
E

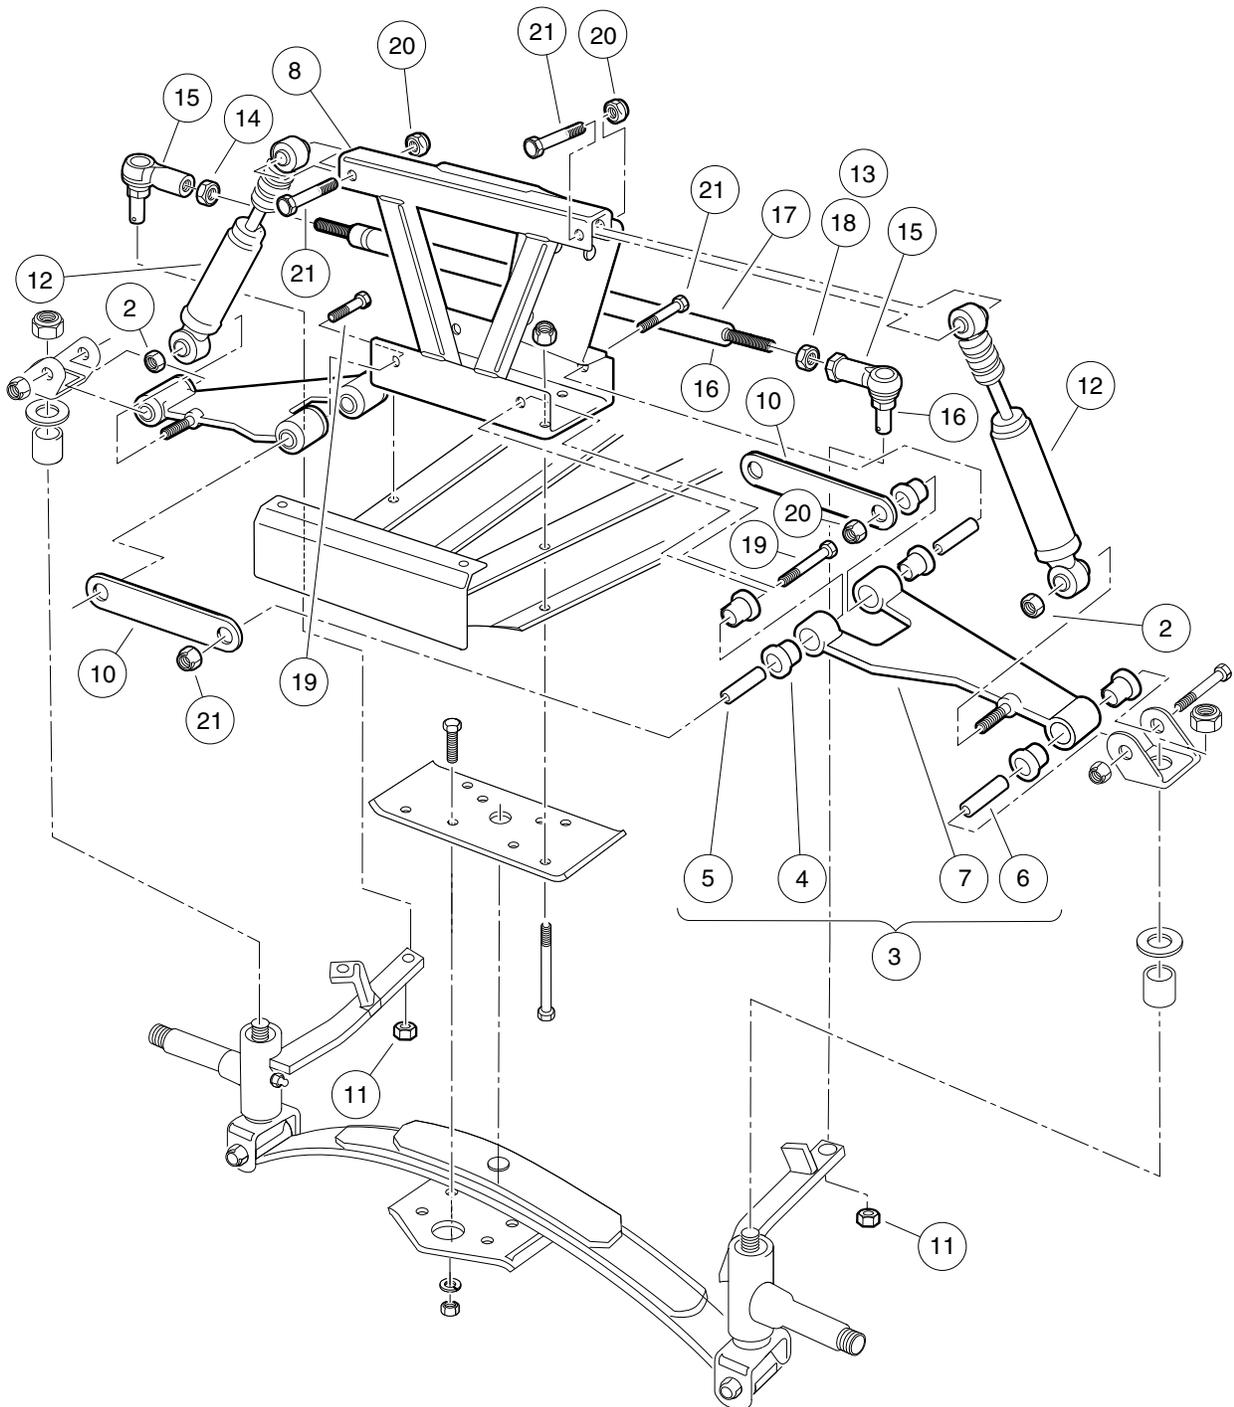


000312-002

FRONT SUSPENSION, UPPER – TURF/CARRYALL 1 AND TURF/ CARRYALL 2 WITH TWO-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Sub, Fr Susp. -1 Lf-2wb Golf (includes items 2 through 21)	1
2	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2
3	<u>1016353</u>	Sub-Assembly, Delta A-Plate (includes items 4 through 7)	2
4	<u>1016346</u>	Bushing, Urethane	6
5	<u>1016349</u>	Sleeve, Delta Inner	2
6	<u>1016350</u>	Sleeve, Delta Outer	1
7	<u>1016351</u>	Delta A-Plate	1
8	<u>1016385</u>	Delta Shock and Gear Support Assembly	1
9	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	2
10	<u>1017266</u>	A-Plate Strap	2
11	<u>102289201</u>	Nut - Hex Locking, M12 X 1.25	3
12	<u>103351001</u>	Shock Absorber, Front, Common	2
13	N/A	Asm, Tie Rod (includes items 14 through 18)	1
14	1013042	Nut, 12mm Hex	1
15	<u>102022601</u>	End, Tie Rod M12 X 1.25 Rh	1
16	<u>102022602</u>	End, Tie Rod, M12 X 1.25, Lh	1
17	<u>103354701</u>	Rod, Tie, Male Thd	1
18	<u>103653501</u>	Nut, Jam, M12-1.25, Lh	1
19	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4
20	<u>8754</u>	Locknut, 3/8-16 Hex	13
21	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	2

5
G
E

5
G
E

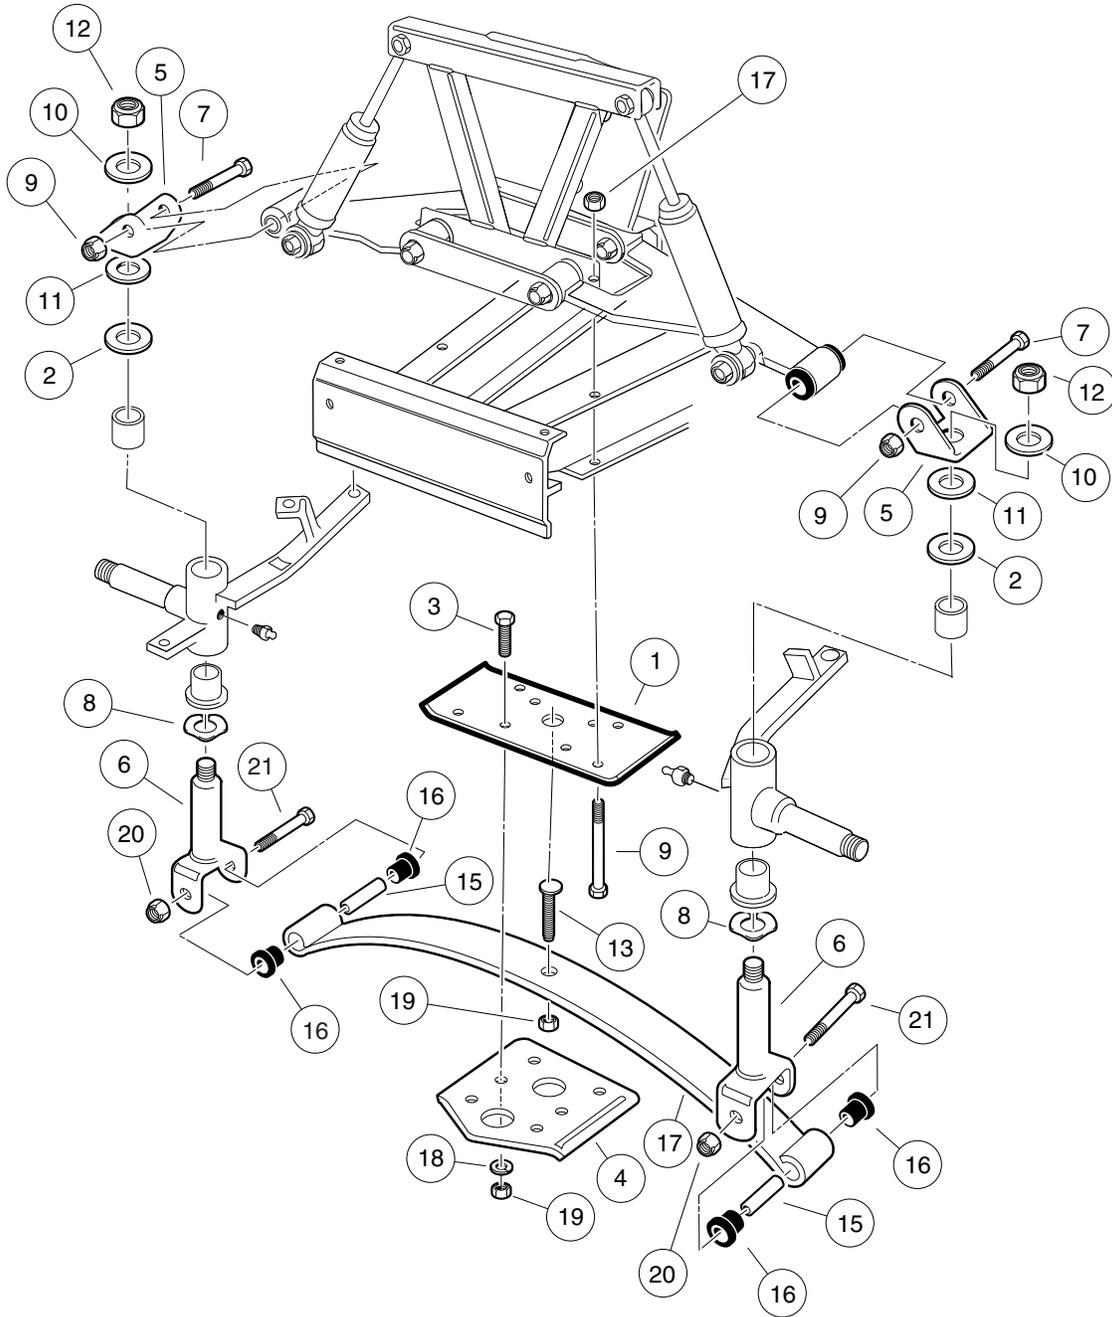


000311-001

FRONT SUSPENSION, LOWER – TURF/CARRYALL 1 AND TURF/ CARRYALL 2 WITH TWO-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010124</u>	Plate, Spring Mount	1
2	<u>1010150</u>	Bearing, Thrust	2
3	<u>1010177</u>	Bolt, 3/8-16 X 2.00 Hex Head	4
4	<u>1014276</u>	Plate, Front Spring Retainer	1
5	<u>1016384</u>	Clevis, Delta Upper	2
6	<u>1016386</u>	King Pin Assembly	2
7	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	2
8	<u>1016389</u>	Washer, 1.125 Od Wave	2
9	<u>101870501</u>	Screw, 3/8-16 X 4.75 Hx Hd Cap	4
10	<u>102564002</u>	Washer-1/2 Conical, Yellow	2
11	<u>102684501</u>	Washer, M12 Hard Regular	2
12	<u>102766301</u>	Nut, 1/2-20, Center Lock	2
13	<u>103507001</u>	Eccentric Bolt Common	1
14	N/A	Spring Asm, Front, 1 Leaf (includes items 15 through 17)	1
15	<u>1012303</u>	Bushing, Steel	2
16	<u>1015583</u>	Bushing, Urethane	4
17	N/A	Spring, Front, 1 Leaf	1
18	<u>357</u>	Lockwasher, 3/8 Split	4
19	<u>706</u>	Nut, Hex 3/8-16	1
20	<u>8754</u>	Locknut, 3/8-16 Hex	4
21	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2

5
G
E

5
G
E

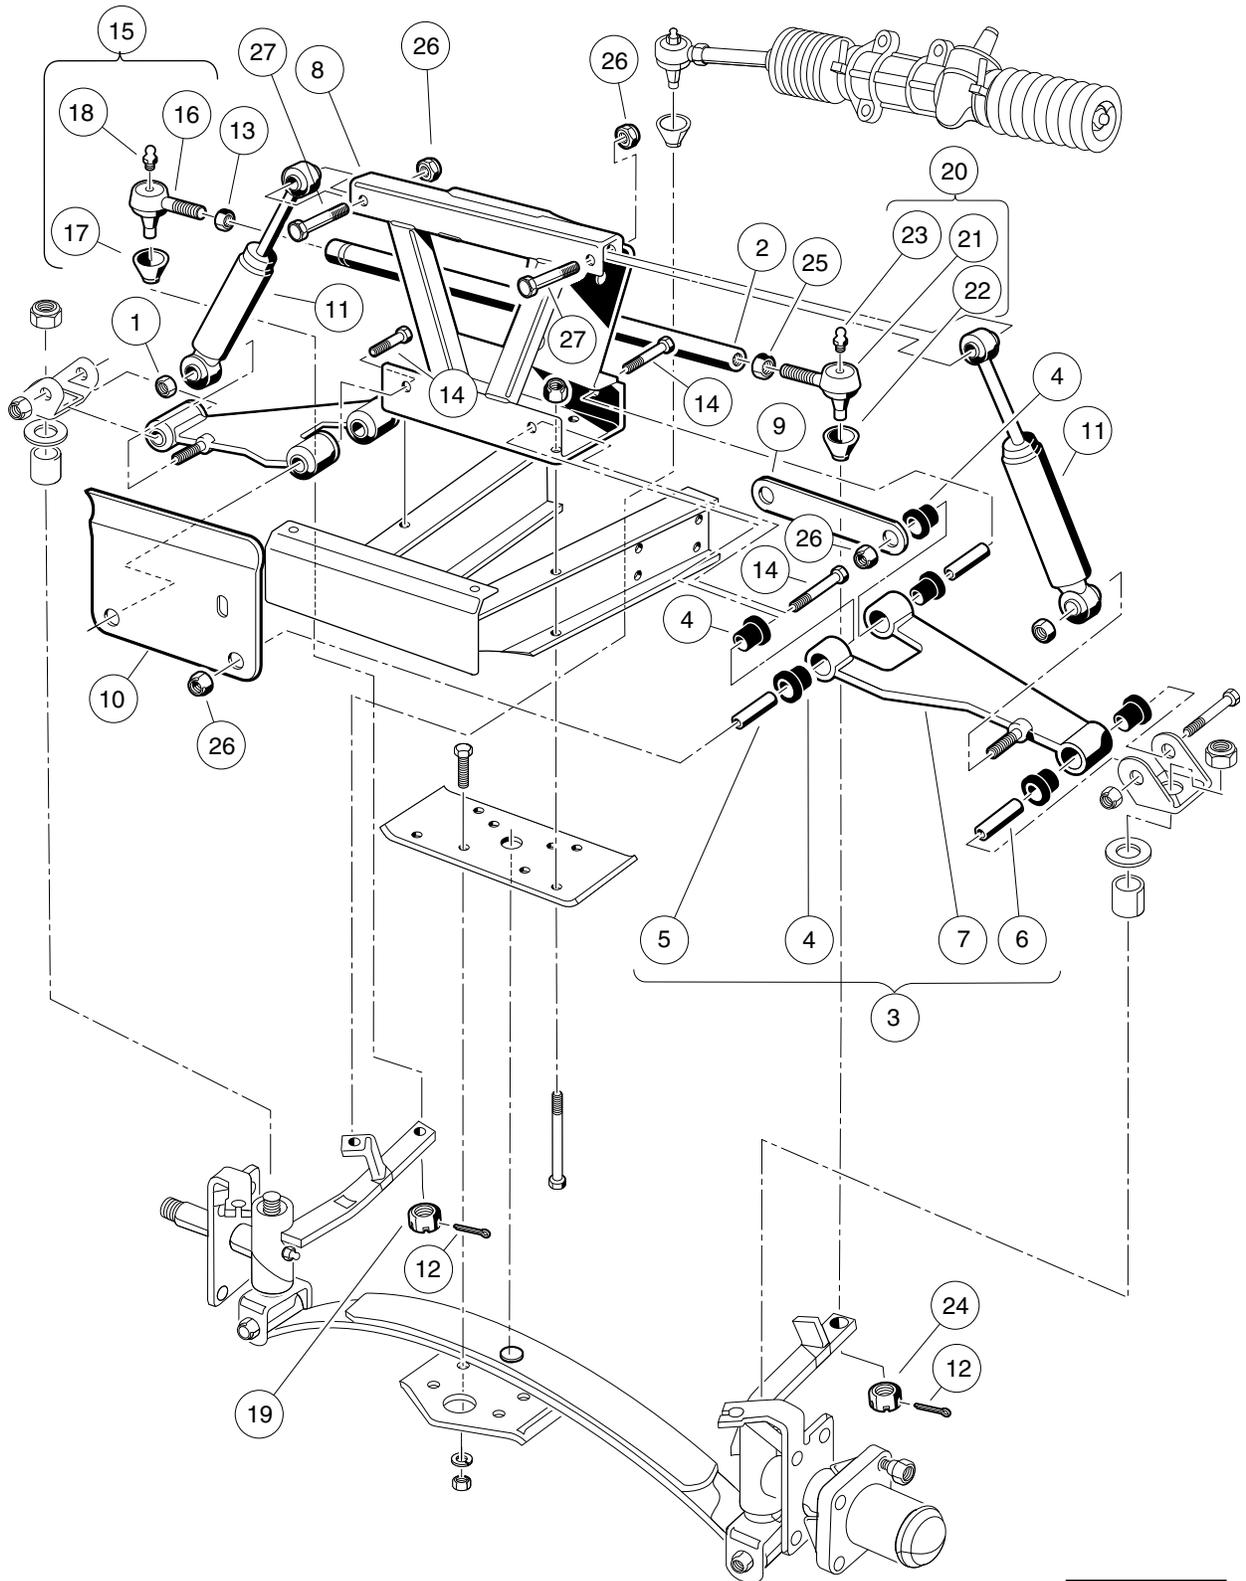


000314-001

FRONT SUSPENSION, UPPER – TURF/CARRYALL 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2
2	<u>1010219</u>	Tie Rod	1
3	<u>1016353</u>	Sub-Assembly, Delta A-Plate (includes items 4 through 7)	2
4	<u>1016346</u>	Bushing, Urethane	6
5	<u>1016349</u>	Sleeve, Delta Inner	2
6	<u>1016350</u>	Sleeve, Delta Outer	1
7	<u>1016351</u>	Delta A-Plate	1
8	<u>1016385</u>	Delta Shock and Gear Support Assembly	1
9	<u>1017266</u>	A-Plate Strap	1
10	<u>101955001</u>	Brake Cable Guide Bracket	1
11	<u>103351001</u>	Shock Absorber, Front, Common	2
12	<u>1035</u>	Cotter Pin, 3/32 x 1	2
13	<u>1308</u>	Nut, 1/2-20 Hex	1
14	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4
15	<u>7539</u>	Ball Joint, Right-Hand (includes items 16 through 19)	1
16	1011893	Socket, RH Vertical	1
17	<u>1011930</u>	Seal, Vertical Socket Dust	1
18	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1
19	7602	Nut, 3/8-24 UNF Hex	1
20	<u>7540</u>	Ball Joint, Left (includes items 21 through 24)	1
21	1011895	Socket, LH Vertical	1
22	<u>1011930</u>	Seal, Vertical Socket Dust	1
23	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1
24	7602	Nut, 3/8-24 UNF Hex	1
25	<u>7555</u>	Nut, 1/2-20 Hex, Left-Hand Thread	1
26	<u>8754</u>	Locknut, 3/8-16 Hex	6
27	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	2

5
G
E

5
G
E

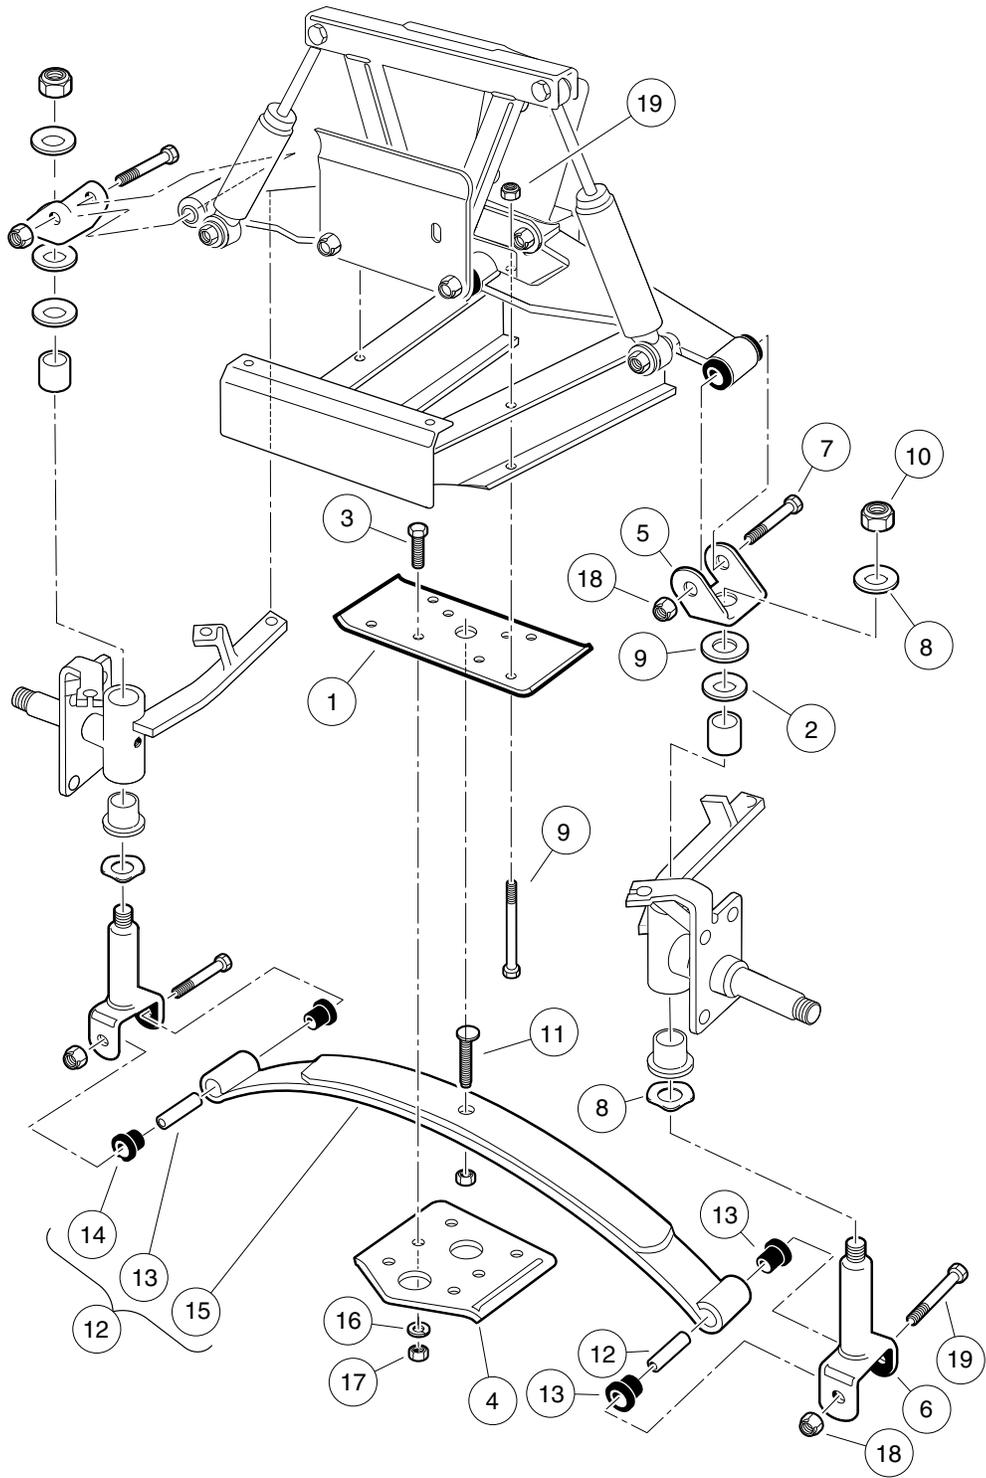


000313-001

FRONT SUSPENSION, LOWER – TURF/CARRYALL 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010124</u>	Plate, Spring Mount	1
2	<u>1010150</u>	Bearing, Thrust	2
3	<u>1010177</u>	Bolt, 3/8-16 X 2.00 Hex Head	4
4	<u>1014276</u>	Plate, Front Spring Retainer	1
5	<u>1016384</u>	Clevis, Delta Upper	2
6	<u>1016386</u>	King Pin Assembly	2
7	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	2
8	<u>1016389</u>	Washer, 1.125 Od Wave	2
9	<u>101870501</u>	Screw, 3/8-16 X 4.75 Hx Hd Cap	4
10	<u>102766301</u>	Nut, 1/2-20, Center Lock	2
11	<u>103507001</u>	Eccentric Bolt Common	1
12	<u>103628801</u>	Spring Asm, Front, 2 Leaf (includes items 13 through 15)	1
13	<u>1012303</u>	Bushing, Steel	2
14	<u>1015583</u>	Bushing, Urethane	4
15	<u>103502701</u>	Spring, Front, 2 Leaf	1
16	<u>357</u>	Lockwasher, 3/8 Split	4
17	<u>706</u>	Nut, Hex 3/8-16	4
18	<u>8754</u>	Locknut, 3/8-16 Hex	8
19	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2

5
G
E

5
G
E

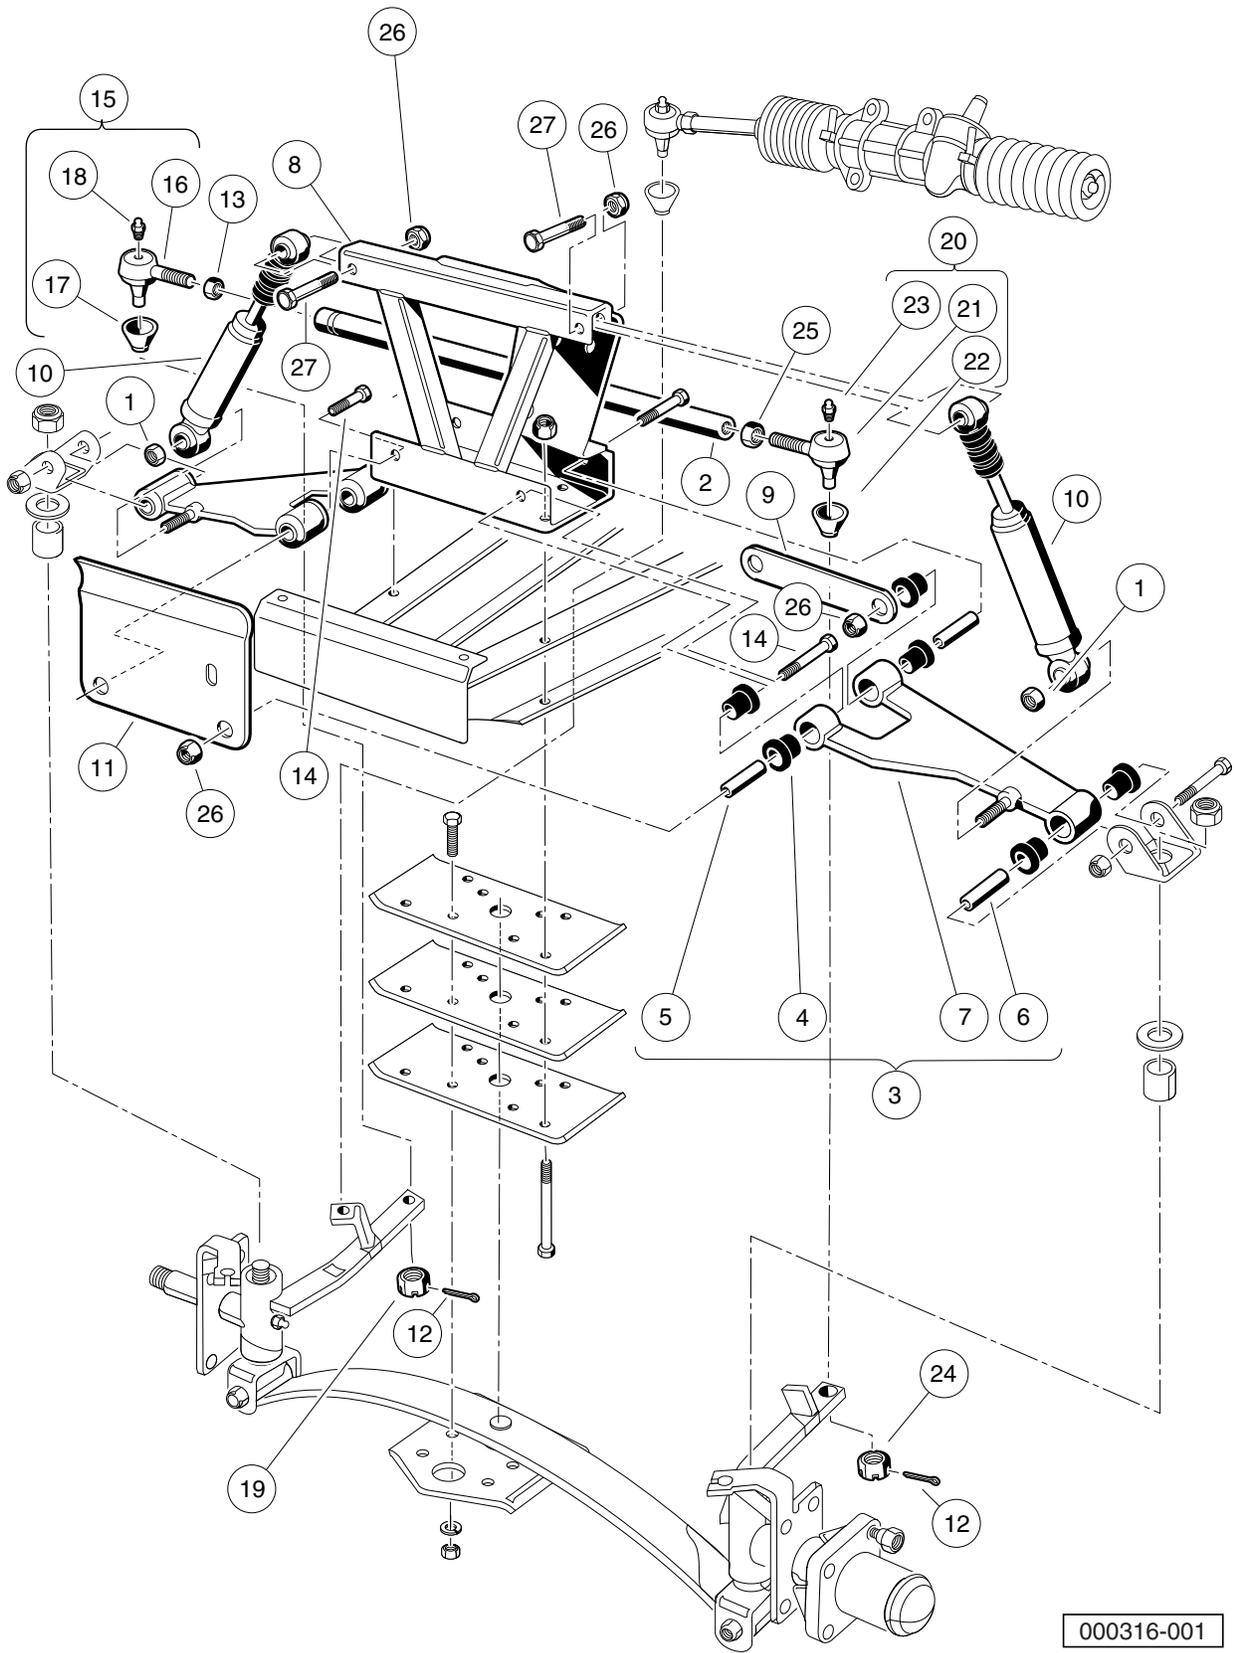


000316-001

FRONT SUSPENSION, UPPER – CARRYALL 2 PLUS AND TURF/ CARRYALL 2 WITH FOUR-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		5
1	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2	G
2	<u>1010219</u>	Tie Rod	1	E
3	<u>1016353</u>	Sub-Assembly, Delta A-Plate (includes items 4 through 7)	2	
4	<u>1016346</u>	Bushing, Urethane	6	
5	<u>1016349</u>	Sleeve, Delta Inner	2	
6	<u>1016350</u>	Sleeve, Delta Outer	1	
7	<u>1016351</u>	Delta A-Plate	1	
8	<u>1016385</u>	Delta Shock and Gear Support Assembly	1	
9	<u>1017266</u>	A-Plate Strap	1	
10	<u>101870601</u>	Shock Absorber, Front Utility	2	
11	<u>101955001</u>	Brake Cable Guide Bracket	1	
12	<u>1035</u>	Cotter Pin, 3/32 x 1	2	
13	<u>1308</u>	Nut, 1/2-20 Hex	1	
14	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4	
15	<u>7539</u>	Ball Joint, Right-Hand (includes items 16 through 19)	1	
16	1011893	Socket, RH Vertical	1	
17	<u>1011930</u>	Seal, Vertical Socket Dust	1	
18	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
19	7602	Nut, 3/8-24 UNF Hex	1	
20	<u>7540</u>	Ball Joint, Left (includes items 21 through 24)	1	
21	1011895	Socket, LH Vertical	1	
22	<u>1011930</u>	Seal, Vertical Socket Dust	1	
23	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
24	7602	Nut, 3/8-24 UNF Hex	1	
25	<u>7555</u>	Nut, 1/2-20 Hex, Left-Hand Thread	1	
26	<u>8754</u>	Locknut, 3/8-16 Hex	6	
27	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	2	

5
G
E

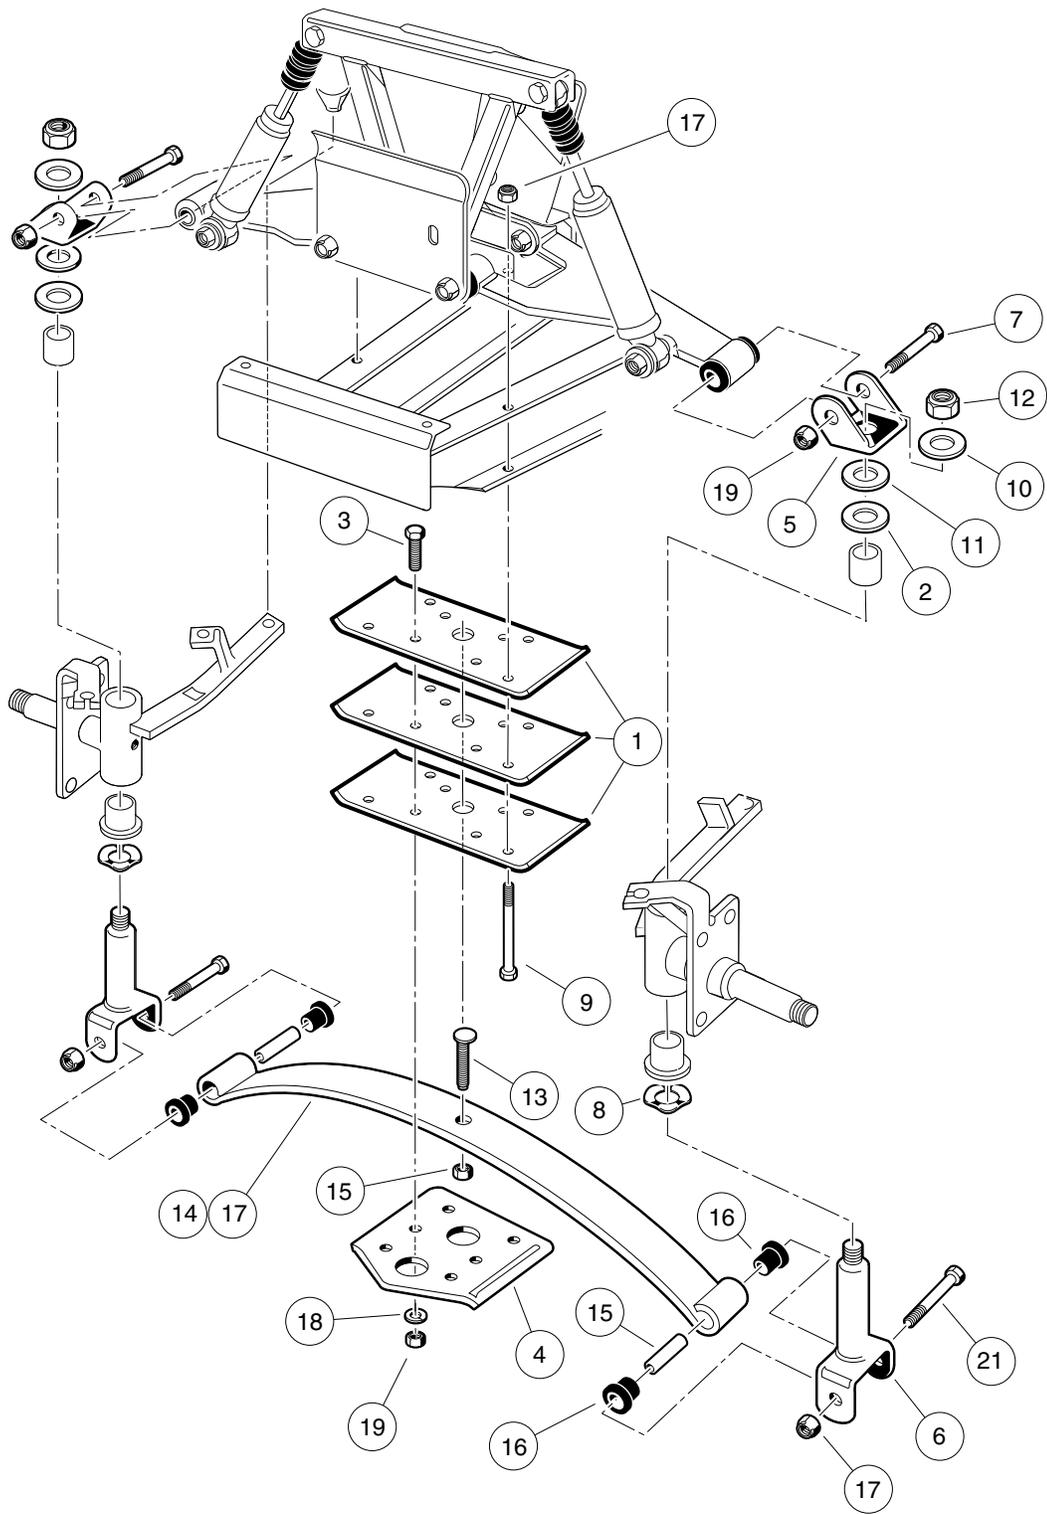


000315-001

FRONT SUSPENSION, LOWER – CARRYALL 2 PLUS AND TURF/ CARRYALL 2 WITH FOUR-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010124</u>	Plate, Spring Mount	3
2	<u>1010150</u>	Bearing, Thrust	2
3	<u>1010177</u>	Bolt, 3/8-16 X 2.00 Hex Head	4
4	<u>1014276</u>	Plate, Front Spring Retainer	1
5	<u>1016384</u>	Clevis, Delta Upper	2
6	<u>1016386</u>	King Pin Assembly	2
7	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	2
8	<u>1016389</u>	Washer, 1.125 Od Wave	2
9	<u>101870501</u>	Screw, 3/8-16 X 4.75 Hx Hd Cap	4
10	<u>102564002</u>	Washer-1/2 Conical, Yellow	2
11	<u>102684501</u>	Washer, M12 Hard Regular	2
12	<u>102766301</u>	Nut, 1/2-20, Center Lock	2
13	<u>103507001</u>	Eccentric Bolt Common	1
14	N/A	Spring Asm, Front, 1 Leaf (includes items 15 through 17)	1
15	<u>1012303</u>	Bushing, Steel	2
16	<u>1015583</u>	Bushing, Urethane	4
17	N/A	Spring, Front, 1 Leaf	1
18	<u>357</u>	Lockwasher, 3/8 Split	4
19	<u>706</u>	Nut, Hex 3/8-16	5
20	<u>8754</u>	Locknut, 3/8-16 Hex	8
21	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2

5
G
E

5
G
E

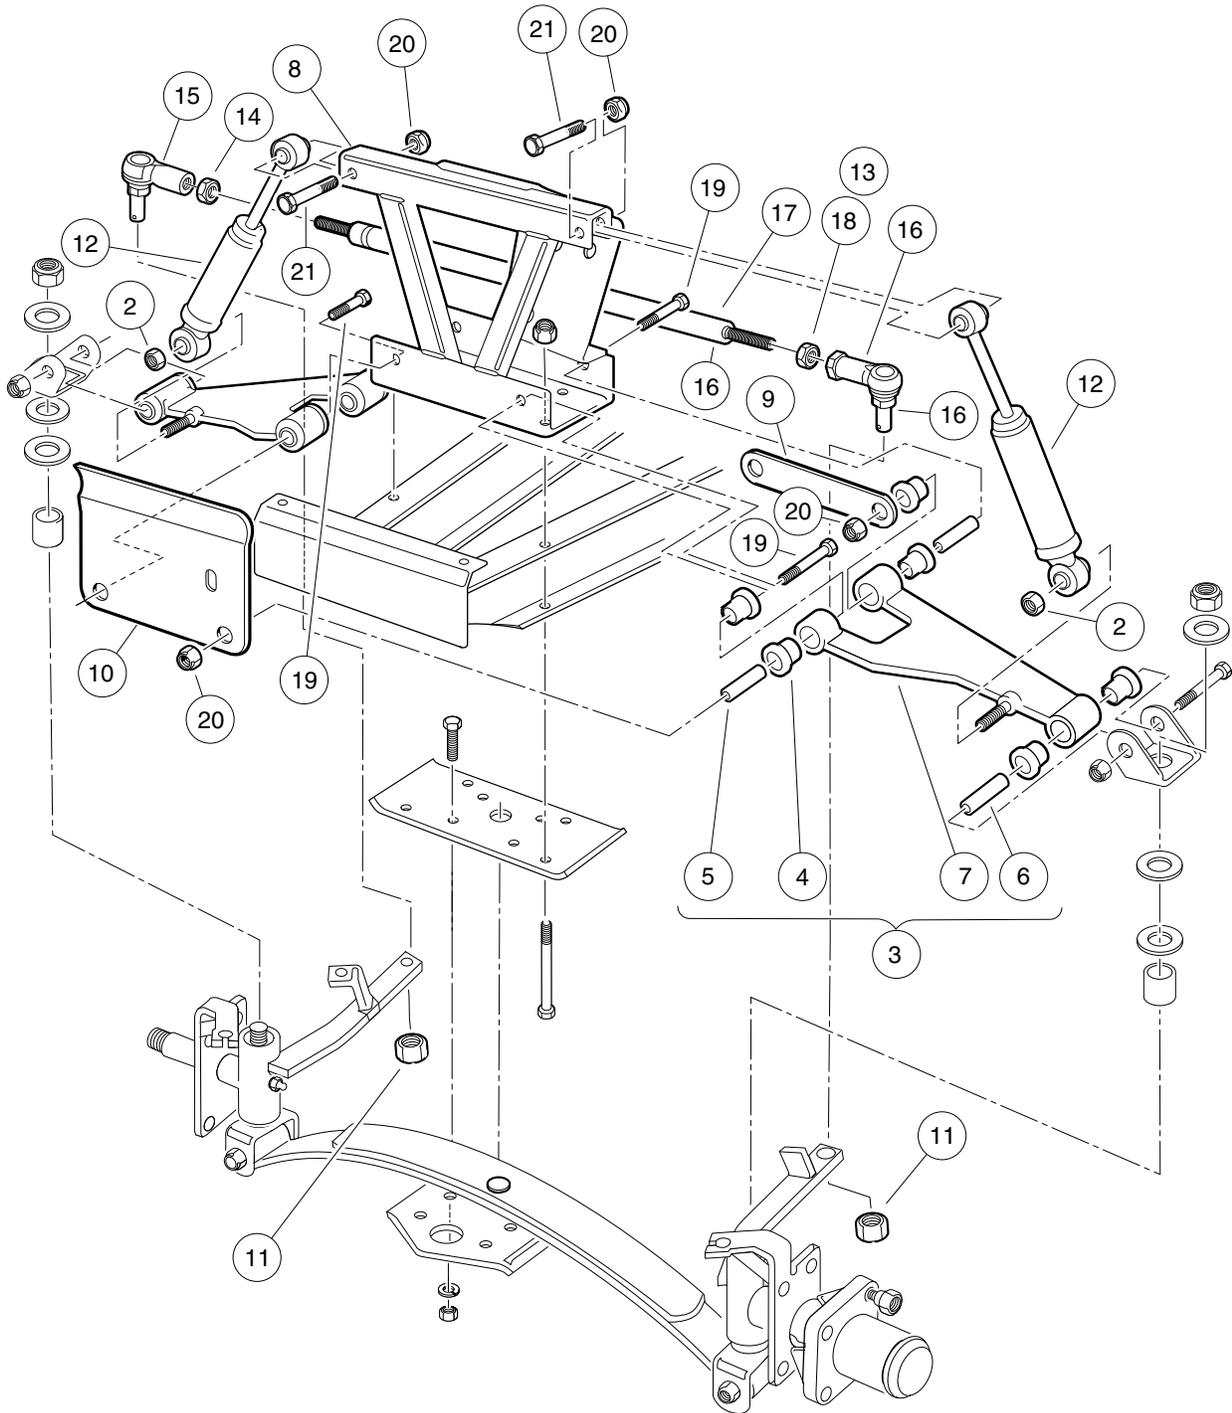


000314-004

FRONT SUSPENSION, UPPER – TURF/ CARRYALL 6 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Sub-Assembly, Front Suspension (includes items 2 through 20)	1
2	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2
3	<u>1016353</u>	Sub-Assembly, Delta A-Plate (includes items 4 through 7)	2
4	<u>1016346</u>	Bushing, Urethane	6
5	<u>1016349</u>	Sleeve, Delta Inner	2
6	<u>1016350</u>	Sleeve, Delta Outer	1
7	<u>1016351</u>	Delta A-Plate	1
8	<u>1016385</u>	Delta Shock and Gear Support Assembly	1
9	<u>1017266</u>	A-Plate Strap	1
10	<u>101955001</u>	Brake Cable Guide Bracket	1
11	<u>102289201</u>	Nut - Hex Locking, M12 X 1.25	3
12	<u>103351001</u>	Shock Absorber, Front, Common	2
13	N/A	Asm, Tie Rod (includes items 14 through 18)	1
14	1013042	Nut, 12mm Hex	1
15	<u>102022601</u>	End, Tie Rod M12 X 1.25 Rh	1
16	<u>102022602</u>	End, Tie Rod, M12 X 1.25, Lh	1
17	<u>103354701</u>	Rod, Tie, Male Thd	1
18	<u>103653501</u>	Nut, Jam, M12-1.25, Lh	1
19	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4
20	<u>8754</u>	Locknut, 3/8-16 Hex	13

5
G
E

5
G
E

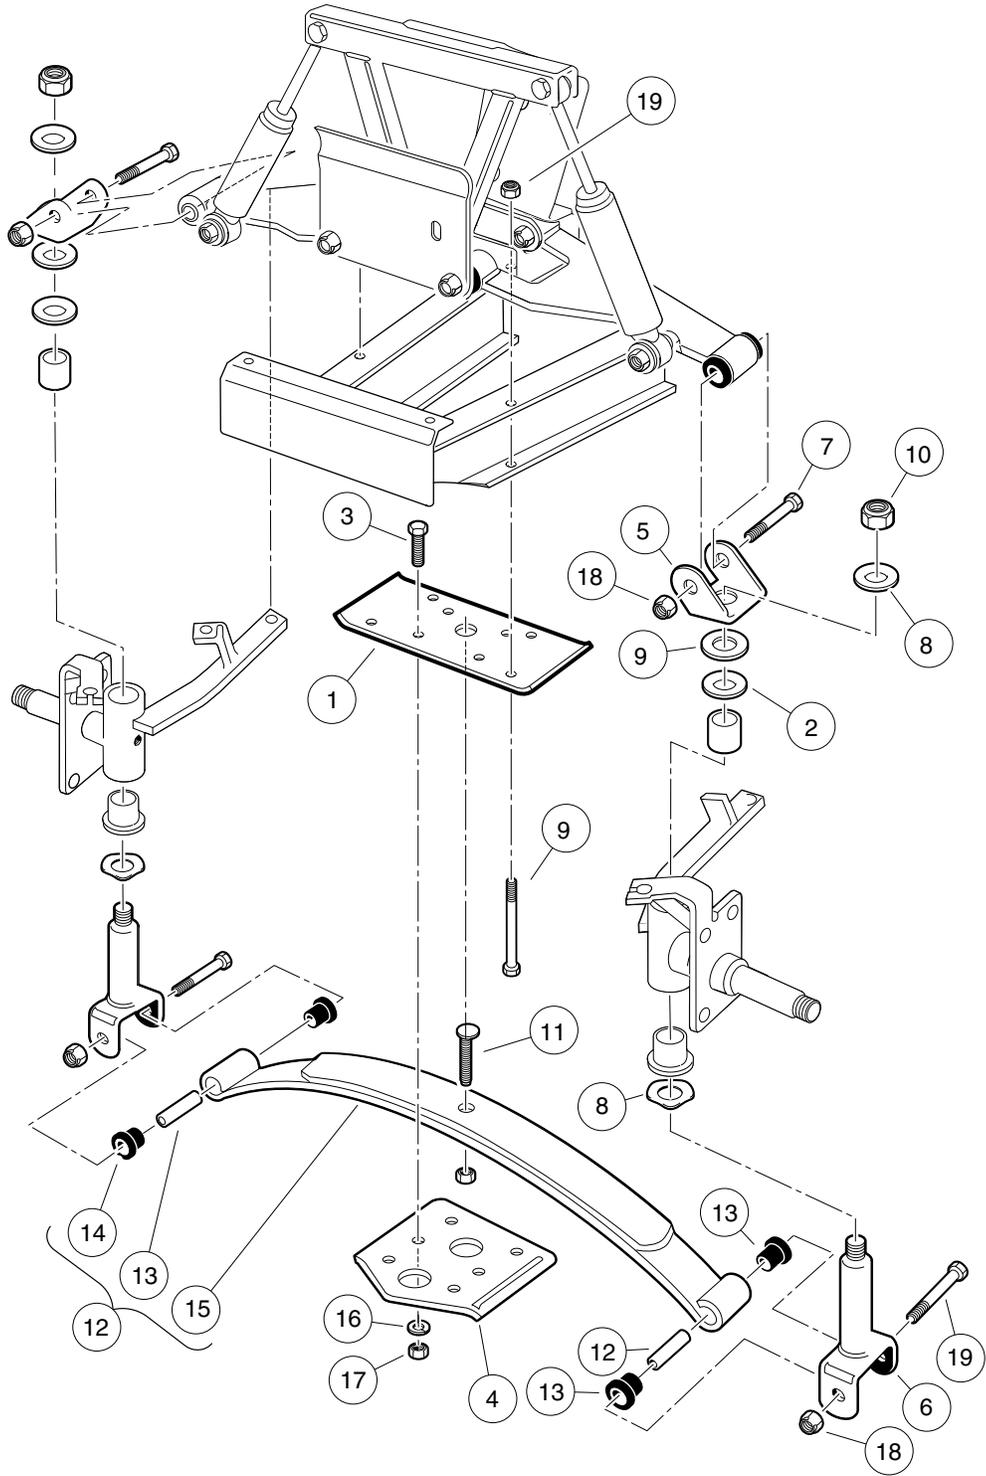


000313-001

FRONT SUSPENSION, LOWER – TURF/ CARRYALL 6 VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010124</u>	Plate, Spring Mount	1
2	<u>1010150</u>	Bearing, Thrust	2
3	<u>1014276</u>	Plate, Front Spring Retainer	1
4	<u>1016384</u>	Clevis, Delta Upper	2
5	<u>1016386</u>	King Pin Assembly	2
6	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	2
7	<u>1016389</u>	Washer, 1.125 Od Wave	2
8	<u>102564002</u>	Washer-1/2 Conical, Yellow	2
9	<u>102684501</u>	Washer, M12 Hard Regular	2
10	<u>102766301</u>	Nut, 1/2-20, Center Lock	2
11	<u>103628801</u>	Spring Asm, Front, 2 Leaf (includes items 12 through 14)	1
12	<u>1012303</u>	Bushing, Steel	2
13	<u>1015583</u>	Bushing, Urethane	4
14	<u>103502701</u>	Spring, Front, 2 Leaf	1
15	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4
16	<u>357</u>	Lockwasher, 3/8 Split	4
17	<u>706</u>	Nut, Hex 3/8-16	4
18	<u>7270</u>	Bolt, 3/8-16 X 4.50 Hex Head	4
19	<u>8754</u>	Locknut, 3/8-16 Hex	8
20	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2

5
G
E

PASSENGER SIDE

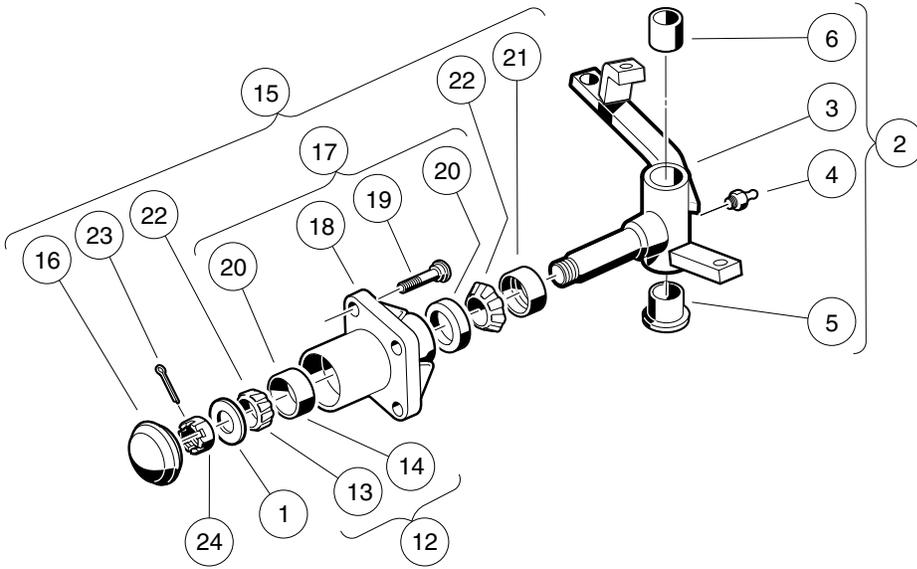

DRIVER SIDE

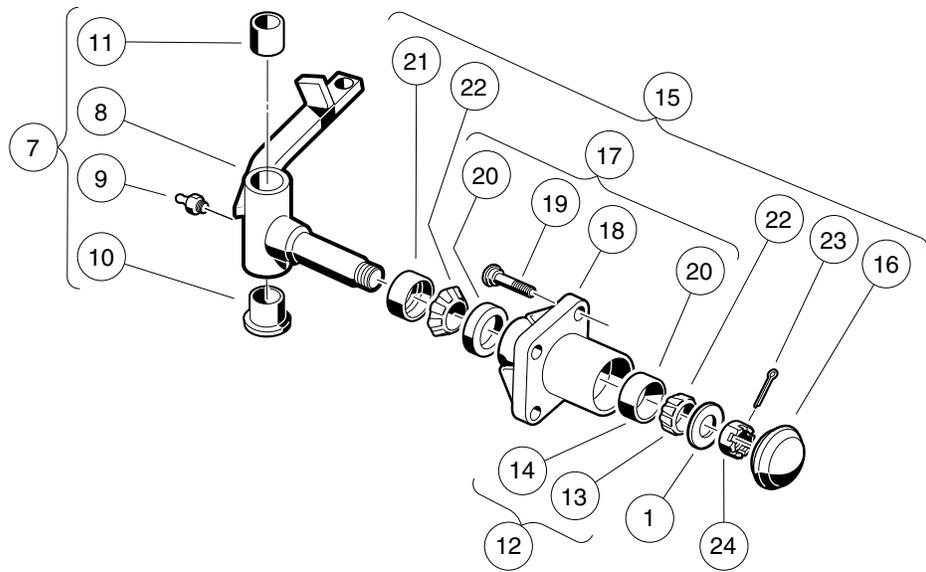



000310-001

FRONT SPINDLES AND HUBS – VEHICLES WITH TWO-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010005</u>	Washer, 3/4 Flat	2
2	<u>1010347</u>	Spindle Assembly, Right	1
3	<u>1010348</u>	Spindle Assembly, Left (includes items 4 through 7)	1
4	1010342	Spindle Sub-Assembly, Left-Hand	1
5	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1
6	<u>7048</u>	Bushing, Flanged Bronze	1
7	<u>8067</u>	Bushing, Bronze Spindle	1
8	<u>1011393</u>	Hub Bearing Package (includes items 9 and 10)	4
9	7274	Bearing, Front Hub Wheel	1
10	7308	Race, Front Hub Bearing	1
11	<u>1011892</u>	Hub Assembly (includes items 12 through 19)	2
12	<u>1011887</u>	Dust Cover	1
13	1011889	Hub (includes items 14 through 16)	1
14	1011153	Front Hub	1
15	<u>103477901</u>	Lug Stud, 1/2-20 Unf, 4037	4
16	7308	Race, Front Hub Bearing	2
17	<u>1013135</u>	Seal, Double Lip	1
18	7274	Bearing, Front Hub Wheel	2
19	<u>7910</u>	Pin, 5/32 X 1.00 Cotter	1
20	<u>7840</u>	Nut, 3/4-16 Hex Slotted	2

5
G
E

5
G
E

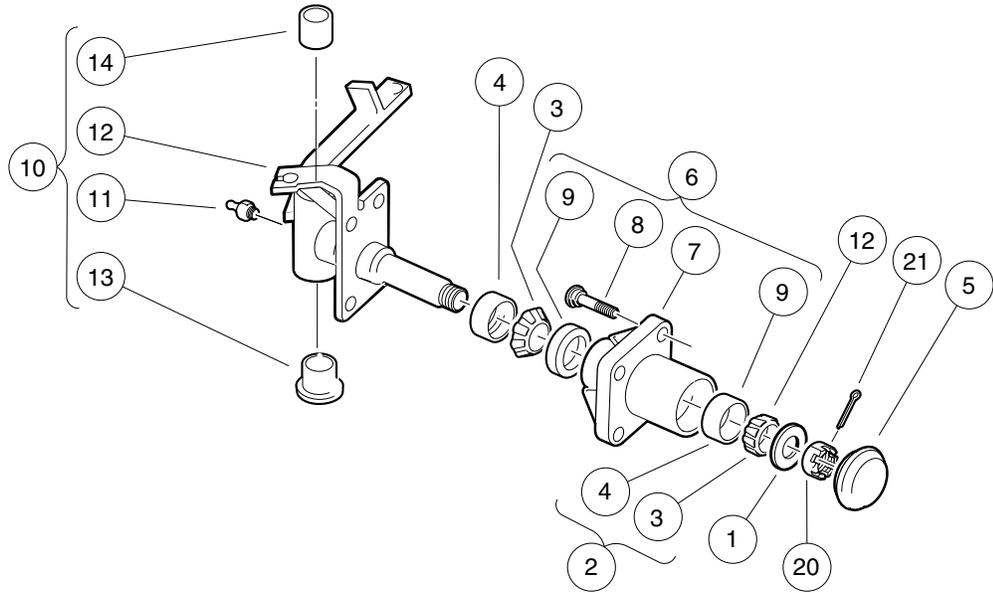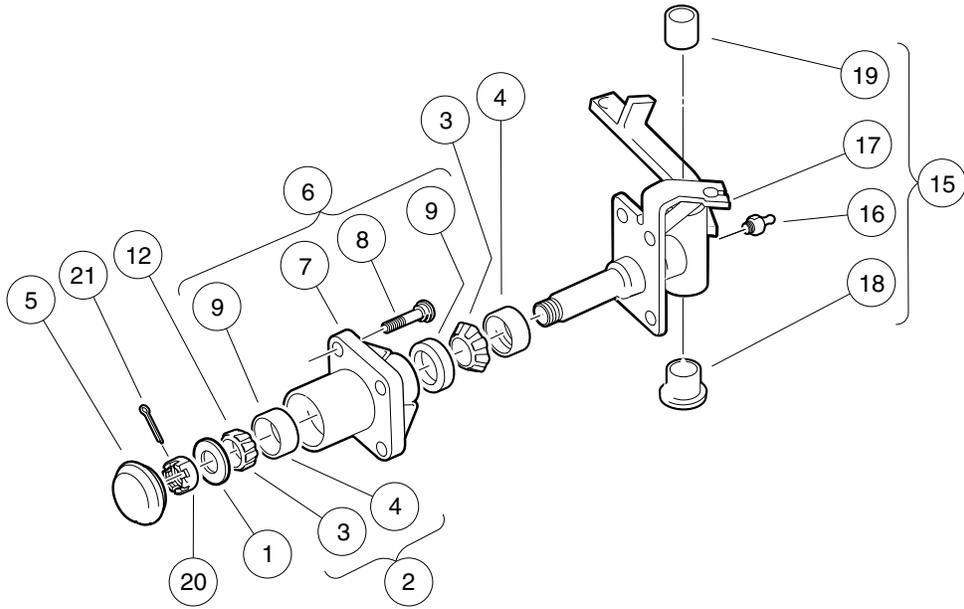


000310-002

FRONT SPINDLES AND HUBS – VEHICLES WITH FOUR-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010005</u>	Washer, 3/4 Flat	2
2	<u>1011393</u>	Hub Bearing Package (includes items 3 and 4)	4
3	7274	Bearing, Front Hub Wheel	1
4	7308	Race, Front Hub Bearing	1
5	<u>1011887</u>	Dust Cover	2
6	<u>1011889</u>	Hub (includes items 7 through 9)	2
7	1011153	Front Hub	1
8	<u>103477901</u>	Lug Stud, 1/2-20 Unf, 4037	4
9	7308	Race, Front Hub Bearing	2
10	<u>103717302</u>	Asm, Spindle, Lh, 4wb, Sp (includes items 11 through 14)	1
11	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1
12	N/A	Subasm, Spindle, Lh, 4wb	1
13	<u>7048</u>	Bushing, Flanged Bronze	1
14	<u>8067</u>	Bushing, Bronze Spindle	1
15	<u>103717402</u>	Asm, Spindle, Rh, 4wb, Sp (includes items 16 through 19)	1
16	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1
17	N/A	Subasm, Spindle, Rh, 4wb	1
18	<u>7048</u>	Bushing, Flanged Bronze	1
19	<u>8067</u>	Bushing, Bronze Spindle	1
20	<u>7840</u>	Nut, 3/4-16 Hex Slotted	2
21	<u>7910</u>	Pin, 5/32 X 1.00 Cotter	2

5
G
E

5
G
E

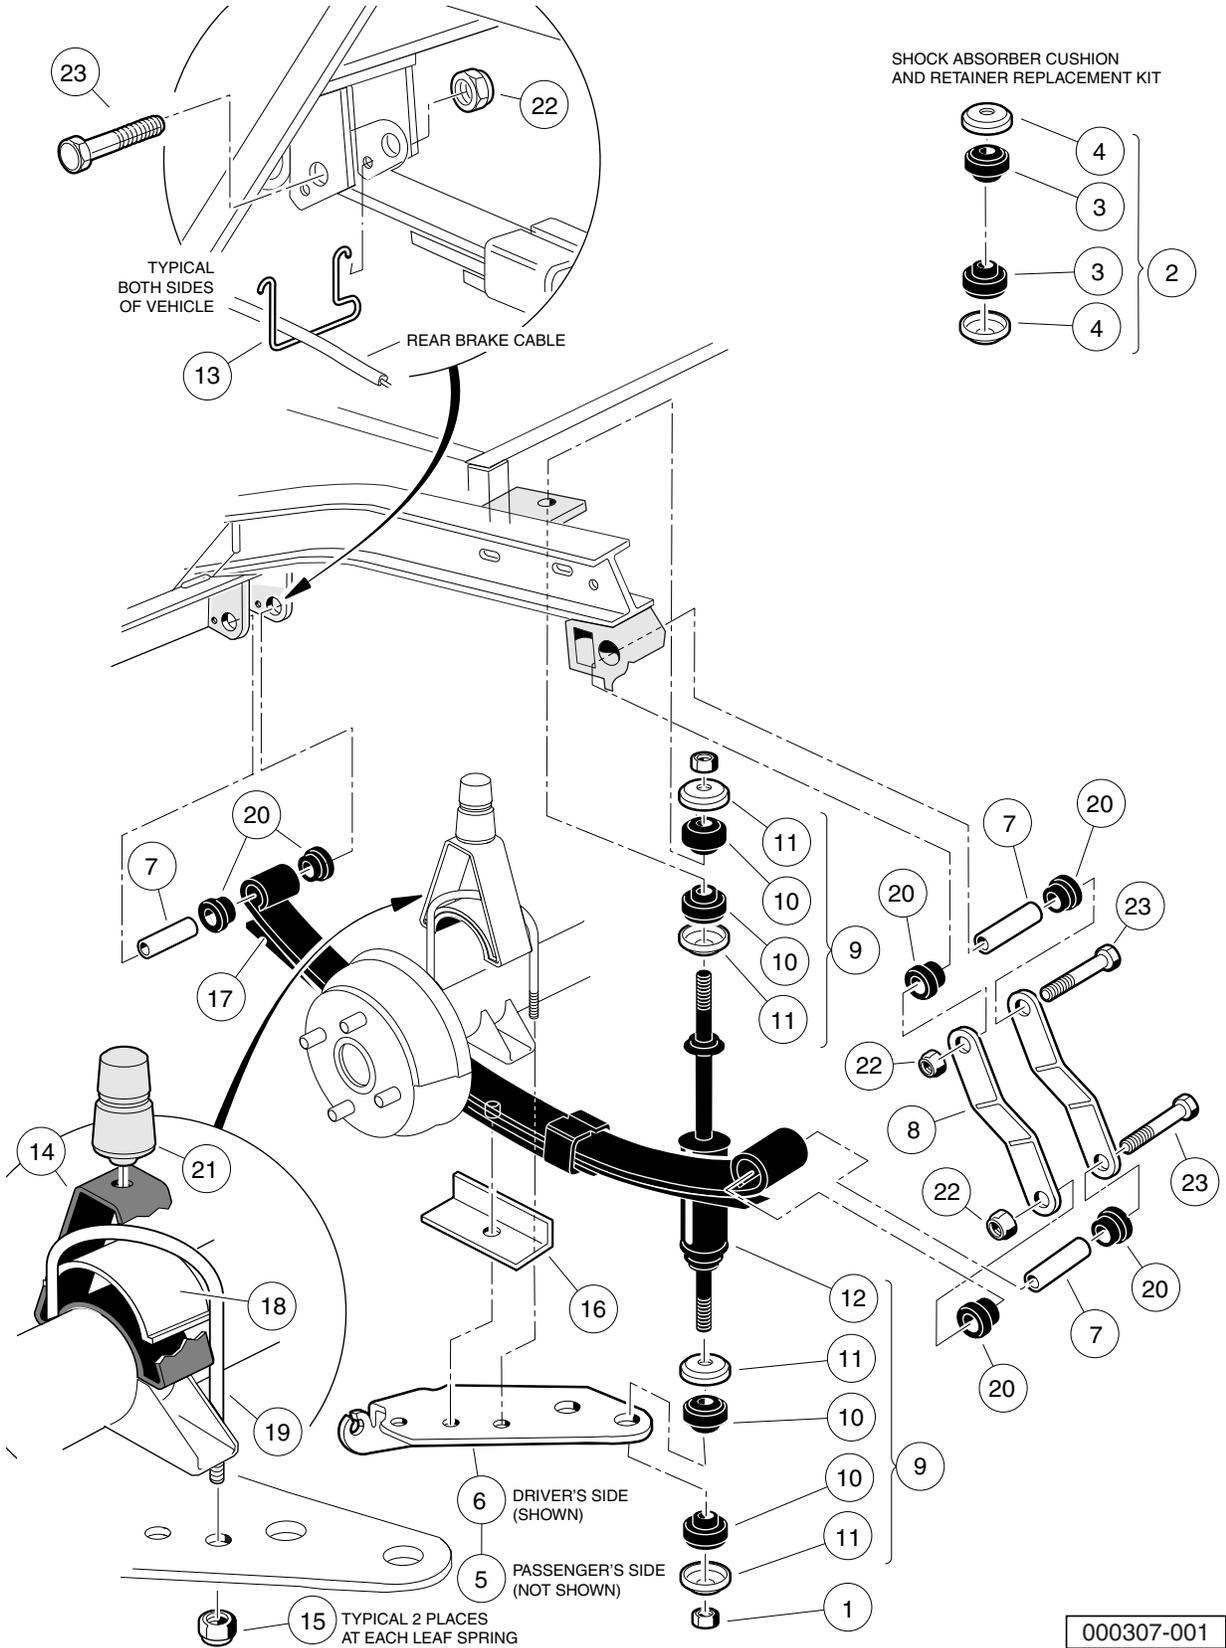


REAR SUSPENSION COMPONENTS – TURF/ CARRYALL 1 ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010145</u>	Nut, 3/8-24 Hex	4
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4
3	<u>1010142</u>	Cushion, Shock Absorber	2
4	<u>1010144</u>	Retainer, Shock Absorber Cushion	2
5	1012181	Bracket, Shock Mounting, Right (Passenger)	1
6	1012182	Bracket, Shock Mounting, Left (Driver)	1
7	<u>1012303</u>	Bushing, Steel	6
8	<u>1012304</u>	Shackle, Rear Spring	4
9	<u>1013164</u>	Shock Absorber Kit (includes items 10 through 12)	1
10	<u>1010142</u>	Cushion, Shock Absorber	8
11	<u>1010144</u>	Retainer, Shock Absorber Cushion	8
12	<u>102588501</u>	Shock Absorber Rear Prv Spd	2
13	<u>1013207</u>	Hanger, Brake Cable	2
14	<u>101454902</u>	Bumper Mount, Angled	2
15	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4
16	1014573	Spring Retainer	2
17	<u>1014675</u>	Rear Leaf Spring	2
18	<u>1014901</u>	Spacer, Overload Bumper	2
19	<u>1014902</u>	U-Bolt	2
20	<u>1015583</u>	Bushing, Urethane	12
21	<u>1017235</u>	Bumper, Jounce	2
22	<u>8754</u>	Locknut, 3/8-16 Hex	6
23	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	6
		Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock mounting plate.	

5
G
E

5
G
E

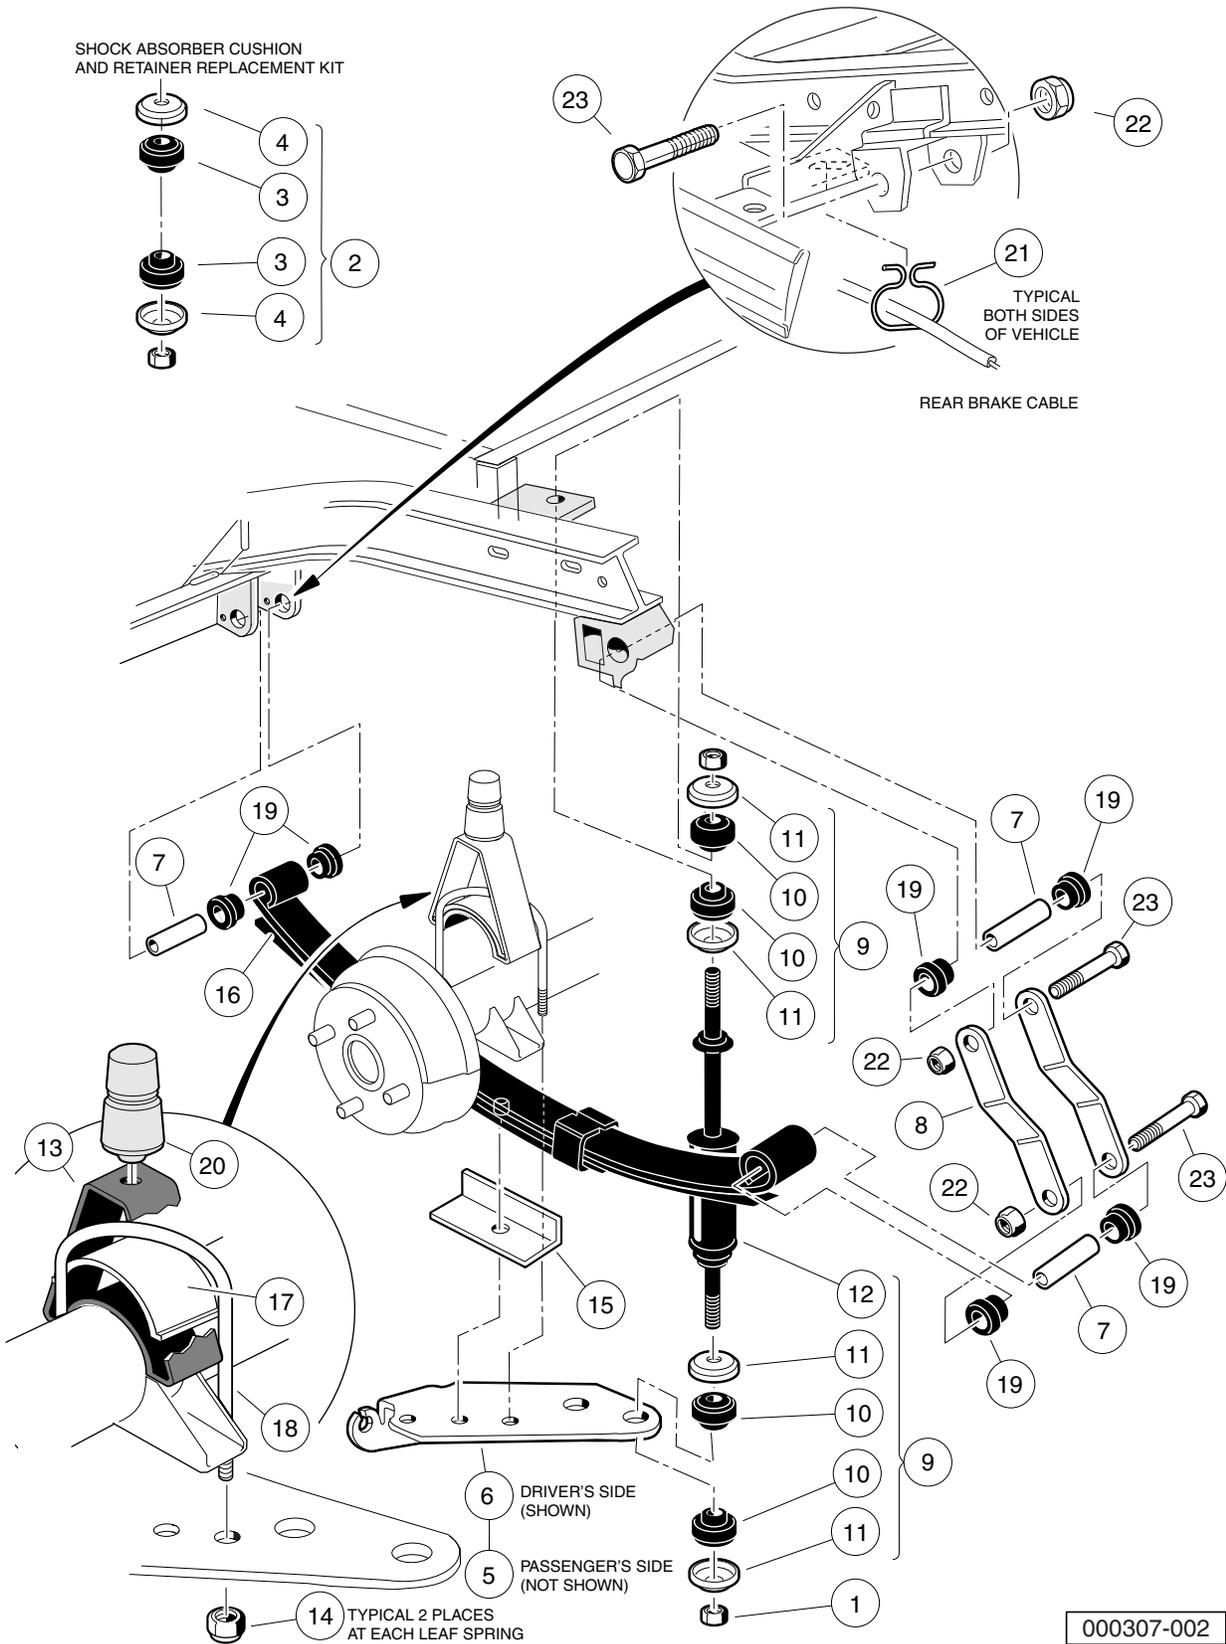


REAR SUSPENSION COMPONENTS – TURF/ CARRYALL 1 GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010145</u>	Nut, 3/8-24 Hex	4
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4
3	<u>1010142</u>	Cushion, Shock Absorber	2
4	<u>1010144</u>	Retainer, Shock Absorber Cushion	2
5	1012181	Bracket, Shock Mounting, Right (Passenger)	1
6	1012182	Bracket, Shock Mounting, Left (Driver)	1
7	<u>1012303</u>	Bushing, Steel	6
8	<u>1012304</u>	Shackle, Rear Spring	4
9	<u>1013164</u>	Shock Absorber Kit (includes items 10 through 12)	1
10	<u>1010142</u>	Cushion, Shock Absorber	8
11	<u>1010144</u>	Retainer, Shock Absorber Cushion	8
12	<u>102588501</u>	Shock Absorber Rear Prv Spd	2
13	101454602	Bumper Mount	2
14	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4
15	1014573	Spring Retainer	2
16	<u>1014675</u>	Rear Leaf Spring	2
17	<u>1014901</u>	Spacer, Overload Bumper	2
18	<u>1014902</u>	U-Bolt	2
19	<u>1015583</u>	Bushing, Urethane	12
20	<u>1017235</u>	Bumper, Jounce	2
21	101900801	Hanger, Brake Cable	2
22	<u>8754</u>	Locknut, 3/8-16 Hex	6
23	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	6
<p>Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock mounting plate.</p>			

5
G
E

5
G
E

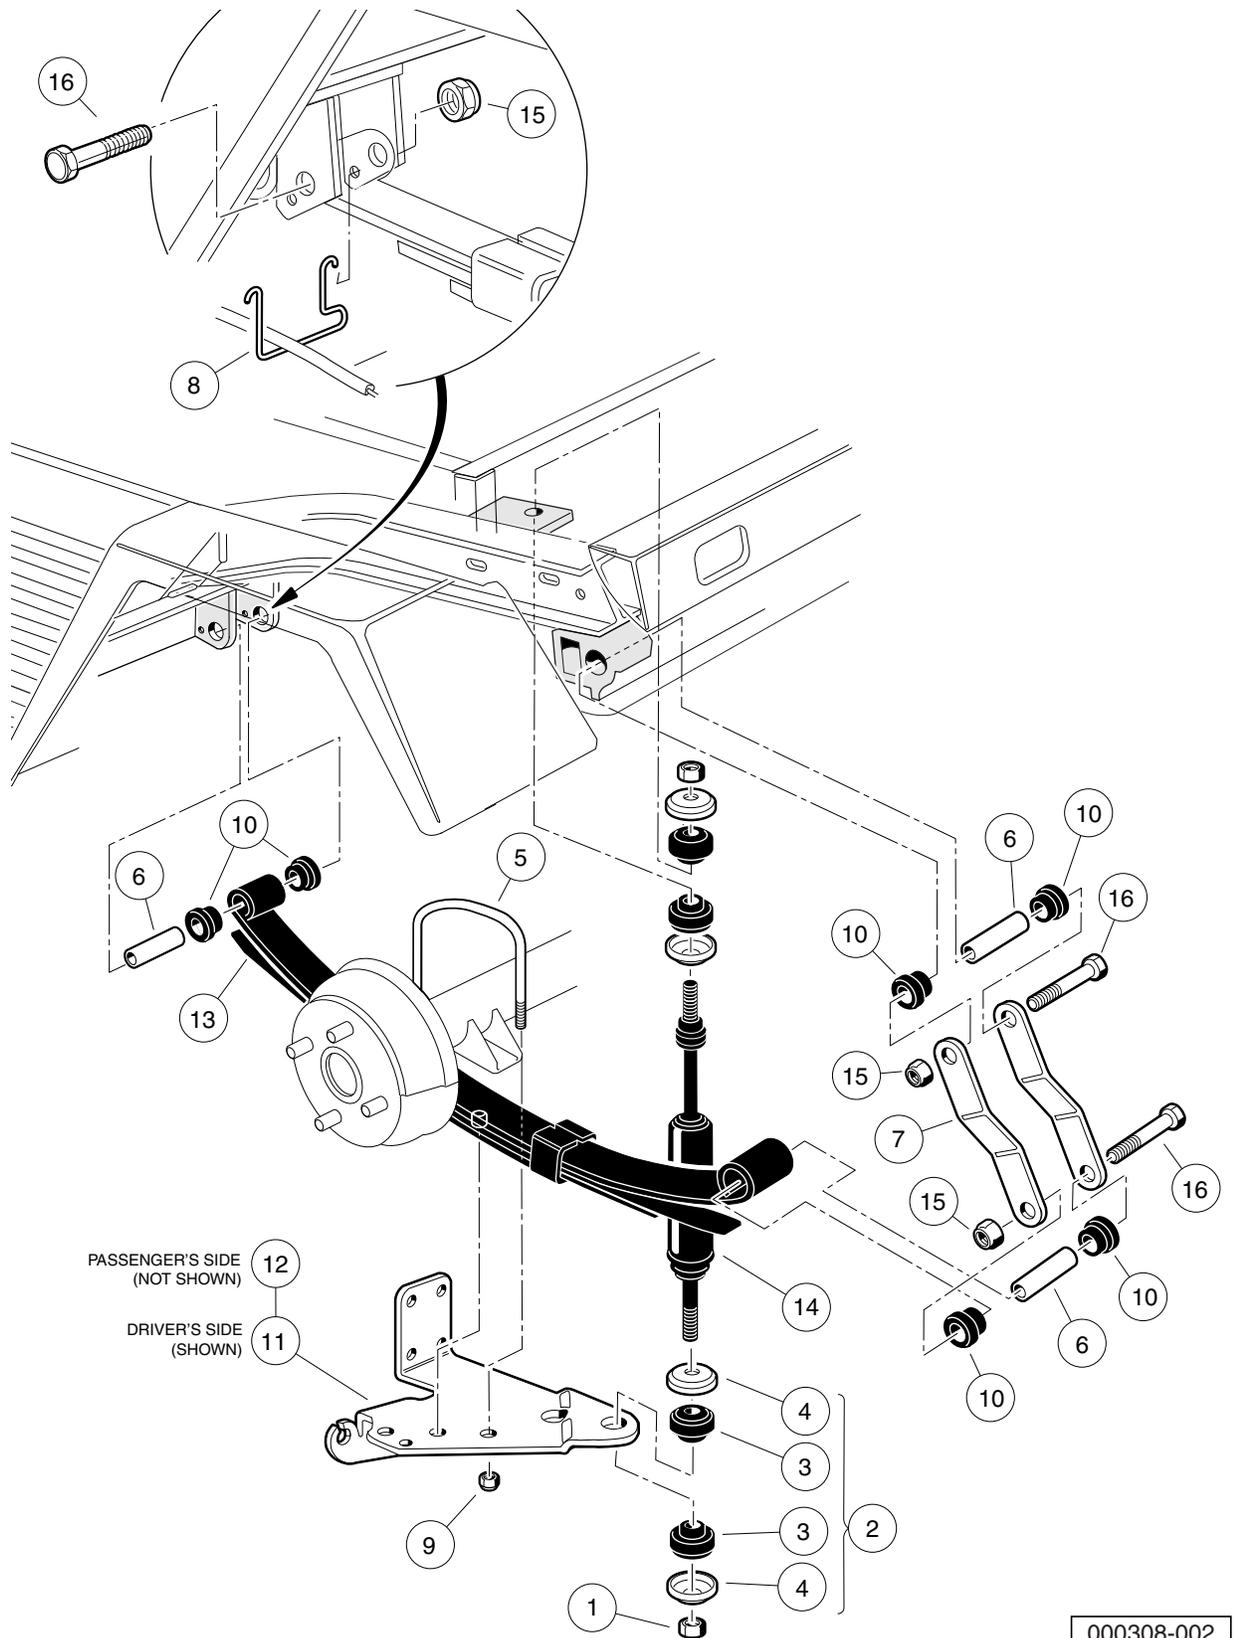


000308-002

REAR SUSPENSION COMPONENTS – CARRYALL 2 PLUS, TURF/ CARRYALL 2, AND 6 GASOLINE WITH STABILIZER BAR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010145</u>	Nut, 3/8-24 Hex	4
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4
3	<u>1010142</u>	Cushion, Shock Absorber	2
4	<u>1010144</u>	Retainer, Shock Absorber Cushion	2
5	<u>1012180</u>	U-Bolt	2
6	<u>1012303</u>	Bushing, Steel	6
7	<u>1012304</u>	Shackle, Rear Spring	4
8	<u>1013207</u>	Hanger, Brake Cable	2
9	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4
10	<u>1015583</u>	Bushing, Urethane	12
11	<u>101926501</u>	Bracket, Left-Hand	1
12	<u>101929401</u>	Bracket, Right	1
13	<u>102871801</u>	Spring, Multi Leaf	2
14	<u>103350901</u>	Shock Absorber, Rear, Utility	2
15	<u>8754</u>	Locknut, 3/8-16 Hex	6
16	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	6
<p>Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock mounting plate.</p>			

5
G
E

5
G
E

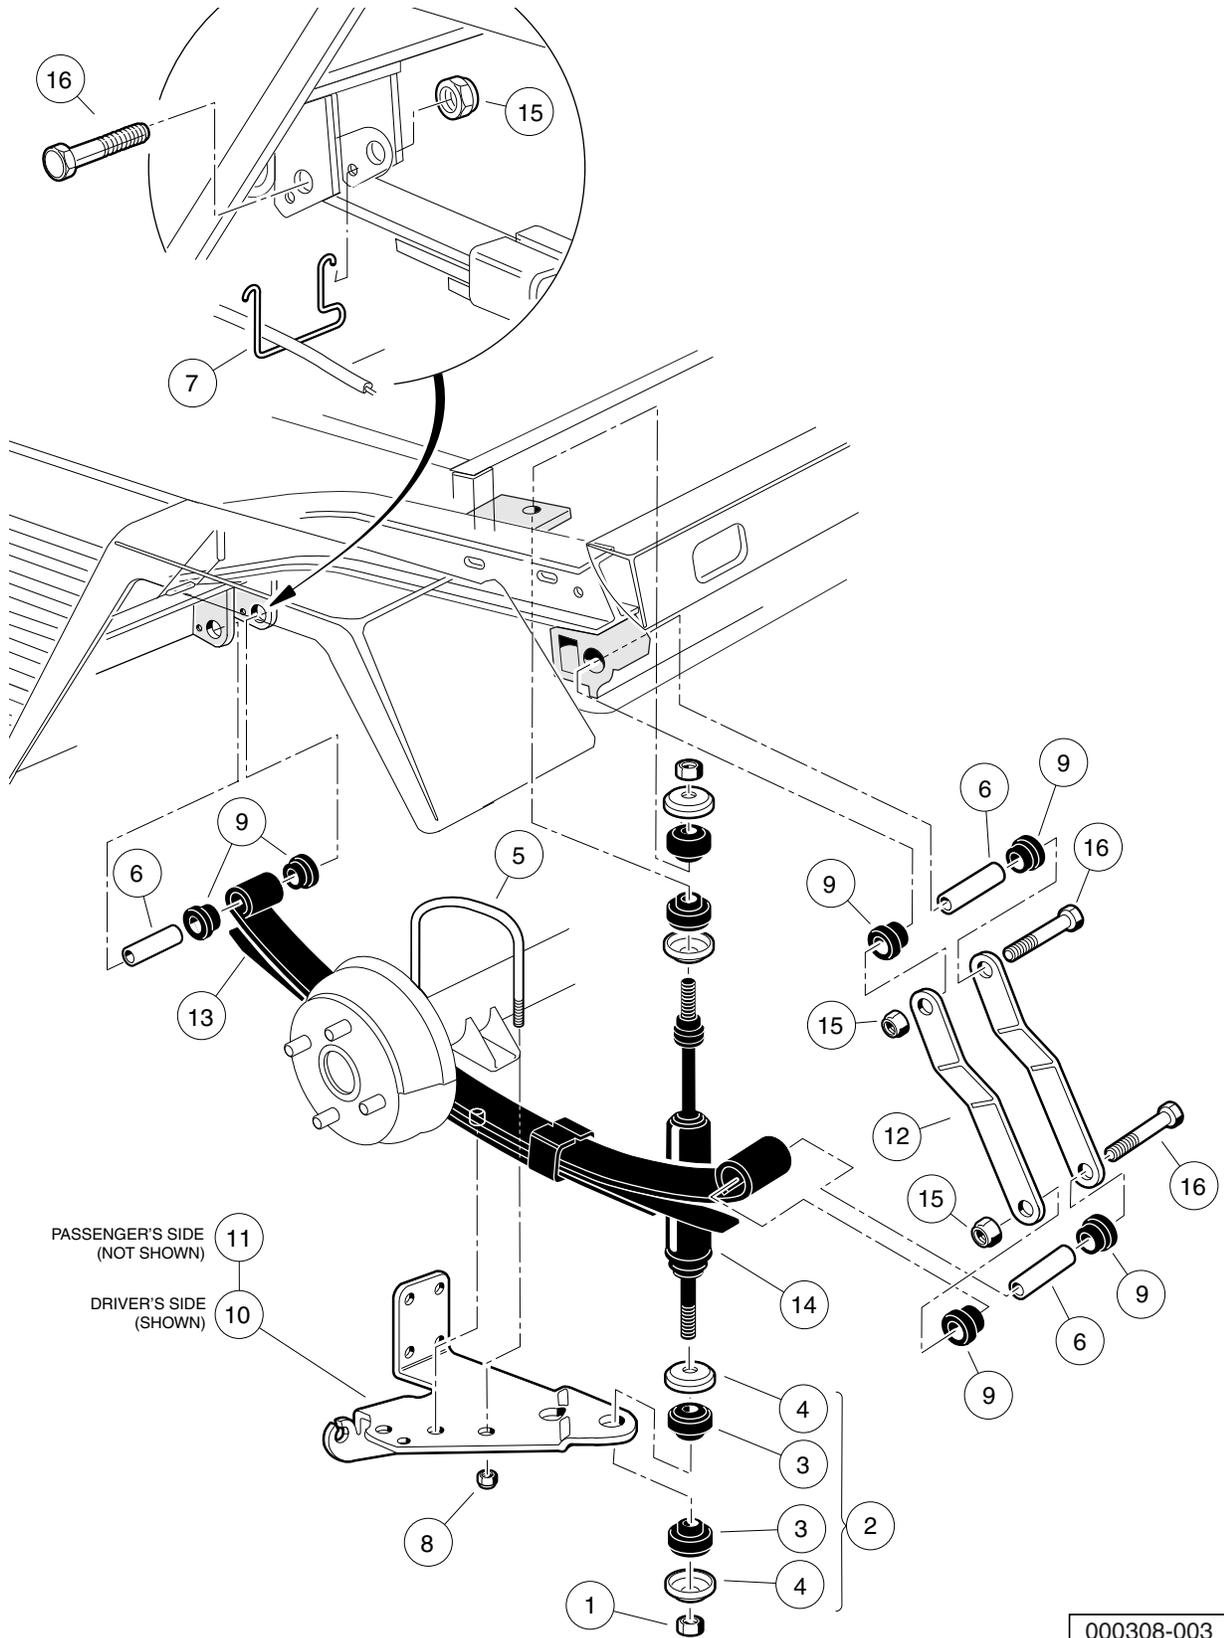


000308-003

REAR SUSPENSION COMPONENTS – TURF/ CARRYALL 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010145</u>	Nut, 3/8-24 Hex	4
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4
3	<u>1010142</u>	Cushion, Shock Absorber	2
4	<u>1010144</u>	Retainer, Shock Absorber Cushion	2
5	<u>1012180</u>	U-Bolt	2
6	<u>1012303</u>	Bushing, Steel	6
7	<u>1013207</u>	Hanger, Brake Cable	2
8	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4
9	<u>1015583</u>	Bushing, Urethane	12
10	<u>101926501</u>	Bracket, Left-Hand	1
11	<u>101929401</u>	Bracket, Right	1
12	<u>102004201</u>	Rear Spring Shackle	4
13	<u>102871801</u>	Spring, Multi Leaf	2
14	<u>103351101</u>	Shock, Absorber, Utility	2
15	<u>8754</u>	Locknut, 3/8-16 Hex	6
16	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	6
<p>Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock mounting plate.</p>			

5
G
E

5
G
E

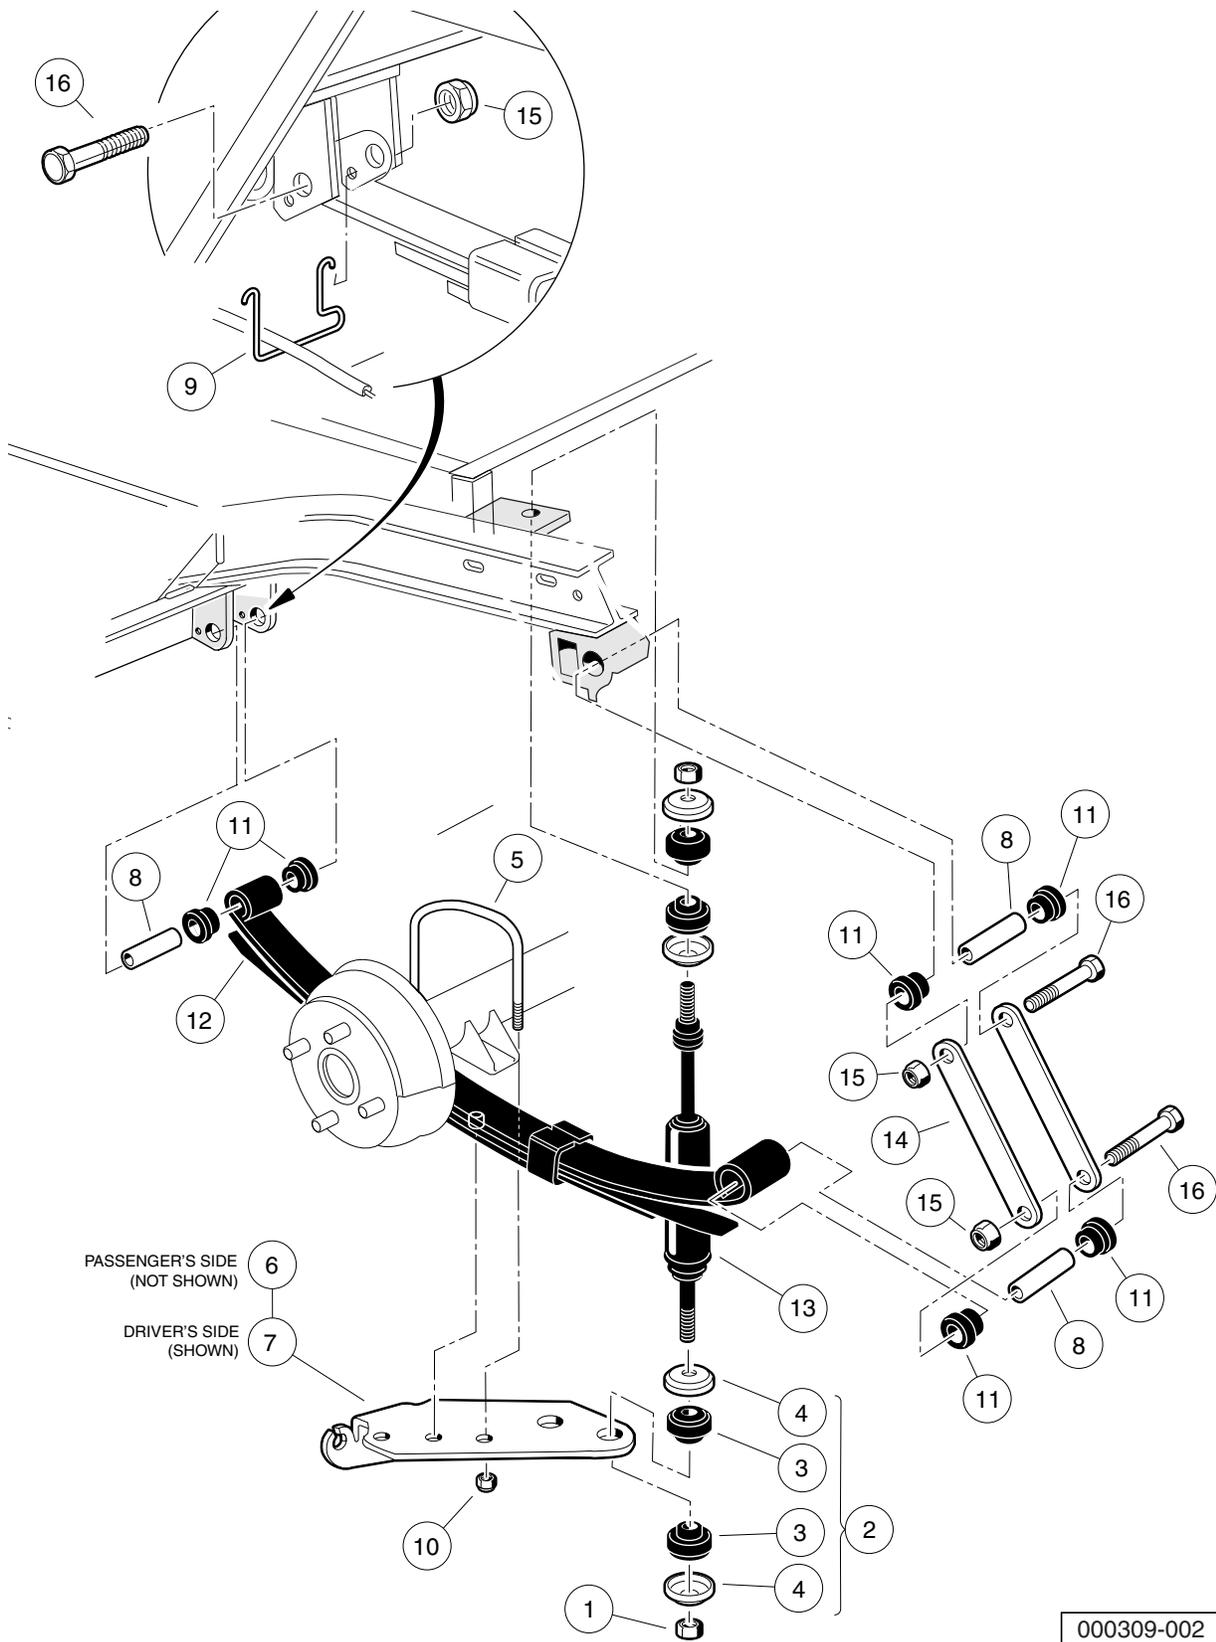


000309-002

REAR SUSPENSION COMPONENTS – TURF/ CARRYALL 2 AND 6 POWERDRIVE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010145</u>	Nut, 3/8-24 Hex	4
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4
3	<u>1010142</u>	Cushion, Shock Absorber	2
4	<u>1010144</u>	Retainer, Shock Absorber Cushion	2
5	<u>1012180</u>	U-Bolt	2
6	1012181	Bracket, Shock Mounting, Right (Passenger)	1
7	1012182	Bracket, Shock Mounting, Left (Driver)	1
8	<u>1012303</u>	Bushing, Steel	6
9	<u>1013207</u>	Hanger, Brake Cable	2
10	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4
11	<u>1015583</u>	Bushing, Urethane	12
12	<u>102871801</u>	Spring, Multi Leaf	2
13	<u>103350901</u>	Shock Absorber, Rear, Utility	2
14	<u>7569</u>	Shackle, Rear Spring	4
15	<u>8754</u>	Locknut, 3/8-16 Hex	6
16	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	6
<p>Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock mounting plate.</p>			

5
G
E

5
G
E

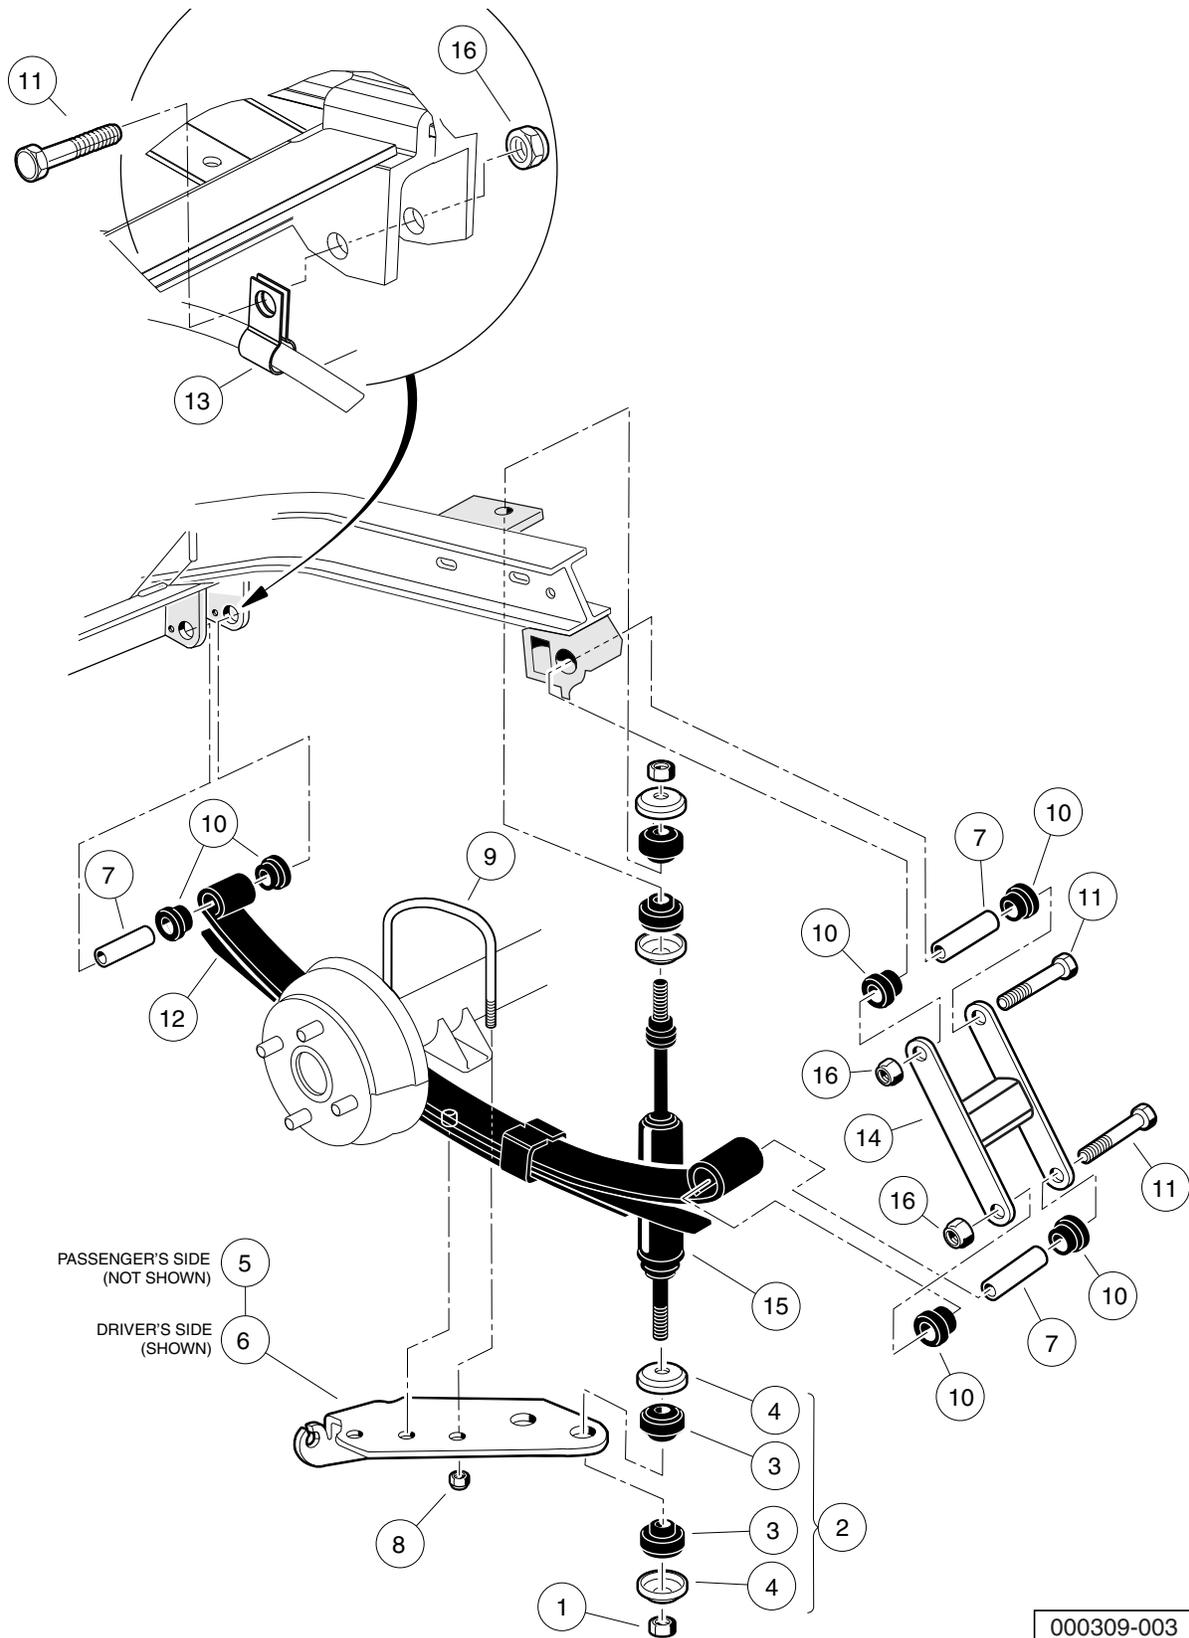


000309-003

REAR SUSPENSION COMPONENTS – TURF/CARRYALL 2 AND 6 IQ PLUS VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010145</u>	Nut, 3/8-24 Hex	4
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4
3	<u>1010142</u>	Cushion, Shock Absorber	2
4	<u>1010144</u>	Retainer, Shock Absorber Cushion	2
5	<u>1012181</u>	Bracket, Shock Mounting, Right (Passenger)	1
6	<u>1012182</u>	Bracket, Shock Mounting, Left (Driver)	1
7	<u>1012303</u>	Bushing, Steel	6
8	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4
9	<u>1014902</u>	U-Bolt	2
10	<u>1015583</u>	Bushing, Urethane	12
11	<u>102066201</u>	Screw, 3/8-16 X 3.50 Hex Cap	6
12	<u>102871801</u>	Spring, Multi Leaf	2
13	<u>102891101</u>	Clamp, Cable, Brake, Sym	2
14	<u>102917101</u>	Weldment, Shackle	2
15	<u>103351101</u>	Shock, Absorber, Utility	2
16	<u>8754</u>	Locknut, 3/8-16 Hex	6
<p>Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock mounting plate.</p>			

5
G
E

5
G
E

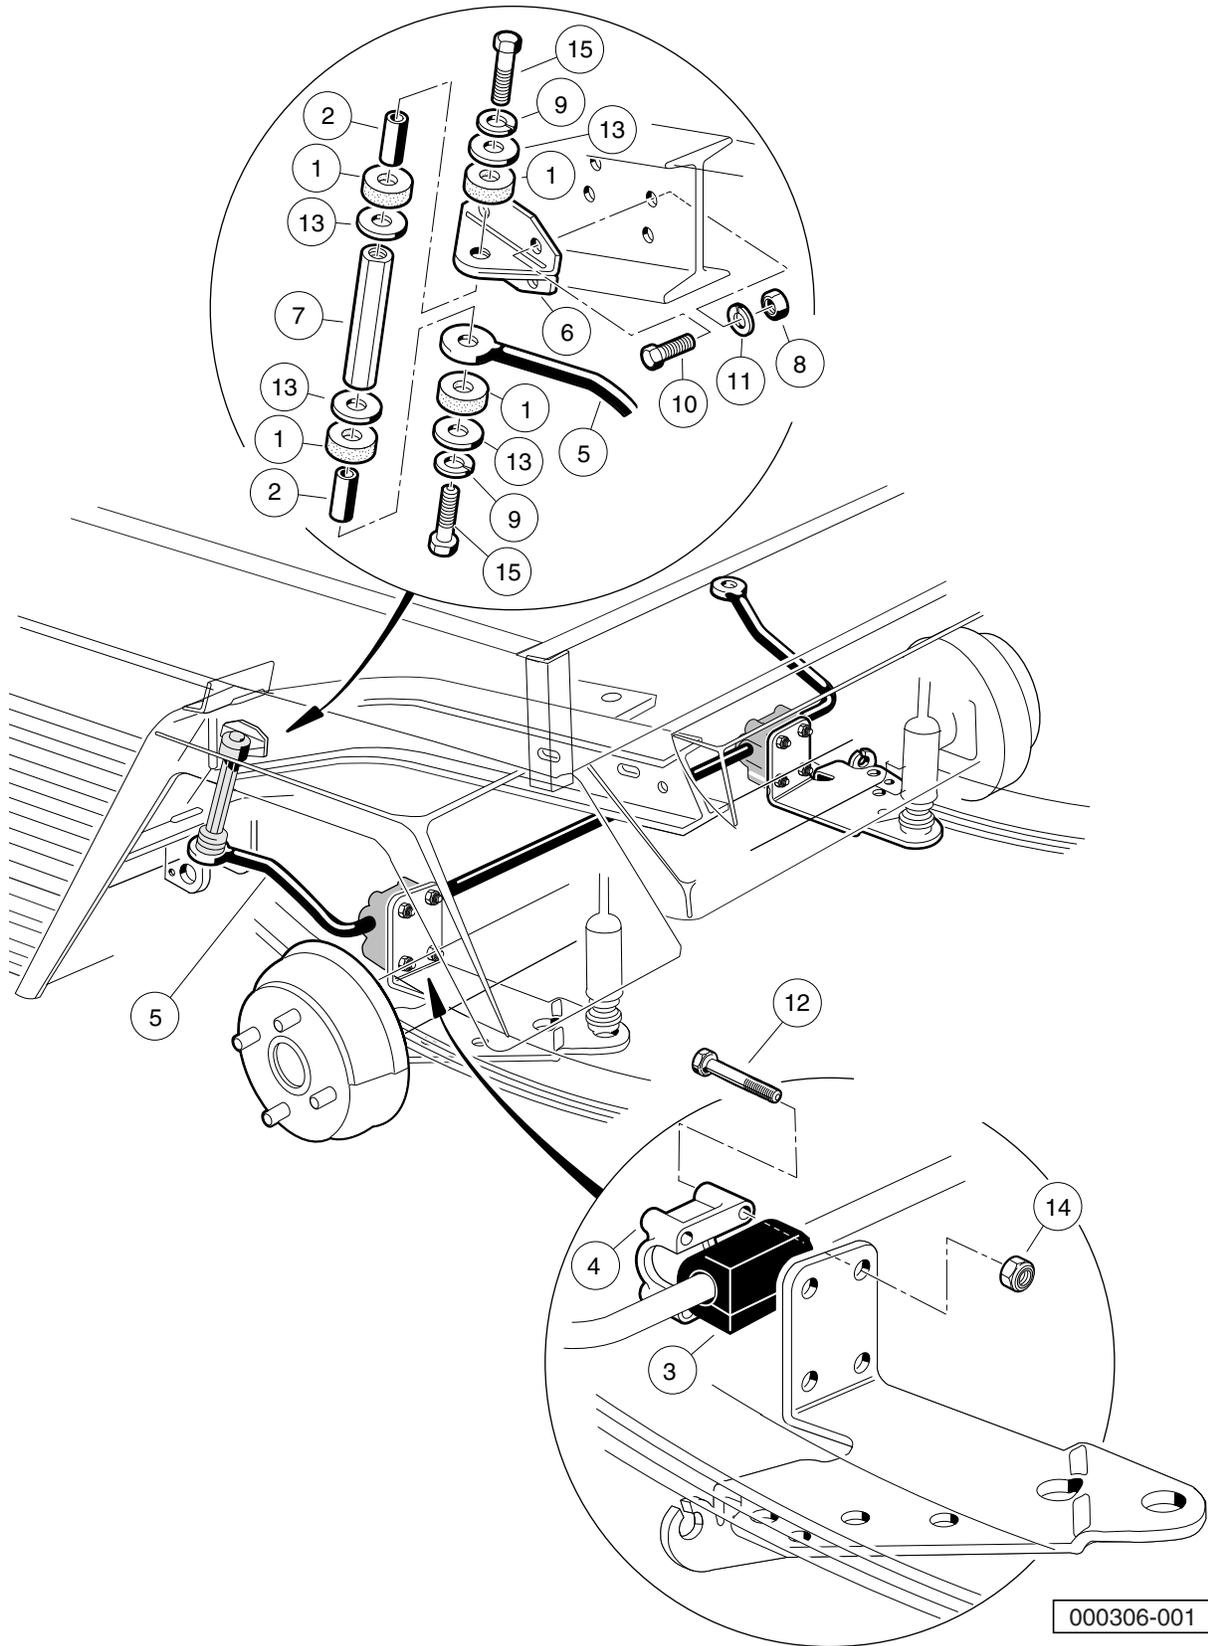


000306-001

STABILIZER BAR – TURF/CARRYALL 2, 6, AND CARRYALL 2 PLUS GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015453</u>	Compression Mount	8
2	<u>1015457</u>	Spacer, 0.720"	4
3	<u>1015613</u>	Bushing, Stabilizer Bar	2
4	<u>1015614</u>	Support, Bushing	2
5	<u>1015760</u>	Stabilizer Bar	1
6	<u>1016813</u>	Mounting Bracket, Stabilizer Bar	2
7	<u>1016814</u>	Link, Stabilizer Bar	2
8	<u>1242</u>	Nut, 5/16-18 Hex	8
9	<u>357</u>	Lockwasher, 3/8 Split	4
10	<u>7173</u>	Screw, 5/16-18 X 0.75 Hex-Head Cap	8
11	<u>7174</u>	Lockwasher, 5/16 Split	8
12	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	8
13	<u>808</u>	Washer, 3/8 Type B Flat	8
14	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	8
15	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	4
<p>Note: Only the driver side of the stabilizer bar is shown. Parts for the passenger side of the stabilizer bar are identical.</p>			

5
G
E

5
G
E

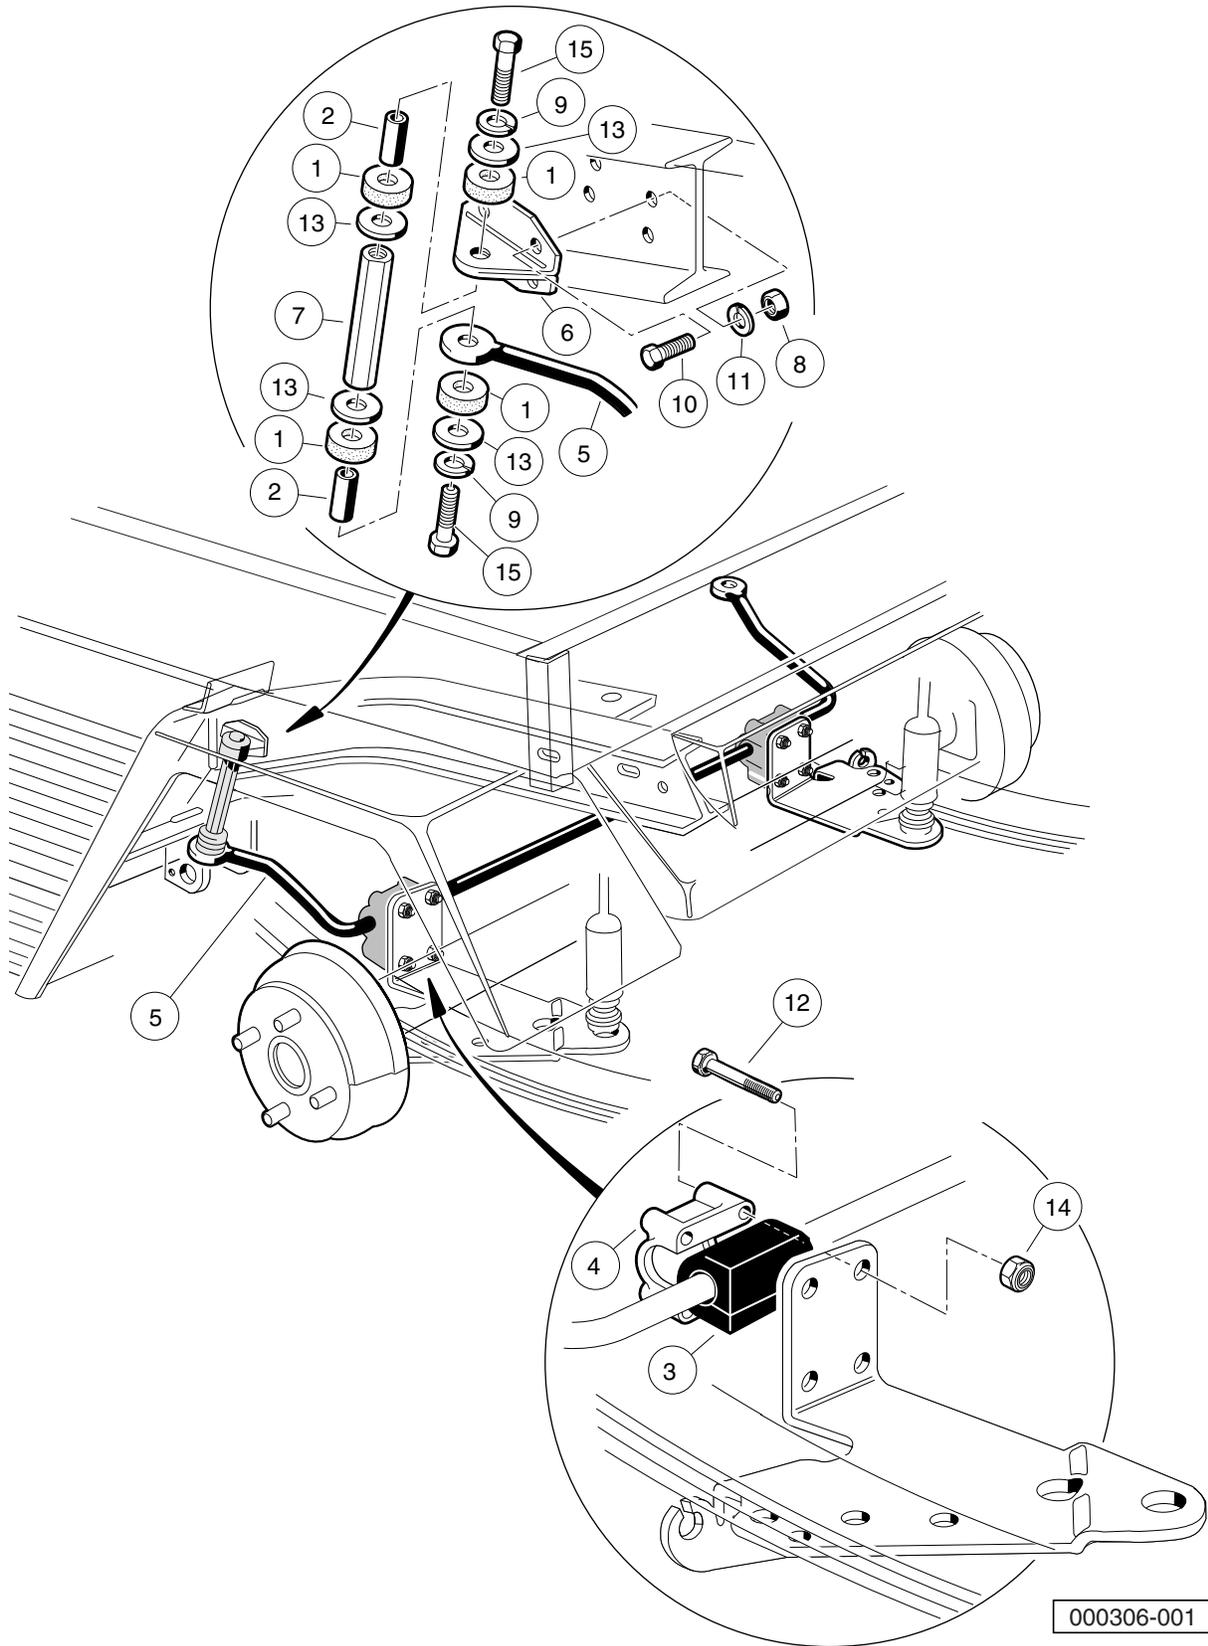

000306-001

STABILIZER BAR – TURF/CARRYALL 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015453</u>	Compression Mount	8
2	<u>1015457</u>	Spacer, 0.720"	4
3	<u>1015613</u>	Bushing, Stabilizer Bar	2
4	<u>1015614</u>	Support, Bushing	2
5	<u>1015760</u>	Stabilizer Bar	1
6	<u>1016813</u>	Mounting Bracket, Stabilizer Bar	2
7	<u>102004901</u>	Link, Stabilizer Bar	2
8	<u>1242</u>	Nut, 5/16-18 Hex	8
9	<u>357</u>	Lockwasher, 3/8 Split	4
10	<u>7173</u>	Screw, 5/16-18 X 0.75 Hex-Head Cap	8
11	<u>7174</u>	Lockwasher, 5/16 Split	8
12	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	8
13	<u>808</u>	Washer, 3/8 Type B Flat	8
14	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	8
15	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	4
<p>Note: Only the driver side of the stabilizer bar is shown. Parts for the passenger side of the stabilizer bar are identical.</p>			

5
G
E

5


G

E


ELECTRICAL SYSTEM – GASOLINE VEHICLES

6

G

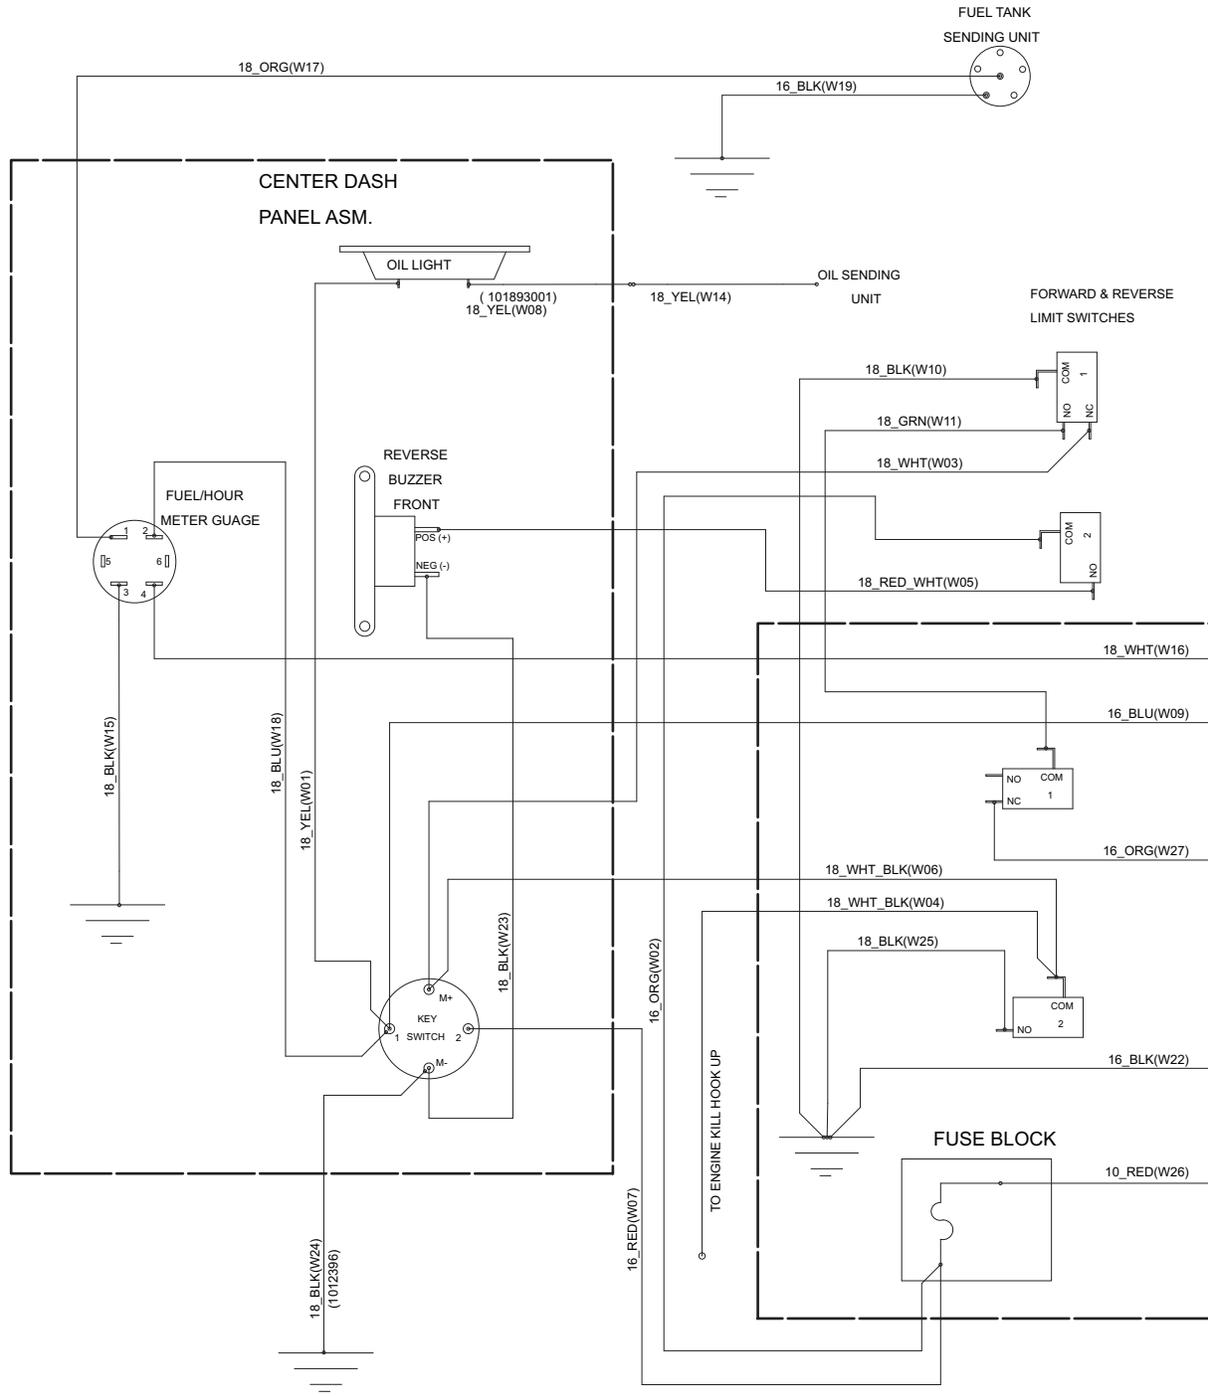

000323-001

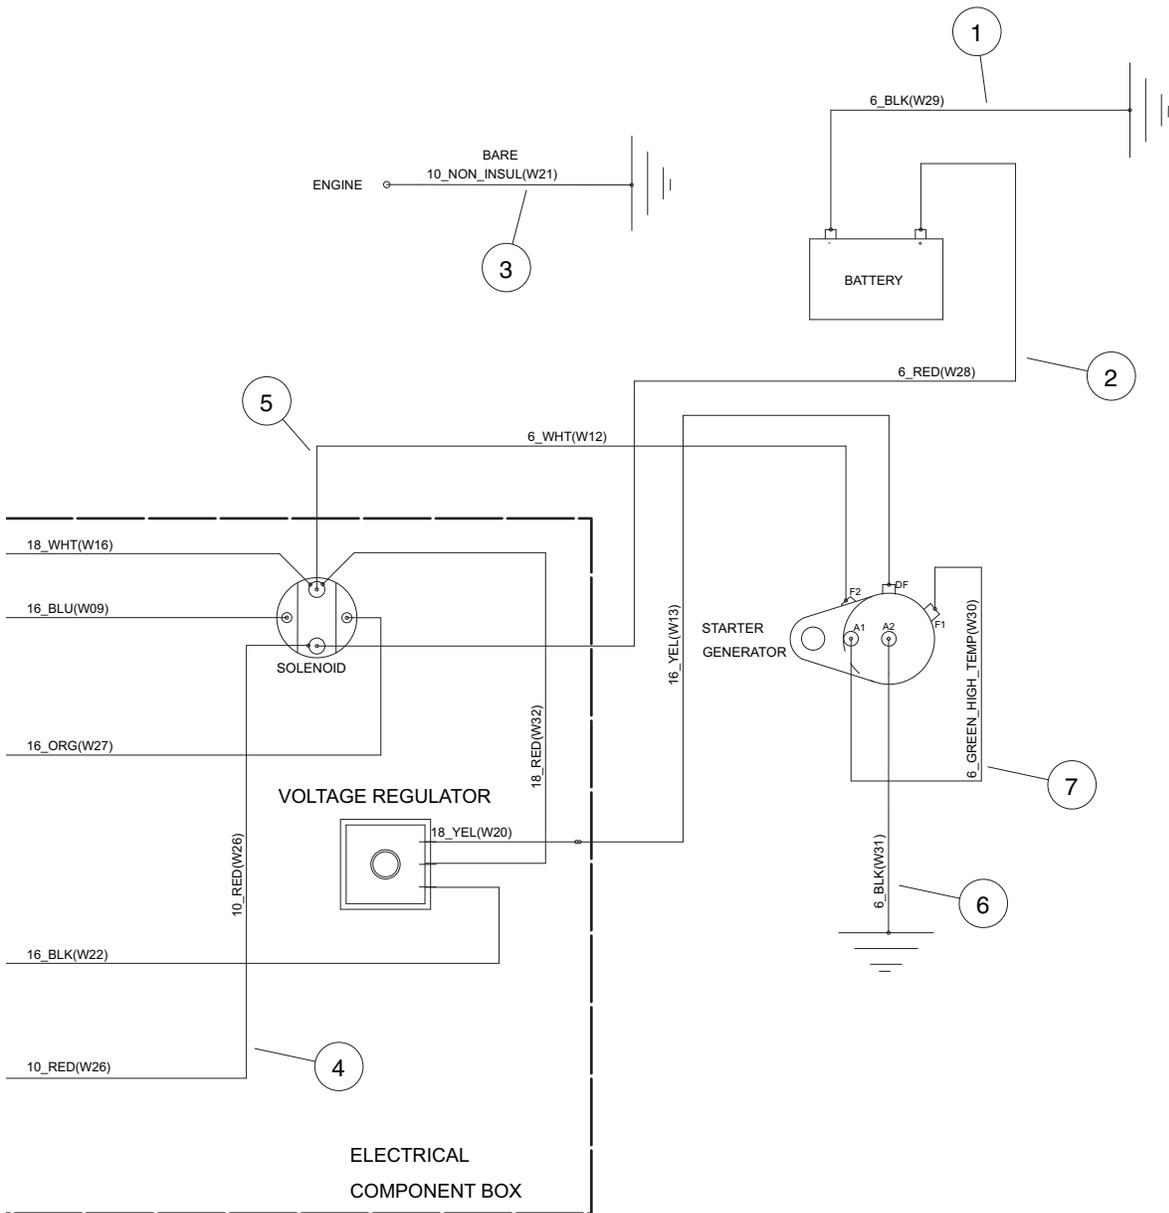

000323-001

6


G

See previous two pages for illustration.


WIRING – GASOLINE TURF/CARRYALL 1

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012382</u>	Wire Assy, #6 Black	1
2	<u>1014119</u>	Wire Assembly #6 Red	1
3	<u>1015332</u>	Wire Assembly, #10, Uninsulated	1
4	<u>1015737</u>	Wire Assy, #10 Red	1
5	<u>1015769</u>	Wire Assy, #6 White	1
6	<u>1015920</u>	Ground Wire Assembly	1
7	<u>101837301</u>	Wire Assy, #6 Green	1
8	<u>103332402</u>	Assy Wire Harness Gas V4 Kit	1

6
G

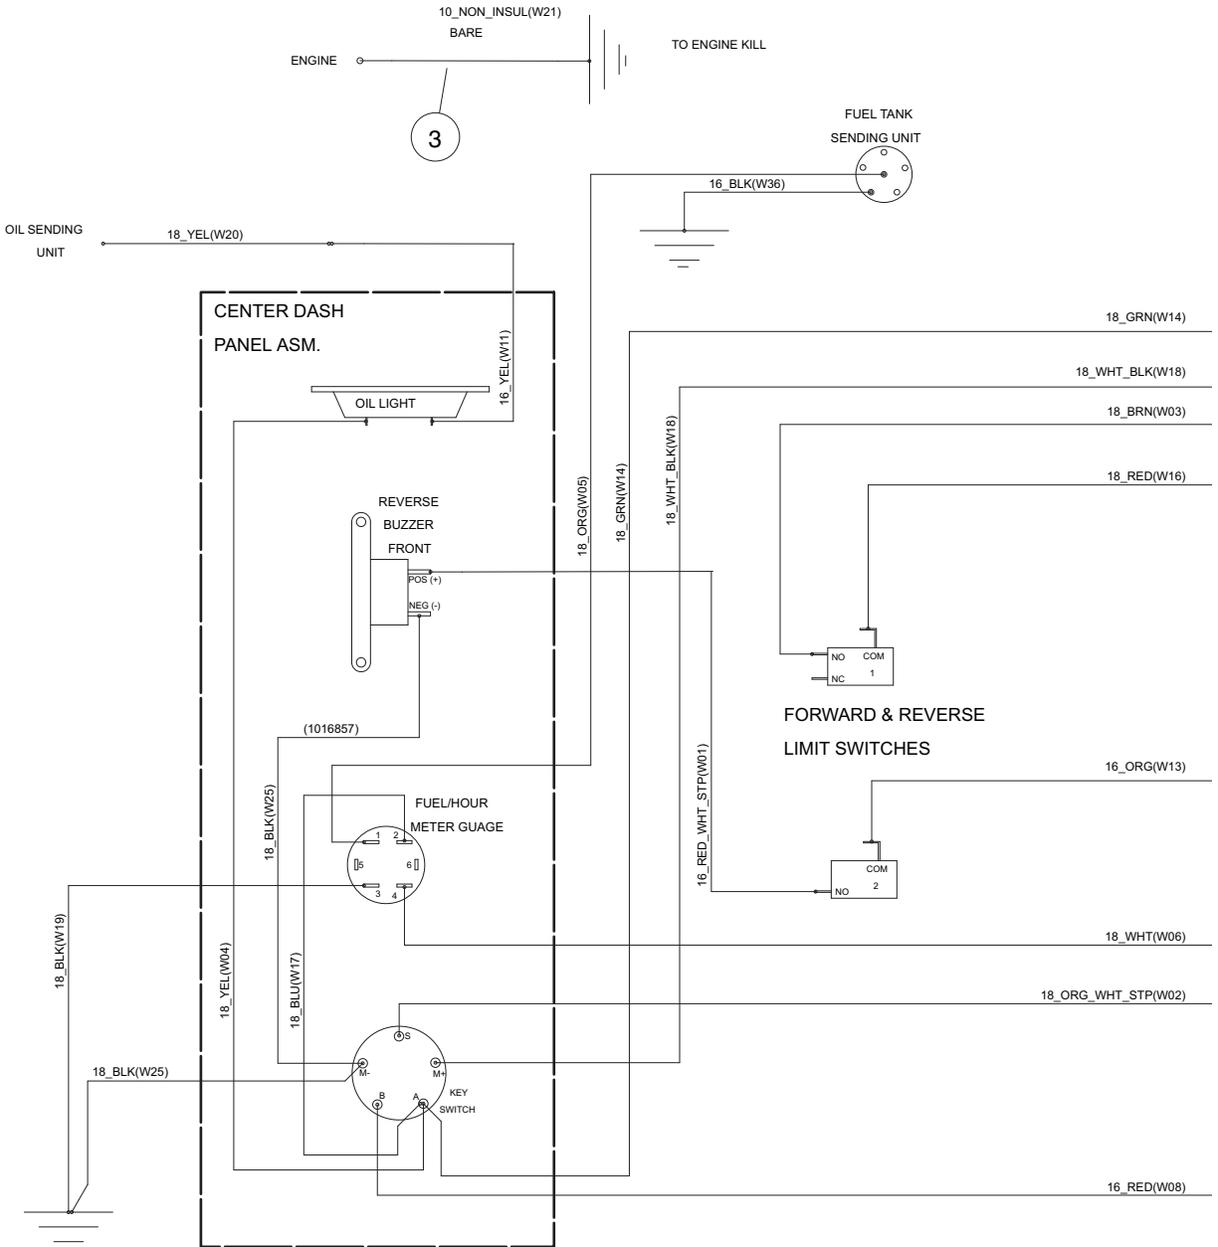

000325-001

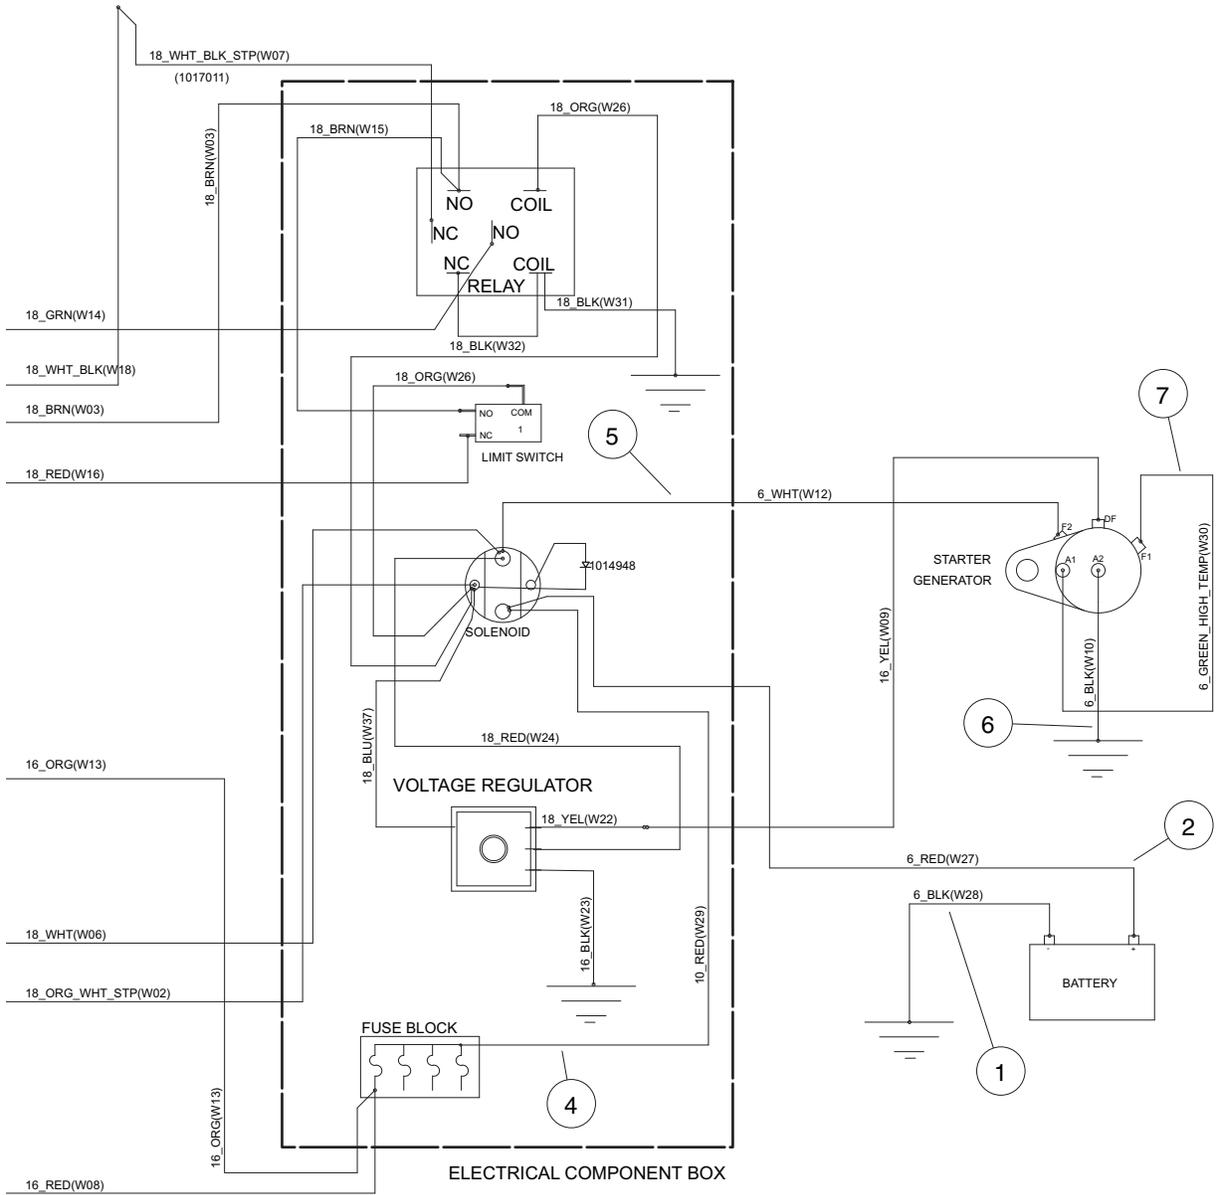

000325-001

6

G


See previous two pages for illustration.

WIRING – GASOLINE CARRYALL 2 PLUS


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012382</u>	Wire Assy, #6 Black	1
2	<u>1014119</u>	Wire Assembly #6 Red	1
3	<u>1015332</u>	Wire Assembly, #10, Uninsulated	1
4	<u>1015737</u>	Wire Assy, #10 Red	1
5	<u>1015769</u>	Wire Assy, #6 White	1
6	<u>1016380</u>	Wire Assembly #6 Black	1
7	<u>101837301</u>	Wire Assy, #6 Green	1
8	<u>101990302</u>	Wire Harness Assembly, Carryall 2 Plus	1

6

G

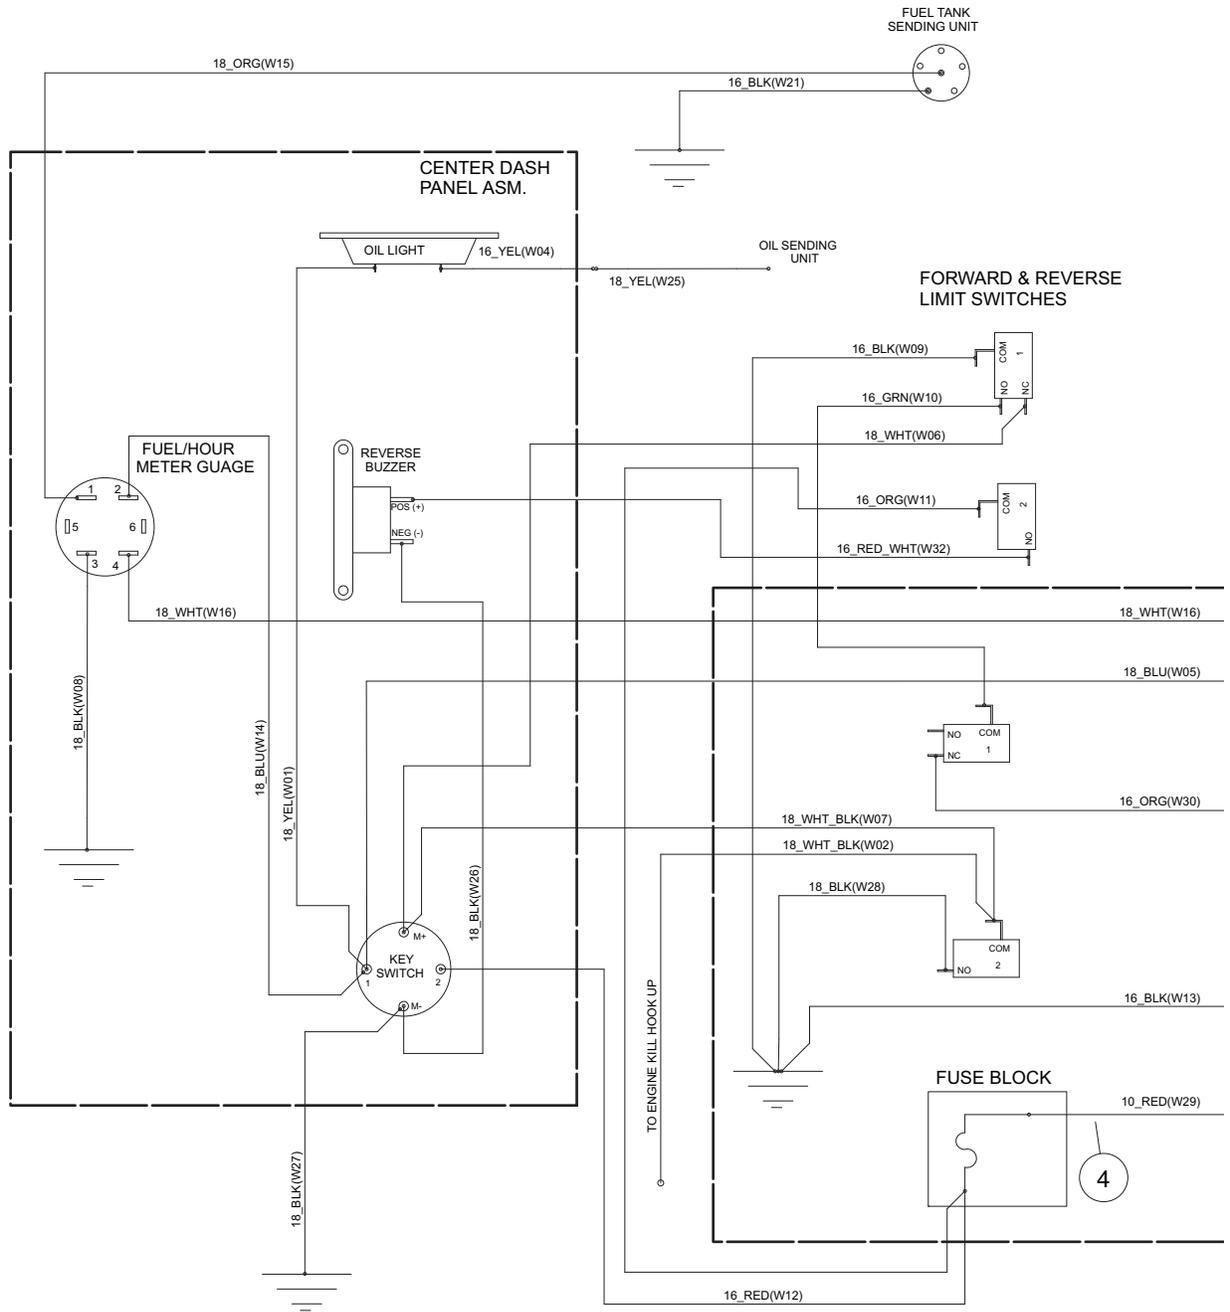

000324-001

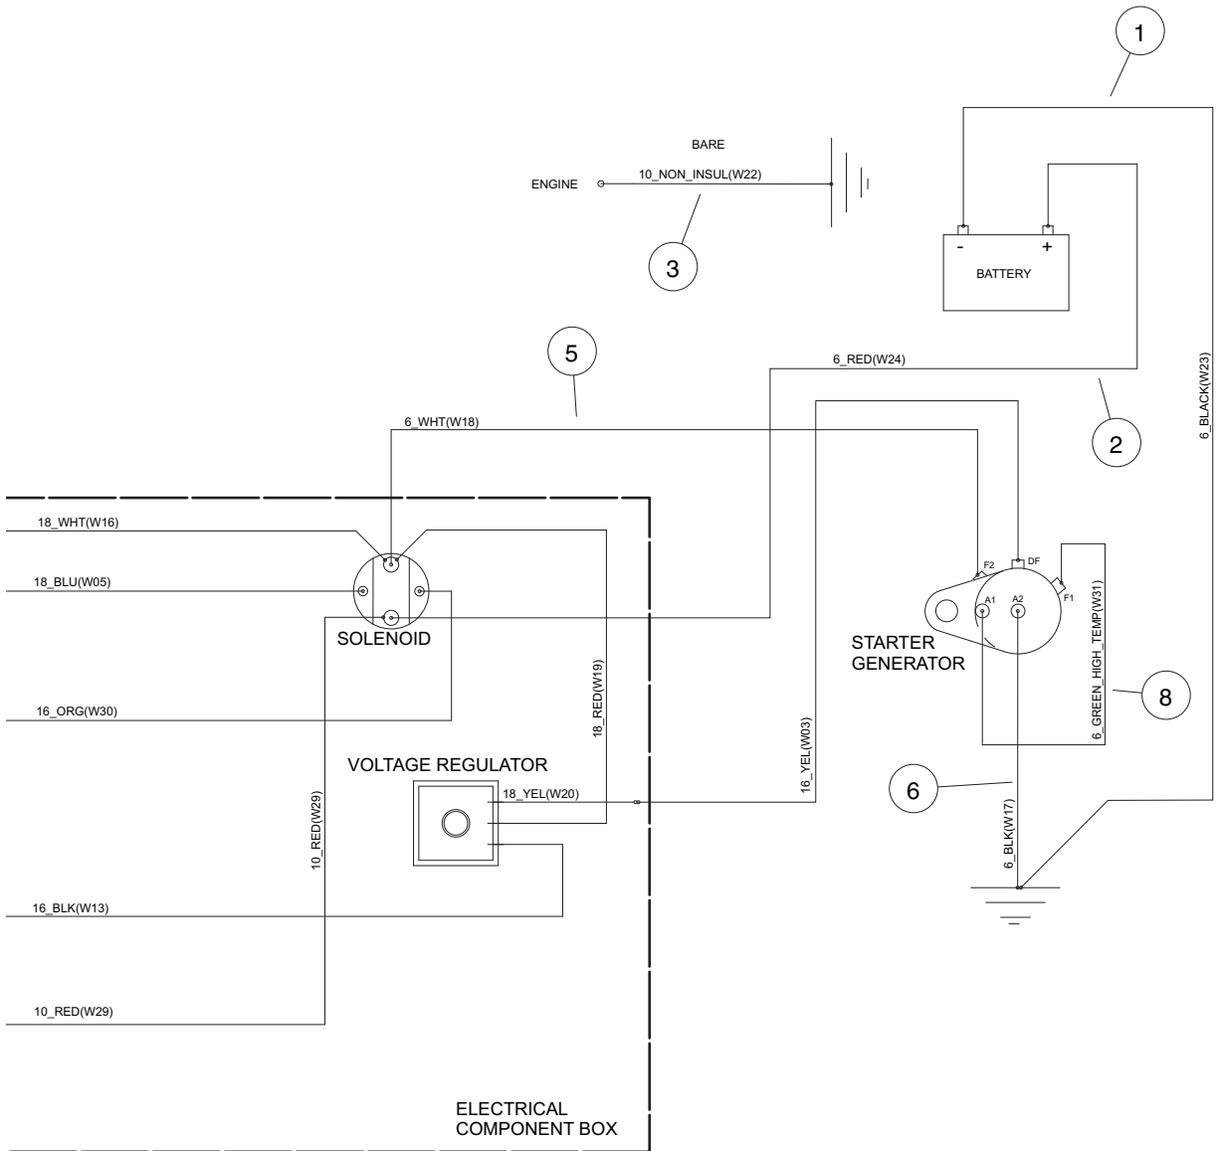

000324-001

6


G

See previous two pages for illustration.


WIRING – GASOLINE TURF/CARRYALL 2, AND TURF/CARRYALL 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012382</u>	Wire Assy, #6 Black	1
2	<u>1014119</u>	Wire Assembly #6 Red	1
3	<u>1015332</u>	Wire Assembly, #10, Uninsulated	1
4	<u>1015737</u>	Wire Assy, #10 Red	1
5	<u>1015769</u>	Wire Assy, #6 White	1
6	<u>1016380</u>	Wire Assembly #6 Black	1
7	1016858	Wire Harness, Headlight	1
8	<u>101837301</u>	Wire Assy, #6 Green	1
9	101990102	Wire Harness Assembly, CAII Gas	1
Note: Item 7 (not shown) is not standard on all models.			

6
G

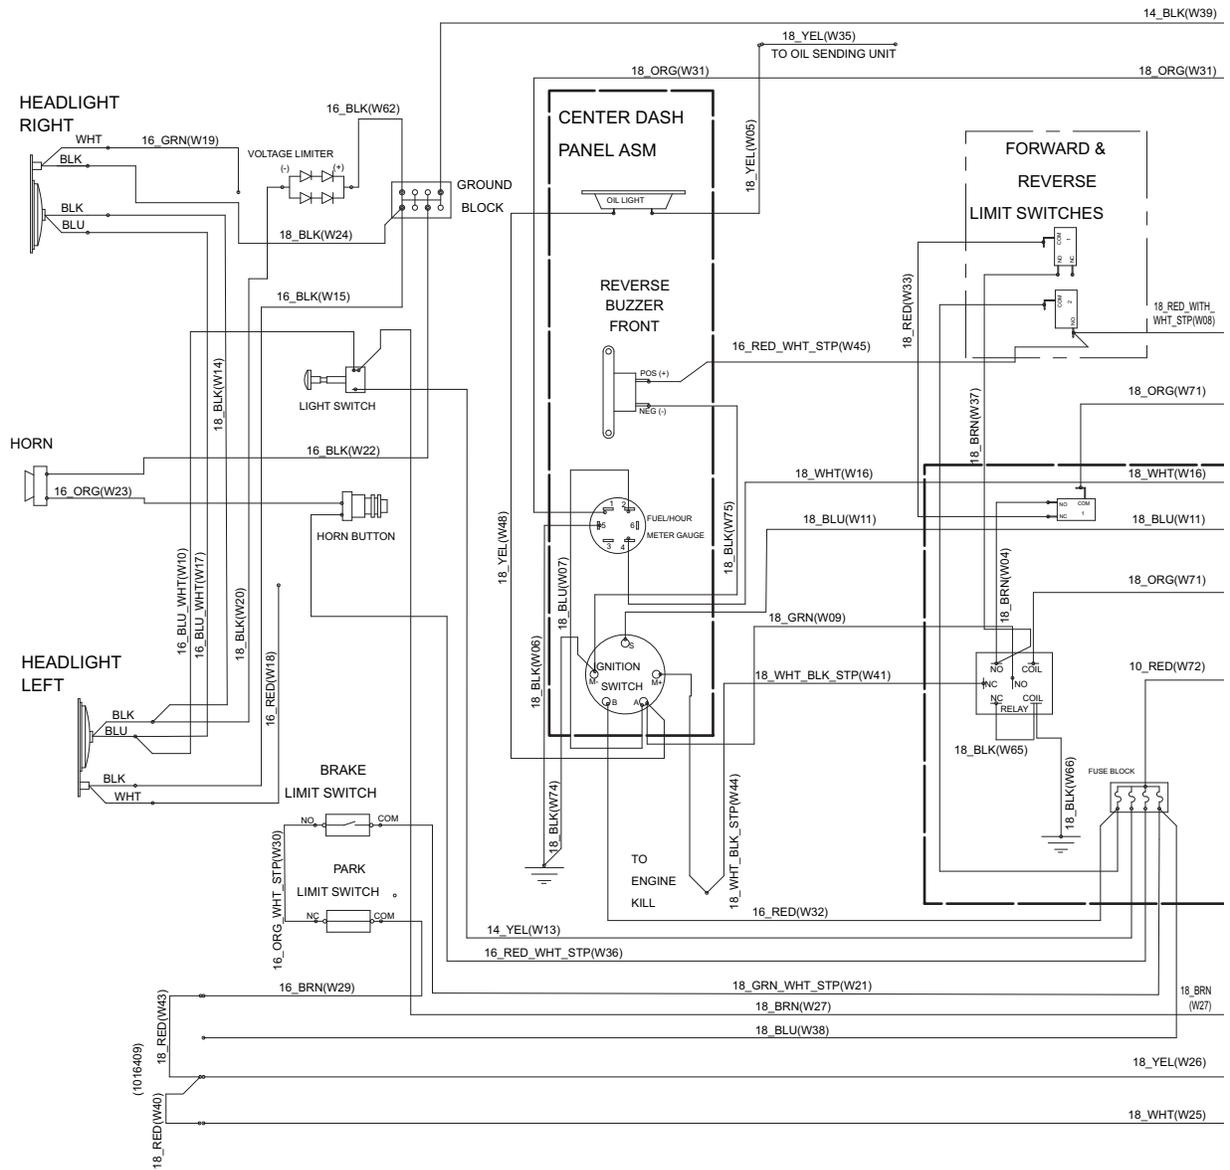

000326-001

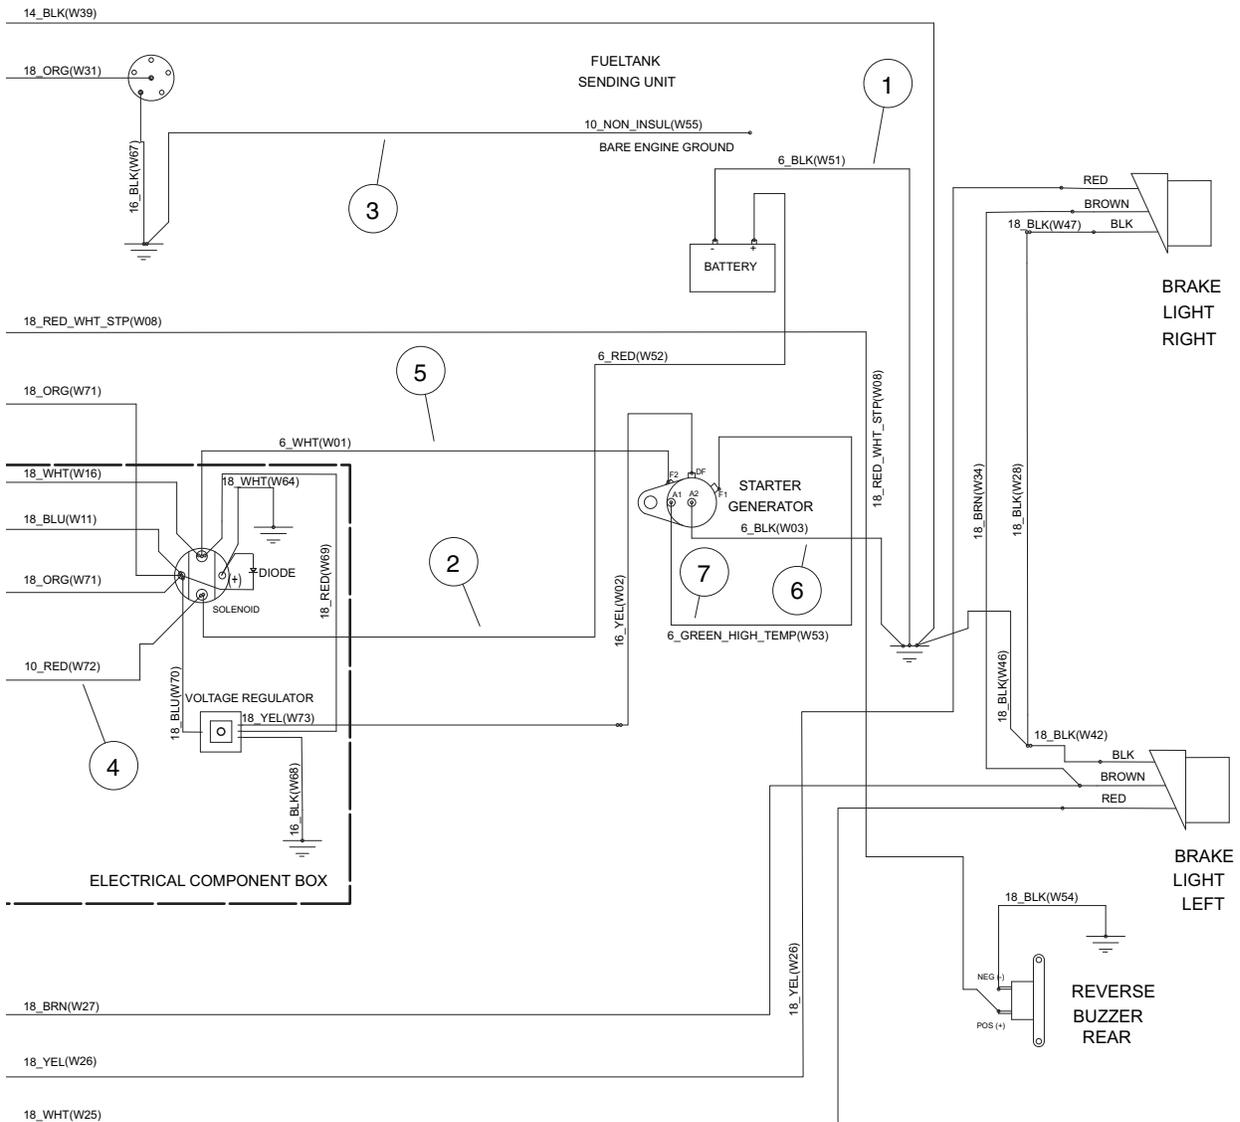

000326-001

6

G


See previous two pages for illustration.

WIRING – GASOLINE CARRYALL 6


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012382</u>	Wire Assy, #6 Black	1
2	<u>1014119</u>	Wire Assembly #6 Red	1
3	<u>1015332</u>	Wire Assembly, #10, Uninsulated	1
4	<u>1015737</u>	Wire Assy, #10 Red	1
5	<u>1015769</u>	Wire Assy, #6 White	1
6	<u>1016380</u>	Wire Assembly #6 Black	1
7	<u>101837301</u>	Wire Assy, #6 Green	1
8	****	Wire Harness (Lighting)	1
9	<u>101990402</u>	Wire Harness Assy	1
		**** Special order item available upon request.	

6

G

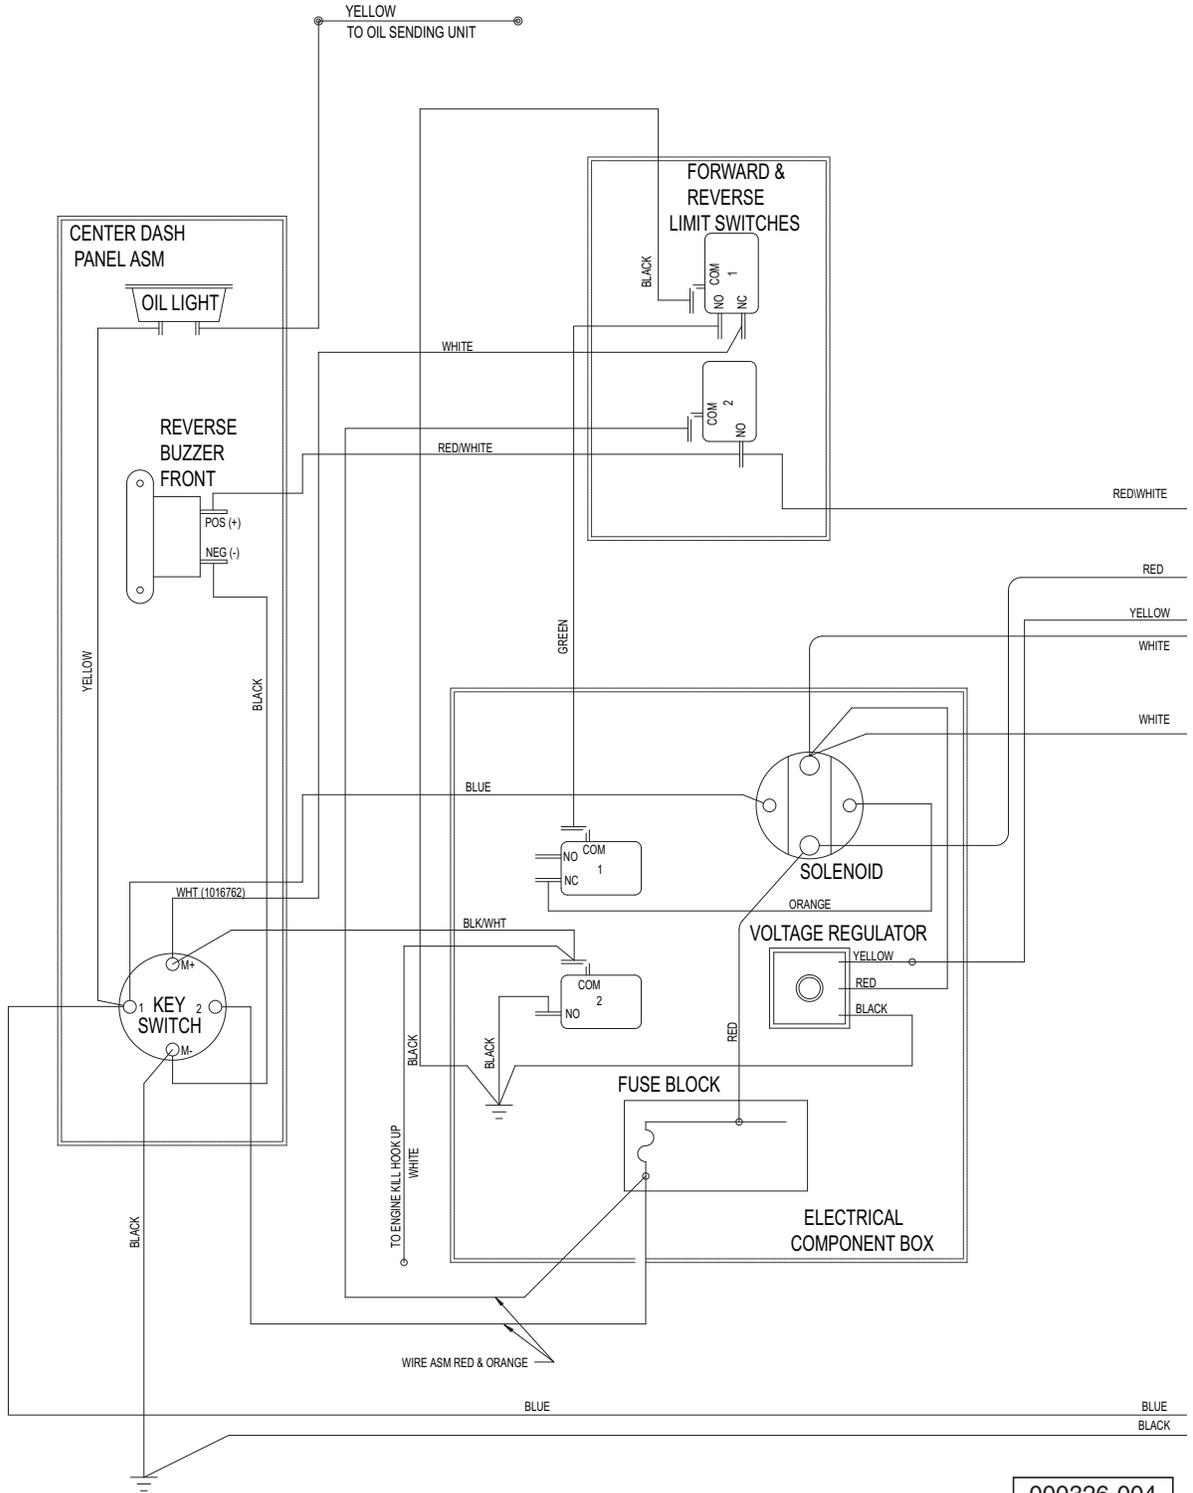

000326-004

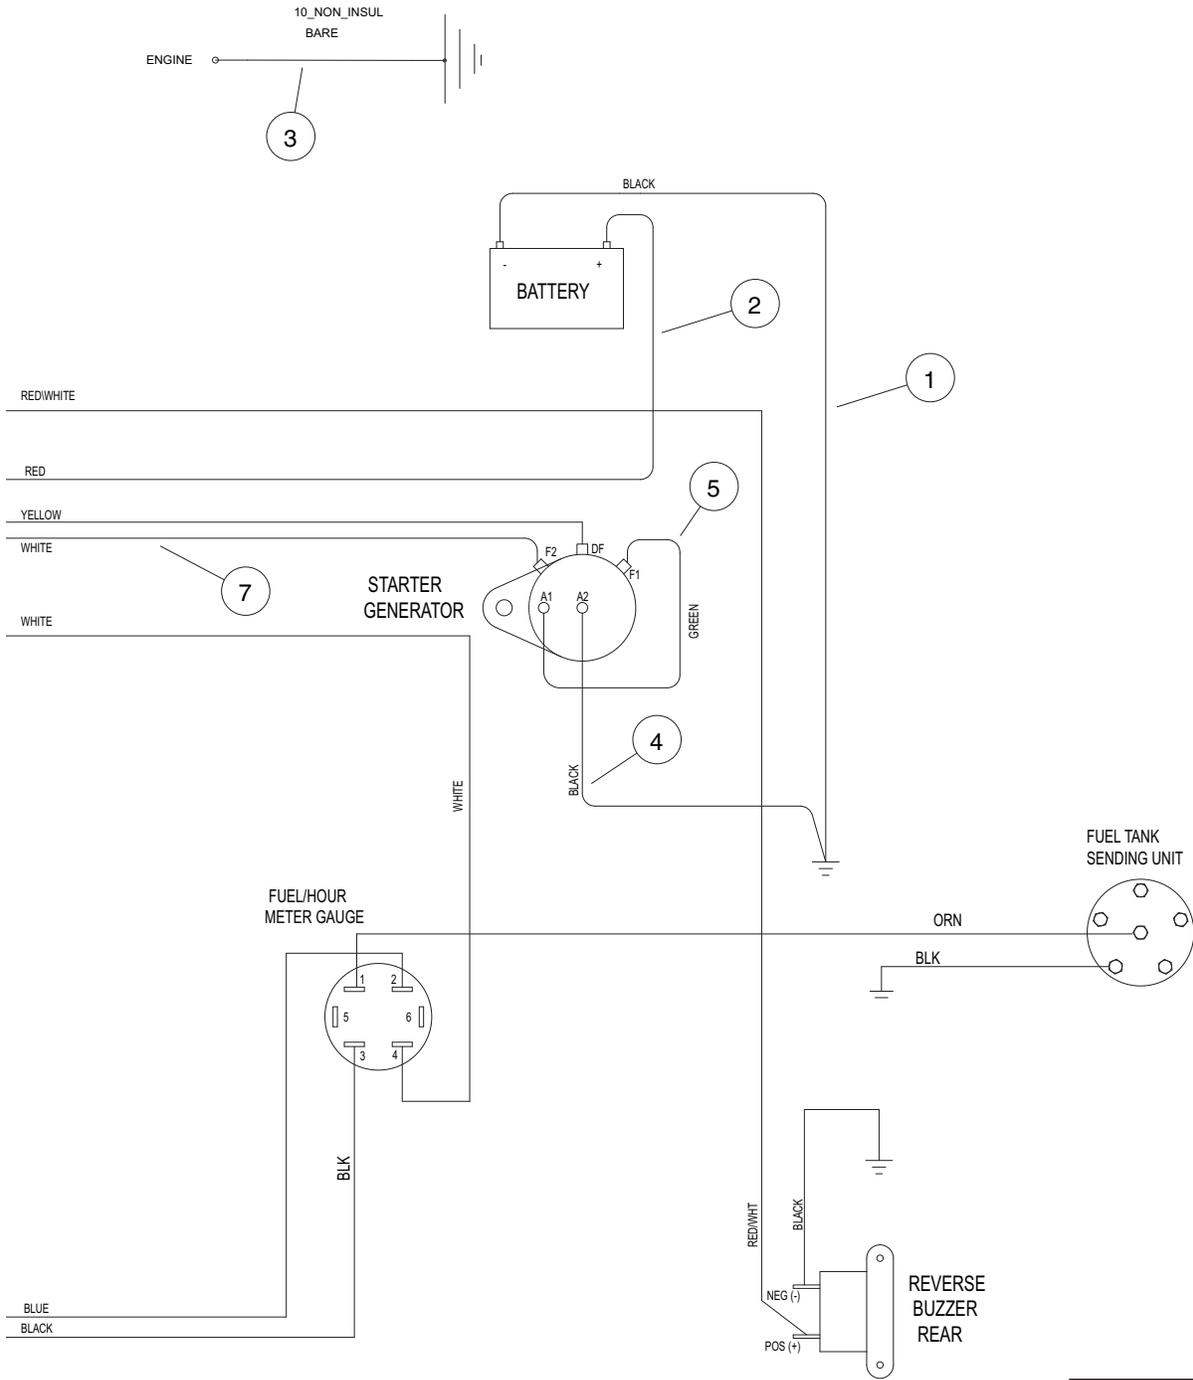

000326-004

6

G


See previous two pages for illustration.

WIRING – GASOLINE TURF 6


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012382</u>	Wire Assy, #6 Black	1
2	<u>1014119</u>	Wire Assembly #6 Red	1
3	<u>1015332</u>	Wire Assembly, #10, Uninsulated	1
4	<u>1015920</u>	Ground Wire Assembly	1
5	<u>101837301</u>	Wire Assy, #6 Green	1
6	<u>101990201</u>	Wire Harness Assy, Limo Gas * (includes item 7)	1
7	<u>1015769</u>	Wire Assy, #6 White	1
		* Note: The harness contains several wires that are not available for order as individual items.	

6

G

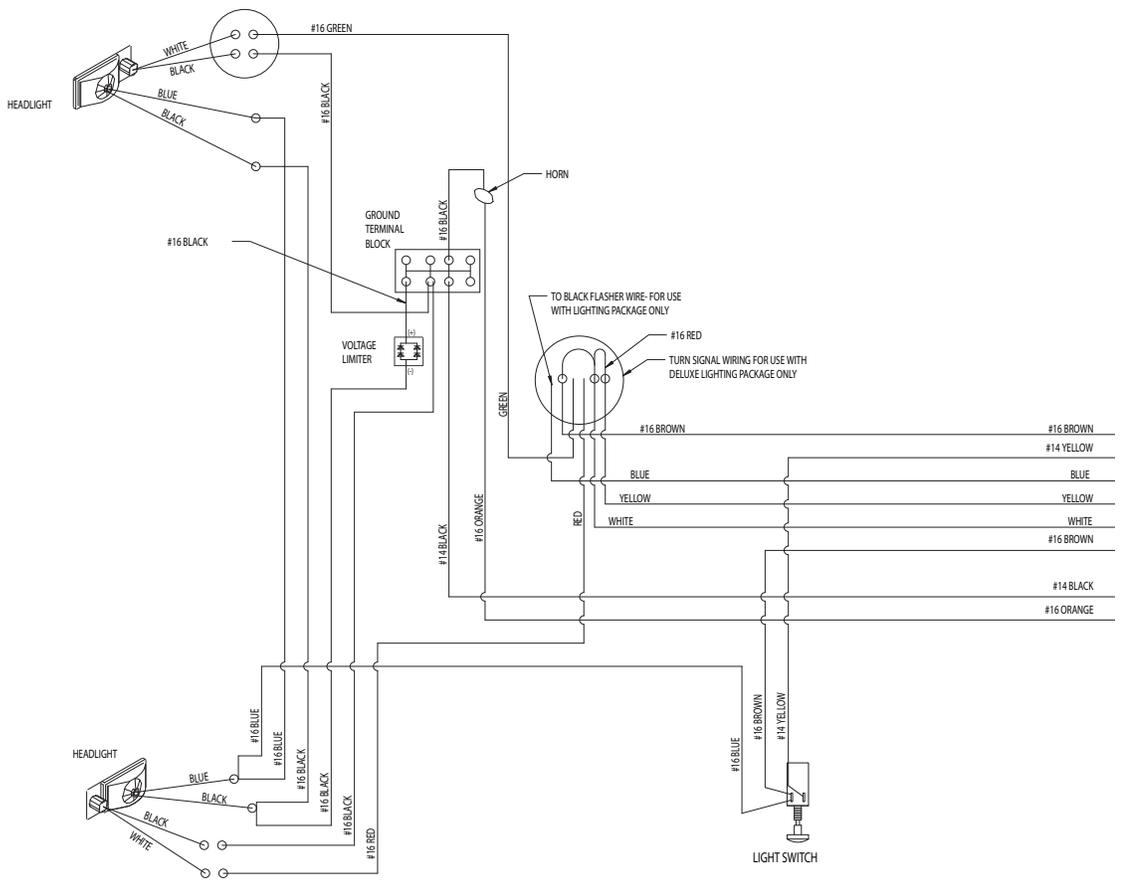

000431-001

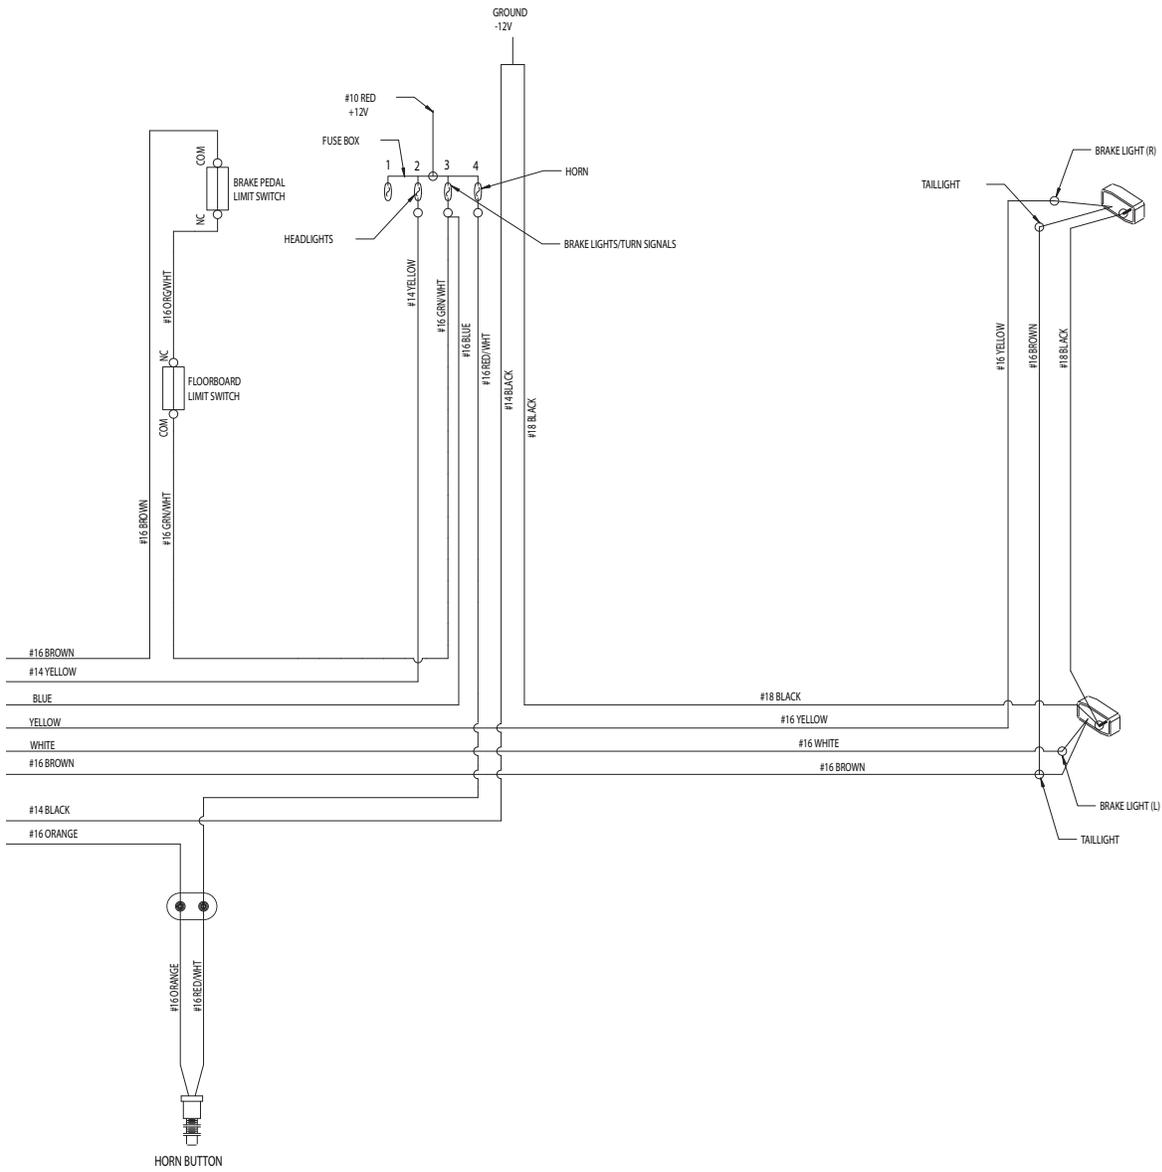

000431-001

6

G

See previous two pages for illustration.


WIRING – GASOLINE TURF 6 LIGHTING

ITEM	PART NO.	DESCRIPTION	QTY
1	****	<p>1 2 3 4</p> <p>Wire Harness (Lighting)</p> <p>**** Special order item available upon request.</p>	1

6

G

6
G

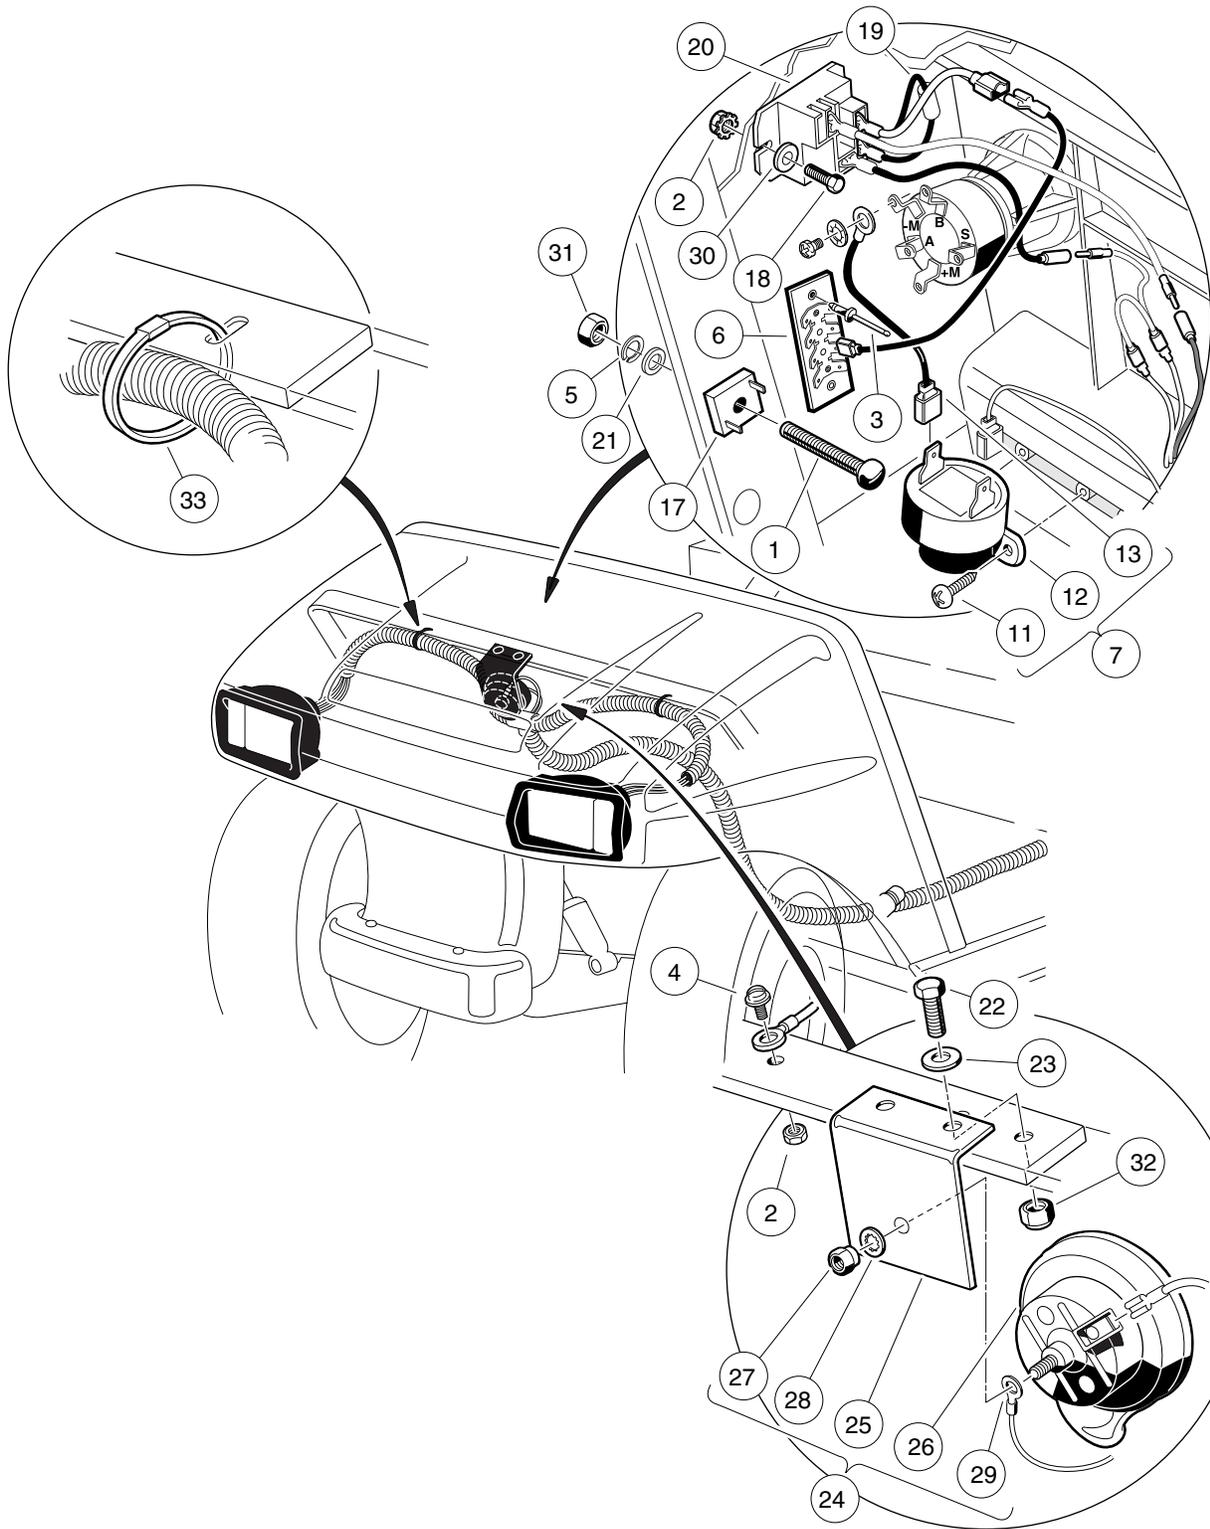


000335-001

FRONT BODY ELECTRICAL COMPONENTS – GASOLINE TURF/CARRYALL 6

6
G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010909</u>	Screw, #10-32 X 1.25 Rd Hd Mch	1
2	<u>1011229</u>	Locknut, #6-32 Whiz	3
3	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2
4	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
5	<u>1016</u>	Lockwasher, #10 Split	1
6	<u>1016356</u>	Terminal Block with Insulator	1
7	<u>1016859</u>	Kit, Reverse Buzzer (includes items 8 through 16)	1
8	<u>1011229</u>	Locknut, #6-32 Whiz	1
9	<u>1012431</u>	Washer, #4 Flat	2
10	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
11	<u>1016849</u>	Screw, #4-24 X 0.33 Pan-Head Machine	2
12	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
13	<u>1016857</u>	Wire Assembly Black #18	1
14	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2
15	<u>8057</u>	Nut, #4-40 Hex Machine	2
16	<u>8058</u>	Lockwasher, #4 Split	2
17	<u>1017721</u>	Limiter, Voltage	1
18	<u>1017853</u>	Screw, #6-32 X 0.75 Hex-Head Machine	2
19	<u>101914401</u>	Assembly, Voltage Suppressor	1
20	<u>102199001</u>	Relay, 12-Volt	1
21	<u>183</u>	Washer, #10 Type A Flat	1
22	<u>304</u>	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
23	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
24	<u>4029</u>	Horn (includes items 25 through 29)	1
25	<u>1011825</u>	Horn Bracket	1
26	<u>1014530</u>	Horn, 12-VDC	1
27	<u>101955101</u>	Nut, M6 Hex	1
28	<u>7820</u>	Washer, 5/16 Internal-Tooth	1
29	<u>N/A</u>	5/16 Ring Term.	1
30	<u>7591</u>	Washer, #6 Flat	2
31	<u>7893</u>	Nut, #10-32 Hex	1
32	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2
33	<u>8639</u>	Tie Wrap, 11" Nylon	4
		Note: Items 8 through 10, and 14 through 16 are included in the reverse buzzer kit, but are not used in this application.	

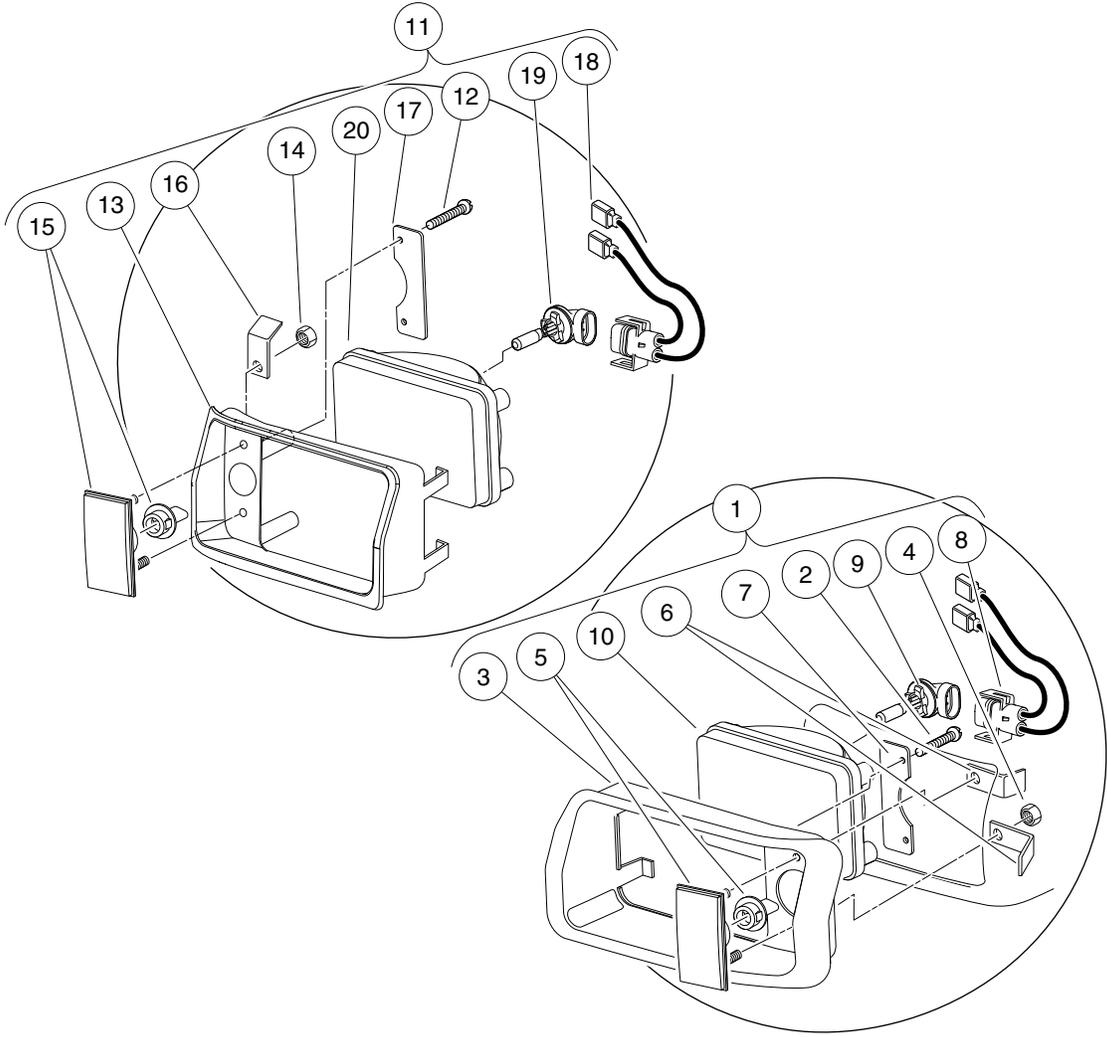


000073-001

HEADLIGHTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101988001</u>	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	1
2	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2
3	<u>1016880</u>	Headlight Bezel, Left	1
4	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
5	<u>1017062</u>	Turn Signal Lens Assy	1
6	<u>1017064</u>	Mounting Bracket	2
7	<u>1017065</u>	Retainer, Headlight	1
8	<u>101987901</u>	Connector Harness Assembly, Headlight	1
9	<u>101988101</u>	Bulb, Headlight	1
10	<u>101988201</u>	Lens, Headlight	1
11	<u>101988002</u>	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	1
12	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2
13	<u>1016879</u>	Headlight Bezel, Right	1
14	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
15	<u>1017062</u>	Turn Signal Lens Assy	1
16	<u>1017064</u>	Mounting Bracket	2
17	<u>1017065</u>	Retainer, Headlight	1
18	<u>101987901</u>	Connector Harness Assembly, Headlight	1
19	<u>101988101</u>	Bulb, Headlight	1
20	<u>101988201</u>	Lens, Headlight	1

6
G

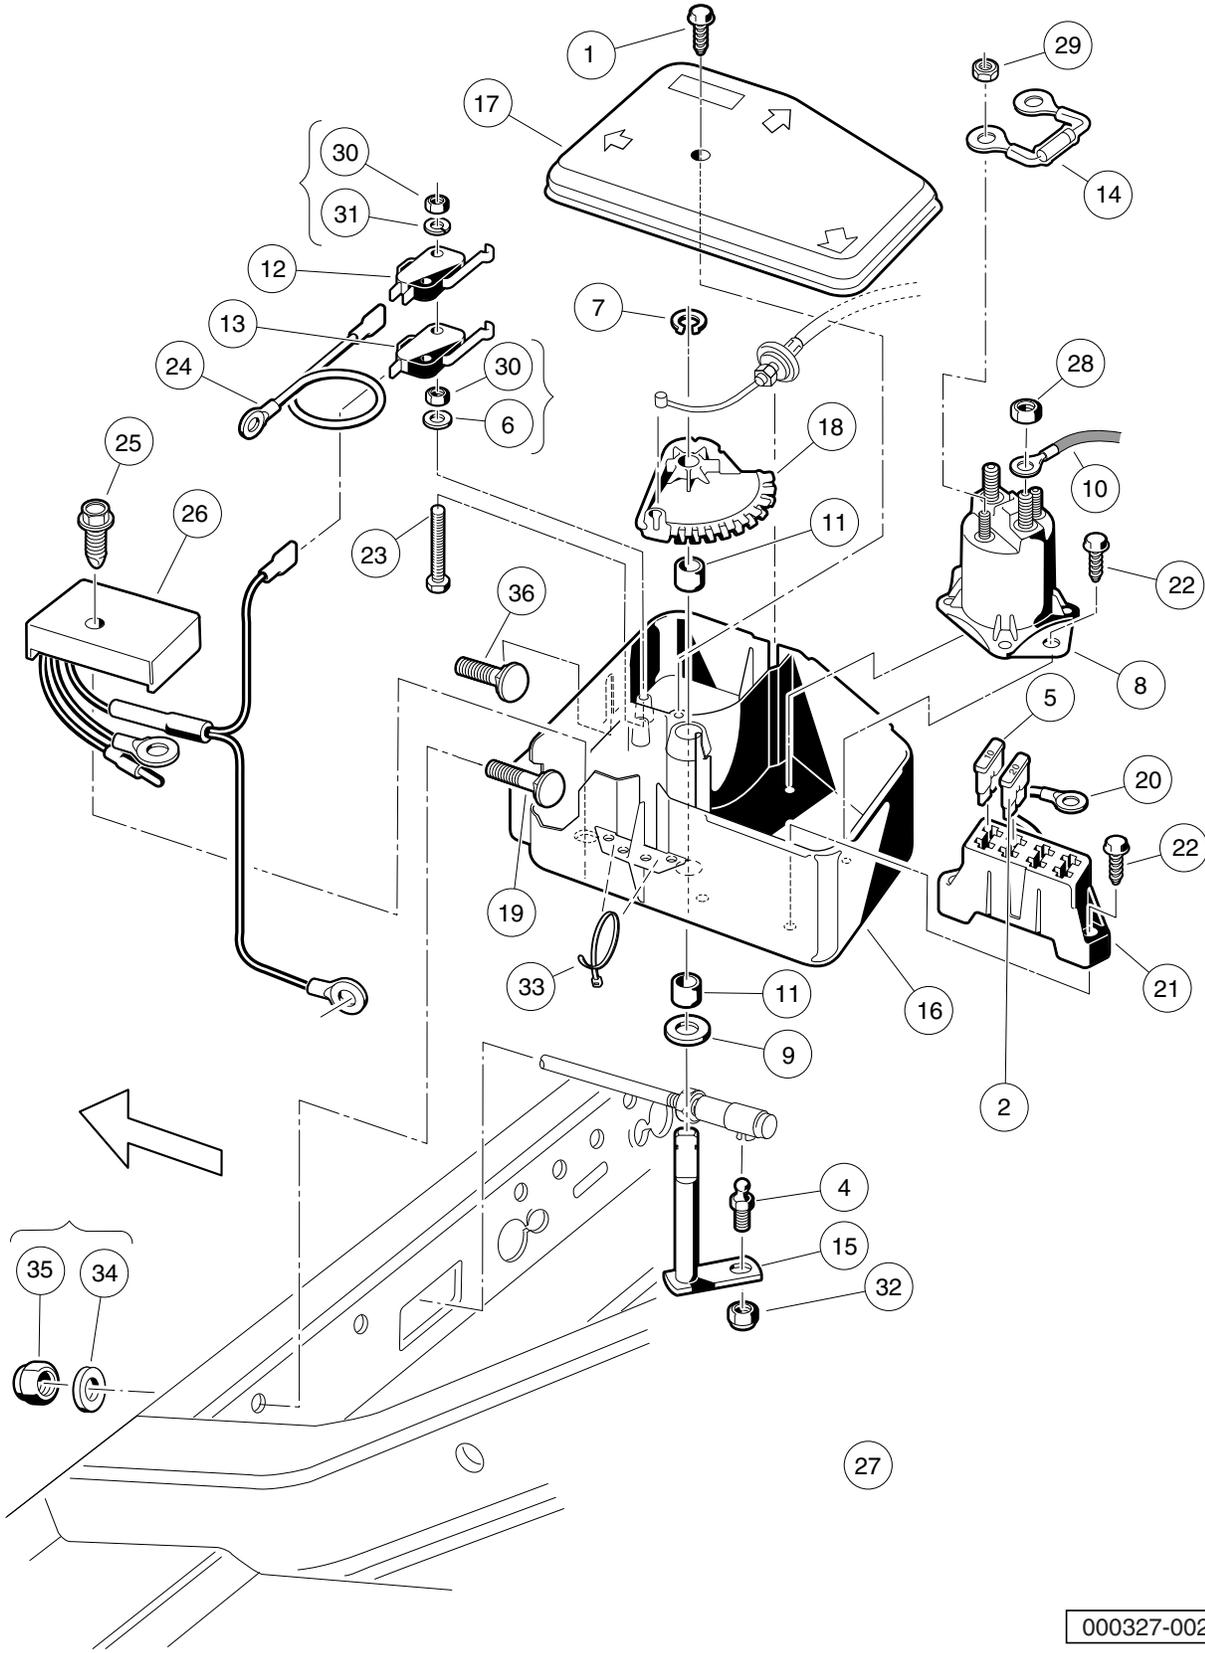


000327-002

ELECTRICAL COMPONENT BOX – GASOLINE TURF/CARRYALL 1 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	1
2	<u>1016423</u>	Fuse, 20-Amp	1
3	N/A	Electrical Component Box Assembly (includes items 4 through 33)	1
4	<u>1010954</u>	Stud, 1/4-28 X 0.560 Ball	1
5	<u>1012295</u>	Fuse, 10-Amp	1
6	<u>1012431</u>	Washer, #4 Flat	2
7	<u>1013589</u>	Ring, 0.338" Internal Retaining	1
8	<u>1013609</u>	Solenoid, 12-Volt	1
9	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	1
10	<u>1014119</u>	Wire Assembly #6 Red	1
11	<u>1014145</u>	Bushing, Secondary Weight, Split	2
12	<u>1014807</u>	Switch, Limit	1
13	<u>1014808</u>	Switch, Limit	1
14	<u>1014948</u>	Diode	1
15	<u>1015345</u>	Bell Crank and Shaft Assembly	1
16	<u>1015371</u>	Box, Electrical Component	1
17	<u>1015372</u>	Cover, Electric Box	1
18	<u>1015373</u>	Cam, Electric Box	1
19	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	1
20	<u>1015737</u>	Wire Assy, #10 Red	1
21	<u>1015741</u>	Fuse Block	1
22	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	4
23	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2
24	<u>1016401</u>	Wire Assy, #16 Orange	1
25	<u>101856102</u>	Screw, 1/4-15 X 1.50 Hi-lo Hex	1
26	<u>102711201</u>	Voltage Regulator	1
27	<u>103332402</u>	Assy Wire Harness Gas V4 Kit	1
28	<u>1242</u>	Nut, 5/16-18 Hex	2
29	<u>7893</u>	Nut, #10-32 Hex	2
30	<u>8057</u>	Nut, #4-40 Hex Machine	4
31	<u>8058</u>	Lockwasher, #4 Split	2
32	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1
33	<u>8990</u>	Tie Wrap, 8" Nylon	2
34	<u>1241</u>	Washer, 5/16 Type A Flat	2
35	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
36	<u>7818</u>	Bolt, Carriage, 5/16-18 X 1.5	1

6
G

6
G

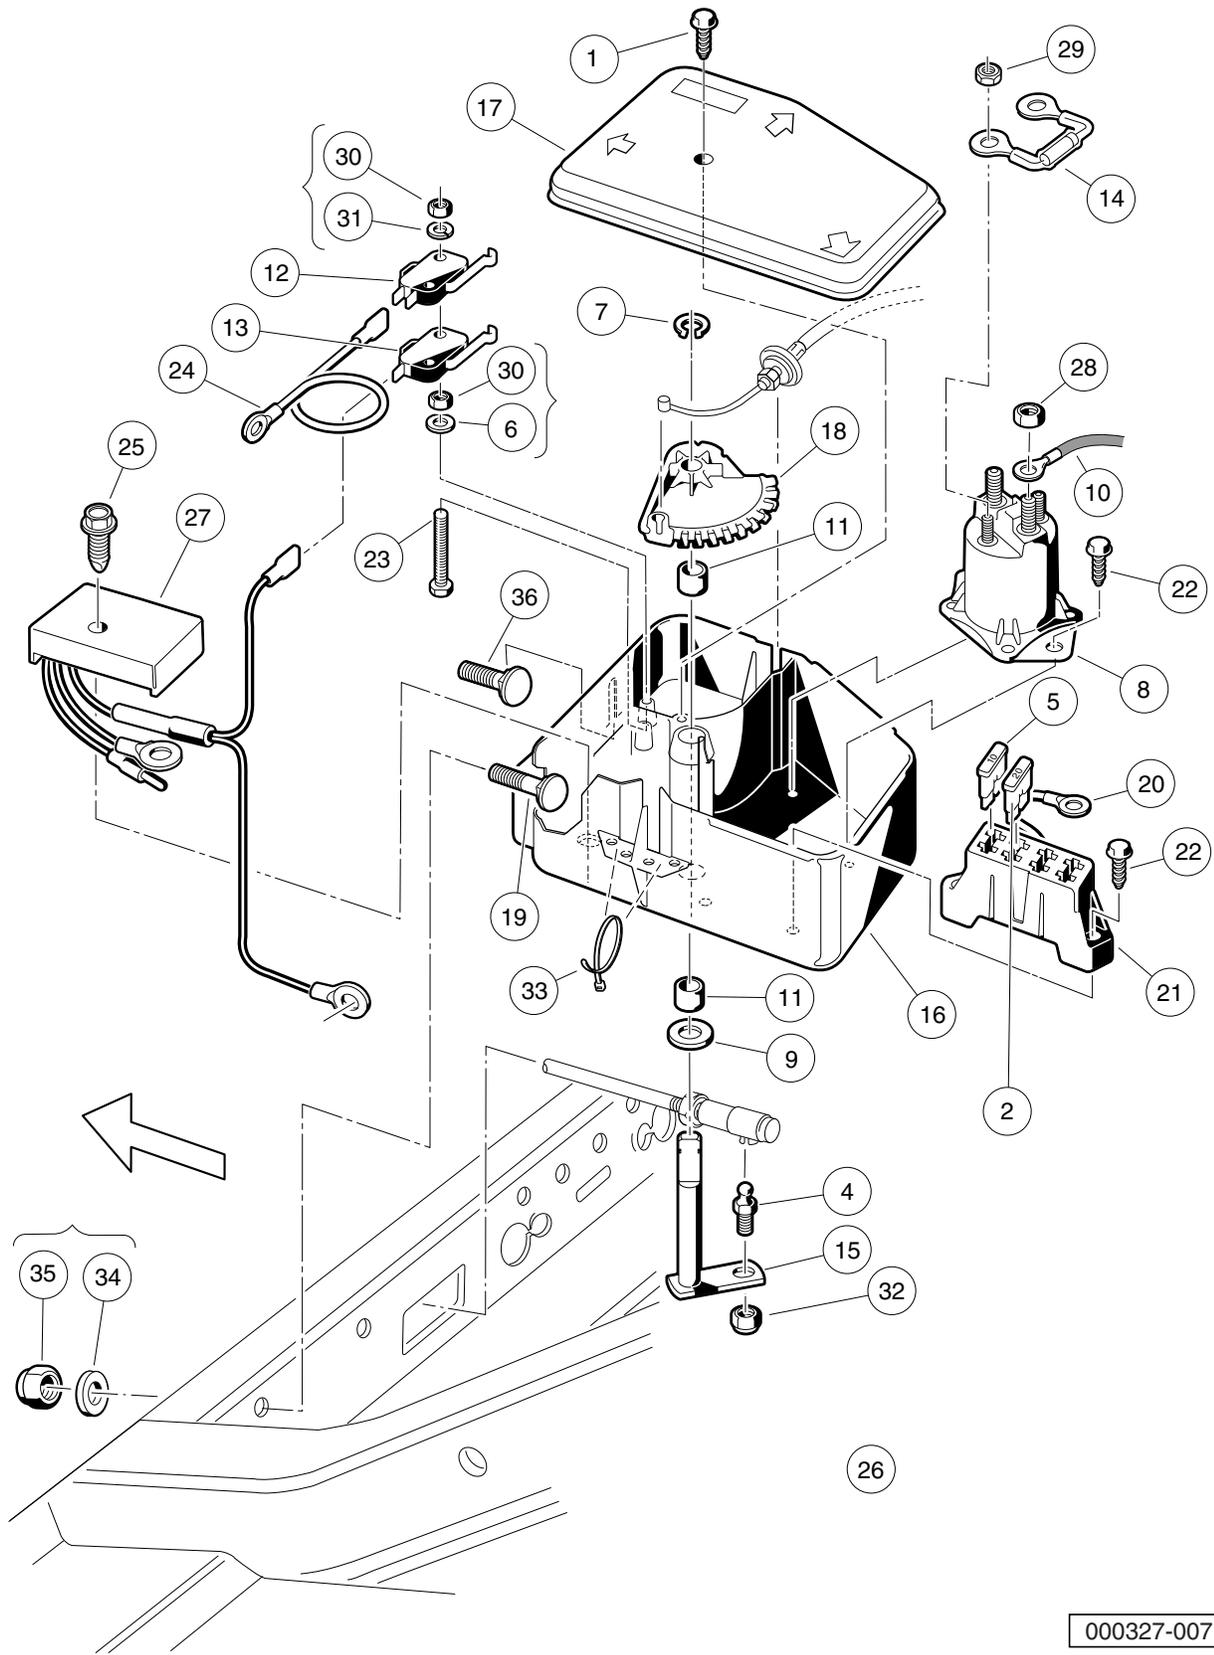


000327-007

ELECTRICAL COMPONENT BOX – GASOLINE TURF/ CARRYALL 2, AND 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	1
2	<u>1016423</u>	Fuse, 20-Amp	1
3	N/A	Electrical Component Box Assembly (includes items 4 through 33)	1
4	<u>1010954</u>	Stud, 1/4-28 X 0.560 Ball	1
5	<u>1012295</u>	Fuse, 10-Amp	1
6	<u>1012431</u>	Washer, #4 Flat	2
7	<u>1013589</u>	Ring, 0.338" Internal Retaining	1
8	<u>1013609</u>	Solenoid, 12-Volt	1
9	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	1
10	<u>1014119</u>	Wire Assembly #6 Red	1
11	<u>1014145</u>	Bushing, Secondary Weight, Split	2
12	<u>1014807</u>	Switch, Limit	1
13	<u>1014808</u>	Switch, Limit	1
14	<u>1014948</u>	Diode	1
15	<u>1015345</u>	Bell Crank and Shaft Assembly	1
16	<u>1015371</u>	Box, Electrical Component	1
17	<u>1015372</u>	Cover, Electric Box	1
18	<u>1015373</u>	Cam, Electric Box	1
19	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	1
20	<u>1015737</u>	Wire Assy, #10 Red	1
21	<u>1015741</u>	Fuse Block	1
22	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	4
23	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2
24	<u>1016401</u>	Wire Assy, #16 Orange	1
25	<u>101856102</u>	Screw, 1/4-15 X 1.50 Hi-lo Hex	1
26	<u>101990102</u>	Wire Harness Assembly, CAII Gas	1
27	<u>102711201</u>	Voltage Regulator	1
28	<u>1242</u>	Nut, 5/16-18 Hex	2
29	<u>7893</u>	Nut, #10-32 Hex	2
30	<u>8057</u>	Nut, #4-40 Hex Machine	4
31	<u>8058</u>	Lockwasher, #4 Split	2
32	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1
33	<u>8990</u>	Tie Wrap, 8" Nylon	2
34	<u>1241</u>	Washer, 5/16 Type A Flat	2
35	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
36	<u>7818</u>	Bolt, Carriage, 5/16-18 X 1.5	1

6
G

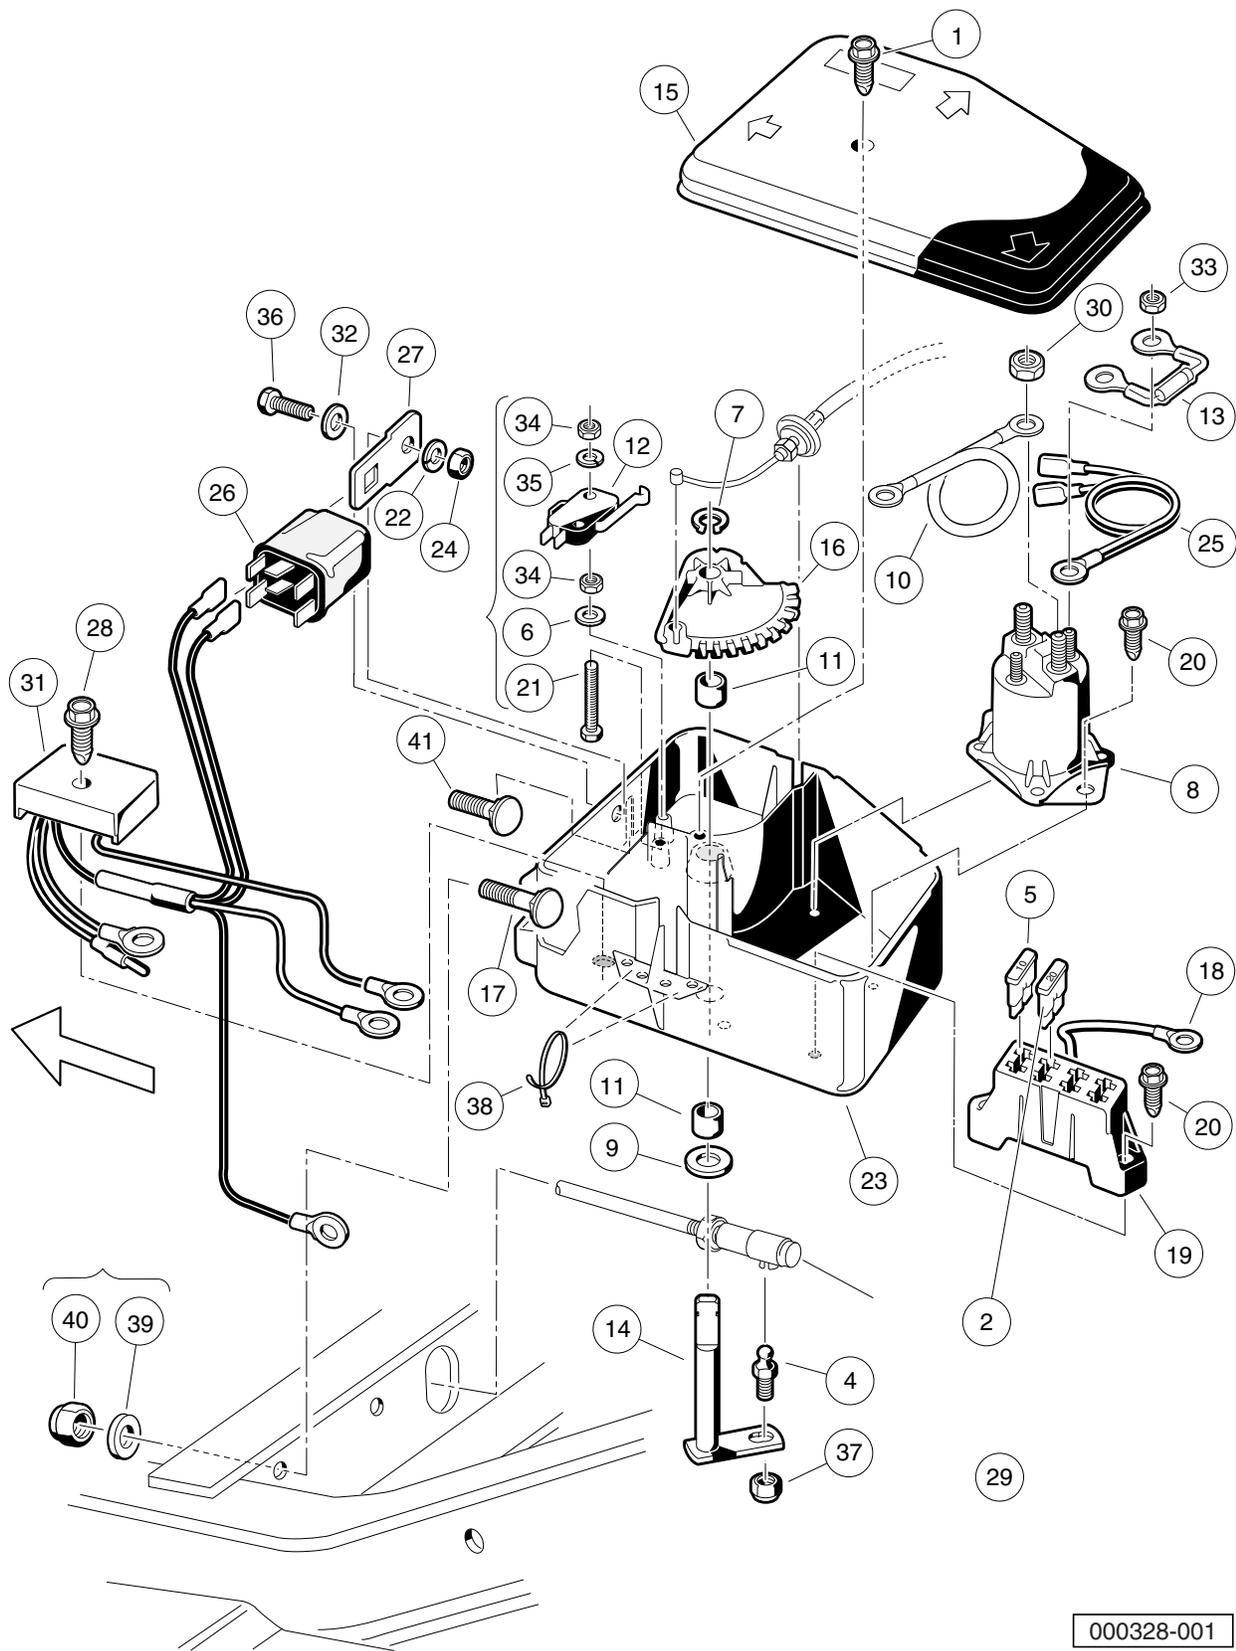


000328-001

ELECTRICAL COMPONENT BOX – GASOLINE CARRYALL 2 PLUS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	1
2	<u>1016423</u>	Fuse, 20-Amp	1
3	<u>101827701</u>	Electrical Component Box Assembly (includes items 4 through 38)	1
4	<u>1010954</u>	Stud, 1/4-28 X 0.560 Ball	1
5	<u>1012295</u>	Fuse, 10-Amp	1
6	<u>1012431</u>	Washer, #4 Flat	2
7	<u>1013589</u>	Ring, 0.338" Internal Retaining	1
8	<u>1013609</u>	Solenoid, 12-Volt	1
9	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	1
10	<u>1014119</u>	Wire Assembly #6 Red	1
11	<u>1014145</u>	Bushing, Secondary Weight, Split	2
12	<u>1014807</u>	Switch, Limit	1
13	<u>1014948</u>	Diode	1
14	<u>1015345</u>	Bell Crank and Shaft Assembly	1
15	<u>1015372</u>	Cover, Electric Box	1
16	<u>1015373</u>	Cam, Electric Box	1
17	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	1
18	<u>1015737</u>	Wire Assy, #10 Red	1
19	<u>1015741</u>	Fuse Block	1
20	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	4
21	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2
22	<u>1016</u>	Lockwasher, #10 Split	1
23	<u>1016997</u>	Electrical Component Box	1
24	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	1
25	<u>1017006</u>	Wire Assembly Orange #18	1
26	<u>1017239</u>	Relay	1
27	<u>1017243</u>	Mounting Bracket, Relay	1
28	<u>101856102</u>	Screw, 1/4-15 X 1.50 Hi-lo Hex	1
29	<u>101990302</u>	Wire Harness Assembly, Carryall 2 Plus	1
30	N/A	Asm, Voltage Regulator Key Sta	1
31	<u>1242</u>	Nut, 5/16-18 Hex	2
32	<u>183</u>	Washer, #10 Type A Flat	1
33	<u>7893</u>	Nut, #10-32 Hex	2
34	<u>8057</u>	Nut, #4-40 Hex Machine	4
35	<u>8058</u>	Lockwasher, #4 Split	2
36	<u>8450</u>	Screw, #10-24 X 0.50 Hex-Head	1
37	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1
38	<u>8990</u>	Tie Wrap, 8" Nylon	3
39	<u>1241</u>	Washer, 5/16 Type A Flat	2
40	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
41	<u>7818</u>	Bolt, Carriage, 5/16-18 X 1.5	1

6
G

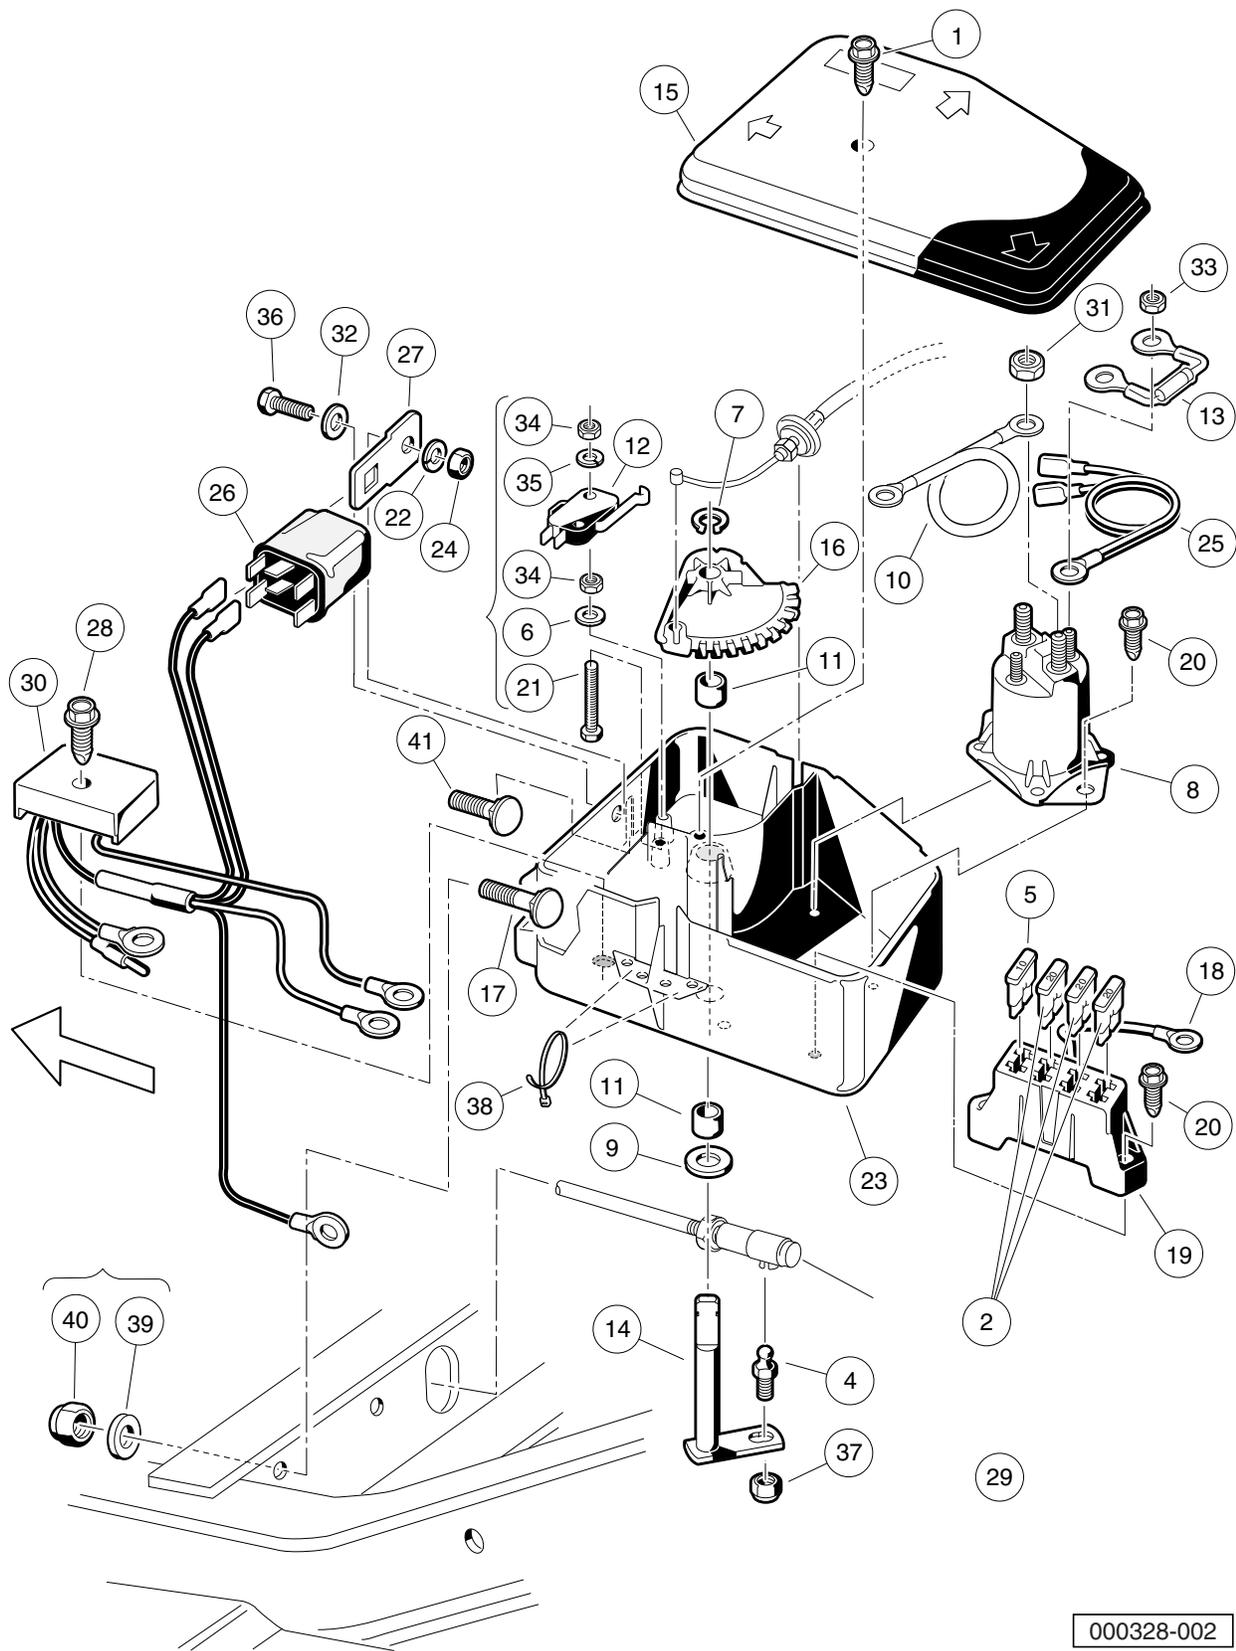


ELECTRICAL COMPONENT BOX – GASOLINE CARRYALL 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	1
2	<u>1016423</u>	Fuse, 20-Amp	3
3	N/A	Electrical Component Box Assembly (includes items 4 through 38)	1
4	<u>1010954</u>	Stud, 1/4-28 X 0.560 Ball	1
5	<u>1012295</u>	Fuse, 10-Amp	1
6	<u>1012431</u>	Washer, #4 Flat	2
7	<u>1013589</u>	Ring, 0.338" Internal Retaining	1
8	<u>1013609</u>	Solenoid, 12-Volt	1
9	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	1
10	<u>1014119</u>	Wire Assembly #6 Red	1
11	<u>1014145</u>	Bushing, Secondary Weight, Split	2
12	<u>1014807</u>	Switch, Limit	1
13	<u>1014948</u>	Diode	1
14	<u>1015345</u>	Bell Crank and Shaft Assembly	1
15	<u>1015372</u>	Cover, Electric Box	1
16	<u>1015373</u>	Cam, Electric Box	1
17	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	1
18	<u>1015737</u>	Wire Assy, #10 Red	1
19	<u>1015741</u>	Fuse Block	1
20	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	4
21	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2
22	<u>1016</u>	Lockwasher, #10 Split	1
23	<u>1016997</u>	Electrical Component Box	1
24	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	1
25	<u>1017006</u>	Wire Assembly Orange #18	1
26	<u>1017239</u>	Relay	1
27	<u>1017243</u>	Mounting Bracket, Relay	1
28	<u>101856102</u>	Screw, 1/4-15 X 1.50 Hi-lo Hex	1
29	<u>101990402</u>	Wire Harness Assy	1
30	N/A	Asm, Voltage Regulator Key Sta	1
31	<u>1242</u>	Nut, 5/16-18 Hex	2
32	<u>183</u>	Washer, #10 Type A Flat	1
33	<u>7893</u>	Nut, #10-32 Hex	2
34	<u>8057</u>	Nut, #4-40 Hex Machine	4
35	<u>8058</u>	Lockwasher, #4 Split	2
36	<u>8450</u>	Screw, #10-24 X 0.50 Hex-Head	1
37	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1
38	<u>8990</u>	Tie Wrap, 8" Nylon	3
39	<u>1241</u>	Washer, 5/16 Type A Flat	2
40	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
41	<u>7818</u>	Bolt, Carriage, 5/16-18 X 1.5	1

6

G

6
G

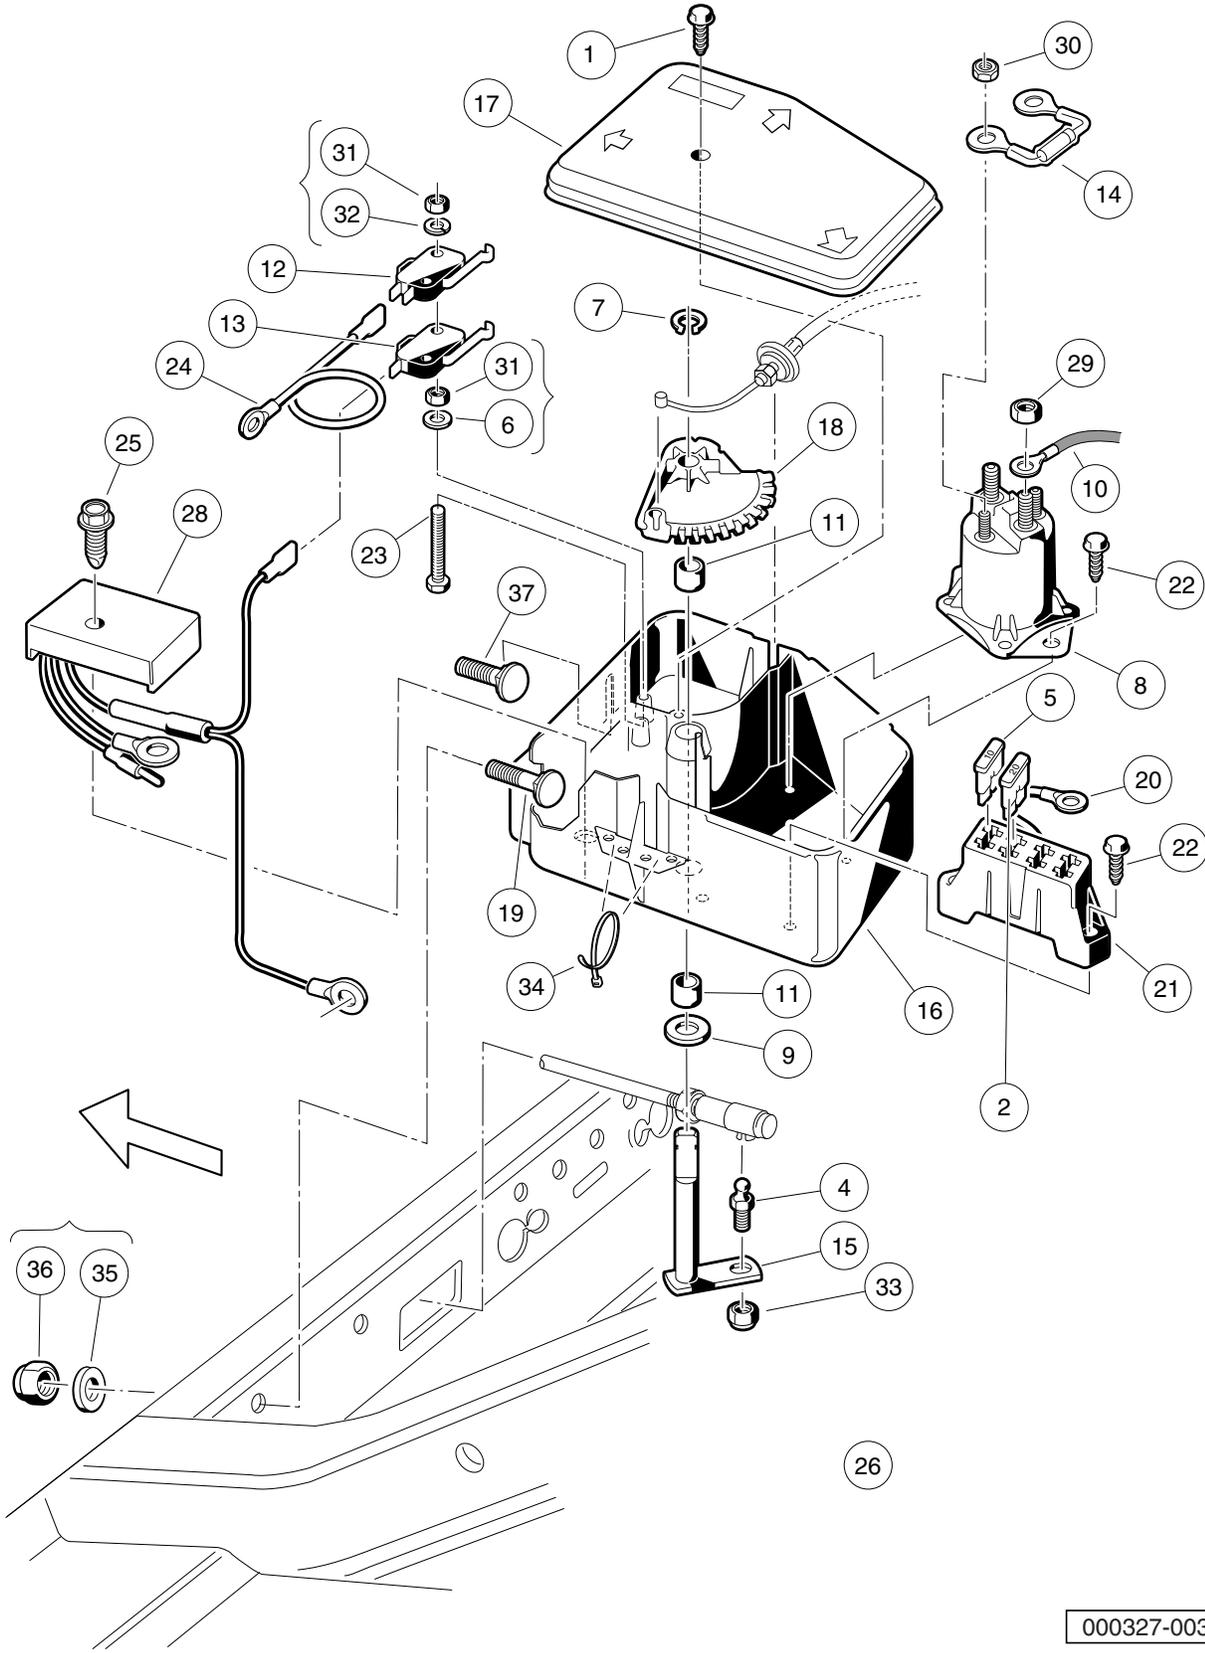

000327-003


ELECTRICAL COMPONENT BOX – GASOLINE TURF 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	1
2	<u>1016423</u>	Fuse, 20-Amp	1
3	N/A	Elec Component Box Asm , Limo (includes items 4 through 34)	1
4	<u>1010954</u>	Stud, 1/4-28 X 0.560 Ball	1
5	<u>1012295</u>	Fuse, 10-Amp	1
6	<u>1012431</u>	Washer, #4 Flat	2
7	<u>1013589</u>	Ring, 0.338" Internal Retaining	1
8	<u>1013609</u>	Solenoid, 12-Volt	1
9	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	1
10	<u>1014119</u>	Wire Assembly #6 Red	1
11	<u>1014145</u>	Bushing, Secondary Weight, Split	2
12	<u>1014807</u>	Switch, Limit	1
13	<u>1014808</u>	Switch, Limit	1
14	<u>1014948</u>	Diode	1
15	<u>1015345</u>	Bell Crank and Shaft Assembly	1
16	<u>1015371</u>	Box, Electrical Component	1
17	<u>1015372</u>	Cover, Electric Box	1
18	<u>1015373</u>	Cam, Electric Box	1
19	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	1
20	<u>1015737</u>	Wire Assy, #10 Red	1
21	<u>1015741</u>	Fuse Block	1
22	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	4
23	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2
24	<u>1016401</u>	Wire Assy, #16 Orange	1
25	<u>101856102</u>	Screw, 1/4-15 X 1.50 Hi-lo Hex	1
26	<u>101990201</u>	Wire Harness Assy, Limo Gas * (includes item 27)	1
27	<u>1015769</u>	Wire Assy, #6 White	1
28	<u>102711201</u>	Voltage Regulator	1
29	<u>1242</u>	Nut, 5/16-18 Hex	2
30	<u>7893</u>	Nut, #10-32 Hex	2
31	<u>8057</u>	Nut, #4-40 Hex Machine	4
32	<u>8058</u>	Lockwasher, #4 Split	2
33	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1
34	<u>8990</u>	Tie Wrap, 8" Nylon	2
35	<u>1241</u>	Washer, 5/16 Type A Flat	2
36	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
37	<u>7818</u>	Bolt, Carriage, 5/16-18 X 1.5	1
		* Note: The harness contains several wires that are not available for order as individual items.	

6

G

6
G

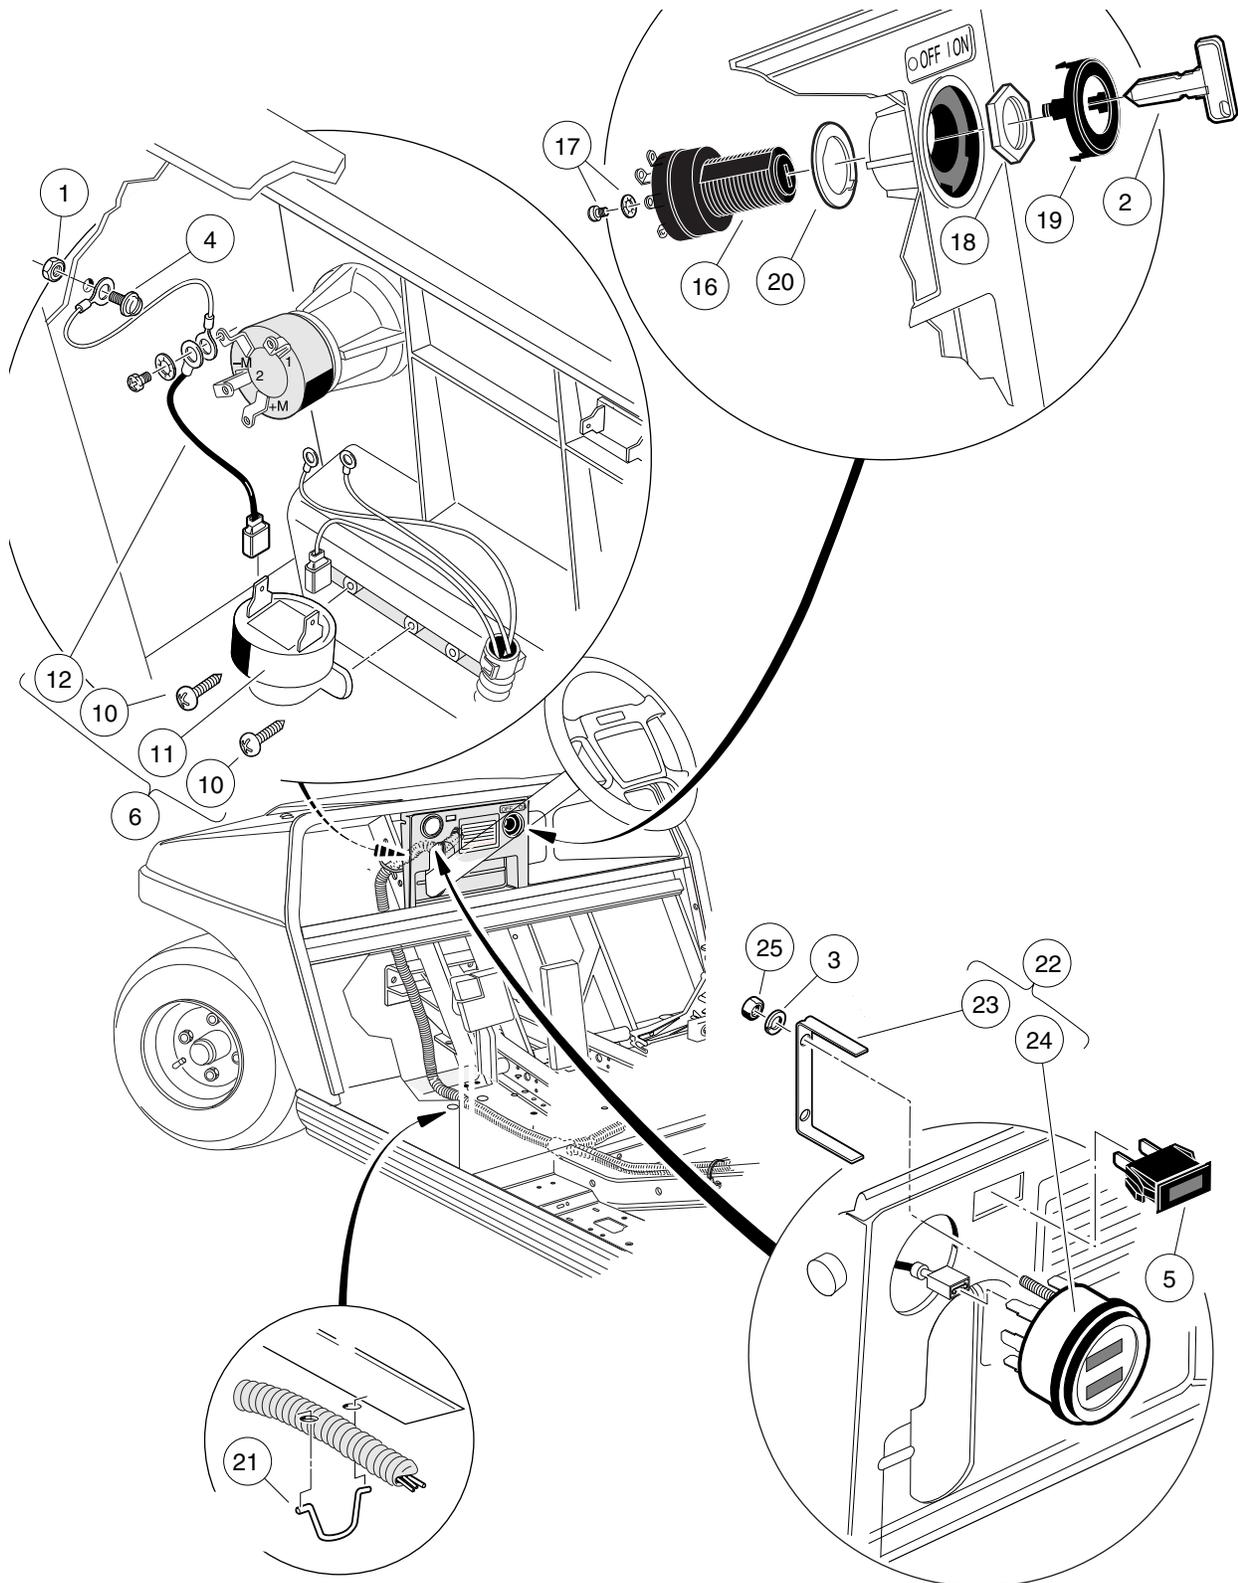

000330-001


CONTROLS AND INDICATORS – TURF/CARRYALL 1, 2, AND 252 GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011229</u>	Locknut, #6-32 Whiz	1
2	<u>1012505</u>	Keys (set of 2)	2
3	<u>1012986</u>	Lockwasher, M4	2
4	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
5	<u>1016630</u>	Light, Oil	1
6	<u>1016859</u>	Kit, Reverse Buzzer (includes items 7 through 15)	1
7	<u>1011229</u>	Locknut, #6-32 Whiz	1
8	1012431	Washer, #4 Flat	2
9	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
10	<u>1016849</u>	Screw, #4-24 X 0.33 Pan-Head Machine	2
11	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
12	1016857	Wire Assembly Black #18	1
13	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2
14	<u>8057</u>	Nut, #4-40 Hex Machine	2
15	<u>8058</u>	Lockwasher, #4 Split	2
16	<u>101826301</u>	Key Switch, 12-Volt, Off/On	1
17	101830601	Screw and Washer Assembly	4
18	<u>101830701</u>	Nut, Key Switch	1
19	<u>101834502</u>	Cap, Black Key Switch	1
20	<u>101851101</u>	Washer, Key Switch	1
21	<u>101900901</u>	Harness Retainer	3
22	<u>101990703</u>	Gauge, Fuel/Hour, with Bracket (includes items 23 and 24)	1
23	102025901	Bracket, Fuel Gauge/Hour Meter	1
24	N/A	Gauge, Fuel/Hour	1
25	<u>101991101</u>	Nut, M4-0.7	2
<p>Note: Items 7 through 9, and 13 through 15 are included in the reverse buzzer kit, but are not used in this application.</p>			

6

G

6
G

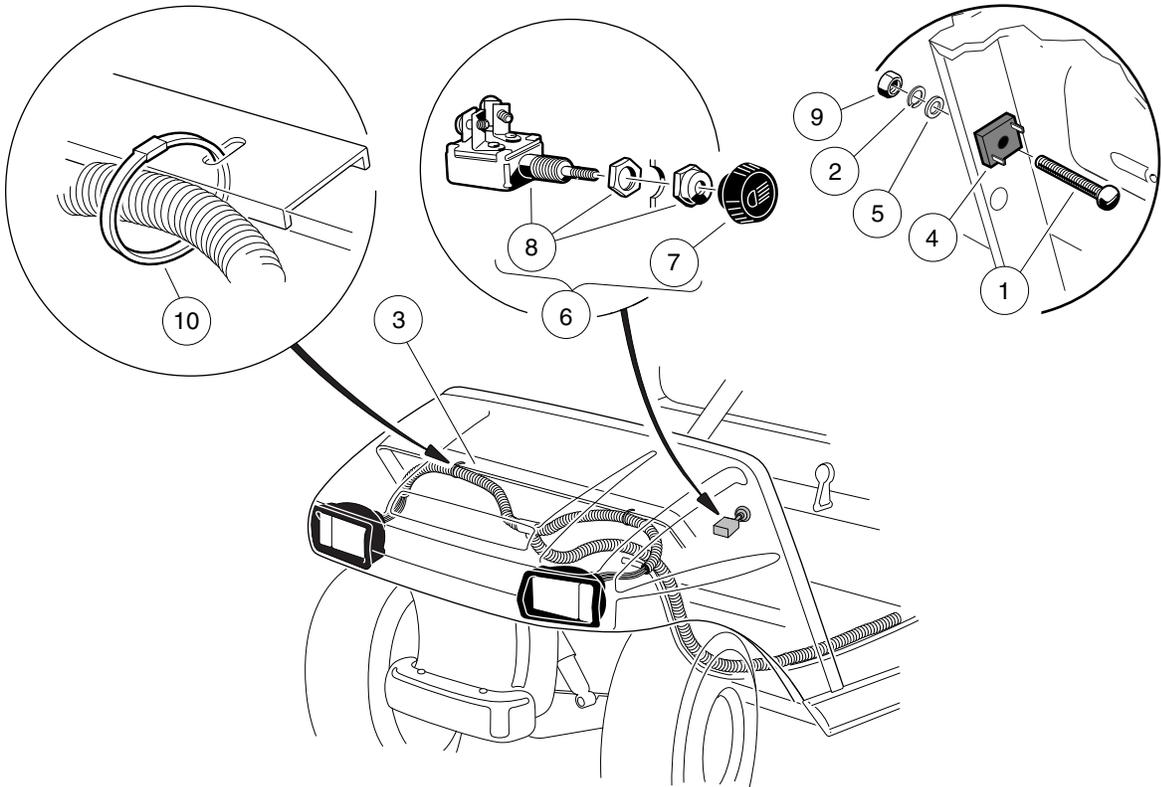


000334-001

HEADLIGHT COMPONENTS – TURF 2, AND TURF/CARRYALL 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010909</u>	Screw, #10-32 X 1.25 Rd Hd Mch	1
2	<u>1016</u>	Lockwasher, #10 Split	1
3	<u>1016858</u>	Wire Harness, Headlight	1
4	<u>1017721</u>	Limiter, Voltage	1
5	<u>183</u>	Washer, #10 Type A Flat	1
6	<u>4034</u>	Light Switch (includes items 7 and 8)	1
7	<u>1013857</u>	Knob, Light Switch	1
8	<u>1013858</u>	Switch, Light Without Knob	1
9	<u>7893</u>	Nut, #10-32 Hex	1
10	<u>8990</u>	Tie Wrap, 8" Nylon	4

6
G

6
G

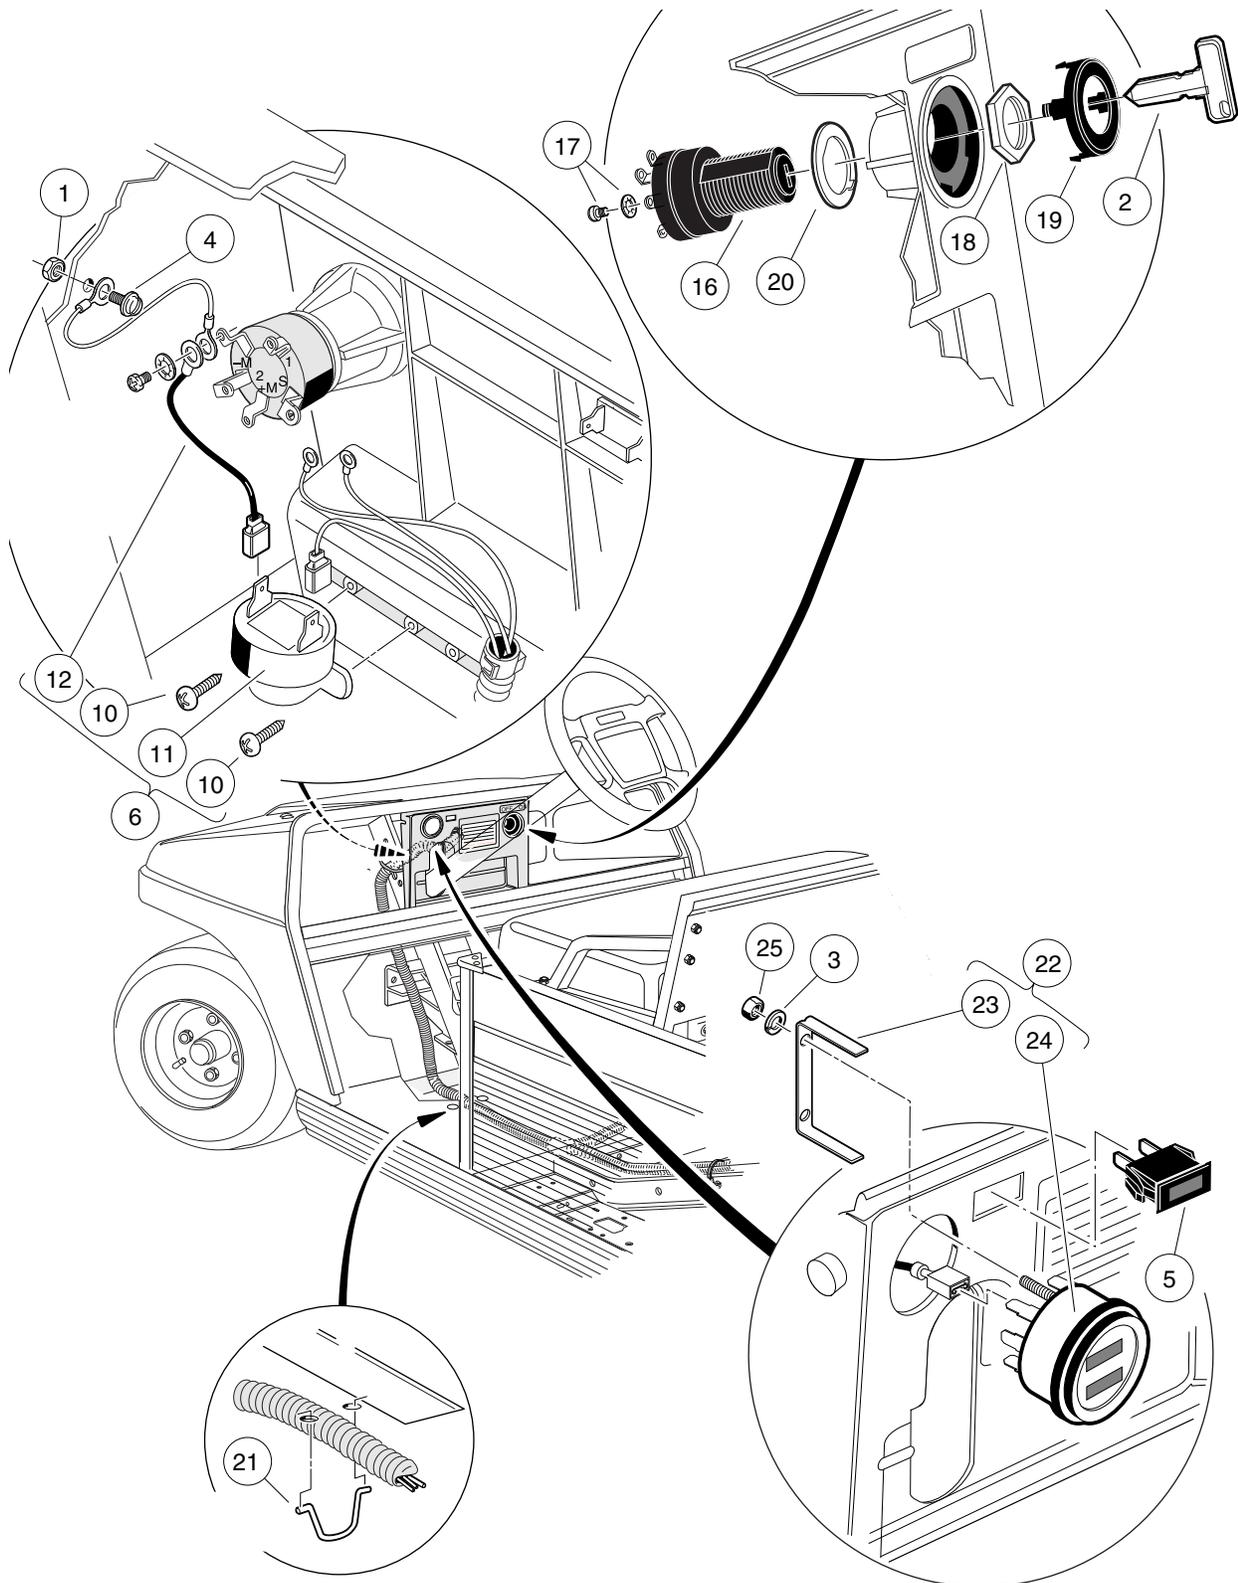

000330-002


CONTROLS AND INDICATORS – GASOLINE CARRYALL 2 PLUS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011229</u>	Locknut, #6-32 Whiz	1
2	<u>1012505</u>	Keys (set of 2)	2
3	<u>1012986</u>	Lockwasher, M4	2
4	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
5	<u>1016630</u>	Light, Oil	1
6	<u>1016859</u>	Kit, Reverse Buzzer (includes items 7 through 15)	1
7	<u>1011229</u>	Locknut, #6-32 Whiz	1
8	1012431	Washer, #4 Flat	2
9	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
10	<u>1016849</u>	Screw, #4-24 X 0.33 Pan-Head Machine	2
11	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
12	1016857	Wire Assembly Black #18	1
13	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2
14	<u>8057</u>	Nut, #4-40 Hex Machine	2
15	<u>8058</u>	Lockwasher, #4 Split	2
16	101826401	Key Switch, 12-Volt, Off/On/Start	1
17	101830601	Screw and Washer Assembly	5
18	<u>101830701</u>	Nut, Key Switch	1
19	<u>101834502</u>	Cap, Black Key Switch	1
20	<u>101851101</u>	Washer, Key Switch	1
21	<u>101900901</u>	Harness Retainer	3
22	<u>101990703</u>	Gauge, Fuel/Hour, with Bracket (includes items 23 and 24)	1
23	102025901	Bracket, Fuel Gauge/Hour Meter	1
24	N/A	Gauge, Fuel/Hour	1
25	<u>101991101</u>	Nut, M4-0.7	2
<p>Note: Items 7 through 9, and 13 through 15 are included in the reverse buzzer kit, but are not used in this application.</p>			

6

G

6
G

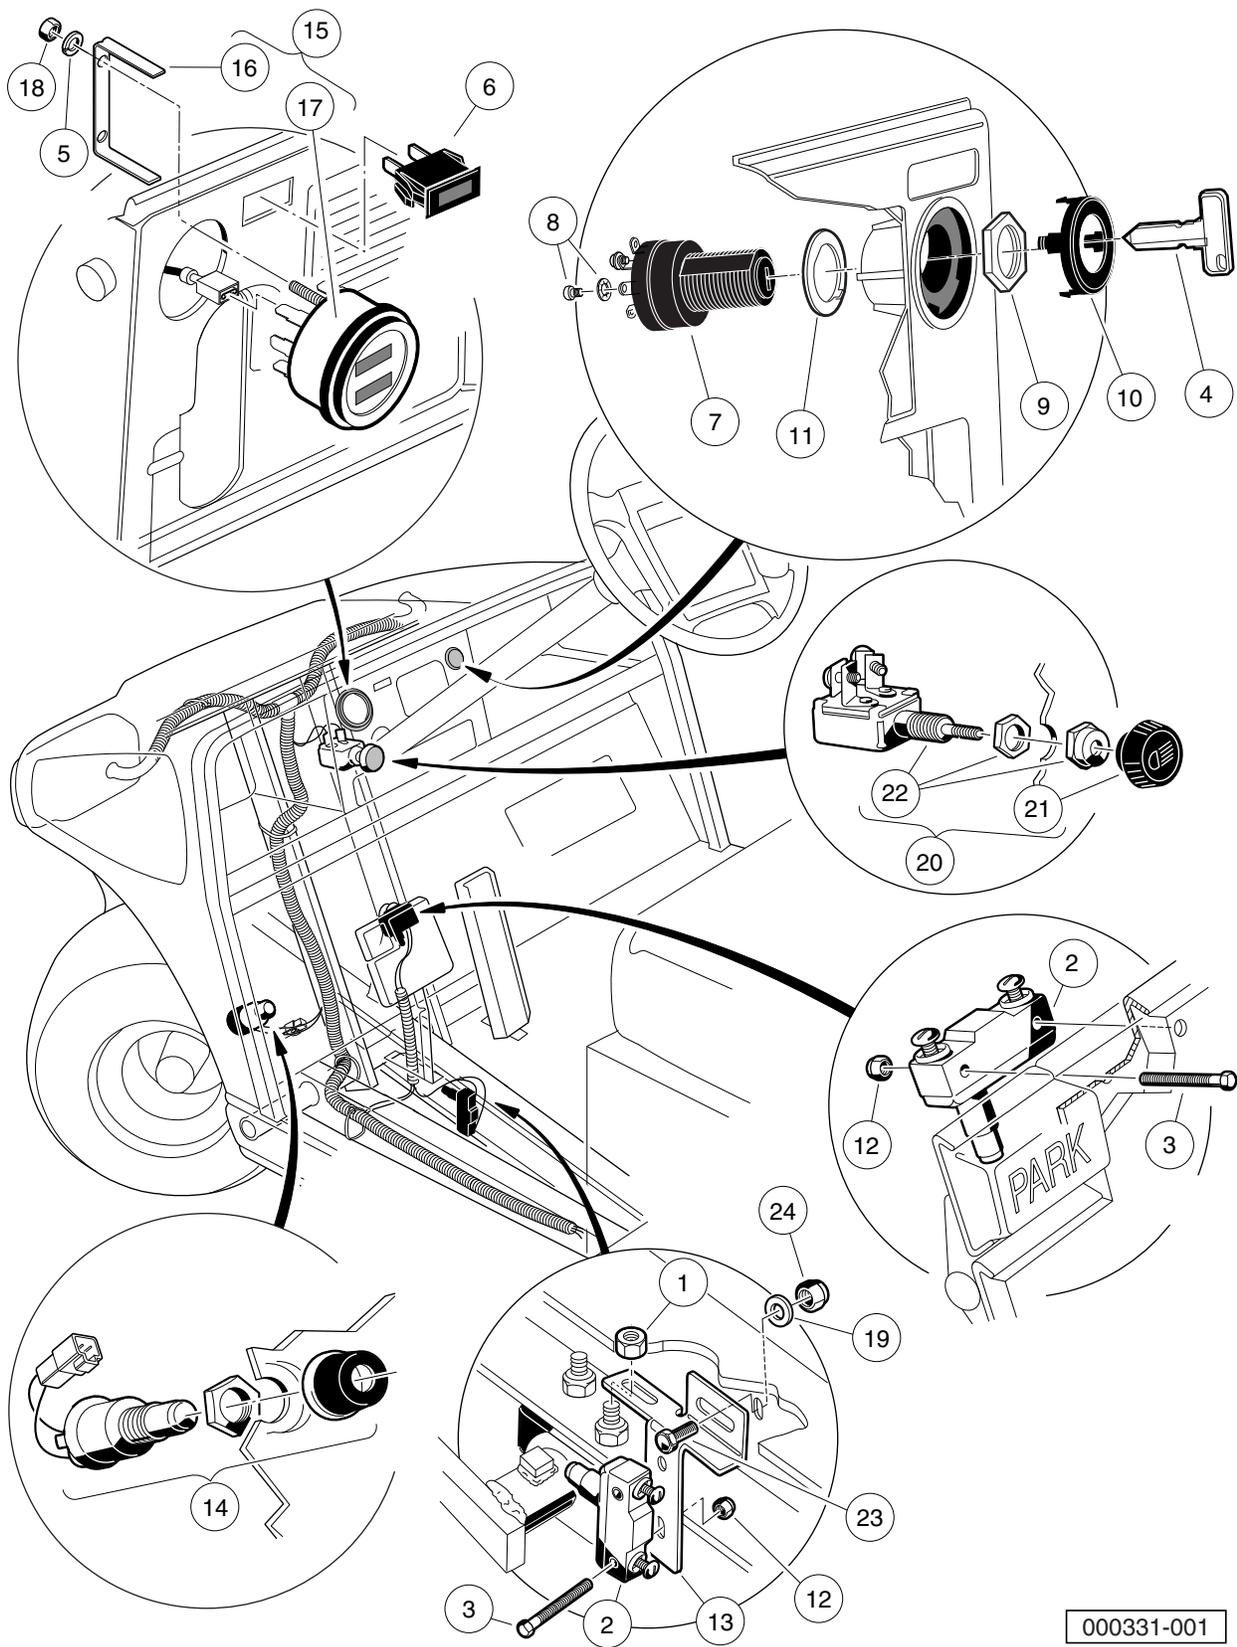

000331-001


CONTROLS AND INDICATORS – GASOLINE CARRYALL 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011280</u>	Locknut, 5/16-18	1
2	<u>1011439</u>	Switch, Limit	2
3	<u>1011557</u>	Screw, #6-32 X 1.00 Hex-Head Machine	4
4	<u>1012505</u>	Keys (set of 2)	1
5	<u>1012986</u>	Lockwasher, M4	2
6	<u>1016630</u>	Light, Oil	1
7	101826401	Key Switch, 12-Volt, Off/On/Start	1
8	101830601	Screw and Washer Assembly	5
9	<u>101830701</u>	Nut, Key Switch	1
10	<u>101834502</u>	Cap, Black Key Switch	1
11	<u>101851101</u>	Washer, Key Switch	1
12	<u>101932201</u>	Locknut, #6-32 Nylon	4
13	<u>101957101</u>	Bracket, Brake Light Switch	1
14	<u>101969701</u>	Horn Button and Wire Assembly	1
15	<u>101990703</u>	Gauge, Fuel/Hour, with Bracket (includes items 16 and 17)	1
16	102025901	Bracket, Fuel Gauge/Hour Meter	1
17	N/A	Gauge, Fuel/Hour	1
18	<u>101991101</u>	Nut, M4-0.7	2
19	<u>1241</u>	Washer, 5/16 Type A Flat	1
20	<u>4034</u>	Light Switch (includes items 21 and 22)	1
21	<u>1013857</u>	Knob, Light Switch	1
22	<u>1013858</u>	Switch, Light Without Knob	1
23	<u>7173</u>	Screw, 5/16-18 X 0.75 Hex-Head Cap	1
24	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1

6

G

6
G

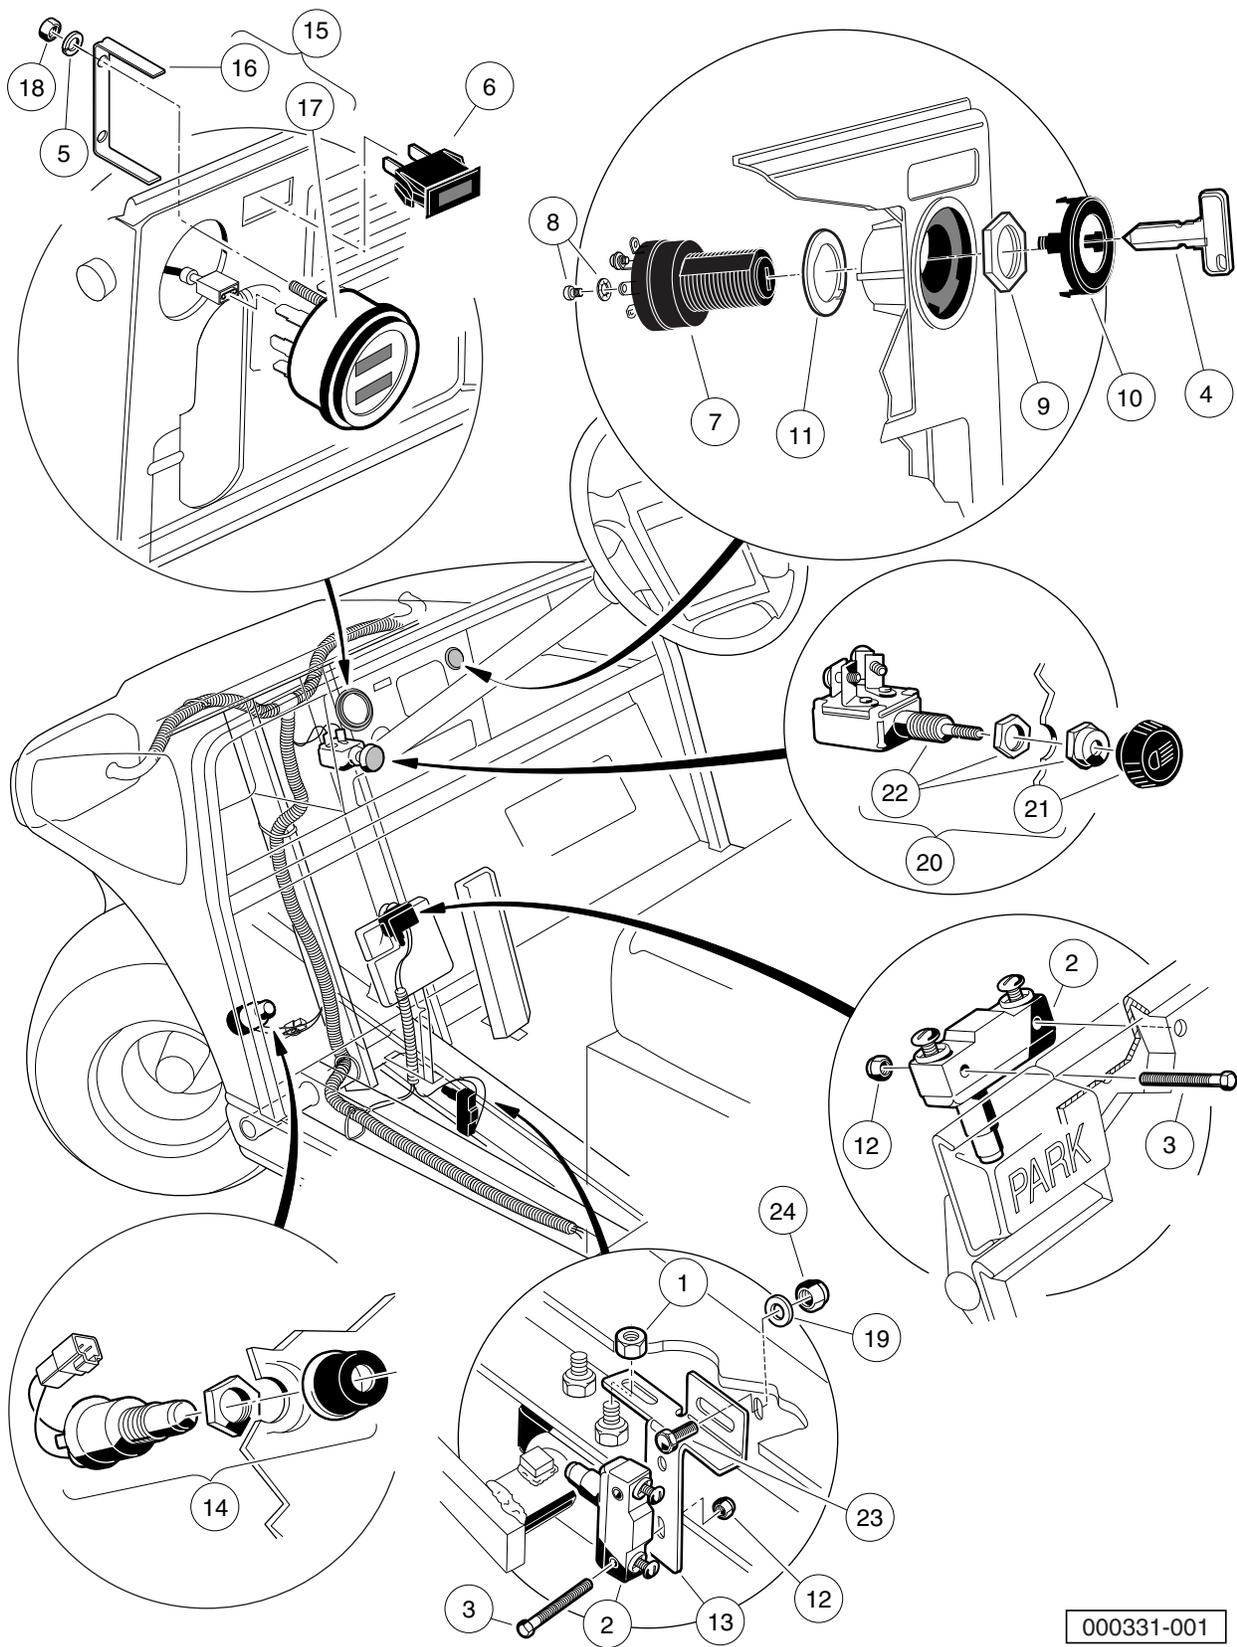


000331-001

CONTROLS AND INDICATORS – GASOLINE TURF 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011280</u>	Locknut, 5/16-18	1
2	<u>1011439</u>	Switch, Limit	2
3	<u>1011557</u>	Screw, #6-32 X 1.00 Hex-Head Machine	4
4	<u>1012505</u>	Keys (set of 2)	1
5	<u>1012986</u>	Lockwasher, M4	2
6	<u>1016630</u>	Light, Oil	1
7	<u>101826301</u>	Key Switch, 12-Volt, Off/On	1
8	101830601	Screw and Washer Assembly	5
9	<u>101830701</u>	Nut, Key Switch	1
10	<u>101834502</u>	Cap, Black Key Switch	1
11	<u>101851101</u>	Washer, Key Switch	1
12	<u>101932201</u>	Locknut, #6-32 Nylon	4
13	<u>101957101</u>	Bracket, Brake Light Switch	1
14	<u>101969701</u>	Horn Button and Wire Assembly	1
15	<u>101990703</u>	Gauge, Fuel/Hour, with Bracket (includes items 16 and 17)	1
16	102025901	Bracket, Fuel Gauge/Hour Meter	1
17	N/A	Gauge, Fuel/Hour	1
18	<u>101991101</u>	Nut, M4-0.7	2
19	<u>1241</u>	Washer, 5/16 Type A Flat	1
20	<u>4034</u>	Light Switch (includes items 21 and 22)	1
21	<u>1013857</u>	Knob, Light Switch	1
22	<u>1013858</u>	Switch, Light Without Knob	1
23	<u>7173</u>	Screw, 5/16-18 X 0.75 Hex-Head Cap	1
24	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1

6
G

6
G

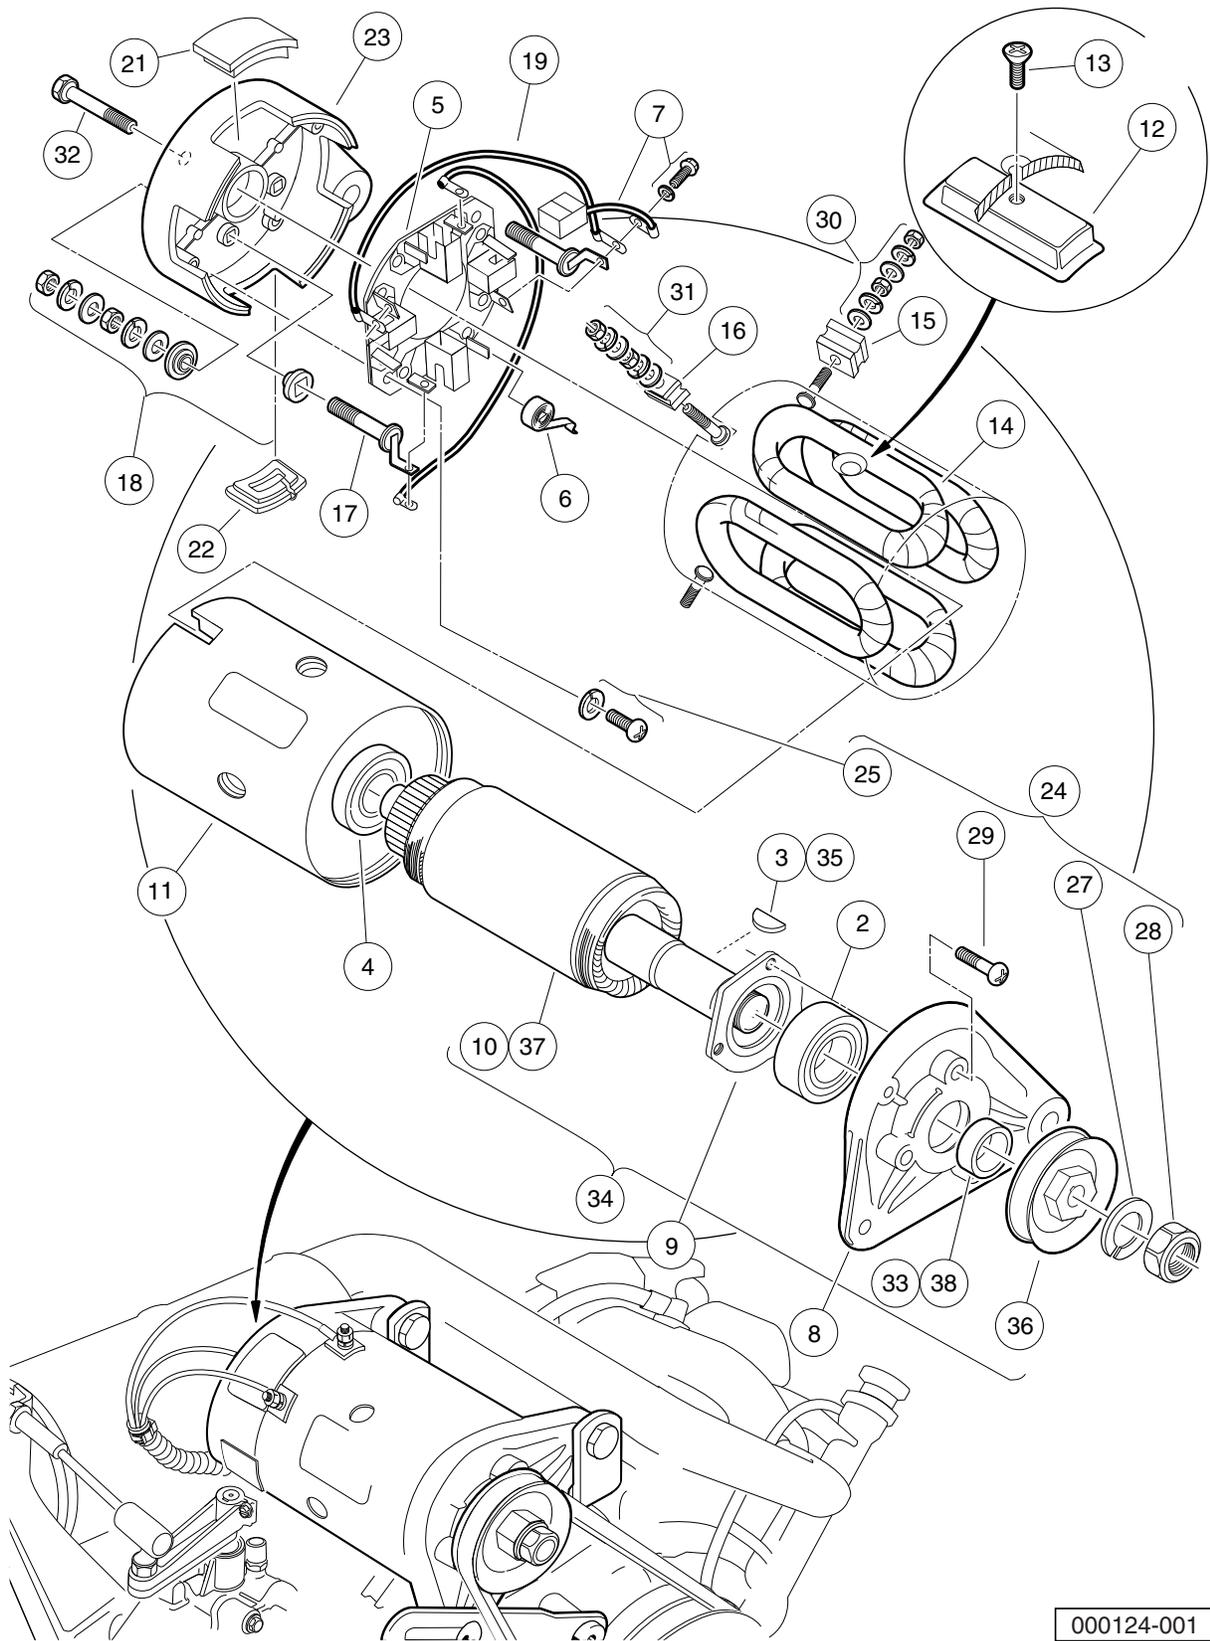


000124-001

STARTER/GENERATOR ASSEMBLY MODEL G425419 – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101833701</u>	Starter/Generator (cw) (includes items 2 through 33)	1
2	<u>1013001</u>	Bearing, Output Shaft Ball	1
3	<u>1013003</u>	Key, Starter/Generator	1
4	<u>1013005</u>	Bearing, Ball	1
5	<u>101301102</u>	Brush Holder Assembly (cw) (includes item 6)	1
6	<u>101878101</u>	Brush Spring Set	4
7	<u>101869302</u>	Brush and Screw Set (cw)	1
8	<u>101874901</u>	Front Bracket	1
9	<u>101875001</u>	Retainer	1
10	<u>101875101</u>	Armature	1
11	<u>101875201</u>	Field Coil Housing	1
12	<u>101875301</u>	Pole Set	1
13	<u>101875401</u>	Screw Set	1
14	<u>101875501</u>	Field Stator Coil Assembly	1
15	<u>101875601</u>	F Insulator Set	2
16	<u>101875701</u>	DF Insulator	1
17	<u>101875802</u>	A Connector (cw)	1
18	<u>101876001</u>	Screw and Mold Assembly	2
19	<u>101876202</u>	Brush Connector Assembly (cw)	2
20	<u>101876301</u>	Cover Set (includes items 21 and 22)	1
21	<u>1012991</u>	Brush Inspection Port Cover	3
22	<u>1017653</u>	Brush Port Cover w/Drain	1
23	<u>101876402</u>	Rear Bracket (cw)	1
24	<u>101876501</u>	Nut and Screw Set (includes items 25 through 29)	1
25	<u>101896501</u>	Brush Holder Asm Screw	2
26	N/A	Washer, M5 Flat	1
27	N/A	Washer, M14 Lock	1
28	N/A	Nut, Hex, M14 x 2	1
29	N/A	Screw, M5 x 0.8 x 18mm	3
30	<u>101877601</u>	Nut and Washer Set	2
31	<u>101877701</u>	Nut and Washer Set	1
32	<u>101879001</u>	Through Bolt Set	2
33	<u>101939901</u>	Spacer	1
34	<u>101875102</u>	Armature Asm Conversion Kit (includes items 35 through 38)	1
35	<u>1013003</u>	Key, Starter/Generator	1
36	<u>1014289</u>	Pulley, Starter/Generator	1
37	<u>101875101</u>	Armature	1
38	<u>101939901</u>	Spacer	1
Note: Item 36 will ONLY fit Model G425419 Starter/Generator.			

6
G

6
G

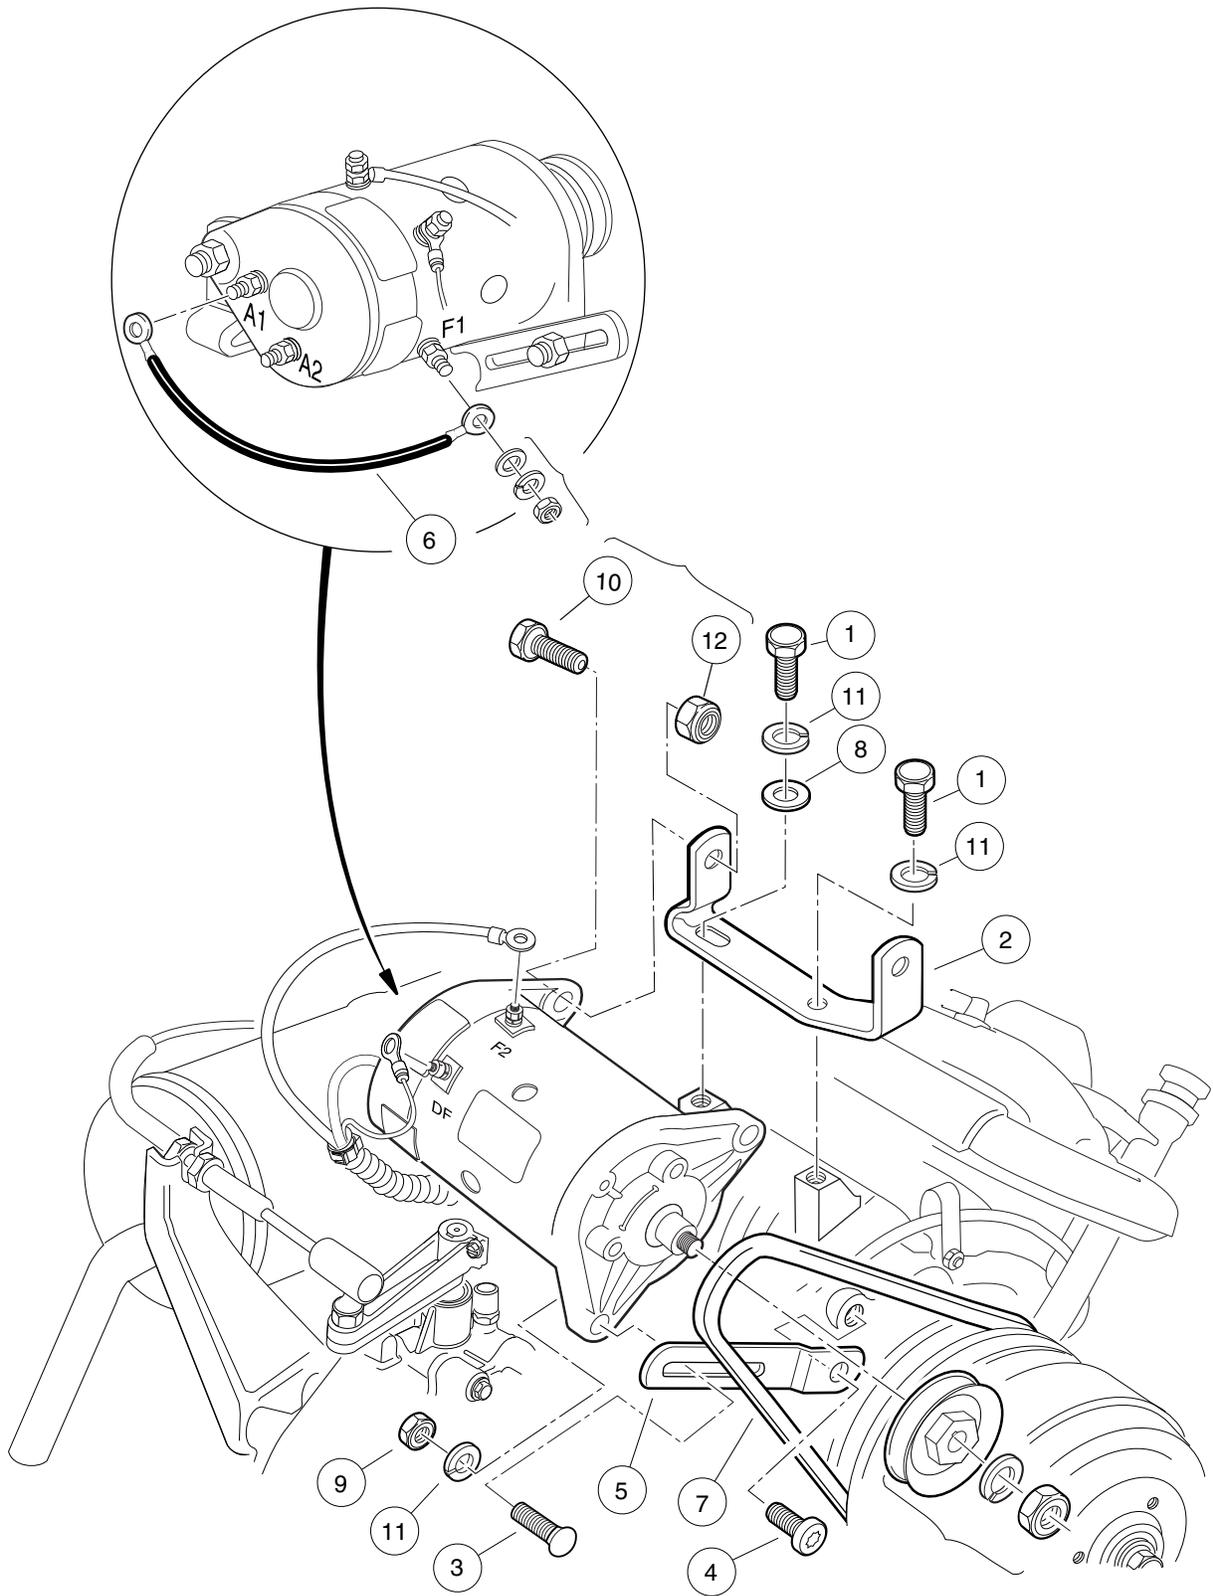


000239-001

STARTER/GENERATOR MOUNTING – GASOLINE TURF/ CARRYALL 2, 252, 6, AND CARRYALL 2 PLUS VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	2
2	<u>101524002</u>	Bracket, Starter/Generator Mounting	1
3	<u>1015932</u>	Bolt, Carriage, 5/16-18	1
4	<u>1016074</u>	Screw, M8-1.25 X 18mm Torx	1
5	<u>1016883</u>	Bracket, Starter/Generator Adjustment	1
6	<u>101837301</u>	Wire Assy, #6 Green	1
7	<u>101916701</u>	V-Belt	1
8	<u>1241</u>	Washer, 5/16 Type A Flat	1
9	<u>1242</u>	Nut, 5/16-18 Hex	1
10	705	Screw, Cap-hex Hd 3/8-16x1.25	2
11	<u>7174</u>	Lockwasher, 5/16 Split	3
12	<u>8754</u>	Locknut, 3/8-16 Hex	2

6
G

6
G

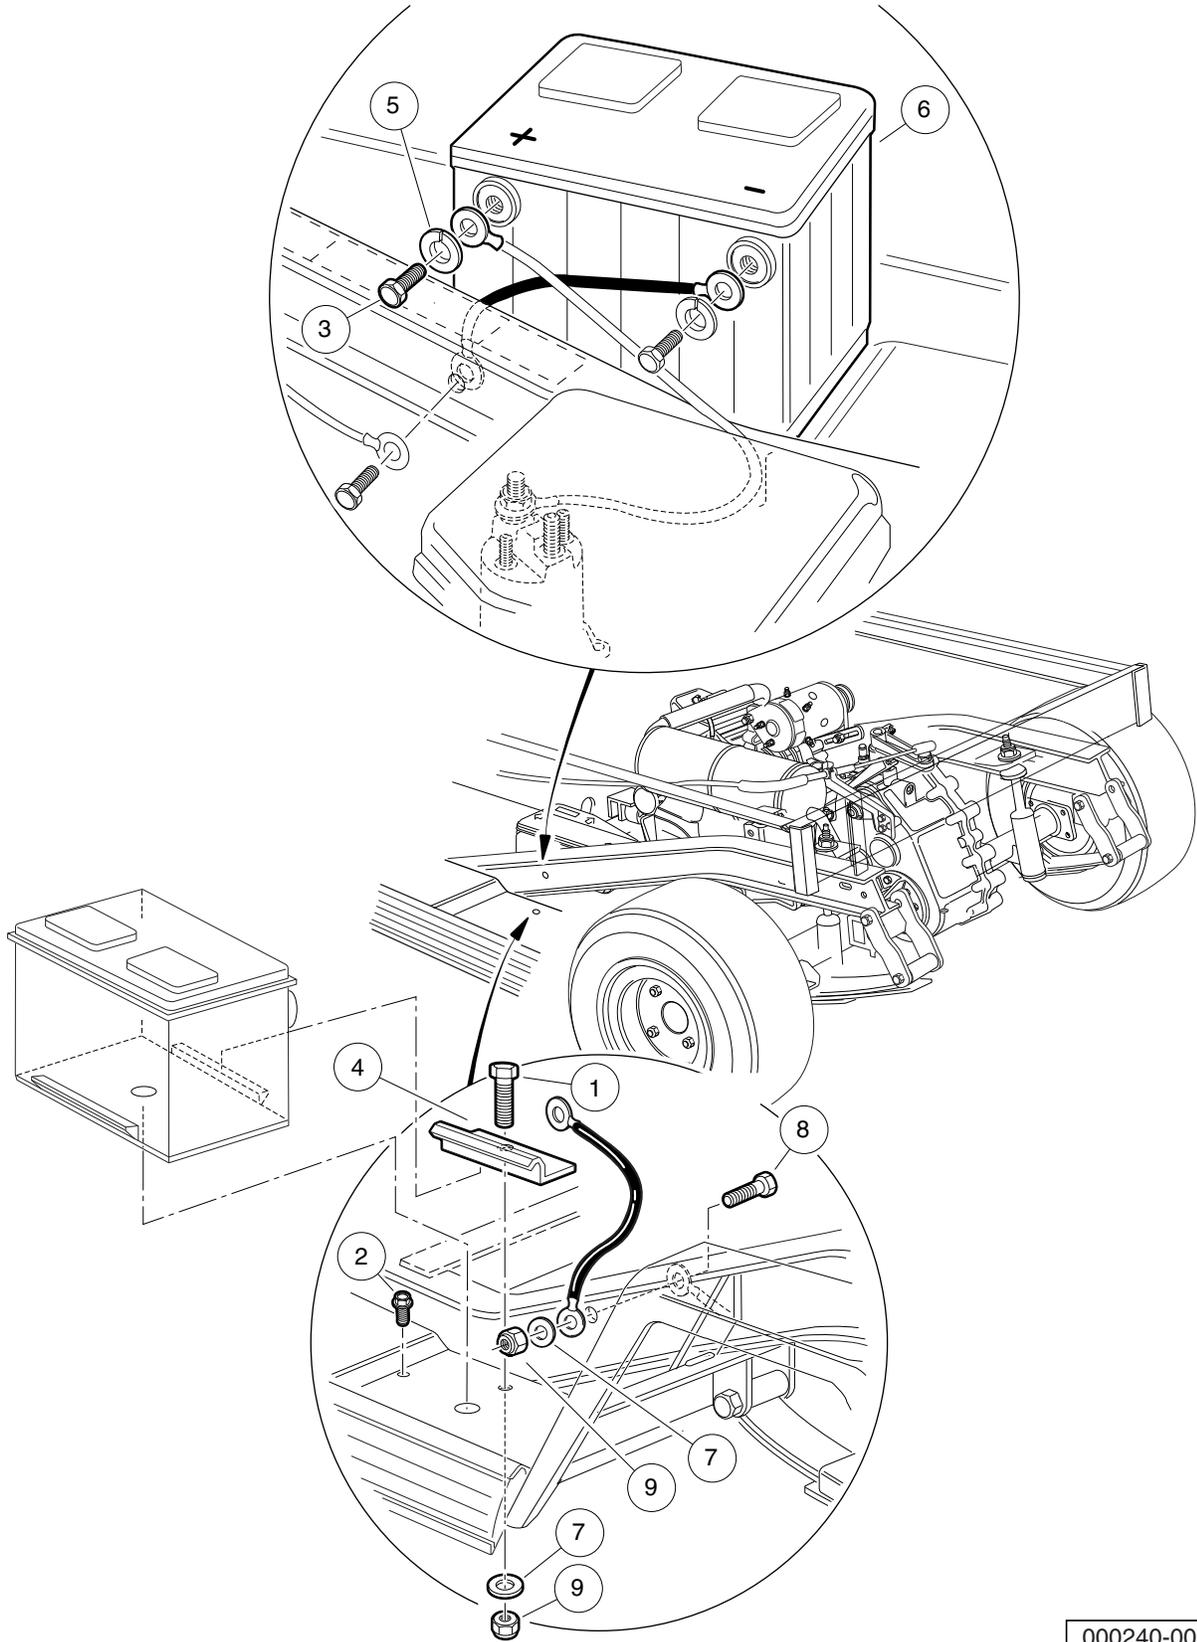


000240-001

BATTERY – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1
2	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	1
3	<u>1014375</u>	Screw, 3/8-16 X 0.50 Stainless Steel Hex-Head	2
4	<u>101898001</u>	Clamp, Battery	1
5	<u>102355301</u>	Lockwasher, #10 Split Ss	2
6	N/A	Battery, Start, 12v	1
7	<u>1241</u>	Washer, 5/16 Type A Flat	2
8	<u>7173</u>	Screw, 5/16-18 X 0.75 Hex-Head Cap	1
9	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2

6
G

6
G

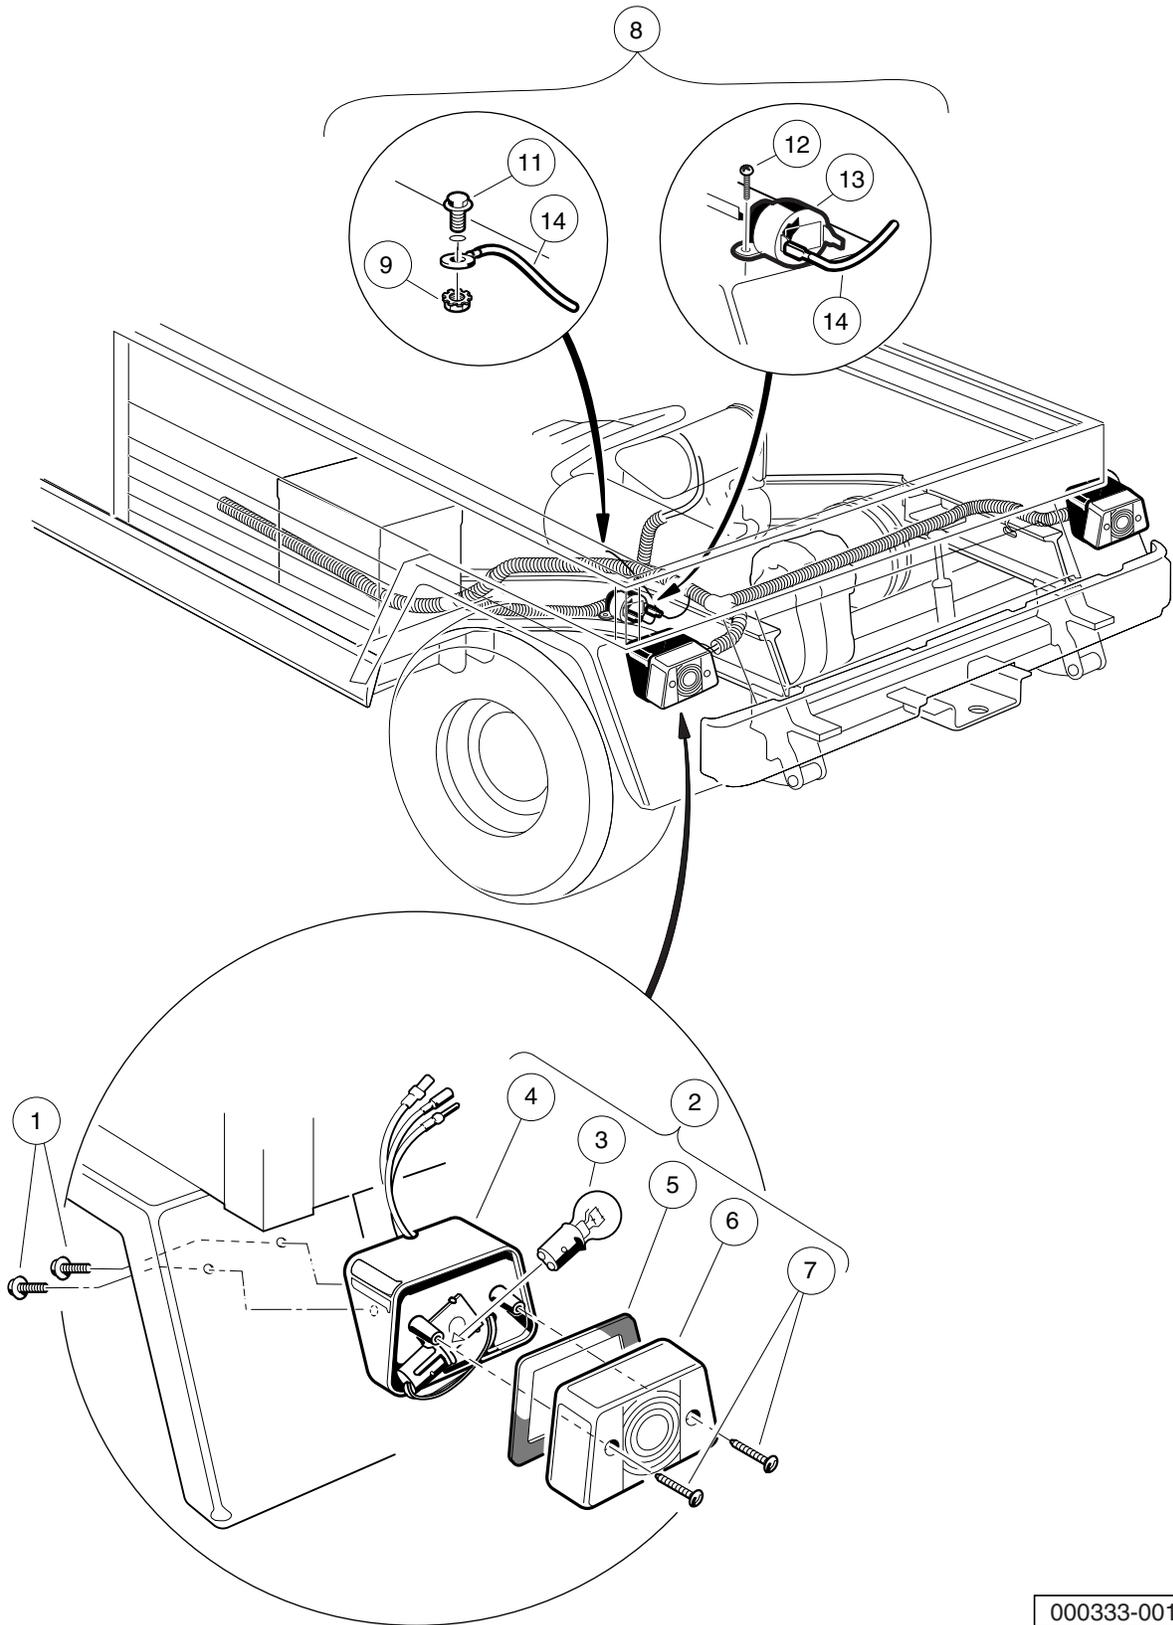

000333-001

ELECTRICAL COMPONENTS, REAR BODY – GASOLINE TURF/CARRYALL 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	4
2	<u>1016717</u>	Light Assembly, Stop/Taillight (includes items 3 through 7)	2
3	<u>1011582</u>	Taillight Bulb	1
4	N/A	Housing, Taillight	1
5	N/A	Gasket, Taillight	1
6	N/A	Lens, Taillight	1
7	N/A	Screw, Taillight Lens	2
8	<u>1016859</u>	Kit, Reverse Buzzer (includes items 9 through 17)	1
9	<u>1011229</u>	Locknut, #6-32 Whiz	1
10	1012431	Washer, #4 Flat	2
11	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
12	<u>1016849</u>	Screw, #4-24 X 0.33 Pan-Head Machine	2
13	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
14	1016857	Wire Assembly Black #18	1
15	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2
16	<u>8057</u>	Nut, #4-40 Hex Machine	2
17	<u>8058</u>	Lockwasher, #4 Split	2
		Note: Items 10, and 15 through 17 are included in the reverse buzzer kit, but are not used in this application.	

6
G

6



G

FE350 ENGINE WITH ACR (KEY-START VEHICLES)

7

G

7
G

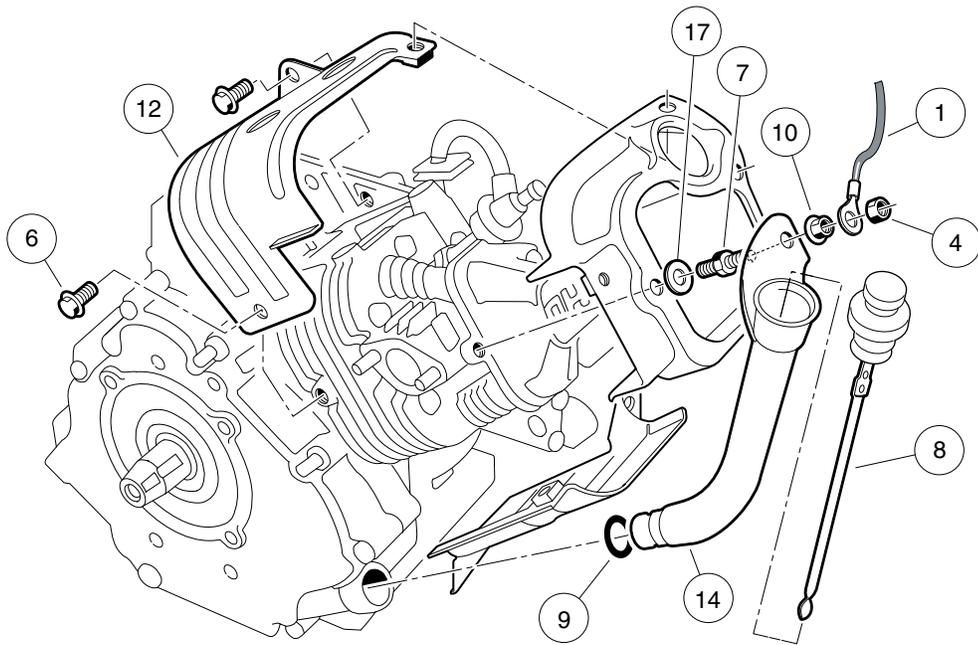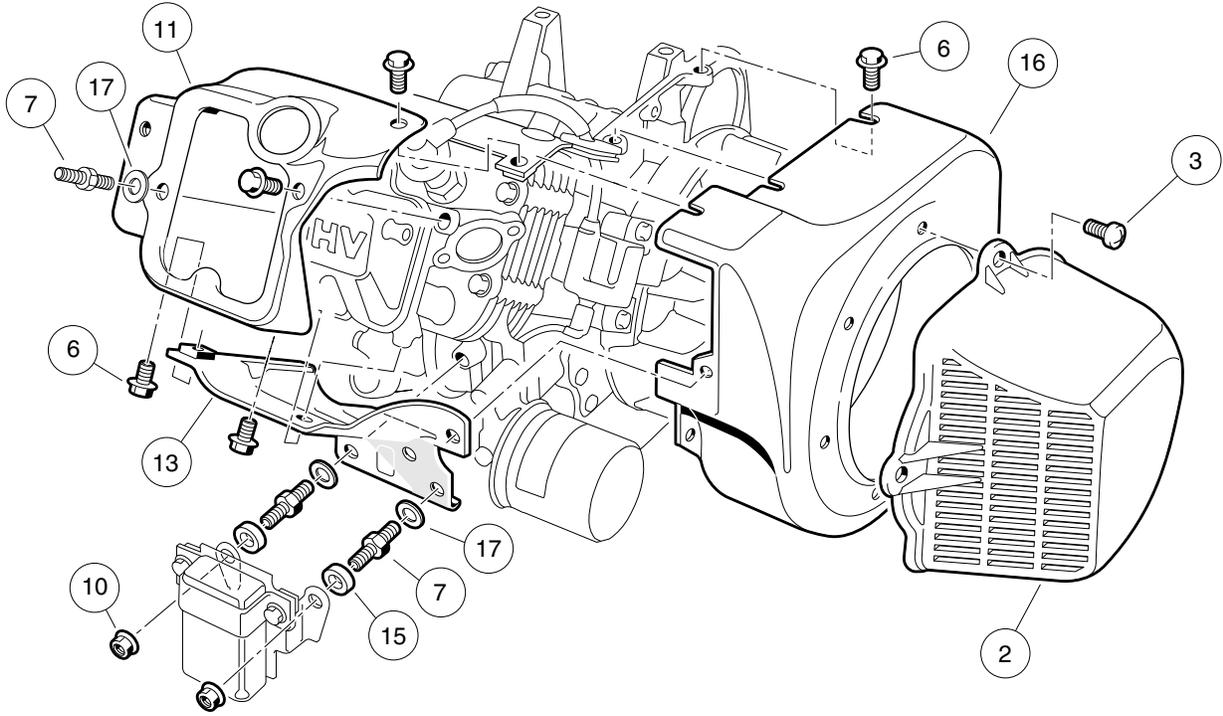


000201-001

FE350 ENGINE WITH ACR (AUTOMATIC COMPRESSION RELEASE) – SHROUDS AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015332</u>	Wire Assembly, #10, Uninsulated	1
2	<u>1015649</u>	Shroud, Fan	1
3	<u>1015969</u>	Screw, M6-1.00 X 10mm Pan Hd	4
4	<u>101887601</u>	Locknut, M6-1.00 Nylon Insert	1
5	<u>101953801</u>	Engine, FE350 (cw) with ACR * (includes items 6 through 17)	1
6	1016456	Bolt, Flange Head, M6 x 1 x 12 mm	14
7	<u>1016507</u>	Bolt, Two-Ended	3
8	1016531	Dipstick	1
9	<u>1016539</u>	O-Ring	1
10	1016547	Nut, M6 Flange	3
11	<u>1017474</u>	Shroud, Engine	1
12	<u>1017475</u>	Shroud, Engine	1
13	<u>1017476</u>	Shroud, Engine	1
14	<u>1017486</u>	Tube, Oil Filler	1
15	<u>1017500</u>	Spacer 6.50 X 12 X 5.5	2
16	<u>101916101</u>	Housing, FE350 Fan	1
17	N/A	Washer, 6mm Flat	3
* Note: FE350 engine component listings span several pages.			

7
G

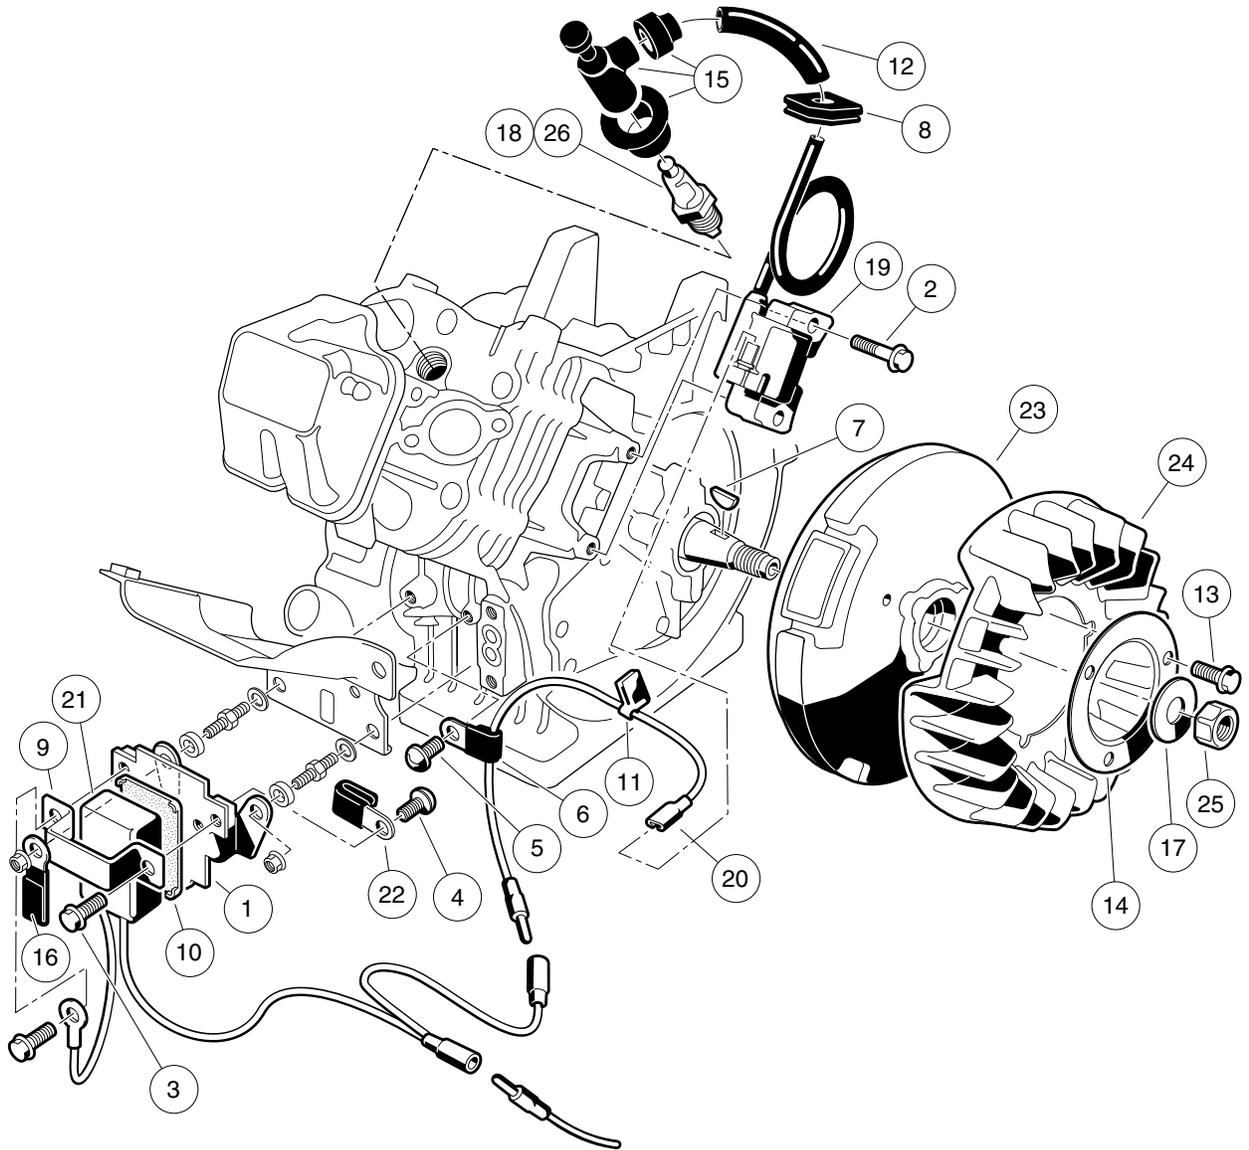


000202-001

AS11 FE350 ENGINE – IGNITION COMPONENTS AND FLYWHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016445	Bracket, RPM Limiter	1
2	<u>1016455</u>	Bolt, Flange Head	2
3	1016456	Bolt, Flange Head, M6 x 1 x 12 mm	2
4	<u>1016497</u>	Screw, Pan WP Cross	1
5	<u>1016544</u>	Screw	1
6	<u>1016561</u>	Clamp	1
7	<u>1016562</u>	Key	1
8	<u>1016578</u>	Ignition, Grommet	1
9	<u>1016579</u>	Band, RPM Limiter Mount	1
10	1016586	Damper, RPM Limiter	1
11	<u>1016587</u>	Clamp	1
12	<u>1016588</u>	Tube, 7mm X 10mm X 70mm	1
13	<u>1017448</u>	Bolt, Flanged	3
14	<u>1017455</u>	Plate, Flywheel Fan	1
15	<u>1017463</u>	Cap Asm Plug	1
16	<u>1017468</u>	Clamp	1
17	<u>1017490</u>	Washer, Flat	1
18	<u>101881101</u>	Spark Plug, OHV (Autolite)	1
19	<u>101909201</u>	Coil, Ignition	1
20	<u>101909301</u>	Lead Wire Assy	1
21	101909401	Limiter, RPM	1
22	101909501	Clamp, Steel	1
23	<u>101916201</u>	Flywheel	1
24	<u>101916301</u>	Fan (cw)	1
25	N/A	Nut, Hex, 18 mm Fine	1
26	<u>AM10724</u>	Spark Plug, OHV (NGK)	1

7
G

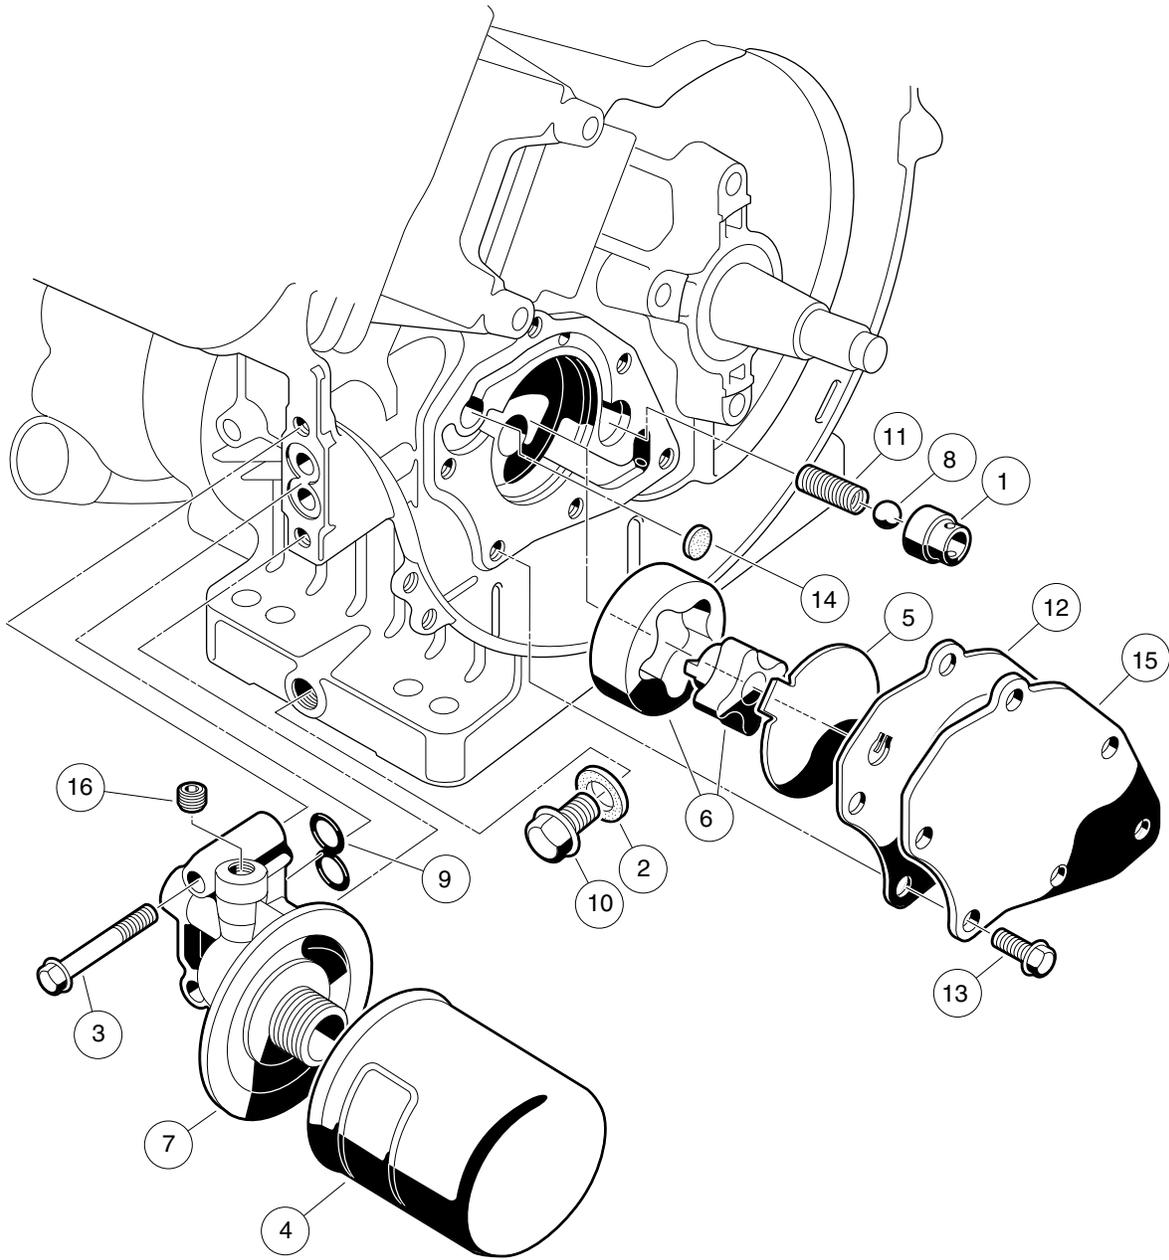


000203-001

FE350 ENGINE – OIL CIRCULATION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016429	Seat, Value Oil Press Relief	1
2	<u>1016432</u>	Gasket, Drain Plug	1
3	<u>1016457</u>	Bolt, Flange Head	2
4	<u>1016467</u>	Filter, Oil	1
5	<u>1016473</u>	Plate, Oil Pump	1
6	<u>101648203</u>	Oil Pump And Rotor	1
7	<u>1016502</u>	Bracket, Oil Filter Mount	1
8	<u>1016537</u>	Ball, Steel, Press, Relief	1
9	<u>1016570</u>	O-Ring	1
10	1016576	Plug, Drain	1
11	<u>1016581</u>	Spring	1
12	<u>1017442</u>	Gasket	1
13	<u>1017456</u>	Bolt, Flanged	6
14	<u>1017458</u>	Filter	1
15	<u>1017460</u>	Cover, Pump	1
16	<u>1017507</u>	Plug	2

7

G

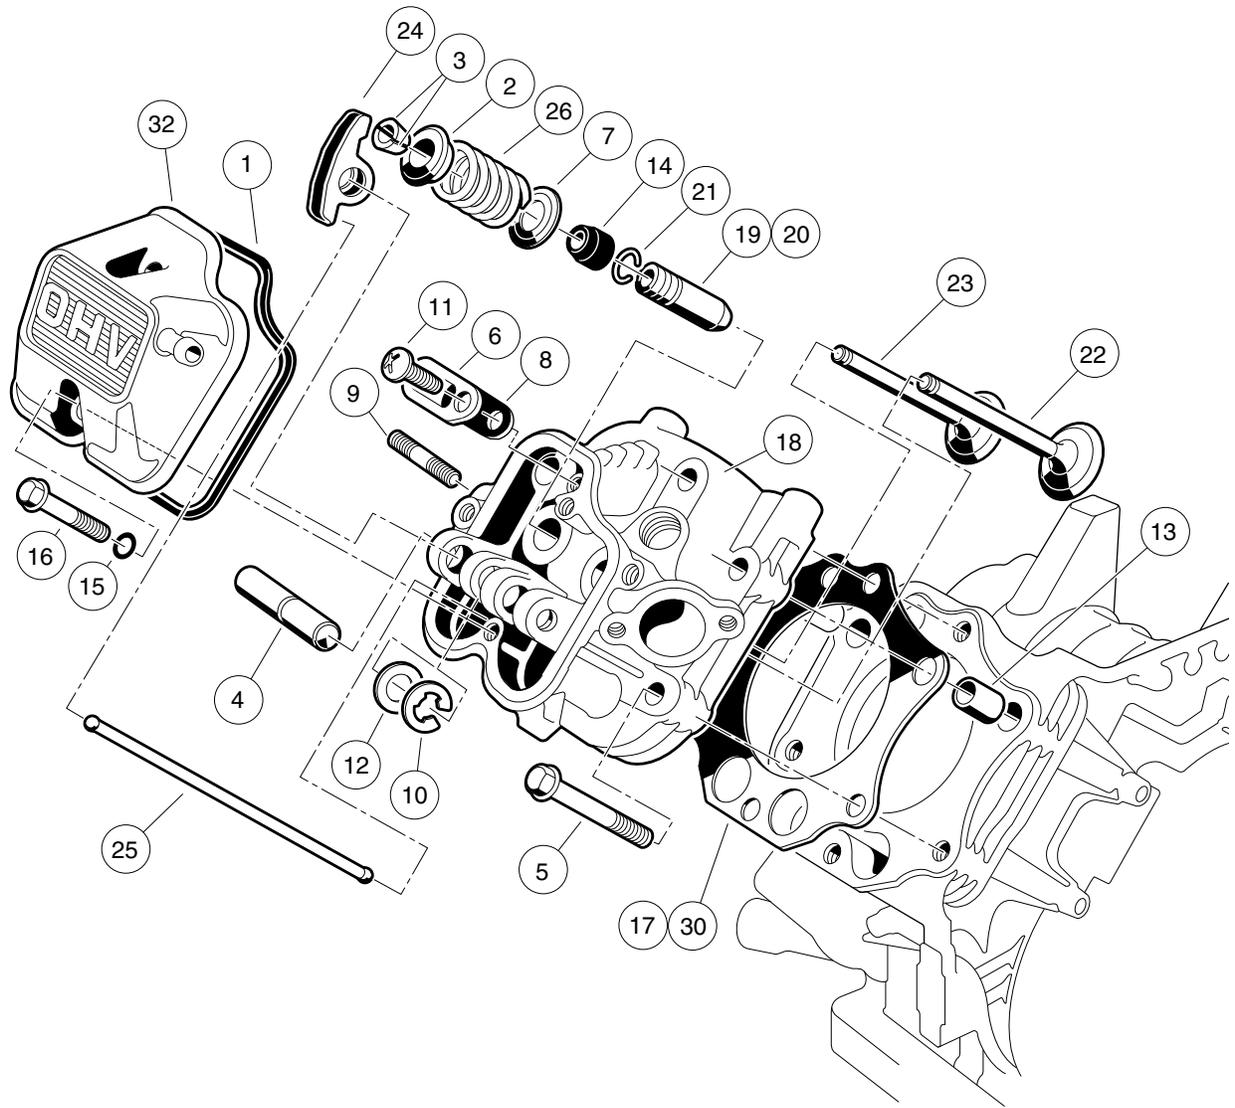


000204-001

AS11 FE350 ENGINE – CYLINDER HEAD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016436</u>	Gasket, Rocker Case	1
2	<u>1016449</u>	Retainer, Valve Spring	2
3	<u>1016450</u>	Collet	4
4	<u>1016452</u>	Shaft, Rocker	1
5	<u>1016458</u>	Bolt, Flange Head, M8 x 1.25 x 45 mm	6
6	<u>1016474</u>	Plate	1
7	<u>1016479</u>	Seat, Spring	2
8	<u>1016483</u>	Valve	1
9	<u>1016489</u>	Stud, Two-Ended, M8-1.25	2
10	<u>1016517</u>	Circlip, Type-E	1
11	<u>1016544</u>	Screw	1
12	<u>1016549</u>	Washer, 12.1x19x1.8	1
13	<u>1016563</u>	Pin	2
14	<u>1016566</u>	Seal, Oil	2
15	<u>1016569</u>	O-Ring	2
16	<u>1016583</u>	Bolt, 6x35	2
17	<u>1017434</u>	Gasket, Head	1
18	<u>1017435</u>	Assembly, Cylinder Head, FE350 (includes items 19 through 21)	1
19	<u>1016518</u>	Guide, Valve, Exhaust	1
20	<u>1016519</u>	Guide, Valve	1
21	<u>1016560</u>	Snap Ring	2
22	<u>1017444</u>	Valve, Intake	1
23	<u>1017445</u>	Valve, Exhaust	1
24	<u>1017446</u>	Arm, Rocker	2
25	<u>1017454</u>	Rod, Push	2
26	<u>1017473</u>	Spring, Engine Valve	2
27	<u>102304801</u>	Kit, Gasket, FE350 (includes items 28 through 31)	1
28	<u>1016440</u>	Gasket, Engine to Insulator	1
29	<u>1016904</u>	Gasket, Exhaust	1
30	<u>1017434</u>	Gasket, Head	1
31	<u>1017443</u>	Gasket, Crankcase Cover	1
32	<u>102753401</u>	Case, Rocker	1
		Note: Item 28 is not a component of the FE350 engine.	

7

G

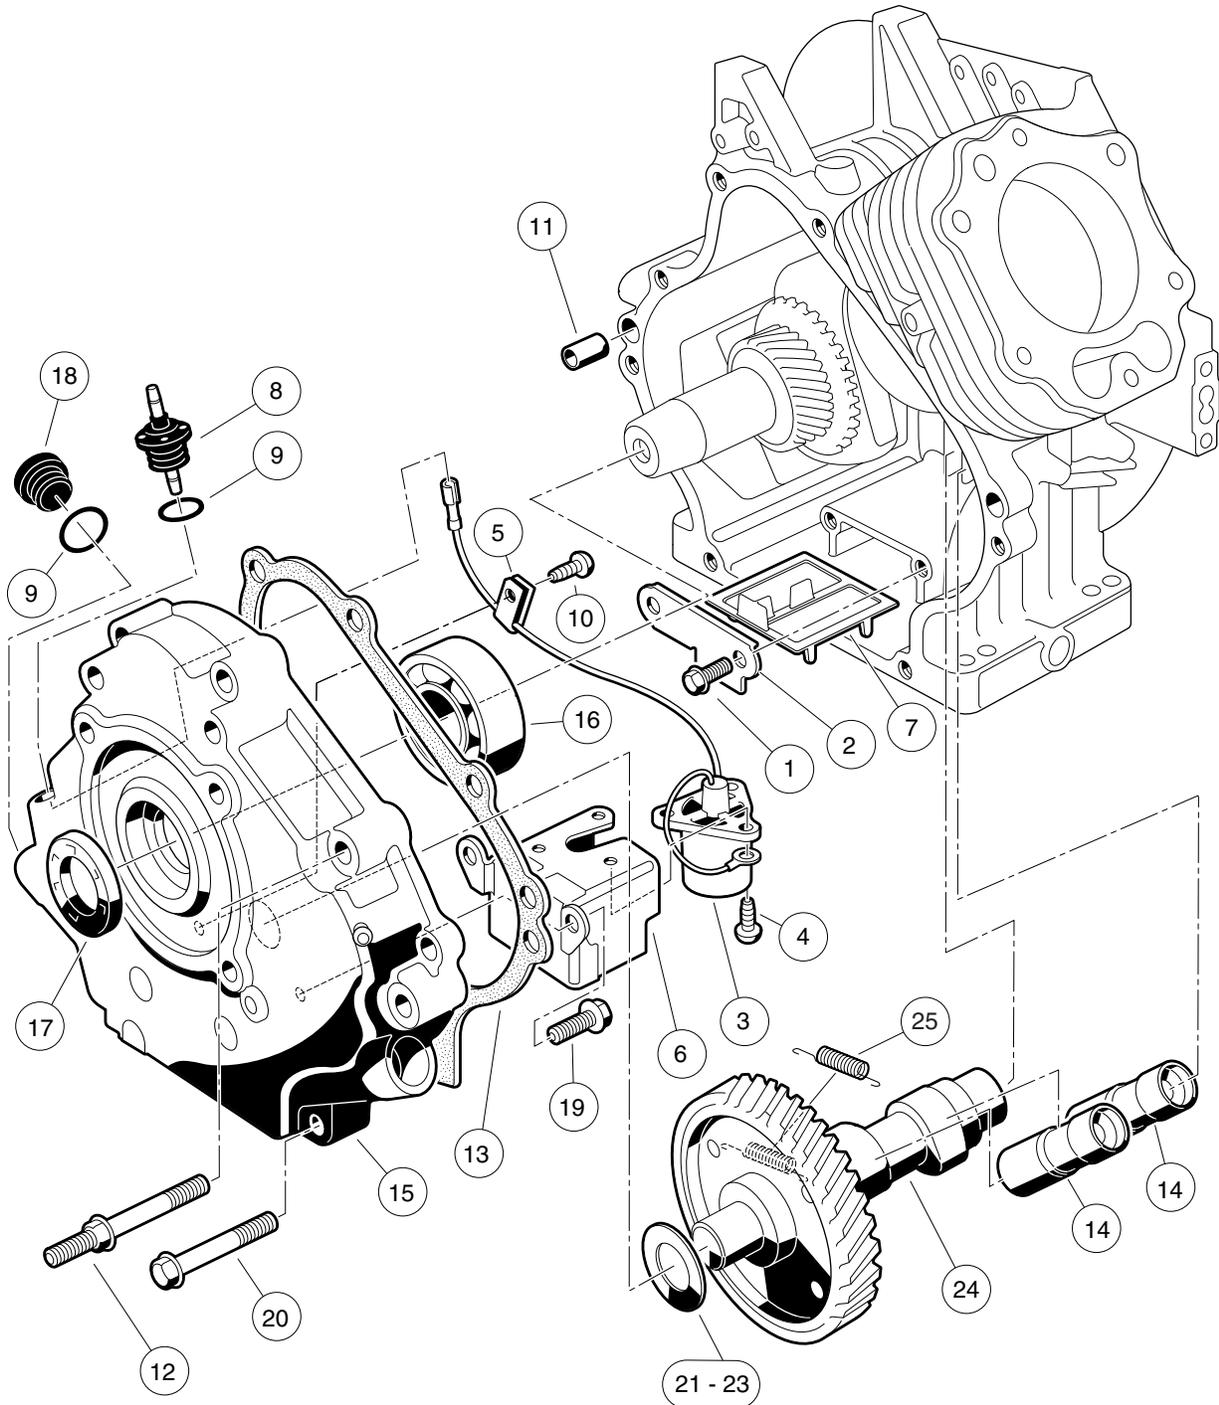


000205-001

FE350 ENGINE WITH ACR – CRANKCASE, CAMSHAFT, AND OIL SENSOR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016454</u>	Bolt, Flange Head, M5 x 0.8 x 8 mm	2
2	<u>1016472</u>	Plate, Oil Filter Screen	1
3	<u>1016494</u>	Sensor, Oil Level	1
4	<u>1016496</u>	Screw, Cross Pan-Head, M4 x 0.7 x 8 mm	3
5	<u>1016506</u>	Clamp	1
6	<u>1016510</u>	Bracket, Switch, Oil Level	1
7	<u>1016521</u>	Screen, Oil Filter	1
8	<u>1016535</u>	Connector, Cord	1
9	<u>1016538</u>	O-Ring	2
10	<u>1016544</u>	Screw	1
11	<u>1016564</u>	Pin	2
12	<u>1016584</u>	Bolt, Two-Ended, M8 x 1.25 x 69 mm	2
13	<u>1017443</u>	Gasket, Crankcase Cover	1
14	<u>1017447</u>	Adjuster, Lash	2
15	<u>1017472</u>	Cover Crankcase	1
16	<u>1017487</u>	Bearing, Ball	1
17	<u>1017504</u>	Seal, Oil	1
18	<u>1017508</u>	Plug	1
19	<u>1017513</u>	Bolt Switch Bracket	2
20	<u>1017514</u>	Screw, M8-1.25 X 45mm Hex	6
21	<u>101751801</u>	Shim, 0.3	1
22	<u>101751802</u>	Shim, 0.4	1
23	<u>101751803</u>	Shim, 0.5	1
24	<u>102271601</u>	Camshaft, FE350/FE400 with ACR, 44-tooth (includes item 25)	1
25	<u>1017511</u>	Spring	1

7
G

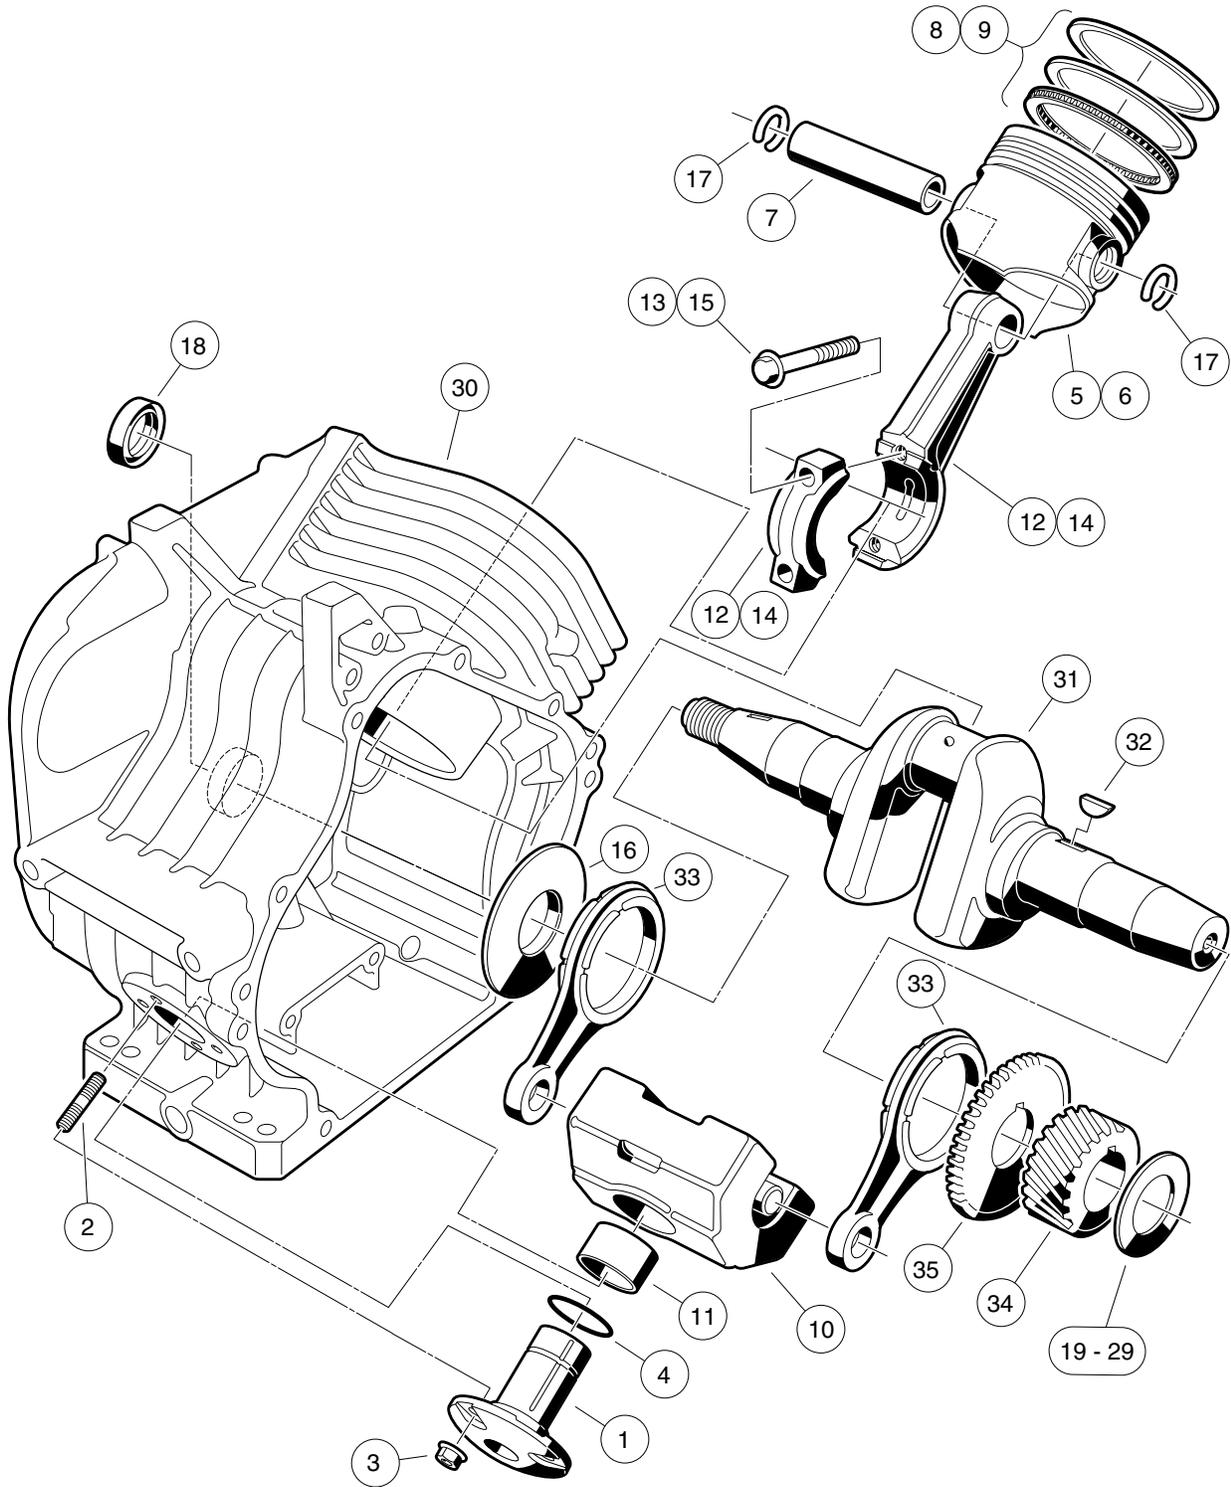


000206-001

AS11 FE350 ENGINE – CRANKCASE AND CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016470	Shaft, Guide, Counterbalance	1
2	<u>1016541</u>	Stud, 6x14	4
3	1016547	Nut, M6 Flange	4
4	<u>1016571</u>	O-Ring	1
5	<u>101744901</u>	Piston, Standard	1
6	<u>101744902</u>	Piston, 0.50 mm Oversize	1
7	1017450	Pin, Piston	1
8	<u>101745101</u>	Ring Set, Standard Piston	1
9	<u>101745102</u>	Ring Set, Piston, 0.50 mm Oversize	1
10	<u>1017453</u>	Fe400 Counterbalance Weight (includes item 11)	1
11	1017510	Bearing, Plain	1
12	101745701	Asm, Con. Rod Std (includes item 13)	1
13	<u>1017512</u>	Bolt	2
14	<u>101745702</u>	Rod Assembly Connecting Rod 0.5mm (includes item 15)	1
15	<u>1017512</u>	Bolt	2
16	1017501	Spacer	1
17	<u>1017502</u>	Snap Ring	2
18	<u>1017503</u>	Seal, Oil	1
19	<u>101773301</u>	Shim, Crankshaft, 1.18mm	1
20	<u>101773302</u>	Shim, Crankshaft, 1.25mm	1
21	<u>101773303</u>	Shim, Crankshaft, 1.32mm	1
22	<u>101773304</u>	Shim, Crankshaft, 1.39mm	1
23	<u>101773305</u>	Shim, Crankshaft, 1.46mm	1
24	<u>101773306</u>	Shim, Crankshaft, 1.53mm	1
25	<u>101773307</u>	Shim, Crankshaft, 1.60mm	1
26	<u>101773308</u>	Shim, Crankshaft, 1.67mm	1
27	<u>101773309</u>	Shim, Crankshaft, 1.74mm	1
28	<u>101773310</u>	Shim, Crankshaft, 1.11 mm	1
29	<u>101773311</u>	Shim, Crankshaft, 1.81mm	1
30	<u>101916001</u>	Crankcase Complete, FE350 (cw)	1
31	<u>102430901</u>	Crankshaft, FE350 Left-Hand, 22-Tooth (includes items 32 through 35)	1
32	<u>1016562</u>	Key	1
33	<u>1017471</u>	Rod	2
34	N/A	Gear, Helical	1
35	N/A	Gear, Spur	1

7
G

7
G

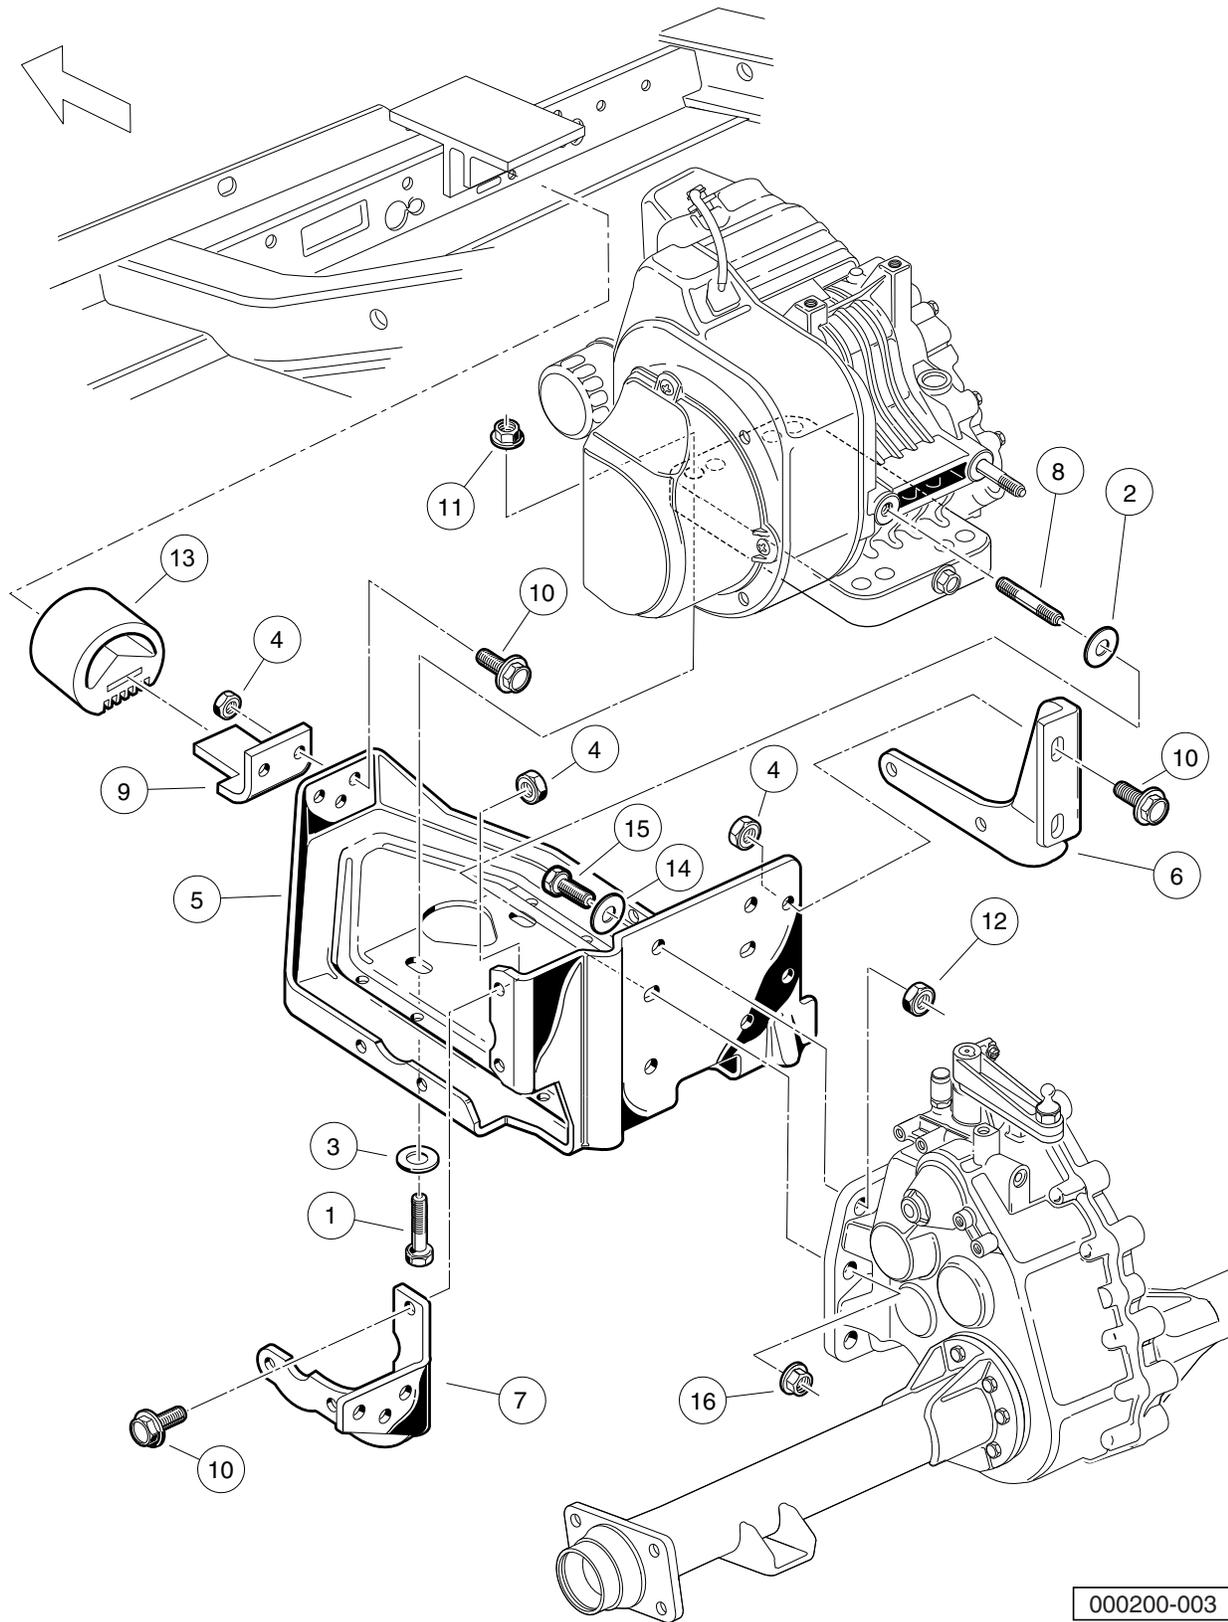

000200-003

FE350 ENGINE MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	4
2	<u>1011697</u>	Washer, 5/16 Flat	2
3	1012571	Washer, 5/16 Extra Thick Flat	4
4	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	10
5	<u>101827101</u>	Plate, Engine Mounting	1
6	<u>101832601</u>	Stiffener (PTO Side)	1
7	<u>101832701</u>	Stiffener (Flywheel Side)	1
8	<u>101833101</u>	Stud, M8-1.25 X 50 mm Two-Ended	2
9	<u>101834601</u>	Snubber Bracket	1
10	<u>101884801</u>	Screw, 5/16-24 X 0.875 Grade-8	10
11	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4
12	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4
13	<u>102540301</u>	Inner Frame Snubber	1
14	<u>334</u>	Washer, 3/8 Type A Flat	4
15	705	Screw, Cap-hex Hd 3/8-16x1.25	4
16	<u>96704416</u>	Nut Flg, M8 X 1.25 Serrated	2

7

G



7

G

FE350 ENGINE WITHOUT ACR (PEDAL- START VEHICLES)

8

G

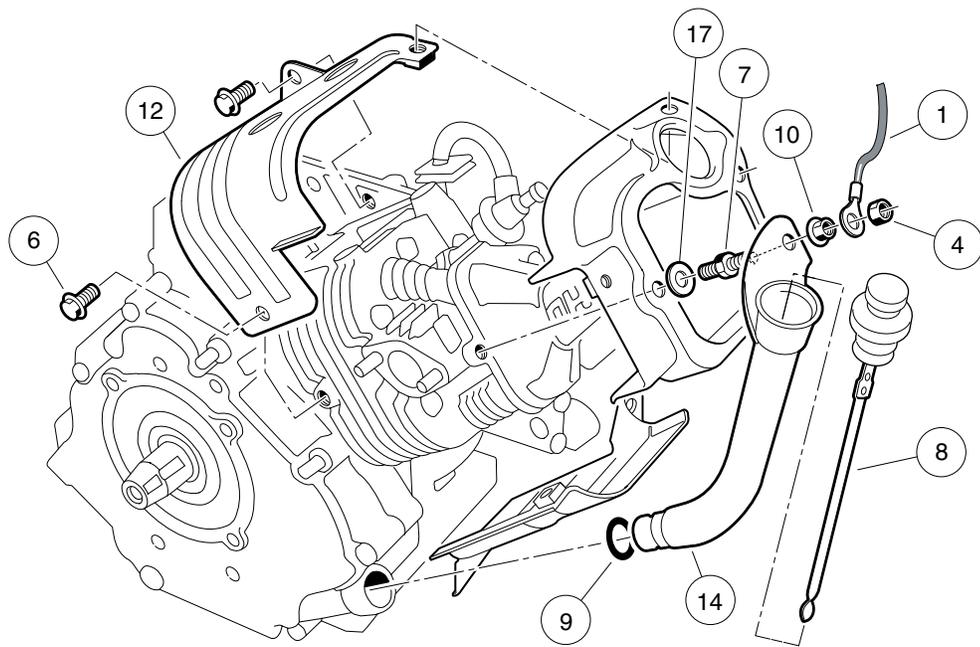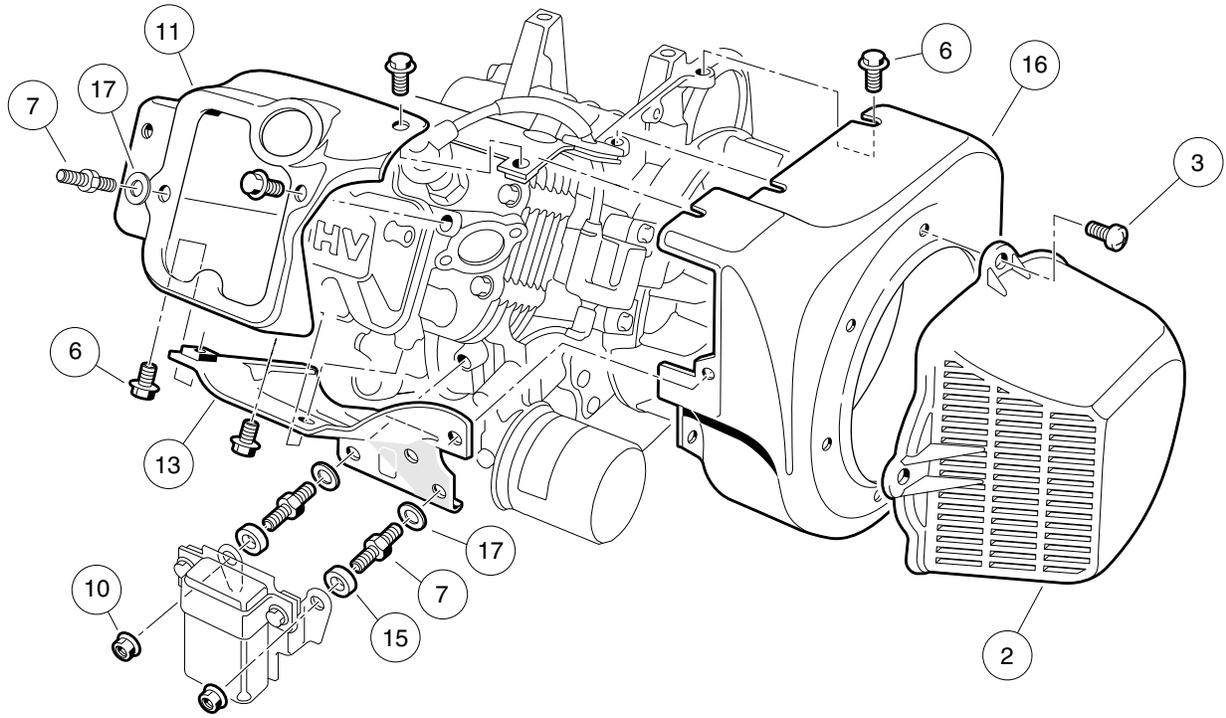


000201-001

AS11 FE350 ENGINE WITHOUT ACR (AUTOMATIC COMPRESSION RELEASE) – SHROUDS AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015332</u>	Wire Assembly, #10, Uninsulated	1
2	<u>1015649</u>	Shroud, Fan	1
3	<u>1015969</u>	Screw, M6-1.00 X 10mm Pan Hd	4
4	<u>101887601</u>	Locknut, M6-1.00 Nylon Insert	1
5	<u>101953802</u>	Engine, FE350 (cw) without ACR * (includes items 6 through 17)	1
6	1016456	Bolt, Flange Head, M6 x 1 x 12 mm	14
7	<u>1016507</u>	Bolt, Two-Ended	3
8	1016531	Dipstick	1
9	<u>1016539</u>	O-Ring	1
10	1016547	Nut, M6 Flange	3
11	<u>1017474</u>	Shroud, Engine	1
12	<u>1017475</u>	Shroud, Engine	1
13	<u>1017476</u>	Shroud, Engine	1
14	<u>1017486</u>	Tube, Oil Filler	1
15	<u>1017500</u>	Spacer 6.50 X 12 X 5.5	2
16	<u>101916101</u>	Housing, FE350 Fan	1
17	N/A	Washer, 6mm Flat	3
* Note: FE350 engine component listings span several pages.			

8

G

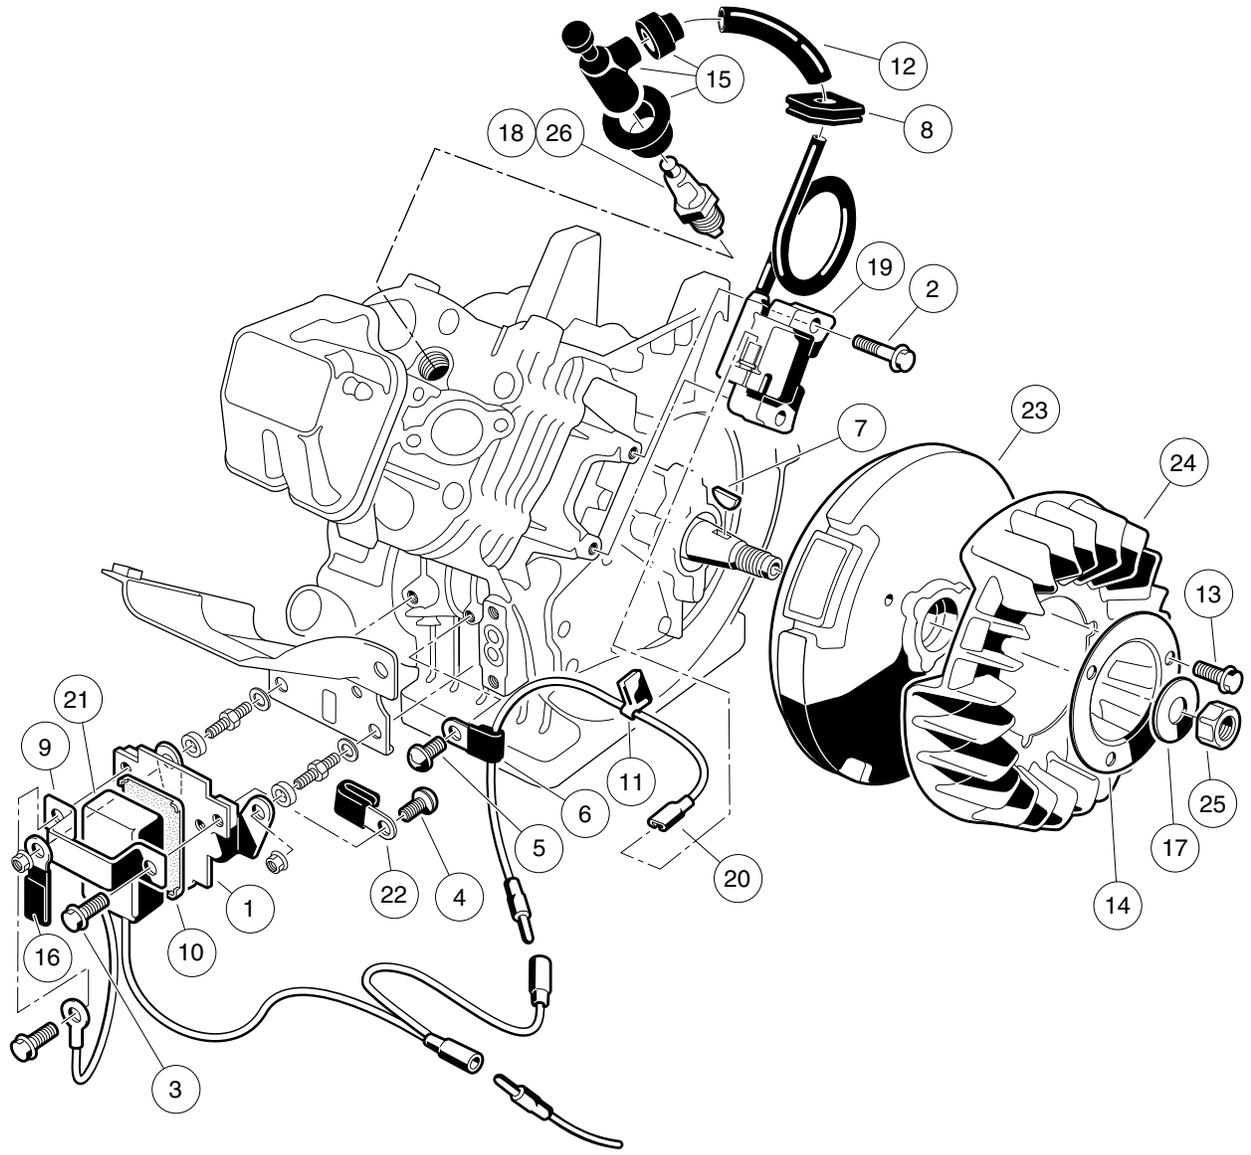


000202-001

AS11 FE350 ENGINE – IGNITION COMPONENTS AND FLYWHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016445	Bracket, RPM Limiter	1
2	<u>1016455</u>	Bolt, Flange Head	2
3	1016456	Bolt, Flange Head, M6 x 1 x 12 mm	2
4	<u>1016497</u>	Screw, Pan WP Cross	1
5	<u>1016544</u>	Screw	1
6	<u>1016561</u>	Clamp	1
7	<u>1016562</u>	Key	1
8	<u>1016578</u>	Ignition, Grommet	1
9	<u>1016579</u>	Band, RPM Limiter Mount	1
10	1016586	Damper, RPM Limiter	1
11	<u>1016587</u>	Clamp	1
12	<u>1016588</u>	Tube, 7mm X 10mm X 70mm	1
13	<u>1017448</u>	Bolt, Flanged	3
14	<u>1017455</u>	Plate, Flywheel Fan	1
15	<u>1017463</u>	Cap Asm Plug	1
16	<u>1017468</u>	Clamp	1
17	<u>1017490</u>	Washer, Flat	1
18	<u>101881101</u>	Spark Plug, OHV (Autolite)	1
19	<u>101909201</u>	Coil, Ignition	1
20	<u>101909301</u>	Lead Wire Assy	1
21	101909401	Limiter, RPM	1
22	101909501	Clamp, Steel	1
23	<u>101916201</u>	Flywheel	1
24	<u>101916301</u>	Fan (cw)	1
25	N/A	Nut, Hex, 18 mm Fine	1
26	<u>AM10724</u>	Spark Plug, OHV (NGK)	1

8
G

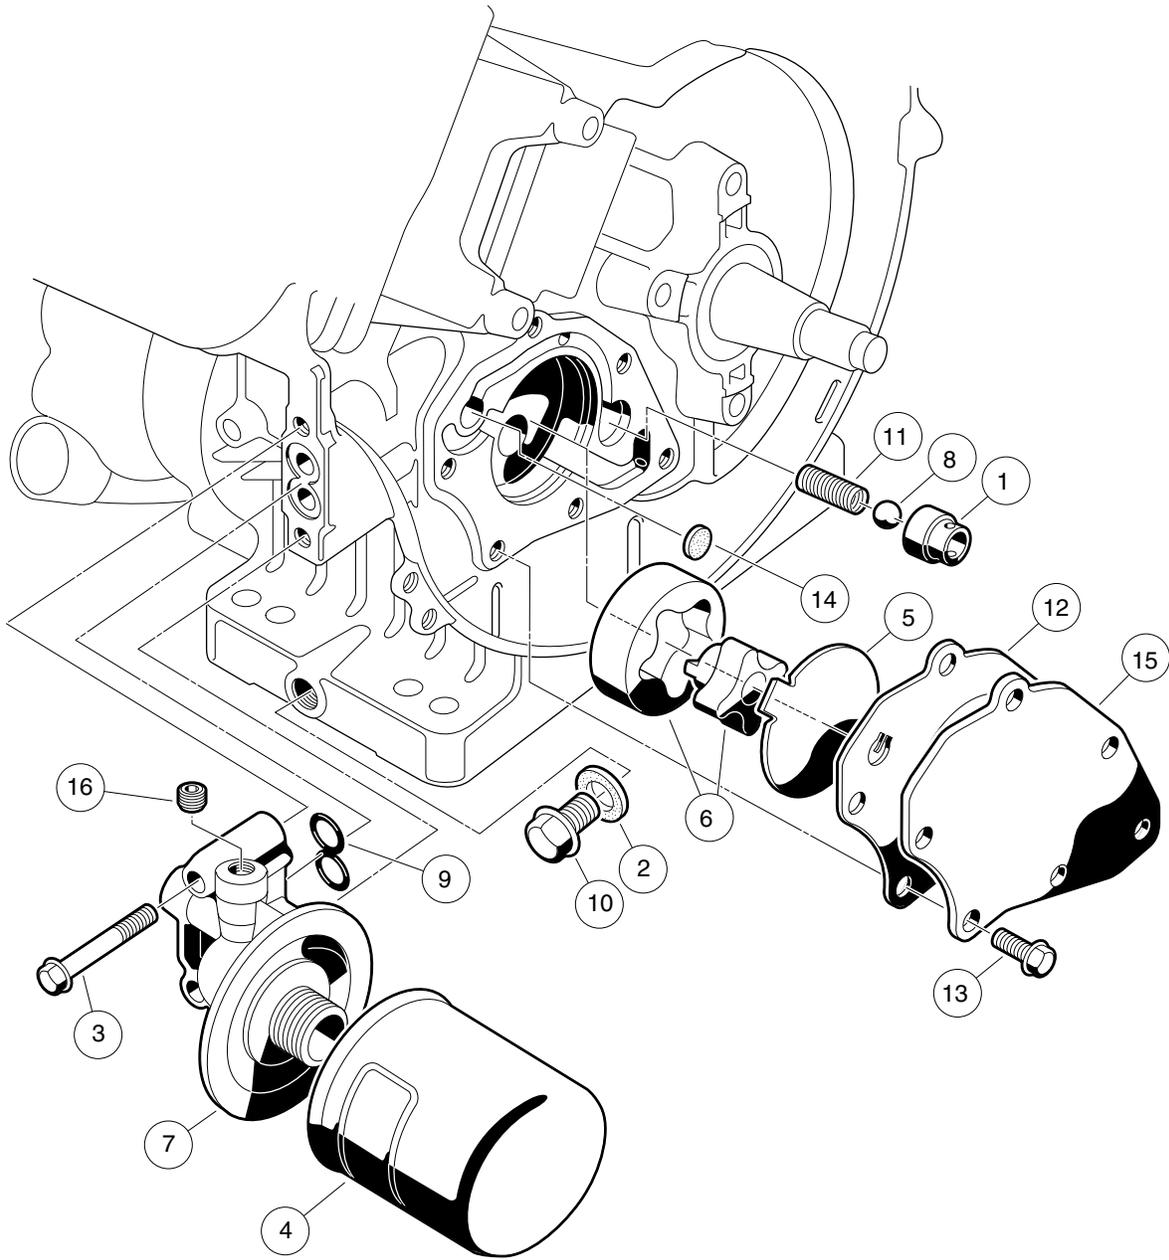


000203-001

FE350 ENGINE – OIL CIRCULATION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016429	Seat, Value Oil Press Relief	1
2	<u>1016432</u>	Gasket, Drain Plug	1
3	<u>1016457</u>	Bolt, Flange Head	2
4	<u>1016467</u>	Filter, Oil	1
5	<u>1016473</u>	Plate, Oil Pump	1
6	<u>101648203</u>	Oil Pump And Rotor	1
7	<u>1016502</u>	Bracket, Oil Filter Mount	1
8	<u>1016537</u>	Ball, Steel, Press, Relief	1
9	<u>1016570</u>	O-Ring	1
10	1016576	Plug, Drain	1
11	<u>1016581</u>	Spring	1
12	<u>1017442</u>	Gasket	1
13	<u>1017456</u>	Bolt, Flanged	6
14	<u>1017458</u>	Filter	1
15	<u>1017460</u>	Cover, Pump	1
16	<u>1017507</u>	Plug	2

8

G

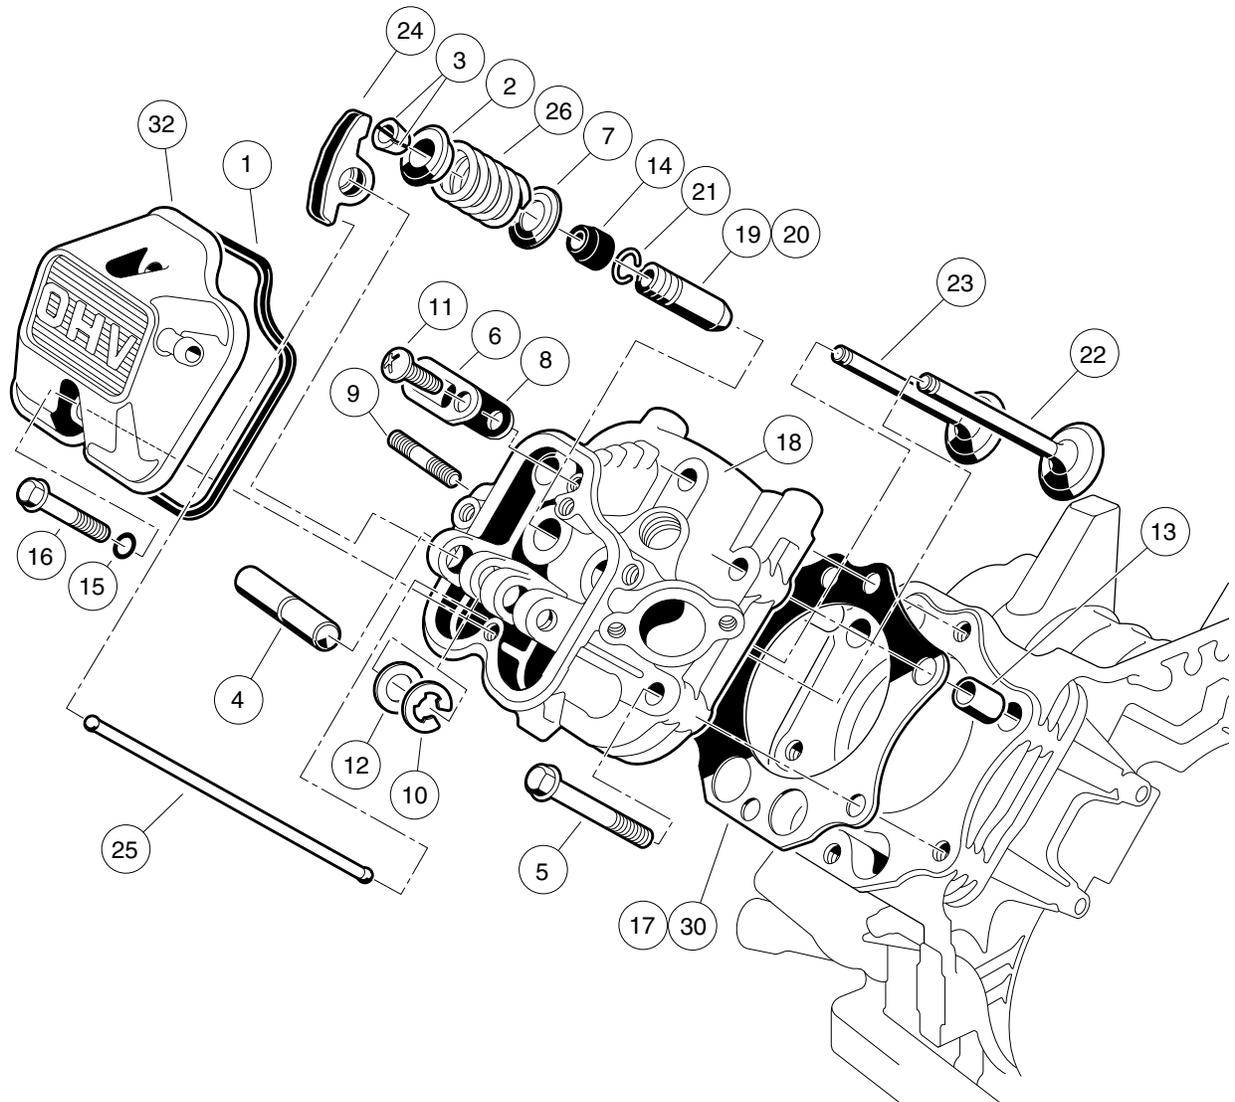

000204-001

AS11 FE350 ENGINE – CYLINDER HEAD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016436</u>	Gasket, Rocker Case	1
2	<u>1016449</u>	Retainer, Valve Spring	2
3	<u>1016450</u>	Collet	4
4	<u>1016452</u>	Shaft, Rocker	1
5	<u>1016458</u>	Bolt, Flange Head, M8 x 1.25 x 45 mm	6
6	<u>1016474</u>	Plate	1
7	<u>1016479</u>	Seat, Spring	2
8	<u>1016483</u>	Valve	1
9	<u>1016489</u>	Stud, Two-Ended, M8-1.25	2
10	<u>1016517</u>	Circlip, Type-E	1
11	<u>1016544</u>	Screw	1
12	<u>1016549</u>	Washer, 12.1x19x1.8	1
13	<u>1016563</u>	Pin	2
14	<u>1016566</u>	Seal, Oil	2
15	<u>1016569</u>	O-Ring	2
16	<u>1016583</u>	Bolt, 6x35	2
17	<u>1017434</u>	Gasket, Head	1
18	<u>1017435</u>	Assembly, Cylinder Head, FE350 (includes items 19 through 21)	1
19	<u>1016518</u>	Guide, Valve, Exhaust	1
20	<u>1016519</u>	Guide, Valve	1
21	<u>1016560</u>	Snap Ring	2
22	<u>1017444</u>	Valve, Intake	1
23	<u>1017445</u>	Valve, Exhaust	1
24	<u>1017446</u>	Arm, Rocker	2
25	<u>1017454</u>	Rod, Push	2
26	<u>1017473</u>	Spring, Engine Valve	2
27	<u>102304801</u>	Kit, Gasket, FE350 (includes items 28 through 31)	1
28	<u>1016440</u>	Gasket, Engine to Insulator	1
29	<u>1016904</u>	Gasket, Exhaust	1
30	<u>1017434</u>	Gasket, Head	1
31	<u>1017443</u>	Gasket, Crankcase Cover	1
32	<u>102753401</u>	Case, Rocker	1
		Note: Item 28 is not a component of the FE350 engine.	


8

G

AS11 FE350 ENGINE WITHOUT ACR – CRANKCASE, CAMSHAFT, AND OIL SENSOR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016454</u>	Bolt, Flange Head, M5 x 0.8 x 8 mm	2
2	<u>1016472</u>	Plate, Oil Filter Screen	1
3	<u>1016494</u>	Sensor, Oil Level	1
4	<u>1016496</u>	Screw, Cross Pan-Head, M4 x 0.7 x 8 mm	3
5	<u>1016506</u>	Clamp	1
6	<u>1016510</u>	Bracket, Switch, Oil Level	1
7	<u>1016521</u>	Screen, Oil Filter	1
8	<u>1016535</u>	Connector, Cord	1
9	<u>1016538</u>	O-Ring	2
10	<u>1016544</u>	Screw	1
11	<u>1016564</u>	Pin	2
12	<u>1016584</u>	Bolt, Two-Ended, M8 x 1.25 x 69 mm	2
13	<u>1017443</u>	Gasket, Crankcase Cover	1
14	<u>1017447</u>	Adjuster, Lash	2
15	<u>1017472</u>	Cover Crankcase	1
16	<u>1017487</u>	Bearing, Ball	1
17	<u>1017504</u>	Seal, Oil	1
18	<u>1017508</u>	Plug	1
19	<u>1017513</u>	Bolt Switch Bracket	2
20	<u>1017514</u>	Screw, M8-1.25 X 45mm Hex	6
21	<u>101751801</u>	Shim, 0.3	1
22	<u>101751802</u>	Shim, 0.4	1
23	<u>101751803</u>	Shim, 0.5	1
24	<u>102431001</u>	Camshaft, FE350 without ACR, 44-Tooth	1

8
G

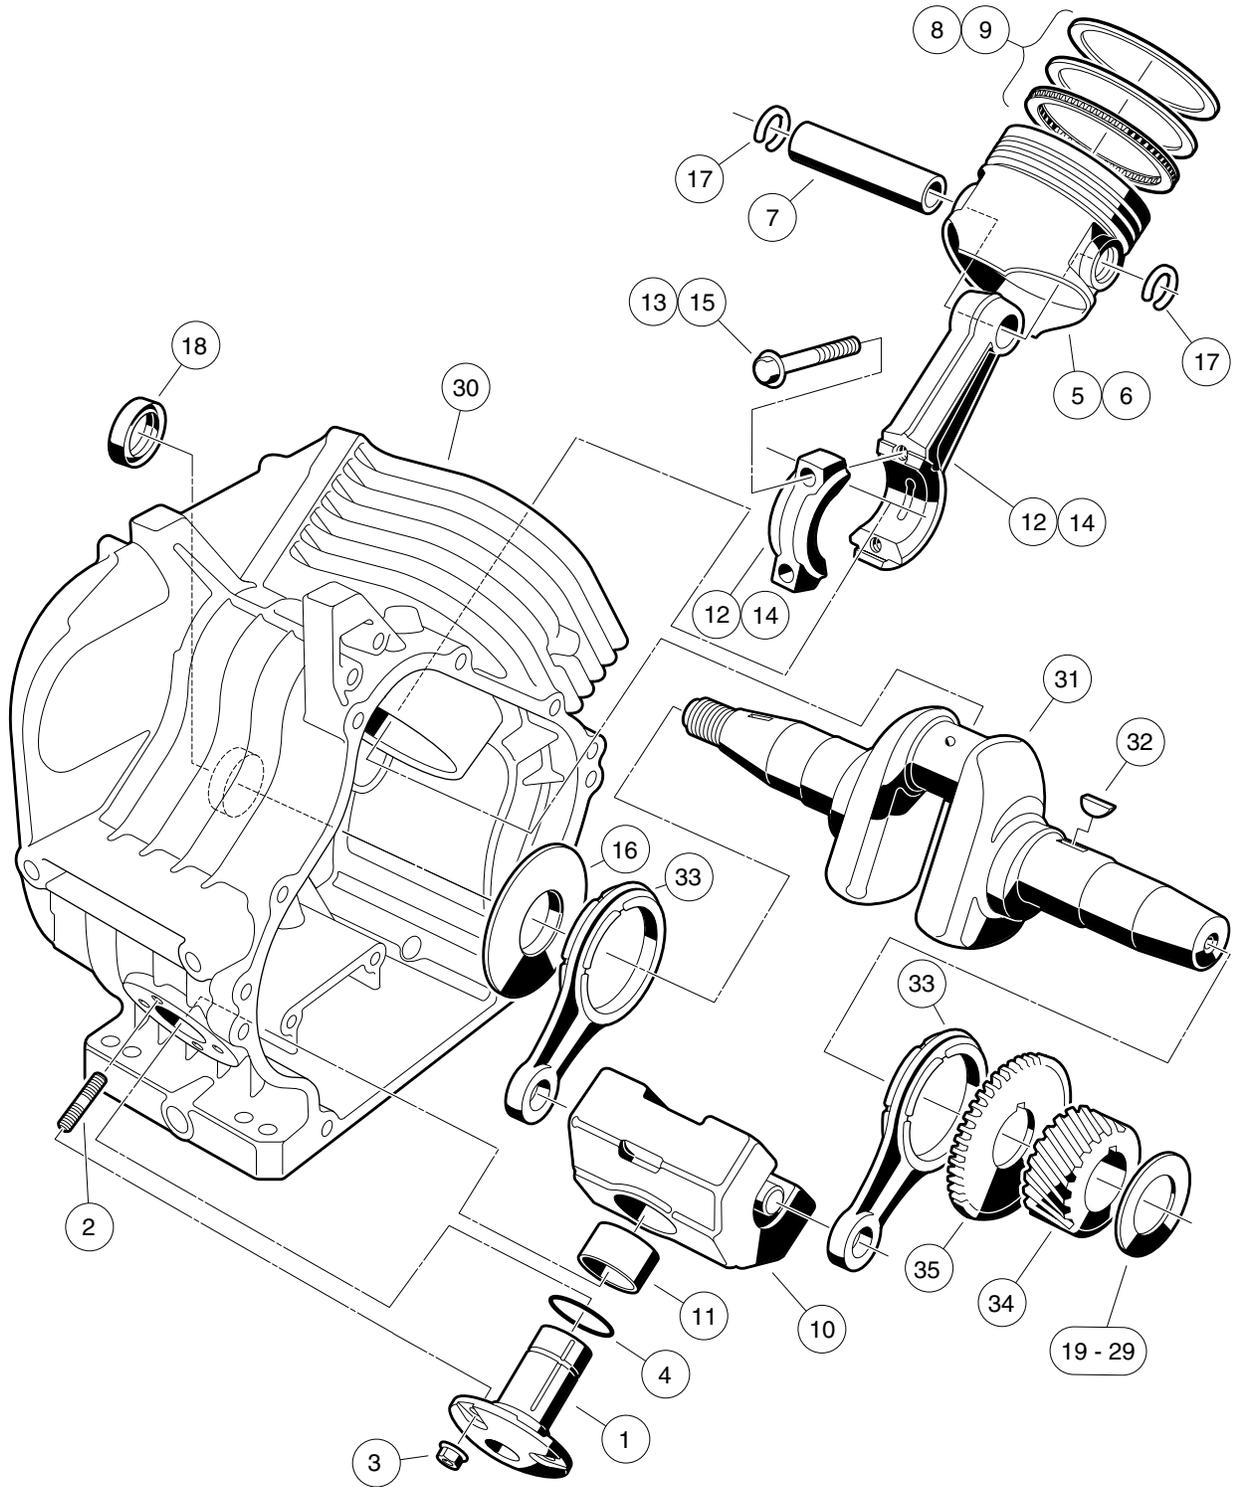


000206-001

AS11 FE350 ENGINE – CRANKCASE AND CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016470	Shaft, Guide, Counterbalance	1
2	<u>1016541</u>	Stud, 6x14	4
3	1016547	Nut, M6 Flange	4
4	<u>1016571</u>	O-Ring	1
5	<u>101744901</u>	Piston, Standard	1
6	<u>101744902</u>	Piston, 0.50 mm Oversize	1
7	1017450	Pin, Piston	1
8	<u>101745101</u>	Ring Set, Standard Piston	1
9	<u>101745102</u>	Ring Set, Piston, 0.50 mm Oversize	1
10	<u>1017453</u>	Fe400 Counterbalance Weight (includes item 11)	1
11	1017510	Bearing, Plain	1
12	101745701	Asm, Con. Rod Std (includes item 13)	1
13	<u>1017512</u>	Bolt	2
14	<u>101745702</u>	Rod Assembly Connecting Rod 0.5mm (includes item 15)	1
15	<u>1017512</u>	Bolt	2
16	1017501	Spacer	1
17	<u>1017502</u>	Snap Ring	2
18	<u>1017503</u>	Seal, Oil	1
19	<u>101773301</u>	Shim, Crankshaft, 1.18mm	1
20	<u>101773302</u>	Shim, Crankshaft, 1.25mm	1
21	<u>101773303</u>	Shim, Crankshaft, 1.32mm	1
22	<u>101773304</u>	Shim, Crankshaft, 1.39mm	1
23	<u>101773305</u>	Shim, Crankshaft, 1.46mm	1
24	<u>101773306</u>	Shim, Crankshaft, 1.53mm	1
25	<u>101773307</u>	Shim, Crankshaft, 1.60mm	1
26	<u>101773308</u>	Shim, Crankshaft, 1.67mm	1
27	<u>101773309</u>	Shim, Crankshaft, 1.74mm	1
28	<u>101773310</u>	Shim, Crankshaft, 1.11 mm	1
29	<u>101773311</u>	Shim, Crankshaft, 1.81mm	1
30	<u>101916001</u>	Crankcase Complete, FE350 (cw)	1
31	<u>102430901</u>	Crankshaft, FE350 Left-Hand, 22-Tooth (includes items 32 through 35)	1
32	<u>1016562</u>	Key	1
33	<u>1017471</u>	Rod	2
34	N/A	Gear, Helical	1
35	N/A	Gear, Spur	1

8
G

8
G

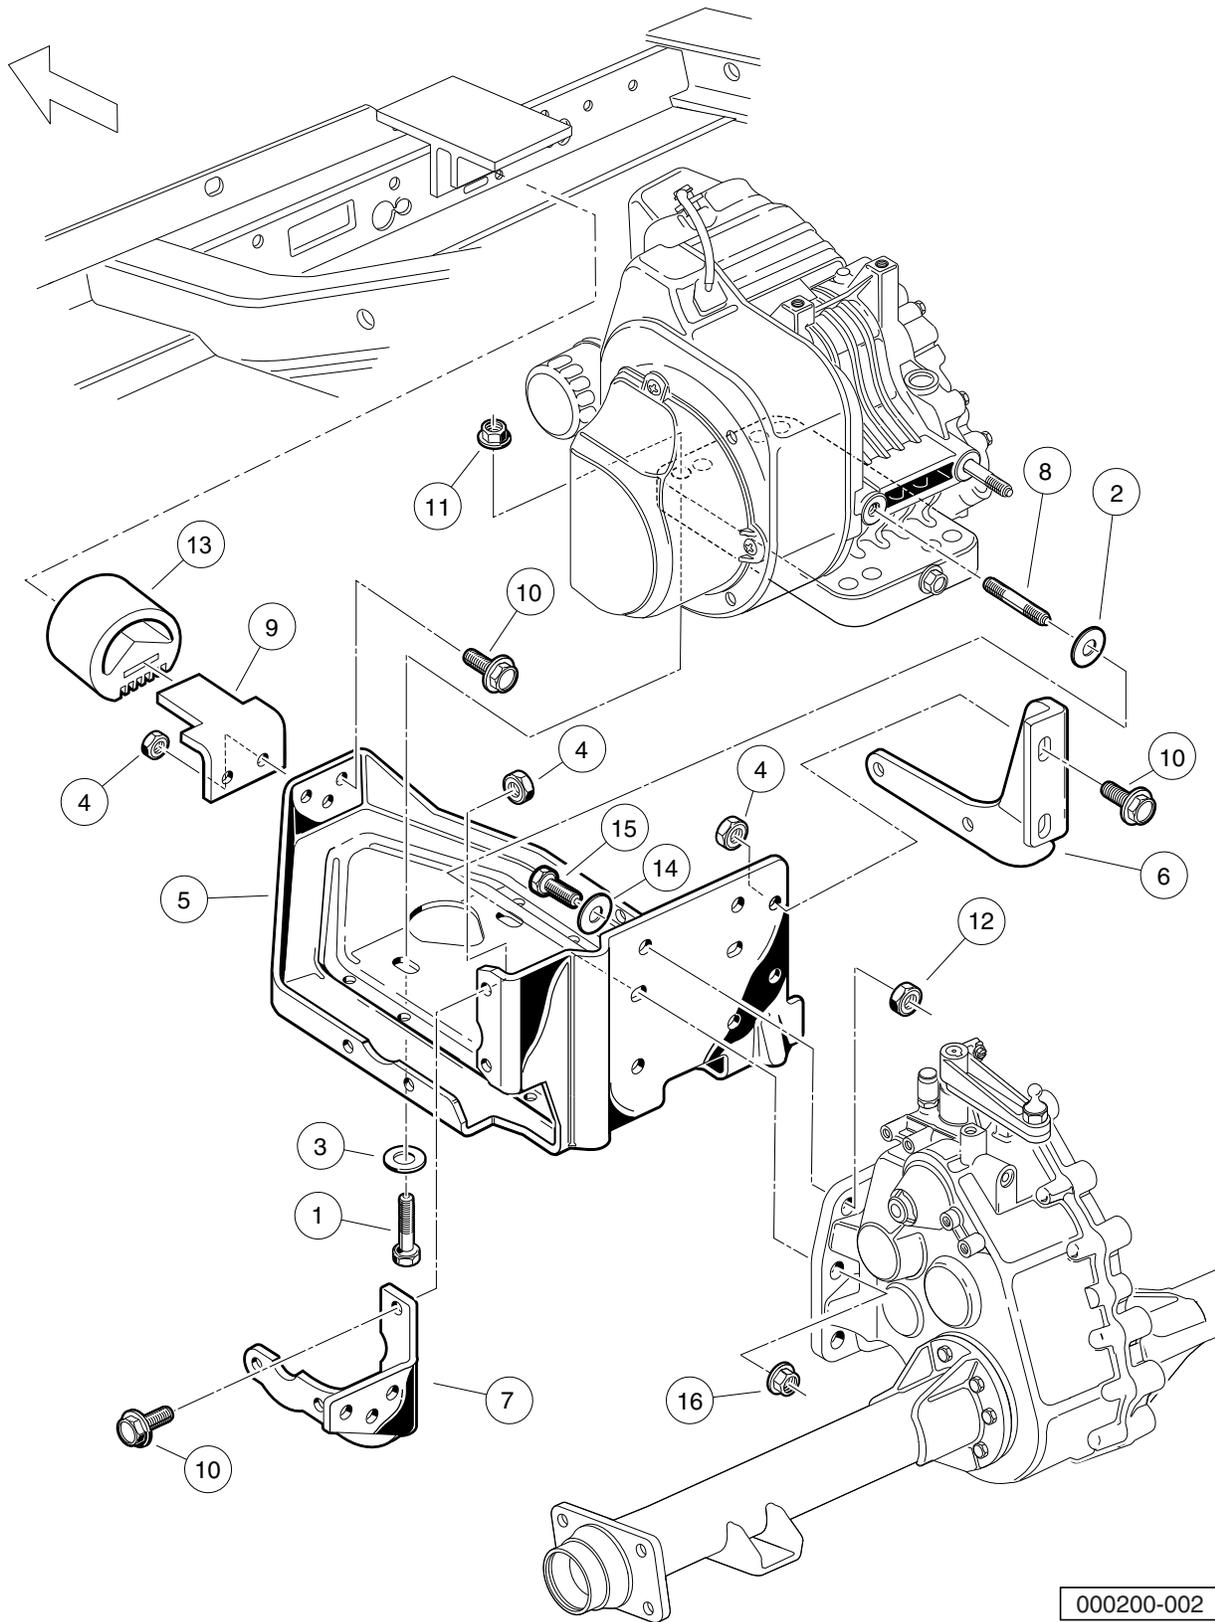

000200-002


ENGINE MOUNTING – TURF/CARRYALL 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	4
2	<u>1011697</u>	Washer, 5/16 Flat	2
3	1012571	Washer, 5/16 Extra Thick Flat	4
4	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	10
5	<u>101827101</u>	Plate, Engine Mounting	1
6	<u>101832601</u>	Stiffener (PTO Side)	1
7	<u>101832701</u>	Stiffener (Flywheel Side)	1
8	<u>101833101</u>	Stud, M8-1.25 X 50 mm Two-Ended	2
9	<u>101834601</u>	Snubber Bracket	1
10	<u>101884801</u>	Screw, 5/16-24 X 0.875 Grade-8	10
11	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4
12	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4
13	<u>102540301</u>	Inner Frame Snubber	1
14	<u>334</u>	Washer, 3/8 Type A Flat	4
15	705	Screw, Cap-hex Hd 3/8-16x1.25	4
16	<u>96704416</u>	Nut Flg, M8 X 1.25 Serrated	2

8

G

8
G

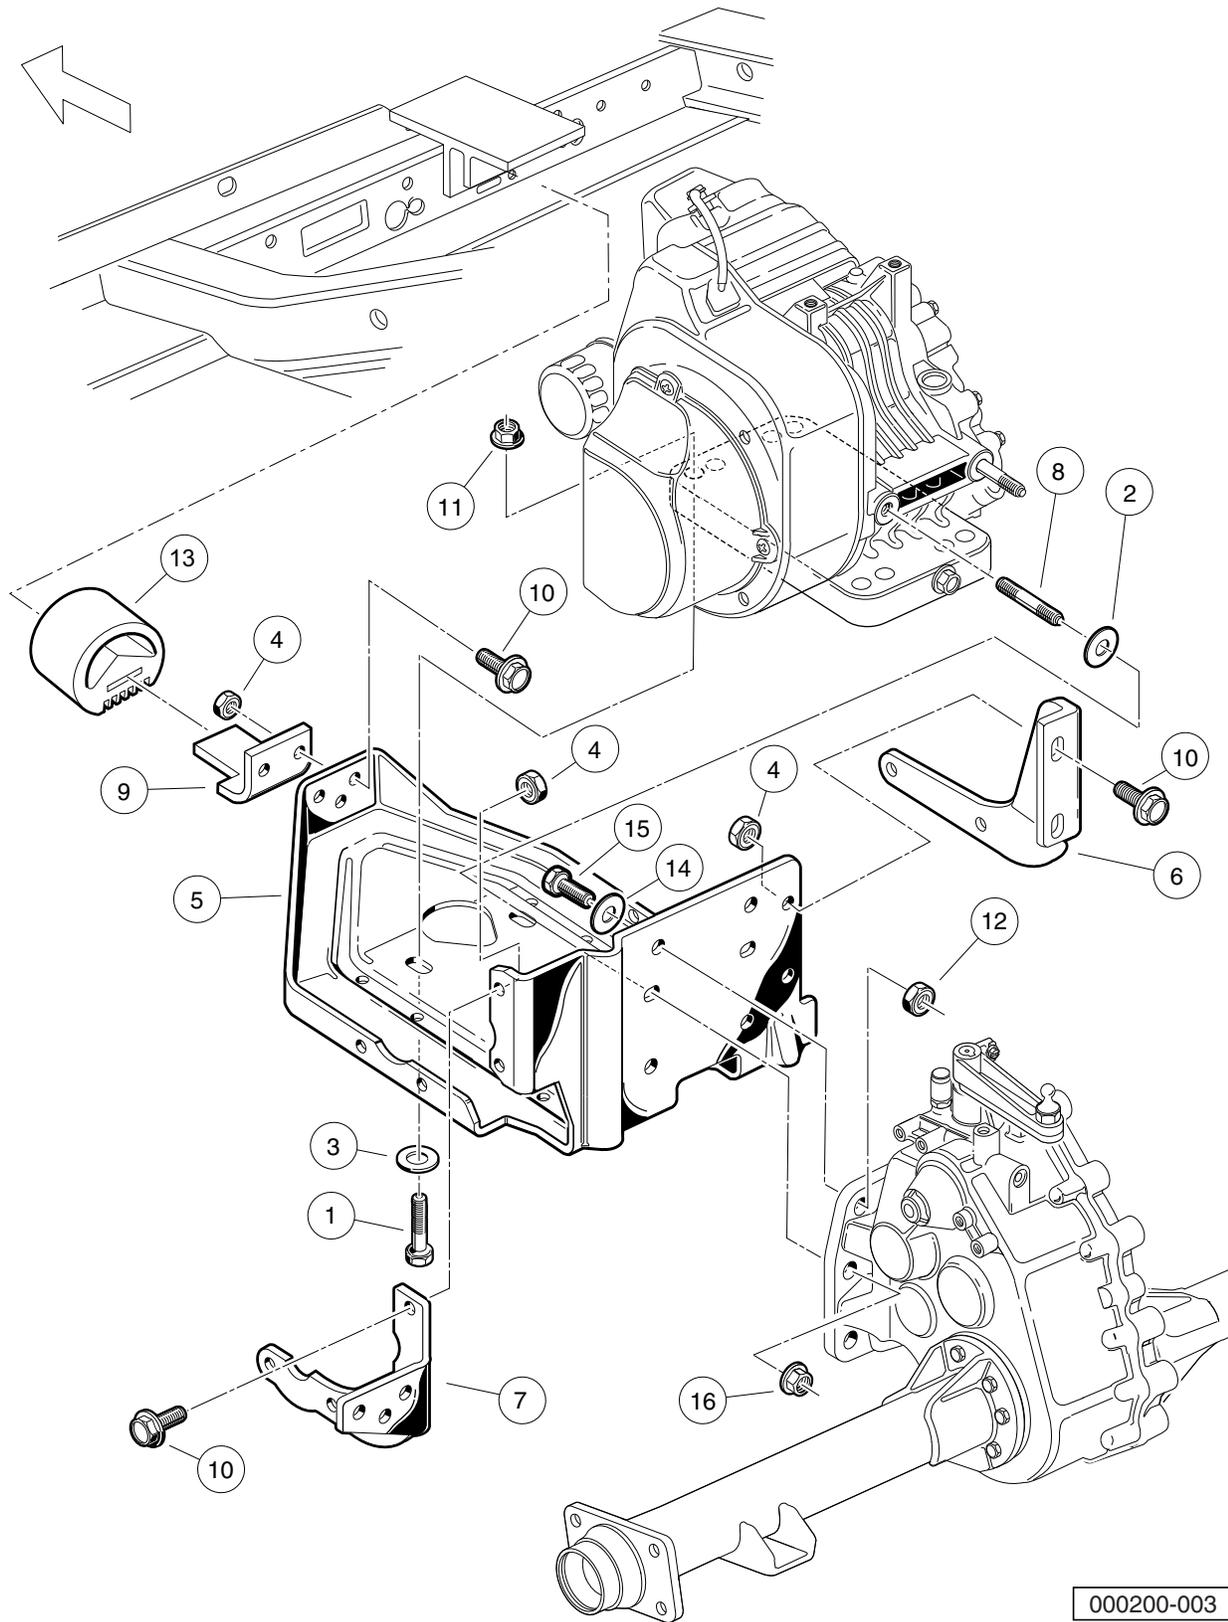

000200-003

FE350 ENGINE MOUNTING – ALL VEHICLES EXCEPT TURF/ CARRYALL 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	4
2	<u>1011697</u>	Washer, 5/16 Flat	2
3	1012571	Washer, 5/16 Extra Thick Flat	4
4	<u>1013924</u>	Nut, 5/16-24 Hex Head Cone	10
5	<u>101827101</u>	Plate, Engine Mounting	1
6	<u>101832601</u>	Stiffener (PTO Side)	1
7	<u>101832701</u>	Stiffener (Flywheel Side)	1
8	<u>101833101</u>	Stud, M8-1.25 X 50 mm Two-Ended	2
9	<u>101834601</u>	Snubber Bracket	1
10	<u>101884801</u>	Screw, 5/16-24 X 0.875 Grade-8	10
11	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4
12	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4
13	<u>102540301</u>	Inner Frame Snubber	1
14	<u>334</u>	Washer, 3/8 Type A Flat	4
15	705	Screw, Cap-hex Hd 3/8-16x1.25	4
16	<u>96704416</u>	Nut Flg, M8 X 1.25 Serrated	2

8
G


8

G

FUEL, INTAKE, AND GOVERNOR SYSTEMS

9

G

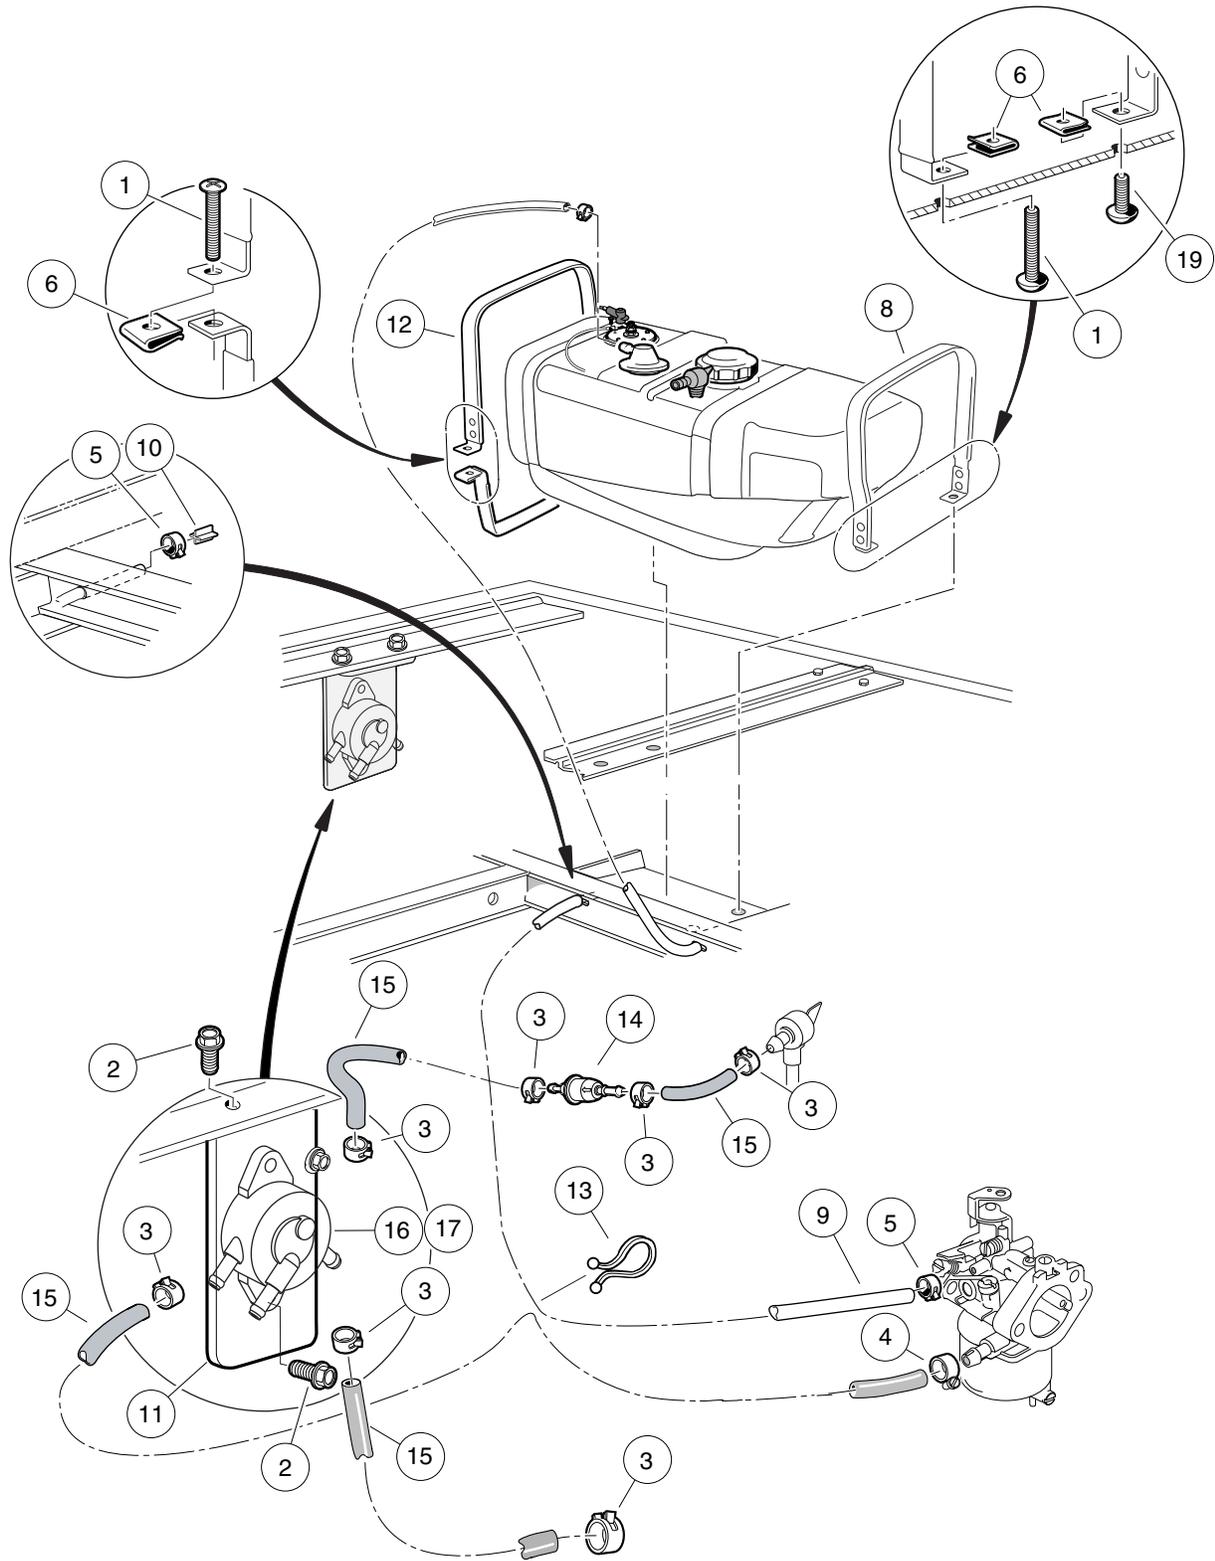


000210-002

FUEL SYSTEM – TURF/CARRYALL 1 AND 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011988</u>	Screw, 1/4-20 X 2.00 Phillips Truss-Head	2
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4
3	<u>1012649</u>	Clamp, 0.460 Red Hose	7
4	<u>1013687</u>	Clamp, 3/8" Hose (screw type)	1
5	<u>1013746</u>	Clamp, 0.301 ID Hose	2
6	<u>1014116</u>	Nut, 1/4-20 Speed	3
7	<u>1014524</u>	Kit, Impulse Pump Rebuild	1
8	<u>1014928</u>	Fuel Strap Assembly Rear	1
9	<u>1015137</u>	Fuel Line (available by the foot)	1
10	<u>101824401</u>	Vent Barb	1
11	<u>101929501</u>	Mount Fuel Pump	1
12	<u>101955301</u>	Fuel Strap Assy, Front	1
13	<u>101987701</u>	Clamp, Plastic Tie	1
14	<u>102003201</u>	Filter, Fuel, 30 Micron	1
15	<u>102865101</u>	Fuel Line	1
16	<u>103781101</u>	Kit, Fuel Pump Retrofit (includes items 17 and 18)	1
17	<u>103010101</u>	Pump, Fuel, Impulse, Fh	1
18	<u>103781201</u>	Instr, Fuel Pump Retrofit	1
19	<u>8248</u>	Screw, 1/4-20 X 0.75 Truss-Head Machine	1
		Note: Total fuel line length: 43 inches (109.2 cm)	

9
G

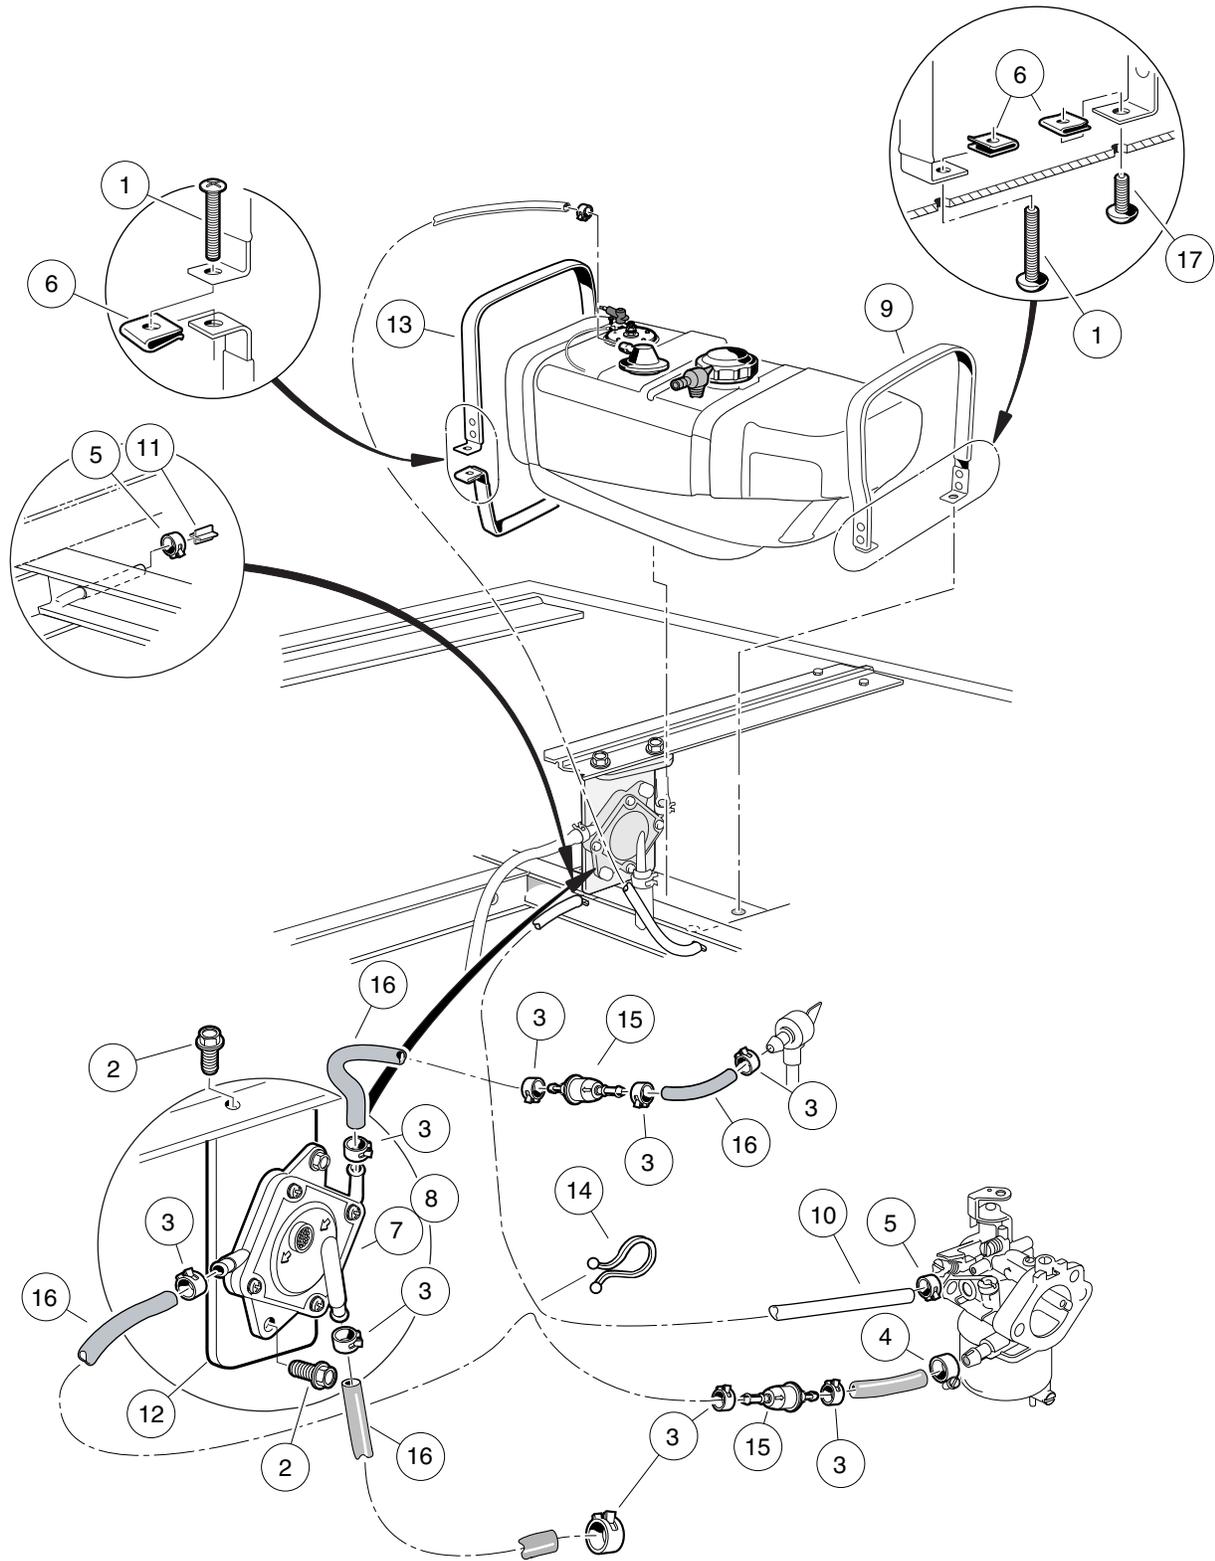


000210-003

FUEL SYSTEM – TURF/CARRYALL 2, 252, AND CARRYALL 2 PLUS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011988</u>	Screw, 1/4-20 X 2.00 Phillips Truss-Head	2
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4
3	<u>1012649</u>	Clamp, 0.460 Red Hose	9
4	<u>1013687</u>	Clamp, 3/8" Hose (screw type)	1
5	<u>1013746</u>	Clamp, 0.301 ID Hose	2
6	<u>1014116</u>	Nut, 1/4-20 Speed	3
7	<u>1014523</u>	Pump, Impulse Fuel	1
8	<u>1014524</u>	Kit, Impulse Pump Rebuild	1
9	<u>1014928</u>	Fuel Strap Assembly Rear	1
10	<u>1015137</u>	Fuel Line (available by the foot)	1
11	<u>101824401</u>	Vent Barb	1
12	<u>101929501</u>	Mount Fuel Pump	1
13	<u>101955301</u>	Fuel Strap Assy, Front	1
14	<u>101987701</u>	Clamp, Plastic Tie	1
15	<u>102003201</u>	Filter, Fuel, 30 Micron	2
16	<u>102865101</u>	Fuel Line	1
17	<u>8248</u>	Screw, 1/4-20 X 0.75 Truss-Head Machine	1
		Note: Total fuel line length: 48 inches (121.9 cm)	

9
G

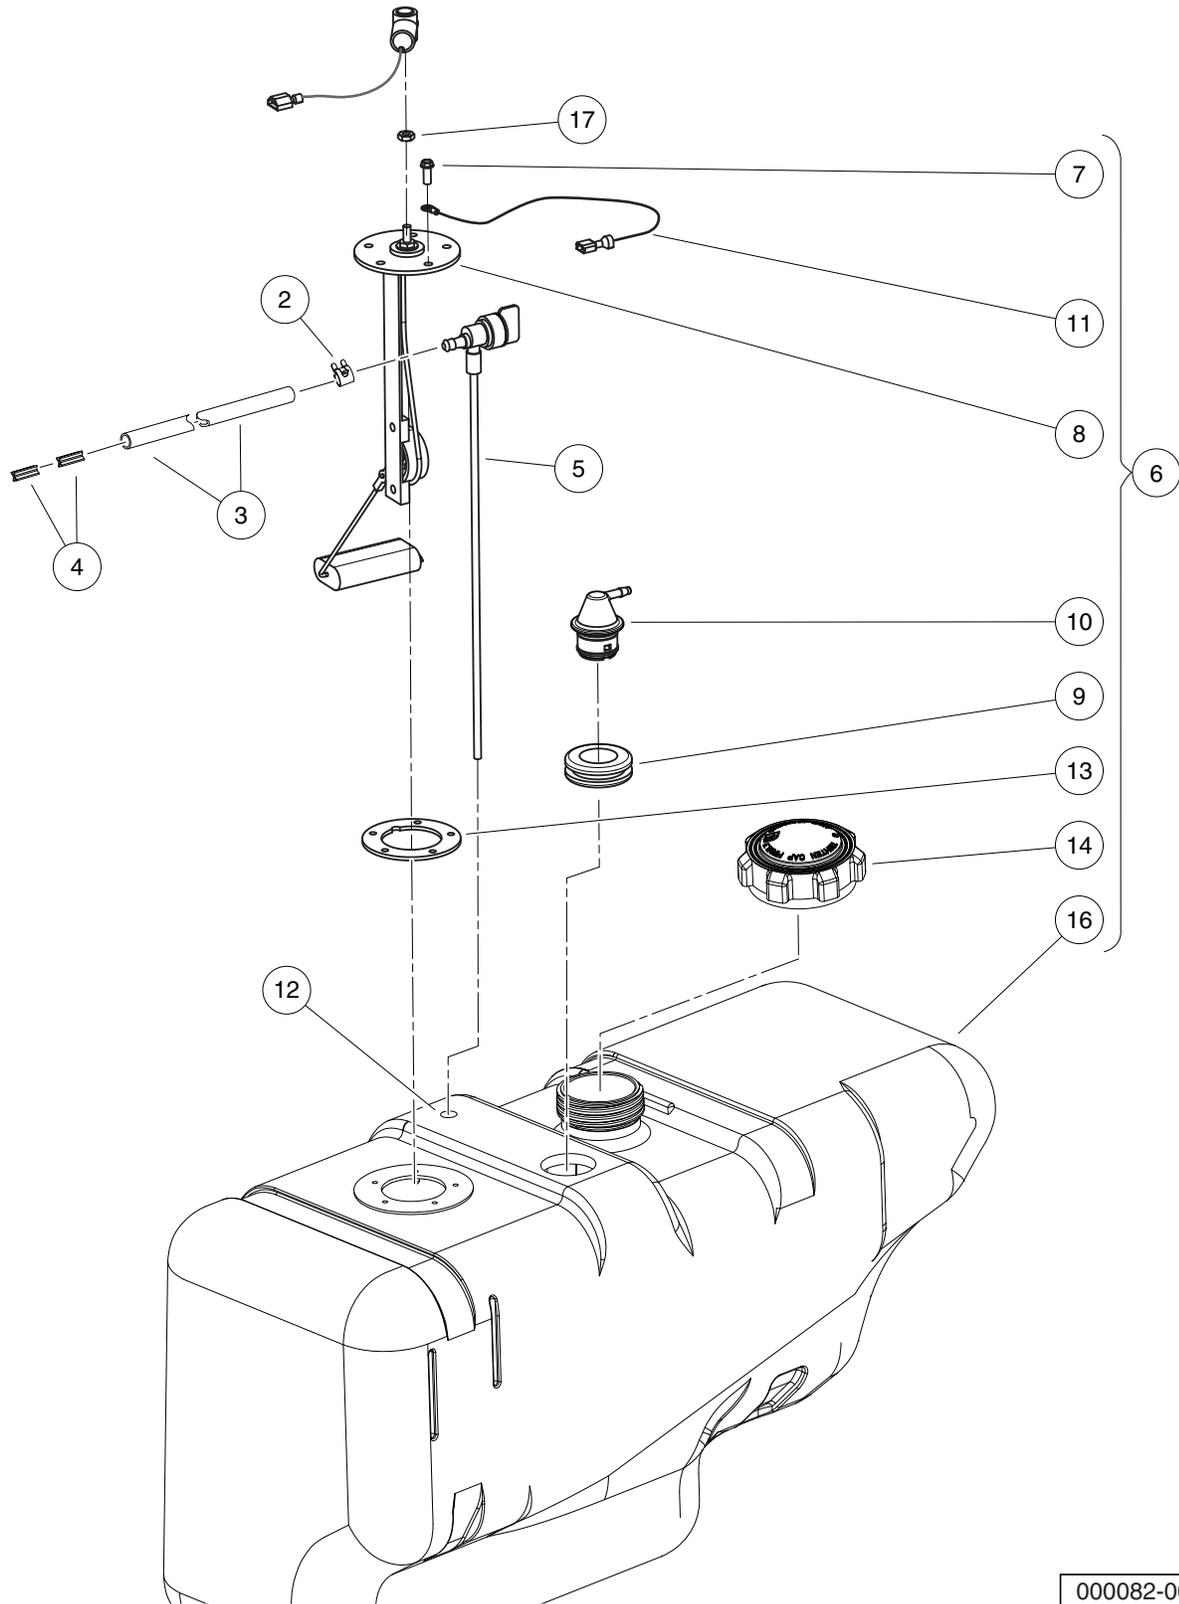


000082-003

FUEL TANK WITH FUEL LEVEL SENDING UNIT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016004	Tank Kit w/Sending Unit (includes items 2 through 6)	1
2	<u>1013746</u>	Clamp, 0.301 ID Hose	2
3	<u>1015137</u>	Fuel Line (available by the foot)	1
4	<u>101824401</u>	Vent Barb	2
5	101896901	Fuel Pickup w/Shut-Off Valve	1
6	<u>103651901</u>	Asm, Tank, Ds Utl W/su† Nano (includes items 7 through 16)	1
7	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	5
8	<u>1013462</u>	Sending Unit, Fuel Level *	1
9	<u>1015139</u>	Insulation Grommet	1
10	<u>1015143</u>	Vent, Fuel Tank	1
11	1015921	Wire Assembly #16 Black	1
12	<u>102406701</u>	Bushing, Line, Return	1
13	<u>102522001</u>	Gasket, Rubber	1
14	<u>103372101</u>	Cap, Fuel Tank, Gas, Ratchet	1
15	<u>103372302</u>	Fuel Pickup w/Shut-Off Valve, 288mm	1
16	103776901	Tank, Fuel, Top, W/su Nano	1
17	<u>8797</u>	Nut, #10-32 Brass Hex	1
		* Note: Must replace fuel sending unit gasket when servicing this component.	

9

G

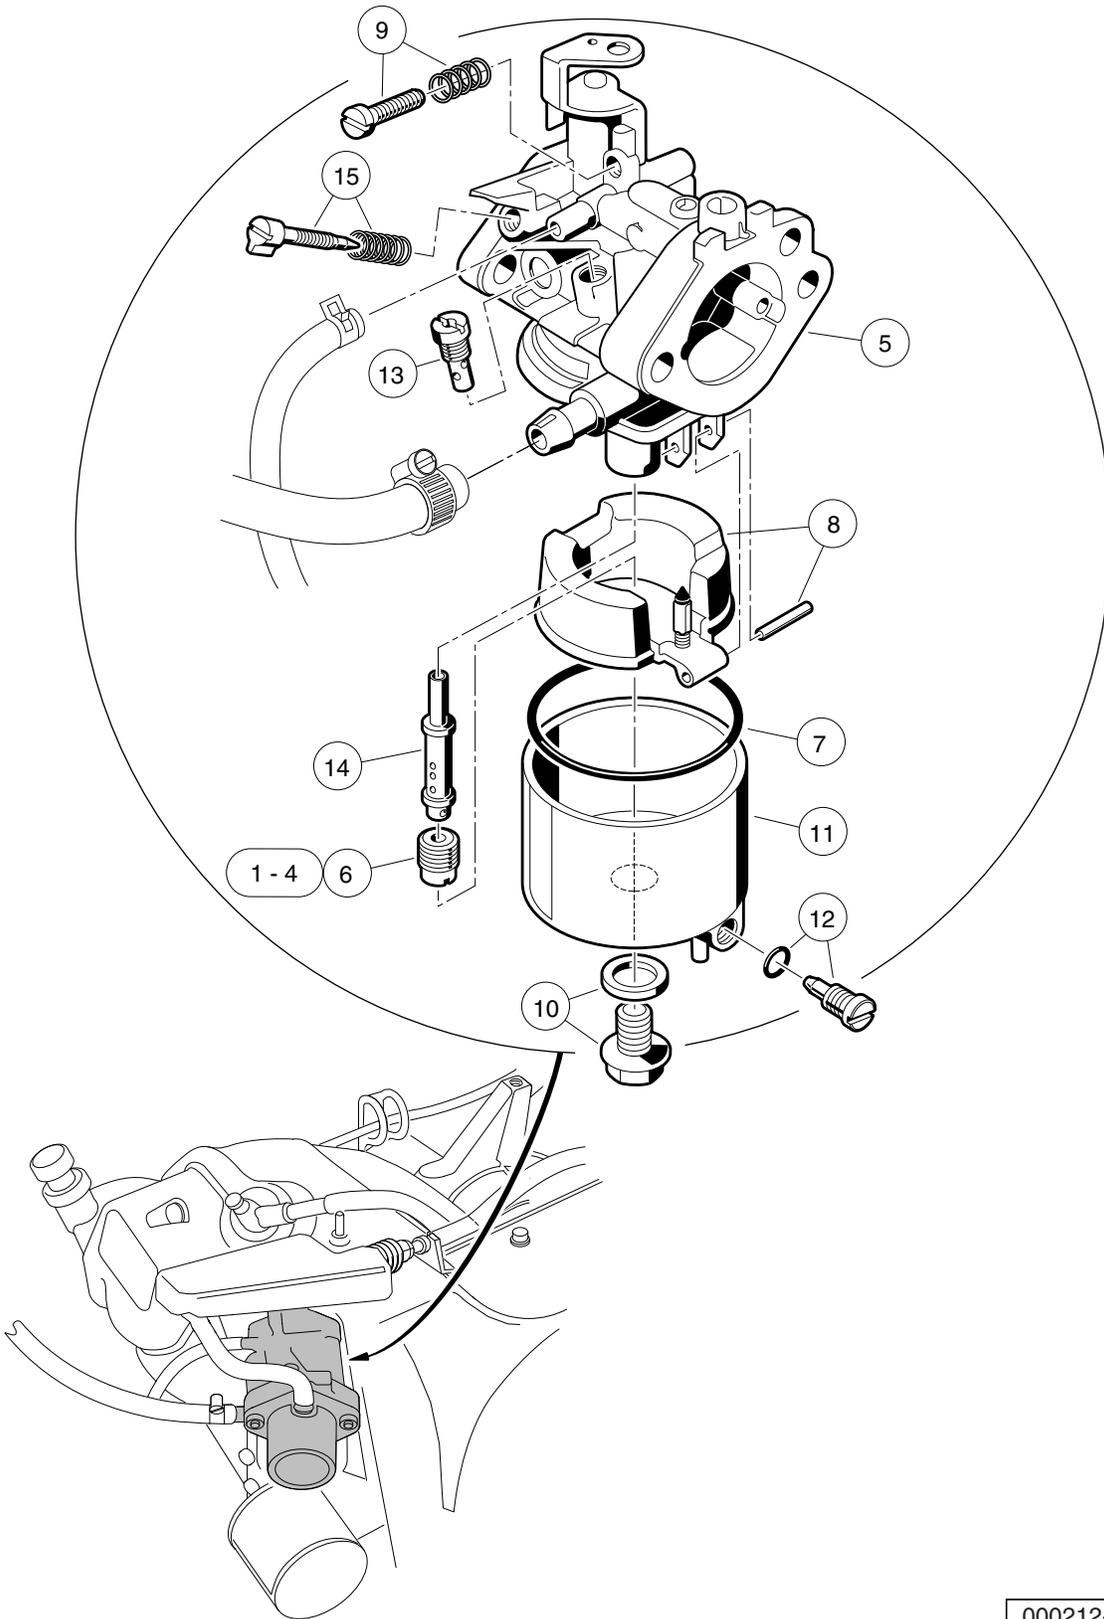


000212-001

CARBURETOR ASSEMBLY – FE350

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101642575</u>	Jet, Altitude, # 75	1
2	<u>101642578</u>	Jet, Altitude, # 78	1
3	<u>101642580</u>	Jet, Altitude, # 80	1
4	<u>101642582</u>	Jet, Altitude, # 82	1
5	<u>101905901</u>	Carburetor, FE350D (includes items 6 through 15)	1
6	<u>101642585</u>	Jet, Altitude, # 85	1
7	<u>1016437</u>	Gasket, Carburetor Bowl OHV	1
8	<u>1016486</u>	Float Assembly	1
9	<u>1016501</u>	Screw Assembly	1
10	<u>1016585</u>	Bolt	1
11	<u>1017461</u>	Chamber Assembly, Float (includes item 12)	1
12	<u>1016499</u>	Screw Assembly	1
13	<u>101973101</u>	Jet, #40 Pilot	1
14	<u>101973301</u>	Nozzle, Main	1
15	N/A	Assembly, Pilot Air Screw	1
<p>Note: <u>101642585</u> for 0 - 3,000 feet; <u>101642582</u> for 3,000 - 5,000 feet; <u>101642580</u> for 5,000 - 8,000 feet; <u>101642578</u> for 8,000 - 10,000 feet; <u>101642575</u> for 10,000 feet and higher.</p>			

9

G

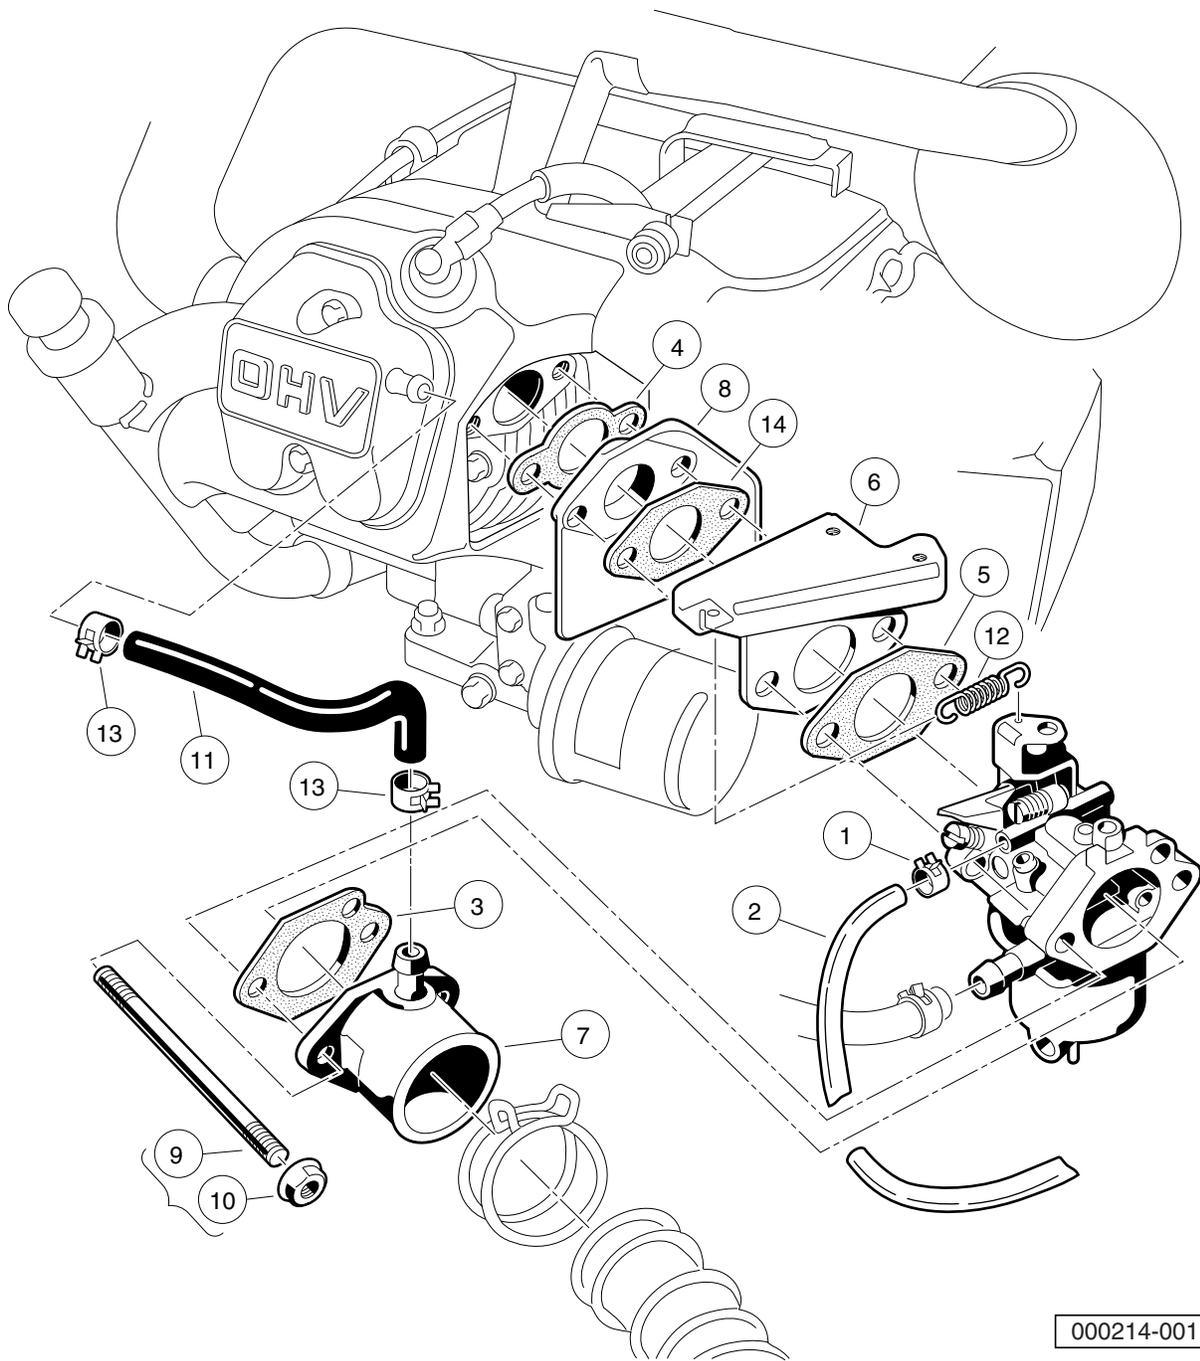


000214-001

CARBURETOR INSTALLATION – FE350

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013746</u>	Clamp, 0.301 ID Hose	1
2	<u>1015137</u>	Fuel Line (available by the foot)	1
3	<u>1016438</u>	Gasket, Carb To Intake Manifold	1
4	<u>1016440</u>	Gasket, Engine to Insulator	1
5	<u>1016441</u>	Gasket, Sprg Brkt To Carb OHV	1
6	<u>1016444</u>	Bracket, Throttle Spring Return	1
7	1016480	Pipe, Intake Manifold	1
8	101648102	Insulator, Carburetor	1
9	<u>101649002</u>	Stud, M6-1.00 Two-Ended	2
10	1016547	Nut, M6 Flange	2
11	<u>1016572</u>	Tube, Crankcase Vent	1
12	<u>1016582</u>	Spring, Throttle Return	1
13	<u>1017466</u>	Clamp	2
14	<u>101973401</u>	Gasket, Insulator To Bracket	1

9
G

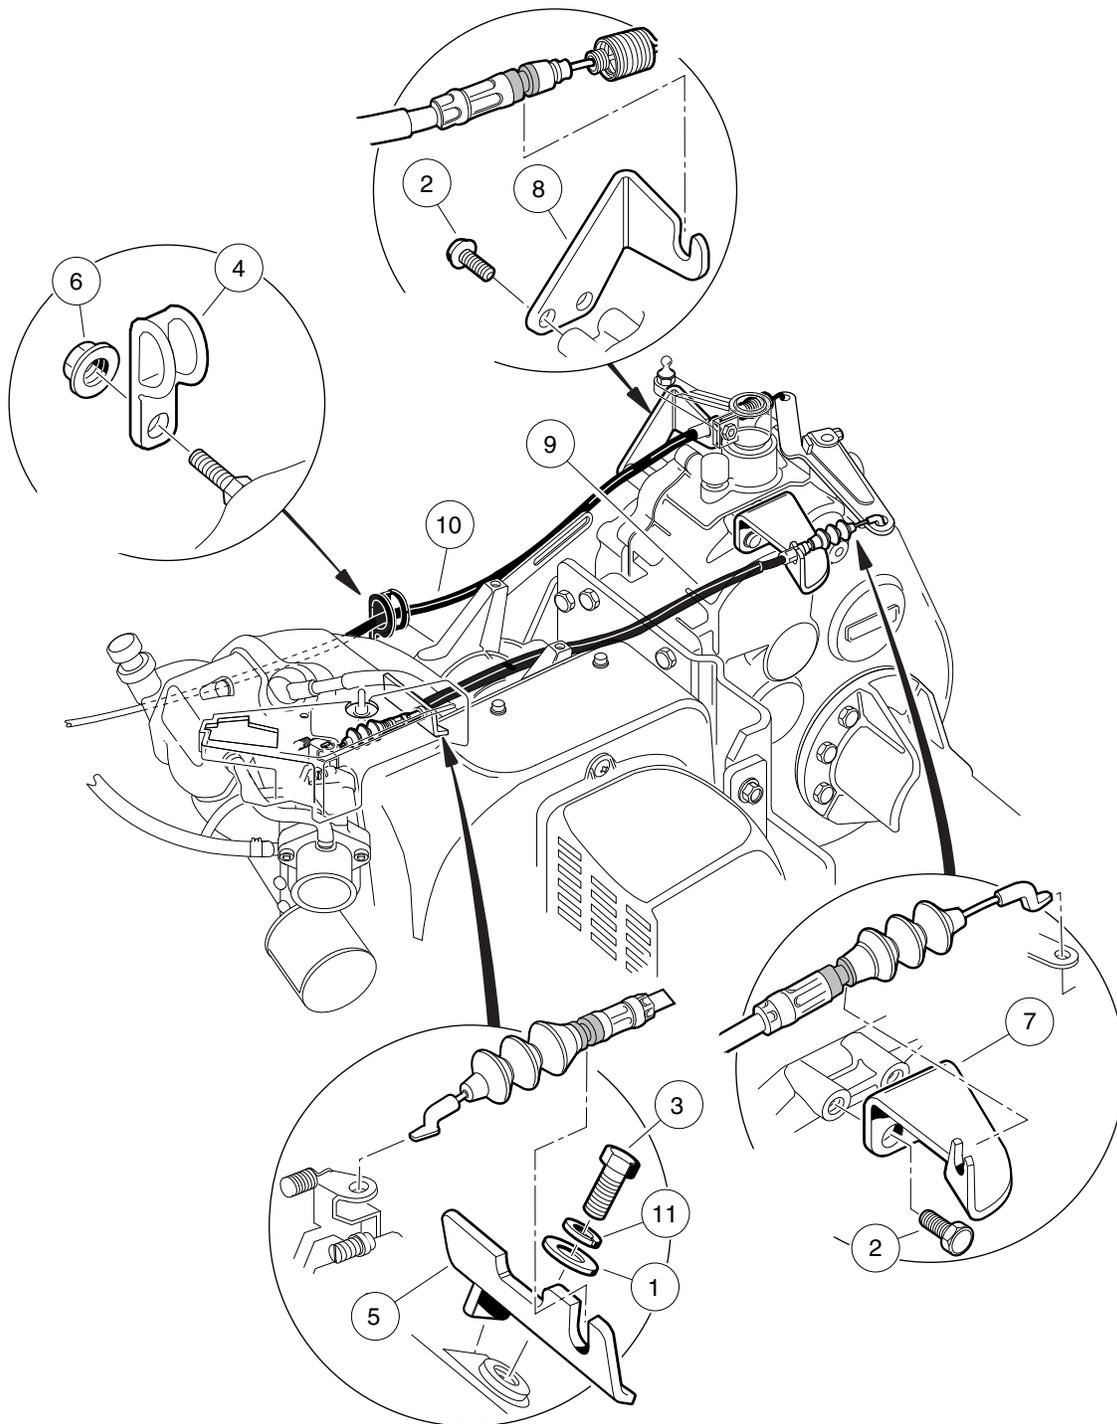


000215-001

GOVERNOR AND ACCELERATOR CABLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011697</u>	Washer, 5/16 Flat	1
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4
3	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	1
4	<u>1013700</u>	Clamp	2
5	<u>101584502</u>	Bracket, Governor Cable Snap-In	1
6	<u>1016546</u>	Nut	2
7	<u>101832202</u>	Bracket, Rear Governor Cable Snap-In	1
8	<u>101832302</u>	Bracket, Rear Accelerator Cable Snap-In	1
9	<u>102336001</u>	Cable, Governor, Snap-In	1
10	<u>102336101</u>	Cable, Accelerator, Snap-In	1
11	<u>7174</u>	Lockwasher, 5/16 Split	1

9

G

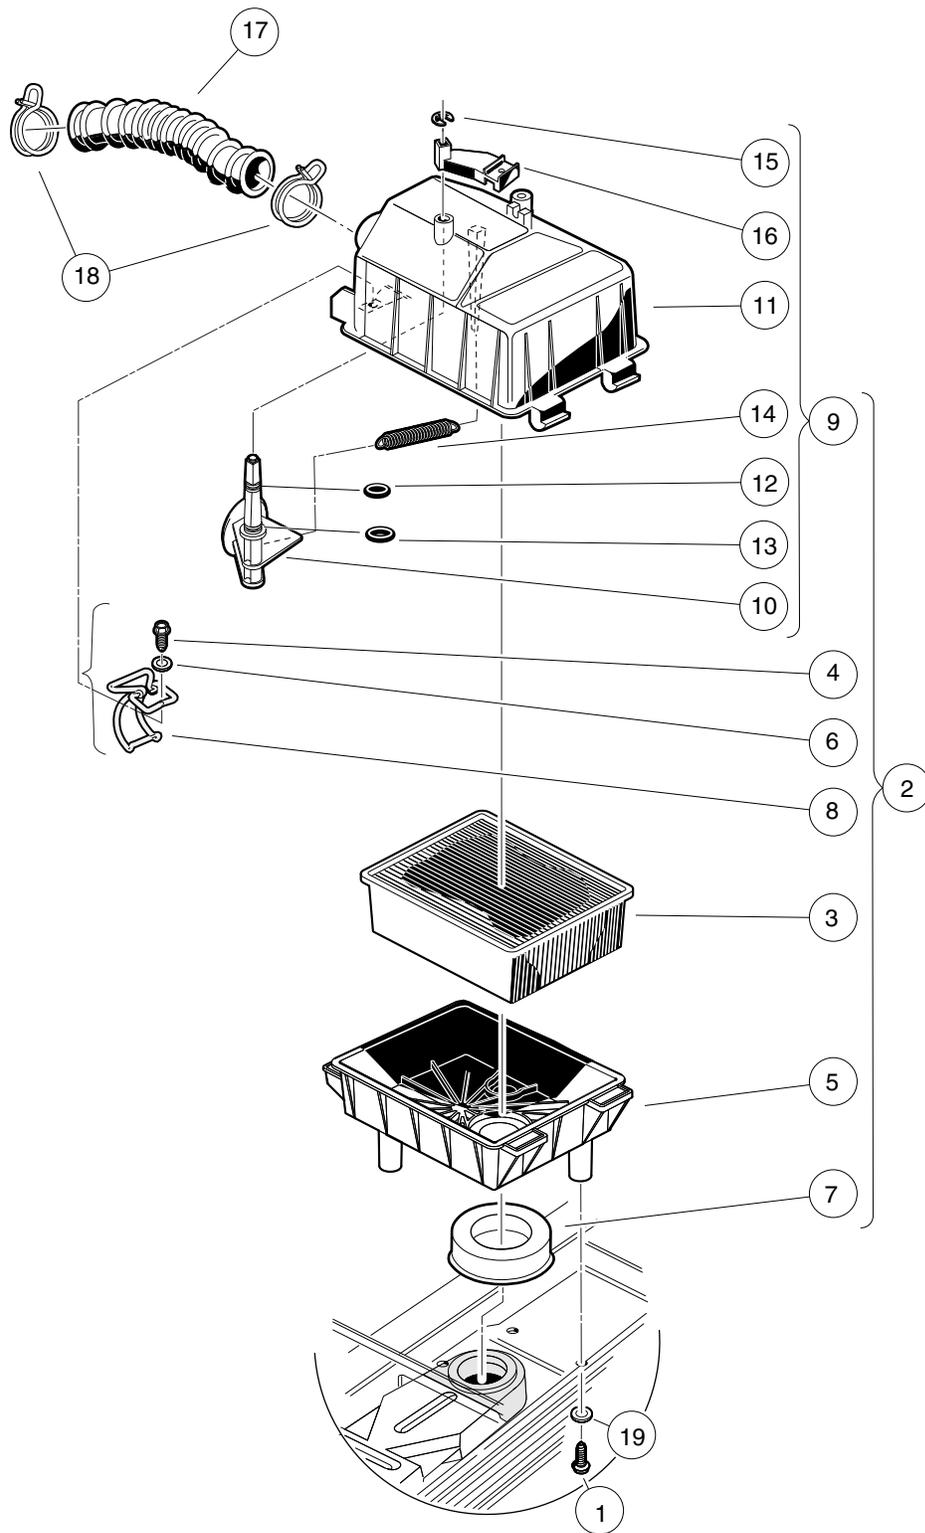


000332-001

AIR BOX AND INTAKE HOSE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	3
2	<u>101821501</u>	Assembly, Air Box (includes items 3 through 9)	1
3	<u>1015426</u>	Filter, Air	1
4	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	2
5	<u>101811901</u>	Bottom, Air Box	1
6	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	2
7	<u>101921501</u>	Seal, Intake	1
8	<u>101925701</u>	Latch, Wireform	2
9	<u>101972801</u>	Top Assy, Air Box (includes items 10 through 16)	1
10	N/A	Valve, Choke	1
11	101811801	Top, Air Box	1
12	N/A	O-Ring, 5/16	1
13	N/A	O-Ring, 3/8	1
14	<u>101812301</u>	Spring, Extension Return	1
15	<u>101813001</u>	Retaining Ring 0.25, Shaft	1
16	<u>101917601</u>	Lever, Choke	1
17	<u>101837101</u>	Hose, Air Intake	1
18	<u>101971301</u>	Clamp, 1.58" ID Hose	2
19	<u>332</u>	Washer, 1/4 Type A Narrow Flat	3

9

G

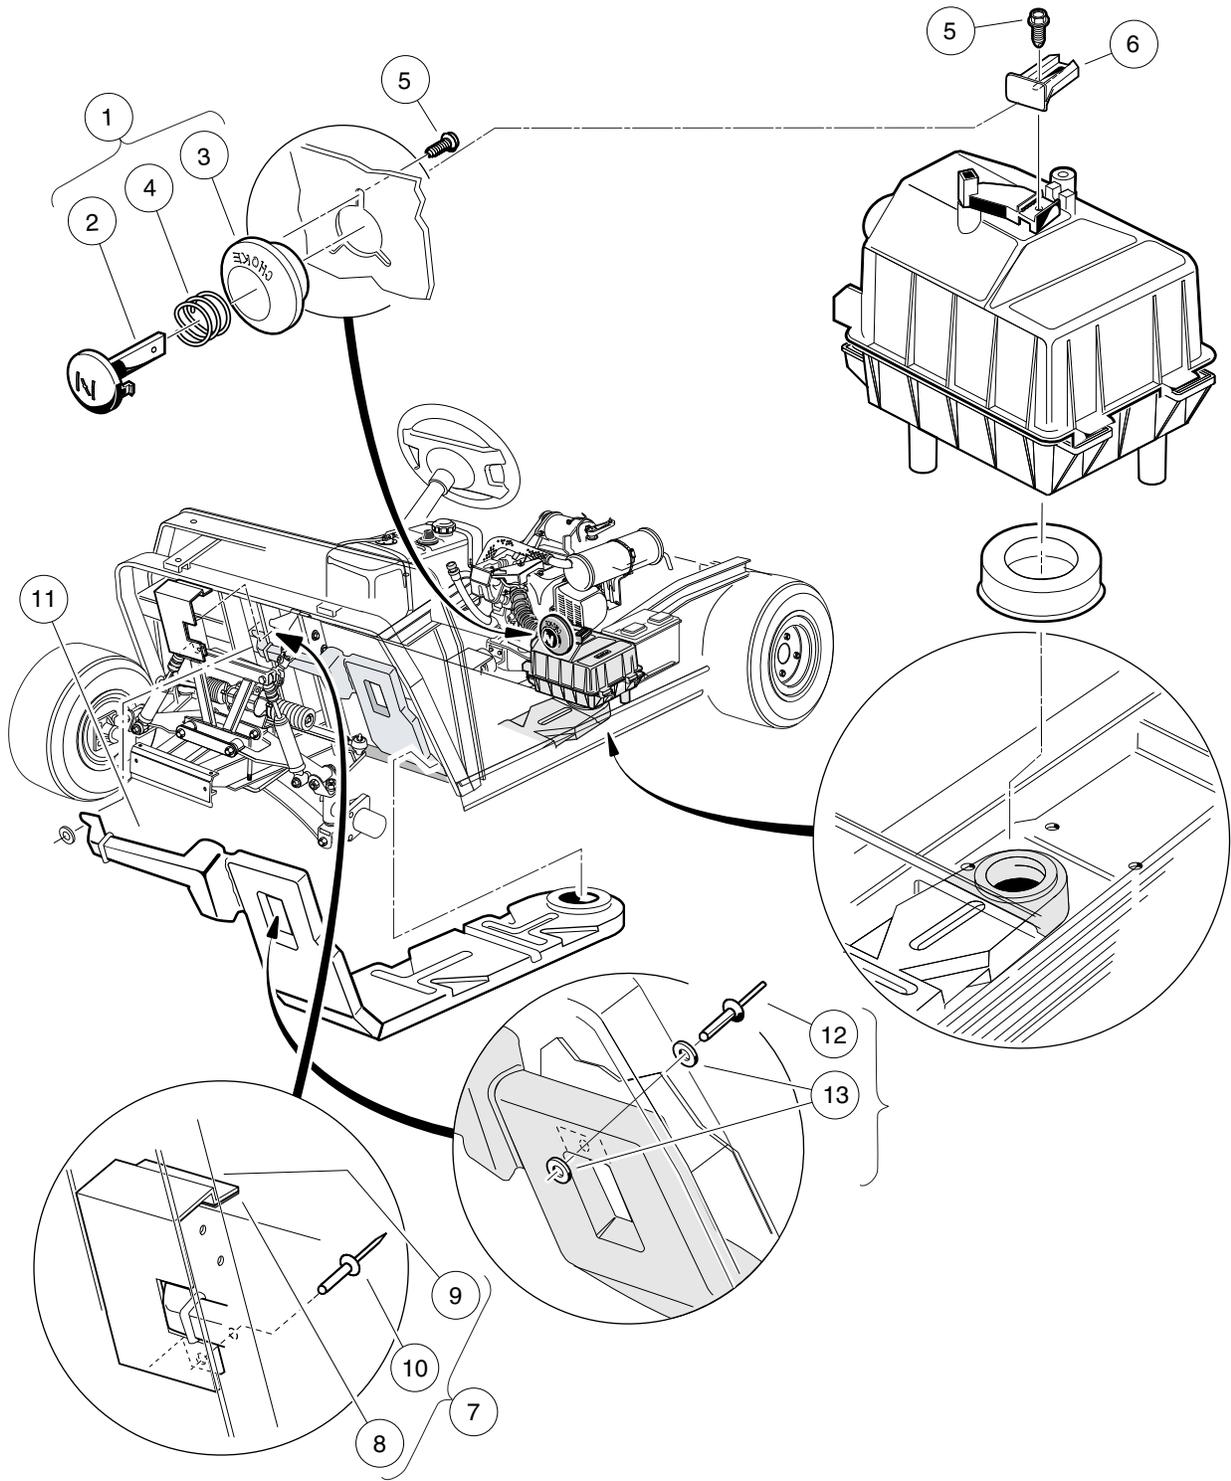


000338-001

INTAKE SYSTEM – TURF/CARRYALL 1

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101805701</u>	Button Assembly, Choke (includes items 2 through 4)	1
2	<u>101811401</u>	Lever, Choke	1
3	<u>101811501</u>	Guide, Choke Lever	1
4	<u>101856201</u>	Compression Spring	1
5	<u>101850301</u>	Screw, #12-16 X 0.50 Washer-Head Hi-Lo	4
6	<u>101917701</u>	Choke Positioner	1
7	<u>102190702</u>	Kit, Air Duct Shield (includes items 8 through 10)	1
8	<u>102185401</u>	Tape, 3M VHB 4950	1
9	N/A	Shield, Air Duct	1
10	<u>7973</u>	Rivet, 3/16 X .400 Blind	1
11	<u>103520301</u>	Duct, Air Intake, Ds	1
12	<u>1606</u>	Rivet, 3/16 X .500 Alum Pop	2
13	<u>183</u>	Washer, #10 Type A Flat	4

9

G

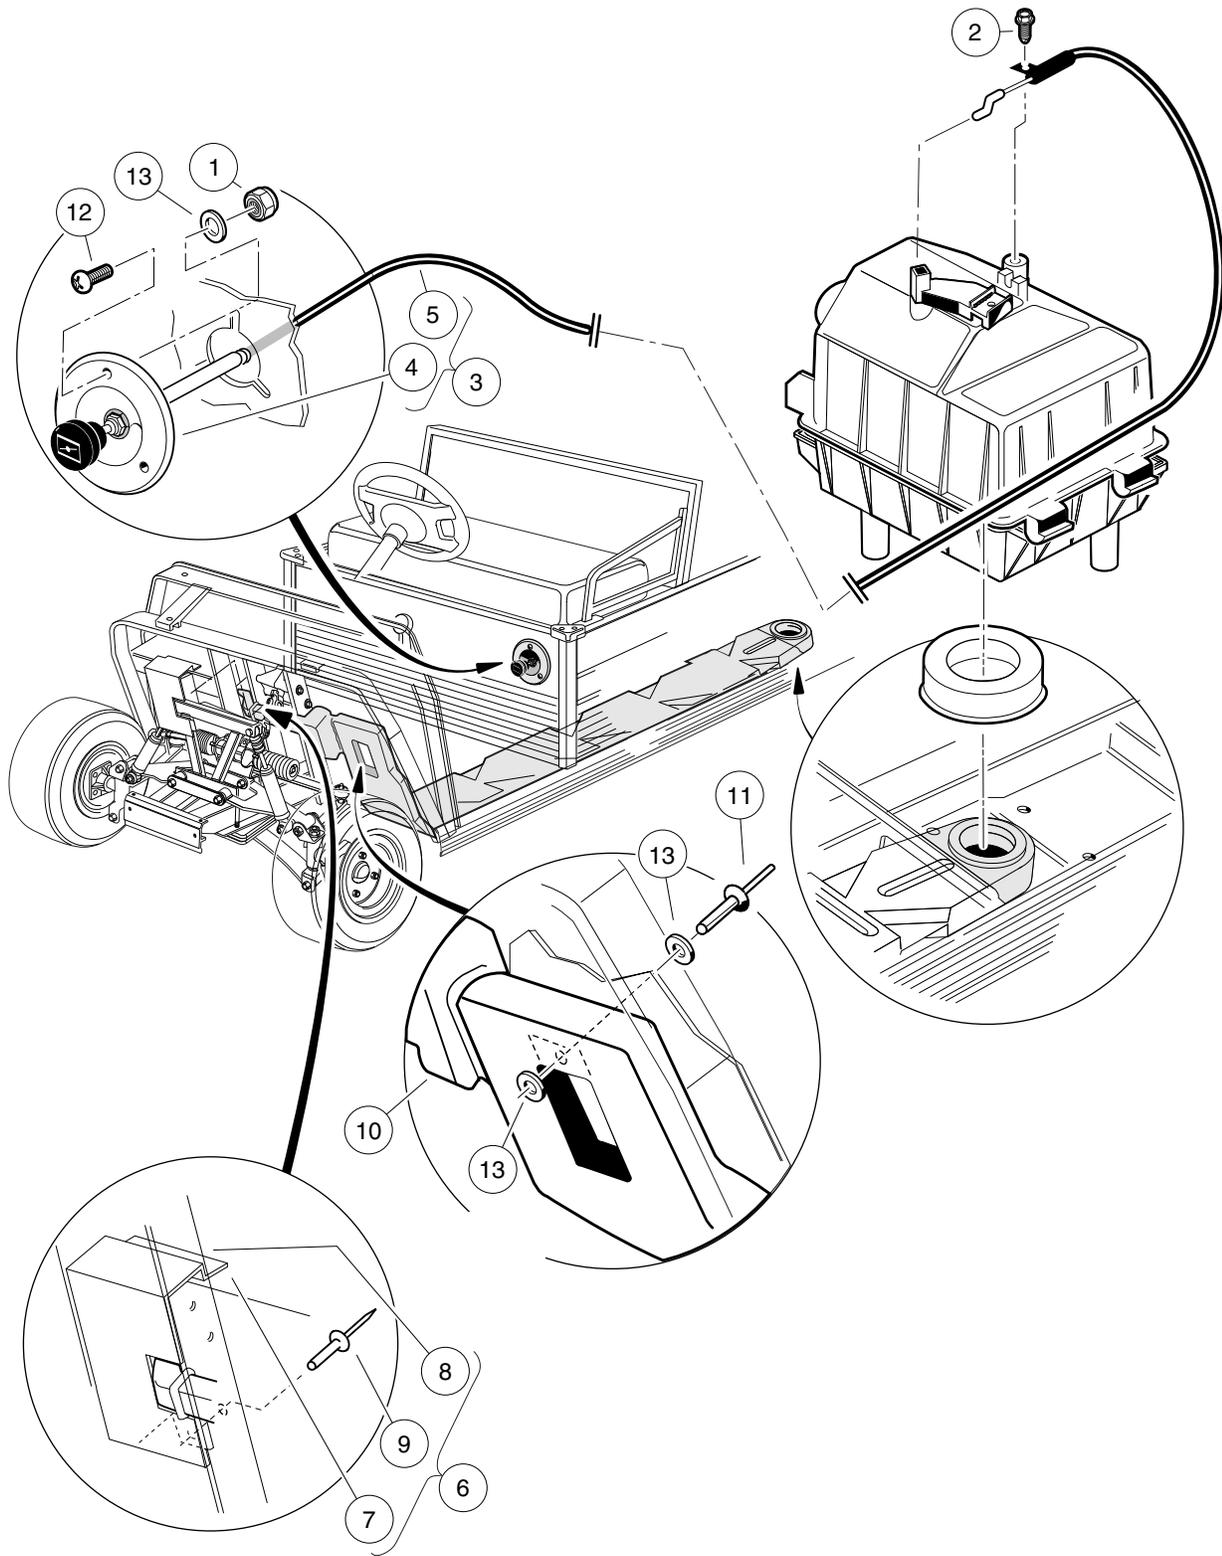


000338-002

INTAKE SYSTEM – TURF/CARRYALL 2, 2, 252, AND CARRYALL 2 PLUS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012438</u>	Locknut, #10-24 Nylon Insert	3
2	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	1
3	<u>101926801</u>	Cable, Choke (includes items 4 and 5)	1
4	<u>101933701</u>	Bezel, Choke Cable	1
5	N/A	Choke Cable without Bezel, Short	1
6	<u>102190702</u>	Kit, Air Duct Shield (includes items 7 through 9)	1
7	<u>102185401</u>	Tape, 3M VHB 4950	1
8	N/A	Shield, Air Duct	1
9	<u>7973</u>	Rivet, 3/16 X .400 Blind	1
10	<u>103520401</u>	Duct, Air Intake, Ca li	1
11	<u>1606</u>	Rivet, 3/16 X .500 Alum Pop	2
12	<u>1631</u>	Screw, #10-24 X 0.75 Phillips Pan-Head	3
13	<u>183</u>	Washer, #10 Type A Flat	7

9
G

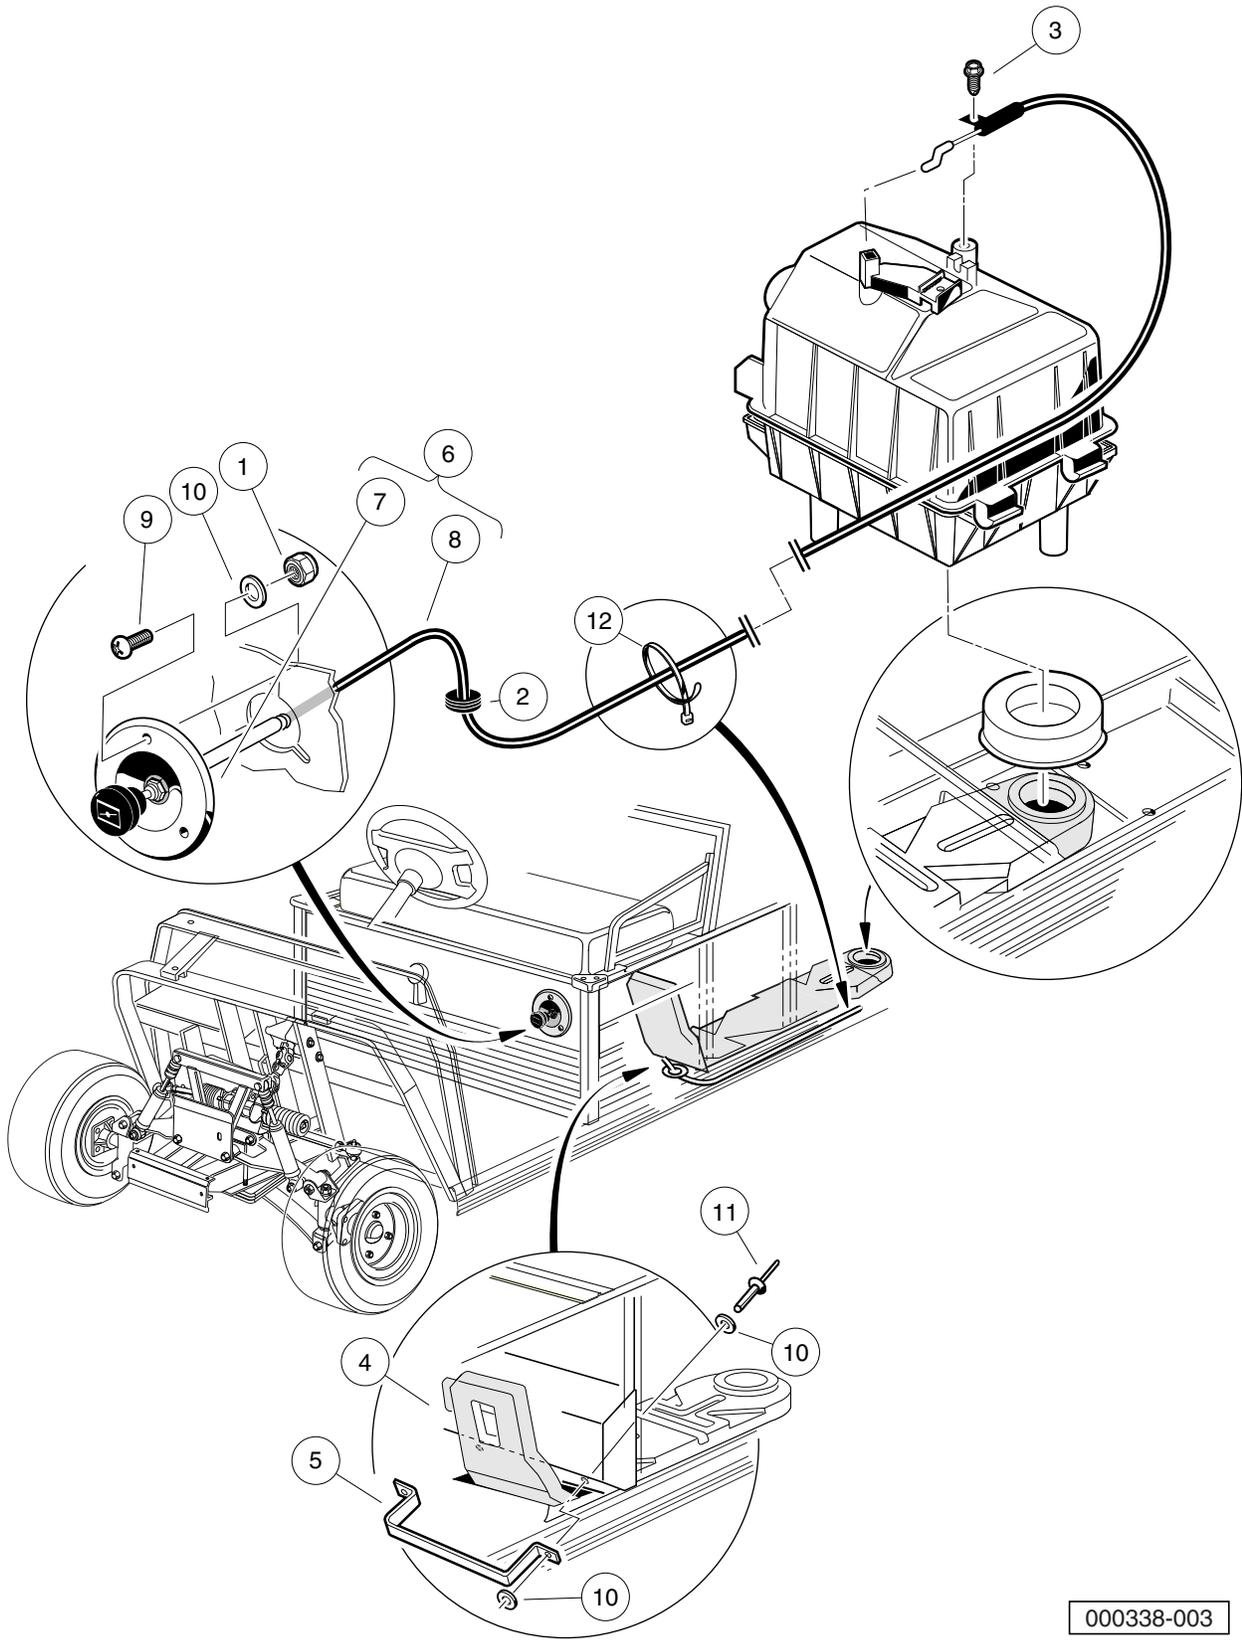

000338-003

INTAKE SYSTEM – TURF/CARRYALL 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012438</u>	Locknut, #10-24 Nylon Insert	3
2	<u>1015139</u>	Insulation Grommet	1
3	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	1
4	<u>101811301</u>	Duct, Intake	1
5	<u>101825701</u>	Retaining Bracket	1
6	<u>101926802</u>	Cable, Choke (includes items 7 and 8)	1
7	<u>101933701</u>	Bezel, Choke Cable	1
8	N/A	Choke Cable without Bezel, Long	1
9	<u>1631</u>	Screw, #10-24 X 0.75 Phillips Pan-Head	3
10	<u>183</u>	Washer, #10 Type A Flat	7
11	<u>7973</u>	Rivet, 3/16 X .400 Blind	2
12	<u>8639</u>	Tie Wrap, 11" Nylon	2

9
G


9

G

EXHAUST SYSTEM

10

G

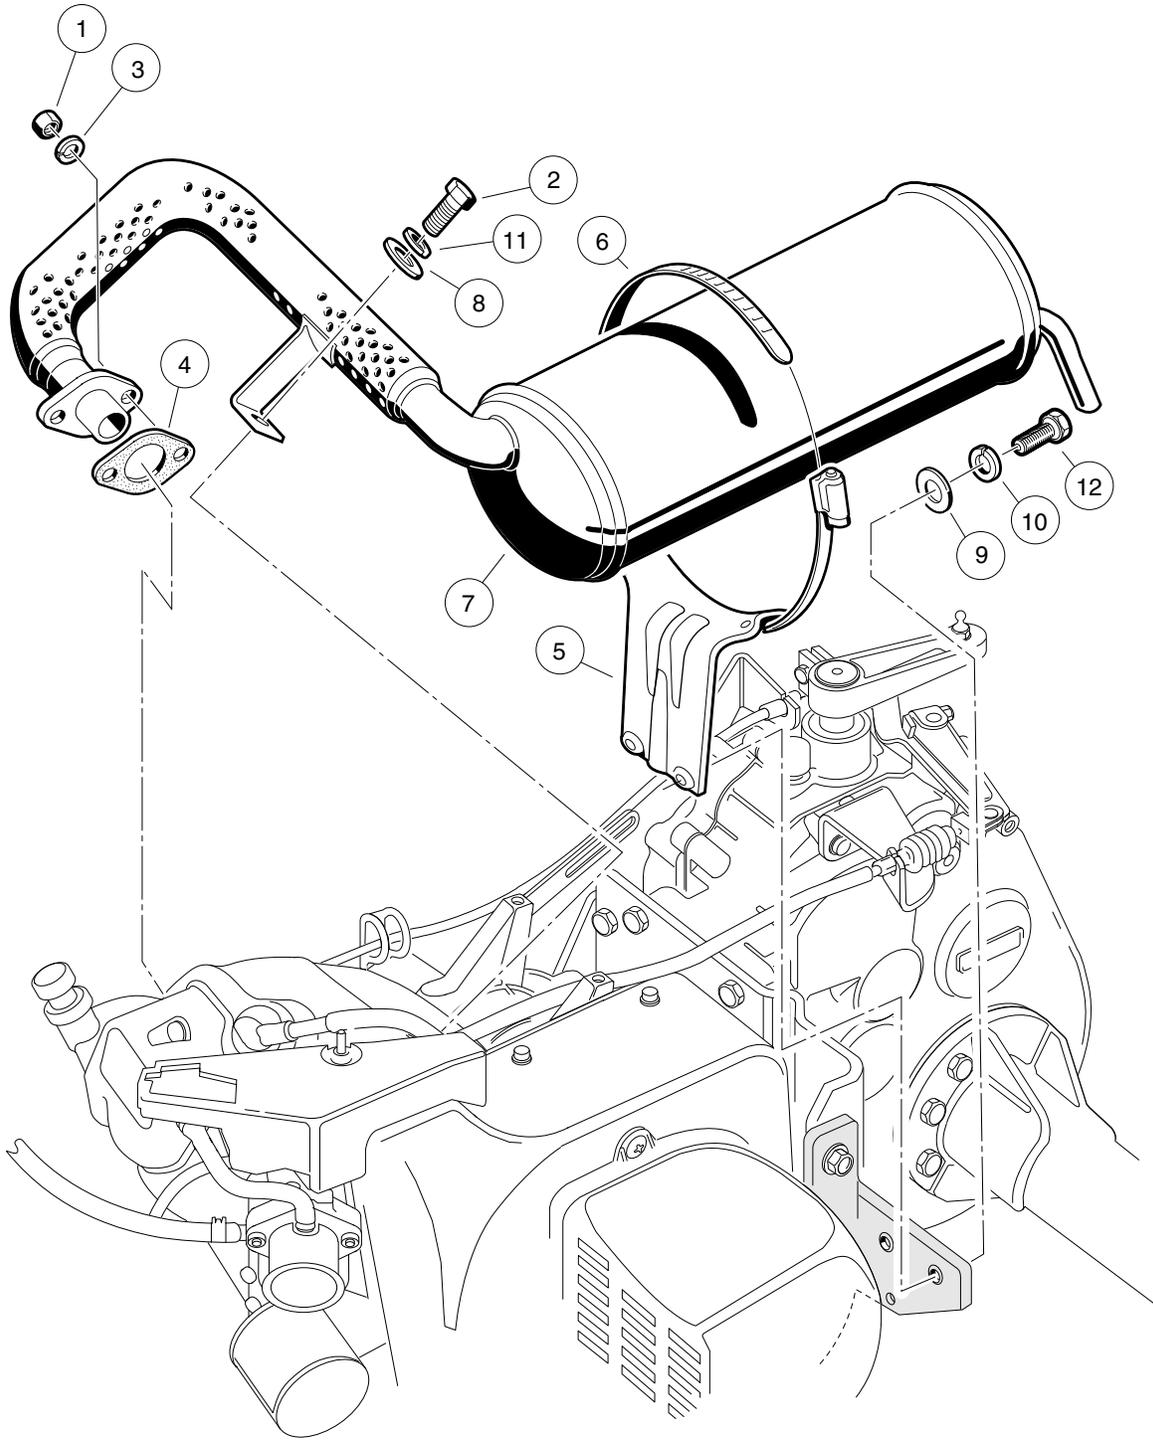


000208-001

EXHAUST SYSTEM – TURF/CARRYALL 1 WITH FE350 ENGINE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012528</u>	Nut, M8-1.25 Hex	2
2	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	1
3	<u>1013734</u>	Lockwasher, 8mm Split	2
4	<u>1015330</u>	Gasket, Exhaust	1
5	<u>1015814</u>	Bracket, Muffler Mounting	1
6	<u>1017689</u>	Clamp, 5" Muffler Hose	1
7	<u>102585901</u>	Exhaust System, FE350, Precedent	1
8	<u>1241</u>	Washer, 5/16 Type A Flat	1
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
10	<u>451</u>	Lockwasher, 1/4 Split	2
11	<u>7174</u>	Lockwasher, 5/16 Split	1
12	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2

10

G

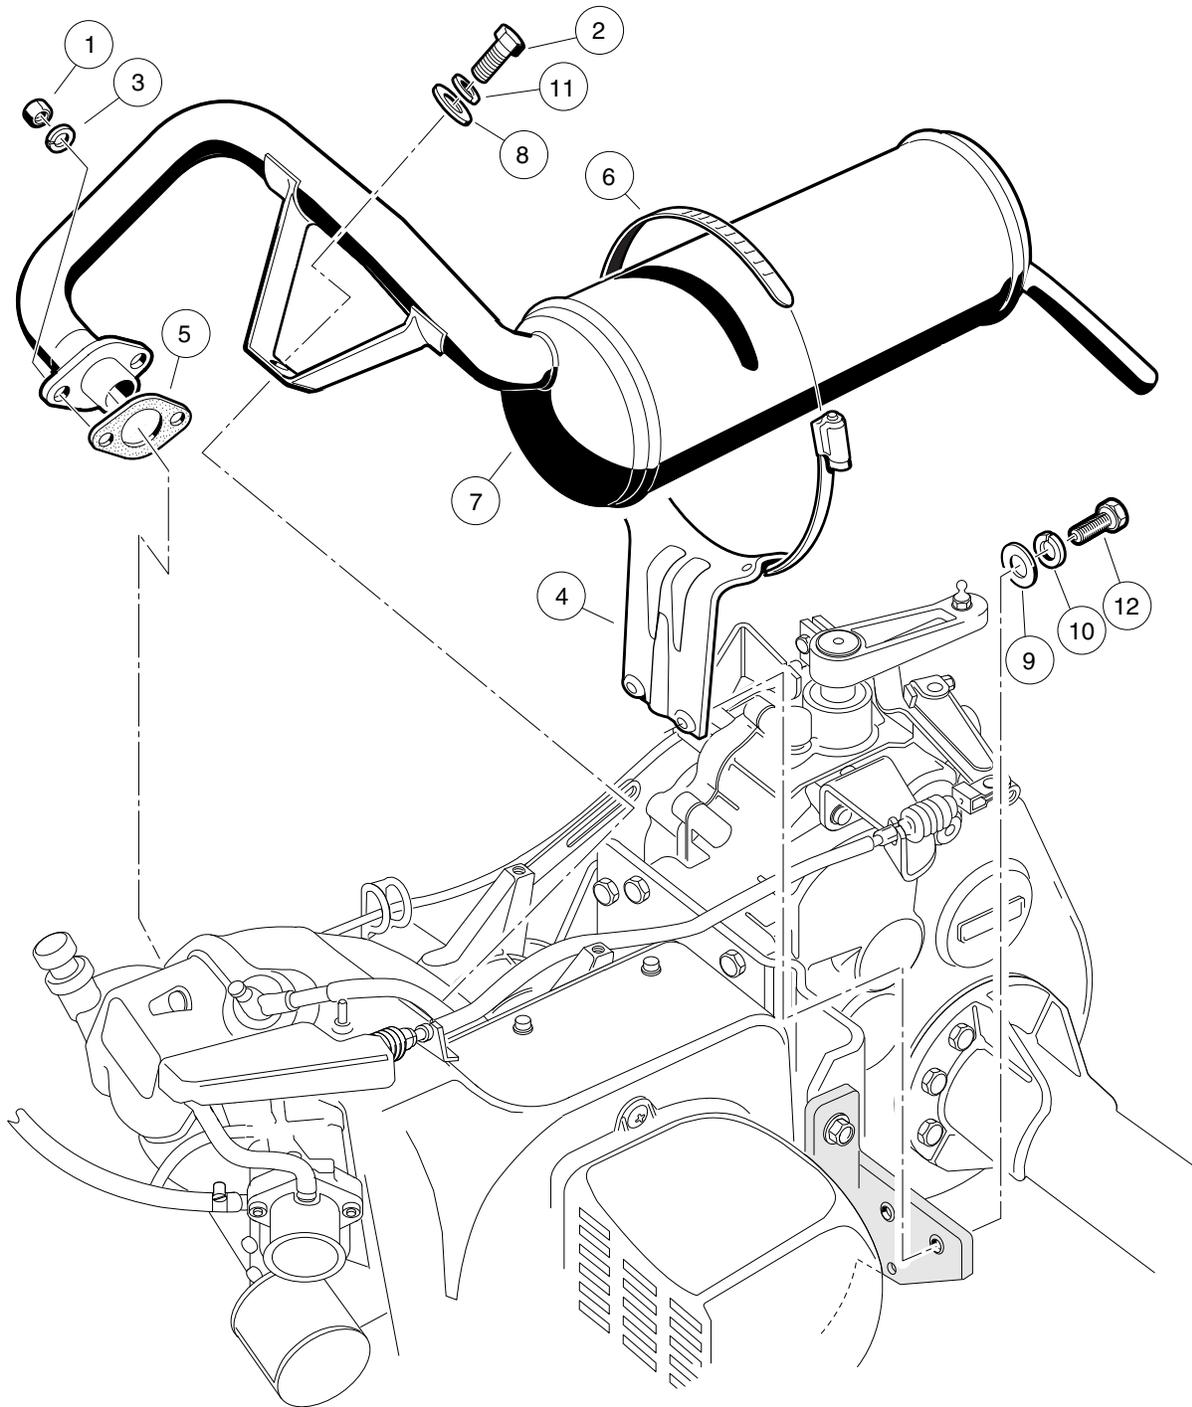

000209-001

EXHAUST SYSTEM – TURF/CARRYALL 2, 252, 6 AND CARRYALL 2 PLUS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012528</u>	Nut, M8-1.25 Hex	2
2	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	1
3	<u>1013734</u>	Lockwasher, 8mm Split	2
4	<u>1015814</u>	Bracket, Muffler Mounting	1
5	<u>1016904</u>	Gasket, Exhaust	1
6	1017689	Clamp, 5" Muffler Hose	1
7	<u>101859401</u>	Exhaust System, FE350	1
8	<u>1241</u>	Washer, 5/16 Type A Flat	1
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
10	<u>451</u>	Lockwasher, 1/4 Split	2
11	<u>7174</u>	Lockwasher, 5/16 Split	1
12	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2

10
G



10

G

TORQUE CONVERTER

11

G

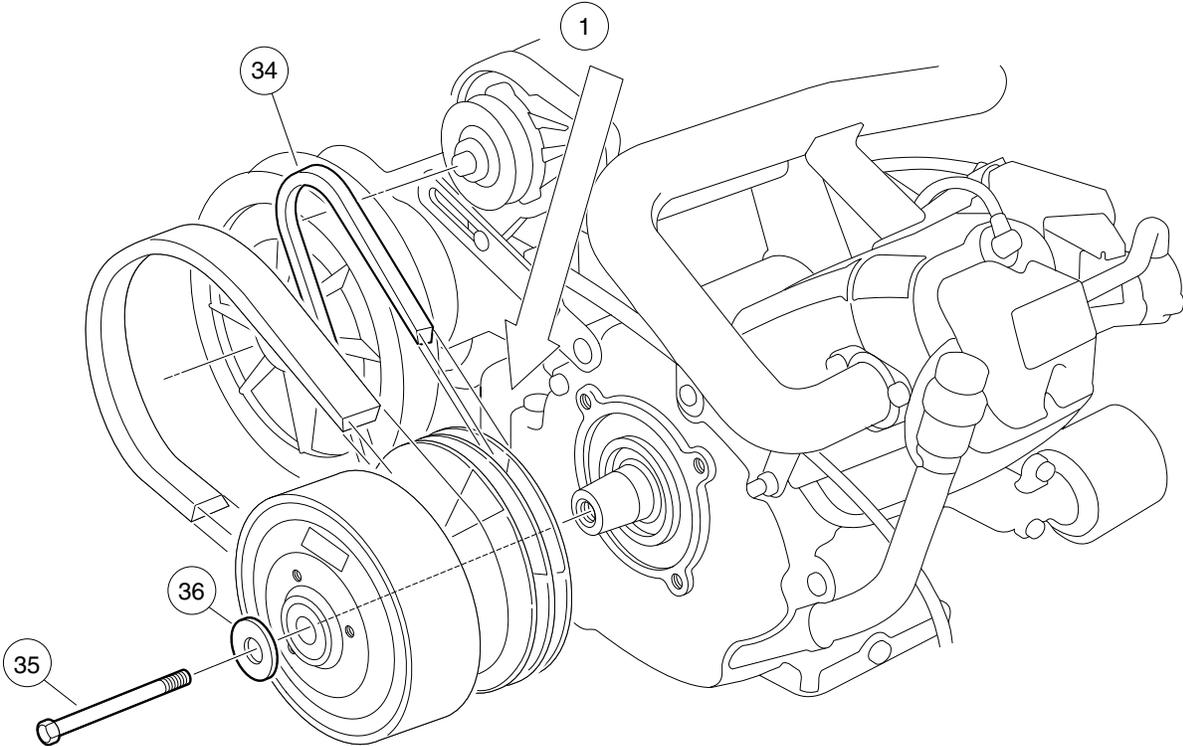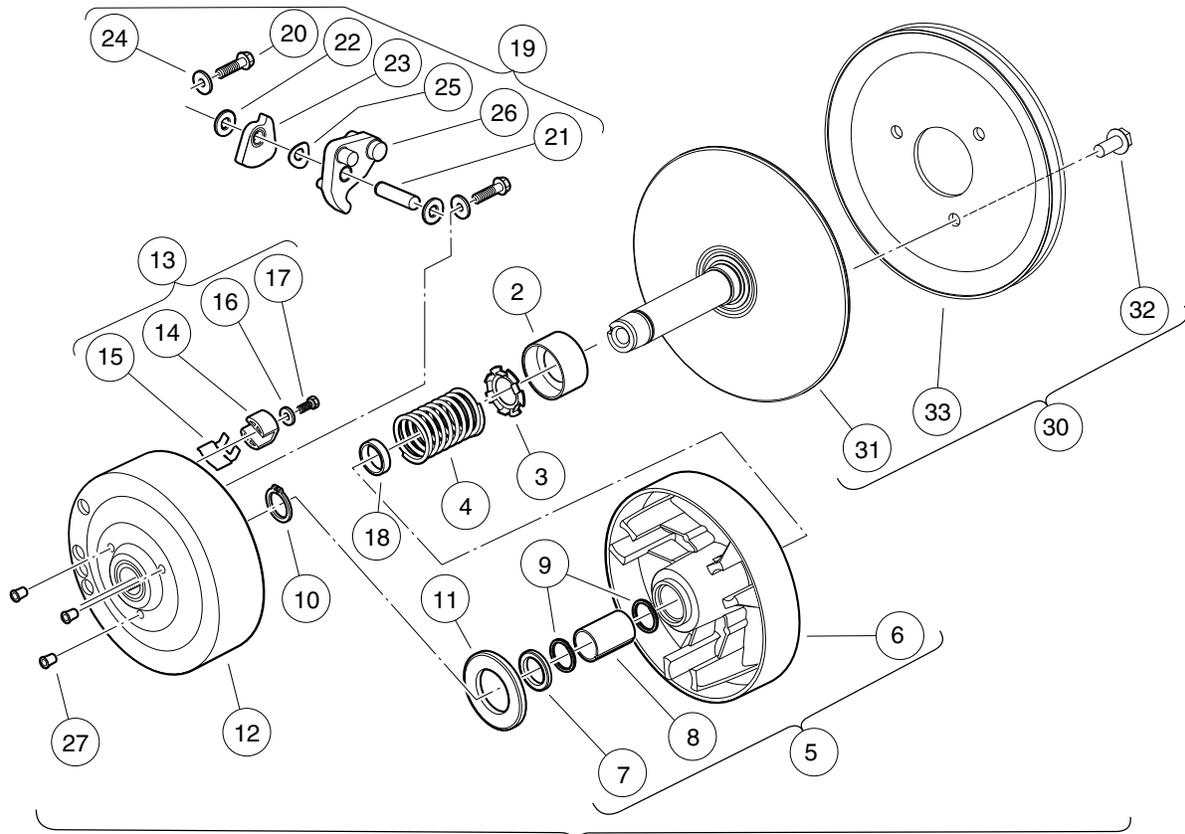



000217-001

DRIVE CLUTCH – TURF/CARRYALL 1, 2, AND 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101833902</u>	Clutch, Drive (includes items 2 through 28)	1
2	1014049	Bearing, Idler	1
3	<u>1014050</u>	Retainer, Spring	1
4	<u>1014051</u>	Spring, Drive Clutch	1
5	1014052	Movable-Face Assembly (includes items 6 through 8)	1
6	N/A	Drive Clutch Movable Face	1
7	<u>1014055</u>	Retainer	1
8	N/A	Bushing, Split, Drive Clutch	1
9	<u>1014056</u>	Ring, Spiral Backup	2
10	<u>1014057</u>	Ring, 0.810" Internal Retaining	1
11	1014058	Thrust Washer	1
12	1014059	Drive Hub Assy, Drive Clutch	1
13	<u>1014453</u>	Kit, Drive Clutch Button (includes items 14 through 17)	1
14	<u>1014062</u>	Driver, Drive Clutch	3
15	<u>1014287</u>	Spring, Drive Button	3
16	<u>183</u>	Washer, #10 Type A Flat	3
17	<u>8450</u>	Screw, #10-24 X 0.50 Hex-Head	3
18	<u>1016289</u>	Spacer, Fixed Face Shaft	1
19	<u>1016801</u>	Kit, Drive Clutch Weight (includes items 20 through 26)	1
20	<u>1014063</u>	Screw, 1/4-20 X 1.00 Hex Head	6
21	N/A	Pin, 0.3752 X 1.50 Dowel	3
22	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	6
23	N/A	Clutch Weight, Secondary	3
24	N/A	Washer	6
25	<u>1016201</u>	Washer, Wave	3
26	N/A	Weight, Primary	3
27	<u>101925601</u>	Plug, Drive Clutch	3
28	<u>101929802</u>	Kit, Fxd Face Dr Asm Fe290/350 (includes items 29 and 30)	1
29	N/A	Desiccant Bag (Not Shown)	1
30	101929801	Assembly, Fixed-Face Drive (includes items 31 through 33)	1
31	N/A	Fixed Face Assembly, Drive Clutch	1
32	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	3
33	N/A	Pulley, Clutch	1
34	<u>101916701</u>	V-Belt	1
35	<u>103345701</u>	Screw 3/8-24x5.5 Hex Loc Ptch	1
36	<u>808</u>	Washer, 3/8 Type B Flat	1
Note: Item 29 not shown.			

11

G

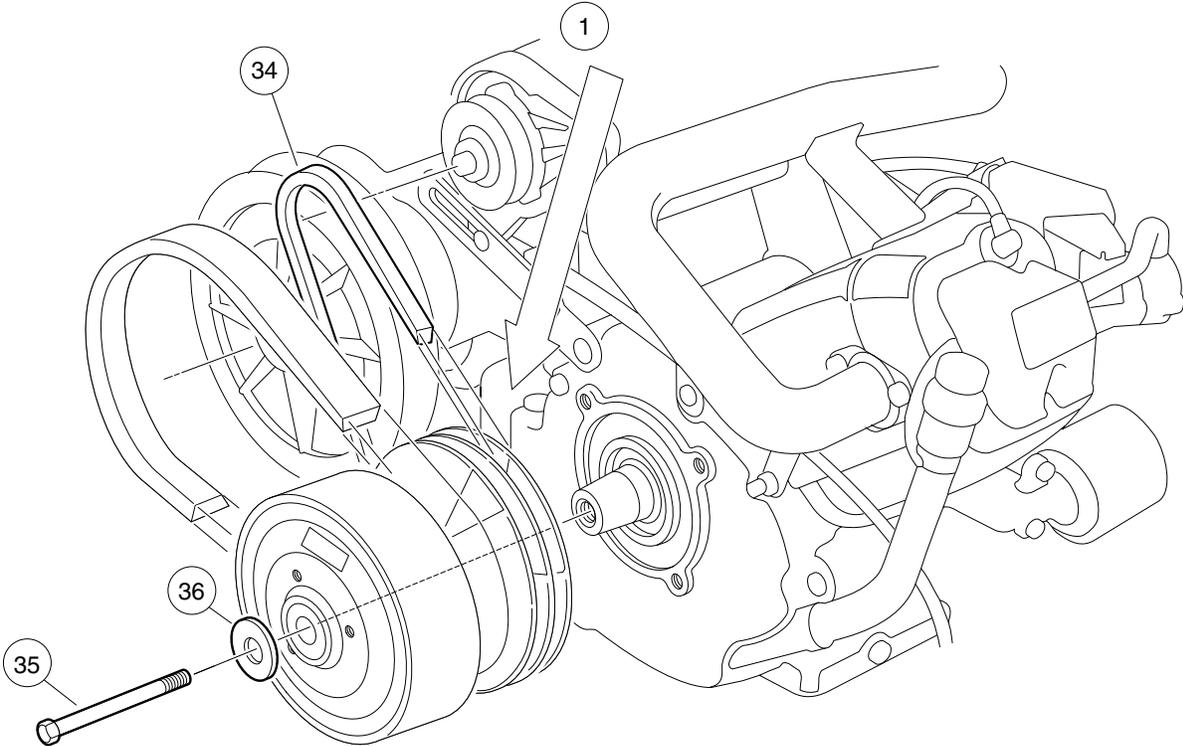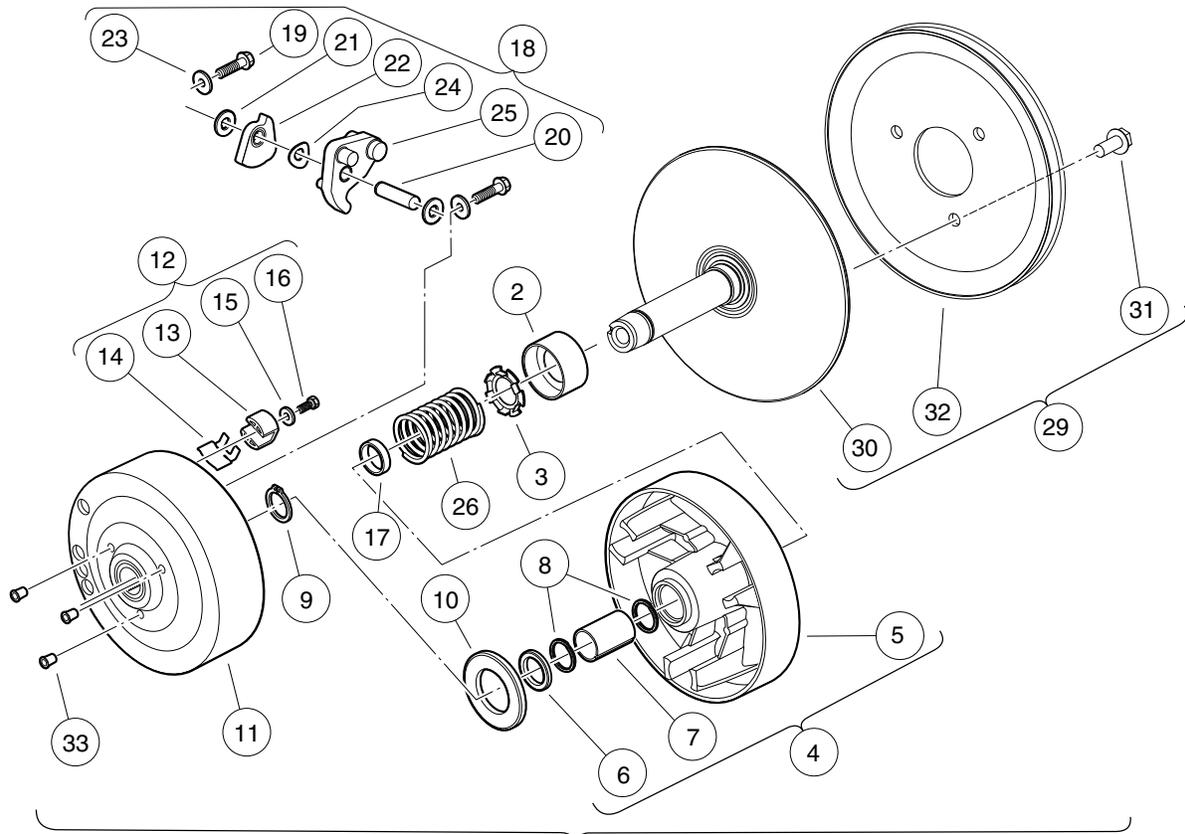


000217-002

DRIVE CLUTCH – CARRYALL 2 PLUS, AND TURF/CARRYALL 6

11

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101833904</u>	Assembly, Drive Clutch (includes items 2 through 33)	1
2	1014049	Bearing, Idler	1
3	<u>1014050</u>	Retainer, Spring	1
4	1014052	Movable-Face Assembly (includes items 5 through 7)	1
5	N/A	Drive Clutch Movable Face	1
6	<u>1014055</u>	Retainer	1
7	N/A	Bushing, Split, Drive Clutch	1
8	<u>1014056</u>	Ring, Spiral Backup	2
9	<u>1014057</u>	Ring, 0.810" Internal Retaining	1
10	1014058	Thrust Washer	1
11	1014059	Drive Hub Assy, Drive Clutch	1
12	<u>1014453</u>	Kit, Drive Clutch Button (includes items 13 through 16)	1
13	<u>1014062</u>	Driver, Drive Clutch	3
14	<u>1014287</u>	Spring, Drive Button	3
15	<u>183</u>	Washer, #10 Type A Flat	3
16	<u>8450</u>	Screw, #10-24 X 0.50 Hex-Head	3
17	<u>1016289</u>	Spacer, Fixed Face Shaft	1
18	<u>1016801</u>	Kit, Drive Clutch Weight (includes items 19 through 25)	1
19	<u>1014063</u>	Screw, 1/4-20 X 1.00 Hex Head	6
20	N/A	Pin, 0.3752 X 1.50 Dowel	3
21	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	6
22	N/A	Clutch Weight, Secondary	3
23	N/A	Washer	6
24	<u>1016201</u>	Washer, Wave	3
25	N/A	Weight, Primary	3
26	<u>1016901</u>	Spring, Drive Clutch	1
27	101738302	Kit, Fixed Face - Drive (includes items 28 and 29)	1
28	N/A	Desiccant Bag (Not Shown)	1
29	<u>101738301</u>	Fixed Face Drive (includes items 30 through 32)	1
30	N/A	Fixed Face Assembly, Drive Clutch	1
31	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	3
32	1016011	Pulley, Drive Clutch	1
33	N/A	Cap Plug	3
34	<u>101916701</u>	V-Belt	1
35	<u>103345701</u>	Screw 3/8-24x5.5 Hex Loc Ptch	1
36	<u>808</u>	Washer, 3/8 Type B Flat	1
		Note: Item 28 not shown.	

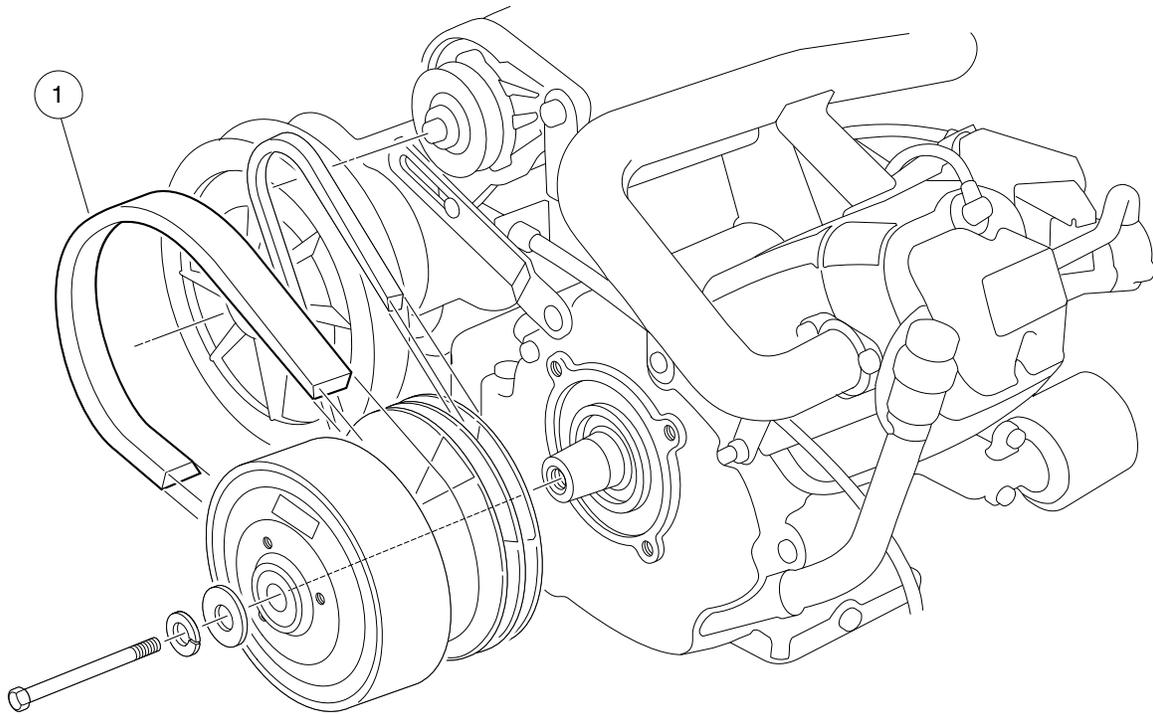


000218-001

DRIVE BELT – FE350

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>1017188</u>	<div style="display: flex; justify-content: space-between; margin-bottom: 5px;"> 1 2 3 4 </div> Belt, Drive (FE350)	1

11

G

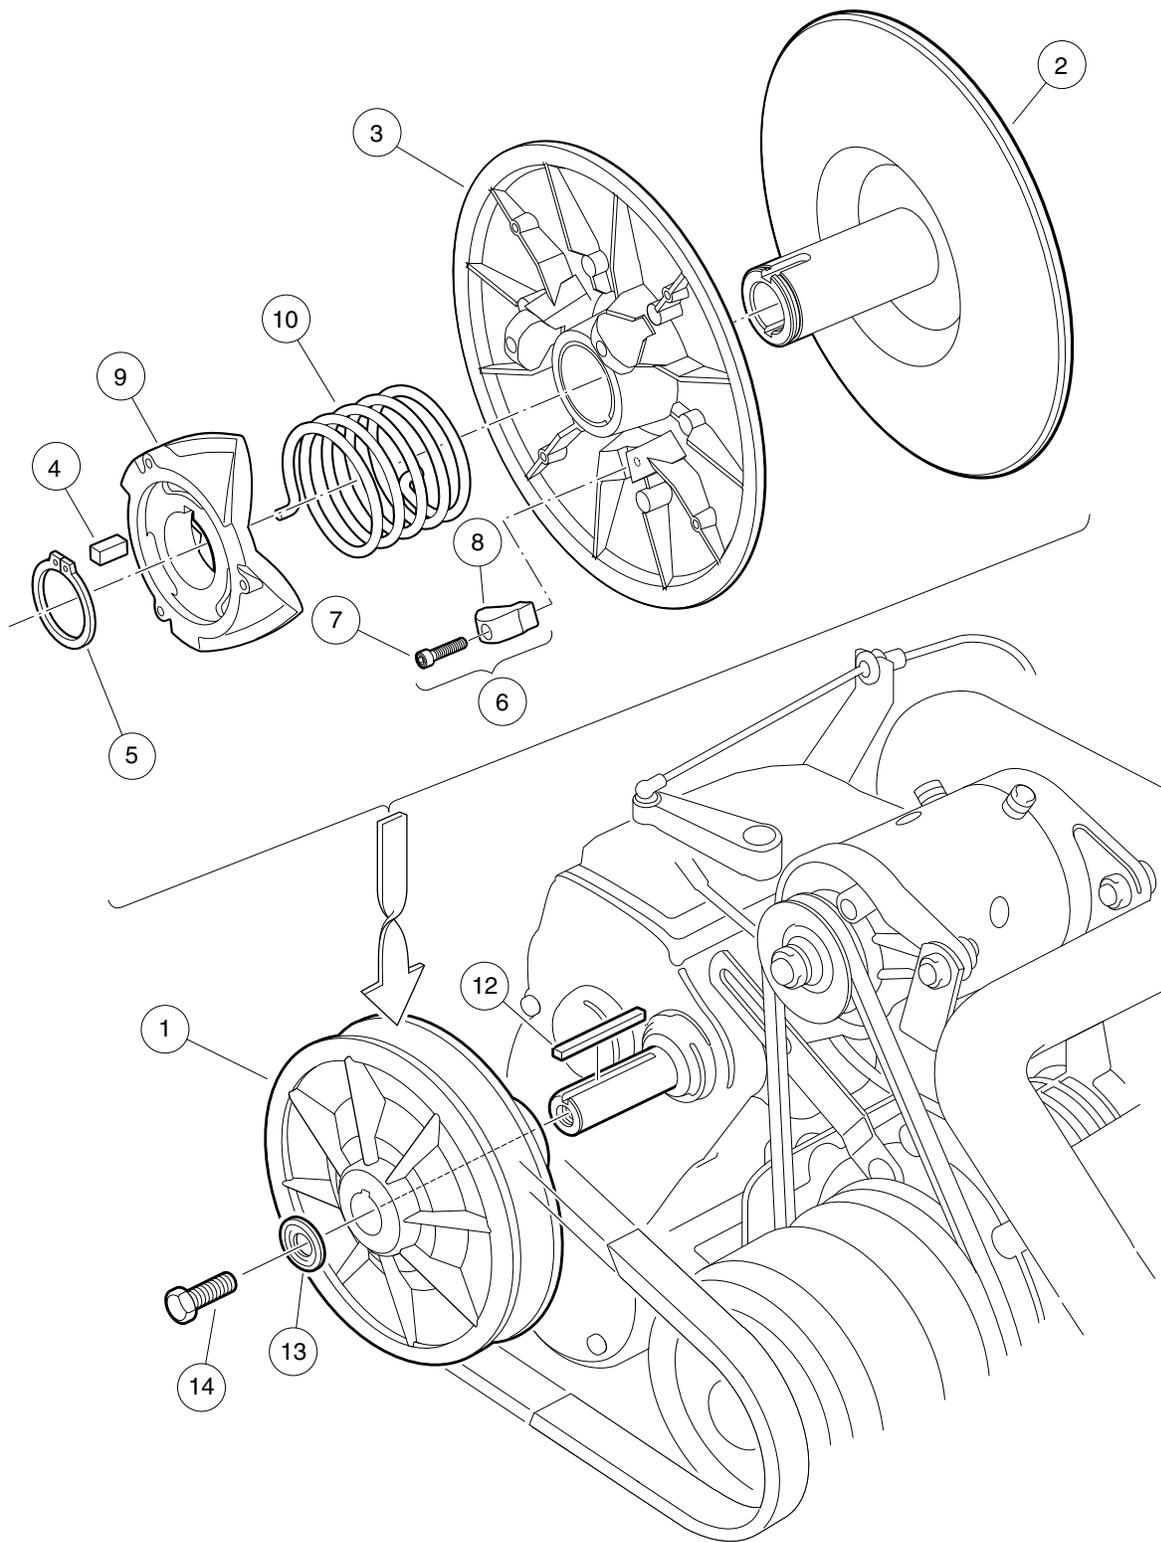


000219-001

DRIVEN CLUTCH – TURF/CARRYALL 1, 2, 252, AND TURF/ CARRYALL 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101834001</u>	Assembly, Driven Clutch (includes items 2 through 10)	1
2	<u>1014070</u>	Fixed Face Assy, Driven Clutch	1
3	<u>1014072</u>	Movable-Face Assembly with Bushing	1
4	<u>1014078</u>	Key, Driven Clutch	1
5	<u>1014080</u>	Ring, Retaining	1
6	<u>1014454</u>	Kit, Driven Clutch Button (includes items 7 and 8)	1
7	<u>1012836</u>	Screw, #8-32 X 3/4 Socket-Head Cap	3
8	1014076	Button, Drive	3
9	<u>1017686</u>	Cam, Driven Clutch	1
10	<u>101836201</u>	Spring, Driven Clutch, Reversed	1
11	<u>AM10419</u>	Kit, Clutch Repair (includes items 12 through 14)	1
12	<u>101833401</u>	Key, 3/16 Sq X 1.50"	1
13	<u>102155801</u>	Washer, Driven Clutch	1
14	<u>102242101</u>	Screw, 5/16-18 X 3/4 Hex-Head with Patch	1

11
G

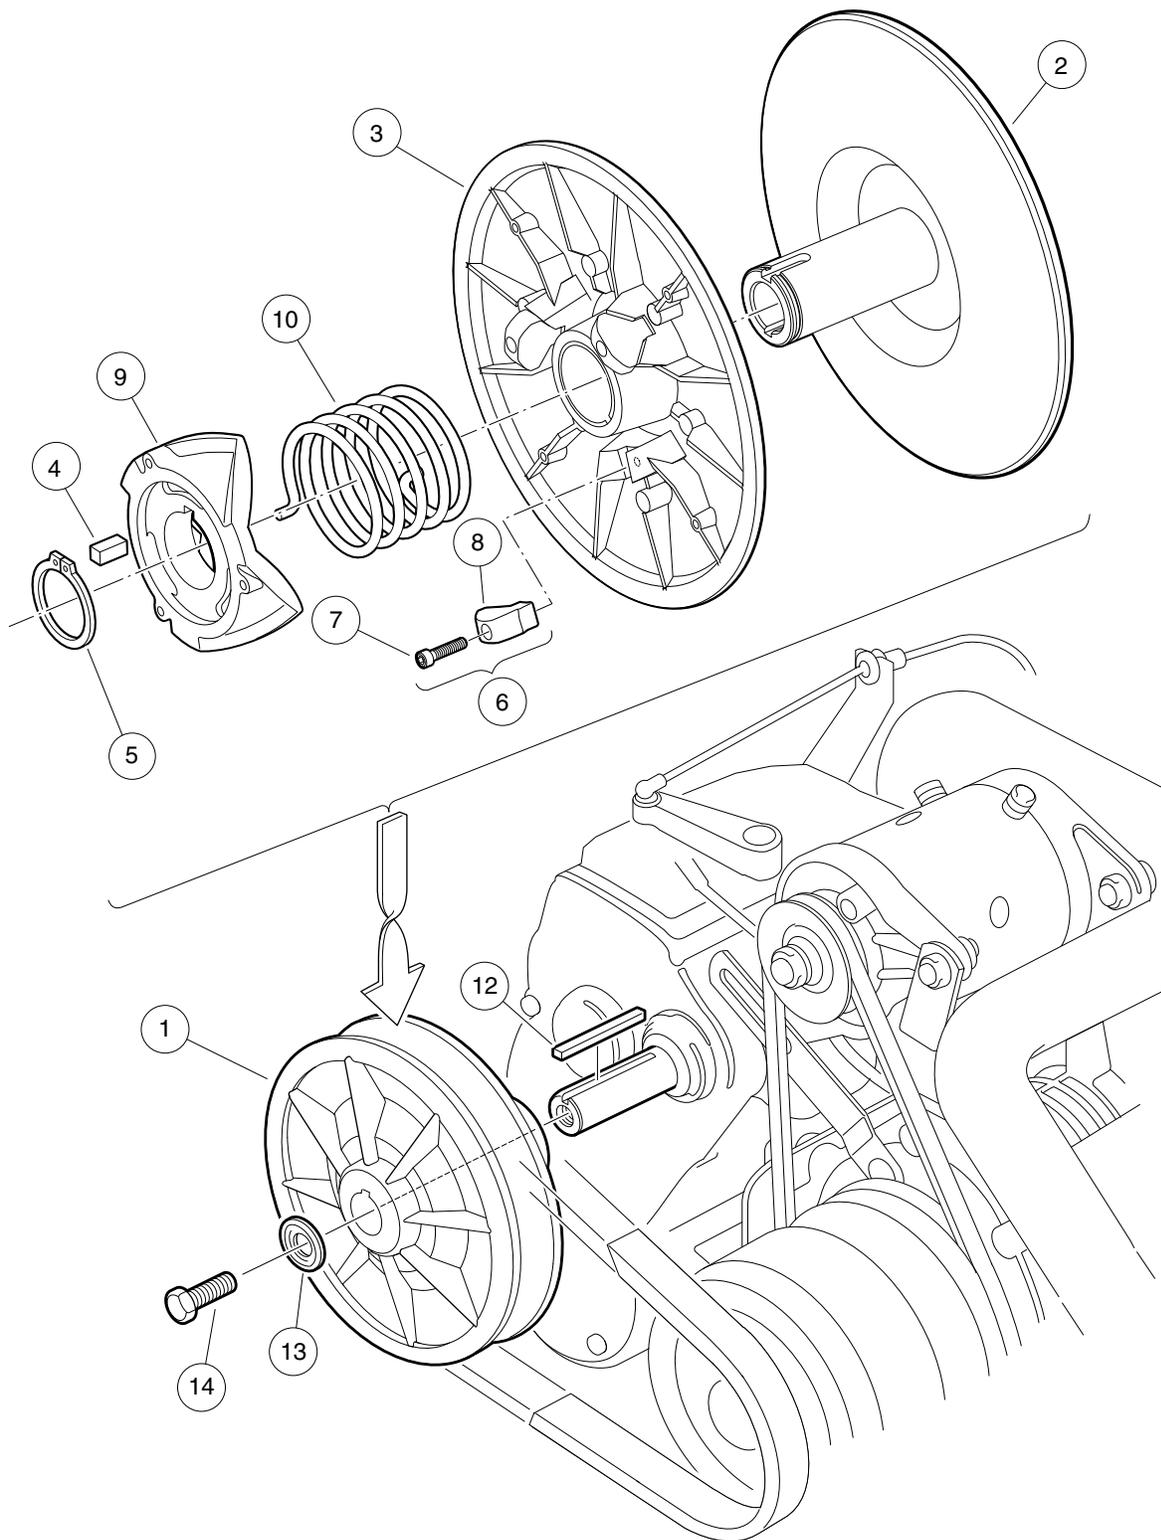

000219-001

DRIVEN CLUTCH – CARRYALL 2 PLUS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101834003</u>	Clutch, Driven (includes items 2 through 10)	1
2	<u>1014070</u>	Fixed Face Assy, Driven Clutch	1
3	<u>1014072</u>	Movable-Face Assembly with Bushing	1
4	<u>1014078</u>	Key, Driven Clutch	1
5	<u>1014080</u>	Ring, Retaining	1
6	<u>1014454</u>	Kit, Driven Clutch Button (includes items 7 and 8)	1
7	<u>1012836</u>	Screw, #8-32 X 3/4 Socket-Head Cap	3
8	1014076	Button, Drive	3
9	<u>1017686</u>	Cam, Driven Clutch	1
10	<u>101836202</u>	Spring, Driven Clutch, Reversed	1
11	<u>AM10419</u>	Kit, Clutch Repair (includes items 12 through 14)	1
12	<u>101833401</u>	Key, 3/16 Sq X 1.50"	1
13	<u>102155801</u>	Washer, Driven Clutch	1
14	<u>102242101</u>	Screw, 5/16-18 X 3/4 Hex-Head with Patch	1

11
G


11

G

UNITIZED TRANSAXLE AND FORWARD/REVERSE SHIFTER

12

G

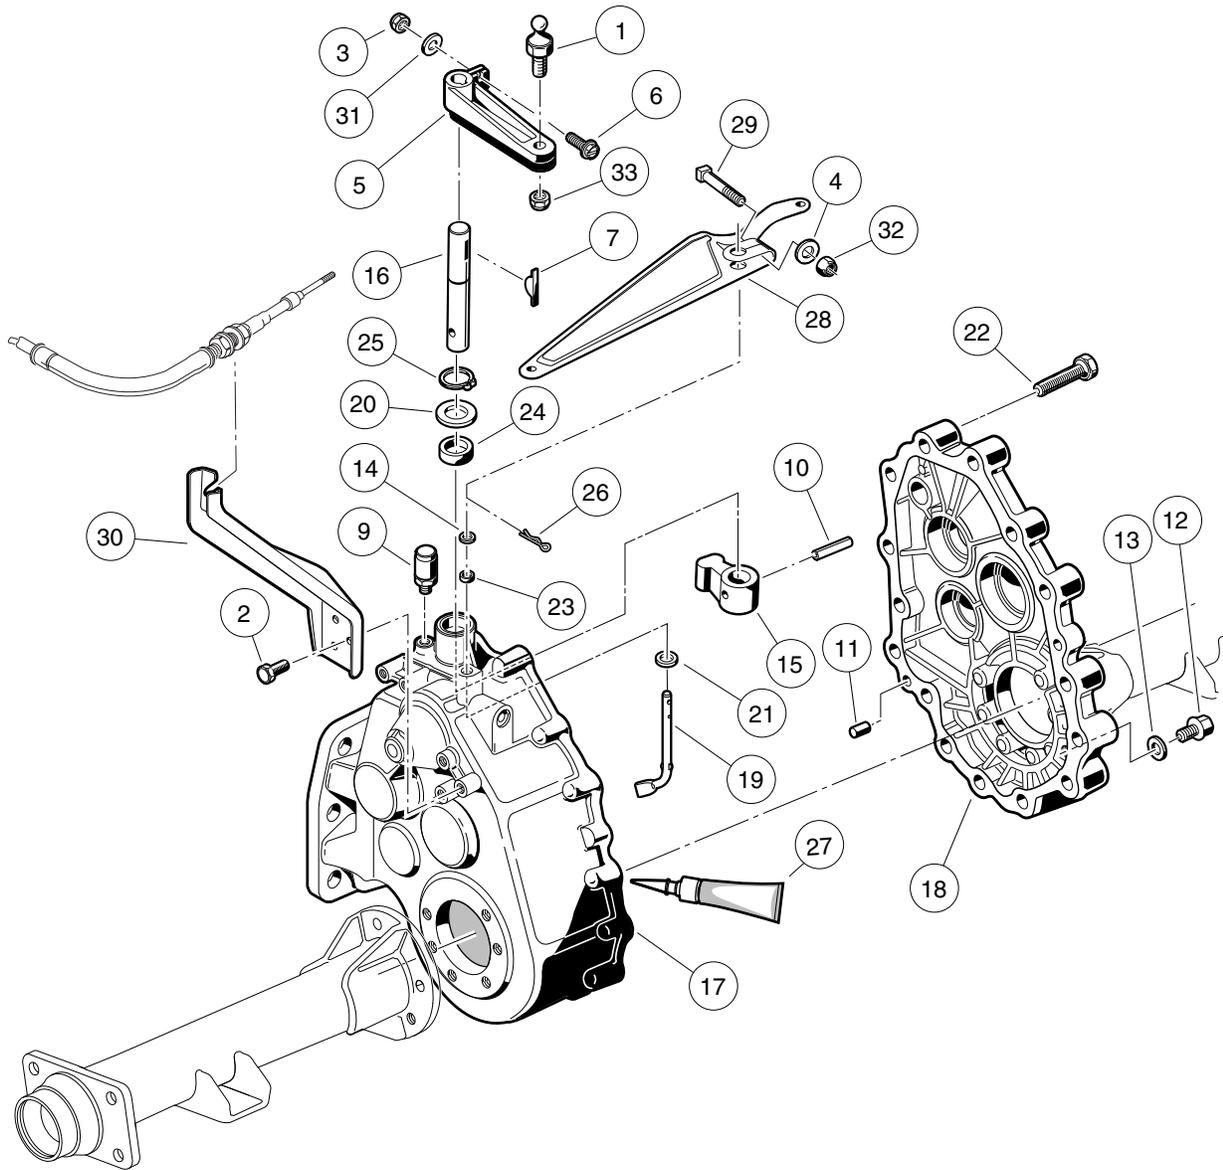


000220-001

TRANSAXLE – GASOLINE VEHICLES, GEAR CASES AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010954</u>	Stud, 1/4-28 X 0.560 Ball	1
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3
3	<u>1013061</u>	Locknut, #10-32 Nylon Insert	1
4	<u>1014007</u>	Washer, 1/4 Flat	1
5	<u>1016341</u>	Lever, Transmission Shift	1
6	<u>1017082</u>	Screw, #10-32 X 0.75, Hex-Head Machine	1
7	<u>1017231</u>	Key, Woodruff	1
8	<u>101833601</u>	Transaxle, 11.77 Ratio (includes items 9 through 27)	1
9	<u>1012711</u>	Breather	1
10	<u>1012752</u>	Roll Pin	1
11	<u>1012896</u>	Pin, Dowel	2
12	<u>1013760</u>	Fill Plug	2
13	<u>1016432</u>	Gasket, Drain Plug	1
14	<u>1016513</u>	Washer, M6 Flat	1
15	<u>101890101</u>	Lever, Change	1
16	<u>101890201</u>	Shaft - Change	1
17	<u>101890501</u>	Gear Case (driver side)	1
18	<u>101890601</u>	Gear Case (passenger side)	1
19	<u>101891301</u>	Arm Pivot	1
20	<u>101892901</u>	Washer	1
21	<u>101893801</u>	Washer	1
22	<u>101926901</u>	Screw, M8-1.25 X 40mm Hex-Head	15
23	<u>101927101</u>	Seal, Oil	1
24	<u>101927201</u>	Seal, Oil	1
25	<u>101927301</u>	Snap Ring	1
26	<u>101928601</u>	Pin, Cotter	1
27	<u>101928701</u>	Liquid Gasket (Transaxle case)	1
28	<u>101834801</u>	Arm, Governor	1
29	<u>101886101</u>	Screw, 1/4-20 X 1.00 Square-Head	1
30	<u>102045901</u>	Bracket, Shifter	1
31	<u>183</u>	Washer, #10 Type A Flat	1
32	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	1
33	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1

12

G

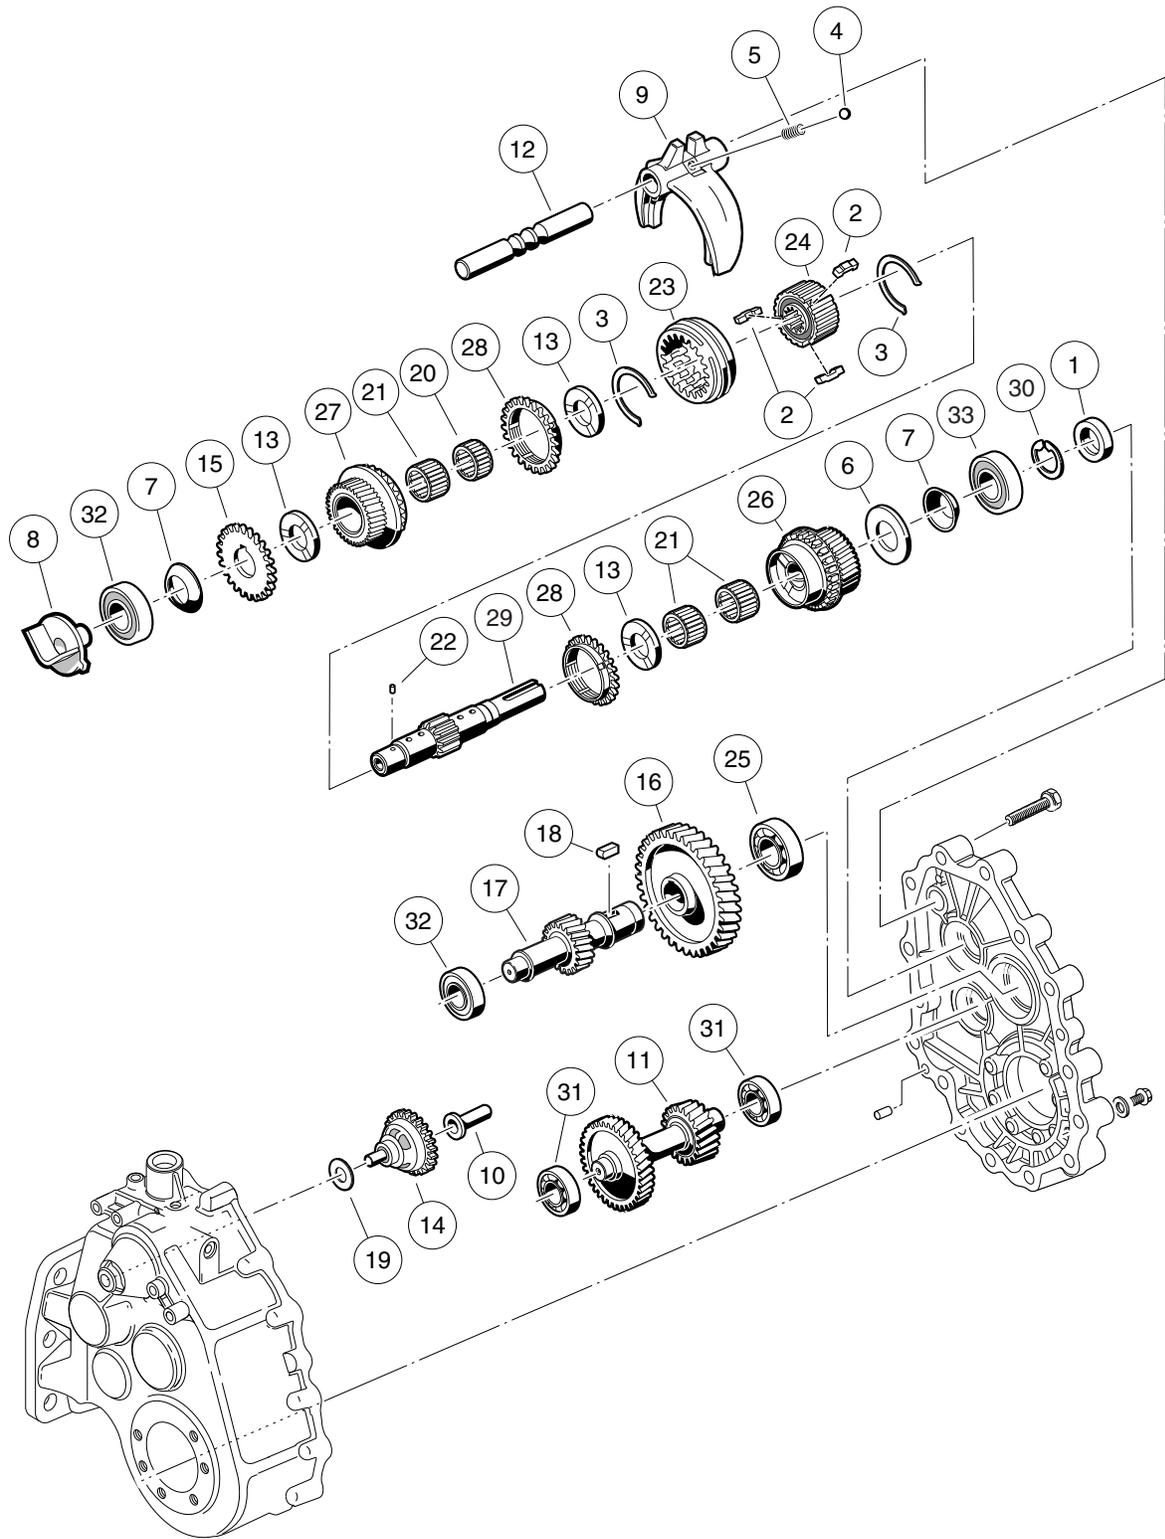


000221-001

TRANSAXLE – GASOLINE VEHICLES, TRANSMISSION AND GEAR REDUCTION

12

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012714</u>	Oil Seal	1
2	<u>1012740</u>	Synchro Insert	3
3	<u>1012741</u>	Synchro Spring	2
4	<u>1012747</u>	Shifter Ball	1
5	<u>1012748</u>	Shifter Spring	1
6	<u>1016337</u>	Washer, Thrust	1
7	<u>1016338</u>	Washer, Spring	2
8	<u>101889401</u>	Guide	1
9	<u>101890001</u>	Fork - Shift	1
10	<u>101891601</u>	Sleeve, Governor	1
11	<u>101891901</u>	Gear, Cluster	1
12	<u>101892001</u>	Rod, Shift	1
13	<u>101892201</u>	Plate, Thrust	3
14	<u>101892301</u>	Governor Assembly	1
15	<u>101892401</u>	Gear, Spur	1
16	<u>101892501</u>	Gear, Helical (61 Tooth)	1
17	<u>101892601</u>	Gear, Helical (17 Tooth)	1
18	<u>101893201</u>	Key Sunk	1
19	<u>101893901</u>	Washer	1
20	<u>101927501</u>	Needle Bearing	1
21	<u>101927601</u>	Needle Bearing	3
22	<u>101927701</u>	Pin, .116" Dia X 0.264 Dowel	1
23	<u>101927901</u>	Sleeve, Synchro	1
24	<u>101928001</u>	Hub, Synchro Clutch	1
25	<u>101928101</u>	Bearing, Ball	1
26	<u>101980801</u>	Gear Assembly, 16-Degree Synchro (25 Tooth)	1
27	<u>101980901</u>	Gear Assembly, 16-Degree Rear Synchro (28 Tooth)	1
28	<u>101981001</u>	Ring, 16-Degree Synchronizer	2
29	<u>102453001</u>	Shaft, Trans, with Circlip	1
30	<u>102453101</u>	Circlip	1
31	<u>7335</u>	Bearing	2
32	<u>AM10080</u>	Bearing, Ball, Sealed	2
33	<u>AM10081</u>	Bearing, Ball, Sealed	1
Note: Items listed on this page are components of the unitized transaxle.			

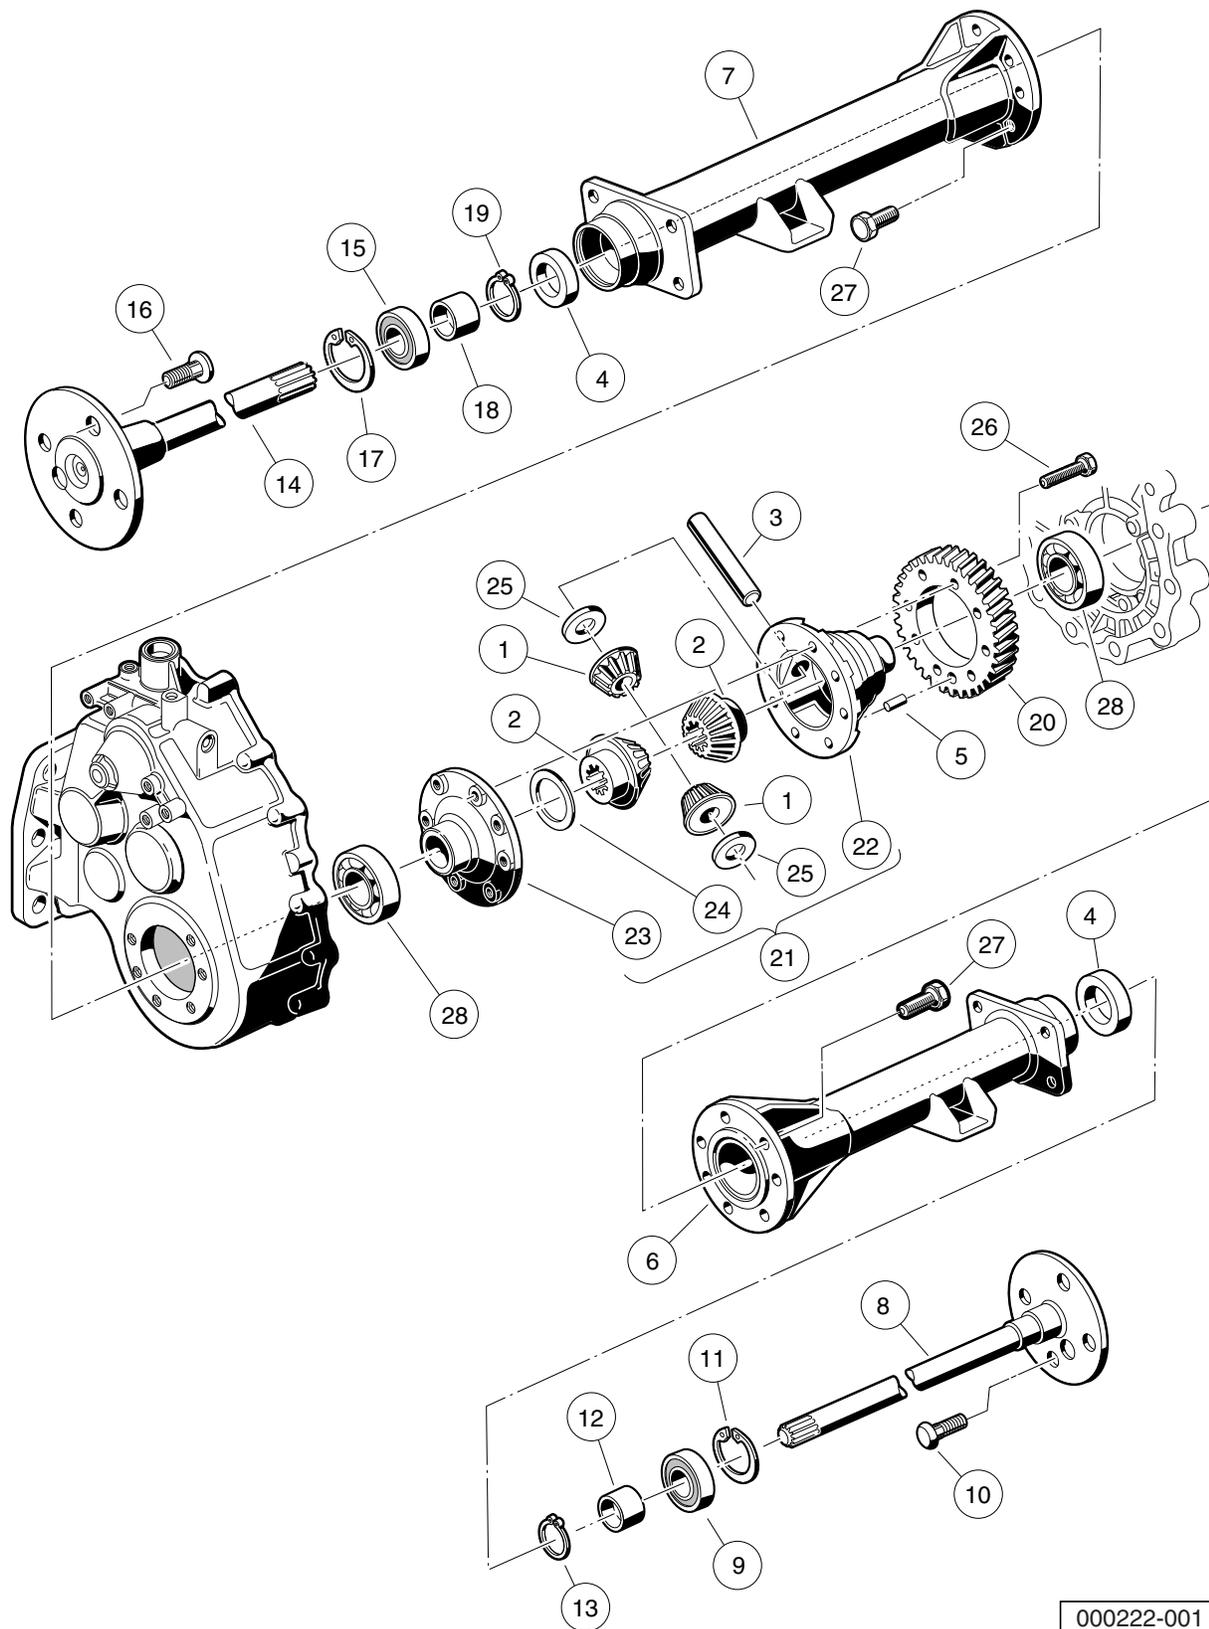


000222-001

TRANSAXLE – GASOLINE VEHICLES, DIFFERENTIAL AND AXLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013770</u>	Differential Idler Gear	2
2	<u>1013771</u>	Gear, Differential	2
3	<u>1013772</u>	Pin, Differential	1
4	<u>1013794</u>	Axle Shaft Oil Seal	2
5	<u>1014193</u>	Dowel Pin	1
6	<u>101890901</u>	Pipe	1
7	<u>101891001</u>	Pipe	1
8	<u>101891401</u>	Axle Assembly, Passenger Side (includes items 9 through 13)	1
9	<u>1011291</u>	Outer Axle, Tube Bearing	1
10	<u>1013787</u>	Lug Stud	4
11	<u>1013792</u>	Circlip Type C	1
12	<u>1014207</u>	Bushing	1
13	<u>1016672</u>	Retaining Ring	1
14	<u>101891501</u>	Axle Assembly, Driver-Side (includes items 15 through 19)	1
15	<u>1011291</u>	Outer Axle, Tube Bearing	1
16	<u>1013787</u>	Lug Stud	4
17	<u>1013792</u>	Circlip Type C	1
18	<u>1014207</u>	Bushing	1
19	<u>1016672</u>	Retaining Ring	1
20	<u>101892701</u>	Gear, Helical	1
21	<u>101910501</u>	Kit, Differential Gear Case (includes items 22 through 25)	1
22	<u>1013768</u>	Differential Gear Case, Left-Hand	1
23	<u>1013769</u>	Differential Gear Case, Right-Hand	1
24	<u>1013773</u>	Plate, Thrust (Differential Gear)	1
25	<u>1013774</u>	Plate, Thrust (Idler Gear)	2
26	<u>101928301</u>	Screw, M8-1.25 X 35mm Hex Head	8
27	<u>102031901</u>	Bolt, M10 X 1.5 X 30mm	14
28	<u>7330</u>	Inner Axle Tube Bearing	2

12
G

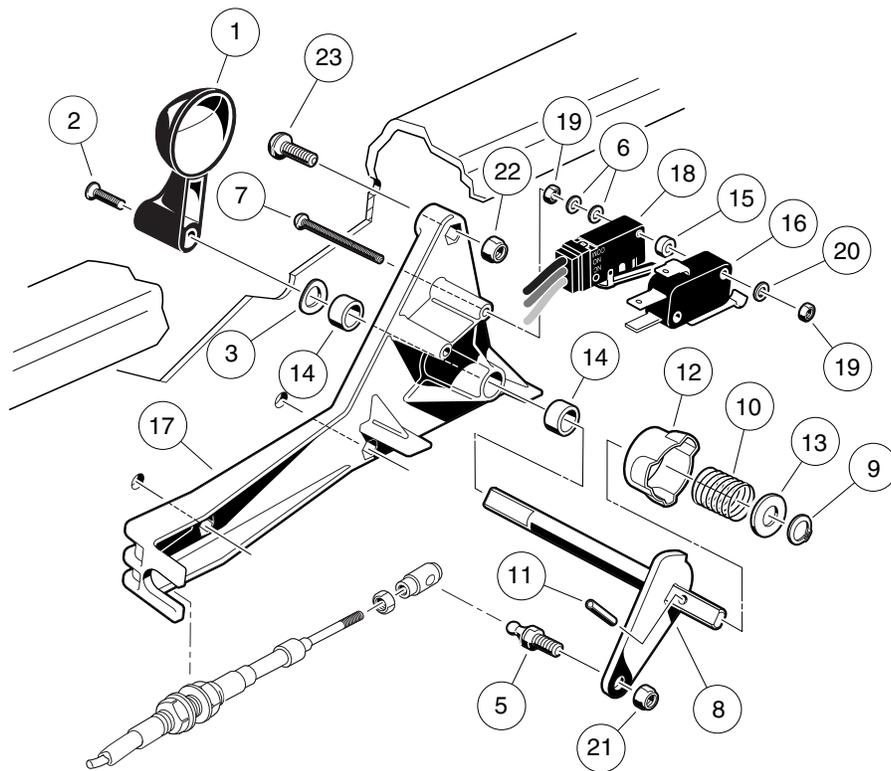


000236-001

FORWARD/REVERSE SHIFTER ASSEMBLY – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012987</u>	Handle, FNR	1
2	<u>1015064</u>	Screw, #8-32 X 0.63 Machine	1
3	<u>1016201</u>	Washer, Wave	1
4	<u>1016947</u>	Assembly, FNR Shifter (includes items 5 through 21)	1
5	<u>1010954</u>	Stud, 1/4-28 X 0.560 Ball	1
6	<u>1012431</u>	Washer, #4 Flat	4
7	<u>1012594</u>	Screw, #4-40 Machine	2
8	<u>1013587</u>	FNR Bell Crank Weldment	1
9	<u>1013589</u>	Ring, 0.338" Internal Retaining	1
10	<u>1013590</u>	Spring, FNR Cam	1
11	<u>1013591</u>	Pin, 1/8 X 1/2 Roll	1
12	<u>1014089</u>	Neutral Lockout Cam Kit (includes item 13)	1
13	<u>1014065</u>	Washer, 0.38" ID Delrin Flat	1
14	<u>1014145</u>	Bushing, Secondary Weight, Split	2
15	<u>1014727</u>	Washer, #4 Nylon Flat	2
16	<u>1014807</u>	Switch, Limit	1
17	<u>1016342</u>	FNR Shifter Base	1
18	<u>101979101</u>	Assembly, Switch, Limit	1
19	<u>8057</u>	Nut, #4-40 Hex Machine	4
20	<u>8058</u>	Lockwasher, #4 Split	2
21	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1
22	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
23	<u>8248</u>	Screw, 1/4-20 X 0.75 Truss-Head Machine	4

12
G

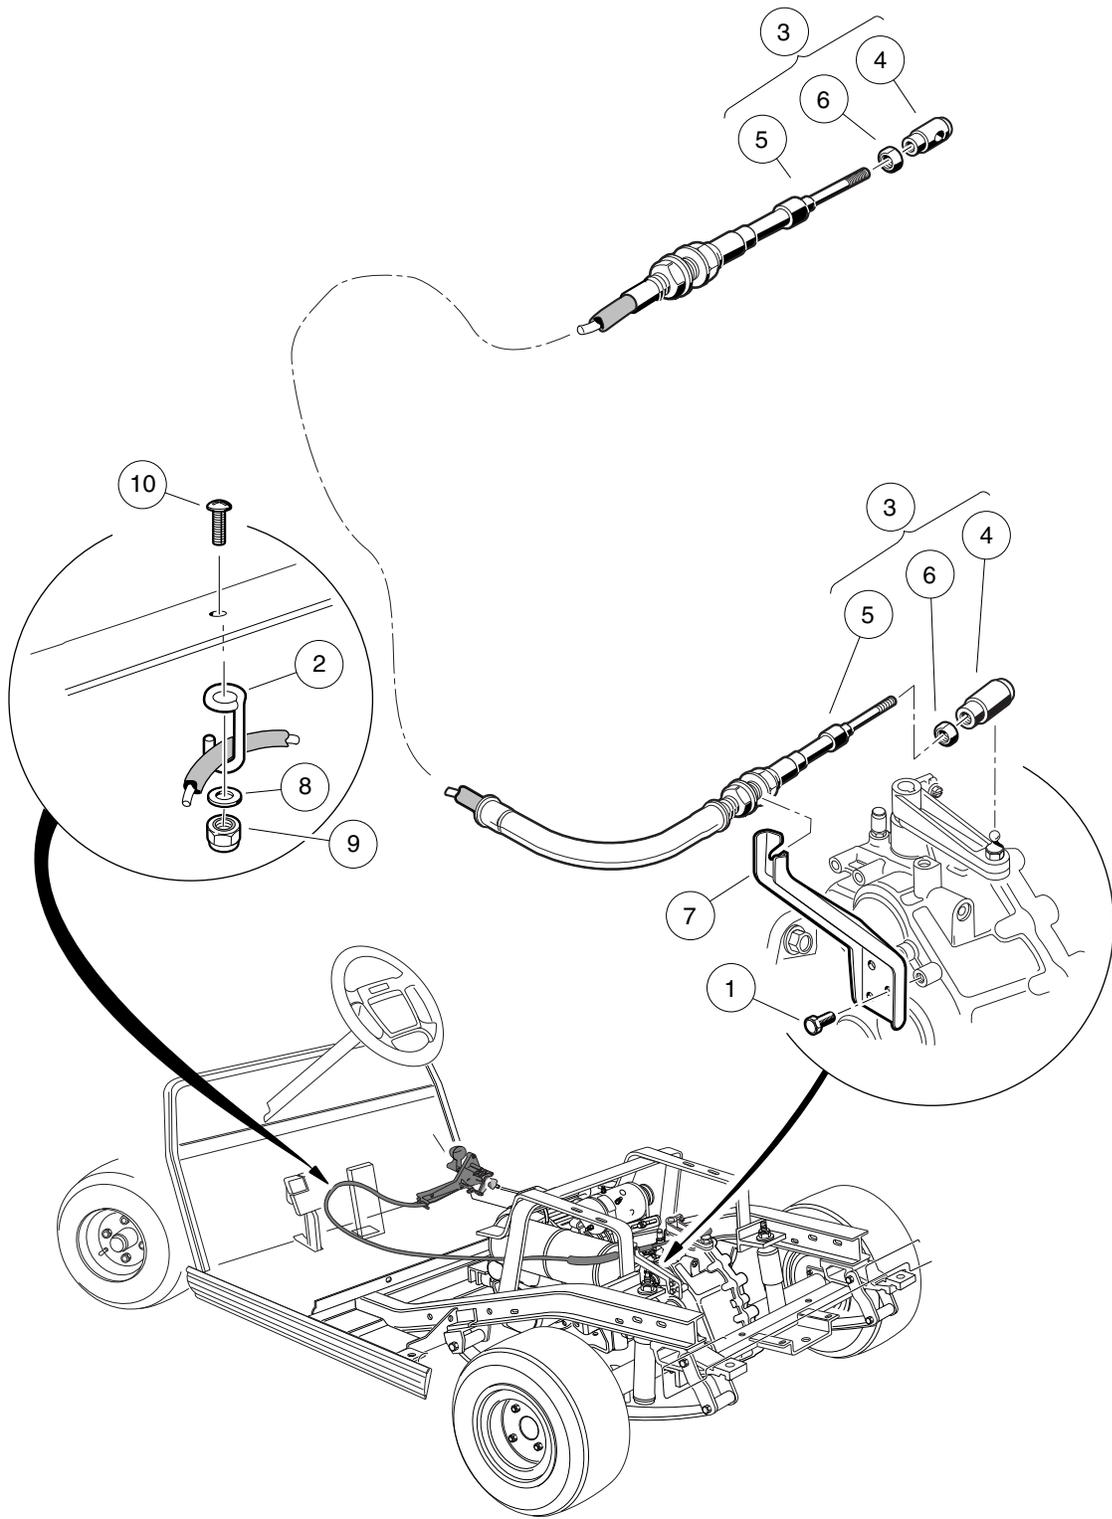


000248-005

FORWARD/REVERSE SHIFTER CABLE – TURF/CARRYALL 1 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3
2	<u>101855801</u>	Cable Retainer	1
3	<u>101951501</u>	FNR Shifter Cable (includes items 4 through 6)	1
4	<u>1012333</u>	Joint, #10-32 Ball	2
5	<u>103379501</u>	Cable, Transmission Shifter Ds	1
6	<u>7893</u>	Nut, #10-32 Hex	2
7	<u>102045901</u>	Bracket, Shifter	1
8	<u>332</u>	Washer, 1/4 Type A Narrow Flat	1
9	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	1
10	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	1

12
G

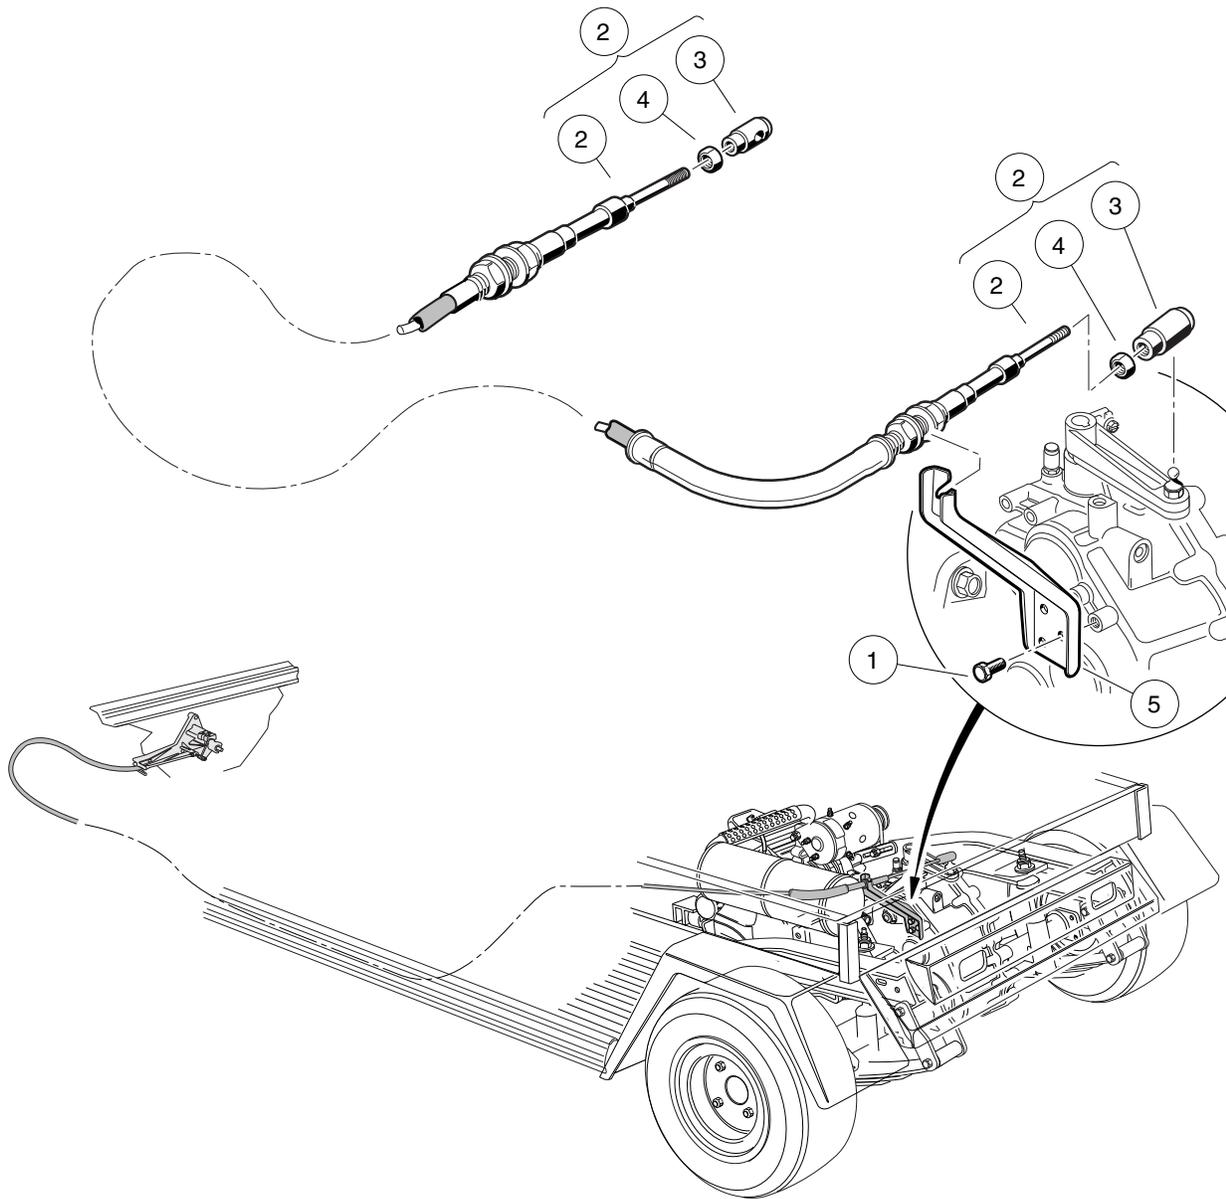


000248-002

FORWARD/REVERSE SHIFTER CABLE – TURF/ CARRYALL 2, AND CARRYALL 2 PLUS VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3
2	<u>1015409</u>	Cable, Shifter (includes items 3 and 4)	1
3	<u>1012333</u>	Joint, #10-32 Ball	2
4	<u>7893</u>	Nut, #10-32 Hex	2
5	<u>102045901</u>	Bracket, Shifter	1

12
G

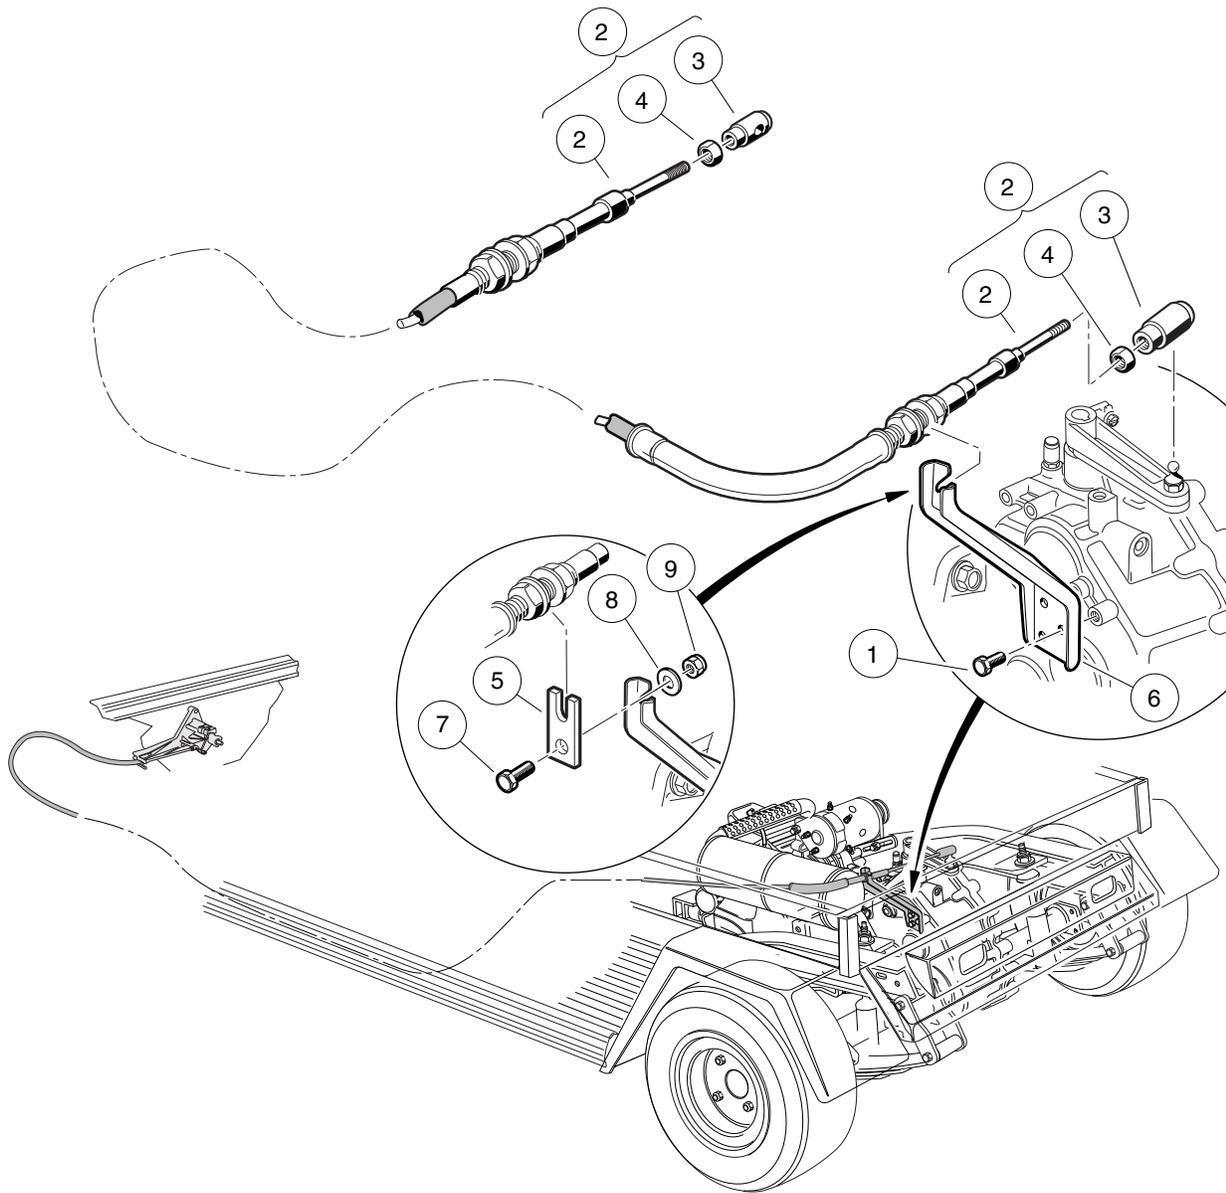


000248-003

FORWARD/REVERSE SHIFTER CABLE – TURF/ CARRYALL 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3
2	<u>1015409</u>	Cable, Shifter (includes items 3 and 4)	1
3	<u>1012333</u>	Joint, #10-32 Ball	2
4	<u>7893</u>	Nut, #10-32 Hex	2
5	<u>102004801</u>	Extension, FNR Shifter Bracket	1
6	<u>102045901</u>	Bracket, Shifter	1
7	320	Screw, 3/8-16 X 1.00 Hex-Head Cap	1
8	<u>808</u>	Washer, 3/8 Type B Flat	1
9	<u>8754</u>	Locknut, 3/8-16 Hex	1

12
G

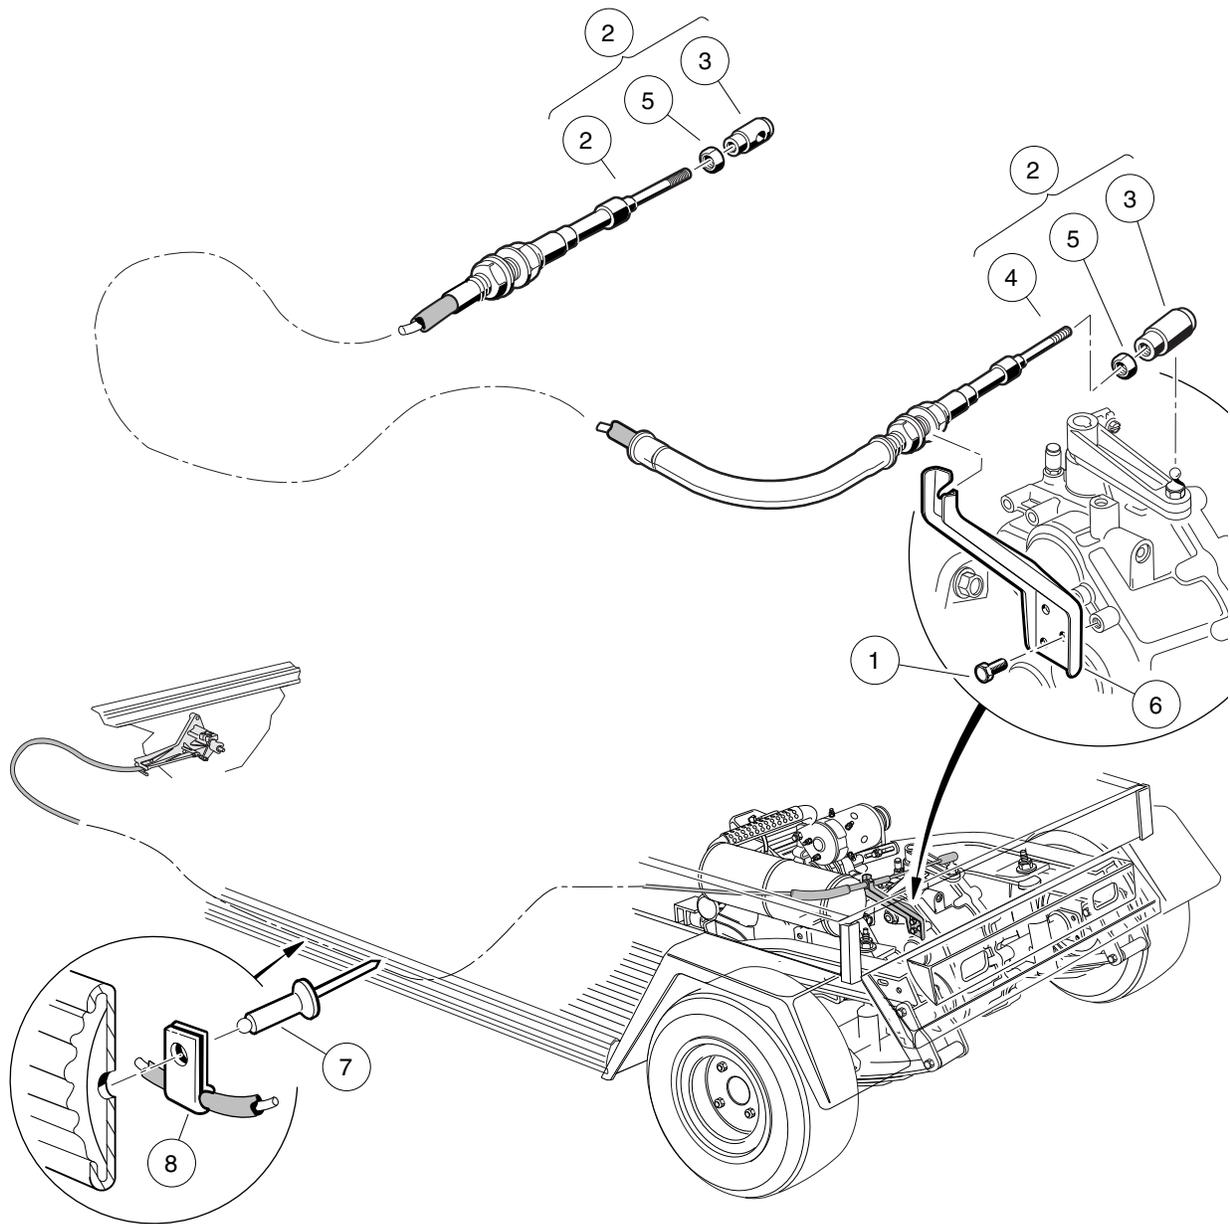

000248-004

FORWARD/REVERSE SHIFTER CABLE – TURF/ CARRYALL 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3
2	<u>101672701</u>	Cable, FNR Shifter (includes items 3 through 5)	1
3	<u>1012333</u>	Joint, #10-32 Ball	2
4	101539802	Cable, Transmission Shifter	1
5	<u>7893</u>	Nut, #10-32 Hex	2
6	<u>102045901</u>	Bracket, Shifter	1
7	<u>7973</u>	Rivet, 3/16 X .400 Blind	1
8	8455	Wire Harness Clamp	1

12
G


12

G

ELECTRICAL SYSTEM – ELECTRIC VEHICLES

13

E

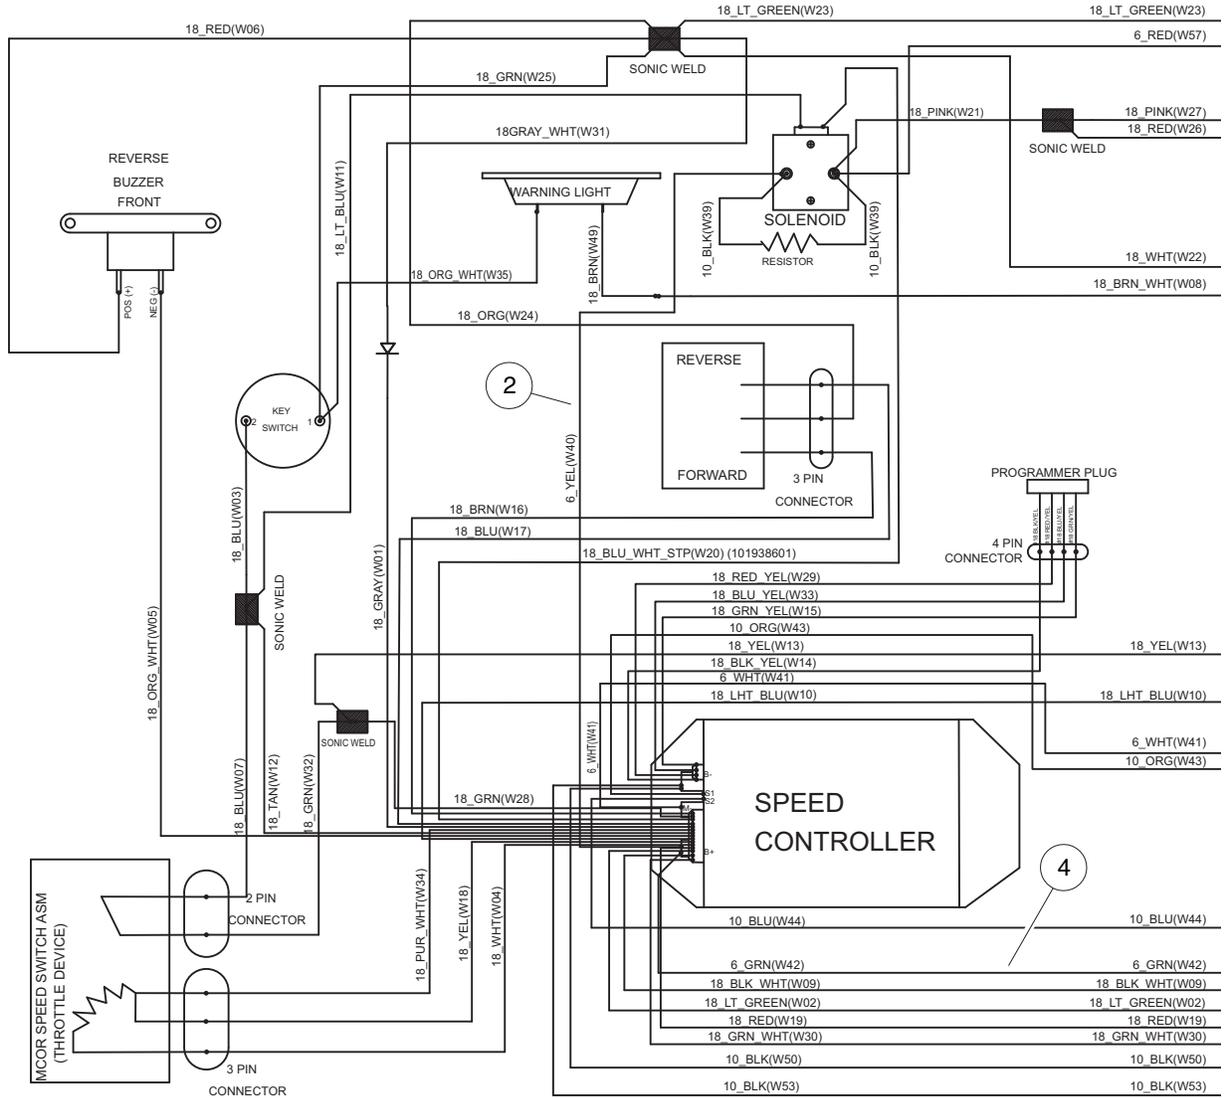

- (PIN 14) LT GREEN : TO MOTOR SPEED SENSOR OUTPUT
- (PIN 15) RED : TO HIGH SPEED OF MOTOR SPEED SENSOR
- (PIN 16) BLUE : TO FNR SWITCH "REV"
- (PIN 8) BROWN : TO FNR SWITCH "FOR"
- (PIN 7) ORG/WHT : TO LOW SIDE OF REVERSE BUZZER
- (PIN 6) GREEN : TO ACCELERATOR LIMIT SWITCH
- (PIN 13) BLK/WHT : TO LOW SIDE OF MOTOR SPEED SENSOR
- (PIN 12) BLU/WHT : TO LOW SIDE OF SOLENOID COIL
- (PIN 11) : OPEN
- (PIN 10) TAN : TO KEY SWITCH SONIC WELD
- (PIN 9) GRAY : AUX
- (PIN 1) WHITE : TO HIGH SIDE OF POTENTIOMETER
- (PIN 2) YELLOW : TO SLIDER OF POTENTIOMETER
- (PIN 3) PUR/WHT : TO LOW SIDE OF POTENTIOMETER
- (PIN 4) GRN/WHT : TO S. O. C
- (PIN 5) WHITE : TO OBC "CONTROLLER LOCK OUT"

000320-001

13

E


See previous two pages for illustration.

WIRING – IQ SYSTEM ELECTRIC TURF/CARRYALL 1

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101795701</u>	Asm, Wire, #6blk 13in	5
2	<u>101903001</u>	Wire Assembly #6 Yellow	1
3	<u>101968701</u>	Wire Assy, #6 White	1
4	<u>101978001</u>	Wire Assy, #6 Green	1
5	<u>102196601</u>	Wire Harness	1
6	<u>102199601</u>	Wire Assy, #6 Red	1
		Note: Item 5 contains wires in main harness that are not 6-gauge.	

13

E

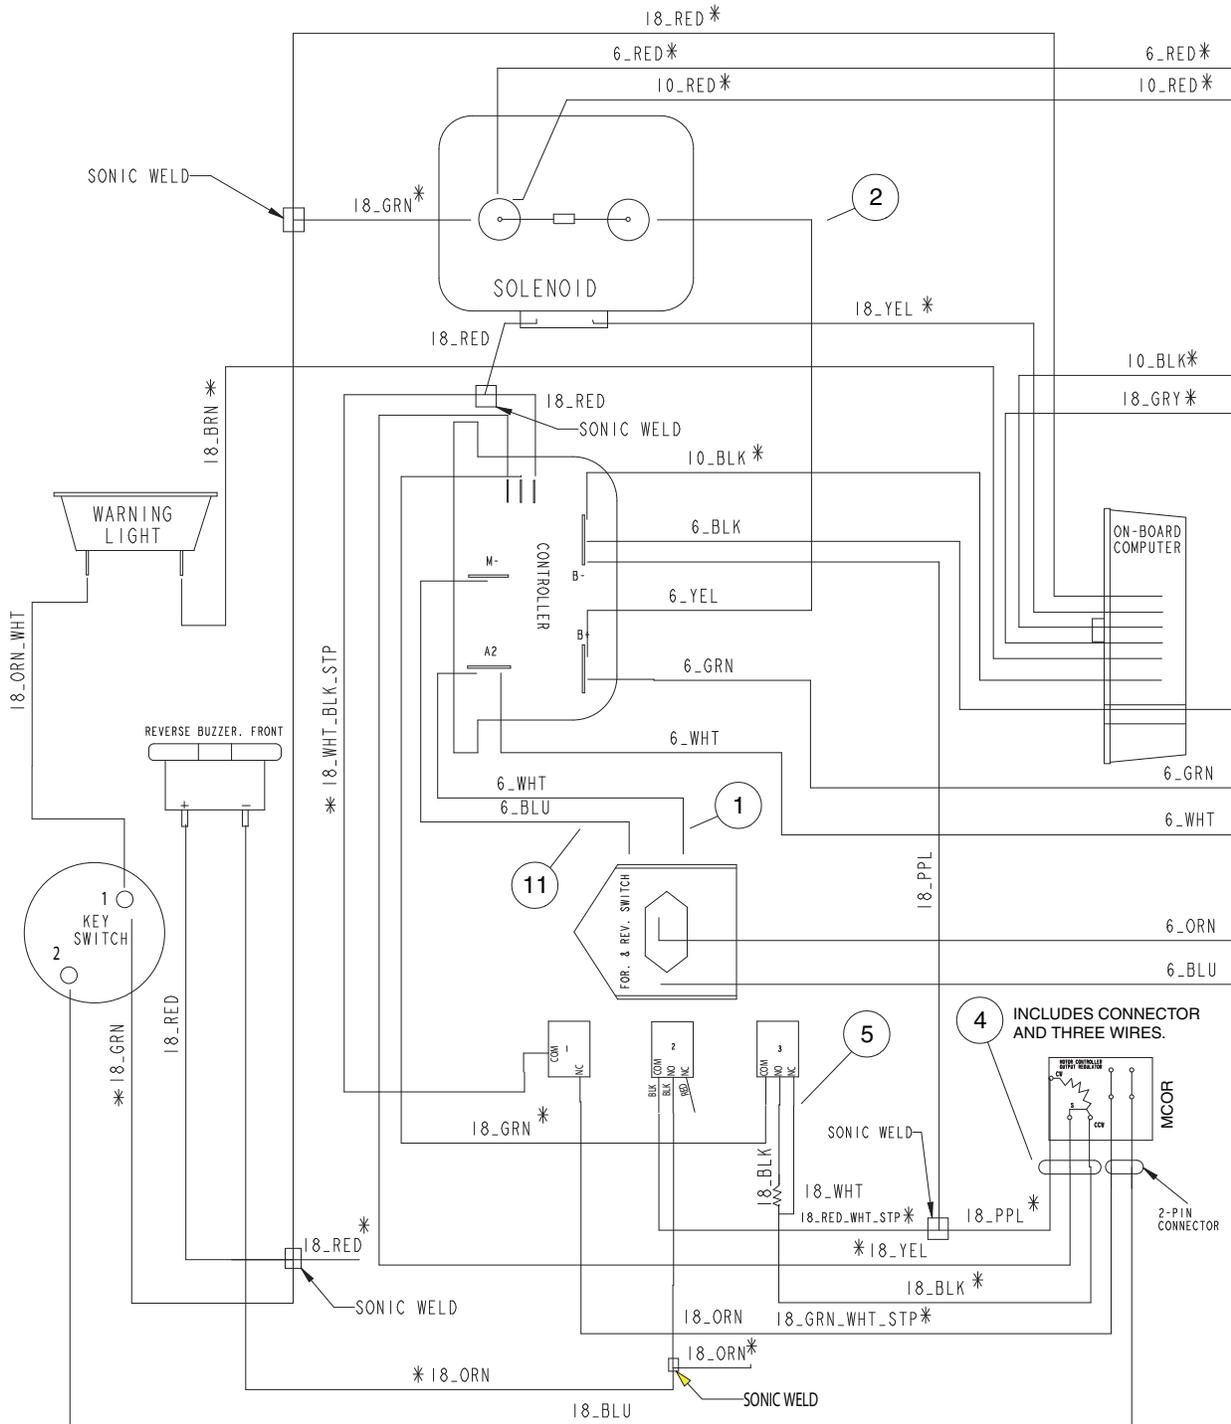

000319-001

13

E


See previous two pages for illustration.

WIRING – POWERDRIVE ELECTRIC TURF/CARRYALL 2

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016729</u>	Wire Assembly #6 White	1
2	<u>1016732</u>	Wire Assembly #6 Yellow	1
3	<u>101795701</u>	Asm, Wire, #6blk 13in	5
4	<u>101865106</u>	3-Way Plug and Wire Assembly	1
5	<u>101883002</u>	Resistor Wire Assembly	1
6	N/A	Wire Harness (includes items 7 through 12)	1
7	<u>101904401</u>	Wire Assembly #6 Green	1
8	<u>101904501</u>	Wire Assy, #6 Red	1
9	<u>101904601</u>	Wire Assy, #6 Blue	1
10	<u>101904701</u>	Wire Assy, #6 Orange	1
11	<u>101908801</u>	Wire Assembly #6 Blue	1
12	<u>101908901</u>	Wire Assembly #6 White	1
13	<u>102162101</u>	Wire Harness Asm	1

13

E

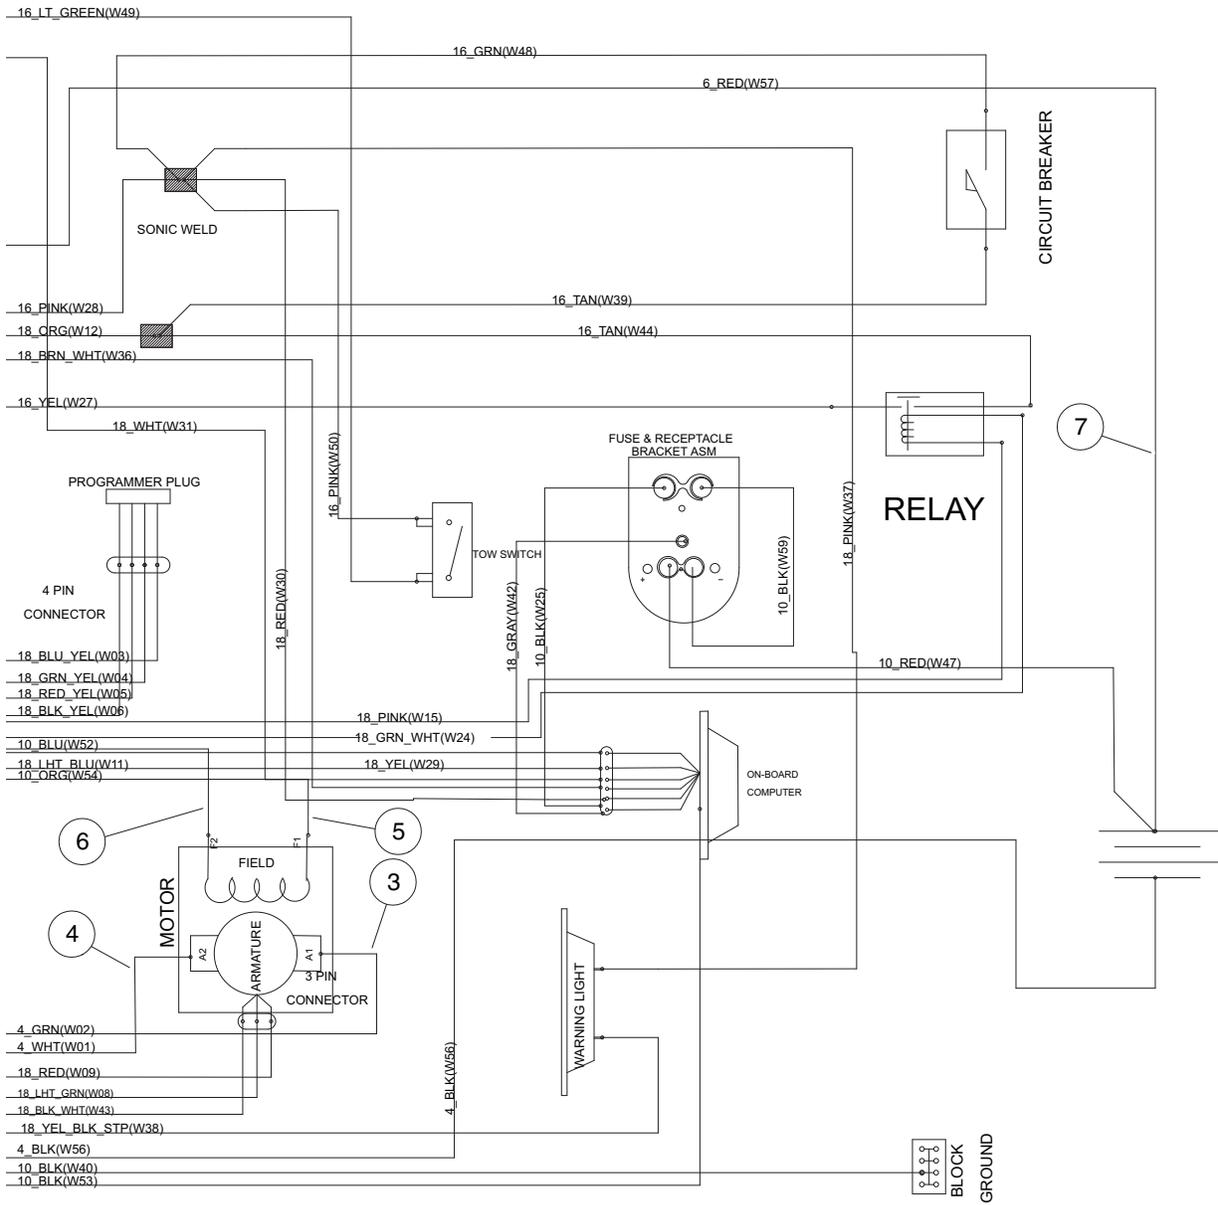

000413-001

13

E

See previous two pages for illustration.

WIRING – IQ PLUS ELECTRIC TURF/CARRYALL 2


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102834501</u>	Wire Harness,Turf/Carryall 2 IQ Plus	1
2	<u>102845401</u>	Wire Harness, Power, IQ Plus (includes items 3 through 8)	1
3	N/A	Asm, #4 Grn Wire, 37"	1
4	N/A	Asm, #4 Wht Wire, 36.5"	1
5	N/A	Asm, #10 Org Wire, 39"	1
6	N/A	Asm, #10 Blu Wire, 46"	1
7	<u>102846402</u>	Asm, #4 Red Wire, 33"	1
8	<u>8639</u>	Tie Wrap, 11" Nylon	3

13

E

13

E

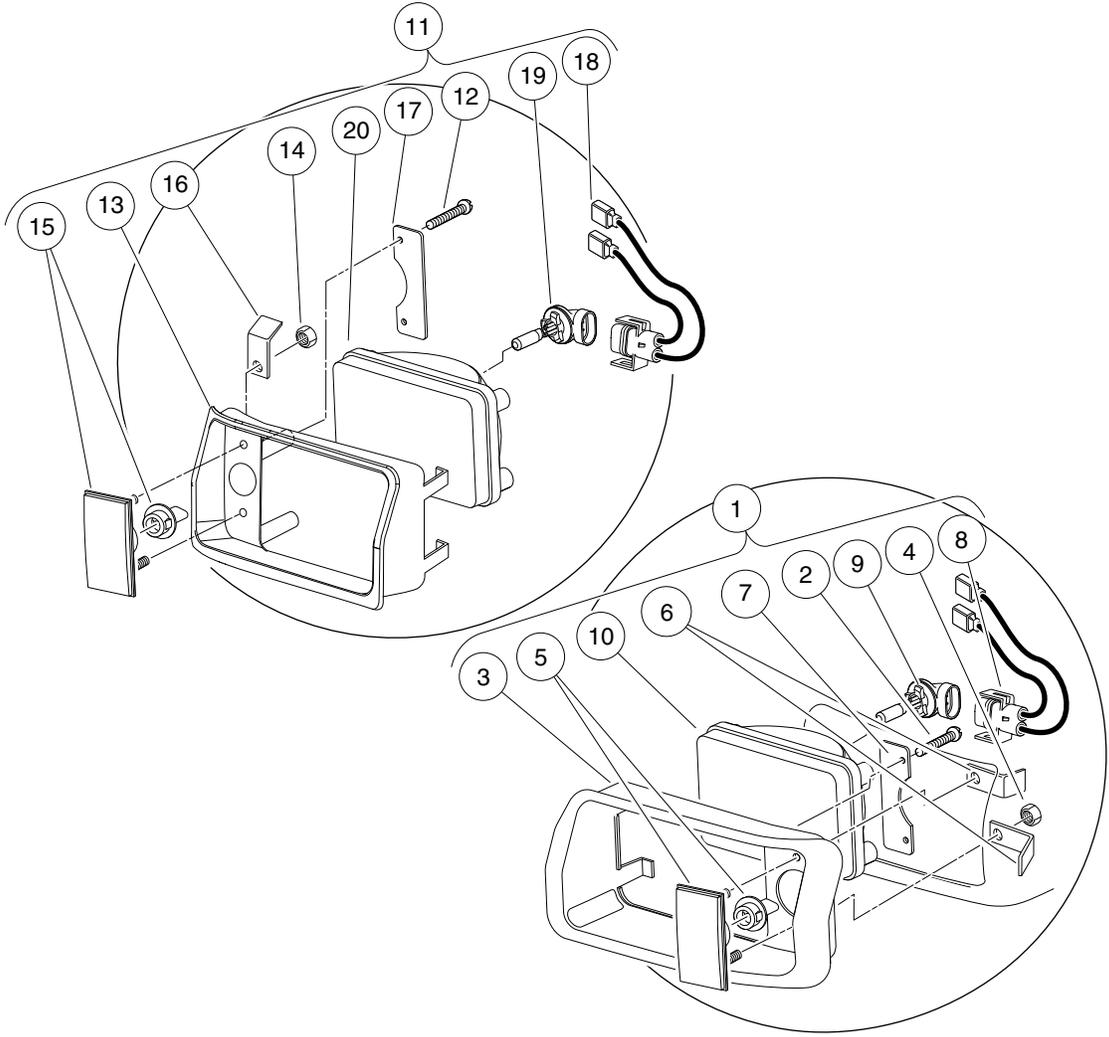


000073-001

HEADLIGHTS


13

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101988001</u>	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	1
2	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2
3	<u>1016880</u>	Headlight Bezel, Left	1
4	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
5	<u>1017062</u>	Turn Signal Lens Assy	1
6	<u>1017064</u>	Mounting Bracket	2
7	<u>1017065</u>	Retainer, Headlight	1
8	<u>101987901</u>	Connector Harness Assembly, Headlight	1
9	<u>101988101</u>	Bulb, Headlight	1
10	<u>101988201</u>	Lens, Headlight	1
11	<u>101988002</u>	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	1
12	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2
13	<u>1016879</u>	Headlight Bezel, Right	1
14	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
15	<u>1017062</u>	Turn Signal Lens Assy	1
16	<u>1017064</u>	Mounting Bracket	2
17	<u>1017065</u>	Retainer, Headlight	1
18	<u>101987901</u>	Connector Harness Assembly, Headlight	1
19	<u>101988101</u>	Bulb, Headlight	1
20	<u>101988201</u>	Lens, Headlight	1

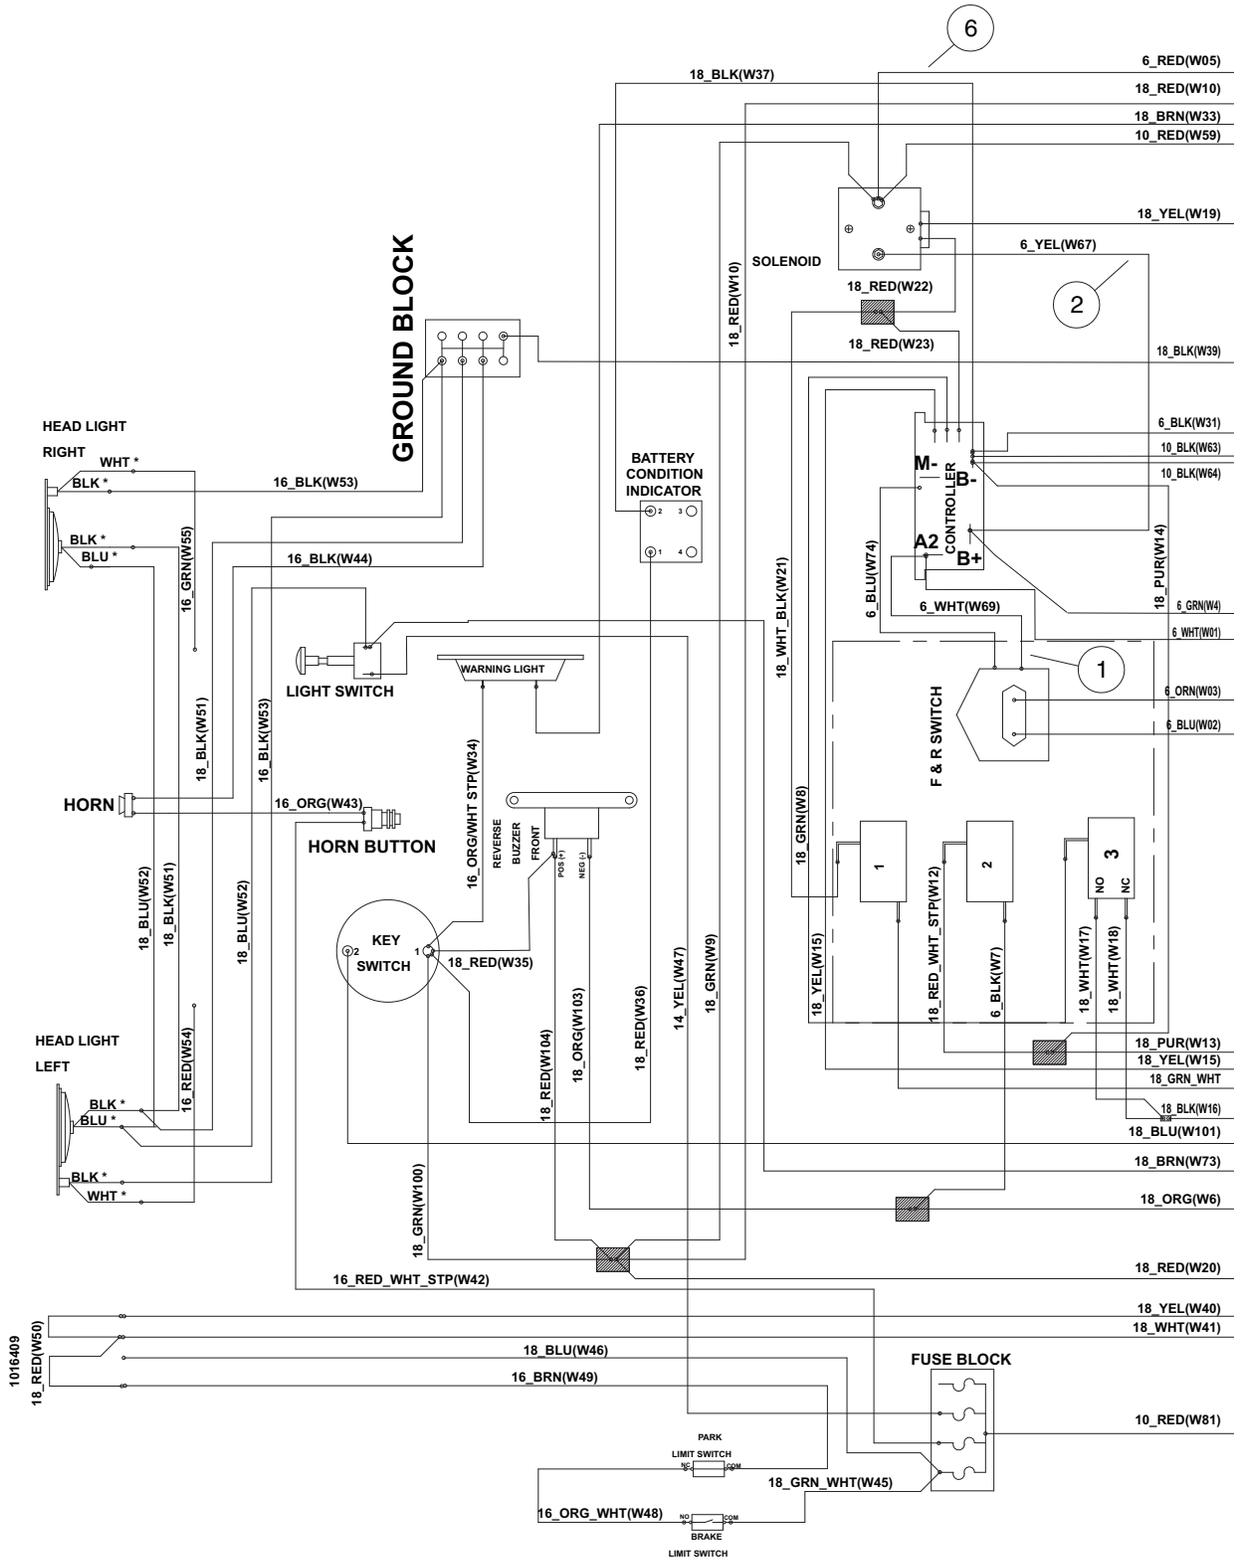

000321-001

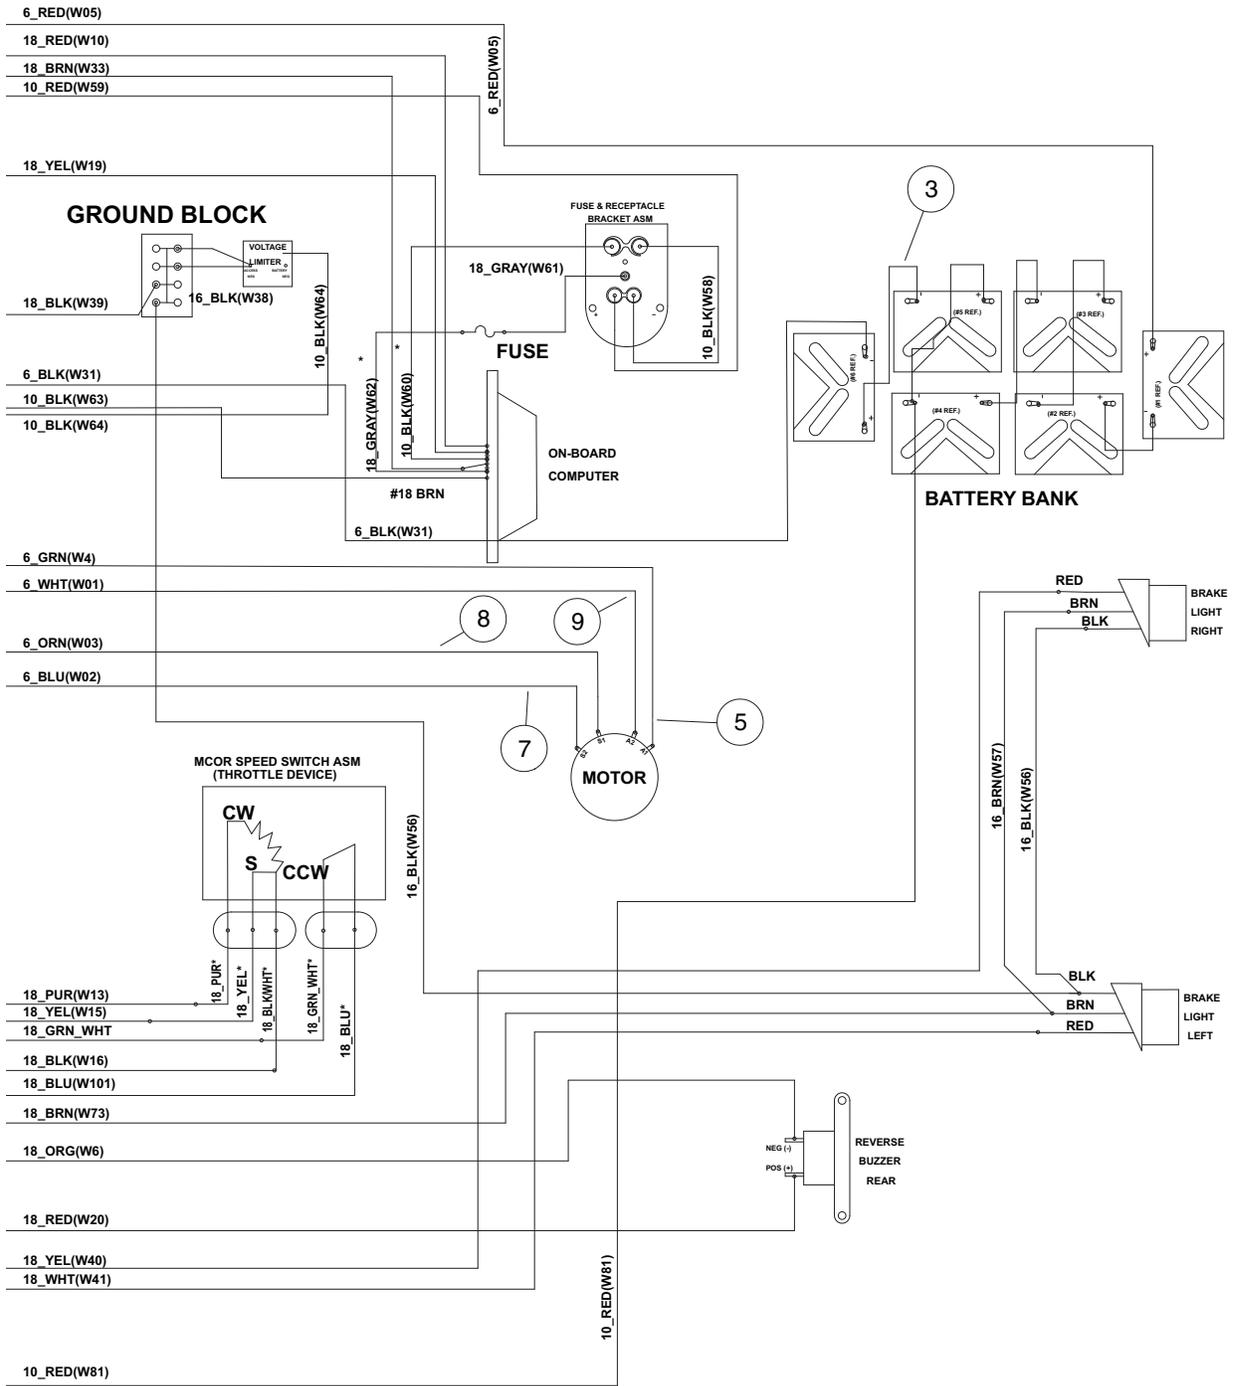

000321-001

13

E


See previous two pages for illustration.

WIRING – POWERDRIVE ELECTRIC CARRYALL 6


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016729</u>	Wire Assembly #6 White	1
2	<u>1016732</u>	Wire Assembly #6 Yellow	1
3	<u>101795701</u>	Asm, Wire, #6blk 13in	5
4	N/A	Wire Harness (includes items 5 through 9)	1
5	<u>101904402</u>	Wire Assembly #6 Green	1
6	<u>101904502</u>	Wire Assy, #6 Red	1
7	<u>101904602</u>	Wire Assy, #6 Blue	1
8	<u>101904702</u>	Wire Assy, #6 Orange	1
9	<u>101908902</u>	Wire Assembly #6 White	1
10	<u>101989901</u>	Wire Harness (Lighting)	1
11	<u>102162501</u>	Wire Harness	1
<p style="margin-left: 40px;">Note: Item 11 contains wires in main harness that are not 6-gauge.</p>			

13

E

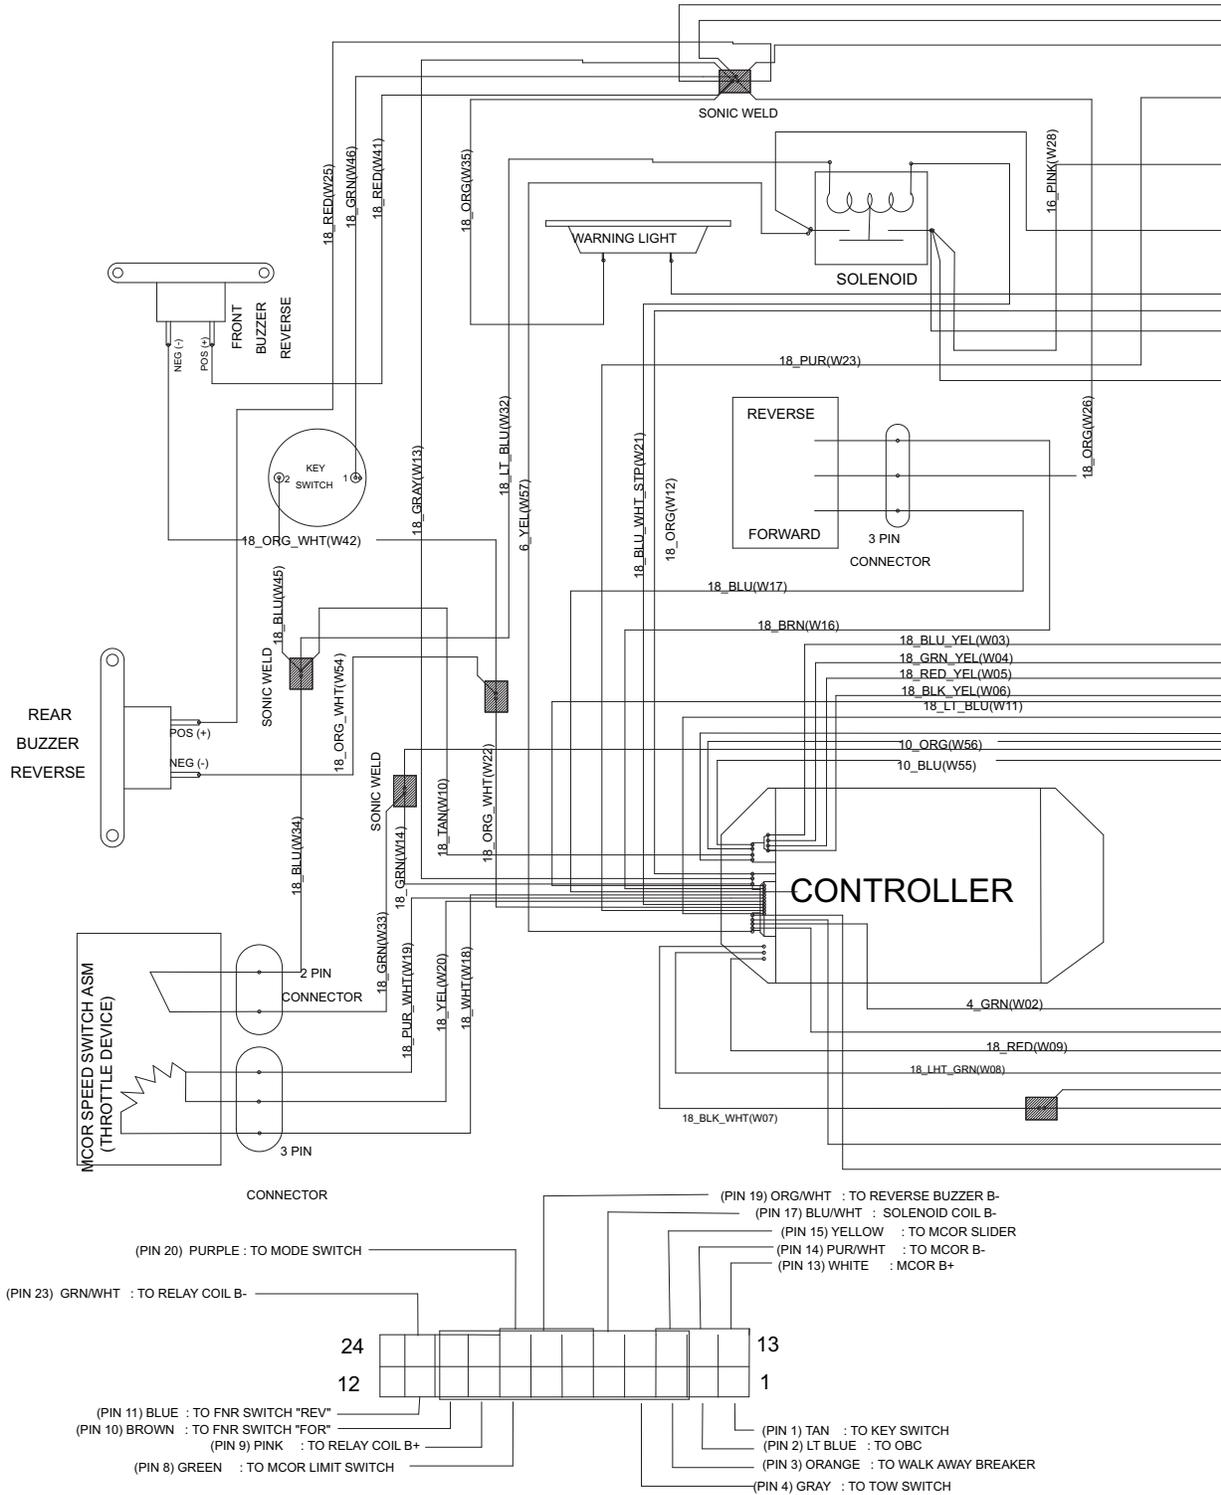

000423-002

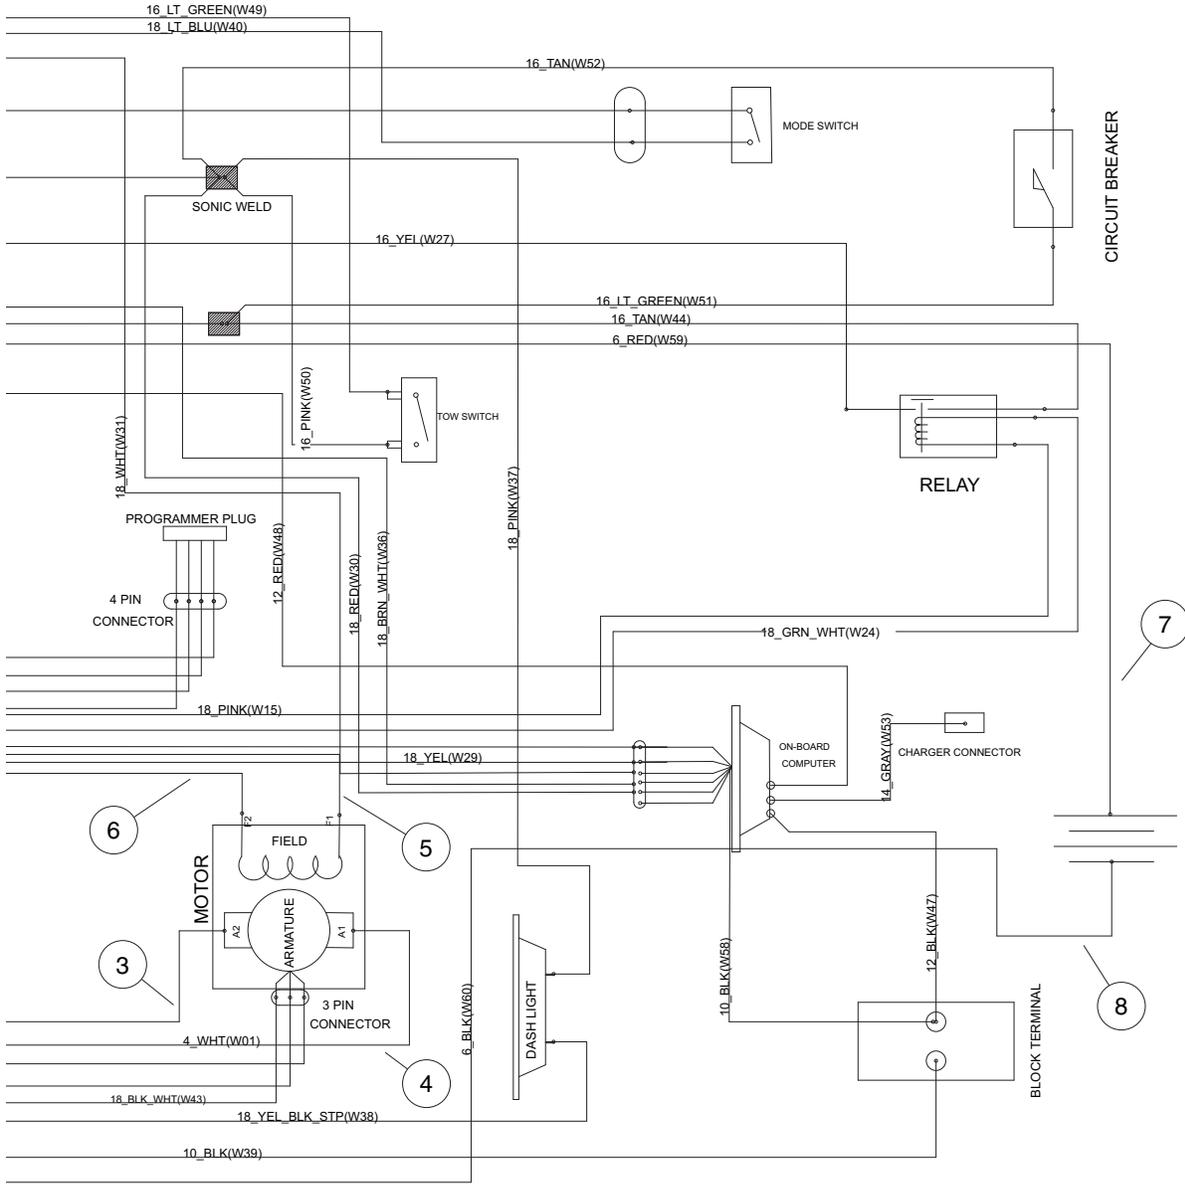

000423-002

13

E

See previous two pages for illustration.

WIRING – IQ PLUS TRANSPORTER 4 AND 6


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102810601</u>	Wire Harness, HDIQ, CA6	1
2	<u>102845501</u>	Harness, Power, Stretch IQ Plus (includes items 3 through 9)	1
3	N/A	Asm, #4 Grn Wire, 89"	1
4	N/A	Asm, #4 Wht Wire, 88.5"	1
5	N/A	Asm, #10 Org Wire, 89.5"	1
6	N/A	Asm, #10 Blu Wire, 95.5"	1
7	N/A	Asm, #4 Red Wire, 67.5"	1
8	N/A	Asm, #4 Blk Wire, 57.5"	1
9	<u>8639</u>	Tie Wrap, 11" Nylon	6

13

E

13

E

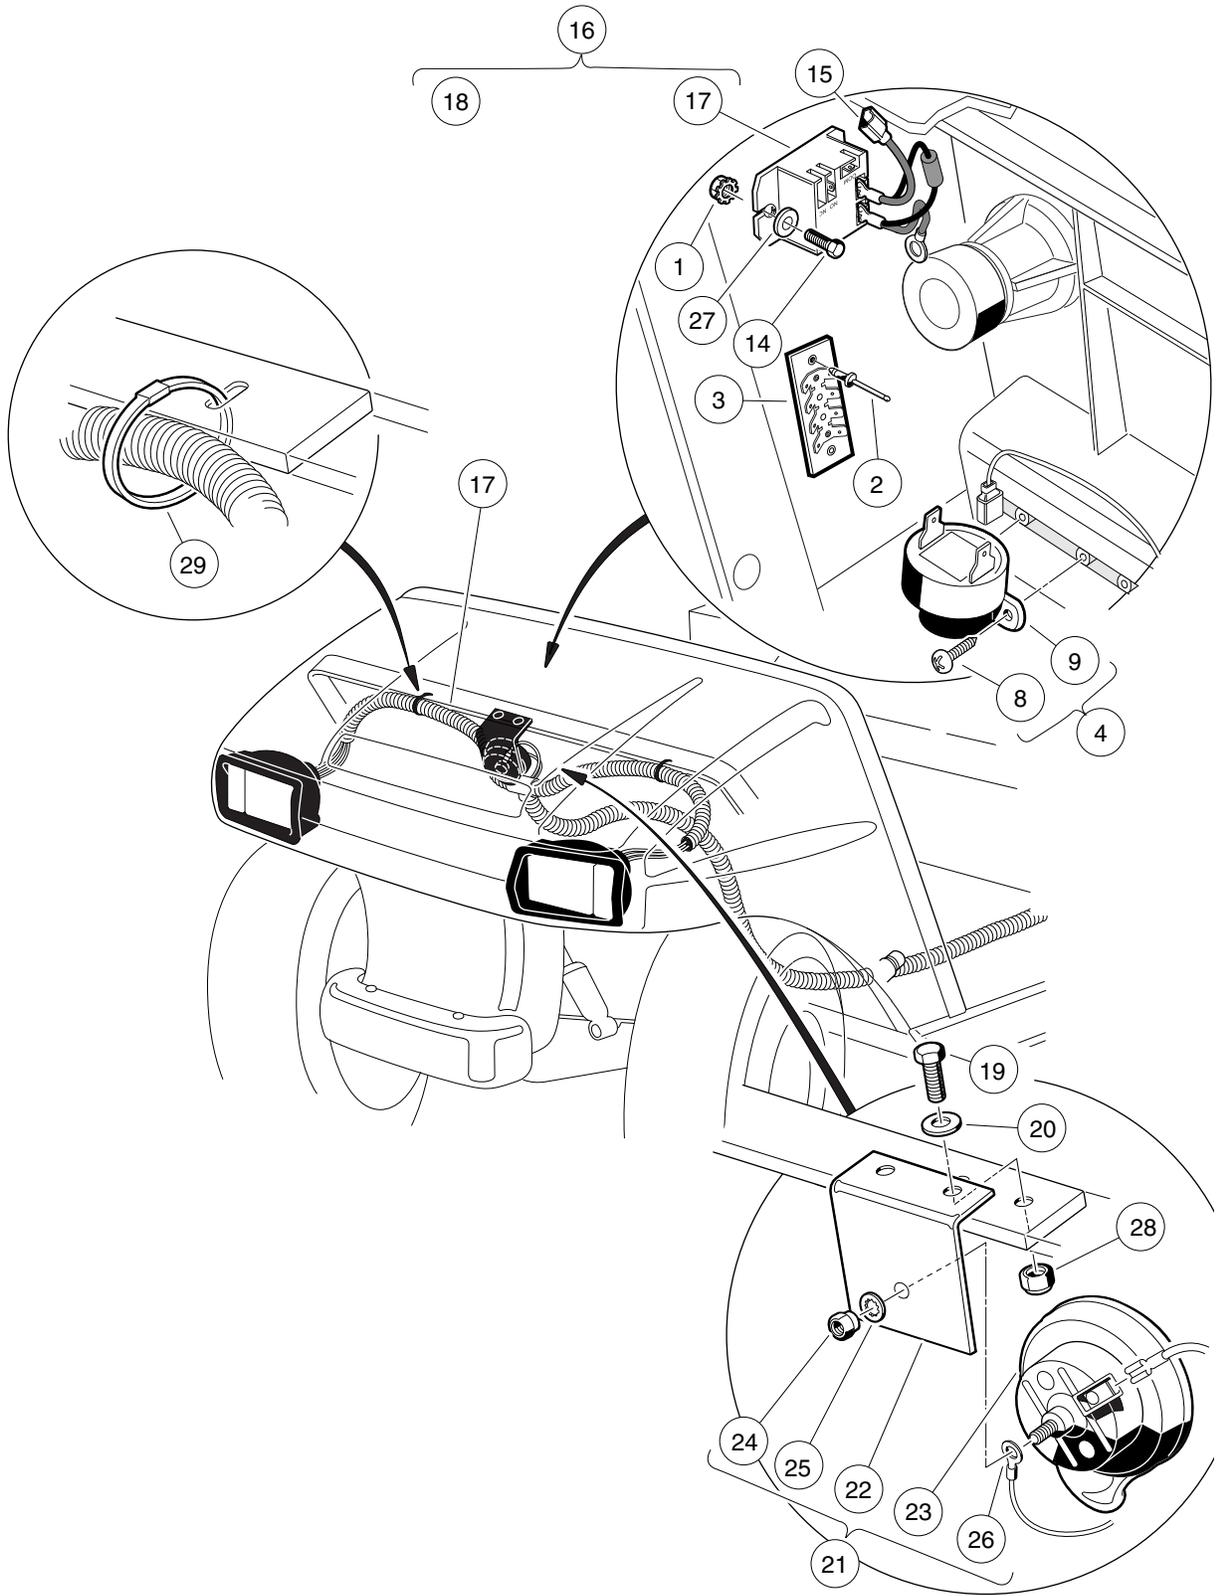

000335-002

FRONT BODY ELECTRICAL COMPONENTS – CARRYALL 6 POWERDRIVE VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011229</u>	Locknut, #6-32 Whiz	2
2	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2
3	<u>1016356</u>	Terminal Block with Insulator	1
4	<u>1016859</u>	Kit, Reverse Buzzer (includes items 5 through 13)	1
5	<u>1011229</u>	Locknut, #6-32 Whiz	1
6	<u>1012431</u>	Washer, #4 Flat	2
7	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
8	<u>1016849</u>	Screw, #4-24 X 0.33 Pan-Head Machine	2
9	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
10	<u>1016857</u>	Wire Assembly Black #18	1
11	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2
12	<u>8057</u>	Nut, #4-40 Hex Machine	2
13	<u>8058</u>	Lockwasher, #4 Split	2
14	<u>1017853</u>	Screw, #6-32 X 0.75 Hex-Head Machine	2
15	<u>101914401</u>	Assembly, Voltage Suppressor	1
16	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes items 17 and 18)	1
17	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
18	N/A	Kit, Relay, 48v 30a Instrns	1
19	<u>304</u>	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
20	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
21	<u>4029</u>	Horn (includes items 22 through 26)	1
22	<u>1011825</u>	Horn Bracket	1
23	<u>1014530</u>	Horn, 12-VDC	1
24	<u>101955101</u>	Nut, M6 Hex	1
25	<u>7820</u>	Washer, 5/16 Internal-Tooth	1
26	N/A	5/16 Ring Term.	1
27	<u>7591</u>	Washer, #6 Flat	2
28	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2
29	<u>8639</u>	Tie Wrap, 11" Nylon	4
		Note: Items 5 through 7, and 10 through 13 are included in the reverse buzzer kit, but are not used in this application.	

13

E

13

E

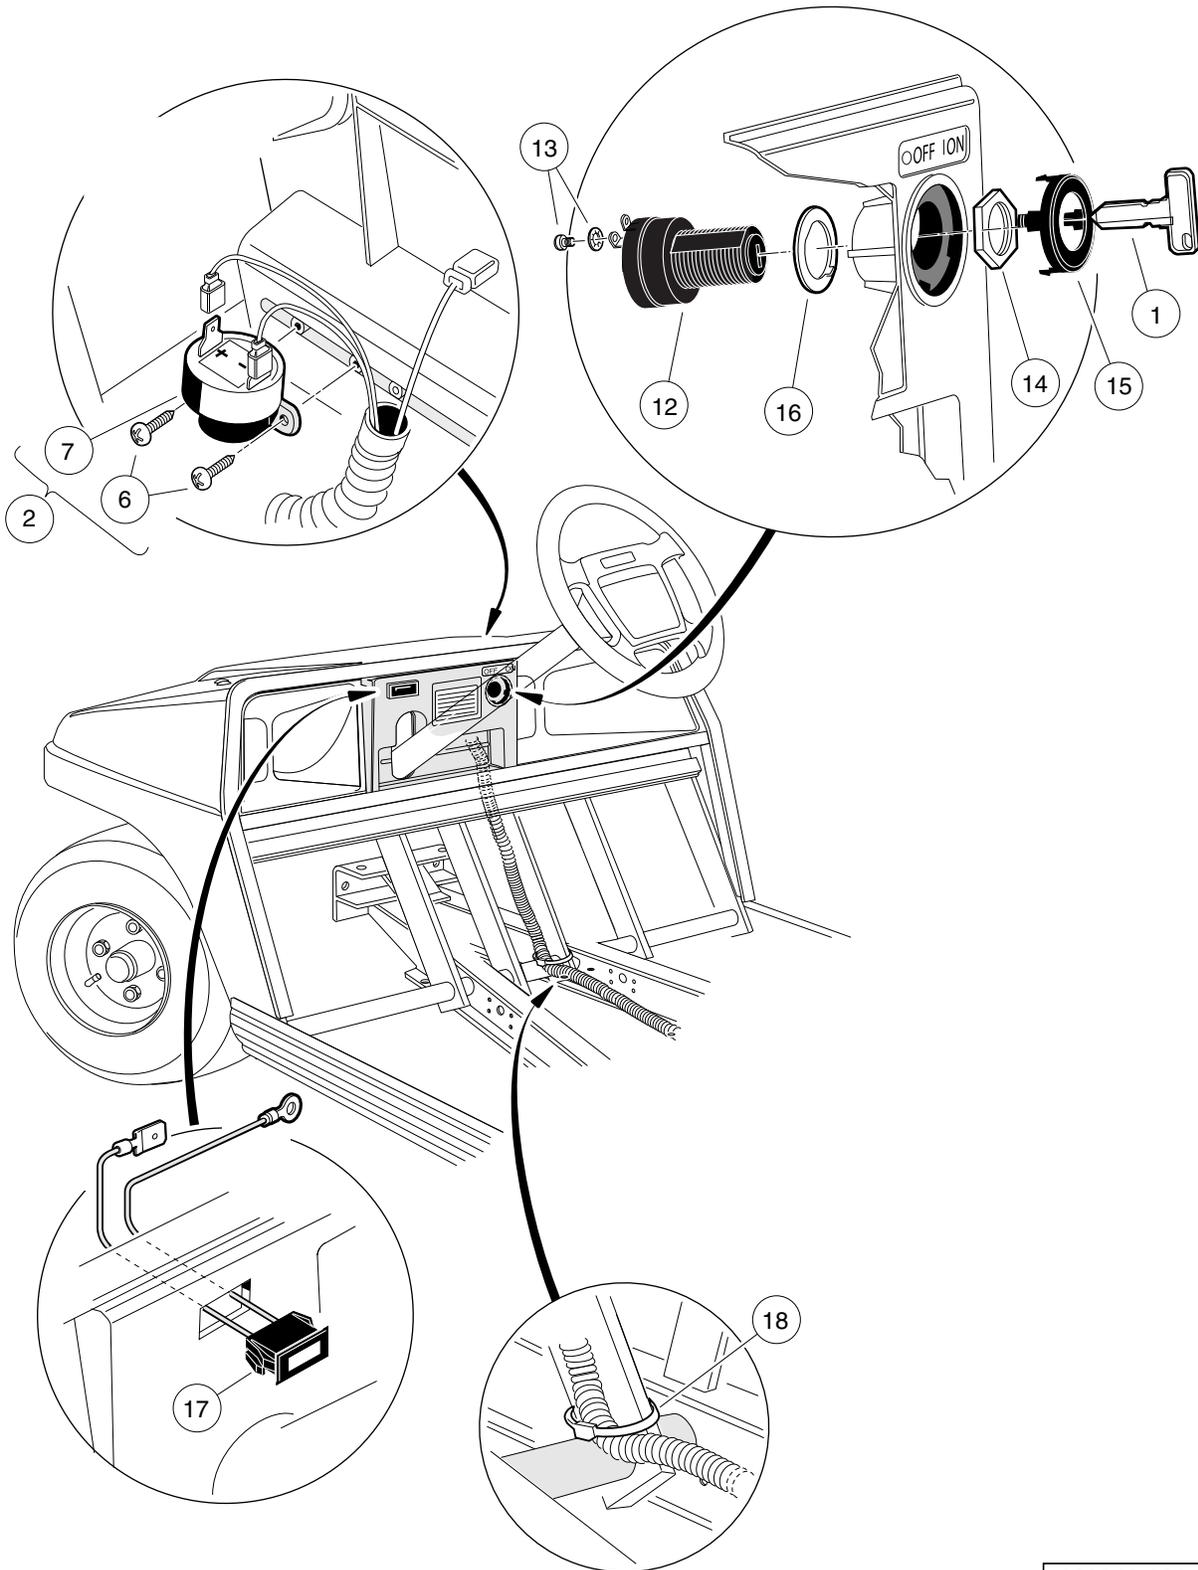


000340-001

INSTRUMENT PANEL COMPONENTS – TURF/ CARRYALL 1 AND 2

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012505</u>	Keys (set of 2)	1
2	<u>1016859</u>	Kit, Reverse Buzzer (includes items 3 through 11)	1
3	<u>1011229</u>	Locknut, #6-32 Whiz	1
4	<u>1012431</u>	Washer, #4 Flat	2
5	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
6	<u>1016849</u>	Screw, #4-24 X 0.33 Pan-Head Machine	2
7	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
8	<u>1016857</u>	Wire Assembly Black #18	1
9	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2
10	<u>8057</u>	Nut, #4-40 Hex Machine	2
11	<u>8058</u>	Lockwasher, #4 Split	2
12	<u>101826201</u>	Key Switch, On/Off	1
13	<u>101830601</u>	Screw and Washer Assembly	2
14	<u>101830701</u>	Nut, Key Switch	1
15	<u>101834502</u>	Cap, Black Key Switch	1
16	<u>101851101</u>	Washer, Key Switch	1
17	<u>101935501</u>	Light, Battery (Amber)	1
18	<u>8990</u>	Tie Wrap, 8" Nylon	2
Note: Item 2, Reverse Buzzer Kit, contains parts not used in this application.			

13

E

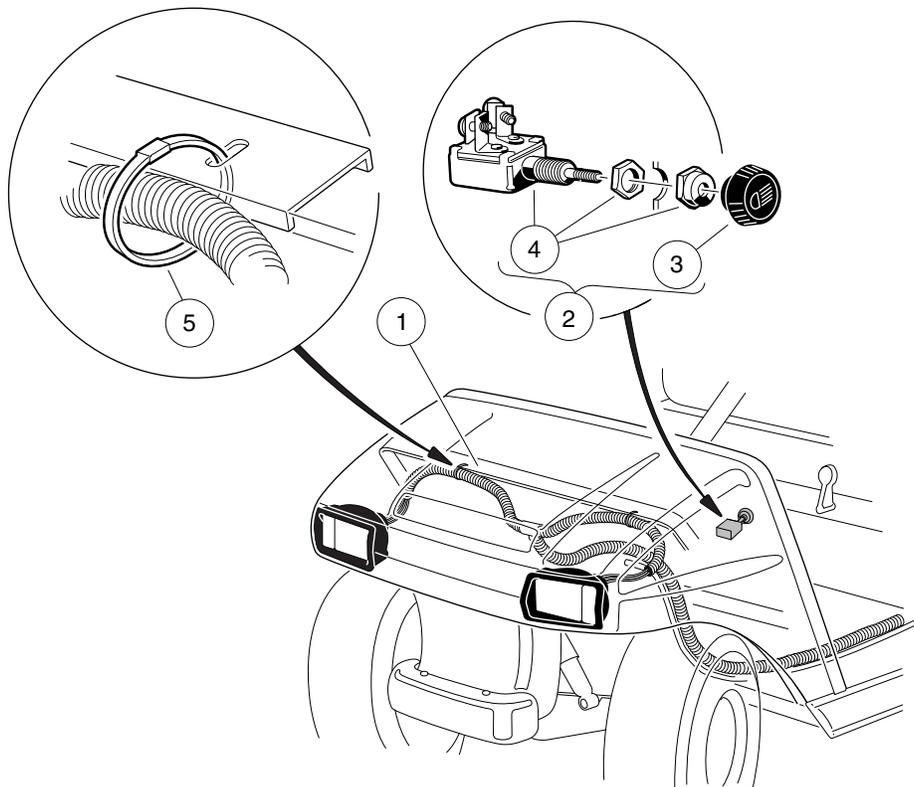


000334-002

HEADLIGHT COMPONENTS – TURF 2

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016858	Wire Harness, Headlight	1
2	<u>4034</u>	Light Switch (includes items 3 and 4)	1
3	<u>1013857</u>	Knob, Light Switch	1
4	<u>1013858</u>	Switch, Light Without Knob	1
5	<u>8990</u>	Tie Wrap, 8" Nylon	4

13

E

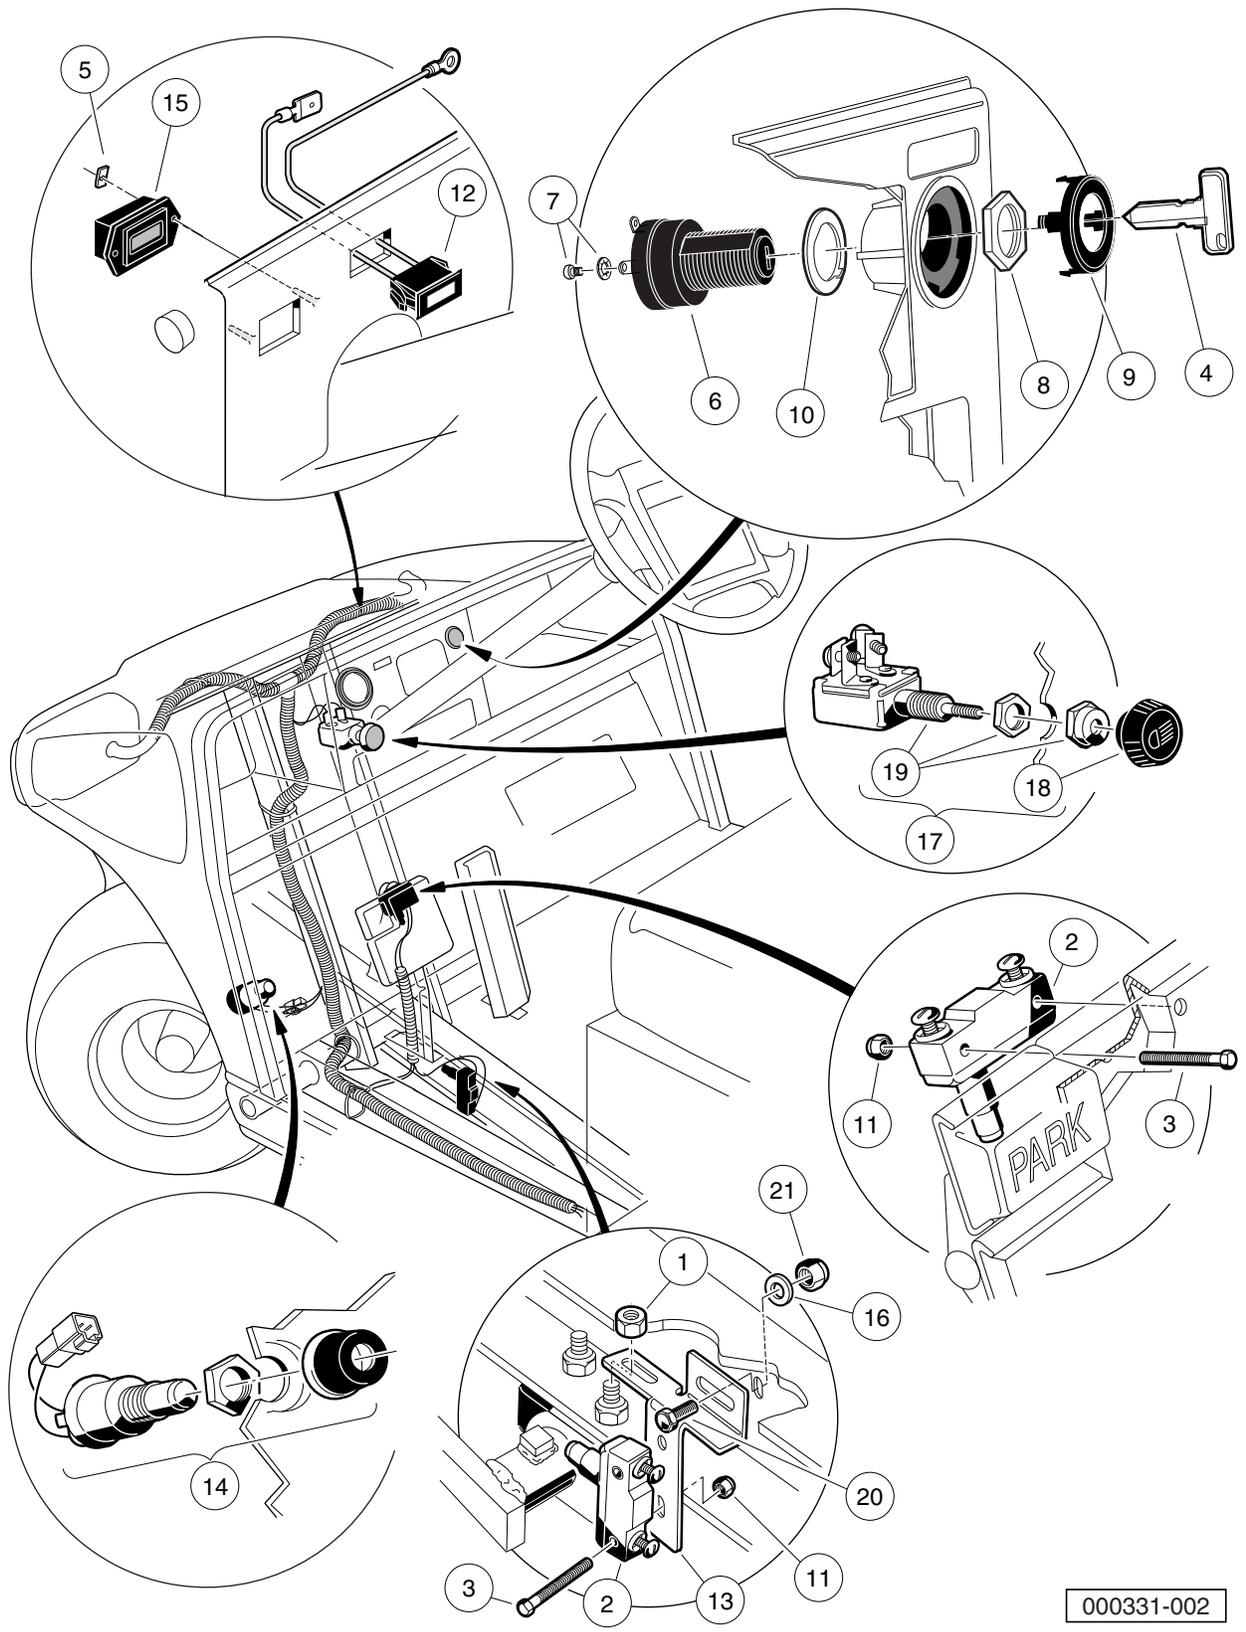


000331-002

INSTRUMENT PANEL COMPONENTS – CARRYALL 6 POWERDRIVE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011280</u>	Locknut, 5/16-18	1
2	<u>1011439</u>	Switch, Limit	2
3	<u>1011557</u>	Screw, #6-32 X 1.00 Hex-Head Machine	4
4	<u>1012505</u>	Keys (set of 2)	1
5	<u>101814701</u>	Retainer, Push-On	2
6	<u>101826201</u>	Key Switch, On/Off	1
7	101830601	Screw and Washer Assembly	2
8	<u>101830701</u>	Nut, Key Switch	1
9	<u>101834502</u>	Cap, Black Key Switch	1
10	<u>101851101</u>	Washer, Key Switch	1
11	<u>101932201</u>	Locknut, #6-32 Nylon	4
12	<u>101935501</u>	Light, Battery (Amber)	1
13	<u>101957101</u>	Bracket, Brake Light Switch	1
14	<u>101969701</u>	Horn Button and Wire Assembly	1
15	<u>103200701</u>	Battery Condition Indicator - 48V	1
16	<u>1241</u>	Washer, 5/16 Type A Flat	1
17	4034	Light Switch (includes items 18 and 19)	1
18	<u>1013857</u>	Knob, Light Switch	1
19	<u>1013858</u>	Switch, Light Without Knob	1
20	<u>7173</u>	Screw, 5/16-18 X 0.75 Hex-Head Cap	1
21	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1

13

E

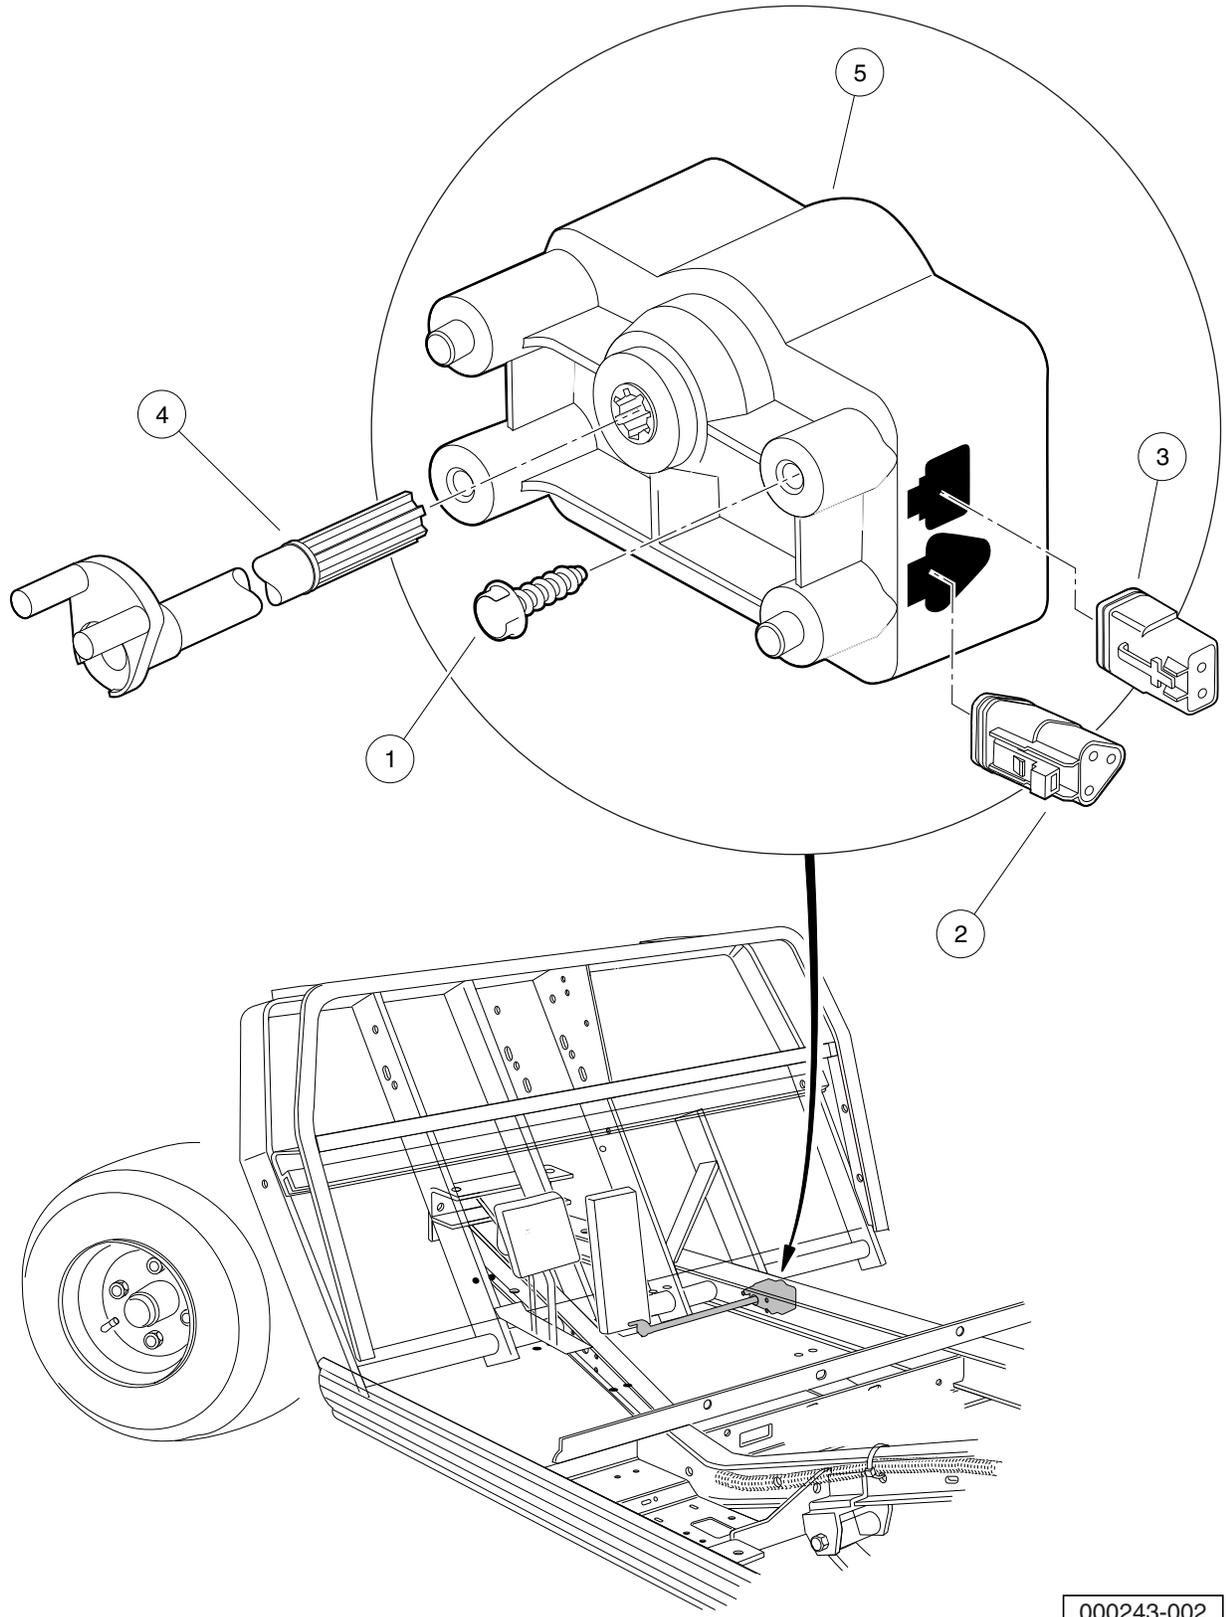

000243-002

MOTOR CONTROLLER OUTPUT REGULATOR (MCOR)


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	2
2	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
3	<u>101936801</u>	Kit, 2-Pin Wedge Lock	1
4	102101001	Bar, Drive, Cast	1
5	<u>102101101</u>	MCOR	1

13

E

13

E

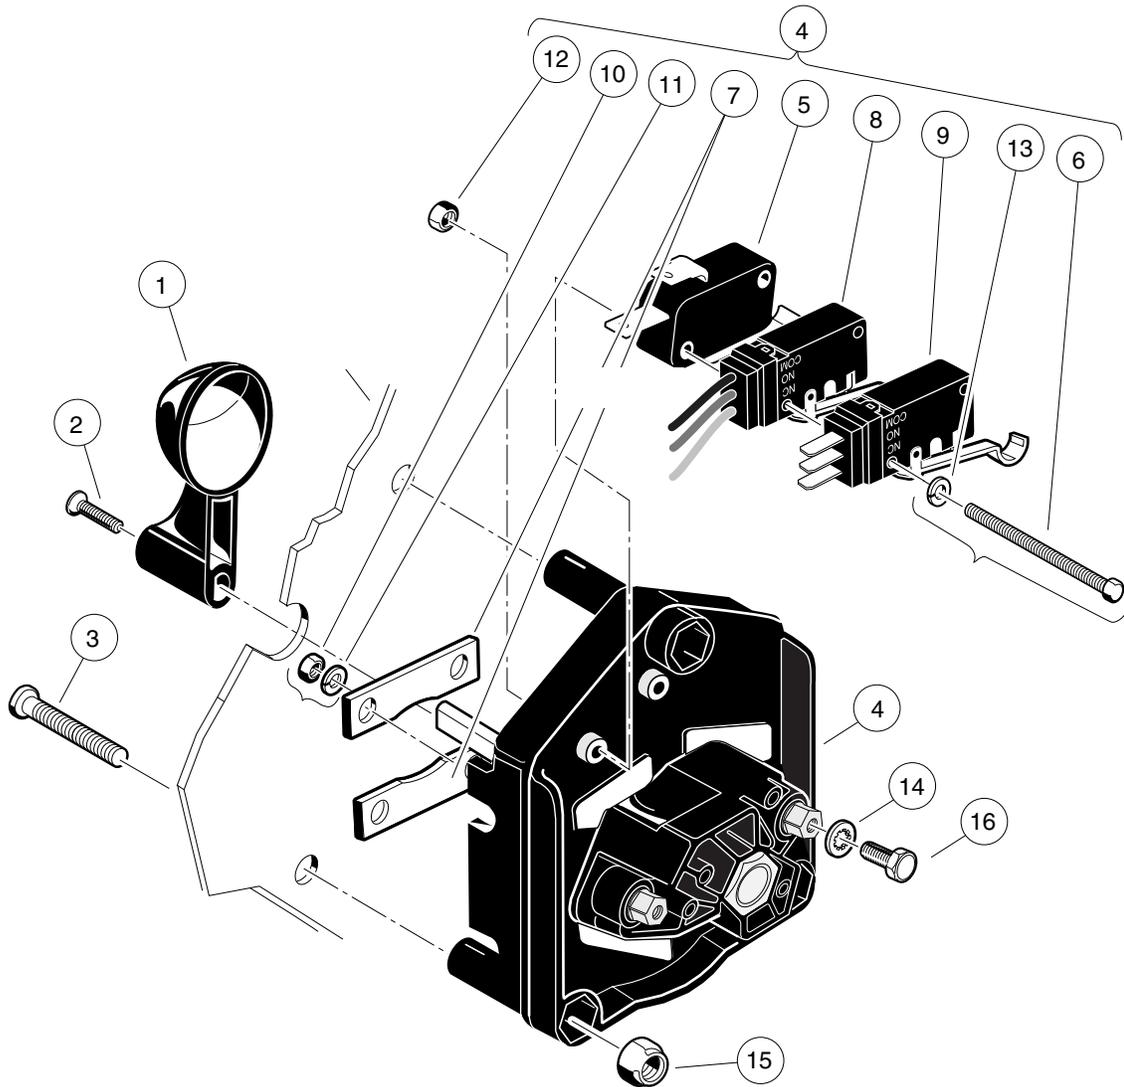


000339-001

FORWARD/REVERSE SWITCH – POWERDRIVE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012987</u>	Handle, FNR	1
2	<u>1015064</u>	Screw, #8-32 X 0.63 Machine	1
3	<u>1016845</u>	Screw, 1/4-20 X 2.125 Truss-Head	3
4	<u>101753005</u>	FNR Switch Assembly (includes items 5 through 13)	1
5	<u>1014808</u>	Switch, Limit	1
6	<u>1014871</u>	Screw, #4-40 X 2.0 Hx Wshr Hd	2
7	<u>1017799</u>	Buss Bar	2
8	<u>101979101</u>	Assembly, Switch, Limit	1
9	<u>102250201</u>	Limit Switch, Sealed Assembly	1
10	<u>1028</u>	Nut, 1/4-20 Hex	4
11	<u>451</u>	Lockwasher, 1/4 Split	4
12	<u>8057</u>	Nut, #4-40 Hex Machine	2
13	<u>8058</u>	Lockwasher, #4 Split	2
14	<u>8049</u>	Lockwasher, #10 Internal-Tooth	2
15	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	3
16	<u>8450</u>	Screw, #10-24 X 0.50 Hex-Head	2

13

E

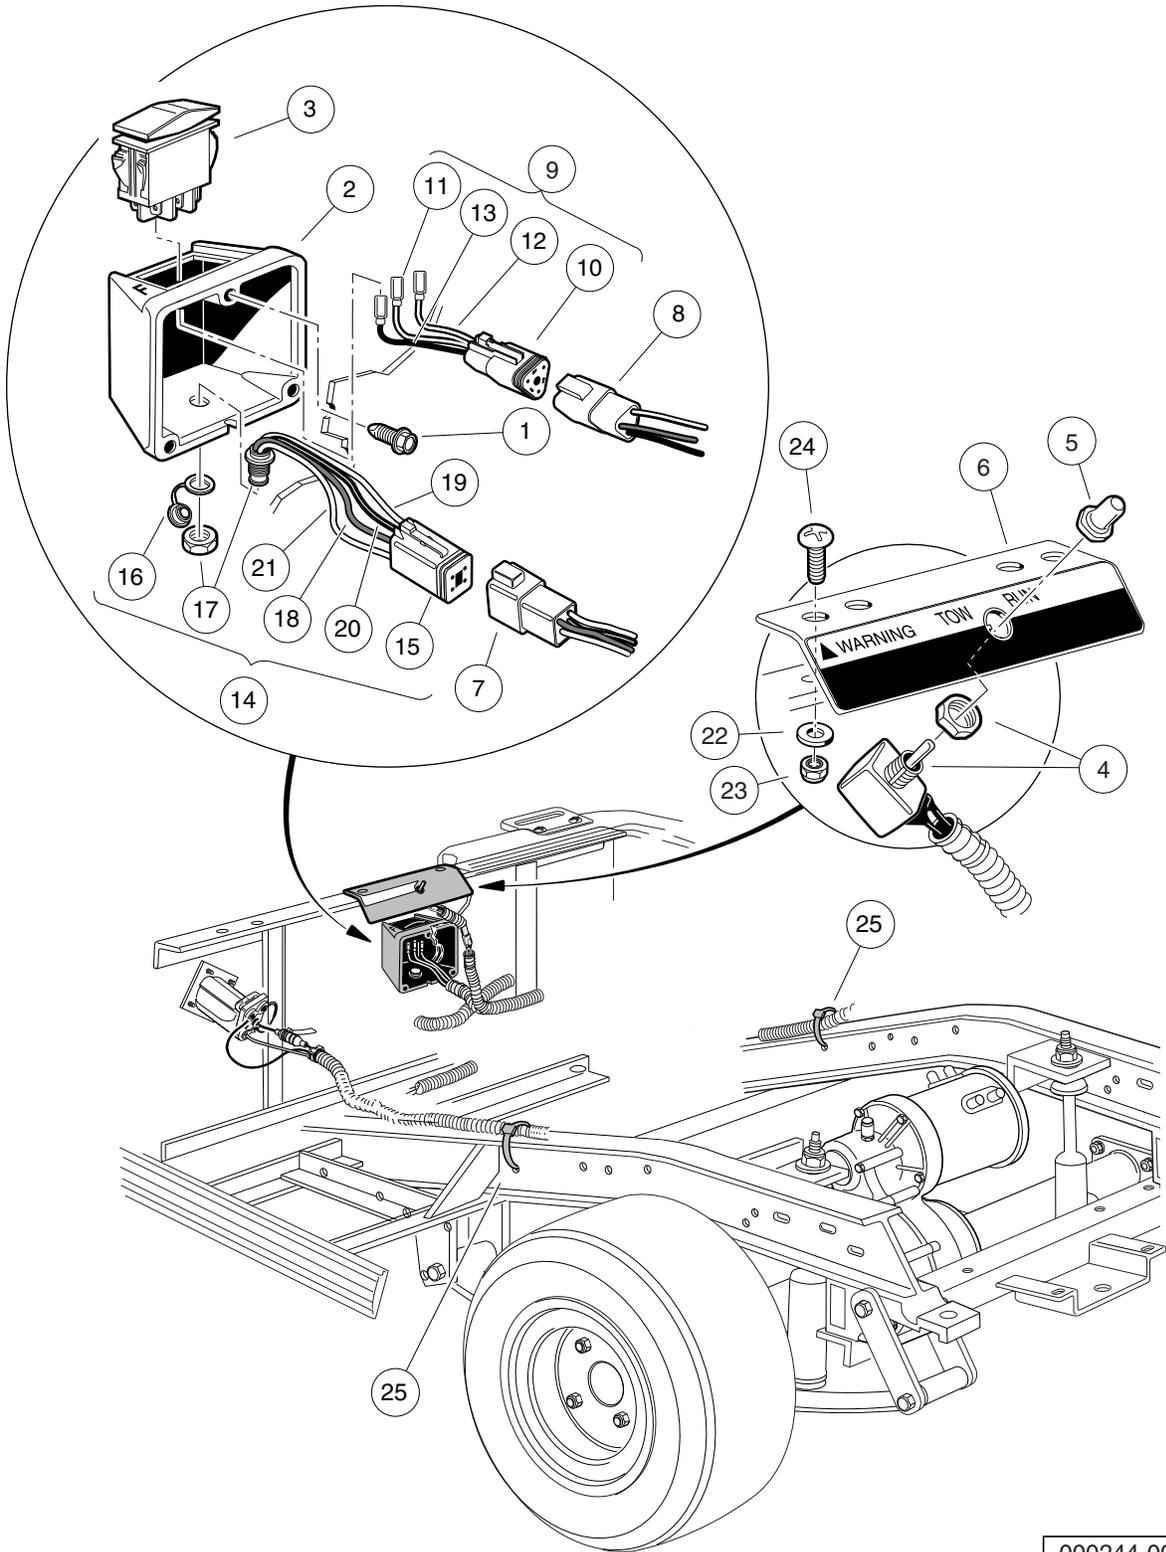



000244-001

FORWARD/REVERSE SWITCH AND TOW/RUN SWITCH – IQ SYSTEM TURF/CARRYALL 1

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3
2	101855002	Case, FNR Switch	1
3	<u>101856002</u>	Switch, Rocker, Single-Pole	1
4	<u>101908101</u>	Switch Assembly, Tow/Run	1
5	<u>101908401</u>	Boot, Switch	1
6	<u>101922501</u>	Bracket, Tow/Run Switch Mounting	1
7	<u>101932401</u>	Kit, 4-Pin Receptacle and Wedge Lock	1
8	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
9	<u>102266601</u>	Wire Assembly, FNR Switch (includes items 10 through 13)	1
10	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
11	N/A	Wire Assembly, #18 Blue	1
12	N/A	Wire Assembly, #18 Orange	1
13	N/A	Wire Assembly, #18 Brown	1
14	102266701	Wire Assembly, IQDM Port (includes items 15 through 21)	1
15	<u>101932501</u>	Kit, 4-Pin Wedge Lock	1
16	<u>102196901</u>	Dust Cap	1
17	N/A	Connector Mount, Four-Pin	1
18	N/A	Wire Assembly, #18 Red/Yellow	1
19	N/A	Wire Assembly, #18 Black/Yellow	1
20	N/A	Wire Assembly, #18 Blue/Yellow	1
21	N/A	Wire Assembly, #18 Green/Yellow	1
22	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
23	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2
24	<u>8248</u>	Screw, 1/4-20 X 0.75 Truss-Head Machine	2
25	<u>8990</u>	Tie Wrap, 8" Nylon	1

13

E

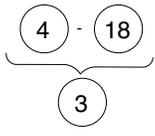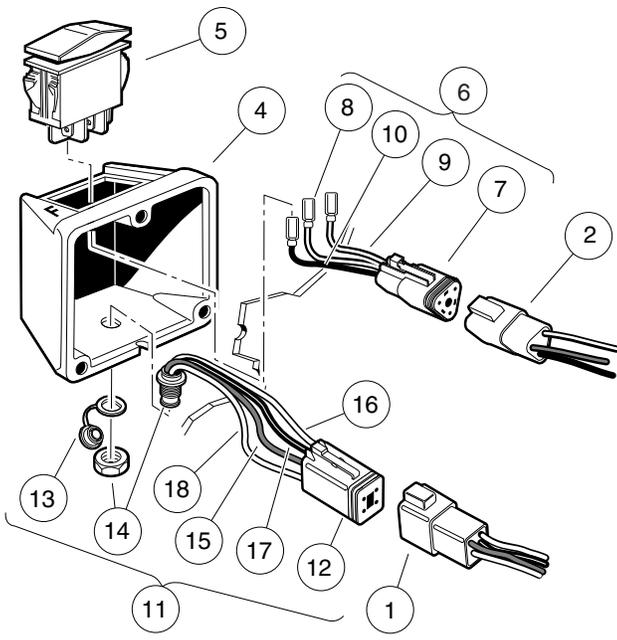

000427-001

FORWARD/REVERSE SWITCH – IQ PLUS VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101932401</u>	Kit, 4-Pin Receptacle and Wedge Lock	1
2	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
3	N/A	Asm, FNR, Switch Case, IQ (includes items 4 through 11)	1
4	101855002	Case, FNR Switch	1
5	<u>101856002</u>	Switch, Rocker, Single-Pole	1
6	<u>102266601</u>	Wire Assembly, FNR Switch (includes items 7 through 10)	1
7	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
8	N/A	Wire Assembly, #18 Blue	1
9	N/A	Wire Assembly, #18 Orange	1
10	N/A	Wire Assembly, #18 Brown	1
11	102266701	Wire Assembly, IQDM Port (includes items 12 through 18)	1
12	<u>101932501</u>	Kit, 4-Pin Wedge Lock	1
13	<u>102196901</u>	Dust Cap	1
14	N/A	Connector Mount, Four-Pin	1
15	N/A	Wire Assembly, #18 Red/Yellow	1
16	N/A	Wire Assembly, #18 Black/Yellow	1
17	N/A	Wire Assembly, #18 Blue/Yellow	1
18	N/A	Wire Assembly, #18 Green/Yellow	1

13

E

13

E

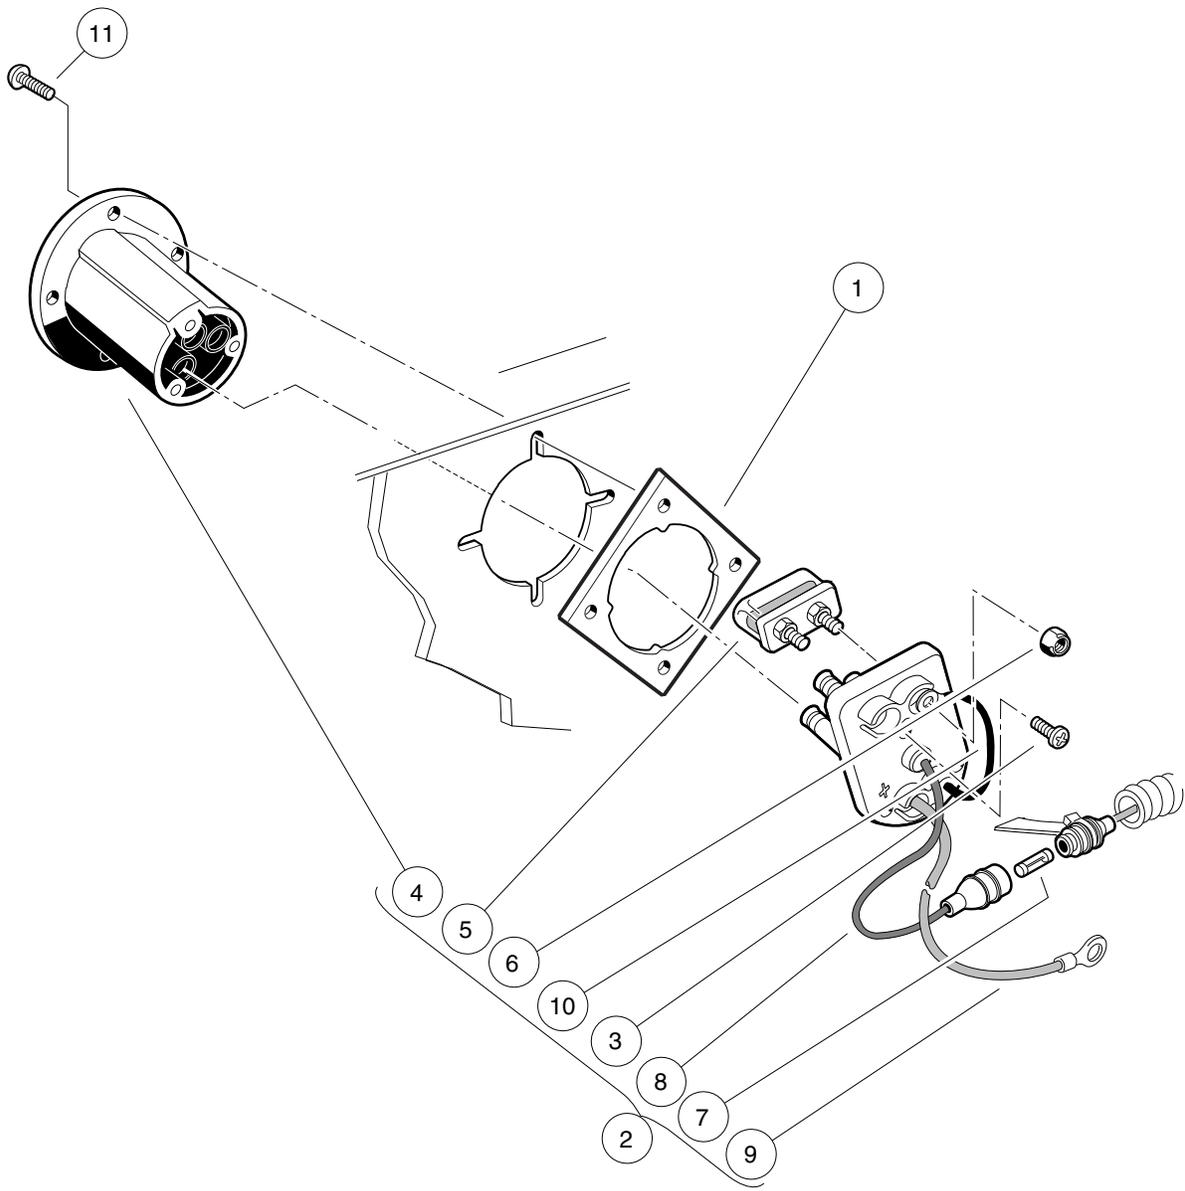

000369-001

BATTERY CHARGER RECEPTACLE – TURF/ CARRYALL 1 VEHICLES ONLY


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101801001</u>	Plate, Receptacle Backing	1
2	<u>101802101</u>	Fuse and Receptacle Assembly (includes items 3 through 10)	1
3	<u>1017705</u>	Screw, #8 X 5/8 Phillips Pan-Head Type AB	3
4	<u>101796501</u>	Receptacle	1
5	<u>101796801</u>	Fuse Assembly (includes item 6)	1
6	<u>1013061</u>	Locknut, #10-32 Nylon Insert	2
7	N/A	Fuse, 3/8-Amp	1
8	N/A	Wire Assembly, Sense Lead, Gray	1
9	N/A	Wire Assembly, #10 Red	1
10	N/A	Wire Assembly, #10 Black	1
11	<u>101832001</u>	Screw, #7-19 X 0.625 Phillips Pan-Head Tap	4

13

E

13

E

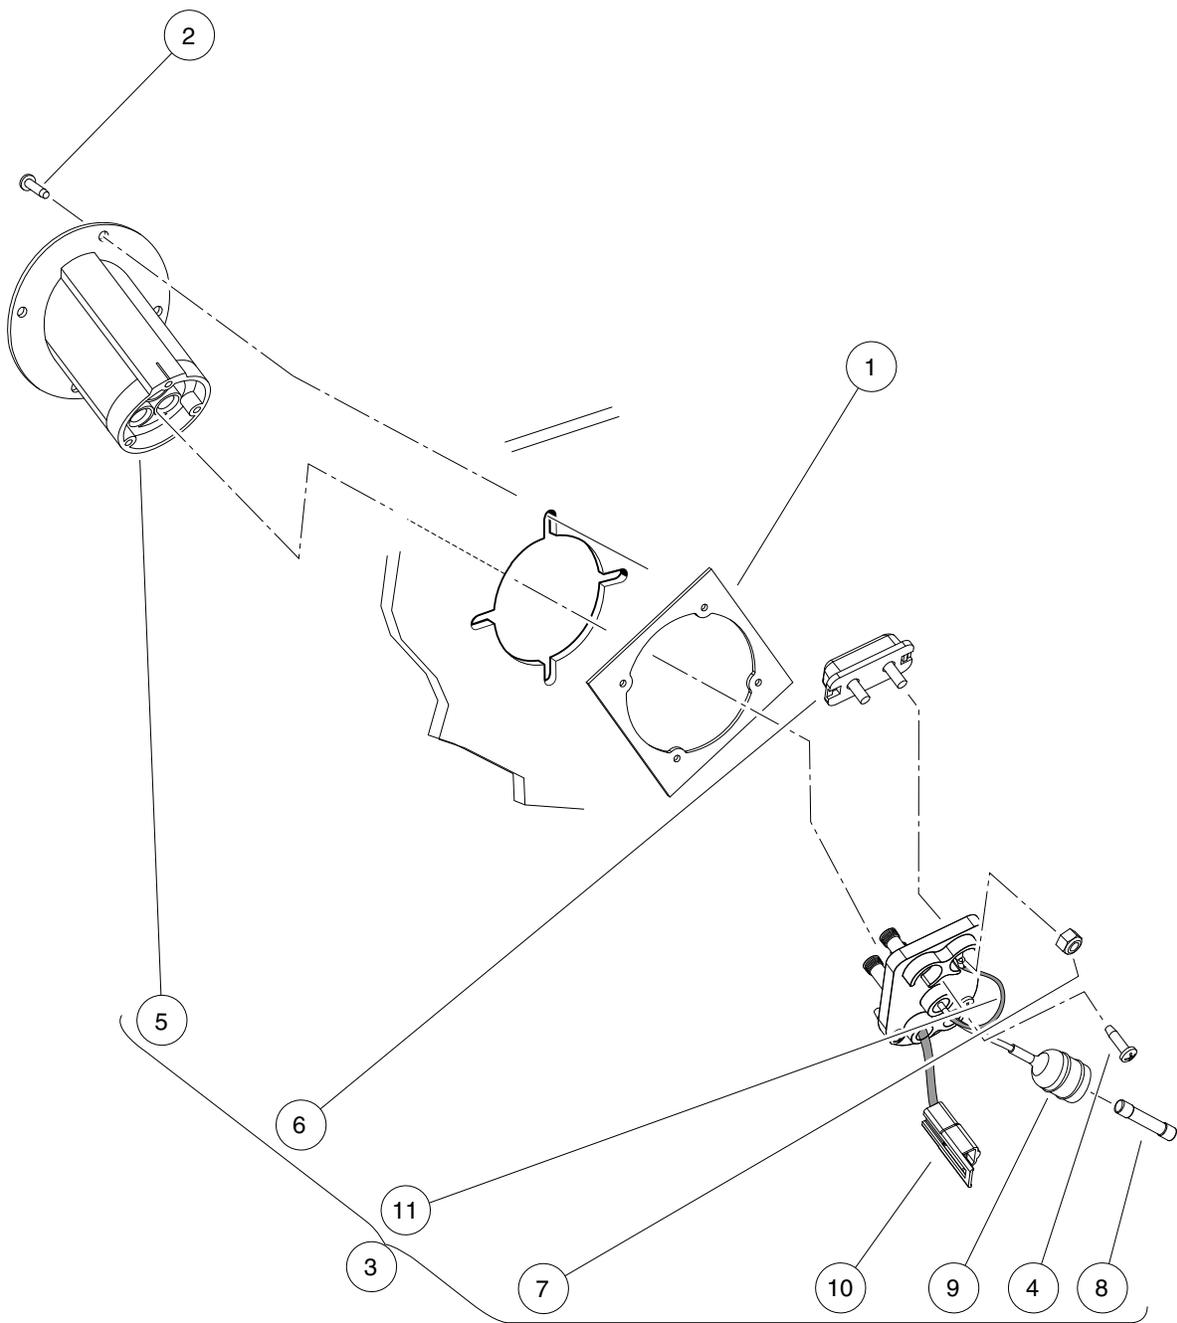


000369-002

BATTERY CHARGER RECEPTACLE – TURF/CARRYALL 2 IQ PLUS VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101801001</u>	Plate, Receptacle Backing	1
2	<u>101832001</u>	Screw, #7-19 X 0.625 Phillips Pan-Head Tap	4
3	<u>102848701</u>	Fuse and Receptacle Assembly (includes items 4 through 11)	1
4	<u>1017705</u>	Screw, #8 X 5/8 Phillips Pan-Head Type AB	3
5	<u>101796501</u>	Receptacle	1
6	<u>101796801</u>	Fuse Assembly (includes item 7)	1
7	<u>1013061</u>	Locknut, #10-32 Nylon Insert	2
8	N/A	Fuse, 3/8-Amp	1
9	N/A	Wire Assembly, Sense Lead, Gray	1
10	N/A	Wire Assembly, #10 Red	1
11	N/A	Wire Assembly, #10 Black	1

13

E

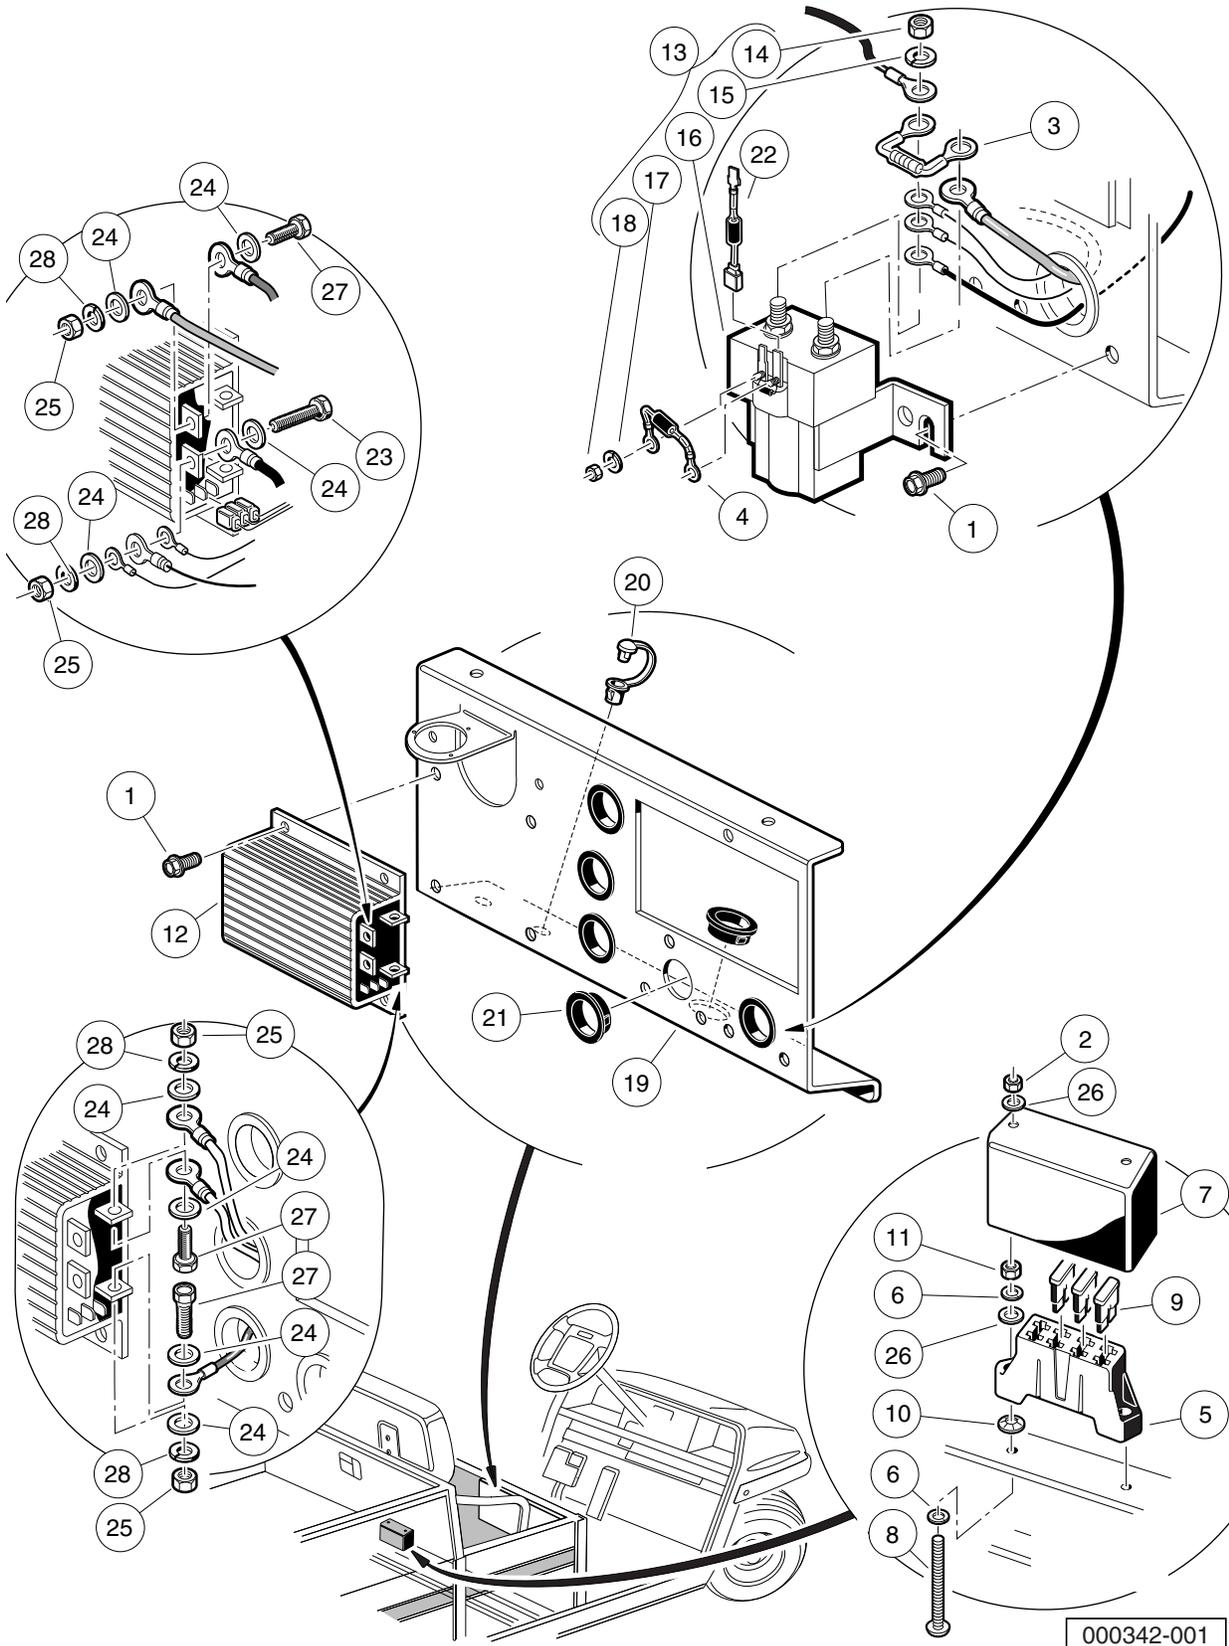


CENTER BODY ELECTRICAL COMPONENTS – CARRYALL 6 POWERDRIVE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	6
2	<u>1012438</u>	Locknut, #10-24 Nylon Insert	2
3	<u>1014947</u>	Resistor Assembly	1
4	1014948	Diode	1
5	<u>1015741</u>	Fuse Block	1
6	<u>1016</u>	Lockwasher, #10 Split	4
7	<u>1016363</u>	Fuse Block Cover	1
8	<u>1016366</u>	Screw, #10-24 X 3.0 Pan-Head Machine	2
9	<u>1016423</u>	Fuse, 20-Amp	3
10	<u>1016631</u>	Push Nut	2
11	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
12	<u>101840203</u>	Controller, 48-Volt, 300-Amp Series	1
13	<u>101908701</u>	Solenoid, 48-Volt (includes items 14 through 18)	1
14	<u>1012528</u>	Nut, M8-1.25 Hex	2
15	<u>1013734</u>	Lockwasher, 8mm Split	2
16	N/A	Solenoid, 48-Volt	1
17	N/A	Washer, Lock	2
18	N/A	Nut	2
19	<u>101911701</u>	Plate, Electrical Component Mounting	1
20	<u>101918301</u>	Clamp, Plastic Wire	2
21	<u>101924301</u>	Bushing, Snap	6
22	<u>102273101</u>	Diode Assembly	1
23	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	1
24	<u>1241</u>	Washer, 5/16 Type A Flat	8
25	<u>1242</u>	Nut, 5/16-18 Hex	4
26	<u>183</u>	Washer, #10 Type A Flat	4
27	<u>7173</u>	Screw, 5/16-18 X 0.75 Hex-Head Cap	3
28	<u>7174</u>	Lockwasher, 5/16 Split	4

13

E

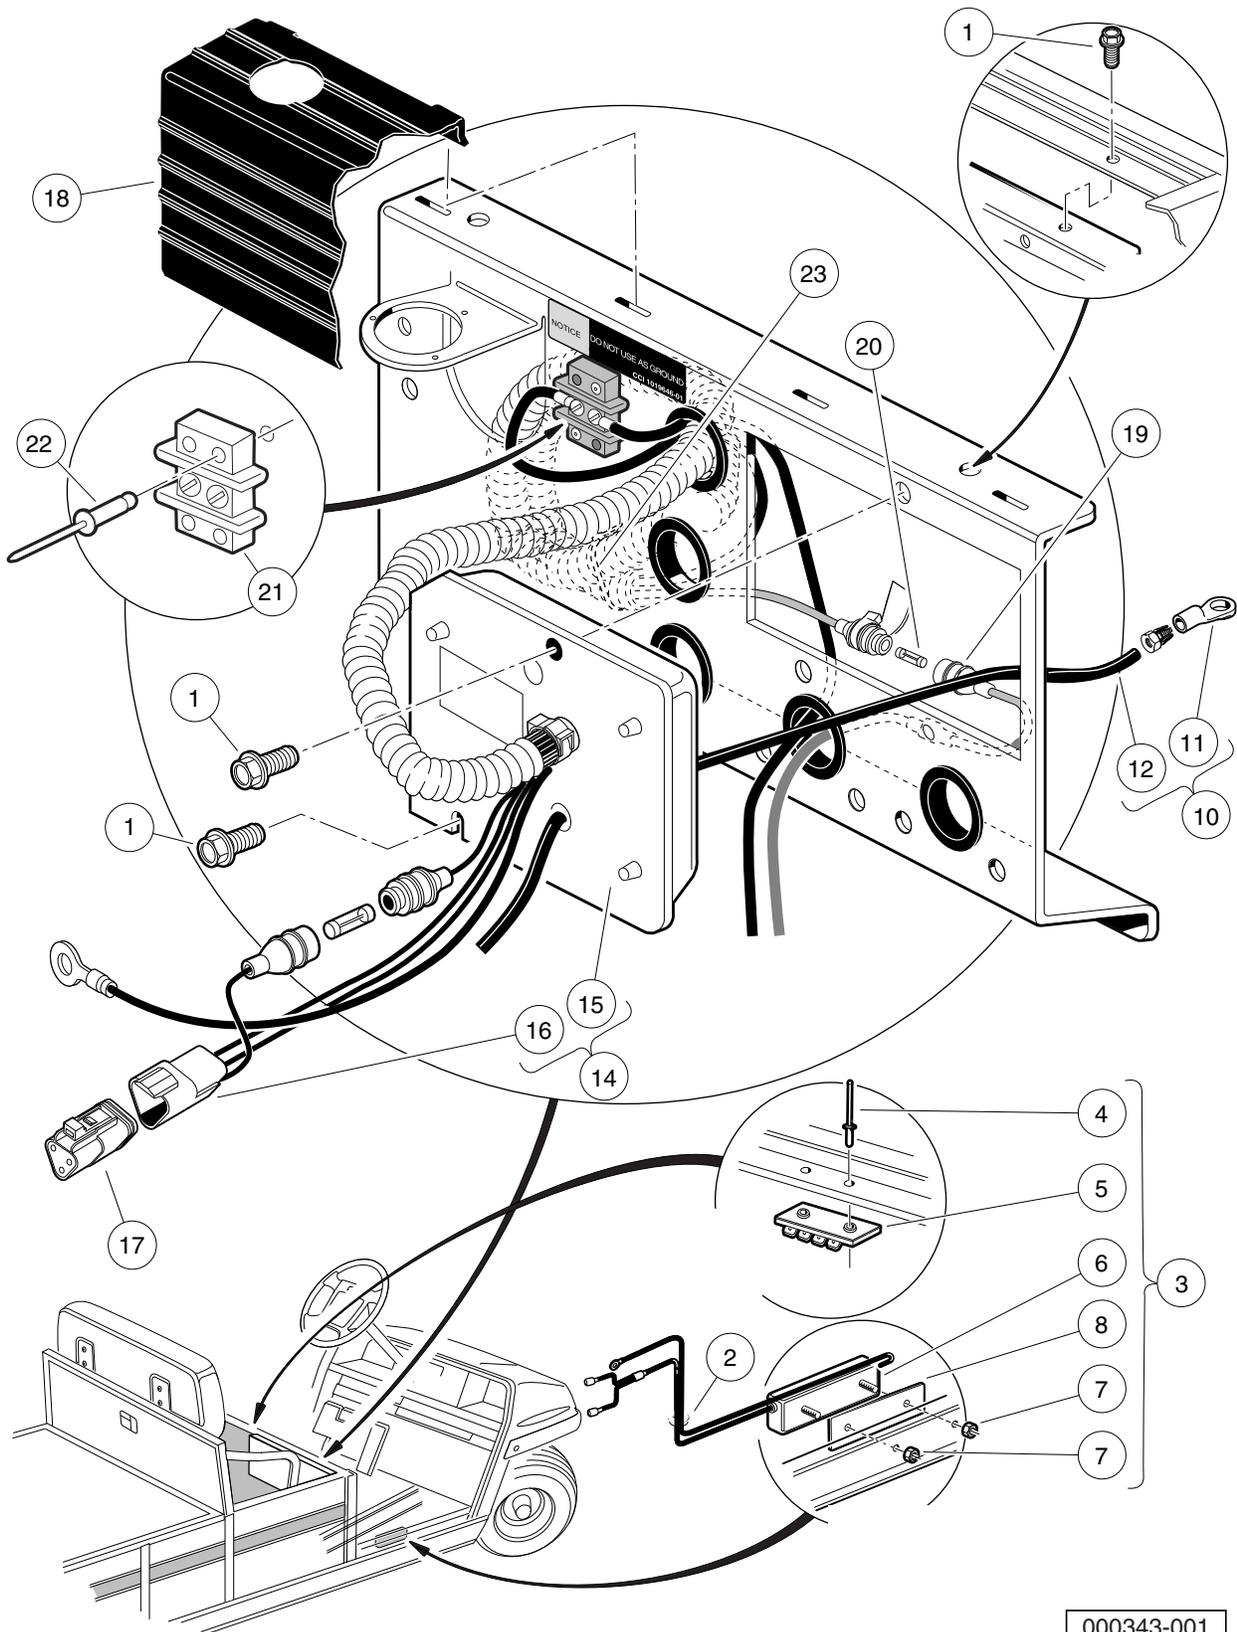

000343-001

CENTER BODY ELECTRICAL COMPONENTS, CONTINUED – CARRYALL 6 POWERDRIVE


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4
2	<u>101802401</u>	Grommet	1
3	N/A	Kit, 12-Volt Regulator (includes items 4 through 8)	1
4	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2
5	<u>1016356</u>	Terminal Block with Insulator	1
6	101810501	Limiter, Voltage	1
7	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	2
8	<u>101962601</u>	Gasket, Voltage Limiter	1
9	<u>101827802</u>	Ground Wire Kit, 48-Volt (includes items 10 through 12)	1
10	101826801	Compression Lug	1
11	N/A	Wire Assembly, Black	1
12	<u>8990</u>	Tie Wrap, 8" Nylon	3
13	<u>101909903</u>	Onboard Computer (includes items 14 and 15)	1
14	N/A	Onboard Computer	1
15	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
16	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
17	<u>101931601</u>	Cover, Component	1
18	<u>101957501</u>	Plug, 2-Way (includes item 19)	1
19	N/A	Fuse, 3/8-Amp	1
20	<u>101966801</u>	Block, Terminal	1
21	<u>101968801</u>	Rivet, 3/16", Pop	2
22	<u>102900501</u>	Bearing	1
23	<u>8990</u>	Tie Wrap, 8" Nylon	1
<p>Note: Item 9 is included in kit, but not used in this application. Item 13 is included in the kit, but is not used in this application.</p>			

13



E

13

E

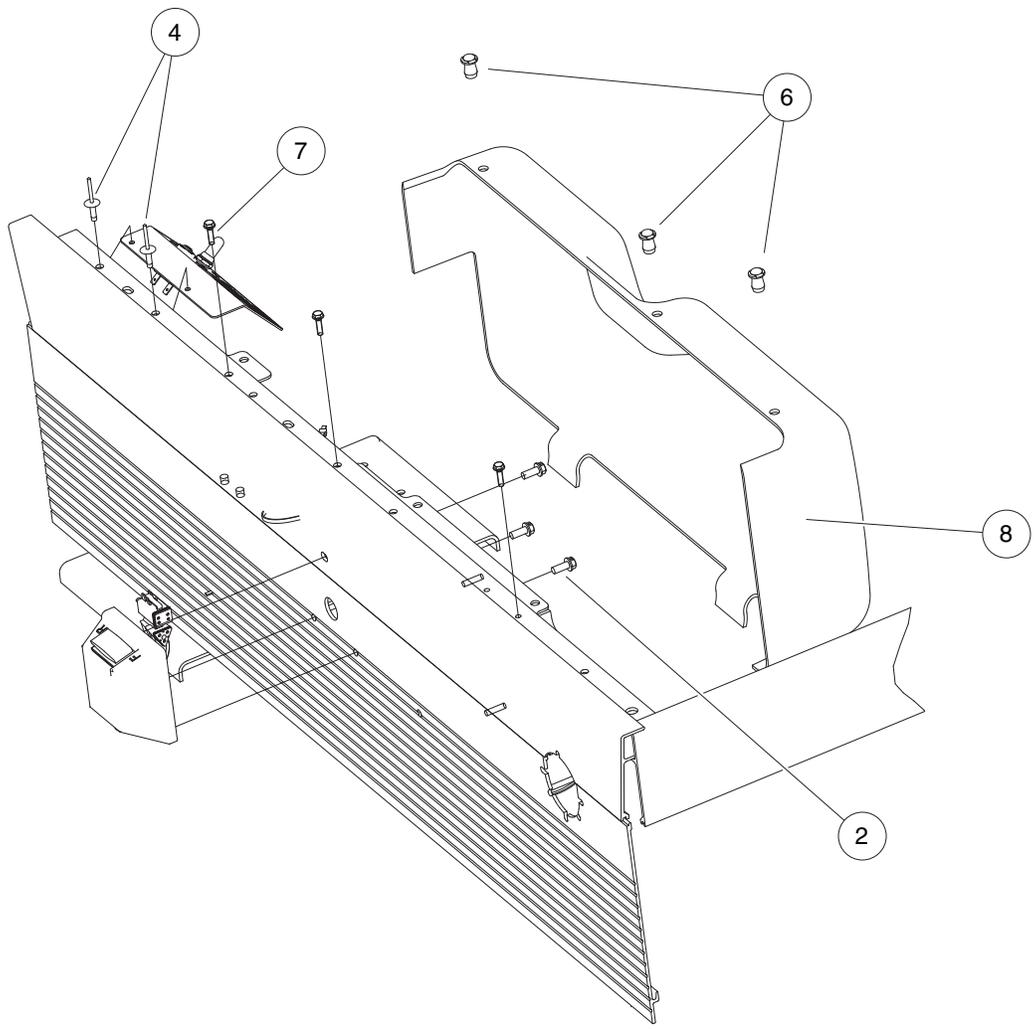

000428-001

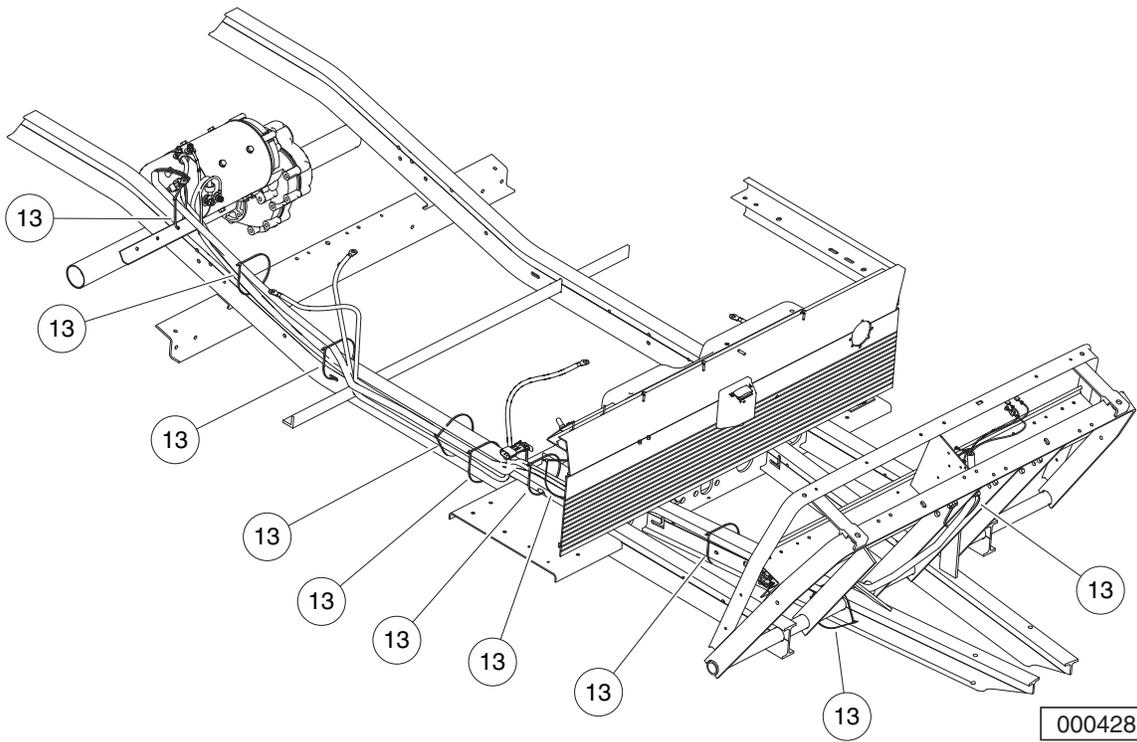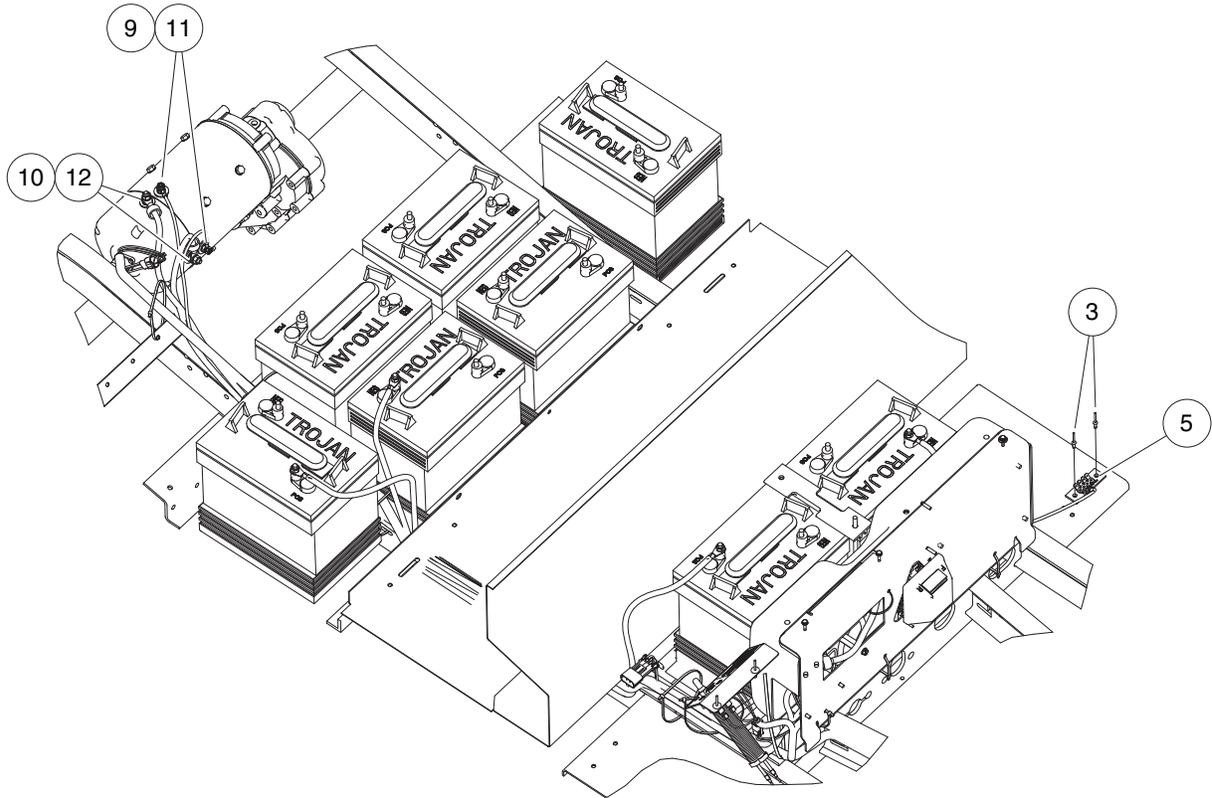

000428-001

13

E


See previous two pages for illustration.

ELECTRICAL INSTALLATION – CARRYALL 6 IQ PLUS VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Electrical Installation - Stretch Chassis IQ Plus (includes items 2 through 13)	1
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3
3	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2
4	<u>1015392</u>	Rivet, 3/16 Pop	2
5	<u>1016356</u>	Terminal Block with Insulator	1
6	<u>1016967</u>	Blind Rivet, Push Type	3
7	<u>102238001</u>	#10-24 Taptite Screw	3
8	<u>102772402</u>	Cover, Electrical Component, Carryall 6	1
9	<u>1028</u>	Nut, 1/4-20 Hex	2
10	<u>1242</u>	Nut, 5/16-18 Hex	2
11	<u>451</u>	Lockwasher, 1/4 Split	2
12	<u>7174</u>	Lockwasher, 5/16 Split	2
13	<u>8990</u>	Tie Wrap, 8" Nylon	11

13

E

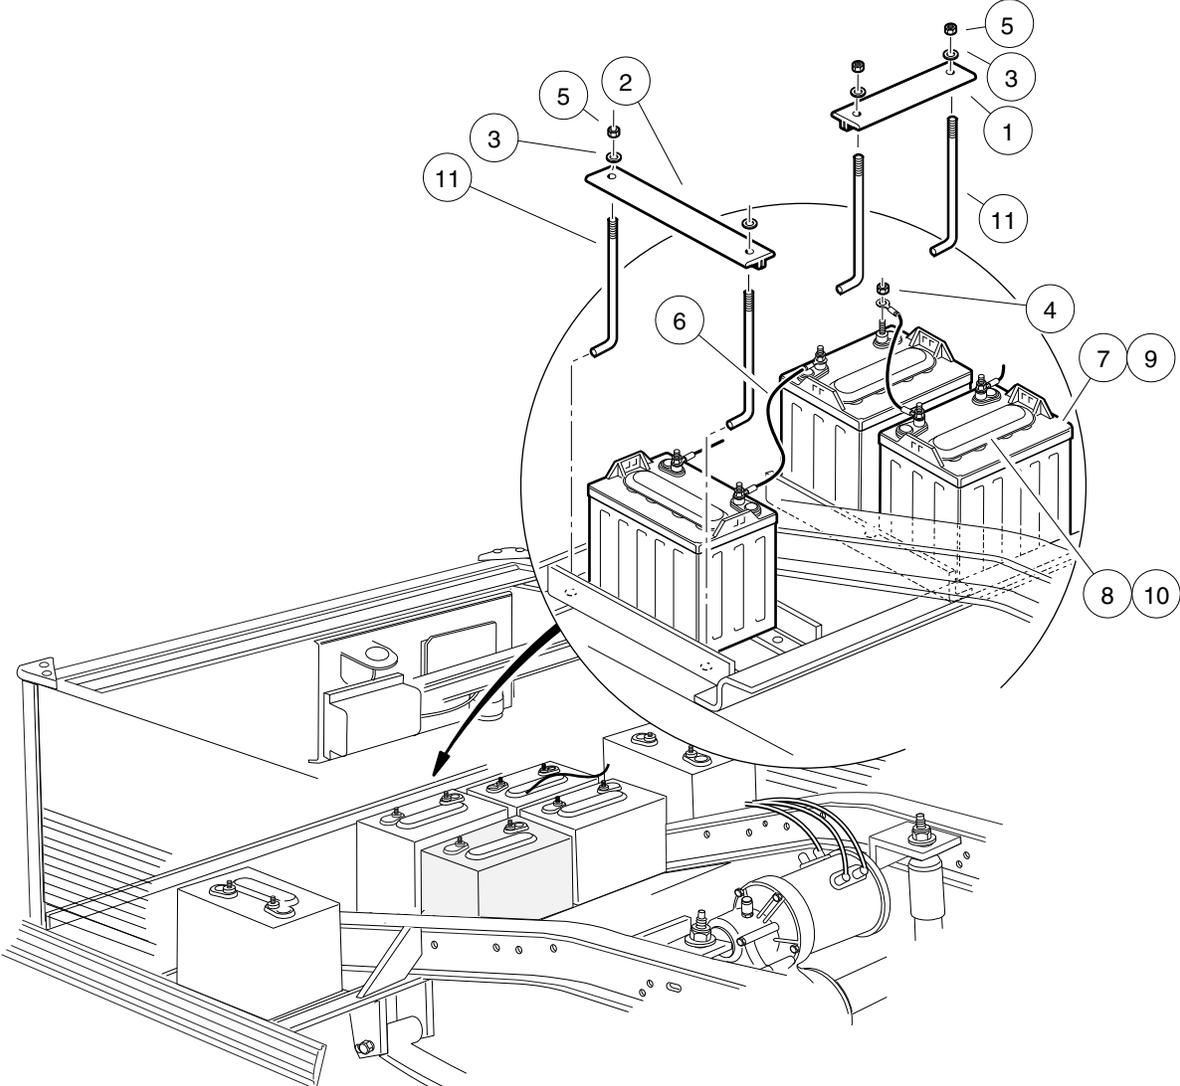

000344-001

BATTERIES – TURF/CARRYALL 2 POWERDRIVE VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101090801</u>	Hold-Down, Battery	2
2	<u>101090802</u>	Hold-Down, Battery	2
3	<u>1011578</u>	Washer, 5/16 Type B Flat	8
4	<u>1014304</u>	Nut, 5/16-18 Stainless-Steel Hex	12
5	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	8
6	<u>101795701</u>	Asm, Wire, #6blk 13in	5
7	<u>101797701</u>	Battery, 8-Volt, T875 (includes item 8)	6
8	<u>101797801</u>	Cap, 4-Gang Battery	1
9	<u>101797702</u>	Battery, 8-Volt, T875 Moist (also known as dry) (includes item 10)	6
10	<u>101797801</u>	Cap, 4-Gang Battery	1
11	<u>102845203</u>	Rod, Battery Hold Down 10.7"	8

13



E

13

E

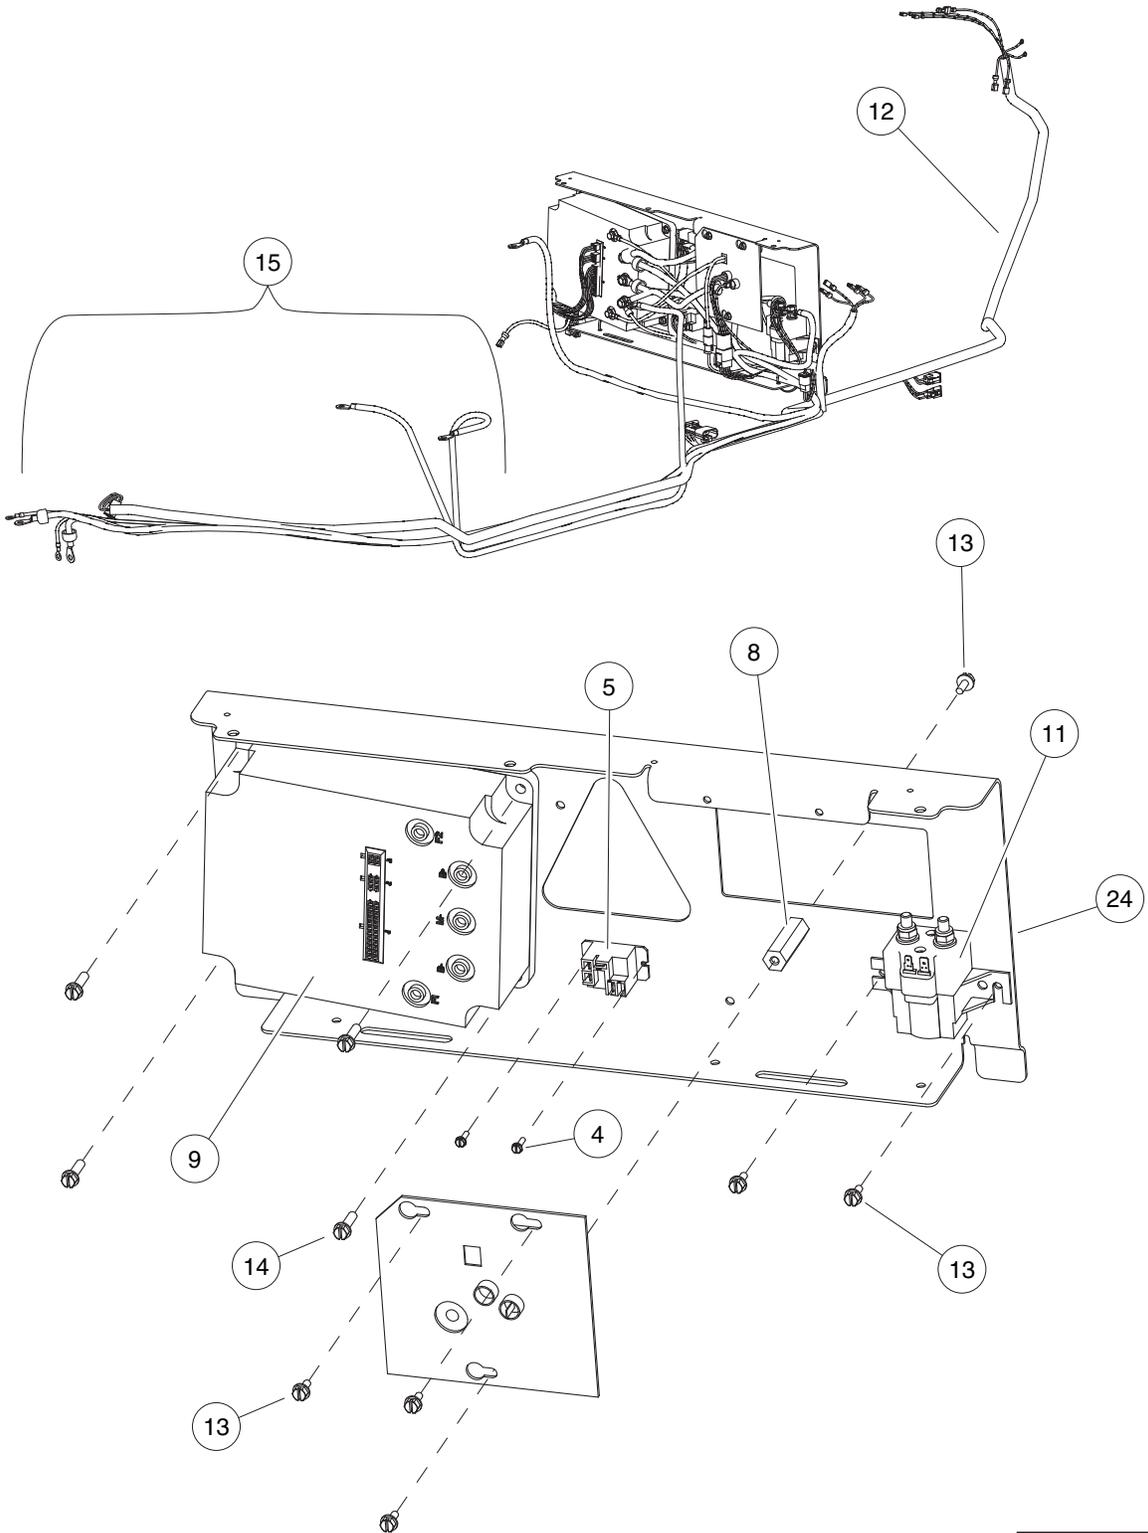

000424-001

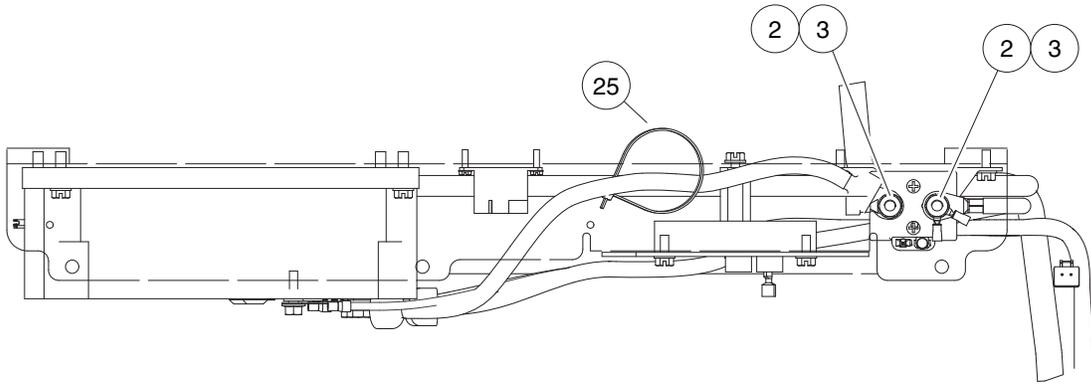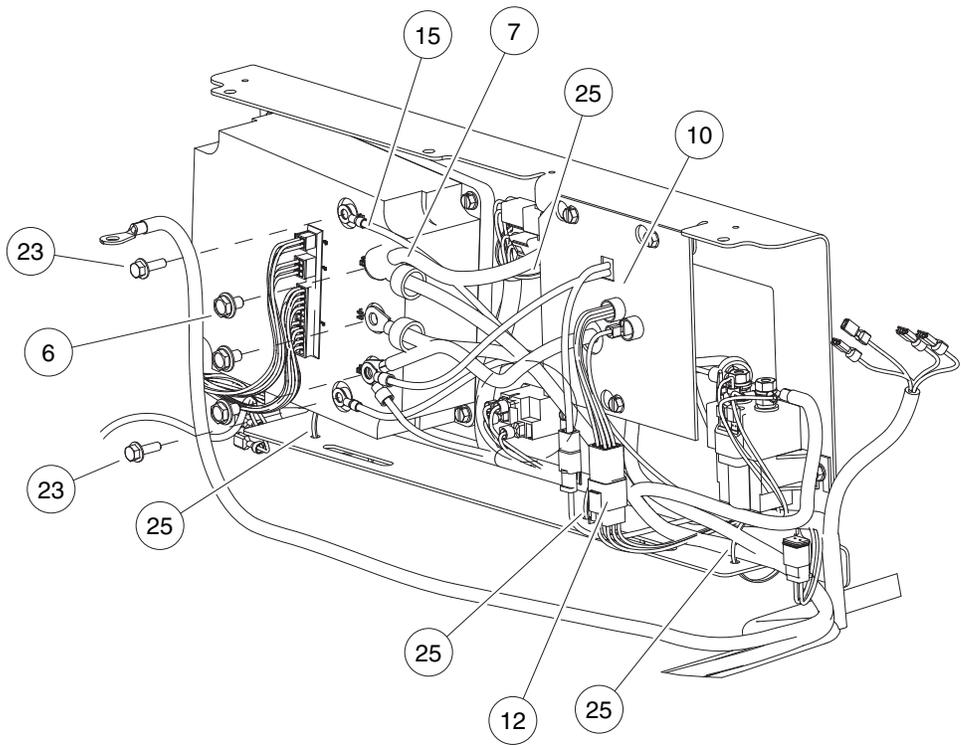

000424-001

13

E


See previous two pages for illustration.

CENTER BODY ELECTRICAL COMPONENTS – CARRYALL 6 IQ PLUS VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Component Mounting Plate Assembly (includes items 2 through 27)	1
2	<u>1012528</u>	Nut, M8-1.25 Hex	2
3	<u>1013734</u>	Lockwasher, 8mm Split	2
4	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	2
5	<u>102240501</u>	Bolt, Controller, Terminal	3
6	<u>102440901</u>	Wire Asm, #4 Yellow, 13"	1
7	<u>102769701</u>	Spacer, 2", 1/4-20, Hex	1
8	<u>102774501</u>	Controller, 500 Amp	1
9	<u>102774601</u>	Computer, Onbrd, 8x 6v, 64"	1
10	<u>102774701</u>	Solenoid, 48v	1
11	<u>102810601</u>	Wire Harness, HDIQ, CA6	1
12	<u>102817101</u>	Screw, 1/4-20 X .50 Hex Wsh Hd	6
13	<u>102817201</u>	Screw, 1/4-20 X .88 Hex Wsh Hd	4
14	<u>102845501</u>	Harness, Power, Stretch IQ Plus (includes items 15 through 21)	1
15	N/A	Asm, #4 Grn Wire, 89"	1
16	N/A	Asm, #4 Wht Wire, 88.5"	1
17	N/A	Asm, #10 Org Wire, 89.5"	1
18	N/A	Asm, #10 Blu Wire, 95.5"	1
19	N/A	Asm, #4 Red Wire, 67.5"	1
20	N/A	Asm, #4 Blk Wire, 57.5"	1
21	<u>8639</u>	Tie Wrap, 11" Nylon	6
22	<u>102859501</u>	Screw, M6 X 1 X 20 Ser Hex Flg	2
23	<u>102912801</u>	Plate, Component, Front	1
24	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes items 25 and 26)	1
25	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
26	N/A	Kit, Relay, 48v 30a Instrns	1
27	<u>8990</u>	Tie Wrap, 8" Nylon	5

13

E

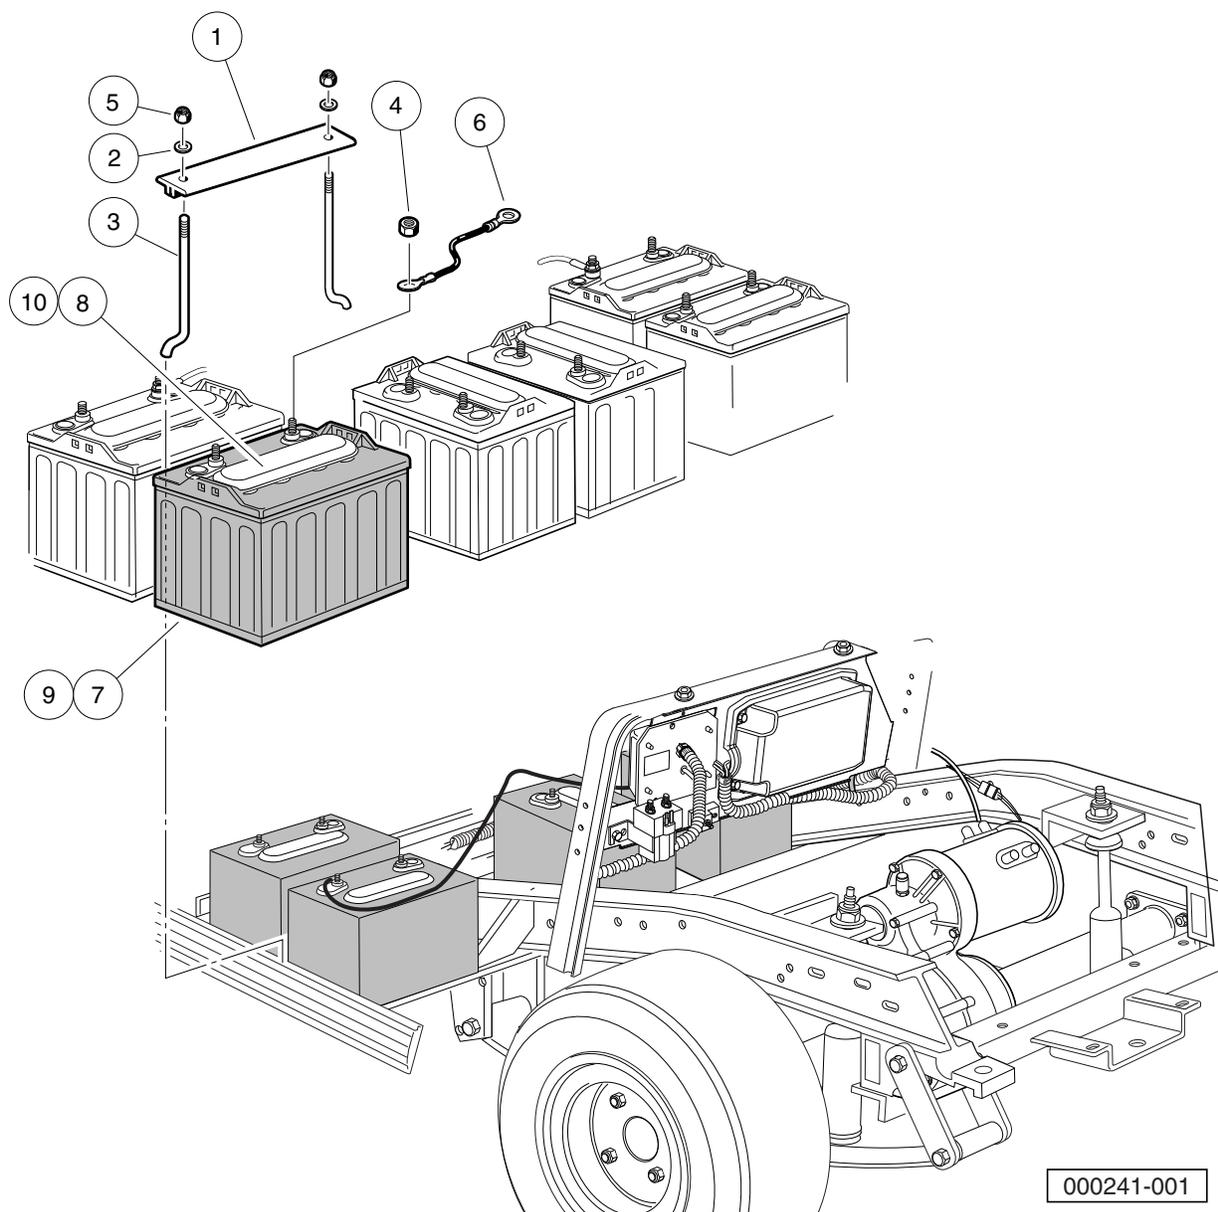


000241-001

BATTERIES – TURF/CARRYALL 1 WITH 6 8-VOLT BATTERIES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101090801</u>	Hold-Down, Battery	3
2	<u>1011578</u>	Washer, 5/16 Type B Flat	6
3	1013683	J-Bolt	6
4	<u>1014304</u>	Nut, 5/16-18 Stainless-Steel Hex	12
5	1015072	Locknut, 5/16-18 Nylon Insert	6
6	<u>101795701</u>	Asm, Wire, #6blk 13in	5
7	<u>101797701</u>	Battery, 8-Volt, T875 (includes item 8)	6
8	<u>101797801</u>	Cap, 4-Gang Battery	1
9	<u>101797702</u>	Battery, 8-Volt, T875 Moist (also known as dry) (includes item 10)	6
10	<u>101797801</u>	Cap, 4-Gang Battery	1

13

E

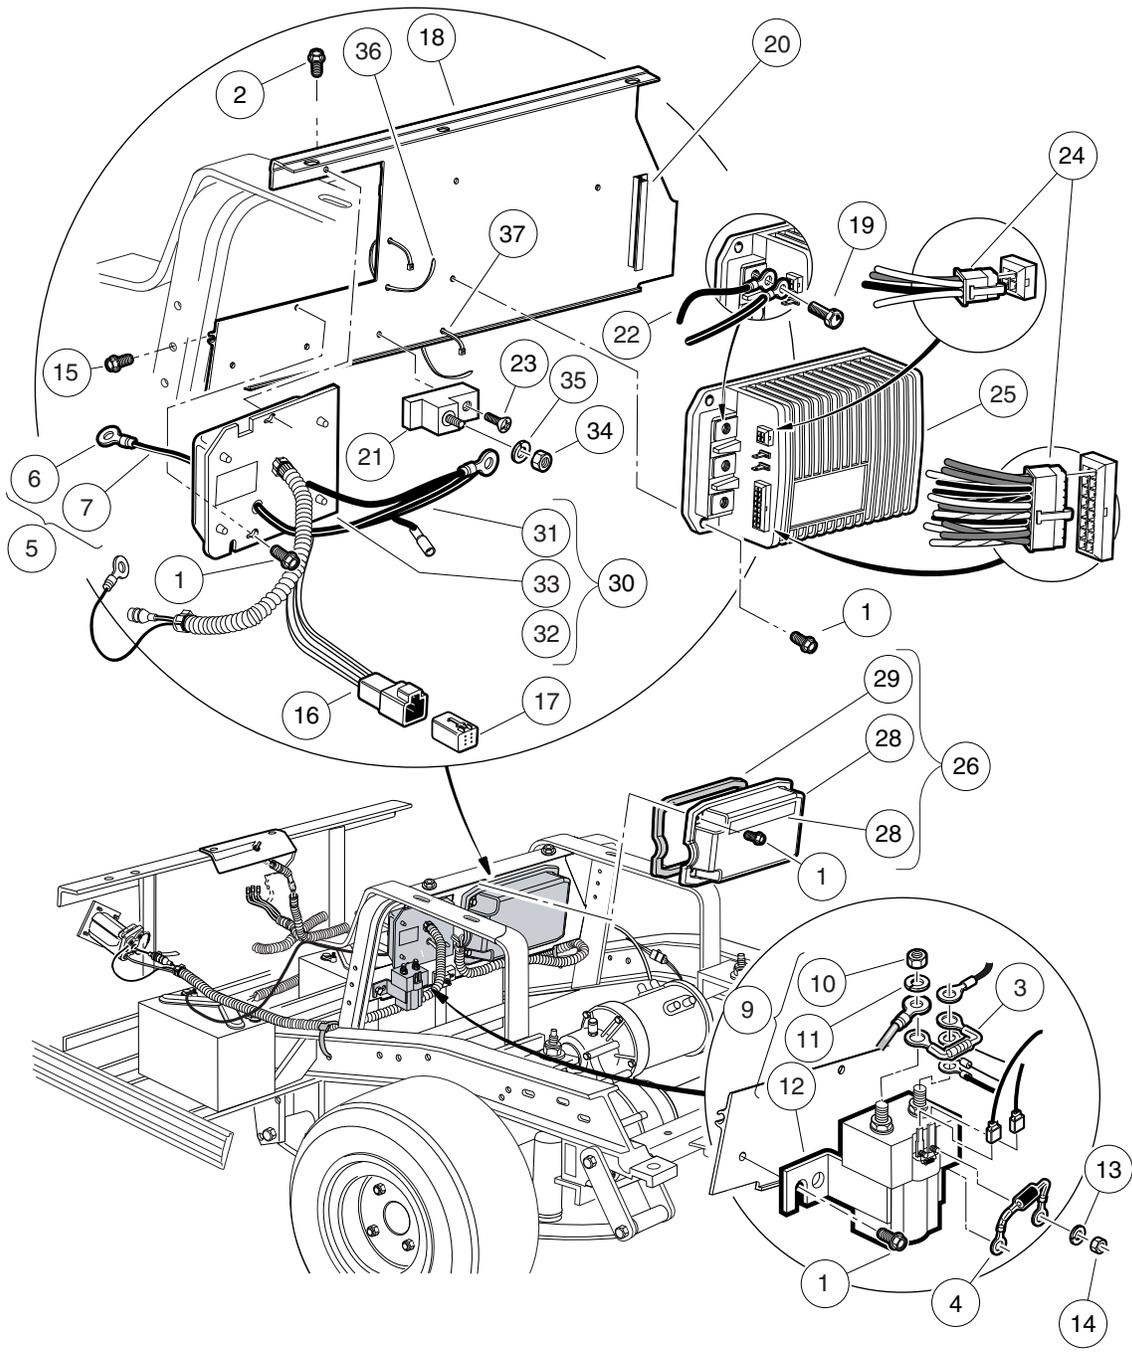

000242-006

COMPUTER, CONTROLLER, AND SOLENOID – DS VILLAGER 4 IQ SYSTEM VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	9
2	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	2
3	<u>1014947</u>	Resistor Assembly	1
4	1014948	Diode	1
5	101827801	Ground Wire Kit, 48-Volt (includes items 6 through 8)	1
6	101826801	Compression Lug	1
7	N/A	Wire Assembly, Black	1
8	<u>8990</u>	Tie Wrap, 8" Nylon	3
9	<u>101908701</u>	Solenoid, 48-Volt (includes items 10 through 14)	1
10	<u>1012528</u>	Nut, M8-1.25 Hex	2
11	<u>1013734</u>	Lockwasher, 8mm Split	2
12	N/A	Solenoid, 48-Volt	1
13	N/A	Washer, Lock	2
14	N/A	Nut	2
15	<u>101910401</u>	Screw, 5/16-18 X 1.25 Thrd Frm	2
16	<u>101932601</u>	Kit, 6-Pin Wedge Lock	1
17	<u>101932701</u>	Kit, 6-Pin Receptacle and Wedge Lock	1
18	<u>101965205</u>	Plate, Component Mounting	1
19	<u>102240501</u>	Bolt, Controller, Terminal	3
20	****	Extrusion, Cover Support	1
21	<u>102259801</u>	Terminal Block	1
22	<u>102263601</u>	Wire Assy, #10 Black	1
23	<u>102263701</u>	Screw, #10-24 X 0.75 Phillips, Thread-Forming	1
24	<u>102266501</u>	Kit, Connector, IQ Controller	1
25	<u>102806201</u>	Controller, IQ, 48-volt	1
26	<u>103316901</u>	Cover Asm - Controller (includes items 27 through 29)	1
27	<u>101931501</u>	Decal, Component Cover	1
28	<u>103316701</u>	Cover - Controller, Deep	1
29	<u>103316801</u>	Gasket - Controller Cover	1
30	N/A	Kit, OBC, DS and Util IQ (includes items 31 through 33)	1
31	<u>103282601</u>	Wire Assembly Black #10	1
32	N/A	Instr Obs Ds Pre 01-28-2007	1
33	103403101	Asm, Obs, Iq, V3.0	1
34	<u>1242</u>	Nut, 5/16-18 Hex	1
35	<u>7174</u>	Lockwasher, 5/16 Split	1
36	<u>8639</u>	Tie Wrap, 11" Nylon	1
37	<u>8990</u>	Tie Wrap, 8" Nylon	1
		**** Special order item available upon request.	

13


E

COMPUTER, CONTROLLER, AND SOLENOID – TURF/ CARRYALL 2 POWERDRIVE VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	10
2	<u>1014947</u>	Resistor Assembly	1
3	1014948	Diode	1
4	<u>101827802</u>	Ground Wire Kit, 48-Volt (includes items 5 through 7)	1
5	101826801	Compression Lug	1
6	N/A	Wire Assembly, Black	1
7	<u>8990</u>	Tie Wrap, 8" Nylon	3
8	<u>101840203</u>	Controller, 48-Volt, 300-Amp Series	1
9	<u>101908701</u>	Solenoid, 48-Volt (includes items 10 through 14)	1
10	<u>1012528</u>	Nut, M8-1.25 Hex	2
11	<u>1013734</u>	Lockwasher, 8mm Split	2
12	N/A	Solenoid, 48-Volt	1
13	N/A	Washer, Lock	2
14	N/A	Nut	2
15	<u>101909905</u>	Onboard Computer (includes items 16 and 17)	1
16	N/A	Onboard Computer	1
17	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
18	<u>101911701</u>	Plate, Electrical Component Mounting	1
19	<u>101918301</u>	Clamp, Plastic Wire	2
20	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
21	<u>101924301</u>	Bushing, Snap	6
22	1218	Screw, 5/16-18 X 1.25 Hex-Head Cap	1
23	<u>1241</u>	Washer, 5/16 Type A Flat	8
24	<u>1242</u>	Nut, 5/16-18 Hex	4
25	<u>7173</u>	Screw, 5/16-18 X 0.75 Hex-Head Cap	3
26	<u>7174</u>	Lockwasher, 5/16 Split	4

13

E

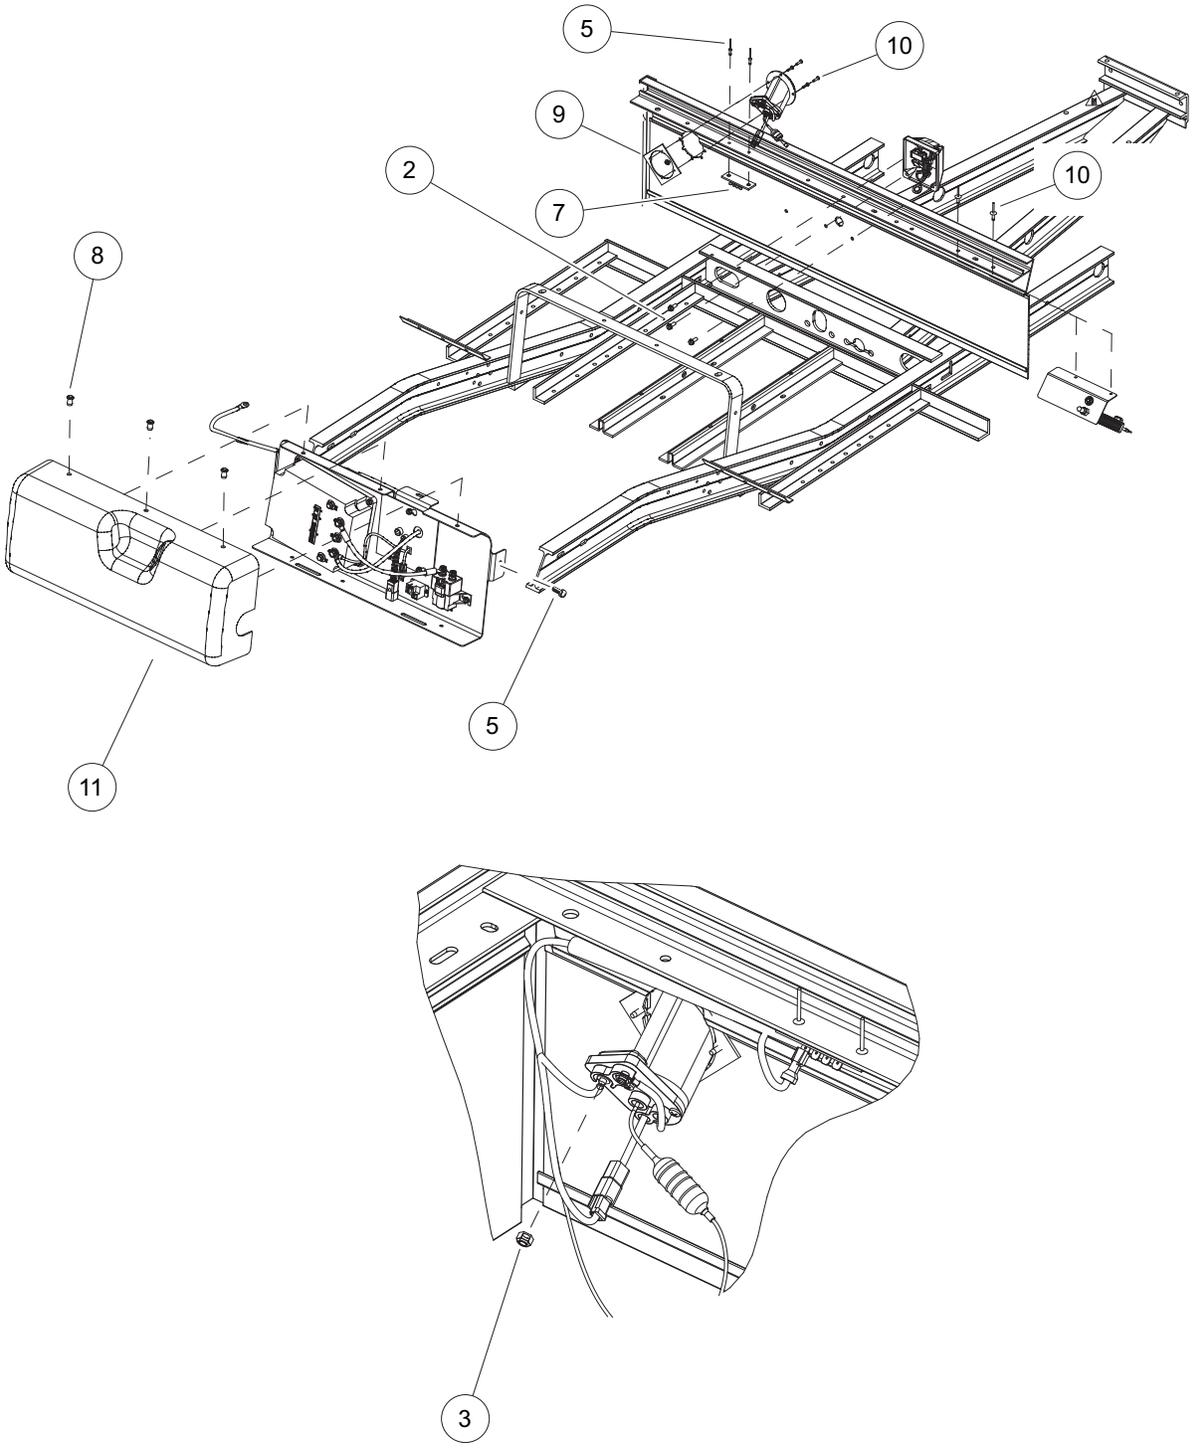

000426-001

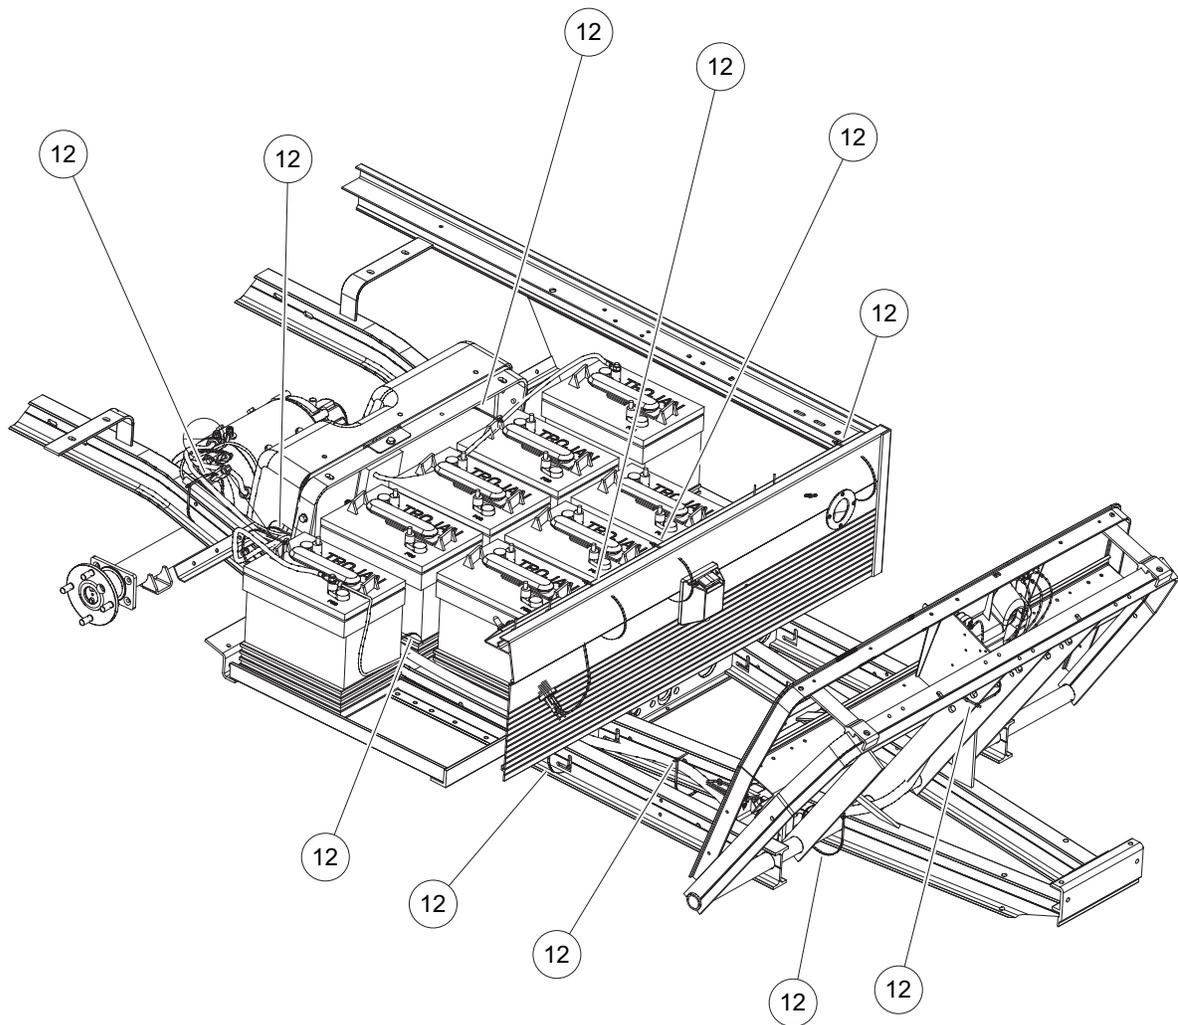

000426-001

13

E

See previous two pages for illustration.

ELEC SYSTEM INSTALLATION – TURF/CARRYALL 2 IQ PLUS


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Electrical System Installation, IQ Plus (includes items 2 through 12)	1
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3
3	<u>1013061</u>	Locknut, #10-32 Nylon Insert	1
4	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2
5	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	3
6	<u>1015392</u>	Rivet, 3/16 Pop	2
7	<u>1016356</u>	Terminal Block with Insulator	1
8	<u>1016967</u>	Blind Rivet, Push Type	3
9	<u>101801001</u>	Plate, Receptacle Backing	1
10	<u>101832001</u>	Screw, #7-19 X 0.625 Phillips Pan-Head Tap	4
11	<u>102772401</u>	Cover, Component, Elec, Rear	1
12	<u>8990</u>	Tie Wrap, 8" Nylon	12

13

E

13

E

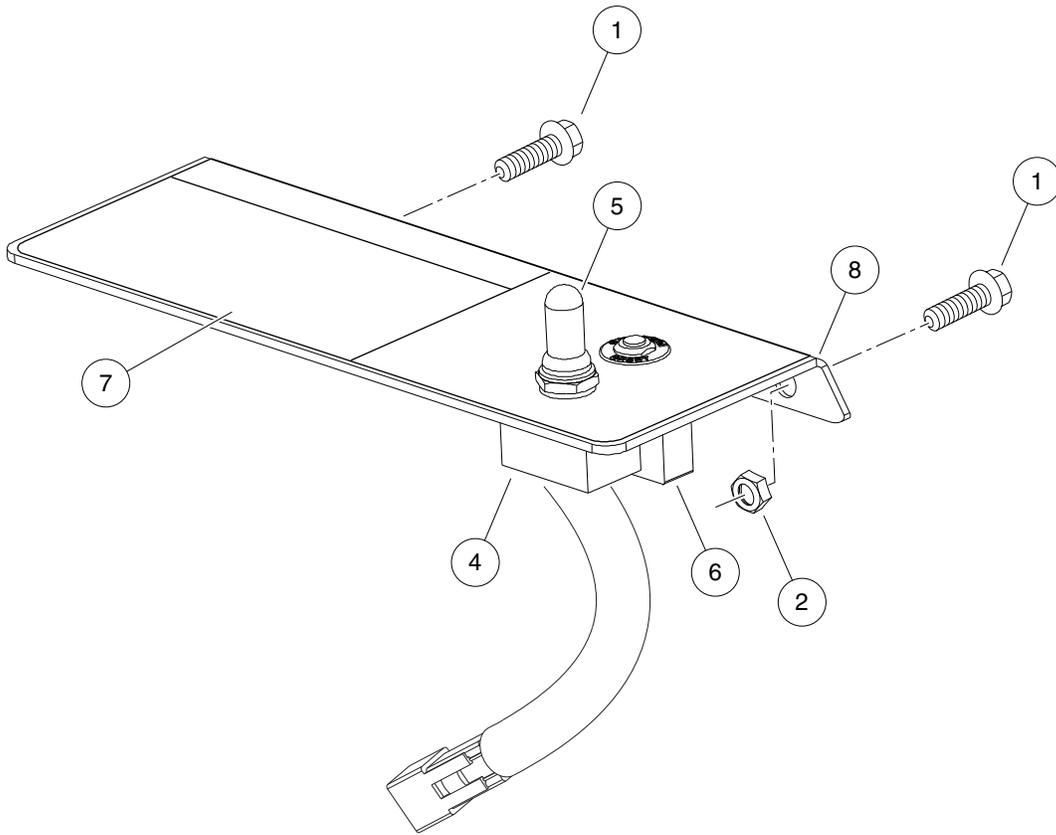

000425-001

TOW/RUN SWITCH – IQ PLUS VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012126</u>	Screw, #10-32 X .625 Hx Washer	1
2	<u>1013061</u>	Locknut, #10-32 Nylon Insert	2
3	N/A	Tow/Run Switch Assembly (includes items 4 through 8)	1
4	<u>101908101</u>	Switch Assembly, Tow/Run	1
5	<u>101908401</u>	Boot, Switch	1
6	<u>102838101</u>	Circuit Breaker 250vac-50vdc	1
7	<u>102845101</u>	Decal, Tow Switch	1
8	<u>102915701</u>	Plate, Switch, Run Tow, Mode	1

13


E

13


E

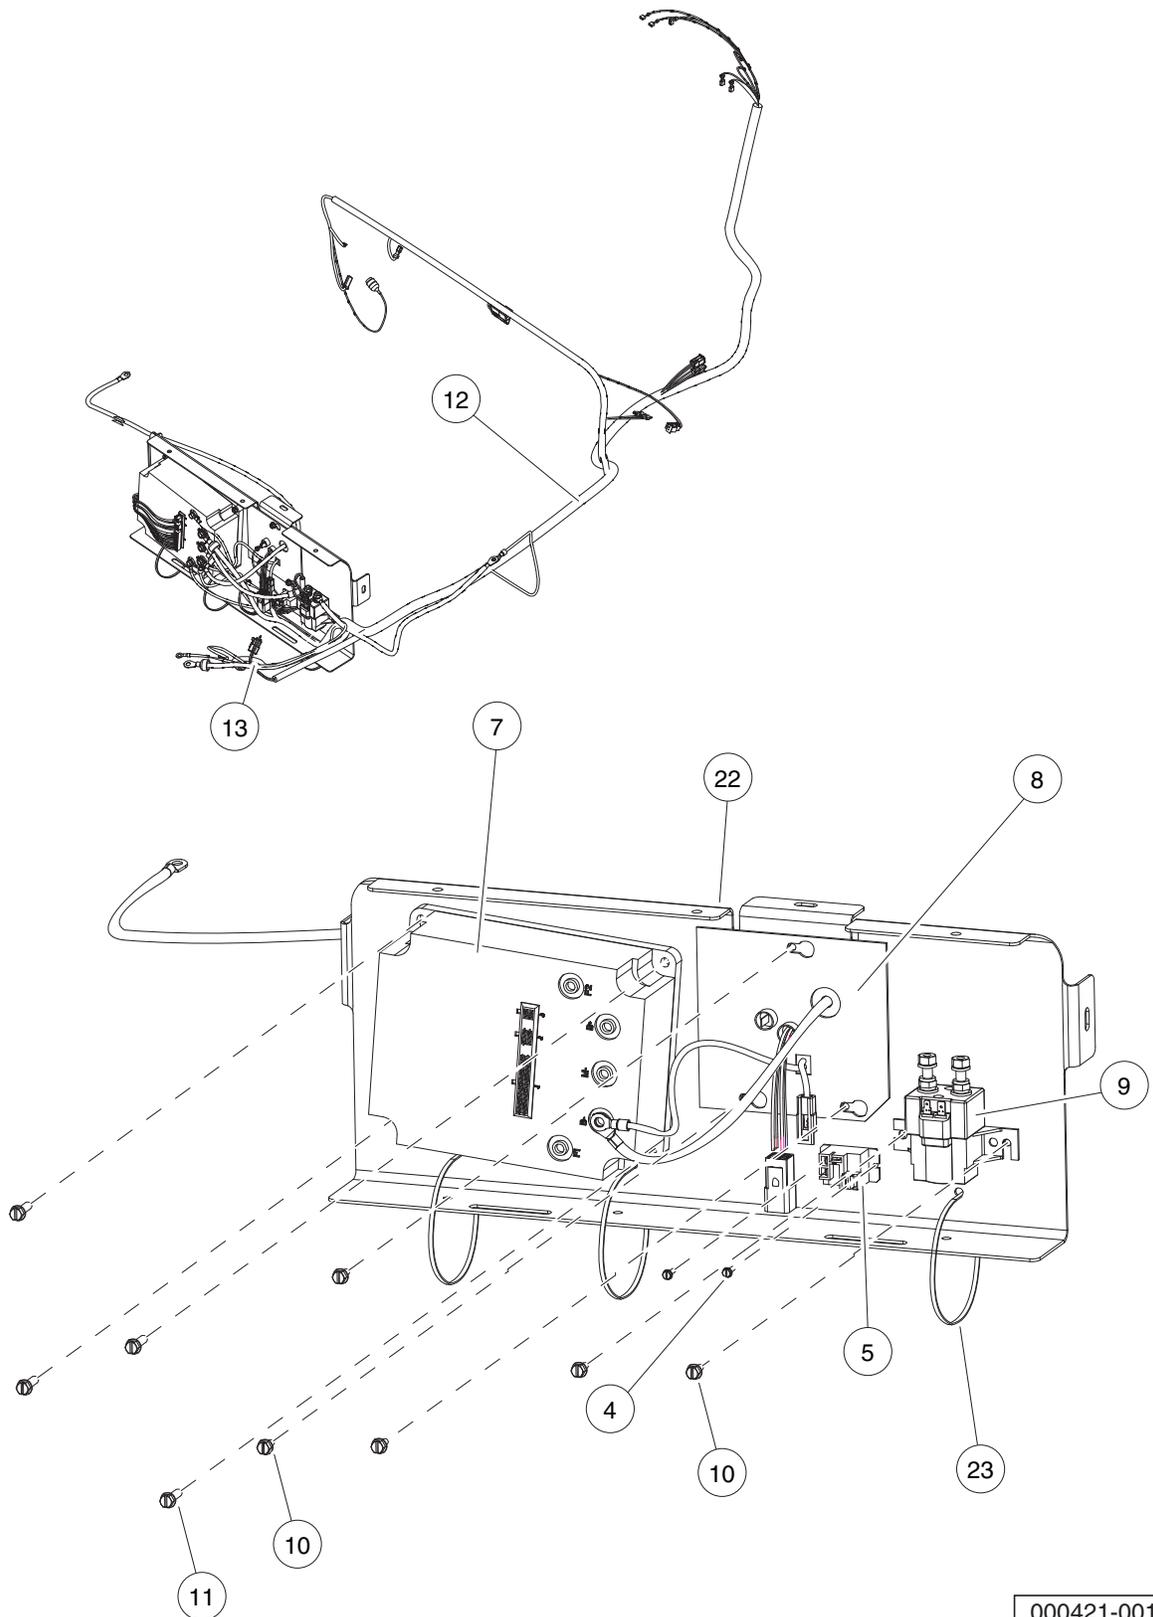

000421-001

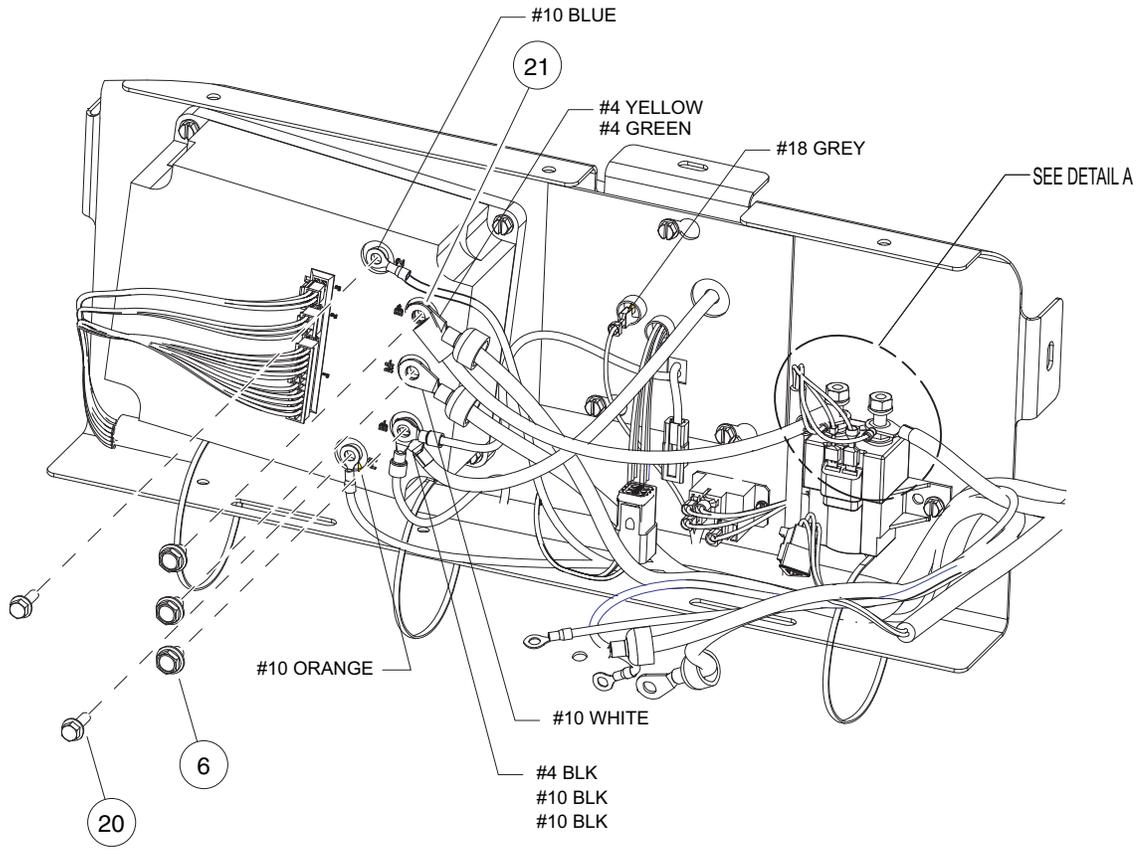

DETAIL A

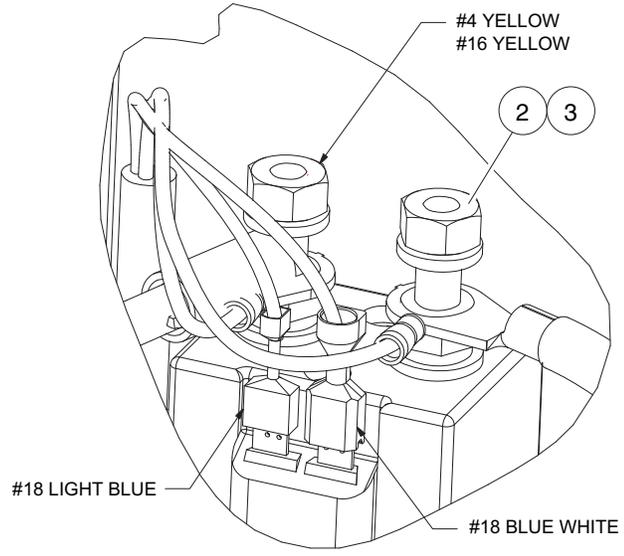

000421-001

13

E

See previous two pages for illustration.

COMPUTER, CONTROLLER, AND SOLENOID – TURF/ CARRYALL 2 IQ PLUS VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Component Mounting Plate Assembly (includes items 2 through 23)	1
2	<u>1012528</u>	Nut, M8-1.25 Hex	2
3	<u>1013734</u>	Lockwasher, 8mm Split	2
4	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	2
5	<u>101828601</u>	Relay, 48-Volt	1
6	<u>102240501</u>	Bolt, Controller, Terminal	3
7	<u>102774501</u>	Controller, 500 Amp	1
8	<u>102774602</u>	Computer, Onbrd, 8x 6v, 38"	1
9	<u>102774701</u>	Solenoid, 48v	1
10	<u>102817101</u>	Screw, 1/4-20 X .50 Hex Wsh Hd	5
11	<u>102817201</u>	Screw, 1/4-20 X .88 Hex Wsh Hd	4
12	<u>102834501</u>	Wire Harness, Turf/Carryall 2 IQ Plus	1
13	<u>102845401</u>	Wire Harness, Power, IQ Plus (includes items 14 through 19)	1
14	N/A	Asm, #4 Grn Wire, 37"	1
15	N/A	Asm, #4 Wht Wire, 36.5"	1
16	N/A	Asm, #10 Org Wire, 39"	1
17	N/A	Asm, #10 Blu Wire, 46"	1
18	<u>102846402</u>	Asm, #4 Red Wire, 33"	1
19	<u>8639</u>	Tie Wrap, 11" Nylon	3
20	<u>102859501</u>	Screw, M6 X 1 X 20 Ser Hex Flg	2
21	<u>102863801</u>	Wire Asm, #4 Yellow, 12.5"	1
22	<u>102931101</u>	Plate, Component, Rear	1
23	<u>8990</u>	Tie Wrap, 8" Nylon	3

13

E

13

E

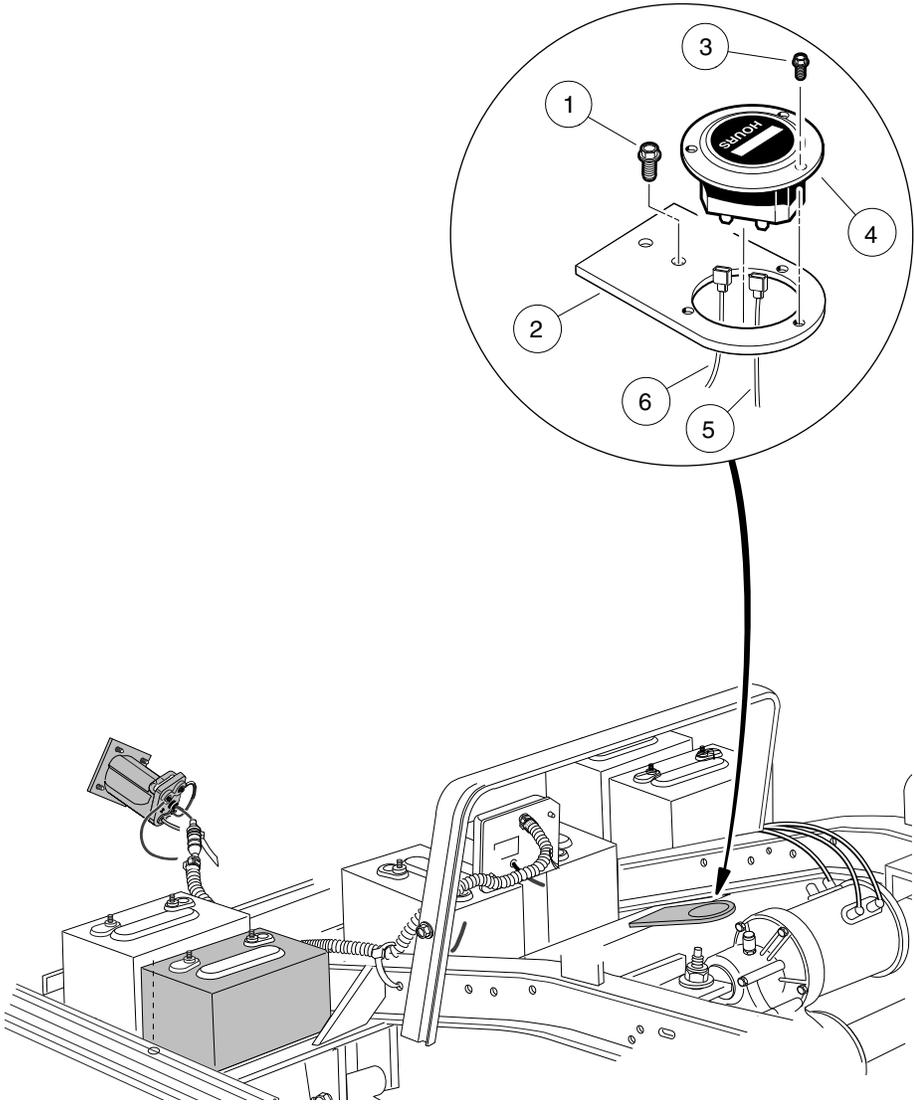


000341-001

HOUR METER – TURF 1 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	1
2	<u>1013547</u>	Hour Meter Bracket	1
3	<u>1014540</u>	Screw, #6-32 X 3/8 Taptite	3
4	N/A	Hour Meter	1
5	<u>101997802</u>	Wire Assembly #18 Yellow	1
6	N/A	Wire Assy, #18 Blue	1

13

E

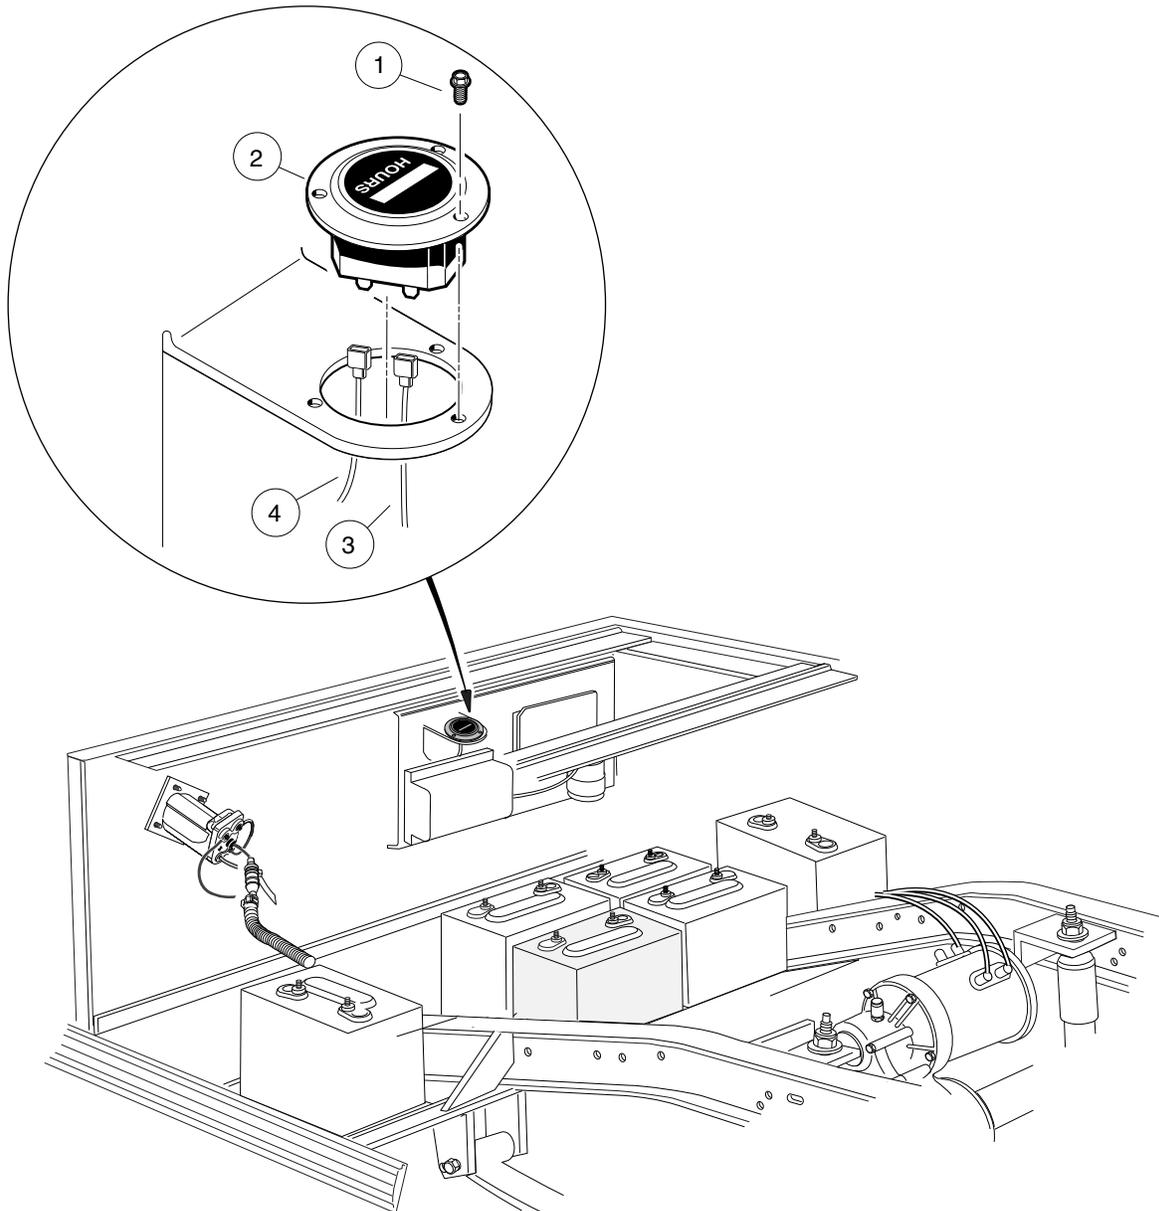

000346-001

HOUR METER – POWERDRIVE TURF 2 VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014540</u>	Screw, #6-32 X 3/8 Taptite	3
2	N/A	Hour Meter	1
3	<u>101997802</u>	Wire Assembly #18 Yellow	1
4	N/A	Wire Assy, #18 Blue	1

13

E

13

E

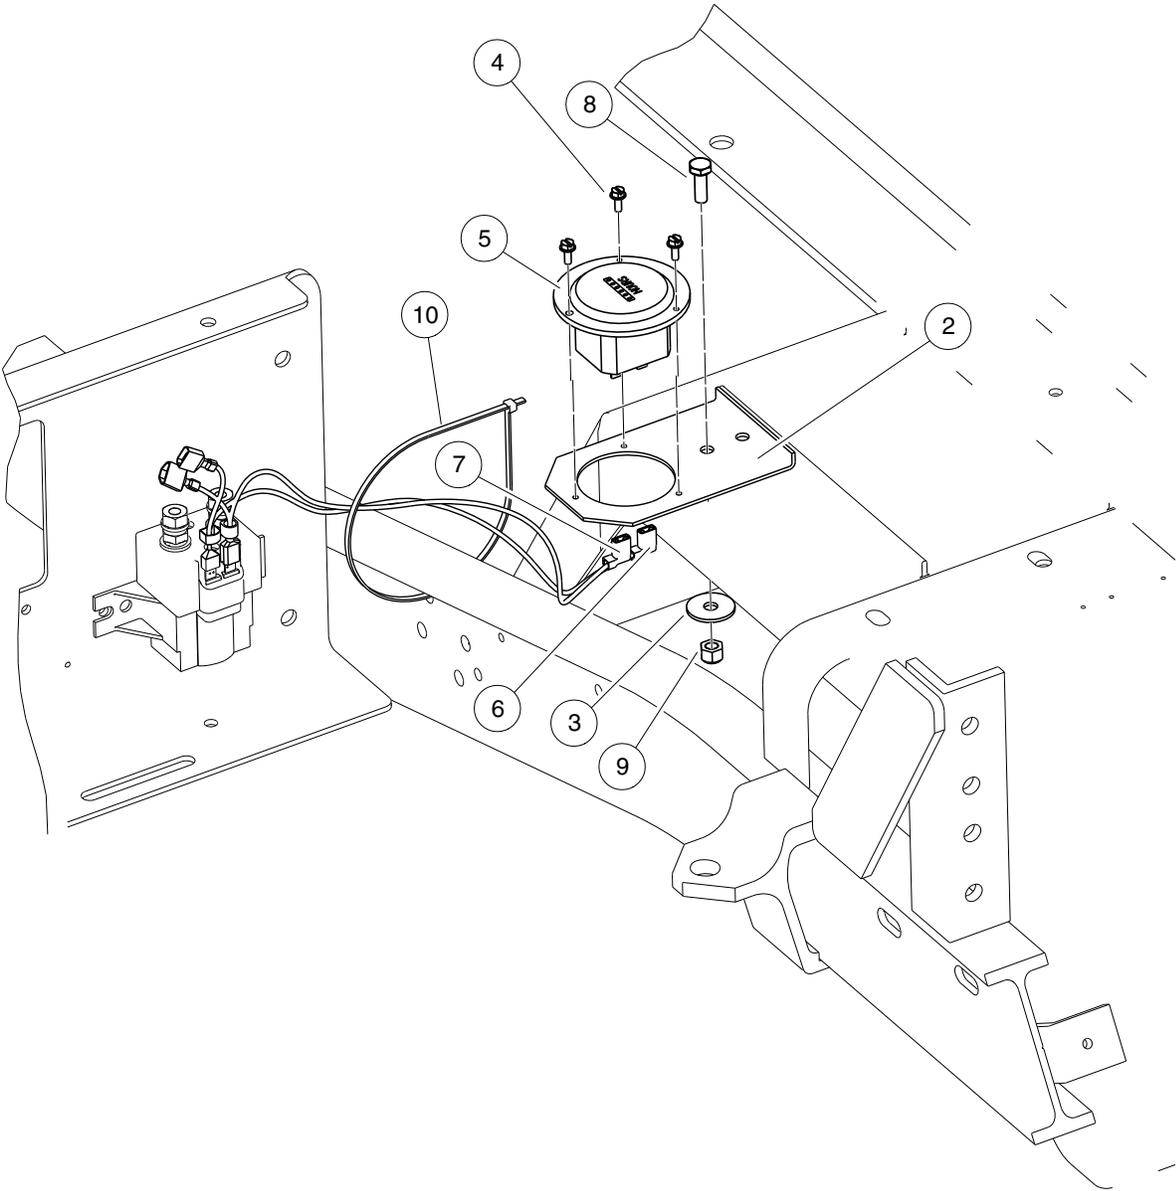


000346-002

HOUR METER – IQ PLUS TURF 2 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Hour Meter Installation, IQ Plus (includes items 2 through 10)	1
2	<u>1013547</u>	Hour Meter Bracket	1
3	<u>1014306</u>	Washer, 1/4" Type B Flat	1
4	<u>1014540</u>	Screw, #6-32 X 3/8 Taptite	3
5	N/A	Hour Meter	1
6	<u>101997802</u>	Wire Assembly #18 Yellow	1
7	<u>101997902</u>	Wire Assembly #18 Red	1
8	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	1
9	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	1
10	<u>8990</u>	Tie Wrap, 8" Nylon	1

13

E

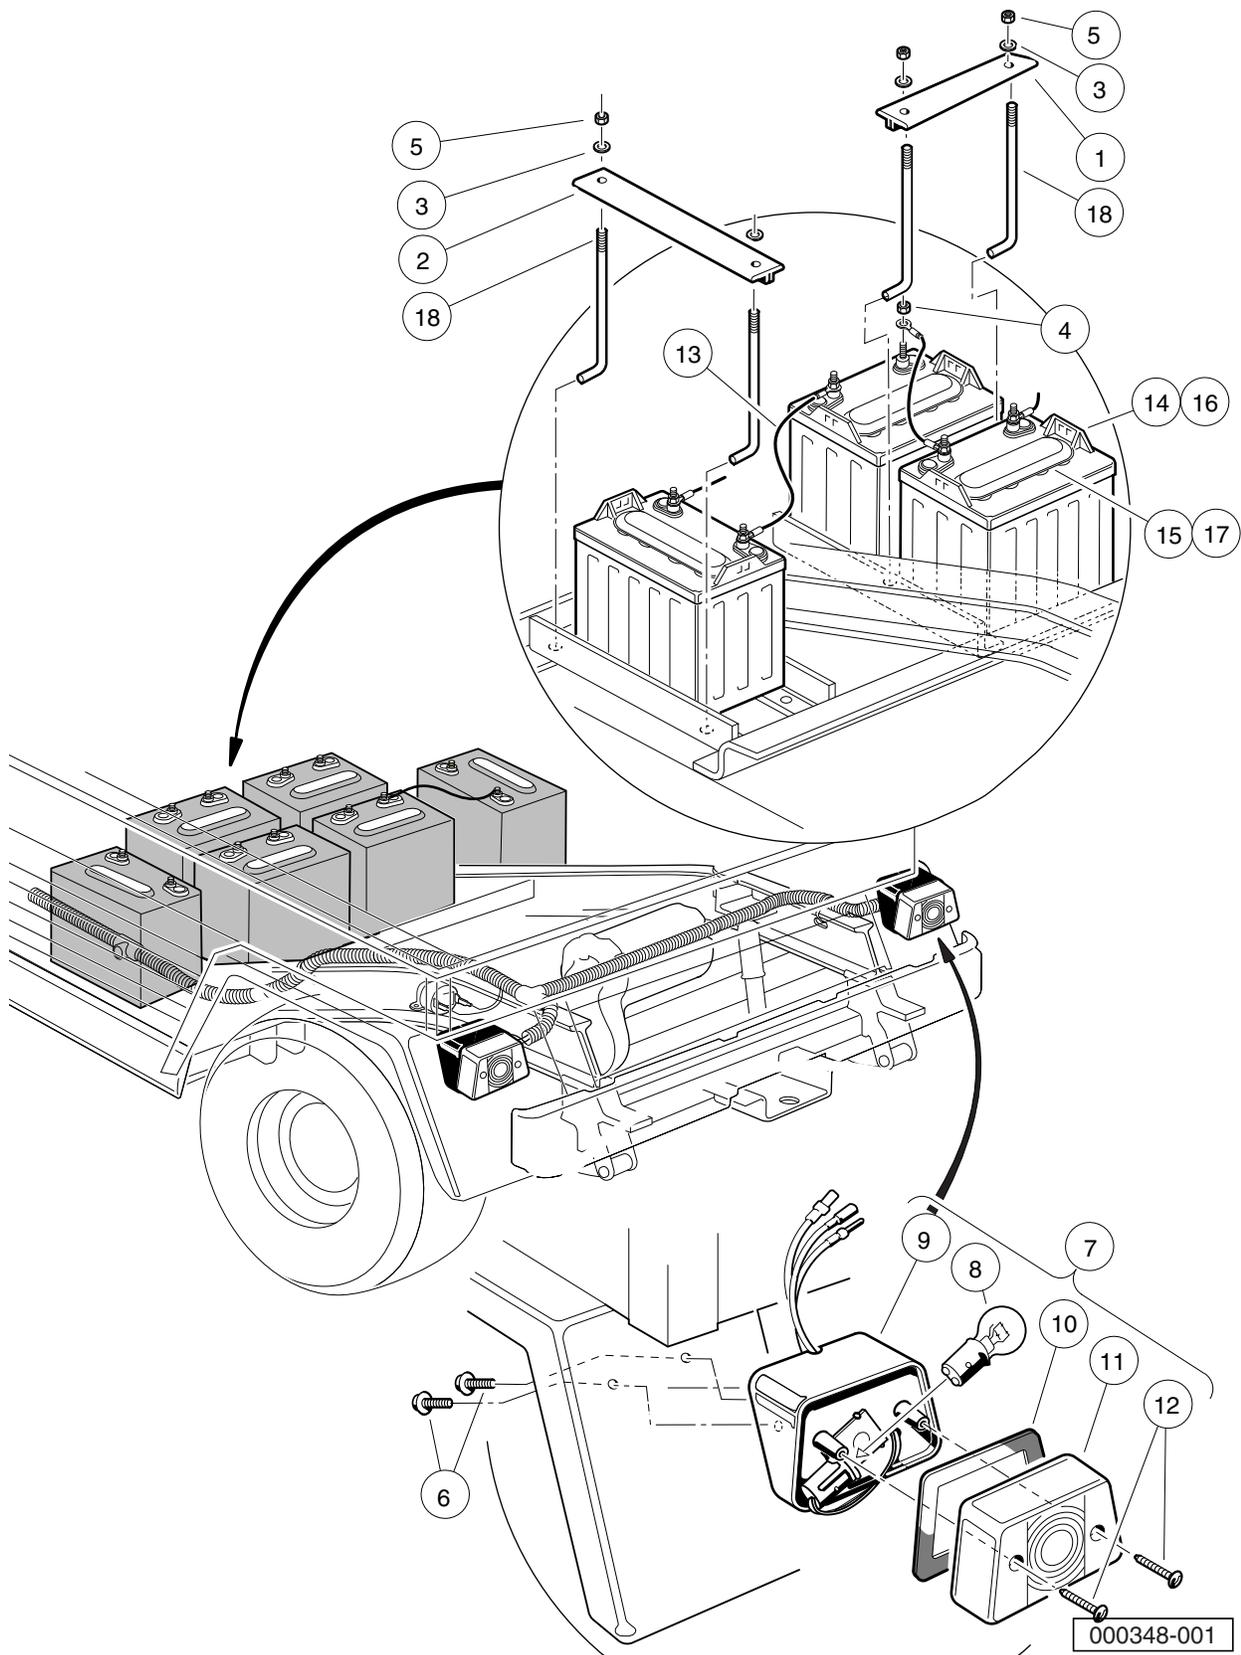

000348-001

ELECTRICAL COMPONENTS, REAR BODY – CARRYALL 6 POWERDRIVE


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101090801</u>	Hold-Down, Battery	2
2	<u>101090802</u>	Hold-Down, Battery	2
3	<u>1011578</u>	Washer, 5/16 Type B Flat	8
4	<u>1014304</u>	Nut, 5/16-18 Stainless-Steel Hex	12
5	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	8
6	<u>1015752</u>	Screw, #12-16 X 0.625 Hi-Lo	4
7	<u>1016717</u>	Light Assembly, Stop/Taillight (includes items 8 through 12)	2
8	<u>1011582</u>	Taillight Bulb	1
9	N/A	Housing, Taillight	1
10	N/A	Gasket, Taillight	1
11	N/A	Lens, Taillight	1
12	N/A	Screw, Taillight Lens	2
13	<u>101795701</u>	Asm, Wire, #6blk 13in	5
14	<u>101797701</u>	Battery, 8-Volt, T875 (includes item 15)	6
15	<u>101797801</u>	Cap, 4-Gang Battery	1
16	<u>101797702</u>	Battery, 8-Volt, T875 Moist (also known as dry) (includes item 17)	6
17	<u>101797801</u>	Cap, 4-Gang Battery	1
18	<u>102845203</u>	Rod, Battery Hold Down 10.7"	8

13

E

13

E

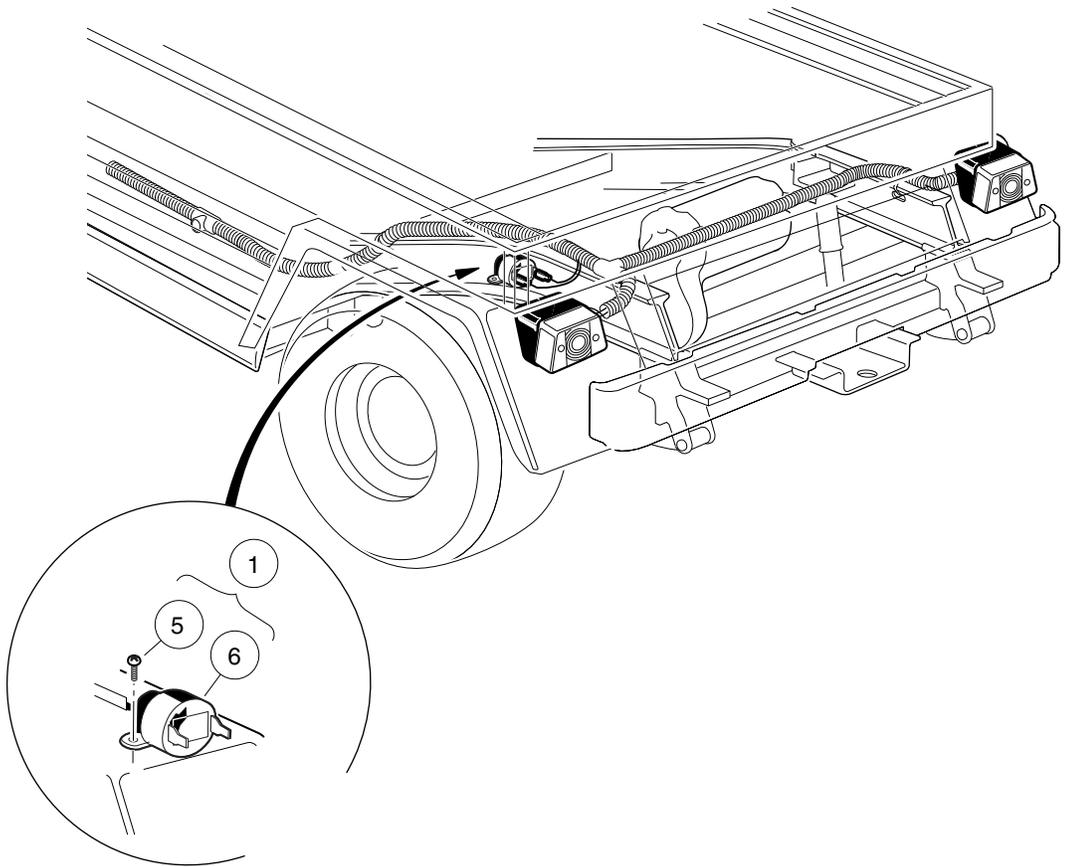


000432-001

REAR REVERSE BUZZER – CARRYALL 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016859</u>	Kit, Reverse Buzzer (includes items 2 through 10)	1
2	<u>1011229</u>	Locknut, #6-32 Whiz	1
3	1012431	Washer, #4 Flat	2
4	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1
5	<u>1016849</u>	Screw, #4-24 X 0.33 Pan-Head Machine	2
6	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
7	1016857	Wire Assembly Black #18	1
8	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2
9	<u>8057</u>	Nut, #4-40 Hex Machine	2
10	<u>8058</u>	Lockwasher, #4 Split	2
<p>Note: Note: Items 2 through 4 and 7 through 10 are included in the kit, but are not used in this application.</p>			

13

E

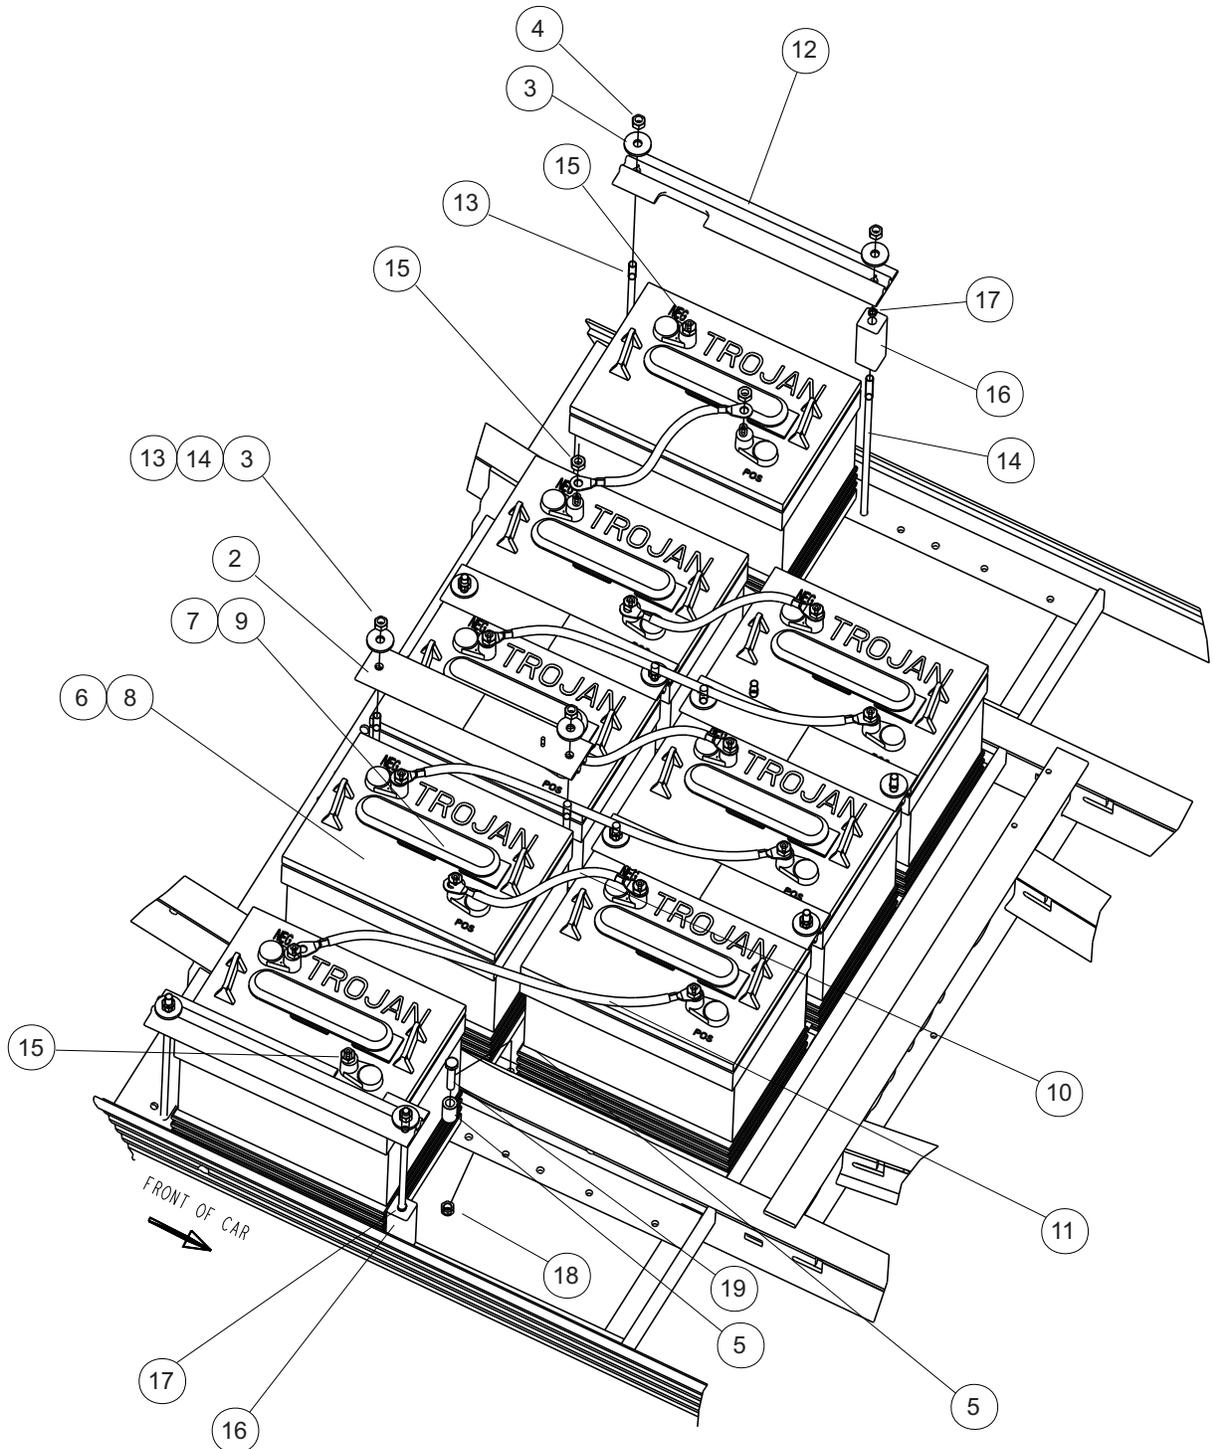


000409-001

CARRYALL 2 IQ PLUS WITH T-105 BATTERIES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Battery Install, Carryall 2 IQ Plus w/T-105 Batteries (includes items 2 through 19)	1
2	<u>101090801</u>	Hold-Down, Battery	4
3	1012571	Washer, 5/16 Extra Thick Flat	12
4	1015072	Locknut, 5/16-18 Nylon Insert	12
5	<u>1015608</u>	Tube Spacer, Hydraulic Cylinder	2
6	<u>101661601</u>	Battery, 6v Trojan T105 (Wet) (includes item 7)	8
7	<u>101831401</u>	Battery Cap 6 Volt	1
8	<u>101661602</u>	Battery, 6v Trojan T105 (Dry, also known as moist) (includes item 9)	8
9	<u>101831401</u>	Battery Cap 6 Volt	1
10	<u>102002901</u>	Wire Assy, #4 Black	4
11	<u>102764001</u>	Wire Asm, #4 Black	3
12	<u>102766201</u>	Hold Down, Outside	2
13	<u>102845201</u>	Rod, Battery Hold Down 9.7"	10
14	<u>102845203</u>	Rod, Battery Hold Down 10.7"	2
15	<u>102873401</u>	5/16-18 Heavy Hex Nut	16
16	<u>102980801</u>	Extr, Plastic, 1 X 1 X 3	2
17	<u>102980901</u>	Clamp, Hose, Nylon, .25	2
18	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
19	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	2

13

E

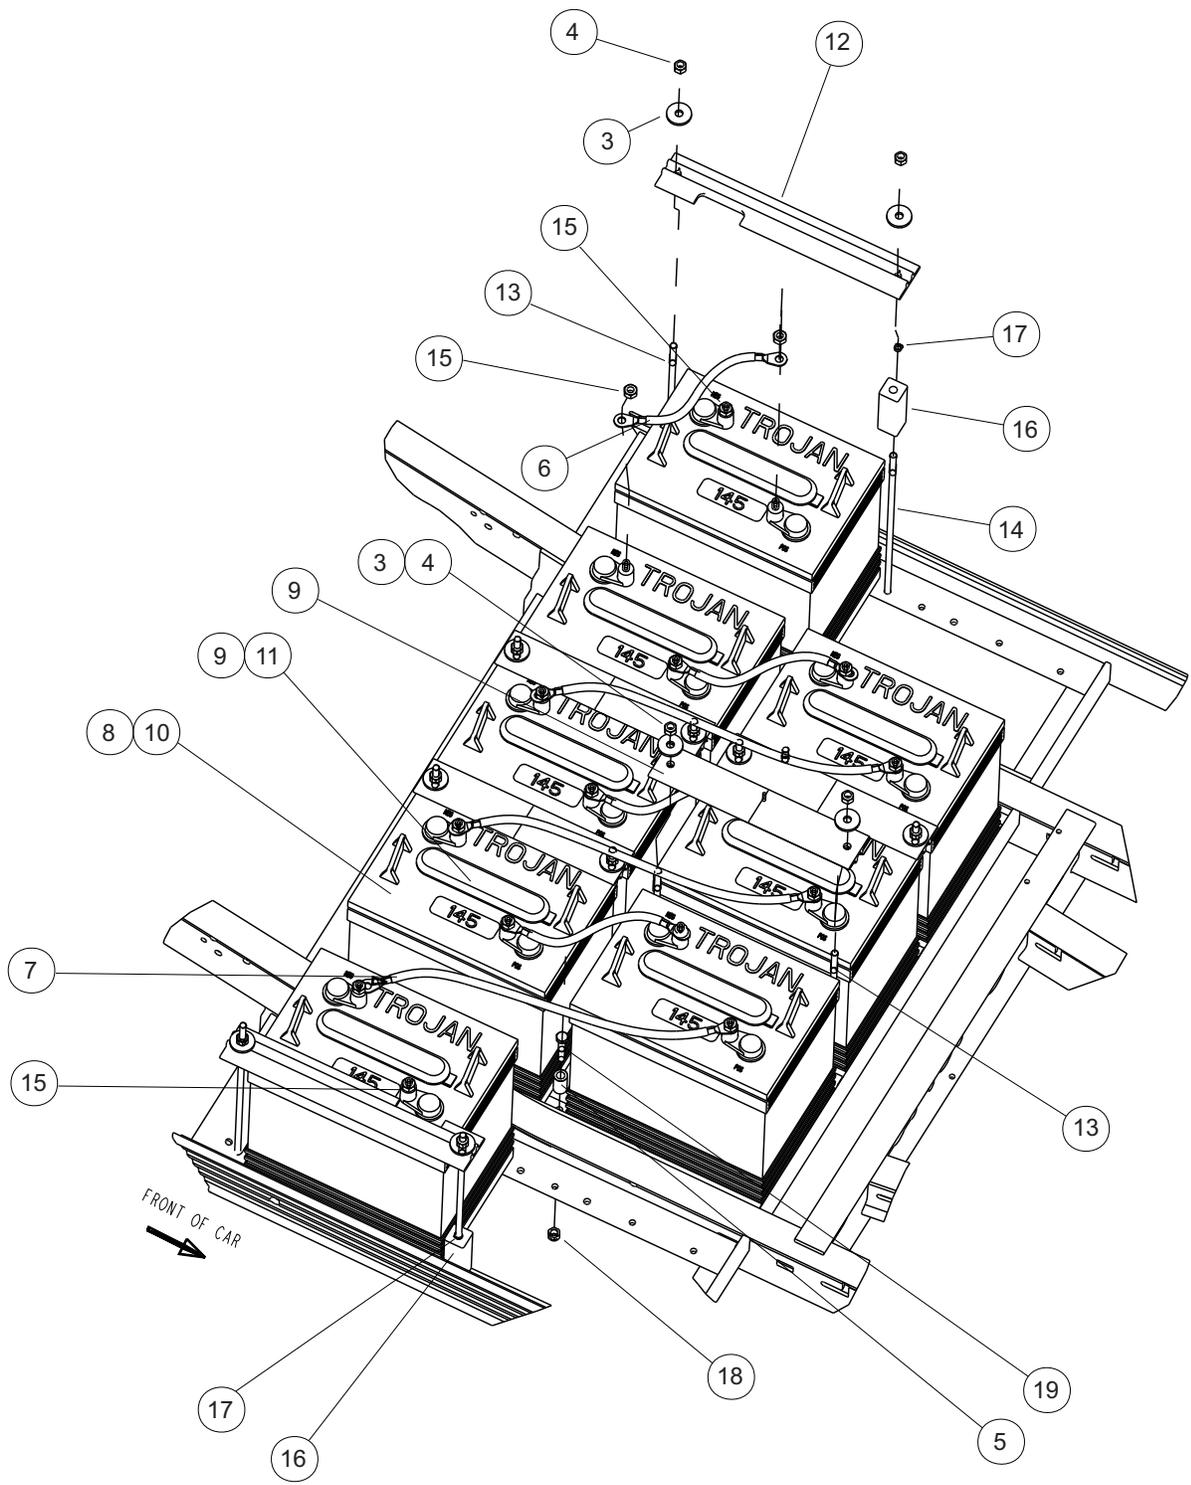


000409-002

CARRYALL 2 IQ PLUS WITH T-145 BATTERIES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Battery Install, Carryall 2 IQ Plus w/T-145 Batteries (includes items 2 through 19)	1
2	<u>101090801</u>	Hold-Down, Battery	4
3	1012571	Washer, 5/16 Extra Thick Flat	12
4	1015072	Locknut, 5/16-18 Nylon Insert	12
5	<u>1015608</u>	Tube Spacer, Hydraulic Cylinder	2
6	<u>102002901</u>	Wire Assy, #4 Black	4
7	<u>102764001</u>	Wire Asm, #4 Black	3
8	<u>102764401</u>	Battery, 6v Trojan T145 (wet) (includes item 9)	8
9	<u>101831401</u>	Battery Cap 6 Volt	1
10	<u>102764402</u>	Battery, 6v Trojan T145 (Dry, also known as moist) (includes item 11)	8
11	<u>101831401</u>	Battery Cap 6 Volt	1
12	<u>102766201</u>	Hold Down, Outside	2
13	<u>102845203</u>	Rod, Battery Hold Down 10.7"	10
14	<u>102845204</u>	Rod, Battery Hold Down 12"	2
15	<u>102873401</u>	5/16-18 Heavy Hex Nut	16
16	<u>102980801</u>	Extr, Plastic, 1 X 1 X 3	2
17	<u>102980901</u>	Clamp, Hose, Nylon, .25	2
18	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
19	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	2

13

E

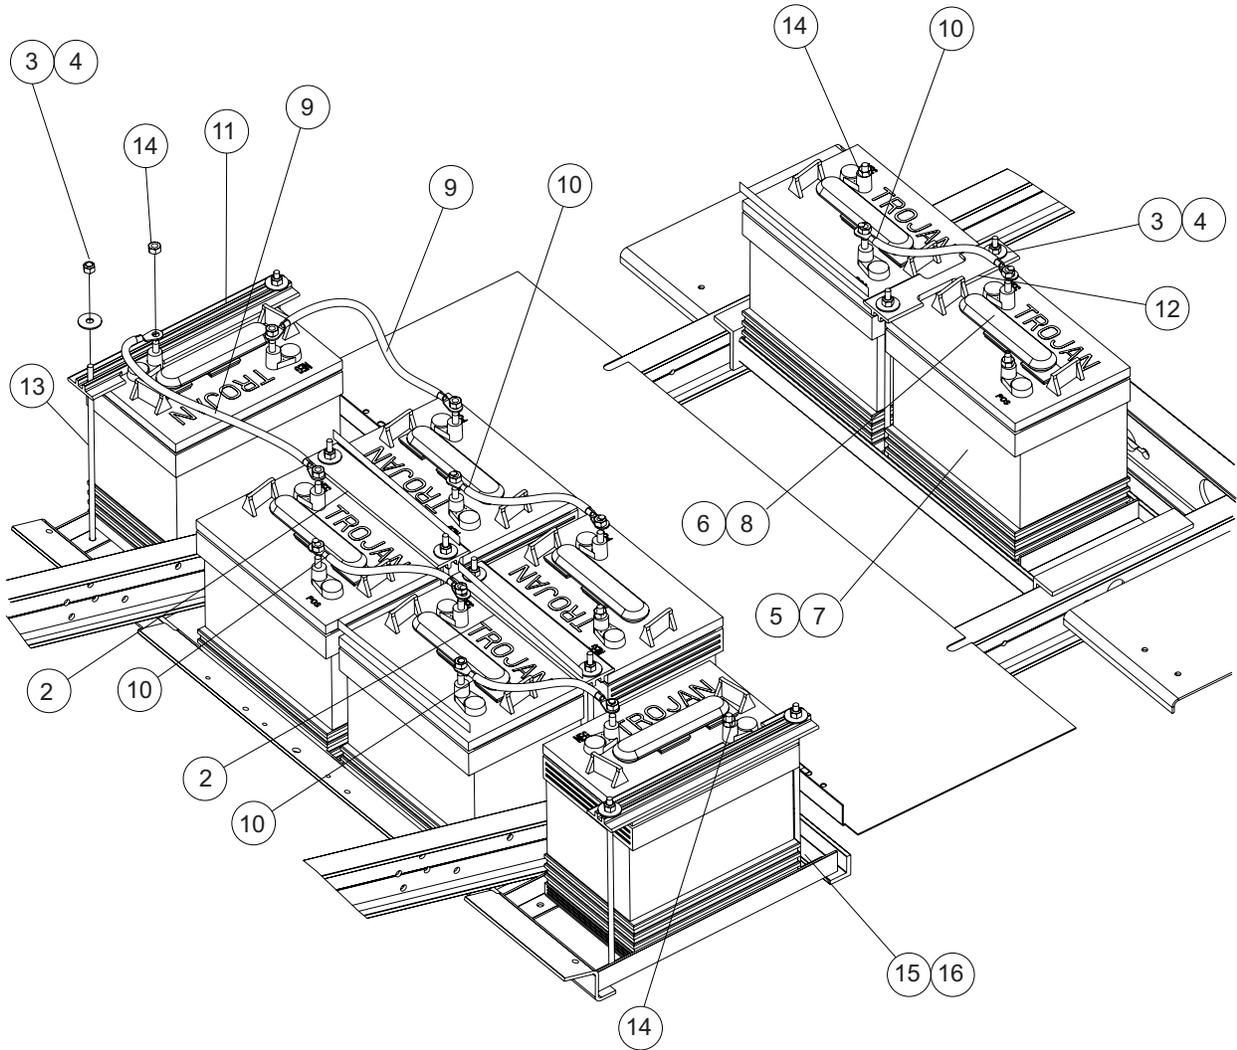


000410-001

CARRYALL 6 IQ PLUS WITH T-105 BATTERIES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Battery Install, Stretch IQ Plus w/T-105 Batteries (includes items 2 through 16)	1
2	<u>101090801</u>	Hold-Down, Battery	2
3	1012571	Washer, 5/16 Extra Thick Flat	10
4	1015072	Locknut, 5/16-18 Nylon Insert	10
5	<u>101661601</u>	Battery, 6v Trojan T105 (Wet) (includes item 6)	8
6	<u>101831401</u>	Battery Cap 6 Volt	1
7	<u>101661602</u>	Battery, 6v Trojan T105 (Dry, also known as moist) (includes item 8)	8
8	<u>101831401</u>	Battery Cap 6 Volt	1
9	<u>102002801</u>	Wire Assy, #4 Black	2
10	<u>102002901</u>	Wire Assy, #4 Black	4
11	<u>102766201</u>	Hold Down, Outside	2
12	<u>102830301</u>	Hold Down, Front Center	1
13	<u>102845203</u>	Rod, Battery Hold Down 10.7"	10
14	<u>102873401</u>	5/16-18 Heavy Hex Nut	16
15	<u>102980801</u>	Extr, Plastic, 1 X 1 X 3	2
16	<u>102980901</u>	Clamp, Hose, Nylon, .25	2

13

E

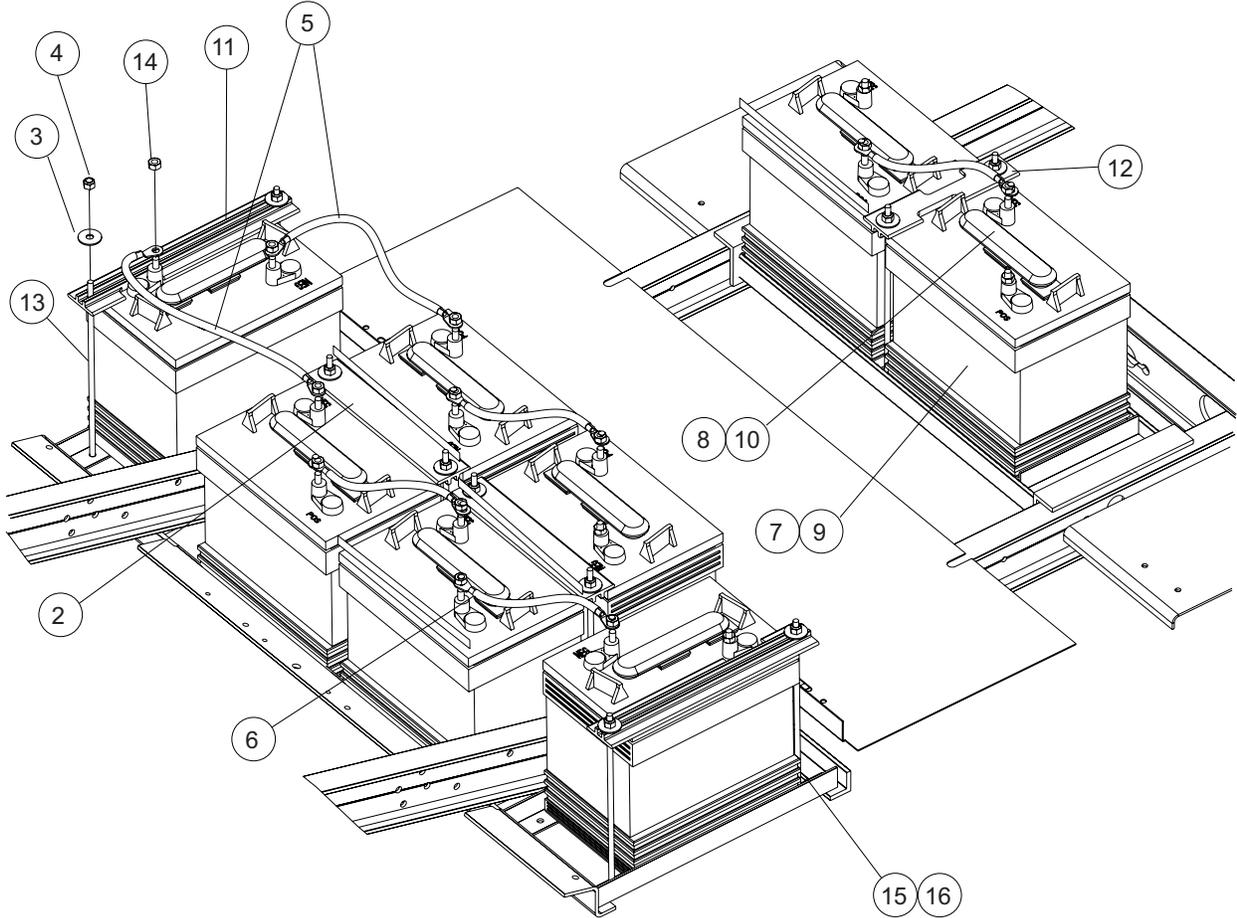

000410-002

CARRYALL 6 IQ PLUS WITH T-145 BATTERIES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Battery Install, Stretch IQ Plus w/T-145 Batteries (includes items 2 through 16)	1
2	<u>101090801</u>	Hold-Down, Battery	2
3	1012571	Washer, 5/16 Extra Thick Flat	10
4	1015072	Locknut, 5/16-18 Nylon Insert	10
5	<u>102002801</u>	Wire Assy, #4 Black	2
6	<u>102002901</u>	Wire Assy, #4 Black	4
7	<u>102764401</u>	Battery, 6v Trojan T145 (wet) (includes item 8)	8
8	<u>101831401</u>	Battery Cap 6 Volt	1
9	<u>102764402</u>	Battery, 6v Trojan T145 (Dry, also known as moist) (includes item 10)	8
10	<u>101831401</u>	Battery Cap 6 Volt	1
11	<u>102766201</u>	Hold Down, Outside	2
12	<u>102830301</u>	Hold Down, Front Center	1
13	<u>102845204</u>	Rod, Battery Hold Down 12"	12
14	<u>102873401</u>	5/16-18 Heavy Hex Nut	16
15	<u>102980801</u>	Extr, Plastic, 1 X 1 X 3	2
16	<u>102980901</u>	Clamp, Hose, Nylon, .25	2

13

E


13

E

ELECTRIC MOTOR

14

E

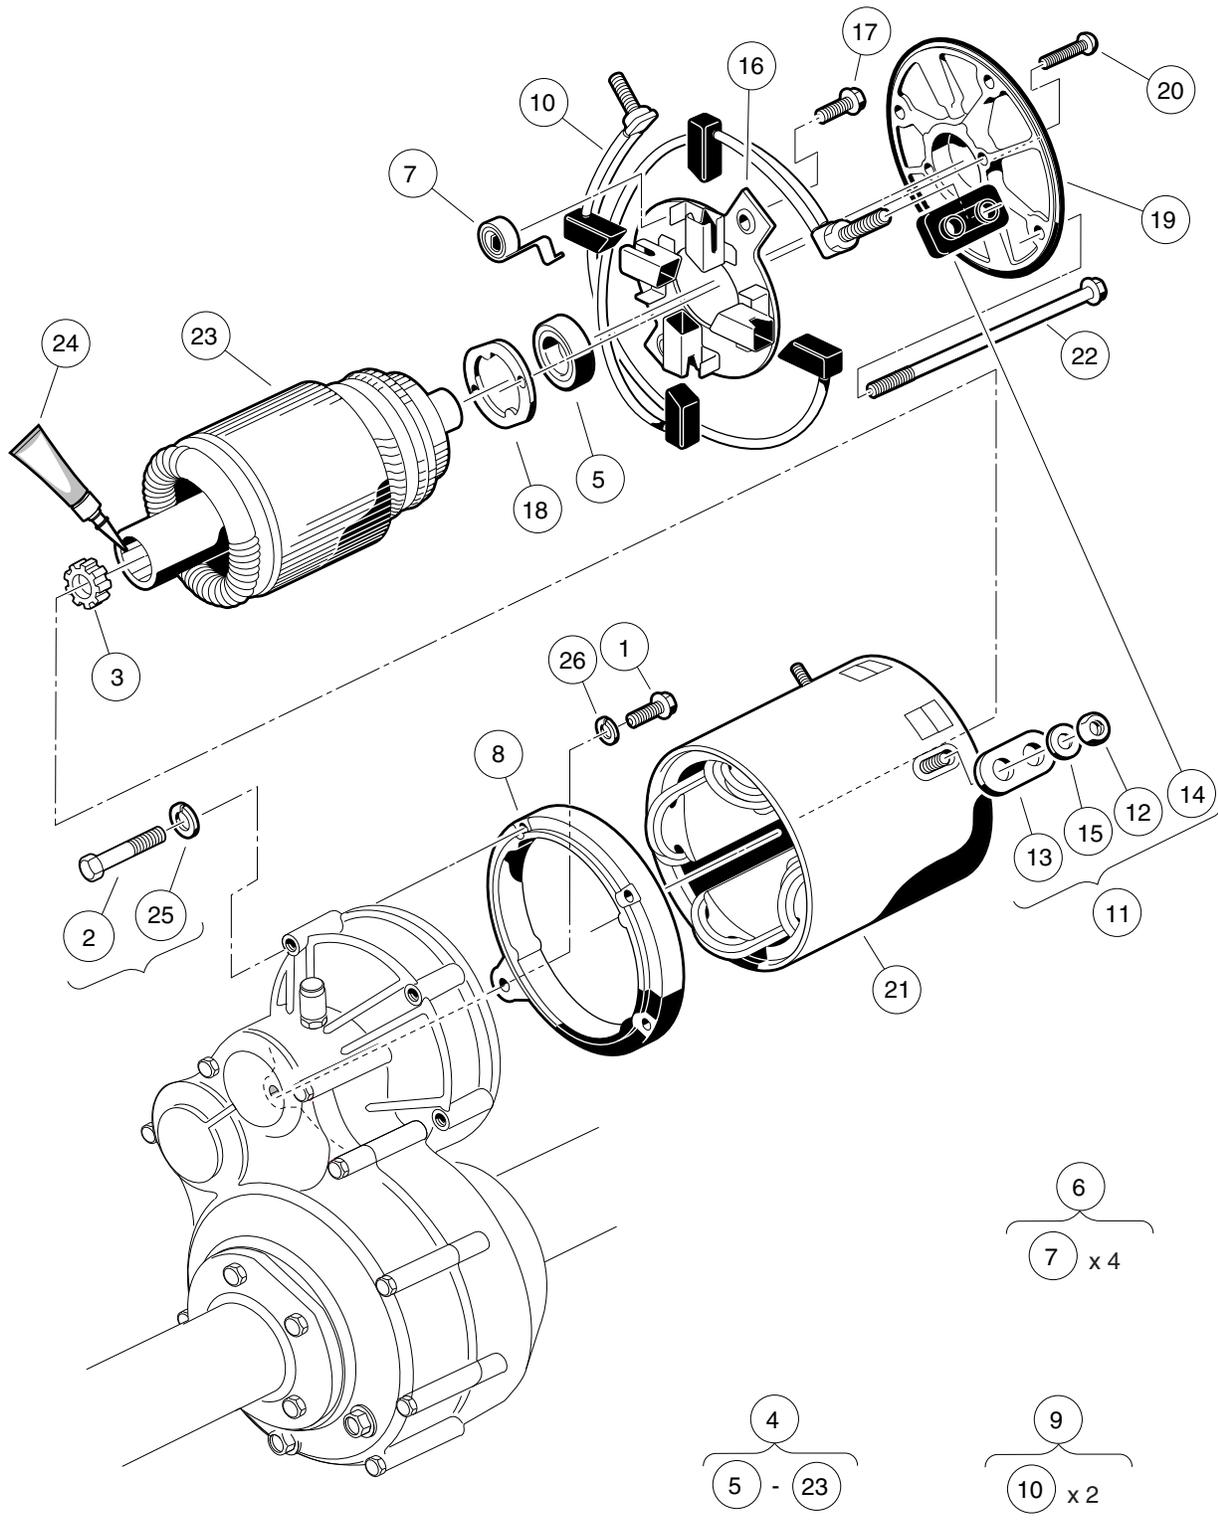

6
7 x 4

4
5 - 23

9
10 x 2


000350-001

MOTOR (MODEL 5BC59JBS6360) – POWERDRIVE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1
2	1014201	Screw, 1/4-20 X 2.25 Hex Cap	3
3	<u>102235201</u>	Bumper, Drive Unit	1
4	102237701	Motor, 48-Volt Series, 3.10 hp (includes items 5 through 23)	1
5	<u>1011290</u>	Ball Bearing	1
6	1011411	Kit, Brush Spring (ge Motor) (includes item 7)	1
7	1011285	Brush Spring	4
8	<u>1017944</u>	End Shield	1
9	N/A	Brush Package (includes item 10)	1
10	N/A	Brush with Screw	2
11	<u>1017947</u>	Hardware Package (includes items 12 through 15)	1
12	<u>1011280</u>	Locknut, 5/16-18	4
13	N/A	Insulator Bushing	2
14	N/A	Insulated Bushing	2
15	<u>1241</u>	Washer, 5/16 Type A Flat	4
16	<u>1017948</u>	Brush Rigging	1
17	<u>1017949</u>	Screw, #6-32 X 0.480 Hex-Head	2
18	<u>1017950</u>	Bearing Retainer	1
19	<u>1017951</u>	End Shield	1
20	<u>1017953</u>	Screw, Bearing Retainer	2
21	<u>1017958</u>	Stator Shell and Winding, 48-Volt, 3.15 hp	1
22	<u>1017961</u>	Clamp Screw	4
23	N/A	Armature, Series	1
24	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
25	<u>451</u>	Lockwasher, 1/4 Split	3
26	<u>7174</u>	Lockwasher, 5/16 Split	1

14

E

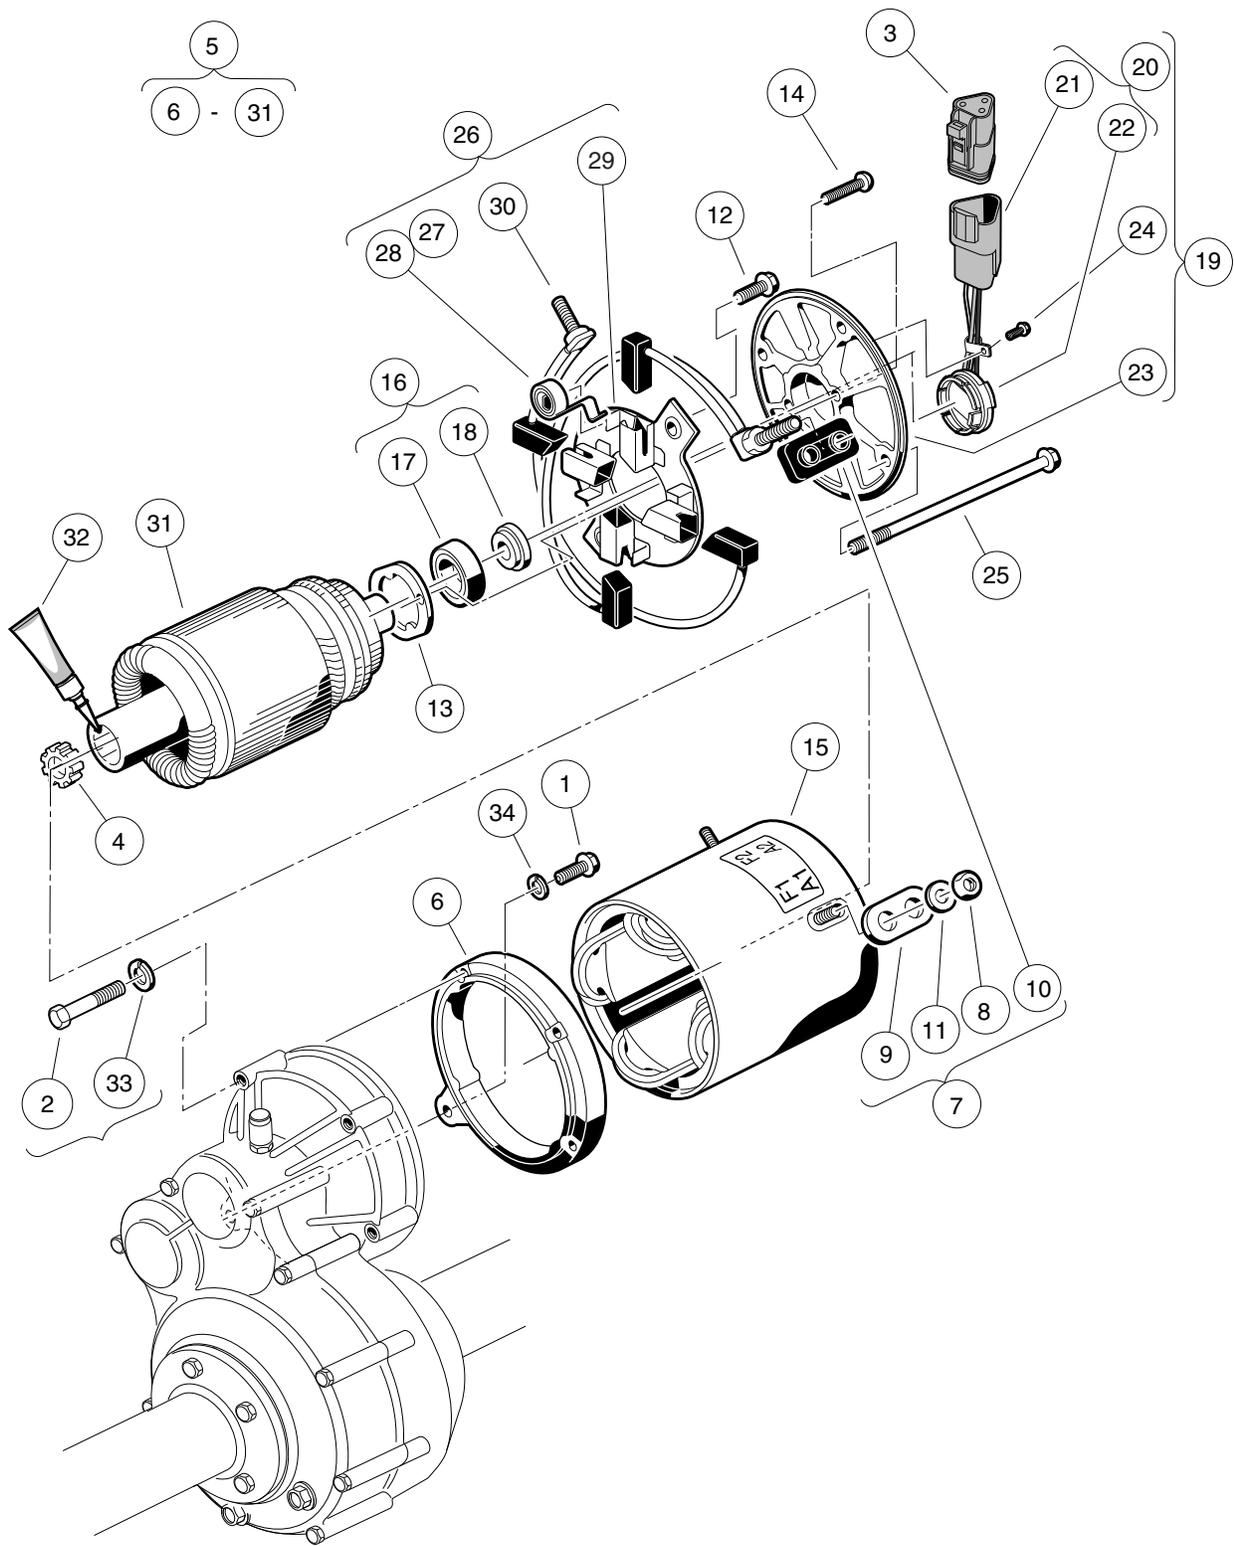


000349-001

MOTOR (MODEL 5BC59JBS6365) – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1
2	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	3
3	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
4	<u>102235201</u>	Bumper, Drive Unit	1
5	<u>102240102</u>	Motor, 48-Volt Shunt-Wound * (includes items 6 through 31)	1
6	<u>1017944</u>	End Shield	1
7	<u>1017947</u>	Hardware Package (includes items 8 through 11)	1
8	<u>1011280</u>	Locknut, 5/16-18	4
9	N/A	Insulator Bushing	2
10	N/A	Insulated Bushing	2
11	<u>1241</u>	Washer, 5/16 Type A Flat	4
12	<u>1017949</u>	Screw, #6-32 X 0.480 Hex-Head	2
13	<u>1017950</u>	Bearing Retainer	1
14	<u>1017953</u>	Screw, Bearing Retainer	2
15	<u>102265501</u>	Stator Shell and Winding	1
16	<u>102265701</u>	Kit, Bearing and Magnet (includes items 17 and 18)	1
17	<u>1011290</u>	Ball Bearing	1
18	<u>102265801</u>	Magnet	1
19	<u>102265901</u>	Motor End Shield Asm (includes items 20 through 24)	1
20	<u>102265601</u>	Speed Sensor Assembly (includes items 21 and 22)	1
21	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
22	N/A	Sensor, Speed, without Connector	1
23	<u>102266001</u>	End Shield, Motor	1
24	<u>102267001</u>	Screw, #8-32 X 0.375 Hex-Head	1
25	<u>102266101</u>	Screw, #10 - 32 X 8.250	4
26	<u>102327801</u>	Brush Assembly, Beveled (includes items 27 through 30)	1
27	<u>1011411</u>	Kit, Brush Spring (ge Motor) (includes item 28)	1
28	<u>1011285</u>	Brush Spring	4
29	<u>1017948</u>	Brush Rigging	1
30	<u>102251901</u>	Brush Kit, Motor	1
31	N/A	Armature	1
32	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
33	<u>451</u>	Lockwasher, 1/4 Split	3
34	<u>7174</u>	Lockwasher, 5/16 Split	1
* Note: The model 5BC59JBS6365 motor has been discontinued. To replace the motor, use motor model EJ8-4001A.			

14

E

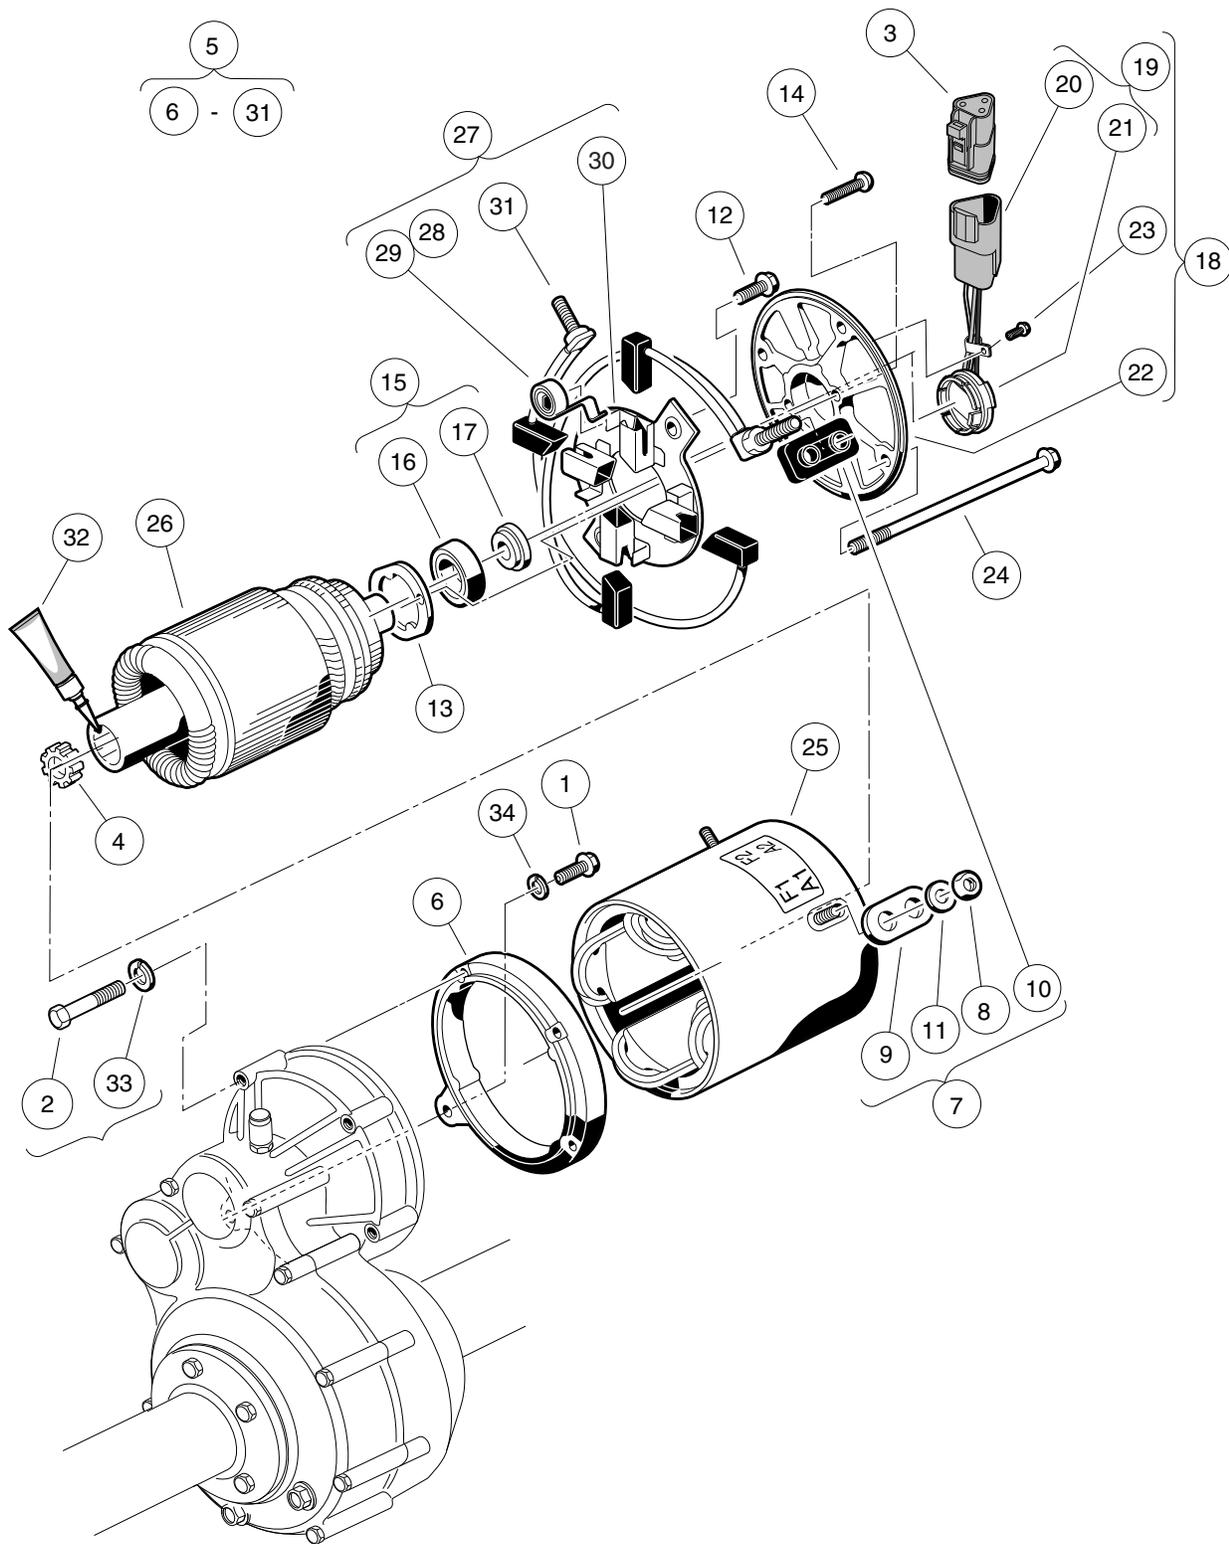


000349-002

MOTOR (MODEL 5BC59JBS6390) – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1
2	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	3
3	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
4	<u>102235201</u>	Bumper, Drive Unit	1
5	<u>102240104</u>	Motor, 48-Volt Non-Skew IQ * (includes items 6 through 27)	1
6	<u>1017944</u>	End Shield	1
7	<u>1017947</u>	Hardware Package (includes items 8 through 11)	1
8	<u>1011280</u>	Locknut, 5/16-18	4
9	N/A	Insulator Bushing	2
10	N/A	Insulated Bushing	2
11	<u>1241</u>	Washer, 5/16 Type A Flat	4
12	<u>1017949</u>	Screw, #6-32 X 0.480 Hex-Head	2
13	<u>1017950</u>	Bearing Retainer	1
14	<u>1017953</u>	Screw, Bearing Retainer	2
15	<u>102265701</u>	Kit, Bearing and Magnet (includes items 16 and 17)	1
16	<u>1011290</u>	Ball Bearing	1
17	<u>102265801</u>	Magnet	1
18	<u>102265901</u>	Motor End Shield Asm (includes items 19 through 23)	1
19	<u>102265601</u>	Speed Sensor Assembly (includes items 20 and 21)	1
20	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
21	N/A	Sensor, Speed, without Connector	1
22	<u>102266001</u>	End Shield, Motor	1
23	<u>102267001</u>	Screw, #8-32 X 0.375 Hex-Head	1
24	<u>102266101</u>	Screw, #10 - 32 X 8.250	4
25	<u>103325701</u>	Stator Shell and Winding	1
26	<u>103325801</u>	Non Skew Armature	1
27	<u>103337601</u>	Brush Assembly, IQ Motor, Non-Skew (includes items 28 through 31)	1
28	<u>1011411</u>	Kit, Brush Spring (ge Motor) (includes item 29)	1
29	<u>1011285</u>	Brush Spring	4
30	<u>103325501</u>	Brush Rigging, Non-Skew Motor	1
31	<u>103325601</u>	Brush Set, Non-Skew	1
32	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
33	<u>451</u>	Lockwasher, 1/4 Split	3
34	<u>7174</u>	Lockwasher, 5/16 Split	1
* Note: The model 5BC59JBS6390 motor has been discontinued. To replace the motor, use motor model EJ8-4001A.			

14

E

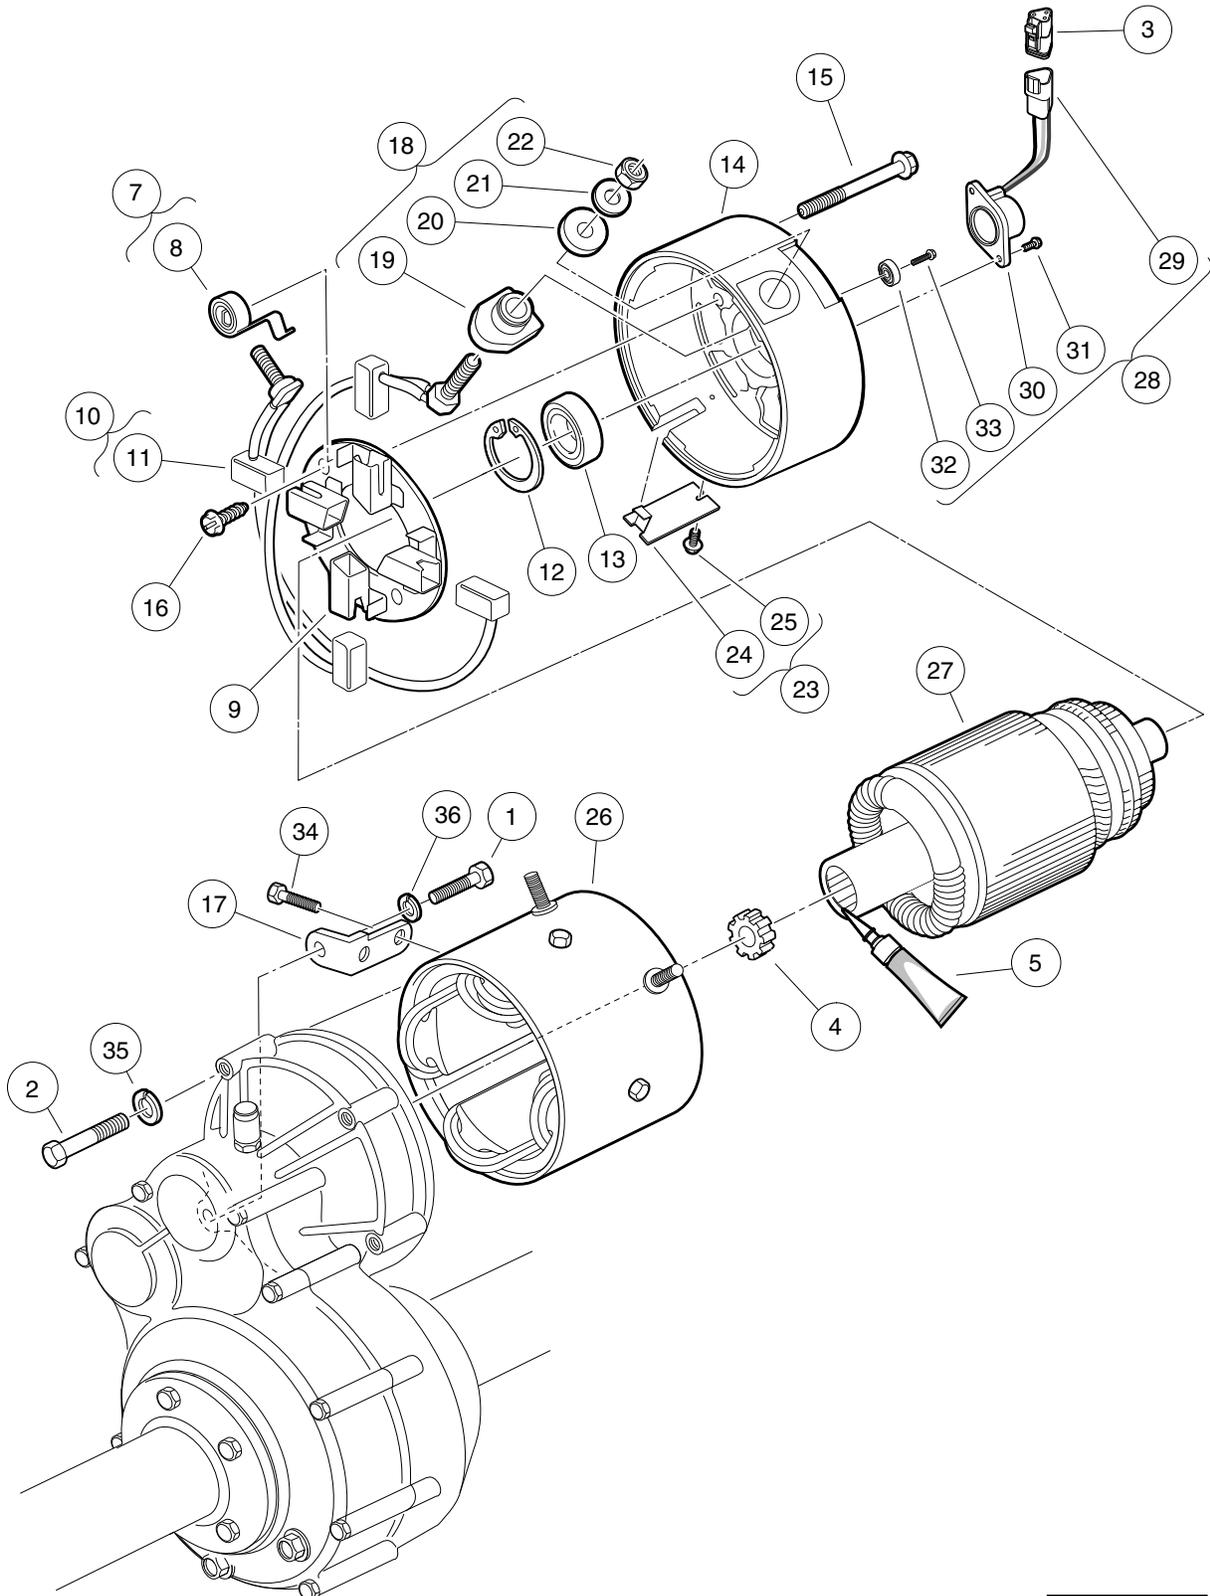


000185-001

MOTOR (MODEL EJ4-4001) – ELECTRIC VEHICLE

14

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1
2	1014201	Screw, 1/4-20 X 2.25 Hex Cap	3
3	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
4	<u>102235201</u>	Bumper, Drive Unit	1
5	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
6	<u>102705001</u>	IQ Electric Motor, 48-VDC 3.3 hp * (includes items 7 through 34)	1
7	<u>102186001</u>	Spring Kit, Motor Brush (includes item 8)	1
8	N/A	Spring, Brush, S-g	4
9	<u>102186101</u>	Brush Box Assembly	1
10	<u>102186201</u>	Brush Kit, Motor (includes item 11)	1
11	N/A	Assembly, Brush and Terminal	2
12	<u>102186301</u>	Ring, 2.24" Internal Retaining	1
13	<u>102186401</u>	Bearing, Ball	1
14	<u>102186701</u>	End Cap, Motor	1
15	N/A	Screw, 1/4-20 X 2.25 Hex-Head Washer	2
16	<u>102186901</u>	Screw, #8-32 X .5 Hex-Head	2
17	<u>102187001</u>	L-Bracket, Motor	1
18	<u>102187101</u>	Hardware Kit, Motor Terminal (includes items 19 through 22)	2
19	N/A	Bushing, Nylon	2
20	N/A	Washer, Nylon Flat	2
21	N/A	Washer, Flat, 5/16 Steel	2
22	N/A	Nut, Brass Hex, 5/16 - 18	2
23	<u>102187201</u>	Plate Kit, Motor Cover (includes items 24 and 25)	1
24	N/A	Assembly, Cover Plate	1
25	N/A	Screw, #8-32 x 0.375, Taptite Thread	1
26	<u>102704701</u>	Frame and Field Assembly	1
27	<u>102704801</u>	Armature Assembly	1
28	<u>102704901</u>	Kit, Speed Sensor (includes items 29 through 33)	1
29	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
30	N/A	Sensor, Motor Speed, ADC	1
31	N/A	Screw, #8-32, Taptite Thread	2
32	N/A	Magnet, ADC Motor	1
33	N/A	Screw, 1/4-20 x 0.5	1
34	N/A	Bolt, 1/4 - 20 x 0.73 Thread-Forming	2
35	<u>451</u>	Lockwasher, 1/4 Split	3
36	<u>7174</u>	Lockwasher, 5/16 Split	1
* Note: The model EJ4-4001 motor has been discontinued. To replace the motor, use motor model EJ8-4001A.			

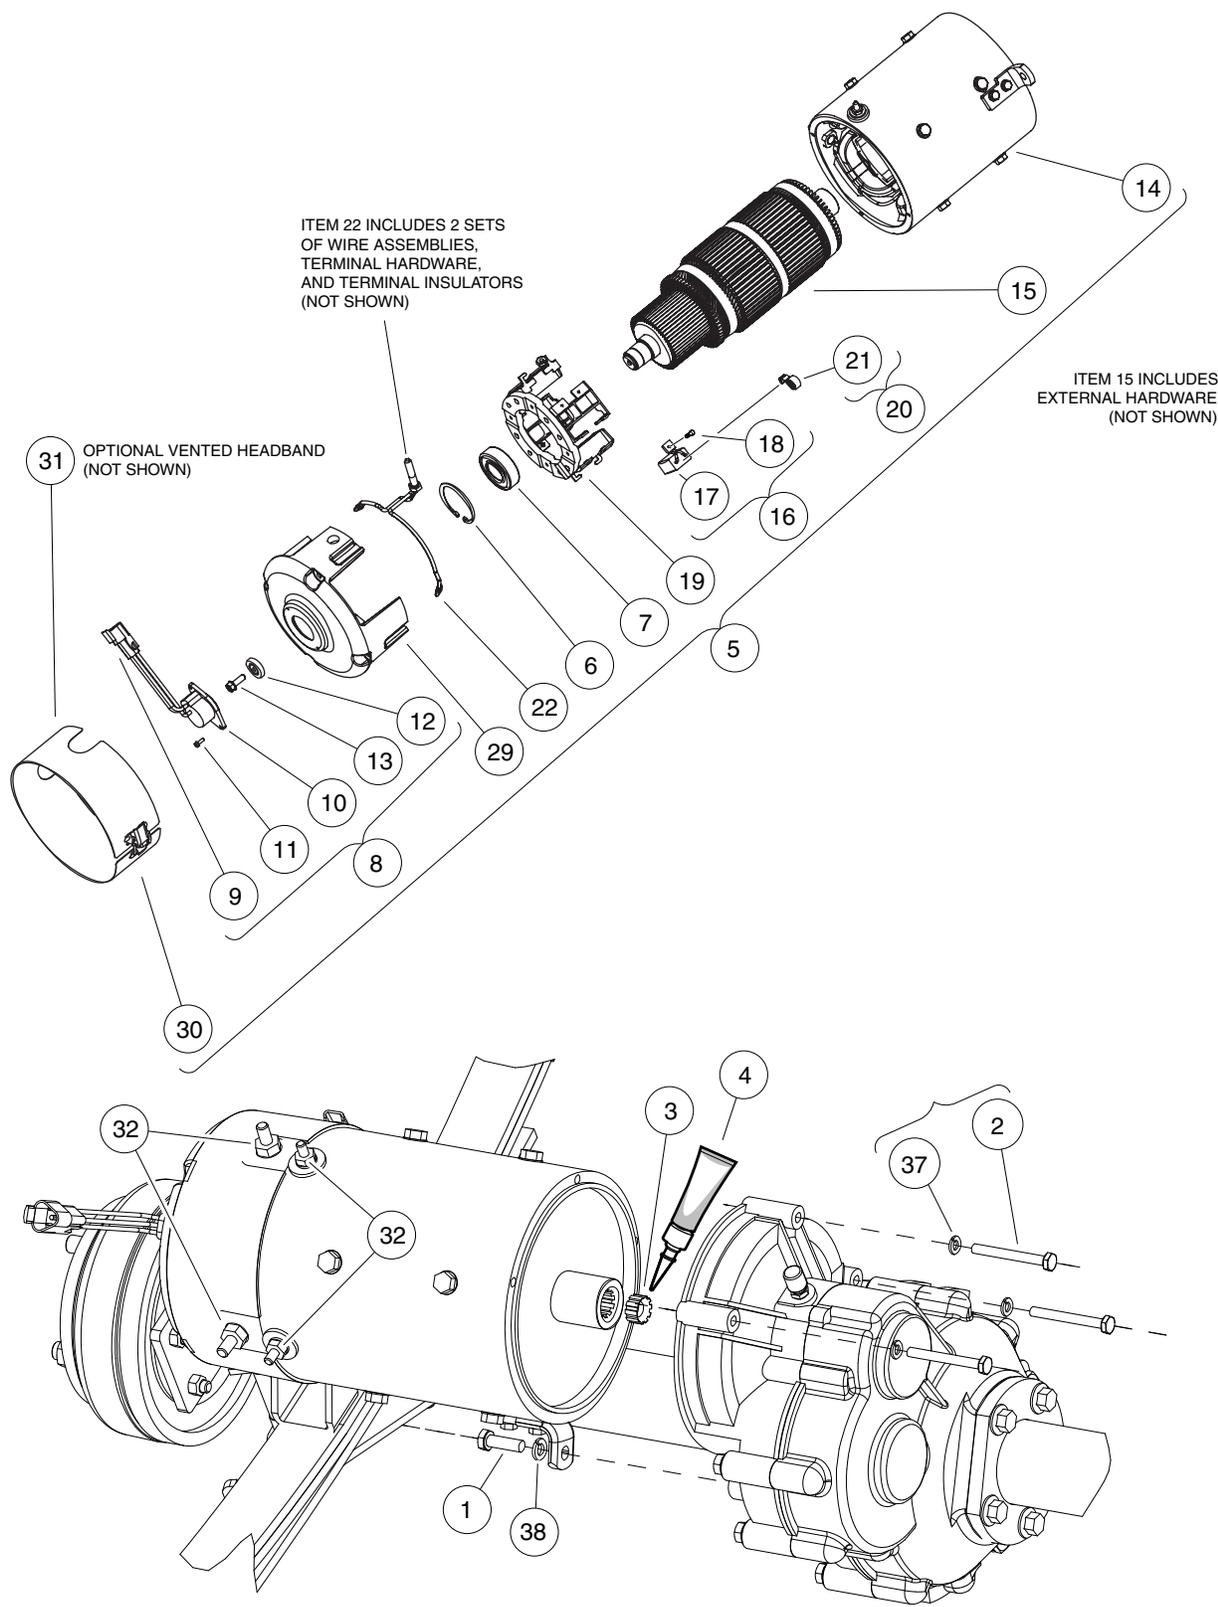

000411-001

MOTOR (MODEL DA5-4006) – IQ PLUS


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1
2	1014201	Screw, 1/4-20 X 2.25 Hex Cap	3
3	<u>102235201</u>	Bumper, Drive Unit	1
4	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
5	<u>102775101</u>	IQ Plus Electric Motor, 48-VDC 3.7 hp (includes items 6 through 30)	1
6	<u>102186301</u>	Ring, 2.24" Internal Retaining	1
7	<u>102186401</u>	Bearing, Ball	1
8	<u>102704901</u>	Kit, Speed Sensor (includes items 9 through 13)	1
9	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
10	N/A	Sensor, Motor Speed, ADC	1
11	N/A	Screw, #8-32, Taptite Thread	2
12	N/A	Magnet, ADC Motor	1
13	N/A	Screw, 1/4-20 x 0.5	1
14	N/A	Asm, Frame And Field, 3.7 Hp	1
15	N/A	Armature (Includes external hardware - not shown)	1
16	<u>102938601</u>	Kit, Brush, 3.7 Hp (includes items 17 and 18)	1
17	N/A	Brush, Motor	8
18	N/A	Screw, Taptite	8
19	<u>102938701</u>	Asm, Brush Box, 3.7 Hp	1
20	<u>102938801</u>	Kit, Brush Spring, 3.7 Hp (includes item 21)	1
21	N/A	Brush Spring	8
22	<u>102938901</u>	Kit, Brush Lead Asm, 3.7 Hp (includes items 23 through 28)	1
23	N/A	Terminal and Lead Assembly	2
24	N/A	Insulator, Terminal	2
25	N/A	Washer, Insulating	2
26	N/A	Washer, Flat, 5/16, Brass/Bronze	2
27	N/A	Nut, 5/16, Steel	4
28	N/A	Lockwasher, 5/16, Steel	2
29	<u>102939001</u>	Commutator End Head, 3.7 Hp	1
30	<u>102939101</u>	Sealed Headband, 3.7 Hp	1
31	<u>102939102</u>	Vented Headband, 3.7 HP (optional - not shown)	1
32	<u>102951701</u>	Pkg, Terminal Hardware, 3.7hp (includes items 33 through 36)	1
33	N/A	Nut, 5/16, Steel	2
34	N/A	Lockwasher, 5/16, Steel	2
35	N/A	Nut, 1/4-20, Steel	2
36	N/A	Lockwasher, 1/4-20, Steel	2
37	<u>451</u>	Lockwasher, 1/4 Split	3
38	<u>7174</u>	Lockwasher, 5/16 Split	1

14

E

14

E

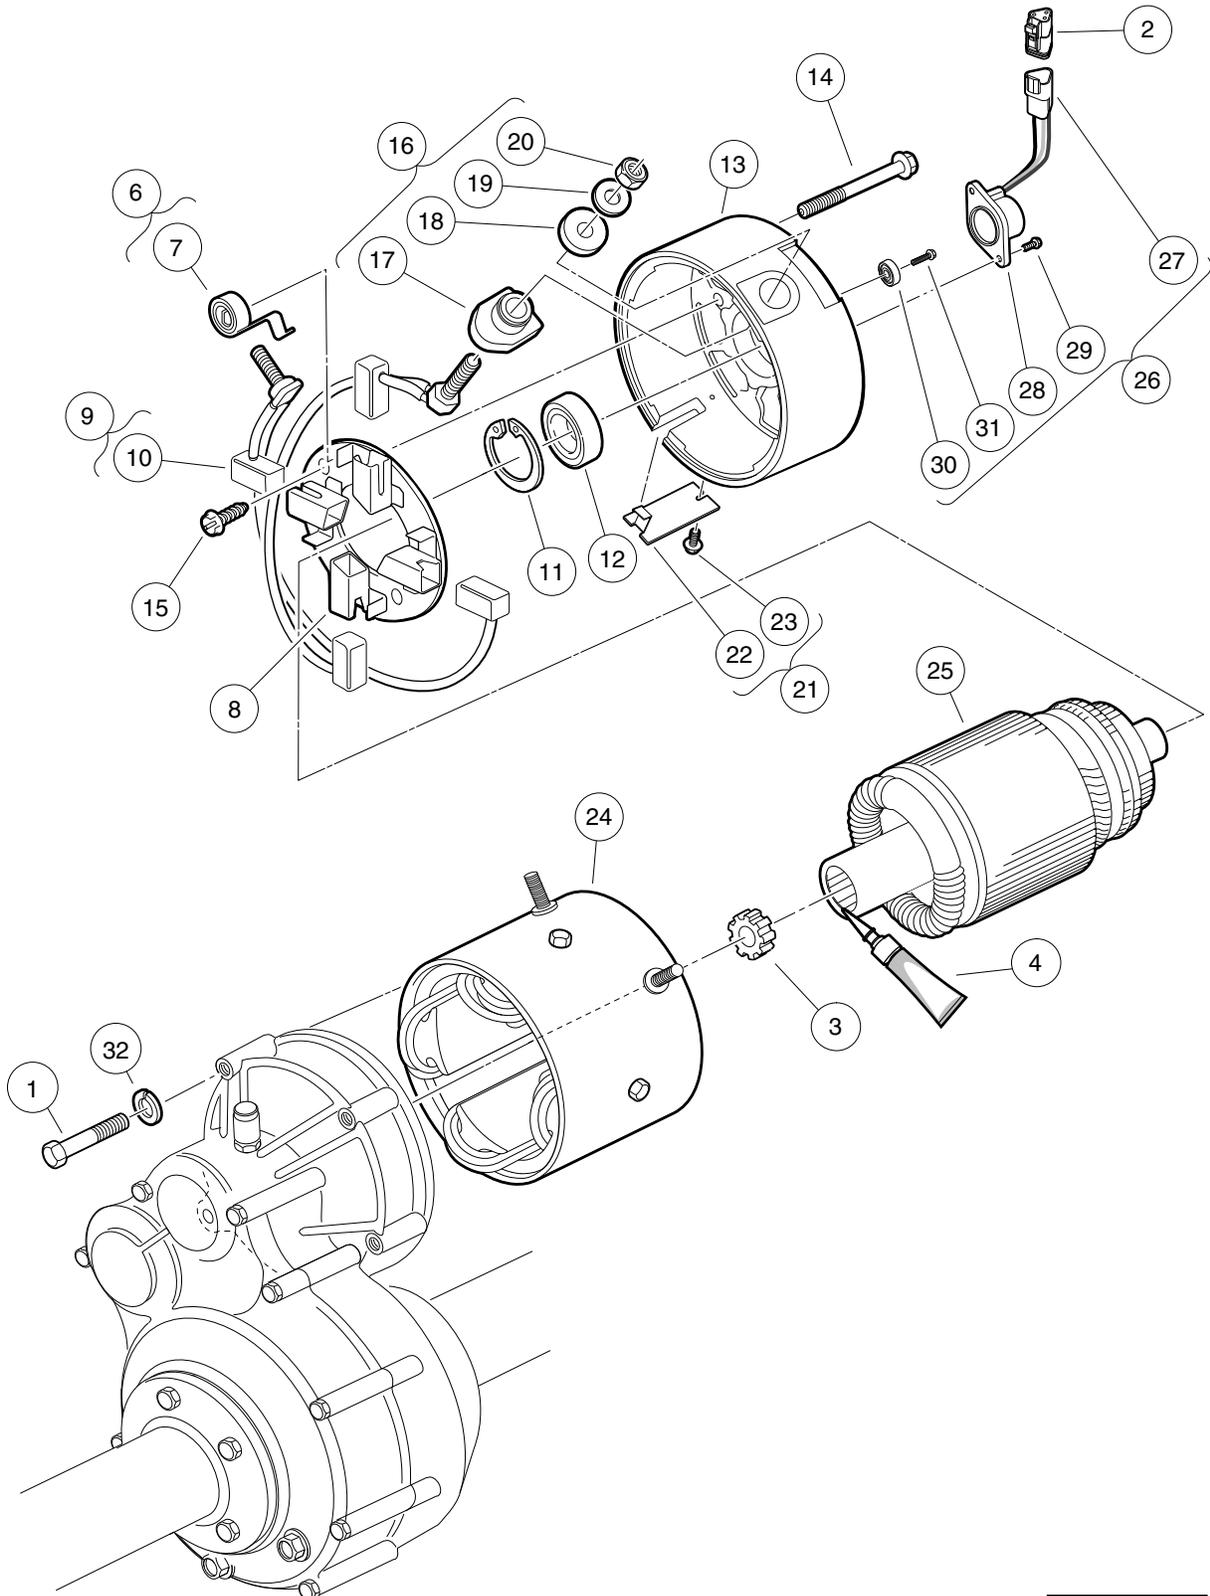

000185-002

MOTOR (MODEL EJ8-4001A) – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1014201	Screw, 1/4-20 X 2.25 Hex Cap	3
2	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
3	<u>102235201</u>	Bumper, Drive Unit	1
4	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
5	N/A	IQ Electric Motor, 48-VDC 3.3 hp (includes items 6 through 26)	1
6	<u>102186001</u>	Spring Kit, Motor Brush (includes item 7)	1
7	N/A	Spring, Brush, S-g	4
8	<u>102186101</u>	Brush Box Assembly	1
9	<u>102186201</u>	Brush Kit, Motor (includes item 10)	1
10	N/A	Assembly, Brush and Terminal	2
11	<u>102186301</u>	Ring, 2.24" Internal Retaining	1
12	<u>102186401</u>	Bearing, Ball	1
13	<u>102186701</u>	End Cap, Motor	1
14	N/A	Screw, 1/4-20 X 2.25 Hex-Head Washer	2
15	<u>102186901</u>	Screw, #8-32 X .5 Hex-Head	2
16	<u>102187101</u>	Hardware Kit, Motor Terminal (includes items 17 through 20)	2
17	N/A	Bushing, Nylon	2
18	N/A	Washer, Nylon Flat	2
19	N/A	Washer, Flat, 5/16 Steel	2
20	N/A	Nut, Brass Hex, 5/16 - 18	2
21	<u>102187201</u>	Plate Kit, Motor Cover (includes items 22 and 23)	1
22	N/A	Assembly, Cover Plate	1
23	N/A	Screw, #8-32 x 0.375, Taptite Thread	1
24	<u>102704701</u>	Frame and Field Assembly	1
25	<u>102704801</u>	Armature Assembly	1
26	<u>102704901</u>	Kit, Speed Sensor (includes items 27 through 31)	1
27	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
28	N/A	Sensor, Motor Speed, ADC	1
29	N/A	Screw, #8-32, Taptite Thread	2
30	N/A	Magnet, ADC Motor	1
31	N/A	Screw, 1/4-20 x 0.5	1
32	<u>451</u>	Lockwasher, 1/4 Split	3

14

E

14


E

TRANSAXLES – ELECTRIC VEHICLES

15

E

Note: This transaxle (as a complete unit) has been discontinued. To replace the entire transaxle, use the transaxle shown on the following pages.

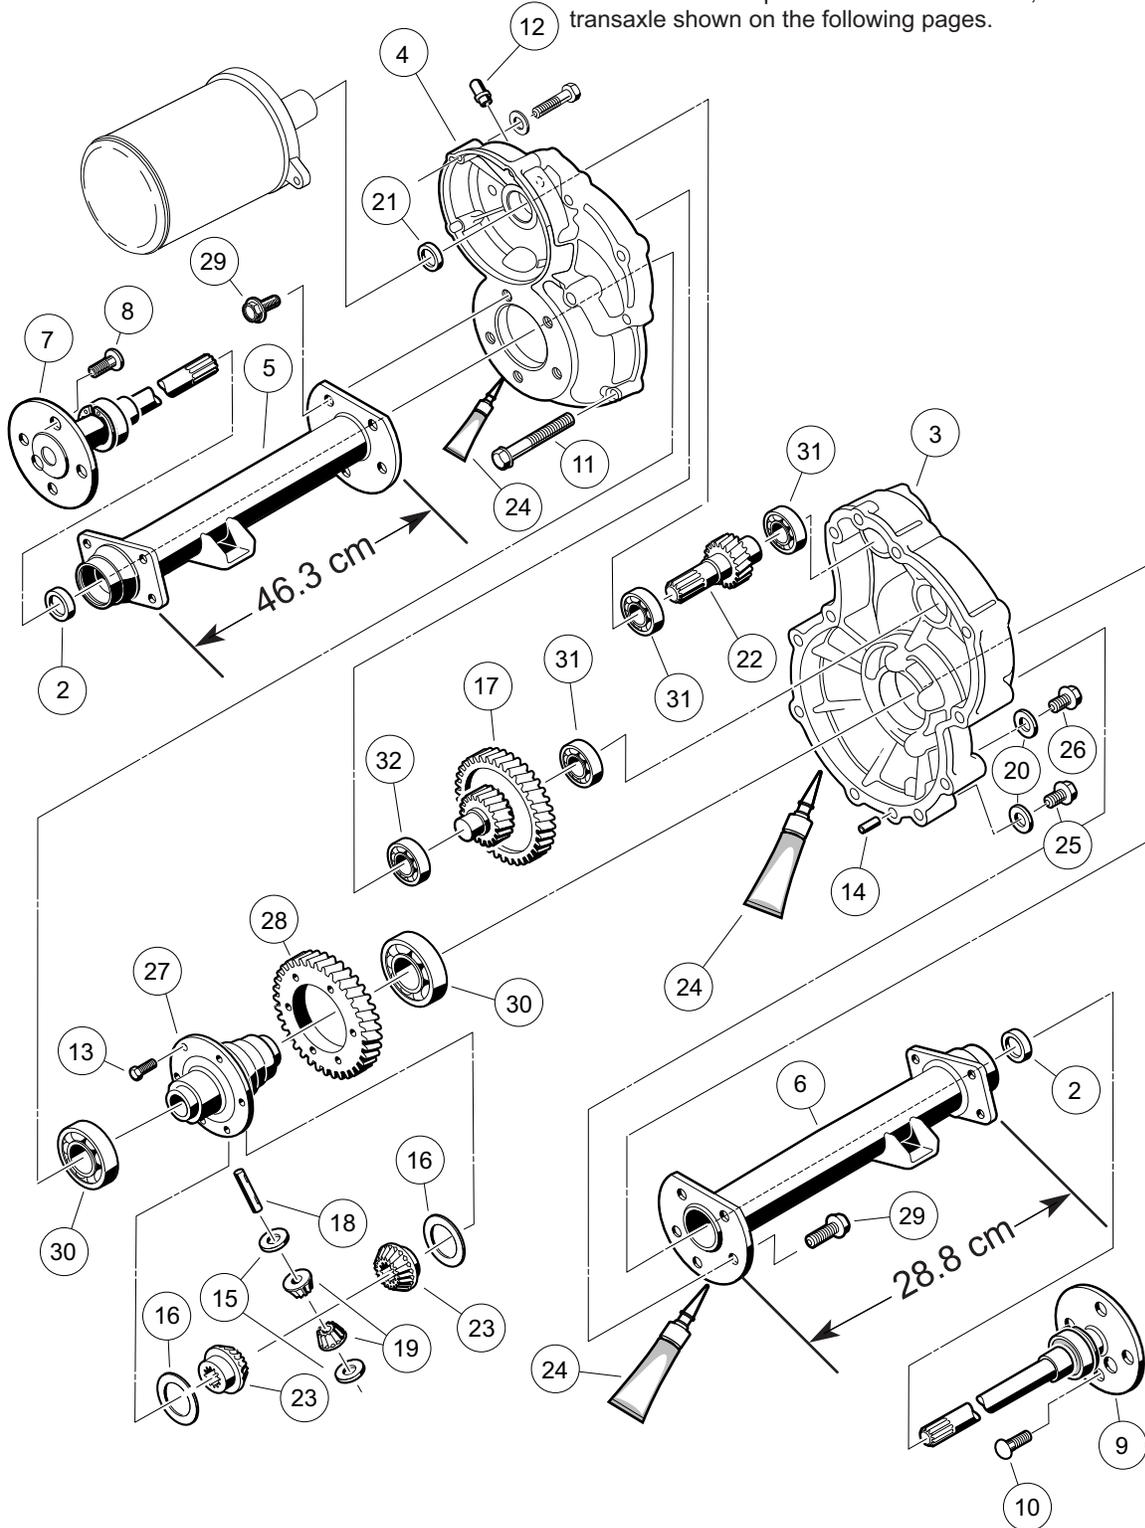


000223-001

TRANSAXLE – ELECTRIC VEHICLES (EARLIER VERSION)

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>101896001</u>	<p>1 2 3 4 Transaxle -12.3</p> <p>Note: If either the Differential Output Gear (item 28) or the Differential Housing (item 27) require replacement, both must be purchased at the same time. Items 27 and 28 are replacements for all gear and differential housing combinations in this transaxle.</p>	1

15

E

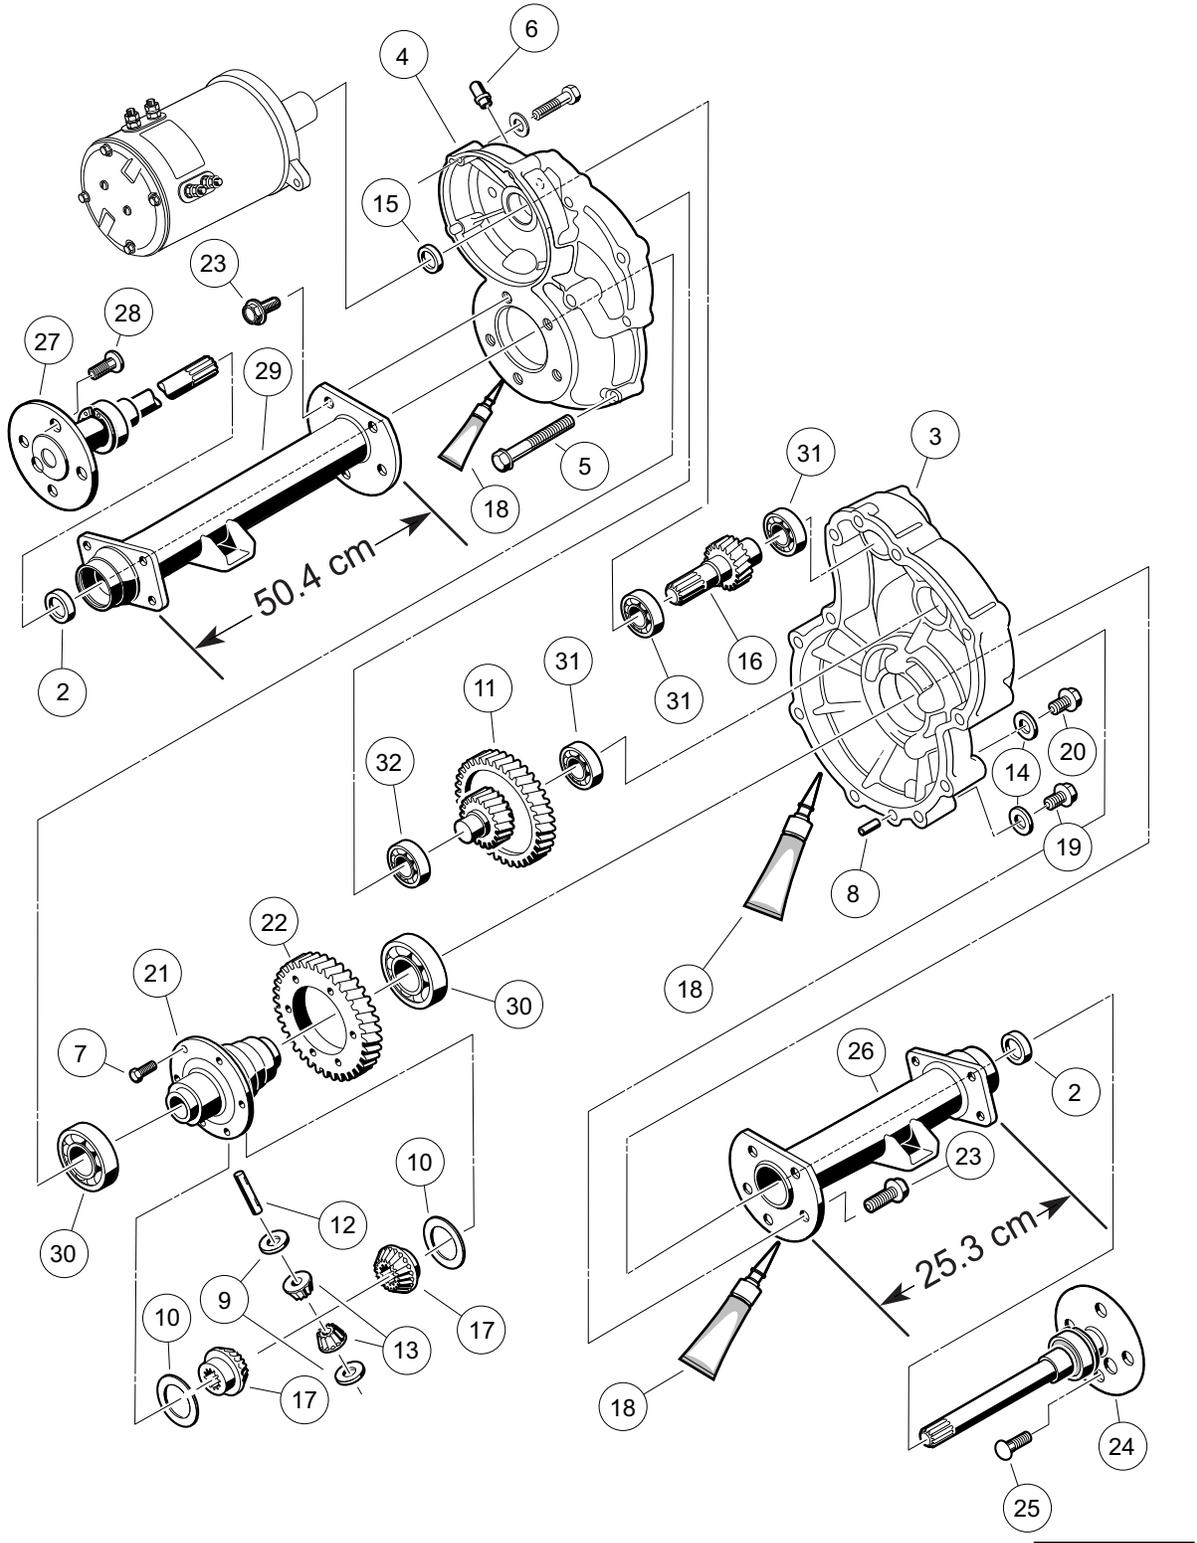

000223-002

TRANSAXLE – ELECTRIC VEHICLES (LATER STYLE)

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102771701</u>	Transaxle, Electric (includes items 2 through 32)	1
2	<u>1013794</u>	Axle Shaft Oil Seal	2
3	<u>101895401</u>	Gear Case, Left-Hand	1
4	<u>101895501</u>	Gear Case, Passenger-Side	1
5	<u>101897001</u>	Screw, M8-1.25 X 60mm Hex-Head	11
6	<u>101897201</u>	Breather	1
7	<u>101897401</u>	Screw, M10-1.25 X 25mm	6
8	<u>101897601</u>	Pin, 11mm OD X 8.5mm ID X 10mm	2
9	<u>101903601</u>	Washer, Thrust	2
10	<u>101903701</u>	Washer, Thrust	2
11	<u>101906901</u>	Intermediate Shaft Assembly	1
12	<u>101922101</u>	Pin, 15.99mm X 88.7mm Dowel	1
13	<u>101923001</u>	Gear, Differential Idler	2
14	<u>101923201</u>	Gasket	2
15	<u>101923501</u>	Seal, Lip	1
16	<u>101923701</u>	Shaft, Input	1
17	<u>101923901</u>	Gear, Differential	2
18	<u>101928701</u>	Liquid Gasket (Transaxle case)	1
19	<u>101972101</u>	Plug, M14-1.5 X 12mm Magnetic	1
20	<u>101972201</u>	Plug, M14-1.5 X 12mm Hex	1
21	<u>102356601</u>	Housing, Differential, 6 Bolt	1
22	<u>102356801</u>	Gear, Differential Output, 6-Bolt	1
23	<u>102357001</u>	Screw, Flg Hd M10 X 1.5 X 30	10
24	<u>102886301</u>	Axle Assembly, Driver-Side (includes item 25)	1
25	<u>101922201</u>	Lug Stud	4
26	<u>102886401</u>	Tube, Axle, Driver-Side	1
27	<u>102886501</u>	Axle Assembly, Passenger-Side (includes item 28)	1
28	<u>101922201</u>	Lug Stud	4
29	<u>102886601</u>	Tube, Axle, Passenger-Side	1
30	<u>7330</u>	Inner Axle Tube Bearing	2
31	<u>7335</u>	Bearing	3
32	<u>7336</u>	Bearing	1

15

E

15

E


BATTERY CHARGER

16

E

- 1
- 2
- 3

- 21

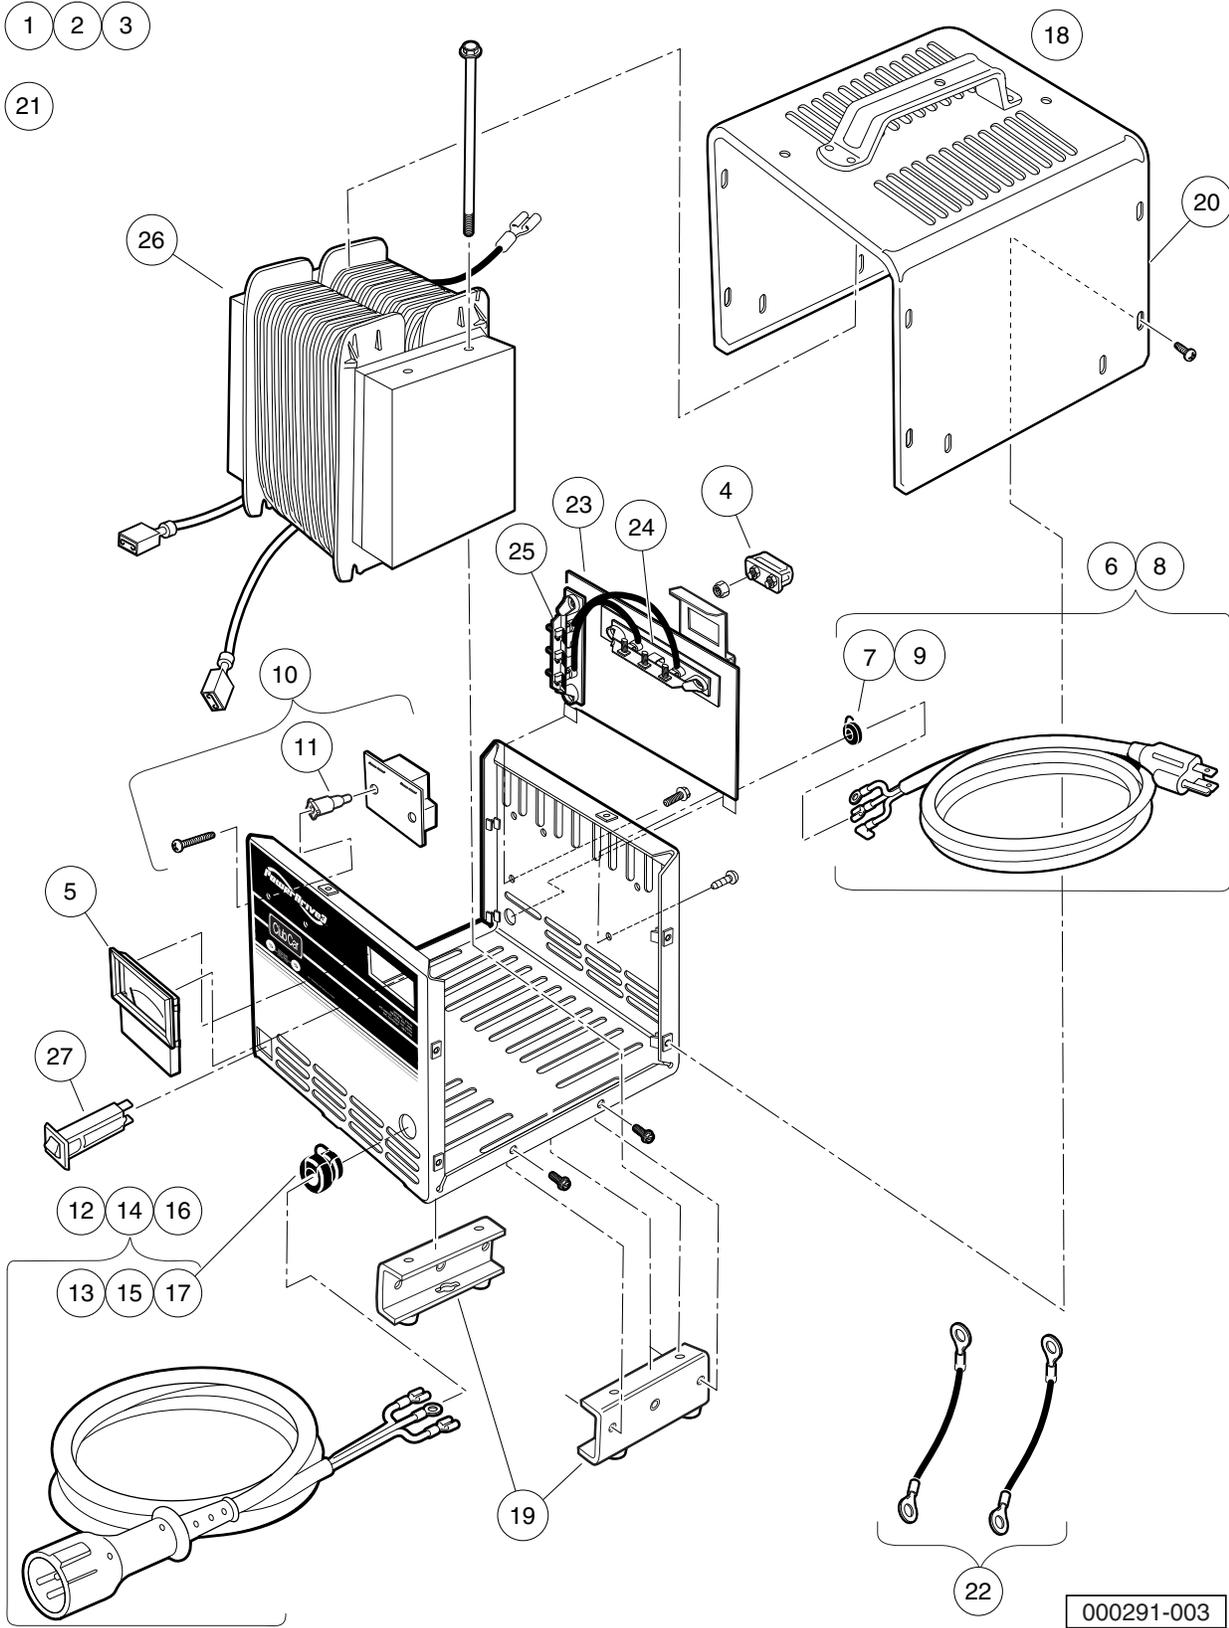


000291-003

POWERDRIVE 3 BATTERY CHARGER, DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103717001</u>	Chgr, Pd3 Stnry, 9Dc6'Ac'	1
2	<u>103717002</u>	Chgr, Pd3 Stnry, 12Dc9'Ac'	1
3	<u>103717003</u>	Chgr, Pd3 Stnry, 20Dc9'Ac'(includes items 4 through 27)	1
4	<u>102273701</u>	PD2 Fuse Asm	1
5	<u>102273801</u>	PD2 Ammeter	1
6	<u>103428501</u>	Kit, PD3 Cordset - AC 80" (includes item 7)	1
7	<u>102273901</u>	PD2 AC Cord Bushing	1
8	<u>103428601</u>	Kit, PD3 Cordset, - AC 114" (includes item 9)	1
9	<u>102273901</u>	PD2 AC Cord Bushing	1
10	<u>103428701</u>	Asm, PD3 Board Relay (includes item 11)	1
11	<u>103429701</u>	PD3 Plastic Stand-Offs	2
12	<u>103429001</u>	PD3 Cordset - DC 113" (includes item 13)	1
13	<u>1012098</u>	Bushing, DC Cord	1
14	<u>103429101</u>	PD3 Cordset - DC 154" (includes item 15)	1
15	<u>1012098</u>	Bushing, DC Cord	1
16	<u>103429201</u>	PD3 Cordset - DC 205" (includes item 17)	1
17	<u>1012098</u>	Bushing, DC Cord	1
18	<u>103429301</u>	Asm, PD3 Case (includes items 19 and 20)	1
19	<u>103434001</u>	Asm, PD3 Legs	1
20	<u>103439901</u>	PD3Case Top (Includes Handle)	1
21	<u>103429501</u>	Kit, PD3 Hardware	1
22	<u>103513001</u>	Wire Asm Kit Blk Pd3	1
23	<u>103517401</u>	Kit Pd3 Button Diode (includes items 24 and 25)	1
24	<u>103512801</u>	Asm Diode Top	1
25	<u>103512901</u>	Asm Diode Side	1
26	<u>103779601</u>	Transformer, Pd3, Al	1
27	<u>CCX8506</u>	Circuit Breaker, 15-Amp/120-Volt	1

16

E

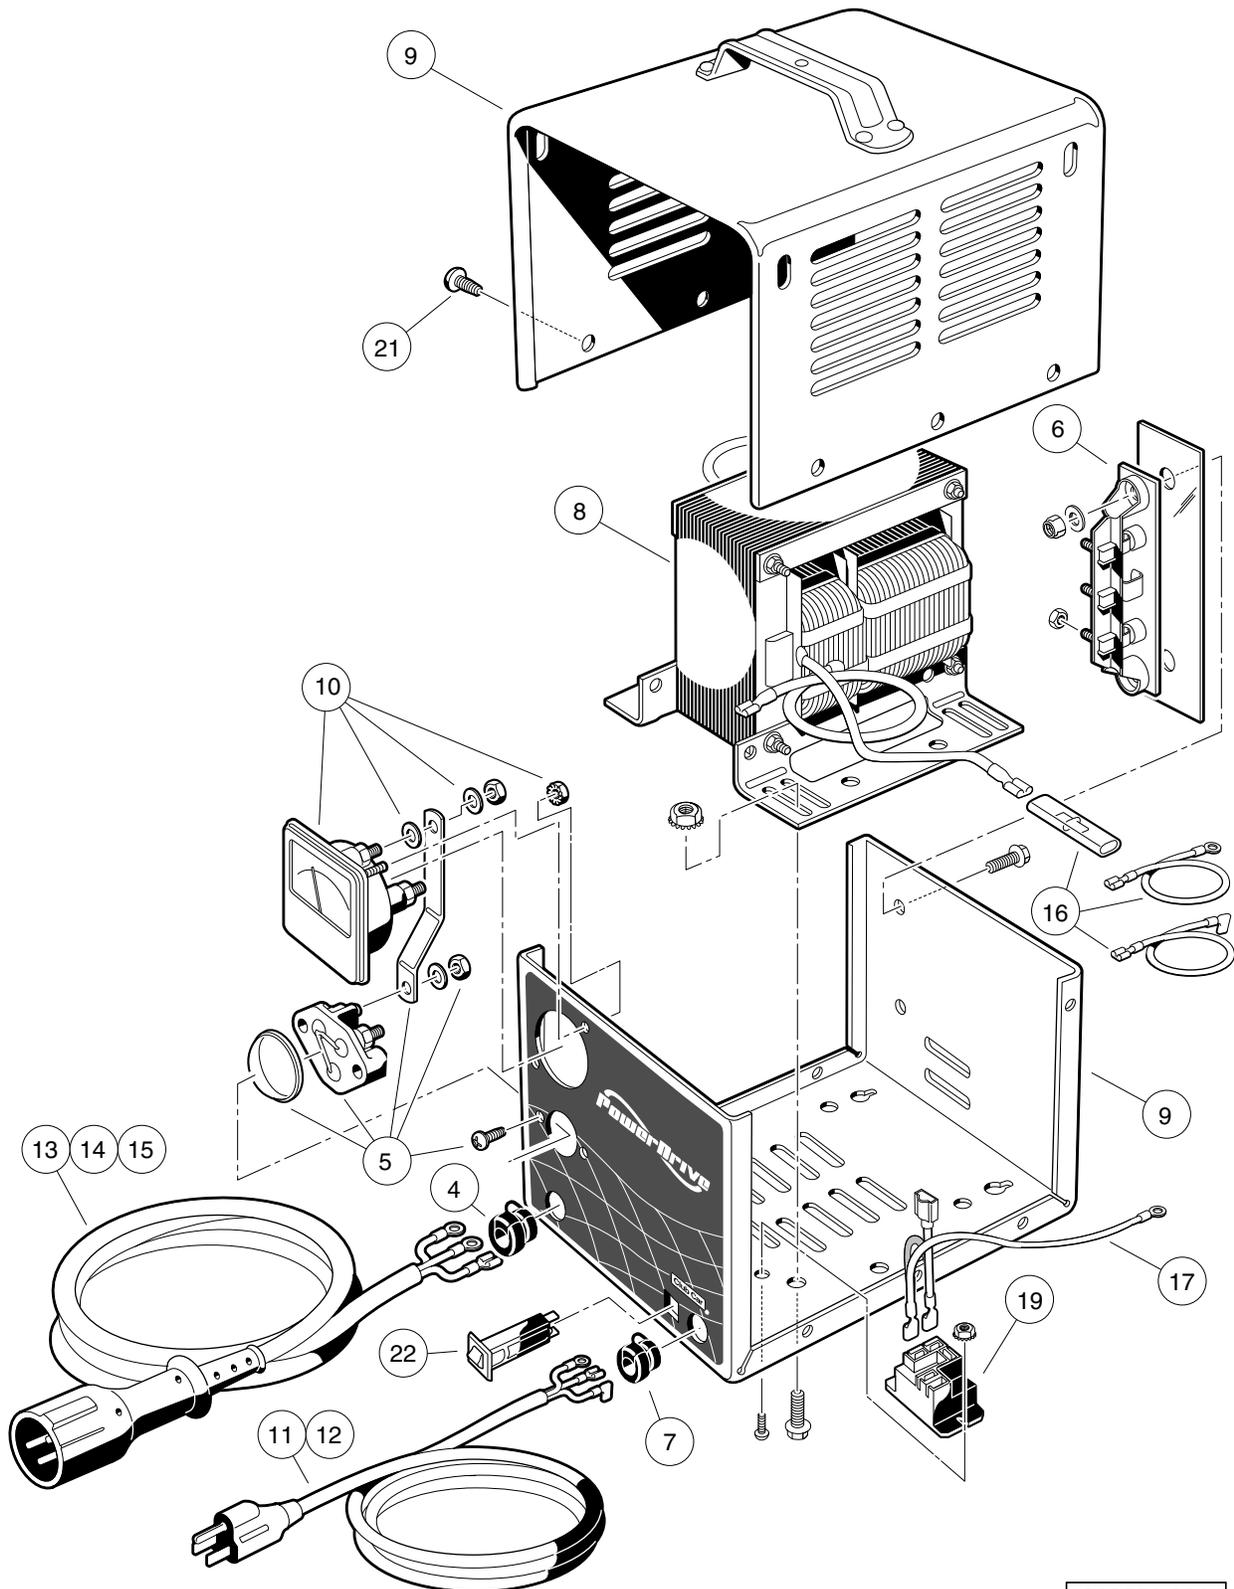


000351-001

POWERDRIVE BATTERY CHARGER (MODEL 17930), DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101802201</u>	48V/17A PowerDrive (9-ft DC, 6-ft AC Cord)	1
2	<u>101802202</u>	48V/17A PowerDrive (12-ft DC, 9-ft AC Cord)	1
3	<u>101802203</u>	48V/17A PowerDrive (20-ft DC, 9-ft AC Cord) (includes items 4 through 22)	1
4	<u>1012098</u>	Bushing, DC Cord	1
5	<u>1012101</u>	Fuse Assembly	1
6	<u>1015914</u>	Rectifier with Heatsink Assembly	1
7	<u>1015917</u>	Bushing, AC Cord	1
8	****	Transformer, Battery Charger	1
9	<u>101828301</u>	Case Assembly	1
10	<u>101828501</u>	Ammeter	1
11	<u>101828801</u>	Cord, AC, 80-Inch (203 cm)	1
12	<u>101828802</u>	Cord, AC, 108-Inch (274 cm)	1
13	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
14	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
15	<u>101828903</u>	Cord, DC, 250-Inch (635 cm)	1
16	<u>101831101</u>	Wire Assembly Kit	1
17	101914401	Assembly, Voltage Suppressor	1
18	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes items 19 and 20)	1
19	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
20	N/A	Kit, Relay, 48v 30a Instrns	1
21	7577	Screw, #10 X 0.50 Phillips Pan-Head	10
22	<u>CCX8506</u>	Circuit Breaker, 15-Amp/120-Volt	1
		**** Special order item available upon request.	
		Note: Level 1 Battery Charger part numbers include one AC and one DC cord. They do not include all of the level 2 cords listed.	

16

E

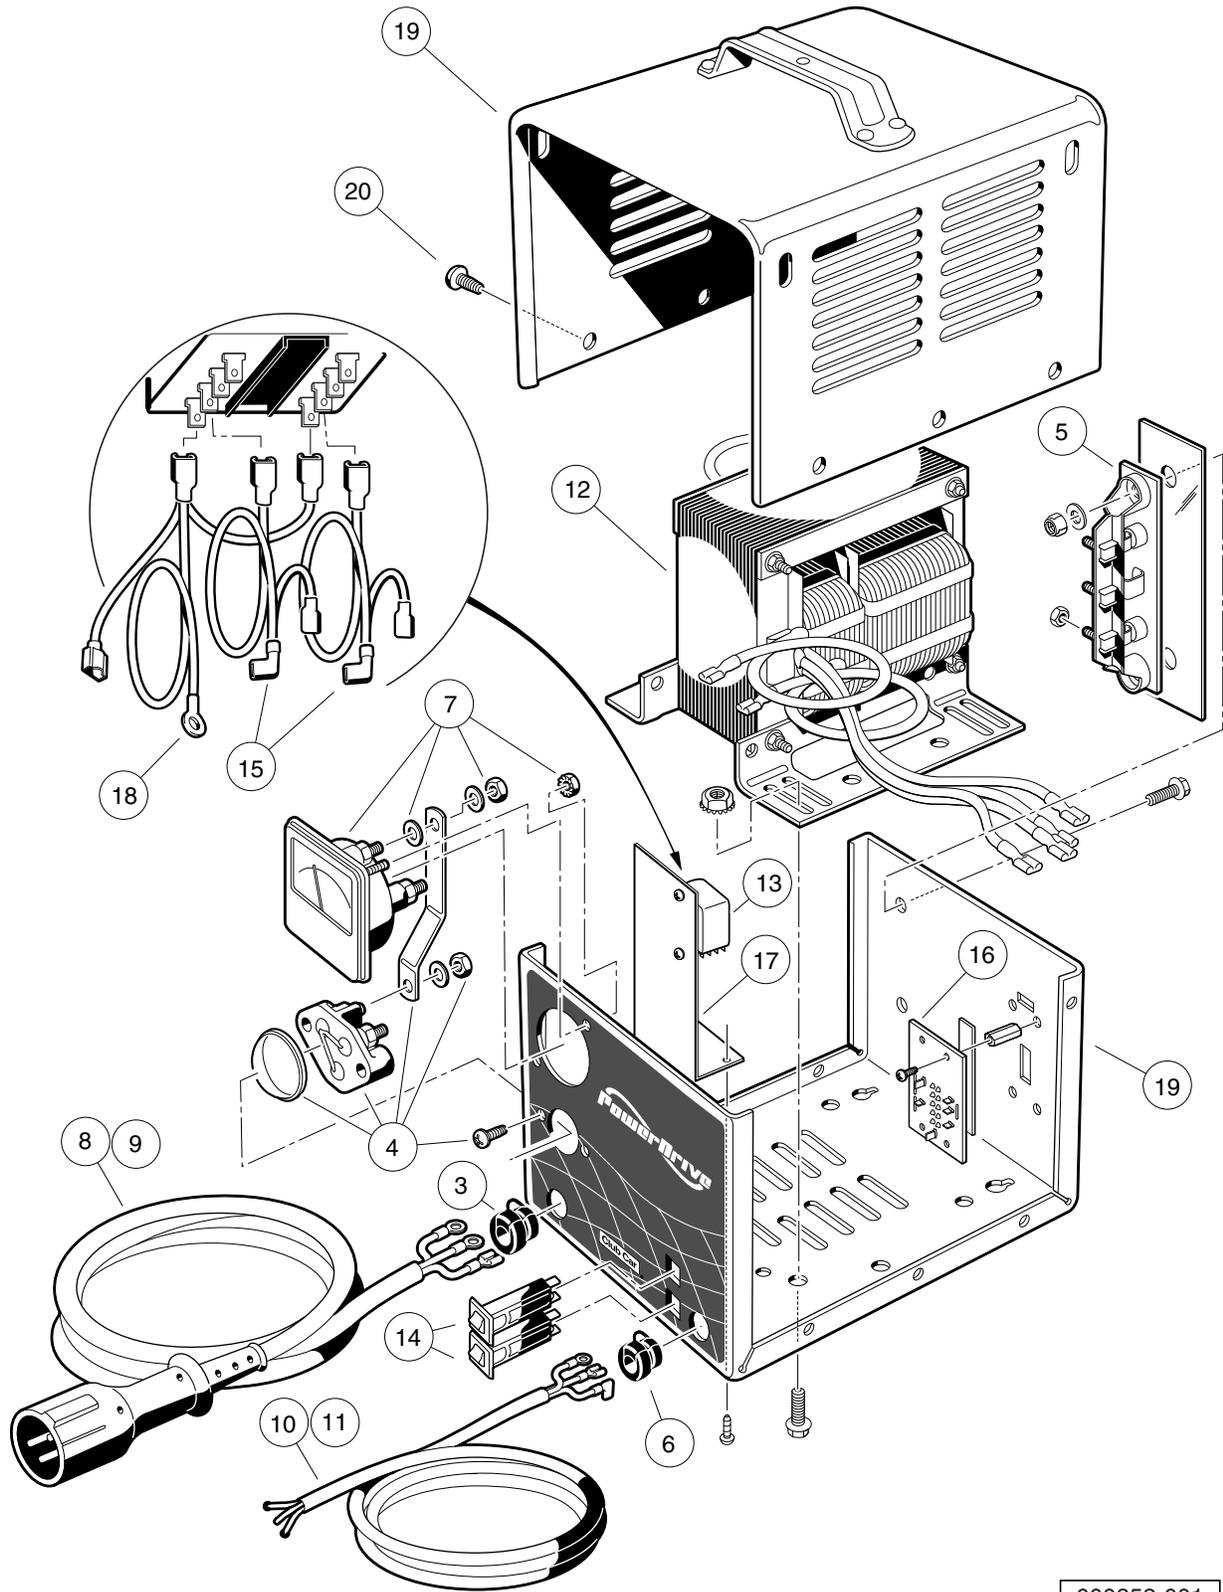


000352-001

POWERDRIVE BATTERY CHARGER (MODEL 18780), EXPORT

16

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101831503	Battery Charger, 48-Volt DC (8.5-ft DC, 6-ft AC)	1
2	101831504	Battery Charger, 48-Volt DC (12-ft DC, 9-ft AC) (includes items 3 through 20)	1
3	<u>1012098</u>	Bushing, DC Cord	1
4	<u>1012101</u>	Fuse Assembly	1
5	<u>1015914</u>	Rectifier with Heatsink Assembly	1
6	<u>1015917</u>	Bushing, AC Cord	1
7	<u>101828501</u>	Ammeter	1
8	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
9	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
10	<u>101831701</u>	Cord, AC, 80-Inch (203 cm), without Plug	1
11	<u>101831702</u>	Cord, AC, 118-Inch (203 cm), without Plug	1
12	101838201	Transformer, Export Battery Charger	1
13	<u>101838301</u>	Relay, Export Charger	1
14	101838401	Circuit Breaker	2
15	101838501	Kit, Wire Assembly	1
16	101838601	Four-Position Switch	1
17	****	Mounting Bracket, Relay	1
18	101914401	Assembly, Voltage Suppressor	1
19	N/A	Case, Charger	1
20	7577	Screw, #10 X 0.50 Phillips Pan-Head	10
<p>**** Special order item available upon request.</p> <p>Note: Level 1 Battery Charger part numbers include one AC and one DC cord. They do not include all of the level 2 cords listed.</p>			

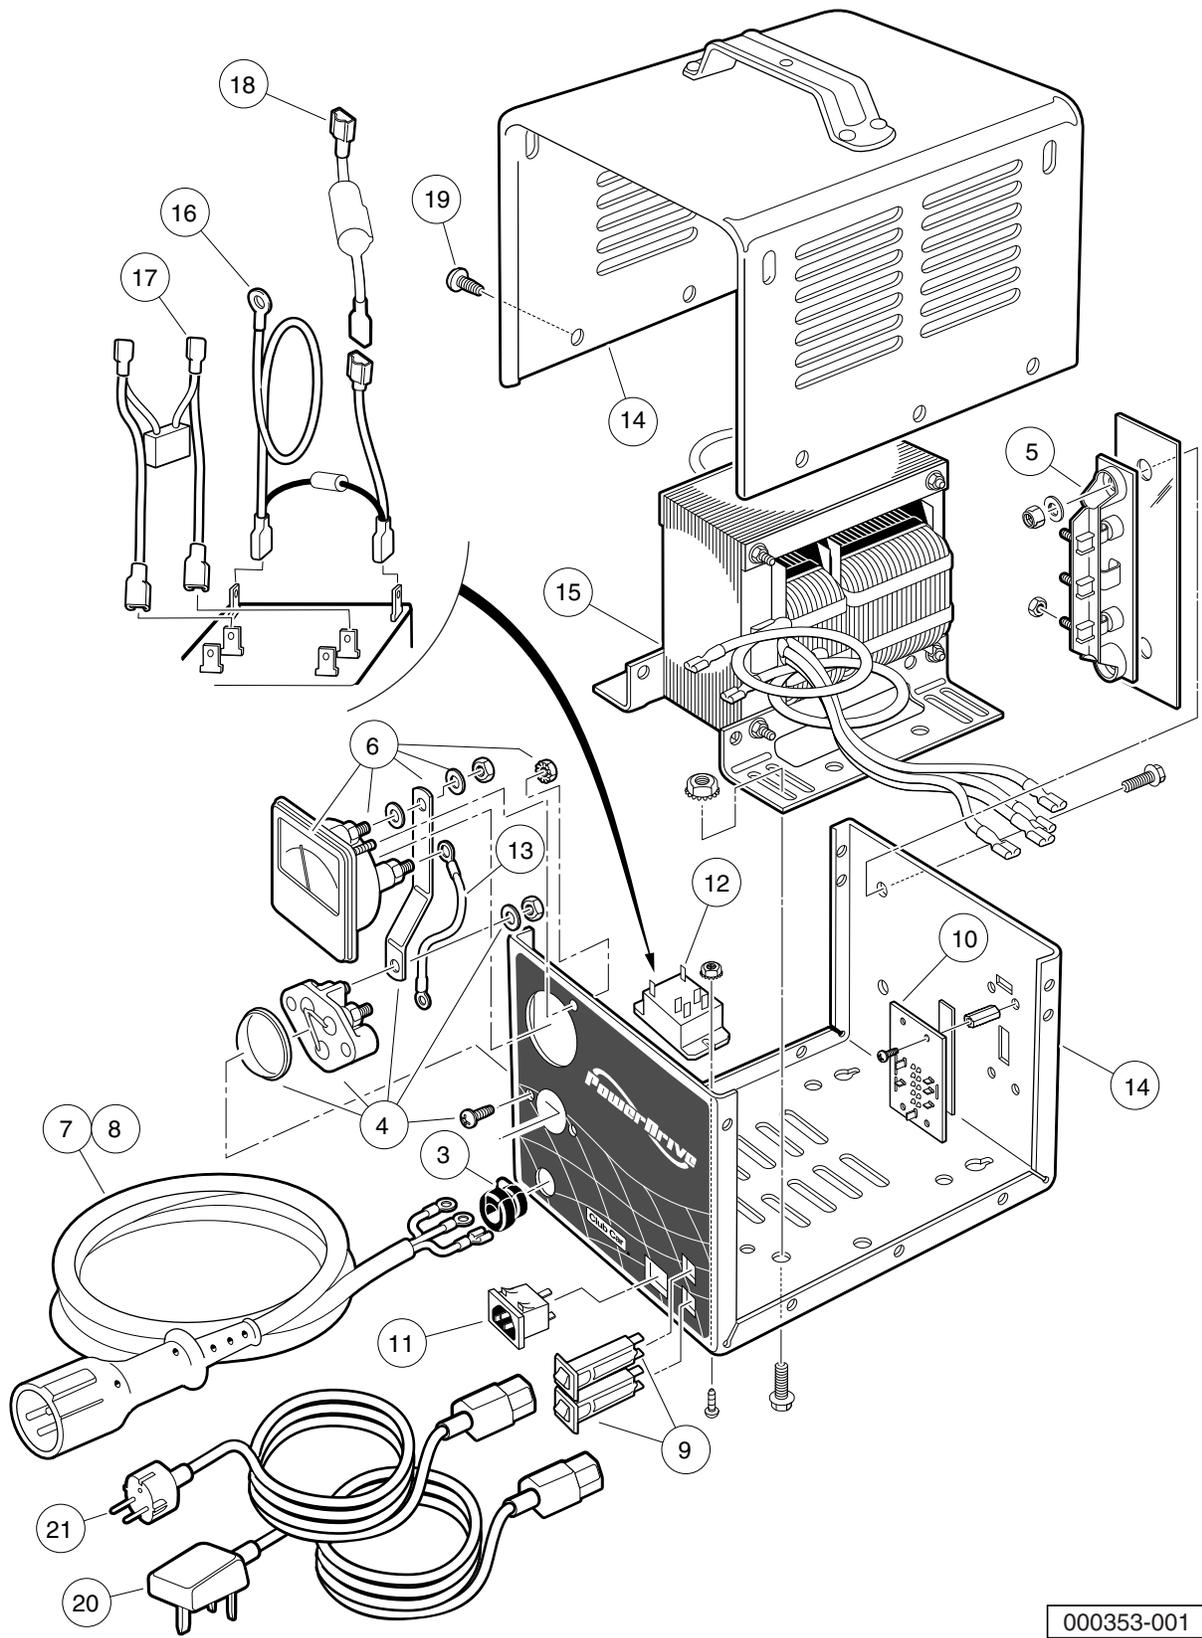


000353-001

POWERDRIVE BATTERY CHARGER (MODEL 20310), EUROPEAN

16

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101956201</u>	Battery Charger, 48-Volt w/ 4-Position Switch (8.5-ft DC)	1
2	<u>101956202</u>	Battery Charger, 48-Volt w/ 4-Pos. Switch (12-ft DC) (includes items 3 through 19)	1
3	<u>1012098</u>	Bushing, DC Cord	1
4	<u>1012101</u>	Fuse Assembly	1
5	<u>1015914</u>	Rectifier with Heatsink Assembly	1
6	<u>101828501</u>	Ammeter	1
7	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
8	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
9	101838401	Circuit Breaker	2
10	101838601	Four-Position Switch	1
11	101973501	Receptacle, AC Cord	1
12	<u>101987501</u>	Relay	1
13	N/A	Wire, Jumper	1
14	N/A	Case, Charger	1
15	****	Transformer, European Battery Charger	1
16	****	Suppressor, AC Voltage	1
17	****	Assembly, Wire	1
18	****	Limiters, Current	1
19	7577	Screw, #10 X 0.50 Phillips Pan-Head	10
20	<u>101958201</u>	Cord, UK, AC, Battery Charger	1
21	101958301	Cord, European AC, Battery Charger	1
		**** Special order item available upon request.	
		Note: Level 1 Battery Charger part numbers include one AC and one DC cord. They do not include all of the level 2 cords listed.	

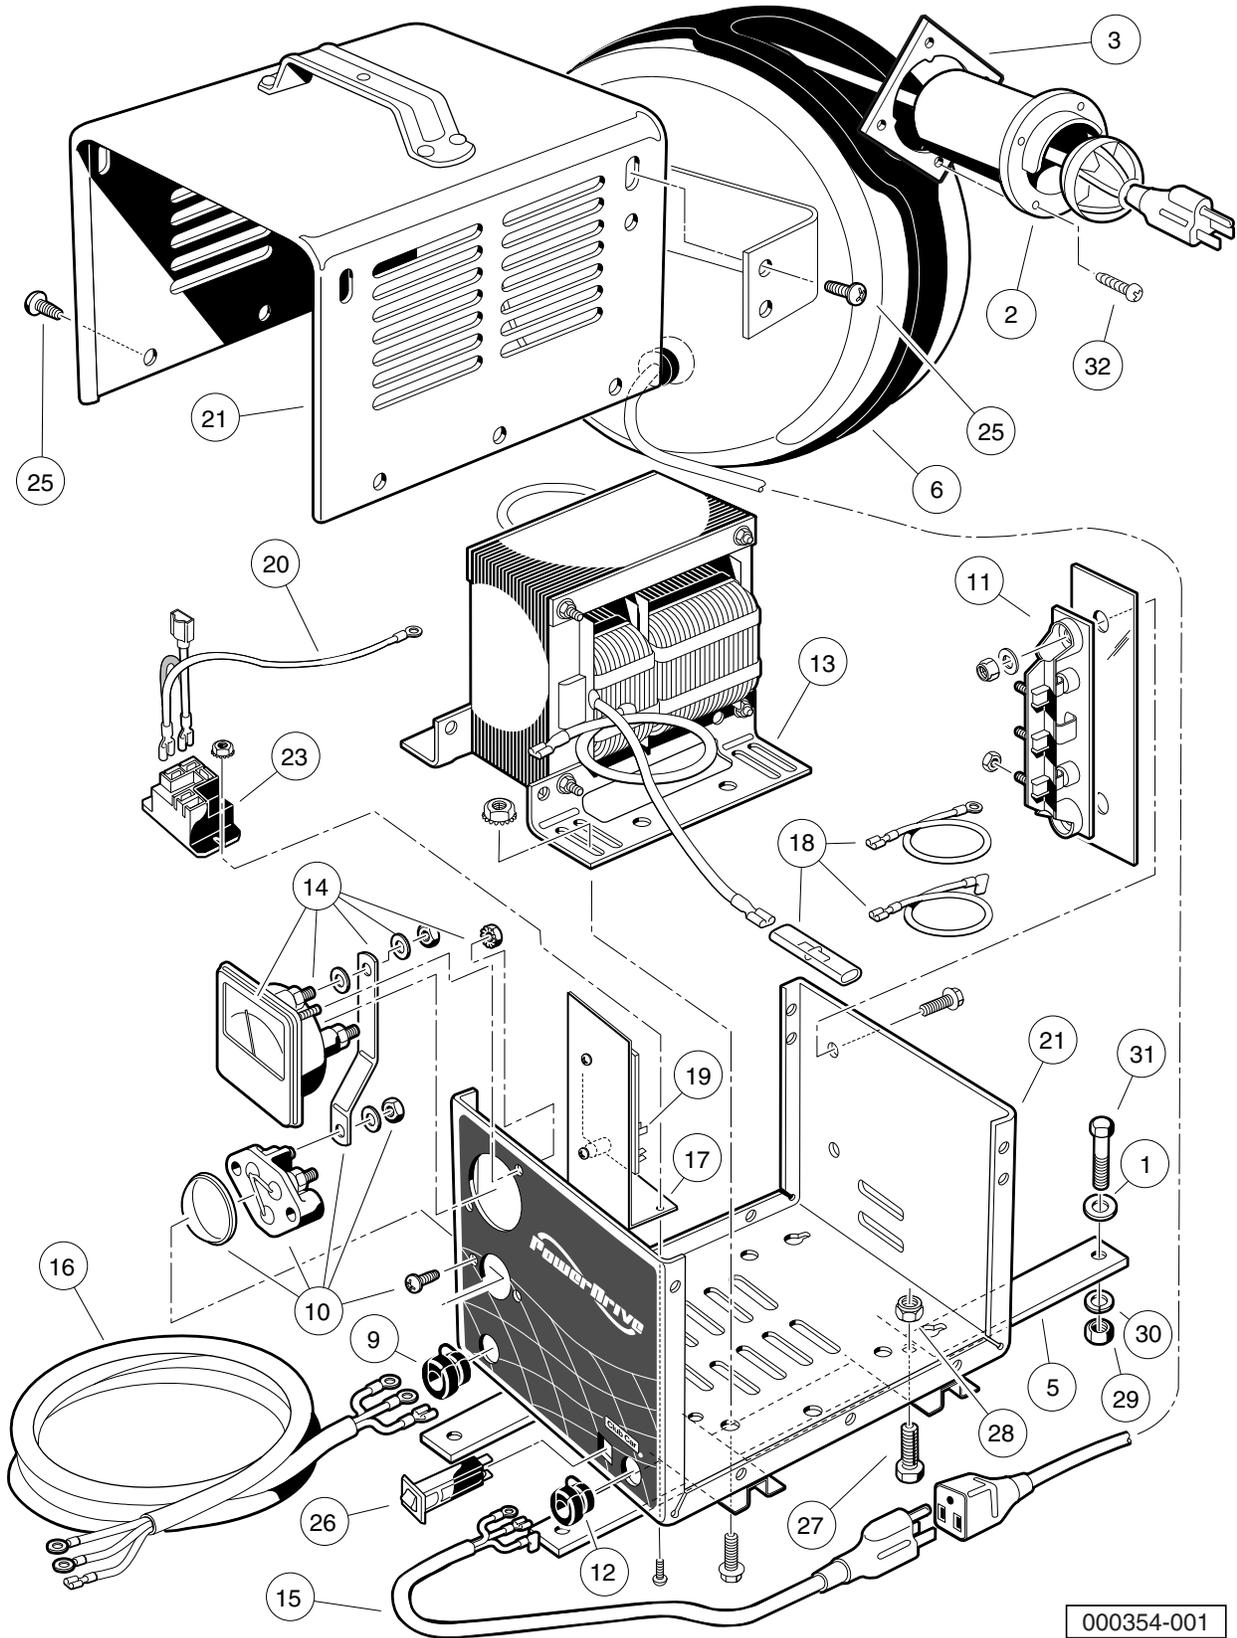


000354-001

ONBOARD POWERDRIVE BATTERY CHARGER (MODEL 17935), DOMESTIC – CARRYALL 6 POWERDRIVE VEHICLES

16

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014306</u>	Washer, 1/4" Type B Flat	4
2	<u>1016673</u>	Housing, Cord Reel	1
3	<u>101801001</u>	Plate, Receptacle Backing	1
4	<u>101814301</u>	Battery Charger and Reel Assembly (includes items 5 through 28)	1
5	<u>1011707</u>	Bracket, Mounting, Battery Charger	2
6	<u>1017187</u>	Retractable Cord Reel	1
7	<u>1017189</u>	Heat Shrink Tube 1.5" X 3"	1
8	<u>101802301</u>	Battery Charger, Onboard, 120-VAC, 48-VDC (includes items 9 through 26)	1
9	<u>1012098</u>	Bushing, DC Cord	1
10	<u>1012101</u>	Fuse Assembly	1
11	<u>1015914</u>	Rectifier with Heatsink Assembly	1
12	<u>1015917</u>	Bushing, AC Cord	1
13	****	Transformer, Battery Charger	1
14	<u>101828501</u>	Ammeter	1
15	<u>101829001</u>	Cord, AC, 22-Inch (56 cm)	1
16	<u>101829101</u>	Cord, DC, 90.5-Inch (230 cm)	1
17	****	Mounting Bracket, Relay	1
18	N/A	Kit, Wire Assembly	1
19	<u>101841901</u>	Control Board	1
20	<u>101914401</u>	Assembly, Voltage Suppressor	1
21	N/A	Case, Charger	1
22	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes items 23 and 24)	1
23	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
24	N/A	Kit, Relay, 48v 30a Instrns	1
25	7577	Screw, #10 X 0.50 Phillips Pan-Head	12
26	<u>CCX8506</u>	Circuit Breaker, 15-Amp/120-Volt	1
27	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
28	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
29	<u>1028</u>	Nut, 1/4-20 Hex	4
30	<u>451</u>	Lockwasher, 1/4 Split	4
31	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	4
32	<u>8796</u>	Screw, #7-19 X 0.75 Pan-Head Type AB	4
		**** Special order item available upon request.	
		Note: Item 7 not shown.	

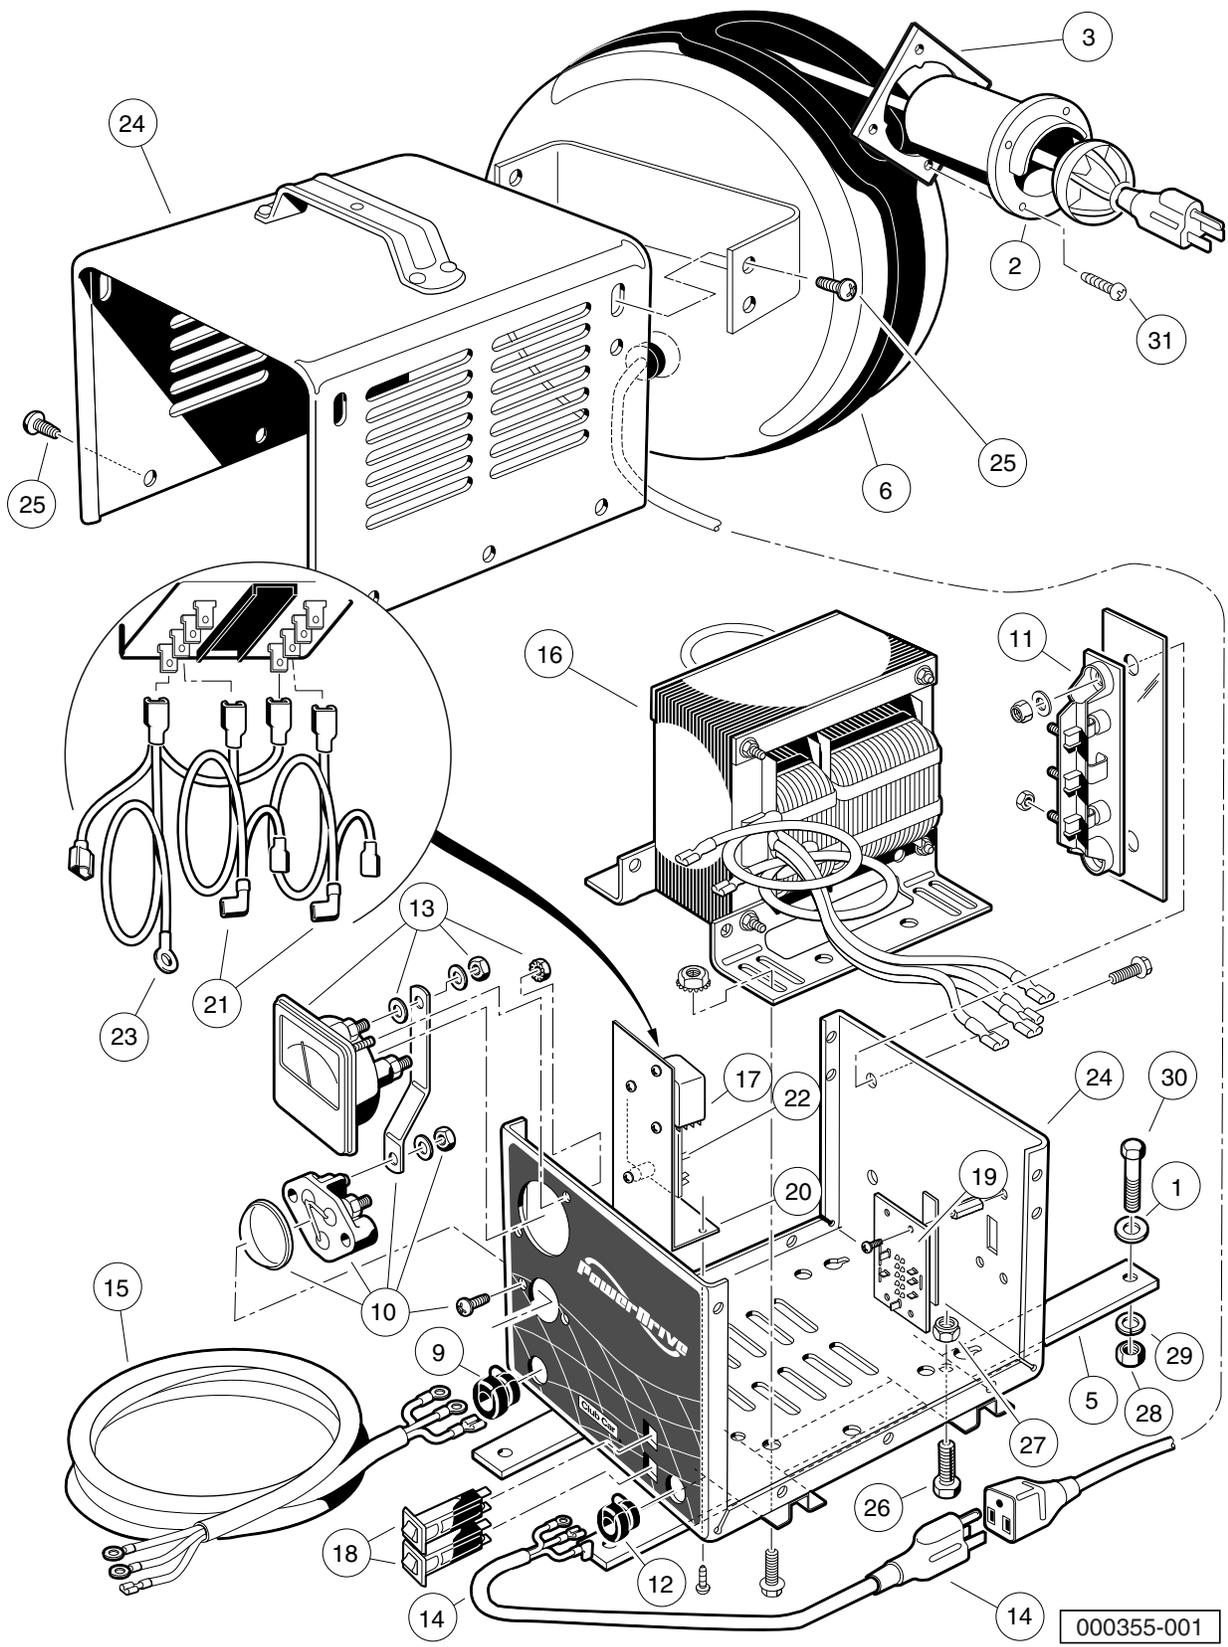

000355-001

ONBOARD POWERDRIVE BATTERY CHARGER (MODEL 17790), EXPORT – CARRYALL 6 POWERDRIVE VEHICLES

16

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014306</u>	Washer, 1/4" Type B Flat	4
2	<u>1016673</u>	Housing, Cord Reel	1
3	<u>101801001</u>	Plate, Receptacle Backing	1
4	<u>101814302</u>	Battery Charger and Reel Assembly (includes items 5 through 27)	1
5	<u>1011707</u>	Bracket, Mounting, Battery Charger	2
6	<u>1017187</u>	Retractable Cord Reel	1
7	<u>1017189</u>	Heat Shrink Tube 1.5" X 3"	1
8	<u>101831601</u>	Battery Charger, Onboard, 48-Volt DC (includes items 9 through 25)	1
9	<u>1012098</u>	Bushing, DC Cord	1
10	<u>1012101</u>	Fuse Assembly	1
11	<u>1015914</u>	Rectifier with Heatsink Assembly	1
12	<u>1015917</u>	Bushing, AC Cord	1
13	<u>101828501</u>	Ammeter	1
14	<u>101829001</u>	Cord, AC, 22-Inch (56 cm)	1
15	<u>101829101</u>	Cord, DC, 90.5-Inch (230 cm)	1
16	101838201	Transformer, Export Battery Charger	1
17	<u>101838301</u>	Relay, Export Charger	1
18	101838401	Circuit Breaker	2
19	101838601	Four-Position Switch	1
20	****	Mounting Bracket, Relay	1
21	****	Kit, Wire Assembly	1
22	<u>101841901</u>	Control Board	1
23	101914401	Assembly, Voltage Suppressor	1
24	N/A	Case, Charger	1
25	7577	Screw, #10 X 0.50 Phillips Pan-Head	12
26	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
27	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
28	<u>1028</u>	Nut, 1/4-20 Hex	4
29	<u>451</u>	Lockwasher, 1/4 Split	4
30	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	4
31	<u>8796</u>	Screw, #7-19 X 0.75 Pan-Head Type AB	4
		**** Special order item available upon request.	
		Note: Item 7 not shown.	

IQ PLUS DOMESTIC BATTERY CHARGER (MODEL 25730)


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102847801</u>	48-V/17-A IQ Plus (9-ft. DC Cord, 6-ft. AC Cord)	1
2	<u>102847802</u>	48-V/17-A IQ Plus (12-ft. DC Cord, 9-ft. AC Cord)	1
3	<u>102847803</u>	48-V/17-A IQ Plus (20-ft. DC Cord, 9-ft. AC Cord) (includes items 4 through 20)	1
4	<u>1012098</u>	Bushing, DC Cord	1
5	<u>1012101</u>	Fuse Assembly	1
6	<u>1015914</u>	Rectifier with Heatsink Assembly	1
7	<u>1015917</u>	Bushing, AC Cord	1
8	<u>101828501</u>	Ammeter	1
9	<u>101828801</u>	Cord, AC, 80-Inch (203 cm)	1
10	<u>101828802</u>	Cord, AC, 108-Inch (274 cm)	1
11	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
12	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
13	<u>101828903</u>	Cord, DC, 250-Inch (635 cm)	1
14	<u>101831101</u>	Wire Assembly Kit	1
15	101914401	Assembly, Voltage Suppressor	1
16	<u>102275401</u>	Relay, 48-VDC	1
17	<u>102838101</u>	Circuit Breaker 250vac-50vdc	1
18	N/A	Transformer, Battery Charger	1
19	N/A	Case, Battery Charger	1
20	7577	Screw, #10 X 0.50 Phillips Pan-Head	10

16

E

16

E

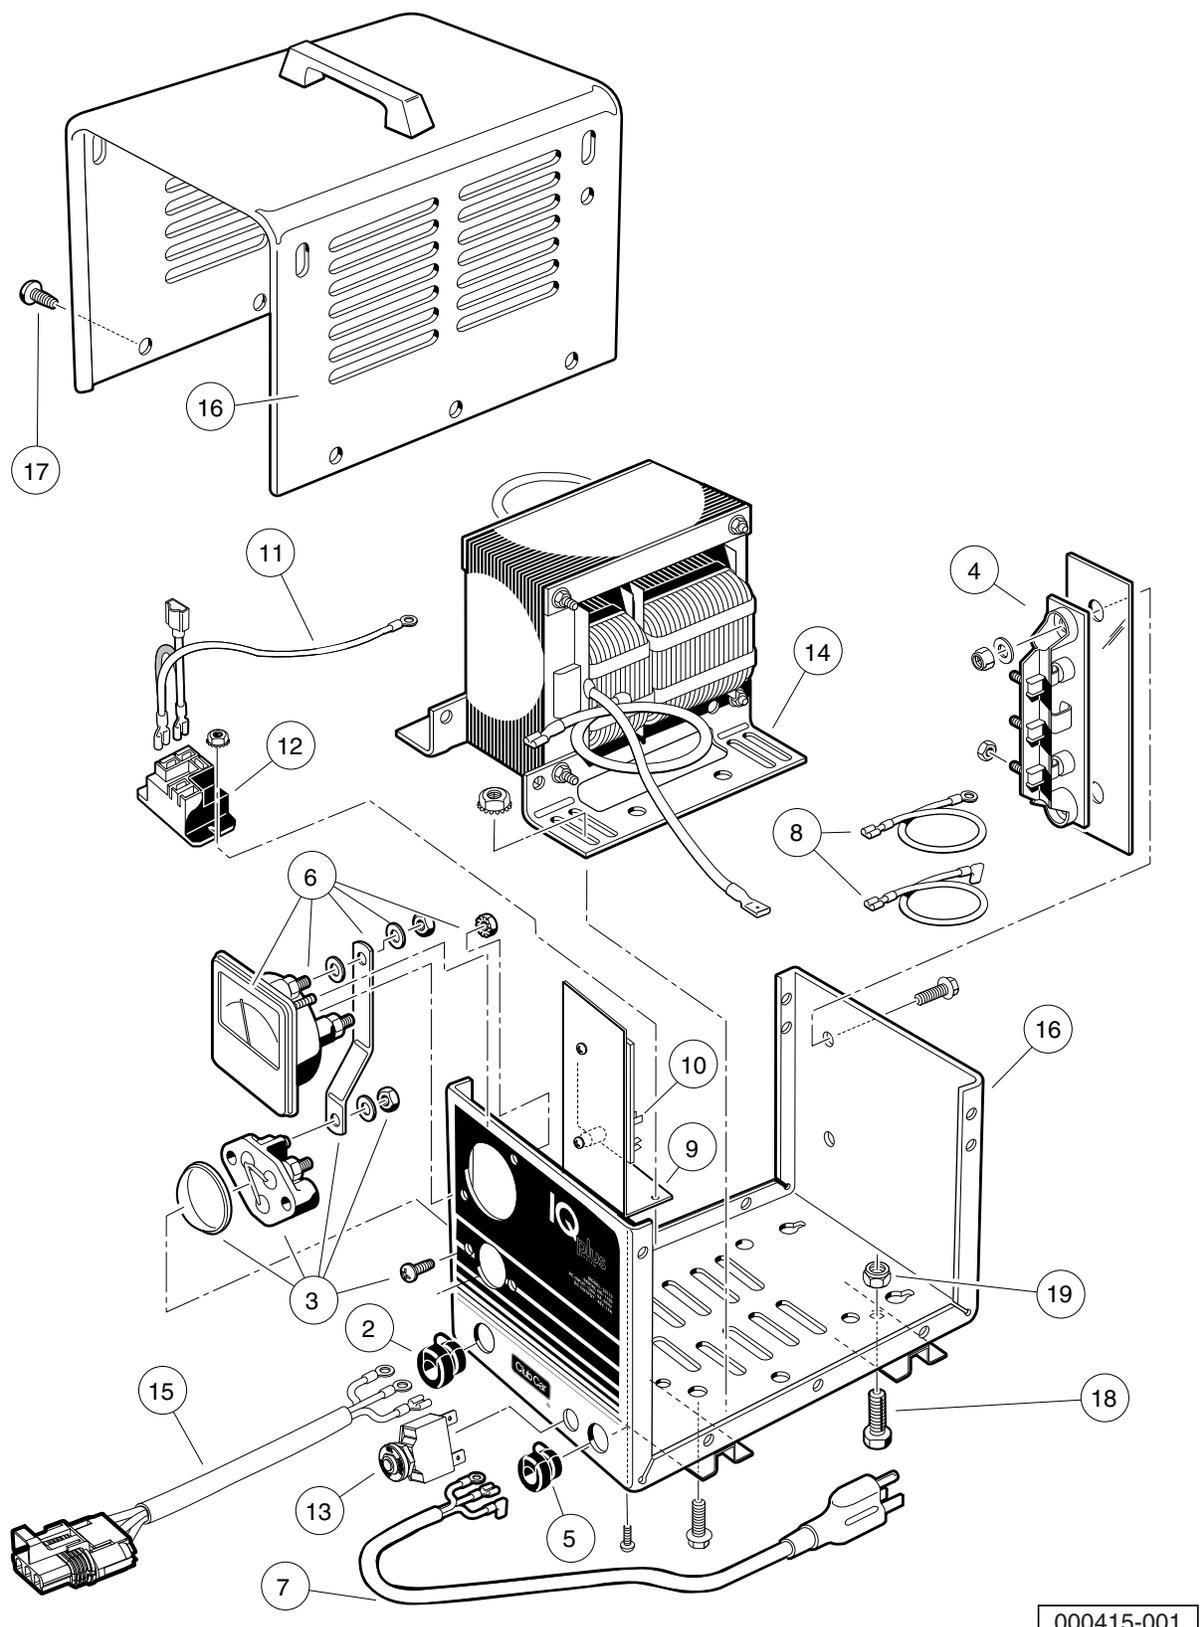

000415-001

IQ PLUS ONBOARD BATTERY CHARGER (MODEL 25260) – IQ PLUS TURF/CARRYALL 2 AND CARRYALL 6 VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102837001</u>	Battery Charger, Onboard, 120-VAC, 48-VDC (includes items 2 through 19)	1
2	<u>1012098</u>	Bushing, DC Cord	1
3	<u>1012101</u>	Fuse Assembly	1
4	<u>1015914</u>	Rectifier with Heatsink Assembly	1
5	<u>1015917</u>	Bushing, AC Cord	1
6	<u>101828501</u>	Ammeter	1
7	<u>101829001</u>	Cord, AC, 22-Inch (56 cm)	1
8	<u>101831101</u>	Wire Assembly Kit	1
9	****	Mounting Bracket, Relay	1
10	<u>101841901</u>	Control Board	1
11	<u>101914401</u>	Assembly, Voltage Suppressor	1
12	<u>102275401</u>	Relay, 48-VDC	1
13	<u>102838101</u>	Circuit Breaker 250vac-50vdc	1
14	N/A	Transformer, Battery Charger	1
15	<u>102940801</u>	Cord, Dc	1
16	N/A	Case, Battery Charger	1
17	<u>7577</u>	Screw, #10 X 0.50 Phillips Pan-Head	12
18	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
19	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
**** Special order item available upon request.			

16

E

16

E

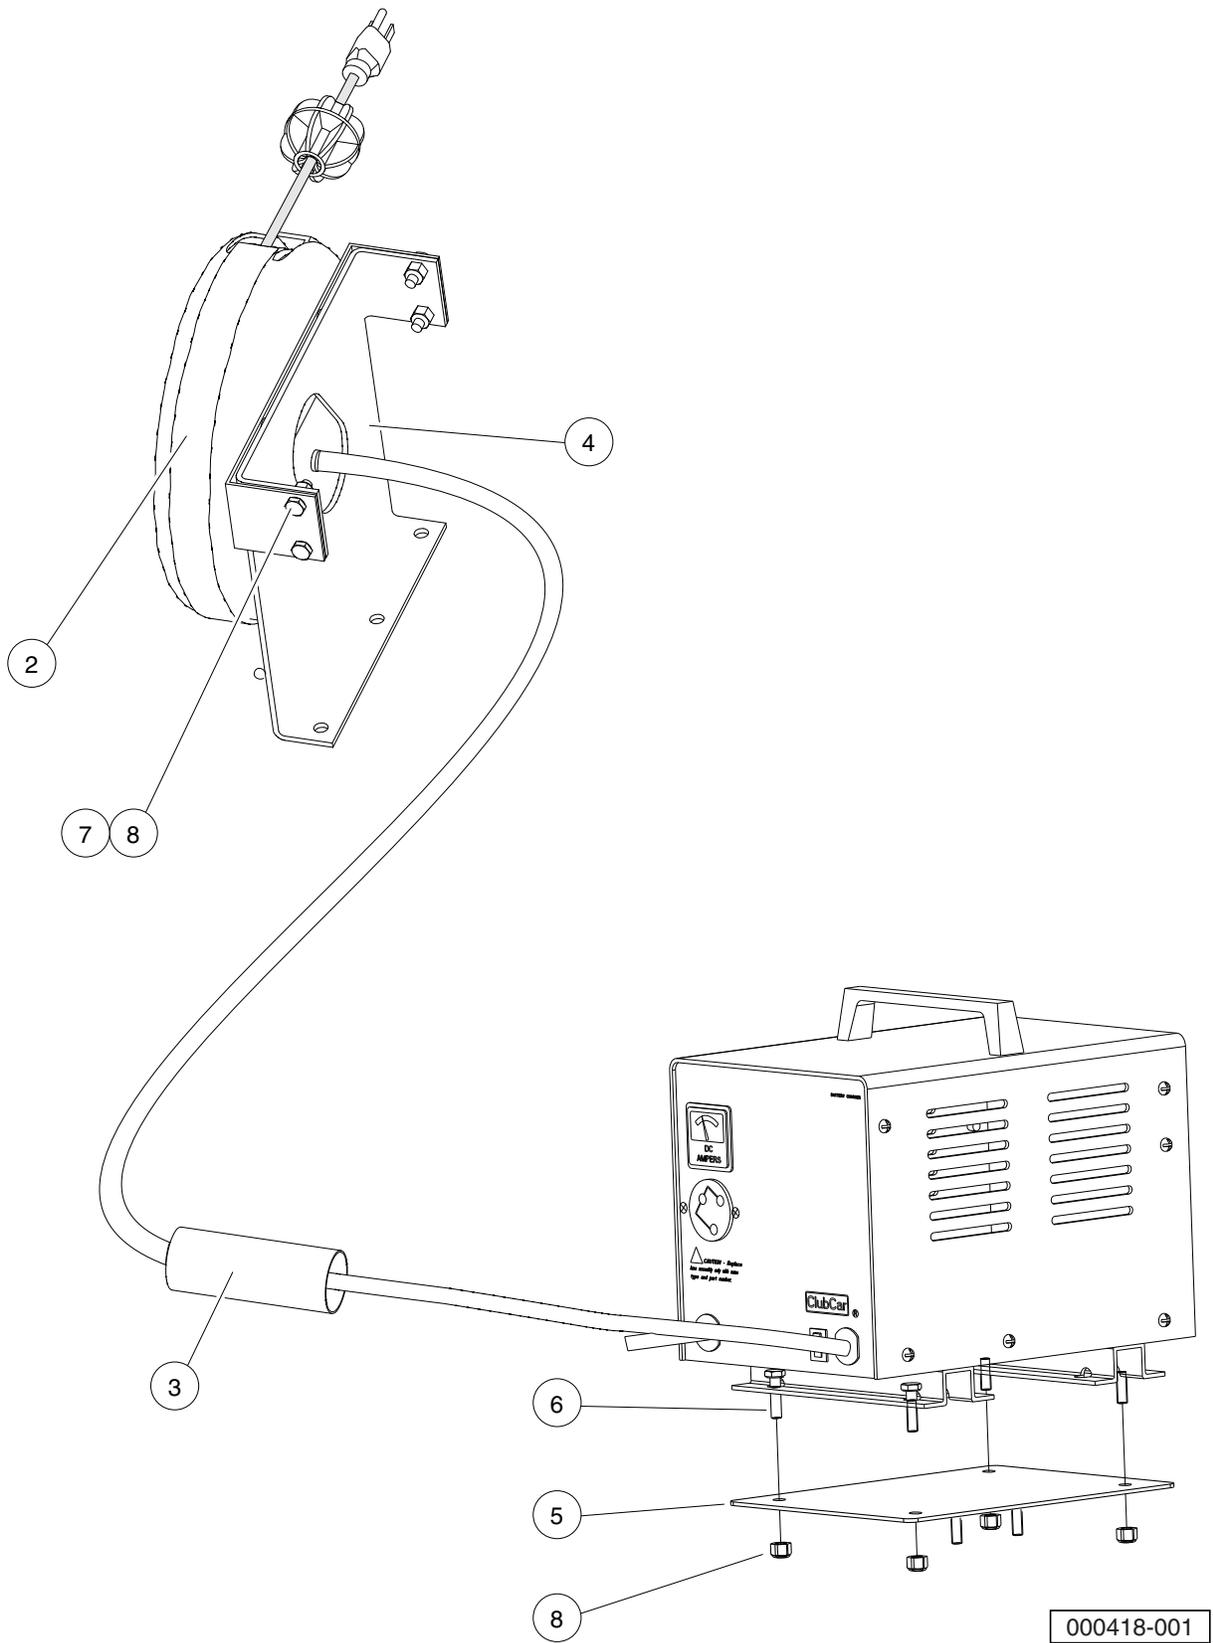


000418-001

ONBOARD CHARGER (MODEL 25260) AC REEL MOUNTING – IQ PLUS CARRYALL 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Installation, Onboard IQ Plus Charger (includes items 2 through 8)	1
2	<u>1017187</u>	Retractable Cord Reel	1
3	<u>1017189</u>	Heat Shrink Tube 1.5" X 3"	1
4	<u>102770701</u>	Bracket, Reel, Tabbed	1
5	<u>102942601</u>	Asm, Plate, Charger Mounting	1
6	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	4
7	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
8	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	8

16

E

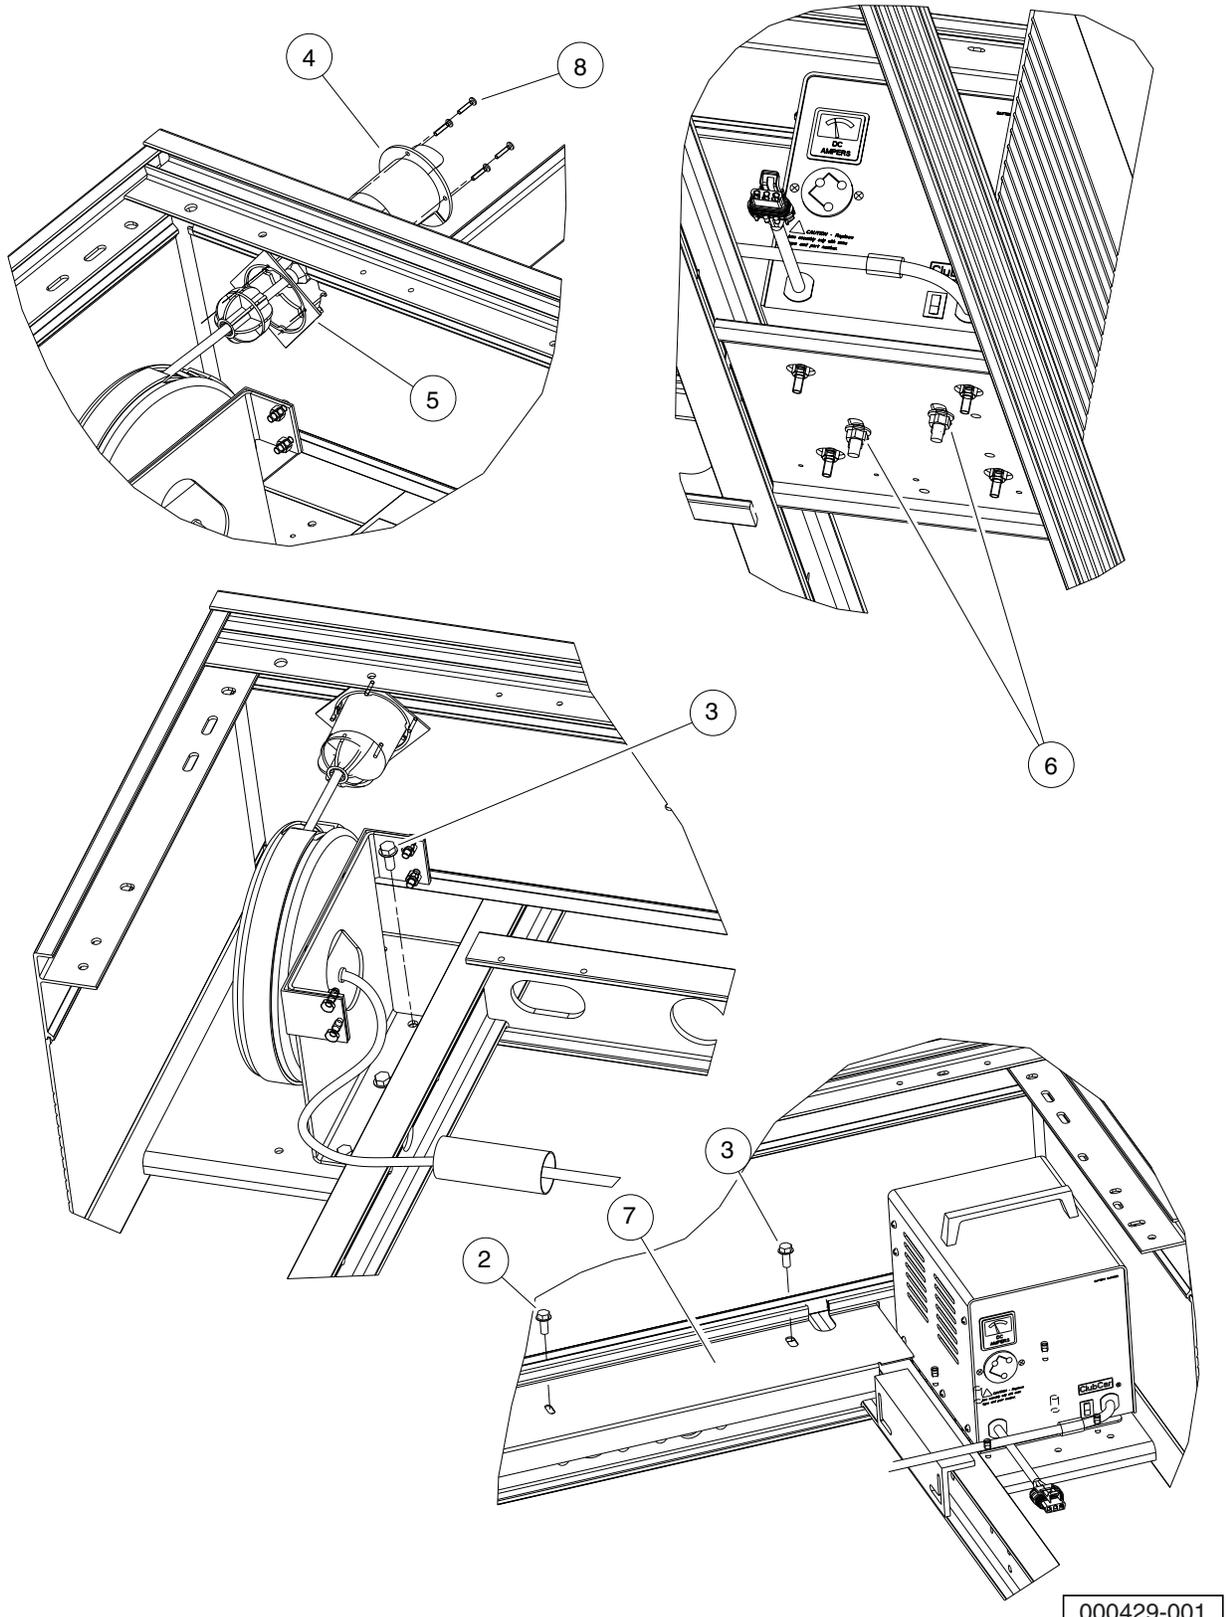

000429-001

ONBOARD CHARGER (MODEL 25260) MOUNTING – CARRYALL 6 IQ PLUS VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Installation, Charger System, HDIQ CA 6 (includes items 2 through 8)	1
2	<u>1014063</u>	Screw, 1/4-20 X 1.00 Hex Head	1
3	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	4
4	<u>1016673</u>	Housing, Cord Reel	1
5	<u>101801001</u>	Plate, Receptacle Backing	1
6	<u>101832901</u>	Nut, M10-1.25 Hex Flange	2
7	<u>103352701</u>	Asm, Shield, Iq Plus Ob Chgr,	1
8	<u>8796</u>	Screw, #7-19 X 0.75 Pan-Head Type AB	4

16

E

16

E

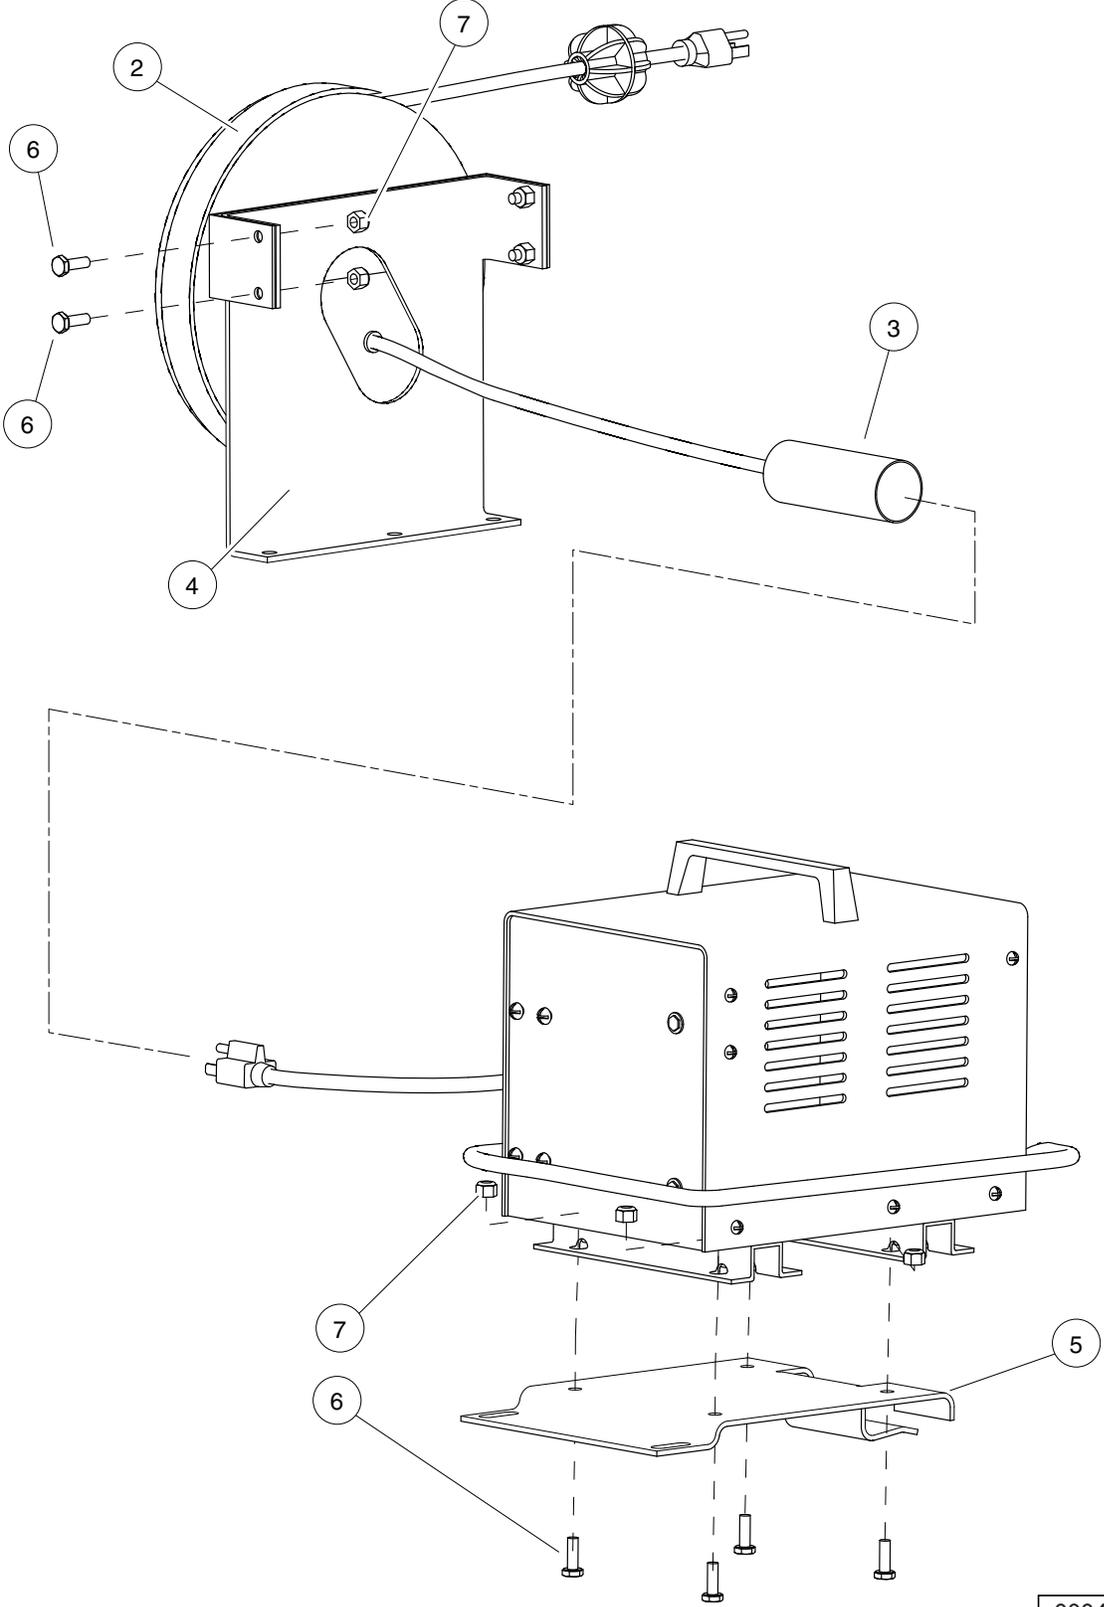

000419-001



ONBOARD CHARGER (MODEL 25260) AND REEL MOUNTING – IQ PLUS TURF/CARRYALL 2

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Onboard Charger Installation, IQ Plus (domestic) (includes items 2 through 7)	1
2	<u>1017187</u>	Retractable Cord Reel	1
3	<u>1017189</u>	Heat Shrink Tube 1.5" X 3"	1
4	<u>102770701</u>	Bracket, Reel, Tabbed	1
5	<u>102844001</u>	Plate, Charger Mtg	1
6	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8
7	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	8


16

E

Turf/Carryall 2 IQ Plus Onboard Charger (Model 25260) Mounting

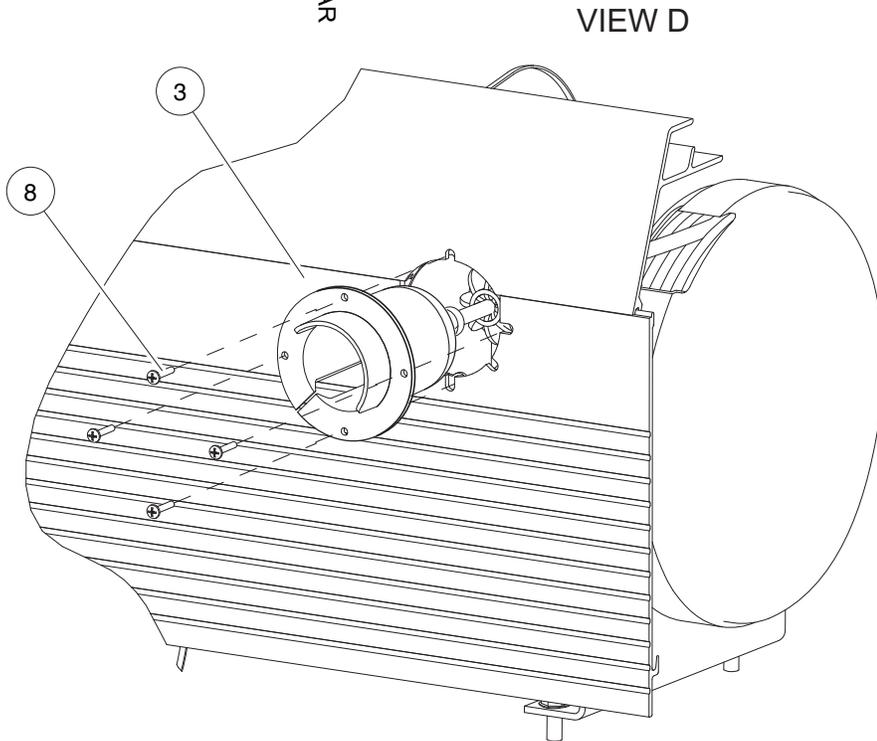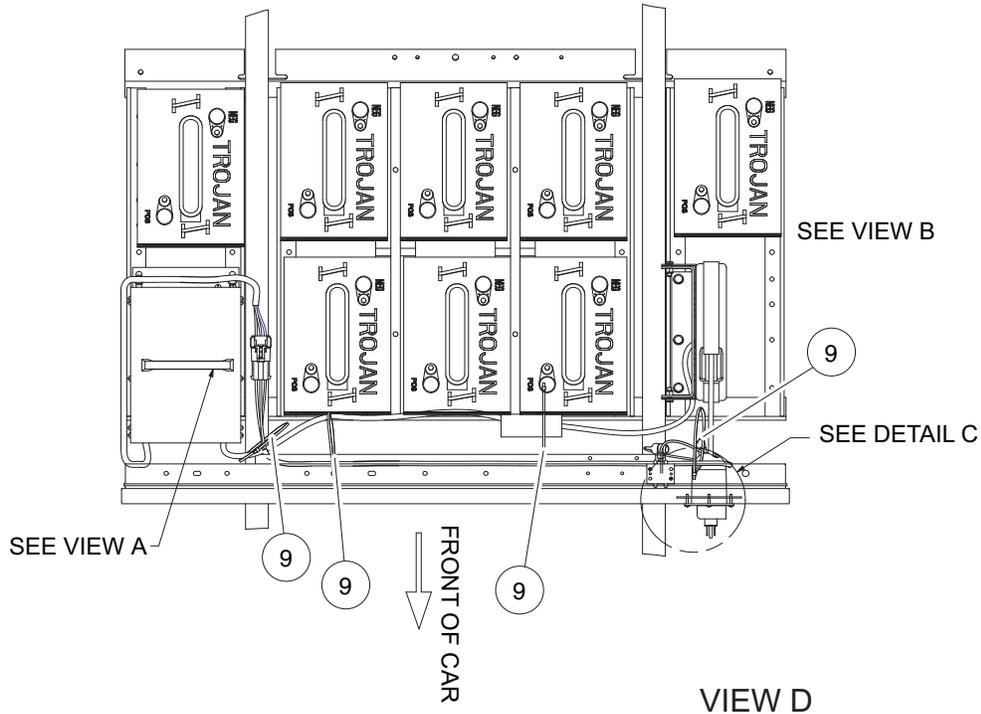

000420-001

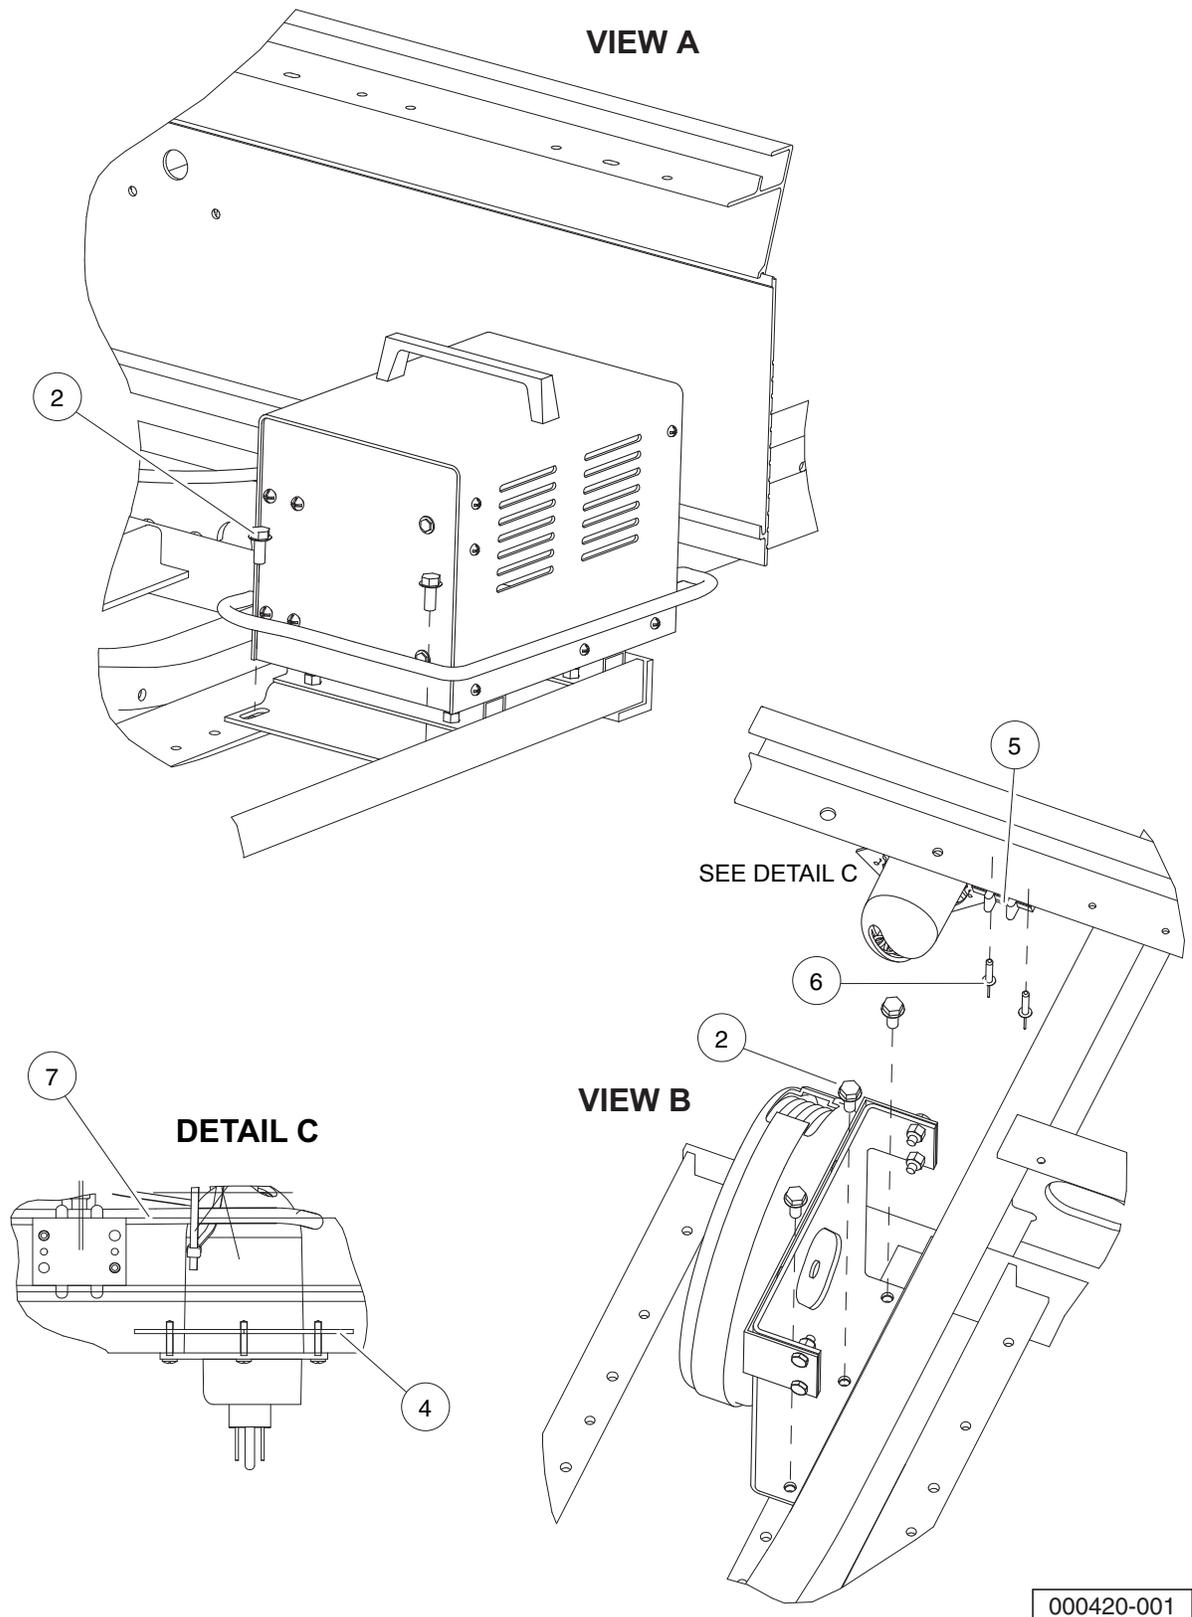

16

E


See previous two pages for illustration.

ONBOARD CHARGER (MODEL 25260) AND REEL MOUNTING – IQ PLUS TURF/CARRYALL 2, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Instl, Charger, Iq Plus (includes items 2 through 9)	1
2	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	5
3	<u>1016673</u>	Housing, Cord Reel	1
4	<u>101801001</u>	Plate, Receptacle Backing	1
5	<u>101966801</u>	Block, Terminal	1
6	<u>101968801</u>	Rivet, 3/16", Pop	2
7	<u>102881401</u>	Charger Harness, IQ Plus, 55"	1
8	<u>8796</u>	Screw, #7-19 X 0.75 Pan-Head Type AB	4
9	<u>8990</u>	Tie Wrap, 8" Nylon	4

16

E

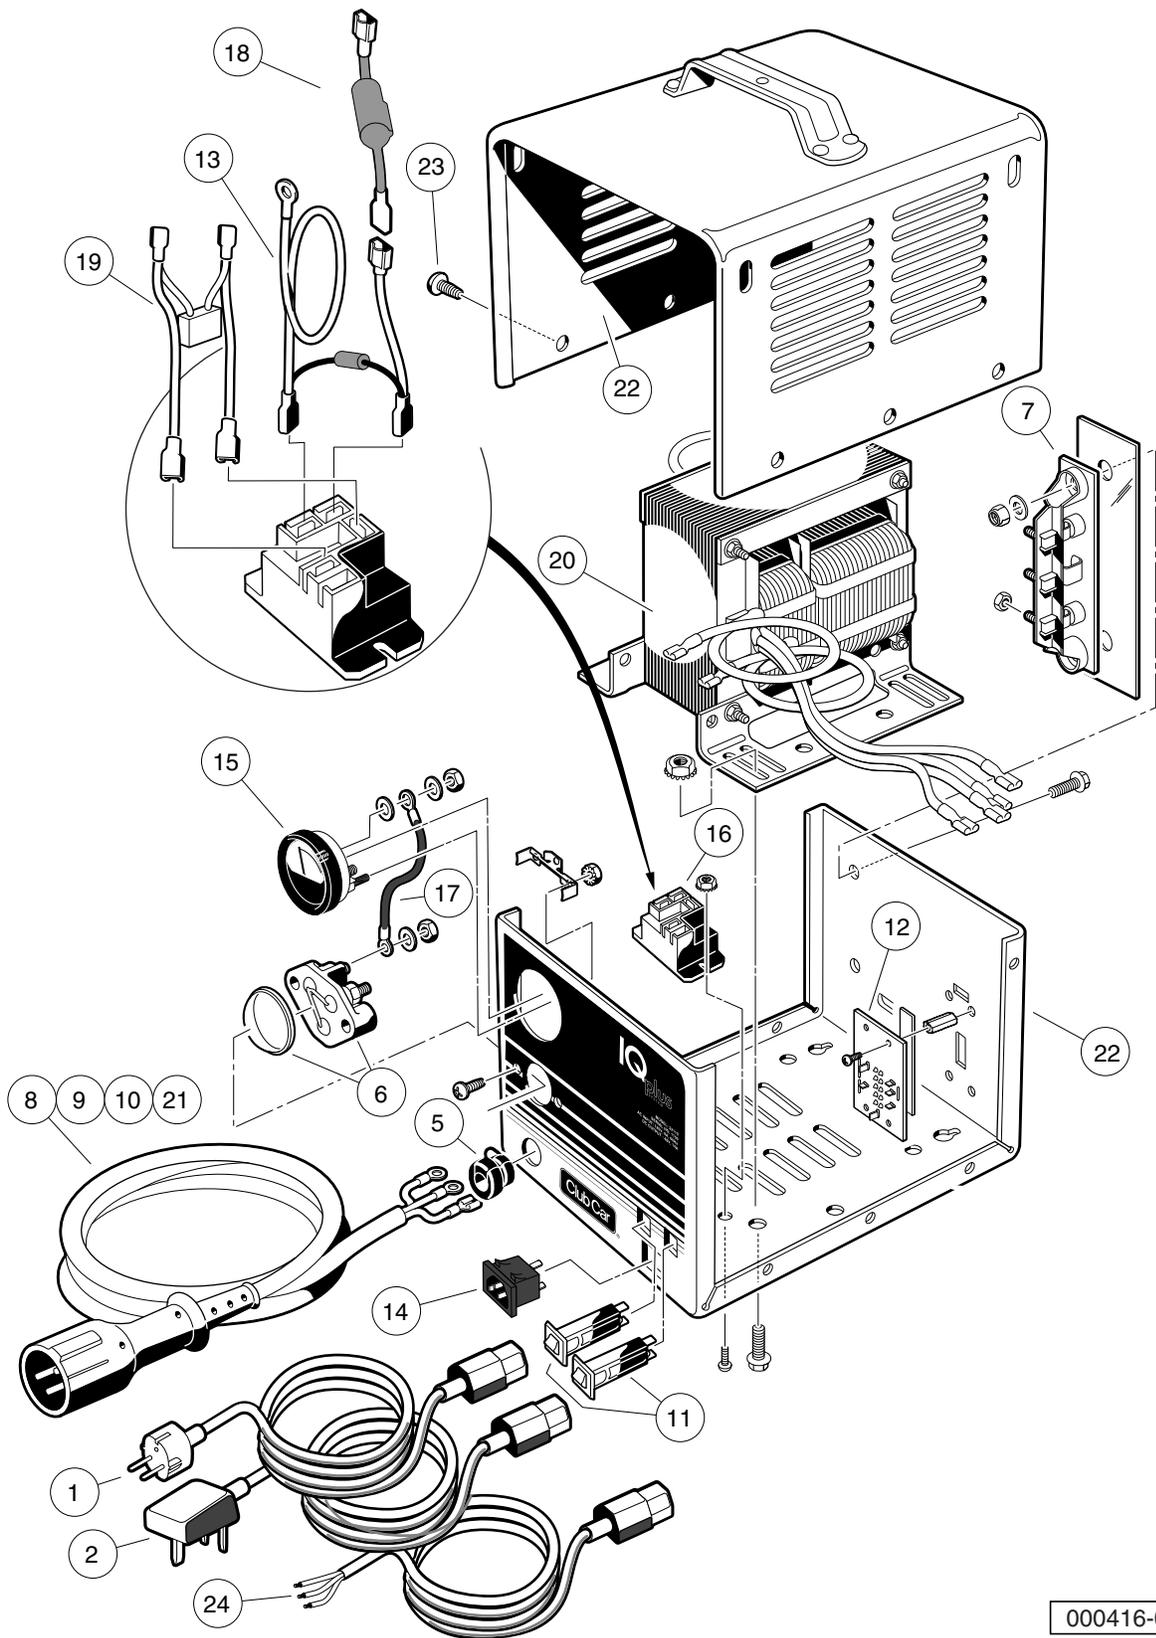


000416-001

IQ PLUS BATTERY CHARGER (MODEL 25880), EXPORT AND EUROPEAN

16

E

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101958201</u>	Cord, UK, AC, Battery Charger	1
2	101958301	Cord, European AC, Battery Charger	1
3	<u>102892901</u>	Charger, Export and European	1
4	<u>102892902</u>	Charger, Export and European (includes items 5 through 23)	1
5	<u>1012098</u>	Bushing, DC Cord	1
6	<u>1012101</u>	Fuse Assembly	1
7	<u>1015914</u>	Rectifier with Heatsink Assembly	1
8	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
9	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
10	<u>101828903</u>	Cord, DC, 250-Inch (635 cm)	1
11	101838401	Circuit Breaker	2
12	101838601	Four-Position Switch	1
13	101914401	Assembly, Voltage Suppressor	1
14	101973501	Receptacle, AC Cord	1
15	101976601	Ammeter with Mounting Bracket	1
16	<u>102275401</u>	Relay, 48-VDC	1
17	N/A	Wire, Jumper	1
18	****	Limiters, Current	1
19	****	Wire Assembly, Battery Charger	1
20	****	Transformer, Battery Charger	1
21	<u>102940801</u>	Cord, Dc	1
22	N/A	Case, Battery Charger	1
23	7577	Screw, #10 X 0.50 Phillips Pan-Head	10
24	<u>102939501</u>	Cord, European AC, Battery Charger	1
		**** Special order item available upon request.	

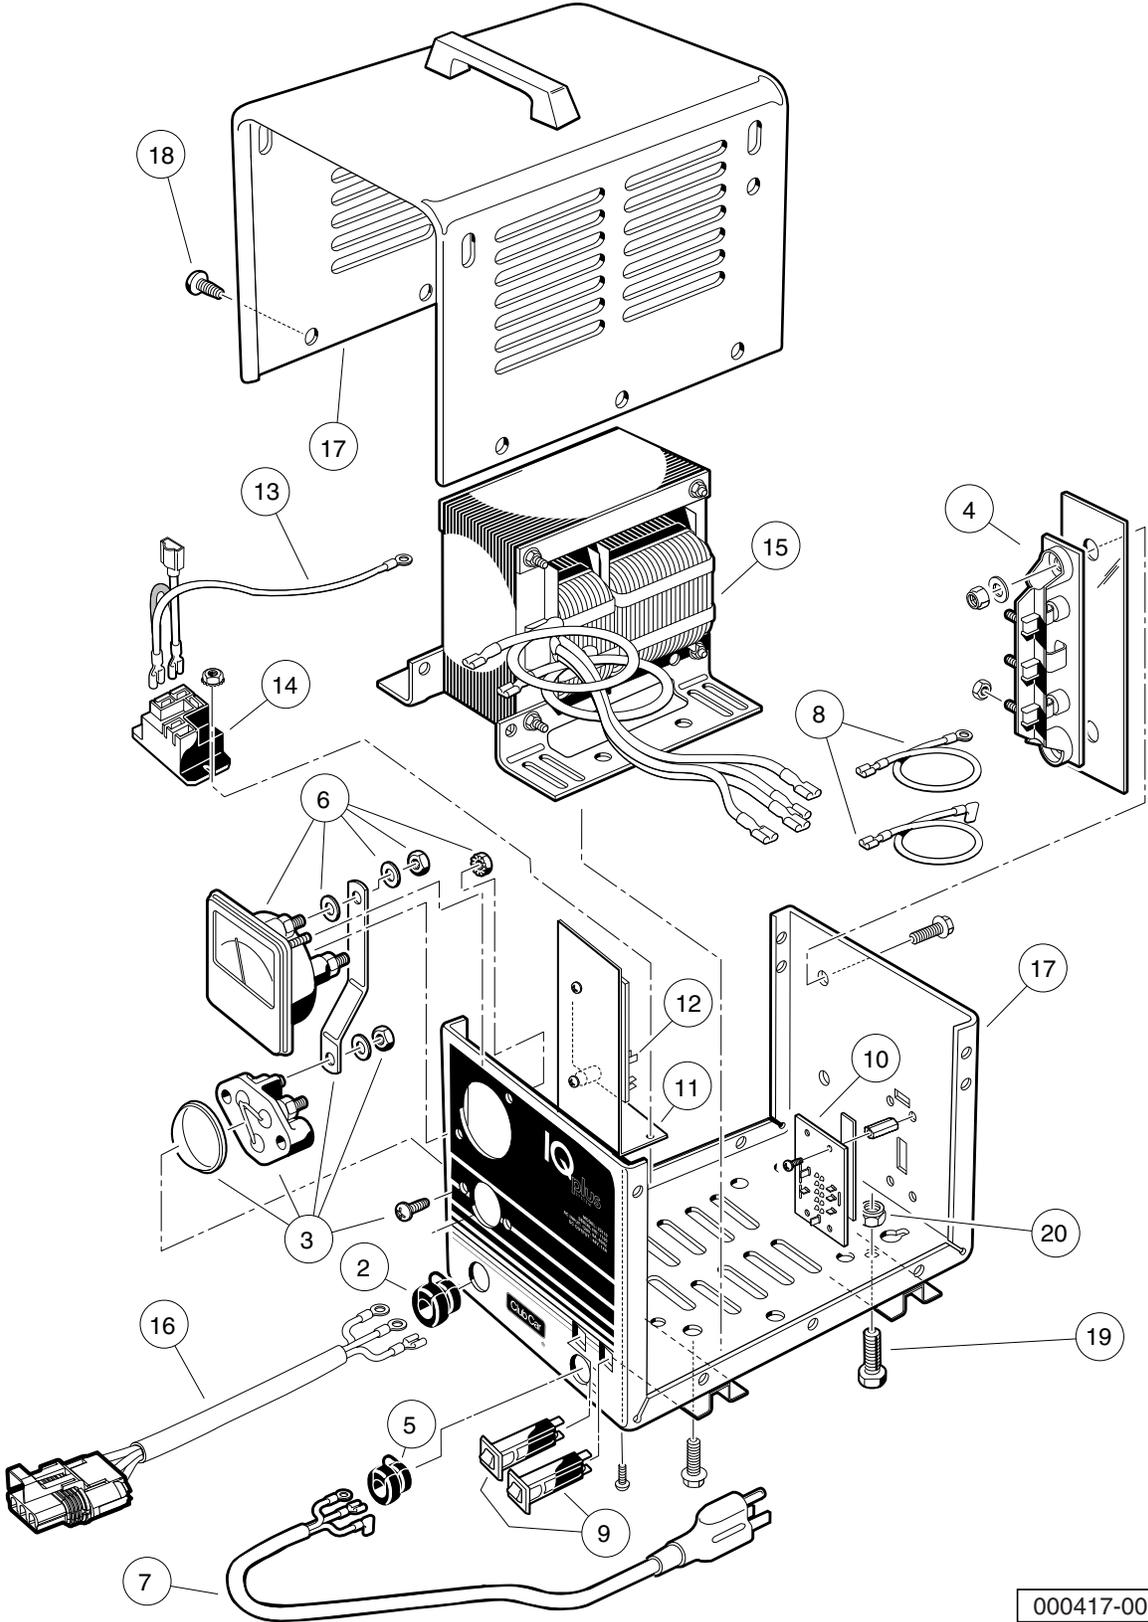

000417-001

IQ PLUS ONBOARD BATTERY CHARGER (MODEL 25660), EXPORT


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102893001	Battery Charger, Onboard, International, IQ Plus (includes items 2 through 20)	1
2	<u>1012098</u>	Bushing, DC Cord	1
3	<u>1012101</u>	Fuse Assembly	1
4	<u>1015914</u>	Rectifier with Heatsink Assembly	1
5	<u>1015917</u>	Bushing, AC Cord	1
6	<u>101828501</u>	Ammeter	1
7	<u>101829001</u>	Cord, AC, 22-Inch (56 cm)	1
8	<u>101831101</u>	Wire Assembly Kit	1
9	101838401	Circuit Breaker	2
10	101838601	Four-Position Switch	1
11	****	Mounting Bracket, Relay	1
12	<u>101841901</u>	Control Board	1
13	101914401	Assembly, Voltage Suppressor	1
14	<u>102275401</u>	Relay, 48-VDC	1
15	****	Transformer, Battery Charger	1
16	<u>102940801</u>	Cord, Dc	1
17	N/A	Case, Battery Charger	1
18	7577	Screw, #10 X 0.50 Phillips Pan-Head	12
19	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
20	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
		**** Special order item available upon request.	

16

E

16

E

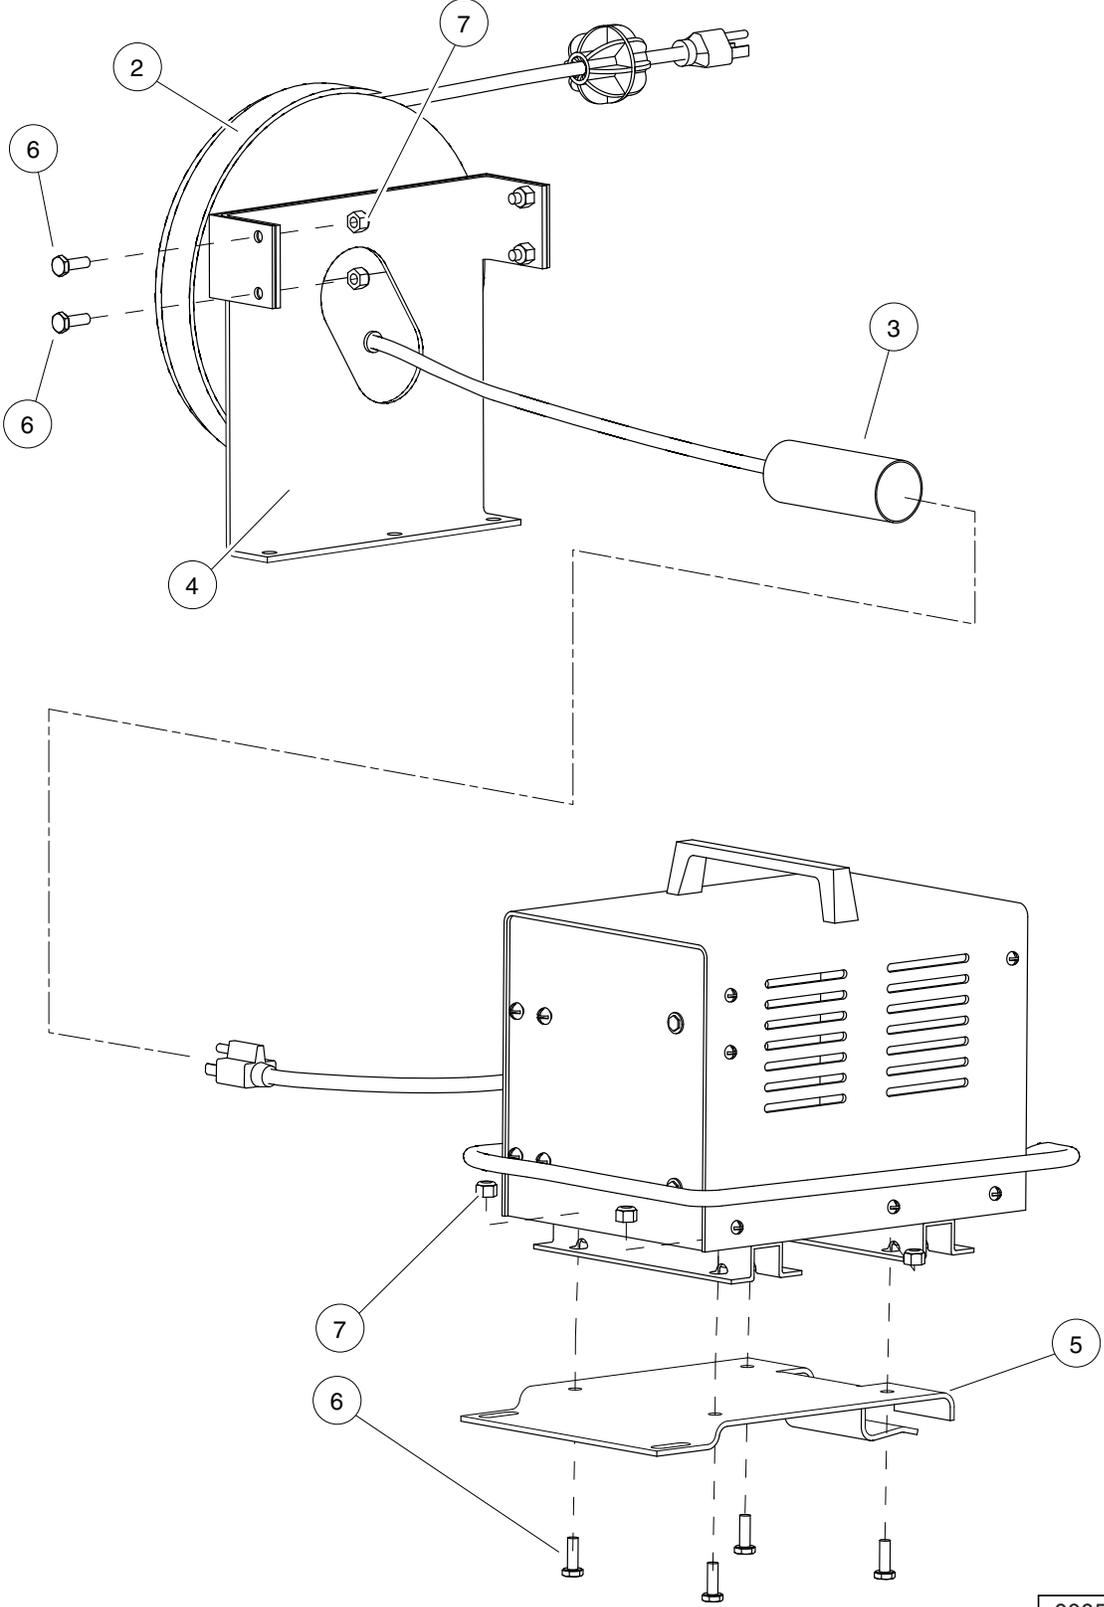

000571-001


ONBOARD CHARGER (MODEL 25660) AND REEL MOUNTING – IQ PLUS TURF/CARRYALL 2

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Onboard Charger Installation, IQ Plus (export) (includes items 2 through 7)	1
2	<u>1017187</u>	Retractable Cord Reel	1
3	<u>1017189</u>	Heat Shrink Tube 1.5" X 3"	1
4	<u>102770701</u>	Bracket, Reel, Tabbed	1
5	<u>102844002</u>	Asm, Charger Plate, Intl	1
6	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8
7	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	8


16

E


Turf/Carryall 2 IQ Plus Onboard Charger (Model 25660) Mounting

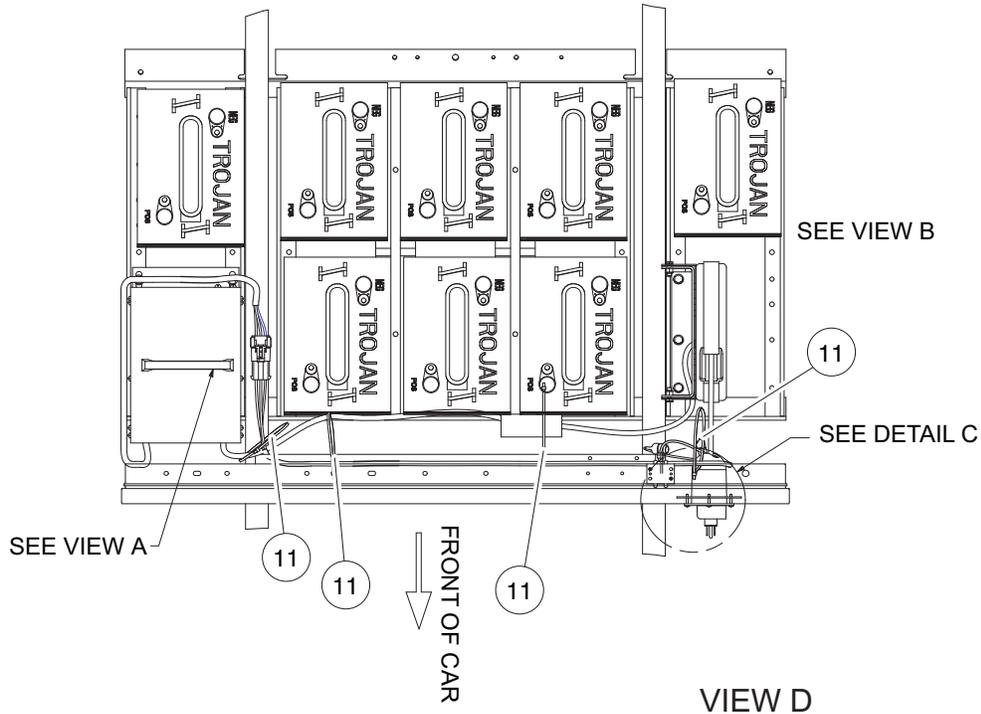

VIEW D

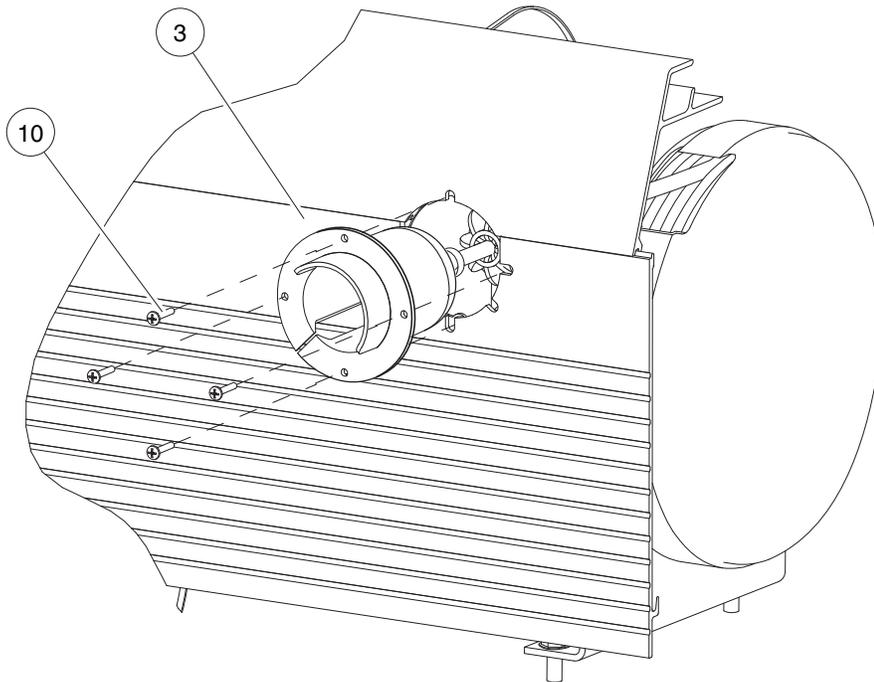

000572-001

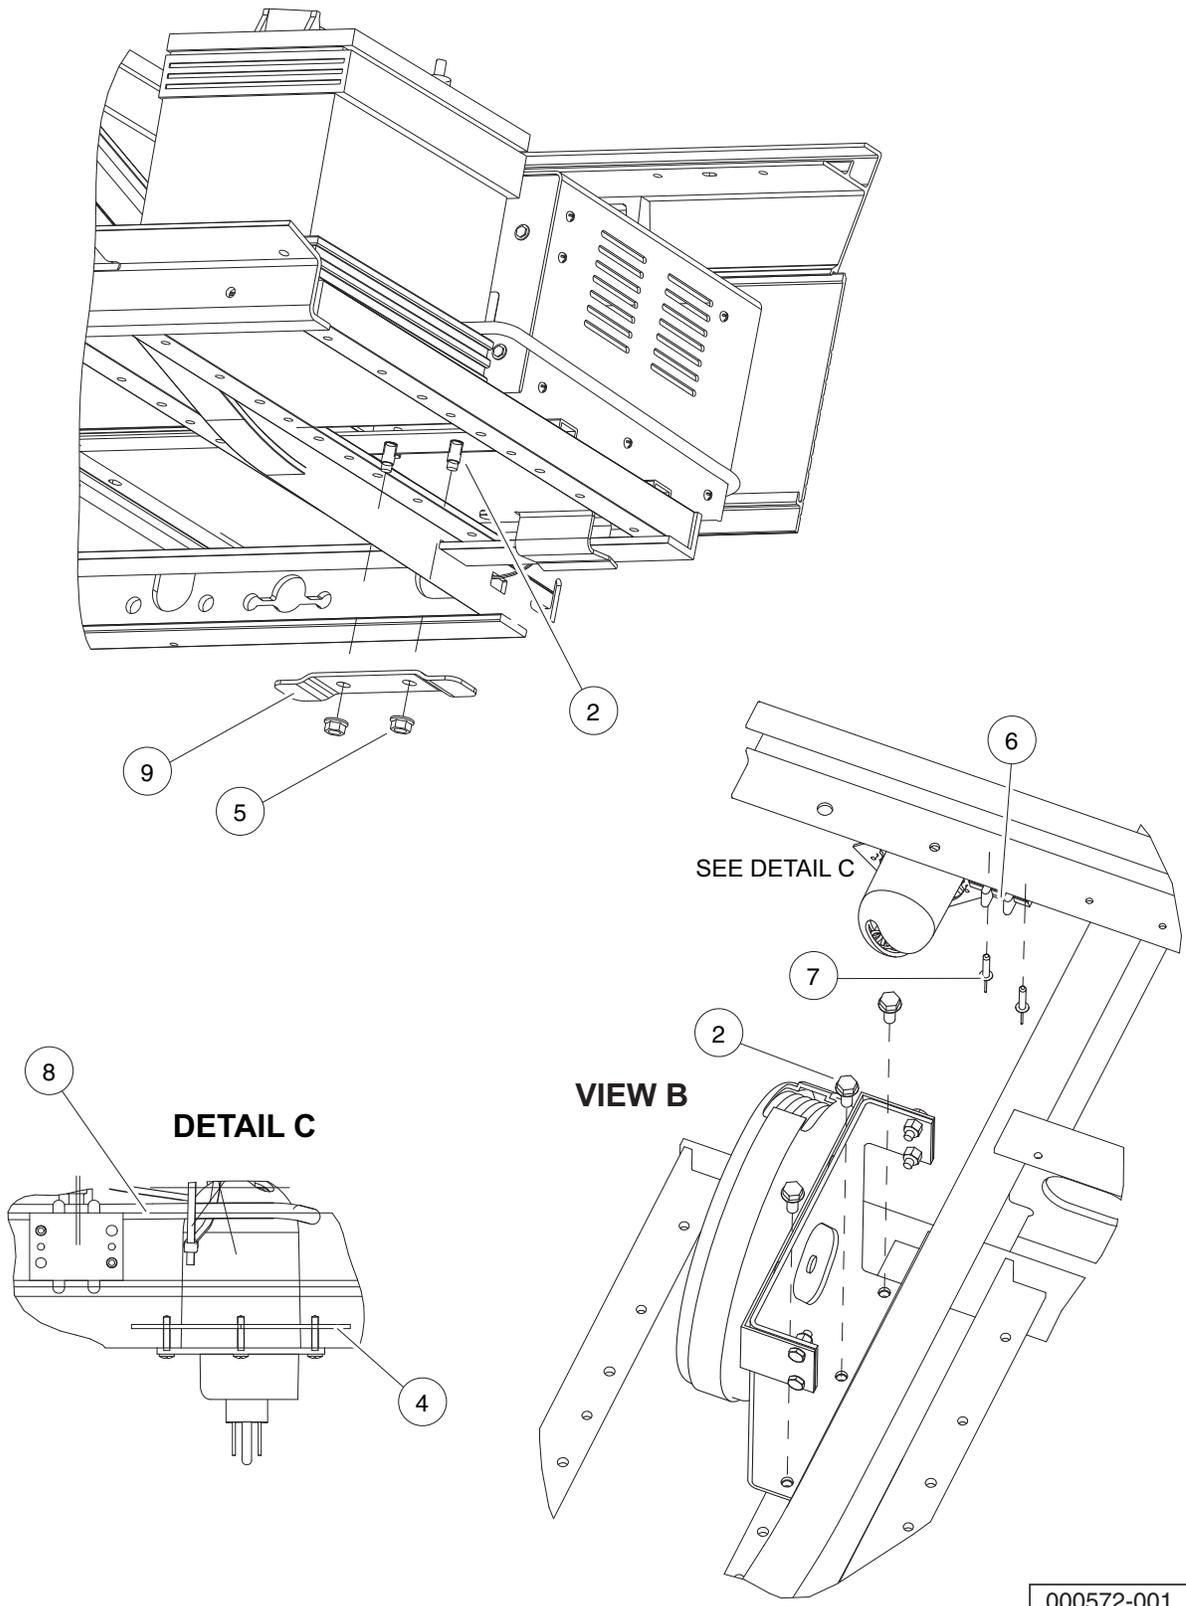

16

E

See previous two pages for illustration.

ONBOARD CHARGER (MODEL 25660) AND REEL MOUNTING – IQ PLUS TURF/CARRYALL 2, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Instl, Charger, Iq Plus, Intl (includes items 2 through 11)	1
2	<u>1014288</u>	Screw, 5/16-18 X 0.75 Thread-Forming	3
3	<u>1016673</u>	Housing, Cord Reel	1
4	<u>101801001</u>	Plate, Receptacle Backing	1
5	<u>101832901</u>	Nut, M10-1.25 Hex Flange	2
6	<u>101966801</u>	Block, Terminal	1
7	<u>101968801</u>	Rivet, 3/16", Pop	2
8	<u>102881401</u>	Charger Harness, IQ Plus, 55"	1
9	N/A	Retainer, Charger Asm	1
10	<u>8796</u>	Screw, #7-19 X 0.75 Pan-Head Type AB	4
11	<u>8990</u>	Tie Wrap, 8" Nylon	4

16

E

16

E

MAINTENANCE AND SERVICE TOOLS


17

G

E

D

17
G
E
D

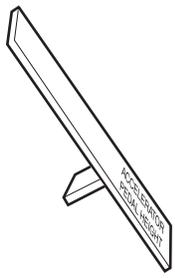


1



2



3

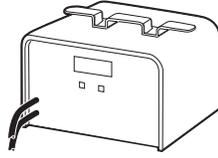


4




5



6

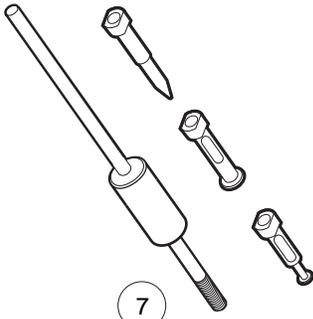


7

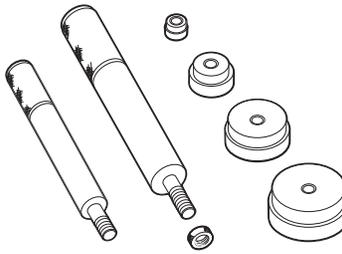

8




9

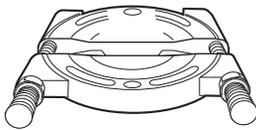


10




11

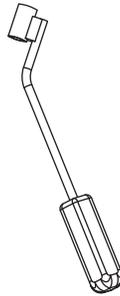


12

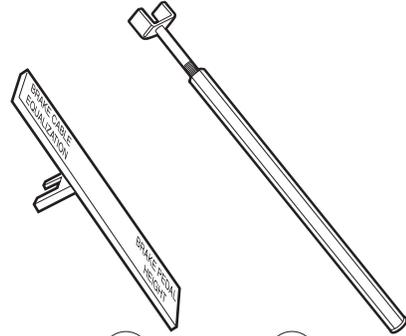


14 15
13

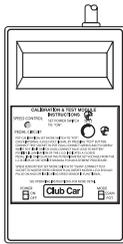


16



17



18

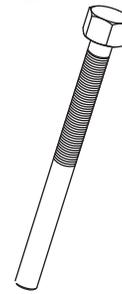

19

MAINTENANCE AND SERVICE TOOLS

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC
		<p style="text-align: center;">1 2 3 4</p> <p>The following tool list includes all tools available from Club Car for maintenance and service procedures for gasoline, electric, and/or diesel vehicles, both past and present models. Be sure to carefully examine the tool list for applicability to your vehicle before ordering.</p>			
1	<u>101871001</u>	Accelerator Pedal Adjustment Tool		1	1
2	<u>101813202</u>	Adhesive, Guide Ring, 3-Gram Tube			1
3	<u>101641202</u>	Arbor		1	
4	<u>101831901</u>	Battery Discharge Machine, 36/48 Volt			1
5	<u>1014305</u>	Battery Terminal Protector Spray	1	1	1
6	1011767	Battery Thermometer	1	1	1
7	<u>1016417</u>	Bearing and Oil Seal Remover Assembly	1	1	1
8	<u>1016416</u>	Bearing Driver Set	1	1	1
9	<u>1012811</u>	Bearing Puller	1	1	1
10	<u>1012812</u>	Bearing Puller Wedge Attachment	1	1	1
11	1013582	Brake Adjustment Tool (used only on vehicles with manually adjusted mechanical brakes)			
12	<u>102555501</u>	Brake Cable Release Tool	1	1	1
13	102249901	Brake Pedal Adjustment Tool Kit (used for the Carryall Electric Industrial Truck only) (includes items 14 and 15).....			1
14	****	Brake Pedal Adjustment Tool			1
15	****	Brake Pedal Tension Tool			1
16	<u>101887101</u>	Calibration Test Module			1
17	<u>101808401</u>	Cam Installation Tool		1	
18	<u>102562401</u>	Charger Bezel Tool			1
19	<u>102686101</u>	Clutch Removal Tool (for 4x4 vehicles)	1	1	
		Please refer to the maintenance and service manual for proper tool application.			
	****	Special order item available upon request			


17

G




E

D

17
G
E
D

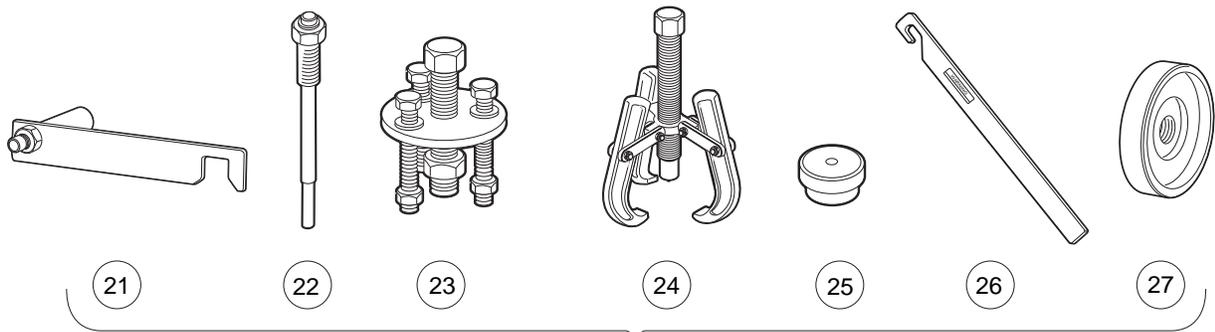

20

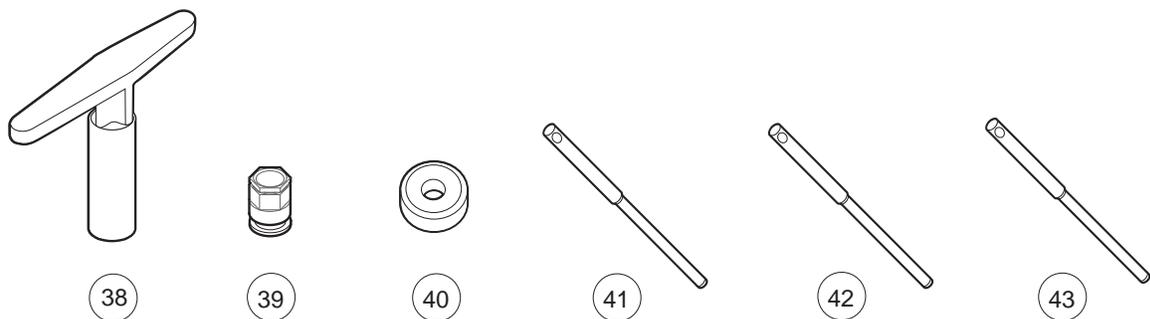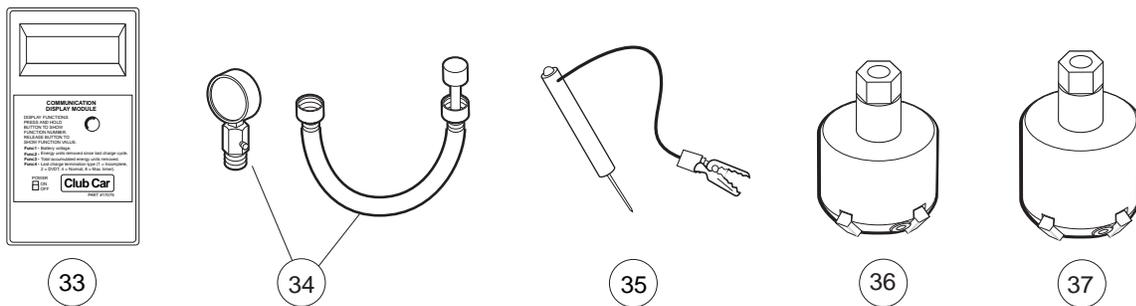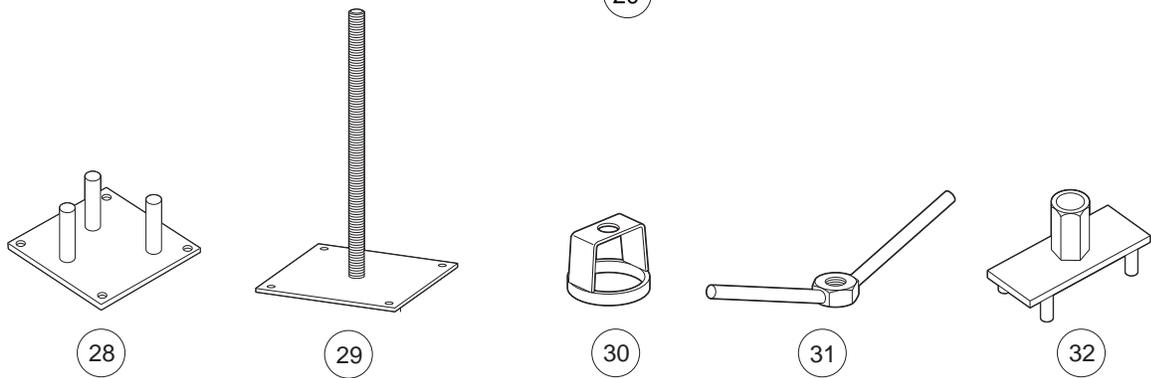


MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC
		1 2 3 4			
20	<u>1014510</u>	Clutch Tool Kit (includes items 21 - 27)		1	
21	<u>1014498</u>	Clutch Alignment Tool (for pre-unitized transaxle vehicles built prior to 1997 model year)		1	
22	<u>1014496</u>	Drive Clutch Puller (for Kawasaki engines only)		1	
23	<u>1014497</u>	Drive Clutch Hub Puller (for Kawasaki engines only)		1	
24	<u>1014508</u>	Driven Clutch Cam Puller (for Kawasaki engines only)		1	
25	<u>1014507</u>	Driven Clutch Puller Plug (for Kawasaki engines only)		1	
26	<u>1015524</u>	Drive Clutch Holder Tool Assembly (for Kawasaki engines only)		1	
27	<u>101809101</u>	Press Weldment (for Kawasaki engines only)		1	
28	<u>102601501</u>	Drive ClutchFixed Sheave Tool (for 4x4 vehicles)	1	1	
29	<u>102603501</u>	Driven Clutch Spring Compression Base (for use with items 30 and 31) (for 4x4 vehicles)	1	1	
30	<u>102605201</u>	Driven Clutch Spring Compression Collar (for use with items 29 and 31) (for 4x4 vehicles)	1	1	
31	<u>102606101</u>	Driven Clutch Spring Compression Nut (for use with items 29 and 30) (for 4x4 vehicles)	1	1	
32	<u>102607501</u>	Drive Clutch Spider Removal Tool (for 4x4 vehicles)	1	1	
33	101831801	Communication Display Module			1
34	101641002	Compression Gauge and Adapter		1	
35	1011273	Continuity Tester		1	1
36	<u>102773801</u>	Cutter, Valve Seat, #122		1	
37	<u>102773901</u>	Cutter, Valve Seat #115		1	
38	<u>102774101</u>	Wrench, T, #505.....		1	
39	<u>102774101</u>	Adapter, T-Wrench.....		1	
40	102675401	Cutter, Valve Seat, 60 Degree (requires item 51) (for Honda GX620 Gasoline Engines)		1	
41	<u>102774201</u>	Pilot, 6.6 MM		1	
42	<u>102774301</u>	Pilot, 6.62 MM.....		1	
43	<u>102774401</u>	Pilot, 6.65 MM.....		1	
		Please refer to the maintenance and service manual for proper tool application.			

17
G
E
D


17
G
E
D




44

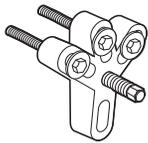

45

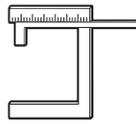


46

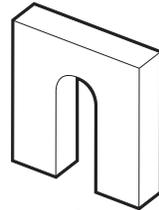


47



48




49



50




51

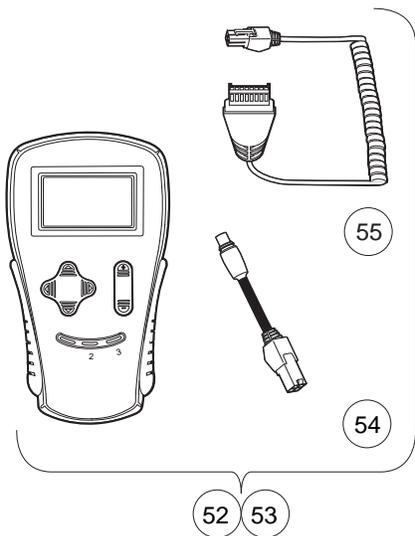


52 53

55

54

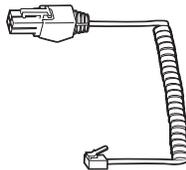


56

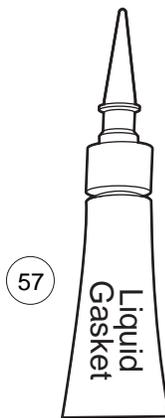

57



58



59 60



61


MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	17
		1 2 3 4				
44	<u>1012151</u>	Dry Moly Lubricant	1	1	1	G
45	<u>1016627</u>	Flywheel Puller Kit (for Kawasaki Engines)		1		E
46	<u>102669901</u>	Gauge, Carburetor Float Level (for Honda GX620 Gasoline Engines)		1		D
47	<u>1016418</u>	Gear Yoke	1	1	1	
48	<u>101933101</u>	Governor Shaft Installation Tool (for Kawasaki Engine Vehicles)		1		
49	<u>102169401</u>	Hydraulic Brake Adjuster (for Turf/CA 272/472, Pioneer/XRT 1200, Bobcat 2100, HUV 4213)			1	
50	<u>1011478</u>	Hydrometer	1	1	1	
51	<u>1013593</u>	Internal Retaining Ring Pliers	1	1	1	
52	<u>102248803</u>	IQ Display Module (IQDM) Kit (IQ System and IQ Plus vehicles)			1	
		(includes items 54 and 55)				
53	<u>102248804</u>	IQ Display Module (IQDM-P) Kit (IQ System and IQ Plus vehicles)			1	
		(includes items 54 and 55)				
54	<u>102251501</u>	Adaptor, Cable			1	
55	<u>102241502</u>	IQDM Series 2 Cable			1	
56	<u>102241501</u>	IQDM Series 1 Cable (replacement)			1	
57	<u>101928701</u>	Liquid Gasket (transaxle case)	1	1	1	
58	<u>102243402</u>	Moly-Teflon Lubricant (4-oz. (113-gram) tube)			1	
59	<u>101997201</u>	Paint, Touch-Up – Beige*		1	1	
59	<u>101997207</u>	Paint, Touch-Up – Black*		1	1	
59	<u>101997212</u>	Paint, Touch-Up – Burgundy*		1	1	
59	<u>101997211</u>	Paint, Touch-Up – Classic Blue (Navy)*		1	1	
59	<u>101997205</u>	Paint, Touch-Up – Dark Gray*	1	1	1	
59	<u>101997209</u>	Paint, Touch-Up – Dark Green*	1	1	1	
59	<u>101997204</u>	Paint, Touch-Up – Gray*	1	1	1	
59	<u>101997203</u>	Paint, Touch-Up – Red*	1	1	1	
59	<u>101997206</u>	Paint, Touch-Up – Royal Blue (Pacific Blue)*		1	1	
59	<u>101997202</u>	Paint, Touch-Up – White*	1	1	1	
60	<u>102562301</u>	Paint, Precedent Underbody – Gray		1	1	
61	<u>102587201</u>	Paint Pen, Touch-Up, Precedent Underbody – Black		1	1	
		Please refer to the maintenance and service manual for proper tool application.				
		* Item 59 is not for use on Surlyn [®] body material, which is used on Precedent vehicles.				


17
G
E
D



62

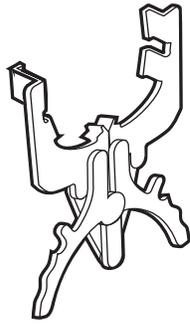

63

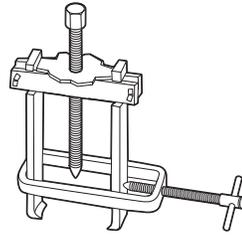


64



65



66



67



68




69



70




71

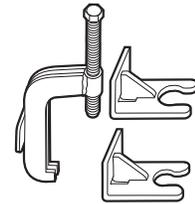

72



73

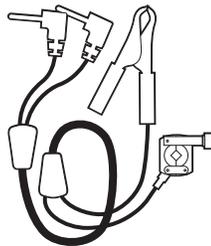


74




75



76

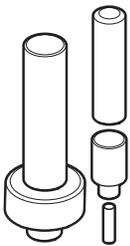

77



83



84



85



86


MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY	QTY	QTY	17
			DIESEL	GAS	ELEC	
		1 2 3 4				G
62	<u>1016414</u>	Piston Ring Compressor Kit (FE290, FE350 and FE400 engines)		1		E
63	<u>1016415</u>	Piston Ring Pliers (for Kawasaki Engines)		1		D
64	<u>102668801</u>	Puller, Special Use (for Kubota D722 Diesel Engines)	1			
65	<u>1012549</u>	Retaining Ring Pliers, 45° External	1	1	1	
66	<u>1012560</u>	Retaining Ring Pliers, 90° Internal	1	1	1	
67	<u>101823101</u>	Safety First Card (50 per pack)	1	1	1	
68	<u>1012809</u>	Seal Puller	1	1	1	
69	<u>102330901</u>	Spanner Wrench (for coil over shock front suspension vehicles only)	1	1		
70	<u>1014264</u>	Steering Column Bearing Press Tool		1	1	
71	<u>1014259</u>	Steering Column Retaining Ring Tool		1	1	
72	<u>102061201</u>	Steering Wheel Puller Tool	1	1	1	
73	<u>AM10753</u>	Tachometer (includes gasoline engine pick up lead only)	1	1		
74	<u>AM10771</u>	Tachometer Diesel Probe (for use with item 73)	1			
75	<u>1014162</u>	Transaxle Axle Seal Tool		1		
76	<u>1014161</u>	Transaxle Pinion Seal Tool		1		
77	<u>1014115</u>	Transmission Tool Kit		1		
78	<u>101611003</u>	Tune-Up Kit, All OHV (for FE290, FE350, FE400 only) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
79	<u>AM11804</u>	Tune-Up Kit, Gx620 (for Honda Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
80	<u>AM11805</u>	Tune-Up Kit, D722 (for Kubota Engines) (includes air filter, oil filter, fuel filters, water separator filter) (not shown)	1			
81	<u>AM1220301</u>	Tune-Up Kit, Precedent (for FE290/350 Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
82	<u>AM1232401</u>	Tune-Up Kit, FH680D (for Kawasaki V-Twin Engines) (includes oil filter, fuel filter, air filter, and spark plugs) (not shown)		1		
83	<u>1016413</u>	Valve Clearance Adjuster Screw Holder (for FE290 engines only)		1		
84	<u>102674601</u>	Valve Guide Driver (for Honda GX620 Gasoline Engines)		1		
85	<u>101641201</u>	Valve Guide Reamer (FE290, FE350, and FE400 only)		1		
86	<u>102674401</u>	Valve Guide Reamer, 6.6 mm (for Honda GX620 Gasoline Engines)		1		


17
G
E
D




87

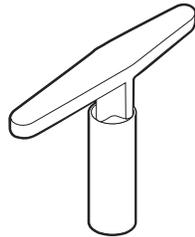


88

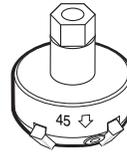


89

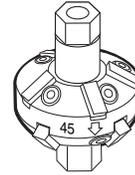


90

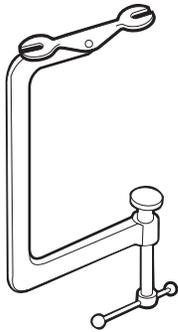


91

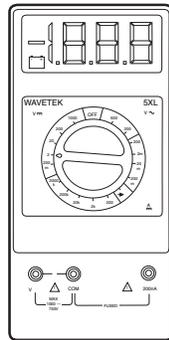


92

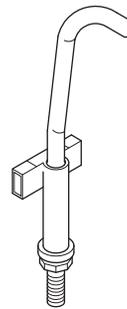


93



94

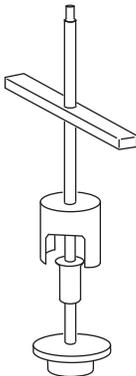

95



96

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC
		1 2 3 4			
87	<u>1016552</u>	Valve Seat Cutter Guide		1	
88	<u>1016551</u>	Valve Seat Cutter T-Wrench		1	
89	<u>1016553</u>	Valve Seat Cutter, 45° (32 mm diameter) (for FE290 engines only)		1	
90	<u>1016554</u>	Valve Seat Cutter, 45°/30° (35 mm diameter)		1	
91	<u>101641101</u>	Valve Spring Compressor		1	
92	1011480	Volt Ohm Meter	1	1	1
93	<u>102570401</u>	Tool, Tensioning, Starter Generator (For Precedent vehicles)		1	
94	<u>103601401</u>	Puller, Drive Clutch, XRT 950*		1	
95	<u>103601701</u>	Tool, Disassembly, Driven Clutch, XRT 950		1	
96	<u>103600501</u>	Screw, Driven Clutch Disassembly, M6, XRT 950		1	
<p>*Note: The XRT 950 Drive Clutch Puller requires the use of Screw, Driven Clutch Disassembly, CCI Part Number <u>103600501</u>.</p>					

17

G

E

D

INDEX

Part Number and Page

AM10753	17-9	7251	1-3, 1-5, 1-7, 1-9	5-35, 5-37, 5-39, 5-41, 5-43
AM10771	17-9	7270	5-29	8796
AM10080	12-5	7274	5-31, 5-33	16-11, 16-13, 16-21, 16-27, 16-37
AM10081	12-5	7308	5-31, 5-33	8797
AM10419	11-9, 11-11	7310	2-3, 2-5, 2-7, 2-9, 2-11	9-7
AM10682	2-3	7311	5-47, 5-49	8861
AM10724	7-5, 8-5	7330	12-7, 15-5	5-15, 5-19, 5-23, 5-47, 5-49
AM10808	1-9	7335	12-5, 15-5	8935
CCX8506	16-3, 16-5, 16-11	7336	15-5	1-9
183	6-27, 6-35, 6-37, 6-43, 9-17, 9-19, 9-21, 11-3, 11-5, 12-3, 13-45	7473	1-3, 1-5, 1-7, 1-9, 1-19, 1-21, 1-31, 1-35, 1-39, 1-49, 4-7, 4-9, 4-11, 4-15, 4-21, 4-23, 4-25, 4-27, 4-29, 4-31, 4-33, 5-13, 6-31, 6-33, 6-35, 6-37, 6-39, 6-47, 6-49, 6-55, 13-31, 13-85, 13-87	8963
304	1-47, 6-27, 13-25, 16-19	7479	16-11, 16-13	13-85, 13-87
320	4-17, 4-19, 12-15	7532	1-19, 1-21	8990
332	1-15, 1-23, 1-25, 1-27, 1-31, 1-33, 1-35, 1-41, 1-45, 1-47, 1-49, 6-27, 9-15, 10-3, 10-5, 12-11, 13-25, 13-37	7539	5-19, 5-23	5-11, 6-31, 6-33, 6-35, 6-37, 6-39, 6-43, 13-27, 13-29, 13-37, 13-47, 13-51, 13-57, 13-61, 13-63, 13-67, 13-73, 13-79, 16-27, 16-37
334	1-25, 4-31, 4-33, 5-3, 5-5, 5-11, 7-15, 8-15, 8-17	7540	5-11, 5-19, 5-23	1010005
357	1-43, 5-17, 5-21, 5-25, 5-29, 5-47, 5-49	7555	5-11, 5-19, 5-23	5-31, 5-33
403	1-19, 1-21, 1-37	7569	5-43	1010124
451	1-27, 1-33, 4-5, 4-13, 10-3, 10-5, 13-35, 13-51, 14-3, 14-5, 14-7, 14-9, 14-11, 14-13, 16-11, 16-13	7577	16-5, 16-7, 16-9, 16-11, 16-13, 16-15, 16-17, 16-29, 16-31	5-17, 5-21, 5-25, 5-29
705	1-41, 1-43, 6-53, 7-15, 8-15, 8-17	7591	6-27, 13-25	1010138
706	1-43, 5-17, 5-21, 5-25, 5-29	7602	5-11, 5-19, 5-23	5-15, 5-19, 5-23, 5-27
808	1-25, 5-47, 5-49, 11-3, 11-5, 12-15	7716	4-7, 4-9, 4-11, 4-31, 4-33	1010142
1016	6-27, 6-35, 6-37, 6-43, 13-45	7818	6-31, 6-33, 6-35, 6-37, 6-39	5-35, 5-37, 5-39, 5-41, 5-43, 5-45
1017	6-29, 6-35, 6-37, 13-15, 13-45	7820	6-27, 13-25	1010144
1028	1-27, 1-33, 4-7, 4-9, 4-11, 13-35, 13-51, 16-11, 16-13	7840	5-31, 5-33	5-35, 5-37, 5-39, 5-41, 5-43, 5-45
1032	1-27, 1-33, 4-7, 4-9, 4-11	7847	1-13, 1-25, 1-45, 1-49, 10-3, 10-5, 13-79, 16-11, 16-13, 16-17, 16-19, 16-23, 16-31, 16-33	1010145
1035	1-25, 4-21, 4-27, 5-11, 5-19, 5-23	7893	6-27, 6-31, 6-33, 6-35, 6-37, 6-39, 6-43, 12-11, 12-13, 12-15, 12-17	5-35, 5-37, 5-39, 5-41, 5-43, 5-45
1218	5-13, 13-45, 13-63	7910	5-31, 5-33	1010150
1231	1-27, 1-33	7973	1-11, 9-17, 9-19, 9-21, 12-17	5-17, 5-21, 5-25, 5-29
1241	1-3, 1-5, 1-7, 1-9, 1-29, 1-39, 1-43, 4-7, 4-9, 4-11, 4-21, 4-23, 4-25, 4-27, 4-29, 4-31, 4-33, 5-13, 6-31, 6-33, 6-35, 6-37, 6-39, 6-47, 6-49, 6-53, 6-55, 10-3, 10-5, 13-31, 13-45, 13-63, 14-3, 14-5, 14-7	8049	13-35	1010177
1242	1-29, 1-43, 4-15, 4-21, 4-23, 4-25, 4-27, 4-29, 5-47, 5-49, 6-31, 6-33, 6-35, 6-37, 6-39, 6-53, 13-45, 13-51, 13-61, 13-63	8056	6-27, 6-41, 6-45, 6-57, 13-25, 13-27, 13-83	5-17, 5-21, 5-25
1308	5-19, 5-23	8057	6-27, 6-31, 6-33, 6-35, 6-37, 6-39, 6-41, 6-45, 6-57, 12-9, 13-25, 13-27, 13-35, 13-83	1010219
1606	9-17, 9-19	8058	6-27, 6-31, 6-33, 6-35, 6-37, 6-39, 6-41, 6-45, 6-57, 12-9, 13-25, 13-27, 13-35, 13-83	5-19, 5-23
1620	1-11	8067	5-31, 5-33	1010342
1624	4-31, 4-33, 5-11	8233	1-23, 1-25, 1-31, 1-35, 1-37, 1-41, 1-45, 1-47, 1-49, 4-31, 4-33, 5-47, 5-49, 6-27, 12-3, 12-9, 12-11, 13-25, 13-35, 13-37, 13-79, 16-11, 16-13, 16-17, 16-19, 16-23, 16-31, 16-33	5-31
1631	9-19, 9-21	8248	9-3, 9-5, 12-9, 13-37	1010347
2402	5-15, 5-19, 5-23, 5-27, 5-29	8251	1-17, 12-11	5-31
4029	6-27, 13-25	8450	6-35, 6-37, 11-3, 11-5, 13-35	1010348
4034	6-43, 6-47, 6-49, 13-29, 13-31	8455	12-17	5-31
7048	5-31, 5-33	8639	6-27, 9-21, 13-13, 13-23, 13-25, 13-57, 13-61, 13-73	1010434
7049	1-31, 1-35	8717	4-31, 4-33, 6-31, 6-33, 6-35, 6-37, 6-39, 12-3, 12-9	1-7, 1-9, 1-17, 1-27, 1-33
7173	5-47, 5-49, 6-47, 6-49, 6-55, 13-31, 13-45, 13-63	8754	1-19, 1-21, 1-41, 4-17, 4-19, 4-31, 4-33, 5-3, 5-5, 5-11, 5-15, 5-17, 5-19, 5-21, 5-23, 5-25, 5-27, 5-29, 5-35, 5-37, 5-39, 5-41, 5-43, 5-45, 6-53, 12-15	1-3, 1-5, 1-7, 1-9, 1-19, 1-21, 1-39, 1-41, 1-19, 1-21, 1-39
7174	1-29, 1-43, 5-3, 5-5, 5-47, 5-49, 6-53, 9-13, 10-3, 10-5, 13-45, 13-51, 13-61, 13-63, 14-3, 14-5, 14-7, 14-9, 14-11	8755	1-19, 1-21, 1-41, 5-17, 5-21, 5-25, 5-29,	1010435

INDEX

1011285	14-3, 14-5, 14-7	13-47, 13-51, 13-61, 13-63, 13-67, 13-75	1013311	1-15	
1011290	14-3, 14-5, 14-7	1012295	6-31, 6-33, 6-35, 6-37, 6-39	1013312	1-15
1011291	12-7	1012303	1-19, 1-21, 1-41, 5-17, 5-21, 5-25, 5-29, 5-35, 5-37, 5-39, 5-41, 5-43, 5-45	1013317	1-27, 1-33, 3-37, 3-41
1011298	4-5, 4-13	1012304	5-35, 5-37, 5-39	1013343	1-11
1011301	4-5, 4-13	1012333	12-11, 12-13, 12-15, 12-17	1013344	1-11
1011303	4-5, 4-13	1012382	6-5, 6-9, 6-13, 6-17, 6-21	1013357	6-27, 13-25, 13-47, 13-51, 13-67
1011314	4-5, 4-13	1012431	6-27, 6-31, 6-33, 6-35, 6-37, 6-39, 6-41, 6-45, 6-57, 12-9, 13-25, 13-27, 13-83	1013413	1-41
1011382	1-11	1012438	9-19, 9-21, 13-45	1013420	1-13
1011393	5-31, 5-33	1012466	5-3, 5-5	1013422	1-13
1011394	1-3, 1-5, 1-7, 1-9	1012467	5-11	1013461	6-29, 9-7, 13-15
1011402	4-7, 4-9, 4-11	1012505	6-41, 6-45, 6-47, 6-49, 13-27, 13-31	1013462	9-7
1011411	14-3, 14-5, 14-7	1012528	10-3, 10-5, 13-45, 13-57, 13-61, 13-63, 13-73	1013483	1-43
1011415	5-35, 5-37, 5-39, 5-41, 5-43, 5-45	1012549	17-9	1013494	1-11
1011418	4-7, 4-9, 4-11	1012560	17-9	1013531	4-21, 4-23, 4-25, 4-27, 4-29
1011439	6-47, 6-49, 13-31	1012565	5-7	1013547	13-75, 13-79
101146302	4-5, 4-13	1012566	5-7	1013582	17-3
1011464	4-5, 4-13	1012571	7-15, 8-15, 8-17, 13-85, 13-87, 13-89, 13-91	1013587	12-9
1011465	4-5, 4-13	1012594	12-9	1013589	6-31, 6-33, 6-35, 6-37, 6-39, 12-9
1011466	4-5, 4-13	1012604	5-3, 5-5	1013590	12-9
1011467	4-5, 4-13	1012605	5-3, 5-5	1013591	12-9
1011478	17-7	1012649	9-3, 9-5	1013593	17-7
1011480	17-11	1012711	12-3	1013609	6-31, 6-33, 6-35, 6-37, 6-39
1011494	4-5, 4-13	1012714	12-5	1013677	3-5, 3-13, 3-19, 3-23
1011553	1-43, 3-5, 3-7, 3-9, 3-17, 3-35	1012740	12-5	1013683	13-59
1011557	6-47, 6-49, 13-31	1012741	12-5	1013687	9-3, 9-5
1011578	1-9, 13-53, 13-59, 13-81	1012747	12-5	1013700	9-13
1011582	6-57, 13-81	1012748	12-5	1013734	10-3, 10-5, 13-45, 13-57, 13-61, 13-63, 13-73
1011694	4-31, 4-33	1012752	12-3	1013746	9-3, 9-5, 9-7, 9-11
1011697	1-49, 5-3, 5-5, 7-15, 8-15, 8-17, 9-13	1012809	17-9	1013760	12-3
1011700	4-31, 4-33	1012811	17-3	1013768	12-7
1011707	16-11, 16-13	1012812	17-3	1013769	12-7
1011734	4-35, 4-37, 4-39	1012830	6-53, 9-13, 10-3, 10-5	1013770	12-7
1011767	17-3	1012836	11-9, 11-11	1013771	12-7
1011779	4-15, 4-21, 4-23, 4-25, 4-27, 4-29	1012896	12-3	1013772	12-7
1011825	6-27, 13-25	1012986	6-41, 6-45, 6-47, 6-49	1013773	12-7
101187702	4-7, 4-9, 4-11	1012987	12-9, 13-35	1013774	12-7
1011887	5-31, 5-33	1012991	6-51	1013787	12-7
1011889	5-31, 5-33	1013001	6-51	1013792	12-7
1011892	5-31	1013003	6-51	1013794	12-7, 15-5
1011893	5-19, 5-23	1013005	6-51	1013857	6-43, 6-47, 6-49, 13-29, 13-31
1011895	5-11, 5-19, 5-23	101301102	6-51	1013858	6-43, 6-47, 6-49, 13-29, 13-31
1011930	5-11, 5-19, 5-23	1013035	5-11	1013869	4-7, 4-9, 4-11
1011931	4-31, 4-33	1013042	5-11, 5-15, 5-27	1013870	4-7, 4-9, 4-11
1011988	9-3, 9-5	1013044	5-11	1013871	4-31, 4-33
1011990	1-27, 1-33, 1-43	1013051	5-11	1013872	1-41
1012098	16-3, 16-5, 16-7, 16-9, 16-11, 16-13, 16-15, 16-17, 16-29, 16-31	1013052	5-11	1013876	4-7, 4-9, 4-11
1012101	16-5, 16-7, 16-9, 16-11, 16-13, 16-15, 16-17, 16-29, 16-31	1013061	12-3, 13-41, 13-43, 13-67, 13-69	1013924	4-3, 4-5, 4-13, 7-15, 8-15, 8-17
1012126	13-69	1013135	5-31	1014007	4-31, 4-33, 12-3
1012151	17-7	1013164	5-35, 5-37	1014049	11-3, 11-5
1012180	5-39, 5-41, 5-43	1013207	5-35, 5-39, 5-41, 5-43	1014050	11-3, 11-5
1012181	5-35, 5-37, 5-43, 5-45	1013280	1-37	1014051	11-3
1012182	5-35, 5-37, 5-43, 5-45	1013309	1-15	1014052	11-3, 11-5
1012285	1-37, 1-45, 1-47, 1-49, 9-3, 9-5, 9-13, 12-3, 12-11, 12-13, 12-15, 12-17, 13-37, 13-45,			1014055	11-3, 11-5

INDEX

1014058	11-3, 11-5	1014523	9-5	1015413	1-27
1014059	11-3, 11-5	1014524	9-3, 9-5	1015414	1-27
1014062	11-3, 11-5	1014530	6-27, 13-25	1015424	1-33
1014063	11-3, 11-5, 16-21	1014537	1-29, 1-31, 1-35	1015426	9-15
1014065	6-31, 6-33, 6-35, 6-37, 6-39, 11-3, 11-5, 12-9	1014540	13-75, 13-77, 13-79	1015427	1-19
1014070	11-9, 11-11	101454602	5-37	101542901	1-21
1014072	11-9, 11-11	101454902	5-35	1015445	1-43
1014076	11-9, 11-11	1014555	5-35, 5-37, 5-39, 5-41, 5-43, 5-45	1015453	5-47, 5-49
1014078	11-9, 11-11	1014573	5-35, 5-37	1015457	5-47, 5-49
1014080	11-9, 11-11	1014645	1-11	101547601	3-7, 3-11, 3-17, 3-27, 3-35
1014089	12-9	1014675	5-35, 5-37	1015507	1-19, 1-21, 1-41
1014115	17-9	1014727	12-9	1015524	17-5
1014116	9-3, 9-5	1014771	2-3, 2-5, 2-7	1015530	1-45, 1-47, 1-49
1014119	6-5, 6-9, 6-13, 6-17, 6-21, 6-31, 6-33, 6-35, 6-37, 6-39	1014807	6-31, 6-33, 6-35, 6-37, 6-39, 12-9	101553901	1-27, 1-33, 3-3, 3-9, 3-15, 3-19, 3-23, 3-27, 3-33
1014125	5-3, 5-5	1014808	6-31, 6-33, 6-39, 13-35	1015545	5-3, 5-5
1014126	5-3, 5-5	1014871	13-35	1015583	1-19, 1-21, 1-41, 5-17, 5-21, 5-25, 5-29, 5-35, 5-37, 5-39, 5-41, 5-43, 5-45
1014145	6-31, 6-33, 6-35, 6-37, 6-39, 12-9	1014901	5-35, 5-37	1015597	5-11, 5-19, 5-23, 5-31, 5-33
1014153	4-3, 4-5, 4-13	1014902	5-35, 5-37, 5-45	1015606	1-27
1014161	17-9	1014928	9-3, 9-5	1015607	1-33
1014162	17-9	1014947	13-45, 13-61, 13-63	1015608	1-9, 13-85, 13-87
1014193	12-7	1014948	6-31, 6-33, 6-35, 6-37, 6-39, 13-45, 13-61, 13-63	1015613	5-47, 5-49
1014201	14-3, 14-5, 14-7, 14-9, 14-11, 14-13	101503202	1-9, 1-11	1015614	5-47, 5-49
1014207	12-7	1015064	12-9, 13-35	101562711	1-15
1014211	5-3, 5-5	1015072	13-53, 13-59, 13-81, 13-85, 13-87, 13-89, 13-91	101562712	1-15
1014212	5-3, 5-5	1015075	1-3, 1-5, 1-7, 1-9	101562714	1-15
1014213	5-3, 5-5	1015137	9-3, 9-5, 9-7, 9-11	101562715	1-15
1014214	5-3, 5-5	1015139	9-7, 9-21	101564501	1-15
1014216	5-3, 5-5	1015143	9-7	101564502	1-15
1014217	5-3, 5-5	101524002	6-53	101564503	1-15
1014259	17-9	1015245	1-27, 1-33	101564505	1-15
1014264	17-9	1015252	1-19, 1-21	1015649	7-3, 8-3
1014276	5-17, 5-21, 5-25, 5-29	1015258	1-21	101567202	2-3
1014287	11-3, 11-5	1015277	1-23	1015700	1-25
1014288	5-3, 5-5, 6-55, 11-3, 11-5, 13-61, 13-67, 16-21, 16-27, 16-37	1015313	1-27, 1-33	101570506	2-7
1014289	6-51	1015330	10-3	101570507	2-7
1014304	13-53, 13-59, 13-81	1015332	6-5, 6-9, 6-13, 6-17, 6-21, 7-3, 8-3	101570514	2-7
1014305	17-3	1015345	6-31, 6-33, 6-35, 6-37, 6-39	1015707	2-7
1014306	1-45, 1-47, 1-49, 13-79, 16-11, 16-13	1015348	1-25	1015720	6-27, 6-41, 6-45, 6-57, 13-25, 13-27, 13-57, 13-73, 13-83
1014321	1-17, 1-31, 1-35	1015363	1-27, 1-33	1015727	1-41
1014375	6-55	1015365	1-27	1015737	6-5, 6-9, 6-13, 6-17, 6-31, 6-33, 6-35, 6-37, 6-39
1014387	1-17, 1-31, 1-35	1015366	1-33	1015741	6-31, 6-33, 6-35, 6-37, 6-39, 13-45
1014415	1-31, 1-35	1015367	1-27	1015752	6-31, 6-33, 6-35, 6-37, 6-39, 6-57, 9-15, 13-33, 13-81
1014453	11-3, 11-5	1015368	1-33	1015760	5-47, 5-49
1014454	11-9, 11-11	1015371	6-31, 6-33, 6-39	1015769	6-5, 6-9, 6-13, 6-17, 6-21, 6-39
1014471	1-19, 1-21, 1-39	1015372	6-31, 6-33, 6-35, 6-37, 6-39	1015814	10-3, 10-5
1014496	17-5	1015373	6-31, 6-33, 6-35, 6-37, 6-39	101584502	9-13
1014497	17-5	1015390	1-27, 1-33	1015878	6-31, 6-33, 6-35, 6-37, 6-39
1014498	17-5	1015392	13-51, 13-67	1015914	16-5, 16-7, 16-9, 16-11, 16-13, 16-15, 16-17, 16-29, 16-31
1014507	17-5	101539802	12-17	1015917	16-5, 16-7, 16-11, 16-13, 16-15, 16-17, 16-31
1014508	17-5	1015399	1-19, 1-21, 1-31, 1-35, 1-39	1015920	6-5, 6-21
1014510	17-5	1015400	1-19, 1-21, 1-27, 1-33		
1014513	1-29	1015405	1-3, 1-7, 6-31, 6-33, 6-35, 6-37, 6-39		
1014514	1-29	1015409	12-13, 12-15		
		1015412	1-33		

INDEX

1015921	9-7	101642580	9-9	1016537	7-7, 8-7
1015932	6-53	101642582	9-9	1016538	7-11, 8-11
1015969	7-3, 8-3	101642585	9-9	1016539	7-3, 8-3
1016004	9-7	1016429	7-7, 8-7	1016541	7-13, 8-13
1016011	11-5	1016432	7-7, 8-7, 12-3	1016544	7-5, 7-9, 7-11, 8-5, 8-9, 8-11
1016060	1-23	1016436	7-9, 8-9	1016546	9-13
1016074	6-53	1016437	9-9	1016547	7-3, 7-13, 8-3, 8-13, 9-11
1016077	1-39	1016438	9-11	1016549	7-9, 8-9
1016078	1-23	1016440	7-9, 8-9, 9-11	1016551	17-11
101609401	3-3, 3-9, 3-15, 3-19, 3-23, 3-27, 3-33	1016441	9-11	1016552	17-11
101611003	17-9	1016444	9-11	1016553	17-11
1016154	5-7	1016445	7-5, 8-5	1016554	17-11
101615504	5-9	1016449	7-9, 8-9	1016557	4-5, 4-13
1016156	5-7, 5-9	1016450	7-9, 8-9	1016560	7-9, 8-9
1016181	5-3, 5-5	1016452	7-9, 8-9	1016561	7-5, 8-5
1016183	5-3, 5-5	1016454	7-11, 8-11	1016562	7-5, 7-13, 8-5, 8-13
1016201	11-3, 11-5, 12-9	1016455	7-5, 8-5	1016563	7-9, 8-9
1016219	5-7	1016456	7-3, 7-5, 8-3, 8-5	1016564	7-11, 8-11
1016263	5-3, 5-5	1016457	7-7, 8-7	1016566	7-9, 8-9
1016269	5-3, 5-5	1016458	7-9, 8-9	1016569	7-9, 8-9
1016289	11-3, 11-5	1016467	7-7, 8-7	1016570	7-7, 8-7
1016319	4-15	1016470	7-13, 8-13	1016571	7-13, 8-13
1016320	4-15	1016472	7-11, 8-11	1016572	9-11
1016337	12-5	1016473	7-7, 8-7	1016573	4-5, 4-13
1016338	12-5	1016474	7-9, 8-9	1016576	7-7, 8-7
1016341	12-3	1016479	7-9, 8-9	1016578	7-5, 8-5
1016342	12-9	1016480	9-11	1016579	7-5, 8-5
1016346	5-15, 5-19, 5-23, 5-27	101648102	9-11	1016581	7-7, 8-7
1016349	5-15, 5-19, 5-23, 5-27	101648203	7-7, 8-7	1016582	9-11
1016350	5-15, 5-19, 5-23, 5-27	1016483	7-9, 8-9	1016583	7-9, 8-9
1016351	5-15, 5-19, 5-23, 5-27	1016486	9-9	1016584	7-11, 8-11
1016353	5-15, 5-19, 5-23, 5-27	1016489	7-9, 8-9	1016585	9-9
1016356	6-27, 13-25, 13-47, 13-51, 13-67	101649002	9-11	1016586	7-5, 8-5
1016363	13-45	1016494	7-11, 8-11	1016587	7-5, 8-5
1016366	13-45	1016496	7-11, 8-11	1016588	7-5, 8-5
1016379	1-49	1016497	7-5, 8-5	101660404	1-11
1016380	6-9, 6-13, 6-17	1016499	9-9	101661601	13-85, 13-89
1016384	5-17, 5-21, 5-25, 5-29	1016501	9-9	101661602	13-85, 13-89
1016385	5-15, 5-19, 5-23, 5-27	1016502	7-7, 8-7	1016622	5-3, 5-5
1016386	5-17, 5-21, 5-25, 5-29	1016506	7-11, 8-11	1016627	17-7
1016387	5-15, 5-17, 5-21, 5-25, 5-29	1016507	7-3, 8-3	1016630	6-41, 6-45, 6-47, 6-49
1016389	5-17, 5-21, 5-25, 5-29	1016510	7-11, 8-11	1016631	13-45
1016401	6-31, 6-33, 6-39	1016513	12-3	1016663	5-7, 5-9
101641002	17-5	101651402	2-3	1016672	12-7
101641101	17-11	101651406	2-3, 2-5, 2-7	1016673	16-11, 16-13, 16-21, 16-27, 16-37
101641201	17-9	101651407	2-3, 2-5, 2-7	1016679	1-45, 1-49
101641202	17-3	101651409	2-3, 2-5	101670201	3-37, 3-39, 3-41
1016413	17-9	101651412	2-3	1016717	6-57, 13-81
1016414	17-9	101651413	2-3	1016718	1-37
1016415	17-9	101651414	2-5, 2-7	1016723	1-17
1016416	17-3	1016517	7-9, 8-9	101672701	12-17
1016417	17-3	1016518	7-9, 8-9	1016729	13-9, 13-19
1016418	17-7	1016519	7-9, 8-9	1016732	13-9, 13-19
1016423	6-31, 6-33, 6-35, 6-37, 6-39, 13-45	1016521	7-11, 8-11	101674702	4-39
101642575	9-9	1016531	7-3, 8-3	1016751	1-17
101642578	9-9	1016535	7-11, 8-11	101675512	1-17

INDEX

101675514	1-17	101693914	1-3, 1-5, 1-7, 1-9	1017456	7-7, 8-7
101675515	1-17	1016942	1-39	101745701	7-13, 8-13
101677701	1-17	1016943	1-39	101745702	7-13, 8-13
101677702	1-17	1016944	1-39	1017458	7-7, 8-7
101677705	1-17	1016947	12-9	1017460	7-7, 8-7
1016801	11-3, 11-5	1016948	1-39	1017461	9-9
1016813	5-47, 5-49	1016952	1-13	1017463	7-5, 8-5
1016814	5-47	1016954	1-37	1017466	9-11
1016845	13-35	1016955	1-37	1017468	7-5, 8-5
1016849	6-27, 6-41, 6-45, 6-57, 13-25, 13-27, 13-83	1016967	1-3, 1-5, 1-7, 1-9, 13-51, 13-67	1017471	7-13, 8-13
1016851	6-27, 6-41, 6-45, 6-57, 13-25, 13-27, 13-83	1016997	6-35, 6-37	1017472	7-11, 8-11
1016857	6-27, 6-41, 6-45, 6-57, 13-25, 13-27, 13-83	1017006	6-35, 6-37	1017473	7-9, 8-9
1016858	6-13, 6-43, 13-29	1017029	4-7, 4-9, 4-11	1017474	7-3, 8-3
1016859	6-27, 6-41, 6-45, 6-57, 13-25, 13-27, 13-83	1017062	6-29, 13-15	1017475	7-3, 8-3
1016868	1-3, 1-5, 1-7, 1-9	1017064	6-29, 13-15	1017476	7-3, 8-3
1016874	1-49	1017065	6-29, 13-15	1017486	7-3, 8-3
1016875	1-49	1017077	1-39	1017487	7-11, 8-11
1016876	1-49	101707801	3-21, 3-25, 3-29, 3-31	1017490	7-5, 8-5
1016878	1-39	1017079	1-49	1017500	7-3, 8-3
1016879	6-29, 13-15	1017080	1-3, 1-5, 1-7, 1-9	1017501	7-13, 8-13
1016880	6-29, 13-15	1017082	12-3	1017502	7-13, 8-13
1016881	1-39	1017187	16-11, 16-13, 16-19, 16-23, 16-33	1017503	7-13, 8-13
1016883	6-53	1017188	11-7	1017504	7-11, 8-11
101689101	1-39	1017189	16-11, 16-13, 16-19, 16-23, 16-33	1017507	7-7, 8-7
1016901	11-5	1017211	4-15	1017508	7-11, 8-11
1016904	7-9, 8-9, 10-5	1017226	5-3, 5-5	1017510	7-13, 8-13
1016909	1-37	1017231	12-3	1017511	7-11
101691401	1-37, 1-39	1017235	5-35, 5-37	1017512	7-13, 8-13
1016918	1-37	1017239	6-35, 6-37	1017513	7-11, 8-11
1016920	1-37	1017243	6-35, 6-37	1017514	7-11, 8-11
101692501	1-3, 1-5, 1-7	1017266	5-15, 5-19, 5-23, 5-27	101751801	7-11, 8-11
101692502	1-3, 1-5, 1-7	1017273	5-7, 5-9	101751802	7-11, 8-11
101692504	1-5	101734802	1-3, 1-7	101751803	7-11, 8-11
101692506	1-3, 1-5, 1-7	101737002	2-3, 2-5, 2-7	101753005	13-35
101692509	1-3, 1-5, 1-7	1017378	4-31, 4-33	1017653	6-51
101692510	1-3, 1-5, 1-7	1017380	4-31, 4-33	1017686	11-9, 11-11
101692511	1-3, 1-5, 1-7	101738301	11-5	1017689	10-3, 10-5
101692512	1-3, 1-5, 1-7	101738302	11-5	1017696	4-31, 4-33
101692513	1-3, 1-5, 1-7	1017424	4-31, 4-33	1017705	13-41, 13-43
101692514	1-3, 1-5, 1-7	1017434	7-9, 8-9	1017721	6-27, 6-43
101692515	1-3, 1-5, 1-7	1017435	7-9, 8-9	101773301	7-13, 8-13
101693201	3-15, 3-29	1017442	7-7, 8-7	101773302	7-13, 8-13
101693901	1-3, 1-5, 1-7, 1-9	1017443	7-9, 7-11, 8-9, 8-11	101773303	7-13, 8-13
101693902	1-3, 1-5, 1-7, 1-9	1017444	7-9, 8-9	101773304	7-13, 8-13
101693904	1-5	1017445	7-9, 8-9	101773305	7-13, 8-13
101693906	1-3, 1-5, 1-7, 1-9	1017446	7-9, 8-9	101773306	7-13, 8-13
101693908	1-5, 1-9	1017447	7-11, 8-11	101773307	7-13, 8-13
101693909	1-3, 1-5, 1-7, 1-9	1017448	7-5, 8-5	101773308	7-13, 8-13
101693910	1-3, 1-5, 1-7, 1-9	101744901	7-13, 8-13	101773309	7-13, 8-13
101693911	1-3, 1-5, 1-7, 1-9	101744902	7-13, 8-13	101773310	7-13, 8-13
101693912	1-3, 1-5, 1-7, 1-9	1017450	7-13, 8-13	101773311	7-13, 8-13
101693913	1-3, 1-5, 1-7, 1-9	101745101	7-13, 8-13	1017799	13-35
		101745102	7-13, 8-13	1017853	6-27, 13-25
		1017453	7-13, 8-13	101791101	4-3, 4-5
		1017454	7-9, 8-9	1017944	14-3, 14-5, 14-7
		1017455	7-5, 8-5	1017947	14-3, 14-5, 14-7

INDEX

1017948	14-3, 14-5	101826201	13-27, 13-31	101838601	16-7, 16-9, 16-13, 16-29, 16-31
1017949	14-3, 14-5, 14-7	101826301	6-41, 6-49	101840203	13-45, 13-63
1017950	14-3, 14-5, 14-7	101826401	6-45, 6-47	101841901	16-11, 16-13, 16-17, 16-31
1017951	14-3	101826801	13-47, 13-61, 13-63	101850301	9-17
1017953	14-3, 14-5, 14-7	101827101	7-15, 8-15, 8-17	101851101	6-41, 6-45, 6-47, 6-49, 13-27, 13-31
101795701	13-5, 13-9, 13-19, 13-53, 13-59, 13-81	101827701	6-35	101855002	13-37, 13-39
1017958	14-3	101827801	13-61	101855801	12-11
1017961	14-3	101827802	13-47, 13-63	101856002	13-37, 13-39
101796201	4-31, 4-33	101828301	16-5	101856102	6-31, 6-33, 6-35, 6-37, 6-39
101796501	13-41, 13-43	101828501	16-5, 16-7, 16-9, 16-11, 16-13, 16-15, 16-17, 16-31	101856201	9-17
101796801	13-41, 13-43	101828601	13-73	101859401	10-5
1017976	1-19, 1-21	101828801	16-5, 16-15	101861901	4-31, 4-33
101797701	13-53, 13-59, 13-81	101828802	16-5, 16-15	101862001	4-33
101797702	13-53, 13-59, 13-81	101828901	16-5, 16-7, 16-9, 16-15, 16-29	101865106	13-9
101797801	13-53, 13-59, 13-81	101828902	16-5, 16-7, 16-9, 16-15, 16-29	101865301	4-15
101801001	13-41, 13-43, 13-67, 16-11, 16-13, 16-21, 16-27, 16-37	101828903	16-5, 16-15, 16-29	101869302	6-51
101802101	13-41	101829001	16-11, 16-13, 16-17, 16-31	101870401	1-7
101802201	16-5	101829101	16-11, 16-13	101870501	5-17, 5-21, 5-25
101802202	16-5	101830601	6-41, 6-45, 6-47, 6-49, 13-27, 13-31	101870601	5-23
101802203	16-5	101830701	6-41, 6-45, 6-47, 6-49, 13-27, 13-31	101871001	17-3
101802301	16-11	101831101	16-5, 16-15, 16-17, 16-31	101874601	4-15
101802401	13-47	101831401	13-85, 13-87, 13-89, 13-91	101874901	6-51
101804301	9-15, 9-19, 9-21	101831503	16-7	101875001	6-51
101805701	9-17	101831504	16-7	101875101	6-51
101808401	17-3	101831601	16-13	101875102	6-51
101809101	17-5	101831701	16-7	101875201	6-51
101810501	13-47	101831702	16-7	101875301	6-51
101811301	9-21	101831801	17-5	101875401	6-51
101811401	9-17	101831901	17-3	101875501	6-51
101811501	9-17	101832001	13-41, 13-43, 13-67	101875601	6-51
101811801	9-15	101832202	9-13	101875701	6-51
101811901	9-15	101832302	9-13	101875802	6-51
101812301	9-15	101832601	7-15, 8-15, 8-17	101876001	6-51
101813001	9-15	101832701	7-15, 8-15, 8-17	101876202	6-51
101813202	17-3	101832901	16-21, 16-37	101876301	6-51
101814301	16-11	101833101	7-15, 8-15, 8-17	101876402	6-51
101814302	16-13	101833401	11-9, 11-11	101876501	6-51
101814701	13-31	101833401	11-9, 11-11	101877601	6-51
101815501	4-3	101833601	12-3	101877701	6-51
101815502	4-3	101833701	6-51	101878101	6-51
101816401	4-3	101833902	11-3	101878201	4-7, 4-9
101816501	4-3	101833904	11-5	101878302	5-11
101816502	4-3	101834001	11-9	101879001	6-51
101817401	4-31, 4-33	101834003	11-11	101879401	5-11
101818801	4-31	101834502	6-41, 6-45, 6-47, 6-49, 13-27, 13-31	101879501	5-11
101821501	9-15	101834601	7-15, 8-15, 8-17	101879601	5-11
101822001	4-37	101834801	12-3	101879701	5-11
101823101	17-9	101835601	1-17, 1-19, 1-21, 1-23, 13-47	101879801	5-11
101823201	4-3	101836201	11-9	101879901	5-11
101823801	4-3	101836202	11-11	101880001	5-11
101824401	9-3, 9-5, 9-7	101837101	9-15	101880101	5-11
101825101	3-3, 3-9, 3-21, 3-25, 3-31, 3-33	101837301	6-5, 6-9, 6-13, 6-17, 6-21, 6-53	101880201	5-11
101825102	3-15, 3-29	101838201	16-7, 16-13	101880301	5-11
101825701	9-21	101838301	16-7, 16-13	101880701	4-5, 4-13
		101838401	16-7, 16-9, 16-13, 16-29, 16-31	101881101	7-5, 8-5
		101838501	16-7	101881701	9-15

INDEX

101883002	13-9	101904701	13-9	101926901	12-3
101884801	7-15, 8-15, 8-17	101904702	13-19	101927101	12-3
101884901	2-3, 2-5	101905901	9-9	101927201	12-3
101886101	12-3	101906901	15-5	101927301	12-3
101887101	17-3	101908101	13-37, 13-69	101927501	12-5
101887601	7-3, 8-3	101908401	13-37, 13-69	101927601	12-5
101888501	1-17	101908601	3-5	101927701	12-5
101888502	1-17	101908701	13-45, 13-61, 13-63	101927901	12-5
101889401	12-5	101908801	13-9	101928001	12-5
101890001	12-5	101908901	13-9	101928101	12-5
101890101	12-3	101908902	13-19	101928301	12-7
101890201	12-3	101909201	7-5, 8-5	101928601	12-3
101890501	12-3	101909301	7-5, 8-5	101928701	12-3, 15-5, 17-7
101890601	12-3	101909401	7-5, 8-5	101929401	5-39, 5-41
101890901	12-7	101909501	7-5, 8-5	101929501	9-3, 9-5
101891001	12-7	101909903	13-47	101929801	11-3
101891301	12-3	101909905	13-63	101929802	11-3
101891401	12-7	101910401	13-61	101931501	3-5, 3-21, 3-25, 13-61
101891501	12-7	101910501	12-7	101931601	13-47
101891601	12-5	101911701	13-45, 13-63	101932201	6-47, 6-49, 13-31
101891901	12-5	101912401	4-35	101932401	13-37, 13-39
101892001	12-5	101914401	6-27, 13-25, 16-5, 16-7, 16-11, 16-13, 16-15, 16-17, 16-29, 16-31	101932501	13-37, 13-39
101892201	12-5	101915201	3-7, 3-11, 3-17, 3-27, 3-35	101932601	13-61
101892301	12-5	101916001	7-13, 8-13	101932701	13-61
101892401	12-5	101916101	7-3, 8-3	101933101	17-7
101892501	12-5	101916201	7-5, 8-5	101933701	9-19, 9-21
101892601	12-5	101916301	7-5, 8-5	101935301	4-17, 4-19
101892701	12-7	101916701	6-53, 11-3, 11-5	101935501	13-27, 13-31
101892901	12-3	101917601	9-15	101936801	13-33
101893201	12-5	101917701	9-17	101939901	6-51
101893801	12-3	101918301	13-45, 13-63	101942301	13-37, 13-39, 13-47, 13-63, 14-5, 14-7, 14-9, 14-11, 14-13
101893901	12-5	101918401	2-3, 2-5	101946201	1-17
101894302	1-35	101918402	2-5, 2-7	101951501	12-11
101894303	1-15	101918501	4-7, 4-9, 4-11	101953101	4-21
101894702	1-35	101919801	4-31, 4-33	101953102	4-23, 4-27
101895401	15-5	101920101	13-33, 13-37, 13-39, 13-47, 13-63, 14-5, 14-7, 14-9, 14-13	101953103	4-29
101895501	15-5	101921501	9-15	101953106	4-15, 4-25
101896001	15-3	101921901	3-39	101953801	7-3
101896501	6-51	101922101	15-5	101953802	8-3
101896901	9-7	101922201	15-5	101954301	1-15
101897001	15-5	101922501	13-37	101955001	5-19, 5-23, 5-27
101897201	15-5	101922801	1-25	101955101	6-27, 13-25
101897401	15-5	10192281	1-25	101955301	9-3, 9-5
101897601	15-5	101923001	15-5	101956201	16-9
101898001	6-55	101923201	15-5	101956202	16-9
101900801	4-21, 5-37	101923501	15-5	101957101	6-47, 6-49, 13-31
101900901	6-41, 6-45	101923701	15-5	101957501	13-47
101903001	13-5	101923901	15-5	101958201	16-9, 16-29
101903601	15-5	101924301	13-45, 13-63	101958301	16-9, 16-29
101903701	15-5	101925601	11-3	101958601	1-17, 1-23
101904401	13-9	101925701	9-15	101959902	3-5
101904402	13-19	101926501	5-39, 5-41	101960001	3-19, 3-23, 3-27
101904501	13-9	101926801	9-19	101960101	3-3
101904502	13-19	101926802	9-21	101960201	3-9, 3-15
101904601	13-9			101960501	3-7, 3-11, 3-17, 3-27, 3-35
101904602	13-19				

INDEX

101960601	3-3, 3-9, 3-15, 3-19, 3-23, 3-27, 3-33	102003201	9-3, 9-5	102196601	13-5
101962601	13-47	102003901	5-13	102196901	13-37, 13-39
101963301	1-17	102004101	5-5	102199001	6-27
101963401	1-17, 1-31, 1-35, 7-15, 8-15, 8-17	102004201	5-41	102199601	13-5
101963901	1-17	102004301	1-9	102224001	1-47, 3-35
101964001	1-17	102004601	1-47	102231601	3-35
101964601	3-21, 3-25	102004602	1-47	102235201	14-3, 14-5, 14-7, 14-9, 14-11, 14-13
101965205	13-61	102004801	12-15	102237701	14-3
101966801	13-47, 16-27, 16-37	102004901	5-49	102238001	13-51
101968701	13-5	102006701	3-33	102240102	14-5
101968801	13-47, 16-27, 16-37	102009201	2-9	102240104	14-7
101969701	6-47, 6-49, 13-31	102009202	2-9	102240501	13-57, 13-61, 13-73
101971301	9-15	102009301	2-9	102241501	17-7
101972001	17-7	102009302	2-9	102241502	17-7
101972002	17-7	102009401	2-9	102242101	11-9, 11-11
101972003	17-7	102009402	2-9	102243402	17-7
101972004	17-7	102009501	2-9	102243403	14-3, 14-5, 14-7, 14-9, 14-11, 14-13
101972005	17-7	102009502	2-9	102248803	17-7
101972006	17-7	102009901	2-11	102249901	17-3
101972007	17-7	102009902	2-11	102250201	13-35
101972009	17-7	102010001	2-11	102251501	17-7
101972011	17-7	102010002	2-11	102251901	14-5
101972012	17-7	102022101	4-21, 4-27	102259401	1-41
101972101	15-5	102022601	5-15, 5-27	102259801	13-61
101972201	15-5	102022602	5-15, 5-27	102263601	13-61
101972801	9-15	102025401	4-17, 4-19	102263701	13-61
101973101	9-9	102025901	6-41, 6-45, 6-47, 6-49	102265501	14-5
101973301	9-9	102026001	4-31, 4-33	102265601	14-5, 14-7
101973401	9-11	102031901	12-7	102265701	14-5, 14-7
101973501	16-9, 16-29	102045901	12-3, 12-11, 12-13, 12-15, 12-17	102265801	14-5, 14-7
101976601	16-29	102061201	17-9	102265901	14-5, 14-7
101978001	13-5	102065901	1-19, 1-21, 1-41, 7-15, 8-15, 8-17	102266001	14-5, 14-7
101979101	12-9, 13-35	102066001	1-41	102266101	14-5, 14-7
101980801	12-5	102066201	5-45	102266501	13-61
101980901	12-5	102075801	3-33	102266601	13-37, 13-39
101981001	12-5	102101001	13-33	102266701	13-37, 13-39
101984801	5-3, 5-5	102101101	13-33	102267001	14-5, 14-7
101987501	16-9	102155801	11-9, 11-11	102271601	7-11
101987701	9-3, 9-5	102157301	3-39	102273101	13-45
101987901	6-29, 13-15	102162101	13-9	102273701	16-3
101988001	6-29, 13-15	102162501	13-19	102273801	16-3
101988002	6-29, 13-15	102162601	4-23, 4-29	102273901	16-3
101988101	6-29, 13-15	102166901	4-23, 4-29	102275401	16-15, 16-17, 16-29, 16-31
101988201	6-29, 13-15	102169401	17-7	102278001	5-3, 5-5
101989901	13-19	102185401	9-17, 9-19	102289201	5-15, 5-27
101990102	6-13, 6-33	102186001	14-9, 14-13	102292801	4-15, 4-23, 4-25, 4-29
101990201	6-21, 6-39	102186101	14-9, 14-13	102304801	7-9, 8-9
101990302	6-9, 6-35	102186201	14-9, 14-13	102323101	4-7, 4-9, 4-11, 4-15, 4-23, 4-25, 4-27, 4-29
101990402	6-17, 6-37	102186301	14-9, 14-11, 14-13	102323201	4-7, 4-9, 4-11, 4-15, 4-23, 4-25, 4-27, 4-29
101990703	6-41, 6-45, 6-47, 6-49	102186401	14-9, 14-11, 14-13	102327801	14-5
101990801	4-21, 4-23, 4-25, 4-27, 4-29	102186701	14-9, 14-13	102330901	17-9
101991101	6-41, 6-45, 6-47, 6-49	102186901	14-9, 14-13	102336001	9-13
101997802	13-75, 13-77, 13-79	102187001	14-9	102336101	9-13
101997902	13-79	102187101	14-9, 14-13	102355301	6-55
102002801	13-89, 13-91	102187201	14-9, 14-13		
102002901	13-85, 13-87, 13-89, 13-91	102190702	9-17, 9-19		

INDEX

102356601	15-5	102771701	15-5	102939102	14-11
102356801	15-5	102772401	13-67	102939501	16-29
102357001	15-5	102772402	13-51	102940801	16-17, 16-29, 16-31
102406701	9-7	102774501	13-57, 13-73	102942601	16-19
102430901	7-13, 8-13	102774601	13-57	102951701	14-11
102431001	8-11	102774602	13-73	102980801	13-85, 13-87, 13-89, 13-91
102440901	13-57	102774701	13-57, 13-73	102980901	13-85, 13-87, 13-89, 13-91
102453001	12-5	102775101	14-11	103010101	9-3
102453101	12-5	102806201	13-61	103200701	13-31
102459301	3-5, 3-13, 3-15, 3-33	102810601	13-23, 13-57	103234301	3-41
102518001	3-13, 3-25	102817101	13-57, 13-73	103261301	3-41
102518301	3-13	102817201	13-57, 13-73	103282601	13-61
102519201	3-3, 3-11, 3-21, 3-31, 3-33	102830301	13-89, 13-91	103284101	3-41
102522001	9-7	102834501	13-13, 13-73	103316701	13-61
102540301	7-15, 8-15, 8-17	102837001	16-17	103316801	13-61
102555501	17-3	102838101	13-69, 16-15, 16-17	103316901	13-61
102562401	17-3	102842401	3-43	103325501	14-7
102564002	5-17, 5-25, 5-29	102844001	16-23	103325601	14-7
102569304	2-3	102844002	16-33	103325701	14-7
102570401	17-11	102845101	3-13, 3-25, 13-69	103325801	14-7
102585901	10-3	102845201	13-85	103332402	6-5, 6-31
102588501	5-35, 5-37	102845203	13-53, 13-81, 13-85, 13-87, 13-89	103337601	14-7
102601501	17-5	102845204	13-87, 13-91	103345701	11-3, 11-5
102603501	17-5	102845401	13-13, 13-73	103350901	5-39, 5-43
102605201	17-5	102845501	13-23, 13-57	103351001	5-15, 5-19, 5-27
102606101	17-5	102846402	13-13, 13-73	103351101	5-41, 5-45
102607501	17-5	102847801	16-15	103352701	16-21
102668801	17-9	102847802	16-15	103354701	5-15, 5-27
102669901	17-7	102847803	16-15	103372101	9-7
102674001	17-5	102848701	13-43	103372302	9-7
102674101	17-5	102852101	4-25	103379501	12-11
102674201	17-5	102859501	13-57, 13-73	103380201	4-3
102674401	17-9	102863801	13-73	103380202	4-3
102674601	17-9	102865101	9-3, 9-5	103397901	13-25, 13-57, 16-5, 16-11
102675001	17-5	102871801	5-39, 5-41, 5-43, 5-45	103403101	13-61
102675101	17-5	102873401	13-85, 13-87, 13-89, 13-91	103406501	1-27, 1-33
102675201	17-5	102881401	16-27, 16-37	103406502	1-27, 1-33
102675301	17-5	102886301	15-5	103406601	1-27, 1-33
102675401	17-5	102886401	15-5	103414901	13-25, 13-57, 16-5, 16-11
102683201	3-41	102886501	15-5	103428501	16-3
102683301	3-41	102886601	15-5	103428601	16-3
102684501	5-17, 5-25, 5-29	102891101	5-45	103428701	16-3
102686101	17-3	102892901	16-29	103429001	16-3
102704701	14-9, 14-13	102892902	16-29	103429101	16-3
102704801	14-9, 14-13	102893001	16-31	103429201	16-3
102704901	14-9, 14-11, 14-13	102900501	13-47	103429301	16-3
102705001	14-9	102912801	13-57	103429501	16-3
102711201	6-31, 6-33, 6-39	102915701	13-69	103429701	16-3
102753401	7-9, 8-9	102917101	5-45	103434001	16-3
102764001	13-85, 13-87	102931101	13-73	103439901	16-3
102764401	13-87, 13-91	102938601	14-11	103477901	5-31, 5-33
102764402	13-87, 13-91	102938701	14-11	103483101	4-3
102766201	13-85, 13-87, 13-89, 13-91	102938801	14-11	103483102	4-3
102766301	5-17, 5-21, 5-25, 5-29	102938901	14-11	103483201	4-3
102769701	13-57	102939001	14-11	103483301	4-3
102770701	16-19, 16-23, 16-33	102939101	14-11	103483401	4-3

INDEX

103483501 4-3
103483601 4-3
103483701 4-3
103502701 5-21, 5-29
103507001 5-17, 5-21, 5-25
103512801 16-3
103512901 16-3
103513001 16-3
103517401 16-3
103520301 9-17
103520401 9-19
103538701 1-19, 1-21, 1-41
103538901 1-19, 1-21, 1-41
103601601 5-3
103628801 5-21, 5-29
103651901 9-7
103653501 5-15, 5-27
103717001 16-3
103717002 16-3
103717003 16-3
103717302 5-33
103717402 5-33
103776901 9-7
103779601 16-3
103781101 9-3
103781201 9-3
96704416 7-15, 8-15, 8-17

A

absorber, rear shock 5-35, 5-37
absorber, shock 5-23
AC cord 16-5, 16-7, 16-9, 16-11, 16-13, 16-15,
16-17, 16-29, 16-31
AC cord bushing 16-3
AC cord receptacle 16-9, 16-29
AC cordset 16-3
accelerator bracket and bearing assembly
4-31, 4-33
accelerator cable 9-13
accelerator pedal 4-31, 4-33
accelerator pedal adjustment tool 17-3
accelerator pivot rod 4-31, 4-33
accelerator return spring 4-31, 4-33
accelerator rod 4-35, 4-37, 4-39
access door hinge 1-39
access door plate 1-39
adapter
cable (IQDM) 17-7
adhesive, guide ring 17-3
adjuster
hydraulic brake 17-7
adjuster, lash 7-11, 8-11
air box 9-15
air box top 9-15
air duct shield 9-17, 9-19
air filter 9-15

air intake hose 9-15
ammeter 16-3, 16-5, 16-7, 16-9, 16-11, 16-13,
16-15, 16-17, 16-29, 16-31
anchor body 4-5, 4-13
anchor body kit 4-5, 4-13
anchor, piston 4-5, 4-13
angled bumper mount 5-35
anti-sway bar 5-47, 5-49
A-plate strap 5-15, 5-19, 5-23, 5-27
A-plate, delta 5-15, 5-19, 5-23, 5-27
arbor 17-3
arm
governor 12-3
pivot 12-3
rocker 7-9, 8-9
armature 6-51, 14-3, 14-5, 14-7, 14-9, 14-11,
14-13
armature conversion kit 6-51
armrest 1-17
assembly
accelerator bracket and bearing 4-31, 4-33
accelerator pivot rod 4-31, 4-33
air box 9-15
air box top 9-15
armature 6-51
axle 12-7
bearing, steering shaft 5-3, 5-5
bell crank and shaft 6-31, 6-33, 6-35, 6-37,
6-39
brake lever 4-3
brush connector 6-51
brush holder 6-51
carburetor 9-9
choke cable 9-19
connecting rod 7-13, 8-13
cylinder head 7-9, 8-9
delta A-plate 5-15, 5-19, 5-23, 5-27
delta shock and gear support 5-15, 5-19,
5-23, 5-27
diode 13-45
drive clutch 11-5
drive hub 11-3, 11-5
driven clutch 11-9
driven clutch fixed-face 11-9, 11-11
field coil 6-51
float 9-9
Forward/Reverse shifter 12-9
frame and field (motor) 14-9, 14-13
front panel 1-27
fuel tank vent 9-7
governor 12-5
headlight 6-29, 13-15
headlight harness 6-29, 13-15
idle screw 9-9
inner ball joint 5-11
kingpin 5-17, 5-21, 5-25, 5-29

latch weld 1-19, 1-21
moveable-face 11-3, 11-5, 11-9, 11-11
pilot air screw 9-9
plug cap 7-5, 8-5
prop rod support 1-25
ratchet 4-7, 4-9, 4-11
score card plate 5-7
secondary clutch weight 11-3, 11-5
side panel 1-27
steering shaft 5-3, 5-5
steering wheel 5-7, 5-9
tailgate 1-27
tilt bed 1-21
transmission cable 12-13, 12-15
turn signal lens 6-29, 13-15

axle 12-7, 15-3, 15-5
axle shaft oil seal 12-7, 15-5
axle tube 15-5

B

backing plate, brake 4-5, 4-13
bag, desiccant 11-3, 11-5
ball bearing 7-11, 8-11
ball joint 4-7, 4-9, 4-11, 4-35, 4-37, 4-39, 5-11,
5-19, 5-23, 12-11, 12-13, 12-15, 12-17
ball joint, left-hand thread 5-11, 5-19, 5-23
ball stud 6-31, 6-33, 6-35, 6-37, 6-39, 12-3, 12-9
ball, shifter 12-5
ball, steel pressure relief 7-7, 8-7
band, RPM limiter mount 7-5, 8-5
bar, drive 13-33
bar, stabilizer 5-47, 5-49
barb, vent 9-3, 9-5, 9-7
barrel, plastic 1-7, 1-9, 1-17, 1-27, 1-33
battery 6-55
8-volt 13-53, 13-59, 13-81
8-volt moist 13-53, 13-59, 13-81
battery cap 13-53, 13-59, 13-81
battery cap, 6-volt 13-85, 13-87, 13-89, 13-91
battery charger 16-5, 16-7, 16-9, 16-15, 16-29,
16-33
battery charger and reel 16-11, 16-13
battery charger case 16-5, 16-7, 16-9, 16-11,
16-13, 16-15, 16-17, 16-29, 16-31
battery charger harness 16-27, 16-37
battery charger mounting plate 16-23
battery charger receptacle 13-41, 13-43
battery charger retainer 16-37
battery charger shield 16-21
battery charger transformer 16-5, 16-7, 16-9,
16-11, 16-13, 16-15, 16-17, 16-29, 16-31
battery charger wire assembly 16-29
battery charger, onboard 16-11, 16-17, 16-31
battery clamp 6-55
battery condition indicator, 48-volt 13-31
battery discharge machine 17-3

INDEX

- battery hold-down 13-53, 13-59, 13-81, 13-85, 13-87, 13-89, 13-91
- battery hold-down rod 13-53, 13-81, 13-85, 13-87, 13-89, 13-91
- battery terminal protector spray 17-3
- battery thermometer 17-3
- battery warning light 13-27, 13-31
- battery, 6-volt, Trojan T105 13-85, 13-89
- battery, 6-volt, Trojan T105, moist 13-85, 13-89
- battery, 6-volt, Trojan T145 13-87, 13-91
- battery, 6-volt, Trojan T145, moist 13-87, 13-91
- bearing 15-5
 - ball 7-11, 8-11
 - ball (motor) 14-9, 14-11, 14-13
 - ball (steering pinion) 5-11
 - front wheel hub 5-31, 5-33
 - hub 5-31, 5-33
 - idler 11-3, 11-5
 - inner axle tube 12-7, 15-5
 - lower pinion (steering) 5-11
 - needle 12-5
 - outer axle tube 12-7
 - pivot support 4-31, 4-33
 - steering shaft 5-3, 5-5
 - thrust 5-17, 5-21, 5-25, 5-29
- bearing and oil seal remover 17-3
- bearing driver set 17-3
- bearing puller 17-3
- bearing puller wedge 17-3
- bearing retainer 14-3, 14-5, 14-7
- bearing seal 5-3, 5-5
- bearing seat 5-3, 5-5
- bed assembly, long 1-39
- bed floor plate 1-21
- bed floor plate, forward 1-39
- bed floor plate, rear 1-39
- bed frame assembly 1-19
- bed frame, long 1-39
- bed latch 1-27, 1-33
- bed latch spring 1-27, 1-33
- bed seal 1-19, 1-21
- bed, floor plate 1-19
- bed, tilt 1-19, 1-21
- bell crank 12-9
- bell crank and shaft 6-31, 6-33, 6-35, 6-37, 6-39
- bellows 5-11
- belt, drive 11-7
- belt, starter/generator 6-53, 11-3, 11-5
- bezel, choke cable 9-19, 9-21
- bezel, headlight 6-29, 13-15
- block, brake-mounting 4-7, 4-9, 4-11
- block, fuse 6-31, 6-33, 6-35, 6-37, 6-39, 13-45
- block, terminal 6-27, 13-25, 13-47, 13-51, 13-67
- body, anchor 4-5, 4-13
- body, front 1-5
- bolt, J- 13-59
- bolt, U- 5-35, 5-37, 5-45
- boot, steering column 5-3, 5-5
- boot, switch 13-37, 13-69
- bottom, air box 9-15
- box
 - air 9-15
 - cargo 1-27, 1-33
 - electrical component 6-31, 6-33, 6-35, 6-37, 6-39
 - steering gear 5-11
- brace, trailer hitch 1-43
- bracket 5-39, 5-41, 6-41, 6-45, 6-47, 6-49
 - accelerator cable 9-13
 - adjustable starter/generator 6-53
 - battery charger 16-11, 16-13
 - brake cable guide 5-19, 5-23, 5-27
 - brake light switch 6-47, 6-49, 13-31
 - governor cable 9-13
 - headlight mounting 6-29, 13-15
 - horn 6-27, 13-25
 - hour meter 13-75, 13-79
 - muffler mounting 10-3, 10-5
 - oil filter mount 7-7, 8-7
 - oil level switch 7-11, 8-11
 - relay mounting 6-35, 6-37, 16-7, 16-11, 16-13, 16-17, 16-31
 - retaining 9-21
 - RPM limiter 7-5, 8-5
 - shifter 12-3, 12-11, 12-13, 12-15, 12-17
 - shock absorber 5-35, 5-37, 5-43, 5-45
 - shock mounting 5-35, 5-37, 5-43, 5-45
 - snubber 7-15, 8-15, 8-17
 - stabilizer bar mounting 5-47, 5-49
 - stake side 1-39
 - starter/generator mounting 6-53
 - steering column 5-3, 5-5
 - steering column mounting 5-3, 5-5
 - throttle spring return 9-11
 - Tow/Run switch 13-37
- brake actuator kit 4-5, 4-13
- brake adjusting mechanism 4-3
- brake adjustment tool 17-3
- brake backing plate 4-5, 4-13
- brake cable 4-15, 4-21, 4-23, 4-25, 4-27, 4-29
- brake cable equalizer 4-15, 4-21, 4-23, 4-25, 4-27, 4-29
- brake cable hanger 4-21, 5-35, 5-37, 5-39, 5-41, 5-43
- brake cable release tool 17-3
- brake cluster 4-5, 4-13
- brake drum 4-3, 4-5, 4-13
- brake lever 4-3
- brake lever arm 4-5, 4-13
- brake light switch bracket 6-47, 6-49, 13-31
- brake mounting block 4-7, 4-9, 4-11
- brake pedal 4-7, 4-9
 - pedal, brake 4-11
- brake pedal adjustment tool 17-3
- brake pedal pad 4-7, 4-9, 4-11
- brake pedal tension tool 17-3
- brake return spring 4-21, 4-23, 4-25, 4-27, 4-29
- brake self-adjusting mechanism 4-3
- brake shoe 4-3, 4-5, 4-13
- brake spring 4-3, 4-5, 4-13
- breaker, circuit 16-3, 16-5, 16-7, 16-9, 16-11, 16-13, 16-29, 16-31
- breather 12-3, 15-5
- brush 14-3, 14-5, 14-7, 14-9, 14-13
- brush and screw set 6-51
- brush box assembly 14-9, 14-11, 14-13
- brush connector 6-51
- brush guard 1-9
- brush holder 6-51
- brush inspection port cover 6-51
- brush kit, motor 14-11
- brush port cover 6-51
- brush rigging 14-3, 14-5, 14-7, 14-9, 14-11, 14-13
- brush spring 14-3, 14-5, 14-7, 14-9, 14-11, 14-13
- brush spring set 6-51
- brush, motor 14-11
- bulb, headlight 6-29, 13-15
- bulb, tail light 6-57, 13-81
- bumper
 - drive unit (motor) 14-3, 14-5, 14-7, 14-9, 14-11, 14-13
 - front 1-3, 1-5, 1-7, 1-9
 - front, heavy duty 1-3, 1-7
 - front, kit 1-3, 1-5, 1-7, 1-9
 - jounce 5-35, 5-37
 - rear 1-49
 - rubber 1-23, 1-41, 4-7, 4-9, 4-11
 - seal, long 1-15
 - spring return 4-31, 4-33
- bumper mount 5-37
- bumper mount, angled 5-35
- bumper mounting 1-49
- bumper, heavy duty 1-3, 1-7
- bumper, seat 1-15
- bushing 11-3, 11-5
 - AC cord 16-3
 - bronze 5-31, 5-33
 - nylon 1-27, 1-31, 1-33, 1-35, 4-7, 4-9, 4-11
 - return line 9-7
 - snap-in 1-27, 1-33
 - spindle 5-31, 5-33
 - stabilizer bar 5-47, 5-49
 - steel 1-19, 1-21, 1-41, 5-17, 5-21, 5-25, 5-29, 5-35, 5-37, 5-39, 5-41, 5-43, 5-45
 - urethane 1-19, 1-21, 1-41, 5-15, 5-17, 5-19, 5-21, 5-23, 5-25, 5-27, 5-29, 5-35, 5-37, 5-39, 5-41, 5-43, 5-45

INDEX

- bushing support 5-47, 5-49
 - bushing, insulated 14-3, 14-5, 14-7
 - Buss bar 13-35
 - button, choke 9-17
 - button, drive 11-9, 11-11
 - buzzer, reverse 6-27, 6-41, 6-45, 6-57, 13-25, 13-27, 13-83
- ## C
- cable
 - accelerator 9-13
 - brake 4-15, 4-21, 4-23, 4-25, 4-27, 4-29
 - choke 9-19, 9-21
 - FNR shifter 12-17
 - governor 9-13
 - IQDM 17-7
 - transmission 12-11, 12-13, 12-15
 - cable retainer 12-11
 - calibration test module 17-3
 - cam
 - driven clutch 11-9, 11-11
 - electrical component box 6-31, 6-33, 6-35, 6-37, 6-39
 - neutral lockout 12-9
 - cam installation tool 17-3
 - camshaft 7-11, 8-11
 - camshaft shim 7-11, 8-11
 - camshaft spring 7-11
 - cap
 - battery 13-53, 13-59, 13-81
 - battery, 6-volt 13-85, 13-87, 13-89, 13-91
 - corner 1-17, 1-31, 1-35
 - dust 13-37, 13-39
 - key switch 6-41, 6-45, 6-47, 6-49, 13-27, 13-31
 - plug 7-5, 8-5
 - seat back 1-17
 - carburetor 9-9
 - carburetor float level tool 17-7
 - carburetor gasket 9-11
 - carburetor insulator 9-11, 14-3, 14-5, 14-7
 - carburetor mounting gasket 9-11
 - card, safety first 17-9
 - cargo bed, side panel 1-27, 1-33
 - cargo box 1-27, 1-33
 - case
 - battery charger 16-5, 16-7, 16-9, 16-11, 16-13, 16-15, 16-17, 16-29, 16-31
 - differential gear 12-7
 - FNR switch 13-37, 13-39
 - gear 12-3, 15-5
 - rocker 7-9, 8-9
 - case, charger 16-3
 - charger bezel tool 17-3
 - charger board relay 16-3
 - charger case 16-3
 - charger hardware 16-3
 - charger legs 16-3
 - charger receptacle 13-41, 13-43
 - charger, battery 16-5, 16-15, 16-29, 16-33
 - charger, battery, onboard 16-11, 16-17, 16-31
 - charger, battery, shield 16-21
 - choke button 9-17
 - choke cable 9-19, 9-21
 - choke cable bezel 9-19, 9-21
 - choke lever 9-17
 - choke lever guide 9-17
 - choke positioner 9-17
 - choke valve 9-15
 - circuit breaker 13-69, 16-3, 16-5, 16-7, 16-9, 16-11, 16-13, 16-15, 16-17, 16-29, 16-31
 - clamp
 - battery 6-55
 - cable retaining 9-13
 - hose 9-3, 9-5, 9-7, 9-11, 9-15
 - muffler hose 10-3, 10-5
 - clevis, upper delta 5-17, 5-21, 5-25, 5-29
 - clip, angle 1-37
 - clip, rod 1-41
 - clip, score card 5-7
 - cluster idler gear 12-5
 - cluster, brake 4-5, 4-13
 - clutch alignment tool 17-5
 - clutch pulley 11-3
 - clutch removal tool 17-3
 - clutch repair kit 11-9, 11-11
 - clutch tool kit 17-5
 - clutch weight 11-3, 11-5
 - clutch, drive 11-3
 - clutch, driven 11-9, 11-11
 - coil, field 6-51
 - coil, ignition 7-5, 8-5
 - collet 7-9, 8-9
 - column, steering 5-3, 5-5
 - communication display module 17-5
 - component box, electrical 6-31, 6-33, 6-35, 6-37, 6-39
 - component cover 13-47
 - component mounting plate 13-45, 13-57, 13-61, 13-63, 13-73
 - component mounting plate cover 13-51
 - compression gauge 17-5
 - compression lug 13-47, 13-61, 13-63
 - compression mount 5-47, 5-49
 - compression spring 9-17
 - compressor, piston ring 17-9
 - compressor, valve spring 17-11
 - computer, onboard 13-47, 13-57, 13-61, 13-63, 13-73
 - connecting rod 7-13, 8-13
 - connector, a- 6-51
 - connector, four-pin 13-37, 13-39
 - connector, speed controller 13-61
 - continuity tester 17-5
 - control board 16-11, 16-13, 16-17, 16-31
 - controller cover 13-61
 - controller cover gasket 13-61
 - controller, motor speed 13-61
 - controller, speed 13-45, 13-57, 13-63, 13-73
 - cord connector 7-11, 8-11
 - cord reel 16-11, 16-13, 16-19, 16-21, 16-23, 16-27, 16-33, 16-37
 - cord, AC 16-5, 16-7, 16-9, 16-11, 16-13, 16-15, 16-17, 16-29, 16-31
 - cord, DC 16-5, 16-7, 16-9, 16-11, 16-13, 16-15, 16-17, 16-29, 16-31
 - Cordset
 - PD3, AC 114" 16-3
 - PD3, AC 80" 16-3
 - PD3, DC 113" 16-3
 - PD3, DC 154" 16-3
 - PD3, DC 205" 16-3
 - counterbalance guide shaft 7-13, 8-13
 - counterbalance weight 7-13, 8-13
 - cover
 - brush inspection port 6-51
 - brush port 6-51
 - component 13-47
 - crankcase 7-11, 8-11
 - dust 4-5, 4-13, 5-3, 5-5, 5-31, 5-33
 - electrical box 6-31, 6-33, 6-35, 6-37, 6-39
 - electrical component 13-67
 - fuse block 13-45
 - oil pump 7-7, 8-7
 - screw head 1-11
 - steering column tube 5-3, 5-5
 - cover gasket, controller 13-61
 - cover plate 14-9, 14-13
 - cover, controller 13-61
 - cover, speed controller 13-61
 - cowl 1-3, 1-5, 1-7, 1-9
 - crank, bell 12-9
 - crankcase 7-13, 8-13
 - crankcase cover 7-11, 8-11
 - crankcase vent tube 9-11
 - crankshaft 7-13, 8-13
 - crankshaft rod 7-13, 8-13
 - crankshaft shim 7-13, 8-13
 - C-type stop ring 5-11
 - cup holder 1-13
 - cup, spring 4-31, 4-33
 - current limiter 16-9, 16-29
 - cushion, shock absorber 5-35, 5-37, 5-39, 5-41, 5-43, 5-45
 - cutter, valve seat 17-5, 17-11
- ## D
- damper, RPM limiter 7-5, 8-5

INDEX

- dash component 1-11
 - dash panel 1-11
 - DC cord 16-5, 16-7, 16-9, 16-11, 16-13, 16-15, 16-17, 16-29, 16-31
 - DC cordset 16-3
 - decal
 - battery danger 3-5, 3-13, 3-19, 3-23
 - bed hold-down bolts 3-21, 3-25, 3-29, 3-31
 - bed load warning 1-27, 1-33, 3-3, 3-9, 3-15, 3-19, 3-23, 3-27, 3-33
 - Carryall 3-41
 - Carryall 1 3-37
 - Carryall 2 3-37
 - Carryall 2 Plus 3-37
 - Carryall 252 3-41
 - Carryall 6 3-39
 - Club Car/Ingersoll-Rand 3-39
 - component cover 3-5, 3-21, 3-25, 13-61
 - crush area warning 3-3, 3-5, 3-9, 3-13, 3-15, 3-19, 3-23, 3-27, 3-33
 - dash warning 3-3, 3-9, 3-15, 3-19, 3-23, 3-27, 3-33
 - driver/passenger 3-7, 3-11, 3-17, 3-27, 3-35
 - electrical cover safety 3-13
 - frame ground 3-7, 3-11, 3-17, 3-27, 3-35
 - IQ Plus 3-43
 - IR 3-41
 - key switch 3-15, 3-29
 - motor braking 3-5
 - no ground warning 3-21, 3-25
 - on/off 3-3, 3-9, 3-21, 3-25, 3-31, 3-33
 - operating instructions 3-15, 3-29
 - operating instructions (electric) 3-13, 3-25
 - operating instructions (gas) 3-3, 3-11, 3-21, 3-31, 3-33
 - rotating parts 1-47, 3-7, 3-11, 3-17, 3-27, 3-35
 - tailgate 1-27, 1-33, 3-37, 3-41
 - Tow/Run switch 3-13, 3-25, 13-69
 - Tow/Run switch warning 3-5
 - trailer hitch 1-43, 3-5, 3-7, 3-9, 3-17, 3-35
 - Turf 1 3-37
 - Turf 2 3-37
 - Turf 252 3-41
 - Turf 6 3-39
 - vehicle loading 3-3, 3-9, 3-15, 3-19, 3-23, 3-27, 3-33
 - winch cable warning 3-35
 - young driver warning 3-33
 - delta A-plate 5-15, 5-19, 5-23, 5-27
 - delta A-plate sub-assembly 5-15, 5-19, 5-23, 5-27
 - delta shock and gear support 5-15, 5-19, 5-23, 5-27
 - desiccant bag 11-3, 11-5
 - DF-terminal insulator 6-51
 - diesel tachometer probe 17-9
 - differential 15-3
 - drive unit 15-5
 - differential gear 12-7, 15-5
 - differential gear case 12-7
 - differential housing 15-5
 - differential idler gear 12-7
 - differential pin 12-7
 - diode 6-31, 6-33, 6-35, 6-37, 6-39, 13-45, 13-61, 13-63
 - dipstick 7-3, 8-3
 - door 1-37
 - door assembly 1-37
 - door latch 1-37, 1-39
 - drain plug 7-7, 8-7
 - drain plug gasket 7-7, 8-7, 12-3
 - drive bar 13-33
 - drive belt 11-7
 - drive button 11-9, 11-11
 - drive clutch 11-3
 - drive clutch assembly 11-5
 - drive clutch button 11-3, 11-5
 - drive clutch fixed sheave tool 17-5
 - drive clutch fixed-face 11-3, 11-5
 - drive clutch holder tool 17-5
 - drive clutch hub puller 17-5
 - drive clutch puller 17-5
 - drive clutch pulley 11-5
 - drive clutch spider removal tool 17-5
 - drive clutch spring 11-3, 11-5
 - drive clutch weight 11-3, 11-5
 - drive hub 11-3, 11-5
 - drive unit 15-3
 - drive unit bumper 14-3, 14-5, 14-7, 14-9, 14-11, 14-13
 - driven clutch 11-9, 11-11
 - driven clutch button 11-9, 11-11
 - driven clutch cam 11-9, 11-11
 - driven clutch cam puller 17-5
 - driven clutch fixed-face assembly 11-9, 11-11
 - driven clutch puller plug 17-5
 - driven clutch spring compression base tool 17-5
 - driven clutch spring compression collar tool 17-5
 - driven clutch spring compression nut tool 17-5
 - driver, drive clutch 11-3, 11-5
 - drum, brake 4-3, 4-5, 4-13
 - dry moly lubricant 17-7
 - duct, intake 9-21
 - dust cap 13-37, 13-39
 - dust cover 4-5, 4-13, 5-3, 5-5, 5-31, 5-33
- E**
- E-clip 4-15, 4-21, 4-23, 4-25, 4-27, 4-29
 - electrical box cover 6-31, 6-33, 6-35, 6-37, 6-39
 - electrical component box 6-31, 6-33, 6-35, 6-37, 6-39
 - electrical component cover 13-67
 - electrical component mounting plate 13-45, 13-57, 13-63, 13-73
 - end bell, commutator 6-51
 - end bell, output shaft 6-51
 - end cap, motor 14-3, 14-5, 14-7, 14-9, 14-11, 14-13
 - end shield
 - motor 14-5, 14-7
 - end, tie rod 5-15, 5-27
 - engine 7-3
 - engine mounting plate 7-15, 8-15, 8-17
 - engine shroud 7-3, 8-3
 - engine, FE350 CW without ACR 8-3
 - equalizer pivot 4-15
 - equalizer rod 4-15, 4-21, 4-23, 4-25, 4-27, 4-29
 - equalizer, brake cable 4-15, 4-21, 4-23, 4-25, 4-27, 4-29
 - exhaust system 10-3, 10-5
 - exhaust valve 7-9, 8-9
 - extension, FNR shifter bracket 12-15
 - extension, I-beam 5-13
 - extension, spring latch 1-19, 1-21
 - extrusion 13-61
 - extrusion, fender 1-7
- F**
- face, moveable 11-3, 11-5, 11-9, 11-11
 - fan housing 7-3, 8-3
 - fan shroud 7-3, 8-3
 - fan, flywheel 7-5, 8-5
 - fender 1-47
 - fender extrusion 1-7
 - fender, rear 1-45, 1-47, 1-49
 - field coil 6-51
 - field coil housing 6-51
 - fill plug 12-3
 - filter
 - air 9-15
 - fuel 9-3, 9-5
 - oil 7-7, 8-7
 - oil pump 7-7, 8-7
 - fitting, thread-forming grease 5-11, 5-19, 5-23, 5-31, 5-33
 - fixed-face, drive clutch 11-3, 11-5
 - fixed-face, driven clutch 11-9, 11-11
 - float 9-9
 - floor mat 1-9, 1-11, 1-37
 - floor plate, bed 1-21
 - flywheel 7-5, 8-5
 - flywheel fan 7-5, 8-5
 - flywheel fan plate 7-5, 8-5
 - flywheel puller 17-7
 - FNR handle 12-9, 13-35

INDEX

FNR shifter base 12-9
FNR shifter cable 12-17
FNR switch 13-35
FNR switch case 13-37, 13-39
fork, shift 12-5
Forward/Reverse shifter 12-9
frame and field assembly (motor) 14-9, 14-13
frame and field, motor 14-11
frame, tilt bed 1-21
front body 1-5
front bumper 1-3, 1-5, 1-7, 1-9
front bumper kit 1-3, 1-5, 1-7, 1-9
front panel 1-27
front spring retainer plate 5-17, 5-21, 5-25, 5-29
front suspension 5-15
front suspension sub-assembly 5-27
F-terminal hardware 6-51
f-terminal insulator 6-51
fuel filter 9-3, 9-5
fuel gauge sending unit 9-7
fuel gauge/hour meter 6-41, 6-45, 6-47, 6-49
fuel line 9-3, 9-5, 9-7, 9-11
fuel pump mount 9-3, 9-5
fuel pump, impulse 9-5
fuel tank 9-7
fuel tank strap 9-3, 9-5
fuel tank vent 9-7
fuse 13-41, 13-43, 16-5, 16-7, 16-9, 16-11, 16-13, 16-15, 16-17, 16-29, 16-31
 10-amp 6-31, 6-33, 6-35, 6-37, 6-39
 20-amp 6-31, 6-33, 6-35, 6-37, 6-39, 13-45
 3/8-amp 13-41, 13-43, 13-47
 charger 16-3
fuse and receptacle 13-43
fuse block 6-31, 6-33, 6-35, 6-37, 6-39, 13-45
fuse block cover 13-45

G

gasket 15-5
 carburetor 9-11
 carburetor mounting 9-9, 9-11
 crankcase cover 7-9, 7-11, 8-9, 8-11
 drain plug 7-7, 8-7, 12-3
 exhaust 7-9, 8-9, 10-3, 10-5
 head 7-9, 8-9
 insulator 7-9, 8-9, 9-11
 liquid 12-3, 15-5, 17-7
 rocker case 7-9, 8-9
 sending unit 9-7
 taillight 6-57, 13-81
 voltage limiter 13-47
gasket kit, FE350 7-9, 8-9
gasket, controller cover 13-61
gauge, compression 17-5
gauge, fuel/hour 6-41, 6-45, 6-47, 6-49

gear
 case 12-3, 15-5
 cluster idler 12-5
 differential 12-7, 15-5
 differential idler 12-7, 15-5
 differential output 15-5
 helical 7-13, 8-13, 12-5, 12-7
 spur 7-13, 8-13, 12-5
 synchro 12-5
gear yoke 17-7
governor 12-5
governor arm 12-3
governor cable 9-13
governor cable bracket 9-13
governor shaft installation tool 17-7
grip, pencil 5-7
grip, tilt latch hand 1-19, 1-21, 1-27, 1-33
grommet 9-7, 9-21, 13-47
guard, brush 1-9
guide
 choke lever 9-17
 intake valve 7-9, 8-9
 valve 7-9, 8-9
 valve seat cutter 17-11
guide ring adhesive 17-3

H

handle, FNR 12-9, 13-35
hanger, brake cable 4-21, 5-35, 5-37, 5-39, 5-41, 5-43
hardware kit, charger 16-3
hardware, F-terminal 6-51
harness, battery charger 16-27, 16-37
harness, wire 6-5, 6-9, 6-13, 6-17, 6-21, 6-25, 6-31, 6-33, 6-35, 6-37, 6-39, 13-5, 13-9, 13-13, 13-19, 13-23, 13-57, 13-73
harness, wire, headlight 6-13, 6-43, 13-29
head gasket 7-9, 8-9
head, cylinder 7-9, 8-9
headband, sealed, motor 14-11
headband, vented, motor 14-11
headlight assembly 6-29, 13-15
headlight bulb 6-29, 13-15
headlight harness 6-29, 13-15
headlight retainer 6-29, 13-15
headlight wire harness 6-13, 6-43, 13-29
heat shrink tube 16-11, 16-13, 16-19, 16-23, 16-33
heatsink and rectifier 16-5, 16-7, 16-9, 16-11, 16-13, 16-15, 16-17, 16-29, 16-31
heavy duty bumper 1-3, 1-7
helical gear 7-13, 8-13, 12-5, 12-7
hill brake rod 4-7, 4-9, 4-11
hill brake weld assembly 4-7, 4-9, 4-11
hinge, access door 1-39
hinge, door 1-37

hitch, trailer 1-43
hold-down rod, battery 13-53, 13-81, 13-85, 13-87, 13-89, 13-91
hold-down, battery 13-53, 13-59, 13-81, 13-85, 13-87, 13-89, 13-91
holder, cup 1-13
horn 6-27, 13-25
horn bracket 6-27, 13-25
horn button and wire assembly 6-47, 6-49, 13-31
hose, air intake 9-15
hose, fuel 9-3, 9-5
hour meter 13-75, 13-77, 13-79
hour meter/fuel gauge 6-41, 6-45, 6-47, 6-49
housing
 2-pin 13-33
 3-pin 13-33, 13-37, 13-39, 13-47, 13-63, 14-5, 14-7, 14-9, 14-11, 14-13
 4-pin 13-37, 13-39
 6-pin 13-61
 differential 15-5
 fan 7-3, 8-3
 field coil 6-51
hub 5-31, 5-33
hub bearing 5-31, 5-33
hub, synchronizer clutch 12-5
hydraulic brake adjuster 17-7
hydrometer 17-7

I

I-beam extension 5-13
idle screw assembly 9-9
idler bearing 11-3, 11-5
idler gear, differential 15-5
ignition coil 7-5, 8-5
inner frame snubber 7-15, 8-15, 8-17
input shaft 15-5
insert, synchronizer 12-5
instrument panel 1-11
insulated bushing 14-3, 14-5, 14-7
insulating washer 14-11
insulator gasket 7-9, 8-9, 9-11
insulator, carburetor 9-11, 14-3, 14-5, 14-7
insulator, motor terminal 14-11
intake duct 9-21
intake pipe 9-11
intake valve 7-9, 8-9
intermediate shaft 15-5
internal retaining ring pliers 17-7
IQ display module (IQDM) 17-7

J

J-bolt 13-59
jet, main 9-9
jet, pilot 9-9
joint

INDEX

ball 4-7, 4-9, 4-11, 4-35, 4-37, 4-39, 5-19,
5-23, 12-11, 12-13, 12-15, 12-17
left-hand thread ball 5-11, 5-19, 5-23
steering 5-5
jounce bumper 5-35, 5-37

K

key

crankshaft 7-5, 7-13, 8-5, 8-13
driven clutch 11-9, 11-11
On/Off 6-41, 6-45, 6-47, 6-49, 13-27, 13-31
square 11-9, 11-11
starter/generator 6-51
woodruff 12-3
key switch 6-41, 6-45, 6-47, 6-49
key switch cap 6-41, 6-45, 6-47, 6-49, 13-27,
13-31
key switch, On/Off 13-27, 13-31
kingpin 5-17, 5-21, 5-25, 5-29

kit

2-pin housing 13-33
3-pin housing 13-33, 13-37, 13-39, 13-47,
13-63, 14-5, 14-7, 14-9, 14-11, 14-13
4-pin housing 13-37, 13-39
6-pin housing 13-61
accelerator pivot rod 4-31, 4-33
anchor body 4-5, 4-13
brake cable 4-21, 4-27
brake pedal 4-7, 4-9
brake pedal adjustment tool 17-3
brake shoe retainer 4-5, 4-13
clutch repair 11-9, 11-11
differential gear case 12-7
drive clutch button 11-3, 11-5
drive clutch weight 11-3, 11-5
driven clutch button 11-9, 11-11
fuel tank 9-7
impulse fuel pump rebuild 9-3, 9-5
IQ display module (IQDM) 17-7
magnet and bearing 14-5, 14-7
motor brush 14-9, 14-11, 14-13
motor brush spring 14-9, 14-13
motor cover plate 14-9, 14-13
motor speed sensor 14-9, 14-11, 14-13
motor terminal hardware 14-9, 14-13
neutral lockout cam 12-9
park brake latch 4-7, 4-9, 4-11
park brake pedal 4-7, 4-9, 4-11
PD3 Cordest, AC 114" 16-3
PD3 Cordest, AC 80" 16-3
PD3 Cordest, DC 113" 16-3
PD3 Cordest, DC 154" 16-3
PD3 Cordest, DC 205" 16-3
PD3 hardware 16-3
reverse buzzer 6-27, 6-41, 6-45, 6-57, 13-25,
13-27, 13-83

shock absorber 5-35, 5-37
shock absorber cushion 5-35, 5-37, 5-39,
5-41, 5-43, 5-45
steering column rebuild 5-3, 5-5
tune-up 17-9
kit, taillight mounting 1-27, 1-33
knob, light switch 6-43, 6-47, 6-49, 13-29, 13-31

L

lash adjuster 7-11, 8-11
latch plate, tilt bed 1-23
latch weld 1-19, 1-21
latch, air box 9-15
latch, bed 1-27, 1-33
latch, door 1-37, 1-39
latch, park brake 4-7, 4-9, 4-11
L-bracket, motor 14-9
leaf spring 5-35, 5-37, 5-39, 5-41, 5-43, 5-45
legs, charger 16-3
lens, headlight 6-29, 13-15
lens, taillight 6-57, 13-81
lever
change 12-3
choke 9-15, 9-17
transmission shifter 12-3
light
battery warning 13-27, 13-31
oil 6-41, 6-45, 6-47, 6-49
tail 6-57, 13-81
light switch 6-43, 6-47, 6-49, 13-29, 13-31
light switch knob 6-43, 6-47, 6-49, 13-29, 13-31
limit switch 6-31, 6-33, 6-35, 6-37, 6-39, 6-47,
6-49, 12-9, 13-31, 13-35
limiter
current 16-9, 16-29
RPM 7-5, 8-5
voltage 6-27, 6-43, 13-47
line, fuel 9-3, 9-5, 9-7, 9-11
link, rack and pinion drag 5-11
link, stabilizer bar 5-47, 5-49
liquid gasket 12-3, 15-5, 17-7
low oil warning light 6-41, 6-45, 6-47, 6-49
lubricant, dry moly 17-7
lubricant, moly-teflon 14-3, 14-5, 14-7, 14-9,
14-11, 14-13, 17-7
lug nut 2-3, 2-5, 2-7, 2-9, 2-11
lug stud 12-7, 15-5
lug, compression 13-47, 13-61, 13-63

M

magnet and bearing kit 14-5, 14-7
magnet, speed sensor 14-5, 14-7, 14-9, 14-11,
14-13
main jet 9-9
mat, floor 1-9, 1-11, 1-37
MCOR 13-33

mechanism, brake adjusting 4-3
meter, hour 13-75, 13-77, 13-79
meter, volt ohm 17-11
module
calibration test 17-3
communication display 17-5
moly-teflon lubricant 17-7
motor
48-volt 14-7
48-volt 3.10 hp series 14-3
48-volt IQ 14-5, 14-9, 14-13
48-volt IQ Plus 14-11
motor armature 14-3, 14-5, 14-7
motor brush 14-5, 14-7, 14-11
motor brush kit 14-9, 14-11, 14-13
motor brush spring 14-11
motor brush spring kit 14-9, 14-13
motor bumper 14-3, 14-5, 14-7, 14-9, 14-11,
14-13
motor controller 13-57, 13-73
motor end cap 14-3, 14-5, 14-7, 14-9, 14-11,
14-13
motor end shield 14-5, 14-7
motor frame and field 14-11
motor headband, sealed 14-11
motor headband, vented 14-11
motor L-bracket 14-9
motor magnet, speed sensor 14-5, 14-7, 14-9,
14-11, 14-13
motor speed controller 13-61
motor speed sensor 14-5, 14-7, 14-9, 14-11,
14-13
motor speed sensor kit 14-9, 14-11, 14-13
motor stator shell and winding 14-3, 14-5, 14-7
motor terminal and lead assembly 14-11
motor terminal hardware kit 14-9, 14-13
motor terminal insulator 14-11
mount, bumper 5-37
mount, compression 5-47, 5-49
mount, fuel pump 9-3, 9-5
mounting block, brake 4-7, 4-9, 4-11
moveable-face 11-3, 11-5, 11-9, 11-11
muffler hose clamp 10-3, 10-5

N

name plate 3-37, 3-39, 3-41
needle bearing 12-5
neutral lockout cam 12-9
nozzle, main 9-9
nut, lug 2-3, 2-5, 2-7, 2-9, 2-11

O

OBC 13-57, 13-61, 13-73
OBC, onboard computer 13-61
oil filler tube 7-3, 8-3
oil filter 7-7, 8-7

INDEX

oil filter mount bracket 7-7, 8-7
oil filter screen 7-11, 8-11
oil filter screen plate 7-11, 8-11
oil level sensor 7-11, 8-11
oil level switch bracket 7-11, 8-11
oil pump and rotor 7-7, 8-7
oil pump cover 7-7, 8-7
oil pump filter 7-7, 8-7
oil pump plate 7-7, 8-7
oil seal 7-9, 7-11, 7-13, 8-9, 8-11, 8-13, 12-3, 12-5
oil warning light, low 6-41, 6-45, 6-47, 6-49
onboard battery charger 16-11, 16-17, 16-31
onboard computer 13-47, 13-57, 13-61, 13-63, 13-73
O-ring 7-3, 7-9, 7-11, 7-13, 8-3, 8-9, 8-11, 8-13
overload bumper spacer 5-35, 5-37

P

pad
accelerator pedal 4-31, 4-33
brake pedal 4-7, 4-9, 4-11
park brake 4-7, 4-9, 4-11
paint, touch-up 17-7
panel box 1-27, 1-33
panel, front 1-27, 1-33
panel, side 1-27
park brake latch 4-7, 4-9, 4-11
park brake pedal 4-7, 4-9, 4-11
park brake rod sleeve 4-7, 4-9, 4-11
park brake spacer 4-7, 4-9, 4-11
park brake torsion spring 4-7, 4-9, 4-11
pawl 4-7, 4-9, 4-11
pedal group 4-11
pedal, accelerator 4-31, 4-33
pedal, brake 4-7, 4-9
pedal, park brake 4-7, 4-9, 4-11
pencil grip 5-7
pilot air screw assembly 9-9
pilot jet 9-9
pin, differential 12-7
pin, piston 7-13, 8-13
pinion, steering 5-11
pipe, intake 9-11
piston 7-13, 8-13
piston anchor 4-5, 4-13
piston pin 7-13, 8-13
piston ring 7-13, 8-13
piston ring compressor 17-9
piston ring pliers 17-9
piston ring set 7-13, 8-13
pivot arm 12-3
pivot support bearing 4-31, 4-33
plate
access door 1-39
bed floor 1-19, 1-39

bumper mounting 1-49
component mounting 13-45, 13-57, 13-61, 13-63, 13-73
cover 14-9, 14-13
engine mounting 7-15, 8-15, 8-17
flywheel fan 7-5, 8-5
front spring retainer 5-17, 5-21, 5-25, 5-29
latch 1-23
name 3-37, 3-39, 3-41
oil filter screen 7-11, 8-11
oil pump 7-7, 8-7
receptacle backing 13-41, 13-43, 13-67, 16-11, 16-13, 16-21, 16-27, 16-37
score card 5-7, 5-9
shackle 5-43
spring mounting 5-17, 5-21, 5-25, 5-29
steering wheel 5-9
thrust 12-5, 12-7
plate, Tow/Run switch 13-69
pliers
internal retaining ring 17-7
piston ring 17-9
retaining ring 17-9
plug
2-way 13-47
3-way 13-9
4-pin 13-37, 13-39
6-pin 13-61
drain 7-7, 8-7
driven clutch puller 17-5
fill 12-3
spark 7-5, 8-5
plug cap 7-5, 8-5
pole set 6-51
positioner, choke 9-17
press weldment 17-5
prop rod 1-25, 1-41
prop rod track 1-25
protector spray, battery terminal 17-3
puller
bearing 17-3
clutch 17-3
drive clutch 17-5
drive clutch hub 17-5
driven clutch cam 17-5
flywheel 17-7
seal 17-9
special use tool 17-9
pulley
clutch 11-3
drive clutch 11-5
starter-generator 6-51
pump, impulse fuel 9-5
push rod 7-9, 8-9

R

race, front hub bearing 5-31, 5-33
rack and pinion drag link 5-11
rack guide pressure spring 5-11
rack, steering 5-11
ratchet, park brake 4-7, 4-9, 4-11
reamer, valve guide 17-9
rear bumper 1-49
rear fender 1-45, 1-49
rear spring shackle 5-35, 5-37, 5-39, 5-41
receptacle 13-41
receptacle and fuse 13-43
receptacle backing plate 13-41, 13-43, 13-67, 16-11, 16-13, 16-21, 16-27, 16-37
receptacle, AC cord 16-9, 16-29
receptacle, battery charger 13-41, 13-43
rectifier with heatsink 16-5, 16-7, 16-9, 16-11, 16-13, 16-15, 16-17, 16-29, 16-31
reel bracket 16-19, 16-23, 16-33
reel cord 16-11, 16-13, 16-19, 16-21, 16-23, 16-27, 16-33, 16-37
regulator, 12-volt 13-47
regulator, voltage 6-31, 6-33, 6-35, 6-37, 6-39
relay 6-35, 6-37, 16-7, 16-9, 16-13
relay mounting bracket 6-35, 6-37, 16-7, 16-11, 16-13, 16-17, 16-31
relay, 12-volt 6-27
relay, 48-volt 13-73, 16-15, 16-17, 16-29, 16-31
relay, charger board 16-3
remover, bearing and oil seal 17-3
resistor assembly 13-45, 13-61, 13-63
resistor wire assembly 13-9
retainer
accelerator pedal spring 4-31, 4-33
bearing 14-3, 14-5, 14-7
brake shoe 4-5, 4-13
cable 12-11
headlight 6-29, 13-15
shock absorber cushion 5-35, 5-37, 5-39, 5-41, 5-43, 5-45
spring 5-35, 5-37
spring (drive clutch) 11-3, 11-5
valve spring 7-9, 8-9
retainer, battery charger 16-37
retaining bracket 9-21
retaining ring 5-3, 5-5
retaining ring pliers 17-9
return spring bumper 4-31, 4-33
reverse buzzer 6-27, 6-41, 6-45, 6-57, 13-25, 13-27, 13-83
rigging, brush 14-3, 14-5, 14-7
rim, wheel 2-9, 2-11
rim, wheel, silver 2-9, 2-11
rim, wheel, white 2-3, 2-5, 2-7
ring
piston 7-13, 8-13

INDEX

- retaining 5-3, 5-5, 6-31, 6-33, 6-35, 6-37, 6-39, 11-3, 11-5, 11-9, 11-11, 12-9
 - snap 5-11, 7-9, 7-13, 8-9, 8-13
 - spiral backup 11-3, 11-5
 - synchronizer 12-5
 - ring, C-type stop 5-11
 - ring, piston 7-13, 8-13
 - rivet, blind push 1-3, 1-5, 1-7, 1-9, 13-51, 13-67
 - rocker arm 7-9, 8-9
 - rocker case 7-9, 8-9
 - rocker case gasket 7-9, 8-9
 - rocker shaft 7-9, 8-9
 - rocker switch 13-37, 13-39
 - rod
 - accelerator 4-35, 4-37, 4-39
 - accelerator pivot 4-31, 4-33
 - battery hold-down 13-53, 13-81, 13-85, 13-87, 13-89, 13-91
 - clip 1-41
 - connecting 7-13, 8-13
 - crankshaft 7-13, 8-13
 - equalizer 4-15, 4-21, 4-23, 4-25, 4-27, 4-29
 - hill brake 4-7, 4-9, 4-11
 - prop 1-25, 1-41
 - push 7-9, 8-9
 - shift 12-5
 - tie 5-19, 5-23
 - rotor, oil pump and 7-7, 8-7
 - RPM limiter 7-5, 8-5
 - RPM limiter bracket 7-5, 8-5
 - RPM limiter damper 7-5, 8-5
 - RPM limiter mount band 7-5, 8-5
- S**
- safety first card 17-9
 - score card clip 5-7
 - score card plate 5-7
 - screen, oil filter 7-11, 8-11
 - screw, valve clearance adjuster 17-9
 - seal
 - bearing 5-3, 5-5
 - bed 1-19, 1-21
 - intake 9-15
 - lip 15-5
 - oil 7-9, 7-11, 7-13, 8-9, 8-11, 8-13, 12-3, 12-5, 12-7, 15-5
 - steering pinion dust 5-11
 - vertical socket dust 5-11, 5-19, 5-23
 - seal puller 17-9
 - sealant 12-3, 15-5
 - seat
 - spring 7-9, 8-9
 - valve 7-7, 8-7
 - seat back 1-17
 - seat back assembly 1-17
 - seat back cap 1-17
 - seat back, white 1-17
 - seat bottom assembly 1-15
 - seat bumper 1-15
 - seat cover, vinyl 1-15
 - seat strap 1-15
 - seat support panel assembly 1-17
 - seat, bearing 5-3, 5-5
 - sending unit, fuel gauge 9-7
 - sensor, motor speed 14-5, 14-7, 14-9, 14-11, 14-13
 - sensor, oil level 7-11, 8-11
 - sensor, speed 14-5, 14-7
 - set, brush and screw 6-51
 - set, pole 6-51
 - shackle plate 5-43
 - shackle weldment 5-45
 - shackle, rear spring 5-35, 5-37, 5-39, 5-41
 - shaft
 - change 12-3
 - counterbalance guide 7-13, 8-13
 - input 15-5
 - intermediate 15-5
 - rocker 7-9, 8-9
 - transmission 12-5
 - shield, air duct 9-17, 9-19
 - shield, battery charger 16-21
 - shift fork 12-5
 - shift rod 12-5
 - shifter base, FNR 12-9
 - shifter bracket 12-3, 12-11, 12-13, 12-15, 12-17
 - shim, camshaft 7-11, 8-11
 - shim, crankshaft 7-13, 8-13
 - shim, latch plate 1-23
 - shim, tilt bed pivot 1-19, 1-21, 1-41
 - shock absorber 5-15, 5-19, 5-23, 5-27, 5-39, 5-41, 5-43, 5-45
 - shock absorber (rear) 5-35, 5-37
 - shock absorber cushion 5-35, 5-37, 5-39, 5-41, 5-43, 5-45
 - shock absorber cushion retainer 5-35, 5-37, 5-39, 5-41, 5-43, 5-45
 - shock mounting bracket 5-35, 5-37, 5-43, 5-45
 - shoe, brake 4-3, 4-5, 4-13
 - shroud 7-3, 8-3
 - shroud, engine 7-3, 8-3
 - shroud, fan 7-3, 8-3
 - side panel 1-27
 - sleeve
 - delta A-plate 5-15, 5-19, 5-23, 5-27
 - governor 12-5
 - park brake rod 4-7, 4-9, 4-11
 - synchronizer 12-5
 - snap ring 5-11, 7-9, 7-13, 8-9, 8-13
 - snubber bracket 7-15, 8-15, 8-17
 - snubber, inner frame 7-15, 8-15, 8-17
 - socket 5-11, 5-19, 5-23
 - solenoid 13-57, 13-73
 - solenoid, 12-volt 6-31, 6-33, 6-35, 6-37, 6-39
 - solenoid, 48-volt 13-45, 13-61, 13-63
 - spacer 1-9, 13-85, 13-87
 - accelerator pivot rod 4-31, 4-33
 - overload bumper 5-35, 5-37
 - park brake 4-7, 4-9, 4-11
 - spanner wrench 17-9
 - spark plug 7-5, 8-5
 - speed controller 13-45, 13-57, 13-61, 13-63, 13-73
 - speed controller connector 13-61
 - speed controller cover 13-61
 - speed sensor 14-5, 14-7, 14-9, 14-11, 14-13
 - speed sensor magnet 14-5, 14-7, 14-9, 14-11, 14-13
 - speed sensor, motor 14-5, 14-7, 14-9, 14-11, 14-13
 - spindle 5-31
 - spiral backup ring 11-3, 11-5
 - spray, battery terminal protector 17-3
 - spring
 - accelerator return 4-31, 4-33
 - brake 4-5, 4-13
 - brake return 4-21, 4-23, 4-25, 4-27, 4-29
 - brush 6-51, 14-3, 14-5, 14-7, 14-9, 14-11, 14-13
 - camshaft 7-11
 - compression 5-7, 9-17
 - drive button 11-3, 11-5
 - drive clutch 11-3, 11-5
 - driven clutch 11-9
 - extension return 9-15
 - forward/reverse cam 12-9
 - latch tilt 1-27, 1-33
 - leaf 5-35, 5-37, 5-39, 5-41, 5-43, 5-45
 - park brake torsion 4-7, 4-9, 4-11
 - rack guide pressure 5-11
 - shifter 12-5
 - steering shaft compression 5-3, 5-5
 - synchronizer 12-5
 - throttle return 9-11
 - valve 7-9, 8-9
 - spring cup 4-31, 4-33
 - spring mounting plate 5-17, 5-21, 5-25, 5-29
 - spring retainer 5-35, 5-37
 - spring, motor brush 14-11
 - spur gear 7-13, 8-13, 12-5
 - stabilizer bar 5-47, 5-49
 - stabilizer bar link 5-47, 5-49
 - stabilizer bar mounting bracket 5-47, 5-49
 - stake side bracket 1-39
 - stand-offs, plastic 16-3
 - starter/generator 6-51
 - starter/generator belt 6-53, 11-3, 11-5
 - starter/generator pulley 6-51

INDEX

- stator shell and winding 14-3, 14-5, 14-7
steel bushing 1-19, 1-21, 1-41, 5-17, 5-21, 5-25, 5-29, 5-35, 5-37, 5-39, 5-41, 5-43, 5-45
steel pressure relief ball 7-7, 8-7
steering column 5-3, 5-5
steering column bearing press tool 17-9
steering column retaining ring tool 17-9
steering gear box 5-11
steering joint 5-5
steering pinion 5-11
steering pinion dust seal 5-11
steering rack 5-11
steering shaft assembly 5-3, 5-5
steering shaft column 5-3, 5-5
steering shaft compression spring 5-3, 5-5
steering wheel 5-7, 5-9
steering wheel plate 5-9
steering wheel puller tool 17-9
stem, valve 2-3, 2-5, 2-7, 2-9, 2-11
stiffener 1-15
stiffener, flywheel side 7-15, 8-15, 8-17
stiffener, PTO side 7-15, 8-15, 8-17
strap, A-plate 5-15, 5-19, 5-23, 5-27
strap, fuel tank 9-3, 9-5
strap, seat 1-15
stud 7-15, 8-15, 8-17
 lug 12-7, 15-5
 self-clinching 1-29, 1-31, 1-35
stud, ball 6-31, 6-33, 6-35, 6-37, 6-39, 12-3, 12-9
support yoke (steering) 5-11
support, bushing 5-47, 5-49
suppressor, voltage 6-27, 13-25, 16-5, 16-7, 16-9, 16-11, 16-13, 16-15, 16-17, 16-29, 16-31
suspension, front 5-15
switch
 FNR 13-35
 four-position 16-7, 16-9, 16-13, 16-29, 16-31
 key 6-41, 6-45, 6-47, 6-49, 13-27, 13-31
 light 6-43, 6-47, 6-49, 13-29, 13-31
 limit 6-31, 6-33, 6-35, 6-37, 6-39, 6-47, 6-49, 12-9, 13-31, 13-35
 rocker 13-37, 13-39
 Tow/Run 13-37, 13-69
switch case, FNR 13-39
switch plate, Tow/Run 13-69
switch rubber boot 13-37, 13-69
synchro gear 12-5
synchronizer clutch hub 12-5
synchronizer insert 12-5
synchronizer sleeve 12-5
synchronizer spring 12-5
system, exhaust 10-5
- T**
12-volt solenoid 6-31, 6-33, 6-35, 6-37, 6-39
tachometer 17-9
tachometer probe, diesel 17-9
tail light bulb 6-57, 13-81
tailgate 1-27, 1-33
tailgate angle 1-31, 1-35
tailgate mounting bracket 1-29
taillight 6-57, 13-81
taillight gasket 6-57, 13-81
taillight lens 6-57, 13-81
taillight mounting kit 1-27, 1-33
tailskirt 1-45, 1-47, 1-49
tank, fuel 9-7
tape 9-17, 9-19
tape, vinyl foam 1-19, 1-21, 1-39
terminal block 6-27, 13-25, 13-47, 13-51, 13-61, 13-67, 16-27, 16-37
tester, continuity 17-5
thermometer, battery 17-3
thread-forming grease fitting 5-11, 5-19, 5-23, 5-31, 5-33
throttle return spring 9-11
throttle spring return bracket 9-11
thrust bearing 5-17, 5-21, 5-25, 5-29
thrust plate 12-5, 12-7
tie rod 5-19, 5-23
tie rod end 5-15, 5-27
tie wrap 5-11, 6-27, 6-31, 6-33, 6-35, 6-37, 6-39, 6-43, 9-21, 13-13, 13-23, 13-25, 13-27, 13-29, 13-37, 13-47, 13-51, 13-57, 13-61, 13-63, 13-67, 13-73, 13-79, 16-27, 16-37
tilt bed 1-19, 1-21
tilt bed frame 1-21
tilt latch hand grip 1-19, 1-21, 1-27, 1-33
tire 2-3, 2-5, 2-7, 2-9, 2-11
tire and wheel assembly 2-3, 2-5, 2-7
tool
 accelerator pedal adjustment 17-3
 belt tensioning, starter/generator 17-11
 brake adjustment 17-3
 brake cable release 17-3
 brake pedal adjustment 17-3
 brake pedal tension 17-3
 cam installation 17-3
 carburetor float level 17-7
 charger bezel 17-3
 clutch alignment 17-5
 cT-wrench 17-5
 drive clutch fixed sheave 17-5
 drive clutch holder 17-5
 drive clutch spider removal 17-5
 driven clutch spring compression base 17-5
 driven clutch spring compression collar 17-5
 driven clutch spring compression nut 17-5
 governor shaft installation 17-7
 puller, special use 17-9
 steering column bearing press 17-9
 steering column retaining ring 17-9
 steering wheel puller 17-9
 transaxle axle seal 17-9
 transaxle pinion seal 17-9
 transmission 17-9
 valve guide driver 17-9
 valve seat cutter 17-5
tool kit, clutch 17-5
touch-up paint 17-7
Tow/Run switch 13-37, 13-69
Tow/Run switch bracket 13-37
Tow/Run switch plate 13-69
track, prop rod 1-25
trailer hitch 1-43
trailer hitch brace 1-43
transaxle 15-3, 15-5
transaxle axle seal tool 17-9
transaxle housing 15-5
transaxle pinion seal tool 17-9
transaxle, unitized 12-3
transformer, battery charger 16-5, 16-7, 16-9, 16-11, 16-13, 16-15, 16-17, 16-29, 16-31
transmission cable 12-11, 12-13, 12-15
transmission shaft 12-5
transmission tool 17-9
trim
 cowl 1-3, 1-5, 1-7, 1-9
 long bed 1-39
 seat bottom 1-17
tube
 crankcase vent 9-11
 oil filler 7-3, 8-3
tune-up kit 17-9
turn signal lens 6-29, 13-15
T-wrench tool 17-5
- U**
U-bolt 5-35, 5-37, 5-45
u-bolt 5-39, 5-41, 5-43
unitized transaxle 12-3
upper delta clevis 5-17, 5-21, 5-25, 5-29
urethane bushing 1-19, 1-21, 1-41, 5-15, 5-17, 5-19, 5-21, 5-23, 5-25, 5-27, 5-29, 5-35, 5-37, 5-39, 5-41, 5-43, 5-45
- V**
valve
 choke 9-15
 exhaust 7-9, 8-9
 fuel pickup tube 9-7
 intake 7-9, 8-9
 reed 7-9, 8-9
valve clearance adjuster screw 17-9
valve guide 7-9, 8-9
valve guide driver tool 17-9

INDEX

valve guide reamer 17-9
valve guide, intake 7-9, 8-9
valve seat 7-7, 8-7
valve seat cutter 17-5, 17-11
valve seat cutter guide 17-11
valve seat cutter tool 17-5
valve seat t-wrench 17-11
valve spring 7-9, 8-9
valve spring compressor 17-11
valve spring retainer 7-9, 8-9
valve stem 2-3, 2-5, 2-7, 2-9, 2-11
vent barb 9-3, 9-5, 9-7
vertical socket dust seal 5-11, 5-19, 5-23
volt ohm meter 17-11
voltage limiter 6-27, 6-43, 13-47
voltage limiter gasket 13-47
voltage regulator 6-31, 6-33, 6-35, 6-37, 6-39
voltage suppressor 6-27, 13-25, 16-5, 16-7,
16-9, 16-11, 16-13, 16-15, 16-17, 16-29, 16-31

W

warning light, low oil 6-41, 6-45, 6-47, 6-49
washer, insulating 14-11
wedge, bearing puller 17-3
weight
 clutch 11-3, 11-5
 counterbalance 7-13, 8-13
 secondary clutch 11-3, 11-5
weldment
 press 17-5
weldment, tilt bed frame 1-21
wheel 2-3, 2-5, 2-7
wheel and tire assembly 2-3, 2-5, 2-7
wheel rim 2-9, 2-11
wheel rim, silver 2-9, 2-11
wheel rim, white 2-3, 2-5, 2-7
wheel, steering 5-7, 5-9
wire assembly, battery charger 16-29
wire harness 6-5, 6-9, 6-13, 6-17, 6-21, 6-25,
6-31, 6-33, 6-35, 6-37, 6-39, 13-5, 13-9, 13-13,
13-19, 13-23, 13-57, 13-73
wire harness, headlight 6-13, 6-43, 13-29
woodruff key 12-3
wrap, tie 5-11, 6-27, 6-31, 6-33, 6-35, 6-37, 6-39,
6-43, 9-21, 13-13, 13-23, 13-25, 13-27, 13-29,
13-37, 13-47, 13-51, 13-57, 13-61, 13-63,
13-67, 13-73, 13-79, 16-27, 16-37
wrench, spanner 17-9

Y

yoke, gear 17-7
yoke, support (steering) 5-11



Club Car, Inc.
P.O. Box 204658
Augusta, GA 30917-4658
USA

Web www.clubcar.com
Phone 1.706.863.3000
1.800.ClubCar
Int'l +1 706.863.3000
Fax 1.706.863.5808