




2008 Turf 1 and Carryall 1 Illustrated Parts List

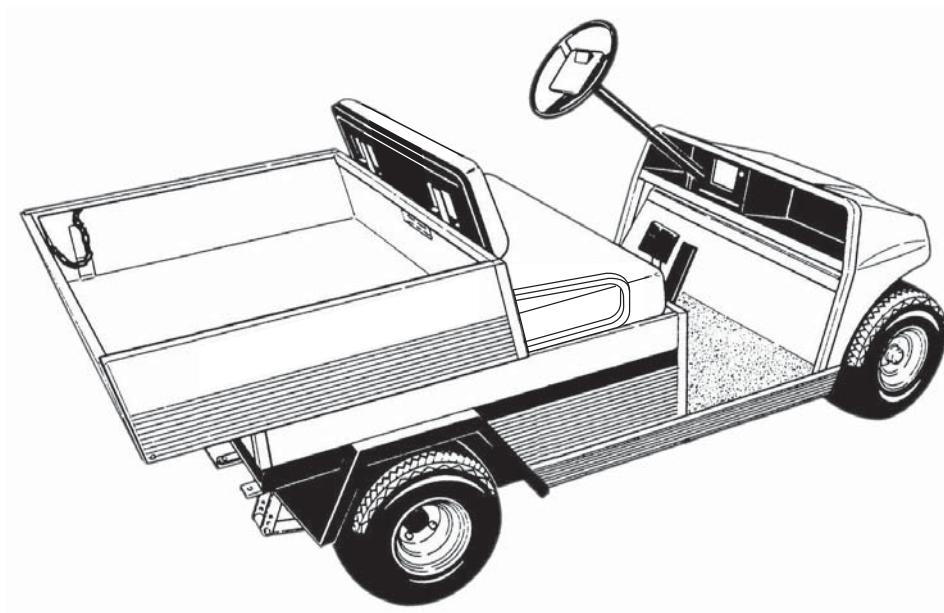

Gasoline and Electric Vehicles

Manual Number 103373007
Edition Code 1207M0616L

USING THE ILLUSTRATED PARTS LIST

WARNING

- **This manual is to be used only for identification and ordering of service parts. Be sure to read and use the maintenance and service manual before attempting any vehicle repairs.**

This manual covers all Turf/Carryall 1 vehicles built during the 2008 model year.

The manual is divided into sections. Note that there are two or three flags on the outside edge of each page. The first flag contains the section number of which that page is a part. The other flag (or flags) contains the letter G or E, signifying that the page pertains to the electric or gasoline vehicles only.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section numbers, and under them, the individual page titles and numbers to be found in that section. The index can be used to find specific parts and assemblies. The index is divided into numerical and alphabetical listings with the page numbers in italic text.

There is a two-page spread for each individual page title in the Table of Contents. On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used.

Note that a part description may be indented. This indentation corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to *level 2* is a component of the *level 1* part (assembly) that it is listed under. A *level 3* part is a component of the *level 2* part that it is listed under, and a *level 4* part is a component of the *level 3* part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part is *the quantity used per next higher level assembly of which it is a component*. A part that is not indented is a *level 1* part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.



P. O. Box 204658
Augusta, Georgia 30917-4658 USA
Telephone 706-863-3000
Service Parts Fax 706-855-7413
www.clubcar.com

HOW TO ORDER PARTS

Replacement parts and accessories can be obtained from our network of authorized dealers and distributors. You can obtain the name and phone number of your closest authorized Club Car dealer or distributor by visiting our web site at www.clubcardealer.com, by calling our toll-free Service Parts and Technical Assistance hotline at (800) 872-2246 or (706) 863-3000, extension 3887, or by scanning this Quick Response (QR) code to be taken to the Club Car dealer locator. **Refer to Figure 1.** Download a QR code reader such as RedLaser or Barcode Scanner to your cell phone or tablet.



Figure 1 Dealer Locator QR Code

CUSTOMER SATISFACTION SURVEY

Let your voice be heard!

Please take time to participate in the Technical Publications satisfaction survey. Obtaining feedback from our customers is important to the department's continuous improvement process. The online survey takes less than five minutes and responses will help the department to examine current performance as well as identify areas for future improvement.

Our top priority is to provide timely, accurate, and user friendly manuals.

The online satisfaction survey can be found at: <http://bit.ly/1w9uFMh>



Figure 2 Survey QR Code

NOTE: *This illustrated parts list represents the most current information at the time of publication. Club Car, Inc. is continually working to further improve its vehicles and other products. These improvements may affect the parts used to service the vehicle. Any modification and/or significant change in specifications will be forwarded to all Club Car and Carryall distributors/dealers and will, when applicable, appear in future editions of this illustrated parts list.*

Club Car, Inc. reserves the right to change specifications and designs at any time without notice and without the obligation of making changes to units previously sold.

Copyright © 2007, 2016 Club Car, Inc.
Club Car and ArmorFlex
are registered trademarks of Club Car, Inc.
This manual effective August 6, 2007.

2008 Turf 1 and Carryall 1 Vehicles Illustrated Parts List

CONTENTS

SECTION 1 – BODY AND TRIM

Front Body and Trim – Turf, Utility, & Transportation	1-3
Splash Guard – Gasoline Vehicles Only	1-5
Dash Pockets and Floormat	1-7
Beverage Holder	1-9
Mirror, Rear-View – without Cab	1-11
Grommets, Chassis	1-13
Seat Bottom	1-15
Seat Back Assembly	1-17
Windshield, Hinged	1-19
Windshield, Non-Hinged	1-21
Canopy Kit, White	1-23
Canopy Kit, Beige	1-25
Canopy Kit, Black	1-27
Hip Restraints and Seat Back Mounting	1-29
Tilt Bed, Hinge, and Latch – Turf/Carryall 1	1-31
Latch Plate	1-33
Cargo Box	1-35
Cargo Box Mounting	1-37
Stake Side Kit – Turf/CA 1 and TransPorter 4	1-39
Bed Mat	1-41
Portable Refreshment Center	1-43
Toolboxes	1-45
Trailer Hitch	1-47
Trailer Hitch Ball	1-49
Rear Body Trim – Turf/Carryall 1, 2, 2 Plus, and 6	1-51
Cab, Curtis – Turf/Carryall 1, 2, 2 Plus, 252 and XRT 900	1-53
Mirror, Inside Rear-View – Curtis Cab	1-55
Mirror, Side-View – Curtis Cab	1-57
Accessory Switch Panel – Curtis Cab	1-59
Strobe Light – Curtis Cab	1-61
Work Lights – Curtis Cab	1-63
Fan/Defogger – Curtis Cab	1-65
Heater – Curtis Cab	1-67
Van Box – Turf/CA 1	1-69

SECTION 2 – WHEELS AND TIRES

Wheels and Tires	2-3
Wheel Covers	2-5

CONTENTS

SECTION 3 – DECALS

Decals – Gas and Electric Vehicles	3-3
Decals – Turf/Carryall 1 Electric	3-5
Decals – Turf/Carryall 1 Gasoline	3-7
Decals, Badging – Turf/Carryall 1	3-9

SECTION 4 – LIGHTS, CONTROLS, AND INDICATORS

Headlights	4-3
Light Kit, Standard – Turf/CA 1 Gasoline Vehicles	4-5
Light Kit, Standard – Turf/CA 1 IQ System Electric Vehicles	4-7
Turn Signal Kit – DS and Utility Gasoline and Electric Vehicles	4-9
Instrument Panel and Electrical Components – Turf/Carryall 1, 2, and 252 Gas	4-11
Instrument Panel and Electrical Components – Turf/CA 1 and 2 Electric	4-13
Battery Condition Indicator – Electric Vehicles	4-15
DC Converter – IQ System Electric Vehicle	4-17
Voltage Limiter – Gasoline Vehicle	4-19
Strobe Light, Post-Mounted – Gasoline Vehicles	4-21
Strobe Light, Post-Mounted – Electric Vehicles	4-23
Strobe Light, Canopy-Mounted	4-25
Horn	4-27
Hour Meter – IQ System and IQ Plus Electric Vehicles	4-29
Taillights	4-31

SECTION 5 – BRAKES, PEDALS, AND CABLE ASSEMBLIES

Brake Pedal Assembly	5-3
Accelerator Pedal Assembly – Electric Vehicles with MCOR	5-5
Accelerator Pedal Assembly – Gasoline Vehicles	5-7
Accelerator Rod – Turf/Carryall 1 Gasoline Vehicles	5-9
Rear Brake Assembly, Self-Adjusting – Vehicle with 2-Wheel Brakes	5-11
Rear Brake Cables and Equalizer	5-13

SECTION 6 – STEERING AND SUSPENSION

Steering Gear Assembly	6-3
Steering Column – Utility	6-5
Intermediate Steering Shaft – Turf/Carryall 1/2/2 Plus/6	6-7
Steering Wheel	6-9
Steering Wheel with Clip	6-11
Front Spindles and Hubs – Vehicles with Two-Wheel Brakes	6-13

CONTENTS

Front Suspension, Upper – Vehicles with Two-Wheel Brakes	6-15
Front Suspension, Lower – Vehicles with Two-Wheel Brakes	6-17
Heavy Duty Front Suspension Components	6-19
Rear Suspension – Gasoline Turf/CA 1	6-21
Rear Suspension – Electric Turf/CA 1	6-23

SECTION 7 – ELECTRICAL SYSTEM – GASOLINE VEHICLE

Wiring – Turf/Carryall 1 Gas	7-3
Starter/Generator Assembly Model G425419 – Gasoline Vehicles	7-5
Starter/Generator Mounting – FE350	7-7
Operation and Maintenance Switch	7-9
Electrical Component Box – Turf/Carryall 1, 2, and 252	7-11
Forward/Reverse Shifter Switches – Dash Mounted Shifter	7-13
Battery – Gasoline Utility Vehicles	7-15

SECTION 8 – FE350 ENGINE W/O ACR (TURF/CA 1)

FE350 Engine w/o ACR – Shrouds and Brackets	8-3
FE350 Engine – Ignition Components and Flywheel	8-5
FE350 Engine – Oil Circulation	8-7
FE350 Engine – Cylinder Head	8-9
FE350 Engine w/o ACR – Crankcase, Camshaft, and Oil Sensor	8-11
FE350 Engine – Crankcase and Crankshaft	8-13
FE350 Engine Mounting	8-15

SECTION 9 – FUEL, INTAKE, AND GOVERNOR SYSTEMS

Fuel System – 49 State	9-3
Fuel System – California Only	9-5
Carbon Canister – California Only	9-7
Carburetor Assembly, FE350 (AS11)	9-9
Carburetor Mounting, Utility, FE350 – 49 State	9-11
Carburetor Mounting, Utility, FE350 – California Only	9-13
Governor and Accelerator Cables	9-15
Air Intake Duct and Choke Button – Turf/Carryall 1	9-17
Air Filter and Intake Hose	9-19

SECTION 10 – EXHAUST SYSTEM

Exhaust System – FE350 Engine	10-3
-------------------------------------	------

CONTENTS

SECTION 11 – DRIVE BELT AND CLUTCHES

Drive Belt	11-3
Drive Clutch – Turf/Carryall 1, 2, and 252	11-5
Driven Clutch – Turf/Carryall 1, 2, and 252	11-7

SECTION 12 – UNITIZED TRANSAXLE – GASOLINE VEHICLES

Forward/Reverse Shifter	12-3
Shifter Cable – Turf/Carryall 1	12-5
Kawasaki Transaxle – Gear Cases and Brackets	12-7
Kawasaki Transaxle – F&R Transmission and Gear Reduction	12-9
Kawasaki Transaxle – Differential and Axles	12-11
Graziano Transaxle – Gear Cases and Levers	12-13
Graziano Transaxle – F&R Transmission and Gear Reduction	12-15
Graziano Transaxle -Differential and Axles	12-17

SECTION 13 – ELECTRICAL SYSTEM – ELECTRIC VEHICLES

Motor Controller Output Regulator (MCOR)	13-3
Wiring – Turf/Carryall 1 Electric	13-5
Battery Charger Receptacle	13-7
Tow/Run Switch – IQ System	13-9
Batteries, 8-Volt, Trojan T890	13-11
Computer, Controller, and Solenoid	13-13
CE Compliance Kit – Turf and Carryall 1	13-15

SECTION 14 – ELECTRIC MOTOR

Motor (Model 5BC59JBS6390) – Electric Vehicle	14-3
Motor (Model EJ4-4001) – Electric Vehicle	14-5

SECTION 15 – TRANSAXLE – ELECTRIC VEHICLES

Transaxle – Electric Vehicles	15-3
Differential Guard – Electric Vehicles	15-5

SECTION 16 – BATTERY CHARGERS

PowerDrive 3 Battery Charger (Model 26580), Domestic	16-3
PowerDrive 2 Battery Charger (Model 22110), Domestic	16-5
PowerDrive Battery Charger (Model 17930), Domestic	16-7
PowerDrive Battery Charger (Model 18780), Export	16-9

CONTENTS

PowerDrive Battery Charger (Model 20310), European	16-11
Onboard PowerDrive Battery Charger (Model 19770-98), Domestic	16-13
Onboard PowerDrive Battery Charger (Model 19710), International	16-15

SECTION 17 – MAINTENANCE AND SERVICE TOOLS

Maintenance and Service Tools	17-3
Maintenance and Service Tools, Continued	17-5
Maintenance and Service Tools, Continued	17-7


SECTION i – INDEX

BODY AND TRIM

1

G

E

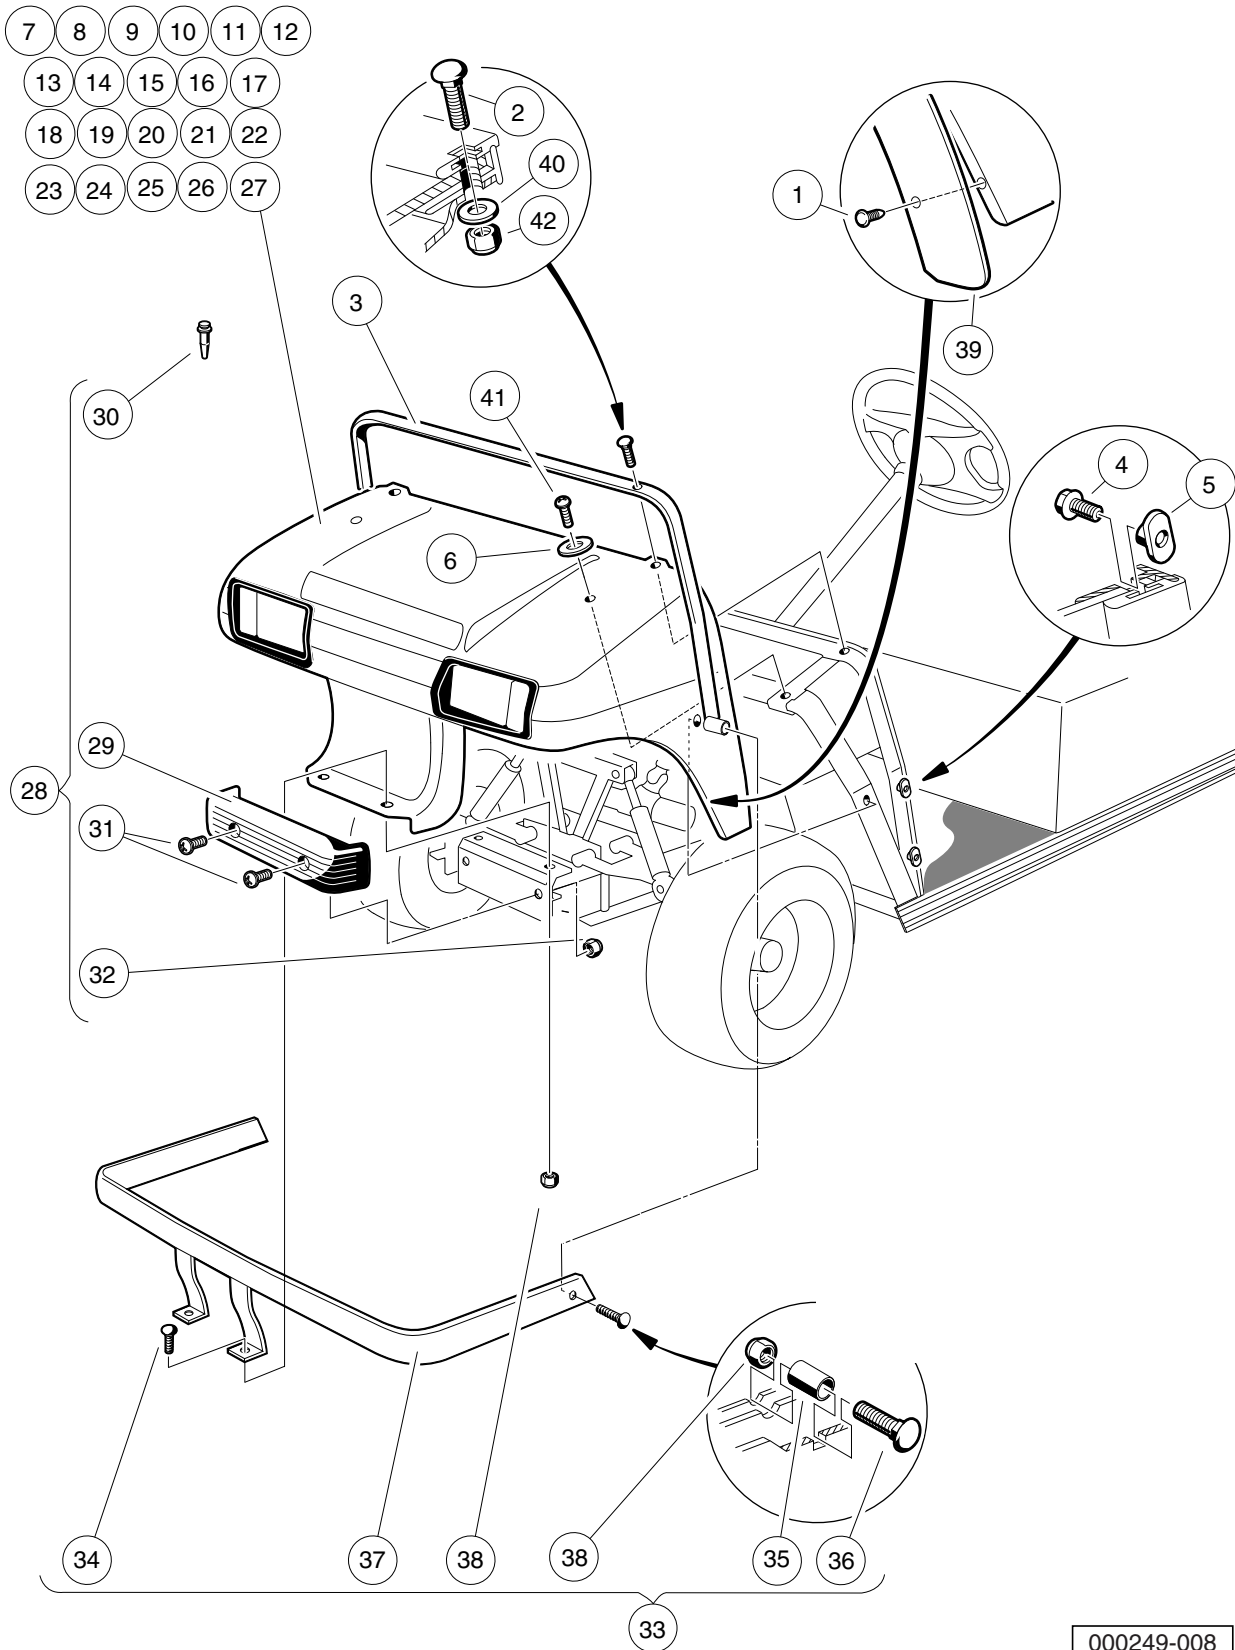1**G****E**

000249-008

FRONT BODY AND TRIM – TURF, UTILITY, & TRANSPORTATION


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010434</u>	Barrel - Plastic	12
2	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	2
3	<u>1011014</u>	Trim, Cowl	1
4	<u>1011017</u>	Screw, #8-32 X 0.375	6
5	<u>1011394</u>	T-Nut Package (Set of 4)	1
6	<u>1015075</u>	Washer, 5/16 Flat Type A	2
7	<u>101692501</u>	Cowl, TPO, Beige	1
8	<u>101692502</u>	Cowl, TPO, White	1
9	<u>101692504</u>	Cowl, Tpo -gray	1
10	<u>101692506</u>	Cowl, TPO, Red	1
11	<u>101692509</u>	Cowl, TPO, Pacific Blue (Royal Blue)	1
12	<u>101692510</u>	Cowl, TPO, Dark Green	1
13	<u>101692511</u>	Cowl, TPO, Black	1
14	<u>101692512</u>	Cowl, TPO, Classic Blue (Navy)	1
15	<u>101692513</u>	Cowl, TPO, Burgundy	1
16	<u>101692514</u>	Cowl, TPO, Dark Gray	1
17	<u>101692515</u>	Cowl, TPO, Safety Yellow	1
18	<u>101693901</u>	Cowl with Headlight Opening, TPO, Beige	1
19	<u>101693902</u>	Cowl with Headlight Opening, TPO, White	1
20	<u>101693904</u>	Cowl with Headlight Opening, TPO, Gray	1
21	<u>101693906</u>	Cowl with Headlight Opening, TPO, Red	1
22	<u>101693909</u>	Cowl with Headlight Opening, TPO, Dark Green	1
23	<u>101693910</u>	Cowl with Headlight Opening, TPO, Black	1
24	<u>101693911</u>	Cowl with Headlight Opening, TPO, Classic Blue (Navy)	1
25	<u>101693912</u>	Cowl with Headlight Opening, TPO, Burgundy	1
26	<u>101693913</u>	Cowl with Headlight Opening, TPO, Dark Gray	1
27	<u>101693914</u>	Cowl with Headlight Opening, TPO, Safety Yellow	1
28	<u>1017080</u>	Kit, Front Bumper (includes items 29 through 32)	1
29	<u>1016868</u>	Front Bumper	1
30	<u>1016967</u>	Blind Rivet, Push Type	2
31	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2
32	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
33	<u>101734802</u>	Kit, Heavy-Duty Bumper (includes items 34 through 38)	1
34	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	2
35	<u>1010546</u>	Spacer	2
36	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	2
37	N/A	Weldment, Heavy Duty Bumper	1
38	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4
39	<u>101870401</u>	Fender Extrusion	2
40	<u>1241</u>	Washer, 5/16 Type A Flat	2
41	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2
42	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2

1
G
E

1

G

E

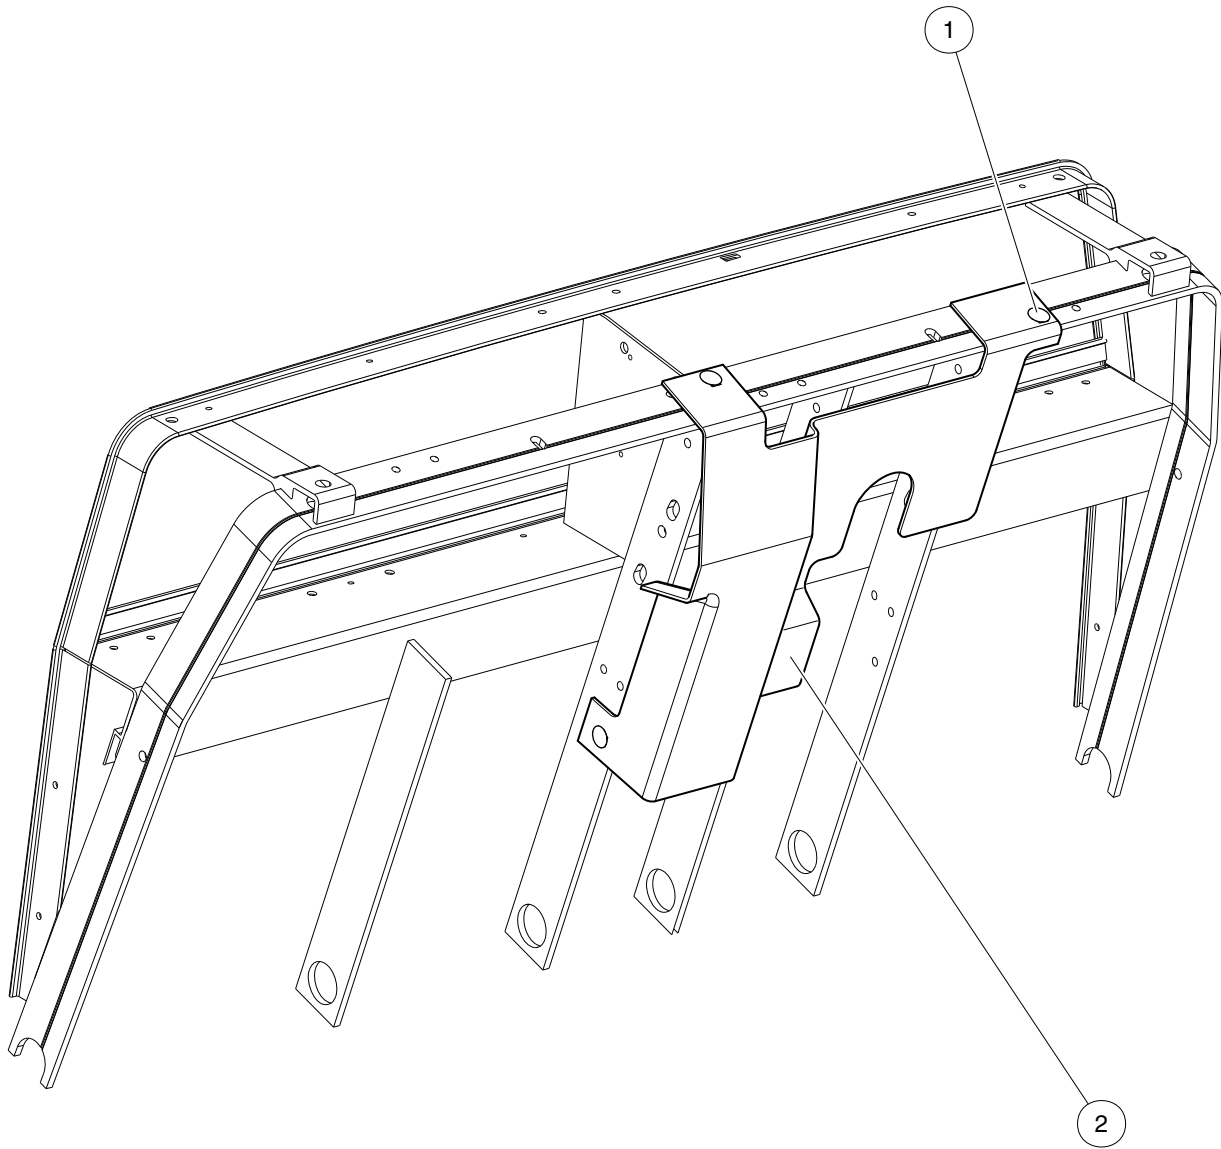

000593-002


SPLASH GUARD – GASOLINE VEHICLES ONLY

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	<u>1010434</u>	1 2 3 4 Barrel - Plastic	3	
2	<u>103174401</u>	Splash Guard	1	

1

G

E

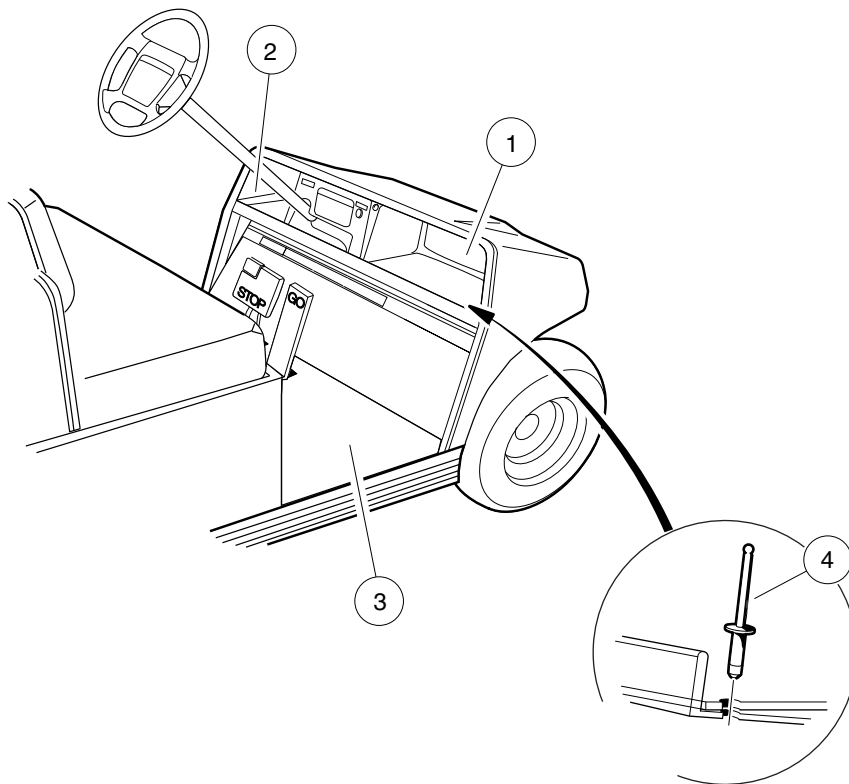

000252-002


DASH POCKETS AND FLOORMAT

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1013343</u>	Dash Component, Passenger-Side, Black	1	
2	<u>1013344</u>	Dash Component, Driver-Side	1	
3	<u>101503202</u>	Floormat	1	
4	<u>7973</u>	Rivet, 3/16 X .400 Blind	5	

1

G

E

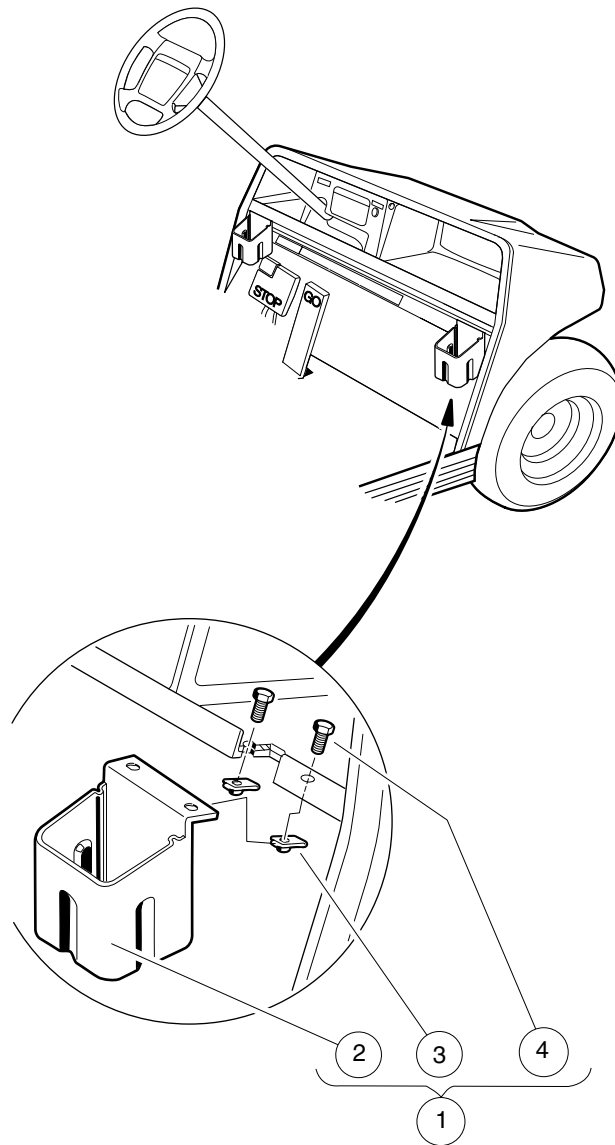

000253-001

BEVERAGE HOLDER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1013422	Cup Holder Kit (includes items 2 through 4)	2
2	1013420	Holder, Single Cup	1
3	1016952	U-Nut, 1/4-20	2
4	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2

1


G

E

1

G

E

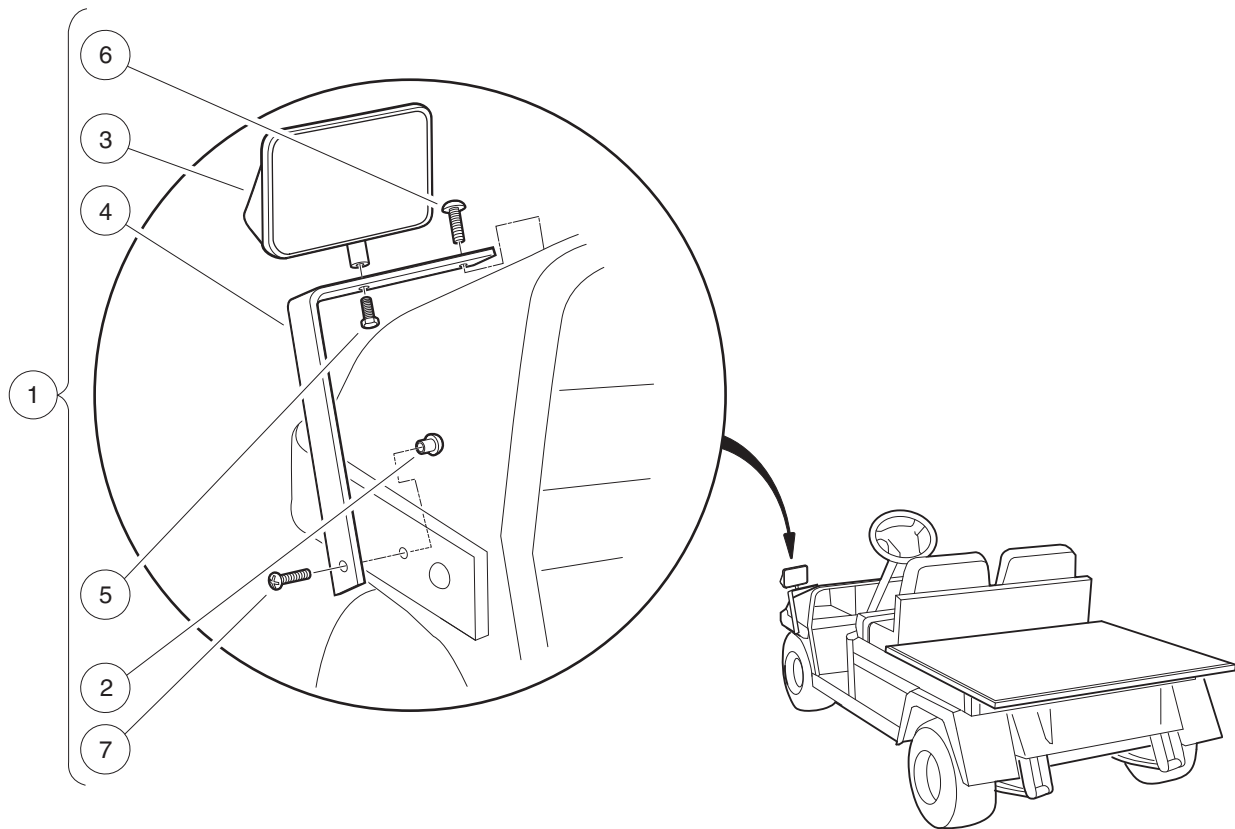

001211-001


MIRROR, REAR-VIEW – WITHOUT CAB

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1013846</u>	Kit, Rear Mirror, West Coast (includes items 2 through 7)	1	
2	<u>1011878</u>	T-nut, 1/4-20 X .310 Capped	1	
3	<u>1013824</u>	Rear View Mirror	1	
4	<u>1013825</u>	Mirror Mounting Bracket	1	
5	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1	
6	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	1	
7	<u>8248</u>	Screw, 1/4-20 X 0.75, Truss-Head Machine	1	
Note: To install this kit, vehicle must be equipped with a heavy-duty front bumper.				

1

G

E

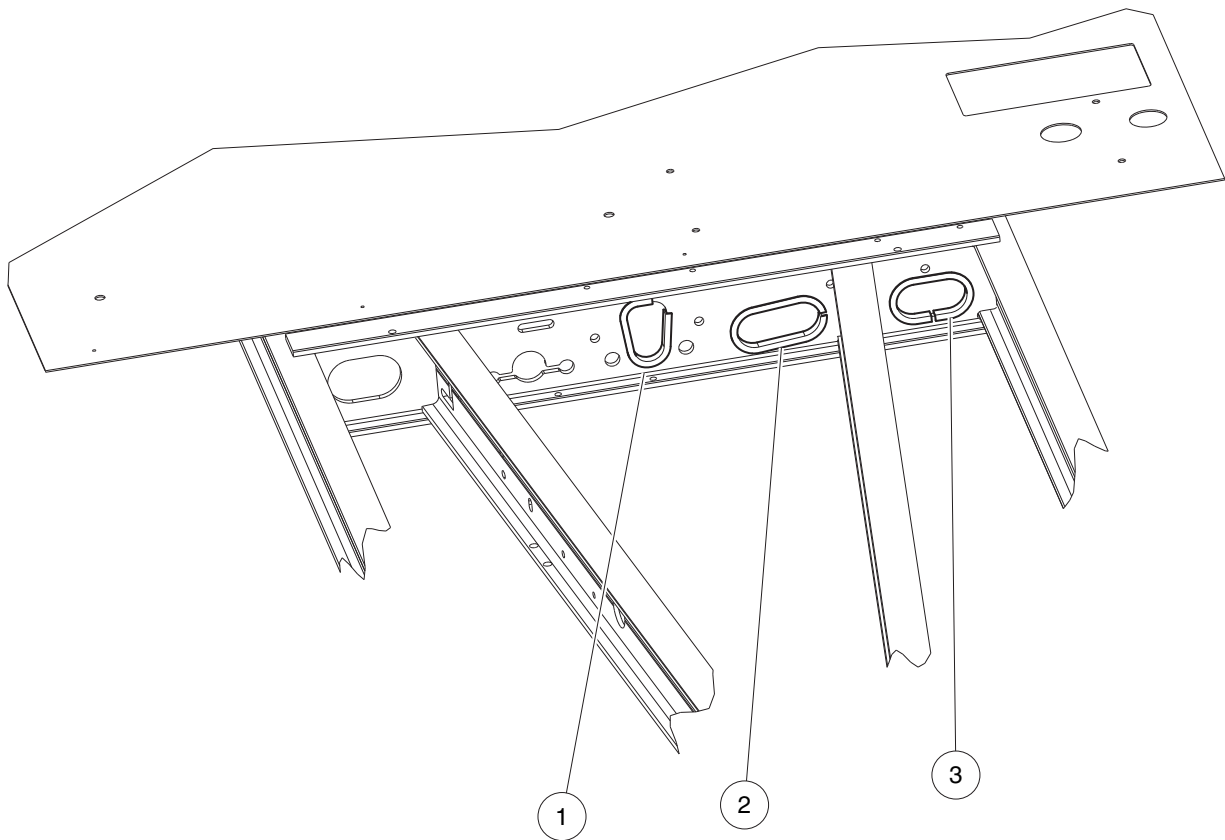


001221-001

GROMMETS, CHASSIS


ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	<u>101806001</u>	1 2 3 4 I-beam Grommet - 5.5	A/R	
2	<u>101806002</u>	I-beam Grommet - 7.5	A/R	
3	<u>101806005</u>	I-beam Grommet - 6.75	A/R	

1**G****E**


BEIGE
SEAT BOTTOM ASSEMBLY

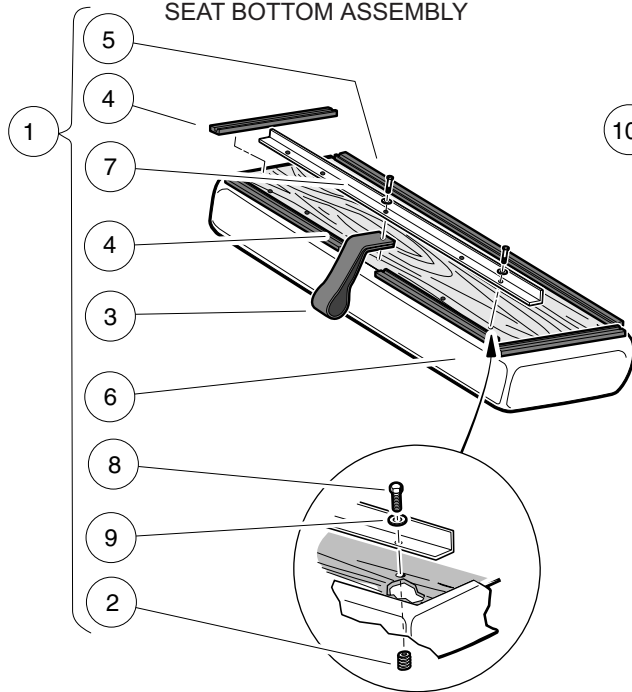


WHITE
SEAT BOTTOM ASSEMBLY

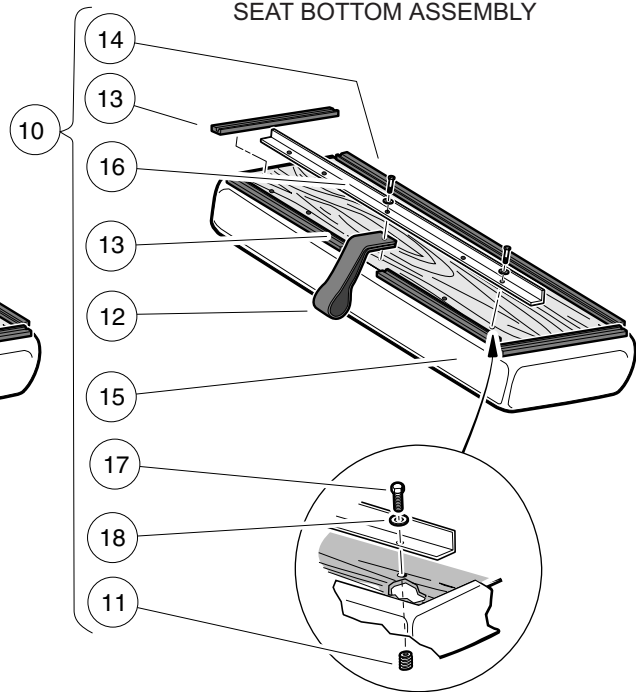

BLACK
SEAT BOTTOM ASSEMBLY

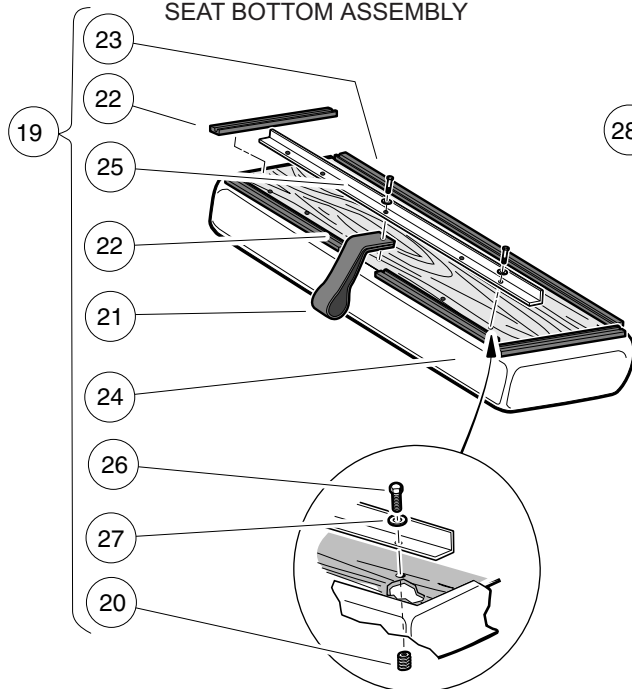

GRAY
SEAT BOTTOM ASSEMBLY

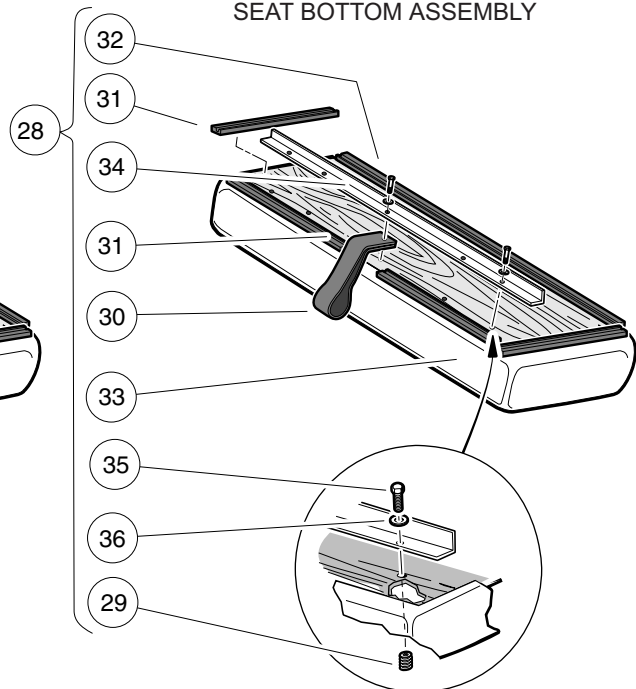

000254-001

SEAT BOTTOM





ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101564501</u>	Seat Bottom Assembly, Beige (includes items 2 through 9)	1
2	<u>1010543</u>	Insert - Wood	5
3	<u>1013309</u>	Strap, Utility Seat	1
4	<u>1013311</u>	Bumper, Seat, Short	4
5	<u>1013312</u>	Bumper, Seat, Long	1
6	<u>101562711</u>	Vinyl Cover, Seat Bottom, Buff	1
7	<u>101894303</u>	Stiffener	1
8	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	5
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	5
10	<u>101564502</u>	Seat Bottom Assembly, White (includes items 11 through 18)	1
11	<u>1010543</u>	Insert - Wood	5
12	<u>1013309</u>	Strap, Utility Seat	1
13	<u>1013311</u>	Bumper, Seat, Short	4
14	<u>1013312</u>	Bumper, Seat, Long	1
15	<u>101562712</u>	Vinyl Cover, Seat Bottom, White	1
16	<u>101894303</u>	Stiffener	1
17	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	5
18	<u>332</u>	Washer, 1/4 Type A Narrow Flat	5
19	<u>101564503</u>	Seat Bottom Assembly, Black (includes items 20 through 27)	1
20	<u>1010543</u>	Insert - Wood	5
21	<u>1013309</u>	Strap, Utility Seat	1
22	<u>1013311</u>	Bumper, Seat, Short	4
23	<u>1013312</u>	Bumper, Seat, Long	1
24	<u>101562714</u>	Vinyl Cover, Seat Bottom, Black	1
25	<u>101894303</u>	Stiffener	1
26	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	5
27	<u>332</u>	Washer, 1/4 Type A Narrow Flat	5
28	<u>101564505</u>	Seat Bottom Assembly, Gray (includes items 29 through 36)	1
29	<u>1010543</u>	Insert - Wood	5
30	<u>1013309</u>	Strap, Utility Seat	1
31	<u>1013311</u>	Bumper, Seat, Short	4
32	<u>1013312</u>	Bumper, Seat, Long	1
33	<u>101562715</u>	Vinyl Cover, Seat Bottom, Gray	2
34	<u>101894303</u>	Stiffener	1
35	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	5
36	<u>332</u>	Washer, 1/4 Type A Narrow Flat	5

1
G
E

1

G

E

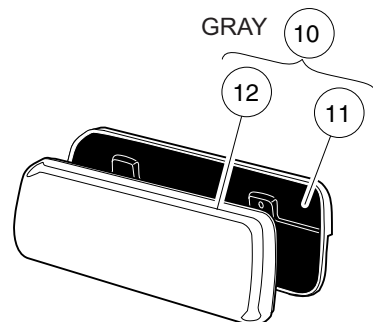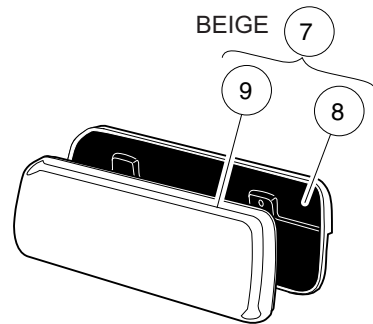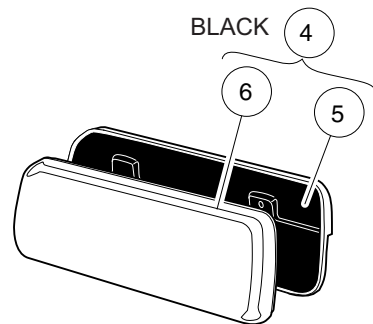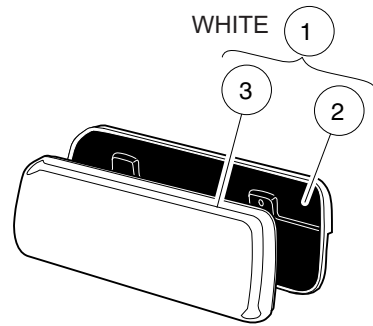

000608-001


SEAT BACK ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>101677701</u>	Seat Back Assembly, White (includes items 2 and 3)	1	
2	1016751	Cap, Seat Back	1	
3	<u>101675512</u>	Vinyl Seat Back, White	1	
4	<u>101677702</u>	Seat Back Assembly, Black (includes items 5 and 6)	1	
5	1016751	Cap, Seat Back	1	
6	<u>101675514</u>	Vinyl Seat Back, Black	1	
7	<u>101677703</u>	Seat Back Assembly, Beige (includes items 8 and 9)	1	
8	1016751	Cap, Seat Back	1	
9	<u>101675511</u>	Vinyl Seat Back, Beige	1	
10	<u>101677705</u>	Seat Back Assembly, Gray (includes items 11 and 12)	1	
11	1016751	Cap, Seat Back	1	
12	<u>101675515</u>	Vinyl Seat Back-nstd Svc	1	

1

G

E

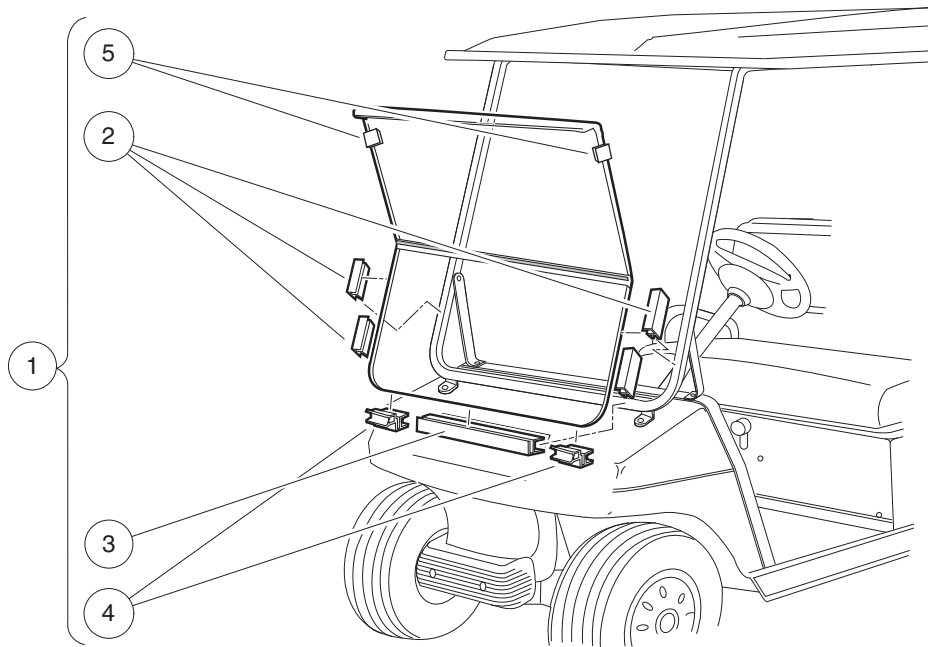

001205-001

WINDSHIELD, HINGED

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101728602	Hinged Windshield Kit (includes items 2 through 5)	1
2	102005701	5" Plastic Extrusion	4
3	102163001	Windshield Channel	1
4	102163101	Channel with Receiver Clip	2
5	N/A	Clip, Release	2

1


G

E

1

G

E

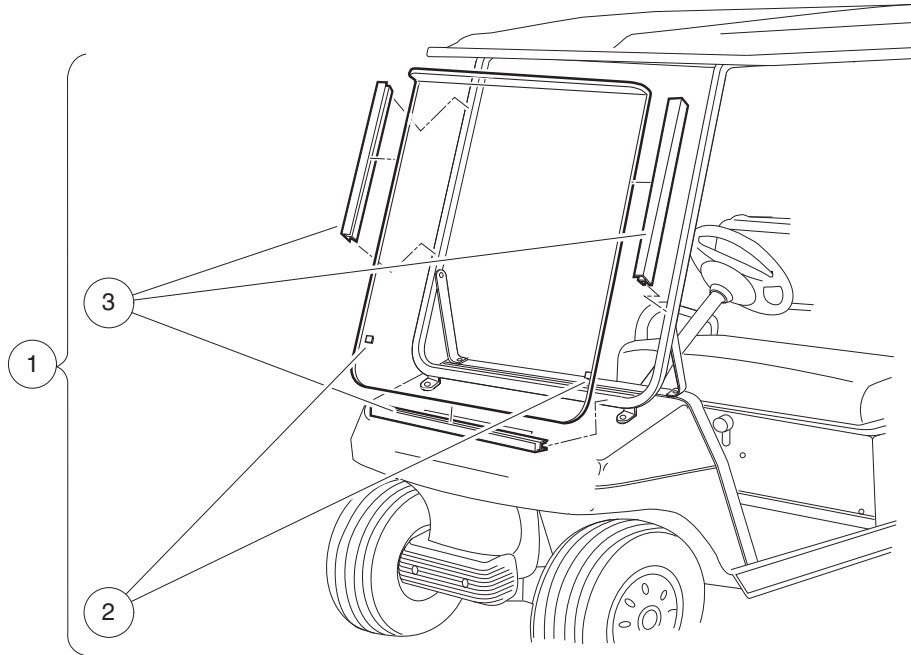

001204-001


WINDSHIELD, NON-HINGED

ITEM	PART NO.	DESCRIPTION	QTY
1	1014435	Windshield Tinted One-Piece (includes items 2 and 3)	1
2	<u>1011897</u>	Bumper, Protective	2
3	<u>101444101</u>	21" Plastic Extrusion	3

1

G

E

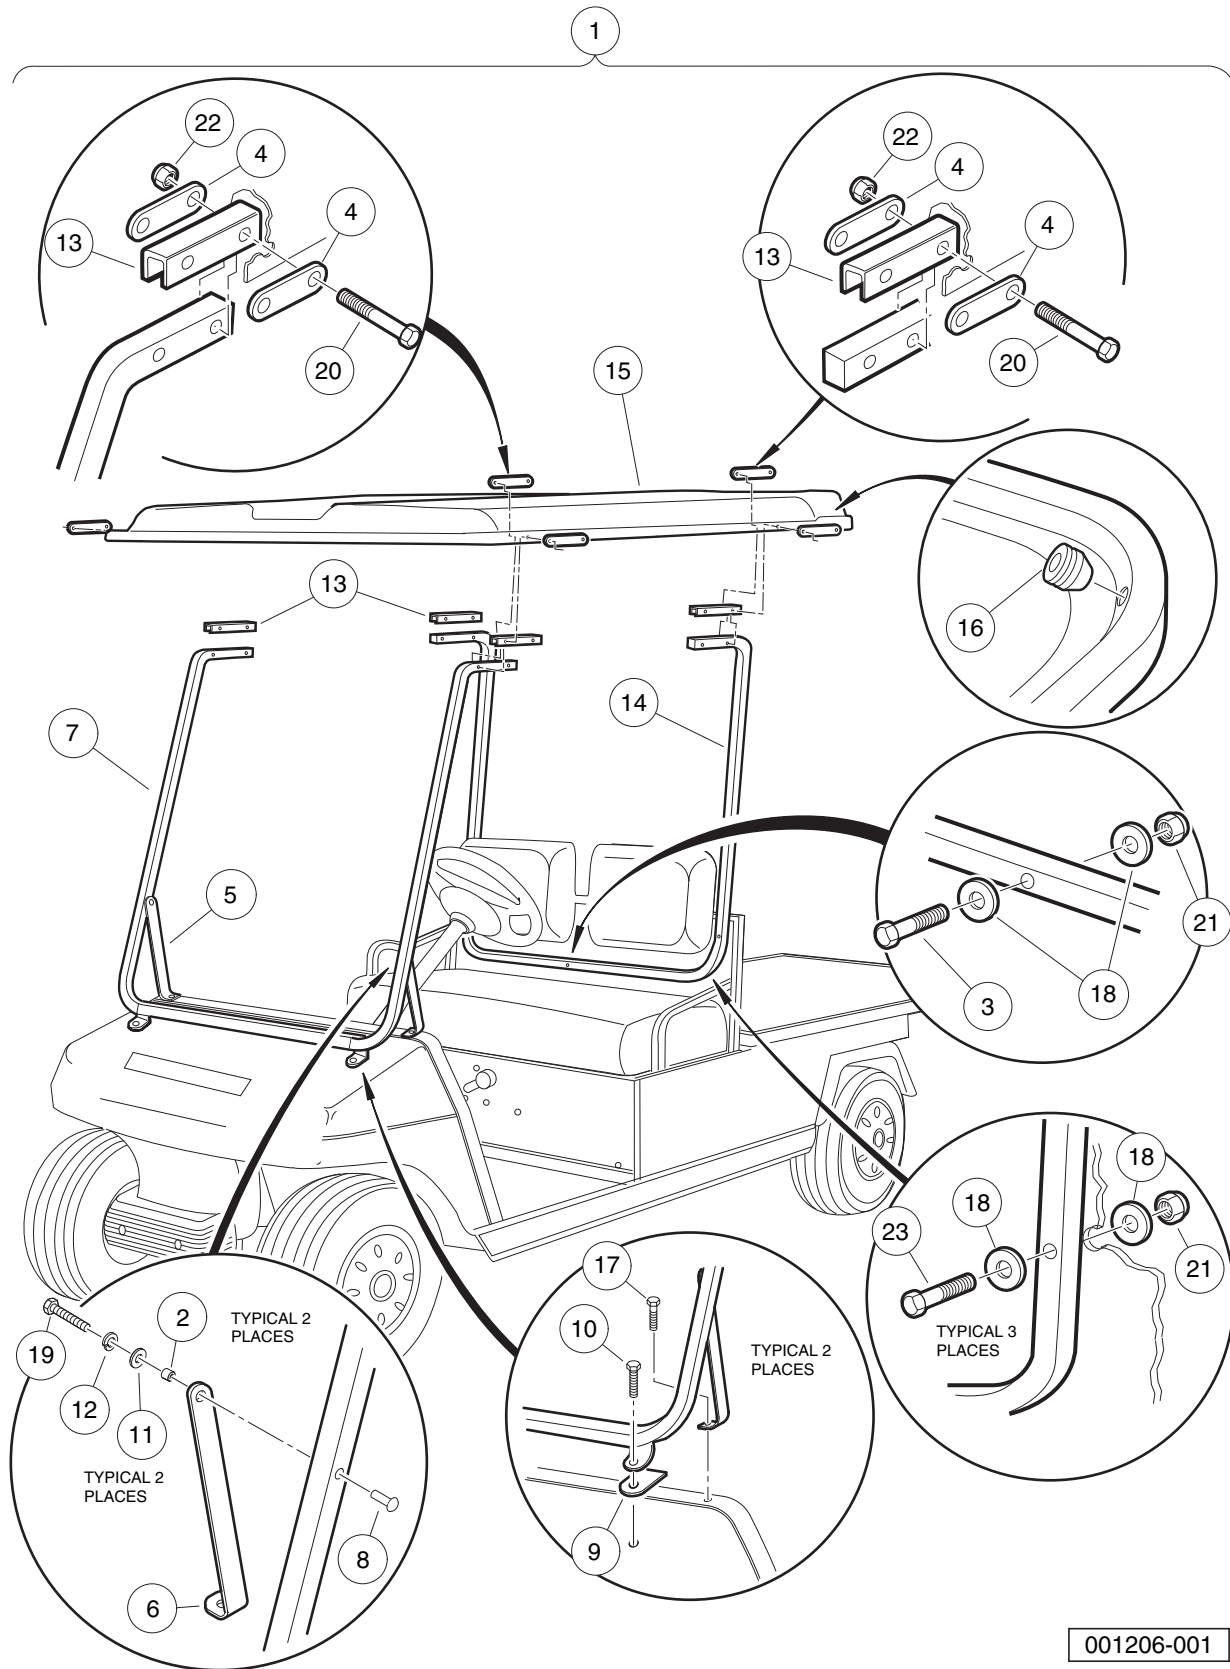

001206-001


CANOPY KIT, WHITE

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1014506</u>	Kit, Canopy, White (includes items 2 through 23)	1	
2	<u>1010237</u>	Bushing	2	
3	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	1	
4	<u>1011852</u>	Plate, Canopy Trim	8	
5	<u>1011862</u>	Brace, Right-Hand Canopy Mount Knee	1	
6	<u>1011865</u>	Brace, Left-Hand Canopy Mount Knee	1	
7	<u>1011868</u>	Weldment, Windshield Frame	1	
8	<u>1011878</u>	T-nut, 1/4-20 X .310 Capped	2	
9	<u>1011883</u>	Pad, Windshield Frame Mounting	2	
10	<u>1011937</u>	Bolt, 5/16-18 X 1.25 Hex Head	2	
11	<u>1011964</u>	Washer, 1/4 Flat	2	
12	<u>1011965</u>	Lockwasher, 1/4 Split Ss	2	
13	<u>1012008</u>	Support, Side Canopy	4	
14	<u>1014503</u>	Brace, Rear Canopy	1	
15	<u>1014509</u>	Canopy, White (includes item 16)	1	
16	<u>1011942</u>	Modified Grommet	2	
17	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	2	
18	<u>1241</u>	Washer, 5/16 Type A Flat	6	
19	<u>1703</u>	Screw, 1/4-20 X 1.50 Hx Hd Cap	2	
20	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	8	
21	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	3	
22	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	8	
23	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	3	

1

G

E

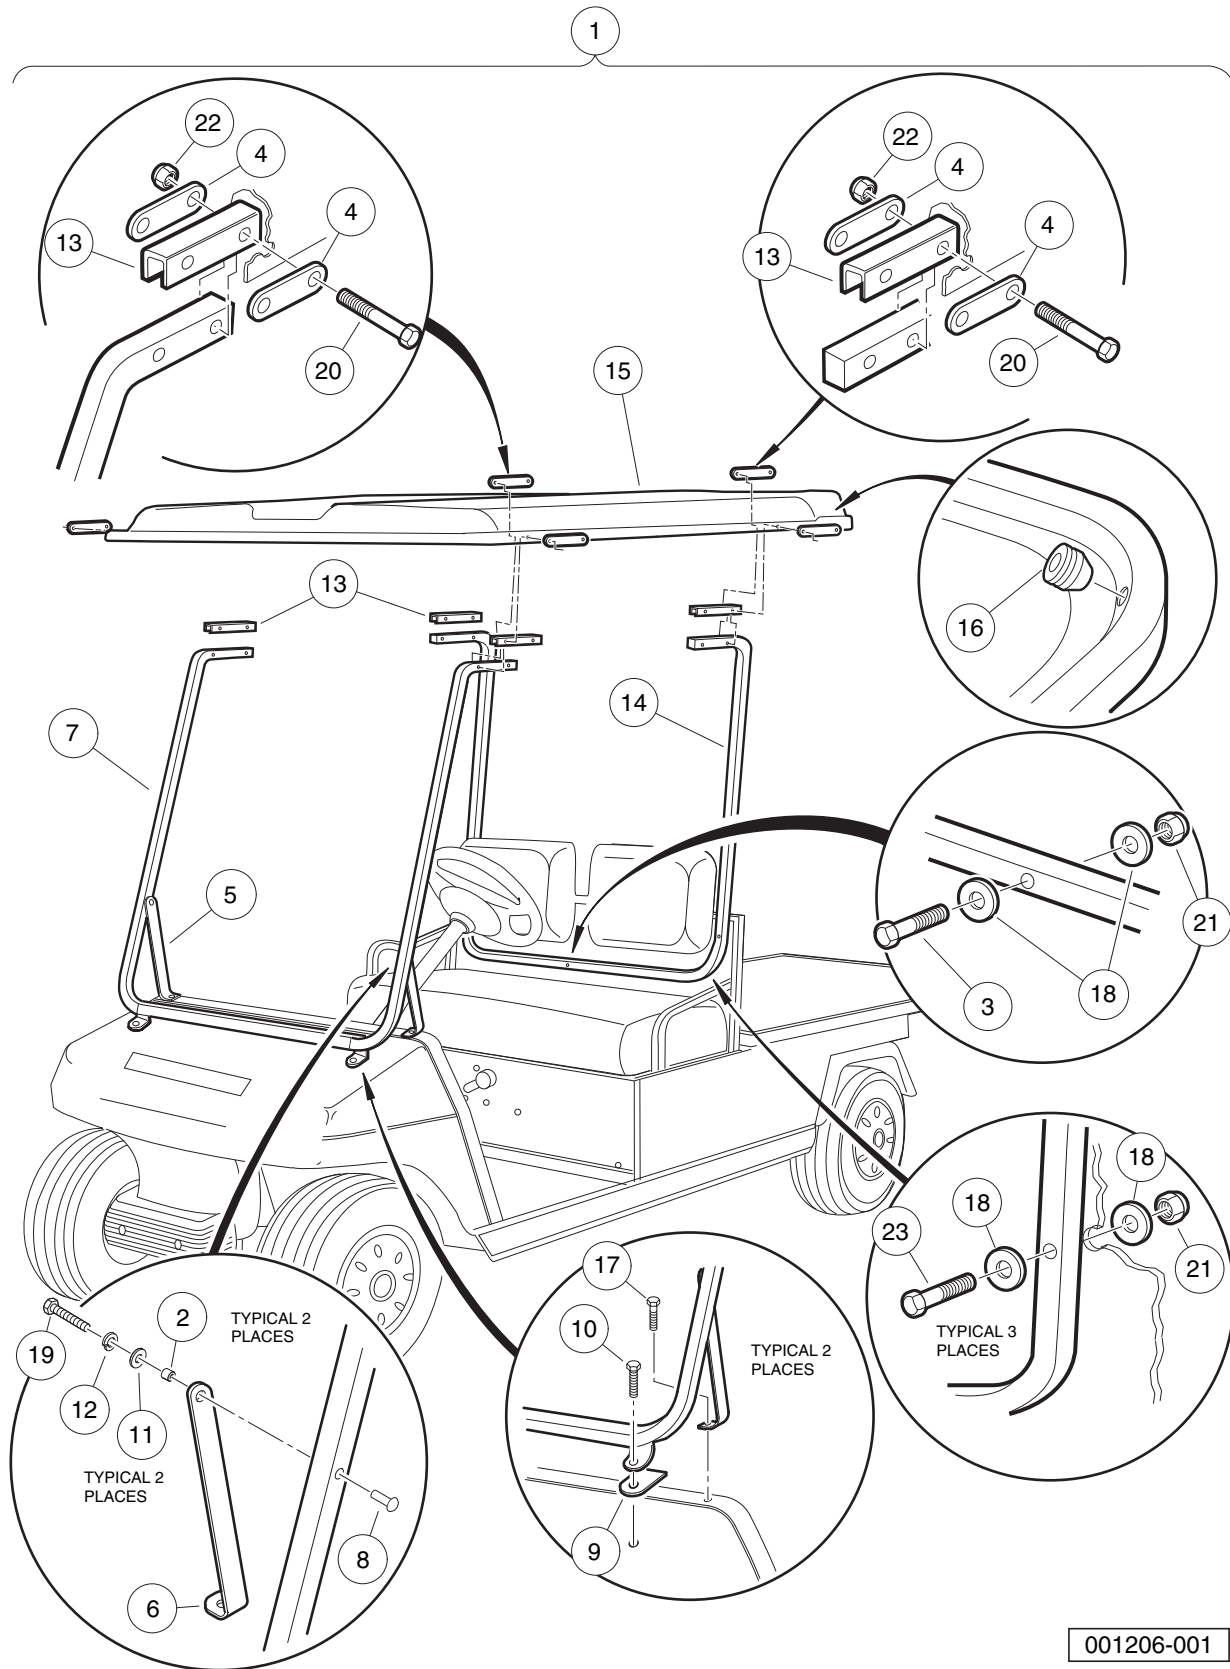


CANOPY KIT, BEIGE

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>101450698</u>	Kit, Canopy, Beige, Ca1/2 (includes items 2 through 23)	1	
2	<u>1010237</u>	Bushing	2	
3	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	1	
4	<u>1011852</u>	Plate, Canopy Trim	8	
5	<u>1011862</u>	Brace, Right-Hand Canopy Mount Knee	1	
6	<u>1011865</u>	Brace, Left-Hand Canopy Mount Knee	1	
7	<u>1011868</u>	Weldment, Windshield Frame	1	
8	<u>1011878</u>	T-nut, 1/4-20 X .310 Capped	2	
9	<u>1011883</u>	Pad, Windshield Frame Mounting	2	
10	<u>1011937</u>	Bolt, 5/16-18 X 1.25 Hex Head	2	
11	<u>1011964</u>	Washer, 1/4 Flat	2	
12	<u>1011965</u>	Lockwasher, 1/4 Split Ss	2	
13	<u>1012008</u>	Support, Side Canopy	4	
14	<u>1014503</u>	Brace, Rear Canopy	1	
15	<u>101450903</u>	Asm, Canopy, Beige (includes item 16)	1	
16	<u>1011942</u>	Modified Grommet	2	
17	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	2	
18	<u>1241</u>	Washer, 5/16 Type A Flat	6	
19	<u>1703</u>	Screw, 1/4-20 X 1.50 Hx Hd Cap	2	
20	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	8	
21	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	3	
22	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	8	
23	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	3	

1

G

E

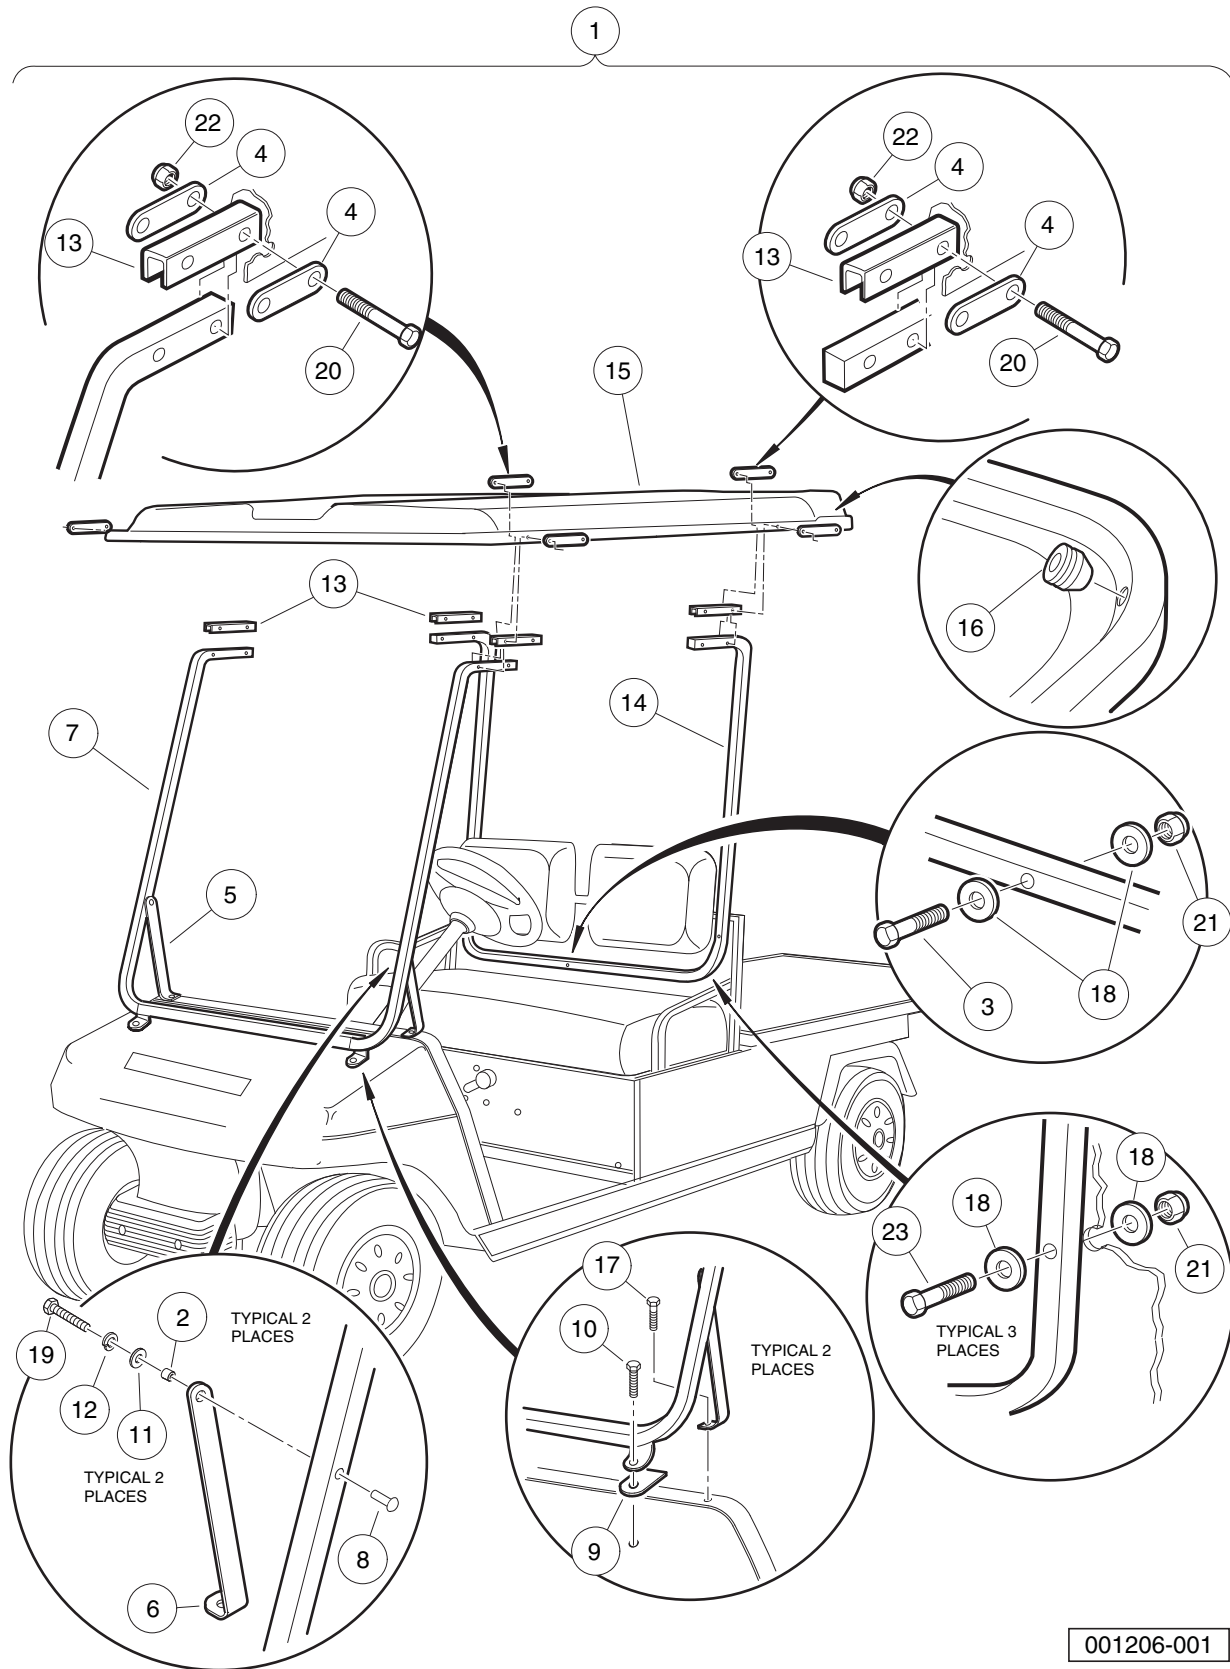

001206-001


CANOPY KIT, BLACK

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>102198501</u>	Canopy Top Kit, Black (includes items 2 through 23)	1	
2	<u>1010237</u>	Bushing	2	
3	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	1	
4	<u>1011852</u>	Plate, Canopy Trim	8	
5	<u>1011862</u>	Brace, Right-Hand Canopy Mount Knee	1	
6	<u>1011865</u>	Brace, Left-Hand Canopy Mount Knee	1	
7	<u>1011868</u>	Weldment, Windshield Frame	1	
8	<u>1011878</u>	T-nut, 1/4-20 X .310 Capped	2	
9	<u>1011883</u>	Pad, Windshield Frame Mounting	2	
10	<u>1011937</u>	Bolt, 5/16-18 X 1.25 Hex Head	2	
11	<u>1011964</u>	Washer, 1/4 Flat	4	
12	<u>1011965</u>	Lockwasher, 1/4 Split Ss	2	
13	<u>1012008</u>	Support, Side Canopy	4	
14	<u>1014503</u>	Brace, Rear Canopy	1	
15	<u>101450902</u>	Asm, Canopy, Black (includes item 16)	1	
16	<u>1011942</u>	Modified Grommet	2	
17	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	2	
18	<u>1241</u>	Washer, 5/16 Type A Flat	6	
19	<u>1703</u>	Screw, 1/4-20 X 1.50 Hx Hd Cap	2	
20	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	8	
21	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	3	
22	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	8	
23	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	3	

1

G

E

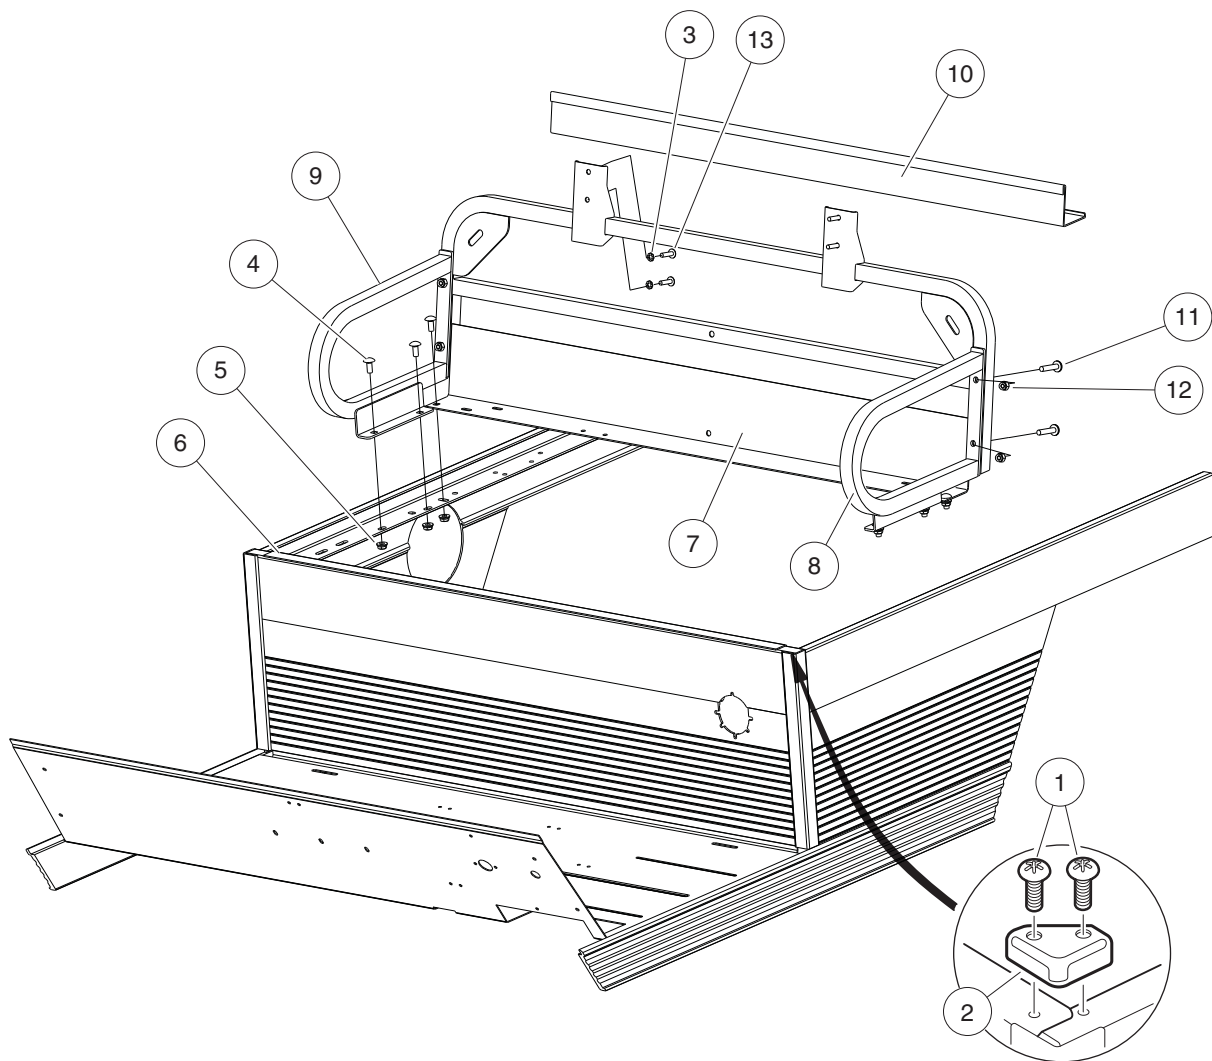

000603-004


HIP RESTRAINTS AND SEAT BACK MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1014321</u>	Screw, #10 Truss-Head Torx	4	
2	<u>1014387</u>	Cap, Corner	2	
3	<u>101946201</u>	Washer, Lock, 0.250 External-Tooth	4	
4	<u>101963301</u>	Bolt, 5/16-18 X 0.75 Round-Head	6	
5	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	6	
6	<u>101964001</u>	Trim, Seat Bottom Front	1	
7	<u>102966401</u>	Seat Back, Tube	1	
8	<u>102966501</u>	Hip Restraint, Left	1	
9	<u>102966502</u>	Hip Restraint, Right	1	
10	<u>102989501</u>	Seal, Bed, 41-Inch	1	
11	<u>103245201</u>	Screw, 5/16-18 X 1.5, Tr Tx Hd	4	
12	<u>103245301</u>	Nut, Hex, Cp, Mech Def, 5/16-1	4	
13	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	4	

1

G

E

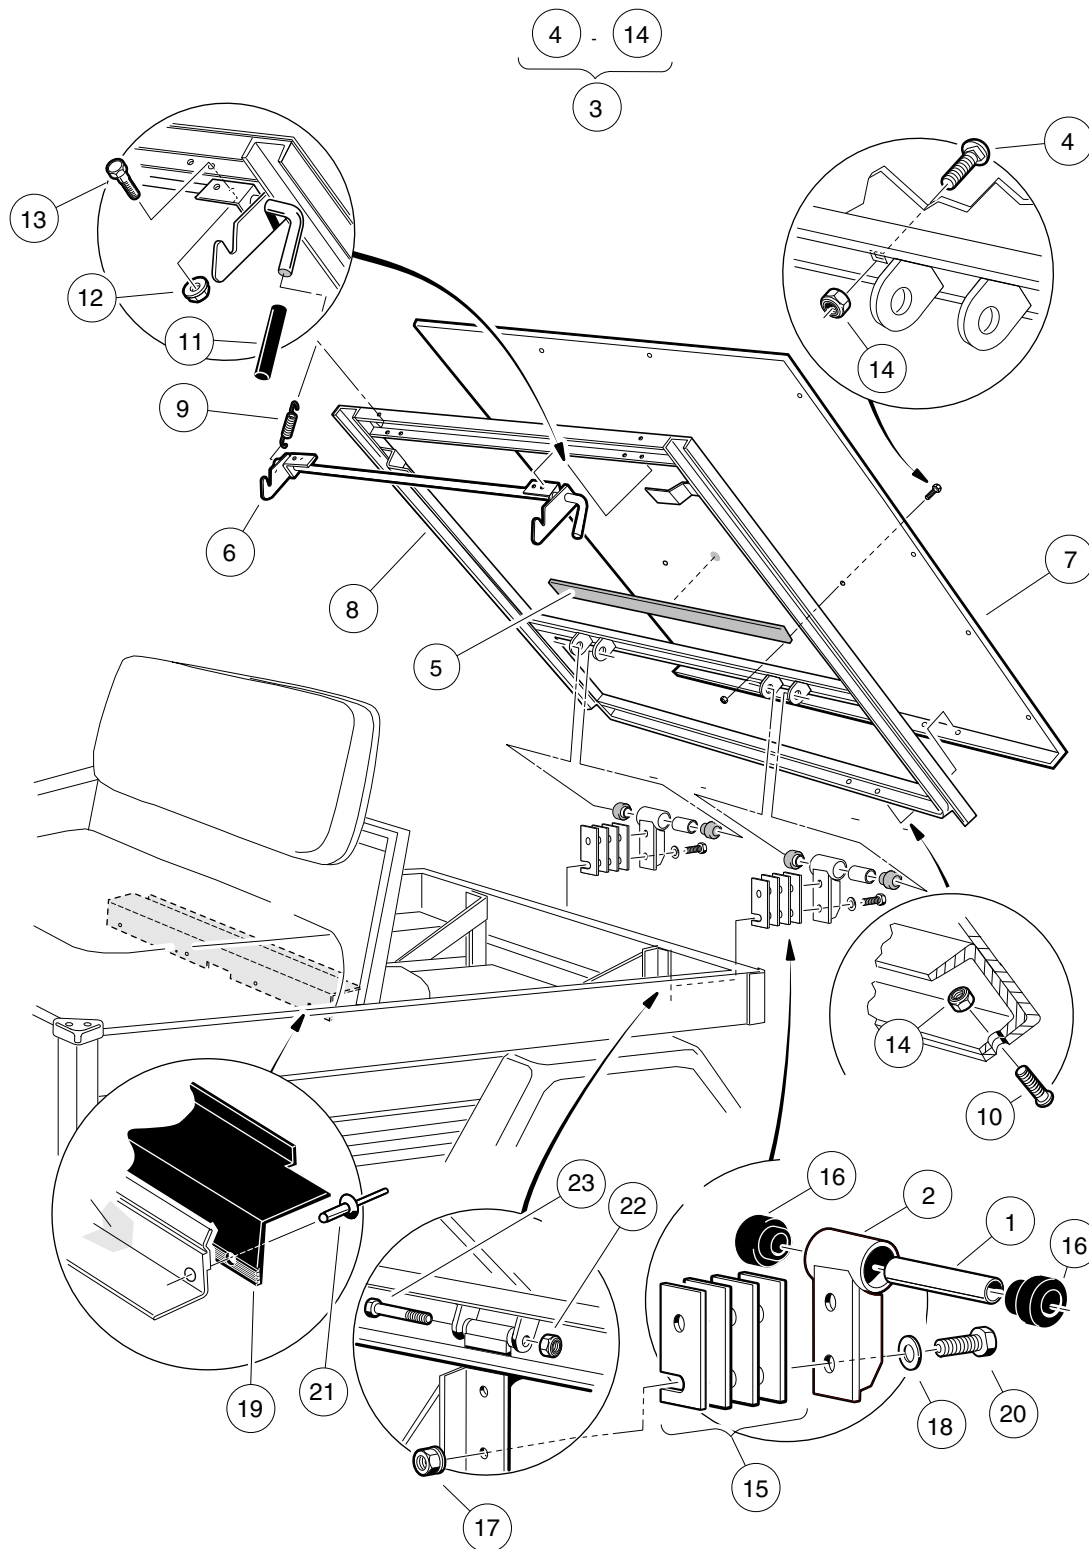

000256-002


TILT BED, HINGE, AND LATCH – TURF/CARRYALL 1

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1012303</u>	Bushing, Steel	2	
2	<u>1015356</u>	Hinge	2	
3	<u>1015427</u>	Tilt Bed, Carryall 1 (includes items 4 through 14)	1	
4	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	2	
5	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4"	1	
6	<u>1015252</u>	Latch Weld Assembly	1	
7	N/A	Plate, Floor, Carryall 1 Flat bed	1	
8	N/A	Frame Assembly, Tilt Bed	1	
9	<u>1015391</u>	Extension, Spring Latch	2	
10	<u>1015399</u>	Screw, 5/16-18 X 0.88 Torx Truss-Head	4	
11	<u>1015400</u>	Grip, Tilt Latch Hand	1	
12	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	4	
13	<u>403</u>	Screw, 1/4-20 X 0.625 Hex-Head Cap	4	
14	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	6	
15	<u>1015507</u>	Shim, Tilt Bed Pivot	A/R	
16	<u>1015583</u>	Bushing, Urethane	4	
17	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4	
18	<u>102066001</u>	Washer, 3/8 Type B Hard Flat	4	
19	<u>102989501</u>	Seal, Bed, 41-Inch	1	
20	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	4	
21	<u>7532</u>	Rivet, 3/16 X 0.3125, Pop	1	
22	<u>8754</u>	Locknut, 3/8-16 Hex	2	
23	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2	

1

G

E

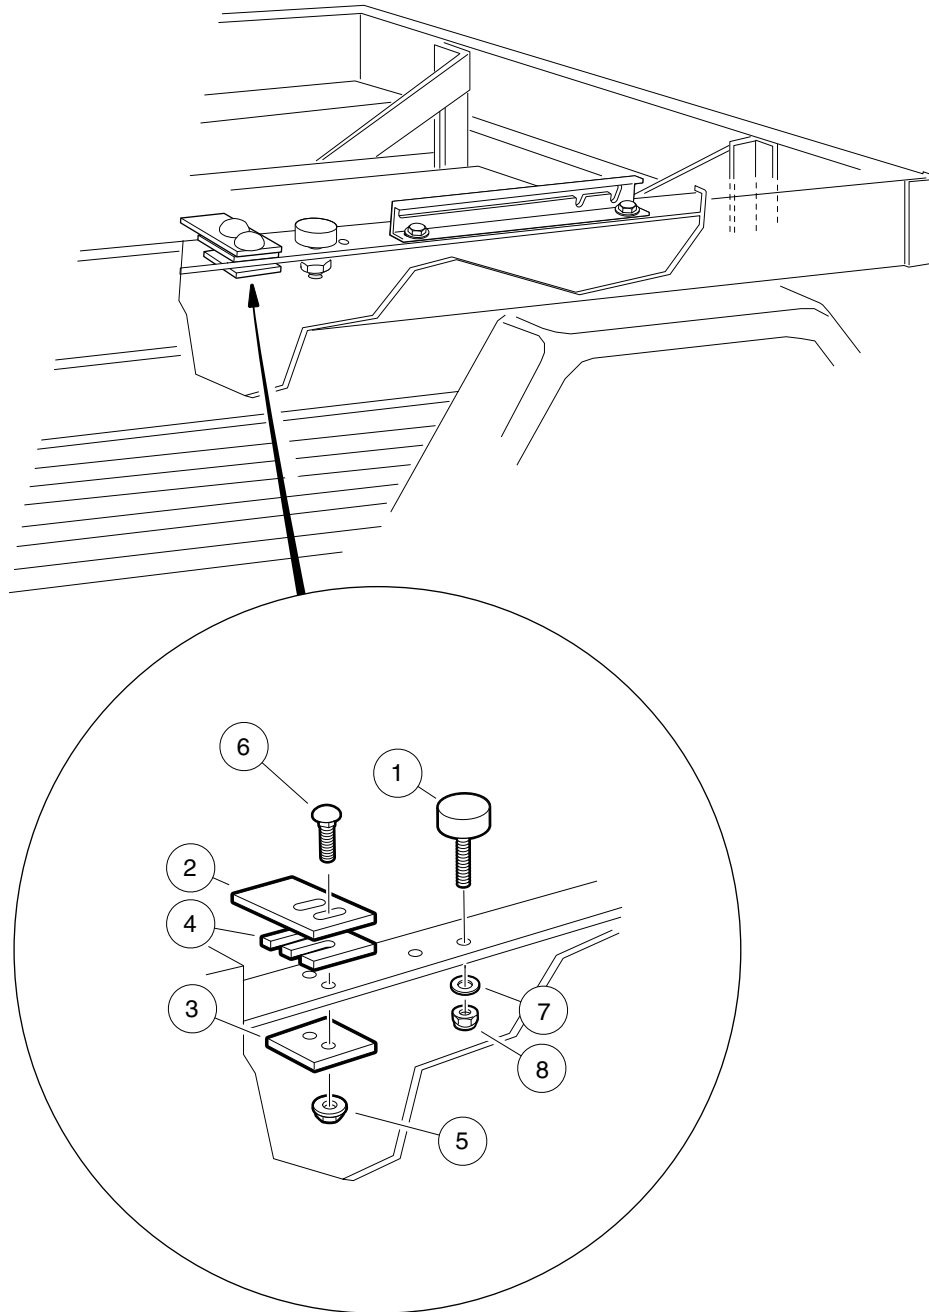

000258-002

LATCH PLATE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010878	Bumper, Rubber	2
2	1015277	Latch Plate, Tilt Bed	2
3	1016060	Plate, Latch Support	2
4	1016078	Latch Plate Shim	A/R
5	101835601	Locknut, 1/4-20 Hex Whiz	4
6	101958601	Carriage Bolt, 1/4-20 X 0.75	4
7	332	Washer, 1/4 Type A Narrow Flat	4
8	8233	Locknut, 1/4-20, Nylon Insert	4

1


G

E

1

G

E

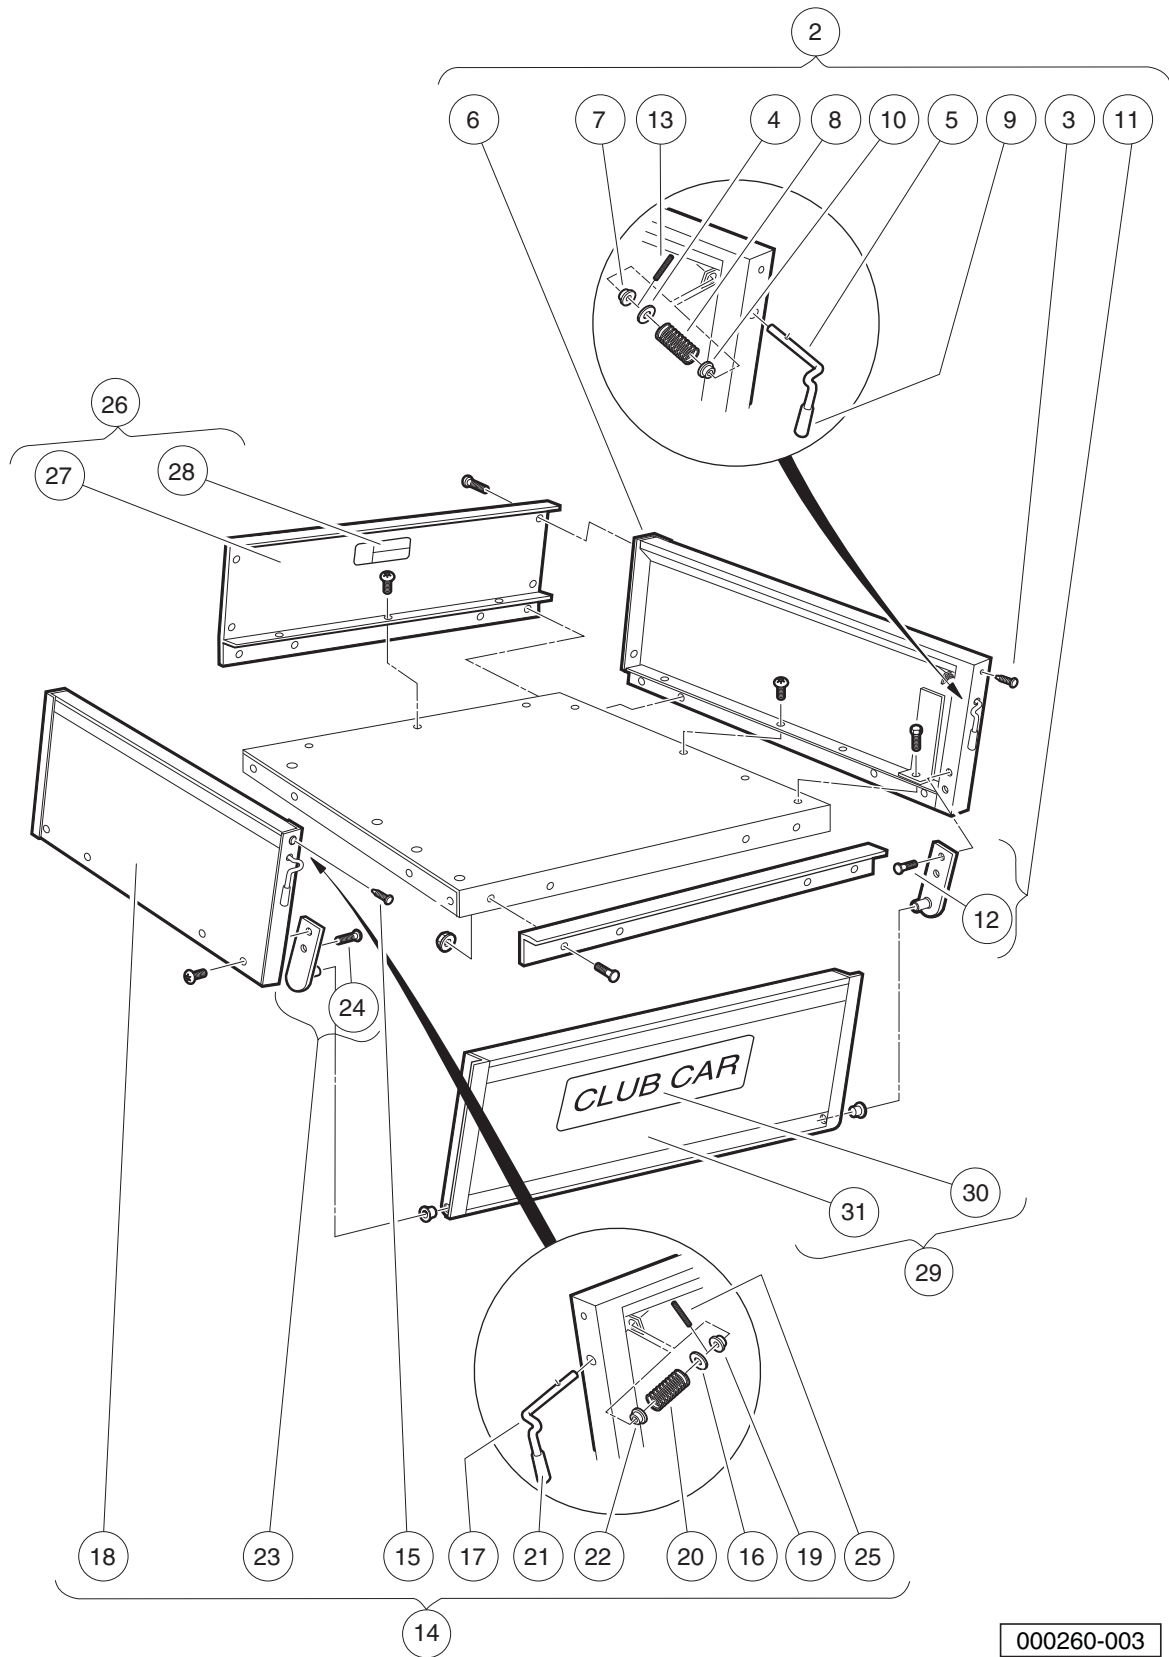


000260-003

CARGO BOX

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015606</u>	Kit, Cargo Box (includes items 2 through 29)	1
2	<u>1015365</u>	Side Panel Assembly, Right-Hand (includes items 3 through 13)	1
3	<u>1010434</u>	Barrel - Plastic	1
4	<u>1011990</u>	Washer, 3/8 Flat	1
5	<u>1015245</u>	Latch, Tailgate, Right-Hand	1
6	N/A	Side-Panel Weldment, Right-Hand	1
7	<u>1015363</u>	Bushing, Snap-In	1
8	<u>1015390</u>	Compression Spring Latch Tilt	1
9	<u>1015400</u>	Grip, Tilt Latch Hand	1
10	<u>1032</u>	Bushing, Nylon	1
11	<u>103406502</u>	Kit, Tailgate Mounting Bracket, CA, RH (includes item 12)	1
12	<u>103406601</u>	Stud, 1/4 Self-clnchg Flush	2
13	1231	Pin, 1/8 X 1.00 Split Roll	1
14	<u>1015367</u>	Side Panel Assembly, Left-Hand (includes items 15 through 25)	1
15	<u>1010434</u>	Barrel - Plastic	1
16	<u>1011990</u>	Washer, 3/8 Flat	1
17	<u>1015313</u>	Latch, Tailgate, Left-Hand	1
18	N/A	Side-Panel Weldment	1
19	<u>1015363</u>	Bushing, Snap-In	1
20	<u>1015390</u>	Compression Spring Latch Tilt	1
21	<u>1015400</u>	Grip, Tilt Latch Hand	1
22	<u>1032</u>	Bushing, Nylon	1
23	<u>103406501</u>	Kit, Tailgate Mounting Bracket, CA, LH (includes item 24)	1
24	<u>103406601</u>	Stud, 1/4 Self-clnchg Flush	2
25	1231	Pin, 1/8 X 1.00 Split Roll	1
26	<u>1015413</u>	Assembly, Front Panel (includes items 27 and 28)	1
27	N/A	Front Panel Box	1
28	<u>101553901</u>	Decal, Bed Load Warning	1
29	1015414	Assembly, Tailgate (includes items 30 and 31)	1
30	<u>1013317</u>	Decal, Logo, Tailgate	1
31	N/A	Tailgate Weldment	1
Note: Additional components in kit <u>1015606</u> are shown on the following two pages.			


1
G
E

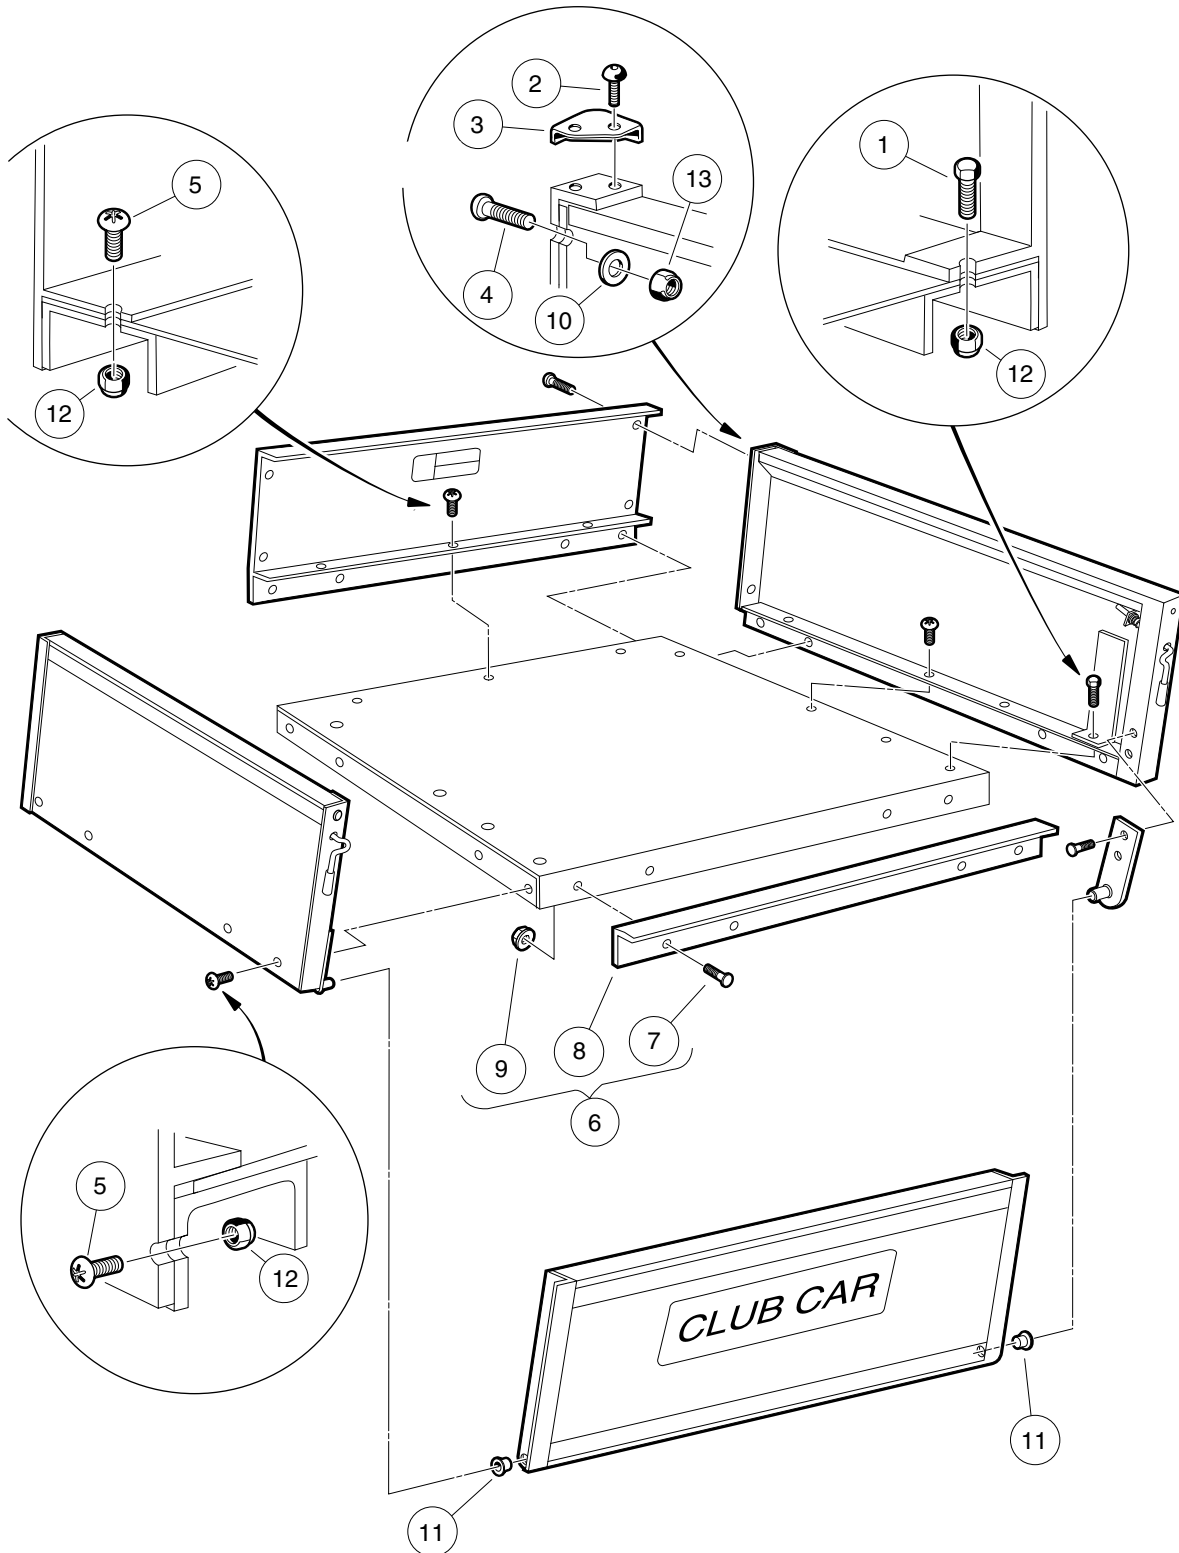1**G****E**

000261-001

CARGO BOX MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	2	
2	<u>1014321</u>	Screw, #10 Truss-Head Torx	4	
3	<u>1014387</u>	Cap, Corner	2	
4	<u>1014415</u>	Screw, 1/4-20 X 0.75 Torx Truss-Head	4	
5	<u>1015399</u>	Screw, 5/16-18 X 0.88 Torx Truss-Head	17	
6	****	Kit, Tailgate Angle (includes items 7 through 9)	1	
7	<u>1014537</u>	Stud, Self-Clinching Flush Head	4	
8	N/A	Box Bed Tailgate Angle	1	
9	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4	
10	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4	
11	<u>7049</u>	Bushing, Nylon	2	
12	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	19	
13	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4	
**** Special order item available upon request. Note: All parts listed on this page are included in kit 1015606.				

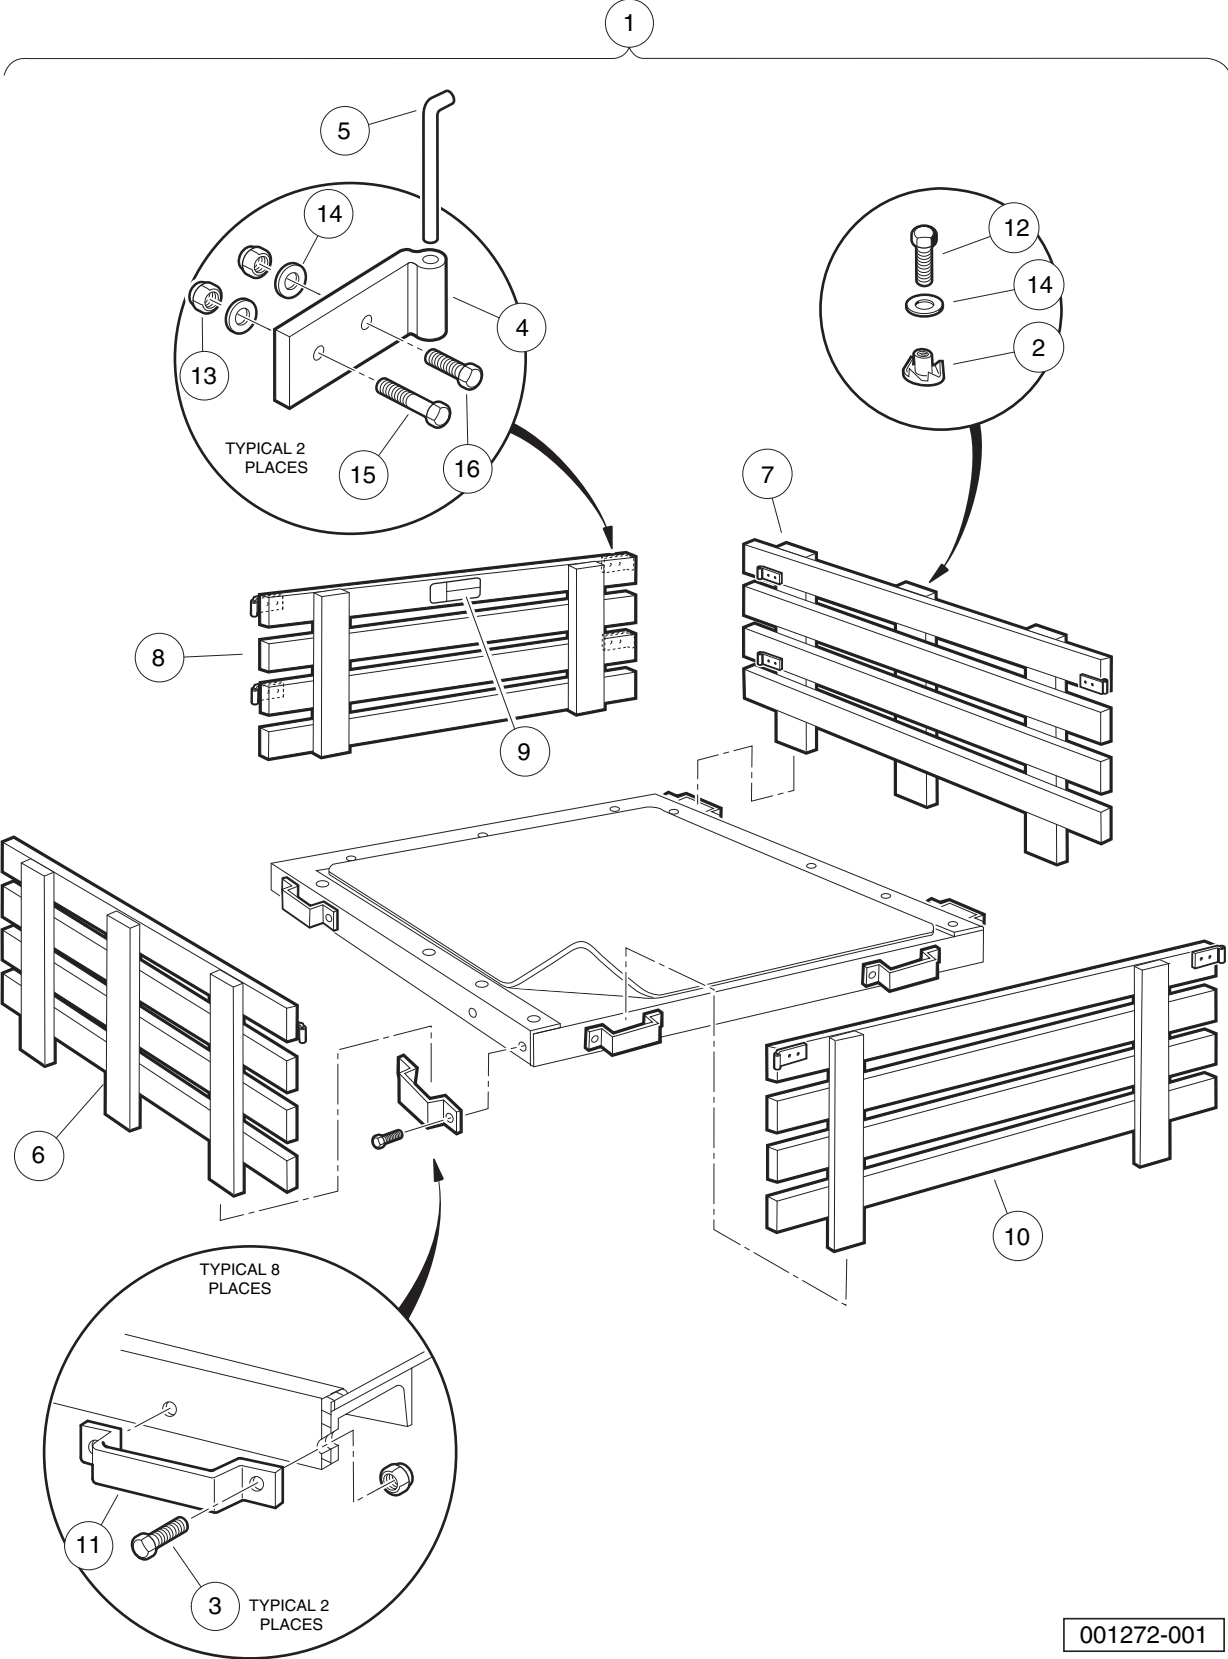

001272-001


STAKE SIDE KIT – TURF/CA 1 AND TRANSPORTER 4

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1015660</u>	Stake Side Kit (includes items 2 through 16)	1	
2	<u>1010086</u>	T-Nut	58	
3	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	16	
4	<u>1015654</u>	Stake Side Hinge	12	
5	<u>1015656</u>	Pin, hinge	6	
6	<u>101565701</u>	Stake Side, Driver-Side	1	
7	<u>101565702</u>	Stake Side, Passenger-Side	1	
8	<u>101565703</u>	Stake Side, Front (includes item 9)	1	
9	<u>101553901</u>	Decal, Bed Load Warning	1	
10	<u>101565704</u>	Stake Side, Rear	1	
11	<u>1016077</u>	Bracket, Stake Side	6	
12	<u>1016916</u>	Screw, 1/4-20 X 1.50 Hex-Head Cap	58	
13	<u>1108</u>	Locknut, 1/4-20 Dimpled	24	
14	<u>332</u>	Washer, 1/4 Type A Narrow Flat	82	
15	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	6	
16	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	18	

1

G

E

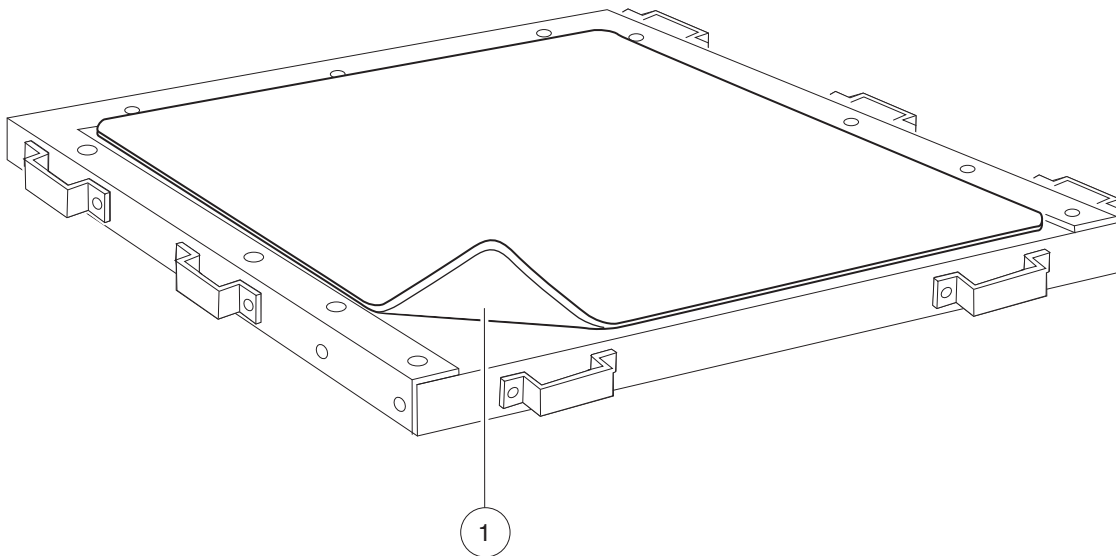

001207-001


BED MAT

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	<u>101770203</u>	1 2 3 4 Bed Mat - Turf/Carryall 1	1	

1

G

E

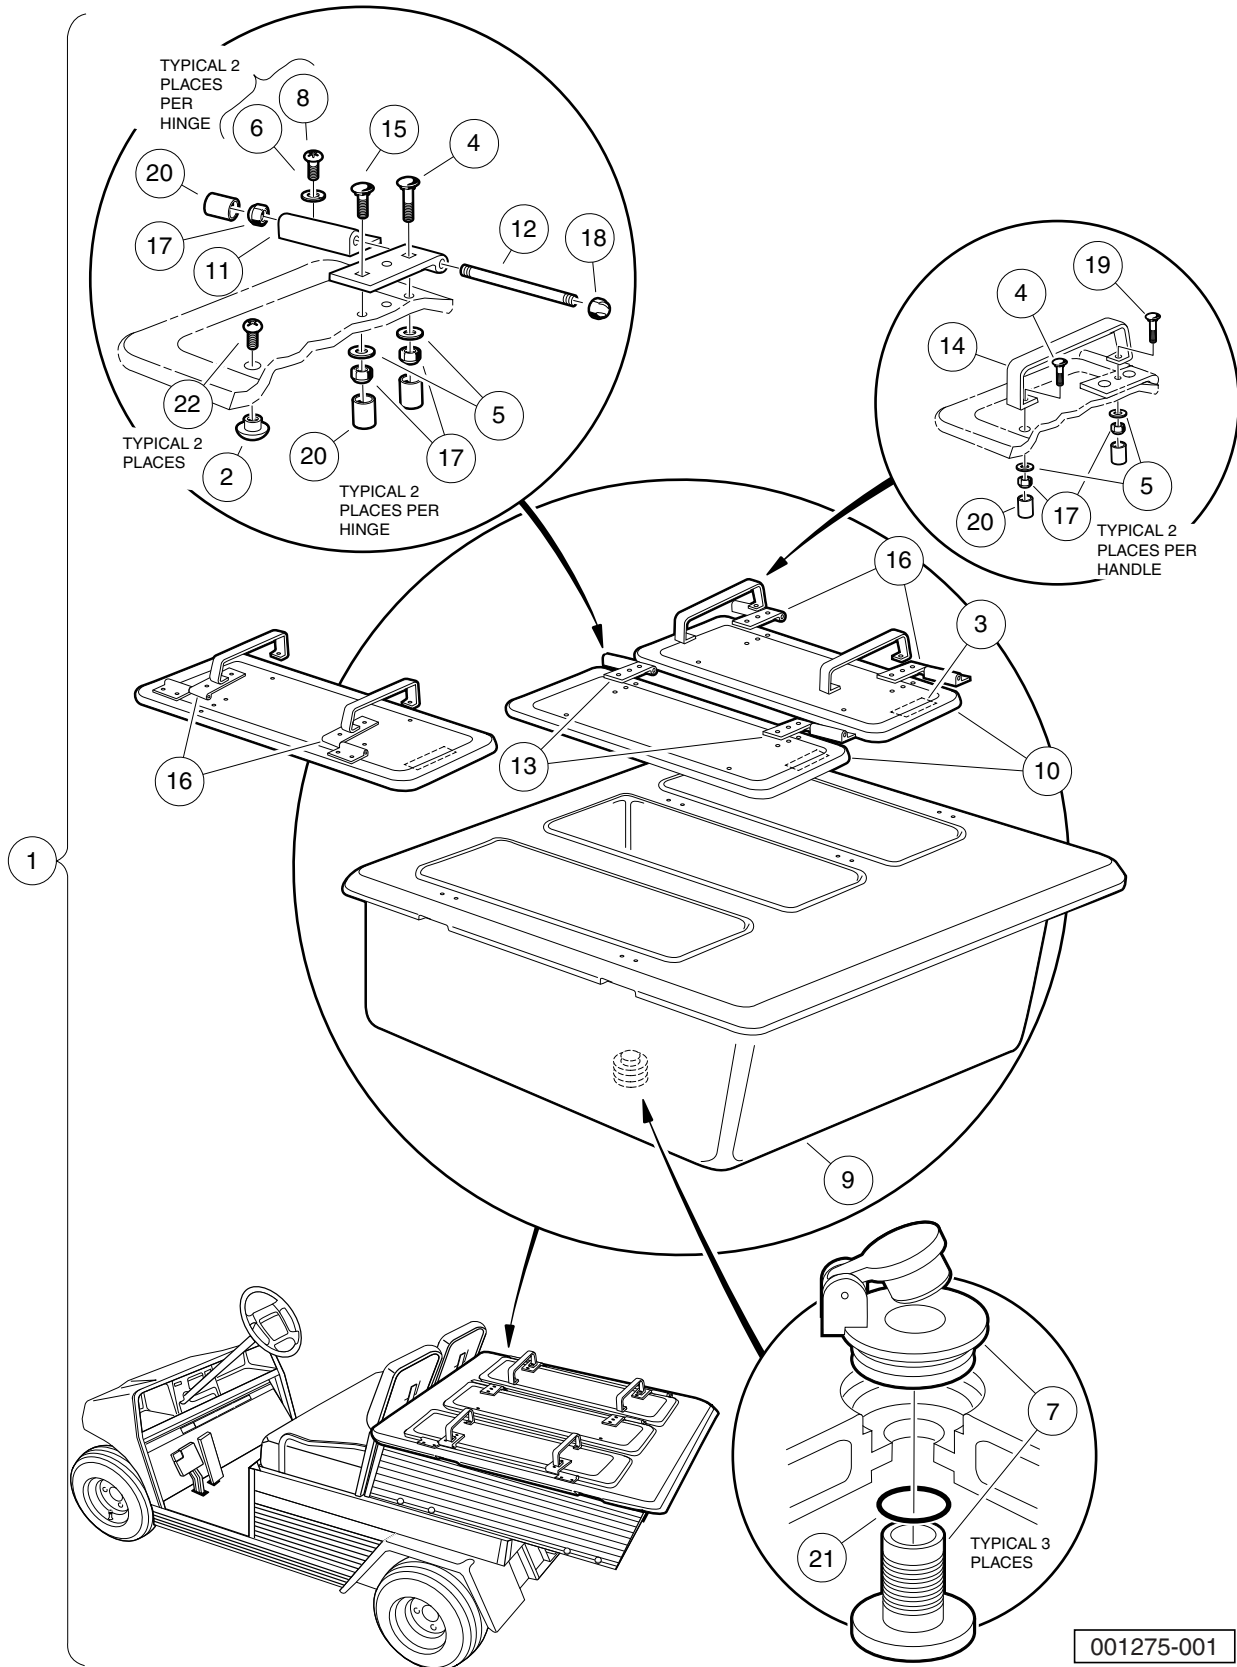



PORTABLE REFRESHMENT CENTER

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	1014556	Portable Refreshment Center (includes items 2 through 22)	1	
2	1011878	T-nut, 1/4-20 X .310 Capped	2	
3	<u>1011962</u>	Decal, Refreshment Center	3	
4	<u>1011963</u>	Bolt, 1/4-20 X 1.50 Rd Hd Sq N	10	
5	1011964	Washer, 1/4 Flat	20	
6	<u>1011965</u>	Lockwasher, 1/4 Split Ss	12	
7	<u>1011972</u>	Drain Plug (port Refresh Ctr)	3	
8	<u>1014415</u>	Screw, 1/4-20 X 0.75 Torx Truss-Head	12	
9	1014490	Refreshment Unit Carryall I	1	
10	<u>1014517</u>	Refreshment Unit Door Ca I	3	
11	<u>1014521</u>	Bar Unit Hinge Ca I	6	
12	<u>1014548</u>	Rod, Refreshment Center Hinge	6	
13	<u>1014559</u>	Bar Unit Center Door Hinge Cai	2	
14	<u>1014942</u>	Bar Unit Handle	4	
15	<u>1014943</u>	Bolt, 1/4-20 X 1.25 Stainless	6	
16	<u>1014944</u>	Bar Unit Side Door Hinge Ca I	4	
17	1015068	Locknut, 1/4-20 Nylon	26	
18	<u>1015091</u>	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	6	
19	<u>1015148</u>	Bolt, 1/4-20 X 1.75 Carriage	4	
20	<u>101885601</u>	Cap	26	
21	<u>101918101</u>	O-ring, Prc	3	
22	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	2	

1

G

E

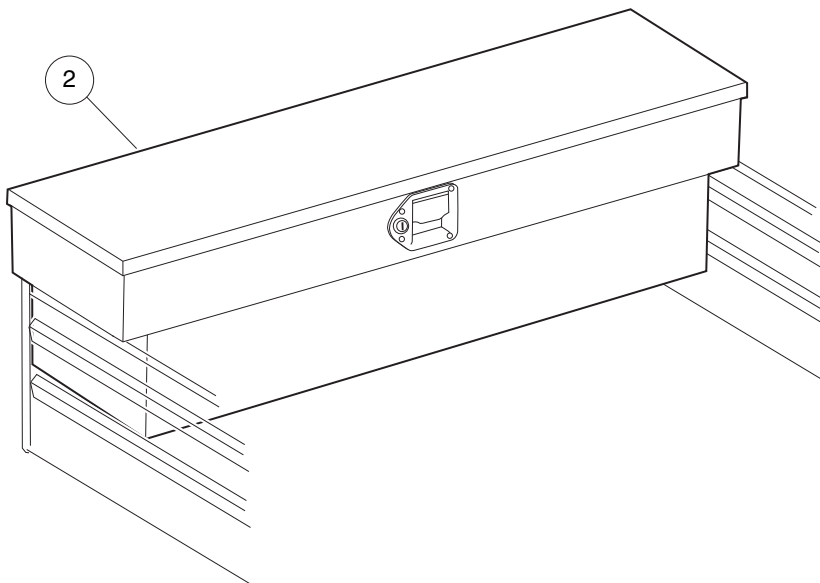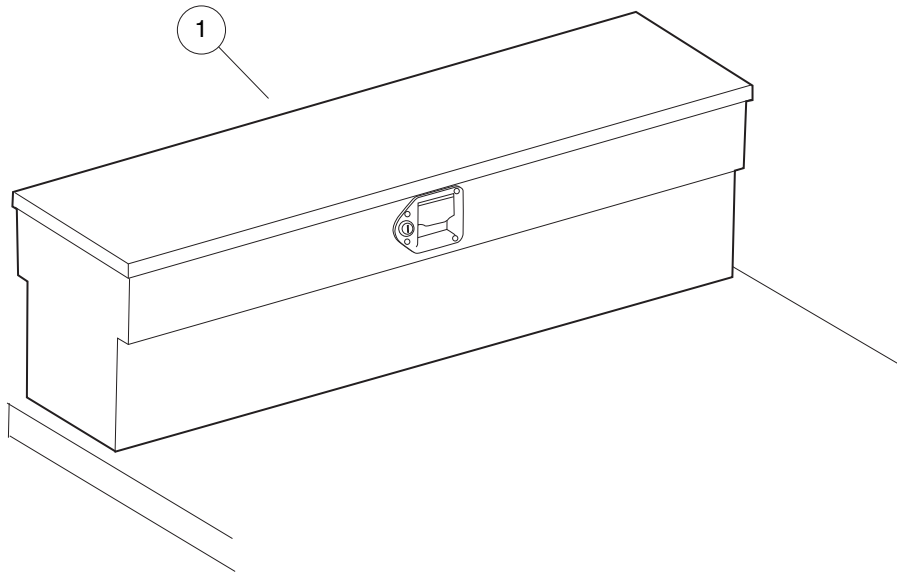

001157-001

TOOLBOXES

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>101837401</u>	1 2 3 4 Toolbox, Flat Bed	1
2	<u>101837501</u>	Tool Box, Box Bed	1

1


G

E

1

G

E

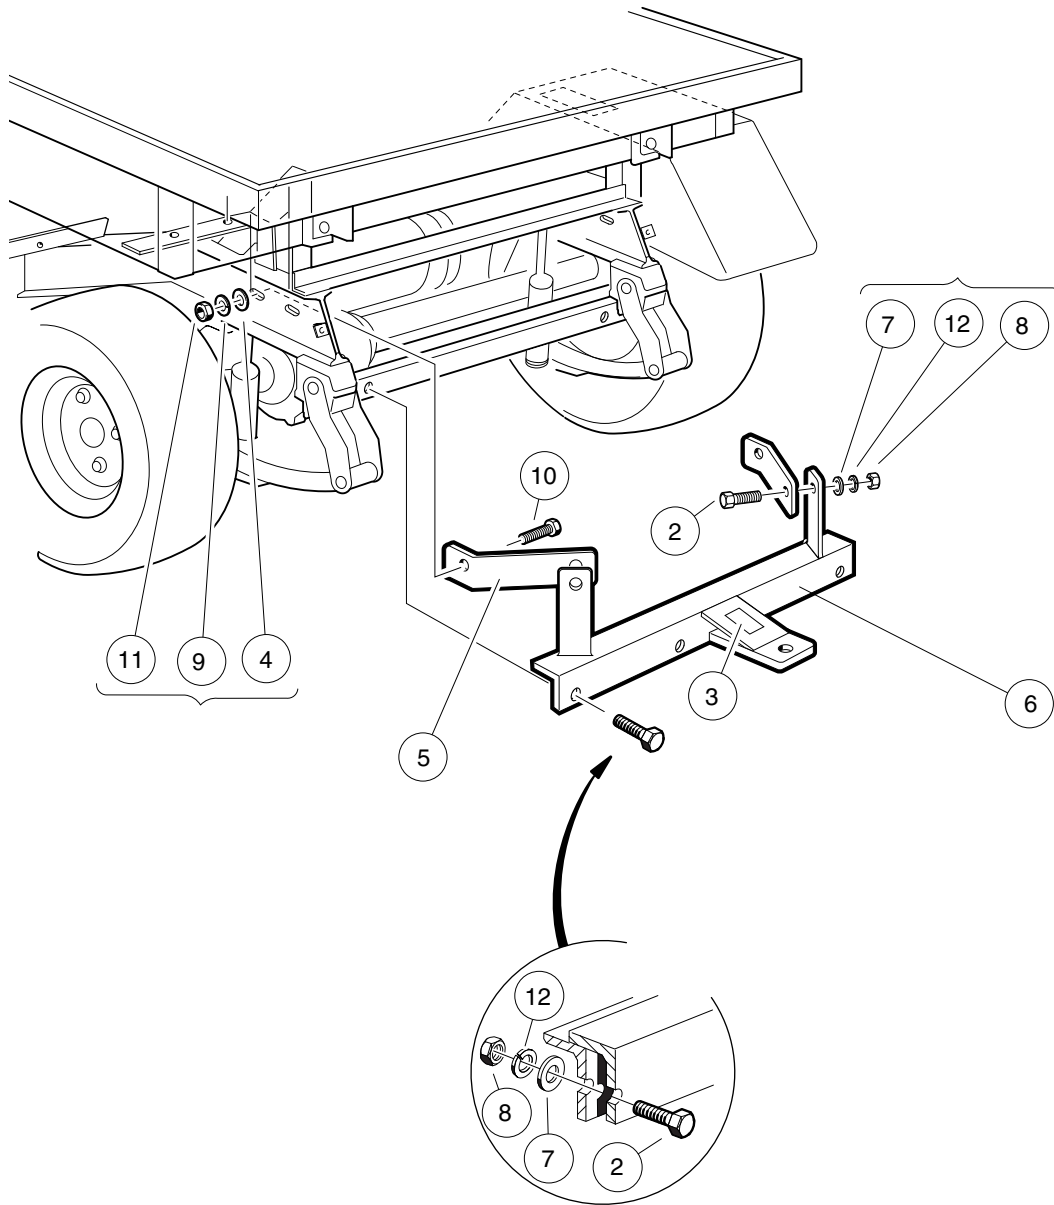

000265-001


TRAILER HITCH

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1015445</u>	Kit, Trailer Hitch (includes items 2 through 12)	1	
2	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	4	
3	<u>1011553</u>	Decal, Trailer Hitch	1	
4	<u>1011990</u>	Washer, 3/8 Flat	2	
5	<u>1013483</u>	Brace, Trailer Hitch	2	
6	N/A	Asm, Trailer Hitch	1	
7	<u>1241</u>	Washer, 5/16 Type A Flat	4	
8	<u>1242</u>	Nut, 5/16-18 Hex	4	
9	<u>357</u>	Lockwasher, 3/8 Split	2	
10	705	Screw, Cap-hex Hd 3/8-16x1.25	2	
11	<u>706</u>	Nut, Hex 3/8-16	2	
12	<u>7174</u>	Lockwasher, 5/16 Split	4	

1

G

E

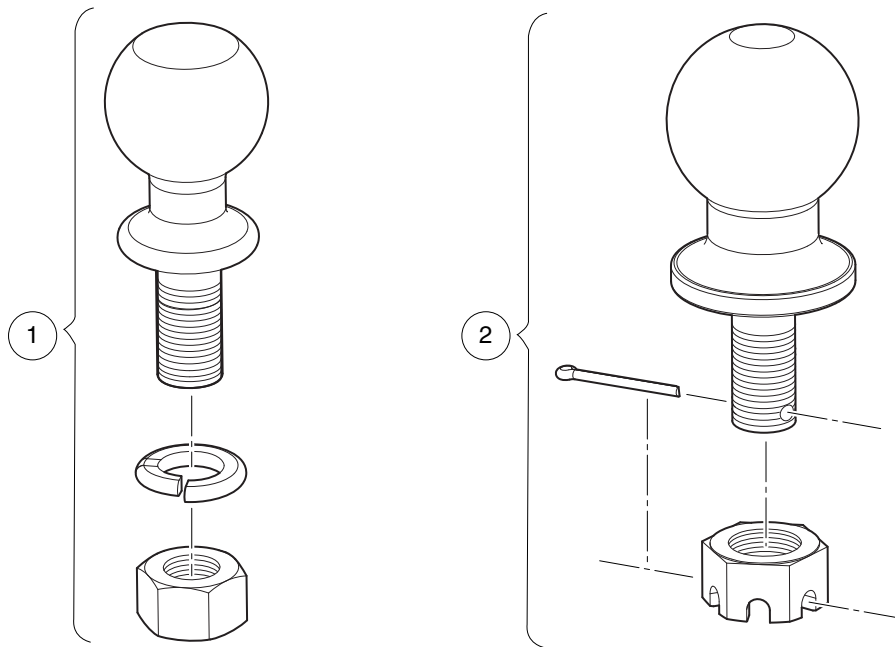

001137-001


TRAILER HITCH BALL

ITEM	PART NO.	DESCRIPTION	QTY
1	1011546	Trailer Hitch Ball - 1 7/8"	1
2	AM1264001	Chrome Hitch Ball, 2"	1

1

G


E

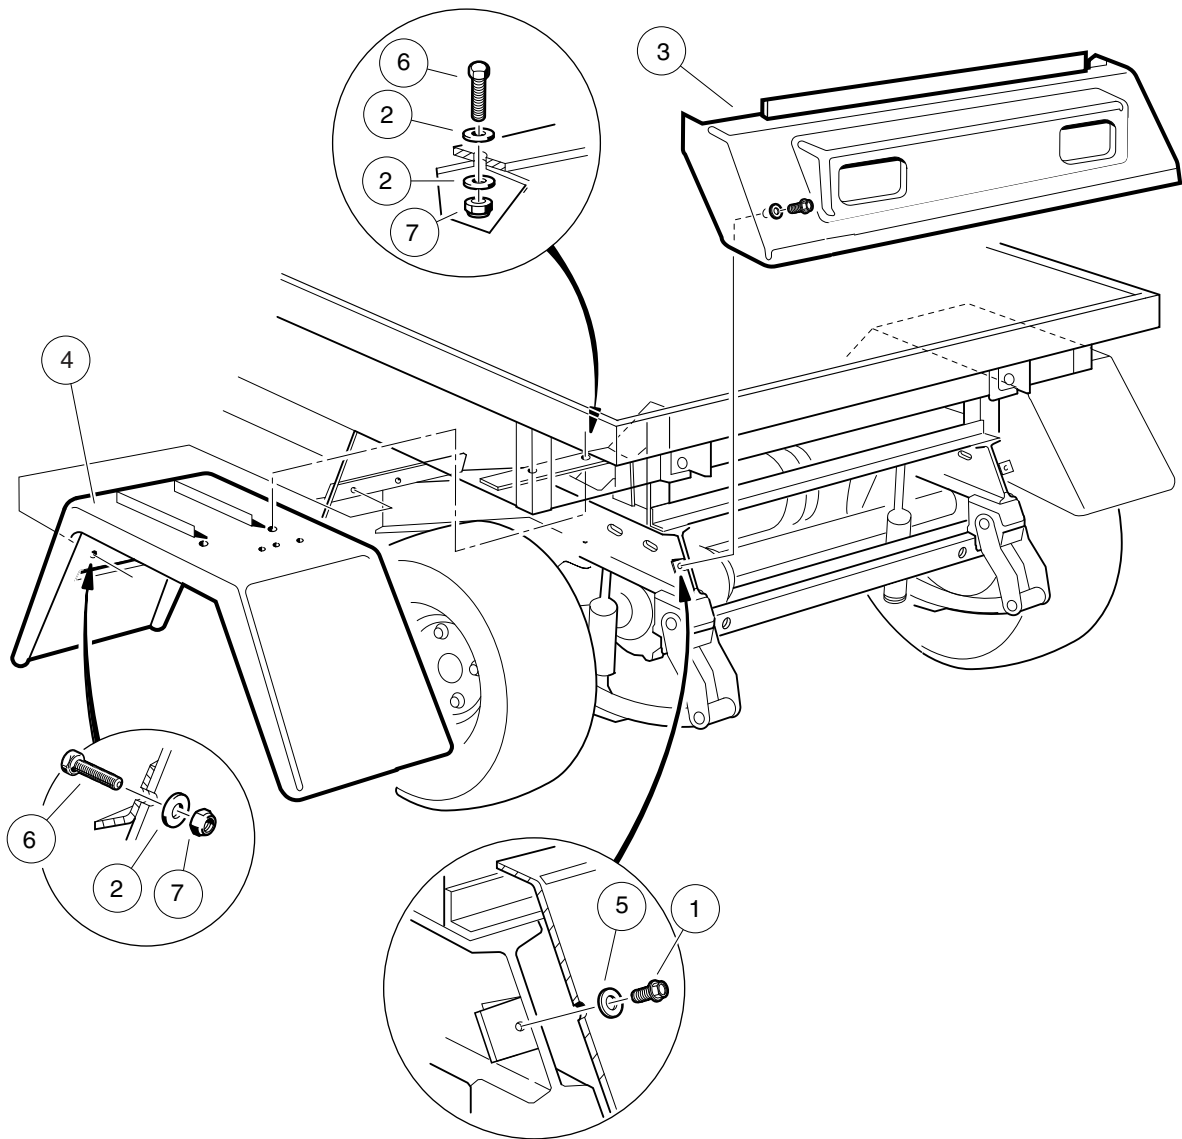1**G****E**

000266-001

REAR BODY TRIM – TURF/CARRYALL 1, 2, 2 PLUS, AND 6

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	2	
2	<u>1014306</u>	Washer, 1/4" Type B Flat	12	
3	<u>1015530</u>	Tailskirt	1	
4	<u>1016679</u>	Rear Fender	2	
5	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2	
6	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
7	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	8	




CAB, CURTIS – TURF/CARRYALL 1, 2, 2 PLUS, 252 AND XRT 900

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>102262901</u>	Asm, Cab (includes items 2 through 13)	1	
2	AM1304001	CTC-Windshield Assembly	1	
3	AM1304101	CTC-Windshield Latches	A/R	
4	AM1304201	CTC-Drivers Side Door	1	
5	AM1304301	CTC-Passenger Side Door	1	
6	AM1304401	CTC-Inside Door Latches	2	
7	AM1304501	CTC-Outside Door Latches	2	
8	AM1304601	CTC-Door Hinge Kit	A/R	
9	AM1304801	CTC-Side Frame Rear Window	1	
10	AM1304901	CTC-Roof (White Plastic)	1	
11	AM1305001	CTC-Wiper Motor	1	
12	AM1305101	CTC-Wiper Arm	1	
13	AM1305201	CTC-Wiper Blade	1	
14	<u>102264501</u>	Kit, Seat Belt (required for ROPS certification, includes mounting hardware)	1	
15	<u>103274401</u>	Kit, Adapter, Cab, Carryall (includes item 16)	1	
16	AM1304701	CTC-Rear Panel	1	

1

G

E

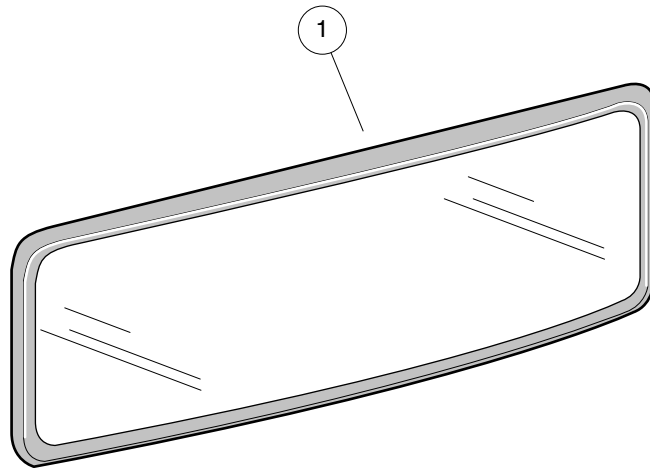

APM-000214-001


MIRROR, INSIDE REAR-VIEW – CURTIS CAB

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	101995101	1 2 3 4 Kit, Rear-View Mirror (includes mounting hardware) Note: For installation on vehicles equipped with a Curtis cab.	1	

1

G

E

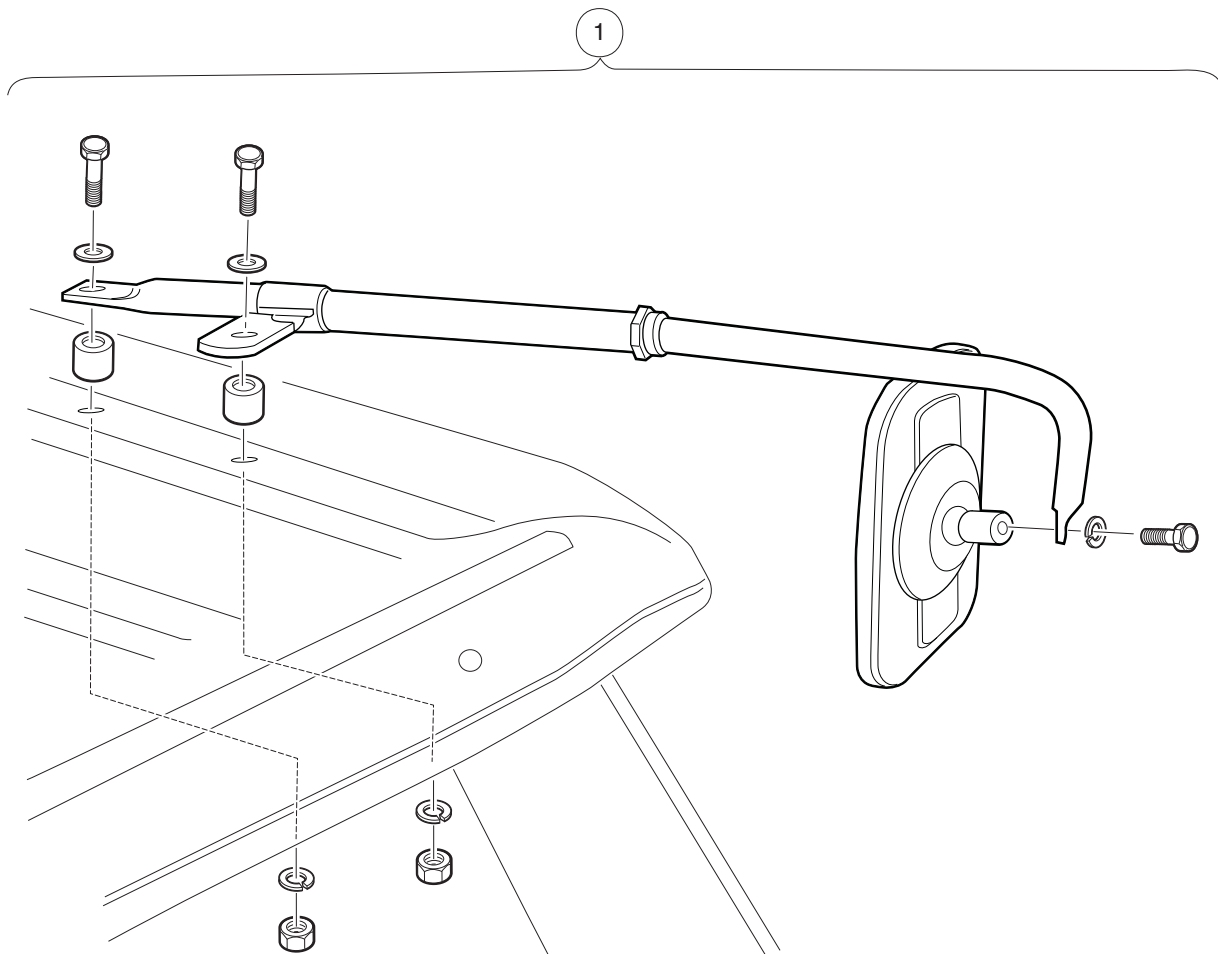

001202-001

MIRROR, SIDE-VIEW – CURTIS CAB

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>102272601</u>	1 2 3 4 Kit, Mirror Note: For installation on vehicles equipped with a Curtis cab.	1

1


G

E

1

G

E

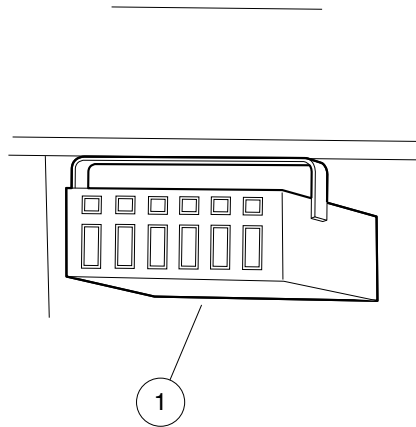

APM-000264-002


ACCESSORY SWITCH PANEL – CURTIS CAB

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	<u>101994601</u>	1 2 3 4 Panel, Accessory Switch Note: For installation on vehicles equipped with a Curtis cab.	1	

1

G

E

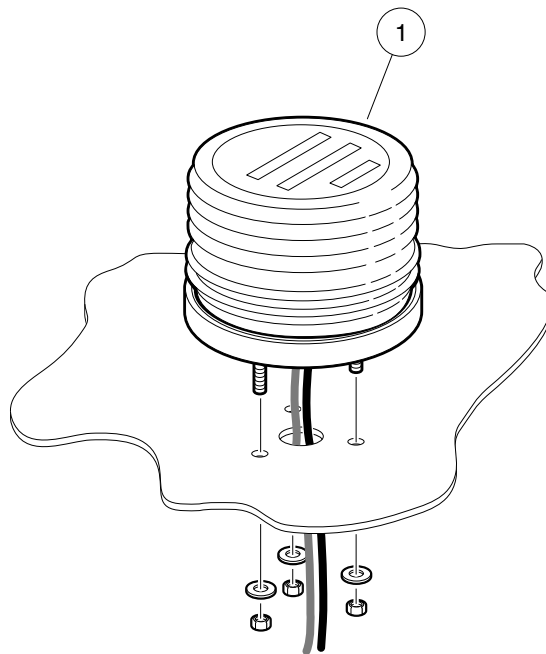

APM-000212-001


STROBE LIGHT – CURTIS CAB

ITEM	PART NO.	DESCRIPTION	QTY	1
1	<u>101994301</u>	1 2 3 4 Kit, Strobe Light (includes mounting hardware and wire harness) Note: For installation on vehicles equipped with a Curtis cab.	1	G E

1

G

E

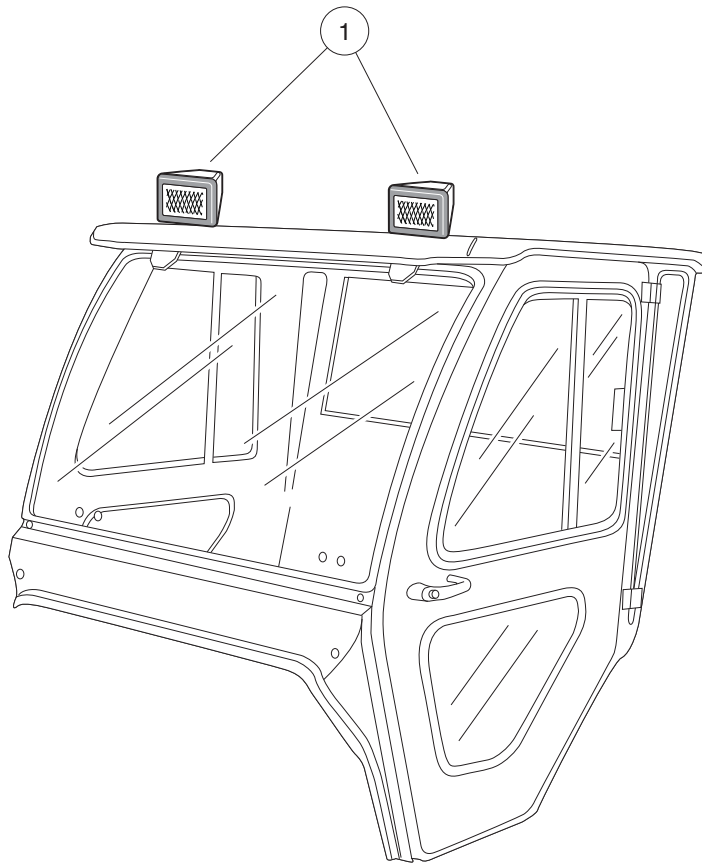

001201-001

WORK LIGHTS – CURTIS CAB

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>101994801</u>	1 2 3 4 Kit, Work Light (includes mounting hardware and wire harness) Note: For installation on vehicles equipped with a Curtis cab.	1

1


G

E

1

G

E

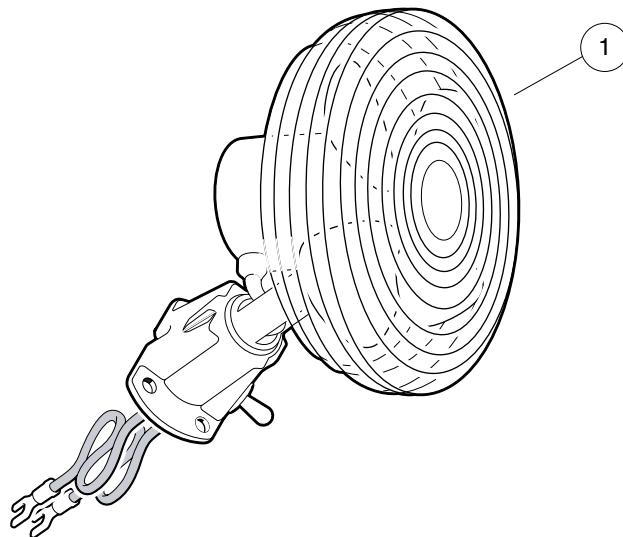

APM-000215-001


FAN/DEFOGGER – CURTIS CAB

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	<u>101994401</u>	1 2 3 4 Kit, Fan/Defogger (includes mounting hardware and wire harness) Note: For installation on vehicles equipped with a Curtis cab.	1	

1

G

E

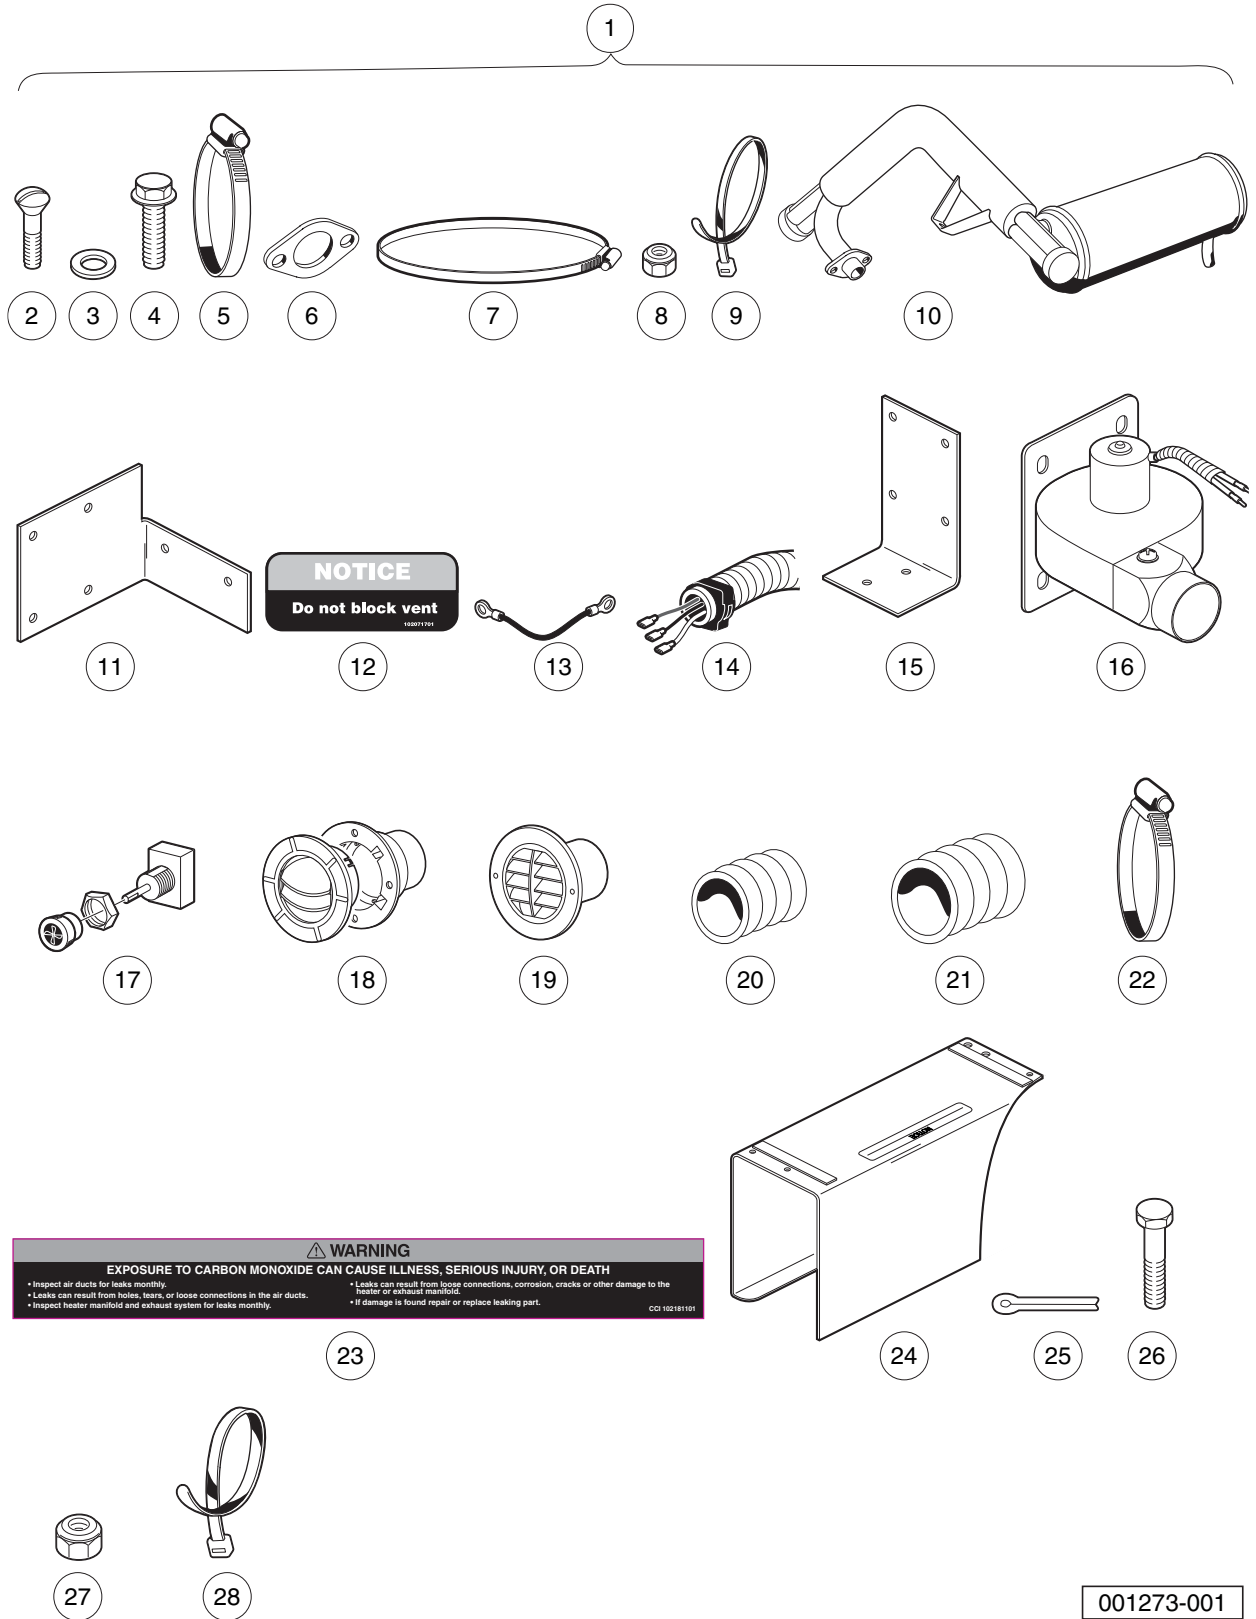


HEATER – CURTIS CAB

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>102056503</u>	Comfort Cab Heater Kit, Turf/CA1 w/FE350 (includes items 2 through 28)	1	
2	<u>1011226</u>	Screw, #6-32 X .62 Cs Oval Hd	4	
3	<u>1011964</u>	Washer, 1/4 Flat	12	
4	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3	
5	<u>1012349</u>	Clamp, Air Intake Hose, 2"	2	
6	<u>1016904</u>	Gasket, Exhaust	1	
7	<u>1017689</u>	Clamp, 5" Muffler Hose	1	
8	<u>101932201</u>	Locknut, #6-32 Nylon	4	
9	<u>102025401</u>	Tie Wrap, Heavy Duty	2	
10	<u>102070601</u>	Header Heater, FE350	1	
11	<u>102071401</u>	Mounting Bracket, Blower	1	
12	<u>102071701</u>	Decal - Header Heater Kit	2	
13	N/A	Wire Asm #16 Black	1	
14	N/A	Wire Harness, Header Heater	1	
15	N/A	Mounting Bracket, Blower	1	
16	<u>102074101</u>	Centrifugal Blower Asm	1	
17	<u>102074201</u>	Heater Switch	1	
18	<u>102074501</u>	Outlet Vent	1	
19	<u>102074601</u>	Inlet Vent	1	
20	<u>102074701</u>	Duct Hose	1	
21	<u>102074801</u>	Duct Hose	1	
22	<u>102074901</u>	Clamp, Air Intake Hose, 2-1/2"	4	
23	<u>102181101</u>	Decal Inspection Heater	1	
24	<u>102182101</u>	Cover, Blower	1	
25	<u>1035</u>	Cotter Pin, 3/32 x 1	2	
26	<u>304</u>	Screw, 1/4-20 X 1.0 Hex-Head Cap	6	
27	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	6	
28	<u>8639</u>	Tie Wrap, 11" Nylon	6	
Note: For installation on vehicles equipped with a Curtis cab.				

1

G

E

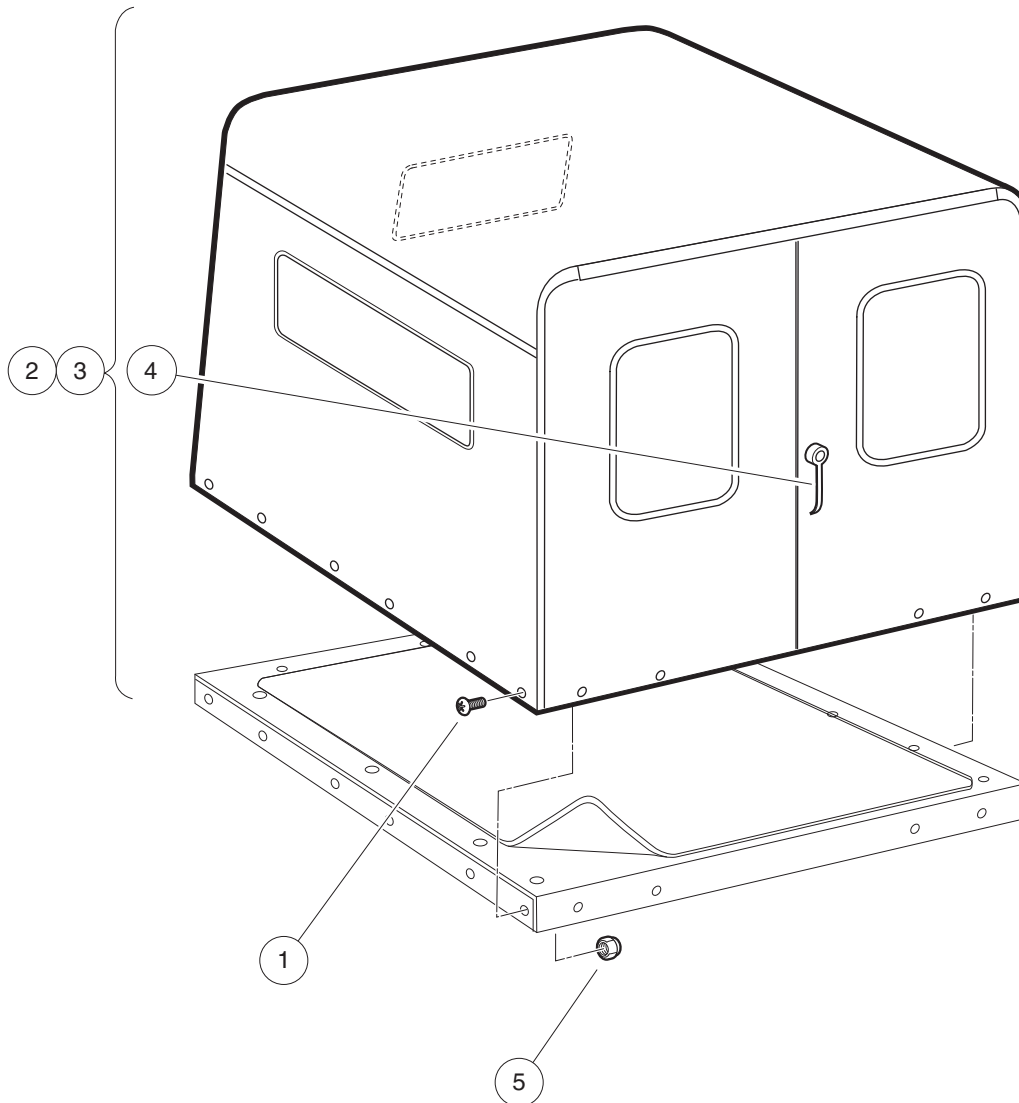

001208-001

VAN BOX – TURF/CA 1

ITEM	PART NO.	DESCRIPTION	QTY
1	1015399	Screw, 5/16-18 X 0.88 Torx Truss-Head	20
2	<u>101754203</u>	Custom Van Box, Gray	1
3	<u>101754206</u>	Custom Van Box Kit, White (includes item 4)	1
4	<u>102006201</u>	Handle, Van Box Door	1
5	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	20
Note: Item 2, Van Box Gray, includes item 4, Door Handle.			

1

G

E

1

G


E

WHEELS AND TIRES

2

G


E

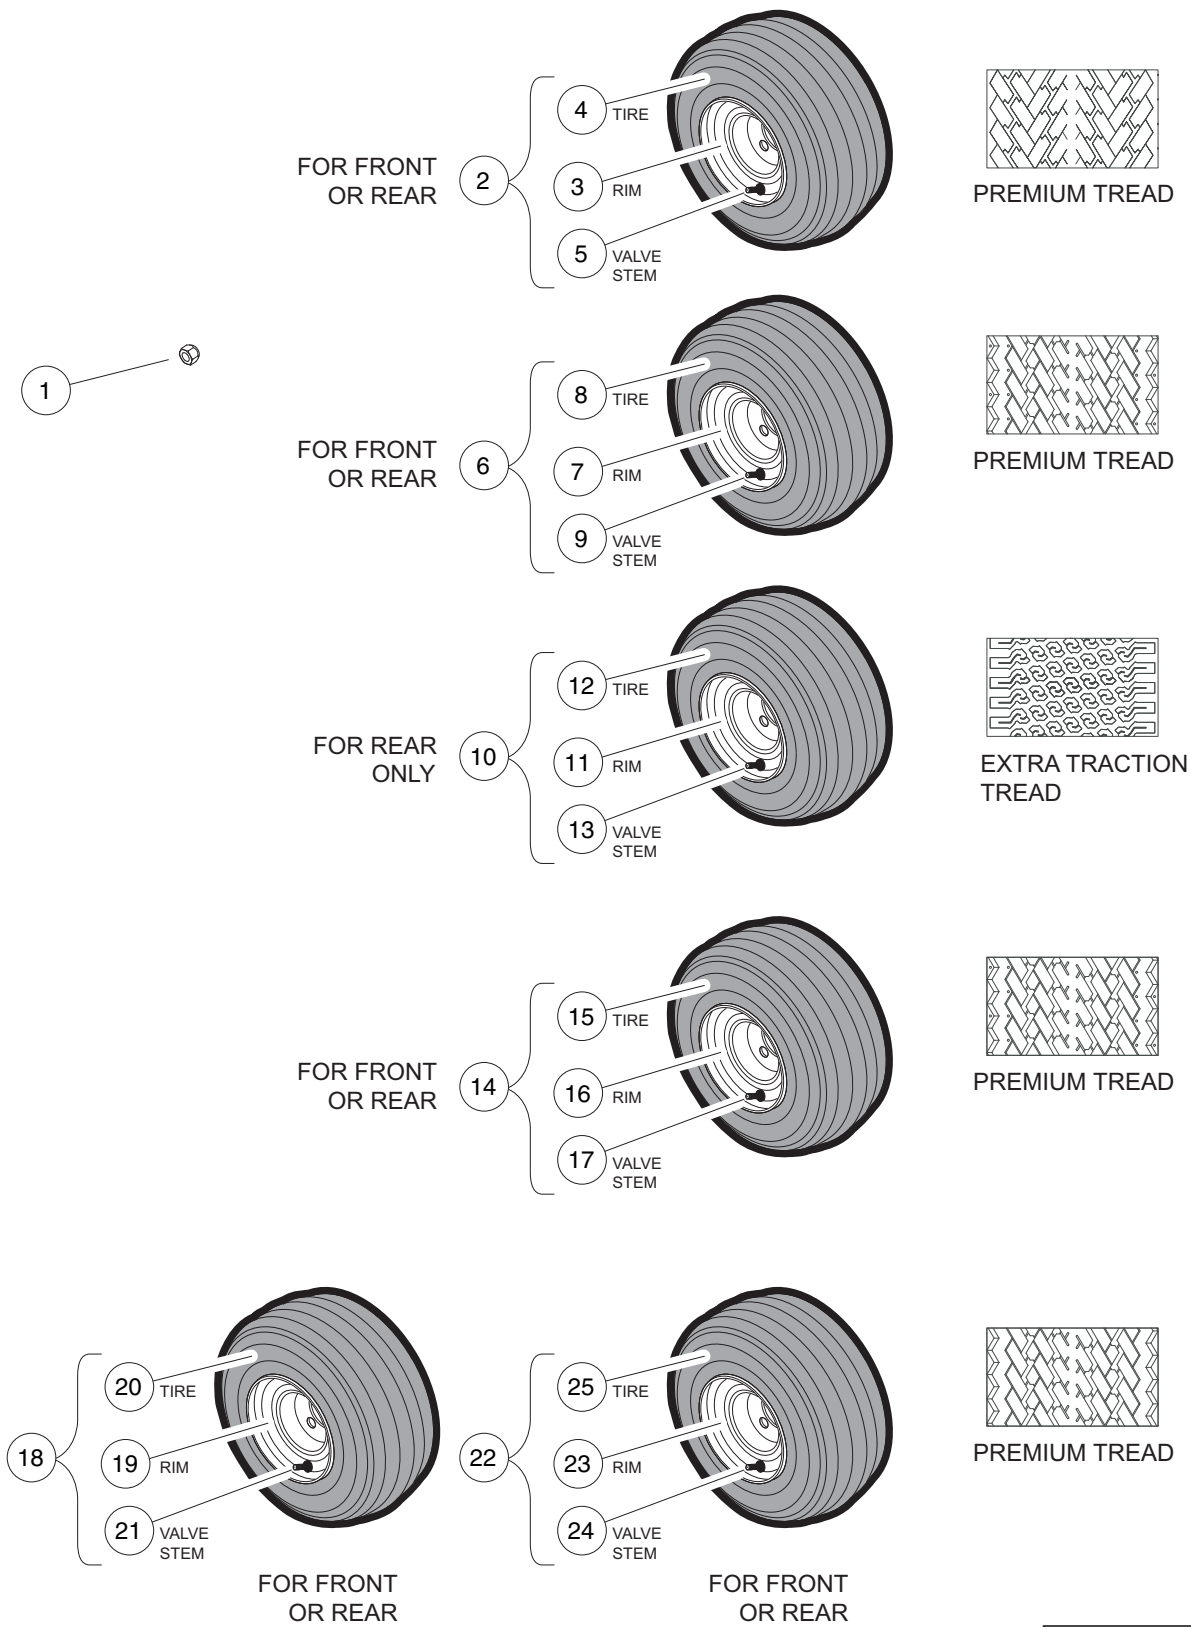

000269-001

WHEELS AND TIRES

ITEM	PART NO.	DESCRIPTION	QTY	2	G	E
		1 2 3 4				
1	<u>1010984</u>	.500-20 Unf Lug Nut	16			
2	<u>101651402</u>	Tire/Wheel Asm, White, Premium Tread (includes items 3 through 5)	4			
3	<u>1014771</u>	Wheel Rim, White	1			
4	<u>101567202</u>	Tire, Unmounted, Links 18 x 8.50-8	1			
5	<u>7310</u>	Valve Stem, Black Plastic	1			
6	<u>101651406</u>	Tire/Wheel Asm, White, Premium Tread, 6-Ply (includes items 7 through 9)	4			
7	<u>1014771</u>	Wheel Rim, White	1			
8	<u>101737002</u>	Tire, Unmounted	1			
9	<u>7310</u>	Valve Stem, Black Plastic	1			
10	<u>101651407</u>	Tire/Wheel Asm, White, Extra-Traction, 6-Ply (includes items 11 through 13)	2			
11	<u>1014771</u>	Wheel Rim, White	1			
12	<u>101769302</u>	Tire, Unmounted Xtrac 18 x 8.50-8	1			
13	<u>7310</u>	Valve Stem, Black Plastic	1			
14	<u>101651409</u>	Tire/Wheel Asm, White, Premium Tread, 6.5-inch (includes items 15 through 17)	4			
15	<u>101884901</u>	Tire, Unmounted, Power Rib 18 x 6.50-8	1			
16	<u>101918402</u>	Wheel Rim, White	1			
17	<u>7310</u>	Valve Stem, Black Plastic	1			
18	<u>101651412</u>	Tire/Wheel Asm, White, Duro Premium Tread (includes items 19 through 21)	4			
19	<u>1014771</u>	Wheel Rim, White	1			
20	<u>102569304</u>	Duro 18 X 8.5 X 8, 4-Ply	1			
21	<u>7310</u>	Valve Stem, Black Plastic	1			
22	<u>101651413</u>	Tire/Wheel Asm, White, Kenda Premium Tread (includes items 23 through 25)	4			
23	<u>1014771</u>	Wheel Rim, White	1			
24	<u>7310</u>	Valve Stem, Black Plastic	1			
25	<u>AM10682</u>	Unmounted Prem Tire 18x8.50x8	1			

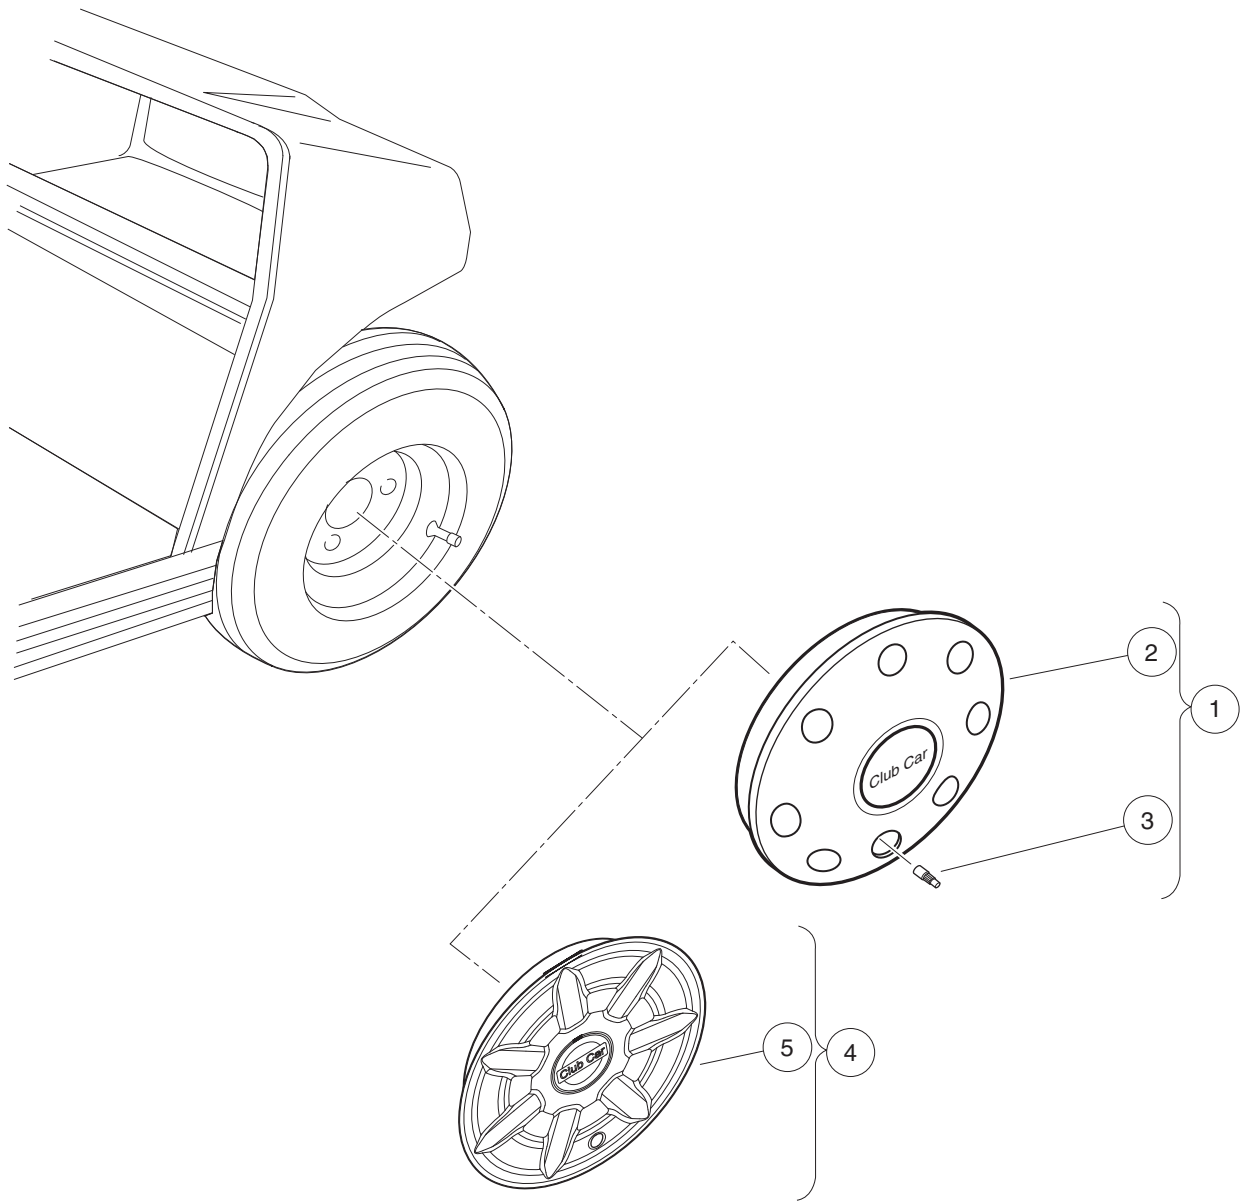

001203-001

WHEEL COVERS

ITEM	PART NO.	DESCRIPTION	QTY	2
		1 2 3 4		G
1	<u>1012642</u>	Sport Wheel Cover Kit (each) (includes items 2 and 3)	4	E
2	<u>1012640</u>	Hubcap	1	
3	<u>1012641</u>	Valve Extension	1	
4	<u>102559901</u>	Hub Cap Kit, Prec (includes item 5)	1	
5	<u>103694501</u>	Hub Cap, 7 Prong	4	

2

G

E


DECALS

3

G

E

OFF | ON

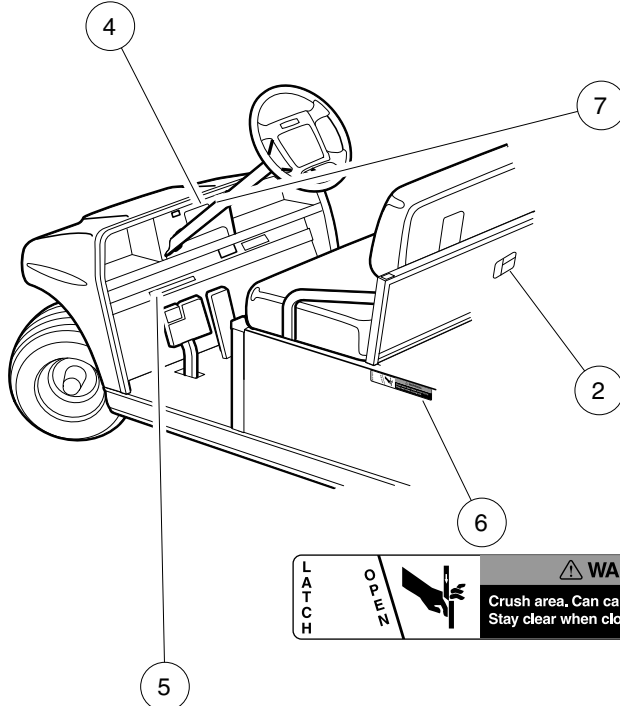

WARNING

- ROLLOVER OR FALLING OFF MAY CAUSE DEATH.**
- Before using vehicle, read operating instructions.
 - Remain seated and hold on to seat handle while moving.
 - Do not start vehicle until all occupants are seated.
 - Two (2) persons per seat maximum.
 - Operate from driver side only and not on public roads.
 - Keep entire body inside vehicle while moving.
 - Drive slowly in turns and straight up and down slopes.
 - Do not leave children unattended on vehicle.
 - Never operate under the influence of alcohol or drugs.
 - Use brakes to reduce speed when coasting downhill.
 - Never stand in front of or behind vehicle.

CCI 103205401

WARNING

Riding in cargo bed can cause severe injury or death. Do not ride in cargo bed.

CCI 1015339-01

WARNING

Crush area. Can cause severe injury. Stay clear when closing bed.



VEHICLE LOADING

Read owner's manual and warnings on dash.

- Vehicle rated capacity - 800 lb on level surface only. Weight to include passengers, cargo bed load, and gross trailer weight. See owner's manual.
- Maximum cargo load - 300 lb. Weight to include cargo bed load and gross trailer weight.
- Maximum trailer hitch tongue weight - 150 lbs.

- Cargo should be evenly spread over the floor of the cargo bed as far forward as possible and secured.
- For vehicle stability, when fully loaded, drive slowly and avoid stopping on or backing down steep hills.
- Avoid top heavy loads. See owner's manual.
- When driving on uneven terrain or down steep hills, reduce speed and load.

CCI 101960101

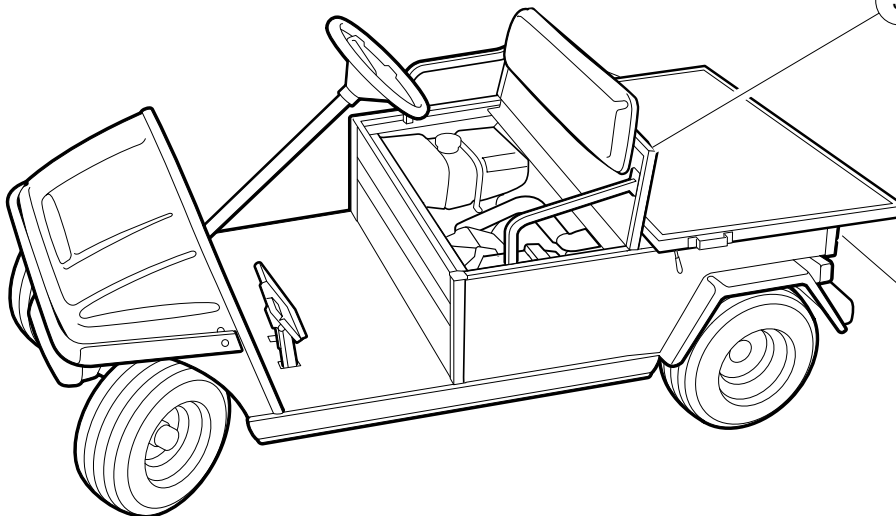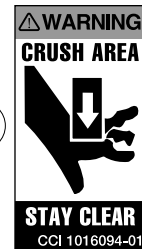

NOTICE

MAXIMUM TONGUE WEIGHT - 150 lb. (667 N)

CCI 1011553

000270-002

DECALS – GAS AND ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>1011553</u>	Decal, Trailer Hitch	1	
2	<u>101553901</u>	Decal, Bed Load Warning	1	
3	<u>101609401</u>	Decal, Crush Area Warning	2	
4	<u>101825101</u>	Decal, Off/On	1	
5	<u>101960101</u>	Decal, Vehicle Loading	1	
6	<u>102459301</u>	Decal, Bed Crush Area Warning	1	
7	<u>103205401</u>	Decal, Warning, Rollover, Utl	1	

OPERATING INSTRUCTIONS

- Read owner's manual and dash-mounted safety warnings prior to driving.
- Study and understand controls.

TO OPERATE

- Turn wheels to desired direction and ensure path is clear.
- Turn key to ON position.
- While stopped, place Forward/Reverse switch in desired position:
F= Forward N= Neutral R=Reverse (buzzer will sound)
- Park brake will release and vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and press brake pedal.


BEFORE LEAVING

- Press park brake pedal until it locks and holds vehicle.
- Place Forward/Reverse switch in NEUTRAL position.
- Turn key OFF and remove key when not in use.

MOTOR BRAKING

- Electric motor braking provides speed regulation functions.
- For parked vehicle, beeping alarm indicates vehicle roll away.
- In operation, beeping alarm indicates reduction in motor braking.
- Apply brakes to further reduce vehicle speed as required.
- System is activated only when tow switch is in the RUN position.
- When towing this vehicle, tow switch must be in the TOW position.


CGI 102518001



DANGER / POISON

SHIELD EYES
EXPLOSIVE GASES CAN CAUSE BLINDNESS OR INJURY
NO SPARKS, FLAMES, SMOKING
SULFURIC ACID CAN CAUSE BLINDNESS OR SEVERE BURNING
FLUSH EYES IMMEDIATELY WITH WATER
GET MEDICAL HELP FAST

KEEP OUT OF THE REACH OF CHILDREN • DO NOT TIP • KEEP VENT CAPS TIGHT AND LEVEL

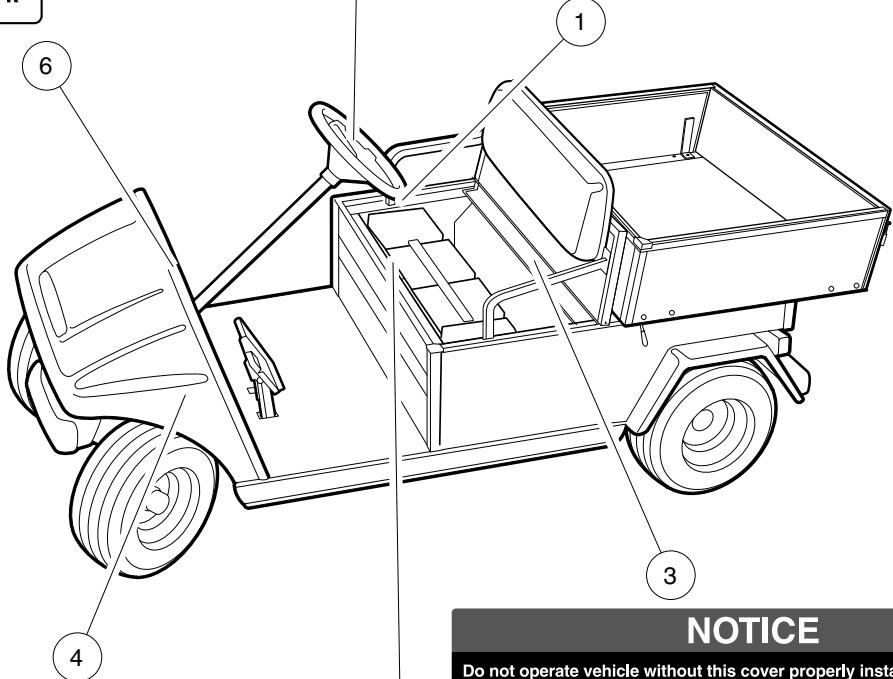

IMPORTANT NOTICE

- Maximum vehicle speed is limited by motor braking during downhill operation with accelerator pedal depressed.
- If motor brake enabled, vehicle motor will brake when accelerator pedal is released.
- Beeping alarm indicates reduction in motor braking. Apply brakes to reduce speed.
- System is activated only when tow switch is in the "RUN" position.
- When towing vehicle, tow switch must be in the "TOW" position.

101959902

NOTICE

Do not operate vehicle without this cover properly installed.
Do not direct water stream in this area; will cause damage to components.
See vehicle maintenance and service manual before servicing.

CGI 101931501

WARNING TOW RUN

Place Tow/Run switch in TOW position before:

- Disconnecting or connecting batteries
- Towing
- Extended storage
- Servicing

FAILURE TO HEED THIS WARNING COULD RESULT IN A BATTERY EXPLOSION OR SEVERE PERSONAL INJURY.

CGI 101998601

000272-002

DECALS – TURF/CARRYALL 1 ELECTRIC

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>1013677</u>	Decal, Battery Danger	6	
2	<u>101908601</u>	Decal, Tow/Run Switch Warning	1	
3	<u>101931501</u>	Decal, Component Cover	1	
4	<u>101959902</u>	Decal, IQ System Motor Braking	1	
5	<u>102518001</u>	Decal, Operating Instr, Elec	1	
6	<u>103210301</u>	Decal, Forward/Reverse, Electric	1	

3

G

E

OPERATING INSTRUCTIONS

- Read owner's manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.

TO OPERATE

- Turn wheels to desired direction and ensure path is clear.
- Turn key to ON position.
- While stopped, place shift lever in desired position:
F – Forward N – Neutral R – Reverse (Buzzer will sound)
- Park brake will release and vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and press brake pedal.

BEFORE LEAVING

- Press park brake pedal until it locks and holds vehicle.
- Place Forward/Reverse switch in NEUTRAL position.
- Turn key OFF and remove key when not in use.

CCI 102519201




WARNING

CAN CAUSE SEVERE BURNS
Hot Surface

CCI 102458901

4



5




WARNING

GASOLINE EXPLOSION / FIRE.

- Can cause severe injury or death.
- No smoking, sparks, or open flame.
- Stop engine, allow to cool before refueling.
- Turn fuel valve (↔) on during operation.
(↔) off during storage or transport.

CCI 101547601

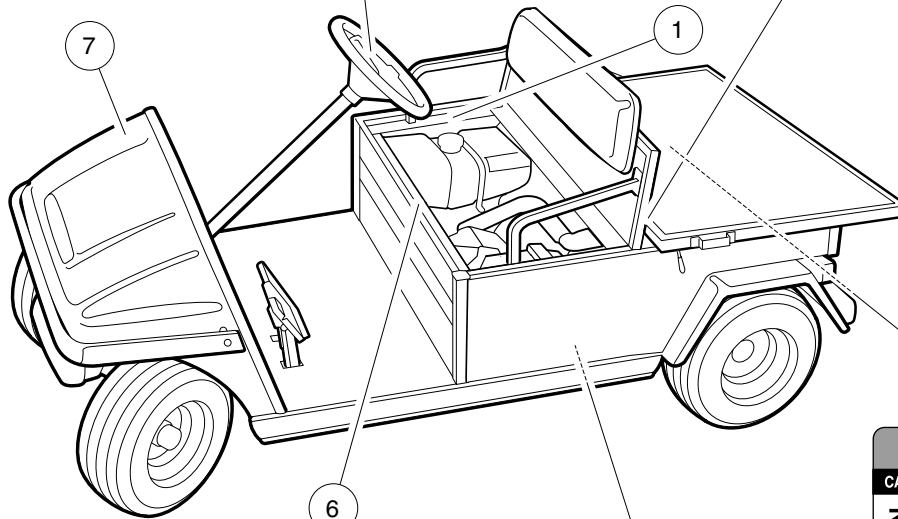

Maintenance

Operate

WARNING

VEHICLE MOVEMENT MAY CAUSE SERIOUS INJURY
When switch is in Maintenance position, chock wheels and firmly set park brake.

CCI 103205501

WARNING

CAN CAUSE SEVERE INJURY



Rotating parts



HOT
manifold & muffler

KEEP CLEAR


CCI 101960501

2



WARNING

Negative frame ground. Can cause severe injury.
Do not contact positive (+) battery post or cable to frame. Disconnect negative battery cable first.



WARNING

Excessive speed can cause severe injury or death. Do not tamper with engine governor adjustment.

CCI 101915201

000273-002



DECALS – TURF/CARRYALL 1 GASOLINE

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>101547601</u>	Decal, Gasoline Explosion/Fire Warning	1	
2	<u>101915201</u>	Decal, Frame Ground and Governor Warning	1	
3	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	2	
4	<u>102458901</u>	Decal, Hot Surface Warning	2	
5	<u>102519201</u>	Decal, Operating Instr, Gas	1	
6	<u>103205501</u>	Decal, Run/Service Switch	1	
7	<u>103210201</u>	Decal, Forward/Reverse, Gas	1	

3

G

E

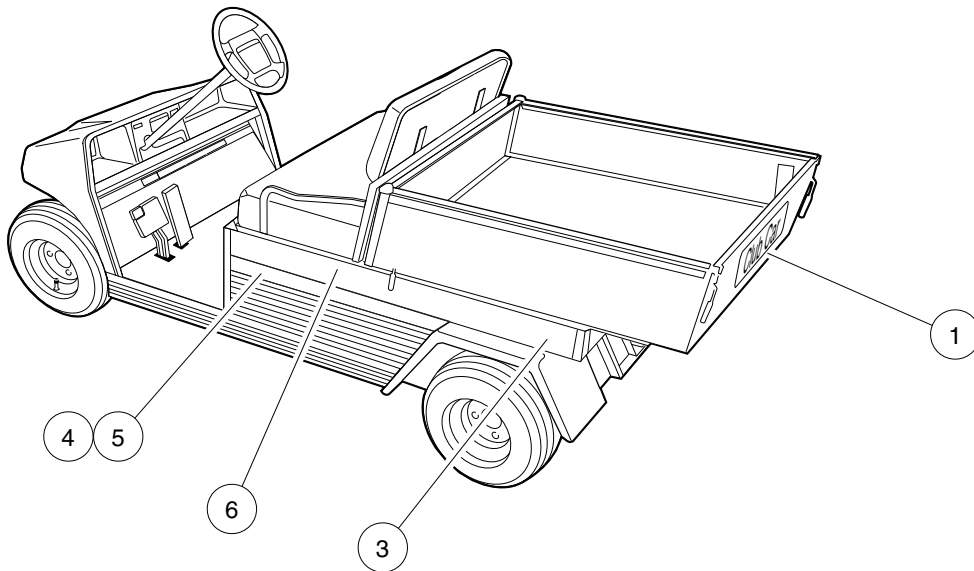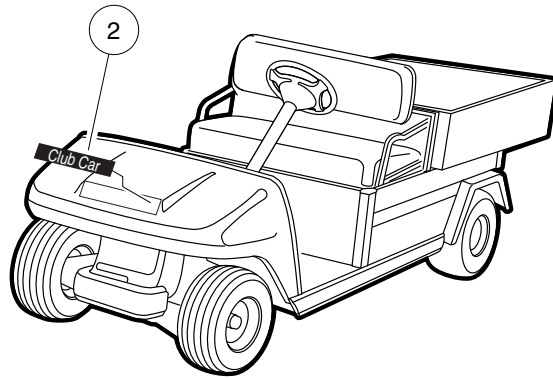

000287-007

DECALS, BADGING – TURF/CARRYALL 1

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>1013317</u>	Decal, Logo, Tailgate	1	
2	<u>101670201</u>	Nameplate Kit (silver)	1	
3	<u>103234301</u>	Decal, Badge, IR	2	
4	<u>103260001</u>	Decal Turf 1 Side Panel	2	
5	<u>103260701</u>	Decal Ca 1 Side Panel	2	
6	<u>103284001</u>	Decal Ca1 Black Bar	1	

3

G


E

LIGHTS, CONTROLS, AND INDICATORS

4

G

E

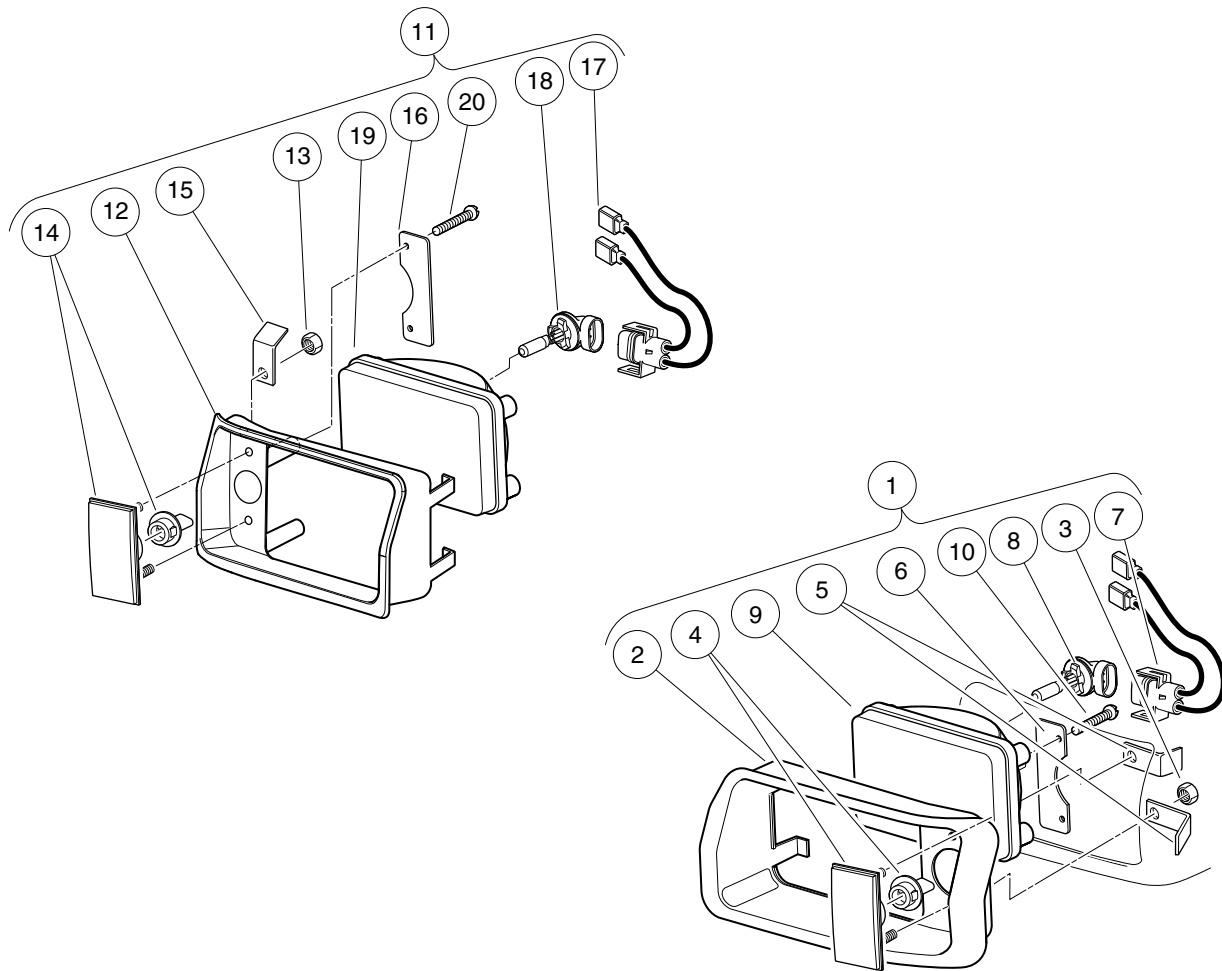

001097-001





HEADLIGHTS

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>101988001</u>	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	1	E
2	<u>1016880</u>	Headlight Bezel, Left	1	
3	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2	
4	<u>1017062</u>	Turn Signal Lens Assy	1	
5	<u>1017064</u>	Mounting Bracket	2	
6	<u>1017065</u>	Retainer, Headlight	1	
7	<u>101987901</u>	Connector, Harness Assembly, Headlight	1	
8	<u>101988101</u>	Bulb, Headlight	1	
9	<u>101988201</u>	Lens, Headlight	1	
10	1620	Screw, #10-16 X 0.75 Pan-Head Tap	2	
11	<u>101988002</u>	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	1	
12	<u>1016879</u>	Headlight Bezel, Right	1	
13	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2	
14	<u>1017062</u>	Turn Signal Lens Assy	1	
15	<u>1017064</u>	Mounting Bracket	2	
16	<u>1017065</u>	Retainer, Headlight	1	
17	<u>101987901</u>	Connector, Harness Assembly, Headlight	1	
18	<u>101988101</u>	Bulb, Headlight	1	
19	<u>101988201</u>	Lens, Headlight	1	
20	1620	Screw, #10-16 X 0.75 Pan-Head Tap	2	

4

G

E

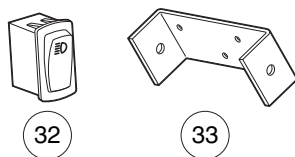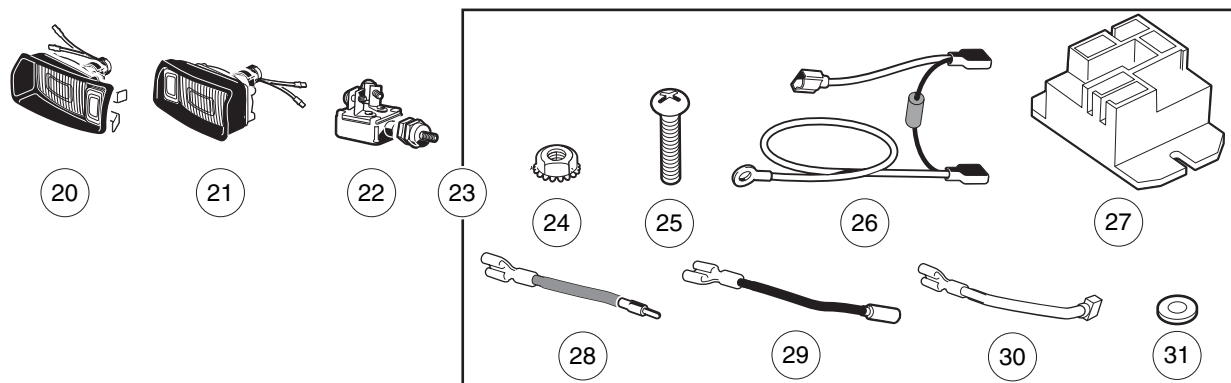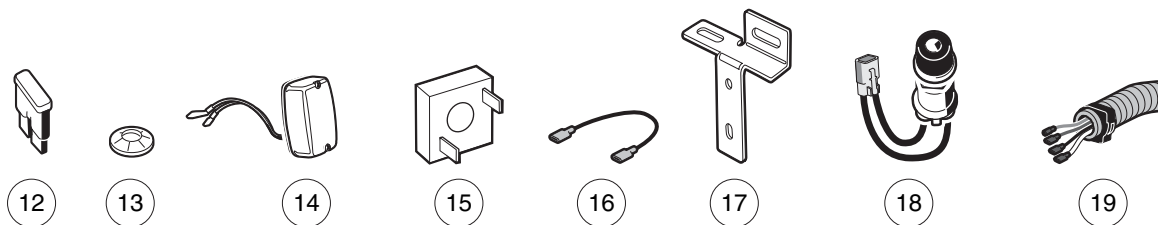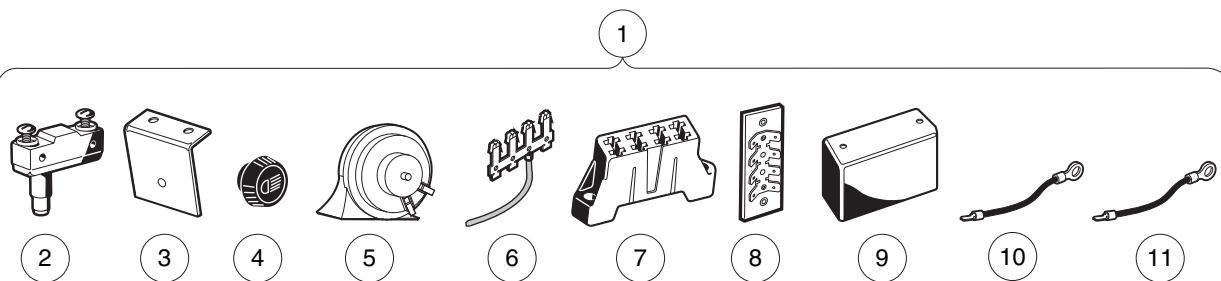

001277-001


LIGHT KIT, STANDARD – TURF/CA 1 GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	101705608	Light Pkg, Std, CA 1, Gas, Field (includes items 2 through 33)	1	
2	<u>1011439</u>	Switch, Limit	2	
3	<u>1011825</u>	Horn Bracket	1	
4	<u>1013857</u>	Knob, Light Switch	1	
5	<u>1014530</u>	Horn, 12-VDC	1	
6	<u>1015737</u>	Wire Assy, #10 Red	1	
7	<u>1015741</u>	Fuse Block	1	
8	<u>1016356</u>	Terminal Block with Insulator	1	
9	1016363	Fuse Block Cover	1	
10	<u>1016364</u>	Wire Assembly #10 Black	1	
11	<u>1016367</u>	Wire Assy, #10 Black	1	
12	<u>1016423</u>	Fuse, 20-Amp	3	
13	<u>1016631</u>	Push Nut	2	
14	1017035	Taillight Assembly	2	
15	<u>1017721</u>	Limiter, Voltage	1	
16	1017722	Wire Assy, #16 Black	1	
17	<u>101957101</u>	Bracket, Brake Light Switch	1	
18	<u>101969701</u>	Horn Button and Wire Assembly	1	
19	101987801	Lighting Harness Assembly	1	
20	<u>101988001</u>	Headlight Assembly, Driver-Side Single Beam	1	
21	<u>101988002</u>	Headlight Assy, Passenger-Side Single Beam	1	
22	<u>102051901</u>	Switch, Light	1	
23	102198701	Brake Relay Kit - 12v (includes items 24 through 31)	1	
24	<u>1011229</u>	Locknut, #6-32 Whiz	2	
25	<u>1017853</u>	Screw, #6-32 X 0.75 Hex-Head Machine	2	
26	101914401	Assembly, Voltage Suppressor	1	
27	<u>102199001</u>	Relay, 12-Volt	1	
28	<u>102199201</u>	Wire Asm #18 Brown	1	
29	<u>102199301</u>	Wire Asm #18 Black	1	
30	<u>102199401</u>	Wire Asm #18 Black	1	
31	<u>7591</u>	Washer, #6, Flat	2	
32	<u>102869401</u>	Switch, Rocker, Light	1	
33	<u>103254101</u>	Bracket, Mtg, Power Relay	1	

4

G


E

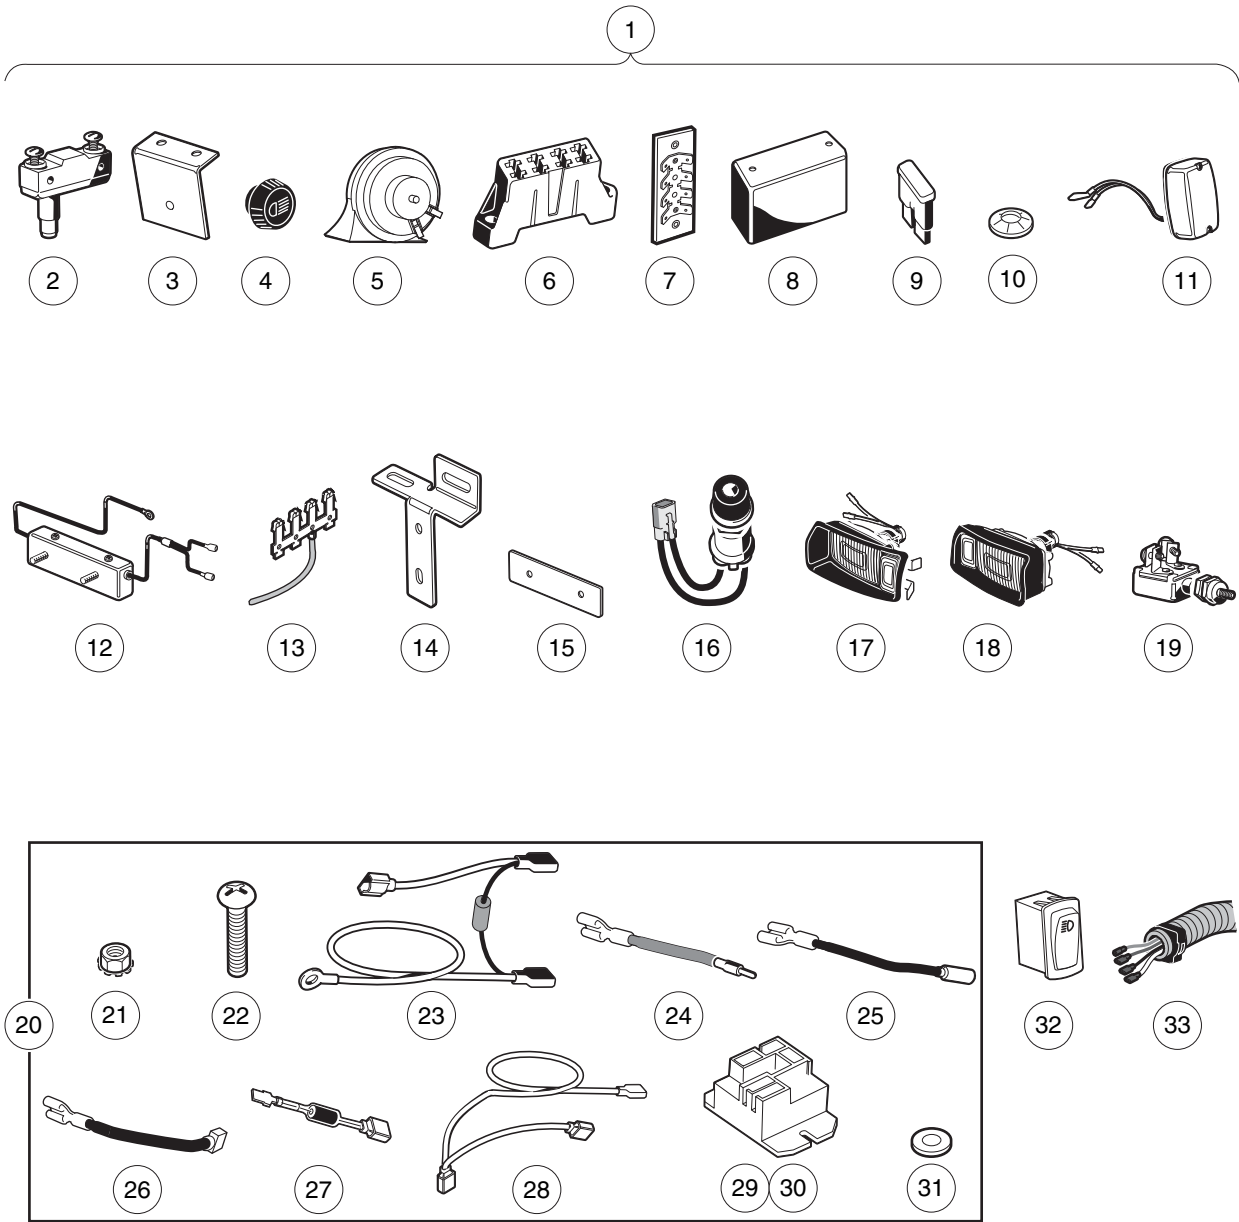

001278-001

LIGHT KIT, STANDARD – TURF/CA 1 IQ SYSTEM ELECTRIC VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>101814011</u>	Light Pkg, Std, CA 1, Elec, Field (includes items 2 through 33)	1	
2	<u>1011439</u>	Switch, Limit	2	
3	<u>1011825</u>	Horn Bracket	1	
4	<u>1013857</u>	Knob, Light Switch	1	
5	<u>1014530</u>	Horn, 12-VDC	1	
6	<u>1015741</u>	Fuse Block	1	
7	<u>1016356</u>	Terminal Block with Insulator	2	
8	<u>1016363</u>	Fuse Block Cover	1	
9	<u>1016423</u>	Fuse, 20-Amp	3	
10	<u>1016631</u>	Push Nut	2	
11	<u>1017035</u>	Taillight Assembly	2	
12	<u>101810501</u>	Limiter, Voltage	1	
13	<u>101810601</u>	Wire Assy, #10 Red	1	
14	<u>101957101</u>	Bracket, Brake Light Switch	1	
15	<u>101962601</u>	Gasket, Voltage Limiter	1	
16	<u>101969701</u>	Horn Button and Wire Assembly	1	
17	<u>101988001</u>	Headlight Assembly, Driver-Side Single Beam	1	
18	<u>101988002</u>	Headlight Assy, Passenger-Side Single Beam	1	
19	<u>102051901</u>	Switch, Light	1	
20	<u>102267501</u>	Brake Relay Kit - 48v Series (includes items 21 through 31)	1	
21	<u>1011229</u>	Locknut, #6-32 Whiz	2	
22	<u>1017853</u>	Screw, #6-32 X 0.75 Hex-Head Machine	2	
23	<u>101914402</u>	Asm, Pd Volt. Supp. W/o Instr.	1	
24	<u>102199201</u>	Wire Asm #18 Brown	1	
25	<u>102199301</u>	Wire Asm #18 Black	1	
26	<u>102199401</u>	Wire Asm #18 Black	1	
27	<u>102273101</u>	Diode Assembly	1	
28	<u>102569101</u>	Wire Asm #18 Yellow	1	
29	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes item 30)	1	
30	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1	
31	<u>7591</u>	Washer, #6, Flat	2	
32	<u>102869401</u>	Switch, Rocker, Light	1	
33	<u>103257001</u>	Wire Harness, Lighting	1	

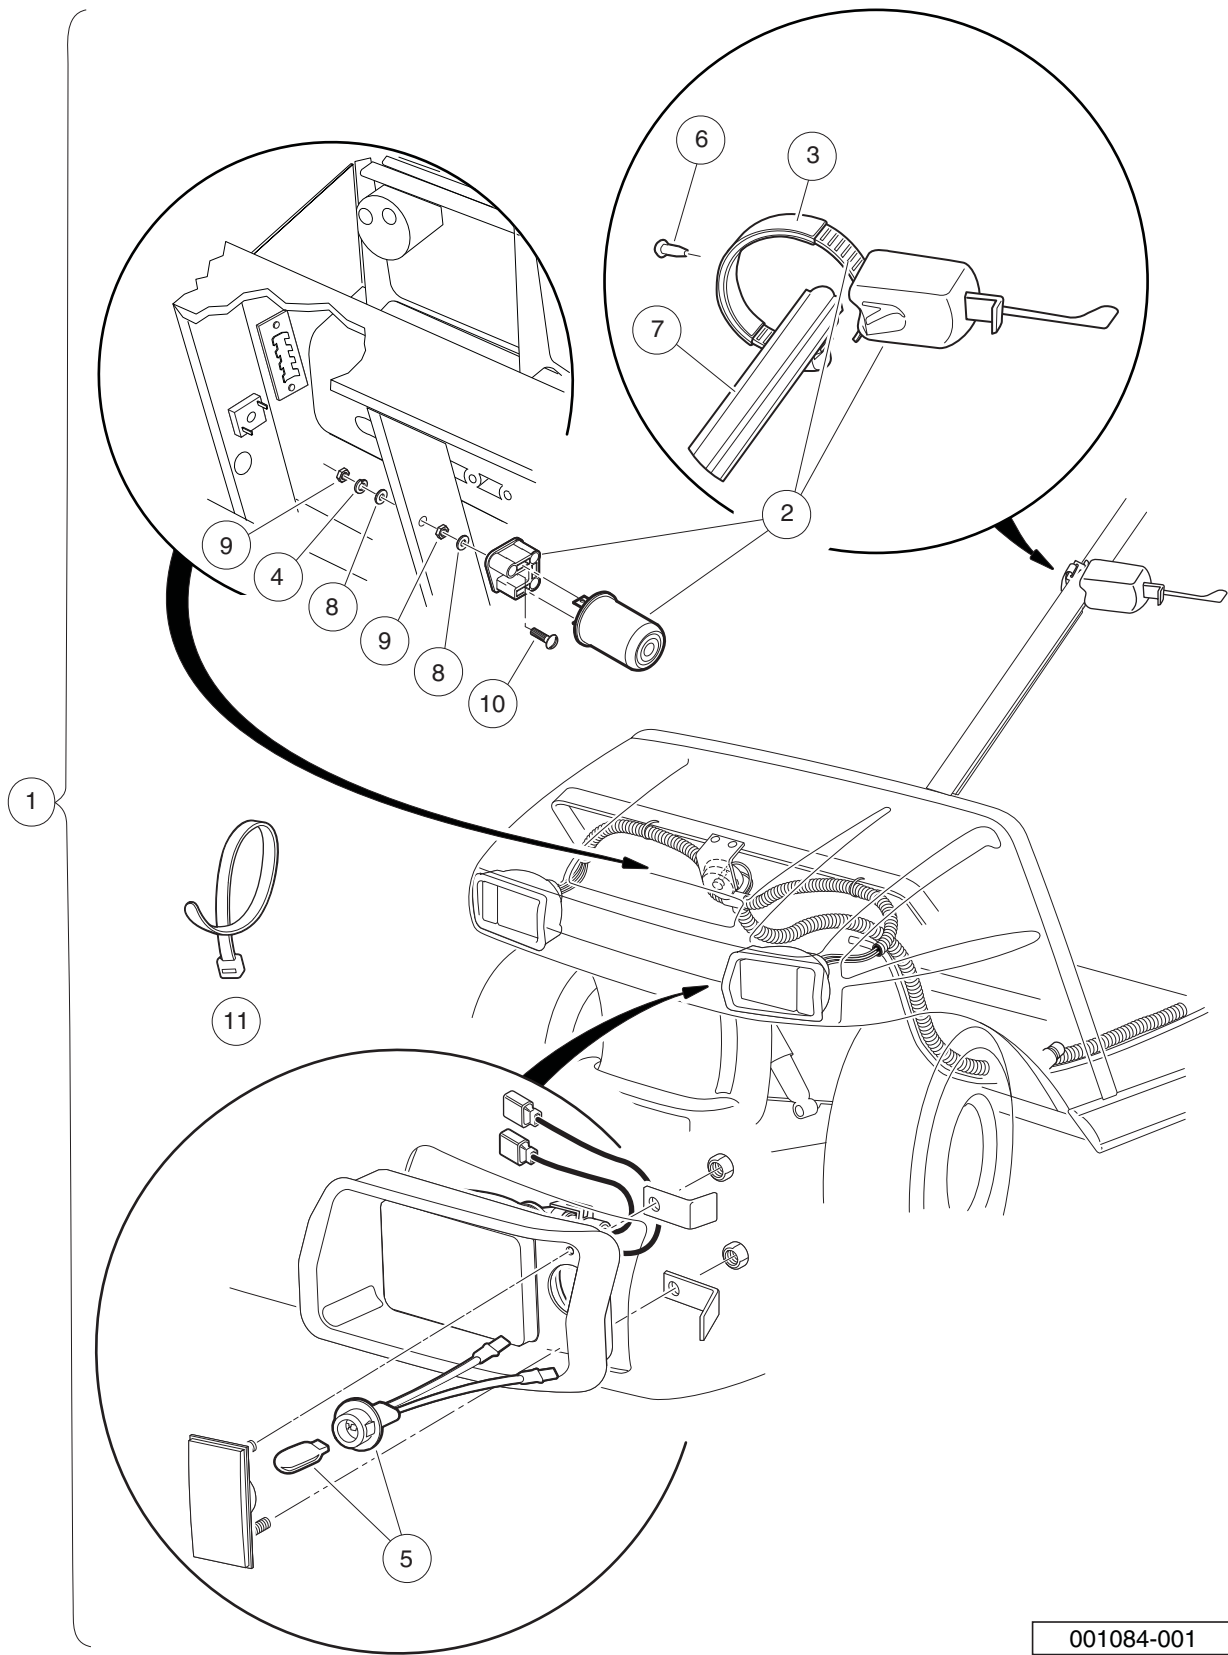

001084-001

TURN SIGNAL KIT – DS AND UTILITY GASOLINE AND ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	101707402	Turn Signal Conversion Kit (includes items 2 through 11)	1	
2	<u>1011590</u>	Switch Sub-assy, Turn Signal	1	
3	N/A	Strap, Extrusion	1	
4	<u>1016</u>	Lockwasher, #10 Split	1	
5	<u>1017075</u>	Socket & Lamp Assembly	2	
6	<u>1017724</u>	Rivet, Plastic	1	
7	<u>102529201</u>	Wire Cover, Steering Column	1	
8	<u>183</u>	Washer, #10, Type A, Flat	2	
9	<u>7893</u>	Nut, #10-32 Hex	2	
10	8104	Screw, #10-32 X .75 Rd Hd Mach	1	
11	<u>8990</u>	Tie Wrap, 8" Nylon	1	

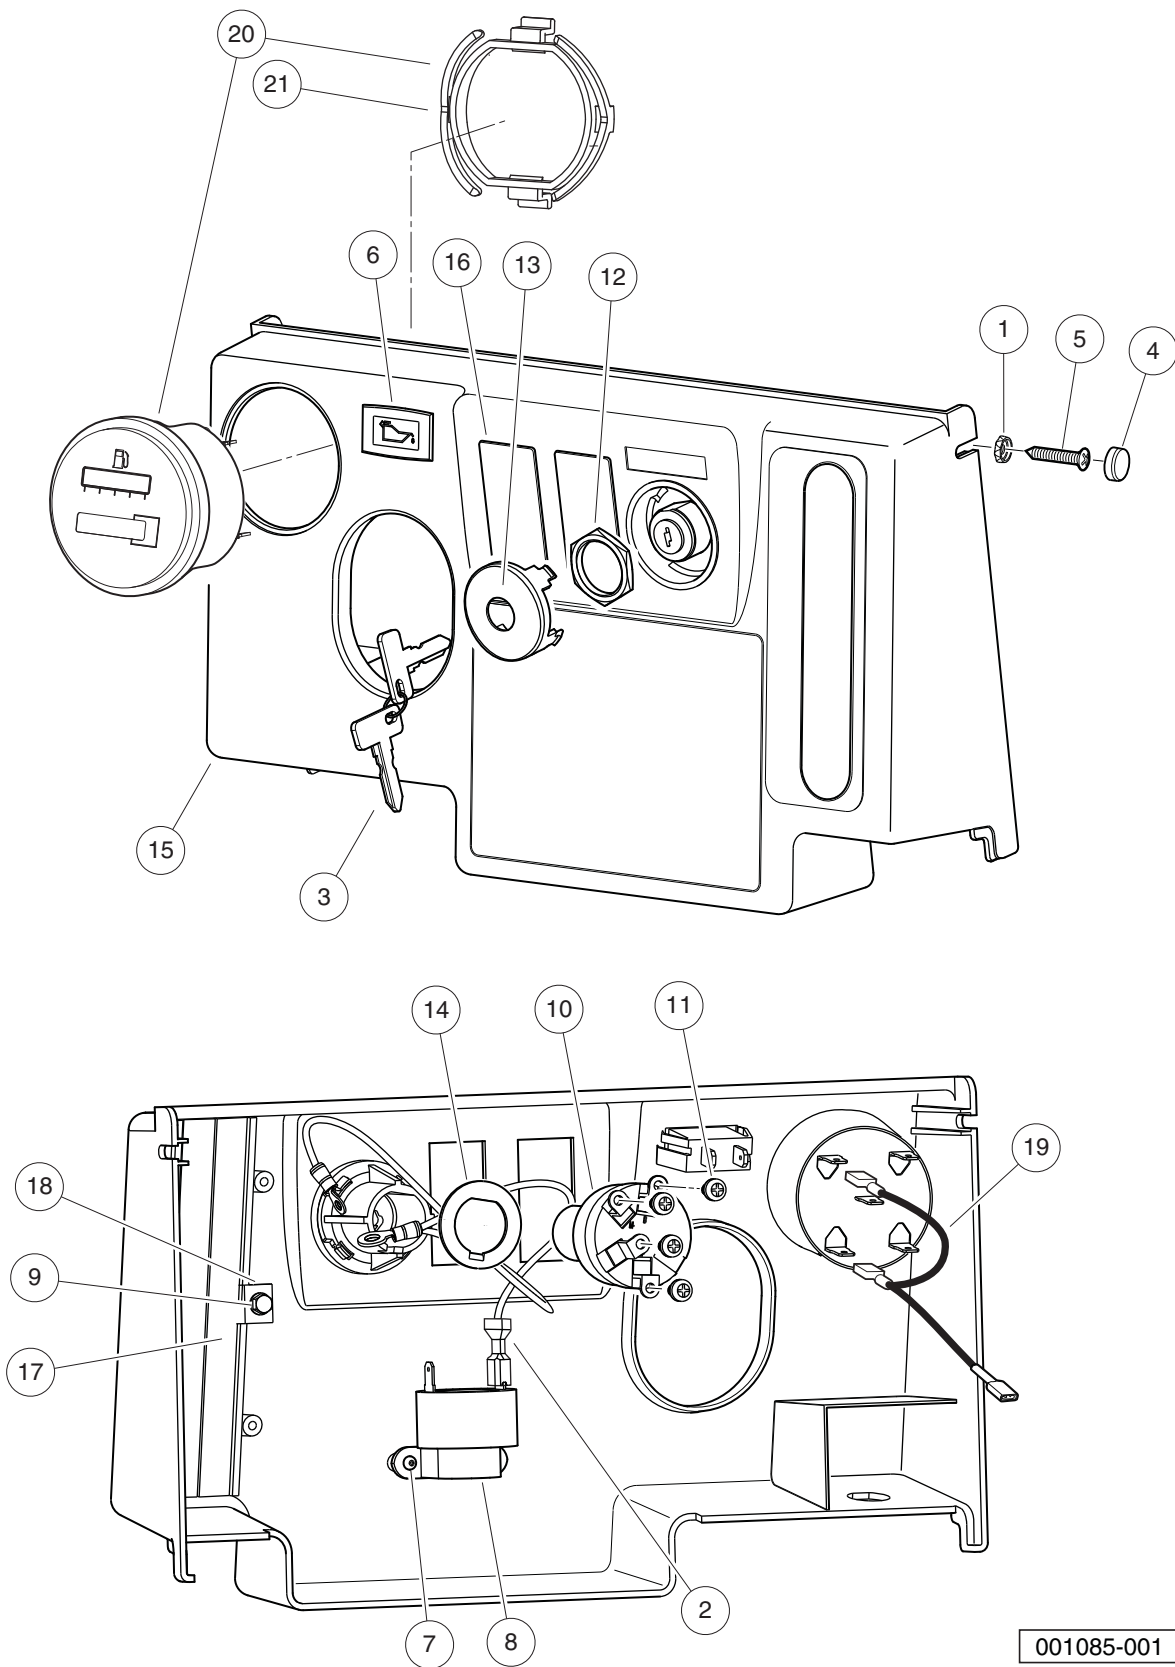

001085-001


INSTRUMENT PANEL AND ELECTRICAL COMPONENTS – TURF/ CARRYALL 1, 2, AND 252 GAS

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	1011382	Washer, #10 Pan-Head Screw	2	
2	1012396	Wire Assy #18 Black	1	
3	<u>1012505</u>	Keys (set of 2)	1	
4	<u>1013494</u>	Cover, Screw Head	2	
5	<u>1015528</u>	Screw, #10 x 1-1/4 Phillips Head	2	
6	<u>1016630</u>	Light, Oil	1	
7	<u>1016849</u>	Screw, #4-24 X 0.33, Pan-Head, Machine	2	
8	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1	
9	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	2	
10	<u>101826301</u>	Key Switch, 12-Volt, Off/On	1	
11	101830601	Screw and Washer Assembly	4	
12	<u>101830701</u>	Nut, Key Switch	1	
13	<u>101834502</u>	Cap, Black Key Switch	1	
14	<u>101851101</u>	Washer, Key Switch	1	
15	<u>102977001</u>	Panel, Dash, Center, Gas (Instrument Panel)	1	
16	<u>103180101</u>	Cover, Hole, Switch, Rocker	2	
17	<u>103199001</u>	Brush, Closeout, FNR	2	
18	<u>103199101</u>	Washer, Retaining, Brush, FNR	2	
19	<u>103348501</u>	Asm, Wire Meter, F-h Jumper	1	
20	<u>103348601</u>	Gauge, Fuel-hour,sep Gnd,utl (includes item 21)	1	
21	<u>103348201</u>	Clip, Meter, Round	1	

4

G

E

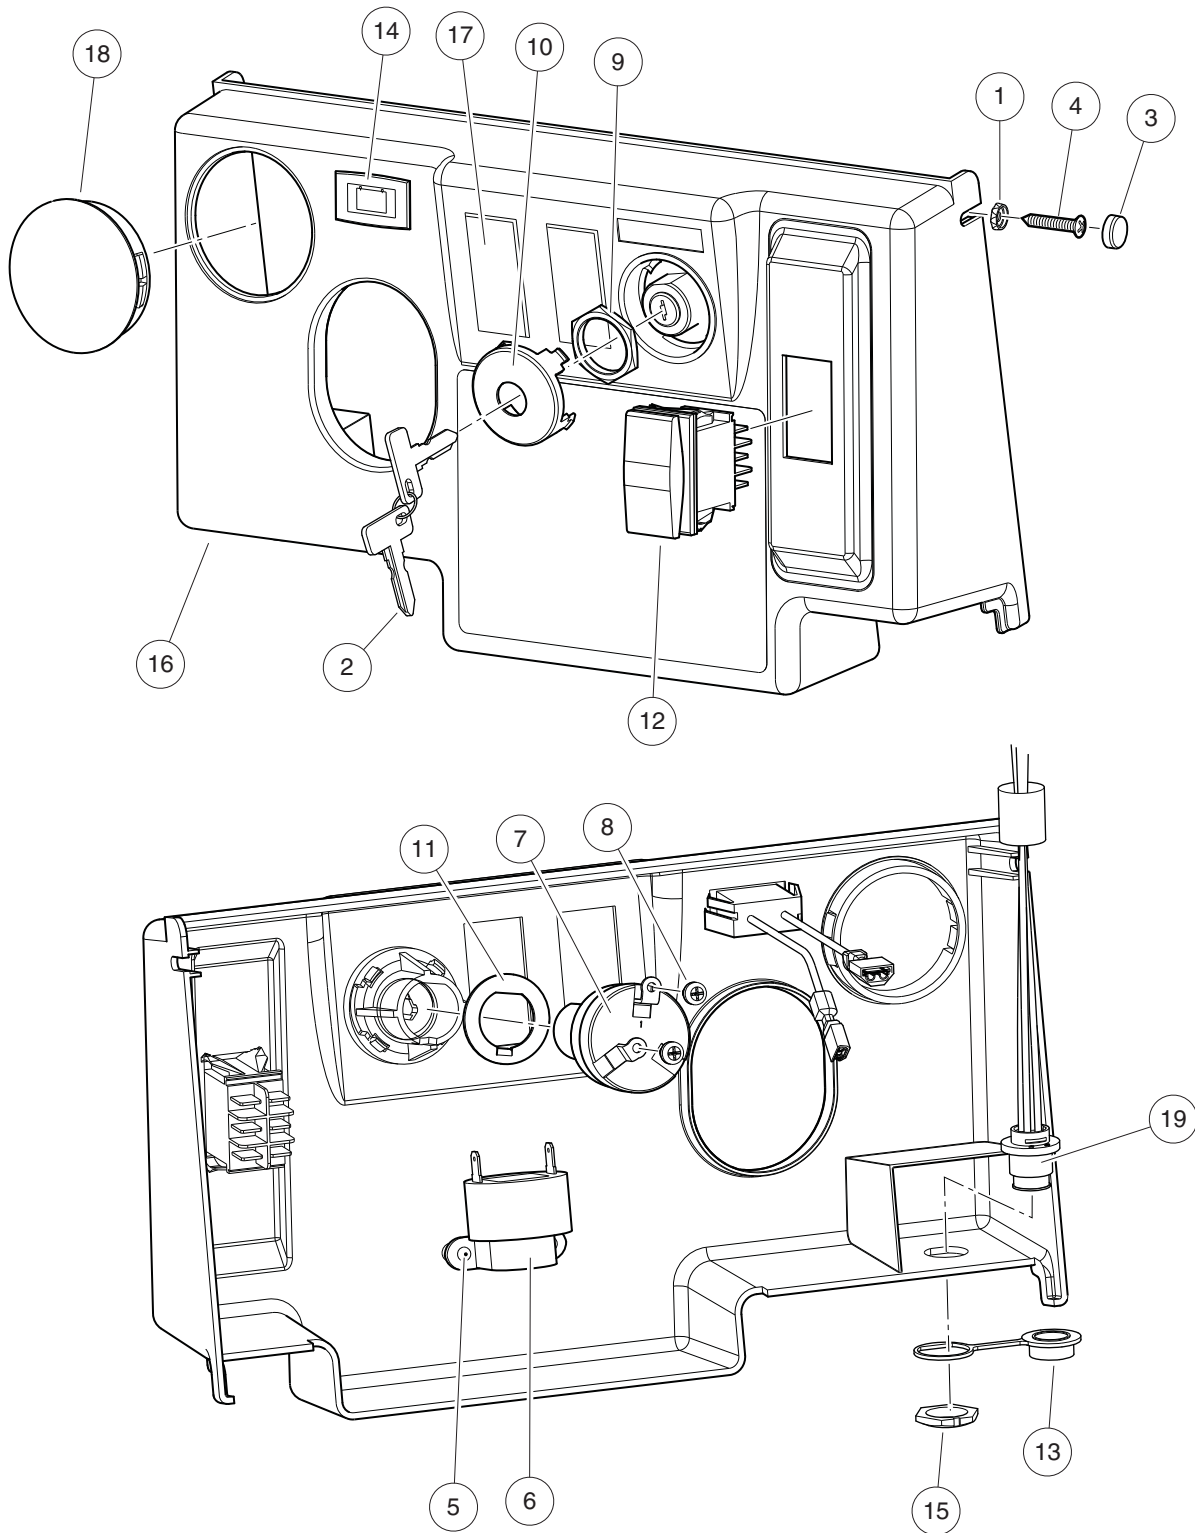

001087-001


INSTRUMENT PANEL AND ELECTRICAL COMPONENTS – TURF/ CA 1 AND 2 ELECTRIC

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	1011382	Washer, #10 Pan-Head Screw	2	
2	<u>1012505</u>	Keys (set of 2)	1	
3	<u>1013494</u>	Cover, Screw Head	2	
4	<u>1015528</u>	Screw, #10 x 1-1/4 Phillips Head	2	
5	<u>1016849</u>	Screw, #4-24 X 0.33, Pan-Head, Machine	2	
6	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1	
7	<u>101826201</u>	Key Switch, On/Off	1	
8	101830601	Screw and Washer Assembly	2	
9	<u>101830701</u>	Nut, Key Switch	1	
10	<u>101834502</u>	Cap, Black Key Switch	1	
11	<u>101851101</u>	Washer, Key Switch	1	
12	<u>101856002</u>	Switch, Rocker, Single-Pole	1	
13	<u>102196901</u>	Dust Cap	1	
14	<u>102508701</u>	Light, Battery	1	
15	<u>102572401</u>	Nut, Diagnostic Port, Prec	1	
16	<u>102977002</u>	Panel, Dash, Center, Elec (Instrument Panel)	1	
17	<u>103180101</u>	Cover, Hole, Switch, Rocker	2	
18	<u>103198301</u>	Plug, Hole, Round, 2.0 In	1	
19	<u>103218601</u>	Harness, Diagnostic Port	1	

4

G

E

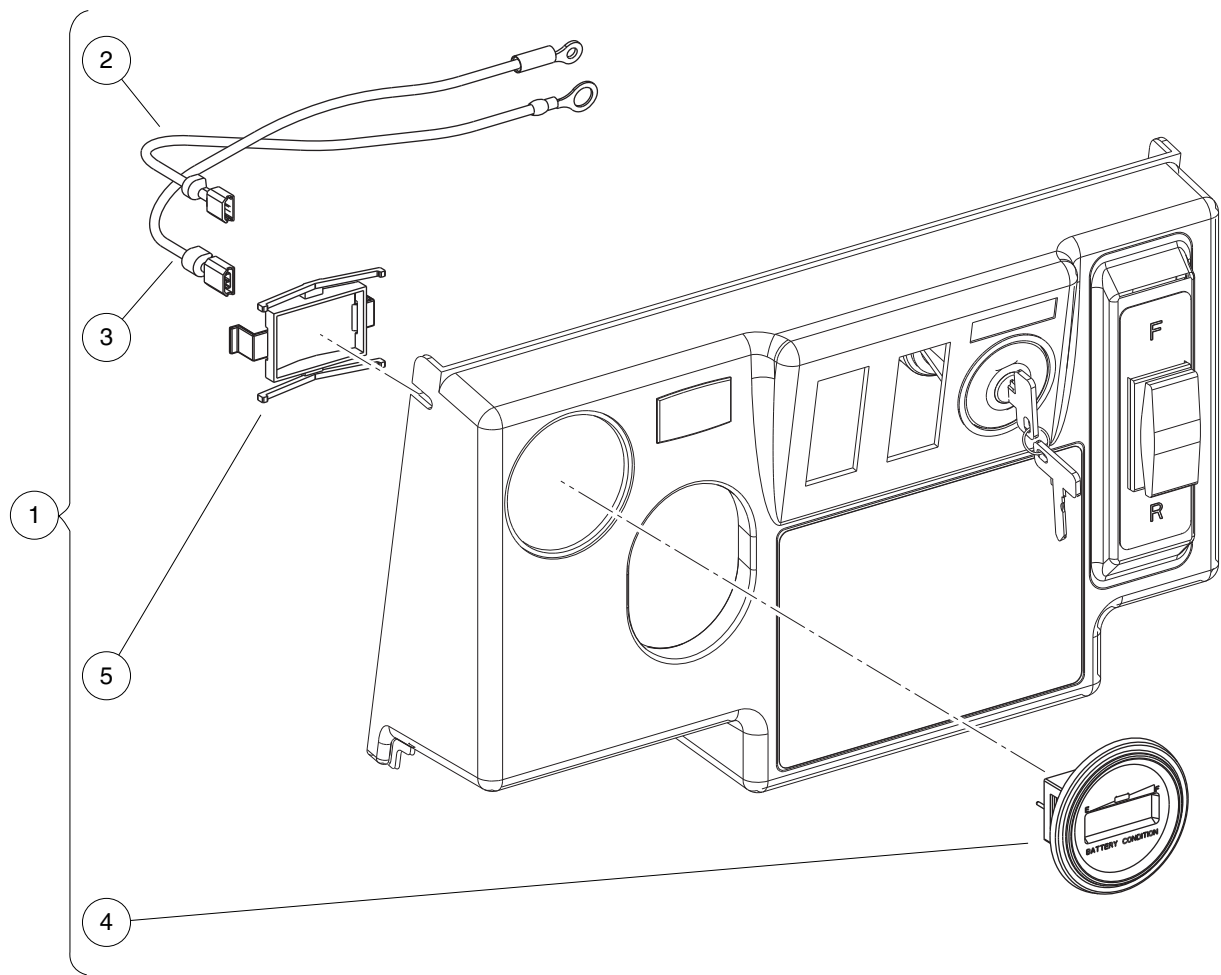

000817-002


BATTERY CONDITION INDICATOR – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>103257603</u>	Kit, Gauge, Battery Condition Indicator (includes items 2 through 4)	1	
2	<u>103257701</u>	Wire Asm, #18 Black, 2565mm	1	
3	<u>103257801</u>	Wire Asm, #16 Red, 330mm	1	
4	<u>103354401</u>	Gauge, Battery Cond Ind, Rnd (includes item 5)	1	
5	<u>103348202</u>	Clip, Bci, Round	1	

4

G

E

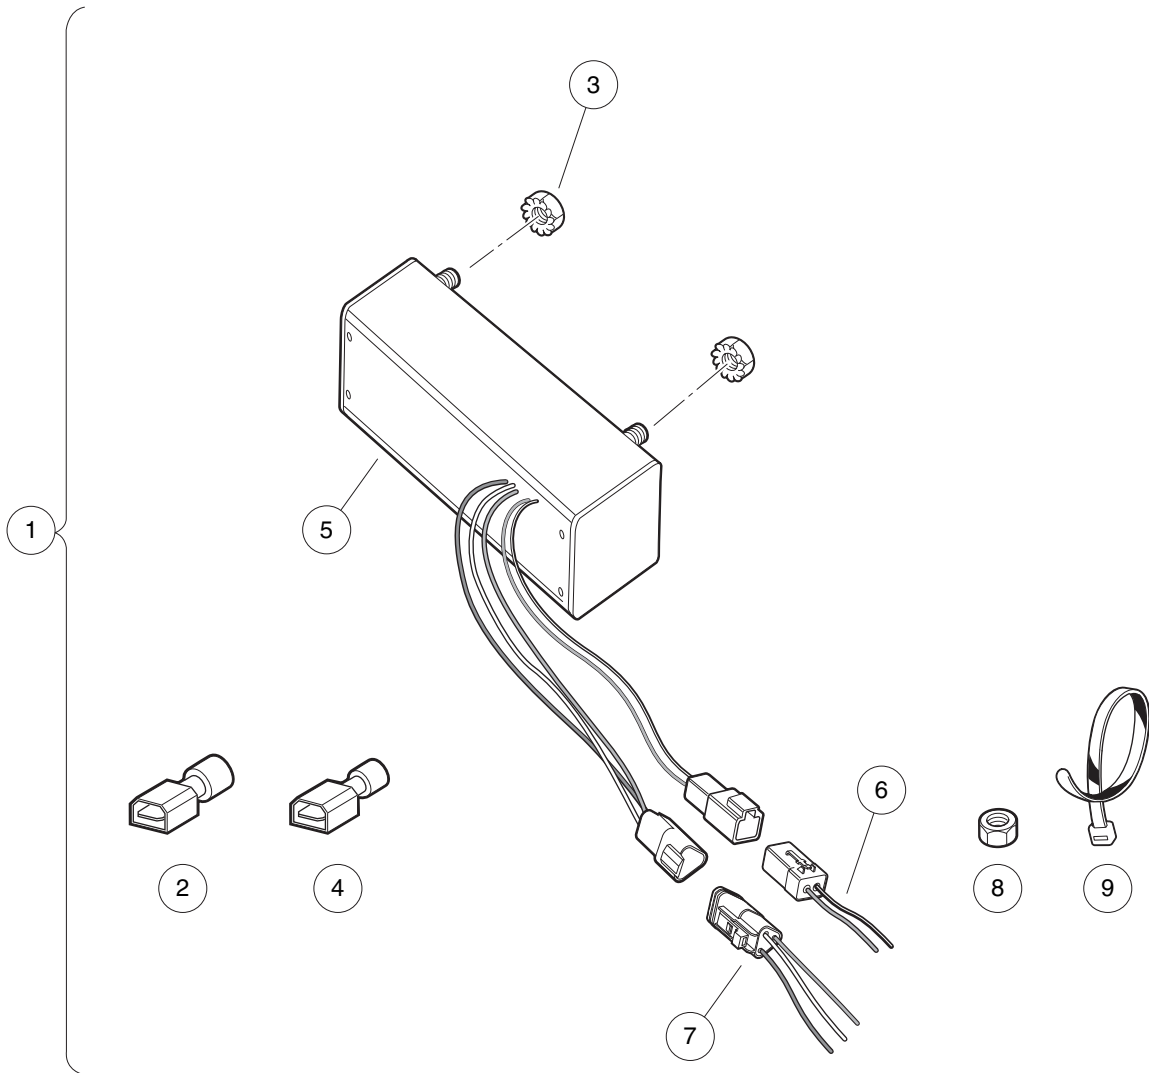

001271-001


DC CONVERTER – IQ SYSTEM ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>102357501</u>	Kit, DC/DC Converter (includes items 2 through 9)	1	E
2	<u>1016365</u>	Terminal, 1/4" Male Quick Disconnect	1	
3	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	2	
4	N/A	Terminal, 1/4" Male Quick Disconnect	1	
5	<u>102352201</u>	Converter , Dc -non Isolated	1	
6	<u>102354901</u>	Harness, Dc Converter - 12v	1	
7	<u>102355001</u>	Harness, Dc Converter - 48v	1	
8	<u>1242</u>	Nut, 5/16-18 Hex	1	
9	<u>8990</u>	Tie Wrap, 8" Nylon	4	

4

G


E

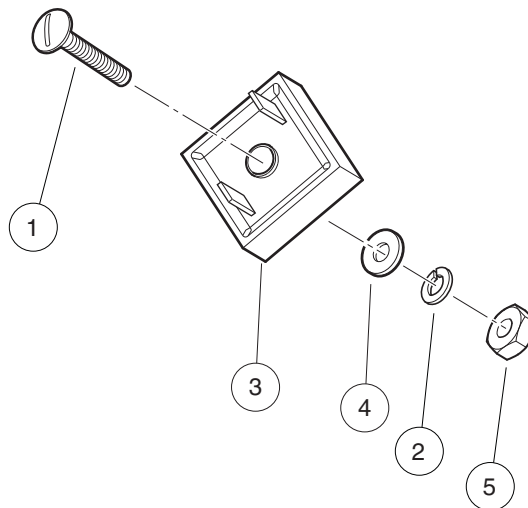

001091-001

VOLTAGE LIMITER – GASOLINE VEHICLE


ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		4
1	<u>1010909</u>	Screw, #10-32 X 1.25 Rd Hd Mch	1	G
2	<u>1016</u>	Lockwasher, #10 Split	1	E
3	<u>1017721</u>	Limiter, Voltage	1	
4	<u>183</u>	Washer, #10, Type A, Flat	1	
5	<u>7893</u>	Nut, #10-32 Hex	1	

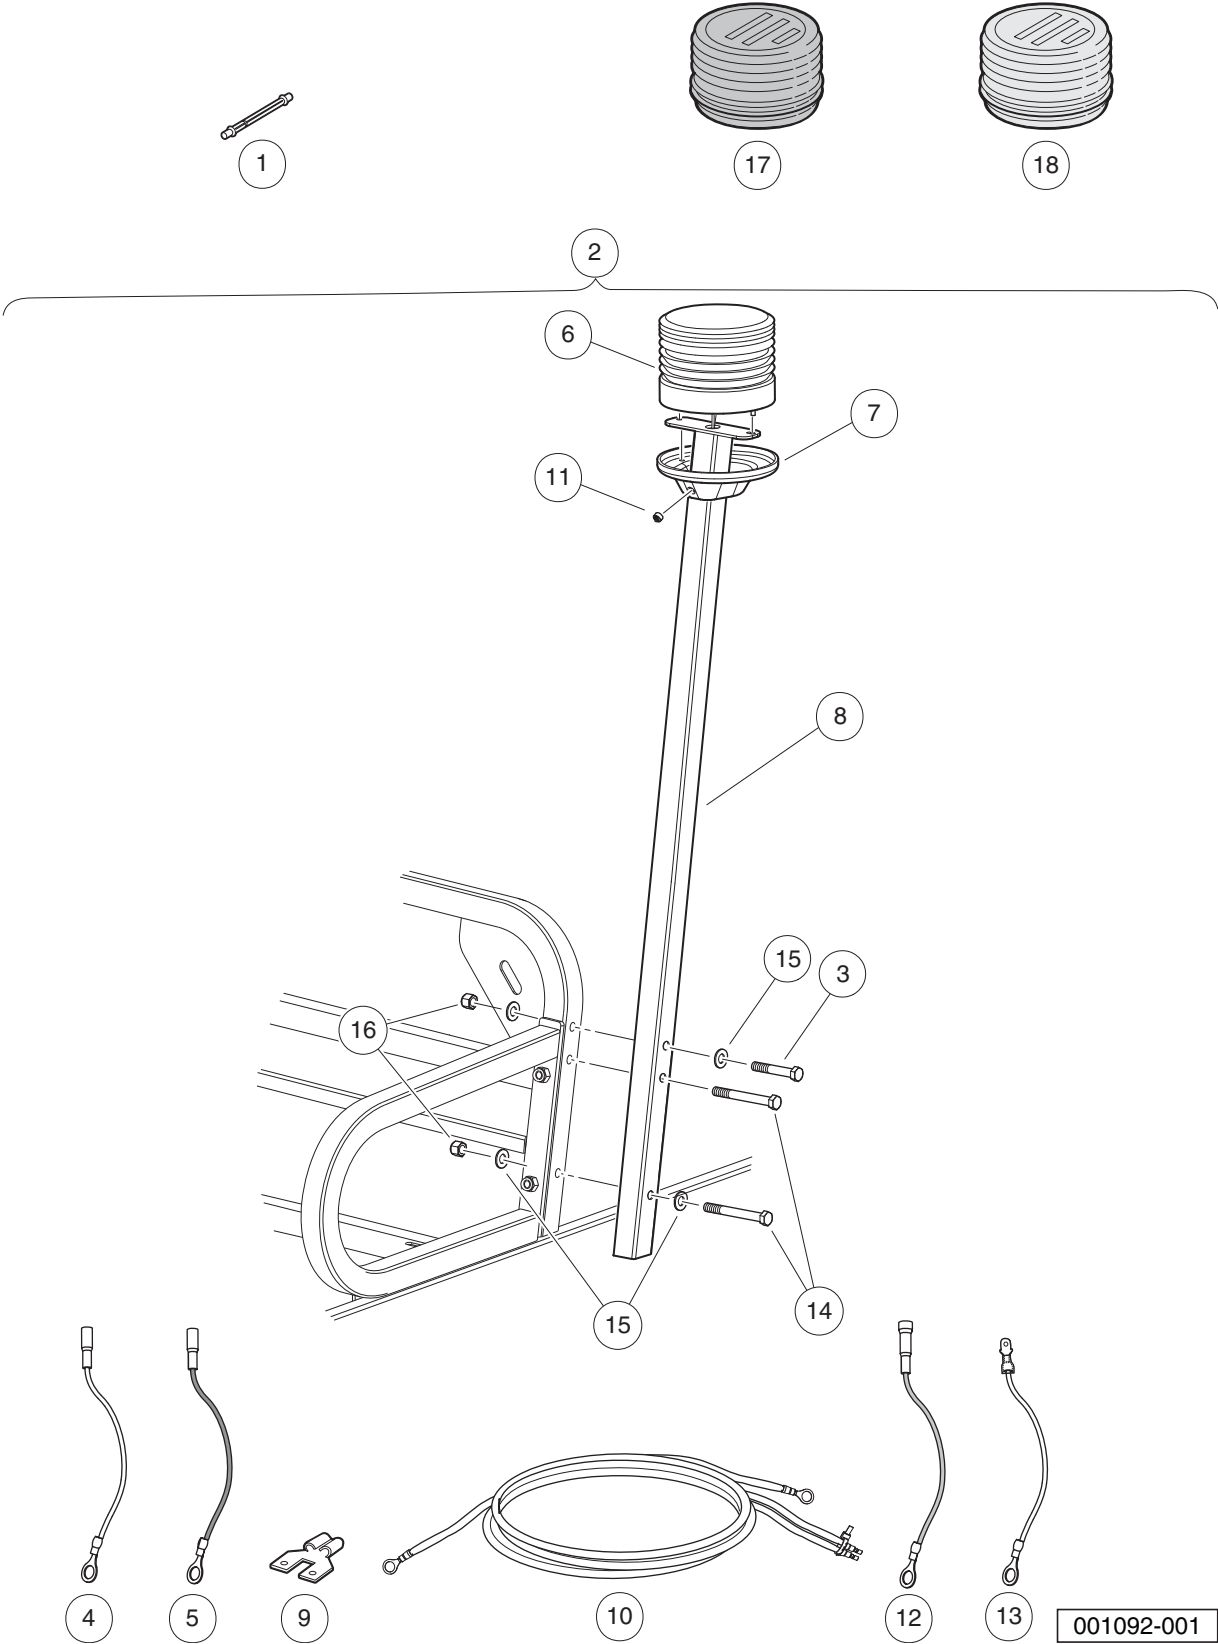

001092-001

STROBE LIGHT, POST-MOUNTED – GASOLINE VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1015526</u>	Bulb, Replacement, for Strobe Light	1	
2	<u>1015765</u>	Safety Strobe Lht Post Mnt Gas (includes items 3 through 16)	1	
3	<u>1013509</u>	Screw, 1/4-20 X 1.75 Hx Hd Cap	2	
4	<u>1015153</u>	Wire Assembly #16 Yellow	1	
5	<u>1015154</u>	Wire Assembly Blue Ca #16	1	
6	<u>1015156</u>	Light Assembly, Strobe	1	
7	<u>1015157</u>	Cover Plate Switch - Pole Ca	1	
8	<u>1015160</u>	Pole Weldment Carryall	1	
9	<u>1015162</u>	3/16 Tab Adapter Non-insul	1	
10	<u>1015172</u>	Wire Harness Assy, Strobe Lght	1	
11	<u>1015187</u>	Switch Assembly	1	
12	<u>1016837</u>	Wire Assembly Red #18	1	
13	<u>1016929</u>	Wire Assembly Black #16	1	
14	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	2	
15	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4	
16	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2	
17	<u>AM1243701</u>	Lens, Blue, for Strobe Light	1	
18	<u>AM1243801</u>	Lens, Red, for Strobe Light	1	

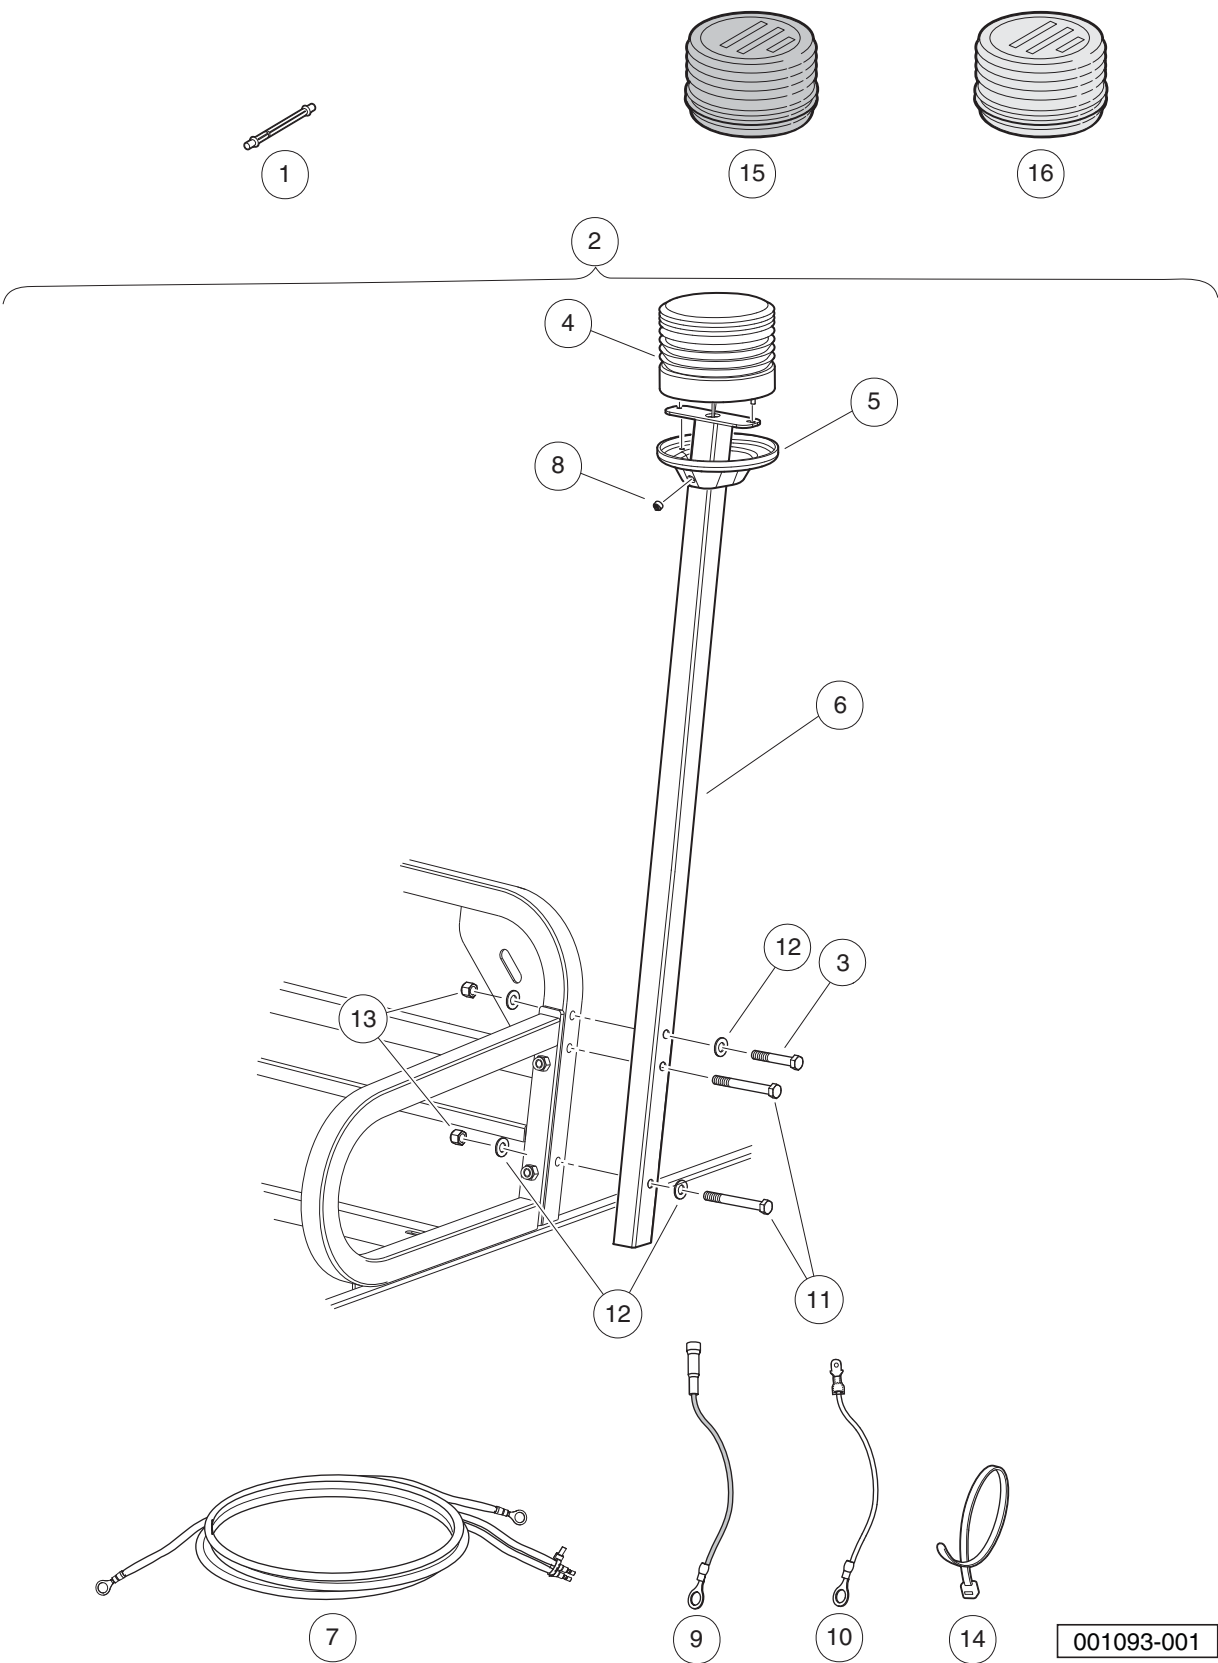

001093-001

STROBE LIGHT, POST-MOUNTED – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>1015526</u>	Bulb, Replacement, for Strobe Light	1	E
2	<u>101814601</u>	Safety Strobe Lht & Post Mt El (includes items 3 through 14)	1	
3	<u>1013509</u>	Screw, 1/4-20 X 1.75 Hx Hd Cap	2	
4	<u>1015156</u>	Light Assembly, Strobe	1	
5	<u>1015157</u>	Cover Plate Switch - Pole Ca	1	
6	<u>1015160</u>	Pole Weldment Carryall	1	
7	<u>1015172</u>	Wire Harness Assy, Strobe Lght	1	
8	<u>1015187</u>	Switch Assembly	1	
9	<u>1016837</u>	Wire Assembly Red #18	1	
10	<u>1016929</u>	Wire Assembly Black #16	1	
11	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	2	
12	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4	
13	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2	
14	<u>8990</u>	Tie Wrap, 8" Nylon	4	
15	<u>AM1243701</u>	Lens, Blue, for Strobe Light	1	
16	<u>AM1243801</u>	Lens, Red, for Strobe Light	1	

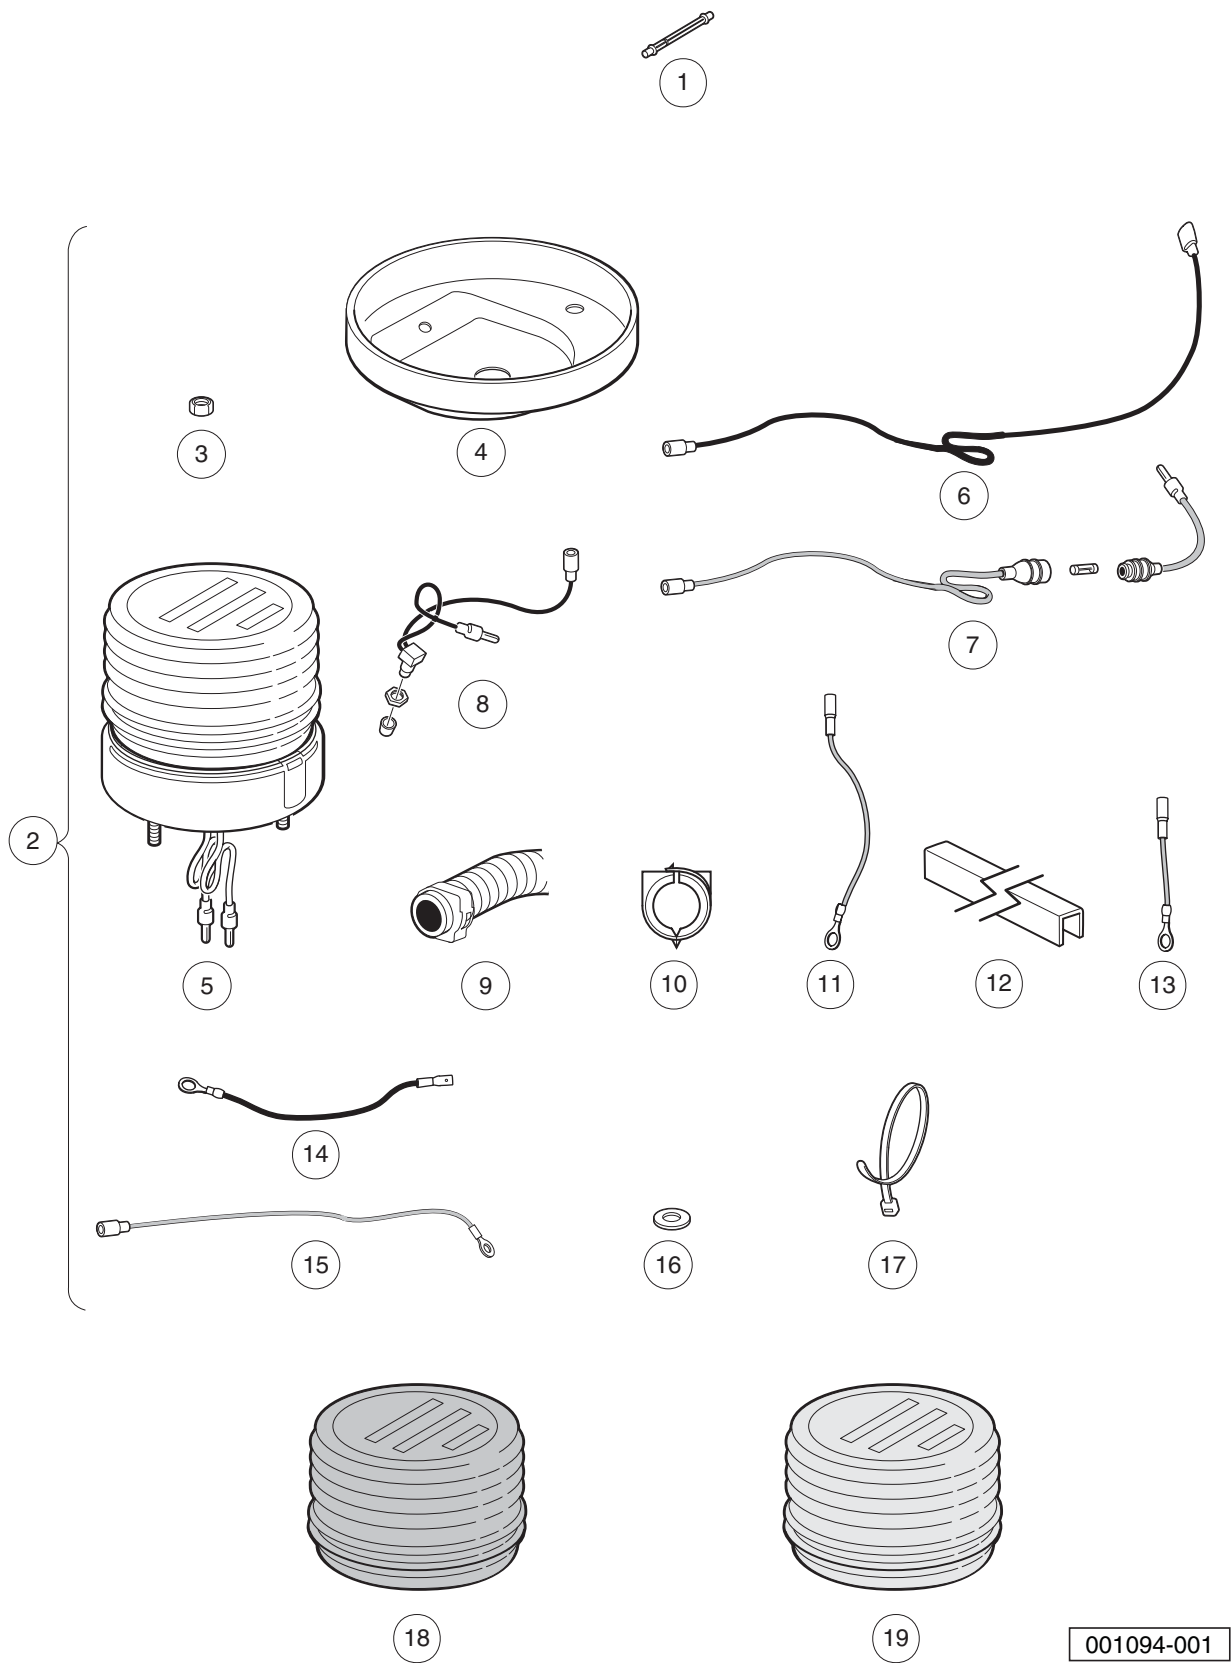

001094-001


STROBE LIGHT, CANOPY-MOUNTED

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015526</u>	Bulb, Replacement, for Strobe Light	1
2	<u>AM1243501</u>	Kit, Roof Mounted Strobe Fd (includes items 3 through 17)	A/R
3	<u>1012438</u>	Locknut, #10-24 Nylon Insert	2
4	<u>1015010</u>	Cover Plate Switch	1
5	<u>1015156</u>	Light Assembly, Strobe	1
6	<u>1015167</u>	#16 Black Wire Asm	1
7	<u>1015170</u>	Wire Assembly #16	1
8	<u>1015187</u>	Switch Assembly	1
9	<u>1015768</u>	Split Convolute Elec Conduit	11
10	<u>1015770</u>	Outlet Ring - .5 Diameter	5
11	<u>1016230</u>	Wire Asm #16 Red	1
12	<u>1016267</u>	Snap On Conduit Vert.	1
13	<u>1016287</u>	Wire Asm #16 Red	1
14	<u>1016929</u>	Wire Assembly Black #16	1
15	<u>101821601</u>	#18 Red Wire Assembly	1
16	<u>183</u>	Washer, #10, Type A, Flat	2
17	<u>8639</u>	Tie Wrap, 11" Nylon	8
18	<u>AM1243701</u>	Lens, Blue, for Strobe Light	A/R
19	<u>AM1243801</u>	Lens, Red, for Strobe Light	A/R

4

G

E

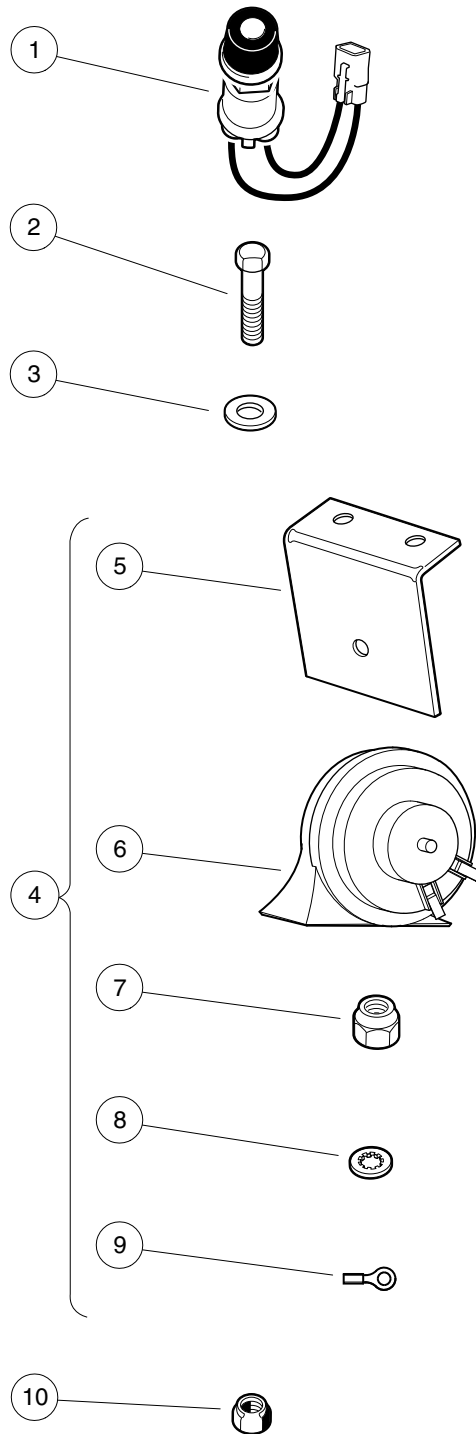

001095-001

HORN

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101969701</u>	Horn Button and Wire Assembly	1
2	<u>304</u>	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
3	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
4	<u>4029</u>	Horn (includes items 5 through 9)	1
5	<u>1011825</u>	Horn Bracket	1
6	<u>1014530</u>	Horn, 12-VDC	1
7	<u>101955101</u>	Nut, M6 Hex	1
8	<u>7820</u>	Washer, 5/16 Internal-Tooth	1
9	<u>8294</u>	5/16 Ring Term.	1
10	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2

4


G

E

4

G


E

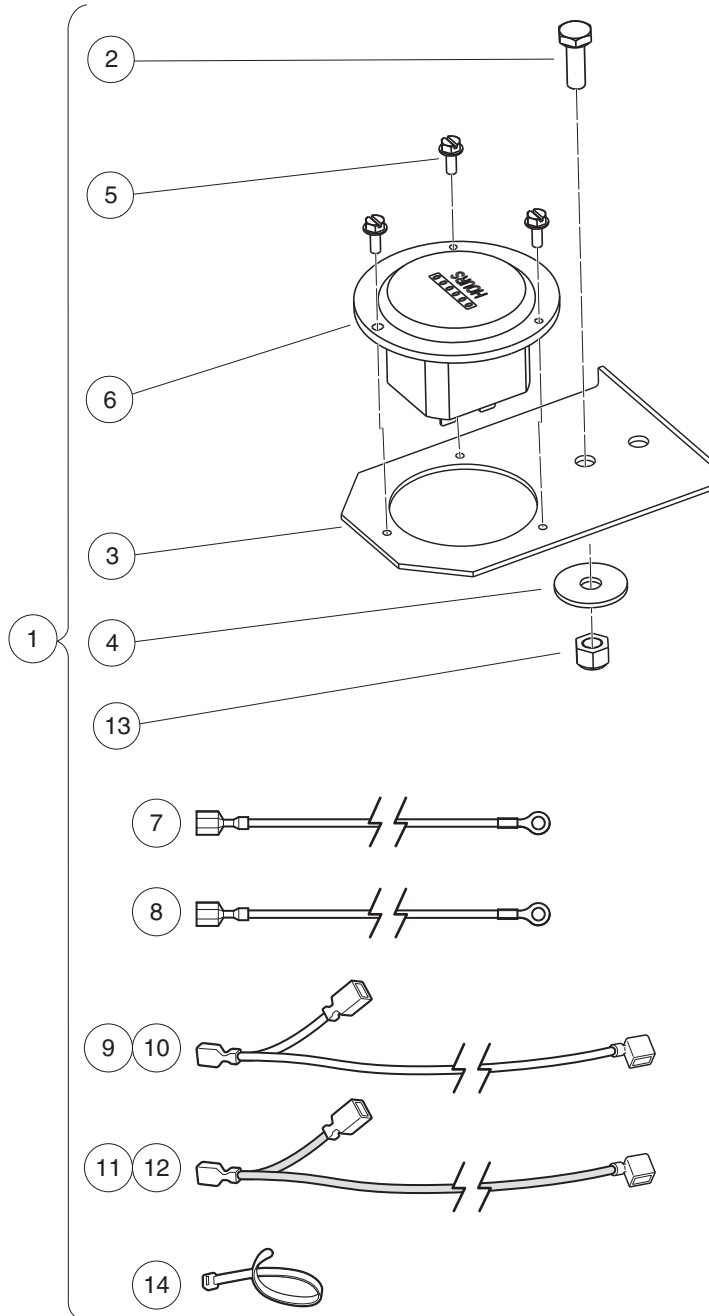

001096-001

HOUR METER – IQ SYSTEM AND IQ PLUS ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1013579</u>	Kit, Hour Meter (includes items 2 through 14)	1	
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	1	
3	<u>1013547</u>	Hour Meter Bracket	1	
4	<u>1014306</u>	Washer, 1/4" Type B Flat	1	
5	<u>1014540</u>	Screw, #6-32 X 3/8 Taptite	3	
6	N/A	Hour Meter	1	
7	101881501	Wire Assembly Black #18	1	
8	101881601	Wire Assembly Red #18	1	
9	<u>101997802</u>	Wire Assembly #18 Yellow	1	
10	<u>101997803</u>	Wire Asm #18 Yellow 31"	1	
11	<u>101997902</u>	Wire Assembly #18 Red	1	
12	<u>101997903</u>	Wire Asm # 18 Red 31"	1	
13	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	1	
14	<u>8990</u>	Tie Wrap, 8" Nylon	1	
Note: The kit includes components that apply to multiple vehicles. The installation instructions will specify which components are required for a specific model. After installation, discard components not used.				

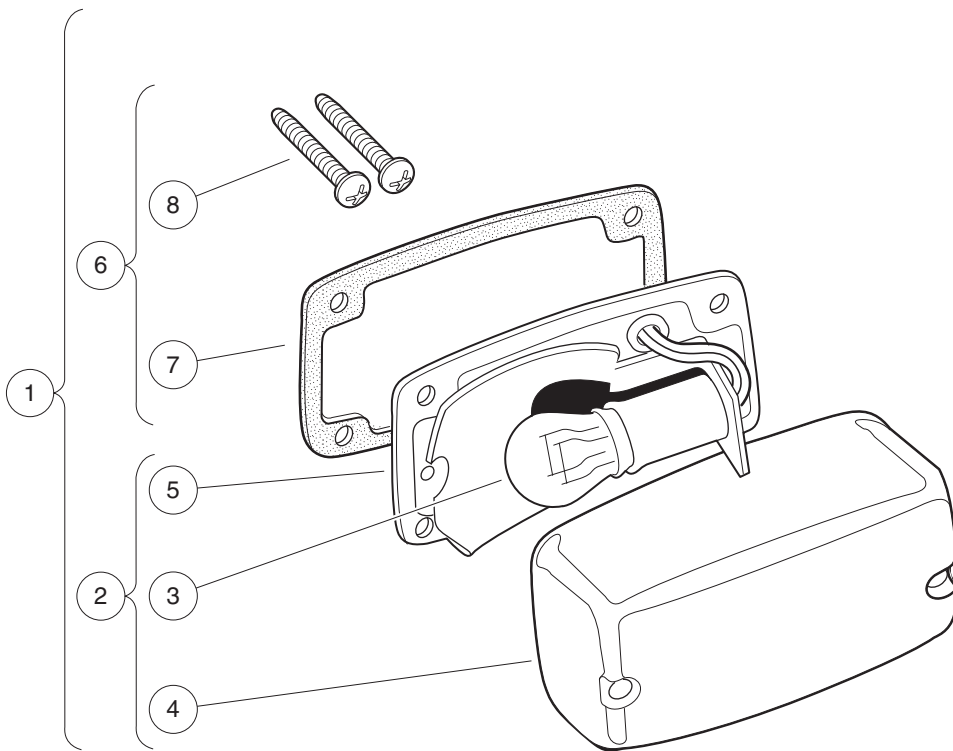

001081-001

TAILLIGHTS

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	1017035	Taillight Assembly (includes items 2 through 6)	2	E
2	N/A	Light, Tail (includes items 3 through 5)	1	
3	<u>1011582</u>	Taillight Bulb	1	
4	<u>1011843</u>	Taillight Lens	1	
5	N/A	Base, Taillight	1	
6	<u>1017699</u>	Hardware Kit, Tail Light (includes items 7 and 8)	1	
7	N/A	Gasket	1	
8	N/A	Screw, Tapered	2	

4

G


E

BRAKES, PEDALS, AND CABLE ASSEMBLIES

5

G


E

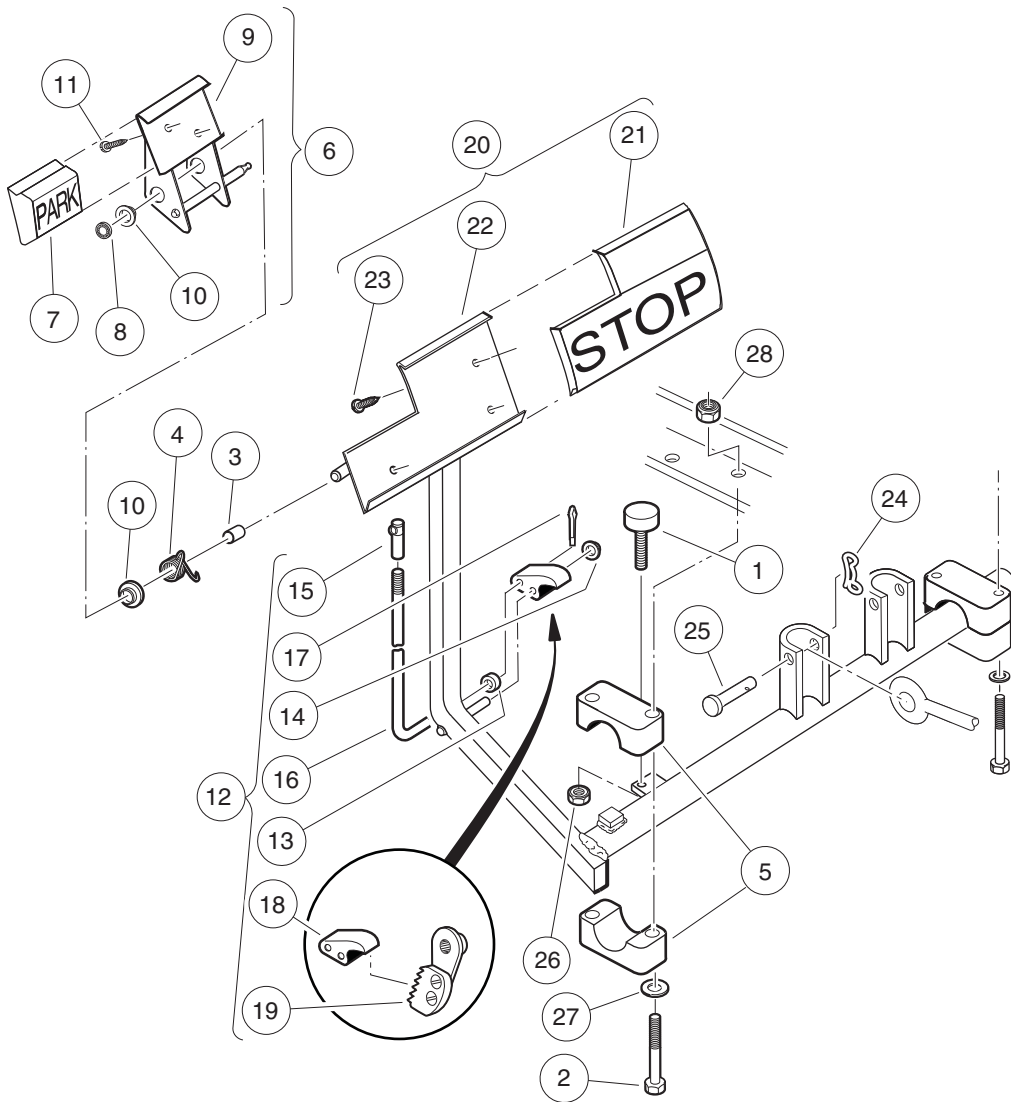

000187-001

BRAKE PEDAL ASSEMBLY


ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1010878</u>	Bumper, Rubber	1	
2	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	4	
3	<u>1010927</u>	Hill Brake Spacer	1	
4	<u>1010933</u>	Spring, Hill Brake Torsion	1	
5	<u>1011402</u>	Package, Brake Mounting Block	1	
6	<u>1011418</u>	Kit, Hill Brake Pedal (includes items 7 through 11)	1	
7	<u>1013870</u>	Pad, Hill Brake	1	
8	<u>1013876</u>	Pushnut, 3/8	1	
9	N/A	Hill Brake Weld Assembly	1	
10	<u>1032</u>	Bushing, Nylon	2	
11	7716	Screw, #10-16 Type AB, Sheet Metal	2	
12	<u>101187702</u>	Kit, Hill Brake Latch (includes items 13 through 19)	1	
13	<u>1010805</u>	Sleeve, Hill Brake Rod	1	
14	<u>1010877</u>	Pushnut, 3/8	1	
15	1010932	Ball Joint, 1/4-28	1	
16	N/A	Rod, Hill Brake	1	
17	<u>1017029</u>	Pin, Cotter, 7/64 x 1/2 Stainless-Steel	1	
18	N/A	Pawl, Hill Brake	1	
19	101918501	Ratchet Assembly	1	
20	<u>101878201</u>	Brake Pedal Kit (includes items 21 through 23)	1	
21	<u>1013869</u>	Pad, Brake Pedal	1	
22	N/A	Weldment, Brake Pedal, 2wr Std	1	
23	7716	Screw, #10-16 Type AB, Sheet Metal	3	
24	<u>102323101</u>	Pin, Bow Tie Locking	1	
25	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1	
26	<u>1028</u>	Nut, 1/4-20 Hex	1	
27	<u>1241</u>	Washer, 5/16 Type A Flat	4	
28	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4	

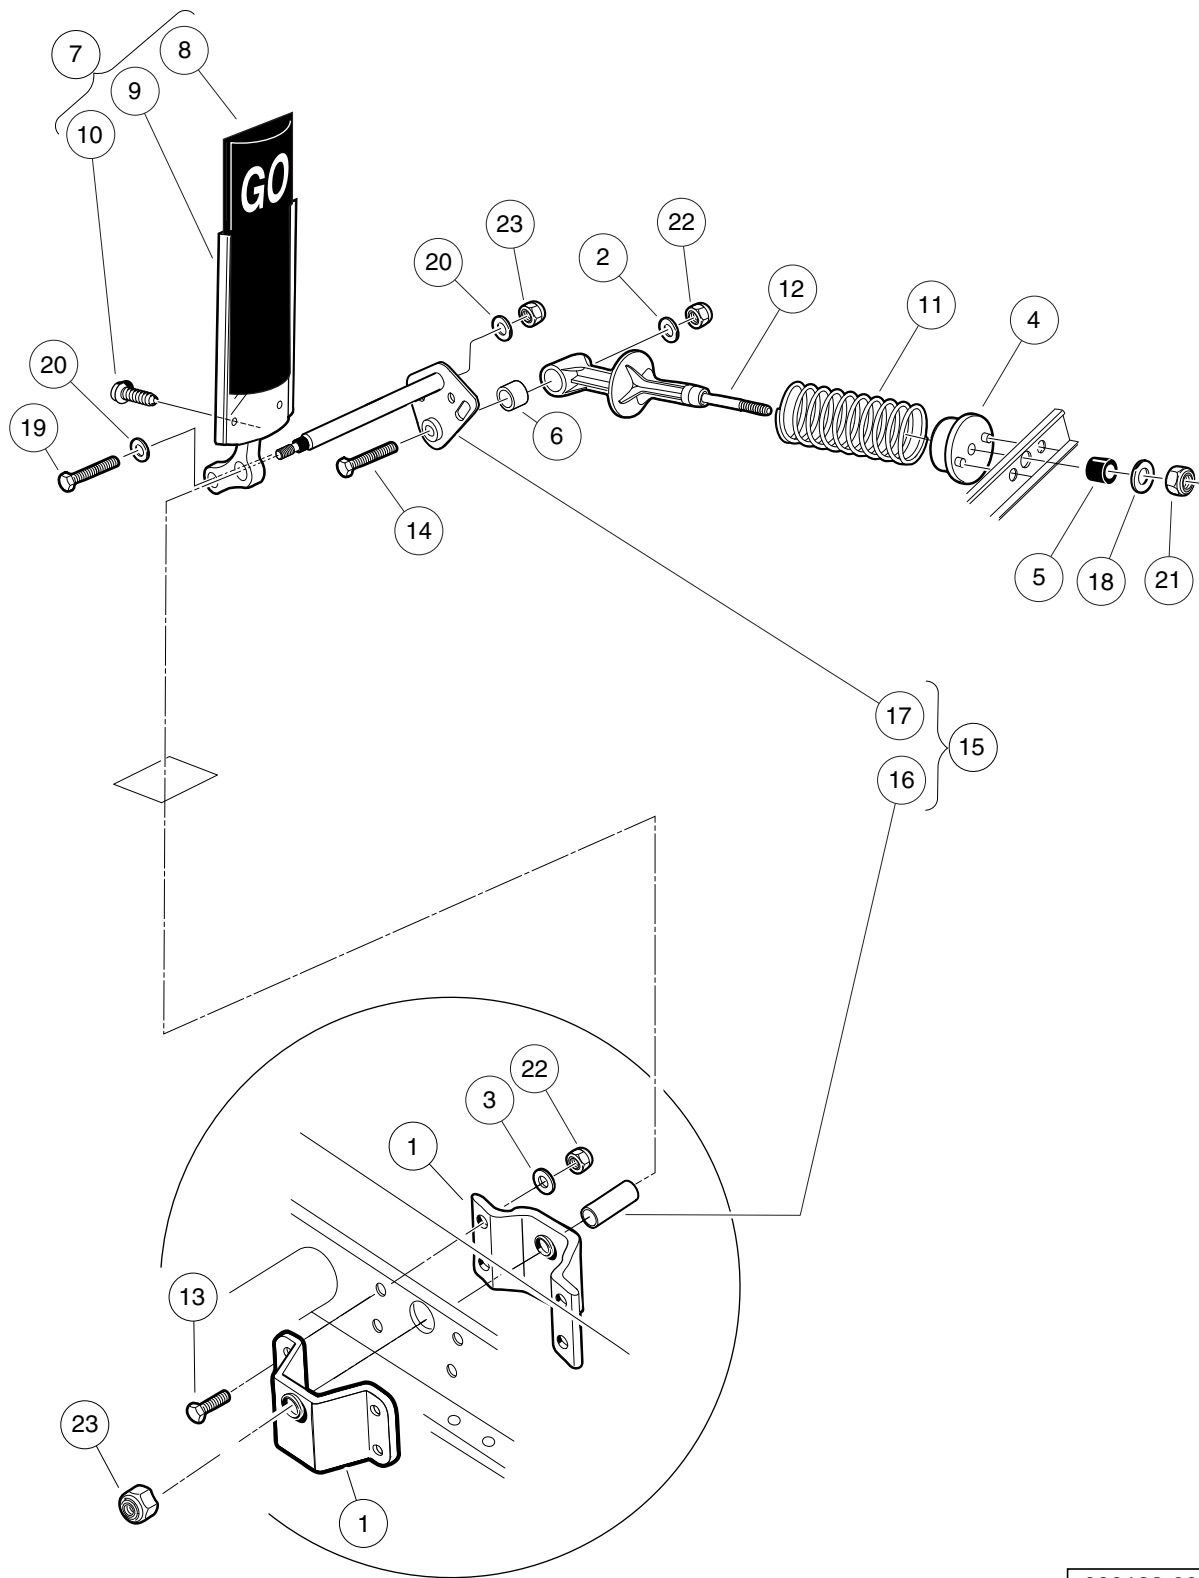

000188-007

ACCELERATOR PEDAL ASSEMBLY – ELECTRIC VEHICLES WITH MCOR


ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2	
2	<u>1011931</u>	Washer, 1/4 Flat	1	
3	<u>1014007</u>	Washer, 1/4, Flat	4	
4	<u>1017378</u>	Cup, Spring	1	
5	<u>1017380</u>	Bumper, Spring Return	1	
6	<u>1017424</u>	Bearing, Pivot Support	1	
7	<u>1017696</u>	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1	
8	1013871	Pad, Accelerator Pedal	1	
9	N/A	Accelerator Pedal Weldment	1	
10	7716	Screw, #10-16 Type AB, Sheet Metal	4	
11	101796201	Spring, Accelerator Return	1	
12	<u>101817401</u>	Retainer, Spring	1	
13	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4	
14	<u>101862001</u>	Screw, 1/4-20 X 1.500 Flange	1	
15	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 16 and 17)	1	
16	101919801	Spacer, Accelerator	1	
17	<u>102158901</u>	Pivot Rod Weldment	1	
18	<u>1241</u>	Washer, 5/16 Type A Flat	1	
19	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	1	
20	<u>334</u>	Washer, 3/8, Type A, Flat	2	
21	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	
22	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	5	
23	<u>8754</u>	Locknut, 3/8-16 Hex	2	

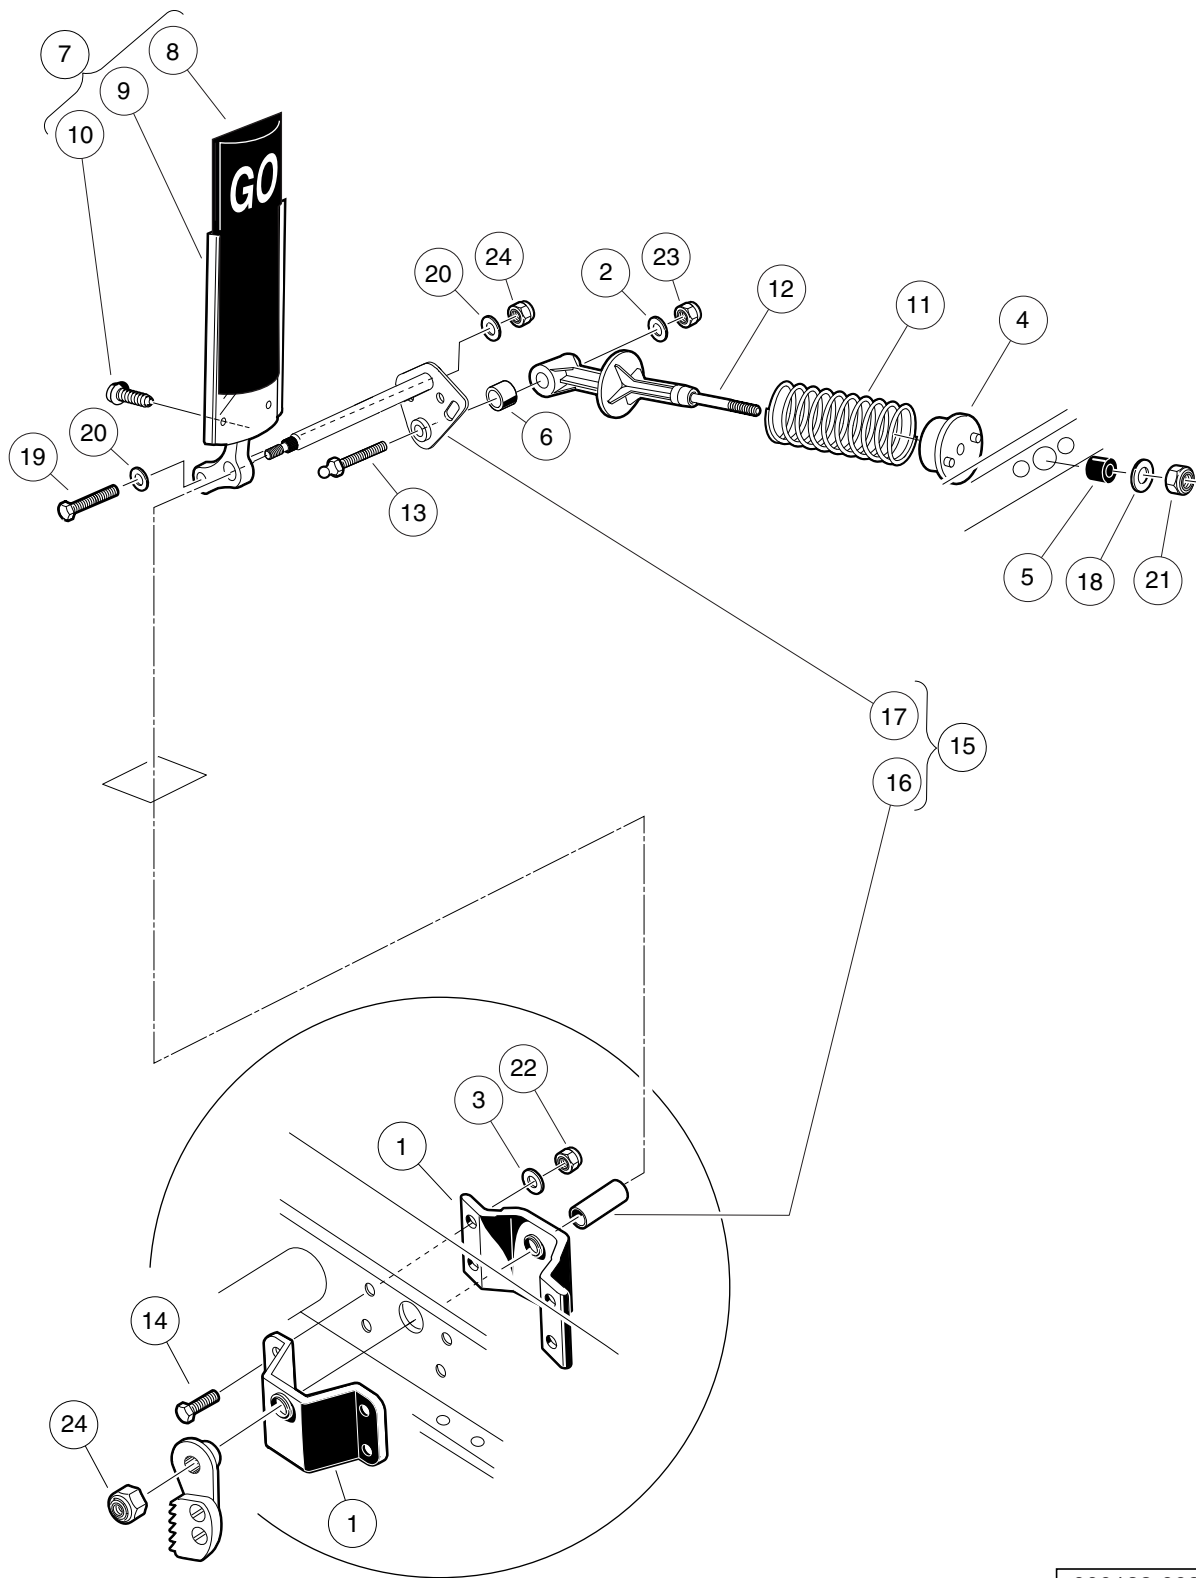

000188-008

ACCELERATOR PEDAL ASSEMBLY – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2	
2	<u>1011931</u>	Washer, 1/4 Flat	1	
3	<u>1014007</u>	Washer, 1/4, Flat	4	
4	<u>1017378</u>	Cup, Spring	1	
5	<u>1017380</u>	Bumper, Spring Return	1	
6	<u>1017424</u>	Bearing, Pivot Support	1	
7	<u>1017696</u>	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1	
8	1013871	Pad, Accelerator Pedal	1	
9	N/A	Accelerator Pedal Weldment	1	
10	7716	Screw, #10-16 Type AB, Sheet Metal	4	
11	101796201	Spring, Accelerator Return	1	
12	<u>101817401</u>	Retainer, Spring	1	
13	101818801	Stud, 1/4-28 X 1.35 Ball	1	
14	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4	
15	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 16 and 17)	1	
16	101919801	Spacer, Accelerator	1	
17	<u>102158901</u>	Pivot Rod Weldment	1	
18	<u>1241</u>	Washer, 5/16 Type A Flat	1	
19	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	1	
20	<u>334</u>	Washer, 3/8, Type A, Flat	2	
21	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	
22	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4	
23	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1	
24	<u>8754</u>	Locknut, 3/8-16 Hex	2	

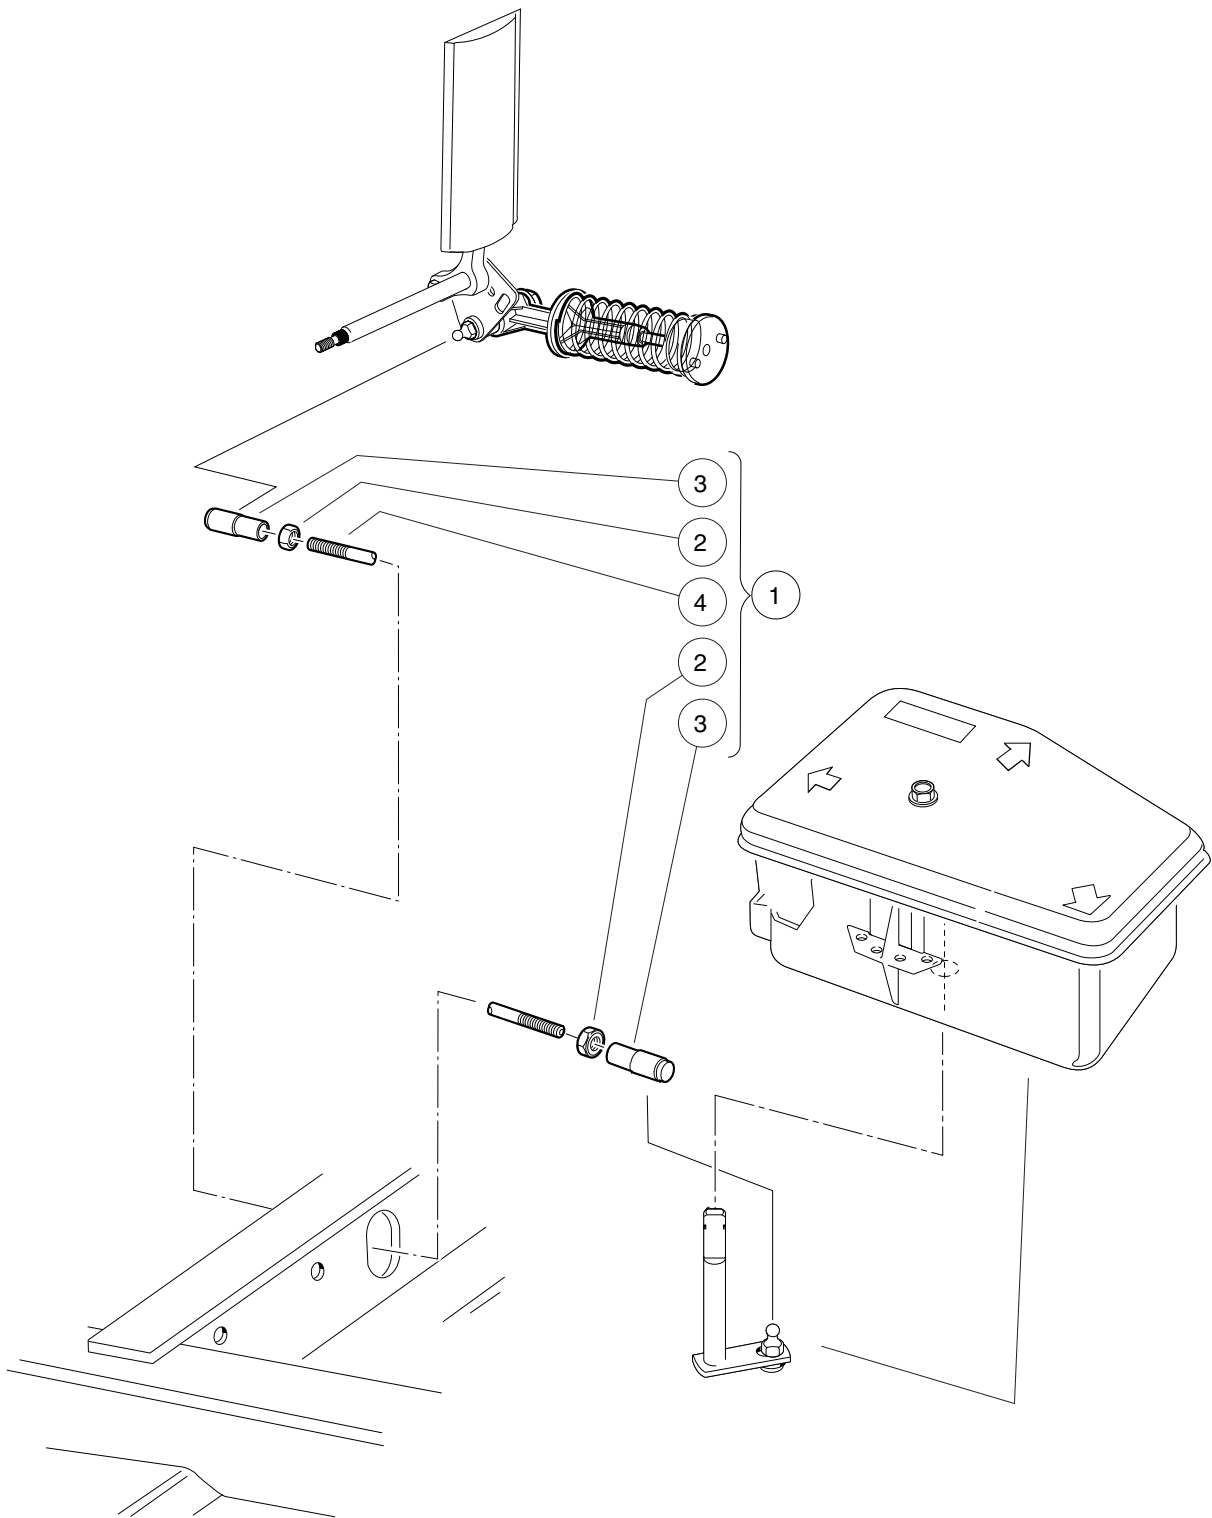

000362-001


ACCELERATOR ROD – TURF/CARRYALL 1 GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	101912401	Rod, Accelerator (includes items 2 through 4)	1	
2	<u>1011084</u>	Nut, 1/4-28 Hex Jam	2	
3	<u>1011734</u>	Joint, Ball	2	
4	N/A	Accelerator Rod	1	

5

G


E

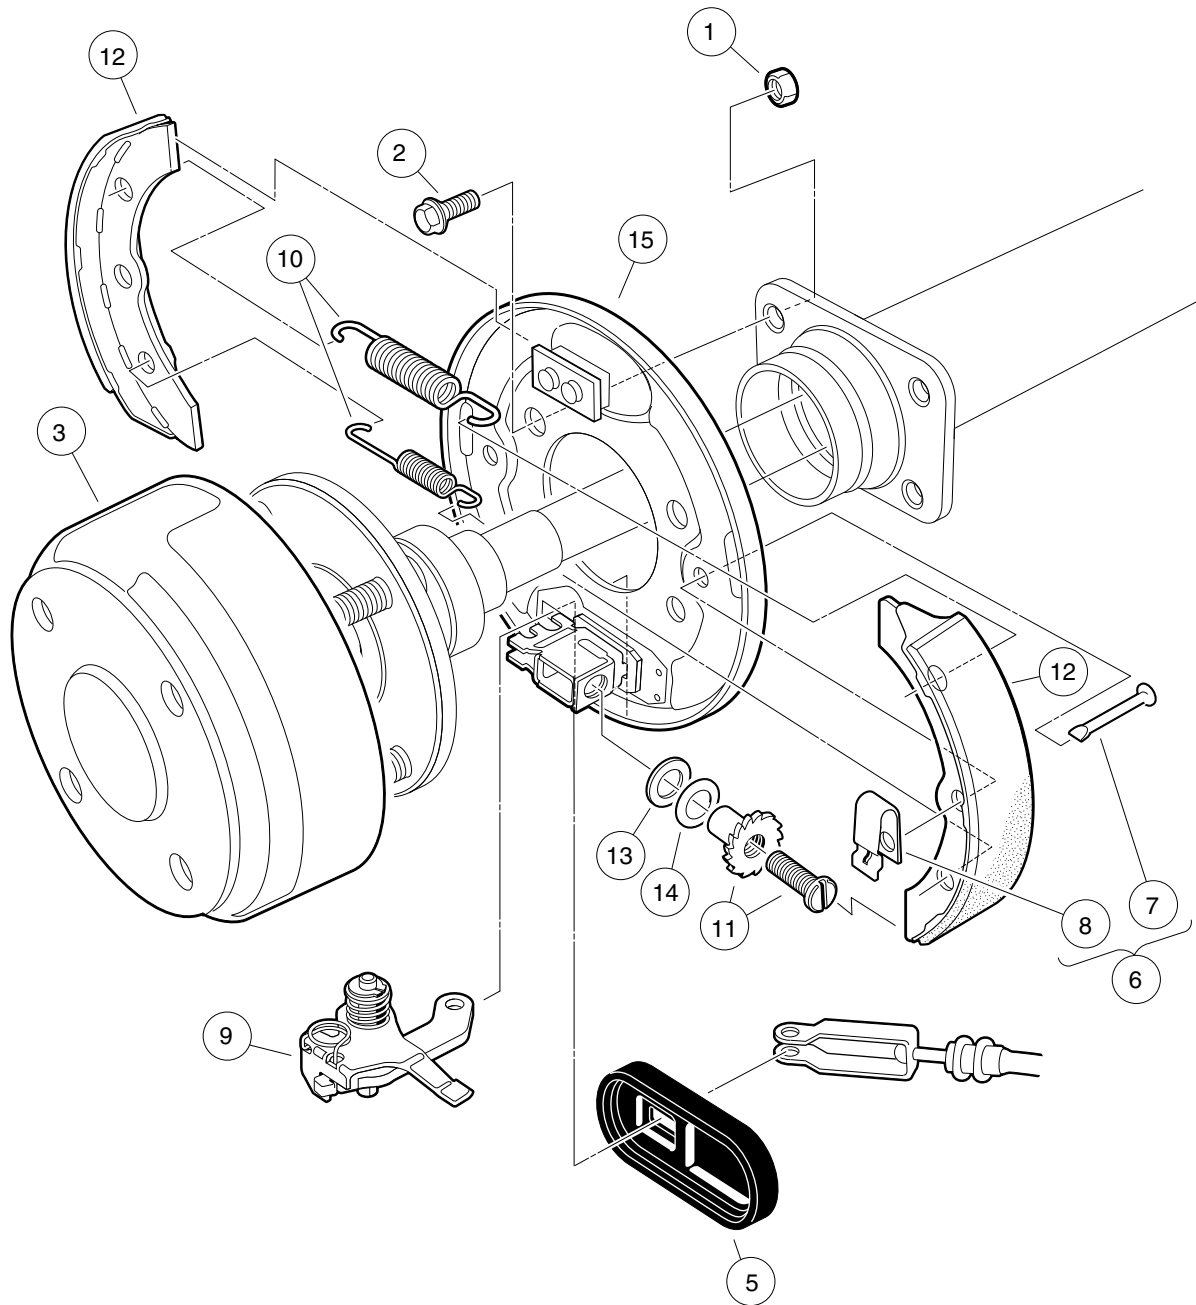

000186-002

REAR BRAKE ASSEMBLY, SELF-ADJUSTING – VEHICLE WITH 2-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1013924</u>	Nut, 5/16-24, Hex Head Cone	8	
2	<u>1014153</u>	Bolt, Brake Cluster Mounting	8	
3	<u>101791101</u>	Drum without Center Hole, Brake	2	
4	<u>101823301</u>	Cluster Assembly, Right (Passenger) Brake (includes items 5 through 15)	1	
5	<u>1010850</u>	Dust Cover	1	
6	<u>1011466</u>	Kit, Shoe Retainer (includes items 7 and 8)	1	
7	N/A	Pin	2	
8	N/A	Shoe Clamp Spring	2	
9	<u>101815501</u>	Lever Assembly, Self-Adjusting Brake, Right (Passenger)	1	
10	<u>101816301</u>	Package, Brake Spring, Self-Adjusting	1	
11	<u>101816501</u>	Adj Mechanism, S.A. Brakes, Right (Passenger)	1	
12	<u>101823201</u>	Package, Brake Shoe, Self-Adjusting	1	
13	<u>101823801</u>	Plate, Washer, Brake, Self-Adjusting	1	
14	<u>101823901</u>	Washer, Brake, Self-Adjusting	1	
15	<u>101824001</u>	Plate Assembly, Right Brake Backing	1	
16	<u>101823302</u>	Cluster Assembly, Left Brake (includes items 17 through 27)	1	
17	<u>1010850</u>	Dust Cover	1	
18	<u>1011466</u>	Kit, Shoe Retainer (includes items 19 and 20)	1	
19	N/A	Pin	2	
20	N/A	Shoe Clamp Spring	2	
21	<u>101815502</u>	Lever Assembly, Self-Adjusting Brake, Left	1	
22	<u>101816301</u>	Package, Brake Spring, Self-Adjusting	1	
23	<u>101816502</u>	Adjusting Mechanism, Self-Adjusting Brake, Left	1	
24	<u>101823201</u>	Package, Brake Shoe, Self-Adjusting	1	
25	<u>101823801</u>	Plate, Washer, Brake, Self-Adjusting	1	
26	<u>101823901</u>	Washer, Brake, Self-Adjusting	1	
27	<u>101824002</u>	Plate Assembly, Left Brake Backing	1	
Note: Driver-side brake cluster not shown. Components have a similar appearance to passenger-side brake cluster components.				

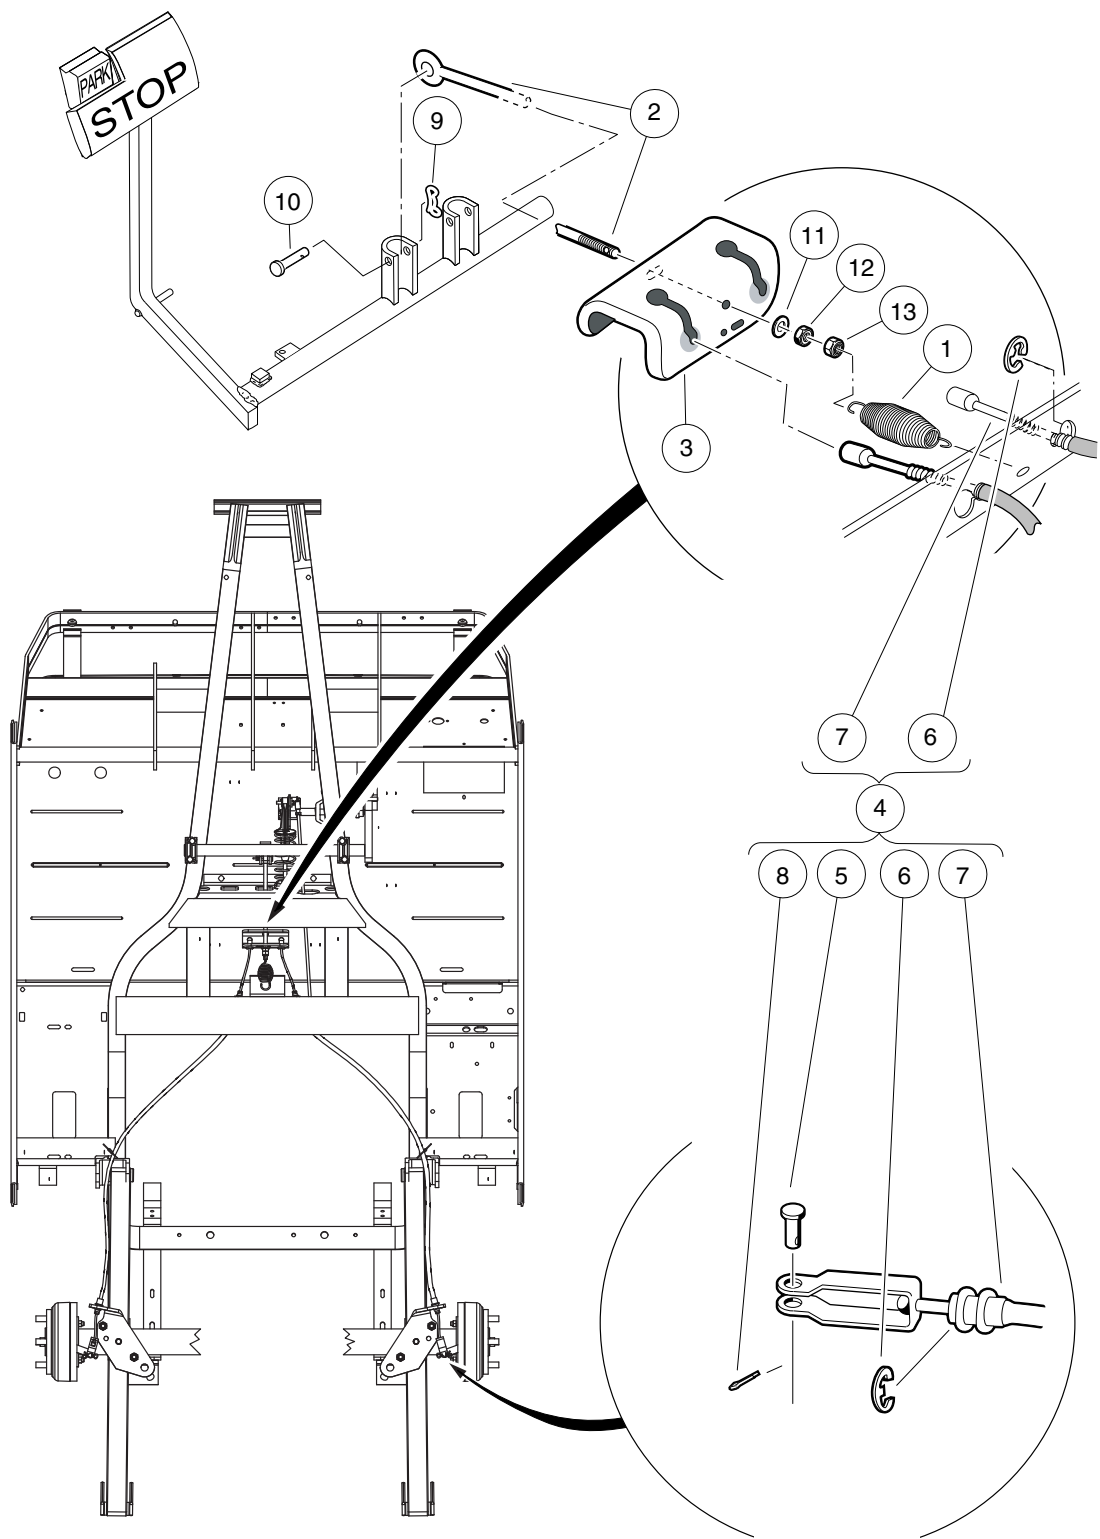

000296-001

REAR BRAKE CABLES AND EQUALIZER

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1013531</u>	Spring, Brake Return	1	
2	<u>101953101</u>	Rod, Equalizer, 8.91"	1	
3	<u>101990801</u>	Equalizer Bracket	1	
4	<u>102022101</u>	Brake Cable Kit (includes items 5 through 8)	2	
5	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	1	
6	<u>1011779</u>	E-Clip, 1/2	2	
7	N/A	Cable, Brake, 41"	1	
8	<u>102292801</u>	Pin, Bow Tie Locking - .072	1	
9	<u>102323101</u>	Pin, Bow Tie Locking	1	
10	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1	
11	<u>1241</u>	Washer, 5/16 Type A Flat	1	
12	<u>1242</u>	Nut, 5/16-18 Hex	1	
13	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	

5

G


E

STEERING AND SUSPENSION

6

G


E

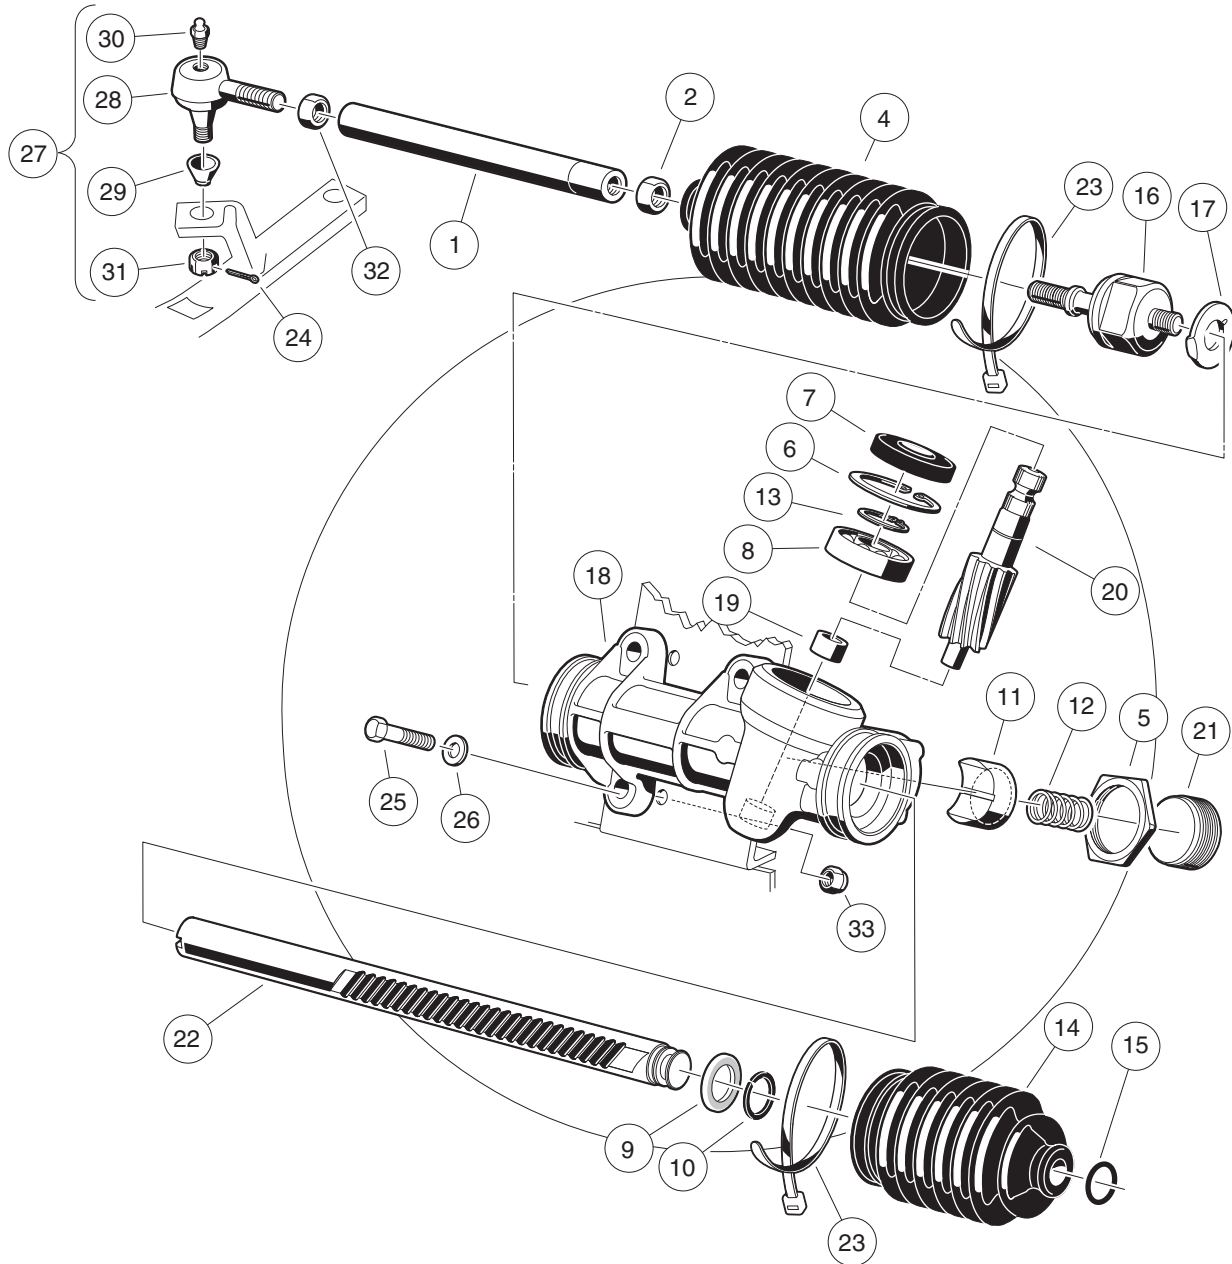

001213-001

STEERING GEAR ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	<u>1012467</u>	Link, Rack and Pinion Drag	1	
2	<u>1013042</u>	Nut, 12mm Hex	1	
3	<u>101878302</u>	Steering Gear Assembly (without yoke) (includes items 4 through 23)	1	
4	<u>1013035</u>	Bellows, Long	1	
5	<u>1013044</u>	Rack Screw Locknut	1	
6	N/A	Snap Ring	1	
7	<u>1013052</u>	Seal, Steering Pinion Dust	1	
8	<u>101879401</u>	Bearing, Ball	1	
9	<u>101879501</u>	Stop Washer	1	
10	<u>101879601</u>	Stop Ring, C-Type	1	
11	<u>101879701</u>	Support Yoke	1	
12	<u>101879801</u>	Rack Guide Pressure Spring	1	
13	<u>101879901</u>	Ring, Stop, C-Type	1	
14	<u>101880001</u>	Bellows, Short	1	
15	<u>101880101</u>	Dust Seal Retaining Ring	1	
16	<u>101880201</u>	Inner Ball Joint Asm	1	
17	<u>101880301</u>	Washer, Tab	1	
18	N/A	Box, Steering Gear	1	
19	N/A	Bearing, Lower Pinion	1	
20	N/A	Pinion, Steering	1	
21	N/A	Screw, Rack Guide	1	
22	N/A	Rack, Steering	1	
23	<u>8990</u>	Tie Wrap, 8" Nylon	2	
24	<u>1035</u>	Cotter Pin, 3/32 x 1	1	
25	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	3	
26	<u>334</u>	Washer, 3/8, Type A, Flat	3	
27	<u>7540</u>	Ball Joint, Left (includes items 28 through 31)	1	
28	<u>1011895</u>	Socket, LH Vertical	1	
29	<u>1011930</u>	Seal, Vertical Socket Dust	1	
30	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
31	<u>7602</u>	Nut, 3/8-24 UNF Hex	1	
32	<u>7555</u>	Nut, 1/2-20 Hex, Left-Hand Thread	1	
33	<u>8754</u>	Locknut, 3/8-16 Hex	3	

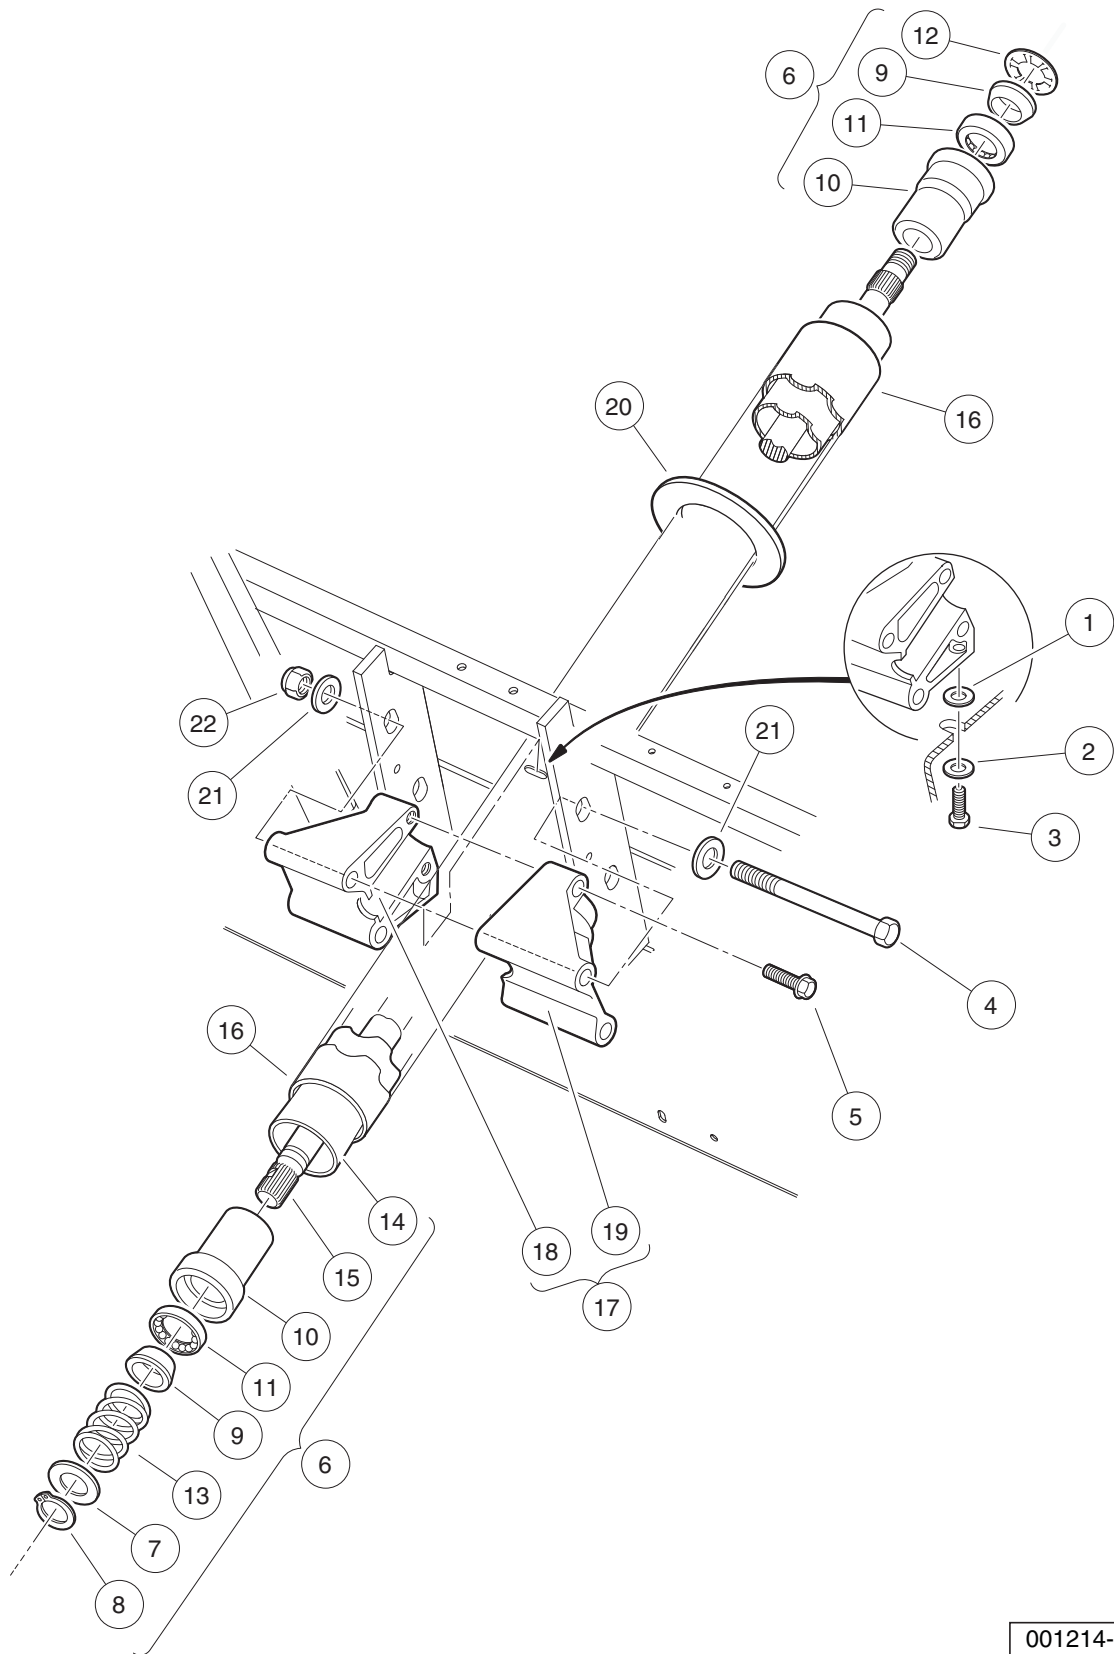6**G****E**

001214-001


STEERING COLUMN – UTILITY

ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	<u>1011578</u>	Washer, 5/16 Type B Flat	1	
2	<u>1011697</u>	Washer, 5/16 Flat	1	
3	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	1	
4	<u>1016183</u>	Screw, 3/8-16 X 7.00 Hex Cap	2	
5	<u>1016269</u>	Screw, 5/16-18 Thrd Forming	2	
6	<u>1017313</u>	Steering Shaft Assembly (includes items 7 through 15)	1	
7	<u>1012604</u>	Washer, 0.675 ID X 1.19 OD	1	
8	<u>1012605</u>	Ring, 0.579 Internal Retaining	1	
9	<u>1014125</u>	Wedge, Molded	2	
10	<u>1014126</u>	Seat, Plastic Bearing	2	
11	<u>1014213</u>	Bearing, Ball	2	
12	<u>1014214</u>	Ring, Retaining	1	
13	<u>1014217</u>	Spring, Steering Shaft	1	
14	<u>1017314</u>	Column, Aluminum Steering	1	
15	<u>1017315</u>	Shaft Steering Column	1	
16	<u>1017317</u>	Tube Cover, Steering Column	1	
17	101984801	Kit, Steering Column Mounting Bracket (includes items 18 and 19)	1	
18	N/A	Bracket, RH Steering Column Mount	1	
19	N/A	Bracket, LH Steering column mount	1	
20	<u>102278001</u>	Boot, Steering Column Round	1	
21	<u>334</u>	Washer, 3/8, Type A, Flat	4	
22	<u>8754</u>	Locknut, 3/8-16 Hex	2	

6

G

E

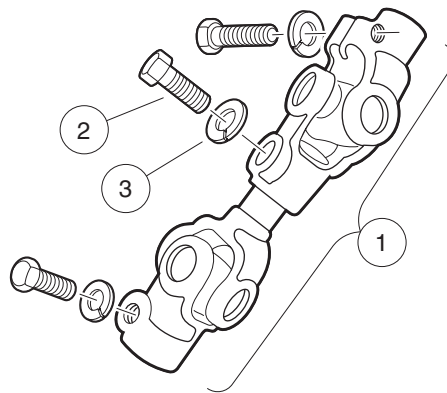

001217-001


INTERMEDIATE STEERING SHAFT – TURF/CARRYALL 1/2/2 PLUS/6

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		6
1	<u>1013861</u>	Intermediate Steering Shaft (includes items 2 and 3)	1	G
2	<u>1017226</u>	Bolt, Hex-Head, 8mm X 1.25 - 30	3	E
3	<u>7174</u>	Lockwasher, 5/16 Split	3	

6

G

E

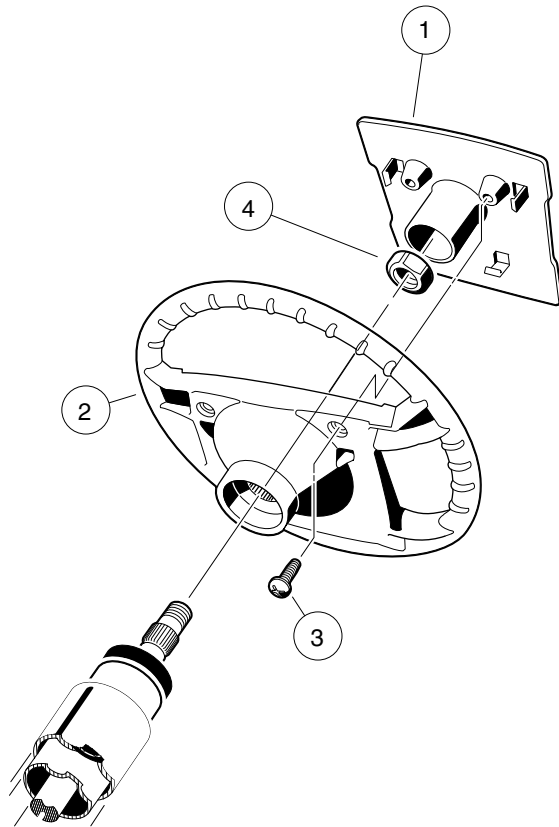

000246-003

STEERING WHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101615504</u>	Plate, Scorecard	1
2	<u>1016156</u>	Wheel, Steering	1
3	<u>1016663</u>	Screw, #12-14 X 0.625	2
4	<u>1017273</u>	Nut, 5/8-18 Nylon Insert Jam	1

6


G

E

6

G



E

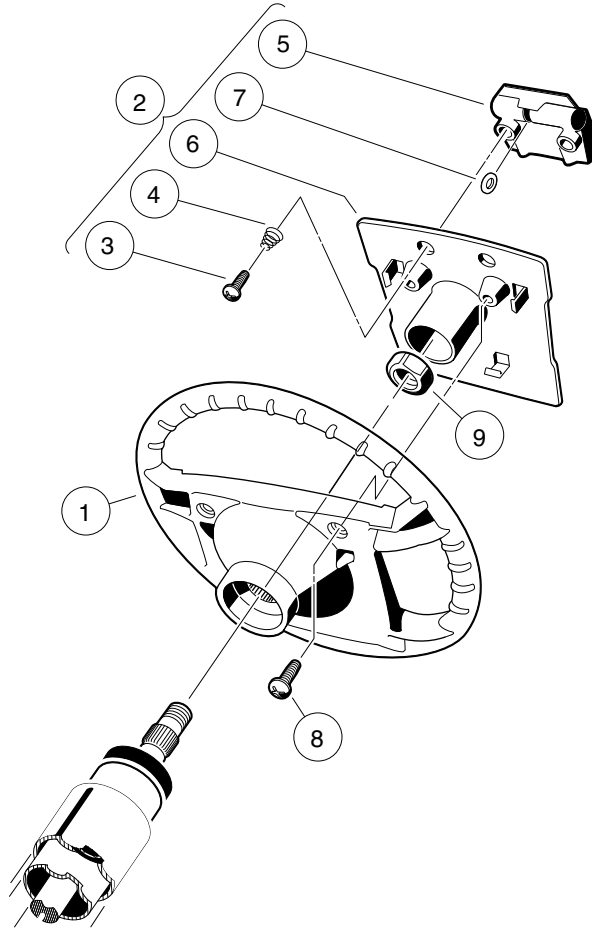

000246-002

STEERING WHEEL WITH CLIP


ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	<u>1016156</u>	Wheel, Steering	1	E
2	<u>1016219</u>	Plate, Scorecard (includes items 3 through 7)	1	
3	<u>1012565</u>	Screw, #12 Phillips Round Head	2	
4	<u>1012566</u>	Tapered Compression Spring	2	
5	<u>1016154</u>	Clip, Scorecard	1	
6	N/A	Plate, Score Card	1	
7	<u>1016214</u>	Pencil Grip	1	
8	<u>1016663</u>	Screw, #12-14 X 0.625	2	
9	<u>1017273</u>	Nut, 5/8-18 Nylon Insert Jam	1	

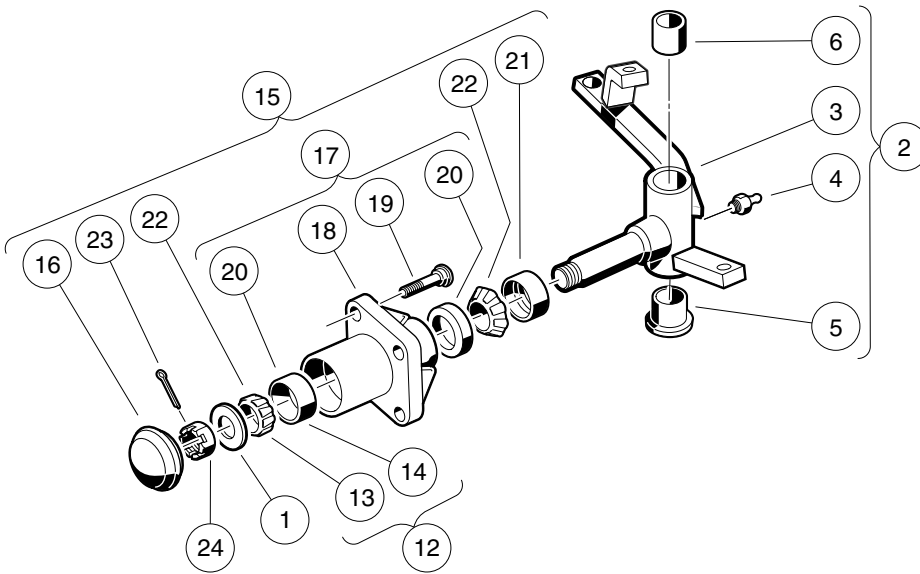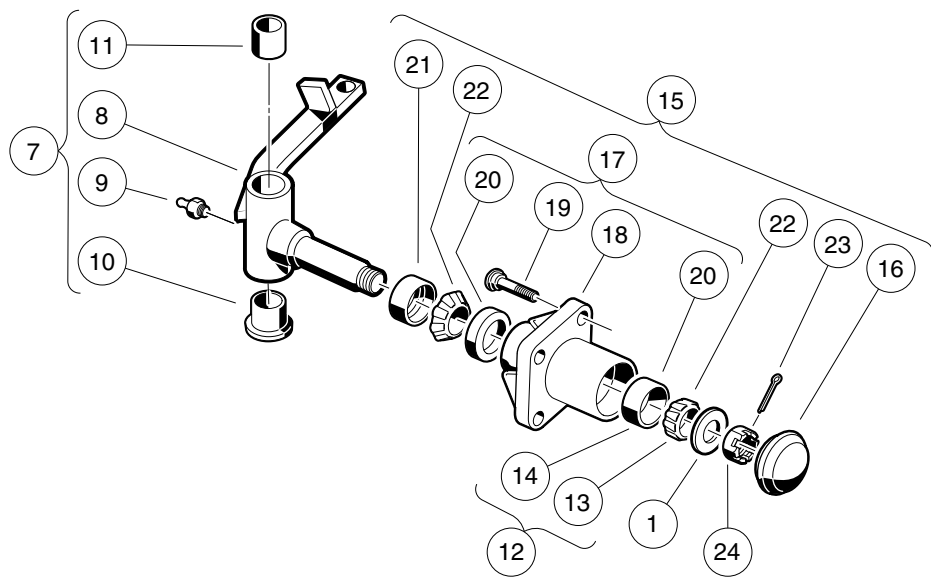6**G****E****PASSENGER SIDE****DRIVER SIDE**

000310-001

FRONT SPINDLES AND HUBS – VEHICLES WITH TWO-WHEEL BRAKES


ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	<u>1010005</u>	Washer, 3/4 Flat	2	
2	<u>1010347</u>	Spindle Assembly, Right (includes items 3 through 6)	1	
3	1010344	Spindle Sub-Assembly, Right-Hand	1	
4	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
5	<u>7048</u>	Bushing, Flanged Bronze	1	
6	<u>8067</u>	Bushing, Bronze Spindle	1	
7	<u>1010348</u>	Spindle Assembly, Left (includes items 8 through 11)	1	
8	1010342	Spindle Sub-Assembly, Left-Hand	1	
9	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
10	<u>7048</u>	Bushing, Flanged Bronze	1	
11	<u>8067</u>	Bushing, Bronze Spindle	1	
12	<u>1011393</u>	Hub Bearing Package (includes items 13 and 14)	4	
13	7274	Bearing, Front Hub Wheel	1	
14	7308	Race, Front Hub Bearing	1	
15	<u>1011892</u>	Hub Assembly (includes items 16 through 23)	2	
16	<u>1011887</u>	Dust Cover	1	
17	N/A	Hub (includes items 18 through 20)	1	
18	N/A	Front Hub	1	
19	<u>103477901</u>	Lug Stud, 1/2-20 Unf, 4037	4	
20	7308	Race, Front Hub Bearing	2	
21	<u>1013135</u>	Seal, Double Lip	1	
22	7274	Bearing, Front Hub Wheel	2	
23	<u>7910</u>	Pin, 5/32 X 1.00 Cotter	1	
24	<u>7840</u>	Nut, 3/4-16 Hex Slotted	2	

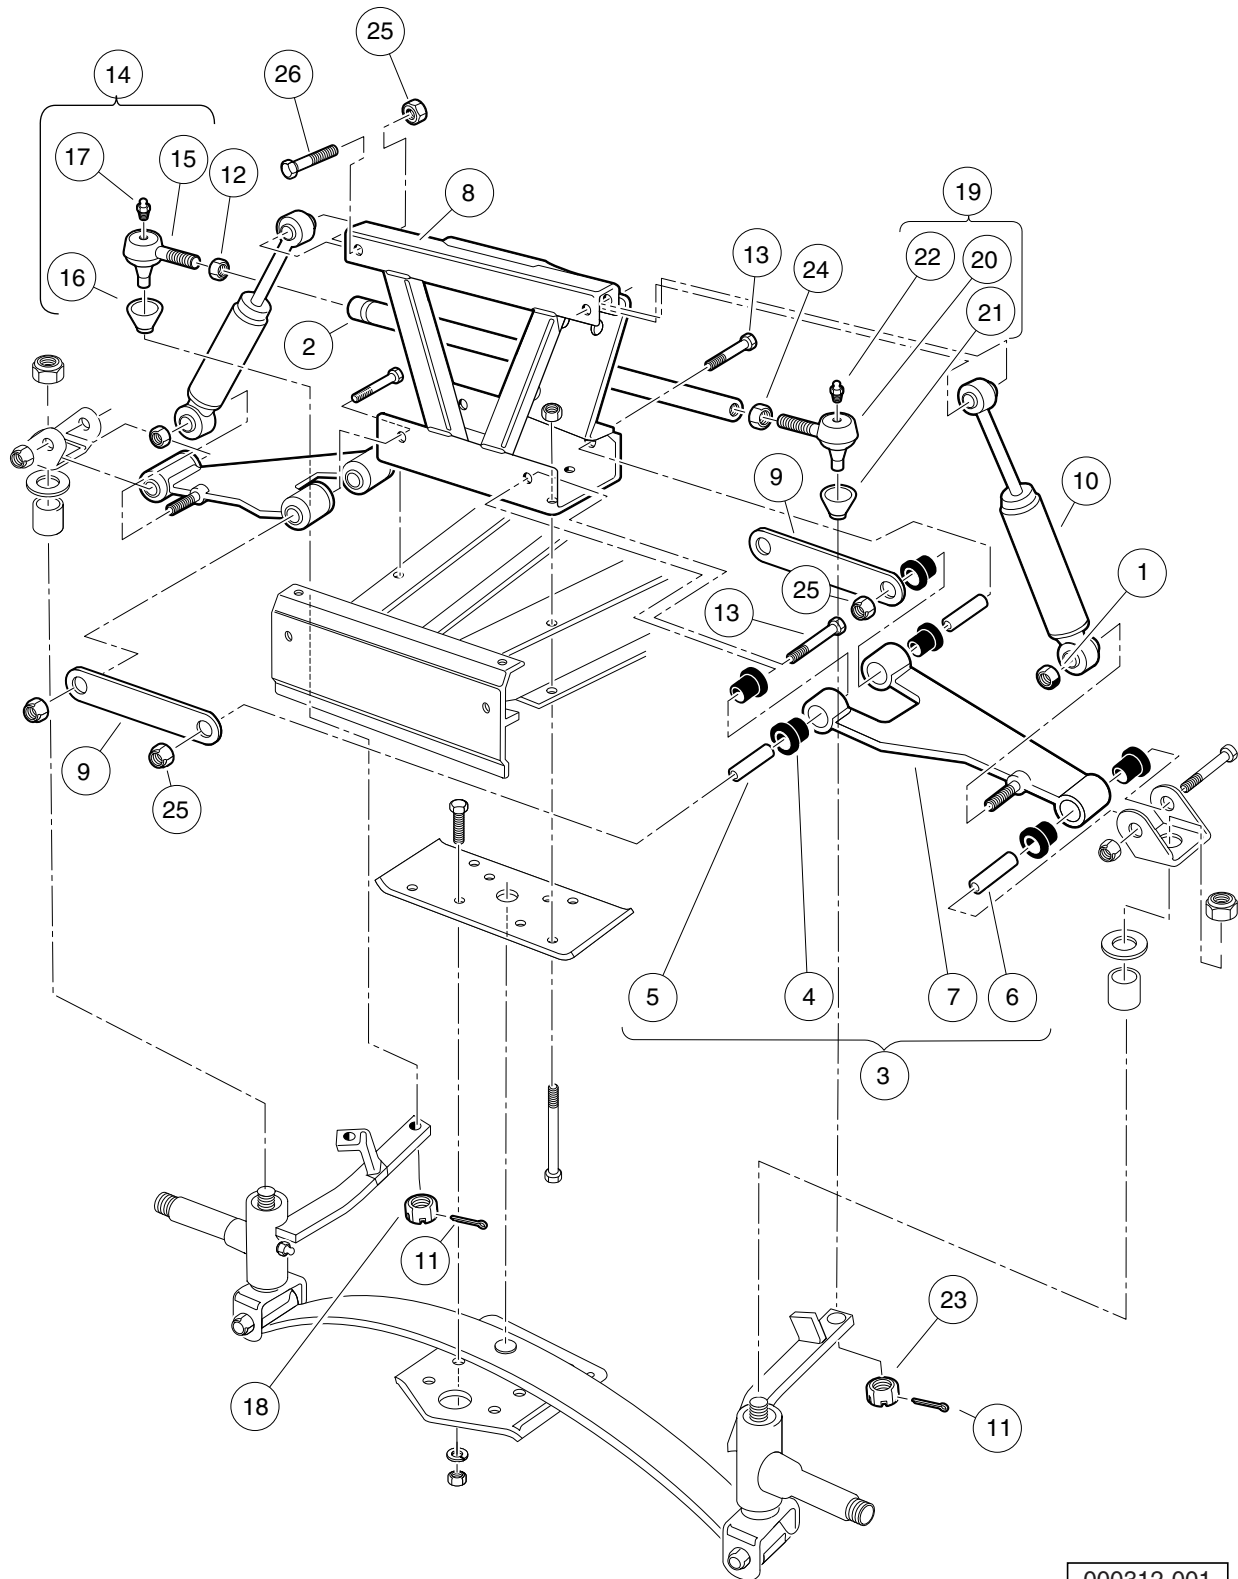

000312-001

FRONT SUSPENSION, UPPER – VEHICLES WITH TWO-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2	
2	<u>1010219</u>	Tie Rod	1	
3	<u>1016353</u>	Sub-Assembly, Delta A-Plate (includes items 4 through 7)	2	
4	<u>1016346</u>	Bushing, Urethane	6	
5	<u>1016349</u>	Sleeve, Delta Inner	2	
6	<u>1016350</u>	Sleeve, Delta Outer	1	
7	<u>1016351</u>	Delta A-Plate	1	
8	<u>1016385</u>	Delta Shock and Gear Support Assembly	1	
9	<u>1017266</u>	A-Plate Strap	2	
10	<u>103351001</u>	Shock Absorber, Front, Common	2	
11	<u>1035</u>	Cotter Pin, 3/32 x 1	2	
12	<u>1308</u>	Nut, 1/2-20 Hex	1	
13	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4	
14	<u>7539</u>	Ball Joint, Right-Hand (includes items 15 through 18)	1	
15	1011893	Socket, RH Vertical	1	
16	<u>1011930</u>	Seal, Vertical Socket Dust	1	
17	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
18	7602	Nut, 3/8-24 UNF Hex	1	
19	<u>7540</u>	Ball Joint, Left (includes items 20 through 23)	1	
20	1011895	Socket, LH Vertical	1	
21	<u>1011930</u>	Seal, Vertical Socket Dust	1	
22	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
23	7602	Nut, 3/8-24 UNF Hex	1	
24	<u>7555</u>	Nut, 1/2-20 Hex, Left-Hand Thread	1	
25	<u>8754</u>	Locknut, 3/8-16 Hex	6	
26	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	2	

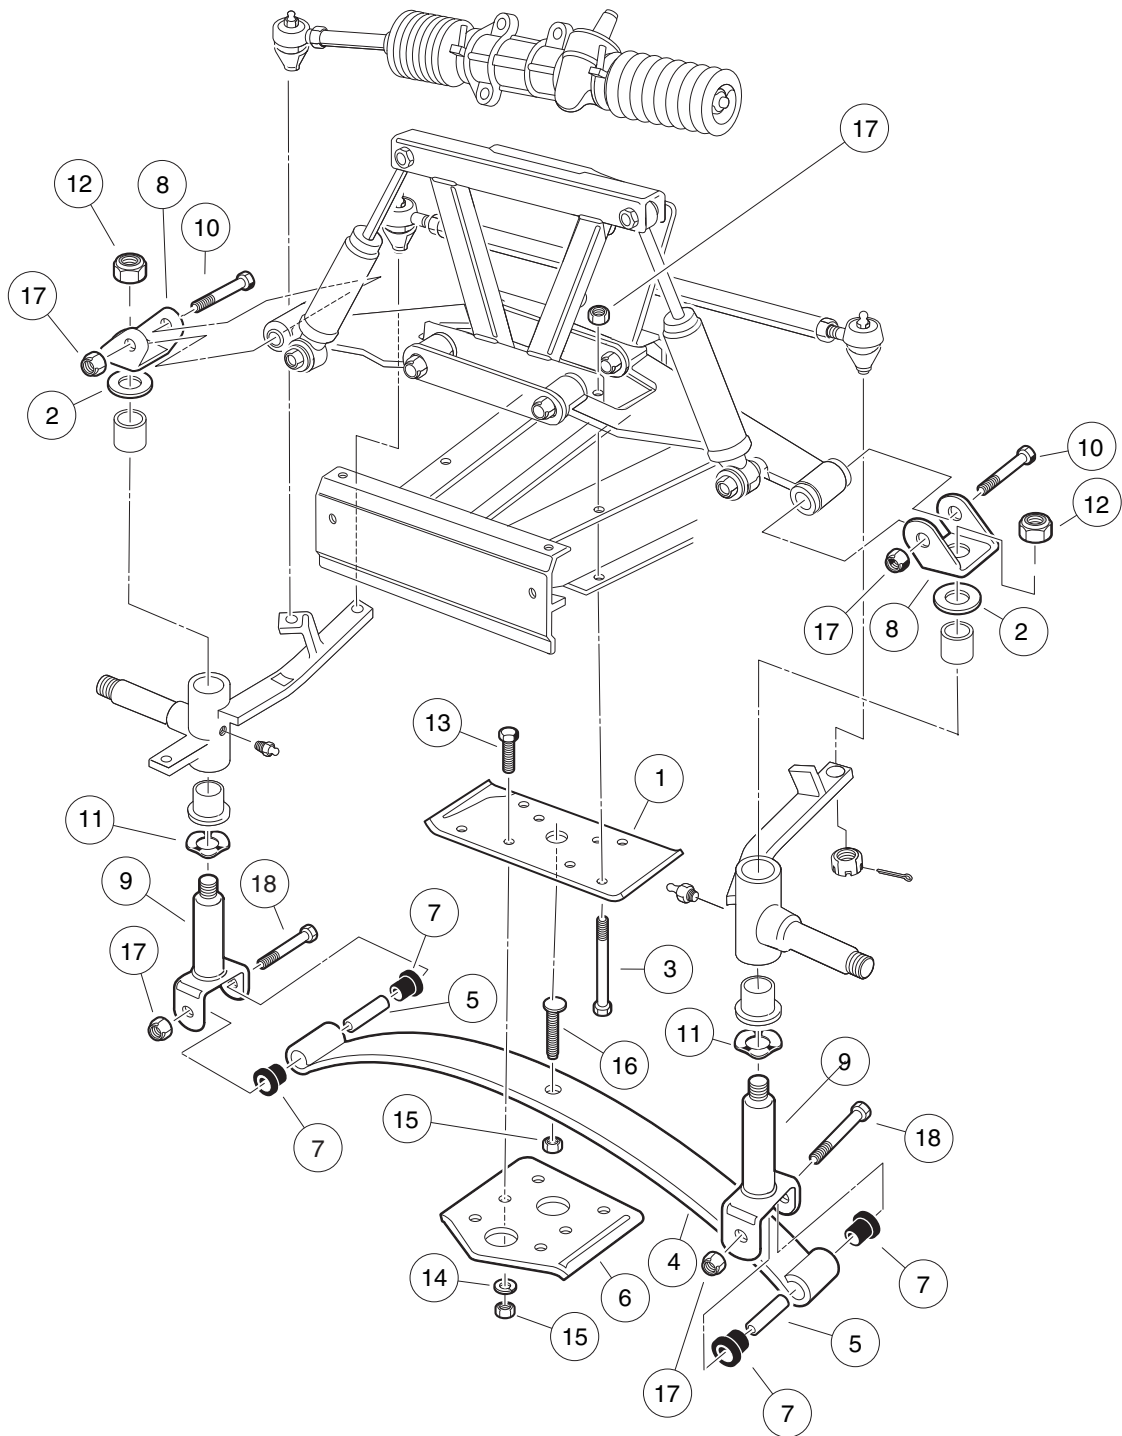6**G****E**

001215-001




FRONT SUSPENSION, LOWER – VEHICLES WITH TWO-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	<u>1010124</u>	Plate, Spring Mount	1	
2	<u>1010150</u>	Bearing, Thrust	2	
3	<u>1010200</u>	Bolt, 3/8-16 X 4.25 Hex Head	4	
4	<u>1012030</u>	Spring, Front Leaf	1	
5	<u>1012303</u>	Bushing, Steel	2	
6	<u>1014276</u>	Plate, Front Spring Retainer	1	
7	<u>1015583</u>	Bushing, Urethane	4	
8	<u>1016384</u>	Clevis, Delta Upper	2	
9	<u>1016386</u>	King Pin Assembly	2	
10	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	2	
11	<u>1016389</u>	Washer, 1.125 Od Wave	2	
12	<u>101903101</u>	Locknut, 1/2-20 Nylon Insert	2	
13	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	4	
14	<u>357</u>	Lockwasher, 3/8 Split	4	
15	<u>706</u>	Nut, Hex 3/8-16	5	
16	<u>8745</u>	Screw, Eccentric Adjustment	1	
17	<u>8754</u>	Locknut, 3/8-16 Hex	8	
18	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2	

6

G

E

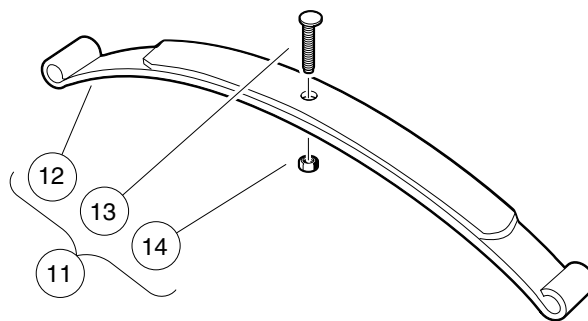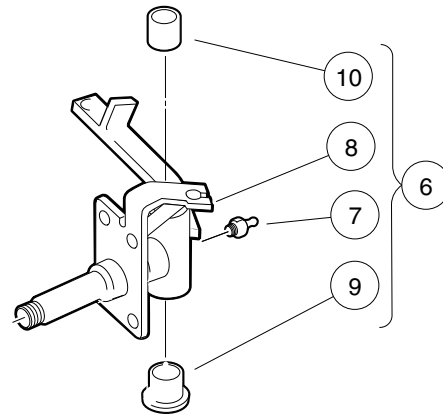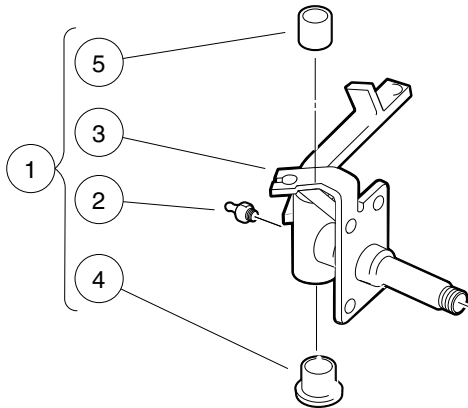

001274-001


HEAVY DUTY FRONT SUSPENSION COMPONENTS

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	101876901	Spindle Assy, Driver Side (includes items 2 through 5)	1	E
2	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
3	N/A	Spindle Assembly, Left	1	
4	<u>7048</u>	Bushing, Flanged Bronze	1	
5	<u>8067</u>	Bushing, Bronze Spindle	1	
6	<u>101877001</u>	Spindle Assy, Passenger Side (includes items 7 through 10)	1	
7	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
8	N/A	Spindle Assembly, Right	1	
9	<u>7048</u>	Bushing, Flanged Bronze	1	
10	<u>8067</u>	Bushing, Bronze Spindle	1	
11	<u>102004001</u>	Spring, Front, 2-Leaf (includes items 12 through 14)	1	
12	N/A	Spring, Front Leaf	1	
13	<u>103507001</u>	Eccentric Bolt Common	1	
14	<u>706</u>	Nut, Hex 3/8-16	1	

6


G

E

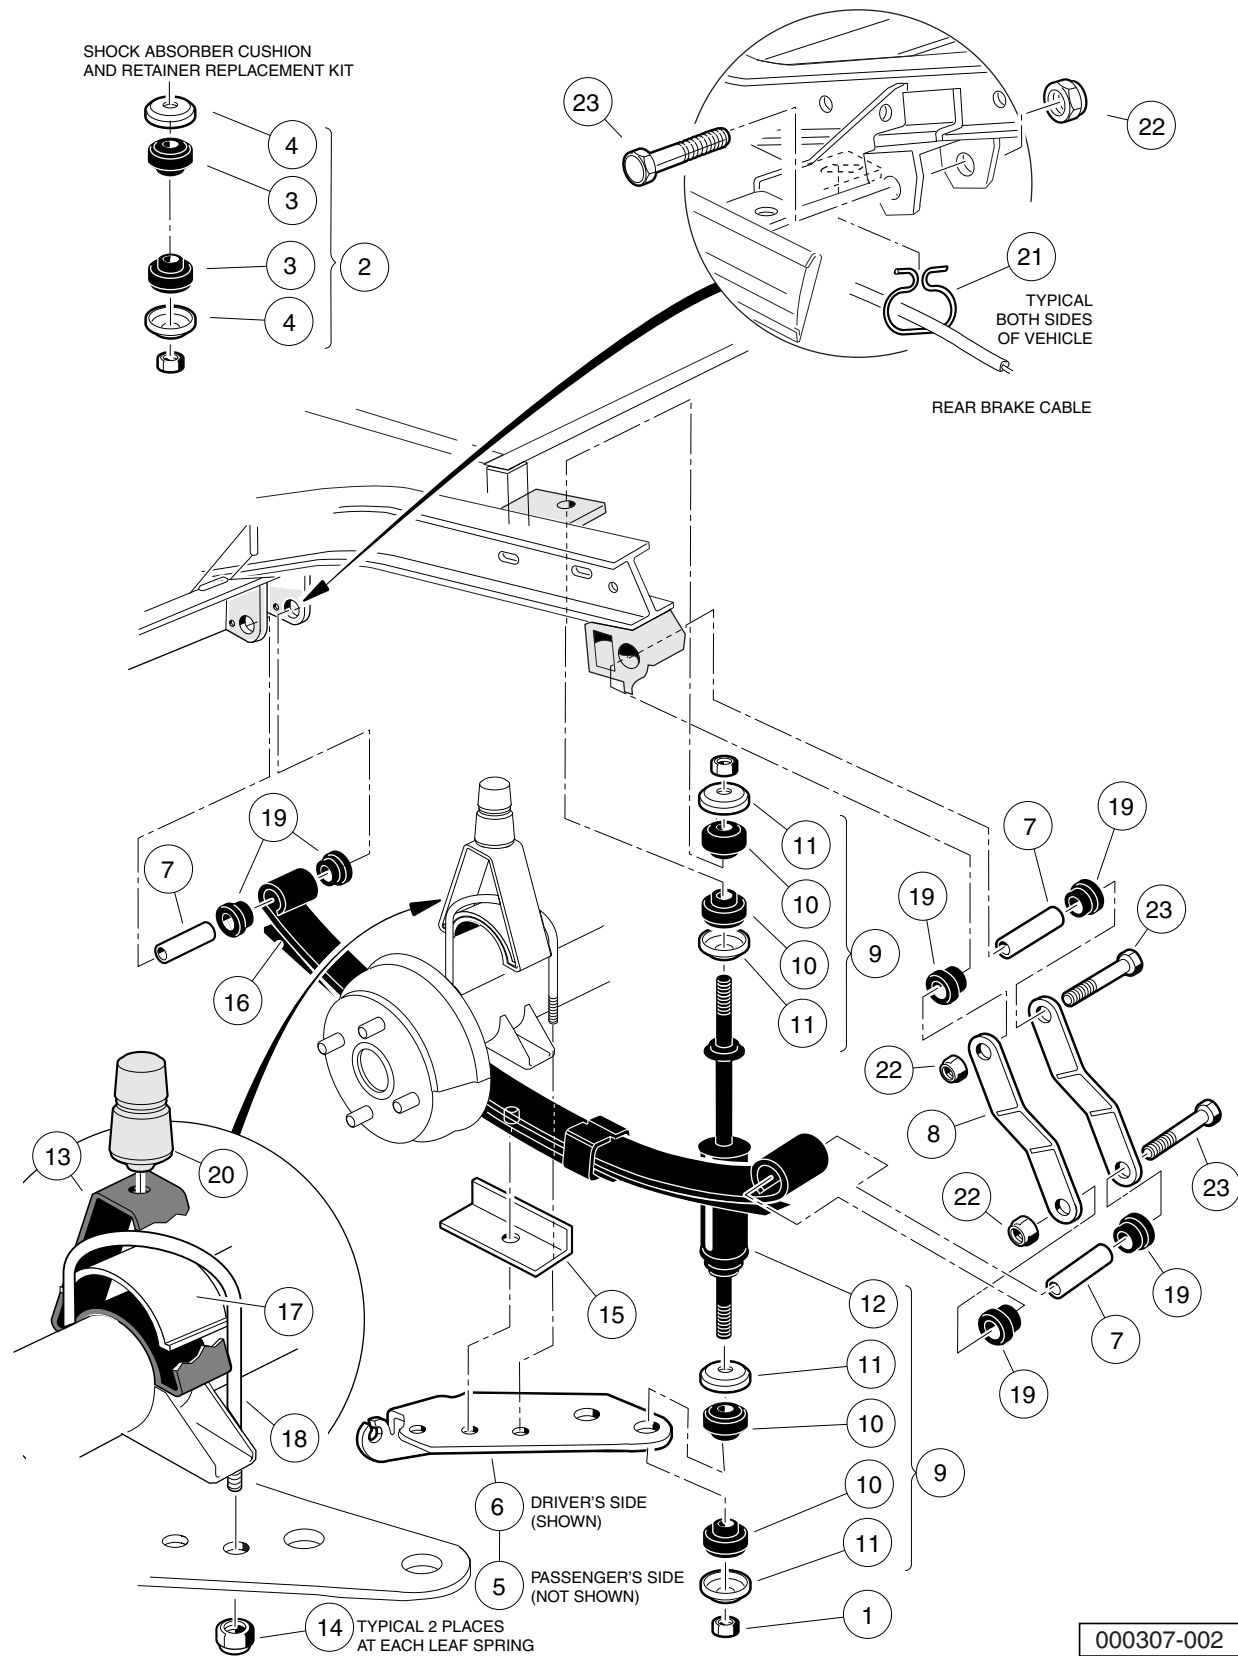

REAR SUSPENSION – GASOLINE TURF/CA 1

ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	<u>1010145</u>	Nut, 3/8-24 Hex	4	
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4	
3	N/A	Cushion, Shock Absorber	2	
4	N/A	Retainer, Shock Absorber Cushion	2	
5	1012181	Bracket, Shock Mounting, Right (Passenger)	1	
6	1012182	Bracket, Shock Mounting, Left (Driver)	1	
7	<u>1012303</u>	Bushing, Steel	6	
8	<u>1012304</u>	Shackle, Rear Spring	4	
9	<u>1013164</u>	Shock Absorber Kit (includes items 10 through 12)	1	
10	N/A	Cushion, Shock Absorber	8	
11	N/A	Retainer, Shock Absorber Cushion	8	
12	<u>102588501</u>	Shock Absorber Rear Prv Spd	2	
13	101454602	Bumper Mount	2	
14	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4	
15	1014573	Spring Retainer	2	
16	<u>1014675</u>	Rear Leaf Spring	2	
17	<u>1014901</u>	Spacer, Overload Bumper	2	
18	<u>1014902</u>	U-Bolt	2	
19	<u>1015583</u>	Bushing, Urethane	12	
20	<u>1017235</u>	Bumper, Jounce	2	
21	101900801	Hanger, Brake Cable	2	
22	<u>8754</u>	Locknut, 3/8-16 Hex	6	
23	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	6	
Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock mounting plate.				



REAR SUSPENSION – ELECTRIC TURF/CA 1

ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	<u>1010145</u>	Nut, 3/8-24 Hex	4	
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4	
3	N/A	Cushion, Shock Absorber	2	
4	N/A	Retainer, Shock Absorber Cushion	2	
5	1012181	Bracket, Shock Mounting, Right (Passenger)	1	
6	1012182	Bracket, Shock Mounting, Left (Driver)	1	
7	<u>1012303</u>	Bushing, Steel	6	
8	<u>1012304</u>	Shackle, Rear Spring	4	
9	<u>1013164</u>	Shock Absorber Kit (includes items 10 through 12)	1	
10	N/A	Cushion, Shock Absorber	8	
11	N/A	Retainer, Shock Absorber Cushion	8	
12	<u>102588501</u>	Shock Absorber Rear Prv Spd	2	
13	<u>1013207</u>	Hanger, Brake Cable	2	
14	<u>101454902</u>	Bumper Mount, Angled	2	
15	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4	
16	1014573	Spring Retainer	2	
17	<u>1014675</u>	Rear Leaf Spring	2	
18	<u>1014901</u>	Spacer, Overload Bumper	2	
19	<u>1014902</u>	U-Bolt	2	
20	<u>1015583</u>	Bushing, Urethane	12	
21	<u>1017235</u>	Bumper, Jounce	2	
22	<u>8754</u>	Locknut, 3/8-16 Hex	6	
23	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	6	
Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock mounting plate.				

6

G


E

ELECTRICAL SYSTEM – GASOLINE VEHICLE

7

G


7
G

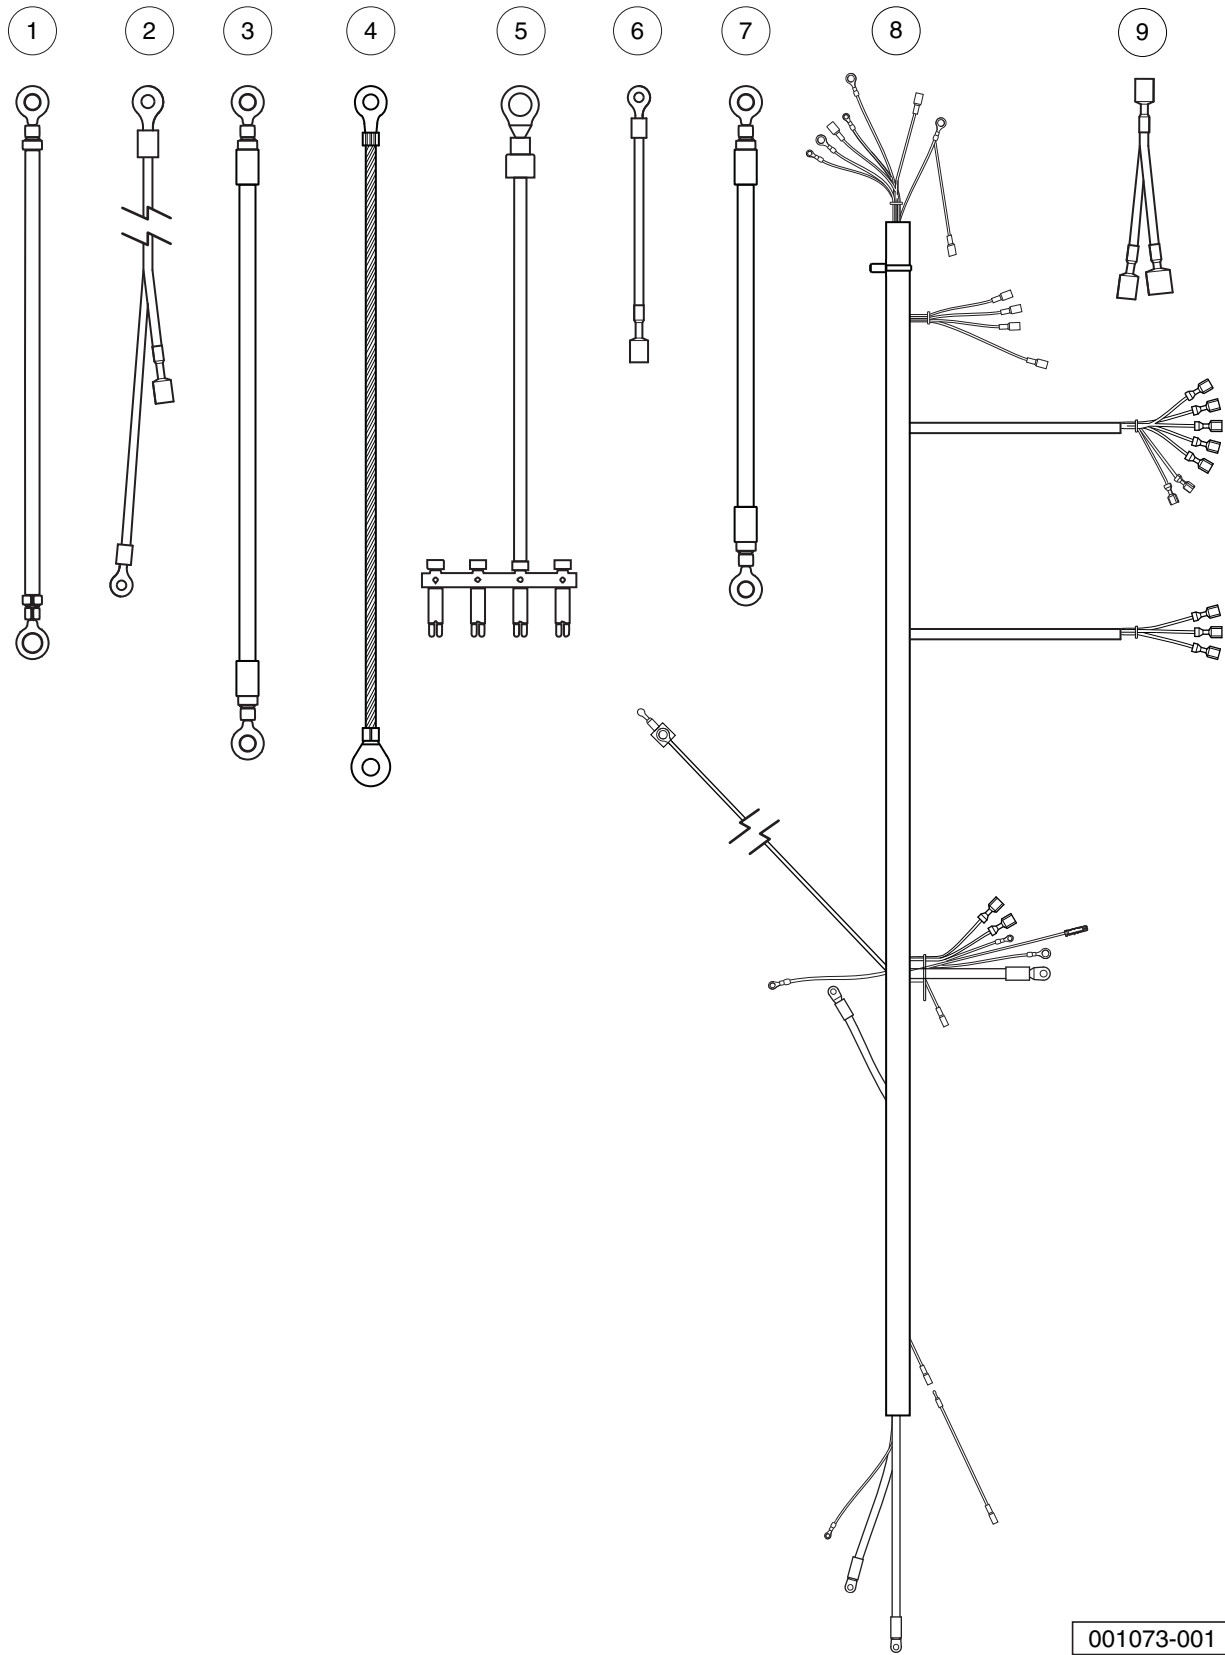

001073-001

WIRING – TURF/CARRYALL 1 GAS

ITEM	PART NO.	DESCRIPTION	QTY	7
		1 2 3 4		G
1	<u>1012382</u>	Wire Assy, #6 Black	1	
2	<u>1012396</u>	Wire Assy #18 Black	1	
3	<u>1014119</u>	Wire Assembly #6 Red	1	
4	<u>1015332</u>	Wire, Ground, #10, Uninsulated	1	
5	<u>1015737</u>	Wire Assy, #10 Red	1	
6	<u>1016401</u>	Wire Assy, #16 Orange	1	
7	<u>101837301</u>	Wire Assy, #6 Green	1	
8	<u>103197001</u>	Asm, Wire Harness, CA 1, Gas	1	
9	<u>103348501</u>	Asm, Wire Meter, F-h Jumper	1	

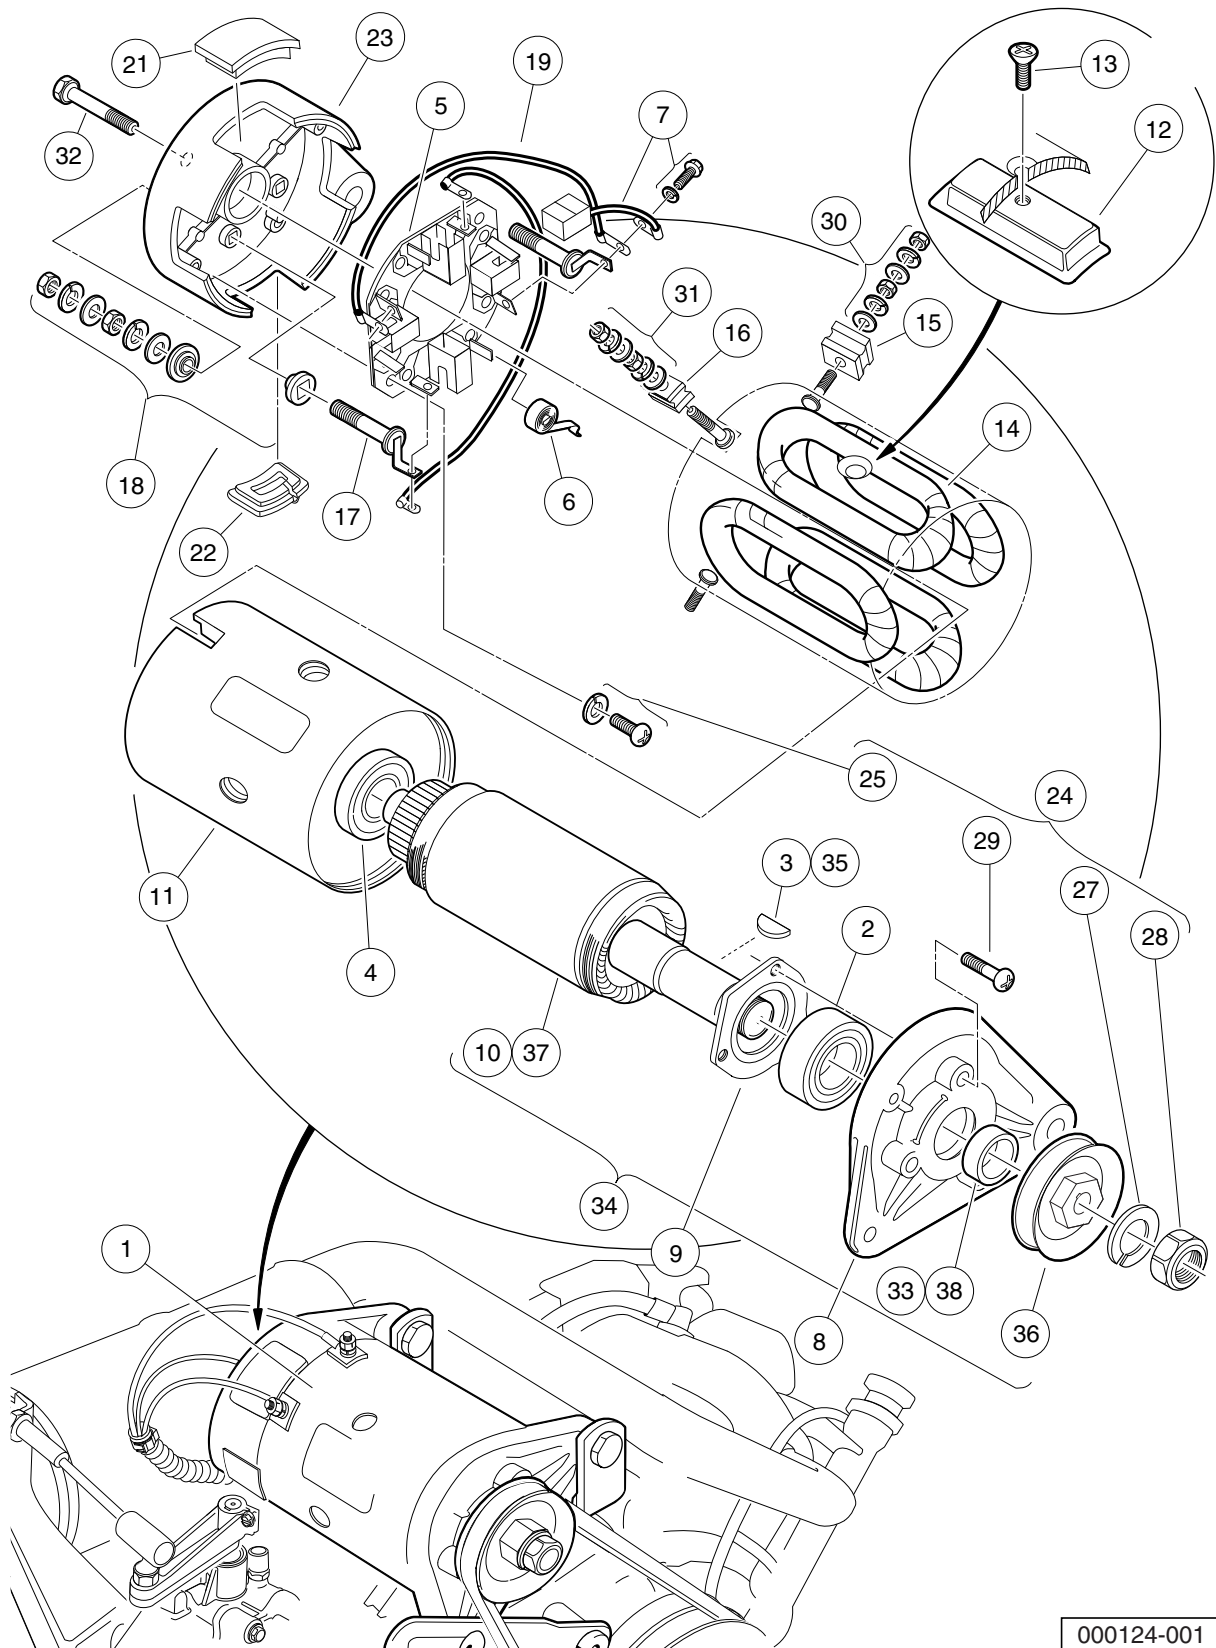


000124-001

STARTER/GENERATOR ASSEMBLY MODEL G425419 – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101833701</u>	Starter/Generator (cw) (includes items 2 through 33)	1
2	<u>1013001</u>	Bearing, Output Shaft Ball	1
3	<u>1013003</u>	Key, Starter/Generator	1
4	<u>1013005</u>	Bearing, Ball	1
5	<u>101301102</u>	Brush Holder Assembly (cw) (includes item 6)	1
6	<u>101878101</u>	Brush Spring Set	4
7	<u>101869302</u>	Brush and Screw Set (cw)	1
8	<u>101874901</u>	Front Bracket	1
9	<u>101875001</u>	Retainer	1
10	<u>101875101</u>	Armature	1
11	<u>101875201</u>	Field Coil Housing	1
12	<u>101875301</u>	Pole Set	1
13	<u>101875401</u>	Screw Set	1
14	<u>101875501</u>	Field Stator Coil Assembly	1
15	<u>101875601</u>	F Insulator Set	2
16	<u>101875701</u>	DF Insulator	1
17	<u>101875802</u>	A Connector (cw)	1
18	<u>101876001</u>	Screw and Mold Assembly	2
19	<u>101876202</u>	Brush Connector Assembly (cw)	2
20	<u>101876301</u>	Cover Set (includes items 21 and 22)	1
21	N/A	Brush Inspection Port Cover	3
22	<u>1017653</u>	Brush Port Cover w/Drain	1
23	<u>101876402</u>	End Bell, Commutator, Rear Bracket (cw)	1
24	<u>101876501</u>	Nut and Screw Set (includes items 25 through 29)	1
25	<u>101896501</u>	Brush Holder Asm Screw	2
26	N/A	Washer, M5 Flat	1
27	N/A	Washer, M14 Lock	1
28	N/A	Nut, Hex, M14 x 2	1
29	N/A	Screw, M5 x 0.8 x 18mm	3
30	<u>101877601</u>	Nut and Washer Set	2
31	<u>101877701</u>	Nut and Washer Set	1
32	<u>101879001</u>	Through Bolt Set	2
33	<u>101939901</u>	Spacer	1
34	<u>101875102</u>	Armature Asm Conversion Kit (includes items 35 through 38)	1
35	<u>1013003</u>	Key, Starter/Generator	1
36	<u>1014289</u>	Pulley, Starter/Generator	1
37	<u>101875101</u>	Armature	1
38	<u>101939901</u>	Spacer	1
		Note: Item 36 will ONLY fit Model G425419 Starter/Generator.	

7

G

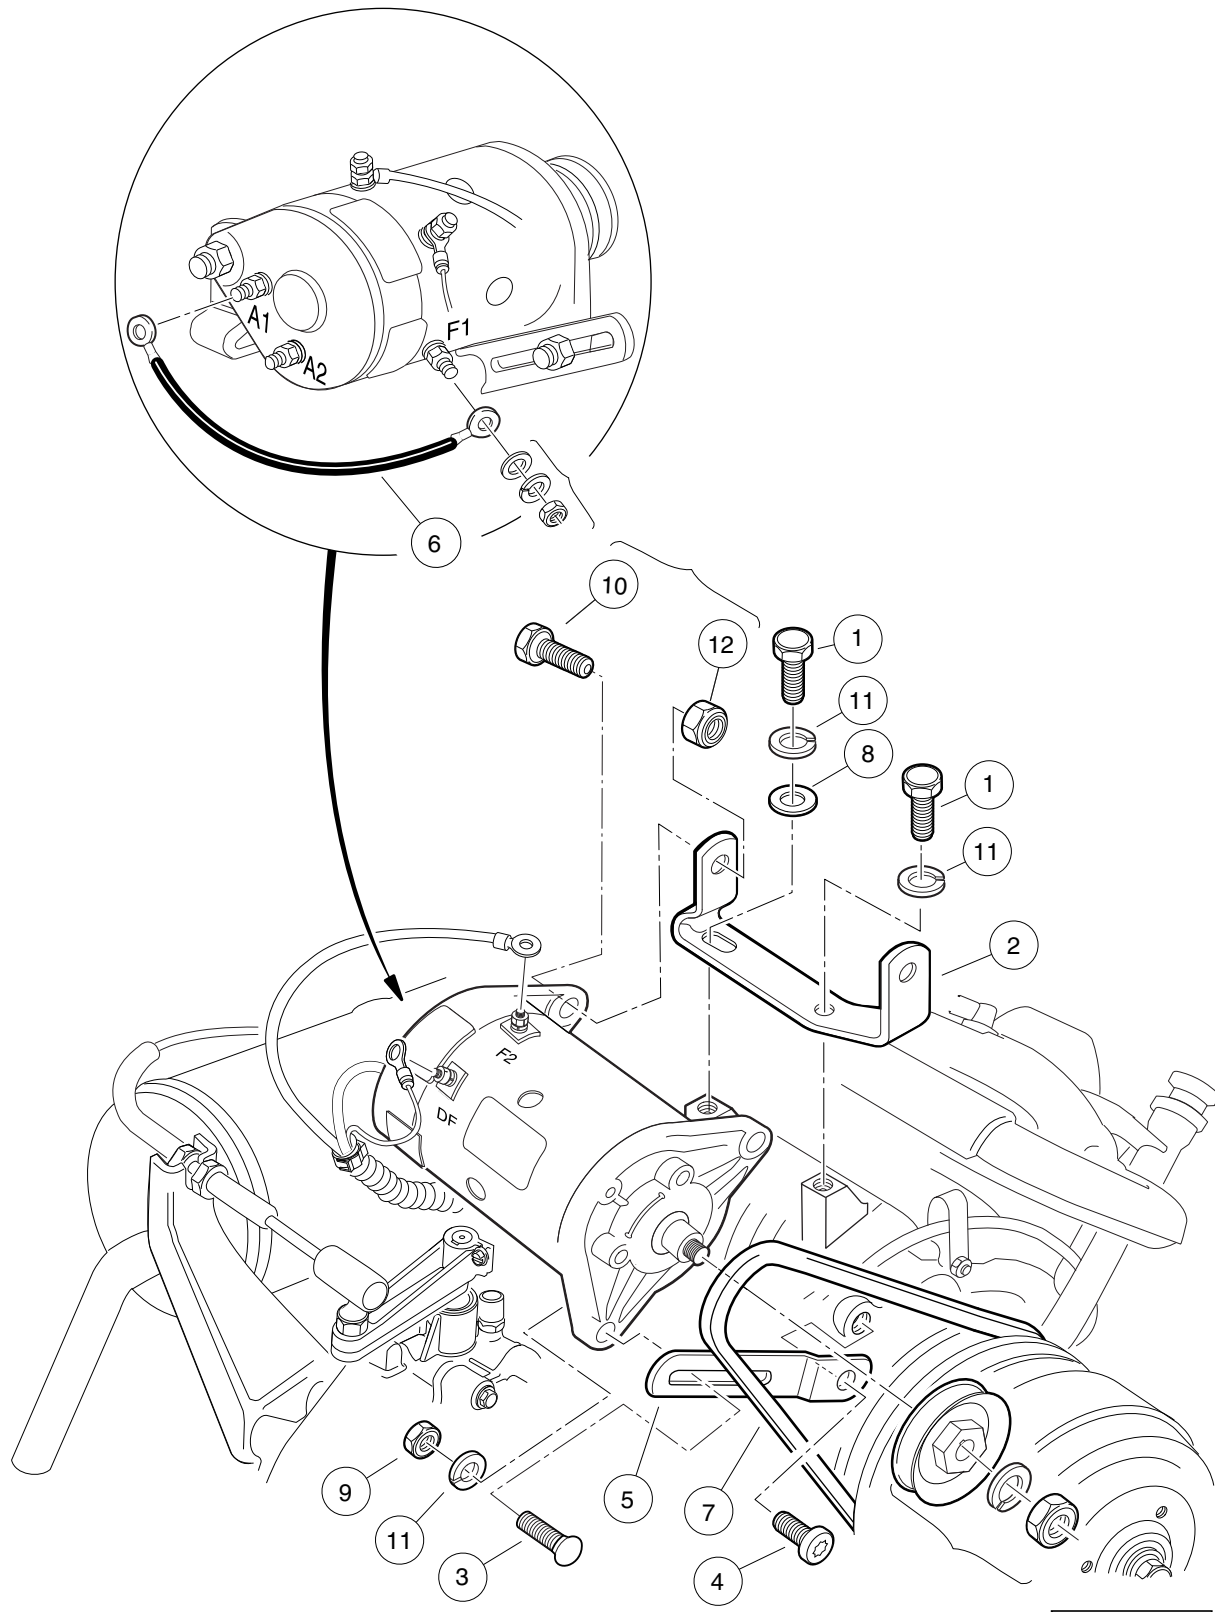


000239-001

STARTER/GENERATOR MOUNTING – FE350

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	2
2	<u>101524002</u>	Bracket, Starter/Generator Mounting	1
3	<u>1015932</u>	Bolt, Carriage, 5/16-18	1
4	<u>1016074</u>	Screw, M8-1.25 X 18mm Torx	1
5	<u>1016883</u>	Bracket, Starter/Generator Adjustment	1
6	<u>101837301</u>	Wire Assy, #6 Green	1
7	<u>101916701</u>	V-Belt	1
8	<u>1241</u>	Washer, 5/16 Type A Flat	1
9	<u>1242</u>	Nut, 5/16-18 Hex	1
10	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	2
11	<u>7174</u>	Lockwasher, 5/16 Split	3
12	<u>8754</u>	Locknut, 3/8-16 Hex	2

7
G

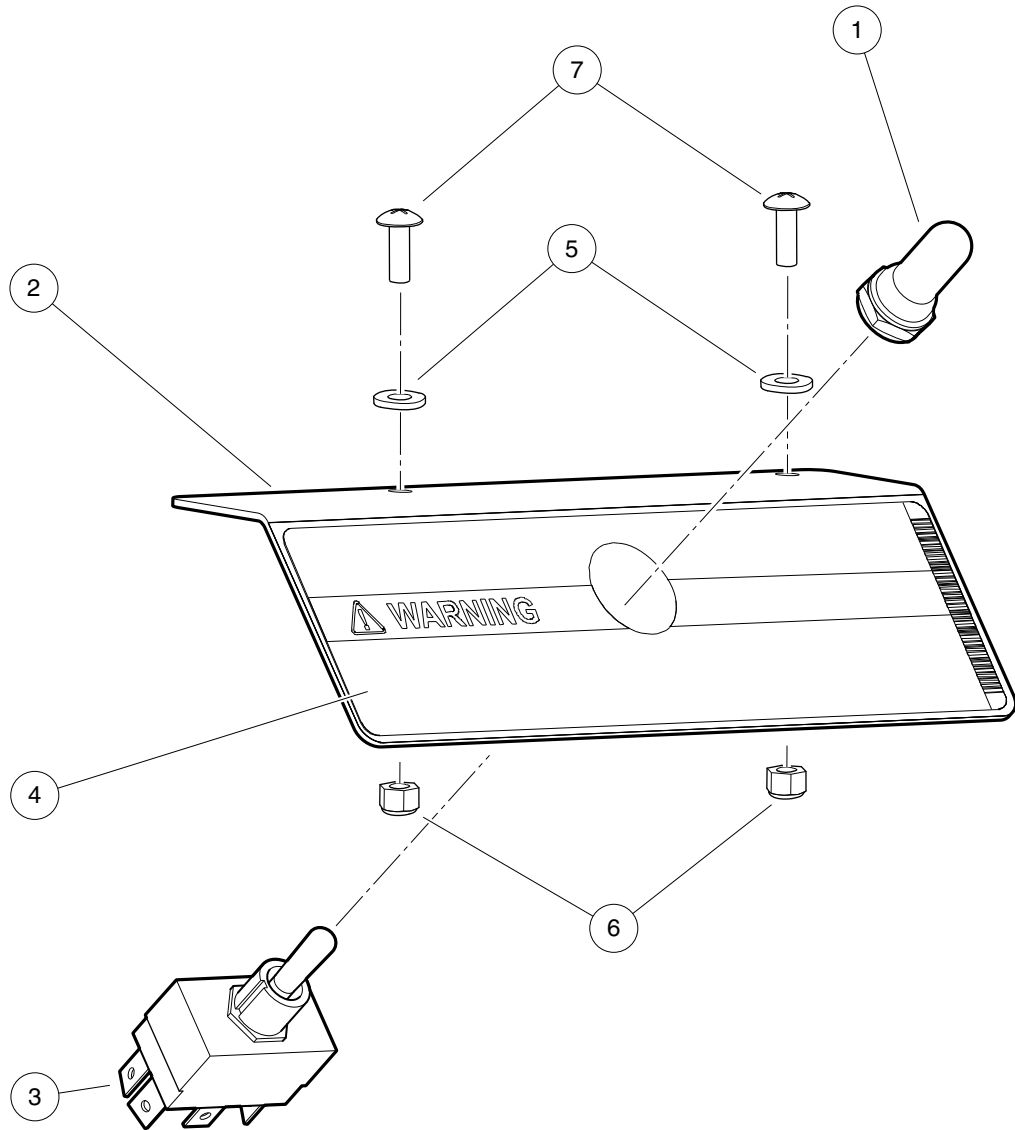


000755-003

OPERATION AND MAINTENANCE SWITCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101908401</u>	Boot, Switch	1
2	<u>101922501</u>	Bracket, Tow/Run Switch Mounting	1
3	<u>103198401</u>	Switch, Toggle, SPDT	1
4	<u>103205501</u>	Decal, Run/Service Switch	1
5	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
6	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2
7	<u>8248</u>	Screw, 1/4-20 X 0.75, Truss-Head Machine	2

7

G

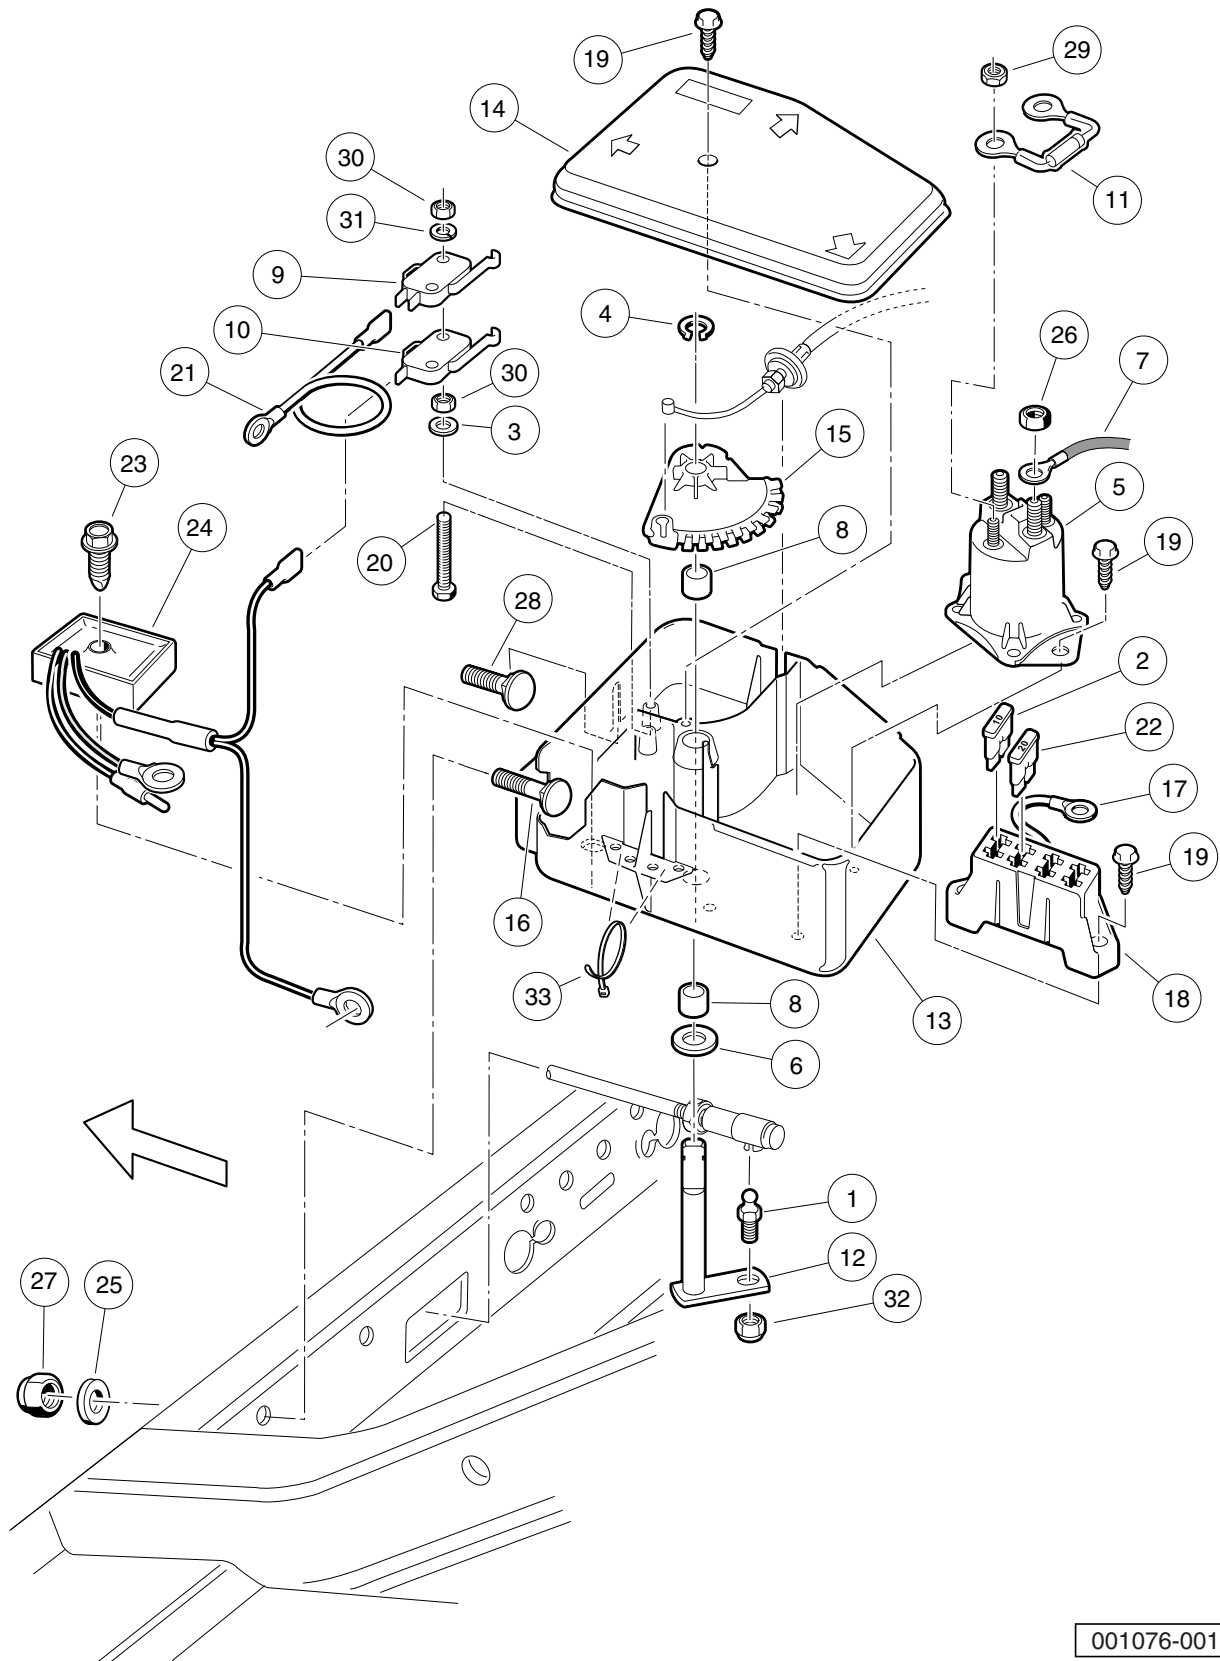


001076-001

ELECTRICAL COMPONENT BOX – TURF/CARRYALL 1, 2, AND 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010954</u>	Stud, Ball, 1/4-28 X 0.560	1
2	<u>1012295</u>	Fuse, 10-Amp	1
3	<u>1012431</u>	Washer, #4 Flat	2
4	<u>1013589</u>	Ring, Retaining, 0.338" Internal	1
5	<u>1013609</u>	Solenoid, 12-Volt	1
6	<u>1014065</u>	Washer, Flat, 0.38" ID, Delrin	1
7	<u>1014119</u>	Wire Assembly #6 Red	1
8	<u>1014145</u>	Bushing, Secondary Weight, Split	2
9	<u>1014807</u>	Switch, Limit	1
10	<u>1014808</u>	Switch, Limit	1
11	<u>1014948</u>	Diode	1
12	<u>1015345</u>	Bell Crank and Shaft Assembly	1
13	<u>1015371</u>	Box, Electrical Component	1
14	<u>1015372</u>	Cover, Electric Box	1
15	<u>1015373</u>	Cam, Electric Box	1
16	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	1
17	<u>1015737</u>	Wire Assy, #10 Red	1
18	<u>1015741</u>	Fuse Block	1
19	<u>1015752</u>	Screw, #12-16 X 0.625, Hi-Lo	5
20	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2
21	<u>1016401</u>	Wire Assy, #16 Orange	1
22	<u>1016423</u>	Fuse, 20-Amp	1
23	<u>101856102</u>	Screw, 1/4-15 X 1.50, Hi-lo, Hex	1
24	<u>102711201</u>	Voltage Regulator	1
25	<u>1241</u>	Washer, 5/16 Type A Flat	2
26	<u>1242</u>	Nut, 5/16-18 Hex	2
27	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
28	<u>7818</u>	Bolt, Carriage, 5/16-18 X 1.5	1
29	<u>7893</u>	Nut, #10-32 Hex	2
30	<u>8057</u>	Nut, #4-40 Hex Machine	4
31	<u>8058</u>	Lockwasher, #4 Split	2
32	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1
33	<u>8990</u>	Tie Wrap, 8" Nylon	2

7

G

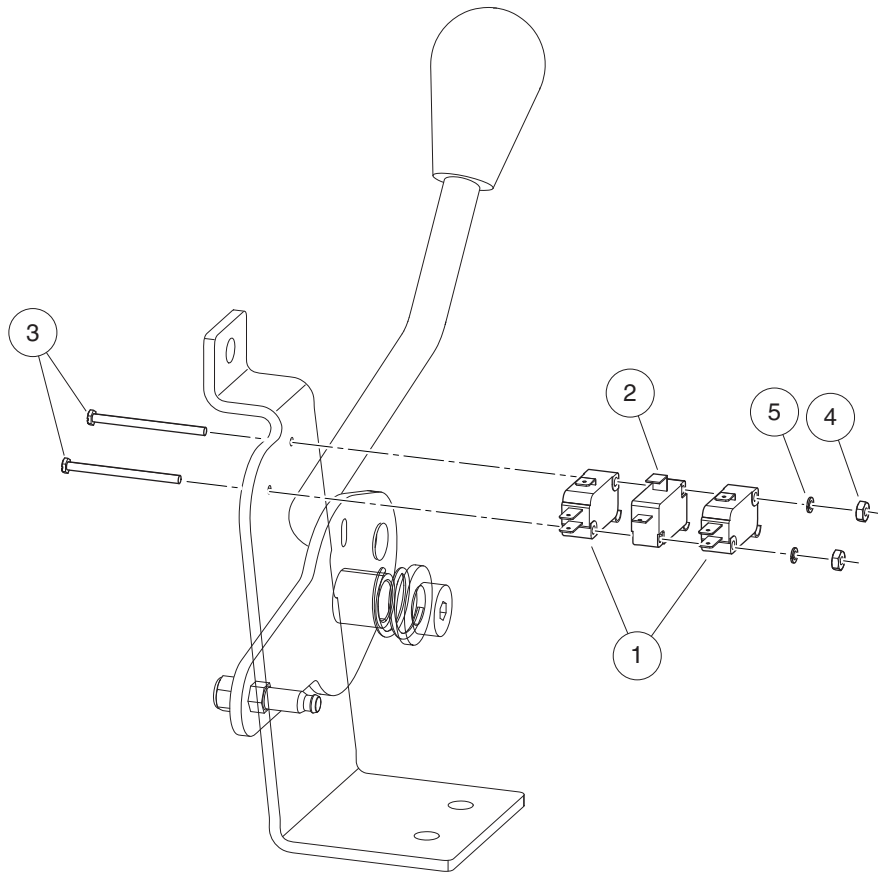


001080-001

FORWARD/REVERSE SHIFTER SWITCHES – DASH MOUNTED SHIFTER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014807</u>	Switch, Limit	2
2	<u>1014808</u>	Switch, Limit	1
3	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2
4	<u>8057</u>	Nut, #4-40 Hex Machine	2
5	<u>8058</u>	Lockwasher, #4 Split	2

7
G

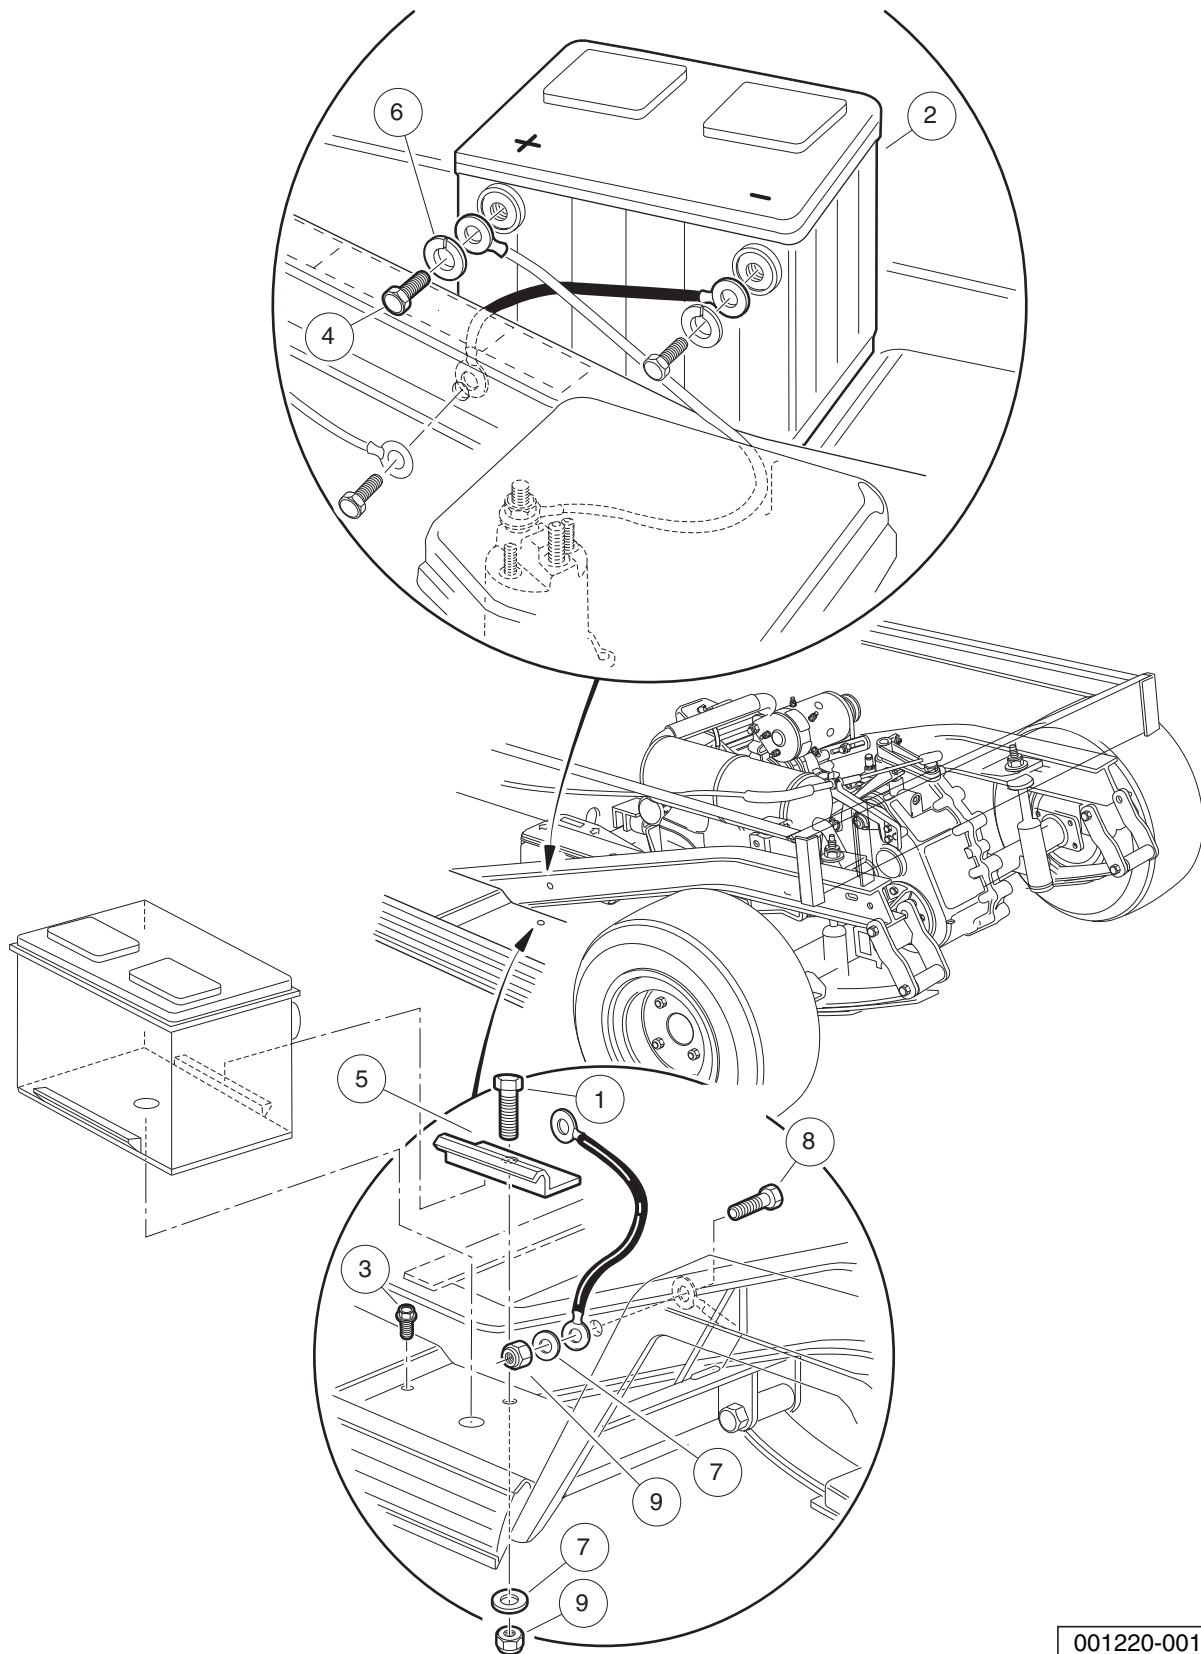

001220-001

BATTERY – GASOLINE UTILITY VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	7
		1 2 3 4		G
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1	
2	<u>1012328</u>	Battery, 12-Volt	1	
3	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	1	
4	<u>1014375</u>	Screw, 3/8-16 X 0.50, Stainless Steel, Hex-Head	2	
5	<u>101898001</u>	Clamp, Battery	1	
6	<u>102355301</u>	Lockwasher, 3/8 Split Ss	2	
7	<u>1241</u>	Washer, 5/16 Type A Flat	2	
8	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1	
9	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	


7

G

FE350 ENGINE W/O ACR (TURF/CA 1)

8


G

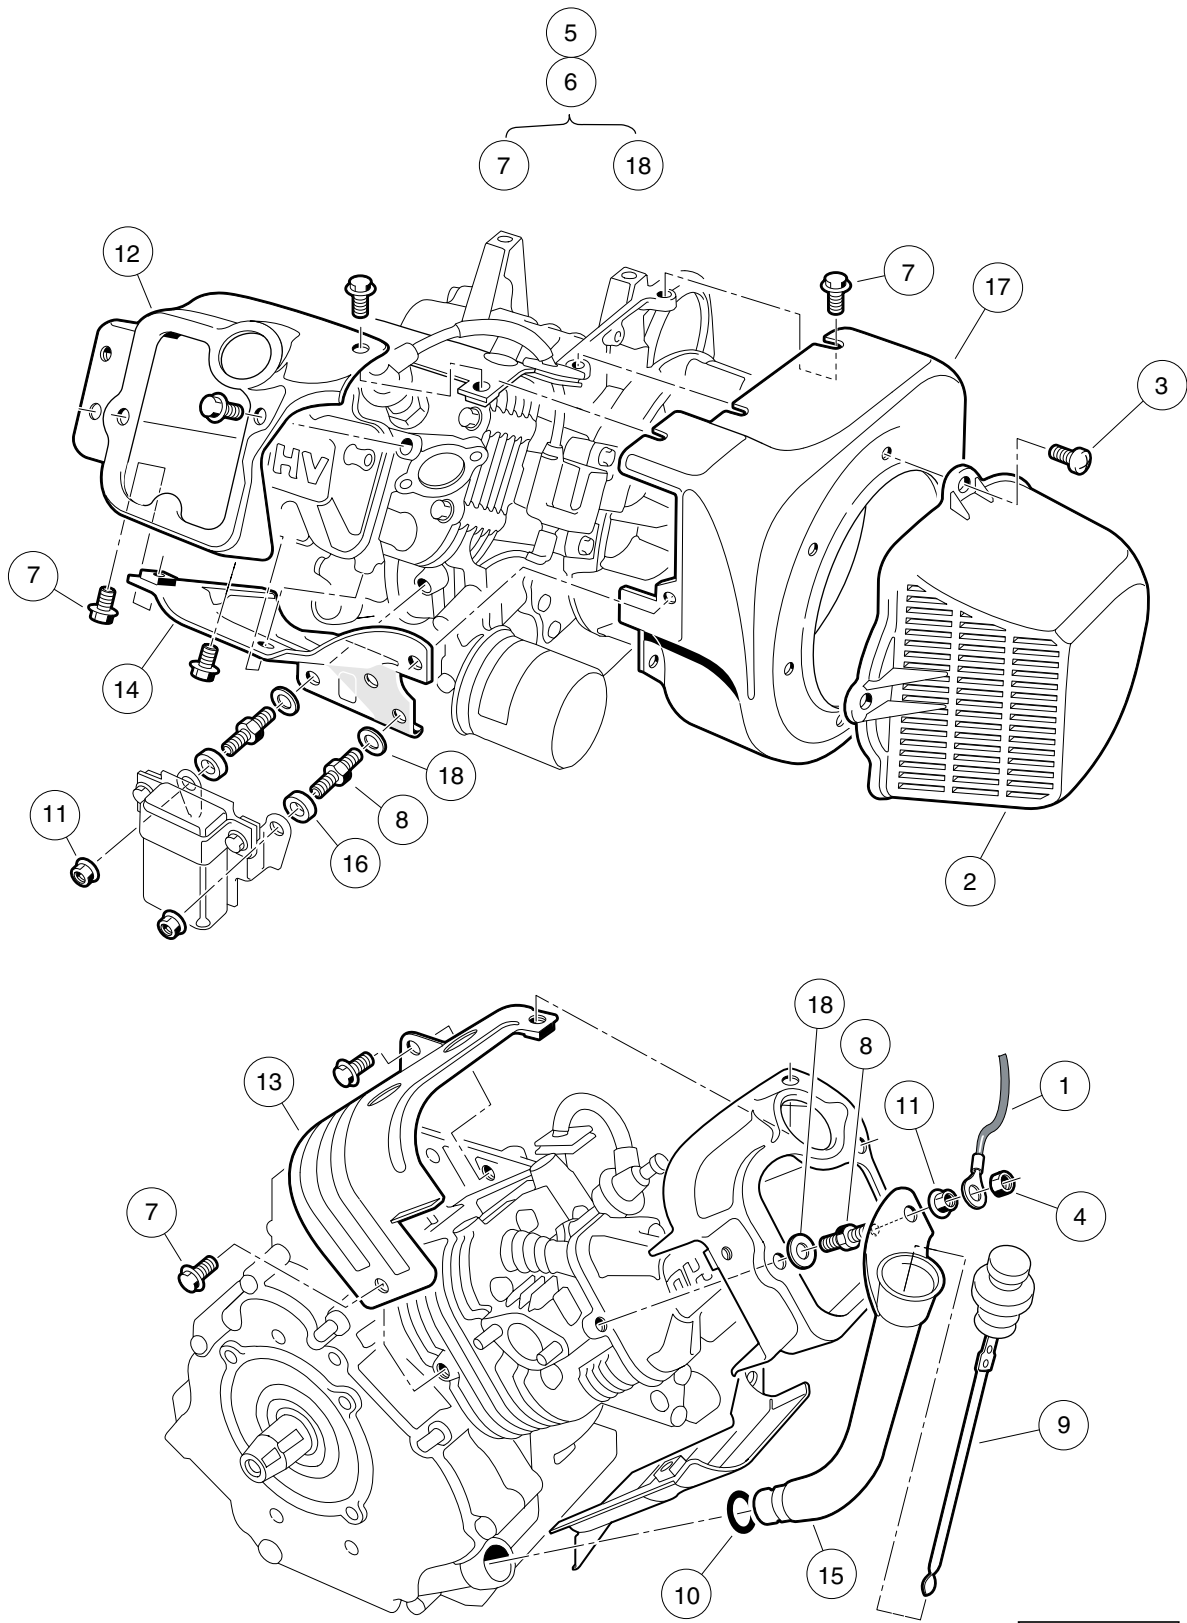

000201-003

FE350 ENGINE W/O ACR – SHROUDS AND BRACKETS


ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>1015332</u>	Wire, Ground, #10, Uninsulated	1	
2	<u>1015649</u>	Shroud, Fan	1	
3	<u>1015969</u>	Screw, M6-1.00 X 10mm, Pan Hd	4	
4	<u>101887601</u>	Locknut, M6-1.00 Nylon Insert	1	
5	<u>101953802</u>	Engine, FE350, without ACR	1	
6	<u>101953804</u>	Engine, FE350, California-Only, without ACR (includes items 7 through 18)	1	
7	<u>1016456</u>	Bolt, Flange Head, M6 x 1 x 12 mm	14	
8	<u>1016507</u>	Bolt, Two-Ended	3	
9	<u>1016531</u>	Dipstick	1	
10	<u>1016539</u>	O-Ring	1	
11	<u>1016547</u>	Nut, Flanged, M6 X 1.00	3	
12	<u>1017474</u>	Shroud, Engine	1	
13	<u>1017475</u>	Shroud, Engine	1	
14	<u>1017476</u>	Shroud, Engine	1	
15	<u>1017486</u>	Tube, Oil Filler	1	
16	<u>1017500</u>	Spacer 6.50 X 12 X 5.5	2	
17	<u>101916101</u>	Housing, FE350 Fan	1	
18	N/A	Washer, 6mm Flat	3	

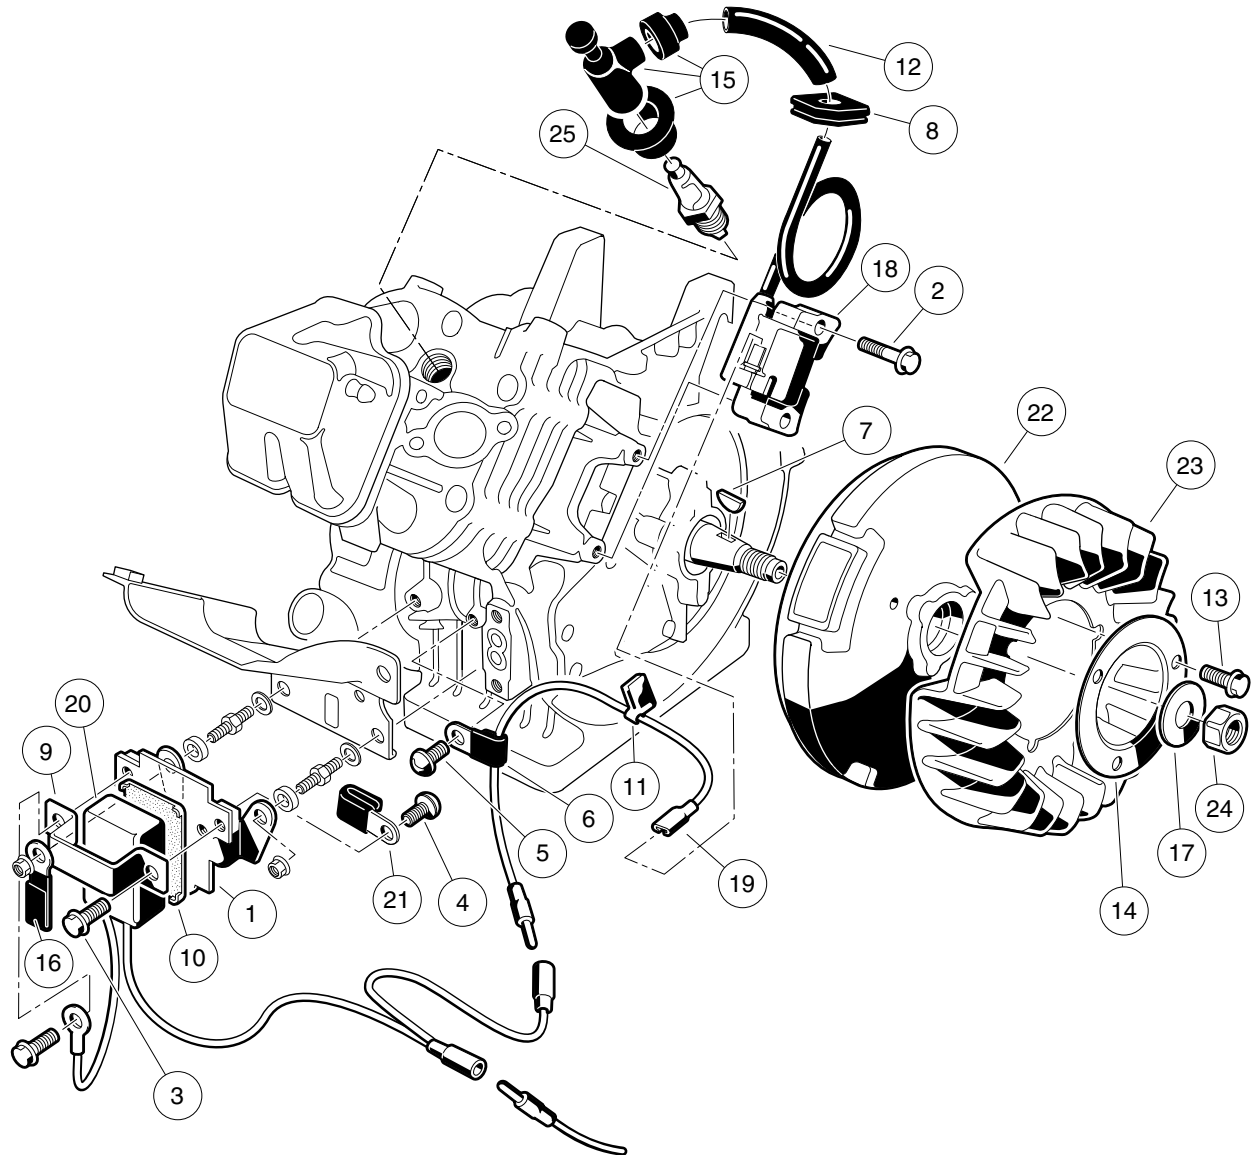

000202-003

FE350 ENGINE – IGNITION COMPONENTS AND FLYWHEEL


ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	1016445	Bracket, RPM Limiter	1	
2	<u>1016455</u>	Bolt, Flange Head	2	
3	1016456	Bolt, Flange Head, M6 x 1 x 12 mm	2	
4	<u>1016497</u>	Screw, Pan WP Cross	1	
5	<u>1016544</u>	Screw	1	
6	<u>1016561</u>	Clamp	1	
7	<u>1016562</u>	Key	1	
8	<u>1016578</u>	Grommet, Ignition	1	
9	<u>1016579</u>	Band, RPM Limiter Mount	1	
10	1016586	Damper, RPM Limiter	1	
11	<u>1016587</u>	Clamp	1	
12	<u>1016588</u>	Tube, 7mm X 10mm X 70mm	1	
13	<u>1017448</u>	Bolt, Flanged	3	
14	<u>1017455</u>	Plate, Flywheel Fan	1	
15	<u>1017463</u>	Cap Asm, Plug	1	
16	<u>1017468</u>	Clamp	1	
17	<u>1017490</u>	Washer, Flat	1	
18	<u>101909201</u>	Coil, Ignition	1	
19	<u>101909301</u>	Lead Wire Assy	1	
20	101909401	Limiter, RPM	1	
21	101909501	Clamp, Steel	1	
22	<u>101916201</u>	Flywheel	1	
23	<u>101916301</u>	Fan (cw)	1	
24	<u>102838401</u>	Nut, Hex, 18 mm Fine	1	
25	<u>AM1232301</u>	Spark Plug, BPR2ES	1	

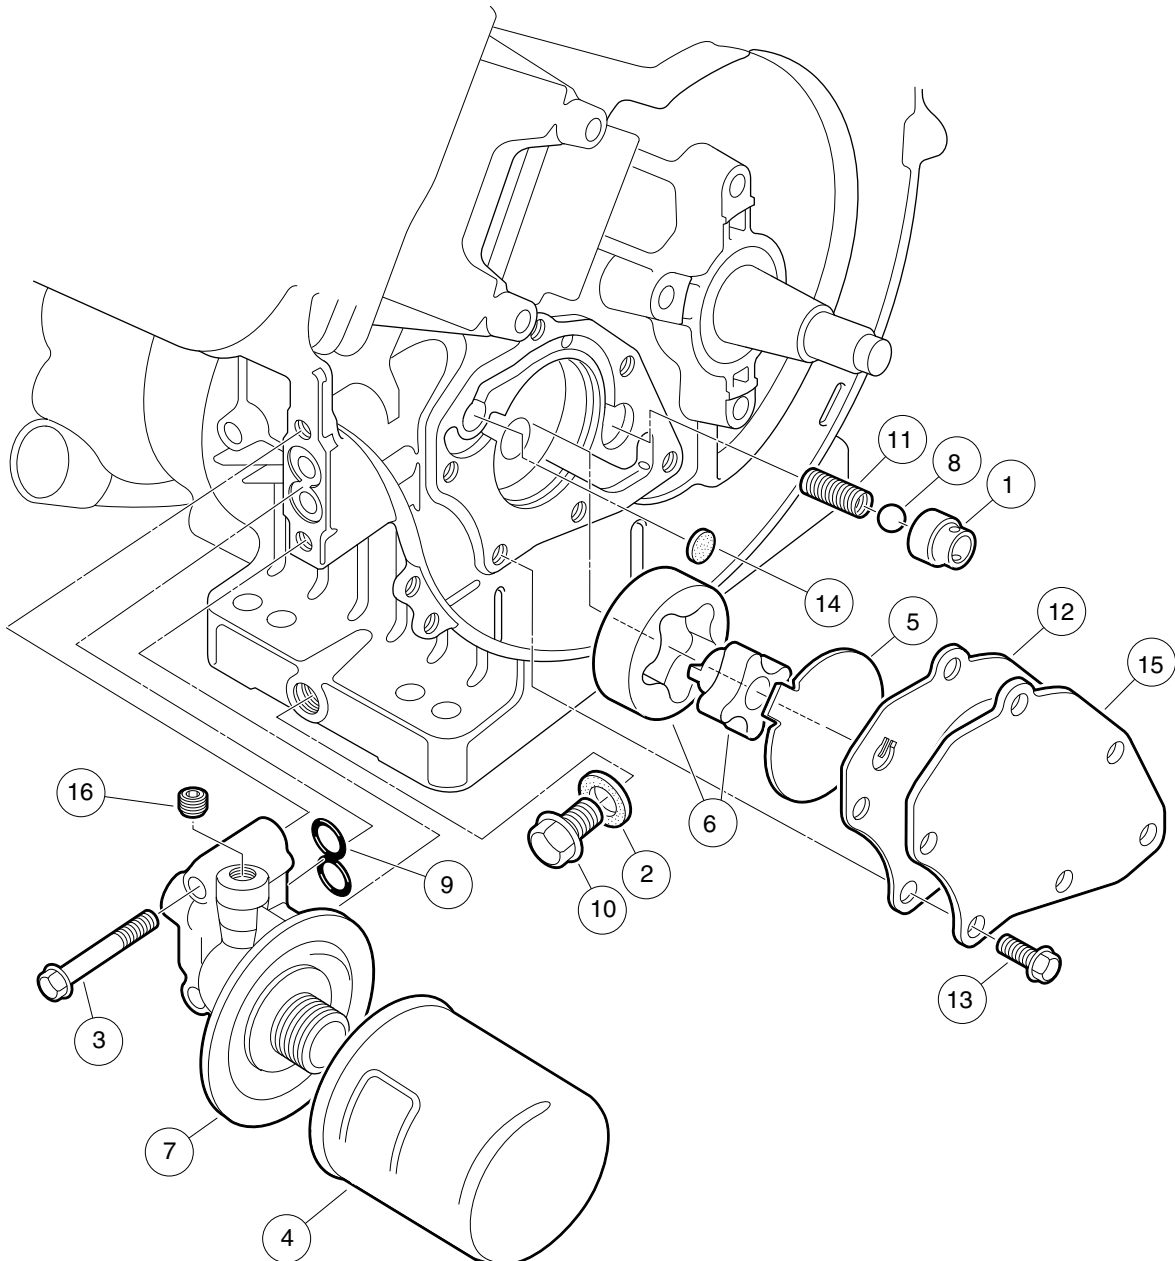

000203-001

FE350 ENGINE – OIL CIRCULATION


ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	1016429	Seat, Valve Oil Pressure Relief	1	
2	<u>1016432</u>	Gasket, Drain Plug	1	
3	<u>1016457</u>	Bolt, Flange Head	2	
4	<u>1016467</u>	Filter, Oil	1	
5	<u>1016473</u>	Plate, Oil Pump	1	
6	<u>101648203</u>	Oil Pump And Rotor	1	
7	<u>1016502</u>	Bracket, Oil Filter Mount	1	
8	<u>1016537</u>	Ball, Steel, Press, Relief	1	
9	<u>1016570</u>	O-Ring	1	
10	1016576	Plug, Drain	1	
11	<u>1016581</u>	Spring	1	
12	<u>1017442</u>	Gasket	1	
13	<u>1017456</u>	Bolt, Flanged	6	
14	<u>1017458</u>	Filter	1	
15	<u>1017460</u>	Cover, Pump	1	
16	<u>1017507</u>	Plug	2	

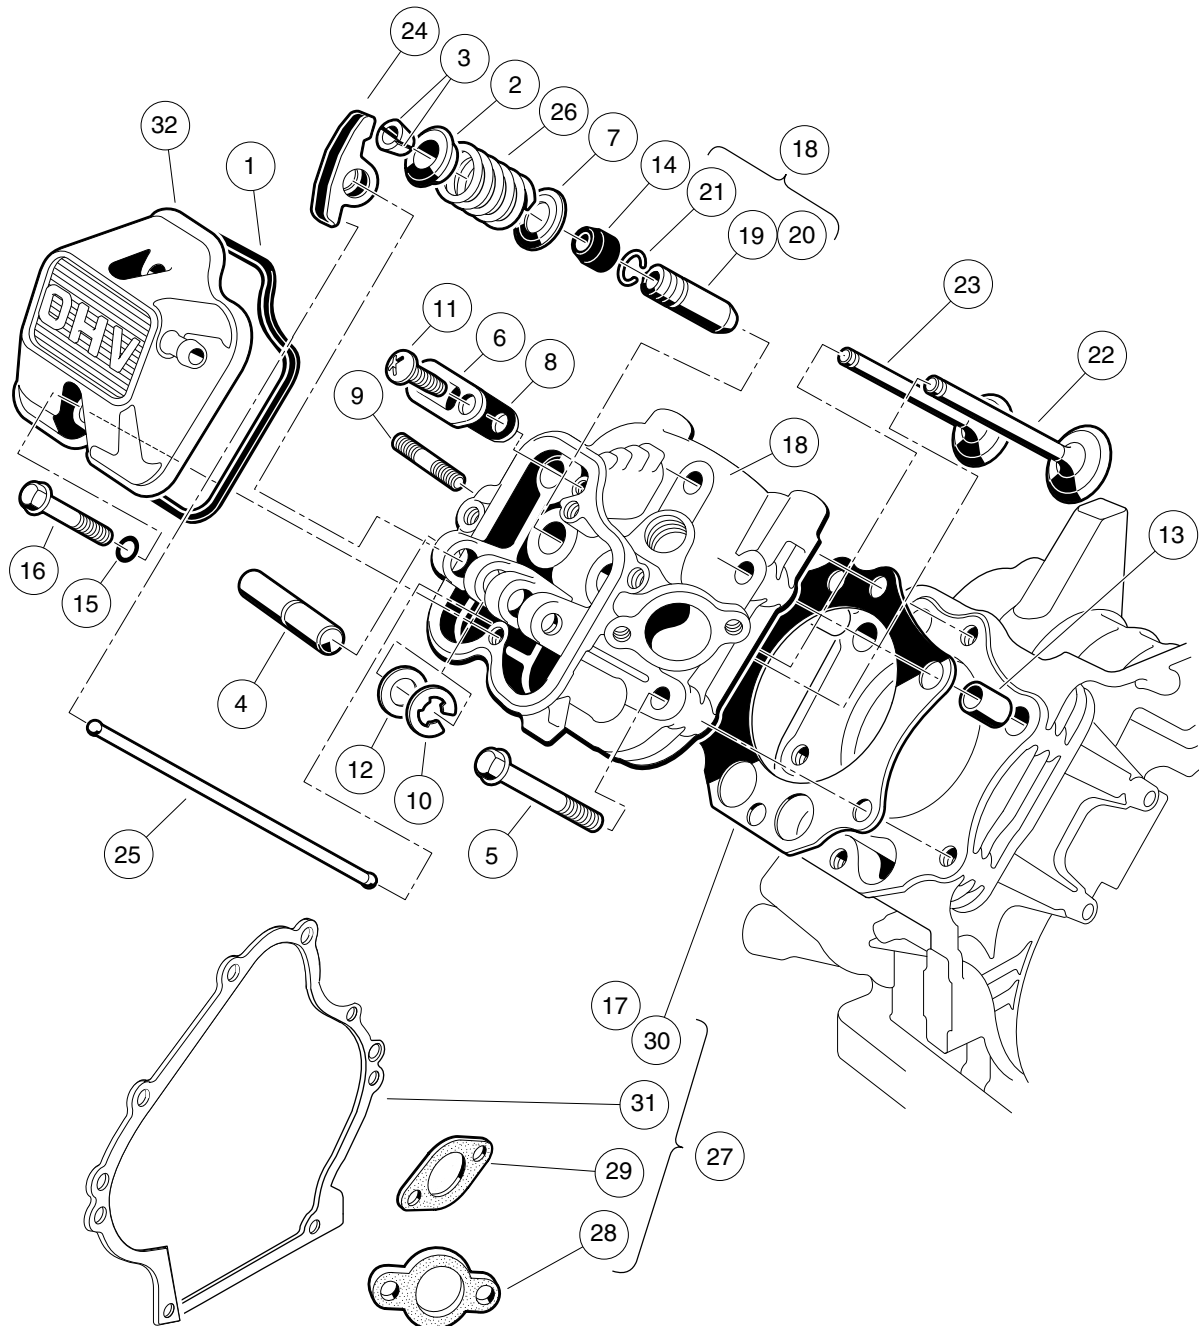

000204-003

FE350 ENGINE – CYLINDER HEAD

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>1016436</u>	Gasket, Rocker Case	1	
2	<u>1016449</u>	Retainer, Valve Spring	2	
3	<u>1016450</u>	Collet	4	
4	<u>1016452</u>	Shaft, Rocker	1	
5	<u>1016458</u>	Bolt, Flange Head, M8 x 1.25 x 45 mm	6	
6	<u>1016474</u>	Plate	1	
7	<u>1016479</u>	Seat, Spring	2	
8	<u>1016483</u>	Valve	1	
9	<u>1016489</u>	Stud, Two-Ended, M8-1.25	2	
10	<u>1016517</u>	Circlip, Type-E	1	
11	<u>1016544</u>	Screw	1	
12	<u>1016549</u>	Washer, 12.1x19x1.8	1	
13	<u>1016563</u>	Pin	2	
14	<u>1016566</u>	Seal, Oil	2	
15	<u>1016569</u>	O-Ring	2	
16	<u>1016583</u>	Bolt, 6x35	2	
17	<u>1017434</u>	Gasket, Head	1	
18	<u>1017435</u>	Assembly, Cylinder Head, FE350 (includes items 19 through 21)	1	
19	<u>1016518</u>	Guide, Valve, Exhaust	1	
20	<u>1016519</u>	Guide, Valve, Intake, Exhaust	1	
21	<u>1016560</u>	Snap Ring	2	
22	<u>1017444</u>	Valve, Intake	1	
23	<u>1017445</u>	Valve, Exhaust	1	
24	<u>1017446</u>	Arm, Rocker	2	
25	<u>1017454</u>	Rod, Push	2	
26	<u>1017473</u>	Spring, Engine Valve	2	
27	<u>102304801</u>	Kit, Gasket, FE350 (includes items 28 through 31)	1	
28	<u>1016440</u>	Gasket, Engine to Insulator	1	
29	<u>1016904</u>	Gasket, Exhaust	1	
30	<u>1017434</u>	Gasket, Head	1	
31	<u>1017443</u>	Gasket, Crankcase Cover	1	
32	<u>102753401</u>	Case, Rocker	1	
Note: Item 28, <u>1016440</u> , is not a component of the FE350 engine.				

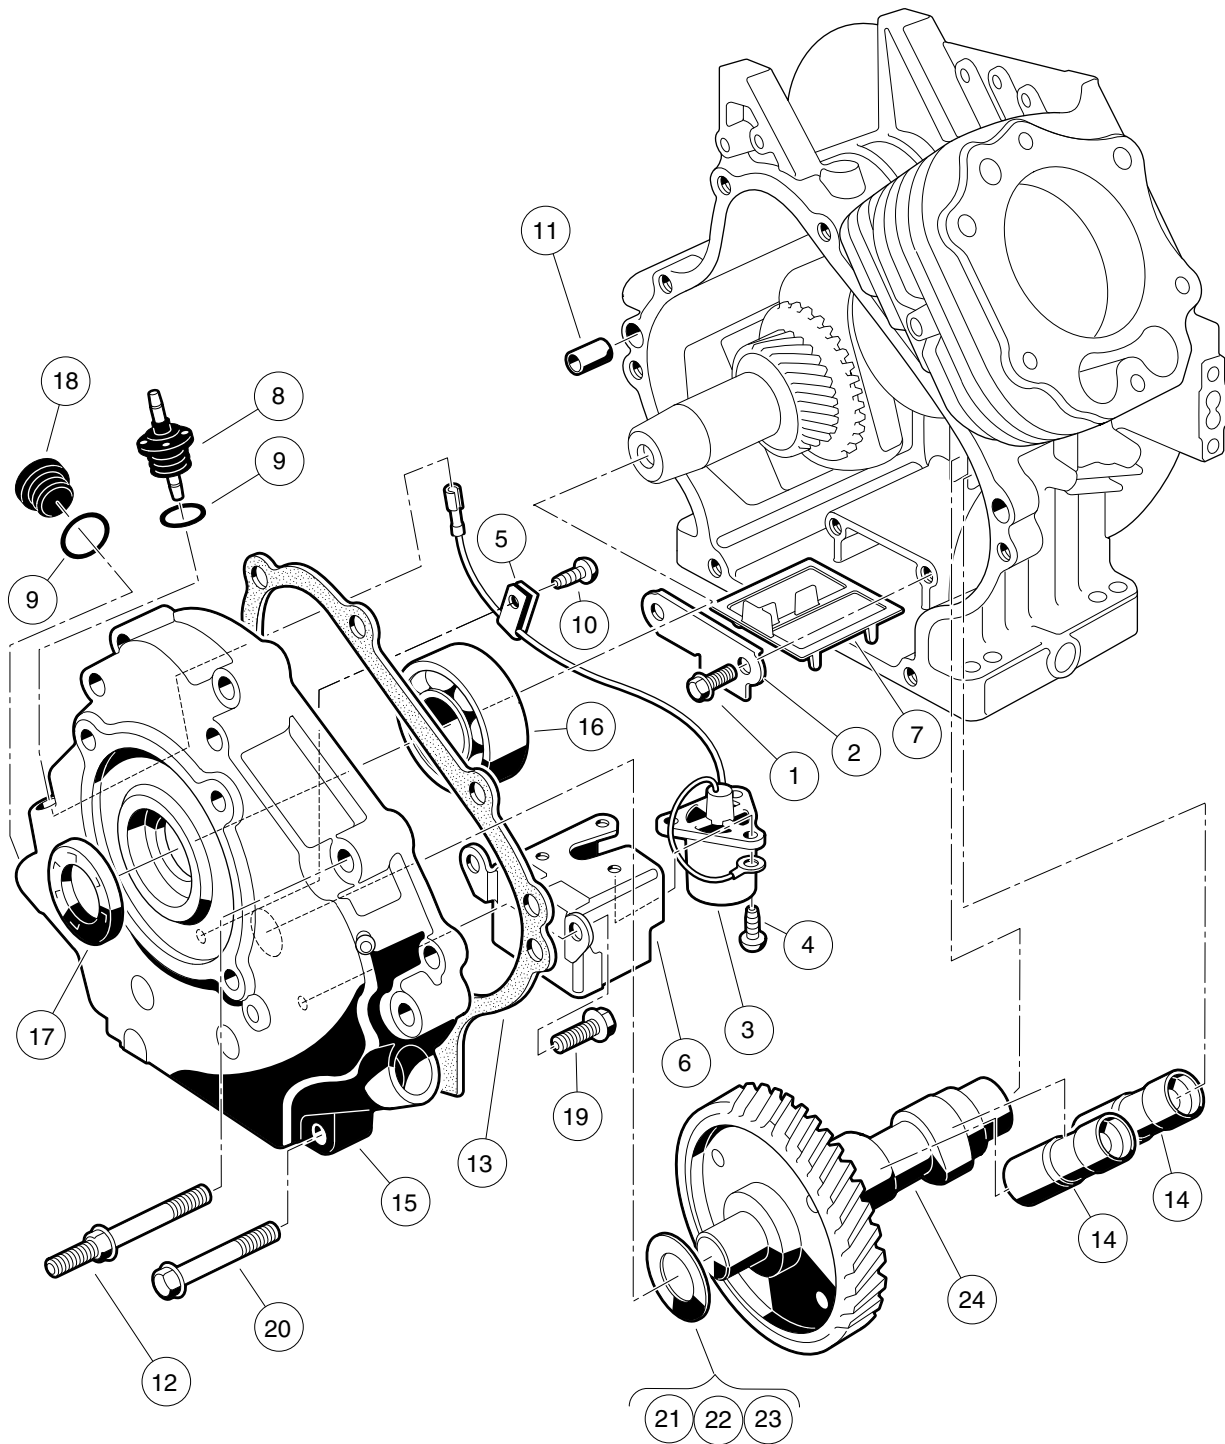


000205-002

FE350 ENGINE W/O ACR – CRANKCASE, CAMSHAFT, AND OIL SENSOR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016454</u>	Bolt, Flange Head, M5 x 0.8 x 8 mm	2
2	<u>1016472</u>	Plate, Oil Filter Screen	1
3	<u>1016494</u>	Sensor, Oil Level	1
4	<u>1016496</u>	Screw, Cross Pan-Head, M4 x 0.7 x 8 mm	3
5	<u>1016506</u>	Clamp	1
6	<u>1016510</u>	Bracket, Switch, Oil Level	1
7	<u>1016521</u>	Screen, Oil Filter	1
8	<u>1016535</u>	Connector, Cord	1
9	<u>1016538</u>	O-Ring	2
10	<u>1016544</u>	Screw	1
11	<u>1016564</u>	Pin	2
12	<u>1016584</u>	Bolt, Two-Ended, M8 x 1.25 x 69 mm	2
13	<u>1017443</u>	Gasket, Crankcase Cover	1
14	<u>1017447</u>	Adjuster, Lash	2
15	<u>1017472</u>	Cover Crankcase	1
16	<u>1017487</u>	Bearing, Ball	1
17	<u>1017504</u>	Seal, Oil	1
18	<u>1017508</u>	Plug	1
19	<u>1017513</u>	Bolt Switch Bracket	2
20	<u>1017514</u>	Screw, M8-1.25 X 45mm Hex	6
21	<u>101751801</u>	Shim, 0.3	1
22	<u>101751802</u>	Shim, 0.4	1
23	<u>101751803</u>	Shim, 0.5	1
24	<u>102431001</u>	Camshaft, FE350 without ACR, 44-Tooth	1


8
G

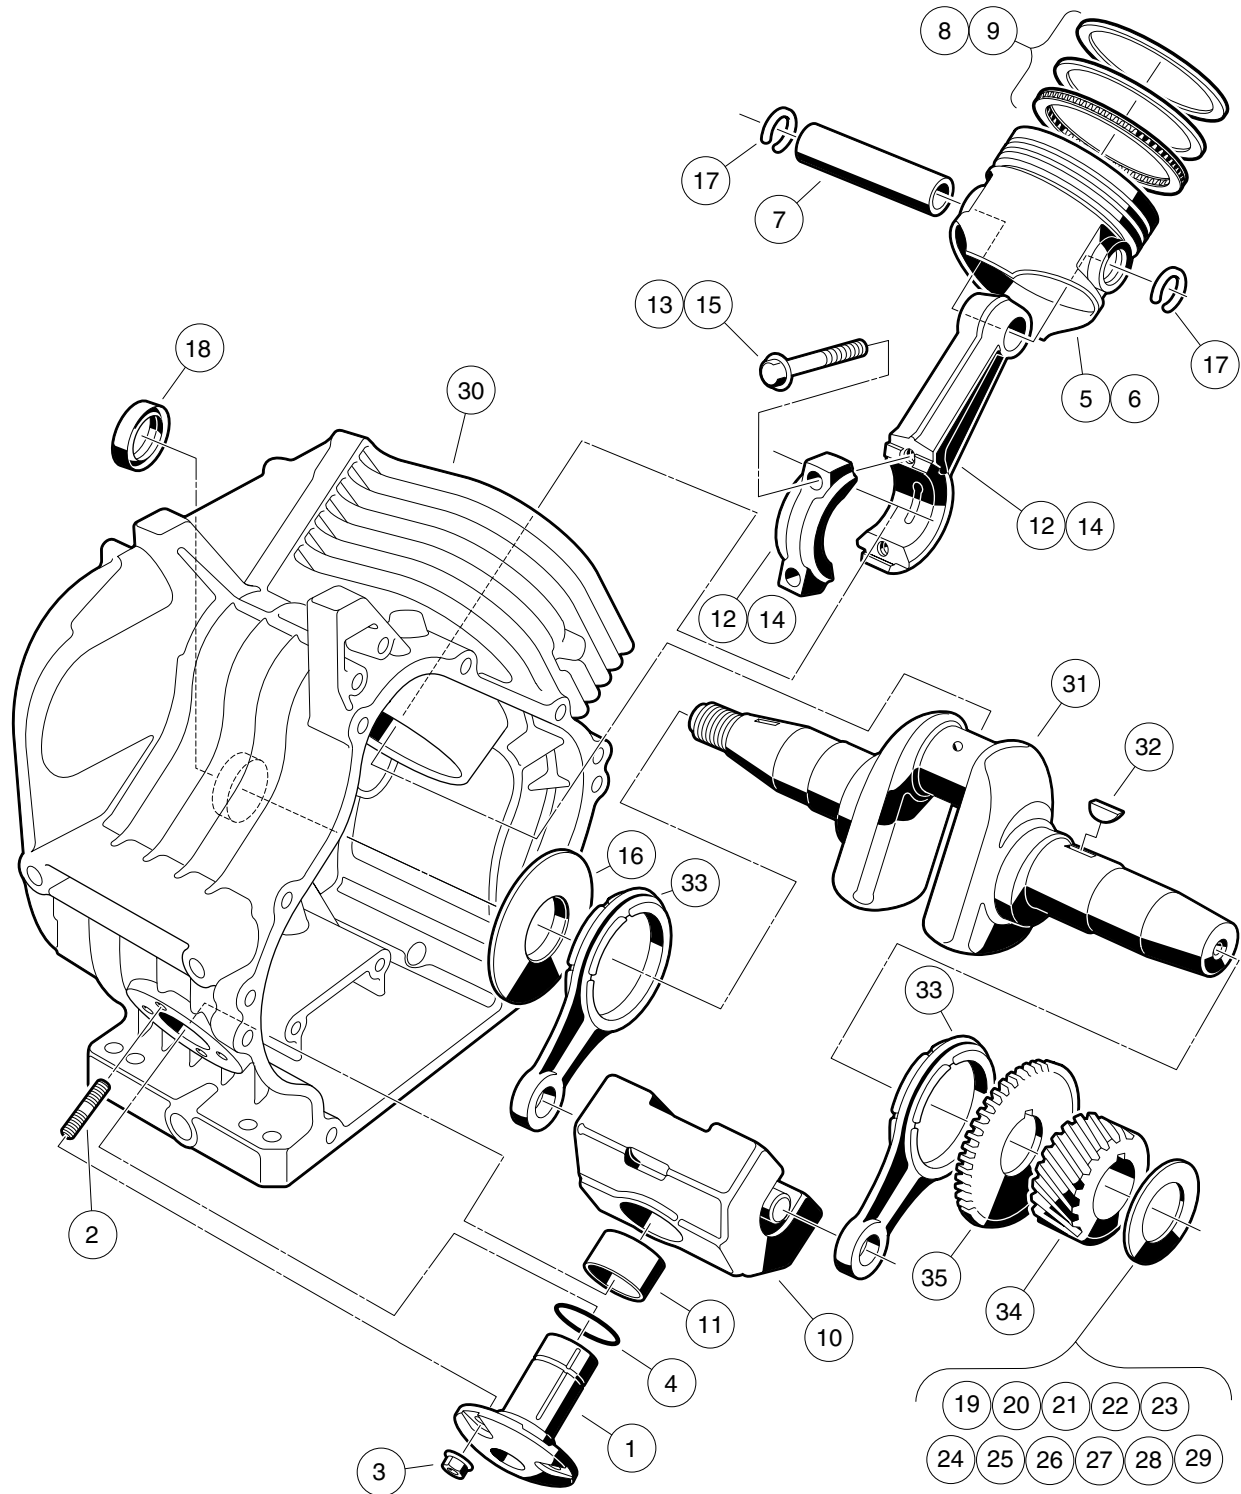

000206-001

FE350 ENGINE – CRANKCASE AND CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY	8	G
		1 2 3 4			
1	1016470	Shaft, Guide, Counterbalance	1		
2	<u>1016541</u>	Stud, 6x14	4		
3	1016547	Nut, M6 Flange	4		
4	<u>1016571</u>	O-Ring	1		
5	<u>101744901</u>	Piston, Standard	1		
6	<u>101744902</u>	Piston, 0.50 mm Oversize	1		
7	1017450	Pin, Piston	1		
8	<u>101745101</u>	Ring Set, Standard Piston	1		
9	<u>101745102</u>	Ring Set, Piston, 0.50 mm Oversize	1		
10	<u>1017453</u>	Counterbalance Weight (includes item 11)	1		
11	1017510	Bearing, Plain	1		
12	101745701	Asm, Con. Rod Std (includes item 13)	1		
13	<u>1017512</u>	Bolt	2		
14	<u>101745702</u>	Asm,Con.Rod 0.5mm U/s (includes item 15)	1		
15	<u>1017512</u>	Bolt	2		
16	1017501	Spacer	1		
17	<u>1017502</u>	Snap Ring	2		
18	<u>1017503</u>	Seal, Oil	1		
19	<u>101773301</u>	Shim, Crankshaft, 1.18mm	1		
20	<u>101773302</u>	Shim, Crankshaft, 1.25mm	1		
21	<u>101773303</u>	Shim, Crankshaft, 1.32mm	1		
22	<u>101773304</u>	Shim, Crankshaft, 1.39mm	1		
23	<u>101773305</u>	Shim, Crankshaft, 1.46mm	1		
24	<u>101773306</u>	Shim, Crankshaft, 1.53mm	1		
25	<u>101773307</u>	Shim, Crankshaft, 1.60mm	1		
26	<u>101773308</u>	Shim, Crankshaft, 1.67mm	1		
27	<u>101773309</u>	Shim, Crankshaft, 1.74mm	1		
28	<u>101773310</u>	Shim, Crankshaft, 1.11mm	1		
29	<u>101773311</u>	Shim, Crankshaft, 1.81mm	1		
30	<u>101916001</u>	Crankcase Complete, FE350 (cw)	1		
31	<u>102430901</u>	Crankshaft, FE350 Left-Hand, 22-Tooth (includes items 32 through 35)	1		
32	<u>1016562</u>	Key	1		
33	<u>1017471</u>	Rod	2		
34	N/A	Gear, Helical	1		
35	N/A	Gear, Spur	1		

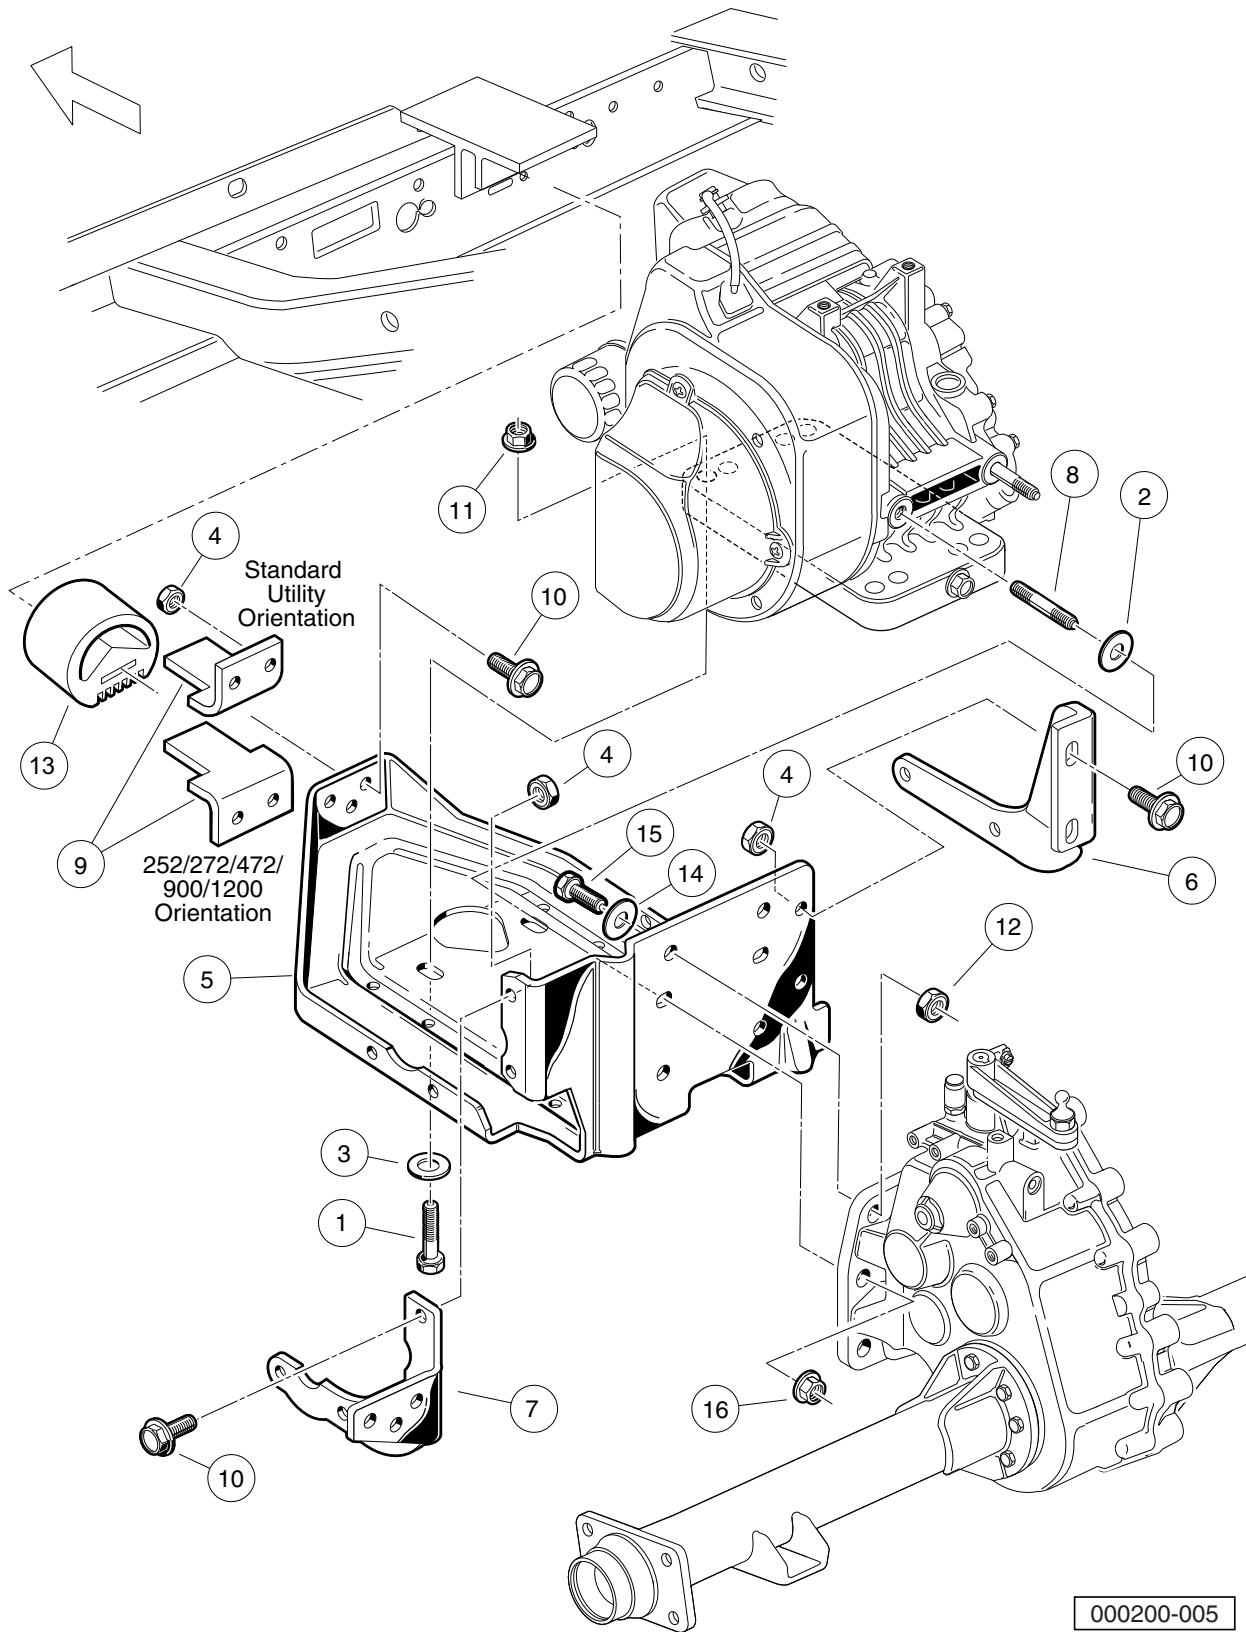

FE350 ENGINE MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	4	
2	<u>1011697</u>	Washer, 5/16 Flat	2	
3	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	4	
4	<u>1013924</u>	Nut, 5/16-24, Hex Head Cone	10	
5	<u>101827101</u>	Plate, Engine Mounting	1	
6	<u>101832601</u>	Stiffener (PTO Side)	1	
7	<u>101832701</u>	Stiffener (Flywheel Side)	1	
8	<u>101833101</u>	Stud, M8-1.25 X 50 mm Two-Ended	2	
9	<u>101834601</u>	Bracket, Snubber	1	
10	<u>101884801</u>	Screw, 5/16-24 X 0.875, Grade-8	10	
11	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4	
12	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4	
13	<u>102540301</u>	Snubber, Inner Frame	1	
14	<u>334</u>	Washer, 3/8, Type A, Flat	4	
15	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	4	
16	<u>96704416</u>	Nut, Flange, M8 X 1.25 Serrated	2	


8

G

FUEL, INTAKE, AND GOVERNOR SYSTEMS

9

G





FUEL SYSTEM – 49 STATE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4
2	<u>1012649</u>	Clamp, 0.460 Red Hose	8
3	<u>1013687</u>	Clamp, 3/8" Hose (screw type)	1
4	<u>1013746</u>	Clamp, 0.301 ID Hose	2
5	<u>1014116</u>	Nut, 1/4-20 Speed	1
6	<u>1014523</u>	Pump, Impulse Fuel	1
7	<u>1015137</u>	Fuel Line, 3/16 (available by the foot)	A/R
8	<u>1016</u>	Lockwasher, #10 Split	1
9	<u>101824401</u>	Vent Barb	1
10	<u>101929501</u>	Mount Fuel Pump	1
11	<u>102003201</u>	Filter, Fuel, 30 Micron	2
12	<u>102865101</u>	Fuel Line, 1/4 (available by the foot)	A/R
13	<u>102977901</u>	Bezel, Fuel Fill, 5.0 Dia	1
14	<u>102978001</u>	Strap, Fuel Tank, Side Fill	1
15	<u>103187601</u>	Asm, Fuel Tank, Side Fill, Su (includes items 16 through 24)	1
16	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	5
17	<u>1013462</u>	Sending Unit, Fuel Level *	1
18	<u>1015139</u>	Insulation Grommet	1
19	<u>1015143</u>	Vent, Fuel Tank	1
20	<u>1015921</u>	Wire Assembly #16 Black	1
21	<u>102513701</u>	Valve - Fuel Pickup Tube	1
22	<u>102522001</u>	Gasket, Rubber	1
23	<u>102751601</u>	Cap, Fuel Tank, Gasoline	1
24	<u>102974201</u>	Tank, Fuel, Side Fill	1
25	<u>103306301</u>	Screw, Bhsc, 1/4-20 X 2.0	1
26	<u>183</u>	Washer, #10, Type A, Flat	1
27	<u>8797</u>	Nut, #10-32 Brass Hex	1
* Note: Must replace fuel sending unit gasket when servicing this component.			

9

G

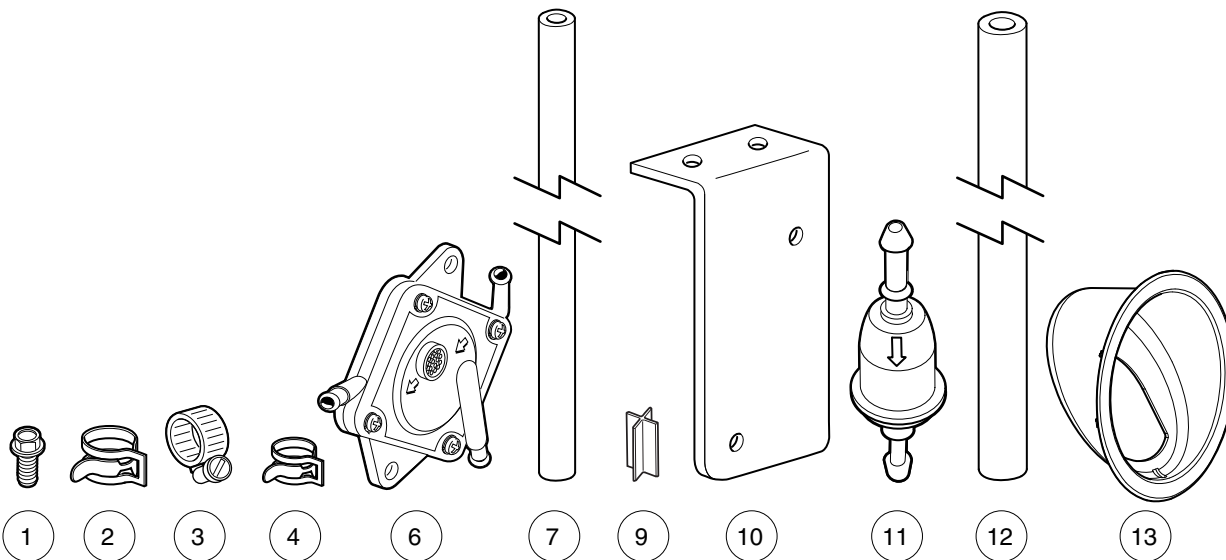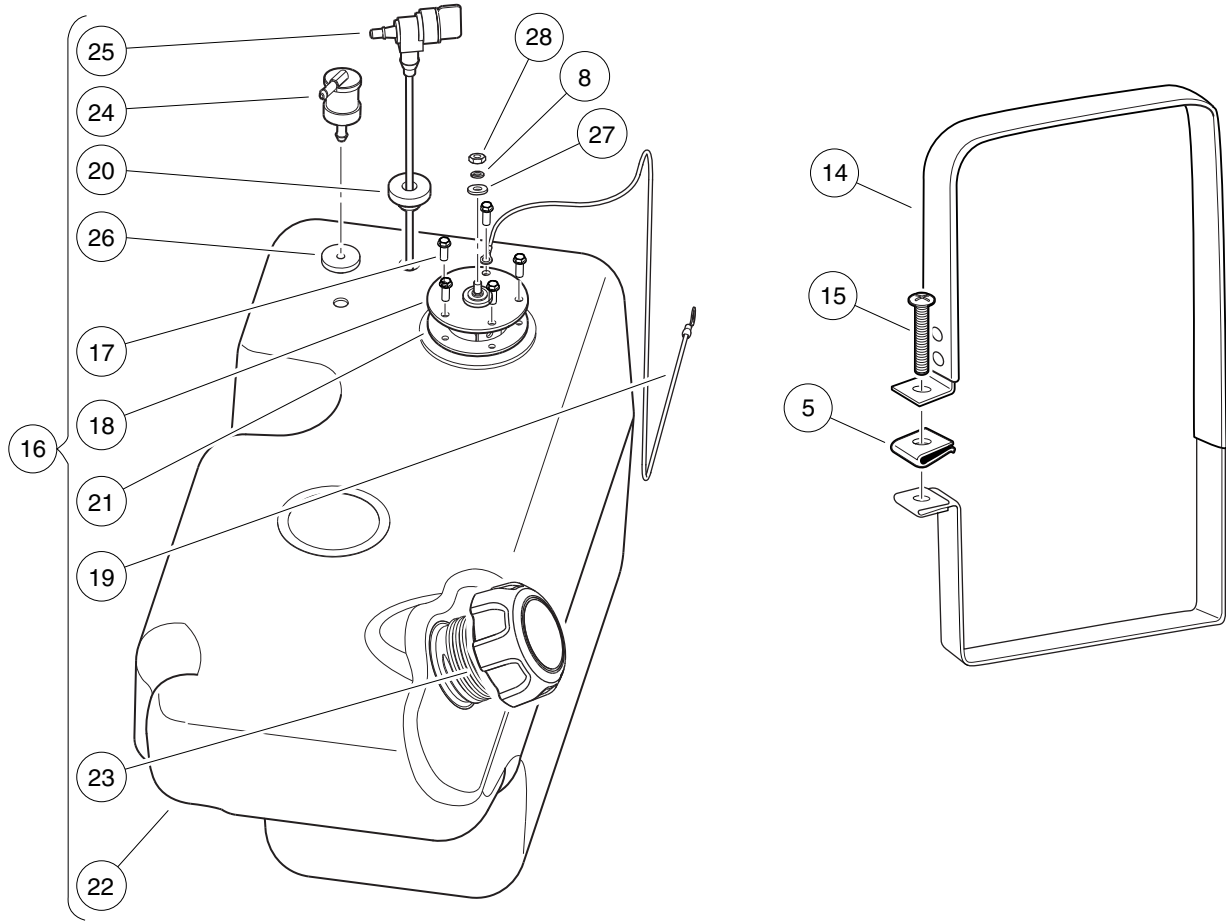


001072-002

FUEL SYSTEM – CALIFORNIA ONLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4
2	<u>1012649</u>	Clamp, 0.460 Red Hose	8
3	<u>1013687</u>	Clamp, 3/8" Hose (screw type)	1
4	<u>1013746</u>	Clamp, 0.301 ID Hose	2
5	<u>1014116</u>	Nut, 1/4-20 Speed	1
6	<u>1014523</u>	Pump, Impulse Fuel	1
7	<u>1015137</u>	Fuel Line, 3/16 (available by the foot)	A/R
8	<u>1016</u>	Lockwasher, #10 Split	1
9	<u>101824401</u>	Vent Barb	1
10	<u>101929501</u>	Mount Fuel Pump	1
11	<u>102003201</u>	Filter, Fuel, 30 Micron	2
12	<u>102865101</u>	Fuel Line, 1/4 (available by the foot)	A/R
13	<u>102977901</u>	Bezel, Fuel Fill, 5.0 Dia	1
14	<u>102978001</u>	Strap, Fuel Tank, Side Fill	1
15	<u>103306301</u>	Screw, Bhsc, 1/4-20 X 2.0	1
16	<u>103369101</u>	Asm, Fuel Tank,side Fill,nano (includes items 17 through 26)	1
17	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	5
18	<u>1013462</u>	Sending Unit, Fuel Level *	1
19	<u>1015921</u>	Wire Assembly #16 Black	1
20	<u>102406701</u>	Bushing, Line, Return	1
21	<u>102522001</u>	Gasket, Rubber	1
22	<u>N/A</u>	Tank, Fuel,side Fill,nano	1
23	<u>103372101</u>	Cap, Fuel Tank, Gas, Ratchet	1
24	<u>103372201</u>	Vent, Fuel Tank, W/ Valve	1
25	<u>103372301</u>	Valve, Fuel, 259mm	1
26	<u>103374701</u>	Grommet, Fuel Tank Vent	1
27	<u>183</u>	Washer, #10, Type A, Flat	1
28	<u>8797</u>	Nut, #10-32 Brass Hex	1
* Note: Must replace fuel sending unit gasket when servicing this component.			

9

G

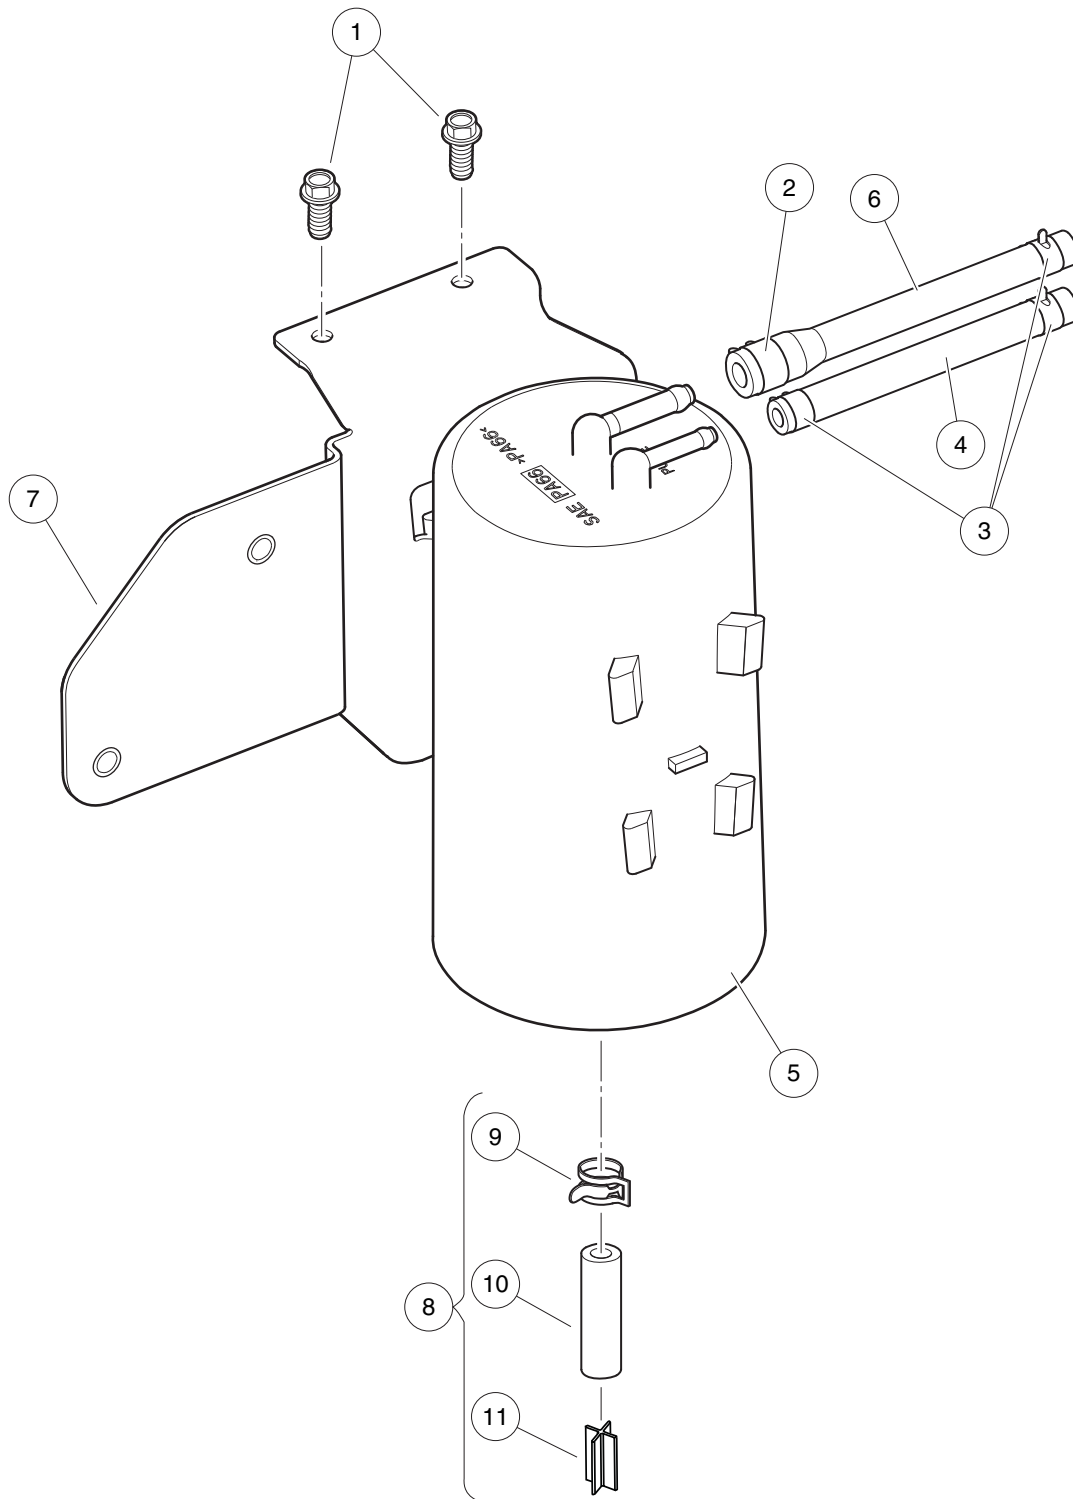


000980-007

CARBON CANISTER – CALIFORNIA ONLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	2
2	<u>101313402</u>	Clamp, Green Hose	1
3	<u>1013746</u>	Clamp, 0.301 ID Hose	3
4	<u>1015137</u>	Fuel Line, 3/16 (available by the foot)	A/R
5	<u>103372401</u>	Canister, Carbon	1
6	<u>103372501</u>	Hose, Vent, Flare, 4.7"	1
7	<u>103372801</u>	Bracket, Carbon Canister, Sw	1
8	<u>103418601</u>	Asm, Vent Line, Utility (includes items 9 through 11)	1
9	<u>1012649</u>	Clamp, 0.460 Red Hose	1
10	N/A	Hose, Vent, 5/16 I.D., Bulk	A/R
11	N/A	Vent, Barb, 5/16 I.D. Hose	1

9
G

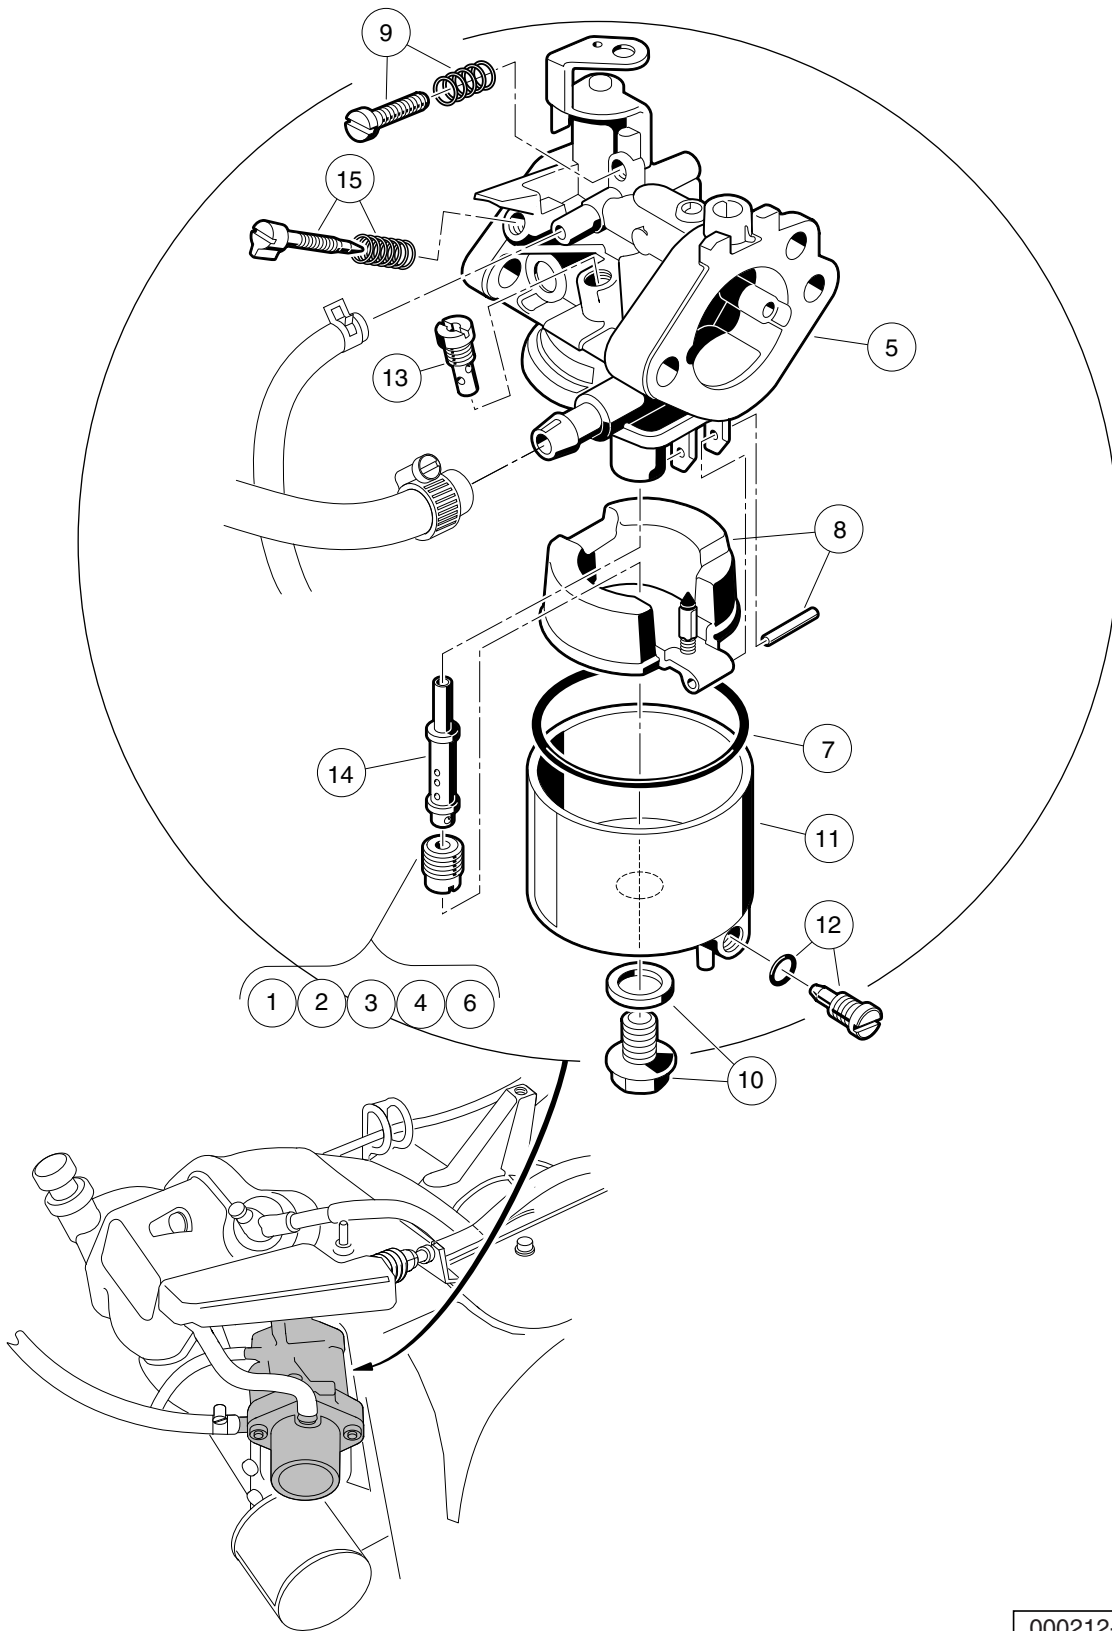


000212-001

CARBURETOR ASSEMBLY, FE350 (AS11)

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101642575</u>	Jet, Altitude, # 75	1
2	<u>101642578</u>	Jet, Altitude, # 78	1
3	<u>101642580</u>	Jet, Altitude, # 80	1
4	<u>101642582</u>	Jet, Altitude, # 82	1
5	<u>101905901</u>	Carburetor, FE350D (includes items 6 through 15)	1
6	<u>101642585</u>	Jet, Altitude, # 85	1
7	<u>1016437</u>	Gasket, Carburetor Bowl OHV	1
8	<u>1016486</u>	Float Assembly	1
9	<u>1016501</u>	Screw Assembly	1
10	<u>1016585</u>	Bolt	1
11	<u>1017461</u>	Chamber Assembly, Float (includes item 12)	1
12	<u>1016499</u>	Screw Assembly	1
13	<u>101973101</u>	Jet, #40 Pilot	1
14	<u>101973301</u>	Nozzle, Main	1
15	N/A	Assembly, Pilot Air Screw	1
Note: Jets- <u>101642585</u> for 0 - 3,000 feet; <u>101642582</u> for 3,000 - 5,000 feet; <u>101642580</u> for 5,000 - 8,000 feet; <u>101642578</u> for 8,000 - 10,000 feet; <u>101642575</u> for 10,000 feet and higher. NOTE 2: Carburetor <u>101905901</u>, shown above, is no longer available. Order part number 103524501 for replacement.			

9

G

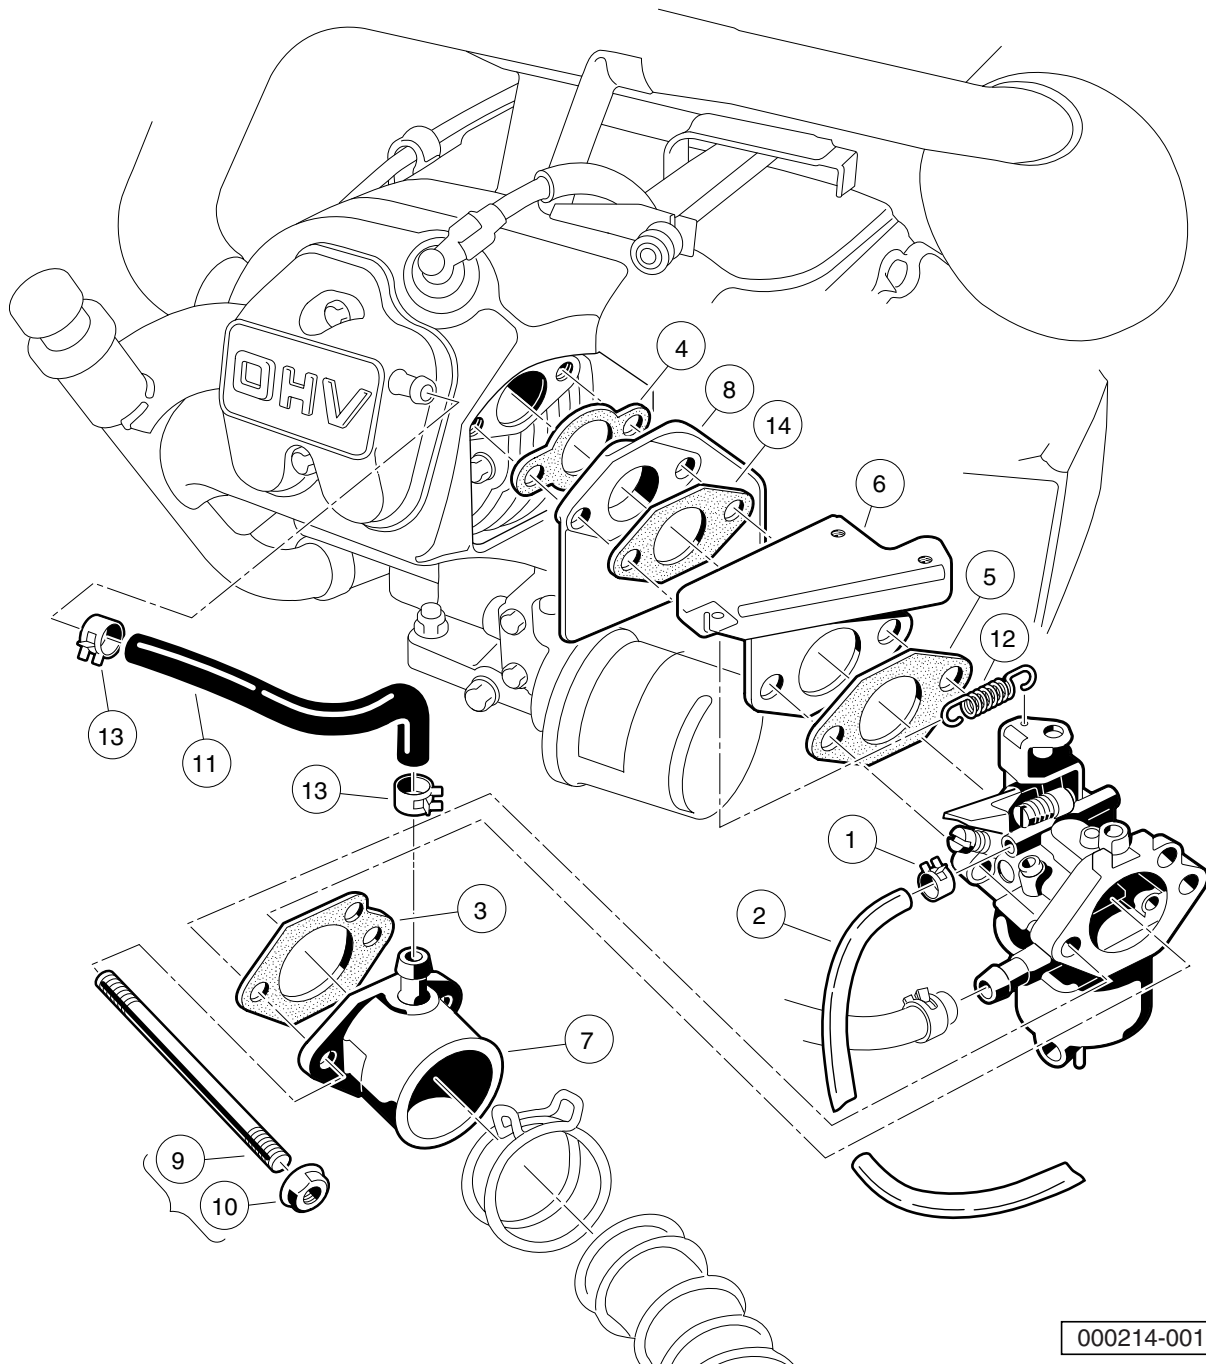


000214-001

CARBURETOR MOUNTING, UTILITY, FE350 – 49 STATE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013746</u>	Clamp, 0.301 ID Hose	1
2	<u>1015137</u>	Fuel Line, 3/16 (available by the foot)	1
3	<u>1016438</u>	Gasket, Carb To Intake Manifold	1
4	<u>1016440</u>	Gasket, Engine to Insulator	1
5	<u>1016441</u>	Gasket, Sprg Brkt To Carb OHV	1
6	<u>1016444</u>	Bracket, Throttle Spring Return	1
7	1016480	Pipe, Intake Manifold	1
8	101648102	Insulator, Carburetor	1
9	<u>101649002</u>	Stud, M6-1.00 Two-Ended	2
10	1016547	Nut, M6 Flange	2
11	<u>1016572</u>	Tube, Crankcase Vent	1
12	<u>1016582</u>	Spring, Throttle Return	1
13	<u>1017466</u>	Clamp	2
14	<u>101973401</u>	Gasket, Insulator To Bracket	1

9

G

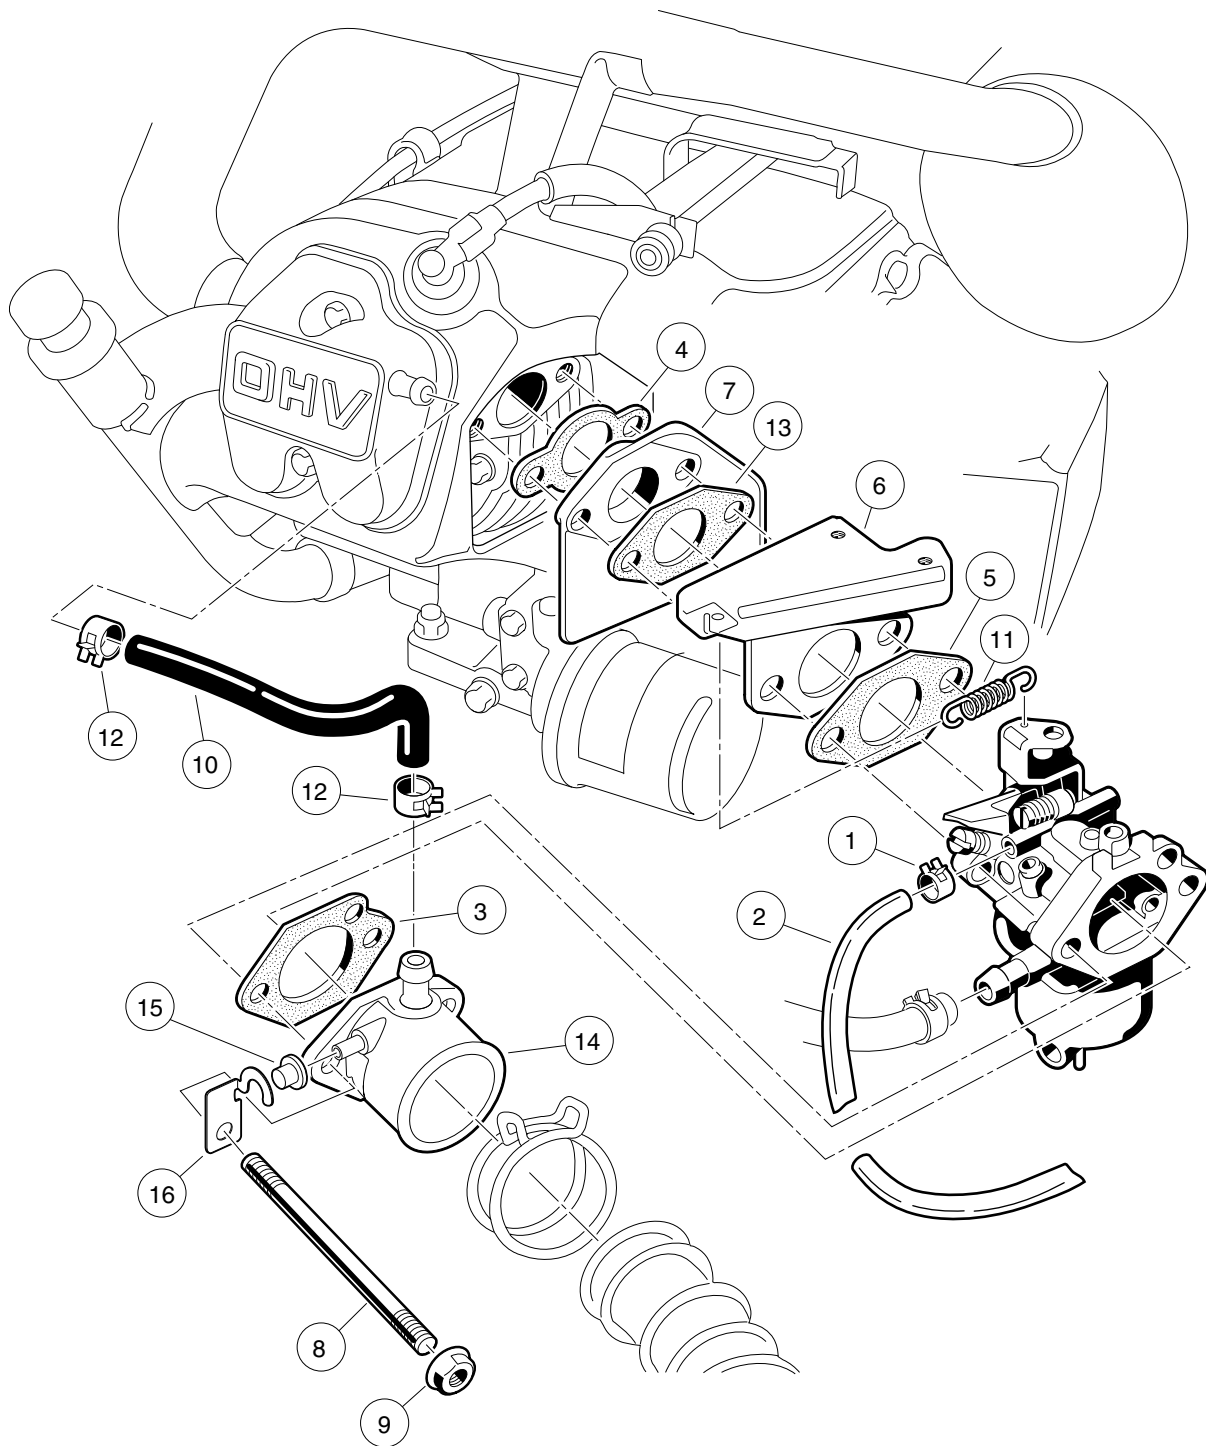


000214-002

CARBURETOR MOUNTING, UTILITY, FE350 – CALIFORNIA ONLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013746</u>	Clamp, 0.301 ID Hose	1
2	<u>1015137</u>	Fuel Line, 3/16 (available by the foot)	1
3	<u>1016438</u>	Gasket, Carb To Intake Manifold	1
4	<u>1016440</u>	Gasket, Engine to Insulator	1
5	<u>1016441</u>	Gasket, Sprg Brkt To Carb OHV	1
6	<u>1016444</u>	Bracket, Throttle Spring Return	1
7	101648102	Insulator, Carburetor	1
8	<u>101649002</u>	Stud, M6-1.00 Two-Ended	2
9	1016547	Nut, M6 Flange	2
10	<u>1016572</u>	Tube, Crankcase Vent	1
11	<u>1016582</u>	Spring, Throttle Return	1
12	<u>1017466</u>	Clamp	2
13	<u>101973401</u>	Gasket, Insulator To Bracket	1
14	103507101	Carburetor Adapter w/ Tap	1
15	103507201	Plug, Intake Manifold, Carb	1
16	103507301	Bracket, Intake Manifold, Carb	1

9

G

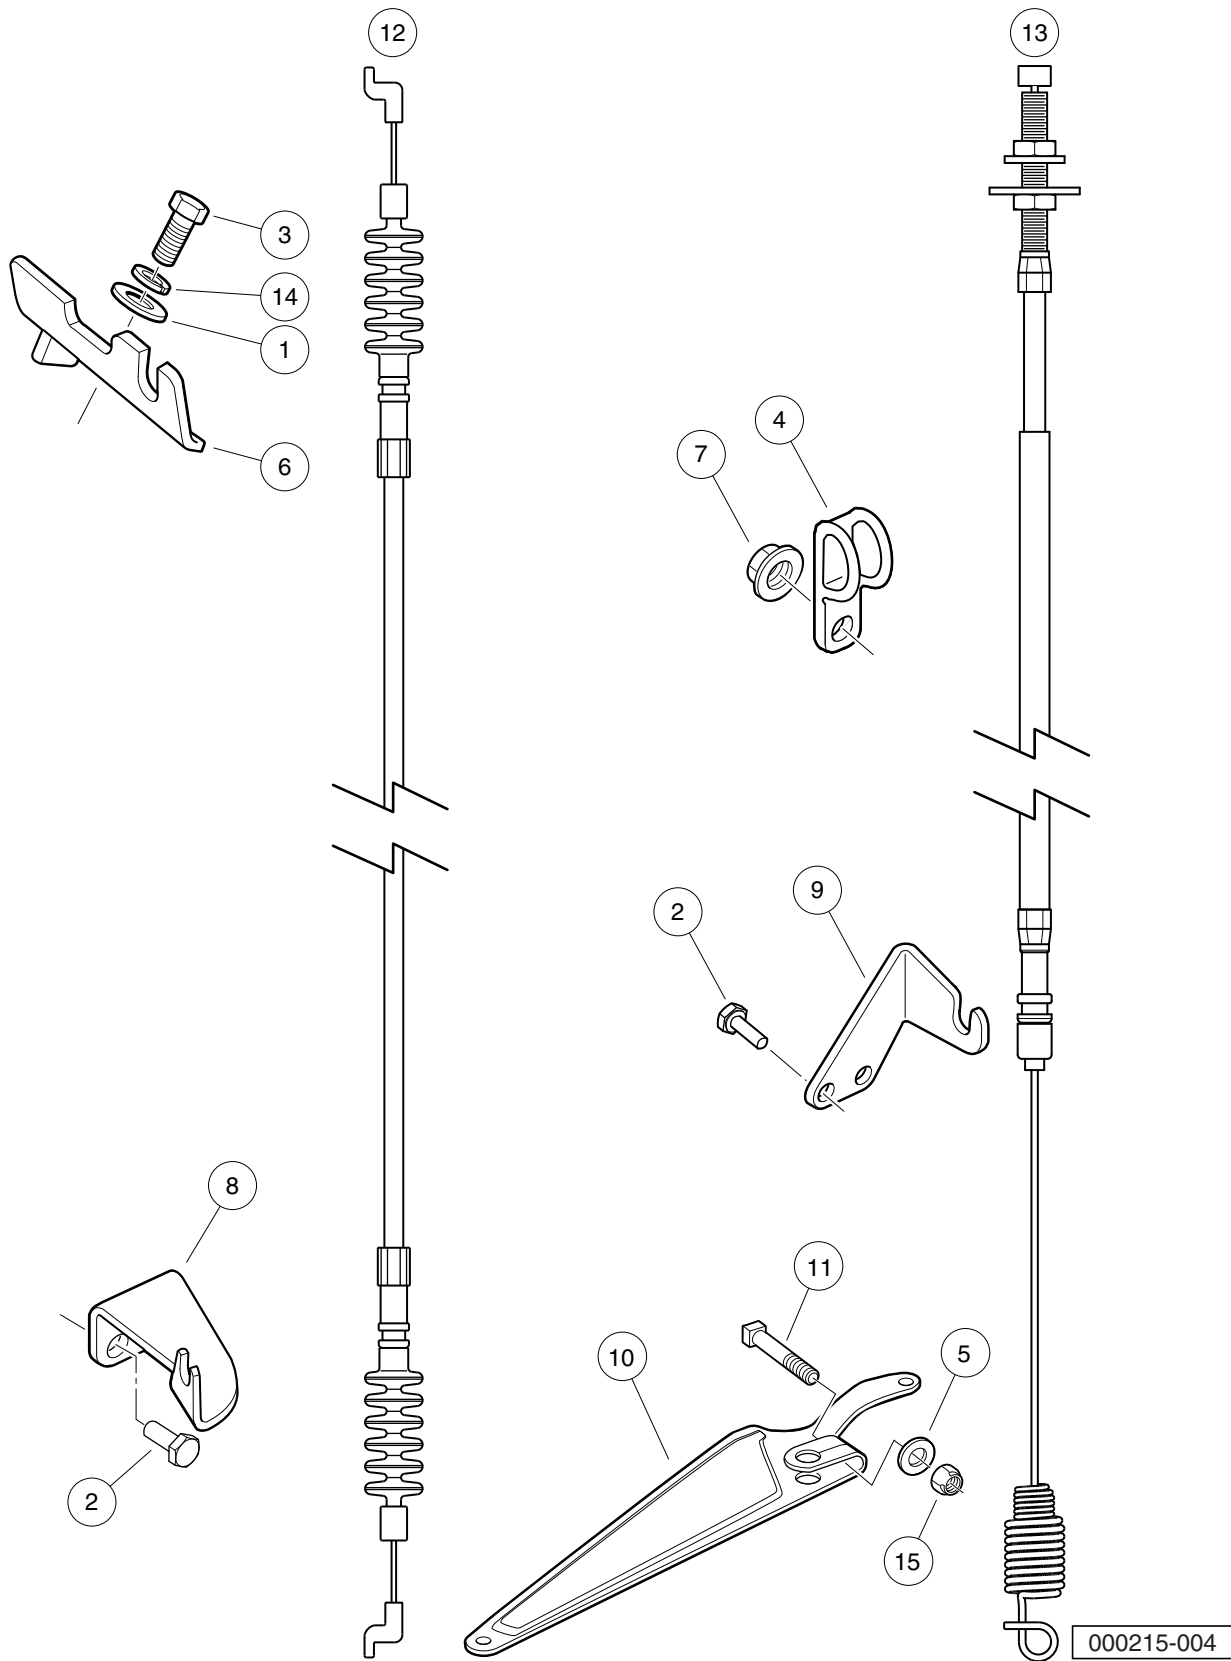


GOVERNOR AND ACCELERATOR CABLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011697</u>	Washer, 5/16 Flat	1
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4
3	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	1
4	<u>1013700</u>	Clamp	2
5	<u>1014007</u>	Washer, 1/4, Flat	1
6	<u>101584502</u>	Bracket, Governor Cable Snap-In	1
7	<u>1016546</u>	Nut	2
8	<u>101832202</u>	Bracket, Rear Governor Cable Snap-In	1
9	<u>101832302</u>	Bracket, Rear Accelerator Cable Snap-In	1
10	<u>101834801</u>	Arm, Governor	1
11	<u>101886101</u>	Screw, 1/4-20 X 1.00, Square-Head	1
12	<u>102336001</u>	Cable, Governor, Snap-In	1
13	<u>102336101</u>	Cable, Accelerator, Snap-In	1
14	<u>7174</u>	Lockwasher, 5/16 Split	1
15	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	1

9

G

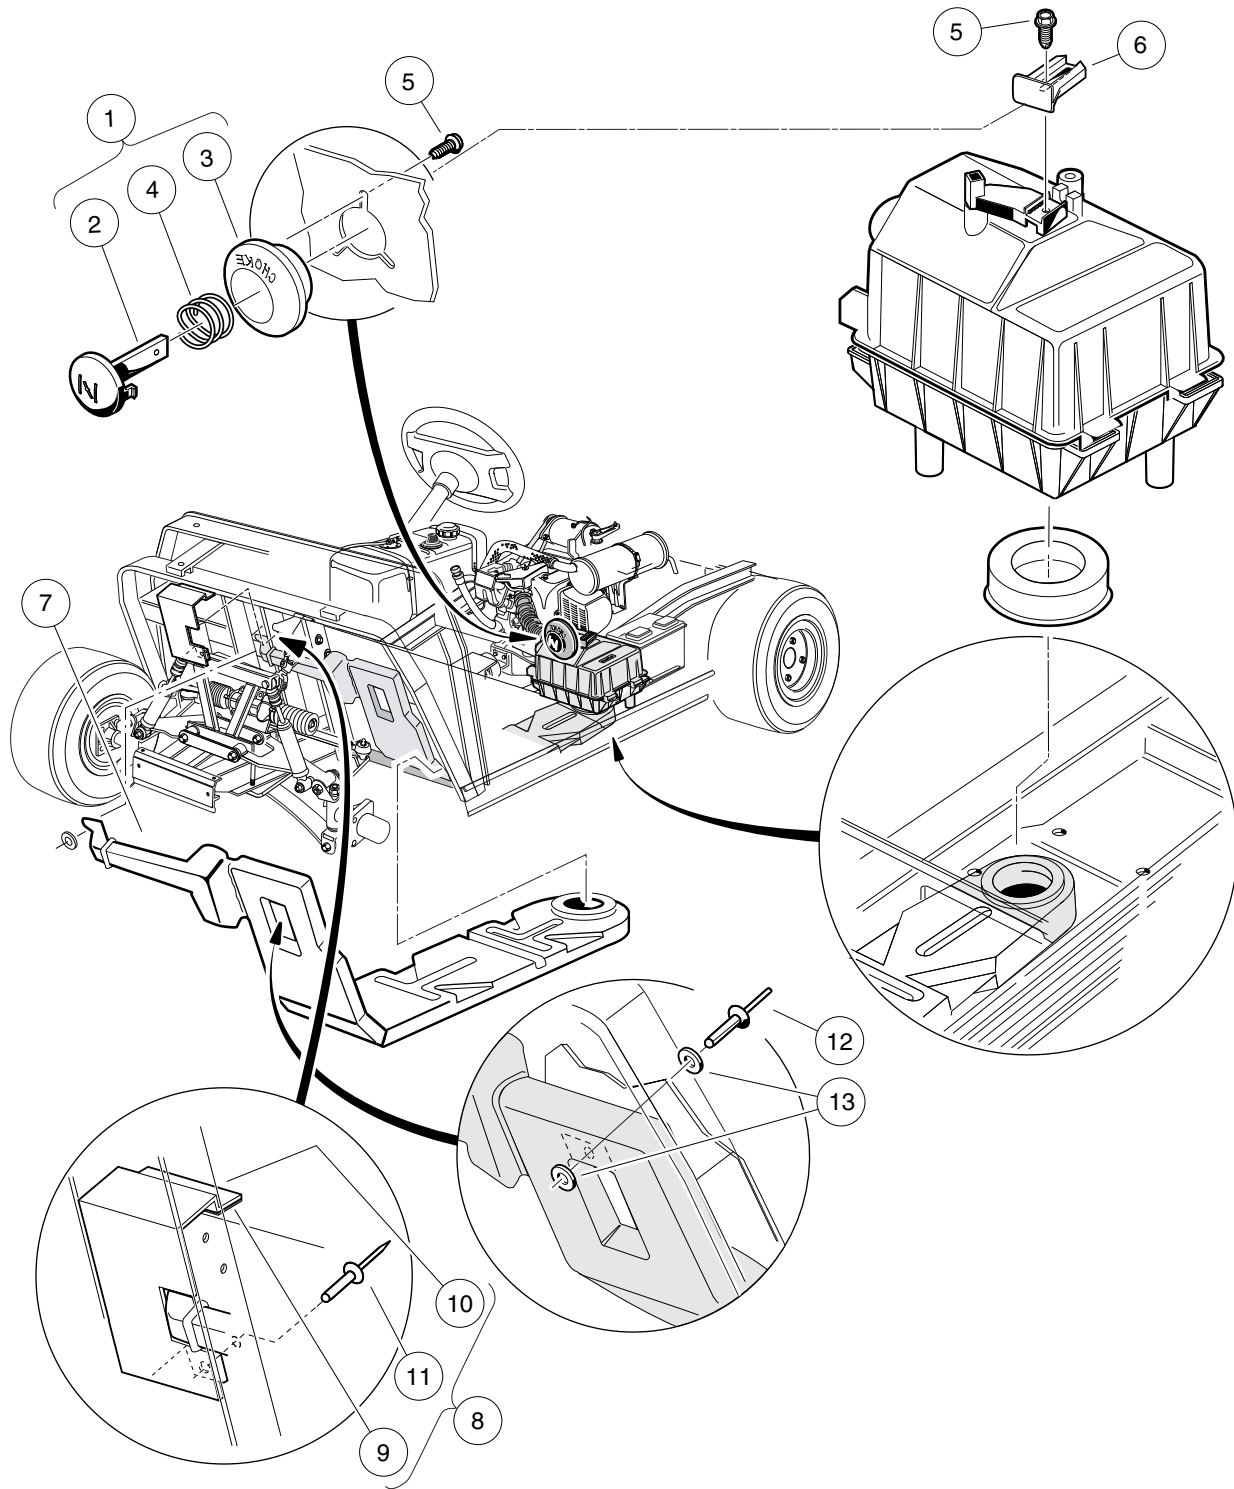


000338-001

AIR INTAKE DUCT AND CHOKE BUTTON – TURF/CARRYALL 1

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101805701</u>	Button Assembly, Choke (includes items 2 through 4)	1
2	<u>101811401</u>	Lever, Choke	1
3	<u>101811501</u>	Guide, Choke Lever	1
4	<u>101856201</u>	Compression Spring	1
5	<u>101850301</u>	Screw, #12-16 X 0.50 Washer-Head Hi-Lo	4
6	<u>101917701</u>	Choke Positioner	1
7	<u>101958101</u>	Duct Assembly	1
8	<u>102190702</u>	Kit, Air Duct Shield (includes items 9 through 11)	1
9	<u>102185401</u>	Tape, 3M VHB 4950	1
10	N/A	Shield, Air Duct	1
11	<u>7973</u>	Rivet, 3/16 X .400 Blind	1
12	<u>1606</u>	Rivet, 3/16 X .500 Alum Pop	2
13	<u>183</u>	Washer, #10, Type A, Flat	4

9

G

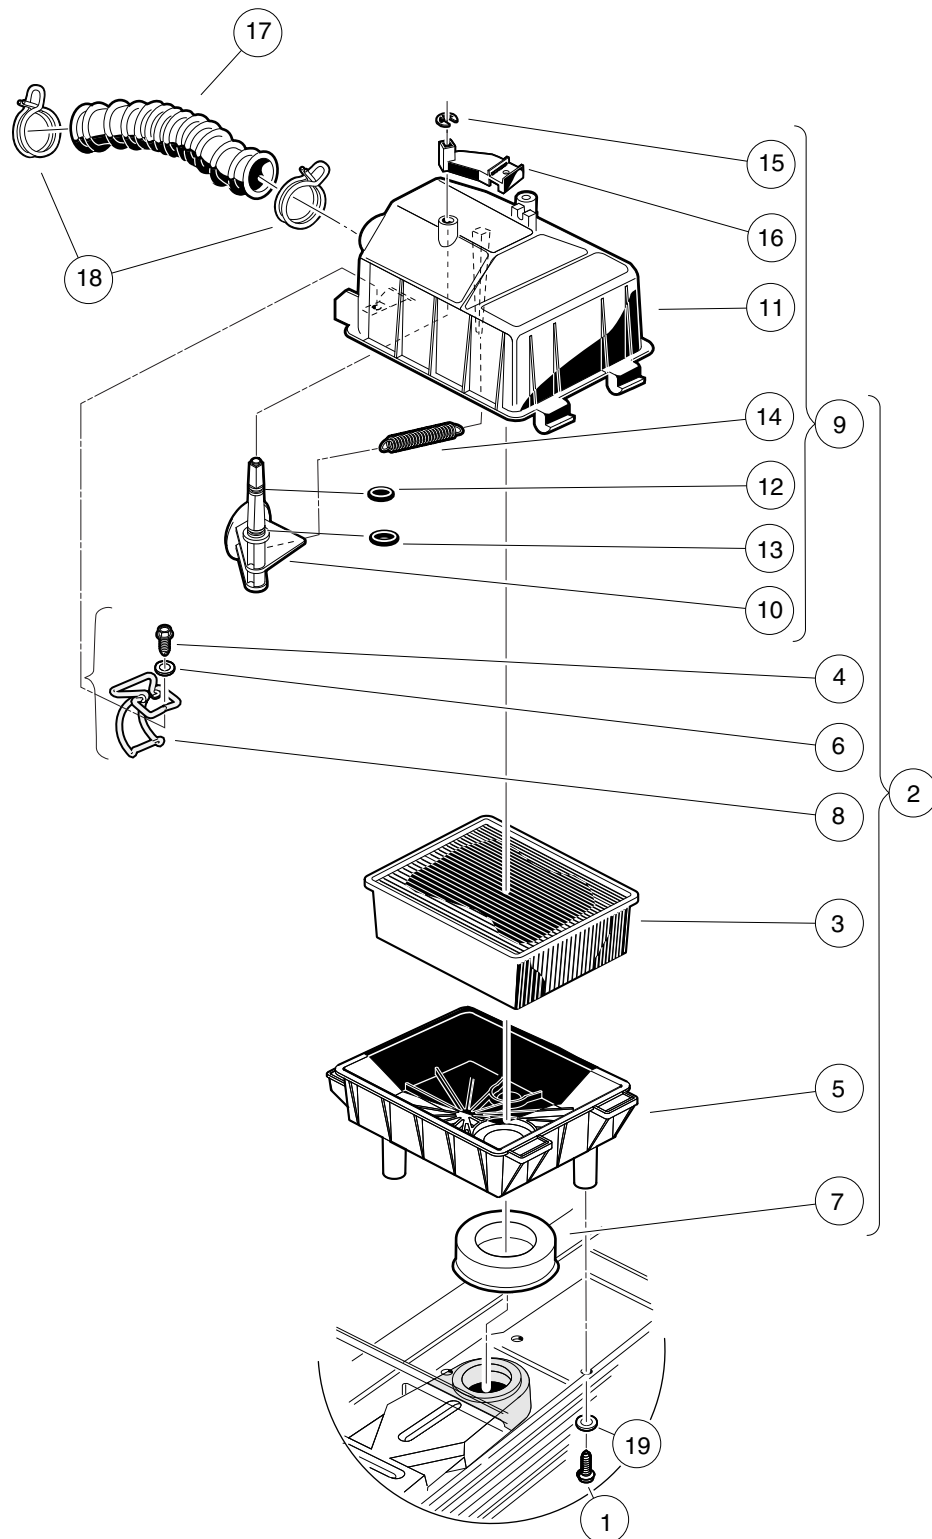

000332-001

AIR FILTER AND INTAKE HOSE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625, Hi-Lo	3
2	<u>101821501</u>	Assembly, Air Box (includes items 3 through 9)	1
3	<u>1015426</u>	Filter, Air	1
4	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	2
5	<u>101811901</u>	Bottom, Air Box	1
6	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	2
7	<u>101921501</u>	Seal, Intake	1
8	<u>101925701</u>	Latch, Wireform	2
9	<u>101972801</u>	Top Assy, Air Box (includes items 10 through 16)	1
10	N/A	Valve, Choke	1
11	N/A	Top, Air Box	1
12	N/A	O-Ring, 5/16	1
13	N/A	O-Ring, 3/8	1
14	<u>101812301</u>	Spring, Extension Return	1
15	<u>101813001</u>	Retaining Ring 0.25, Shaft	1
16	<u>101917601</u>	Lever, Choke	1
17	<u>101837101</u>	Hose, Air Intake	1
18	<u>101971301</u>	Clamp, 1.58" ID Hose	2
19	<u>332</u>	Washer, 1/4 Type A Narrow Flat	3

9

G


9

G

EXHAUST SYSTEM

10

G

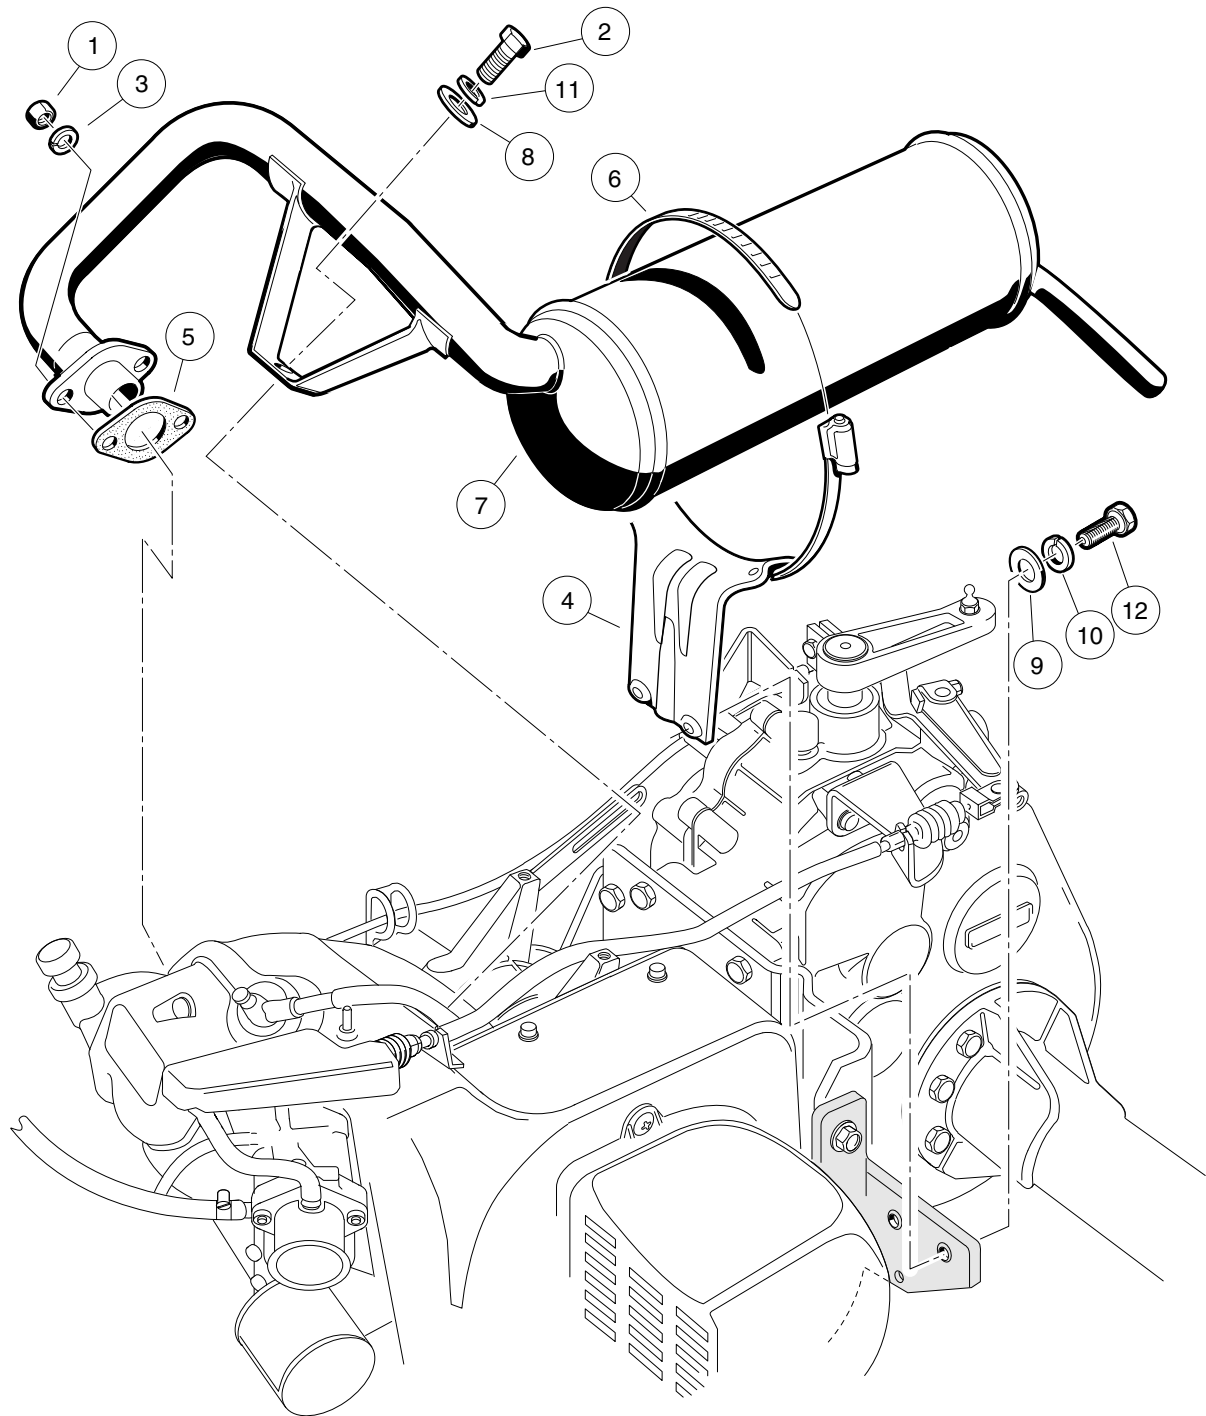

000209-001

EXHAUST SYSTEM – FE350 ENGINE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012528</u>	Nut, M8-1.25 Hex	2
2	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	1
3	<u>1013734</u>	Lockwasher, 8mm Split	2
4	<u>1015814</u>	Bracket, Muffler Mounting	1
5	<u>1016904</u>	Gasket, Exhaust	1
6	<u>1017689</u>	Clamp, 5" Muffler Hose	1
7	<u>101859401</u>	Exhaust System, FE350	1
8	<u>1241</u>	Washer, 5/16 Type A Flat	1
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
10	<u>451</u>	Lockwasher, 1/4 Split	2
11	<u>7174</u>	Lockwasher, 5/16 Split	1
12	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2

10
G


10

G

DRIVE BELT AND CLUTCHES

11


G

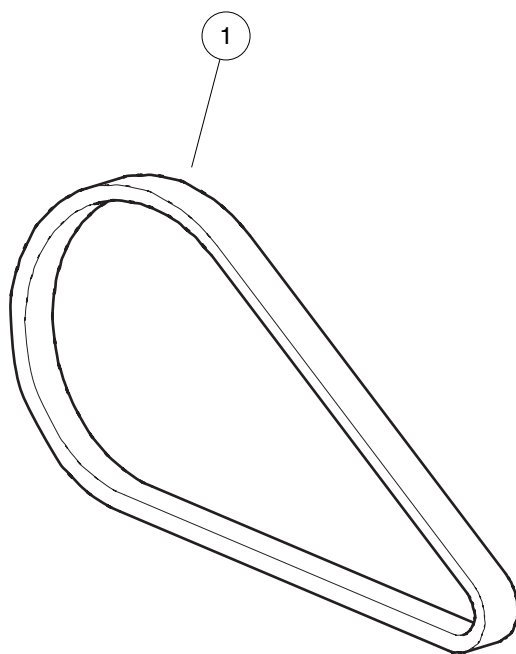

000918-001

DRIVE BELT

ITEM	PART NO.	DESCRIPTION	QTY	11
1	<u>1017188</u>	1 2 3 4 Belt, Drive (FE350)	1	G

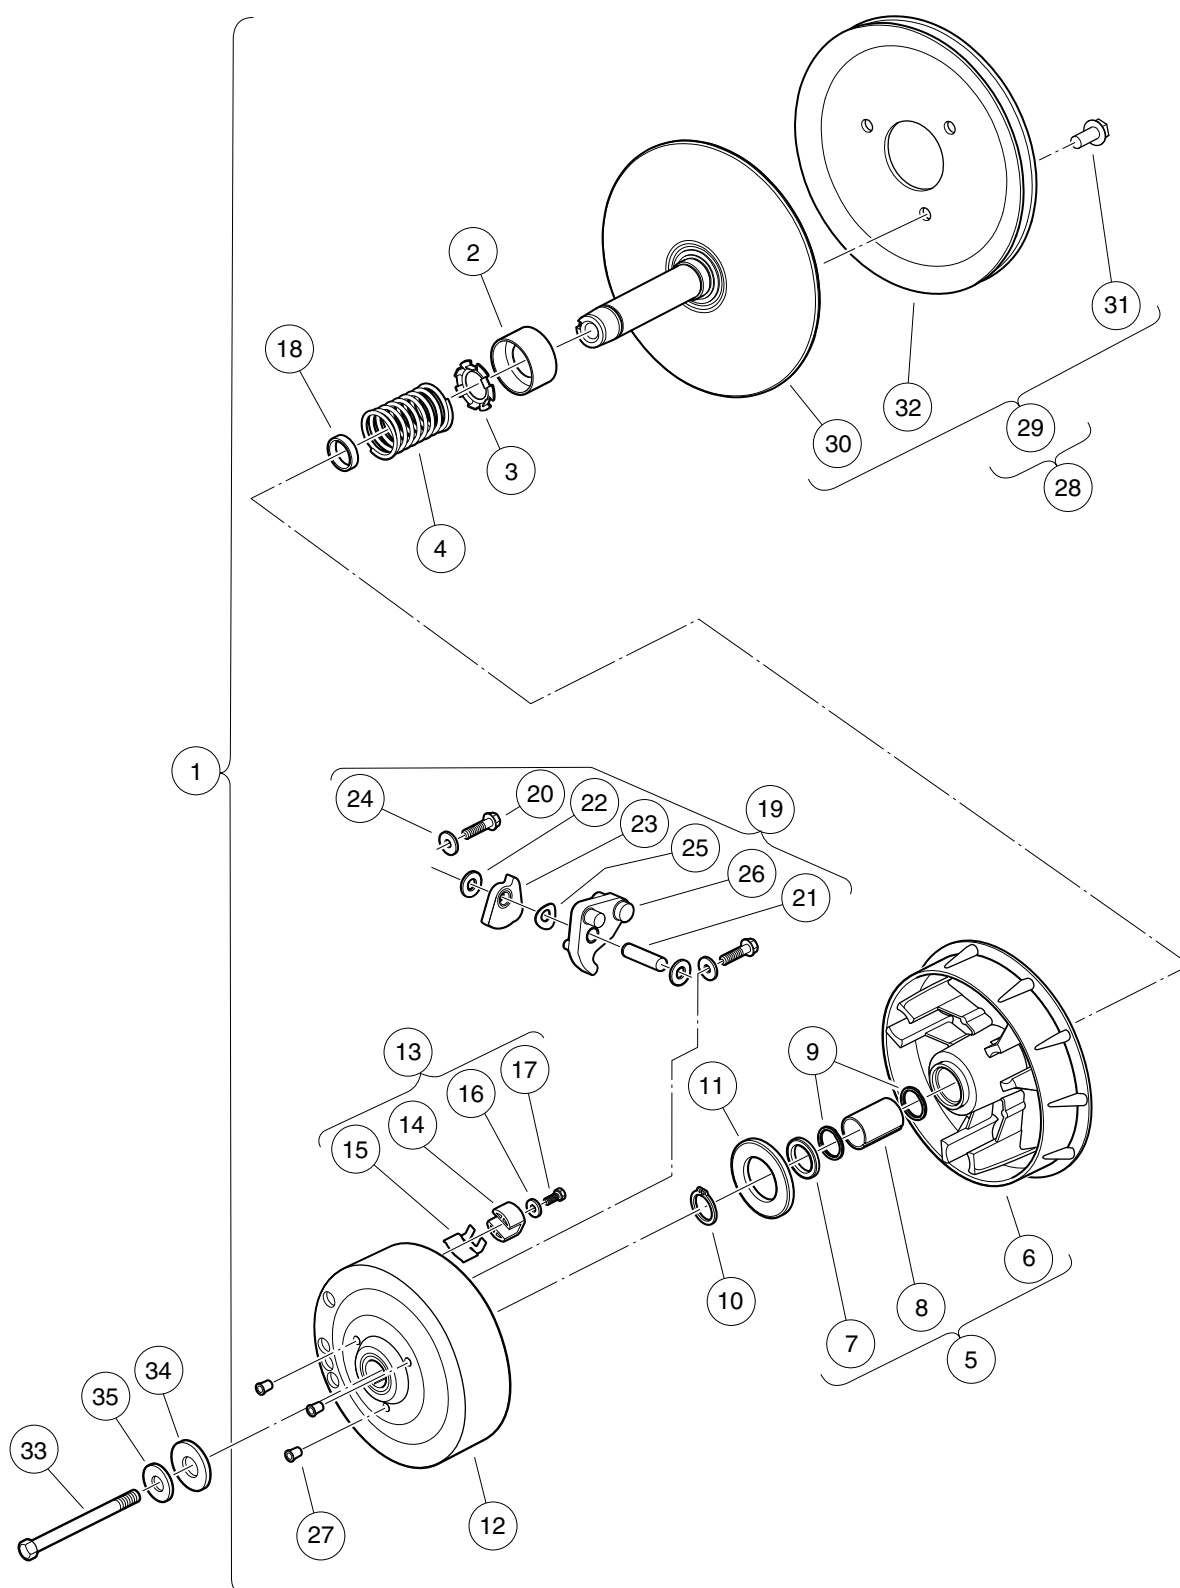


000217-006

DRIVE CLUTCH – TURF/CARRYALL 1, 2, AND 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101833902</u>	Clutch, Drive (includes items 2 through 28)	1
2	<u>1014049</u>	Bearing, Idler	1
3	<u>1014050</u>	Retainer, Spring	1
4	<u>1014051</u>	Spring, Drive Clutch	1
5	<u>1014052</u>	Movable-Face Assembly (includes items 6 through 8)	1
6	N/A	Drive Clutch Movable Face	1
7	<u>1014055</u>	Retainer	1
8	N/A	Bushing, Split, Drive Clutch	1
9	<u>1014056</u>	Ring, Spiral Backup	2
10	<u>1014057</u>	Ring, 0.810" Internal Retaining	1
11	<u>1014058</u>	Thrust Washer	1
12	<u>1014059</u>	Drive Hub Assy, Drive Clutch	1
13	<u>1014453</u>	Kit, Drive Clutch Button (includes items 14 through 17)	1
14	<u>1014062</u>	Driver, Drive Clutch	3
15	<u>1014287</u>	Spring, Drive Button	3
16	<u>183</u>	Washer, #10, Type A, Flat	3
17	<u>8450</u>	Screw, #10-24 X 0.50, Hex-Head	3
18	<u>1016289</u>	Spacer, Fixed Face Shaft	1
19	<u>1016801</u>	Kit, Drive Clutch Weight (includes items 20 through 26)	1
20	<u>1014063</u>	Screw, 1/4-20 X 1.00, Hex Head	6
21	N/A	Pin, Dowel, 0.3752 x 1.50	3
22	<u>1014065</u>	Washer, Flat, 0.38" ID, Delrin	6
23	N/A	Clutch Weight, Secondary	3
24	N/A	Washer	6
25	<u>1016201</u>	Washer, Wave	3
26	N/A	Weight, Primary	3
27	<u>101925601</u>	Plug, Drive Clutch	3
28	<u>101929802</u>	Kit, Fxd Face Dr Asm Fe290/350 (includes item 29)	1
29	N/A	Assembly, Fixed-Face Drive (includes items 30 through 32)	1
30	N/A	Fixed Face Assembly, Drive Clutch	1
31	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	3
32	N/A	Pulley, Clutch	1
33	<u>103345701</u>	Screw 3/8-24x5.5 Hex Loc Ptch	1
34	<u>334</u>	Washer, 3/8, Type A, Flat	1
35	<u>808</u>	Washer, 3/8 Type B Flat	1

11

G

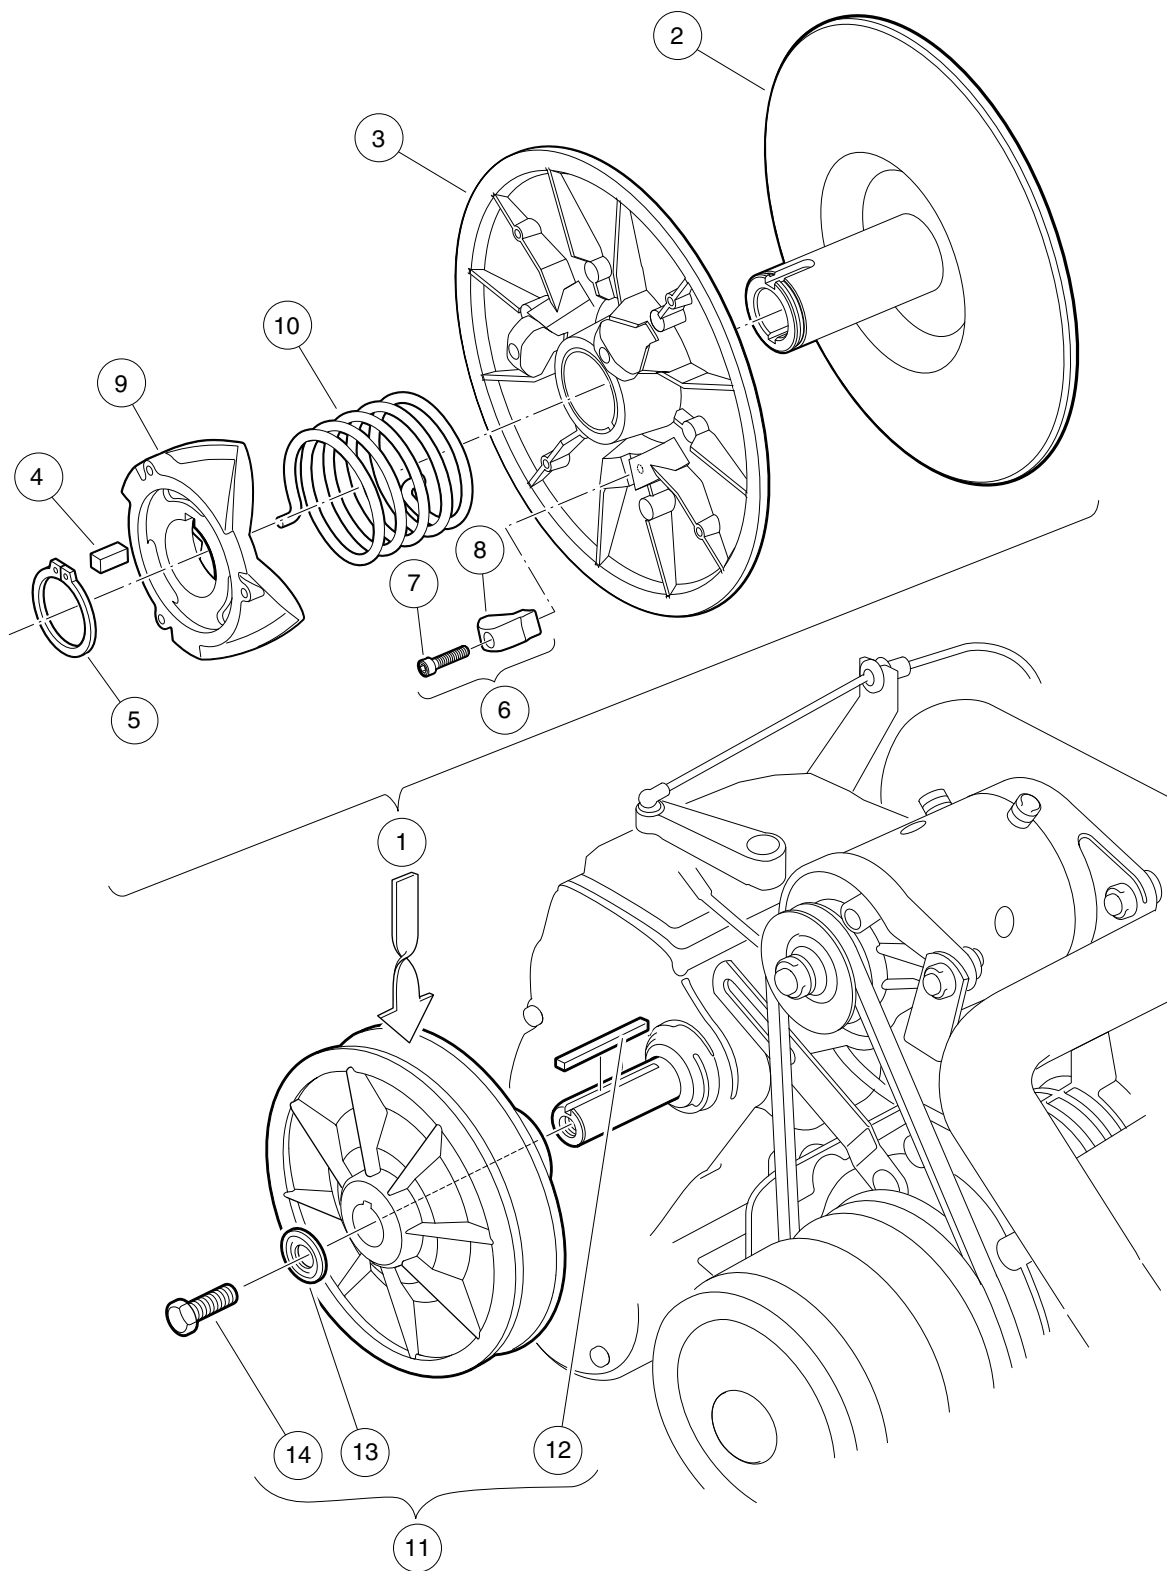

000219-001

DRIVEN CLUTCH – TURF/CARRYALL 1, 2, AND 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101834001</u>	Assembly, Driven Clutch (includes items 2 through 10)	1
2	<u>1014070</u>	Fixed Face Assy, Driven Clutch	1
3	<u>1014072</u>	Movable-Face Assembly with Bushing	1
4	<u>1014078</u>	Key, Driven Clutch	1
5	<u>1014080</u>	Ring, Retaining	1
6	<u>1014454</u>	Kit, Driven Clutch Button (includes items 7 and 8)	1
7	<u>1012836</u>	Screw, #8-32 X 3/4, Socket-Head Cap	3
8	N/A	Button, Drive	3
9	<u>1017686</u>	Cam, Driven Clutch	1
10	<u>101836201</u>	Spring, Driven Clutch, Reversed	1
11	<u>AM10419</u>	Kit, Clutch Repair (includes items 12 through 14)	1
12	<u>101833401</u>	Key, 3/16 Sq X 1.50"	1
13	<u>102155801</u>	Washer, Driven Clutch	1
14	<u>102242101</u>	Screw, 5/16-18 X 3/4 Hex-Head with Patch	1

11
G

UNITIZED TRANSAXLE – GASOLINE VEHICLES

12


G

FORWARD/REVERSE SHIFTER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102376001</u>	Knob, FNR, Shifter	1
2	<u>102969901</u>	Asm, Shifter, FNR (includes items 3 through 20)	1
3	<u>1010028</u>	Washer, 1/2 Type A Flat	1
4	<u>1013061</u>	Locknut, #10-32 Nylon Insert	1
5	<u>1014807</u>	Switch, Limit	2
6	<u>1014808</u>	Switch, Limit	1
7	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2
8	<u>102526201</u>	Stud, Thread, 1/4-28	1
9	<u>102616701</u>	Locknut, M10x1.5 Nylon Insert	1
10	<u>102684602</u>	Shoulder Bolt, M12 X 25.0	1
11	<u>102969401</u>	Bracket, Shifter, FNR	1
12	<u>102969801</u>	Weldment, Shift Lever, FNR	1
13	<u>103173301</u>	Bushing, Greaseless, 12mm Id	1
14	<u>103177401</u>	Washer, Thrust, Shifter, FNR	1
15	<u>103192701</u>	Spring, Comp, .97 Od X.75 L	1
16	<u>103369501</u>	Cam, Limit Switch, Fnr Shifter	1
17	<u>8057</u>	Nut, #4-40 Hex Machine	2
18	<u>8058</u>	Lockwasher, #4 Split	2
19	<u>8104</u>	Screw, #10-32 X .75 Rd Hd Mach	1
20	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1

12

G

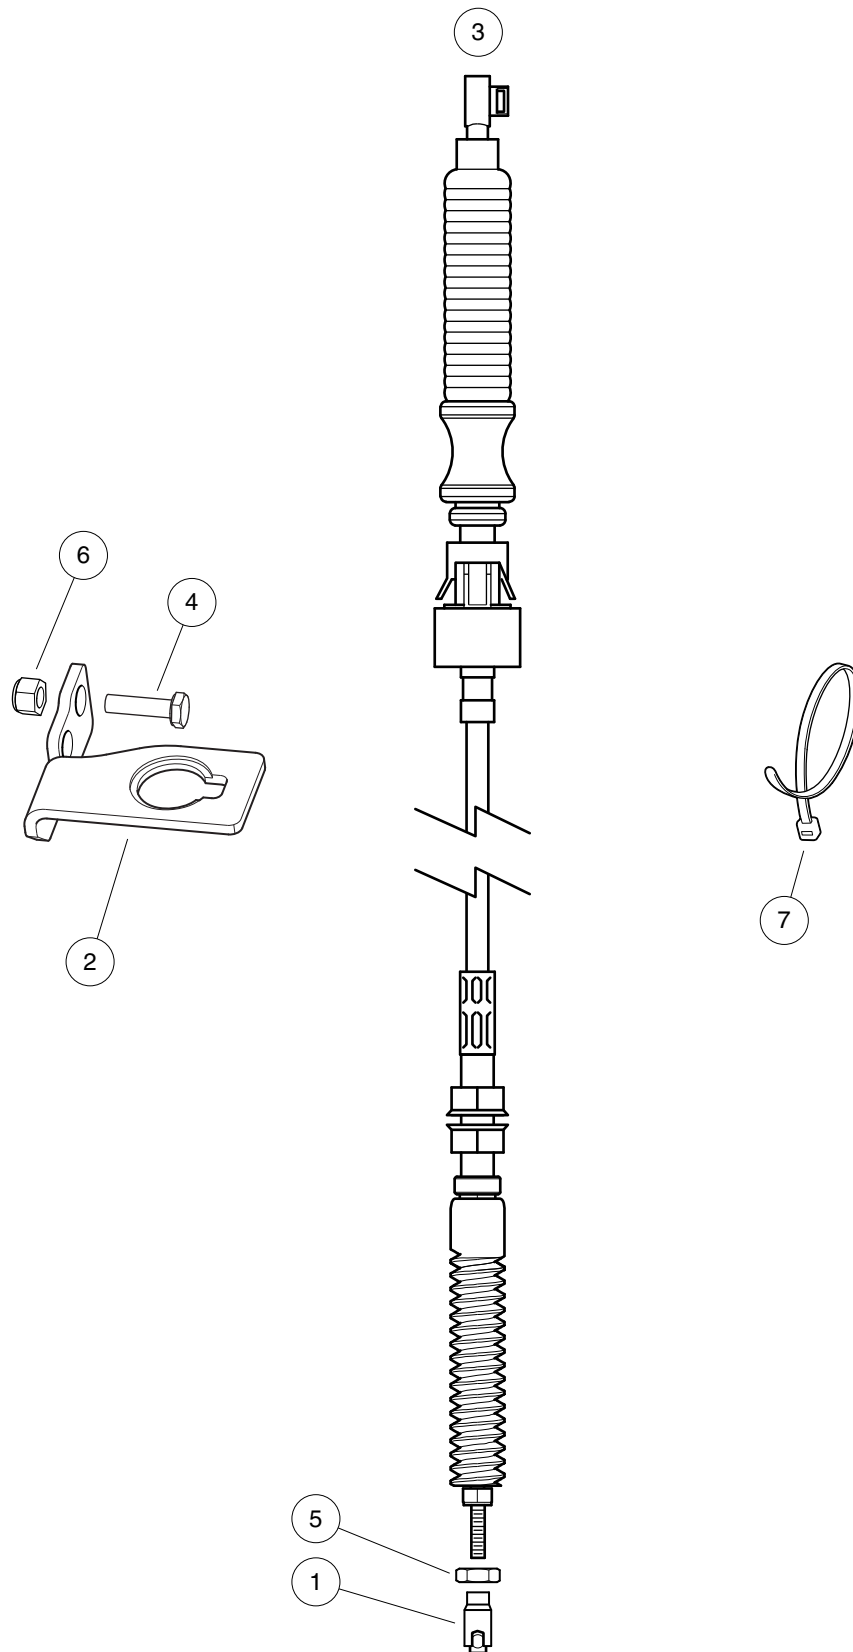


001071-001

SHIFTER CABLE – TURF/CARRYALL 1

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012333</u>	Joint, #10-32 Ball	1
2	<u>103295101</u>	Brkt, Spt, Cable End, Fnr	1
3	<u>103295201</u>	Cable, Trans, Ball End, 1550mm	1
4	<u>304</u>	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
5	<u>7893</u>	Nut, #10-32 Hex	1
6	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2
7	<u>8639</u>	Tie Wrap, 11" Nylon	A/R

12

G

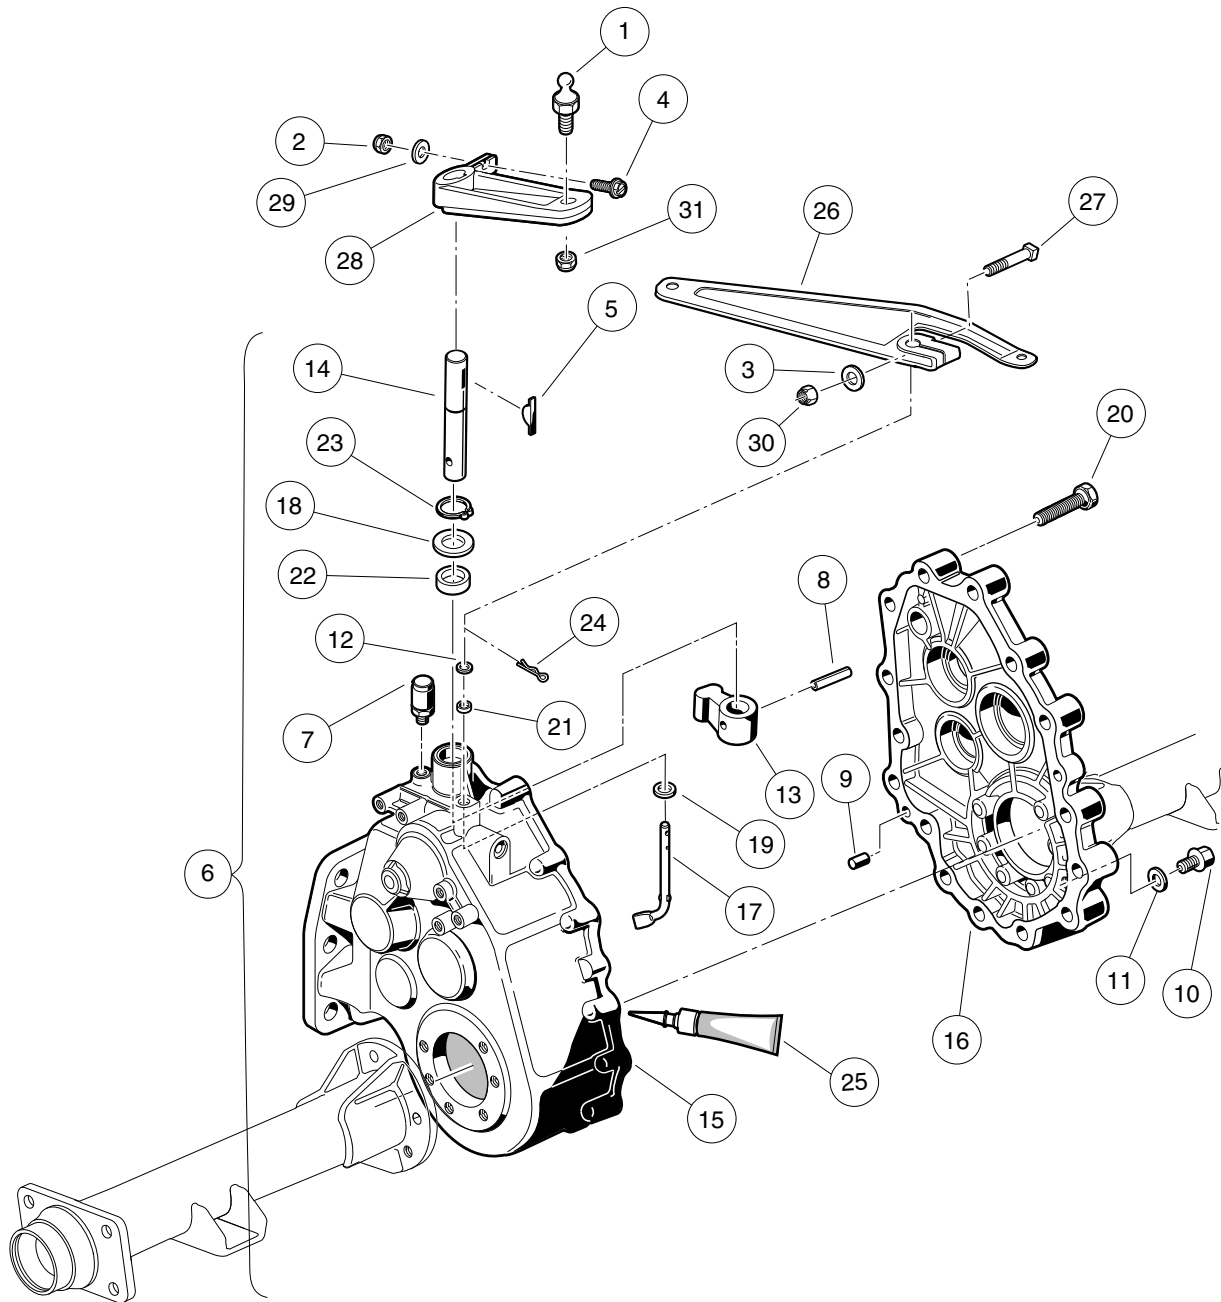


000220-005

KAWASAKI TRANSAXLE – GEAR CASES AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010954</u>	Stud, Ball, 1/4-28 X 0.560	1
2	<u>1013061</u>	Locknut, #10-32 Nylon Insert	1
3	<u>1014007</u>	Washer, 1/4, Flat	1
4	<u>1017082</u>	Screw, #10-32 X 0.75, Hex-Head Machine	1
5	<u>1017231</u>	Key, Woodruff	1
6	<u>101833601</u>	Transaxle, 11.77 Ratio (includes items 7 through 25)	1
7	<u>1012711</u>	Breather	1
8	<u>1012752</u>	Roll Pin	1
9	<u>1012896</u>	Pin, Dowel	2
10	<u>1013760</u>	Fill Plug	2
11	<u>1016432</u>	Gasket, Drain Plug	1
12	<u>1016513</u>	Washer, M6 Flat	1
13	<u>101890101</u>	Lever, Drive Selector	1
14	<u>101890201</u>	Shaft, Drive Selector	1
15	<u>101890501</u>	Gear Case (driver side)	1
16	<u>101890601</u>	Gear Case (passenger side)	1
17	<u>101891301</u>	Arm Pivot	1
18	<u>101892901</u>	Washer	1
19	<u>101893801</u>	Washer	1
20	<u>101926901</u>	Screw, M8-1.25 X 40mm Hex-Head	15
21	<u>101927101</u>	Seal, Oil	1
22	<u>101927201</u>	Seal, Oil	1
23	<u>101927301</u>	Snap Ring	1
24	<u>101928601</u>	Pin, Cotter	1
25	<u>101928701</u>	Liquid Gasket (Transaxle case)	1
26	<u>101834801</u>	Arm, Governor	1
27	<u>101886101</u>	Screw, 1/4-20 X 1.00, Square-Head	1
28	<u>102515401</u>	Lever, Transmission Shift	1
29	<u>183</u>	Washer, #10, Type A, Flat	1
30	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	1
31	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1
Note: Kawasaki transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube.			

12

G

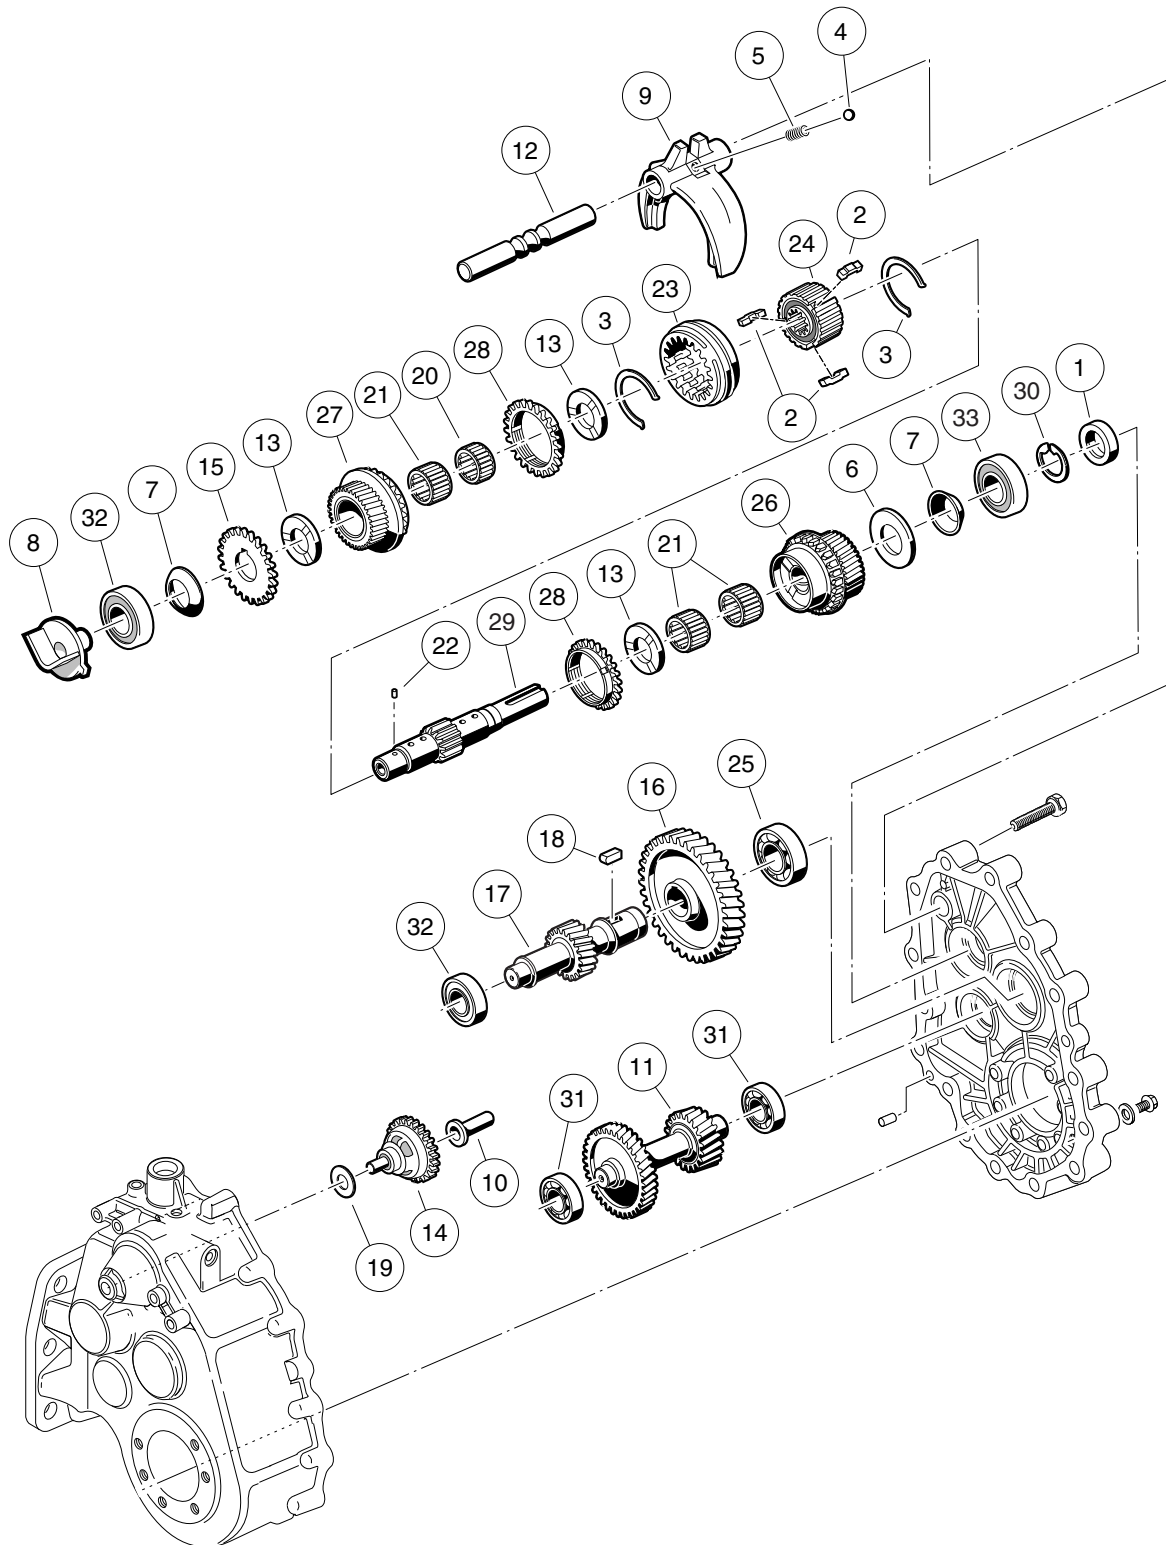


000221-001

KAWASAKI TRANSAXLE – F&R TRANSMISSION AND GEAR REDUCTION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012714</u>	Oil Seal	1
2	<u>1012740</u>	Synchro Insert	3
3	<u>1012741</u>	Synchro Spring	2
4	<u>1012747</u>	Shifter Ball	1
5	<u>1012748</u>	Shifter Spring	1
6	<u>1016337</u>	Washer, Thrust	1
7	<u>1016338</u>	Washer, Spring	2
8	<u>101889401</u>	Guide	1
9	<u>101890001</u>	Fork - Shift	1
10	<u>101891601</u>	Sleeve, Governor	1
11	<u>101891901</u>	Gear, Cluster	1
12	<u>101892001</u>	Rod, Shift	1
13	<u>101892201</u>	Plate, Thrust	3
14	<u>101892301</u>	Governor Assembly	1
15	<u>101892401</u>	Gear, Spur	1
16	<u>101892501</u>	Gear, Helical (61 Tooth)	1
17	<u>101892601</u>	Gear, Helical (17 Tooth)	1
18	<u>101893201</u>	Key Sunk	1
19	<u>101893901</u>	Washer	1
20	<u>101927501</u>	Needle Bearing	1
21	<u>101927601</u>	Needle Bearing	3
22	<u>101927701</u>	Pin, .116" Dia X 0.264 Dowel	1
23	<u>101927901</u>	Sleeve, Synchro	1
24	<u>101928001</u>	Hub, Synchro Clutch	1
25	<u>101928101</u>	Bearing, Ball	1
26	<u>101980801</u>	Gear Assembly, 16-Degree Synchro (25 Tooth)	1
27	<u>101980901</u>	Gear Assembly, 16-Degree Rear Synchro (28 Tooth)	1
28	<u>101981001</u>	Ring, 16-Degree Synchronizer	2
29	<u>102453001</u>	Shaft, Trans, with Circlip	1
30	<u>102453101</u>	Circlip	1
31	<u>7335</u>	Bearing	2
32	<u>AM10080</u>	Bearing, Ball, Sealed	2
33	<u>AM10081</u>	Bearing, Ball, Sealed	1
Note: To identify your transaxle, locate the serial number decal on the axle			

12

G

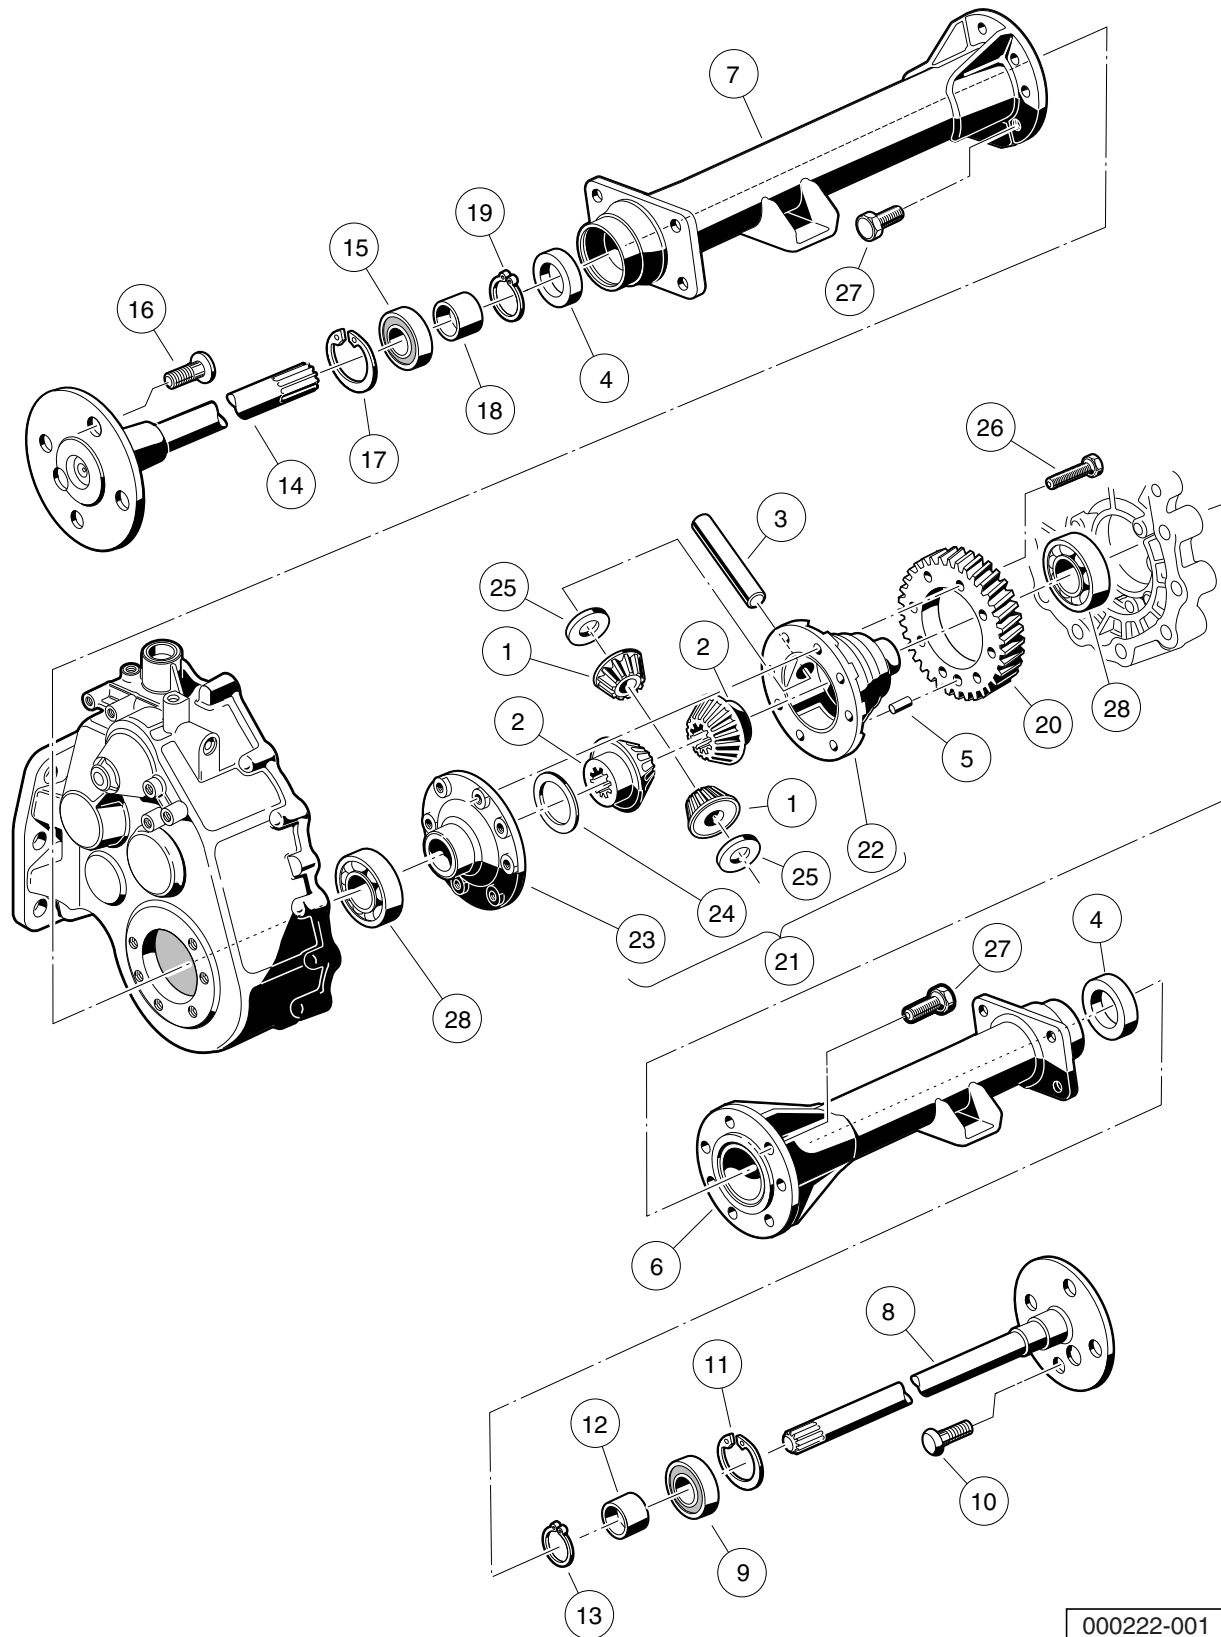


000222-001

KAWASAKI TRANSAXLE – DIFFERENTIAL AND AXLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013770</u>	Differential Idler Gear	2
2	<u>1013771</u>	Gear, Differential	2
3	<u>1013772</u>	Pin, Differential	1
4	<u>1013794</u>	Axle Shaft Oil Seal	2
5	N/A	Dowel Pin	1
6	<u>101890901</u>	Axle Tube (Passenger Side)	1
7	<u>101891001</u>	Axle Tube (Driver Side)	1
8	<u>101891401</u>	Axle Assembly, Passenger Side (includes items 9 through 13)	1
9	<u>1011291</u>	Outer Axle, Tube Bearing	1
10	<u>1013787</u>	Lug Stud	4
11	<u>1013792</u>	Circlip Type C	1
12	<u>1014207</u>	Bushing	1
13	<u>1016672</u>	Retaining Ring	1
14	<u>101891501</u>	Axle Assembly, Driver-Side (includes items 15 through 19)	1
15	<u>1011291</u>	Outer Axle, Tube Bearing	1
16	<u>1013787</u>	Lug Stud	4
17	<u>1013792</u>	Circlip Type C	1
18	<u>1014207</u>	Bushing	1
19	<u>1016672</u>	Retaining Ring	1
20	<u>101892701</u>	Gear, Helical	1
21	<u>101910501</u>	Kit, Differential Gear Case (includes items 22 through 25)	1
22	<u>1013768</u>	Differential Gear Case, Left-Hand	1
23	<u>1013769</u>	Differential Gear Case, Right-Hand	1
24	<u>1013773</u>	Plate, Thrust (Differential Gear)	1
25	<u>1013774</u>	Plate, Thrust (Idler Gear)	2
26	<u>101928301</u>	Screw, M8-1.25 X 35mm Hex Head	8
27	<u>102031901</u>	Bolt, M10 X 1.5 X 30mm	14
28	<u>7330</u>	Inner Axle Tube Bearing	2
Note: To identify your transaxle, locate the serial number decal on the axle			

12

G

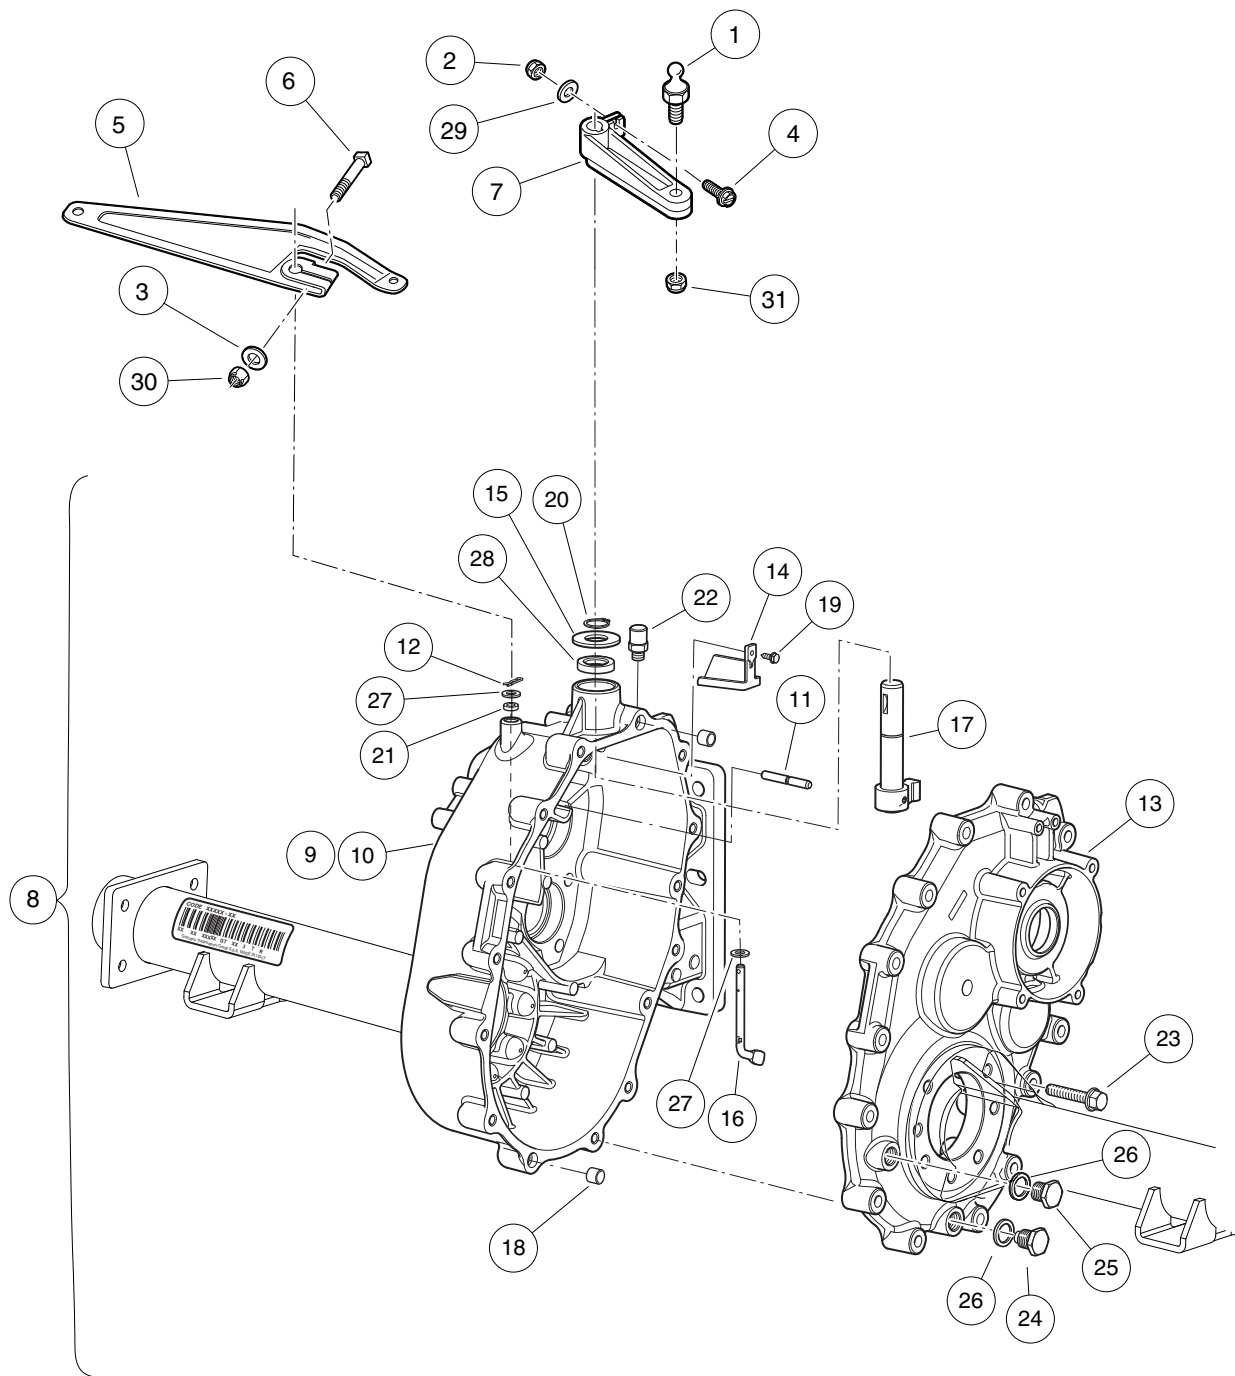


000680-009

GRAZIANO TRANSAXLE – GEAR CASES AND LEVERS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010954</u>	Stud, Ball, 1/4-28 X 0.560	1
2	<u>1013061</u>	Locknut, #10-32 Nylon Insert	1
3	<u>1014007</u>	Washer, 1/4, Flat	1
4	<u>1017082</u>	Screw, #10-32 X 0.75, Hex-Head Machine	1
5	<u>101834801</u>	Arm, Governor	1
6	<u>101886101</u>	Screw, 1/4-20 X 1.00, Square-Head	1
7	<u>102515401</u>	Lever, Transmission Shift	1
8	<u>102896801</u>	Transaxle, Unitized, Graziano (includes items 9 through 28)	1
9	<u>102896901</u>	Gear Box (Driver-Side) (includes items 10 and 11)	1
10	N/A	Gear Box	1
11	N/A	Pin, Speed Governor	1
12	<u>102897401</u>	Pin, Split	1
13	<u>102897501</u>	Cover, Gear Box (Passenger-Side)	1
14	<u>102897601</u>	Conveyor, Oil	1
15	<u>102897801</u>	Washer, Thrust	1
16	<u>102897901</u>	Lever, Speed Governor	1
17	<u>102898201</u>	Unit, Drive Selector	1
18	<u>102899101</u>	Dowel	2
19	<u>102899201</u>	Screw	1
20	<u>102899401</u>	Ring, Snap	1
21	<u>102899701</u>	Grommet	1
22	<u>102899801</u>	Breather	1
23	<u>102900001</u>	Screw	15
24	<u>102900101</u>	Drain Plug, Magnetic	1
25	<u>102900201</u>	Fill Plug	1
26	<u>102900301</u>	Seal	2
27	<u>102900601</u>	Washer	2
28	<u>102900901</u>	Grommet	1
29	<u>183</u>	Washer, #10, Type A, Flat	1
30	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	1
31	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1
Note: Graziano transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube.			

12


G



GRAZIANO TRANSAXLE – F&R TRANSMISSION AND GEAR REDUCTION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102897201</u>	Synchronizer, Complete	1
2	<u>102897301</u>	Fork, Complete	1
3	<u>102897701</u>	Assembly, Speed Governor	1
4	<u>102898001</u>	Washer, Belleville	2
5	<u>102898101</u>	Bearing, Thrust	1
6	<u>102898301</u>	Bearing, Thrust	3
7	<u>102898401</u>	Washer, Thrust	1
8	<u>102898501</u>	Gear, Speed Governor	1
9	<u>102898601</u>	Shaft, Main	1
10	<u>102898701</u>	Shaft, Secondary	1
11	<u>102898801</u>	Shaft, Reverse Gear	1
12	<u>102898901</u>	Gear, Complete, 25t	1
13	<u>102899001</u>	Gear, Complete, 28t	1
14	<u>102899301</u>	Pin	1
15	<u>102899501</u>	Cage, Roller	1
16	<u>102899601</u>	Cage, Roller	3
17	<u>102899901</u>	Grommet	1
18	<u>102900401</u>	Bearing	2
19	<u>102900501</u>	Bearing, 62 Od X 30 Id X 16	1
20	<u>102900701</u>	Bearing	1
21	<u>102901001</u>	Bearing	1
22	<u>102901101</u>	Bearing	1
Note: To identify your transaxle, locate the serial number decal on the axle tube.			

12
G

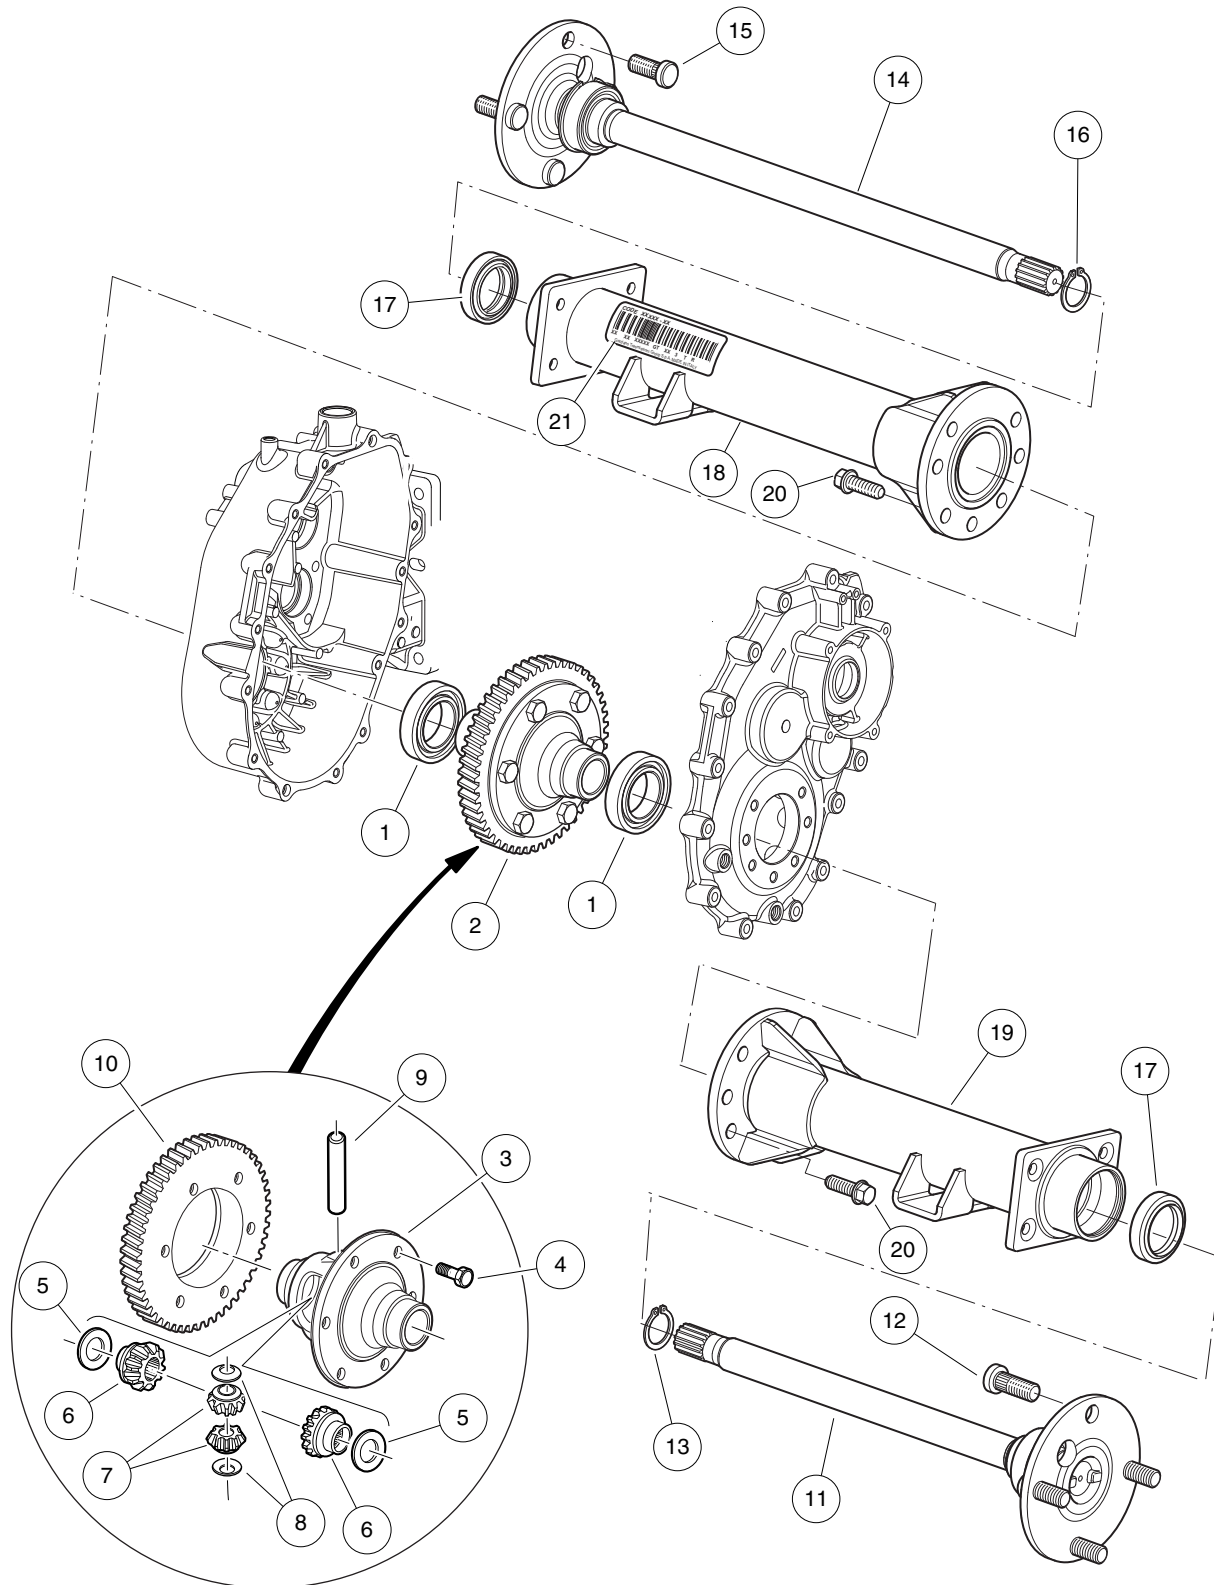

000681-002

GRAZIANO TRANSAXLE -DIFFERENTIAL AND AXLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102900801</u>	Bearing, 68 Od X 40 Id X 15	2
2	<u>102902001</u>	Assembly, Differential (includes items 3 through 10)	1
3	<u>102901201</u>	Box, Differential	1
4	<u>102901301</u>	Screw, M10 X 25	6
5	<u>102901401</u>	Ring, Sleeve	2
6	<u>102901501</u>	Gear, Sun	2
7	<u>102901601</u>	Gear, Planetary	2
8	<u>102901701</u>	Ring, Sleeve	2
9	<u>102901801</u>	Pin	1
10	<u>102901901</u>	Gear	1
11	<u>102902101</u>	Shaft, Axle, Short, Complete (Passenger-Side) (includes items 12 and 13)	1
12	<u>102902301</u>	Bolt, Stud	4
13	<u>102902401</u>	Snap Ring	1
14	<u>102902201</u>	Shaft, Axle, Long, Complete (Driver-Side) (includes items 15 and 16)	1
15	<u>102902301</u>	Bolt, Stud	4
16	<u>102902401</u>	Snap Ring	1
17	<u>102902501</u>	Seal, Lip	2
18	<u>102902601</u>	Axle Tube, (Driver-Side)	1
19	<u>102902701</u>	Axle Tube, (Passenger-Side)	1
20	<u>102902801</u>	Screw, M10 X 30	14
21	N/A	Tag, Serial	1
Note: To identify your transaxle, locate the serial number decal on the axle tube.			

12

G


12

G

ELECTRICAL SYSTEM – ELECTRIC VEHICLES

13

E

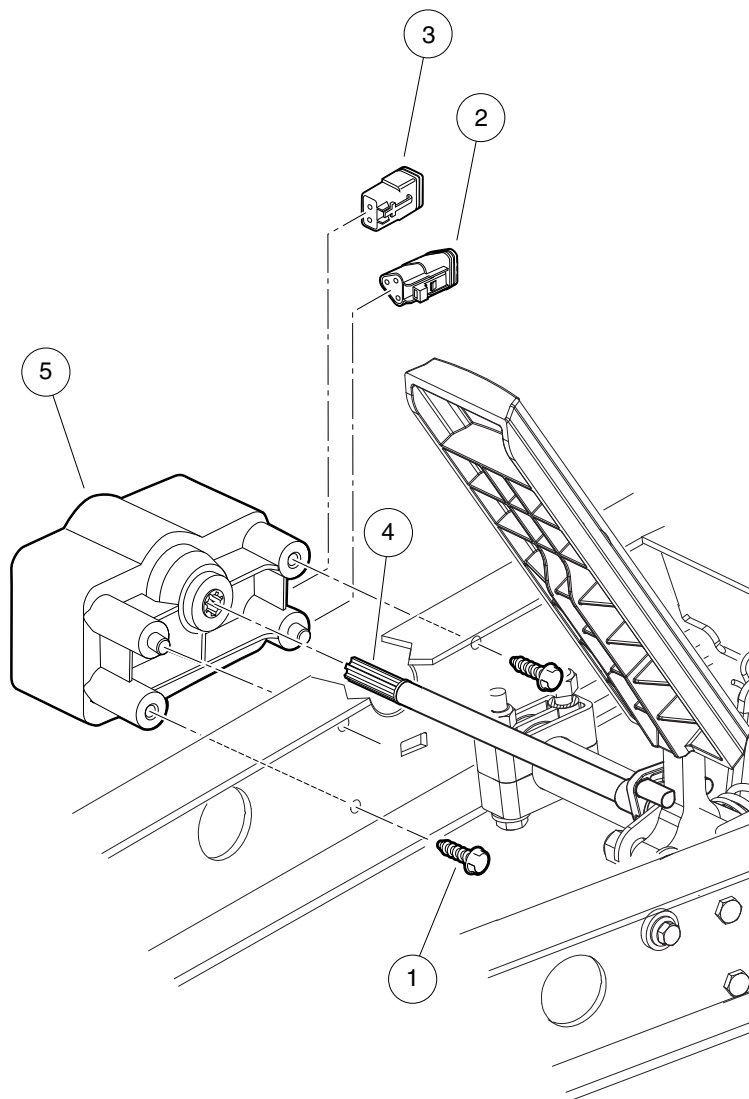

001070-001

MOTOR CONTROLLER OUTPUT REGULATOR (MCOR)


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625, Hi-Lo	2
2	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
3	<u>101936801</u>	Kit, 2-Pin Wedge Lock	1
4	102101001	Bar, Drive, Cast	1
5	<u>102101101</u>	MCOR	1

13

E

13

E

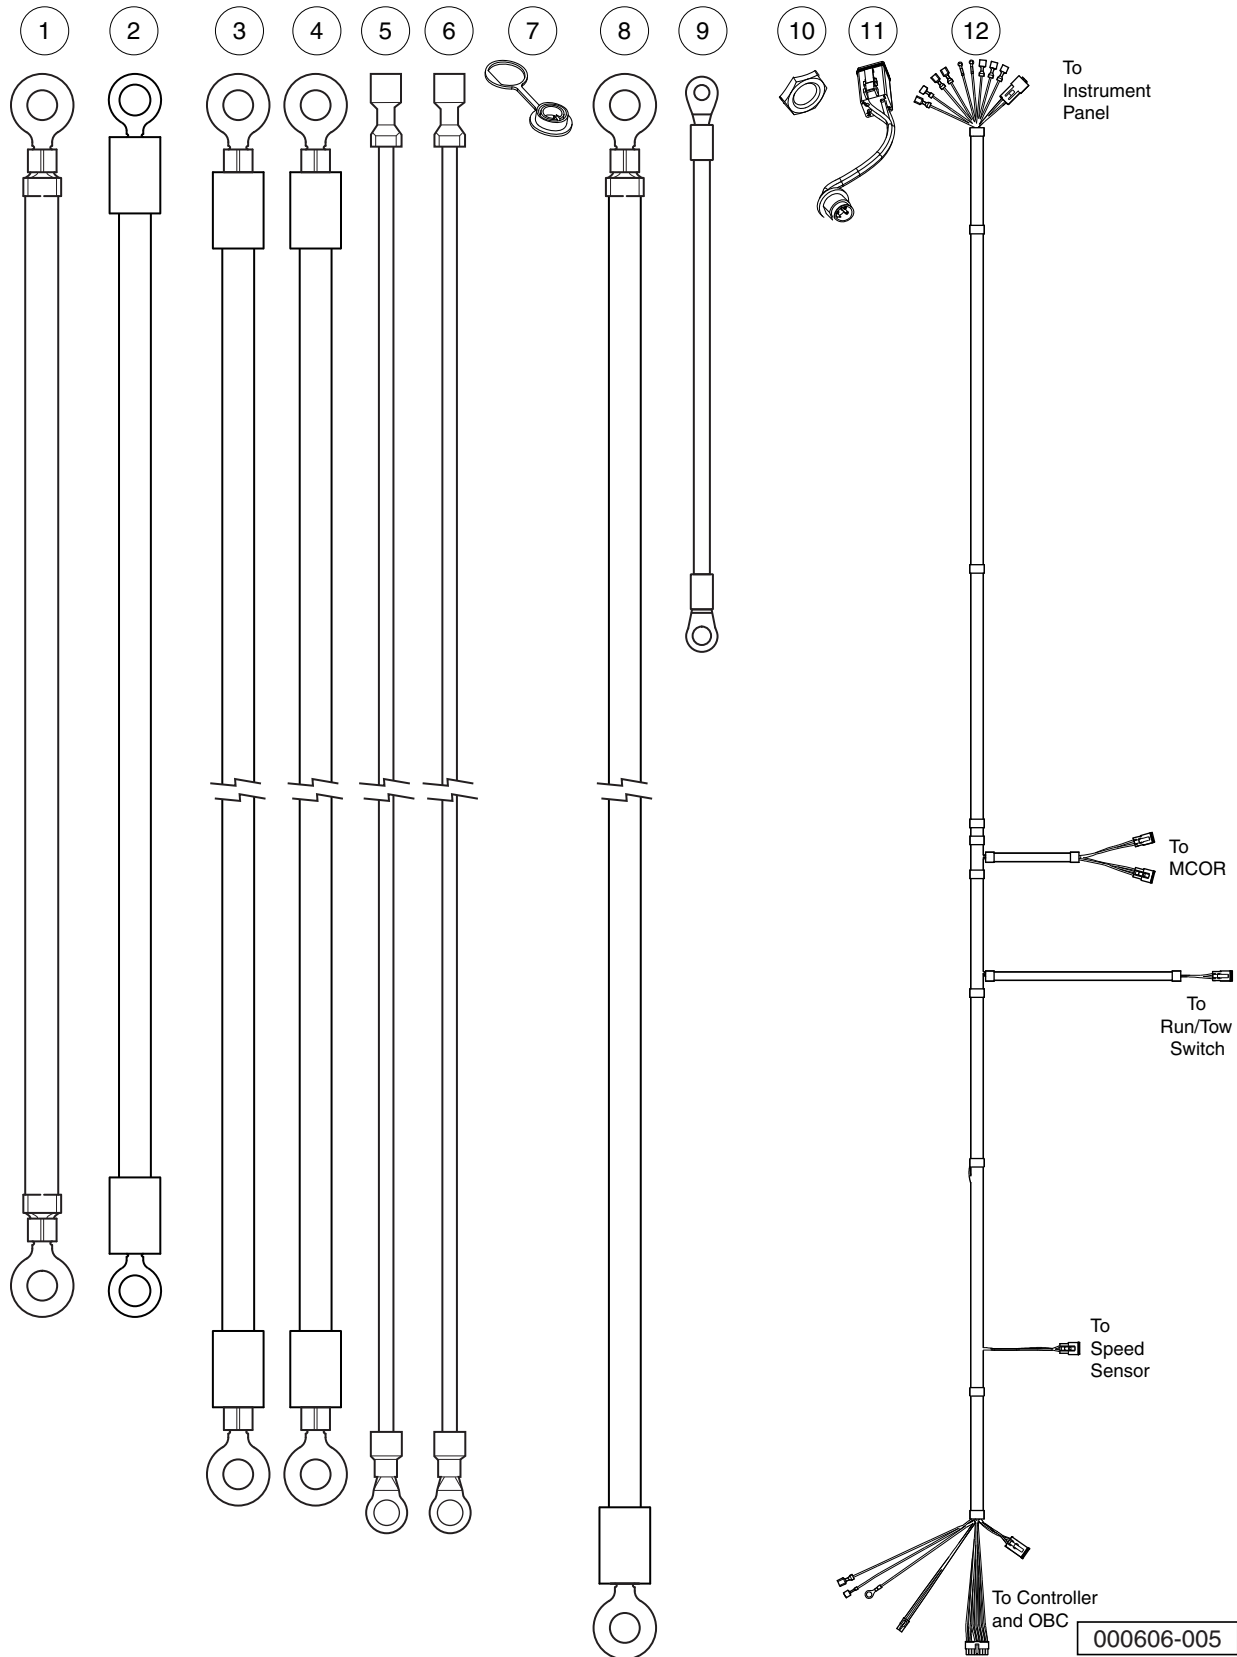

WIRING – TURF/CARRYALL 1 ELECTRIC


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101795701</u>	Asm, Wire, #6blk, 15 In	5
2	<u>101903001</u>	Wire Assembly #6 Yellow	1
3	<u>101968701</u>	Wire Assy, #6 White	1
4	<u>101978001</u>	Wire Assy, #6 Green	1
5	<u>101978101</u>	Asm, Wire, #10 Orange 5/16	1
6	<u>101978201</u>	Asm, Wire, #10 Blue 5/16	1
7	<u>102196901</u>	Dust Cap	1
8	<u>102199601</u>	Wire Asm, #6 Red, 37.7	1
9	<u>102263601</u>	Wire Assy, #10 Black	1
10	<u>102572401</u>	Nut, Diagnostic Port, Prec	1
11	<u>103218601</u>	Harness, Diagnostic Port	1
12	<u>103221801</u>	Asm, Wire Harness, Electric	1

13

E

13

E

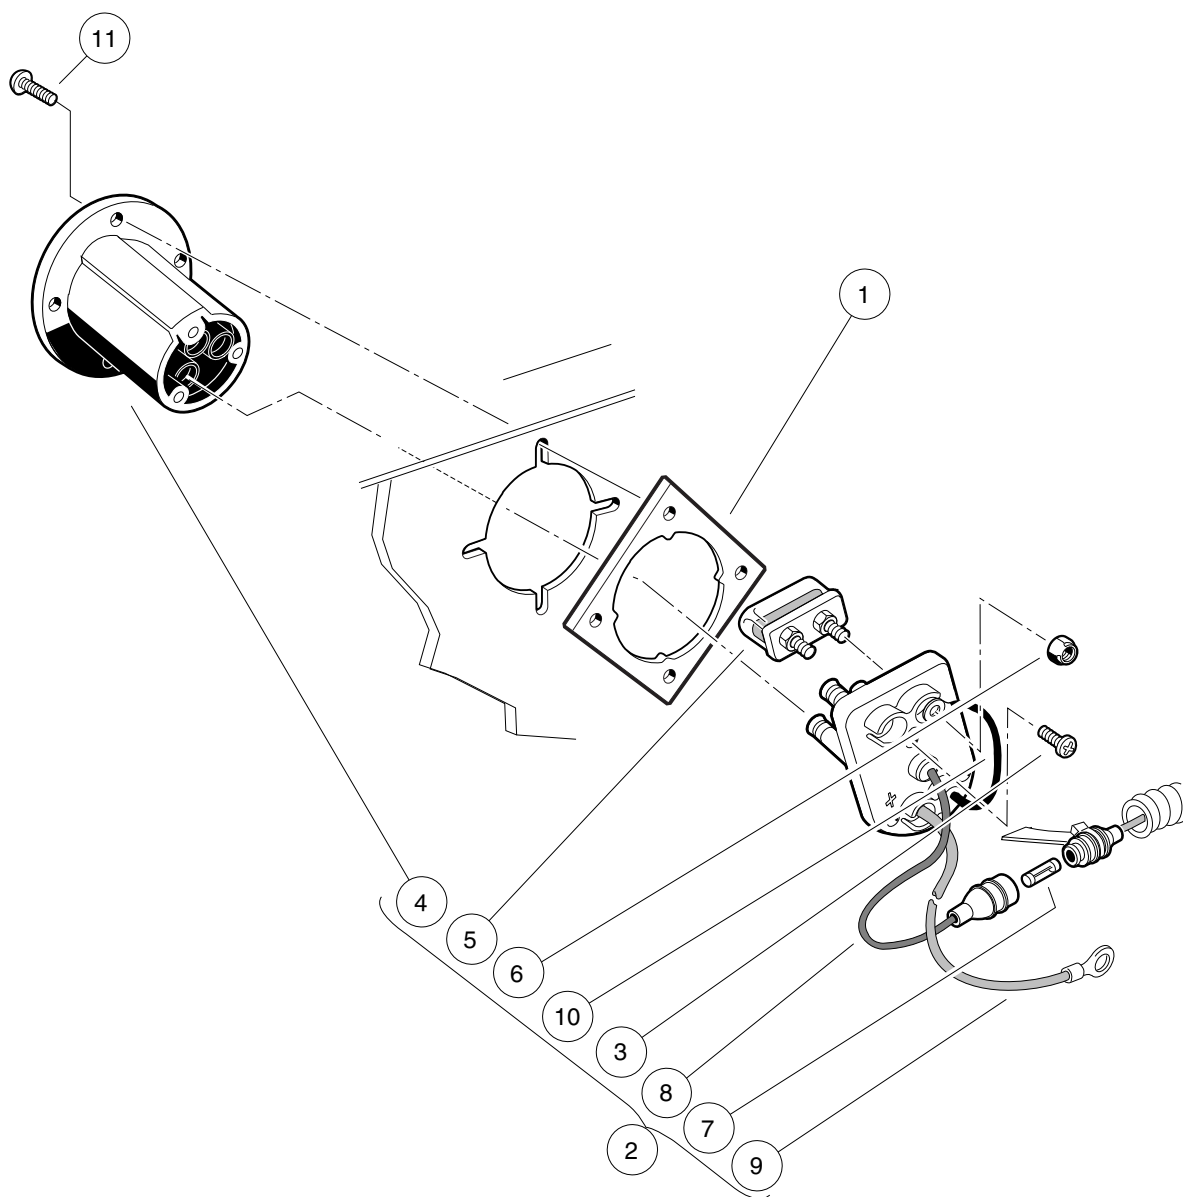


000369-001

BATTERY CHARGER RECEPTACLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101801001</u>	Plate, Receptacle Backing	1
2	<u>101802101</u>	Fuse and Receptacle Assembly (includes items 3 through 10)	1
3	<u>1017705</u>	Screw, #8 X 5/8 Phillips Pan-Head Type AB	3
4	<u>101796501</u>	Receptacle	1
5	<u>101796801</u>	Fuse Assembly (includes item 6)	1
6	<u>1013061</u>	Locknut, #10-32 Nylon Insert	2
7	<u>101894901</u>	Fuse, 3/8-Amp	1
8	N/A	Wire Assembly, Sense Lead, Gray	1
9	N/A	Wire Assembly, #10 Red	1
10	N/A	Wire Assembly, #10 Black	1
11	<u>101832001</u>	Screw, #7-19 X 0.625 Phillips Pan-Head Tap	4

13


E

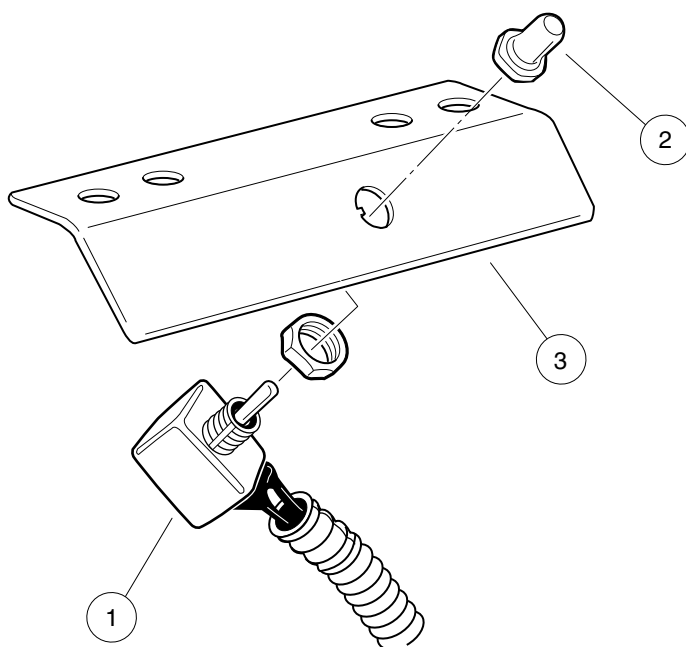

000605-002

TOW/RUN SWITCH – IQ SYSTEM


ITEM	PART NO.	DESCRIPTION	QTY	13
		1 2 3 4		
1	<u>101908101</u>	Switch Assembly, Tow/Run	1	
2	<u>101908401</u>	Boot, Switch	1	E
3	<u>101922501</u>	Bracket, Tow/Run Switch Mounting	1	

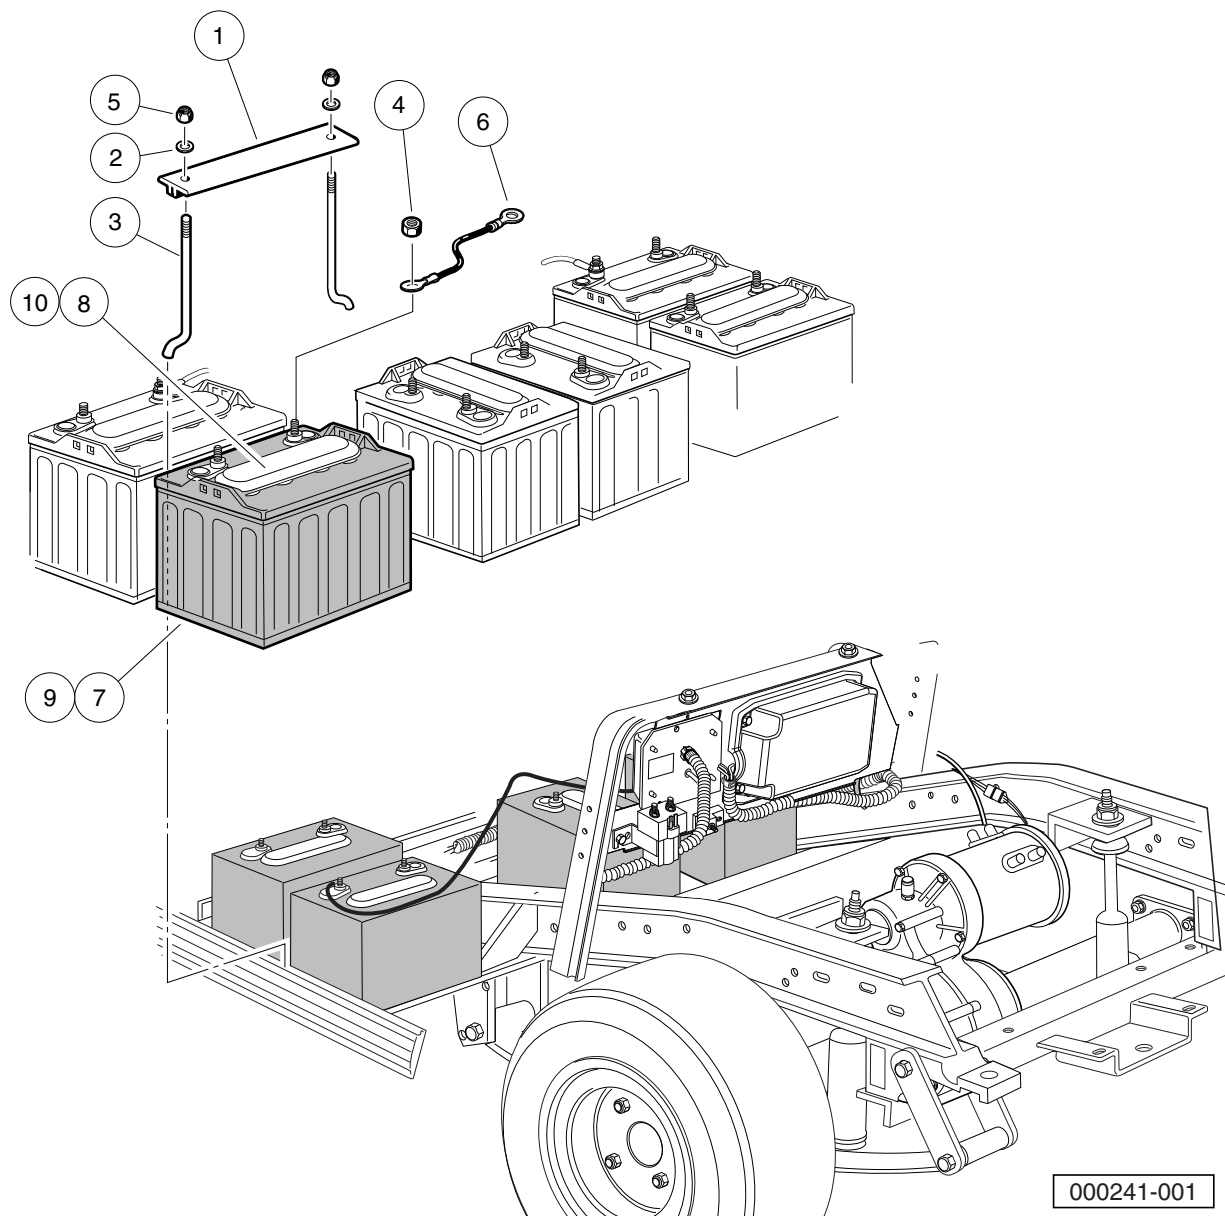

BATTERIES, 8-VOLT, TROJAN T890

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101090801</u>	Hold-Down, Battery	3
2	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	6
3	<u>1013683</u>	J-Bolt	6
4	<u>1014304</u>	Nut, 5/16-18 Stainless-Steel Hex	12
5	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	6
6	<u>101795701</u>	Asm, Wire, #6blk, 15 In	5
7	<u>101964201</u>	Battery, 8v Trojan T890 (Wet) (includes item 8)	6
8	<u>101797801</u>	Cap, 4-Gang Battery	1
9	<u>101964202</u>	Battery, 8v Trojan T890 (Dry, also known as moist) (includes item 10)	6
10	<u>101797801</u>	Cap, 4-Gang Battery	1

13
E

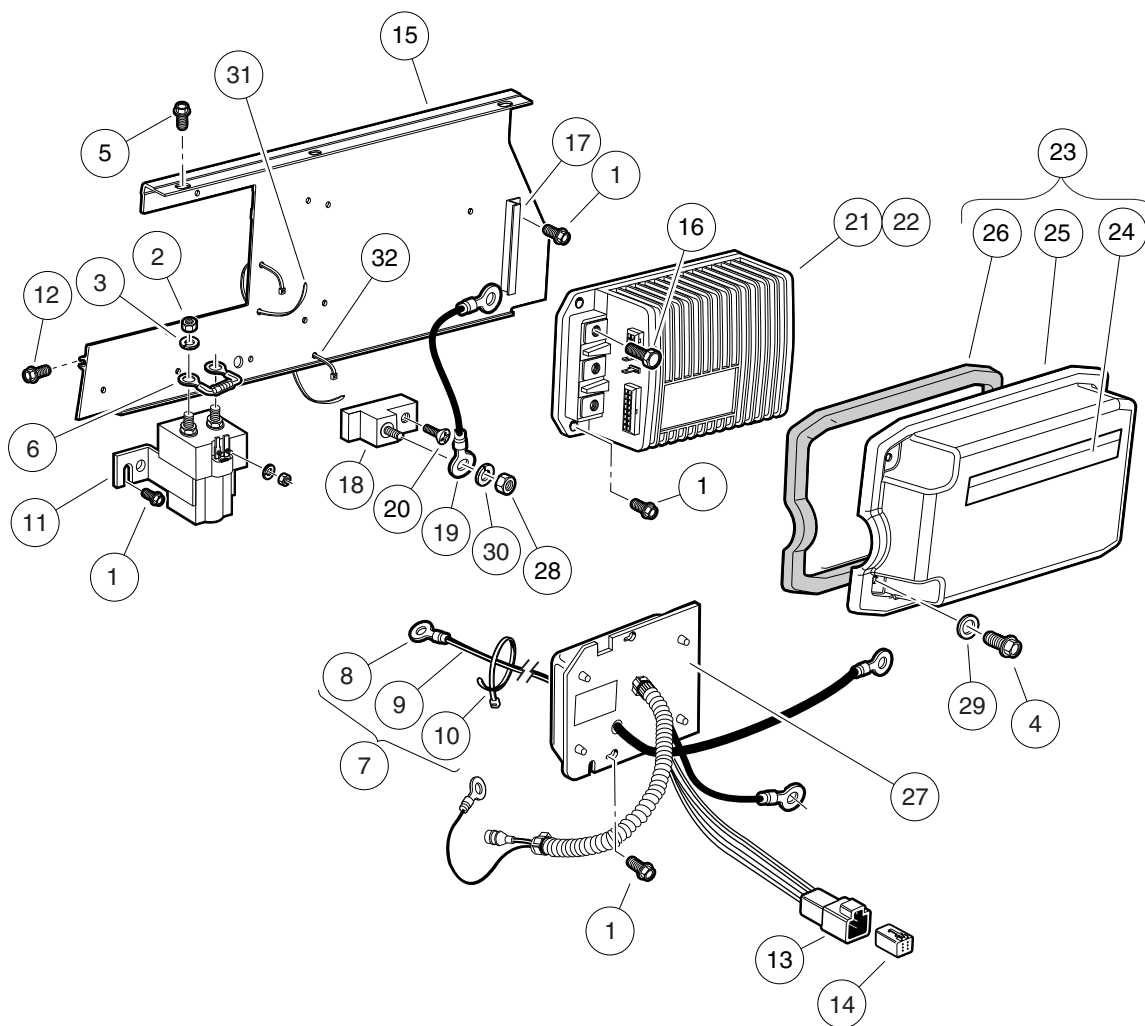




000607-003

COMPUTER, CONTROLLER, AND SOLENOID

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	14
2	<u>1012528</u>	Nut, M8-1.25 Hex	2
3	<u>1013734</u>	Lockwasher, 8mm Split	2
4	<u>1014063</u>	Screw, 1/4-20 X 1.00, Hex Head	2
5	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	2
6	<u>1014947</u>	Resistor Assembly	1
7	101827801	Ground Wire Kit, 48-Volt (includes items 8 through 10)	1
8	101826801	Compression Lug	1
9	N/A	Wire Assembly, Black	1
10	<u>8990</u>	Tie Wrap, 8" Nylon	3
11	<u>101908703</u>	Solenoid, 48v W/ Diode	1
12	<u>101910401</u>	Screw, 5/16-18 X 1.25 Thrd Frm	2
13	<u>101932601</u>	Kit, 6-Pin Wedge Lock	1
14	<u>101932701</u>	Kit, 6-Pin Receptacle and Wedge Lock	1
15	<u>101965202</u>	Plate, Component Mounting	1
16	<u>102240501</u>	Bolt, Controller, Terminal	3
17	<u>102243101</u>	Extrusion, Cover Support	1
18	<u>102259801</u>	Terminal Block	1
19	<u>102263601</u>	Wire Assy, #10 Black	1
20	<u>102263701</u>	Screw, #10-24 X 0.75 Phillips, Thread-Forming	1
21	<u>102806201</u>	Controller, IQ, 48-volt	1
22	<u>102806203</u>	Controller, IQ, 48-volt, CE	1
23	<u>103316901</u>	Cover Asm - Controller (includes items 24 through 26)	1
24	<u>101931501</u>	Decal, Component Cover	1
25	<u>103316701</u>	Cover - Controller, Deep	1
26	<u>103316801</u>	Gasket - Controller Cover	1
27	103403101	Asm, Obc, Iq, V3.0	1
28	<u>1242</u>	Nut, 5/16-18 Hex	1
29	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
30	<u>7174</u>	Lockwasher, 5/16 Split	1
31	<u>8639</u>	Tie Wrap, 11" Nylon	1
32	<u>8990</u>	Tie Wrap, 8" Nylon	1

13

E

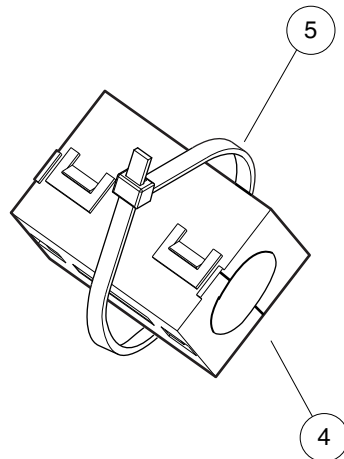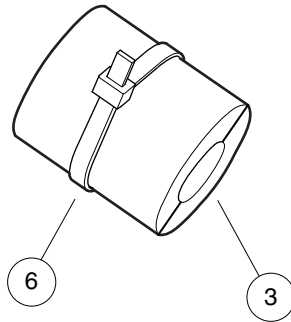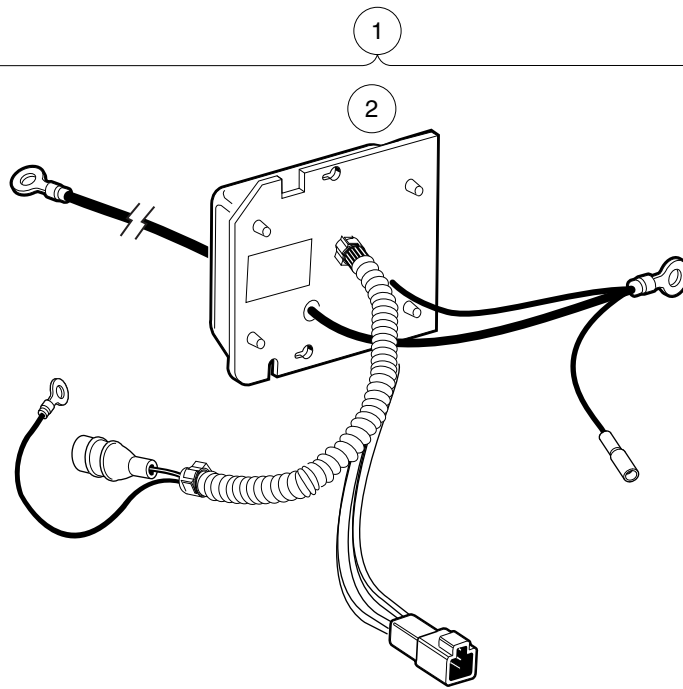

001279-001

CE COMPLIANCE KIT – TURF AND CARRYALL 1

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103584801</u>	Kit, IQ EMC Compliance (includes items 2 through 6)	1
2	<u>102806203</u>	Controller, IQ, 48-volt, CE	1
3	<u>103449501</u>	Bead, Ferrite, Tdk	2
4	<u>103449601</u>	Bead, Ferrite, Fair-rite	3
5	<u>8639</u>	Tie Wrap, 11" Nylon	4
6	<u>8990</u>	Tie Wrap, 8" Nylon	4


13

E

ELECTRIC MOTOR

14

E




MOTOR (MODEL 5BC59JBS6390) – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1
2	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	3
3	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
4	<u>102235201</u>	Bumper, Drive Unit	1
5	<u>102240104</u>	Motor, 48-Volt Non-Skew IQ (includes items 6 through 27)	1
6	<u>1017944</u>	End Shield	1
7	<u>1017947</u>	Hardware Package (includes items 8 through 11)	1
8	<u>1011280</u>	Locknut, 5/16-18	4
9	N/A	Insulator Bushing	2
10	N/A	Insulated Bushing	2
11	<u>1241</u>	Washer, 5/16 Type A Flat	4
12	<u>1017949</u>	Screw, #6-32 X 0.480 Hex-Head	2
13	<u>1017950</u>	Bearing Retainer	1
14	<u>1017953</u>	Screw, Bearing Retainer	2
15	<u>102265701</u>	Kit, Bearing and Magnet (includes items 16 and 17)	1
16	<u>1011290</u>	Ball Bearing	1
17	<u>102265801</u>	Magnet	1
18	<u>102265901</u>	Motor End Shield Asm (includes items 19 through 23)	1
19	<u>102265601</u>	Speed Sensor Assembly (includes items 20 and 21)	1
20	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
21	N/A	Sensor, Speed, without Connector	1
22	<u>102266001</u>	End Shield, Motor	1
23	<u>102267001</u>	Screw, #8-32 X 0.375 Hex-Head	1
24	<u>102266101</u>	Screw, #10 - 32 X 8.250	4
25	<u>103325701</u>	Stator Shell and Winding	1
26	<u>103325801</u>	Non Skew Armature	1
27	<u>103337601</u>	Brush Assembly, IQ Motor, Non-Skew (includes items 28 through 31)	1
28	<u>1011411</u>	Kit, Brush Spring (ge Motor) (includes item 29)	1
29	<u>1011285</u>	Brush Spring	4
30	<u>103325501</u>	Brush Rigging, Non-Skew Motor	1
31	<u>103325601</u>	Brush Set, Non-Skew	1
32	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
33	<u>451</u>	Lockwasher, 1/4 Split	3
34	<u>7174</u>	Lockwasher, 5/16 Split	1

14

E

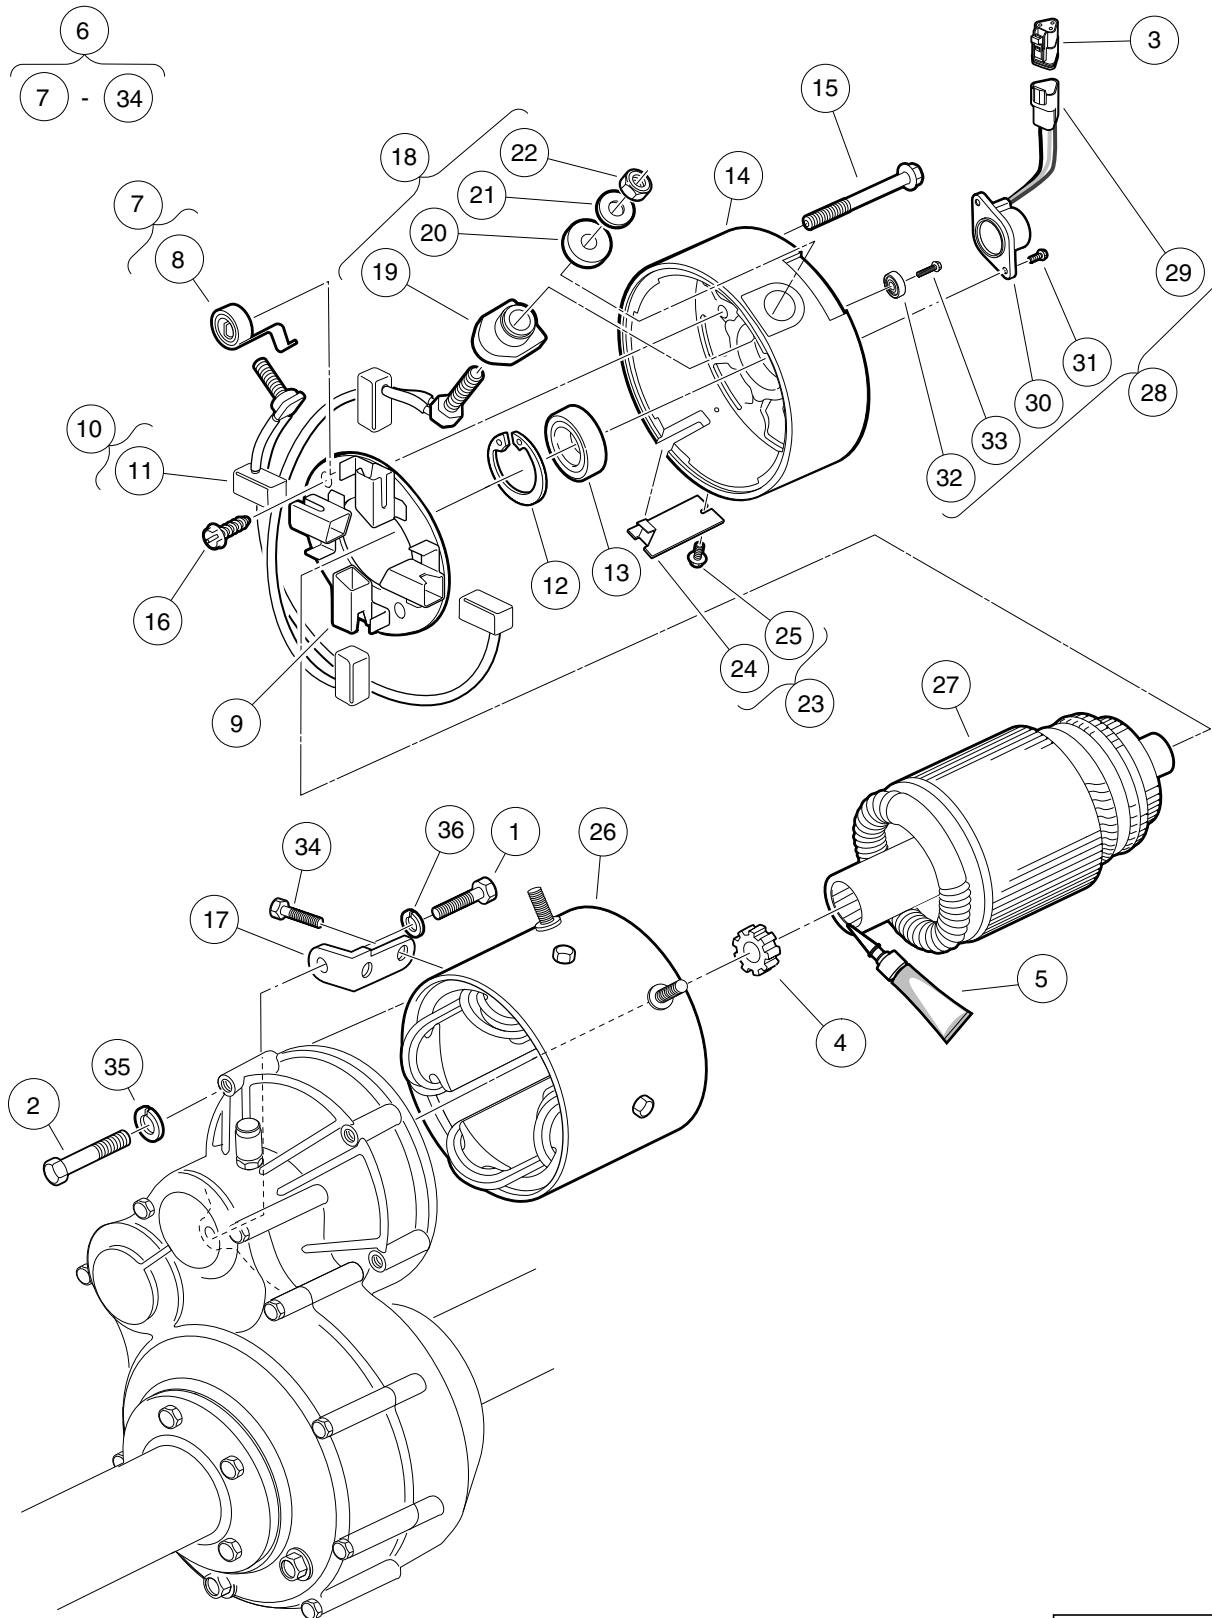

000185-001

MOTOR (MODEL EJ4-4001) – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1
2	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	3
3	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
4	<u>102235201</u>	Bumper, Drive Unit	1
5	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
6	<u>102705001</u>	IQ Electric Motor, 48-VDC 3.3 hp (includes items 7 through 34)	1
7	<u>102186001</u>	Spring Kit, Motor Brush (includes item 8)	1
8	N/A	Spring, Brush, S-g	4
9	<u>102186101</u>	Brush Box Assembly	1
10	<u>102186201</u>	Brush Kit, Motor (includes item 11)	1
11	N/A	Assembly, Brush and Terminal	2
12	N/A	Ring, 2.24" Internal Retaining	1
13	<u>102186401</u>	Bearing, Ball	1
14	<u>102186701</u>	End Cap, Motor	1
15	N/A	Screw, 1/4-20 X 2.25 Hex-Head Washer	2
16	<u>102186901</u>	Screw, #8-32 X .5 Hex-Head	2
17	<u>102187001</u>	L-Bracket, Motor	1
18	<u>102187101</u>	Hardware Kit, Motor Terminal (includes items 19 through 22)	2
19	N/A	Bushing, Nylon	2
20	N/A	Washer, Nylon Flat	2
21	N/A	Washer, Flat, 5/16 Steel	2
22	N/A	Nut, Brass Hex, 5/16 - 18	2
23	<u>102187201</u>	Plate Kit, Motor Cover (includes items 24 and 25)	1
24	N/A	Assembly, Cover Plate	1
25	N/A	Screw, #8-32 x 0.375, Taptite Thread	1
26	<u>102704701</u>	Frame and Field Assembly	1
27	<u>102704801</u>	Armature Assembly	1
28	<u>102704901</u>	Kit, Speed Sensor (includes items 29 through 33)	1
29	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
30	N/A	Sensor, Motor Speed, ADC	1
31	N/A	Screw, #8-32, Taptite Thread	2
32	N/A	Magnet, ADC Motor	1
33	N/A	Screw, 1/4-20 x 0.5	1
34	N/A	Bolt, 1/4 - 20 x 0.73 Thread-Forming	2
35	<u>451</u>	Lockwasher, 1/4 Split	3
36	<u>7174</u>	Lockwasher, 5/16 Split	1


14

E

TRANSAXLE – ELECTRIC VEHICLES

15

E

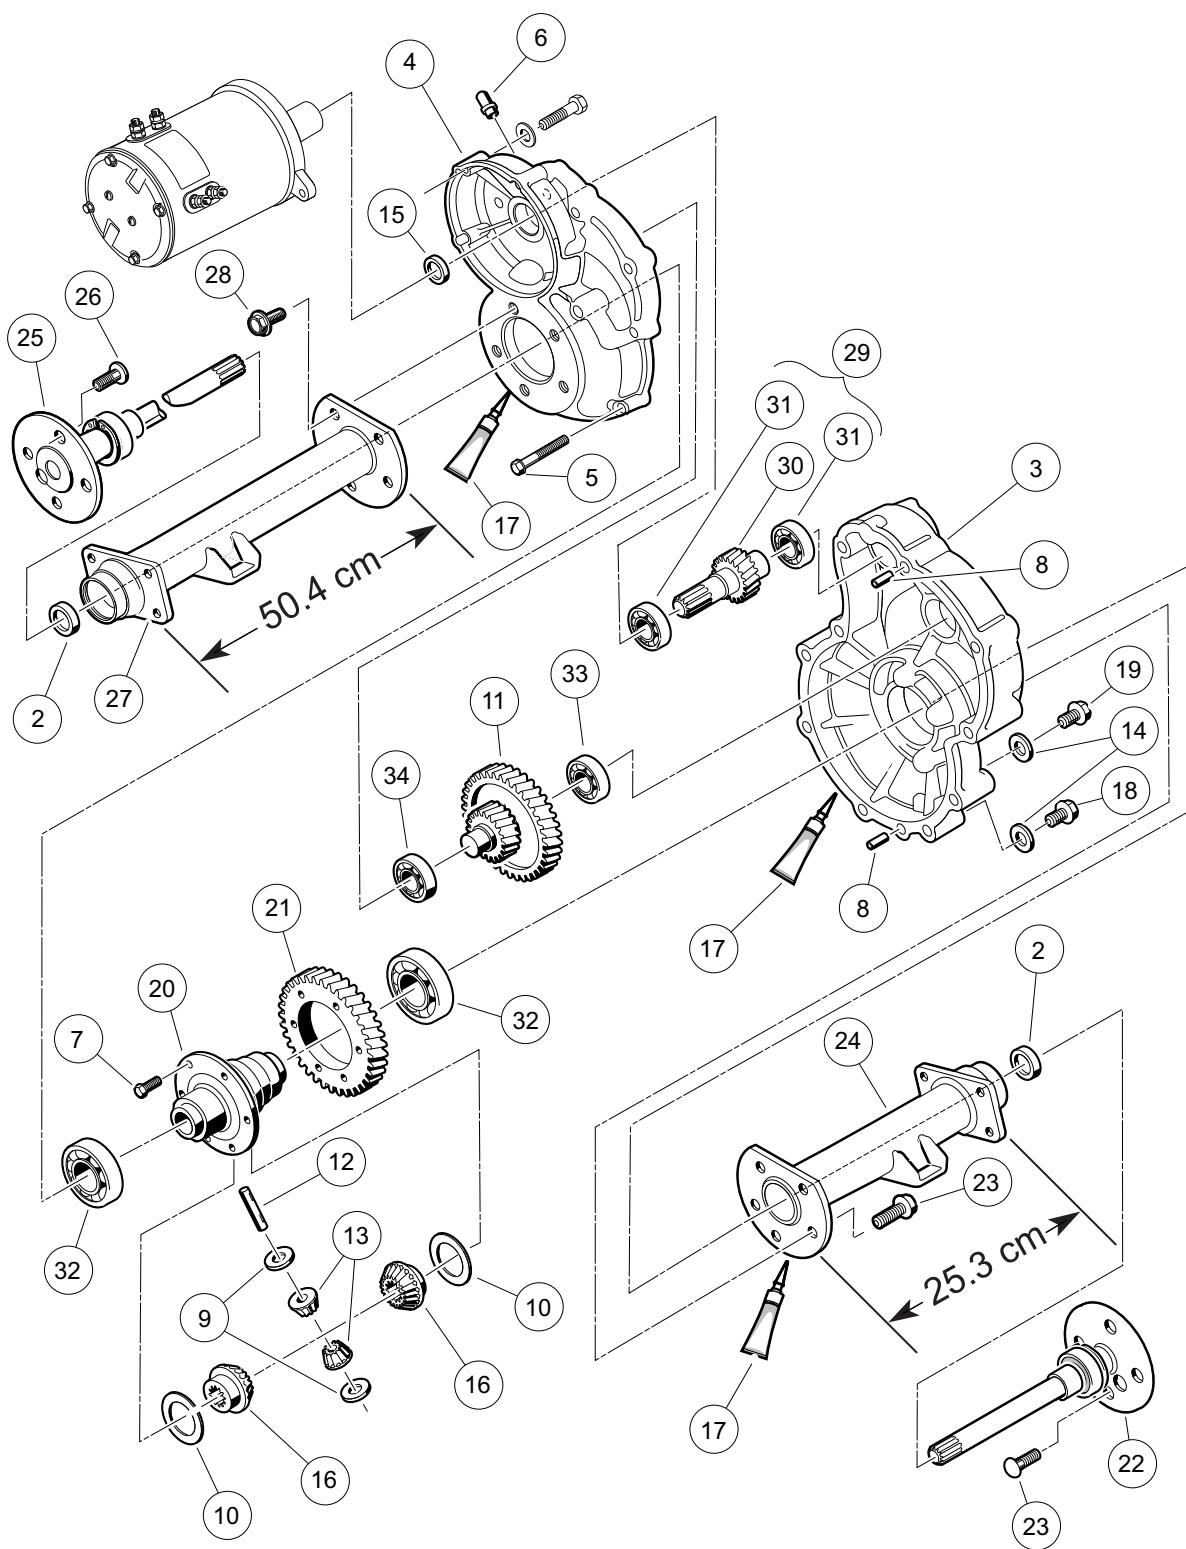


000223-005

TRANSAXLE – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102771701</u>	Transaxle, Electric (includes items 2 through 34)	1
2	<u>1013794</u>	Axle Shaft Oil Seal	2
3	<u>101895401</u>	Gear Case, Driver-Side	1
4	<u>101895501</u>	Gear Case, Passenger-Side	1
5	<u>101897001</u>	Screw, M8-1.25 X 60mm Hex-Head	11
6	<u>101897201</u>	Breather	1
7	<u>101897401</u>	Screw, M10-1.25 X 25mm	6
8	<u>101897601</u>	Pin, 11mm OD X 8.5mm ID X 10mm	2
9	<u>101903601</u>	Washer, Thrust	2
10	<u>101903701</u>	Washer, Thrust	2
11	<u>101906901</u>	Intermediate Shaft Assembly	1
12	<u>101922101</u>	Pin, 15.99mm X 88.7mm Dowel	1
13	<u>101923001</u>	Gear, Differential Idler	2
14	<u>101923201</u>	Gasket	2
15	<u>101923501</u>	Seal, Lip	1
16	<u>101923901</u>	Gear, Differential	2
17	<u>101928701</u>	Liquid Gasket (Transaxle case)	1
18	<u>101972101</u>	Plug, M14-1.5 X 12mm Magnetic	1
19	<u>101972201</u>	Plug, M14-1.5 X 12mm Hex	1
20	<u>102356601</u>	Housing, Differential, 6 Bolt	6
21	<u>102356801</u>	Gear, Differential Output, 6-Bolt	6
22	<u>102886301</u>	Axle Assembly, Driver-Side (includes item 23)	1
23	<u>101922201</u>	Lug Stud	4
24	<u>102886401</u>	Tube, Axle, Driver-Side	1
25	<u>102886501</u>	Axle Assembly, Passenger-Side (includes item 26)	1
26	<u>101922201</u>	Lug Stud	4
27	<u>102886601</u>	Tube, Axle, Passenger-Side	1
28	<u>102902801</u>	Screw, M10 X 30	10
29	<u>103582801</u>	Asm, E Trans Shaft/bearing (includes items 30 and 31)	1
30	N/A	Shaft, Input	1
31	<u>7335</u>	Bearing	2
32	<u>7330</u>	Inner Axle Tube Bearing	2
33	<u>7335</u>	Bearing	1
34	<u>7336</u>	Bearing	1

15

E

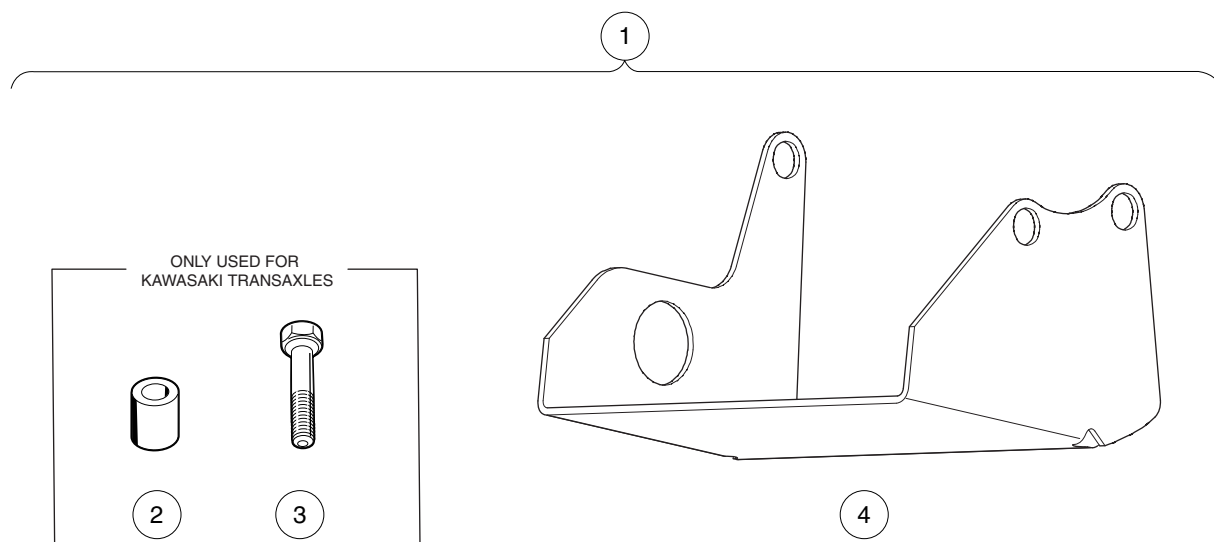

000365-002

DIFFERENTIAL GUARD – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	15
		1 2 3 4		
1	<u>101611402</u>	Kit, Differential Guard, Elec Vehicles (includes items 2 through 4)	1	
2	<u>101914001</u>	Spacer, Steel	2	E
3	<u>101936101</u>	Screw, M10-1.50 X 60mm Hex Cap	2	
4	<u>101978601</u>	Guard, Differential, Electric Vehicle Transaxle	1	


15

E

BATTERY CHARGERS

16

E

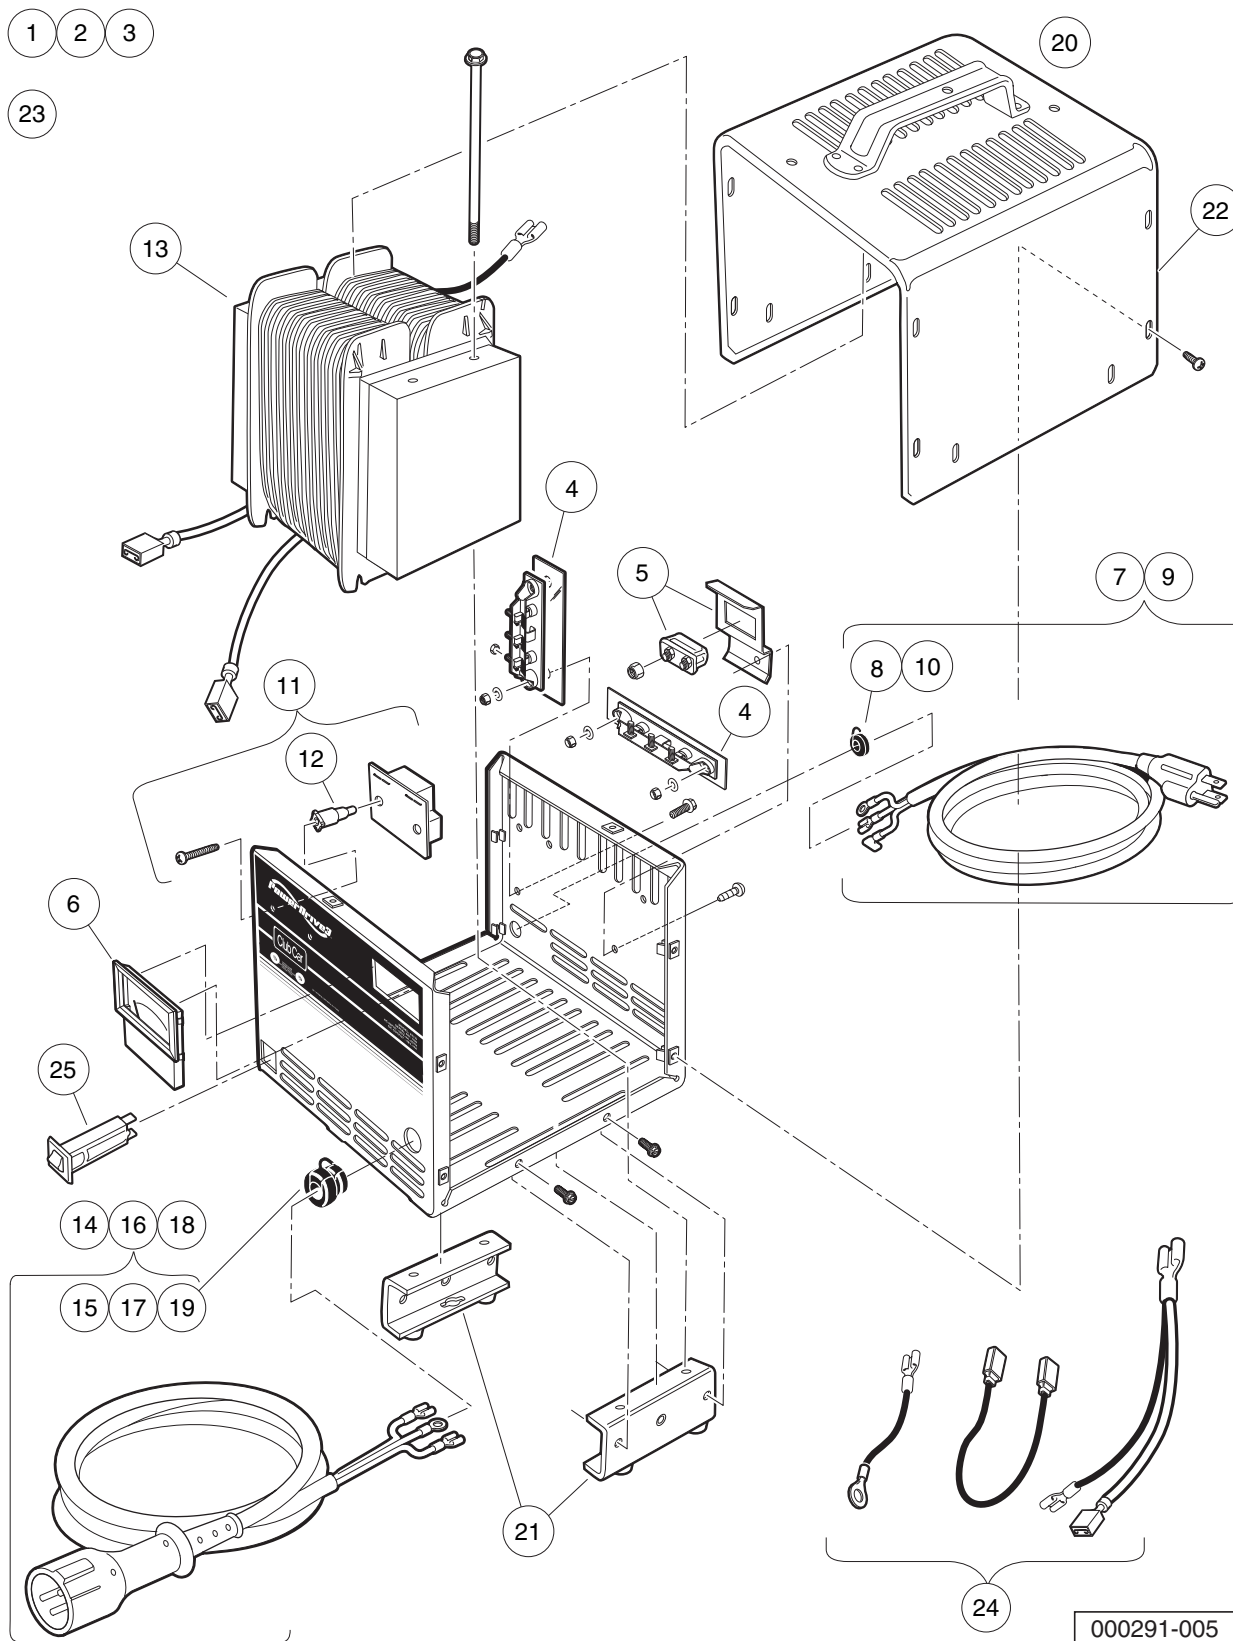


000291-005

POWERDRIVE 3 BATTERY CHARGER (MODEL 26580), DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	103499101	Charger, PowerDrive 3, 9ft DC, 6ft AC	1
2	103499102	Charger, PowerDrive 3, 12ft DC, 9ft AC	1
3	103499103	Charger, PowerDrive 3, 20ft DC, 9ft AC (includes items 4 through 25)	1
4	1015914	Rectifier with Heatsink Assembly	2
5	102273701	PD2 Fuse Asm	1
6	102273801	PD2 Ammeter	1
7	103428501	Kit, PD3 Cordset - AC 80" (includes item 8)	1
8	102273901	PD2 AC Cord Bushing	1
9	103428601	Kit, PD3 Cordset, - AC 114" (includes item 10)	1
10	102273901	PD2 AC Cord Bushing	1
11	103428701	Asm, PD3 Board Relay (includes item 12)	1
12	103429701	PD3 Plastic Stand-Offs	2
13	103428801	PD3 Transformer	1
14	103429001	PD3 Cordset - DC 113" (includes item 15)	1
15	1012098	Bushing, DC Cord	1
16	103429101	PD3 Cordset - DC 154" (includes item 17)	1
17	1012098	Bushing, DC Cord	1
18	103429201	PD3 Cordset - DC 205" (includes item 19)	1
19	1012098	Bushing, DC Cord	1
20	103429301	Asm, PD3 Case (includes items 21 and 22)	1
21	103434001	Asm, PD3 Legs	1
22	103439901	PD3Case Top (Includes Handle)	1
23	103429501	Kit, PD3 Hardware	1
24	103429601	Kit, PD3 Wires	1
25	CCX8506	Circuit Breaker, 15-Amp/120-Volt	1

16

E

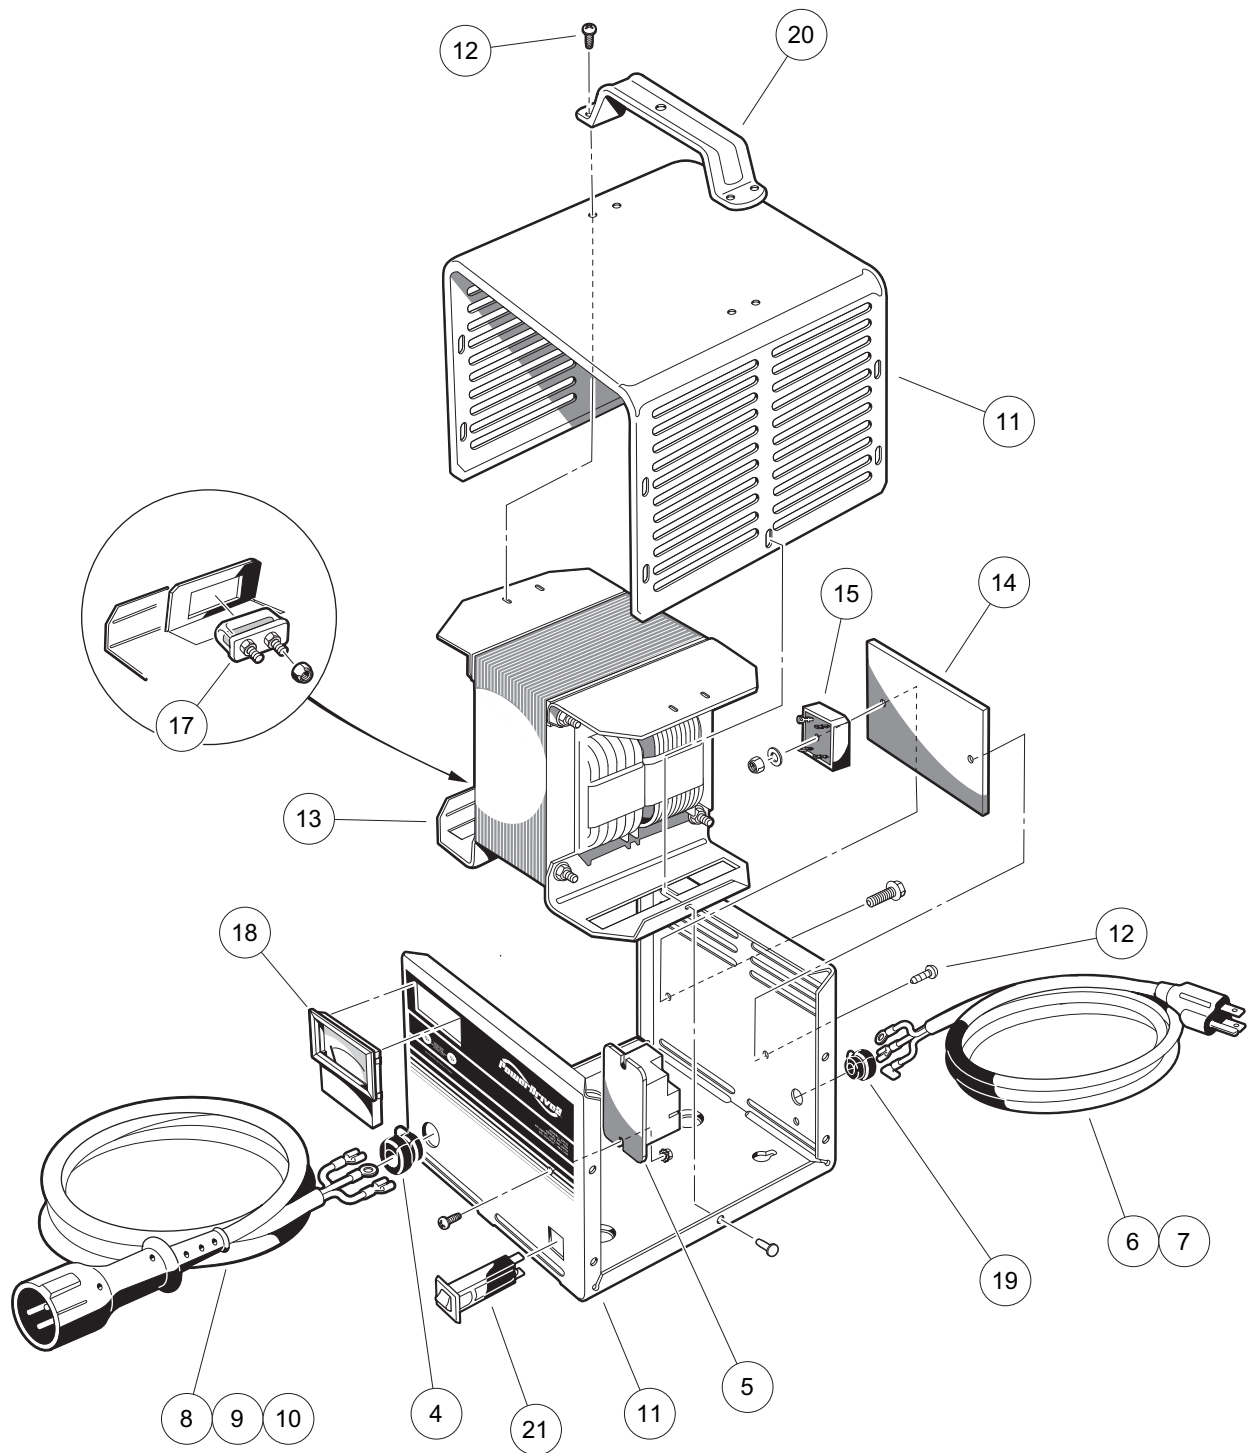


000291-004

POWERDRIVE 2 BATTERY CHARGER (MODEL 22110), DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101802204</u>	48-V/13-A PowerDrive 2 (9-ft. DC, 6-ft. AC)	1
2	<u>101802205</u>	48-V/13-A PowerDrive 2 (12-ft. DC, 9-ft. AC)	1
3	<u>101802206</u>	48-V/13-A PowerDrive 2 (20-ft. DC, 9-ft. AC) (includes items 4 through 21)	1
4	<u>1012098</u>	Bushing, DC Cord	1
5	<u>101828601</u>	Relay, 48-Volt	1
6	<u>101828801</u>	Cord, AC, 80-Inch (203 cm)	1
7	<u>101828802</u>	Cord, AC, 108-Inch (274 cm)	1
8	<u>101828904</u>	PD2 DC Cordset, 113-inch	1
9	<u>101828905</u>	PD2 DC Cordset, 154-inch	1
10	<u>101828906</u>	Pd2 Dc Cordset 250 Inch	1
11	<u>102273201</u>	PD2 Case (includes item 12)	1
12	7577	Screw, #10 X 0.50 Phillips Pan-Head	12
13	<u>102273301</u>	PD2 Transformer Asm	1
14	<u>102273401</u>	PD2 Heatsink	1
15	<u>102273501</u>	PD2 Diode Bridge w/Film	1
16	<u>102273601</u>	PD2 Wire Asm	1
17	<u>102273701</u>	PD2 Fuse Asm	1
18	<u>102273801</u>	PD2 Ammeter	1
19	<u>102273901</u>	PD2 AC Cord Bushing	1
20	<u>102274001</u>	PD2 Handle	1
21	<u>CCX8506</u>	Circuit Breaker, 15-Amp/120-Volt	1
Note: Item 16 not shown. Level 1 Battery Charger part numbers include one AC and one DC cord. They do not include all of the level 2 cords listed.			

16

E

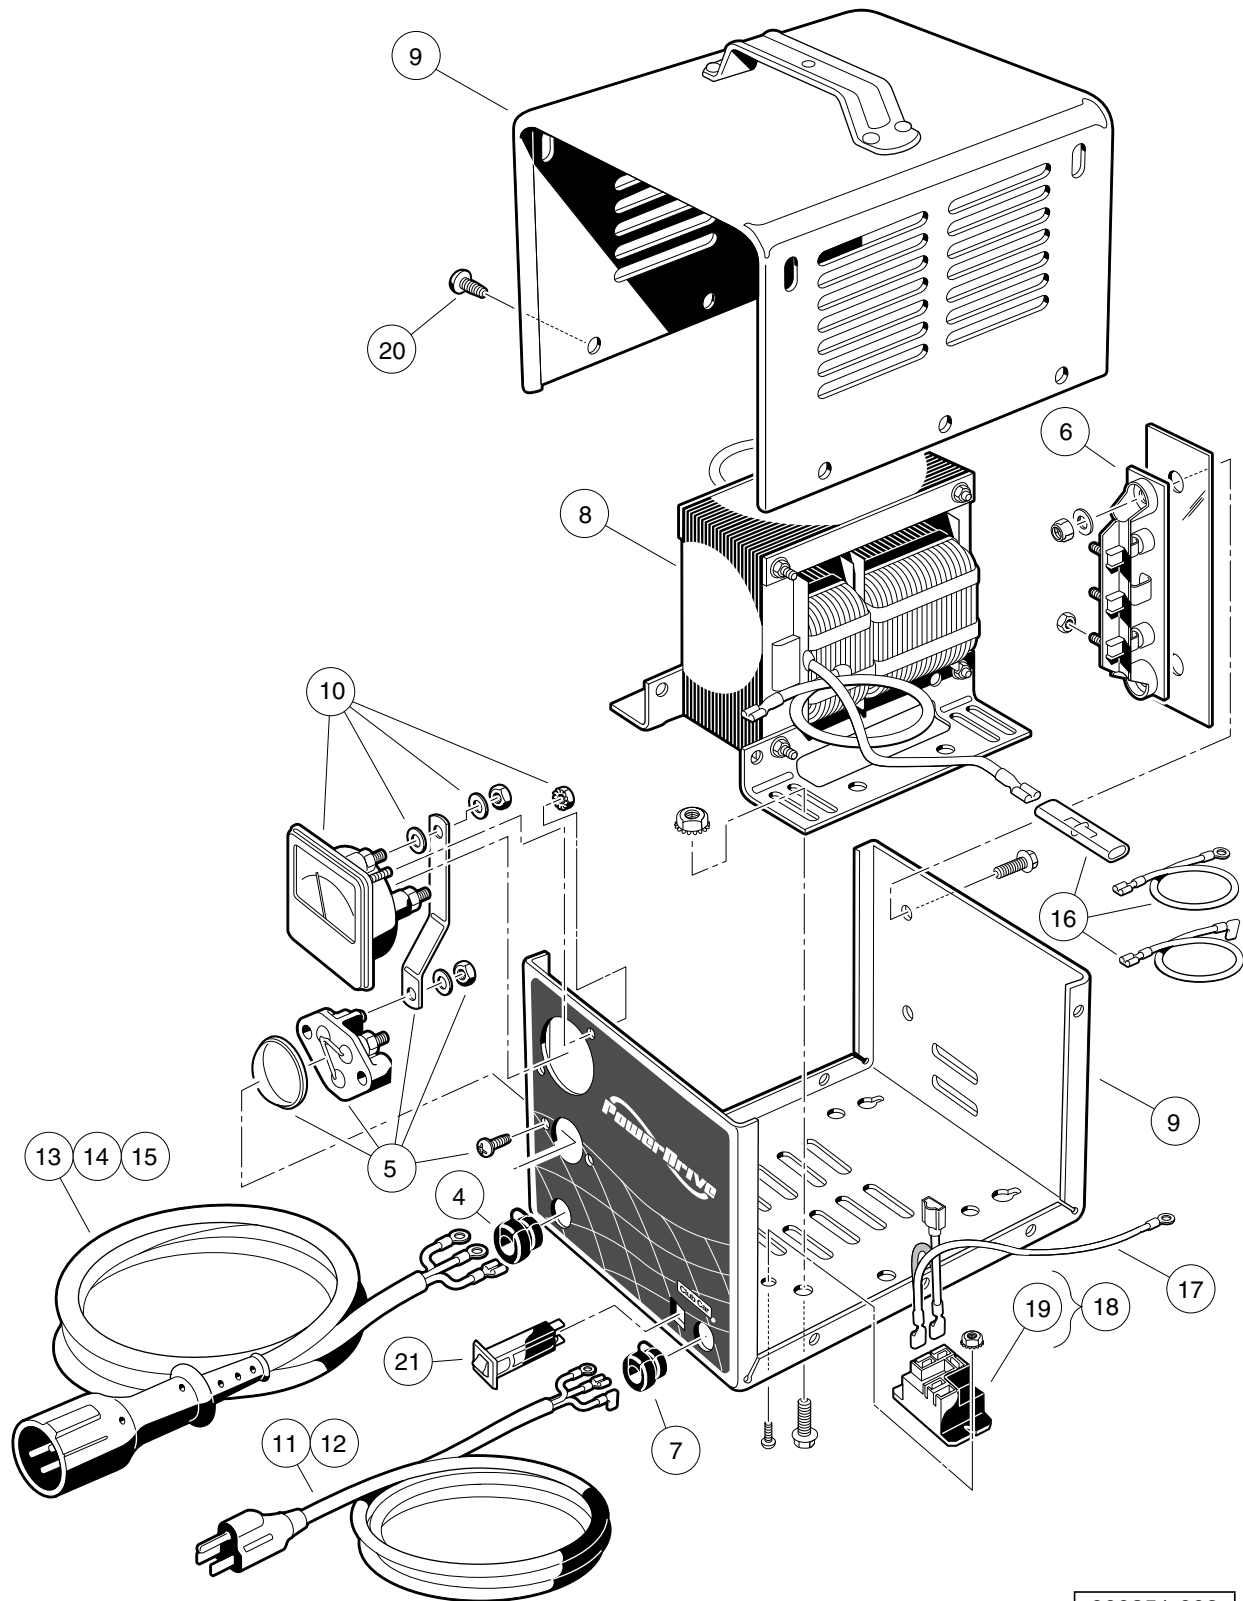


000351-002

POWERDRIVE BATTERY CHARGER (MODEL 17930), DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101802201</u>	Charger, PowerDrive, 48V/17A, 9ft DC, 6ft AC Cord	1
2	<u>101802202</u>	Charger, PowerDrive, 48V/17A, 12ft DC, 9ft AC Cord	1
3	<u>101802203</u>	Charger, PowerDrive, 48V/17A, 20ft DC, 9ft AC Cord (includes items 4 through 21)	1
4	<u>1012098</u>	Bushing, DC Cord	1
5	<u>1012101</u>	Fuse Assembly	1
6	<u>1015914</u>	Rectifier with Heatsink Assembly	1
7	<u>1015917</u>	Bushing, AC Cord	1
8	<u>101819701</u>	Transformer, Battery Charger	1
9	<u>101828301</u>	Case Assembly	1
10	<u>101828501</u>	Ammeter	1
11	<u>101828801</u>	Cord, AC, 80-Inch (203 cm)	1
12	<u>101828802</u>	Cord, AC, 108-Inch (274 cm)	1
13	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
14	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
15	<u>101828903</u>	Cord, DC, 250-Inch (635 cm)	1
16	<u>101831101</u>	Wire Assembly Kit	1
17	<u>101914401</u>	Assembly, Voltage Suppressor	1
18	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes item 19)	1
19	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
20	7577	Screw, #10 X 0.50 Phillips Pan-Head	10
21	<u>CCX8506</u>	Circuit Breaker, 15-Amp/120-Volt	1
Note: Level 1 Battery Charger part numbers include one AC and one DC cord. They do not include all of the level 2 cords listed.			

16

E

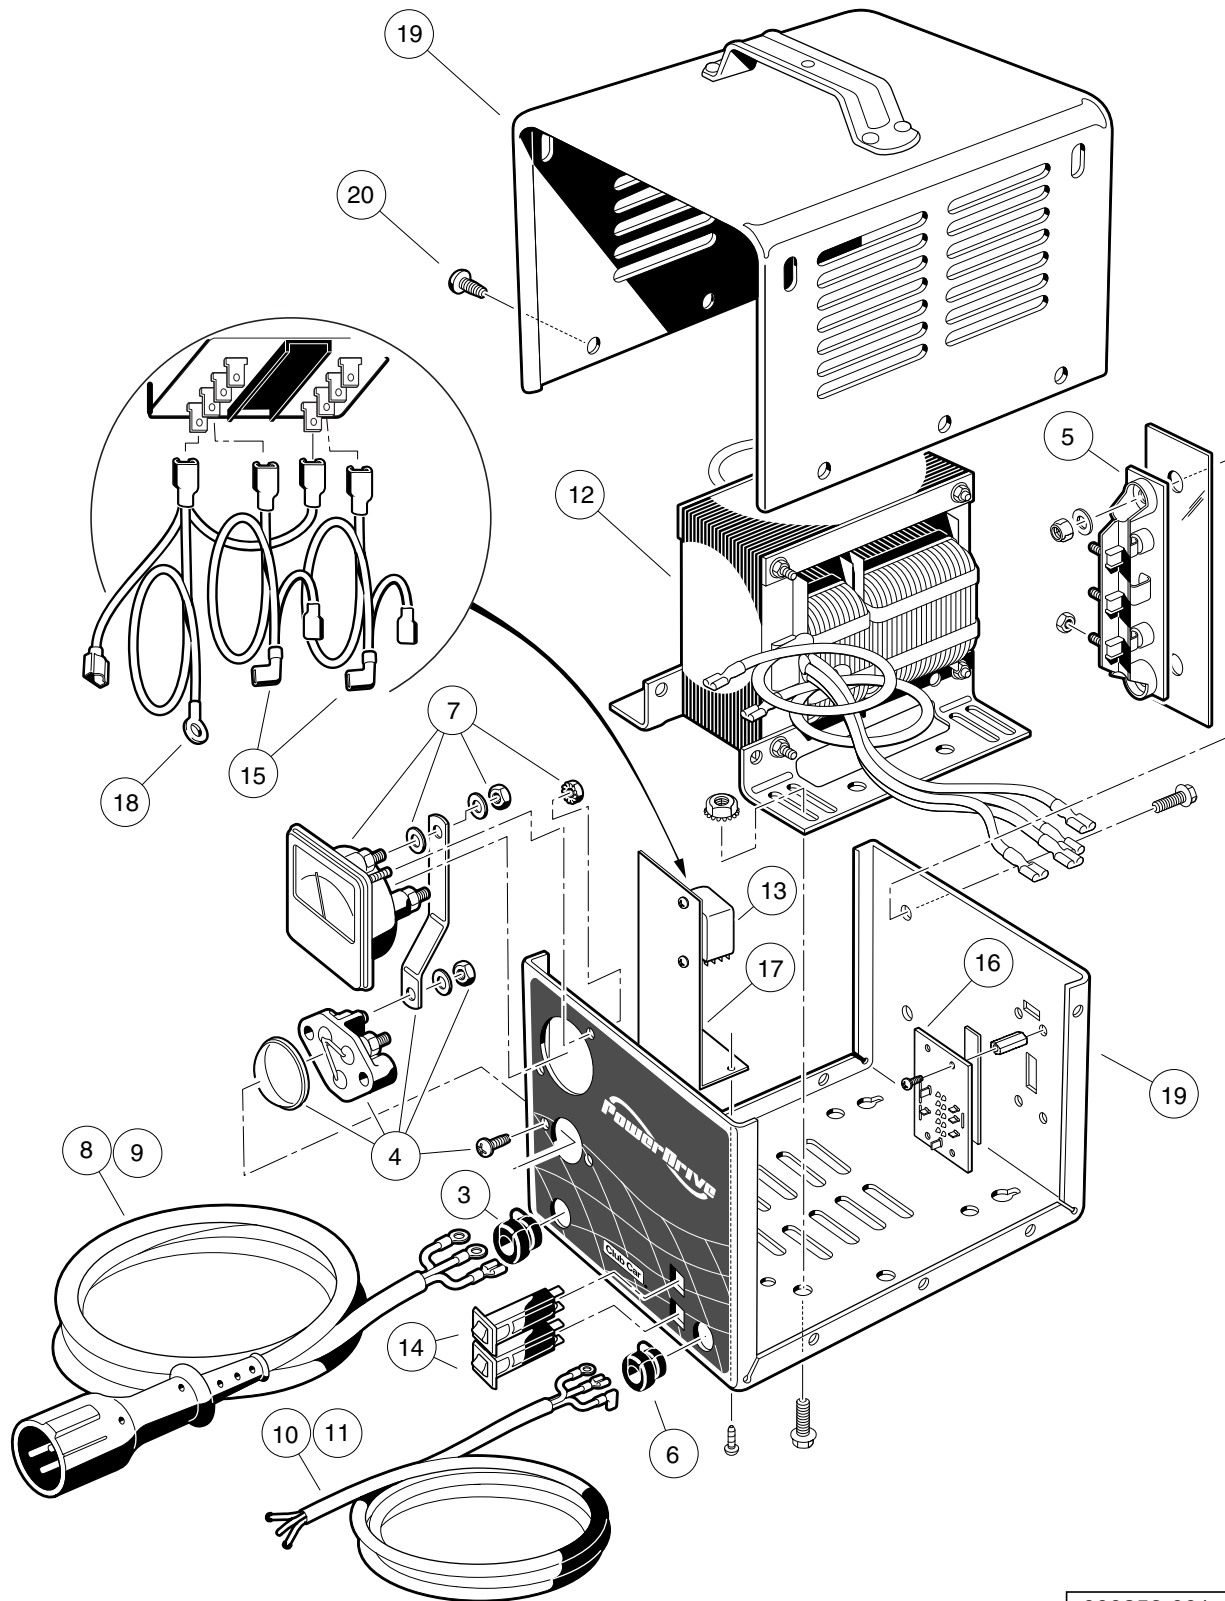


000352-001

POWERDRIVE BATTERY CHARGER (MODEL 18780), EXPORT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101831503	Battery Charger, 48-Volt DC (8.5-ft DC, 6-ft AC)	1
2	101831504	Battery Charger, 48-Volt DC (12-ft DC, 9-ft AC) (includes items 3 through 20)	1
3	<u>1012098</u>	Bushing, DC Cord	1
4	<u>1012101</u>	Fuse Assembly	1
5	<u>1015914</u>	Rectifier with Heatsink Assembly	1
6	<u>1015917</u>	Bushing, AC Cord	1
7	<u>101828501</u>	Ammeter	1
8	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
9	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
10	<u>101831701</u>	Cord, AC, 80-Inch (203 cm), without Plug	1
11	<u>101831702</u>	Cord, AC, 118-Inch (300 cm), without Plug	1
12	101838201	Transformer, Export Battery Charger	1
13	<u>101838301</u>	Relay, Export Charger	1
14	101838401	Circuit Breaker	2
15	101838501	Kit, Wire Assembly	1
16	101838601	Four-Position Switch	1
17	<u>101838701</u>	Mounting Bracket, Relay	1
18	101914401	Assembly, Voltage Suppressor	1
19	N/A	Case, Charger	1
20	7577	Screw, #10 X 0.50 Phillips Pan-Head	10
Note: Level 1 Battery Charger part numbers include one AC and one DC cord. They do not include all of the level 2 cords listed.			

16

E

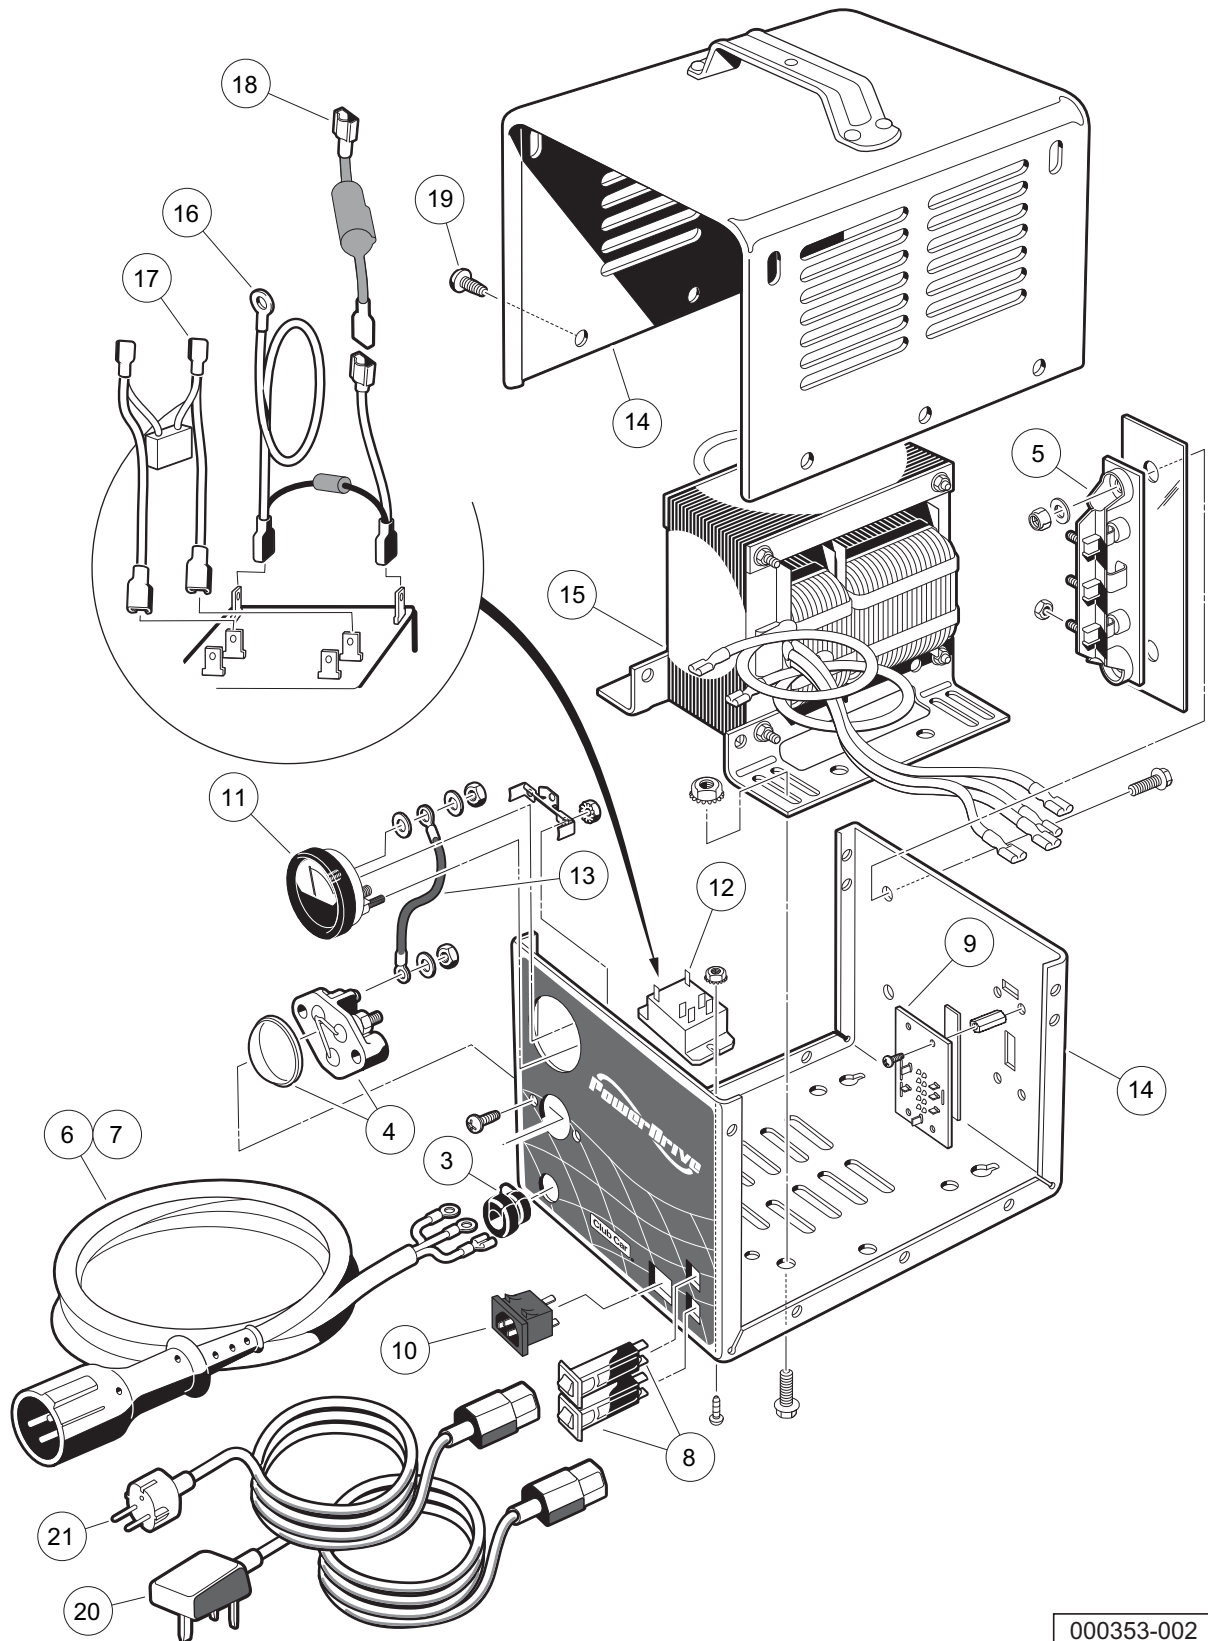

000353-002

POWERDRIVE BATTERY CHARGER (MODEL 20310), EUROPEAN


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101956201</u>	Battery Charger, 48-Volt w/ 4-Position Switch (8.5-ft DC)	1
2	<u>101956202</u>	Battery Charger, 48-Volt w/ 4-Pos. Switch (12-ft DC) (includes items 3 through 19)	1
3	<u>1012098</u>	Bushing, DC Cord	1
4	<u>1012101</u>	Fuse Assembly	1
5	<u>1015914</u>	Rectifier with Heatsink Assembly	1
6	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
7	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
8	101838401	Circuit Breaker	2
9	101838601	Four-Position Switch	1
10	101973501	Receptacle, AC Cord	1
11	101976601	Ammeter with Mounting Bracket	1
12	<u>101987501</u>	Relay	1
13	N/A	Wire, Jumper	1
14	N/A	Case, Charger	1
15	****	Transformer, European Battery Charger	1
16	****	Suppressor, AC Voltage	1
17	****	Assembly, Wire	1
18	N/A	Limiter, Current	1
19	7577	Screw, #10 X 0.50 Phillips Pan-Head	10
20	<u>101958201</u>	Cord, UK, AC, Battery Charger	1
21	101958301	Cord, European AC, Battery Charger	1
**** Special order item available upon request.			
Note: Level 1 Battery Charger part numbers include one AC and one DC cord. They do not include all of the level 2 cords listed.			

16

E

16

E

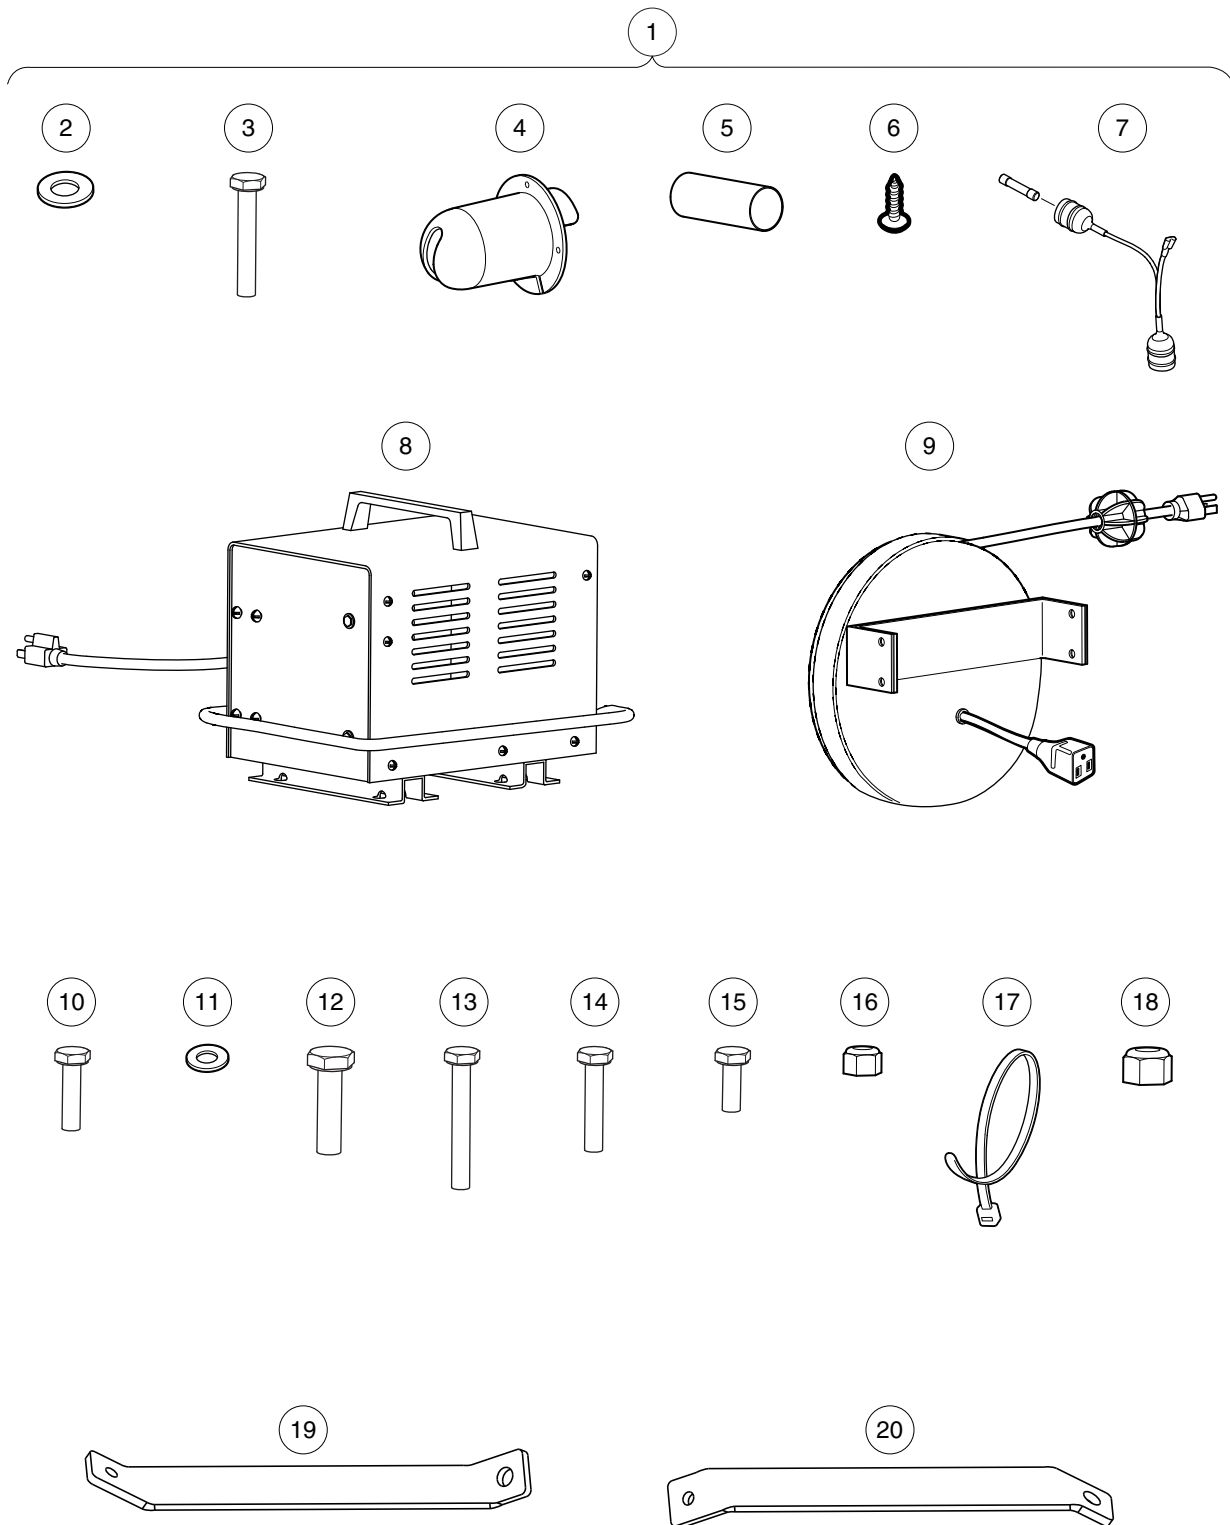

001269-001

ONBOARD POWERDRIVE BATTERY CHARGER (MODEL 19770-98), DOMESTIC


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	SVP150002	Kit, Charger, Onboard, CA1, Domestic, Field-Installed (includes items 2 through 20)	1
2	<u>1011990</u>	Washer, 3/8 Flat	4
3	<u>1013509</u>	Screw, 1/4-20 X 1.75 Hx Hd Cap	1
4	<u>1016673</u>	Housing, Cord Reel	1
5	<u>1017189</u>	Heat Shrink Tube 1.5" X 3"	1
6	<u>101832001</u>	Screw, #7-19 X 0.625 Phillips Pan-Head Tap	4
7	<u>101896801</u>	Fuse Holder Assembly	1
8	<u>101939701</u>	Batt.charger, O/b 120vac 48vdc	1
9	<u>101965401</u>	Reel Assy, Retractable Cord	1
10	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	4
11	<u>332</u>	Washer, 1/4 Type A Narrow Flat	20
12	705	Screw, Cap-hex Hd 3/8-16x1.25	2
13	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	1
14	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	4
15	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
16	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	14
17	<u>8639</u>	Tie Wrap, 11" Nylon	6
18	<u>8754</u>	Locknut, 3/8-16 Hex	2
19	SVP148901	Charger Mount Leg Rh	1
20	SVP148902	Charger Mount Leg Lh	1

16

E

16

E

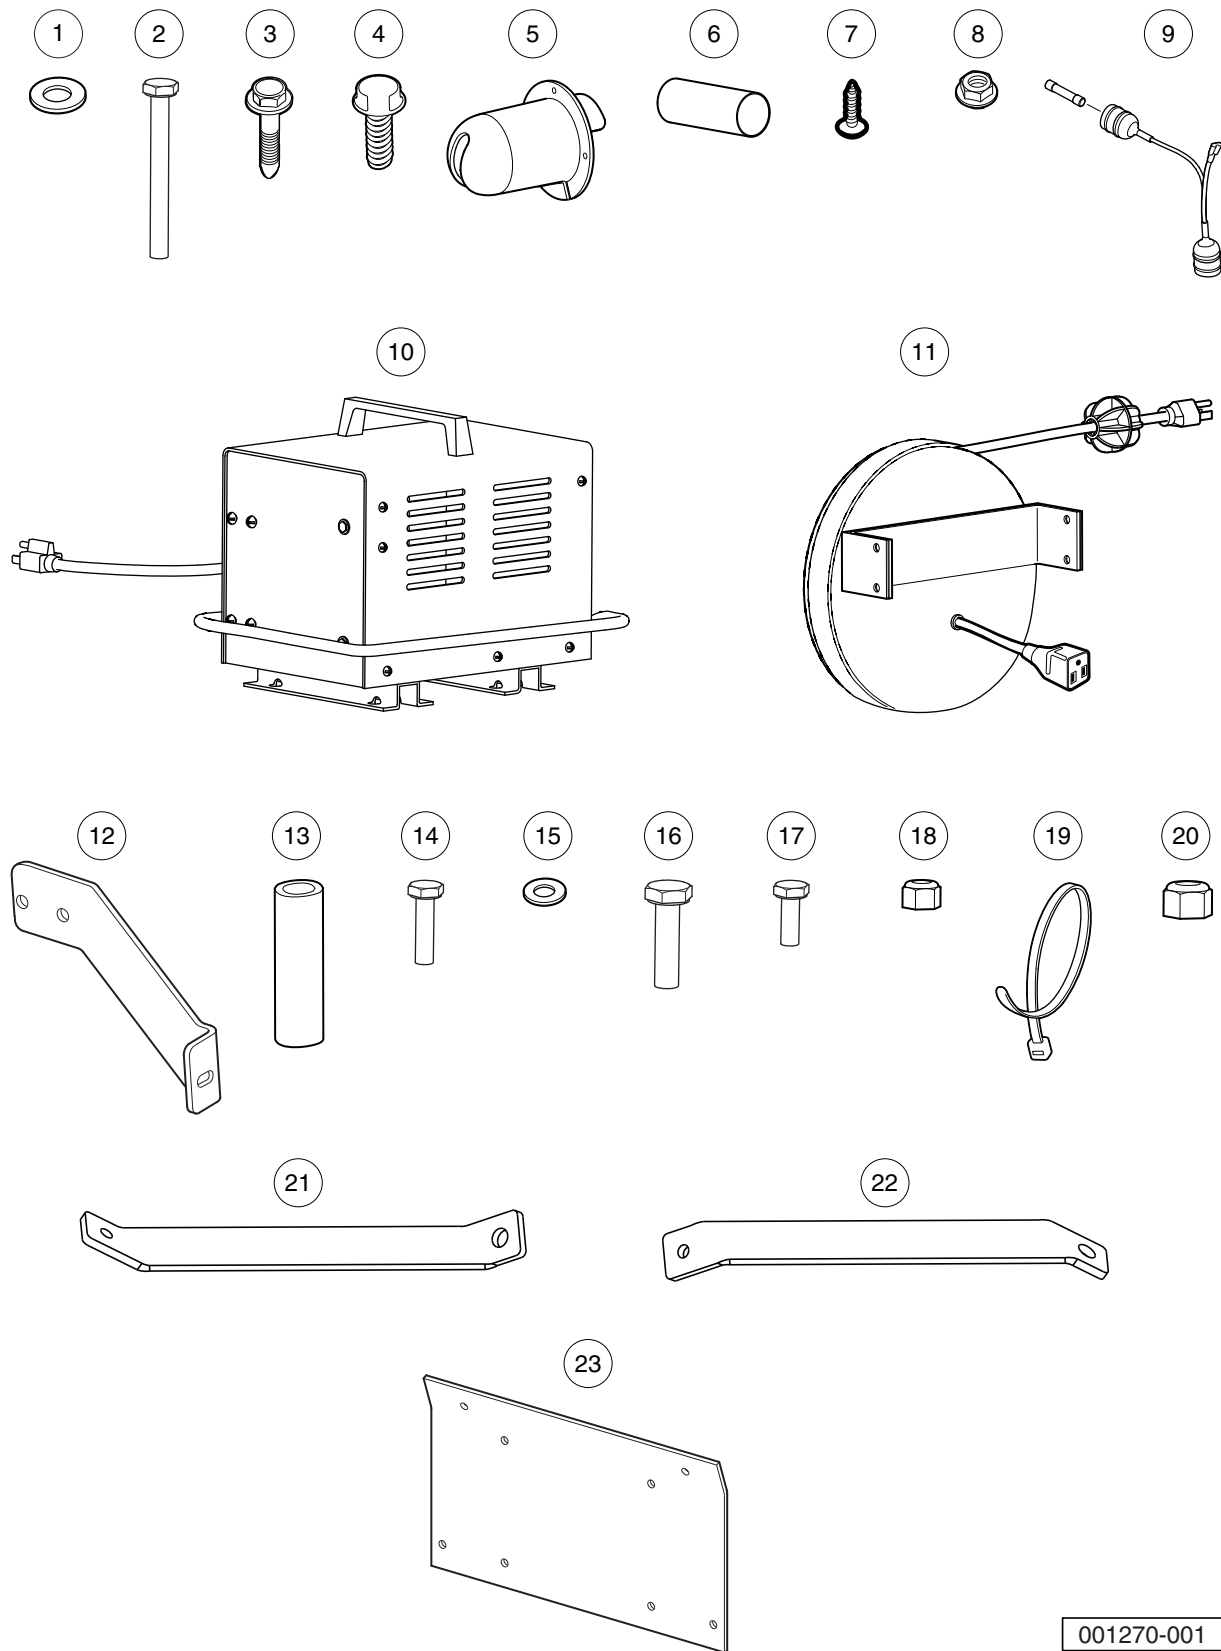

001270-001

ONBOARD POWERDRIVE BATTERY CHARGER (MODEL 19710), INTERNATIONAL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011990</u>	Washer, 3/8 Flat	4
2	<u>1012159</u>	Bolt, 1/4-20 X 2.75 Hex-Head	2
3	<u>1014063</u>	Screw, 1/4-20 X 1.00, Hex Head	2
4	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	5
5	<u>1016673</u>	Housing, Cord Reel	1
6	<u>1017189</u>	Heat Shrink Tube 1.5" X 3"	1
7	<u>101832001</u>	Screw, #7-19 X 0.625 Phillips Pan-Head Tap	4
8	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	2
9	<u>101896801</u>	Fuse Holder Assembly	1
10	<u>101939801</u>	Bat.charger, O/b 48vac W/4-pos	1
11	<u>101965401</u>	Reel Assy, Retractable Cord	1
12	<u>103483801</u>	Brkt, Mtg Cord Reel, Ca2	1
13	<u>103483901</u>	Spacer, Cord Reel, Ca2	2
14	<u>304</u>	Screw, 1/4-20 X 1.0 Hex-Head Cap	4
15	<u>332</u>	Washer, 1/4 Type A Narrow Flat	12
16	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	2
17	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
18	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	8
19	<u>8639</u>	Tie Wrap, 11" Nylon	6
20	<u>8754</u>	Locknut, 3/8-16 Hex	2
21	SVP148901	Charger Mount Leg Rh	1
22	SVP148902	Charger Mount Leg Lh	1
23	SVP149001	Charger Mount, Rear	1

16

E

MAINTENANCE AND SERVICE TOOLS

17


G

E

17

G

E

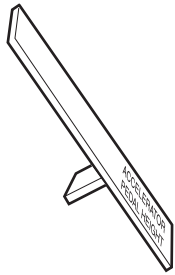


1



2



3

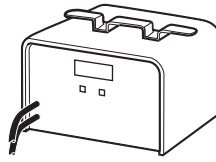


4




5



6

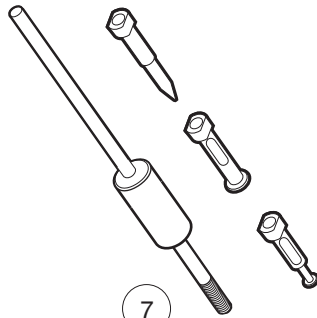


7

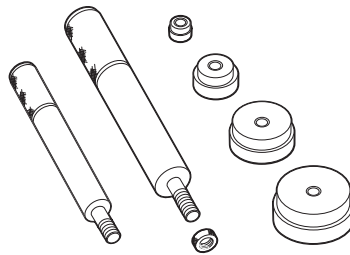

8




9

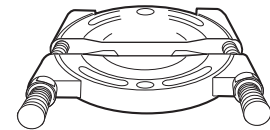


10




11

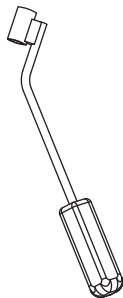


12

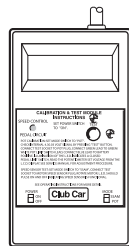


13




14



15

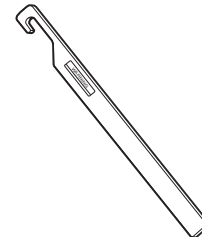


16

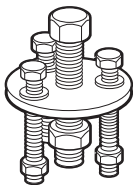

17



18

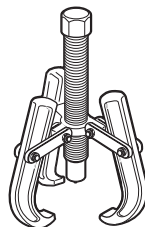

19



20



21

001600-001




MAINTENANCE AND SERVICE TOOLS

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	17 G E
		1 2 3 4 The following tool list includes all tools available from Club Car to perform maintenance and service procedures on all electric utility vehicles and all gasoline utility vehicles equipped with Kawasaki FE-series engines. Be sure to carefully examine the tool list for applicability to your vehicle before ordering.			
1	<u>101871001</u>	Accelerator Pedal Adjustment Tool (Utility Vehicles).....	1	1	
2	<u>101813202</u>	Adhesive, Guide Ring, 3-Gram Tube		1	
3	<u>101641202</u>	Arbor	1		
4	<u>101831901</u>	Battery Discharge Machine, 36/48 Volt		1	
5	<u>1014305</u>	Battery Terminal Protector Spray	1	1	
6	<u>1011767</u>	Battery Thermometer	1	1	
7	<u>1016417</u>	Bearing and Oil Seal Remover Assembly	1	1	
8	<u>1016416</u>	Bearing Driver Set	1	1	
9	<u>1012811</u>	Bearing Puller	1	1	
10	<u>1012812</u>	Bearing Puller Wedge Attachment	1	1	
11	<u>1013582</u>	Brake Adjustment Tool (used only on vehicles with manually adjusted mechanical brakes)	1	1	
12	<u>102555501</u>	Brake Cable Release Tool	1	1	
13	<u>101887101</u>	Calibration Test Module		1	
14	<u>102562401</u>	Charger Bezel Tool		1	
		Clutch Tools (items 14 - 20)	1		
15	<u>101808401</u>	Clutch Cam Installation Tool (for Kawasaki engines)	1		
16	<u>1015524</u>	Drive Clutch Holder Tool Assembly (for Kawasaki engines)	1		
17	<u>1014497</u>	Drive Clutch Hub Puller (for Kawasaki engines)	1		
18	<u>1014496</u>	Drive Clutch Puller (for Kawasaki engines)	1		
19	<u>1014508</u>	Driven Clutch Cam Puller (for Kawasaki engines)	1		
20	<u>1014507</u>	Driven Clutch Puller Plug (for Kawasaki engines)	1		
21	<u>101809101</u>	Press Weldment (for Kawasaki engines)	1		
		Please refer to the maintenance and service manual for proper tool application.			

17

G

E

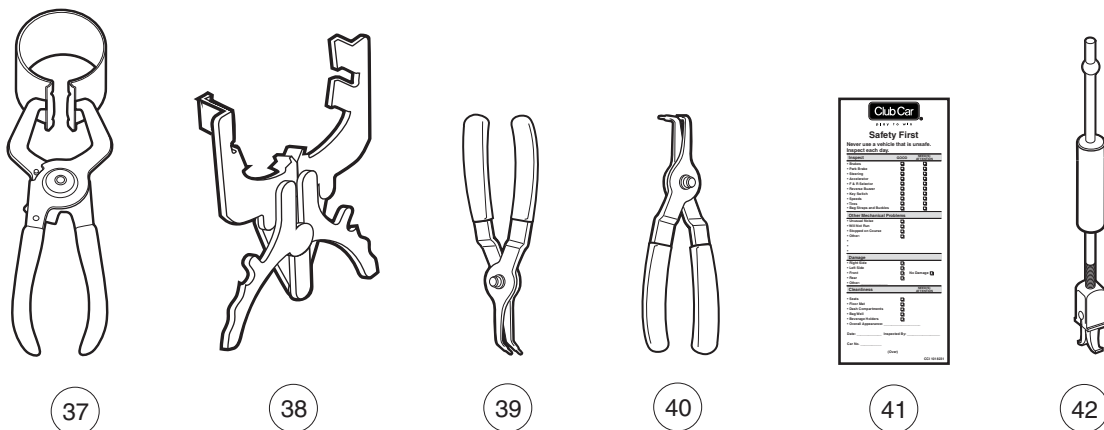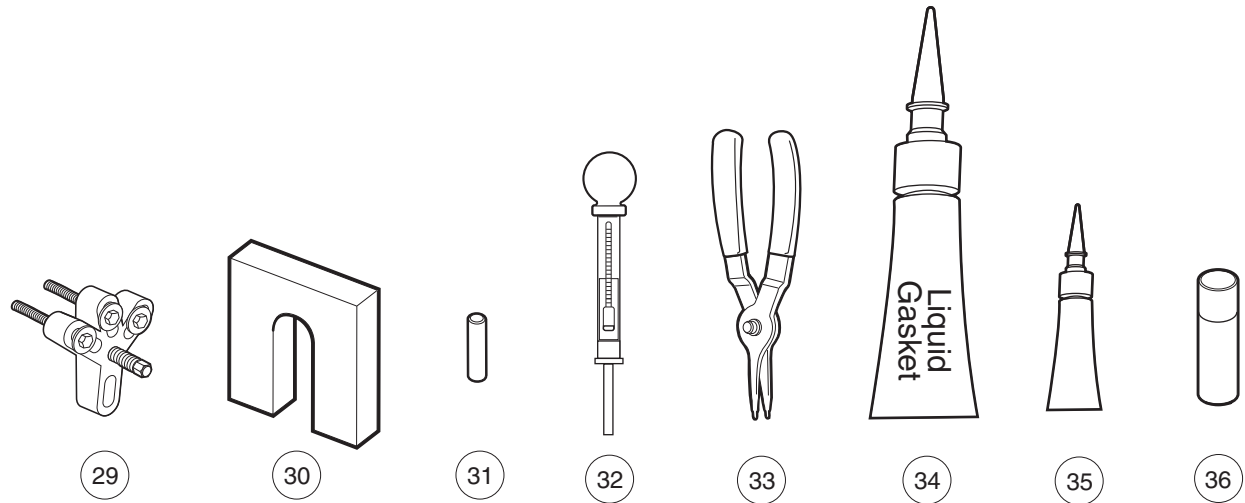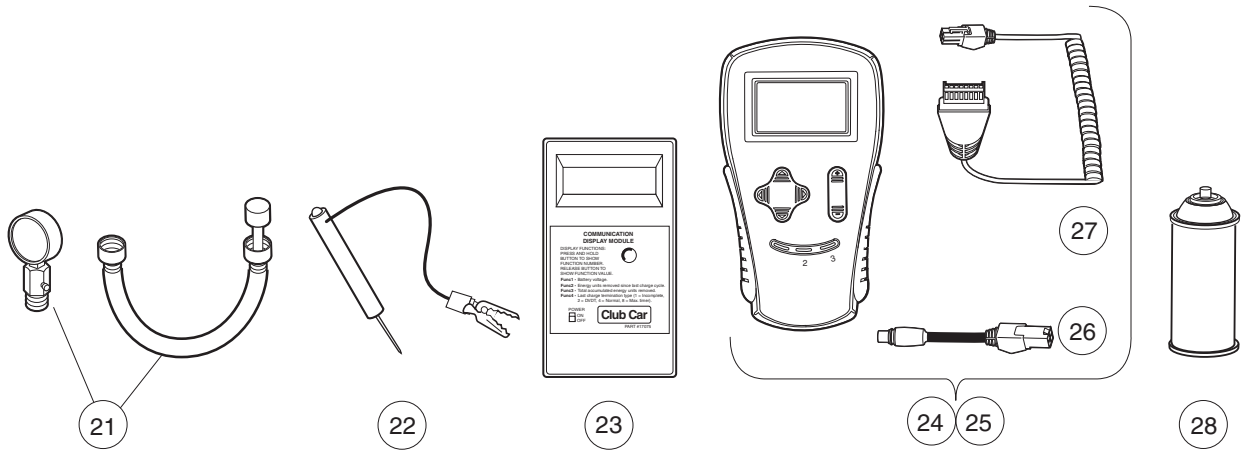


001601-001

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	17 G E
		1 2 3 4			
21	101641002	Compression Gauge and Adapter	1		
22	1011273	Continuity Tester	1	1	
23	101831801	Communication Display Module		1	
24	<u>102248803</u>	IQ Display Module (IQDM) Kit (IQ System and IQ Plus vehicles) (includes items 54 and 55)		1	
25	102248804	IQ Display Module (IQDM-P) Kit (IQ System and IQ Plus vehicles) (includes items 54 and 55)		1	
26	<u>102251501</u>	Adaptor, Cable		1	
27	<u>102241502</u>	IQDM Series 2 Cable		1	
28	<u>1012151</u>	Dry Moly Lubricant	1	1	
29	<u>1016627</u>	Flywheel Puller Kit (for Kawasaki Engines)	1		
30	<u>1016418</u>	Gear Yoke	1	1	
31	<u>101933101</u>	Governor Shaft Installation Tool (for Kawasaki Engine Vehicles)	1		
32	<u>1011478</u>	Hydrometer	1	1	
33	<u>1013593</u>	Internal Retaining Ring Pliers	1	1	
34	<u>101928701</u>	Liquid Gasket (transaxle case)	1	1	
35	<u>102243402</u>	Moly-Teflon Lubricant (4-oz. (113-gram) tube)		1	
36	<u>101997201</u>	Paint, Touch-Up ,Äi Beige*	1	1	
36	<u>101997207</u>	Paint, Touch-Up ,Äi Black*	1	1	
36	<u>101997212</u>	Paint, Touch-Up ,Äi Burgundy*	1	1	
36	<u>101997211</u>	Paint, Touch-Up ,Äi Classic Blue (Navy)*	1	1	
36	<u>101997205</u>	Paint, Touch-Up ,Äi Dark Gray*	1	1	
36	<u>101997209</u>	Paint, Touch-Up ,Äi Dark Green*	1	1	
36	<u>101997204</u>	Paint, Touch-Up ,Äi Gray*	1	1	
36	<u>101997203</u>	Paint, Touch-Up ,Äi Red*	1	1	
36	<u>101997206</u>	Paint, Touch-Up ,Äi Royal Blue (Pacific Blue)*	1	1	
36	<u>101997202</u>	Paint, Touch-Up ,Äi White*	1	1	
37	<u>1016414</u>	Piston Ring Compressor Kit	1		
38	<u>1016415</u>	Piston Ring Pliers	1		
39	<u>1012549</u>	Retaining Ring Pliers, 45→× External	1	1	
40	<u>1012560</u>	Retaining Ring Pliers, 90→× Internal	1	1	
41	<u>101823101</u>	Safety First Card (50 per pack)	1	1	
42	<u>1012809</u>	Seal Puller	1	1	
		Please refer to the maintenance and service manual for proper tool application.			



43



44

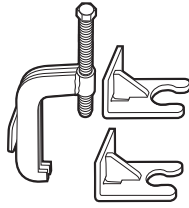


45




46




47



48

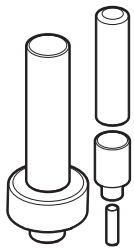

49




51




52




53

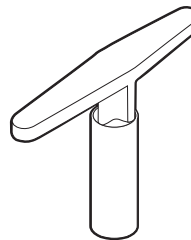


54

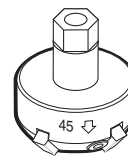


55

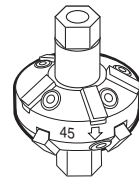

56

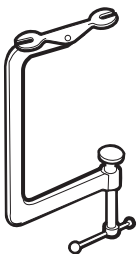

57

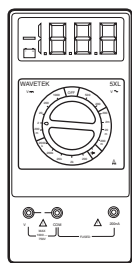

58

001602-001

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	17 G E
		1 2 3 4			
43	<u>1014264</u>	Steering Column Bearing Press Tool	1	1	
44	<u>1014259</u>	Steering Column Retaining Ring Tool	1	1	
45	102061201	Steering Wheel Puller Tool	1	1	
46	<u>AM10753</u>	Tachometer (includes gasoline engine pick up lead only)	1		
47	<u>1014162</u>	Transaxle Axle Seal Tool (for electric vehicles)		1	
48	1014161	Transaxle Pinion Seal Tool (for electric vehicles)		1	
49	<u>1014115</u>	Transmission Tool Kit (for electric vehicles).....		1	
50	<u>101611003</u>	Tune-Up Kit, All OHV (for FE290, FE350, FE400 only) (includes air filter, spark plug, oil filter, fuel filters) (not shown)	1		
51	<u>1016413</u>	Valve Clearance Adjuster Screw Holder (for FE290 engines only)	1		
52	101641201	Valve Guide Reamer (FE290, FE350, and FE400 only).....	1		
53	<u>1016552</u>	Valve Seat Cutter Guide	1		
54	<u>1016551</u>	Valve Seat Cutter T-Wrench	1		
55	<u>1016553</u>	Valve Seat Cutter, 45→× (32 mm diameter) (for FE290 engines only)	1		
56	<u>1016554</u>	Valve Seat Cutter, 45→×/30→× (35 mm diameter)	1		
57	<u>101641101</u>	Valve Spring Compressor	1		
58	1011480	Volt Ohm Meter	1	1	
		Please refer to the maintenance and service manual for proper tool application.			

INDEX

Part Number and Page

AM10753	17-7	1624	5-5, 5-7, 6-3, 6-17	1010005	6-13
AM10080	12-9	1703	1-23, 1-25, 1-27	1010028	12-3
AM10081	12-9	2402	6-15	1010086	1-39
AM10419	11-7	4029	4-27	1010124	6-17
AM10682	2-3	7048	6-13, 6-19	1010138	6-15
AM1232301	8-5	7049	1-37	1010145	6-21, 6-23
AM1243501	4-25	7173	1-11, 7-15	1010150	6-17
AM1243701	4-21, 4-23, 4-25	7174	1-47, 6-7, 7-7, 9-15, 10-3, 13-13, 14-3, 14-5	1010200	6-17
AM1243801	4-21, 4-23, 4-25	7251	1-3, 1-11	1010219	6-15
AM1264001	1-49	7274	6-13	1010237	1-23, 1-25, 1-27
AM1304001	1-53	7308	6-13	1010342	6-13
AM1304101	1-53	7310	2-3	1010344	6-13
AM1304201	1-53	7311	1-23, 1-25, 1-27, 1-39, 16-13	1010347	6-13
AM1304301	1-53	7330	12-11, 15-3	1010348	6-13
AM1304401	1-53	7335	12-9, 15-3	1010434	1-3, 1-5, 1-35
AM1304501	1-53	7336	15-3	1010435	1-3, 1-31
AM1304601	1-53	7473	1-3, 1-23, 1-25, 1-27, 1-31, 1-37, 1-69, 5-3, 5-5, 5-7, 5-13, 7-11, 7-15	1010543	1-15
AM1304701	1-53	7479	1-39, 16-13	1010546	1-3
AM1304801	1-53	7532	1-31	1010577	8-15
AM1304901	1-53	7539	6-15	1010805	5-3
AM1305001	1-53	7540	6-3, 6-15	1010829	5-13
AM1305101	1-53	7555	6-3, 6-15	1010850	5-11
AM1305201	1-53	7577	16-5, 16-7, 16-9, 16-11	1010877	5-3
CCX8506	16-3, 16-5, 16-7	7591	4-5, 4-7	1010878	1-33, 5-3
SVP148901	16-13, 16-15	7602	6-3, 6-15	101090801	13-11
SVP148902	16-13, 16-15	7716	5-3, 5-5, 5-7	1010909	4-19
SVP149001	16-15	7818	7-11	1010921	1-23, 1-25, 1-27, 5-3
SVP150002	16-13	7820	4-27	1010927	5-3
183	4-9, 4-19, 4-25, 9-3, 9-5, 9-17, 11-5, 12-7, 12-13	7840	6-13	1010932	5-3
304	1-67, 4-27, 12-5, 16-13, 16-15	7847	1-9, 1-51, 10-3, 16-13, 16-15	1010933	5-3
324	4-21, 4-23	7893	4-9, 4-19, 7-11, 12-5	1010934	1-37, 1-39, 1-47, 7-15, 14-3, 14-5
332	1-15, 1-33, 1-37, 1-39, 1-51, 4-21, 4-23, 4-27, 7-9, 9-19, 10-3, 13-13, 16-13, 16-15	7910	6-13	1010954	7-11, 12-7, 12-13
334	5-5, 5-7, 6-3, 6-5, 8-15, 11-5	7973	1-7, 9-17	1010984	2-3
357	1-47, 6-17	8057	7-11, 7-13, 12-3	1011014	1-3
403	1-31	8058	7-11, 7-13, 12-3	1011017	1-3
451	10-3, 14-3, 14-5	8067	6-13, 6-19	1011084	5-9
705	1-31, 1-47, 7-7, 8-15, 16-13, 16-15	8104	4-9, 12-3	1011226	1-67
706	1-47, 6-17, 6-19	8233	1-23, 1-25, 1-27, 1-33, 1-37, 1-51, 1-67, 4-21, 4-23, 4-27, 4-29, 5-5, 5-7, 7-9, 9-15, 12-5, 12-7, 12-13, 16-13, 16-15	1011229	4-5, 4-7
808	11-5	8248	1-11, 7-9	1011273	17-5
1016	4-9, 4-19, 9-3, 9-5	8251	1-29, 1-43	1011280	14-3
1017	4-3	8294	4-27	1011285	14-3
1028	5-3	8450	11-5	1011290	14-3
1032	1-35, 5-3	8639	1-67, 4-25, 12-5, 13-13, 13-15, 16-13, 16-15	1011291	12-11
1035	1-67, 6-3, 6-15	8717	5-7, 7-11, 12-3, 12-7, 12-13	1011382	4-11, 4-13
1108	1-39	8745	6-17	1011393	6-13
1218	1-23, 1-25, 1-27	8754	1-31, 5-5, 5-7, 6-3, 6-5, 6-15, 6-17, 6-21, 6-23, 7-7, 16-13, 16-15	1011394	1-3
1231	1-35	8755	1-31, 6-17, 6-21, 6-23	1011402	5-3
1241	1-3, 1-23, 1-25, 1-27, 1-47, 5-3, 5-5, 5-7, 5-13, 7-7, 7-11, 7-15, 10-3, 14-3	8797	9-3, 9-5	1011411	14-3
1242	1-47, 4-17, 5-13, 7-7, 7-11, 13-13	8861	6-15	1011415	6-21, 6-23
1308	6-15	8963	1-23, 1-25, 1-27	1011418	5-3
1606	9-17	8990	4-9, 4-17, 4-23, 4-29, 6-3, 7-11, 13-13, 13-15	1011439	4-5, 4-7
1620	4-3			1011466	5-11
				1011478	17-5
				1011480	17-7
				1011546	1-49
				1011553	1-47, 3-3

INDEX

1011578	6-5	1012560	17-5	1013677	3-5
1011582	4-31	1012565	6-11	1013683	13-11
1011590	4-9	1012566	6-11	1013687	9-3, 9-5
1011694	5-5, 5-7	1012571	8-15, 13-11	1013700	9-15
1011697	6-5, 8-15, 9-15	1012604	6-5	1013734	10-3, 13-13
1011734	5-9	1012605	6-5	1013746	9-3, 9-5, 9-7, 9-11, 9-13
1011767	17-3	1012640	2-5	1013760	12-7
1011779	5-13	1012641	2-5	1013768	12-11
1011825	4-5, 4-7, 4-27	1012642	2-5	1013769	12-11
1011843	4-31	1012649	9-3, 9-5, 9-7	1013770	12-11
1011852	1-23, 1-25, 1-27	1012711	12-7	1013771	12-11
1011862	1-23, 1-25, 1-27	1012714	12-9	1013772	12-11
1011865	1-23, 1-25, 1-27	1012740	12-9	1013773	12-11
1011868	1-23, 1-25, 1-27	1012741	12-9	1013774	12-11
101187702	5-3	1012747	12-9	1013787	12-11
1011878	1-11, 1-23, 1-25, 1-27, 1-43	1012748	12-9	1013792	12-11
1011883	1-23, 1-25, 1-27	1012752	12-7	1013794	12-11, 15-3
1011887	6-13	1012809	17-5	1013824	1-11
1011892	6-13	1012811	17-3	1013825	1-11
1011893	6-15	1012812	17-3	1013846	1-11
1011895	6-3, 6-15	1012830	7-7, 9-15, 10-3	1013857	4-5, 4-7
1011897	1-21	1012836	11-7	1013861	6-7
1011930	6-3, 6-15	1012896	12-7	1013869	5-3
1011931	5-5, 5-7	1013001	7-5	1013870	5-3
1011937	1-23, 1-25, 1-27	1013003	7-5	1013871	5-5, 5-7
1011942	1-23, 1-25, 1-27	1013005	7-5	1013876	5-3
1011962	1-43	101301102	7-5	1013924	5-11, 8-15
1011963	1-43	1013035	6-3	1014007	5-5, 5-7, 9-15, 12-7, 12-13
1011964	1-23, 1-25, 1-27, 1-43, 1-67	1013042	6-3	1014049	11-5
1011965	1-23, 1-25, 1-27, 1-43	1013044	6-3	1014050	11-5
1011972	1-43	1013052	6-3	1014051	11-5
1011990	1-35, 1-47, 16-13, 16-15	1013061	12-3, 12-7, 12-13, 13-7	1014052	11-5
1012008	1-23, 1-25, 1-27	101313402	9-7	1014055	11-5
1012030	6-17	1013135	6-13	1014056	11-5
1012098	16-3, 16-5, 16-7, 16-9, 16-11	1013164	6-21, 6-23	1014057	11-5
1012101	16-7, 16-9, 16-11	1013207	6-23	1014058	11-5
1012151	17-5	1013309	1-15	1014059	11-5
1012159	16-15	1013311	1-15	1014062	11-5
1012181	6-21, 6-23	1013312	1-15	1014063	11-5, 13-13, 16-15
1012182	6-21, 6-23	1013317	1-35, 3-9	1014065	7-11, 11-5
1012285	1-51, 1-67, 4-29, 9-3, 9-5, 9-7, 9-15, 13-13	1013343	1-7	1014070	11-7
1012295	7-11	1013344	1-7	1014072	11-7
1012303	1-31, 6-17, 6-21, 6-23	1013420	1-9	1014078	11-7
1012304	6-21, 6-23	1013422	1-9	1014080	11-7
1012328	7-15	1013461	9-3, 9-5	1014115	17-7
1012333	12-5	1013462	9-3, 9-5	1014116	9-3, 9-5
1012349	1-67	1013483	1-47	1014119	7-3, 7-11
1012382	7-3	1013494	4-11, 4-13	1014125	6-5
1012396	4-11, 7-3	1013509	4-21, 4-23, 16-13	1014126	6-5
1012431	7-11	1013531	5-13	1014145	7-11
1012438	4-25	1013547	4-29	1014153	5-11
1012467	6-3	1013579	4-29	1014161	17-7
1012505	4-11, 4-13	1013582	17-3	1014162	17-7
1012528	10-3, 13-13	1013589	7-11	1014201	14-3, 14-5
1012549	17-5	1013593	17-5	1014207	12-11
		1013609	7-11	1014213	6-5

INDEX

1014214	6-5	101503202	1-7	101562715	1-15
1014217	6-5	1015068	1-43	101564501	1-15
1014259	17-7	1015072	13-11	101564502	1-15
1014264	17-7	1015075	1-3	101564503	1-15
1014276	6-17	1015091	1-43	101564505	1-15
1014287	11-5	1015137	9-3, 9-5, 9-7, 9-11, 9-13	1015649	8-3
1014288	6-5, 7-15, 11-5, 13-13, 16-15	1015139	9-3	1015654	1-39
1014289	7-5	1015143	9-3	1015656	1-39
1014304	13-11	1015148	1-43	101565701	1-39
1014305	17-3	1015153	4-21	101565702	1-39
1014306	1-51, 4-29	1015154	4-21	101565703	1-39
1014321	1-29, 1-37	1015156	4-21, 4-23, 4-25	101565704	1-39
1014375	7-15	1015157	4-21, 4-23	1015660	1-39
1014387	1-29, 1-37	1015160	4-21, 4-23	101567202	2-3
1014415	1-37, 1-43	1015162	4-21	1015737	4-5, 7-3, 7-11
1014435	1-21	1015167	4-25	1015741	4-5, 4-7, 7-11
101444101	1-21	1015170	4-25	1015752	7-11, 9-19, 13-3
1014453	11-5	1015172	4-21, 4-23	1015765	4-21
1014454	11-7	1015187	4-21, 4-23, 4-25	1015768	4-25
1014471	1-31	101524002	7-7	1015770	4-25
1014490	1-43	1015245	1-35	1015814	10-3
1014496	17-3	1015252	1-31	101584502	9-15
1014497	17-3	1015277	1-33	1015878	7-11, 7-13, 12-3
1014503	1-23, 1-25, 1-27	1015313	1-35	1015914	16-3, 16-7, 16-9, 16-11
1014506	1-23	1015332	7-3, 8-3	1015917	16-7, 16-9
101450698	1-25	1015345	7-11	1015921	9-3, 9-5
1014507	17-3	1015356	1-31	1015932	7-7
1014508	17-3	1015363	1-35	1015969	8-3
1014509	1-23	1015365	1-35	1016060	1-33
101450902	1-27	1015367	1-35	1016074	7-7
101450903	1-25	1015371	7-11	1016077	1-39
1014517	1-43	1015372	7-11	1016078	1-33
1014521	1-43	1015373	7-11	101609401	3-3
1014523	9-3, 9-5	1015390	1-35	101611003	17-7
1014530	4-5, 4-7, 4-27	1015391	1-31	101611402	15-5
1014537	1-37	1015399	1-31, 1-37, 1-69	1016154	6-11
1014540	4-29	1015400	1-31, 1-35	101615504	6-9
101454602	6-21	1015405	1-3, 7-11	1016156	6-9, 6-11
1014548	1-43	1015413	1-35	1016183	6-5
101454902	6-23	1015414	1-35	1016201	11-5
1014555	6-21, 6-23	1015426	9-19	1016214	6-11
1014556	1-43	1015427	1-31	1016219	6-11
1014559	1-43	1015445	1-47	1016230	4-25
1014573	6-21, 6-23	101547601	3-7	1016267	4-25
1014675	6-21, 6-23	1015507	1-31	1016269	6-5
1014771	2-3	1015524	17-3	1016287	4-25
1014807	7-11, 7-13, 12-3	1015526	4-21, 4-23, 4-25	1016289	11-5
1014808	7-11, 7-13, 12-3	1015528	4-11, 4-13	1016337	12-9
1014901	6-21, 6-23	1015530	1-51	1016338	12-9
1014902	6-21, 6-23	101553901	1-35, 1-39, 3-3	1016346	6-15
1014942	1-43	1015583	1-31, 6-17, 6-21, 6-23	1016349	6-15
1014943	1-43	1015597	6-3, 6-13, 6-15, 6-19	1016350	6-15
1014944	1-43	1015606	1-35	1016351	6-15
1014947	13-13	101562711	1-15	1016353	6-15
1014948	7-11	101562712	1-15	1016356	4-5, 4-7
1015010	4-25	101562714	1-15	1016363	4-5, 4-7

INDEX

1016364	4-5	1016496	8-11	1016631	4-5, 4-7
1016365	4-17	1016497	8-5	1016663	6-9, 6-11
1016367	4-5	1016499	9-9	1016672	12-11
1016384	6-17	1016501	9-9	1016673	16-13, 16-15
1016385	6-15	1016502	8-7	1016679	1-51
1016386	6-17	1016506	8-11	101670201	3-9
1016387	6-17	1016507	8-3	1016751	1-17
1016389	6-17	1016510	8-11	101675511	1-17
1016401	7-3, 7-11	1016513	12-7	101675512	1-17
101641002	17-5	101651402	2-3	101675514	1-17
101641101	17-7	101651406	2-3	101675515	1-17
101641201	17-7	101651407	2-3	101677701	1-17
101641202	17-3	101651409	2-3	101677702	1-17
1016413	17-7	101651412	2-3	101677703	1-17
1016414	17-5	101651413	2-3	101677705	1-17
1016415	17-5	1016517	8-9	1016801	11-5
1016416	17-3	1016518	8-9	1016837	4-21, 4-23
1016417	17-3	1016519	8-9	1016849	4-11, 4-13
1016418	17-5	1016521	8-11	1016851	4-11, 4-13
1016423	4-5, 4-7, 7-11	1016531	8-3	1016868	1-3
101642575	9-9	1016535	8-11	1016879	4-3
101642578	9-9	1016537	8-7	1016880	4-3
101642580	9-9	1016538	8-11	1016883	7-7
101642582	9-9	1016539	8-3	1016904	1-67, 8-9, 10-3
101642585	9-9	1016541	8-13	1016916	1-39
1016429	8-7	1016544	8-5, 8-9, 8-11	101692501	1-3
1016432	8-7, 12-7	1016546	9-15	101692502	1-3
1016436	8-9	1016547	8-3, 8-13, 9-11, 9-13	101692504	1-3
1016437	9-9	1016549	8-9	101692506	1-3
1016438	9-11, 9-13	1016551	17-7	101692509	1-3
1016440	8-9, 9-11, 9-13	1016552	17-7	101692510	1-3
1016441	9-11, 9-13	1016553	17-7	101692511	1-3
1016444	9-11, 9-13	1016554	17-7	101692512	1-3
1016445	8-5	1016560	8-9	101692513	1-3
1016449	8-9	1016561	8-5	101692514	1-3
1016450	8-9	1016562	8-5, 8-13	101692515	1-3
1016452	8-9	1016563	8-9	1016929	4-21, 4-23, 4-25
1016454	8-11	1016564	8-11	101693901	1-3
1016455	8-5	1016566	8-9	101693902	1-3
1016456	8-3, 8-5	1016569	8-9	101693904	1-3
1016457	8-7	1016570	8-7	101693906	1-3
1016458	8-9	1016571	8-13	101693909	1-3
1016467	8-7	1016572	9-11, 9-13	101693910	1-3
1016470	8-13	1016576	8-7	101693911	1-3
1016472	8-11	1016578	8-5	101693912	1-3
1016473	8-7	1016579	8-5	101693913	1-3
1016474	8-9	1016581	8-7	101693914	1-3
1016479	8-9	1016582	9-11, 9-13	1016952	1-9
1016480	9-11	1016583	8-9	1016967	1-3
101648102	9-11, 9-13	1016584	8-11	1017029	5-3
101648203	8-7	1016585	9-9	1017035	4-5, 4-7, 4-31
1016483	8-9	1016586	8-5	101705608	4-5
1016486	9-9	1016587	8-5	1017062	4-3
1016489	8-9	1016588	8-5	1017064	4-3
101649002	9-11, 9-13	1016627	17-5	1017065	4-3
1016494	8-11	1016630	4-11	101707402	4-9

INDEX

1017075	4-9	1017501	8-13	101802206	16-5
1017080	1-3	1017502	8-13	101804301	4-11, 9-19
1017082	12-7, 12-13	1017503	8-13	101805701	9-17
1017188	11-3	1017504	8-11	101806001	1-13
1017189	16-13, 16-15	1017507	8-7	101806002	1-13
1017226	6-7	1017508	8-11	101806005	1-13
1017231	12-7	1017510	8-13	101808401	17-3
1017235	6-21, 6-23	1017512	8-13	101809101	17-3
1017266	6-15	1017513	8-11	101810501	4-7
1017273	6-9, 6-11	1017514	8-11	101810601	4-7
101728602	1-19	101751801	8-11	101811401	9-17
1017313	6-5	101751802	8-11	101811501	9-17
1017314	6-5	101751803	8-11	101811901	9-19
1017315	6-5	101754203	1-69	101812301	9-19
1017317	6-5	101754206	1-69	101813001	9-19
101734802	1-3	1017653	7-5	101813202	17-3
101737002	2-3	1017686	11-7	101814011	4-7
1017378	5-5, 5-7	1017689	1-67, 10-3	101814601	4-23
1017380	5-5, 5-7	101769302	2-3	101815501	5-11
1017424	5-5, 5-7	1017696	5-5, 5-7	101815502	5-11
1017434	8-9	1017699	4-31	101816301	5-11
1017435	8-9	101770203	1-41	101816501	5-11
1017442	8-7	1017705	13-7	101816502	5-11
1017443	8-9, 8-11	1017721	4-5, 4-19	101817401	5-5, 5-7
1017444	8-9	1017722	4-5	101818801	5-7
1017445	8-9	1017724	4-9	101819701	16-7
1017446	8-9	101773301	8-13	101821501	9-19
1017447	8-11	101773302	8-13	101821601	4-25
1017448	8-5	101773303	8-13	101823101	17-5
101744901	8-13	101773304	8-13	101823201	5-11
101744902	8-13	101773305	8-13	101823301	5-11
1017450	8-13	101773306	8-13	101823302	5-11
101745101	8-13	101773307	8-13	101823801	5-11
101745102	8-13	101773308	8-13	101823901	5-11
1017453	8-13	101773309	8-13	101824001	5-11
1017454	8-9	101773310	8-13	101824002	5-11
1017455	8-5	101773311	8-13	101824401	9-3, 9-5
1017456	8-7	1017853	4-5, 4-7	101825101	3-3
101745701	8-13	101791101	5-11	101826201	4-13
101745702	8-13	1017944	14-3	101826301	4-11
1017458	8-7	1017947	14-3	101826801	13-13
1017460	8-7	1017949	14-3	101827101	8-15
1017461	9-9	1017950	14-3	101827801	13-13
1017463	8-5	1017953	14-3	101828301	16-7
1017466	9-11, 9-13	101795701	13-5, 13-11	101828501	16-7, 16-9
1017468	8-5	101796201	5-5, 5-7	101828601	16-5
1017471	8-13	101796501	13-7	101828801	16-5, 16-7
1017472	8-11	101796801	13-7	101828802	16-5, 16-7
1017473	8-9	101797801	13-11	101828901	16-7, 16-9, 16-11
1017474	8-3	101801001	13-7	101828902	16-7, 16-9, 16-11
1017475	8-3	101802101	13-7	101828903	16-7
1017476	8-3	101802201	16-7	101828904	16-5
1017486	8-3	101802202	16-7	101828905	16-5
1017487	8-11	101802203	16-7	101828906	16-5
1017490	8-5	101802204	16-5	101830601	4-11, 4-13
1017500	8-3	101802205	16-5	101830701	4-11, 4-13

INDEX

101831101	16-7	101876202	7-5	101894901	13-7
101831503	16-9	101876301	7-5	101895401	15-3
101831504	16-9	101876402	7-5	101895501	15-3
101831701	16-9	101876501	7-5	101896501	7-5
101831702	16-9	101876901	6-19	101896801	16-13, 16-15
101831801	17-5	101877001	6-19	101897001	15-3
101831901	17-3	101877601	7-5	101897201	15-3
101832001	13-7, 16-13, 16-15	101877701	7-5	101897401	15-3
101832202	9-15	101878101	7-5	101897601	15-3
101832302	9-15	101878201	5-3	101898001	7-15
101832601	8-15	101878302	6-3	101900801	6-21
101832701	8-15	101879001	7-5	101903001	13-5
101833101	8-15	101879401	6-3	101903101	6-17
101833401	11-7	101879501	6-3	101903601	15-3
101833601	12-7	101879601	6-3	101903701	15-3
101833701	7-5	101879701	6-3	101905901	9-9
101833902	11-5	101879801	6-3	101906901	15-3
101834001	11-7	101879901	6-3	101908101	13-9
101834502	4-11, 4-13	101880001	6-3	101908401	7-9, 13-9
101834601	8-15	101880101	6-3	101908601	3-5
101834801	9-15, 12-7, 12-13	101880201	6-3	101908703	13-13
101835601	1-31, 1-33, 4-17, 16-15	101880301	6-3	101909201	8-5
101836201	11-7	101881501	4-29	101909301	8-5
101837101	9-19	101881601	4-29	101909401	8-5
101837301	7-3, 7-7	101881701	9-19	101909501	8-5
101837401	1-45	101884801	8-15	101910401	13-13
101837501	1-45	101884901	2-3	101910501	12-11
101838201	16-9	101885601	1-43	101912401	5-9
101838301	16-9	101886101	9-15, 12-7, 12-13	101914001	15-5
101838401	16-9, 16-11	101887101	17-3	101914401	4-5, 16-7, 16-9
101838501	16-9	101887601	8-3	101914402	4-7
101838601	16-9, 16-11	101889401	12-9	101915201	3-7
101838701	16-9	101890001	12-9	101916001	8-13
101850301	9-17	101890101	12-7	101916101	8-3
101851101	4-11, 4-13	101890201	12-7	101916201	8-5
101856002	4-13	101890501	12-7	101916301	8-5
101856102	7-11	101890601	12-7	101916701	7-7
101856201	9-17	101890901	12-11	101917601	9-19
101859401	10-3	101891001	12-11	101917701	9-17
101861901	5-5, 5-7	101891301	12-7	101918101	1-43
101862001	5-5	101891401	12-11	101918402	2-3
101869302	7-5	101891501	12-11	101918501	5-3
101870401	1-3	101891601	12-9	101919801	5-5, 5-7
101871001	17-3	101891901	12-9	101920101	13-3, 14-3, 14-5
101874901	7-5	101892001	12-9	101921501	9-19
101875001	7-5	101892201	12-9	101922101	15-3
101875101	7-5	101892301	12-9	101922201	15-3
101875102	7-5	101892401	12-9	101922501	7-9, 13-9
101875201	7-5	101892501	12-9	101923001	15-3
101875301	7-5	101892601	12-9	101923201	15-3
101875401	7-5	101892701	12-11	101923501	15-3
101875501	7-5	101892901	12-7	101923901	15-3
101875601	7-5	101893201	12-9	101925601	11-5
101875701	7-5	101893801	12-7	101925701	9-19
101875802	7-5	101893901	12-9	101926901	12-7
101876001	7-5	101894303	1-15	101927101	12-7

INDEX

101927201	12-7	101972006	17-5	102074501	1-67
101927301	12-7	101972007	17-5	102074601	1-67
101927501	12-9	101972009	17-5	102074701	1-67
101927601	12-9	101972011	17-5	102074801	1-67
101927701	12-9	101972012	17-5	102074901	1-67
101927901	12-9	101972101	15-3	102101001	13-3
101928001	12-9	101972201	15-3	102101101	13-3
101928101	12-9	101972801	9-19	102155801	11-7
101928301	12-11	101973101	9-9	102158901	5-5, 5-7
101928601	12-7	101973301	9-9	102163001	1-19
101928701	12-7, 15-3, 17-5	101973401	9-11, 9-13	102163101	1-19
101929501	9-3, 9-5	101973501	16-11	102181101	1-67
101929802	11-5	101976601	16-11	102182101	1-67
101931501	3-5, 13-13	101978001	13-5	102185401	9-17
101932201	1-67	101978101	13-5	102186001	14-5
101932601	13-13	101978201	13-5	102186101	14-5
101932701	13-13	101978601	15-5	102186201	14-5
101933101	17-5	101980801	12-9	102186401	14-5
101936101	15-5	101980901	12-9	102186701	14-5
101936801	13-3	101981001	12-9	102186901	14-5
101939701	16-13	101984801	6-5	102187001	14-5
101939801	16-15	101987501	16-11	102187101	14-5
101939901	7-5	101987801	4-5	102187201	14-5
101942301	14-3, 14-5	101987901	4-3	102190702	9-17
101946201	1-29	101988001	4-3, 4-5, 4-7	102196901	4-13, 13-5
101953101	5-13	101988002	4-3, 4-5, 4-7	102198501	1-27
101953802	8-3	101988101	4-3	102198701	4-5
101953804	8-3	101988201	4-3	102199001	4-5
101954301	1-15	101990801	5-13	102199201	4-5, 4-7
101955101	4-27	101994301	1-61	102199301	4-5, 4-7
101956201	16-11	101994401	1-65	102199401	4-5, 4-7
101956202	16-11	101994601	1-59	102199601	13-5
101957101	4-5, 4-7	101994801	1-63	102235201	14-3, 14-5
101958101	9-17	101995101	1-55	102240104	14-3
101958201	16-11	101997802	4-29	102240501	13-13
101958301	16-11	101997803	4-29	102241502	17-5
101958601	1-33	101997902	4-29	102242101	11-7
101959902	3-5	101997903	4-29	102243101	13-13
101960101	3-3	102003201	9-3, 9-5	102243402	17-5
101960501	3-7	102004001	6-19	102243403	14-3, 14-5
101962601	4-7	102005701	1-19	102248803	17-5
101963301	1-29	102006201	1-69	102251501	17-5
101963401	1-29, 1-37, 8-15	102022101	5-13	102259801	13-13
101964001	1-29	102025401	1-67	102262901	1-53
101964201	13-11	102026001	5-5, 5-7	102263601	13-5, 13-13
101964202	13-11	102031901	12-11	102263701	13-13
101965202	13-13	102051901	4-5, 4-7	102264501	1-53
101965401	16-13, 16-15	102056503	1-67	102265601	14-3
101968701	13-5	102061201	17-7	102265701	14-3
101969701	4-5, 4-7, 4-27	102065901	1-31, 8-15	102265801	14-3
101971301	9-19	102066001	1-31	102265901	14-3
101972001	17-5	102070601	1-67	102266001	14-3
101972002	17-5	102071401	1-67	102266101	14-3
101972003	17-5	102071701	1-67	102267001	14-3
101972004	17-5	102074101	1-67	102267501	4-7
101972005	17-5	102074201	1-67	102272601	1-57

INDEX

102273101	4-7	102753401	8-9	102901501	12-17
102273201	16-5	102771701	15-3	102901601	12-17
102273301	16-5	102806201	13-13	102901701	12-17
102273401	16-5	102806203	13-13, 13-15	102901801	12-17
102273501	16-5	102838401	8-5	102901901	12-17
102273601	16-5	102865101	9-3, 9-5	102902001	12-17
102273701	16-3, 16-5	102869401	4-5, 4-7	102902101	12-17
102273801	16-3, 16-5	102886301	15-3	102902201	12-17
102273901	16-3, 16-5	102886401	15-3	102902301	12-17
102274001	16-5	102886501	15-3	102902401	12-17
102278001	6-5	102886601	15-3	102902501	12-17
102292801	5-13	102896801	12-13	102902601	12-17
102304801	8-9	102896901	12-13	102902701	12-17
102323101	5-3, 5-13	102897201	12-15	102902801	12-17, 15-3
102323201	5-3, 5-13	102897301	12-15	102966401	1-29
102336001	9-15	102897401	12-13	102966501	1-29
102336101	9-15	102897501	12-13	102966502	1-29
102352201	4-17	102897601	12-13	102969401	12-3
102354901	4-17	102897701	12-15	102969801	12-3
102355001	4-17	102897801	12-13	102969901	12-3
102355301	7-15	102897901	12-13	102974201	9-3
102356601	15-3	102898001	12-15	102977001	4-11
102356801	15-3	102898101	12-15	102977002	4-13
102357501	4-17	102898201	12-13	102977901	9-3, 9-5
102376001	12-3	102898301	12-15	102978001	9-3, 9-5
102406701	9-5	102898401	12-15	102989501	1-29, 1-31
102430901	8-13	102898501	12-15	103173301	12-3
102431001	8-11	102898601	12-15	103174401	1-5
102453001	12-9	102898701	12-15	103177401	12-3
102453101	12-9	102898801	12-15	103180101	4-11, 4-13
102458901	3-7	102898901	12-15	103187601	9-3
102459301	3-3	102899001	12-15	103192701	12-3
102508701	4-13	102899101	12-13	103197001	7-3
102513701	9-3	102899201	12-13	103198301	4-13
102515401	12-7, 12-13	102899301	12-15	103198401	7-9
102518001	3-5	102899401	12-13	103199001	4-11
102519201	3-7	102899501	12-15	103199101	4-11
102522001	9-3, 9-5	102899601	12-15	103205401	3-3
102526201	12-3	102899701	12-13	103205501	3-7, 7-9
102529201	4-9	102899801	12-13	103210201	3-7
102540301	8-15	102899901	12-15	103210301	3-5
102555501	17-3	102900001	12-13	103218601	4-13, 13-5
102559901	2-5	102900101	12-13	103221801	13-5
102562401	17-3	102900201	12-13	103234301	3-9
102569101	4-7	102900301	12-13	103245201	1-29
102569304	2-3	102900401	12-15	103245301	1-29
102572401	4-13, 13-5	102900501	12-15	103254101	4-5
102588501	6-21, 6-23	102900601	12-13	103257001	4-7
102616701	12-3	102900701	12-15	103257603	4-15
102684602	12-3	102900801	12-17	103257701	4-15
102704701	14-5	102900901	12-13	103257801	4-15
102704801	14-5	102901001	12-15	103260001	3-9
102704901	14-5	102901101	12-15	103260701	3-9
102705001	14-5	102901201	12-17	103274401	1-53
102711201	7-11	102901301	12-17	103284001	3-9
102751601	9-3	102901401	12-17	103295101	12-5

INDEX

103295201 12-5
 103306301 9-3, 9-5
 103316701 13-13
 103316801 13-13
 103316901 13-13
 103325501 14-3
 103325601 14-3
 103325701 14-3
 103325801 14-3
 103337601 14-3
 103345701 11-5
 103348201 4-11
 103348202 4-15
 103348501 4-11, 7-3
 103348601 4-11
 103351001 6-15
 103354401 4-15
 103369101 9-5
 103369501 12-3
 103372101 9-5
 103372201 9-5
 103372301 9-5
 103372401 9-7
 103372501 9-7
 103372801 9-7
 103374701 9-5
 103397901 4-7, 16-7
 103403101 13-13
 103406501 1-35
 103406502 1-35
 103406601 1-35
 103414901 4-7, 16-7
 103418601 9-7
 103428501 16-3
 103428601 16-3
 103428701 16-3
 103428801 16-3
 103429001 16-3
 103429101 16-3
 103429201 16-3
 103429301 16-3
 103429501 16-3
 103429601 16-3
 103429701 16-3
 103434001 16-3
 103439901 16-3
 103449501 13-15
 103449601 13-15
 103477901 6-13
 103483801 16-15
 103483901 16-15
 103499101 16-3
 103499102 16-3
 103499103 16-3
 103507001 6-19
 103507101 9-13

103507201 9-13
 103507301 9-13
 103582801 15-3
 103584801 13-15
 103694501 2-5
 96704416 8-15

A

absorber, rear shock 6-21, 6-23
 AC cord 16-3, 16-5, 16-7, 16-9, 16-11
 AC cord bushing 16-3, 16-5
 AC cord receptacle 16-11
 accelerator bracket and bearing assembly 5-5, 5-7
 accelerator cable 9-15
 accelerator pedal 5-5, 5-7
 accelerator pedal adjustment tool 17-3
 accelerator pivot rod 5-5, 5-7
 accelerator return spring 5-5, 5-7
 accelerator rod 5-9
 accessory switch panel 1-59
 adapter
 cable (IQDM) 17-5
 adhesive, guide ring 17-3
 adjuster, lash 8-11
 air box 9-19
 air box top 9-19
 air duct assembly 9-17
 air duct shield 9-17
 air filter 9-19
 air intake hose 9-19
 ammeter 16-3, 16-5, 16-7, 16-9, 16-11
 angled bumper mount 6-23
 A-plate strap 6-15
 A-plate, delta 6-15
 arbor 17-3
 arm
 governor 9-15, 12-7, 12-13
 pivot 12-7
 rocker 8-9
 wiper 1-53
 armature 7-5, 14-3, 14-5
 armature conversion kit 7-5
 assembly
 accelerator bracket and bearing 5-5, 5-7
 accelerator pivot rod 5-5, 5-7
 air box 9-19
 air box top 9-19
 air duct 9-17
 armature 7-5
 axle 12-11
 bearing, steering shaft 6-5
 bell crank and shaft 7-11
 brake lever 5-11
 brush connector 7-5
 brush holder 7-5

cab 1-53
 carburetor 9-9
 connecting rod 8-13
 cylinder head 8-9
 delta A-plate 6-15
 delta shock and gear support 6-15
 diode 4-7
 drive hub 11-5
 driven clutch 11-7
 driven clutch fixed-face 11-7
 field coil 7-5
 float 9-9
 frame and field (motor) 14-5
 front panel 1-35
 fuel cap 9-5
 fuel tank vent 9-3
 governor 12-9, 12-15
 headlight 4-3, 4-5, 4-7
 headlight harness 4-3
 hinge, tilt bed 1-31
 idle screw 9-9
 inner ball joint 6-3
 kingpin 6-17
 latch weld 1-31
 moveable-face 11-5, 11-7
 pilot air screw 9-9
 plug cap 8-5
 ratchet 5-3
 score card plate 6-11
 secondary clutch weight 11-5
 side panel 1-35
 steering shaft 6-5
 steering wheel 6-9, 6-11
 tailgate 1-35
 turn signal lens 4-3
 axle 12-7, 12-11, 12-17, 15-3
 axle guard 15-5
 axle shaft oil seal 12-11, 12-17, 15-3
 axle tube 12-11, 12-17, 15-3

B

backing plate, brake 5-11
 ball bearing 8-11
 ball joint 5-3, 5-9, 6-3, 6-15, 12-5
 ball joint, left-hand thread 6-3, 6-15
 ball stud 7-11, 12-7, 12-13
 ball, shifter 12-9
 ball, steel pressure relief 8-7
 ball, trailer hitch 1-49
 band, RPM limiter mount 8-5
 bar, drive 13-3
 barb, vent 9-3, 9-5
 barrel, plastic 1-3, 1-5, 1-35
 battery
 8-volt, Trojan T890 13-11
 battery cap, 8-volt 13-11

INDEX

- battery charger 16-3, 16-5, 16-7, 16-9, 16-11
- battery charger case 16-3, 16-5, 16-7, 16-9, 16-11
- battery charger handle 16-5
- battery charger receptacle 13-7
- battery charger retractable cord assembly 16-13, 16-15
- battery charger transformer 16-5, 16-7, 16-9, 16-11
- battery charger, onboard 16-13, 16-15
- battery clamp 7-15
- battery condition indicator 4-15
- battery condition indicator kit 4-15
- battery discharge machine 17-3
- battery hold-down 13-11
- battery light 4-13
- battery terminal protector spray 17-3
- battery thermometer 17-3
- battery, 12-volt 7-15
- battery, 8-volt, Trojan T890, moist 13-11
- bead, ferrite 13-15
- bearing 15-3
 - ball 8-11
 - ball (motor) 14-5
 - ball (steering pinion) 6-3
 - cage roller 12-15
 - front wheel hub 6-13
 - hub 6-13
 - idler 11-5
 - inner axle tube 12-11, 15-3
 - lower pinion (steering) 6-3
 - needle 12-9
 - outer axle tube 12-11
 - pivot support 5-5, 5-7
 - steering shaft 6-5
 - thrust 6-17
- bearing and oil seal remover 17-3
- bearing driver set 17-3
- bearing puller 17-3
- bearing puller wedge 17-3
- bearing retainer 14-3
- bearing seat 6-5
- bed frame assembly 1-31
- bed latch 1-35
- bed latch spring 1-35
- bed mat 1-41
- bed seal 1-29, 1-31
- bed, floor plate 1-31
- bed, tilt 1-31
- bell crank and shaft 7-11
- bellows 6-3
- belt, drive 11-3
- belt, seat 1-53
- belt, starter/generator 7-7
- belt, V 7-7
- bezel, headlight 4-3
- block, brake-mounting 5-3
- block, fuse 4-5, 4-7, 7-11
- block, terminal 4-5, 4-7
- blower cover 1-67
- blower mounting bracket 1-67
- blower, centrifugal 1-67
- body, front 1-3
- bolt, J- 13-11
- bolt, U- 6-21, 6-23
- boot, steering column 6-5
- boot, switch 7-9, 13-9
- bottom, air box 9-19
- box
 - air 9-19
 - cargo 1-35
 - differential 12-17
 - electrical component 7-11
 - steering gear 6-3
 - tool 1-45
- box, tool 1-45
- box, van 1-69
- brace, trailer hitch 1-47
- bracket
 - accelerator cable 9-15
 - adjustable starter/generator 7-7
 - brake light switch 4-5, 4-7
 - FNR shifter 12-3
 - governor cable 9-15
 - headlight mounting 4-3
 - horn 4-5, 4-7, 4-27
 - hour meter 4-29
 - muffler mounting 10-3
 - oil filter mount 8-7
 - oil level switch 8-11
 - relay mounting 16-9
 - RPM limiter 8-5
 - shock mounting, drv 6-21, 6-23
 - shock mounting, pas 6-21, 6-23
 - snubber 8-15
 - stake side 1-39
 - starter/generator mounting 7-7
 - steering column 6-5
 - steering column mounting 6-5
 - throttle spring return 9-11, 9-13
 - Tow/Run switch 7-9, 13-9
- bracket, carburetor intake manifold 9-13
- brake adjusting mechanism 5-11
- brake adjustment tool 17-3
- brake backing plate 5-11
- brake cable 5-13
- brake cable equalizer 5-13
- brake cable hanger 6-21, 6-23
- brake cable release tool 17-3
- brake cluster 5-11
- brake drum 5-11
- brake lever 5-11
- brake light switch bracket 4-5, 4-7
- brake mounting block 5-3
- brake pedal 5-3
- brake pedal pad 5-3
- brake relay kit, 12-volt 4-5
- brake relay kit, 48-volt 4-7
- brake return spring 5-13
- brake self-adjusting mechanism 5-11
- brake shoe 5-11
- brake spring 5-11
- breaker, circuit 16-3, 16-5, 16-7, 16-9, 16-11
- breather 12-7, 12-13, 15-3
- brush 14-3, 14-5
- brush and screw set 7-5
- brush box assembly 14-5
- brush connector 7-5
- brush cover kit, starter/generator 7-5
- brush holder 7-5
- brush inspection port cover 7-5
- brush plate
 - starter/generator 7-5
- brush port cover 7-5
- brush rigging 14-3, 14-5
- brush spring 14-3, 14-5
- brush spring set 7-5
- brush spring, starter/generator 7-5
- brush terminal, starter/generator 7-5
- bulb, headlight 4-3
- bulb, strobe light 4-21, 4-23, 4-25
- bulb, tail light 4-31
- bumper 1-21
 - drive unit (motor) 14-3, 14-5
 - front 1-3
 - front, heavy duty 1-3
 - front, kit 1-3
 - jounce 6-21, 6-23
 - rubber 1-33, 5-3
 - seal, long 1-15
 - spring return 5-5, 5-7
- bumper mount 6-21
- bumper mount, angled 6-23
- bumper, heavy-duty 1-3
- bumper, seat 1-15
- bushing 7-11, 11-5, 12-3
 - AC cord 16-3, 16-5
 - bronze 6-13, 6-19
 - nylon 1-35, 1-37, 5-3
 - return line 9-5
 - snap-in 1-35
 - spindle 6-13, 6-19
 - steel 1-31, 6-17, 6-21, 6-23
 - urethane 1-31, 6-15, 6-17, 6-21, 6-23
- bushing, insulated 14-3
- button, choke 9-17
- button, drive 11-7
- buzzer, reverse 4-11, 4-13

INDEX

C

- cab 1-53
 - door 1-53
 - door hinge 1-53
 - door latch 1-53
 - heater 1-67
 - roof 1-53
 - side rear window 1-53
 - windshield 1-53
 - windshield latches 1-53
 - wiper arm 1-53
 - wiper blade 1-53
 - wiper motor 1-53
- cable
 - accelerator 9-15
 - brake 5-13
 - FNR shifter 12-5
 - governor 9-15
- calibration test module 17-3
- cam
 - driven clutch 11-7
 - electrical component box 7-11
- cam, FNR shifter 12-3
- camshaft 8-11
- camshaft shim 8-11
- canister, carbon, fuel tank 9-7
- canopy 1-23, 1-25, 1-27
- canopy brace 1-23, 1-25, 1-27
- canopy support 1-23, 1-25, 1-27
- canopy trim plate 1-23, 1-25, 1-27
- cap 1-43
 - battery, 8-volt 13-11
 - corner 1-29, 1-37
 - dust 4-13, 13-5
 - fuel tank 9-3
 - fuel, gas, ratchet 9-5
 - key switch 4-11, 4-13
 - plug 8-5
 - seat back 1-17
- cap, hub, 7 prong 2-5
- carbon canister 9-7
- carburetor 9-9
- carburetor adapter 9-13
- carburetor gasket 9-11, 9-13
- carburetor insulator 9-11, 9-13, 14-3
- carburetor mounting gasket 9-11, 9-13
- card, safety first 17-5
- cargo bed, side panel 1-35
- cargo box 1-35
- case
 - battery charger 16-3, 16-5, 16-7, 16-9, 16-11
 - differential gear 12-11
 - gear 12-7, 12-13, 15-3
 - rocker 8-9
- CE compliance kit 13-15
- CE mark controller 13-13, 13-15
- CE mark ferrite bead, Fair-rite 13-15
- CE mark ferrite bead, TDK 13-15
- centrifugal blower 1-67
- charger
 - wire assembly kit 16-7
- charger bezel tool 17-3
- charger hardware kit 16-3
- charger receptacle 13-7
- charger wires 16-3
- charger, battery, onboard 16-13, 16-15
- charger, battery, PD2 16-5
- charger, battery, PD3 16-3
- charger, battery, PowerDrive 16-7
- charger, battery, PowerDrive European 16-11
- charger, battery, PowerDrive Export 16-9
- charger, onboard 16-13
- choke button 9-17
- choke lever 9-17
- choke lever guide 9-17
- choke positioner 9-17
- choke valve 9-19
- circuit breaker 16-3, 16-5, 16-7, 16-9, 16-11
- clamp
 - battery 7-15
 - cable retaining 9-15
 - hose 9-3, 9-5, 9-7, 9-11, 9-13, 9-19
 - hose, green 9-7
 - muffler hose 1-67, 10-3
- clevis, upper delta 6-17
- clip
 - meter 4-11
- clip, score card 6-11
- cluster idler gear 12-9
- cluster, brake 5-11
- clutch cam installation tool 17-3
- clutch pulley 11-5
- clutch repair kit 11-7
- clutch tool kit 17-3
- clutch weight 11-5
- clutch, drive 11-5
- clutch, driven 11-7
- coil, field 7-5
- coil, ignition 8-5
- collet 8-9
- column, steering 6-5
- communication display module 17-5
- component box, electrical 7-11
- component mounting plate 13-13
- compression gauge 17-5
- compression lug 13-13
- compression spring 9-17
- compressor, piston ring 17-5
- compressor, valve spring 17-7
- computer, onboard 13-13
- conduit 4-25
- connecting rod 8-13
- connector, a- 7-5
- continuity tester 17-5
- controller cover 13-13
- controller cover gasket 13-13
- controller, motor speed
 - IQ 13-13
- controller, motor speed (CE) 13-13, 13-15
- converter, DC/DC 4-17
- cord connector 8-11
- cord reel 16-13, 16-15
- cord set, DC 16-3, 16-5
- cord, AC 16-3, 16-5, 16-7, 16-9, 16-11
- cord, DC 16-7, 16-9, 16-11
- cord, retractable, assembly 16-13, 16-15
- counterbalance guide shaft 8-13
- counterbalance weight 8-13
- cover
 - brush inspection port 7-5
 - brush port 7-5
 - crankcase 8-11
 - dust 5-11, 6-13
 - electrical box 7-11
 - fuse block 4-5, 4-7
 - oil pump 8-7
 - rocker switch hole 4-11, 4-13
 - screw head 4-11, 4-13
 - steering column 6-5
 - wheel 2-5
- cover gasket, controller 13-13
- cover plate 14-5
- cover, controller 13-13
- cover, speed controller 13-13
- cover, steering column 4-9
- cowl 1-3
- crankcase 8-13
- crankcase cover 8-11
- crankcase vent tube 9-11, 9-13
- crankshaft 8-13
- crankshaft rod 8-13
- crankshaft shim 8-13
- C-type stop ring 6-3
- cup holder 1-9
- cup, spring 5-5, 5-7
- current limiter 16-11
- cushion, shock absorber 6-21, 6-23
- cutter, valve seat 17-7
- cylinder head 8-9

D

- damper, RPM limiter 8-5
- dash component 1-7
- dash panel 4-11, 4-13
- DC cord 16-7, 16-9, 16-11
- DC cord set 16-3, 16-5
- DC/DC converter 4-17

INDEX

decal

- battery danger 3-5
- bed load warning 1-35, 1-39, 3-3
- Carryall 1 3-9
- Club Car name plate 3-9
- component cover 3-5, 13-13
- crush area warning 3-3
- driver/passenger 3-7
- FNR 3-5, 3-7
- frame ground 3-7
- header heater 1-67
- heater inspection 1-67
- hot surface warning 3-7
- IR 3-9
- motor braking 3-5
- on/off 3-3
- operating instructions (electric) 3-5
- operating instructions (gas) 3-7
- refreshment center 1-43
- rollover warning 3-3
- rotating parts 3-7
- run/service switch 3-7, 7-9
- tailgate 1-35, 3-9
- Tow/Run switch warning 3-5
- trailer hitch 1-47, 3-3
- Turf 1 3-9
- vehicle loading 3-3

defogger fan 1-65

delta A-plate 6-15

delta A-plate sub-assembly 6-15

delta shock and gear support 6-15

DF-terminal insulator 7-5

diagnostic port 4-13, 13-5

differential drive unit 12-7, 15-3

differential gear 12-11, 15-3

differential gear case 12-11, 12-17

differential guard 15-5

differential housing 15-3

differential idler gear 12-11

differential pin 12-11

diode 4-7, 7-11

diode, rectifier 16-5

dipstick 8-3

door 1-53

door latch 1-53

drain plug 1-43, 8-7, 12-13

drain plug gasket 8-7, 12-7, 12-13

drive bar 13-3

drive belt 11-3

drive button 11-7

drive clutch 11-5

drive clutch button 11-5

drive clutch fixed-face 11-5

drive clutch holder tool 17-3

drive clutch hub puller 17-3

drive clutch puller 17-3

drive clutch spring 11-5

drive clutch weight 11-5

drive hub 11-5

drive selector shaft 12-7, 12-13

drive unit bumper 14-3, 14-5

drive unit guard 15-5

driven clutch 11-7

driven clutch button 11-7

driven clutch cam 11-7

driven clutch cam puller 17-3

driven clutch fixed-face assembly 11-7

driven clutch puller plug 17-3

driver, drive clutch 11-5

drum, brake 5-11

dry moly lubricant 17-5

duct hose 1-67

dust cap 4-13, 13-5

dust cover 5-11, 6-13

E

eccentric adjustment screw 6-17

eccentric bolt 6-19

E-clip 5-13

electrical box cover 7-11

electrical component box 7-11

end bell, commutator 7-5

end bell, output shaft 7-5

end cap, motor 14-3, 14-5

end shield

- motor 14-3

engine 8-3

engine mounting plate 8-15

engine shroud 8-3

equalizer rod 5-13

equalizer, brake cable 5-13

exhaust system 10-3

exhaust valve 8-9

extension, spring latch 1-31

extrusion, cover support 13-13

extrusion, fender 1-3

extrusion, plastic 1-21

F

face, moveable 11-5, 11-7

fan housing 8-3

fan shroud 8-3

fan, defogger 1-65

fan, flywheel 8-5

fender extrusion 1-3

fender, rear 1-51

ferrite bead (CE), Fair-rite 13-15

ferrite bead (CE), TDK 13-15

field coil 7-5

field coil housing 7-5

fill plug 12-7, 12-13

fill plug gasket 12-13

filter

- air 9-19
- fuel 9-3, 9-5
- oil 8-7
- oil pump 8-7

fitting, thread-forming grease 6-3, 6-13, 6-15, 6-19

fixed-face, drive clutch 11-5

fixed-face, driven clutch 11-7

float 9-9

floor mat 1-7

flywheel 8-5

flywheel fan 8-5

flywheel fan plate 8-5

flywheel puller 17-5

FNR closeout brush 4-11

FNR shift lever 12-7, 12-13

FNR shifter 12-3

FNR shifter bracket 12-3

FNR shifter cable 12-5

FNR shifter cam 12-3

fork, shift 12-9, 12-15

frame and field assembly (motor) 14-5

frame and field, starter/generator 7-5

front body 1-3

front bumper 1-3

front bumper kit 1-3

front leaf spring 6-17

front panel 1-35

front spring retainer plate 6-17

F-terminal hardware 7-5

f-terminal insulator 7-5

fuel filter 9-3, 9-5

fuel gauge sending unit 9-3, 9-5

fuel line 9-3, 9-5, 9-7, 9-11, 9-13

fuel meter 4-11

fuel pickup tube 9-3

fuel pump mount 9-3, 9-5

fuel pump, impulse 9-3, 9-5

fuel tank 9-3

fuel tank cap 9-3

fuel tank strap 9-3, 9-5

fuel tank vent 9-3

fuel tank vent grommet 9-5

fuse 13-7, 16-7, 16-9, 16-11

- 10-amp 7-11
- 20-amp 4-5, 4-7, 7-11
- 3/8-amp 13-7
- charger 16-3, 16-5

fuse block 4-5, 4-7, 7-11

fuse block cover 4-5, 4-7

fuse holder 16-13, 16-15

G

gasket

INDEX

carburetor 9-11, 9-13
carburetor mounting 9-9, 9-11, 9-13
crankcase cover 8-9, 8-11
drain plug 8-7, 12-7
drain plug, fill plug 12-13
exhaust 1-67, 8-9, 10-3
head 8-9
insulator 8-9, 9-11, 9-13
liquid 12-7, 15-3, 17-5
plug 15-3
rocker case 8-9
sending unit 9-3, 9-5
taillight 4-31
voltage limiter 4-7
gasket kit, FE350 8-9
gasket, controller cover 13-13
gauge, battery condition 4-15
gauge, compression 17-5
gauge, fuel-hour 4-11
gear
 25 tooth 12-15
 28 tooth 12-15
 case 12-13
 cluster idler 12-9
 differential 12-11, 12-17, 15-3
 differential idler 12-11, 15-3
 differential output 15-3
 helical 8-13, 12-9, 12-11
 planetary 12-17
 speed governor 12-15
 spur 8-13, 12-9
 sun 12-17
 synchro 12-9
gear yoke 17-5
gearcase 12-7, 15-3
governor 12-9, 12-15
governor arm 9-15, 12-7, 12-13
governor cable 9-15
governor cable bracket 9-15
governor shaft installation tool 17-5
grip, pencil 6-11
grip, tilt latch hand 1-31, 1-35
grommet 1-13, 1-23, 1-25, 1-27, 9-3
 fuel tank vent 9-5
 ignition 8-5
guard, differential 15-5
guard, splash 1-5
guide
 choke lever 9-17
 intake valve 8-9
 valve 8-9
 valve seat cutter 17-7
guide ring adhesive 17-3

H

handle 1-69

handle, bar unit 1-43
handle, battery charger 16-5
hanger, brake cable 6-21, 6-23
hardware kit, charger 16-3
hardware, F-terminal 7-5
harness, wire 1-67, 4-5, 4-17, 4-21, 4-23, 7-3, 13-5
harness, wire, lighting 4-7
head gasket 8-9
head, cylinder 8-9
headlight 4-3
headlight assembly 4-3, 4-5, 4-7
headlight bulb 4-3
headlight harness 4-3
headlight retainer 4-3
heat shrink tube 16-13, 16-15
heater 1-67
heatsink 16-5
heatsink and rectifier 16-3, 16-7, 16-9, 16-11
heavy-duty bumper 1-3
helical gear 8-13, 12-9, 12-11
hill brake rod 5-3
hill brake weld assembly 5-3
hinge kit, door 1-53
hinge pin 1-39
hinge, bar unit side door 1-43
hinge, stake side 1-39
hinge, tilt bed 1-31
hitch, trailer 1-47
hitch, trailer, ball 1-49
hold-down, battery 13-11
holder, cup 1-9
hole plug 4-13
horn 4-5, 4-7, 4-27
horn bracket 4-5, 4-7, 4-27
horn button and wire assembly 4-5, 4-7, 4-27
hose
 fuel 9-3, 9-5
 vent 9-7
hose clamp, green 9-7
hose, air intake 9-19
hose, duct 1-67
hour meter 4-11, 4-29
hour meter, 36-48 volt 4-29
housing
 2-pin 13-3
 3-pin 13-3, 14-3, 14-5
 6-pin 13-13
 differential 15-3
 fan 8-3
 field coil 7-5
hub 6-13
hub bearing 6-13
hub cap 2-5
hub cap, 7 prong 2-5
hub, synchronizer clutch 12-9

hydrometer 17-5

I

idle screw assembly 9-9
idler bearing 11-5
idler gear, differential 15-3
ignition coil 8-5
indicator, battery condition 4-15
inlet valve 1-67
inner frame snubber 8-15
input shaft 15-3
insert, synchronizer 12-9
instrument panel 4-11, 4-13
insulated bushing 14-3
insulator gasket 8-9, 9-11, 9-13
insulator, carburetor 9-11, 9-13, 14-3
intake pipe 9-11
intake valve 8-9
intermediate shaft 15-3
intermediate steering shaft 6-7
internal retaining ring pliers 17-5
IQ display module (IQDM) 17-5

J

J-bolt 13-11
jet, main 9-9
jet, pilot 9-9
joint
 ball 5-3, 5-9, 6-15, 12-5
 left-hand thread ball 6-3, 6-15
jounce bumper 6-21, 6-23

K

key
 crankshaft 8-5, 8-13
 driven clutch 11-7
 On/Off 4-11, 4-13
 square 11-7
 starter/generator 7-5
 woodruff 12-7
key switch 4-11
key switch cap 4-11, 4-13
key switch, On/Off 4-13
kingpin 6-17
kit
 2-pin housing 13-3
 3-pin housing 13-3, 14-3, 14-5
 6-pin housing 13-13
 accelerator pivot rod 5-5, 5-7
 air duct shield 9-17
 armature conversion 7-5
 battery condition indicator 4-15
 brake cable 5-13
 brake pedal 5-3
 brake relay 4-5

INDEX

brake shoe retainer 5-11
cab adapter 1-53
canopy 1-23, 1-25, 1-27
CE compliance 13-15
clutch repair 11-7
cup holder 1-9
differential gear case 12-11
door hinge 1-53
drive clutch button 11-5
drive clutch weight 11-5
driven clutch button 11-7
fan/defogger 1-65
fixed-face drive 11-5
flywheel puller 17-5
front bumper 1-3
gasket, FE350 8-9
heater, cab 1-67
heavy-duty front bumper 1-3
hour meter 4-29
hub cap 2-5
IQ display module (IQDM) 17-5
light 4-5, 4-7
magnet and bearing 14-3
mirror 1-11
mirror, inside rear-view 1-55
mirror, side-view 1-57
motor brush 14-5
motor brush spring 14-5
motor cover plate 14-5
motor speed sensor 14-5
motor terminal hardware 14-5
name plate 3-9
onboard charger 16-13
park brake latch 5-3
park brake pedal 5-3
PD3 hardware 16-3
PD3 wiring 16-3
piston ring compressor 17-5
relay, 48V 4-7, 16-7
seat belt 1-53
shock absorber 6-21, 6-23
shock absorber cushion 6-21, 6-23
shoe retainer 5-11
steering column mounting bracket 6-5
strobe light 1-61, 4-21, 4-23, 4-25
tailgate mounting 1-35
taillight hardware 4-31
trailer hitch 1-47
transmission tool 17-7
tune-up 17-7
turn signal 4-9
wheel cover 2-5
windshield, hinged 1-19
windshield, one-piece 1-21
wire assembly, charger 16-7
work light 1-63

knob, forward/reverse 12-3
knob, light switch 4-5, 4-7

L

lamp, strobe light 4-21, 4-23, 4-25
lamp, turn signal and socket 4-9
lash adjuster 8-11
latch plate, tilt bed 1-33
latch weld 1-31
latch, air box 9-19
latch, bed 1-35
latch, park brake 5-3
L-bracket, motor 14-5
leaf spring 6-17, 6-19, 6-21, 6-23
lens, headlight 4-3
lens, strobe light 4-21, 4-23, 4-25
lens, taillight 4-31
lever
 choke 9-17, 9-19
 drive selector 12-7
 speed governor 12-13
 transmission shift 12-7, 12-13
light
 battery 4-13
 oil 4-11
light switch 4-5, 4-7
light switch knob 4-5, 4-7
light, strobe 1-61, 4-21, 4-23, 4-25
lighting package 4-5, 4-7
limit switch 4-5, 4-7, 7-11, 7-13, 12-3
limiter
 current 16-11
 RPM 8-5
 voltage 4-5, 4-7, 4-19
line, fuel 9-3, 9-5, 9-7, 9-11, 9-13
link, rack and pinion drag 6-3
liquid gasket 12-7, 15-3, 17-5
low oil warning light 4-11
lubricant, dry moly 17-5
lubricant, moly-teflon 14-3, 14-5, 17-5
lug nut 2-3
lug stud 12-11, 12-17, 15-3
lug, compression 13-13

M

magnet and bearing kit 14-3
magnet, speed sensor 14-3, 14-5
main jet 9-9
mat, bed 1-41
mat, floor 1-7
MCOR 13-3
mechanism, brake adjusting 5-11
meter clip 4-11
meter, hour 4-29
meter, volt ohm 17-7

mirror 1-11
mirror, inside rear-view 1-55
mirror, rear view 1-11
mirror, side-view 1-57
module
 calibration test 17-3
 communication display 17-5
moly-teflon lubricant 17-5
motor
 48-volt 14-3
 48-volt IQ 14-5
 wiper 1-53
motor armature 14-3
motor brush 14-3
motor brush kit 14-5
motor brush spring kit 14-5
motor bumper 14-3, 14-5
motor end cap 14-3, 14-5
motor end shield 14-3
motor L-bracket 14-5
motor magnet, speed sensor 14-3, 14-5
motor speed controller
 CE 13-13, 13-15
 IQ 13-13
motor speed sensor 14-3, 14-5
motor speed sensor kit 14-5
motor stator shell and winding 14-3
motor terminal hardware kit 14-5
mount, bumper 6-21
mount, fuel pump 9-3, 9-5
mounting block, brake 5-3
moveable-face 11-5, 11-7
muffler hose clamp 1-67, 10-3

N

name plate 3-9
needle bearing 12-9
nozzle, main 9-9
nut, lug 2-3

O

OBC 13-13
oil conveyor 12-13
oil filler tube 8-3
oil filter 8-7
oil filter mount bracket 8-7
oil filter screen 8-11
oil filter screen plate 8-11
oil level sensor 8-11
oil level switch bracket 8-11
oil pump and rotor 8-7
oil pump cover 8-7
oil pump filter 8-7
oil pump plate 8-7
oil seal 8-9, 8-11, 8-13, 12-7, 12-9

INDEX

oil warning light, low 4-11
onboard battery charger 16-13, 16-15
onboard computer 13-13
O-ring 1-43, 8-3, 8-9, 8-11, 8-13
overload bumper spacer 6-21, 6-23

P

pad
 accelerator pedal 5-5, 5-7
 brake pedal 5-3
 park brake 5-3
paint, touch-up 17-5
panel box 1-35
panel, front 1-35
panel, instrument 4-11, 4-13
panel, side 1-35
park brake latch 5-3
park brake pedal 5-3
park brake rod sleeve 5-3
park brake spacer 5-3
park brake torsion spring 5-3
pawl 5-3
pedal, accelerator 5-5, 5-7
pedal, brake 5-3
pedal, park brake 5-3
pencil grip 6-11
pilot air screw assembly 9-9
pilot jet 9-9
pin
 bow tie locking 5-13
 clevis 5-13
 differential 12-11
 piston 8-13
pin, hinge 1-39
pinion, steering 6-3
pipe, intake 9-11
piston 8-13
piston pin 8-13
piston ring 8-13
piston ring compressor 17-5
piston ring pliers 17-5
piston ring set 8-13
pivot arm 12-7
pivot support bearing 5-5, 5-7
plate
 backing (brake) 5-11
 bed floor 1-31
 component mounting 13-13
 cover 14-5
 engine mounting 8-15
 flywheel fan 8-5
 front spring retainer 6-17
 latch 1-33
 name 3-9
 oil filter screen 8-11
 oil pump 8-7

receptacle backing 13-7
score card 6-9, 6-11
spring mounting 6-17
steering wheel 6-9
thrust 12-9, 12-11
plate, canopy trim 1-23, 1-25, 1-27
pliers
 internal retaining ring 17-5
 piston ring 17-5
 retaining ring 17-5
plug
 6-pin 13-13
 drain 1-43, 8-7, 12-13
 drive clutch 11-5
 driven clutch puller 17-3
 fill 12-7, 12-13
 hole 4-13
 spark 8-5
plug cap 8-5
plug, carburetor intake manifold 9-13
pole set 7-5
port, diagnostic 4-13, 13-5
portable refreshment center 1-43
positioner, choke 9-17
PRC 1-43
press weldment 17-3
protector spray, battery terminal 17-3
puller
 bearing 17-3
 drive clutch 17-3
 drive clutch hub 17-3
 driven clutch cam 17-3
 flywheel 17-5
 seal 17-5
pulley
 clutch 11-5
 starter-generator 7-5
 v-belt 7-5
pump, impulse fuel 9-3, 9-5
push rod 8-9

R

race, front hub bearing 6-13
rack and pinion drag link 6-3
rack guide pressure spring 6-3
rack, steering 6-3
ratchet, park brake 5-3
reamer, valve guide 17-7
rear fender 1-51
rear spring shackle 6-21, 6-23
rear view mirror 1-11
rear-view mirror, inside 1-55
receptacle 13-7
receptacle backing plate 13-7
receptacle, AC cord 16-11
receptacle, battery charger 13-7

rectifier diode 16-5
rectifier with heatsink 16-3, 16-7, 16-9, 16-11
reel assembly, retractable 16-13, 16-15
reel cord 16-13, 16-15
refreshment center 1-43
refreshment center, portable 1-43
regulator, voltage 7-11
relay 4-7, 16-3, 16-7, 16-9, 16-11
relay mounting bracket 16-9
relay, 12-volt 4-5
relay, 48V 4-7, 16-7
relay, 48-volt 16-5
relay, brake, kit, 12-volt 4-5
relay, brake, kit, 48-volt 4-7
remover, bearing and oil seal 17-3
resistor assembly 13-13
retainer
 accelerator pedal spring 5-5, 5-7
 bearing 14-3
 brake shoe 5-11
 headlight 4-3
 shock absorber cushion 6-21, 6-23
 spring 6-21, 6-23
 spring (drive clutch) 11-5
 valve spring 8-9
retaining ring 6-5
retaining ring pliers 17-5
return spring bumper 5-5, 5-7
reverse buzzer 4-11, 4-13
rigging, brush 14-3
rim, wheel, white 2-3
ring
 C-type stop 6-3
 piston 8-13
 retaining 6-5, 7-11, 11-5, 11-7
 snap 6-3, 8-9, 8-13
 spiral backup 11-5
 synchronizer 12-9
rivet, blind push 1-3
rock guard 15-5
rocker arm 8-9
rocker case 8-9
rocker case gasket 8-9
rocker shaft 8-9
rocker switch 4-13
rocker switch (lights) 4-5, 4-7
rod
 accelerator 5-9
 accelerator pivot 5-5, 5-7
 connecting 8-13
 crankshaft 8-13
 equalizer 5-13
 hill brake 5-3
 push 8-9
 shift 12-9
 tie 6-15

INDEX

roof 1-53
RPM limiter 8-5
RPM limiter bracket 8-5
RPM limiter damper 8-5
RPM limiter mount band 8-5

S

safety first card 17-5
score card clip 6-11
score card plate 6-11
screen, oil filter 8-11
screw, eccentric adjustment 6-17
screw, valve clearance adjuster 17-7
seal
 intake 9-19
 lip 15-3
 oil 8-9, 8-11, 8-13, 12-7, 12-9, 12-11, 12-17, 15-3
 steering pinion dust 6-3
 vertical socket dust 6-3, 6-15
seal puller 17-5
seal, bed 1-29, 1-31
sealant 12-7, 15-3
seat
 spring 8-9
 valve 8-7
seat back 1-17
seat back assembly 1-17
seat back cap 1-17
seat back tube 1-29
seat back, white 1-17
seat belt 1-53
seat bottom assembly 1-15
seat bumper 1-15
seat cover, vinyl 1-15
seat strap 1-15
seat, bearing 6-5
sending unit, fuel gauge 9-3, 9-5
sensor, motor speed 14-3, 14-5
sensor, oil level 8-11
sensor, speed 14-3
set, brush and screw 7-5
set, pole 7-5
shackle, rear spring 6-21, 6-23
shaft
 counterbalance guide 8-13
 drive selector 12-7, 12-13
 input 15-3
 intermediate 15-3
 intermediate steering 6-7
 rocker 8-9
 steering column 6-5
 transmission 12-9, 12-15
shaft, reverse gear 12-15
shaft, secondary
 transmission 12-15
shield, air duct 9-17
shift fork 12-9, 12-15
shift lever 12-7, 12-13
shift rod 12-9
shifter, FNR 12-3
shim, camshaft 8-11
shim, crankshaft 8-13
shim, latch plate 1-33
shim, tilt bed pivot 1-31
shock absorber 6-15
shock absorber (rear) 6-21, 6-23
shock absorber cushion 6-21, 6-23
shock absorber cushion retainer 6-21, 6-23
shock mounting bracket, drv 6-21, 6-23
shock mounting bracket, pas 6-21, 6-23
shoe retainer kit 5-11
shoe, brake 5-11
shroud 8-3
shroud, engine 8-3
shroud, fan 8-3
side panel 1-35
side-view mirror 1-57
signal, turn 4-9
sleeve
 delta A-plate 6-15
 governor 12-9
 park brake rod 5-3
 synchronizer 12-9
snap ring 6-3, 8-9, 8-13
snubber bracket 8-15
snubber, inner frame 8-15
socket 6-3, 6-15
solenoid 13-13
solenoid, 12-volt 7-11
spacer
 accelerator pivot rod 5-5, 5-7
 overload bumper 6-21, 6-23
 park brake 5-3
spark plug 8-5
speed controller
 CE 13-13, 13-15
 IQ 13-13
speed controller cover 13-13
speed sensor 14-3, 14-5
speed sensor magnet 14-3, 14-5
speed sensor, motor 14-3, 14-5
spindle 6-13, 6-19
spiral backup ring 11-5
splash guard 1-5
spray, battery terminal protector 17-3
spring
 accelerator return 5-5, 5-7
 brake 5-11
 brake return 5-13
 brush 7-5, 14-3, 14-5
 compression 6-11, 9-17
 drive button 11-5
 drive clutch 11-5
 driven clutch 11-7
 extension 1-31
 extension return 9-19
 latch tilt 1-35
 leaf 6-17, 6-19, 6-21, 6-23
 park brake torsion 5-3
 rack guide pressure 6-3
 shifter 12-9
 steering shaft compression 6-5
 synchronizer 12-9
 throttle return 9-11, 9-13
 valve 8-9
spring cup 5-5, 5-7
spring mounting plate 6-17
spring retainer 6-21, 6-23
spur gear 8-13, 12-9
stake side 1-39
stake side bracket 1-39
stake side hinge 1-39
stake side kit 1-39
stand-offs, plastic 16-3
starter/generator (cw) (model G425419) 7-5
starter/generator belt 7-7
starter/generator brush cover kit 7-5
starter/generator brush plate 7-5
starter/generator brush spring 7-5
starter/generator brush terminal 7-5
starter/generator frame and field 7-5
starter/generator pulley 7-5
stator shell and winding 14-3
steel bushing 1-31, 6-17, 6-21, 6-23
steel pressure relief ball 8-7
steering column 6-5
steering column bearing press tool 17-7
steering column cover 4-9
steering column retaining ring tool 17-7
steering gear box 6-3
steering pinion 6-3
steering pinion dust seal 6-3
steering rack 6-3
steering shaft assembly 6-5
steering shaft compression spring 6-5
steering wheel 6-9, 6-11
steering wheel plate 6-9
steering wheel puller tool 17-7
stem, valve 2-3
stiffener 1-15
stiffener, flywheel side 8-15
stiffener, PTO side 8-15
strap, A-plate 6-15
strap, fuel tank 9-3, 9-5
strap, seat 1-15
strobe light 1-61, 4-21, 4-23, 4-25
strobe light lens 4-21, 4-23, 4-25

INDEX

stud 8-15
lug 12-11, 12-17, 15-3
self-clinching 1-37
stud, ball 7-11, 12-7, 12-13
support yoke (steering) 6-3
suppressor, voltage 4-5, 16-7, 16-9, 16-11
switch plate cover 4-21, 4-23, 4-25
switch 1-67
four-position 16-9, 16-11
key 4-11, 4-13
light 4-5, 4-7
light rocker 4-5, 4-7
limit 4-5, 4-7, 7-11, 7-13, 12-3
rocker 4-13
Tow/Run 13-9
turn signal 4-9
switch assembly 4-21, 4-23, 4-25
switch panel, accessory 1-59
switch rubber boot 7-9, 13-9
switch, toggle 7-9
synchro gear 12-9
synchronizer clutch hub 12-9
synchronizer insert 12-9
synchronizer sleeve 12-9
synchronizer spring 12-9
synchronizer, complete 12-15
system, exhaust 10-3

T

12-volt battery 7-15
12-volt solenoid 7-11
tachometer 17-7
tail light bulb 4-31
tailgate 1-35
tailgate angle 1-37
tailgate mounting kit 1-35
taillight 4-31
taillight assembly 4-5, 4-7, 4-31
taillight base 4-31
taillight gasket 4-31
taillight hardware kit 4-31
taillight lens 4-31
taillight skirt 1-51
tank, fuel 9-3
tape 9-17
tape, vinyl foam 1-31
terminal block 4-5, 4-7, 13-13
terminal, 1/4 quick-disconnect 4-17
tester, continuity 17-5
thermometer, battery 17-3
thread-forming grease fitting 6-3, 6-13, 6-15, 6-19
throttle return spring 9-11, 9-13
throttle spring return bracket 9-11, 9-13
thrust bearing 6-17
thrust plate 12-9, 12-11

tie rod 6-15
tie wrap 1-67, 4-9, 4-17, 4-23, 4-25, 4-29, 6-3, 7-11, 12-5, 13-13, 13-15, 16-13, 16-15
tilt bed 1-31
tilt latch hand grip 1-31, 1-35
tire 2-3
tire and wheel assembly 2-3
toggle switch 7-9
tool
accelerator pedal adjustment 17-3
brake adjustment 17-3
brake cable release 17-3
charger bezel 17-3
clutch cam installation 17-3
drive clutch holder 17-3
governor shaft installation 17-5
steering column bearing press 17-7
steering column retaining ring 17-7
steering wheel puller 17-7
transaxle axle seal 17-7
transaxle pinion seal 17-7
transmission 17-7
tool box 1-45
tool kit, clutch 17-3
toolbox 1-45
touch-up paint 17-5
Tow/Run switch 13-9
Tow/Run switch bracket 7-9, 13-9
trailer hitch 1-47
trailer hitch ball 1-49
trailer hitch brace 1-47
transaxle (Electric Vehicle) 15-3
transaxle axle seal tool 17-7
transaxle Graziano (gasoline vehicle), unitized 12-13
transaxle guard 15-5
transaxle pinion seal tool 17-7
transaxle, Kawasaki (Gasoline Vehicle) 12-7
transformer 16-3
transformer, battery charger 16-5, 16-7, 16-9, 16-11
transmission secondary shaft 12-15
transmission shaft 12-9, 12-15
transmission tool 17-7
trim
cowl 1-3
seat bottom 1-29
tube
axle 12-11, 12-17, 15-3
crankcase vent 9-11, 9-13
fuel pickup 9-3
oil filler 8-3
seat back 1-29
tune-up kit 17-7
turn signal 4-9
turn signal conversion kit 4-9

turn signal lens 4-3
turn signal socket and lamp 4-9

U

U-bolt 6-21, 6-23
unitized transaxle Graziano 12-13
upper delta clevis 6-17
urethane bushing 1-31, 6-15, 6-17, 6-21, 6-23

V

valve
choke 9-19
exhaust 8-9
intake 8-9
reed 8-9
valve clearance adjuster screw 17-7
valve guide 8-9
valve guide reamer 17-7
valve guide, intake 8-9
valve seat 8-7
valve seat cutter 17-7
valve seat cutter guide 17-7
valve seat t-wrench 17-7
valve spring 8-9
valve spring compressor 17-7
valve spring retainer 8-9
valve stem 2-3
valve stem extension 2-5
valve, inlet 1-67
van box 1-69
v-belt 7-7
vent barb 9-3, 9-5
vent, barb 9-7
vent, fuel tank, w/ valve 9-5
vertical socket dust seal 6-3, 6-15
volt ohm meter 17-7
voltage limiter 4-5, 4-7, 4-19
voltage limiter gasket 4-7
voltage regulator 7-11
voltage suppressor 4-5, 16-7, 16-9, 16-11

W

warning light, low oil 4-11
wedge, bearing puller 17-3
weight
clutch 11-5
counterbalance 8-13
secondary clutch 11-5
weldment
press 17-3
wheel 2-3
wheel and tire assembly 2-3
wheel cover 2-5
wheel rim, white 2-3
wheel, steering 6-9, 6-11

INDEX

window 1-53
windshield 1-53
 hinged 1-19
 one-piece 1-21
windshield channel 1-19
windshield frame 1-23, 1-25, 1-27
windshield frame pad 1-23, 1-25, 1-27
windshield latches 1-53
wiper arm 1-53
wiper blade 1-53
wiper motor 1-53
wire harness 1-67, 4-5, 4-17, 4-21, 4-23, 7-3,
 13-5
wire harness, lighting 4-7
wiring, charger 16-3
woodruff key 12-7
work lights, light, work 1-63
wrap, tie 1-67, 4-9, 4-17, 4-23, 4-25, 4-29, 6-3,
 7-11, 12-5, 13-13, 13-15, 16-13, 16-15

Y

yoke, gear 17-5
yoke, support (steering) 6-3



Club Car, Inc.
P.O. Box 204658
Augusta, GA 30917-4658
USA

Web	www.clubcar.com
Phone	1.706.863.3000 1.800.ClubCar
Int'l	+1 706.863.3000
Fax	1.706.863.5808