




2014 Villager 6 and 8 Illustrated Parts List

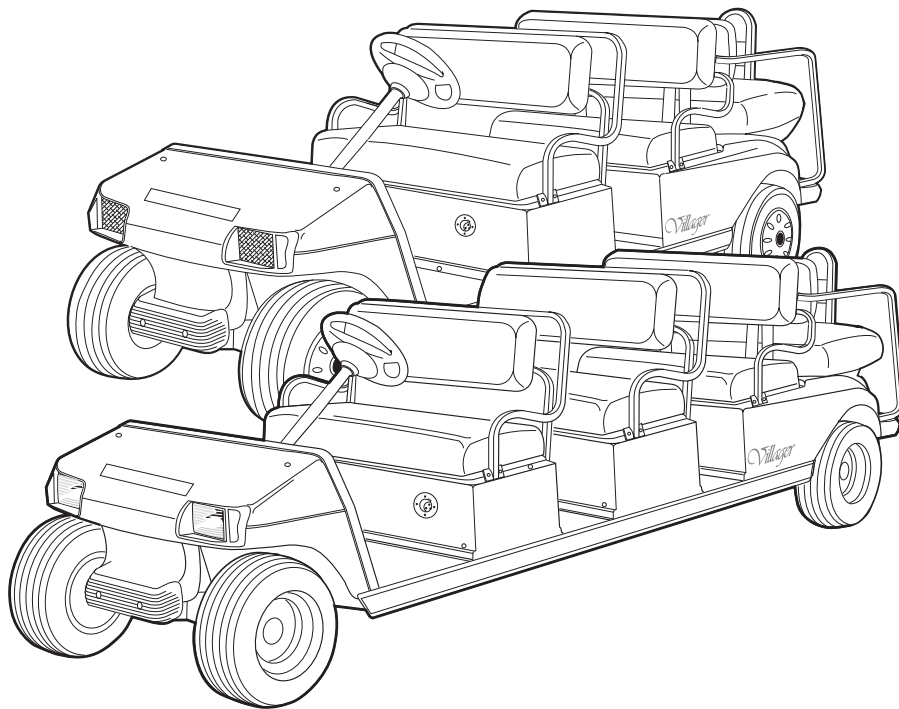

Gasoline and Electric Vehicles

Manual Number 105062806
Edition Code _A

USING THE ILLUSTRATED PARTS LIST

WARNING

- **This manual is to be used only for identification and ordering of service parts. Be sure to read and use the maintenance and service manual before attempting any vehicle repairs.**

This manual covers all Villager 6 and 8 vehicles built during the 2014 model year.

The manual is divided into sections. Note that there are two or three flags on the outside edge of each page. The first flag contains the section number of which that page is a part. The other flag (or flags) contains the letter G or E, signifying that the page pertains to the electric or gasoline vehicles only.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section numbers, and under them, the individual page titles and numbers to be found in that section. The index can be used to find specific parts and assemblies. The index is divided into numerical and alphabetical listings with the page numbers in italic text.

There is a two-page spread for each individual page title in the Table of Contents. On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used.

Note that a part description may be indented. This indentation corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to *level 2* is a component of the *level 1* part (assembly) that it is listed under. A *level 3* part is a component of the *level 2* part that it is listed under, and a *level 4* part is a component of the *level 3* part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part is *the quantity used per next higher level assembly of which it is a component*. A part that is not indented is a *level 1* part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.



P. O. Box 204658
Augusta, Georgia 30917-4658 USA
Telephone 706-863-3000
Service Parts Fax 706-855-7413
www.clubcar.com

HOW TO ORDER PARTS

Replacement parts and accessories can be obtained from our network of authorized dealers and distributors. You can obtain the name and phone number of your closest authorized Club Car dealer or distributor by visiting our web site at www.clubcardealer.com, by calling our toll-free Service Parts and Technical Assistance hotline at (800) 872-2246 or (706) 863-3000, extension 3887, or by scanning this Quick Response (QR) code to be taken to the Club Car dealer locator. **Refer to Figure 1.** Download a QR code reader such as RedLaser or Barcode Scanner to your cell phone or tablet.



Figure 1 Dealer Locator QR Code

CUSTOMER SATISFACTION SURVEY

Let your voice be heard!

Please take time to participate in the Technical Publications satisfaction survey. Obtaining feedback from our customers is important to the department's continuous improvement process. The online survey takes less than five minutes and responses will help the department to examine current performance as well as identify areas for future improvement.

Our top priority is to provide timely, accurate, and user friendly manuals.

The online satisfaction survey can be found at: <http://bit.ly/1w9uFMh>



Figure 2 Survey QR Code

NOTE: *This illustrated parts list represents the most current information at the time of publication. Club Car, LLC is continually working to further improve its vehicles and other products. These improvements may affect the parts used to service the vehicle. Any modification and/or significant change in specifications will be forwarded to all Club Car and Carryall distributors/dealers and will, when applicable, appear in future editions of this illustrated parts list.*

Club Car, LLC reserves the right to change specifications and designs at any time without notice and without the obligation of making changes to units previously sold.

Copyright © 2013 Club Car, LLC
Club Car and ArmorFlex
are registered trademarks of Club Car, LLC.
This manual effective August 1, 2013.

CONTENTS

SECTION 1 – BODY AND TRIM

Front Body and Trim – Turf, Utility, & Transportation	1-3
Brush Guard Kit – DS, Utility, & Villager	1-5
Splash Guard – Gasoline Vehicles Only	1-7
Dash Pockets and Floormat	1-9
Floormat, Rear – Villager & Transportation Vehicles	1-11
Beverage Holder – Dual	1-13
Mirror, Rear-View – without Cab	1-15
Grommets, Chassis	1-17
Front and Center Seat Bottoms	1-19
Seat Back Assembly	1-21
Armrests, Front – Villager 6 & 8 Vehicles	1-23
Windshield, Non-Hinged	1-25
Windshield, Hinged	1-27
Center Body – Villager 6 Gasoline Vehicle	1-29
Center Body – Villager 6 IQ Plus Vehicle	1-31
Center Bodies – Villager 8 Gasoline Vehicle	1-33
Center Bodies – Villager 8 IQ Plus Vehicle	1-35
Rear, Forward-Facing Seat Bottom	1-37
Armrests, Rear, Forward-Facing – Villager 6 & 8 Vehicles	1-39
Rear Body and Fender – Villager 6 & 8	1-41
Heat Insulation, Foam – EFI Gasoline Vehicle	1-43
Heat Shield, Transporter, Vill 6 & 8, XRT800/850 Rear Body – Gas	1-45
Battery Insulator, Transporter, Vill 6 & 8, XRT850 Rear Body – Electric	1-47
Rear Access Door	1-49
Rear-Facing Seat Bottom – Villager Vehicles	1-51
Rear Footrest, Armrests and Handrails – DS Villager 4, Villager 6 and 8	1-53
Canopy Kit, White – Vill. 6 with Rear-Facing Seats	1-55
Canopy Kit, Beige – Vill. 6 with Rear-Facing Seats	1-57
Canopy Kit, White – Vill. 6 with Flat Bed	1-59
Canopy Kit, Beige – Vill. 6 with Flat Bed	1-61
Canopy Kit, White – Vill. 8 with Rear-Facing Seats	1-63
Canopy Kit, Beige – Vill. 8 with Rear-Facing Seats	1-65
Canopy Kit, White – Vill. 8 with Flat Bed	1-67
Canopy Kit, Beige – Vill. 8 with Flat Bed	1-69

SECTION 2 – WHEELS AND TIRES

Wheels (Silver) and Tires	2-3
Wheel Covers	2-5

CONTENTS

SECTION 3 – DECALS

Decals – Villager 6 Gas and IQ Plus	3-3
Decals – Villager 6 IQ Plus Vehicle Only	3-5
Decals – Villager 6 Gasoline Vehicle Only	3-7
Decals – Villager 8 Gas and IQ Plus	3-9
Decals – Villager 8 IQ Plus Vehicle Only	3-11
Decals – Villager 8 Gasoline Vehicle Only	3-13
Badging Decals – Villager	3-15
IQ Plus Logo Decal – IQ Plus Vehicles Only	3-17

SECTION 4 – LIGHTS, CONTROLS, AND INDICATORS

Headlights	4-3
Lighting System Components – Transportation Gasoline Vehicles	4-5
Lighting System Components – CA 6 and Vill. 6 Elec. with IQ Plus Charger	4-7
Lighting System Components – Villager 8 Elec. with IQ Plus Charger	4-9
Turn Signal Kit – DS and Utility Gasoline and Electric Vehicles	4-11
Turn Signal (with Horn Button) Kit – DS and Utility Gas and Electric Vehicles	4-13
Instrument Panel and Electrical Components – CA6/Vill 6 & 8 Gas	4-15
Instrument Panel with Electrical Components – CA6/Vill 6/8 Elec. w/Lester Charger	4-17
Keys and Keyswitches, SmartKey Kit – Electric Vehicle	4-19
Keys and Keyswitches, Uncommon – Gas Vehicle	4-21
DC Converter (Isolated) – Electric Vehicle	4-23
DC Converter (Isolated) – CE Electric Vehicle	4-25
Voltage Limiter – Gasoline Vehicle	4-27
Strobe Light, Roof-Mounted	4-29
Horn with Column-Mounted Button	4-31
Hour Meter – IQ System and IQ Plus Electric Vehicles	4-33
Rear Reverse Buzzer	4-35
Tail Lights	4-37

SECTION 5 – BRAKES, PEDALS, AND CABLES

Brake Pedal Assembly	5-3
Accelerator Pedal Assembly – Electric Vehicles	5-5
Accelerator Pedal Assembly – Gasoline Vehicles	5-7
Accelerator Rod – Turf/CA 6 & Villager 6 Gas Vehicles	5-9
Accelerator Rod – Villager 8 Gas Vehicles	5-11
Front Brake Assembly – Vehicles with Four-Wheel Brakes	5-13
Front Brake Cables and Equalizer – Vehicles with Four-Wheel Brakes	5-15

CONTENTS

Rear Brakes, Manually-Adjusted – Elec. Vehicles with 4-Wheel Brakes	5-17
Rear Brakes, Manually-Adjusted – Gas Vehicles with 4-Wheel Brakes	5-19
Rear Brake Cables and Equalizer – Turf/Carryall 6 & Villager 6	5-21
Rear Brake Cables and Equalizer – Villager 8	5-23

SECTION 6 – STEERING AND SUSPENSIONS

Steering Gear Assembly (Wanda) – Maint.-Free Ball Joint	6-3
Steering Column – Utility	6-5
Intermediate Steering Shaft (Wanda) – Turf/CA/Villager	6-7
Steering Wheel	6-9
Steering Wheel with Clip	6-11
Front Spindles and Hubs – Vehicles with Four-Wheel Brakes and Maintenance-Free Ball Joints	6-13
Front Suspension, Upper – Villager 6 and 8 with Maintenance-Free Ball Joints	6-15
Front Suspension, Lower – Villager 6 with Maintenance-Free Ball Joints	6-17
Front Suspension, Lower – Villager 8 with Maintenance-Free Ball Joints	6-19
Rear Suspension – Turf/CA 2, 2 Plus, 6, and Villager Gasoline	6-21
Rear Suspension – Turf/CA 2, 6, and Villager IQ Plus Electric	6-23
Stabilizer Bar – Turf/CA 2, 2 Plus, 6, and Villager Gas	6-25

SECTION 7 – ELECTRICAL SYSTEM – CARBURETED GASOLINE VEHICLES

Wiring – Carryall 6 and Villager 6 Gas with AMD Starter Gen	7-3
Wiring – Villager 8 Gas with AMD Starter Gen	7-5
Starter/Generator Assembly (Key-Start), Model 114-04-4001A	7-7
Starter/Generator Mounting – 114-0x-400xx Models	7-9
Operation and Maintenance Switch	7-11
Electrical Component Box – Carryall 6 and Villager 6/8	7-13
Battery – Gasoline Utility Vehicles	7-15

SECTION 8 – ELECTRICAL SYSTEM – EFI GASOLINE VEHICLES

Wiring, Fuses, and Diodes, Key-Start – EFI, Villager 6, XRT850 SE	8-3
Wiring, Fuses, and Diodes, Key-Start – EFI, Villager 8	8-5
Starter/Generator (Model 114-04-4006), Key-Start – EFI	8-7
Starter/Generator Mounting – EX40	8-9
Electrical Component Box, Key-Start – EX40	8-11
Charging Diode, Key-Start – EFI	8-13
Forward/Reverse Shifter Switches, Key-Start – EFI, Villager 6, 8, 850, 850SE	8-15
Forward/Reverse Shifter Switches, Pedal-Start – EFI, Villager 6, 8, 850, 850SE	8-17
Battery – Gasoline Utility Vehicles	8-19

CONTENTS

SECTION 9 – ENGINE (S27) W/O ACR, 50-STATE

Tune-Up Kit – Kawasaki FE350	9-3
FE350 Engine (S27) w/o ACR, Shrouds, and Brackets; 50-State	9-5
FE350 Engine (S27) – Ignition Components and Flywheel	9-7
FE350 Engine (S27) – Oil Circulation	9-9
FE350 Engine (S27) – Cylinder Head	9-11
FE350 Engine (S27) – Crankcase, Camshaft, and Oil Sensor	9-13
FE350 Engine (S27) – Crankcase and Crankshaft	9-15
FE350 Engine (S27) – Mounting	9-17

SECTION 10 – ENGINE (SUBARU EX40)

Tune-Up Parts – Subaru EX40	10-3
Engine and Engine Mounting, Utility – EX40	10-5
Fan and Shroud – EX40	10-7
Air Deflector – EX40	10-9
Ignition Components and Flywheel – EX40	10-11
Sensors – EX40	10-13
Cylinder Head – EX40	10-15
Valvetrain and Timing Chain – EX40	10-17
Crankcase – EX40	10-19
Crankshaft and Piston – EX40	10-21

SECTION 11 – FUEL, INTAKE, AND GOVERNOR SYSTEM

Fuel System and Tank without Sending Unit	11-3
Fuel System and Tank with Sending Unit	11-5
Carbon Canister	11-7
Carburetor Assembly – FE350 S27	11-9
Carburetor Mounting, Utility, FE350 S27	11-11
Governor and Accelerator Cables	11-13
Air Intake Duct and Choke Cable – Villager 6	11-15
Air Intake Duct and Choke Cable – Villager 8	11-17
Air Filter and Intake Hose	11-19

SECTION 12 – FUEL SYSTEM – EFI

Fuel System with Sending Unit, Top Fill – EFI	12-3
Fuel Tank Kits – EFI	12-5
Carbon Canister – EFI	12-7
Throttle Body and ECU – EFI	12-9

CONTENTS

Throttle Body Mounting – EFI	12-11
Governor and Accelerator Cables – EFI	12-13
Air Filter System and Intake Hose – EFI, LWB Utility/Trans	12-15

SECTION 13 – EXHAUST SYSTEM

Exhaust System – FE350 (All)	13-3
------------------------------------	------

SECTION 14 – EXHAUST SYSTEM, UTILITY – EX40 ENGINE

Exhaust System – Utility	14-3
--------------------------------	------

SECTION 15 – DRIVE BELT AND CLUTCHES – CARBURETED GASOLINE VEHICLES

Drive Belt	15-3
Drive Clutch – Carryall 2 Plus and Villager 6/8	15-5
Driven Clutch	15-7

SECTION 16 – DRIVE BELT AND CLUTCHES – EFI GASOLINE VEHICLES

Drive Belt – Key-Start Vehicles with EFI	16-3
Drive Clutch – Key-Start Vehicles	16-5
Driven Clutch (Standard Speed) – Key Start and Pedal Start	16-7

SECTION 17 – UNITIZED TRANSAXLE – CARBURETED GASOLINE VEHICLES

Forward/Reverse Shifter	17-3
Shifter Cable – Turf/CA 6 and Villager 6	17-5
Shifter Cable – Villager 8	17-7
Kawasaki Transaxle – Gear Cases and Brackets	17-9
Kawasaki Transaxle – F&R Transmission and Gear Reduction	17-11
Kawasaki Transaxle – Differential and Axles	17-13
Graziano Transaxle – Gear Cases and Levers	17-15
Graziano Transaxle – F&R Transmission and Gear Reduction	17-17
Graziano Transaxle – Differential and Axles	17-19
Differential Guard – Gasoline Vehicle	17-21

SECTION 18 – TRANSAXLE (FUJI ED65) – EFI GASOLINE VEHICLES

Forward/Reverse Shifter – EFI Villager 6, 8, 850, 850SE	18-3
Shifter Cable – Villager 6, XRT850SE	18-5
Shifter Cable – Villager 8	18-7
Shift Lever and Bracket – Key-Start Engines	18-9

CONTENTS

Governor Arm and Brackets – Utility Vehicles	18-11
Transaxle (ED65), Limited Slip – Page 1 of 3	18-13
Transaxle (ED65), Open – Page 1 of 3	18-15
Transaxle (ED65), Limited Slip and Open – Page 2 of 3	18-17
Transaxle (ED65), Limited Slip – Page 3 of 3	18-19
Transaxle (ED65), Open – Page 3 of 3	18-21
Hub, Rear	18-23

SECTION 19 – ELECTRICAL SYSTEM, ELECTRIC VEHICLES

Motor Controller Output Regulator (MCOR)	19-3
Wiring – Villager 6 IQ Plus Electric	19-5
Wiring – Villager 8 IQ Plus Electric	19-7
Battery Charger Receptacle	19-9
Tow/Run Switch – IQ Plus Vehicles	19-11
Batteries, 6-Volt, Standard Duty, Trojan	19-13
Batteries, 6-Volt, Heavy Duty, Trojan	19-15
Single Point Watering System (SPWS)	19-17
Hand Pump and Deionizer (Battery-Powered Quality Light)	19-19
Computer, Controller, and Solenoid – for Trojan Batteries	19-21
Ferrite Beads, CE	19-23

SECTION 20 – MOTOR (MODEL DA5-4006) – IQ PLUS

Motor (Model DA5-4006) – IQ Plus	20-3
--	------

SECTION 21 – TRANSAXLE – ELECTRIC VEHICLES

Transaxle – Electric Vehicles	21-3
Differential Guard – Electric Vehicles	21-5

SECTION 22 – BATTERY CHARGERS

IQ Plus Battery Charger (Models 25730-11,-18,-19), Domestic	22-3
IQ Plus Battery Charger (Models 25880-11 and -18), International	22-5
Onboard IQ Plus Battery Charger (Model 25260-50), Domestic	22-7
Onboard IQ Plus Battery Charger (Model 25660-50), International	22-9
Onboard IQ Plus Charger and Cord Reel Mounting	22-11

SECTION 23 – MAINTENANCE AND SERVICE TOOLS

Maintenance and Service Tools	23-3
Maintenance and Service Tools, Continued	23-5

CONTENTS

Maintenance and Service Tools, Continued	23-7
Maintenance and Service Tools, Continued	23-9
Maintenance and Service Tools, Continued	23-11


SECTION i – INDEX

BODY AND TRIM

1

G

E

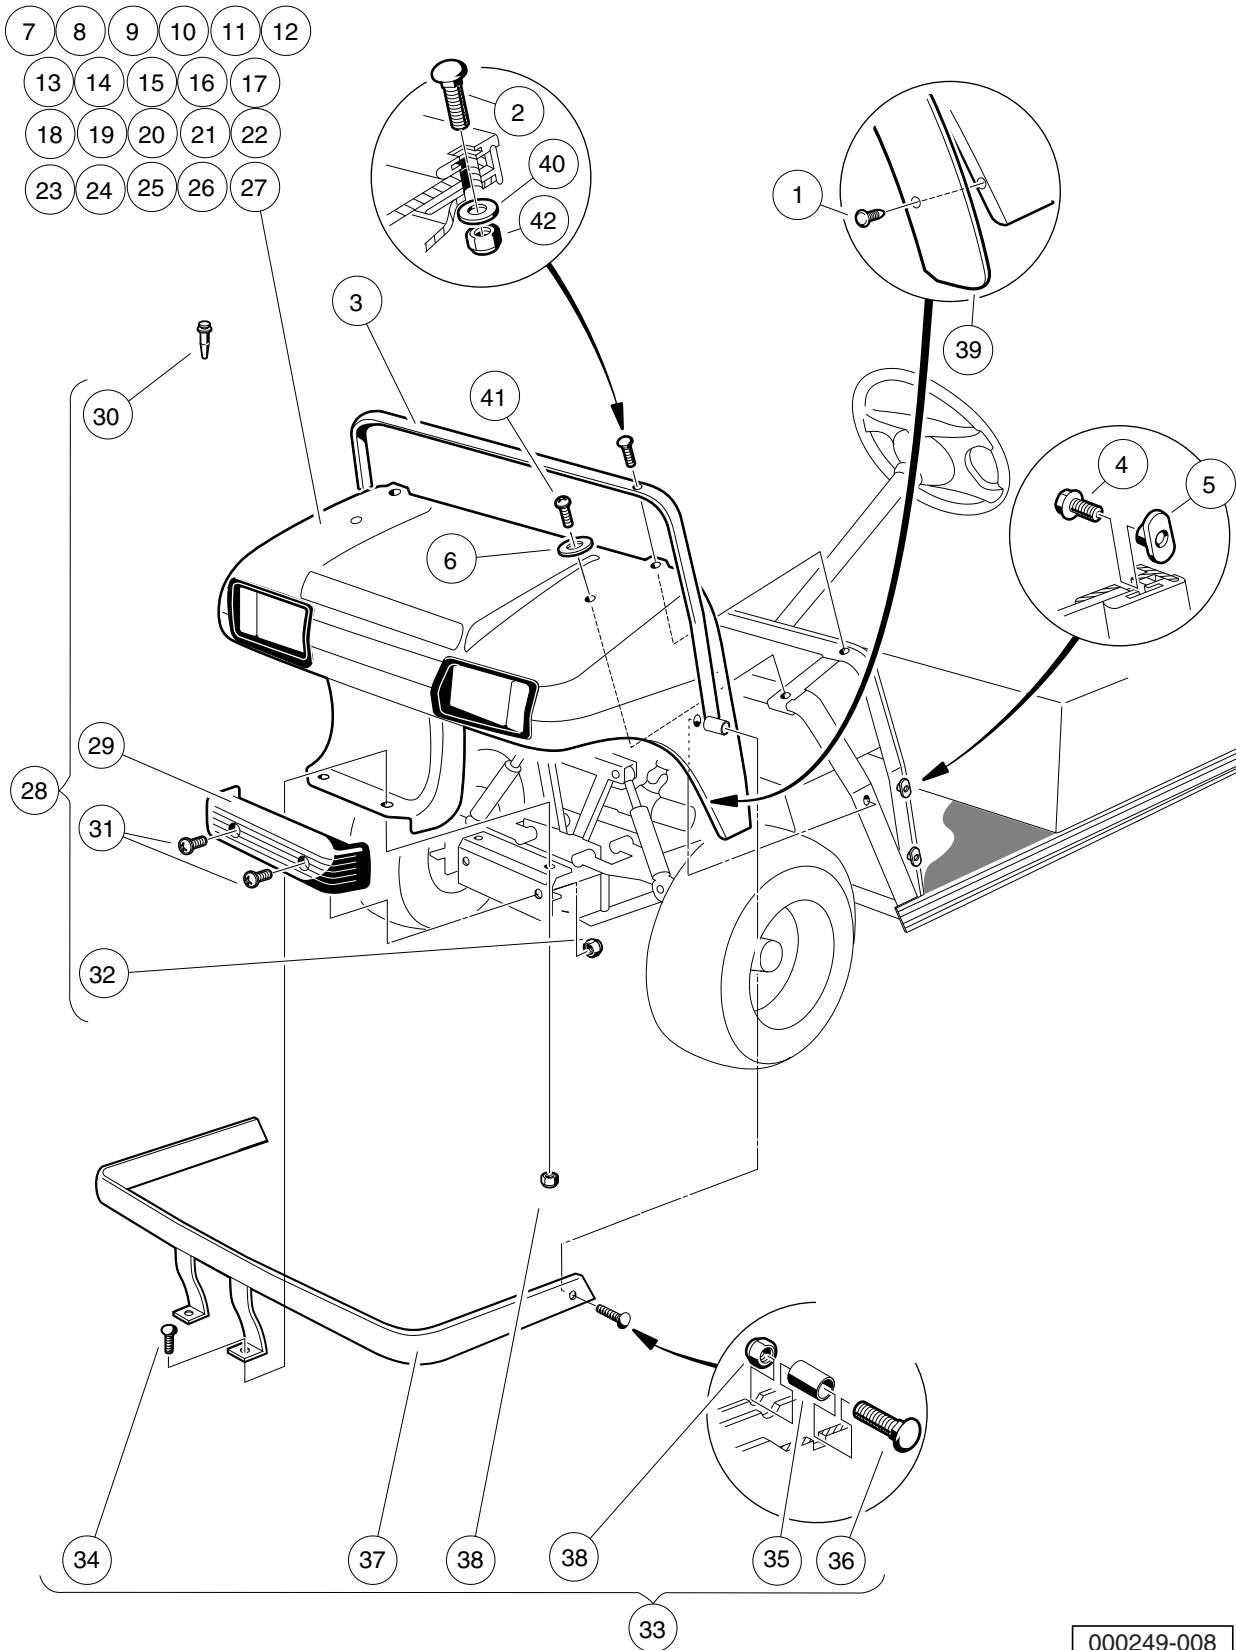1**G****E**

000249-008


FRONT BODY AND TRIM – TURF, UTILITY, & TRANSPORTATION

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010434</u>	Barrel - Plastic	12	
2	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	2	
3	<u>1011014</u>	Trim, Cowl	1	
4	<u>1011017</u>	Screw, #8-32 X 0.375	6	
5	<u>1011394</u>	T-Nut Package (Set of 4)	1	
6	<u>1015075</u>	Washer, 5/16 Flat Type A	2	
7	<u>101692501</u>	Cowl, TPO, Beige	1	
8	<u>101692502</u>	Cowl, TPO, White	1	
9	<u>101692504</u>	Cowl, Tpo -gray	1	
10	<u>101692506</u>	Cowl, TPO, Red	1	
11	<u>101692509</u>	Cowl, TPO, Pacific Blue (Royal Blue)	1	
12	<u>101692510</u>	Cowl, TPO, Dark Green	1	
13	<u>101692511</u>	Cowl, TPO, Black	1	
14	<u>101692512</u>	Cowl, TPO, Classic Blue (Navy)	1	
15	<u>101692513</u>	Cowl, TPO, Burgundy	1	
16	<u>101692514</u>	Cowl, TPO, Dark Gray	1	
17	<u>101692515</u>	Cowl, TPO, Safety Yellow	1	
18	<u>101693901</u>	Cowl with Headlight Opening, TPO, Beige	1	
19	<u>101693902</u>	Cowl with Headlight Opening, TPO, White	1	
20	<u>101693904</u>	Cowl with Headlight Opening, TPO, Gray	1	
21	<u>101693906</u>	Cowl with Headlight Opening, TPO, Red	1	
22	<u>101693909</u>	Cowl with Headlight Opening, TPO, Dark Green	1	
23	<u>101693910</u>	Cowl with Headlight Opening, TPO, Black	1	
24	<u>101693911</u>	Cowl with Headlight Opening, TPO, Classic Blue (Navy)	1	
25	<u>101693912</u>	Cowl with Headlight Opening, TPO, Burgundy	1	
26	<u>101693913</u>	Cowl with Headlight Opening, TPO, Dark Gray	1	
27	<u>101693914</u>	Cowl with Headlight Opening, TPO, Safety Yellow	1	
28	<u>1017080</u>	Kit, Front Bumper (includes items 29 through 32)	1	
29	<u>1016868</u>	Front Bumper	1	
30	<u>1016967</u>	Blind Rivet, Push Type	2	
31	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2	
32	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	
33	<u>101734802</u>	Kit, Heavy-Duty Bumper (includes items 34 through 38)	1	
34	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	2	
35	<u>1010546</u>	Spacer	2	
36	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	2	
37	N/A	Weldment, Heavy Duty Bumper	1	
38	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4	
39	<u>101870401</u>	Fender Extrusion	2	
40	<u>1241</u>	Washer, 5/16 Type A Flat	2	
41	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2	
42	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	

1

G

E

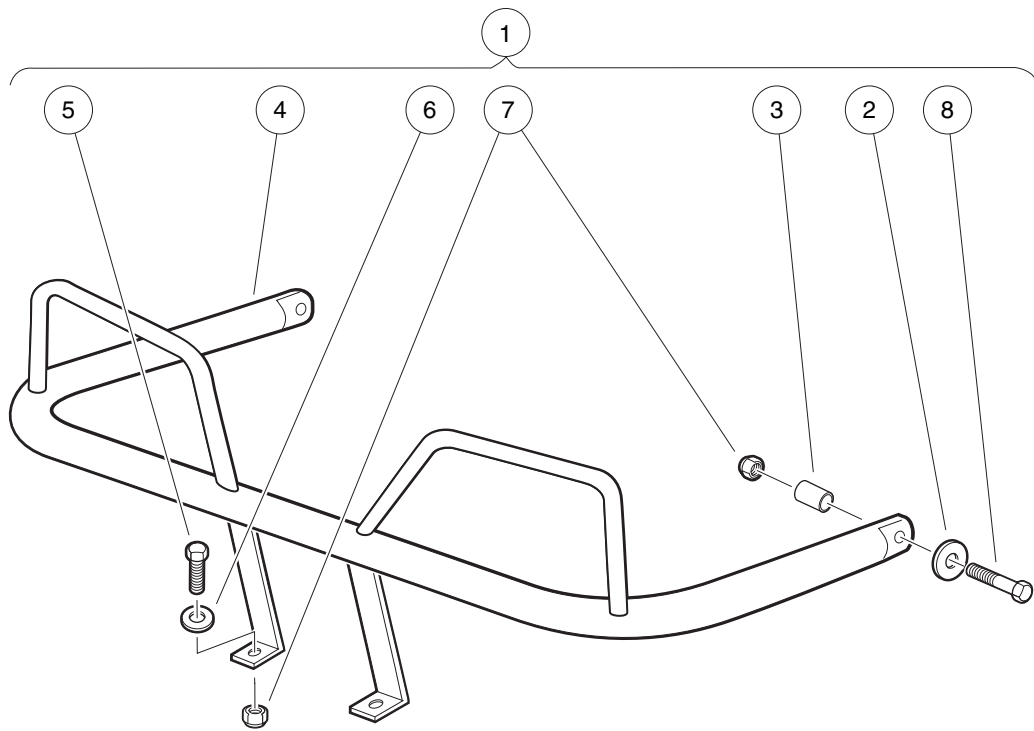

001238-001


BRUSH GUARD KIT – DS, UTILITY, & VILLAGER

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	SVP143902	Kit, Brush Guard, Heavy-Duty, DS/Utility/Villager (includes items 2 through 8)	1	
2	<u>1011578</u>	Washer, 5/16 Type B Flat	2	
3	<u>1015608</u>	Tube Spacer, Hydraulic Cylinder	2	
4	103895401	Weldment, Brush Guard, Hd	1	
5	1218	Screw, 5/16-18 X 1.25 Hex-Head Cap	2	
6	<u>1241</u>	Washer, 5/16 Type A Flat	2	
7	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4	
8	<u>8935</u>	Screw, 5/16-18 X 2.25 Hex-Head Cap	2	

1

G

E

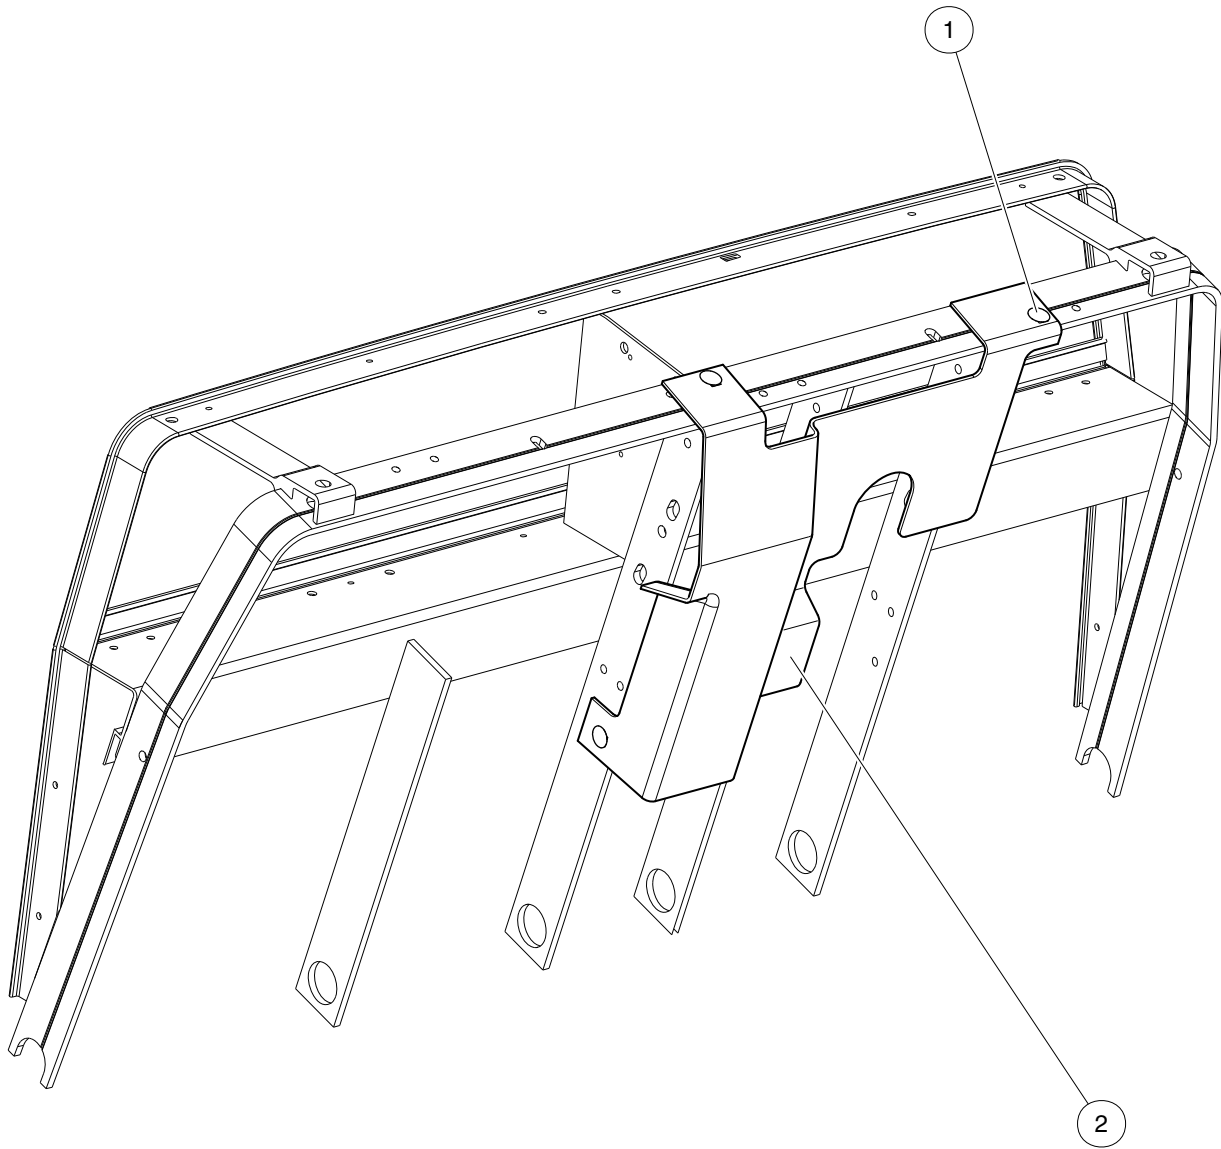

000593-002


SPLASH GUARD – GASOLINE VEHICLES ONLY

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	<u>1010434</u>	1 2 3 4 Barrel - Plastic	3	
2	<u>103174401</u>	Splash Guard	1	

1

G

E

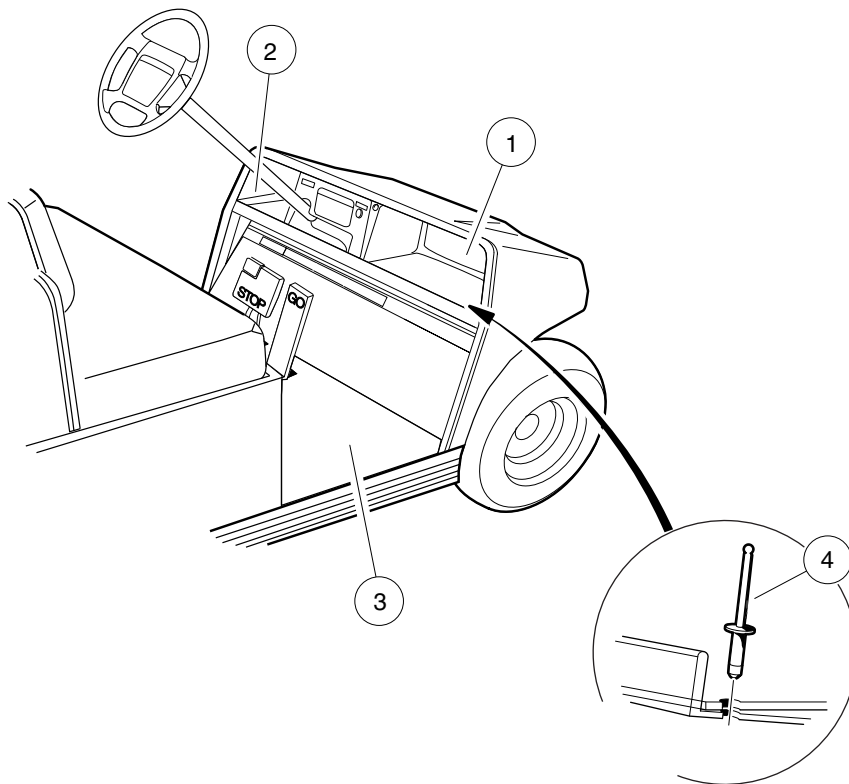

000252-002

DASH POCKETS AND FLOORMAT

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	<u>1013343</u>	1 2 3 4 Dash Component, Passenger-Side, Black	1	
2	1013344	Dash Component, Driver-Side	1	
3	103939201	Floor Mat, Ds/utl, Std	1	
4	<u>7973</u>	Rivet, 3/16 X .400 Blind	5	

1

G

E



1

001281-001


FLOORMAT, REAR – VILLAGER & TRANSPORTATION VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	103952201	1 2 3 4 Floor Mat, Ds/utl, Rear, Limo	A/R	

1

G

E

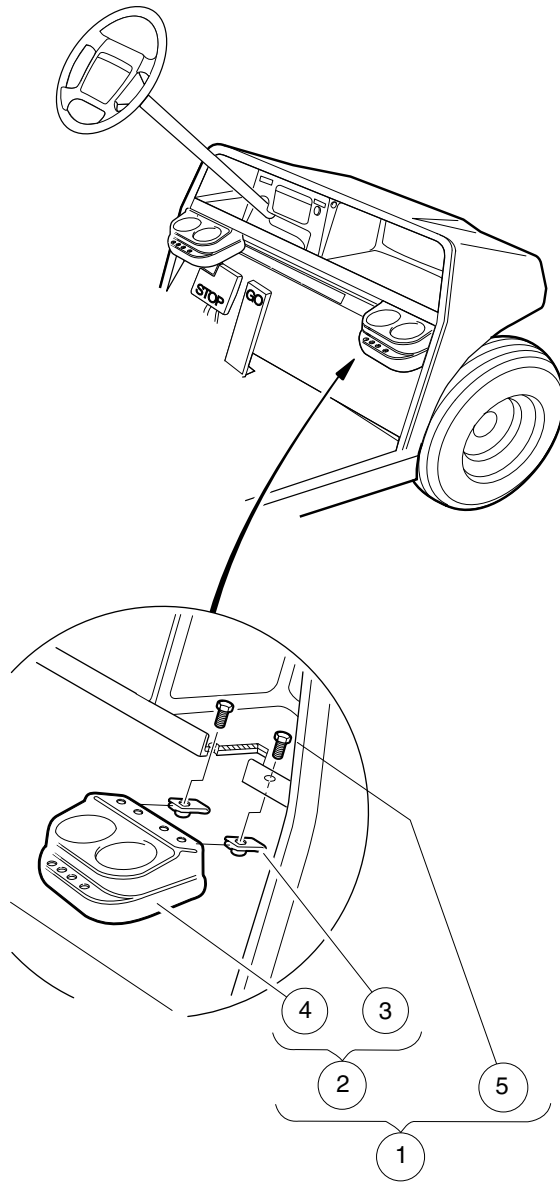

000253-002

BEVERAGE HOLDER – DUAL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101708301</u>	Drink Holder Kit (includes items 2 through 5)	2
2	<u>1016811</u>	Holder, Dual Cup (includes items 3 and 4)	1
3	1016952	U-Nut, 1/4-20	2
4	N/A	Cup Holder, Dual	1
5	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2

1


G

E

1

G

E

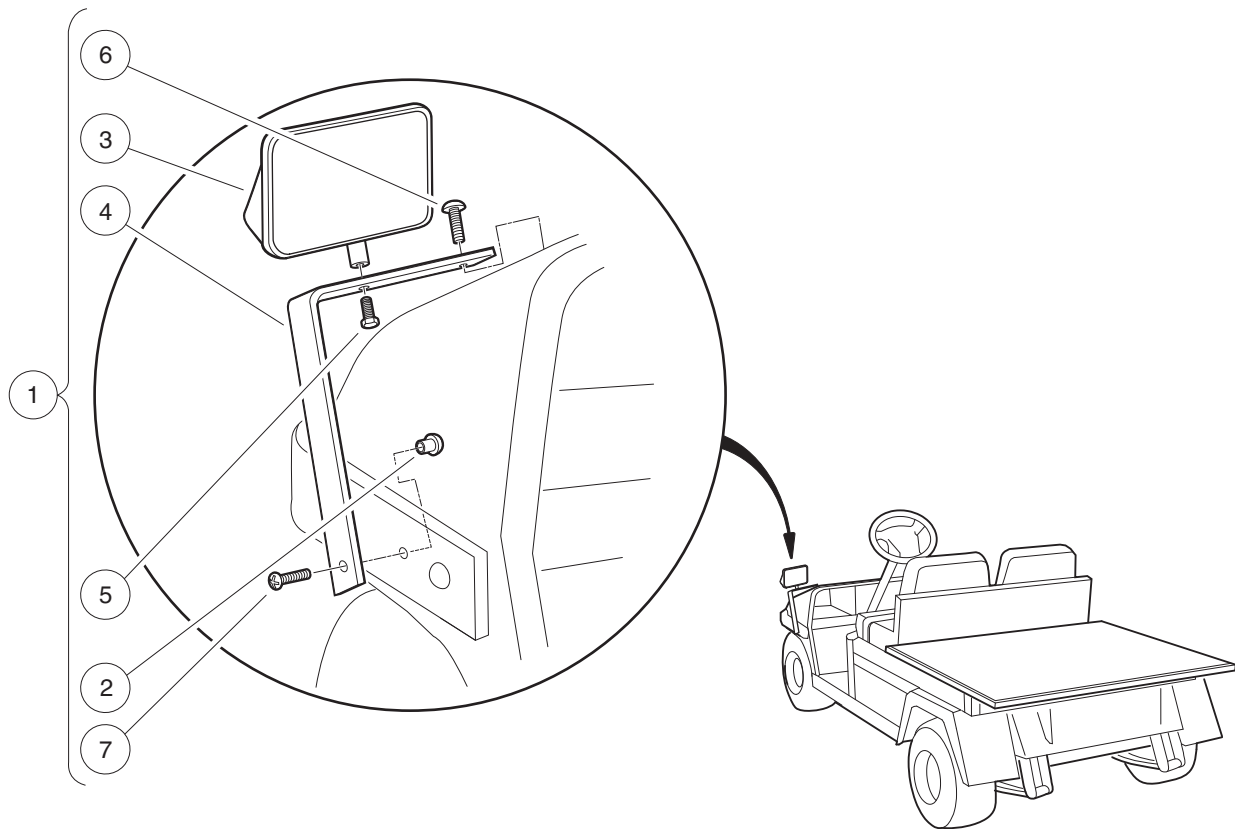

001211-001


MIRROR, REAR-VIEW – WITHOUT CAB

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1013846</u>	Kit, Rear Mirror, West Coast (includes items 2 through 7)	1	
2	<u>1011878</u>	T-nut, 1/4-20 X .310 Capped	1	
3	<u>1013824</u>	Rear View Mirror	1	
4	<u>1013825</u>	Mirror Mounting Bracket	1	
5	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1	
6	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	1	
7	<u>8248</u>	Screw, 1/4-20 X 0.75, Truss-Head Machine	1	
Note: To install this kit, vehicle must be equipped with a heavy-duty front bumper.				

1

G



E

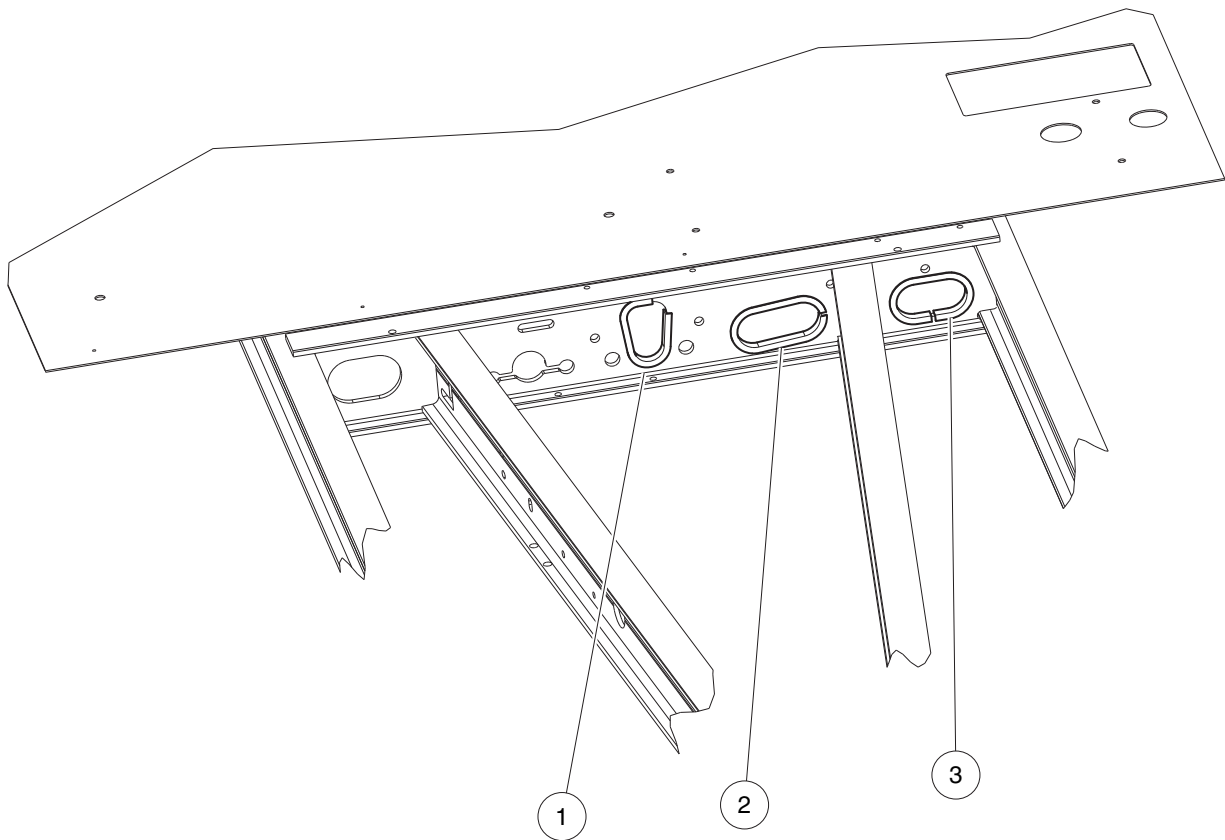

001221-001

GROMMETS, CHASSIS

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	<u>101806001</u>	1 2 3 4 I-beam Grommet - 5.5	A/R	
2	<u>101806002</u>	I-beam Grommet - 7.5	A/R	
3	<u>101806005</u>	I-beam Grommet - 6.75	A/R	

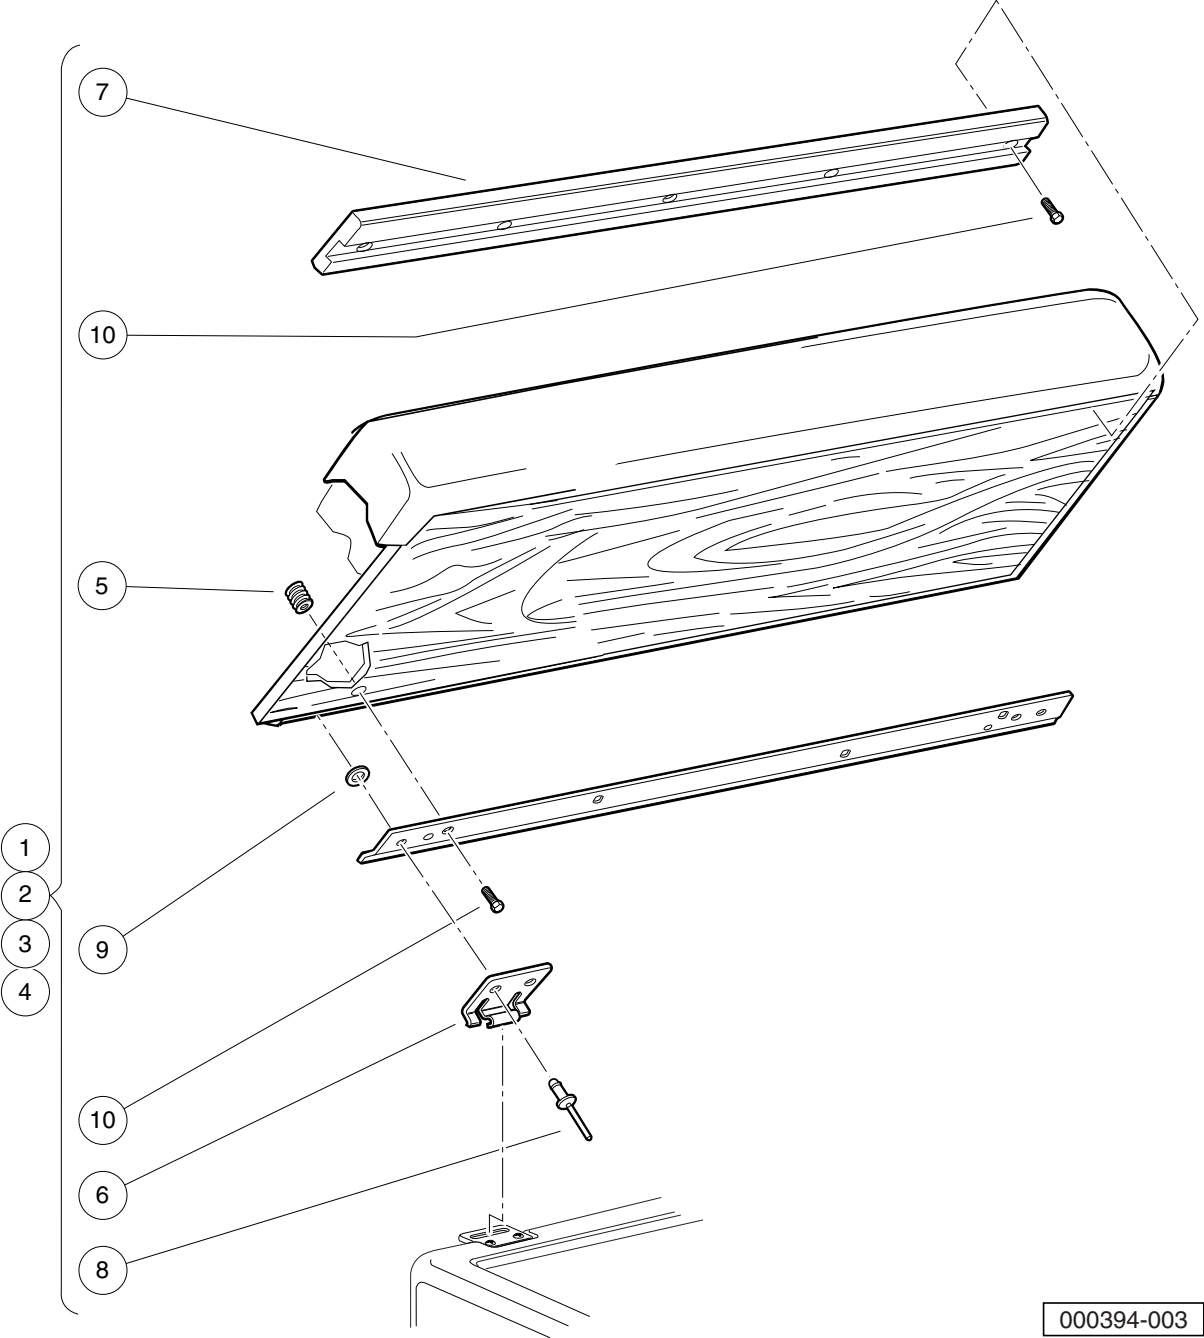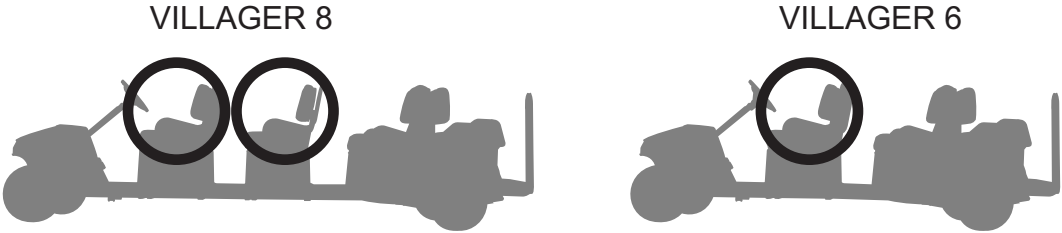

000394-003





FRONT AND CENTER SEAT BOTTOMS

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>101728201</u>	Seat Bottom Assembly, Front, White	1	
2	<u>101728203</u>	Seat Bottom Assembly, Front, Beige	1	
3	<u>101728210</u>	Seat Bottom Assembly, Front, Black	1	
4	<u>101728213</u>	Seat Bottom Assembly, Rear, Gray (includes items 5 through 10)	1	
5	1010543	Insert - Wood	8	
6	<u>1011652</u>	Hinge Plate	2	
7	<u>1013312</u>	Bumper, Seat, Long	1	
8	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
9	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
10	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	

1

G

E

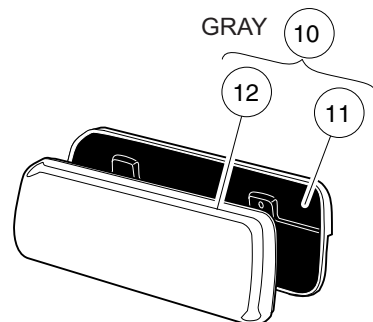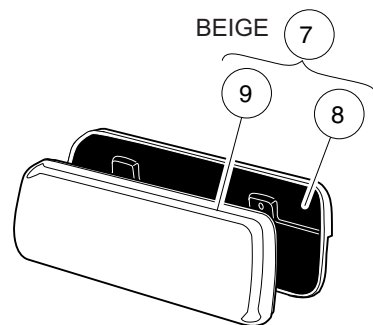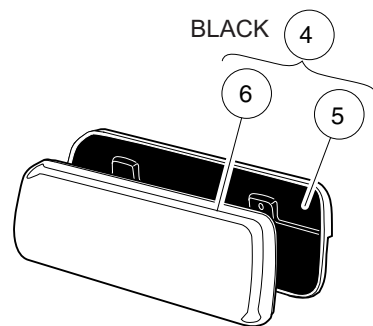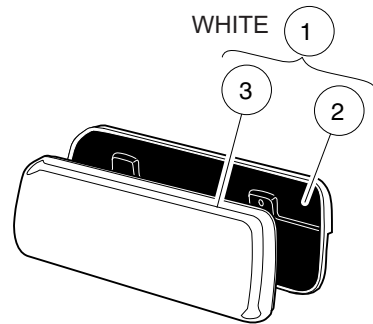

000608-001

SEAT BACK ASSEMBLY


ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>101677701</u>	Seat Back Assembly, White (includes items 2 and 3)	1	
2	1016751	Cap, Seat Back	1	
3	<u>101675512</u>	Vinyl Seat Back, White	1	
4	<u>101677702</u>	Seat Back Assembly, Black (includes items 5 and 6)	1	
5	1016751	Cap, Seat Back	1	
6	<u>101675514</u>	Vinyl Seat Back, Black	1	
7	<u>101677703</u>	Seat Back Assembly, Beige (includes items 8 and 9)	1	
8	1016751	Cap, Seat Back	1	
9	<u>101675511</u>	Vinyl Seat Back, Beige	1	
10	<u>101677705</u>	Seat Back Assembly, Gray (includes items 11 and 12)	1	
11	1016751	Cap, Seat Back	1	
12	<u>101675515</u>	Vinyl Seat Back-nstd Svc	1	

1


G

E

VILLAGER 8

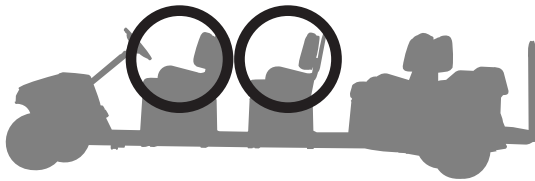

VILLAGER 6

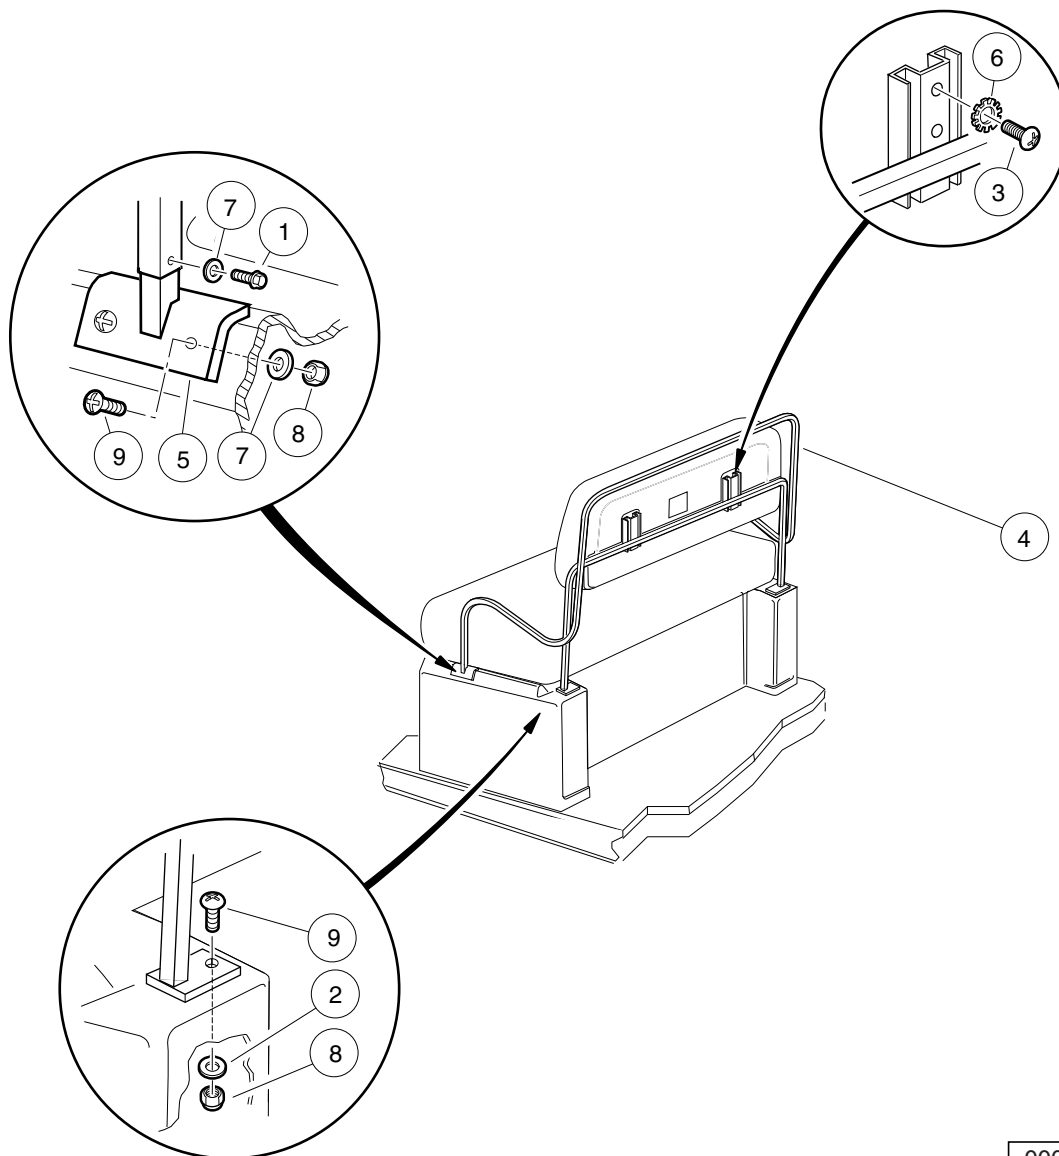

000396-003


ARMRESTS, FRONT – VILLAGER 6 & 8 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4	
2	<u>1014306</u>	Washer, 1/4" Type B Flat	2	
3	<u>1015902</u>	Screw, 1/4-20 X 1.25 Truss-Head	4	
4	<u>1017259</u>	Armrest Weld Asm Front	1	
5	<u>1017310</u>	Armrest Mounting Weldment	2	
6	<u>101946201</u>	Washer, Lock, 0.250 External-Tooth	4	
7	<u>332</u>	Washer, 1/4 Type A Narrow Flat	6	
8	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	6	
9	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	6	

1

G

E

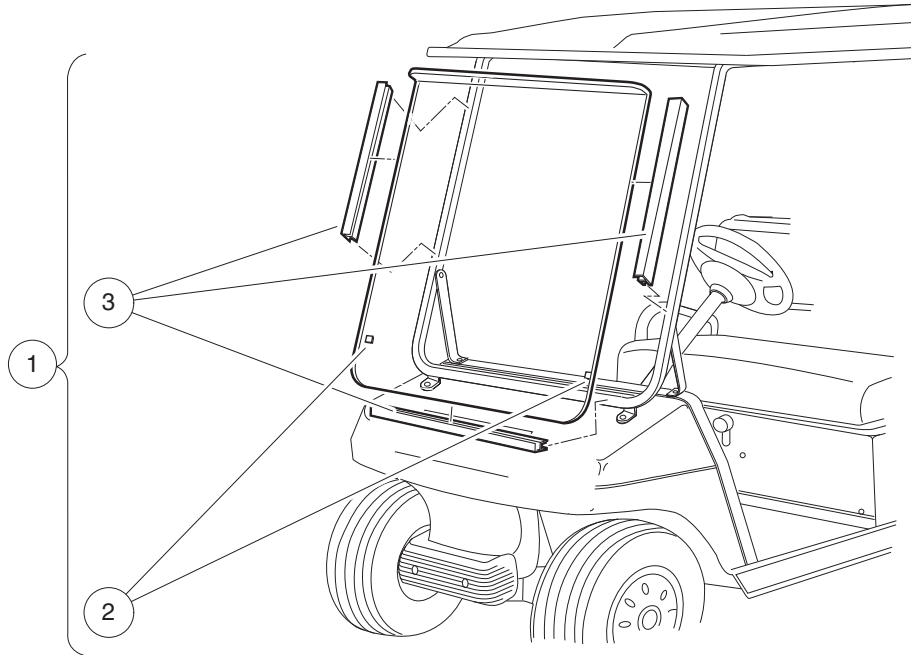

001204-001

WINDSHIELD, NON-HINGED

ITEM	PART NO.	DESCRIPTION	QTY
1	1014435	Windshield Tinted One-Piece (includes items 2 and 3)	1
2	<u>1011897</u>	Bumper, Protective	2
3	<u>101444101</u>	21" Plastic Extrusion	3

1


G

E

1

G

E

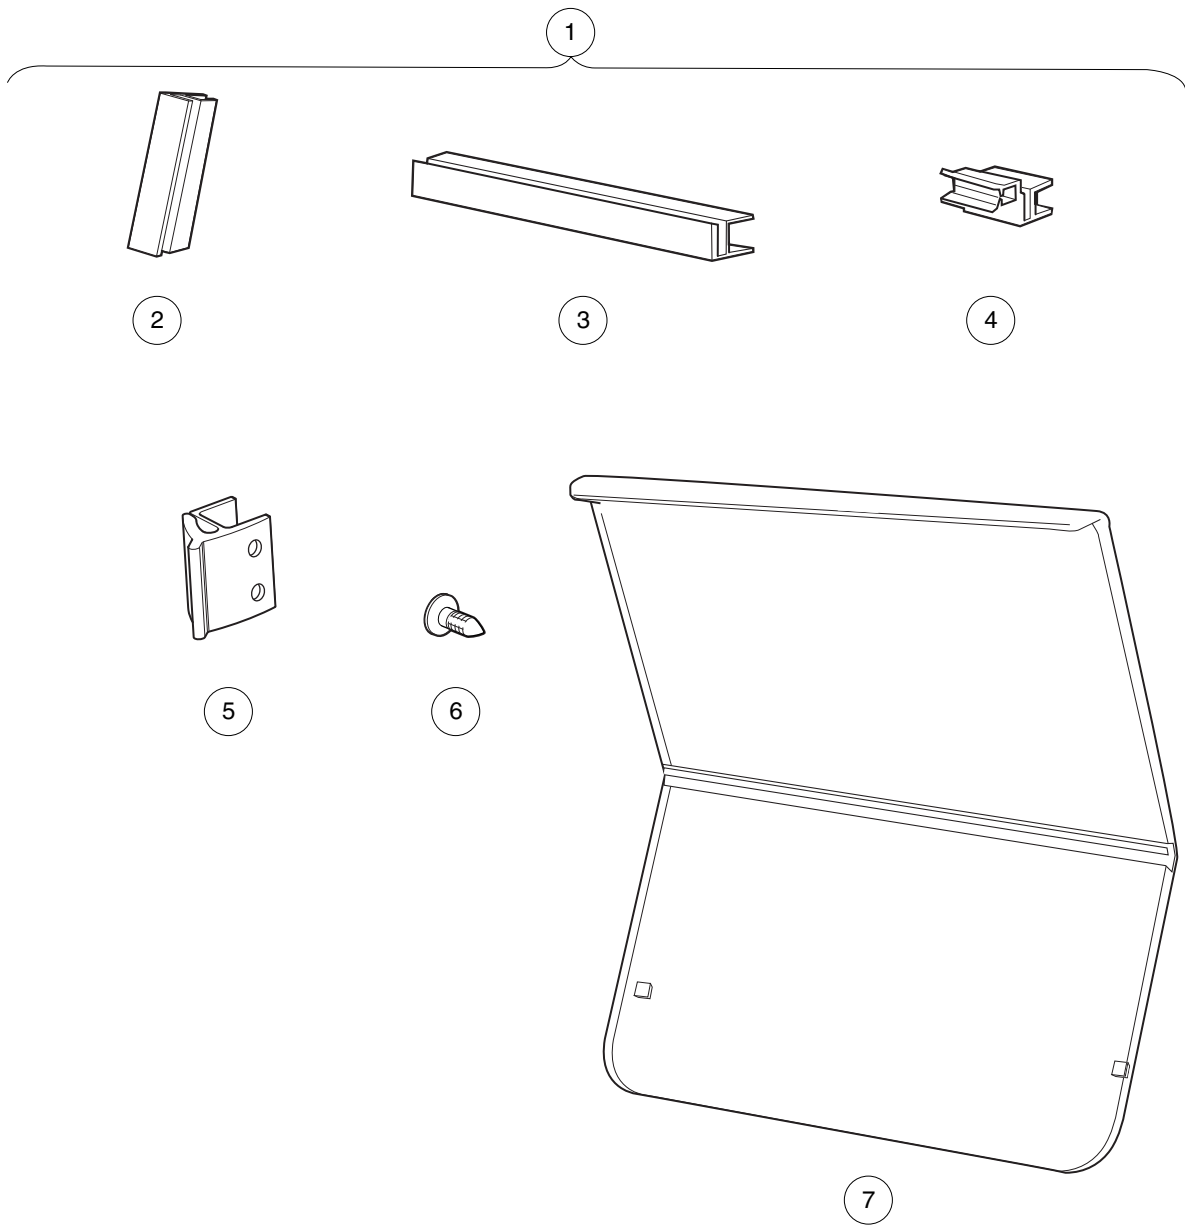

001257-001


WINDSHIELD, HINGED

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	103888301	Kit, Hinged Windshield, Utility (includes items 2 through 7)	1			
2	<u>102005701</u>	5" Plastic Extrusion	4			
3	<u>102163001</u>	Windshield Channel	1			
4	<u>102163101</u>	Channel with Receiver Clip	2			
5	<u>103677101</u>	W/s, Rubber, Clip Retainer	2			
6	<u>103754901</u>	Fastener, Barrel - .610 X .25	8			
7	103888101	Hinged Windshield, Utility	1			

1

G

E

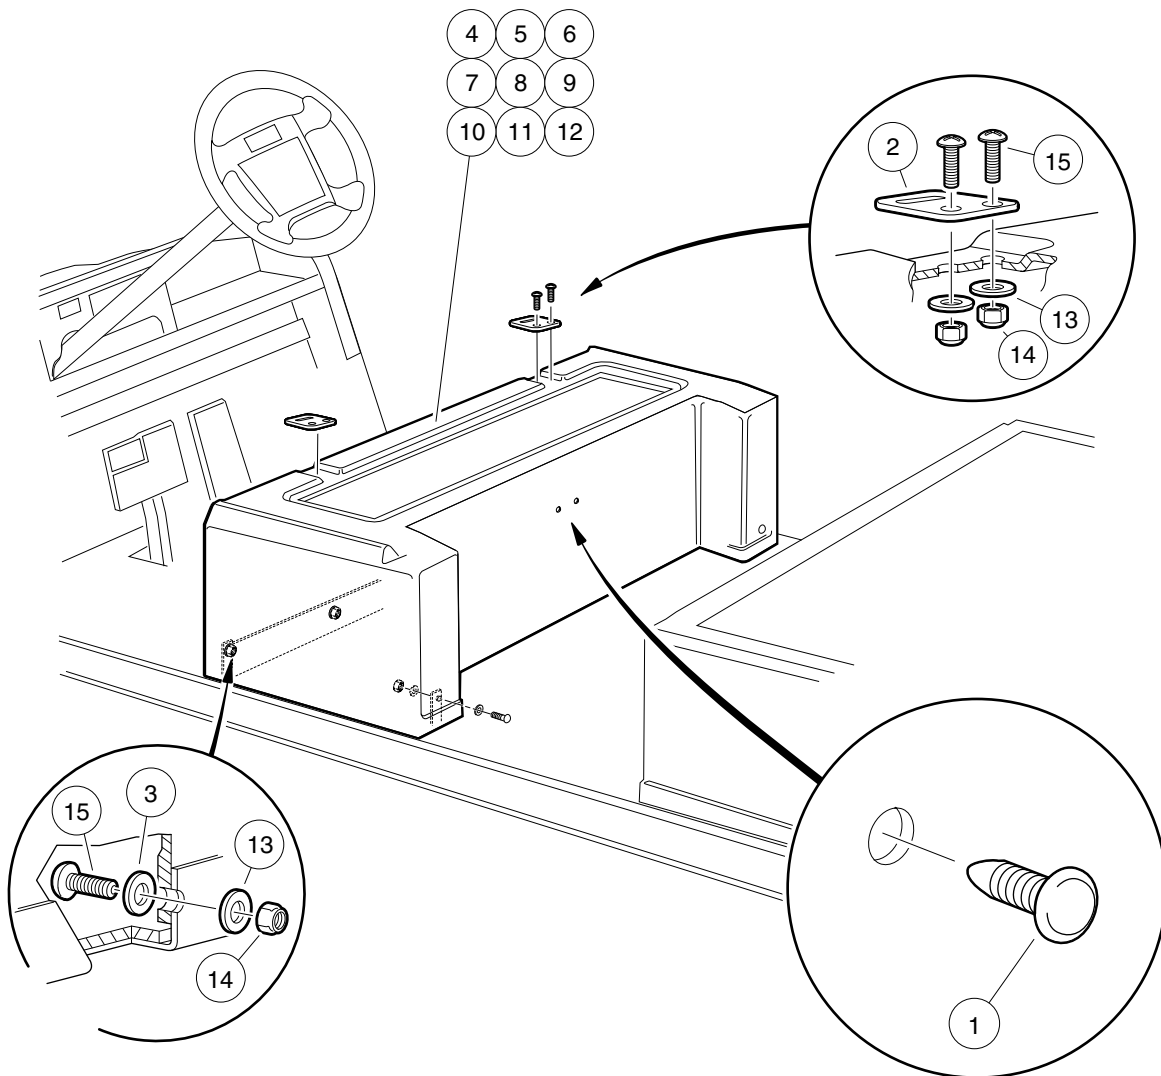

000389-004


CENTER BODY – VILLAGER 6 GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	1
		1 2 3 4		G
1	<u>1010434</u>	Barrel - Plastic	2	E
2	<u>1012412</u>	Body, Hinge Plate	2	
3	<u>1012581</u>	Washer, 0.609-inch OD, Nylon Cup	6	
4	<u>103274101</u>	Body, Center, Gas, Beige	1	
5	<u>103274102</u>	Body, Center, Gas, Wht	1	
6	<u>103274104</u>	Body, Center, Gas, Gray	1	
7	<u>103274106</u>	Body, Center, Gas, Red	1	
8	<u>103274108</u>	Body, Center, Gas, Pacific Bl	1	
9	<u>103274109</u>	Body, Center, Gas, Dk Green	1	
10	<u>103274110</u>	Body, Center, Gas, Black	1	
11	<u>103274111</u>	Body, Center, Gas, C/blu	1	
12	<u>103274112</u>	Body, Center, Gas, Burgundy	1	
13	<u>332</u>	Washer, 1/4 Type A Narrow Flat	10	
14	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	10	
15	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	10	

1

G


E

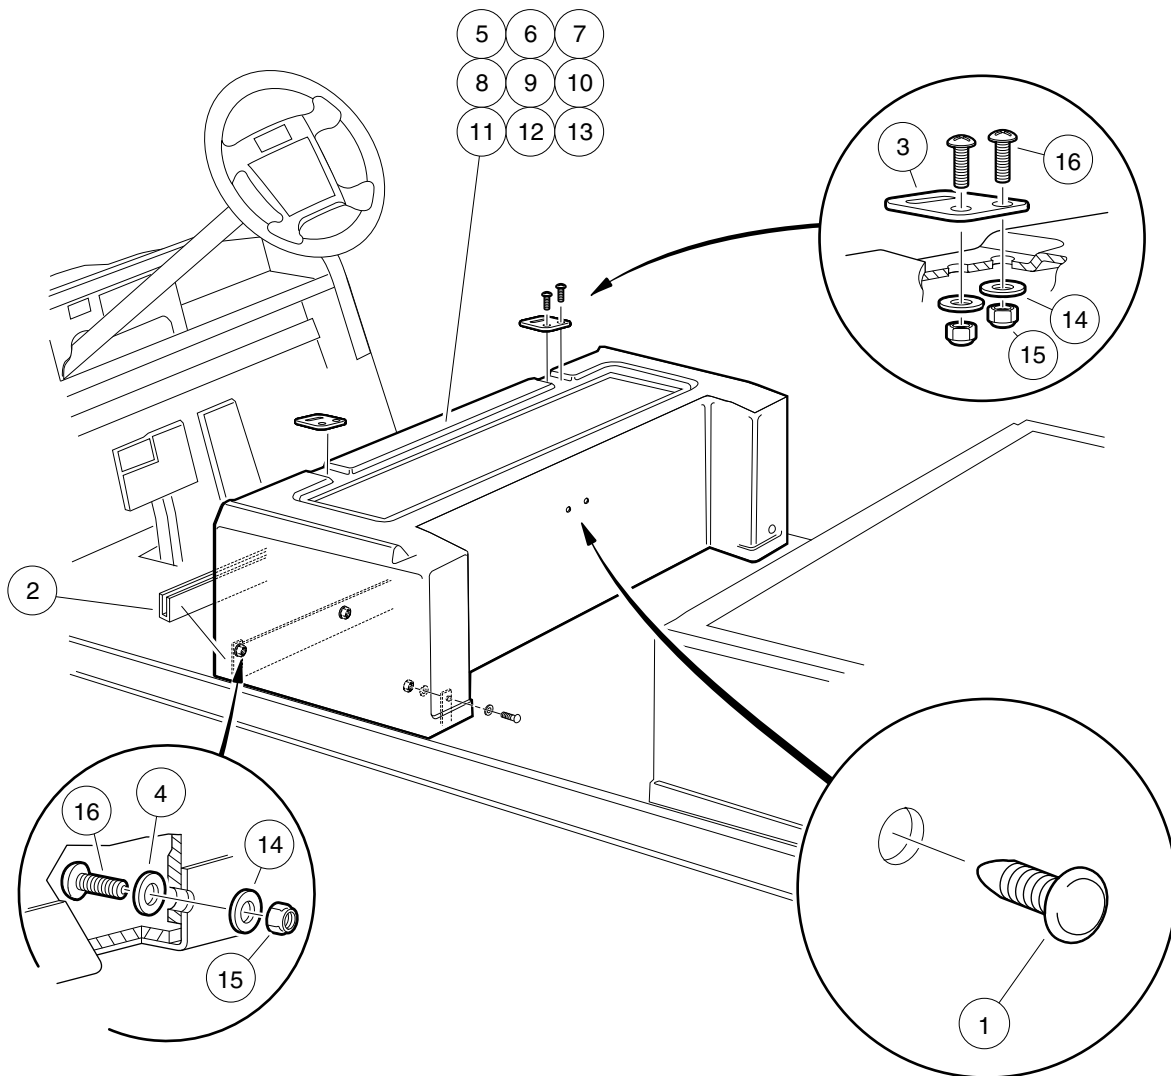

000389-005

CENTER BODY – VILLAGER 6 IQ PLUS VEHICLE


ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010434</u>	Barrel - Plastic	2	
2	<u>1010993</u>	Body Kick Plate	1	
3	<u>1012412</u>	Body, Hinge Plate	2	
4	<u>1012581</u>	Washer, 0.609-inch OD, Nylon Cup	4	
5	<u>103274001</u>	Body, Center, Elec, Beige	1	
6	<u>103274002</u>	Body, Center, Elec, Wht	1	
7	<u>103274004</u>	Body, Center, Elec, Gray	1	
8	<u>103274006</u>	Body, Center, Elec, Red	1	
9	<u>103274008</u>	Body, Center, Elec, Pacific Bl	1	
10	<u>103274009</u>	Body, Center, Elec, Dk Green	1	
11	<u>103274010</u>	Body, Center, Elec, Black	1	
12	<u>103274011</u>	Body, Center, Elec, C/blu	1	
13	<u>103274012</u>	Body, Center, Elec, Burgundy	1	
14	<u>332</u>	Washer, 1/4 Type A Narrow Flat	8	
15	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	8	
16	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	8	

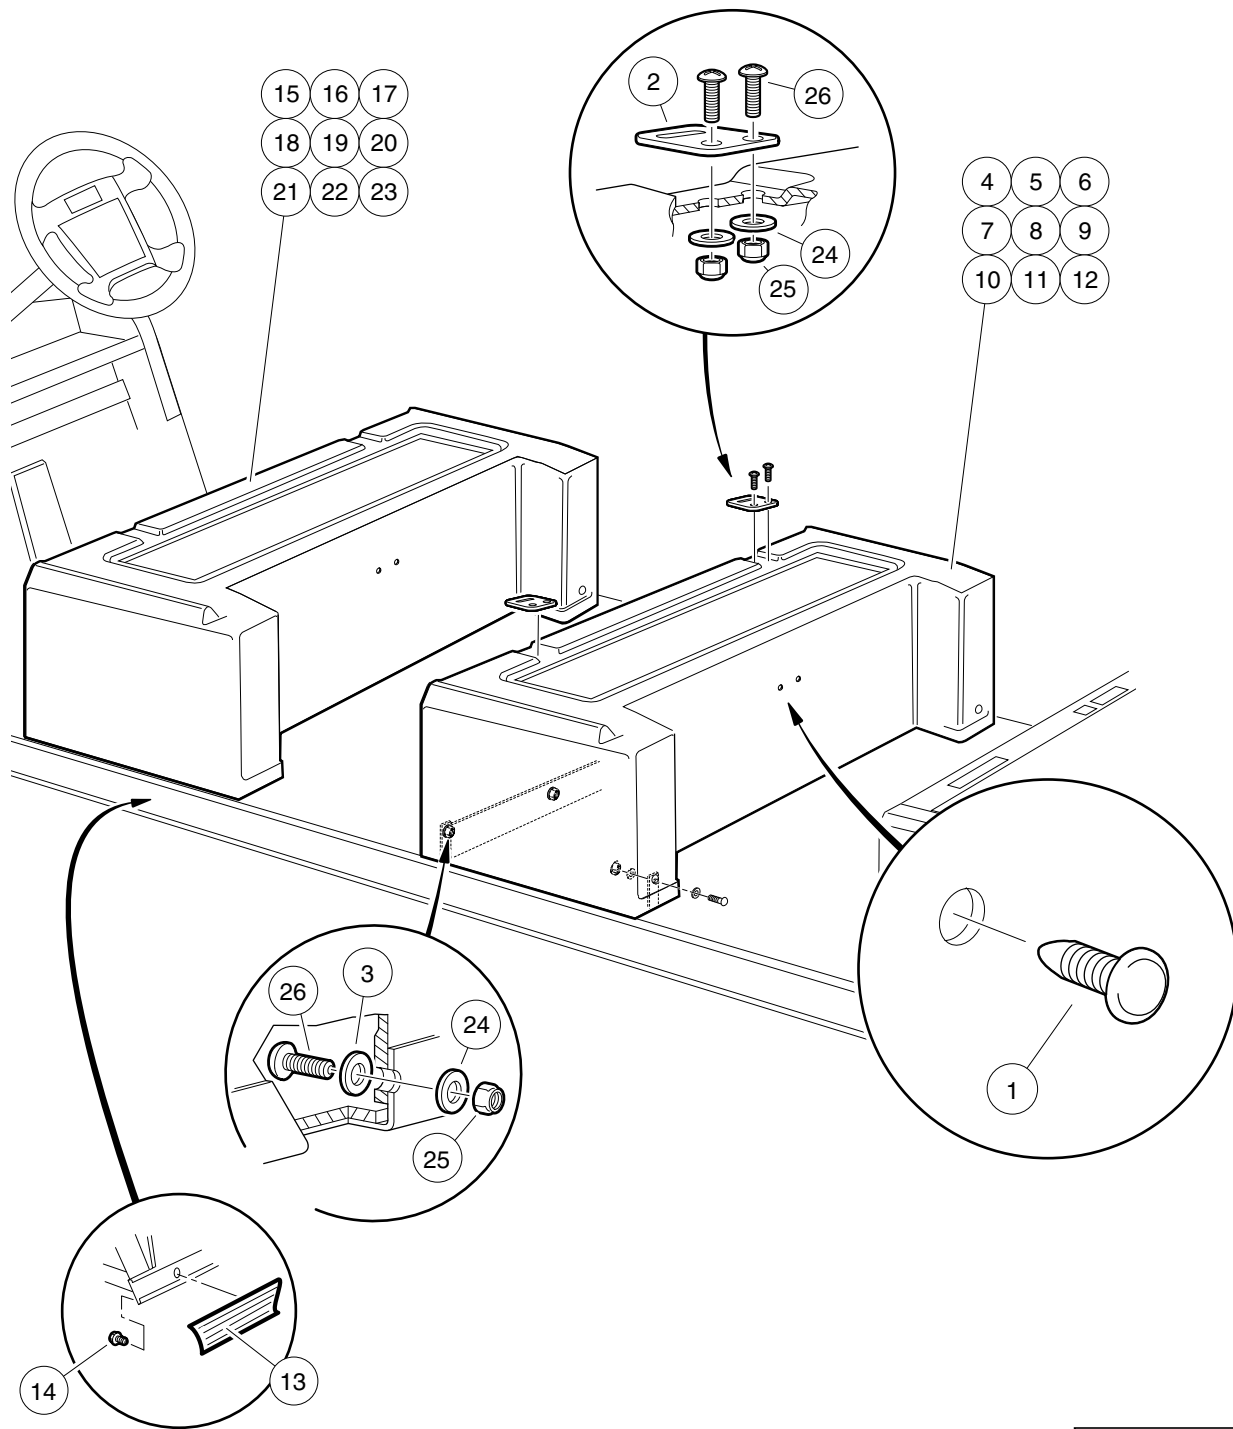1**G****E**

000390-003

CENTER BODIES – VILLAGER 8 GASOLINE VEHICLE



ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	<u>1010434</u>	Barrel - Plastic	2			
2	<u>1012412</u>	Body, Hinge Plate	2			
3	<u>1012581</u>	Washer, 0.609-inch OD, Nylon Cup	6			
4	<u>101788201</u>	Body, Beige, Center	1			
5	<u>101788202</u>	Body, White, Center	1			
6	<u>101788204</u>	Body, Gray, Center	1			
7	<u>101788206</u>	Body, Red, Center	1			
8	<u>101788208</u>	Body, Pacific Blue, Center	1			
9	<u>101788209</u>	Body, Dark Green, Center	1			
10	<u>101788210</u>	Body, Black, Center	1			
11	<u>101788211</u>	Body, Classic Blue, Center	1			
12	<u>101788212</u>	Body, Burgundy, Center	1			
13	<u>101791901</u>	Bumper Guard Vinyl Trim	2			
14	<u>102310701</u>	Screw, #8-18 x 0.375, Hex-Head Washer	8			
15	<u>103274101</u>	Body, Center, Gas, Beige	1			
16	<u>103274102</u>	Body, Center, Gas, Wht	1			
17	<u>103274104</u>	Body, Center, Gas, Gray	1			
18	<u>103274106</u>	Body, Center, Gas, Red	1			
19	<u>103274108</u>	Body, Center, Gas, Pacific Bl	1			
20	<u>103274109</u>	Body, Center, Gas, Dk Green	1			
21	<u>103274110</u>	Body, Center, Gas, Black	1			
22	<u>103274111</u>	Body, Center, Gas, C/blu	1			
23	<u>103274112</u>	Body, Center, Gas, Burgundy	1			
24	<u>332</u>	Washer, 1/4 Type A Narrow Flat	10			
25	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	10			
26	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	10			

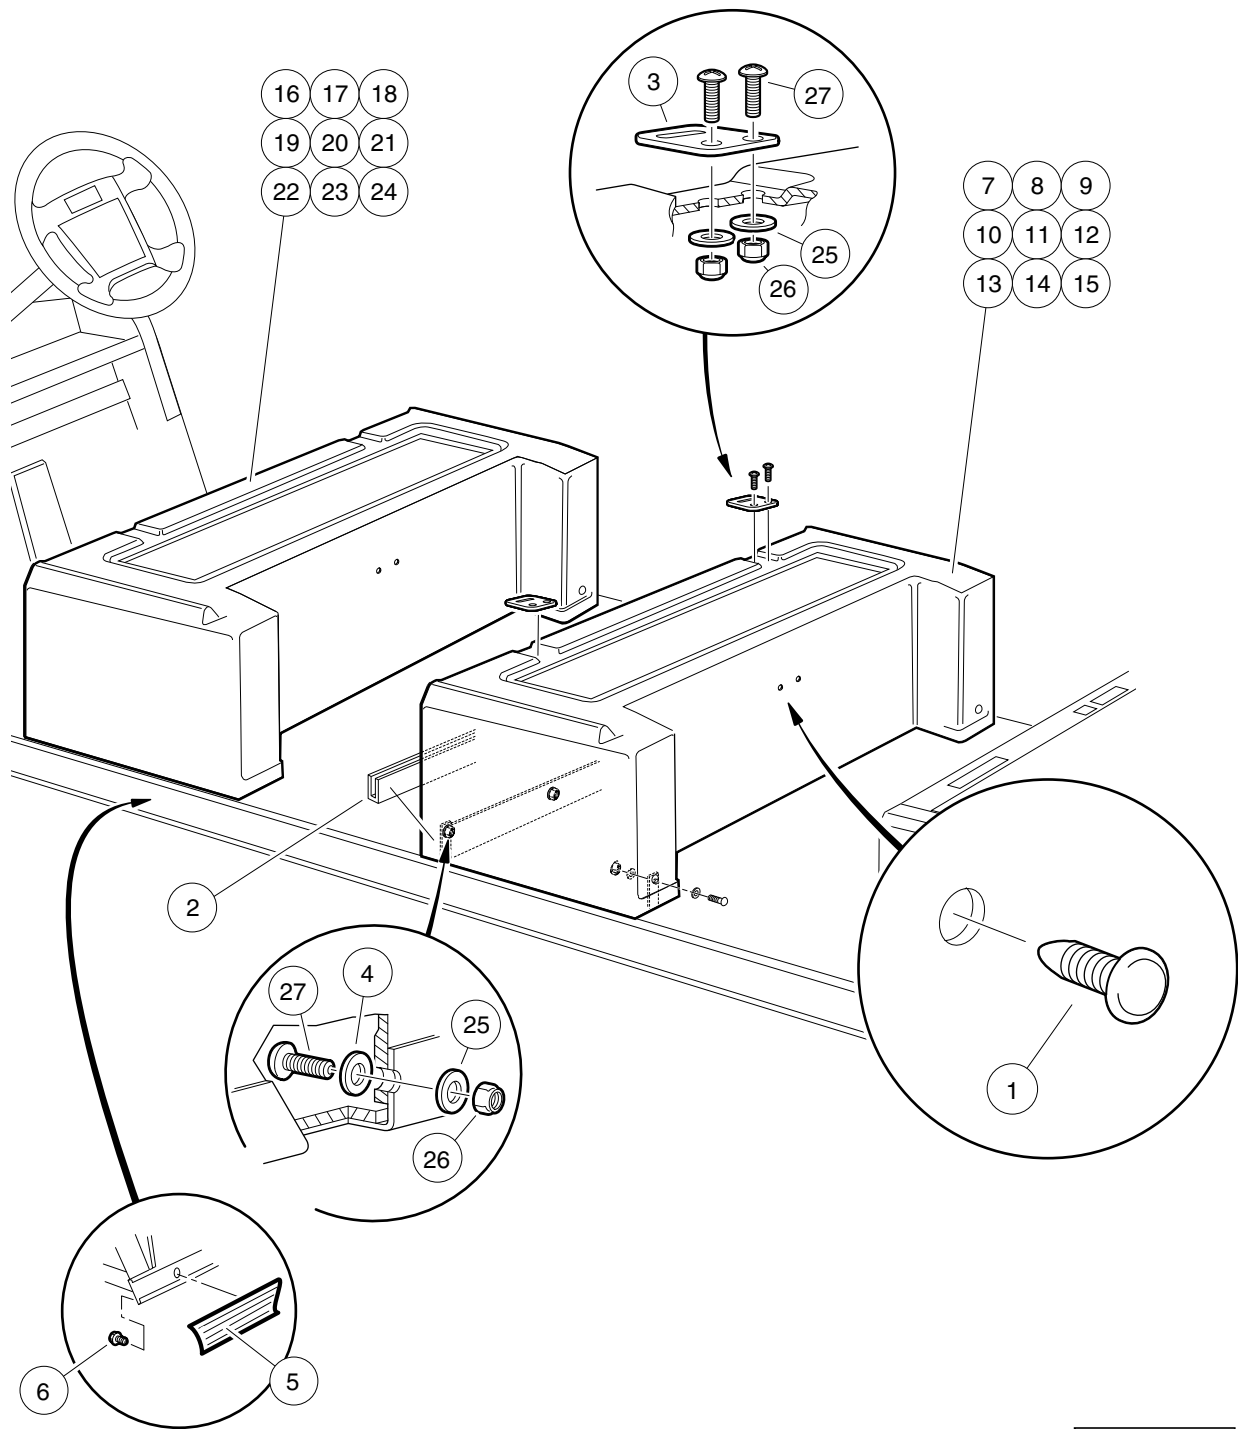

000390-004

CENTER BODIES – VILLAGER 8 IQ PLUS VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	<u>1010434</u>	Barrel - Plastic	2			
2	<u>1010993</u>	Body Kick Plate	2			
3	<u>1012412</u>	Body, Hinge Plate	2			
4	<u>1012581</u>	Washer, 0.609-inch OD, Nylon Cup	4			
5	<u>101791901</u>	Bumper Guard Vinyl Trim	2			
6	<u>102310701</u>	Screw, #8-18 x 0.375, Hex-Head Washer	8			
7	<u>102945501</u>	Body, Beige, Center	1			
8	<u>102945502</u>	Body, White, Center	1			
9	<u>102945504</u>	Body, Gray, Center	1			
10	<u>102945506</u>	Body, Red, Center	1			
11	<u>102945508</u>	Body, Pacific Blue, Center	1			
12	<u>102945509</u>	Body, Dark Green, Center	1			
13	<u>102945510</u>	Body, Black, Center	1			
14	<u>102945511</u>	Body, Classic Blue, Center	1			
15	<u>102945512</u>	Body, Burgundy, Center	1			
16	<u>103274001</u>	Body, Center, Elec, Beige	1			
17	<u>103274002</u>	Body, Center, Elec, Wht	1			
18	<u>103274004</u>	Body, Center, Elec, Gray	1			
19	<u>103274006</u>	Body, Center, Elec, Red	1			
20	<u>103274008</u>	Body, Center, Elec, Pacific Bl	1			
21	<u>103274009</u>	Body, Center, Elec, Dk Green	1			
22	<u>103274010</u>	Body, Center, Elec, Black	1			
23	<u>103274011</u>	Body, Center, Elec, C/blu	1			
24	<u>103274012</u>	Body, Center, Elec, Burgundy	1			
25	<u>332</u>	Washer, 1/4 Type A Narrow Flat	8			
26	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	8			
27	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	8			

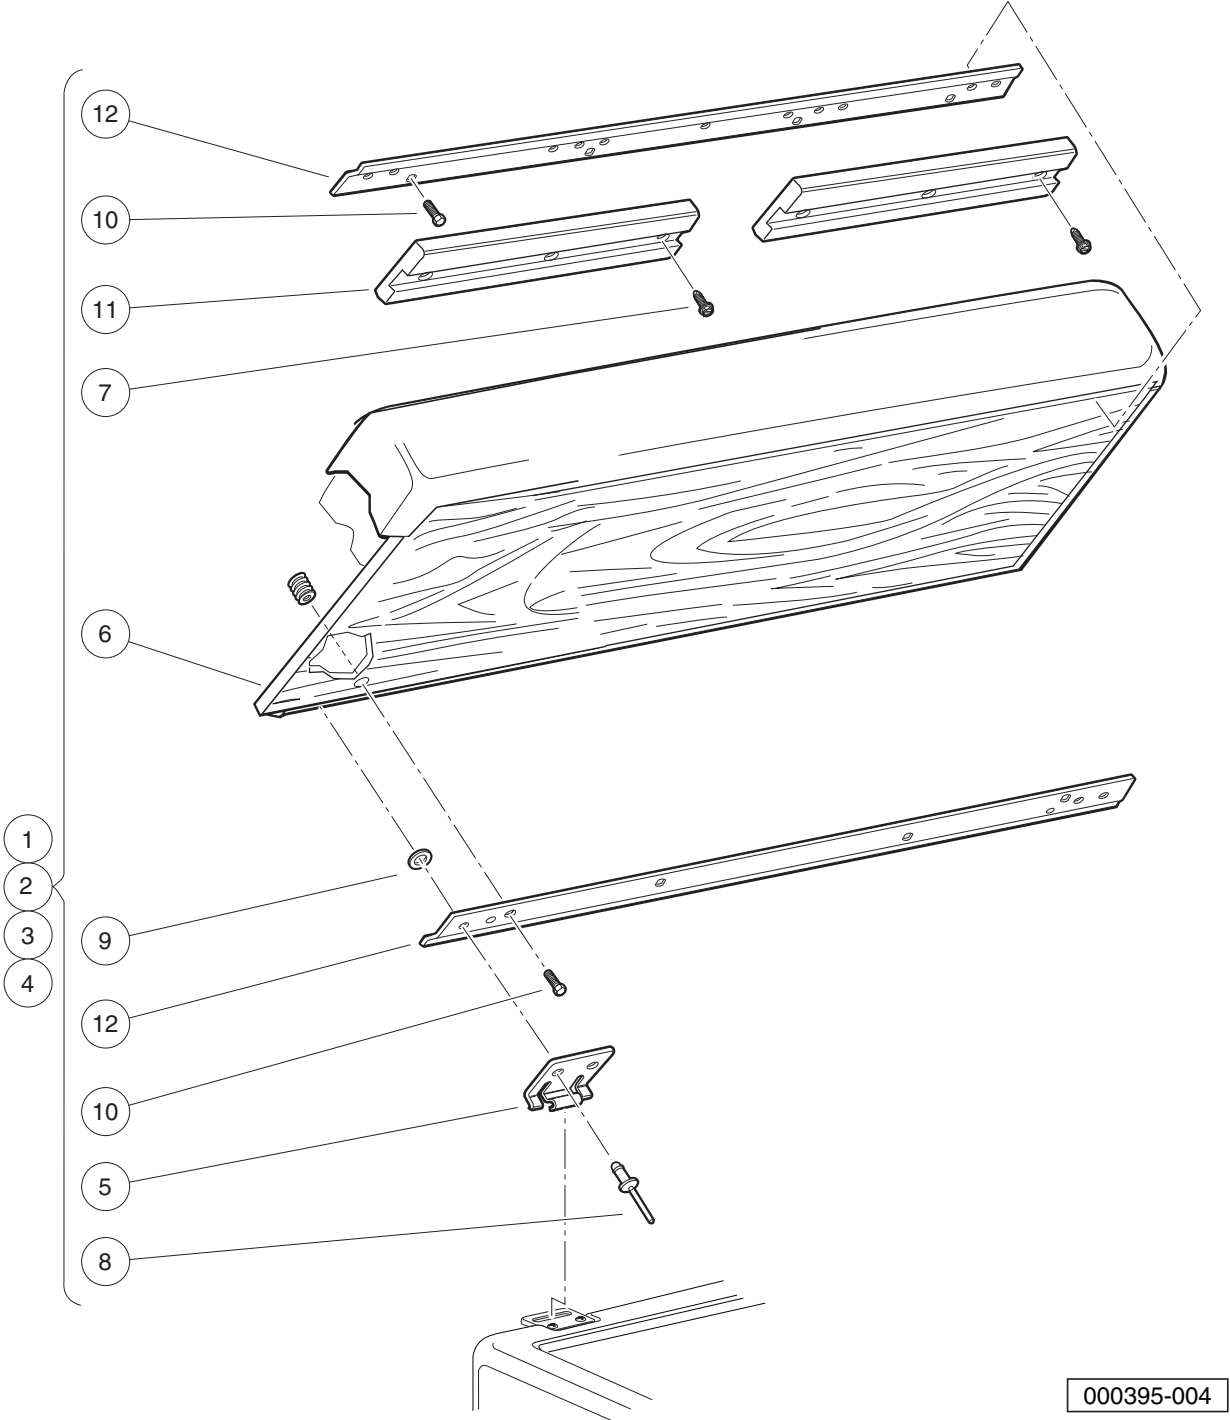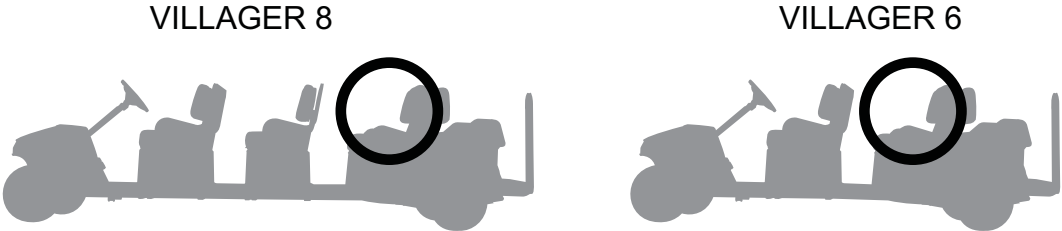

000395-004

REAR, FORWARD-FACING SEAT BOTTOM

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>101728202</u>	Seat Bottom Assembly, Rear, White	1	
2	<u>101728204</u>	Seat Bottom Assembly, Rear, Beige	1	
3	<u>101728211</u>	Seat Bottom Assembly, Rear, Black	1	
4	<u>101728214</u>	Seat Bottom Assembly, Rear, Gray (includes items 5 through 12)	1	
5	<u>1011652</u>	Hinge Plate	2	
6	N/A	Plywood Assy	1	
7	<u>1017384</u>	Screw, #12 X .50 Hex, Washer-Head	6	
8	<u>101880901</u>	Rivet, 3/16, Stainless-Steel, Pop	4	
9	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	4	
10	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
11	105064802	Seat, Bumper, Hole, 13.78in	2	
12	<u>105216301</u>	Bracket, Seat Support	2	

1


G

E

VILLAGER 8




VILLAGER 6

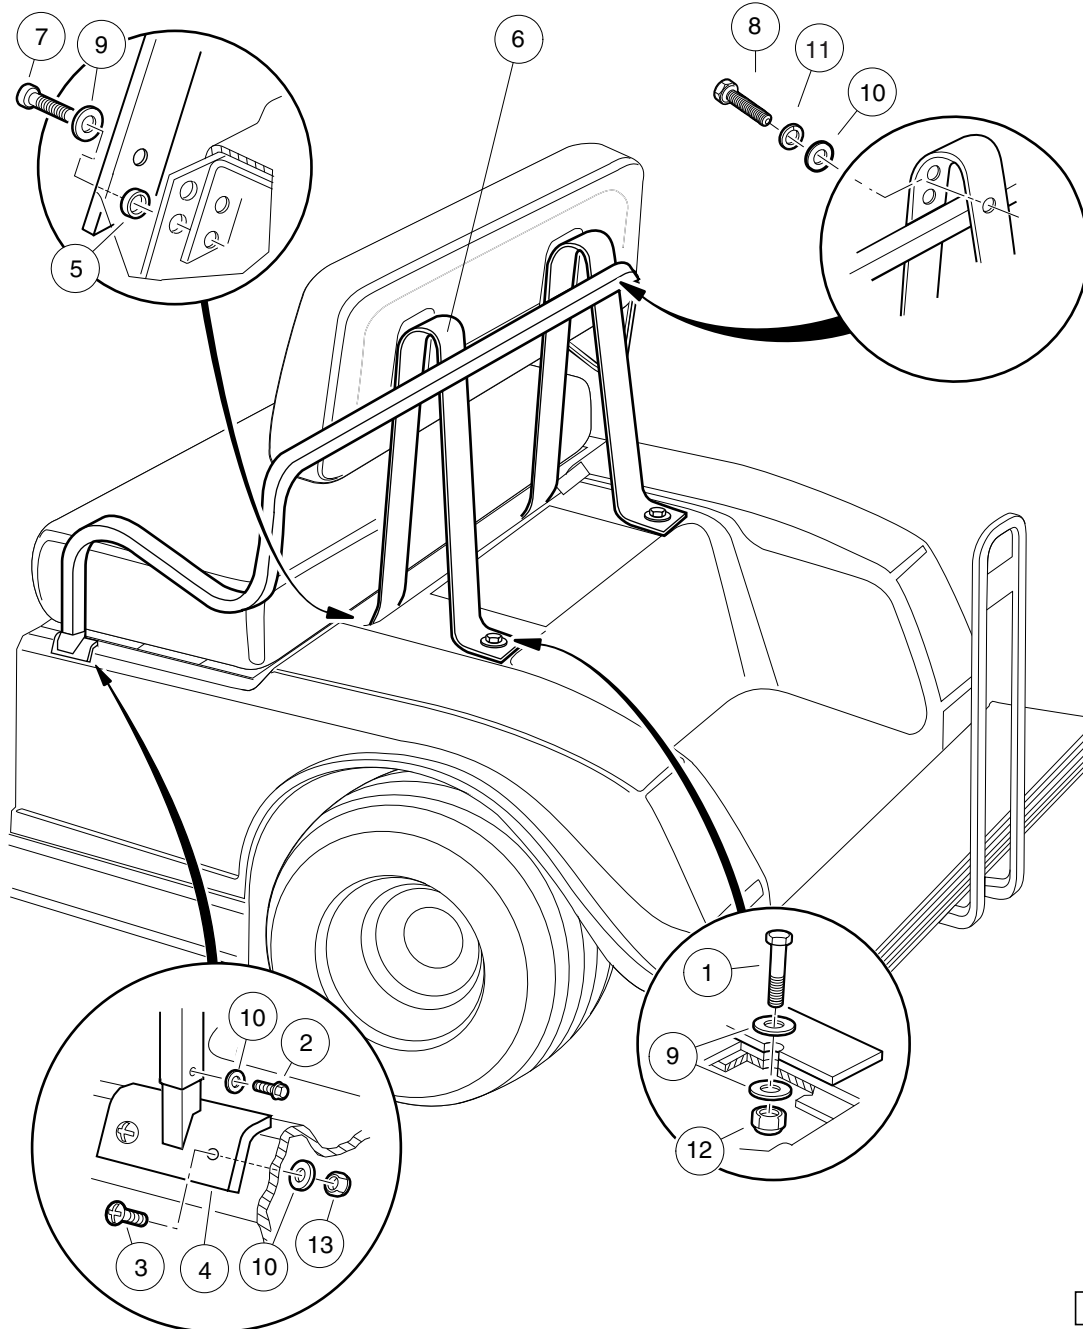

000397-002

ARMRESTS, REAR, FORWARD-FACING – VILLAGER 6 & 8 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	2	
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	10	
3	<u>1015902</u>	Screw, 1/4-20 X 1.25 Truss-Head	4	
4	<u>1017310</u>	Armrest Mounting Weldment	2	
5	<u>1017774</u>	Body Spacer	4	
6	<u>101799201</u>	Armrest Weldment Rear	1	
7	<u>101910401</u>	Screw, 5/16-18 X 1.25 Thrd Frm	4	
8	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8	
9	<u>1241</u>	Washer, 5/16 Type A Flat	6	
10	<u>332</u>	Washer, 1/4 Type A Narrow Flat	14	
11	<u>451</u>	Lockwasher, 1/4 Split	8	
12	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	
13	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4	

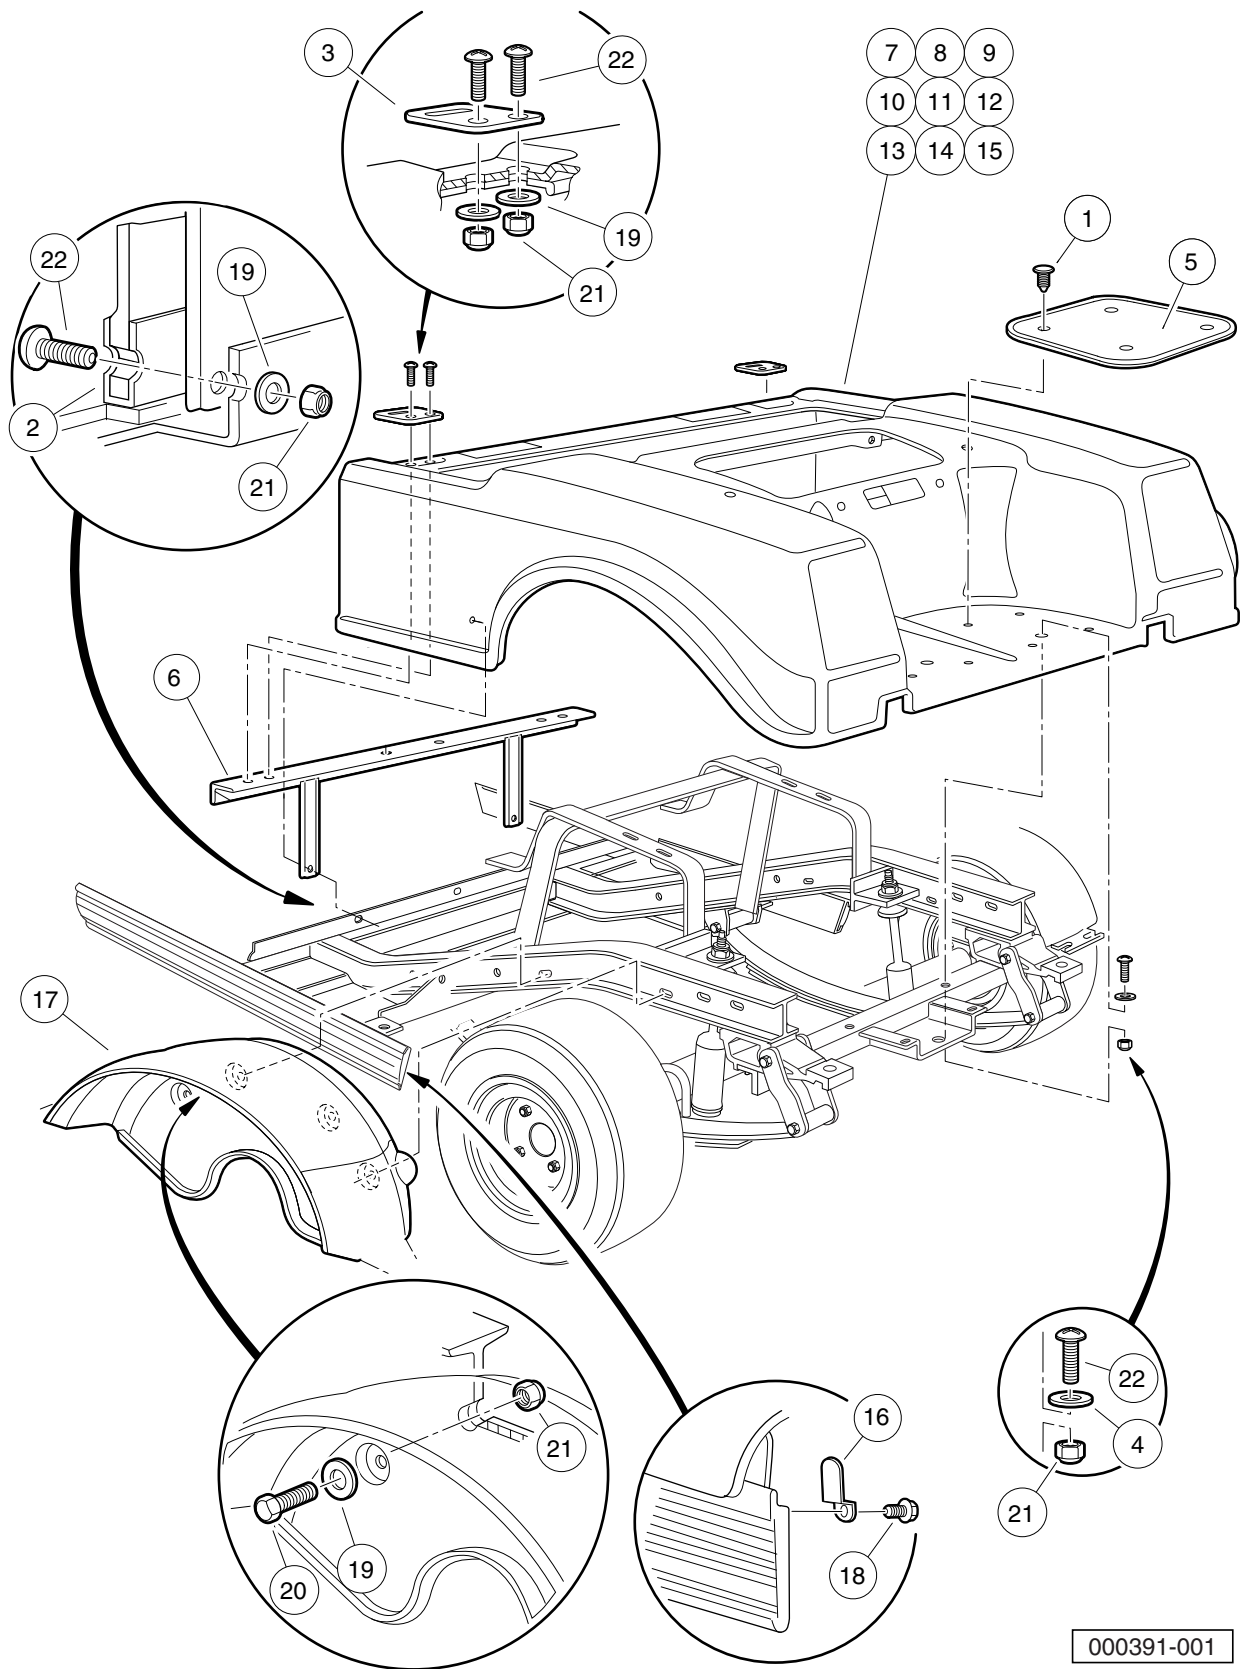

000391-001


REAR BODY AND FENDER – VILLAGER 6 & 8

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010434</u>	Barrel - Plastic	8	
2	<u>1010993</u>	Body Kick Plate	1	
3	<u>1012412</u>	Body, Hinge Plate	2	
4	<u>1014306</u>	Washer, 1/4" Type B Flat	2	
5	<u>1014392</u>	Bag Rest Mat	2	
6	<u>1017141</u>	Body Support Weldment	1	
7	<u>101728701</u>	Body, Beige, TPO, Rear	1	
8	<u>101728702</u>	Body, White, TPO, Rear	1	
9	<u>101728704</u>	Body, Gray, TPO, Rear	1	
10	<u>101728706</u>	Body, Red, TPO, Rear	1	
11	<u>101728708</u>	Body, Royal Blue, TPO, Rear	1	
12	<u>101728709</u>	Body, Dark Green, TPO, Rear	1	
13	<u>101728710</u>	Body, Black, TPO, Rear	1	
14	<u>101728711</u>	Body, Classic Blue, TPO, Rear	1	
15	<u>101728712</u>	Body, Burgundy, TPO, Rear	1	
16	<u>1017748</u>	Body Keeper Clip	2	
17	<u>1017936</u>	Fender, Inner	2	
18	<u>102310701</u>	Screw, #8-18 x 0.375, Hex-Head Washer	2	
19	<u>332</u>	Washer, 1/4 Type A Narrow Flat	10	
20	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4	
21	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	12	
22	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	8	


1

G

E

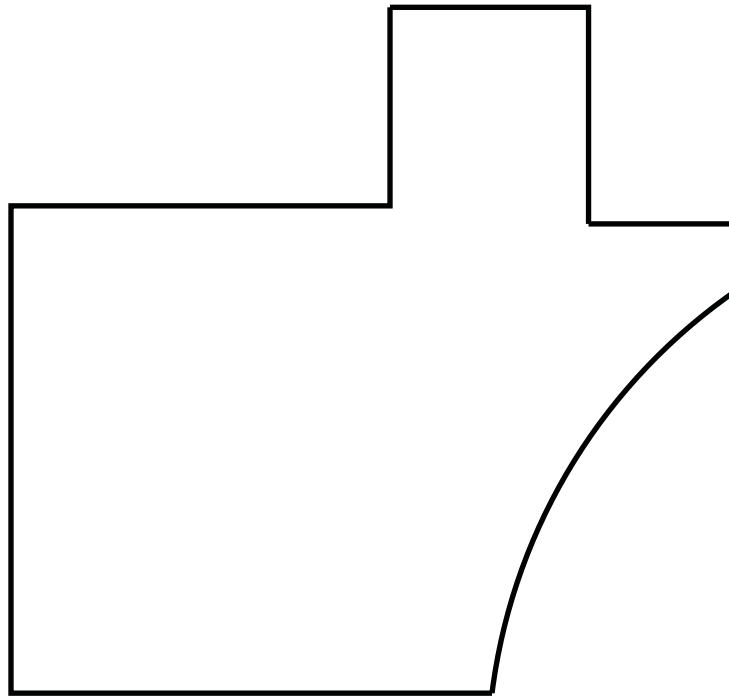

1

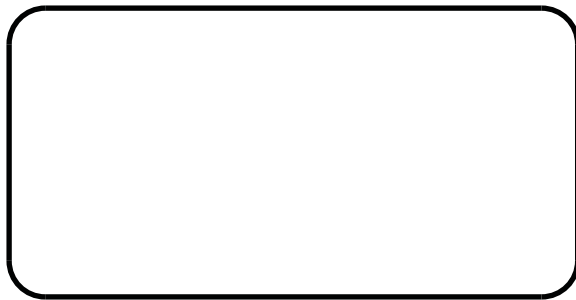

2



3

001603-001

HEAT INSULATION, FOAM – EFI GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
1	105280201	1 2 3 4 Foam, Poly, Alum, 1", Style A	1
2	105280202	Foam, Poly, Alum, 1", Style B	1
3	105280203	Foam, Poly, Alum, 1", Style C	1
Note: Foil lining over foam.			

1



G

E

1

G

E

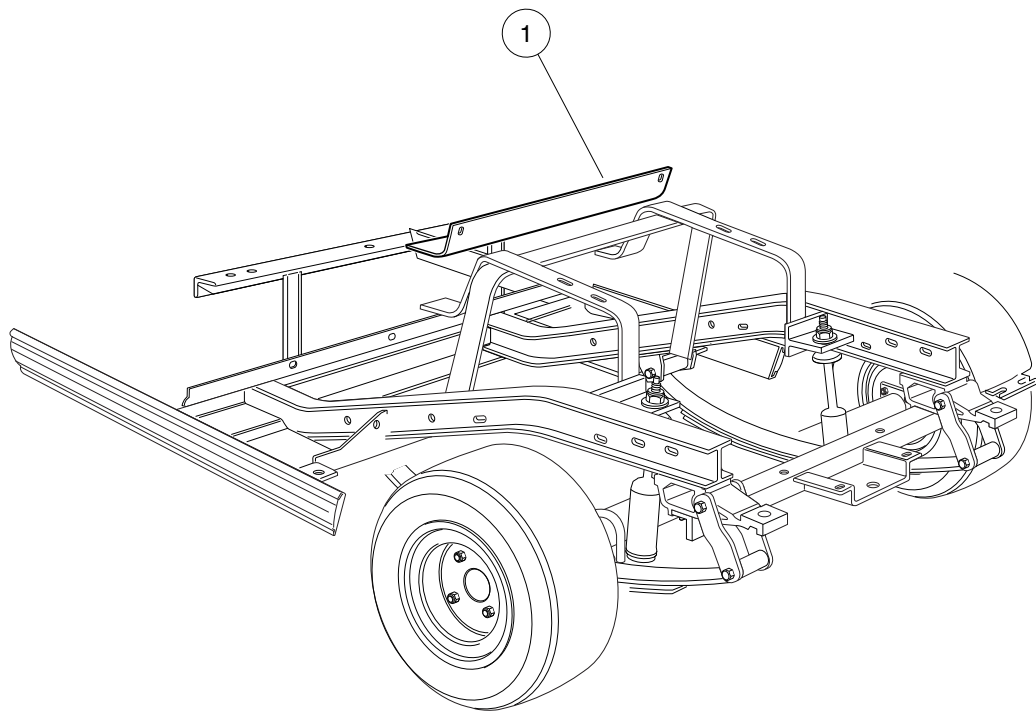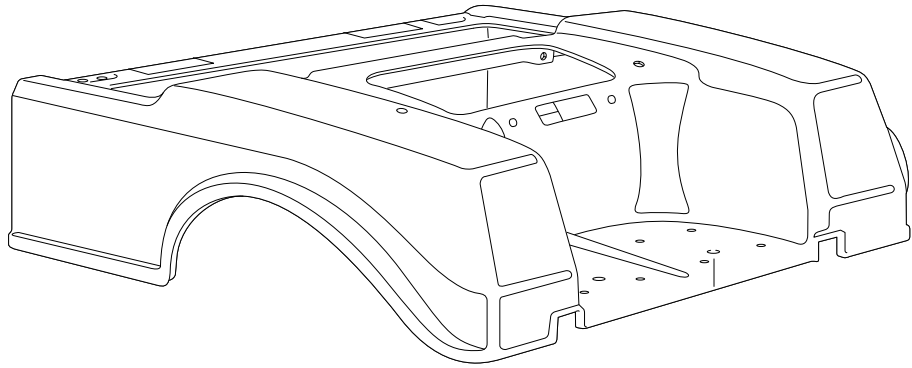

000392-001


HEAT SHIELD, TRANSPORTER, VILL 6 & 8, XRT800/850 REAR BODY – GAS

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	<u>101806901</u>	1 2 3 4 Shield, Heat	1	

1

G

E

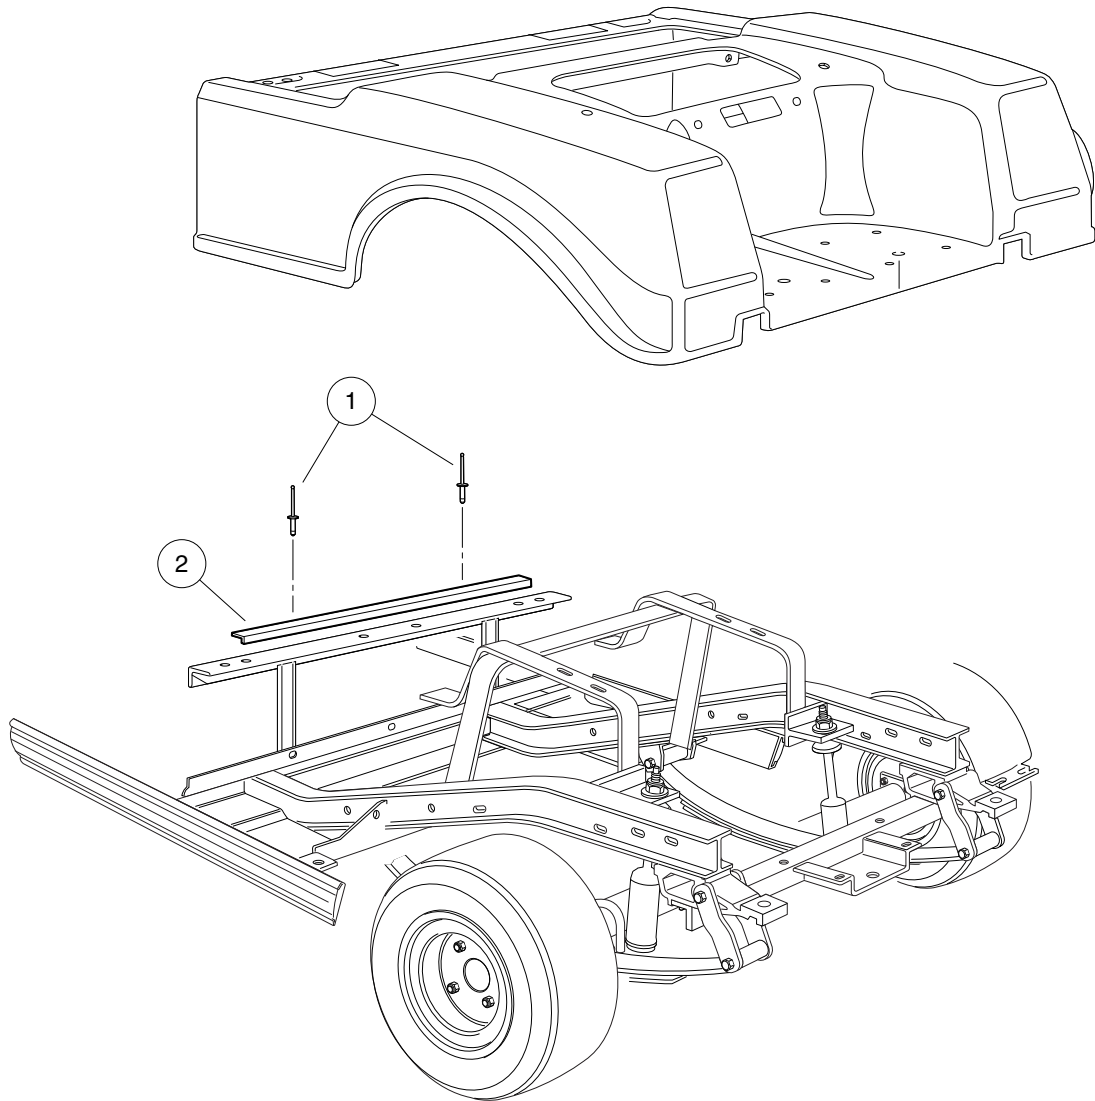

000393-001


BATTERY INSULATOR, TRANSPORTER, VILL 6 & 8, XRT850 REAR BODY – ELECTRIC

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	<u>1013357</u>	1 2 3 4 Rivet, 5/32 Aluminum Pop	2	
2	<u>101837001</u>	Battery Insulator	1	

1

G


E

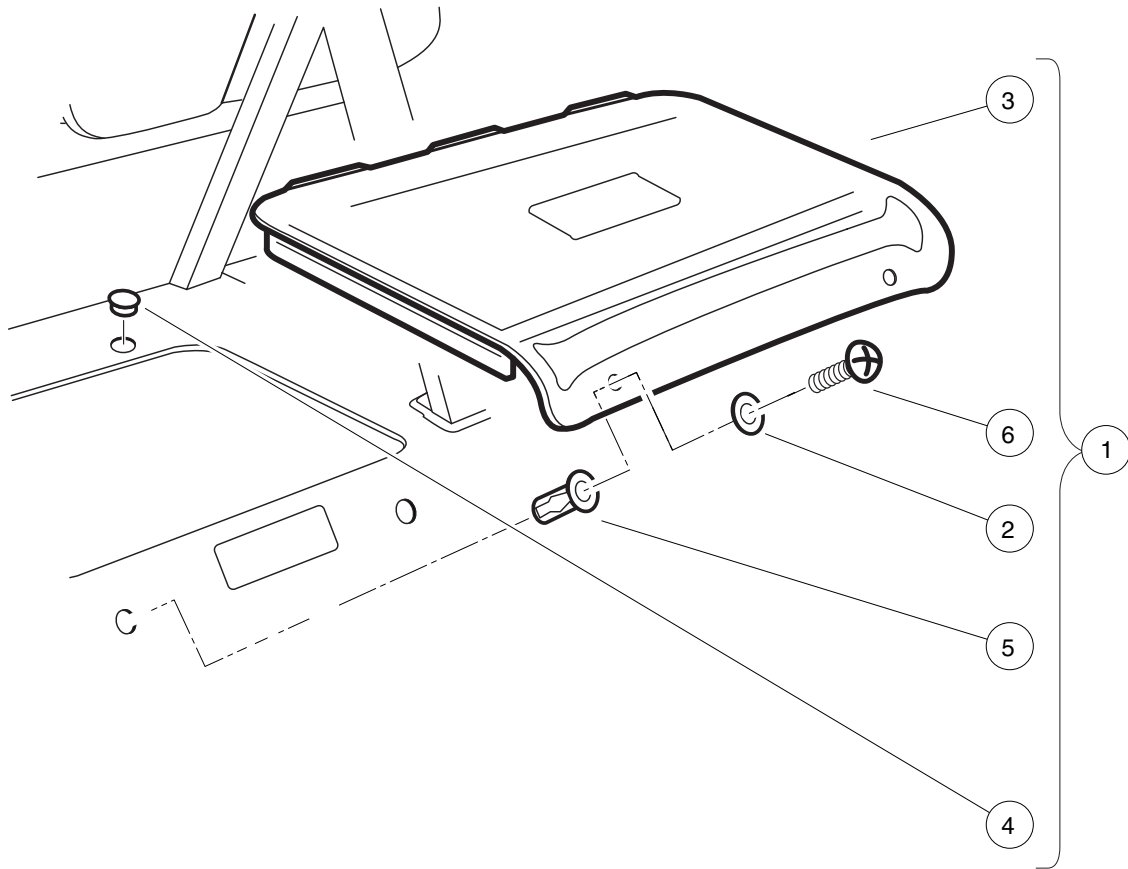

000783-002

REAR ACCESS DOOR

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1013218</u>	Kit, Access Door Black (includes items 2 through 6)	1	
2	<u>1012581</u>	Washer, 0.609-inch OD, Nylon Cup	2	
3	<u>1013032</u>	Molded Access Door Black	1	
4	<u>1013216</u>	Plug, Button	2	
5	<u>1015525</u>	Nut, 1/4-20 Blind	2	
6	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	2	

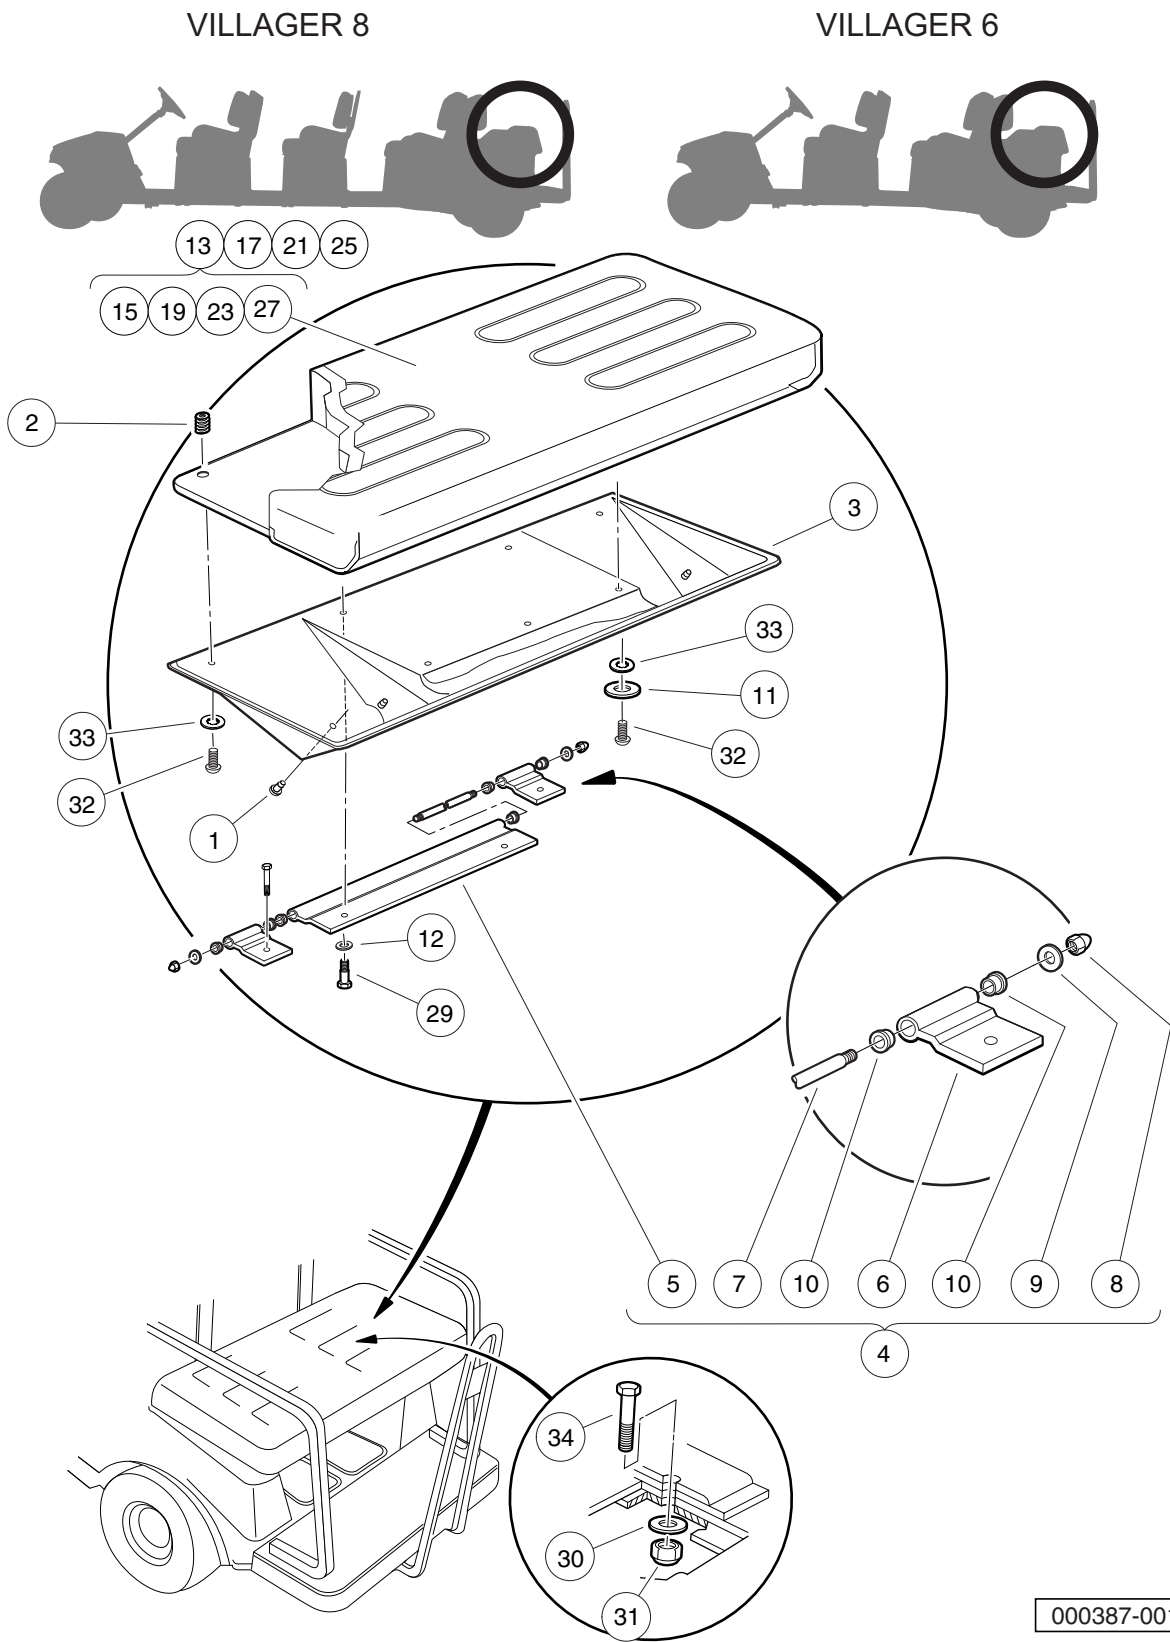


000387-001

REAR-FACING SEAT BOTTOM – VILLAGER VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010436</u>	Bumper, Rubber	4
2	<u>1010543</u>	Insert - Wood	7
3	<u>1011210</u>	Seat Support 4-Passenger	1
4	<u>1011219</u>	Hinge Assembly 4 Passenger (includes items 5 through 10)	1
5	<u>1011220</u>	Hinge Long 4 Passenger	1
6	<u>1011221</u>	Hinge Short 4 Passenger	2
7	<u>1011222</u>	Pin, Hinge, Long, 4-Pass	1
8	<u>1015091</u>	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	2
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
10	8028	Rotor Stop, FNR	6
11	<u>1011578</u>	Washer, 5/16 Type B Flat	3
12	<u>1014007</u>	Washer, 1/4, Flat	2
13	<u>101564804</u>	Seat Bottom Assembly, Buff (includes items 14 through 16)	1
14	N/A	Foam, Seat	1
15	<u>101562711</u>	Vinyl Cover, Seat Bottom, Buff	1
16	N/A	Plywood Assy	1
17	<u>101564805</u>	Seat Bottom Assembly, White (includes items 18 through 20)	1
18	N/A	Foam, Seat	1
19	<u>101562712</u>	Vinyl Cover, Seat Bottom, White	1
20	N/A	Plywood Assy	1
21	<u>101564807</u>	Seat Bottom Assembly, Gray (includes items 22 through 24)	1
22	N/A	Foam, Seat	1
23	<u>101562715</u>	Vinyl Cover, Seat Bottom, Gray	1
24	N/A	Plywood Assy	1
25	<u>101564808</u>	Seat Bottom Assembly, Black (includes items 26 through 28)	1
26	N/A	Foam, Seat	1
27	<u>101562714</u>	Vinyl Cover, Seat Bottom, Black	1
28	N/A	Plywood Assy	1
29	1016916	Screw, 1/4-20 X 1.50 Hex-Head Cap	2
30	<u>1241</u>	Washer, 5/16 Type A Flat	2
31	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
32	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	5
33	<u>8304</u>	Lockwasher, 1/4 Type A Int.tth	5
34	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	2
Note: Sub-components contained in items 17, 21, and 25 are the same as those shown for item 13, except for the vinyl seat covers.			

1
G
E

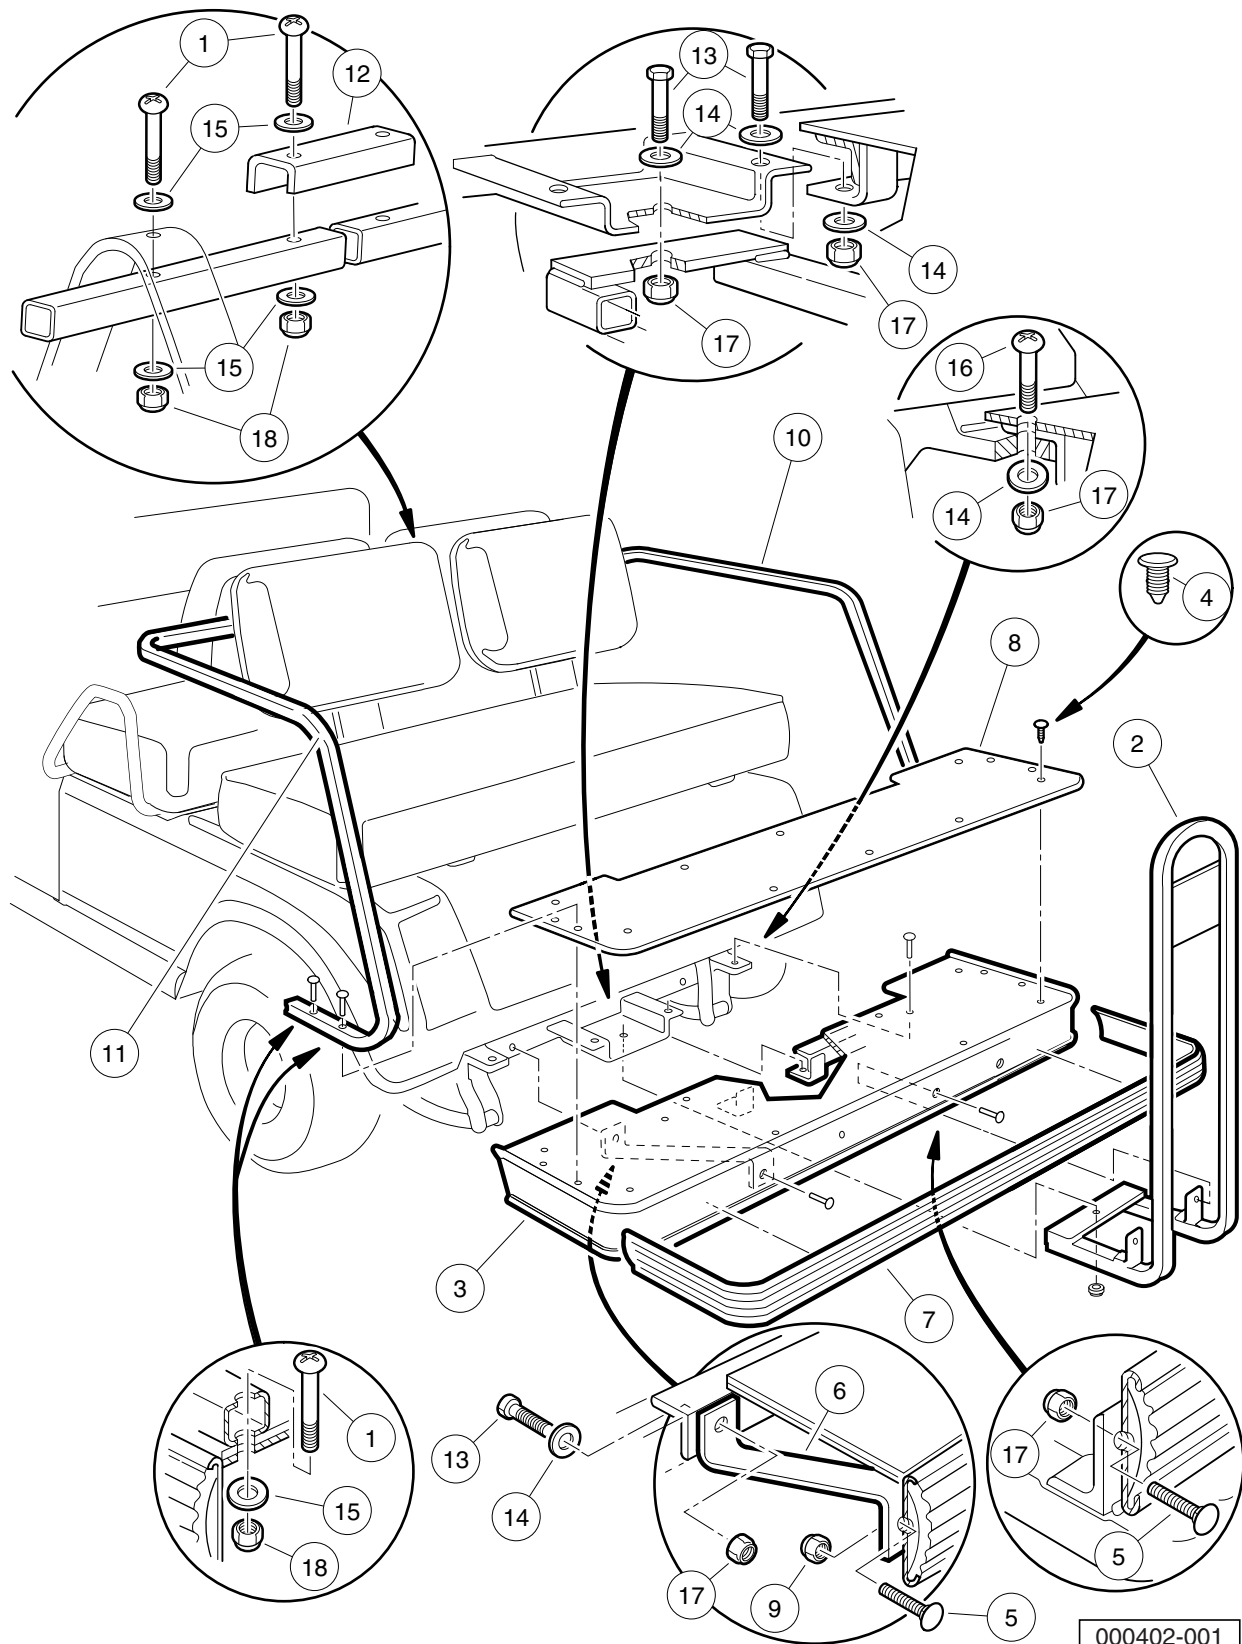1**G****E**

REAR FOOTREST, ARMRESTS AND HANDRAILS – DS VILLAGER 4, VILLAGER 6 AND 8

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1011988</u>	Screw, 1/4-20 X 2.00 Phillips Truss-Head	8	
2	<u>1016842</u>	Rear Seat Handrail Weldment	1	
3	<u>101841101</u>	Rear Foot Rest Asm (includes items 4 through 9)	1	
4	<u>1010434</u>	Barrel - Plastic	8	
5	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	4	
6	<u>1016668</u>	Connecting Bar	2	
7	<u>1016835</u>	Bumper, Side Trim	1	
8	<u>101840901</u>	Foot Rest Mat	1	
9	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	
10	<u>101841201</u>	Armrest, Seat, Rear, Right-Hand	1	
11	<u>101841202</u>	Armrest, Seat, Rear, Left-Hand	1	
12	<u>101841301</u>	Armrest Bracket	1	
13	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	5	
14	<u>1241</u>	Washer, 5/16 Type A Flat	9	
15	<u>332</u>	Washer, 1/4 Type A Narrow Flat	8	
16	<u>7410</u>	Screw, 5/16-18 X 1.25 Truss Hd	2	
17	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	9	
18	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	8	

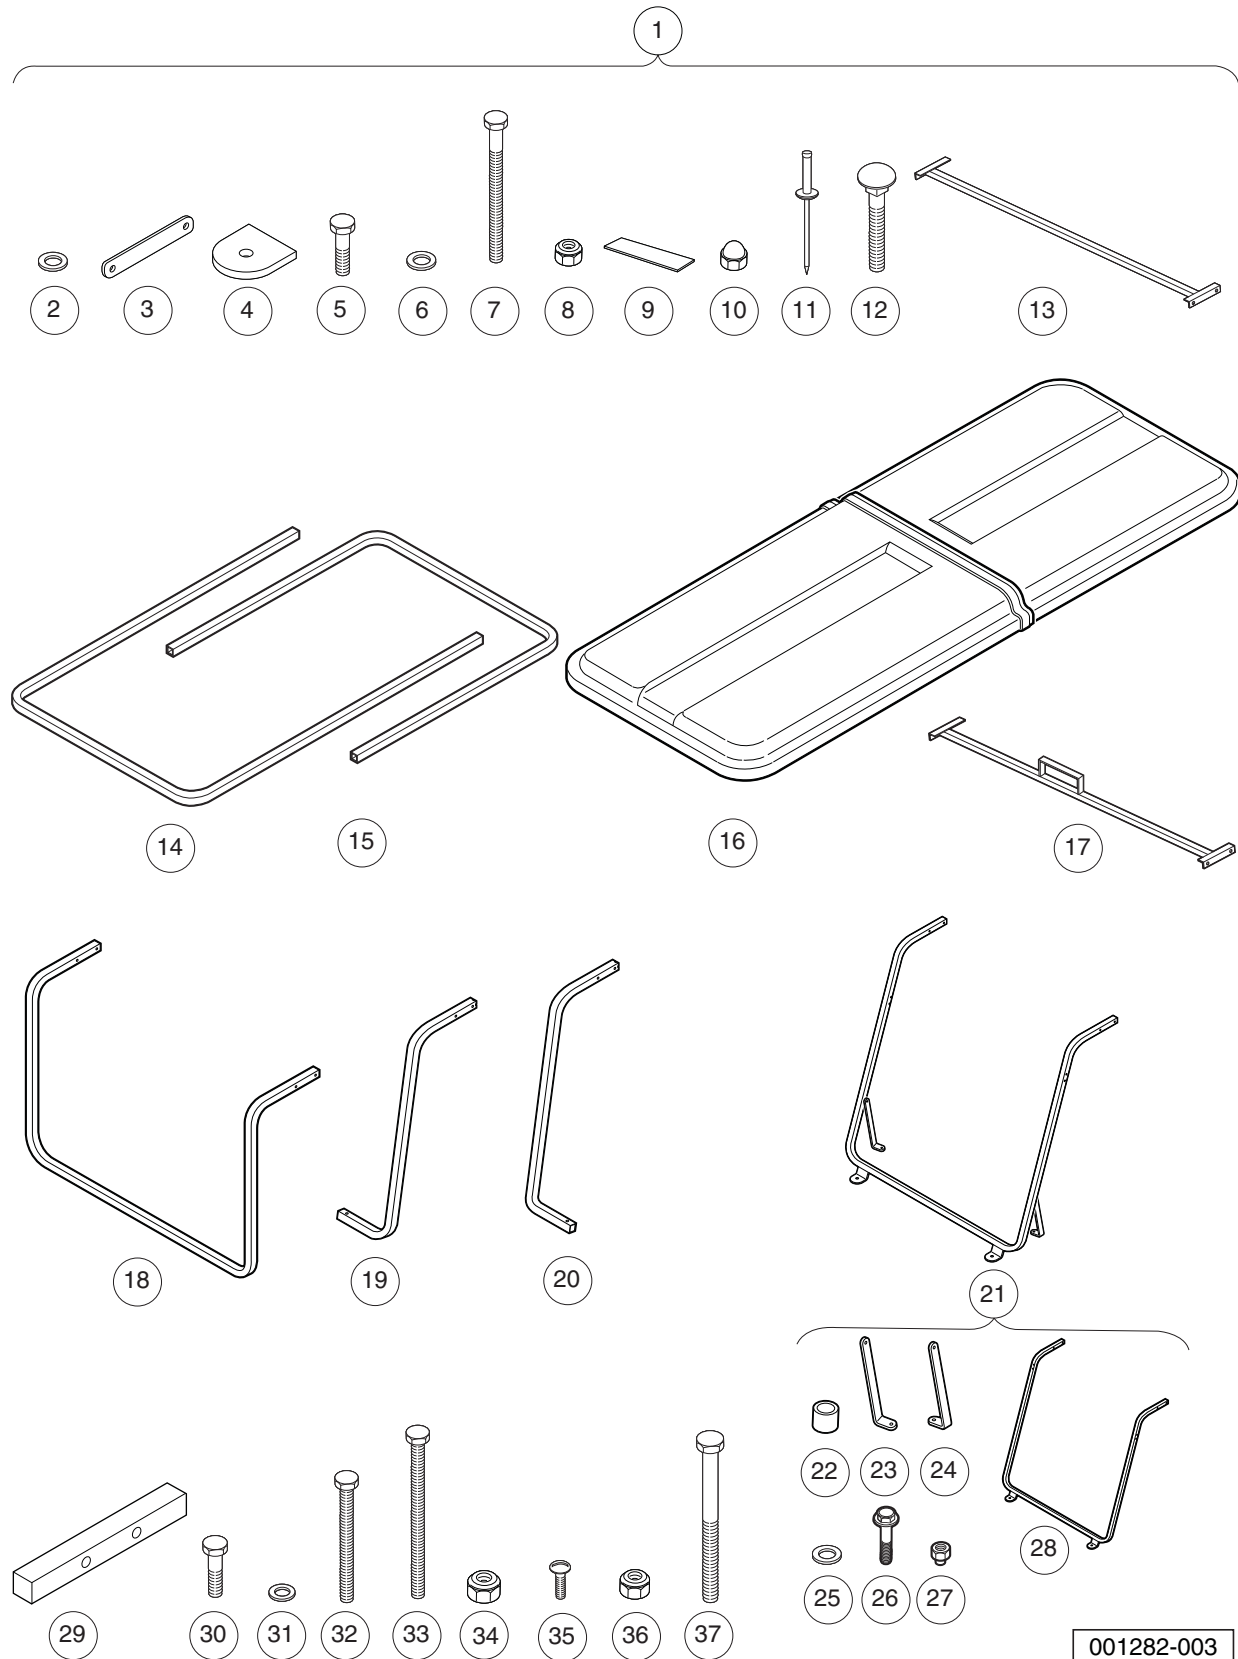1**G****E**

001282-003


CANOPY KIT, WHITE – VILL. 6 WITH REAR-FACING SEATS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101816701</u>	Canopy Top Wht Vill W/rear St (includes items 2 through 37)	1
2	<u>1011697</u>	Washer, 5/16 Flat	2
3	<u>1011852</u>	Plate, Canopy Trim	10
4	<u>1011883</u>	Pad, Windshield Frame Mounting	2
5	<u>1011937</u>	Bolt, 5/16-18 X 1.25 Hex Head	2
6	<u>1011964</u>	Washer, 1/4 Flat	14
7	<u>1012159</u>	Bolt, 1/4-20 X 2.75 Hex-Head	8
8	<u>1013061</u>	Locknut, #10-32 Nylon Insert	8
9	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4"	20
10	<u>1015091</u>	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	4
11	<u>1015392</u>	Rivet, 3/16 Pop	8
12	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	2
13	<u>1016781</u>	Hanger Weldment	1
14	<u>1016793</u>	Top Front Support	1
15	<u>1016794</u>	Top Rear Support	1
16	<u>101679902</u>	Canopy Front & Rear White	1
17	<u>1017185</u>	Hanger Weldment Front	1
18	<u>101815301</u>	Brace, Rear Canopy	1
19	<u>101815401</u>	Canopy Side Brace Lh	1
20	<u>101815402</u>	Canopy Side Brace Rh	1
21	<u>103789601</u>	W/s Fr / Knee Br, Aluminum (includes items 22 through 28)	1
22	<u>1010237</u>	Bushing	2
23	<u>1011862</u>	Brace, Right-Hand Canopy Mount Knee	1
24	<u>1011865</u>	Brace, Left-Hand Canopy Mount Knee	1
25	<u>1011964</u>	Washer, 1/4 Flat	2
26	<u>102076701</u>	Screw, 1/4-20 X 1.75 Hex Sems	2
27	<u>102242401</u>	Nut - Nylon Insert W/cap	2
28	<u>103787401</u>	Asm, Windshield Frame, Alum	1
29	<u>103954301</u>	Splice Bar 10.5"	2
30	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	2
31	<u>183</u>	Washer, #10, Type A, Flat	16
32	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	4
33	<u>343</u>	Screw, 1/4-20 X 3.00 Hx Hd Cap	4
34	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
35	<u>8104</u>	Screw, #10-32 X .75 Rd Hd Mach	8
36	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	12
37	<u>8915</u>	Screw, 5/16-18 X 3.0 Hx Hd Cap	2

1

G

E

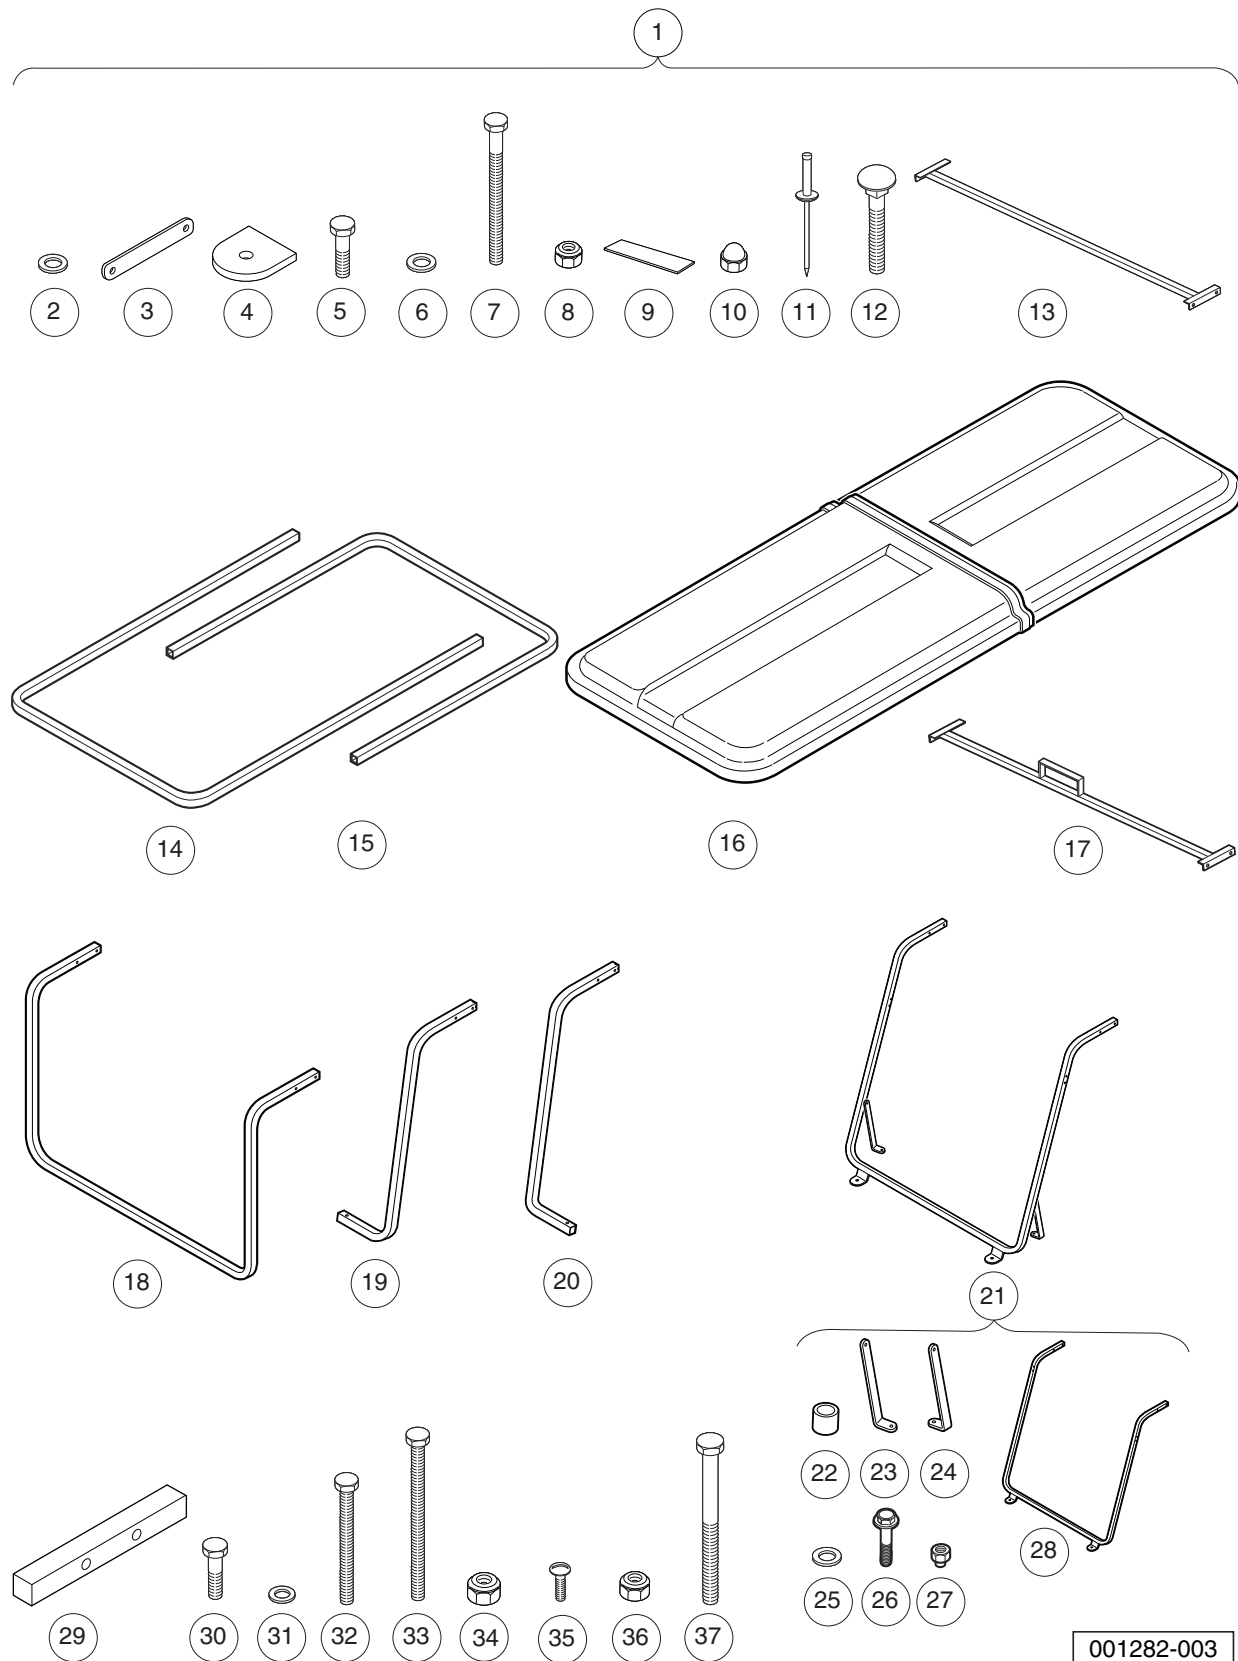
1**G****E**

001282-003

CANOPY KIT, BEIGE – VILL. 6 WITH REAR-FACING SEATS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101816702</u>	Canopy Beige Vill W/rear St (includes items 2 through 37)	1
2	<u>1011697</u>	Washer, 5/16 Flat	2
3	<u>1011852</u>	Plate, Canopy Trim	10
4	<u>1011883</u>	Pad, Windshield Frame Mounting	2
5	<u>1011937</u>	Bolt, 5/16-18 X 1.25 Hex Head	2
6	<u>1011964</u>	Washer, 1/4 Flat	14
7	<u>1012159</u>	Bolt, 1/4-20 X 2.75 Hex-Head	8
8	<u>1013061</u>	Locknut, #10-32 Nylon Insert	8
9	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4"	20
10	<u>1015091</u>	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	4
11	<u>1015392</u>	Rivet, 3/16 Pop	8
12	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	2
13	<u>1016781</u>	Hanger Weldment	1
14	<u>1016793</u>	Top Front Support	1
15	<u>1016794</u>	Top Rear Support	1
16	<u>101679901</u>	Canopy Front & Rear Beige	1
17	<u>1017185</u>	Hanger Weldment Front	1
18	<u>101815301</u>	Brace, Rear Canopy	1
19	<u>101815401</u>	Canopy Side Brace Lh	1
20	<u>101815402</u>	Canopy Side Brace Rh	1
21	<u>103789601</u>	W/s Fr / Knee Br, Aluminum (includes items 22 through 28)	1
22	<u>1010237</u>	Bushing	2
23	<u>1011862</u>	Brace, Right-Hand Canopy Mount Knee	1
24	<u>1011865</u>	Brace, Left-Hand Canopy Mount Knee	1
25	<u>1011964</u>	Washer, 1/4 Flat	2
26	<u>102076701</u>	Screw, 1/4-20 X 1.75 Hex Sems	2
27	<u>102242401</u>	Nut - Nylon Insert W/cap	2
28	<u>103787401</u>	Asm, Windshield Frame, Alum	1
29	<u>103954301</u>	Splice Bar 10.5"	2
30	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	2
31	<u>183</u>	Washer, #10, Type A, Flat	16
32	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	4
33	<u>343</u>	Screw, 1/4-20 X 3.00 Hx Hd Cap	4
34	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
35	<u>8104</u>	Screw, #10-32 X .75 Rd Hd Mach	8
36	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	12
37	<u>8915</u>	Screw, 5/16-18 X 3.0 Hx Hd Cap	2

1
G
E

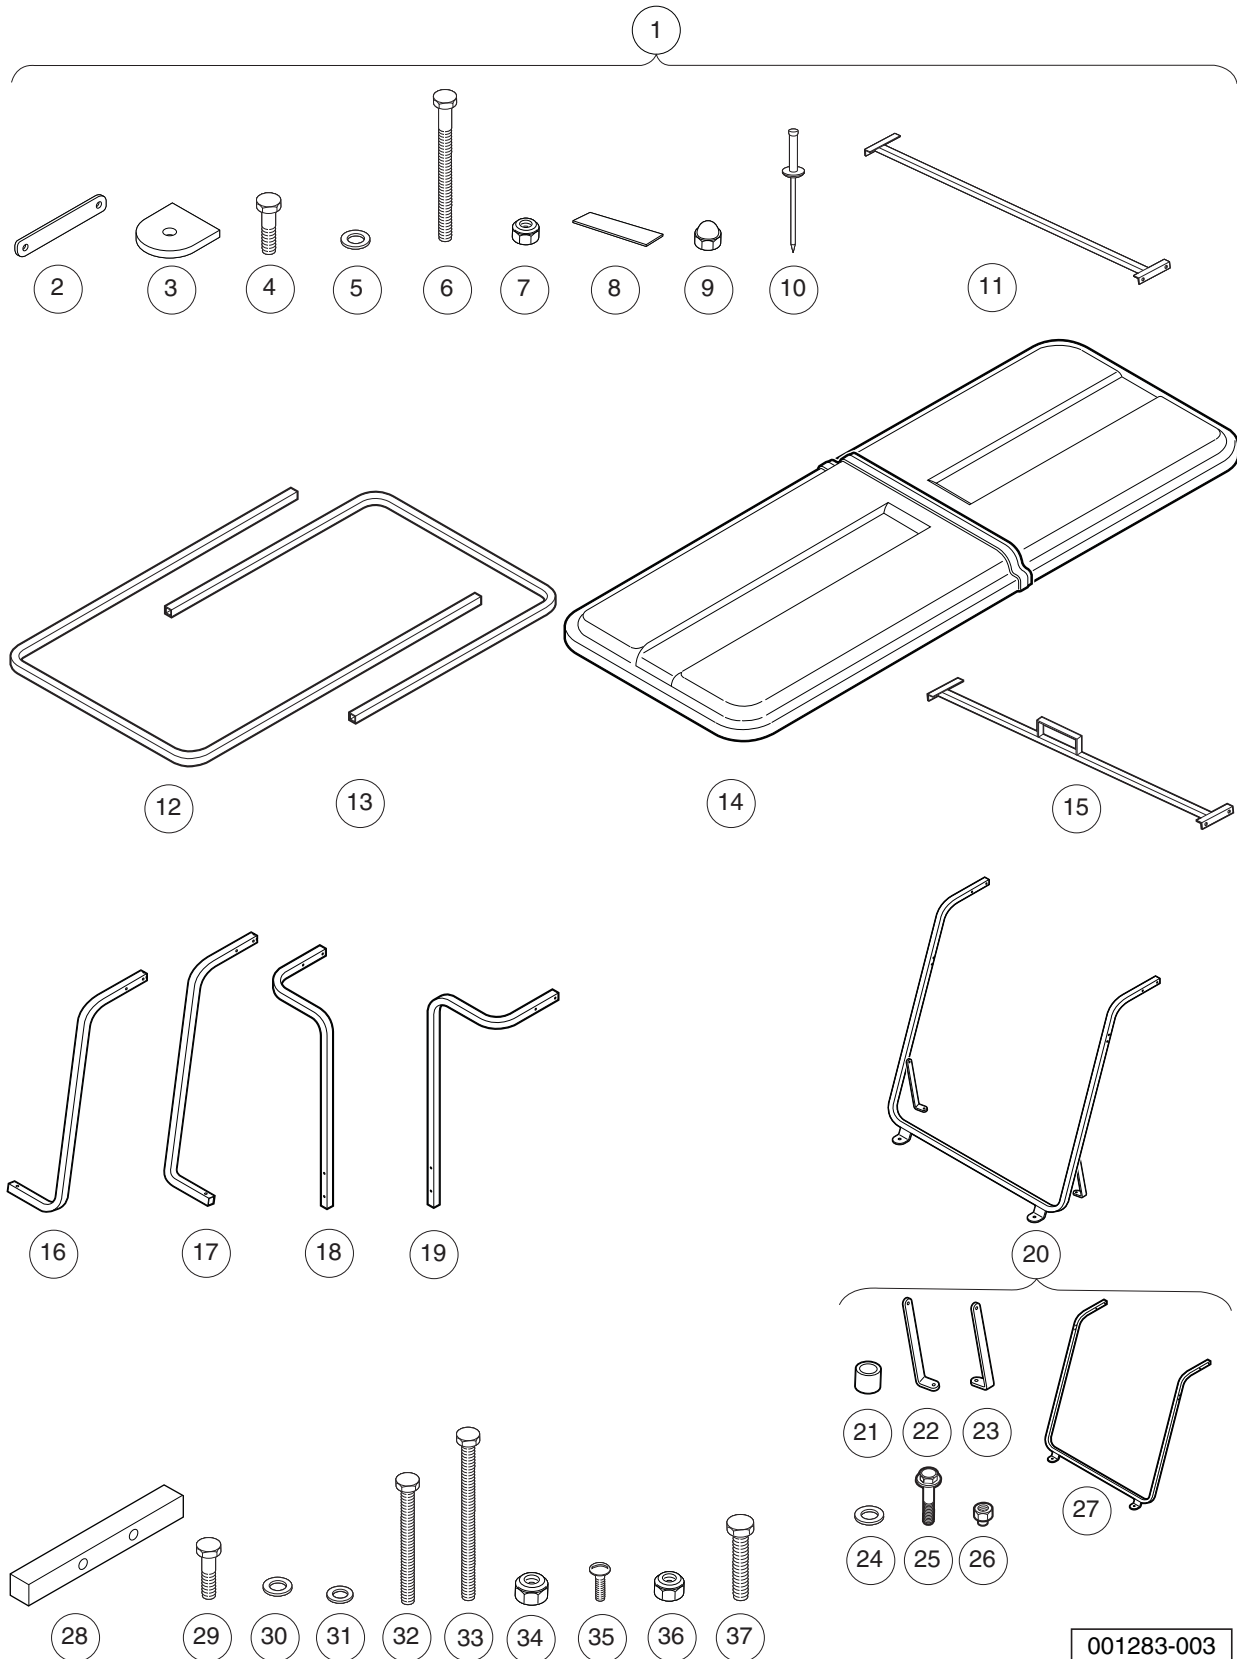1**G****E**

001283-003

CANOPY KIT, WHITE – VILL. 6 WITH FLAT BED

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101838001</u>	Canopy Top Wht Vill W/cargo Bd (includes items 2 through 37)	1
2	<u>1011852</u>	Plate, Canopy Trim	10
3	<u>1011883</u>	Pad, Windshield Frame Mounting	2
4	<u>1011937</u>	Bolt, 5/16-18 X 1.25 Hex Head	2
5	<u>1011964</u>	Washer, 1/4 Flat	14
6	<u>1012159</u>	Bolt, 1/4-20 X 2.75 Hex-Head	8
7	<u>1013061</u>	Locknut, #10-32 Nylon Insert	8
8	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4"	20
9	<u>1015091</u>	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	4
10	<u>1015392</u>	Rivet, 3/16 Pop	8
11	<u>1016781</u>	Hanger Weldment	1
12	<u>1016793</u>	Top Front Support	1
13	<u>1016794</u>	Top Rear Support	1
14	<u>101679902</u>	Canopy Front & Rear White	1
15	<u>1017185</u>	Hanger Weldment Front	1
16	<u>101815401</u>	Canopy Side Brace Lh	1
17	<u>101815402</u>	Canopy Side Brace Rh	1
18	<u>101837801</u>	Rear Canopy Brace Rh	1
19	<u>101837802</u>	Rear Canopy Brace Lh	1
20	<u>103789601</u>	W/s Fr / Knee Br, Aluminum (includes items 21 through 27)	1
21	<u>1010237</u>	Bushing	2
22	<u>1011862</u>	Brace, Right-Hand Canopy Mount Knee	1
23	<u>1011865</u>	Brace, Left-Hand Canopy Mount Knee	1
24	<u>1011964</u>	Washer, 1/4 Flat	2
25	<u>102076701</u>	Screw, 1/4-20 X 1.75 Hex Sems	2
26	<u>102242401</u>	Nut - Nylon Insert W/cap	2
27	<u>103787401</u>	Asm, Windshield Frame, Alum	1
28	<u>103954301</u>	Splice Bar 10.5"	2
29	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	2
30	<u>1241</u>	Washer, 5/16 Type A Flat	4
31	<u>183</u>	Washer, #10, Type A, Flat	16
32	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	4
33	<u>343</u>	Screw, 1/4-20 X 3.00 Hx Hd Cap	4
34	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4
35	<u>8104</u>	Screw, #10-32 X .75 Rd Hd Mach	8
36	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	12
37	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	4

1


G

E

1

G

E

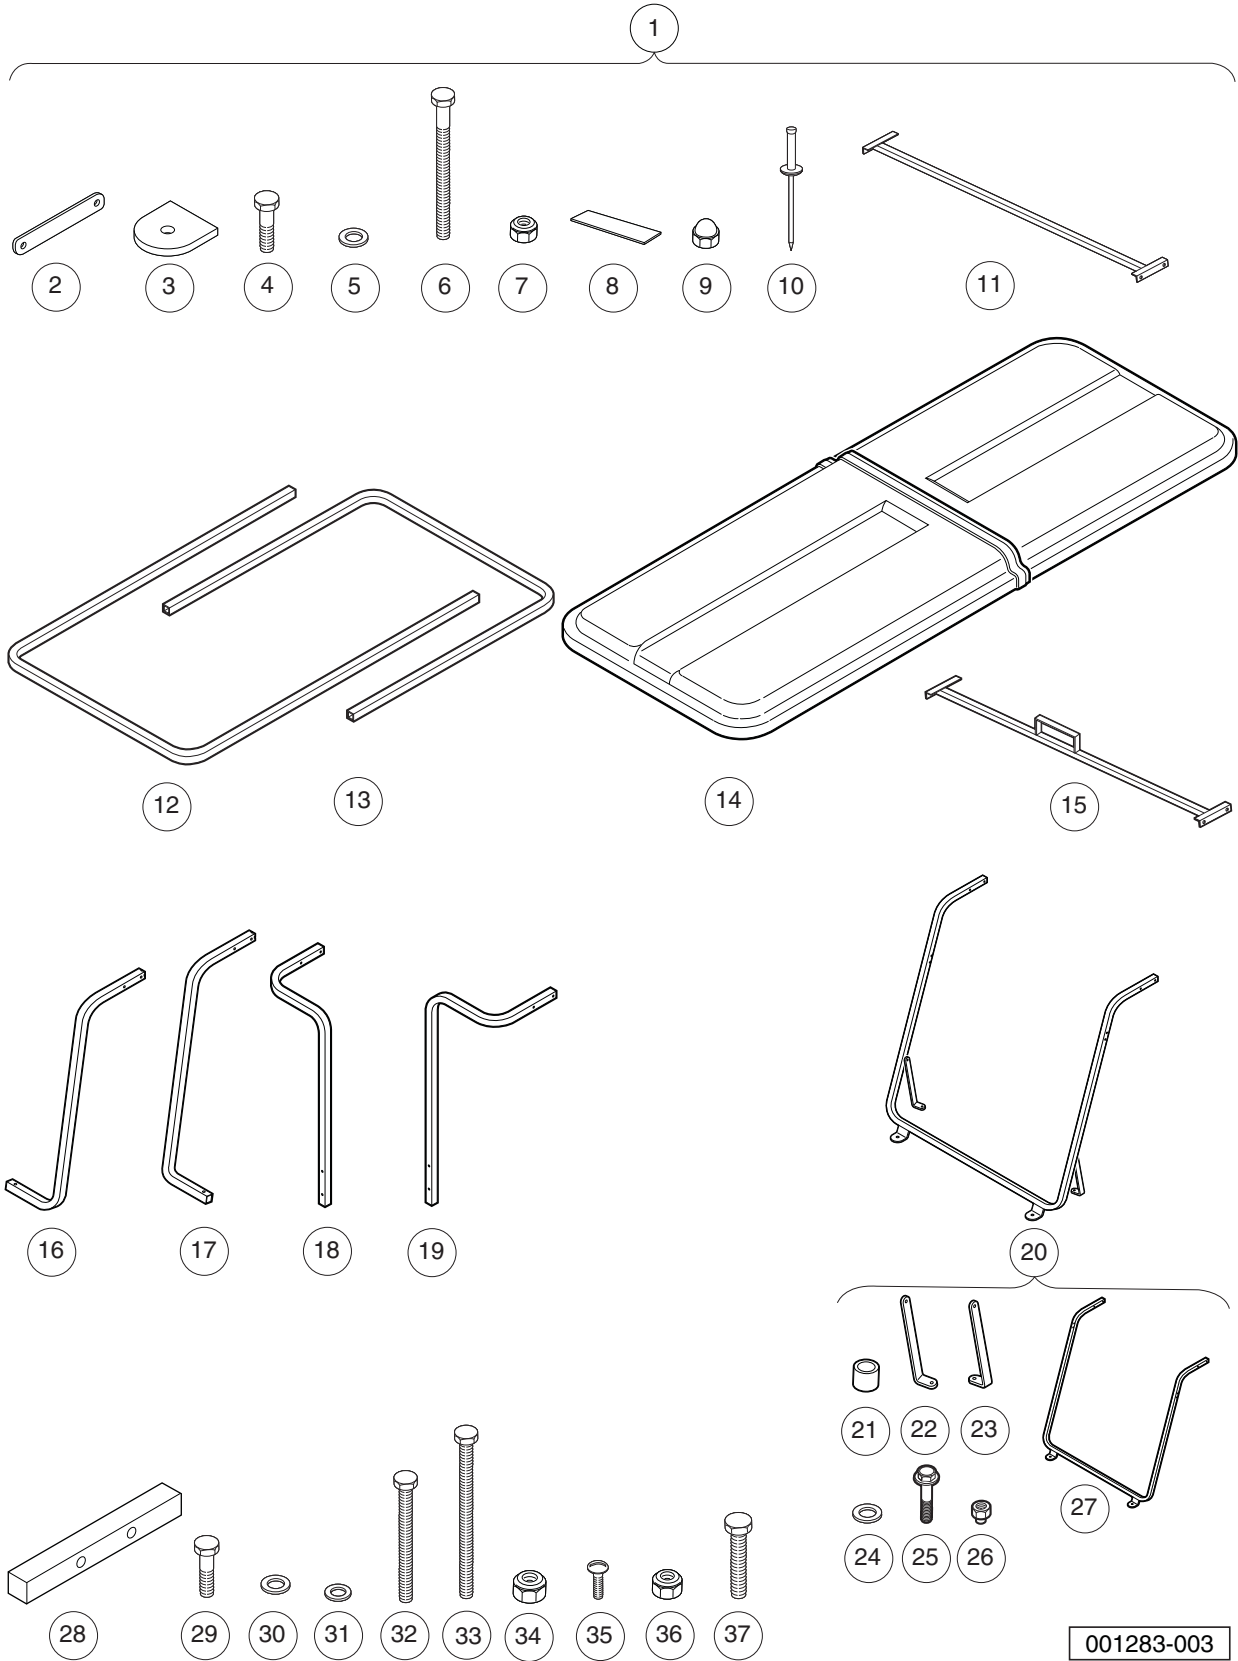

001283-003



CANOPY KIT, BEIGE – VILL. 6 WITH FLAT BED

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101838002</u>	Canopy Beige Vill W/cargo Bd (includes items 2 through 37)	1
2	<u>1011852</u>	Plate, Canopy Trim	10
3	<u>1011883</u>	Pad, Windshield Frame Mounting	2
4	<u>1011937</u>	Bolt, 5/16-18 X 1.25 Hex Head	2
5	<u>1011964</u>	Washer, 1/4 Flat	14
6	<u>1012159</u>	Bolt, 1/4-20 X 2.75 Hex-Head	8
7	<u>1013061</u>	Locknut, #10-32 Nylon Insert	8
8	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4"	20
9	<u>1015091</u>	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	4
10	<u>1015392</u>	Rivet, 3/16 Pop	8
11	<u>1016781</u>	Hanger Weldment	1
12	<u>1016793</u>	Top Front Support	1
13	<u>1016794</u>	Top Rear Support	1
14	<u>101679901</u>	Canopy Front & Rear Beige	1
15	<u>1017185</u>	Hanger Weldment Front	1
16	<u>101815401</u>	Canopy Side Brace Lh	1
17	<u>101815402</u>	Canopy Side Brace Rh	1
18	<u>101837801</u>	Rear Canopy Brace Rh	1
19	<u>101837802</u>	Rear Canopy Brace Lh	1
20	<u>103789601</u>	W/s Fr / Knee Br, Aluminum (includes items 21 through 27)	1
21	<u>1010237</u>	Bushing	2
22	<u>1011862</u>	Brace, Right-Hand Canopy Mount Knee	1
23	<u>1011865</u>	Brace, Left-Hand Canopy Mount Knee	1
24	<u>1011964</u>	Washer, 1/4 Flat	2
25	<u>102076701</u>	Screw, 1/4-20 X 1.75 Hex Sems	2
26	<u>102242401</u>	Nut - Nylon Insert W/cap	2
27	<u>103787401</u>	Asm, Windshield Frame, Alum	1
28	<u>103954301</u>	Splice Bar 10.5"	2
29	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	2
30	<u>1241</u>	Washer, 5/16 Type A Flat	4
31	<u>183</u>	Washer, #10, Type A, Flat	16
32	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	4
33	<u>343</u>	Screw, 1/4-20 X 3.00 Hx Hd Cap	4
34	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4
35	<u>8104</u>	Screw, #10-32 X .75 Rd Hd Mach	8
36	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	12
37	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	4

1

G

E

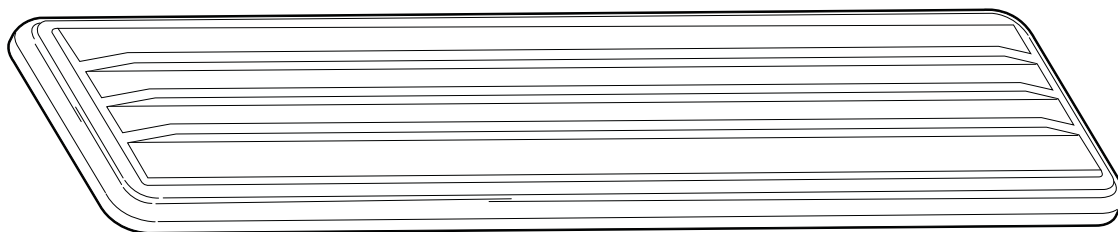
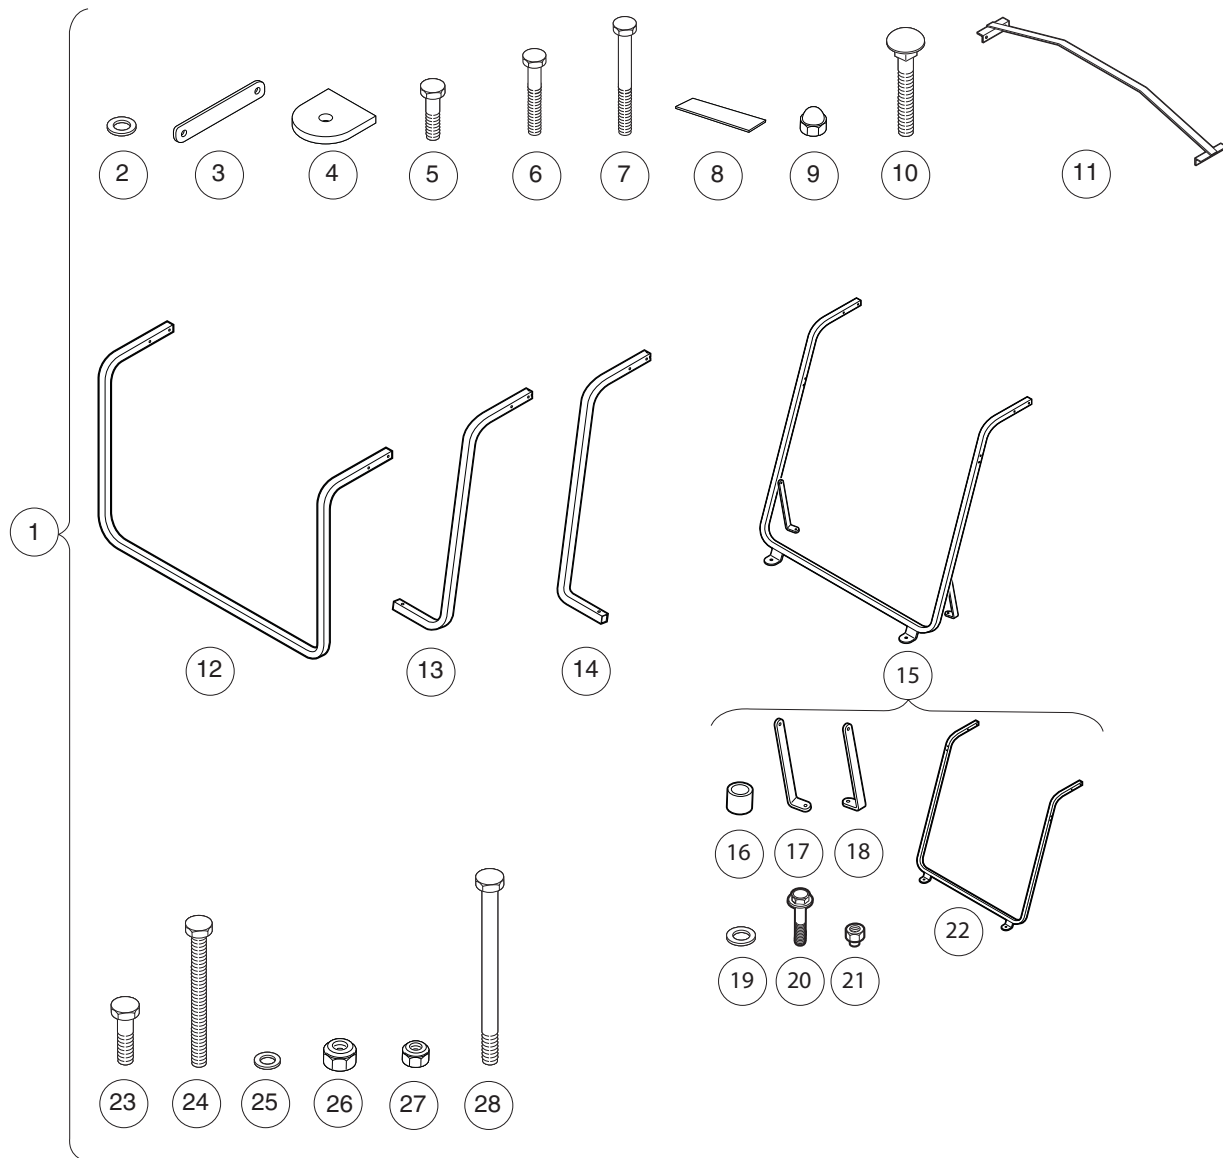
1**G****E****29**

001284-003

CANOPY KIT, WHITE – VILL. 8 WITH REAR-FACING SEATS

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>101805801</u>	Canopy Hardware Kit (includes items 2 through 28)	1	
2	<u>1011697</u>	Washer, 5/16 Flat	2	
3	<u>1011852</u>	Plate, Canopy Trim	4	
4	<u>1011883</u>	Pad, Windshield Frame Mounting	2	
5	<u>1011937</u>	Bolt, 5/16-18 X 1.25 Hex Head	2	
6	<u>1013509</u>	Screw, 1/4-20 X 1.75 Hx Hd Cap	4	
7	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	16	
8	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4"	20	
9	<u>1015091</u>	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	8	
10	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	2	
11	<u>101800201</u>	Canopy Top Brace Weldment	2	
12	<u>101805601</u>	Rear Brace XI Canopy	1	
13	<u>101815401</u>	Canopy Side Brace Lh	2	
14	<u>101815402</u>	Canopy Side Brace Rh	2	
15	<u>103789601</u>	W/s Fr / Knee Br, Aluminum (includes items 16 through 22)	1	
16	<u>1010237</u>	Bushing	2	
17	<u>1011862</u>	Brace, Right-Hand Canopy Mount Knee	1	
18	<u>1011865</u>	Brace, Left-Hand Canopy Mount Knee	1	
19	<u>1011964</u>	Washer, 1/4 Flat	2	
20	<u>102076701</u>	Screw, 1/4-20 X 1.75 Hex Sems	2	
21	<u>102242401</u>	Nut - Nylon Insert W/cap	2	
22	<u>103787401</u>	Asm, Windshield Frame, Alum	1	
23	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	2	
24	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	12	
25	<u>332</u>	Washer, 1/4 Type A Narrow Flat	56	
26	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	
27	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	24	
28	<u>8915</u>	Screw, 5/16-18 X 3.0 Hx Hd Cap	2	
29	<u>101835501</u>	XI Canopy - White	1	

1
G
E

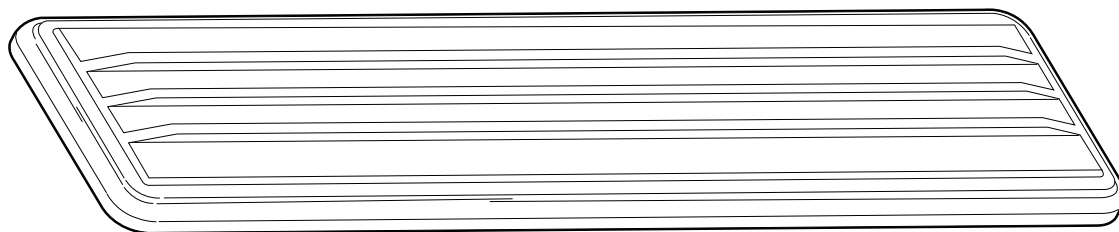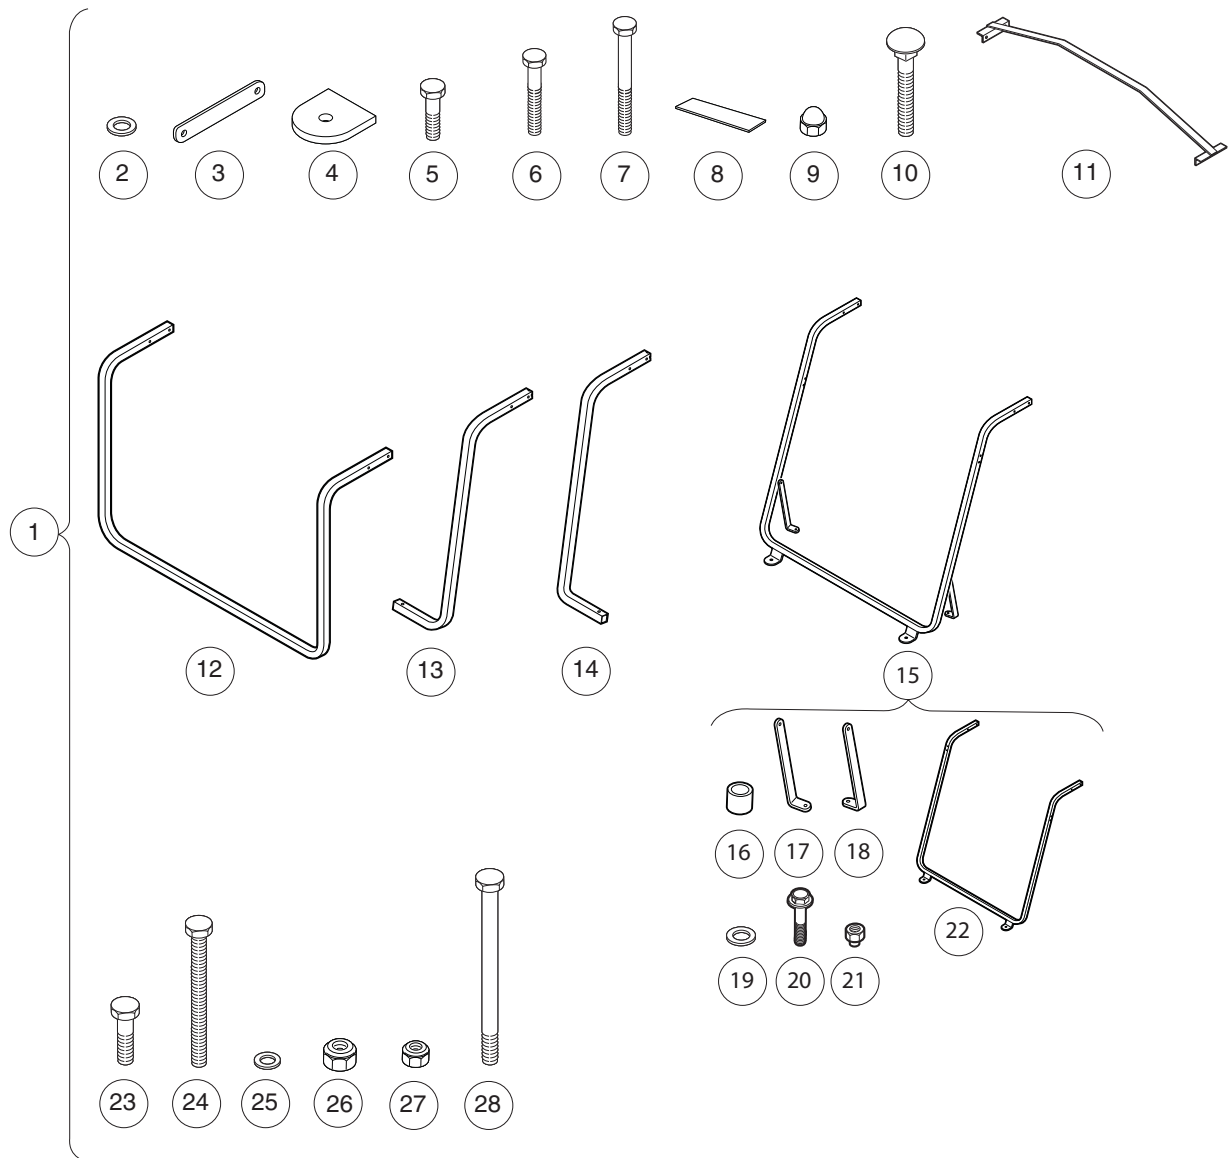



29

001284-003

CANOPY KIT, BEIGE – VILL. 8 WITH REAR-FACING SEATS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101805801</u>	Canopy Hardware Kit (includes items 2 through 28)	1
2	<u>1011697</u>	Washer, 5/16 Flat	2
3	<u>1011852</u>	Plate, Canopy Trim	4
4	<u>1011883</u>	Pad, Windshield Frame Mounting	2
5	<u>1011937</u>	Bolt, 5/16-18 X 1.25 Hex Head	2
6	<u>1013509</u>	Screw, 1/4-20 X 1.75 Hx Hd Cap	4
7	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	16
8	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4"	20
9	<u>1015091</u>	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	8
10	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	2
11	<u>101800201</u>	Canopy Top Brace Weldment	2
12	<u>101805601</u>	Rear Brace XI Canopy	1
13	<u>101815401</u>	Canopy Side Brace Lh	2
14	<u>101815402</u>	Canopy Side Brace Rh	2
15	<u>103789601</u>	W/s Fr / Knee Br, Aluminum (includes items 16 through 22)	1
16	<u>1010237</u>	Bushing	2
17	<u>1011862</u>	Brace, Right-Hand Canopy Mount Knee	1
18	<u>1011865</u>	Brace, Left-Hand Canopy Mount Knee	1
19	<u>1011964</u>	Washer, 1/4 Flat	2
20	<u>102076701</u>	Screw, 1/4-20 X 1.75 Hex Sems	2
21	<u>102242401</u>	Nut - Nylon Insert W/cap	2
22	<u>103787401</u>	Asm, Windshield Frame, Alum	1
23	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	2
24	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	12
25	<u>332</u>	Washer, 1/4 Type A Narrow Flat	56
26	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
27	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	24
28	<u>8915</u>	Screw, 5/16-18 X 3.0 Hx Hd Cap	2
29	<u>101835502</u>	XI Canopy - Beige	1

1
G
E

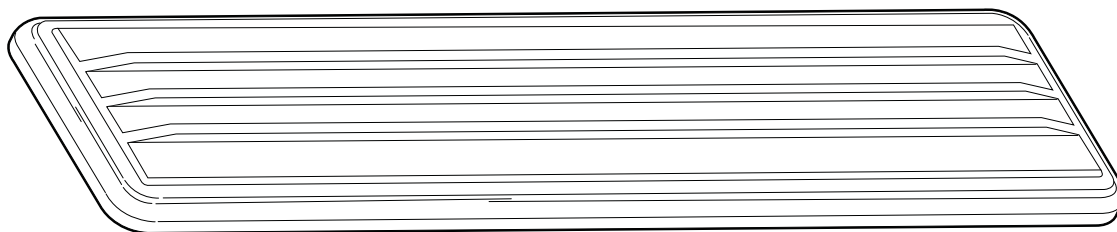
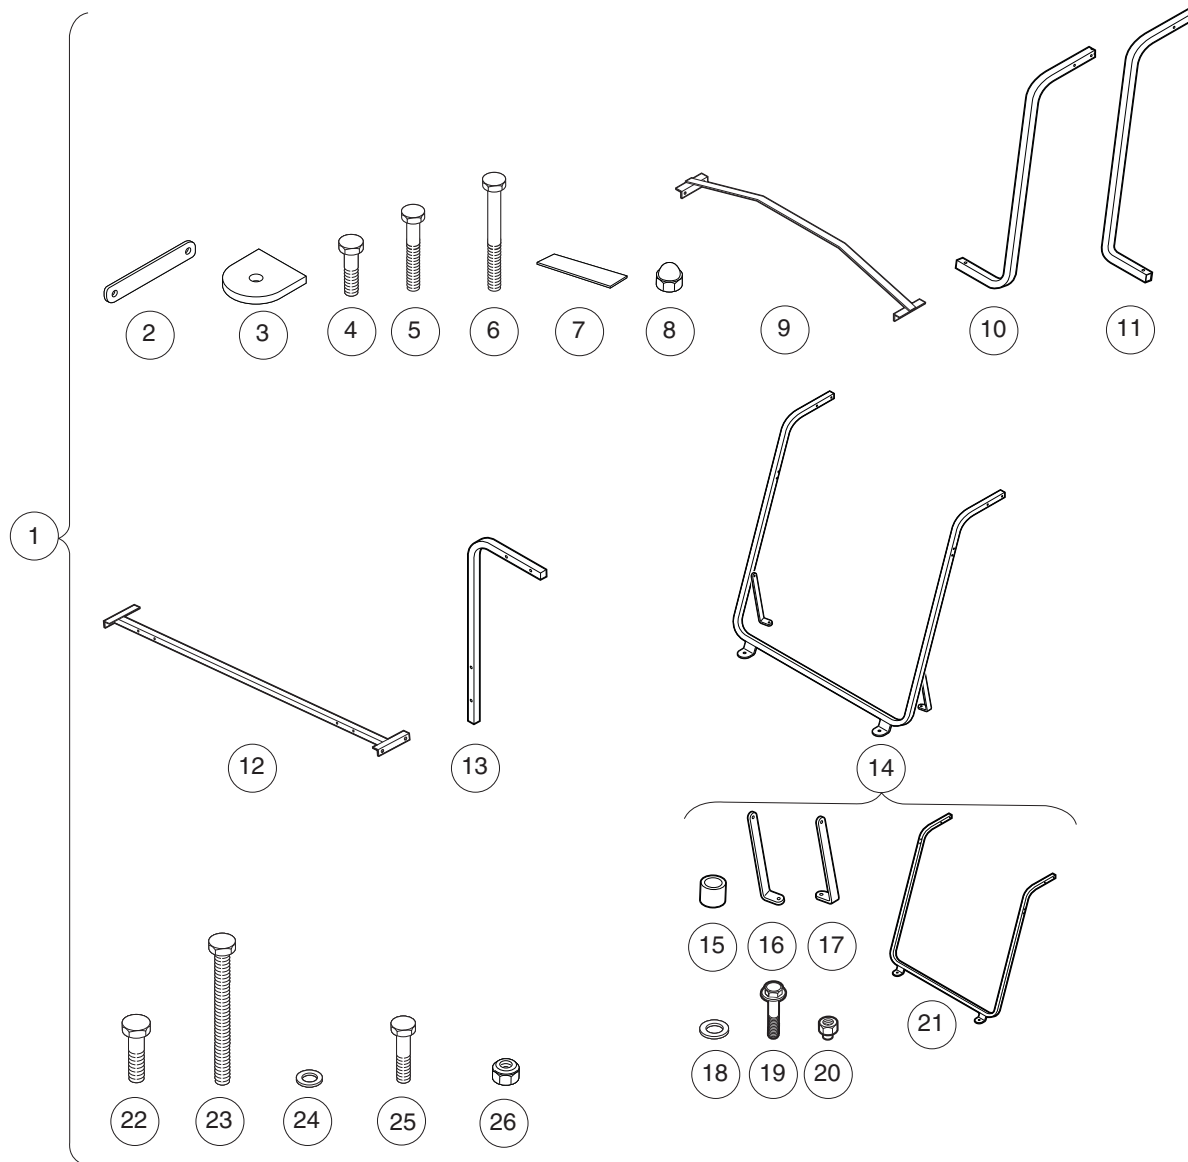
1**G****E**

(27)

001285-003

CANOPY KIT, WHITE – VILL. 8 WITH FLAT BED

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>101835001</u>	Kit, Rv XI Canopy Hardware (includes items 2 through 26)	1	
2	<u>1011852</u>	Plate, Canopy Trim	4	
3	<u>1011883</u>	Pad, Windshield Frame Mounting	2	
4	<u>1011937</u>	Bolt, 5/16-18 X 1.25 Hex Head	2	
5	<u>1013509</u>	Screw, 1/4-20 X 1.75 Hx Hd Cap	4	
6	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	8	
7	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4"	20	
8	<u>1015091</u>	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	8	
9	<u>101800201</u>	Canopy Top Brace Weldment	2	
10	<u>101805501</u>	Side Brace XI Canopy L.h.	2	
11	<u>101805502</u>	Side Brace XI Canopy R.h.	2	
12	<u>101835101</u>	Rear Cross Brace XI Canopy	1	
13	<u>101835401</u>	Rear Brace XI Canopy	2	
14	<u>103789601</u>	W/s Fr / Knee Br, Aluminum (includes items 15 through 21)	1	
15	<u>1010237</u>	Bushing	2	
16	<u>1011862</u>	Brace, Right-Hand Canopy Mount Knee	1	
17	<u>1011865</u>	Brace, Left-Hand Canopy Mount Knee	1	
18	<u>1011964</u>	Washer, 1/4 Flat	2	
19	<u>102076701</u>	Screw, 1/4-20 X 1.75 Hex Sems	2	
20	<u>102242401</u>	Nut - Nylon Insert W/cap	2	
21	<u>103787401</u>	Asm, Windshield Frame, Alum	1	
22	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	2	
23	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	16	
24	<u>332</u>	Washer, 1/4 Type A Narrow Flat	56	
25	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	4	
26	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	24	
27	<u>101835501</u>	XI Canopy - White	1	

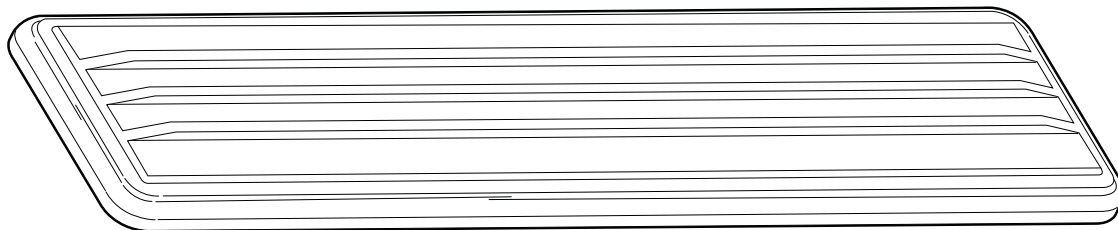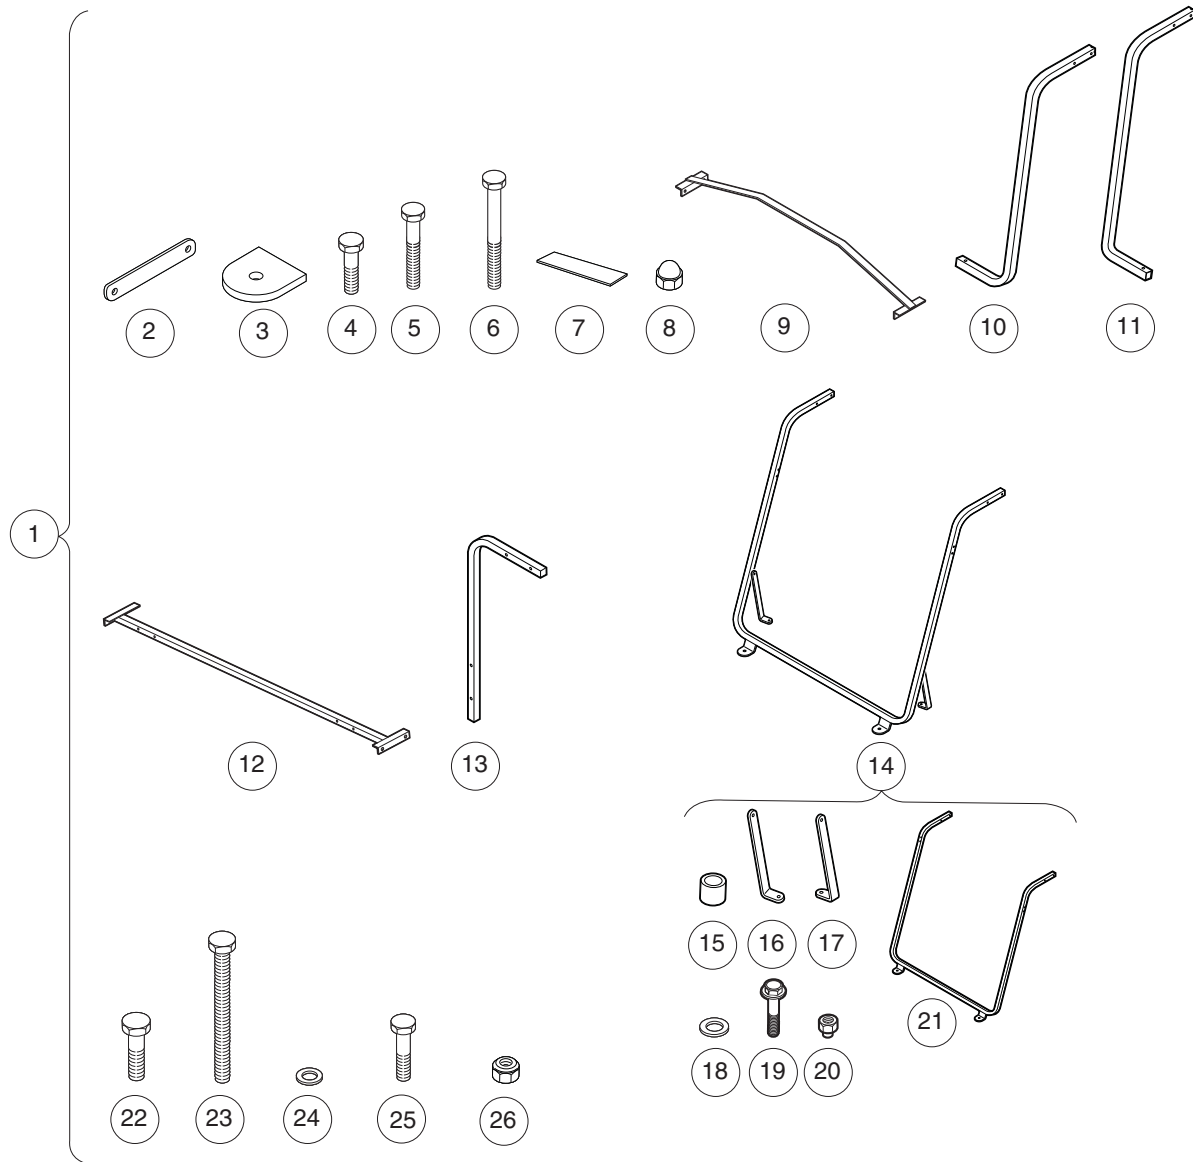1**G****E****27**

001285-003

CANOPY KIT, BEIGE – VILL. 8 WITH FLAT BED

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>101835001</u>	Kit, Rv XI Canopy Hardware (includes items 2 through 26)	1	
2	<u>1011852</u>	Plate, Canopy Trim	4	
3	<u>1011883</u>	Pad, Windshield Frame Mounting	2	
4	<u>1011937</u>	Bolt, 5/16-18 X 1.25 Hex Head	2	
5	<u>1013509</u>	Screw, 1/4-20 X 1.75 Hx Hd Cap	4	
6	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	8	
7	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4"	20	
8	<u>1015091</u>	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	8	
9	<u>101800201</u>	Canopy Top Brace Weldment	2	
10	<u>101805501</u>	Side Brace XI Canopy L.h.	2	
11	<u>101805502</u>	Side Brace XI Canopy R.h.	2	
12	<u>101835101</u>	Rear Cross Brace XI Canopy	1	
13	<u>101835401</u>	Rear Brace XI Canopy	2	
14	<u>103789601</u>	W/s Fr / Knee Br, Aluminum (includes items 15 through 21)	1	
15	<u>1010237</u>	Bushing	2	
16	<u>1011862</u>	Brace, Right-Hand Canopy Mount Knee	1	
17	<u>1011865</u>	Brace, Left-Hand Canopy Mount Knee	1	
18	<u>1011964</u>	Washer, 1/4 Flat	2	
19	<u>102076701</u>	Screw, 1/4-20 X 1.75 Hex Sems	2	
20	<u>102242401</u>	Nut - Nylon Insert W/cap	2	
21	<u>103787401</u>	Asm, Windshield Frame, Alum	1	
22	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	2	
23	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	16	
24	<u>332</u>	Washer, 1/4 Type A Narrow Flat	56	
25	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	4	
26	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	24	
27	<u>101835502</u>	XI Canopy - Beige	1	

1

G





E

WHEELS AND TIRES

2

G

E

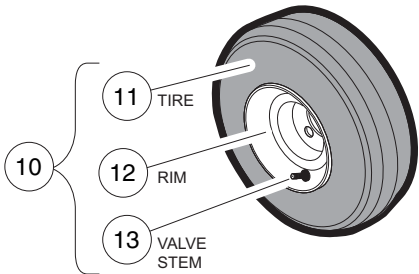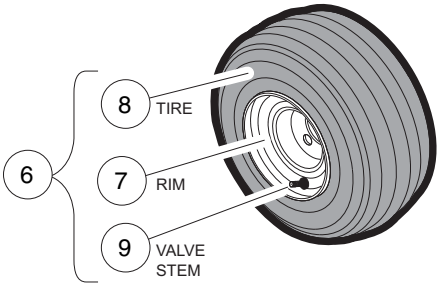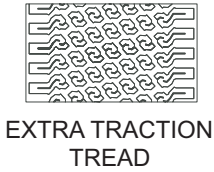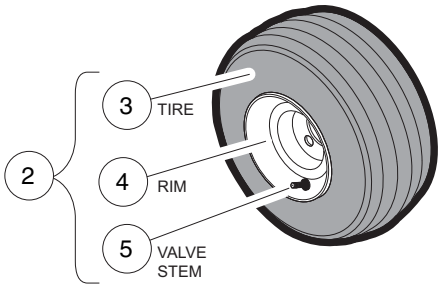


WHEELS (SILVER) AND TIRES

ITEM	PART NO.	DESCRIPTION	QTY	2 G E
		1 2 3 4		
1	<u>1010984</u>	.500-20 Unf Lug Nut	16	
2	<u>103951002</u>	Assembly, Silver Wheel Kenda, X/t 6ply (includes items 3 through 5)	A/R	
3	<u>102569302</u>	Tire, Kenda, 18x8.5-8, 6-ply Xtr	1	
4	<u>103459104</u>	Wheel Rim, 8"x7", Silver, Std	1	
5	<u>7310</u>	Valve Stem, Black Plastic	1	
6	<u>103951003</u>	Asm,silver Whl Kenda, Hn1 6pl (includes items 7 through 9)	A/R	
7	<u>103459104</u>	Wheel Rim, 8"x7", Silver, Std	1	
8	<u>103658601</u>	Tire, Kenda Hn1, 6pl	1	
9	<u>7310</u>	Valve Stem, Black Plastic	1	
10	<u>103951004</u>	Asm,silver Whl Kenda,6.5" 6pl (includes items 11 through 13)	A/R	
11	<u>103722901</u>	Tire, Kenda Hole-N-One, 18x6.5 - 8, Prem, 6-Ply	1	
12	<u>103723003</u>	Wheel Rim, 8 X 5.375, Silver	1	
13	<u>7310</u>	Valve Stem, Black Plastic	1	

2

G

E

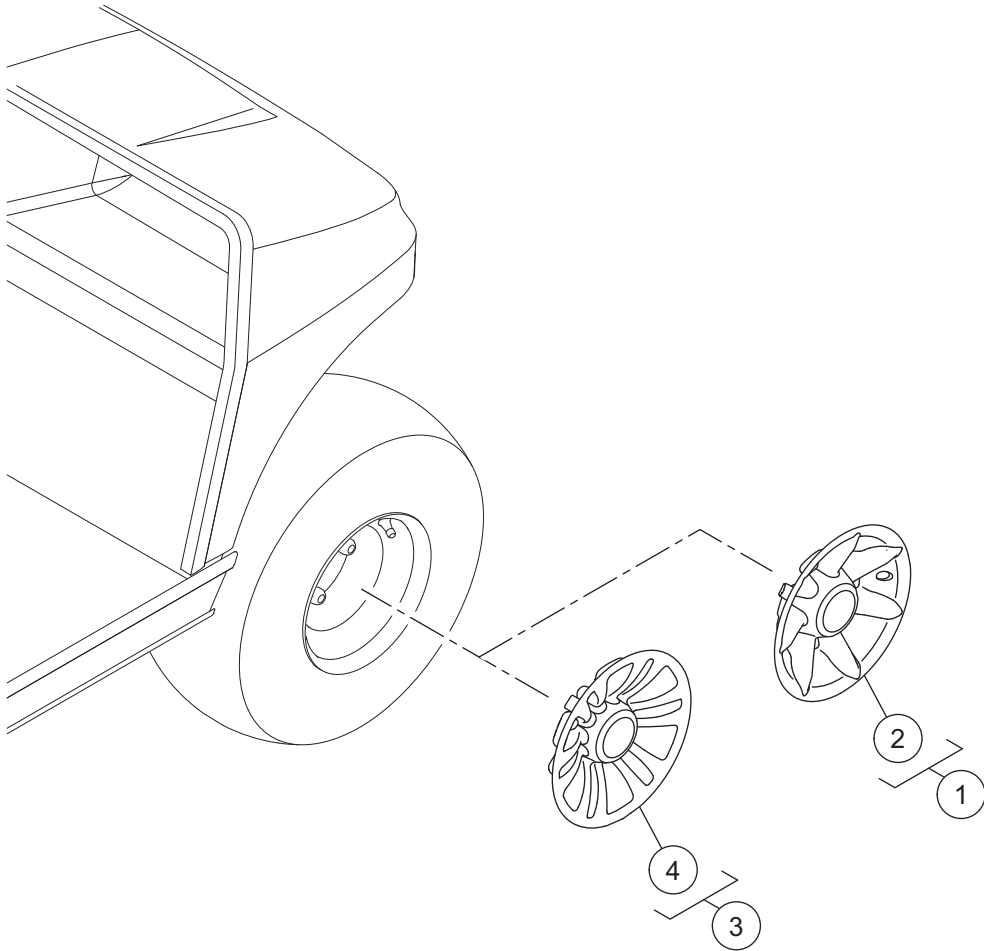

001203-002

WHEEL COVERS

ITEM	PART NO.	DESCRIPTION	QTY	2
		1 2 3 4		G
1	<u>102559901</u>	Hub Cap Kit, Prec (includes item 2)	1	E
2	<u>103694501</u>	Hub Cap, 7 Prong	4	
3	<u>102559902</u>	Kit, Wheel Cover, 12 Spk (includes item 4)	1	
4	<u>105142401</u>	Wheel Cover, 12 Spk, 8", Slvr	4	

2

G


E

DECALS

3

G

E

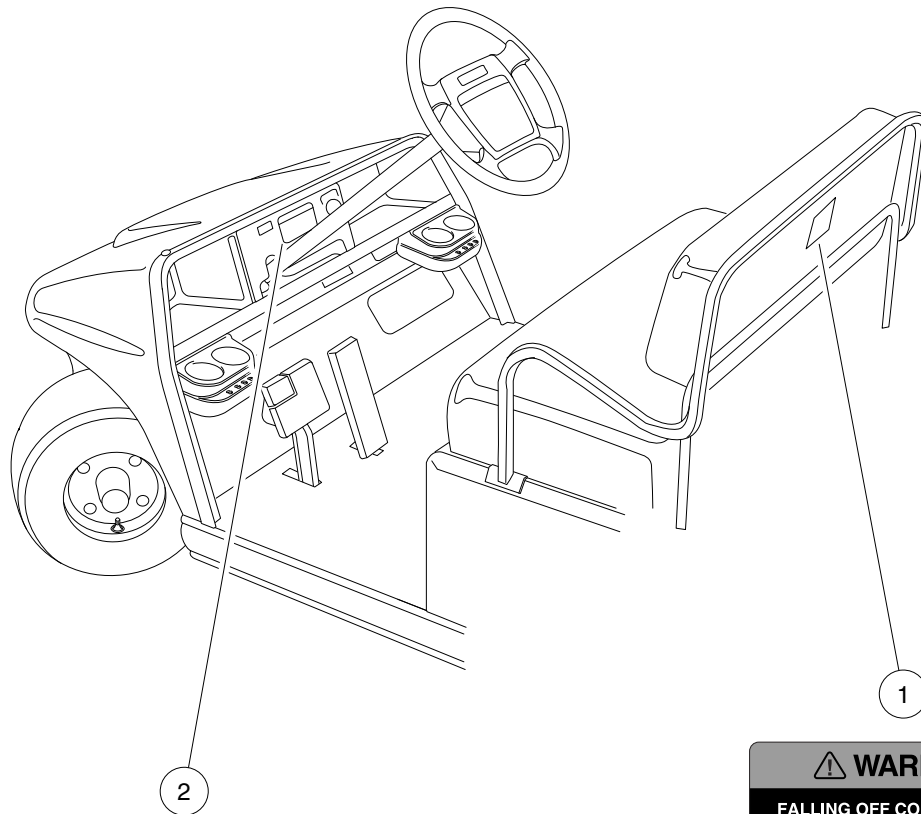

⚠ WARNING

ROLLOVER OR FALLING OFF MAY CAUSE DEATH.

- Before using vehicle, read operating instructions.
- Remain seated and hold on to seat handle while moving.
- Do not start vehicle until all occupants are seated.
- Two (2) persons per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not leave children unattended on vehicle.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Never stand in front of or behind vehicle.

CC# 103205401

⚠ WARNING

FALLING OFF COULD RESULT IN SEVERE INJURY OR DEATH

- Remain seated with entire body inside vehicle and hold on to seat handle or handrail at all times.
- Two (2) persons per bench seat maximum.
- One (1) person per bucket seat maximum.
- Do not leave children unattended on vehicle at anytime.
- Never stand in front of or behind vehicle.

CC# 101705701

000374-002

DECALS – VILLAGER 6 GAS AND IQ PLUS

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>101705701</u>	1 2 3 4 Decal, Warning	1
2	<u>103205401</u>	Decal, Warning, Rollover, Utl	1

3

G

E

OPERATING INSTRUCTIONS

Before using vehicle, read owner's manual and vehicle safety warnings. Study and understand controls.

TO OPERATE

- Ensure wheels are turned in desired direction and path is clear.
- Turn key to ON position.
- Select FORWARD or REVERSE only when stopped.
- Release park brake fully.
- Vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- During operation, beeping alarm indicates reduction in motor braking.
- To stop, release accelerator pedal and press brake pedal.

WARNING

Unintended vehicle movement may cause severe injury or death. Before leaving vehicle:

- Engage park brake to lock wheels.
- Place vehicle in NEUTRAL.
- Turn key to OFF and remove key.

103783001

⚠ DANGER / POISON

SHIELD EYES
EXPLOSIVE GASES CAN CAUSE BLINDNESS OR INJURY
NO SPARKS
FLAMES
SMOKING
SULFURIC ACID CAN CAUSE BLINDNESS OR SEVERE BURNS
FLUSH EYES IMMEDIATELY WITH WATER
GET MEDICAL HELP FAST


KEEP OUT OF THE REACH OF CHILDREN - DO NOT TIP - KEEP VENT CAPS TIGHT AND LEVEL

CAUTION

EXPOSURE TO WATER MAY DAMAGE ELECTRONIC COMPONENTS

- Do not operate vehicle without this cover properly installed.
- Do not direct water stream in the area of the cover without cover securely in place.
- See vehicle maintenance and service manual before servicing.

CCI 102518361



⚠ WARNING

AVOID FIRE HAZARD

- Replacement battery wires must be 4-gauge (AWG) with low-resistance terminals equivalent to factory-installed wires.
- Ensure that battery connections are clean and properly tightened. See owner's manual.

CCI 102967601

⚠ WARNING

BATTERY EXPLOSION COULD RESULT IN SEVERE PERSONAL INJURY.

- Do not store items in battery compartment.
- Place Run/Tow switch in TOW position before:
 - Disconnecting or connecting battery cables
 - Towing this vehicle
 - Extended storage
 - Servicing the vehicle


NORMAL TRIPPED
TOW RUN

CCI 102845101

001292-001

DECALS – VILLAGER 6 IQ PLUS VEHICLE ONLY

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>1013677</u>	Decal, Battery Danger	1	
2	<u>101825101</u>	Decal, Off/On	1	
3	<u>102518301</u>	Decal, Caution, Electrical Component Cover	1	
4	<u>102845101</u>	Decal, Tow Switch	1	
5	<u>102967601</u>	Decal, Warning, 4 Gauge Wire	1	
6	<u>103210301</u>	Decal, Forward/Reverse, Electric	1	
7	<u>103783001</u>	Decal, Op Instr, Ele	1	

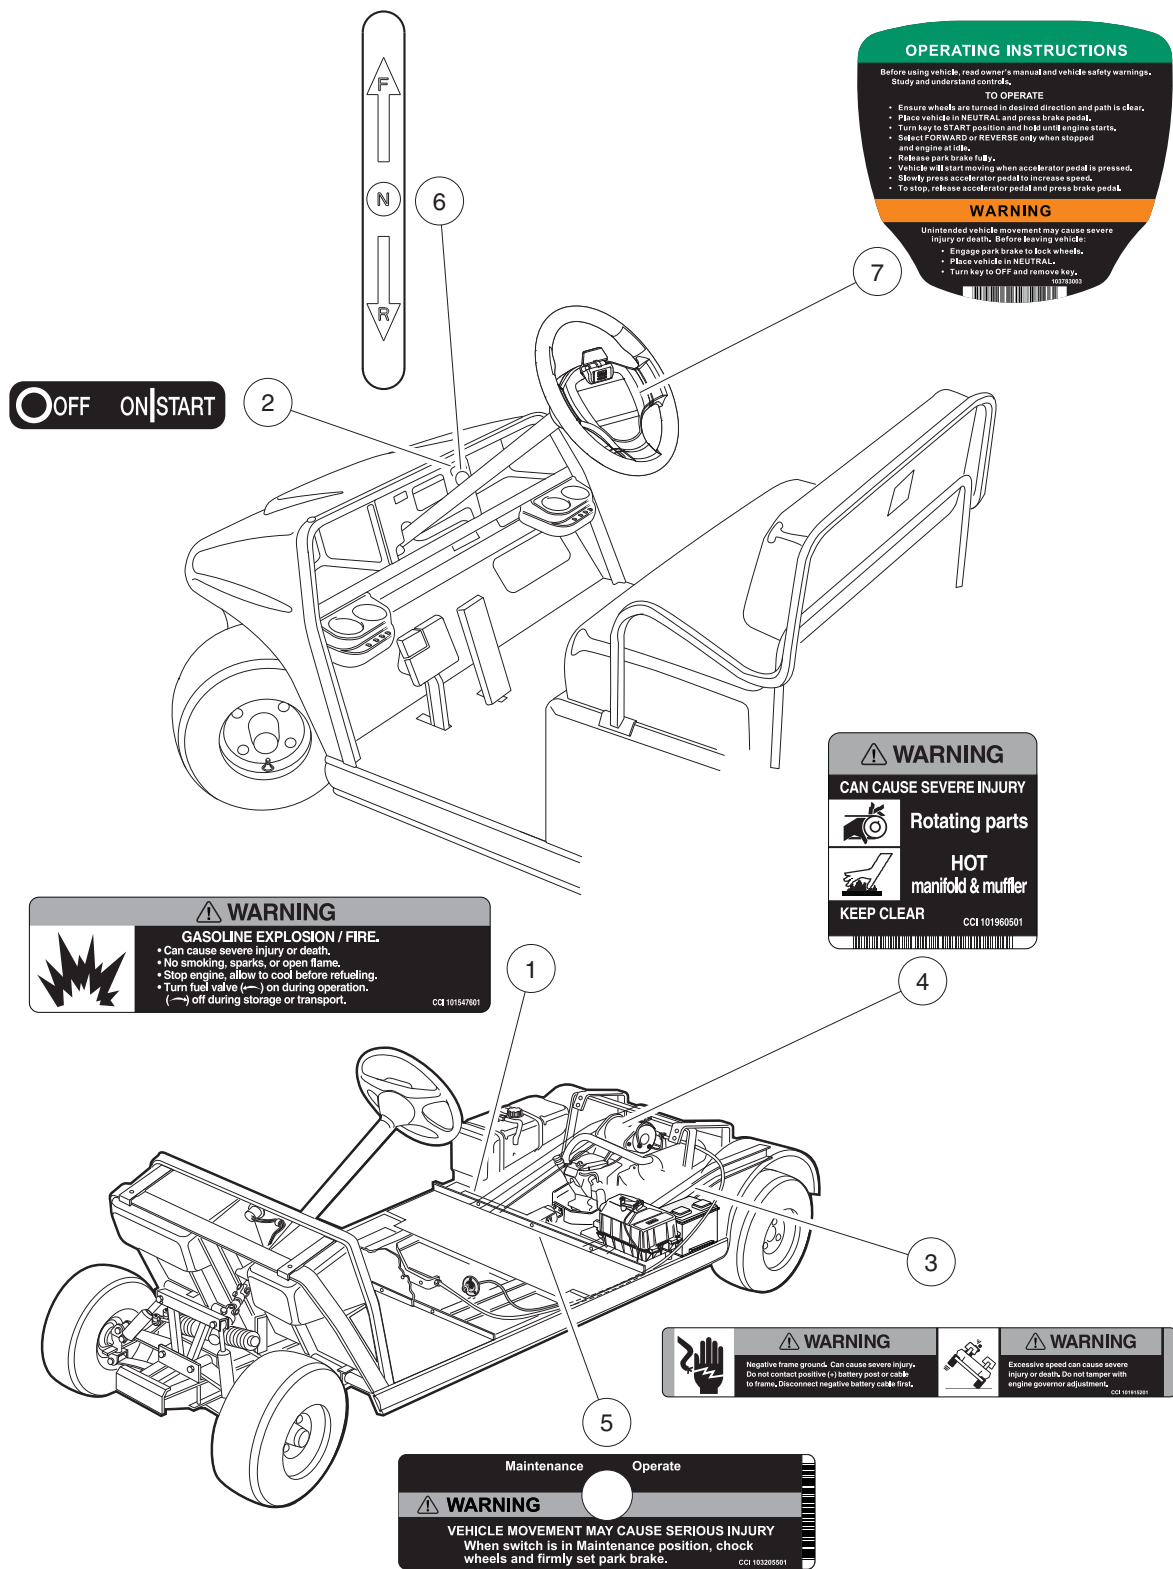

001293-001

DECALS – VILLAGER 6 GASOLINE VEHICLE ONLY

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>101547601</u>	Decal, Gasoline Explosion/Fire Warning	1	
2	<u>101825102</u>	Decal, Off/On/Start	1	
3	<u>101915201</u>	Decal, Frame Ground and Governor Warning	1	
4	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	1	
5	<u>103205501</u>	Decal, Run/Service Switch	1	
6	<u>103210201</u>	Decal, Forward/Reverse, Gas	1	
7	<u>103783003</u>	Decal, Op Instr, Gas Ks	1	

⚠ WARNING

ROLLOVER OR FALLING OFF MAY CAUSE DEATH.

- Before using vehicle, read operating instructions.
- Remain seated and hold on to seat handle while moving.
- Do not start vehicle until all occupants are seated.
- Two (2) persons per seat maximum.
- Operate from driver side only and not on public roads.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Do not leave children unattended on vehicle.
- Never operate under the influence of alcohol or drugs.
- Use brakes to reduce speed when coasting downhill.
- Never stand in front of or behind vehicle.


CCJ 103205401

⚠ WARNING

FALLING OFF COULD RESULT IN SEVERE INJURY OR DEATH

- Remain seated with entire body inside vehicle and hold on to seat handle or handrail at all times.
- Two (2) persons per bench seat maximum.
- One (1) person per bucket seat maximum.
- Do not leave children unattended on vehicle at anytime.
- Never stand in front of or behind vehicle.

CCJ 101706701

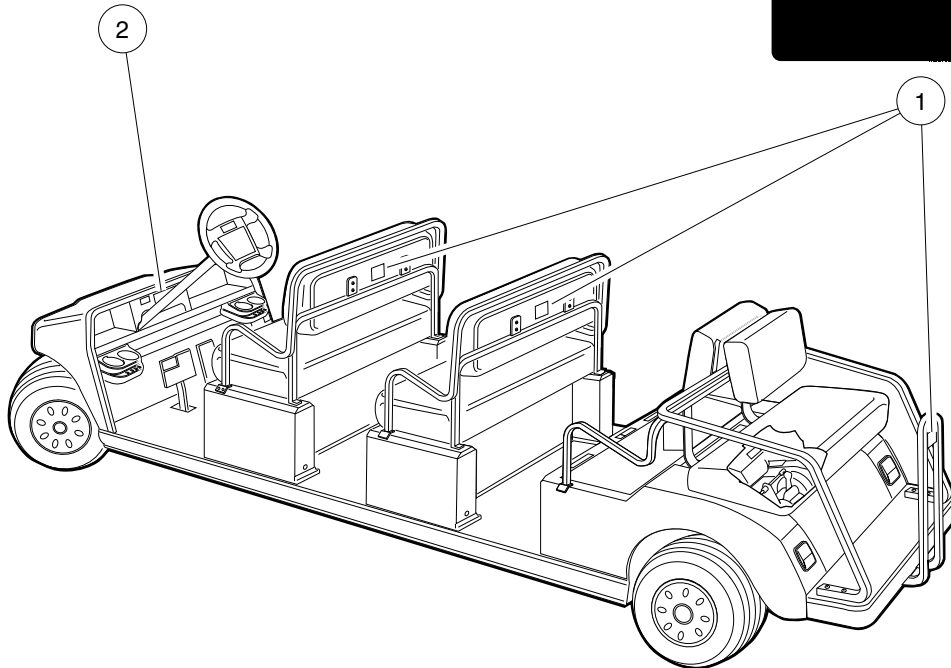

000377-002


DECALS – VILLAGER 8 GAS AND IQ PLUS

ITEM	PART NO.	DESCRIPTION	QTY	
1	<u>101705701</u>	1 2 3 4 Decal, Warning	3	3
2	<u>103205401</u>	Decal, Warning, Rollover, Utl	1	G
				E

3


G

E

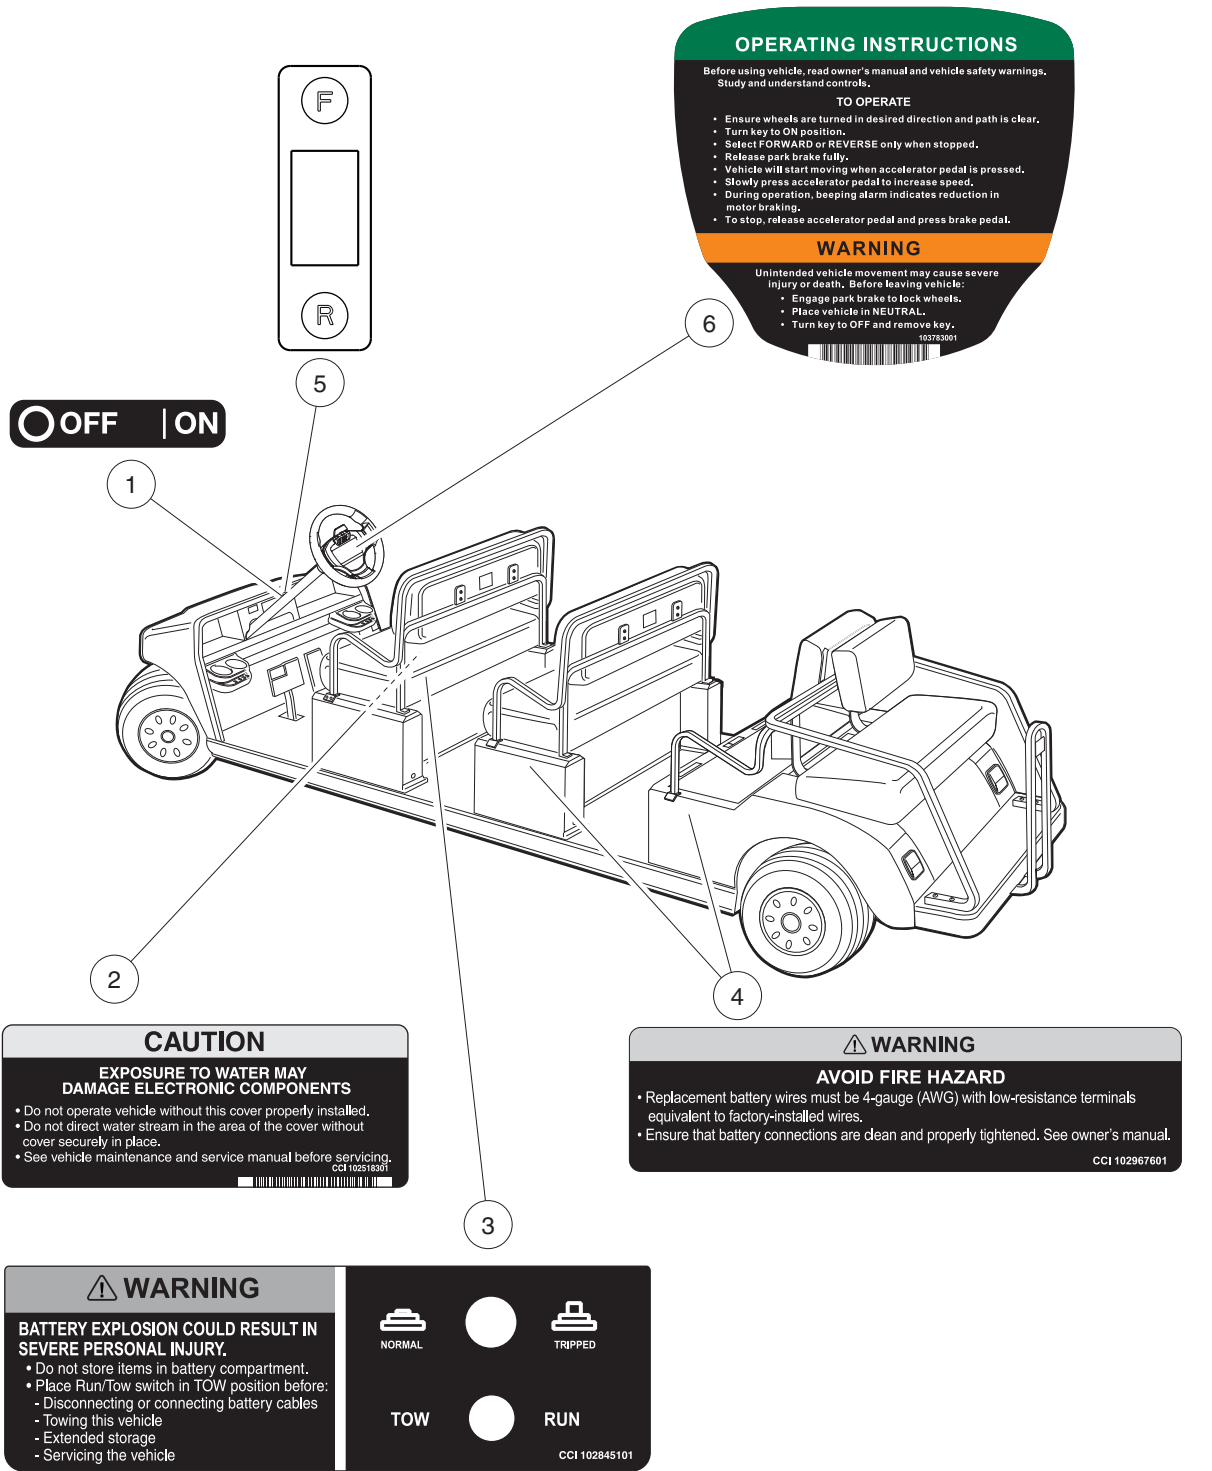

DECALS – VILLAGER 8 IQ PLUS VEHICLE ONLY

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>101825101</u>	Decal, Off/On	1	
2	<u>102518301</u>	Decal, Caution, Electrical Component Cover	1	
3	<u>102845101</u>	Decal, Tow Switch	1	
4	<u>102967601</u>	Decal, Warning, 4 Gauge Wire	2	
5	<u>103210301</u>	Decal, Forward/Reverse, Electric	1	
6	<u>103783001</u>	Decal, Op Instr, Ele	1	

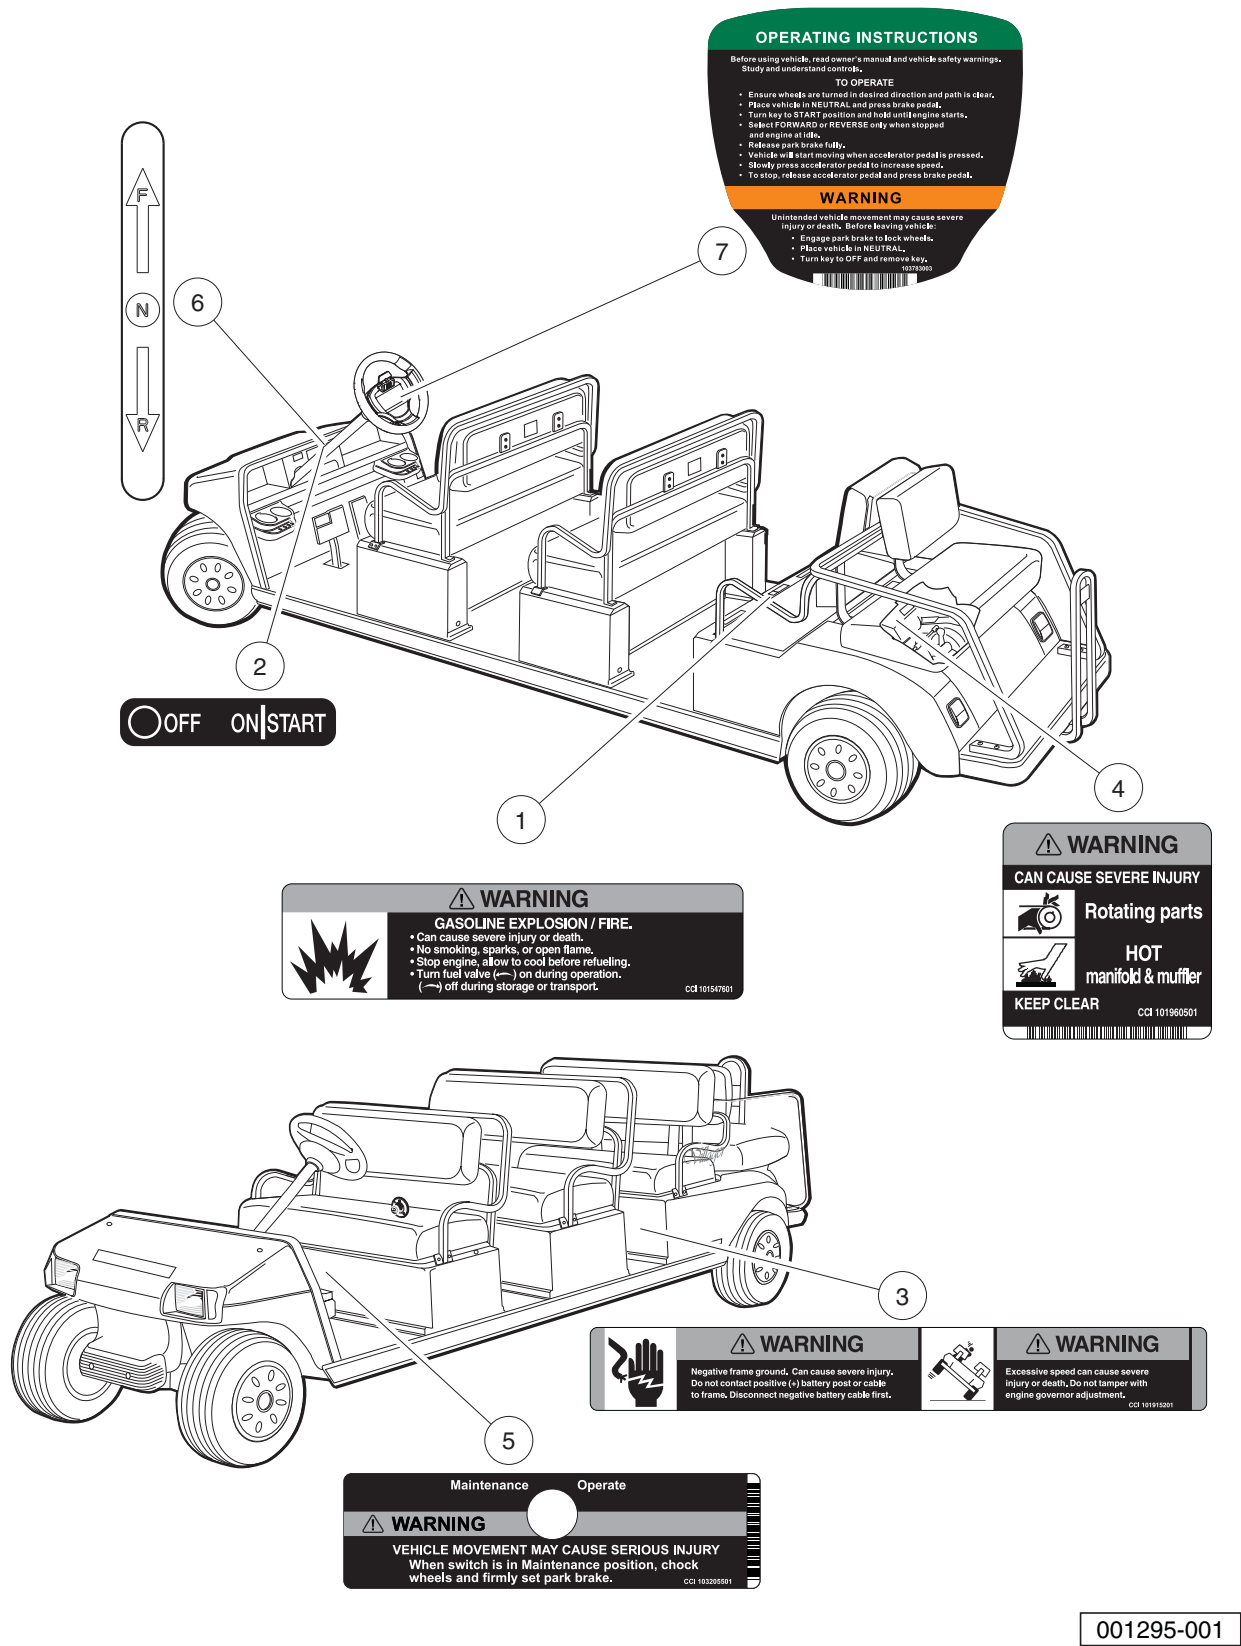


DECALS – VILLAGER 8 GASOLINE VEHICLE ONLY

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>101547601</u>	Decal, Gasoline Explosion/Fire Warning	1	
2	<u>101825102</u>	Decal, Off/On/Start	1	
3	<u>101915201</u>	Decal, Frame Ground and Governor Warning	1	
4	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	2	
5	<u>103205501</u>	Decal, Run/Service Switch	1	
6	<u>103210201</u>	Decal, Forward/Reverse, Gas	1	
7	<u>103783003</u>	Decal, Op Instr, Gas Ks	1	

3

G

E

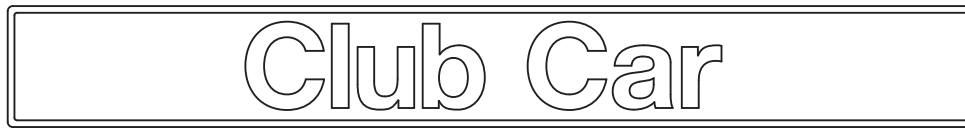

1

(ON FRONT OF COWL)



2

(ON REAR BODY)



3

(ON REAR BODY)

000380-001


BADGING DECALS – VILLAGER

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>1014198</u>	Nameplate Kit (gold)	1
2	<u>102158701</u>	Decal, Villager	2
3	<u>103234303</u>	Decal, Badge, Ir Black	2

3

G

E

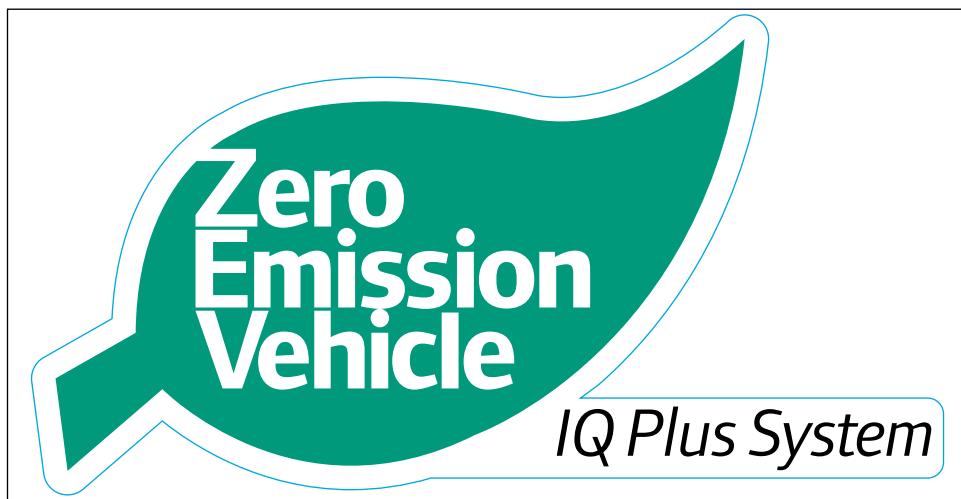

1

000422-003

IQ PLUS LOGO DECAL – IQ PLUS VEHICLES ONLY

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
1	<u>103464801</u>	1 2 3 4 Decal, Iq Plus, Zev	2	

3

G


E

LIGHTS, CONTROLS, AND INDICATORS

4

G

E

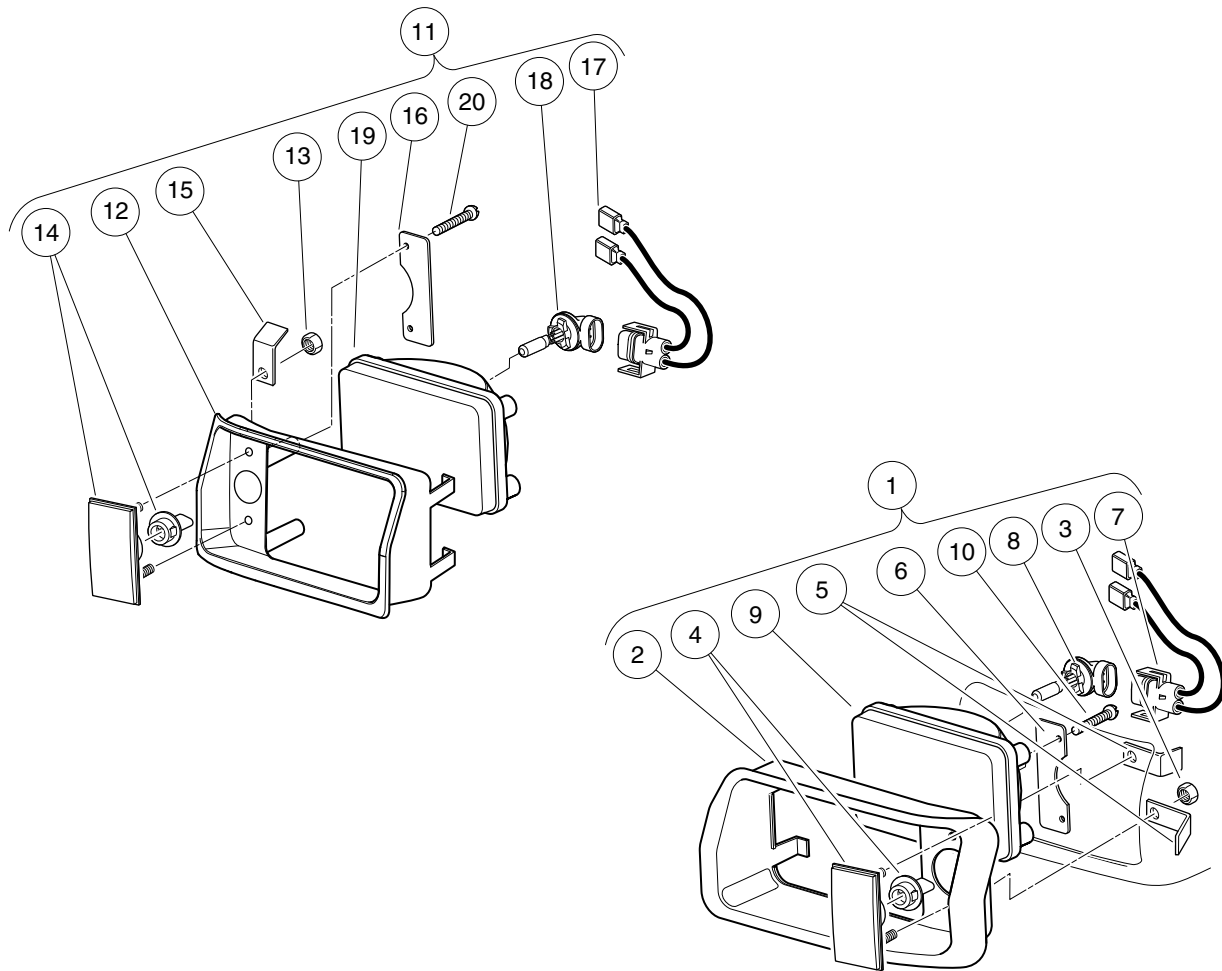

001097-001

HEADLIGHTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101988001</u>	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	1
2	<u>1016880</u>	Headlight Bezel, Left	1
3	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
4	<u>1017062</u>	Turn Signal Lens Assy	1
5	<u>1017064</u>	Mounting Bracket	2
6	<u>1017065</u>	Retainer, Headlight	1
7	<u>101987901</u>	Connector, Harness Assembly, Headlight	1
8	<u>101988101</u>	Bulb, Headlight	1
9	<u>101988201</u>	Lens, Headlight	1
10	1620	Screw, #10-16 X 0.75 Pan-Head Tap	2
11	<u>101988002</u>	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	1
12	<u>1016879</u>	Headlight Bezel, Right	1
13	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
14	<u>1017062</u>	Turn Signal Lens Assy	1
15	<u>1017064</u>	Mounting Bracket	2
16	<u>1017065</u>	Retainer, Headlight	1
17	<u>101987901</u>	Connector, Harness Assembly, Headlight	1
18	<u>101988101</u>	Bulb, Headlight	1
19	<u>101988201</u>	Lens, Headlight	1
20	1620	Screw, #10-16 X 0.75 Pan-Head Tap	2

4


G

E

4

G

E

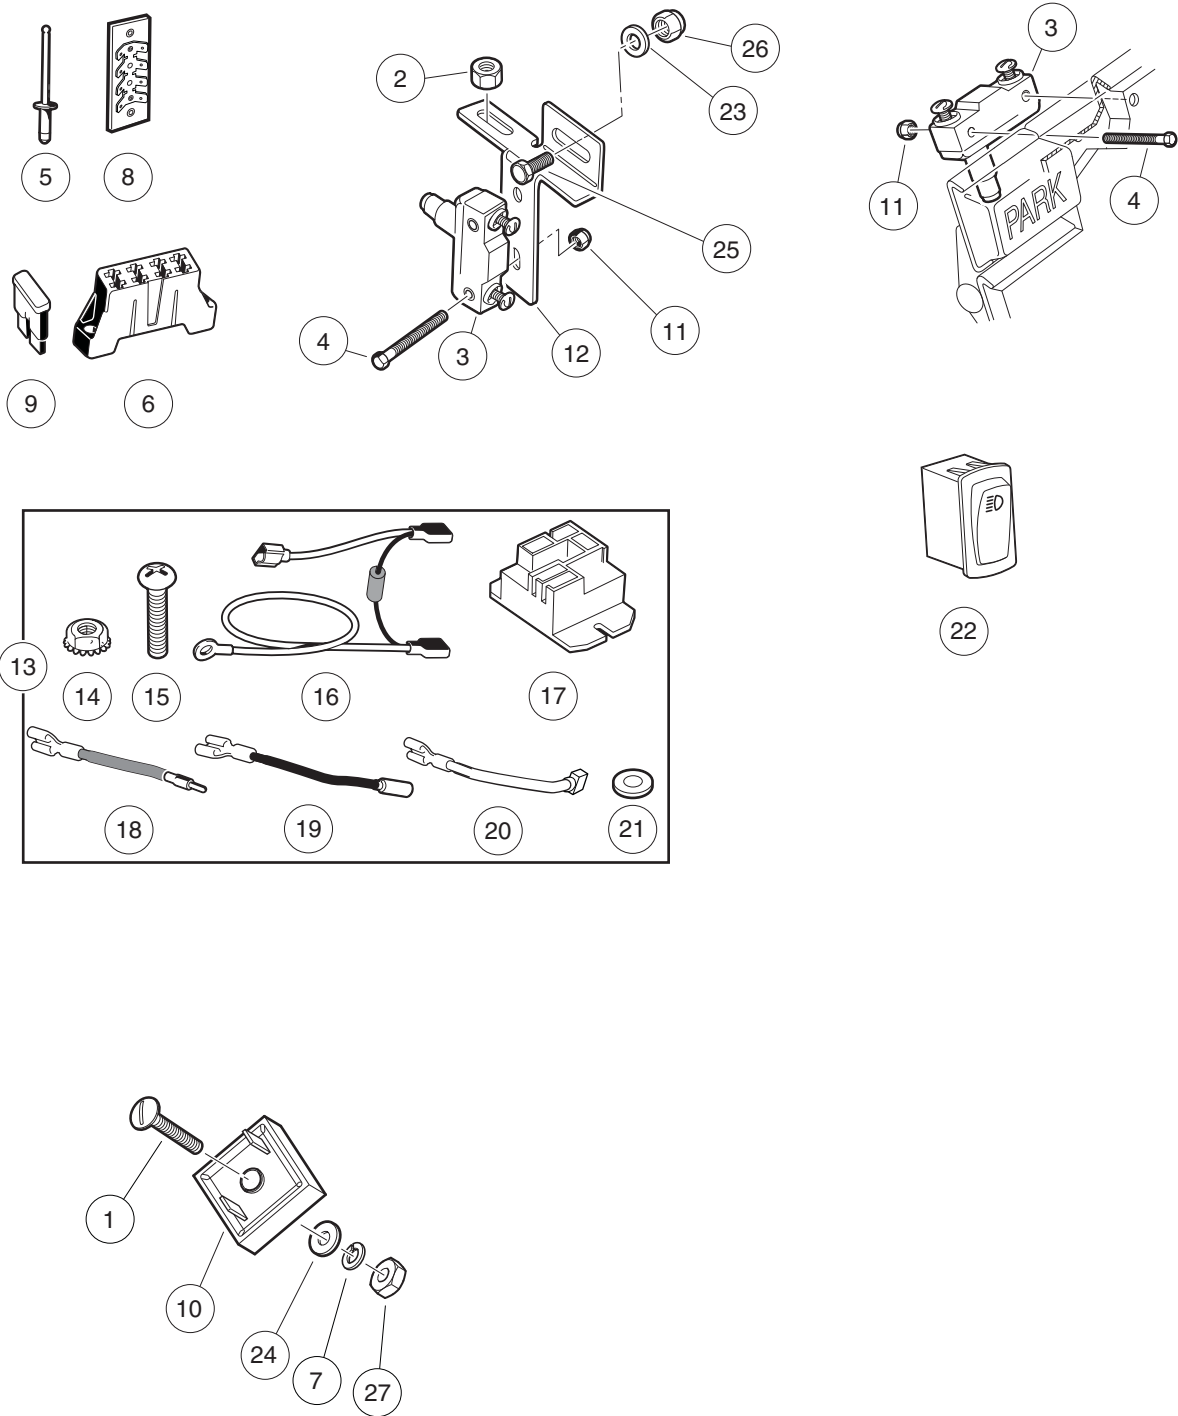

001291-001

LIGHTING SYSTEM COMPONENTS – TRANSPORTATION GASOLINE VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010909</u>	Screw, #10-32 X 1.25 Rd Hd Mch	1
2	<u>1011280</u>	Locknut, 5/16-18	1
3	<u>1011439</u>	Switch, Limit	2
4	<u>1011557</u>	Screw, #6-32 X 1.00 Hex-Head Machine	4
5	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2
6	<u>1015741</u>	Fuse Block	1
7	<u>1016</u>	Lockwasher, #10 Split	1
8	<u>1016356</u>	Terminal Block with Insulator	1
9	<u>1016423</u>	Fuse, 20-Amp	3
10	<u>1017721</u>	Limiter, Voltage	1
11	<u>101932201</u>	Locknut, #6-32 Nylon	4
12	<u>101957101</u>	Bracket, Brake Light Switch	1
13	<u>102198701</u>	Brake Relay Kit - 12v (includes items 14 through 21)	1
14	<u>1011229</u>	Locknut, #6-32 Whiz	2
15	<u>1017853</u>	Screw, #6-32 X 0.75 Hex-Head Machine	2
16	<u>101914401</u>	Assembly, Voltage Suppressor	1
17	<u>102199001</u>	Relay, 12-Volt	1
18	<u>102199201</u>	Wire Asm #18 Brown	1
19	<u>102199301</u>	Wire Asm #18 Black	1
20	<u>102199401</u>	Wire Asm #18 Black	1
21	<u>7591</u>	Washer, #6, Flat	2
22	<u>102869401</u>	Switch, Rocker, Light	1
23	<u>1241</u>	Washer, 5/16 Type A Flat	1
24	<u>183</u>	Washer, #10, Type A, Flat	1
25	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1
26	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1
27	<u>7893</u>	Nut, #10-32 Hex	1
Note: The Villager 6 and 8 gasoline models have wiring for lights built into the main wire harness.			

4
G
E

4

G

E

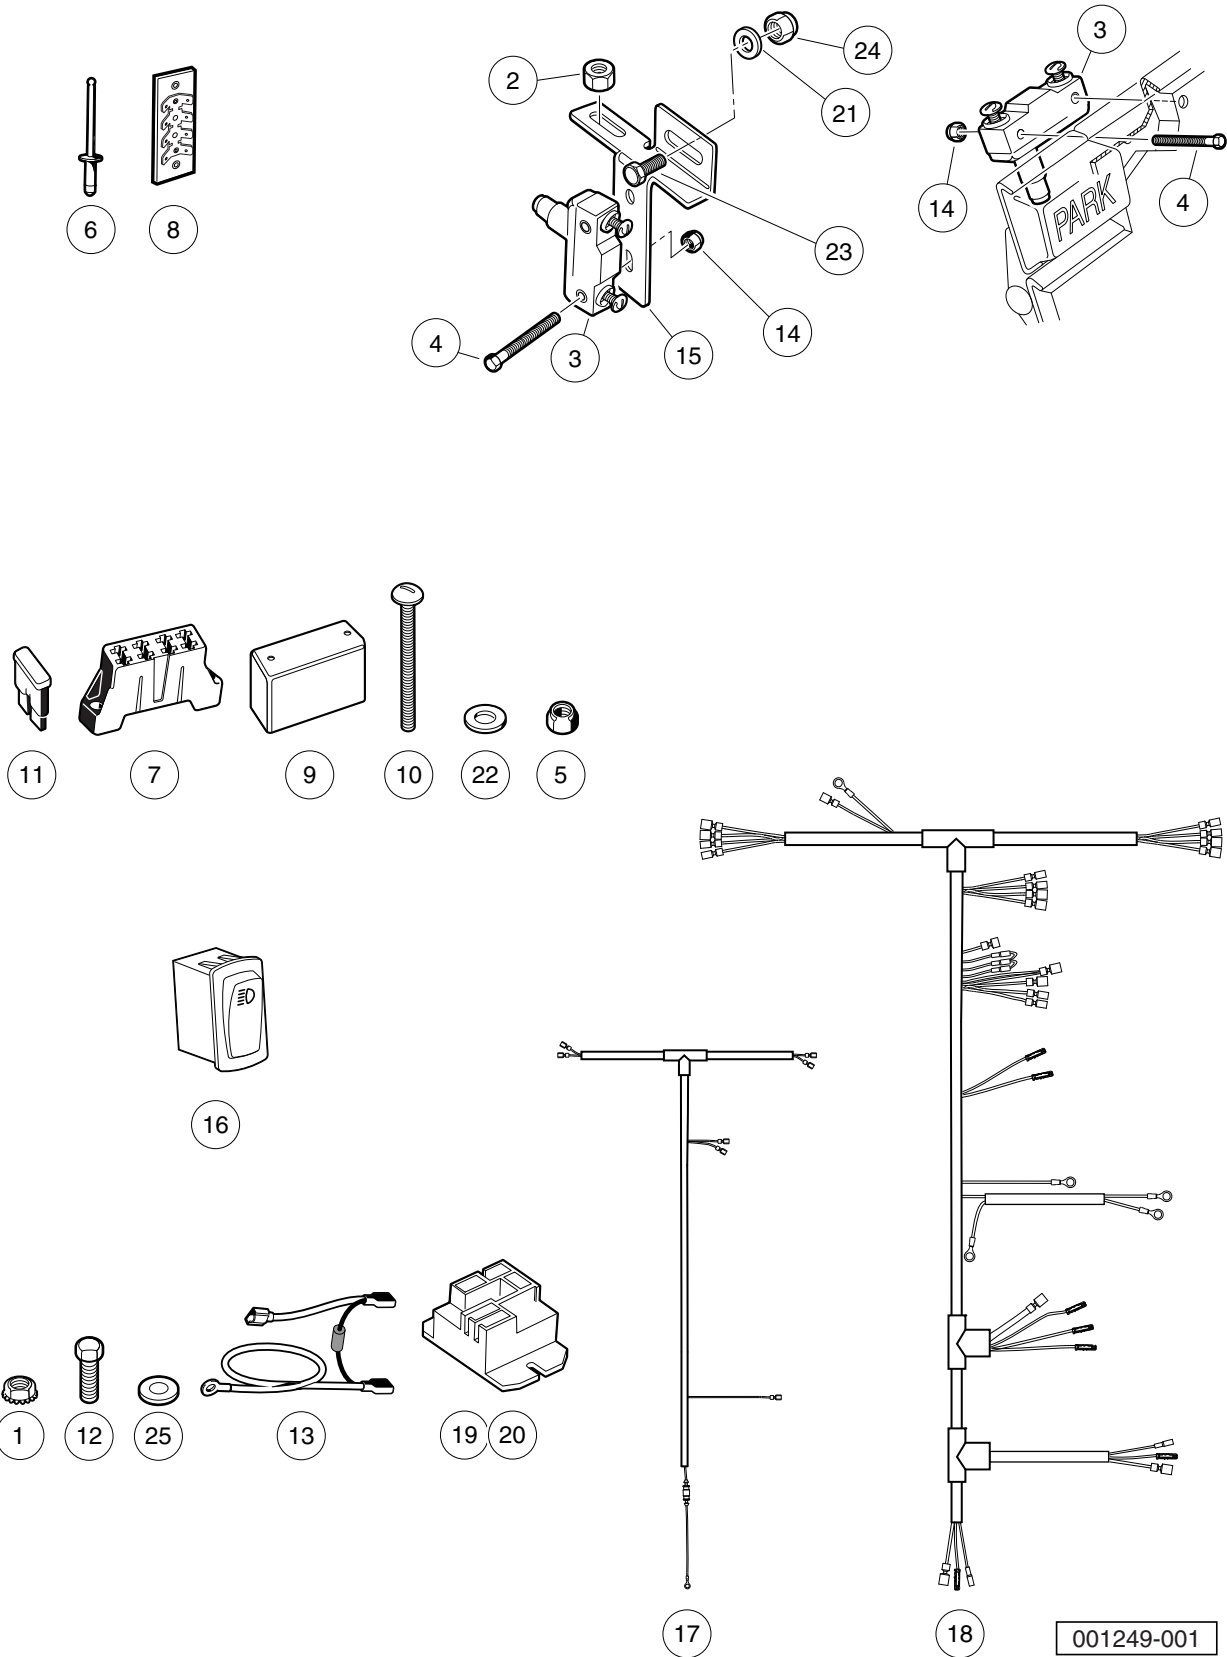

001249-001


LIGHTING SYSTEM COMPONENTS – CA 6 AND VILL. 6 ELEC. WITH IQ PLUS CHARGER

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1011229</u>	Locknut, #6-32 Whiz	2	
2	<u>1011280</u>	Locknut, 5/16-18	1	
3	<u>1011439</u>	Switch, Limit	2	
4	<u>1011557</u>	Screw, #6-32 X 1.00 Hex-Head Machine	4	
5	<u>1012438</u>	Locknut, #10-24 Nylon Insert	2	
6	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2	
7	<u>1015741</u>	Fuse Block	1	
8	<u>1016356</u>	Terminal Block with Insulator	1	
9	<u>1016363</u>	Fuse Block Cover	1	
10	<u>1016366</u>	Screw, #10-24 X 3.0 Pan-Head Machine	2	
11	<u>1016423</u>	Fuse, 20-Amp	3	
12	<u>1017853</u>	Screw, #6-32 X 0.75 Hex-Head Machine	2	
13	<u>101914401</u>	Assembly, Voltage Suppressor	1	
14	<u>101932201</u>	Locknut, #6-32 Nylon	4	
15	<u>101957101</u>	Bracket, Brake Light Switch	1	
16	<u>102869401</u>	Switch, Rocker, Light	1	
17	<u>103255701</u>	Wire Harness, Headlights-Only, CA, Electric	1	
18	<u>103257101</u>	Wire Harness, Lighting Package, Stretch, Electric	1	
19	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes item 20)	1	
20	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1	
21	<u>1241</u>	Washer, 5/16 Type A Flat	1	
22	<u>183</u>	Washer, #10, Type A, Flat	4	
23	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1	
24	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	
25	<u>7591</u>	Washer, #6, Flat	2	
Note: Use item 17 for headlights only. NOTE 2: Use item 18 for headlights and taillights.				

4


G

E

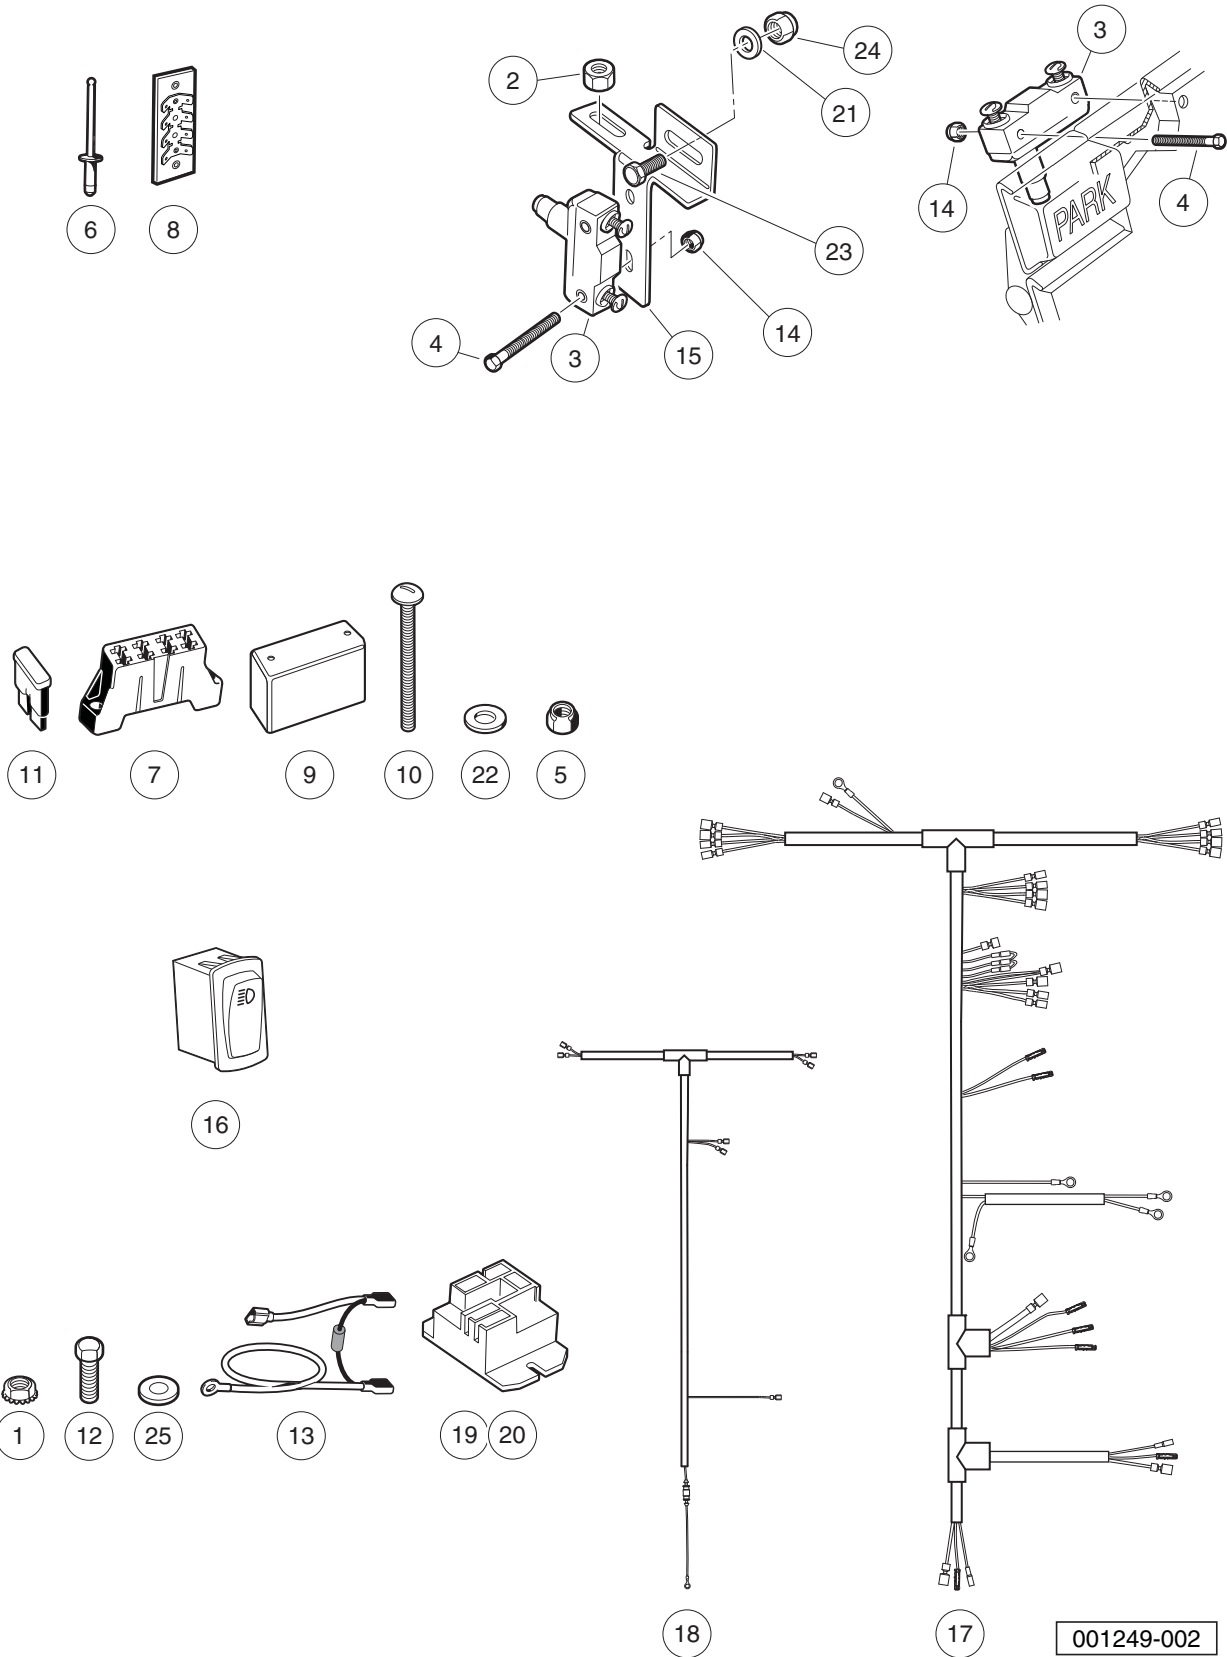

LIGHTING SYSTEM COMPONENTS – VILLAGER 8 ELEC. WITH IQ PLUS CHARGER


ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1011229</u>	Locknut, #6-32 Whiz	2	
2	<u>1011280</u>	Locknut, 5/16-18	1	
3	<u>1011439</u>	Switch, Limit	2	
4	<u>1011557</u>	Screw, #6-32 X 1.00 Hex-Head Machine	4	
5	<u>1012438</u>	Locknut, #10-24 Nylon Insert	2	
6	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2	
7	<u>1015741</u>	Fuse Block	1	
8	<u>1016356</u>	Terminal Block with Insulator	1	
9	<u>1016363</u>	Fuse Block Cover	1	
10	<u>1016366</u>	Screw, #10-24 X 3.0 Pan-Head Machine	2	
11	<u>1016423</u>	Fuse, 20-Amp	3	
12	<u>1017853</u>	Screw, #6-32 X 0.75 Hex-Head Machine	2	
13	<u>101914401</u>	Assembly, Voltage Suppressor	1	
14	<u>101932201</u>	Locknut, #6-32 Nylon	4	
15	<u>101957101</u>	Bracket, Brake Light Switch	1	
16	<u>102869401</u>	Switch, Rocker, Light	1	
17	<u>103254401</u>	Wire Harness, Lght Pkg, V8, El	1	
18	<u>103255701</u>	Wire Harness, Headlights-Only, CA, Electric	1	
19	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes item 20)	1	
20	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1	
21	<u>1241</u>	Washer, 5/16 Type A Flat	1	
22	<u>183</u>	Washer, #10, Type A, Flat	4	
23	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1	
24	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	
25	<u>7591</u>	Washer, #6, Flat	2	
Note: Use item 18 for headlights only. NOTE 2: Use item 17 for headlights and taillights.				

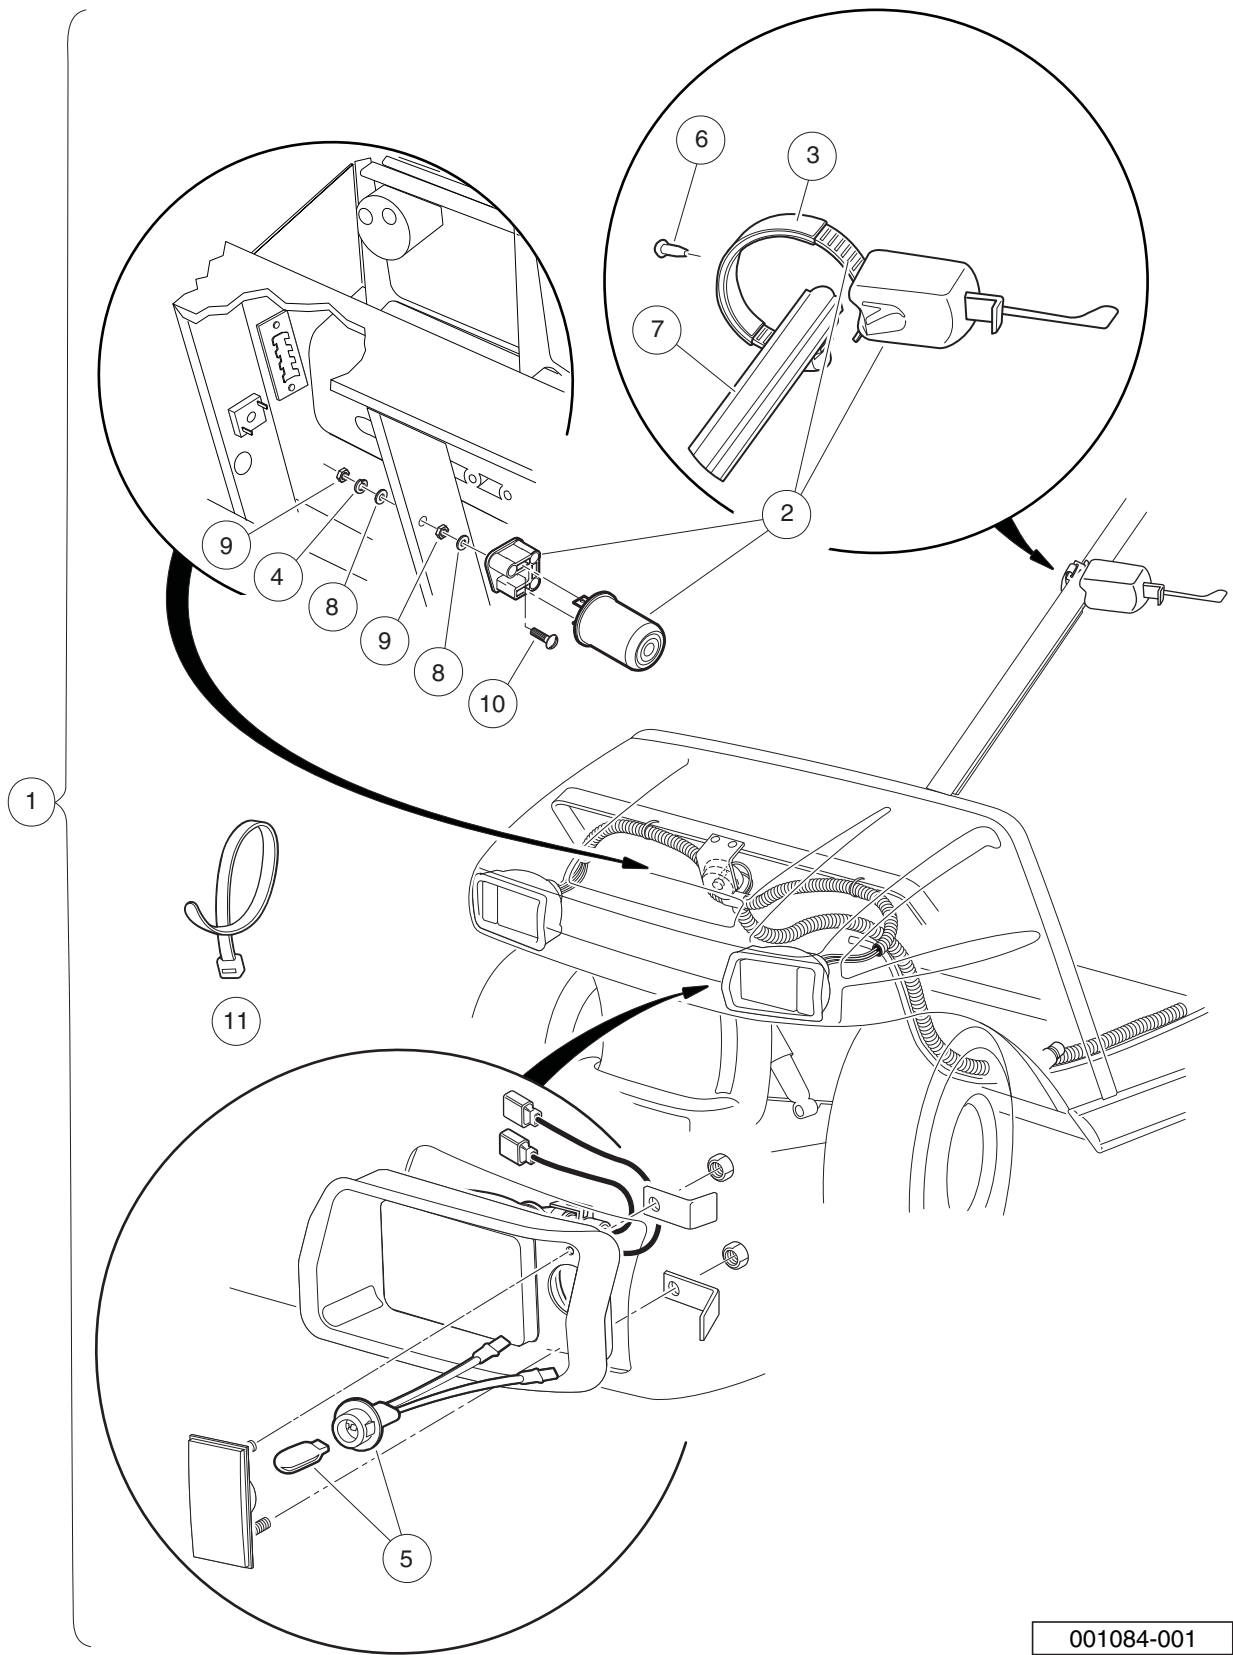

001084-001

TURN SIGNAL KIT – DS AND UTILITY GASOLINE AND ELECTRIC VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	101707402	Turn Signal Conversion Kit (includes items 2 through 11)	1	
2	<u>1011590</u>	Switch Sub-assy, Turn Signal	1	
3	N/A	Strap, Extrusion	1	
4	<u>1016</u>	Lockwasher, #10 Split	1	
5	<u>1017075</u>	Socket & Lamp Assembly	2	
6	<u>1017724</u>	Rivet, Plastic	1	
7	<u>102529201</u>	Wire Cover, Steering Column	1	
8	<u>183</u>	Washer, #10, Type A, Flat	2	
9	<u>7893</u>	Nut, #10-32 Hex	2	
10	8104	Screw, #10-32 X .75 Rd Hd Mach	1	
11	<u>8990</u>	Tie Wrap, 8" Nylon	1	

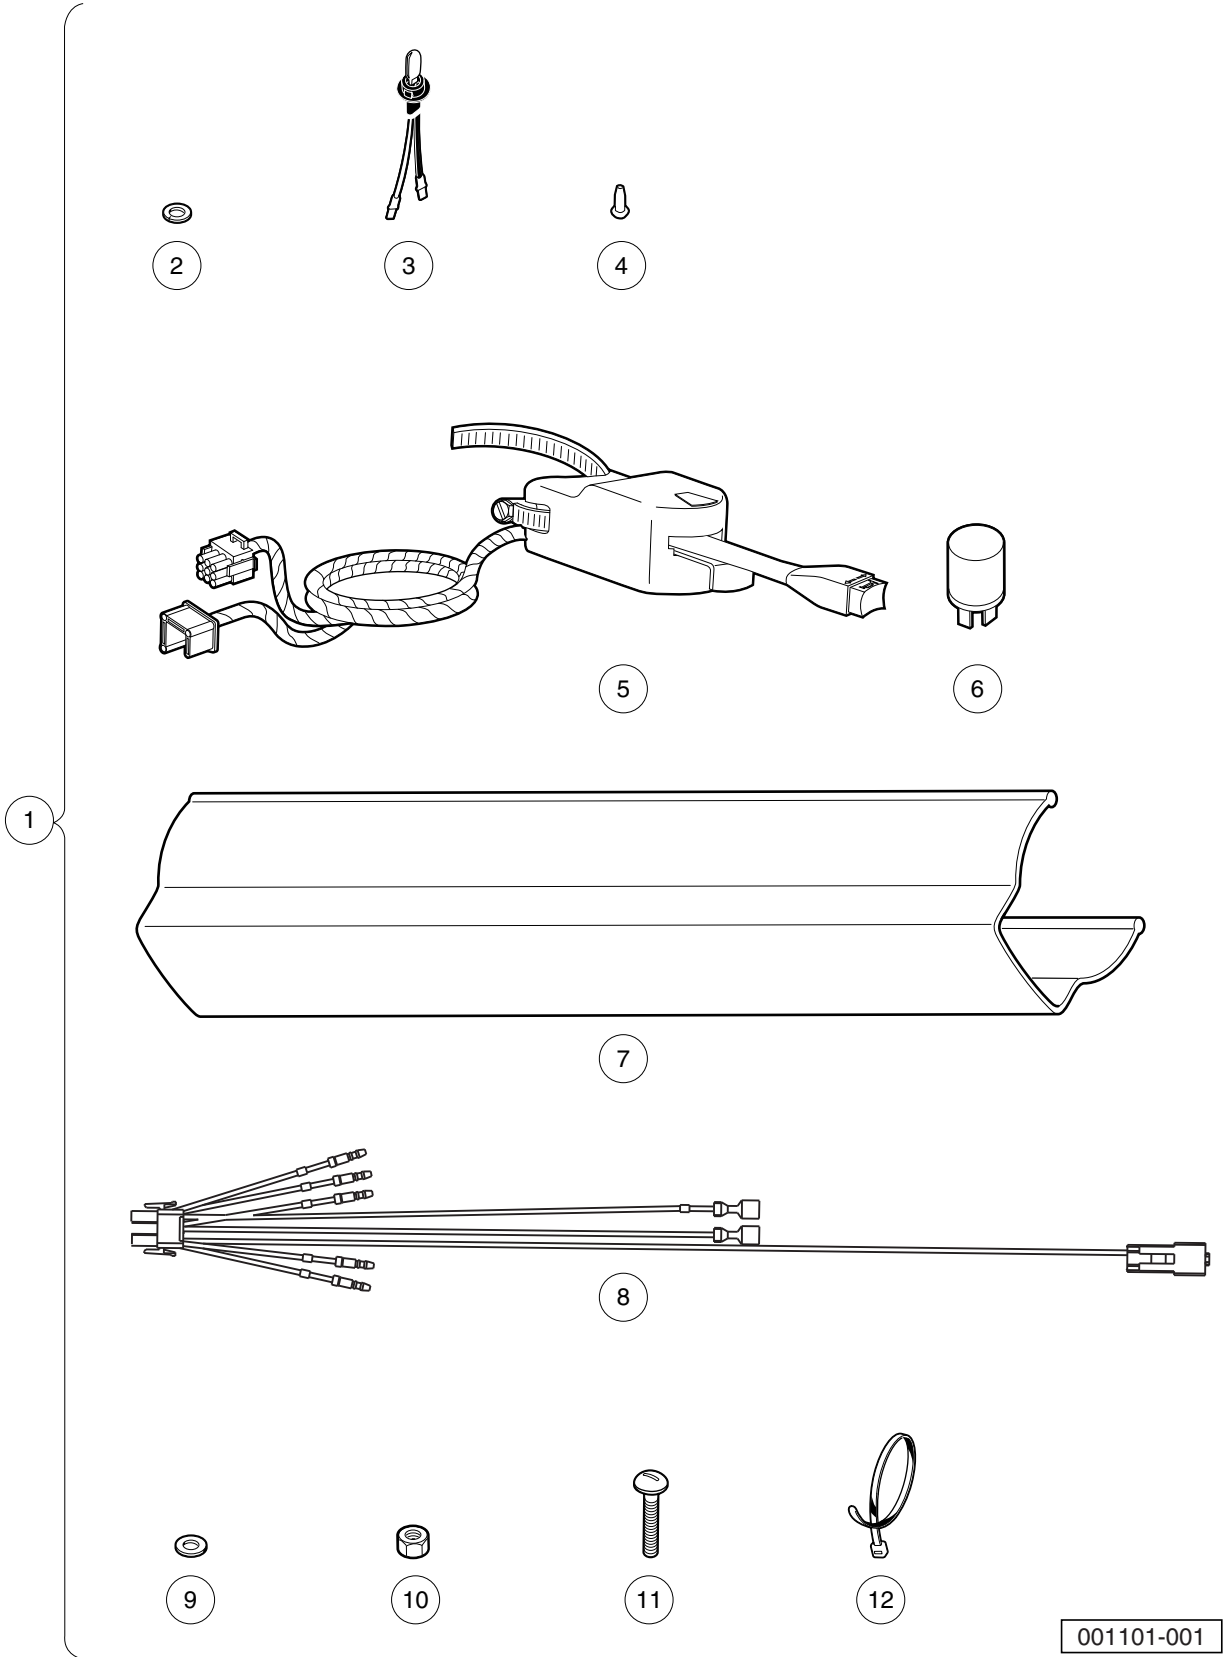

001101-001

TURN SIGNAL (WITH HORN BUTTON) KIT – DS AND UTILITY GAS AND ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	101707405	Kit, Turn Signal-horn (includes items 2 through 12)	1	
2	<u>1016</u>	Lockwasher, #10 Split	1	
3	<u>1017075</u>	Socket & Lamp Assembly	2	
4	<u>1017724</u>	Rivet, Plastic	1	
5	<u>102517501</u>	Turn Signal Asm (includes item 6)	1	
6	<u>102546401</u>	Flasher Unit, Prec	1	
7	<u>102529201</u>	Wire Cover, Steering Column	1	
8	<u>103618001</u>	Harness, Jumper, Turn Signal	1	
9	<u>183</u>	Washer, #10, Type A, Flat	2	
10	<u>7893</u>	Nut, #10-32 Hex	2	
11	8104	Screw, #10-32 X .75 Rd Hd Mach	1	
12	<u>8990</u>	Tie Wrap, 8" Nylon	1	

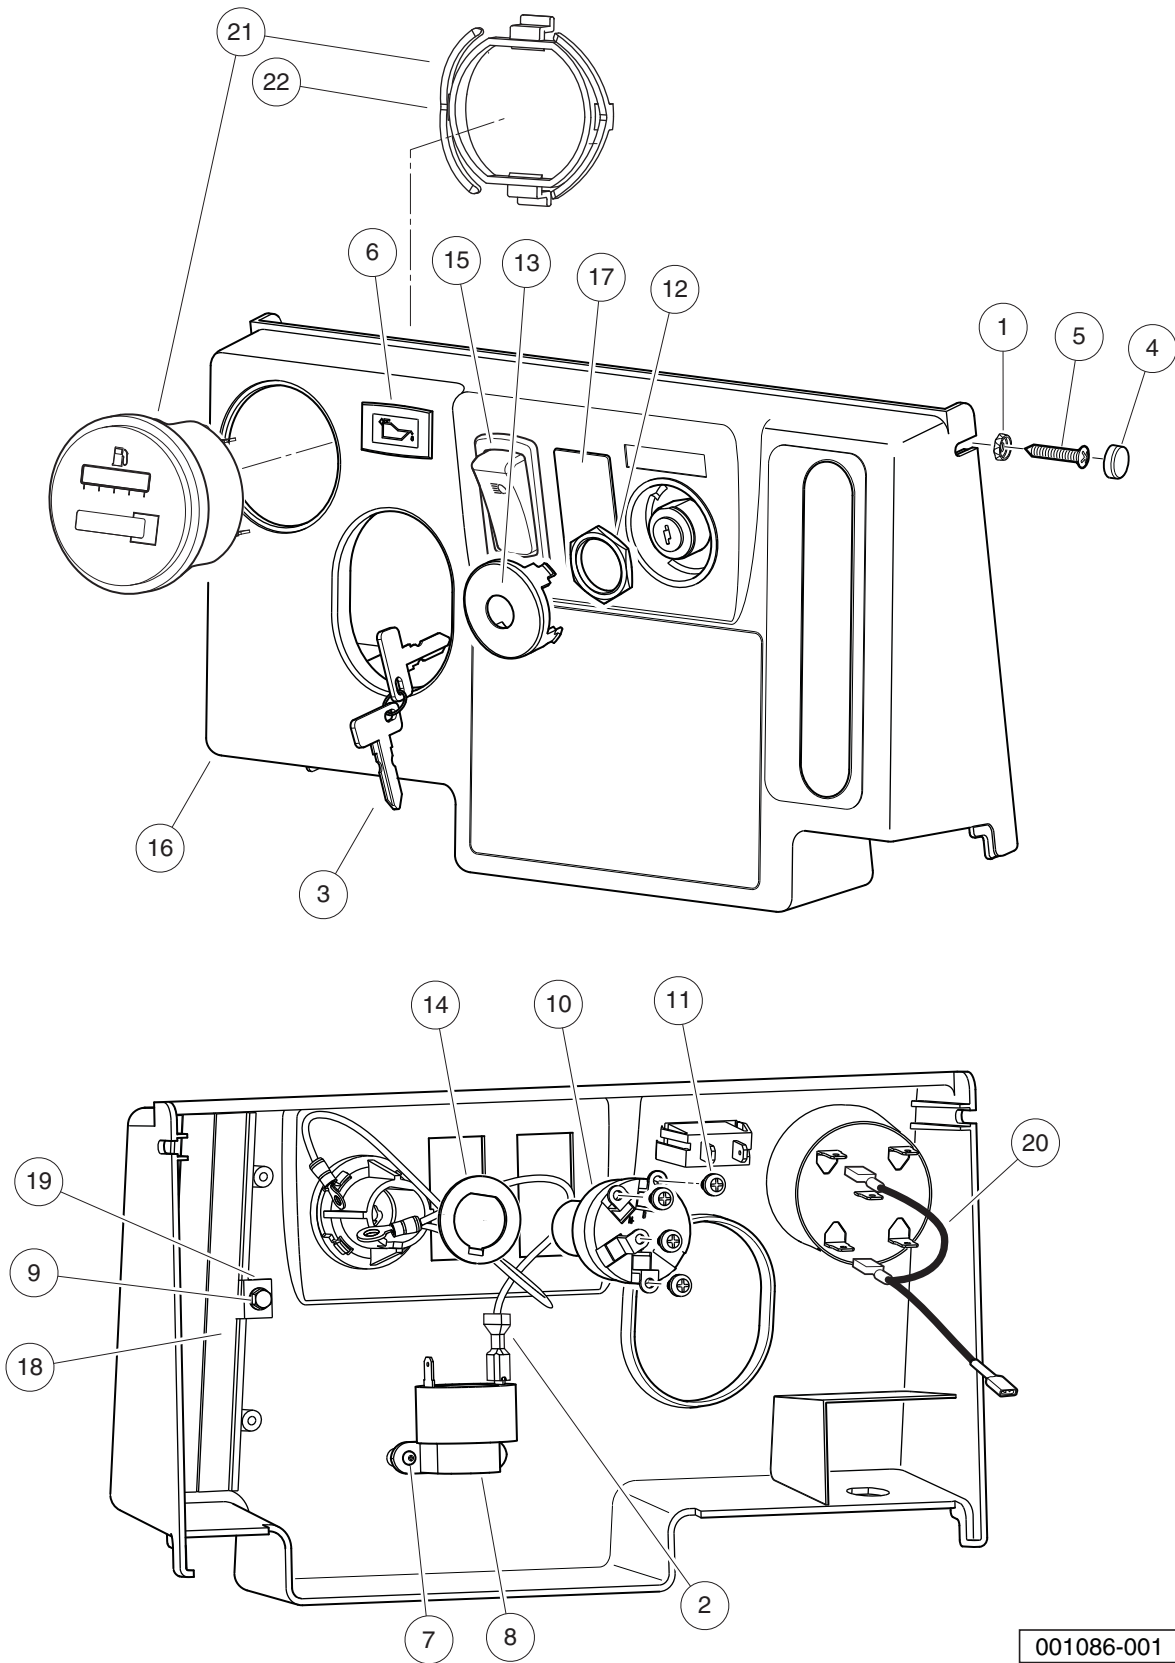

001086-001


INSTRUMENT PANEL AND ELECTRICAL COMPONENTS – CA6/ VILL 6 & 8 GAS

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	1011382	Washer, #10 Pan-Head Screw	2	
2	1012396	Wire Assy #18 Black	1	
3	<u>1012505</u>	Keys (set of 2)	1	
4	<u>1013494</u>	Cover, Screw Head	2	
5	<u>1015528</u>	Screw, #10 x 1-1/4 Phillips Head	2	
6	<u>1016630</u>	Light, Oil	1	
7	<u>1016849</u>	Screw, #4-24 X 0.33, Pan-Head, Machine	2	
8	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1	
9	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	2	
10	101826401	Key Switch, 12-Volt, Off/On/Start	1	
11	101830601	Screw and Washer Assembly	5	
12	<u>101830701</u>	Nut, Key Switch	1	
13	<u>101834502</u>	Cap, Black Key Switch	1	
14	<u>101851101</u>	Washer, Key Switch	1	
15	<u>102869401</u>	Switch, Rocker, Light	1	
16	<u>102977001</u>	Panel, Dash, Center, Gas (Instrument Panel)	1	
17	<u>103180101</u>	Cover, Hole, Switch, Rocker	1	
18	<u>103199001</u>	Brush, Closeout, FNR	2	
19	<u>103199101</u>	Washer, Retaining, Brush, FNR	2	
20	<u>103348501</u>	Asm, Wire Meter, F-h Jumper	1	
21	<u>103348601</u>	Gauge, Fuel-hour,sep Gnd,utl (includes item 22)	1	
22	<u>103348201</u>	Clip, Meter, Round	1	

4

G

E

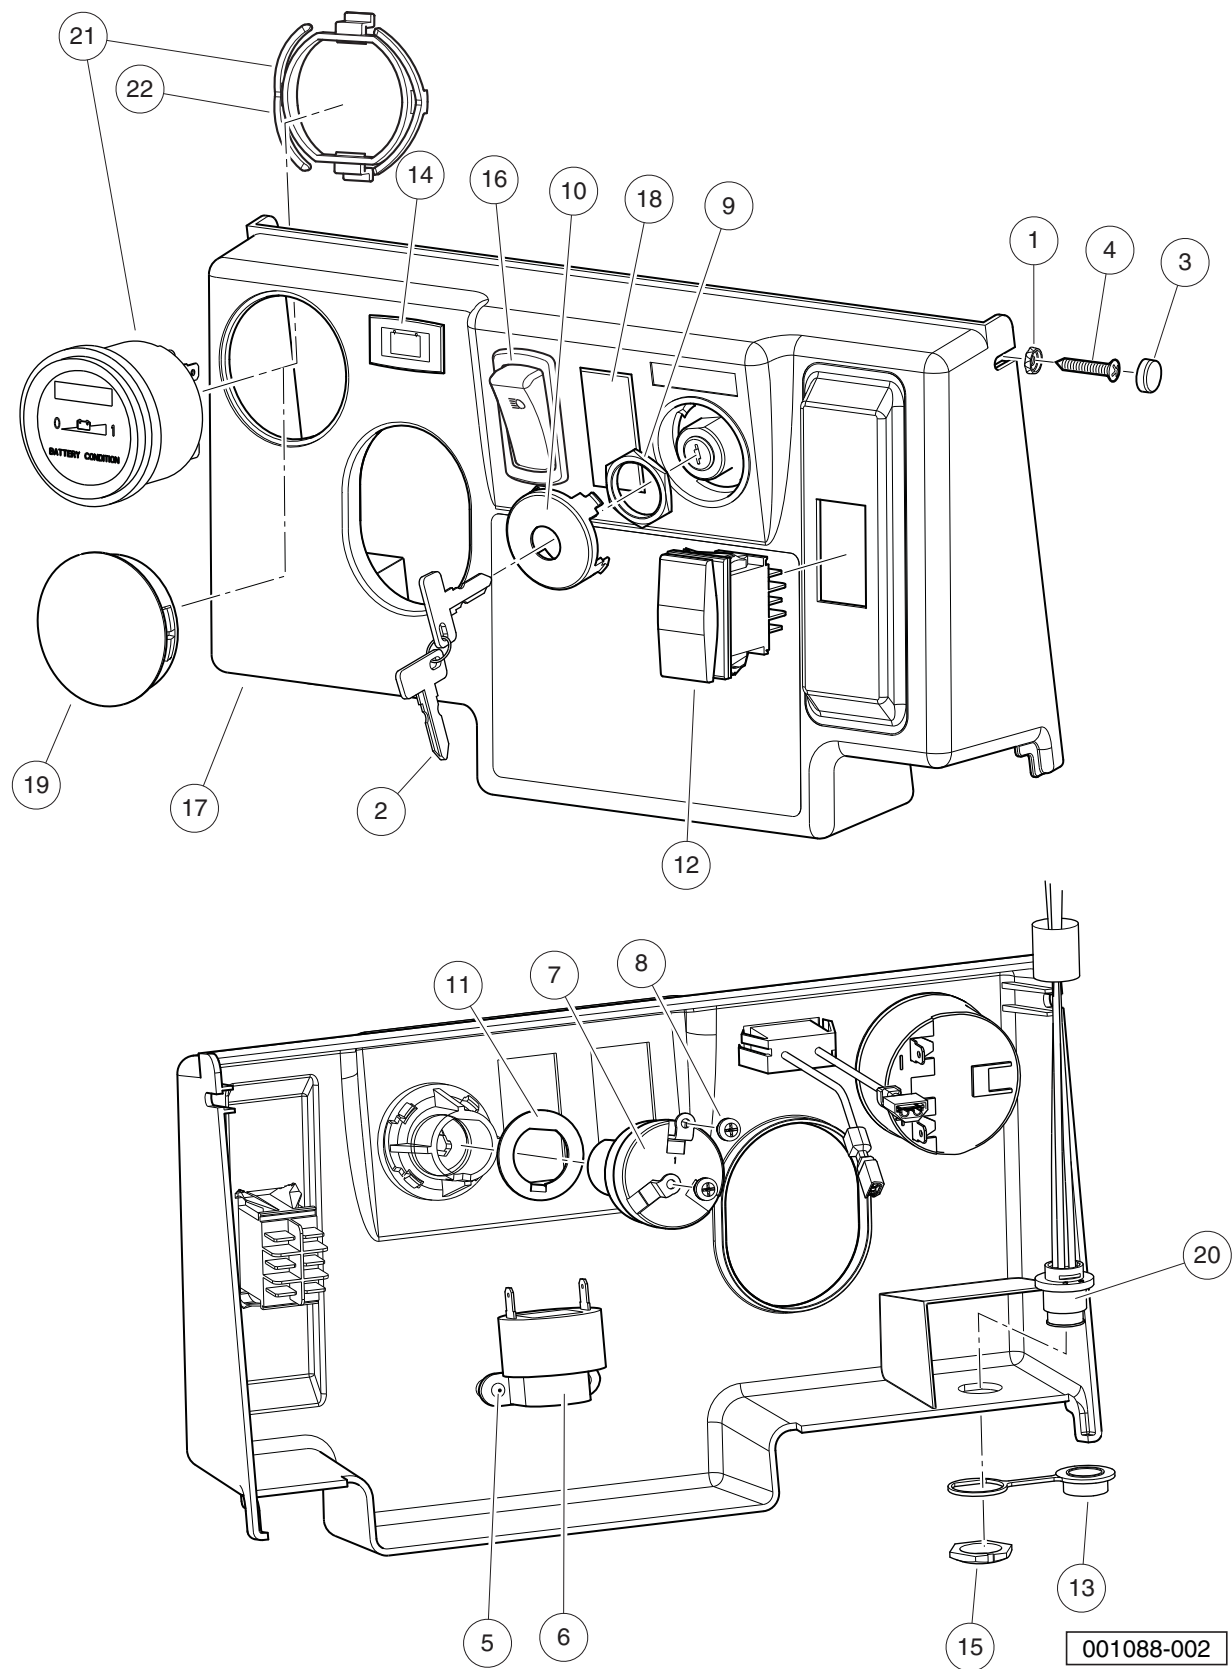


INSTRUMENT PANEL WITH ELECTRICAL COMPONENTS – CA6/ VILL 6/8 ELEC. W/LESTER CHARGER

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	1011382	Washer, #10 Pan-Head Screw	2	
2	<u>1012505</u>	Keys (set of 2)	1	
3	<u>1013494</u>	Cover, Screw Head	2	
4	<u>1015528</u>	Screw, #10 x 1-1/4 Phillips Head	2	
5	<u>1016849</u>	Screw, #4-24 X 0.33, Pan-Head, Machine	2	
6	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1	
7	<u>101826201</u>	Key Switch, On/Off	1	
8	101830601	Screw and Washer Assembly	2	
9	<u>101830701</u>	Nut, Key Switch	1	
10	<u>101834502</u>	Cap, Black Key Switch	1	
11	<u>101851101</u>	Washer, Key Switch	1	
12	<u>101856002</u>	Switch, Rocker, Single-Pole	1	
13	<u>102196901</u>	Dust Cap	1	
14	<u>102508701</u>	Light, Battery	1	
15	<u>102572401</u>	Nut, Diagnostic Port, Prec	1	
16	<u>102869401</u>	Switch, Rocker, Light	1	
17	<u>102977002</u>	Panel, Dash, Center, Elec (Instrument Panel)	1	
18	<u>103180101</u>	Cover, Hole, Switch, Rocker	1	
19	<u>103198301</u>	Plug, Hole, Round, 2.0 In	1	
20	<u>103218601</u>	Harness, Diagnostic Port	1	
21	<u>103354401</u>	Gauge, Battery Cond Ind, Rnd (includes item 22)	1	
22	<u>103348202</u>	Clip, Bci, Round	1	

4

G


E

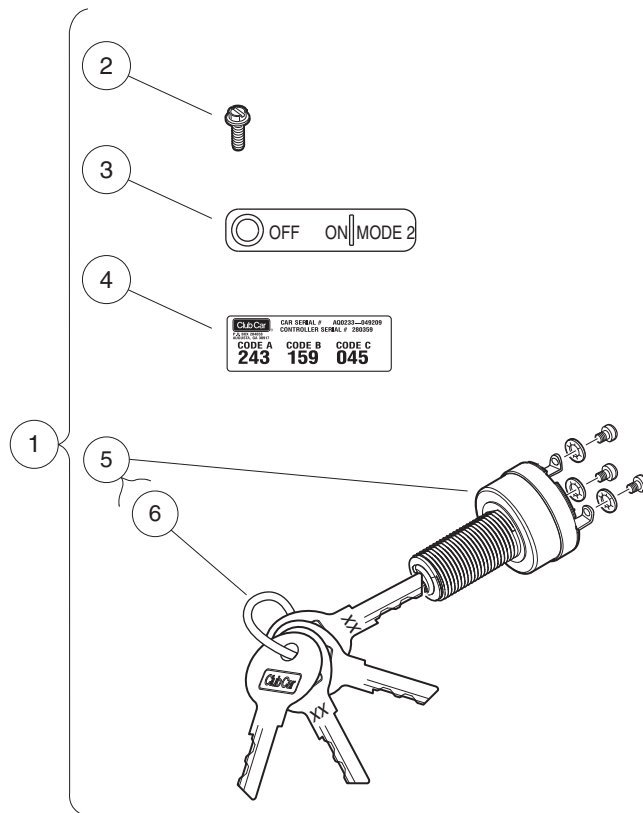

001212-001

KEYS AND KEYSWITCHES, SMARTKEY KIT – ELECTRIC VEHICLE


ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>102962602</u>	Kit, Field, Smartkey (includes items 2 through 5)	1	
2	<u>1011017</u>	Screw, #8-32 X 0.375	1	
3	<u>101825103</u>	Decal, Keyswitch, Iq Plus Mode	1	
4	N/A	Decal, Passcode	1	
5	<u>102950301</u>	Key Switch, Mode B, Iq Plus (includes item 6)	1	
6	<u>102962303</u>	Keys, Set Of 4, Iq Plus Mode	1	
		Note: Not available in the EU.		

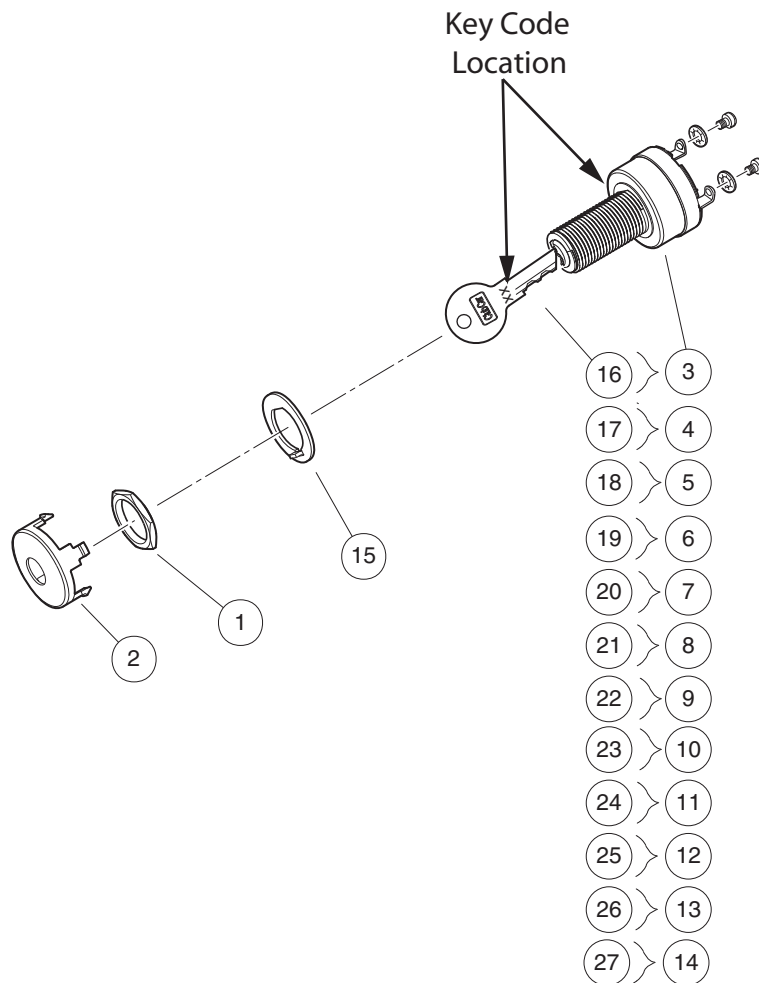

001089-001

KEYS AND KEYSWITCHES, UNCOMMON – GAS VEHICLE


ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>101830701</u>	Nut, Key Switch	1	
2	<u>101834502</u>	Cap, Black Key Switch	1	
3	<u>101839801</u>	Keyswtch Uncom A408 On/off/st	1	
4	<u>101839802</u>	Keyswtch Uncom B408 On/off/st	1	
5	<u>101839803</u>	Keyswtch Uncom C408 On/off/st	1	
6	<u>101839804</u>	Keyswtch Uncom D408 On/off/st	1	
7	<u>101839805</u>	Keyswtch Uncom 2a408 On/off/st	1	
8	<u>101839806</u>	Keyswtch Uncom 2b408 On/off/st	1	
9	<u>101839807</u>	Keyswtch Uncom 2c408 On/off/st	1	
10	<u>101839808</u>	Keyswtch Uncom 2d408 On/off/st	1	
11	<u>101839809</u>	Keyswtch Uncom E408 On/off/st	1	
12	<u>101839810</u>	Keyswtch Uncom F408 On/off/st	1	
13	<u>101839811</u>	Keyswtch Uncom 2e408 On/off/st	1	
14	<u>101839812</u>	Keyswtch Uncom 2f408 On/off/st	1	
15	<u>101851101</u>	Washer, Key Switch	1	
16	<u>101974701</u>	Key, Uncommon 1a	1	
17	<u>101974702</u>	Key, Uncommon 1b	1	
18	<u>101974703</u>	Key, Uncommon 1c	1	
19	<u>101974704</u>	Key, Uncommon 1d	1	
20	<u>101974705</u>	Key, Uncommon 2a	1	
21	<u>101974706</u>	Key, Uncommon 2b	1	
22	<u>101974707</u>	Key, Uncommon 2c	1	
23	<u>101974708</u>	Key, Uncommon 2d	1	
24	<u>101974709</u>	Key, Uncommon 1e	1	
25	<u>101974710</u>	Key, Uncommon 1f	1	
26	<u>101974711</u>	Key, Uncommon 2e	1	
27	<u>101974712</u>	Key, Uncommon 2f	1	
Note: Keyswitches <u>101839801</u> through <u>101839812</u> are for key-start, gasoline vehicles ONLY.				

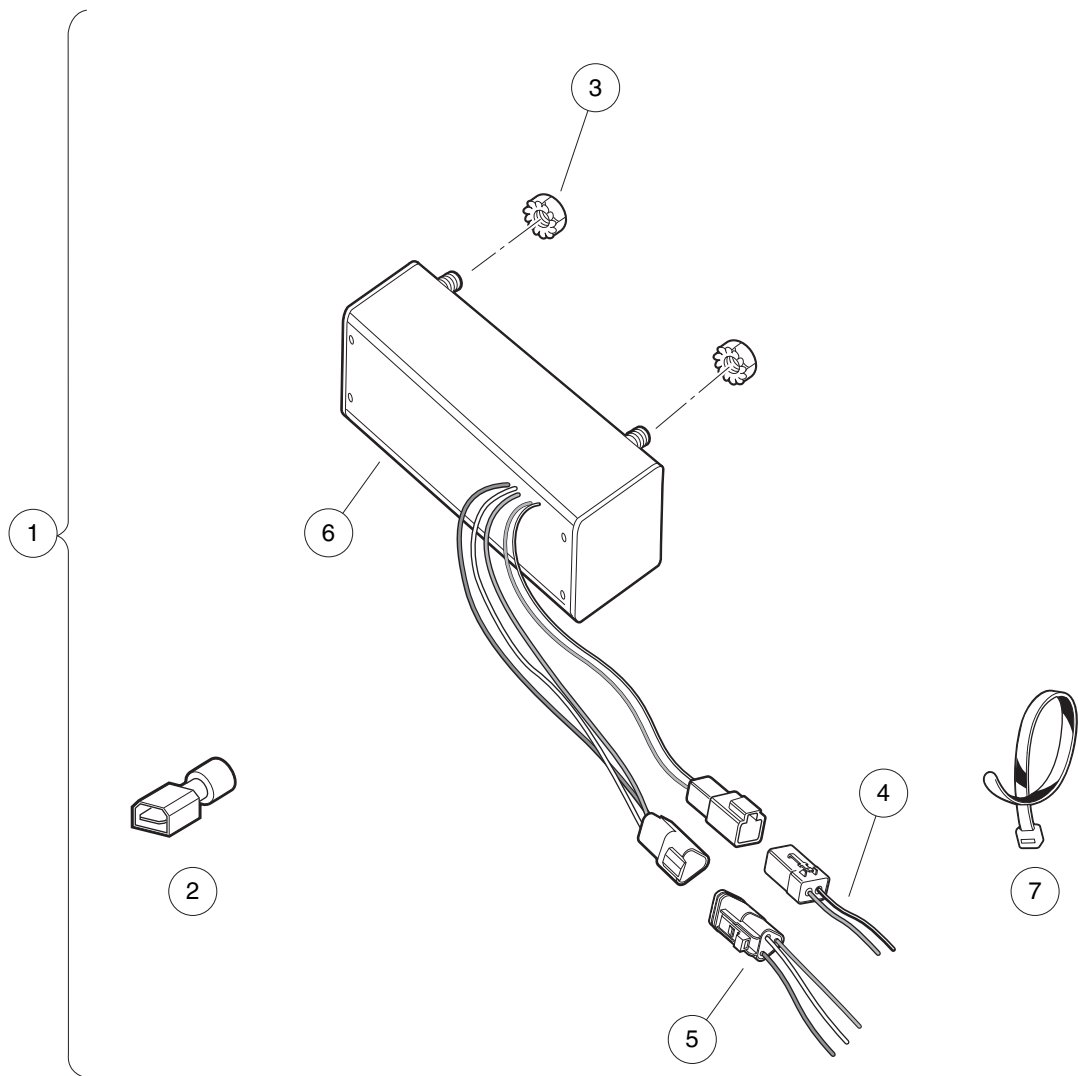

001090-002

DC CONVERTER (ISOLATED) – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>102918701</u>	Kit, DC/DC Converter, IQ Plus (includes items 2 through 7)	1	
2	<u>1016365</u>	Terminal, 1/4" Male Quick Disconnect	1	
3	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	2	
4	<u>102354901</u>	Harness, Dc Converter - 12v	1	
5	<u>102890201</u>	Harness, Dc Converter, 48v	1	
6	<u>103700301</u>	Converter, Dc/dc, Isoltd	1	
7	<u>8990</u>	Tie Wrap, 8" Nylon	10	

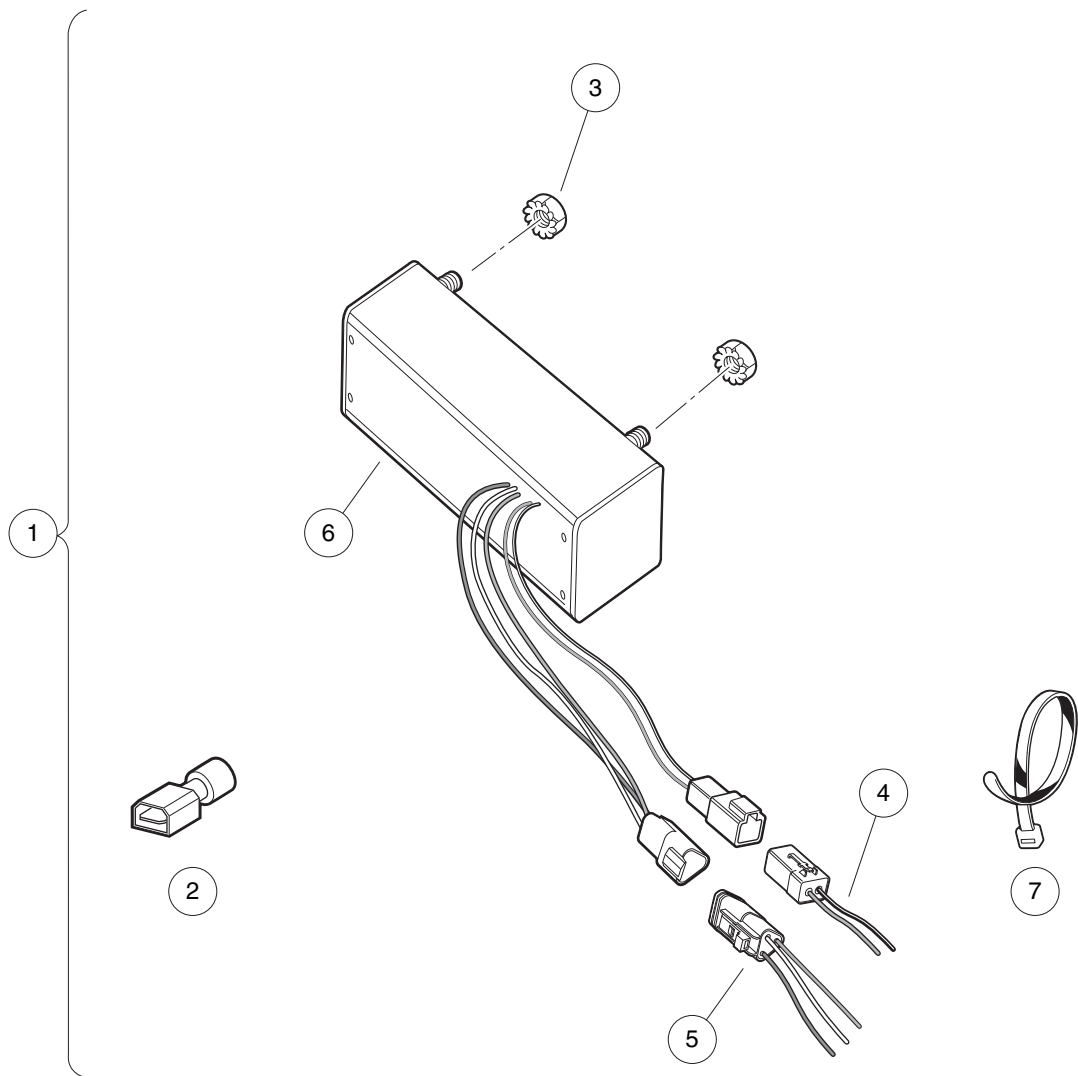

001090-002


DC CONVERTER (ISOLATED) – CE ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>102918702</u>	Kit, Dc Conv. Iq Plus Ce (includes items 2 through 7)	1	
2	<u>1016365</u>	Terminal, 1/4" Male Quick Disconnect	1	
3	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	2	
4	<u>102354901</u>	Harness, Dc Converter - 12v	1	
5	<u>102890201</u>	Harness, Dc Converter, 48v	1	
6	<u>103802401</u>	Converter, Dc/dc, Ce	1	
7	<u>8990</u>	Tie Wrap, 8" Nylon	10	

4

G


E

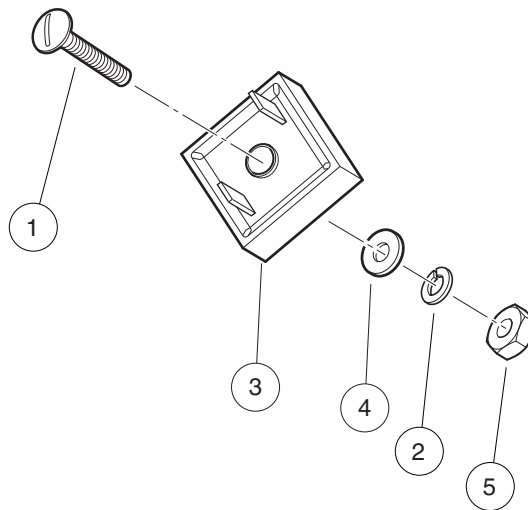

001091-001

VOLTAGE LIMITER – GASOLINE VEHICLE


ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		4
1	<u>1010909</u>	Screw, #10-32 X 1.25 Rd Hd Mch	1	G
2	<u>1016</u>	Lockwasher, #10 Split	1	E
3	<u>1017721</u>	Limiter, Voltage	1	
4	<u>183</u>	Washer, #10, Type A, Flat	1	
5	<u>7893</u>	Nut, #10-32 Hex	1	

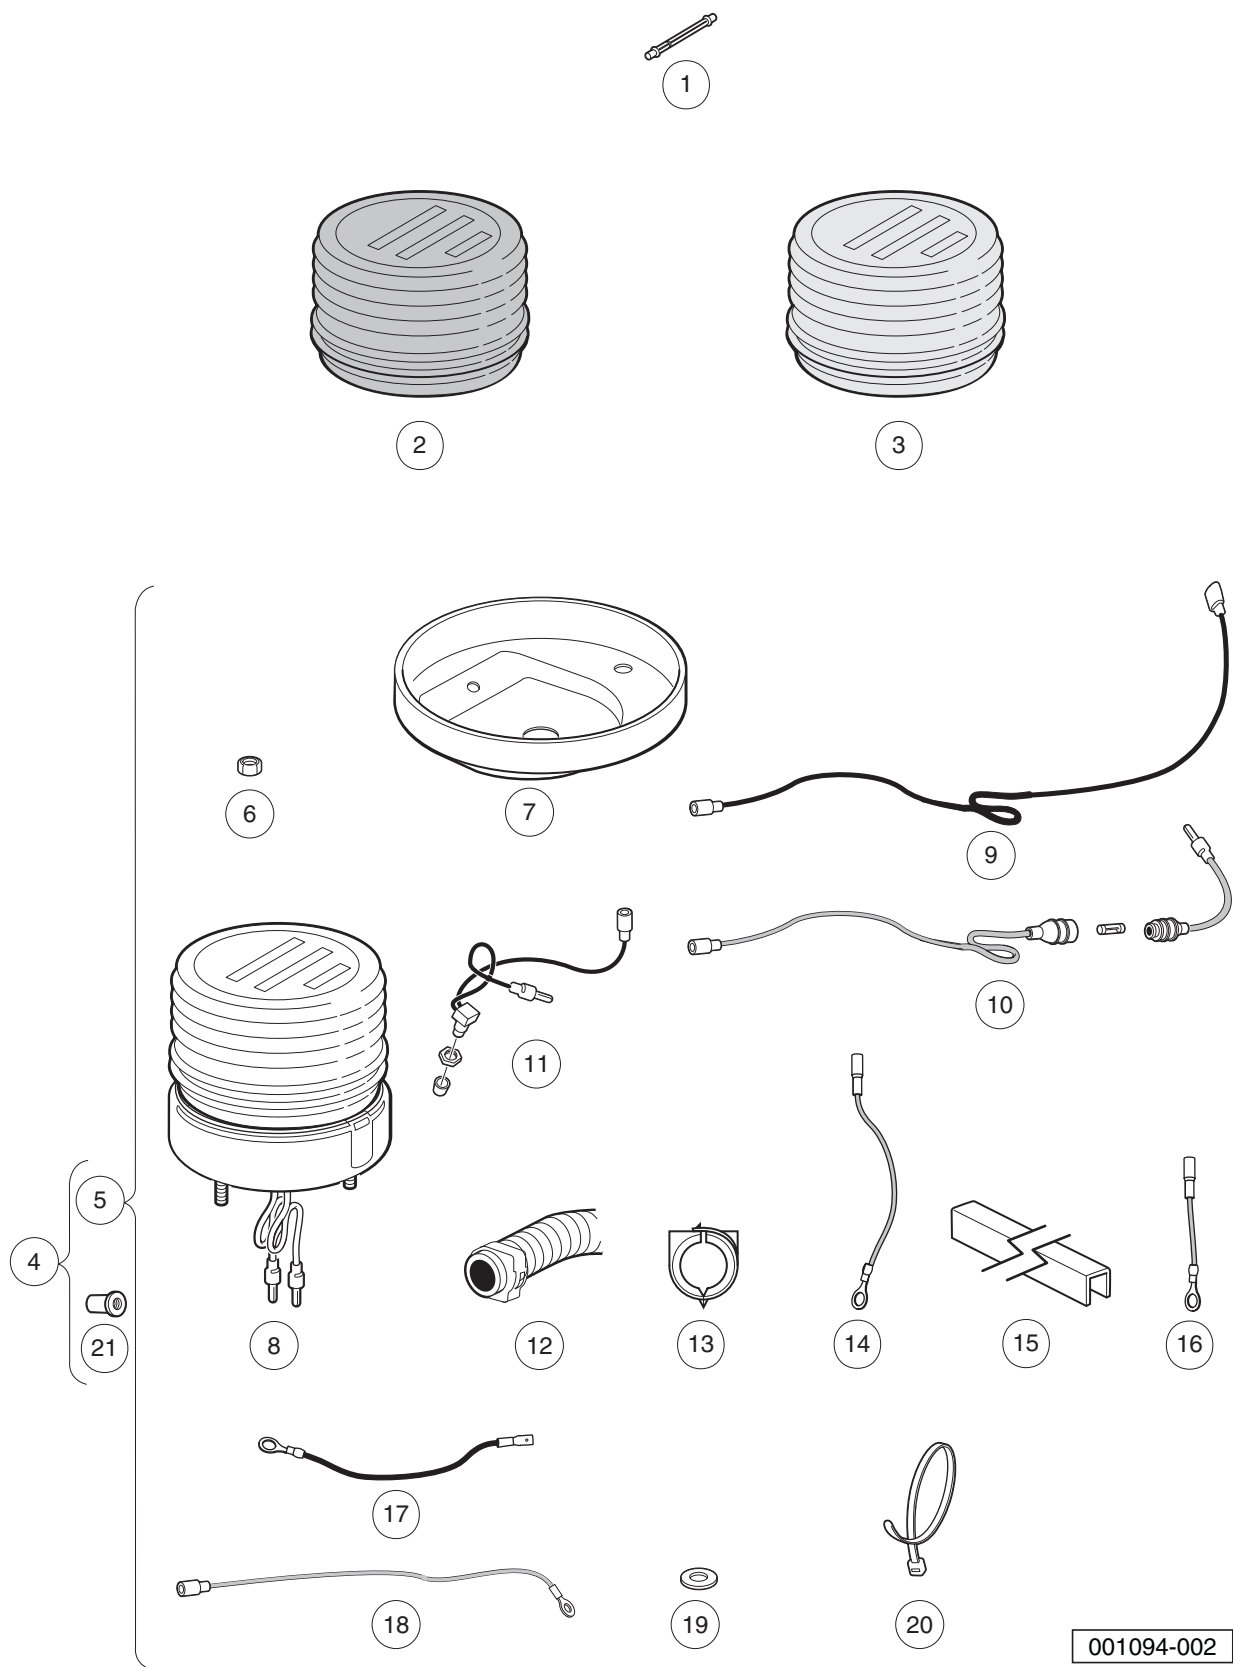

001094-002

STROBE LIGHT, ROOF-MOUNTED


ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>1015526</u>	Bulb, Replacement, for Strobe Light	1	E
2	<u>AM1243701</u>	Lens, Blue, for Strobe Light	A/R	
3	<u>AM1243801</u>	Lens, Red, for Strobe Light	A/R	
4	<u>SVP119201</u>	Light, Roof-Mounted Strobe, Field (includes items 5 through 21)	A/R	
5	<u>AM1243501</u>	Kit, Roof Mounted Strobe Fd (includes items 6 through 20)	1	
6	<u>1012438</u>	Locknut, #10-24 Nylon Insert	2	
7	<u>1015010</u>	Cover Plate Switch	1	
8	<u>1015156</u>	Light Assembly, Strobe	1	
9	<u>1015167</u>	#16 Black Wire Asm	1	
10	<u>1015170</u>	Wire Assembly #16	1	
11	<u>1015187</u>	Switch Assembly	1	
12	<u>1015768</u>	Split Convoluted Elec Conduit	11	
13	<u>1015770</u>	Outlet Ring - .5 Diameter	5	
14	<u>1016230</u>	Wire Asm #16 Red	1	
15	<u>1016267</u>	Snap On Conduit Vert.	1	
16	<u>1016287</u>	Wire Asm #16 Red	1	
17	<u>1016929</u>	Wire Assembly Black #16	1	
18	<u>101821601</u>	#18 Red Wire Assembly	1	
19	<u>183</u>	Washer, #10, Type A, Flat	2	
20	<u>8639</u>	Tie Wrap, 11" Nylon	8	
21	<u>SVP493201</u>	Well Nut, 10-32	3	

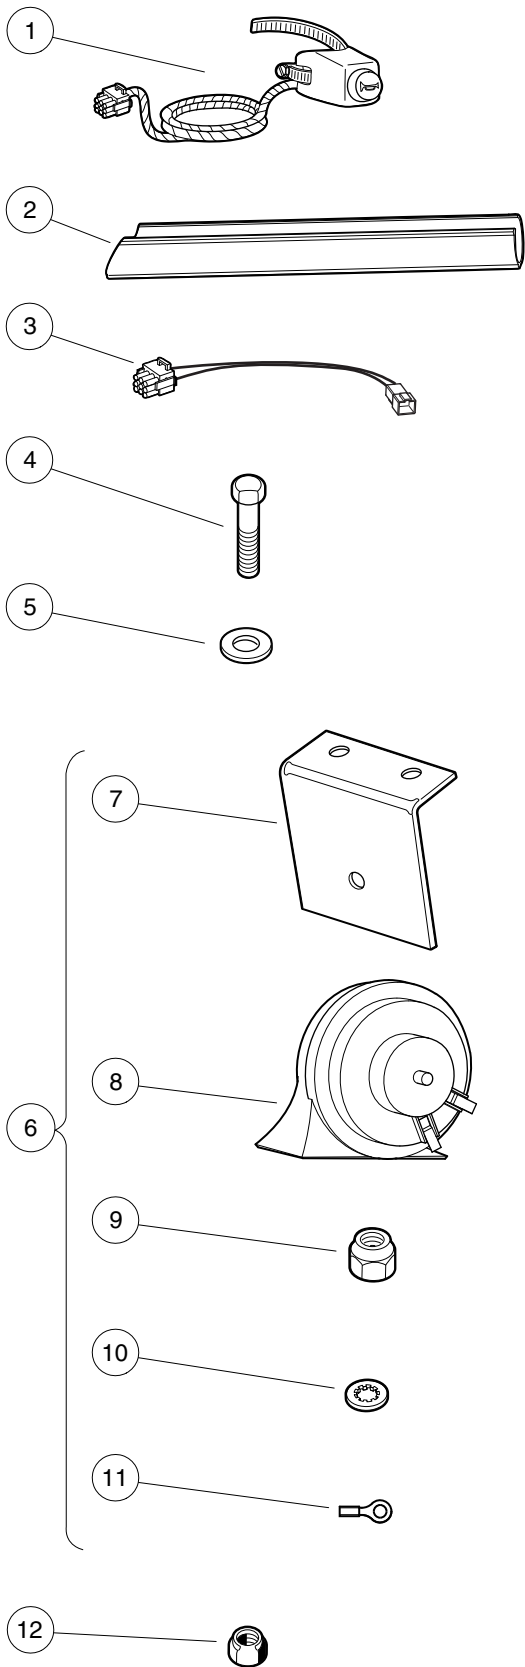

001095-002

HORN WITH COLUMN-MOUNTED BUTTON


ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	102517601	Subasm, Horn Button Harness	1	E
2	<u>102529203</u>	Wire Cover-steer Column 304 Mm	1	
3	<u>103618101</u>	Harness, Jumper, Horn	1	
4	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	2	
5	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2	
6	<u>4029</u>	Horn (includes items 7 through 11)	1	
7	<u>1011825</u>	Horn Bracket	1	
8	<u>1014530</u>	Horn, 12-VDC	1	
9	<u>101955101</u>	Nut, M6 Hex	1	
10	<u>7820</u>	Washer, 5/16 Internal-Tooth	1	
11	8294	5/16 Ring Term.	1	
12	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2	

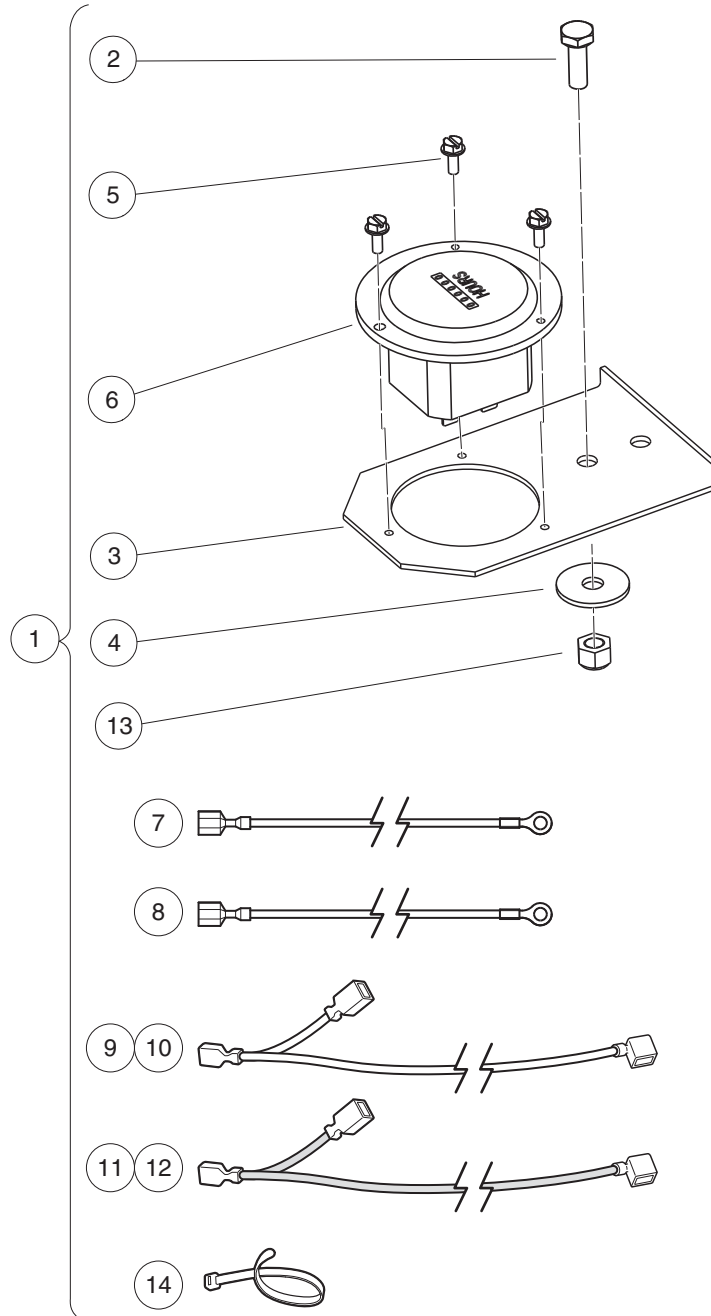

001096-001

HOUR METER – IQ SYSTEM AND IQ PLUS ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1013579</u>	Kit, Hour Meter (includes items 2 through 14)	1	
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	1	
3	<u>1013547</u>	Hour Meter Bracket	1	
4	<u>1014306</u>	Washer, 1/4" Type B Flat	1	
5	<u>1014540</u>	Screw, #6-32 X 3/8 Taptite	3	
6	N/A	Hour Meter	1	
7	101881501	Wire Assembly Black #18	1	
8	101881601	Wire Assembly Red #18	1	
9	<u>101997802</u>	Wire Assembly #18 Yellow	1	
10	<u>101997803</u>	Wire Asm #18 Yellow 31"	1	
11	<u>101997902</u>	Wire Assembly #18 Red	1	
12	<u>101997903</u>	Wire Asm # 18 Red 31"	1	
13	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	1	
14	<u>8990</u>	Tie Wrap, 8" Nylon	1	
Note: The kit includes components that apply to multiple vehicles. The installation instructions will specify which components are required for a specific model. After installation, discard components not used.				

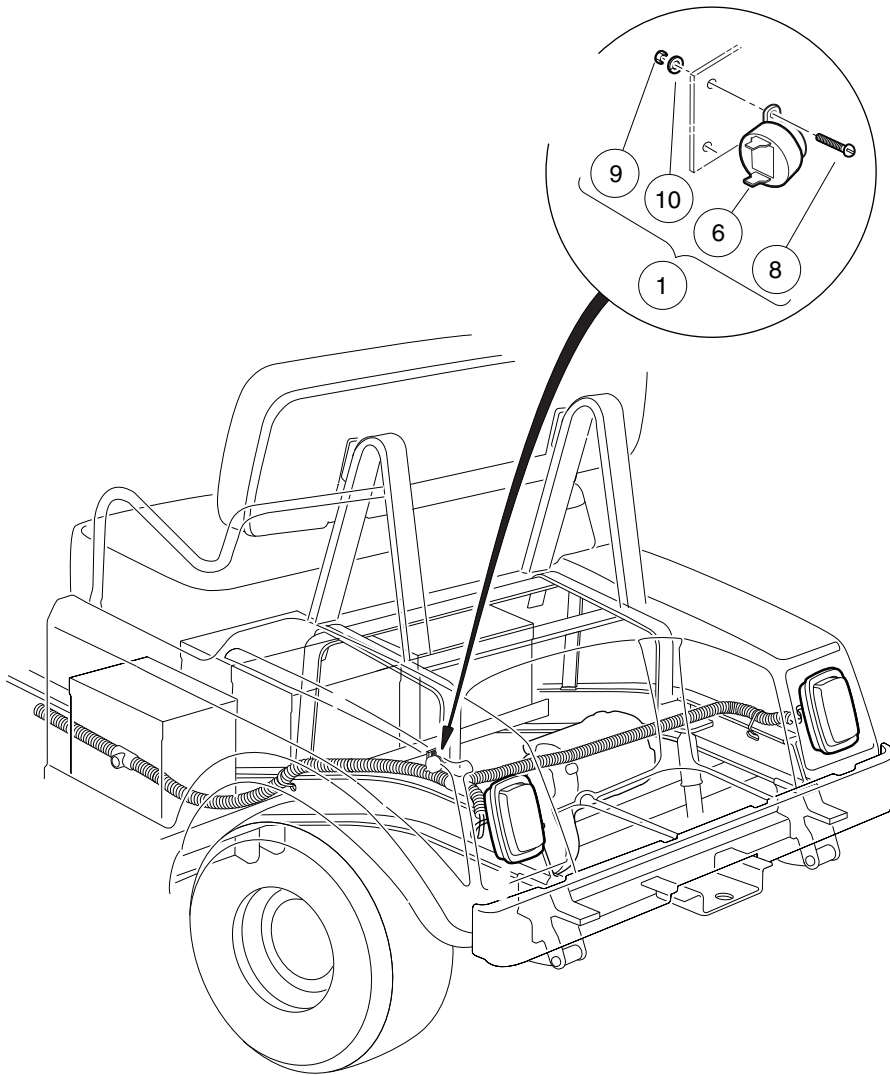

000433-001


REAR REVERSE BUZZER

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1016859</u>	Kit, Reverse Buzzer (includes items 2 through 10)	1	
2	<u>1011229</u>	Locknut, #6-32 Whiz	1	
3	<u>1012431</u>	Washer, #4 Flat	2	
4	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	1	
5	<u>1016849</u>	Screw, #4-24 X 0.33, Pan-Head, Machine	2	
6	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1	
7	<u>1016857</u>	Wire Assembly Black #18	1	
8	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2	
9	<u>8057</u>	Nut, #4-40 Hex Machine	2	
10	<u>8058</u>	Lockwasher, #4 Split	2	
Note: Note: Items 2 through 5 and 7 are included in the kit, but are not used in this application.				

4

G

E

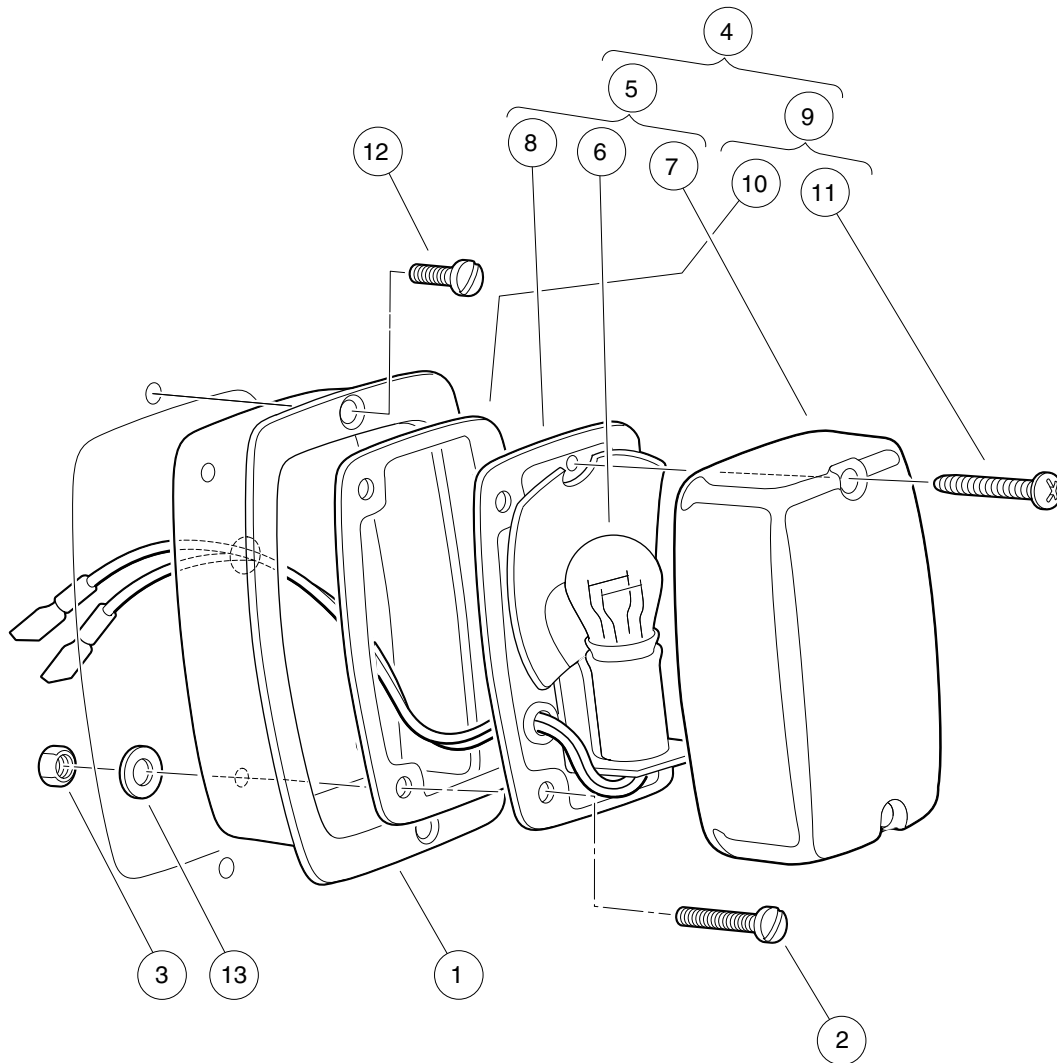

000348-006

TAIL LIGHTS

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>1011497</u>	Bezel, Taillight	1	E
2	<u>1011557</u>	Screw, #6-32 X 1.00 Hex-Head Machine	1	
3	<u>1011558</u>	Nut, #6-32 Hex	1	
4	1017035	Taillight Assembly (includes items 5 through 9)	1	
5	N/A	Light, Tail (includes items 6 through 8)	1	
6	<u>1011582</u>	Taillight Bulb	1	
7	<u>1011843</u>	Taillight Lens	1	
8	N/A	Base, Taillight	1	
9	<u>1017699</u>	Hardware Kit, Tail Light (includes items 10 and 11)	1	
10	N/A	Gasket	1	
11	N/A	Screw, Tapered	2	
12	<u>102915601</u>	Plastic Rivet - Tuflock	1	
13	<u>7591</u>	Washer, #6, Flat	1	

4

G


E

BRAKES, PEDALS, AND CABLES

5

G


E

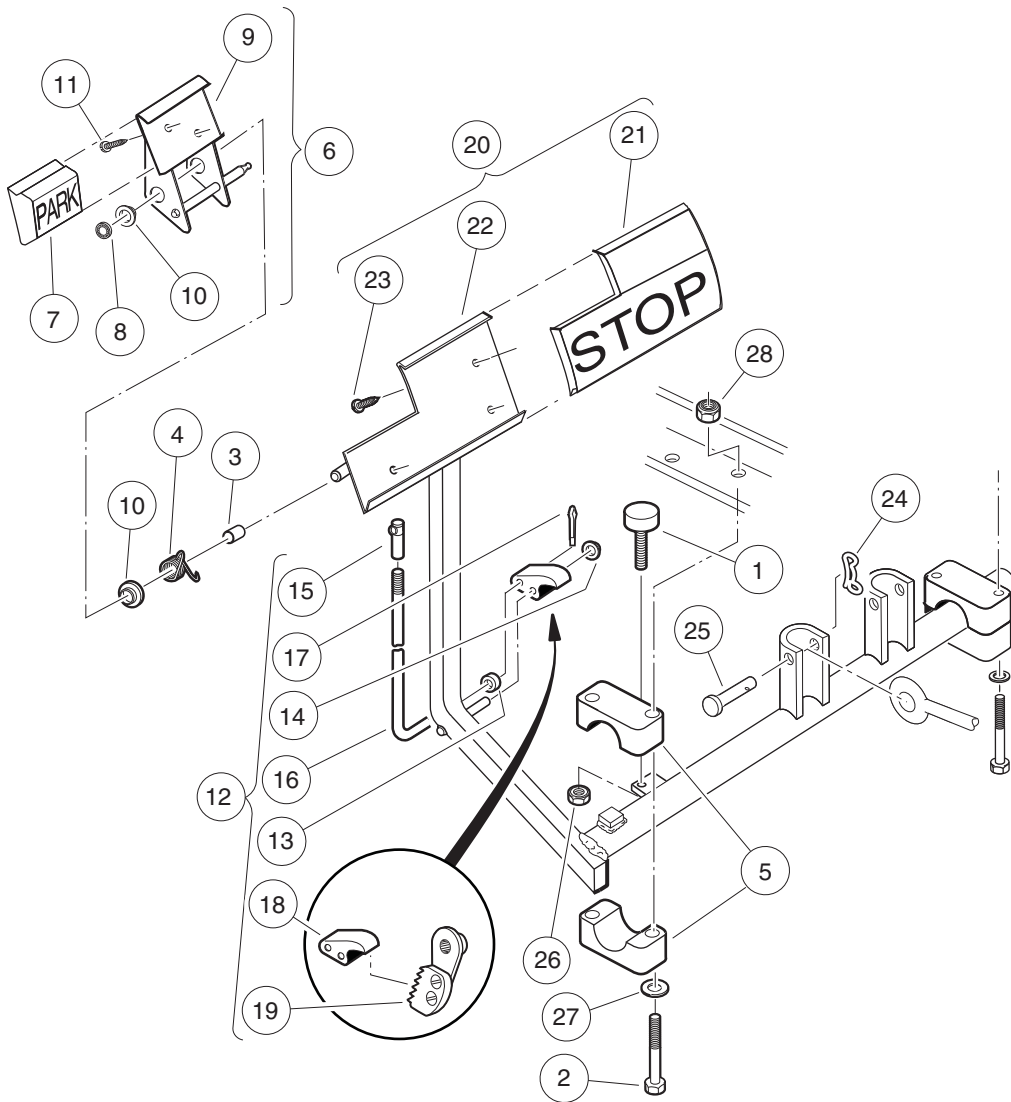

000187-001

BRAKE PEDAL ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1010878</u>	Bumper, Rubber	1	
2	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	4	
3	<u>1010927</u>	Hill Brake Spacer	1	
4	<u>1010933</u>	Spring, Hill Brake Torsion	1	
5	<u>1011402</u>	Package, Brake Mounting Block	1	
6	<u>1011418</u>	Kit, Hill Brake Pedal (includes items 7 through 11)	1	
7	<u>1013870</u>	Pad, Hill Brake	1	
8	<u>1013876</u>	Pushnut, 3/8	1	
9	N/A	Hill Brake Weld Assembly	1	
10	<u>1032</u>	Bushing, Nylon	2	
11	7716	Screw, #10-16 Type AB, Sheet Metal	2	
12	<u>101187702</u>	Kit, Hill Brake Latch (includes items 13 through 19)	1	
13	<u>1010805</u>	Sleeve, Hill Brake Rod	1	
14	<u>1010877</u>	Pushnut, 3/8	1	
15	1010932	Ball Joint, 1/4-28	1	
16	N/A	Rod, Hill Brake	1	
17	<u>1017029</u>	Pin, Cotter, 7/64 x 1/2 Stainless-Steel	1	
18	N/A	Pawl, Hill Brake	1	
19	101918501	Ratchet Assembly	1	
20	<u>101878201</u>	Brake Pedal Kit (includes items 21 through 23)	1	
21	<u>1013869</u>	Pad, Brake Pedal	1	
22	N/A	Weldment, Brake Pedal, 2wr Std	1	
23	7716	Screw, #10-16 Type AB, Sheet Metal	3	
24	<u>102323101</u>	Pin, Bow Tie Locking	1	
25	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1	
26	<u>1028</u>	Nut, 1/4-20 Hex	1	
27	<u>1241</u>	Washer, 5/16 Type A Flat	4	
28	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4	

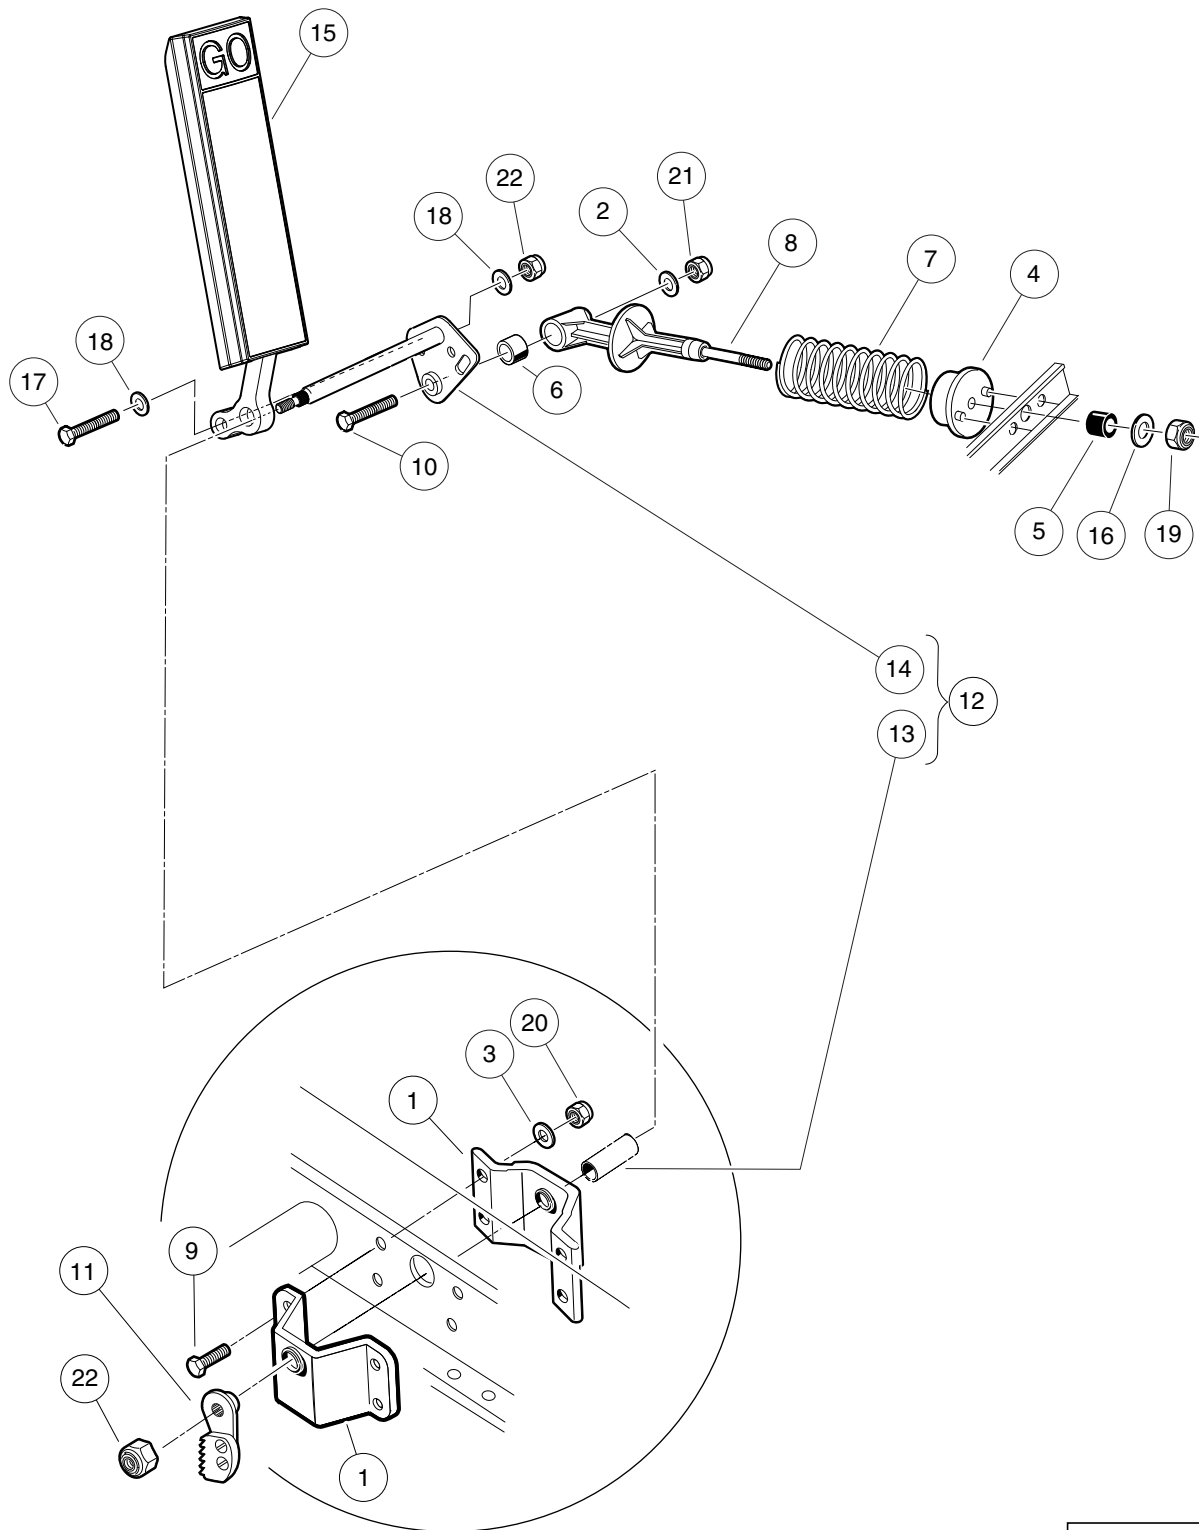
5**G****E**

001406-001

ACCELERATOR PEDAL ASSEMBLY – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2
2	<u>1011931</u>	Washer, 1/4 Flat	1
3	<u>1014007</u>	Washer, 1/4, Flat	4
4	<u>1017378</u>	Cup, Spring	1
5	<u>1017380</u>	Bumper, Spring Return	1
6	<u>1017424</u>	Bearing, Pivot Support	1
7	101796201	Spring, Accelerator Return	1
8	<u>101817401</u>	Retainer, Spring	1
9	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4
10	<u>101862001</u>	Screw, 1/4-20 X 1.500 Flange	1
11	101918501	Ratchet Assembly	1
12	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 13 and 14)	1
13	101919801	Spacer, Accelerator	1
14	<u>102158901</u>	Pivot Rod Weldment	1
15	<u>103865101</u>	Pedal, Accel, Insert	A/R
16	<u>1241</u>	Washer, 5/16 Type A Flat	1
17	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	1
18	<u>334</u>	Washer, 3/8, Type A, Flat	2
19	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1
20	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4
21	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1
22	<u>8754</u>	Locknut, 3/8-16 Hex	2


5
G
E

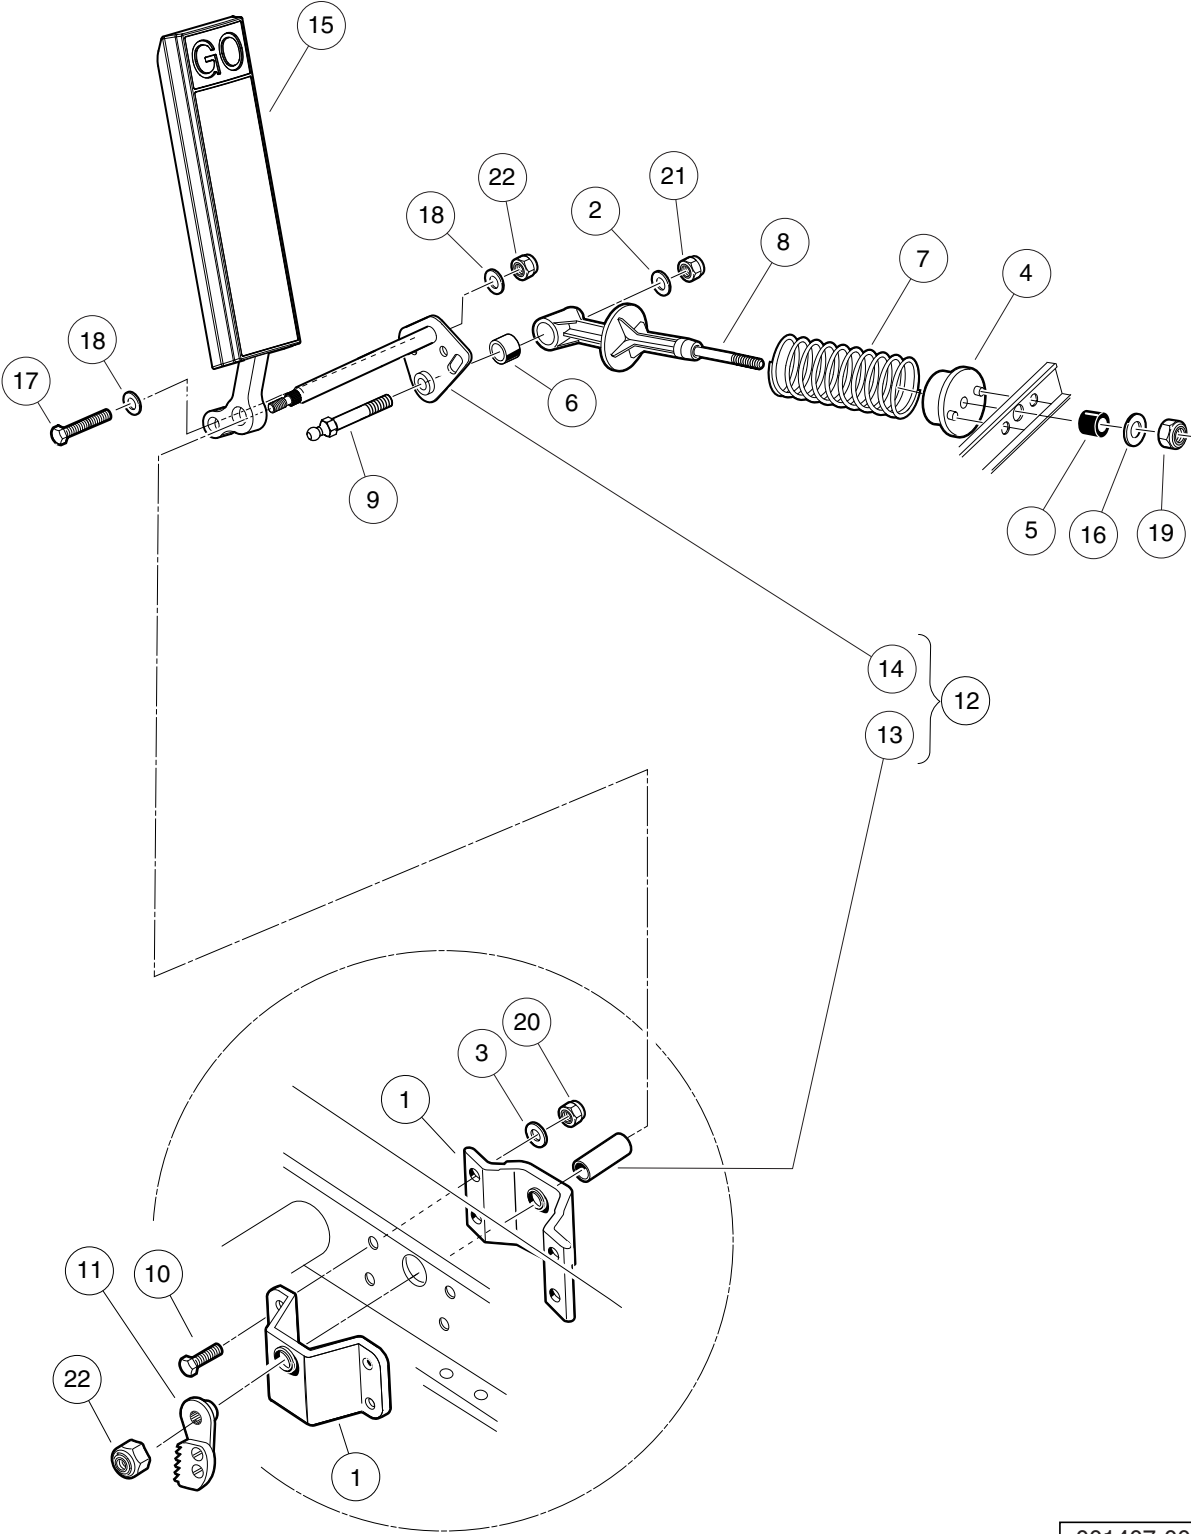

001407-003


ACCELERATOR PEDAL ASSEMBLY – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2	
2	<u>1011931</u>	Washer, 1/4 Flat	1	
3	<u>1014007</u>	Washer, 1/4, Flat	4	
4	<u>1017378</u>	Cup, Spring	1	
5	<u>1017380</u>	Bumper, Spring Return	1	
6	<u>1017424</u>	Bearing, Pivot Support	1	
7	101796201	Spring, Accelerator Return	1	
8	<u>101817401</u>	Retainer, Spring	1	
9	101818801	Stud, 1/4-28 X 1.35 Ball	1	
10	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4	
11	101918501	Ratchet Assembly	1	
12	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 13 and 14)	1	
13	101919801	Spacer, Accelerator	1	
14	<u>102158901</u>	Pivot Rod Weldment	1	
15	<u>103865101</u>	Pedal, Accel, Insert	1	
16	<u>1241</u>	Washer, 5/16 Type A Flat	1	
17	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	1	
18	<u>334</u>	Washer, 3/8, Type A, Flat	2	
19	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	
20	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4	
21	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1	
22	<u>8754</u>	Locknut, 3/8-16 Hex	2	



ACCELERATOR ROD – TURF/CA 6 & VILLAGER 6 GAS VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>101674702</u>	Rod, Accelerator (includes items 2 through 4)	1	
2	<u>1011084</u>	Nut, 1/4-28 Hex Jam	2	
3	<u>1011734</u>	Joint, Ball	2	
4	N/A	Accelerator Rod Elec Stretch	1	

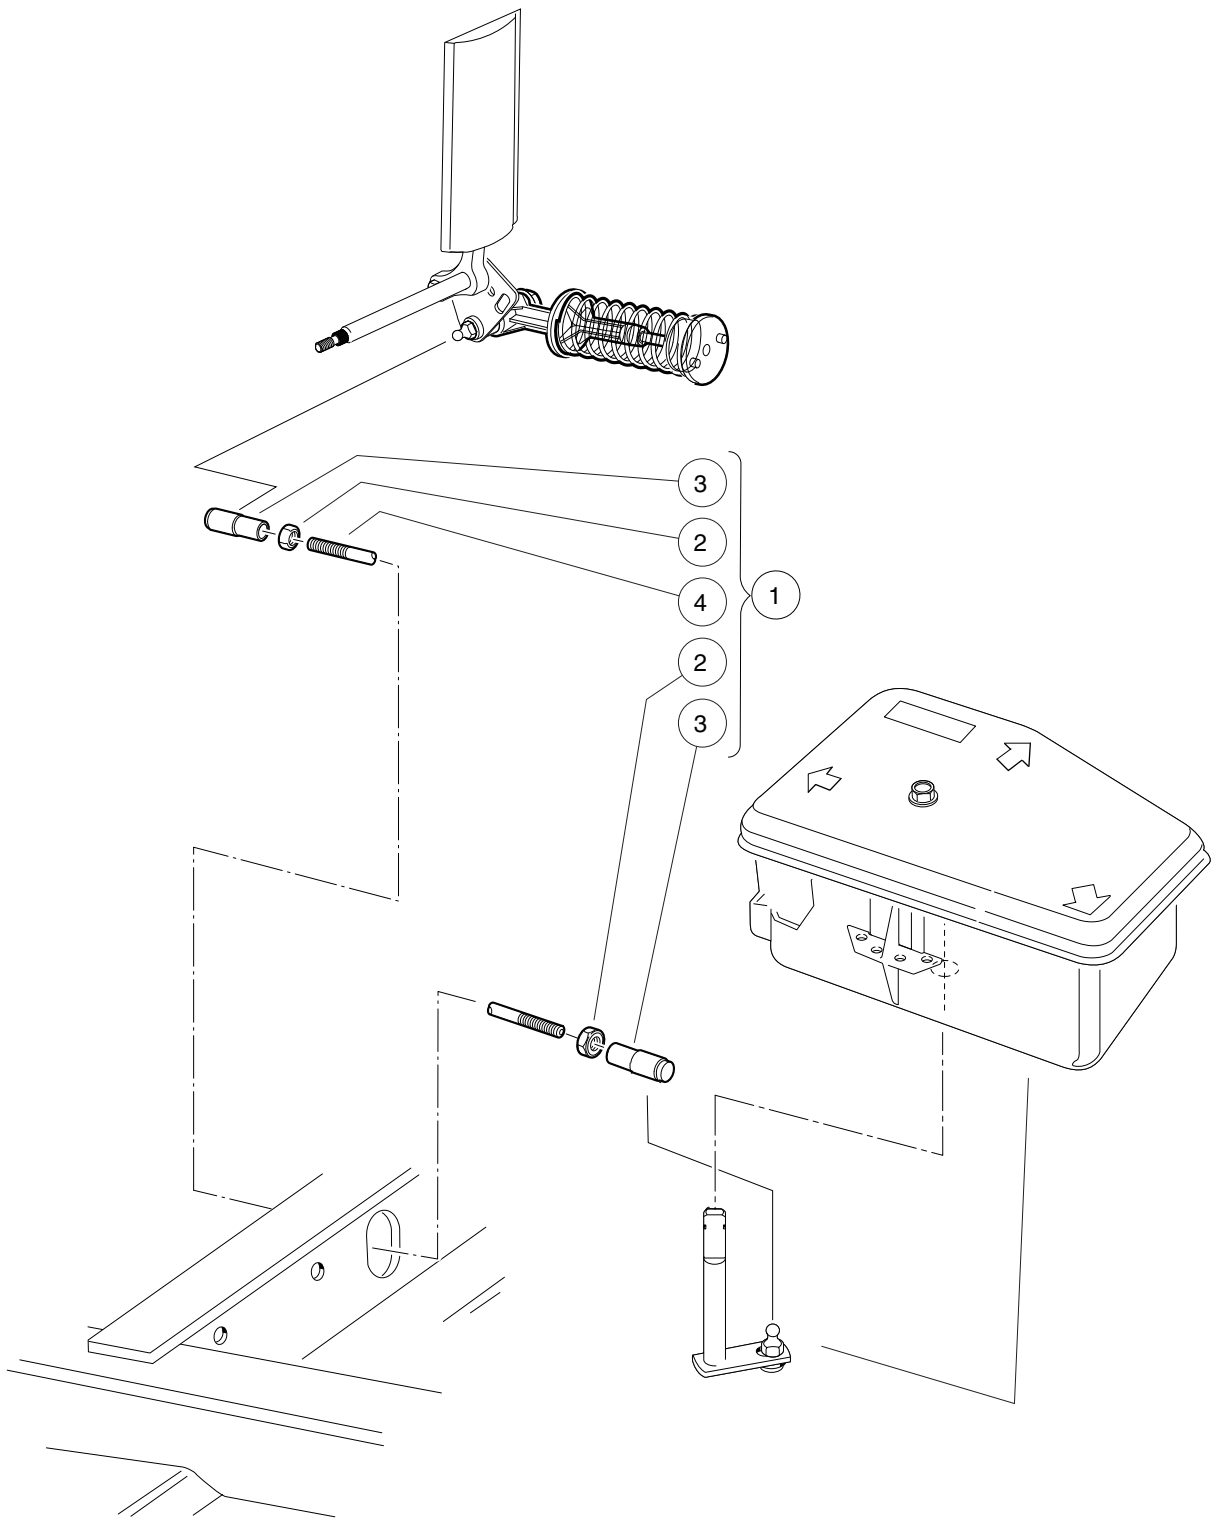

000362-001

ACCELERATOR ROD – VILLAGER 8 GAS VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>101674704</u>	Accelerator Rod Assembly, RV XL (includes items 2 through 4)	1	
2	<u>1011084</u>	Nut, 1/4-28 Hex Jam	2	
3	<u>1011734</u>	Joint, Ball	2	
4	N/A	Accelerator Rod, RV XL	1	

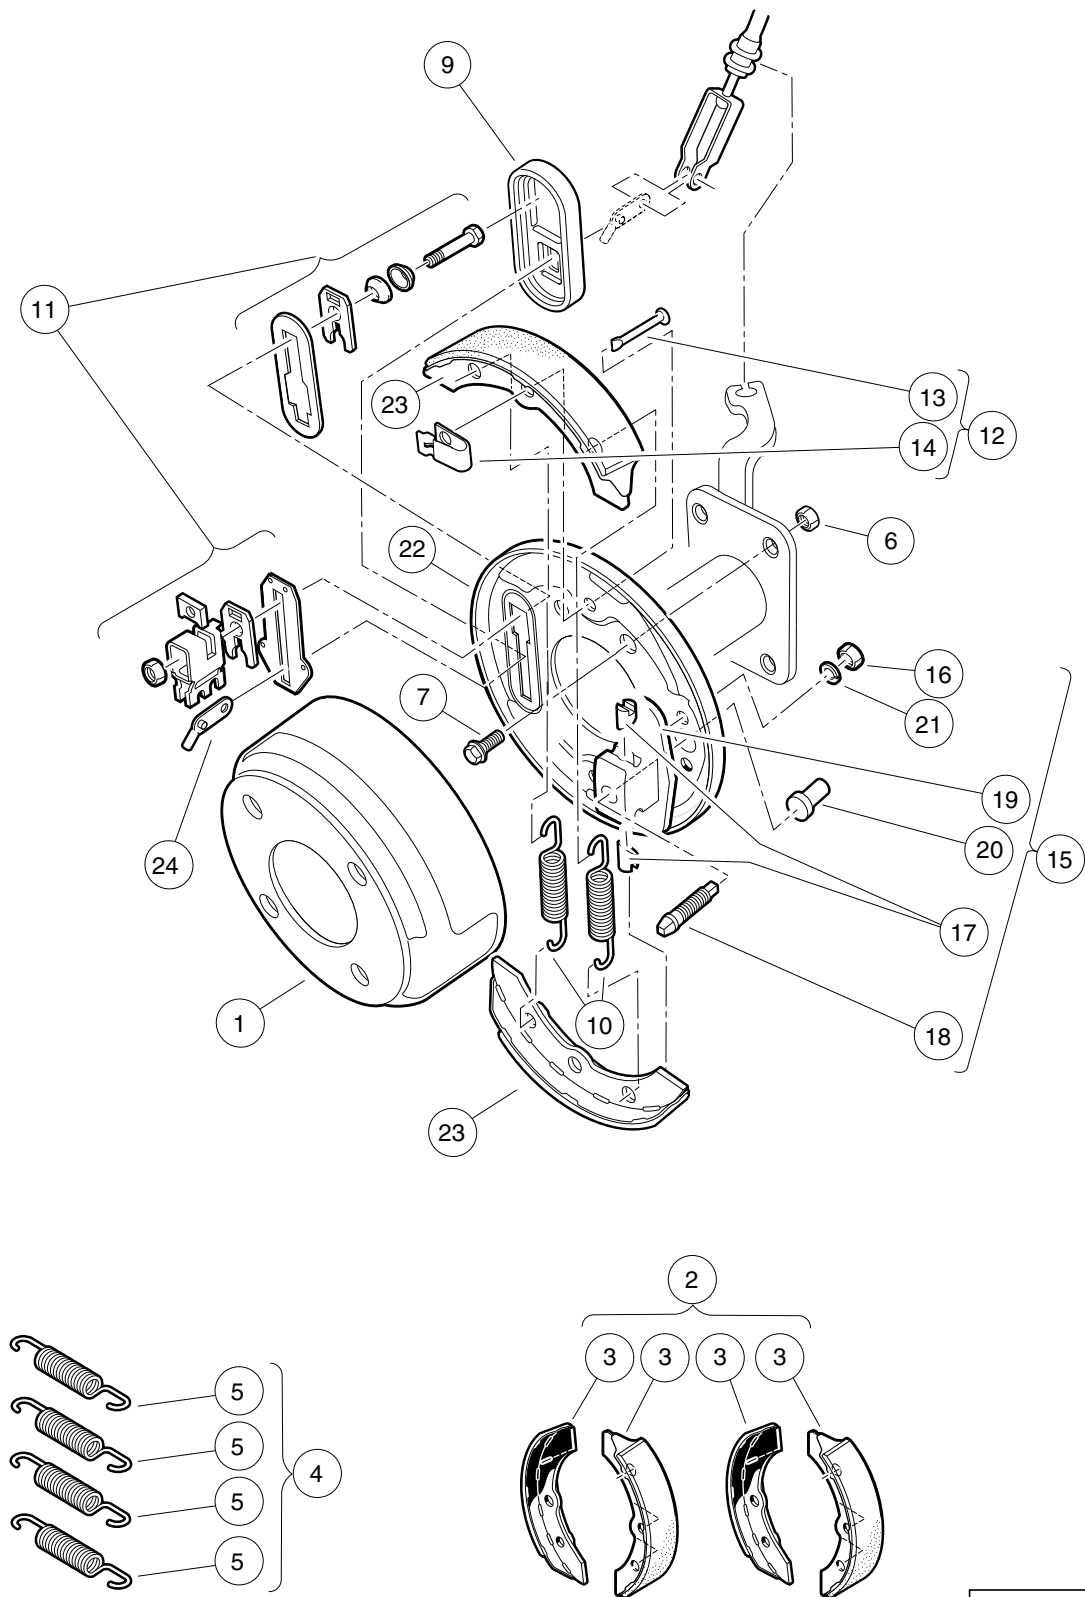

000298-001


FRONT BRAKE ASSEMBLY – VEHICLES WITH FOUR-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1011137</u>	Drum, Brake	2	
2	<u>101146302</u>	Kit, Non-Asbestos Brake Shoe (includes item 3)	1	
3	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	4	
4	<u>1011464</u>	Package, Brake Spring (includes item 5)	1	
5	1011314	Brake Spring	4	
6	<u>1013924</u>	Nut, 5/16-24, Hex Head Cone	8	
7	<u>1014153</u>	Bolt, Brake Cluster Mounting	8	
8	<u>1016557</u>	Cluster, Brake, Driver-Side (includes items 9 through 24)	1	
9	<u>1010850</u>	Dust Cover	1	
10	1011314	Brake Spring	2	
11	<u>1011465</u>	Kit, Brake Actuator	1	
12	<u>1011466</u>	Kit, Shoe Retainer (includes items 13 and 14)	1	
13	N/A	Pin	2	
14	N/A	Shoe Clamp Spring	2	
15	<u>1011467</u>	Kit, Anchor Body (includes items 16 through 21)	1	
16	<u>1011114</u>	Nut, M6-1.00 Hex	2	
17	1011298	Anchor Piston	2	
18	N/A	Adjustment Bolt	1	
19	N/A	Anchor Body Component	1	
20	<u>1011303</u>	Adjustment Bolt Cap	1	
21	<u>451</u>	Lockwasher, 1/4 Split	2	
22	1011494	Backing Plate, Left-Hand	1	
23	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2	
24	N/A	Arm, Brake Lever	1	
25	<u>1016573</u>	Cluster, Brake, Passenger-Side (includes items 26 through 41)	1	
26	<u>1010850</u>	Dust Cover	1	
27	<u>1011154</u>	Backing Plate, Right-Hand	1	
28	1011314	Brake Spring	2	
29	<u>1011465</u>	Kit, Brake Actuator	1	
30	<u>1011466</u>	Kit, Shoe Retainer (includes items 31 and 32)	1	
31	N/A	Pin	2	
32	N/A	Shoe Clamp Spring	2	
33	<u>1011467</u>	Kit, Anchor Body (includes items 34 through 39)	1	
34	<u>1011114</u>	Nut, M6-1.00 Hex	2	
35	1011298	Anchor Piston	2	
36	N/A	Adjustment Bolt	1	
37	N/A	Anchor Body Component	1	
38	<u>1011303</u>	Adjustment Bolt Cap	1	
39	<u>451</u>	Lockwasher, 1/4 Split	2	
40	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2	
41	N/A	Arm, Brake Lever	1	
		Note: Passenger-side brake cluster not shown. Components have a similar appearance to driver-side brake cluster components.		

5

G


E

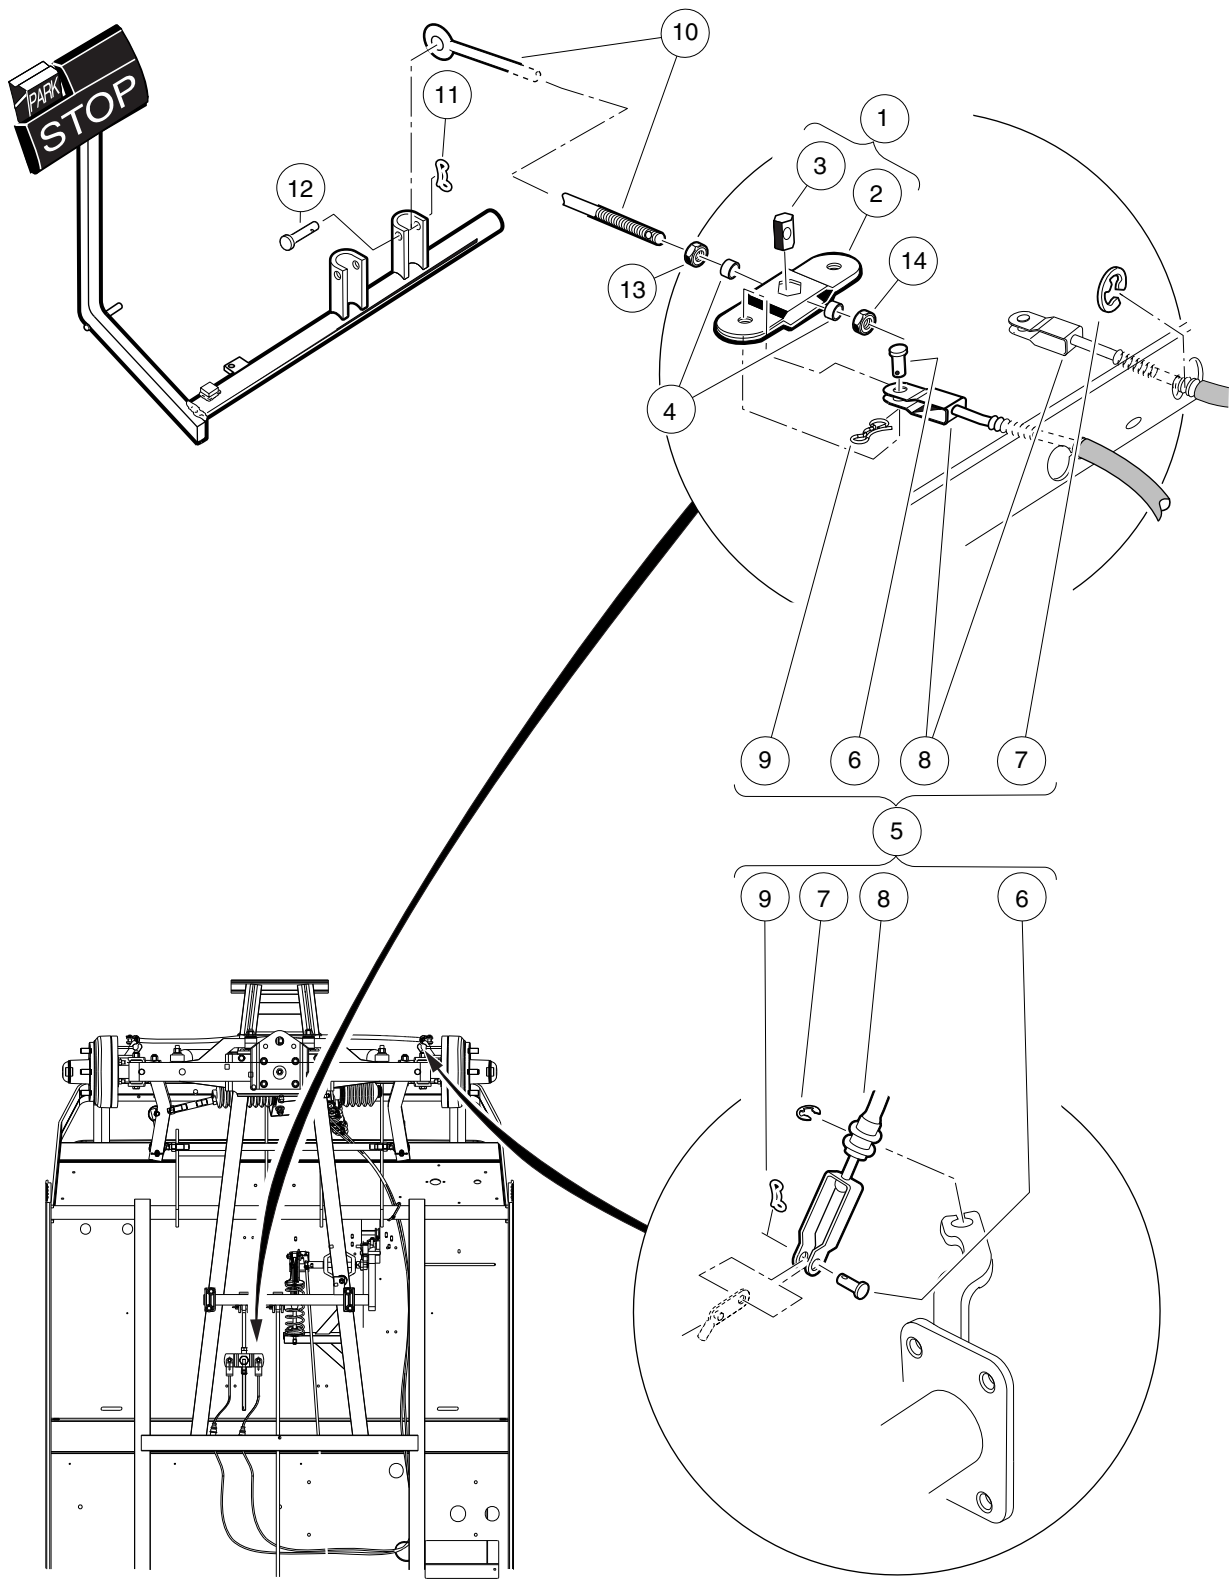

000294-001

FRONT BRAKE CABLES AND EQUALIZER – VEHICLES WITH FOUR-WHEEL BRAKES


ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1017211</u>	Kit, Equalizer and Pivot Limiter (includes items 2 and 3)	1	
2	<u>1016319</u>	Equalizer Weld Assembly	1	
3	<u>1016320</u>	Equalizer, Pivot Limiter	1	
4	<u>101865301</u>	Spacer	2	
5	<u>101874601</u>	Kit, Brake Cable (includes items 6 through 9)	1	
6	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	4	
7	<u>1011779</u>	E-Clip, 1/2	4	
8	N/A	Brake Cable	2	
9	<u>102292801</u>	Pin, Bow Tie Locking - .072	4	
10	<u>101953106</u>	Rod, Equalizer, 9.75"	1	
11	<u>102323101</u>	Pin, Bow Tie Locking	1	
12	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1	
13	<u>1242</u>	Nut, 5/16-18 Hex	1	
14	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	

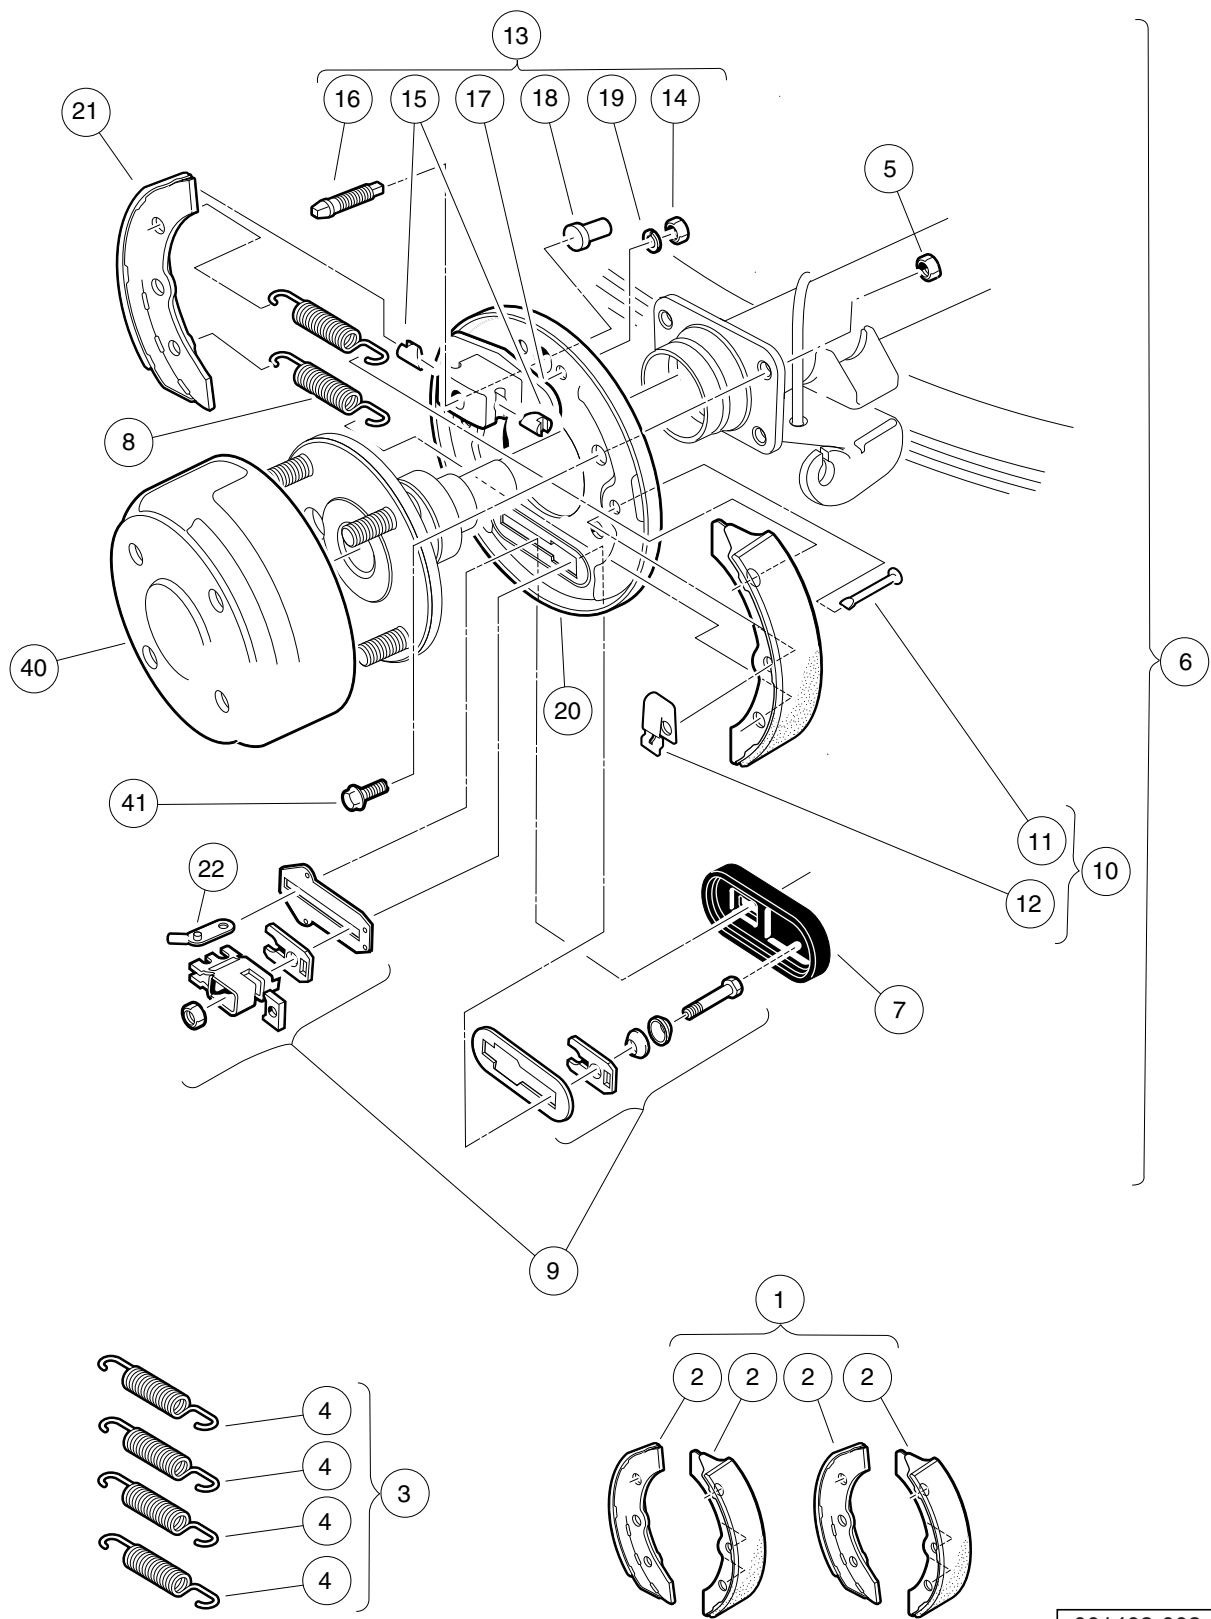

001403-003

REAR BRAKES, MANUALLY-ADJUSTED – ELEC. VEHICLES WITH 4-WHEEL BRAKES


ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>101146302</u>	Kit, Non-Asbestos Brake Shoe (includes item 2)	1	
2	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	4	
3	<u>1011464</u>	Package, Brake Spring (includes item 4)	1	
4	1011314	Brake Spring	4	
5	<u>1013924</u>	Nut, 5/16-24, Hex Head Cone	8	
6	<u>1016557</u>	Cluster, Brake, Driver-Side (includes items 7 through 22)	1	
7	<u>1010850</u>	Dust Cover	1	
8	1011314	Brake Spring	2	
9	<u>1011465</u>	Kit, Brake Actuator	1	
10	<u>1011466</u>	Kit, Shoe Retainer (includes items 11 and 12)	1	
11	N/A	Pin	2	
12	N/A	Shoe Clamp Spring	2	
13	<u>1011467</u>	Kit, Anchor Body (includes items 14 through 19)	1	
14	<u>1011114</u>	Nut, M6-1.00 Hex	2	
15	1011298	Anchor Piston	2	
16	N/A	Adjustment Bolt	1	
17	N/A	Anchor Body Component	1	
18	<u>1011303</u>	Adjustment Bolt Cap	1	
19	<u>451</u>	Lockwasher, 1/4 Split	2	
20	1011494	Backing Plate, Left-Hand	1	
21	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2	
22	N/A	Arm, Brake Lever	1	
23	<u>1016573</u>	Cluster, Brake, Passenger-Side (includes items 24 through 39)	1	
24	<u>1010850</u>	Dust Cover	1	
25	<u>1011154</u>	Backing Plate, Right-Hand	1	
26	1011314	Brake Spring	2	
27	<u>1011465</u>	Kit, Brake Actuator	1	
28	<u>1011466</u>	Kit, Shoe Retainer (includes items 29 and 30)	1	
29	N/A	Pin	2	
30	N/A	Shoe Clamp Spring	2	
31	<u>1011467</u>	Kit, Anchor Body (includes items 32 through 37)	1	
32	<u>1011114</u>	Nut, M6-1.00 Hex	2	
33	1011298	Anchor Piston	2	
34	N/A	Adjustment Bolt	1	
35	N/A	Anchor Body Component	1	
36	<u>1011303</u>	Adjustment Bolt Cap	1	
37	<u>451</u>	Lockwasher, 1/4 Split	2	
38	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2	
39	N/A	Arm, Brake Lever	1	
40	<u>101791101</u>	Drum without Center Hole, Brake	2	
41	<u>47542195001</u>	Bolt, Brake Cluster Mnt	8	
		Note: Passenger-side brake cluster (items 24-40) not shown. Components have a similar appearance to driver-side brake cluster components.		

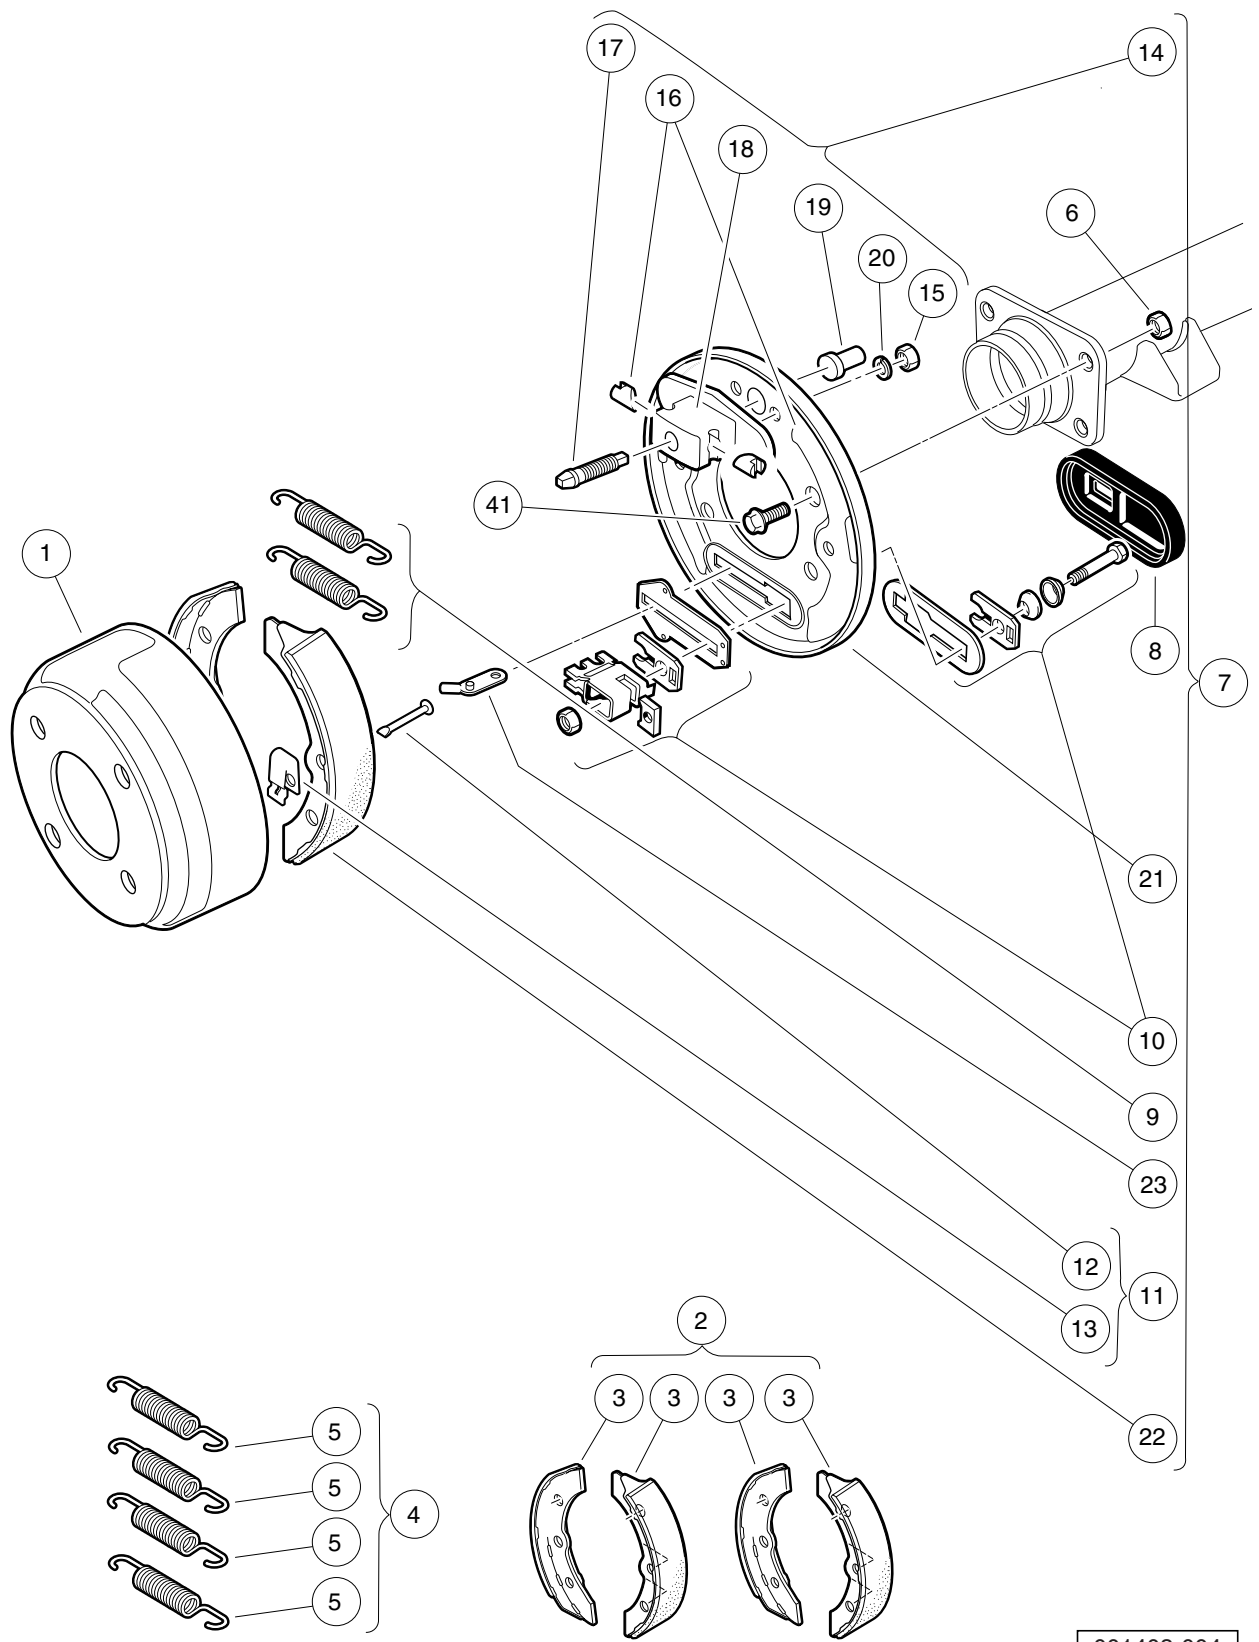

001403-004

REAR BRAKES, MANUALLY-ADJUSTED – GAS VEHICLES WITH 4-WHEEL BRAKES


ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1011137</u>	Drum, Brake	2	
2	<u>101146302</u>	Kit, Non-Asbestos Brake Shoe (includes item 3)	1	
3	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	4	
4	<u>1011464</u>	Package, Brake Spring (includes item 5)	1	
5	1011314	Brake Spring	4	
6	<u>1013924</u>	Nut, 5/16-24, Hex Head Cone	8	
7	<u>1016557</u>	Cluster, Brake, Driver-Side (includes items 8 through 23)	1	
8	<u>1010850</u>	Dust Cover	1	
9	1011314	Brake Spring	2	
10	<u>1011465</u>	Kit, Brake Actuator	1	
11	<u>1011466</u>	Kit, Shoe Retainer (includes items 12 and 13)	1	
12	N/A	Pin	2	
13	N/A	Shoe Clamp Spring	2	
14	<u>1011467</u>	Kit, Anchor Body (includes items 15 through 20)	1	
15	<u>1011114</u>	Nut, M6-1.00 Hex	2	
16	1011298	Anchor Piston	2	
17	N/A	Adjustment Bolt	1	
18	N/A	Anchor Body Component	1	
19	<u>1011303</u>	Adjustment Bolt Cap	1	
20	<u>451</u>	Lockwasher, 1/4 Split	2	
21	1011494	Backing Plate, Left-Hand	1	
22	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2	
23	N/A	Arm, Brake Lever	1	
24	<u>1016573</u>	Cluster, Brake, Passenger-Side (includes items 25 through 40)	1	
25	<u>1010850</u>	Dust Cover	1	
26	<u>1011154</u>	Backing Plate, Right-Hand	1	
27	1011314	Brake Spring	2	
28	<u>1011465</u>	Kit, Brake Actuator	1	
29	<u>1011466</u>	Kit, Shoe Retainer (includes items 30 and 31)	1	
30	N/A	Pin	2	
31	N/A	Shoe Clamp Spring	2	
32	<u>1011467</u>	Kit, Anchor Body (includes items 33 through 38)	1	
33	<u>1011114</u>	Nut, M6-1.00 Hex	2	
34	1011298	Anchor Piston	2	
35	N/A	Adjustment Bolt	1	
36	N/A	Anchor Body Component	1	
37	<u>1011303</u>	Adjustment Bolt Cap	1	
38	<u>451</u>	Lockwasher, 1/4 Split	2	
39	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2	
40	N/A	Arm, Brake Lever	1	
41	<u>47542195001</u>	Bolt, Brake Cluster Mnt	8	
		Note: Passenger-side brake cluster (items 25-41) not shown. Components have a similar appearance to driver-side brake cluster components.		

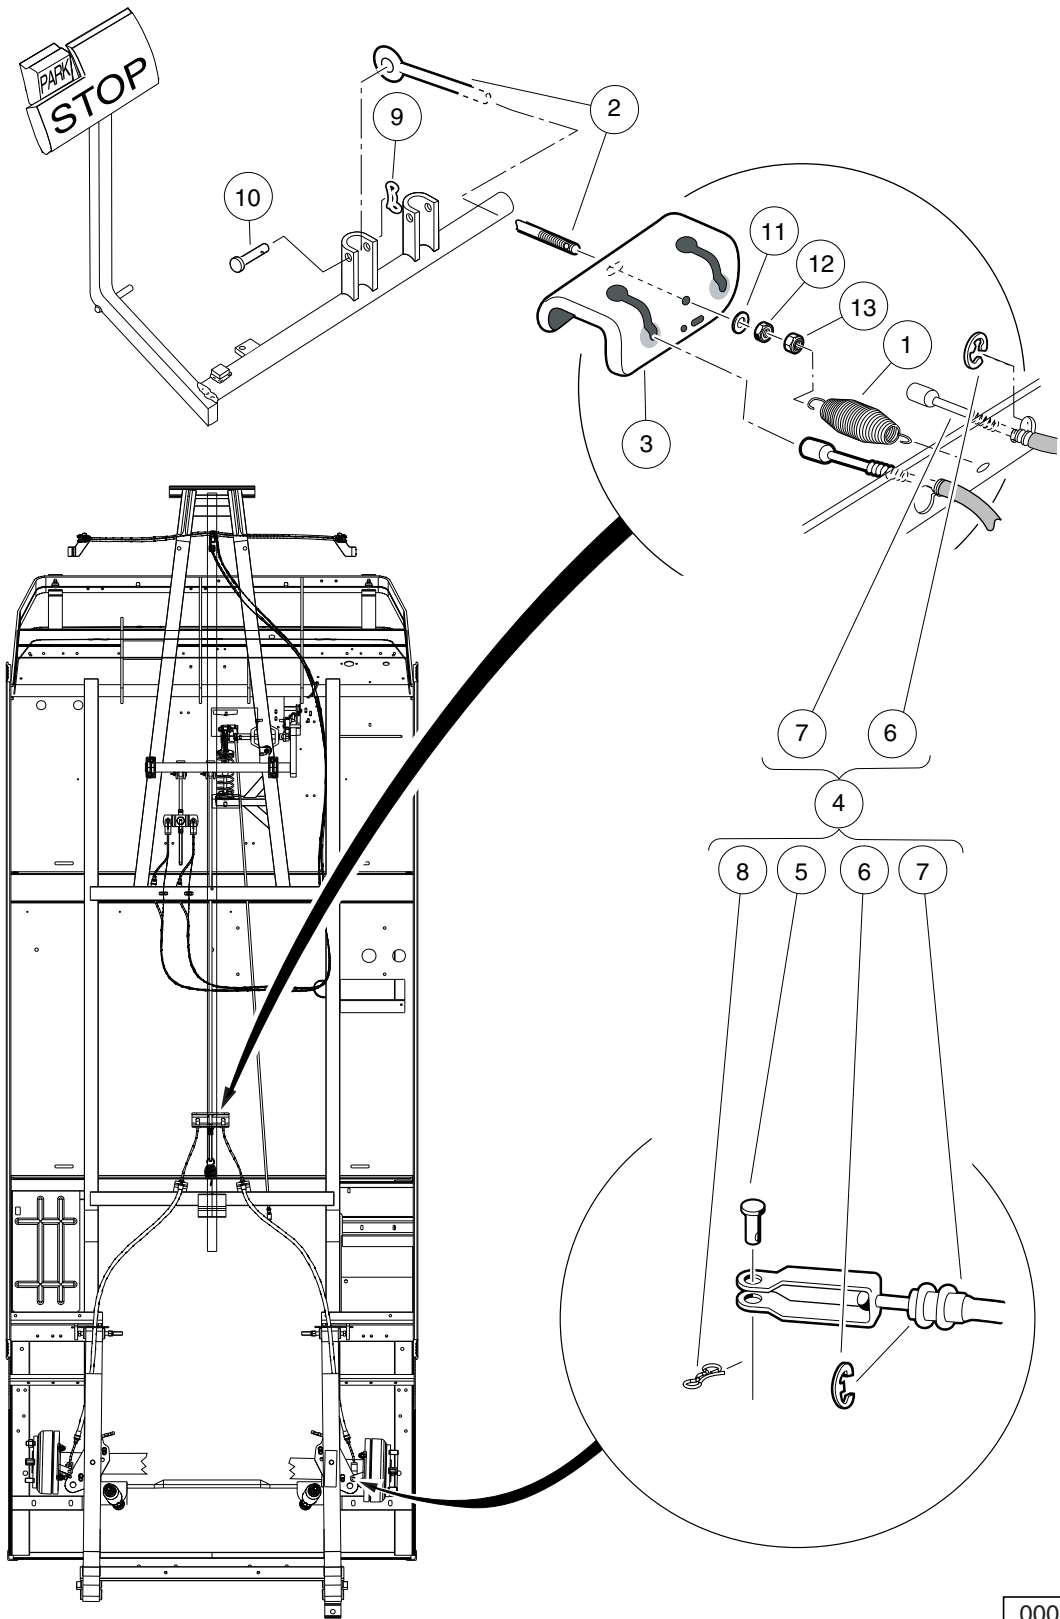

000296-004

REAR BRAKE CABLES AND EQUALIZER – TURF/CARRYALL 6 & VILLAGER 6

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1013531</u>	Spring, Brake Return	1	
2	<u>101953103</u>	Rod, Equalizer, 41.91"	1	
3	<u>101990801</u>	Equalizer Bracket	1	
4	<u>102166901</u>	Kit, Brake Cable Rear (includes items 5 through 8)	1	
5	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	2	
6	<u>1011779</u>	E-Clip, 1/2	4	
7	<u>102162601</u>	Cable, Brake	2	
8	<u>102292801</u>	Pin, Bow Tie Locking - .072	2	
9	<u>102323101</u>	Pin, Bow Tie Locking	1	
10	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1	
11	<u>1241</u>	Washer, 5/16 Type A Flat	1	
12	<u>1242</u>	Nut, 5/16-18 Hex	1	
13	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	

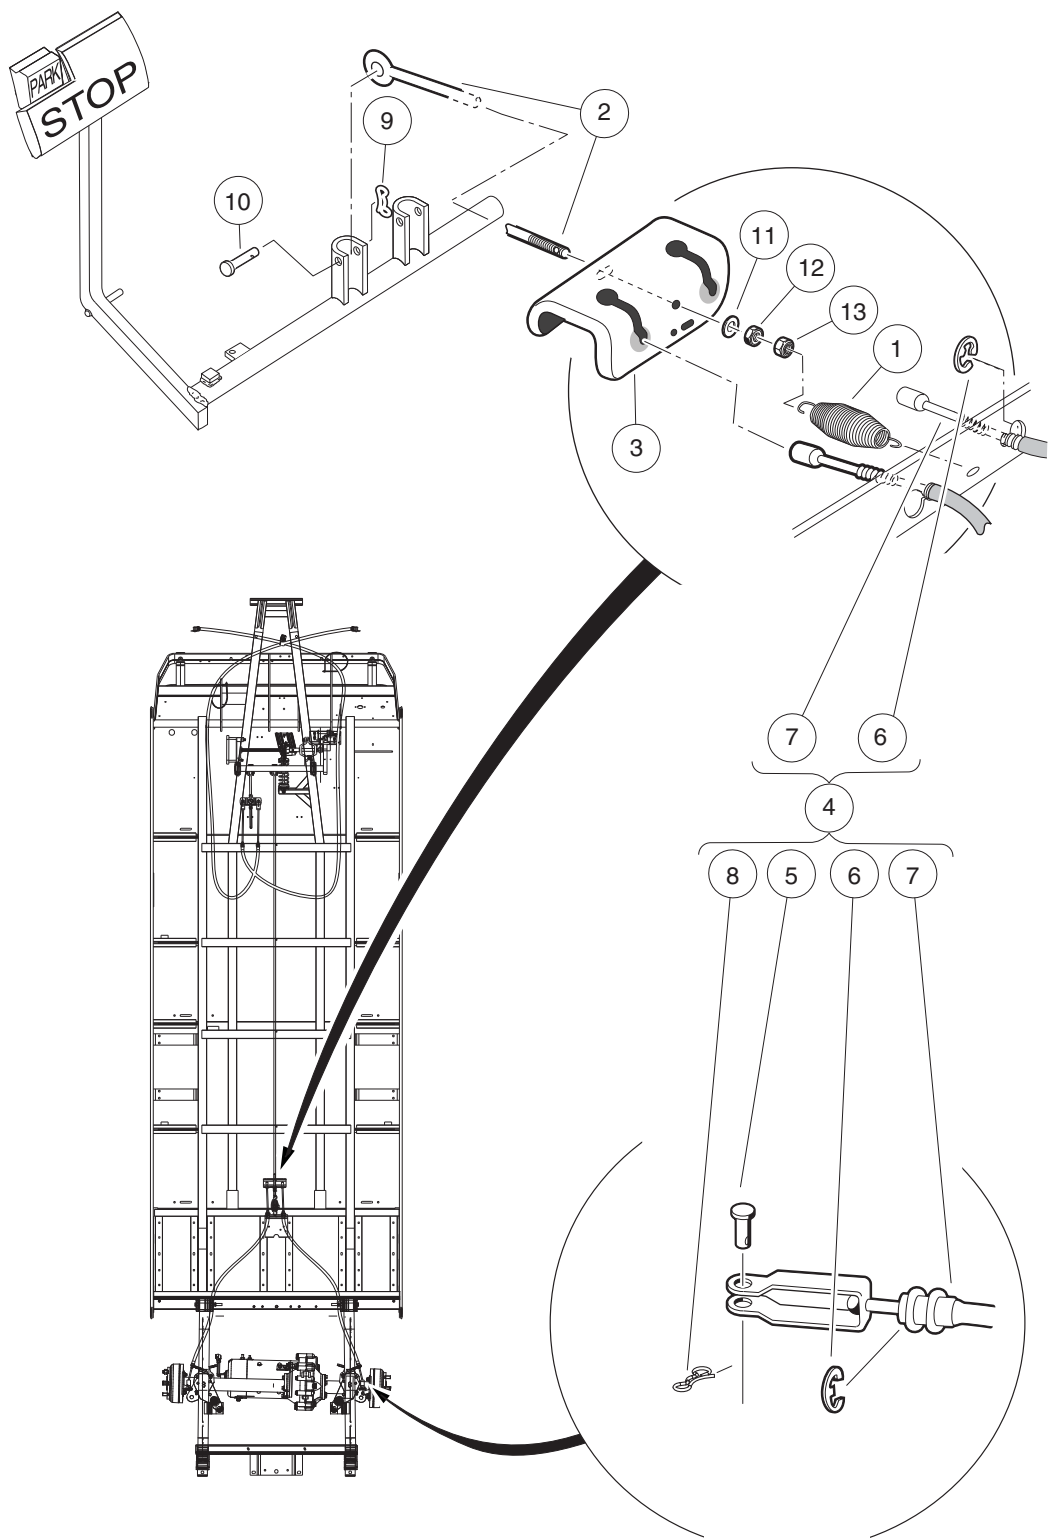

000296-003

REAR BRAKE CABLES AND EQUALIZER – VILLAGER 8

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1013531</u>	Spring, Brake Return	1	
2	<u>101953104</u>	Rod, Equalizer	1	
3	<u>101990801</u>	Equalizer Bracket	1	
4	<u>102166901</u>	Kit, Brake Cable Rear (includes items 5 through 8)	1	
5	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	2	
6	<u>1011779</u>	E-Clip, 1/2	4	
7	<u>102162601</u>	Cable, Brake	2	
8	<u>102292801</u>	Pin, Bow Tie Locking - .072	2	
9	<u>102323101</u>	Pin, Bow Tie Locking	1	
10	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1	
11	<u>1241</u>	Washer, 5/16 Type A Flat	1	
12	<u>1242</u>	Nut, 5/16-18 Hex	1	
13	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	

5

G

E

STEERING AND SUSPENSIONS


6

G

E

STEERING GEAR ASSEMBLY (WANDA) – MAINT.-FREE BALL JOINT

ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	1013042	Nut, 12mm Hex	1	
2	<u>102022602</u>	End, Tie Rod, M12 X 1.25, Lh	1	
3	<u>102289201</u>	Nut - Hex Locking, M12 X 1.25	1	
4	<u>103601501</u>	Asm, Steering Rack And Pinion (includes items 5 through 24)	1	
5	<u>1013035</u>	Bellows, Long	1	
6	<u>1013044</u>	Rack Screw Locknut	1	
7	N/A	Snap Ring	1	
8	<u>1013052</u>	Seal, Steering Pinion Dust	1	
9	<u>101879401</u>	Bearing, Ball	1	
10	<u>101879501</u>	Stop Washer	1	
11	<u>101879601</u>	Stop Ring, C-Type	1	
12	<u>101879701</u>	Support Yoke	1	
13	<u>101879801</u>	Rack Guide Pressure Spring	1	
14	<u>101879901</u>	Ring, Stop, C-Type	1	
15	<u>101880001</u>	Bellows, Short	1	
16	<u>101880101</u>	Dust Seal Retaining Ring	1	
17	<u>101880201</u>	Inner Ball Joint Asm	1	
18	<u>101880301</u>	Washer, Tab	1	
19	N/A	Box, Steering Gear	1	
20	N/A	Bearing, Lower Pinion	1	
21	N/A	Pinion, Steering	1	
22	N/A	Screw, Rack Guide	1	
23	N/A	Rack, Steering	1	
24	<u>8990</u>	Tie Wrap, 8" Nylon	2	
25	<u>103653401</u>	Link, Drag, Male Thd	1	
26	<u>103653501</u>	Nut, Jam, M12-1.25, Lh	1	
27	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	3	
28	<u>334</u>	Washer, 3/8, Type A, Flat	3	
29	<u>8754</u>	Locknut, 3/8-16 Hex	3	

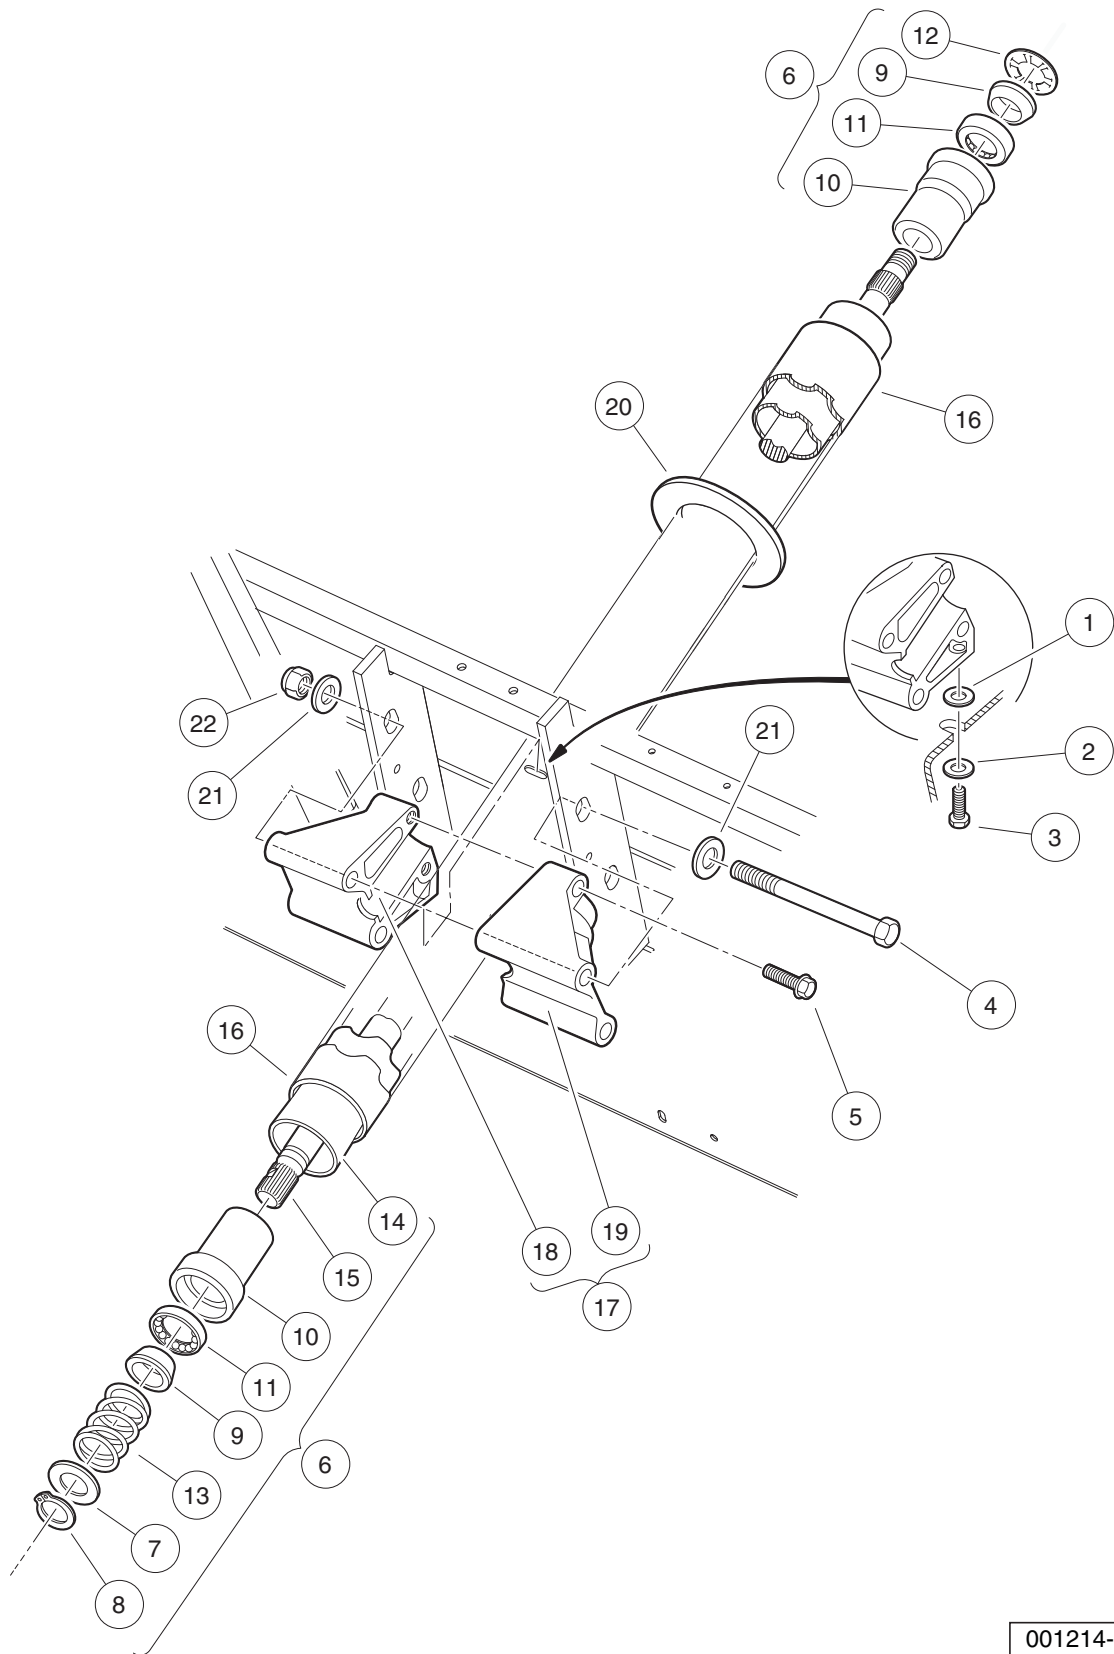6**G****E**

001214-001


STEERING COLUMN – UTILITY

ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	<u>1011578</u>	Washer, 5/16 Type B Flat	1	
2	<u>1011697</u>	Washer, 5/16 Flat	1	
3	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	1	
4	<u>1016183</u>	Screw, 3/8-16 X 7.00 Hex Cap	2	
5	<u>1016269</u>	Screw, 5/16-18 Thrd Forming	2	
6	<u>1017313</u>	Steering Shaft Assembly (includes items 7 through 15)	1	
7	<u>1012604</u>	Washer, 0.675 ID X 1.19 OD	1	
8	<u>1012605</u>	Ring, 0.579 Internal Retaining	1	
9	<u>1014125</u>	Wedge, Molded	2	
10	<u>1014126</u>	Seat, Plastic Bearing	2	
11	<u>1014213</u>	Bearing, Ball	2	
12	<u>1014214</u>	Ring, Retaining	1	
13	<u>1014217</u>	Spring, Steering Shaft	1	
14	<u>1017314</u>	Column, Aluminum Steering	1	
15	<u>1017315</u>	Shaft Steering Column	1	
16	<u>1017317</u>	Tube Cover, Steering Column	1	
17	101984801	Kit, Steering Column Mounting Bracket (includes items 18 and 19)	1	
18	N/A	Bracket, RH Steering Column Mount	1	
19	N/A	Bracket, LH Steering column mount	1	
20	<u>102278001</u>	Boot, Steering Column Round	1	
21	<u>334</u>	Washer, 3/8, Type A, Flat	4	
22	<u>8754</u>	Locknut, 3/8-16 Hex	2	

6

G

E

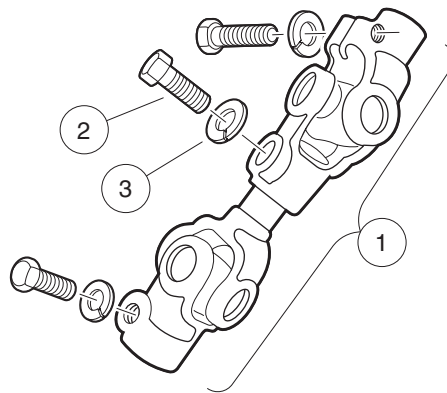

001217-001


INTERMEDIATE STEERING SHAFT (WANDA) – TURF/CA/ VILLAGER

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		6
1	<u>103601601</u>	Shaft, Intermediate Steering (includes items 2 and 3)	1	G
2	<u>1017226</u>	Bolt, Hex-Head, 8mm X 1.25 - 30	3	E
3	<u>7174</u>	Lockwasher, 5/16 Split	3	

6

G

E

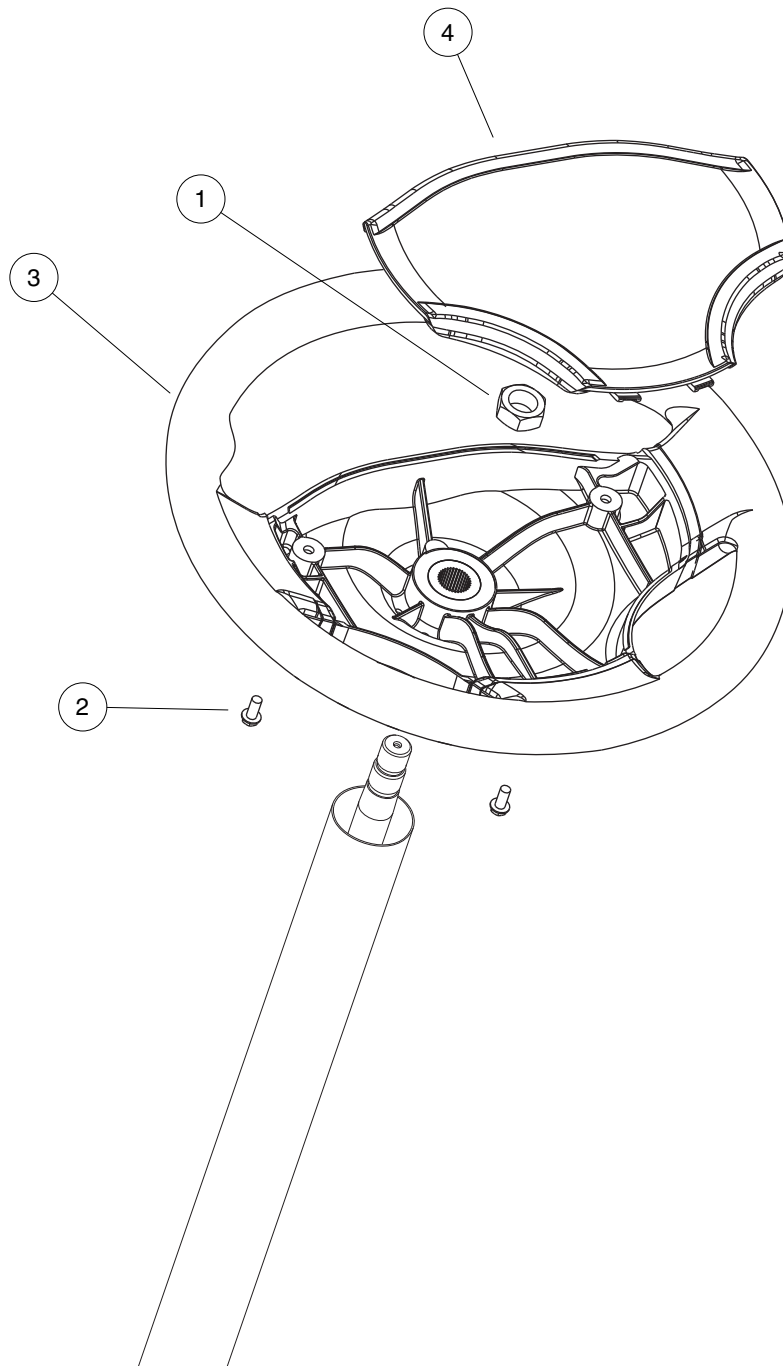

000246-007

STEERING WHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1017273	Nut, 5/8-18 Nylon Insert Jam	1
2	101850301	Screw, #12-16 X 0.50 Washer-Head Hi-Lo	2
3	103724502	Wheel, Steering, Splined	1
4	103724602	Cover, Steering Wheel, Generic	1

6


G

E

6

G



E

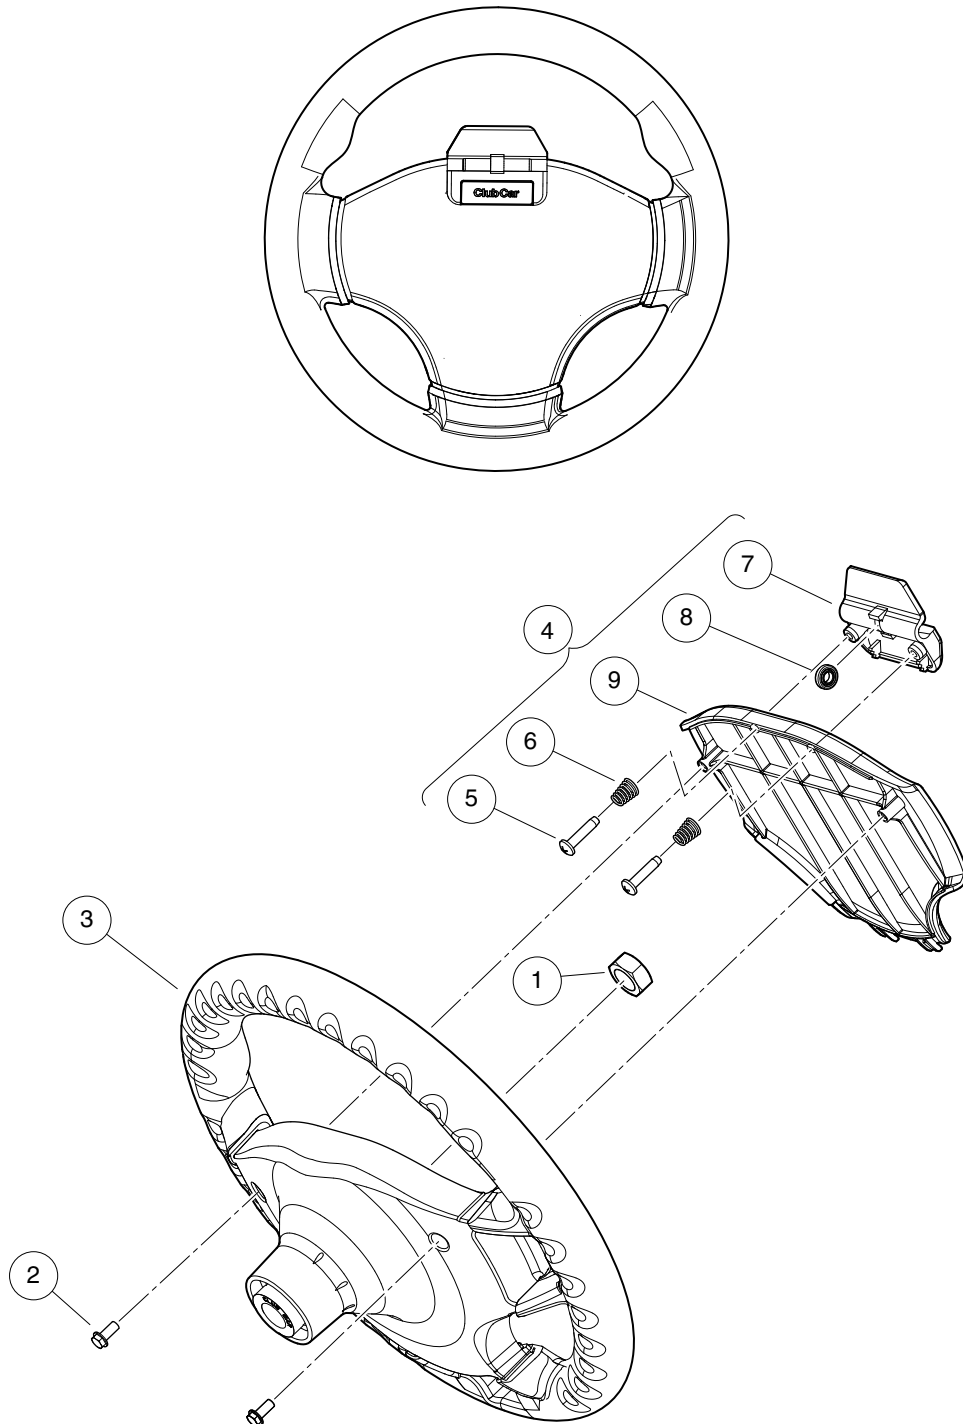

001504-001

STEERING WHEEL WITH CLIP


ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	<u>1017273</u>	Nut, 5/8-18 Nylon Insert Jam	1	
2	<u>101850301</u>	Screw, #12-16 X 0.50 Washer-Head Hi-Lo	2	
3	<u>103724502</u>	Wheel, Steering, Splined	1	
4	<u>103724901</u>	Asm, Scorecard, Clip (includes items 5 through 9)	1	
5	<u>1012565</u>	Screw, #12 Phillips Round Head	2	
6	<u>1012566</u>	Tapered Compression Spring	2	
7	<u>1016154</u>	Clip, Scorecard	1	
8	<u>1016214</u>	Pencil Grip	1	
9	<u>103724601</u>	Cover, Steering Wheel, Clip	1	

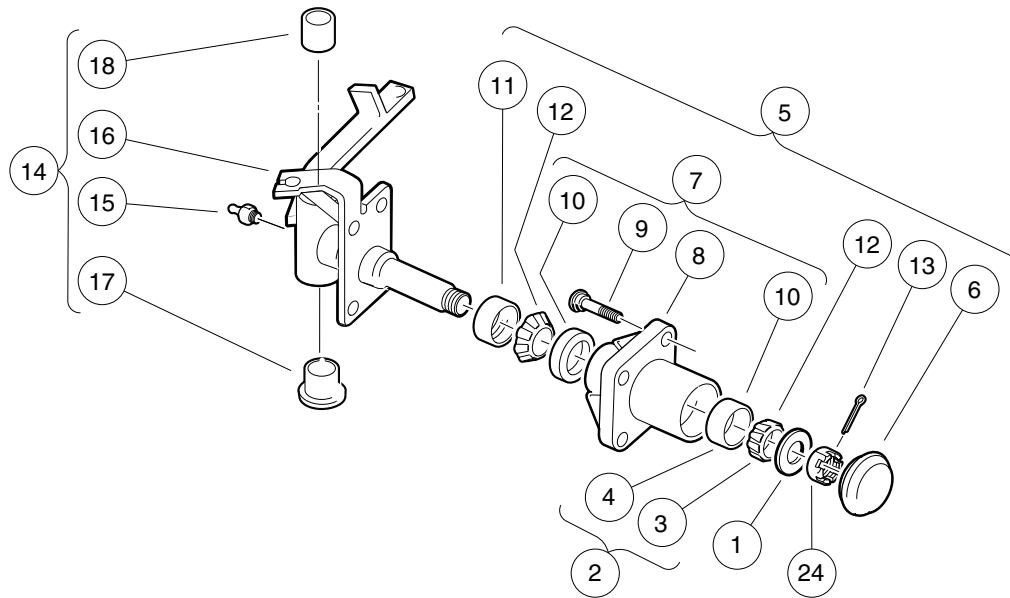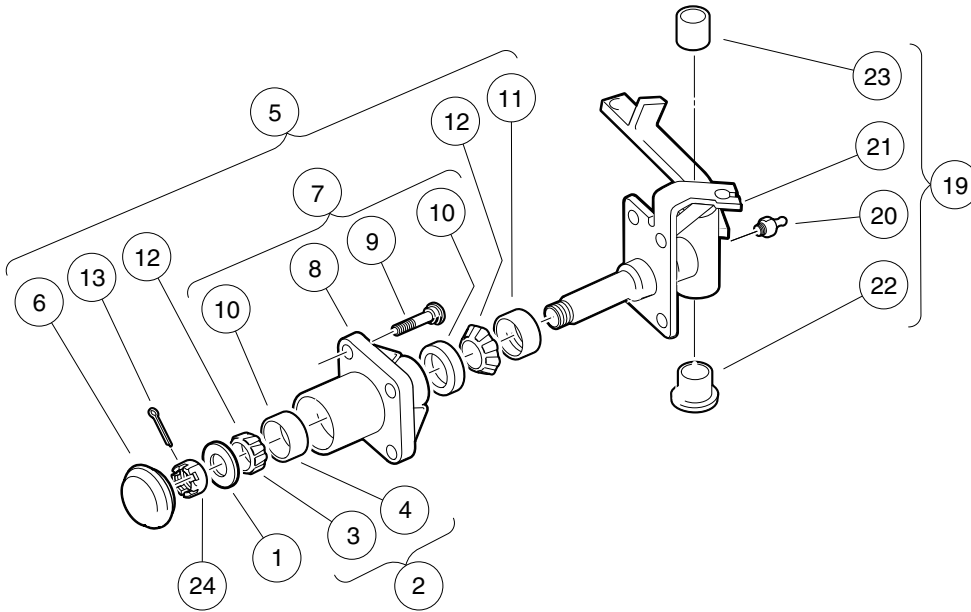6**G****E**

000310-002

FRONT SPINDLES AND HUBS – VEHICLES WITH FOUR-WHEEL BRAKES AND MAINTENANCE-FREE BALL JOINTS


ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	<u>1010005</u>	Washer, 3/4 Flat	2	
2	<u>1011393</u>	Hub Bearing Package (includes items 3 and 4)	4	
3	<u>7274</u>	Bearing, Front Hub Wheel	1	
4	<u>7308</u>	Race, Front Hub Bearing	1	
5	<u>1011892</u>	Hub Assembly (includes items 6 through 13)	2	
6	<u>1011887</u>	Dust Cover	1	
7	N/A	Hub (includes items 8 through 10)	1	
8	N/A	Front Hub	1	
9	<u>103477901</u>	Lug Stud, 1/2-20 Unf, 4037	4	
10	<u>7308</u>	Race, Front Hub Bearing	2	
11	<u>1013135</u>	Seal, Double Lip	1	
12	<u>7274</u>	Bearing, Front Hub Wheel	2	
13	<u>7910</u>	Pin, 5/32 X 1.00 Cotter	1	
14	<u>103717302</u>	Asm, Spindle, Lh, 4wb, Sp (includes items 15 through 18)	1	
15	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
16	N/A	Subasm, Spindle, Lh, 4wb	1	
17	<u>7048</u>	Bushing, Flanged Bronze	1	
18	<u>8067</u>	Bushing, Bronze Spindle	1	
19	<u>103717402</u>	Asm, Spindle, Rh, 4wb, Sp (includes items 20 through 23)	1	
20	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1	
21	N/A	Subasm, Spindle, Rh, 4wb	1	
22	<u>7048</u>	Bushing, Flanged Bronze	1	
23	<u>8067</u>	Bushing, Bronze Spindle	1	
24	<u>7840</u>	Nut, 3/4-16 Hex Slotted	2	

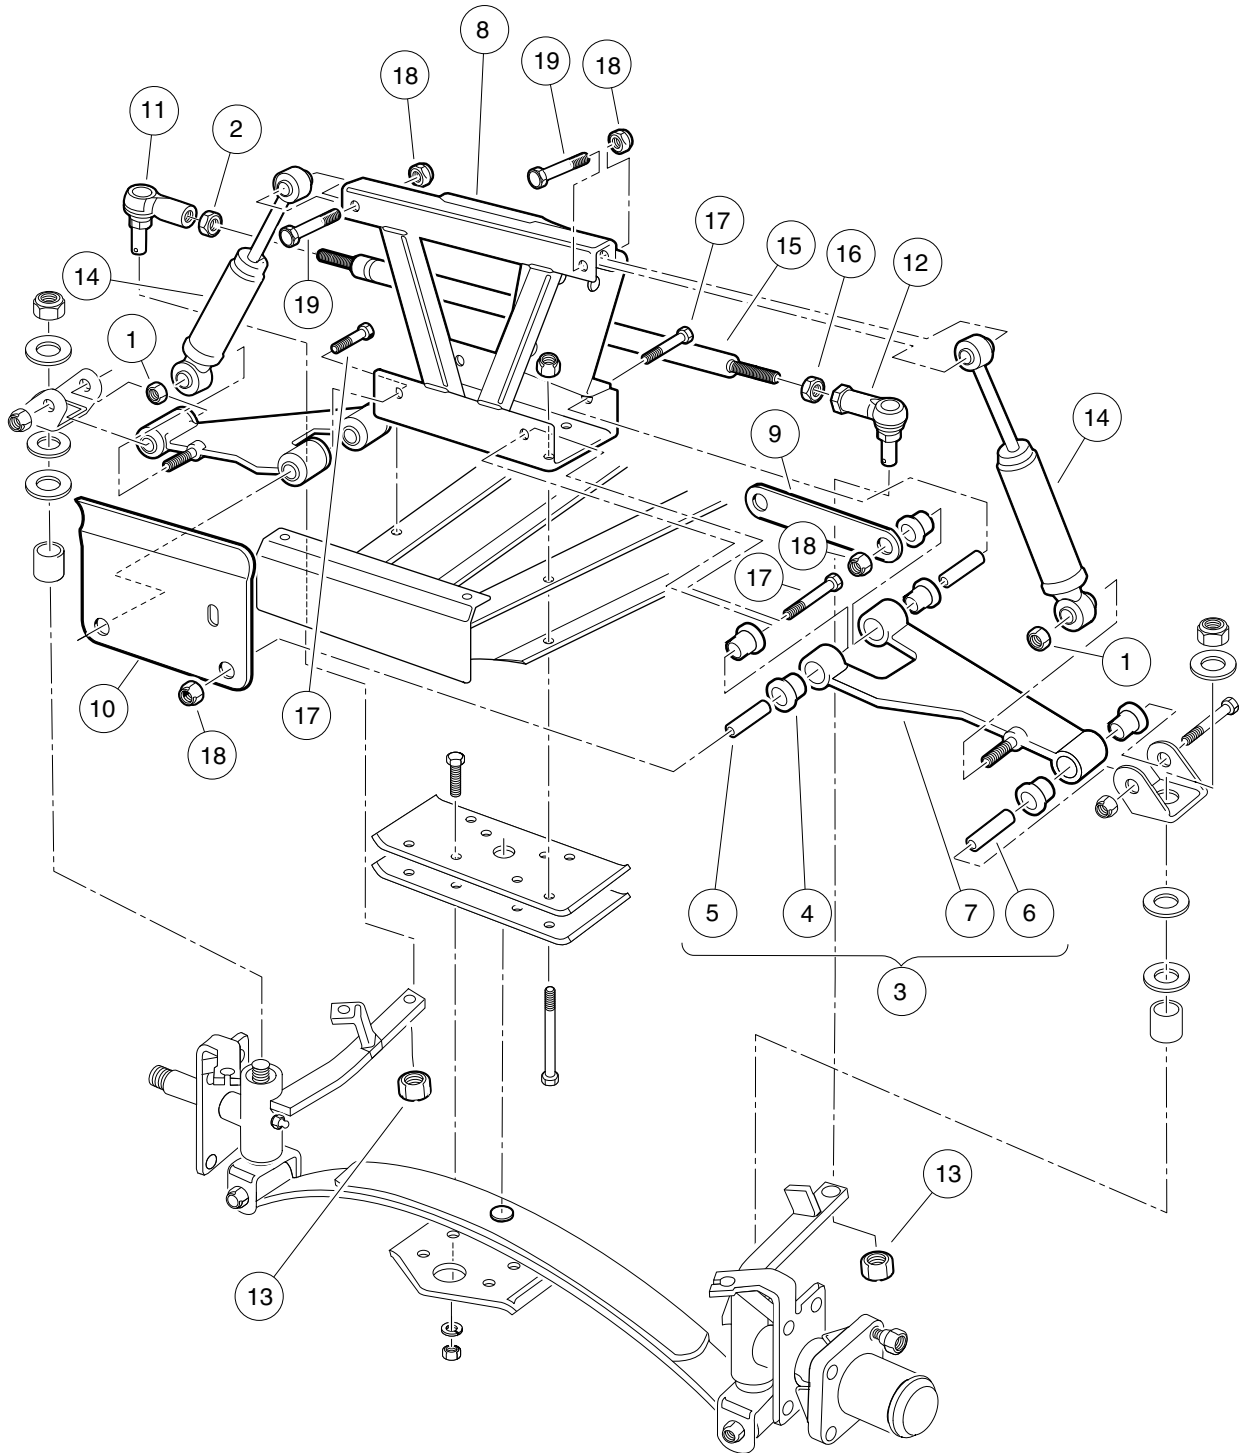6**G****E**

001265-001

FRONT SUSPENSION, UPPER – VILLAGER 6 AND 8 WITH MAINTENANCE-FREE BALL


ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2	
2	<u>1013042</u>	Nut, 12mm Hex	1	
3	<u>1016353</u>	Sub-Assembly, Delta A-Plate (includes items 4 through 7)	2	
4	<u>1016346</u>	Bushing, Urethane	6	
5	<u>1016349</u>	Sleeve, Delta Inner	2	
6	<u>1016350</u>	Sleeve, Delta Outer	1	
7	<u>1016351</u>	Delta A-Plate	1	
8	<u>1016385</u>	Delta Shock and Gear Support Assembly	1	
9	<u>1017266</u>	A-Plate Strap	1	
10	<u>101955001</u>	Brake Cable Guide Bracket	1	
11	<u>102022601</u>	End, Tie Rod M12 X 1.25 Rh	1	
12	<u>102022602</u>	End, Tie Rod, M12 X 1.25, Lh	1	
13	<u>102289201</u>	Nut - Hex Locking, M12 X 1.25	3	
14	<u>103351001</u>	Shock Absorber, Front, Common	2	
15	<u>103354701</u>	Rod, Tie, Male Thd	1	
16	<u>103653501</u>	Nut, Jam, M12-1.25, Lh	1	
17	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4	
18	<u>8754</u>	Locknut, 3/8-16 Hex	13	
19	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	2	

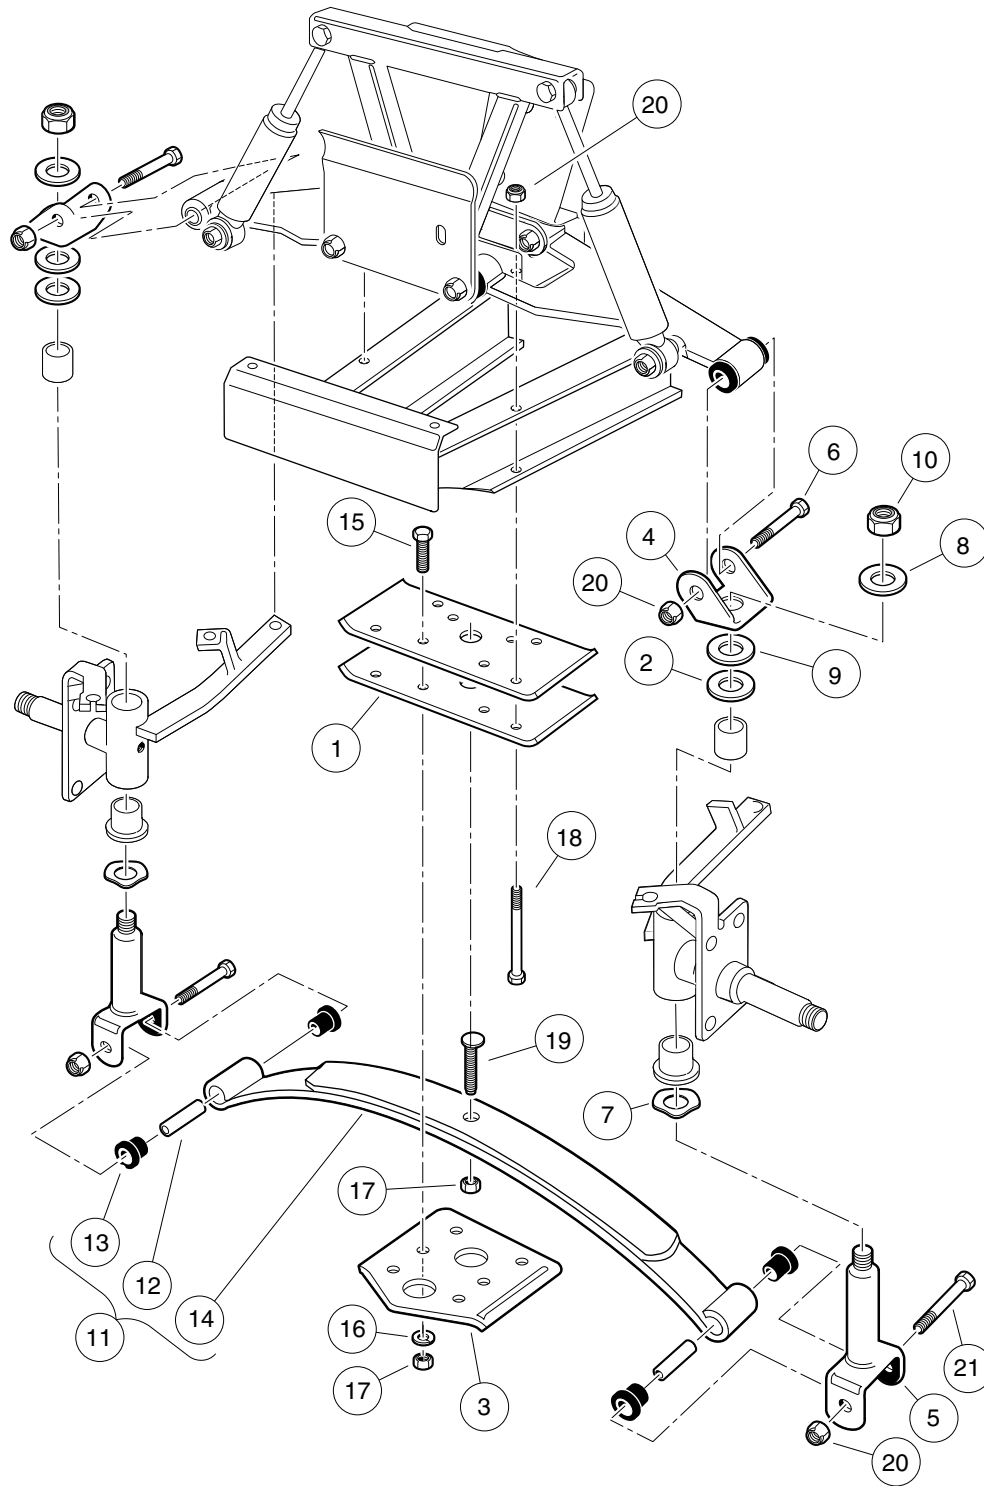

001266-001

FRONT SUSPENSION, LOWER – VILLAGER 6 WITH MAINTENANCE-FREE BALL

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	<u>1010124</u>	Plate, Spring Mount	2	E
2	<u>1010150</u>	Bearing, Thrust	2	
3	<u>1014276</u>	Plate, Front Spring Retainer	1	
4	<u>1016384</u>	Clevis, Delta Upper	2	
5	<u>1016386</u>	King Pin Assembly	2	
6	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	2	
7	<u>1016389</u>	Washer, 1.125 Od Wave	2	
8	<u>102564002</u>	Washer-1/2 Conical, Yellow	2	
9	<u>102684501</u>	Washer, M12 Hard Regular	2	
10	<u>102766301</u>	Nut, 1/2-20, Center Lock	2	
11	<u>103628801</u>	Spring Asm, Front, 2 Leaf (includes items 12 through 14)	1	
12	<u>1012303</u>	Bushing, Steel	2	
13	<u>1015583</u>	Bushing, Urethane	4	
14	<u>103502701</u>	Spring, Front, 2 Leaf	1	
15	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4	
16	<u>357</u>	Lockwasher, 3/8 Split	4	
17	<u>706</u>	Nut, Hex 3/8-16	5	
18	<u>7270</u>	Bolt, 3/8-16 X 4.50 Hex Head	4	
19	<u>8745</u>	Screw, Eccentric Adjustment	1	
20	<u>8754</u>	Locknut, 3/8-16 Hex	8	
21	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2	

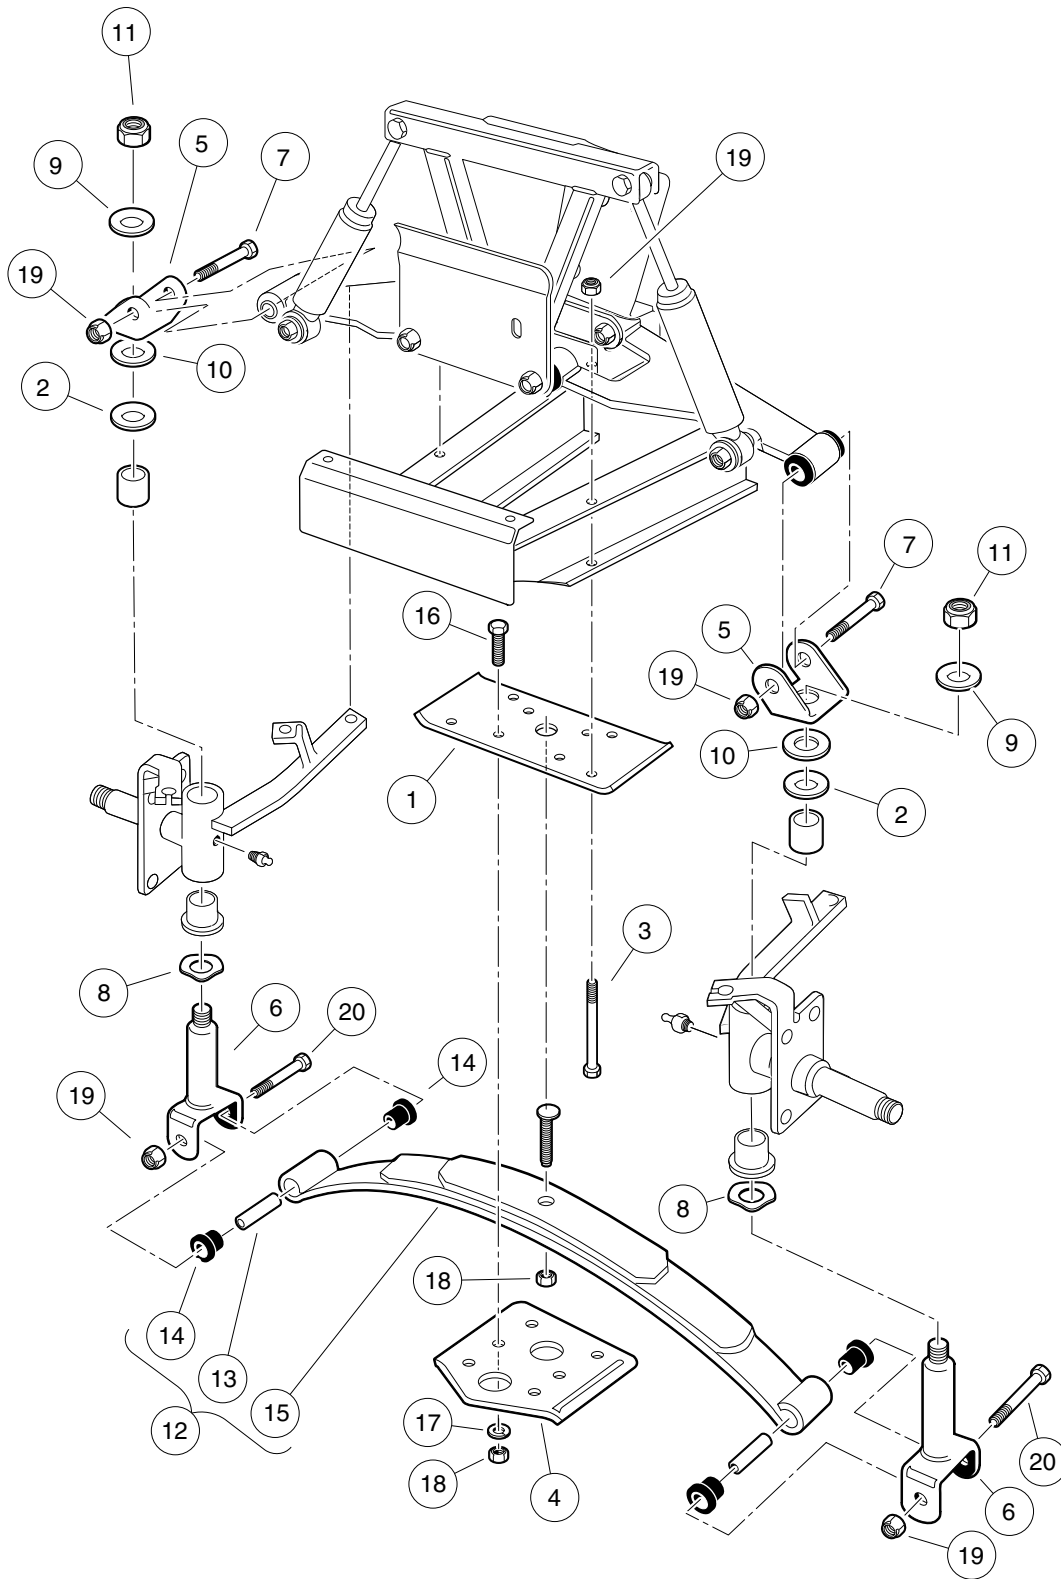


000313-005

FRONT SUSPENSION, LOWER – VILLAGER 8 WITH MAINTENANCE-FREE BALL JOINTS


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010124</u>	Plate, Spring Mount	1
2	<u>1010150</u>	Bearing, Thrust	2
3	<u>1010200</u>	Bolt, 3/8-16 X 4.25 Hex Head	4
4	<u>1014276</u>	Plate, Front Spring Retainer	1
5	<u>1016384</u>	Clevis, Delta Upper	2
6	<u>1016386</u>	King Pin Assembly	2
7	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	2
8	<u>1016389</u>	Washer, 1.125 Od Wave	2
9	<u>102564002</u>	Washer-1/2 Conical, Yellow	2
10	<u>102684501</u>	Washer, M12 Hard Regular	2
11	<u>102766301</u>	Nut, 1/2-20, Center Lock	2
12	<u>103628901</u>	Spring Asm, Front, 3 Leaf (includes items 13 through 15)	1
13	<u>1012303</u>	Bushing, Steel	2
14	<u>1015583</u>	Bushing, Urethane	4
15	<u>103502801</u>	Spring, Front, 3 Leaf	1
16	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4
17	<u>357</u>	Lockwasher, 3/8 Split	4
18	<u>706</u>	Nut, Hex 3/8-16	5
19	<u>8754</u>	Locknut, 3/8-16 Hex	8
20	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2

6
G
E

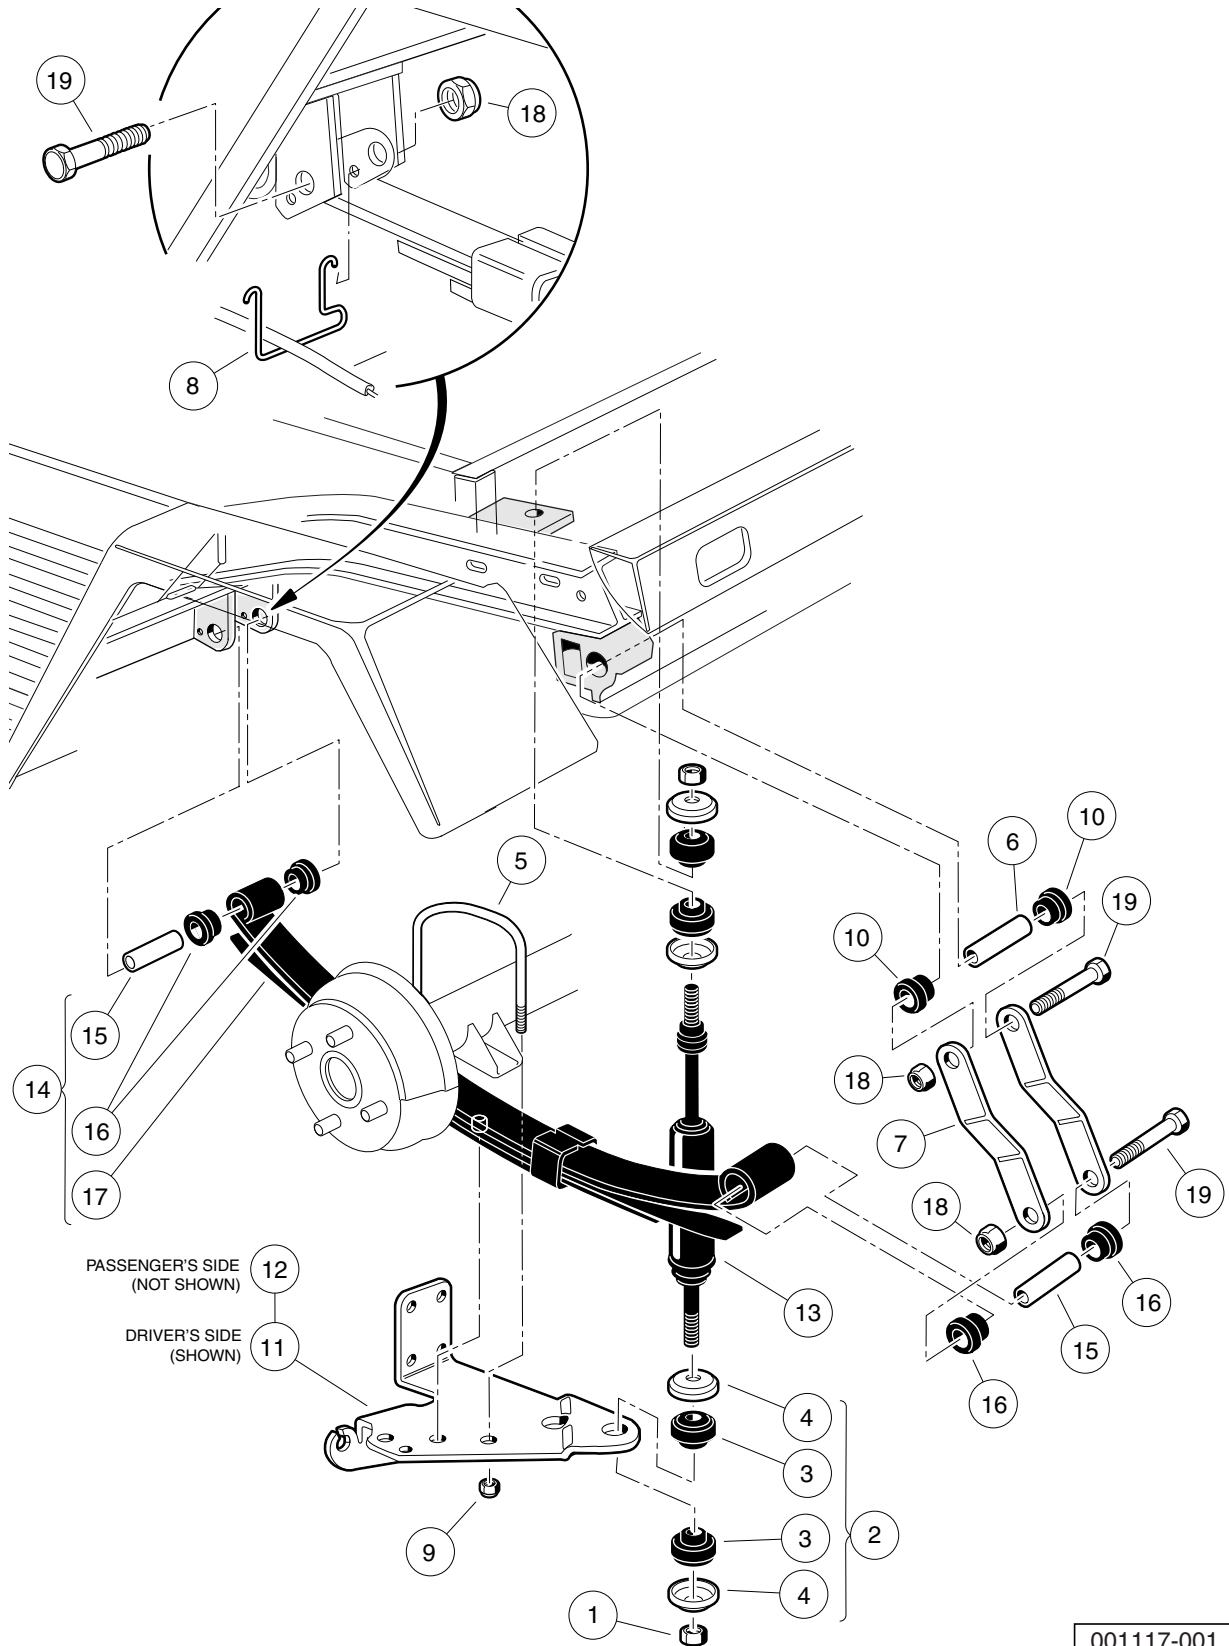6**G****E**

REAR SUSPENSION – TURF/CA 2, 2 PLUS, 6, AND VILLAGER GASOLINE

ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	<u>1010145</u>	Nut, 3/8-24 Hex	4	
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4	
3	N/A	Cushion, Shock Absorber	2	
4	N/A	Retainer, Shock Absorber Cushion	2	
5	<u>1012180</u>	U-Bolt	2	
6	<u>1012303</u>	Bushing, Steel	2	
7	<u>1012304</u>	Shackle, Rear Spring	4	
8	<u>1013207</u>	Hanger, Brake Cable	2	
9	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4	
10	<u>101558302</u>	Bushing, Urethane, Soft	4	
11	<u>101926501</u>	Bracket, Left-Hand	1	
12	<u>101929401</u>	Bracket, Right	1	
13	<u>103350901</u>	Shock Absorber, Rear, Utility	2	
14	<u>103657301</u>	Asm-rear 3leaf Spring, 600 Lb (includes items 15 through 17)	2	
15	<u>1012303</u>	Bushing, Steel	2	
16	<u>101558302</u>	Bushing, Urethane, Soft	4	
17	<u>102871801</u>	Rear Spring, 3leaf, 600 Lb/in	1	
18	<u>8754</u>	Locknut, 3/8-16 Hex	6	
19	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	6	
Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock mounting plate.				

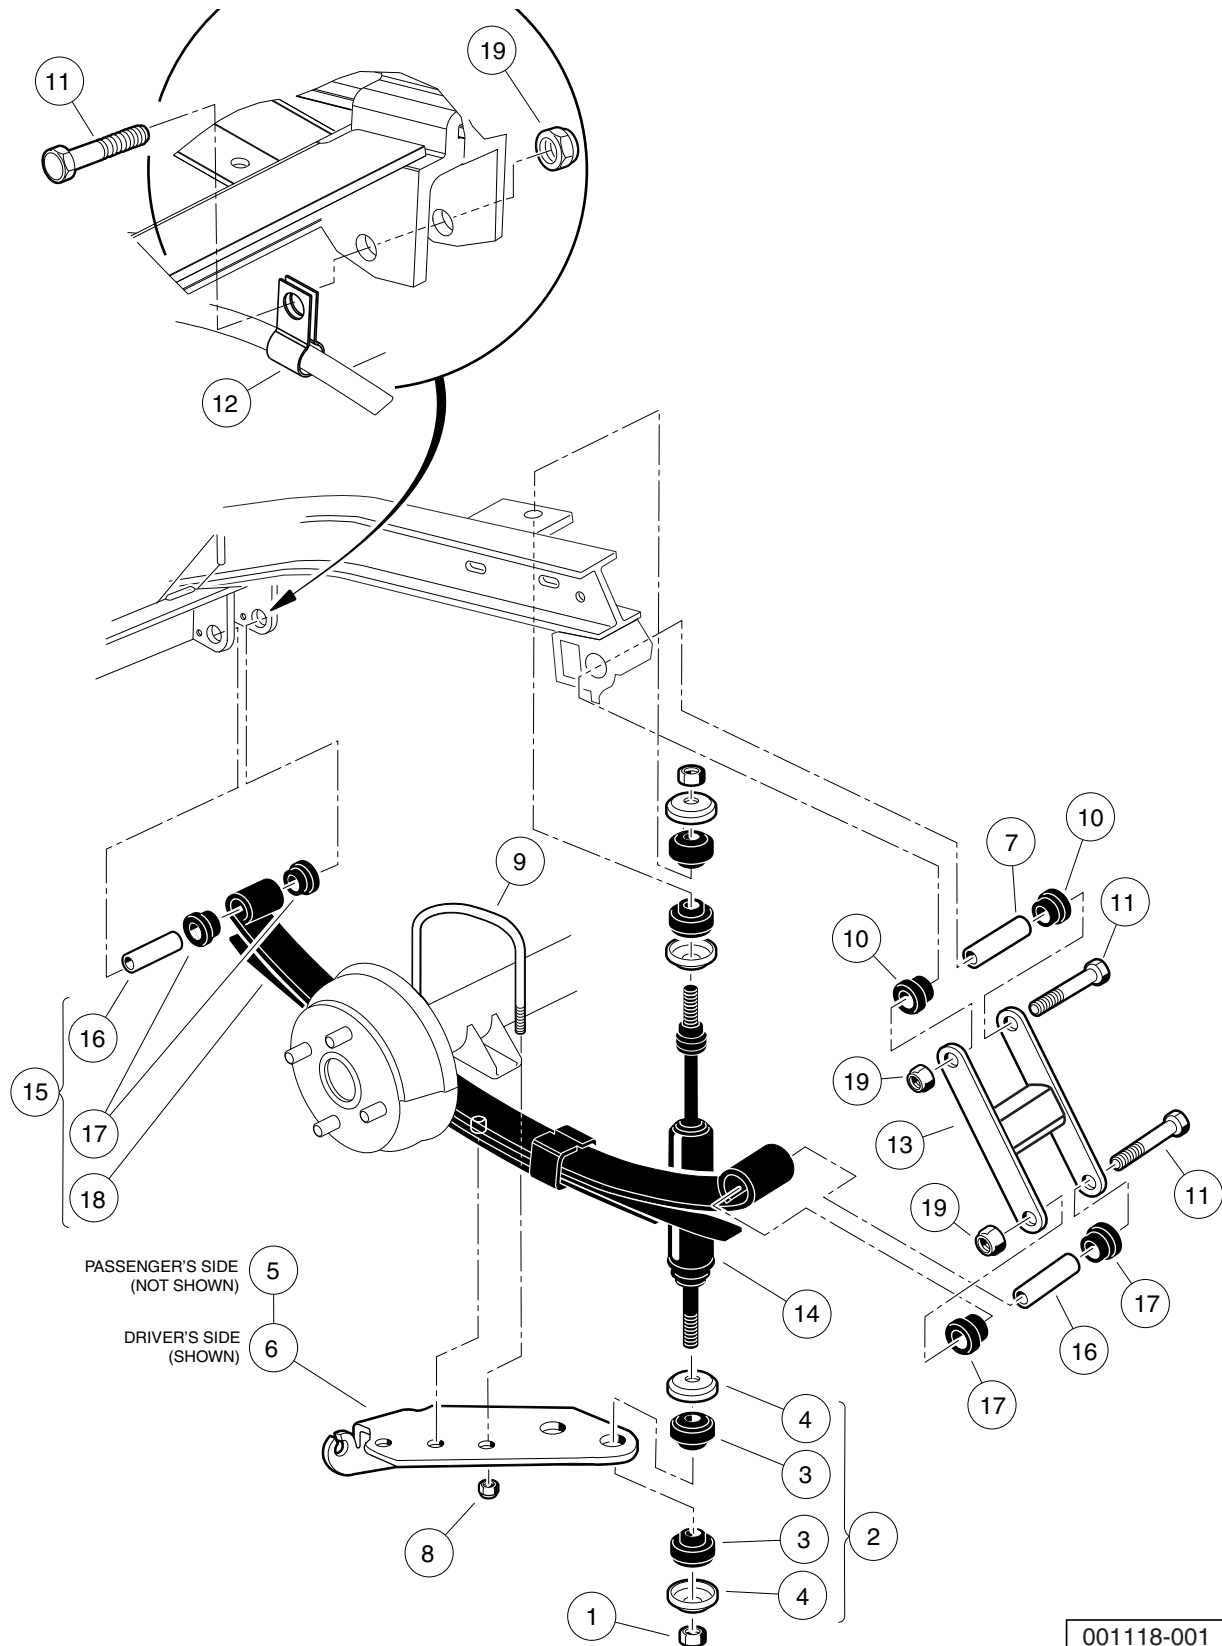
6**G****E**

001118-001

REAR SUSPENSION – TURF/CA 2, 6, AND VILLAGER IQ PLUS ELECTRIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010145</u>	Nut, 3/8-24 Hex	4
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4
3	N/A	Cushion, Shock Absorber	2
4	N/A	Retainer, Shock Absorber Cushion	2
5	<u>1012181</u>	Bracket, Shock Mounting, Right (Passenger)	1
6	<u>1012182</u>	Bracket, Shock Mounting, Left (Driver)	1
7	<u>1012303</u>	Bushing, Steel	2
8	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4
9	<u>1014902</u>	U-Bolt	2
10	<u>101558302</u>	Bushing, Urethane, Soft	4
11	<u>102066201</u>	Screw, 3/8-16 X 3.50 Hex Cap	6
12	<u>102891101</u>	Clamp, Cable, Brake, Sym	2
13	<u>102917101</u>	Weldment, Shackle	2
14	<u>103351101</u>	Shock, Absorber, Utility	2
15	<u>103657301</u>	Asm-rear 3leaf Spring, 600 Lb (includes items 16 through 18)	2
16	<u>1012303</u>	Bushing, Steel	2
17	<u>101558302</u>	Bushing, Urethane, Soft	4
18	<u>102871801</u>	Rear Spring, 3leaf, 600 Lb/in	1
19	<u>8754</u>	Locknut, 3/8-16 Hex	6
Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock mounting plate.			

6
G
E

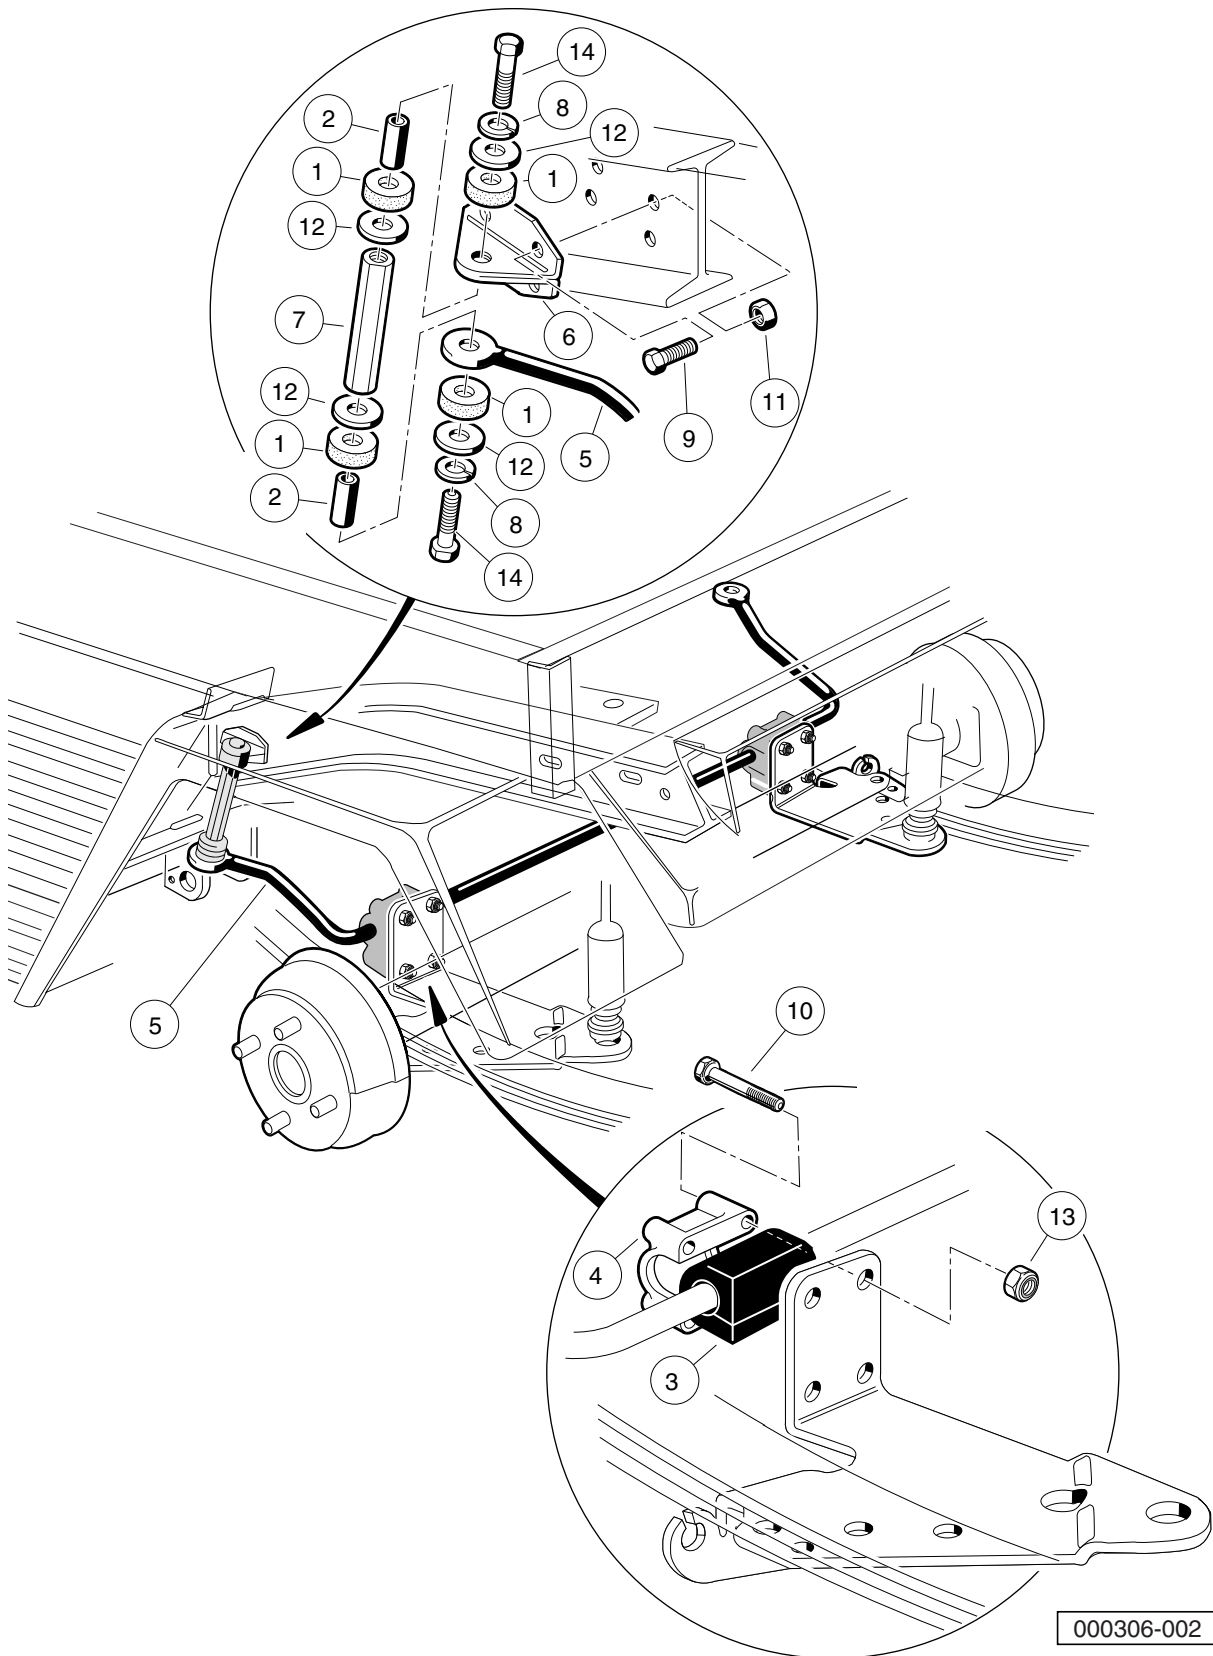6**G****E**

000306-002

STABILIZER BAR – TURF/CA 2, 2 PLUS, 6, AND VILLAGER GAS

ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	<u>1015453</u>	Compression Mount	8	
2	<u>1015457</u>	Spacer, 0.720"	4	
3	<u>1015613</u>	Bushing, Stabilizer Bar	2	
4	<u>1015614</u>	Support, Bushing	2	
5	<u>1015760</u>	Stabilizer Bar	1	
6	<u>1016813</u>	Mounting Bracket, Stabilizer Bar	2	
7	<u>1016814</u>	Link, Stabilizer Bar	2	
8	<u>357</u>	Lockwasher, 3/8 Split	4	
9	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	8	
10	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	8	
11	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	8	
12	<u>808</u>	Washer, 3/8 Type B Flat	8	
13	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	8	
14	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	4	

6

G

E


ELECTRICAL SYSTEM – CARBURETED GASOLINE VEHICLES

7

G

7

G

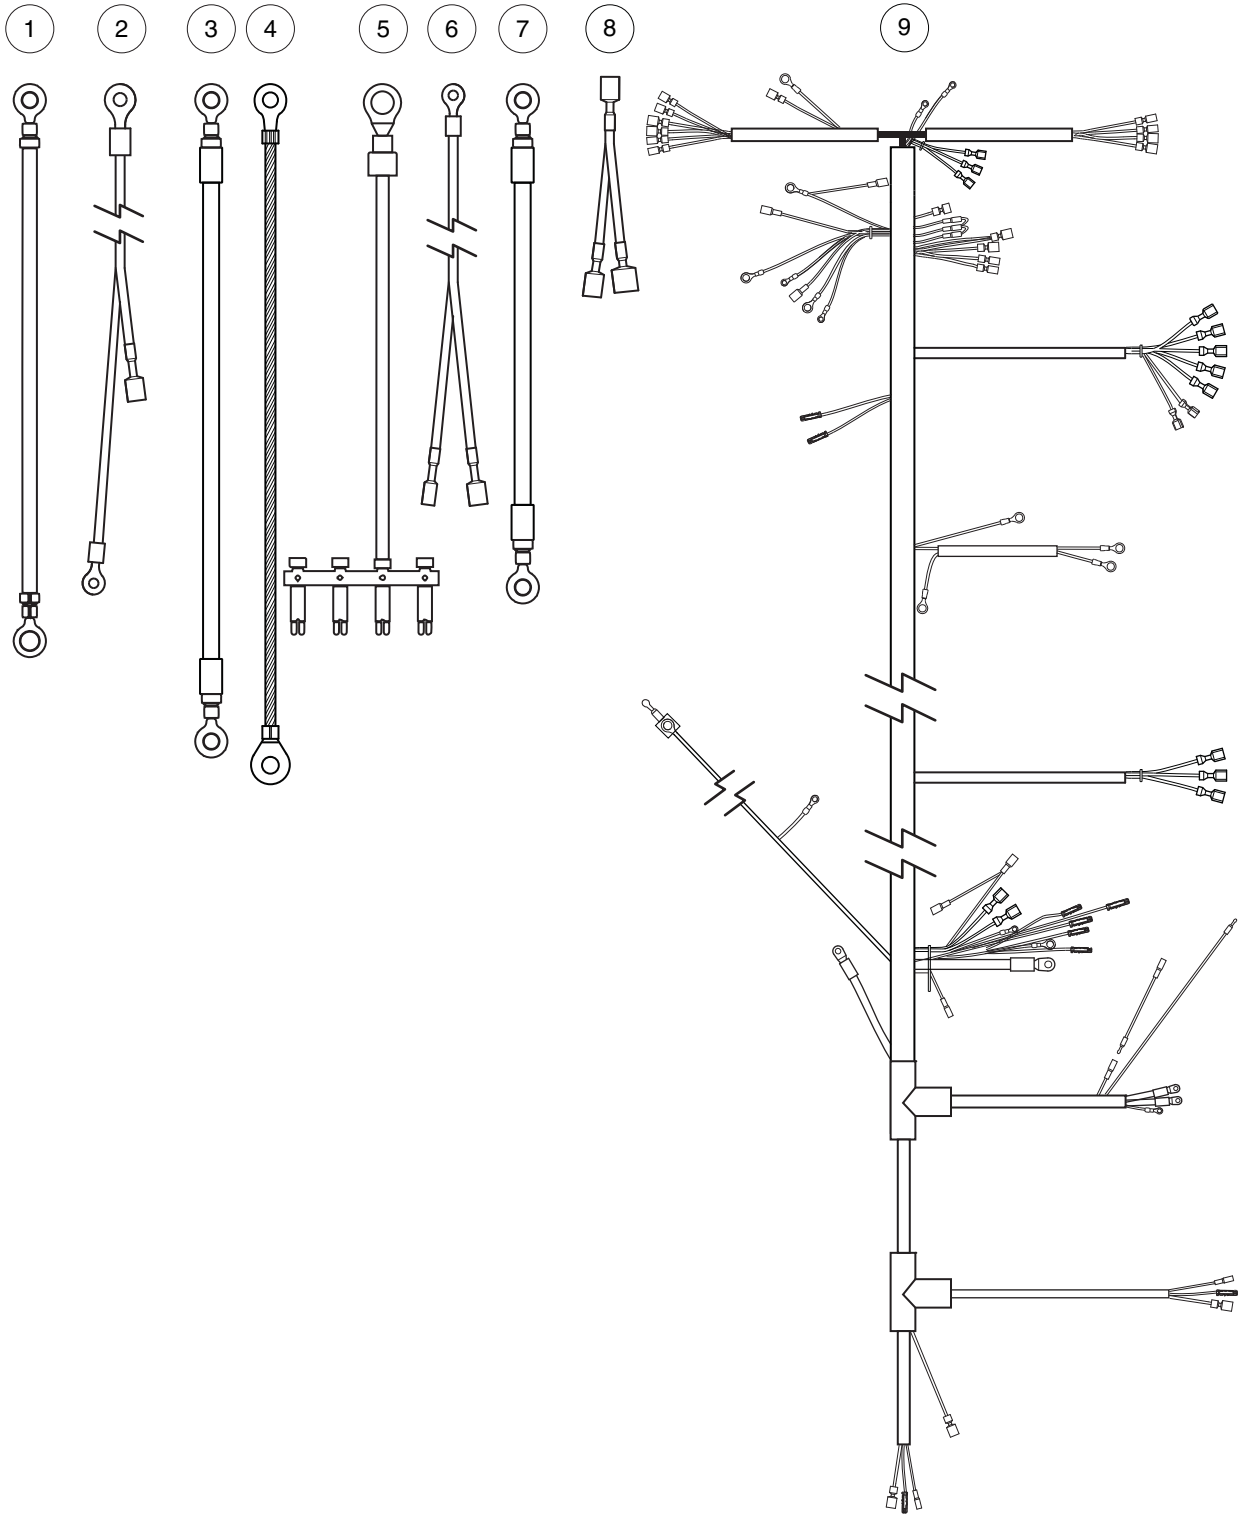

000574-003

WIRING – CARRYALL 6 AND VILLAGER 6 GAS WITH AMD STARTER GEN


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012382</u>	Wire Assy, #6 Black	1
2	<u>1012396</u>	Wire Assy #18 Black	1
3	<u>1014119</u>	Wire Assembly #6 Red	1
4	<u>1015332</u>	Wire, Ground, #10, Uninsulated	1
5	<u>1015737</u>	Wire Assy, #10 Red	1
6	<u>1017006</u>	Wire Assembly Orange #18	1
7	<u>101837301</u>	Wire Assy, #6 Green	1
8	<u>103348501</u>	Asm, Wire Meter, F-h Jumper	1
9	<u>103686501</u>	Asm, Harn, Str, Gas, Amd S/g	1

7

G

7


G

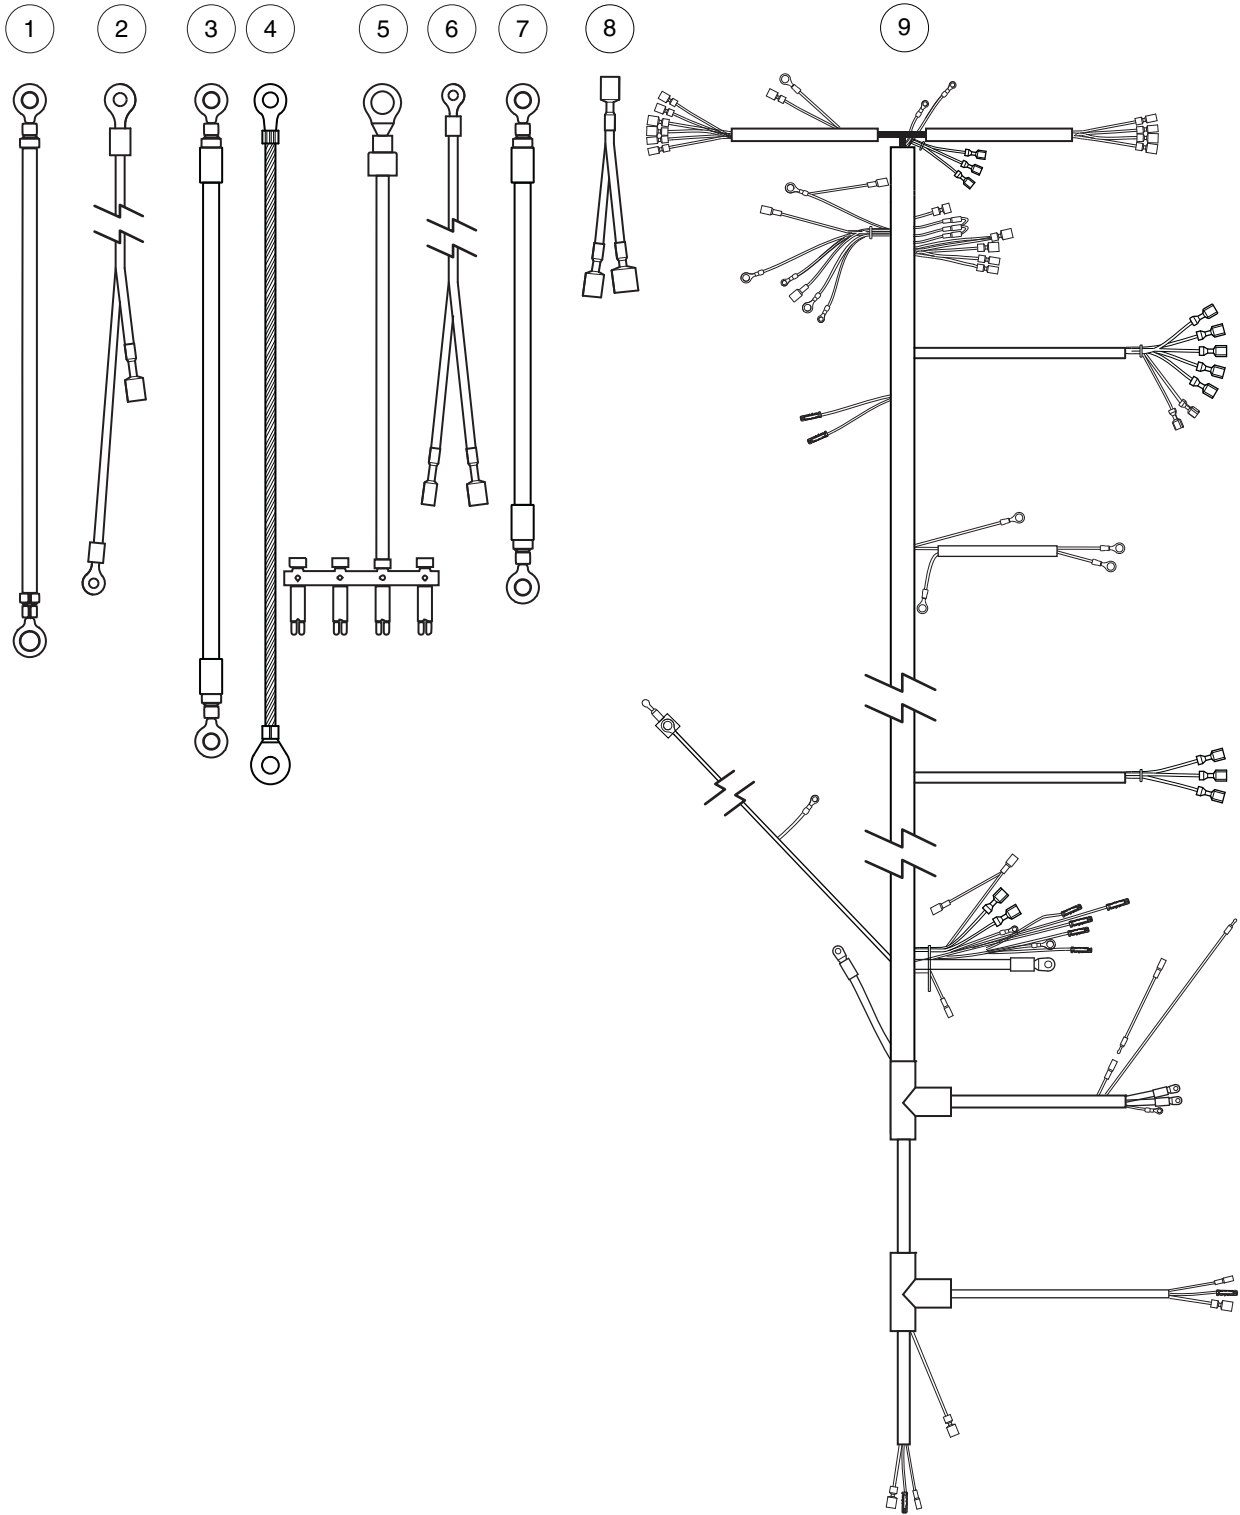

000574-003

WIRING – VILLAGER 8 GAS WITH AMD STARTER GEN

ITEM	PART NO.	DESCRIPTION	QTY	7
		1 2 3 4		G
1	<u>1012382</u>	Wire Assy, #6 Black	1	
2	<u>1012396</u>	Wire Assy #18 Black	1	
3	<u>1014119</u>	Wire Assembly #6 Red	1	
4	<u>1015332</u>	Wire, Ground, #10, Uninsulated	1	
5	<u>1015737</u>	Wire Assy, #10 Red	1	
6	<u>1017006</u>	Wire Assembly Orange #18	1	
7	<u>101837301</u>	Wire Assy, #6 Green	1	
8	<u>103348501</u>	Asm, Wire Meter, F-h Jumper	1	
9	<u>103686601</u>	Asm, Harn, V8, Gas, Amd S/g	1	

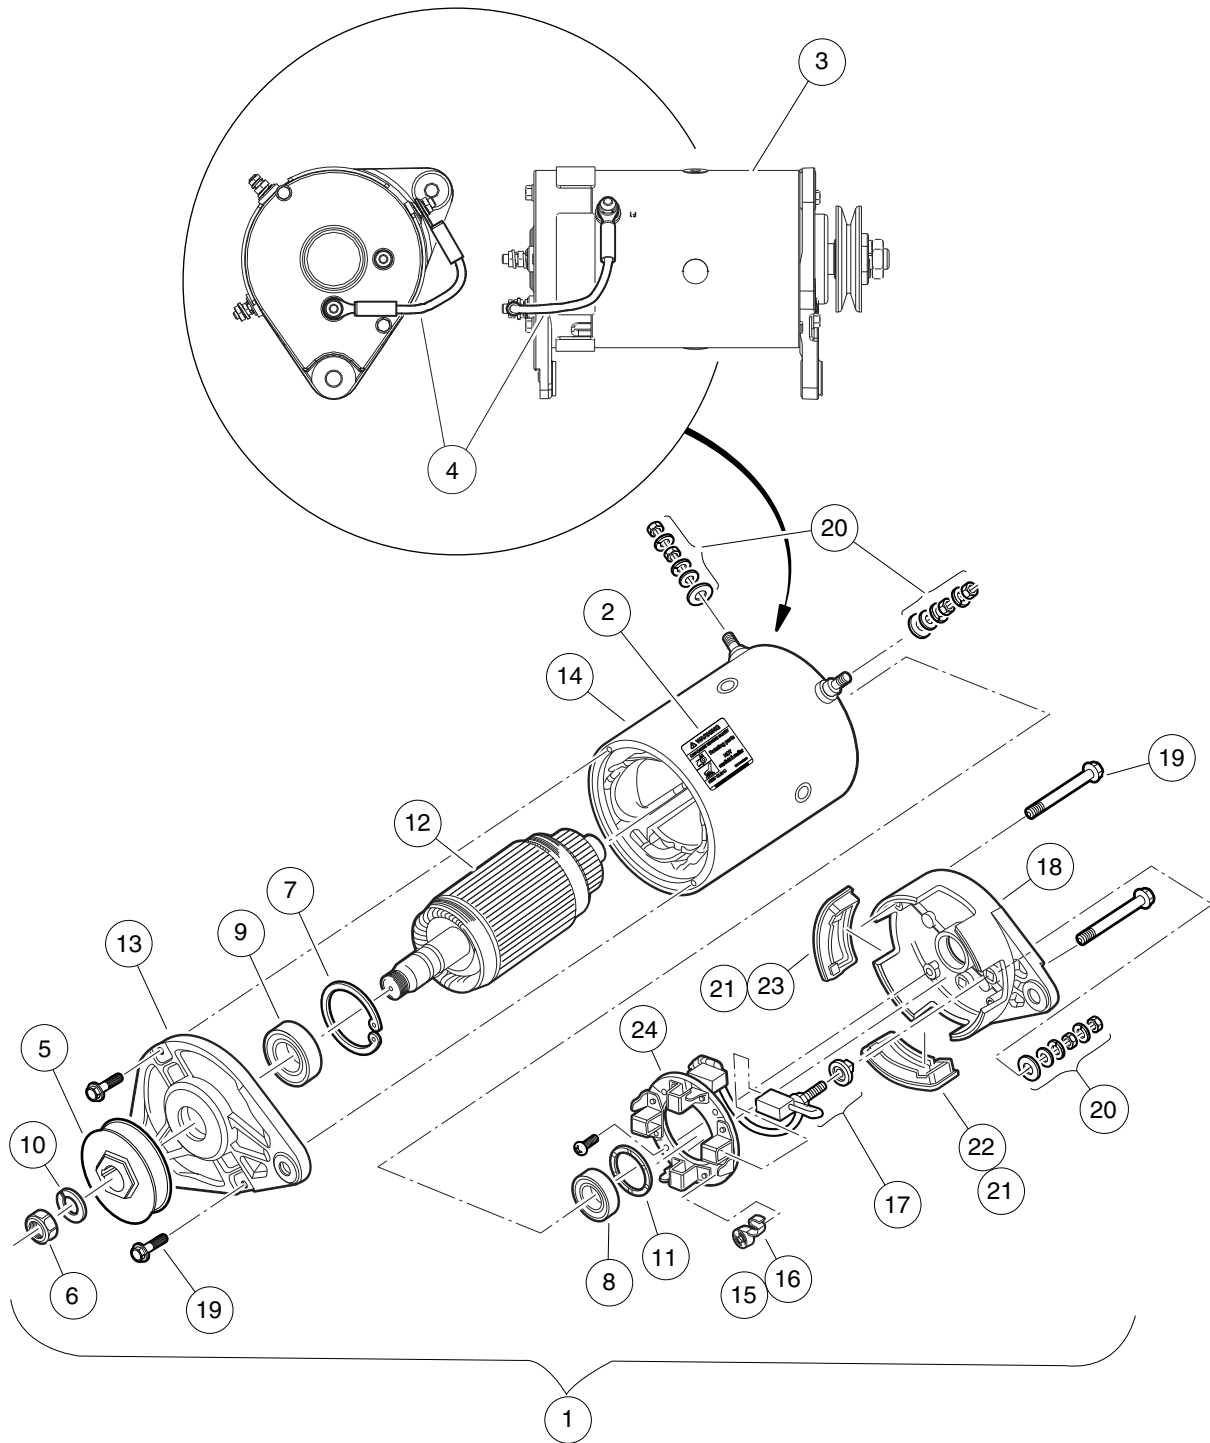


000124-005

STARTER/GENERATOR ASSEMBLY (KEY-START), MODEL 114-04-4001A

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103678502</u>	Asm, St/gen, Bi-rot, Ks, Svc (includes items 2 and 3)	1
2	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	1
3	N/A	St/gen, Bi-rot, Util, Ks (includes items 4 through 24)	1
4	<u>101837301</u>	Wire Assy, #6 Green	1
5	<u>102711001</u>	Pulley, V-Belt	1
6	<u>102838701</u>	Nut, Hex, M14x2, S/G	1
7	<u>102838801</u>	Retainer, Front, S/G	1
8	<u>102838901</u>	Bearing, Ball, Front, S-g	1
9	<u>102839001</u>	Bearing, Ball, Front, S-g	1
10	<u>102839301</u>	Washer, Lock M14x2, S-g	1
11	<u>102841101</u>	Washer, Wave, S-g	1
12	N/A	Asm, Armature, Starter/Generator	1
13	<u>102844601</u>	Head, Drive End, S-g	1
14	<u>102844701</u>	Asm, Frame and Field, Starter/Generator	1
15	<u>103347101</u>	Kit, Spring Brush, Starter/Generator (includes item 16)	1
16	N/A	Spring, Brush, S-g	4
17	<u>103347301</u>	Set, Brush Term, S-g	1
18	<u>103347601</u>	Head, Comm End, S-g	1
19	<u>103347701</u>	Set, Fastener, Ceh Deh, S-g	1
20	<u>103347801</u>	Set, Term Hardware, S/G	1
21	<u>103347901</u>	Kit, Cover, Brush Insp, Starter/Generator (includes items 22 and 23)	1
22	N/A	Plug, Rubber Drain, Start/Generator	3
23	N/A	Cover, Inspection, S-g	1
24	<u>103953301</u>	Kit, Brush And Brush Holder	1


7
G

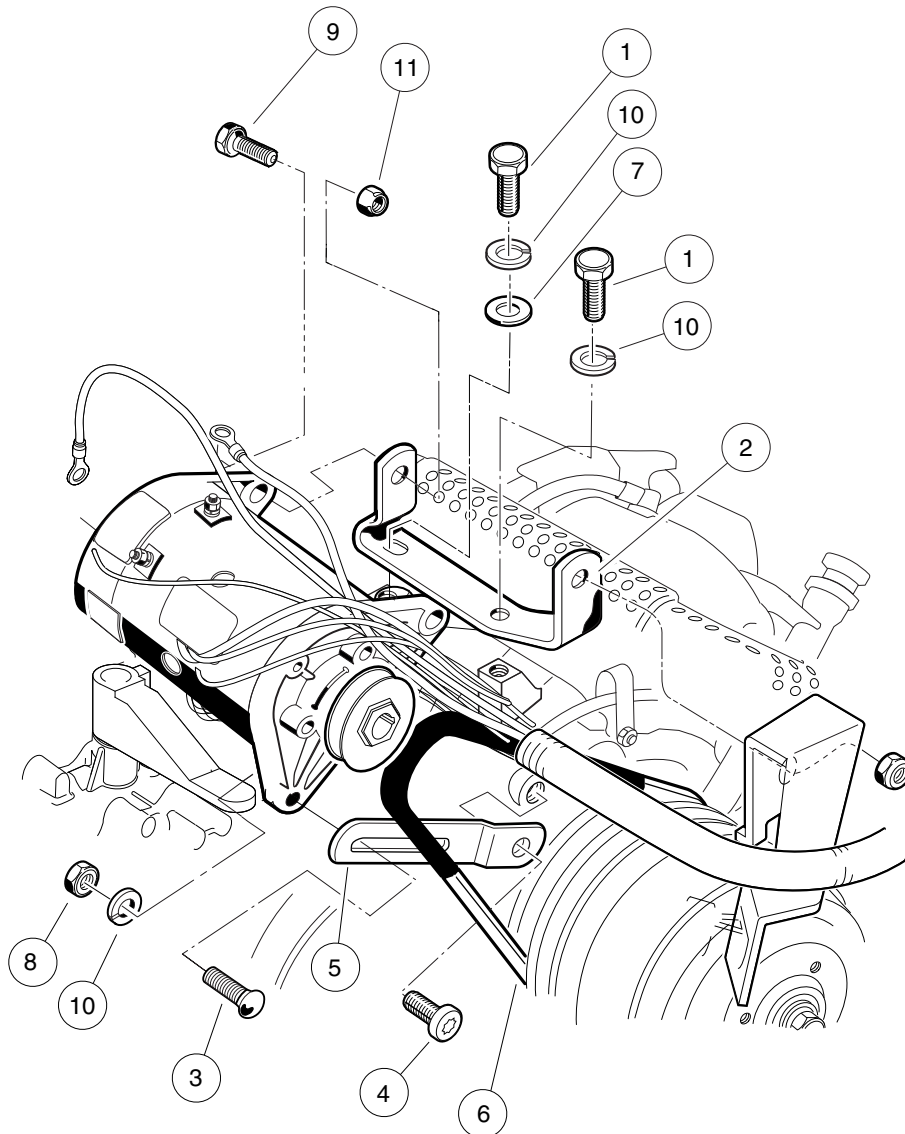

000238-005

STARTER/GENERATOR MOUNTING – 114-0X-400XX MODELS

ITEM	PART NO.	DESCRIPTION	QTY	7
		1 2 3 4		G
1	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	2	
2	<u>101524002</u>	Bracket, Starter/Generator Mounting	1	
3	<u>1015932</u>	Bolt, Carriage, 5/16-18	1	
4	<u>1016074</u>	Screw, M8-1.25 X 18mm Torx	1	
5	<u>1016883</u>	Bracket, Starter/Generator Adjustment	1	
6	<u>101916701</u>	V-Belt	1	
7	<u>1241</u>	Washer, 5/16 Type A Flat	1	
8	<u>1242</u>	Nut, 5/16-18 Hex	1	
9	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	2	
10	<u>7174</u>	Lockwasher, 5/16 Split	3	
11	<u>8754</u>	Locknut, 3/8-16 Hex	2	

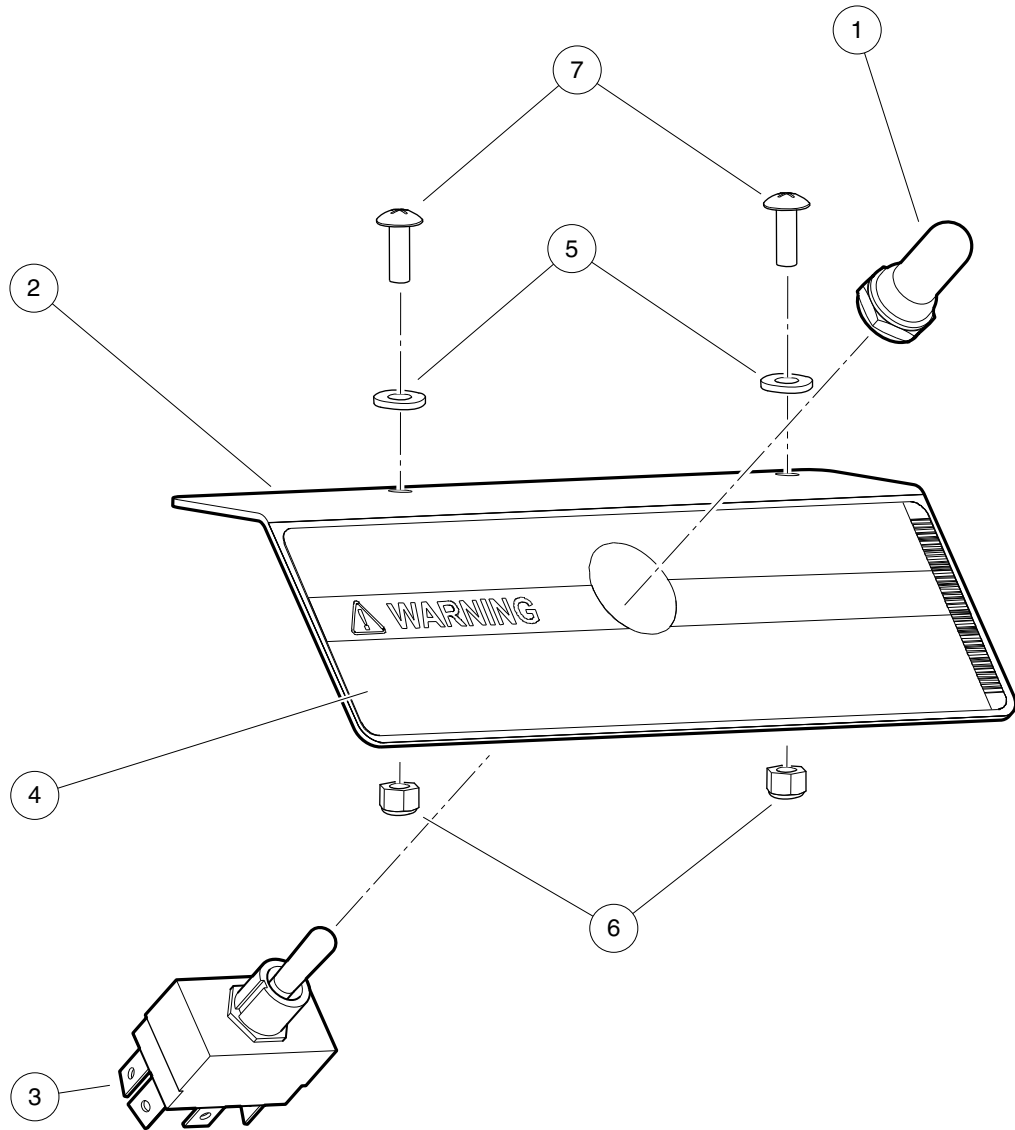


000755-003

OPERATION AND MAINTENANCE SWITCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101908401</u>	Boot, Switch	1
2	<u>101922501</u>	Bracket, Tow/Run Switch Mounting	1
3	<u>103198401</u>	Switch, Toggle, SPDT	1
4	<u>103205501</u>	Decal, Run/Service Switch	1
5	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
6	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2
7	<u>8248</u>	Screw, 1/4-20 X 0.75, Truss-Head Machine	2



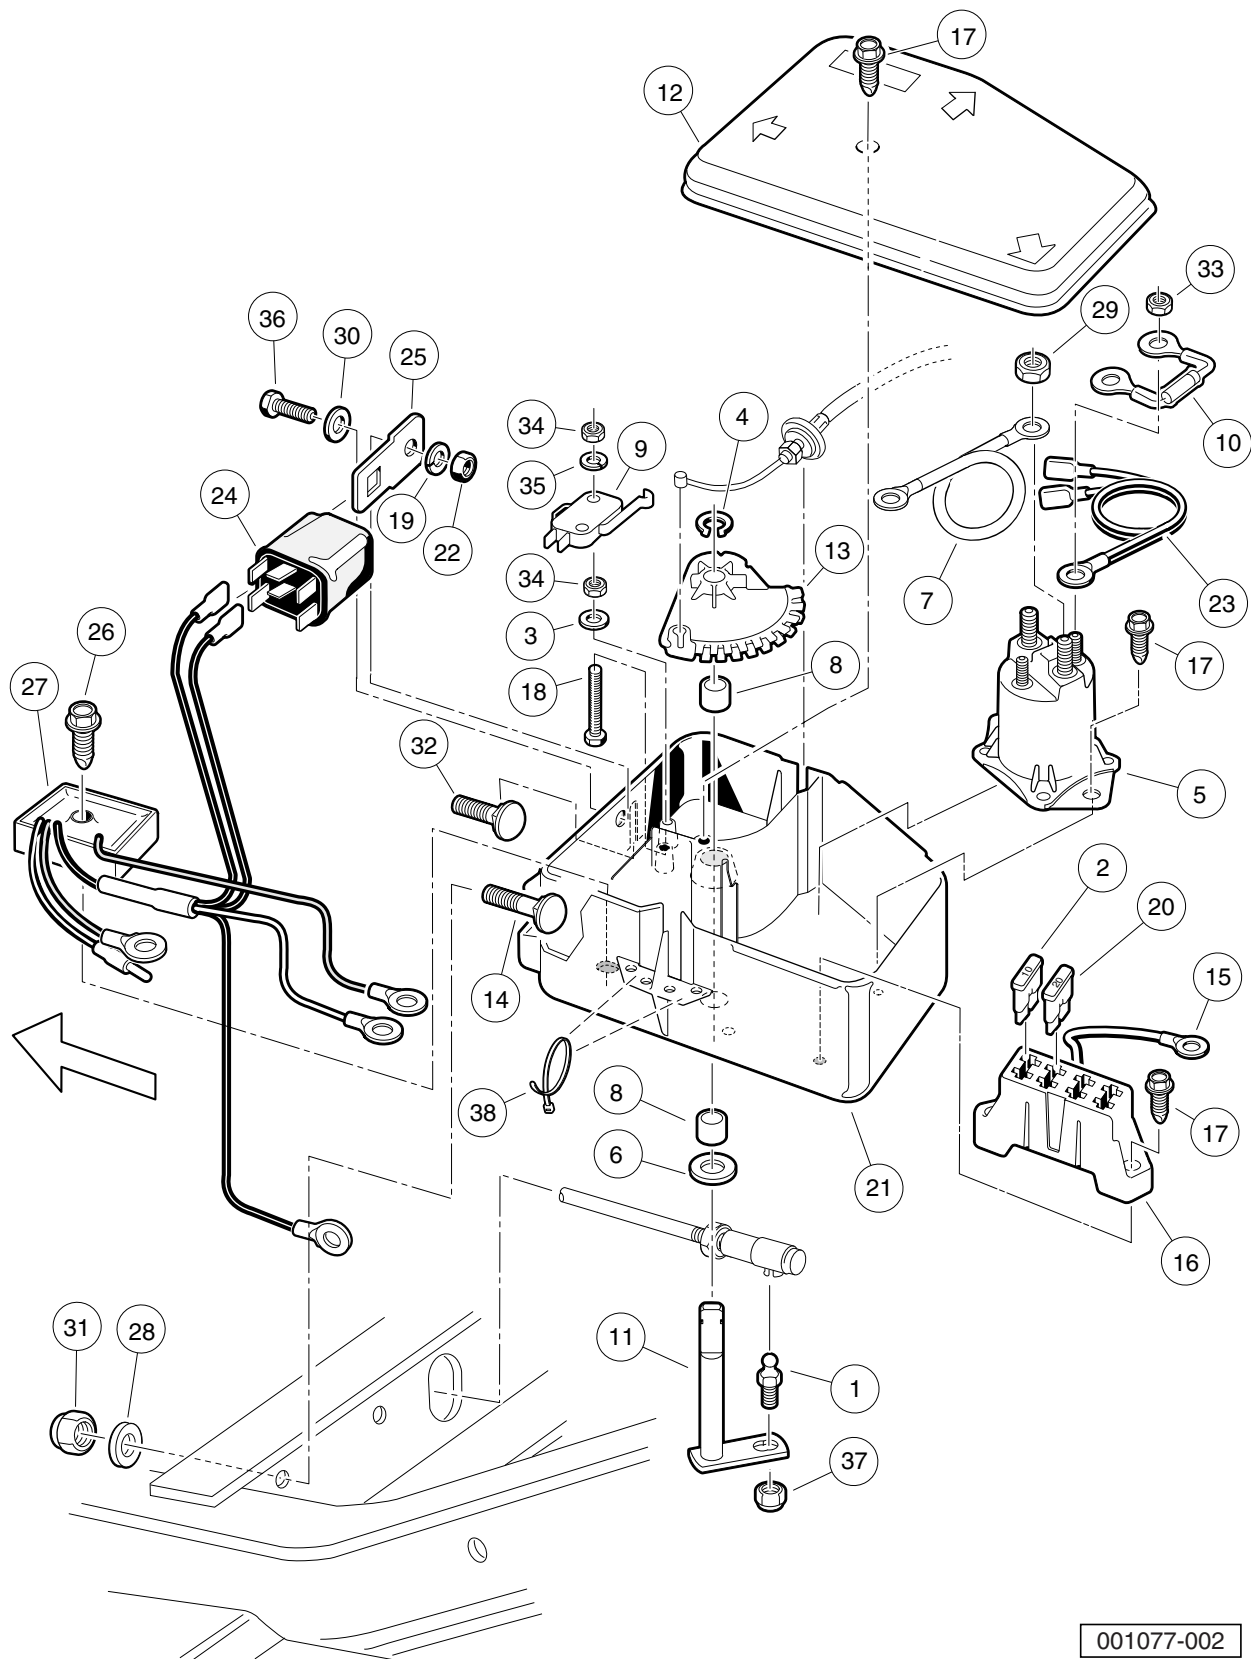


001077-002

ELECTRICAL COMPONENT BOX – CARRYALL 6 AND VILLAGER 6/8

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010954</u>	Stud, Ball, 1/4-28 X 0.560	1
2	<u>1012295</u>	Fuse, 10-Amp	1
3	<u>1012431</u>	Washer, #4 Flat	2
4	<u>1013589</u>	Ring, Retaining, 0.338" Internal	1
5	<u>1013609</u>	Solenoid, 12-Volt	1
6	<u>1014065</u>	Washer, Flat, 0.38" ID, Delrin	1
7	<u>1014119</u>	Wire Assembly #6 Red	1
8	<u>1014145</u>	Bushing, Secondary Weight, Split	2
9	<u>1014807</u>	Switch, Limit	1
10	<u>1014948</u>	Diode	1
11	<u>1015345</u>	Bell Crank and Shaft Assembly	1
12	<u>1015372</u>	Cover, Electric Box	1
13	<u>1015373</u>	Cam, Electric Box	1
14	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	1
15	<u>1015737</u>	Wire Assy, #10 Red	1
16	<u>1015741</u>	Fuse Block	1
17	<u>1015752</u>	Screw, #12-16 X 0.625, Hi-Lo	5
18	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2
19	<u>1016</u>	Lockwasher, #10 Split	1
20	<u>1016423</u>	Fuse, 20-Amp	1
21	<u>1016997</u>	Electrical Component Box	1
22	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	1
23	<u>1017006</u>	Wire Assembly Orange #18	1
24	<u>1017239</u>	Relay W/mounting Bracket	1
25	<u>1017243</u>	Mounting Bracket, Relay	1
26	<u>101856102</u>	Screw, 1/4-15 X 1.50, Hi-lo, Hex	1
27	<u>102803401</u>	Asm, Voltage Regulator Key Sta	1
28	<u>1241</u>	Washer, 5/16 Type A Flat	2
29	<u>1242</u>	Nut, 5/16-18 Hex	2
30	<u>183</u>	Washer, #10, Type A, Flat	1
31	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
32	<u>7818</u>	Bolt, Carriage, 5/16-18 X 1.5	1
33	<u>7893</u>	Nut, #10-32 Hex	2
34	<u>8057</u>	Nut, #4-40 Hex Machine	4
35	<u>8058</u>	Lockwasher, #4 Split	2
36	<u>8450</u>	Screw, #10-24 X 0.50, Hex-Head	1
37	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1
38	<u>8990</u>	Tie Wrap, 8" Nylon	3

7
G

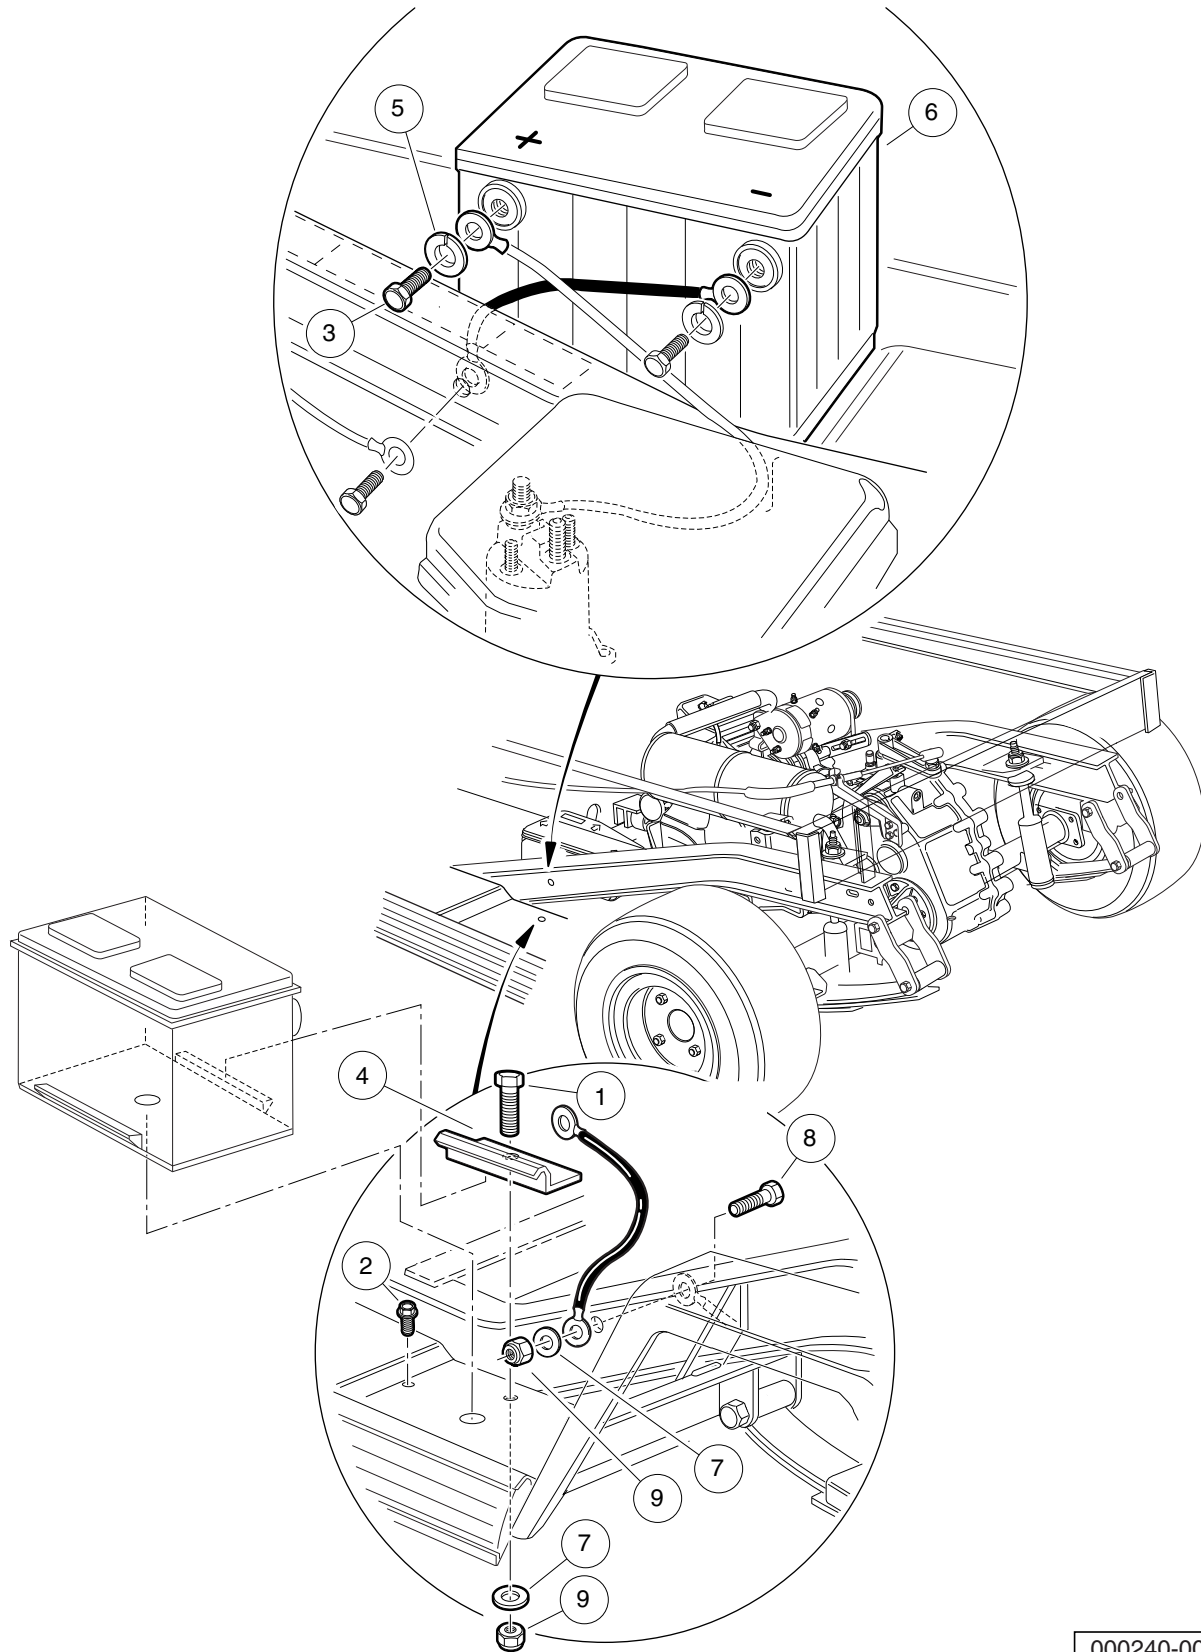

000240-001

BATTERY – GASOLINE UTILITY VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	7
		1 2 3 4		G
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1	
2	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	1	
3	<u>1014375</u>	Screw, 3/8-16 X 0.50, Stainless Steel, Hex-Head	2	
4	<u>101898001</u>	Clamp, Battery	1	
5	<u>102355301</u>	Lockwasher, 3/8 Split Ss	2	
6	<u>103496801</u>	Battery, Start, 12v	1	
7	<u>1241</u>	Washer, 5/16 Type A Flat	2	
8	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1	
9	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	

7

G


ELECTRICAL SYSTEM – EFI GASOLINE VEHICLES

8

G

8

G

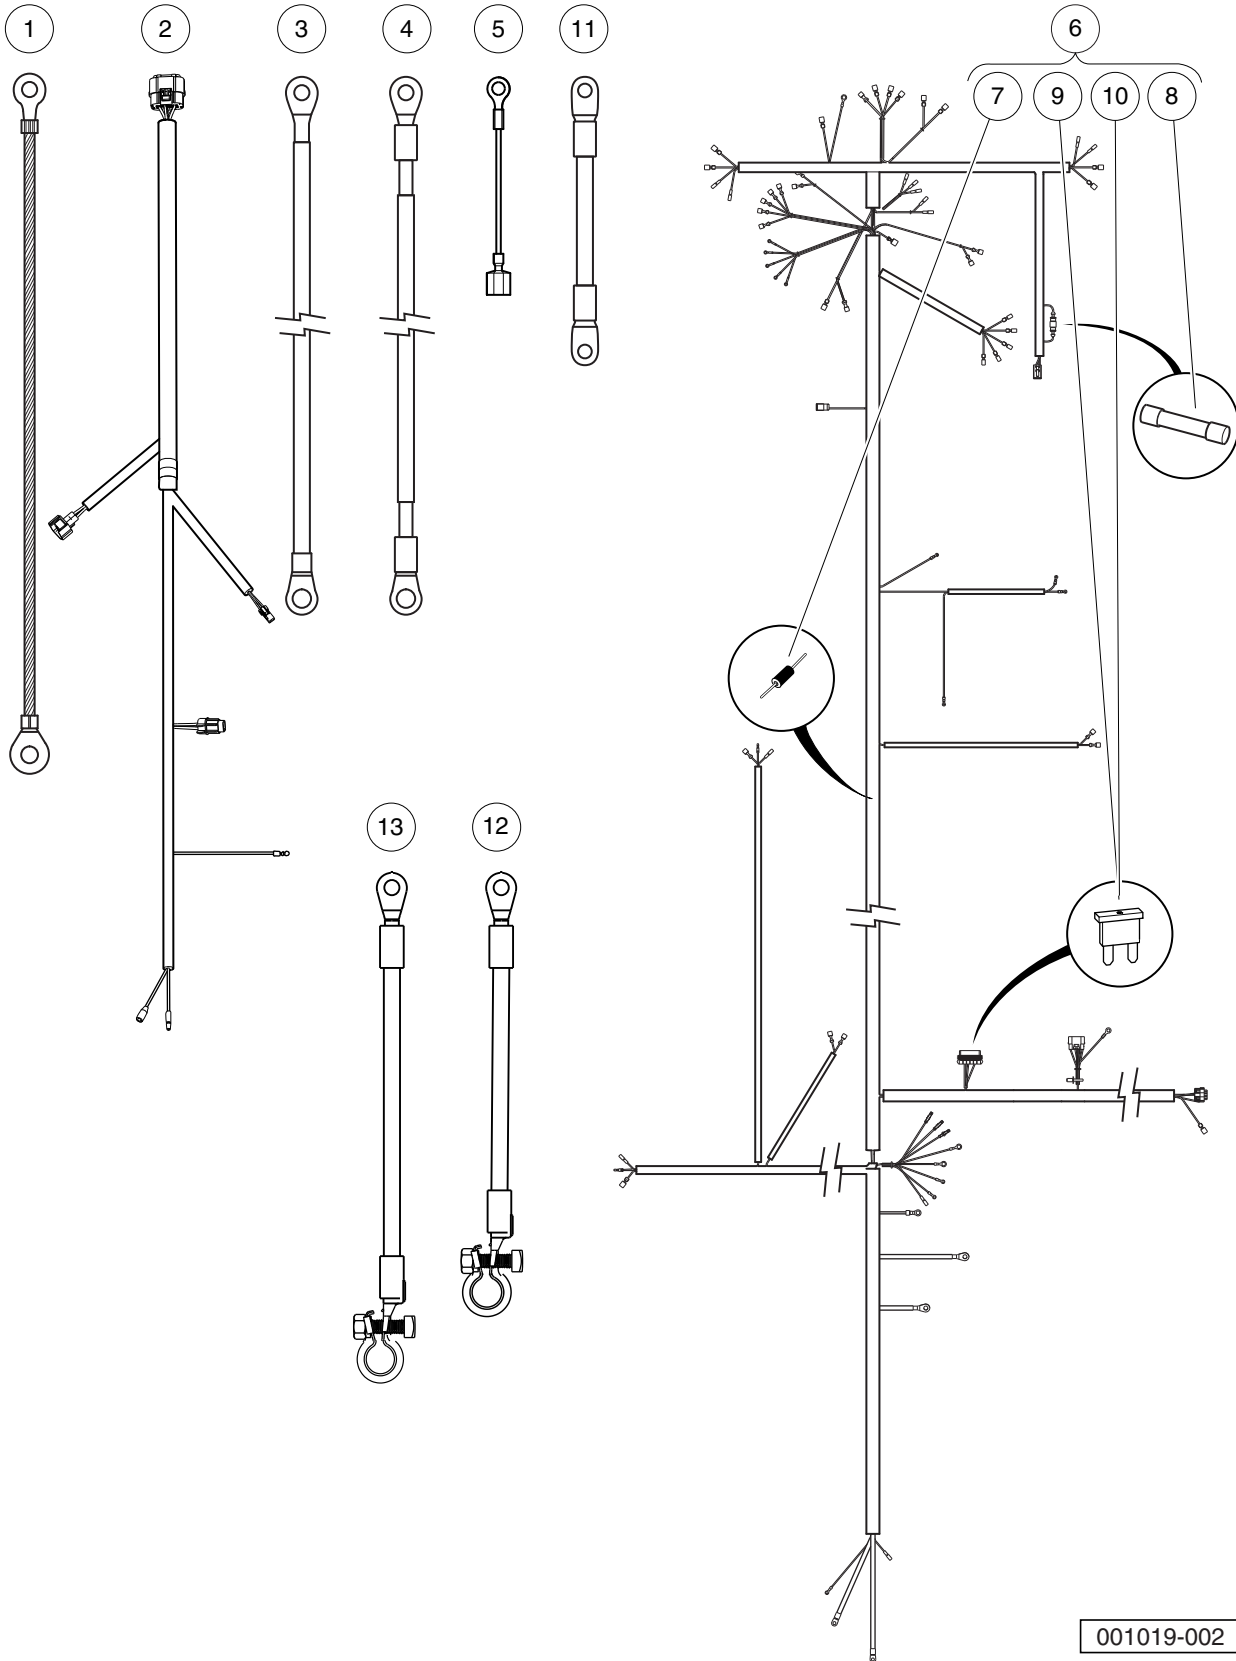

WIRING, FUSES, AND DIODES, KEY-START – EFI, VILLAGER 6, XRT850 SE


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015332</u>	Wire, Ground, #10, Uninsulated	1
2	<u>105008101</u>	Harness, Wire, ECU/Engine	1
3	<u>105135901</u>	Wire, Battery (side-post), B-, Gas	1
4	<u>105136001</u>	Wire, Battery (side-post), B+, Gas	1
5	<u>105143301</u>	Wire, Ground, Fuel Tank	1
6	<u>105151201</u>	Harness, Main, Vill6, Ks (includes items 7 through 10)	1
7	<u>1014789</u>	Diode, General Purpose, 3.0-Amp	1
8	<u>103924801</u>	Fuse, Glass, 2-Amp	1
9	<u>105081501</u>	Fuse, ATM, 5-Amp	1
10	<u>105081601</u>	Fuse, ATM, 10-Amp	1
11	<u>105161701</u>	Wire, 4-Ga, Green, Starter/Generator	1
12	<u>105256701</u>	Wire Assy, 4ga, Battery, (top-post) B-, Gas	1
13	<u>105256801</u>	Wire Assy, 4ga, Battery, (top-post) B+, Gas	1
Note: For ECU, see Throttle Body in Fuel System section.			

8

G


8

G

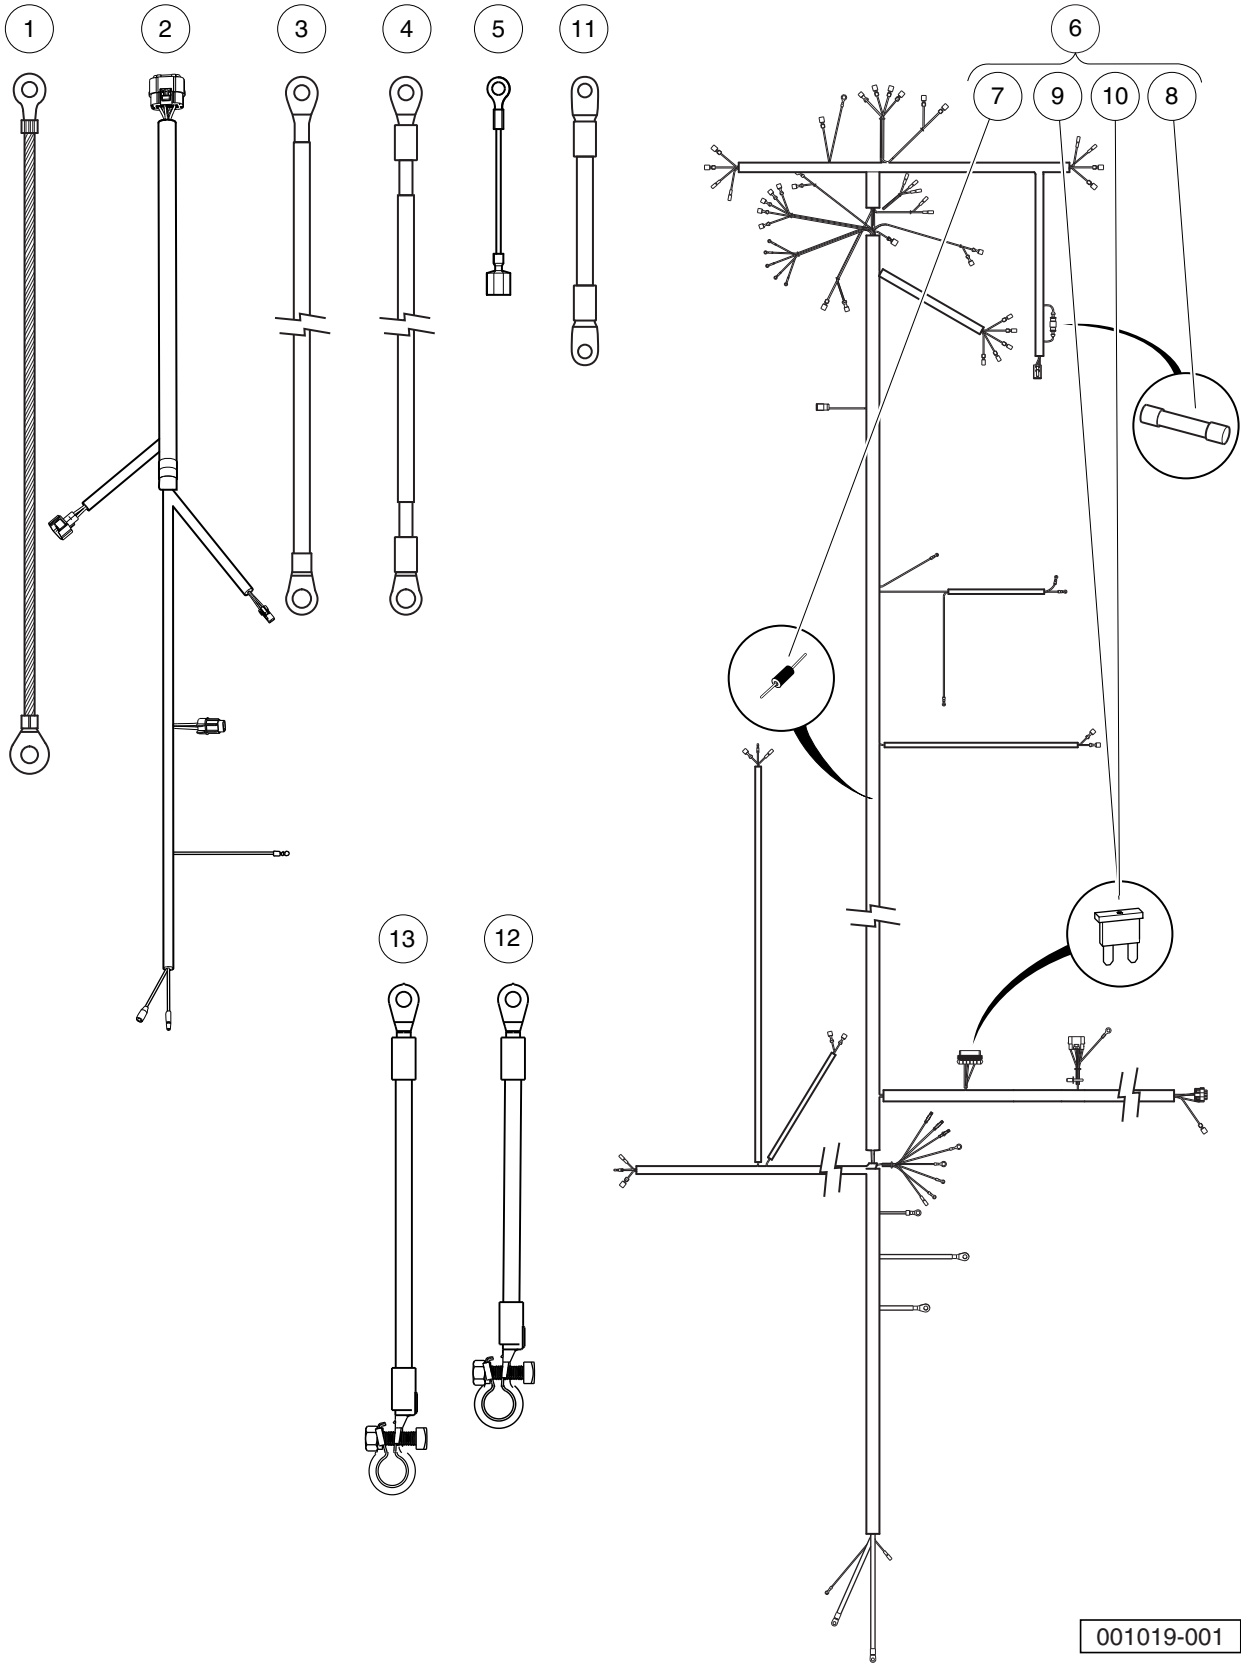

WIRING, FUSES, AND DIODES, KEY-START – EFI, VILLAGER 8


ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>1015332</u>	Wire, Ground, #10, Uninsulated	1	
2	<u>105008101</u>	Harness, Wire, ECU/Engine	1	
3	<u>105135901</u>	Wire, Battery (side-post), B-, Gas	1	
4	<u>105136001</u>	Wire, Battery (side-post), B+, Gas	1	
5	<u>105143301</u>	Wire, Ground, Fuel Tank	1	
6	<u>105151301</u>	Harness, Main, Vill8, Ks (includes items 7 through 10)	1	
7	<u>1014789</u>	Diode, General Purpose, 3.0-Amp	1	
8	<u>103924801</u>	Fuse, Glass, 2-Amp	1	
9	<u>105081501</u>	Fuse, ATM, 5-Amp	1	
10	<u>105081601</u>	Fuse, ATM, 10-Amp	1	
11	<u>105161701</u>	Wire, 4-Ga, Green, Starter/Generator	1	
12	<u>105256701</u>	Wire Assy, 4ga, Battery, (top-post) B-, Gas	1	
13	<u>105256801</u>	Wire Assy, 4ga, Battery, (top-post) B+, Gas	1	
Note: For ECU, see Throttle Body in Fuel System section.				

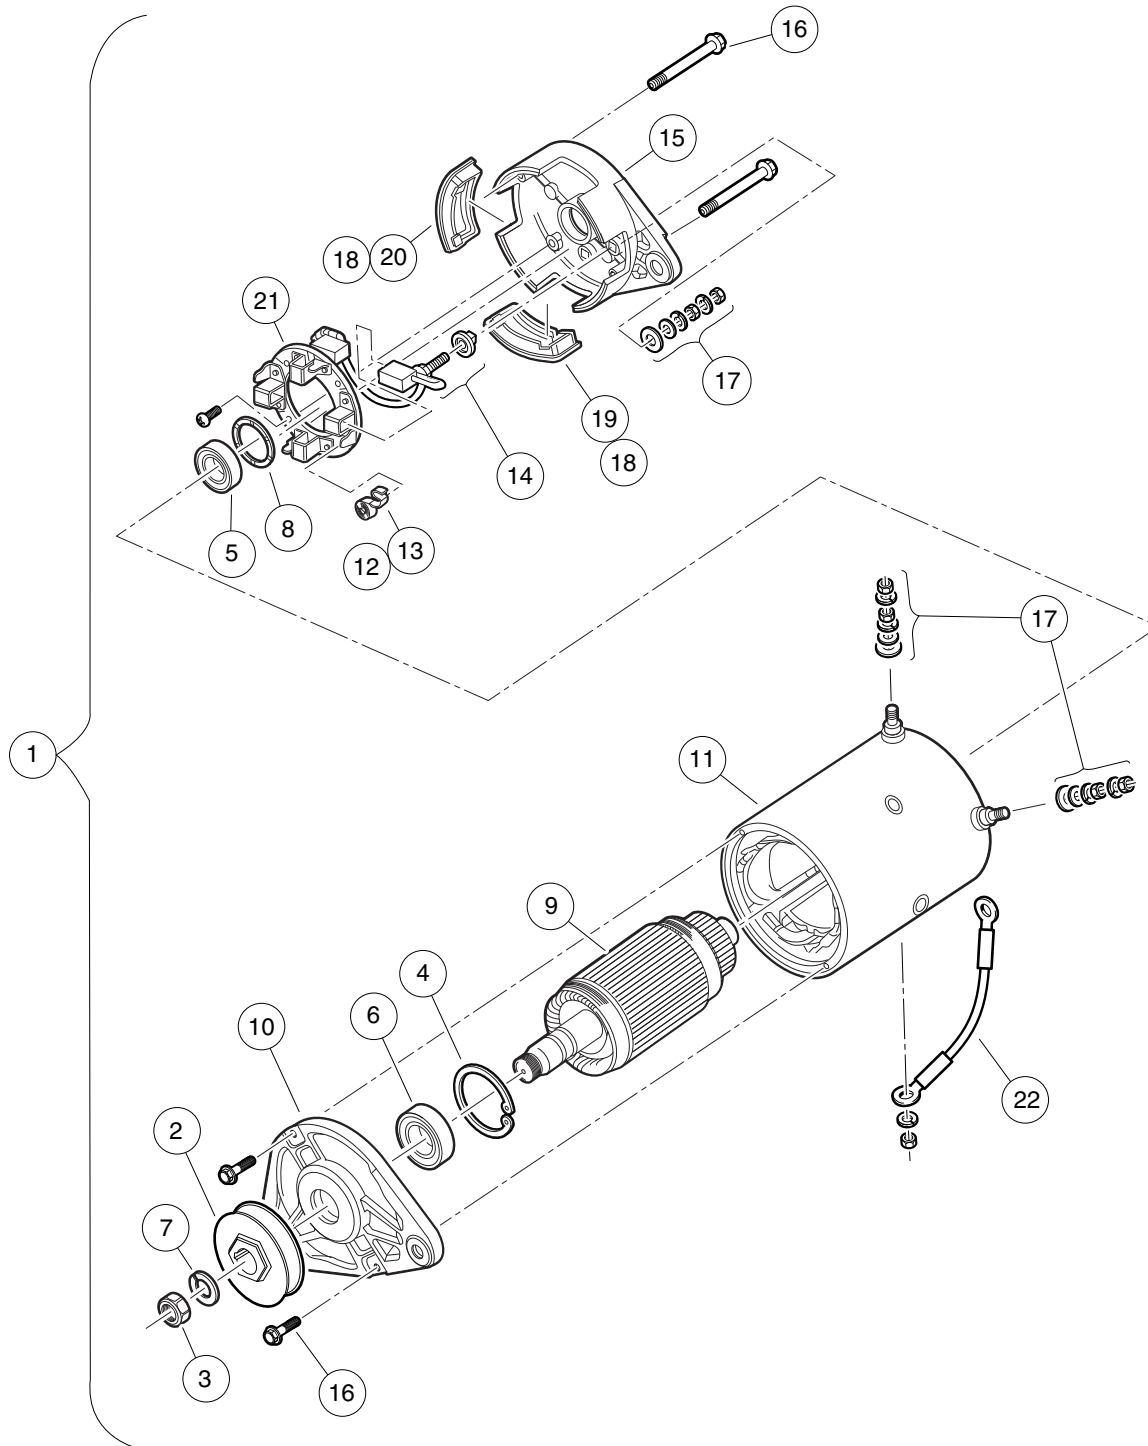

001016-001

STARTER/GENERATOR (MODEL 114-04-4006), KEY-START – EFI


ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>105190102</u>	Starter/Generator, Bi-Rotational, Utility, Key-Start (includes items 2 through 22)	1	
2	<u>1014289</u>	Pulley, Starter/Generator	1	
3	<u>102838701</u>	Nut, Hex, M14x2, S/G	1	
4	<u>102838801</u>	Retainer, Front, S/G	1	
5	<u>102838901</u>	Bearing, Ball, Front, S-g	1	
6	<u>102839001</u>	Bearing, Ball, Front, S-g	1	
7	<u>102839301</u>	Washer, Lock M14x2, S-g	1	
8	<u>102841101</u>	Washer, Wave, S-g	1	
9	N/A	Asm, Armature, Starter/Generator	1	
10	<u>102844601</u>	Head, Drive End, S-g	1	
11	<u>102844701</u>	Asm, Frame and Field, Starter/Generator	1	
12	<u>103347101</u>	Kit, Spring Brush, Starter/Generator (includes item 13)	1	
13	N/A	Spring, Brush, S-g	4	
14	<u>103347301</u>	Set, Brush Term, S-g	1	
15	<u>103347601</u>	Head, Comm End, S-g	1	
16	<u>103347701</u>	Set, Fastener, Ceh Deh, S-g	1	
17	<u>103347801</u>	Set, Term Hardware, S/G	1	
18	<u>103347901</u>	Kit, Cover, Brush Insp, Starter/Generator (includes items 19 and 20)	1	
19	N/A	Plug, Rubber Drain, Start/Generator	3	
20	N/A	Cover, Inspection, S-g	1	
21	<u>103953301</u>	Kit, Brush And Brush Holder	1	
22	<u>105161701</u>	Wire, 4-Ga, Green, Starter/Generator	1	

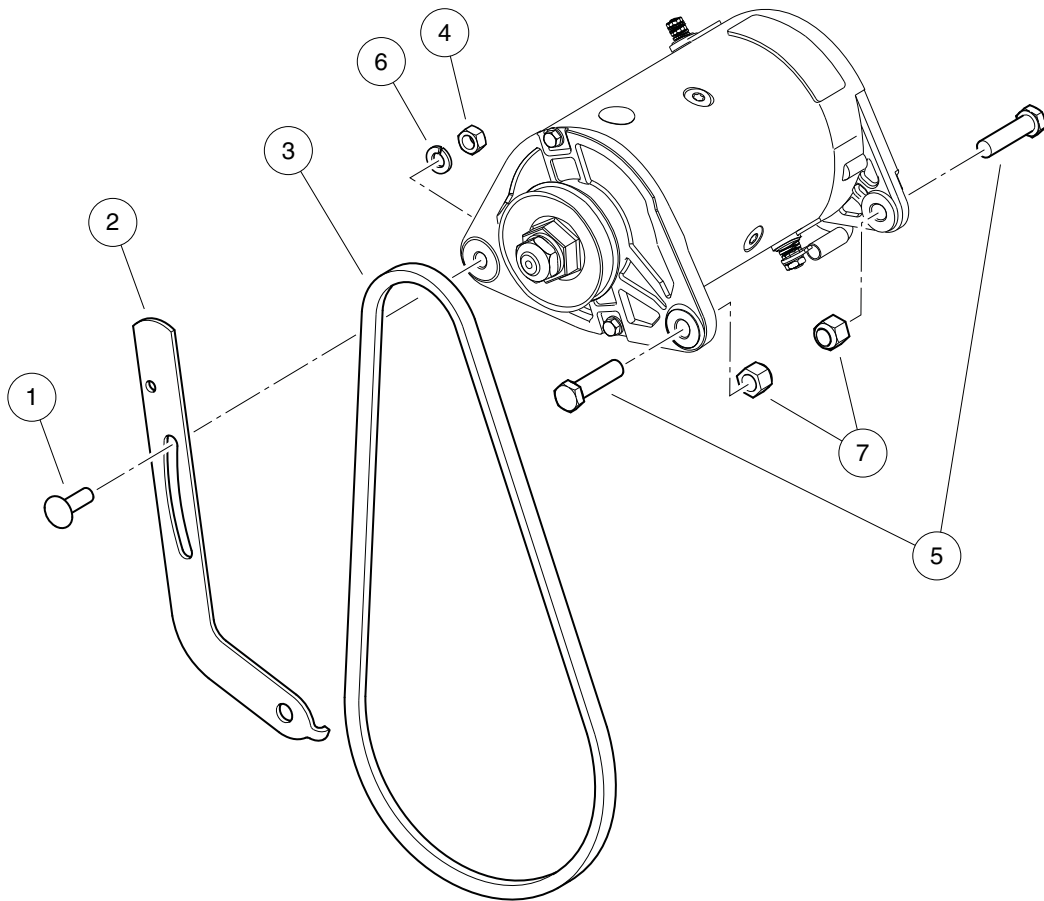

001009-001

STARTER/GENERATOR MOUNTING – EX40

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>1015932</u>	Bolt, Carriage, 5/16-18	1	
2	<u>104005301</u>	Bracket, Adjustable, Starter/Generator, EX40	1	
3	<u>105205401</u>	Belt, Sg, 871, Ex40	1	
4	<u>1242</u>	Nut, 5/16-18 Hex	1	
5	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	2	
6	<u>7174</u>	Lockwasher, 5/16 Split	1	
7	<u>8754</u>	Locknut, 3/8-16 Hex	2	




ELECTRICAL COMPONENT BOX, KEY-START – EX40

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010954</u>	Stud, Ball, 1/4-28 X 0.560	1
2	<u>1012295</u>	Fuse, 10-Amp	3
3	<u>1013589</u>	Ring, Retaining, 0.338" Internal	1
4	<u>1013609</u>	Solenoid, 12-Volt	1
5	<u>1014065</u>	Washer, Flat, 0.38" ID, Delrin	1
6	<u>1014145</u>	Bushing, Secondary Weight, Split	2
7	<u>1015373</u>	Cam, Electric Box	1
8	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	1
9	<u>1015737</u>	Wire Assy, #10 Red	1
10	<u>1015741</u>	Fuse Block	1
11	<u>1015752</u>	Screw, #12-16 X 0.625, Hi-Lo	5
12	<u>101856102</u>	Screw, 1/4-15 X 1.50, Hi-lo, Hex	1
13	<u>102711201</u>	Voltage Regulator	1
14	<u>105000301</u>	Box, Component, Electrical	1
15	<u>105000401</u>	Cover, Box, Component, Elec	1
16	<u>105037401</u>	Weldment, Bellcrank, Comp Box	1
17	<u>1241</u>	Washer, 5/16 Type A Flat	2
18	<u>1242</u>	Nut, 5/16-18 Hex	2
19	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
20	<u>7818</u>	Bolt, Carriage, 5/16-18 X 1.5	1
21	<u>7893</u>	Nut, #10-32 Hex	2
22	<u>8639</u>	Tie Wrap, 11" Nylon	6
23	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1

8


G

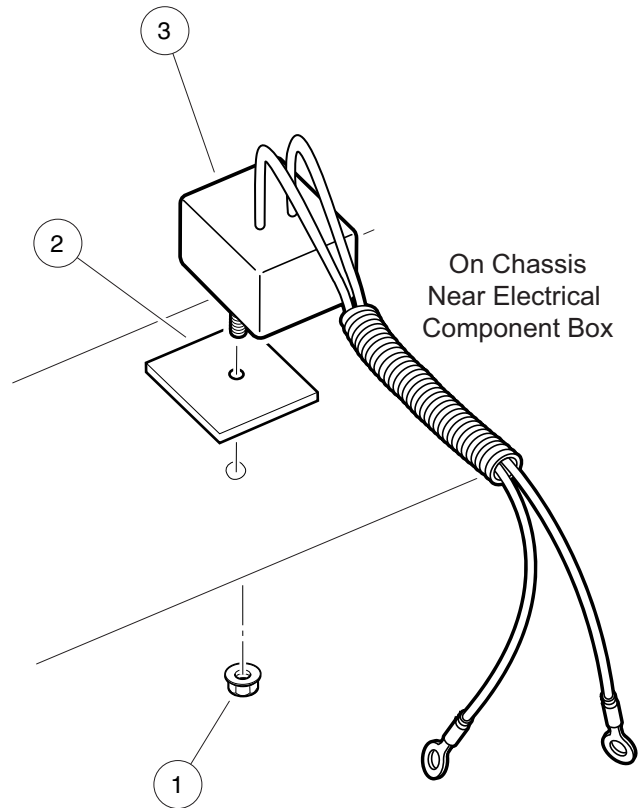

001015-001

8
G



8
G

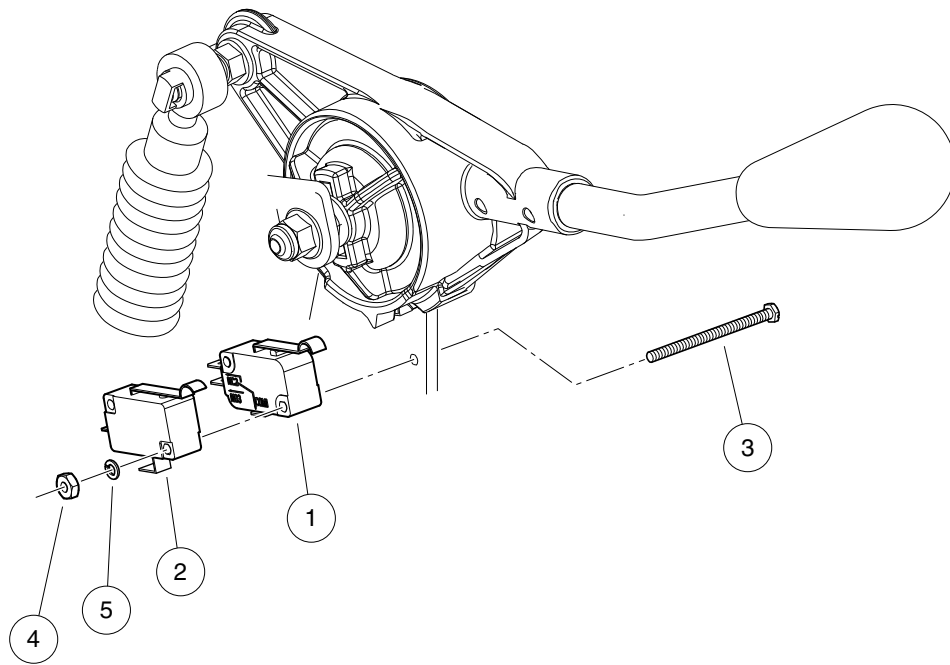

001010-002

FORWARD/REVERSE SHIFTER SWITCHES, KEY-START – EFI, VILLAGER 6, 8, 850, 850SE

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>1014807</u>	Switch, Limit	1	
2	<u>1014808</u>	Switch, Limit	1	
3	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2	
4	<u>8057</u>	Nut, #4-40 Hex Machine	2	
5	<u>8058</u>	Lockwasher, #4 Split	2	

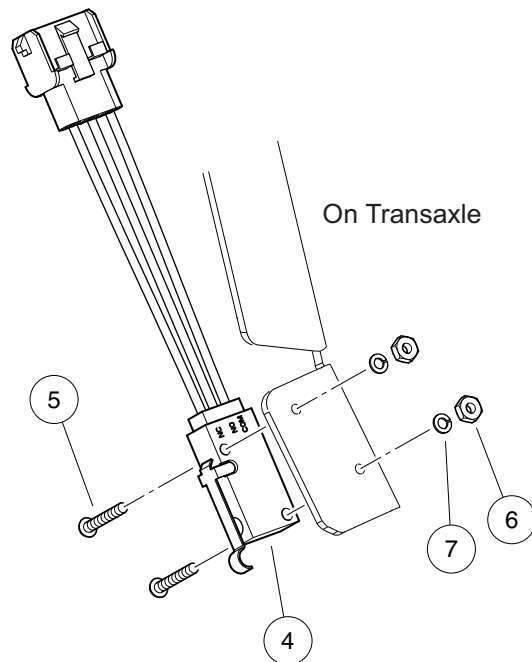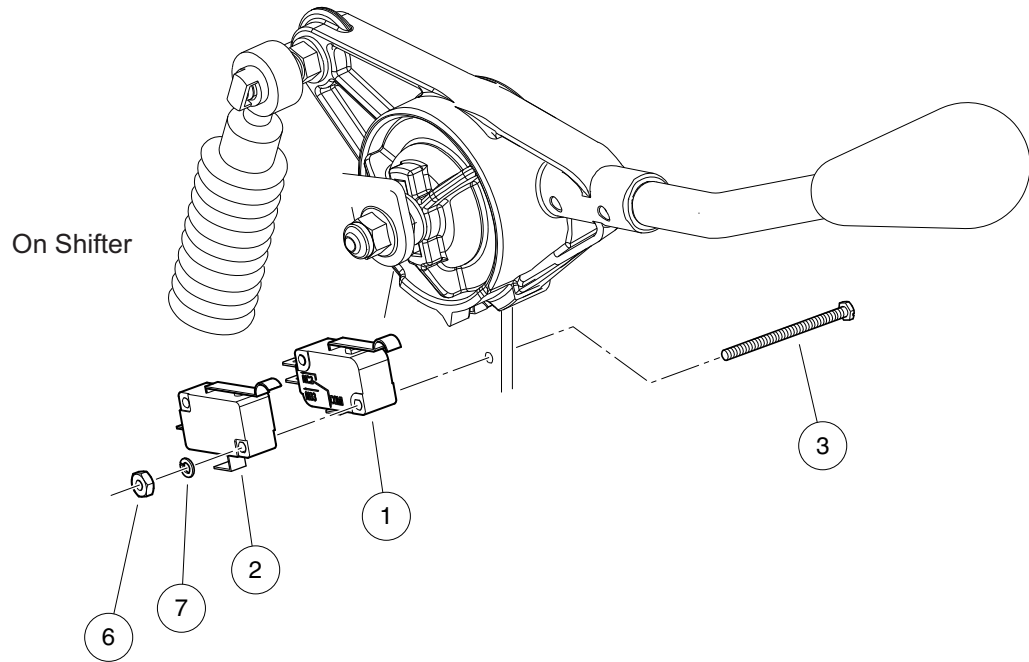


001010-001

FORWARD/REVERSE SHIFTER SWITCHES, PEDAL-START – EFI, VILLAGER 6, 8, 850, 850SE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014807</u>	Switch, Limit	1
2	<u>1014808</u>	Switch, Limit	1
3	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2
4	<u>105102601</u>	Switch, Limit, Sealed, with 3-Wire Lead	1
5	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2
6	<u>8057</u>	Nut, #4-40 Hex Machine	4
7	<u>8058</u>	Lockwasher, #4 Split	4

8
G

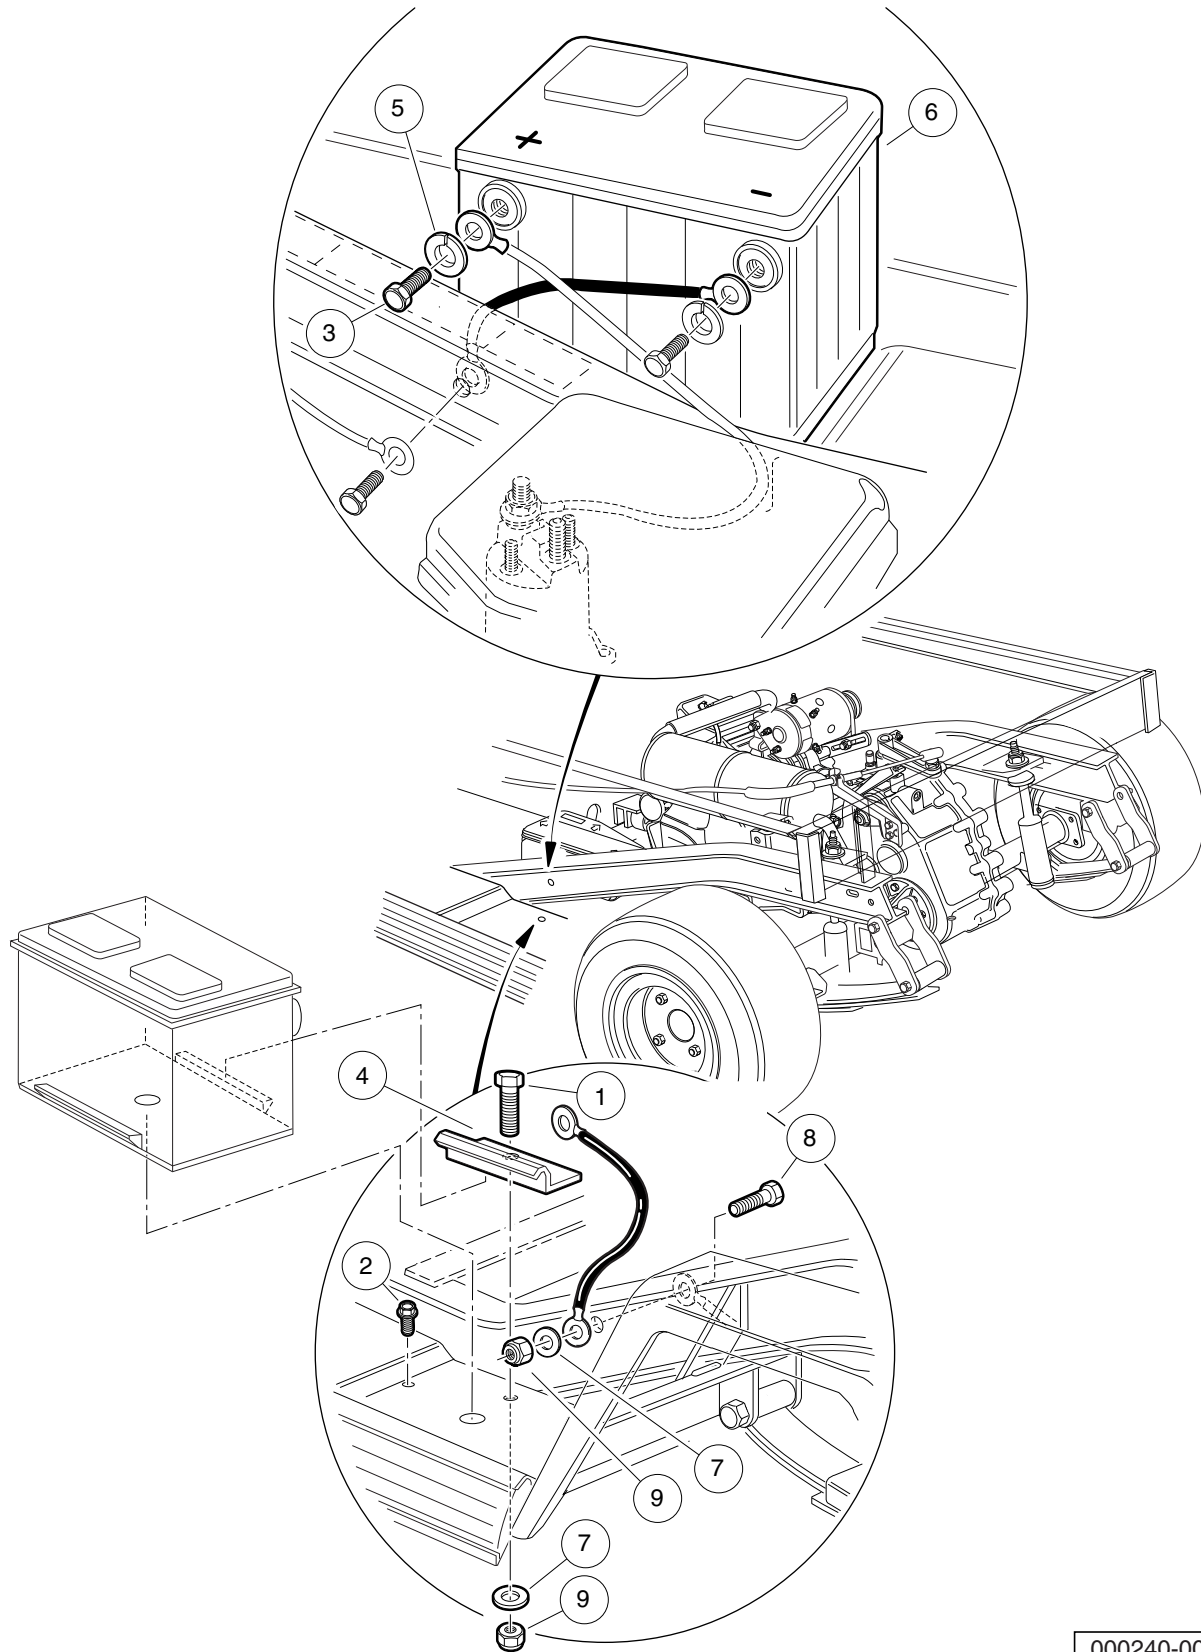

000240-001

BATTERY – GASOLINE UTILITY VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1	
2	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	1	
3	<u>1014375</u>	Screw, 3/8-16 X 0.50, Stainless Steel, Hex-Head	2	
4	<u>101898001</u>	Clamp, Battery	1	
5	<u>102355301</u>	Lockwasher, 3/8 Split Ss	2	
6	<u>103496801</u>	Battery, Start, 12v	1	
7	<u>1241</u>	Washer, 5/16 Type A Flat	2	
8	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1	
9	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	


8

G

ENGINE (S27) W/O ACR, 50-STATE

9



G

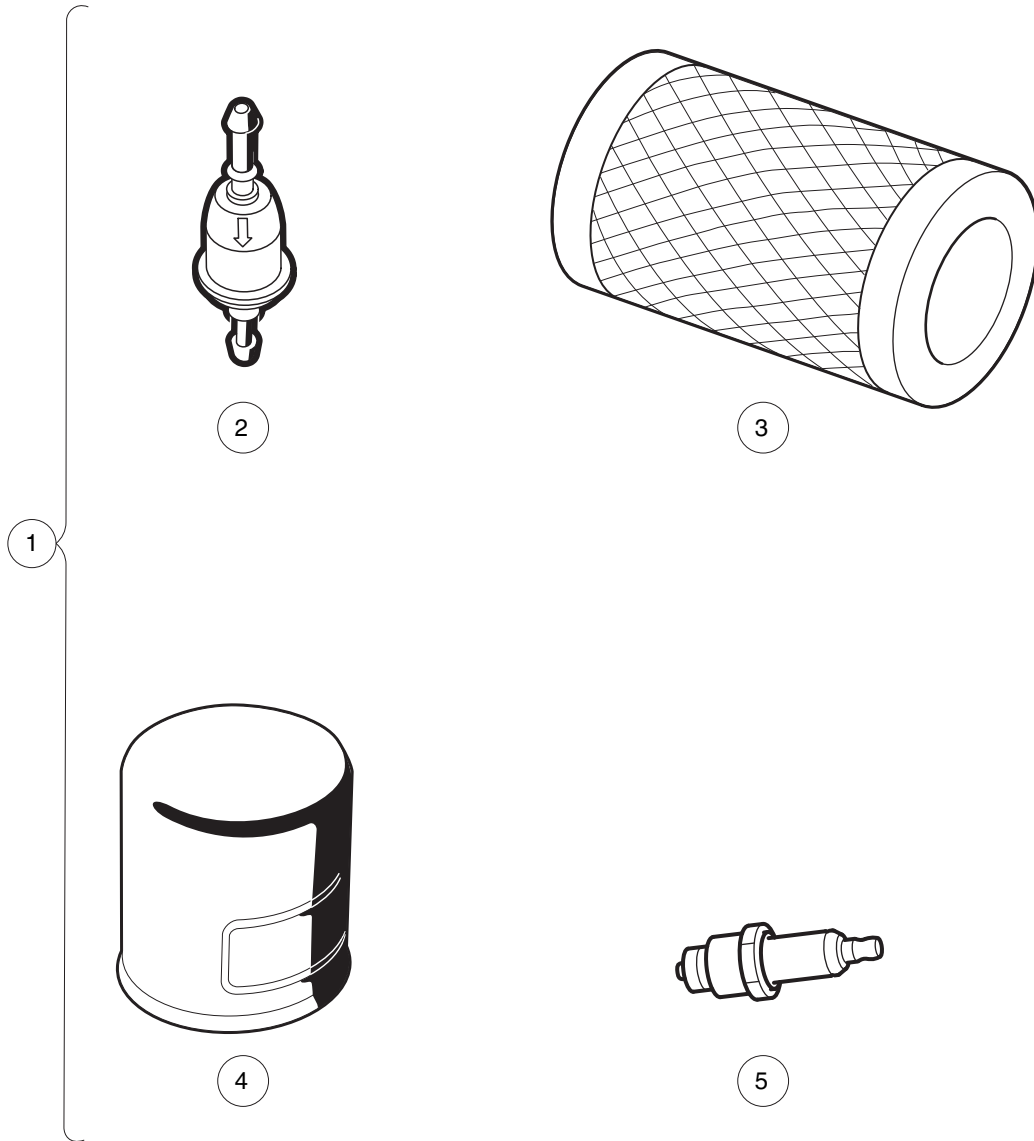

001064-001

TUNE-UP KIT – KAWASAKI FE350

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>AM1220301</u>	Kit, Tune-Up (For FE290 and FE350 engines) (includes items 2 through 5)	1	
2	<u>102003201</u>	Filter, Fuel, 30 Micron	1	
3	<u>102558201</u>	Air Filter, 4 Inch	1	
4	<u>103887901</u>	Filter, Oil, Kawasaki	1	
5	<u>AM1232301</u>	Spark Plug, BPR2ES	1	

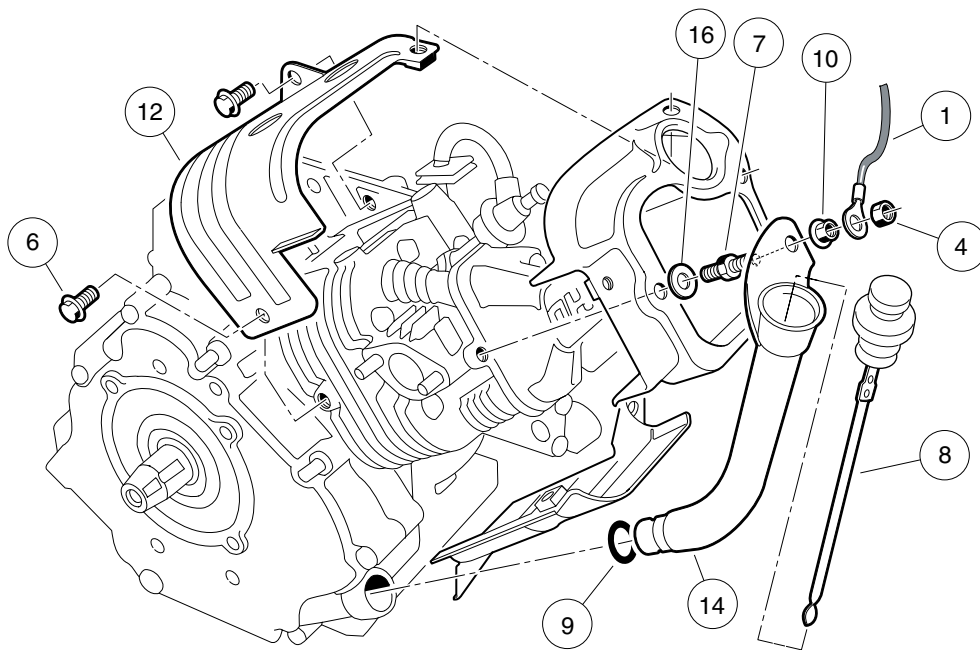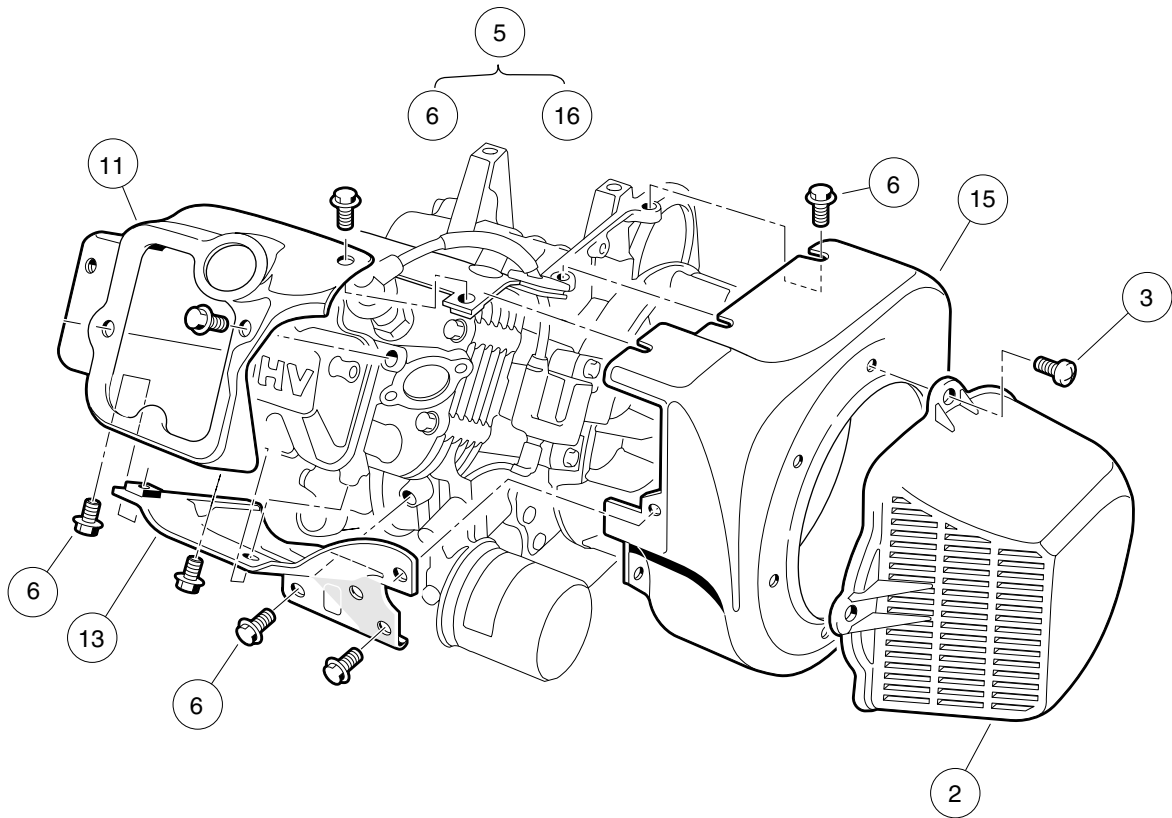


000201-002

FE350 ENGINE (S27) W/O ACR, SHROUDS, AND BRACKETS; 50-STATE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015332</u>	Wire, Ground, #10, Uninsulated	1
2	<u>1015649</u>	Shroud, Fan	1
3	<u>1015969</u>	Screw, M6-1.00 X 10mm, Pan Hd	4
4	<u>101887601</u>	Locknut, M6-1.00 Nylon Insert	1
5	<u>103386202</u>	Engine, FE350 S27 (includes items 6 through 16)	1
6	1016456	Bolt, Flange Head, M6 x 1 x 12 mm	16
7	<u>1016507</u>	Bolt, Two-Ended	1
8	1016531	Dipstick	1
9	<u>1016539</u>	O-Ring	1
10	1016547	Nut, M6 Flange	1
11	<u>1017474</u>	Shroud, Engine	1
12	<u>1017475</u>	Shroud, Engine	1
13	<u>1017476</u>	Shroud, Engine	1
14	<u>1017486</u>	Tube, Oil Filler	1
15	<u>101916101</u>	Housing, FE350 Fan	1
16	N/A	Washer, 6mm Flat	1
Note: The S27 engine meets the 2009 Federal CARB requirement for all 50 states; can be used in place of S10, S11, S23, and S24 engines; and was a running change during the 2009 model year.			

9

G

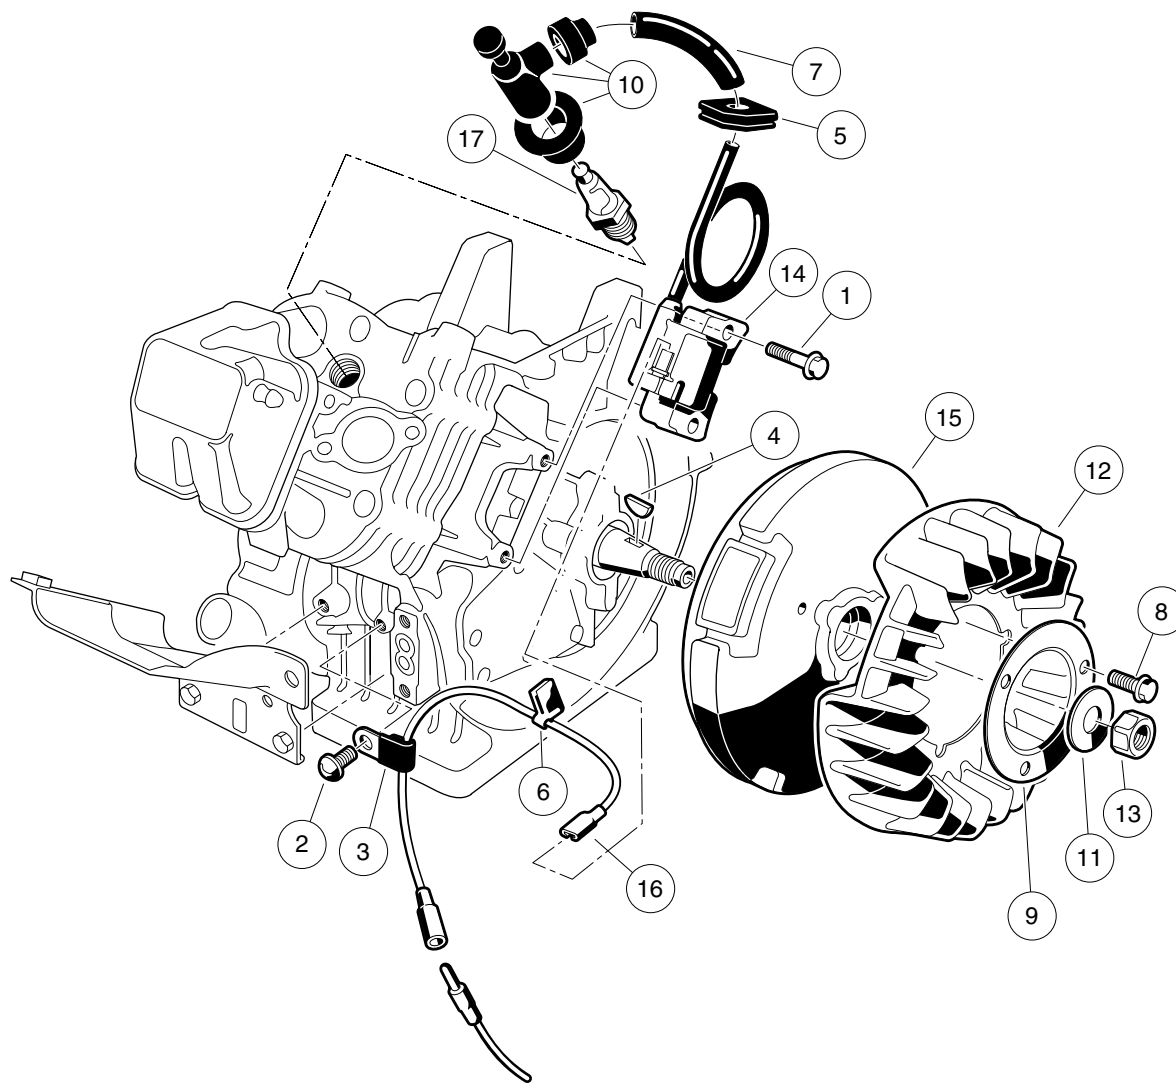


000202-004

FE350 ENGINE (S27) – IGNITION COMPONENTS AND FLYWHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016455</u>	Bolt, Flange Head	2
2	<u>1016544</u>	Screw	1
3	<u>1016561</u>	Clamp	1
4	<u>1016562</u>	Key	1
5	<u>1016578</u>	Grommet, Ignition	1
6	<u>1016587</u>	Clamp	1
7	<u>1016588</u>	Tube, 7mm X 10mm X 70mm	1
8	<u>1017448</u>	Bolt, Flanged	3
9	<u>1017455</u>	Plate, Flywheel Fan	1
10	<u>1017463</u>	Cap Asm, Plug	1
11	<u>1017490</u>	Washer, Flat	1
12	<u>101916301</u>	Fan (cw)	1
13	<u>102838401</u>	Nut, Hex, 18 mm Fine	1
14	<u>103616501</u>	Coil Asm, Ignition	1
15	<u>103616601</u>	Flywheel, Complete	1
16	<u>103616701</u>	Wire Lead, Ignition	1
17	<u>AM1232301</u>	Spark Plug, BPR2ES	1

9


G

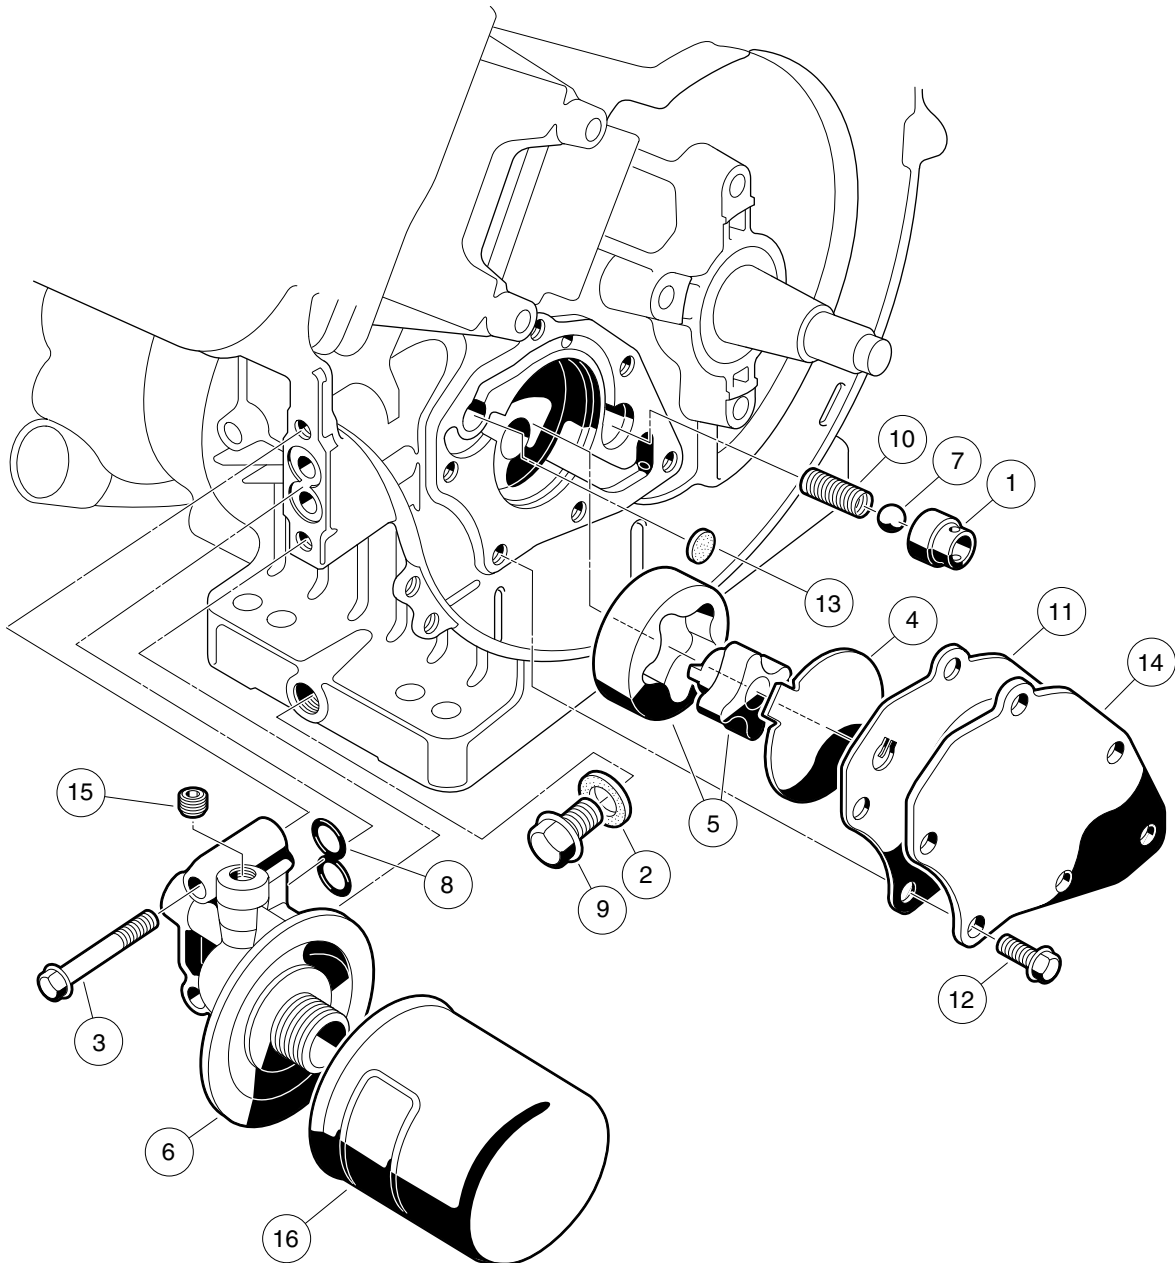

000203-002

FE350 ENGINE (S27) – OIL CIRCULATION

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	1016429	Seat, Valve Oil Pressure Relief	1	
2	<u>1016432</u>	Gasket, Drain Plug	1	
3	<u>1016457</u>	Bolt, Flange Head	2	
4	<u>1016473</u>	Plate, Oil Pump	1	
5	<u>101648203</u>	Oil Pump And Rotor	1	
6	<u>1016502</u>	Bracket, Oil Filter Mount	1	
7	<u>1016537</u>	Ball, Steel, Press, Relief	1	
8	<u>1016570</u>	O-Ring	1	
9	1016576	Plug, Drain	1	
10	<u>1016581</u>	Spring	1	
11	<u>1017442</u>	Gasket	1	
12	<u>1017456</u>	Bolt, Flanged	6	
13	<u>1017458</u>	Filter	1	
14	<u>1017460</u>	Cover, Pump	1	
15	<u>1017507</u>	Plug	2	
16	<u>103887901</u>	Filter, Oil, Kawasaki	1	

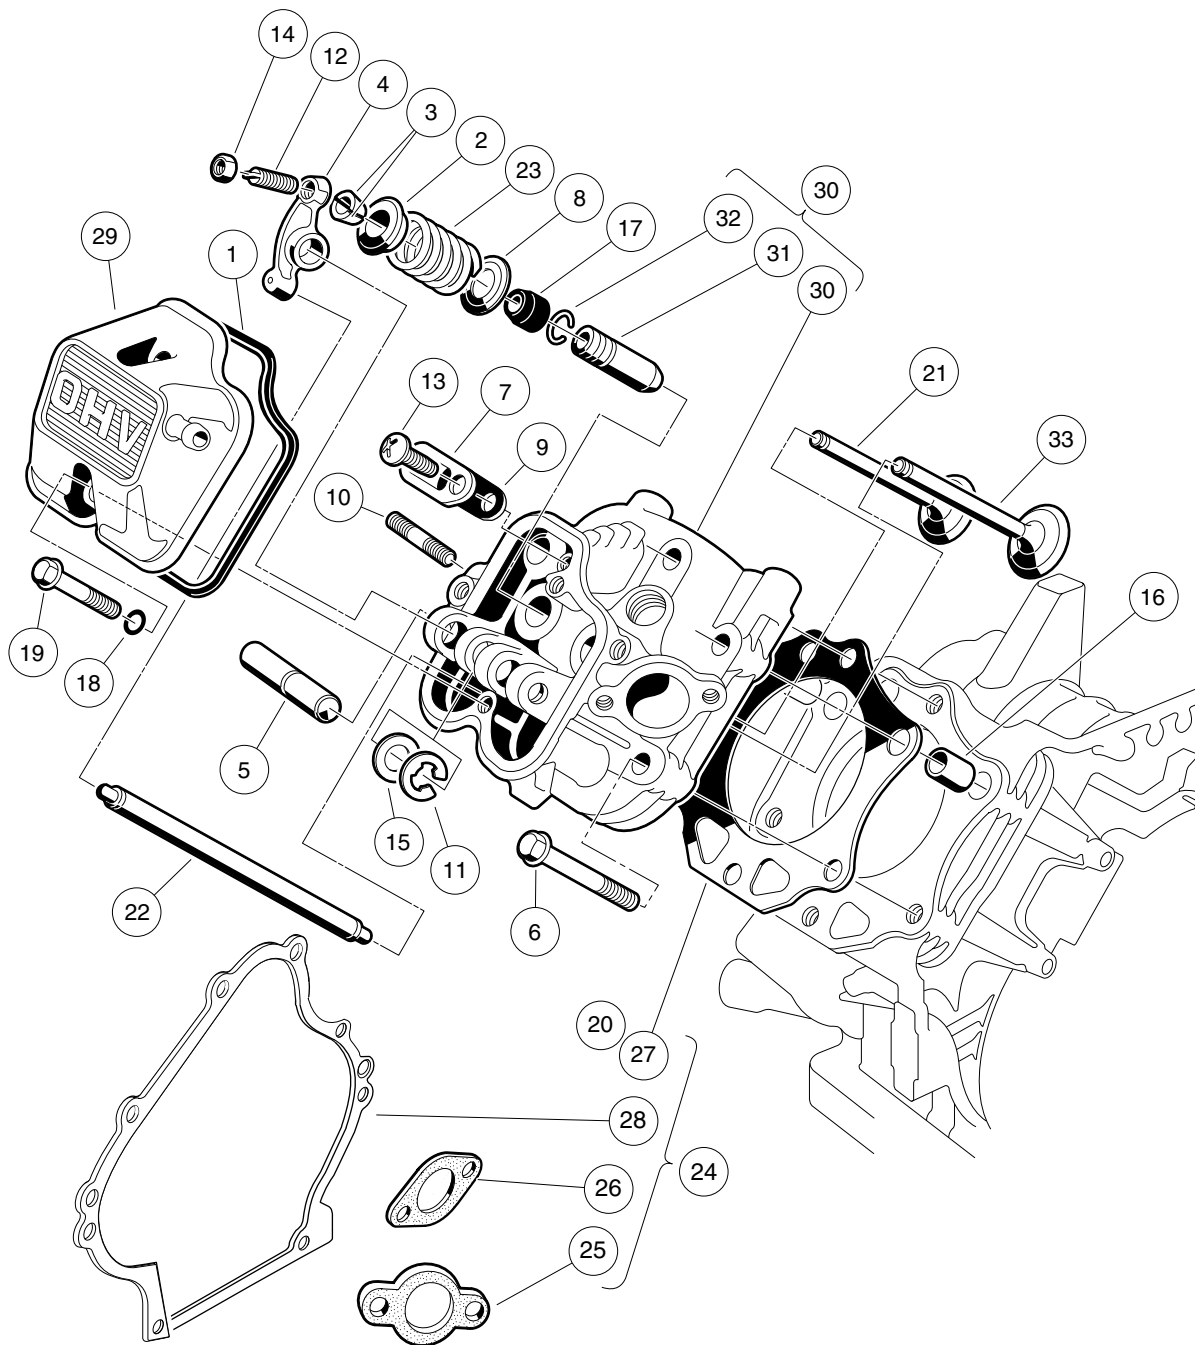


000204-007

FE350 ENGINE (S27) – CYLINDER HEAD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016436</u>	Gasket, Rocker Case	1
2	<u>1016449</u>	Retainer, Valve Spring	2
3	<u>1016450</u>	Collet	4
4	<u>1016451</u>	Arm, Rocker	2
5	<u>1016452</u>	Shaft, Rocker	1
6	<u>1016458</u>	Bolt, Flange Head, M8 x 1.25 x 45 mm	6
7	<u>1016474</u>	Plate	1
8	<u>1016479</u>	Seat, Spring	2
9	<u>1016483</u>	Valve	1
10	<u>1016489</u>	Stud, Two-Ended, M8-1.25	2
11	<u>1016517</u>	Circlip, Type-E	1
12	<u>1016542</u>	Screw	2
13	<u>1016544</u>	Screw	1
14	<u>1016545</u>	Nut	2
15	<u>1016549</u>	Washer, 12.1x19x1.8	1
16	<u>1016563</u>	Pin	2
17	<u>1016566</u>	Seal, Oil	2
18	<u>1016569</u>	O-Ring	2
19	<u>1016583</u>	Bolt, 6x35	2
20	<u>1017434</u>	Gasket, Head	1
21	<u>1017445</u>	Valve, Exhaust	1
22	<u>1017454</u>	Rod, Push	2
23	<u>1017473</u>	Spring, Engine Valve	2
24	<u>102304801</u>	Kit, Gasket, FE350 (includes items 25 through 28)	1
25	<u>1016440</u>	Gasket, Engine to Insulator	1
26	<u>1016904</u>	Gasket, Exhaust	1
27	<u>1017434</u>	Gasket, Head	1
28	<u>1017443</u>	Gasket, Crankcase Cover	1
29	<u>102753401</u>	Case, Rocker, Fe	1
30	<u>103615601</u>	Cylinder Head (includes items 31 and 32)	1
31	<u>1016519</u>	Guide, Valve, Intake, Exhaust	2
32	<u>1016560</u>	Snap Ring	2
33	<u>103616301</u>	Valve, Intake, Hard Tip	1
Note: Item 25 is not a component of the FE350 engine.			

9

G

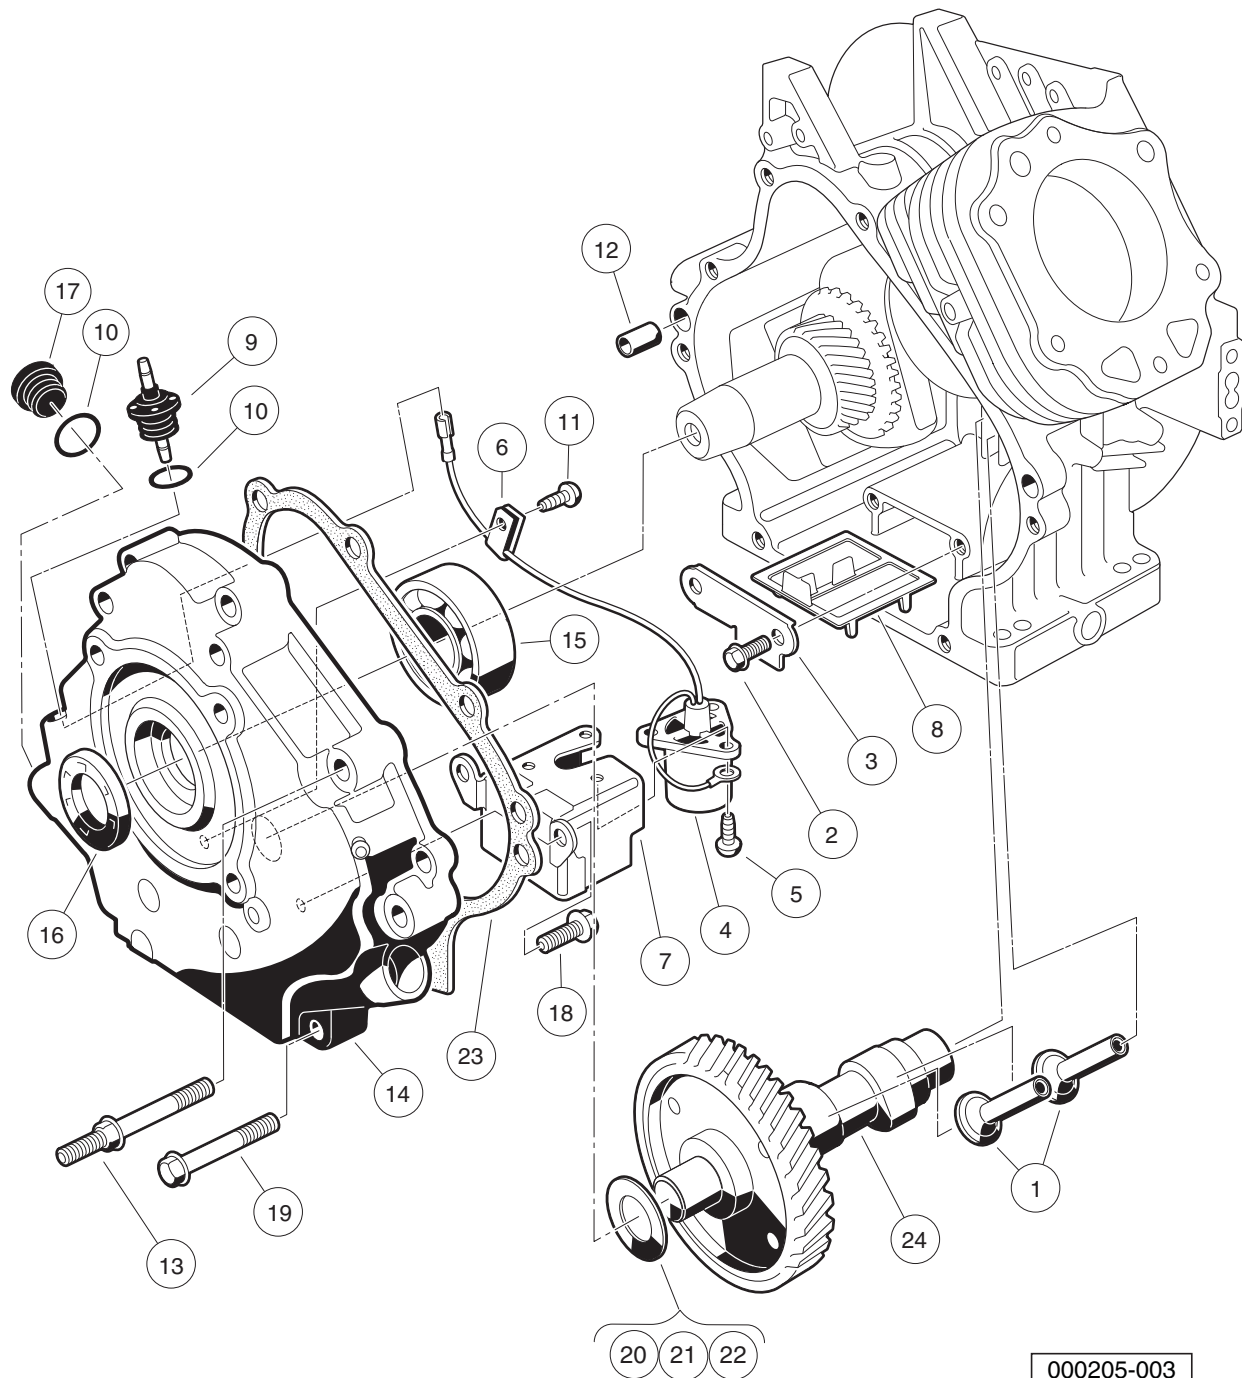


000205-003

FE350 ENGINE (S27) – CRANKCASE, CAMSHAFT, AND OIL SENSOR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016453	Tappet	2
2	<u>1016454</u>	Bolt, Flange Head, M5 x 0.8 x 8 mm	2
3	<u>1016472</u>	Plate, Oil Filter Screen	1
4	1016494	Sensor, Oil Level	1
5	<u>1016496</u>	Screw, Cross Pan-Head, M4 x 0.7 x 8 mm	3
6	<u>1016506</u>	Clamp	1
7	<u>1016510</u>	Bracket, Switch, Oil Level	1
8	<u>1016521</u>	Screen, Oil Filter	1
9	<u>1016535</u>	Connector, Cord	1
10	<u>1016538</u>	O-Ring	2
11	<u>1016544</u>	Screw	1
12	<u>1016564</u>	Pin	2
13	<u>1016584</u>	Bolt, Two-Ended, M8 x 1.25 x 69 mm	2
14	<u>1017472</u>	Cover Crankcase	1
15	<u>1017487</u>	Bearing, Ball	1
16	<u>1017504</u>	Seal, Oil	1
17	1017508	Plug	1
18	<u>1017513</u>	Bolt Switch Bracket	2
19	<u>1017514</u>	Screw, M8-1.25 X 45mm Hex	6
20	<u>101751801</u>	Shim, 0.3	1
21	<u>101751802</u>	Shim, 0.4	1
22	<u>101751803</u>	Shim, 0.5	1
23	<u>103615901</u>	Gasket, Crankcase Cover	1
24	<u>103616401</u>	Camshaft, Complete	1

9

G

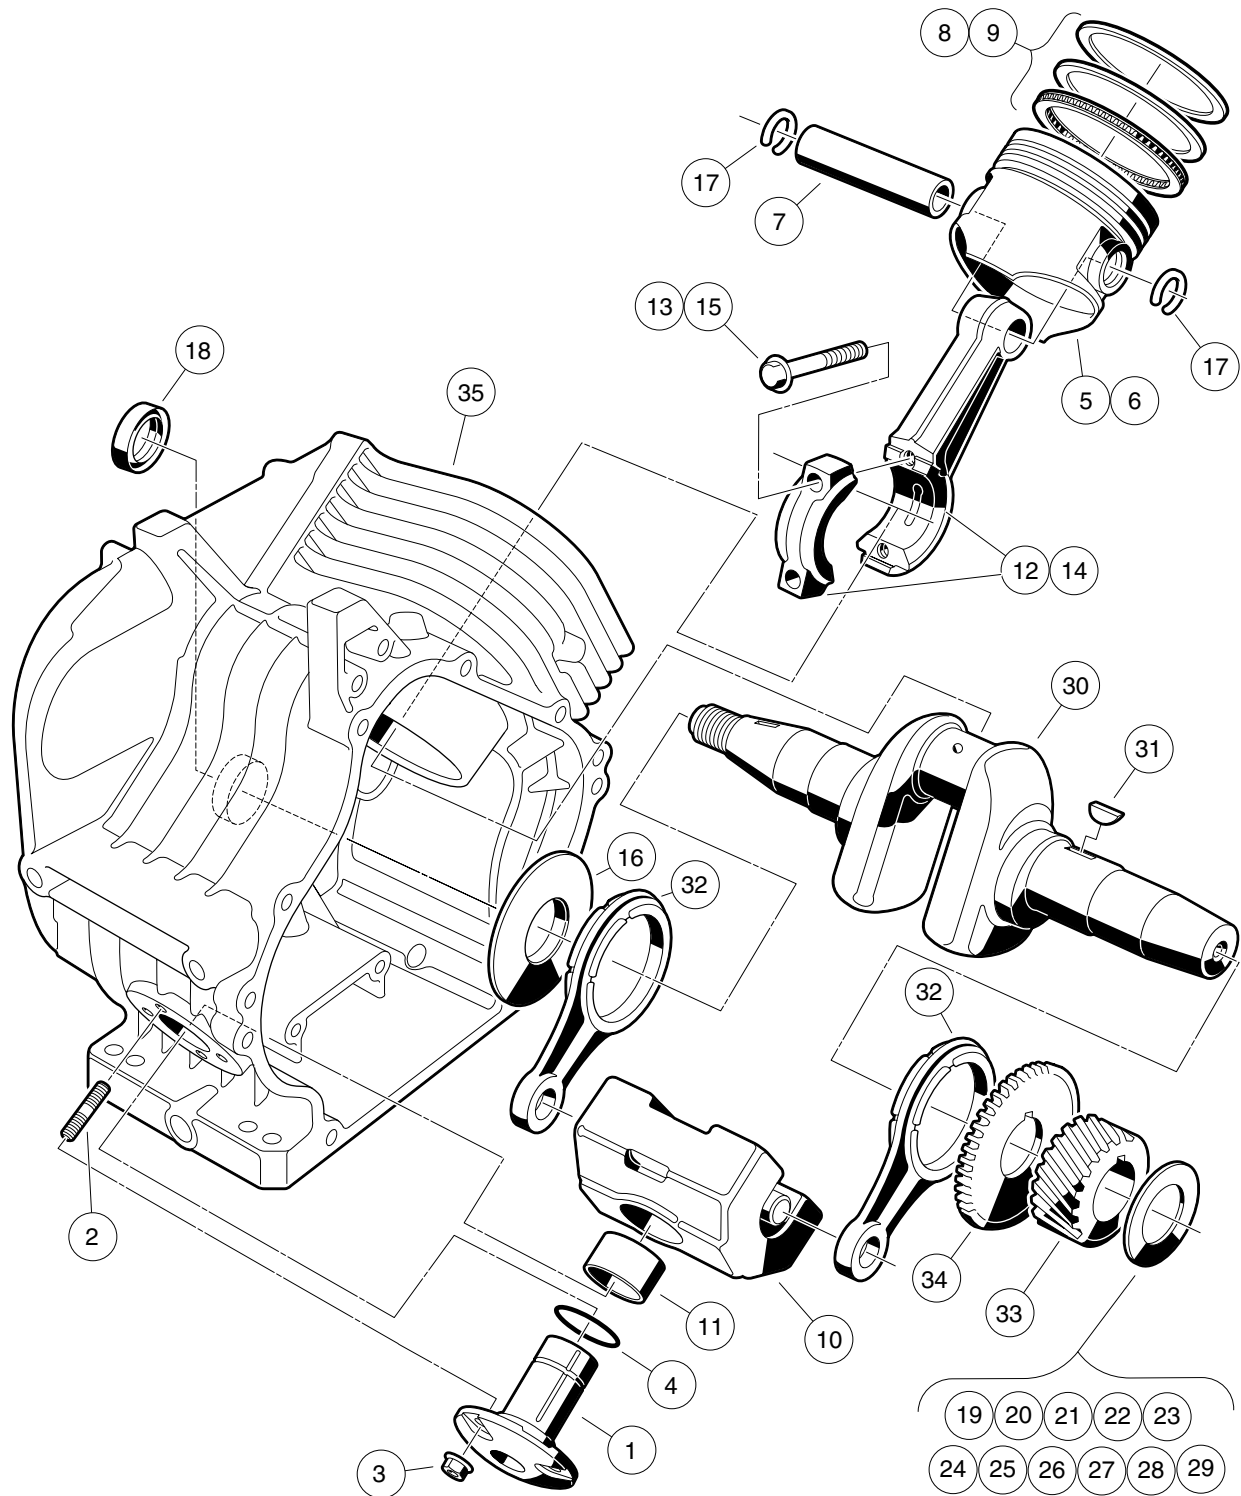


000206-003

FE350 ENGINE (S27) – CRANKCASE AND CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016470	Shaft, Guide, Counterbalance	1
2	<u>1016541</u>	Stud, 6x14	4
3	1016547	Nut, Flanged, M6 X 1.00	4
4	<u>1016571</u>	O-Ring	1
5	<u>101744901</u>	Piston, Standard	1
6	<u>101744902</u>	Piston, 0.50 mm Oversize	1
7	1017450	Pin, Piston	1
8	<u>101745101</u>	Ring Set, Standard Piston	1
9	<u>101745102</u>	Ring Set, Piston, 0.50 mm Oversize	1
10	<u>1017453</u>	Counterbalance Weight (includes item 11)	1
11	1017510	Bearing, Plain	1
12	101745701	Asm, Con. Rod Std (includes item 13)	1
13	<u>1017512</u>	Bolt	2
14	<u>101745702</u>	Asm,Con.Rod 0.5mm U/s (includes item 15)	1
15	<u>1017512</u>	Bolt	2
16	1017501	Spacer	1
17	<u>1017502</u>	Snap Ring	2
18	<u>1017503</u>	Seal, Oil	1
19	<u>101773301</u>	Shim, Crankshaft, 1.18mm	1
20	<u>101773302</u>	Shim, Crankshaft, 1.25mm	1
21	<u>101773303</u>	Shim, Crankshaft, 1.32mm	1
22	<u>101773304</u>	Shim, Crankshaft, 1.39mm	1
23	<u>101773305</u>	Shim, Crankshaft, 1.46mm	1
24	<u>101773306</u>	Shim, Crankshaft, 1.53mm	1
25	<u>101773307</u>	Shim, Crankshaft, 1.60mm	1
26	<u>101773308</u>	Shim, Crankshaft, 1.67mm	1
27	<u>101773309</u>	Shim, Crankshaft, 1.74mm	1
28	<u>101773310</u>	Shim, Crankshaft, 1.11mm	1
29	<u>101773311</u>	Shim, Crankshaft, 1.81mm	1
30	<u>102430901</u>	Crankshaft, FE350 Left-Hand, 22-Tooth (includes items 31 through 34)	1
31	<u>1016562</u>	Key	1
32	<u>1017471</u>	Rod	2
33	N/A	Gear, Helical	1
34	N/A	Gear, Spur	1
35	<u>103615801</u>	Crankcase, FE350	1

9
G

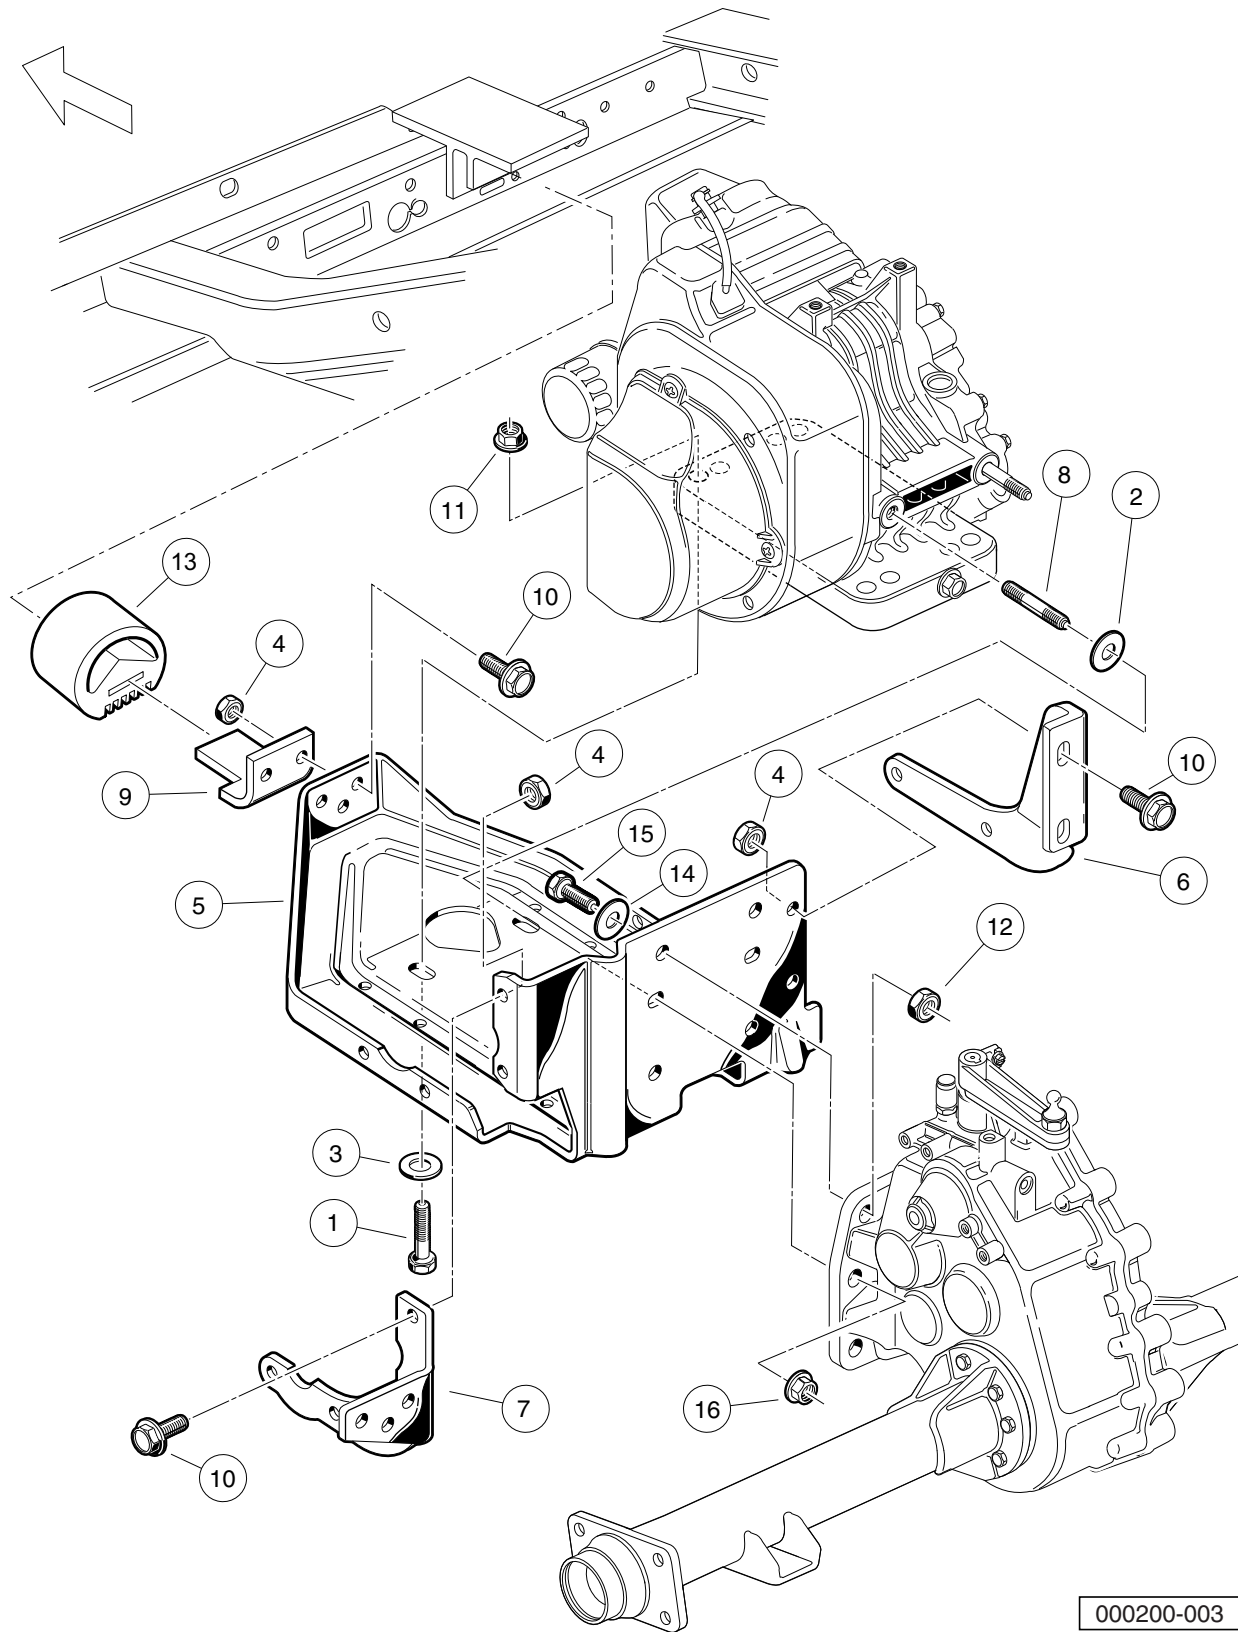

000200-003

FE350 ENGINE (S27) – MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	4	
2	<u>1011697</u>	Washer, 5/16 Flat	2	
3	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	4	
4	<u>1013924</u>	Nut, 5/16-24, Hex Head Cone	10	
5	<u>101827101</u>	Plate, Engine Mounting	1	
6	<u>101832601</u>	Stiffener (PTO Side)	1	
7	<u>101832701</u>	Stiffener (Flywheel Side)	1	
8	<u>101833101</u>	Stud, M8-1.25 X 50 mm Two-Ended	2	
9	<u>101834601</u>	Bracket, Snubber	1	
10	<u>101884801</u>	Screw, 5/16-24 X 0.875, Grade-8	10	
11	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4	
12	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4	
13	<u>102540301</u>	Snubber, Inner Frame	1	
14	<u>334</u>	Washer, 3/8, Type A, Flat	4	
15	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	4	
16	<u>96704416</u>	Nut, Flange, M8 X 1.25 Serrated	2	

9

G


ENGINE (SUBARU EX40)

10


G

10

G

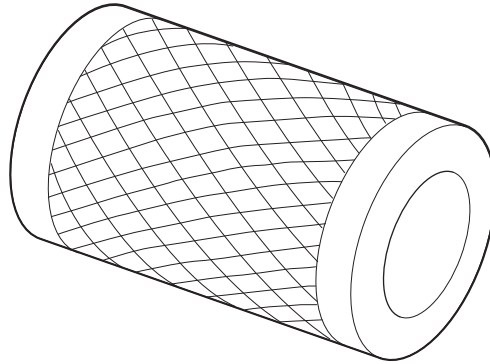

1




2

000992-003


10
G

10
G

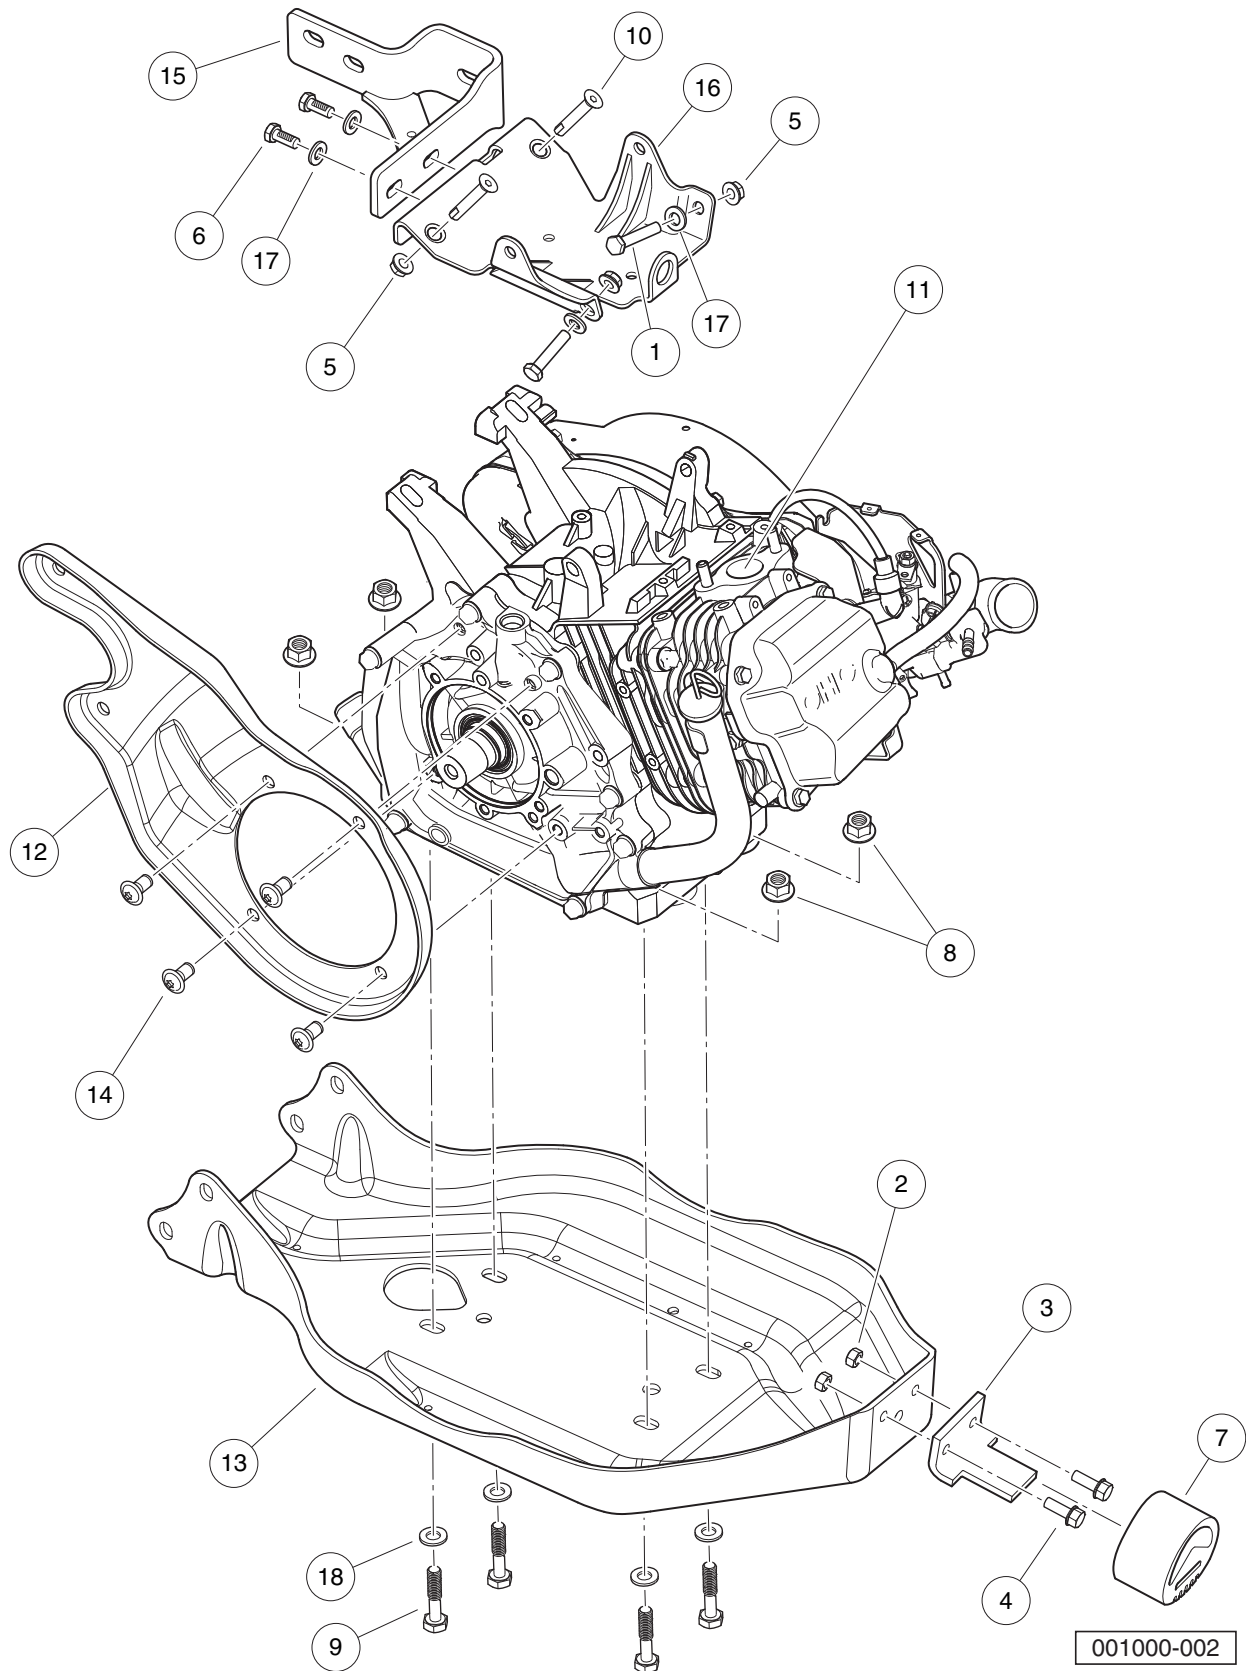

ENGINE AND ENGINE MOUNTING, UTILITY – EX40


ITEM	PART NO.	DESCRIPTION	QTY	10	G
		1 2 3 4			
1	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	2		
2	<u>1013924</u>	Nut, 5/16-24, Hex Head Cone	2		
3	<u>101834602</u>	Bracket, Snubber, Tall	1		
4	<u>101884801</u>	Screw, 5/16-24 X 0.875, Grade-8	2		
5	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4		
6	<u>102242101</u>	Screw, 5/16-18 X 3/4 Hex-Head with Patch	2		
7	<u>102540301</u>	Snubber, Inner Frame	1		
8	<u>102617201</u>	Nut, Flanged, M10 X 1.5, Mechanically Deformed	4		
9	<u>102732401</u>	Bolt, M10 X 45, Zn-Ni (Black)	4		
10	<u>103196202</u>	5/16-18x1.75, Bolt, Loctite	2		
11	<u>103882801</u>	Engine, Gas, Subaru EX40, EFI	1		
12	<u>103979401</u>	Plate, Mounting, CVT, Center	1		
13	<u>103982201</u>	Plate, Engine/Axle Mounting	1		
14	<u>103996201</u>	Screw, 3/8-16 X .75, Btn Hd Cap	4		
15	<u>105134601</u>	Bracket, Mounting, Transaxle/Exhaust,†EX40	1		
16	<u>105149301</u>	Bracket,†Mounting, Starter/Generator,†EX40	1		
17	<u>1241</u>	Washer, 5/16 Type A Flat	4		
18	<u>96741046</u>	Washer, M10, Hard	4		

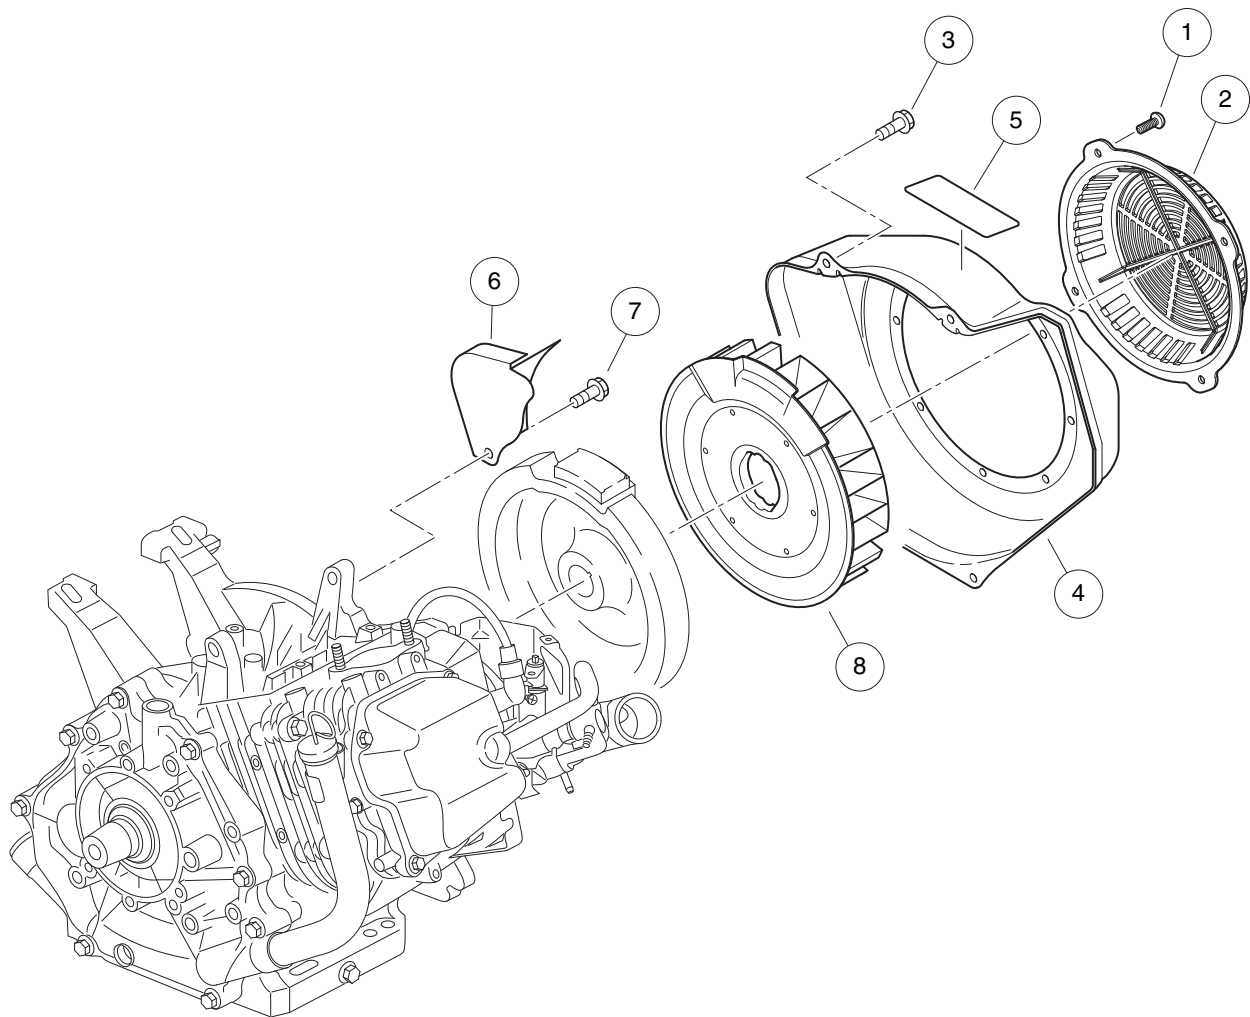

001001-001

FAN AND SHROUD – EX40


ITEM	PART NO.	DESCRIPTION	QTY	10	G
		1 2 3 4			
1	<u>1015969</u>	Screw, M6-1.00 X 10mm, Pan Hd	4		
2	<u>103995901</u>	Cover, Fan, EX40	1		
3	<u>105012601</u>	Bolt, Flange, M6x1.0x12, EX40	4		
4	<u>105016701</u>	Housing, Fan, EX40	1		
5	<u>105016801</u>	Label, Engine Warning, EX40	1		
6	<u>105016901</u>	Baffle, Crankcase, EX40	1		
7	<u>105017001</u>	Bolt, Baffle, M8x1.25x12 Ex40	1		
8	<u>105017101</u>	Fan, Cooling, EX40	1		

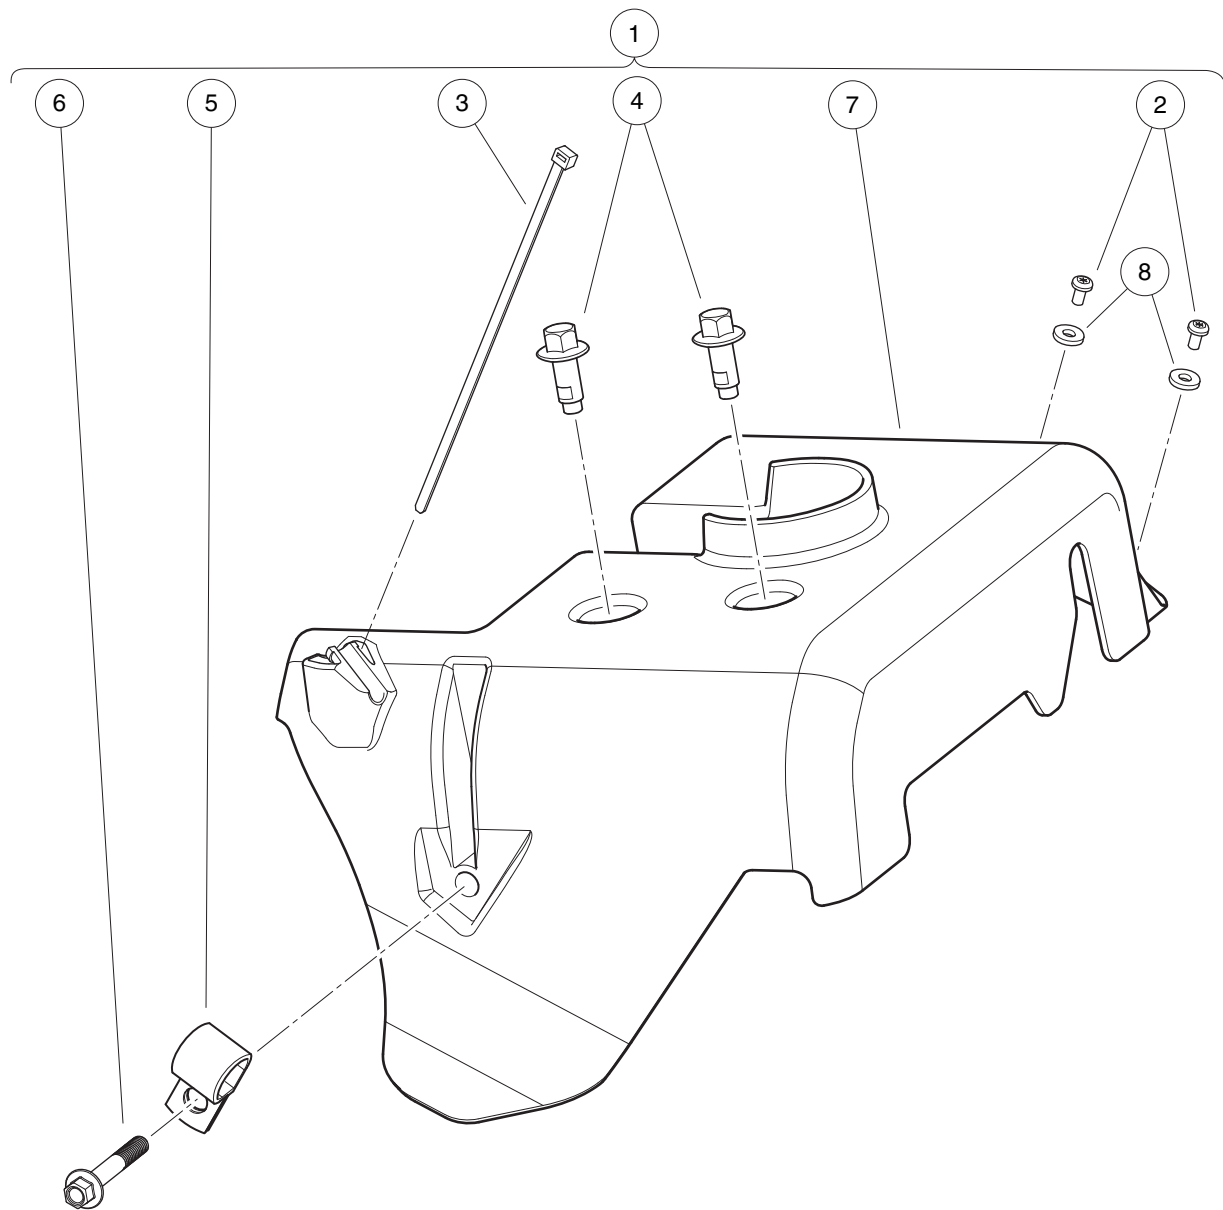

001002-001

AIR DEFLECTOR – EX40


ITEM	PART NO.	DESCRIPTION	QTY	10
		1 2 3 4		G
1	<u>105084801</u>	Kit, Air Deflector, Subaru EX40 (includes items 2 through 8)	1	
2	<u>1016103</u>	Screw, Pan Hd Tx, Taptite 6-32	2	
3	<u>101824101</u>	Tie Wrap, Black	1	
4	<u>102298116</u>	Bolt, Flanged Head, M8 X 16.0	2	
5	<u>102410604</u>	P-clamp, Insulated, 0.625 Inch	1	
6	<u>102541402</u>	Bolt, M6x1.0x40, Hex Flange Head, Blk-I	1	
7	<u>105075301</u>	Deflector, Air, Subaru EX40	1	
8	<u>7591</u>	Washer, #6, Flat	2	

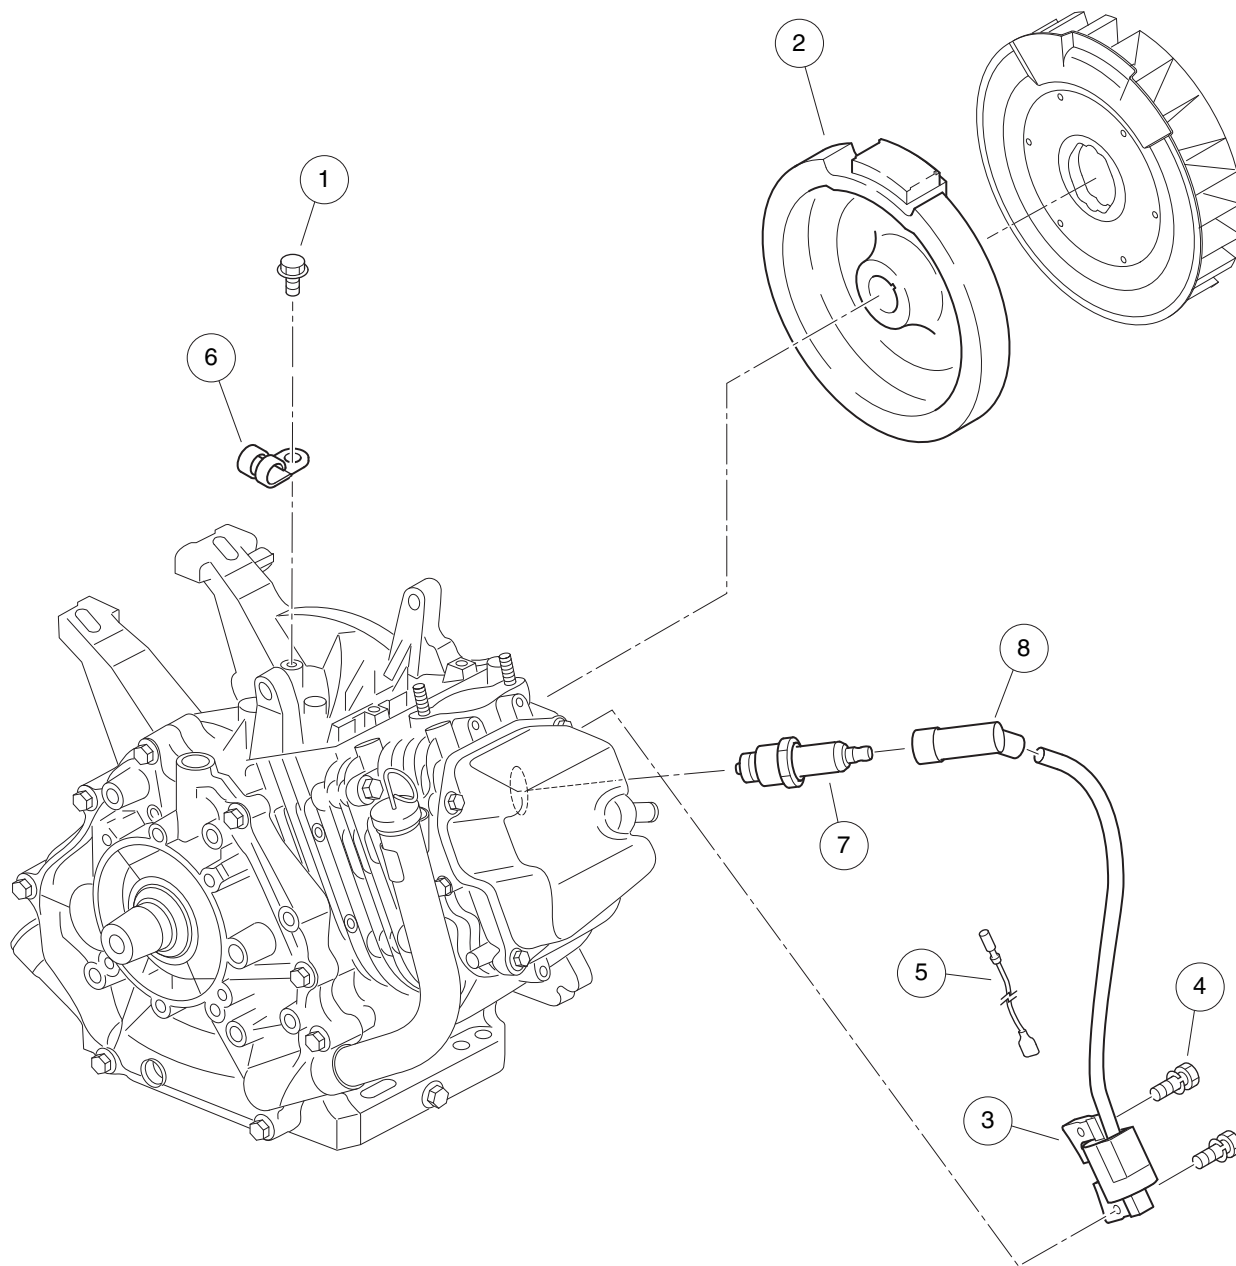

001003-001

IGNITION COMPONENTS AND FLYWHEEL – EX40


ITEM	PART NO.	DESCRIPTION	QTY	10
		1 2 3 4		G
1	<u>105016001</u>	Bolt, Flange, M6x1.0x8, EX40	1	
2	<u>105017301</u>	Flywheel, EX40	1	
3	<u>105017401</u>	Coil, Ignition, CDI, EX40	1	
4	<u>105017501</u>	Asm, Bolt-Washer, Coil, EX40	2	
5	<u>105017601</u>	Asm, Wire, Coil Control, EX40	1	
6	<u>105017701</u>	Clamp, Coil Control Wire, EX40	1	
7	<u>105017801</u>	Spark Plug, Subaru EX40	1	
8	<u>105017901</u>	Cap, Spark Plug, EX40	1	

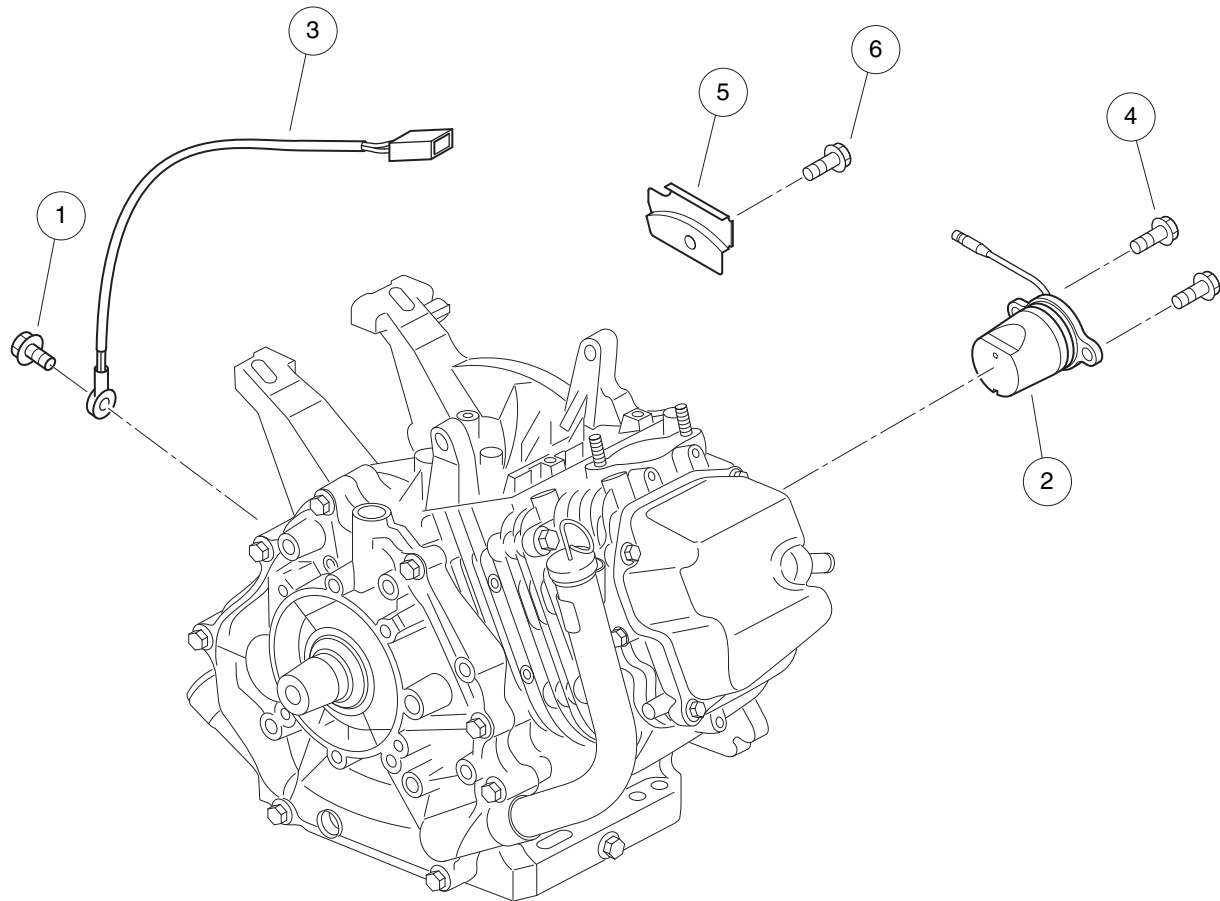

001004-001

10
G


10
G

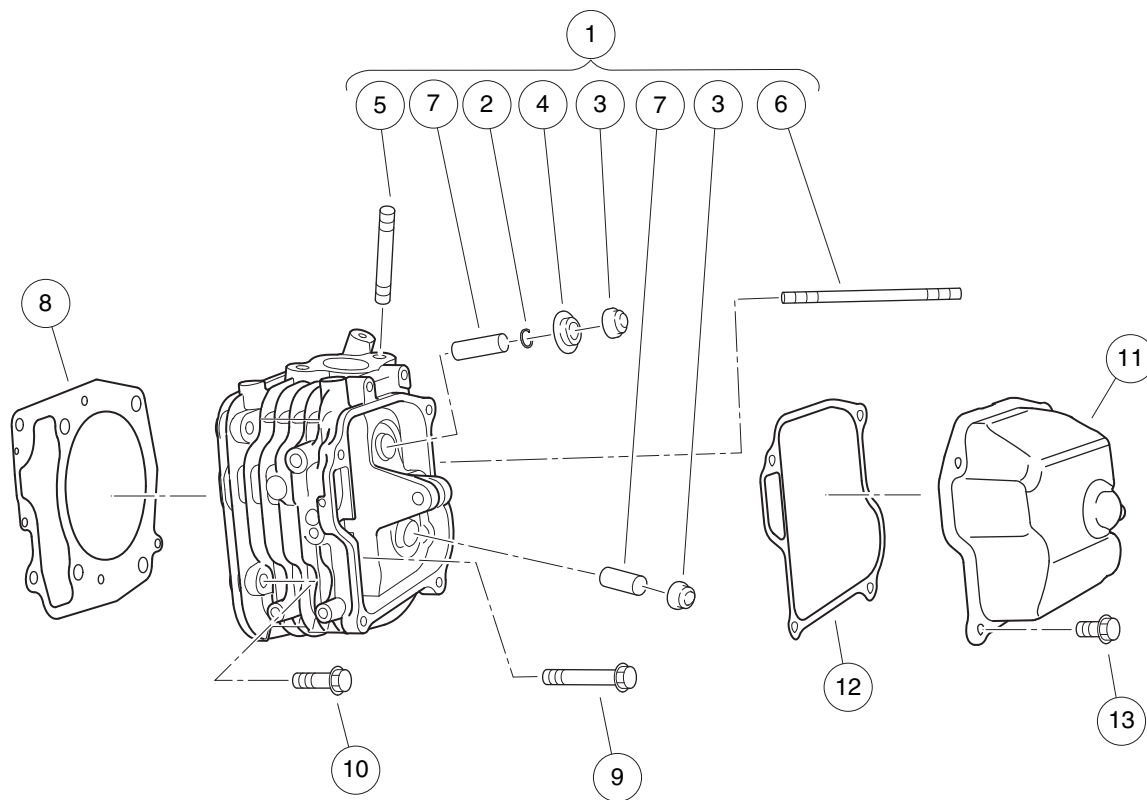

001005-001

CYLINDER HEAD – EX40


ITEM	PART NO.	DESCRIPTION	QTY	10	G
		1 2 3 4			
1	<u>105011901</u>	Asm, Cylinder Head, EX40 (includes items 2 through 7)	1		
2	<u>105010101</u>	Clip, Retainer Plate, EX40	1		
3	<u>105010201</u>	Seal, Valve, EX40	2		
4	<u>105010301</u>	Plate, Retainer, EX40	1		
5	<u>105010801</u>	Stud, Mounting, Exhaust, EX40	2		
6	<u>105010901</u>	Stud, Mounting, Intake, EX40	2		
7	<u>105018501</u>	Guide, Valve, EX40	2		
8	<u>105012001</u>	Gasket, Head, EX40	1		
9	<u>105012101</u>	Bolt, Head, M10x1.25x75, EX40	4		
10	<u>105012201</u>	Bolt, Head, M8x1.25x35, EX40	2		
11	<u>105012301</u>	Cover, Rocker, EX40	1		
12	<u>105012401</u>	Gasket, Rocker Cover, EX40	1		
13	<u>105012601</u>	Bolt, Flange, M6x1.0x12, EX40	4		

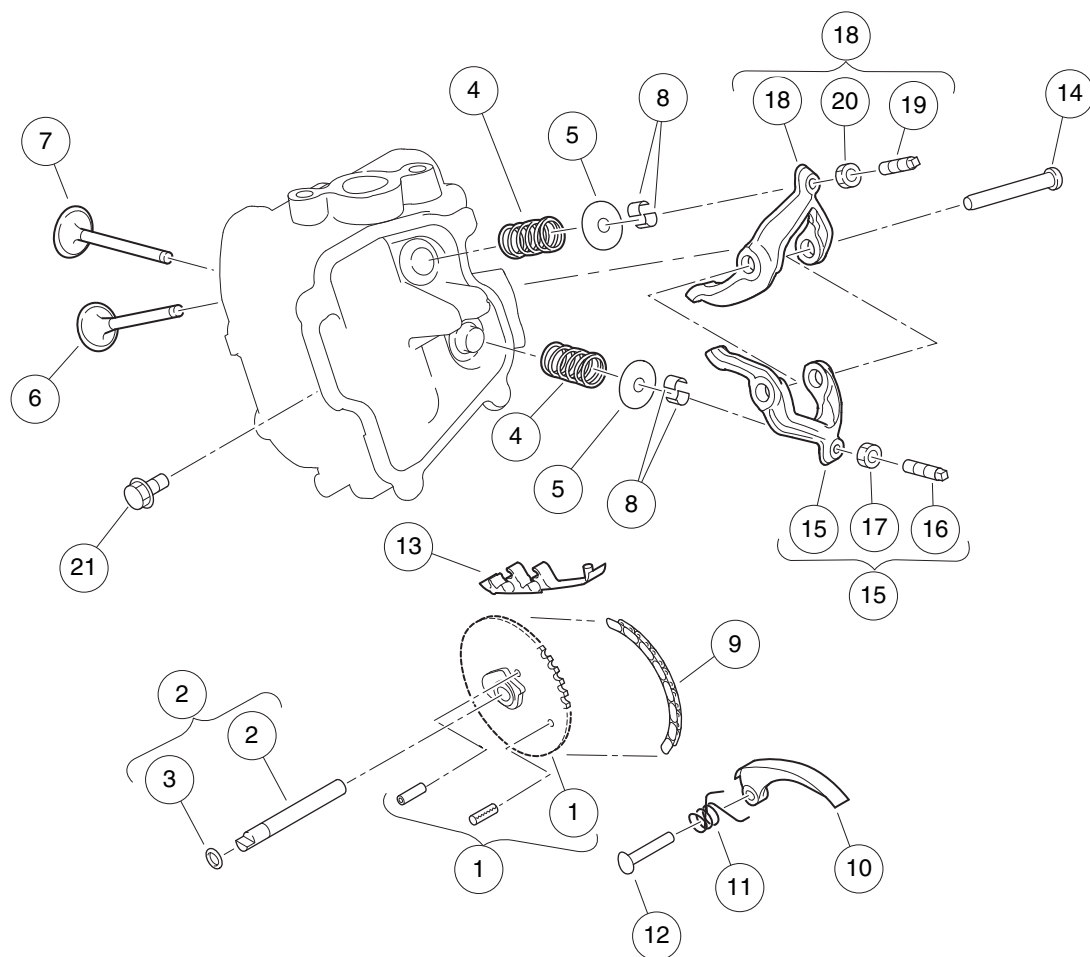

001006-001

VALVETRAIN AND TIMING CHAIN – EX40


ITEM	PART NO.	DESCRIPTION	QTY	10	G
		1 2 3 4			
1	<u>105014201</u>	Asm, Cam/Chain Sprocket, EX40	1		
2	<u>105014301</u>	Asm, Camshaft and O-ring, EX40 (includes item 3)	1		
3	<u>105014401</u>	O-ring, Camshaft, EX40	1		
4	<u>105014501</u>	Spring, Valve, EX40	2		
5	<u>105014601</u>	Retainer, Spring, EX40	2		
6	<u>105014701</u>	Valve, Intake, EX40	1		
7	<u>105014801</u>	Valve, Exhaust, EX40	1		
8	<u>105014901</u>	Collet, Valve, EX40	4		
9	<u>105015001</u>	Chain, Timing, EX40	1		
10	<u>105015101</u>	Tensioner, Chain, EX40	1		
11	<u>105015201</u>	Spring, Tension, EX40	1		
12	<u>105015301</u>	Pin, Tensioner, EX40	1		
13	<u>105015401</u>	Guide, Chain, EX40	1		
14	<u>105015501</u>	Shaft, Rocker, EX40	1		
15	<u>105015601</u>	Asm, Rocker Arm, Intake, EX40 (includes items 16 and 17)	1		
16	<u>105015801</u>	Screw, Adjust, Valve, EX40	1		
17	<u>105015901</u>	Nut, Adjust, Valve, EX40	1		
18	<u>105015701</u>	Asm, Rocker Arm, Exhaust, EX40 (includes items 19 and 20)	1		
19	<u>105015801</u>	Screw, Adjust, Valve, EX40	1		
20	<u>105015901</u>	Nut, Adjust, Valve, EX40	1		
21	<u>105016001</u>	Bolt, Flange, M6x1.0x8, EX40	1		

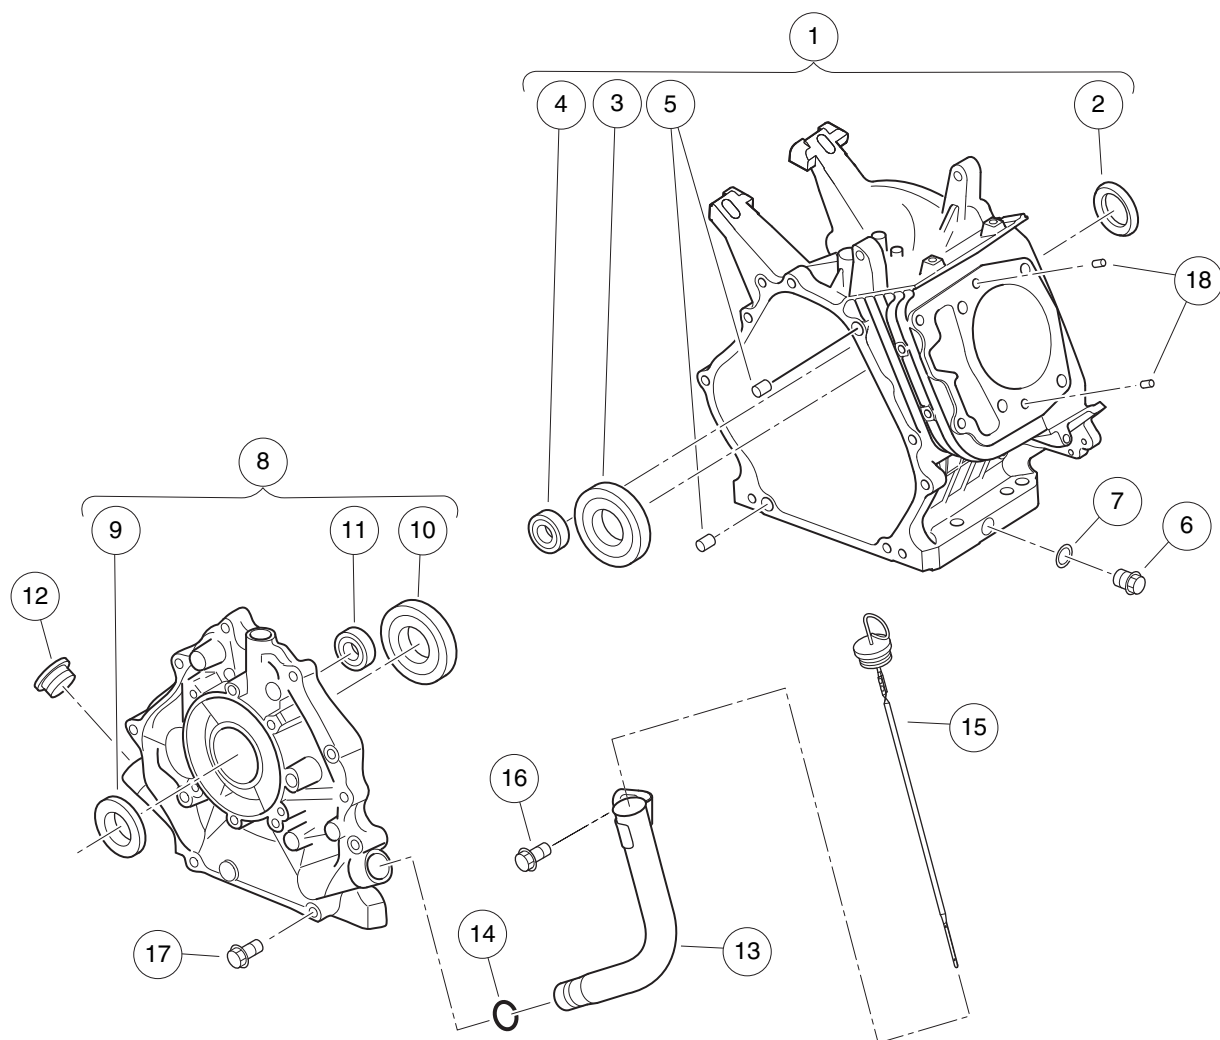

001007-001

CRANKCASE – EX40

ITEM	PART NO.	DESCRIPTION	QTY	10	G
		1 2 3 4			
1	105010001	Crankcase, EX40 (includes items 2 through 5)	1		
2	<u>105010401</u>	Seal, Oil, Crankshaft, EX40	1		
3	<u>105010501</u>	Bearing, Crankshaft, EX40	1		
4	105010601	Bearing, Balance Shaft, EX40	1		
5	<u>105010701</u>	Pin, Guide, Crankcase, EX40	2		
6	105011001	Plug, Oil Drain, EX40	2		
7	<u>105011101</u>	Gasket, Oil Drain Plug, EX40	2		
8	105011201	Asm, Cover, Crankcase, EX40 (includes items 9 through 11)	1		
9	<u>105010401</u>	Seal, Oil, Crankshaft, EX40	1		
10	<u>105010501</u>	Bearing, Crankshaft, EX40	1		
11	105010601	Bearing, Balance Shaft, EX40	1		
12	<u>105011301</u>	Plug, Rubber, Crankcase, EX40	1		
13	<u>105011401</u>	Tube, Oil Filler, EX40	1		
14	<u>105011501</u>	O-ring, Oil Filler Tube, EX40	1		
15	<u>105011601</u>	Dipstick, EX40	1		
16	<u>105011701</u>	Bolt, Filler Tube, M8x1.25x12, EX40	1		
17	<u>105011801</u>	Bolt, Case Cover, M8x1.25x38, EX40	8		
18	<u>105012501</u>	Pin, Guide, Head, EX40	2		

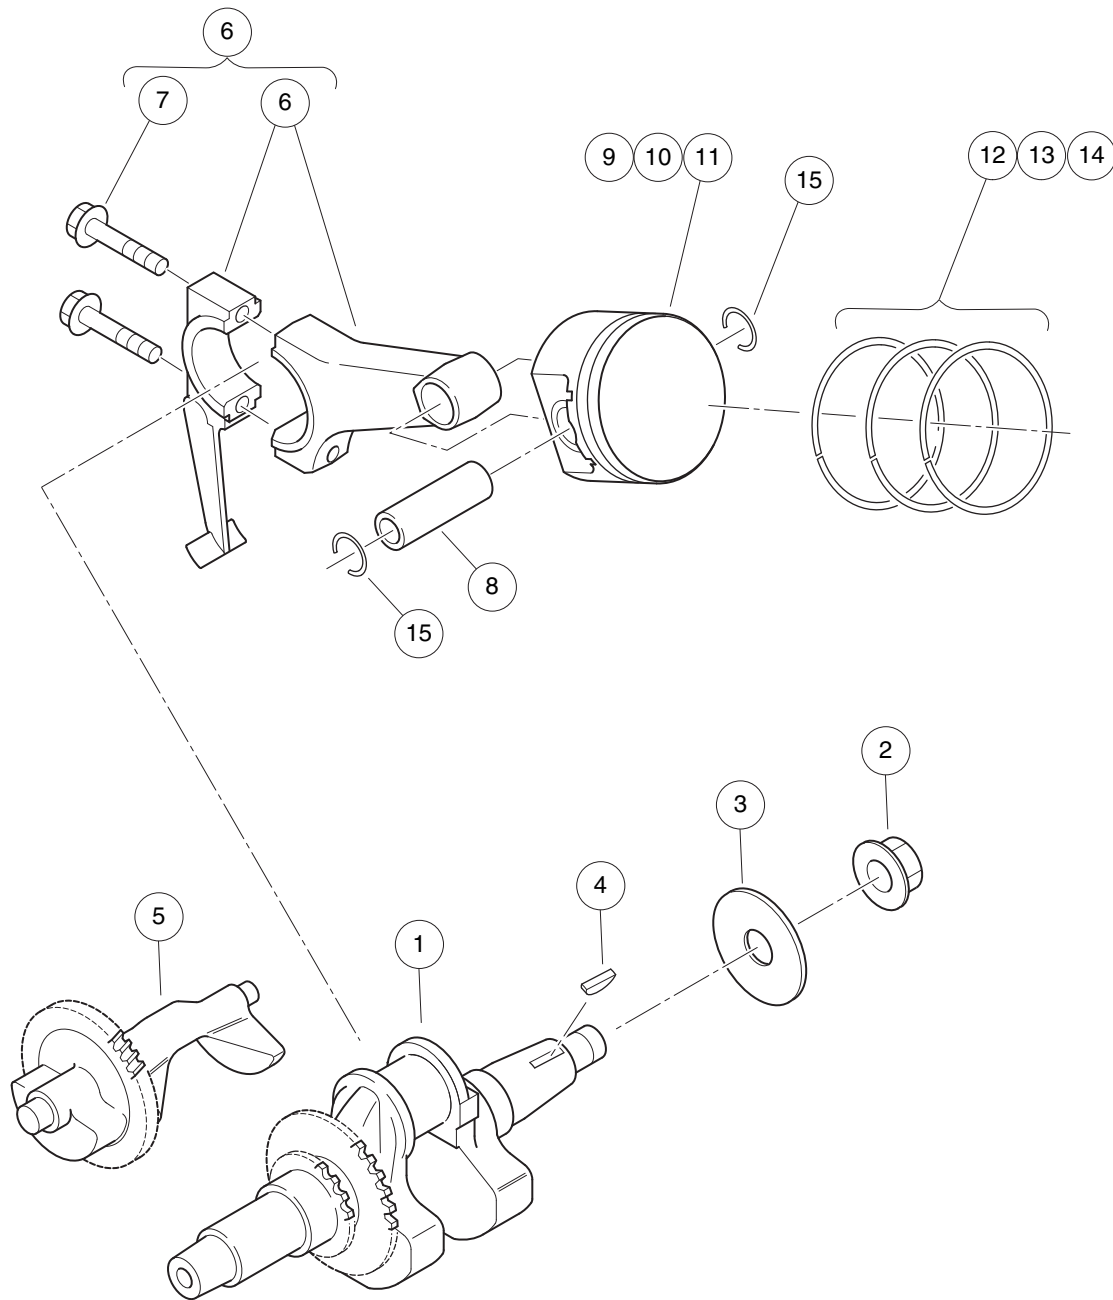

001008-001

CRANKSHAFT AND PISTON – EX40

ITEM	PART NO.	DESCRIPTION	QTY	10	G
		1 2 3 4			
1	105012701	Crankshaft, EX40	1		
2	105012801	Nut, Crankshaft M18x1.5 Ex40	1		
3	105012901	Washer, Crankshaft Ex40	1		
4	105013001	Key, Woodruff, Crankshaft, EX40	1		
5	105013101	Shaft, Balance, EX40	1		
6	105013201	Asm, Rod, Connecting, EX40 (includes item 7)	1		
7	105013301	Bolt, Rod M8x1.25x40 Ex40	2		
8	105013401	Pin, Piston, EX40	1		
9	105013501	Piston, Standard, EX40	1		
10	105013601	Piston, 0.25 mm Oversize, EX40	1		
11	105013701	Piston, 0.50 mm Oversize, EX40	1		
12	105013801	Set, Piston Ring, Standard, EX40	1		
13	105013901	Set, Piston Ring, 0.25 mm Oversize, EX40	1		
14	105014001	Set, Piston Ring, 0.50 mm Oversize, EX40	1		
15	105014101	Clip, Piston Pin, EX40	2		


10

G

FUEL, INTAKE, AND GOVERNOR SYSTEM

11

G

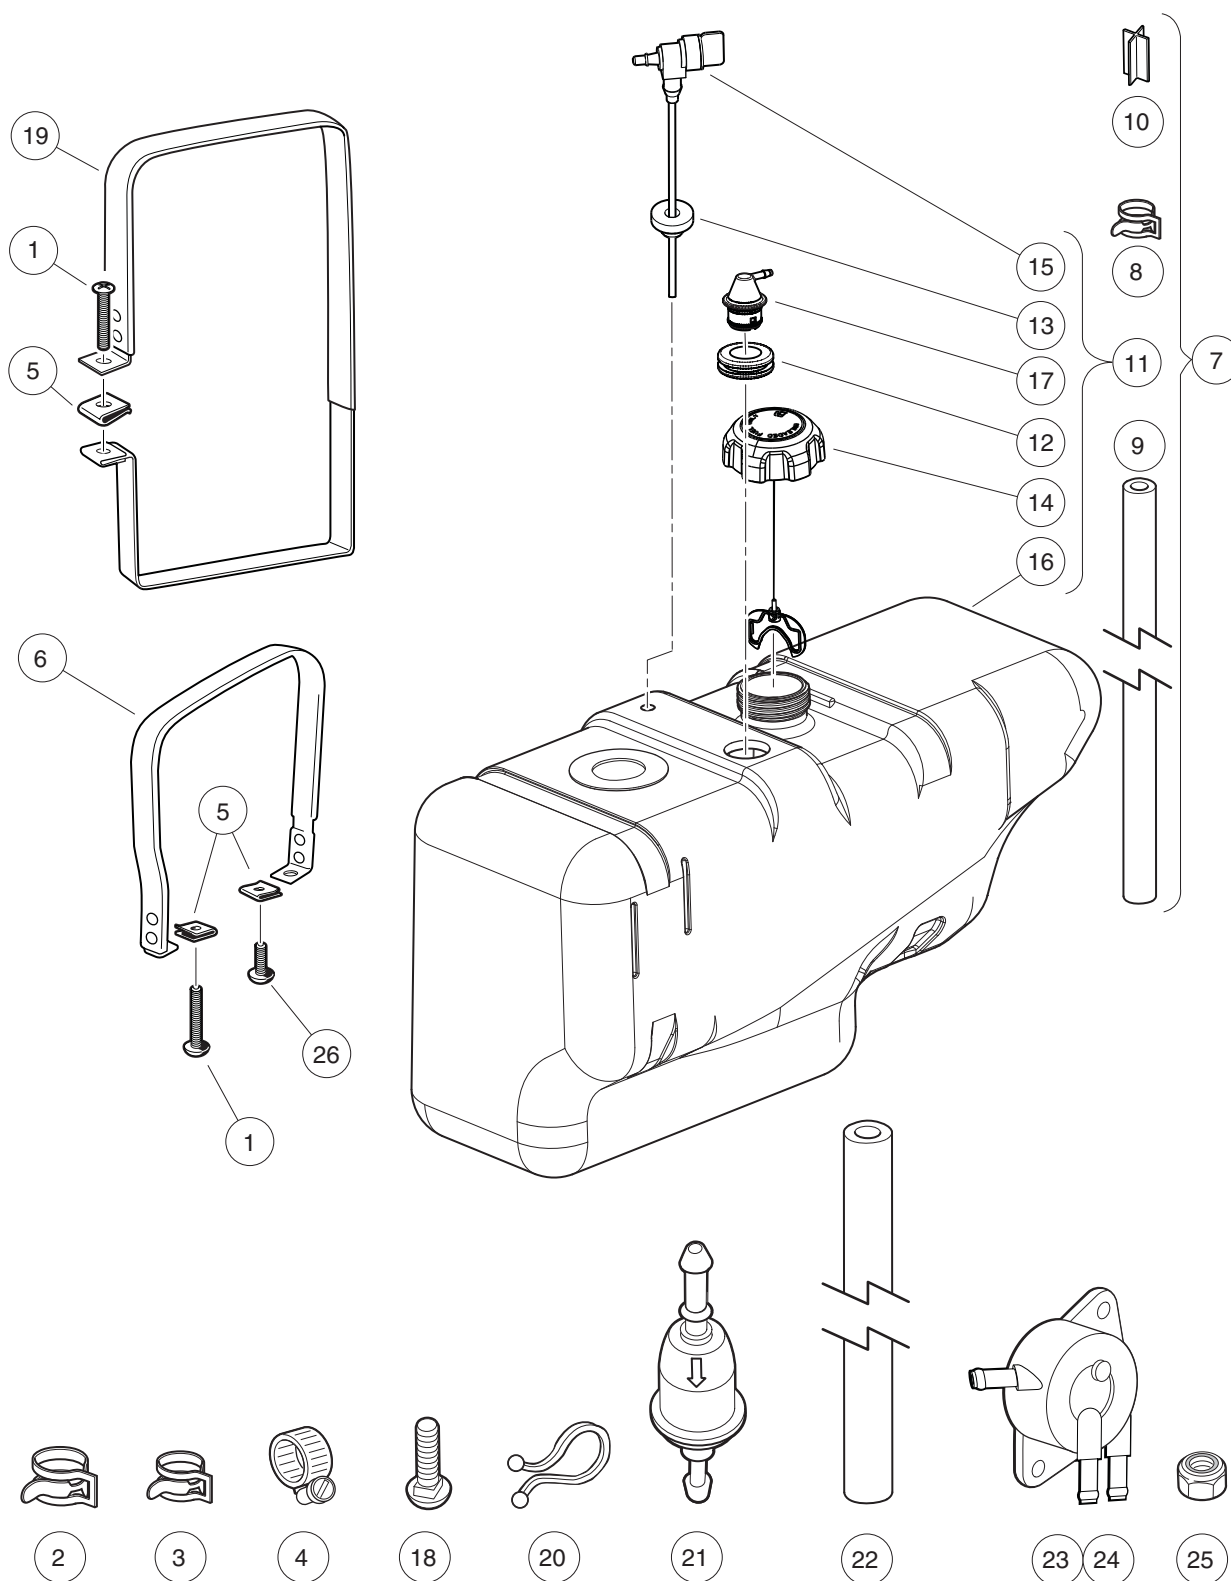


001288-004

FUEL SYSTEM AND TANK WITHOUT SENDING UNIT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011988</u>	Screw, 1/4-20 X 2.00 Phillips Truss-Head	2
2	<u>1012649</u>	Clamp, 0.460 Red Hose	6
3	<u>101313402</u>	Clamp, Green Hose	2
4	<u>1013687</u>	Clamp, 3/8" Hose (screw type)	1
5	<u>1014116</u>	Nut, 1/4-20 Speed	3
6	<u>1014928</u>	Fuel Strap Assembly Rear	1
7	<u>1016003</u>	Kit, Fuel Tank - Vented (includes items 8 through 11)	1
8	<u>1013746</u>	Clamp, 0.301 ID Hose	2
9	<u>101587703</u>	Hose, Fuel, Vent, 22" Long	1
10	<u>101824401</u>	Vent Barb	1
11	<u>103651902</u>	Asm, Tank, Ds Utl Wo/su† Nano (includes items 12 through 17)	1
12	<u>1015139</u>	Insulation Grommet	1
13	<u>102406701</u>	Bushing, Line, Return	1
14	<u>103372101</u>	Cap, Fuel Tank, Gas, Ratchet	1
15	<u>103372302</u>	Fuel Pickup w/Shut-Off Valve, 288mm	1
16	<u>103776902</u>	Tank, Fuel, Top, Wo/su Nano	1
17	<u>103905201</u>	Assembly, Vent, Fuel, 1/4 Inch O.D.	1
18	<u>1017203</u>	Carriage Bolt	2
19	<u>101955301</u>	Fuel Strap Assy, Front	1
20	<u>101987701</u>	Clamp, Plastic Tie	2
21	<u>102003201</u>	Filter, Fuel, 30 Micron	1
22	<u>102865101</u>	Fuel Line, 1/4 (available by the foot)	A/R
23	<u>103781101</u>	Kit, Fuel Pump Retrofit (includes item 24)	1
24	<u>103010101</u>	Pump, Fuel, Impulse, Fh	1
25	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2
26	<u>8248</u>	Screw, 1/4-20 X 0.75, Truss-Head Machine	1

11
G

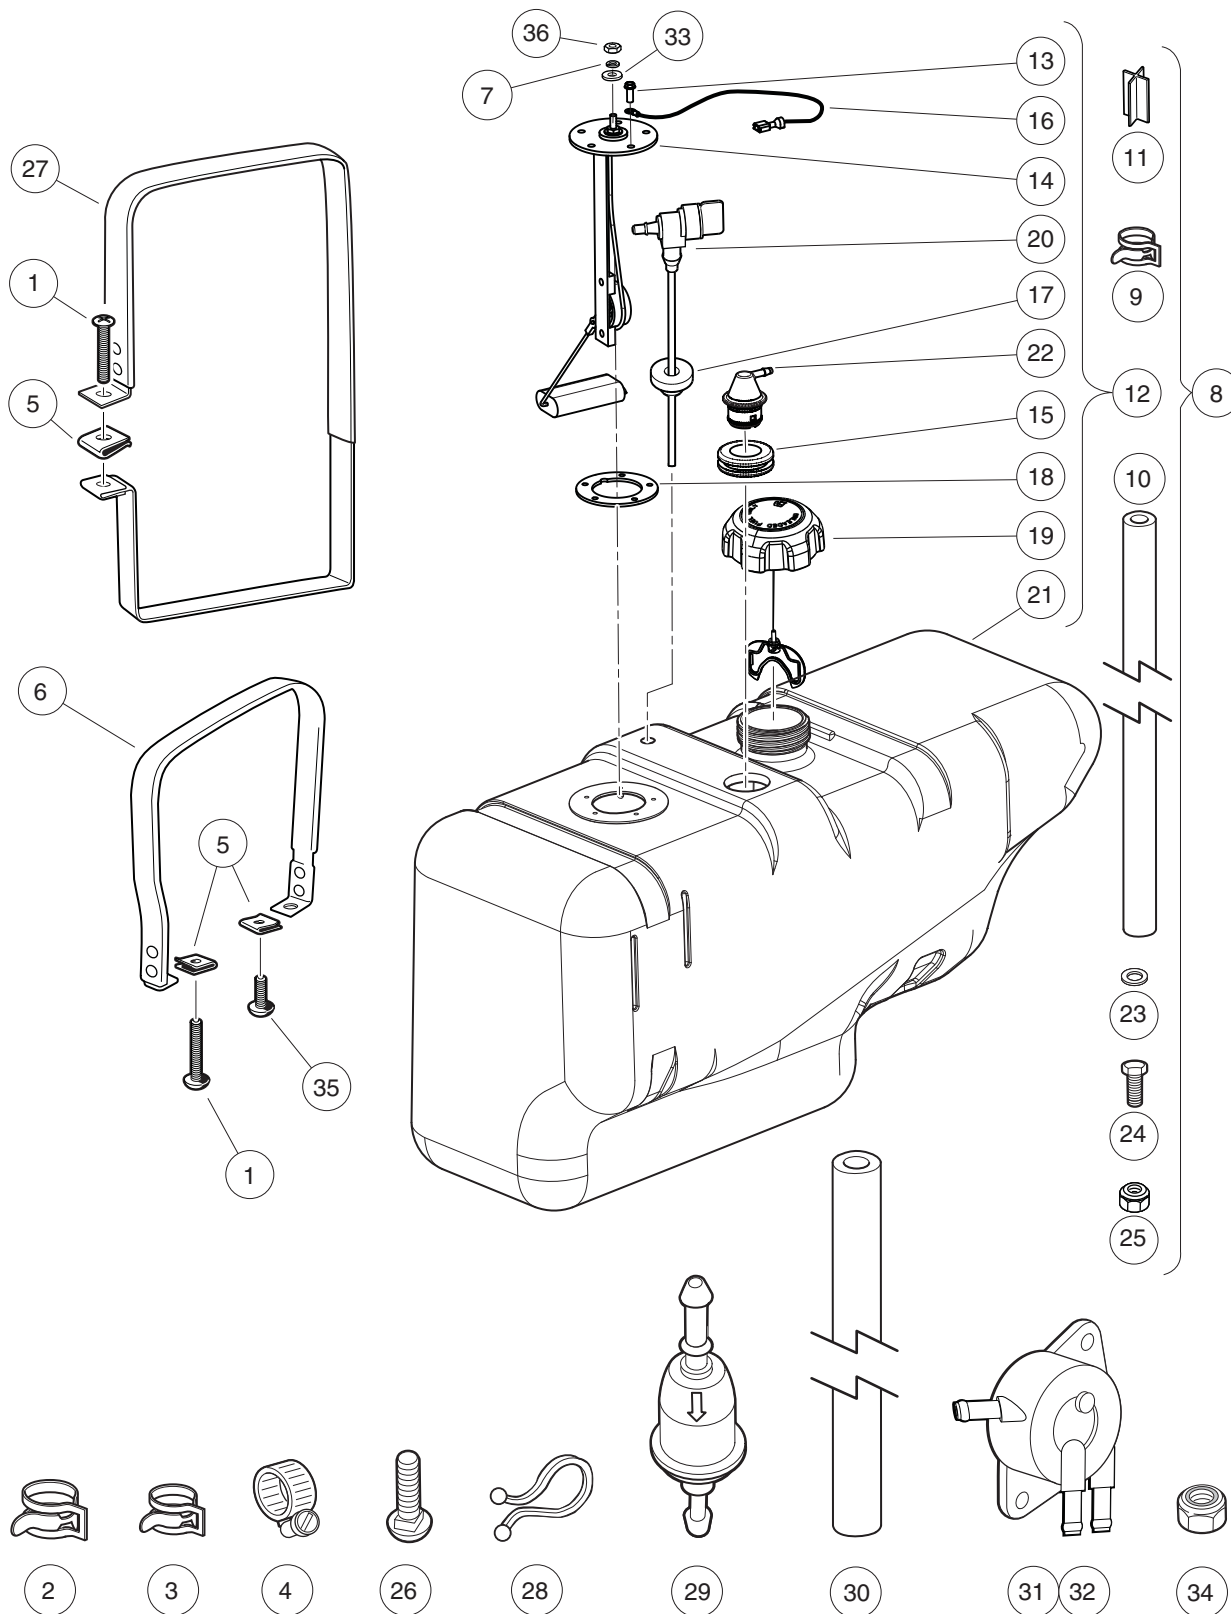


001287-004

FUEL SYSTEM AND TANK WITH SENDING UNIT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011988</u>	Screw, 1/4-20 X 2.00 Phillips Truss-Head	2
2	<u>1012649</u>	Clamp, 0.460 Red Hose	6
3	<u>101313402</u>	Clamp, Green Hose	2
4	<u>1013687</u>	Clamp, 3/8" Hose (screw type)	1
5	<u>1014116</u>	Nut, 1/4-20 Speed	3
6	<u>1014928</u>	Fuel Strap Assembly Rear	1
7	<u>1016</u>	Lockwasher, #10 Split	1
8	<u>1016004</u>	Tank Kit w/Sending Unit (includes items 9 through 25)	1
9	<u>1013746</u>	Clamp, 0.301 ID Hose	2
10	<u>101587703</u>	Hose, Fuel, Vent, 22" Long	1
11	<u>101824401</u>	Vent Barb	2
12	<u>103651901</u>	Asm, Tank, Ds Utl W/su† Nano (includes items 13 through 22)	1
13	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	5
14	<u>1013462</u>	Sending Unit, Fuel Level *	1
15	<u>1015139</u>	Insulation Grommet	1
16	<u>1015921</u>	Wire Assembly #16 Black	1
17	<u>102406701</u>	Bushing, Line, Return	1
18	<u>102522001</u>	Gasket, Rubber	1
19	<u>103372101</u>	Cap, Fuel Tank, Gas, Ratchet	1
20	<u>103372302</u>	Fuel Pickup w/Shut-Off Valve, 288mm	1
21	<u>103776901</u>	Tank, Fuel, Top, W/su Nano	1
22	<u>103905201</u>	Assembly, Vent, Fuel, 1/4 Inch O.D.	1
23	<u>1241</u>	Washer, 5/16 Type A Flat	1
24	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1
25	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1
26	<u>1017203</u>	Carriage Bolt	2
27	<u>101955301</u>	Fuel Strap Assy, Front	1
28	<u>101987701</u>	Clamp, Plastic Tie	1
29	<u>102003201</u>	Filter, Fuel, 30 Micron	1
30	<u>102865101</u>	Fuel Line, 1/4 (available by the foot)	A/R
31	<u>103781101</u>	Kit, Fuel Pump Retrofit (includes item 32)	1
32	<u>103010101</u>	Pump, Fuel, Impulse, Fh	1
33	<u>183</u>	Washer, #10, Type A, Flat	1
34	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2
35	<u>8248</u>	Screw, 1/4-20 X 0.75, Truss-Head Machine	1
36	<u>8797</u>	Nut, #10-32 Brass Hex	1
		* Note: Must replace fuel sending unit gasket when servicing this component.	

11
G

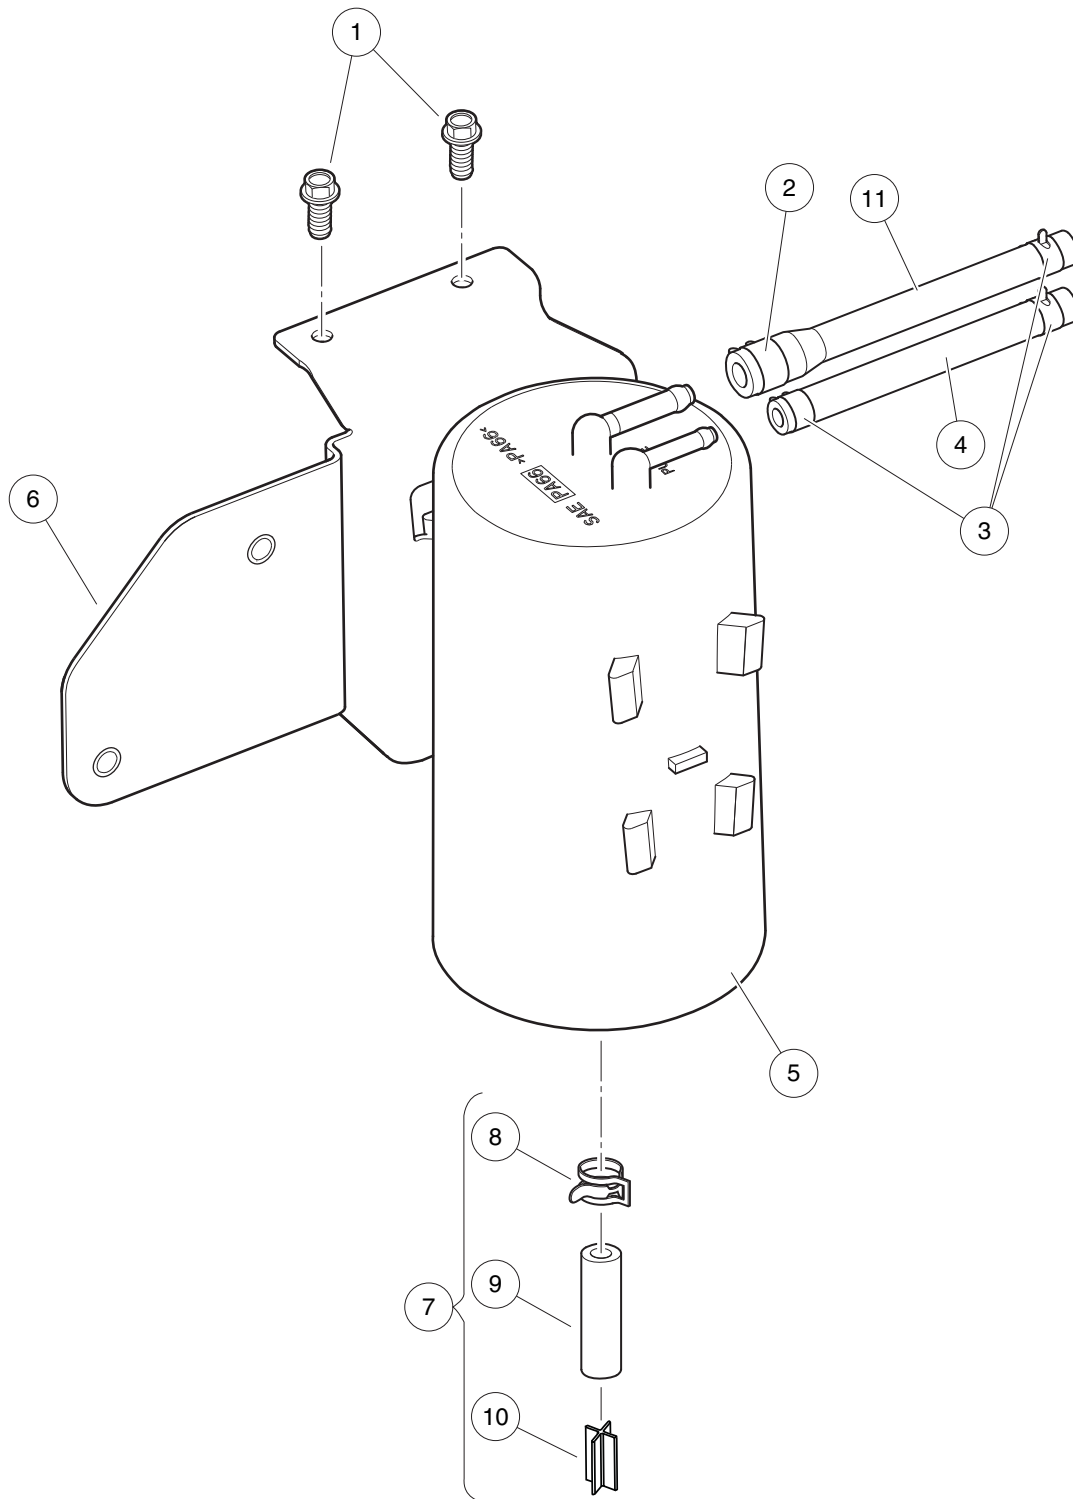


000980-008

CARBON CANISTER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	2
2	<u>101313402</u>	Clamp, Green Hose	1
3	<u>1013746</u>	Clamp, 0.301 ID Hose	3
4	<u>1015137</u>	Fuel Line, 3/16 (available by the foot)	A/R
5	<u>103372401</u>	Canister, Carbon	1
6	<u>103372801</u>	Bracket, Carbon Canister, Sw	1
7	<u>103418601</u>	Asm, Vent Line, Utility (includes items 8 through 10)	1
8	<u>1012649</u>	Clamp, 0.460 Red Hose	1
9	N/A	Hose, Vent, 5/16 I.D., Bulk	A/R
10	N/A	Vent, Barb, 5/16 I.D. Hose	1
11	<u>103851201</u>	Hose, Vent Flared, 9.0 Inch	1

11

G

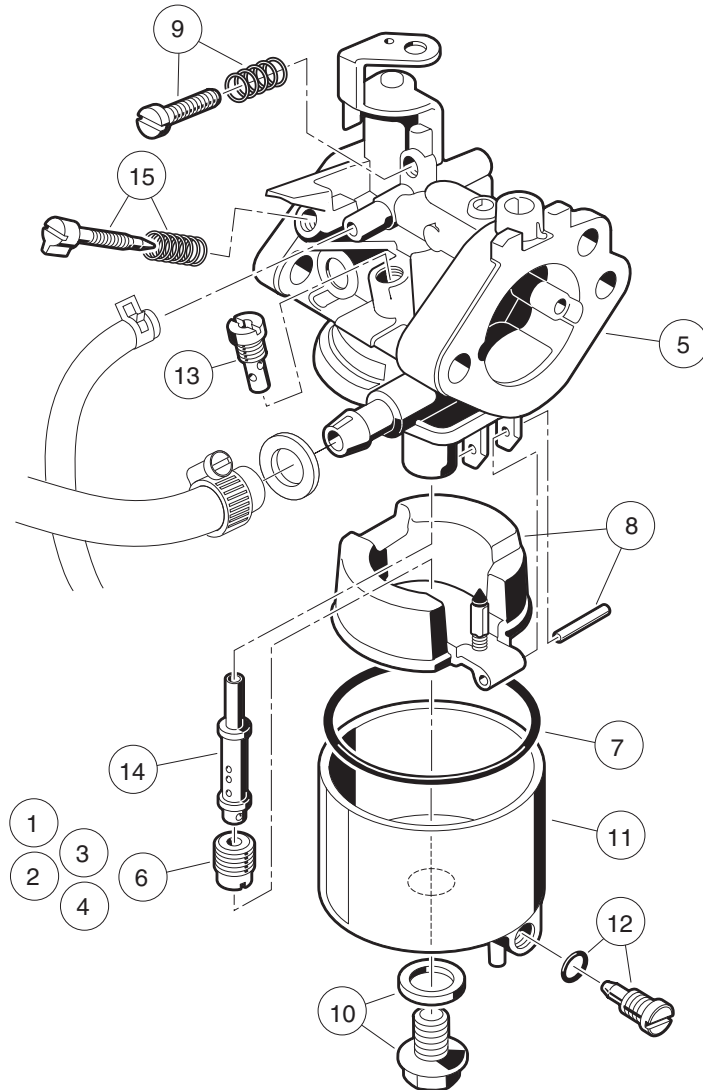


000212-007

CARBURETOR ASSEMBLY – FE350 S27

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101642575</u>	Jet, Altitude, # 75	1
2	<u>101642578</u>	Jet, Altitude, # 78	1
3	<u>101642580</u>	Jet, Altitude, # 80	1
4	<u>101642582</u>	Jet, Altitude, # 82	1
5	<u>103617101</u>	Carburetor, FE350 S27 (includes items 6 through 15)	1
6	<u>101642585</u>	Jet, Altitude, # 85	1
7	<u>1016437</u>	Gasket, Carburetor Bowl OHV	1
8	<u>1016486</u>	Float Assembly	1
9	<u>1016501</u>	Screw Assembly	1
10	<u>1016585</u>	Bolt	1
11	<u>1017461</u>	Chamber Assembly, Float (includes item 12)	1
12	<u>1016499</u>	Screw Assembly	1
13	<u>101973101</u>	Jet, #40 Pilot	1
14	<u>101973301</u>	Nozzle, Main	1
15	N/A	Assembly, Pilot Air Screw	1
Note: <u>101642585</u> for 0 - 3,200 feet; <u>101642582</u> for 3,200 - 6,500 feet; <u>101642580</u> for 6,500 - 9,800 feet; <u>101642578</u> for 9,800 feet and above.			

11
G

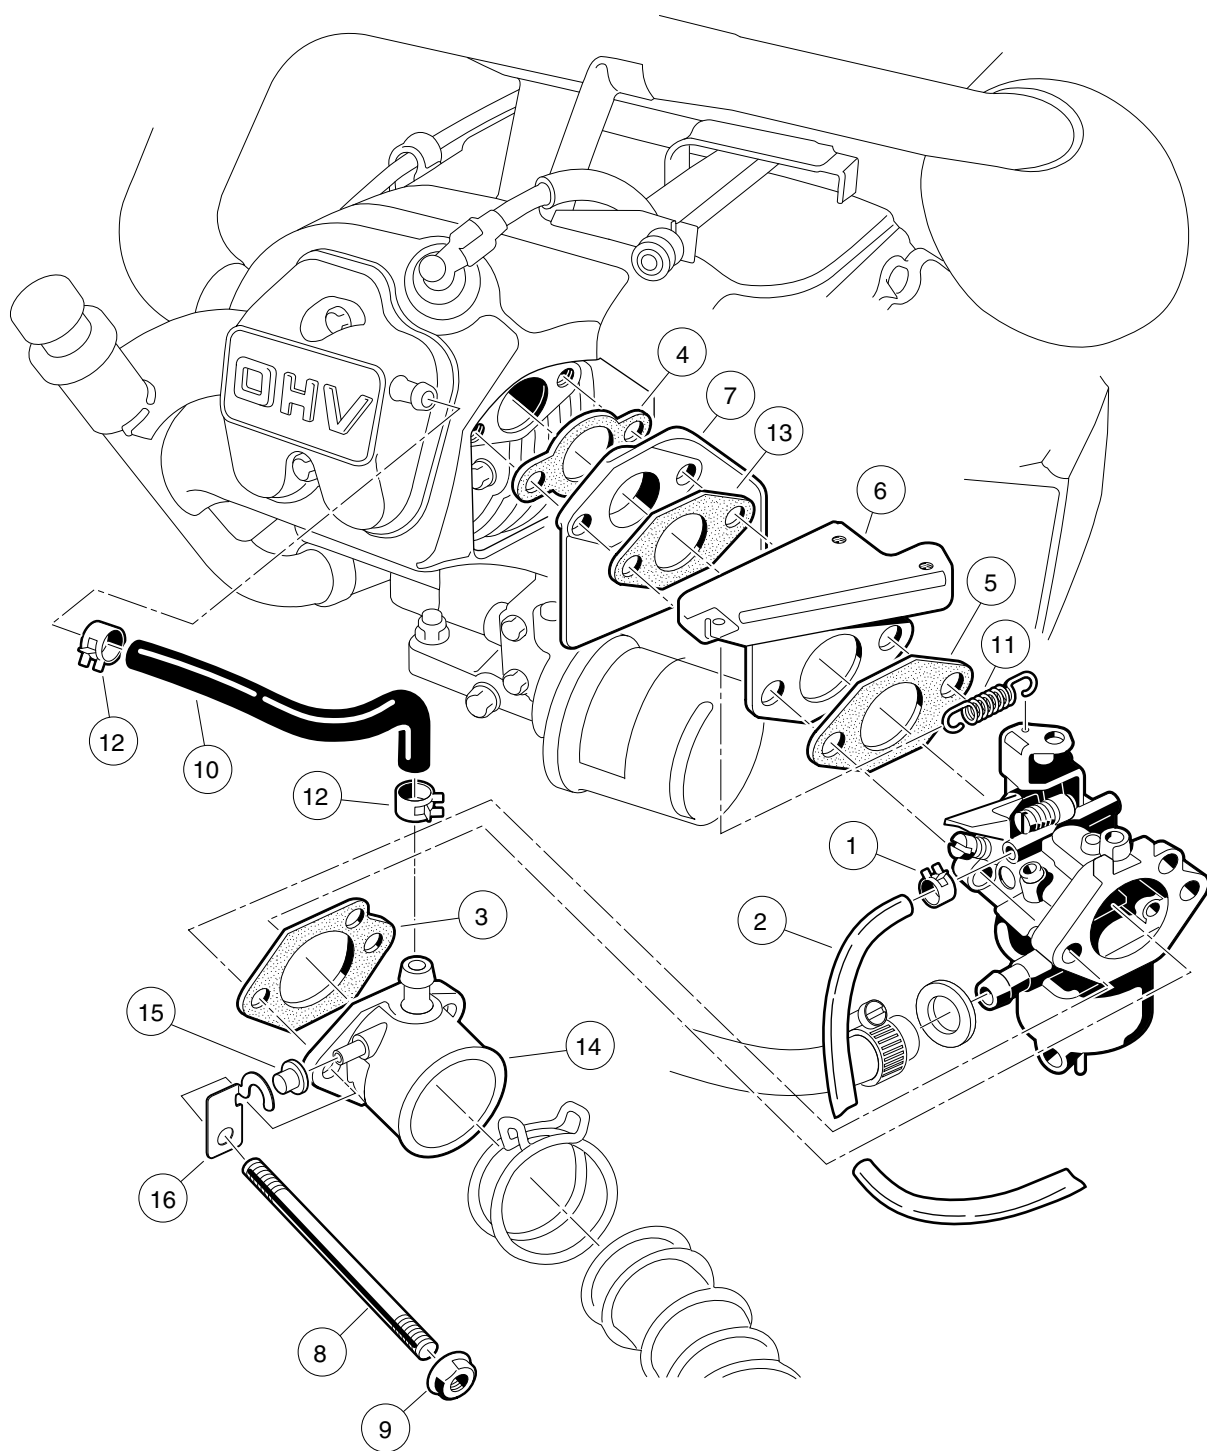


000214-003

CARBURETOR MOUNTING, UTILITY, FE350 S27

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013746</u>	Clamp, 0.301 ID Hose	1
2	<u>1015137</u>	Fuel Line, 3/16 (available by the foot)	1
3	<u>1016438</u>	Gasket, Carb To Intake Manifold	1
4	<u>1016440</u>	Gasket, Engine to Insulator	1
5	<u>1016441</u>	Gasket, Sprg Brkt To Carb OHV	1
6	<u>1016444</u>	Bracket, Throttle Spring Return	1
7	101648102	Insulator, Carburetor	1
8	<u>101649002</u>	Stud, M6-1.00 Two-Ended	2
9	1016547	Nut, M6 Flange	2
10	<u>1016572</u>	Tube, Crankcase Vent	1
11	<u>1016582</u>	Spring, Throttle Return	1
12	<u>1017466</u>	Clamp	2
13	<u>101973401</u>	Gasket, Insulator To Bracket	1
14	103507101	Carburetor Adapter w/ Tap	1
15	103507201	Plug, Intake Manifold, Carb	1
16	103507301	Bracket, Intake Manifold, Carb	1

11

G

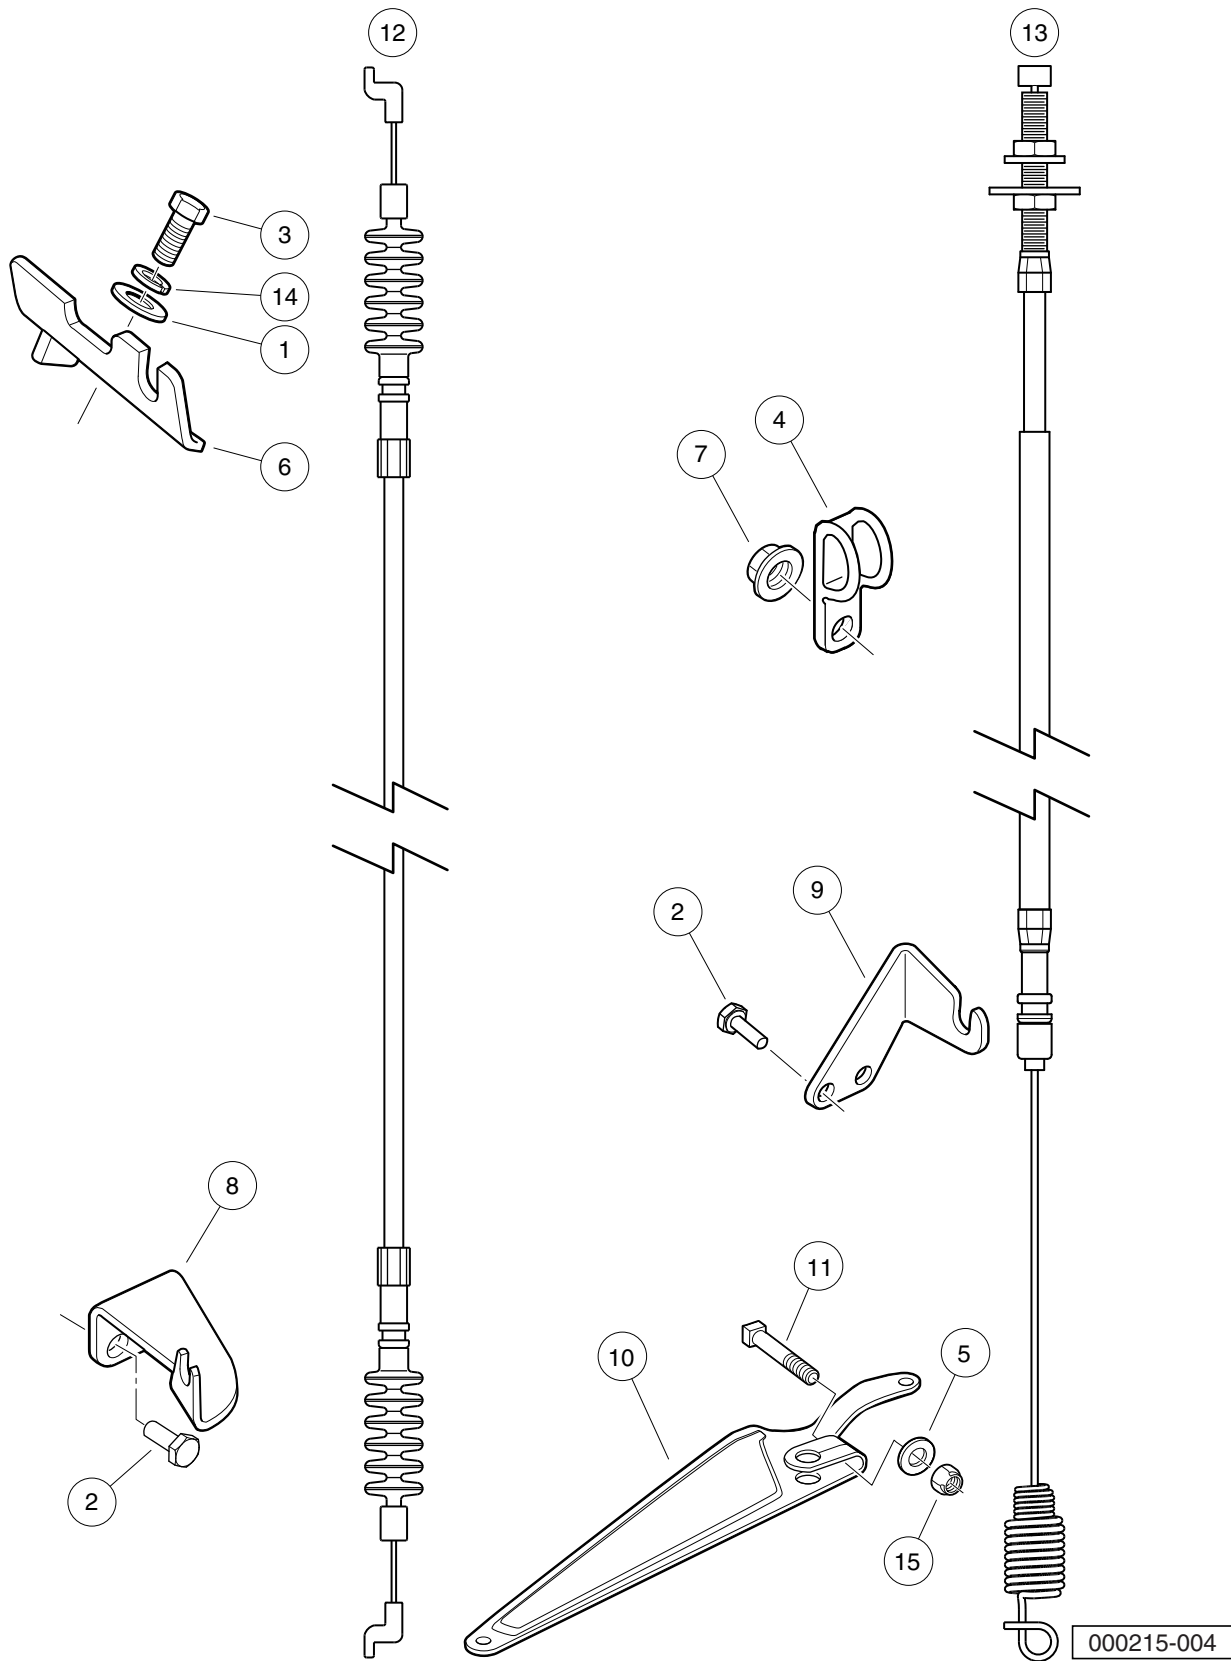


GOVERNOR AND ACCELERATOR CABLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011697</u>	Washer, 5/16 Flat	1
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4
3	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	1
4	<u>1013700</u>	Clamp	2
5	<u>1014007</u>	Washer, 1/4, Flat	1
6	<u>101584502</u>	Bracket, Governor Cable Snap-In	1
7	<u>1016546</u>	Nut	2
8	<u>101832202</u>	Bracket, Rear Governor Cable Snap-In	1
9	<u>101832302</u>	Bracket, Rear Accelerator Cable Snap-In	1
10	<u>101834801</u>	Arm, Governor	1
11	<u>101886101</u>	Screw, 1/4-20 X 1.00, Square-Head	1
12	<u>102336001</u>	Cable, Governor, Snap-In	1
13	<u>102336101</u>	Cable, Accelerator, Snap-In	1
14	<u>7174</u>	Lockwasher, 5/16 Split	1
15	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	1

11

G

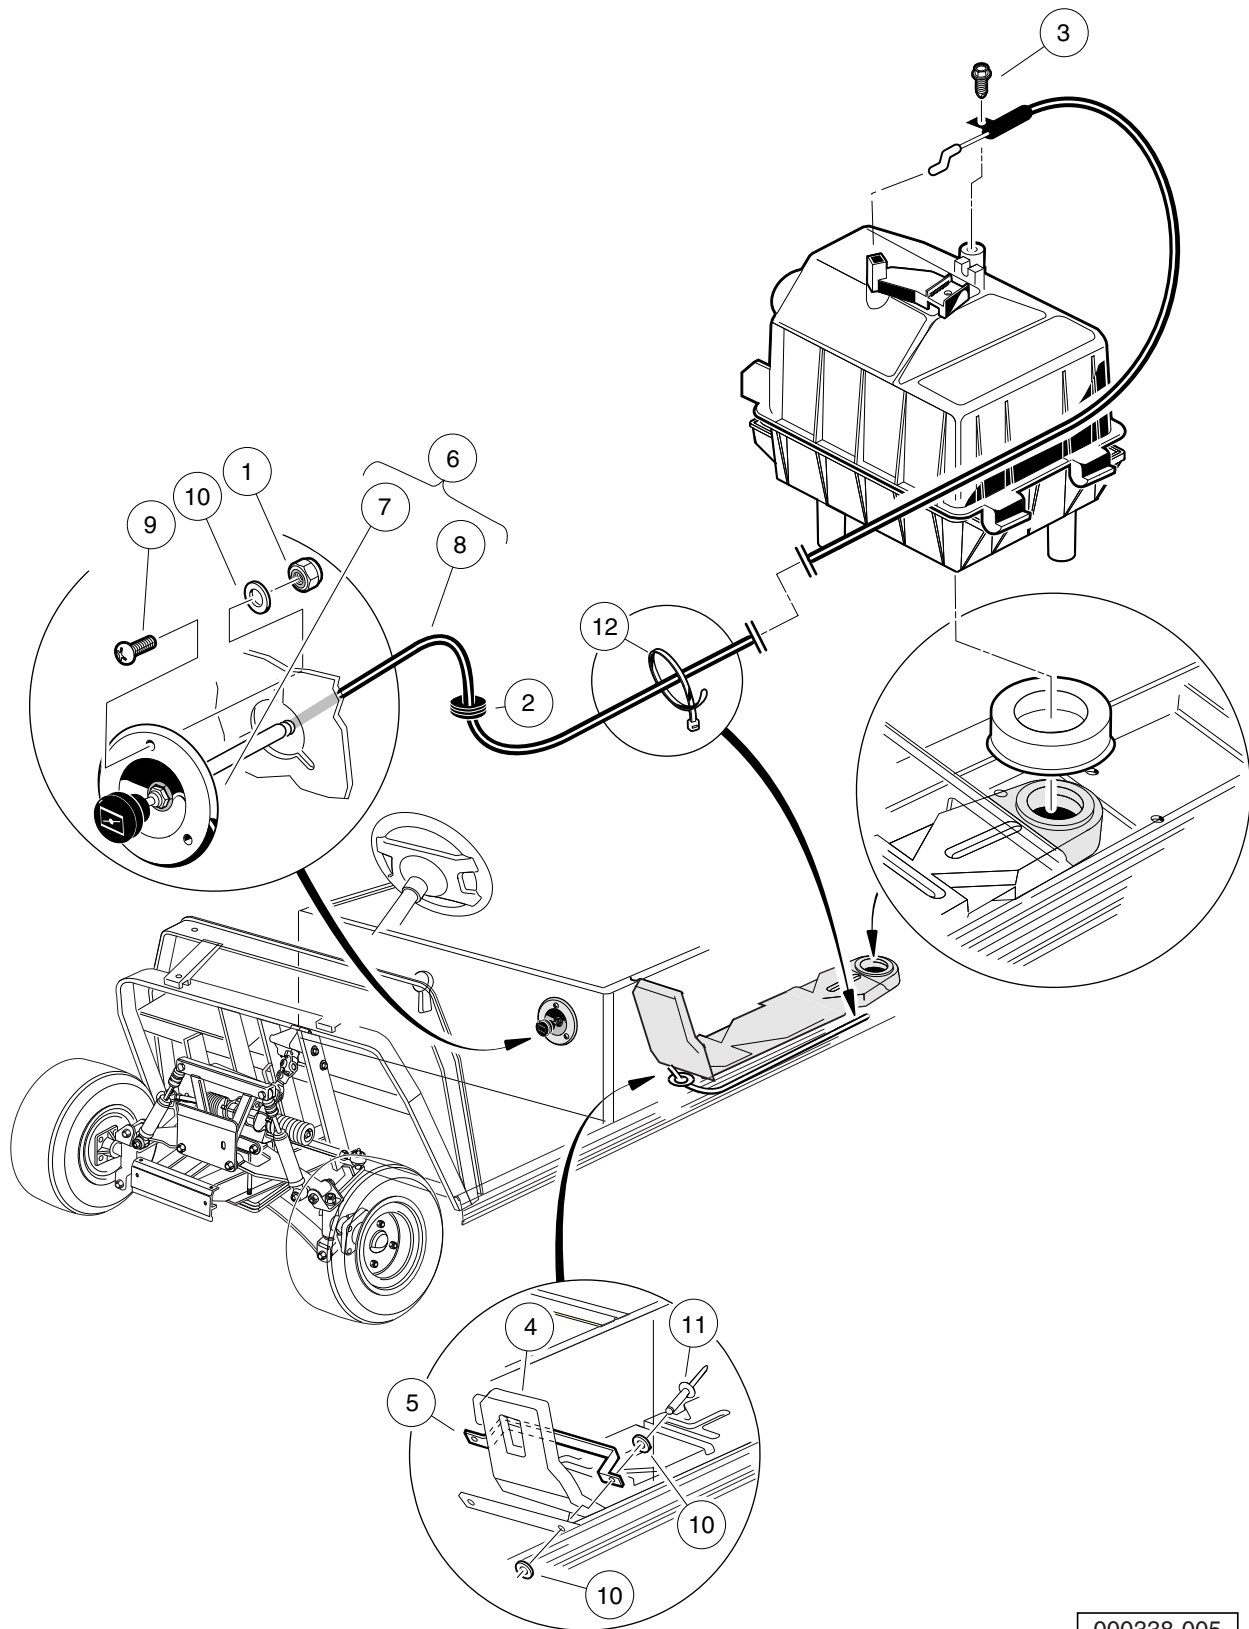


000338-005

AIR INTAKE DUCT AND CHOKE CABLE – VILLAGER 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012438</u>	Locknut, #10-24 Nylon Insert	3
2	<u>1015139</u>	Insulation Grommet	1
3	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	1
4	<u>101811301</u>	Duct, Intake	1
5	<u>101825701</u>	Retaining Bracket	1
6	<u>101926802</u>	Cable, Choke (includes items 7 and 8)	1
7	<u>101933701</u>	Bezel, Choke Cable	1
8	N/A	Choke Cable without Bezel, Long	1
9	<u>1631</u>	Screw, #10-24 X 0.75 Phillips Pan-Head	3
10	<u>183</u>	Washer, #10, Type A, Flat	7
11	<u>7973</u>	Rivet, 3/16 X .400 Blind	2
12	<u>8639</u>	Tie Wrap, 11" Nylon	2

11
G

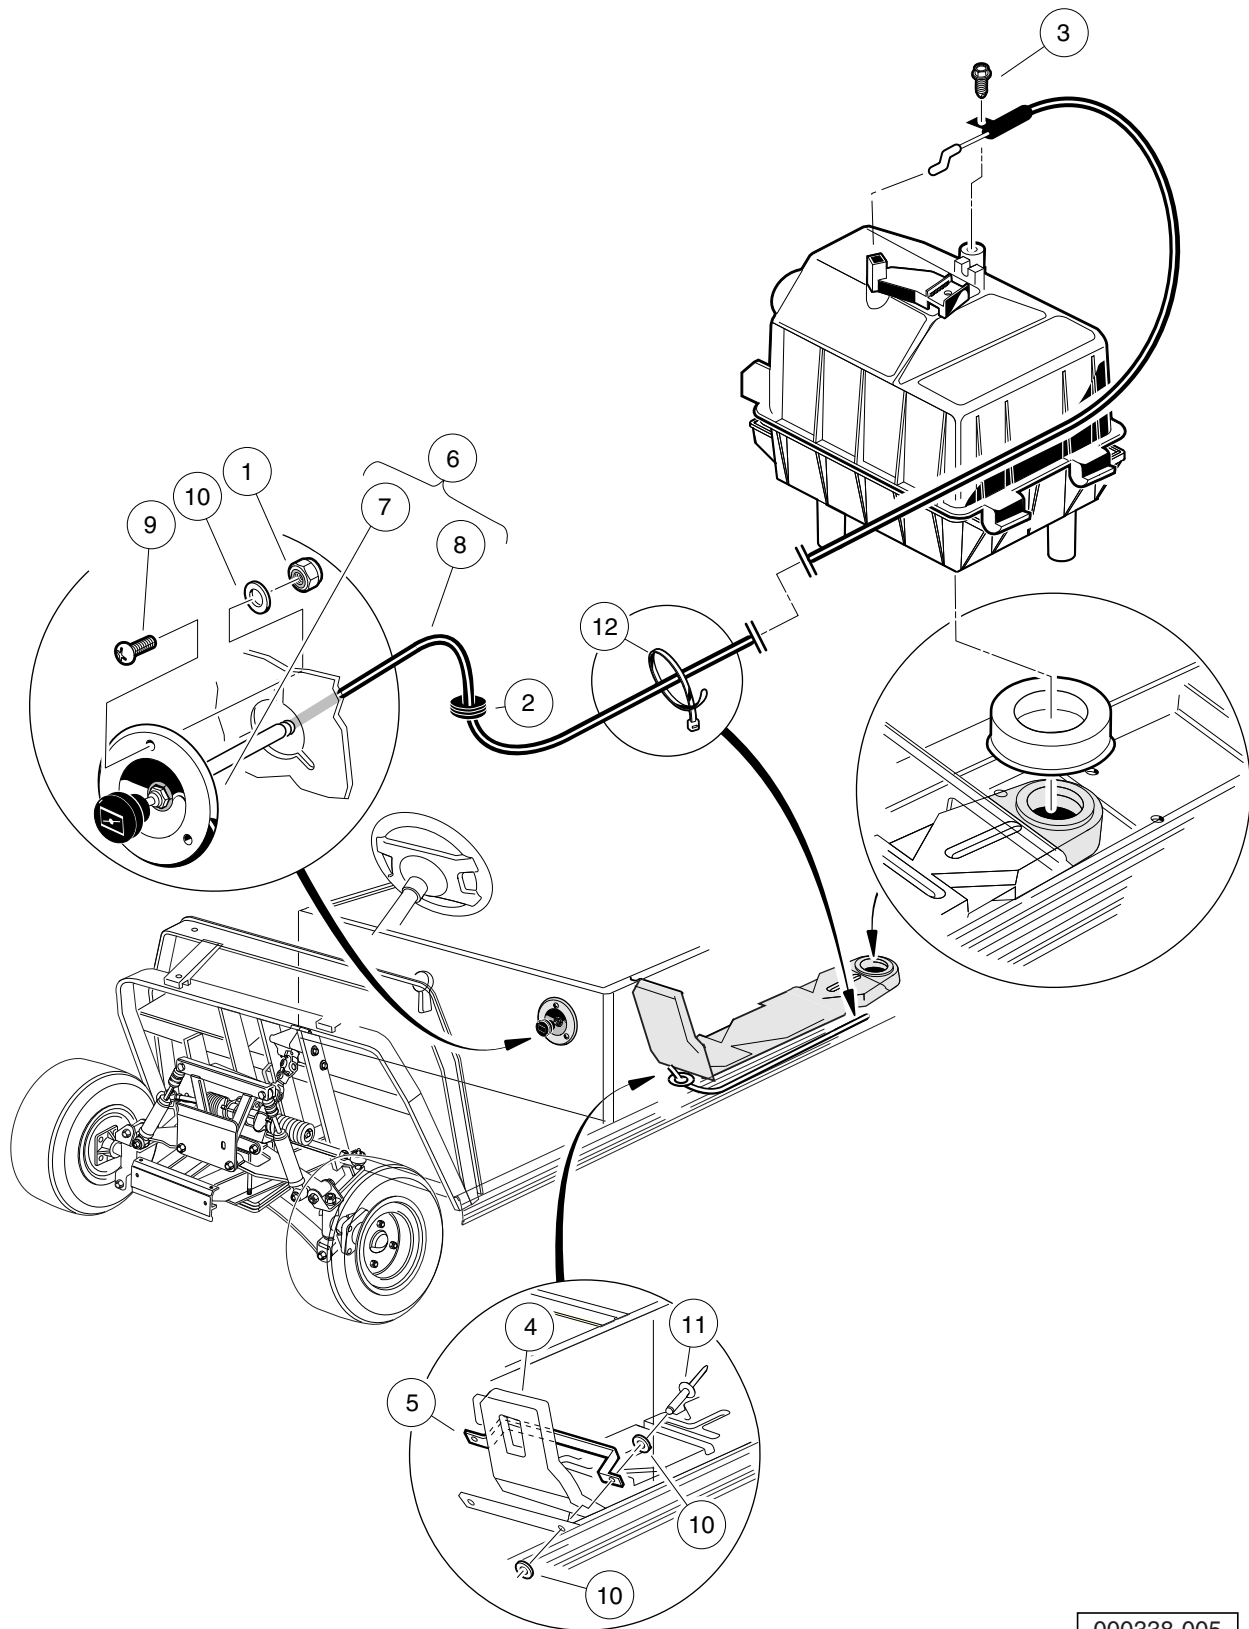


000338-005

AIR INTAKE DUCT AND CHOKE CABLE – VILLAGER 8

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012438</u>	Locknut, #10-24 Nylon Insert	3
2	<u>1015139</u>	Insulation Grommet	1
3	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	1
4	<u>101811301</u>	Duct, Intake	1
5	<u>101825701</u>	Retaining Bracket	1
6	<u>101926803</u>	Cable, Choke (includes items 7 and 8)	1
7	<u>101933701</u>	Bezel, Choke Cable	1
8	N/A	Choke Cable without Bezel, Long	1
9	<u>1631</u>	Screw, #10-24 X 0.75 Phillips Pan-Head	3
10	<u>183</u>	Washer, #10, Type A, Flat	7
11	<u>7973</u>	Rivet, 3/16 X .400 Blind	2
12	<u>8639</u>	Tie Wrap, 11" Nylon	2

11
G

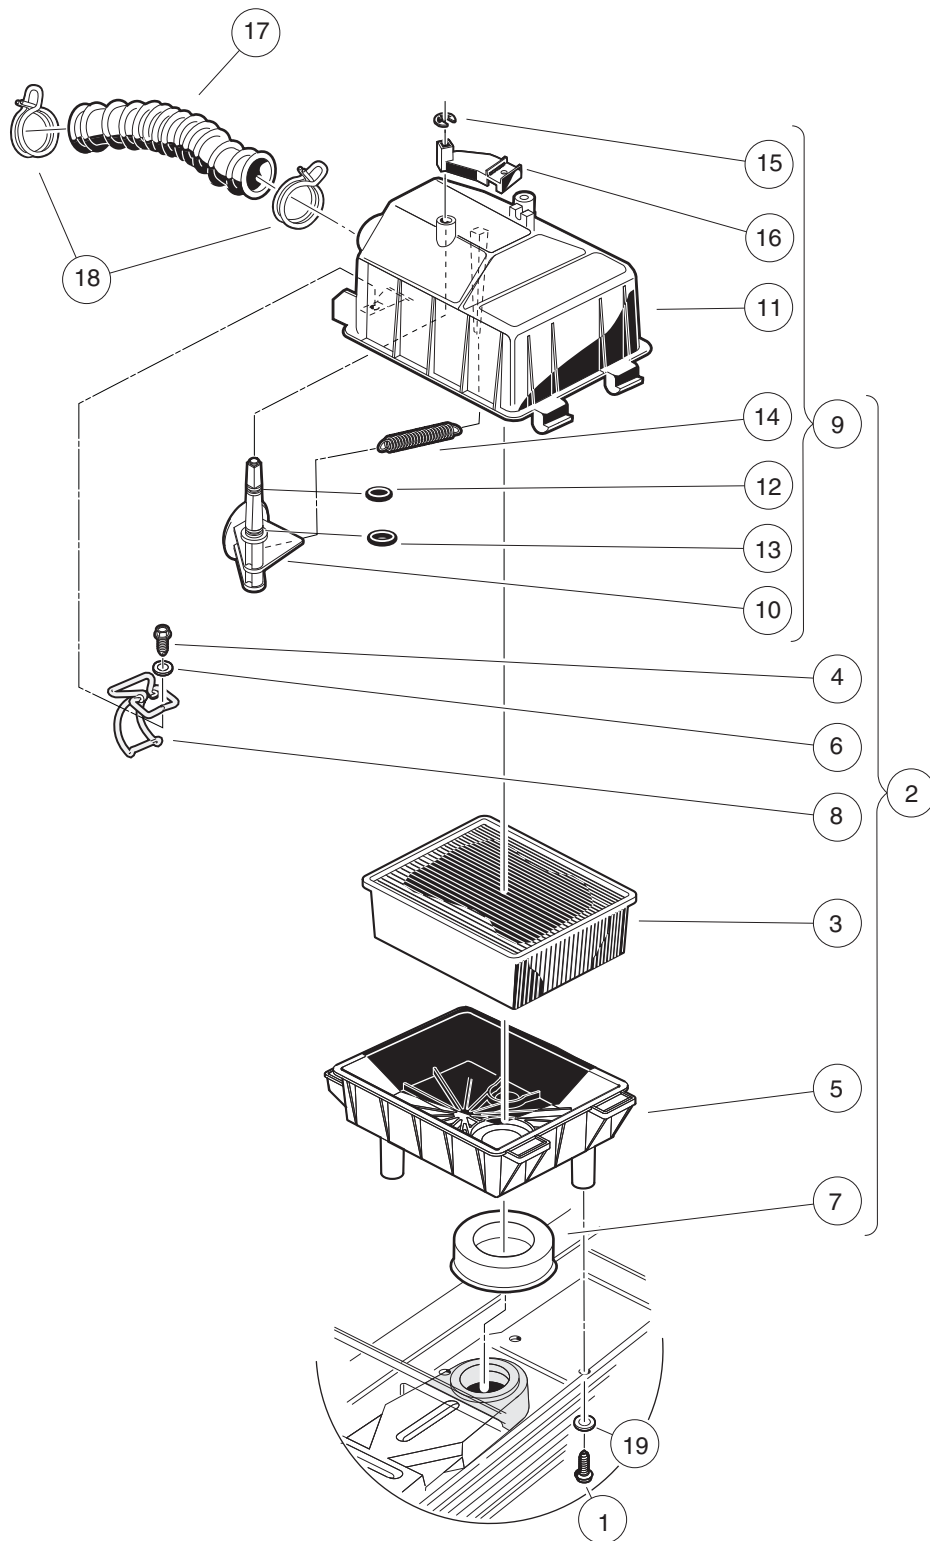

000332-001

AIR FILTER AND INTAKE HOSE


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625, Hi-Lo	3
2	<u>101821501</u>	Assembly, Air Box (includes items 3 through 9)	1
3	<u>1015426</u>	Filter, Air	1
4	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	2
5	<u>101811901</u>	Bottom, Air Box	1
6	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	2
7	<u>101921501</u>	Seal, Intake	1
8	<u>101925701</u>	Latch, Wireform	2
9	<u>101972801</u>	Top Assy, Air Box (includes items 10 through 16)	1
10	N/A	Valve, Choke	1
11	N/A	Top, Air Box	1
12	N/A	O-Ring, 5/16	1
13	N/A	O-Ring, 3/8	1
14	<u>101812301</u>	Spring, Extension Return	1
15	<u>101813001</u>	Retaining Ring 0.25, Shaft	1
16	<u>101917601</u>	Lever, Choke	1
17	<u>101837101</u>	Hose, Air Intake	1
18	<u>101971301</u>	Clamp, 1.58" ID Hose	2
19	<u>332</u>	Washer, 1/4 Type A Narrow Flat	3

11

G

11

G

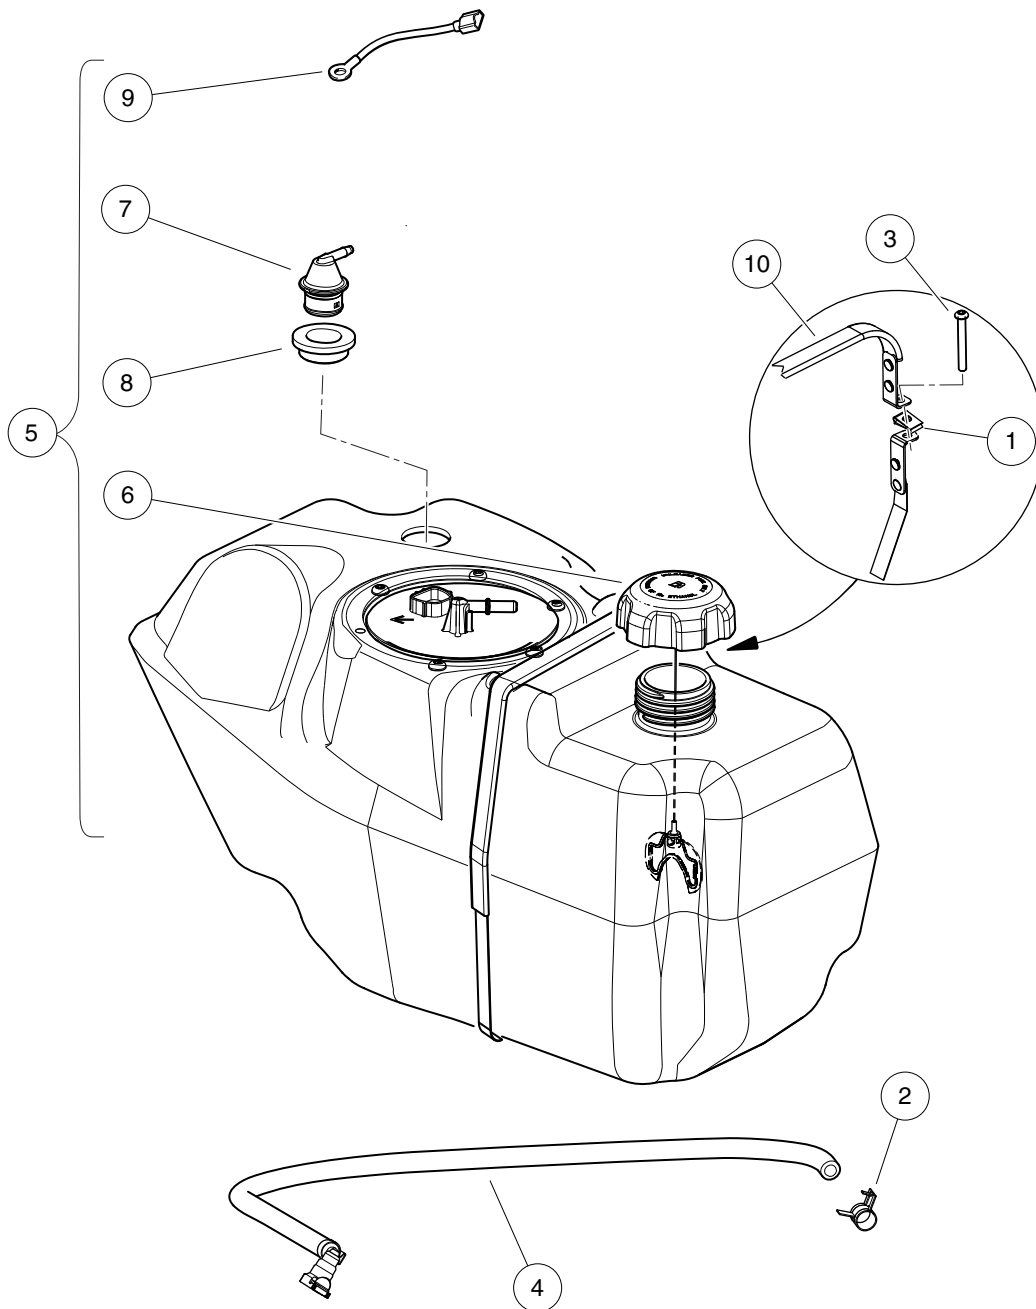


000975-004

FUEL SYSTEM WITH SENDING UNIT, TOP FILL – EFI

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014116</u>	Nut, 1/4-20 Speed	1
2	<u>102411203</u>	Clamp, Hose, Ctb 14mm Dia.	1
3	<u>103306301</u>	Screw, Bhsc, 1/4-20 X 2.0	1
4	<u>105043501</u>	Asm, Fuel Line, Utility	1
5	<u>105215401</u>	Asm, Tank, Fuel, Top, Complete, w/Sending Unit (includes items 6 through 9)	1
6	<u>103372101</u>	Cap, Fuel Tank, Gas, Ratchet	1
7	<u>103905201</u>	Assembly, Vent, Fuel, 1/4 Inch O.D.	1
8	<u>103944301</u>	Grommet, Fuel Tank, Vent	1
9	<u>105143301</u>	Wire, Ground, Fuel Tank	1
10	105245401	Strap, Tank, Utility	1


12
G

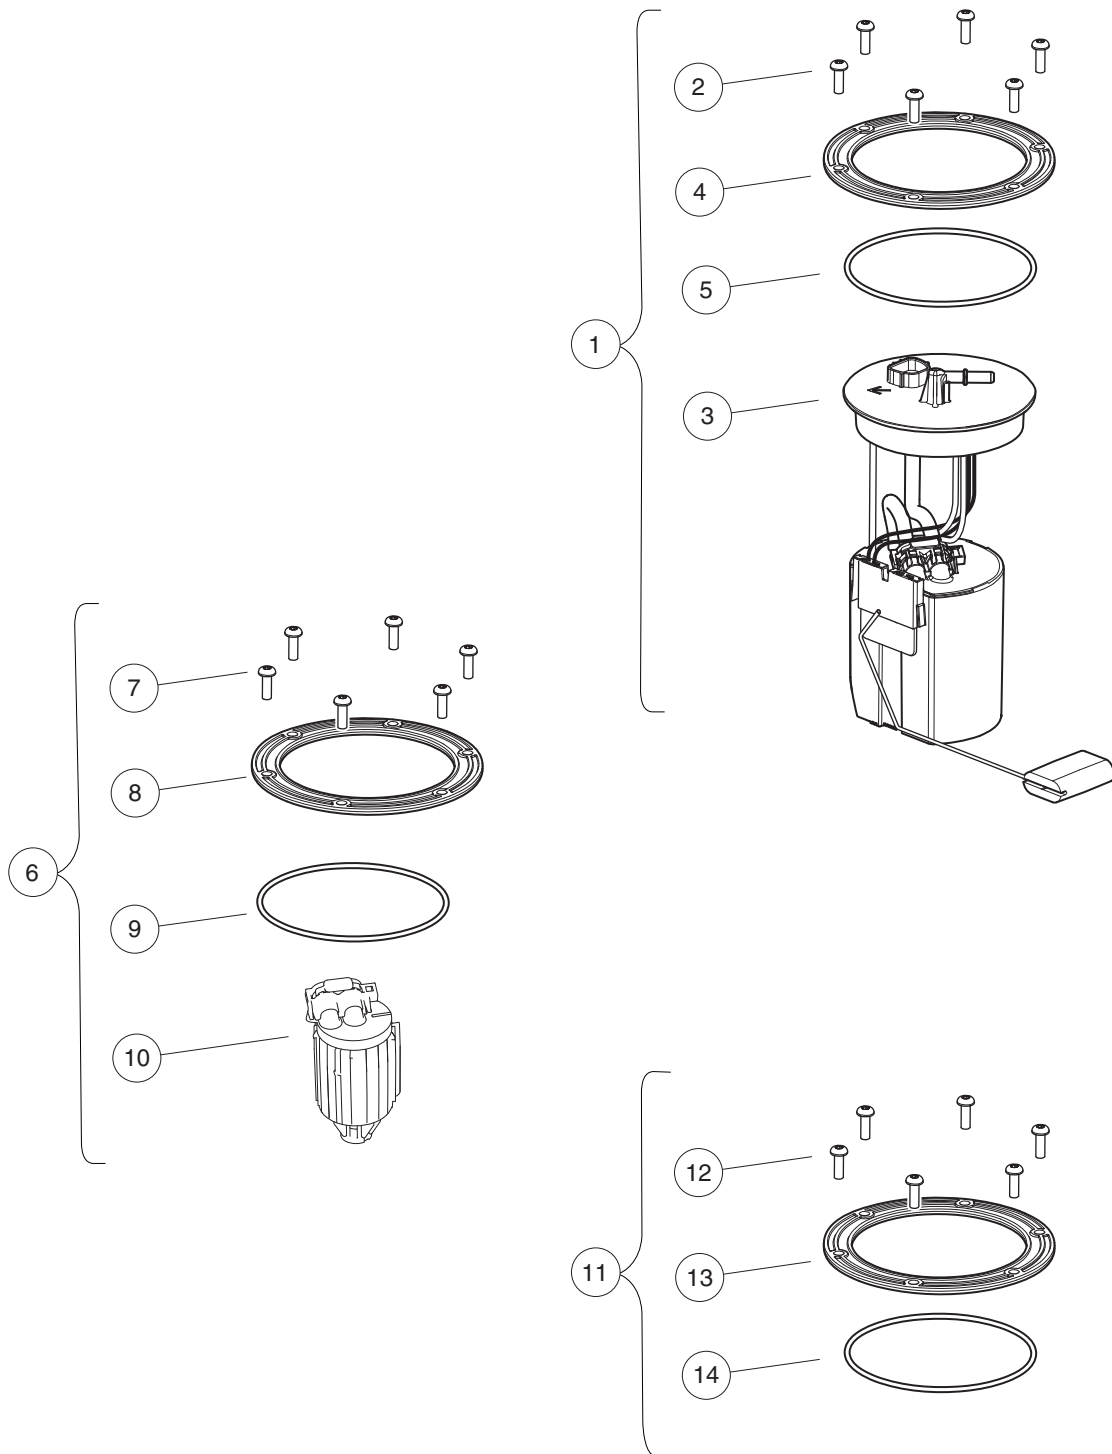

000977-005

FUEL TANK KITS – EFI

ITEM	PART NO.	DESCRIPTION	QTY	12	G
		1 2 3 4			
1	<u>105282901</u>	Kit, Fuel Pump Module (includes items 2 through 5)	1		
2	<u>102025801</u>	Screw, 1/4-20 X .75 Torx Pn Hd	6		
3	<u>105043401</u>	Fuel Pump Module, with Sending Unit	1		
4	<u>105043801</u>	Fuel Module, Hold Down Ring	1		
5	<u>105043901</u>	O-Ring, Fuel Module	1		
6	<u>105282902</u>	Kit, Fuel Filter (includes items 7 through 10)	1		
7	<u>102025801</u>	Screw, 1/4-20 X .75 Torx Pn Hd	6		
8	<u>105043801</u>	Fuel Module, Hold Down Ring	1		
9	<u>105043901</u>	O-Ring, Fuel Module	1		
10	<u>105073001</u>	Fuel Filter, EX40, EFI	1		
11	<u>105282903</u>	Kit, O-ring (includes items 12 through 14)	1		
12	<u>102025801</u>	Screw, 1/4-20 X .75 Torx Pn Hd	6		
13	<u>105043801</u>	Fuel Module, Hold Down Ring	1		
14	<u>105043901</u>	O-Ring, Fuel Module	1		

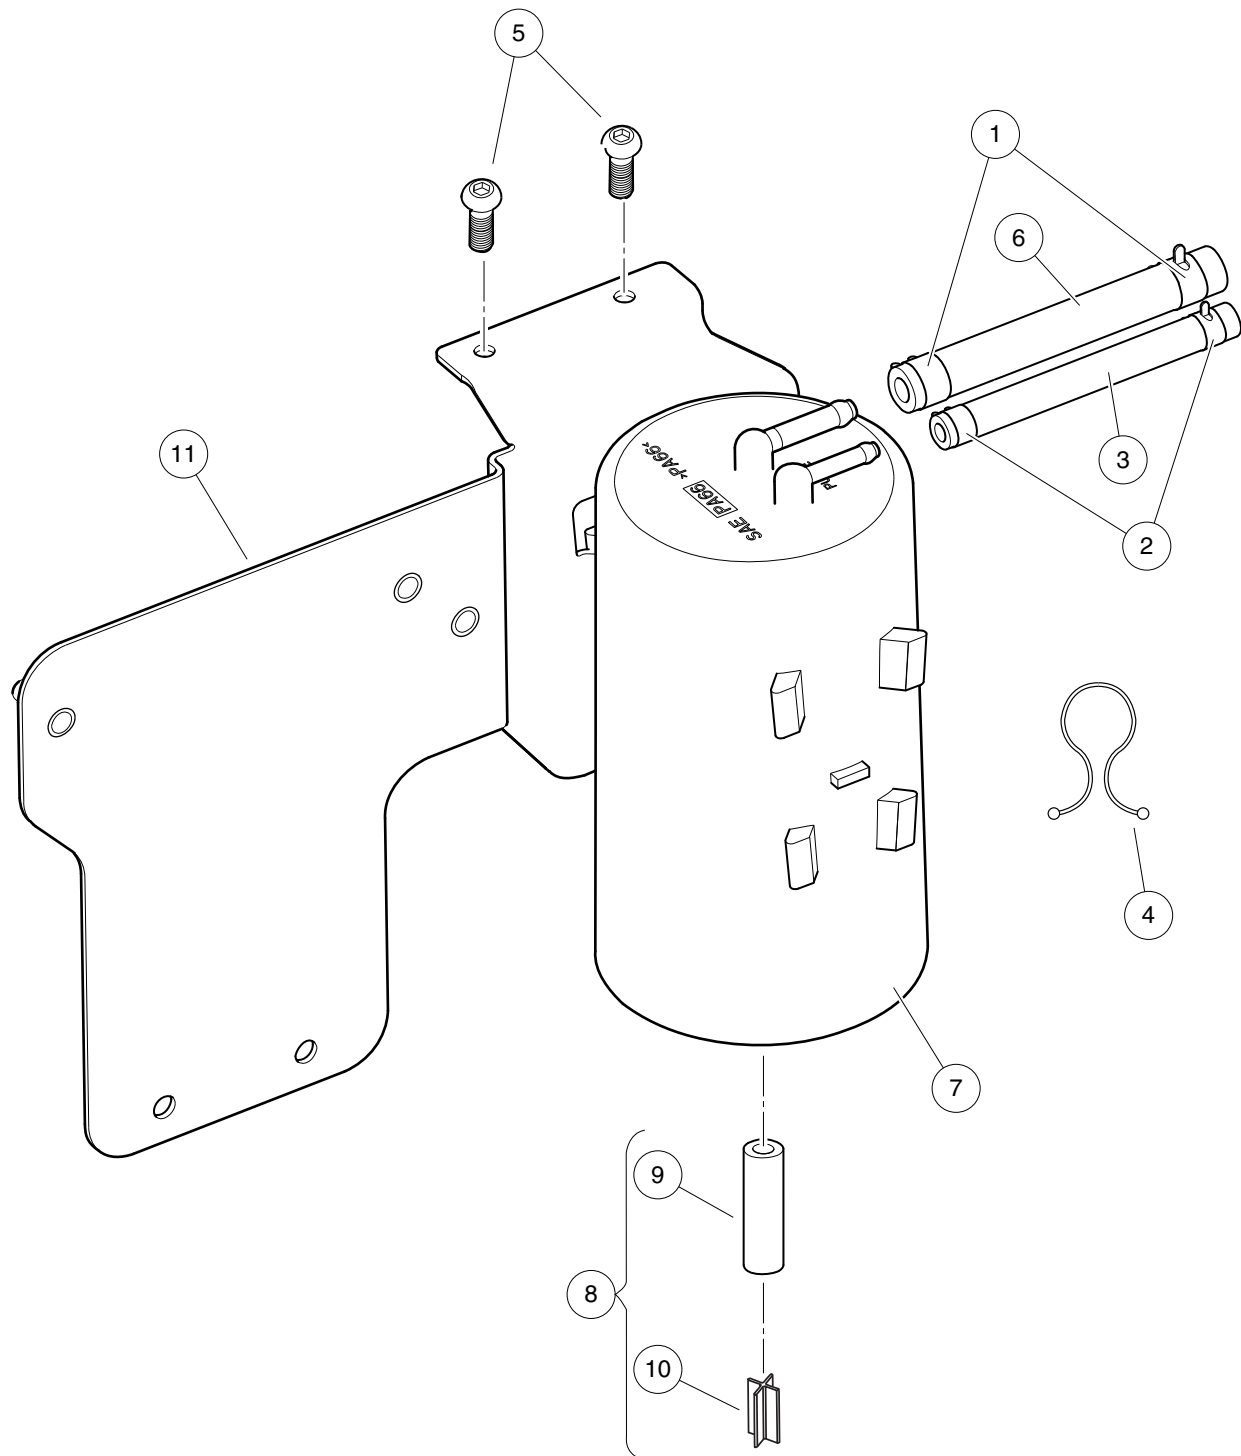


000980-006

CARBON CANISTER – EFI

ITEM	PART NO.	DESCRIPTION	QTY	12
		1 2 3 4		G
1	<u>1012649</u>	Clamp, 0.460 Red Hose	2	
2	<u>1013746</u>	Clamp, 0.301 ID Hose	2	
3	<u>1015137</u>	Fuel Line, 3/16 (available by the foot)	A/R	
4	<u>101987701</u>	Clamp, Plastic Tie	2	
5	<u>102025801</u>	Screw, 1/4-20 X .75 Torx Pn Hd	2	
6	<u>102865101</u>	Fuel Line, 1/4 (available by the foot)	A/R	
7	<u>103372401</u>	Canister, Carbon	1	
8	<u>103756401</u>	Asm, Vent Line, Carbon Canister (includes items 9 and 10)	1	
9	N/A	Hose, Vent, 5/16 I.D., Bulk	1	
10	N/A	Vent, Barb, 5/16 I.D. Hose	1	
11	<u>105044901</u>	Bracket, Carbon Canister/ECU	1	


1

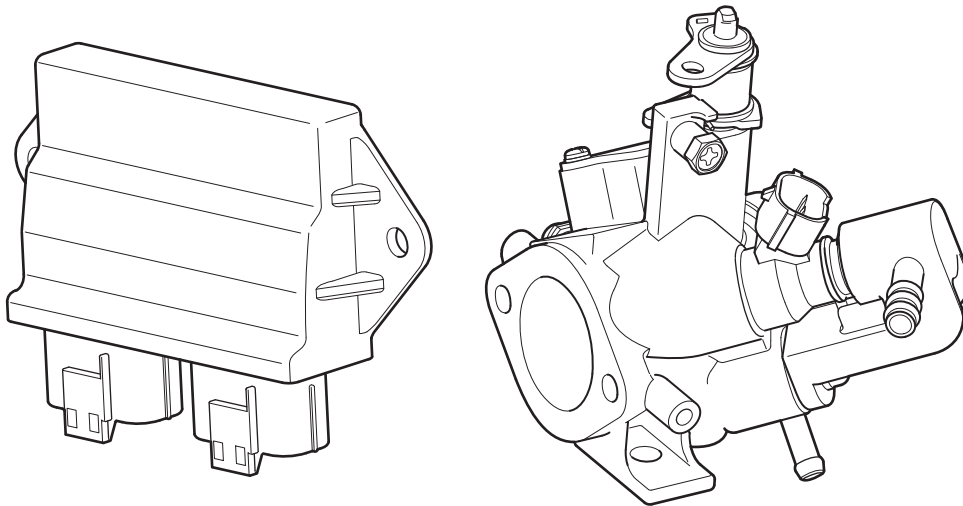

000964-001

THROTTLE BODY AND ECU – EFI


ITEM	PART NO.	DESCRIPTION	QTY	12
1	<u>105017201</u>	1 2 3 4 Asm, Throttle Body/Fuel Injector with ECU, EX40	1	G

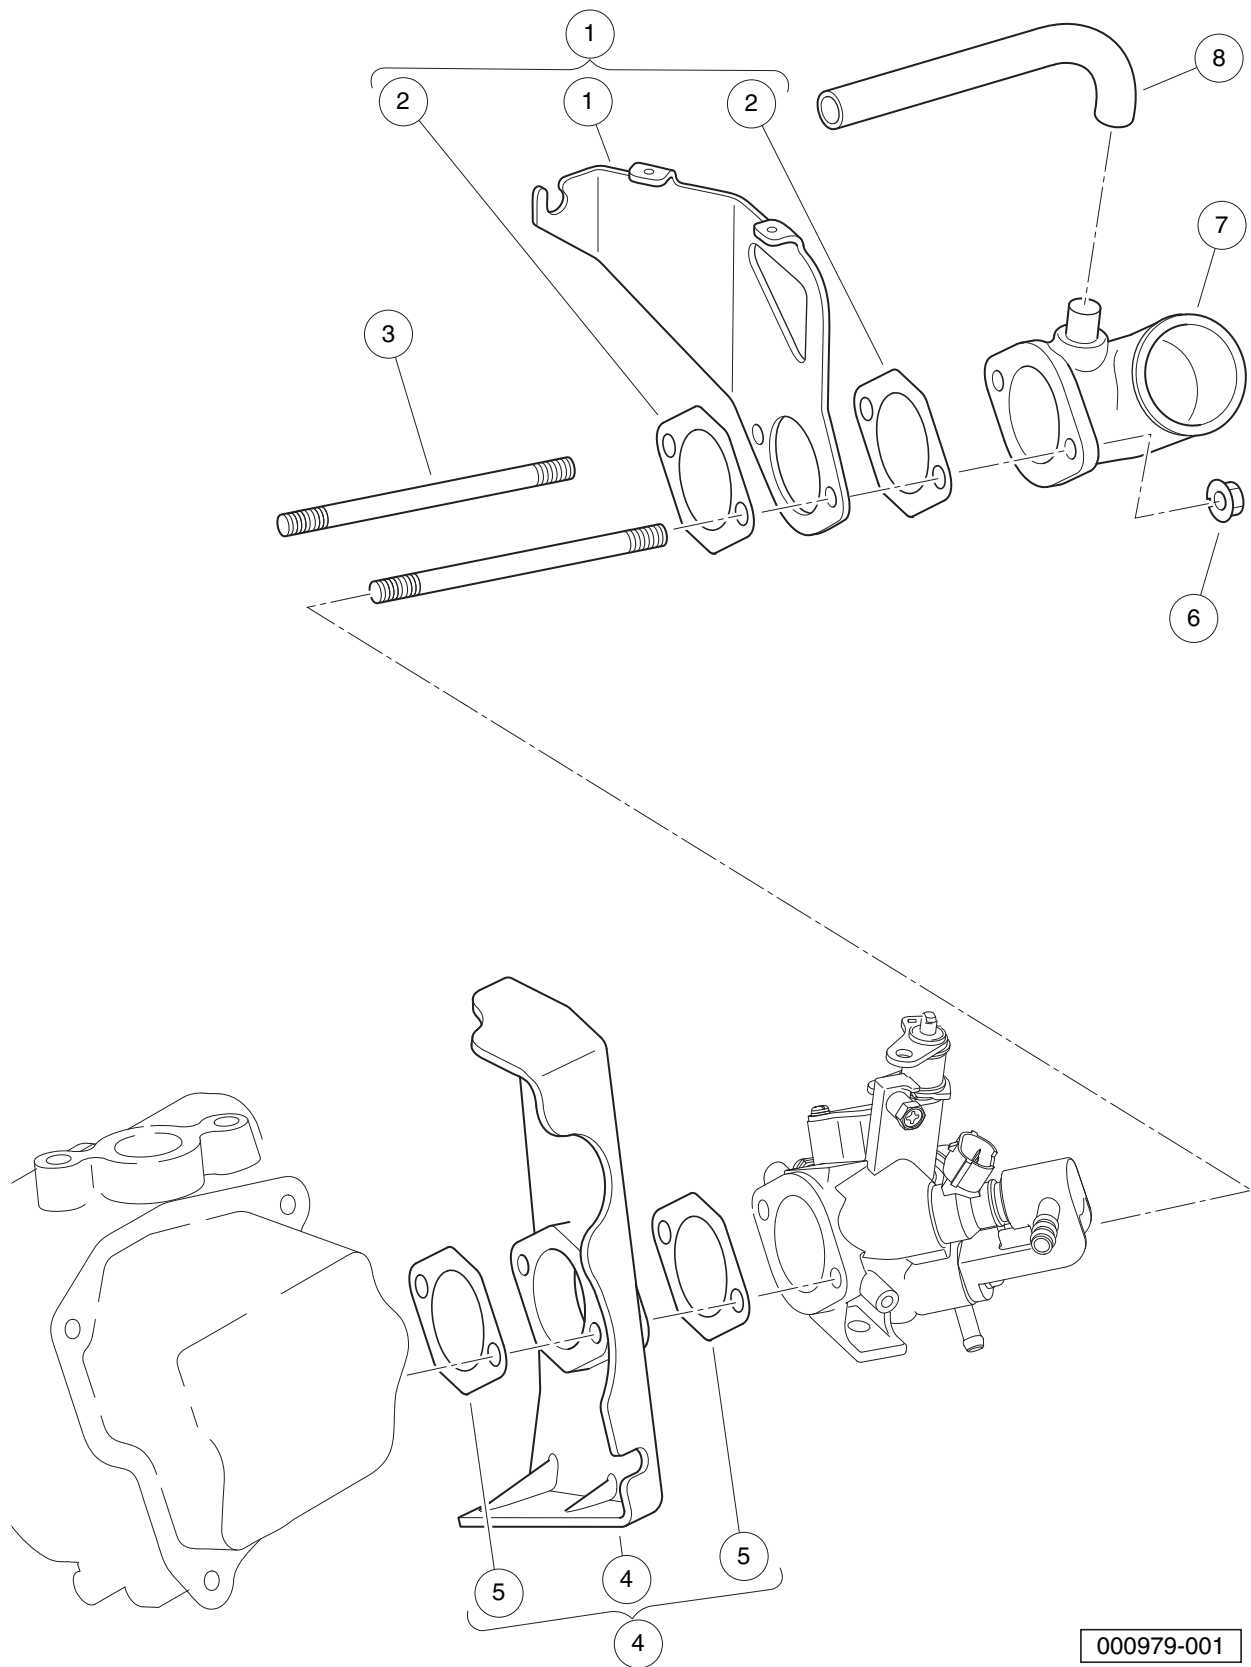

000979-001

THROTTLE BODY MOUNTING – EFI

ITEM	PART NO.	DESCRIPTION	QTY	12
		1 2 3 4		G
1	<u>103983501</u>	Bracket, Operation, EX40 (includes item 2)	1	
2	<u>105016201</u>	Gasket, Insulator, EX40	2	
3	<u>105010901</u>	Stud, Mounting, Intake, EX40	2	
4	<u>105016101</u>	Insulator, EX40 (includes item 5)	1	
5	<u>105016201</u>	Gasket, Insulator, EX40	2	
6	<u>105016301</u>	Nut, Intake Adapter, M6x1.0, EX40	2	
7	<u>105016401</u>	Adapter, Air Intake, EX40	1	
8	<u>105016501</u>	Hose, Breather, EX40	1	

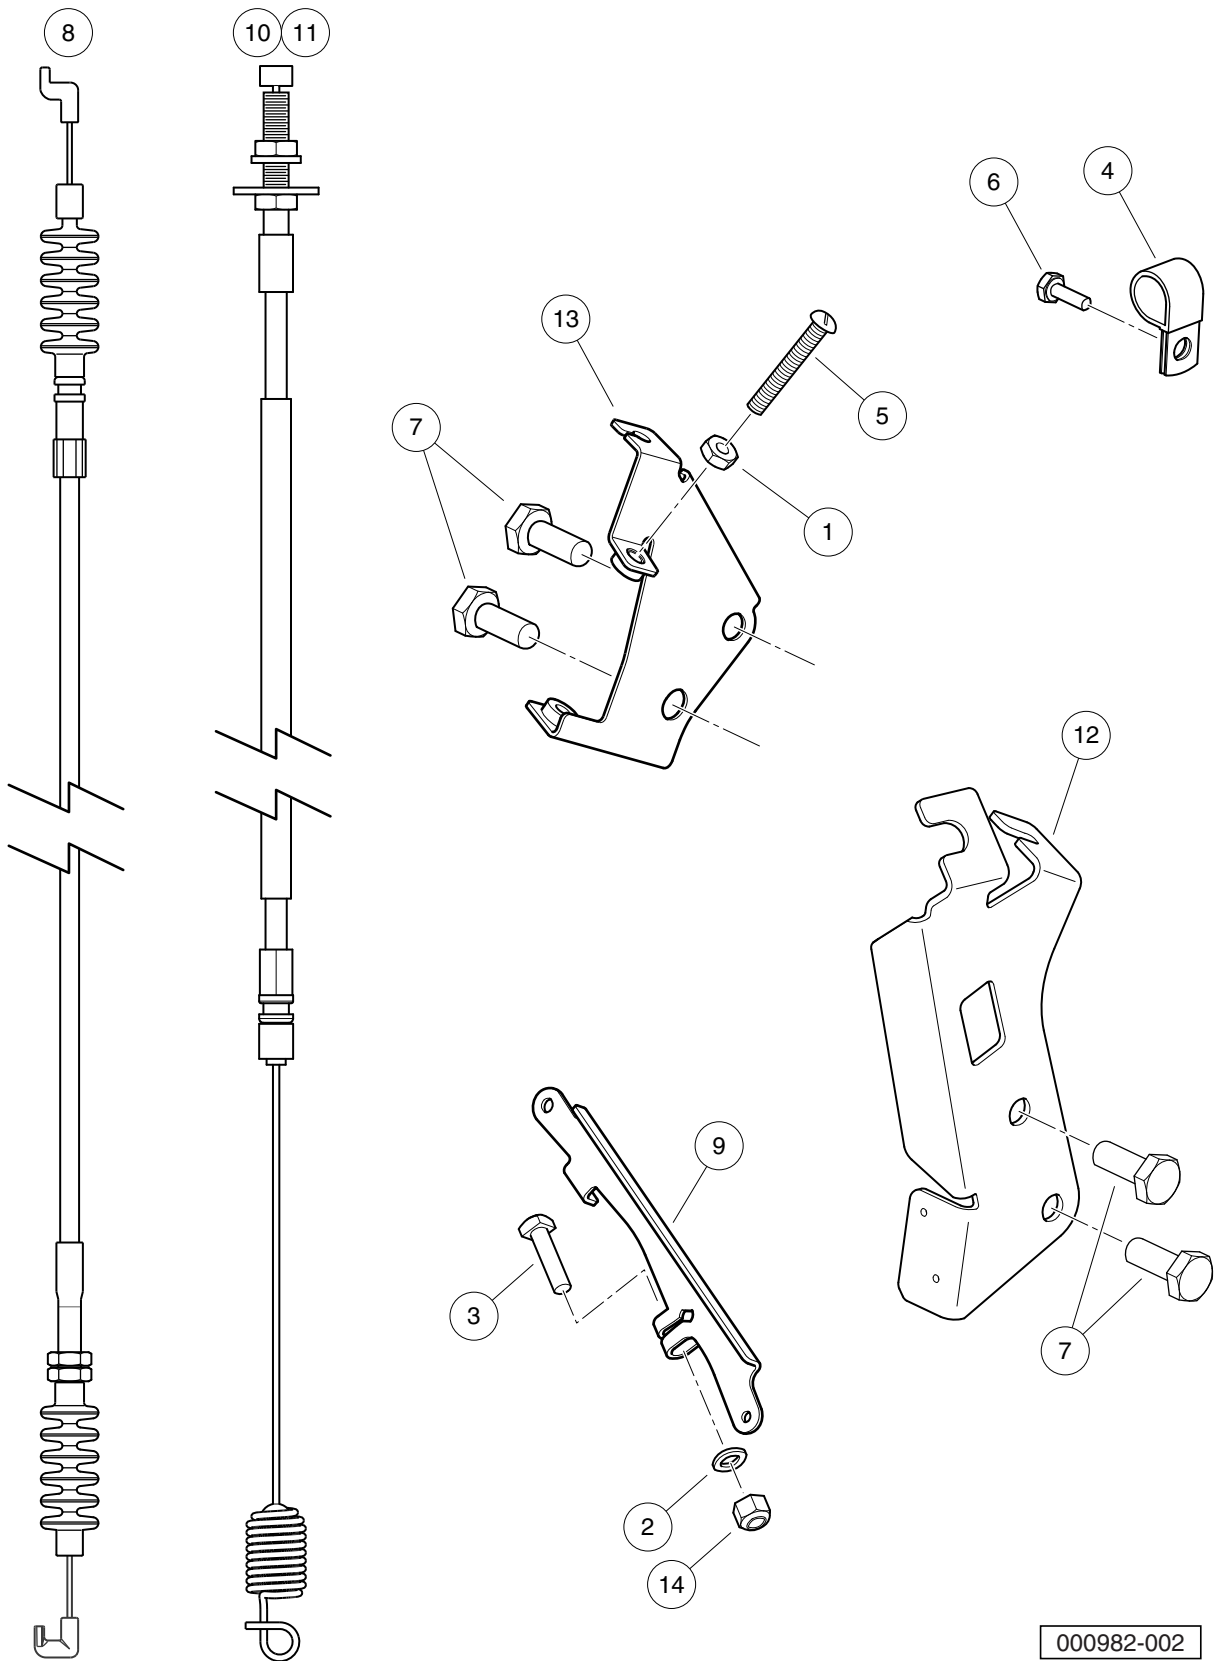


000982-002

GOVERNOR AND ACCELERATOR CABLES – EFI

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011114</u>	Nut, M6-1.00 Hex	1
2	<u>1014007</u>	Washer, 1/4, Flat	1
3	<u>101886101</u>	Screw, 1/4-20 X 1.00, Square-Head	1
4	<u>102410604</u>	P-clamp, Insulated, 0.625 Inch	1
5	<u>102476401</u>	Bolt, Stop, Pedal	1
6	<u>102490301</u>	Bolt, M6 X 1 X 16, Loctite	1
7	<u>102498201</u>	Bolt, M10 X 1.25 X 25, Loctite	4
8	<u>103978001</u>	Cable, Governor, EX40	1
9	<u>104023501</u>	Arm, Governor, ED65	1
10	<u>105007402</u>	Cable, Accelerator, Utility, Low-Speed	1
11	<u>105007403</u>	Cable, Accelerator, Utility, Std-Speed	1
12	<u>105135101</u>	Bracket, Cable, FNR/Accelerator, ED65	1
13	<u>105144401</u>	Weldment, Governor Bracket	1
14	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	1

12
G

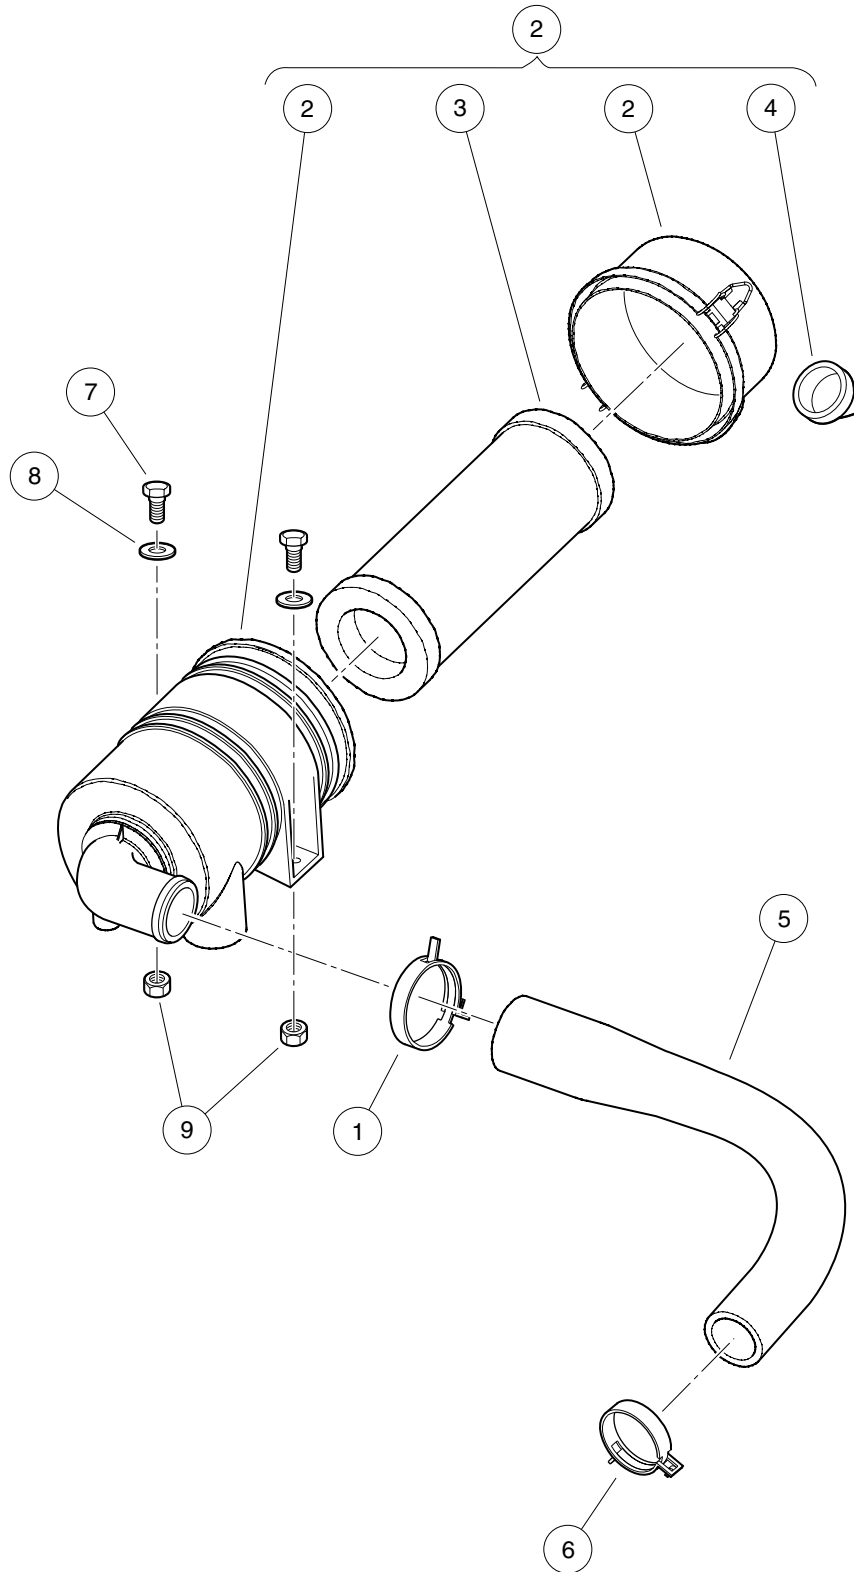

000984-001

AIR FILTER SYSTEM AND INTAKE HOSE – EFI, LWB UTILITY/ TRANS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102411209</u>	Clamp, Hose, Ctb 55mm Dia.	1
2	<u>105009101</u>	Air Cleaner, Utility with EFI (includes items 3 and 4)	1
3	<u>102558201</u>	Air Filter, 4 Inch	1
4	<u>102725501</u>	Valve, Evacuator, Filter Air	1
5	<u>105009401</u>	Hose, Air Intake, LWB Utility with EFI	1
6	<u>105088501</u>	Clamp, Ctb, 49mm Dia, W/clip	1
7	1218	Screw, 5/16-18 X 1.25 Hex-Head Cap	2
8	<u>1241</u>	Washer, 5/16 Type A Flat	2
9	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2

12

G


12

G

EXHAUST SYSTEM

13

G

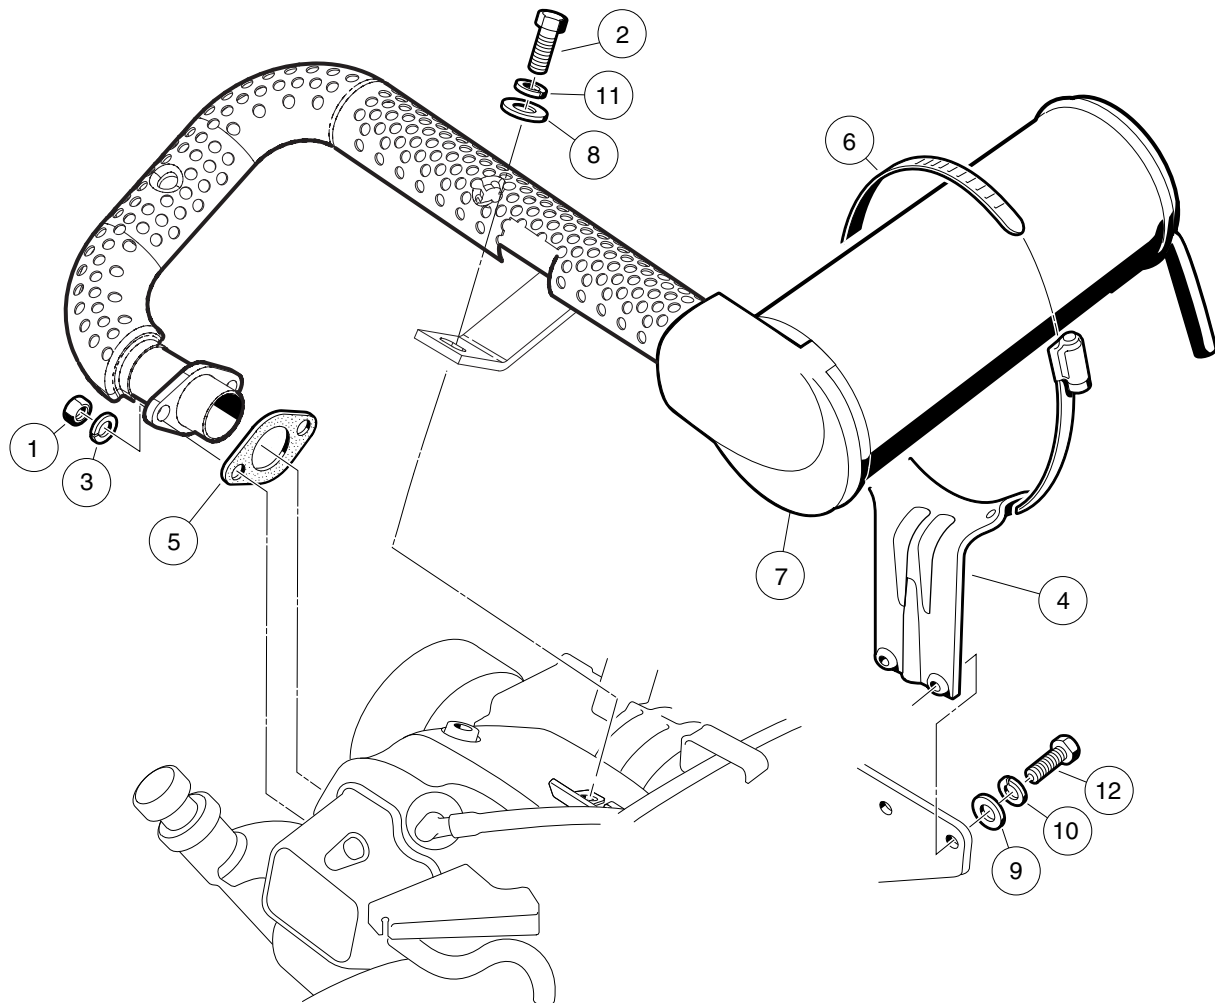

000491-001

EXHAUST SYSTEM – FE350 (ALL)

ITEM	PART NO.	DESCRIPTION	QTY	13
		1 2 3 4		G
1	<u>1012528</u>	Nut, M8-1.25 Hex	2	
2	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	1	
3	<u>1013734</u>	Lockwasher, 8mm Split	2	
4	<u>1015814</u>	Bracket, Muffler Mounting	1	
5	<u>1016904</u>	Gasket, Exhaust	1	
6	<u>1017689</u>	Clamp, 5" Muffler Hose	1	
7	<u>102585901</u>	Exhaust System, FE350, Precedent	1	
8	<u>1241</u>	Washer, 5/16 Type A Flat	1	
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2	
10	<u>451</u>	Lockwasher, 1/4 Split	2	
11	<u>7174</u>	Lockwasher, 5/16 Split	1	
12	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2	
Note: This exhaust system also used in select utility vehicles at late-2012 model year.				


13

G

EXHAUST SYSTEM, UTILITY – EX40 ENGINE

14

G

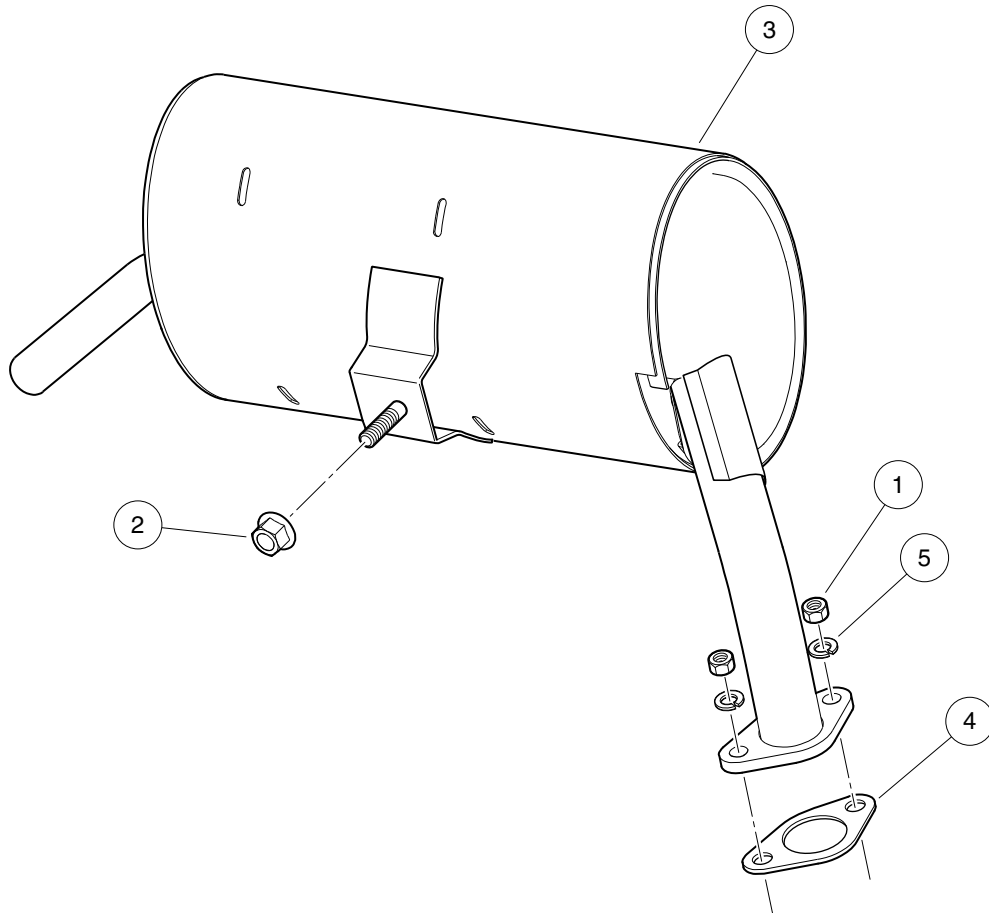

000948-001


EXHAUST SYSTEM – UTILITY

ITEM	PART NO.	DESCRIPTION	QTY	14
		1 2 3 4		G
1	<u>1012528</u>	Nut, M8-1.25 Hex	2	
2	<u>102617201</u>	Nut, Flanged, M10 X 1.5, Mechanically Deformed	1	
3	<u>103980001</u>	Exhaust System, EX40	1	
4	<u>103993601</u>	Gasket, Exhaust, EX40	1	
5	<u>7174</u>	Lockwasher, 5/16 Split	2	

DRIVE BELT AND CLUTCHES – CARBURETED GASOLINE VEHICLES

15


G

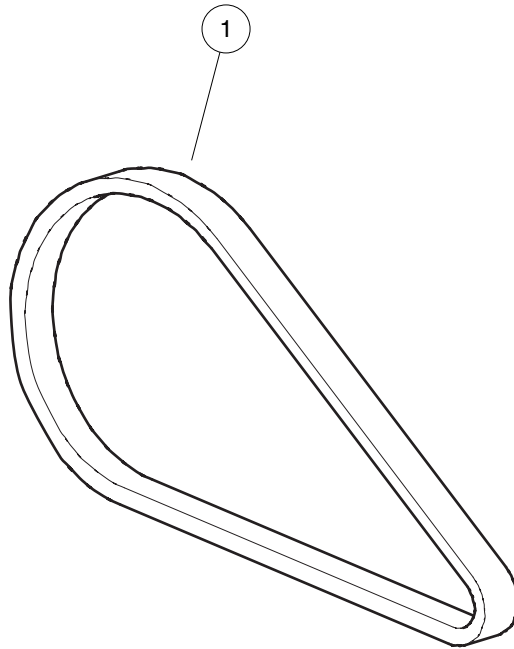

000918-001

DRIVE BELT

ITEM	PART NO.	DESCRIPTION	QTY	15
1	<u>1017188</u>	1 2 3 4 Belt, Drive (FE350)	1	G

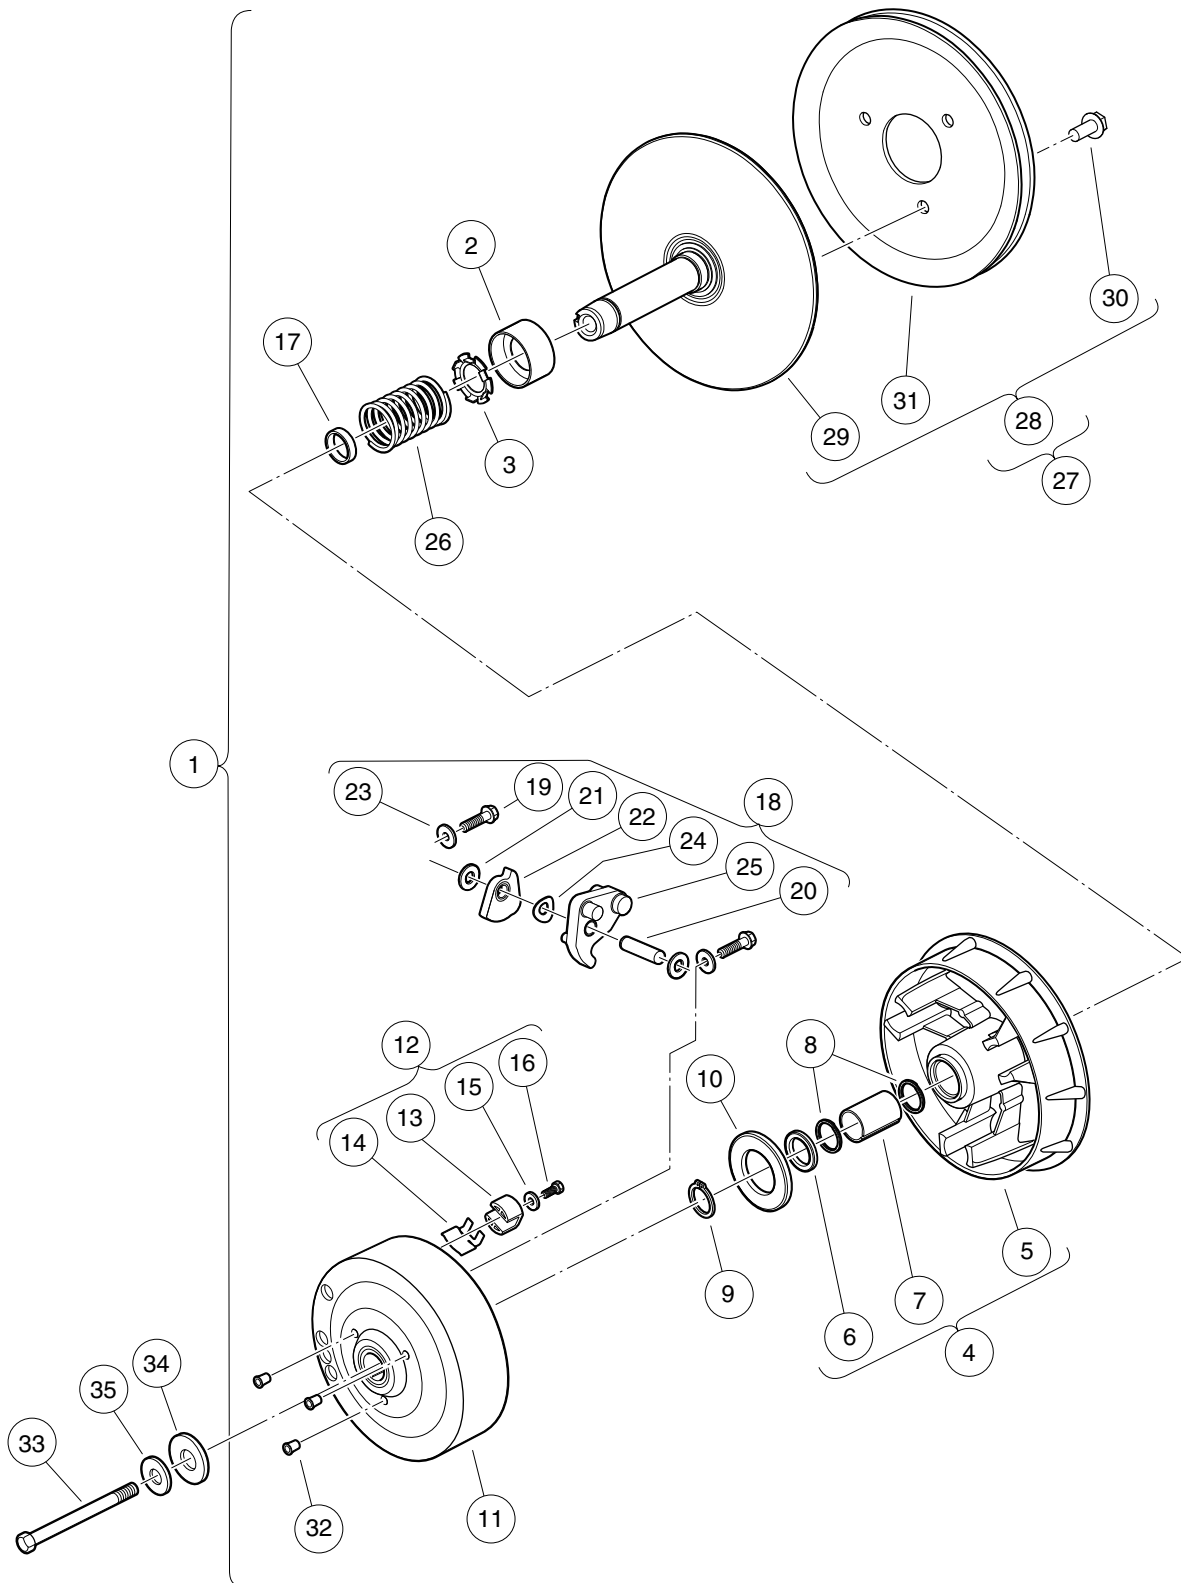


000217-007

DRIVE CLUTCH – CARRYALL 2 PLUS AND VILLAGER 6/8

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101833904</u>	Assembly, Drive Clutch (includes items 2 through 32)	1
2	<u>1014049</u>	Bearing, Idler	1
3	<u>1014050</u>	Retainer, Spring	1
4	<u>1014052</u>	Movable-Face Assembly (includes items 5 through 7)	1
5	N/A	Drive Clutch Movable Face	1
6	<u>1014055</u>	Retainer	1
7	N/A	Bushing, Split, Drive Clutch	1
8	<u>1014056</u>	Ring, Spiral Backup	2
9	<u>1014057</u>	Ring, 0.810" Internal Retaining	1
10	<u>1014058</u>	Thrust Washer	1
11	<u>1014059</u>	Drive Hub Assy, Drive Clutch	1
12	<u>1014453</u>	Kit, Drive Clutch Button (includes items 13 through 16)	1
13	<u>1014062</u>	Driver, Drive Clutch	3
14	<u>1014287</u>	Spring, Drive Button	3
15	<u>183</u>	Washer, #10, Type A, Flat	3
16	<u>8450</u>	Screw, #10-24 X 0.50, Hex-Head	3
17	<u>1016289</u>	Spacer, Fixed Face Shaft	1
18	<u>1016801</u>	Kit, Drive Clutch Weight (includes items 19 through 25)	1
19	<u>1014063</u>	Screw, 1/4-20 X 1.00, Hex Head	6
20	N/A	Pin, Dowel, 0.3752 x 1.50	3
21	<u>1014065</u>	Washer, Flat, 0.38" ID, Delrin	6
22	N/A	Clutch Weight, Secondary	3
23	N/A	Washer	6
24	<u>1016201</u>	Washer, Wave	3
25	N/A	Weight, Primary	3
26	<u>1016901</u>	Spring, Drive Clutch	1
27	<u>101738302</u>	Kit, Fixed Face - Drive (includes item 28)	1
28	<u>101738301</u>	Fixed Face Drive (includes items 29 through 31)	1
29	N/A	Fixed Face Assembly, Drive Clutch	1
30	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	3
31	<u>1016011</u>	Pulley, Drive Clutch	1
32	N/A	Cap Plug	3
33	<u>103345701</u>	Screw 3/8-24x5.5 Hex Loc Ptch	1
34	<u>334</u>	Washer, 3/8, Type A, Flat	1
35	<u>808</u>	Washer, 3/8 Type B Flat	1

15

G

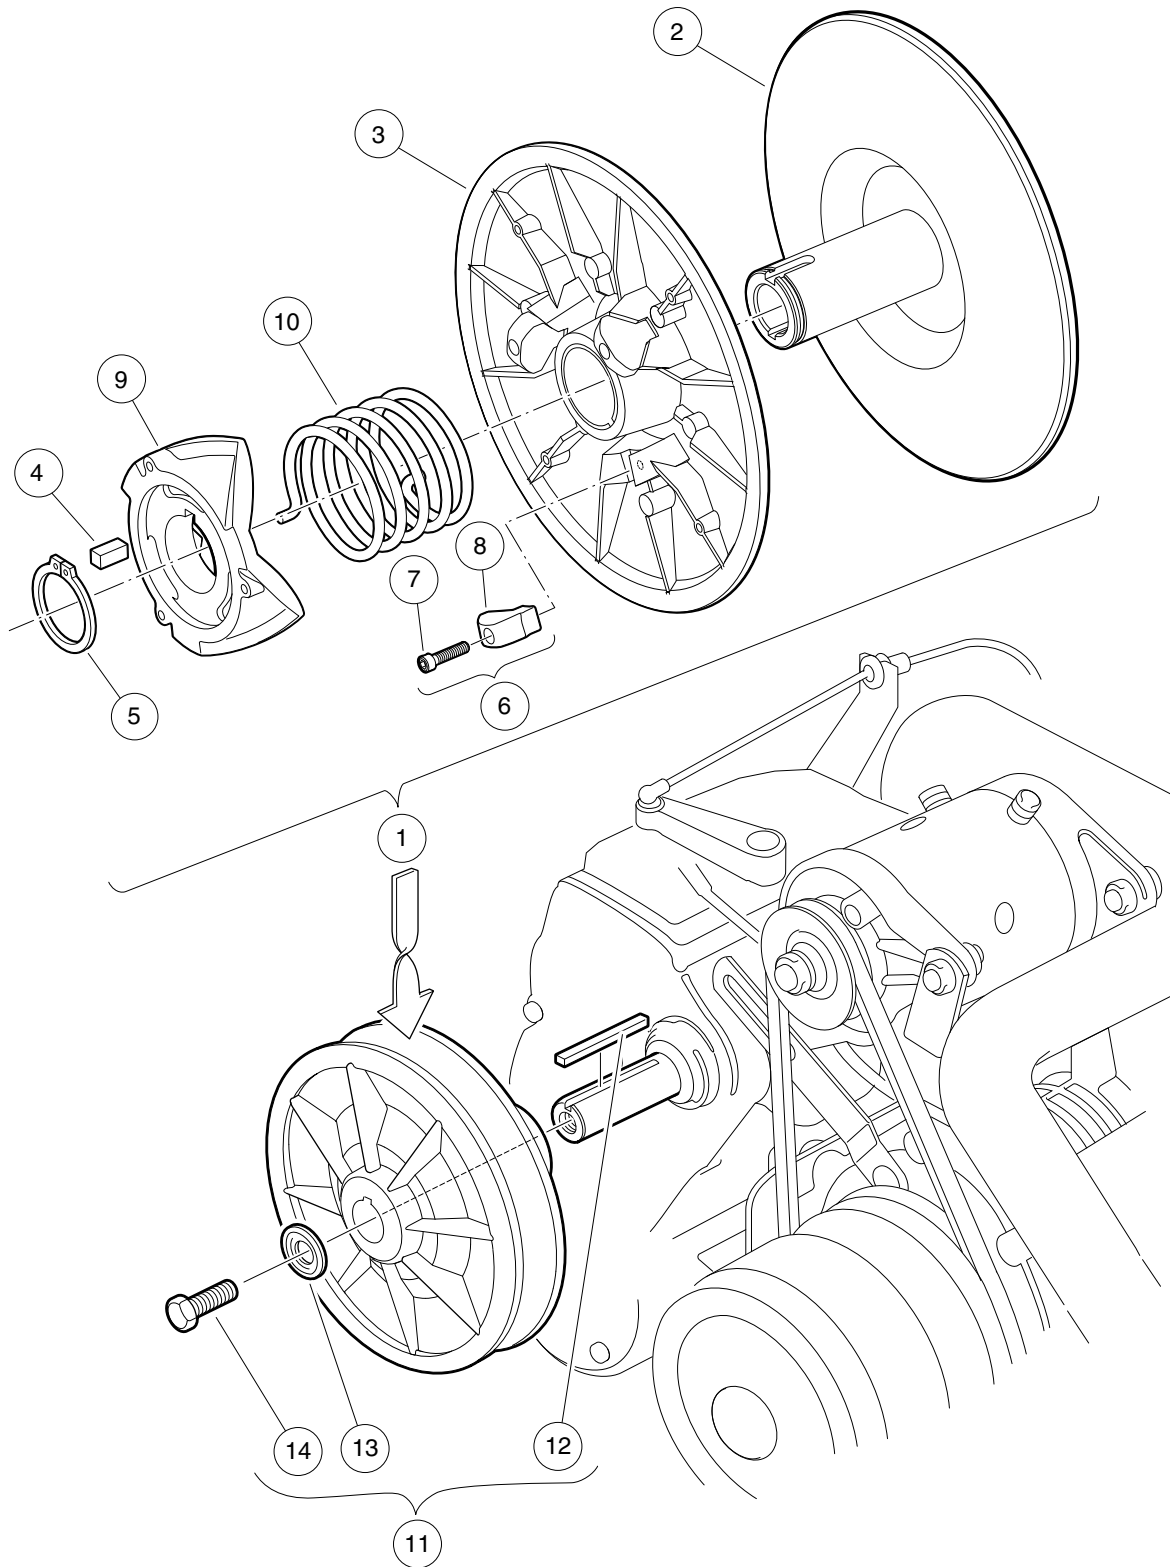

000219-001

DRIVEN CLUTCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101834001</u>	Assembly, Driven Clutch (includes items 2 through 10)	1
2	<u>1014070</u>	Fixed Face Assy, Driven Clutch	1
3	<u>1014072</u>	Movable-Face Assembly with Bushing	1
4	<u>1014078</u>	Key, Driven Clutch	1
5	<u>1014080</u>	Ring, Retaining	1
6	<u>1014454</u>	Kit, Driven Clutch Button (includes items 7 and 8)	1
7	<u>1012836</u>	Screw, #8-32 X 3/4, Socket-Head Cap	3
8	N/A	Button, Drive	3
9	<u>1017686</u>	Cam, Driven Clutch	1
10	<u>101836201</u>	Spring, Driven Clutch, Reversed	1
11	<u>AM10419</u>	Kit, Clutch Repair (includes items 12 through 14)	1
12	<u>101833401</u>	Key, 3/16 Sq X 1.50"	1
13	<u>102155801</u>	Washer, Driven Clutch	1
14	<u>102242101</u>	Screw, 5/16-18 X 3/4 Hex-Head with Patch	1

15

G


15

G

DRIVE BELT AND CLUTCHES – EFI GASOLINE VEHICLES

16

G

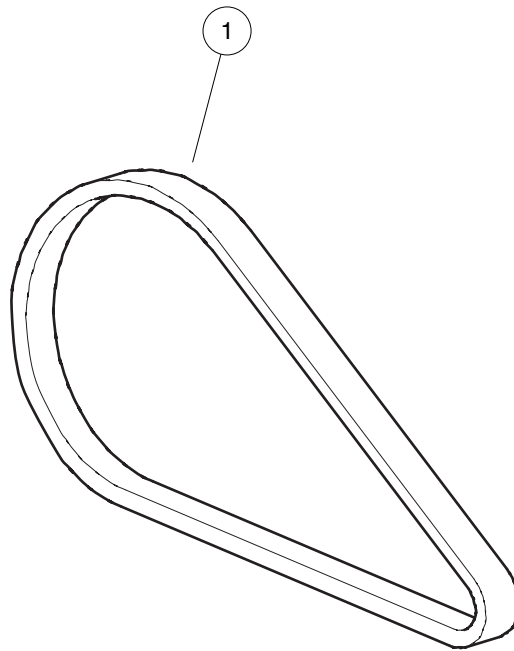


000918-001

DRIVE BELT – KEY-START VEHICLES WITH EFI

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>103974102</u>	1 2 3 4 Belt, Drive, Key-Start	1

16

G

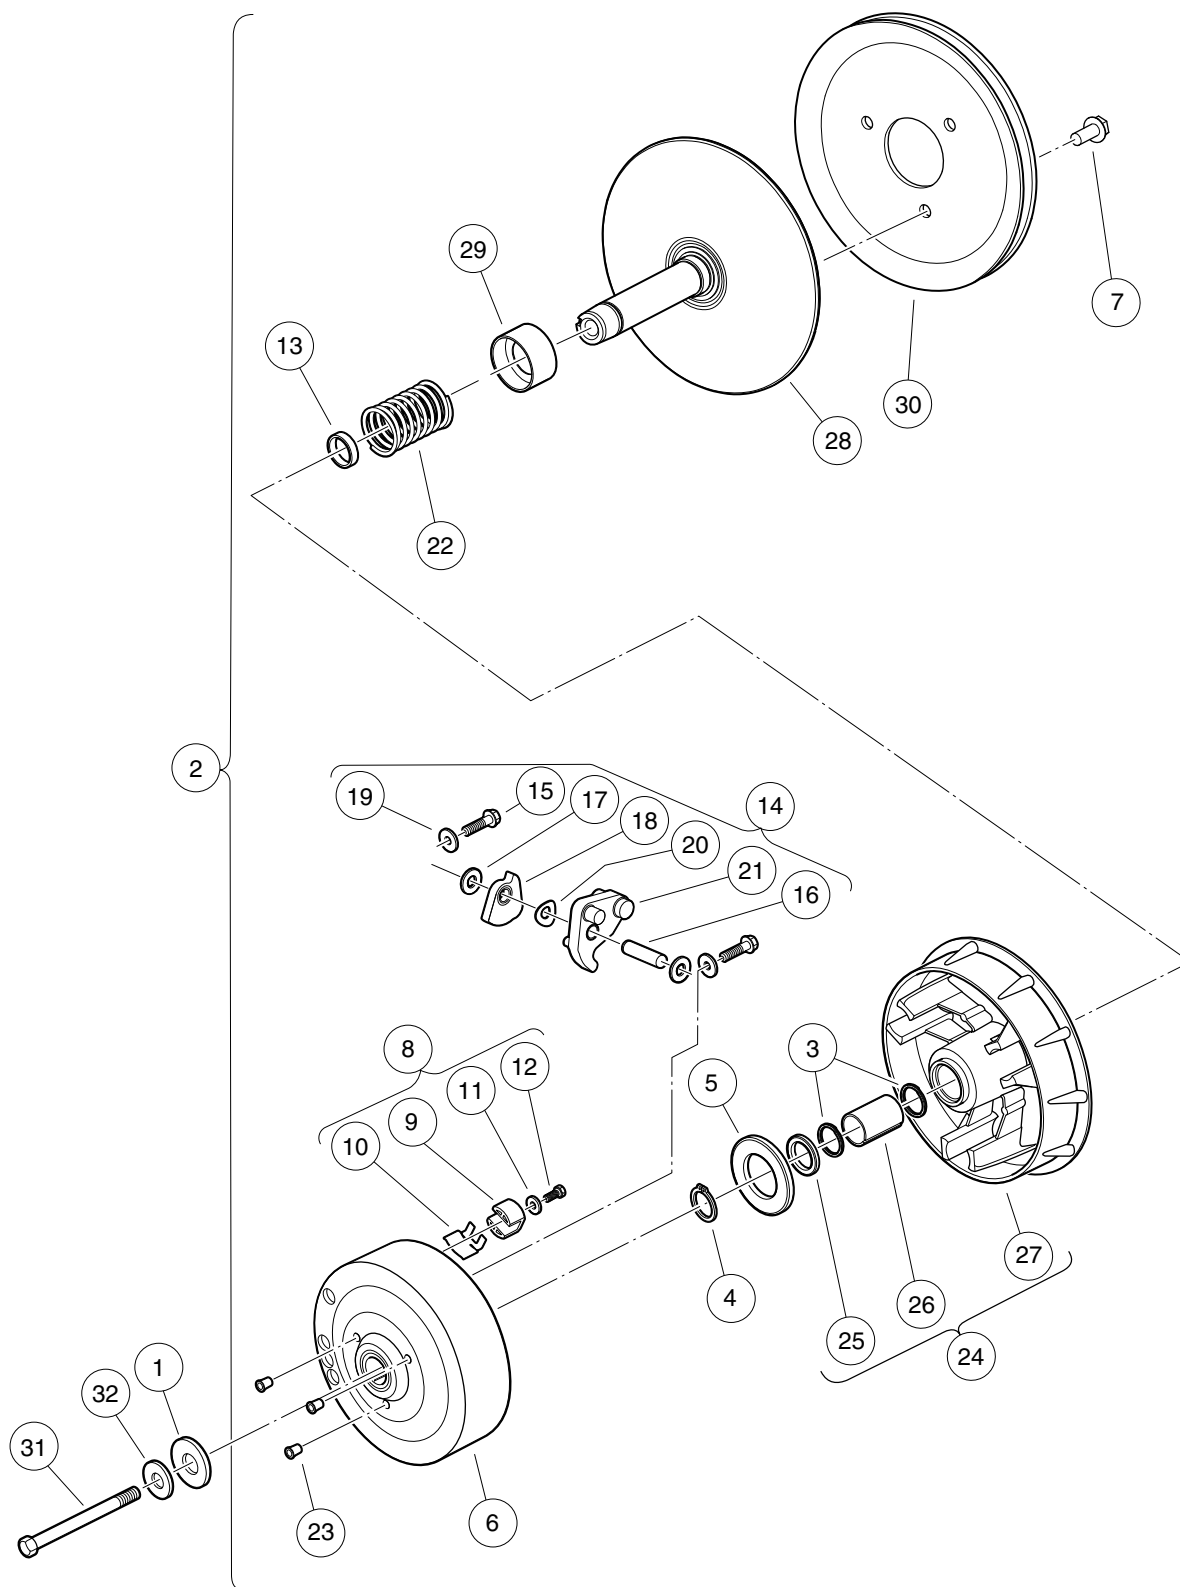


000958-002

DRIVE CLUTCH – KEY-START VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102491501</u>	Washer, Hard, M10	1
2	<u>103973902</u>	Clutch, Drive, Key-Start (includes items 3 through 30)	1
3	<u>1014056</u>	Ring, Spiral Backup	2
4	<u>1014057</u>	Ring, 0.810" Internal Retaining	1
5	<u>1014058</u>	Thrust Washer	1
6	<u>1014059</u>	Drive Hub Assy, Drive Clutch	1
7	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	3
8	<u>1014453</u>	Kit, Drive Clutch Button (includes items 9 through 12)	1
9	<u>1014062</u>	Driver, Drive Clutch	3
10	<u>1014287</u>	Spring, Drive Button	3
11	<u>183</u>	Washer, #10, Type A, Flat	3
12	<u>8450</u>	Screw, #10-24 X 0.50, Hex-Head	3
13	<u>1016289</u>	Spacer, Fixed Face Shaft	1
14	<u>1016801</u>	Kit, Drive Clutch Weight (includes items 15 through 21)	1
15	<u>1014063</u>	Screw, 1/4-20 X 1.00, Hex Head	6
16	N/A	Pin, Dowel, 0.3752 x 1.50	3
17	<u>1014065</u>	Washer, Flat, 0.38" ID, Delrin	6
18	N/A	Clutch Weight, Secondary	3
19	N/A	Washer	6
20	<u>1016201</u>	Washer, Wave	3
21	N/A	Weight, Primary	3
22	<u>1016901</u>	Spring, Drive Clutch	1
23	N/A	Cap Plug	3
24	<u>103974201</u>	Asm, Sheave, Moveable, Drive, Wr (includes items 25 through 27)	1
25	<u>1014055</u>	Retainer	1
26	N/A	Bushing, Split, Drive Clutch	1
27	N/A	Sheave, Moveable, Drive, Wr	1
28	<u>103974401</u>	Sheave, Fixed, Drive, Wr	1
29	<u>103984601</u>	Spacer, Idler, Drive	1
30	<u>105096101</u>	Pulley, 7.3 Inch Effective Dia	1
31	<u>103976101</u>	Screw, 3/8-24x5.75, Patch	1
32	<u>334</u>	Washer, 3/8, Type A, Flat	1

16

G

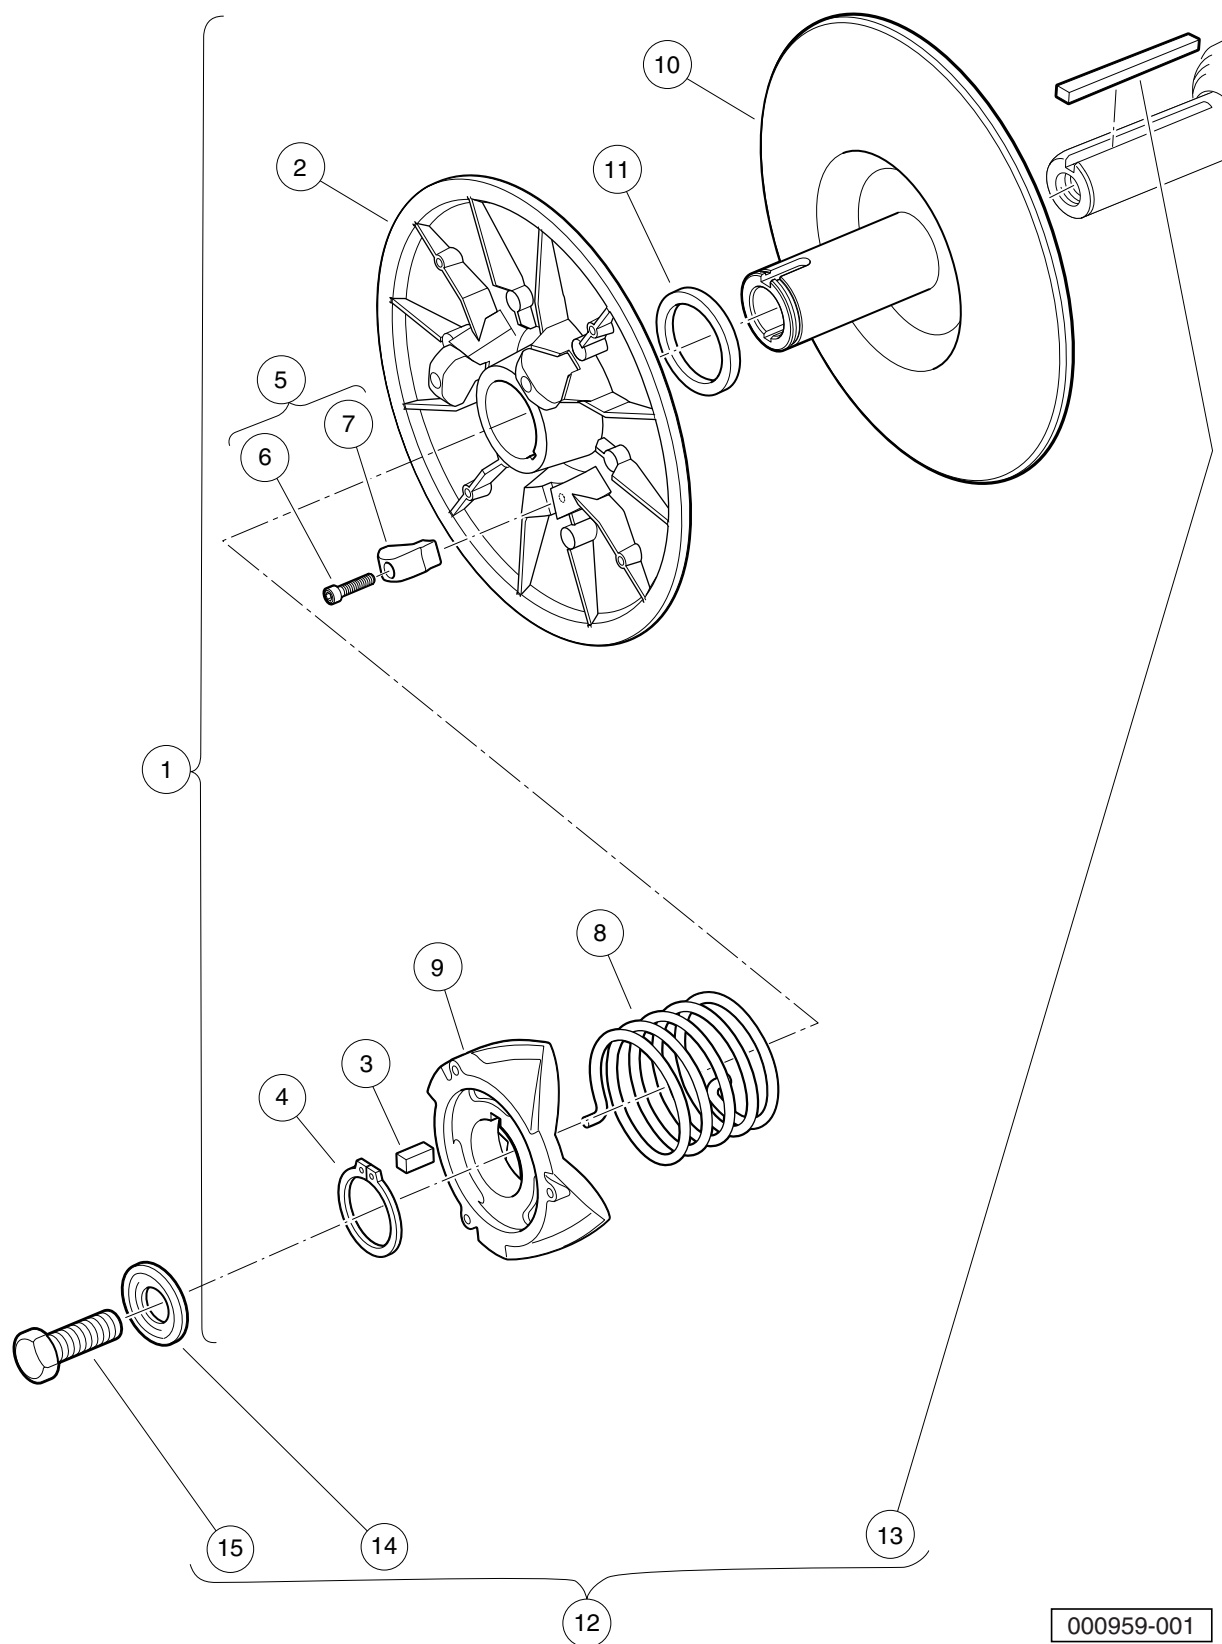

000959-001

DRIVEN CLUTCH (STANDARD SPEED) – KEY START AND PEDAL START

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103974002</u>	Clutch, Driven, Std-Speed, Key and Pedal Start (includes items 2 through 11)	1
2	<u>1014072</u>	Movable-Face Assembly with Bushing	1
3	<u>1014078</u>	Key, Driven Clutch	1
4	<u>1014080</u>	Ring, Retaining	1
5	<u>1014454</u>	Kit, Driven Clutch Button (includes items 6 and 7)	1
6	<u>1012836</u>	Screw, #8-32 X 3/4, Socket-Head Cap	3
7	N/A	Button, Drive	3
8	<u>1017145</u>	Spring, Driven Clutch, 55 Degree	1
9	<u>1017686</u>	Cam, Driven Clutch	1
10	<u>103975301</u>	Sheave, Fixed, Driven, Wr	1
11	<u>104025101</u>	Washer, Acetal, Driven Clutch	1
12	<u>AM10419</u>	Kit, Clutch Repair (includes items 13 through 15)	1
13	<u>101833401</u>	Key, 3/16 Sq X 1.50"	1
14	<u>102155801</u>	Washer, Driven Clutch	1
15	<u>102242101</u>	Screw, 5/16-18 X 3/4 Hex-Head with Patch	1


16

G

UNITIZED TRANSAXLE – CARBURETED GASOLINE VEHICLES

17

G

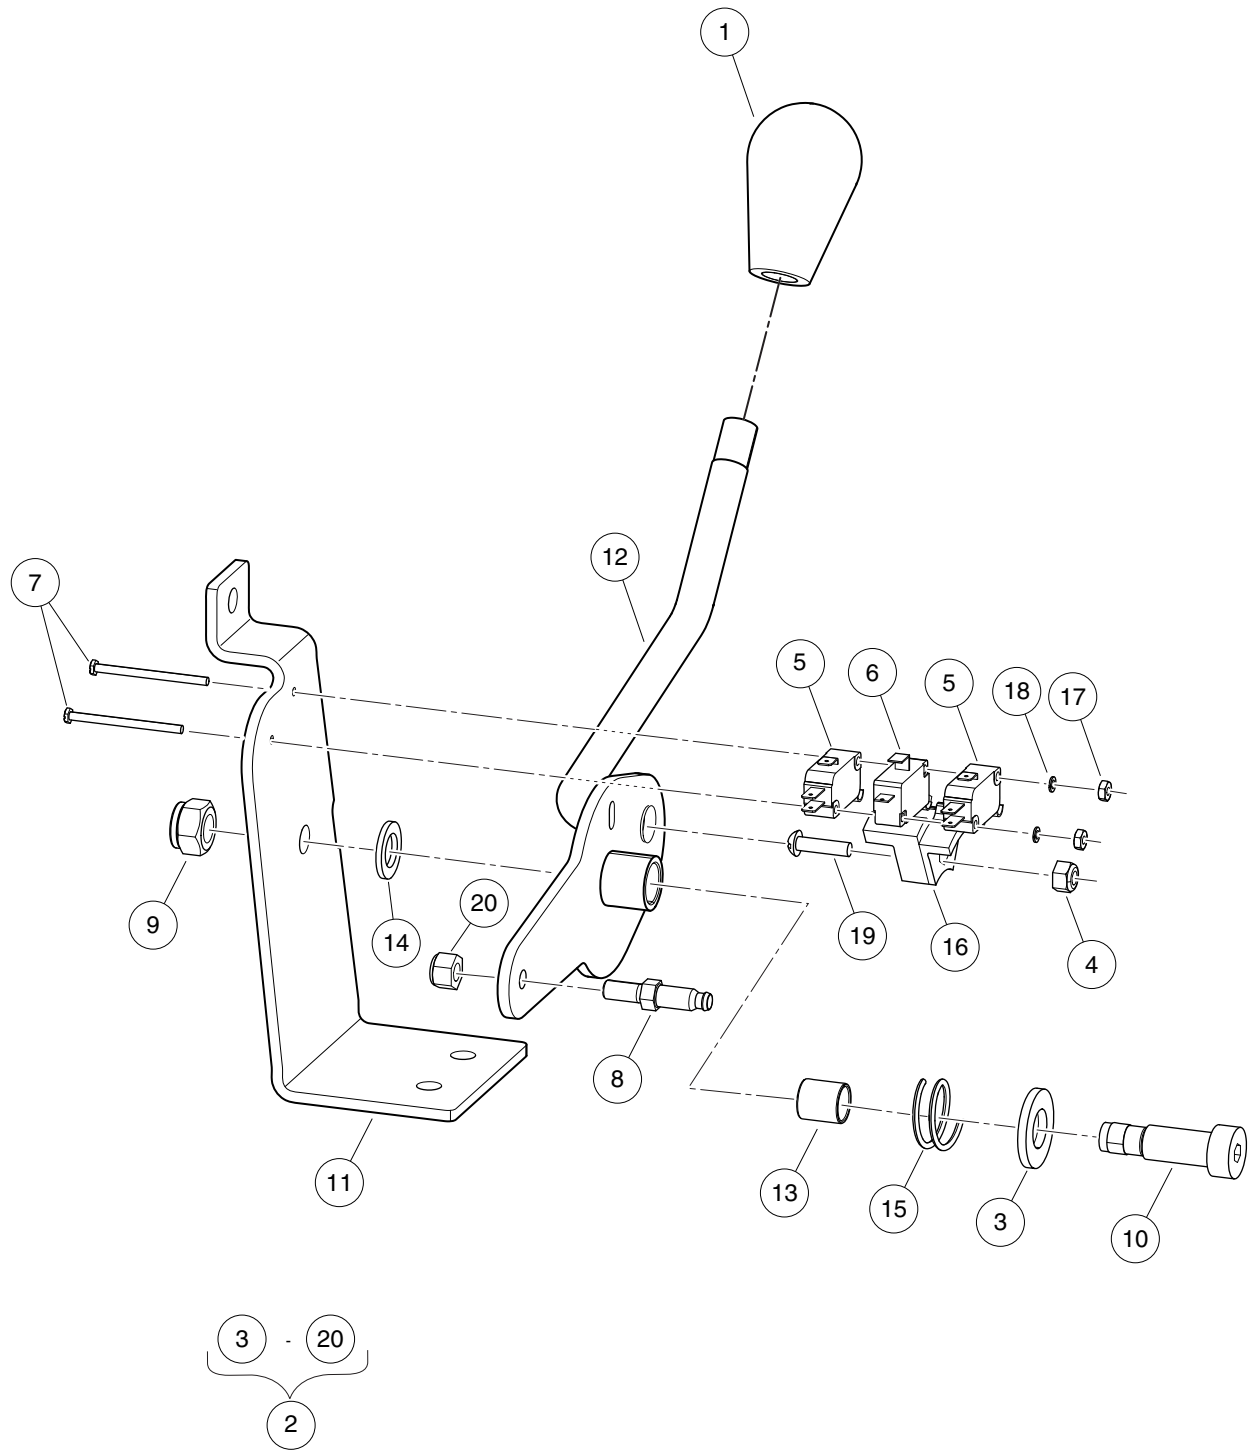


000563-001

FORWARD/REVERSE SHIFTER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102376001</u>	Knob, FNR, Shifter	1
2	<u>102969901</u>	Asm, Shifter, FNR (includes items 3 through 20)	1
3	<u>1010028</u>	Washer, 1/2 Type A Flat	1
4	<u>1013061</u>	Locknut, #10-32 Nylon Insert	1
5	<u>1014807</u>	Switch, Limit	2
6	<u>1014808</u>	Switch, Limit	1
7	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2
8	<u>102526201</u>	Stud, Thread, 1/4-28	1
9	<u>102616701</u>	Locknut, M10x1.5 Nylon Insert	1
10	<u>102684602</u>	Shoulder Bolt, M12 X 25.0	1
11	<u>102969401</u>	Bracket, Shifter, FNR	1
12	<u>102969801</u>	Weldment, Shift Lever, FNR	1
13	<u>103173301</u>	Bushing, Greaseless, 12mm Id	1
14	<u>103177401</u>	Washer, Thrust, Shifter, FNR	1
15	<u>103192701</u>	Spring, Comp, .97 Od X.75 L	1
16	<u>103369501</u>	Cam, Limit Switch, Fnr Shifter	1
17	<u>8057</u>	Nut, #4-40 Hex Machine	2
18	<u>8058</u>	Lockwasher, #4 Split	2
19	<u>8104</u>	Screw, #10-32 X .75 Rd Hd Mach	1
20	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1

17


G

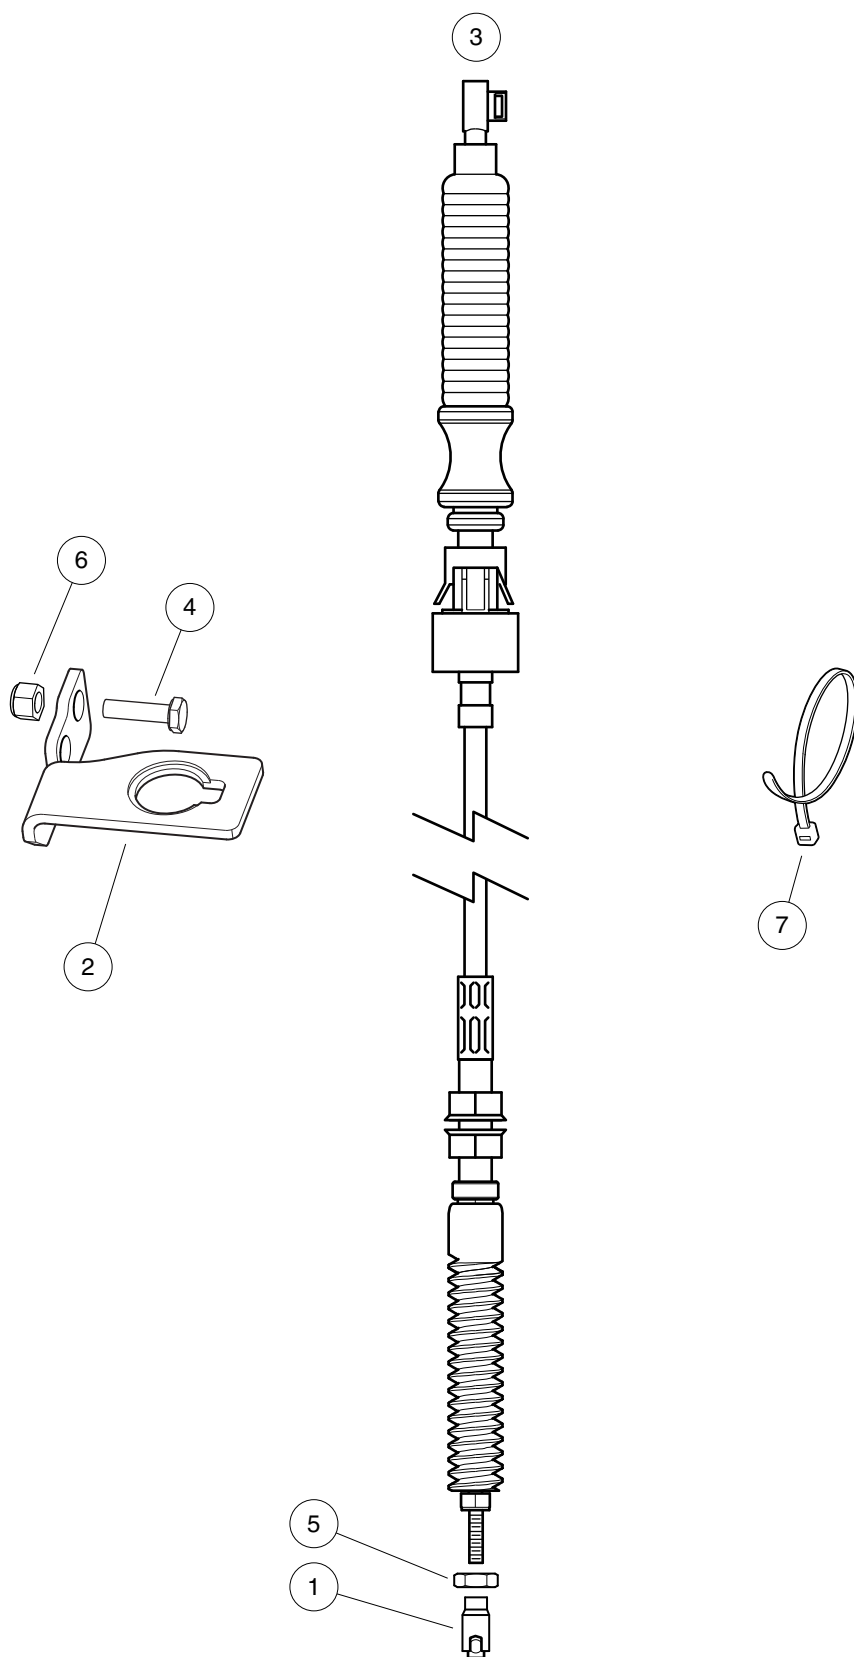

001071-001

SHIFTER CABLE – TURF/CA 6 AND VILLAGER 6


ITEM	PART NO.	DESCRIPTION	QTY	17
		1 2 3 4		G
1	<u>1012333</u>	Joint, #10-32 Ball	1	
2	<u>103295101</u>	Brkt, Spt, Cable End, Fnr	1	
3	<u>103295203</u>	Cable, Transmission, 2385mm	1	
4	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	2	
5	<u>7893</u>	Nut, #10-32 Hex	1	
6	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2	
7	<u>8639</u>	Tie Wrap, 11" Nylon	A/R	



SHIFTER CABLE – VILLAGER 8

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012333</u>	Joint, #10-32 Ball	1
2	<u>103295101</u>	Brkt, Spt, Cable End, Fnr	1
3	<u>103295204</u>	Cable, Trans, Ball End, 3225mm	1
4	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
5	<u>7893</u>	Nut, #10-32 Hex	1
6	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2
7	<u>8639</u>	Tie Wrap, 11" Nylon	A/R

17
G

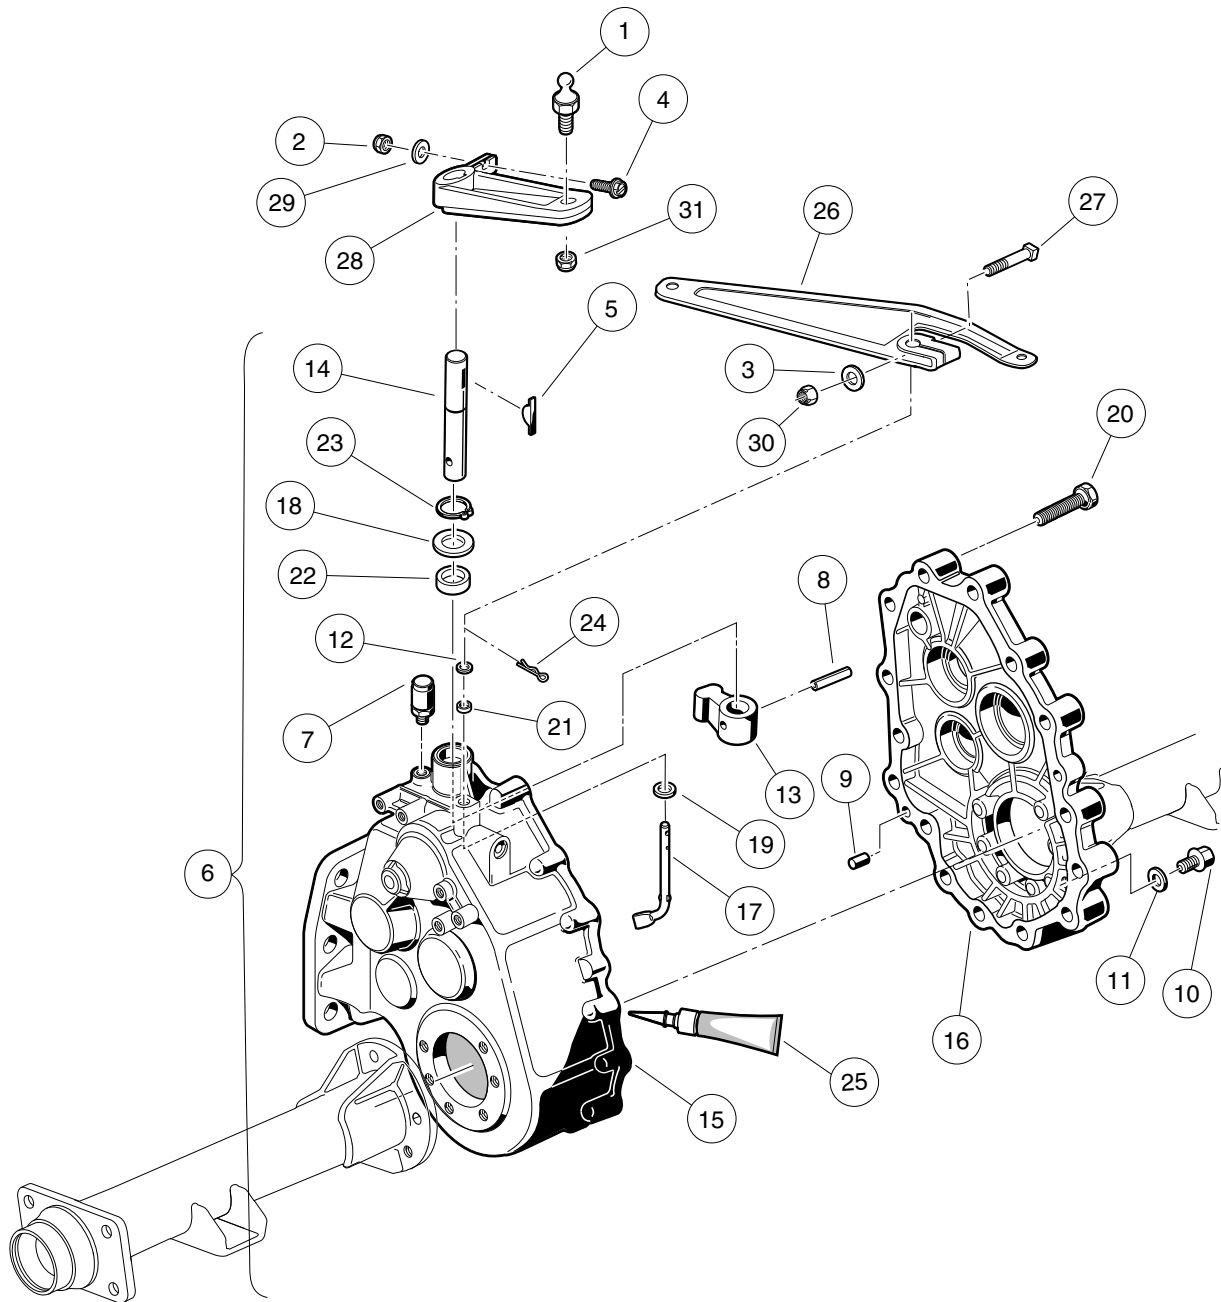


000220-005

KAWASAKI TRANSAXLE – GEAR CASES AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010954</u>	Stud, Ball, 1/4-28 X 0.560	1
2	<u>1013061</u>	Locknut, #10-32 Nylon Insert	1
3	<u>1014007</u>	Washer, 1/4, Flat	1
4	<u>1017082</u>	Screw, #10-32 X 0.75, Hex-Head Machine	1
5	<u>1017231</u>	Key, Woodruff	1
6	<u>101833601</u>	Transaxle, 11.77 Ratio (includes items 7 through 25)	1
7	<u>1012711</u>	Breather	1
8	<u>1012752</u>	Roll Pin	1
9	<u>1012896</u>	Pin, Dowel	2
10	<u>1013760</u>	Fill Plug	2
11	<u>1016432</u>	Gasket, Drain Plug	1
12	<u>1016513</u>	Washer, M6 Flat	1
13	<u>101890101</u>	Lever, Drive Selector	1
14	<u>101890201</u>	Shaft, Drive Selector	1
15	<u>101890501</u>	Gear Case (driver side)	1
16	<u>101890601</u>	Gear Case (passenger side)	1
17	<u>101891301</u>	Arm Pivot	1
18	<u>101892901</u>	Washer	1
19	<u>101893801</u>	Washer	1
20	<u>101926901</u>	Screw, M8-1.25 X 40mm Hex-Head	15
21	<u>101927101</u>	Seal, Oil	1
22	<u>101927201</u>	Seal, Oil	1
23	<u>101927301</u>	Snap Ring	1
24	<u>101928601</u>	Pin, Cotter	1
25	<u>101928701</u>	Liquid Gasket (Transaxle case)	1
26	<u>101834801</u>	Arm, Governor	1
27	<u>101886101</u>	Screw, 1/4-20 X 1.00, Square-Head	1
28	<u>102515401</u>	Lever, Transmission Shift	1
29	<u>183</u>	Washer, #10, Type A, Flat	1
30	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	1
31	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1
Note: Kawasaki transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube.			

17

G

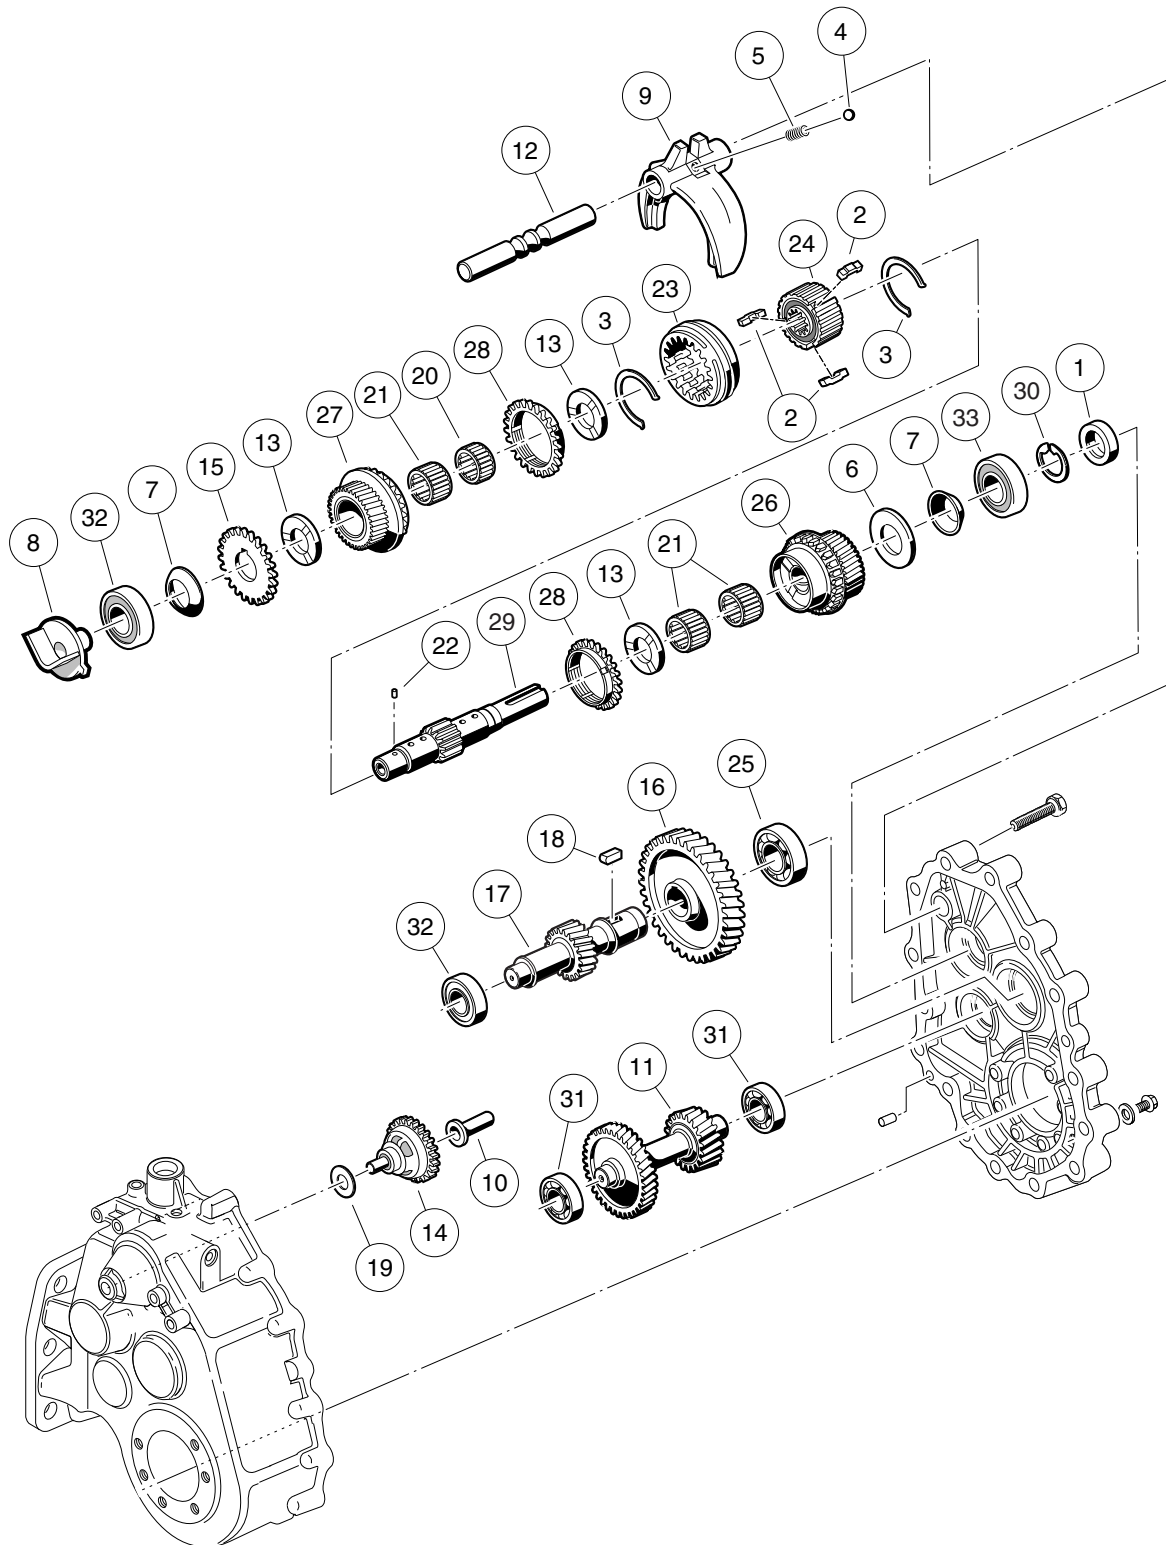


000221-001

KAWASAKI TRANSAXLE – F&R TRANSMISSION AND GEAR REDUCTION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012714</u>	Oil Seal	1
2	<u>1012740</u>	Synchro Insert	3
3	<u>1012741</u>	Synchro Spring	2
4	<u>1012747</u>	Shifter Ball	1
5	<u>1012748</u>	Shifter Spring	1
6	<u>1016337</u>	Washer, Thrust	1
7	<u>1016338</u>	Washer, Spring	2
8	<u>101889401</u>	Guide	1
9	<u>101890001</u>	Fork - Shift	1
10	<u>101891601</u>	Sleeve, Governor	1
11	<u>101891901</u>	Gear, Cluster	1
12	<u>101892001</u>	Rod, Shift	1
13	<u>101892201</u>	Plate, Thrust	3
14	<u>101892301</u>	Governor Assembly	1
15	<u>101892401</u>	Gear, Spur	1
16	<u>101892501</u>	Gear, Helical (61 Tooth)	1
17	<u>101892601</u>	Gear, Helical (17 Tooth)	1
18	<u>101893201</u>	Key Sunk	1
19	<u>101893901</u>	Washer	1
20	<u>101927501</u>	Needle Bearing	1
21	<u>101927601</u>	Needle Bearing	3
22	<u>101927701</u>	Pin, .116" Dia X 0.264 Dowel	1
23	<u>101927901</u>	Sleeve, Synchro	1
24	<u>101928001</u>	Hub, Synchro Clutch	1
25	<u>101928101</u>	Bearing, Ball	1
26	<u>101980801</u>	Gear Assembly, 16-Degree Synchro (25 Tooth)	1
27	<u>101980901</u>	Gear Assembly, 16-Degree Rear Synchro (28 Tooth)	1
28	<u>101981001</u>	Ring, 16-Degree Synchronizer	2
29	<u>102453001</u>	Shaft, Trans, with Circlip	1
30	<u>102453101</u>	Circlip	1
31	<u>7335</u>	Bearing	2
32	<u>AM10080</u>	Bearing, Ball, Sealed	2
33	<u>AM10081</u>	Bearing, Ball, Sealed	1
Note: To identify your transaxle, locate the serial number decal on the axle			

17

G

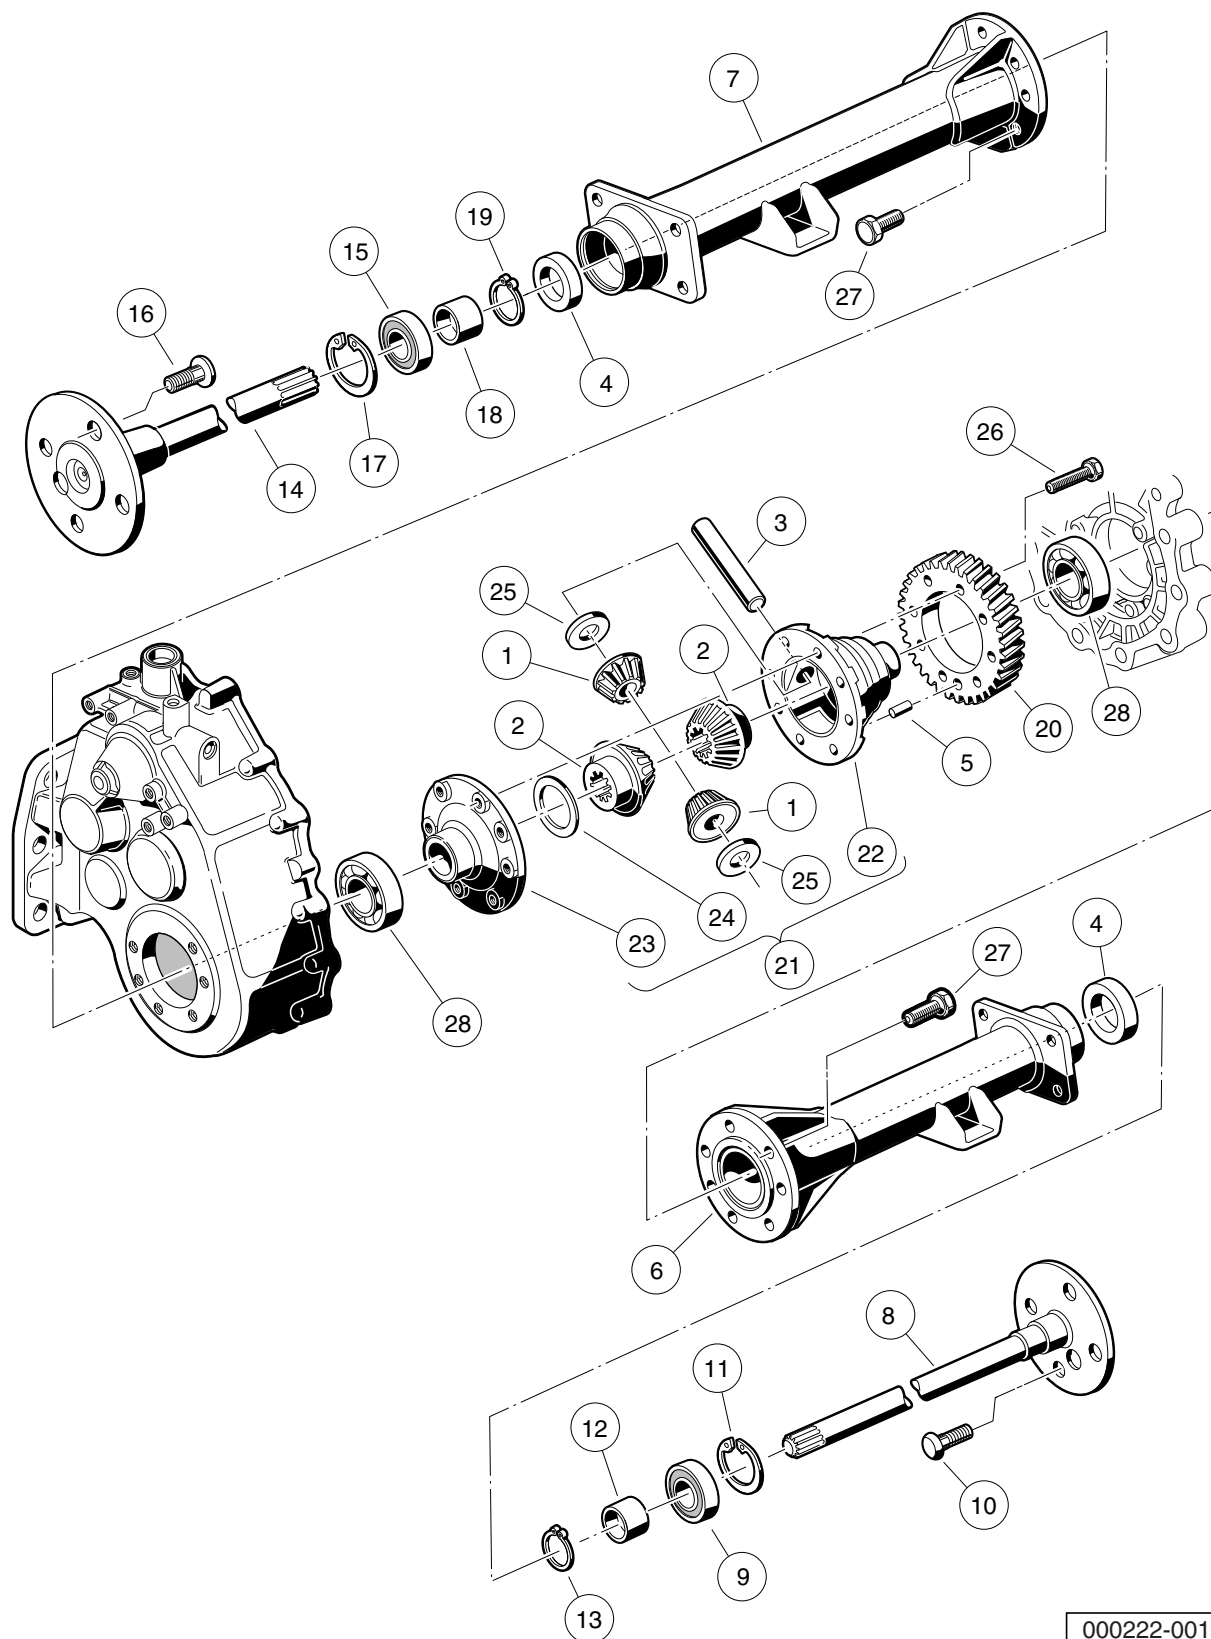


000222-001

KAWASAKI TRANSAXLE – DIFFERENTIAL AND AXLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013770</u>	Differential Idler Gear	2
2	<u>1013771</u>	Gear, Differential	2
3	<u>1013772</u>	Pin, Differential	1
4	<u>1013794</u>	Axle Shaft Oil Seal	2
5	N/A	Dowel Pin	1
6	<u>101890901</u>	Axle Tube (Passenger Side)	1
7	<u>101891001</u>	Axle Tube (Driver Side)	1
8	<u>101891401</u>	Axle Assembly, Passenger Side (includes items 9 through 13)	1
9	<u>1011291</u>	Outer Axle, Tube Bearing	1
10	<u>1013787</u>	Lug Stud	4
11	<u>1013792</u>	Circlip Type C	1
12	<u>1014207</u>	Bushing	1
13	<u>1016672</u>	Retaining Ring	1
14	<u>101891501</u>	Axle Assembly, Driver-Side (includes items 15 through 19)	1
15	<u>1011291</u>	Outer Axle, Tube Bearing	1
16	<u>1013787</u>	Lug Stud	4
17	<u>1013792</u>	Circlip Type C	1
18	<u>1014207</u>	Bushing	1
19	<u>1016672</u>	Retaining Ring	1
20	<u>101892701</u>	Gear, Helical	1
21	<u>101910501</u>	Kit, Differential Gear Case (includes items 22 through 25)	1
22	<u>1013768</u>	Differential Gear Case, Left-Hand	1
23	<u>1013769</u>	Differential Gear Case, Right-Hand	1
24	<u>1013773</u>	Plate, Thrust (Differential Gear)	1
25	<u>1013774</u>	Plate, Thrust (Idler Gear)	2
26	<u>101928301</u>	Screw, M8-1.25 X 35mm Hex Head	8
27	<u>102031901</u>	Bolt, M10 X 1.5 X 30mm	14
28	<u>7330</u>	Inner Axle Tube Bearing	2
Note: To identify your transaxle, locate the serial number decal on the axle			

17

G

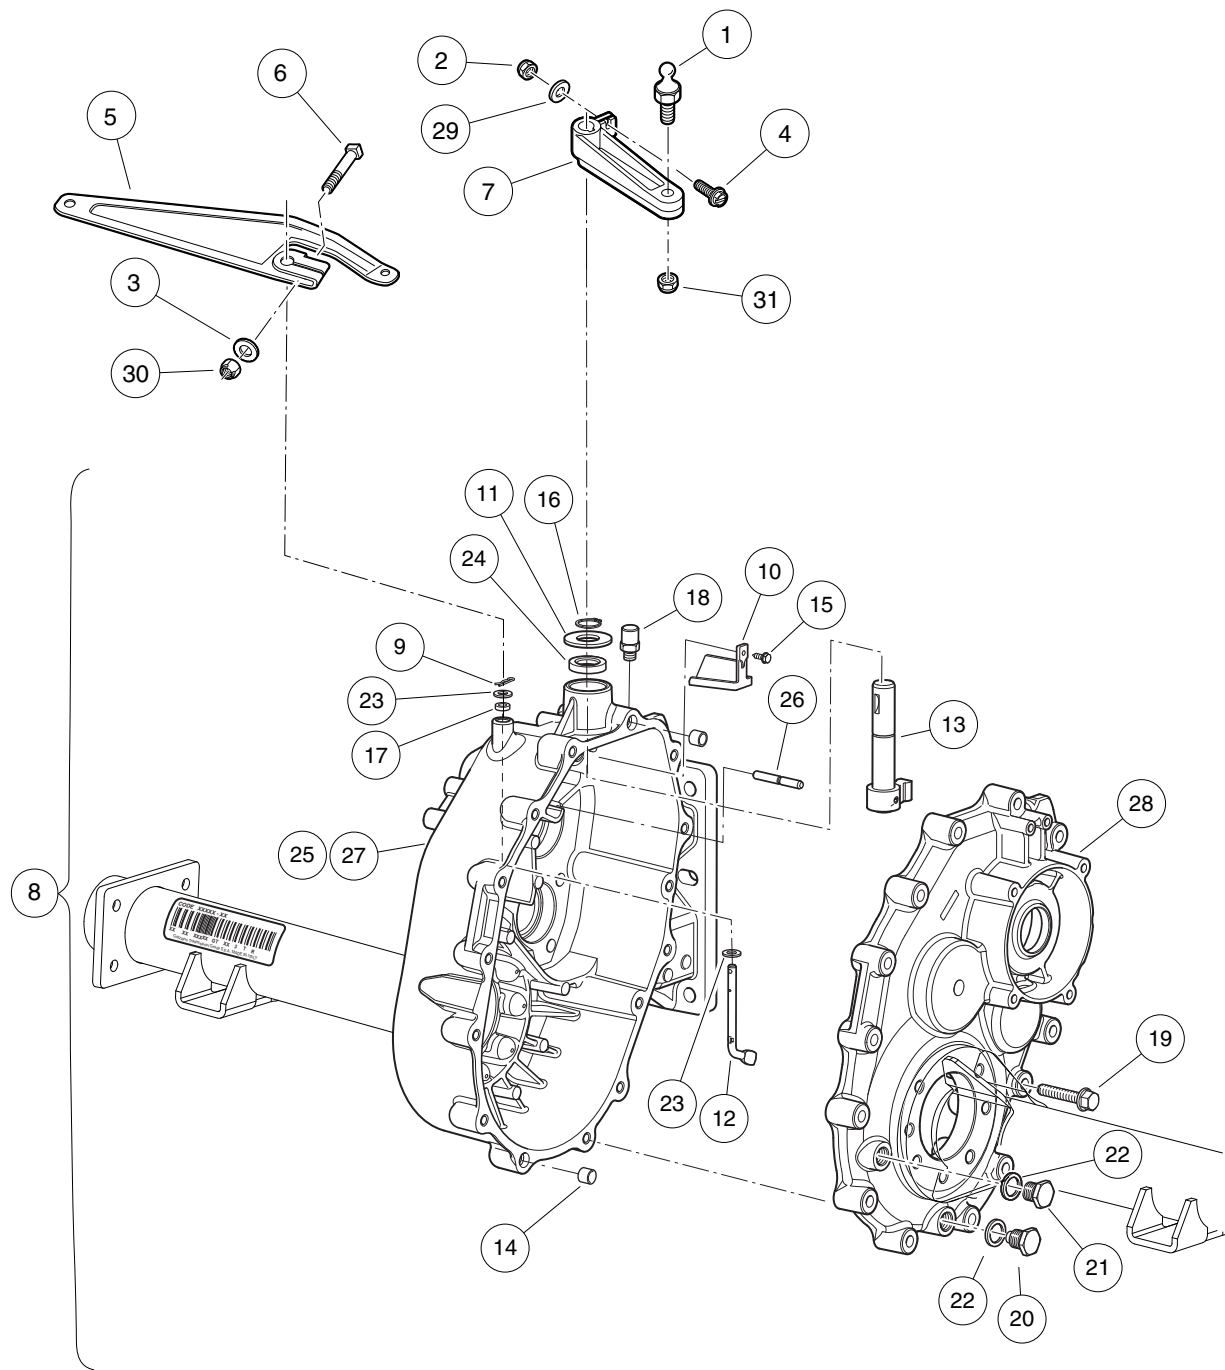


000680-010

GRAZIANO TRANSAXLE – GEAR CASES AND LEVERS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010954</u>	Stud, Ball, 1/4-28 X 0.560	1
2	<u>1013061</u>	Locknut, #10-32 Nylon Insert	1
3	<u>1014007</u>	Washer, 1/4, Flat	1
4	<u>1017082</u>	Screw, #10-32 X 0.75, Hex-Head Machine	1
5	<u>101834801</u>	Arm, Governor	1
6	<u>101886101</u>	Screw, 1/4-20 X 1.00, Square-Head	1
7	<u>102515401</u>	Lever, Transmission Shift	1
8	<u>103874201</u>	Transaxle, Gas, 11.77:1, Gtg (includes items 9 through 28)	1
9	<u>102897401</u>	Pin, Split	1
10	<u>102897601</u>	Conveyor, Oil	1
11	<u>102897801</u>	Washer, Thrust	1
12	<u>102897901</u>	Lever, Speed Governor	1
13	<u>102898201</u>	Unit, Drive Selector	1
14	<u>102899101</u>	Dowel	2
15	<u>102899201</u>	Screw	1
16	<u>102899401</u>	Ring, Snap	1
17	<u>102899701</u>	Grommet	1
18	<u>102899801</u>	Breather	1
19	<u>102900001</u>	Screw	15
20	<u>102900101</u>	Drain Plug, Magnetic	1
21	<u>102900201</u>	Fill Plug	1
22	<u>102900301</u>	Seal	2
23	<u>102900601</u>	Washer	2
24	<u>102900901</u>	Grommet	1
25	<u>103882101</u>	Case, Transaxle, W/gov Pin (includes items 26 and 27)	1
26	N/A	Pin, Speed Governor	1
27	N/A	Cover, Gear Box (Driver-Side)	1
28	<u>103882301</u>	Cover, Gear Box (Passenger-Side)	1
29	<u>183</u>	Washer, #10, Type A, Flat	1
30	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	1
31	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1
Note: Graziano transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube. <u>103874201</u> is used on vehicles with serial numbers 1235-307250 and greater and is backwards compatible. However, some service parts are not compatible with other transaxles.			

17

G

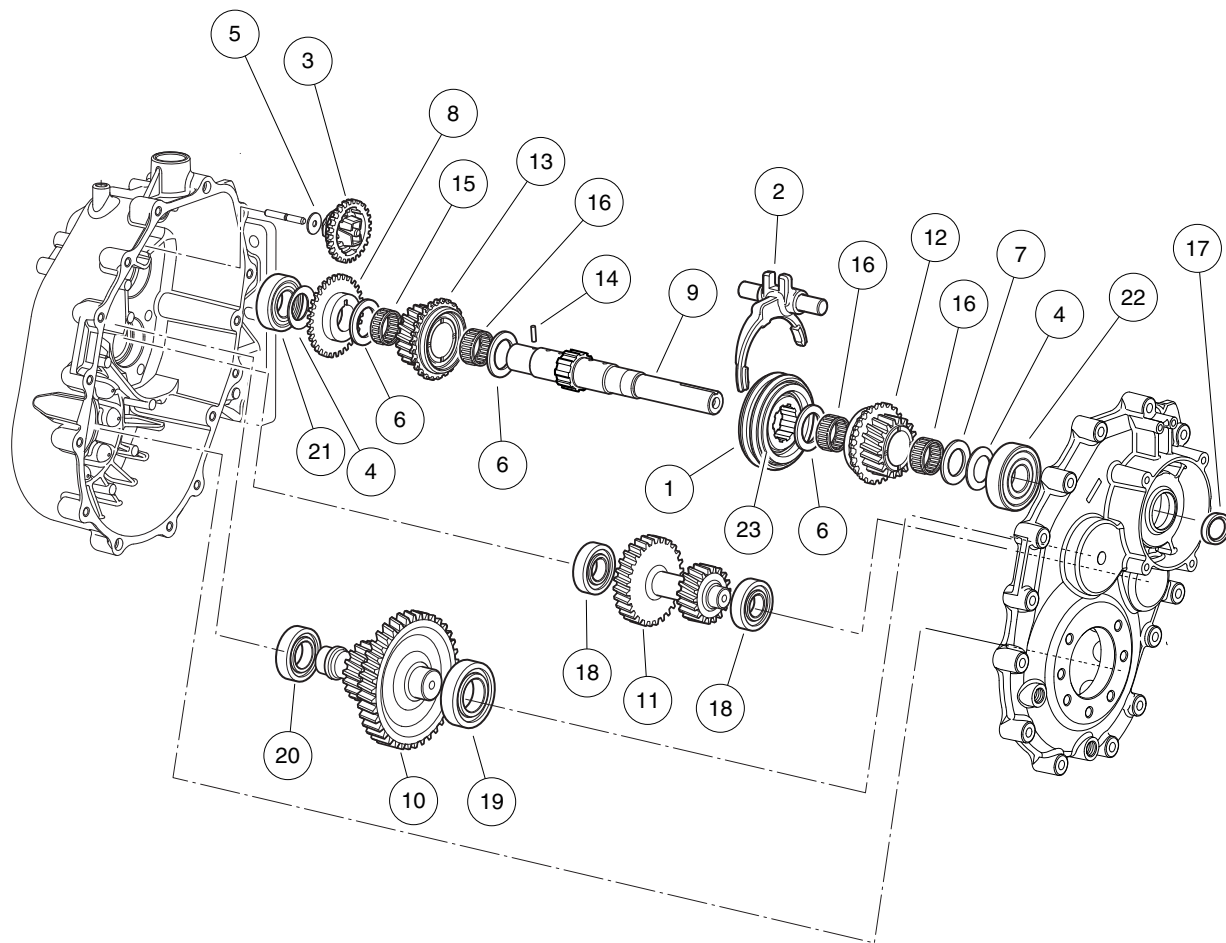


000680-008

GRAZIANO TRANSAXLE – F&R TRANSMISSION AND GEAR REDUCTION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102897201</u>	Synchronizer, Complete	1
2	<u>102897301</u>	Fork, Complete	1
3	<u>102897701</u>	Assembly, Speed Governor	1
4	<u>102898001</u>	Washer, Belleville	2
5	<u>102898101</u>	Bearing, Thrust	1
6	<u>102898301</u>	Bearing, Thrust	3
7	<u>102898401</u>	Washer, Thrust	1
8	<u>102898501</u>	Gear, Speed Governor	1
9	<u>102898601</u>	Shaft, Main	1
10	<u>102898701</u>	Shaft, Secondary	1
11	<u>102898801</u>	Shaft, Reverse Gear	1
12	<u>102898901</u>	Gear, Complete, 25t	1
13	<u>102899001</u>	Gear, Complete, 28t	1
14	<u>102899301</u>	Pin	1
15	<u>102899501</u>	Cage, Roller	1
16	<u>102899601</u>	Cage, Roller	3
17	<u>102899901</u>	Grommet	1
18	<u>102900401</u>	Bearing	2
19	<u>102900501</u>	Bearing, 62 Od X 30 Id X 16	1
20	<u>102900701</u>	Bearing	1
21	<u>102901001</u>	Bearing	1
22	<u>102901101</u>	Bearing	1
23	<u>103882001</u>	Washer, Wave, Trans Synchro	2
Note: To identify your transaxle, locate the serial number decal on the axle tube.			

17

G

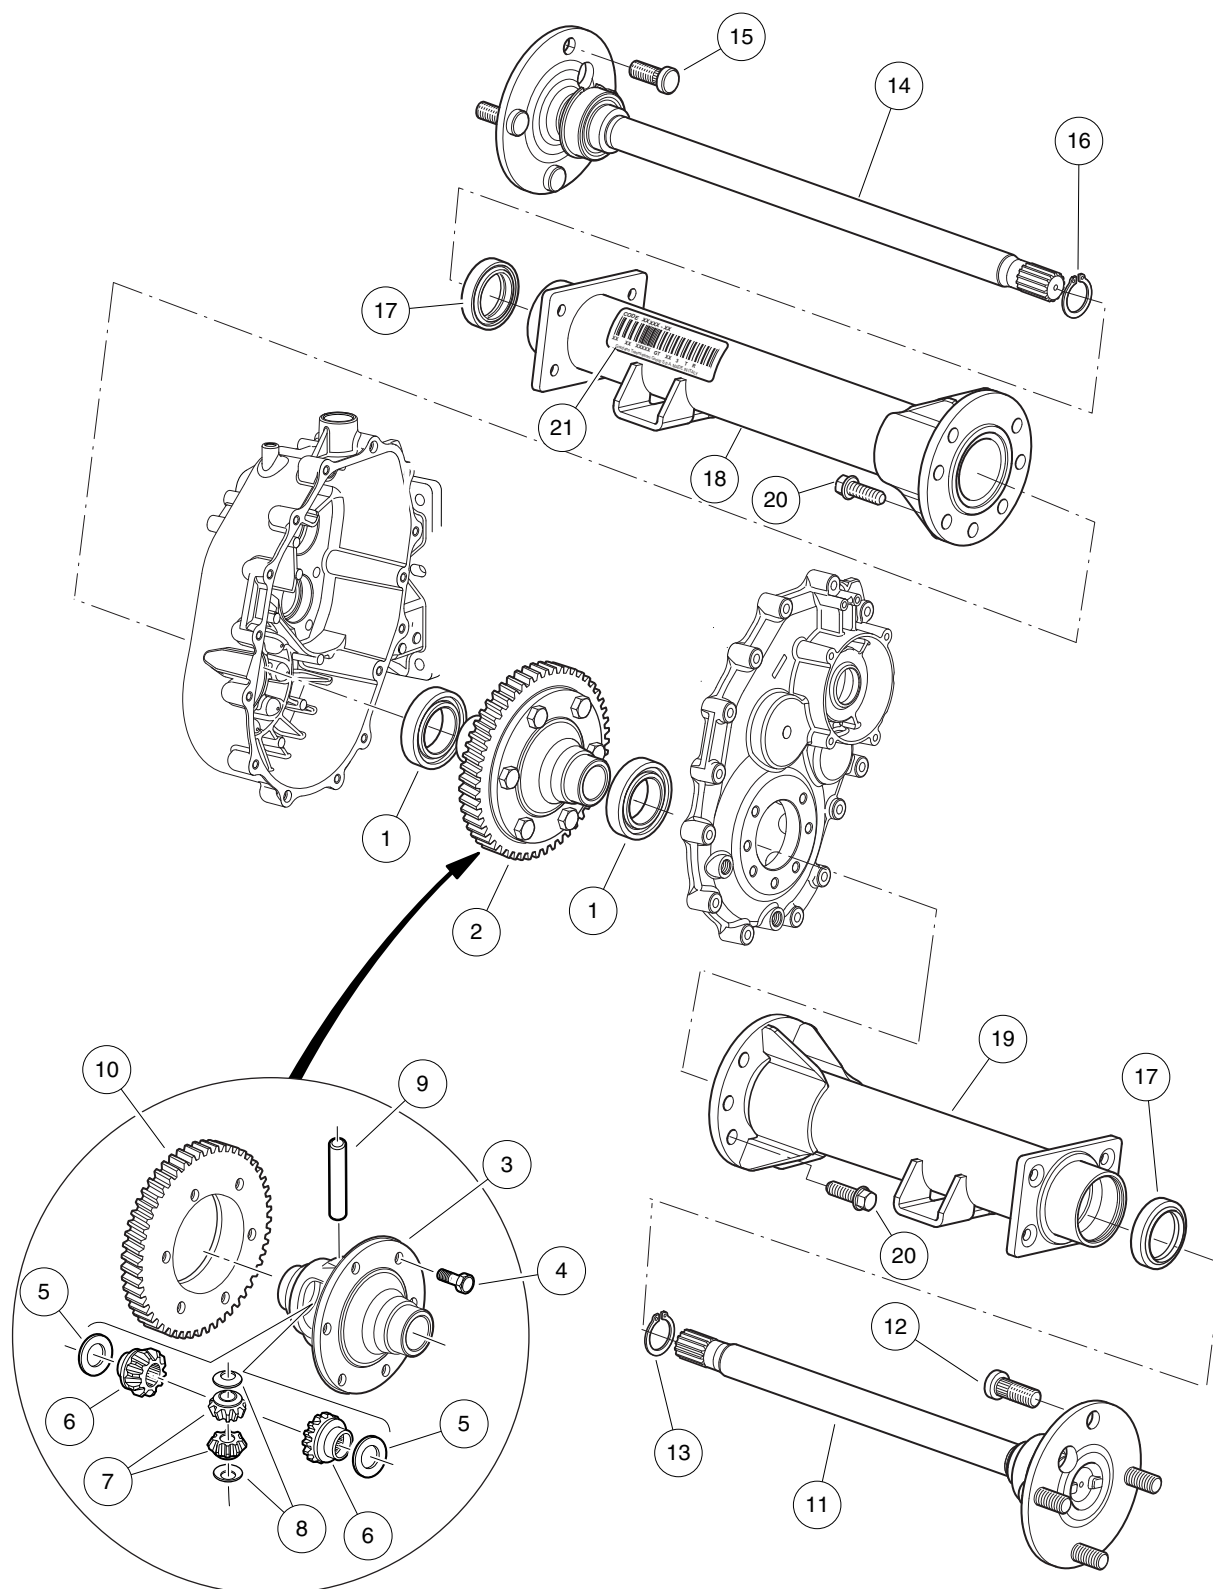


000681-002

GRAZIANO TRANSAXLE – DIFFERENTIAL AND AXLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102900801</u>	Bearing, 68 Od X 40 Id X 15	2
2	<u>102902001</u>	Assembly, Differential (includes items 3 through 10)	1
3	<u>102901201</u>	Box, Differential	1
4	<u>102901301</u>	Screw, M10 X 25	6
5	<u>102901401</u>	Ring, Sleeve	2
6	<u>102901501</u>	Gear, Sun	2
7	<u>102901601</u>	Gear, Planetary	2
8	<u>102901701</u>	Ring, Sleeve	2
9	<u>102901801</u>	Pin	1
10	<u>102901901</u>	Gear	1
11	<u>102902101</u>	Shaft, Axle, Short, Complete (Passenger-Side) (includes items 12 and 13)	1
12	<u>102902301</u>	Bolt, Stud	4
13	<u>102902401</u>	Snap Ring	1
14	<u>102902201</u>	Shaft, Axle, Long, Complete (Driver-Side) (includes items 15 and 16)	1
15	<u>102902301</u>	Bolt, Stud	4
16	<u>102902401</u>	Snap Ring	1
17	<u>102902501</u>	Seal, Lip	2
18	<u>102902601</u>	Axle Tube, (Driver-Side)	1
19	<u>102902701</u>	Axle Tube, (Passenger-Side)	1
20	<u>102902801</u>	Screw, M10 X 30	14
21	N/A	Tag, Serial	1
Note: To identify your transaxle, locate the serial number decal on the axle tube.			

17

G

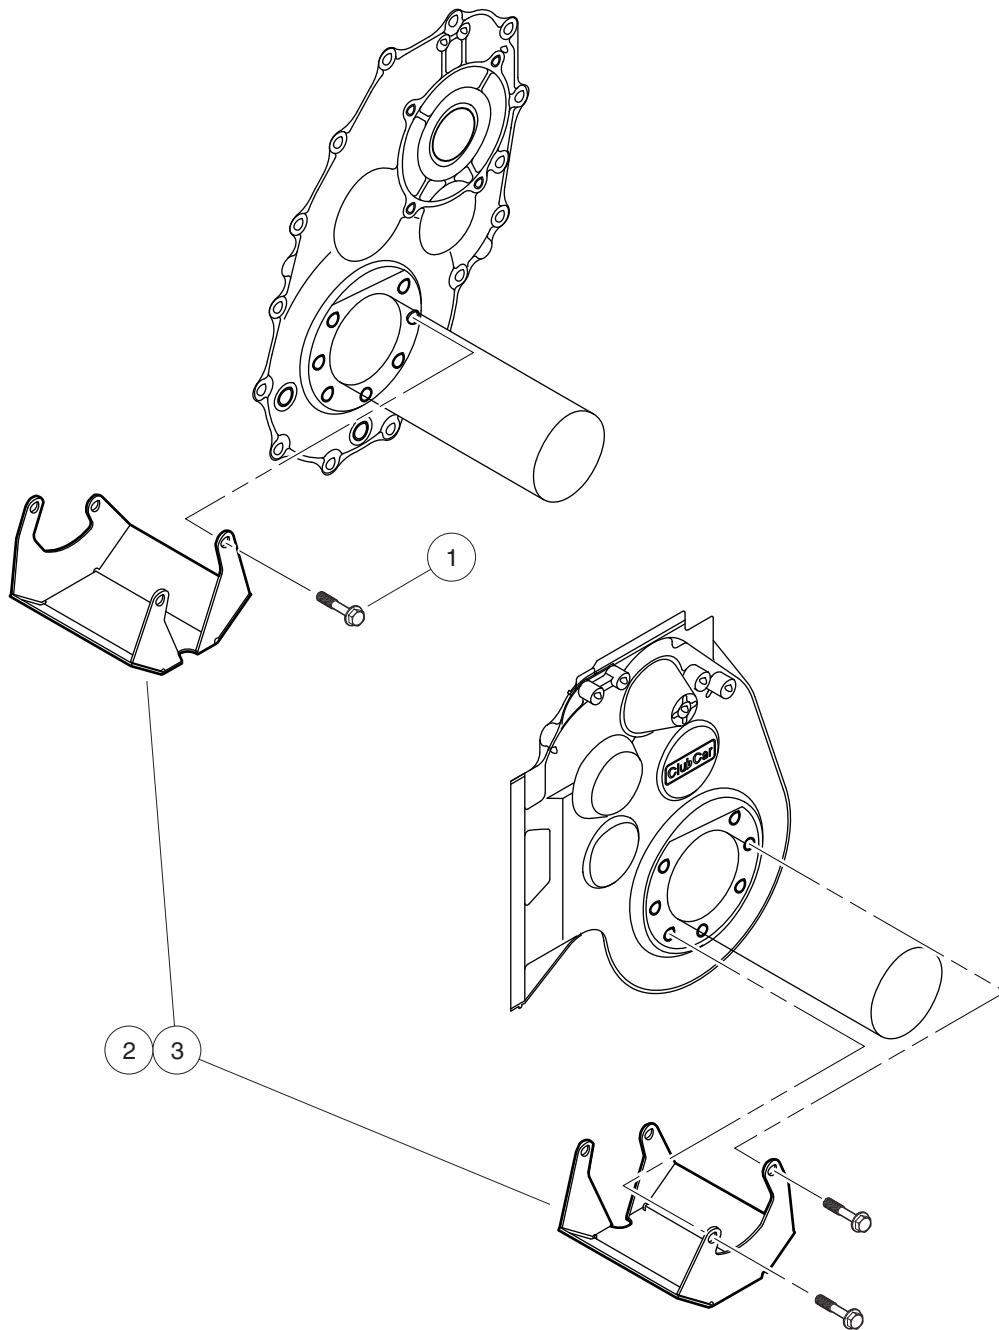

000366-001

DIFFERENTIAL GUARD – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101926901</u>	Screw, M8-1.25 X 40mm Hex-Head	4
2	<u>101932902</u>	Diff Guard Unitized Kit (Includes Instructions) (includes item 3)	1
3	N/A	Guard, Unitized Differential	1


17

G

TRANSAXLE (FUJI ED65) – EFI GASOLINE VEHICLES

18

G

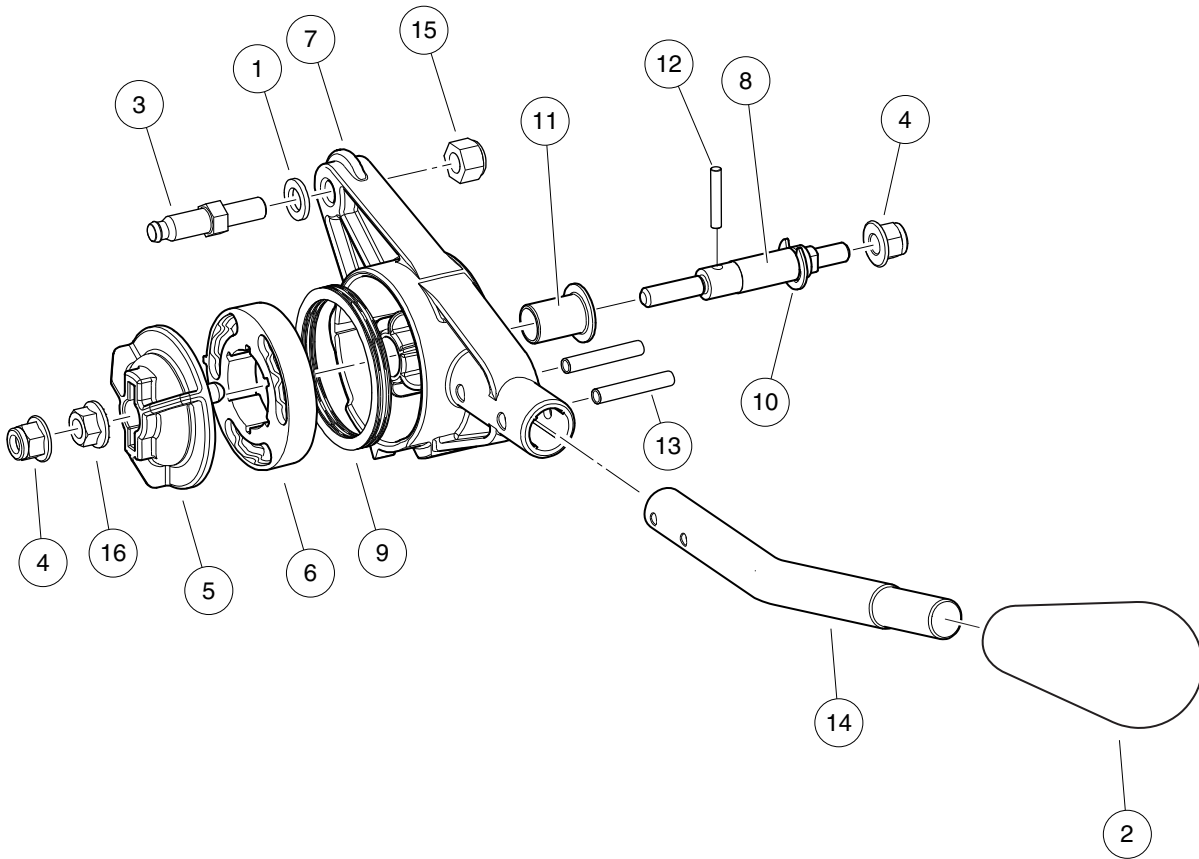


001011-001

FORWARD/REVERSE SHIFTER – EFI VILLAGER 6, 8, 850, 850SE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014007</u>	Washer, 1/4, Flat	1
2	<u>102376001</u>	Knob, FNR, Shifter	1
3	<u>102526201</u>	Stud, Thread, 1/4-28	1
4	<u>102621501</u>	Nut, Flange, M6 X 1.0, Nylon	2
5	<u>105037701</u>	Follower, FNR Detent	1
6	<u>105038001</u>	Cam, FNR Detent, Alternate	1
7	<u>105038101</u>	Housing, FNR, Gas, CA300-700	1
8	<u>105038201</u>	Shaft, FNR, Dash	1
9	<u>105038501</u>	Spring, Wave, Gas FNR Shifter	1
10	<u>105039801</u>	E-Clip, External, 8mm Groove	1
11	<u>105039901</u>	Bushing, Dash Shifter, Gas	1
12	<u>105040401</u>	Pin, Round, 0.125 Dia x 0.625	1
13	<u>105040402</u>	Pin, Grooved, 0.187 x 0.75	2
14	<u>105060601</u>	Handle, Shift, EX40, Villager	1
15	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1
16	<u>96704176</u>	Nut, Flanged, M6 X 1, Serrated	1

18


G

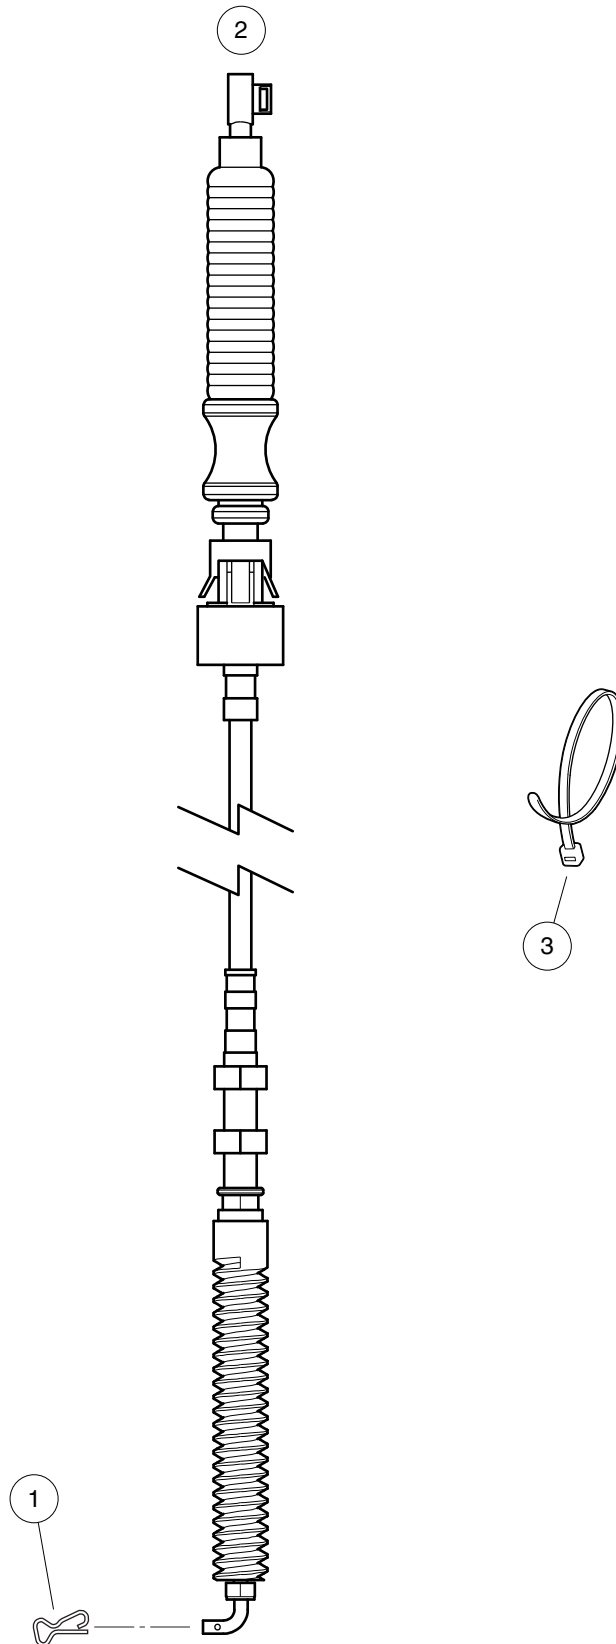

000988-001

SHIFTER CABLE – VILLAGER 6, XRT850SE

ITEM	PART NO.	DESCRIPTION	QTY	18
		1 2 3 4		G
1	<u>103886601</u>	Clip, Bowtie	1	
2	<u>105038805</u>	Cable, Shifter, Villager 6/850 SE	1	
3	<u>8990</u>	Tie Wrap, 8" Nylon	A/R	

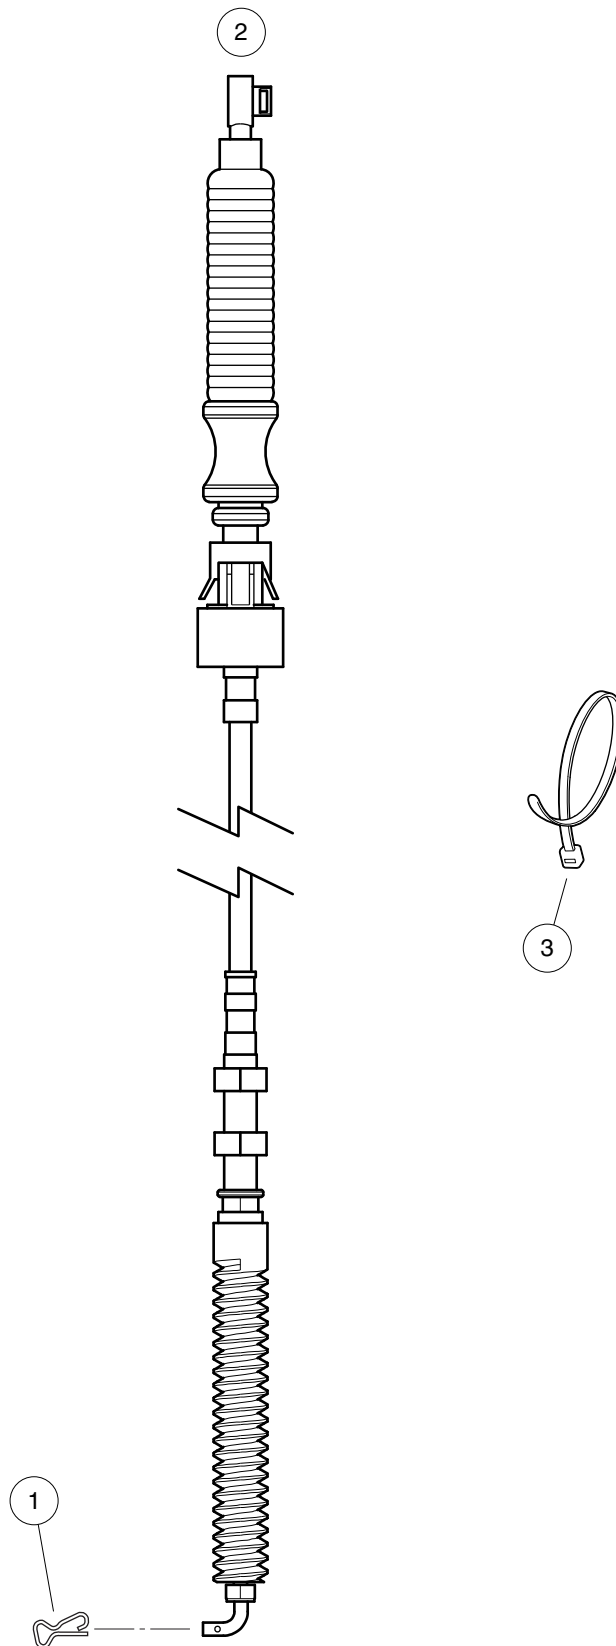


000988-001

SHIFTER CABLE – VILLAGER 8

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103886601</u>	Clip, Bowtie	1
2	<u>105038806</u>	Cable, Shifter, Villager 8	1
3	<u>8990</u>	Tie Wrap, 8" Nylon	A/R

18



G

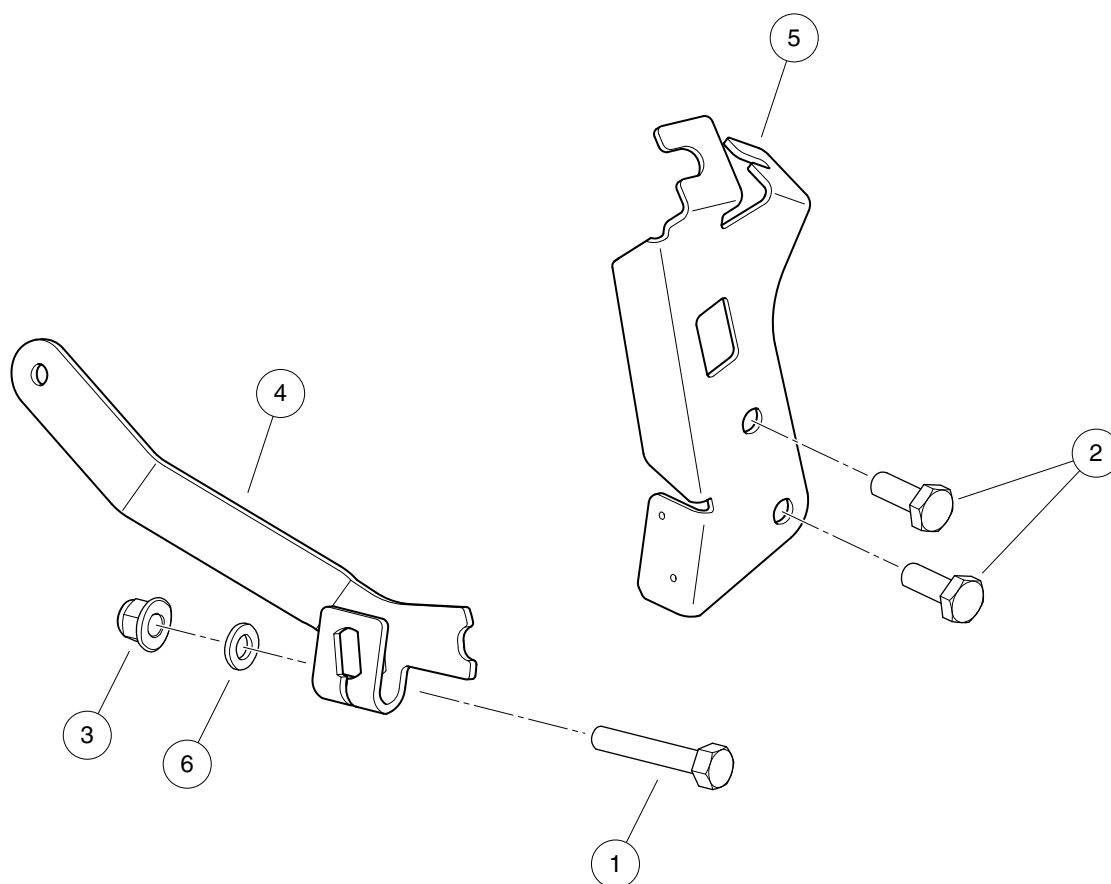

000965-002

SHIFT LEVER AND BRACKET – KEY-START ENGINES


ITEM	PART NO.	DESCRIPTION	QTY	18
		1 2 3 4		G
1	<u>102059501</u>	Screw, 6M-1.00 X 35mm, Hex Head	1	
2	<u>102498201</u>	Bolt, M10 X 1.25 X 25, Loctite	2	
3	<u>102621501</u>	Nut, Flange, M6 X 1.0, Nylon	1	
4	<u>105134901</u>	Lever, Shift, Transaxle, Key-Start	1	
5	<u>105135101</u>	Bracket, Cable, FNR/Accelerator, ED65	1	
6	<u>96705199</u>	Washer, M6	1	

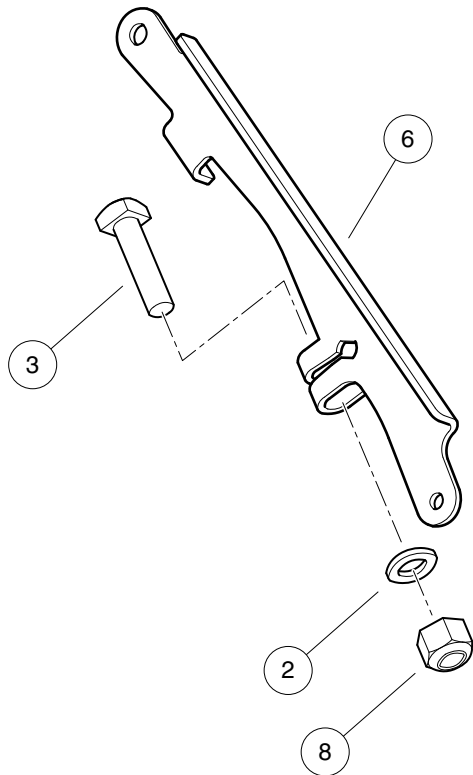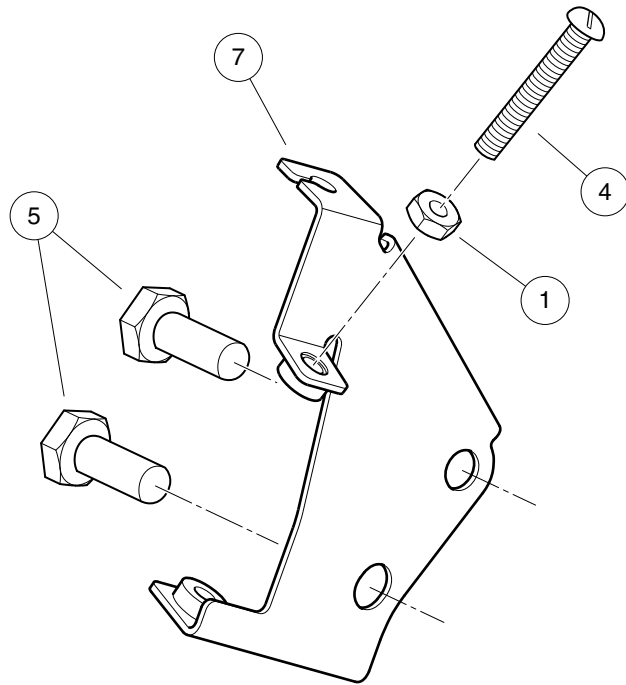

000966-002

GOVERNOR ARM AND BRACKETS – UTILITY VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	18
		1 2 3 4		G
1	<u>1011114</u>	Nut, M6-1.00 Hex	1	
2	<u>1014007</u>	Washer, 1/4, Flat	1	
3	<u>101886101</u>	Screw, 1/4-20 X 1.00, Square-Head	1	
4	<u>102476401</u>	Bolt, Stop, Pedal	1	
5	<u>102498201</u>	Bolt, M10 X 1.25 X 25, Loctite	2	
6	<u>104023501</u>	Arm, Governor, ED65	1	
7	<u>105144401</u>	Weldment, Governor Bracket	1	
8	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	1	

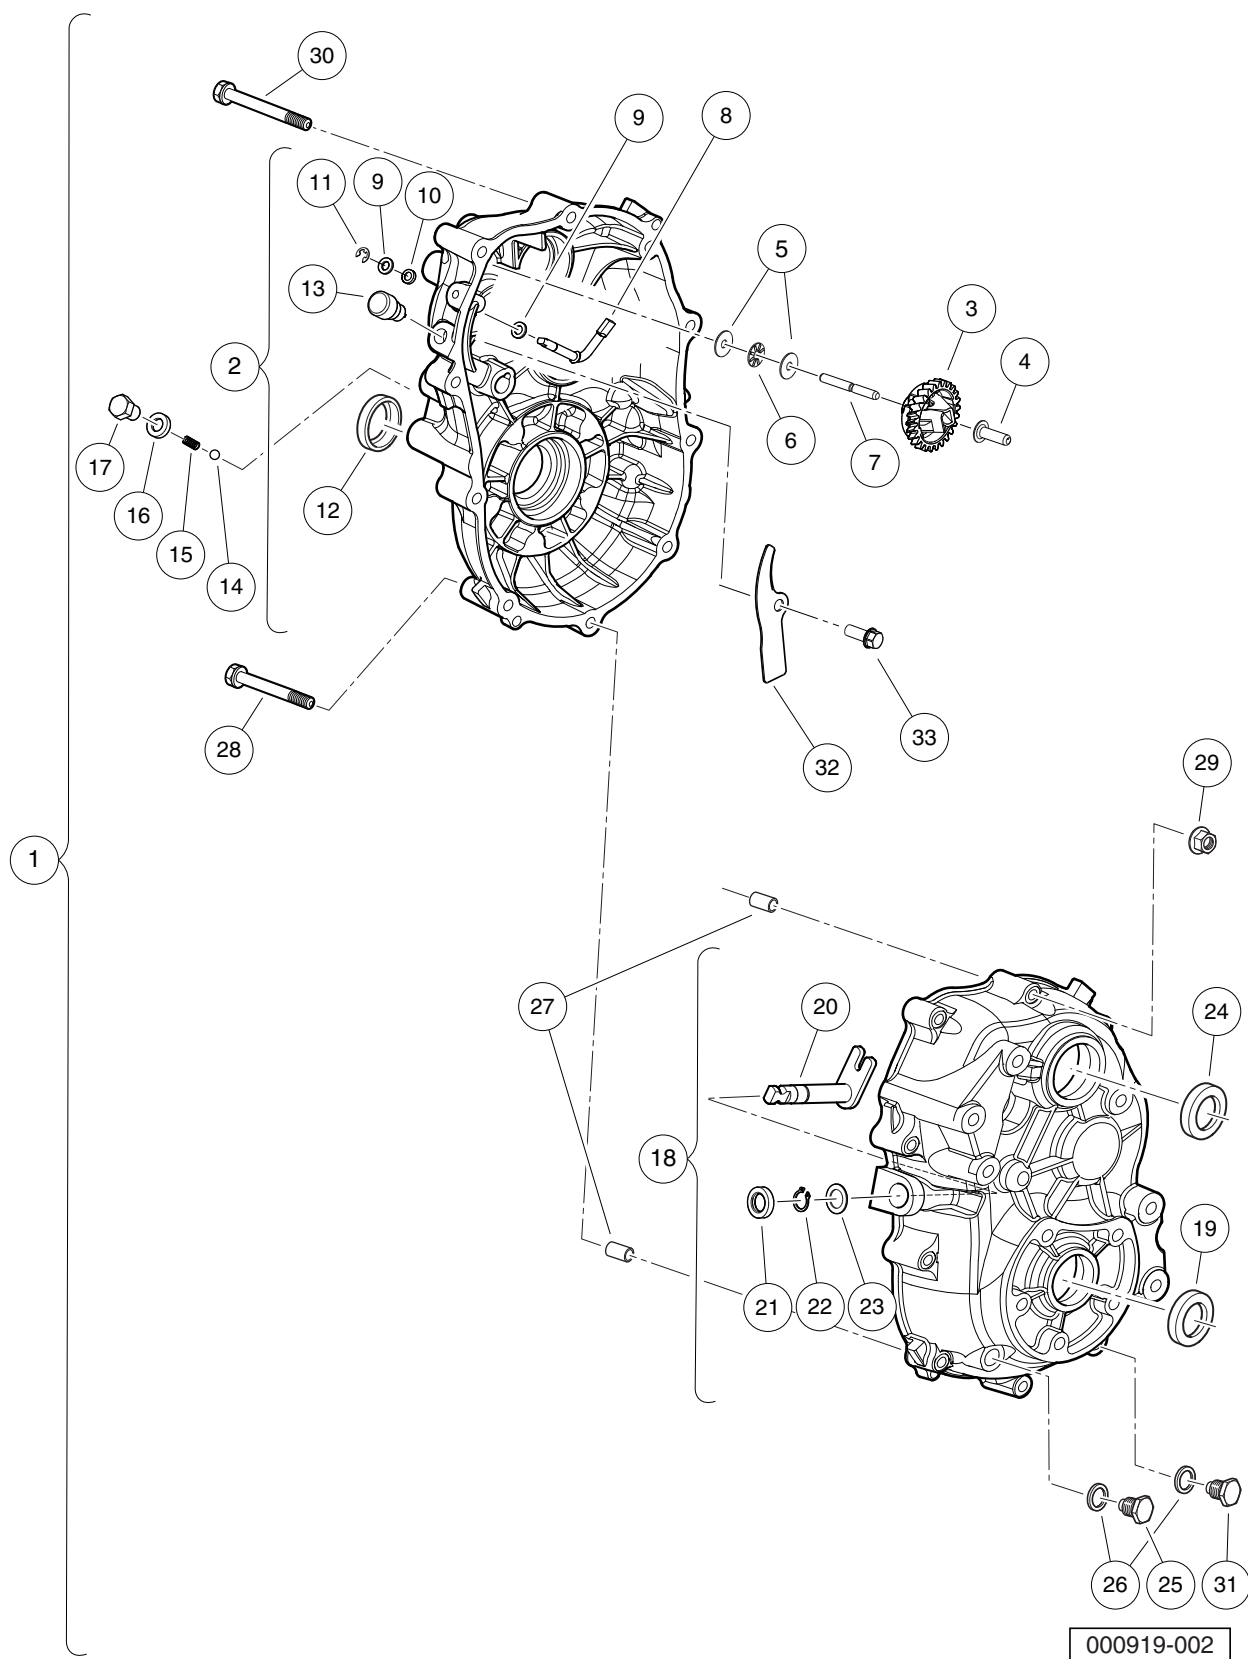


TRANSAXLE (ED65), LIMITED SLIP – PAGE 1 OF 3

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103879702</u>	Transaxle, ED65, Limited-Slip Differential (includes items 2 through 33)	1
2	<u>105025001</u>	Case, Transaxle, Left, Complete, ED65 (includes items 3 through 13)	1
3	<u>105025101</u>	Gear, Governor, Complete, ED65	1
4	<u>105025201</u>	Sleeve, Governor, ED65	1
5	<u>105025301</u>	Washer, ED65	2
6	<u>105025401</u>	Bearing, Thrust, ED65	1
7	<u>105025501</u>	Shaft, Governor Gear, ED65	1
8	<u>105025601</u>	Shaft, Governor, ED65	1
9	<u>105025701</u>	Washer, 6mm, ED65	2
10	<u>105025801</u>	Seal, Oil, 6x10x2.5, ED65	1
11	<u>105025901</u>	Retaining Ring, E5, ED65	1
12	<u>105026001</u>	Seal, Oil, 24x40x9, ED65	1
13	<u>105027101</u>	Vent, Breather, ED65	1
14	<u>105026101</u>	Ball, Steel, ED65	1
15	<u>105026201</u>	Spring, ED65	1
16	<u>105026301</u>	Gasket, 10, ED65	1
17	<u>105026401</u>	Bolt, M10-1.25x12mm Lg, ED65	1
18	<u>105026501</u>	Case, Transaxle, Right, Complete, ED65 (includes items 19 through 24)	1
19	<u>105026001</u>	Seal, Oil, 24x40x9, ED65	1
20	<u>105026601</u>	Shaft, Select, ED65	1
21	<u>105026701</u>	Seal, Oil, 13x22x5, ED65	1
22	<u>105026801</u>	Snap Ring, 13mm, ED65	1
23	<u>105026901</u>	Spacer, 13x1, ED65	1
24	<u>105027001</u>	Seal, Oil, 25x45x7, ED65	1
25	<u>105027201</u>	Plug, Oil Drain, ED65	1
26	<u>105027301</u>	Gasket, 14, ED65	2
27	<u>105028301</u>	Pin, Guide, ED65	2
28	<u>105028501</u>	Bolt, Flange, M8-1.25x65mm, ED65	1
29	<u>105030001</u>	Nut, Flange, M8-1.25, ED65	10
30	<u>105030701</u>	Bolt, Flanged, M8-1.25x80mm, ED65	9
31	<u>105063501</u>	Plug, Oil Drain, Magnetic, ED65	1
32	<u>105234801</u>	Plate, Ed65 Splash	1
33	<u>105234901</u>	Bolt, M6-1 X 12mm Lg, Ed65	1
Note: Fuji transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube.			

18

G

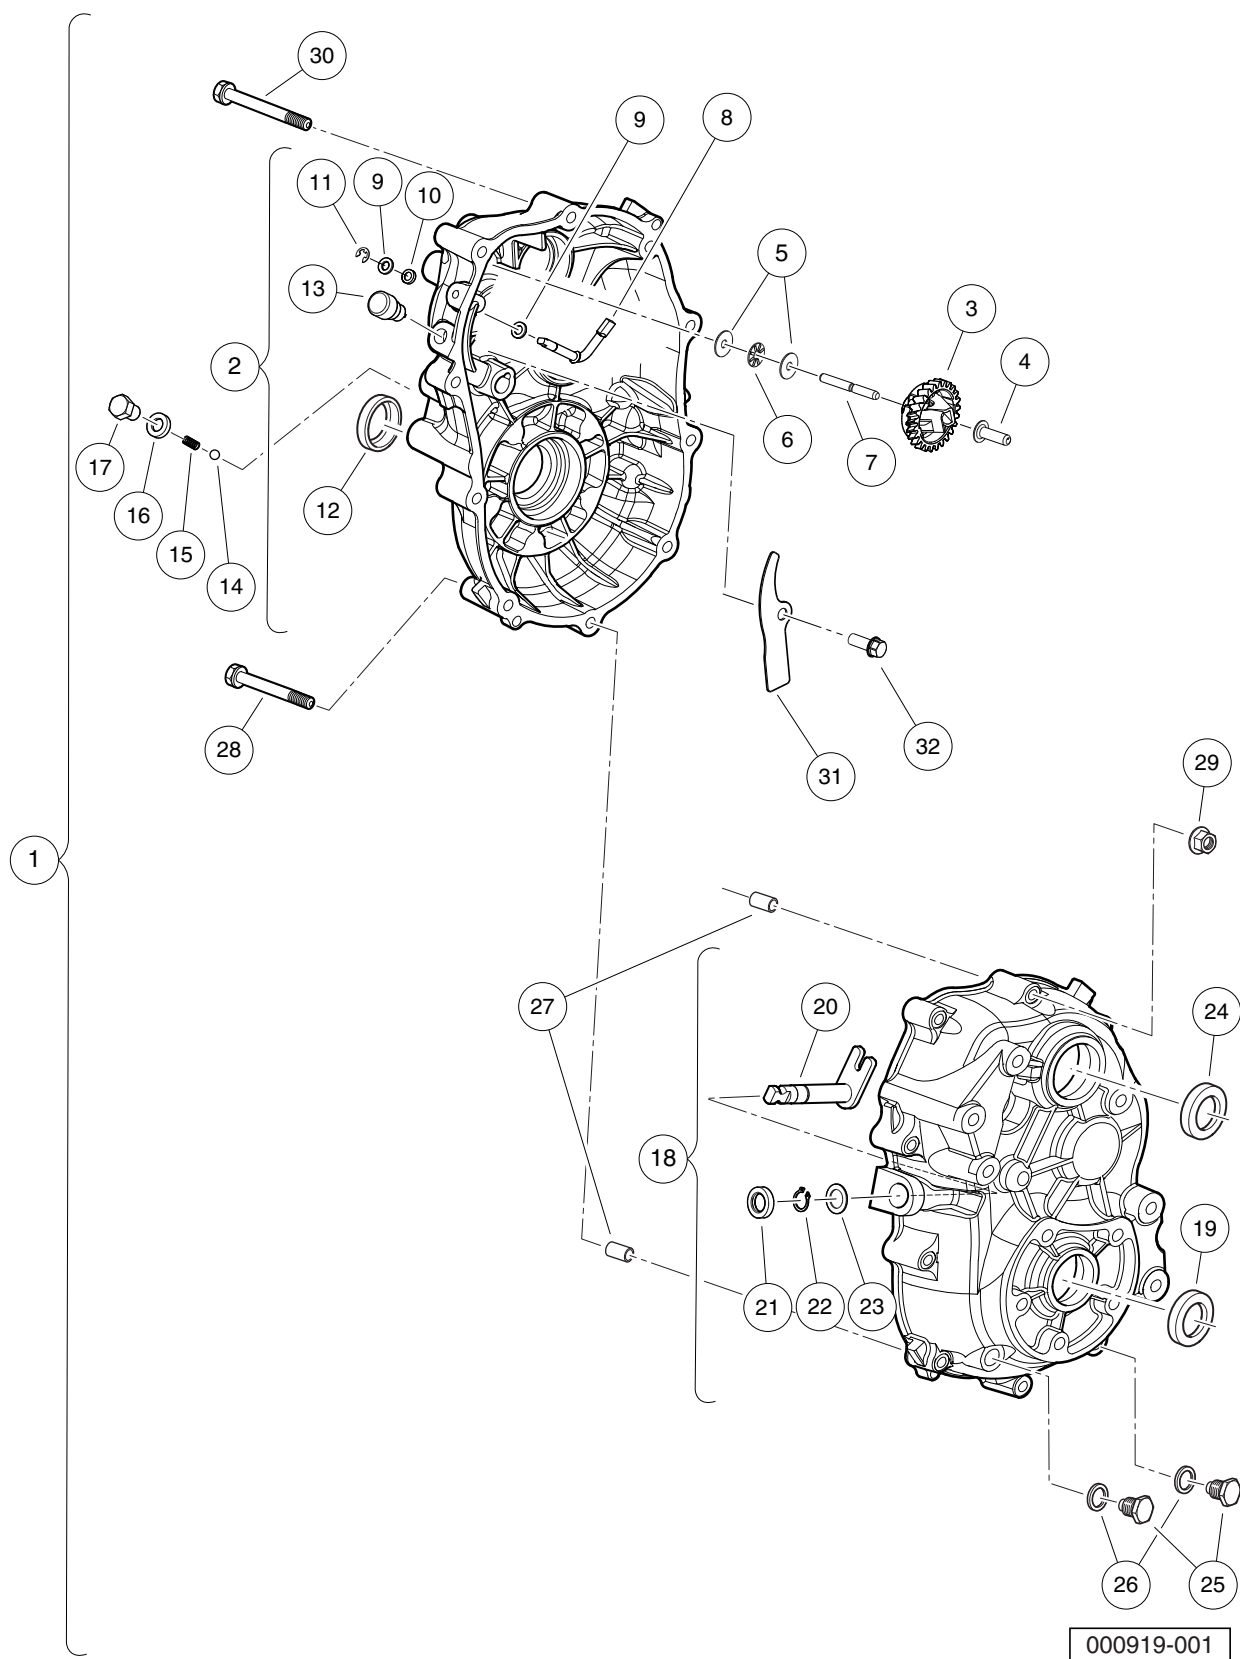


TRANSAXLE (ED65), OPEN – PAGE 1 OF 3

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103879701</u>	Transaxle, ED65, Open Differential (includes items 2 through 32)	1
2	<u>105025001</u>	Case, Transaxle, Left, Complete, ED65 (includes items 3 through 13)	1
3	<u>105025101</u>	Gear, Governor, Complete, ED65	1
4	<u>105025201</u>	Sleeve, Governor, ED65	1
5	<u>105025301</u>	Washer, ED65	2
6	<u>105025401</u>	Bearing, Thrust, ED65	1
7	<u>105025501</u>	Shaft, Governor Gear, ED65	1
8	<u>105025601</u>	Shaft, Governor, ED65	1
9	<u>105025701</u>	Washer, 6mm, ED65	2
10	<u>105025801</u>	Seal, Oil, 6x10x2.5, ED65	1
11	<u>105025901</u>	Retaining Ring, E5, ED65	1
12	<u>105026001</u>	Seal, Oil, 24x40x9, ED65	1
13	<u>105027101</u>	Vent, Breather, ED65	1
14	<u>105026101</u>	Ball, Steel, ED65	1
15	<u>105026201</u>	Spring, ED65	1
16	<u>105026301</u>	Gasket, 10, ED65	1
17	<u>105026401</u>	Bolt, M10-1.25x12mm Lg, ED65	1
18	<u>105026501</u>	Case, Transaxle, Right, Complete, ED65 (includes items 19 through 24)	1
19	<u>105026001</u>	Seal, Oil, 24x40x9, ED65	1
20	<u>105026601</u>	Shaft, Select, ED65	1
21	<u>105026701</u>	Seal, Oil, 13x22x5, ED65	1
22	<u>105026801</u>	Snap Ring, 13mm, ED65	1
23	<u>105026901</u>	Spacer, 13x1, ED65	1
24	<u>105027001</u>	Seal, Oil, 25x45x7, ED65	1
25	<u>105027201</u>	Plug, Oil Drain, ED65	2
26	<u>105027301</u>	Gasket, 14, ED65	2
27	<u>105028301</u>	Pin, Guide, ED65	2
28	<u>105028501</u>	Bolt, Flange, M8-1.25x65mm, ED65	1
29	<u>105030001</u>	Nut, Flange, M8-1.25, ED65	10
30	<u>105030701</u>	Bolt, Flanged, M8-1.25x80mm, ED65	9
31	<u>105234801</u>	Plate, Ed65 Splash	1
32	<u>105234901</u>	Bolt, M6-1 X 12mm Lg, Ed65	1
Note: Fuji transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube.			

18


G

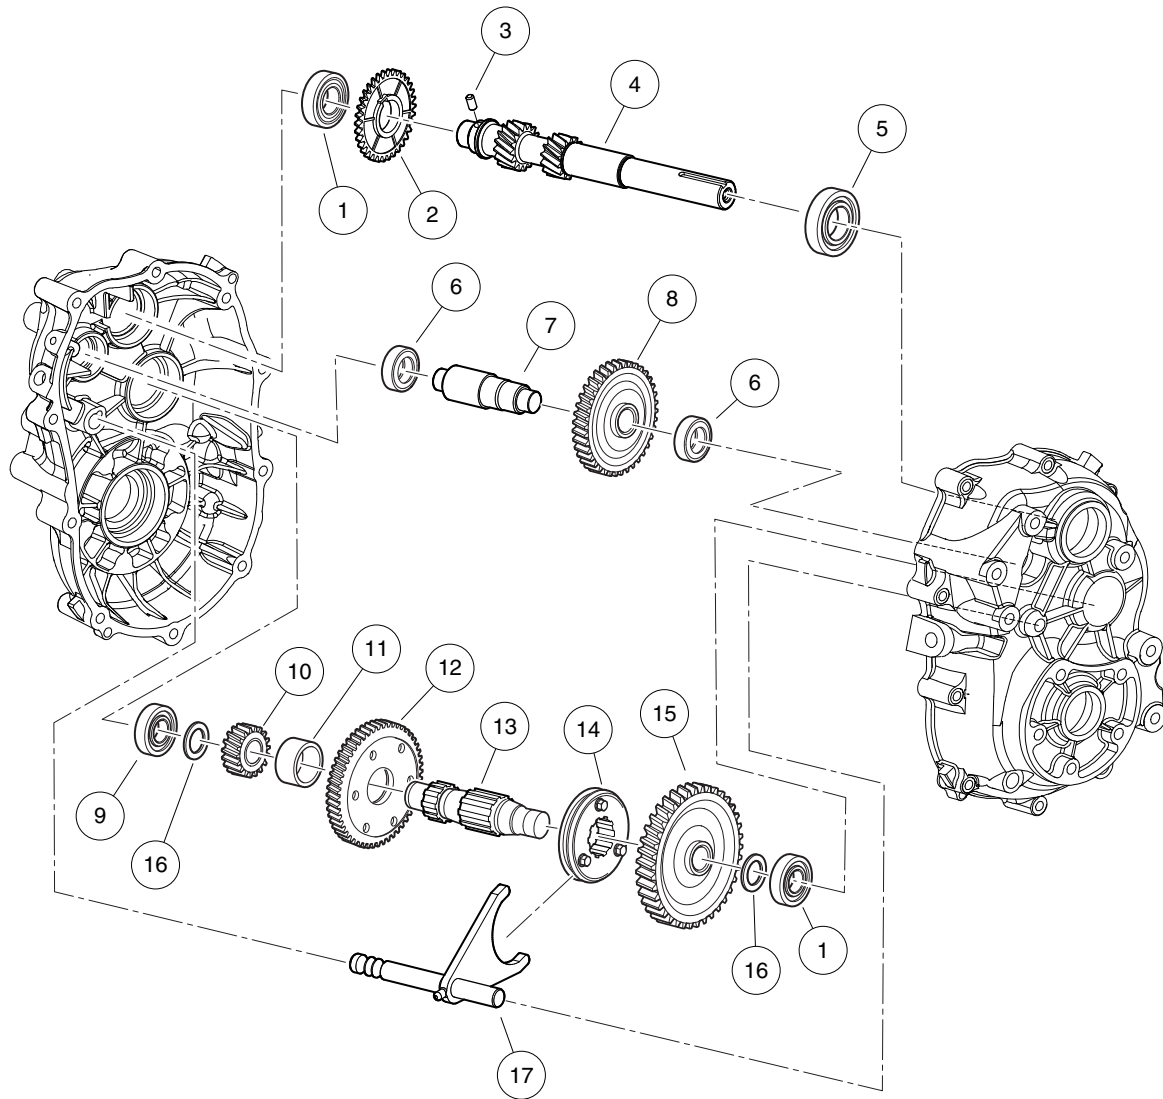

000919-003

TRANSAXLE (ED65), LIMITED SLIP AND OPEN – PAGE 2 OF 3

ITEM	PART NO.	DESCRIPTION	QTY	18
				G
		1 2 3 4		
1	<u>105027401</u>	Bearing, Ball (6204)	2	
2	<u>105027501</u>	Gear, Governor, 34 Tooth, ED65	1	
3	<u>105027601</u>	Pin, 6x12 Long, ED65	1	
4	<u>105027701</u>	Shaft, Input, ED65	1	
5	<u>105027801</u>	Bearing, Ball (6205 seal)	1	
6	<u>105027901</u>	Bearing, Ball (6202)	2	
7	<u>105028001</u>	Shaft, Counter, ED65	1	
8	<u>105028201</u>	Gear, 34 Tooth, ED65	1	
9	<u>105028401</u>	Bearing, Ball (6304)	1	
10	<u>105028601</u>	Gear, 17 Tooth, ED65	1	
11	<u>105028701</u>	Collar, 24 x 12, ED65	1	
12	<u>105028801</u>	Gear, 52 Tooth, ED65	1	
13	<u>105028901</u>	Shaft, Center, ED65	1	
14	<u>105029001</u>	Clutch, Pin, ED65	1	
15	<u>105029101</u>	Gear, 62 Tooth, ED65	1	
16	<u>105029201</u>	Spacer, 20x2, ED65	2	
17	<u>105030901</u>	Shaft, Shift, ED65	1	
Note: To identify your transaxle, locate the serial number decal on the axle tube.				

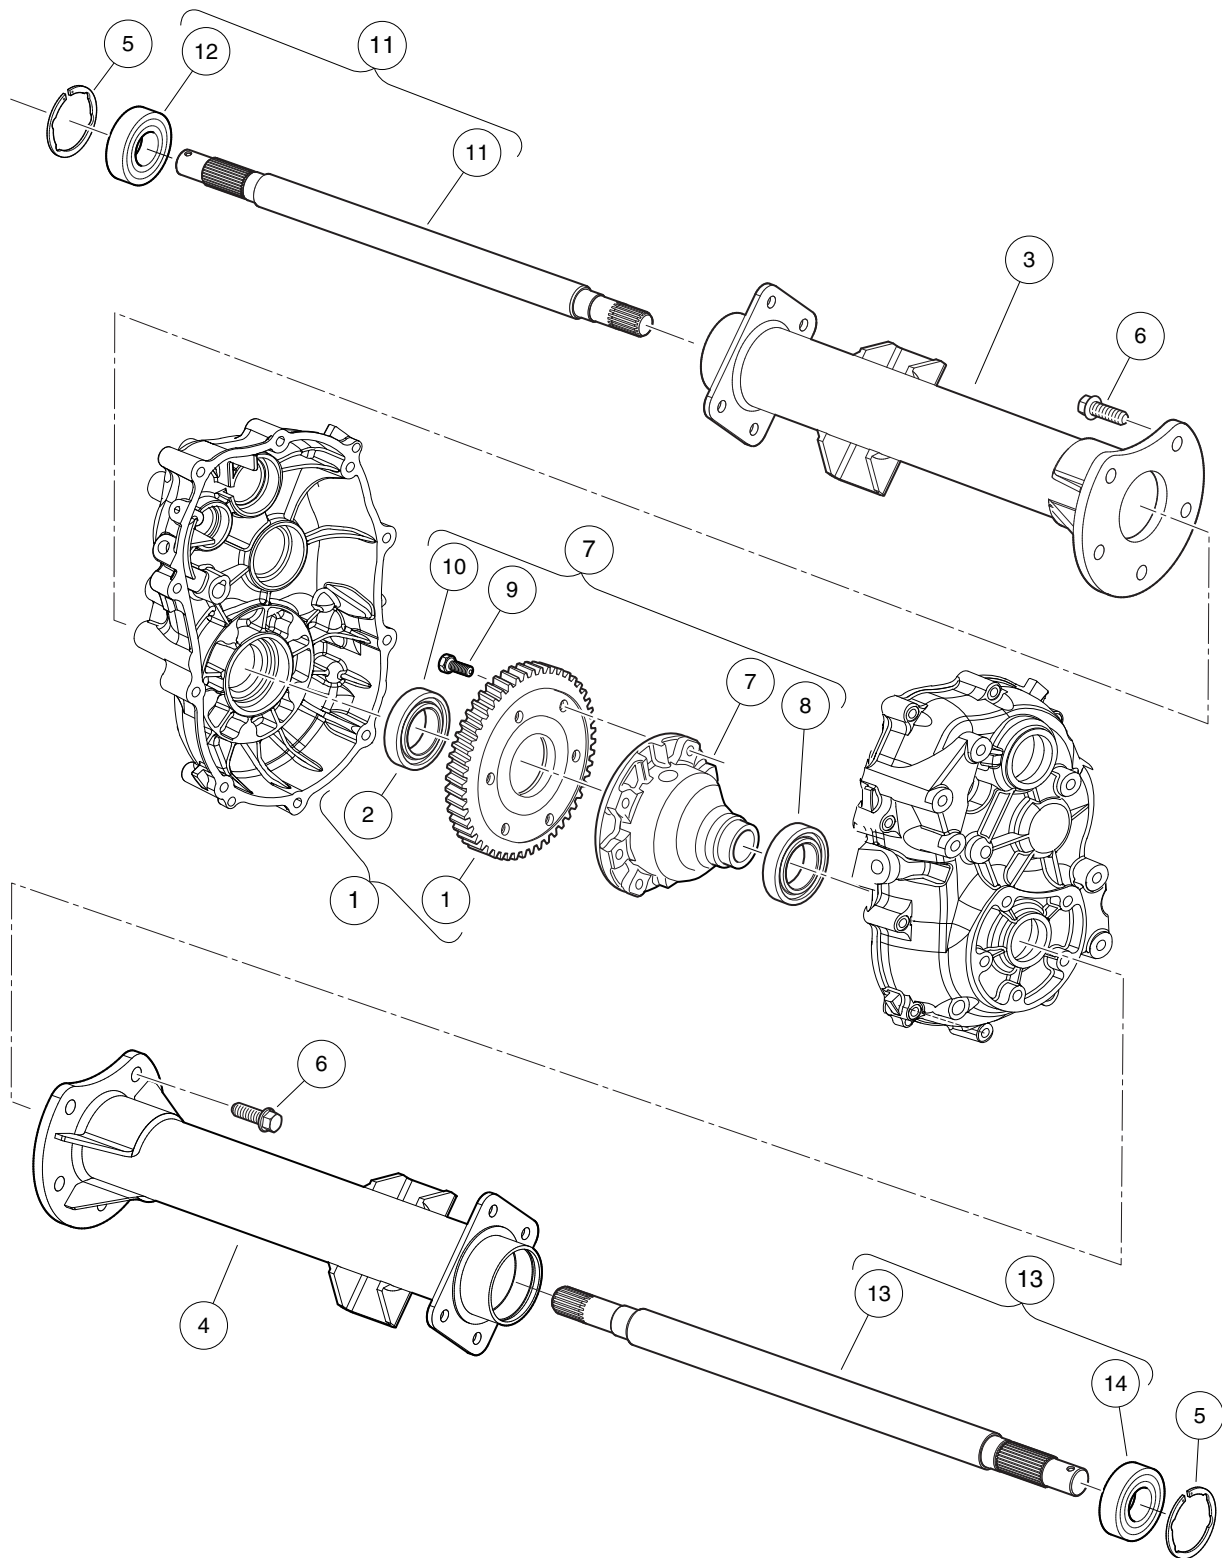


000919-005

TRANSAXLE (ED65), LIMITED SLIP – PAGE 3 OF 3

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	105029901	Gear, 60 Tooth, Complete, ED65 (includes item 2)	1
2	<u>105029801</u>	Bearing, Ball (6007)	1
3	105030401	Axle Tube, Driver-Side, ED65	1
4	105030501	Axle Tube, Passenger-Side, ED65	1
5	<u>105030601</u>	Snap Ring, 52mm, ED65	2
6	<u>105030801</u>	Bolt, Flange, M10-1.25x25, ED65	10
7	<u>105063601</u>	Differential, Limited-Slip, ED65 (includes items 8 through 10)	1
8	<u>105028101</u>	Bearing, Ball (6006)	1
9	<u>105029501</u>	Bolt, M10-1.25x26mm Lg, ED65	6
10	<u>105029801</u>	Bearing, Ball (6007)	1
11	<u>105066001</u>	Axle Shaft, Driver-Side, Complete, ED65 (includes item 12)	1
12	<u>105030301</u>	Bearing, Ball (6205DD)	1
13	<u>105066101</u>	Axle Shaft, Passenger-Side, Complete, ED65 (includes item 14)	1
14	<u>105030301</u>	Bearing, Ball (6205DD)	1
Note: To identify your transaxle, locate the serial number decal on the axle tube.			

18

G

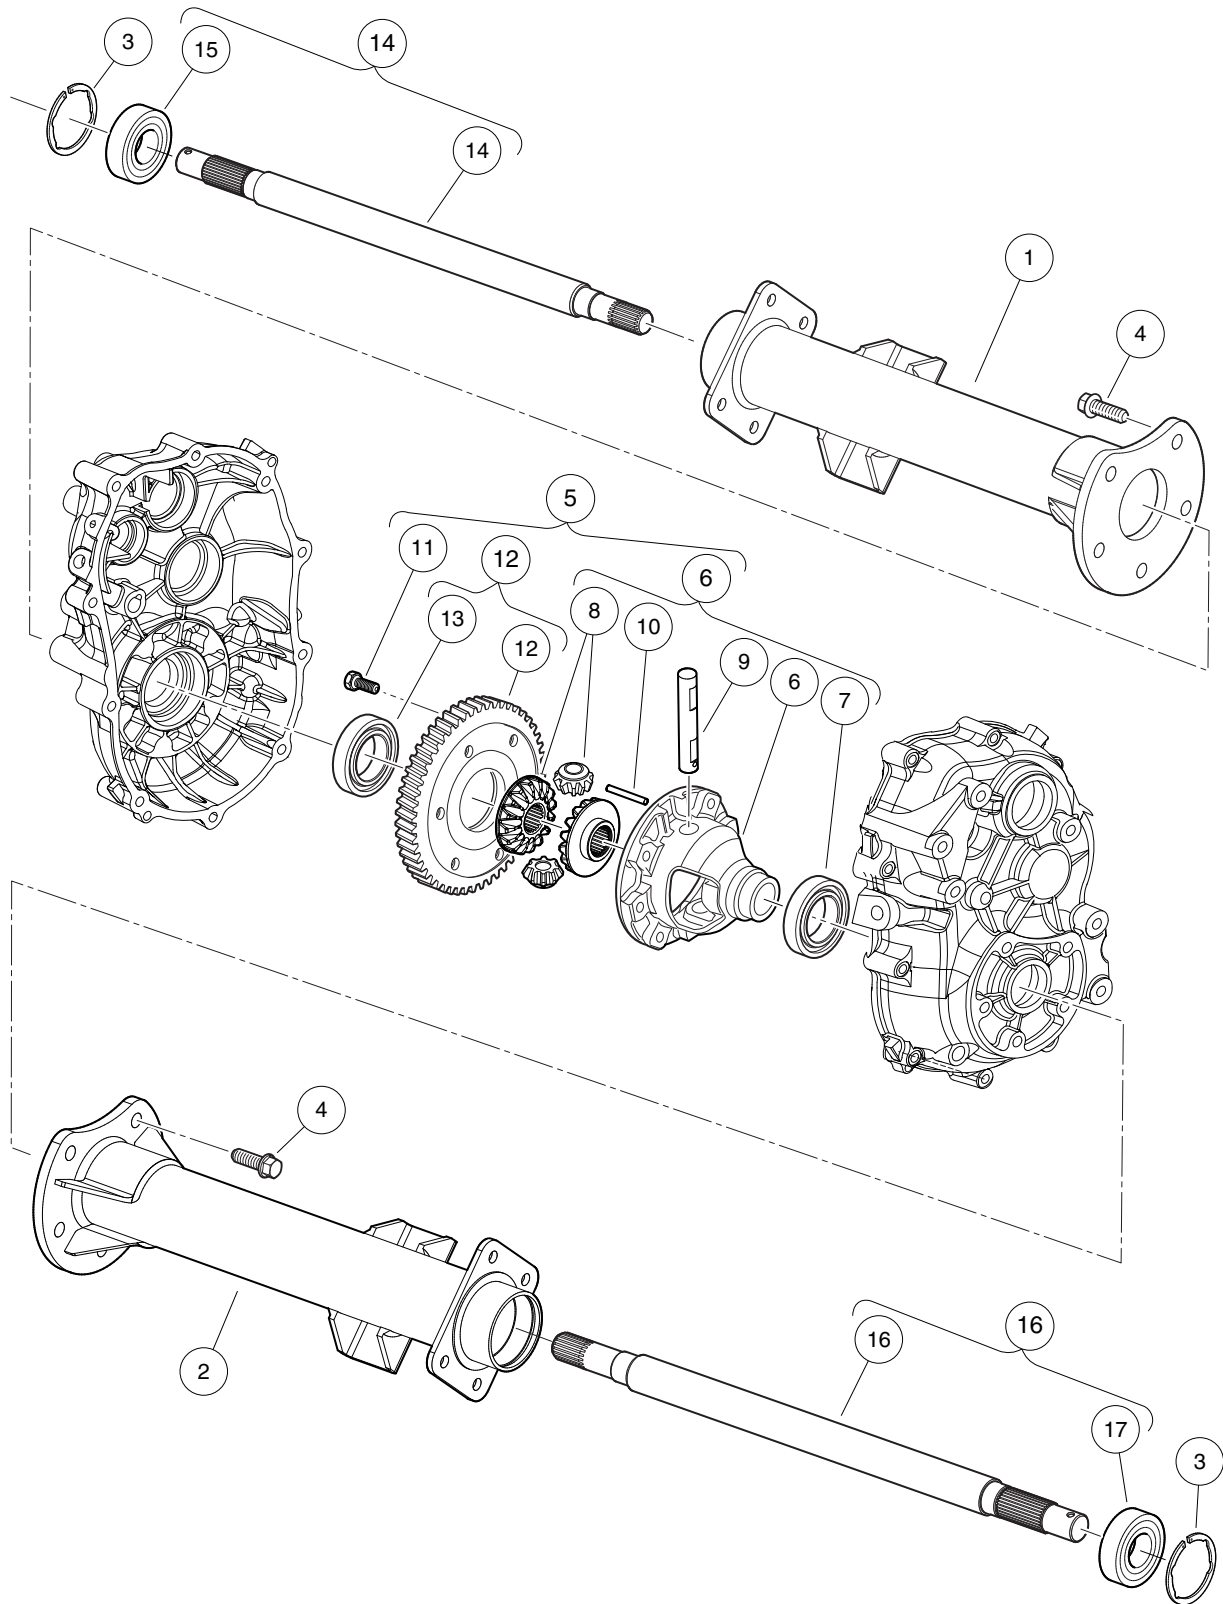


000919-004

TRANSAXLE (ED65), OPEN – PAGE 3 OF 3

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	105030401	Axle Tube, Driver-Side, ED65	1
2	105030501	Axle Tube, Passenger-Side, ED65	1
3	<u>105030601</u>	Snap Ring, 52mm, ED65	2
4	<u>105030801</u>	Bolt, Flange, M10-1.25x25, ED65	10
5	<u>105031001</u>	Differential, Open, ED65 (includes items 6 through 12)	1
6	<u>105029301</u>	Case, Differential, Complete, ED65 (includes items 7 through 10)	1
7	<u>105028101</u>	Bearing, Ball (6006)	1
8	105029401	Gear Set, Differential, ED65	1
9	<u>105029601</u>	Shaft, Differential, ED65	1
10	<u>105029701</u>	Pin, 4x40 Long, ED65	1
11	<u>105029501</u>	Bolt, M10-1.25x26mm Lg, ED65	6
12	105029901	Gear, 60 Tooth, Complete, ED65 (includes item 13)	1
13	<u>105029801</u>	Bearing, Ball (6007)	1
14	<u>105066001</u>	Axle Shaft, Driver-Side, Complete, ED65 (includes item 15)	1
15	<u>105030301</u>	Bearing, Ball (6205DD)	1
16	<u>105066101</u>	Axle Shaft, Passenger-Side, Complete, ED65 (includes item 17)	1
17	<u>105030301</u>	Bearing, Ball (6205DD)	1
Note: To identify your transaxle, locate the serial number decal on the axle tube.			

18

G

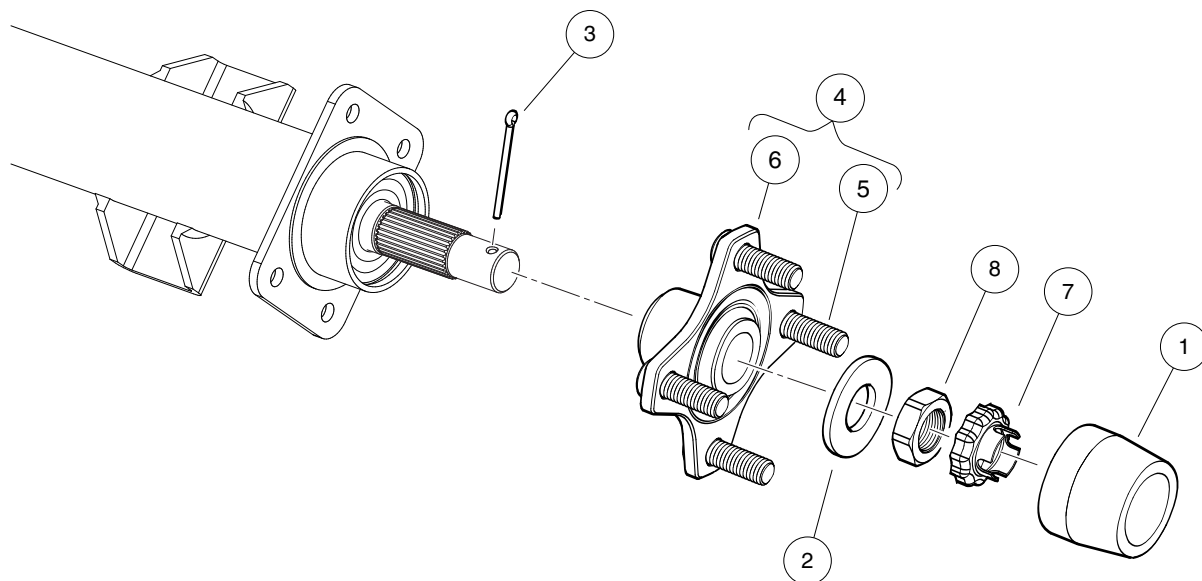


000919-006

HUB, REAR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102274101	Center Cap, Rubber	2
2	102617801	Washer, Hard, M22	2
3	103989501	Pin, Cotter, 9/64 X 1.75"	2
4	103995001	Asm, Hub, Machined, Golf/Utility (includes items 5 and 6)	2
5	103951501	Lug Stud, 1/2-20 UNF, SAE J1102	4
6	103979301	Hub, Machined, Golf/Utility	1
7	104021701	Retaining Ring, Hex Nut, M22	2
8	104027101	Nut, Hex, M22x1.5, Thin	2

18

G

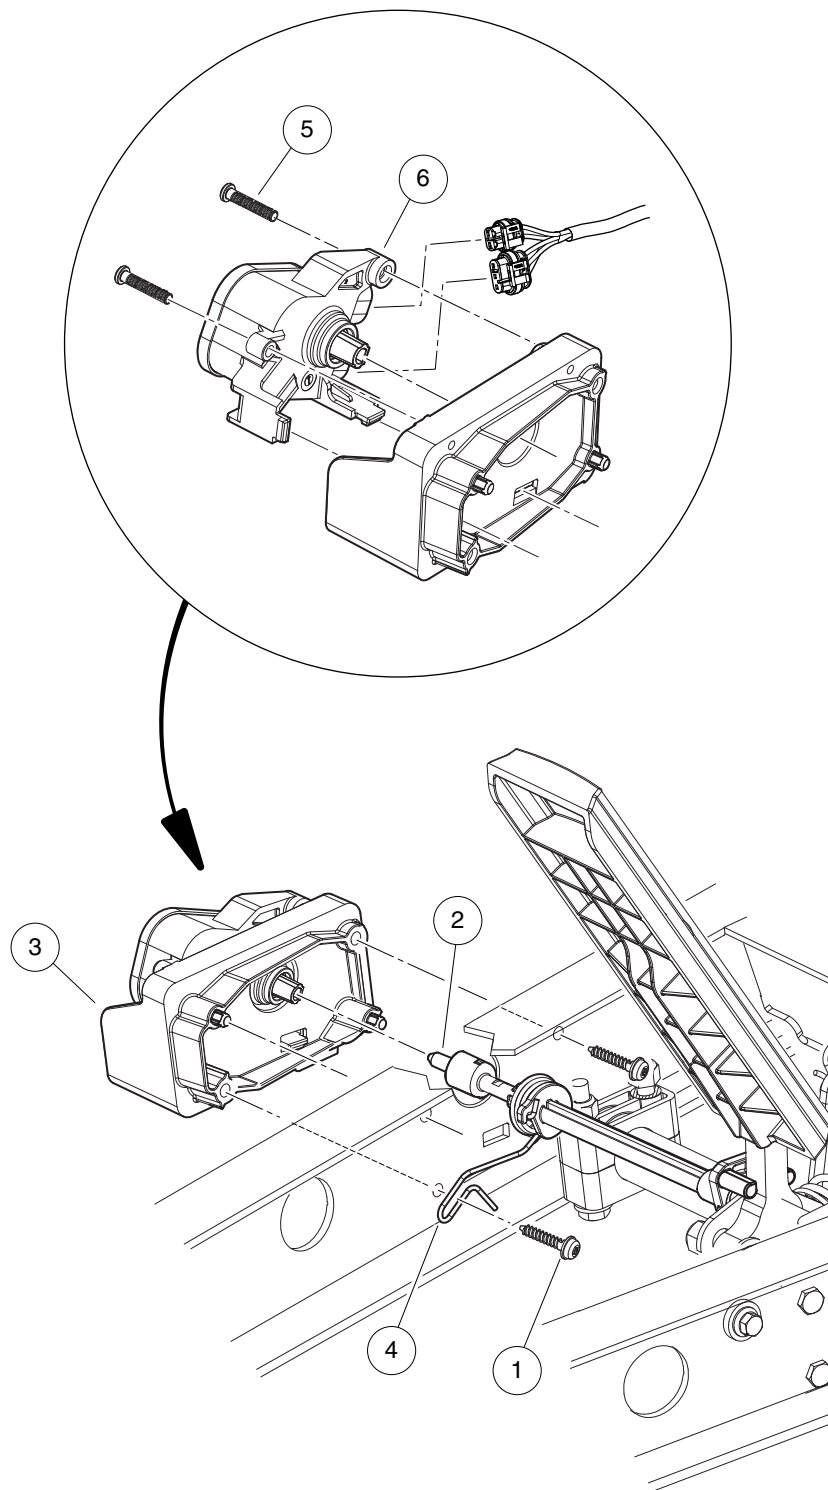


002522-001

MOTOR CONTROLLER OUTPUT REGULATOR (MCOR)

ITEM	PART NO.	DESCRIPTION	QTY	19
		1 2 3 4		
1	<u>102297230</u>	Screw, M6, Torx, Interlock Thread	2	
2	<u>103902101</u>	Bar, Drive, Cast	1	E
3	<u>103902301</u>	Housing, Mcor	1	
4	<u>103902401</u>	Spring, Torsion	1	
5	<u>103943401</u>	Screw, Pan, #10 X 1.00 Hi-lo	2	
6	<u>105116301</u>	MCOR4, Type 16 Switch	1	

19

E

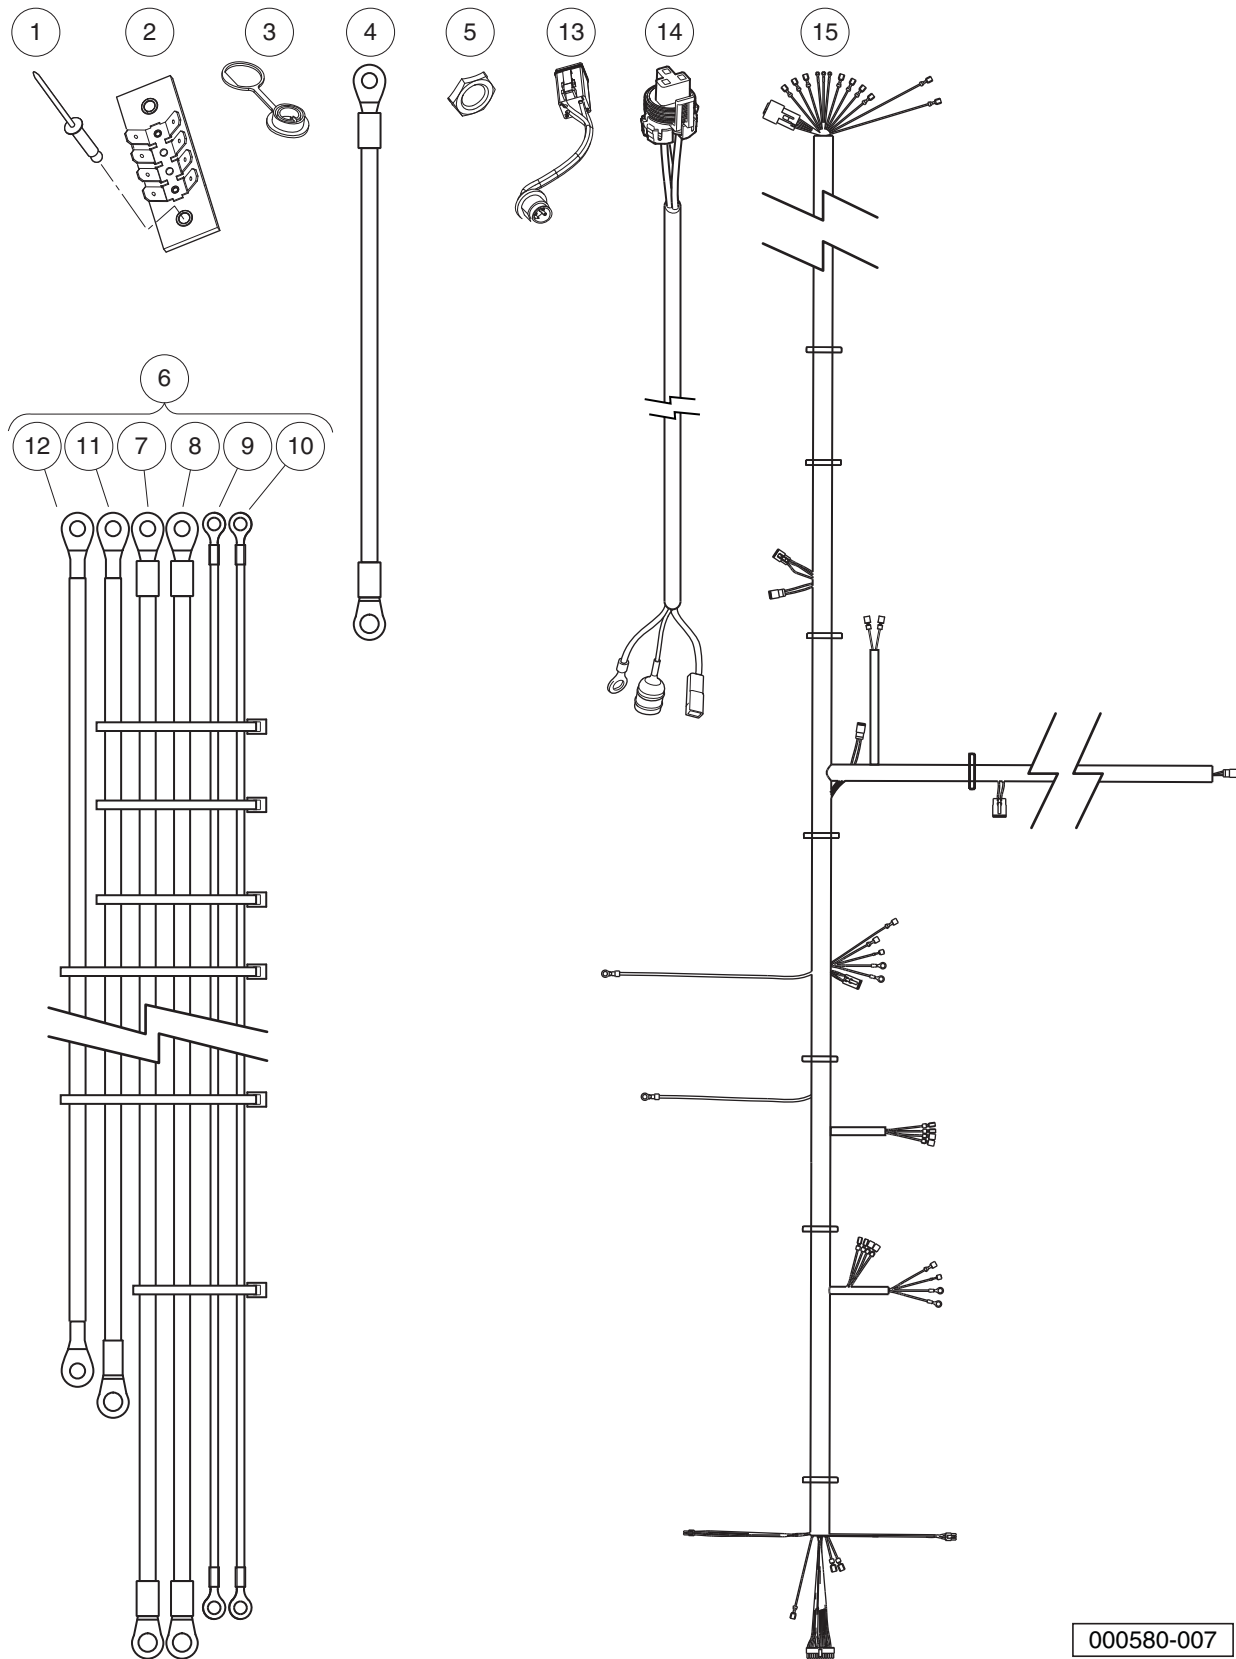


000580-007

WIRING – VILLAGER 6 IQ PLUS ELECTRIC

ITEM	PART NO.	DESCRIPTION	QTY	19
		1 2 3 4		
1	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2	
2	<u>1016356</u>	Terminal Block with Insulator	1	E
3	<u>102196901</u>	Dust Cap	1	
4	<u>102440901</u>	Wire Asm, #4 Yellow, 13"	1	
5	<u>102572401</u>	Nut, Diagnostic Port, Prec	1	
6	<u>102845501</u>	Harness, Power, Stretch IQ Plus (includes items 7 through 12)	1	
7	N/A	Asm, #4 Grn Wire, 89"	1	
8	N/A	Asm, #4 Wht Wire, 88.5"	1	
9	N/A	Asm, #10 Org Wire, 89.5"	1	
10	N/A	Asm, #10 Blu Wire, 95.5"	1	
11	N/A	Asm, #4 Red Wire, 67.5"	1	
12	N/A	Asm, #4 Blk Wire, 57.5"	1	
13	<u>103218601</u>	Harness, Diagnostic Port	1	
14	<u>103772101</u>	Charg Harness Iqplus,shelf 480	1	
15	<u>103940701</u>	Harness, Wire, CA6, Vill 6, IQ Plus, MCOR3/4	1	
Note: Wire Harness (item 15) is for use with MCOR3 and MCOR4.				

19

E

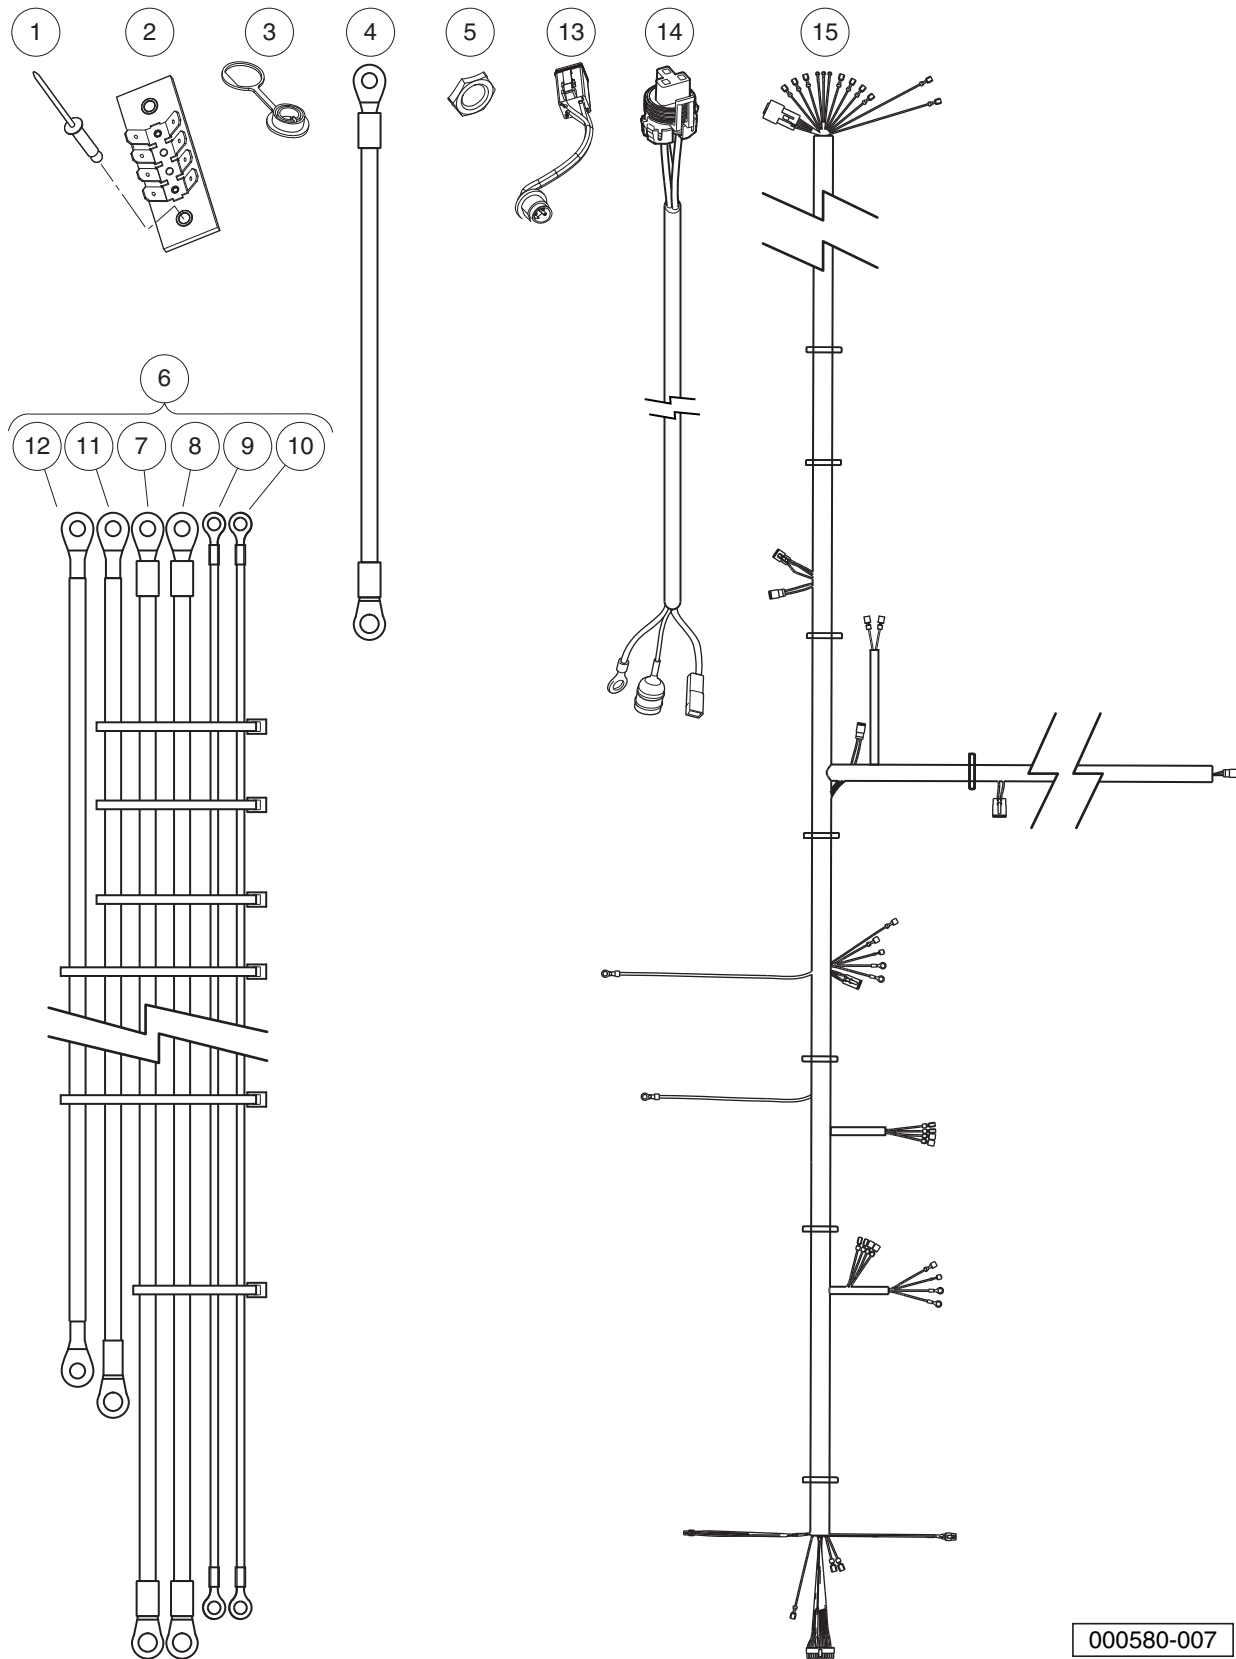


000580-007

WIRING – VILLAGER 8 IQ PLUS ELECTRIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2
2	<u>1016356</u>	Terminal Block with Insulator	1
3	<u>102196901</u>	Dust Cap	1
4	<u>102440901</u>	Wire Asm, #4 Yellow, 13"	1
5	<u>102572401</u>	Nut, Diagnostic Port, Prec	1
6	<u>102845501</u>	Harness, Power, Stretch IQ Plus (includes items 7 through 12)	1
7	N/A	Asm, #4 Grn Wire, 89"	1
8	N/A	Asm, #4 Wht Wire, 88.5"	1
9	N/A	Asm, #10 Org Wire, 89.5"	1
10	N/A	Asm, #10 Blu Wire, 95.5"	1
11	N/A	Asm, #4 Red Wire, 67.5"	1
12	N/A	Asm, #4 Blk Wire, 57.5"	1
13	<u>103218601</u>	Harness, Diagnostic Port	1
14	<u>103772101</u>	Charg Harness Iqplus,shelf 480	1
15	<u>103940801</u>	Harness, Vill 8, Iq Plus, Mc3	1
Note: Wire Harness (item 15) is for use with MCOR3 and MCOR4.			

19

E

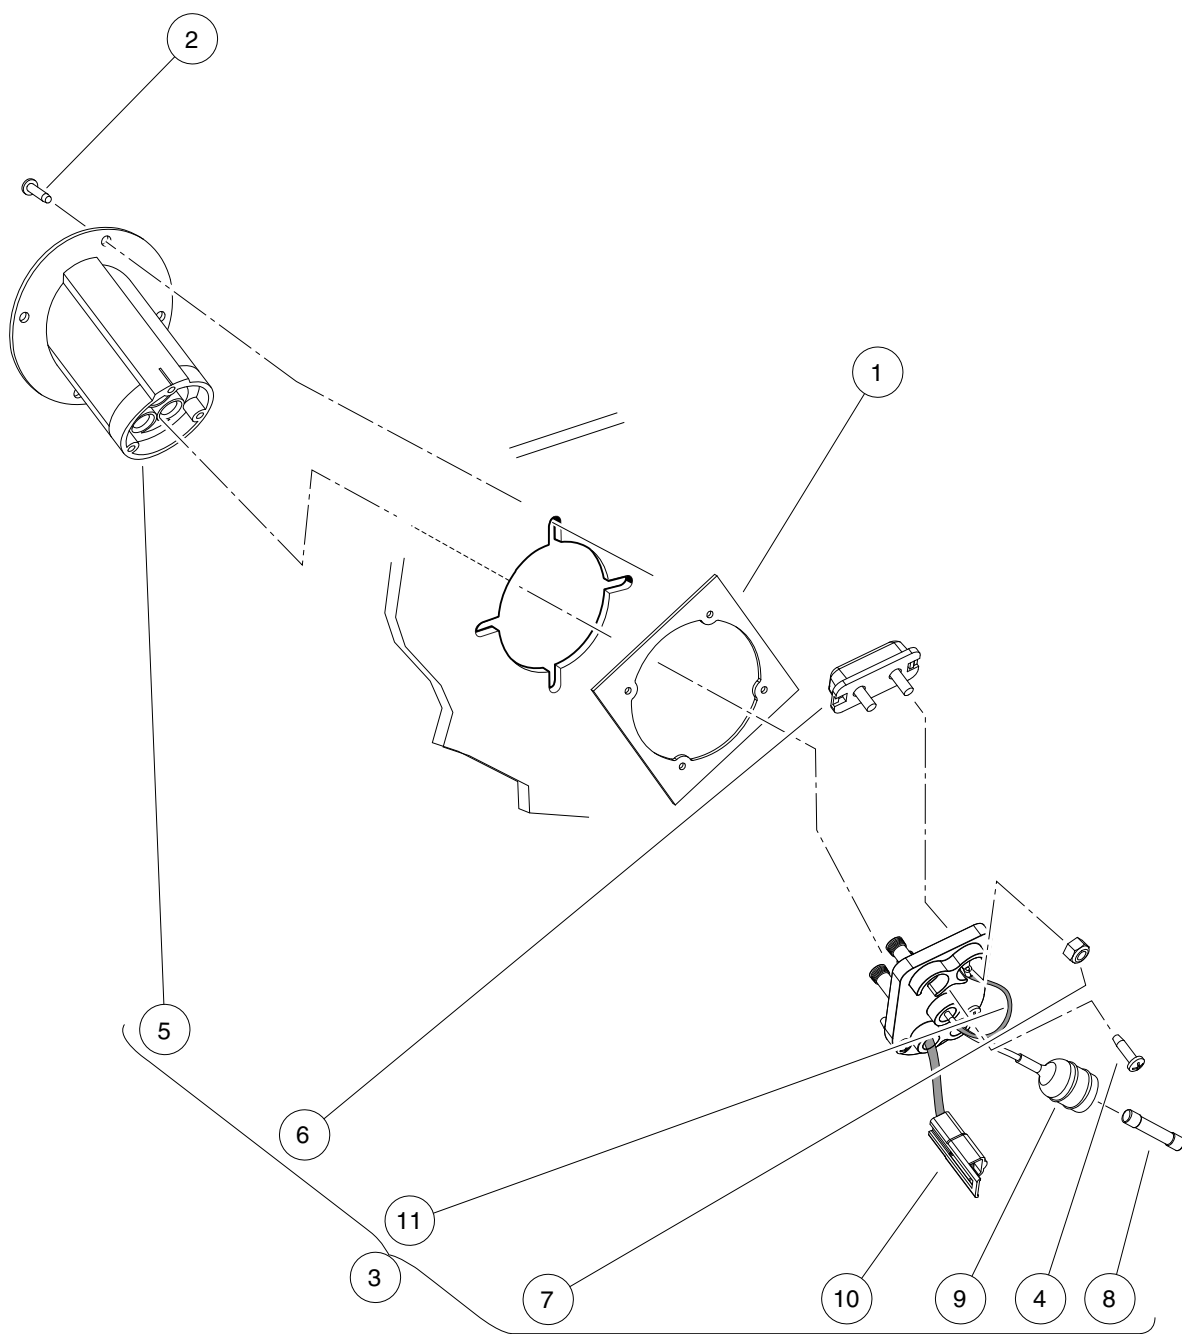


000369-002

BATTERY CHARGER RECEPTACLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101801001</u>	Plate, Receptacle Backing	1
2	<u>101832001</u>	Screw, #7-19 X 0.625 Phillips Pan-Head Tap	4
3	<u>103771901</u>	Asm, Fuse & Receptacle, 480 (includes items 4 through 11)	1
4	<u>1017705</u>	Screw, #8 X 5/8 Phillips Pan-Head Type AB	3
5	<u>101796501</u>	Receptacle	1
6	<u>101796801</u>	Fuse Assembly (includes item 7)	1
7	<u>1013061</u>	Locknut, #10-32 Nylon Insert	2
8	<u>101894901</u>	Fuse, 3/8-Amp	1
9	N/A	Wire Assembly, Sense Lead, Gray	1
10	N/A	Wire Assembly, #10 Red	1
11	N/A	Wire Assembly, #10 Black	1

19

E

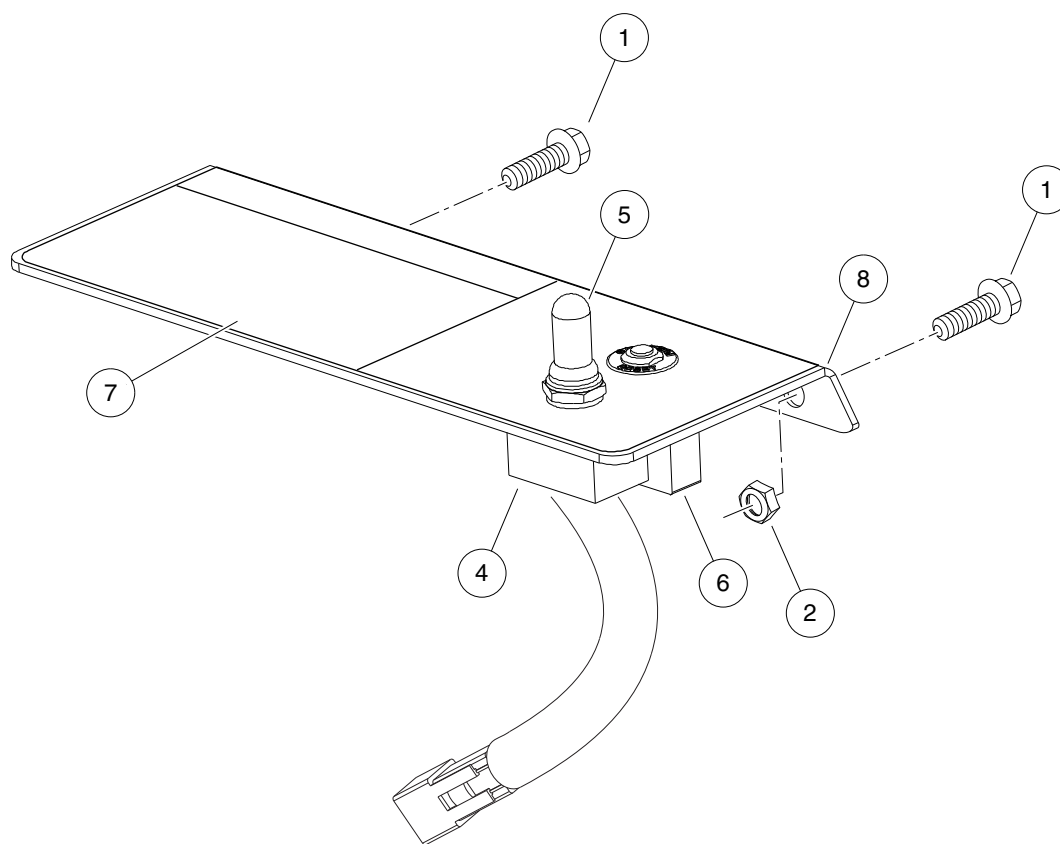

000425-001


TOW/RUN SWITCH – IQ PLUS VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012126</u>	Screw, #10-32 X .625 Hx Washer	1
2	<u>1013061</u>	Locknut, #10-32 Nylon Insert	2
3	N/A	Tow/Run Switch Assembly (includes items 4 through 8)	1
4	<u>101908101</u>	Switch Assembly, Tow/Run	1
5	<u>101908401</u>	Boot, Switch	1
6	<u>102838101</u>	Circuit Breaker 250vac-50vdc	1
7	<u>102845101</u>	Decal, Tow Switch	1
8	<u>102915701</u>	Plate, Switch, Run Tow, Mode	1

19
E

19

E

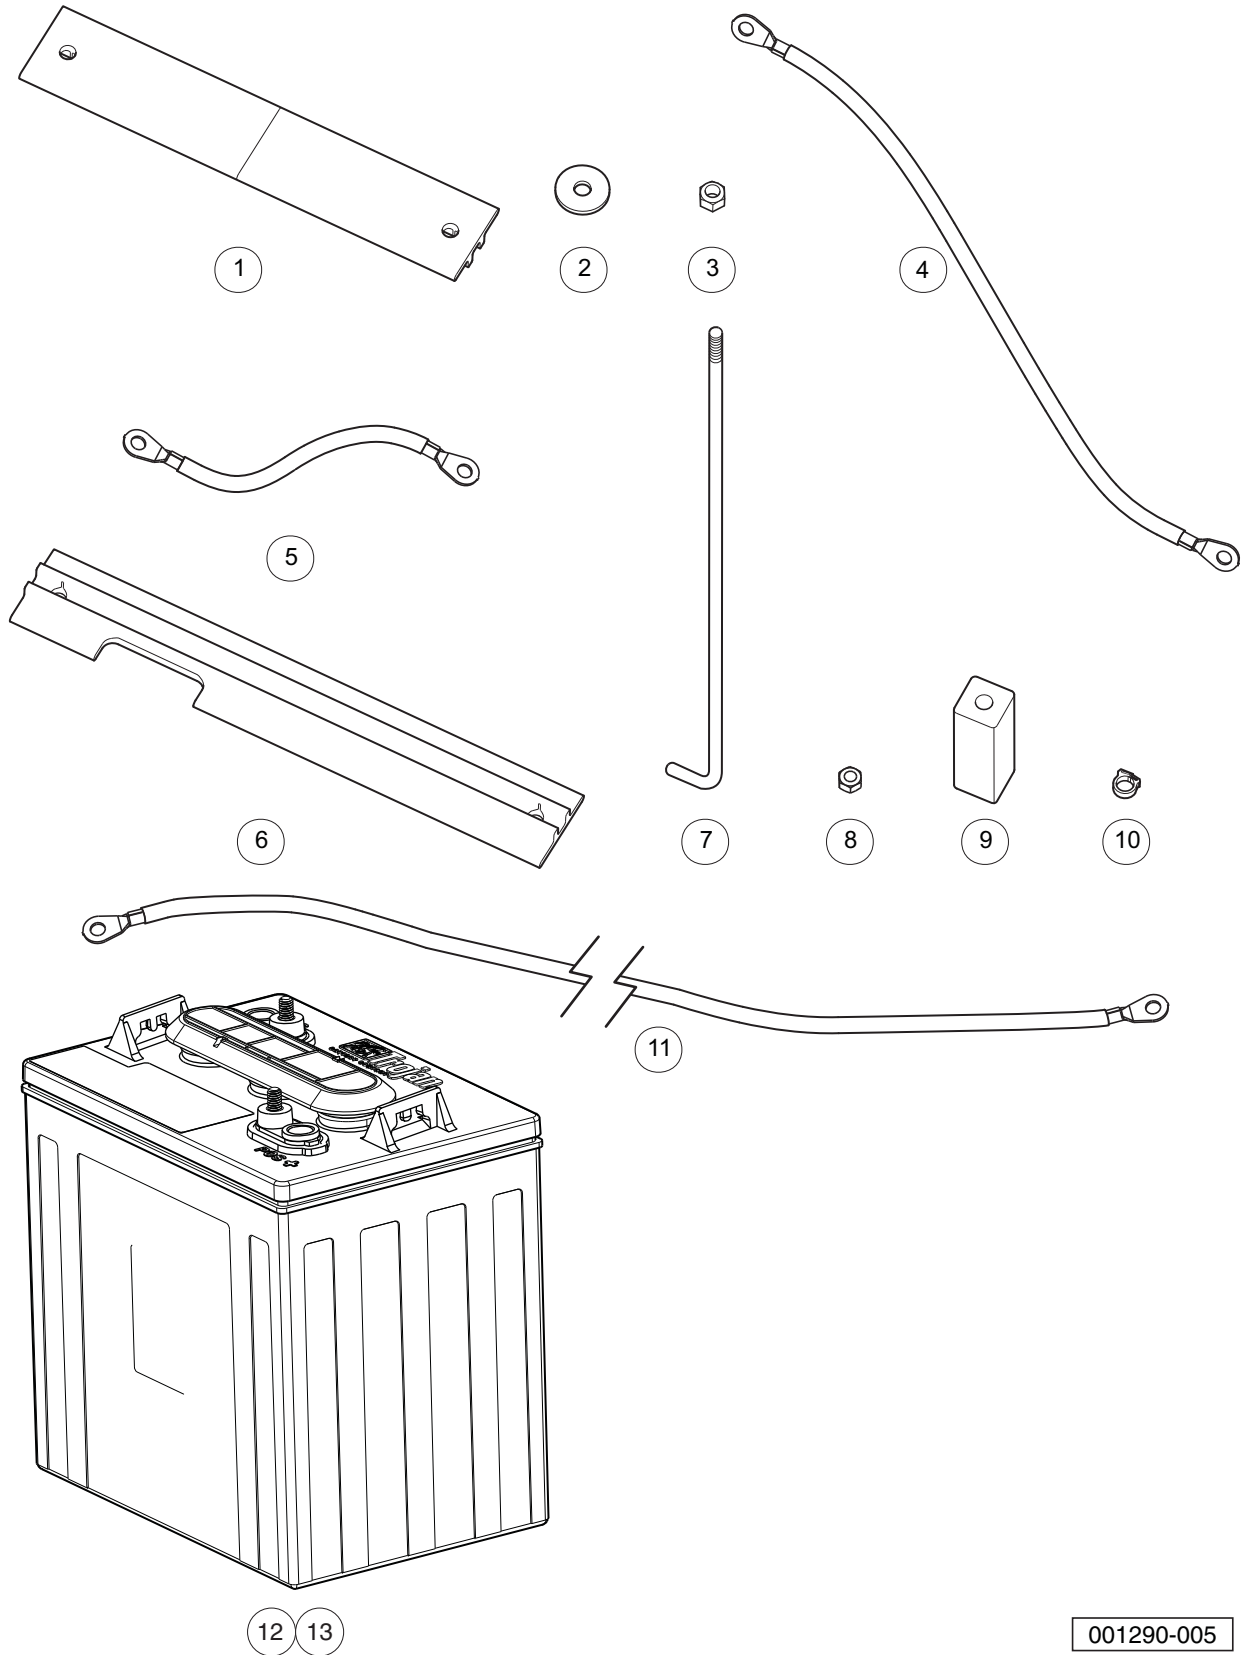

001290-005


BATTERIES, 6-VOLT, STANDARD DUTY, TROJAN

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101090801</u>	Hold-Down, Battery	2
2	<u>1011578</u>	Washer, 5/16 Type B Flat	12
3	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	12
4	<u>102002801</u>	Wire Assy, #4 Black	2
5	<u>102002901</u>	Wire Assy, #4 Black	3
6	<u>102766201</u>	Hold Down, Outside	4
7	<u>102845203</u>	Rod, Battery Hold Down 10.7"	12
8	<u>102873401</u>	5/16-18 Heavy Hex Nut	16
9	<u>102980801</u>	Extr, Plastic, 1 X 1 X 3	4
10	<u>102980901</u>	Clamp, Hose, Nylon, .25	1
11	<u>103198201</u>	Asm, #4 Blk Wire, 42"	1
12	<u>103969601</u>	Battery, 6-Volt, Trojan T105 (Wet) (includes item 13)	8
13	<u>101831401</u>	Battery Cap 6 Volt	1

19
E

19


E

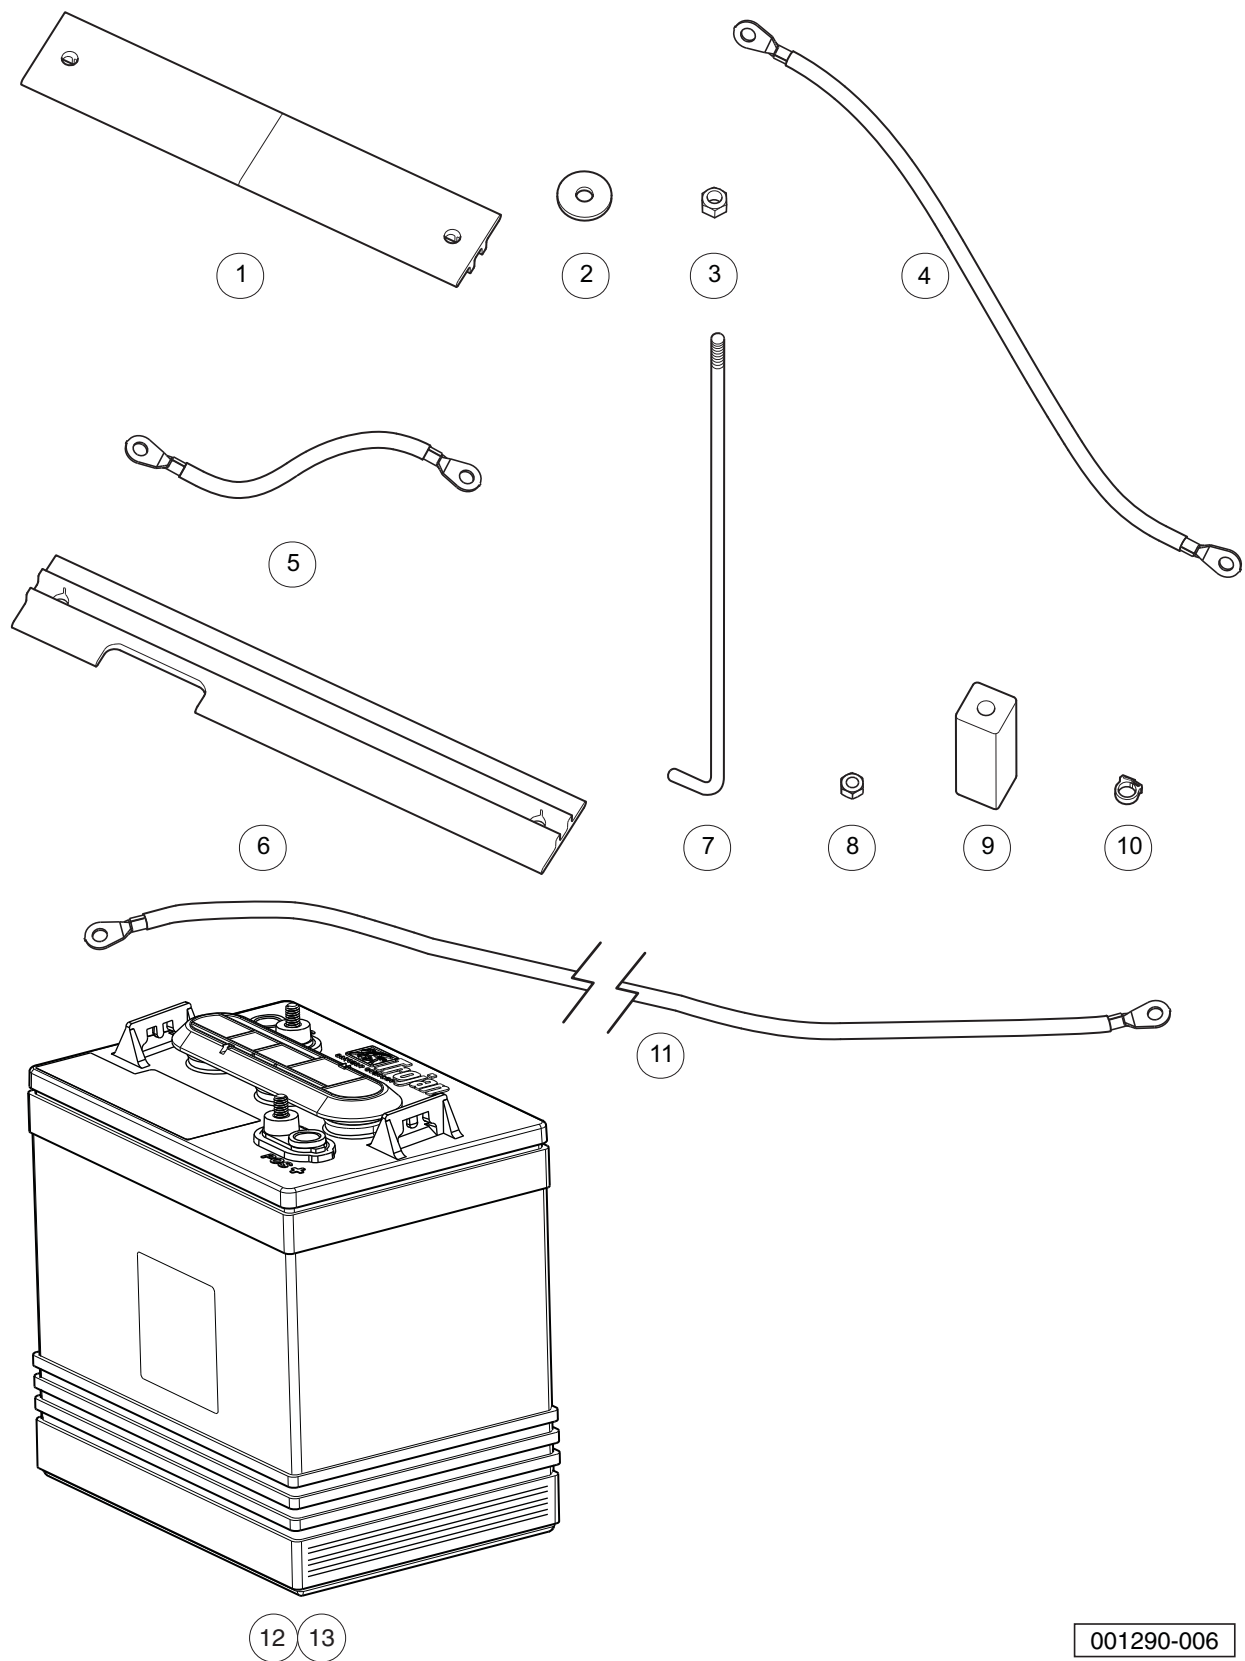

001290-006

BATTERIES, 6-VOLT, HEAVY DUTY, TROJAN

ITEM	PART NO.	DESCRIPTION	QTY	19
		1 2 3 4		
1	<u>101090801</u>	Hold-Down, Battery	2	
2	<u>1011578</u>	Washer, 5/16 Type B Flat	12	E
3	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	12	
4	<u>102002801</u>	Wire Assy, #4 Black	2	
5	<u>102002901</u>	Wire Assy, #4 Black	3	
6	<u>102766201</u>	Hold Down, Outside	4	
7	<u>102845204</u>	Rod, Battery Hold Down 12"	12	
8	<u>102873401</u>	5/16-18 Heavy Hex Nut	16	
9	<u>102980801</u>	Extr, Plastic, 1 X 1 X 3	4	
10	<u>102980901</u>	Clamp, Hose, Nylon, .25	4	
11	<u>103198201</u>	Asm, #4 Blk Wire, 42"	1	
12	<u>103969701</u>	Battery, 6-Volt, Trojan T145 (Wet) (includes item 13)	8	
13	<u>101831401</u>	Battery Cap 6 Volt	1	

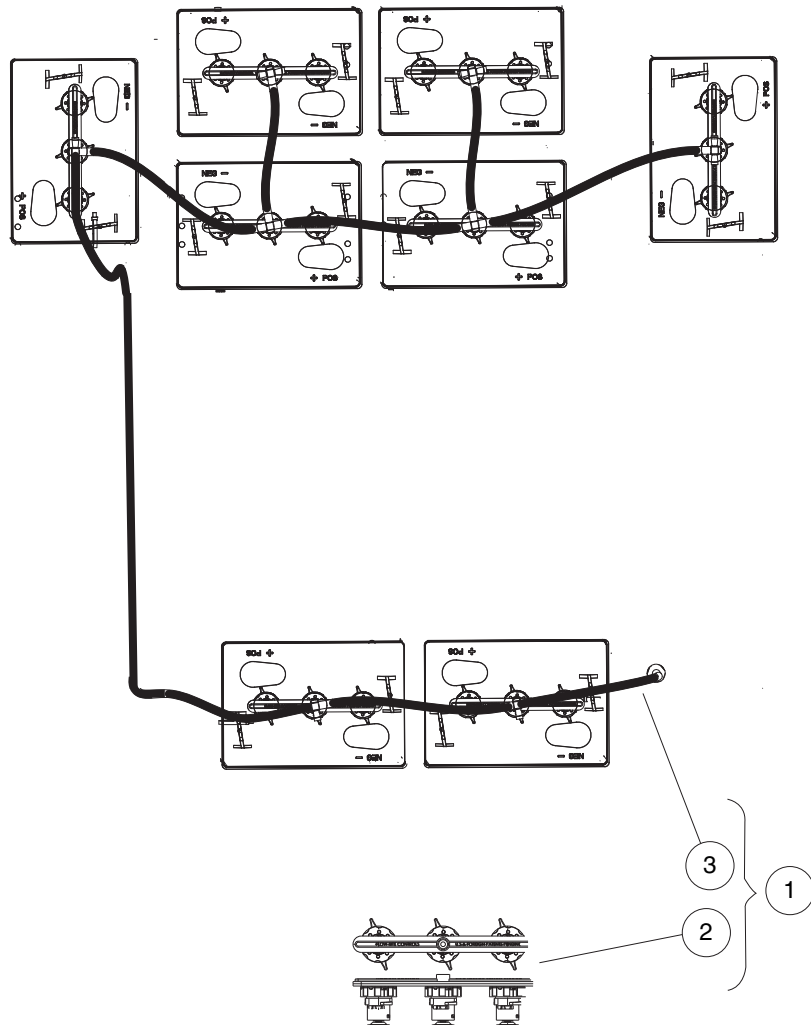


002525-001

SINGLE POINT WATERING SYSTEM (SPWS)

ITEM	PART NO.	DESCRIPTION	QTY	19
		1 2 3 4		
1	<u>103942902</u>	Kit, Spws, Villager 6, 8 (includes items 2 and 3)	1	
2	<u>103510501</u>	Manifold, Lpr, 3 Vlve, Spw	8	E
3	<u>103942101</u>	Spws, Villager 6, 8	1	

19


E

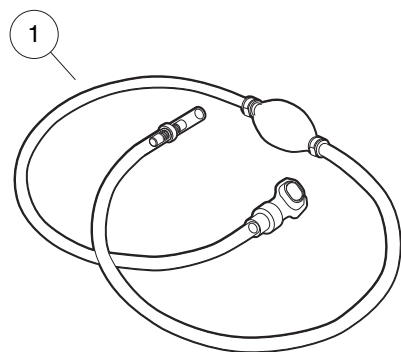

11




12

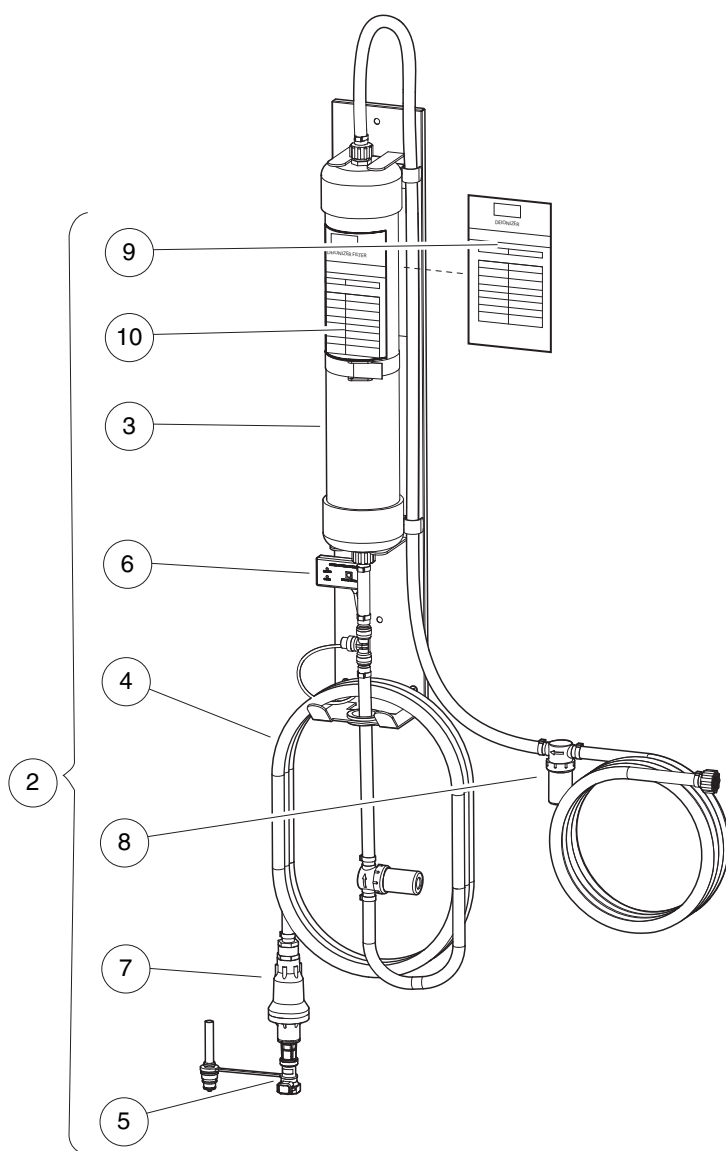

002523-003

HAND PUMP AND DEIONIZER (BATTERY-POWERED QUALITY LIGHT)

ITEM	PART NO.	DESCRIPTION	QTY	19
		1 2 3 4		
1	<u>104006101</u>	Kit, Hand Pump, Spws	1	
2	<u>105166801</u>	Deionizer, w/Battery-Powered Water Quality Light (includes items 3 through 10)	1	E
3	<u>104005901</u>	Cartridge, Deionizer	1	
4	<u>105166901</u>	Hose,outlet,deionizer	1	
5	<u>105167001</u>	Flow Ind, W/coupler, Deionizer	1	
6	<u>105167101</u>	Light, Quality, Battery-Powered, w/T-Fitting	1	
7	<u>105168501</u>	Regulator, Pressure, Deionizer	1	
8	<u>105168601</u>	Strainer, In-line, Deionizer	1	
9	<u>AM1300001</u>	Decal, Filter Log, Blue	1	
10	<u>AM1300201</u>	Decal, Inspect Log, Yellow	1	
11	AM1300101	Decal, Filter Log, Blue, Pack of 100	A/R	
12	AM1300301	Decal, Inspect Log, Yellow, Pack of 100	A/R	

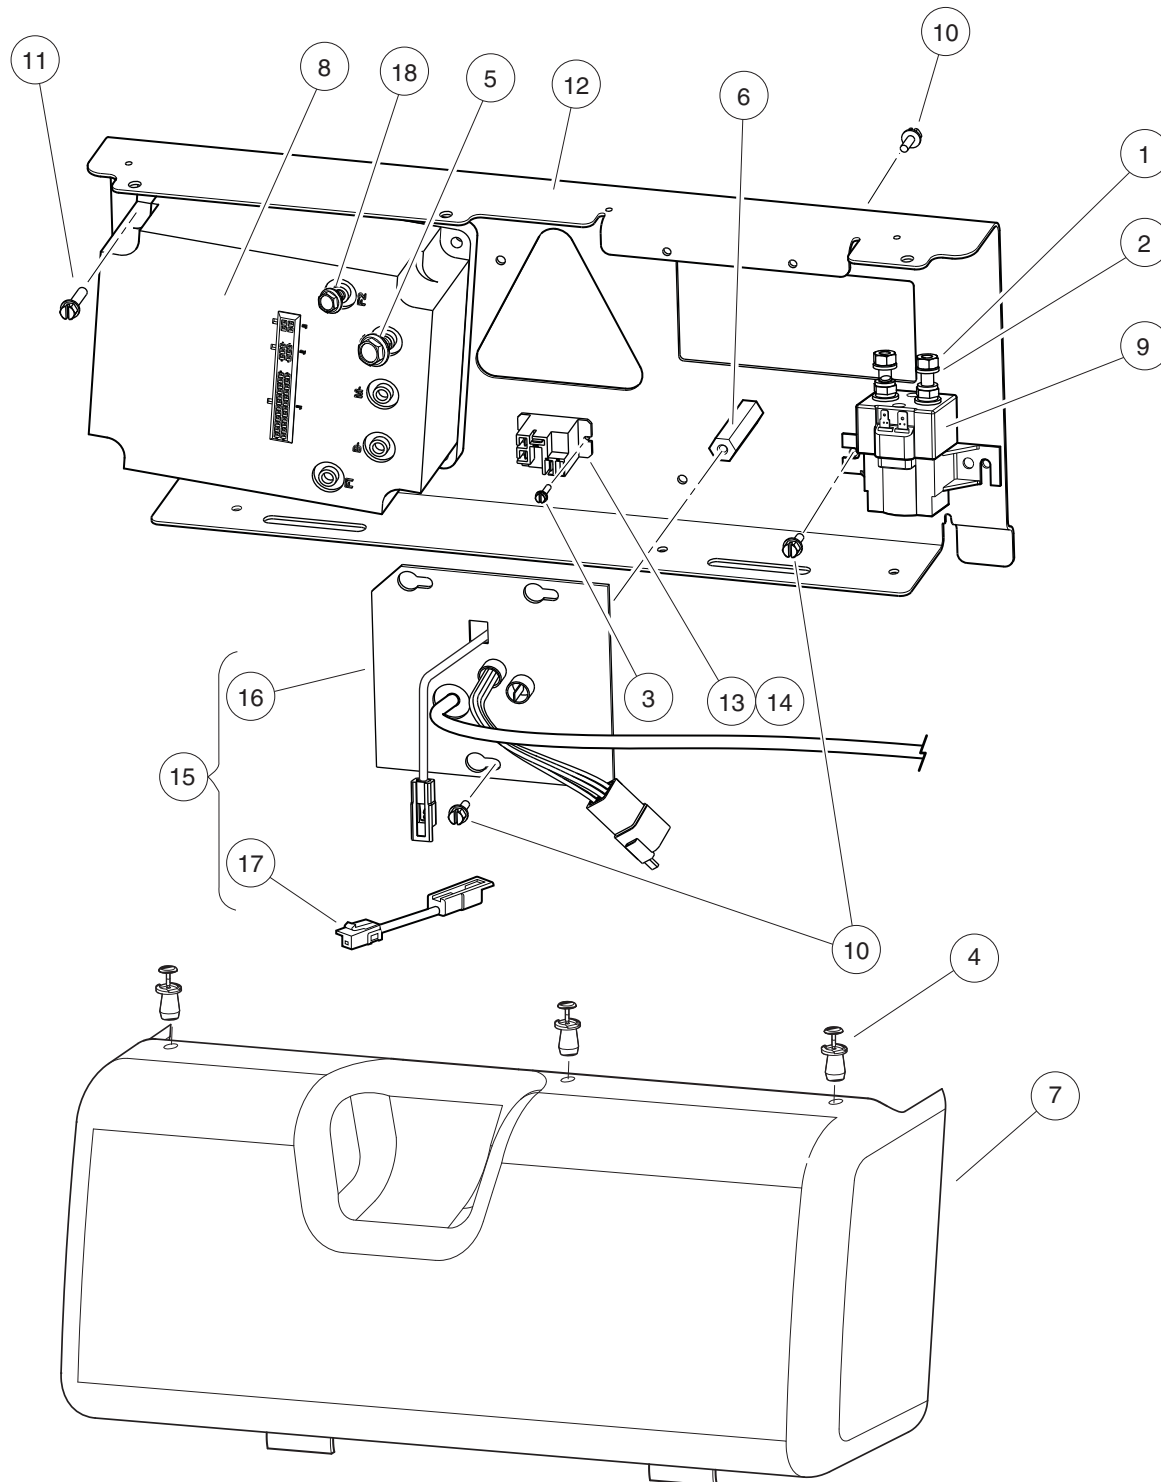



001246-004

COMPUTER, CONTROLLER, AND SOLENOID – FOR TROJAN BATTERIES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012528</u>	Nut, M8-1.25 Hex	2
2	<u>1013734</u>	Lockwasher, 8mm Split	2
3	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	2
4	<u>1016967</u>	Blind Rivet, Push Type	3
5	<u>102240501</u>	Bolt, Controller, Terminal	3
6	<u>102769701</u>	Spacer, 2", 1/4-20, Hex	1
7	<u>102772402</u>	Cover, Electrical Component, Carryall 6	1
8	<u>102774501</u>	Controller, 500 Amp	1
9	<u>102774701</u>	Solenoid, 48v	1
10	<u>102817101</u>	Screw, 1/4-20 X .50 Hex Wsh Hd	6
11	<u>102817201</u>	Screw, 1/4-20 X .88 Hex Wsh Hd	4
12	<u>102912801</u>	Plate, Component, Front	1
13	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes item 14)	1
14	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
15	<u>103697109</u>	Kit, Obc, Iqplus, A1, 64" (includes items 16 and 17)	1
16	<u>103709201</u>	Obc, Iqplus, A1, 64", 480	1
17	<u>103822101</u>	Adapter, 480 Obc To 56 Harn	1
18	<u>105000501</u>	Screw, M6 X 1 X 12 Ser Hex Flg	2

19

E

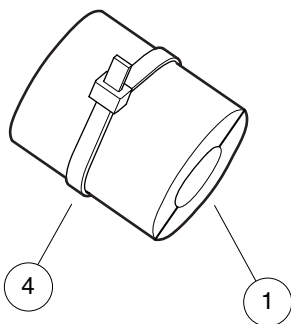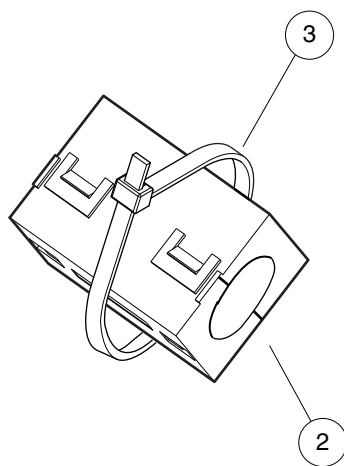

001055-001

FERRITE BEADS, CE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103449501</u>	Bead, Ferrite, Tdk	A/R
2	<u>103449601</u>	Bead, Ferrite, Fair-rite	A/R
3	<u>8639</u>	Tie Wrap, 11" Nylon	A/R
4	<u>8990</u>	Tie Wrap, 8" Nylon	A/R


19

E

MOTOR (MODEL DA5-4006) – IQ PLUS

20

E

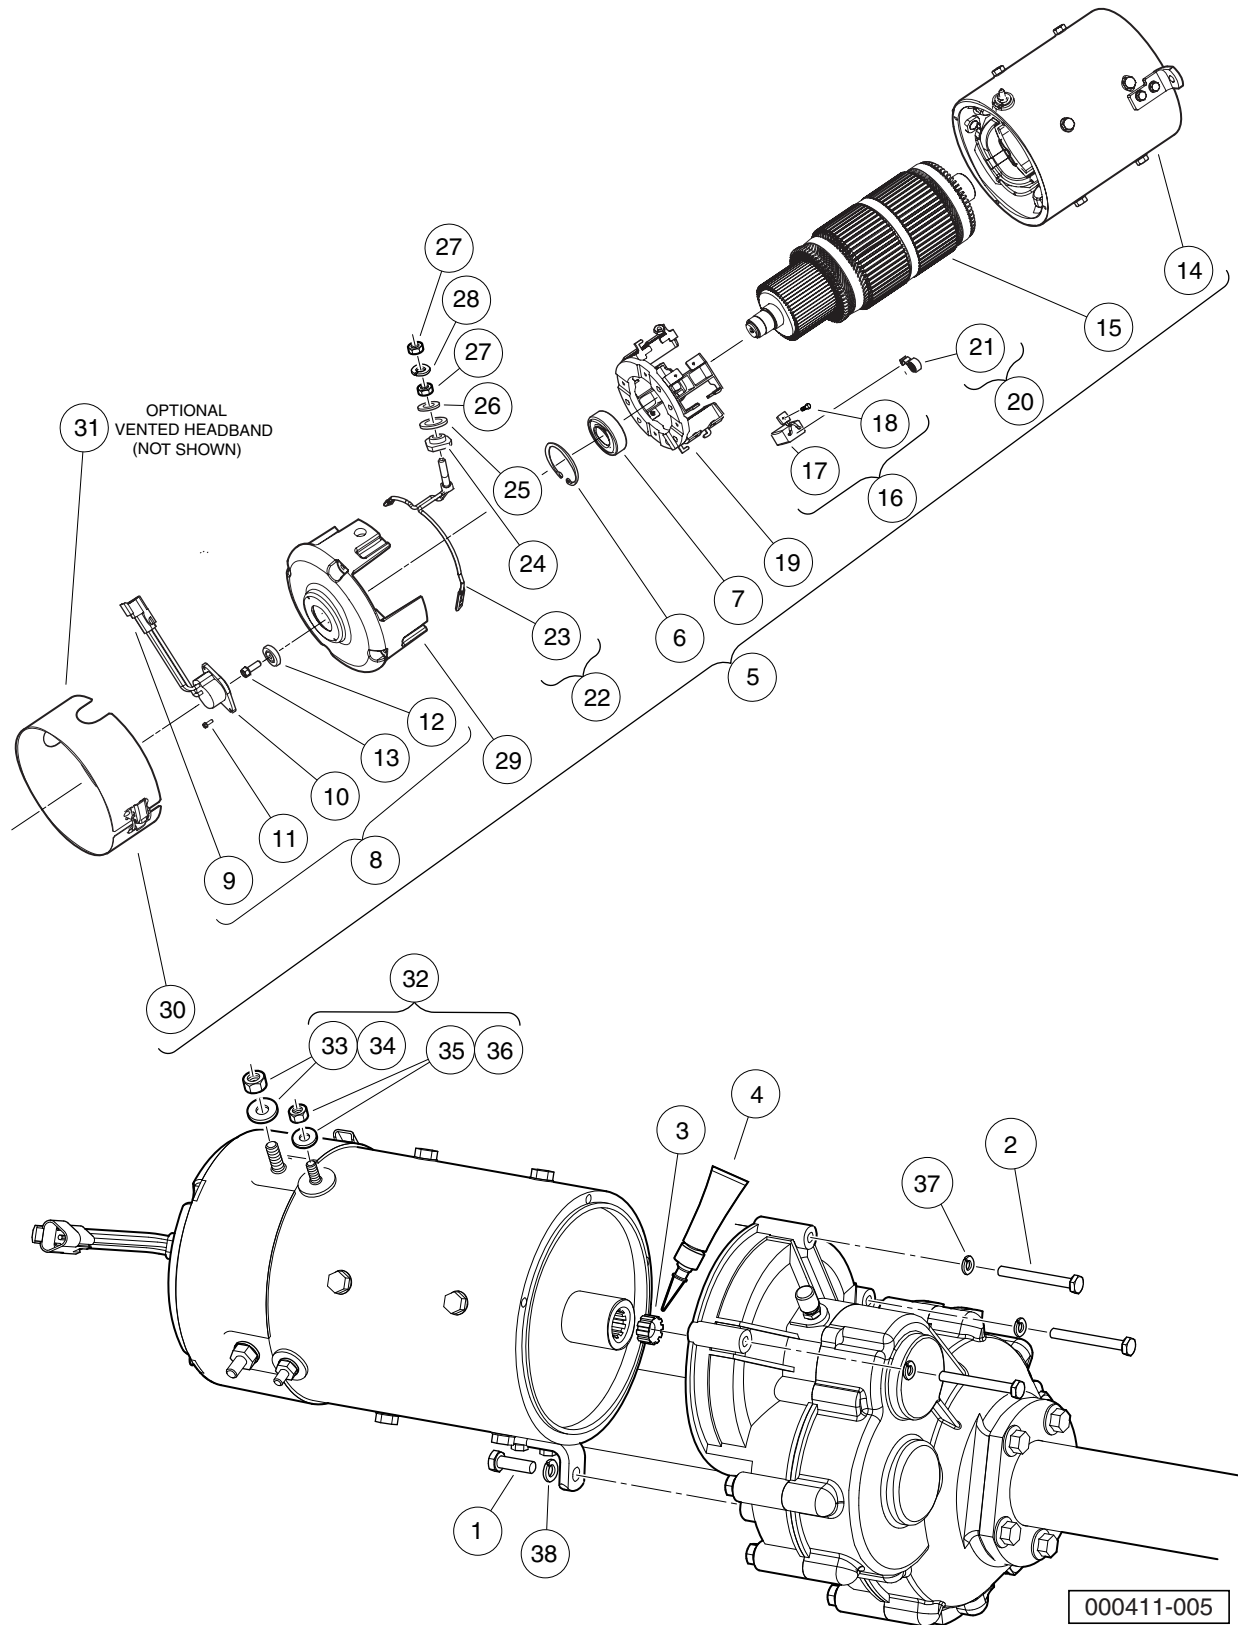


MOTOR (MODEL DA5-4006) – IQ PLUS

ITEM	PART NO.	DESCRIPTION	QTY	20
		1 2 3 4		
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1	
2	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	3	E
3	<u>102235201</u>	Bumper, Drive Unit	1	
4	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1	
5	<u>102775101</u>	IQ Plus Electric Motor, 48-VDC 3.7 hp (includes items 6 through 30)	1	
6	N/A	Ring, 2.24" Internal Retaining	1	
7	<u>102186401</u>	Bearing, Ball	1	
8	<u>102704901</u>	Kit, Speed Sensor (includes items 9 through 13)	1	
9	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1	
10	N/A	Sensor, Motor Speed, ADC	1	
11	N/A	Screw, #8-32, Taptite Thread	2	
12	N/A	Magnet, ADC Motor	1	
13	N/A	Screw, 1/4-20 x 0.5	1	
14	N/A	Asm, Frame And Field, 3.7 Hp	1	
15	N/A	Armature (Includes external hardware not shown)	1	
16	<u>102938601</u>	Kit, Brush, 3.7 Hp (includes items 17 and 18)	1	
17	N/A	Brush, Motor	8	
18	N/A	Screw, Taptite	8	
19	<u>102938701</u>	Asm, Brush Box, 3.7 Hp	1	
20	<u>102938801</u>	Kit, Brush Spring, 3.7 Hp (includes item 21)	1	
21	N/A	Brush Spring	8	
22	<u>102938901</u>	Kit, Brush Lead Asm, 3.7 Hp (includes items 23 through 28)	1	
23	N/A	Terminal and Lead Assembly	2	
24	N/A	Insulator, Terminal	2	
25	N/A	Washer, Insulating	2	
26	N/A	Washer, Flat, 5/16, Brass/Bronze	2	
27	N/A	Nut, 5/16, Steel	4	
28	N/A	Lockwasher, 5/16, Steel	2	
29	<u>102939001</u>	Commutator End Head, 3.7 Hp	1	
30	<u>102939101</u>	Sealed Headband, 3.7 Hp	1	
31	<u>102939102</u>	Vented Headband, 3.7 HP (optional - not shown)	1	
32	<u>102951701</u>	Pkg, Terminal Hardware, 3.7hp (includes items 33 through 36)	1	
33	N/A	Nut, 5/16, Steel	2	
34	N/A	Lockwasher, 5/16, Steel	2	
35	N/A	Nut, 1/4-20, Steel	2	
36	N/A	Lockwasher, 1/4-20, Steel	2	
37	<u>451</u>	Lockwasher, 1/4 Split	3	
38	<u>7174</u>	Lockwasher, 5/16 Split	1	

TRANSAXLE – ELECTRIC VEHICLES

21

E

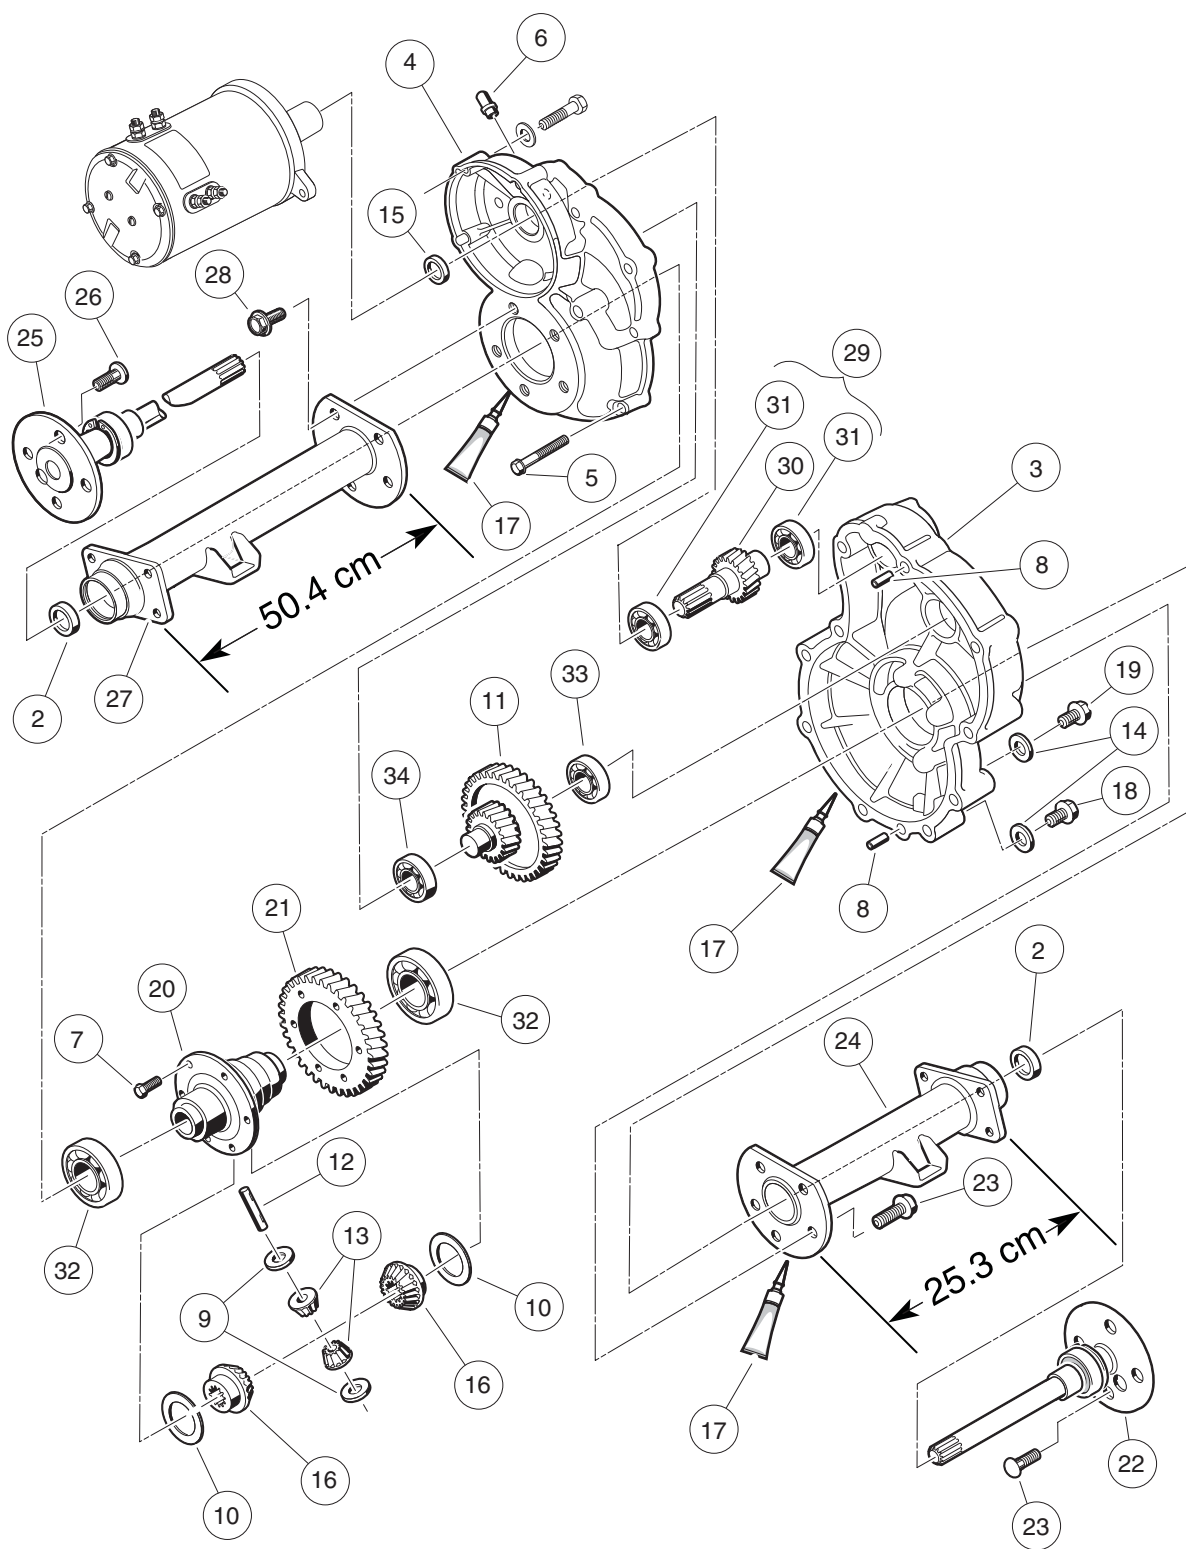


000223-005

TRANSAXLE – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102771701</u>	Transaxle, Electric (includes items 2 through 34)	1
2	<u>1013794</u>	Axle Shaft Oil Seal	2
3	<u>101895401</u>	Gear Case, Driver-Side	1
4	<u>101895501</u>	Gear Case, Passenger-Side	1
5	<u>101897001</u>	Screw, M8-1.25 X 60mm Hex-Head	11
6	<u>101897201</u>	Breather	1
7	<u>101897401</u>	Screw, M10-1.25 X 25mm	6
8	<u>101897601</u>	Pin, 11mm OD X 8.5mm ID X 10mm	2
9	<u>101903601</u>	Washer, Thrust	2
10	<u>101903701</u>	Washer, Thrust	2
11	<u>101906901</u>	Intermediate Shaft Assembly	1
12	<u>101922101</u>	Pin, 15.99mm X 88.7mm Dowel	1
13	<u>101923001</u>	Gear, Differential Idler	2
14	<u>101923201</u>	Gasket	2
15	<u>101923501</u>	Seal, Lip	1
16	<u>101923901</u>	Gear, Differential	2
17	<u>101928701</u>	Liquid Gasket (Transaxle case)	1
18	<u>101972101</u>	Plug, M14-1.5 X 12mm Magnetic	1
19	<u>101972201</u>	Plug, M14-1.5 X 12mm Hex	1
20	<u>102356601</u>	Housing, Differential, 6 Bolt	6
21	<u>102356801</u>	Gear, Differential Output, 6-Bolt	6
22	<u>102886301</u>	Axle Assembly, Driver-Side (includes item 23)	1
23	<u>101922201</u>	Lug Stud	4
24	<u>102886401</u>	Tube, Axle, Driver-Side	1
25	<u>102886501</u>	Axle Assembly, Passenger-Side (includes item 26)	1
26	<u>101922201</u>	Lug Stud	4
27	<u>102886601</u>	Tube, Axle, Passenger-Side	1
28	<u>102902801</u>	Screw, M10 X 30	10
29	<u>103582801</u>	Asm, E Trans Shaft/bearing (includes items 30 and 31)	1
30	N/A	Shaft, Input	1
31	<u>7335</u>	Bearing	2
32	<u>7330</u>	Inner Axle Tube Bearing	2
33	<u>7335</u>	Bearing	1
34	<u>7336</u>	Bearing	1

21

E

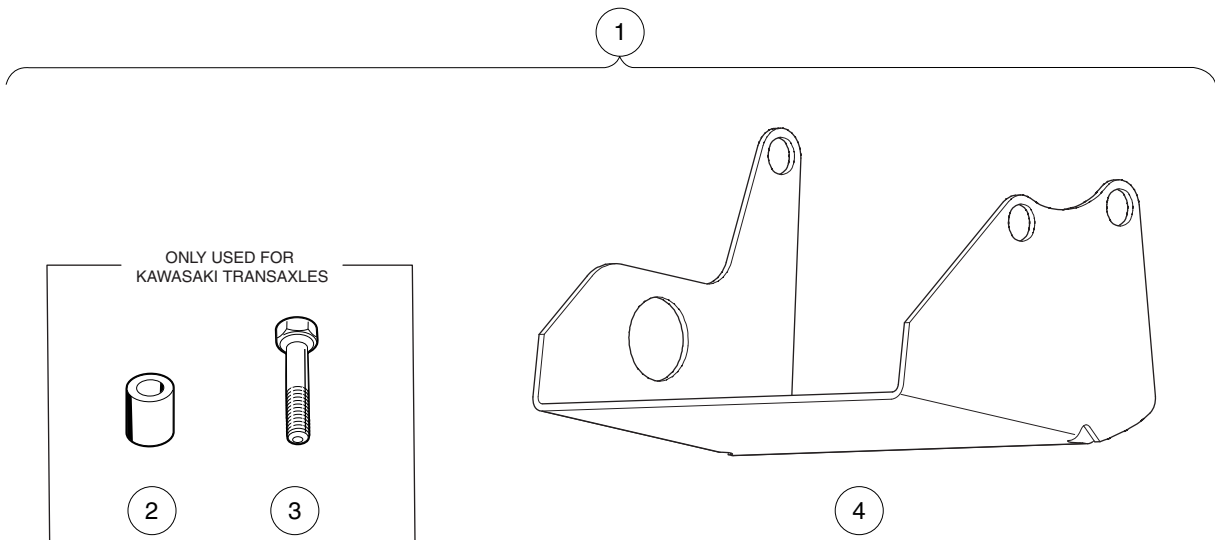

000365-002


DIFFERENTIAL GUARD – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	21
		1 2 3 4		
1	<u>101611402</u>	Kit, Differential Guard, Elec Vehicles (includes items 2 through 4)	1	
2	<u>101914001</u>	Spacer, Steel	2	E
3	<u>101936101</u>	Screw, M10-1.50 X 60mm Hex Cap	2	
4	<u>101978601</u>	Guard, Differential, Electric Vehicle Transaxle	1	

BATTERY CHARGERS

22

E

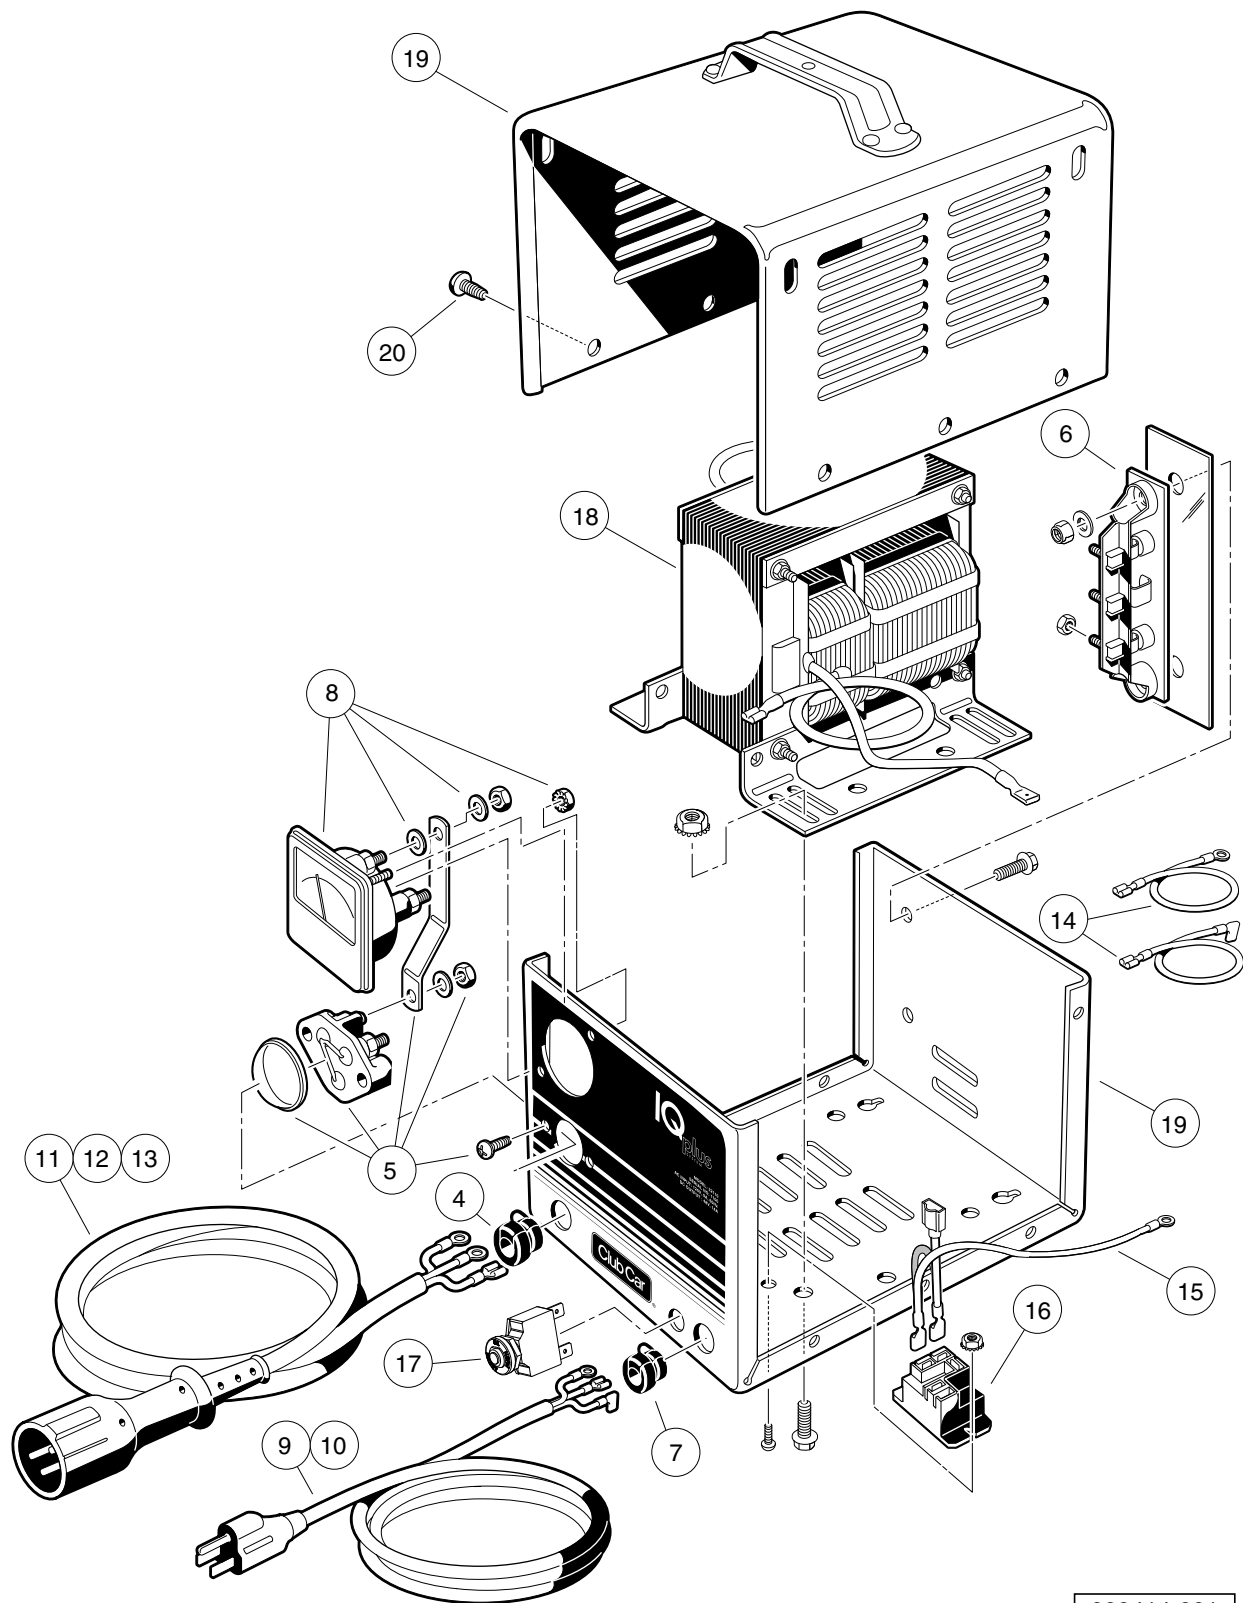


000414-001

IQ PLUS BATTERY CHARGER (MODELS 25730-11,-18,-19), DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102847801</u>	Charger, IQ Plus, Domestic (9-ft. DC Cord, 6-ft. AC Cord)	1
2	<u>102847802</u>	Charger, IQ Plus, Domestic (12-ft. DC Cord, 9-ft. AC Cord)	1
3	<u>102847803</u>	Charger, IQ Plus, Domestic (20-ft. DC Cord, 9-ft. AC Cord) (includes items 4 through 20)	1
4	<u>1012098</u>	Bushing, DC Cord	1
5	<u>1012101</u>	Fuse Assembly	1
6	<u>1015914</u>	Rectifier with Heatsink Assembly	1
7	<u>1015917</u>	Bushing, AC Cord	1
8	<u>101828501</u>	Ammeter	1
9	<u>101828801</u>	Cord, AC, 80-Inch (203 cm)	1
10	<u>101828802</u>	Cord, AC, 108-Inch (274 cm)	1
11	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
12	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
13	<u>101828903</u>	Cord, DC, 250-Inch (635 cm)	1
14	<u>101831101</u>	Wire Assembly Kit	1
15	<u>101914401</u>	Assembly, Voltage Suppressor	1
16	<u>102275401</u>	Relay, 48-VDC	1
17	<u>102838101</u>	Circuit Breaker 250vac-50vdc	1
18	N/A	Transformer, Battery Charger	1
19	N/A	Case, Battery Charger	1
20	7577	Screw, #10 X 0.50 Phillips Pan-Head	10

22

E

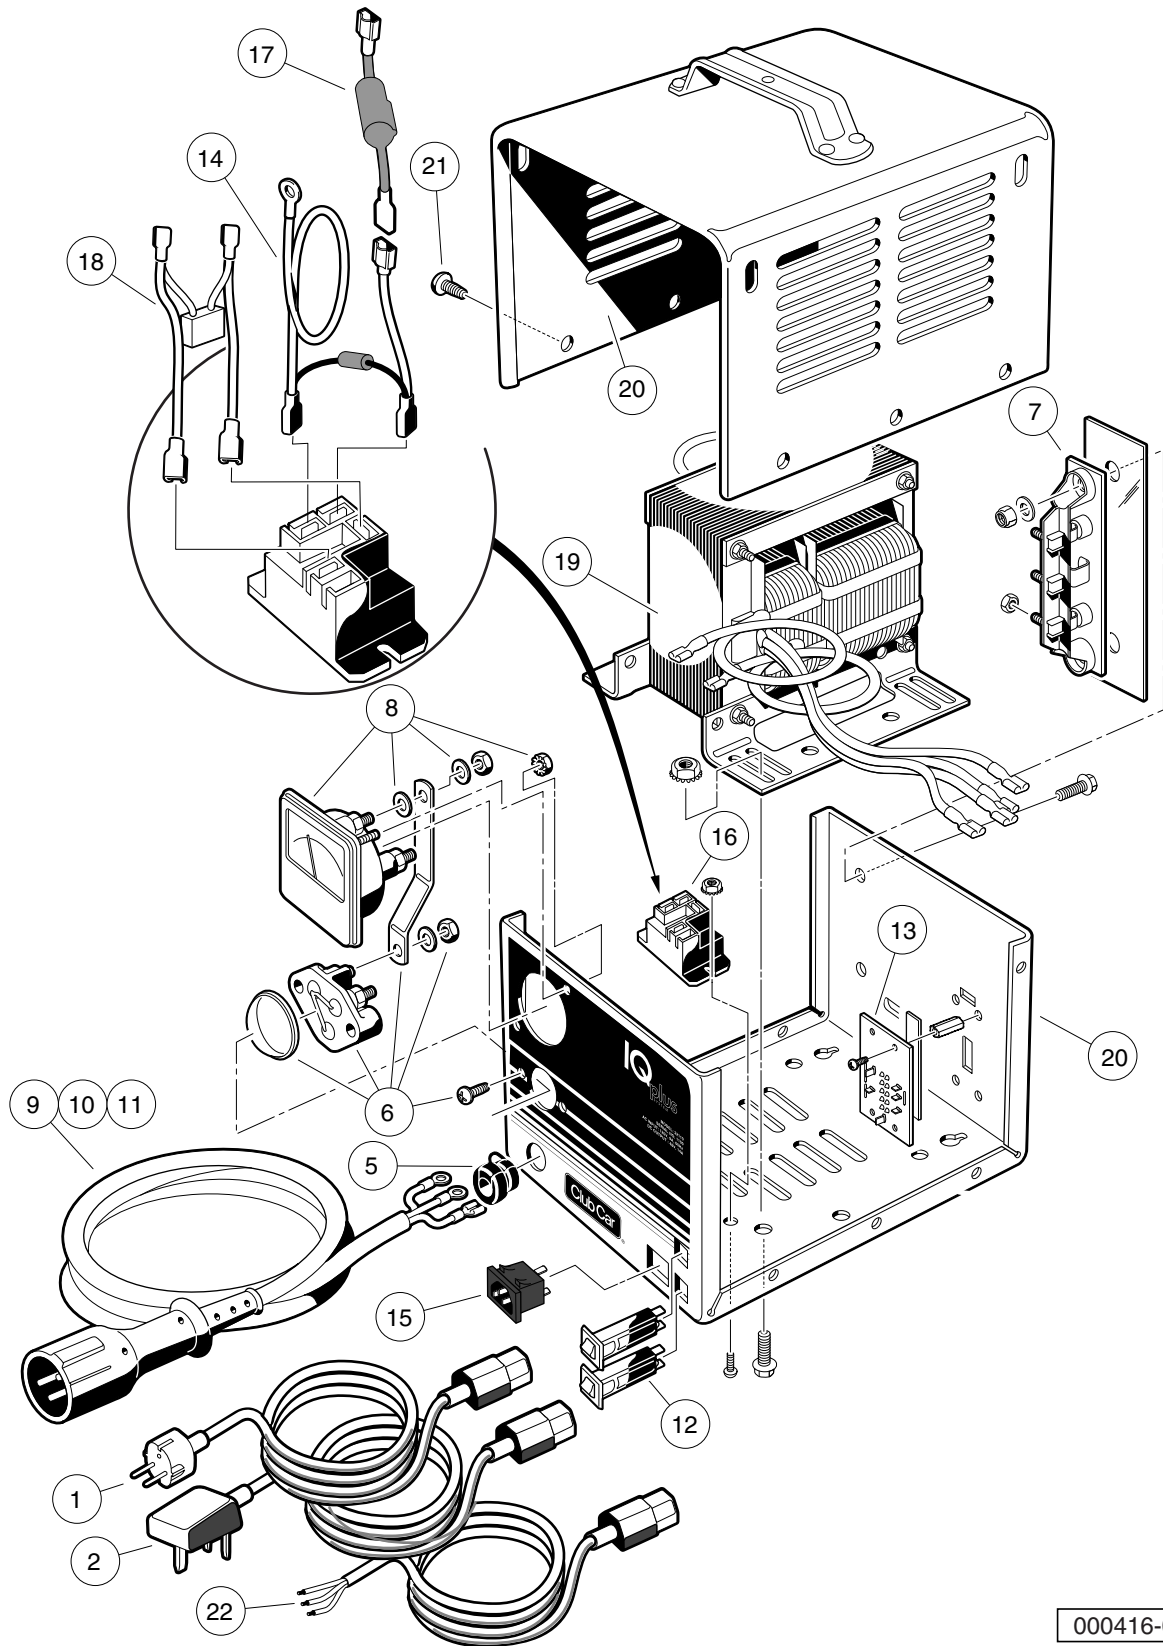


000416-002

IQ PLUS BATTERY CHARGER (MODELS 25880-11 AND -18), INTERNATIONAL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101958201</u>	Cord, UK, AC, Battery Charger	1
2	<u>101958301</u>	Cord, European AC, Battery Charger	1
3	<u>102892901</u>	Charger, IQ Plus, International (9-ft. DC Cord)	1
4	<u>102892902</u>	Charger, IQ Plus, International (12-ft. DC Cord) (includes items 5 through 21)	1
5	<u>1012098</u>	Bushing, DC Cord	1
6	<u>1012101</u>	Fuse Assembly	1
7	<u>1015914</u>	Rectifier with Heatsink Assembly	1
8	<u>101828501</u>	Ammeter	1
9	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
10	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
11	<u>101828903</u>	Cord, DC, 250-Inch (635 cm)	1
12	<u>101838401</u>	Circuit Breaker	2
13	<u>101838601</u>	Four-Position Switch	1
14	<u>101914401</u>	Assembly, Voltage Suppressor	1
15	<u>101973501</u>	Receptacle, AC Cord	1
16	<u>102275401</u>	Relay, 48-VDC	1
17	N/A	Limiter, Current	1
18	N/A	Wire Assembly, Battery Charger	1
19	N/A	Transformer, Battery Charger	1
20	N/A	Case, Battery Charger	1
21	7577	Screw, #10 X 0.50 Phillips Pan-Head	10
22	<u>102939501</u>	Cord, European AC, Battery Charger	1

22

E

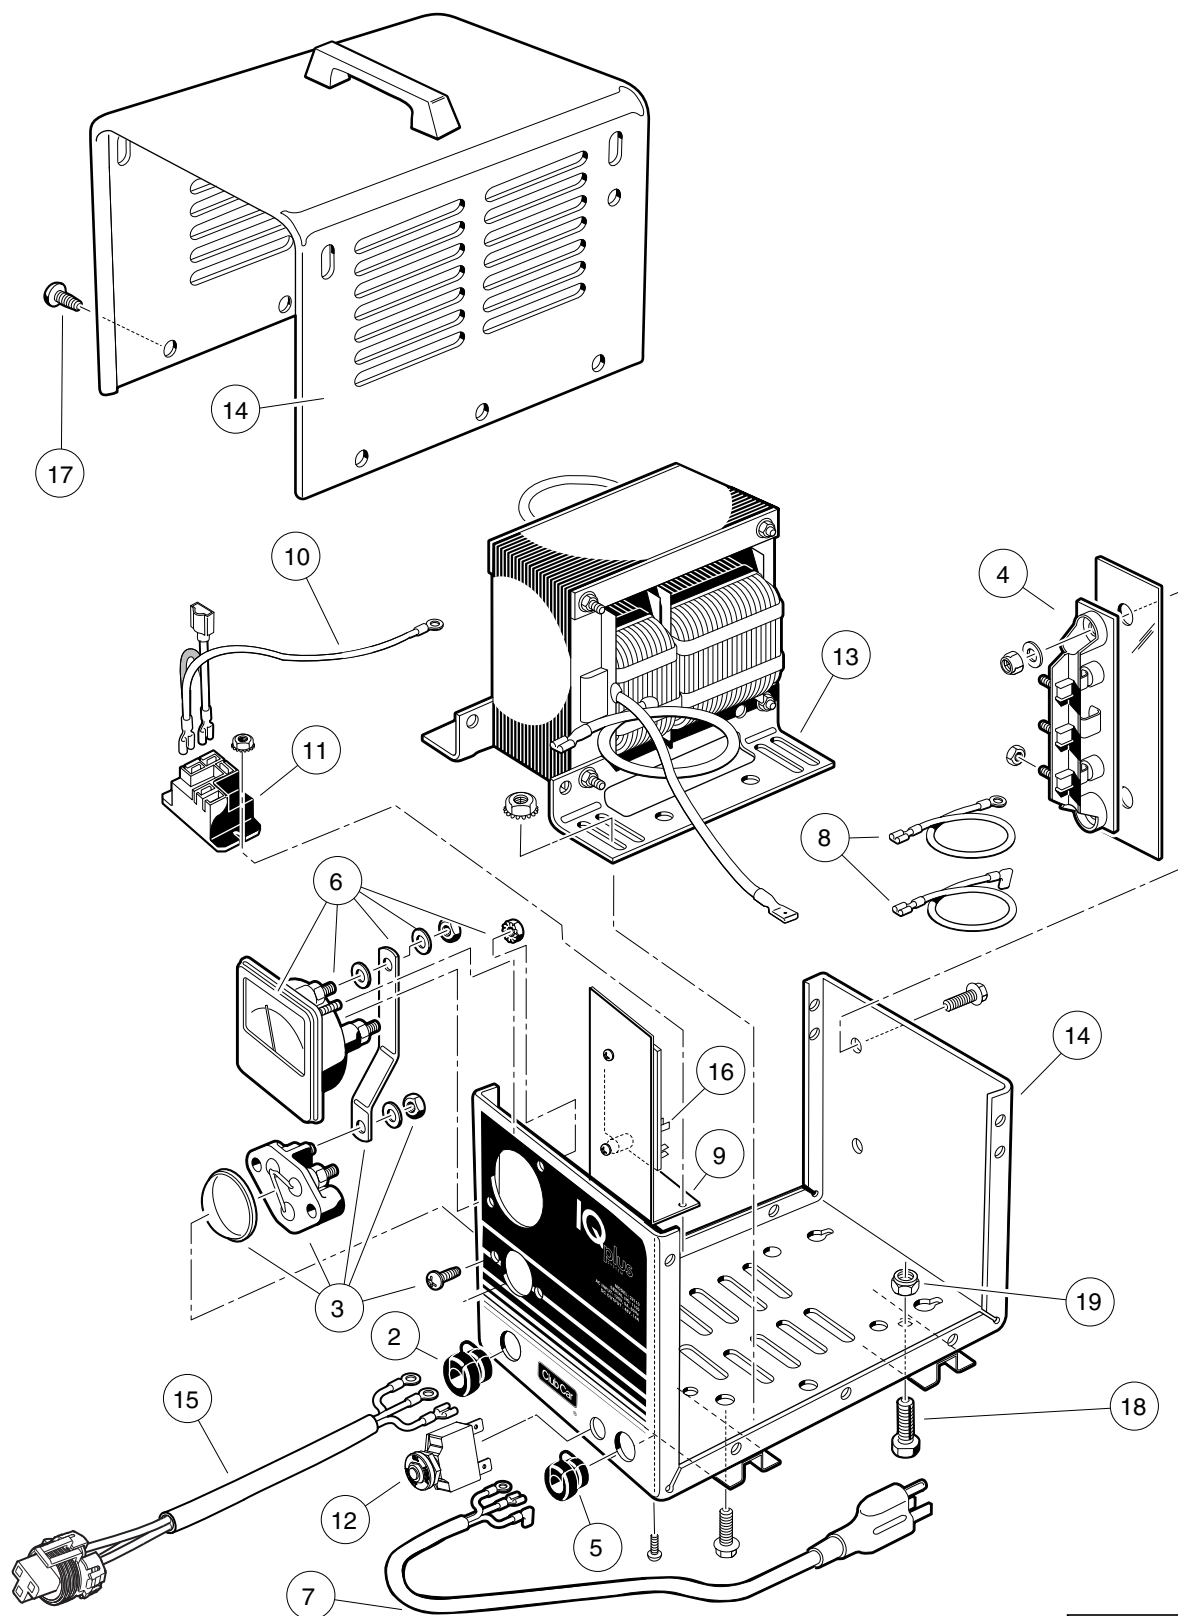


000415-002

ONBOARD IQ PLUS BATTERY CHARGER (MODEL 25260-50), DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103772401</u>	Charger, IQ Plus, Onboard, Domestic (includes items 2 through 19)	1
2	<u>1012098</u>	Bushing, DC Cord	1
3	<u>1012101</u>	Fuse Assembly	1
4	<u>1015914</u>	Rectifier with Heatsink Assembly	1
5	<u>1015917</u>	Bushing, AC Cord	1
6	<u>101828501</u>	Ammeter	1
7	<u>101829001</u>	Cord, AC, 22-Inch (56 cm)	1
8	<u>101831101</u>	Wire Assembly Kit	1
9	<u>101838701</u>	Mounting Bracket, Relay	1
10	<u>101914401</u>	Assembly, Voltage Suppressor	1
11	<u>102275401</u>	Relay, 48-VDC	1
12	<u>102838101</u>	Circuit Breaker, 20 Amp	1
13	N/A	Transformer, Battery Charger	1
14	N/A	Case, Battery Charger	1
15	<u>103832001</u>	Cord, DC, 20", Charger	1
16	<u>103869401</u>	Control Board, Potted	1
17	7577	Screw, #10 X 0.50 Phillips Pan-Head	12
18	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
19	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4
Note: DC Cord (item 15) uses the Packard 480 Connector.			

22

E




ONBOARD IQ PLUS BATTERY CHARGER (MODEL 25660-50), INTERNATIONAL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103771601</u>	Charger, IQ Plus, Onboard, International (includes items 2 through 20)	1
2	<u>1012098</u>	Bushing, DC Cord	1
3	<u>1012101</u>	Fuse Assembly	1
4	<u>1015914</u>	Rectifier with Heatsink Assembly	1
5	<u>1015917</u>	Bushing, AC Cord	1
6	<u>101828501</u>	Ammeter	1
7	<u>101829001</u>	Cord, AC, 22-Inch (56 cm)	1
8	<u>101831101</u>	Wire Assembly Kit	1
9	<u>101838401</u>	Circuit Breaker	1
10	<u>101838601</u>	Four-Position Switch	1
11	<u>101838701</u>	Mounting Bracket, Relay	1
12	<u>101914401</u>	Assembly, Voltage Suppressor	1
13	<u>102275401</u>	Relay, 48-VDC	1
14	N/A	Transformer, Battery Charger	1
15	N/A	Case, Battery Charger	1
16	<u>103832001</u>	Cord, DC, 20", Charger	1
17	<u>103869401</u>	Control Board, Potted	1
18	<u>7577</u>	Screw, #10 X 0.50 Phillips Pan-Head	12
19	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
20	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4
Note: DC Cord (item 16) uses the Packard 480 Connector.			

22

E

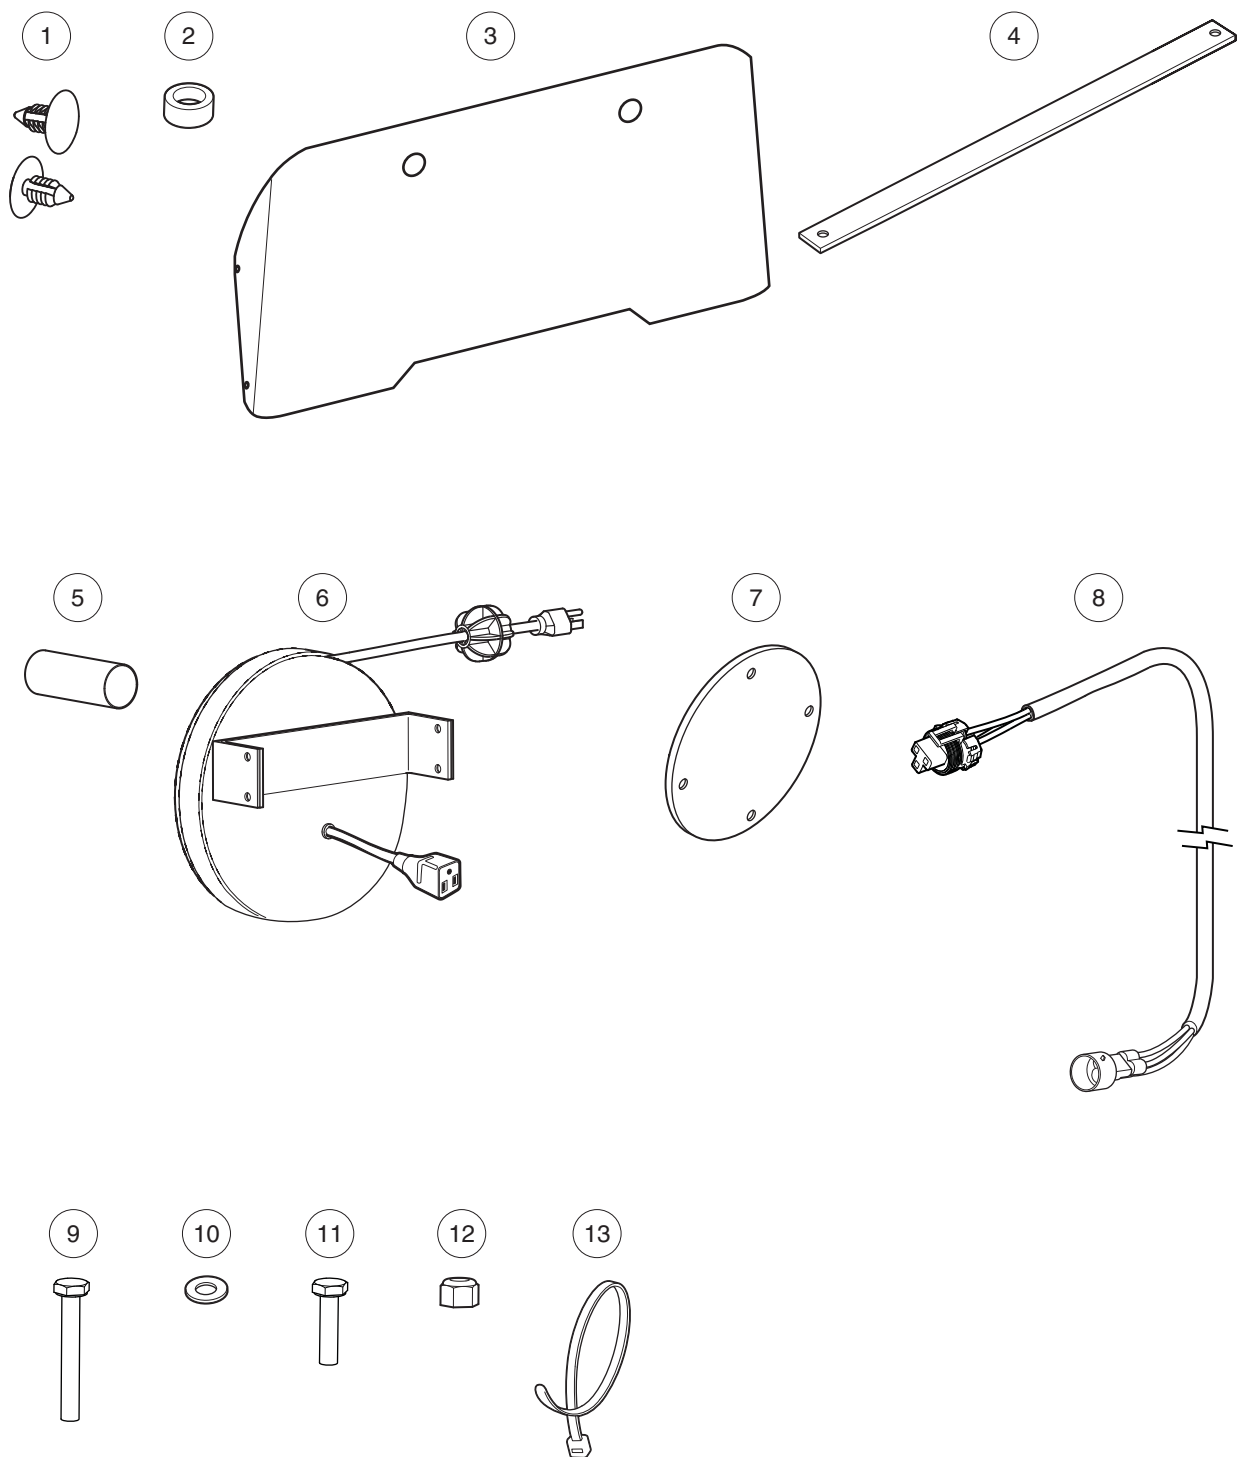

001289-002

ONBOARD IQ PLUS CHARGER AND CORD REEL MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY	22
		1 2 3 4		
1	<u>1010434</u>	Barrel - Plastic	4	
2	<u>1010927</u>	Hill Brake Spacer	4	E
3	<u>1011348</u>	Rear Panel 4 Passenger	1	
4	<u>1011707</u>	Bracket, Mounting, Battery Charger	2	
5	<u>1017189</u>	Heat Shrink Tube 1.5"x 4'	1	
6	<u>101965401</u>	Reel Assy, Retractable Cord	1	
7	<u>103218001</u>	Cover Plate, Receptacle	1	
8	<u>103772201</u>	Harness, Ob Charg, Vill, 480	1	
9	<u>1703</u>	Screw, 1/4-20 X 1.50 Hx Hd Cap	4	
10	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4	
11	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4	
12	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	8	
13	<u>8990</u>	Tie Wrap, 8" Nylon	4	
Note: Charger Harness (item 8) uses the Packard 480 Connector.				


MAINTENANCE AND SERVICE TOOLS

23

G

E

D

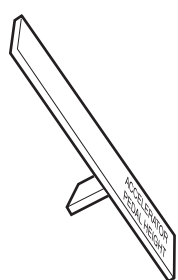


1



2



3

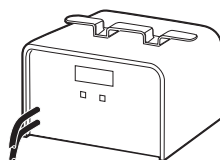


4




5



6

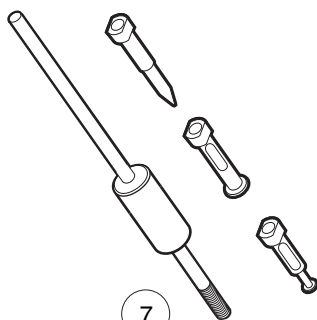


7

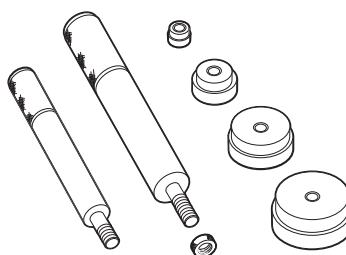

8




9

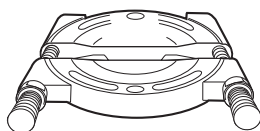


10




11

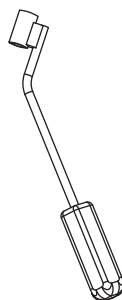

12

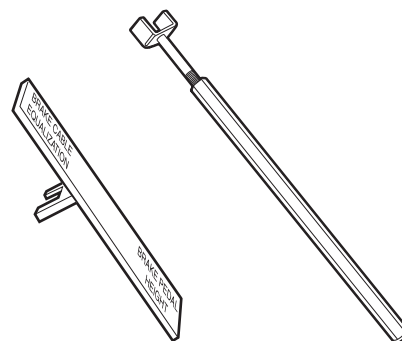


13

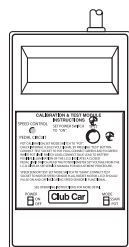


16



17







18

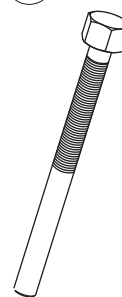

19

MAINTENANCE AND SERVICE TOOLS

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	23 G E D
		1 2 3 4 The following tool list includes all tools available from Club Car for maintenance and service procedures for gasoline, electric, and/or diesel vehicles, both past and present models. Be sure to carefully examine the tool list for applicability to your vehicle before ordering.				
1	<u>101871001</u>	Accelerator Pedal Adjustment Tool		1	1	
2	<u>101813202</u>	Adhesive, Guide Ring, 3-Gram Tube			1	
3	<u>101641202</u>	Arbor		1		
4	<u>101831901</u>	Battery Discharge Machine, 36/48 Volt			1	
5	<u>1014305</u>	Battery Terminal Protector Spray	1	1	1	
6	<u>1011767</u>	Battery Thermometer	1	1	1	
7	<u>1016417</u>	Bearing and Oil Seal Remover Assembly	1	1	1	
8	<u>1016416</u>	Bearing Driver Set	1	1	1	
9	<u>1012811</u>	Bearing Puller	1	1	1	
10	<u>1012812</u>	Bearing Puller Wedge Attachment	1	1	1	
11	<u>1013582</u>	Brake Adjustment Tool (used only on vehicles with manually adjusted mechanical brakes)		1	1	
12	<u>102555501</u>	Brake Cable Release Tool	1	1	1	
13	<u>102249901</u>	Brake Pedal Adjustment Tool Kit (used for the Carryall Electric Industrial Truck only) (includes items 14 and 15)			1	
14	****	Brake Pedal Adjustment Tool			1	
15	****	Brake Pedal Tension Tool			1	
16	<u>101887101</u>	Calibration Test Module			1	
17	<u>101808401</u>	Cam Installation Tool		1		
18	<u>102562401</u>	Charger Bezel Tool			1	
19	<u>102686101</u>	Clutch Removal Tool (for 4x4 vehicles)	1	1		
		Please refer to the maintenance and service manual for proper tool application. **** Special order item available upon request				

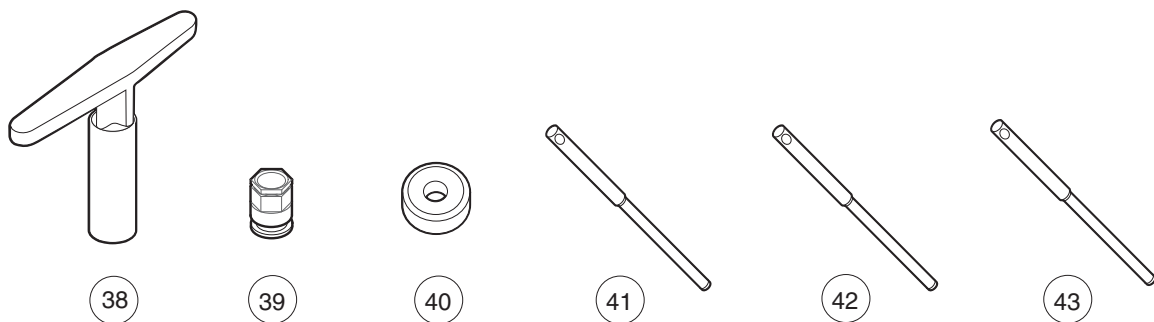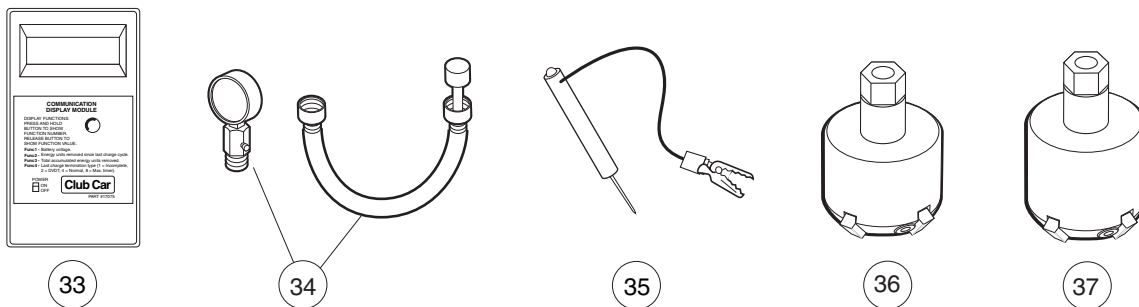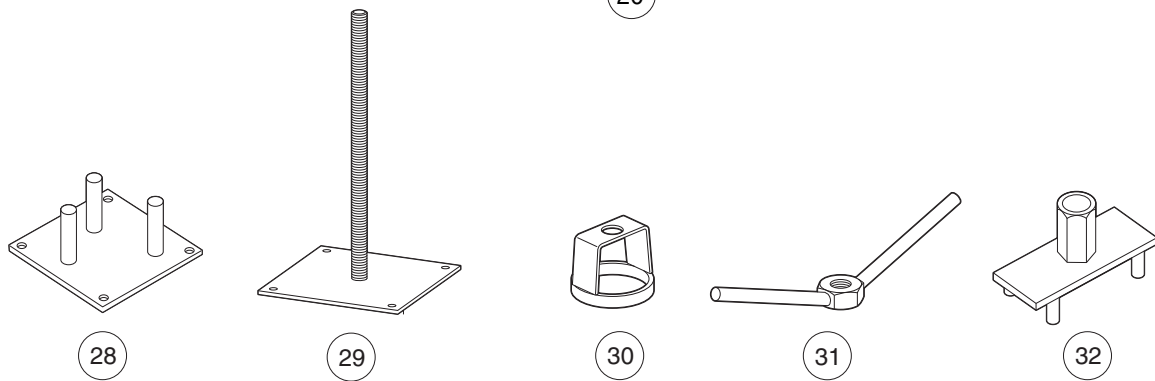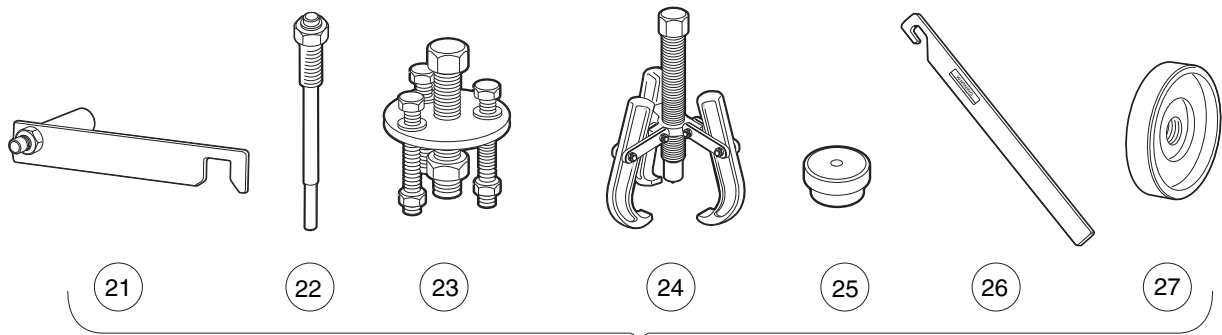23**G****E****D**

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	23 G E D
		1 2 3 4				
20	<u>1014510</u>	Clutch Tool Kit (includes items 21 - 27)		1		
21	<u>1014498</u>	Clutch Alignment Tool (for pre-unitized transaxle vehicles built prior to 1997 model year)		1		
22	<u>1014496</u>	Drive Clutch Puller (for Kawasaki engines only)		1		
23	<u>1014497</u>	Drive Clutch Hub Puller (for Kawasaki engines only)		1		
24	<u>1014508</u>	Driven Clutch Cam Puller (for Kawasaki engines only)		1		
25	<u>1014507</u>	Driven Clutch Puller Plug (for Kawasaki engines only)		1		
26	<u>1015524</u>	Drive Clutch Holder Tool Assembly (for Kawasaki engines only)		1		
27	<u>101809101</u>	Press Weldment (for Kawasaki engines only)		1		
28	<u>102601501</u>	Drive ClutchFixed Sheave Tool (for 4x4 vehicles)	1	1		
29	<u>102603501</u>	Driven Clutch Spring Compression Base (for use with items 30 and 31) (for 4x4 vehicles)	1	1		
30	<u>102605201</u>	Driven Clutch Spring Compression Collar (for use with items 29 and 31) (for 4x4 vehicles)	1	1		
31	<u>102606101</u>	Driven Clutch Spring Compression Nut (for use with items 29 and 30) (for 4x4 vehicles)	1	1		
32	<u>102607501</u>	Drive Clutch Spider Removal Tool (for 4x4 vehicles)	1	1		
33	101831801	Communication Display Module			1	
34	101641002	Compression Gauge and Adapter		1		
35	1011273	Continuity Tester		1	1	
36	<u>102773801</u>	Cutter, Valve Seat, #122		1		
37	<u>102773901</u>	Cutter, Valve Seat #115		1		
38	<u>102774101</u>	Wrench, T, #505.....		1		
39	<u>102774101</u>	Adapter, T-Wrench		1		
40	102675401	Cutter, Valve Seat, 60 Degree (requires item 51) (for Honda GX620 Gasoline Engines)		1		
41	<u>102774201</u>	Pilot, 6.6 MM		1		
42	<u>102774301</u>	Pilot, 6.62 MM.....		1		
43	<u>102774401</u>	Pilot, 6.65 MM.....		1		
		Please refer to the maintenance and service manual for proper tool application.				

23


G

E


D




44

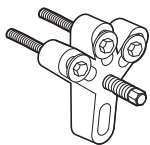

45

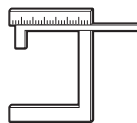


46

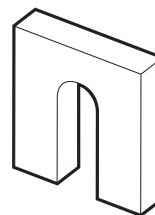


47



48





49




50



51

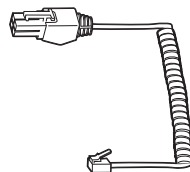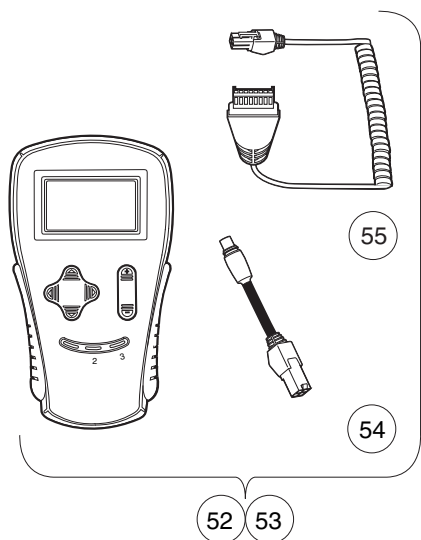

56



57



58



59 60




61

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	23 G E D
		1 2 3 4				
44	<u>1012151</u>	Dry Moly Lubricant	1	1	1	
45	<u>1016627</u>	Flywheel Puller Kit (for Kawasaki Engines)		1		
46	<u>102669901</u>	Gauge, Carburetor Float Level (for Honda GX620 Gasoline Engines)		1		
47	<u>1016418</u>	Gear Yoke	1	1	1	
48	<u>101933101</u>	Governor Shaft Installation Tool (for Kawasaki Engine Vehicles)		1		
49	<u>102169401</u>	Hydraulic Brake Adjuster (for Turf/CA 272/472, Pioneer/XRT 1200, Bobcat 2100, HUV 4213)			1	
50	<u>1011478</u>	Hydrometer	1	1	1	
51	<u>1013593</u>	Internal Retaining Ring Pliers	1	1	1	
52	<u>102248803</u>	IQ Display Module (IQDM) Kit (IQ System and IQ Plus vehicles)			1	
		(includes items 54 and 55)				
53	<u>102248804</u>	IQ Display Module (IQDM-P) Kit (IQ System and IQ Plus vehicles)			1	
		(includes items 54 and 55)				
54	<u>102251501</u>	Adaptor, Cable			1	
55	<u>102241502</u>	IQDM Series 2 Cable			1	
56	<u>102241501</u>	IQDM Series 1 Cable (replacement)			1	
57	<u>101928701</u>	Liquid Gasket (transaxle case)	1	1	1	
58	<u>102243402</u>	Moly-Teflon Lubricant (4-oz. (113-gram) tube)			1	
59	<u>101997201</u>	Paint, Touch-Up – Beige*		1	1	
59	<u>101997207</u>	Paint, Touch-Up – Black*		1	1	
59	<u>101997212</u>	Paint, Touch-Up – Burgundy*		1	1	
59	<u>101997211</u>	Paint, Touch-Up – Classic Blue (Navy)*		1	1	
59	<u>101997205</u>	Paint, Touch-Up – Dark Gray*	1	1	1	
59	<u>101997209</u>	Paint, Touch-Up – Dark Green*	1	1	1	
59	<u>101997204</u>	Paint, Touch-Up – Gray*	1	1	1	
59	<u>101997203</u>	Paint, Touch-Up – Red*	1	1	1	
59	<u>101997206</u>	Paint, Touch-Up – Royal Blue (Pacific Blue)*		1	1	
59	<u>101997202</u>	Paint, Touch-Up – White*	1	1	1	
60	<u>102562301</u>	Paint, Precedent Underbody – Gray		1	1	
61	<u>102587201</u>	Paint Pen, Touch-Up, Precedent Underbody – Black		1	1	
Please refer to the maintenance and service manual for proper tool application. * Item 59 is not for use on Surlyn[®] body material, which is used on Precedent vehicles.						



62

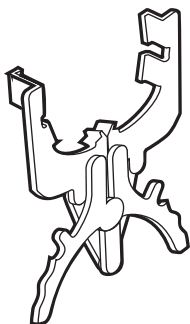

63

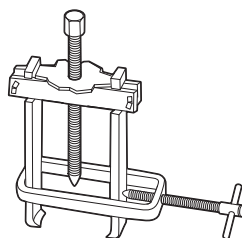


64



65



66



67



68




69



70




71

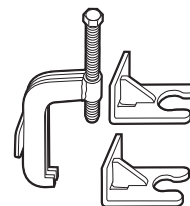

72




73

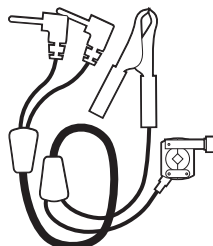


74




75



76

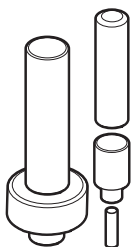

77



83



84



85



86

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	23
		1 2 3 4				G
62	<u>1016414</u>	Piston Ring Compressor Kit (FE290, FE350 and FE400 engines)		1		E
63	<u>1016415</u>	Piston Ring Pliers (for Kawasaki Engines)		1		D
64	<u>102668801</u>	Puller, Special Use (for Kubota D722 Diesel Engines)	1			
65	<u>1012549</u>	Retaining Ring Pliers, 45° External	1	1	1	
66	<u>1012560</u>	Retaining Ring Pliers, 90° Internal	1	1	1	
67	<u>101823101</u>	Safety First Card (50 per pack)	1	1	1	
68	<u>1012809</u>	Seal Puller	1	1	1	
69	<u>102330901</u>	Spanner Wrench (for coil over shock front suspension vehicles only)	1	1		
70	<u>1014264</u>	Steering Column Bearing Press Tool		1	1	
71	<u>1014259</u>	Steering Column Retaining Ring Tool		1	1	
72	<u>102061201</u>	Steering Wheel Puller Tool	1	1	1	
73	<u>AM10753</u>	Tachometer (includes gasoline engine pick up lead only)	1	1		
74	<u>AM10771</u>	Tachometer Diesel Probe (for use with item 73)	1			
75	<u>1014162</u>	Transaxle Axle Seal Tool		1		
76	<u>1014161</u>	Transaxle Pinion Seal Tool		1		
77	<u>1014115</u>	Transmission Tool Kit		1		
78	<u>101611003</u>	Tune-Up Kit, All OHV (for FE290, FE350, FE400 only) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
79	<u>AM11804</u>	Tune-Up Kit, Gx620 (for Honda Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
80	<u>AM11805</u>	Tune-Up Kit, D722 (for Kubota Engines) (includes air filter, oil filter, fuel filters, water separator filter) (not shown)	1			
81	<u>AM1220301</u>	Tune-Up Kit, Precedent (for FE290/350 Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
82	<u>AM1232401</u>	Tune-Up Kit, FH680D (for Kawasaki V-Twin Engines) (includes oil filter, fuel filter, air filter, and spark plugs) (not shown).....		1		
83	<u>1016413</u>	Valve Clearance Adjuster Screw Holder (for FE290 engines only)		1		
84	<u>102674601</u>	Valve Guide Driver (for Honda GX620 Gasoline Engines)		1		
85	<u>101641201</u>	Valve Guide Reamer (FE290, FE350, and FE400 only)		1		
86	<u>102674401</u>	Valve Guide Reamer, 6.6 mm (for Honda GX620 Gasoline Engines)		1		

23


G

E


D




87

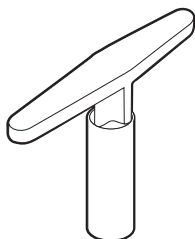


88

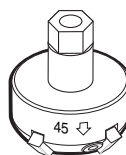


89

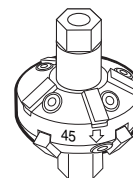


90

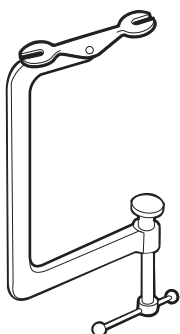

91

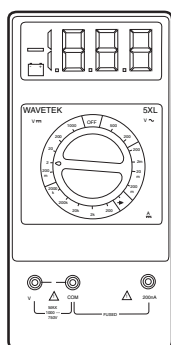


92

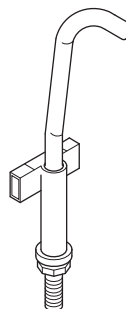


93



94

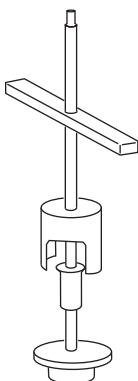

95



96

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	23
		1 2 3 4				G
87	<u>1016552</u>	Valve Seat Cutter Guide		1		E
88	<u>1016551</u>	Valve Seat Cutter T-Wrench		1		D
89	<u>1016553</u>	Valve Seat Cutter, 45° (32 mm diameter) (for FE290 engines only)		1		
90	<u>1016554</u>	Valve Seat Cutter, 45°/30° (35 mm diameter)		1		
91	<u>101641101</u>	Valve Spring Compressor		1		
92	<u>1011480</u>	Volt Ohm Meter	1	1	1	
93	<u>102570401</u>	Tool, Tensioning, Starter Generator (For Precedent vehicles)		1		
94	<u>103601401</u>	Puller, Drive Clutch, XRT 950*		1		
95	<u>103601701</u>	Tool, Disassembly, Driven Clutch, XRT 950		1		
96	<u>103600501</u>	Screw, Driven Clutch Disassembly, M6, XRT 950		1		
*Note: The XRT 950 Drive Clutch Puller requires the use of Screw, Driven Clutch Disassembly, CCI Part Number <u>103600501</u>.						

INDEX

Part Number and Page

AM10753	23-9	7311	6-25	1010237	1-55, 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69
AM10771	23-9	7330	17-13, 21-3	1010434	1-3, 1-7, 1-29, 1-31, 1-33, 1-35, 1-41, 1-53, 22-11
AM10080	17-11	7335	17-11, 21-3	1010435	1-3, 1-53
AM10081	17-11	7336	21-3	1010436	1-51
AM10419	15-7, 16-7	7410	1-53	1010543	1-19, 1-51
AM1220301	9-3	7473	1-3, 1-5, 1-39, 1-51, 1-53, 1-55, 1-57, 1-59, 1-61, 1-63, 1-65, 4-5, 4-7, 4-9, 5-3, 5-5, 5-7, 5-15, 5-21, 5-23, 6-25, 7-13, 7-15, 8-11, 8-19, 11-5, 12-15	1010546	1-3
AM1232301	9-3, 9-7	7479	1-67, 1-69	1010577	1-39, 9-17, 10-5
AM1243501	4-29	7577	22-3, 22-5, 22-7, 22-9	1010805	5-3
AM1243701	4-29	7591	4-5, 4-7, 4-9, 4-37, 10-9	1010829	5-15, 5-21, 5-23
AM1243801	4-29	7716	5-3	1010850	5-13, 5-17, 5-19
AM1300001	19-19	7818	7-13, 8-11	1010877	5-3
AM1300101	19-19	7820	4-31	1010878	5-3
AM1300201	19-19	7840	6-13	101090801	19-13, 19-15
AM1300301	19-19	7847	1-13, 1-41, 13-3, 22-7, 22-9, 22-11	1010909	4-5, 4-27
SVP119201	4-29	7893	4-5, 4-11, 4-13, 4-27, 7-13, 8-11, 17-5, 17-7	1010921	5-3
SVP143902	1-5	7910	6-13	1010927	5-3, 22-11
SVP493201	4-29	7973	1-9, 11-15, 11-17	1010932	5-3
183	1-55, 1-57, 1-59, 1-61, 4-5, 4-7, 4-9, 4-11, 4-13, 4-27, 4-29, 7-13, 11-5, 11-15, 11-17, 15-5, 16-5, 17-9, 17-15	8028	1-51	1010933	5-3
304	4-31, 17-5, 17-7	8056	4-35, 8-17	1010934	7-15, 8-19, 20-3
324	1-55, 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69	8057	4-35, 7-13, 8-15, 8-17, 17-3	1010954	7-13, 8-11, 17-9, 17-15
332	1-23, 1-29, 1-31, 1-33, 1-35, 1-39, 1-41, 1-51, 1-53, 1-63, 1-65, 1-67, 1-69, 4-31, 7-11, 11-19, 13-3, 22-11	8058	4-35, 7-13, 8-15, 8-17, 17-3	1010984	2-3
334	5-5, 5-7, 6-3, 6-5, 9-17, 15-5, 16-5	8067	6-13	1010993	1-31, 1-35, 1-41
343	1-55, 1-57, 1-59, 1-61	8104	1-55, 1-57, 1-59, 1-61, 4-11, 4-13, 17-3	1011014	1-3
357	6-17, 6-19, 6-25	8233	1-23, 1-29, 1-31, 1-33, 1-35, 1-39, 1-41, 1-53, 1-55, 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69, 4-31, 4-33, 5-5, 5-7, 6-25, 7-11, 11-3, 11-5, 11-13, 12-13, 17-5, 17-7, 17-9, 17-15, 18-11, 22-7, 22-9, 22-11	1011017	1-3, 4-19
451	1-39, 5-13, 5-17, 5-19, 13-3, 20-3	8248	1-15, 7-11, 11-3, 11-5	1011084	5-9, 5-11
705	9-17	8251	1-23, 1-29, 1-31, 1-33, 1-35, 1-41, 1-49, 1-51	1011114	5-13, 5-17, 5-19, 12-13, 18-11
706	6-17, 6-19	8294	4-31	1011137	5-13, 5-19
808	6-25, 15-5	8304	1-51	1011154	5-13, 5-17, 5-19
1016	4-5, 4-11, 4-13, 4-27, 7-13, 11-5	8450	7-13, 15-5, 16-5	1011210	1-51
1017	4-3, 7-13	8639	4-29, 8-11, 11-15, 11-17, 17-5, 17-7, 19-23	1011219	1-51
1028	5-3	8717	5-5, 5-7, 7-13, 8-11, 17-3, 17-9, 17-15, 18-3	1011220	1-51
1032	5-3	8745	6-17	1011221	1-51
1218	1-5, 1-53, 1-55, 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69, 12-15	8754	5-5, 5-7, 6-3, 6-5, 6-15, 6-17, 6-19, 6-21, 6-23, 7-9, 8-9	1011222	1-51
1241	1-3, 1-5, 1-39, 1-51, 1-53, 1-59, 1-61, 4-5, 4-7, 4-9, 5-3, 5-5, 5-7, 5-21, 5-23, 7-9, 7-13, 7-15, 8-11, 8-19, 10-5, 11-5, 12-15, 13-3	8755	6-17, 6-19, 6-21	1011229	4-5, 4-7, 4-9, 4-35
1242	5-15, 5-21, 5-23, 7-9, 7-13, 8-9, 8-11	8797	11-5	1011273	23-5
1620	4-3	8861	6-15, 6-25	1011280	4-5, 4-7, 4-9
1624	5-5, 5-7, 6-3, 7-9, 8-9	8915	1-55, 1-57, 1-63, 1-65	1011291	17-13
1631	11-15, 11-17	8935	1-5	1011298	5-13, 5-17, 5-19
1703	22-11	8963	1-51, 1-59, 1-61	1011303	5-13, 5-17, 5-19
2402	6-15, 6-17, 6-19	8990	4-11, 4-13, 4-23, 4-25, 4-33, 6-3, 7-13, 18-5, 18-7, 19-23, 22-11	1011314	5-13, 5-17, 5-19
4029	4-31	1010005	6-13	1011348	22-11
7048	6-13	1010028	17-3	1011382	4-15, 4-17
7173	1-15, 4-5, 4-7, 4-9, 6-25, 7-15, 8-19, 11-5	1010124	6-17, 6-19	1011393	6-13
7174	6-7, 7-9, 8-9, 11-13, 13-3, 14-3, 20-3	1010138	6-15	1011394	1-3
7251	1-3, 1-15	1010145	6-21, 6-23	1011402	5-3
7270	6-17	1010150	6-17, 6-19	1011415	6-21, 6-23
7274	6-13	1010200	6-19	1011418	5-3
7308	6-13			1011439	4-5, 4-7, 4-9
7310	2-3			101146302	5-13, 5-17, 5-19
				1011464	5-13, 5-17, 5-19
				1011465	5-13, 5-17, 5-19
				1011466	5-13, 5-17, 5-19
				1011467	5-13, 5-17, 5-19
				1011478	23-7

INDEX

1011480	23-11	1012560	23-9	1013770	17-13
1011494	5-13, 5-17, 5-19	1012565	6-11	1013771	17-13
1011497	4-37	1012566	6-11	1013772	17-13
1011557	4-5, 4-7, 4-9, 4-37	1012571	9-17	1013773	17-13
1011558	4-37	1012581	1-29, 1-31, 1-33, 1-35, 1-49	1013774	17-13
1011578	1-5, 1-51, 6-5, 19-13, 19-15	1012604	6-5	1013787	17-13
1011582	4-37	1012605	6-5	1013792	17-13
1011590	4-11	1012649	11-3, 11-5, 11-7, 12-7	1013794	17-13, 21-3
1011652	1-19, 1-37	1012711	17-9	1013824	1-15
1011694	5-5, 5-7	1012714	17-11	1013825	1-15
1011697	1-55, 1-57, 1-63, 1-65, 6-5, 9-17, 11-13	1012740	17-11	1013846	1-15
1011707	22-11	1012741	17-11	1013869	5-3
1011734	5-9, 5-11	1012747	17-11	1013870	5-3
1011767	23-3	1012748	17-11	1013876	5-3
1011779	5-15, 5-21, 5-23	1012752	17-9	1013924	5-13, 5-17, 5-19, 9-17, 10-5
1011825	4-31	1012809	23-9	1014007	1-51, 5-5, 5-7, 11-13, 12-13, 17-9, 17-15, 18-3, 18-11
1011843	4-37	1012811	23-3	1014049	15-5
1011852	1-55, 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69	1012812	23-3	1014050	15-5
1011862	1-55, 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69	1012830	7-9, 11-13, 13-3	1014052	15-5
1011865	1-55, 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69	1012836	15-7, 16-7	1014055	15-5, 16-5
101187702	5-3	1012896	17-9	1014056	15-5, 16-5
1011878	1-15	1013032	1-49	1014057	15-5, 16-5
1011883	1-55, 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69	1013035	6-3	1014058	15-5, 16-5
1011887	6-13	1013042	6-3, 6-15	1014059	15-5, 16-5
1011892	6-13	1013044	6-3	1014062	15-5, 16-5
1011897	1-25	1013052	6-3	1014063	15-5, 16-5
1011931	5-5, 5-7	1013061	1-55, 1-57, 1-59, 1-61, 17-3, 17-9, 17-15, 19-9, 19-11	1014065	7-13, 8-11, 15-5, 16-5
1011937	1-55, 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69	101313402	11-3, 11-5, 11-7	1014070	15-7
1011964	1-55, 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69	1013135	6-13	1014072	15-7, 16-7
1011988	1-53, 11-3, 11-5	1013207	6-21	1014078	15-7, 16-7
1012098	22-3, 22-5, 22-7, 22-9	1013216	1-49	1014080	15-7, 16-7
1012101	22-3, 22-5, 22-7, 22-9	1013218	1-49	1014115	23-9
1012126	19-11	1013312	1-19	1014116	11-3, 11-5, 12-3
1012151	23-7	1013343	1-9	1014119	7-3, 7-5, 7-13
1012159	1-55, 1-57, 1-59, 1-61	1013344	1-9	1014125	6-5
1012180	6-21	1013357	1-47, 4-5, 4-7, 4-9, 19-5, 19-7	1014126	6-5
1012181	6-23	1013461	11-5	1014145	7-13, 8-11
1012182	6-23	1013462	11-5	1014153	5-13
1012285	1-23, 1-39, 4-33, 11-7, 11-13	1013494	4-15, 4-17	1014161	23-9
1012295	7-13, 8-11	1013509	1-63, 1-65, 1-67, 1-69	1014162	23-9
1012303	6-17, 6-19, 6-21, 6-23	1013531	5-21, 5-23	1014198	3-15
1012304	6-21	1013547	4-33	1014201	1-63, 1-65, 1-67, 1-69, 20-3
1012333	17-5, 17-7	1013579	4-33	1014207	17-13
1012382	7-3, 7-5	1013582	23-3	1014213	6-5
1012396	4-15, 7-3, 7-5	1013589	7-13, 8-11	1014214	6-5
1012412	1-29, 1-31, 1-33, 1-35, 1-41	1013593	23-7	1014217	6-5
1012431	4-35, 7-13	1013609	7-13, 8-11	1014259	23-9
1012438	4-7, 4-9, 4-29, 11-15, 11-17	1013677	3-5	1014264	23-9
1012505	4-15, 4-17	1013687	11-3, 11-5	1014276	6-17, 6-19
1012528	13-3, 14-3, 19-21	1013700	11-13	1014287	15-5, 16-5
1012549	23-9	1013734	13-3, 19-21	1014288	6-5, 7-15, 8-19, 15-5, 16-5
		1013746	11-3, 11-5, 11-7, 11-11, 12-7	1014289	8-7
		1013760	17-9	1014305	23-3
		1013768	17-13	1014306	1-23, 1-41, 4-33
		1013769	17-13	1014375	7-15, 8-19

INDEX

1014392	1-41	101562714	1-51	1016387	6-17, 6-19
1014435	1-25	101562715	1-51	1016389	6-17, 6-19
101444101	1-25	101564804	1-51	101641002	23-5
1014453	15-5, 16-5	101564805	1-51	101641101	23-11
1014454	15-7, 16-7	101564807	1-51	101641201	23-9
1014471	1-55, 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69	101564808	1-51	101641202	23-3
1014496	23-5	1015649	9-5	1016413	23-9
1014497	23-5	1015720	4-35, 19-21	1016414	23-9
1014498	23-5	1015737	7-3, 7-5, 7-13, 8-11	1016415	23-9
1014507	23-5	1015741	4-5, 4-7, 4-9, 7-13, 8-11	1016416	23-3
1014508	23-5	1015752	7-13, 8-11, 11-19	1016417	23-3
1014510	23-5	1015760	6-25	1016418	23-7
1014530	4-31	1015768	4-29	1016423	4-5, 4-7, 4-9, 7-13
1014540	4-33	1015770	4-29	101642575	11-9
1014555	6-21, 6-23	1015814	13-3	101642578	11-9
1014789	8-3, 8-5	101584502	11-13	101642580	11-9
1014807	7-13, 8-15, 8-17, 17-3	101587703	11-3, 11-5	101642582	11-9
1014808	8-15, 8-17, 17-3	1015878	7-13, 8-15, 8-17, 17-3	101642585	11-9
1014902	6-23	1015902	1-23, 1-39	1016429	9-9
1014928	11-3, 11-5	1015914	22-3, 22-5, 22-7, 22-9	1016432	9-9, 17-9
1014948	7-13	1015917	22-3, 22-7, 22-9	1016436	9-11
1015010	4-29	1015921	11-5	1016437	11-9
1015072	19-13, 19-15	1015932	7-9, 8-9	1016438	11-11
1015075	1-3	1015969	9-5, 10-7	1016440	9-11, 11-11
1015091	1-51, 1-55, 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69	1016003	11-3	1016441	11-11
1015137	11-7, 11-11, 12-7	1016004	11-5	1016444	11-11
1015139	11-3, 11-5, 11-15, 11-17	1016011	15-5	1016449	9-11
1015156	4-29	1016074	7-9	1016450	9-11
1015167	4-29	1016103	10-9	1016451	9-11
1015170	4-29	101611003	23-9	1016452	9-11
1015187	4-29	101611402	21-5	1016453	9-13
101524002	7-9	1016154	6-11	1016454	9-13
1015332	7-3, 7-5, 8-3, 8-5, 9-5	1016183	6-5	1016455	9-7
1015345	7-13	1016201	15-5, 16-5	1016456	9-5
1015372	7-13	1016214	6-11	1016457	9-9
1015373	7-13, 8-11	1016230	4-29	1016458	9-11
1015392	1-55, 1-57, 1-59, 1-61	1016267	4-29	1016470	9-15
1015405	1-3, 1-55, 1-57, 1-63, 1-65, 7-13, 8-11	1016269	6-5	1016472	9-13
1015426	11-19	1016287	4-29	1016473	9-9
1015453	6-25	1016289	15-5, 16-5	1016474	9-11
1015457	6-25	1016319	5-15	1016479	9-11
101547601	3-7, 3-13	1016320	5-15	101648102	11-11
1015524	23-5	1016337	17-11	101648203	9-9
1015525	1-49	1016338	17-11	1016483	9-11
1015526	4-29	1016346	6-15	1016486	11-9
1015528	4-15, 4-17	1016349	6-15	1016489	9-11
1015583	6-17, 6-19	1016350	6-15	101649002	11-11
101558302	6-21, 6-23	1016351	6-15	1016494	9-13
1015597	6-13	1016353	6-15	1016496	9-13
1015608	1-5	1016356	4-5, 4-7, 4-9, 19-5, 19-7	1016499	11-9
1015613	6-25	1016363	4-7, 4-9	1016501	11-9
1015614	6-25	1016365	4-23, 4-25	1016502	9-9
101562711	1-51	1016366	4-7, 4-9	1016506	9-13
101562712	1-51	1016384	6-17, 6-19	1016507	9-5
		1016385	6-15	1016510	9-13
		1016386	6-17, 6-19	1016513	17-9

INDEX

1016517	9-11	1016793	1-55, 1-57, 1-59, 1-61	1017080	1-3
1016519	9-11	1016794	1-55, 1-57, 1-59, 1-61	1017082	17-9, 17-15
1016521	9-13	101679901	1-57, 1-61	101708301	1-13
1016531	9-5	101679902	1-55, 1-59	1017141	1-41
1016535	9-13	1016801	15-5, 16-5	1017145	16-7
1016537	9-9	1016811	1-13	1017185	1-55, 1-57, 1-59, 1-61
1016538	9-13	1016813	6-25	1017188	15-3
1016539	9-5	1016814	6-25	1017189	22-11
1016541	9-15	1016835	1-53	1017203	11-3, 11-5
1016542	9-11	1016842	1-53	1017211	5-15
1016544	9-7, 9-11, 9-13	1016849	4-15, 4-17, 4-35	1017226	6-7
1016545	9-11	1016851	4-15, 4-17, 4-35	1017231	17-9
1016546	11-13	1016857	4-35	1017239	7-13
1016547	9-5, 9-15, 11-11	1016859	4-35	1017243	7-13
1016549	9-11	1016868	1-3	1017259	1-23
1016551	23-11	1016879	4-3	1017266	6-15
1016552	23-11	1016880	4-3	1017273	6-9, 6-11
1016553	23-11	1016883	7-9	101728201	1-19
1016554	23-11	1016901	15-5, 16-5	101728202	1-37
1016557	5-13, 5-17, 5-19	1016904	9-11, 13-3	101728203	1-19
1016560	9-11	1016916	1-51	101728204	1-37
1016561	9-7	101692501	1-3	101728210	1-19
1016562	9-7, 9-15	101692502	1-3	101728211	1-37
1016563	9-11	101692504	1-3	101728213	1-19
1016564	9-13	101692506	1-3	101728214	1-37
1016566	9-11	101692509	1-3	101728701	1-41
1016569	9-11	101692510	1-3	101728702	1-41
1016570	9-9	101692511	1-3	101728704	1-41
1016571	9-15	101692512	1-3	101728706	1-41
1016572	11-11	101692513	1-3	101728708	1-41
1016573	5-13, 5-17, 5-19	101692514	1-3	101728709	1-41
1016576	9-9	101692515	1-3	101728710	1-41
1016578	9-7	1016929	4-29	101728711	1-41
1016581	9-9	101693901	1-3	101728712	1-41
1016582	11-11	101693902	1-3	1017310	1-23, 1-39
1016583	9-11	101693904	1-3	1017313	6-5
1016584	9-13	101693906	1-3	1017314	6-5
1016585	11-9	101693909	1-3	1017315	6-5
1016587	9-7	101693910	1-3	1017317	6-5
1016588	9-7	101693911	1-3	101734802	1-3
1016627	23-7	101693912	1-3	1017378	5-5, 5-7
1016630	4-15	101693913	1-3	1017380	5-5, 5-7
1016668	1-53	101693914	1-3	101738301	15-5
1016672	17-13	1016952	1-13	101738302	15-5
101674702	5-9	1016967	1-3, 19-21	1017384	1-37
101674704	5-11	1016997	7-13	1017424	5-5, 5-7
1016751	1-21	1017006	7-3, 7-5, 7-13	1017434	9-11
101675511	1-21	1017029	5-3	1017442	9-9
101675512	1-21	1017035	4-37	1017443	9-11
101675514	1-21	101705701	3-3, 3-9	1017445	9-11
101675515	1-21	1017062	4-3	1017448	9-7
101677701	1-21	1017064	4-3	101744901	9-15
101677702	1-21	1017065	4-3	101744902	9-15
101677703	1-21	101707402	4-11	1017450	9-15
101677705	1-21	101707405	4-13	101745101	9-15
1016781	1-55, 1-57, 1-59, 1-61	1017075	4-11, 4-13	101745102	9-15

INDEX

1017453	9-15	101788206	1-33	101829001	22-7, 22-9
1017454	9-11	101788208	1-33	101830601	4-15, 4-17
1017455	9-7	101788209	1-33	101830701	4-15, 4-17, 4-21
1017456	9-9	101788210	1-33	101831101	22-3, 22-7, 22-9
101745701	9-15	101788211	1-33	101831401	19-13, 19-15
101745702	9-15	101788212	1-33	101831801	23-5
1017458	9-9	101791101	5-17	101831901	23-3
1017460	9-9	101791901	1-33, 1-35	101832001	19-9
1017461	11-9	1017936	1-41	101832202	11-13
1017463	9-7	101796201	5-5, 5-7	101832302	11-13
1017466	11-11	101796501	19-9	101832601	9-17
1017471	9-15	101796801	19-9	101832701	9-17
1017472	9-13	101799201	1-39	101833101	9-17
1017473	9-11	101800201	1-63, 1-65, 1-67, 1-69	101833401	15-7, 16-7
1017474	9-5	101801001	19-9	101833601	17-9
1017475	9-5	101804301	4-15, 11-15, 11-17, 11-19	101833904	15-5
1017476	9-5	101805501	1-67, 1-69	101834001	15-7
1017486	9-5	101805502	1-67, 1-69	101834502	4-15, 4-17, 4-21
1017487	9-13	101805601	1-63, 1-65	101834601	9-17
1017490	9-7	101805801	1-63, 1-65	101834602	10-5
1017501	9-15	101806001	1-17	101834801	11-13, 17-9, 17-15
1017502	9-15	101806002	1-17	101835001	1-67, 1-69
1017503	9-15	101806005	1-17	101835101	1-67, 1-69
1017504	9-13	101806901	1-45	101835401	1-67, 1-69
1017507	9-9	101808401	23-3	101835501	1-63, 1-67
1017508	9-13	101809101	23-5	101835502	1-65, 1-69
1017510	9-15	101811301	11-15, 11-17	101835601	4-23, 4-25
1017512	9-15	101811901	11-19	101836201	15-7
1017513	9-13	101812301	11-19	101837001	1-47
1017514	9-13	101813001	11-19	101837101	11-19
101751801	9-13	101813202	23-3	101837301	7-3, 7-5, 7-7
101751802	9-13	101815301	1-55, 1-57	101837801	1-59, 1-61
101751803	9-13	101815401	1-55, 1-57, 1-59, 1-61, 1-63, 1-65	101837802	1-59, 1-61
1017686	15-7, 16-7	101815402	1-55, 1-57, 1-59, 1-61, 1-63, 1-65	101838001	1-59
1017689	13-3	101816701	1-55	101838002	1-61
1017699	4-37	101816702	1-57	101838401	22-5, 22-9
1017705	19-9	101817401	5-5, 5-7	101838601	22-5, 22-9
1017721	4-5, 4-27	101818801	5-7	101838701	22-7, 22-9
1017724	4-11, 4-13	101821501	11-19	101839801	4-21
101773301	9-15	101821601	4-29	101839802	4-21
101773302	9-15	101823101	23-9	101839803	4-21
101773303	9-15	101824101	10-9	101839804	4-21
101773304	9-15	101824401	11-3, 11-5	101839805	4-21
101773305	9-15	101825101	3-5, 3-11	101839806	4-21
101773306	9-15	101825102	3-7, 3-13	101839807	4-21
101773307	9-15	101825103	4-19	101839808	4-21
101773308	9-15	101825701	11-15, 11-17	101839809	4-21
101773309	9-15	101826201	4-17	101839810	4-21
101773310	9-15	101826401	4-15	101839811	4-21
101773311	9-15	101827101	9-17	101839812	4-21
1017748	1-41	101828501	22-3, 22-5, 22-7, 22-9	101840901	1-53
1017774	1-39	101828801	22-3	101841101	1-53
1017853	4-5, 4-7, 4-9	101828802	22-3	101841201	1-53
101788201	1-33	101828901	22-3, 22-5	101841202	1-53
101788202	1-33	101828902	22-3, 22-5	101841301	1-53
101788204	1-33	101828903	22-3, 22-5	101850301	6-9, 6-11

INDEX

101851101	4-15, 4-17, 4-21	101897001	21-3	101953106	5-15
101856002	4-17	101897201	21-3	101954301	1-19, 1-37, 1-39
101856102	7-13, 8-11	101897401	21-3	101955001	6-15
101861901	5-5, 5-7	101897601	21-3	101955101	4-31
101862001	5-5	101898001	7-15, 8-19	101955301	11-3, 11-5
101865301	5-15	101903601	21-3	101957101	4-5, 4-7, 4-9
101870401	1-3	101903701	21-3	101958201	22-5
101871001	23-3	101906901	21-3	101958301	22-5
101874601	5-15	101908101	19-11	101960501	3-7, 3-13, 7-7
101878201	5-3	101908401	7-11, 19-11	101963401	8-13, 9-17, 10-5
101879401	6-3	101910401	1-39	101965401	22-11
101879501	6-3	101910501	17-13	101971301	11-19
101879601	6-3	101914001	21-5	101972001	23-7
101879701	6-3	101914401	4-5, 4-7, 4-9, 22-3, 22-5, 22-7, 22-9	101972002	23-7
101879801	6-3	101915201	3-7, 3-13	101972003	23-7
101879901	6-3	101916101	9-5	101972004	23-7
101880001	6-3	101916301	9-7	101972005	23-7
101880101	6-3	101916701	7-9	101972006	23-7
101880201	6-3	101917601	11-19	101972007	23-7
101880301	6-3	101918501	5-3, 5-5, 5-7	101972009	23-7
101880701	5-13, 5-17, 5-19	101919801	5-5, 5-7	101972011	23-7
101880901	1-19, 1-37	101921501	11-19	101972012	23-7
101881501	4-33	101922101	21-3	101972101	21-3
101881601	4-33	101922201	21-3	101972201	21-3
101881701	1-19, 1-37, 11-19	101922501	7-11	101972801	11-19
101884801	9-17, 10-5	101923001	21-3	101973101	11-9
101886101	11-13, 12-13, 17-9, 17-15, 18-11	101923201	21-3	101973301	11-9
101887101	23-3	101923501	21-3	101973401	11-11
101887601	9-5	101923901	21-3	101973501	22-5
101889401	17-11	101925701	11-19	101974701	4-21
101890001	17-11	101926501	6-21	101974702	4-21
101890101	17-9	101926802	11-15	101974703	4-21
101890201	17-9	101926803	11-17	101974704	4-21
101890501	17-9	101926901	17-9, 17-21	101974705	4-21
101890601	17-9	101927101	17-9	101974706	4-21
101890901	17-13	101927201	17-9	101974707	4-21
101891001	17-13	101927301	17-9	101974708	4-21
101891301	17-9	101927501	17-11	101974709	4-21
101891401	17-13	101927601	17-11	101974710	4-21
101891501	17-13	101927701	17-11	101974711	4-21
101891601	17-11	101927901	17-11	101974712	4-21
101891901	17-11	101928001	17-11	101978601	21-5
101892001	17-11	101928101	17-11	101980801	17-11
101892201	17-11	101928301	17-13	101980901	17-11
101892301	17-11	101928601	17-9	101981001	17-11
101892401	17-11	101928701	17-9, 21-3, 23-7	101984801	6-5
101892501	17-11	101929401	6-21	101987701	11-3, 11-5, 12-7
101892601	17-11	101932201	4-5, 4-7, 4-9	101987901	4-3
101892701	17-13	101932902	17-21	101988001	4-3
101892901	17-9	101933101	23-7	101988002	4-3
101893201	17-11	101933701	11-15, 11-17	101988101	4-3
101893801	17-9	101936101	21-5	101988201	4-3
101893901	17-11	101942301	20-3	101990801	5-21, 5-23
101894901	19-9	101946201	1-23	101997802	4-33
101895401	21-3	101953103	5-21	101997803	4-33
101895501	21-3	101953104	5-23	101997902	4-33

INDEX

101997903	4-33	102336001	11-13	102674601	23-9
102002801	19-13, 19-15	102336101	11-13	102675001	23-5
102002901	19-13, 19-15	102354901	4-23, 4-25	102675101	23-5
102003201	9-3, 11-3, 11-5	102355301	7-15, 8-19	102675201	23-5
102005701	1-27	102356601	21-3	102675301	23-5
102022601	6-15	102356801	21-3	102675401	23-5
102022602	6-3, 6-15	102376001	17-3, 18-3	102684501	6-17, 6-19
102025801	12-5, 12-7	102406701	11-3, 11-5	102684602	17-3
102026001	5-5, 5-7	102410604	10-9, 12-13	102686101	23-3
102031901	17-13	102411203	12-3	102704901	20-3
102059501	18-9	102411209	12-15	102711001	7-7
102061201	23-9	102430901	9-15	102711201	8-11
102065901	9-17	102440901	19-5, 19-7	102725501	12-15
102066201	6-23	102453001	17-11	102732401	10-5
102076701	1-55, 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69	102453101	17-11	102753401	9-11
102155801	15-7, 16-7	102476401	12-13, 18-11	102766201	19-13, 19-15
102158701	3-15	102490301	12-13	102766301	6-17, 6-19
102158901	5-5, 5-7	102491501	16-5	102769701	19-21
102162601	5-21, 5-23	102498201	12-13, 18-9, 18-11	102771701	21-3
102163001	1-27	102508701	4-17	102772402	19-21
102163101	1-27	102515401	17-9, 17-15	102774501	19-21
102166901	5-21, 5-23	102517501	4-13	102774701	19-21
102169401	23-7	102517601	4-31	102775101	20-3
102186401	20-3	102518301	3-5, 3-11	102803401	7-13
102196901	4-17, 19-5, 19-7	102522001	11-5	102817101	19-21
102198701	4-5	102526201	17-3, 18-3	102817201	19-21
102199001	4-5	102529201	4-11, 4-13	102838101	19-11, 22-3, 22-7
102199201	4-5	102529203	4-31	102838401	9-7
102199301	4-5	102540301	9-17, 10-5	102838701	7-7, 8-7
102199401	4-5	102541402	10-9	102838801	7-7, 8-7
102235201	20-3	102546401	4-13	102838901	7-7, 8-7
102240501	19-21	102555501	23-3	102839001	7-7, 8-7
102241501	23-7	102558201	9-3, 10-3, 12-15	102839301	7-7, 8-7
102241502	23-7	102559901	2-5	102841101	7-7, 8-7
102242101	10-5, 15-7, 16-7	102559902	2-5	102844601	7-7, 8-7
102242401	1-55, 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69	102562401	23-3	102844701	7-7, 8-7
102243402	23-7	102564002	6-17, 6-19	102845101	3-5, 3-11, 19-11
102243403	20-3	102569302	2-3	102845203	19-13
102248803	23-7	102570401	23-11	102845204	19-15
102249901	23-3	102572401	4-17, 19-5, 19-7	102845501	19-5, 19-7
102251501	23-7	102585901	13-3	102847801	22-3
102269701	8-13	102601501	23-5	102847802	22-3
102274101	18-23	102603501	23-5	102847803	22-3
102275401	22-3, 22-5, 22-7, 22-9	102605201	23-5	102865101	11-3, 11-5, 12-7
102278001	6-5	102606101	23-5	102869401	4-5, 4-7, 4-9, 4-15, 4-17
102289201	6-3, 6-15	102607501	23-5	102871801	6-21, 6-23
102292801	5-15, 5-21, 5-23	102616701	17-3	102873401	19-13, 19-15
102297230	19-3	102617201	10-5, 14-3	102886301	21-3
102298116	10-9	102617801	18-23	102886401	21-3
102304801	9-11	102621501	18-3, 18-9	102886501	21-3
102310701	1-33, 1-35, 1-41	102668801	23-9	102886601	21-3
102323101	5-3, 5-15, 5-21, 5-23	102669901	23-7	102890201	4-23, 4-25
102323201	5-3, 5-15, 5-21, 5-23	102674001	23-5	102891101	6-23
102330901	23-9	102674101	23-5	102892901	22-5
		102674201	23-5	102892902	22-5
		102674401	23-9	102897201	17-17

INDEX

102897301	17-17	102915601	4-37	103274001	1-31, 1-35
102897401	17-15	102915701	19-11	103274002	1-31, 1-35
102897601	17-15	102917101	6-23	103274004	1-31, 1-35
102897701	17-17	102918701	4-23	103274006	1-31, 1-35
102897801	17-15	102918702	4-25	103274008	1-31, 1-35
102897901	17-15	102938601	20-3	103274009	1-31, 1-35
102898001	17-17	102938701	20-3	103274010	1-31, 1-35
102898101	17-17	102938801	20-3	103274011	1-31, 1-35
102898201	17-15	102938901	20-3	103274012	1-31, 1-35
102898301	17-17	102939001	20-3	103274101	1-29, 1-33
102898401	17-17	102939101	20-3	103274102	1-29, 1-33
102898501	17-17	102939102	20-3	103274104	1-29, 1-33
102898601	17-17	102939501	22-5	103274106	1-29, 1-33
102898701	17-17	102945501	1-35	103274108	1-29, 1-33
102898801	17-17	102945502	1-35	103274109	1-29, 1-33
102898901	17-17	102945504	1-35	103274110	1-29, 1-33
102899001	17-17	102945506	1-35	103274111	1-29, 1-33
102899101	17-15	102945508	1-35	103274112	1-29, 1-33
102899201	17-15	102945509	1-35	103295101	17-5, 17-7
102899301	17-17	102945510	1-35	103295203	17-5
102899401	17-15	102945511	1-35	103295204	17-7
102899501	17-17	102945512	1-35	103306301	12-3
102899601	17-17	102950301	4-19	103345701	15-5
102899701	17-15	102951701	20-3	103347101	7-7, 8-7
102899801	17-15	102962303	4-19	103347301	7-7, 8-7
102899901	17-17	102962602	4-19	103347601	7-7, 8-7
102900001	17-15	102967601	3-5, 3-11	103347701	7-7, 8-7
102900101	17-15	102969401	17-3	103347801	7-7, 8-7
102900201	17-15	102969801	17-3	103347901	7-7, 8-7
102900301	17-15	102969901	17-3	103348201	4-15
102900401	17-17	102977001	4-15	103348202	4-17
102900501	17-17	102977002	4-17	103348501	4-15, 7-3, 7-5
102900601	17-15	102980801	19-13, 19-15	103348601	4-15
102900701	17-17	102980901	19-13, 19-15	103350901	6-21
102900801	17-19	103010101	11-3, 11-5	103351001	6-15
102900901	17-15	103173301	17-3	103351101	6-23
102901001	17-17	103174401	1-7	103354401	4-17
102901101	17-17	103177401	17-3	103354701	6-15
102901201	17-19	103180101	4-15, 4-17	103369501	17-3
102901301	17-19	103192701	17-3	103372101	11-3, 11-5, 12-3
102901401	17-19	103196202	10-5	103372302	11-3, 11-5
102901501	17-19	103198201	19-13, 19-15	103372401	11-7, 12-7
102901601	17-19	103198301	4-17	103372801	11-7
102901701	17-19	103198401	7-11	103386202	9-5
102901801	17-19	103199001	4-15	103397901	4-7, 4-9, 19-21
102901901	17-19	103199101	4-15	103414901	4-7, 4-9, 19-21
102902001	17-19	103205401	3-3, 3-9	103418601	11-7
102902101	17-19	103205501	3-7, 3-13, 7-11	103449501	19-23
102902201	17-19	103210201	3-7, 3-13	103449601	19-23
102902301	17-19	103210301	3-5, 3-11	103459104	2-3
102902401	17-19	103218001	22-11	103464801	3-17
102902501	17-19	103218601	4-17, 19-5, 19-7	103477901	6-13
102902601	17-19	103234303	3-15	103496801	7-15, 8-19
102902701	17-19	103254401	4-9	103502701	6-17
102902801	17-19, 21-3	103255701	4-7, 4-9	103502801	6-19
102912801	19-21	103257101	4-7	103507101	11-11

INDEX

103507201	11-11	1-67, 1-69	103995001	18-23
103507301	11-11	103802401 4-25	103995901	10-7
103510501	19-17	103822101 19-21	103996201	10-5
103582801	21-3	103832001 22-7, 22-9	104005301	8-9
103601501	6-3	103851201 11-7	104005901	19-19
103601601	6-7	103865101 5-5, 5-7	104006101	19-19
103615601	9-11	103869401 22-7, 22-9	104021701	18-23
103615801	9-15	103874201 17-15	104023501	12-13, 18-11
103615901	9-13	103879701 18-15	104025101	16-7
103616301	9-11	103879702 18-13	104027101	18-23
103616401	9-13	103882001 17-17	105000301	8-11
103616501	9-7	103882101 17-15	105000401	8-11
103616601	9-7	103882301 17-15	105000501	19-21
103616701	9-7	103882801 10-5	105007402	12-13
103617101	11-9	103886601 18-5, 18-7	105007403	12-13
103618001	4-13	103887901 9-3, 9-9	105008101	8-3, 8-5
103618101	4-31	103888101 1-27	105009101	12-15
103628801	6-17	103888301 1-27	105009401	12-15
103628901	6-19	103895401 1-5	105010001	10-19
103651901	11-5	103902101 19-3	105010101	10-15
103651902	11-3	103902301 19-3	105010201	10-15
103653401	6-3	103902401 19-3	105010301	10-15
103653501	6-3, 6-15	103905201 11-3, 11-5, 12-3	105010401	10-19
103657301	6-21, 6-23	103924801 8-3, 8-5	105010501	10-19
103658601	2-3	103939201 1-9	105010601	10-19
103677101	1-27	103940701 19-5	105010701	10-19
103678502	7-7	103940801 19-7	105010801	10-15
103686501	7-3	103942101 19-17	105010901	10-15, 12-11
103686601	7-5	103942902 19-17	105011001	10-19
103694501	2-5	103943401 19-3	105011101	10-19
103697109	19-21	103944301 12-3	105011201	10-19
103700301	4-23	103951002 2-3	105011301	10-19
103709201	19-21	103951003 2-3	105011401	10-19
103717302	6-13	103951004 2-3	105011501	10-19
103717402	6-13	103951501 18-23	105011601	10-19
103722901	2-3	103952201 1-11	105011701	10-19
103723003	2-3	103953301 7-7, 8-7	105011801	10-19
103724502	6-9, 6-11	103954301 1-55, 1-57, 1-59, 1-61	105011901	10-15
103724601	6-11	103969601 19-13	105012001	10-15
103724602	6-9	103969701 19-15	105012101	10-15
103724901	6-11	103973902 16-5	105012201	10-15
103754901	1-27	103974002 16-7	105012301	10-15
103756401	12-7	103974102 16-3	105012401	10-15
103771601	22-9	103974201 16-5	105012501	10-19
103771901	19-9	103974401 16-5	105012601	10-7, 10-13, 10-15
103772101	19-5, 19-7	103975301 16-7	105012701	10-21
103772201	22-11	103976101 16-5	105012801	10-21
103772401	22-7	103978001 12-13	105012901	10-21
103776901	11-5	103979301 18-23	105013001	10-21
103776902	11-3	103979401 10-5	105013101	10-21
103781101	11-3, 11-5	103980001 14-3	105013201	10-21
103783001	3-5, 3-11	103982201 10-5	105013301	10-21
103783003	3-7, 3-13	103983501 12-11	105013401	10-21
103787401	1-55, 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69	103984601 16-5	105013501	10-21
		103989501 18-23	105013601	10-21
103789601	1-55, 1-57, 1-59, 1-61, 1-63, 1-65,	103993601 14-3	105013701	10-21

INDEX

105013801	10-21	105025901	18-13, 18-15	105038501	18-3
105013901	10-21	105026001	18-13, 18-15	105038805	18-5
105014001	10-21	105026101	18-13, 18-15	105038806	18-7
105014101	10-21	105026201	18-13, 18-15	105039801	18-3
105014201	10-17	105026301	18-13, 18-15	105039901	18-3
105014301	10-17	105026401	18-13, 18-15	105040401	18-3
105014401	10-17	105026501	18-13, 18-15	105040402	18-3
105014501	10-17	105026601	18-13, 18-15	105043401	12-5
105014601	10-17	105026701	18-13, 18-15	105043501	12-3
105014701	10-17	105026801	18-13, 18-15	105043801	12-5
105014801	10-17	105026901	18-13, 18-15	105043901	12-5
105014901	10-17	105027001	18-13, 18-15	105044901	12-7
105015001	10-17	105027101	18-13, 18-15	105060601	18-3
105015101	10-17	105027201	18-13, 18-15	105063501	18-13
105015201	10-17	105027301	18-13, 18-15	105063601	18-19
105015301	10-17	105027401	18-17	105064802	1-37
105015401	10-17	105027501	18-17	105066001	18-19, 18-21
105015501	10-17	105027601	18-17	105066101	18-19, 18-21
105015601	10-17	105027701	18-17	105073001	12-5
105015701	10-17	105027801	18-17	105075301	10-9
105015801	10-17	105027901	18-17	105081501	8-3, 8-5
105015901	10-17	105028001	18-17	105081601	8-3, 8-5
105016001	10-11, 10-17	105028101	18-19, 18-21	105084801	10-9
105016101	12-11	105028201	18-17	105088501	12-15
105016201	12-11	105028301	18-13, 18-15	105096101	16-5
105016301	12-11	105028401	18-17	105102601	8-17
105016401	12-11	105028501	18-13, 18-15	105116301	19-3
105016501	12-11	105028601	18-17	105134601	10-5
105016701	10-7	105028701	18-17	105134901	18-9
105016801	10-7	105028801	18-17	105135101	12-13, 18-9
105016901	10-7	105028901	18-17	105135901	8-3, 8-5
105017001	10-7	105029001	18-17	105136001	8-3, 8-5
105017101	10-7	105029101	18-17	105142401	2-5
105017201	12-9	105029201	18-17	105143301	8-3, 8-5, 12-3
105017301	10-11	105029301	18-21	105144401	12-13, 18-11
105017401	10-11	105029401	18-21	105149301	10-5
105017501	10-11	105029501	18-19, 18-21	105151201	8-3
105017601	10-11	105029601	18-21	105151301	8-5
105017701	10-11	105029701	18-21	105161701	8-3, 8-5, 8-7
105017801	10-3, 10-11	105029801	18-19, 18-21	105166801	19-19
105017901	10-11	105029901	18-19, 18-21	105166901	19-19
105018001	10-13	105030001	18-13, 18-15	105167001	19-19
105018101	10-13	105030301	18-19, 18-21	105167101	19-19
105018201	10-13	105030401	18-19, 18-21	105168501	19-19
105018301	10-13	105030501	18-19, 18-21	105168601	19-19
105018401	10-13	105030601	18-19, 18-21	105190102	8-7
105018501	10-15	105030701	18-13, 18-15	105205401	8-9
105025001	18-13, 18-15	105030801	18-19, 18-21	105215401	12-3
105025101	18-13, 18-15	105030901	18-17	105216301	1-37
105025201	18-13, 18-15	105031001	18-21	105234801	18-13, 18-15
105025301	18-13, 18-15	105037201	8-13	105234901	18-13, 18-15
105025401	18-13, 18-15	105037401	8-11	105245401	12-3
105025501	18-13, 18-15	105037701	18-3	105256701	8-3, 8-5
105025601	18-13, 18-15	105038001	18-3	105256801	8-3, 8-5
105025701	18-13, 18-15	105038101	18-3	105280201	1-43
105025801	18-13, 18-15	105038201	18-3	105280202	1-43

INDEX

105280203 1-43
 105282901 12-5
 105282902 12-5
 105282903 12-5
 47542195001 5-17, 5-19
 96704176 18-3
 96704416 9-17
 96705199 18-9
 96741046 10-5

A

AC cord 22-3, 22-5, 22-7, 22-9
 AC cord receptacle 22-5
 accelerator bracket and bearing assembly 5-5, 5-7
 accelerator cable 11-13, 12-13
 accelerator pedal adjustment tool 23-3
 accelerator pivot rod 5-5, 5-7
 accelerator return spring 5-5, 5-7
 accelerator rod 5-9, 5-11
 access door 1-49
 adapter
 air intake 12-11
 cable (IQDM) 23-7
 adhesive, guide ring 23-3
 adjuster
 hydraulic brake 23-7
 air box 11-19
 air box top 11-19
 air cleaner assembly 12-15
 air deflector 10-9
 air filter 9-3, 10-3, 11-19, 12-15
 air filter evacuator 12-15
 air intake adapter 12-11
 air intake hose 11-19, 12-15
 ammeter 22-3, 22-5, 22-7, 22-9
 anchor body 5-13, 5-17, 5-19
 anchor body kit 5-13, 5-17, 5-19
 anchor, piston 5-13, 5-17, 5-19
 anti-sway bar 6-25
 A-plate strap 6-15
 A-plate, delta 6-15
 arbor 23-3
 arm
 governor 11-13, 12-13, 17-9, 17-15, 18-11
 pivot 17-9
 rocker 9-11
 armature 20-3
 armrest 1-23, 1-39, 1-53
 assembly
 accelerator bracket and bearing 5-5, 5-7
 accelerator pivot rod 5-5, 5-7
 air box 11-19
 air box top 11-19
 axle 17-13
 bearing, steering shaft 6-5

bell crank and shaft 7-13
 connecting rod 9-15
 cylinder head 9-11
 delta A-plate 6-15
 delta shock and gear support 6-15
 drive clutch 15-5
 drive hub 15-5, 16-5
 driven clutch 15-7, 16-7
 driven clutch fixed-face 15-7
 float 11-9
 fuel cap 11-3, 11-5, 12-3
 fuel pump 11-3, 11-5, 12-5
 governor 17-11, 17-17
 headlight 4-3
 headlight harness 4-3
 idle screw 11-9
 inner ball joint 6-3
 kingpin 6-17, 6-19
 moveable-face 15-5, 15-7, 16-5, 16-7
 pilot air screw 11-9
 plug cap 9-7
 ratchet 5-3, 5-5, 5-7
 secondary clutch weight 15-5, 16-5
 steering shaft 6-5
 turn signal lens 4-3
 axle 17-9, 17-13, 17-15, 17-19, 21-3
 axle guard 17-21, 21-5
 axle shaft 18-19, 18-21
 axle shaft oil seal 17-13, 17-19, 21-3
 axle tube 17-13, 17-19, 18-19, 18-21, 21-3

B

backing plate, brake 5-13, 5-17, 5-19
 baffle
 crankcase 10-7
 bag rest mat 1-41
 balance shaft 10-21
 ball bearing 7-7, 8-7, 9-13, 18-17, 18-19, 18-21
 ball joint 5-3, 5-9, 5-11, 17-5, 17-7
 ball stud 7-13, 8-11, 17-9, 17-15
 ball, shifter 17-11
 ball, steel pressure relief 9-9
 bar, stabilizer 6-25
 barb, vent 11-3, 11-5
 barrel, plastic 1-3, 1-7, 1-29, 1-31, 1-33, 1-35, 1-41, 1-53, 22-11
 battery
 12-volt, side-post 7-15, 8-19
 battery cap, 6-volt 19-13, 19-15
 battery charger 22-3, 22-5
 battery charger case 22-3, 22-5, 22-7, 22-9
 battery charger receptacle 19-9
 battery charger retractable cord assembly 22-11
 battery charger transformer 22-3, 22-5, 22-7, 22-9
 battery charger wire assembly 22-5
 battery charger, onboard 22-7, 22-9
 battery clamp 7-15, 8-19
 battery condition indicator 4-17
 battery discharge machine 23-3
 battery HD, 6-volt, Trojan T145 19-15
 battery hold-down 19-13, 19-15
 battery hold-down rod 19-13, 19-15
 battery insulator 1-47
 battery light 4-17
 battery terminal protector spray 23-3
 battery thermometer 23-3
 battery, 6-volt, Trojan T105 19-13
 battery, top-post, wire, 4ga, 8+ 8-3, 8-5
 battery, top-post, wire, 8-4ga, 8-3, 8-5
 bead, ferrite 19-23
 bearing 21-3
 balance shaft 10-19
 ball 7-7, 8-7, 9-13, 18-17, 18-19, 18-21
 ball (motor) 20-3
 ball (steering pinion) 6-3
 cage roller 17-17
 crankshaft 10-19
 front wheel hub 6-13
 hub 6-13
 idler 15-5
 inner axle tube 17-13, 21-3
 lower pinion (steering) 6-3
 needle 17-11
 outer axle tube 17-13
 pivot support 5-5, 5-7
 steering shaft 6-5
 thrust 6-17, 6-19, 18-13, 18-15
 bearing and oil seal remover 23-3
 bearing driver set 23-3
 bearing puller 23-3
 bearing puller wedge 23-3
 bearing seat 6-5
 bell crank and shaft 7-13
 bellows 6-3
 belt, drive 15-3, 16-3
 belt, starter/generator 7-9, 8-9
 belt, V 7-9
 beverage holder 1-13
 bezel, choke cable 11-15, 11-17
 bezel, headlight 4-3
 bezel, taillight 4-37
 block, brake-mounting 5-3
 block, fuse 4-5, 4-7, 4-9, 7-13, 8-11
 block, terminal 4-5, 4-7, 4-9, 19-5, 19-7
 body kick plate 1-29, 1-31, 1-33, 1-35, 1-41
 body, anchor 5-13, 5-17, 5-19
 body, center 1-33, 1-35
 body, front 1-3
 body, rear 1-41
 bolt, U- 6-23

INDEX

- boot, steering column 6-5
 - boot, switch 7-11, 19-11
 - bottom, air box 11-19
 - box
 - air 11-19
 - differential 17-19
 - electrical component 7-13
 - steering gear 6-3
 - brace 1-67, 1-69
 - bracket 6-21
 - accel.cable 12-13, 18-9
 - accelerator cable 11-13
 - adjustable starter/generator 7-9
 - battery charger 22-11
 - brake cable guide 6-15
 - brake light switch 4-5, 4-7, 4-9
 - carbon canister/ECU 12-7
 - FNR cable 12-13, 18-9
 - FNR shifter 17-3
 - governor 12-13, 18-11
 - governor cable 11-13
 - headlight mounting 4-3
 - horn 4-31
 - hour meter 4-33
 - mounting, starter/generator 10-5
 - mounting, transaxle/exhaust 10-5
 - muffler mounting 13-3
 - oil filter mount 9-9
 - oil level switch 9-13
 - relay mounting 7-13, 22-7, 22-9
 - retaining 11-15, 11-17
 - shock mounting, drv 6-23
 - shock mounting, pas 6-23
 - snubber 9-17, 10-5
 - stabilizer bar mounting 6-25
 - starter/generator adjusting 8-9
 - starter/generator mounting 7-9
 - steering column 6-5
 - steering column mounting 6-5
 - throttle spring return 11-11
 - Tow/Run switch 7-11
 - bracket, carburetor intake manifold 11-11
 - brake actuator kit 5-13, 5-17, 5-19
 - brake adjustment tool 23-3
 - brake backing plate 5-13, 5-17, 5-19
 - brake cable 5-15, 5-21, 5-23
 - brake cable equalizer 5-15, 5-21, 5-23
 - brake cable hanger 6-21
 - brake cable release tool 23-3
 - brake cluster 5-13, 5-17, 5-19
 - brake drum 5-13, 5-17, 5-19
 - brake lever arm 5-13, 5-17, 5-19
 - brake light switch bracket 4-5, 4-7, 4-9
 - brake mounting block 5-3
 - brake pedal 5-3
 - brake pedal adjustment tool 23-3
 - brake pedal pad 5-3
 - brake pedal tension tool 23-3
 - brake relay kit, 12-volt 4-5
 - brake return spring 5-21, 5-23
 - brake shoe 5-13, 5-17, 5-19
 - brake spring 5-13, 5-17, 5-19
 - breaker, circuit 22-5, 22-9
 - breather 17-9, 17-15, 18-13, 18-15, 21-3
 - breather hose 12-11
 - brush box assembly 20-3
 - brush cover kit, starter/generator 7-7, 8-7
 - brush guard kit 1-5
 - brush inspection port cover 7-7, 8-7
 - brush kit, motor 20-3
 - brush rigging 20-3
 - brush spring 7-7, 8-7, 20-3
 - brush spring set 7-7, 8-7
 - brush spring, starter/generator 7-7, 8-7
 - brush terminal, starter/generator 7-7, 8-7
 - brush, motor 20-3
 - bulb, headlight 4-3
 - bulb, strobe light 4-29
 - bulb, tail light 4-37
 - bumper 1-25
 - drive unit (motor) 20-3
 - front 1-3
 - front, heavy duty 1-3
 - front, kit 1-3
 - rubber 1-51, 5-3
 - seal, long 1-19
 - side trim 1-53
 - spring return 5-5, 5-7
 - bumper guard vinyl trim 1-33, 1-35
 - bumper, heavy-duty 1-3
 - bushing 7-13, 8-11, 15-5, 16-5, 17-3, 18-3
 - bronze 6-13
 - nylon 5-3
 - return line 11-3, 11-5
 - spindle 6-13
 - stabilizer bar 6-25
 - steel 6-17, 6-19, 6-21, 6-23
 - urethane 6-15, 6-17, 6-19, 6-21, 6-23
 - bushing support 6-25
 - button, drive 15-7, 16-7
 - buzzer, reverse 4-15, 4-17, 4-35
- ## C
- cable
 - accelerator 11-13, 12-13
 - brake 5-15, 5-21, 5-23
 - choke 11-15, 11-17
 - FNR shifter 17-5, 17-7, 18-5, 18-7
 - governor 11-13, 12-13
 - IQDM 23-7
 - calibration test module 23-3
 - cam
 - driven clutch 15-7, 16-7
 - electrical component box 7-13, 8-11
 - cam installation tool 23-3
 - cam, engine 10-17
 - cam, FNR shifter 17-3
 - camshaft 9-13, 10-17
 - camshaft o-ring 10-17
 - camshaft shim 9-13
 - canister, carbon, fuel tank 11-7, 12-7
 - canopy 1-55, 1-57, 1-59, 1-61
 - canopy brace 1-55, 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69
 - canopy hardware 1-63, 1-65, 1-67, 1-69
 - canopy top, beige 1-65, 1-69
 - canopy top, white 1-63, 1-67
 - canopy trim plate 1-55, 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69
 - cap
 - battery, 6-volt 19-13, 19-15
 - dust 4-17, 19-5, 19-7
 - fuel, gas, ratchet 11-3, 11-5, 12-3
 - key switch 4-15, 4-17, 4-21
 - plug 9-7
 - rubber 18-23
 - seat back 1-21
 - cap, hub, 7 prong 2-5
 - carbon canister 11-7, 12-7
 - carburetor adapter 11-11
 - carburetor air vent tube 11-3, 11-5
 - carburetor float level tool 23-7
 - carburetor gasket 11-11
 - carburetor insulator 11-11
 - carburetor mounting gasket 11-11
 - carburetor, FE350 S27 11-9
 - card, safety first 23-9
 - case
 - battery charger 22-3, 22-5, 22-7, 22-9
 - differential gear 17-13
 - gear 17-9, 21-3
 - rocker 9-11
 - transaxle 18-13, 18-15
 - CE mark ferrite bead, Fair-rite 19-23
 - CE mark ferrite bead, TDK 19-23
 - center body 1-33, 1-35
 - center shaft 18-17
 - chain, timing 10-17
 - charger
 - wire assembly kit 22-3, 22-7, 22-9
 - charger bezel tool 23-3
 - charger receptacle 19-9
 - charger, battery 22-3, 22-5
 - charger, battery, onboard 22-7, 22-9
 - charging diode 8-13
 - choke cable 11-15, 11-17
 - choke cable bezel 11-15, 11-17
 - choke valve 11-19

INDEX

circuit breaker 19-11, 22-3, 22-5, 22-7, 22-9
 clamp
 battery 7-15, 8-19
 cable retaining 11-13
 hose 11-3, 11-5, 11-7, 11-11, 11-19, 12-3, 12-7, 12-15
 hose, green 11-3, 11-5, 11-7
 muffler hose 13-3
 p- (fuel filter) 10-9, 12-13
 clevis, upper delta 6-17, 6-19
 clip
 meter 4-15
 retainer plate 10-15
 clip, piston pin 10-21
 clip, score card 6-11
 cluster idler gear 17-11
 cluster, brake 5-13, 5-17, 5-19
 clutch
 pin 18-17
 clutch alignment tool 23-5
 clutch removal tool 23-3
 clutch repair kit 15-7, 16-7
 clutch tool kit 23-5
 clutch weight 15-5, 16-5
 clutch, drive 16-5
 clutch, driven 15-7, 16-7
 coil, ignition 10-11
 collar 18-17
 collet 9-11, 10-17
 column, steering 6-5
 communication display module 23-5
 component box, electrical 7-13
 component mounting plate 19-21
 component mounting plate cover 19-21
 compression gauge 23-5
 compression mount 6-25
 compressor, piston ring 23-9
 compressor, valve spring 23-11
 conduit 4-29
 connecting bar 1-53
 connecting rod 9-15, 10-21
 continuity tester 23-5
 control board, potted 22-7, 22-9
 controller, speed 19-21
 converter, DC/DC 4-23
 cooling fan 10-7
 cord connector 9-13
 cord, AC 22-3, 22-5, 22-7, 22-9
 cord, DC 22-3, 22-5, 22-7, 22-9
 cord, retractable, assembly 22-11
 counter shaft 18-17
 counterbalance guide shaft 9-15
 counterbalance weight 9-15
 cover
 brush inspection port 7-7, 8-7
 crankcase 9-13, 10-19

dust 5-13, 5-17, 5-19, 6-13
 electrical box 7-13
 fan 10-7
 fuse block 4-7, 4-9
 oil pump 9-9
 rocker switch hole 4-15, 4-17
 screw head 4-15, 4-17
 steering column 6-5
 cover, rocker 10-15
 cover, steering column 4-11, 4-13
 cover, valve 10-15
 cowl 1-3
 crankcase 9-15, 10-19
 crankcase baffle 10-7
 crankcase cover 9-13, 10-19
 crankcase vent tube 11-11
 crankshaft 9-15, 10-21
 crankshaft rod 9-15
 crankshaft shim 9-15
 cross brace 1-67, 1-69
 C-type stop ring 6-3
 cup holder 1-13
 cup, spring 5-5, 5-7
 current limiter 22-5
 cushion, shock absorber 6-21, 6-23
 cutter, valve seat 23-5, 23-11
 cylinder head 9-11, 10-15

D

dash component 1-9
 dash panel 4-15, 4-17
 dc converter, 15A 4-23
 dc converter, CE 4-25
 DC cord 22-3, 22-5, 22-7, 22-9
 DC/DC converter 4-23
 decal
 4-gauge wire warning 3-5, 3-11
 battery danger 3-5
 driver/passenger 3-7, 3-13
 electrical cover safety 3-5, 3-11
 engine warning 10-7
 filter log 19-19
 FNR 3-5, 3-7, 3-11, 3-13
 four-passenger warning 3-3, 3-9
 frame ground 3-7, 3-13
 inspect log 19-19
 key switch 3-7, 3-13
 on/off 3-5, 3-11
 operating instructions 3-5, 3-7, 3-11, 3-13
 passcode 4-19
 rollover warning 3-3, 3-9
 rotating parts 3-7, 3-13, 7-7
 run/service switch 3-7, 3-13, 7-11
 Tow/Run switch 3-5, 3-11, 19-11
 Villager 3-15
 deflector
 air 10-9
 deionizer 19-19
 cartridge 19-19
 delta A-plate 6-15
 delta A-plate sub-assembly 6-15
 delta shock and gear support 6-15
 diagnostic port 4-17, 19-5, 19-7
 diesel tachometer probe 23-9
 differential 18-21
 limited-slip 18-19
 open 18-21
 differential drive unit 17-9, 17-15, 21-3
 differential gear 17-13, 21-3
 differential gear case 17-13, 17-19
 differential gear set 18-21
 differential guard 17-21, 21-5
 differential housing 21-3
 differential idler gear 17-13
 differential pin 17-13
 differential shaft 18-21
 diode 7-13, 8-3, 8-5
 diode, charging 8-13
 dipstick 9-5, 10-19
 door, access 1-49
 drain plug 9-9, 10-19, 17-15, 18-13, 18-15
 drain plug gasket 9-9, 10-19, 17-9, 17-15
 drain plug, rubber 7-7, 8-7
 drink holder 1-13
 drive belt 15-3, 16-3
 drive button 15-7, 16-7
 drive clutch 16-5
 drive clutch assembly 15-5
 drive clutch button 15-5, 16-5
 drive clutch fixed sheave tool 23-5
 drive clutch fixed-face 15-5
 drive clutch holder tool 23-5
 drive clutch hub puller 23-5
 drive clutch puller 23-5
 drive clutch pulley 15-5
 drive clutch spider removal tool 23-5
 drive clutch spring 15-5, 16-5
 drive clutch weight 15-5, 16-5
 drive hub 15-5, 16-5
 drive selector shaft 17-9, 17-15
 drive unit bumper 20-3
 drive unit guard 17-21, 21-5
 driven clutch 15-7, 16-7
 driven clutch button 15-7, 16-7
 driven clutch cam 15-7, 16-7
 driven clutch cam puller 23-5
 driven clutch fixed-face assembly 15-7
 driven clutch puller plug 23-5
 driven clutch spring compression base tool 23-5
 driven clutch spring compression collar tool 23-5

INDEX

driven clutch spring compression nut tool 23-5
driver, drive clutch 15-5, 16-5
drum, brake 5-13, 5-17, 5-19
dry moly lubricant 23-7
duct, intake 11-15, 11-17
dust cap 4-17, 19-5, 19-7
dust cover 5-13, 5-17, 5-19, 6-13

E

eccentric adjustment screw 6-17
E-clip 5-15, 5-21, 5-23
ECU 12-9
electrical box cover 7-13
electrical component box 7-13
end cap, motor 20-3
end, tie rod 6-15
engine
 air cleaner 12-15
 air deflector 10-9
 air filter 9-3, 10-3, 12-15
 air intake hose 12-15
 balance shaft 10-21
 bearing, balance shaft 10-19
 bearing, crankshaft 10-19
 breather hose 12-11
 cam 10-17
 camshaft 10-17
 camshaft O-ring 10-17
 connecting rod 10-21
 crankcase 10-19
 crankcase baffle 10-7
 crankcase cover 10-19
 crankcase plug 10-19
 crankshaft 10-21
 crankshaft key 10-21
 cylinder head 10-15
 dipstick 10-19
 drain plug gasket 10-19
 ECU 12-9
 exhaust valve 10-17
 fan 10-7
 fan housing 10-7
 flywheel 10-11
 fuel injector 12-9
 guide pin 10-19
 head gasket 10-15
 ignition coil 10-11
 insulator, throttle body 12-11
 intake valve 10-17
 oil drain plug 10-19
 oil filler tube 10-19
 oil filler tube O-ring 10-19
 oil level sensor 10-13
 oil seal 10-19
 piston 10-21

piston pin 10-21
piston pin clip 10-21
piston ring set 10-21
retainer plate 10-15
retainer plate clip 10-15
rocker arm 10-17
rocker cover 10-15
rocker cover gasket 10-15
rocker shaft 10-17
spark plug 10-3, 10-11
temperature sensor 10-13
throttle body 12-9
timing chain 10-17
timing chain guide 10-17
timing chain sprocket 10-17
timing chain tensioner 10-17
valve collet 10-17
valve guide 10-15
valve seal 10-15
valve spring 10-17
valve spring retainer 10-17
warning decal 10-7
engine mounting plate 9-17
engine shroud 9-5
engine tune-up kit 9-3
engine warning decal 10-7
engine, EX40 10-5
engine, FE350 S27 9-5
equalizer pivot 5-15
equalizer rod 5-15, 5-21, 5-23
equalizer, brake cable 5-15, 5-21, 5-23
exhaust system 13-3, 14-3
exhaust valve 9-11, 10-17
extrusion, fender 1-3
extrusion, plastic 1-25

F

face, moveable 15-5, 15-7, 16-7
fan
 cooling 10-7
fan cover 10-7
fan housing 9-5, 10-7
fan shroud 9-5
fan, flywheel 9-7
fender extrusion 1-3
fender, inner 1-41
ferrite bead (CE), Fair-rite 19-23
ferrite bead (CE), TDK 19-23
field coil housing 7-7, 8-7
fill plug 17-9, 17-15
fill plug gasket 17-15
filter
 air 9-3, 10-3, 11-19, 12-15
 fuel 9-3, 11-3, 11-5, 12-5
 oil 9-3, 9-9
 oil pump 9-9

fitting, thread-forming grease 6-13
fixed-face, drive clutch 15-5
fixed-face, driven clutch 15-7
flasher, turn signal, 12-volt 4-13
float 11-9
floor mat 1-11
floormat 1-9
flywheel 9-7, 10-11
flywheel fan 9-7
flywheel fan plate 9-7
flywheel puller 23-7
FNR closeout brush 4-15
fnr shaft 18-3
FNR shift lever 17-9, 17-15, 18-9
FNR shifter 17-3
FNR shifter base 18-3
FNR shifter bracket 17-3
FNR shifter cable 17-5, 17-7, 18-5, 18-7
FNR shifter cam 17-3
foam, seat 1-51
foot rest 1-53
foot rest mat 1-53
fork, shift 17-11, 17-17
frame and field, motor 20-3
frame and field, starter/generator 7-7, 8-7
front body 1-3
front body support 1-41
front bumper 1-3
front bumper kit 1-3
front spring retainer plate 6-17, 6-19
fuel filter 9-3, 11-3, 11-5, 12-5
Fuel Filter Kit 12-5
fuel gauge sending unit 11-5
fuel injector 12-9
fuel line 11-3, 11-5, 11-7, 11-11, 12-7
fuel meter 4-15
Fuel Module, Hold-Down Ring 12-5
Fuel Pump 12-5
fuel pump 11-3, 11-5, 12-5
fuel tank 11-3, 11-5
fuel tank strap 11-3, 11-5
fuse 19-9, 22-3, 22-5, 22-7, 22-9
 10-amp 7-13, 8-3, 8-5, 8-11
 20-amp 4-5, 4-7, 4-9, 7-13
 2-amp 8-3, 8-5
 3/8-amp 19-9
 5-amp 8-3, 8-5
fuse block 4-5, 4-7, 4-9, 7-13, 8-11
fuse block cover 4-7, 4-9

G

gasket 18-13, 18-15
 carburetor 11-11
 carburetor mounting 11-9, 11-11
 cover, rocker 10-15
 cover, valve 10-15

INDEX

crankcase cover 9-11, 9-13
drain plug 9-9, 10-19, 17-9
drain plug, fill plug 17-15
exhaust 9-11, 13-3, 14-3
head 9-11
insulator 9-11, 11-11, 12-11
liquid 17-9, 21-3, 23-7
plug 21-3
rocker case 9-11
sending unit 11-5
taillight 4-37
gasket kit, FE350 9-11
gasket, head 10-15
gauge, battery condition 4-17
gauge, compression 23-5
gauge, fuel-hour 4-15
gear
 17 tooth 18-17
 25 tooth 17-17
 28 tooth 17-17
 34 tooth 18-17
 52 tooth 18-17
 60 tooth 18-19, 18-21
 62 tooth 18-17
 cluster idler 17-11
 differential 17-13, 17-19, 21-3
 differential idler 17-13, 21-3
 differential output 21-3
 governor 18-13, 18-15
 governor, 34 tooth 18-17
 helical 9-15, 17-11, 17-13
 planetary 17-19
 set, differential 18-21
 speed governor 17-17
 spur 9-15, 17-11
 sun 17-19
 synchro 17-11
gear yoke 23-7
gearcase 17-9, 21-3
governor 17-11, 17-17
governor arm 11-13, 12-13, 17-9, 17-15, 18-11
governor cable 11-13, 12-13
governor cable bracket 11-13
governor gear shaft 18-13, 18-15
governor shaft 18-13, 18-15
governor shaft installation tool 23-7
grip, pencil 6-11
grommet 1-17, 11-3, 11-5, 11-15, 11-17, 12-3
 ignition 9-7
guard, differential 17-21, 21-5
guard, splash 1-7
guide
 intake valve 9-11
 valve 10-15
 valve seat cutter 23-11
guide pin 10-19, 18-13, 18-15

guide ring adhesive 23-3
guide, timing chain 10-17

H

handle 18-3
handrail 1-53
hanger, brake cable 6-21
hardware, canopy 1-67, 1-69
harness
 wire 4-31
harness, headlight 4-7, 4-9
harness, lighting 4-7
harness, wire 4-23, 4-25, 4-31, 7-3, 19-5, 19-7
harness, wire, gas engine-ECU 8-3, 8-5
harness, wire, lighting 4-9
head gasket 9-11, 10-15
head, cylinder 9-11, 10-15
headband, sealed, motor 20-3
headband, vented, motor 20-3
headlight 4-3
headlight assembly 4-3
headlight bulb 4-3
headlight harness 4-3
headlight retainer 4-3
headlight wire harness 4-7, 4-9
heat shrink tube 22-11
heatsink and rectifier 22-3, 22-5, 22-7, 22-9
heavy-duty bumper 1-3
helical gear 9-15, 17-11, 17-13
hill brake rod 5-3
hill brake weld assembly 5-3
hinge assembly 1-51
hinge pin 1-51
hinge plate 1-19, 1-29, 1-31, 1-33, 1-35, 1-37, 1-41
hinge, long 1-51
hold-down rod, battery 19-13, 19-15
hold-down, battery 19-13, 19-15
holder, cup 1-13
hole plug 4-17
horn 4-31
horn bracket 4-31
hose
 air intake 12-15
 engine breather 12-11
 fuel 11-3, 11-5, 12-7
 vent 11-7, 12-7
hose clamp, green 11-3, 11-5, 11-7
hose, air intake 11-19
hour meter 4-15, 4-33
hour meter, 36-48 volt 4-33
housing
 3-pin 20-3
 differential 21-3
 fan 9-5, 10-7
 field coil 7-7, 8-7

hub 6-13, 18-23
hub bearing 6-13
hub cap 2-5
hub cap, 7 prong 2-5
hub, synchronizer clutch 17-11
hydraulic brake adjuster 23-7
hydrometer 23-7

I

idle screw assembly 11-9
idler bearing 15-5
idler gear, differential 21-3
ignition coil 9-7, 10-11
indicator, battery condition 4-17
inner frame snubber 9-17, 10-5
input shaft 18-17, 21-3
insert, synchronizer 17-11
instrument panel 4-15, 4-17
insulating washer 20-3
insulator 12-11
insulator gasket 9-11, 11-11, 12-11
insulator, battery 1-47
insulator, carburetor 11-11
insulator, motor terminal 20-3
intake duct 11-15, 11-17
intake valve 9-11, 10-17
intermediate shaft 21-3
internal retaining ring pliers 23-7
IQ display module (IQDM) 23-7

J

jet, main 11-9
jet, pilot 11-9
joint
 ball 5-3, 5-9, 5-11, 17-5, 17-7

K

key
 crankshaft 9-7, 9-15
 driven clutch 15-7, 16-7
 On/Off 4-15, 4-17
 square 15-7, 16-7
 woodruff 17-9
key switch 4-15
key switch cap 4-15, 4-17, 4-21
key switch, On/Off 4-17
key switch, uncommon 4-21
key, crankshaft 10-21
kick plate, body 1-29, 1-31, 1-33, 1-35, 1-41
kingpin 6-17, 6-19
kit
 3-pin housing 20-3
 accelerator pivot rod 5-5, 5-7
 anchor body 5-13, 5-17, 5-19
 brake actuator 5-13, 5-17, 5-19

INDEX

brake cable 5-15
brake pedal 5-3
brake pedal adjustment tool 23-3
brake relay 4-5
brake shoe 5-13, 5-17, 5-19
brake shoe retainer 5-13, 5-17, 5-19
brush guard 1-5
clutch repair 15-7, 16-7
DC/DC converter 4-23
deflector, air 10-9
differential gear case 17-13
drive clutch button 15-5, 16-5
drive clutch weight 15-5, 16-5
driven clutch button 15-7, 16-7
equalizer, brake 5-15
fixed-face drive 15-5
front bumper 1-3
fuel tank 11-5
gasket, FE350 9-11
hand pump, SPWS 19-19
heavy-duty front bumper 1-3
hour meter 4-33
hub cap 2-5
IQ display module (IQDM) 23-7
mirror 1-15
motor brush 20-3
motor brush lead assembly 20-3
motor brush spring 20-3
motor speed sensor 20-3
park brake latch 5-3
park brake pedal 5-3
relay, 48V 4-7, 4-9, 19-21
reverse buzzer 4-35
shock absorber cushion 6-21, 6-23
shoe retainer 5-13, 5-17, 5-19
smartkey 4-19
steering column mounting bracket 6-5
strobe light 4-29
taillight hardware 4-37
tune up 9-3
tune-up 23-9
turn signal 4-11
windshield, hinged 1-27
windshield, one-piece 1-25
wire assembly, charger 22-3, 22-7, 22-9
knob, forward/reverse 17-3, 18-3

L

lamp, strobe light 4-29
lamp, turn signal and socket 4-11, 4-13
latch, air box 11-19
latch, park brake 5-3
leaf spring 6-21, 6-23
lens, headlight 4-3
lens, strobe light 4-29
lens, taillight 4-37

lever
choke 11-19
drive selector 17-9
speed governor 17-15
transaxle shift 18-9
transmission shift 17-9, 17-15
light
battery 4-17
oil 4-15
water quality 19-19
light, strobe 4-29
lighting wire harness 4-7
limit switch 4-5, 4-7, 4-9, 7-13, 8-15, 8-17, 17-3
limiter
current 22-5
voltage 4-5, 4-27
line, fuel 11-7, 11-11, 12-7
link, stabilizer bar 6-25
liquid gasket 17-9, 21-3, 23-7
low oil warning light 4-15
lubricant, dry moly 23-7
lubricant, moly-teflon 20-3, 23-7
lug nut 2-3
lug stud 17-13, 17-19, 18-23, 21-3

M

magnet, speed sensor 20-3
main jet 11-9
mat, floor 1-11
mat, foot rest 1-53
MCOR 19-3
meter clip 4-15
meter, hour 4-33
meter, volt ohm 23-11
mirror 1-15
mirror, rear view 1-15
module
calibration test 23-3
communication display 23-5
moly-teflon lubricant 23-7
motor
48-volt IQ Plus 20-3
motor brush 20-3
motor brush kit 20-3
motor brush lead assembly kit 20-3
motor brush spring 20-3
motor bumper 20-3
motor controller 19-21
motor end cap 20-3
motor frame and field 20-3
motor headband, sealed 20-3
motor headband, vented 20-3
motor magnet, speed sensor 20-3
motor speed sensor 20-3
motor speed sensor kit 20-3
motor terminal and lead assembly 20-3

motor terminal insulator 20-3
mount, compression 6-25
mounting block, brake 5-3
moveable-face 15-5, 15-7, 16-5, 16-7
muffler hose clamp 13-3

N

nameplate kit, amber 3-15
needle bearing 17-11
nozzle, main 11-9
nut, lug 2-3

O

oil conveyor 17-15
oil filler tube 9-5, 10-19
oil filter 9-3, 9-9
oil filter mount bracket 9-9
oil filter screen 9-13
oil filter screen plate 9-13
oil level sensor 9-13, 10-13
oil level switch bracket 9-13
oil pump and rotor 9-9
oil pump cover 9-9
oil pump filter 9-9
oil pump plate 9-9
oil seal 9-11, 9-13, 9-15, 10-19, 17-9, 17-11, 18-13, 18-15
oil warning light, low 4-15
onboard battery charger 22-7, 22-9
O-ring 9-5, 9-11, 9-13, 9-15, 10-17, 10-19
O-ring Kit, Fuel Module 12-5
O-Ring, Fuel Module 12-5

P

pad
brake pedal 5-3
park brake 5-3
thermal 8-13
paint, touch-up 23-7
panel, instrument 4-15, 4-17
panel, rear 22-11
park brake latch 5-3
park brake pedal 5-3
park brake rod sleeve 5-3
park brake spacer 5-3, 22-11
park brake torsion spring 5-3
pawl 5-3
p-clamp (fuel filter) 10-9, 12-13
pedal, brake 5-3
pedal, park brake 5-3
pencil grip 6-11
pilot air screw assembly 11-9
pilot jet 11-9
pin
bow tie locking 5-15, 5-21, 5-23

INDEX

clevis 5-15, 5-21, 5-23
 differential 17-13, 18-21
 guide 10-19, 18-13, 18-15
 input shaft 18-17
 piston 9-15, 10-21
 pinion, steering 6-3
 piston 9-15, 10-21
 piston anchor 5-13, 5-17, 5-19
 piston pin 9-15, 10-21
 piston pin clip 10-21
 piston ring 9-15, 10-21
 piston ring compressor 23-9
 piston ring pliers 23-9
 piston ring set 9-15, 10-21
 pivot arm 17-9
 pivot support bearing 5-5, 5-7
 plate
 body kick 1-31, 1-35, 1-41
 component mounting 19-21
 engine mounting 9-17
 flywheel fan 9-7
 front spring retainer 6-17, 6-19
 hinge 1-19, 1-29, 1-31, 1-33, 1-35, 1-37, 1-41
 mounting, CVT, center 10-5
 mounting, engine/axle 10-5
 oil filter screen 9-13
 oil pump 9-9
 receptacle backing 19-9
 retainer 10-15
 spring mounting 6-17, 6-19
 thrust 17-11, 17-13
 plate, canopy trim 1-55, 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69
 plate, Tow/Run switch 19-11
 pliers
 internal retaining ring 23-7
 piston ring 23-9
 retaining ring 23-9
 plug
 drain 9-9, 17-15, 18-13, 18-15
 driven clutch puller 23-5
 fill 17-9, 17-15
 hole 4-17
 oil drain 10-19
 rubber drain 7-7, 8-7
 rubber, crankcase 10-19
 spark 9-3, 9-7, 10-3, 10-11
 plug cap 9-7
 plug, carburetor intake manifold 11-11
 port, diagnostic 4-17, 19-5, 19-7
 press weldment 23-5
 protector spray, battery terminal 23-3
 puller
 bearing 23-3
 clutch 23-3

drive clutch 23-5
 drive clutch hub 23-5
 driven clutch cam 23-5
 flywheel 23-7
 seal 23-9
 special use tool 23-9
 pulley
 drive clutch 15-5
 starter-generator 7-7, 8-7
 v-belt 7-7, 8-7
 pump
 fuel 11-3, 11-5, 12-5
 push rod 9-11

R

race, front hub bearing 6-13
 rack guide pressure spring 6-3
 rack, steering 6-3
 ratchet, park brake 5-3, 5-5, 5-7
 reamer, valve guide 23-9
 rear panel 22-11
 rear spring shackle 6-21
 rear view mirror 1-15
 receptacle backing plate 19-9
 receptacle, AC cord 22-5
 receptacle, battery charger 19-9
 rectifier with heatsink 22-3, 22-5, 22-7, 22-9
 reel assembly, retractable 22-11
 regulator, voltage 7-13, 8-11
 relay 4-7, 4-9, 7-13, 19-21
 relay mounting bracket 7-13, 22-7, 22-9
 relay, 12-volt 4-5
 relay, 48V 4-7, 4-9, 19-21
 relay, 48-volt 22-3, 22-5, 22-7, 22-9
 relay, brake, kit, 12-volt 4-5
 remover, bearing and oil seal 23-3
 retainer
 accelerator pedal spring 5-5, 5-7
 brake shoe 5-13, 5-17, 5-19
 headlight 4-3
 shock absorber cushion 6-21, 6-23
 spring (drive clutch) 15-5
 valve spring 9-11, 10-17
 retainer plate 10-15
 retaining bracket 11-15, 11-17
 retaining ring 6-5
 retaining ring pliers 23-9
 return spring bumper 5-5, 5-7
 reverse buzzer 4-15, 4-17, 4-35
 rim (wheel) 2-3
 ring
 C-type stop 6-3
 piston 9-15, 10-21
 retaining 6-5, 7-13, 8-11, 15-5, 15-7, 16-5, 16-7, 18-13, 18-15, 18-23
 snap 6-3, 9-11, 9-15

spiral backup 15-5, 16-5
 synchronizer 17-11
 rivet, blind push 1-3, 19-21
 rock guard 17-21, 21-5
 rocker arm 9-11, 10-17
 rocker case 9-11
 rocker case gasket 9-11
 rocker cover 10-15
 rocker cover gasket 10-15
 rocker shaft 9-11, 10-17
 rocker switch 4-17
 rocker switch (lights) 4-5, 4-7, 4-9, 4-15, 4-17
 rod

 accelerator 5-9, 5-11
 accelerator pivot 5-5, 5-7
 battery hold-down 19-13, 19-15
 connecting 9-15, 10-21
 crankshaft 9-15
 equalizer 5-15, 5-21, 5-23
 hill brake 5-3
 push 9-11
 shift 17-11
 rubber bumper 1-51

S

safety first card 23-9
 score card clip 6-11
 score card plate 6-11
 screen, oil filter 9-13
 screw, eccentric adjustment 6-17
 screw, valve clearance adjuster 23-9
 seal
 intake 11-19
 lip 21-3
 oil 9-11, 9-13, 9-15, 10-19, 17-9, 17-11, 17-13, 17-19, 18-13, 18-15, 21-3
 steering pinion dust 6-3
 valve 10-15
 seal puller 23-9
 sealant 17-9, 21-3
 seat
 spring 9-11
 valve 9-9
 seat back 1-21
 seat back assembly 1-21
 seat back cap 1-21
 seat back, white 1-21
 seat bottom assembly 1-19, 1-37, 1-51
 seat cover, vinyl 1-51
 seat foam 1-51
 seat support, four-passenger 1-51
 seat, bearing 6-5
 select shaft 18-13, 18-15
 sending unit, fuel gauge 11-5
 sensor
 oil level 10-13

INDEX

- temperature 10-13
- sensor, motor speed 20-3
- sensor, oil level 9-13
- shackle weldment 6-23
- shackle, rear spring 6-21
- shaft
 - axle 18-19, 18-21
 - balance 10-21
 - center 18-17
 - counter 18-17
 - counterbalance guide 9-15
 - differential 18-21
 - drive selector 17-9, 17-15
 - governor 18-13, 18-15
 - governor gear 18-13, 18-15
 - input 18-17, 21-3
 - intermediate 21-3
 - rocker 9-11, 10-17
 - select 18-13, 18-15
 - shift 18-17
 - steering column 6-5
 - transmission 17-11, 17-17
- shaft, reverse gear 17-17
- shaft, secondary
 - transmission 17-17
- shift fork 17-11, 17-17
- shift lever 17-9, 17-15, 18-9
- shift rod 17-11
- shift shaft 18-3, 18-17
- shifter, base 18-3
- shifter, FNR 17-3
- shim, camshaft 9-13
- shim, crankshaft 9-15
- shock absorber 6-15, 6-21, 6-23
- shock absorber cushion 6-21, 6-23
- shock absorber cushion retainer 6-21, 6-23
- shock mounting bracket, drv 6-23
- shock mounting bracket, pas 6-23
- shoe retainer kit 5-13, 5-17, 5-19
- shoe, brake 5-13, 5-17, 5-19
- shroud 9-5
- shroud, engine 9-5
- shroud, fan 9-5
- signal, turn 4-11
- sleeve 18-13, 18-15
 - delta A-plate 6-15
 - governor 17-11
 - park brake rod 5-3
 - synchronizer 17-11
- smartkey 4-19
- snap ring 6-3, 9-11, 9-15
- snubber bracket 9-17, 10-5
- snubber, inner frame 9-17, 10-5
- solenoid 19-21
- solenoid, 12-volt 7-13, 8-11
- spacer 1-5, 18-13, 18-15, 18-17
- accelerator pivot rod 5-5, 5-7
- park brake 5-3, 22-11
- spanner wrench 23-9
- spark plug 9-3, 9-7, 10-3, 10-11
- speed controller 19-21
- speed sensor 20-3
- speed sensor magnet 20-3
- speed sensor, motor 20-3
- spindle assembly 6-13
- spiral backup ring 15-5, 16-5
- splash guard 1-7
- spray, battery terminal protector 23-3
- spring 18-13, 18-15
 - accelerator return 5-5, 5-7
 - brake 5-13, 5-17, 5-19
 - brake return 5-21, 5-23
 - brush 7-7, 8-7, 20-3
 - compression 6-11
 - drive button 15-5, 16-5
 - drive clutch 15-5, 16-5
 - driven clutch 15-7, 16-7
 - extension return 11-19
 - leaf 6-21, 6-23
 - park brake torsion 5-3
 - rack guide pressure 6-3
 - shifter 17-11
 - steering shaft compression 6-5
 - synchronizer 17-11
 - throttle return 11-11
 - valve 9-11, 10-17
- spring cup 5-5, 5-7
- spring mounting plate 6-17, 6-19
- spring retainer 10-17
- spring, motor brush 20-3
- spur gear 9-15, 17-11
- SPWS manifold 19-17
- stabilizer bar 6-25
- stabilizer bar link 6-25
- stabilizer bar mounting bracket 6-25
- starter/generator 8-7
- starter/generator (bi-rotational) 7-7
- starter/generator belt 7-9
- starter/generator brush cover kit 7-7, 8-7
- starter/generator brush spring 7-7, 8-7
- starter/generator brush terminal 7-7, 8-7
- starter/generator frame and field 7-7, 8-7
- starter/generator pulley 7-7, 8-7
- steel bushing 6-17, 6-19, 6-21, 6-23
- steel pressure relief ball 9-9
- steering column 6-5
- steering column bearing press tool 23-9
- steering column cover 4-11, 4-13
- steering column retaining ring tool 23-9
- steering gear box 6-3
- steering pinion 6-3
- steering pinion dust seal 6-3
- steering rack 6-3
- steering shaft assembly 6-5
- steering shaft compression spring 6-5
- steering wheel 6-9, 6-11
- steering wheel puller tool 23-9
- stem, valve 2-3
- stiffener, flywheel side 9-17
- stiffener, PTO side 9-17
- strap, A-plate 6-15
- strap, fuel tank 11-3, 11-5
- strobe light 4-29
- strobe light lens 4-29
- stud 9-17
 - exhaust mounting
 - engine
 - exhaust mounting stud 10-15
 - intake mounting
 - engine
 - intake mounting stud 10-15, 12-11
 - lug 17-13, 17-19, 18-23, 21-3
- stud, ball 7-13, 8-11, 17-9, 17-15
- support yoke (steering) 6-3
- support, bushing 6-25
- support, front body 1-41
- suppressor, voltage 4-5, 4-7, 4-9, 22-3, 22-5, 22-7, 22-9
- switch plate cover 4-29
- switch
 - four-position 22-5, 22-9
 - key 4-15, 4-17
 - key, uncommon 4-21
 - light rocker 4-5, 4-7, 4-9, 4-15, 4-17
 - limit 4-5, 4-7, 4-9, 7-13, 8-15, 8-17, 17-3
 - rocker 4-17
 - Tow/Run 19-11
 - turn signal 4-11, 4-13
- switch assembly 4-29
- switch plate, Tow/Run 19-11
- switch rubber boot 7-11, 19-11
- switch, toggle 7-11
- synchro gear 17-11
- synchronizer clutch hub 17-11
- synchronizer insert 17-11
- synchronizer sleeve 17-11
- synchronizer spring 17-11
- synchronizer, complete 17-17

T

- 12-volt solenoid 7-13, 8-11
- tachometer 23-9
- tachometer probe, diesel 23-9
- tail light bulb 4-37
- taillight 4-37
- taillight assembly 4-37
- taillight base 4-37

INDEX

taillight bezel 4-37
 taillight gasket 4-37
 taillight hardware kit 4-37
 taillight lens 4-37
 tank, fuel 11-3, 11-5
 tape, vinyl foam 1-55, 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69
 tappet 9-13
 temperature sensor 10-13
 tensioner, timing chain 10-17
 terminal block 4-5, 4-7, 4-9, 19-5, 19-7
 tester, continuity 23-5
 thermal pad 8-13
 thermometer, battery 23-3
 thread-forming grease fitting 6-13
 throttle body 12-9
 throttle return spring 11-11
 throttle spring return bracket 11-11
 thrust bearing 6-17, 6-19
 thrust plate 17-11, 17-13
 tie rod 6-15
 tie rod end 6-15
 tie wrap 4-11, 4-13, 4-23, 4-25, 4-29, 4-33, 6-3, 7-13, 8-11, 11-15, 11-17, 17-5, 17-7, 18-5, 18-7, 19-23, 22-11
 timing chain 10-17
 timing chain guide 10-17
 tire 2-3
 toggle switch 7-11
 tool
 accelerator pedal adjustment 23-3
 belt tensioning, starter/generator 23-11
 brake adjustment 23-3
 brake cable release 23-3
 brake pedal adjustment 23-3
 brake pedal tension 23-3
 cam installation 23-3
 carburetor float level 23-7
 charger bezel 23-3
 clutch alignment 23-5
 cT-wrench 23-5
 drive clutch fixed sheave 23-5
 drive clutch holder 23-5
 drive clutch spider removal 23-5
 driven clutch spring compression base 23-5
 driven clutch spring compression collar 23-5
 driven clutch spring compression nut 23-5
 governor shaft installation 23-7
 puller, special use 23-9
 steering column bearing press 23-9
 steering column retaining ring 23-9
 steering wheel puller 23-9
 transaxle axle seal 23-9
 transaxle pinion seal 23-9
 transmission 23-9

valve guide driver 23-9
 valve seat cutter 23-5
 tool kit, clutch 23-5
 touch-up paint 23-7
 Tow/Run switch 19-11
 Tow/Run switch bracket 7-11
 Tow/Run switch plate 19-11
 transaxle (Electric Vehicle) 21-3
 transaxle axle seal tool 23-9
 transaxle guard 17-21, 21-5
 transaxle pinion seal tool 23-9
 transaxle, limited-slip (Gas Vehicle) 18-13
 transaxle, open-diff (Gas Vehicle) 18-15
 transaxle, Gaziano (Gasoline Vehicle) 17-15
 transaxle, Kawasaki (Gasoline Vehicle) 17-9
 transformer, battery charger 22-3, 22-5, 22-7, 22-9
 transmission secondary shaft 17-17
 transmission shaft 17-11, 17-17
 transmission tool 23-9
 trim
 cowl 1-3
 tube
 axle 17-13, 17-19, 18-19, 18-21, 21-3
 carburetor air vent 11-3, 11-5
 crankcase vent 11-11
 oil filler 9-5, 10-19
 tune-up kit 9-3, 23-9
 turn signal 4-11
 turn signal conversion kit 4-11
 turn signal lens 4-3
 turn signal socket and lamp 4-11, 4-13
 turn signal switch 4-13
 T-wrench tool 23-5

U

U-bolt 6-21, 6-23
 upper delta clevis 6-17, 6-19
 urethane bushing 6-15, 6-17, 6-19, 6-21, 6-23

V

valve 12-15
 choke 11-19
 exhaust 9-11, 10-17
 intake 10-17
 reed 9-11
 valve clearance adjuster screw 23-9
 valve collet 10-17
 valve cover 10-15
 valve cover gasket 10-15
 valve guide 10-15
 valve guide driver tool 23-9
 valve guide reamer 23-9
 valve guide, intake 9-11
 valve seal 10-15
 valve seat 9-9

valve seat cutter 23-5, 23-11
 valve seat cutter guide 23-11
 valve seat cutter tool 23-5
 valve seat t-wrench 23-11
 valve spring 9-11, 10-17
 valve spring compressor 23-11
 valve spring retainer 9-11
 valve stem 2-3
 v-belt 7-9
 vent
 fuel tank 11-3, 11-5, 12-3
 transaxle 18-13, 18-15
 vent barb 11-3, 11-5
 vent, barb 11-7, 12-7
 volt ohm meter 23-11
 voltage limiter 4-5, 4-27
 voltage regulator 7-13, 8-11
 voltage suppressor 4-5, 4-7, 4-9, 22-3, 22-5, 22-7, 22-9

W

warning light, low oil 4-15
 washer, insulating 20-3
 water quality light 19-19
 wedge, bearing puller 23-3
 weight
 clutch 15-5, 16-5
 counterbalance 9-15
 secondary clutch 15-5, 16-5
 weldment
 governor bracket 12-13, 18-11
 press 23-5
 wheel 2-3
 steering 6-9, 6-11
 windshield
 one-piece 1-25
 windshield channel 1-27
 windshield frame pad 1-55, 1-57, 1-59, 1-61, 1-63, 1-65, 1-67, 1-69
 windshield, hinged 1-27
 wire
 green, starter/generator 8-3, 8-5, 8-7
 ground, fuel tank 8-3, 8-5, 12-3
 wire assembly, battery charger 22-5
 wire harness 4-23, 4-25, 4-31, 7-3, 8-3, 8-5, 19-5, 19-7
 wire harness, headlight 4-7, 4-9
 wire harness, lighting 4-7, 4-9
 wire lead, ignition 9-7
 woodruff key 17-9
 wrap, tie 4-11, 4-13, 4-23, 4-25, 4-29, 4-33, 6-3, 7-13, 8-11, 11-15, 11-17, 17-5, 17-7, 18-5, 18-7, 19-23, 22-11
 wrench, spanner 23-9

INDEX

Y

yoke, gear 23-7

yoke, support (steering) 6-3



Club Car, Inc.
P.O. Box 204658
Augusta, GA 30917-4658
USA

Web	www.clubcar.com
Phone	1.706.863.3000
	1.800.ClubCar
Int'l	+1 706.863.3000
Fax	1.706.863.5808