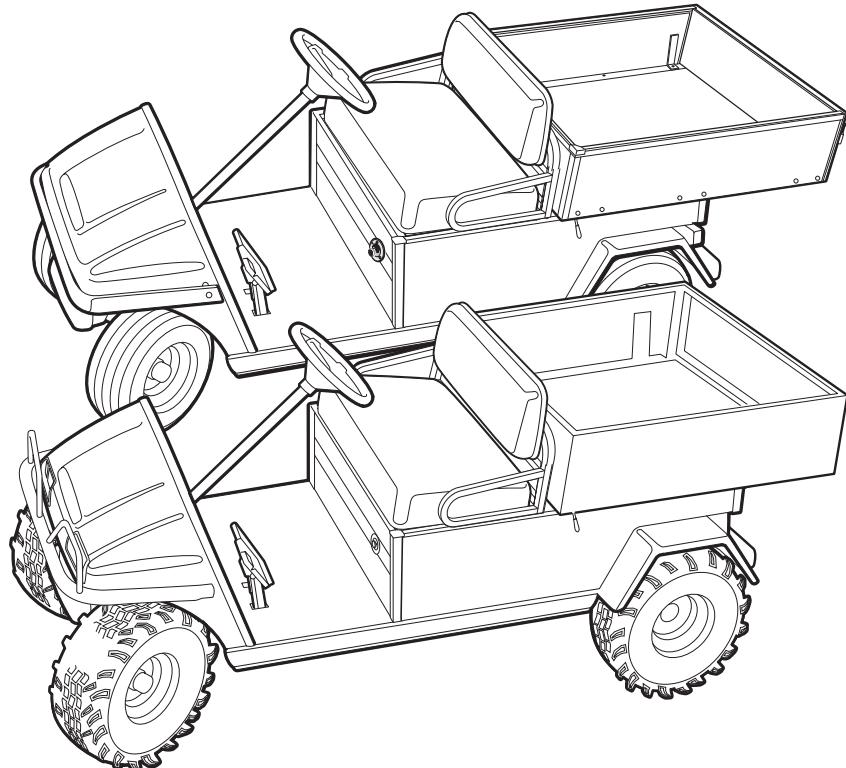


Club Car

®

2011
Turf/Carryall 2, 252, 2 Plus,
and XRT 900
Illustrated Parts List



Gasoline and Electric Vehicles

Manual Number 103814609
Edition Code 0515C0616B

USING THE ILLUSTRATED PARTS LIST

⚠ WARNING

- **This manual is to be used only for identification and ordering of service parts. Be sure to read and use the maintenance and service manual before attempting any vehicle repairs.**

This manual covers all Turf/Carryall 2, 2 Plus, 252 and XRT 900 vehicles built during the 2011 model year.

The manual is divided into sections. Note that there are two or three flags on the outside edge of each page. The first flag contains the section number of which that page is a part. The other flag (or flags) contains the letter G or E, signifying that the page pertains to the electric or gasoline vehicles only.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section numbers, and under them, the individual page titles and numbers to be found in that section. The index can be used to find specific parts and assemblies. The index is divided into numerical and alphabetical listings with the page numbers in italic text.

There is a two-page spread for each individual page title in the Table of Contents. On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used.

Note that a part description may be indented. This indentation corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to *level 2* is a component of the *level 1* part (assembly) that it is listed under. A *level 3* part is a component of the *level 2* part that it is listed under, and a *level 4* part is a component of the *level 3* part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part is *the quantity used per next higher level assembly of which it is a component*. A part that is not indented is a *level 1* part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.



P. O. Box 204658
Augusta, Georgia 30917-4658 USA
Telephone 706-863-3000
Service Parts Fax 706-855-7413
www.clubcar.com

HOW TO ORDER PARTS

Replacement parts and accessories can be obtained from our network of authorized dealers and distributors. You can obtain the name and phone number of your closest authorized Club Car dealer or distributor by visiting our web site at www.clubcardealer.com, by calling our toll-free Service Parts and Technical Assistance hotline at (800) 872-2246 or (706) 863-3000, extension 3887, or by scanning this Quick Response (QR) code to be taken to the Club Car dealer locator. **Refer to Figure 1.** Download a QR code reader such as RedLaser or Barcode Scanner to your cell phone or tablet.



Figure 1 Dealer Locator QR Code

CUSTOMER SATISFACTION SURVEY

Let your voice be heard!

Please take time to participate in the Technical Publications satisfaction survey. Obtaining feedback from our customers is important to the department's continuous improvement process. The online survey takes less than five minutes and responses will help the department to examine current performance as well as identify areas for future improvement.

Our top priority is to provide timely, accurate, and user friendly manuals.

The online satisfaction survey can be found at: <http://bit.ly/1w9uFMh>



Figure 2 Survey QR Code

NOTE: *This illustrated parts list represents the most current information at the time of publication. Club Car, LLC is continually working to further improve its vehicles and other products. These improvements may affect the parts used to service the vehicle. Any modification and/or significant change in specifications will be forwarded to all Club Car and Carryall distributors/dealers and will, when applicable, appear in future editions of this illustrated parts list.*

Club Car, LLC reserves the right to change specifications and designs at any time without notice and without the obligation of making changes to units previously sold.

Copyright © 2010 Club Car, LLC
Club Car and *ArmorFlex*
are registered trademarks of Club Car, LLC
This manual effective August 1, 2010.

CONTENTS

SECTION 1 – BODY AND TRIM

Winch Kit, 1700 lb – CA Turf 252/272 & XRT 900/1200	1-3
Front Body and Trim – Turf/Carryall 2, 2 Plus, and 6	1-5
Front Body and Trim – Turf/Carryall 252 and XRT 900	1-7
Splash Guard – Gasoline Vehicles Only	1-9
Dash Pockets and Floormat	1-11
Beverage Holder	1-13
Mirror, Rear-View – without Cab	1-15
Grommets, Chassis	1-17
Seat Bottom	1-19
Seat Back Assembly	1-21
Windshield, Hinged	1-23
Windshield, Non-Hinged	1-25
Canopy Kit, White	1-27
Canopy Kit, Beige	1-29
Canopy Kit, Black	1-31
Hip Restraints and Seat Back Mounting	1-33
Tilt Bed, Extruded Hinge, and Latch	1-35
Latch Plate	1-37
Prop Rod	1-39
Cargo Box (Aluminum)	1-41
Cargo Box (Aluminum) Mounting	1-43
Cargo Box (Steel)	1-45
Bed Mat	1-47
Stake Side Kit	1-49
Electric Bed Lift – Gasoline Vehicles	1-51
Electric Bed Lift – Electric Vehicle	1-53
Hydraulic Bed Lift Kit	1-55
Portable Refreshment Center	1-57
Toolboxes	1-59
Trailer Hitch	1-61
Trailer Hitch Ball	1-63
Receiver Hitch	1-65
Rear Body Trim – Turf/Carryall 1, 2, 2 Plus, and 6	1-67
Rear Body Trim – Turf/Carryall 252 and XRT 900	1-69
Cab, Curtis – Turf/Carryall 2, 2 Plus, 252 and XRT 900	1-71
Mirror, Inside Rear-View – Curtis Cab	1-73
Mirror, Side-View – Curtis Cab	1-75
Accessory Switch Panel – Curtis Cab	1-77

CONTENTS

Strobe Light – Curtis Cab	1-79
Work Lights – Curtis Cab	1-81
Fan/Defogger – Curtis Cab	1-83
Heater – Curtis Cab	1-85
Van Box	1-87

SECTION 2 – WHEELS AND TIRES

Wheels and Tires – Turf/Carryall 2 and 2 Plus	2-3
Wheels and Tires, Off-Road Tread – Turf/Carryall 252 and XRT 900	2-5
Wheels and Tires, Turf Tread – Turf/Carryall 252 and XRT 900	2-7
Wheel Covers	2-9

SECTION 3 – DECALS

Decals – Turf/Carryall 2 IQ Plus Electric (Page 1 of 2)	3-3
Decals – Turf/Carryall 2 IQ Plus Electric (Page 2 of 2)	3-5
Decals – Turf/Carryall 252 and XRT 900 IQ Plus Electric (Page 1 of 2)	3-7
Decals – Turf/Carryall 252 and XRT 900 IQ Plus Electric (Page 2 of 2)	3-9
Decals – Turf/CA 2 Gasoline Vehicles (Page 1 of 2)	3-11
Decals – Turf/CA 2 Gasoline Vehicles (Page 2 of 2)	3-13
Decals – Carryall 2 Plus Gasoline Vehicles (Page 1 of 2)	3-15
Decals – Carryall 2 Plus Gasoline Vehicles (Page 2 of 2)	3-17
Decals – Turf/Carryall 252 Gasoline Vehicles (Page 1 of 2)	3-19
Decals – Turf/Carryall 252 Gasoline Vehicles (Page 2 of 2)	3-21
Decals – XRT 900 Gasoline Vehicles (Page 1 of 2)	3-23
Decals – XRT 900 Gasoline Vehicles (Page 2 of 2)	3-25
Decals, Badging – Turf/Carryall 2 and 2 Plus	3-27
Decals, Badging – Turf/Carryall 252	3-29
Decals, Badging – XRT 900	3-31

SECTION 4 – LIGHTS, CONTROLS, AND INDICATORS

Headlights	4-3
Light Kit, Standard – Carryall 2 Gasoline Vehicles	4-5
Light Kit, Standard – Carryall 2 IQ Plus Electric Vehicles	4-9
Turn Signal Kit – DS and Utility Gasoline and Electric Vehicles	4-13
Turn Signal (with Horn Button) Kit – DS and Utility Gas and Electric Vehicles	4-15
Instrument Panel and Electrical Components – Turf/Carryall 2 and 252 Gas	4-17
Instrument Panel and Electrical Components – Carryall 2 Plus and XRT 900 Gas	4-19
Instrument Panel and Electrical Components – Turf/Carryall 2 Electric	4-21
Instrument Panel with Electrical Components – Turf/Carryall 252 and XRT 900 Electric	4-23

CONTENTS

Indicator, Charger Info – Elec. Vehicles with Maint-Free Batteries and DeltaQ Charger	4-25
Keys and Keyswitches, SmartKey Kit – Electric Vehicle	4-27
Keys and Keyswitches, Uncommon – Gas Vehicle	4-29
DC Converter (Isolated) – Electric Vehicle	4-31
DC Converter (Isolated) – CE Electric Vehicle	4-33
Voltage Limiter – Gasoline Vehicle	4-35
Strobe Light, Post-Mounted – Gasoline Vehicles	4-37
Strobe Light, Post-Mounted – Electric Vehicles	4-39
Strobe Light, Canopy-Mounted	4-41
Light Bar – Turf/CA 252 and XRT 900 Gas Vehicles	4-43
Light Bar – Turf/CA 252 and XRT 900 Electric Vehicles	4-45
Horn with Floor-Mounted Button	4-47
Horn with Column-Mounted Button	4-49
Hour Meter – Carryall/Turf 2 IQ Plus Electric Vehicles	4-51
Taillights	4-53

SECTION 5 – BRAKES, PEDAL, AND CABLE ASSEMBLIES

Brake Pedal Assembly	5-3
Accelerator Pedal Assembly – Electric Vehicles with MCOR	5-5
Accelerator Pedal Assembly – Gasoline Vehicles	5-7
Accelerator Rod and Pedal Assembly – Gasoline Vehicles	5-9
Front Brake Assembly – Vehicles with Four-Wheel Brakes	5-11
Front Brake Cables and Equalizer – Vehicles with Four-Wheel Brakes	5-13
Rear Brake Cables and Equalizer – Vehicles with 4-Wheel Brakes	5-15
Rear Brake Assembly, Manually-Adjusted – Vehicles with 4-Wheel Brakes	5-17
Rear Brake Assembly, Self-Adjusting – Vehicle with 2-Wheel Brakes	5-19
Rear Brake Cables and Equalizer – Vehicles with Two-Wheel Brakes	5-21

SECTION 6 – STEERING AND SUSPENSIONS – TURF/CA 2 & 2 PLUS

Steering Gear Assembly (Wanda) – Maint.-Free Ball Joint	6-3
Steering Column – Utility	6-5
Intermediate Steering Shaft (Wanda) – Turf/CA 1/2/6	6-7
Steering Wheel	6-9
Steering Wheel with Clip	6-11
Front Spindles and Hubs – Vehicles with Two-Wheel Brakes and Maintenance-Free Ball Joints	6-13
Front Suspension, Upper – Vehicles with Two-Wheel Brakes and Maintenance-Free Ball Joints	6-15
Front Suspension, Lower – Vehicles with Two-Wheel Brakes and Maintenance-Free Ball Joints	6-17
Heavy Duty Front Springs	6-19
Front Spindles and Hubs – Vehicles with Four-Wheel Brakes and Maintenance-Free Ball Joints	6-21

CONTENTS

Front Suspension, Upper – Vehicles with Four-Wheel Brakes and Maintenance-Free Ball Joints	6-23
Front Suspension, Lower – Vehicles with Four-Wheel Brakes and Maintenance-Free Ball Joints	6-25
Rear Suspension – Gasoline Turf/Carryall 2, 2 Plus, and 6	6-27
Rear Suspension – Turf/Carryall 2 and 6 IQ Plus Vehicles	6-29
Stabilizer Bar – Turf/Carryall 2, 6, and Carryall 2 Plus Gasoline Vehicles	6-31

SECTION 7 – STEERING AND SUSPENSIONS – 252 AND 900

Front Frame Plate Hardware – Turf/Carryall 252 and XRT 900	7-3
Steering Gear Assembly (Wanda) – Maint.-Free Ball Joint	7-5
Steering Column – Utility	7-7
Intermediate Steering Shaft – Turf/Carryall 252 and XRT 900 Vehicles	7-9
Steering Wheel	7-11
Steering Wheel with Clip	7-13
Front Spindles and Hubs – Vehicles with Four-Wheel Brakes and Maintenance-Free Ball Joints	7-15
Front Suspension, Upper – Turf/Carryall 252 and XRT 900 with Maintenance-Free Ball Joints	7-17
Front Suspension, Lower – Turf/Carryall 252 and XRT 900 with Maintenance-Free Ball Joints	7-19
Rear Suspension – Gasoline Turf/Carryall 252 and XRT 900	7-21
Rear Suspension – Turf/Carryall 252 and XRT 900 IQ Plus	7-23
Stabilizer Bar – Turf/Carryall 252 and XRT 900	7-25

SECTION 8 – ELECTRICAL SYSTEM – GASOLINE VEHICLE

Wiring, Fuses, and Diodes – Turf/Carryall 2 and 252 with AMD Starter/Gen	8-3
Wiring, Fuses, and Diodes – Carryall 2 Plus with AMD Starter/Gen	8-5
Wiring, Fuses, and Diodes – XRT 900 with AMD Starter/Gen	8-7
Starter/Generator Assembly (Pedal-Start), Model 114-01-4009A	8-9
Starter/Generator Assembly (Key-Start), Model 114-04-4001A	8-11
Starter/Generator Mounting – 114-0x-400xx Models	8-13
Operation and Maintenance Switch	8-15
Electrical Component Box – Turf/Carryall 2 and 252	8-17
Electrical Component Box – Carryall 2 Plus	8-19
Electrical Component Box – XRT 900	8-21
Forward/Reverse Shifter Switches – Dash Mounted Shifter	8-23
Charging Diode, Key-Start – XRT Vehicles	8-25
Battery – Gasoline Utility Vehicles	8-27

SECTION 9 – ENGINE (S27) W/O ACR, 50-STATE

FE350 Engine (S27) w/o ACR, Shrouds, and Brackets; 50-State	9-3
FE350 Engine (S27) – Ignition Components and Flywheel	9-5
FE350 Engine (S27) – Oil Circulation	9-7

CONTENTS

FE350 Engine (S27) – Cylinder Head	9-9
FE350 Engine (S27) – Crankcase, Camshaft, and Oil Sensor	9-11
FE350 Engine (S27) – Crankcase and Crankshaft	9-13
FE350 Engine (S27) – Mounting	9-15

SECTION 10 – FUEL, INTAKE, AND GOVERNOR SYSTEMS

Fuel System, 50-State	10-3
Carbon Canister – To Mid-2011 Model Year	10-5
Carbon Canister – From Mid-2011 Model Year	10-7
Carburetor Assembly – FE350 S27	10-9
Carburetor Mounting, Utility, FE350 S27	10-11
Governor and Accelerator Cables	10-13
Air Filter and Intake System	10-15

SECTION 11 – EXHAUST SYSTEM

Exhaust System – FE350 Engine	11-3
-------------------------------------	------

SECTION 12 – DRIVE BELT AND CLUTCHES

Drive Belt	12-3
Drive Clutch – Turf/Carryall 2 and 252	12-5
Drive Clutch – XRT 900 and Carryall 2 Plus	12-7
Driven Clutch – Turf/Carryall 2 and 252	12-9
Driven Clutch – Carryall 2 Plus and XRT 900	12-11

SECTION 13 – UNITIZED TRANSAXLE – GASOLINE VEHICLES

Forward/Reverse Shifter	13-3
Shifter Cable – Turf/CA 2/252/2 Plus and XRT900	13-5
Kawasaki Transaxle – Gear Cases and Levers	13-7
Kawasaki Transaxle – F&R Transmission and Gear Reduction	13-9
Kawasaki Transaxle – Differential and Axles	13-11
Graziano Transaxle – Gear Cases and Levers	13-13
Graziano Transaxle – F&R Transmission and Gear Reduction	13-15
Graziano Transaxle -Differential and Axles	13-17

SECTION 14 – ELECTRICAL SYSTEM, ELECTRIC VEHICLES – TO EARLY-2011 MODEL YEAR

Motor Controller Output Regulator (MCOR)	14-3
Wiring – Electric Vehicle – To Early-2011 Model Year	14-5
Battery Charger Receptacle – To Early-2011 Model Year	14-7

CONTENTS

Tow/Run Switch and Circuit Breaker – IQ Plus	14-9
Batteries, 6-Volt, Standard Duty, U.S. Battery	14-11
Batteries, 6-Volt, Heavy Duty, U.S. Battery	14-13
Batteries, 6-Volt, Standard Duty, JCI	14-15
Batteries, 6-Volt, Heavy Duty, Crown	14-17
Single Point Watering System, 6V	14-19
Computer, Controller, and Solenoid – for U.S. Battery Only – To Early-2011 Model Year	14-21
Computer, Controller, and Solenoid – for JCI & Crown Batteries – To Early-2011 Model Year	14-23
Ferrite Beads, CE	14-25

SECTION 15 – ELECTRICAL SYSTEM, ELECTRIC VEHICLES – FROM EARLY-2011 MODEL YEAR

Motor Controller Output Regulator (MCOR)	15-3
Wiring – Electric Vehicle – From Early-2011 Model Year	15-5
Battery Charger Receptacle – From Early-2011 Model Year	15-7
Tow/Run Switch and Circuit Breaker – IQ Plus	15-9
Batteries, 6-Volt, Standard Duty, U.S. Battery	15-11
Batteries, 6-Volt, Heavy Duty, U.S. Battery	15-13
Batteries, 6-Volt, Standard Duty, JCI	15-15
Batteries, 6-Volt, Heavy Duty, Crown	15-17
Single Point Watering System, 6V	15-19
Computer, Controller, and Solenoid – for U.S. Battery Only – From Early-2011 Model Year	15-21
Computer, Controller, and Solenoid – for JCI & Crown Batteries – From Early-2011 Model Year	15-23
Ferrite Beads, CE	15-25

SECTION 16 – MOTOR (MODEL DA5-4006) – IQ PLUS

Motor (Model DA5-4006) – IQ Plus	16-3
--	------

SECTION 17 – TRANSAKLE – ELECTRIC VEHICLES

Transaxle – Electric Vehicles	17-3
Differential Guard – Electric Vehicles	17-5

SECTION 18 – BATTERY CHARGERS – TO EARLY-2011 MODEL YEAR

IQ Plus Battery Charger (Models 25730-11,-18,-19), Domestic	18-3
IQ Plus Battery Charger (Models 25880-11 and -18), International	18-5
Onboard IQ Plus Battery Charger (Model 25260-11), Domestic	18-7
Onboard IQ Plus Battery Charger (Model 25660-40), International	18-9
Onboard IQ Plus Charger and Cord Reel Mounting (To Early-2011 MY), Page 1 of 2	18-11
Onboard IQ Plus Charger and Cord Reel Mounting, Page 2 of 2	18-13

CONTENTS

SECTION 19 – BATTERY CHARGERS – FROM EARLY-2011 MODEL YEAR

IQ Plus Battery Charger (Models 25730-11,-18,-19), Domestic	19-3
IQ Plus Battery Charger (Models 25880-11 and -18), International	19-5
Onboard IQ Plus Battery Charger (Model 25260-50), Domestic	19-7
Onboard IQ Plus Battery Charger (Model 25660-50), International	19-9
Onboard IQ Plus Charger and Cord Reel Mounting (From Early-2011 MY), Page 1 of 2	19-11
Onboard IQ Plus Charger and Cord Reel Mounting, Page 2 of 2	19-13

SECTION 20 – MAINTENANCE AND SERVICE TOOLS

Maintenance and Service Tools	20-3
Maintenance and Service Tools, Continued	20-5
Maintenance and Service Tools, Continued	20-7

SECTION i – INDEX

BODY AND TRIM

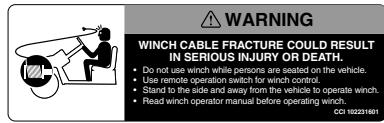
1

G

E

1**G****E****1**

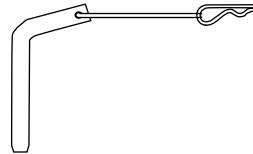
(2)



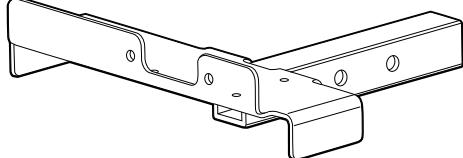
(3)



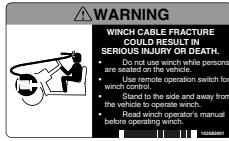
(4)



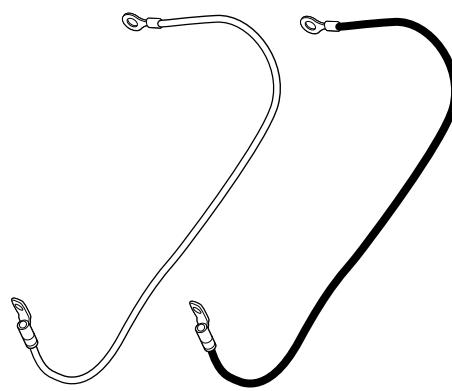
(5)



(6)

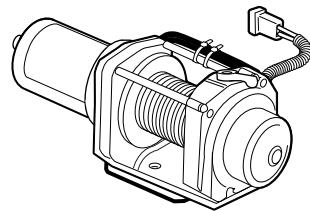


(7)



(8)

(9)



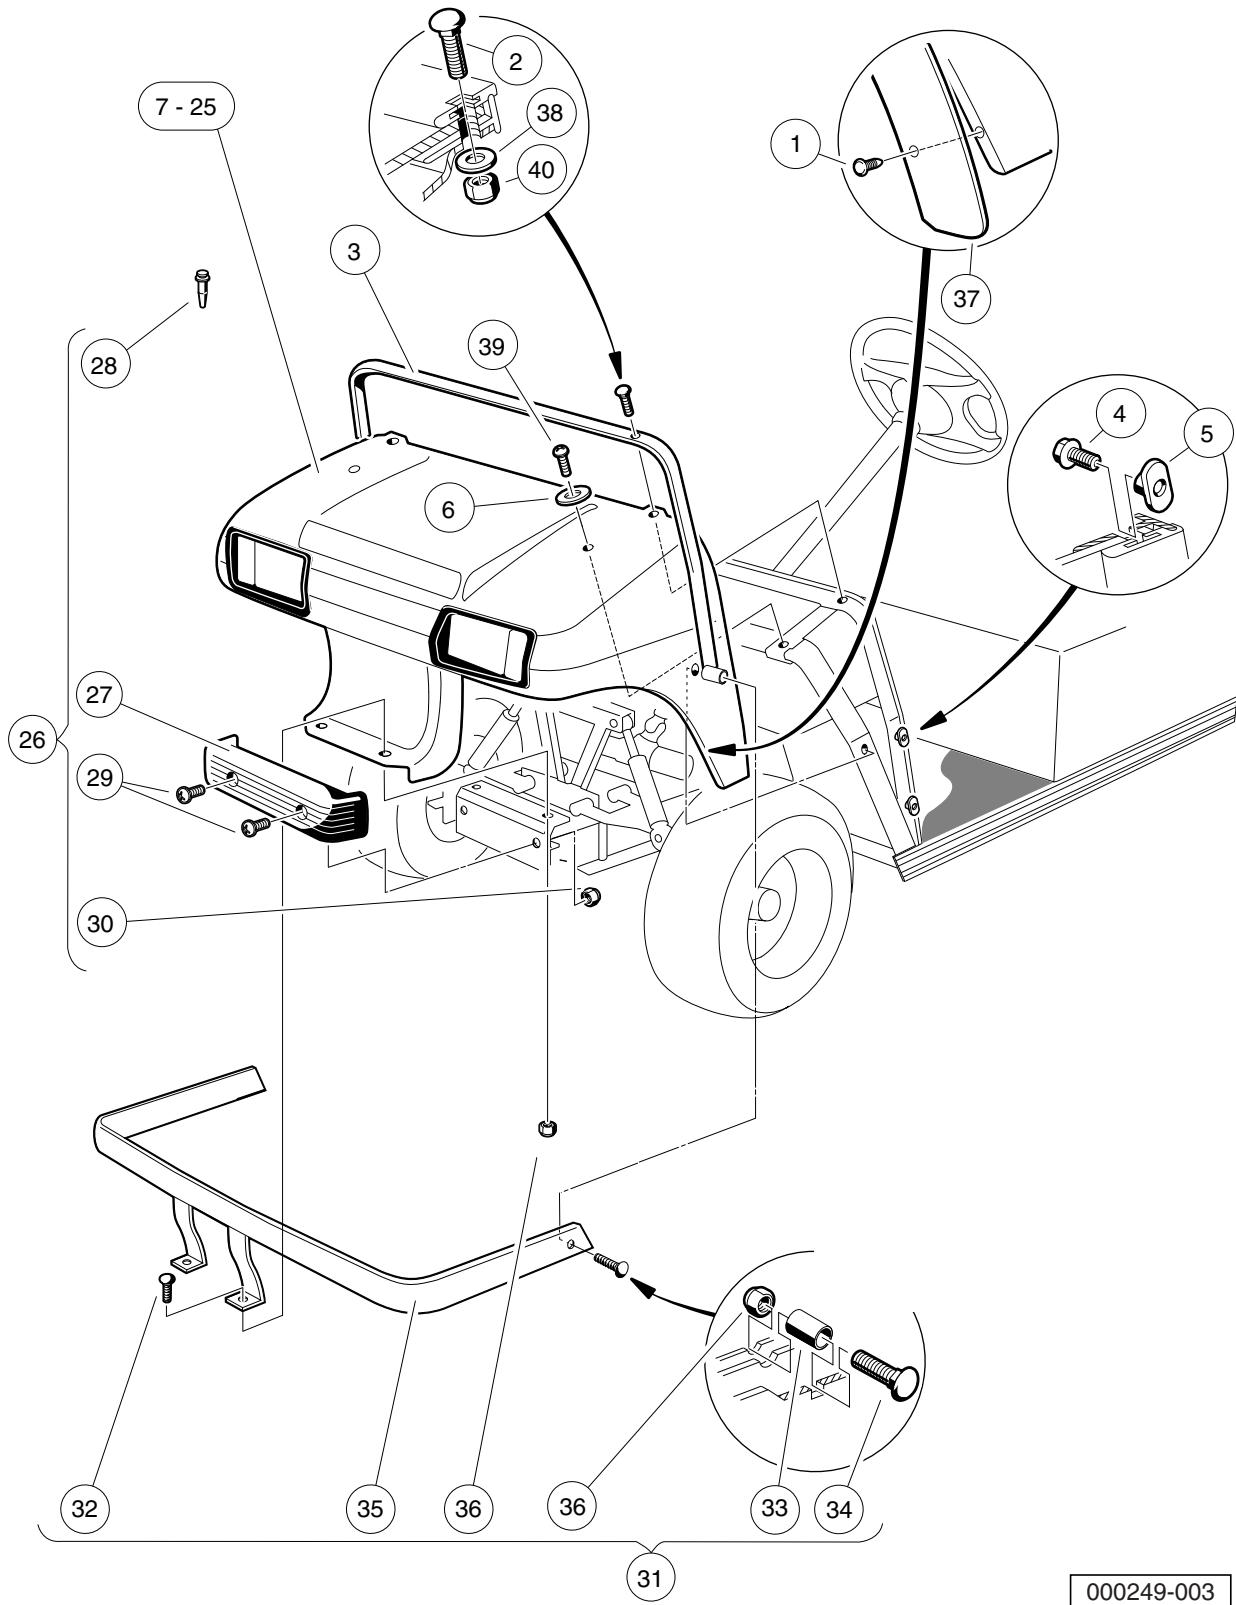
(10)

(11)

001227-001

WINCH KIT, 1700 LB – CA TURF 252/272 & XRT 900/1200

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	1
1	<u>103696101</u>	Kit, Winch, 1700 Lbs (includes items 2 through 11)	1
2	<u>101576802</u>	Conduit, 1/2 Split Convol Ele	9
3	<u>102231601</u>	Decal, Winch Cable Fracture Warning	1
4	<u>102349501</u>	Tie Wrap, 8.00", Black	12
5	<u>102718301</u>	Pin, Receiver, 5/8 X 3"	1
6	<u>103212302</u>	Winch, Weldment, Bracket li	1
7	<u>103582401</u>	Decal-winch, Warning	1
8	103696201	Power Wire, #8 Red 36"	1
9	103696301	Power Wire, #8 Black 36"	1
10	103696401	Winch, 1700 Lbs, Asm	1
11	<u>8639</u>	Tie Wrap, 11" Nylon	10

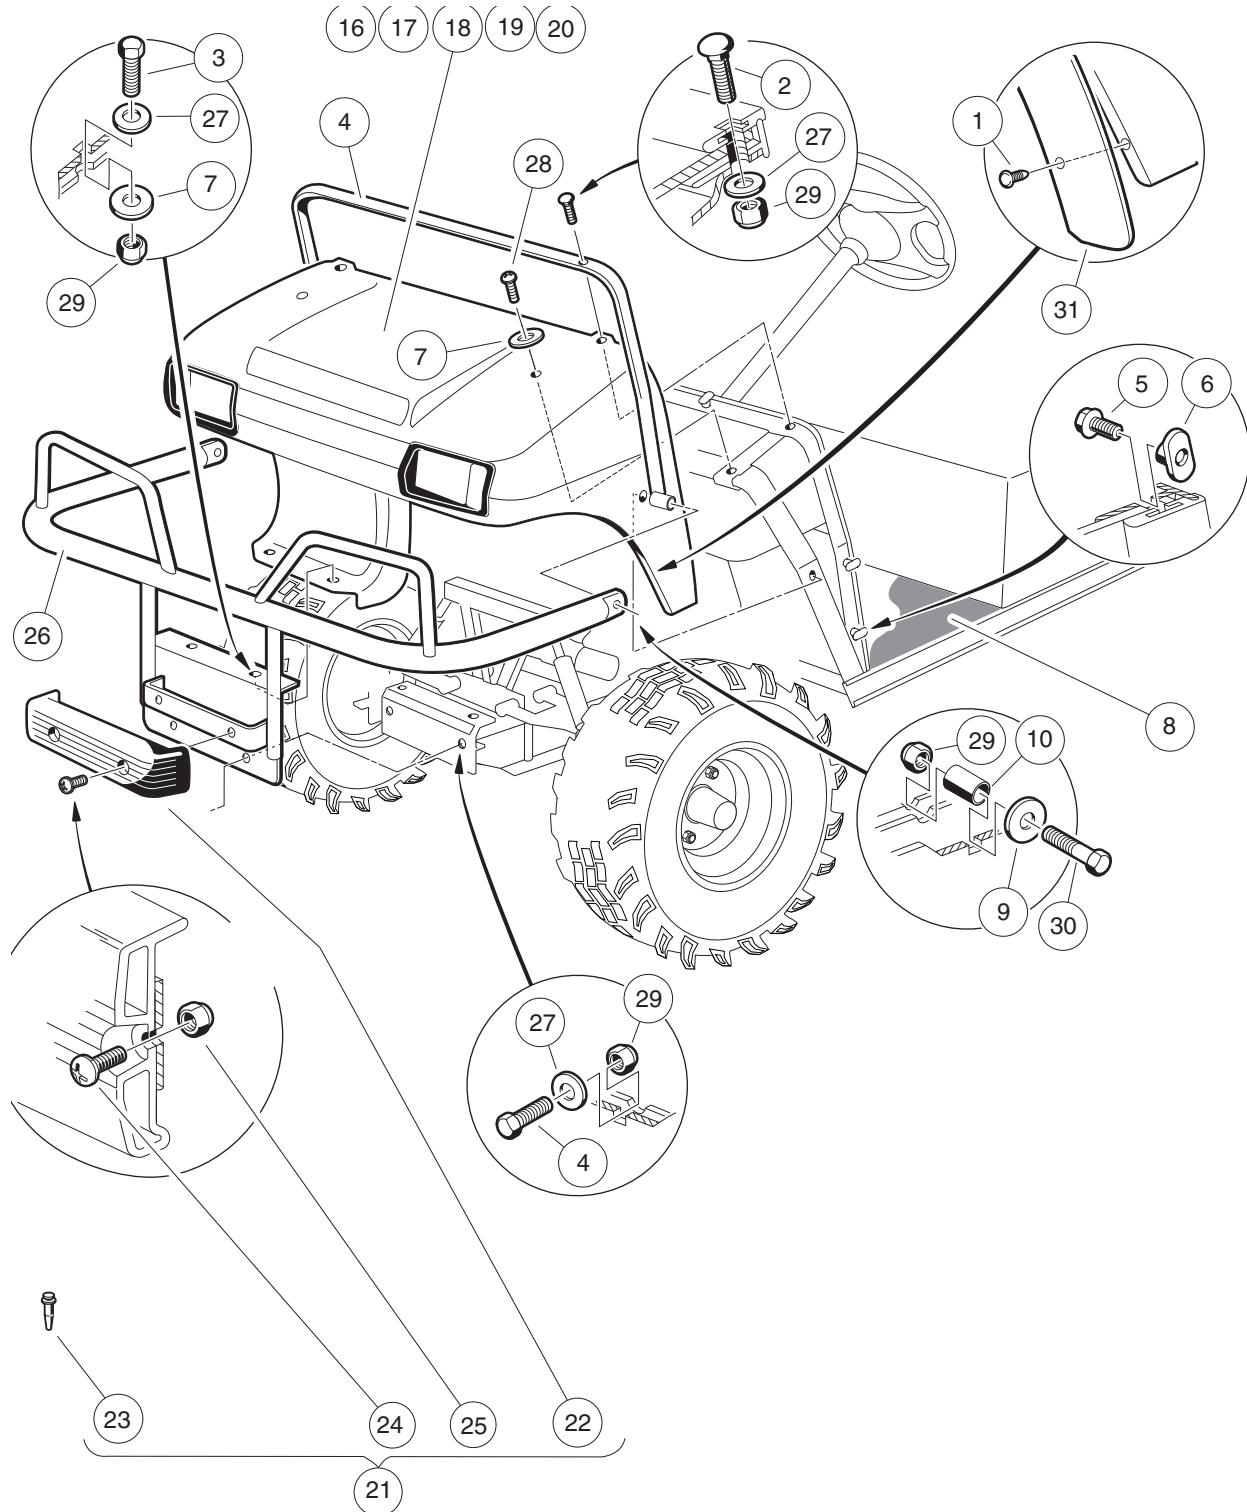
1**G****E**

000249-003

FRONT BODY AND TRIM – TURF/CARRYALL 2, 2 PLUS, AND 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	1
1	<u>1010434</u>	Barrel - Plastic	12
2	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	2
3	<u>1011014</u>	Trim, Cowl	1
4	<u>1011017</u>	Screw, #8-32 X 0.375	6
5	<u>1011394</u>	T-Nut Package (Set of 4)	1
6	<u>1015075</u>	Washer, 5/16 Flat Type A	2
7	<u>101692501</u>	Cowl, TPO, Beige	1
8	<u>101692502</u>	Cowl, TPO, White	1
9	<u>101692506</u>	Cowl, TPO, Red	1
10	<u>101692509</u>	Cowl, TPO, Pacific Blue (Royal Blue)	1
11	<u>101692510</u>	Cowl, TPO, Dark Green	1
12	<u>101692511</u>	Cowl, TPO, Black	1
13	<u>101692512</u>	Cowl, TPO, Classic Blue (Navy)	1
14	<u>101692513</u>	Cowl, TPO, Burgundy	1
15	<u>101692514</u>	Cowl, TPO, Dark Gray	1
16	<u>101692515</u>	Cowl, TPO, Safety Yellow	1
17	<u>101693901</u>	Cowl with Headlight Opening, TPO, Beige	1
18	<u>101693902</u>	Cowl with Headlight Opening, TPO, White	1
19	<u>101693906</u>	Cowl with Headlight Opening, TPO, Red	1
20	<u>101693909</u>	Cowl with Headlight Opening, TPO, Dark Green	1
21	<u>101693910</u>	Cowl with Headlight Opening, TPO, Black	1
22	<u>101693911</u>	Cowl with Headlight Opening, TPO, Classic Blue (Navy)	1
23	<u>101693912</u>	Cowl with Headlight Opening, TPO, Burgundy	1
24	<u>101693913</u>	Cowl with Headlight Opening, TPO, Dark Gray	1
25	<u>101693914</u>	Cowl with Headlight Opening, TPO, Safety Yellow	1
26	<u>1017080</u>	Kit, Front Bumper (includes items 27 through 30)	1
27	<u>1016868</u>	Front Bumper	1
28	<u>1016967</u>	Blind Rivet, Push Type	2
29	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2
30	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
31	<u>101734802</u>	Kit, Heavy-Duty Bumper (includes items 32 through 36)	1
32	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	2
33	<u>1010546</u>	Spacer	2
34	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	2
35	N/A	Weldment, Heavy Duty Bumper	1
36	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4
37	<u>101870401</u>	Fender Extrusion	2
38	<u>1241</u>	Washer, 5/16 Type A Flat	2
39	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2
40	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2

1
G
E

1**G****E**

000249-004

FRONT BODY AND TRIM – TURF/CARRYALL 252 AND XRT 900

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	1
1	<u>1010434</u>	Barrel - Plastic	12
2	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	2
3	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	4
4	<u>1011014</u>	Trim, Cowl	1
5	<u>1011017</u>	Screw, #8-32 X 0.375	6
6	<u>1011394</u>	T-Nut Package (Set of 4)	1
7	<u>1011578</u>	Washer, 5/16 Type B Flat	4
8	<u>101503202</u>	Floormat	1
9	<u>1015075</u>	Washer, 5/16 Flat Type A	2
10	<u>1015608</u>	Tube Spacer, Hydraulic Cylinder	2
11	<u>101693901</u>	Cowl with Headlight Opening, TPO, Beige	1
12	<u>101693902</u>	Cowl with Headlight Opening, TPO, White	1
13	<u>101693906</u>	Cowl with Headlight Opening, TPO, Red	1
14	<u>101693908</u>	Cowl with Headlight Opening, TPO, Pacific Blue (Royal Blue)	1
15	<u>101693909</u>	Cowl with Headlight Opening, TPO, Dark Green	1
16	<u>101693910</u>	Cowl with Headlight Opening, TPO, Black	1
17	<u>101693911</u>	Cowl with Headlight Opening, TPO, Classic Blue (Navy)	1
18	<u>101693912</u>	Cowl with Headlight Opening, TPO, Burgundy	1
19	<u>101693913</u>	Cowl with Headlight Opening, TPO, Dark Gray	1
20	<u>101693914</u>	Cowl with Headlight Opening, TPO, Safety Yellow	1
21	<u>1017080</u>	Kit, Front Bumper (includes items 22 through 25)	1
22	<u>1016868</u>	Front Bumper	1
23	<u>1016967</u>	Blind Rivet, Push Type	2
24	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2
25	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
26	<u>102004301</u>	Brush Guard	1
27	<u>1241</u>	Washer, 5/16 Type A Flat	6
28	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2
29	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	8
30	<u>8935</u>	Screw, 5/16-18 X 2.25 Hex-Head Cap	2
31	<u>AM10808</u>	Front Fender Extrusion - Lynx	2

1

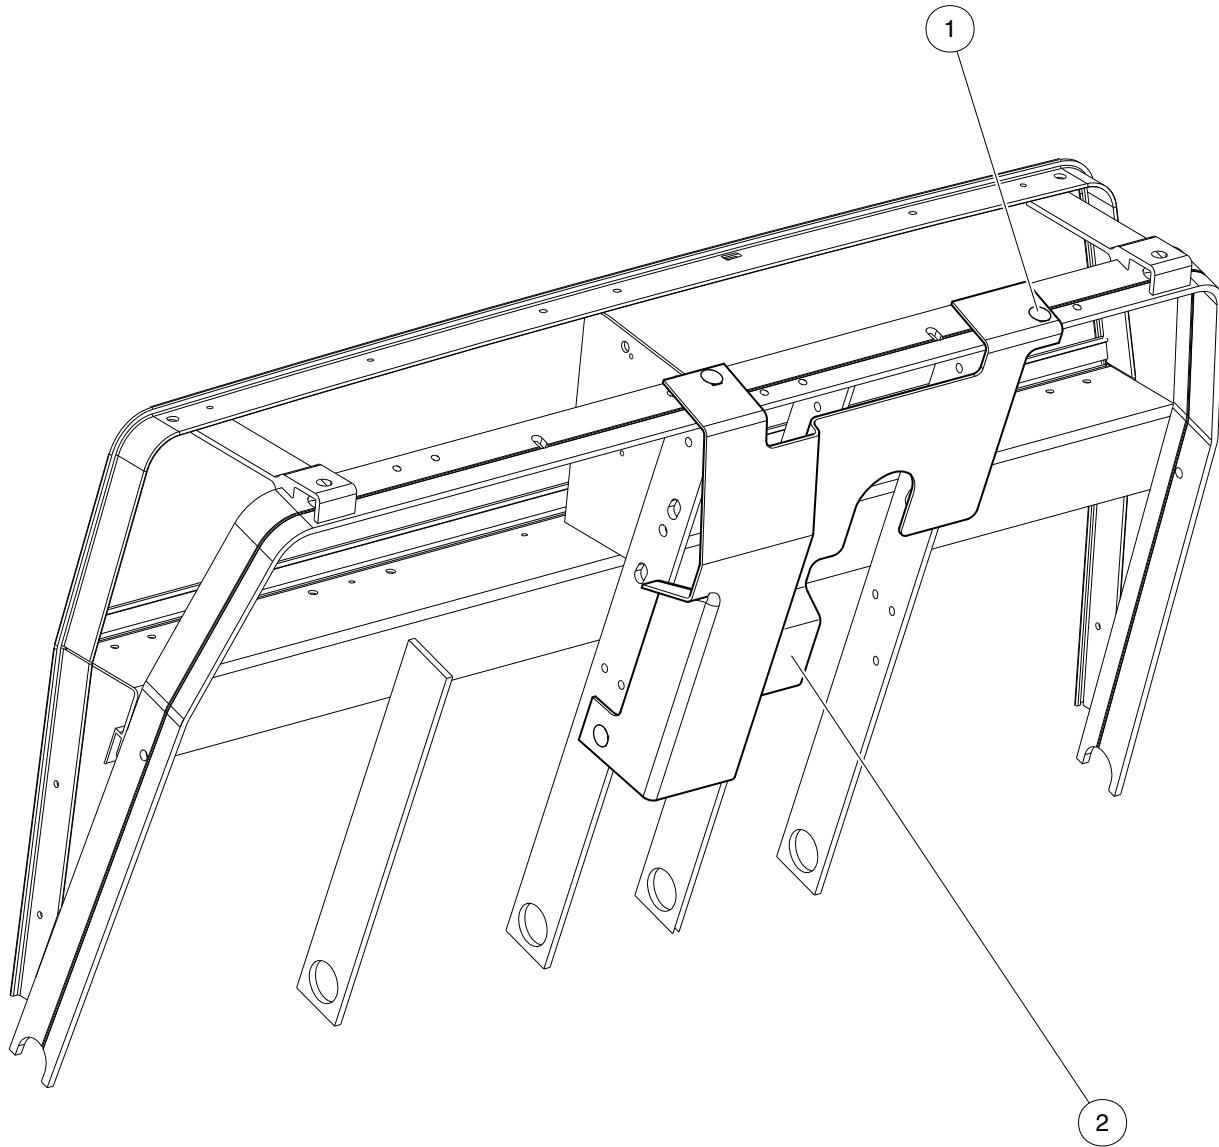
G

E

1

G

E



000593-002

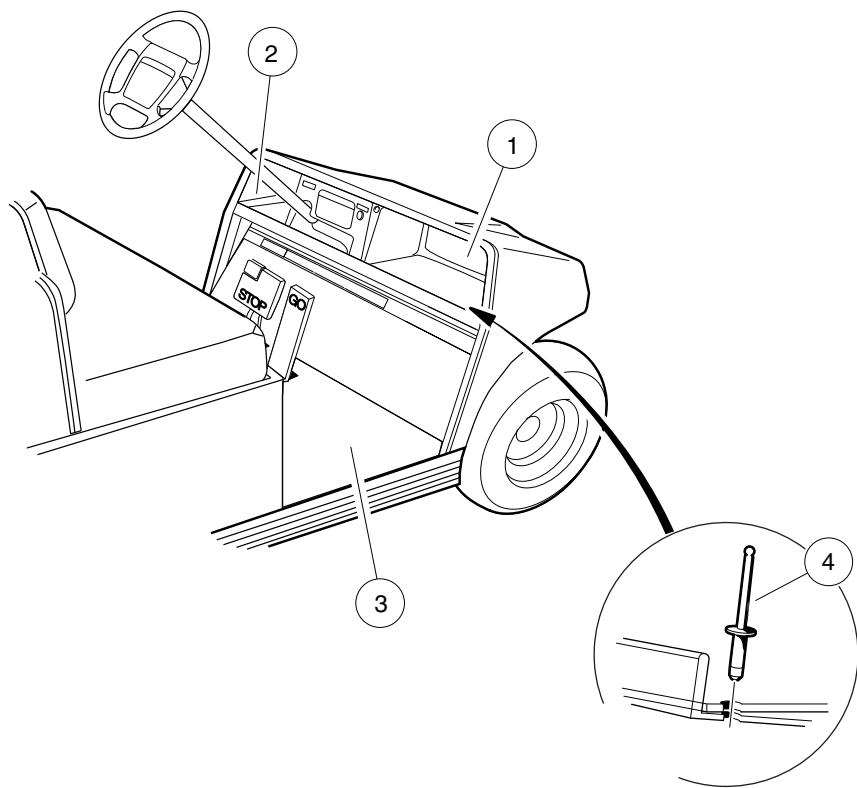
SPLASH GUARD – GASOLINE VEHICLES ONLY

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>1010434</u>	1 2 3 4 Barrel - Plastic	3
2	<u>103174401</u>	Splash Guard	1

1

G

E



000252-002

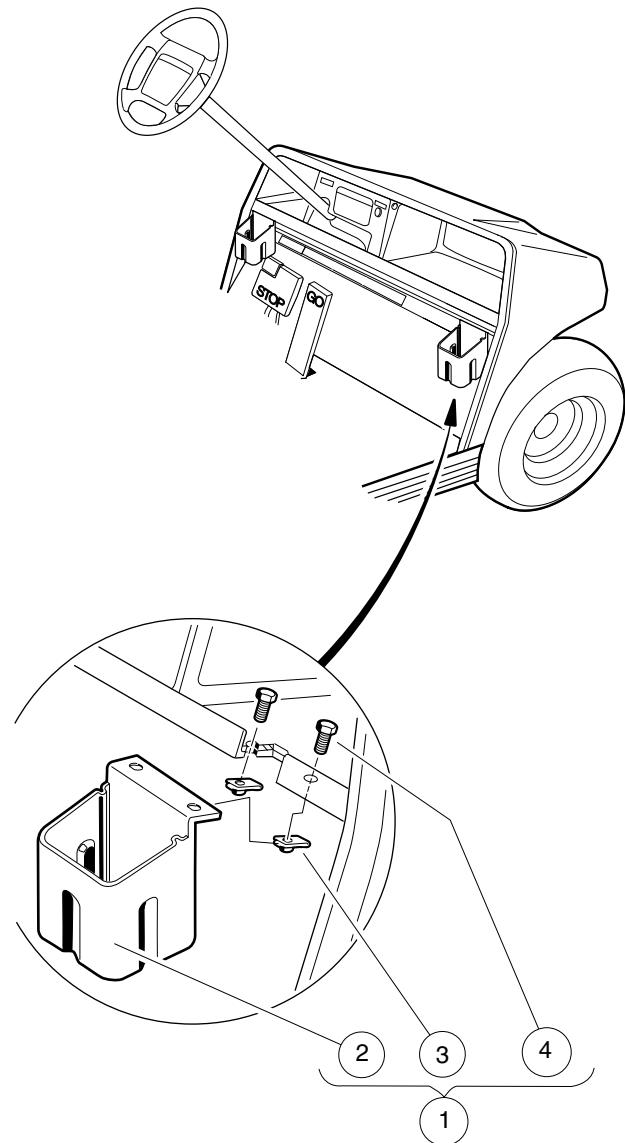
DASH POCKETS AND FLOORFORMAT

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>1013343</u>	1 2 3 4 Dash Component, Passenger-Side, Black	1
2	1013344	Dash Component, Driver-Side	1
3	<u>101503202</u>	Floormat	1
4	<u>7973</u>	Rivet, 3/16 X .400 Blind	5

1

G

E



000253-001

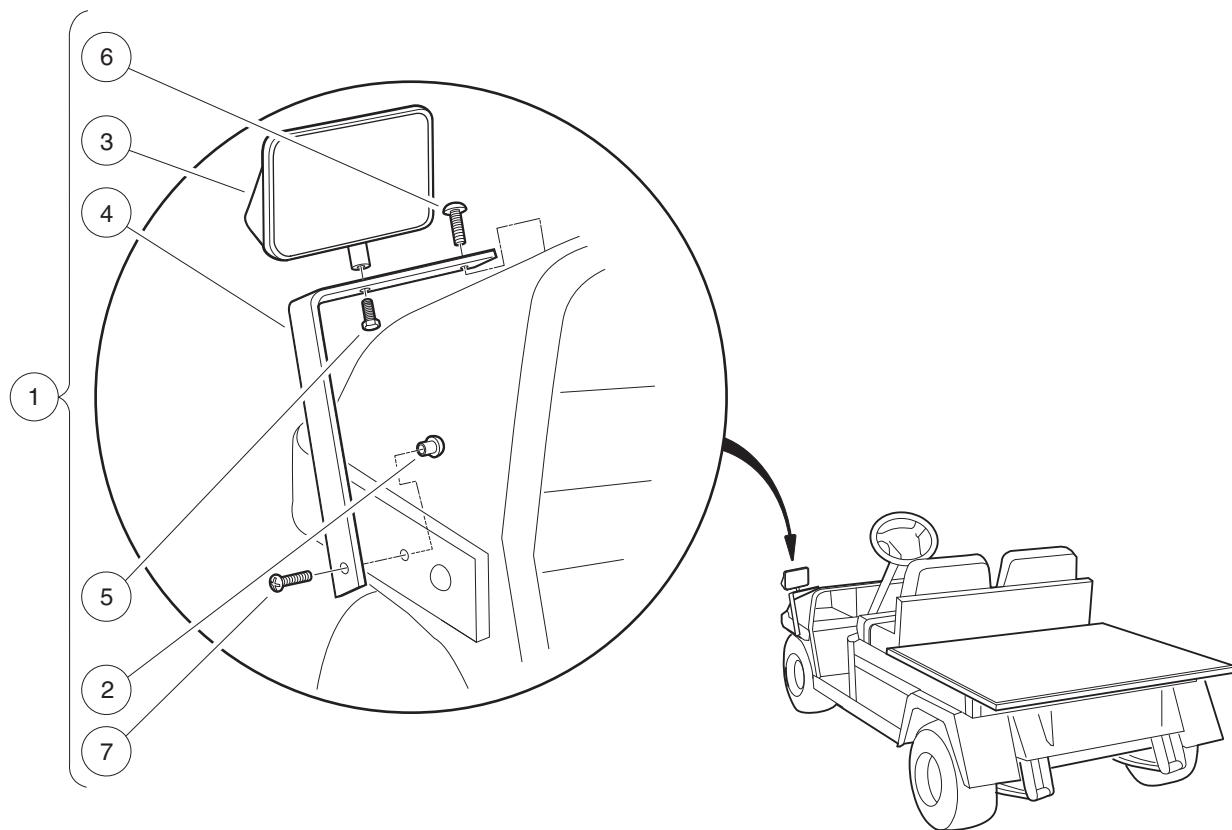
BEVERAGE HOLDER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	1
1	1013422	Cup Holder Kit (includes items 2 through 4)	2
2	1013420	Holder, Single Cup	1
3	1016952	U-Nut, 1/4-20	2
4	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2

1

G

E



001211-001

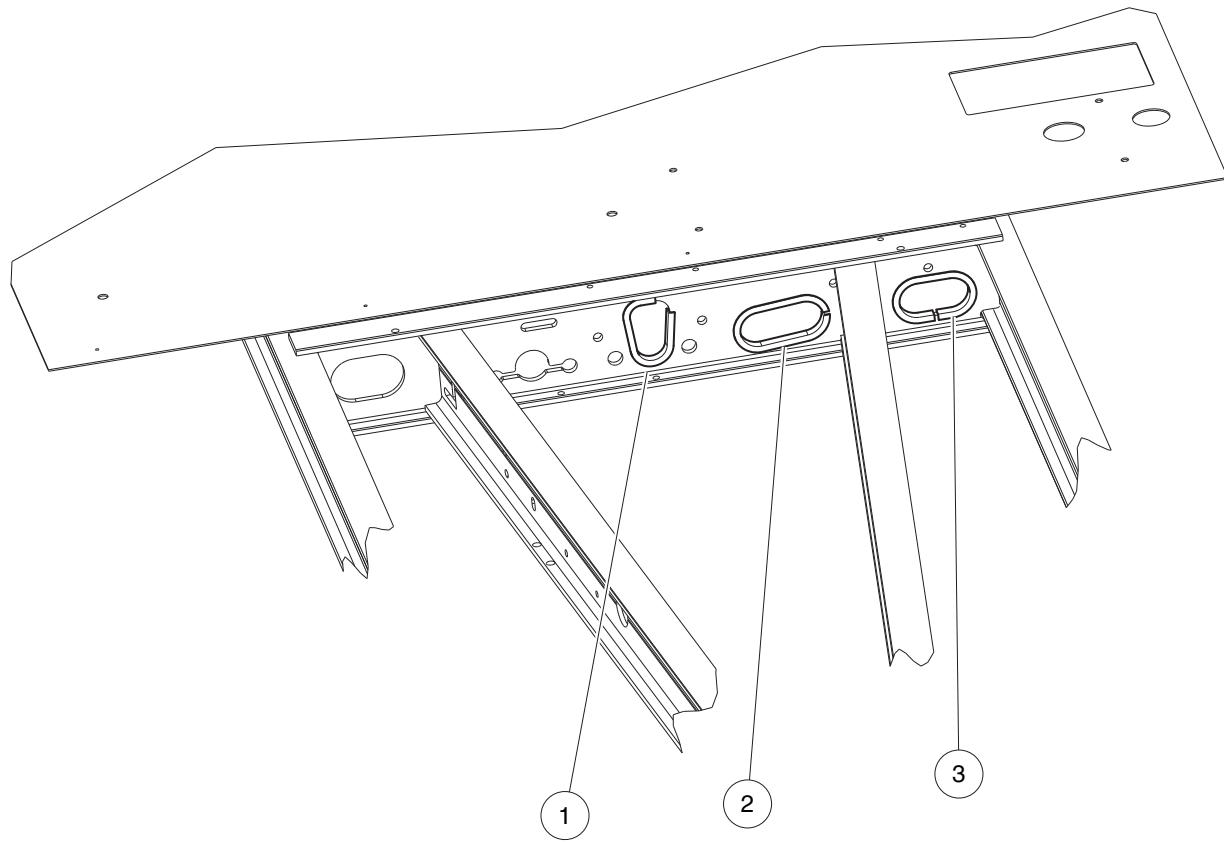
MIRROR, REAR-VIEW – WITHOUT CAB

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013846</u>	Kit, Rear Mirror, West Coast (includes items 2 through 7)	1
2	1011878	T-nut, 1/4-20 X .310 Capped	1
3	1013824	Rear View Mirror	1
4	<u>1013825</u>	Mirror Mounting Bracket	1
5	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1
6	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	1
7	<u>8248</u>	Screw, 1/4-20 X 0.75, Truss-Head Machine	1
<p>Note: To install this kit, vehicle must be equipped with a heavy-duty front bumper.</p>			

1

G

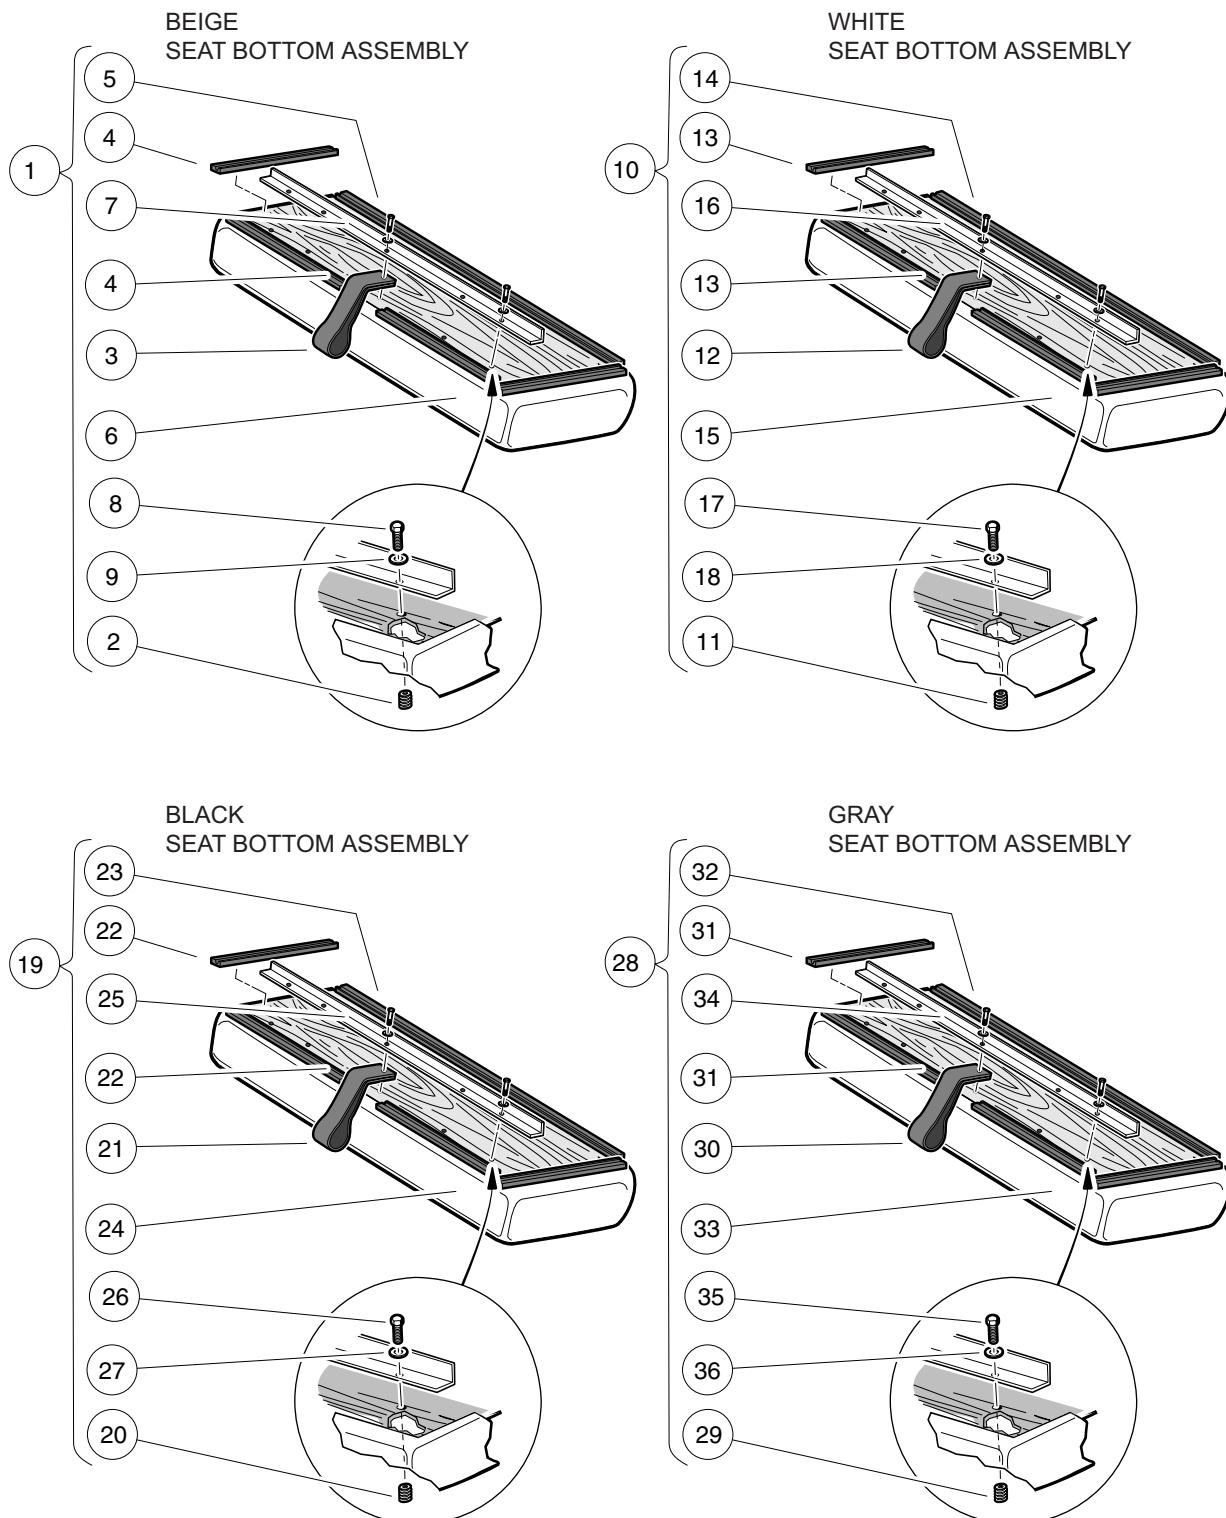
E



001221-001

GROMMETS, CHASSIS

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>101806001</u>	I-beam Grommet - 5.5	A/R
2	<u>101806002</u>	I-beam Grommet - 7.5	A/R
3	<u>101806005</u>	I-beam Grommet - 6.75	A/R

1**G****E**

000254-001

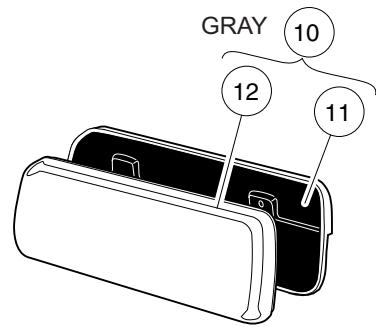
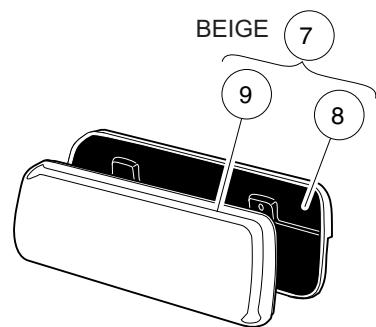
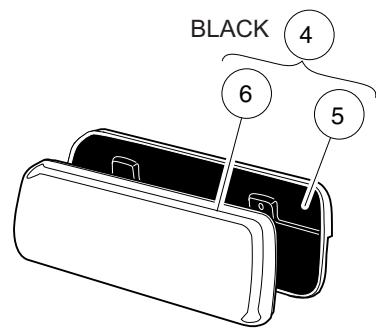
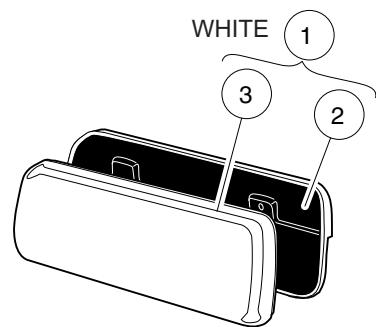
SEAT BOTTOM

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101564501</u>	Seat Bottom Assembly, Beige (includes items 2 through 9)	1
2	<u>1010543</u>	Insert - Wood	5
3	<u>1013309</u>	Strap, Utility Seat	1
4	<u>1013311</u>	Bumper, Seat, Short	4
5	<u>1013312</u>	Bumper, Seat, Long	1
6	<u>101562711</u>	Vinyl Cover, Seat Bottom, Buff	1
7	<u>101894303</u>	Stiffener	1
8	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	5
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	5
10	<u>101564502</u>	Seat Bottom Assembly, White (includes items 11 through 18)	1
11	<u>1010543</u>	Insert - Wood	5
12	<u>1013309</u>	Strap, Utility Seat	1
13	<u>1013311</u>	Bumper, Seat, Short	4
14	<u>1013312</u>	Bumper, Seat, Long	1
15	<u>101562712</u>	Vinyl Cover, Seat Bottom, White	1
16	<u>101894303</u>	Stiffener	1
17	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	5
18	<u>332</u>	Washer, 1/4 Type A Narrow Flat	5
19	<u>101564503</u>	Seat Bottom Assembly, Black (includes items 20 through 27)	1
20	<u>1010543</u>	Insert - Wood	5
21	<u>1013309</u>	Strap, Utility Seat	1
22	<u>1013311</u>	Bumper, Seat, Short	4
23	<u>1013312</u>	Bumper, Seat, Long	1
24	<u>101562714</u>	Vinyl Cover, Seat Bottom, Black	1
25	<u>101894303</u>	Stiffener	1
26	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	5
27	<u>332</u>	Washer, 1/4 Type A Narrow Flat	5
28	<u>101564505</u>	Seat Bottom Assembly, Gray (includes items 29 through 36)	1
29	<u>1010543</u>	Insert - Wood	5
30	<u>1013309</u>	Strap, Utility Seat	1
31	<u>1013311</u>	Bumper, Seat, Short	4
32	<u>1013312</u>	Bumper, Seat, Long	1
33	<u>101562715</u>	Vinyl Cover, Seat Bottom, Gray	2
34	<u>101894303</u>	Stiffener	1
35	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	5
36	<u>332</u>	Washer, 1/4 Type A Narrow Flat	5

1

G

E

1**G****E**

000608-001

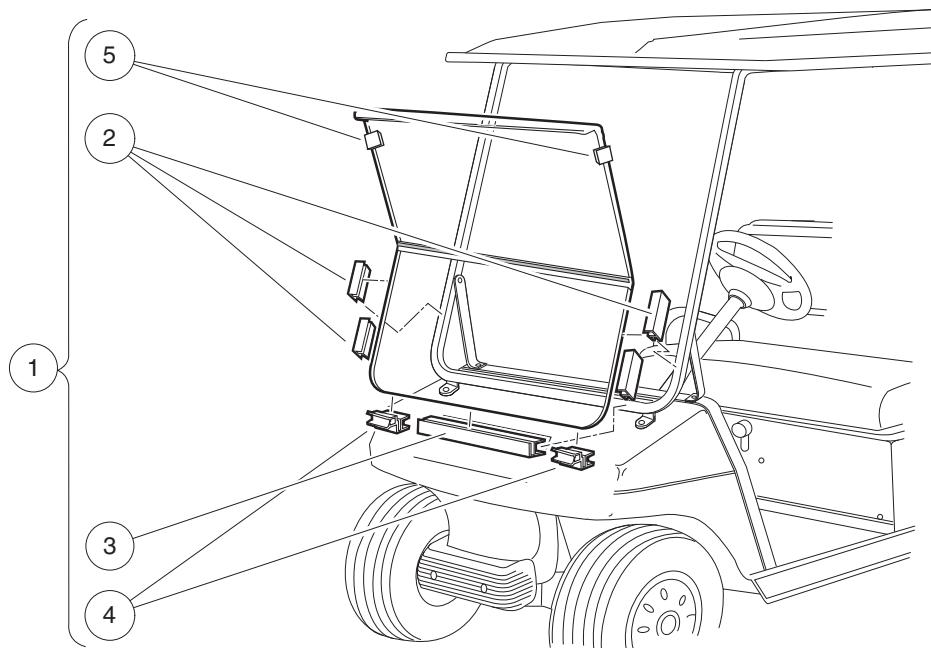
SEAT BACK ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	1
1	<u>101677701</u>	Seat Back Assembly, White (includes items 2 and 3)	1
2	<u>1016751</u>	Cap, Seat Back	1
3	<u>101675512</u>	Vinyl Seat Back, White	1
4	<u>101677702</u>	Seat Back Assembly, Black (includes items 5 and 6)	1
5	<u>1016751</u>	Cap, Seat Back	1
6	<u>101675514</u>	Vinyl Seat Back, Black	1
7	<u>101677703</u>	Seat Back Assembly, Beige (includes items 8 and 9)	1
8	<u>1016751</u>	Cap, Seat Back	1
9	<u>101675511</u>	Vinyl Seat Back, Beige	1
10	<u>101677705</u>	Seat Back Assembly, Gray (includes items 11 and 12)	1
11	<u>1016751</u>	Cap, Seat Back	1
12	<u>101675515</u>	Vinyl Seat Back-nstd Svc	1

1

G

E



001205-001

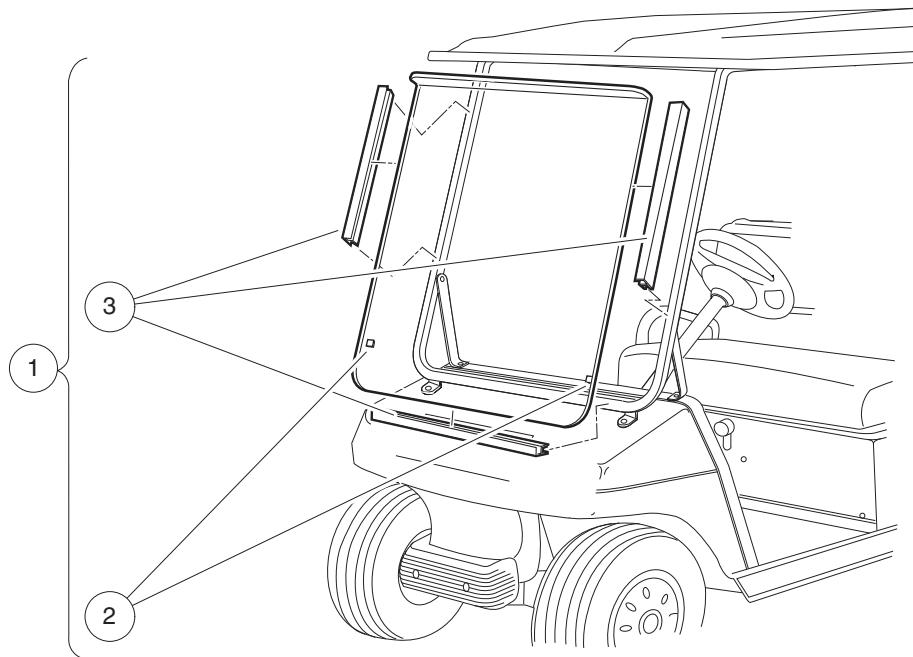
WINDSHIELD, HINGED

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>101728602</u>	1 2 3 4 Hinged Windshield Kit (includes items 2 through 5)	1
2	<u>102005701</u>	5" Plastic Extrusion	4
3	<u>102163001</u>	Windshield Channel	1
4	<u>102163101</u>	Channel with Receiver Clip	2
5	N/A	Clip, Release	2

1

G

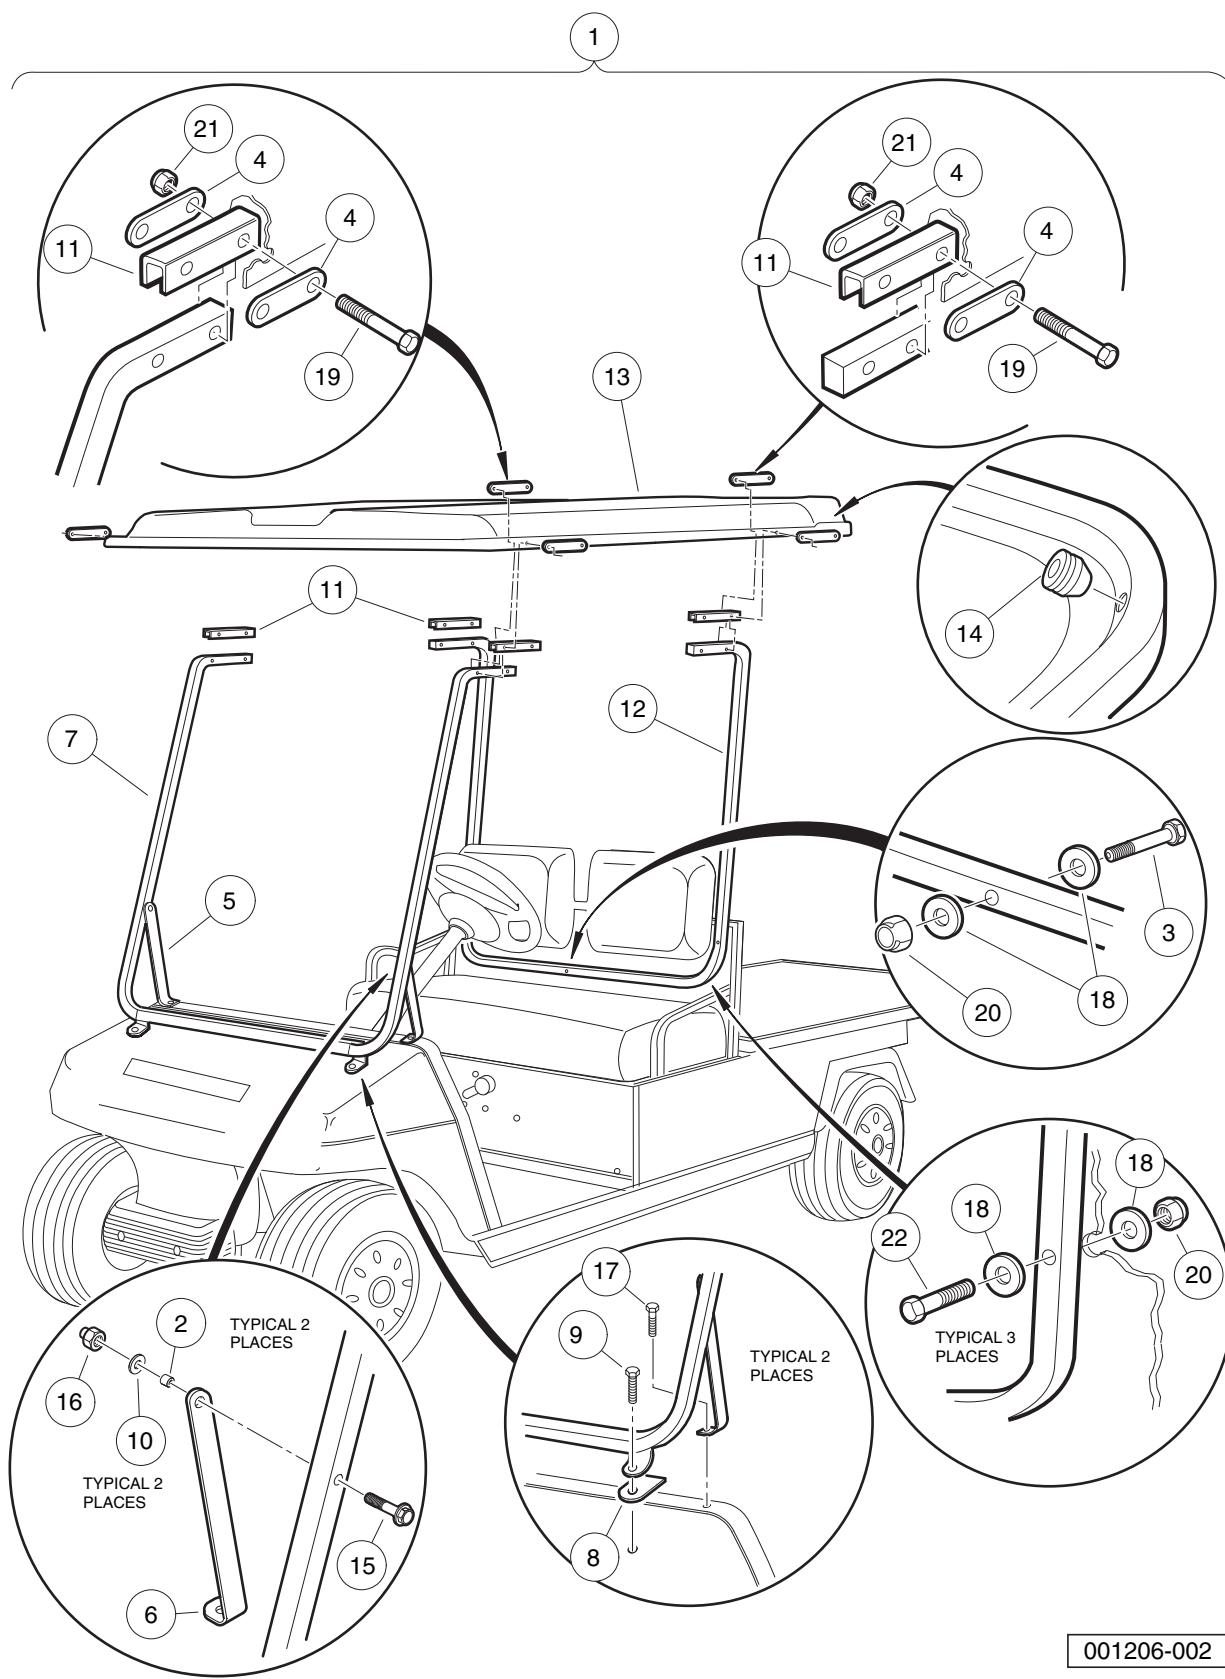
E



001204-001

WINDSHIELD, NON-HINGED

ITEM	PART NO.	DESCRIPTION	QTY
1	1014435	1 2 3 4 Windshield Tinted One-Piece (includes items 2 and 3)	1
2	<u>1011897</u>	Bumper, Protective	2
3	<u>101444101</u>	21" Plastic Extrusion	3

1**G****E**

001206-002

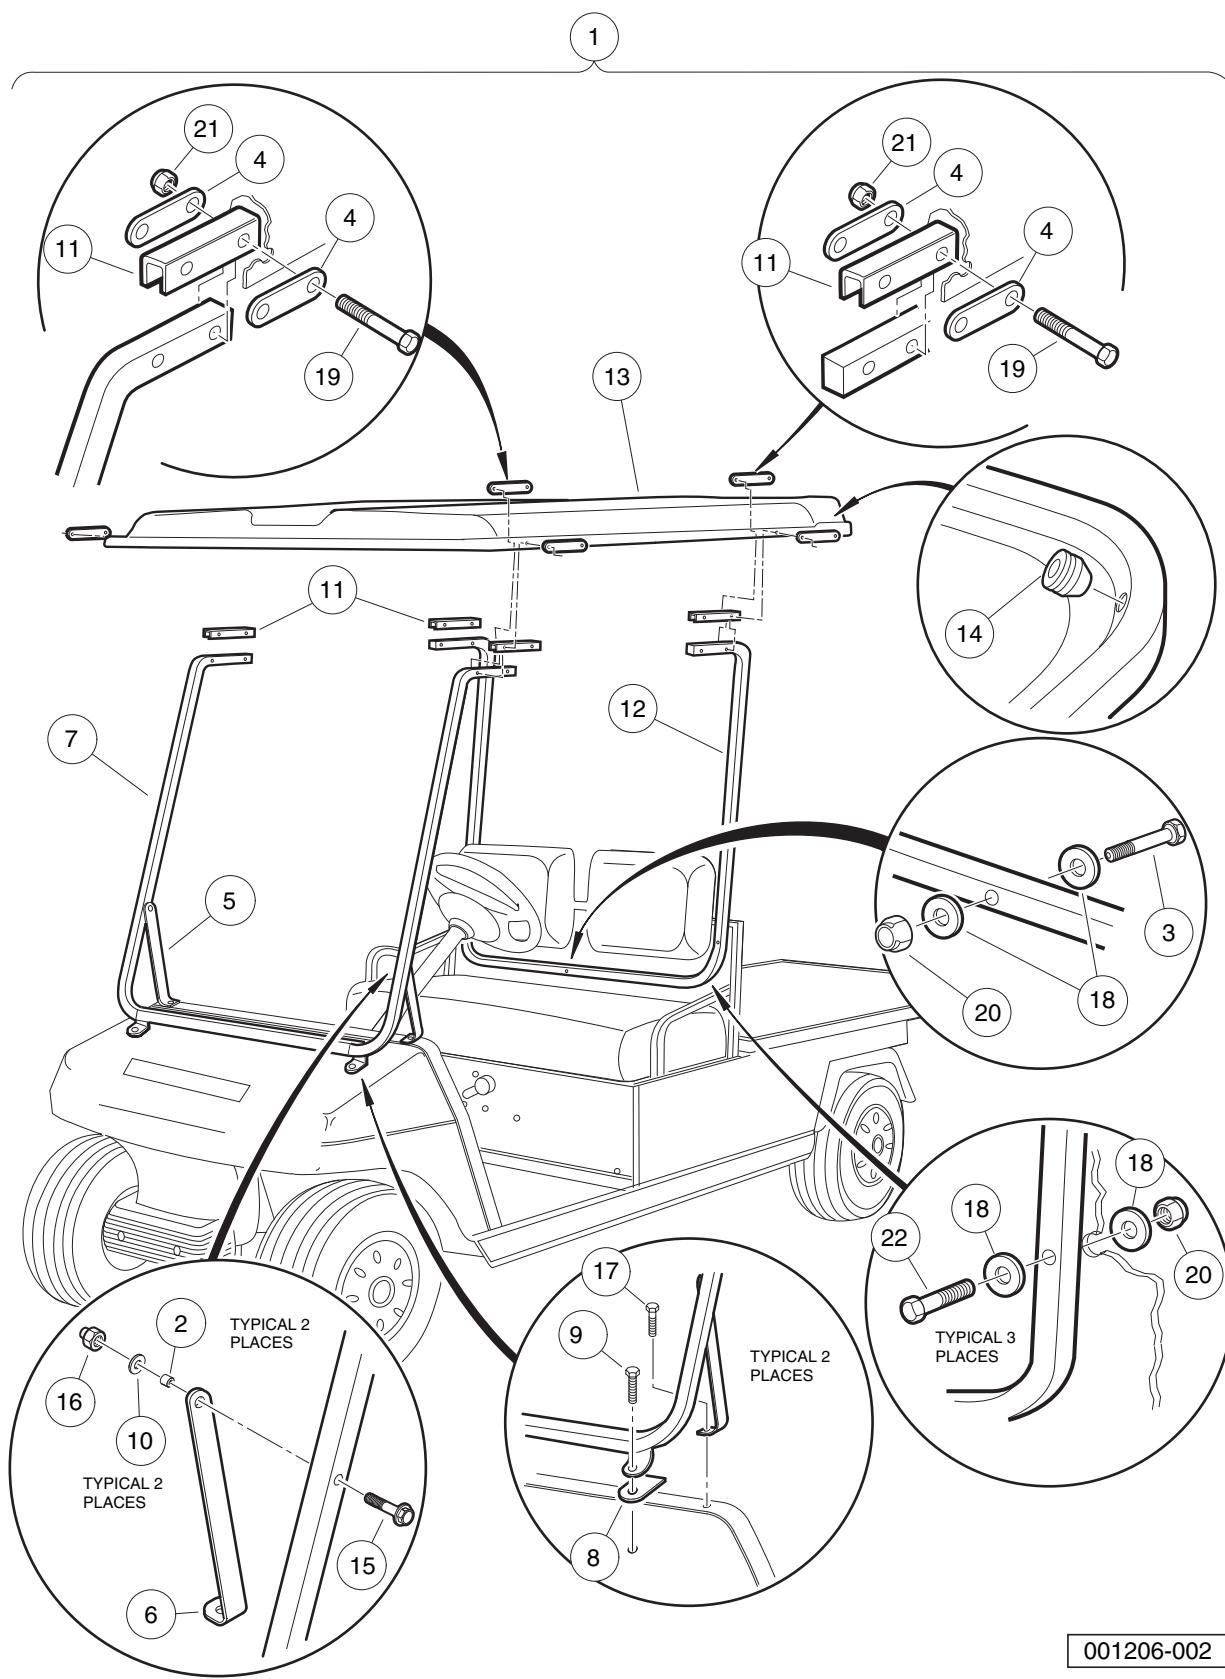
CANOPY KIT, WHITE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014506</u>	Kit, Canopy, White (includes items 2 through 22)	1
2	<u>1010237</u>	Bushing	2
3	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	1
4	<u>1011852</u>	Plate, Canopy Trim	8
5	<u>1011862</u>	Brace, Right-Hand Canopy Mount Knee	1
6	<u>1011865</u>	Brace, Left-Hand Canopy Mount Knee	1
7	<u>1011868</u>	Weldment, Windshield Frame	1
8	<u>1011883</u>	Pad, Windshield Frame Mounting	2
9	<u>1011937</u>	Bolt, 5/16-18 X 1.25 Hex Head	2
10	<u>1011964</u>	Washer, 1/4 Flat	2
11	<u>1012008</u>	Support, Side Canopy	4
12	<u>1014503</u>	Brace, Rear Canopy	1
13	<u>1014509</u>	Canopy, White (includes item 14)	1
14	<u>1011942</u>	Modified Grommet	2
15	<u>102076702</u>	1/4-20 X 1.75 Hex Sems Blk	2
16	<u>102242401</u>	Nut - Nylon Insert W/cap	2
17	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	2
18	<u>1241</u>	Washer, 5/16 Type A Flat	6
19	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	8
20	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	3
21	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	8
22	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	3

1

G

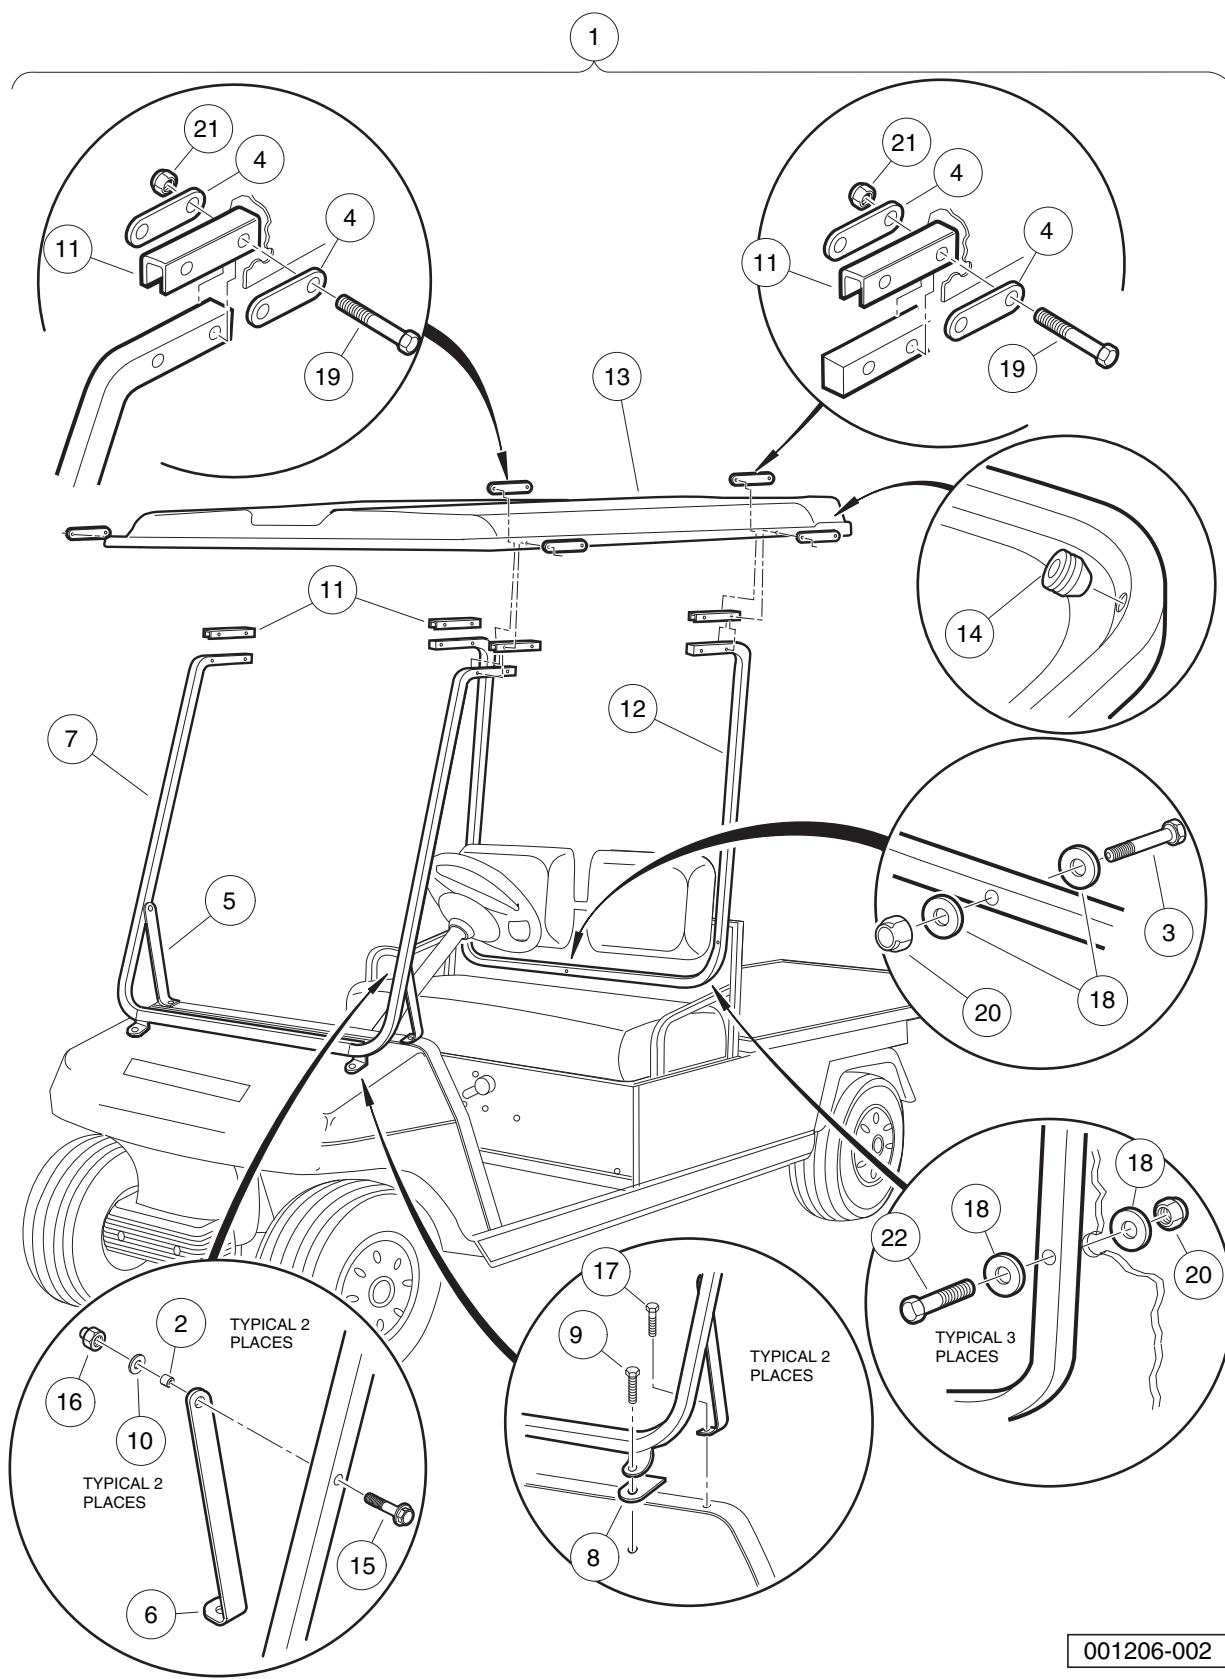
E

1**G****E**

001206-002

CANOPY KIT, BEIGE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101450698</u>	Kit, Canopy, Beige, Ca1/2 (includes items 2 through 22)	1
2	<u>1010237</u>	Bushing	2
3	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	1
4	<u>1011852</u>	Plate, Canopy Trim	8
5	<u>1011862</u>	Brace, Right-Hand Canopy Mount Knee	1
6	<u>1011865</u>	Brace, Left-Hand Canopy Mount Knee	1
7	<u>1011868</u>	Weldment, Windshield Frame	1
8	<u>1011883</u>	Pad, Windshield Frame Mounting	2
9	<u>1011937</u>	Bolt, 5/16-18 X 1.25 Hex Head	2
10	<u>1011964</u>	Washer, 1/4 Flat	2
11	<u>1012008</u>	Support, Side Canopy	4
12	<u>1014503</u>	Brace, Rear Canopy	1
13	<u>101450903</u>	Asm, Canopy, Beige (includes item 14)	1
14	<u>1011942</u>	Modified Grommet	2
15	<u>102076702</u>	1/4-20 X 1.75 Hex Sems Blk	2
16	<u>102242401</u>	Nut - Nylon Insert W/cap	2
17	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	2
18	<u>1241</u>	Washer, 5/16 Type A Flat	6
19	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	8
20	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	3
21	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	8
22	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	3

1**G****E**

001206-002

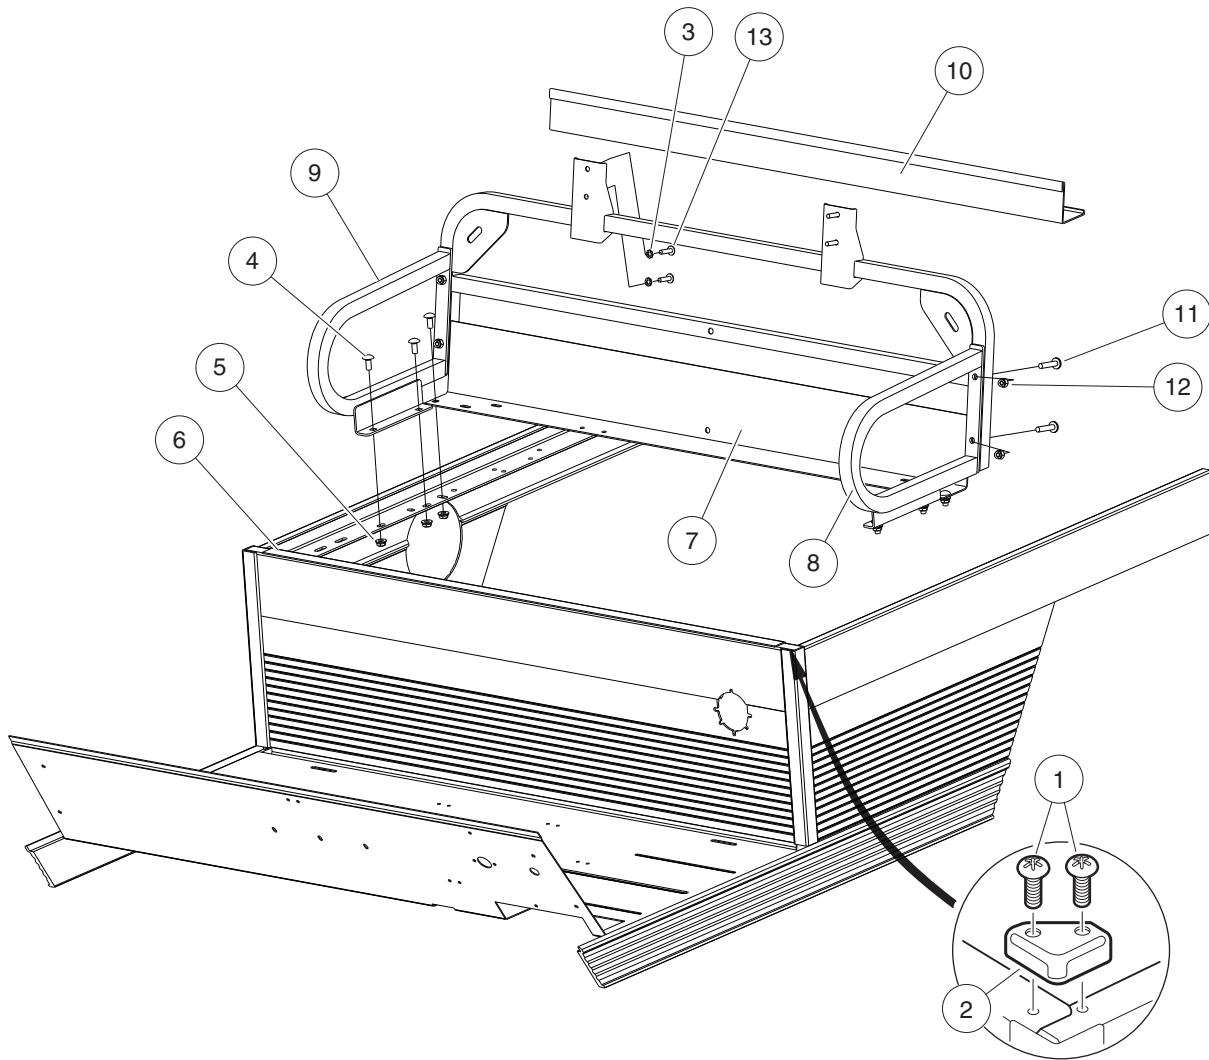
CANOPY KIT, BLACK

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102198501</u>	Canopy Top Kit, Black (includes items 2 through 22)	1
2	<u>1010237</u>	Bushing	2
3	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	1
4	<u>1011852</u>	Plate, Canopy Trim	8
5	<u>1011862</u>	Brace, Right-Hand Canopy Mount Knee	1
6	<u>1011865</u>	Brace, Left-Hand Canopy Mount Knee	1
7	<u>1011868</u>	Weldment, Windshield Frame	1
8	<u>1011883</u>	Pad, Windshield Frame Mounting	2
9	<u>1011937</u>	Bolt, 5/16-18 X 1.25 Hex Head	2
10	<u>1011964</u>	Washer, 1/4 Flat	2
11	<u>1012008</u>	Support, Side Canopy	4
12	<u>1014503</u>	Brace, Rear Canopy	1
13	<u>101450902</u>	Asm, Canopy, Black (includes item 14)	1
14	<u>1011942</u>	Modified Grommet	2
15	<u>102076702</u>	1/4-20 X 1.75 Hex Sems Blk	2
16	<u>102242401</u>	Nut - Nylon Insert W/cap	2
17	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	2
18	<u>1241</u>	Washer, 5/16 Type A Flat	6
19	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	8
20	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	3
21	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	8
22	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	3

1

G

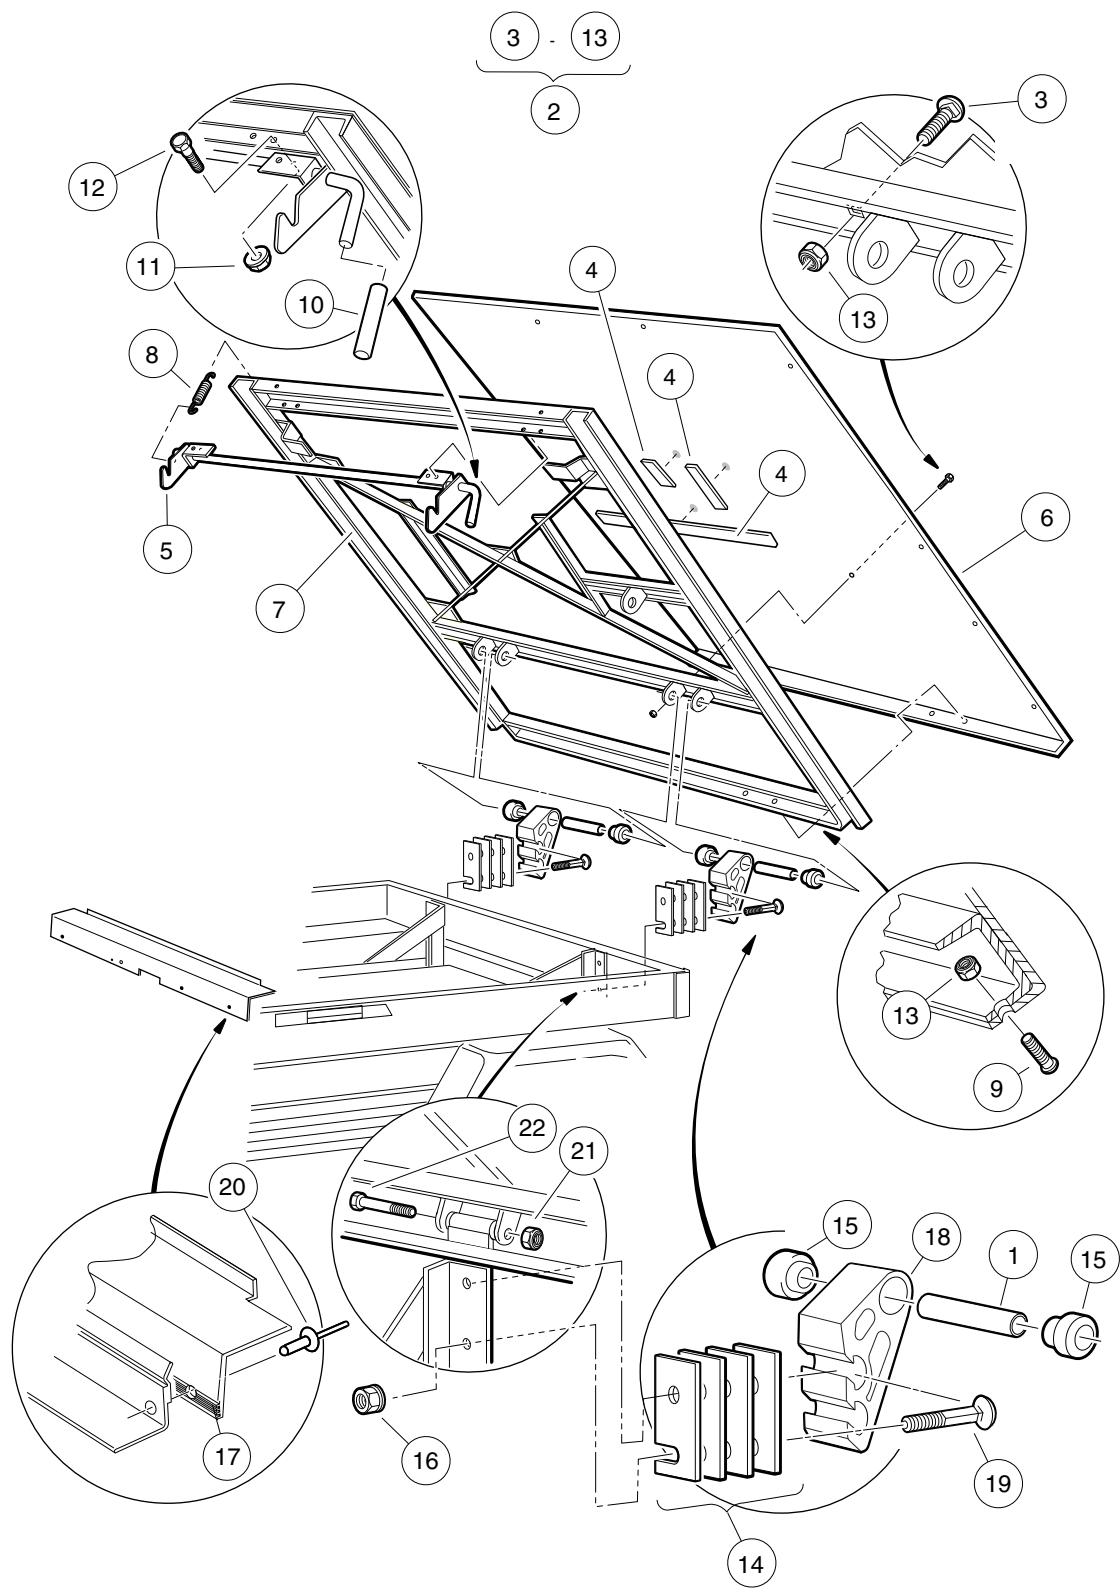
E

1**G****E**

000603-004

HIP RESTRAINTS AND SEAT BACK MOUNTING

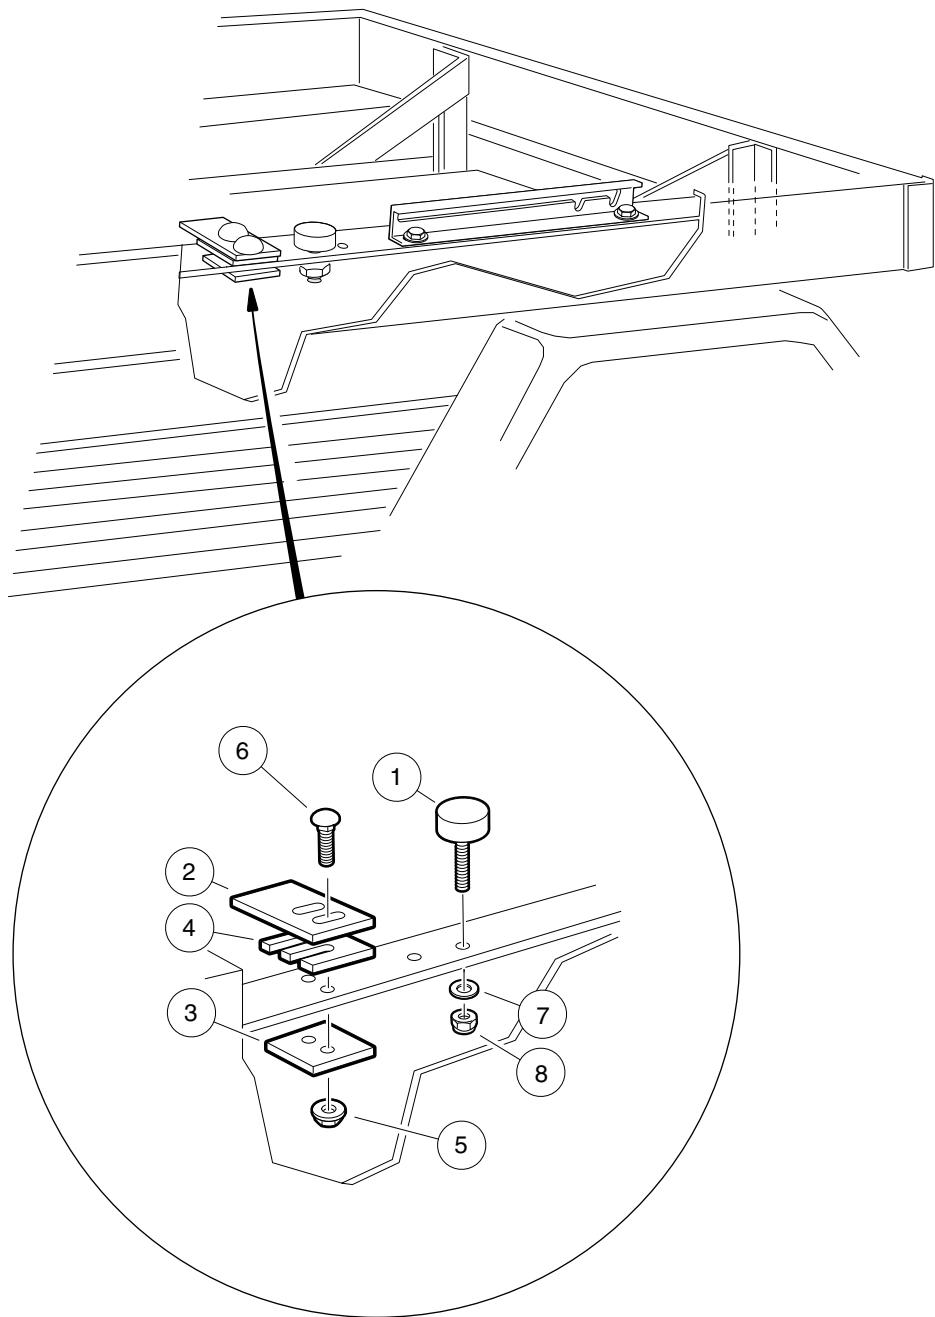
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014321</u>	Screw, #10 Truss-Head Torx	4
2	<u>1014387</u>	Cap, Corner	2
3	<u>101946201</u>	Washer, Lock, 0.250 External-Tooth	4
4	<u>101963301</u>	Bolt, 5/16-18 X 0.75 Round-Head	6
5	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	6
6	<u>101964001</u>	Trim, Seat Bottom Front	1
7	<u>102966401</u>	Seat Back, Tube	1
8	<u>102966501</u>	Hip Restraint, Left	1
9	<u>102966502</u>	Hip Restraint, Right	1
10	<u>102989501</u>	Seal, Bed, 41-Inch	1
11	<u>103245201</u>	Screw, 5/16-18 X 1.5, Tr Tx Hd	4
12	<u>103245301</u>	Nut, Hex, Cp, Mech Def, 5/16-1	4
13	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	4

1**G****E**

000257-003

TILT BED, EXTRUDED HINGE, AND LATCH

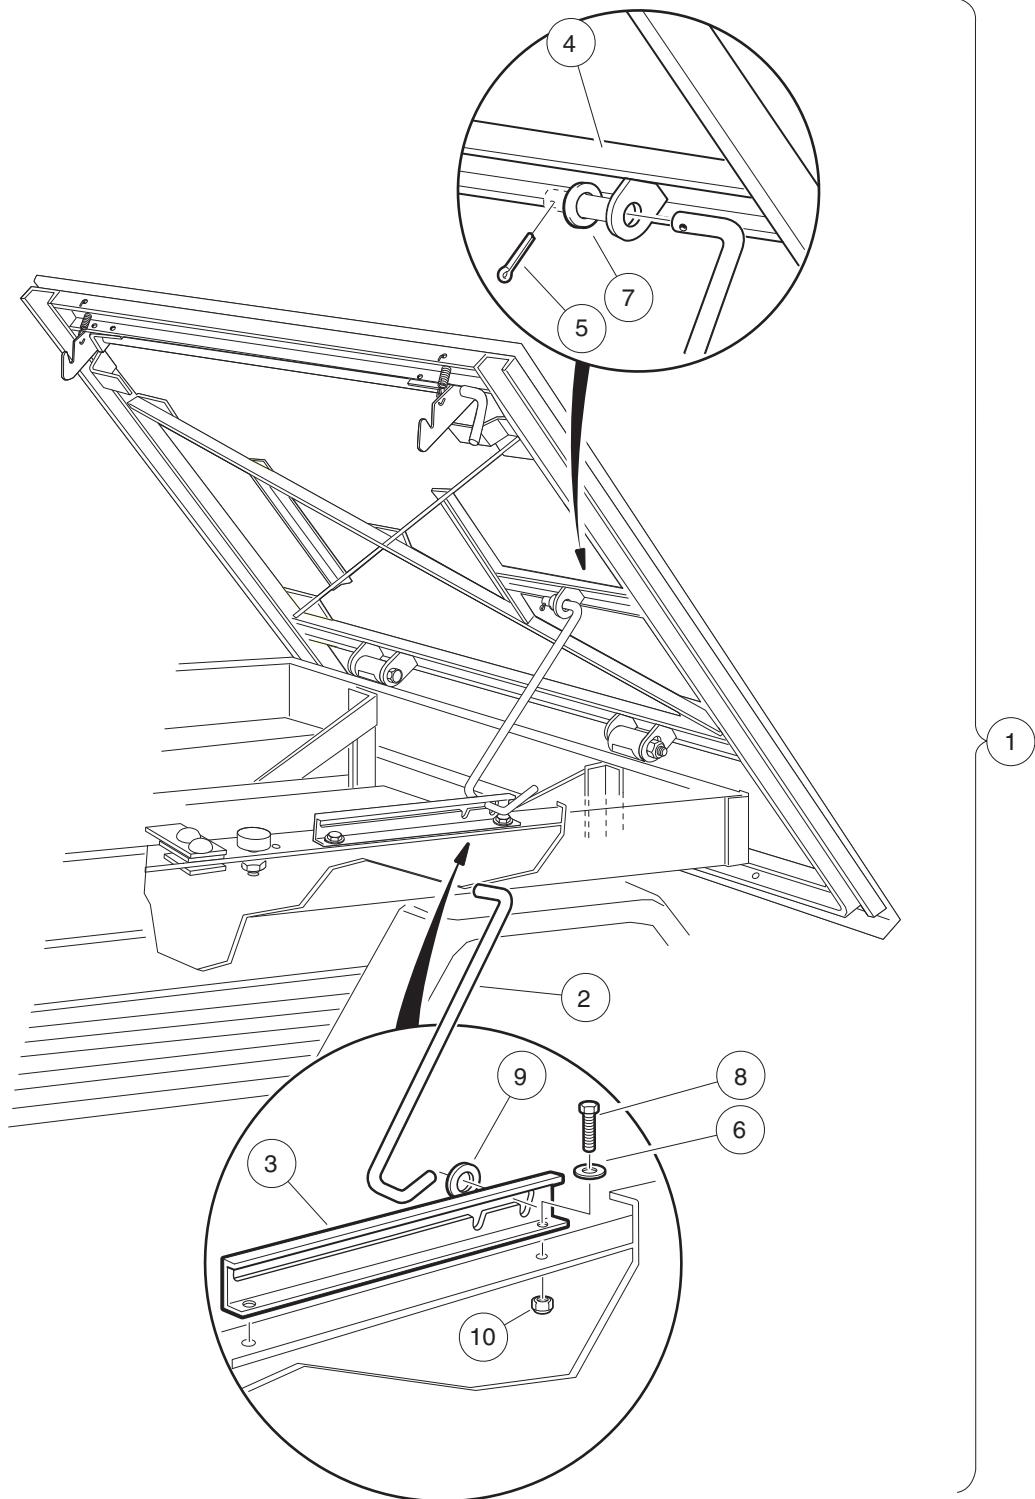
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	1
1	<u>1012303</u>	Bushing, Steel	2
2	<u>101542901</u>	Assembly, Tilt Bed (includes items 3 through 13)	1
3	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	4
4	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4"	A/R
5	<u>1015252</u>	Latch Weld Assembly	1
6	<u>1015258</u>	Plate, Floor Bed	1
7	N/A	Frame Assembly	1
8	<u>1015391</u>	Extension, Spring Latch	2
9	<u>1015399</u>	Screw, 5/16-18 X 0.88 Torx Truss-Head	4
10	<u>1015400</u>	Grip, Tilt Latch Hand	1
11	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	4
12	<u>403</u>	Screw, 1/4-20 X 0.625 Hex-Head Cap	4
13	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	8
14	<u>1015507</u>	Shim, Tilt Bed Pivot	1
15	<u>1015583</u>	Bushing, Urethane	4
16	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4
17	<u>102989501</u>	Seal, Bed, 41-Inch	1
18	<u>103538701</u>	Bracket, Bed Hinge, Extruded	2
19	<u>103538901</u>	Bolt, Carriage, 3/8-16 x 3.5" Grade 5	4
20	<u>7532</u>	Rivet, 3/16 X 0.3125, Pop	1
21	<u>8754</u>	Locknut, 3/8-16 Hex	2
22	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2

1**G****E**

000258-002

LATCH PLATE

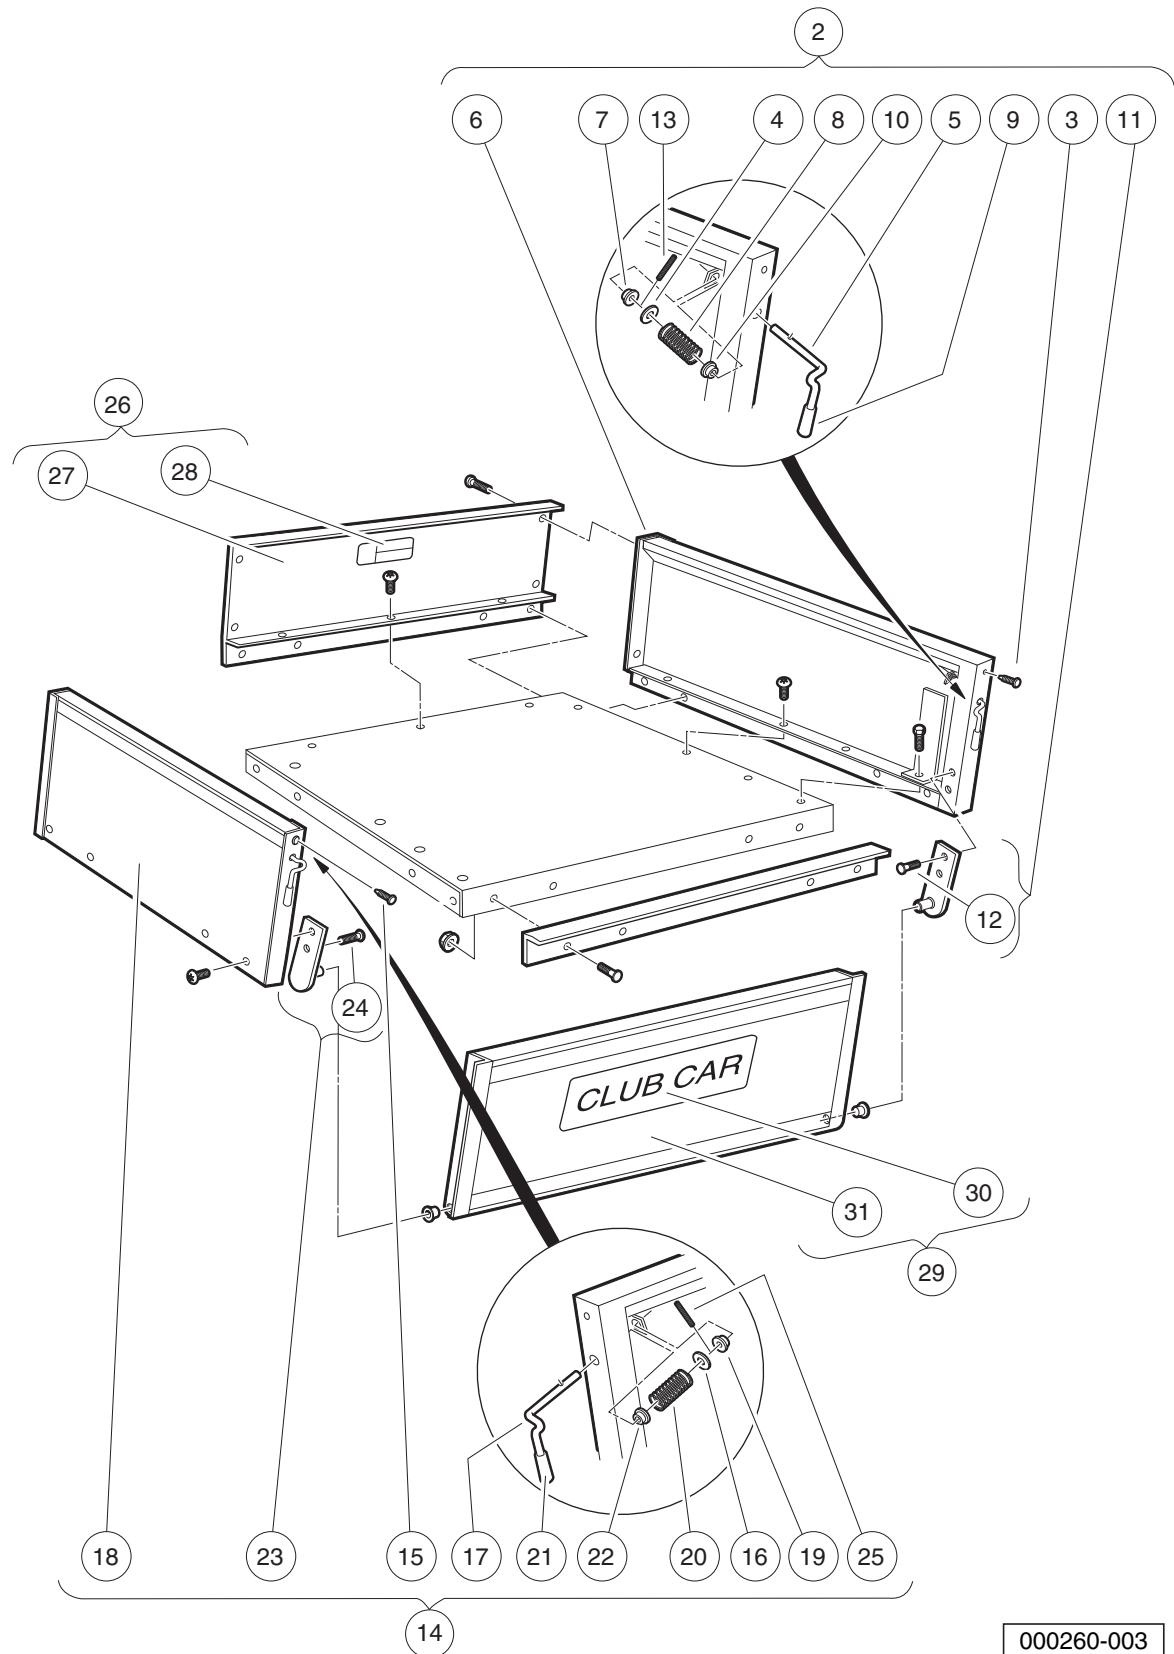
ITEM	PART NO.	DESCRIPTION	QTY
1	<u>1010878</u>	1 2 3 4 Bumper, Rubber	2
2	<u>1015277</u>	Latch Plate, Tilt Bed	2
3	<u>1016060</u>	Plate, Latch Support	2
4	<u>1016078</u>	Latch Plate Shim	A/R
5	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	4
6	<u>101958601</u>	Carriage Bolt, 1/4-20 X 0.75	4
7	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4
8	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4

1**G****E**

000259-001

PROP ROD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101922801</u>	Prop Rod Support Instl Kit (includes items 2 through 10)	1
2	1015348	Prop Rod Ca li	1
3	1015700	Track Prop Rod Ca li	1
4	<u>101921601</u>	Weldment, Prop Rod Support	1
5	<u>1035</u>	Cotter Pin, 3/32 x 1	2
6	<u>332</u>	Washer, 1/4 Type A Narrow Flat	5
7	<u>334</u>	Washer, 3/8, Type A, Flat	1
8	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	6
9	<u>808</u>	Washer, 3/8 Type B Flat	1
10	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	6

1**G****E**

000260-003

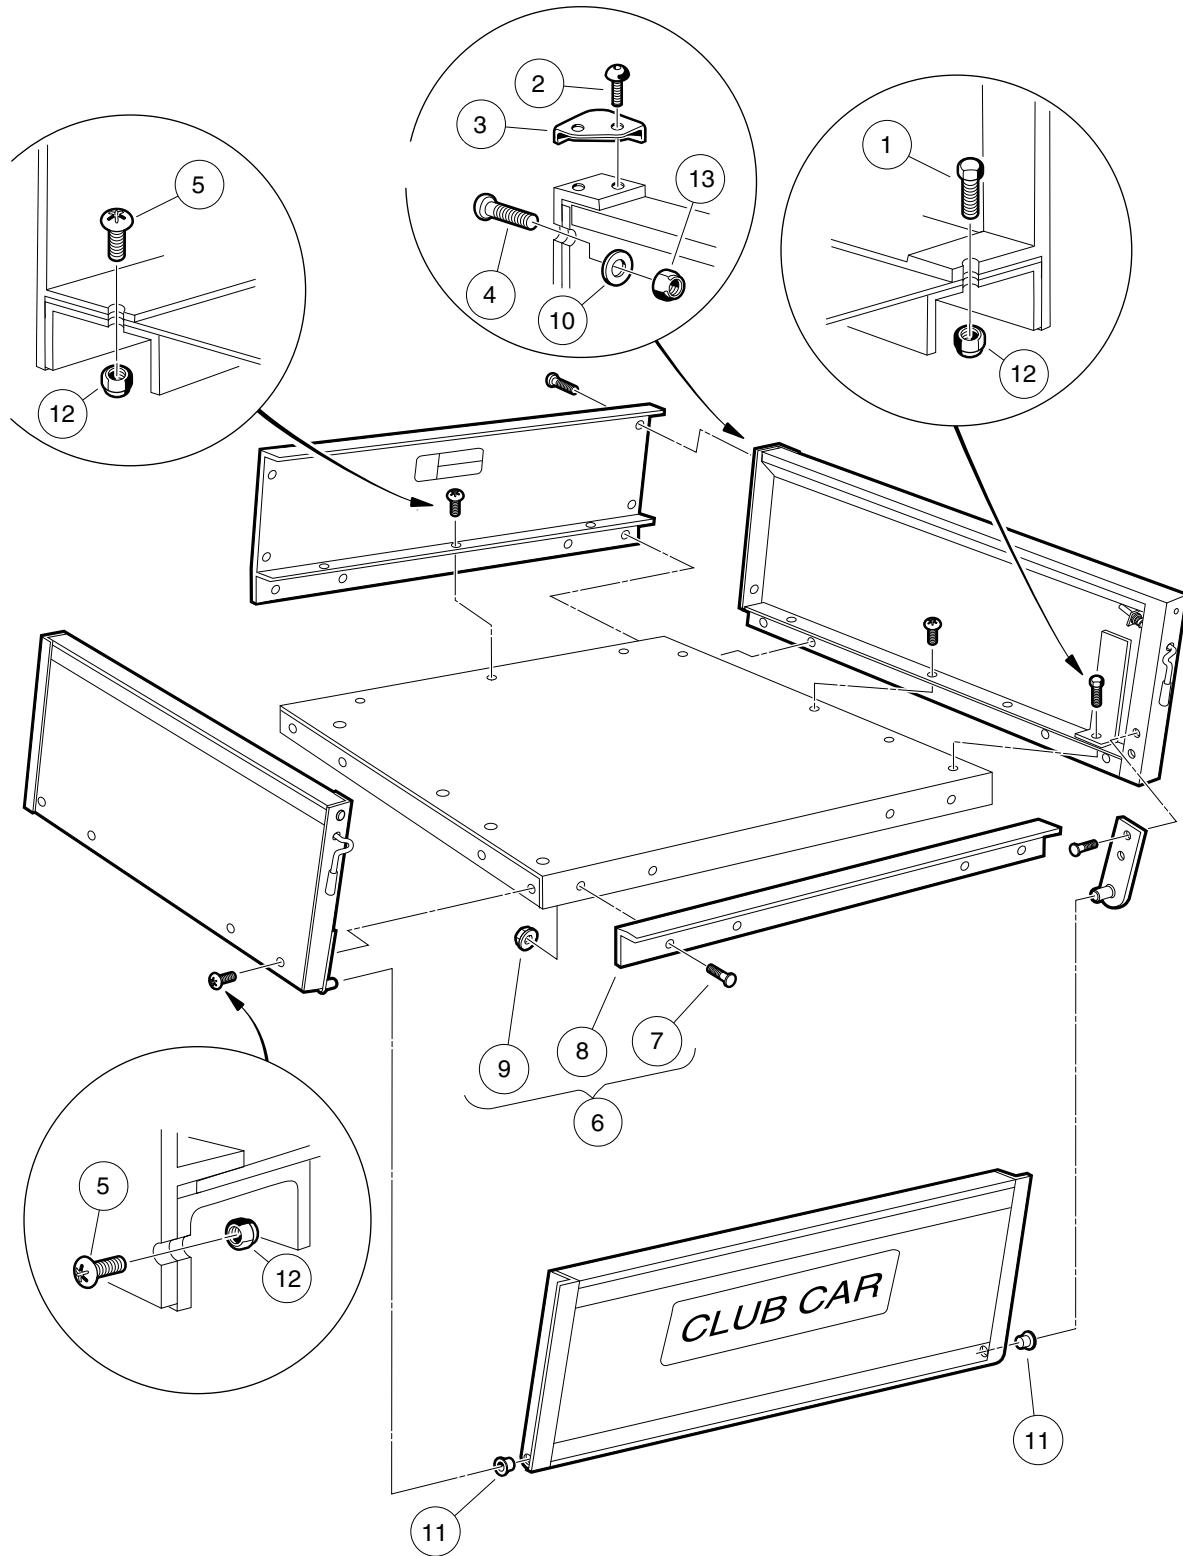
CARGO BOX (ALUMINUM)

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015607</u>	Cargo Box Set (includes items 2 through 29)	1
2	<u>1015366</u>	Side-Panel Assembly, Right-Hand (includes items 3 through 13)	1
3	<u>1010434</u>	Barrel - Plastic	1
4	<u>1011990</u>	Washer, 3/8 Flat	1
5	<u>1015245</u>	Latch, Tailgate, Right-Hand	1
6	N/A	Side-Panel Weldment, Right-Hand	1
7	<u>1015363</u>	Bushing, Snap-In	1
8	<u>1015390</u>	Compression Spring Latch Tilt	1
9	<u>1015400</u>	Grip, Tilt Latch Hand	1
10	<u>1032</u>	Bushing, Nylon	1
11	<u>103406502</u>	Kit, Tailgate Mounting Bracket, CA, RH (includes item 12)	1
12	<u>103406601</u>	Stud, 1/4 Self-clnchng Flush	2
13	1231	Pin, 1/8 X 1.00 Split Roll	1
14	<u>1015368</u>	Side Panel Assembly, Left-Hand (includes items 15 through 25)	1
15	<u>1010434</u>	Barrel - Plastic	1
16	<u>1011990</u>	Washer, 3/8 Flat	1
17	<u>1015313</u>	Latch, Tailgate, Left-Hand	1
18	N/A	Side-Panel Weldment, Left-Hand	1
19	<u>1015363</u>	Bushing, Snap-In	1
20	<u>1015390</u>	Compression Spring Latch Tilt	1
21	<u>1015400</u>	Grip, Tilt Latch Hand	1
22	<u>1032</u>	Bushing, Nylon	1
23	<u>103406501</u>	Kit, Tailgate Mounting Bracket, CA, LH (includes item 24)	1
24	<u>103406601</u>	Stud, 1/4 Self-clnchng Flush	2
25	1231	Pin, 1/8 X 1.00 Split Roll	1
26	<u>1015412</u>	Front Panel Assembly (includes items 27 and 28)	1
27	N/A	Front Panel Box	1
28	<u>101553901</u>	Decal, Bed Load Warning	1
29	<u>1015424</u>	Tailgate Assembly (includes items 30 and 31)	1
30	<u>1013317</u>	Decal, Logo, Tailgate	1
31	N/A	Tailgate Weldment	1
		Note: Additional components in kit <u>1015607</u> are shown on the following two pages.	

1

G

E

1**G****E**

000261-001

CARGO BOX (ALUMINUM) MOUNTING

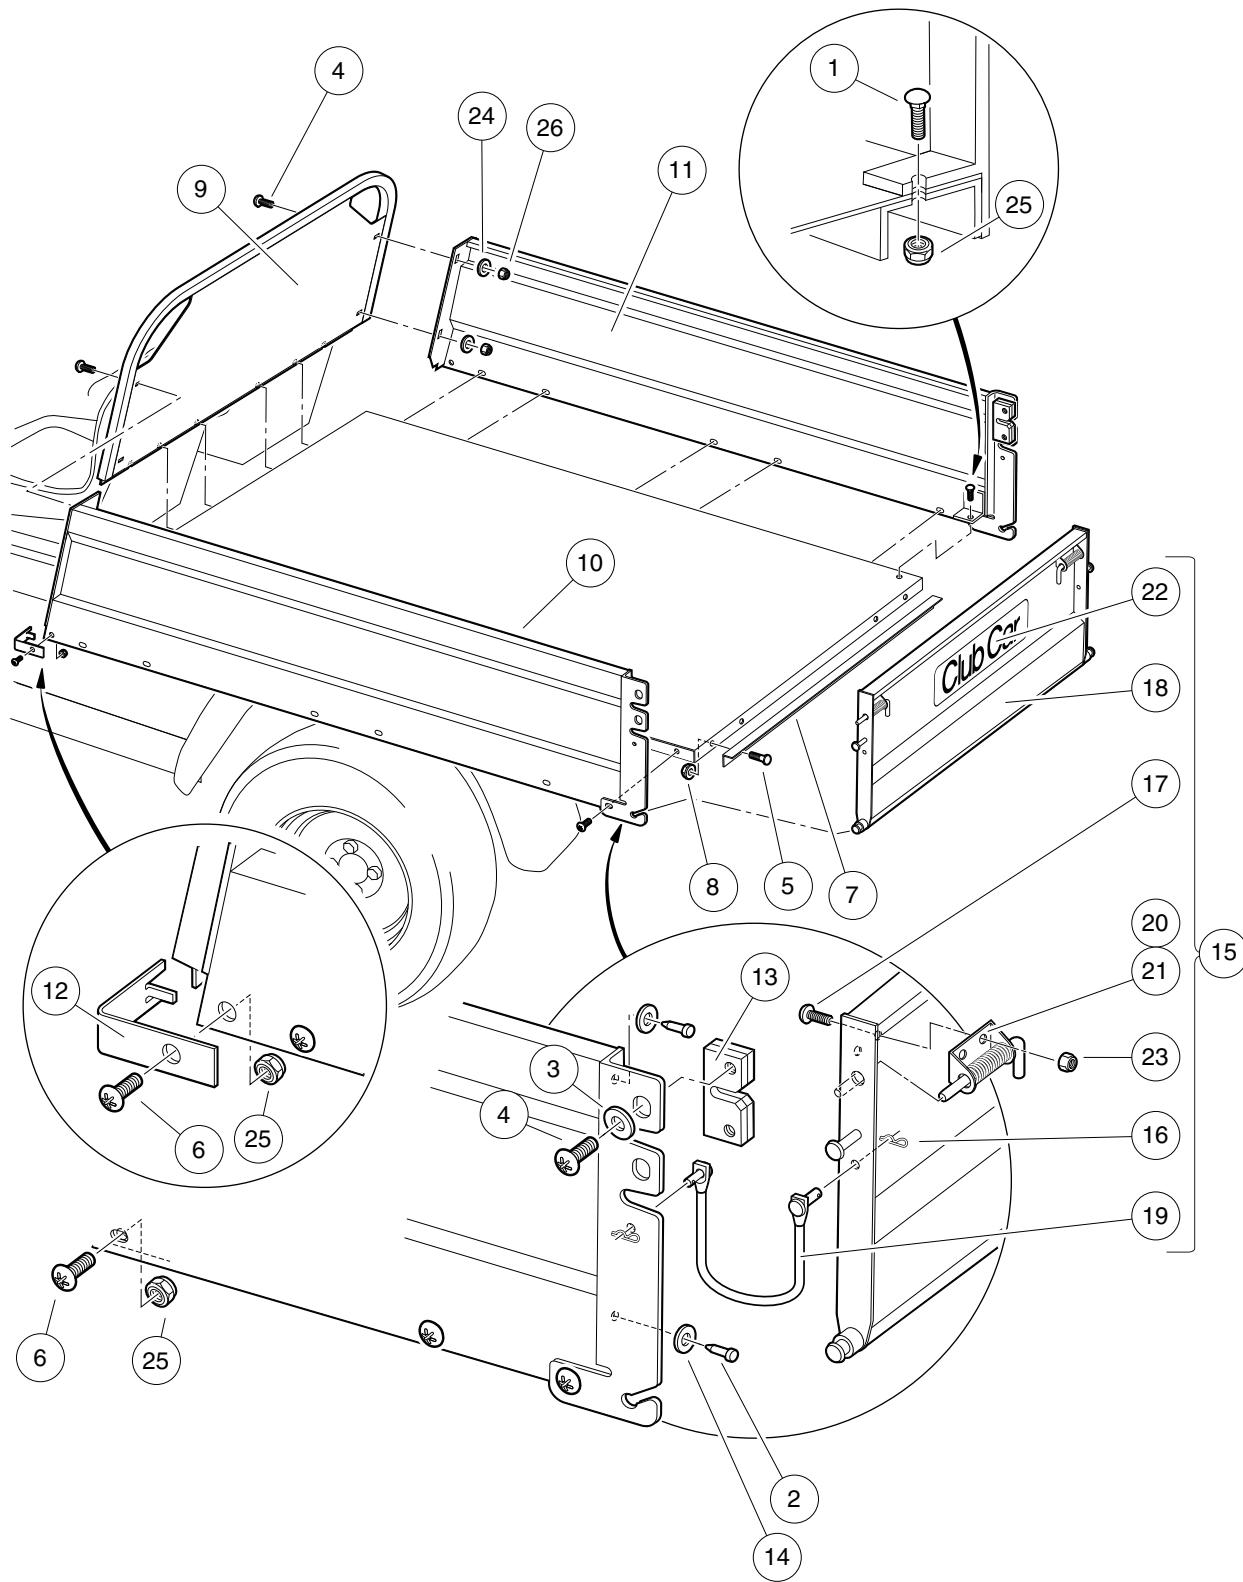
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	2
2	<u>1014321</u>	Screw, #10 Truss-Head Torx	4
3	<u>1014387</u>	Cap, Corner	2
4	<u>1014415</u>	Screw, 1/4-20 X 0.75 Torx Truss-Head	4
5	1015399	Screw, 5/16-18 X 0.88 Torx Truss-Head	23
6	<u>101894702</u>	Kit, Tailgate Angle (includes items 7 through 9)	1
7	<u>1014537</u>	Stud, Self-Clinching Flush Head	4
8	N/A	Box Bed Tailgate Angle	1
9	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4
10	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4
11	<u>7049</u>	Bushing, Nylon	2
12	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	25
13	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4

Note: All parts listed on this page are included in kit 1015607.

1

G

E

1**G****E**

000038-006

CARGO BOX (STEEL)

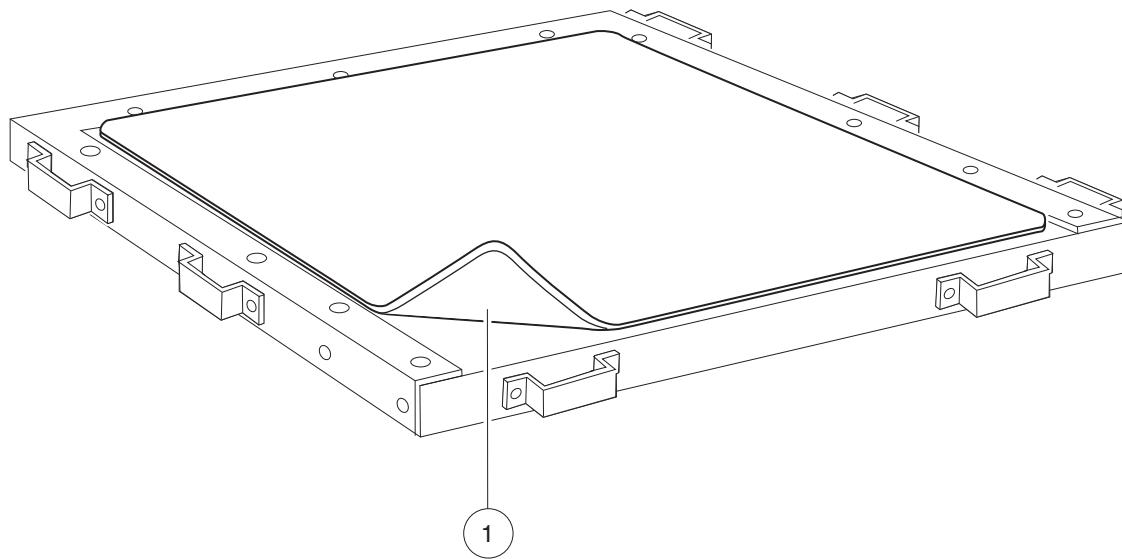
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	1
1	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	13
2	<u>1010436</u>	Bumper, Rubber	4
3	<u>1014306</u>	Washer, 1/4" Type B Flat	4
4	<u>1014415</u>	Screw, 1/4-20 X 0.75 Torx Truss-Head	8
5	<u>1014537</u>	Stud, Self-Clinching Flush Head	4
6	<u>1015399</u>	Screw, 5/16-18 X 0.88 Torx Truss-Head	18
7	<u>101894304</u>	Box Bed Tailgate Angle	1
8	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4
9	<u>102221301</u>	Front Panel Weldment	1
10	<u>102221401</u>	Left Panel Weldment	1
11	<u>102221501</u>	Right Panel Weldment	1
12	<u>102221701</u>	Front Corner Cap	2
13	<u>102222001</u>	Slam Latch	2
14	<u>102239901</u>	Washer, Rubber, 3/8	4
15	<u>102614401</u>	Assembly, Tailgate (includes items 16 through 23)	1
16	<u>1013366</u>	Hair Pin Clip	4
17	<u>1014415</u>	Screw, 1/4-20 X 0.75 Torx Truss-Head	4
18	N/A	Tailgate, Weldment	1
19	<u>102221801</u>	Tether Assembly	2
20	<u>102222101</u>	Spring Latch Right	1
21	<u>102222201</u>	Spring Latch Left	1
22	<u>102673201</u>	Decal, Club Car Tailgate	1
23	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4
24	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4
25	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	31
26	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4

1
G
E

1

G

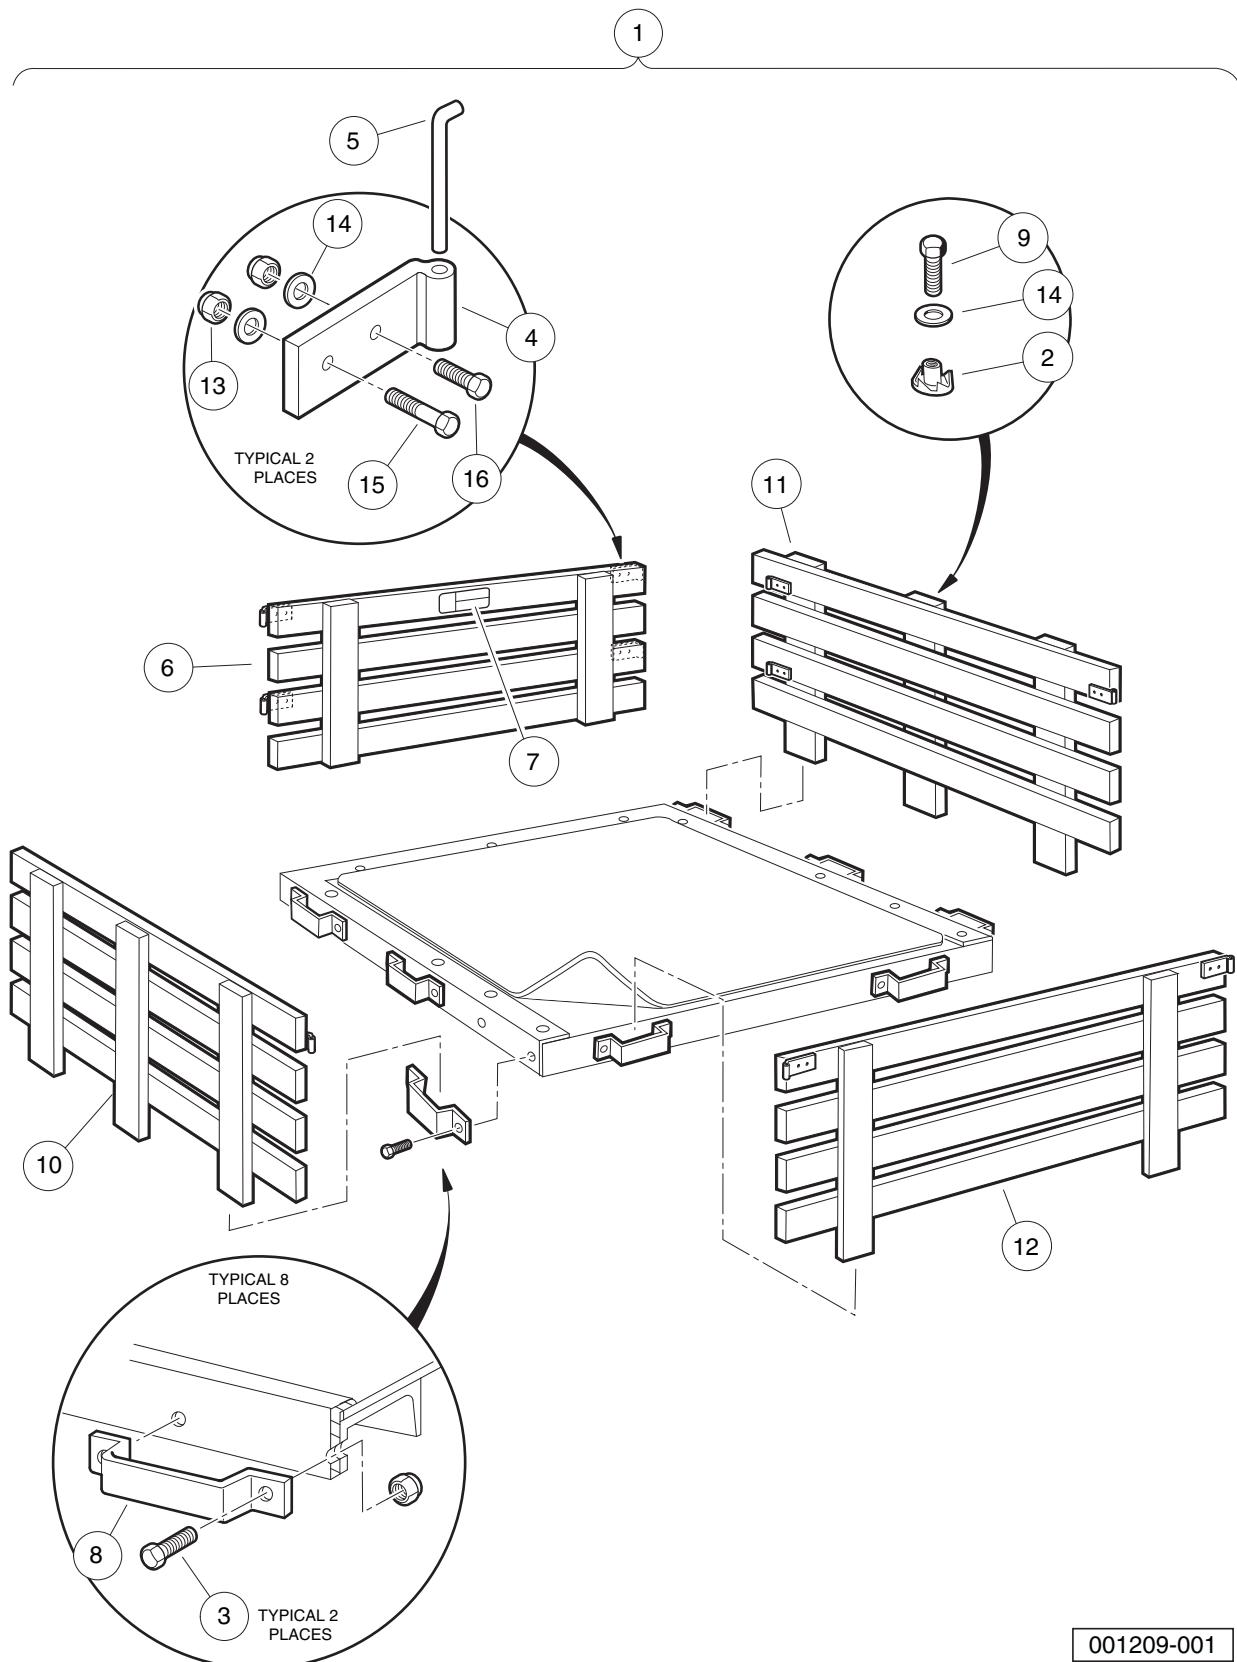
E



001207-001

BED MAT

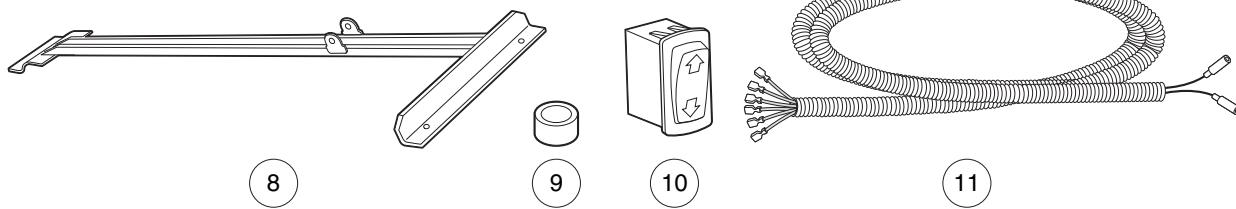

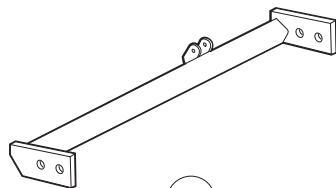


ITEM	PART NO.	DESCRIPTION	QTY	
1	<u>101770202</u>	1 2 3 4 Bed Mat	1	1 G E

1**G****E**

001209-001

STAKE SIDE KIT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102847701</u>	Kit, Stake Side, 45-5/8 X 50 (includes items 2 through 16)	1
2	<u>1010086</u>	T-Nut	74
3	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	16
4	<u>1015654</u>	Stake Side Hinge	12
5	<u>1015656</u>	Pin, hinge	6
6	<u>101565803</u>	Stake Side Assembly, Front (includes item 7)	1
7	<u>101553901</u>	Decal, Bed Load Warning	1
8	<u>1016077</u>	Bracket, Stake Side	8
9	<u>1016916</u>	Screw, 1/4-20 X 1.50 Hex-Head Cap	74
10	<u>102847601</u>	Asm, Stake Side, 45-5/8 X 19 D	1
11	<u>102847602</u>	Asm, Stake Side, 45-5/8 X 19 P	1
12	<u>102847603</u>	Asm, Stake Side, 48 X 19 Rear	1
13	<u>1108</u>	Locknut, 1/4-20 Dimpled	24
14	<u>332</u>	Washer, 1/4 Type A Narrow Flat	24
15	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	6
16	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	18

1**G****E****1****8****11**

001263-001

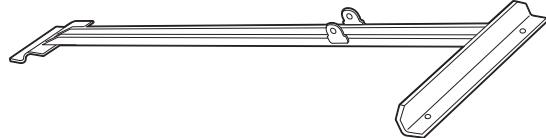
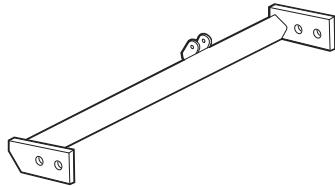
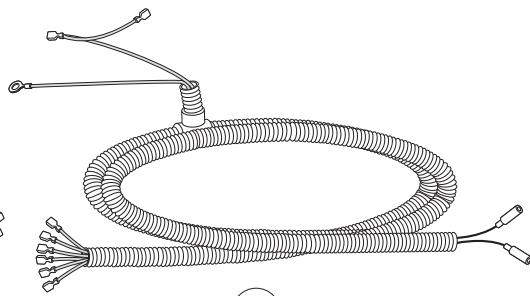

ELECTRIC BED LIFT – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103272801</u>	Kit, Electric Bed Lift, T/CA2/252/900 Gas (includes items 2 through 17)	1
2	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2
3	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	3
4	<u>1011990</u>	Washer, 3/8 Flat	4
5	<u>1015612</u>	Mounting Bracket, Hydraulic Cylinder	1
6	<u>1016603</u>	Bushing Long	2
7	<u>1017162</u>	Actuator Assembly, Electric	1
8	<u>1017167</u>	Actuator Adapter	1
9	<u>1017774</u>	Body Spacer	8
10	<u>102882501</u>	Switch, Rocker, Bed Lift	1
11	<u>103270201</u>	Wire Harness, Elec Tilt Sys	1
12	<u>357</u>	Lockwasher, 3/8 Split	4
13	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	4
14	<u>706</u>	Nut, Hex 3/8-16	4
15	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	3
16	<u>7561</u>	Bolt, 3/8-16 X 3.00 Hex Head	2
17	<u>8990</u>	Tie Wrap, 8" Nylon	10

1

G


E

1**G****E****1****2****3****4****5****6****7****8****9****10****11****12****13****14****15****16****17****18**

001264-001

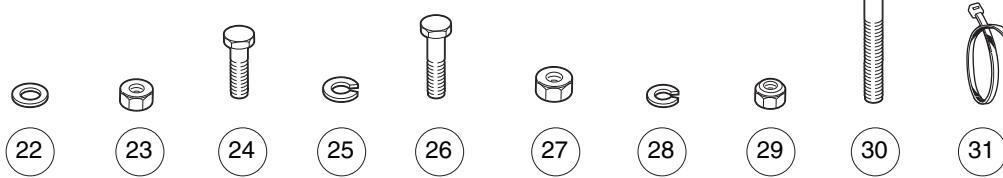
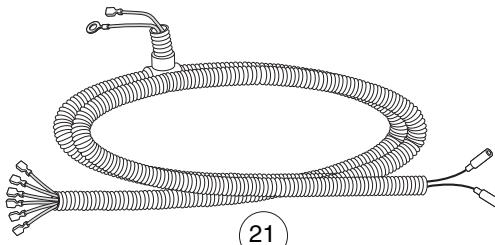
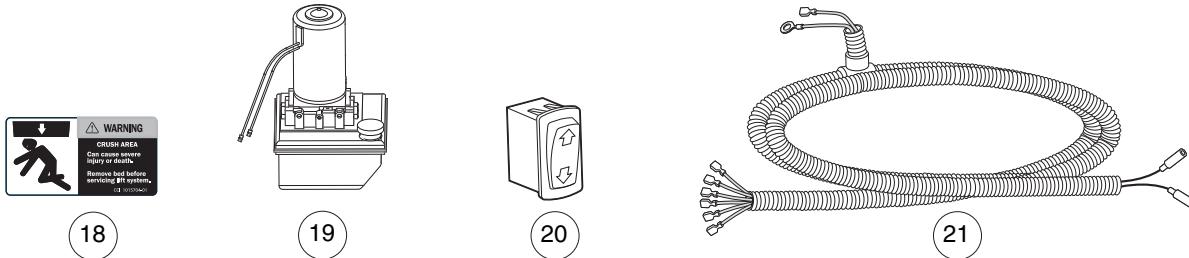
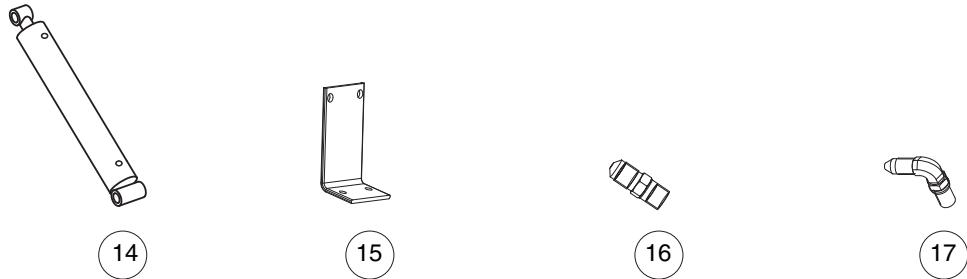
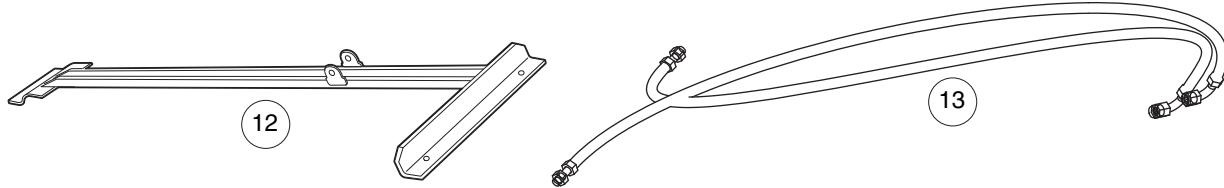
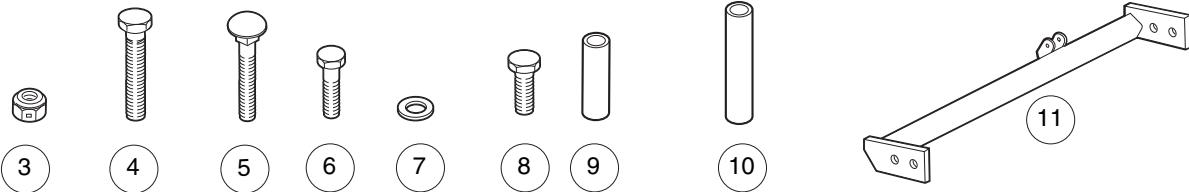
ELECTRIC BED LIFT – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103274202</u>	Kit, Electric Bed Lift, T/CA2/252/900 IQ Plus (includes items 2 through 18)	1
2	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2
3	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	3
4	<u>1011990</u>	Washer, 3/8 Flat	4
5	<u>1016603</u>	Bushing Long	2
6	<u>1017162</u>	Actuator Assembly, Electric	1
7	<u>1017167</u>	Actuator Adapter	1
8	<u>1017774</u>	Body Spacer	8
9	<u>102882501</u>	Switch, Rocker, Bed Lift	1
10	<u>102893601</u>	Center Bracket, Bed Lift	1
11	<u>102959601</u>	Iq Plus Acc Jumper, 3 Inch	1
12	<u>103270301</u>	Wire Harness, El Tilt, Iq Plus	1
13	<u>357</u>	Lockwasher, 3/8 Split	4
14	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	4
15	<u>706</u>	Nut, Hex 3/8-16	4
16	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	3
17	<u>7561</u>	Bolt, 3/8-16 X 3.00 Hex Head	2
18	<u>8990</u>	Tie Wrap, 8" Nylon	12

1**G****E**

1

2



001222-001

HYDRAULIC BED LIFT KIT

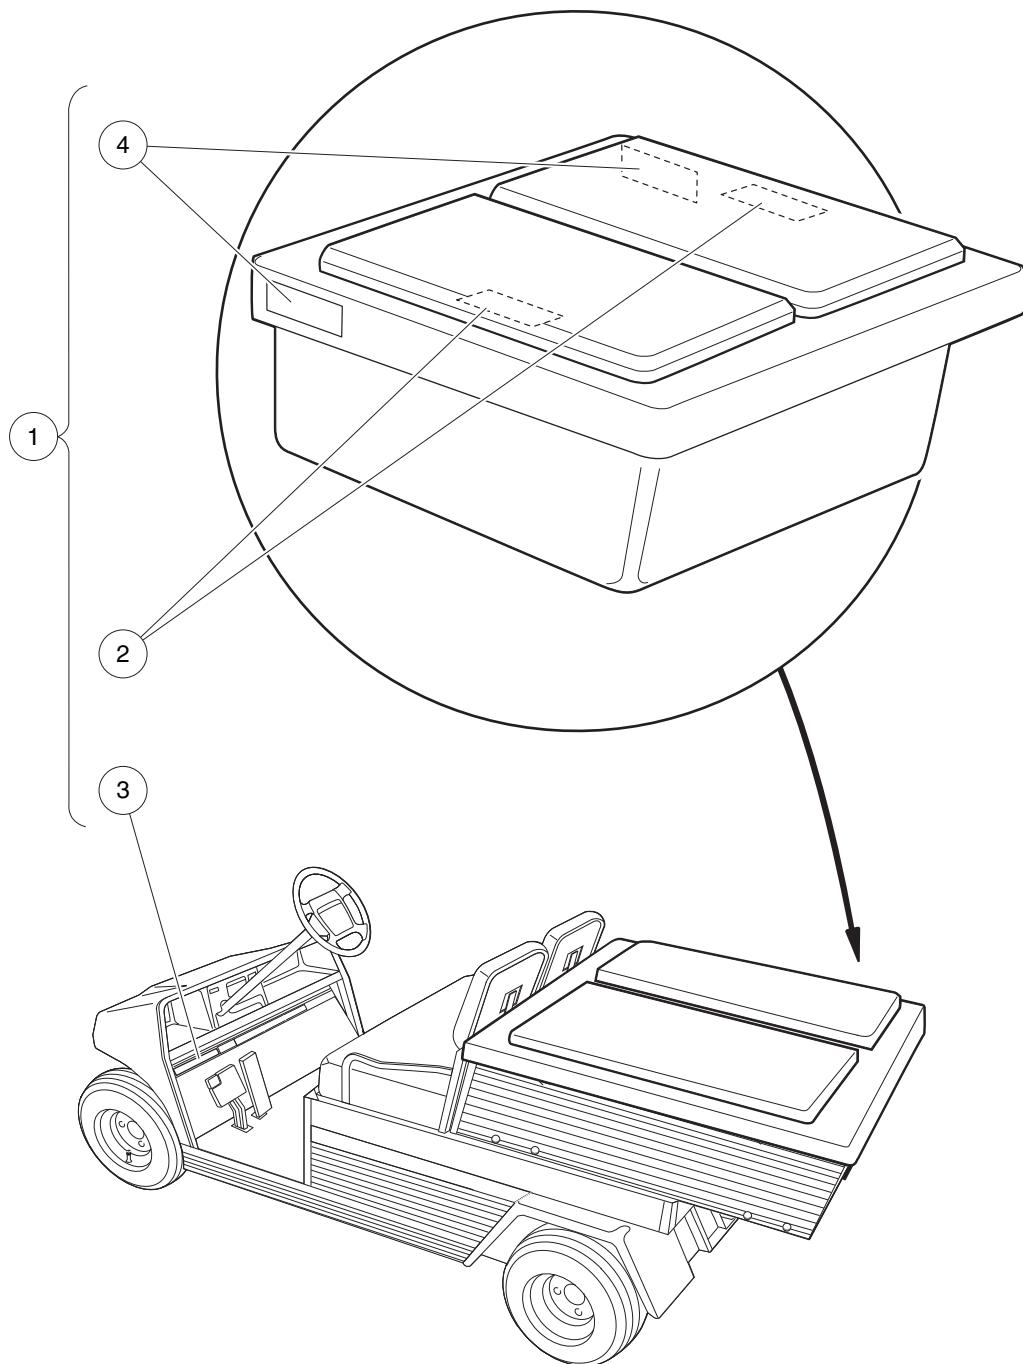
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1015820	Hydraulic Fluid	A/R
2	<u>103324402</u>	Kit, Hydraulic Bed Lift (includes items 3 through 31)	1
3	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2
4	<u>1010177</u>	Bolt, 3/8-16 X 2.00 Hex Head	1
5	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	4
6	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	2
7	<u>1011990</u>	Washer, 3/8 Flat	6
8	<u>1012463</u>	Bolt, 3/8-16 X .875 Hex Head	2
9	<u>1015608</u>	Tube Spacer, Hydraulic Cylinder	1
10	<u>1015610</u>	Tube Spacer Lg Hyd Cyl	1
11	<u>1015612</u>	Mounting Bracket, Hydraulic Cylinder	1
12	<u>1015615</u>	Cylinder Adapter Weldment	1
13	<u>1015616</u>	Hydraulic Hose Asm. Tilt Bed	2
14	<u>1015617</u>	Hydraulic Cylinder Caii Tilt	1
15	<u>1015621</u>	Mtg Bracket Hydr. Pump	1
16	<u>1015623</u>	Straight Thread Adap. W/o-ring	2
17	<u>1015624</u>	Straight Thd Elbow W/o-ring Ca	2
18	<u>101570401</u>	Decal, Tilt System Warning	1
19	<u>1016136</u>	Pump, Hydraulic Tilt Bed	1
20	<u>102882501</u>	Switch, Rocker, Bed Lift	1
21	<u>103318401</u>	Harness, Hyd Lift, Gas	1
22	<u>1241</u>	Washer, 5/16 Type A Flat	6
23	<u>1242</u>	Nut, 5/16-18 Hex	2
24	<u>320</u>	Screw, 3/8-16 X 1.00 Hex-Head Cap	2
25	<u>357</u>	Lockwasher, 3/8 Split	6
26	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	2
27	<u>706</u>	Nut, Hex 3/8-16	4
28	<u>7174</u>	Lockwasher, 5/16 Split	2
29	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	5
30	<u>7561</u>	Bolt, 3/8-16 X 3.00 Hex Head	1
31	<u>8990</u>	Tie Wrap, 8" Nylon	8

**1
G
E**

1

G

E



001210-001

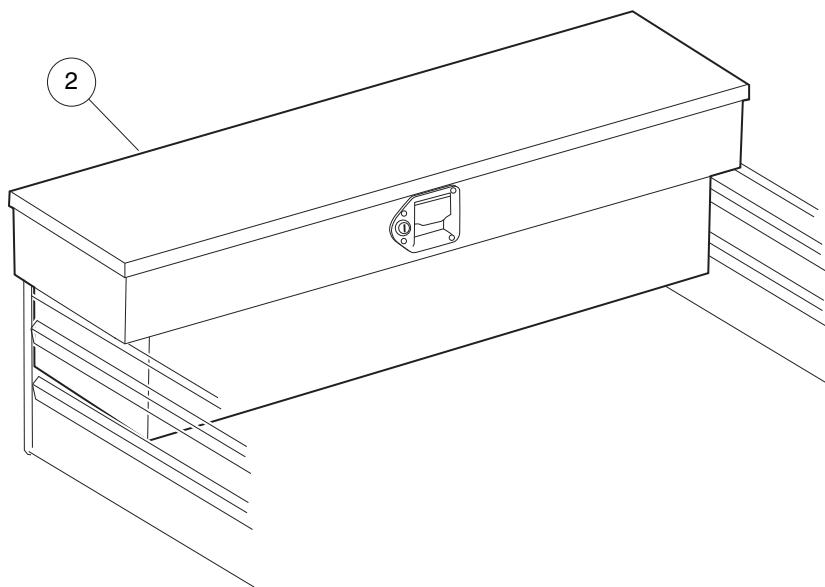
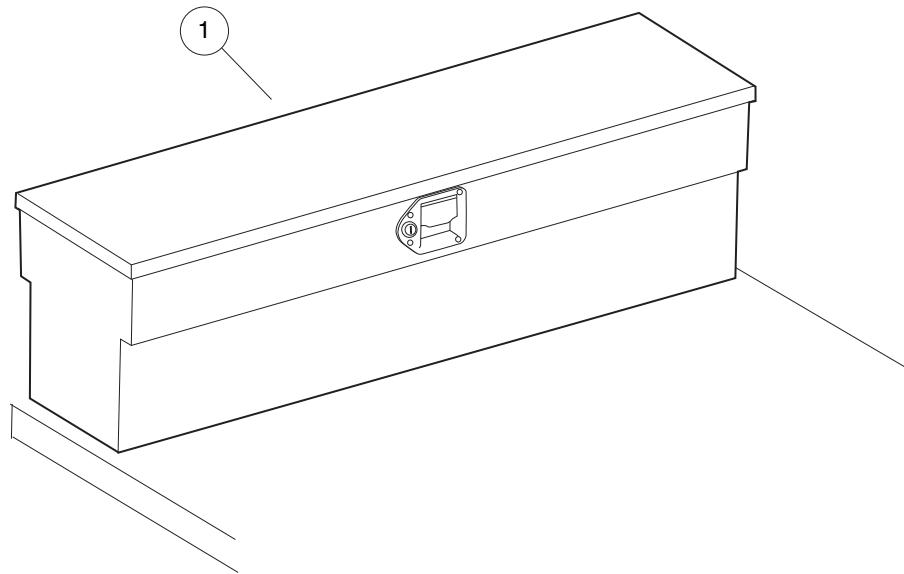
PORTABLE REFRESHMENT CENTER

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>101996901</u>	1 2 3 4 Portable Refreshment Ctr, 2 (includes items 2 through 4)	1
2	<u>1011962</u>	Decal, Refreshment Center	2
3	<u>102056401</u>	Decal-bev Unit Dash Warning	1
4	N/A	Decal, PRC Warning	2

1

G

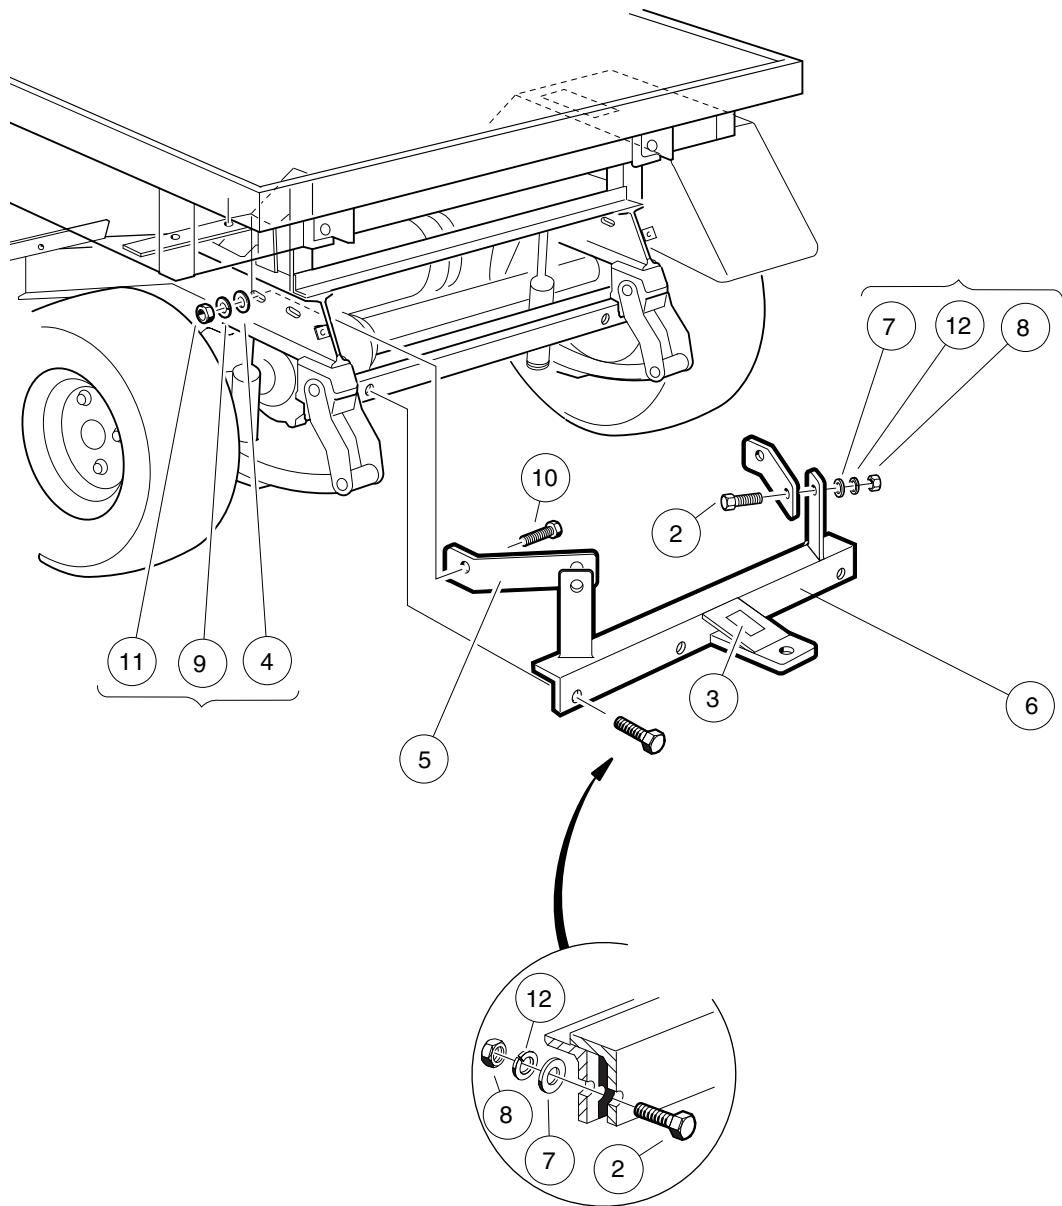
E



001157-001

TOOLBOXES

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>101837401</u>	1 2 3 4 Toolbox, Flat Bed	1
2	<u>101837502</u>	Toolbox, Box Bed	1

1**G****E**

000265-001

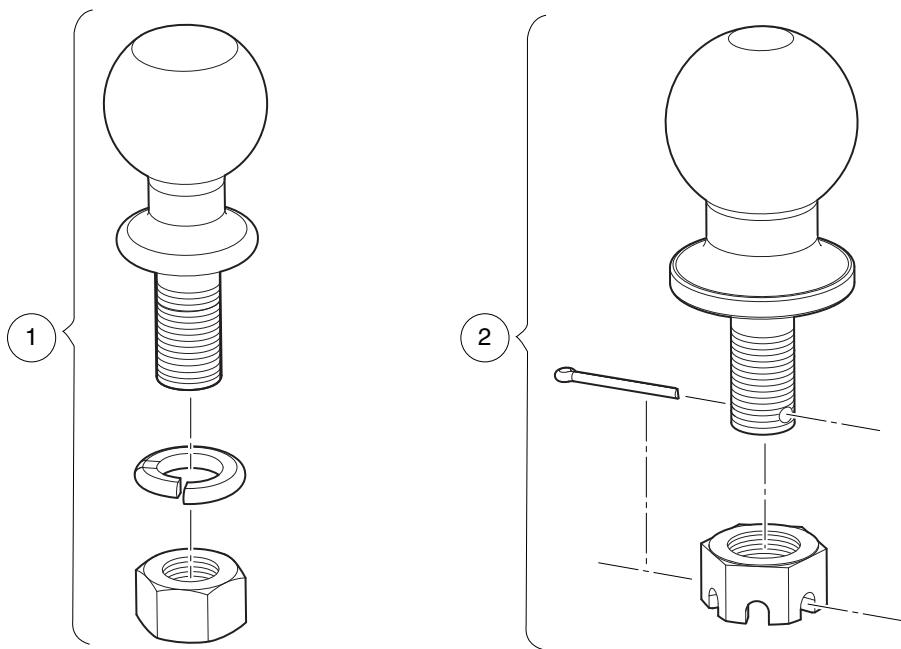
TRAILER HITCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015445</u>	Kit, Trailer Hitch (includes items 2 through 12)	1
2	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	4
3	<u>1011553</u>	Decal, Trailer Hitch	1
4	<u>1011990</u>	Washer, 3/8 Flat	2
5	<u>1013483</u>	Brace, Trailer Hitch	2
6	N/A	Asm, Trailer Hitch	1
7	<u>1241</u>	Washer, 5/16 Type A Flat	4
8	<u>1242</u>	Nut, 5/16-18 Hex	4
9	<u>357</u>	Lockwasher, 3/8 Split	2
10	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	2
11	<u>706</u>	Nut, Hex 3/8-16	2
12	<u>7174</u>	Lockwasher, 5/16 Split	4

1

G

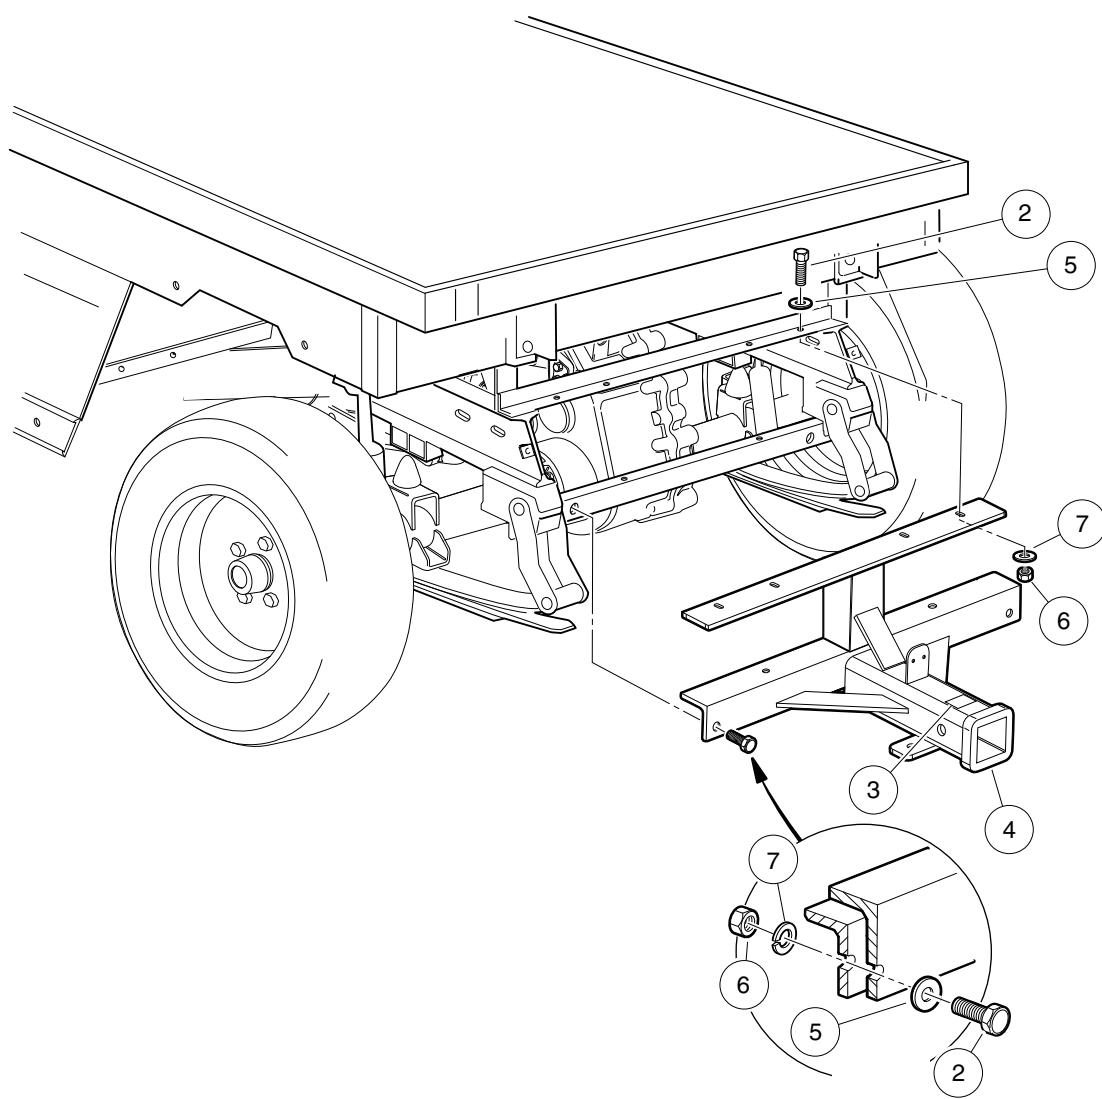
E



001137-001

TRAILER HITCH BALL

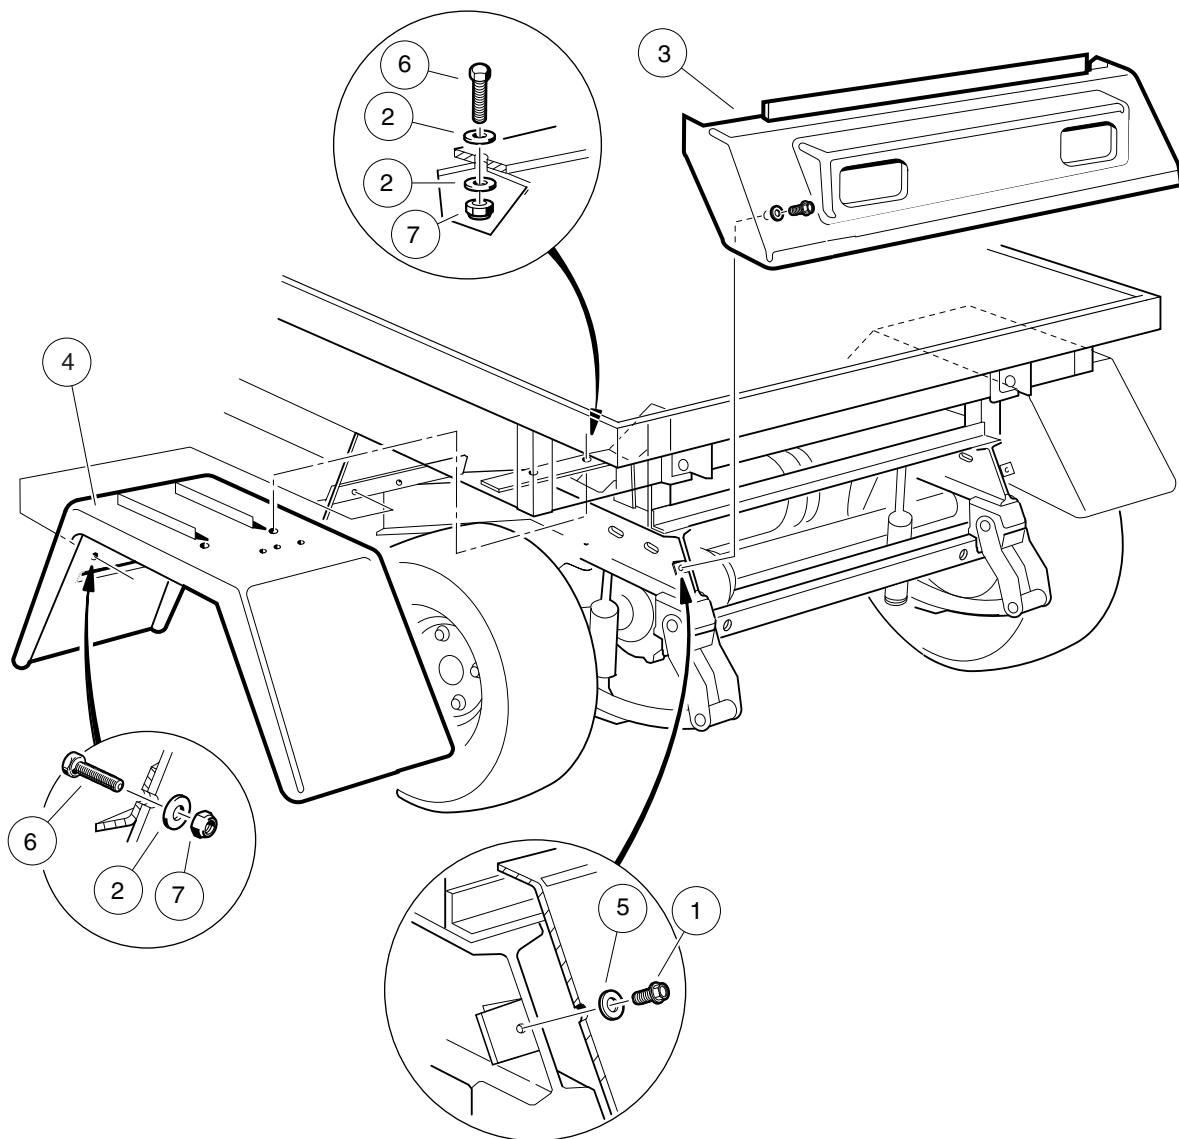
ITEM	PART NO.	DESCRIPTION	QTY
1	<u>1011546</u>	1 2 3 4 Trailer Hitch Ball - 1 7/8"	1
2	<u>AM1264001</u>	Chrome Hitch Ball, 2"	1

1**G****E**

000100-002

RECEIVER HITCH

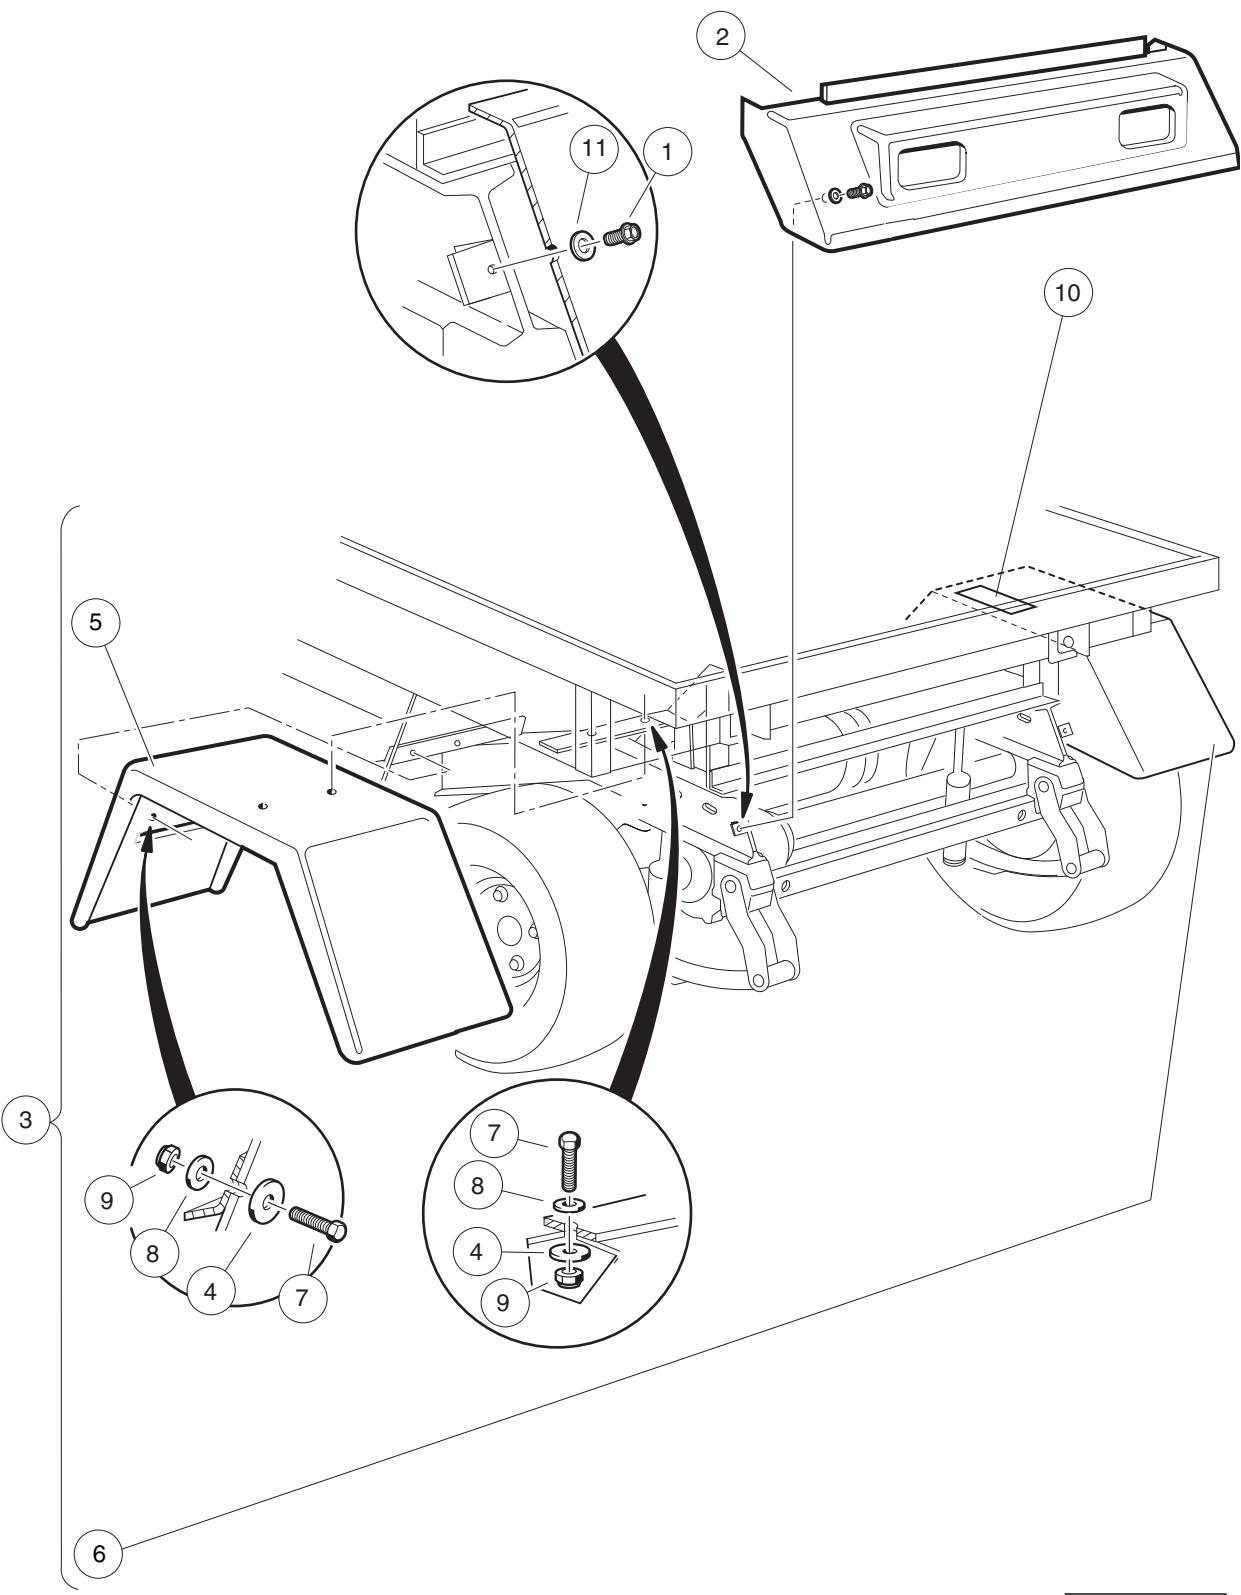
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102065103</u>	Kit, Rear Receiver (includes items 2 through 7)	1
2	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	6
3	<u>1011553</u>	Decal, Trailer Hitch	1
4	<u>102056001</u>	Rear Receiver Weld Asm	1
5	<u>1241</u>	Washer, 5/16 Type A Flat	6
6	<u>1242</u>	Nut, 5/16-18 Hex	6
7	<u>7174</u>	Lockwasher, 5/16 Split	6

1**G****E**

000266-001

REAR BODY TRIM – TURF/CARRYALL 1, 2, 2 PLUS, AND 6

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	1
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	2
2	<u>1014306</u>	Washer, 1/4" Type B Flat	12
3	<u>1015530</u>	Tailskirt	1
4	<u>1016679</u>	Rear Fender	2
5	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
6	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8
7	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	8

1**G****E**

000267-001

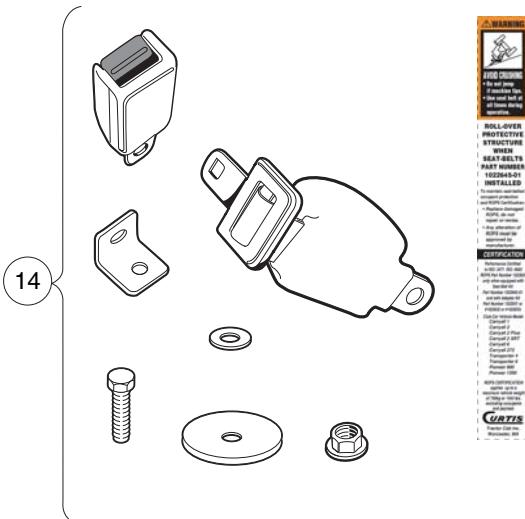
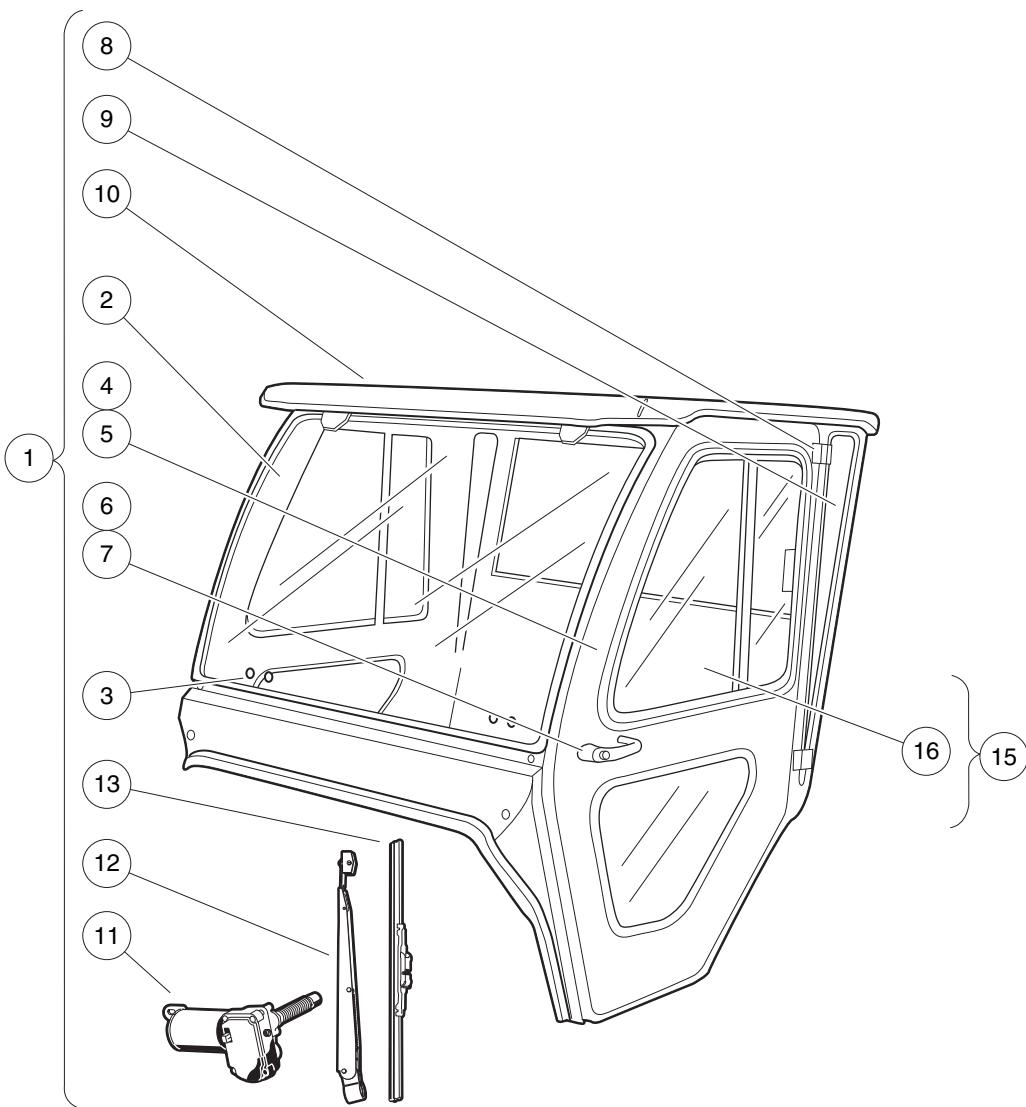
REAR BODY TRIM – TURF/CARRYALL 252 AND XRT 900

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	1
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	2
2	<u>1015530</u>	Tailskirt	1
3	<u>102010501</u>	Rear Fender Kit (includes items 4 through 9)	1
4	<u>1014306</u>	Washer, 1/4" Type B Flat	10
5	<u>102004601</u>	Extended Fender, Rear, Left-Hand	1
6	<u>102004602</u>	Extended Fender, Rear, Right-Hand	1
7	<u>304</u>	Screw, 1/4-20 X 1.0 Hex-Head Cap	8
8	<u>332</u>	Washer, 1/4 Type A Narrow Flat	6
9	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	8
10	<u>102224001</u>	Decal, Rotating Parts Warning	1
11	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2

1

G

E



001098-001

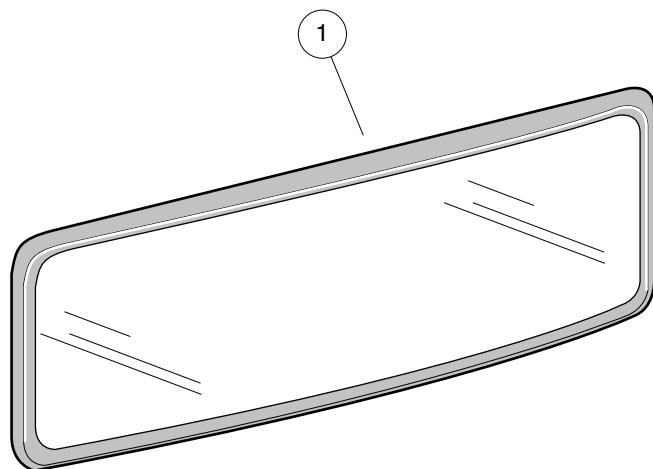
CAB, CURTIS – TURF/CARRYALL 2, 2 PLUS, 252 AND XRT 900

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	1
1	<u>102262901</u>	Asm, Cab (includes items 2 through 13)	1
2	AM1304001	CTC-Windshield Assembly	1
3	AM1304101	CTC-Windshield Latches	A/R
4	AM1304201	CTC-Drivers Side Door	1
5	AM1304301	CTC-Passenger Side Door	1
6	AM1304401	CTC-Inside Door Latches	2
7	AM1304501	CTC-Outside Door Latches	2
8	AM1304601	CTC-Door Hinge Kit	A/R
9	AM1304801	CTC-Side Frame Rear Window	1
10	AM1304901	CTC-Roof (White Plastic)	1
11	AM1305001	CTC-Wiper Motor	1
12	AM1305101	CTC-Wiper Arm	1
13	AM1305201	CTC-Wiper Blade	1
14	102264501	Kit, Seat Belt (required for ROPS certification, includes mounting hardware)	1
15	<u>103274401</u>	Kit, Adapter, Cab, Carryall (includes item 16)	1
16	AM1304701	CTC-Rear Panel	1

1

G

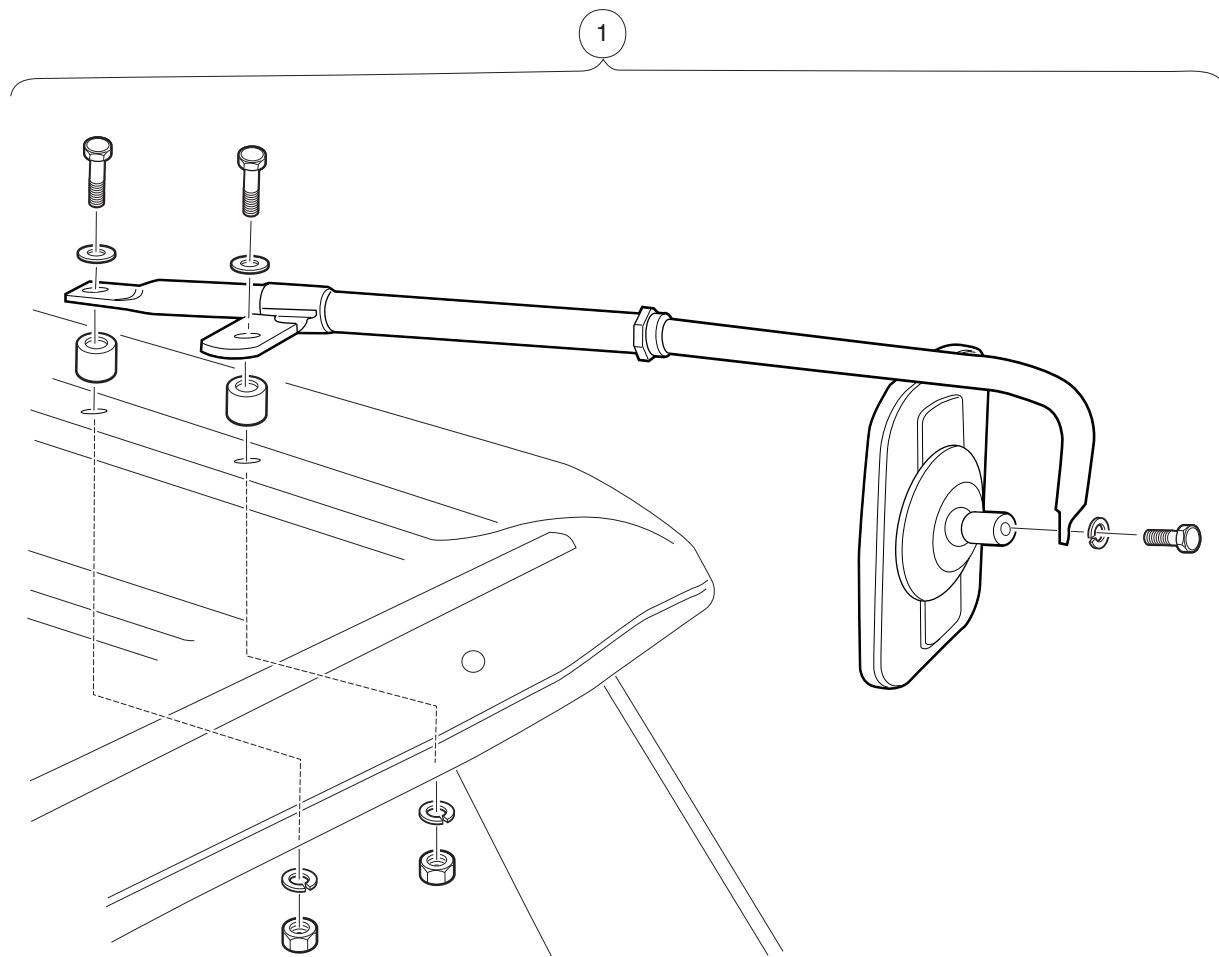
E



APM-000214-001

MIRROR, INSIDE REAR-VIEW – CURTIS CAB

ITEM	PART NO.	DESCRIPTION	QTY
1	101995101	<p style="margin-left: 20px;">1 2 3 4</p> <p>Kit, Rear-View Mirror (includes mounting hardware)</p> <p>Note: For installation on vehicles equipped with a Curtis cab.</p>	1

1**G****E**

001202-001

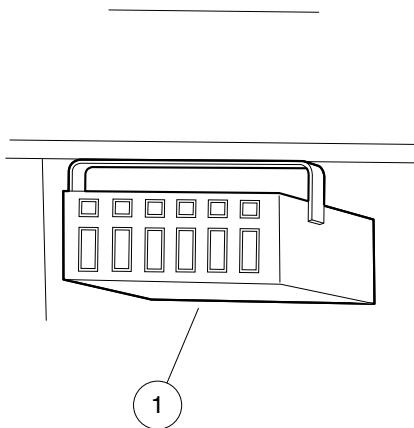
MIRROR, SIDE-VIEW – CURTIS CAB

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>102272601</u>	<p>1 2 3 4 Kit, Mirror</p> <p>Note: For installation on vehicles equipped with a Curtis cab.</p>	<p>1</p> <p>1</p> <p>G</p> <p>E</p>

1

G

E



APM-000264-002

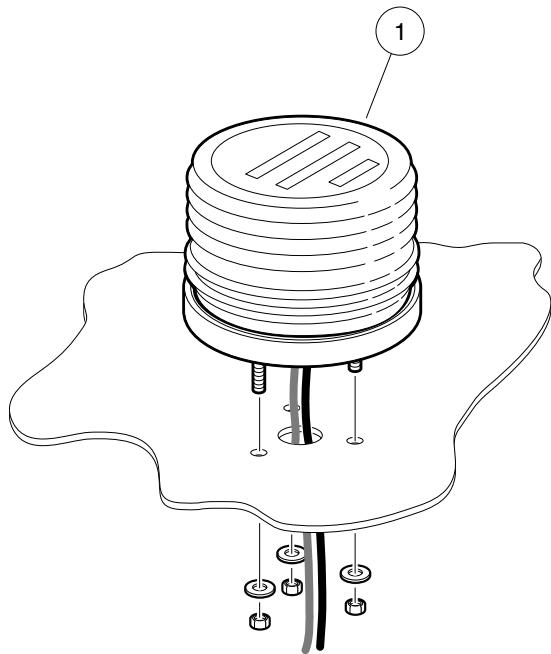
ACCESSORY SWITCH PANEL – CURTIS CAB

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>101994601</u>	<p>1 2 3 4</p> <p>Panel, Accessory Switch</p> <p>Note: For installation on vehicles equipped with a Curtis cab.</p>	<p>1</p> <p>G</p> <p>E</p>

1

G

E



APM-000212-001

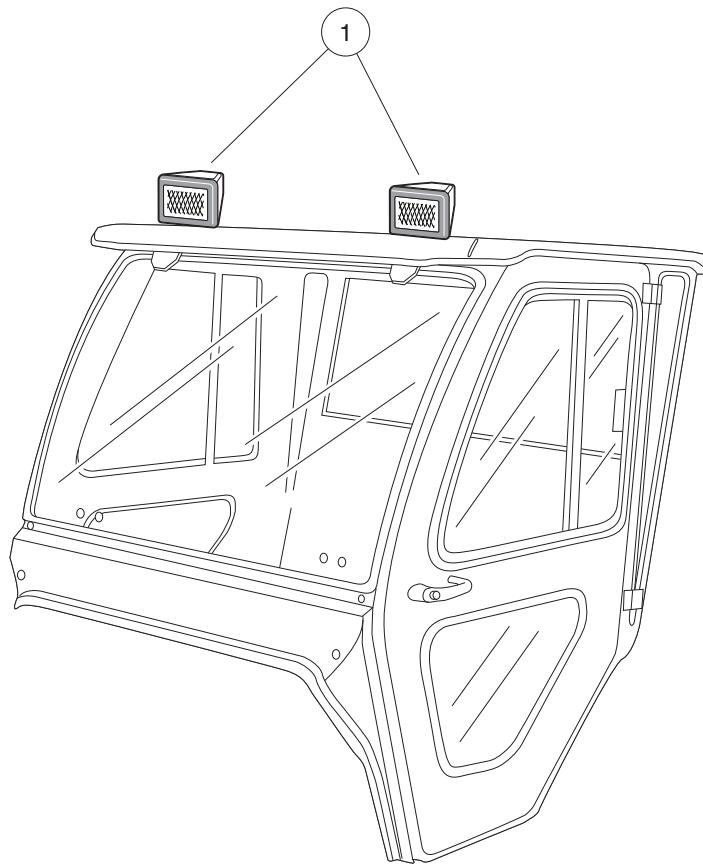
STROBE LIGHT – CURTIS CAB

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>101994301</u>	<p>1 2 3 4</p> <p>Kit, Strobe Light (includes mounting hardware and wire harness)</p> <p>Note: For installation on vehicles equipped with a Curtis cab.</p>	<p>1</p> <p>1</p> <p>G</p> <p>E</p>

1

G

E



001201-001

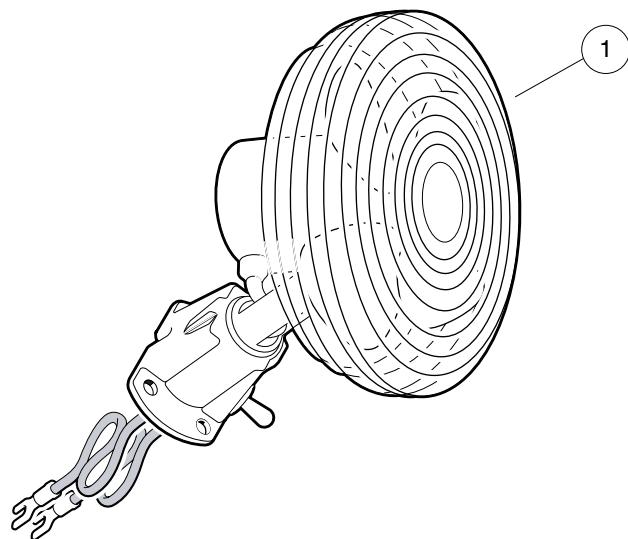
WORK LIGHTS – CURTIS CAB

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>101994801</u>	<p style="margin-left: 20px;">1 2 3 4</p> <p>Kit, Work Light (includes mounting hardware and wire harness)</p> <p>Note: For installation on vehicles equipped with a Curtis cab.</p>	1

1

G

E



APM-000215-001

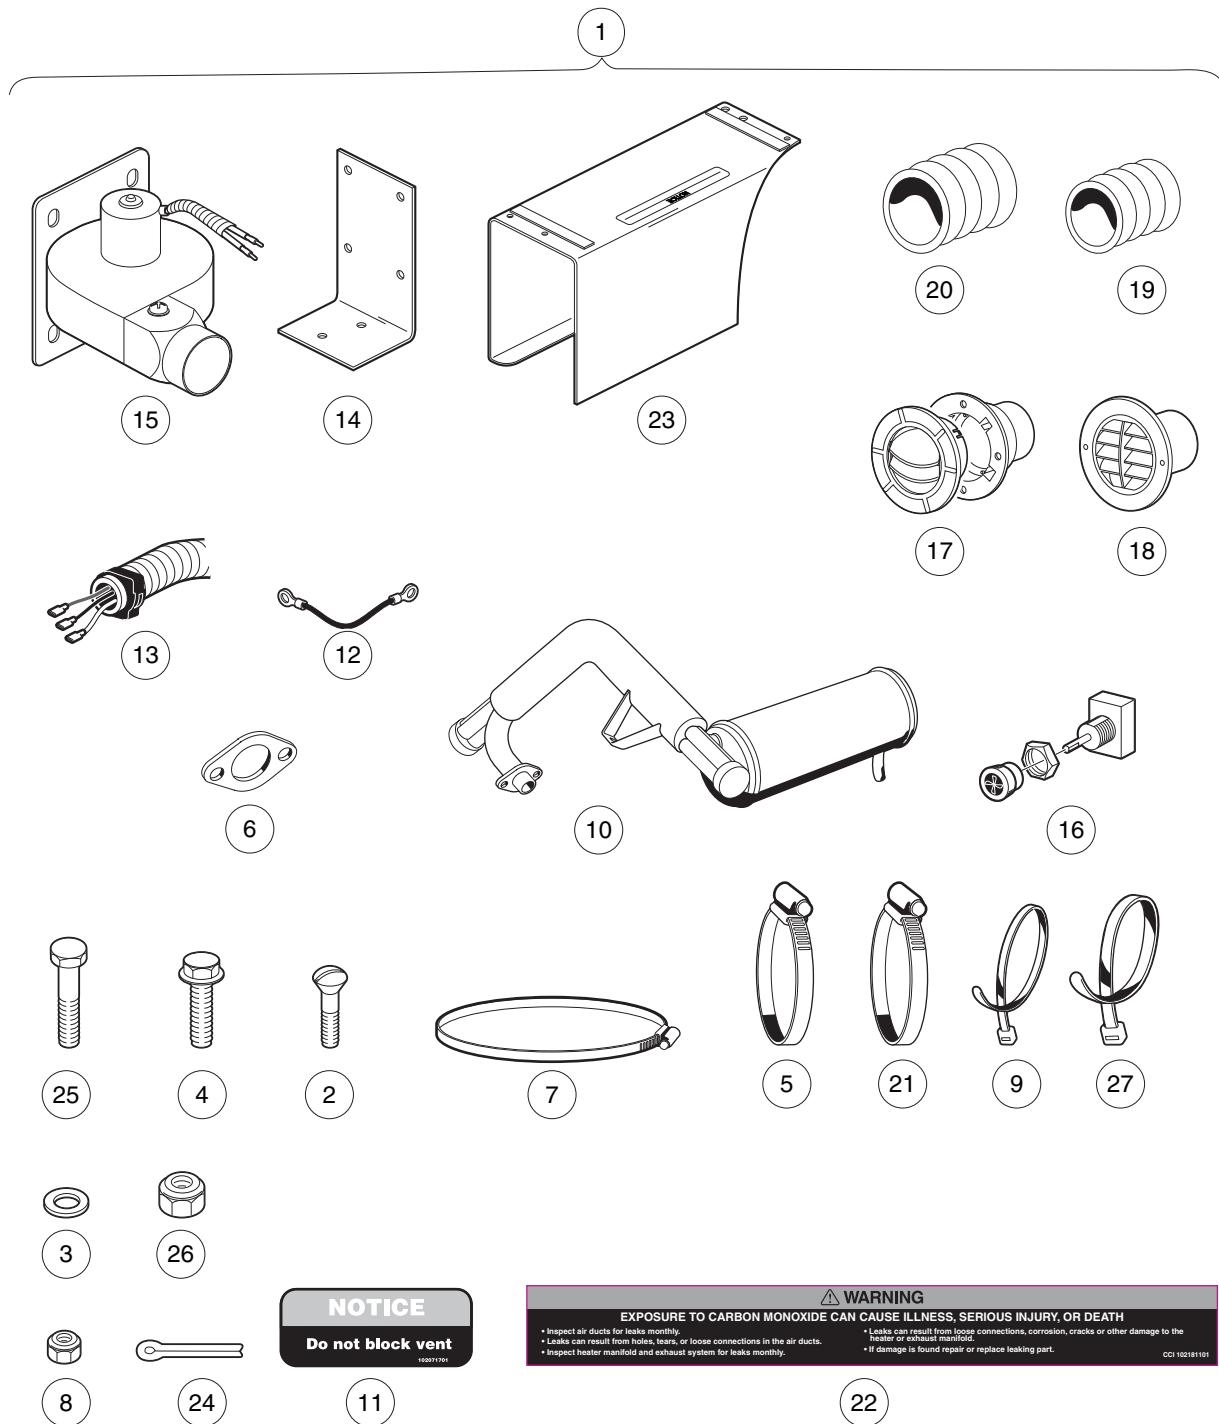
FAN/DEFOGGER – CURTIS CAB

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>101994401</u>	<p>1 2 3 4</p> <p>Kit, Fan/Defogger (includes mounting hardware and wire harness)</p> <p>Note: For installation on vehicles equipped with a Curtis cab.</p>	<p>1</p> <p>G</p> <p>E</p>

1

G

E

**NOTICE****Do not block vent****WARNING****EXPOSURE TO CARBON MONOXIDE CAN CAUSE ILLNESS, SERIOUS INJURY, OR DEATH**

- Inspect air ducts for leaks monthly.
- Leaks can result from holes, tears, or loose connections in the air ducts.
- Inspect heater manifold and exhaust system for leaks monthly.
- Leaks can result from loose connections, corrosion, cracks or other damage to the heater or exhaust manifold.
- If damage is found repair or replace leaking part.

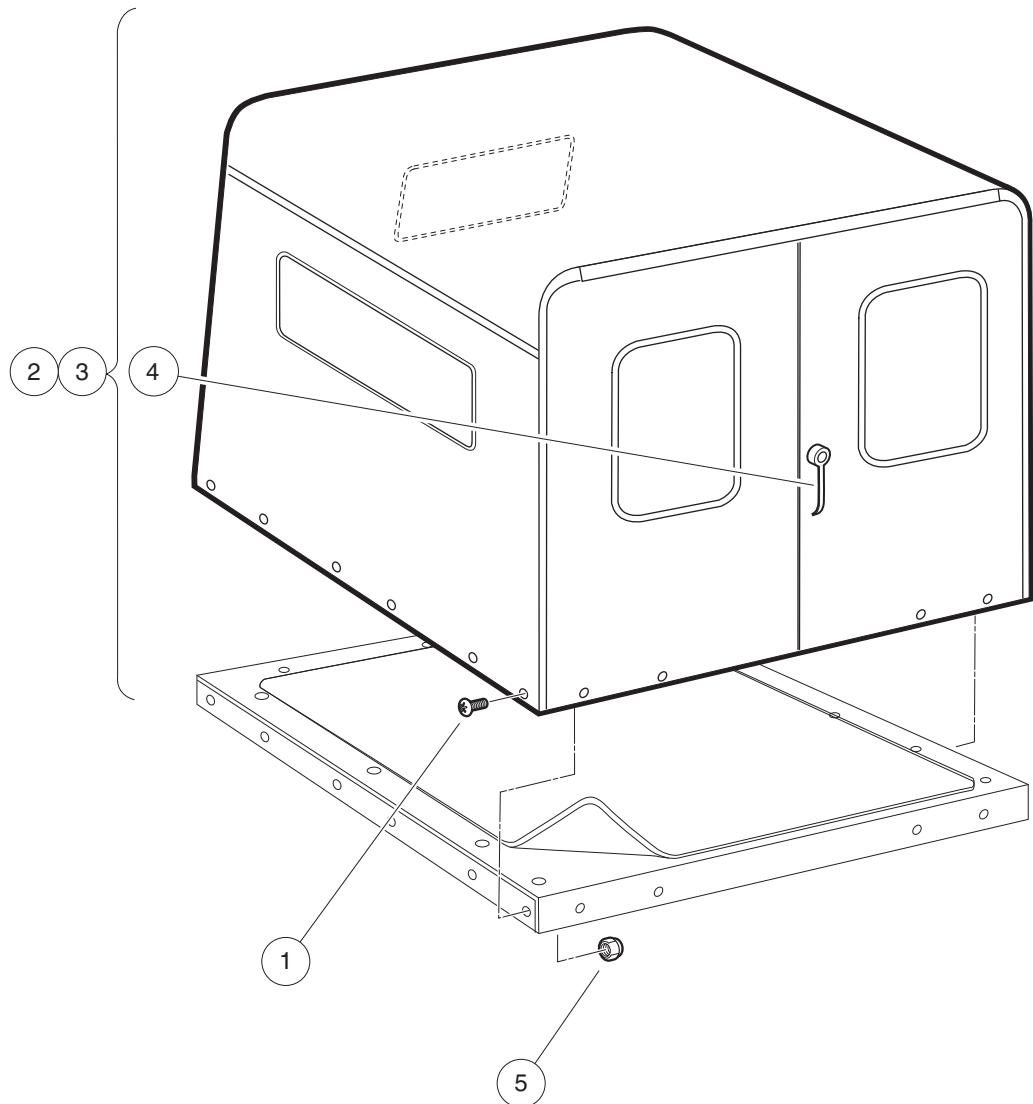
CCI 102181101

HEATER – CURTIS CAB

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102056502</u>	Comfort Cab Heater Kit, Turf/CA2/252 w/FE350 (includes items 2 through 27)	1
2	<u>1011226</u>	Screw, #6-32 X .62 Cs Oval Hd	4
3	<u>1011964</u>	Washer, 1/4 Flat	12
4	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3
5	<u>1012349</u>	Clamp, Air Intake Hose, 2"	2
6	<u>1016904</u>	Gasket, Exhaust	1
7	<u>1017689</u>	Clamp, 5" Muffler Hose	1
8	<u>101932201</u>	Locknut, #6-32 Nylon	4
9	<u>102025401</u>	Tie Wrap, Heavy Duty	1
10	<u>102070601</u>	Header Heater, FE350	1
11	<u>102071701</u>	Decal - Header Heater Kit	2
12	N/A	Wire Asm #16 Black	1
13	N/A	Wire Harness, Header Heater	1
14	N/A	Mounting Bracket, Blower	1
15	<u>102074101</u>	Centrifugal Blower Asm	1
16	<u>102074201</u>	Heater Switch	1
17	<u>102074501</u>	Outlet Vent	1
18	<u>102074601</u>	Inlet Vent	1
19	<u>102074701</u>	Duct Hose	1
20	<u>102074801</u>	Duct Hose	1
21	<u>102074901</u>	Clamp, Air Intake Hose, 2-1/2"	4
22	<u>102181101</u>	Decal Inspection Heater	1
23	<u>102182101</u>	Cover, Blower	1
24	<u>1035</u>	Cotter Pin, 3/32 x 1	2
25	<u>304</u>	Screw, 1/4-20 X 1.0 Hex-Head Cap	6
26	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	6
27	<u>8639</u>	Tie Wrap, 11" Nylon	3

Note: For installation on vehicles equipped with a Curtis cab.

**1
G
E**

1**G****E**

001208-001

VAN BOX

ITEM	PART NO.	DESCRIPTION	QTY
1	1015399	1 2 3 4 Screw, 5/16-18 X 0.88 Torx Truss-Head	20
2	101754201	Custom Van Box, Gray	1
3	101754204	Custom Van Box Kit, White (includes item 4)	1
4	102006201	Handle, Van Box Door	1
5	7473	Locknut, 5/16-18 Nylon Insert	20

Note: Item 2, Van Box Gray, includes item 4, Door Handle.

1

G

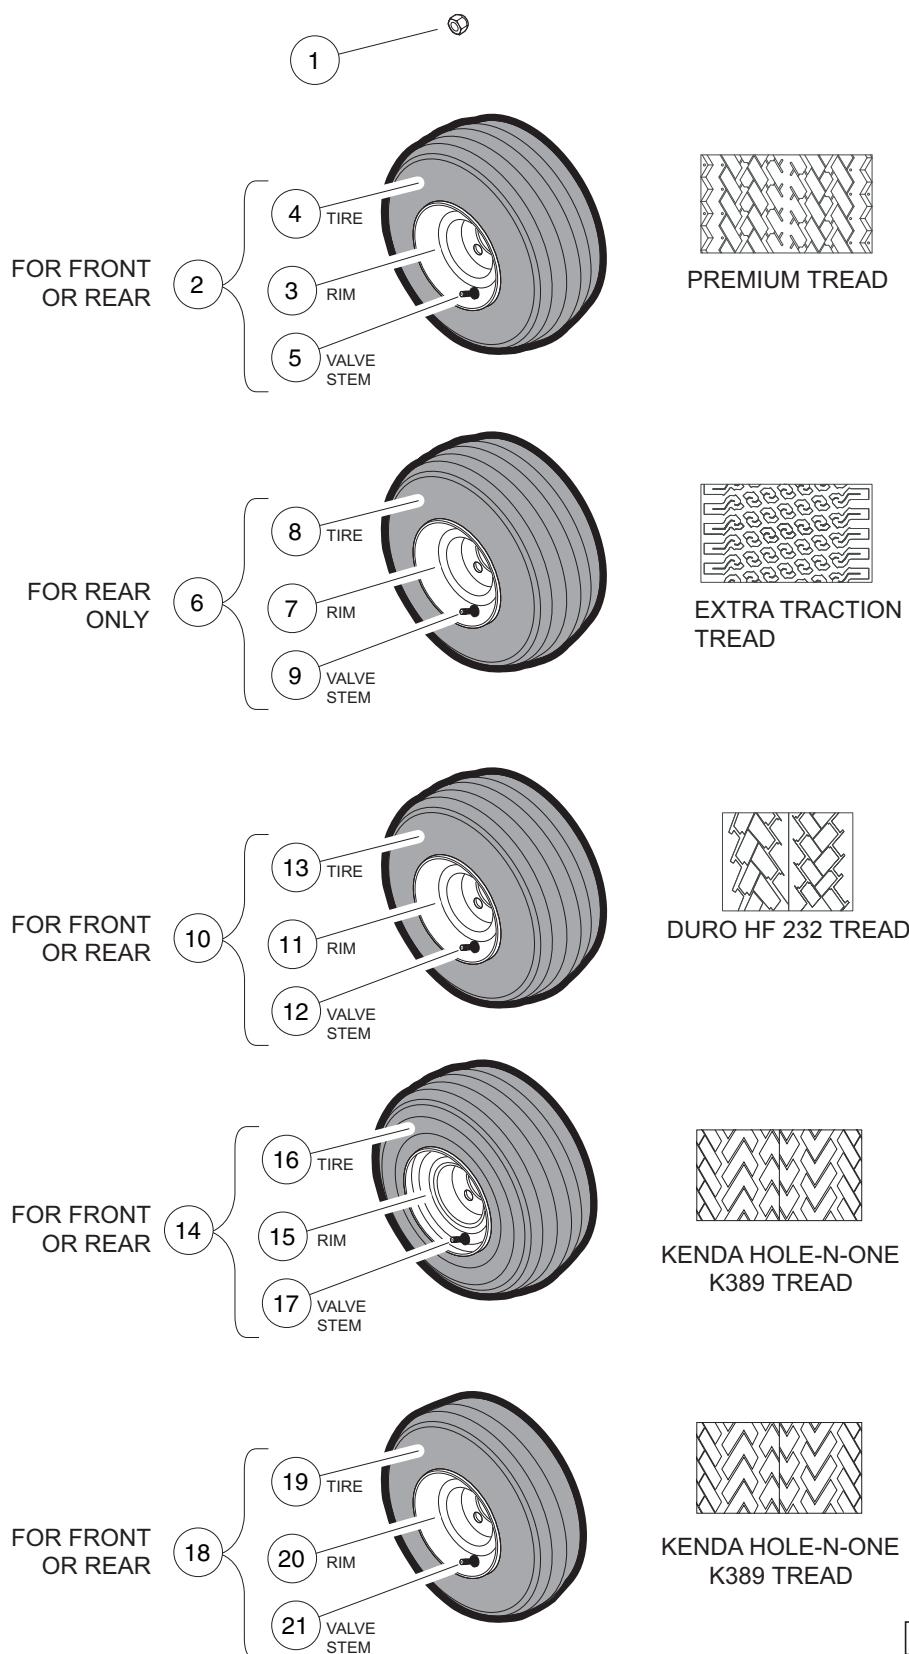
E

WHEELS AND TIRES

2

G

E

2**G****E**

000269-017


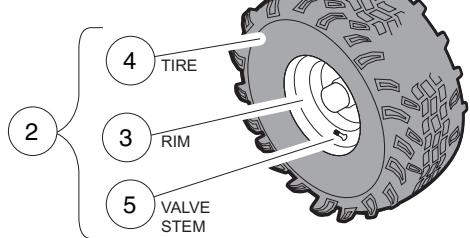
WHEELS AND TIRES – TURF/CARRYALL 2 AND 2 PLUS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010984</u>	.500-20 Unf Lug Nut	16
2	<u>101651406</u>	Tire/Wheel Asm, White, Premium Tread, 6-Ply (includes items 3 through 5)	4
3	<u>1014771</u>	Wheel Rim, White	1
4	<u>101737002</u>	Tire, Unmounted	1
5	<u>7310</u>	Valve Stem, Black Plastic	1
6	<u>101651407</u>	Tire/Wheel Asm, White, Extra-Traction, 6-Ply (includes items 7 through 9)	2
7	<u>1014771</u>	Wheel Rim, White	1
8	<u>101769302</u>	Tire, Unmounted Xtrac 18 x 8.50-8	1
9	<u>7310</u>	Valve Stem, Black Plastic	1
10	<u>101651414</u>	Tire/Wheel Asm, White, Duro HF 232 (includes items 11 through 13)	4
11	<u>1014771</u>	Wheel Rim, White	1
12	<u>7310</u>	Valve Stem, Black Plastic	1
13	****	Tire, Unmounted, 6-Ply Rated (18.5 x 8.5 - 8) (Duro)	1
14	<u>101651418</u>	Tire/Wheel Asm, White, Kenda Hole-N-One, 6-Ply (includes items 15 through 17)	4
15	103459102	Wheel Rim Asm, 8"x7", White	1
16	103658701	Tire, Kenda Hole-N-One, 18x8.5 - 8, Prem, 6-Ply	1
17	<u>7310</u>	Valve Stem, Black Plastic	1
18	<u>101651419</u>	Tire/Wheel Asm, White, Kenda Hole-N-One, 6-Ply, Narrow (includes items 19 through 21)	4
19	<u>103722901</u>	Tire, Kenda Hole-N-One, 18x6.5 - 8, Prem, 6-Ply	1
20	103723002	Wheel Rim, 8 X 5.375, White	1
21	<u>7310</u>	Valve Stem, Black Plastic	1
		**** Special order item available upon request.	

2**G****E**

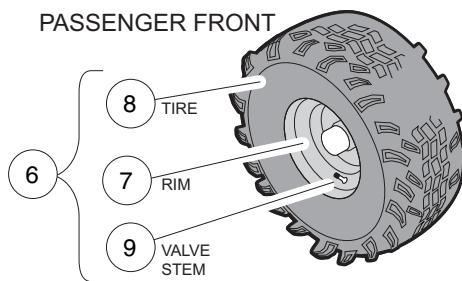
WHITE RIMS

PASSENGER FRONT


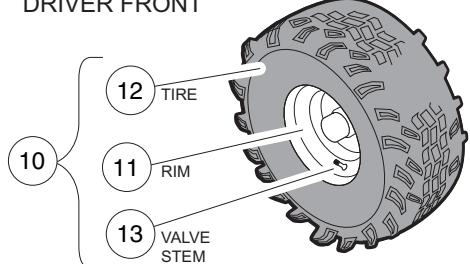


SILVER RIMS

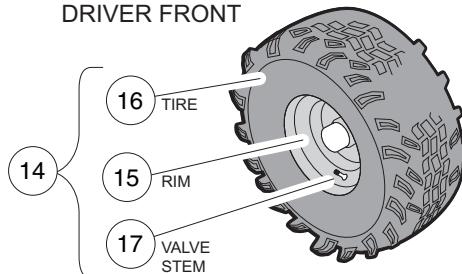
PASSENGER FRONT




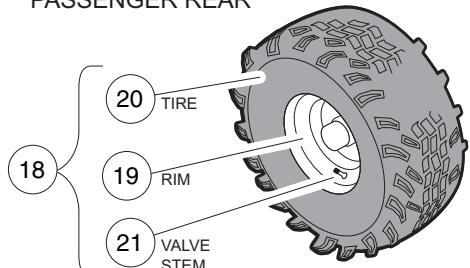
DRIVER FRONT



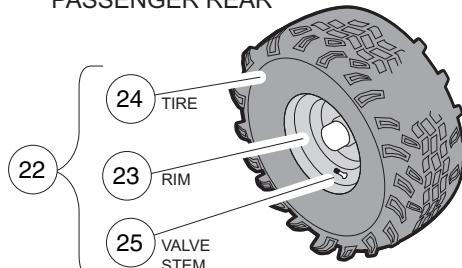
DRIVER FRONT




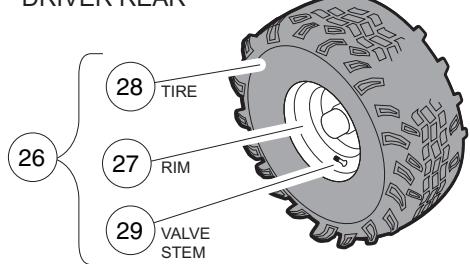
PASSENGER REAR



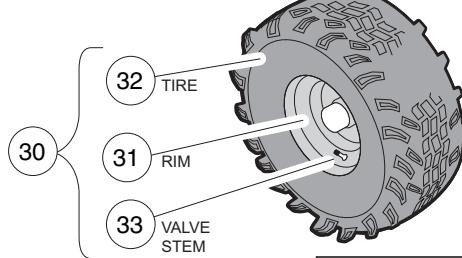
PASSENGER REAR



DRIVER REAR



DRIVER REAR




000269-004

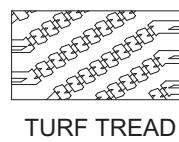
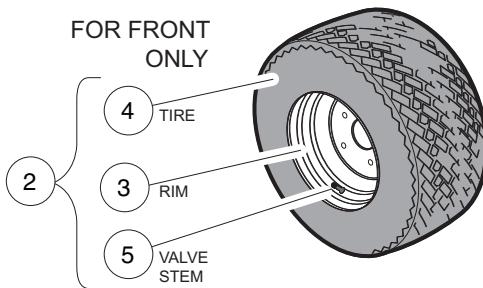
WHEELS AND TIRES, OFF-ROAD TREAD – TURF/CARRYALL 252 AND XRT 900

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010984</u>	.500-20 Unf Lug Nut	16
2	<u>102009201</u>	Off-Road Tire and Wheel Asm, Right, Front (includes items 3 through 5)	1
3	N/A	Rim, Wheel, White	1
4	N/A	Tire, Unmounted, Duro, Off-Road Tire, 22 x 11-10, 6-Ply Rated	1
5	<u>7310</u>	Valve Stem, Black Plastic	1
6	<u>102009202</u>	Off-Road Tire and Wheel Asm, Right, Front (includes items 7 through 9)	1
7	N/A	Wheel Rim, Silver	1
8	N/A	Tire, Unmounted, Duro, Off-Road Tire, 22 x 11-10, 6-Ply Rated	1
9	<u>7310</u>	Valve Stem, Black Plastic	1
10	<u>102009301</u>	Off-Road Tire and Wheel Asm, Left, Front (includes items 11 through 13)	1
11	N/A	Rim, Wheel, White	1
12	N/A	Tire, Unmounted, Duro, Off-Road Tire, 22 x 11-10, 6-Ply Rated	1
13	<u>7310</u>	Valve Stem, Black Plastic	1
14	<u>102009302</u>	Off-Road Tire and Wheel Asm, Left, Front (includes items 15 through 17)	1
15	N/A	Wheel Rim, Silver	1
16	N/A	Tire, Unmounted, Duro, Off-Road Tire, 22 x 11-10, 6-Ply Rated	1
17	<u>7310</u>	Valve Stem, Black Plastic	1
18	<u>102009401</u>	Off-Road Tire and Wheel Asm, Right, Rear (includes items 19 through 21)	1
19	N/A	Rim, Wheel, White	1
20	N/A	Tire, Unmounted, Duro, Off-Road Tire, 22 x 11-10, 6-Ply Rated	1
21	<u>7310</u>	Valve Stem, Black Plastic	1
22	<u>102009402</u>	Off-Road Tire and Wheel Asm, Right, Rear (includes items 23 through 25)	1
23	N/A	Wheel Rim, Silver	1
24	N/A	Tire, Unmounted, Duro, Off-Road Tire, 22 x 11-10, 6-Ply Rated	1
25	<u>7310</u>	Valve Stem, Black Plastic	1
26	<u>102009501</u>	Off-Road Tire and Wheel Asm, Left, Rear (includes items 27 through 29)	1
27	N/A	Rim, Wheel, White	1
28	N/A	Tire, Unmounted, Duro, Off-Road Tire, 22 x 11-10, 6-Ply Rated	1
29	<u>7310</u>	Valve Stem, Black Plastic	1
30	<u>102009502</u>	Off-Road Tire and Wheel Asm, Left, Rear (includes items 31 through 33)	1
31	N/A	Wheel Rim, Silver	1
32	N/A	Tire, Unmounted, Duro, Off-Road Tire, 22 x 11-10, 6-Ply Rated	1
33	<u>7310</u>	Valve Stem, Black Plastic	1
		Note: Front and rear wheels are NOT interchangeable. The rear wheels have a different offset than the front wheels. The rear wheels must be installed with the deeper offset facing out. Off-road tires are directional.	

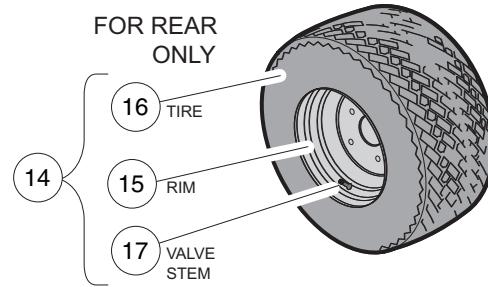
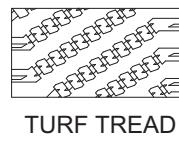
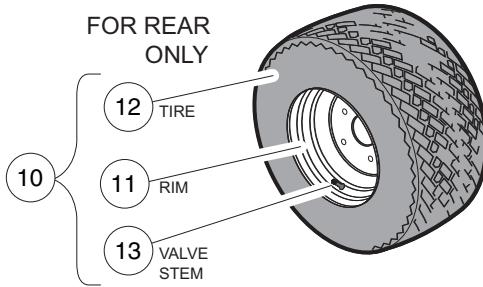
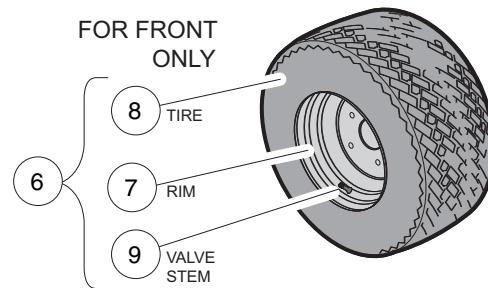
2
G
E

2**G****E**

WHITE RIMS



SILVER RIMS



000269-005

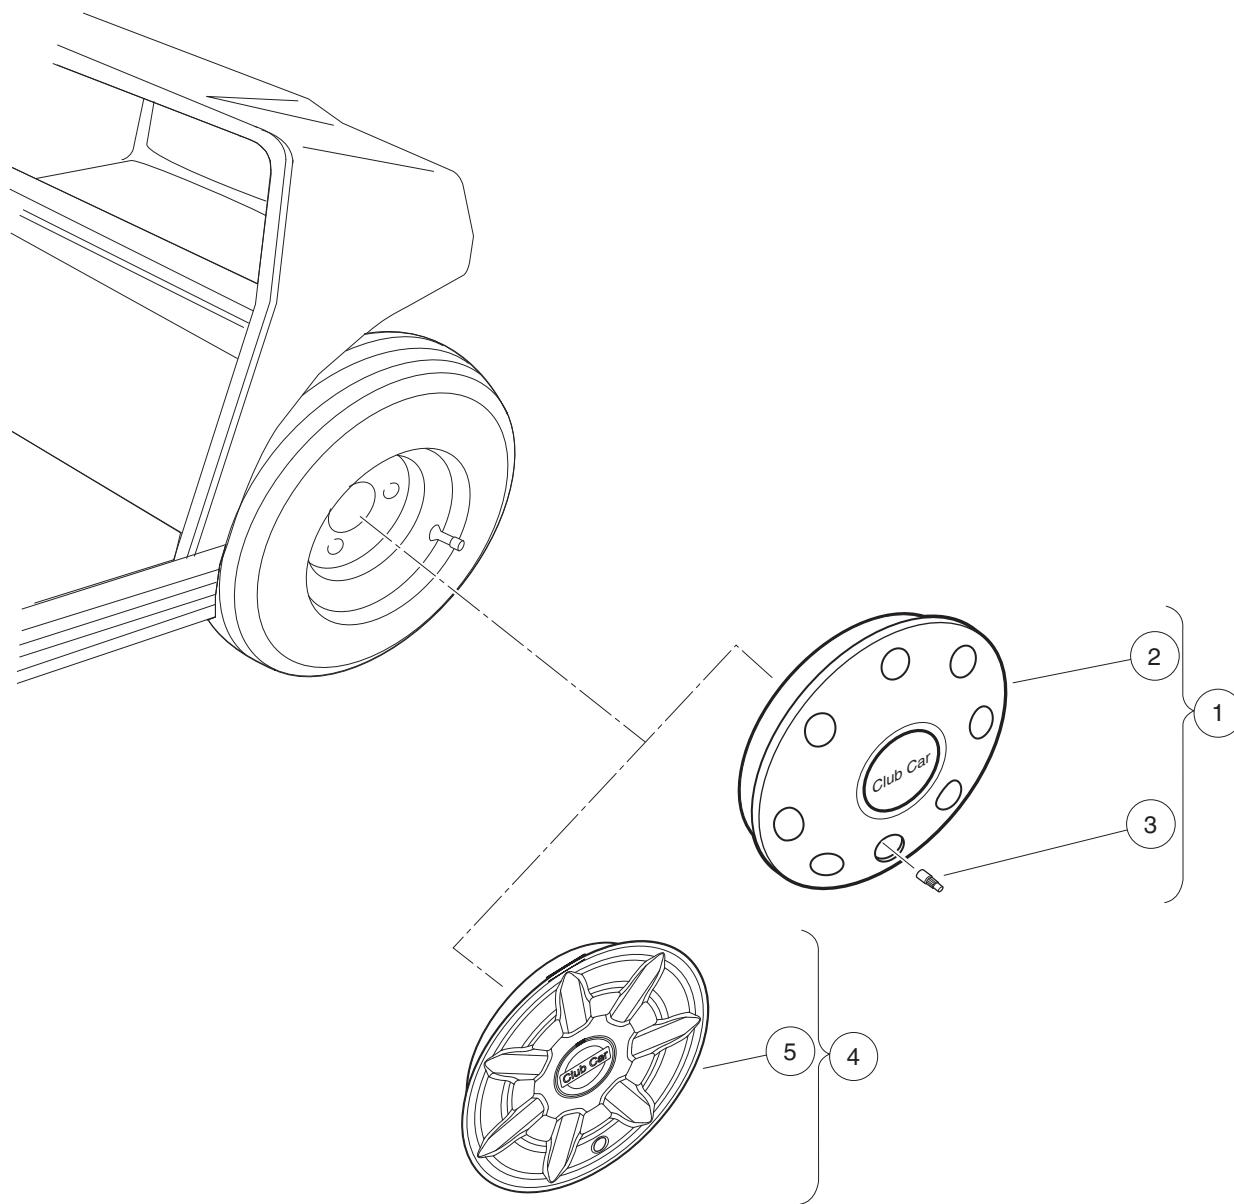
WHEELS AND TIRES, TURF TREAD – TURF/CARRYALL 252 AND XRT 900

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010984</u>	.500-20 Unf Lug Nut	16
2	<u>102009901</u>	Turf Tire and Wheel Asm, Front (includes items 3 through 5)	2
3	N/A	Rim, Wheel, White	1
4	N/A	Tire, Front, Unmounted, Titan Turf Trac, 23 x 10.5-12, 4-Ply Rated	1
5	<u>7310</u>	Valve Stem, Black Plastic	1
6	<u>102009902</u>	Turf Tire and Wheel Asm, Front (includes items 7 through 9)	2
7	N/A	Wheel Rim, Silver	1
8	N/A	Tire, Front, Unmounted, Titan Turf Trac, 23 x 10.5-12, 4-Ply Rated	1
9	<u>7310</u>	Valve Stem, Black Plastic	1
10	<u>102010001</u>	Turf Tire and Wheel Asm, Rear (includes items 11 through 13)	2
11	N/A	Rim, Wheel, White	1
12	N/A	Tire, Rear, Unmounted, Titan Turf Trac, 23 x 10.5-12, 4-Ply Rated	1
13	<u>7310</u>	Valve Stem, Black Plastic	1
14	<u>102010002</u>	Turf Tire and Wheel Asm, Rear (includes items 15 through 17)	2
15	N/A	Wheel Rim, Silver	1
16	N/A	Tire, Rear, Unmounted, Titan Turf Trac, 23 x 10.5-12, 4-Ply Rated	1
17	<u>7310</u>	Valve Stem, Black Plastic	1

2

G

E

2**G****E**

001203-001

WHEEL COVERS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012642</u>	Sport Wheel Cover Kit (each) (includes items 2 and 3)	4
2	1012640	Hubcap	1
3	1012641	Valve Extension	1
4	<u>102559901</u>	Hub Cap Kit, Prec (includes item 5)	1
5	<u>103694501</u>	Hub Cap, 7 Prong	4

2

G

E

DECALS

3

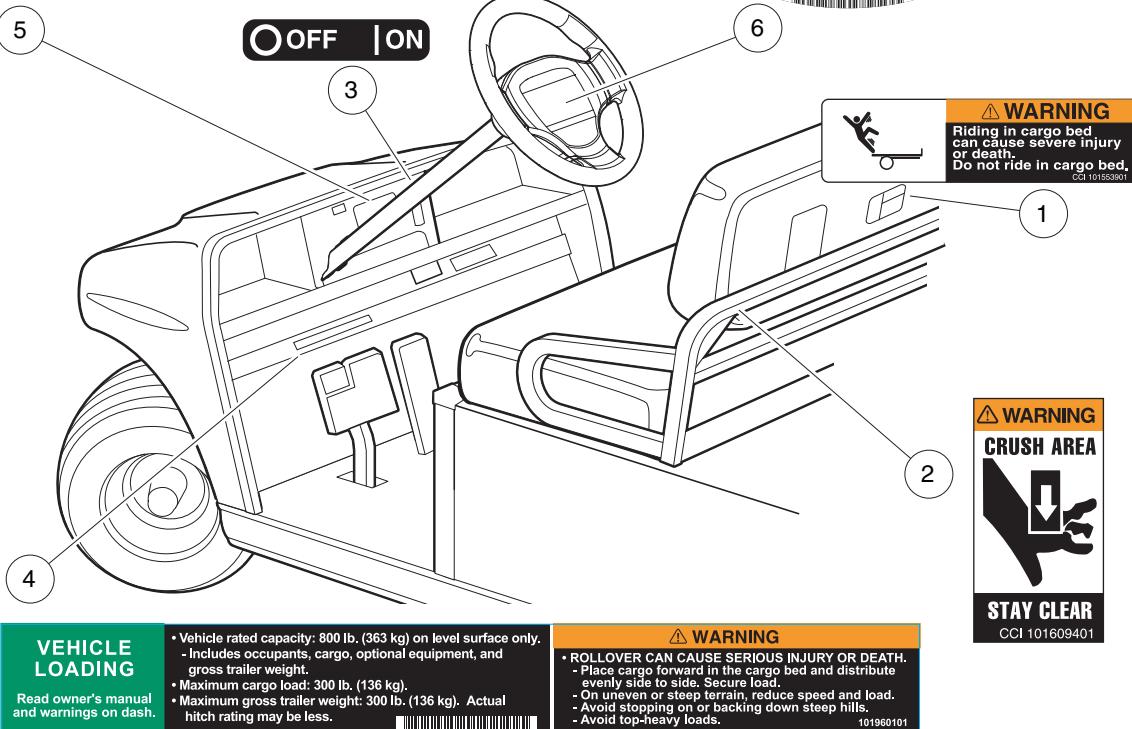
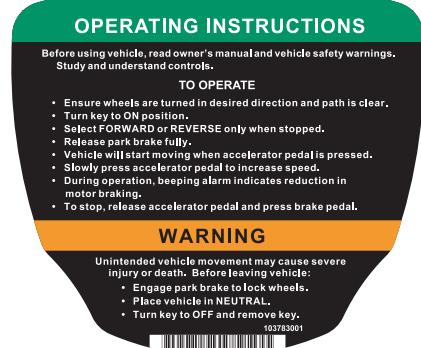
G

E

3

G

E



001232-001

DECALS – TURF/CARRYALL 2 IQ PLUS ELECTRIC (PAGE 1 OF 2)

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>101553901</u>	1 2 3 4 Decal, Bed Load Warning	1
2	<u>101609401</u>	Decal, Crush Area Warning	2
3	<u>101825101</u>	Decal, Off/On	1
4	<u>101960201</u>	Decal, Vehicle Loading	1
5	<u>103205401</u>	Decal, Warning, Rollover, Utl	1
6	<u>103783001</u>	Decal, Op Instr, Ele	1

3

G

E

3

G

E

WARNING**AVOID FIRE HAZARD**

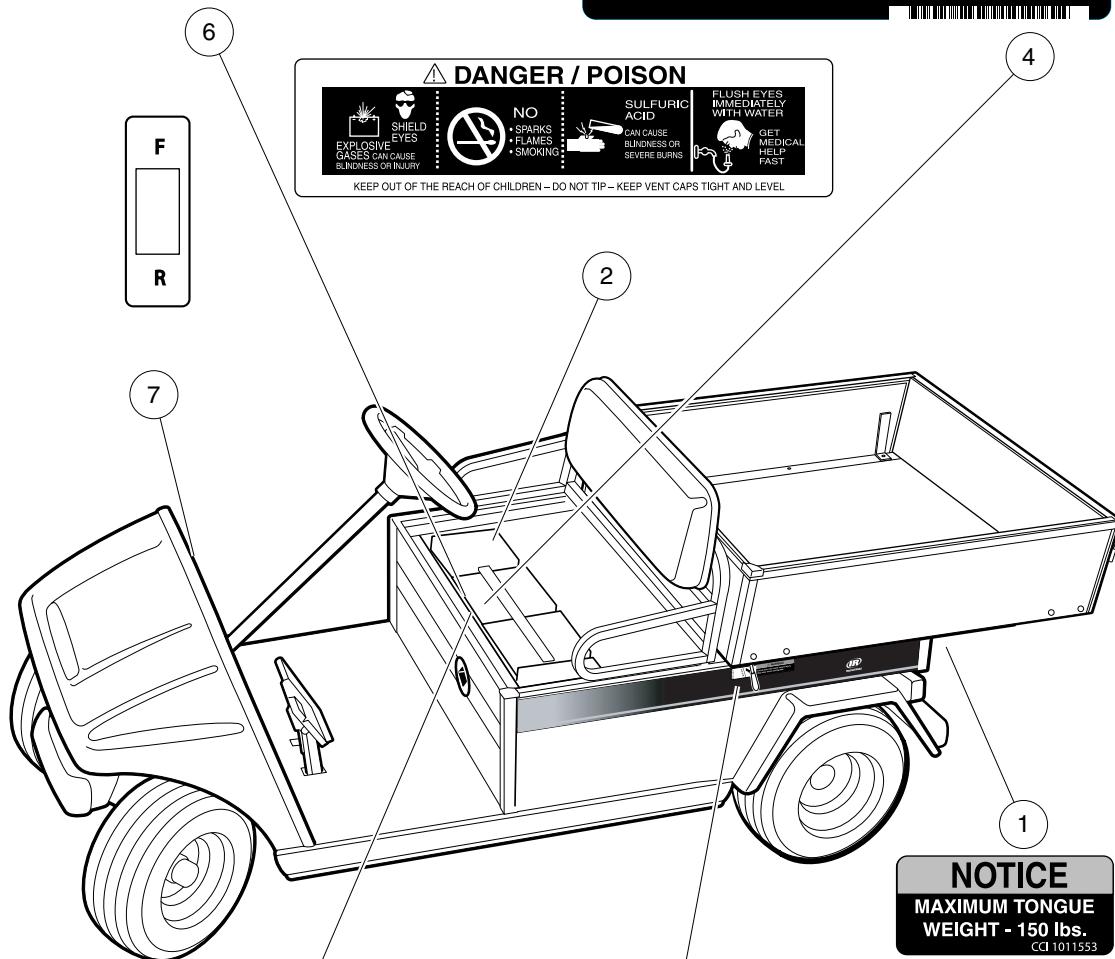
- Replacement battery wires must be 4-gauge (AWG) with low-resistance terminals equivalent to factory-installed wires.
- Ensure that battery connections are clean and properly tightened. See owner's manual.

CCI 102967601

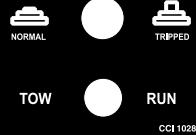
CAUTION**EXPOSURE TO WATER MAY DAMAGE ELECTRONIC COMPONENTS**

- Do not operate vehicle without this cover properly installed.
- Do not direct water stream in the area of the cover without cover securely in place.
- See vehicle maintenance and service manual before servicing.

CCI 102518301

**WARNING****BATTERY EXPLOSION COULD RESULT IN SEVERE PERSONAL INJURY.**

- Do not store items in battery compartment.
- Place Run/Tow switch in TOW position before:
 - Disconnecting or connecting battery cables
 - Towing this vehicle
 - Extended storage
 - Servicing the vehicle



CCI 102845101

**WARNING**

**Crush area. Can cause severe injury.
Stay clear when closing bed.**

000611-001

DECALS – TURF/CARRYALL 2 IQ PLUS ELECTRIC (PAGE 2 OF 2)

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011553</u>	Decal, Trailer Hitch	1
2	<u>1013677</u>	Decal, Battery Danger	6
3	<u>102459301</u>	Decal, Bed Crush Area Warning	1
4	<u>102518301</u>	Decal, Caution, Electrical Component Cover	1
5	<u>102845101</u>	Decal, Tow Switch	1
6	<u>102967601</u>	Decal, Warning, 4 Gauge Wire	1
7	<u>103210301</u>	Decal, Forward/Reverse, Electric	1

3

G

E

⚠️ WARNING

- ROLLOVER OR FALLING OFF MAY CAUSE DEATH.**
- Before using vehicle, read operating instructions.
 - Remain seated and hold on to seat handle while moving.
 - Do not start vehicle until all occupants are seated.
 - Two (2) persons per seat maximum.
 - Operate from driver side only and not on public roads.
 - Keep entire body inside vehicle while moving.
 - Drive slowly in turns and straight up and down slopes.
 - Do not leave children unattended on vehicle.
 - Never operate under the influence of alcohol or drugs.
 - Use brakes to reduce speed when coasting downhill.
 - Never stand in front of or behind vehicle.

CCI 103205401

OPERATING INSTRUCTIONS

Before using vehicle, read owner's manual and vehicle safety warnings. Study and understand controls.

TO OPERATE

- Ensure wheels are turned in desired direction and path is clear.
- Turn key to ON position.
- Select FORWARD or REVERSE only when stopped.
- Release park brake fully.
- Vehicle will start moving when accelerator pedal is pressed.
- Gently press accelerator pedal to increase speed.
- During operation, keeping alarm indicates reduction in motor braking.
- To stop, release accelerator pedal and press brake pedal.

WARNING

Unintended vehicle movement may cause severe injury or death. Before leaving vehicle:

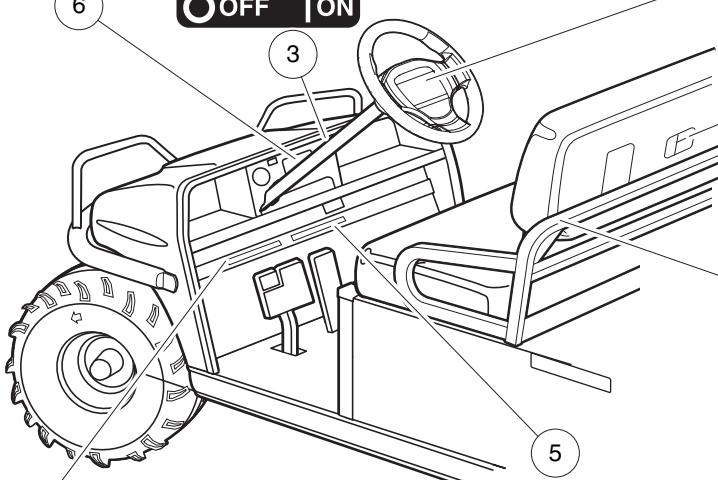
- Engage park brake to lock wheels.
- Place vehicle in NEUTRAL.
- Turn key to OFF and remove key.

103780001

6

OFF | ON

3



7

⚠️ WARNING

Riding in cargo bed can cause severe injury or death. Do not ride in cargo bed.

CCI 101553901

⚠️ WARNING

CRUSH AREA



CCI 101609401

4



⚠️ WARNING

- YOUNG DRIVERS OR PASSENGERS INCREASE CHANCE OF SERIOUS INJURY OR DEATH**
- All occupants must be able to hold on and place both feet flat on the floorboard with their backs against the seat backs. Children requiring a child safety seat must not ride in vehicle.
 - A valid driver's license is required to operate this vehicle.

102075801

VEHICLE LOADING

Read owner's manual and warnings on dash.

- Vehicle rated capacity: 900 lb (408 kg) on level surface only.
 - Includes occupants and cargo load.
- Maximum cargo load: 500 lb (227 kg).
 - Includes cargo, bed load, gross trailer weight, and optional equipment.

102006701

⚠️ WARNING

- ROLLOVER CAN CAUSE SERIOUS INJURY OR DEATH.**
- Place cargo forward in the cargo bed and distribute evenly side to side. Secure load.
 - On uneven or steep terrain, reduce speed and load.
 - Avoid stopping on or backing down steep hills.
 - Avoid top-heavy loads.

102006701

001233-001

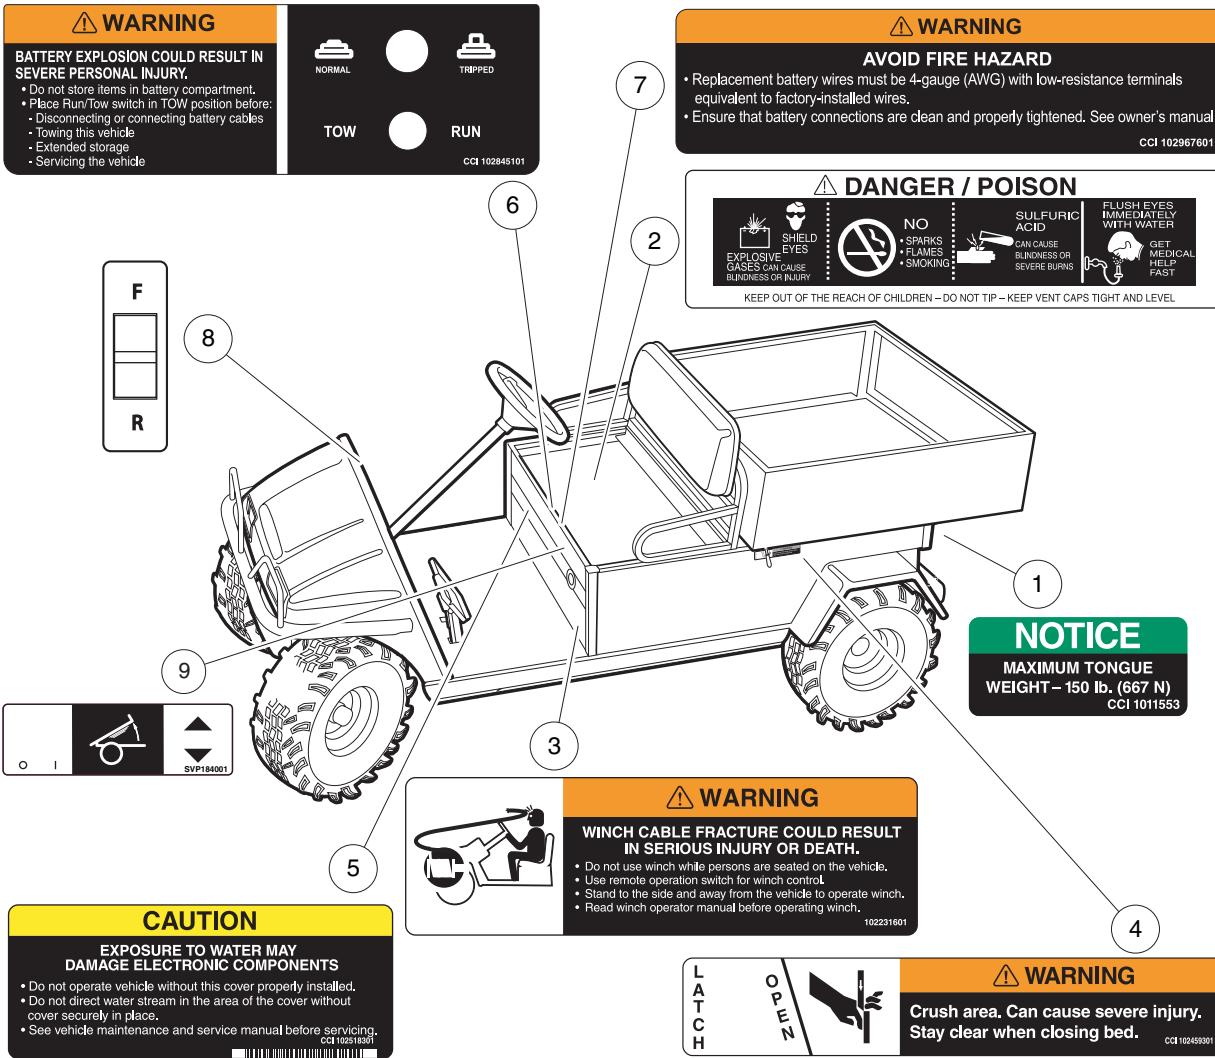
**DECALS – TURF/CARRYALL 252 AND XRT 900 IQ PLUS ELECTRIC
(PAGE 1 OF 2)**

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		3
1	<u>101553901</u>	Decal, Bed Load Warning	1	G
2	<u>101609401</u>	Decal, Crush Area Warning	2	
3	<u>101825101</u>	Decal, Off/On	1	
4	<u>102006701</u>	Decal, Vehicle Loading	1	
5	<u>102075801</u>	Decal, Young Driver Warning	1	
6	<u>103205401</u>	Decal, Warning, Rollover, Utl	1	
7	<u>103783001</u>	Decal, Op Instr, Ele	1	E

3

G

E



001234-001

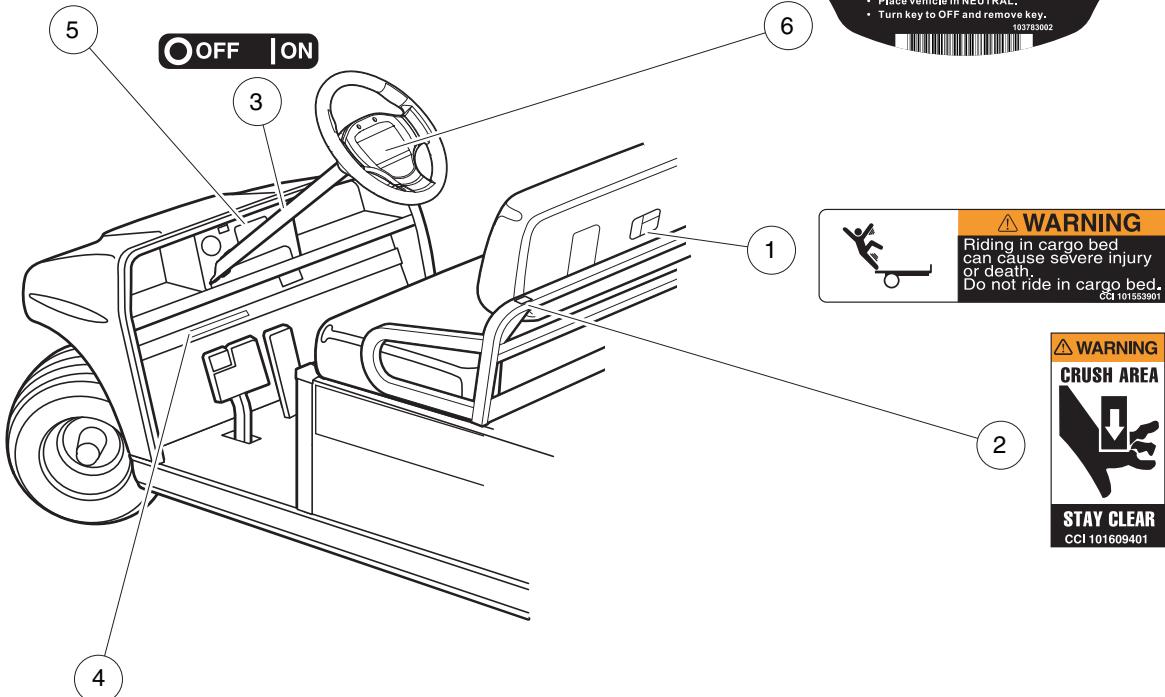
**DECALS – TURF/CARRYALL 252 AND XRT 900 IQ PLUS ELECTRIC
(PAGE 2 OF 2)**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011553</u>	Decal, Trailer Hitch	1
2	<u>1013677</u>	Decal, Battery Danger	6
3	<u>102231601</u>	Decal, Winch Cable Fracture Warning	1
4	<u>102459301</u>	Decal, Bed Crush Area Warning	1
5	<u>102518301</u>	Decal, Caution, Electrical Component Cover	1
6	<u>102845101</u>	Decal, Tow Switch	1
7	<u>102967601</u>	Decal, Warning, 4 Gauge Wire	1
8	<u>103210301</u>	Decal, Forward/Reverse, Electric	1
9	SVP184001	Decal, Bed Lift Switch	1

3

G

E



- Vehicle rated capacity: 1200 lb (544 kg) on level surface only.
 - Includes occupants and cargo load.
 - Maximum cargo load: 800 lb (363 kg).
 - Includes cargo, bed load, gross trailer weight, and optional equipment.

- WARNING**
- ROLLOVER CAN CAUSE SERIOUS INJURY OR DEATH.**
- Place cargo forward in the cargo bed and distribute evenly side to side. Secure load.
 - On uneven or steep terrain, reduce speed and load.
 - Avoid stopping on or backing down steep hills.
 - Avoid top-heavy loads.
- 101960201

001235-001

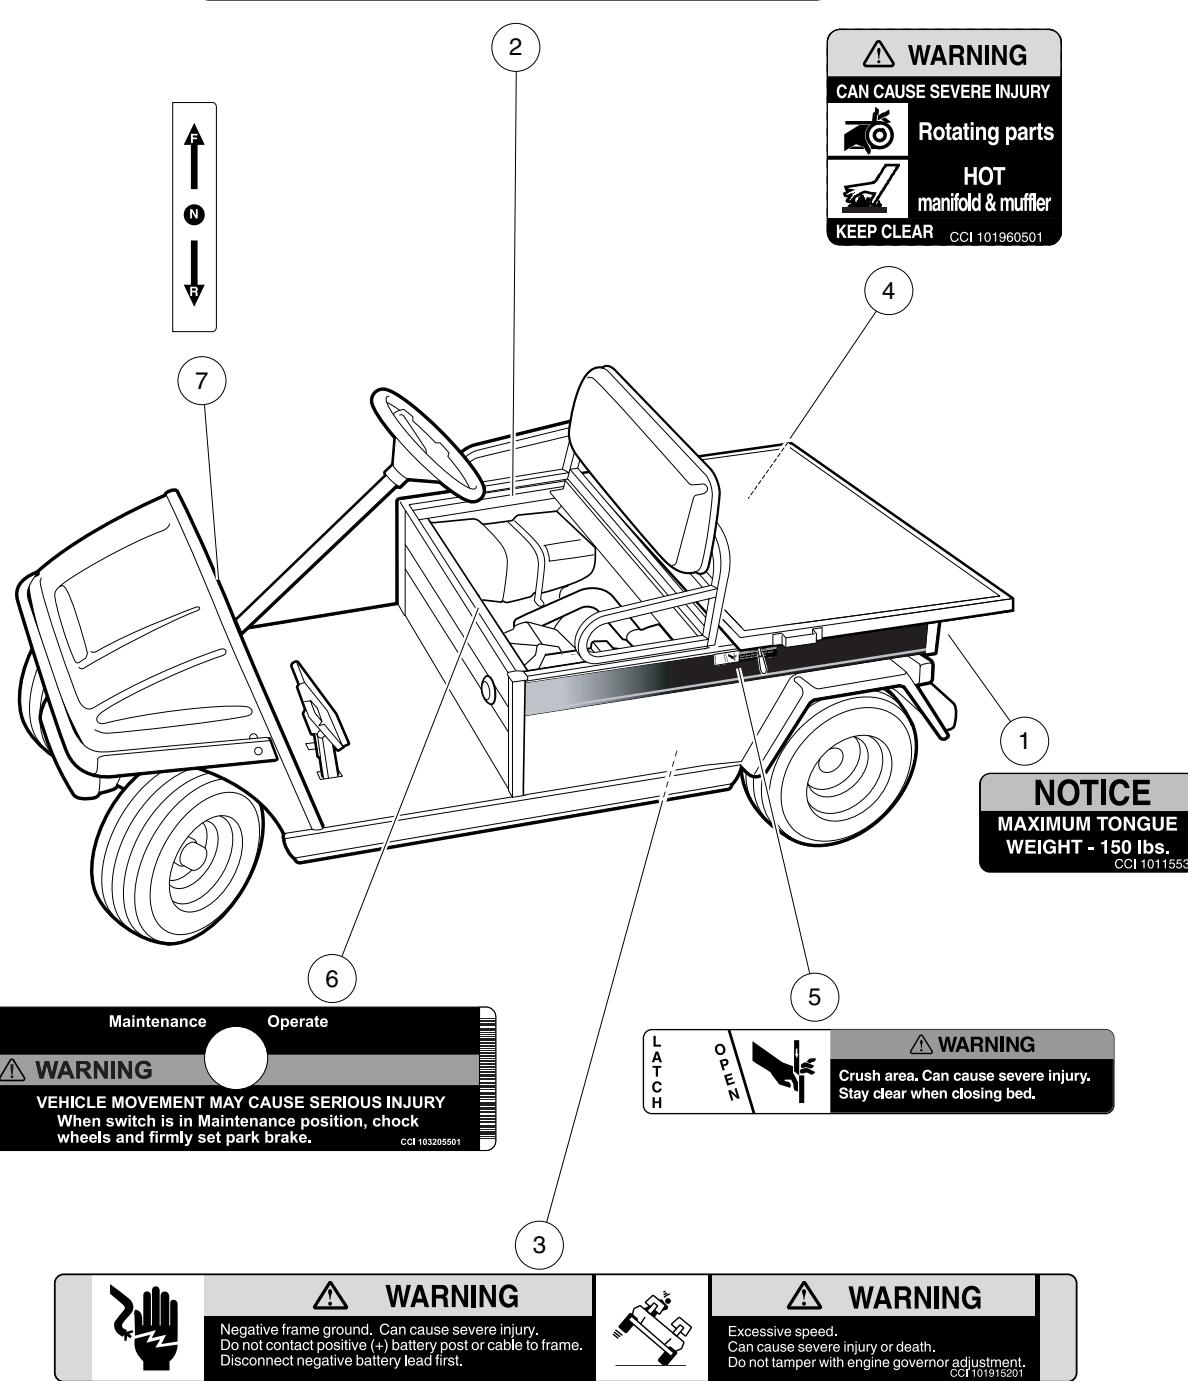
DECALS – TURF/CA 2 GASOLINE VEHICLES (PAGE 1 OF 2)

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		3
1	<u>101553901</u>	Decal, Bed Load Warning	1	G
2	<u>101609401</u>	Decal, Crush Area Warning	2	
3	<u>101825101</u>	Decal, Off/On	1	
4	<u>101960201</u>	Decal, Vehicle Loading	1	
5	<u>103205401</u>	Decal, Warning, Rollover, Utl	1	
6	<u>103783002</u>	Decal, Op Instr, Gas Ps	1	E

3

G

E



000617-001

DECALS – TURF/CA 2 GASOLINE VEHICLES (PAGE 2 OF 2)

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		3
1	<u>1011553</u>	Decal, Trailer Hitch	1	G
2	<u>101547601</u>	Decal, Gasoline Explosion/Fire Warning	1	
3	<u>101915201</u>	Decal, Frame Ground and Governor Warning	1	
4	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	1	
5	<u>102459301</u>	Decal, Bed Crush Area Warning	1	
6	<u>103205501</u>	Decal, Run/Service Switch	1	
7	<u>103210201</u>	Decal, Forward/Reverse, Gas	1	E

3

G

E

⚠ WARNING

- ROLLOVER OR FALLING OFF MAY CAUSE DEATH.**
- Before using vehicle, read operating instructions.
 - Remain seated and hold on to seat handle while moving.
 - Do not start vehicle until all occupants are seated.
 - Two (2) persons per seat maximum.
 - Operate from driver side only and not on public roads.
 - Keep entire body inside vehicle while moving.
 - Drive slowly in turns and straight up and down slopes.
 - Do not leave children unattended on vehicle.
 - Never operate under the influence of alcohol or drugs.
 - Use brakes to reduce speed when coasting downhill.
 - Never stand in front of or behind vehicle.

CCI 103205401

OPERATING INSTRUCTIONS

Before using vehicle, read owner's manual and vehicle safety warnings.
Study and understand controls.

TO OPERATE

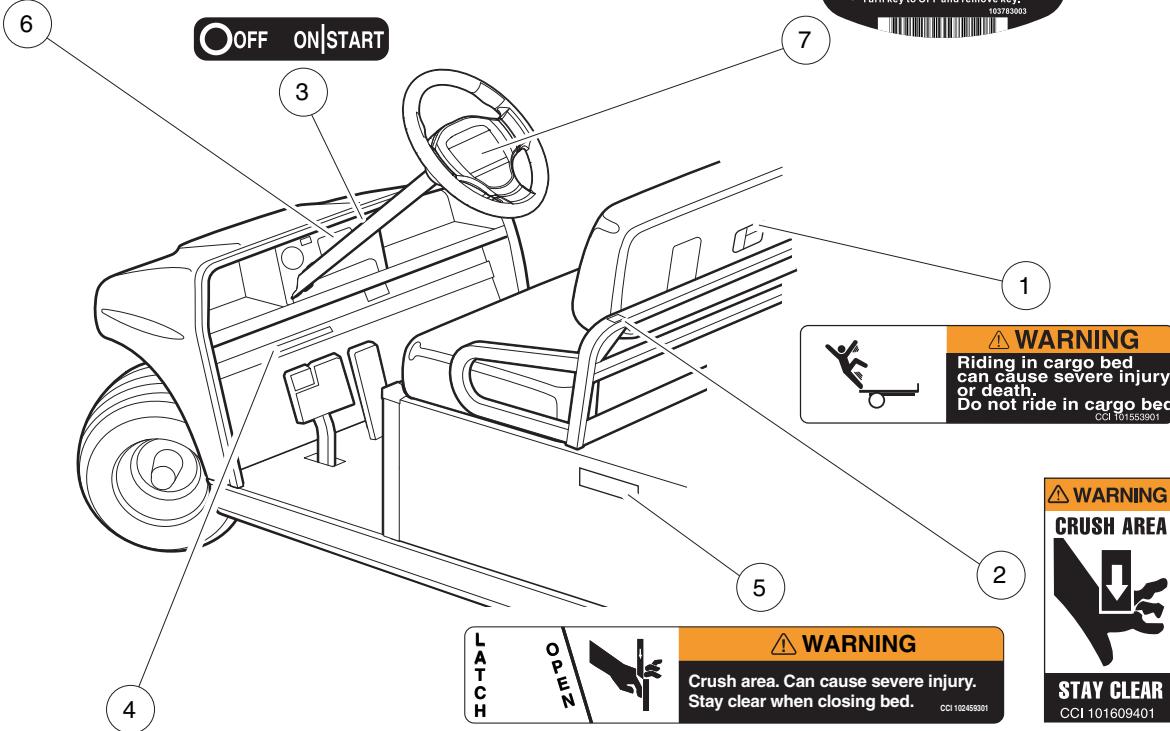
- Ensure wheels are turned in desired direction and path is clear.
- Place vehicle in NEUTRAL and press brake pedal.
- Turn key to START position and hold until engine starts.
- Select FORWARD or REVERSE only when stopped and engine is running.
- Release park brake fully.
- Vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and press brake pedal.

WARNING

Unintended vehicle movement may cause severe injury or death. Before leaving vehicle:

- Engage park brake to lock wheels.
- Place vehicle in NEUTRAL.
- Turn key to OFF and remove key.

103753003


**VEHICLE
LOADING**

Read owner's manual and warnings on dash.

- Vehicle rated capacity: 1200 lb (544 kg) on level surface only.
- Includes occupants and cargo load.

- Maximum cargo load: 800 lb (363 kg).
- Includes cargo, bed load, gross trailer weight, and optional equipment.

LATCH

OPEN



⚠ WARNING
Crush area. Can cause severe injury.
Stay clear when closing bed.

CCI 102459301

⚠ WARNING
• ROLLOVER CAN CAUSE SERIOUS INJURY OR DEATH.
- Place cargo forward in the cargo bed and distribute evenly side to side. Secure load.

- On uneven or steep terrain, reduce speed and load.
- Avoid stopping on or backing down steep hills.
- Avoid top-heavy loads.

101960201



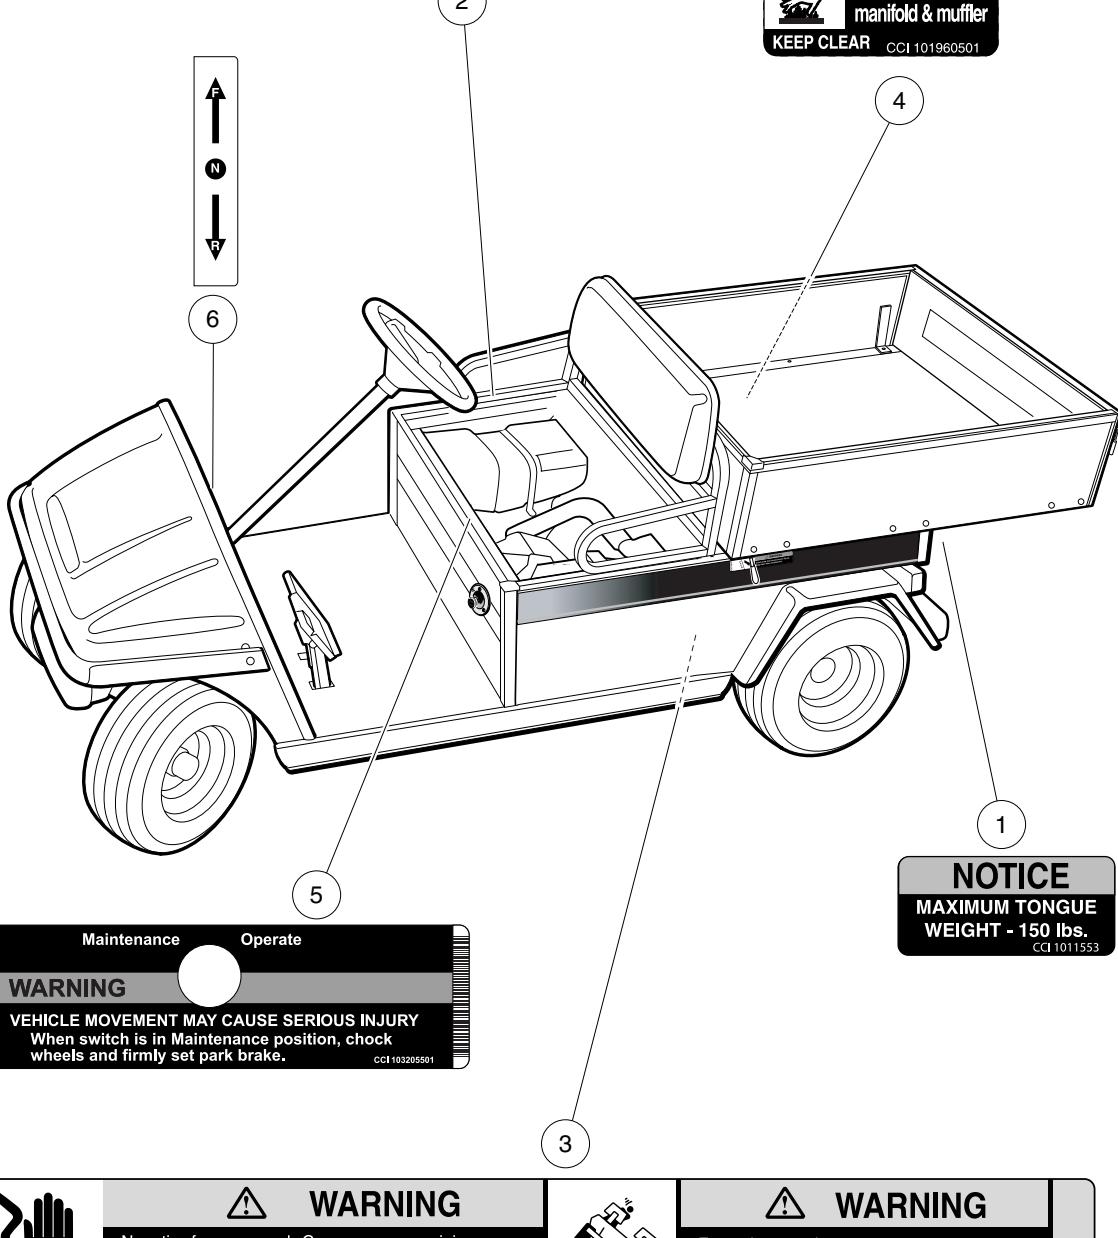
DECALS – CARRYALL 2 PLUS GASOLINE VEHICLES (PAGE 1 OF 2)

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		3
1	<u>101553901</u>	Decal, Bed Load Warning	1	G
2	<u>101609401</u>	Decal, Crush Area Warning	2	
3	<u>101825102</u>	Decal, Off/On/Start	1	
4	<u>101960201</u>	Decal, Vehicle Loading	1	
5	<u>102459301</u>	Decal, Bed Crush Area Warning	1	
6	<u>103205401</u>	Decal, Warning, Rollover, Utl	1	
7	<u>103783003</u>	Decal, Op Instr, Gas Ks	1	E

3

G

E



000619-001

DECALS – CARRYALL 2 PLUS GASOLINE VEHICLES (PAGE 2 OF 2)

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011553</u>	Decal, Trailer Hitch	1
2	<u>101547601</u>	Decal, Gasoline Explosion/Fire Warning	1
3	<u>101915201</u>	Decal, Frame Ground and Governor Warning	1
4	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	1
5	<u>103205501</u>	Decal, Run/Service Switch	1
6	<u>103210201</u>	Decal, Forward/Reverse, Gas	1

3

G

E

3

G

E

OPERATING INSTRUCTIONS

Before using vehicle, read owner's manual and vehicle safety warnings.
Study and understand controls.

TO OPERATE

- Ensure wheels are turned in desired direction and path is clear.
- Turn key to ON position.
- Select FORWARD or REVERSE only when stopped.
- Release park brake fully.
- Vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and press brake pedal.

WARNING

Unintended vehicle movement may cause severe injury or death. Before leaving vehicle:

- Engage park brake to lock wheels.
- Place vehicle in NEUTRAL.
- Turn key to OFF and remove key.

103783002

WARNING

- ROLLOVER OR FALLING OFF MAY CAUSE DEATH.**
- Before using vehicle, read operating instructions.
 - Remain seated and hold on to seat handle while moving.
 - Do not start vehicle until all occupants are seated.
 - Two (2) persons per seat maximum.
 - Operate from driver side only and not on public roads.
 - Keep entire body inside vehicle while moving.
 - Drive slowly in turns and straight up and down slopes.
 - Do not leave children unattended on vehicle.
 - Never operate under the influence of alcohol or drugs.
 - Use brakes to reduce speed when coasting downhill.
 - Never stand in front of or behind vehicle.

CCI 103205461

OFF ON

3

8

1

WARNING

Riding in cargo bed can cause severe injury or death.
Do not ride in cargo bed.

CCI 101553901

WARNING

CRUSH AREA



STAY CLEAR

CCI 101609401



2

6

2

6

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5

5</p

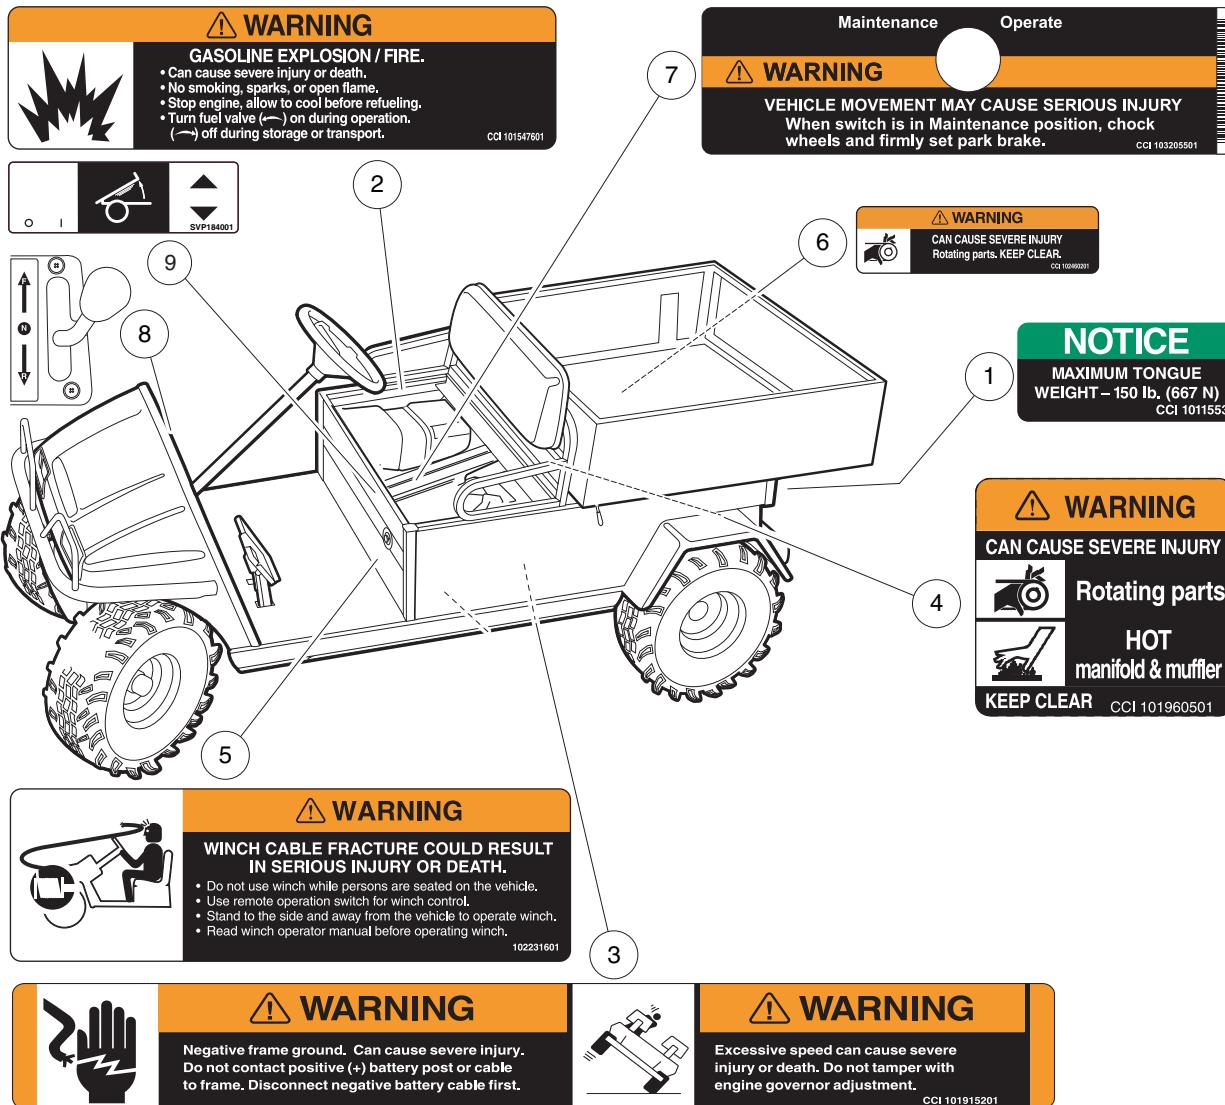
DECALS – TURF/CARRYALL 252 GASOLINE VEHICLES (PAGE 1 OF 2)

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	3
1	<u>101553901</u>	Decal, Bed Load Warning	1
2	<u>101609401</u>	Decal, Crush Area Warning	1
3	<u>101825101</u>	Decal, Off/On	1
4	<u>102006701</u>	Decal, Vehicle Loading	1
5	<u>102075801</u>	Decal, Young Driver Warning	1
6	<u>102459301</u>	Decal, Bed Crush Area Warning	1
7	<u>103205401</u>	Decal, Warning, Rollover, Utl	1
8	<u>103783002</u>	Decal, Op Instr, Gas Ps	1

3

G

E



001229-001

DECALS – TURF/CARRYALL 252 GASOLINE VEHICLES (PAGE 2 OF 2)

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		3
1	<u>1011553</u>	Decal, Trailer Hitch	1	G
2	<u>101547601</u>	Decal, Gasoline Explosion/Fire Warning	1	
3	<u>101915201</u>	Decal, Frame Ground and Governor Warning	1	
4	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	1	
5	<u>102231601</u>	Decal, Winch Cable Fracture Warning	1	
6	<u>102460201</u>	Decal, Rotating Parts Warning	1	
7	<u>103205501</u>	Decal, Run/Service Switch	1	
8	<u>103210201</u>	Decal, Forward/Reverse, Gas	1	
9	SVP184001	Decal, Bed Lift Switch	1	E

3

G

E

OPERATING INSTRUCTIONS

Before using vehicle, read owner's manual and vehicle safety warnings. Study and understand controls.

TO OPERATE

- Ensure wheels are turned in desired direction and path is clear.
- Place vehicle in NEUTRAL and press brake pedal.
- Turn key to START position and hold until engine starts.
- Select FORWARD or REVERSE only when stopped and engine at idle.
- Release park brake fully.
- Vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and press brake pedal.

WARNING

Unintended vehicle movement may cause severe injury or death. Before leaving vehicle:

- Engage park brake to lock wheels.
- Place vehicle in NEUTRAL.
- Turn key to OFF and remove key.

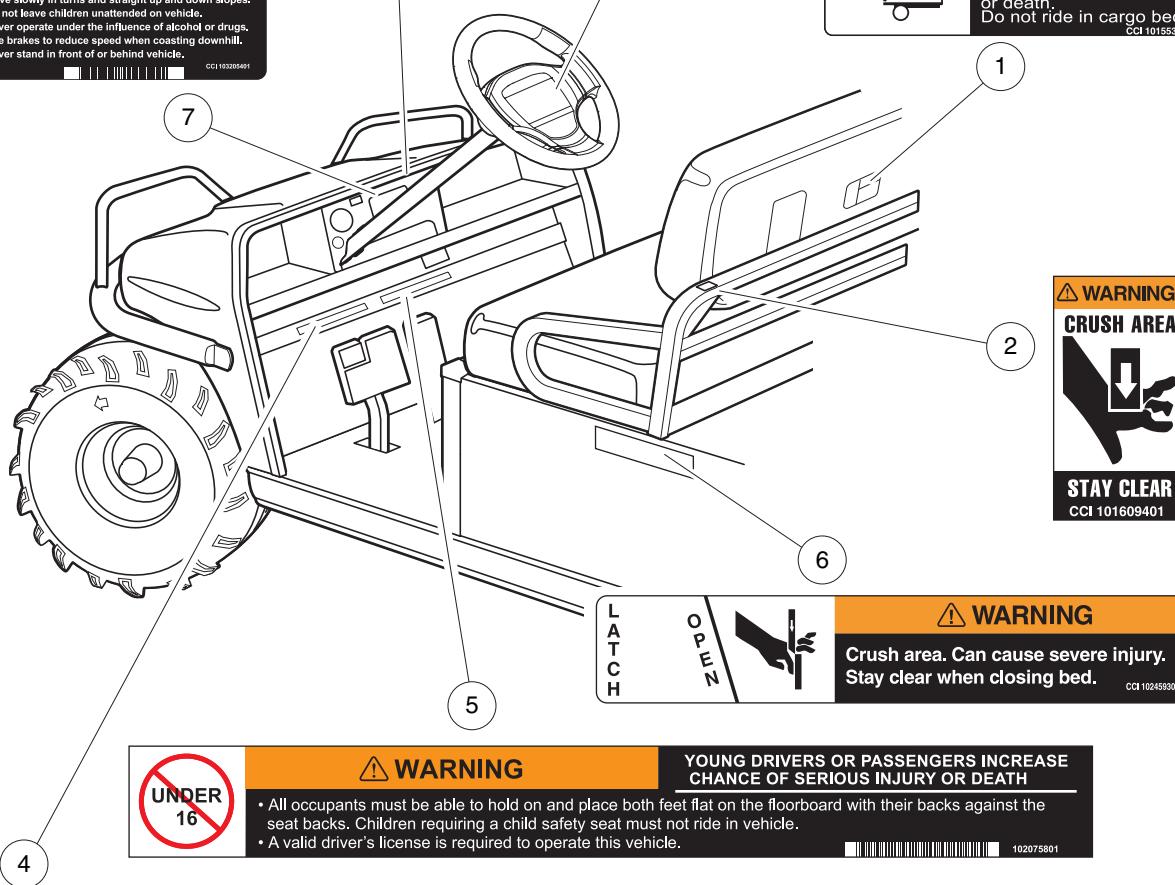
103743003



OFF ON|START

3

8



001230-001

DECALS – XRT 900 GASOLINE VEHICLES (PAGE 1 OF 2)

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101553901</u>	Decal, Bed Load Warning	1
2	<u>101609401</u>	Decal, Crush Area Warning	1
3	<u>101825102</u>	Decal, Off/On/Start	1
4	<u>102006701</u>	Decal, Vehicle Loading	1
5	<u>102075801</u>	Decal, Young Driver Warning	1
6	<u>102459301</u>	Decal, Bed Crush Area Warning	1
7	<u>103205401</u>	Decal, Warning, Rollover, Utl	1
8	<u>103783003</u>	Decal, Op Instr, Gas Ks	1

3

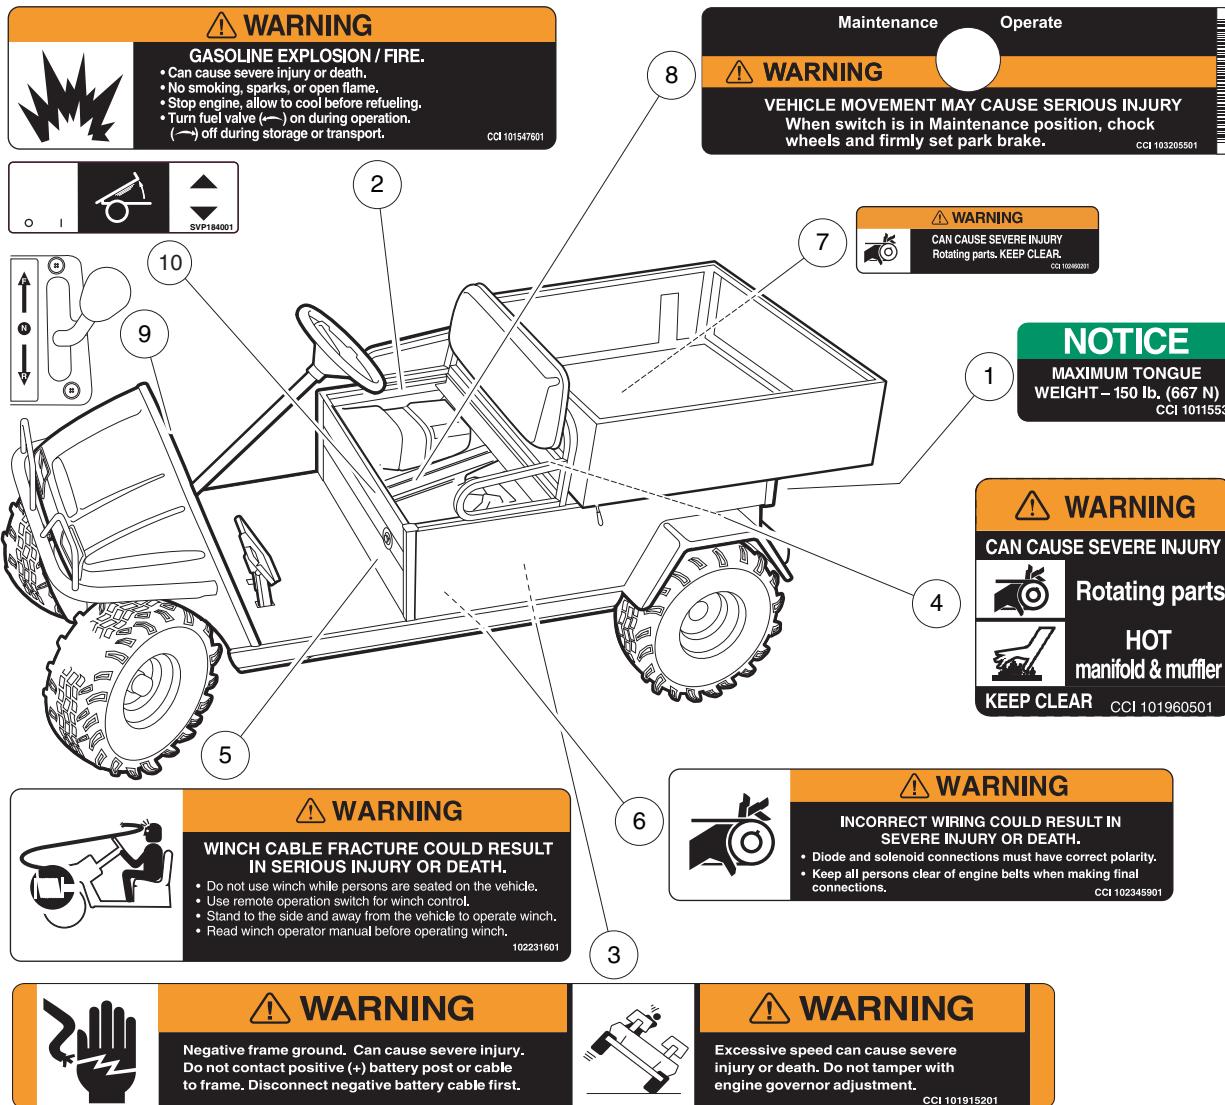
G

E

3

G

E



001231-001

DECALS – XRT 900 GASOLINE VEHICLES (PAGE 2 OF 2)

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011553</u>	Decal, Trailer Hitch	1
2	<u>101547601</u>	Decal, Gasoline Explosion/Fire Warning	1
3	<u>101915201</u>	Decal, Frame Ground and Governor Warning	1
4	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	1
5	<u>102231601</u>	Decal, Winch Cable Fracture Warning	1
6	<u>102345901</u>	Decal, Diode Safety	1
7	<u>102460201</u>	Decal, Rotating Parts Warning	1
8	<u>103205501</u>	Decal, Run/Service Switch	1
9	<u>103210201</u>	Decal, Forward/Reverse, Gas	1
10	SVP184001	Decal, Bed Lift Switch	1

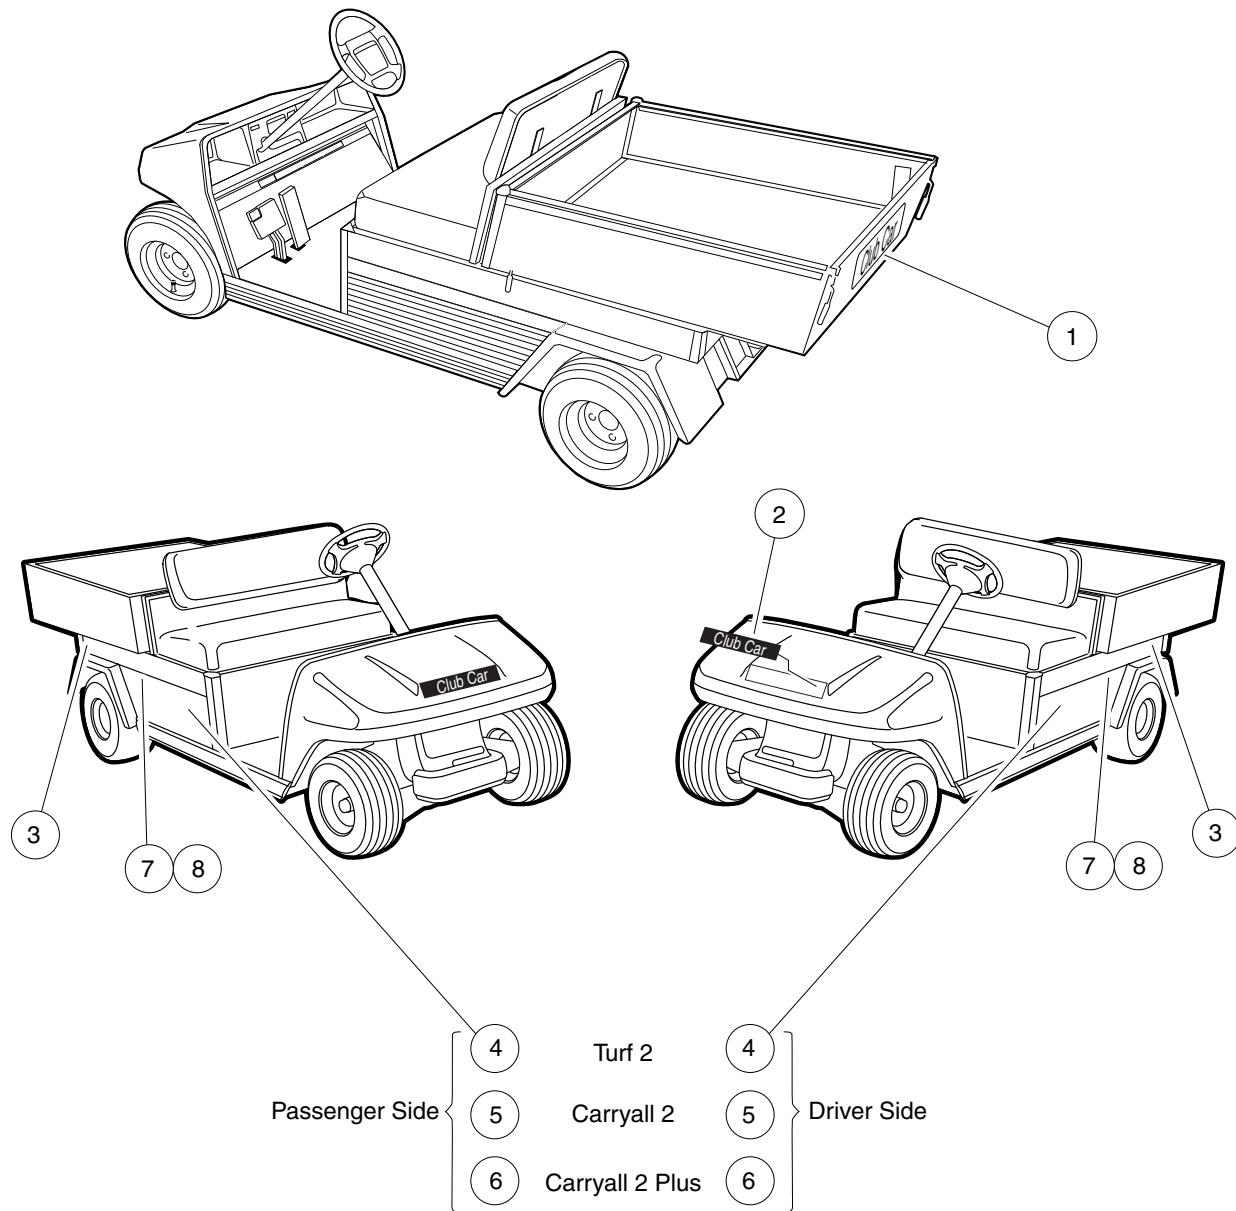
3

G

E

3**G****E**

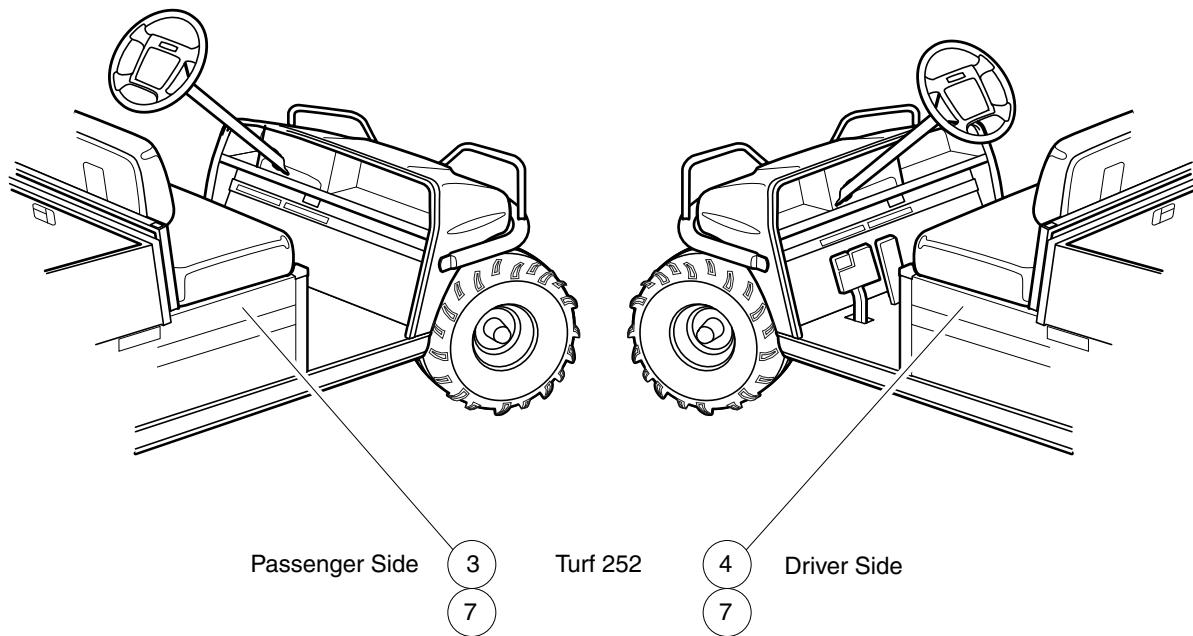
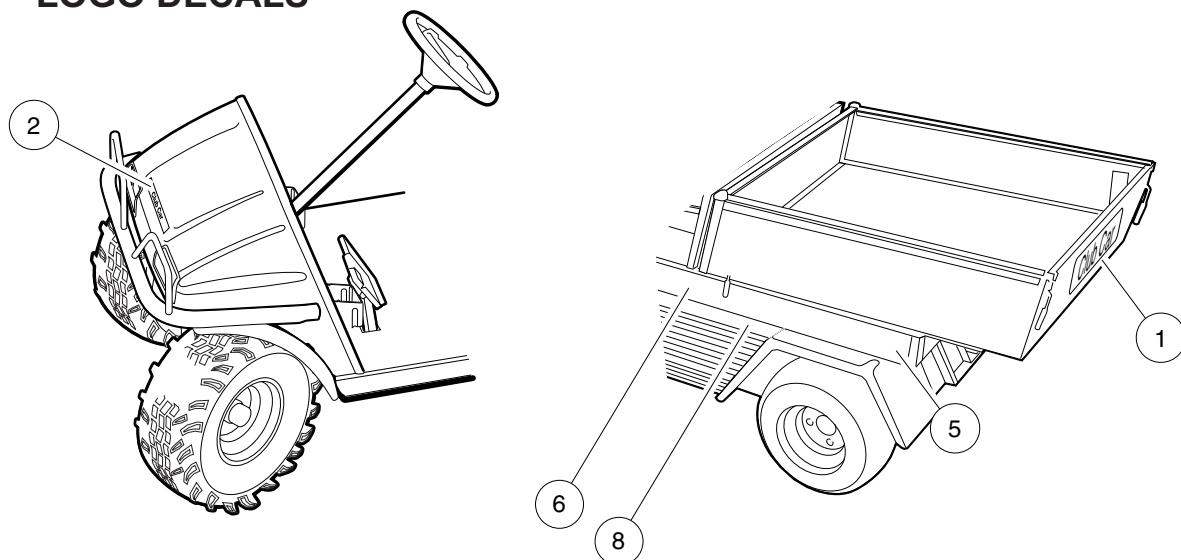
LOGO DECALS



000287-006

DECALS, BADGING – TURF/CARRYALL 2 AND 2 PLUS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	3
1	<u>1013317</u>	Decal, Logo, Tailgate	1
2	<u>101670201</u>	Nameplate Kit (silver)	1
3	<u>103234301</u>	Decal, Badge, IR	2
4	<u>103260101</u>	Decal Turf 2 Side Panel	2
5	<u>103260801</u>	Decal Ca 2 Side Panel	2
6	<u>103260901</u>	Decal Ca 2 Plus Side Panel	2
7	<u>103284101</u>	Decal Ca2/ca2p/ca252/ca272 Bar	2
8	<u>103464801</u>	Decal, Iq Plus, Zev	2

3**G****E****LOGO DECALS**

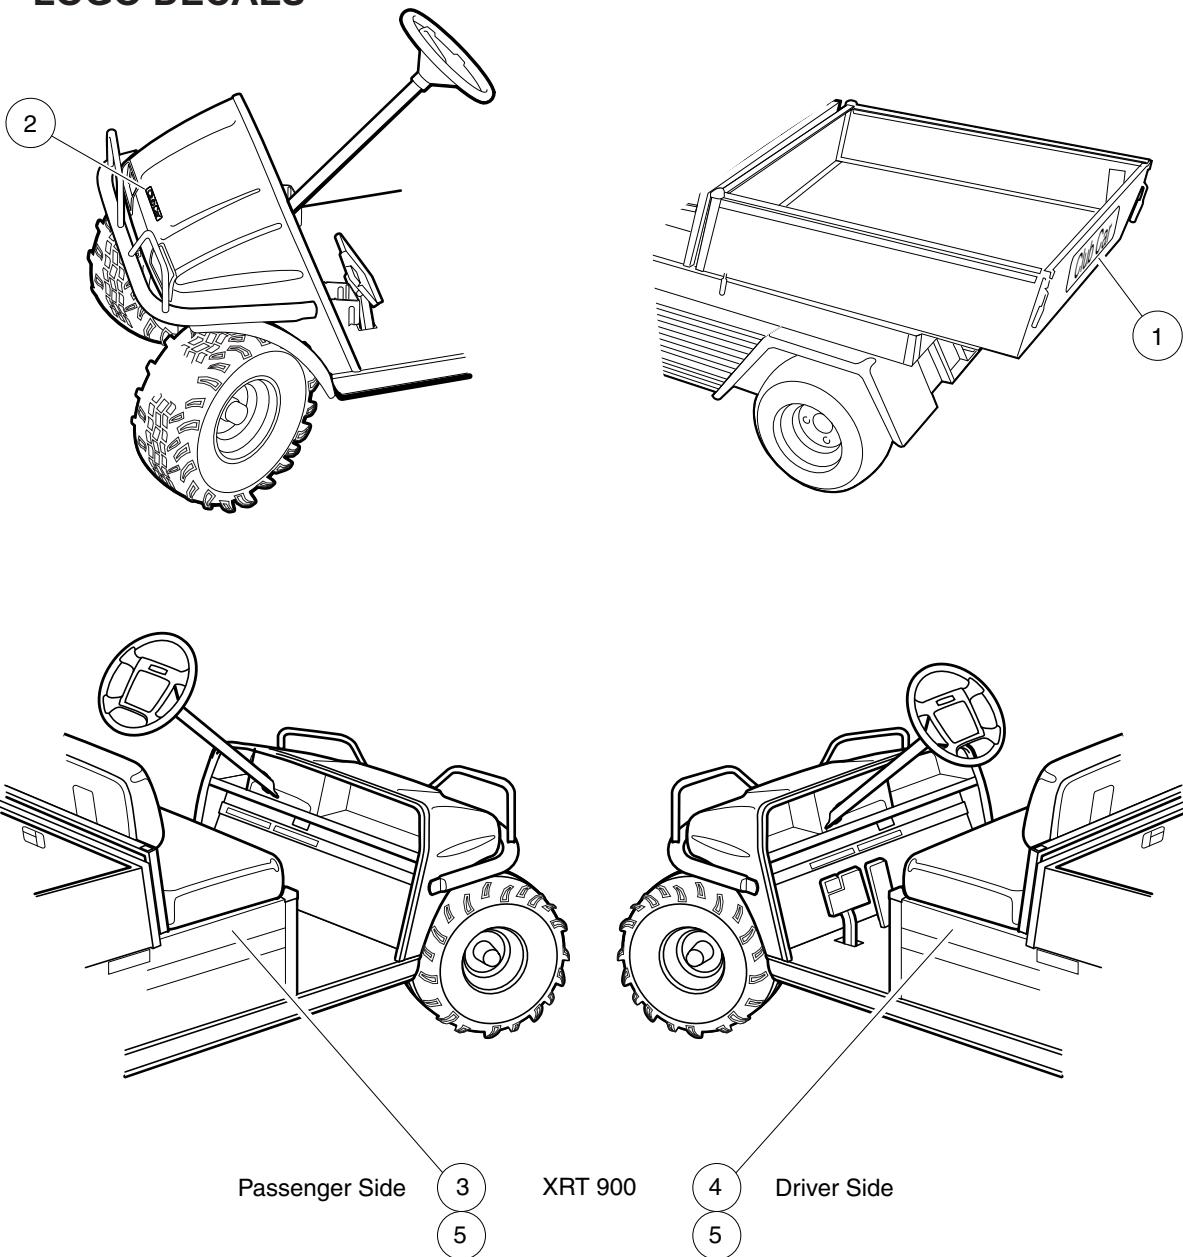
000289-003

DECALS, BADGING – TURF/CARRYALL 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013317</u>	Decal, Logo, Tailgate	1
2	<u>101670201</u>	Nameplate Kit (silver)	1
3	<u>102683201</u>	Decal, Turf 252, Passenger-Side	1
4	<u>102683301</u>	Decal, Turf 252, Driver-Side	1
5	<u>103234301</u>	Decal, Badge, IR	2
6	<u>103261301</u>	Decal Ca 252 Side Panel	2
7	<u>103284101</u>	Decal Ca2/ca2p/ca252/ca272 Bar	2
8	<u>103464801</u>	Decal, Iq Plus, Zev	2

3**G****E**

LOGO DECALS



000624-002

DECALS, BADGING – XRT 900

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013317</u>	Decal, Logo, Tailgate	1
2	<u>102046501</u>	Decal, CC Nameplate, Utility	1
3	<u>102683701</u>	Decal, XRT 900 Passenger-Side	1
4	<u>102683801</u>	Decal, XRT 900 Driver-Side	1
5	<u>103234301</u>	Decal, Badge, IR	2

3

G

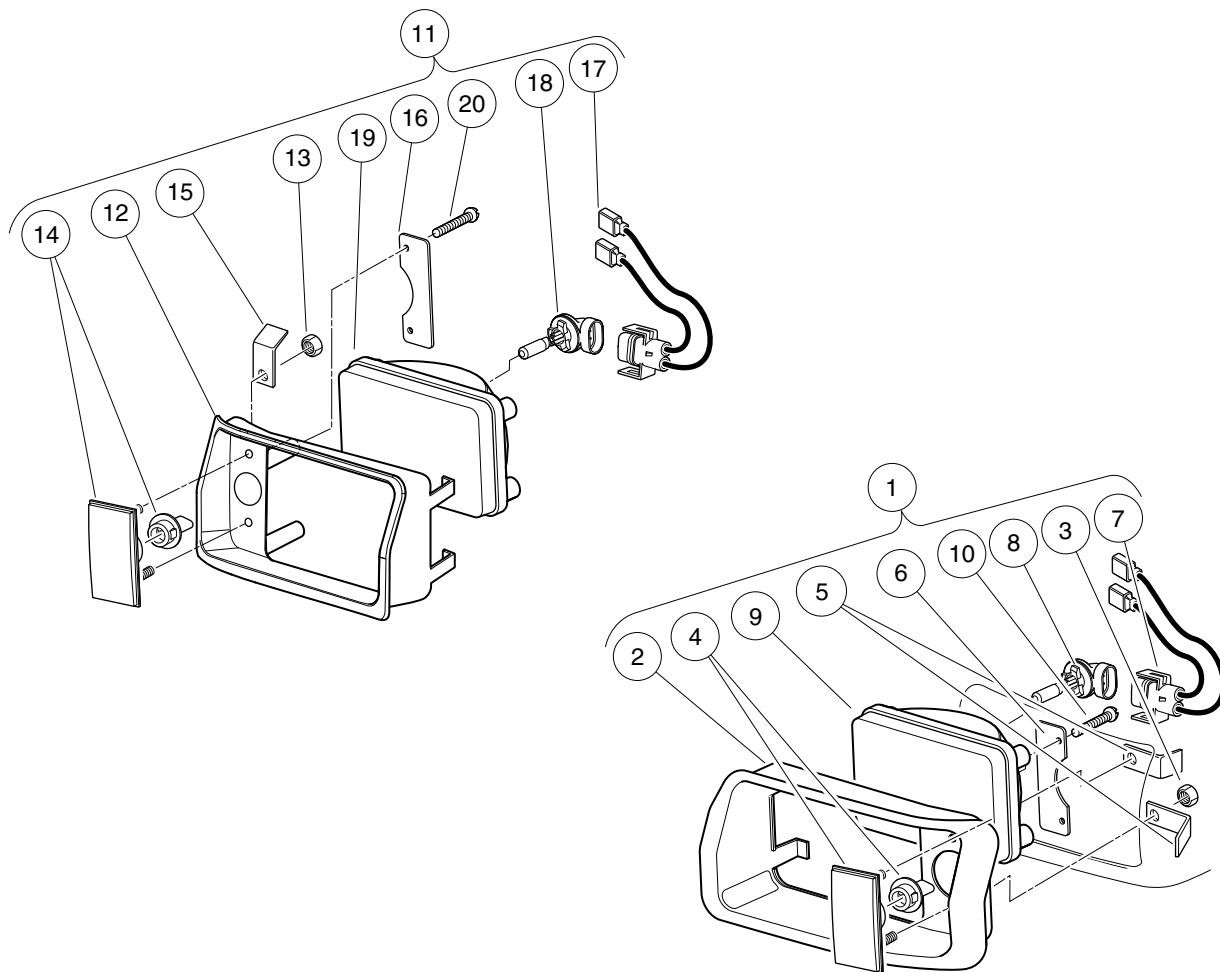
E

LIGHTS, CONTROLS, AND INDICATORS

4

G

E

4**G****E**

001097-001

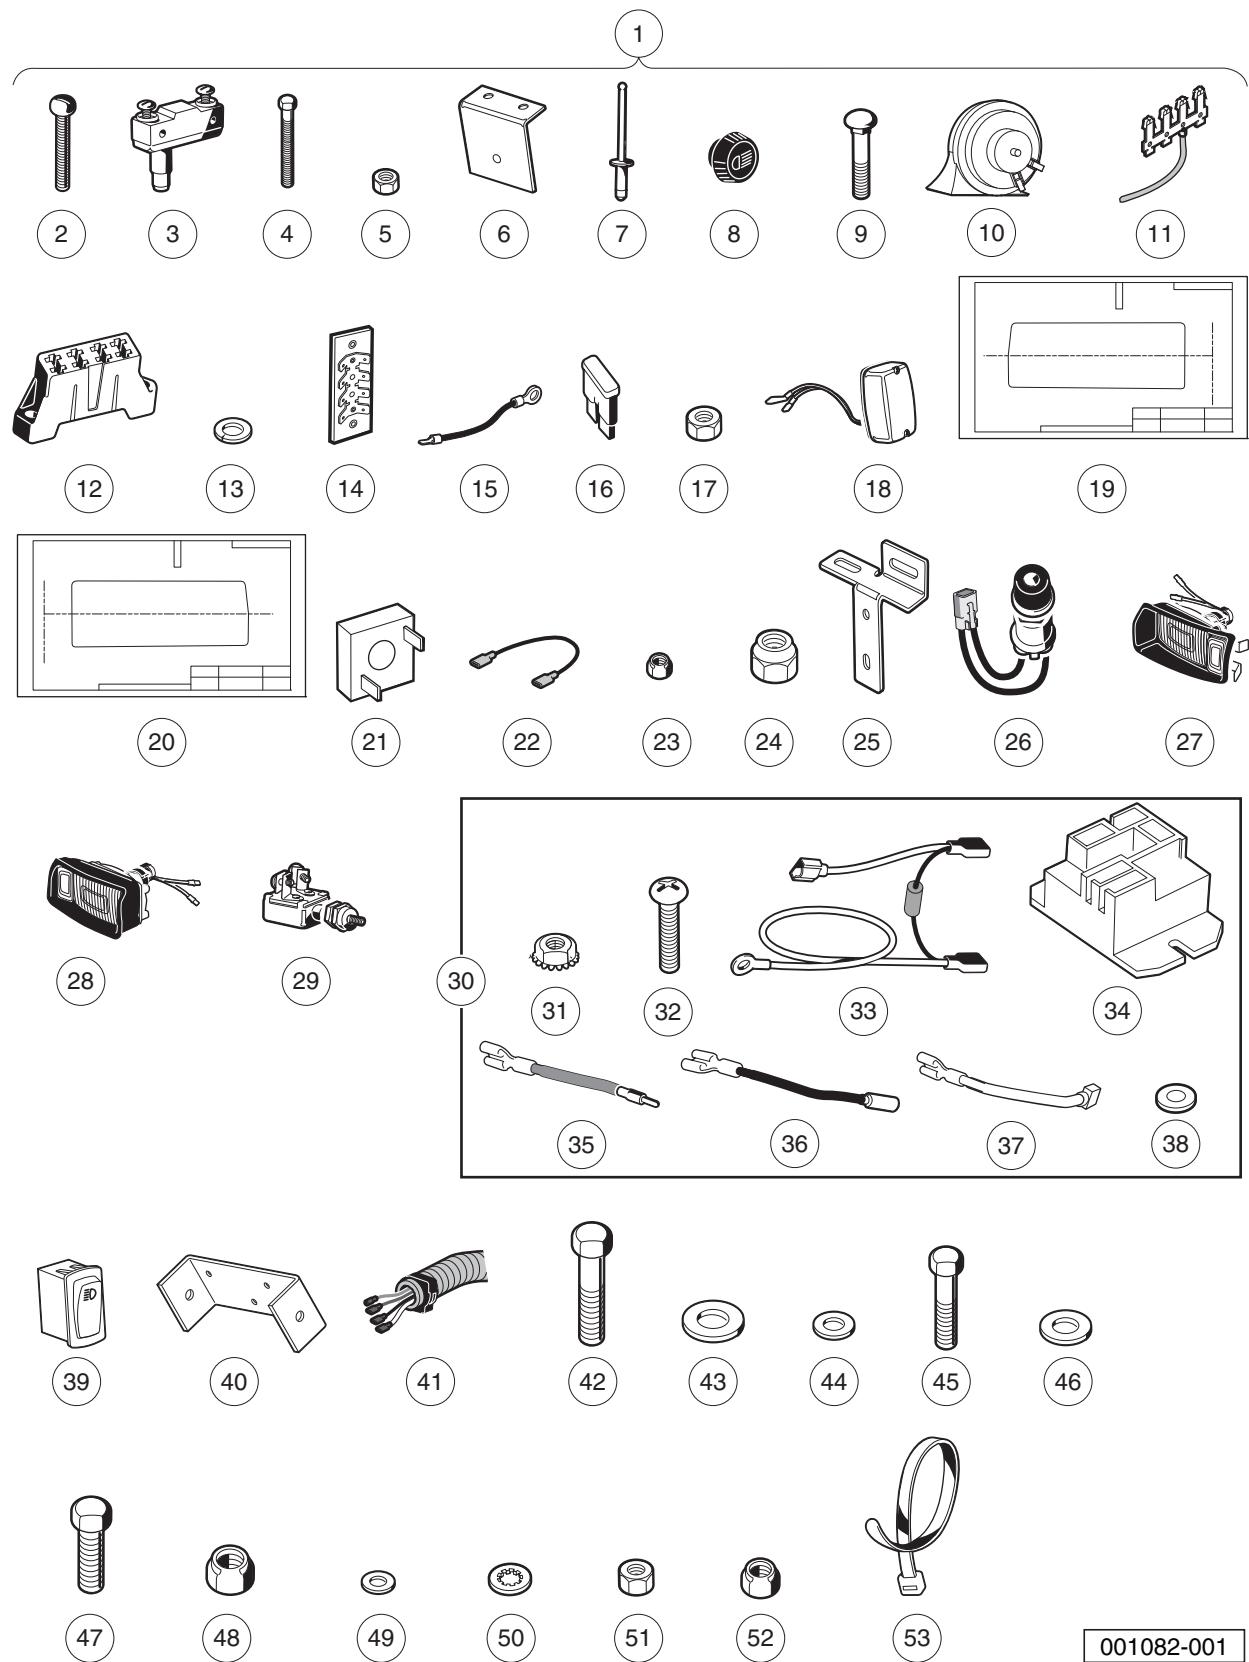
HEADLIGHTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101988001</u>	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	1
2	<u>1016880</u>	Headlight Bezel, Left	1
3	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
4	<u>1017062</u>	Turn Signal Lens Assy	1
5	<u>1017064</u>	Mounting Bracket	2
6	<u>1017065</u>	Retainer, Headlight	1
7	<u>101987901</u>	Connector, Harness Assembly, Headlight	1
8	<u>101988101</u>	Bulb, Headlight	1
9	<u>101988201</u>	Lens, Headlight	1
10	1620	Screw, #10-16 X 0.75 Pan-Head Tap	2
11	<u>101988002</u>	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	1
12	<u>1016879</u>	Headlight Bezel, Right	1
13	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
14	<u>1017062</u>	Turn Signal Lens Assy	1
15	<u>1017064</u>	Mounting Bracket	2
16	<u>1017065</u>	Retainer, Headlight	1
17	<u>101987901</u>	Connector, Harness Assembly, Headlight	1
18	<u>101988101</u>	Bulb, Headlight	1
19	<u>101988201</u>	Lens, Headlight	1
20	1620	Screw, #10-16 X 0.75 Pan-Head Tap	2

4

G

E

4**G****E**

LIGHT KIT, STANDARD – CARRYALL 2 GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101705603</u>	Standard Lighting Package (includes items 2 through 53)	1
2	<u>1010909</u>	Screw, #10-32 X 1.25 Rd Hd Mch	1
3	<u>1011439</u>	Switch, Limit	2
4	<u>1011557</u>	Screw, #6-32 X 1.00 Hex-Head Machine	8
5	<u>1011558</u>	Nut, #6-32 Hex	6
6	<u>1011825</u>	Horn Bracket	1
7	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2
8	<u>1013857</u>	Knob, Light Switch	1
9	<u>1014109</u>	Bolt, Carriage, #10-24 X 1.0	1
10	<u>1014530</u>	Horn, 12-VDC	1
11	<u>1015737</u>	Wire Assy, #10 Red	1
12	<u>1015741</u>	Fuse Block	1
13	<u>1016</u>	Lockwasher, #10 Split	2
14	<u>1016356</u>	Terminal Block with Insulator	1
15	<u>1016367</u>	Wire Assy, #10 Black	1
16	<u>1016423</u>	Fuse, 20-Amp	3
17	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	1
18	<u>1017035</u>	Taillight Assembly	2
19	N/A	Headlight Template R.h.	1
20	N/A	Headlight Template L.h.	1
21	<u>1017721</u>	Limiter, Voltage	1
22	<u>1017722</u>	Wire Assy, #16 Black	1
23	<u>101932201</u>	Locknut, #6-32 Nylon	4
24	<u>101955101</u>	Nut, M6 Hex	1
25	<u>101957101</u>	Bracket, Brake Light Switch	1
26	<u>101969701</u>	Horn Button and Wire Assembly	1
27	<u>101988001</u>	Headlight Assembly, Driver-Side Single Beam	1
28	<u>101988002</u>	Headlight Assy, Passenger-Side Single Beam	1
29	<u>102051901</u>	Switch, Light	1
30	<u>102198701</u>	Brake Relay Kit - 12v (includes items 31 through 38)	1
31	<u>1011229</u>	Locknut, #6-32 Whiz	2
32	<u>1017853</u>	Screw, #6-32 X 0.75 Hex-Head Machine	2
33	<u>101914401</u>	Assembly, Voltage Suppressor	1
34	<u>102199001</u>	Relay, 12-Volt	1
35	<u>102199201</u>	Wire Asm #18 Brown	1
36	<u>102199301</u>	Wire Asm #18 Black	1
37	<u>102199401</u>	Wire Asm #18 Black	1
38	<u>7591</u>	Washer, #6, Flat	2
39	<u>102869401</u>	Switch, Rocker, Light	1
40	<u>103254101</u>	Bracket, Mtg, Power Relay	1
41	<u>103256901</u>	Wire Harness, Lighting, CA2	1
42	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	1
43	<u>1241</u>	Washer, 5/16 Type A Flat	1
44	<u>183</u>	Washer, #10, Type A, Flat	1

4

G

E

4

G

E

45304

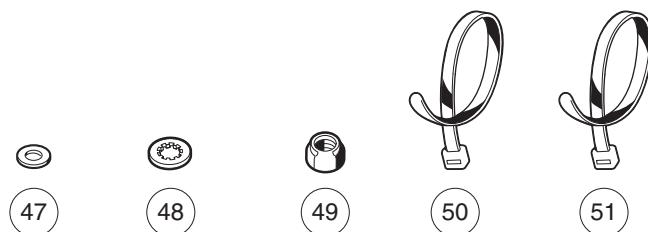
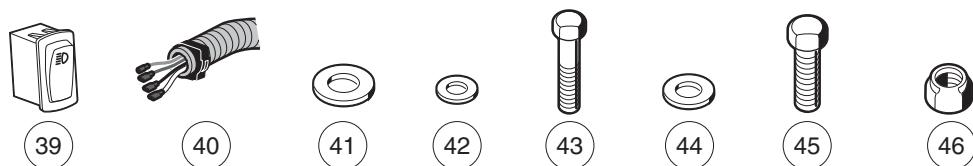
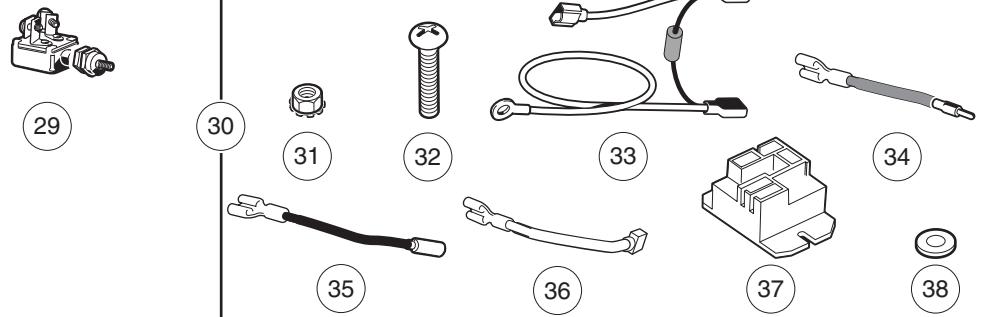
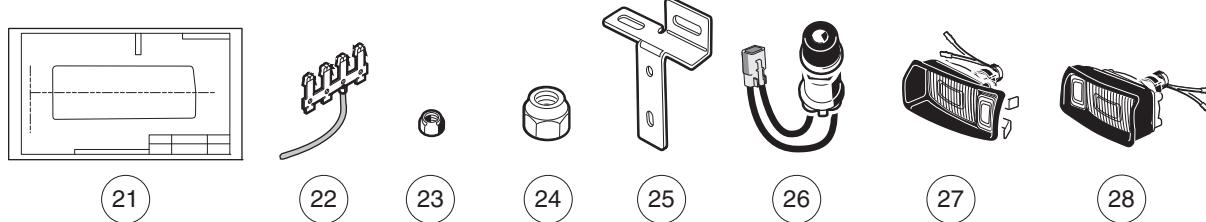
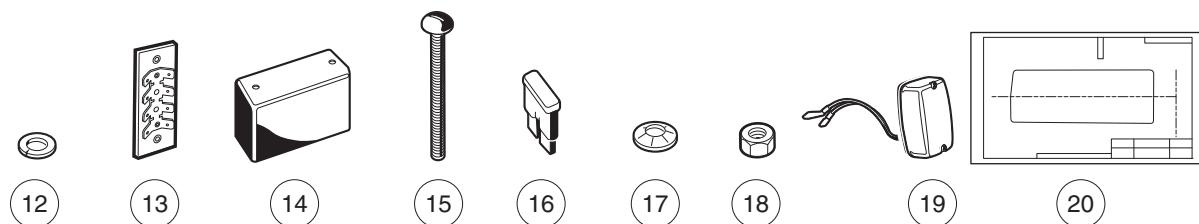
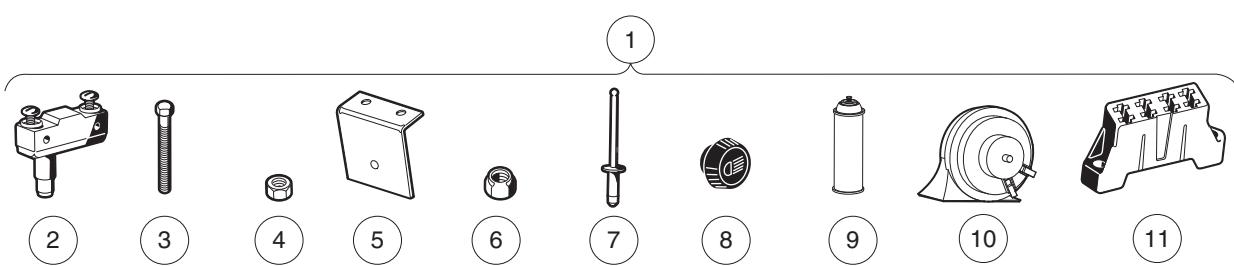
		Screw, 1/4-20 X 1.0 Hex-Head Cap 3	
46	332	Washer, 1/4 Type A Narrow Flat	3
47	7173	Screw, 5/16-18 X 0.75, Hex-Head Cap	1

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
48	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	3
49	<u>7591</u>	Washer, #6, Flat	4
50	<u>7820</u>	Washer, 5/16 Internal-Tooth	1
51	<u>7893</u>	Nut, #10-32 Hex	1
52	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	3
53	<u>8990</u>	Tie Wrap, 8" Nylon	18

4

G

E

4**G****E**

001083-001

LIGHT KIT, STANDARD – CARRYALL 2 IQ PLUS ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102915101	Lgt Pkg Std Iq Plus Elec Field (includes items 2 through 51)	1
2	1011439	Switch, Limit	2
3	1011557	Screw, #6-32 X 1.00 Hex-Head Machine	8
4	1011558	Nut, #6-32 Hex	8
5	1011825	Horn Bracket	1
6	1012438	Locknut, #10-24 Nylon Insert	2
7	1013357	Rivet, 5/32 Aluminum Pop	2
8	1013857	Knob, Light Switch	1
9	1014307	Bulk Batt Term Protector	A/R
10	1014530	Horn, 12-VDC	1
11	1015741	Fuse Block	1
12	1016	Lockwasher, #10 Split	2
13	1016356	Terminal Block with Insulator	1
14	1016363	Fuse Block Cover	1
15	1016366	Screw, #10-24 X 3.0 Pan-Head Machine	2
16	1016423	Fuse, 20-Amp	3
17	1016631	Push Nut	2
18	1017	Nut, #10-24 Stainless-Steel Hex Machine	2
19	1017035	Taillight Assembly	2
20	N/A	Headlight Template R.h.	1
21	N/A	Headlight Template L.h.	1
22	101810601	Wire Assy, #10 Red	1
23	101932201	Locknut, #6-32 Nylon	4
24	101955101	Nut, M6 Hex	1
25	101957101	Bracket, Brake Light Switch	1
26	101969701	Horn Button and Wire Assembly	1
27	101988001	Headlight Assembly, Driver-Side Single Beam	1
28	101988002	Headlight Assy, Passenger-Side Single Beam	1
29	102051901	Switch, Light	1
30	N/A	Elec Regen Iq Brake Relay Inst (includes items 31 through 38)	1
31	1011229	Locknut, #6-32 Whiz	2
32	1017853	Screw, #6-32 X 0.75 Hex-Head Machine	2
33	101914402	Asm, Pd Volt. Supp. W/o Instr.	1
34	102199201	Wire Asm #18 Brown	1
35	102199301	Wire Asm #18 Black	1
36	102199401	Wire Asm #18 Black	1
37	103397901	Relay, Spst No, 48v 30a, Pmt	1
38	7591	Washer, #6, Flat	2
39	102869401	Switch, Rocker, Light	1
40	103256901	Wire Harness, Lighting, CA2	1
41	1241	Washer, 5/16 Type A Flat	1
42	183	Washer, #10, Type A, Flat	4
43	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
44	332	Washer, 1/4 Type A Narrow Flat	2

4

G

E

4

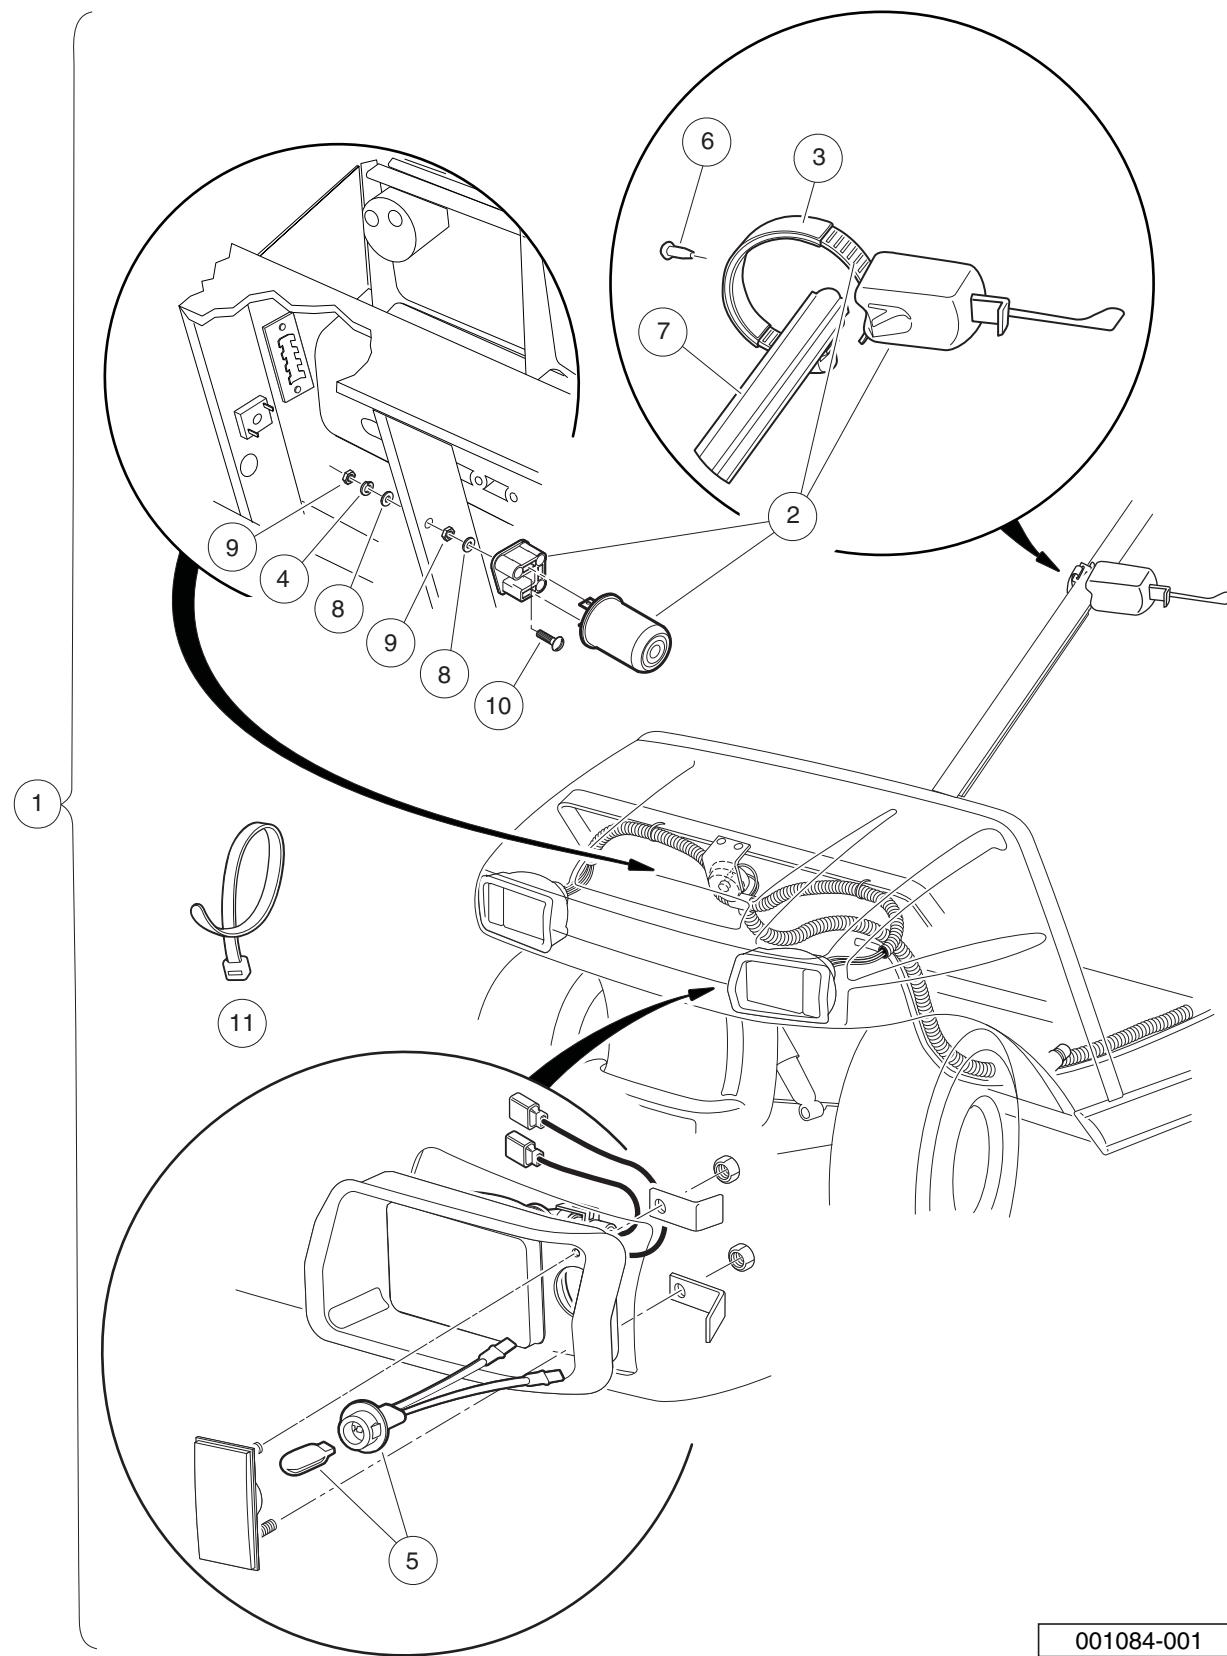
G

E

457173

		Screw, 5/16-18 X 0.75, Hex-Head Cap 1	
46	7473	Locknut, 5/16-18 Nylon Insert	2
47	7591	Washer, #6, Flat	4

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
48	<u>7820</u>	Washer, 5/16 Internal-Tooth	1
49	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2
50	<u>8639</u>	Tie Wrap, 11" Nylon	10
51	<u>8990</u>	Tie Wrap, 8" Nylon	8

4**G****E**

001084-001


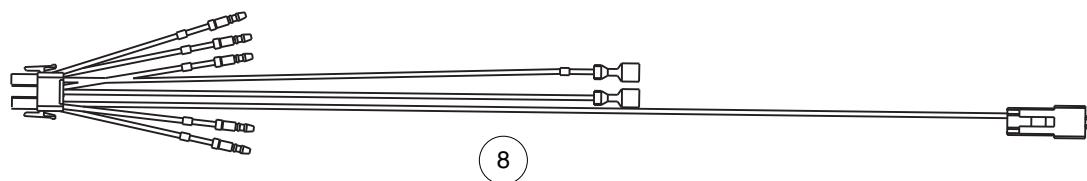
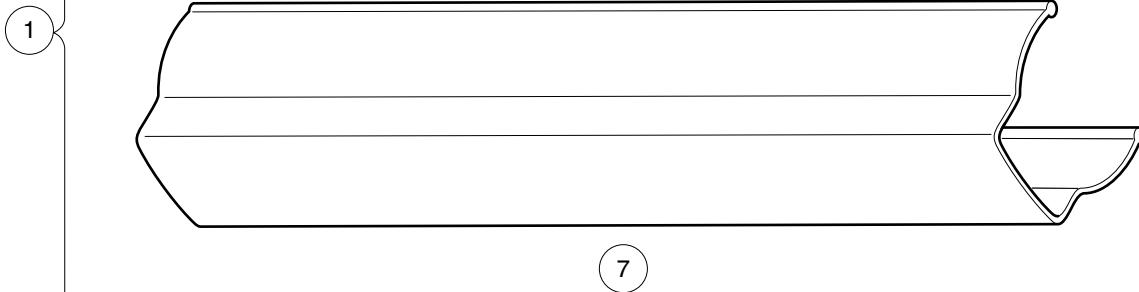
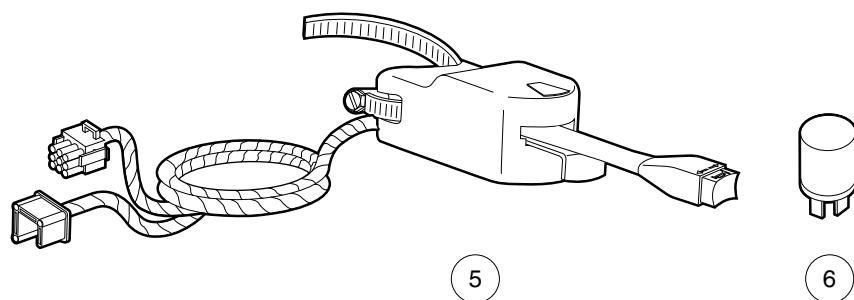
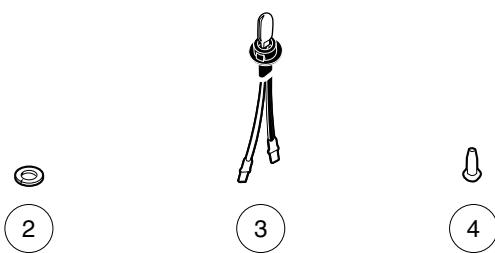
TURN SIGNAL KIT – DS AND UTILITY GASOLINE AND ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101707402	Turn Signal Conversion Kit (includes items 2 through 11)	1
2	<u>1011590</u>	Switch Sub-assy, Turn Signal	1
3	N/A	Strap, Extrusion	1
4	<u>1016</u>	Lockwasher, #10 Split	1
5	<u>1017075</u>	Socket & Lamp Assembly	2
6	<u>1017724</u>	Rivet, Plastic	1
7	<u>102529201</u>	Wire Cover, Steering Column	1
8	<u>183</u>	Washer, #10, Type A, Flat	2
9	<u>7893</u>	Nut, #10-32 Hex	2
10	8104	Screw, #10-32 X .75 Rd Hd Mach	1
11	<u>8990</u>	Tie Wrap, 8" Nylon	1

4

G

E

4**G****E**

001101-001

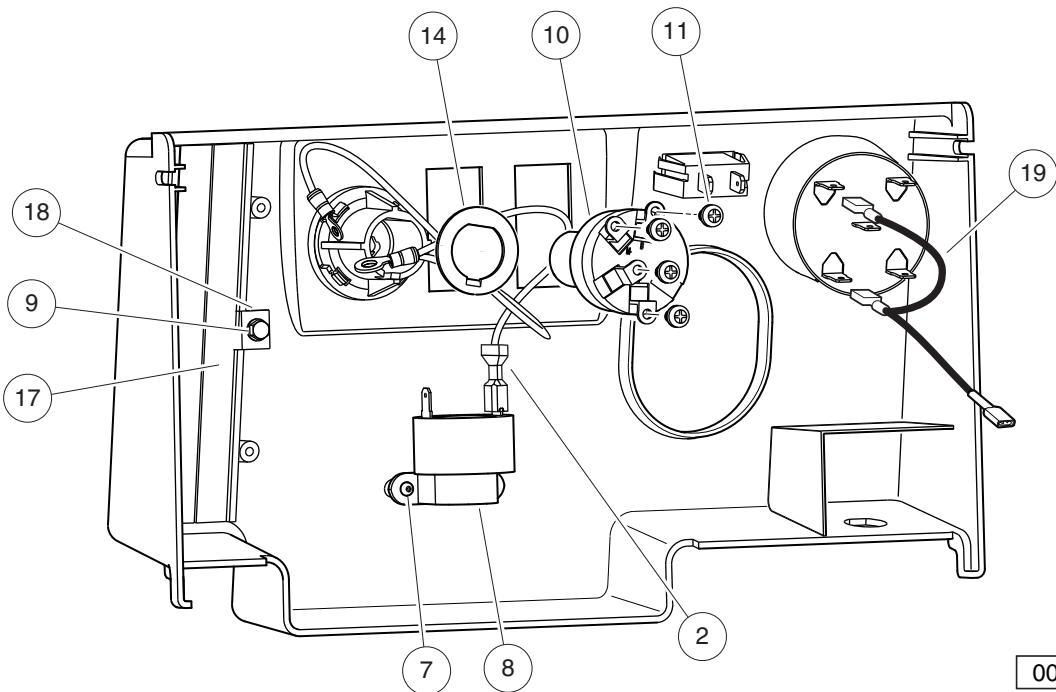
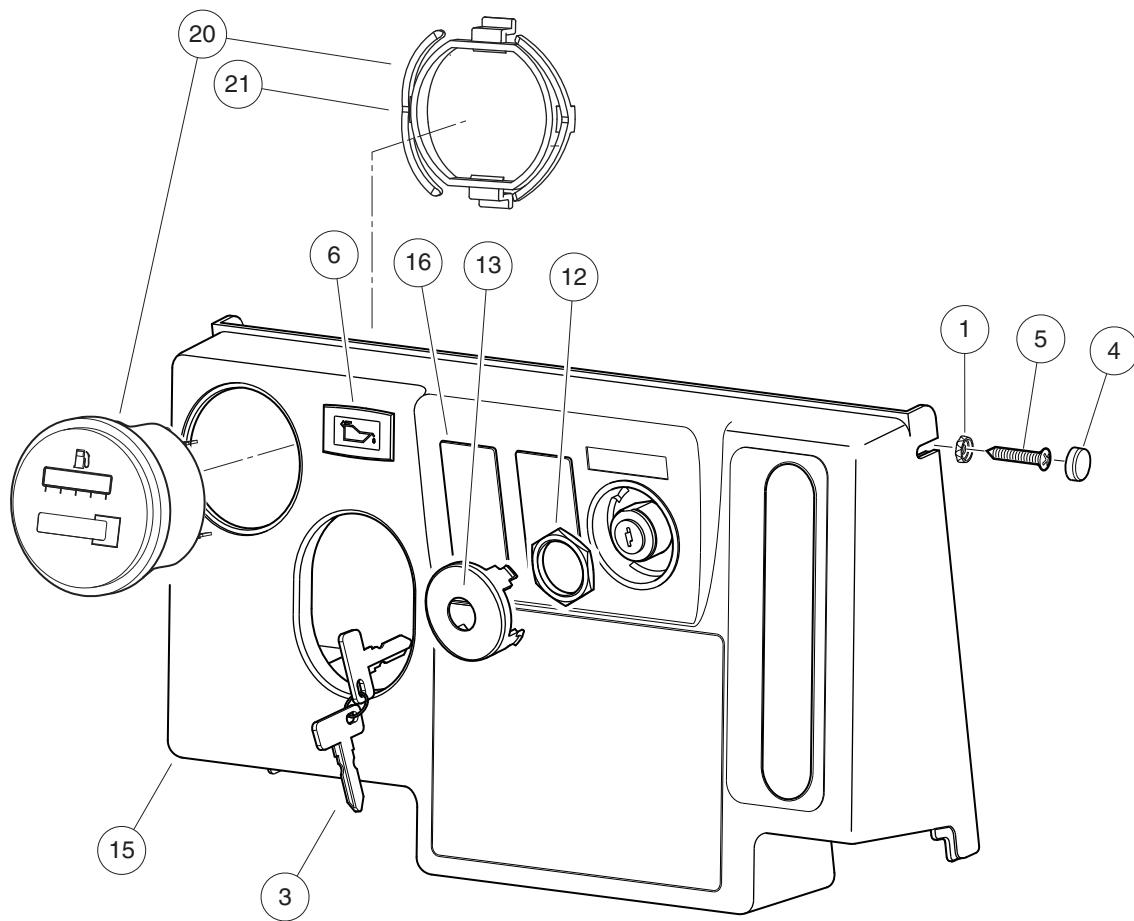
TURN SIGNAL (WITH HORN BUTTON) KIT – DS AND UTILITY GAS AND ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101707405	Kit, Turn Signal-horn (includes items 2 through 12)	1
2	<u>1016</u>	Lockwasher, #10 Split	1
3	<u>1017075</u>	Socket & Lamp Assembly	2
4	<u>1017724</u>	Rivet, Plastic	1
5	<u>102517501</u>	Turn Signal Asm (includes item 6)	1
6	<u>102546401</u>	Flasher Unit, Prec	1
7	<u>102529201</u>	Wire Cover, Steering Column	1
8	<u>103618001</u>	Harness, Jumper, Turn Signal	1
9	<u>183</u>	Washer, #10, Type A, Flat	2
10	<u>7893</u>	Nut, #10-32 Hex	2
11	8104	Screw, #10-32 X .75 Rd Hd Mach	1
12	<u>8990</u>	Tie Wrap, 8" Nylon	1

4

G

E

4**G****E**

001085-001

INSTRUMENT PANEL AND ELECTRICAL COMPONENTS – TURF/ CARRYALL 2 AND 252 GAS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011382	Washer, #10 Pan-Head Screw	2
2	1012396	Wire Assy #18 Black	1
3	1012505	Keys (set of 2)	1
4	1013494	Cover, Screw Head	2
5	1015528	Screw, #10 x 1-1/4 Phillips Head	2
6	1016630	Light, Oil	1
7	1016849	Screw, #4-24 X 0.33, Pan-Head, Machine	2
8	1016851	Buzzer, Reverse (9-48 VDC)	1
9	101804301	Screw, #8 X 0.500, Hex-Head Hi-Lo	2
10	101826301	Key Switch, 12-Volt, Off/On	1
11	101830601	Screw and Washer Assembly	4
12	101830701	Nut, Key Switch	1
13	101834502	Cap, Black Key Switch	1
14	101851101	Washer, Key Switch	1
15	102977001	Panel, Dash, Center, Gas (Instrument Panel)	1
16	103180101	Cover, Hole, Switch, Rocker	2
17	103199001	Brush, Closeout, FNR	2
18	103199101	Washer, Retaining, Brush, FNR	2
19	103348501	Asm, Wire Meter, F-h Jumper	1
20	103348602	Gauge, Fuel-hour,sep Gnd, Ds (includes item 21)	1
21	103348204	Clip, Meter, Round Ds	1

4

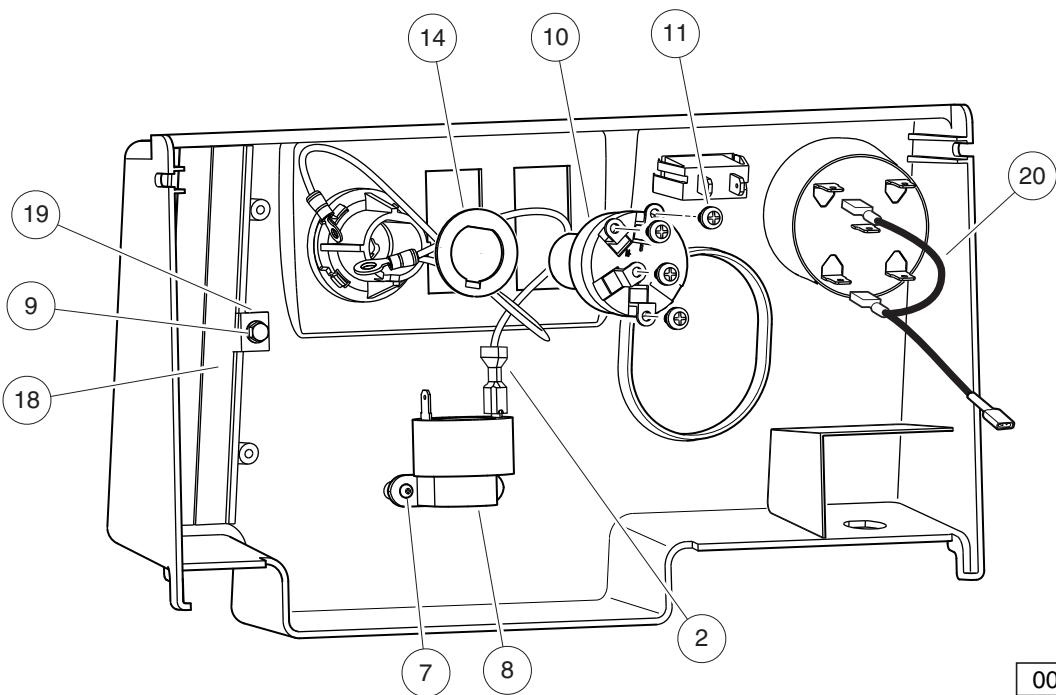
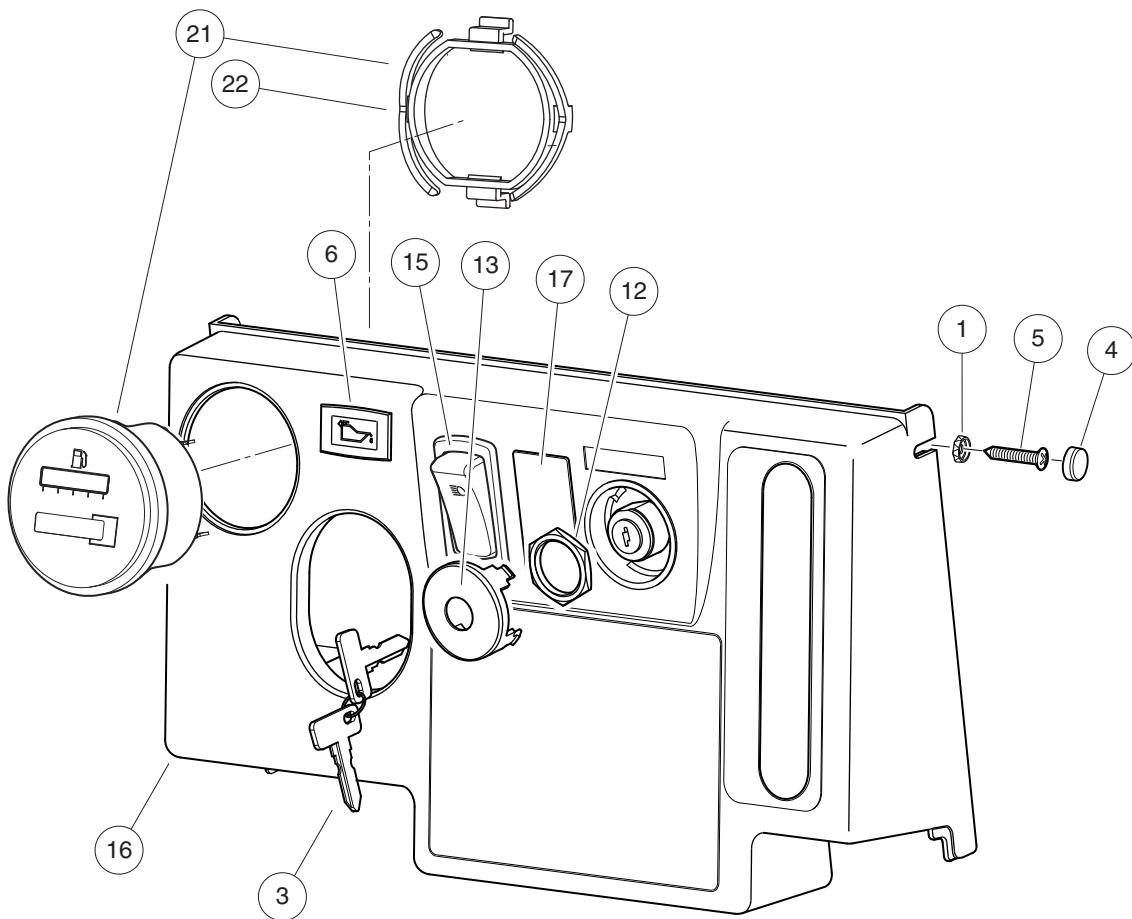
G

E

4

G

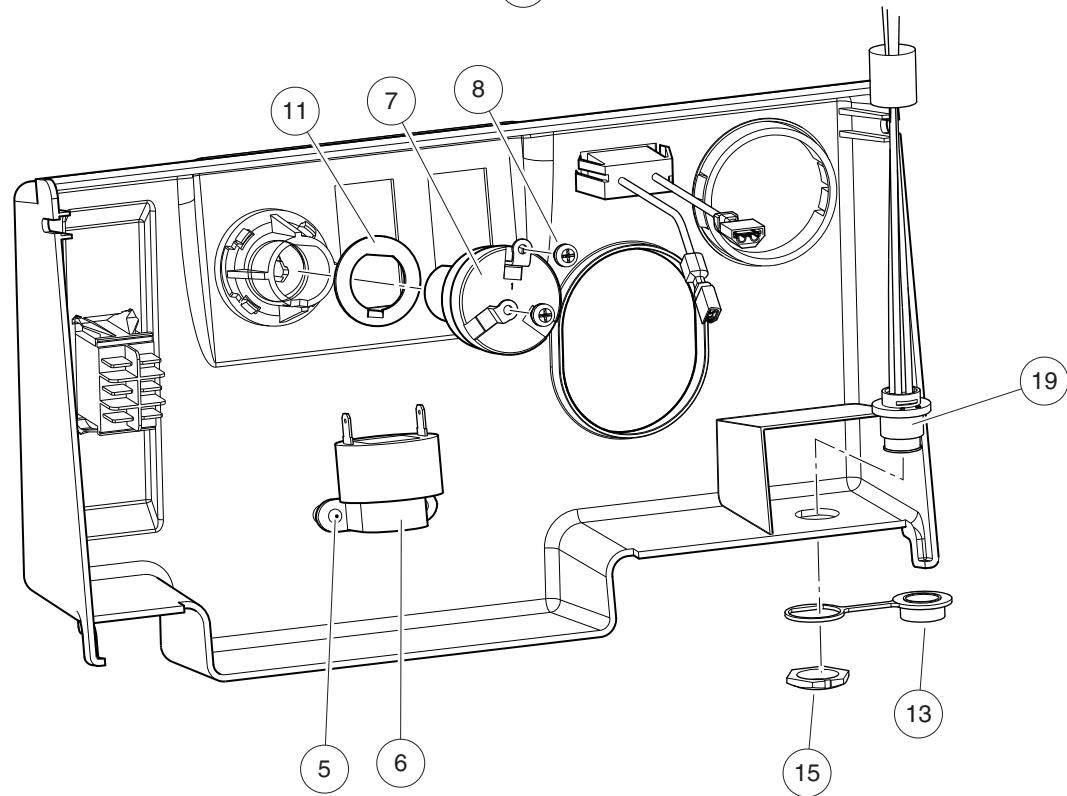
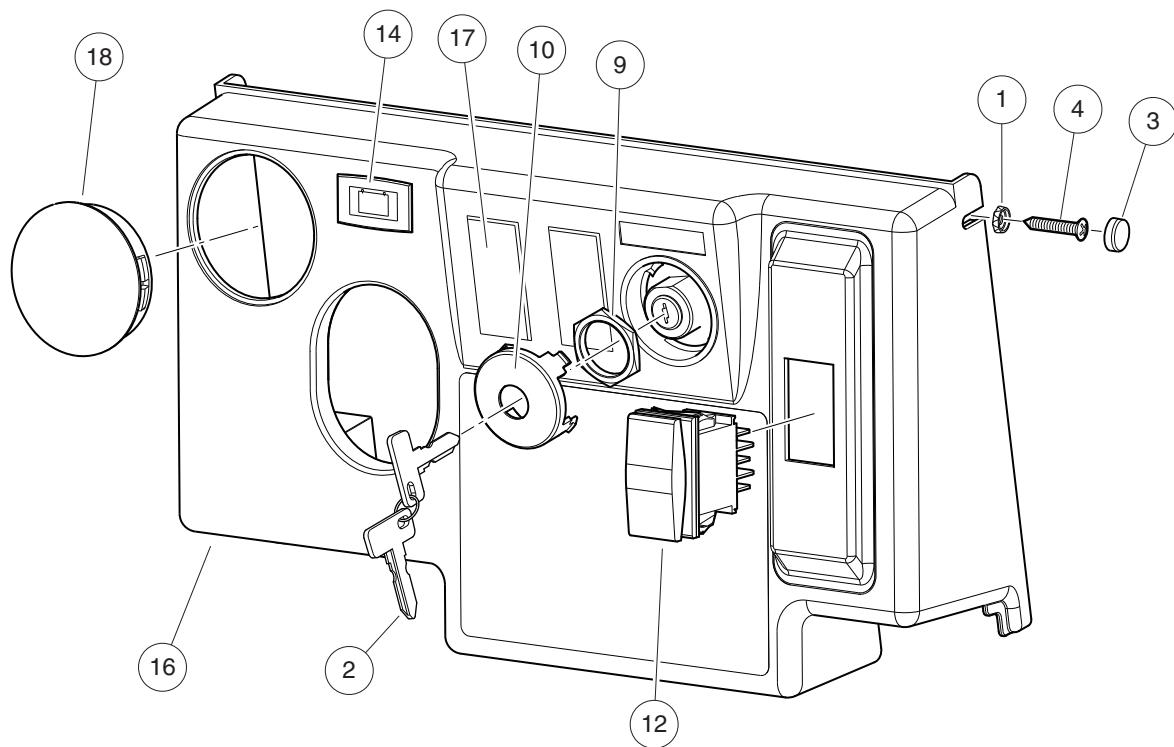
E



001086-001

INSTRUMENT PANEL AND ELECTRICAL COMPONENTS – CARRYALL 2 PLUS AND XRT 900 GAS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011382</u>	Washer, #10 Pan-Head Screw	2
2	<u>1012396</u>	Wire Assy #18 Black	1
3	<u>1012505</u>	Keys (set of 2)	1
4	<u>1013494</u>	Cover, Screw Head	2
5	<u>1015528</u>	Screw, #10 x 1-1/4 Phillips Head	2
6	<u>1016630</u>	Light, Oil	1
7	<u>1016849</u>	Screw, #4-24 X 0.33, Pan-Head, Machine	2
8	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
9	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	2
10	<u>101826401</u>	Key Switch, 12-Volt, Off/On/Start	1
11	<u>101830601</u>	Screw and Washer Assembly	5
12	<u>101830701</u>	Nut, Key Switch	1
13	<u>101834502</u>	Cap, Black Key Switch	1
14	<u>101851101</u>	Washer, Key Switch	1
15	<u>102869401</u>	Switch, Rocker, Light	1
16	<u>102977001</u>	Panel, Dash, Center, Gas (Instrument Panel)	1
17	<u>103180101</u>	Cover, Hole, Switch, Rocker	1
18	<u>103199001</u>	Brush, Closeout, FNR	2
19	<u>103199101</u>	Washer, Retaining, Brush, FNR	2
20	<u>103348501</u>	Asm, Wire Meter, F-h Jumper	1
21	<u>103348602</u>	Gauge, Fuel-hour,sep Gnd, Ds (includes item 22)	1
22	<u>103348204</u>	Clip, Meter, Round Ds	1

4**G****E**

001087-001

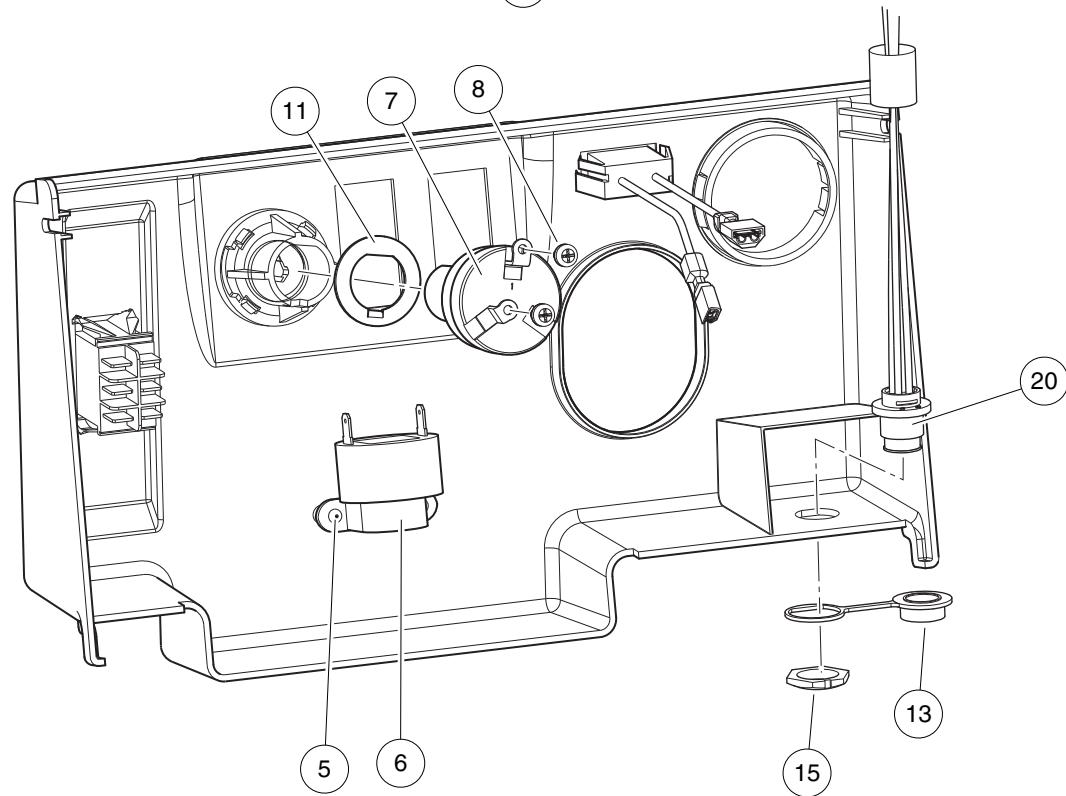
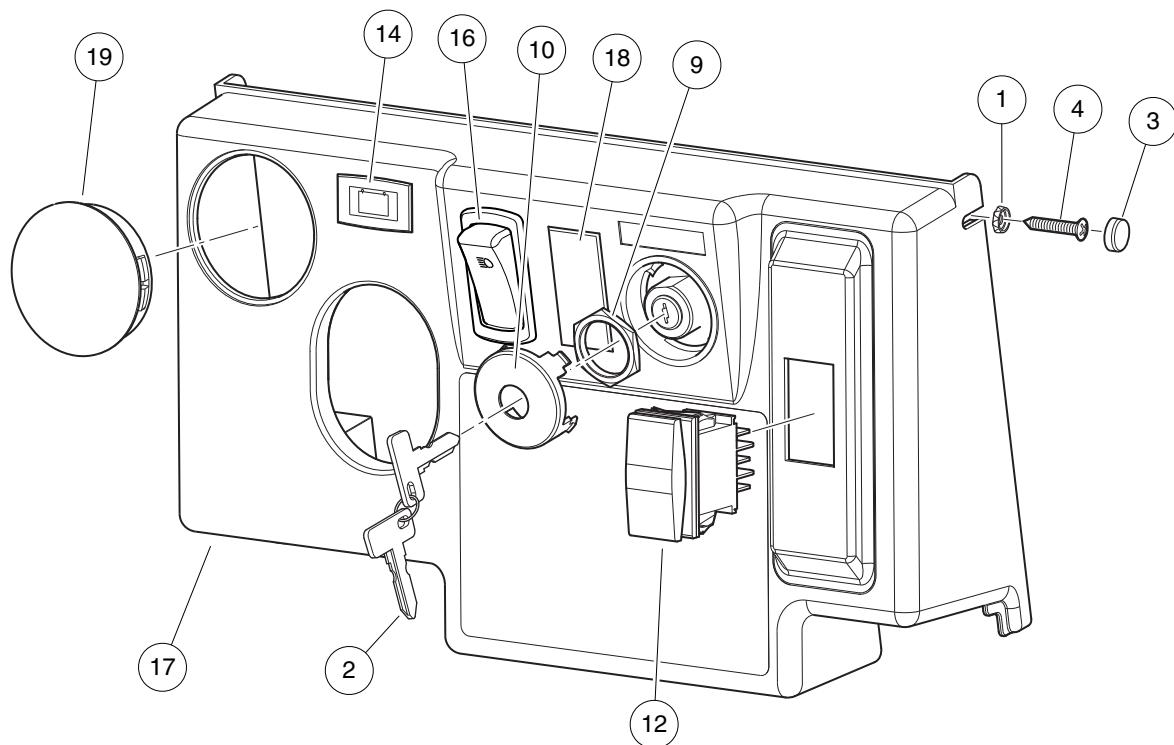
INSTRUMENT PANEL AND ELECTRICAL COMPONENTS – TURF/ CARRYALL 2 ELECTRIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011382</u>	Washer, #10 Pan-Head Screw	2
2	<u>1012505</u>	Keys (set of 2)	1
3	<u>1013494</u>	Cover, Screw Head	2
4	<u>1015528</u>	Screw, #10 x 1-1/4 Phillips Head	2
5	<u>1016849</u>	Screw, #4-24 X 0.33, Pan-Head, Machine	2
6	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
7	<u>101826201</u>	Key Switch, On/Off	1
8	<u>101830601</u>	Screw and Washer Assembly	2
9	<u>101830701</u>	Nut, Key Switch	1
10	<u>101834502</u>	Cap, Black Key Switch	1
11	<u>101851101</u>	Washer, Key Switch	1
12	<u>101856002</u>	Switch, Rocker, Single-Pole	1
13	<u>102196901</u>	Dust Cap	1
14	<u>102508701</u>	Light, Battery	1
15	<u>102572401</u>	Nut, Diagnostic Port, Prec	1
16	<u>102977002</u>	Panel, Dash, Center, Elec (Instrument Panel)	1
17	<u>103180101</u>	Cover, Hole, Switch, Rocker	2
18	<u>103198301</u>	Plug, Hole, Round, 2.0 In	1
19	<u>103218601</u>	Harness, Diagnostic Port	1

4

G

E

4**G****E**

001088-001

INSTRUMENT PANEL WITH ELECTRICAL COMPONENTS – TURF/ CARRYALL 252 AND XRT 900 ELECTRIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011382</u>	Washer, #10 Pan-Head Screw	2
2	<u>1012505</u>	Keys (set of 2)	1
3	<u>1013494</u>	Cover, Screw Head	2
4	<u>1015528</u>	Screw, #10 x 1-1/4 Phillips Head	2
5	<u>1016849</u>	Screw, #4-24 X 0.33, Pan-Head, Machine	2
6	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
7	<u>101826201</u>	Key Switch, On/Off	1
8	<u>101830601</u>	Screw and Washer Assembly	2
9	<u>101830701</u>	Nut, Key Switch	1
10	<u>101834502</u>	Cap, Black Key Switch	1
11	<u>101851101</u>	Washer, Key Switch	1
12	<u>101856002</u>	Switch, Rocker, Single-Pole	1
13	<u>102196901</u>	Dust Cap	1
14	<u>102508701</u>	Light, Battery	1
15	<u>102572401</u>	Nut, Diagnostic Port, Prec	1
16	<u>102869401</u>	Switch, Rocker, Light	1
17	<u>102977002</u>	Panel, Dash, Center, Elec (Instrument Panel)	1
18	<u>103180101</u>	Cover, Hole, Switch, Rocker	1
19	<u>103198301</u>	Plug, Hole, Round, 2.0 In	1
20	<u>103218601</u>	Harness, Diagnostic Port	1

4

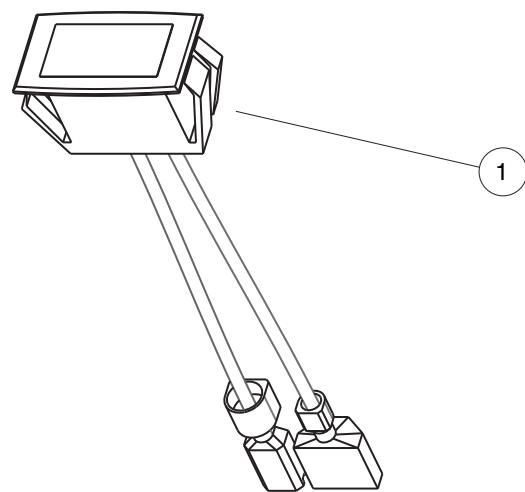
G

E

4

G

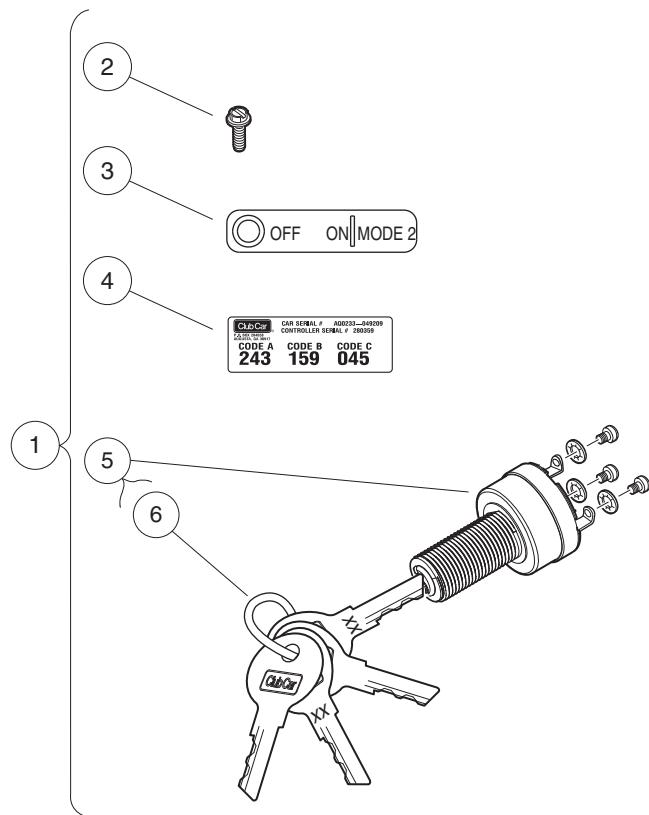
E



001237-001

INDICATOR, CHARGER INFO – ELEC. VEHICLES WITH MAINT-FREE BATTERIES AND DELTAQ CHARGER

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>103860501</u>	<p>1 2 3 4</p> <p>Indicator, Info, Charger</p> <p>Note: This indicator is only for non-standard vehicles equipped with maintenance-free, absorbed-glass-mat (AGM) batteries and DeltaQ battery charger.</p>	1

4**G****E**

001212-001

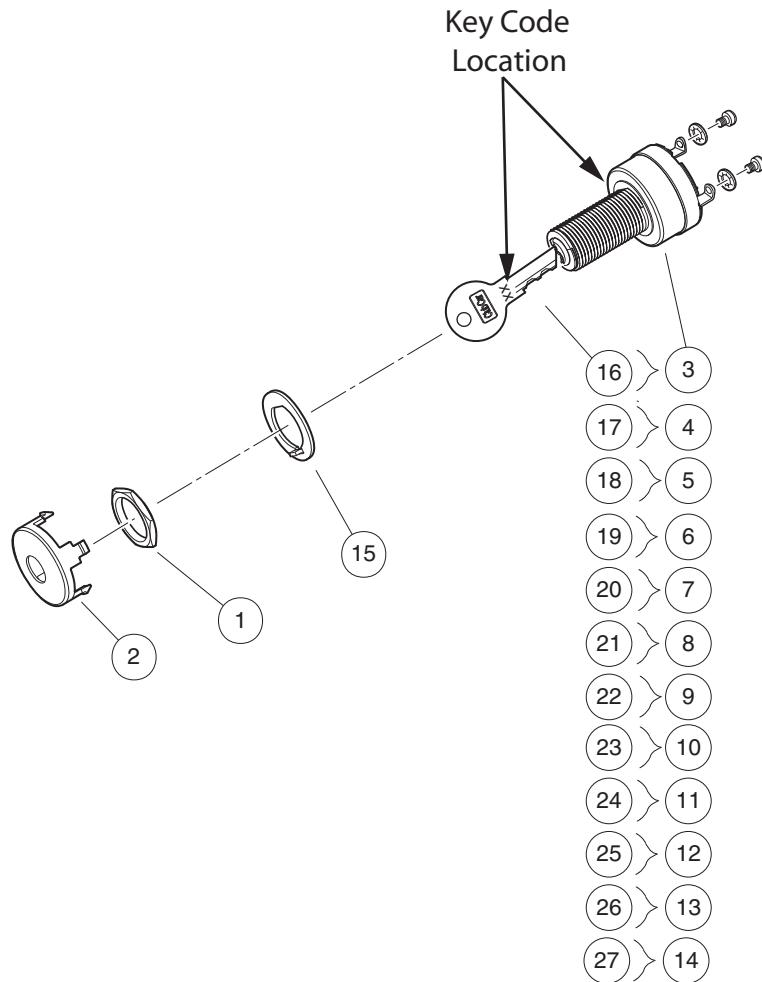
KEYS AND KEYSWITCHES, SMARTKEY KIT – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>102962602</u>	1 2 3 4 Kit, Field, Smartkey (includes items 2 through 5)	1
2	<u>1011017</u>	Screw, #8-32 X 0.375	1
3	<u>101825103</u>	Decal, Keyswitch, Iq Plus Mode	1
4	N/A	Decal, Passcode	1
5	<u>102950301</u>	Key Switch, Mode B, Iq Plus (includes item 6)	1
6	<u>102962303</u>	Keys, Set Of 4, Iq Plus Mode	1
Note: Not available in the EU.			

4

G

E

4**G****E**

001089-001

KEYS AND KEYSWITCHES, UNCOMMON – GAS VEHICLE

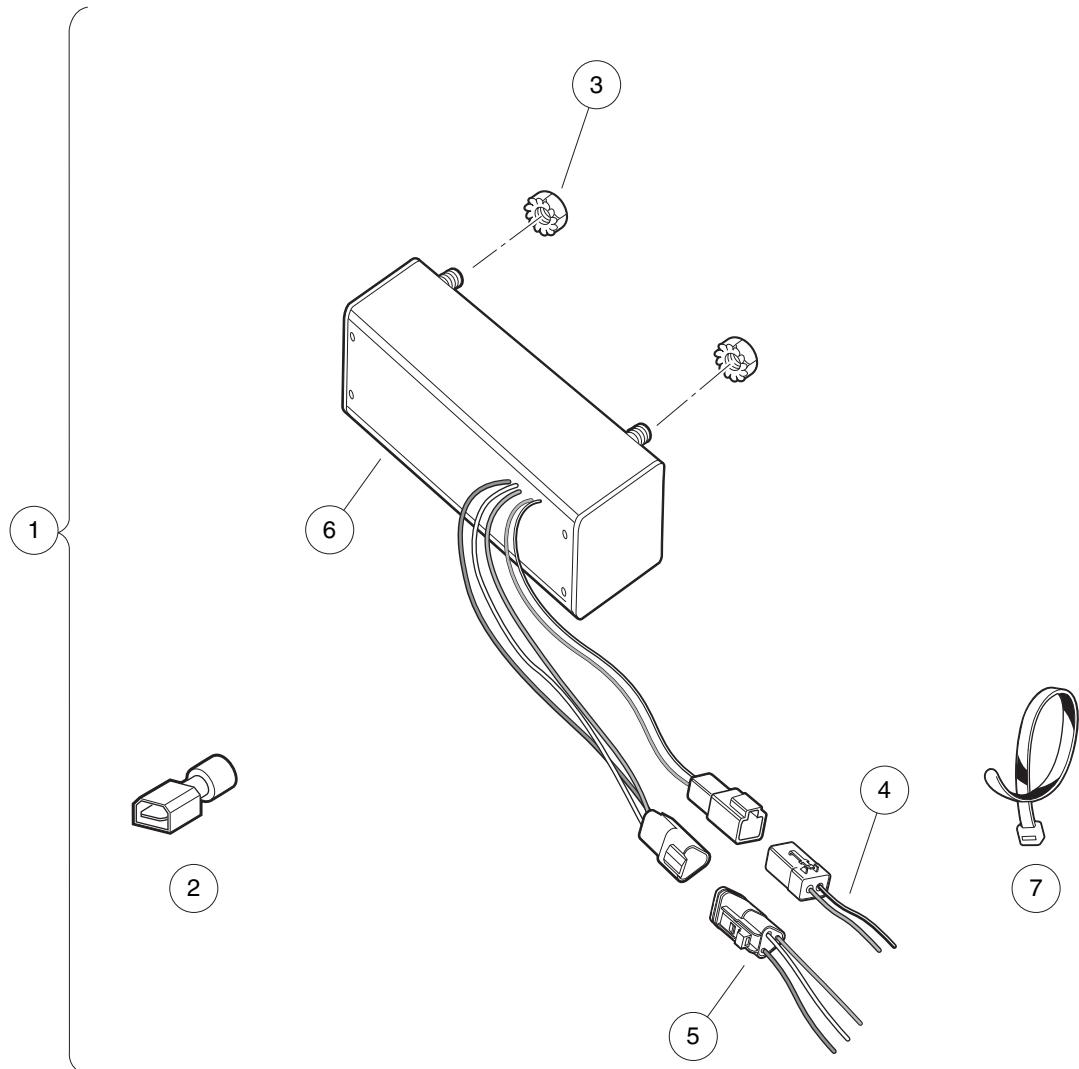
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101830701</u>	Nut, Key Switch	1
2	<u>101834502</u>	Cap, Black Key Switch	1
3	<u>101839801</u>	Keyswtch Uncom A408 On/off/st	1
4	<u>101839802</u>	Keyswtch Uncom B408 On/off/st	1
5	<u>101839803</u>	Keyswtch Uncom C408 On/off/st	1
6	<u>101839804</u>	Keyswtch Uncom D408 On/off/st	1
7	<u>101839805</u>	Keyswtch Uncom 2a408 On/off/st	1
8	<u>101839806</u>	Keyswtch Uncom 2b408 On/off/st	1
9	<u>101839807</u>	Keyswtch Uncom 2c408 On/off/st	1
10	<u>101839808</u>	Keyswtch Uncom 2d408 On/off/st	1
11	<u>101839809</u>	Keyswtch Uncom E408 On/off/st	1
12	<u>101839810</u>	Keyswtch Uncom F408 On/off/st	1
13	<u>101839811</u>	Keyswtch Uncom 2e408 On/off/st	1
14	<u>101839812</u>	Keyswtch Uncom 2f408 On/off/st	1
15	<u>101851101</u>	Washer, Key Switch	1
16	<u>101974701</u>	Key, Uncommon 1a	1
17	<u>101974702</u>	Key, Uncommon 1b	1
18	<u>101974703</u>	Key, Uncommon 1c	1
19	<u>101974704</u>	Key, Uncommon 1d	1
20	<u>101974705</u>	Key, Uncommon 2a	1
21	<u>101974706</u>	Key, Uncommon 2b	1
22	<u>101974707</u>	Key, Uncommon 2c	1
23	<u>101974708</u>	Key, Uncommon 2d	1
24	<u>101974709</u>	Key, Uncommon 1e	1
25	<u>101974710</u>	Key, Uncommon 1f	1
26	<u>101974711</u>	Key, Uncommon 2e	1
27	<u>101974712</u>	Key, Uncommon 2f	1

Note: Keyswitches 101839801 through 101839812 are for key-start, gasoline vehicles ONLY.

4

G

E

4**G****E**

001090-002

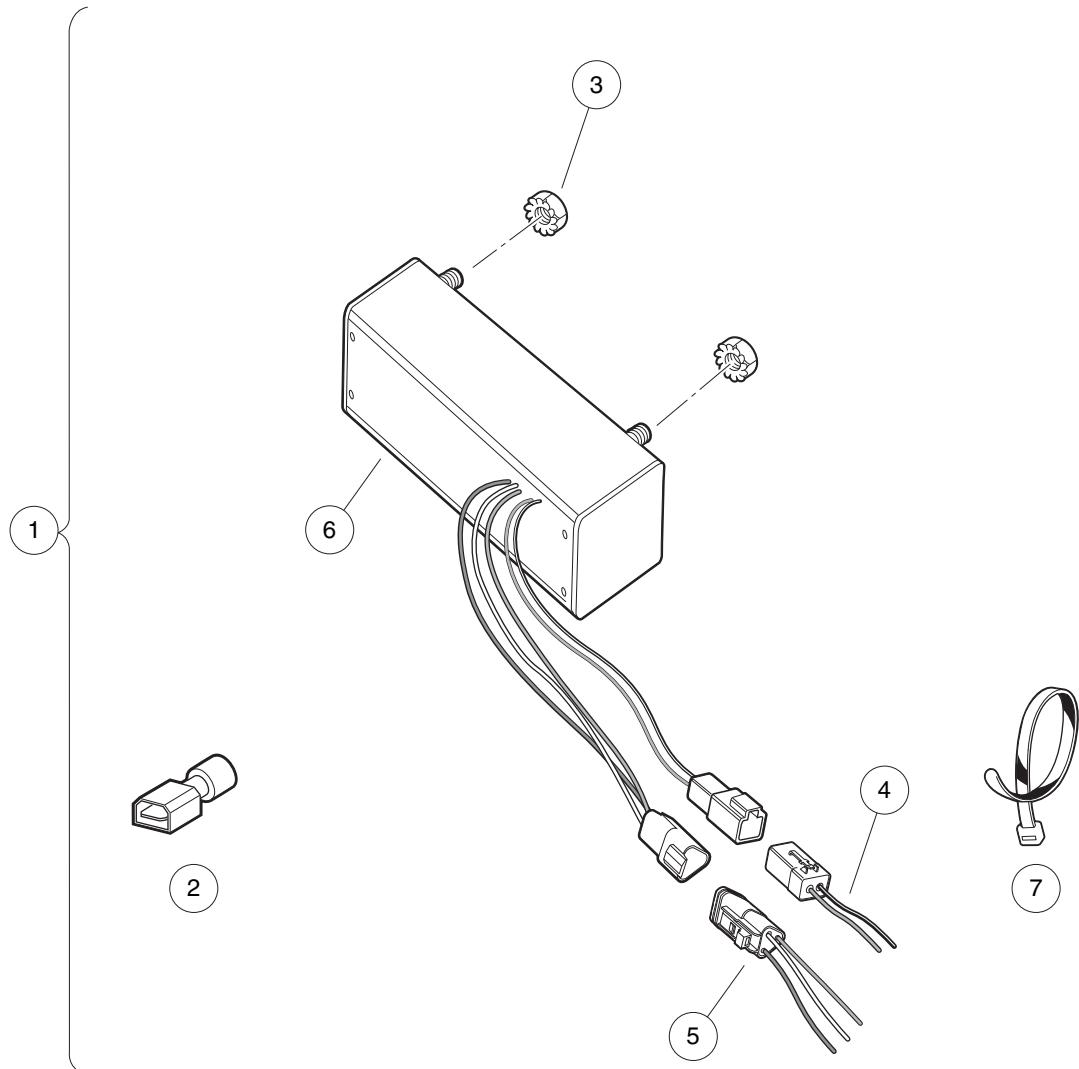
DC CONVERTER (ISOLATED) – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102918701</u>	Kit, DC/DC Converter, IQ Plus (includes items 2 through 7)	1
2	<u>1016365</u>	Terminal, 1/4" Male Quick Disconnect	1
3	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	2
4	<u>102354901</u>	Harness, Dc Converter - 12v	1
5	<u>102890201</u>	Harness, Dc Converter, 48v	1
6	<u>103700301</u>	Converter, Dc/dc, Isolted	1
7	<u>8990</u>	Tie Wrap, 8" Nylon	10

4

G

E

4**G****E**

001090-002

DC CONVERTER (ISOLATED) – CE ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102918702</u>	Kit, Dc Conv. Iq Plus Ce (includes items 2 through 7)	1
2	<u>1016365</u>	Terminal, 1/4" Male Quick Disconnect	1
3	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	2
4	<u>102354901</u>	Harness, Dc Converter - 12v	1
5	<u>102890201</u>	Harness, Dc Converter, 48v	1
6	<u>103802401</u>	Converter, Dc/dc, Ce	1
7	<u>8990</u>	Tie Wrap, 8" Nylon	10

4

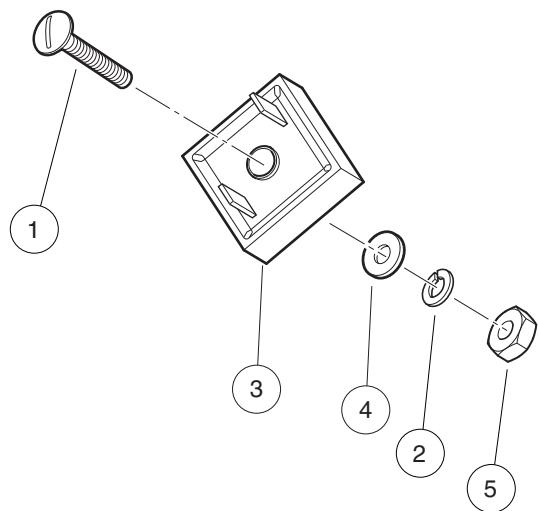
G

E

4

G

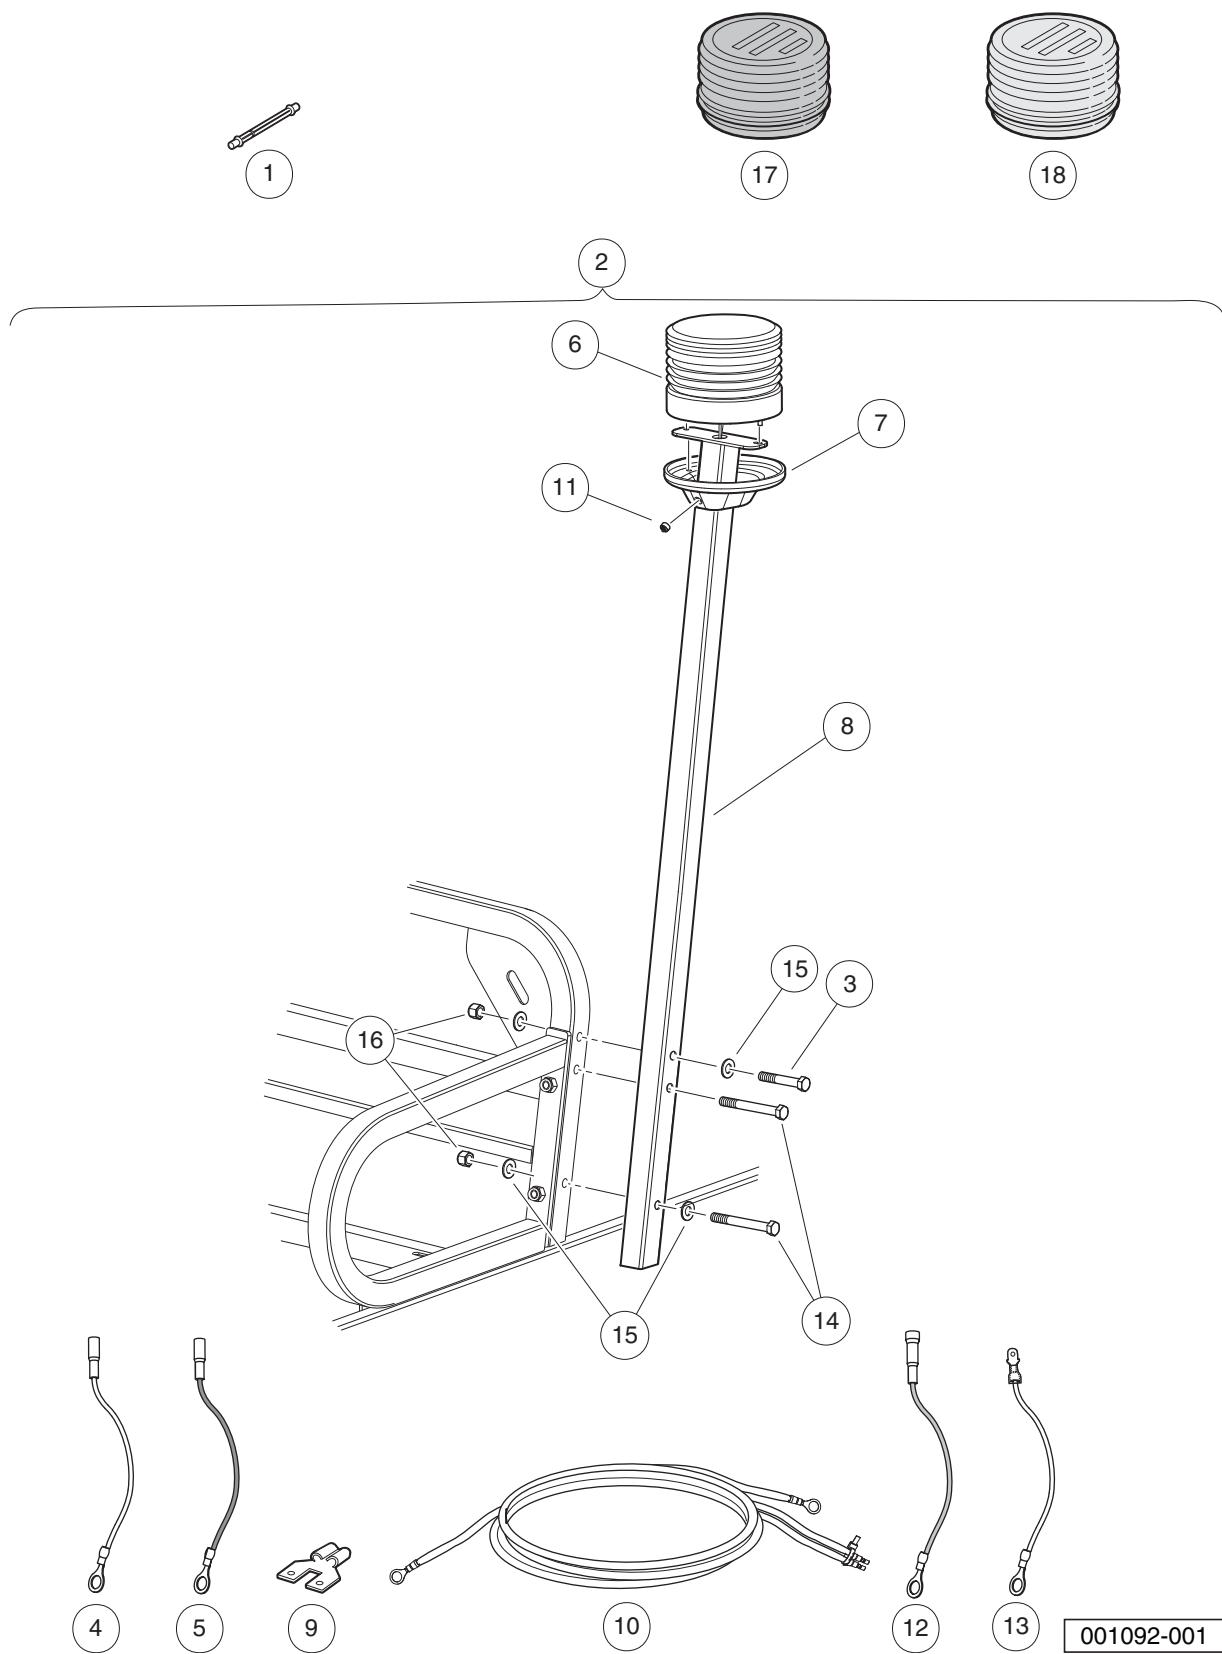
E



001091-001

VOLTAGE LIMITER – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010909</u>	Screw, #10-32 X 1.25 Rd Hd Mch	1
2	<u>1016</u>	Lockwasher, #10 Split	1
3	<u>1017721</u>	Limiter, Voltage	1
4	<u>183</u>	Washer, #10, Type A, Flat	1
5	<u>7893</u>	Nut, #10-32 Hex	1

4**G****E**

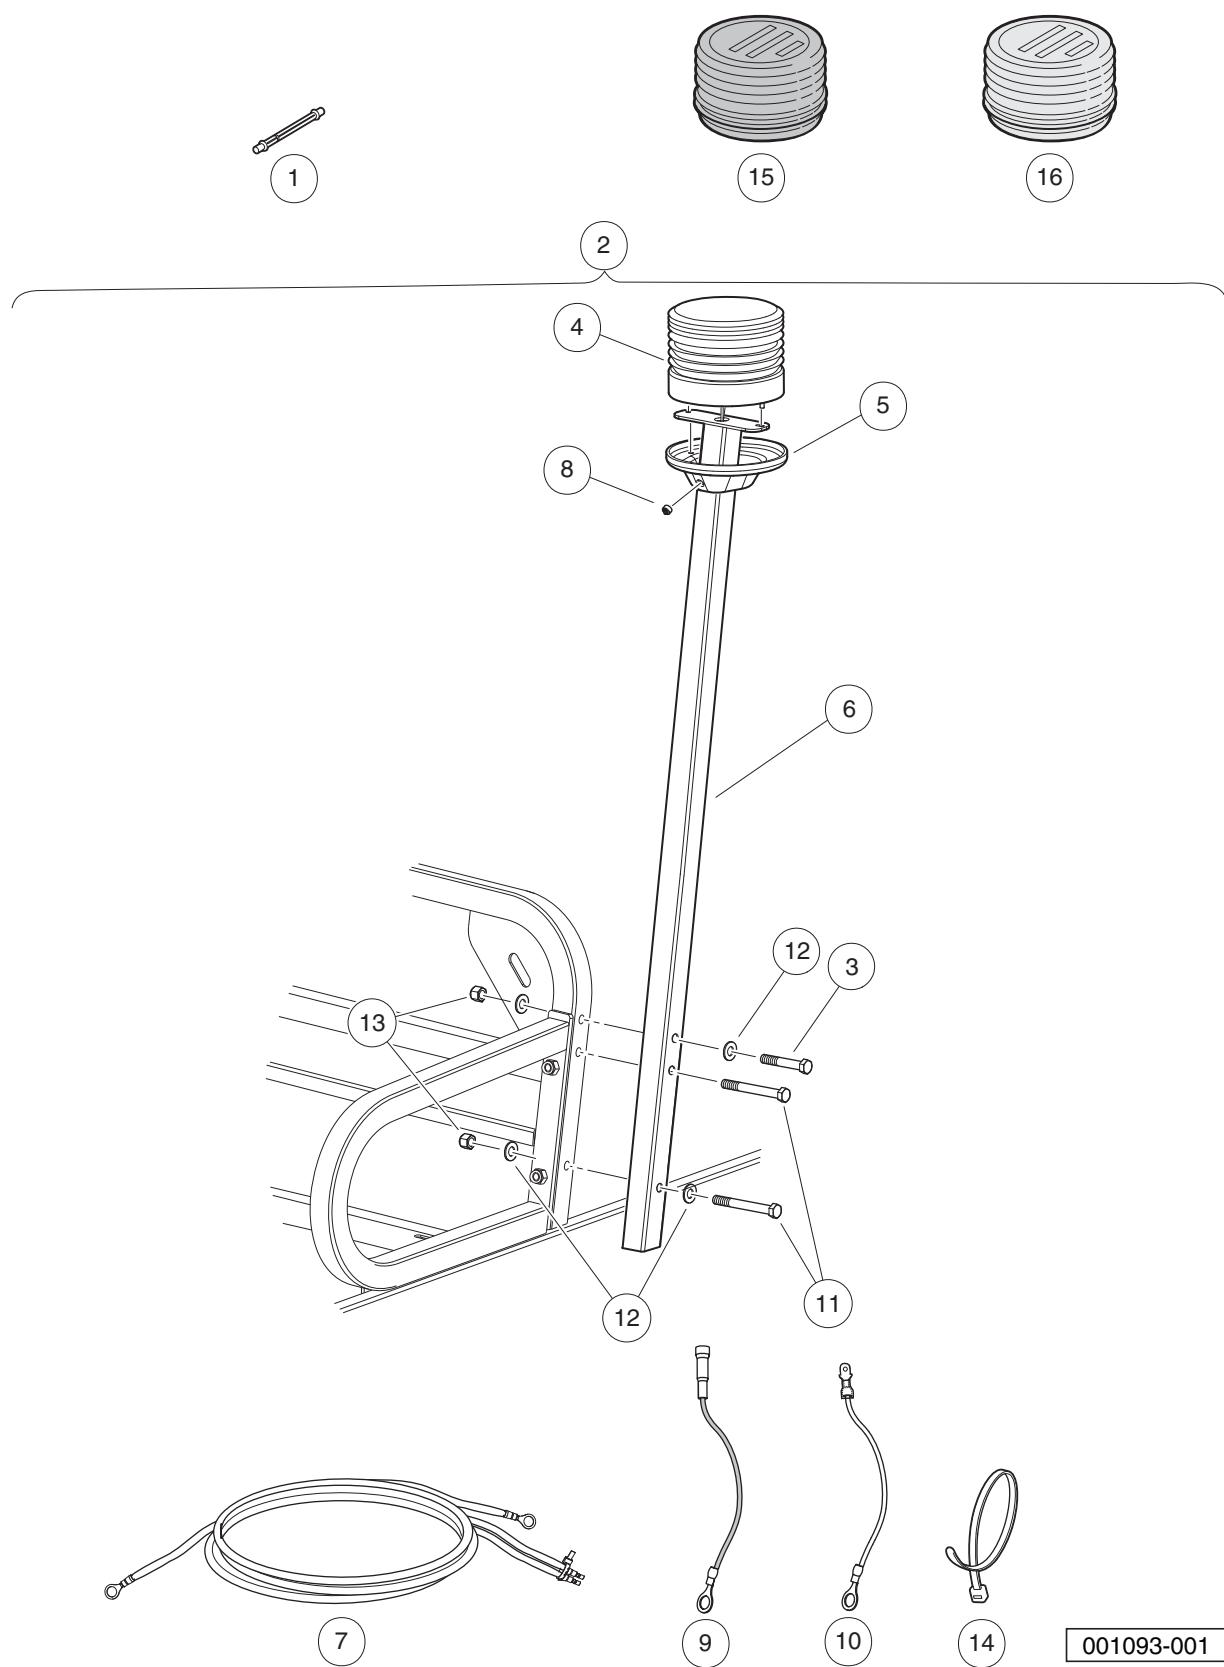
STROBE LIGHT, POST-MOUNTED – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015526</u>	Bulb, Replacement, for Strobe Light	1
2	<u>1015765</u>	Safety Strobe Lht Post Mnt Gas (includes items 3 through 16)	1
3	<u>1013509</u>	Screw, 1/4-20 X 1.75 Hx Hd Cap	2
4	<u>1015153</u>	Wire Assembly #16 Yellow	1
5	<u>1015154</u>	Wire Assembly Blue Ca #16	1
6	<u>1015156</u>	Light Assembly, Strobe	1
7	<u>1015157</u>	Cover Plate Switch - Pole Ca	1
8	<u>1015160</u>	Pole Weldment Carryall	1
9	<u>1015162</u>	3/16 Tab Adapter Non-insul	1
10	<u>1015172</u>	Wire Harness Assy, Strobe Light	1
11	<u>1015187</u>	Switch Assembly	1
12	<u>1016837</u>	Wire Assembly Red #18	1
13	<u>1016929</u>	Wire Assembly Black #16	1
14	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	2
15	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4
16	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2
17	<u>AM1243701</u>	Lens, Blue, for Strobe Light	1
18	<u>AM1243801</u>	Lens, Red, for Strobe Light	1

4

G

E

4**G****E**

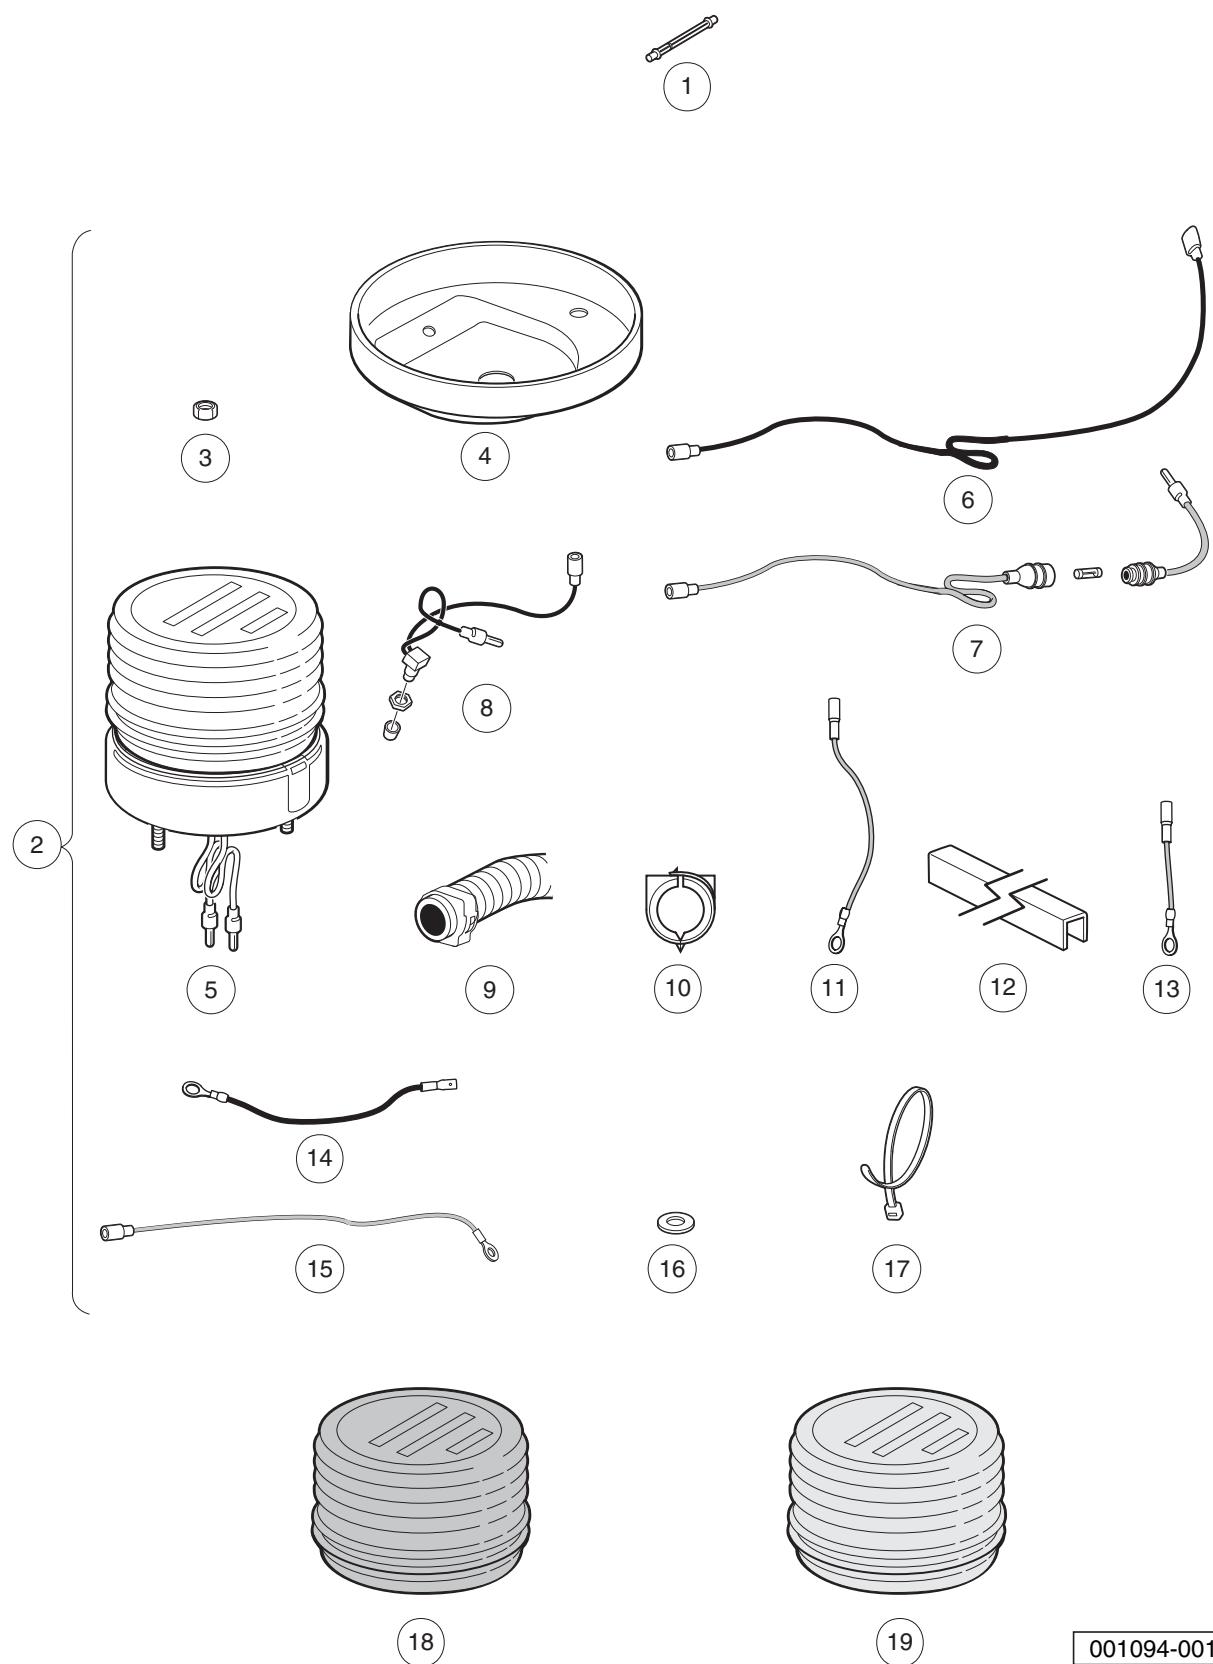
STROBE LIGHT, POST-MOUNTED – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015526</u>	Bulb, Replacement, for Strobe Light	1
2	<u>101814601</u>	Safety Strobe Lht & Post Mt El (includes items 3 through 14)	1
3	<u>1013509</u>	Screw, 1/4-20 X 1.75 Hx Hd Cap	2
4	<u>1015156</u>	Light Assembly, Strobe	1
5	<u>1015157</u>	Cover Plate Switch - Pole Ca	1
6	<u>1015160</u>	Pole Weldment Carryall	1
7	<u>1015172</u>	Wire Harness Assy, Strobe Light	1
8	<u>1015187</u>	Switch Assembly	1
9	<u>1016837</u>	Wire Assembly Red #18	1
10	<u>1016929</u>	Wire Assembly Black #16	1
11	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	2
12	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4
13	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2
14	<u>8990</u>	Tie Wrap, 8" Nylon	4
15	<u>AM1243701</u>	Lens, Blue, for Strobe Light	1
16	<u>AM1243801</u>	Lens, Red, for Strobe Light	1

4

G

E

4**G****E**


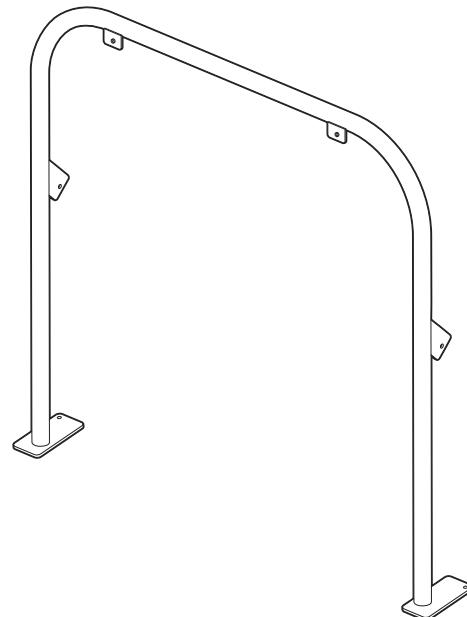

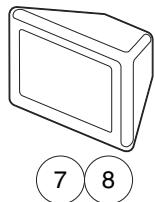
STROBE LIGHT, CANOPY-MOUNTED

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015526</u>	Bulb, Replacement, for Strobe Light	1
2	<u>AM1243501</u>	Kit, Roof Mounted Strobe Fd (includes items 3 through 17)	A/R
3	<u>1012438</u>	Locknut, #10-24 Nylon Insert	2
4	<u>1015010</u>	Cover Plate Switch	1
5	<u>1015156</u>	Light Assembly, Strobe	1
6	<u>1015167</u>	#16 Black Wire Asm	1
7	<u>1015170</u>	Wire Assembly #16	1
8	<u>1015187</u>	Switch Assembly	1
9	<u>1015768</u>	Split Convoluted Elec Conduit	11
10	<u>1015770</u>	Outlet Ring - .5 Diameter	5
11	<u>1016230</u>	Wire Asm #16 Red	1
12	<u>1016267</u>	Snap On Conduit Vert.	1
13	<u>1016287</u>	Wire Asm #16 Red	1
14	<u>1016929</u>	Wire Assembly Black #16	1
15	<u>101821601</u>	#18 Red Wire Assembly	1
16	<u>183</u>	Washer, #10, Type A, Flat	2
17	<u>8639</u>	Tie Wrap, 11" Nylon	8
18	<u>AM1243701</u>	Lens, Blue, for Strobe Light	A/R
19	<u>AM1243801</u>	Lens, Red, for Strobe Light	A/R

4

G

E

4**G****E****1****6**

001223-001

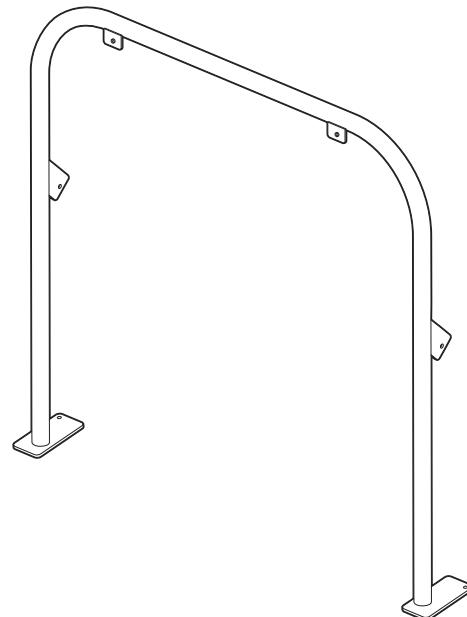
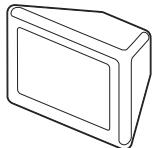

LIGHT BAR – TURF/CA 252 AND XRT 900 GAS VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102054501</u>	Kit, Light Bar, Gas (includes items 2 through 13)	1
2	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	8
3	<u>102077601</u>	Brace, Light Bar	2
4	<u>102077701</u>	Bracket, Brace Mtg	2
5	<u>102077801</u>	Bracket, Light Mtg	2
6	<u>102077901</u>	Light Bar	1
7	<u>102078001</u>	Light, Light Bar (includes item 8)	2
8	<u>AM10015</u>	37.5 Watt Light Bar Bulb	2
9	<u>102155701</u>	Wire Harness, Light Bar	1
10	<u>102159601</u>	Switch	1
11	<u>1241</u>	Washer, 5/16 Type A Flat	12
12	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	8
13	<u>8990</u>	Tie Wrap, 8" Nylon	4

4

G

E

4**G****E****1****2****3****4****5****6****7** **8****9****10****11****12****13**

001224-001

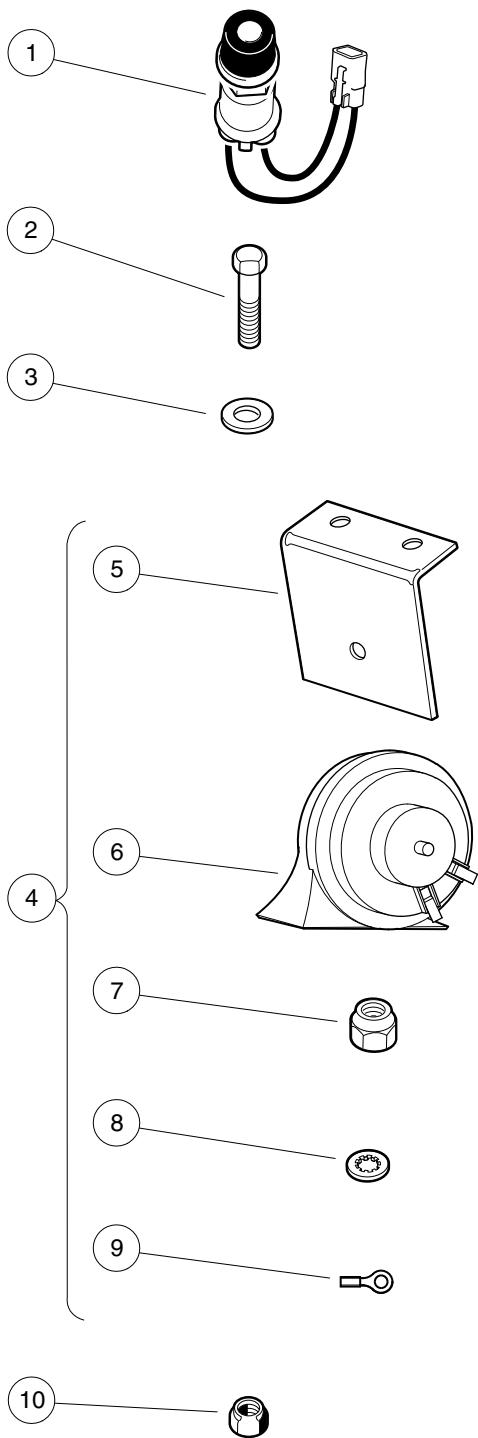
LIGHT BAR – TURF/CA 252 AND XRT 900 ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102054502</u>	Kit, Light Bar, Elec (includes items 2 through 13)	1
2	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	8
3	<u>102077601</u>	Brace, Light Bar	2
4	<u>102077701</u>	Bracket, Brace Mtg	2
5	<u>102077801</u>	Bracket, Light Mtg	2
6	<u>102077901</u>	Light Bar	1
7	<u>102078001</u>	Light, Light Bar (includes item 8)	2
8	<u>AM10015</u>	37.5 Watt Light Bar Bulb	2
9	<u>102159601</u>	Switch	1
10	<u>103350001</u>	Harness, Light Bar, 252	1
11	<u>1241</u>	Washer, 5/16 Type A Flat	12
12	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	8
13	<u>8990</u>	Tie Wrap, 8" Nylon	4

4

G

E

4**G****E**

001095-001

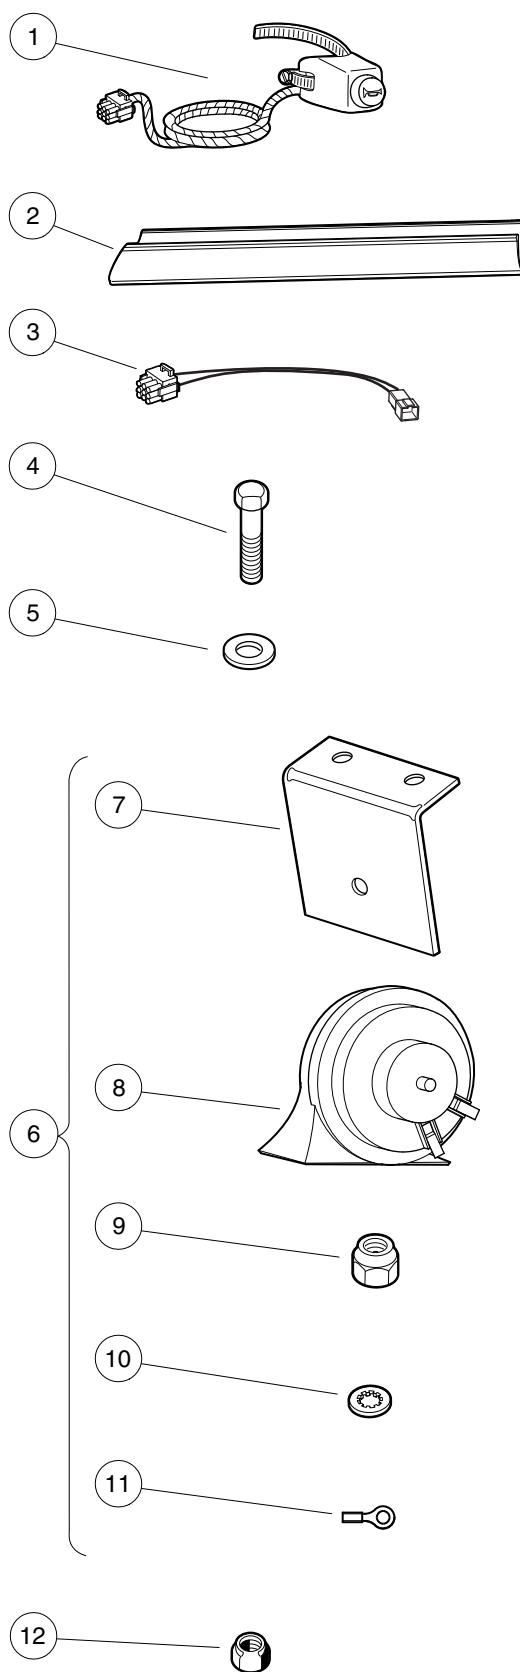
HORN WITH FLOOR-MOUNTED BUTTON

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101969701</u>	Horn Button and Wire Assembly	1
2	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
3	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
4	<u>4029</u>	Horn (includes items 5 through 9)	1
5	<u>1011825</u>	Horn Bracket	1
6	<u>1014530</u>	Horn, 12-VDC	1
7	<u>101955101</u>	Nut, M6 Hex	1
8	<u>7820</u>	Washer, 5/16 Internal-Tooth	1
9	8294	5/16 Ring Term.	1
10	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2

4

G

E

4**G****E**

001095-002

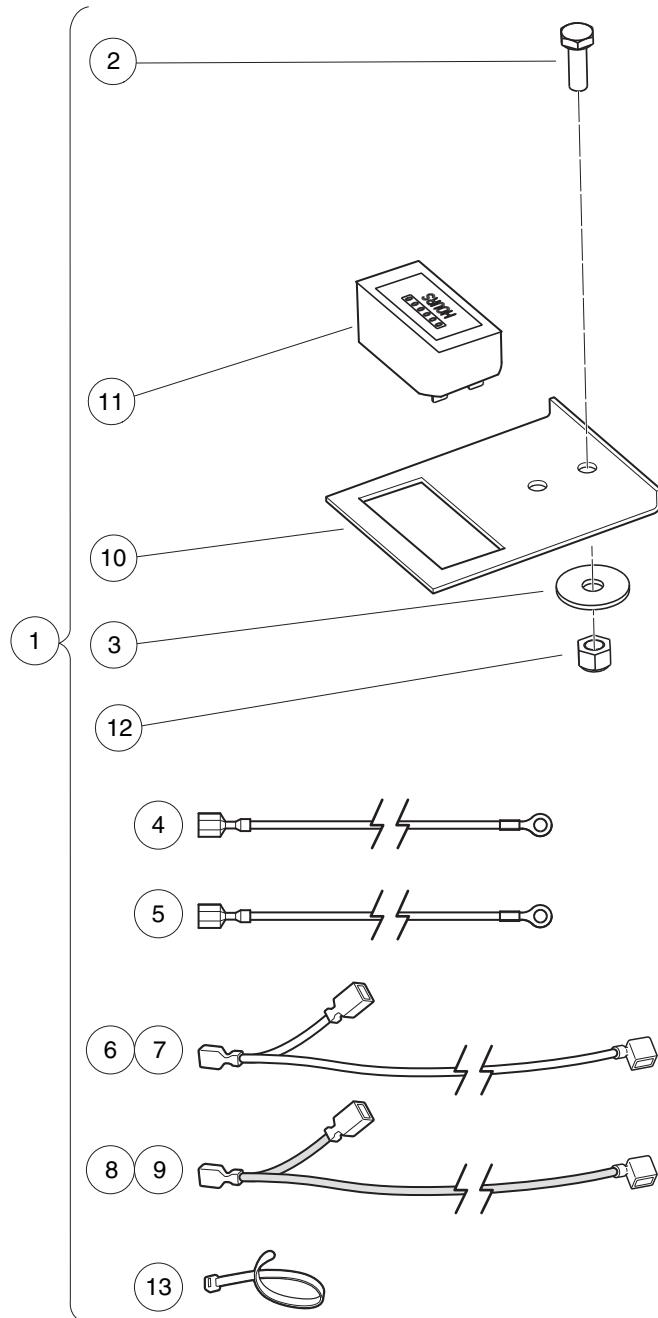
HORN WITH COLUMN-MOUNTED BUTTON

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102517601</u>	Subasm, Horn Button Harness	1
2	<u>102529203</u>	Wire Cover-steer Column 304 Mm	1
3	<u>103618101</u>	Harness, Jumper, Horn	1
4	<u>304</u>	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
5	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
6	<u>4029</u>	Horn (includes items 7 through 11)	1
7	<u>1011825</u>	Horn Bracket	1
8	<u>1014530</u>	Horn, 12-VDC	1
9	<u>101955101</u>	Nut, M6 Hex	1
10	<u>7820</u>	Washer, 5/16 Internal-Tooth	1
11	8294	5/16 Ring Term.	1
12	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2

4

G

E

4**G****E**

001096-002

HOUR METER – CARRYALL/TURF 2 IQ PLUS ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013579</u>	Kit, Hour Meter (includes items 2 through 13)	1
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	1
3	<u>1014306</u>	Washer, 1/4" Type B Flat	1
4	<u>101881501</u>	Wire Assembly Black #18	1
5	<u>101881601</u>	Wire Assembly Red #18	1
6	<u>101997802</u>	Wire Assembly #18 Yellow	1
7	<u>101997803</u>	Wire Asm #18 Yellow 31"	1
8	<u>101997902</u>	Wire Assembly #18 Red	1
9	<u>101997903</u>	Wire Asm # 18 Red 31"	1
10	<u>103510001</u>	Bracket, Hour Meter	1
11	<u>103510301</u>	Meter, Hour	1
12	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	1
13	<u>8990</u>	Tie Wrap, 8" Nylon	1

Note: The kit includes components that apply to multiple vehicles. The installation instructions will specify which components are required for a specific model. After installation, discard components not used.

4

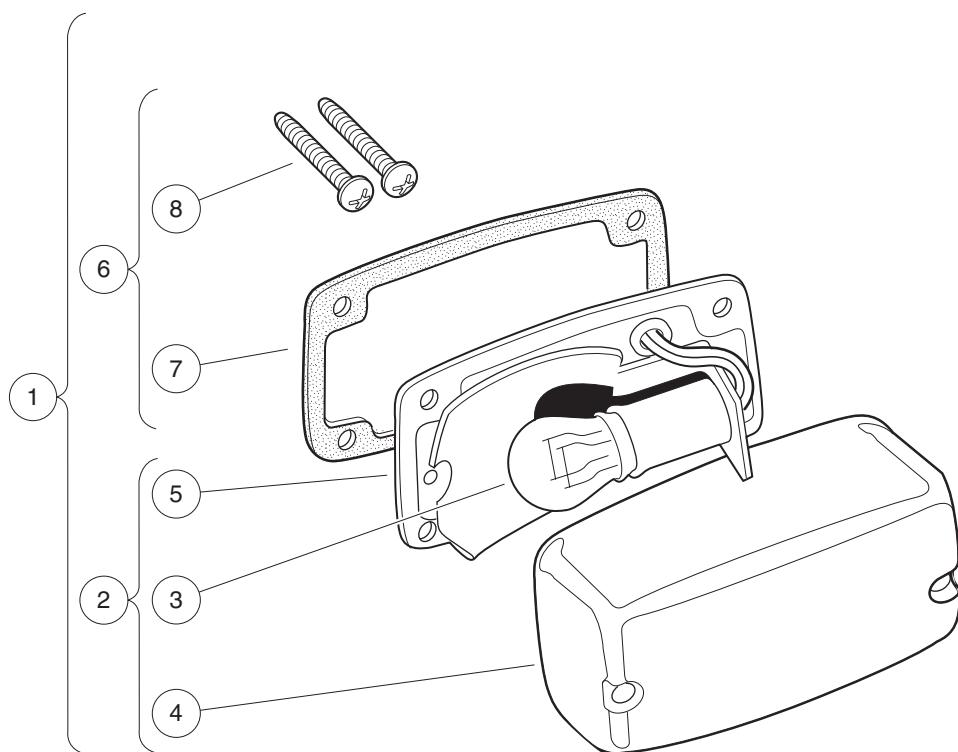
G

E

4

G

E



001081-001

TAILLIGHTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1017035	Taillight Assembly (includes items 2 through 6)	2
2	N/A	Light, Tail (includes items 3 through 5)	1
3	<u>1011582</u>	Taillight Bulb	1
4	<u>1011843</u>	Taillight Lens	1
5	N/A	Base, Taillight	1
6	<u>1017699</u>	Hardware Kit, Tail Light (includes items 7 and 8)	1
7	N/A	Gasket	1
8	N/A	Screw, Tapered	2

4

G

E

4

G

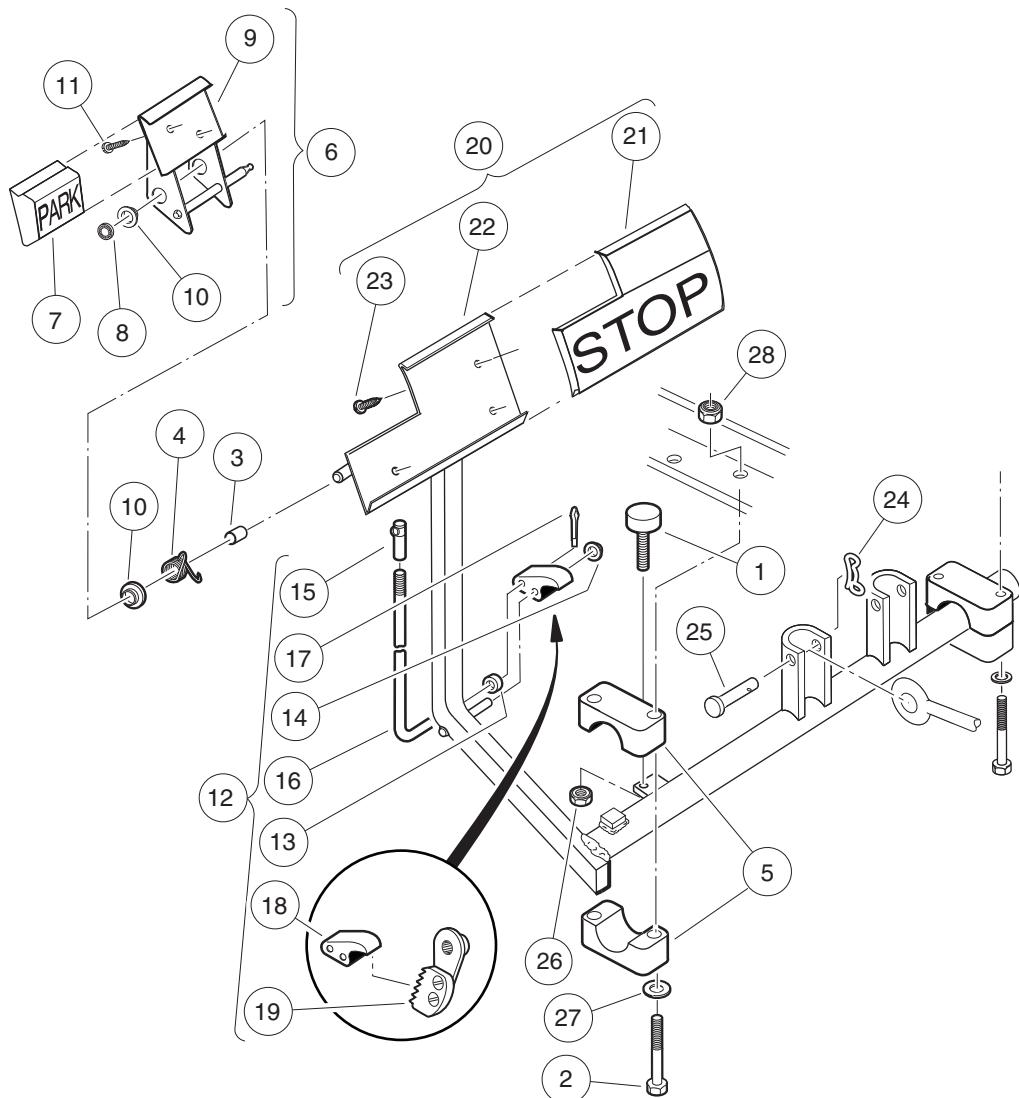
E

BRAKES, PEDAL, AND CABLE ASSEMBLIES

5

G

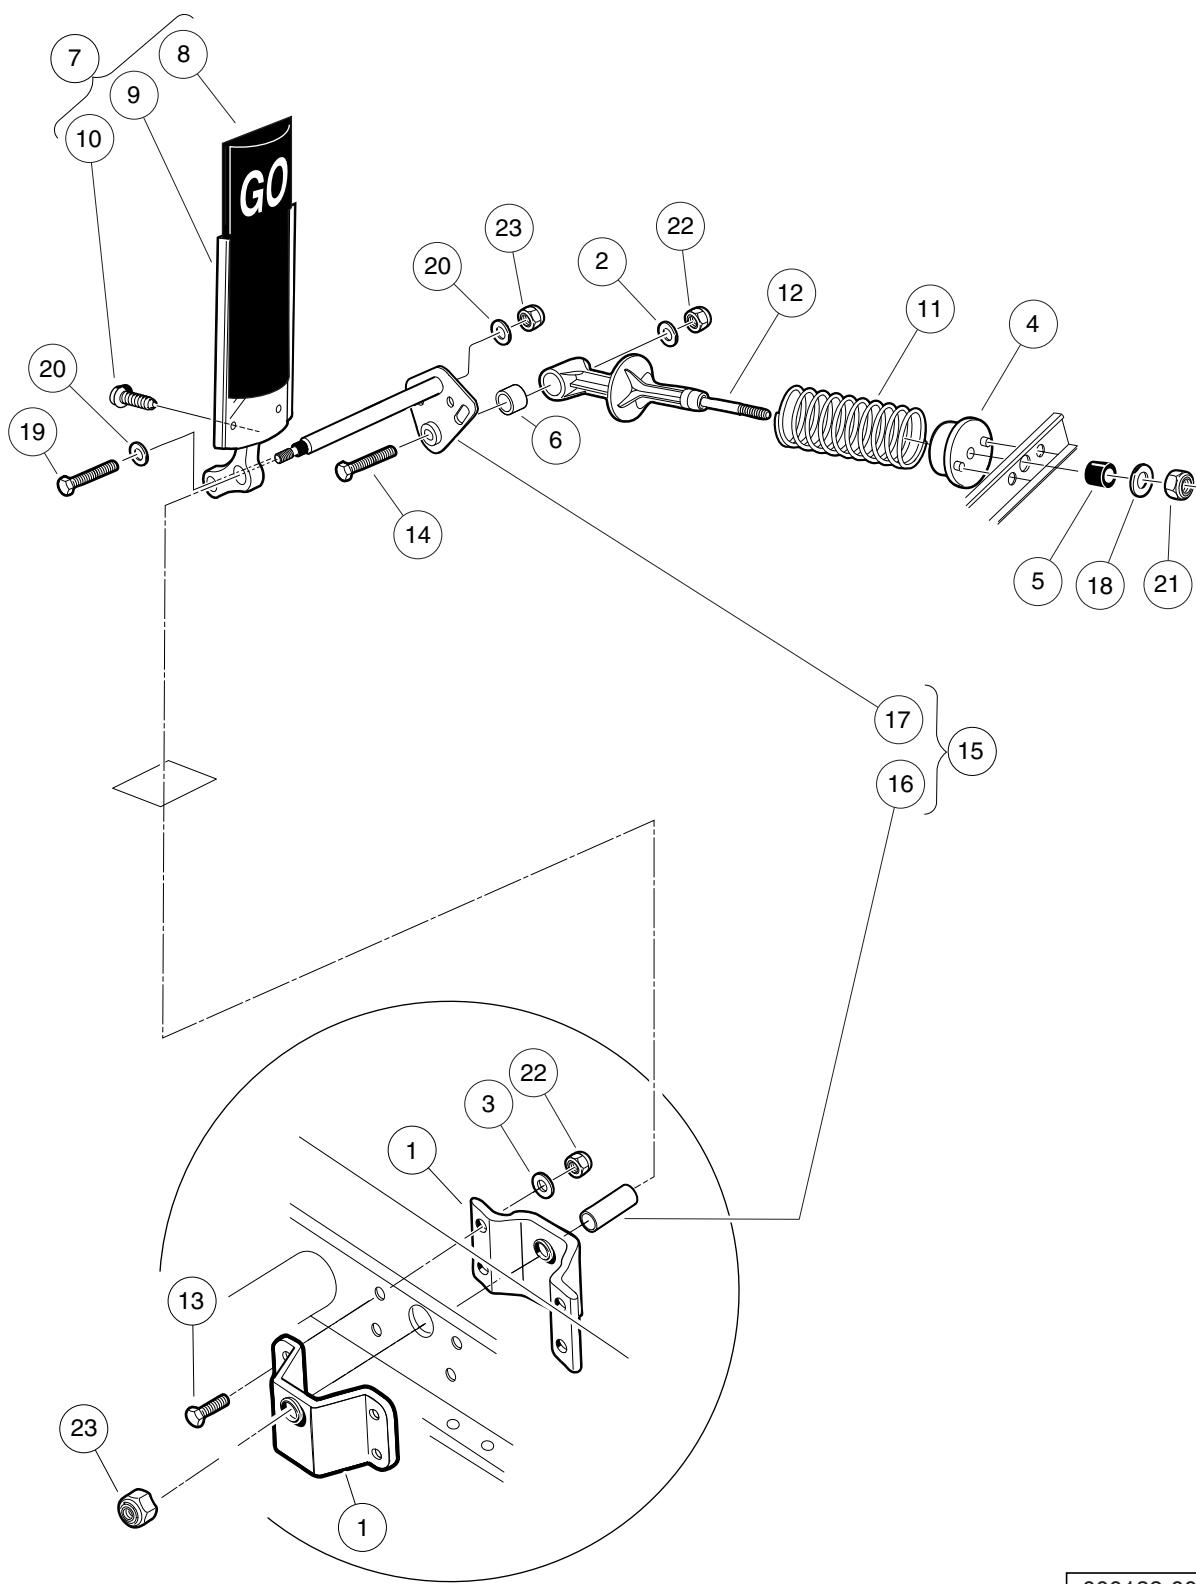
E

5**G****E**

000187-001

BRAKE PEDAL ASSEMBLY

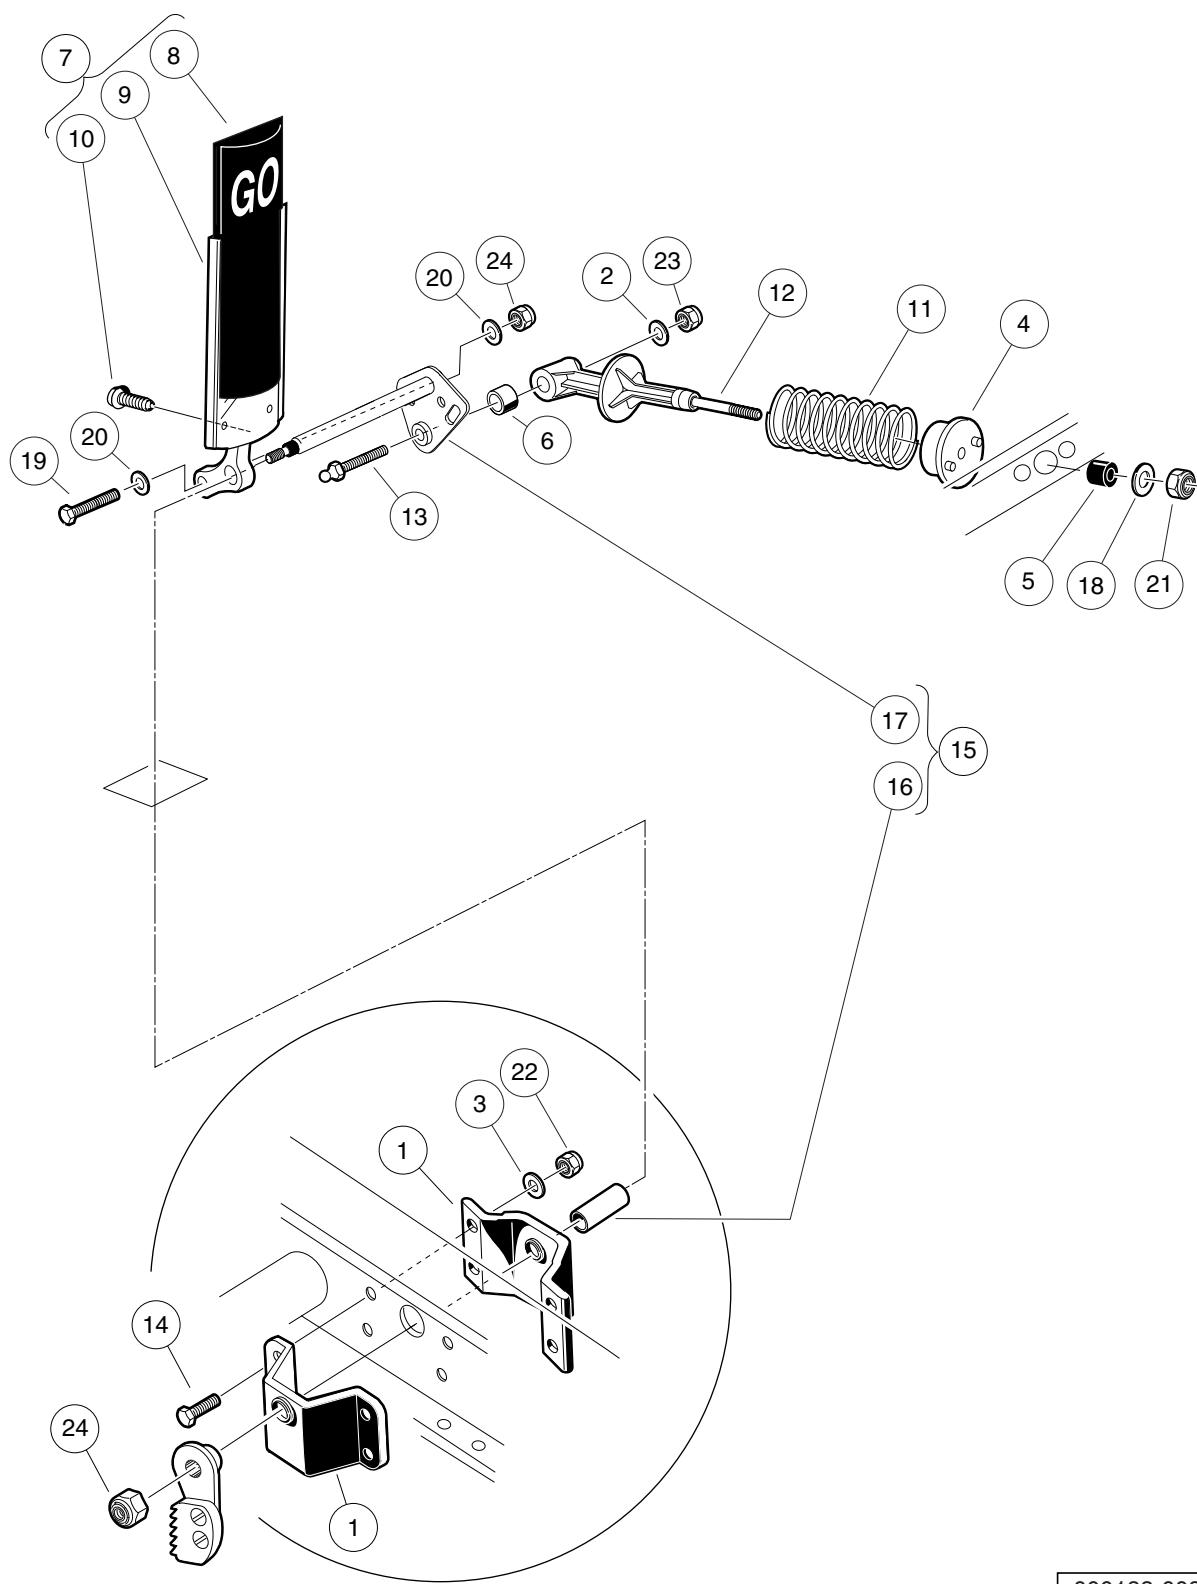
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	5
1	<u>1010878</u>	Bumper, Rubber	1
2	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	4
3	<u>1010927</u>	Hill Brake Spacer	1
4	<u>1010933</u>	Spring, Hill Brake Torsion	1
5	<u>1011402</u>	Package, Brake Mounting Block	1
6	<u>1011418</u>	Kit, Hill Brake Pedal (includes items 7 through 11)	1
7	<u>1013870</u>	Pad, Hill Brake	1
8	<u>1013876</u>	Pushnut, 3/8	1
9	N/A	Hill Brake Weld Assembly	1
10	<u>1032</u>	Bushing, Nylon	2
11	7716	Screw, #10-16 Type AB, Sheet Metal	2
12	<u>101187702</u>	Kit, Hill Brake Latch (includes items 13 through 19)	1
13	<u>1010805</u>	Sleeve, Hill Brake Rod	1
14	<u>1010877</u>	Pushnut, 3/8	1
15	1010932	Ball Joint, 1/4-28	1
16	N/A	Rod, Hill Brake	1
17	<u>1017029</u>	Pin, Cotter, 7/64 x 1/2 Stainless-Steel	1
18	N/A	Pawl, Hill Brake	1
19	101918501	Ratchet Assembly	1
20	<u>101878201</u>	Brake Pedal Kit (includes items 21 through 23)	1
21	<u>1013869</u>	Pad, Brake Pedal	1
22	N/A	Weldment, Brake Pedal, 2wr Std	1
23	7716	Screw, #10-16 Type AB, Sheet Metal	3
24	<u>102323101</u>	Pin, Bow Tie Locking	1
25	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1
26	<u>1028</u>	Nut, 1/4-20 Hex	1
27	<u>1241</u>	Washer, 5/16 Type A Flat	4
28	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4

5**G****E**

000188-007

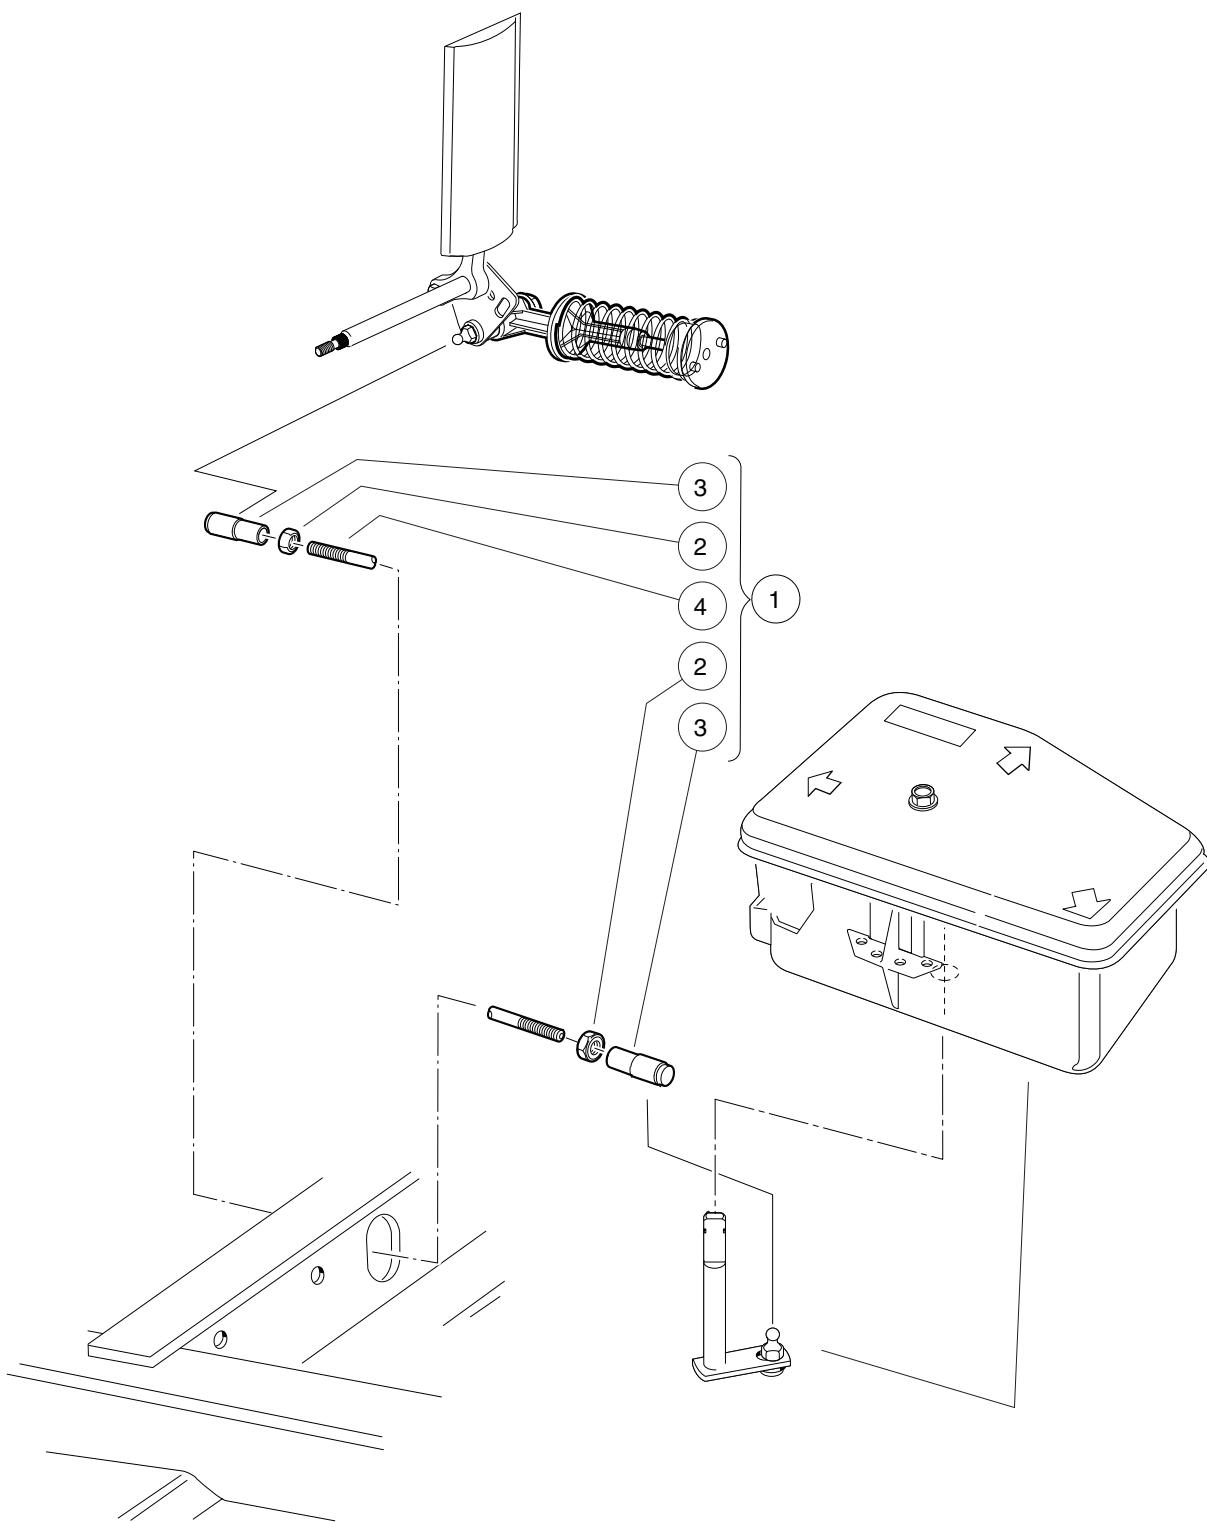
ACCELERATOR PEDAL ASSEMBLY – ELECTRIC VEHICLES WITH MCOR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	5
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2
2	<u>1011931</u>	Washer, 1/4 Flat	1
3	<u>1014007</u>	Washer, 1/4, Flat	4
4	<u>1017378</u>	Cup, Spring	1
5	<u>1017380</u>	Bumper, Spring Return	1
6	<u>1017424</u>	Bearing, Pivot Support	1
7	<u>1017696</u>	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1
8	1013871	Pad, Accelerator Pedal	1
9	N/A	Accelerator Pedal Weldment	1
10	7716	Screw, #10-16 Type AB, Sheet Metal	4
11	101796201	Spring, Accelerator Return	1
12	<u>101817401</u>	Retainer, Spring	1
13	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4
14	<u>101862001</u>	Screw, 1/4-20 X 1.500 Flange	1
15	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 16 and 17)	1
16	101919801	Spacer, Accelerator	1
17	<u>102158901</u>	Pivot Rod Weldment	1
18	<u>1241</u>	Washer, 5/16 Type A Flat	1
19	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	1
20	<u>334</u>	Washer, 3/8, Type A, Flat	2
21	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1
22	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	5
23	<u>8754</u>	Locknut, 3/8-16 Hex	2

5**G****E**

ACCELERATOR PEDAL ASSEMBLY – GASOLINE VEHICLES

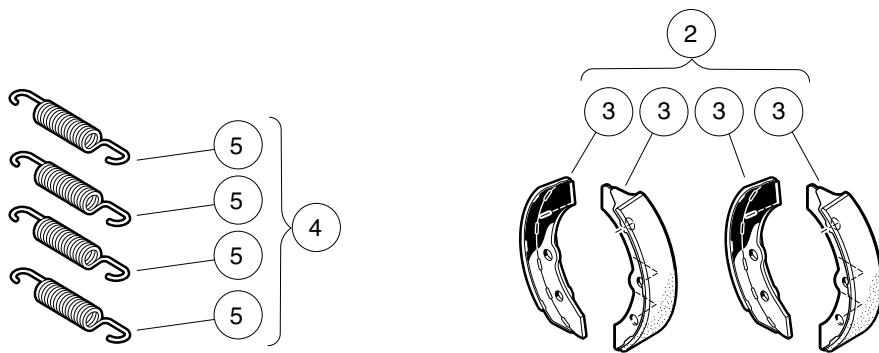
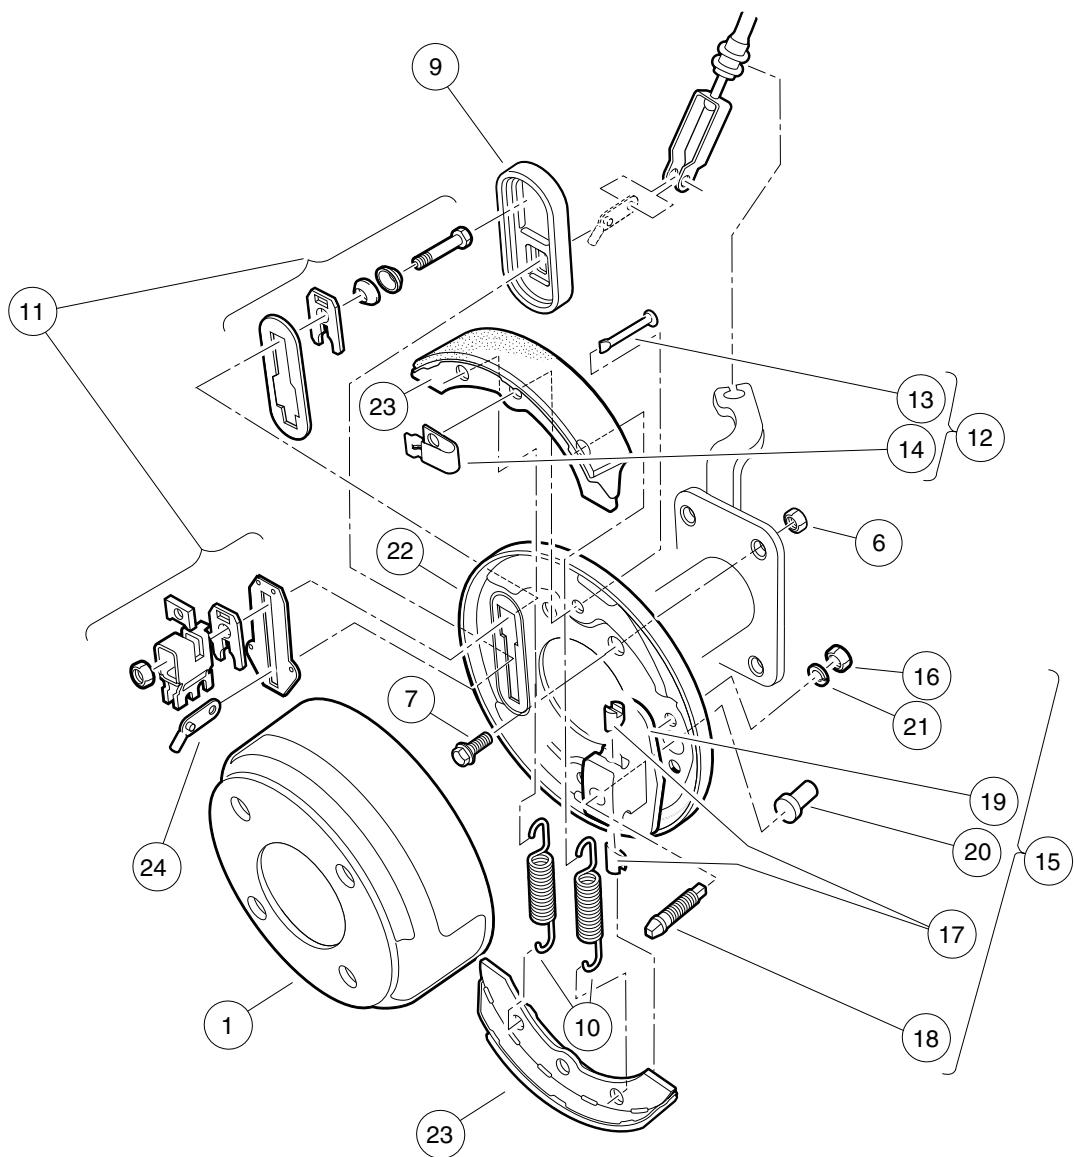
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	5
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2
2	<u>1011931</u>	Washer, 1/4 Flat	1
3	<u>1014007</u>	Washer, 1/4, Flat	4
4	<u>1017378</u>	Cup, Spring	1
5	<u>1017380</u>	Bumper, Spring Return	1
6	<u>1017424</u>	Bearing, Pivot Support	1
7	<u>1017696</u>	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1
8	1013871	Pad, Accelerator Pedal	1
9	N/A	Accelerator Pedal Weldment	1
10	7716	Screw, #10-16 Type AB, Sheet Metal	4
11	101796201	Spring, Accelerator Return	1
12	<u>101817401</u>	Retainer, Spring	1
13	101818801	Stud, 1/4-28 X 1.35 Ball	1
14	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4
15	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 16 and 17)	1
16	101919801	Spacer, Accelerator	1
17	<u>102158901</u>	Pivot Rod Weldment	1
18	<u>1241</u>	Washer, 5/16 Type A Flat	1
19	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	1
20	<u>334</u>	Washer, 3/8, Type A, Flat	2
21	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1
22	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4
23	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1
24	<u>8754</u>	Locknut, 3/8-16 Hex	2

5**G****E**

000362-001

ACCELERATOR ROD AND PEDAL ASSEMBLY – GASOLINE VEHICLES

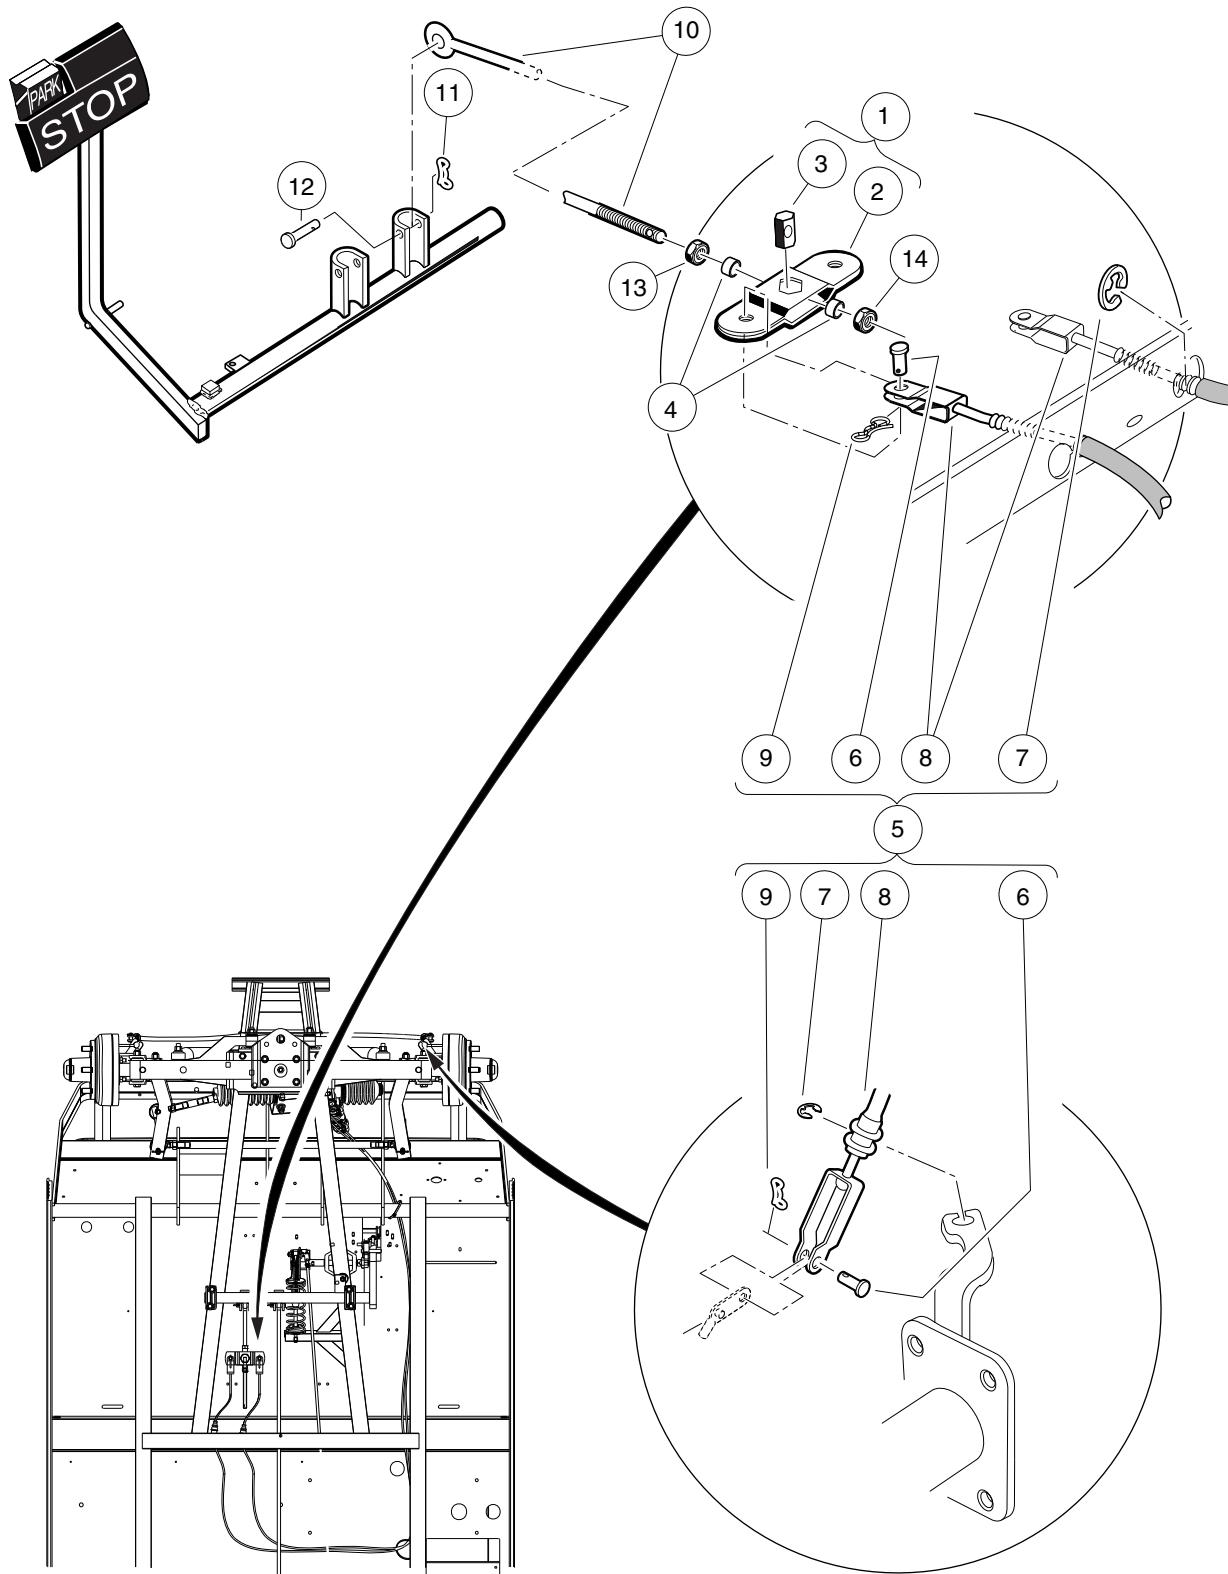
ITEM	PART NO.	DESCRIPTION	QTY
1	<u>101822001</u>	1 2 3 4 Rod, Accelerator (includes items 2 through 4)	1
2	<u>1011084</u>	Nut, 1/4-28 Hex Jam	2
3	<u>1011734</u>	Joint, Ball	2
4	N/A	Accelerator Rod	1

5**G****E**

000298-001

FRONT BRAKE ASSEMBLY – VEHICLES WITH FOUR-WHEEL BRAKES

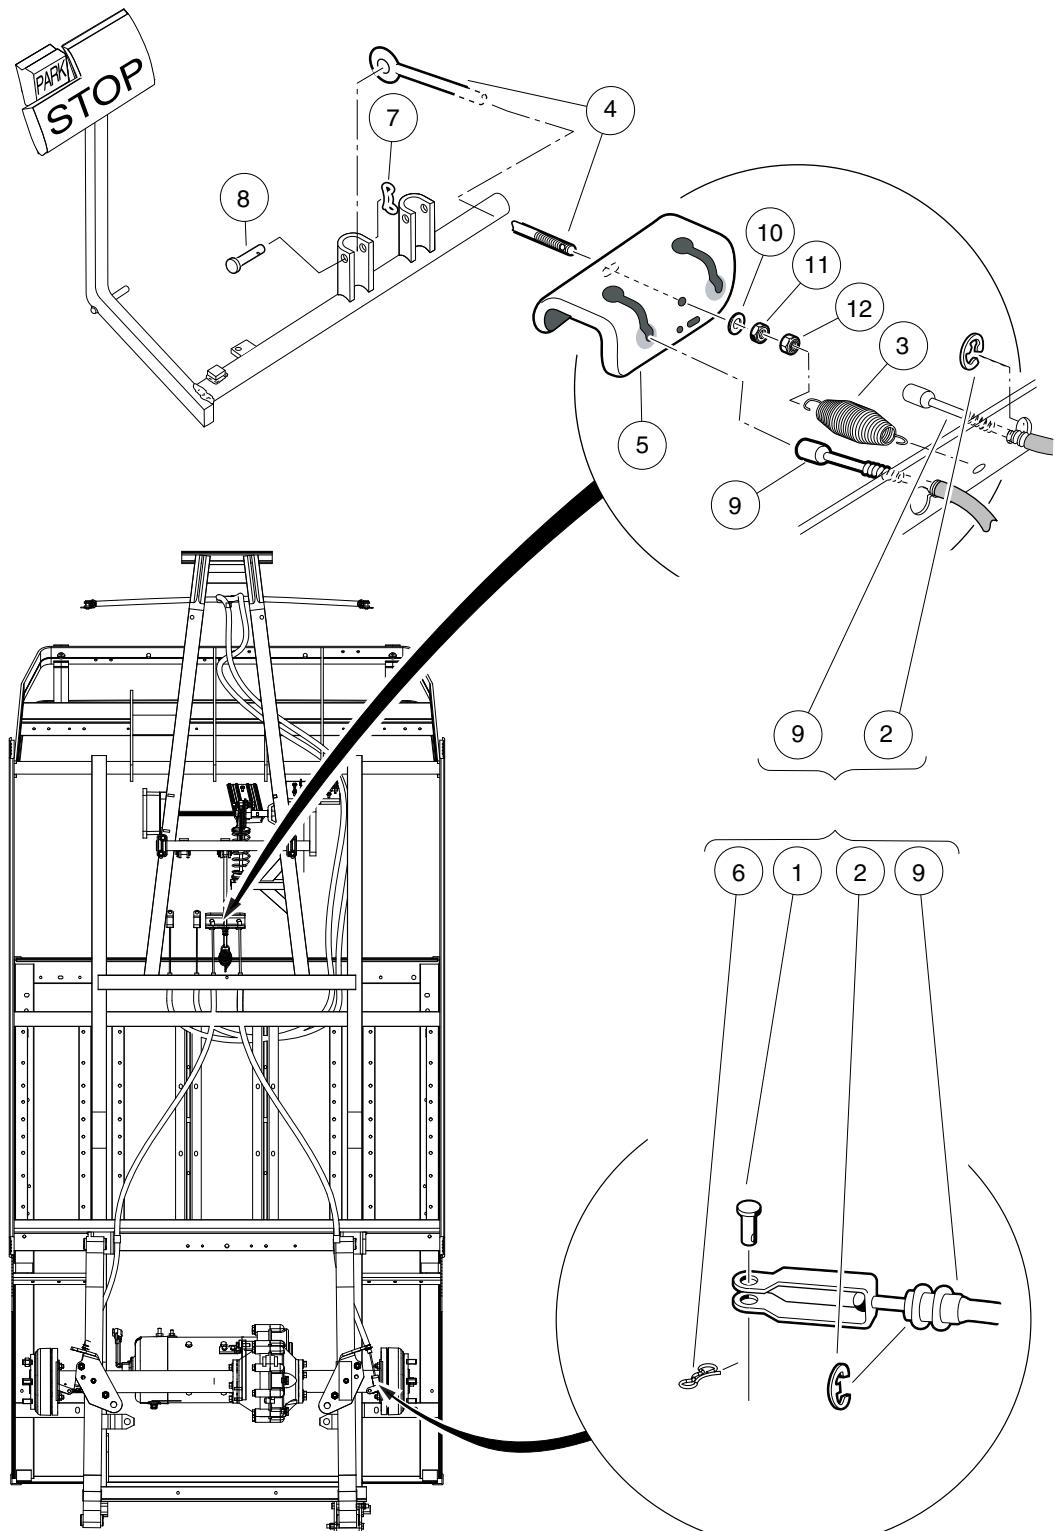
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	5
1	<u>1011137</u>	Drum, Brake	2
2	<u>101146302</u>	Kit, Non-Asbestos Brake Shoe (includes item 3)	1
3	<u>101880701</u>	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	4
4	<u>1011464</u>	Package, Brake Spring (includes item 5)	1
5	<u>1011314</u>	Brake Spring	4
6	<u>1013924</u>	Nut, 5/16-24, Hex Head Cone	8
7	<u>1014153</u>	Bolt, Brake Cluster Mounting	8
8	<u>1016557</u>	Cluster, Brake, Driver-Side (includes items 9 through 24)	1
9	<u>1010850</u>	Dust Cover	1
10	<u>1011314</u>	Brake Spring	2
11	<u>1011465</u>	Kit, Brake Actuator	1
12	<u>1011466</u>	Kit, Shoe Retainer (includes items 13 and 14)	1
13	N/A	Pin	2
14	N/A	Shoe Clamp Spring	2
15	<u>1011467</u>	Kit, Anchor Body (includes items 16 through 21)	1
16	<u>1011114</u>	Nut, M6-1.00 Hex	2
17	<u>1011298</u>	Anchor Piston	2
18	N/A	Adjustment Bolt	1
19	N/A	Anchor Body Component	1
20	<u>1011303</u>	Adjustment Bolt Cap	1
21	<u>451</u>	Lockwasher, 1/4 Split	2
22	<u>1011494</u>	Backing Plate, Left-Hand	1
23	<u>101880701</u>	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2
24	N/A	Arm, Brake Lever	1
25	<u>1016573</u>	Cluster, Brake, Passenger-Side (includes items 26 through 41)	1
26	<u>1010850</u>	Dust Cover	1
27	<u>1011154</u>	Backing Plate, Right-Hand	1
28	<u>1011314</u>	Brake Spring	2
29	<u>1011465</u>	Kit, Brake Actuator	1
30	<u>1011466</u>	Kit, Shoe Retainer (includes items 31 and 32)	1
31	N/A	Pin	2
32	N/A	Shoe Clamp Spring	2
33	<u>1011467</u>	Kit, Anchor Body (includes items 34 through 39)	1
34	<u>1011114</u>	Nut, M6-1.00 Hex	2
35	<u>1011298</u>	Anchor Piston	2
36	N/A	Adjustment Bolt	1
37	N/A	Anchor Body Component	1
38	<u>1011303</u>	Adjustment Bolt Cap	1
39	<u>451</u>	Lockwasher, 1/4 Split	2
40	<u>101880701</u>	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2
41	N/A	Arm, Brake Lever	1
		Note: Passenger-side brake cluster not shown. Components have a similar appearance to driver-side brake cluster components.	

5**G****E**

000294-001

FRONT BRAKE CABLES AND EQUALIZER – VEHICLES WITH FOUR-WHEEL BRAKES

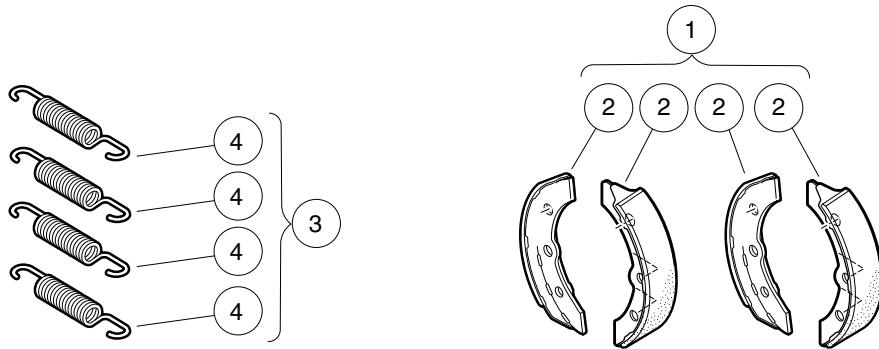
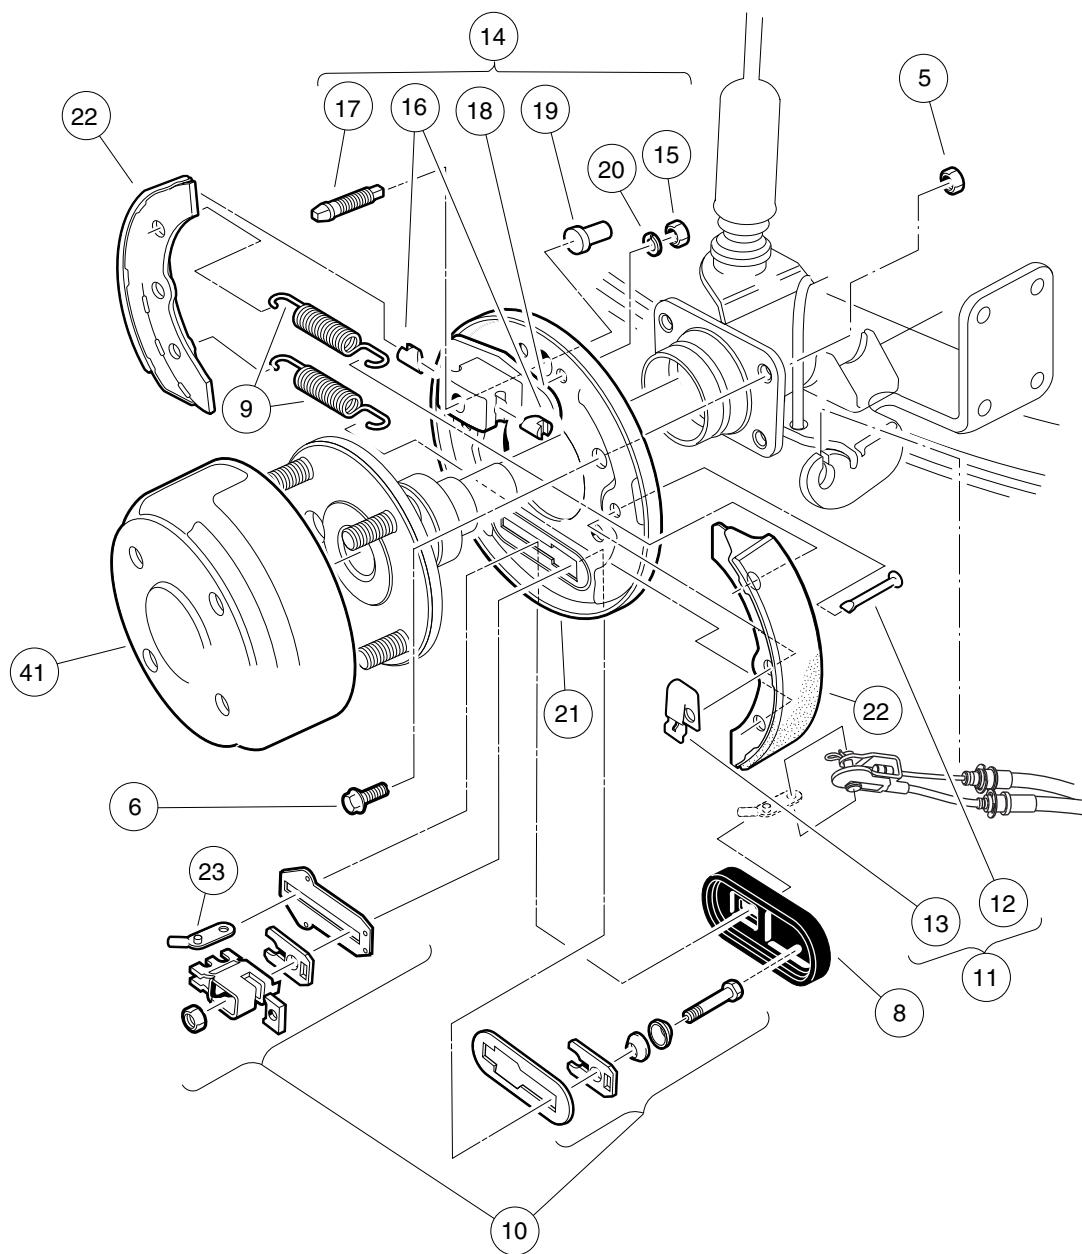
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	5
1	<u>1017211</u>	Kit, Equalizer and Pivot Limiter (includes items 2 and 3)	1
2	1016319	Equalizer Weld Assembly	1
3	1016320	Equalizer, Pivot Limiter	1
4	<u>101865301</u>	Spacer	2
5	<u>101874601</u>	Kit, Brake Cable (includes items 6 through 9)	1
6	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	4
7	<u>1011779</u>	E-Clip, 1/2	4
8	N/A	Brake Cable	2
9	<u>102292801</u>	Pin, Bow Tie Locking - .072	4
10	<u>101953106</u>	Rod, Equalizer, 9.75"	1
11	<u>102323101</u>	Pin, Bow Tie Locking	1
12	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1
13	<u>1242</u>	Nut, 5/16-18 Hex	1
14	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1

5**G****E**

000295-002

REAR BRAKE CABLES AND EQUALIZER – VEHICLES WITH 4-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	5
1	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	2
2	<u>1011779</u>	E-Clip, 1/2	4
3	<u>1013531</u>	Spring, Brake Return	1
4	<u>101953106</u>	Rod, Equalizer, 9.75"	1
5	<u>101990801</u>	Equalizer Bracket	1
6	<u>102292801</u>	Pin, Bow Tie Locking - .072	2
7	<u>102323101</u>	Pin, Bow Tie Locking	1
8	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1
9	<u>102852101</u>	Cable, Brake, 51-inch, Right	2
10	<u>1241</u>	Washer, 5/16 Type A Flat	1
11	<u>1242</u>	Nut, 5/16-18 Hex	1
12	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1

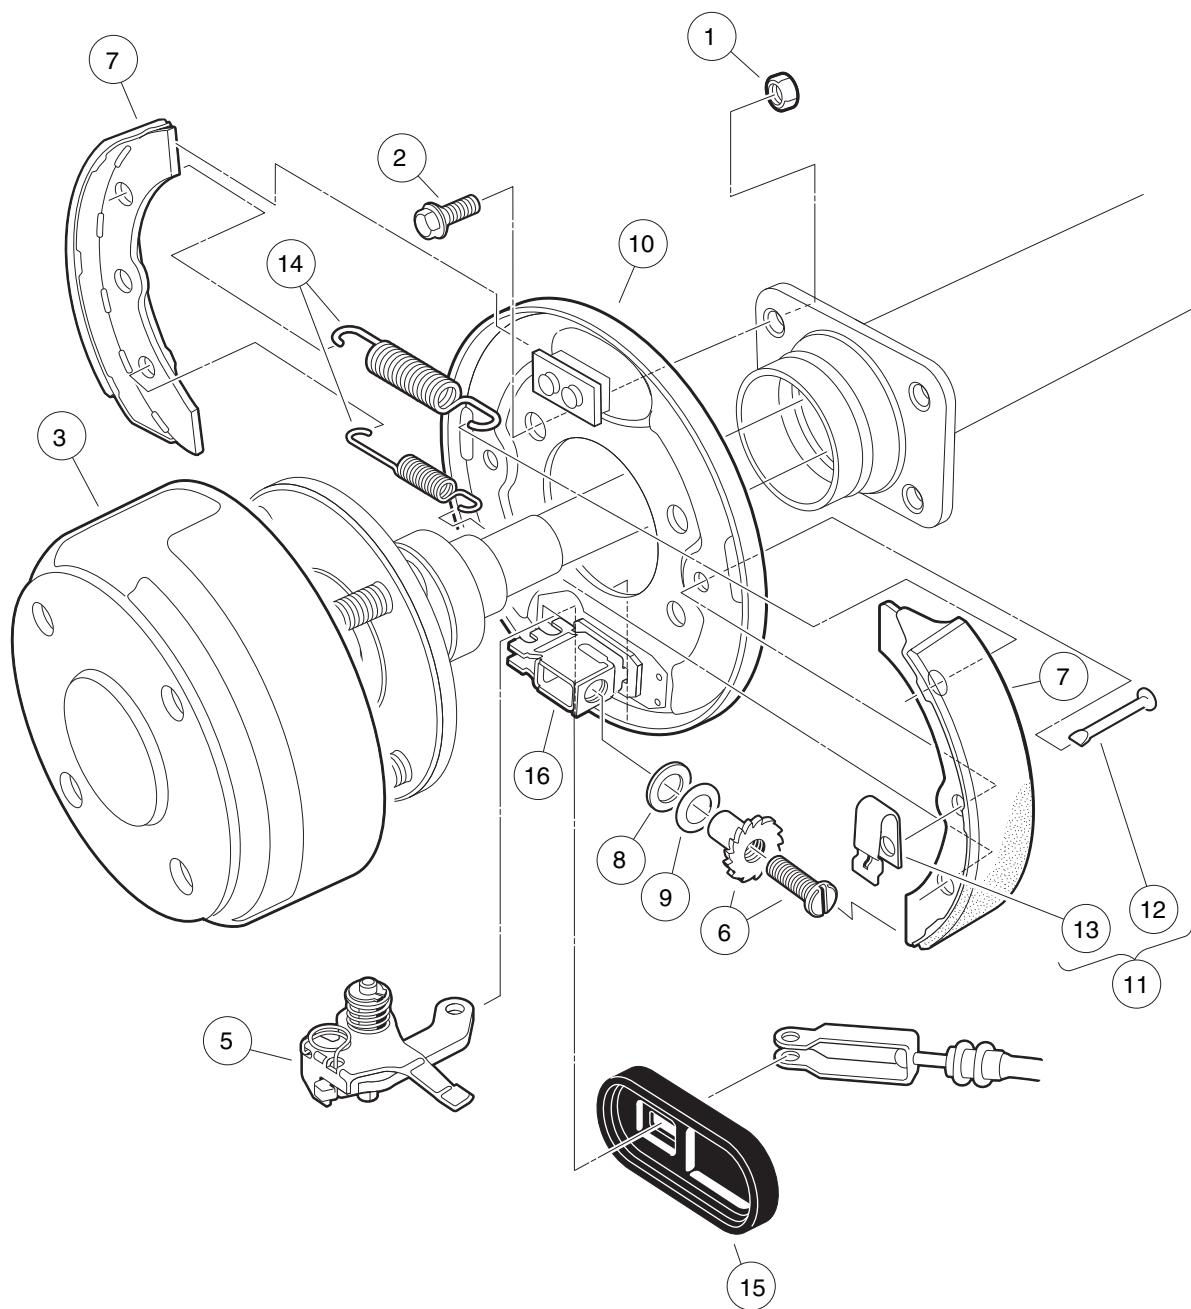
5**G****E**

000293-002

REAR BRAKE ASSEMBLY, MANUALLY-ADJUSTED – VEHICLES WITH 4-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101146302</u>	Kit, Non-Asbestos Brake Shoe (includes item 2)	1
2	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	4
3	<u>1011464</u>	Package, Brake Spring (includes item 4)	1
4	<u>1011314</u>	Brake Spring	4
5	<u>1013924</u>	Nut, 5/16-24, Hex Head Cone	8
6	<u>1014153</u>	Bolt, Brake Cluster Mounting	8
7	<u>1016557</u>	Cluster, Brake, Driver-Side (includes items 8 through 23)	1
8	<u>1010850</u>	Dust Cover	1
9	1011314	Brake Spring	2
10	<u>1011465</u>	Kit, Brake Actuator	1
11	<u>1011466</u>	Kit, Shoe Retainer (includes items 12 and 13)	1
12	N/A	Pin	2
13	N/A	Shoe Clamp Spring	2
14	<u>1011467</u>	Kit, Anchor Body (includes items 15 through 20)	1
15	<u>1011114</u>	Nut, M6-1.00 Hex	2
16	1011298	Anchor Piston	2
17	N/A	Adjustment Bolt	1
18	N/A	Anchor Body Component	1
19	<u>1011303</u>	Adjustment Bolt Cap	1
20	<u>451</u>	Lockwasher, 1/4 Split	2
21	1011494	Backing Plate, Left-Hand	1
22	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2
23	N/A	Arm, Brake Lever	1
24	<u>1016573</u>	Cluster, Brake, Passenger-Side (includes items 25 through 40)	1
25	<u>1010850</u>	Dust Cover	1
26	<u>1011154</u>	Backing Plate, Right-Hand	1
27	1011314	Brake Spring	2
28	<u>1011465</u>	Kit, Brake Actuator	1
29	<u>1011466</u>	Kit, Shoe Retainer (includes items 30 and 31)	1
30	N/A	Pin	2
31	N/A	Shoe Clamp Spring	2
32	<u>1011467</u>	Kit, Anchor Body (includes items 33 through 38)	1
33	<u>1011114</u>	Nut, M6-1.00 Hex	2
34	1011298	Anchor Piston	2
35	N/A	Adjustment Bolt	1
36	N/A	Anchor Body Component	1
37	<u>1011303</u>	Adjustment Bolt Cap	1
38	<u>451</u>	Lockwasher, 1/4 Split	2
39	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2
40	N/A	Arm, Brake Lever	1
41	<u>101791101</u>	Drum without Center Hole, Brake	2
		Note: Passenger-side brake cluster not shown. Components have a similar appearance to driver-side brake cluster components.	

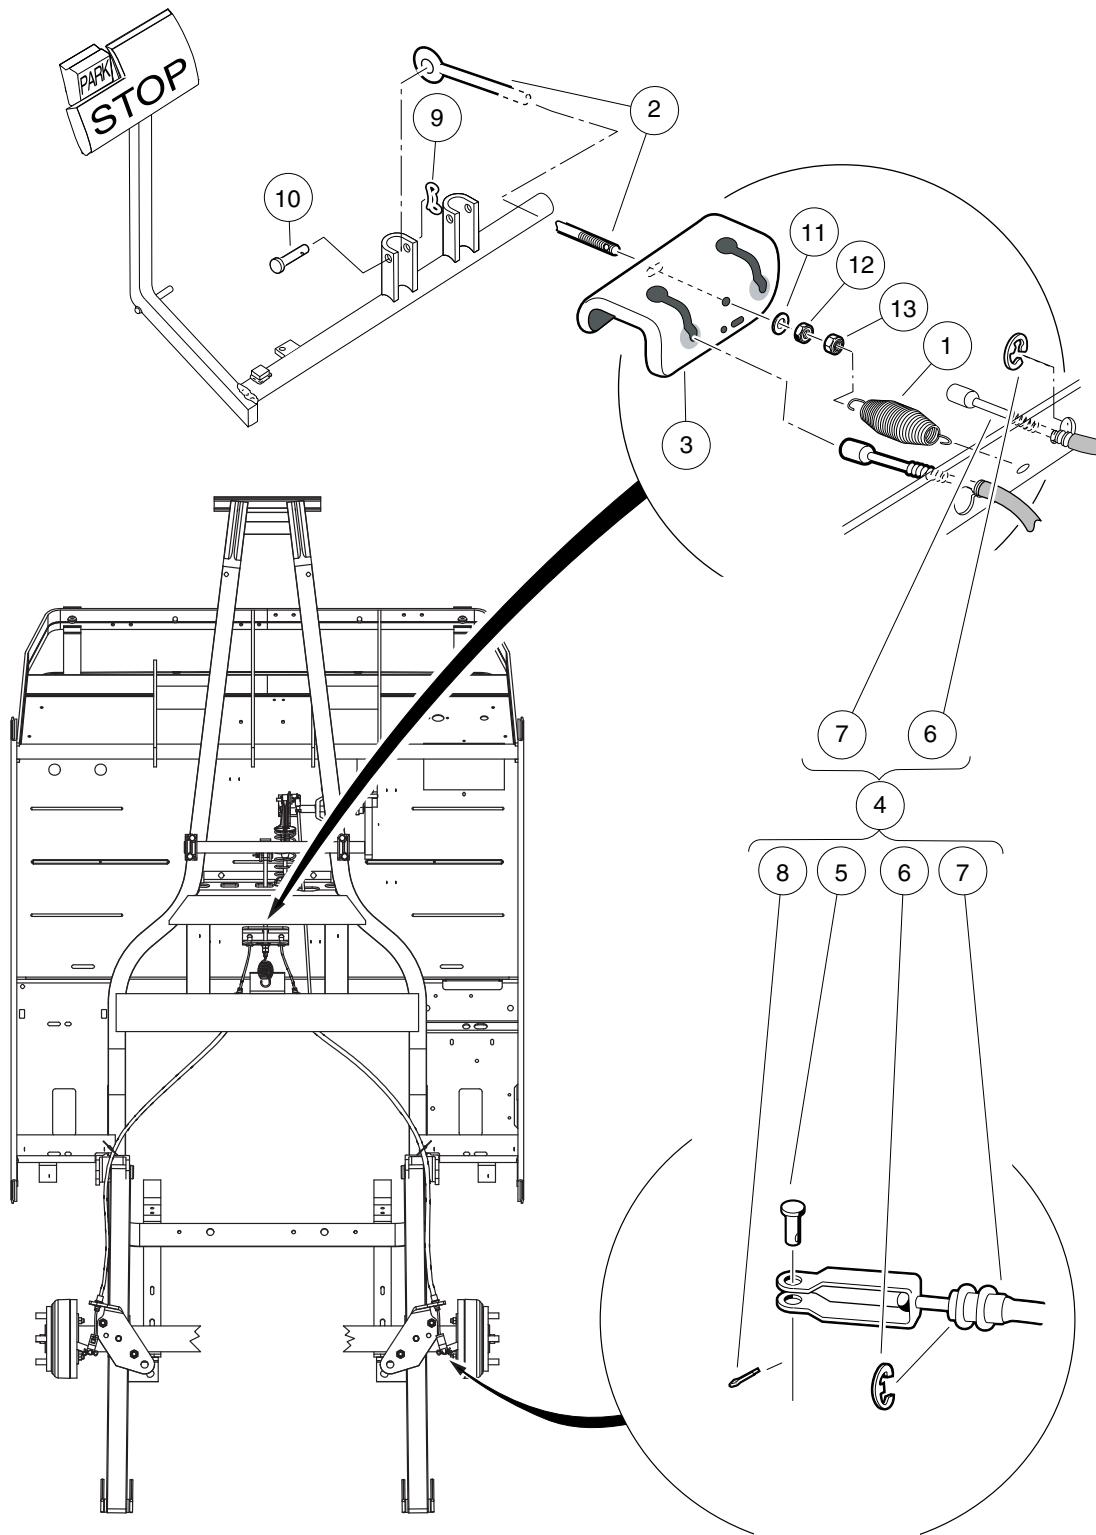
5
G
E

5**G****E**

000186-003

REAR BRAKE ASSEMBLY, SELF-ADJUSTING – VEHICLE WITH 2-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	5
1	<u>1013924</u>	Nut, 5/16-24, Hex Head Cone	8
2	<u>1014153</u>	Bolt, Brake Cluster Mounting	8
3	<u>101791101</u>	Drum without Center Hole, Brake	2
4	<u>103380201</u>	Asm, Brake Cluster, Mech, Drvr (includes items 5 through 16)	1
5	<u>101815502</u>	Lever Assembly, Self-Adjusting Brake, Left	1
6	<u>101816502</u>	Adjusting Mechanism, Self-Adjusting Brake, Left	1
7	<u>101823201</u>	Package, Brake Shoe, Self-Adjusting	1
8	<u>101823801</u>	Plate, Washer, Brake, Self-Adjusting	1
9	<u>101823901</u>	Washer, Brake, Self-Adjusting	1
10	<u>103483102</u>	Back Plate, Lh	1
11	<u>103483201</u>	Kit, Shoe Retainer (includes items 12 and 13)	1
12	N/A	Pin	2
13	N/A	Spring, Shoe, Clamp	2
14	<u>103483401</u>	Package Brake Spring Self Adj	1
15	<u>103483601</u>	Cover, Dust	1
16	<u>103483701</u>	Brake Block	1
17	<u>103380202</u>	Asm, Brake Cluster, Mech, Pass (includes items 18 through 29)	1
18	<u>101815501</u>	Lever Assembly, Self-Adjusting Brake, Right (Passenger)	1
19	<u>101816501</u>	Adj Mechanism, S.A. Brakes, Right (Passenger)	1
20	<u>101823201</u>	Package, Brake Shoe, Self-Adjusting	1
21	<u>101823801</u>	Plate, Washer, Brake, Self-Adjusting	1
22	<u>101823901</u>	Washer, Brake, Self-Adjusting	1
23	<u>103483101</u>	Back Plate, Rh	1
24	<u>103483201</u>	Kit, Shoe Retainer (includes items 25 and 26)	1
25	N/A	Pin	2
26	N/A	Spring, Shoe, Clamp	2
27	<u>103483401</u>	Package Brake Spring Self Adj	1
28	<u>103483601</u>	Cover, Dust	1
29	<u>103483701</u>	Brake Block	1
		Note: Passenger-side brake cluster not shown. Components have a similar appearance to driver-side brake cluster components. 1033802 brake cluster assemblies are backward compatible but individual parts that do not share part numbers with 1018233 are not.	

5**G****E**

000296-001

REAR BRAKE CABLES AND EQUALIZER – VEHICLES WITH TWO-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	5
1	<u>1013531</u>	Spring, Brake Return	1
2	<u>101953102</u>	Rod, Equalizer, 20.91 inch	1
3	<u>101990801</u>	Equalizer Bracket	1
4	<u>102022101</u>	Brake Cable Kit (includes items 5 through 8)	2
5	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	1
6	<u>1011779</u>	E-Clip, 1/2	2
7	N/A	Cable, Brake, 41"	1
8	<u>102292801</u>	Pin, Bow Tie Locking - .072	1
9	<u>102323101</u>	Pin, Bow Tie Locking	1
10	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1
11	<u>1241</u>	Washer, 5/16 Type A Flat	1
12	<u>1242</u>	Nut, 5/16-18 Hex	1
13	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1

5

G

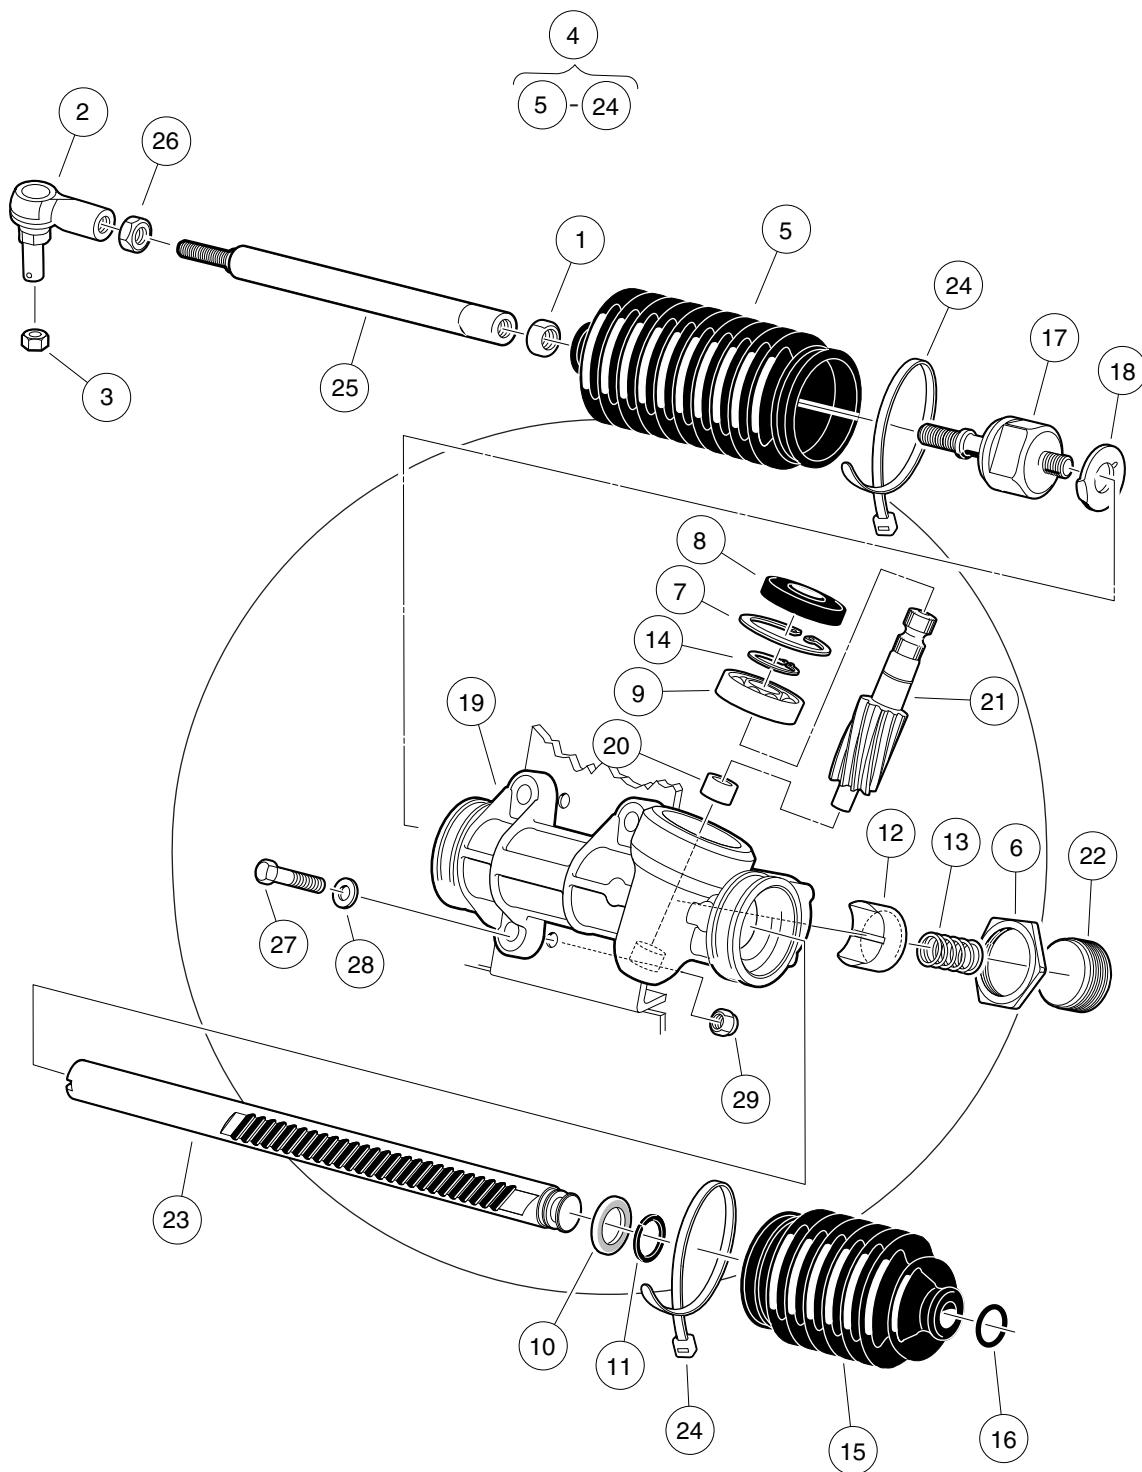
E

STEERING AND SUSPENSIONS – TURF/CA 2 & 2 PLUS

6

G

E

6**G****E**

001500-002

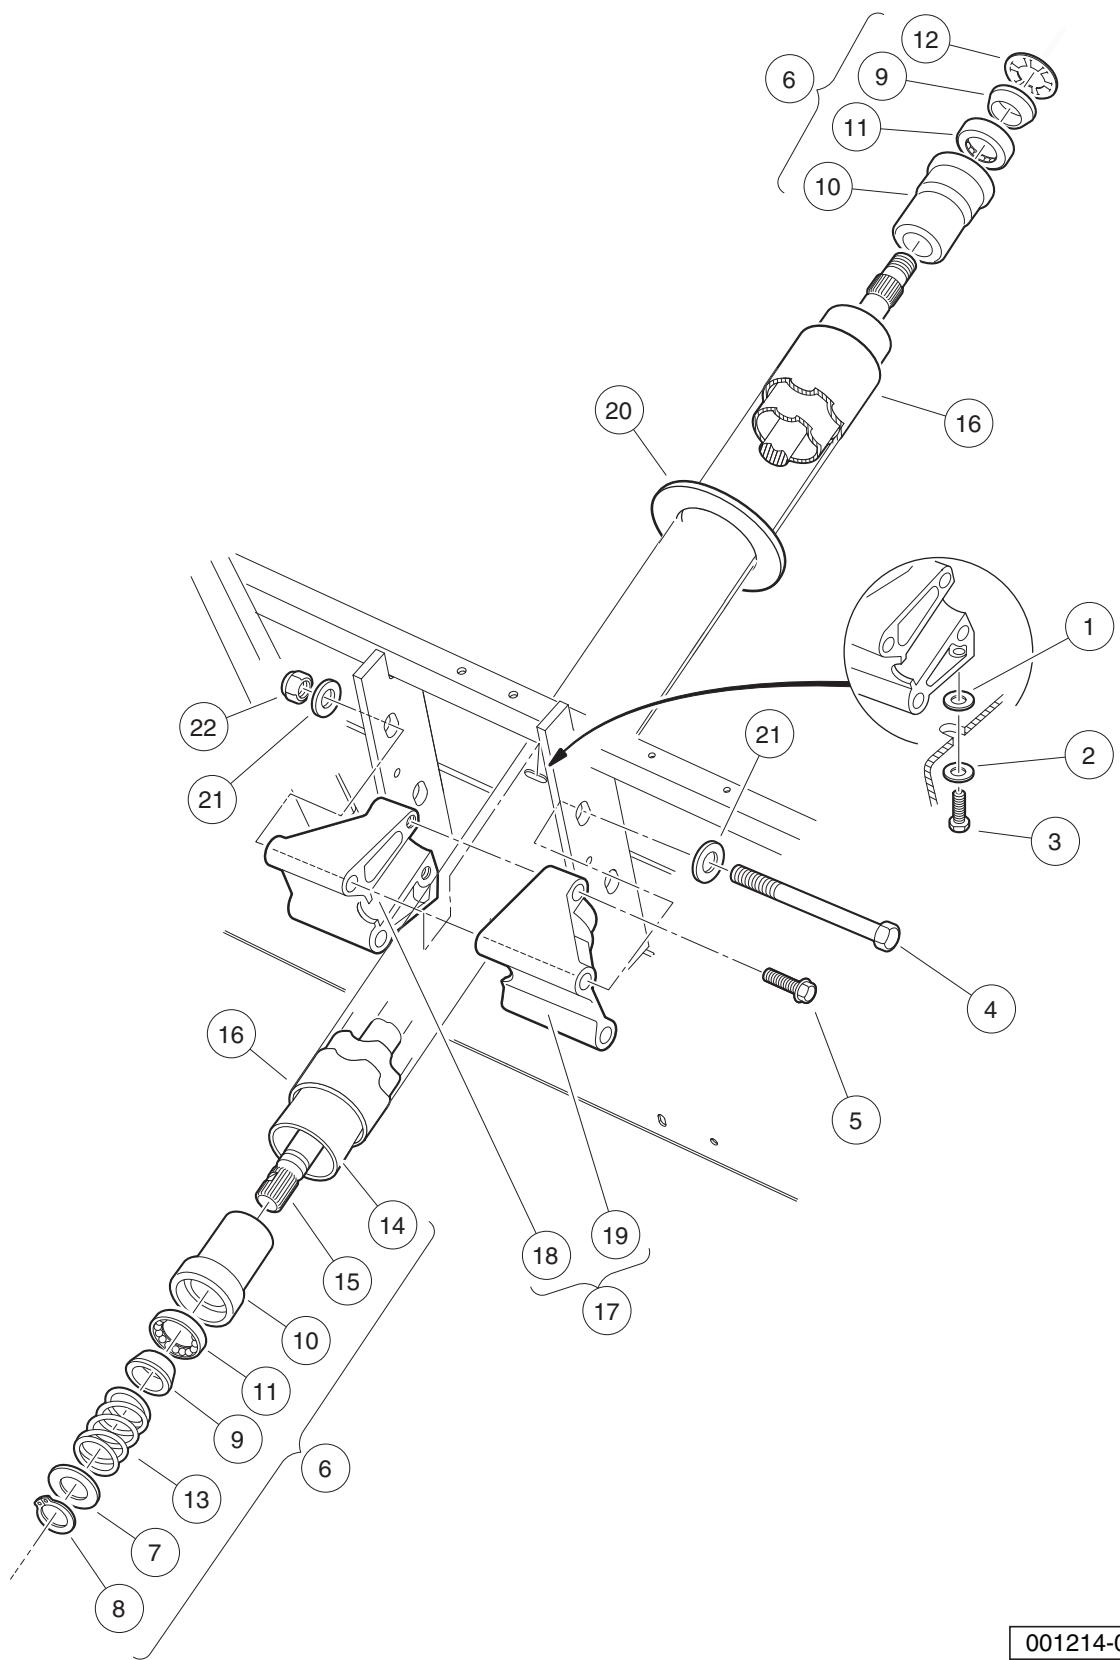
STEERING GEAR ASSEMBLY (WANDA) – MAINT.-FREE BALL JOINT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013042</u>	Nut, 12mm Hex	1
2	<u>102022602</u>	End, Tie Rod, M12 X 1.25, Lh	1
3	<u>102289201</u>	Nut - Hex Locking, M12 X 1.25	1
4	<u>103601501</u>	Asm, Steering Rack And Pinion (includes items 5 through 24)	1
5	<u>1013035</u>	Bellows, Long	1
6	<u>1013044</u>	Rack Screw Locknut	1
7	N/A	Snap Ring	1
8	<u>1013052</u>	Seal, Steering Pinion Dust	1
9	<u>101879401</u>	Bearing, Ball	1
10	<u>101879501</u>	Stop Washer	1
11	<u>101879601</u>	Stop Ring, C-Type	1
12	<u>101879701</u>	Support Yoke	1
13	<u>101879801</u>	Rack Guide Pressure Spring	1
14	<u>101879901</u>	Ring, Stop, C-Type	1
15	<u>101880001</u>	Bellows, Short	1
16	<u>101880101</u>	Dust Seal Retaining Ring	1
17	<u>101880201</u>	Inner Ball Joint Asm	1
18	<u>101880301</u>	Washer, Tab	1
19	N/A	Box, Steering Gear	1
20	N/A	Bearing, Lower Pinion	1
21	N/A	Pinion, Steering	1
22	N/A	Screw, Rack Guide	1
23	N/A	Rack, Steering	1
24	<u>8990</u>	Tie Wrap, 8" Nylon	2
25	<u>103653401</u>	Link, Drag, Male Thd	1
26	<u>103653501</u>	Nut, Jam, M12-1.25, Lh	1
27	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	3
28	<u>334</u>	Washer, 3/8, Type A, Flat	3
29	<u>8754</u>	Locknut, 3/8-16 Hex	3

6

G

E

6**G****E**

001214-001

STEERING COLUMN – UTILITY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011578</u>	Washer, 5/16 Type B Flat	1
2	<u>1011697</u>	Washer, 5/16 Flat	1
3	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	1
4	<u>1016183</u>	Screw, 3/8-16 X 7.00 Hex Cap	2
5	<u>1016269</u>	Screw, 5/16-18 Thrd Forming	2
6	<u>1017313</u>	Steering Shaft Assembly (includes items 7 through 15)	1
7	<u>1012604</u>	Washer, 0.675 ID X 1.19 OD	1
8	<u>1012605</u>	Ring, 0.579 Internal Retaining	1
9	<u>1014125</u>	Wedge, Molded	2
10	<u>1014126</u>	Seat, Plastic Bearing	2
11	<u>1014213</u>	Bearing, Ball	2
12	<u>1014214</u>	Ring, Retaining	1
13	<u>1014217</u>	Spring, Steering Shaft	1
14	<u>1017314</u>	Column, Aluminum Steering	1
15	<u>1017315</u>	Shaft Steering Column	1
16	<u>1017317</u>	Tube Cover, Steering Column	1
17	101984801	Kit, Steering Column Mounting Bracket (includes items 18 and 19)	1
18	N/A	Bracket, RH Steering Column Mount	1
19	N/A	Bracket, LH Steering column mount	1
20	<u>102278001</u>	Boot, Steering Column Round	1
21	<u>334</u>	Washer, 3/8, Type A, Flat	4
22	<u>8754</u>	Locknut, 3/8-16 Hex	2

6

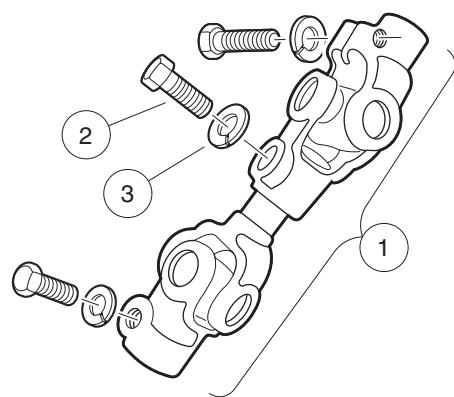
G

E

6

G

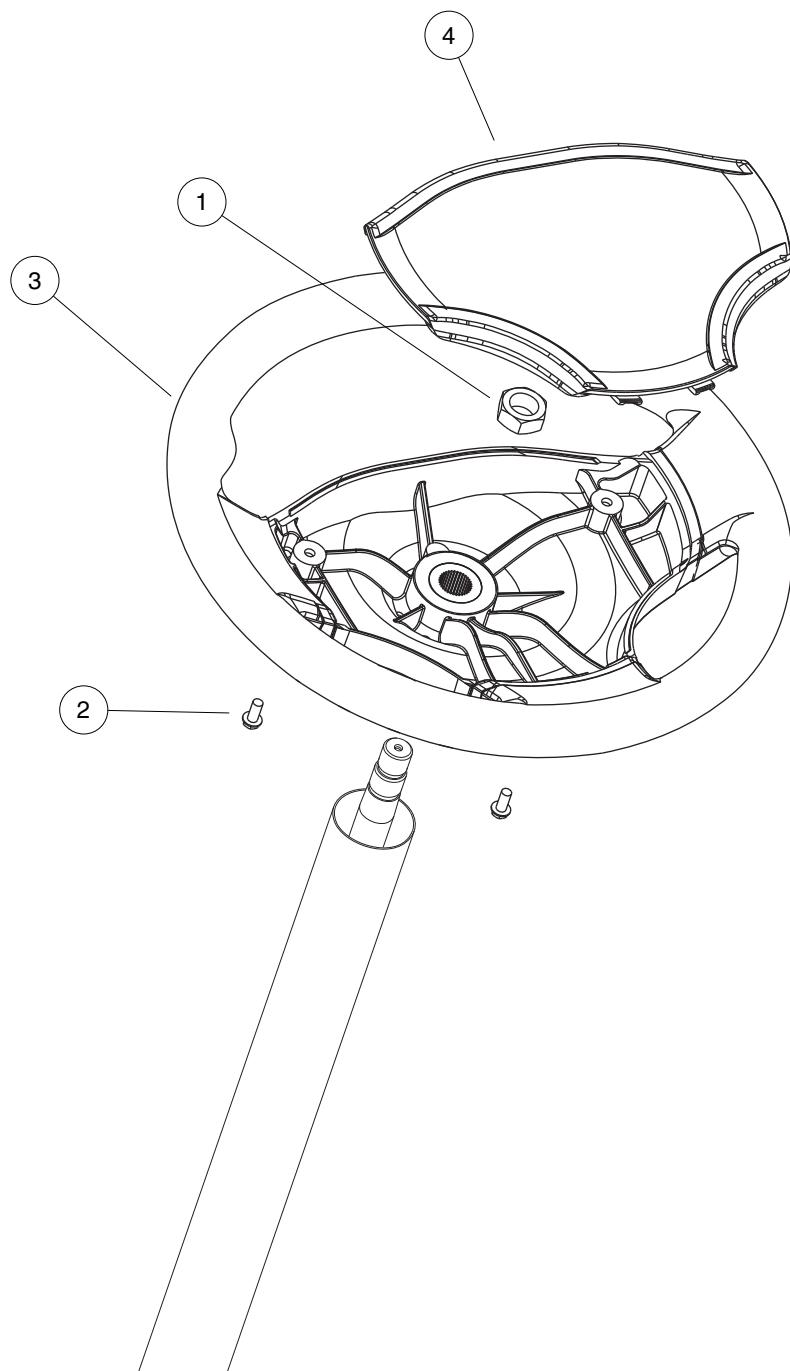
E



001217-001

INTERMEDIATE STEERING SHAFT (WANDA) – TURF/CA 1/2/6

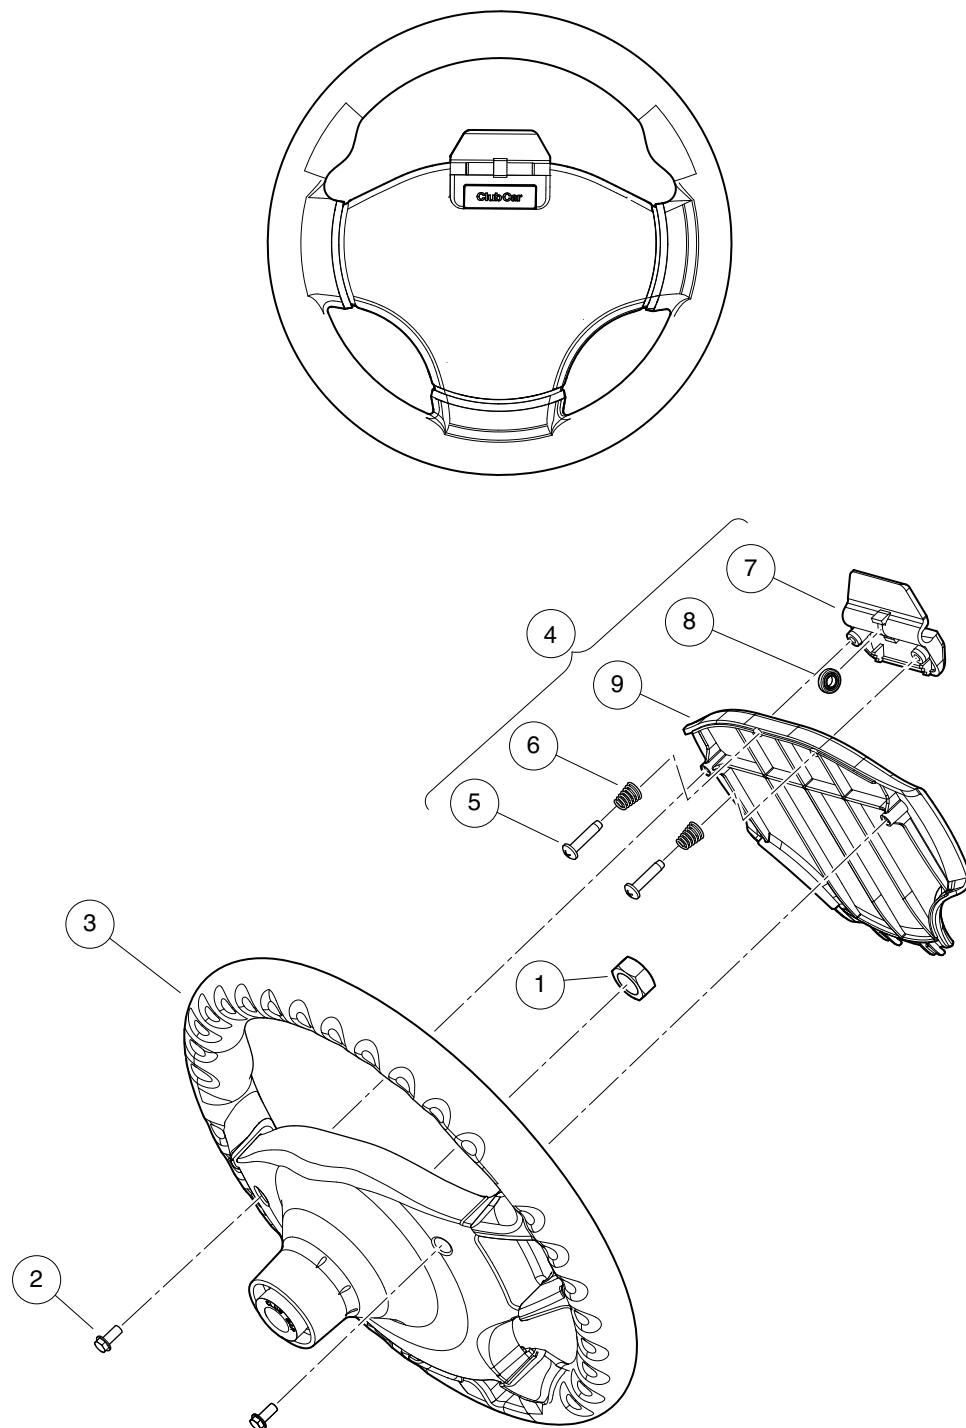
ITEM	PART NO.	DESCRIPTION	QTY
1	<u>103601601</u>	1 2 3 4 Shaft, Intermediate Steering (includes items 2 and 3)	1
2	<u>1017226</u>	Bolt, Hex-Head, 8mm X 1.25 - 30	3
3	<u>7174</u>	Lockwasher, 5/16 Split	3

6**G****E**

000246-007

STEERING WHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1017273</u>	Nut, 5/8-18 Nylon Insert Jam	1
2	<u>101850301</u>	Screw, #12-16 X 0.50 Washer-Head Hi-Lo	2
3	<u>103724502</u>	Wheel, Steering, Splined	1
4	<u>103724602</u>	Cover, Steering Wheel, Generic	1

6**G****E**

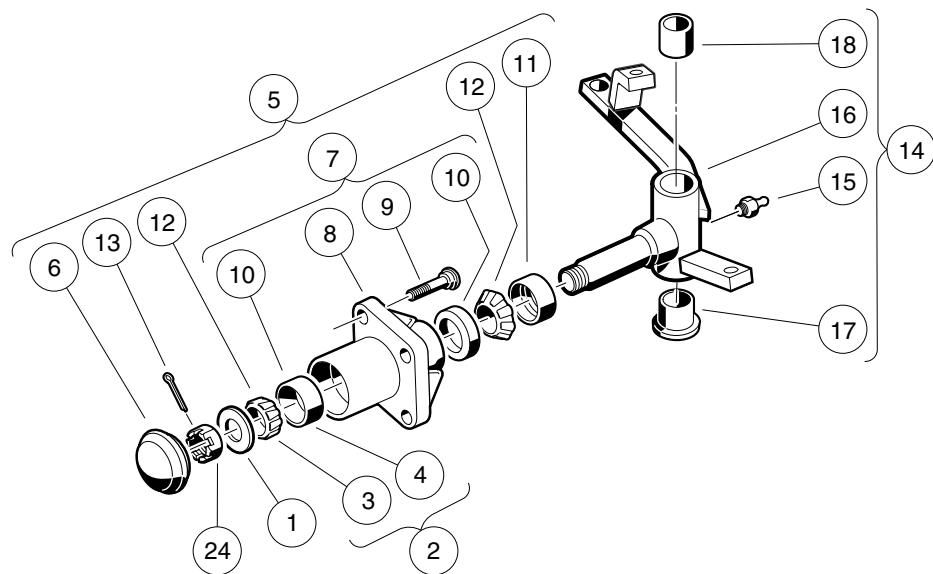
001504-001

STEERING WHEEL WITH CLIP

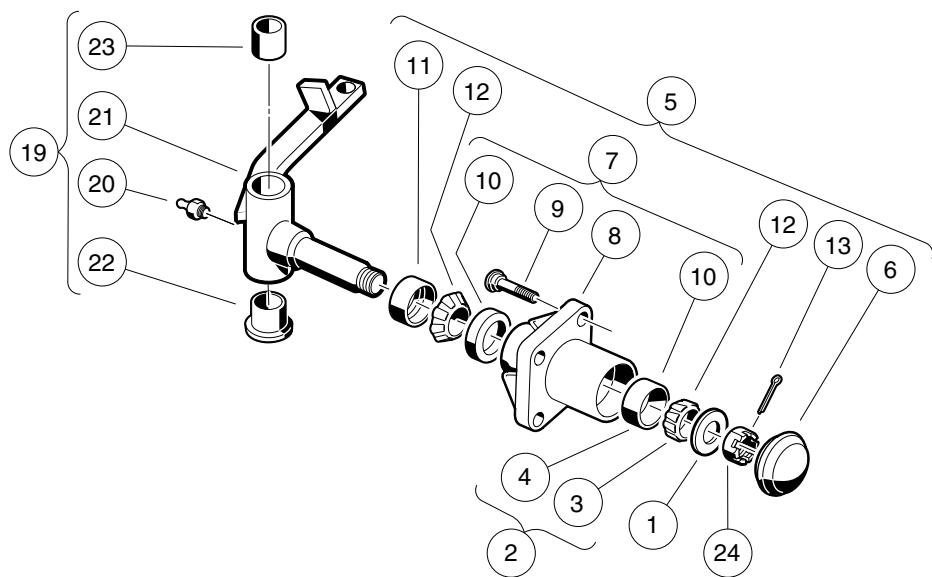
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1017273</u>	Nut, 5/8-18 Nylon Insert Jam	1
2	<u>101850301</u>	Screw, #12-16 X 0.50 Washer-Head Hi-Lo	2
3	<u>103724502</u>	Wheel, Steering, Splined	1
4	<u>103724901</u>	Asm, Scorecard, Clip (includes items 5 through 9)	1
5	<u>1012565</u>	Screw, #12 Phillips Round Head	2
6	<u>1012566</u>	Tapered Compression Spring	2
7	<u>1016154</u>	Clip, Scorecard	1
8	<u>1016214</u>	Pencil Grip	1
9	103724601	Cover, Steering Wheel, Clip	1

6**G****E**

PASSENGER SIDE



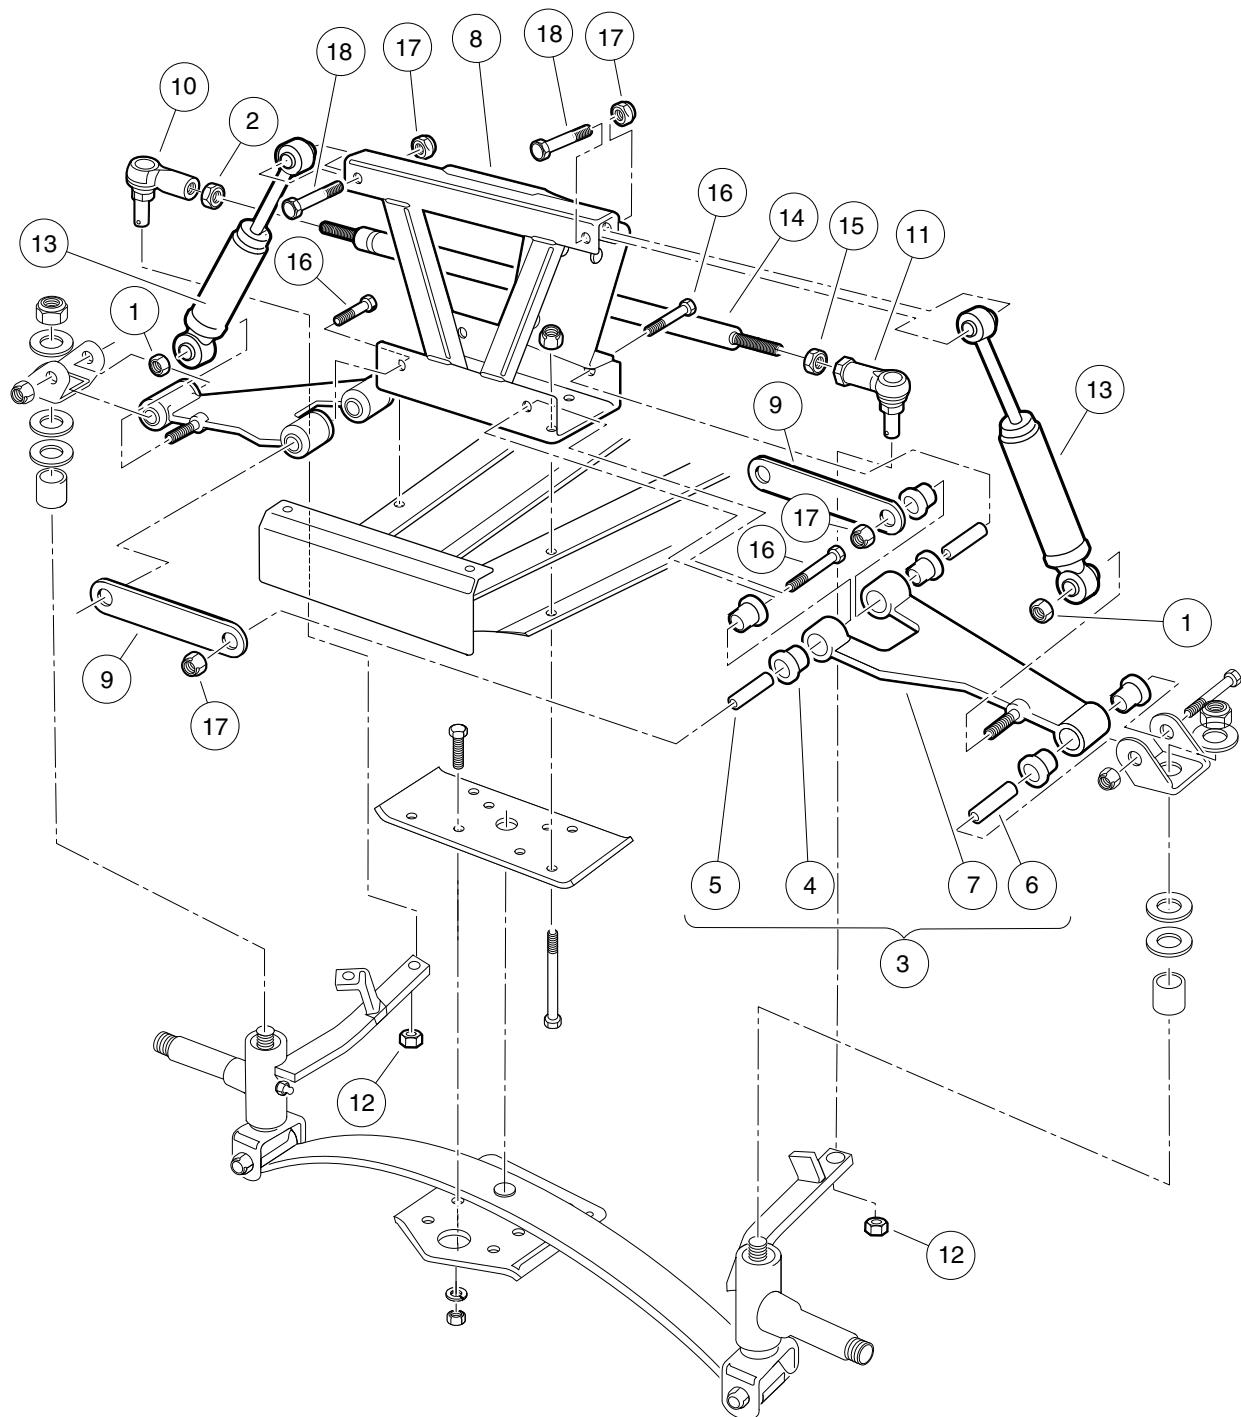
DRIVER SIDE



001104-001

FRONT SPINDLES AND HUBS – VEHICLES WITH TWO-WHEEL BRAKES AND MAINTENANCE-FREE BALL JOINTS

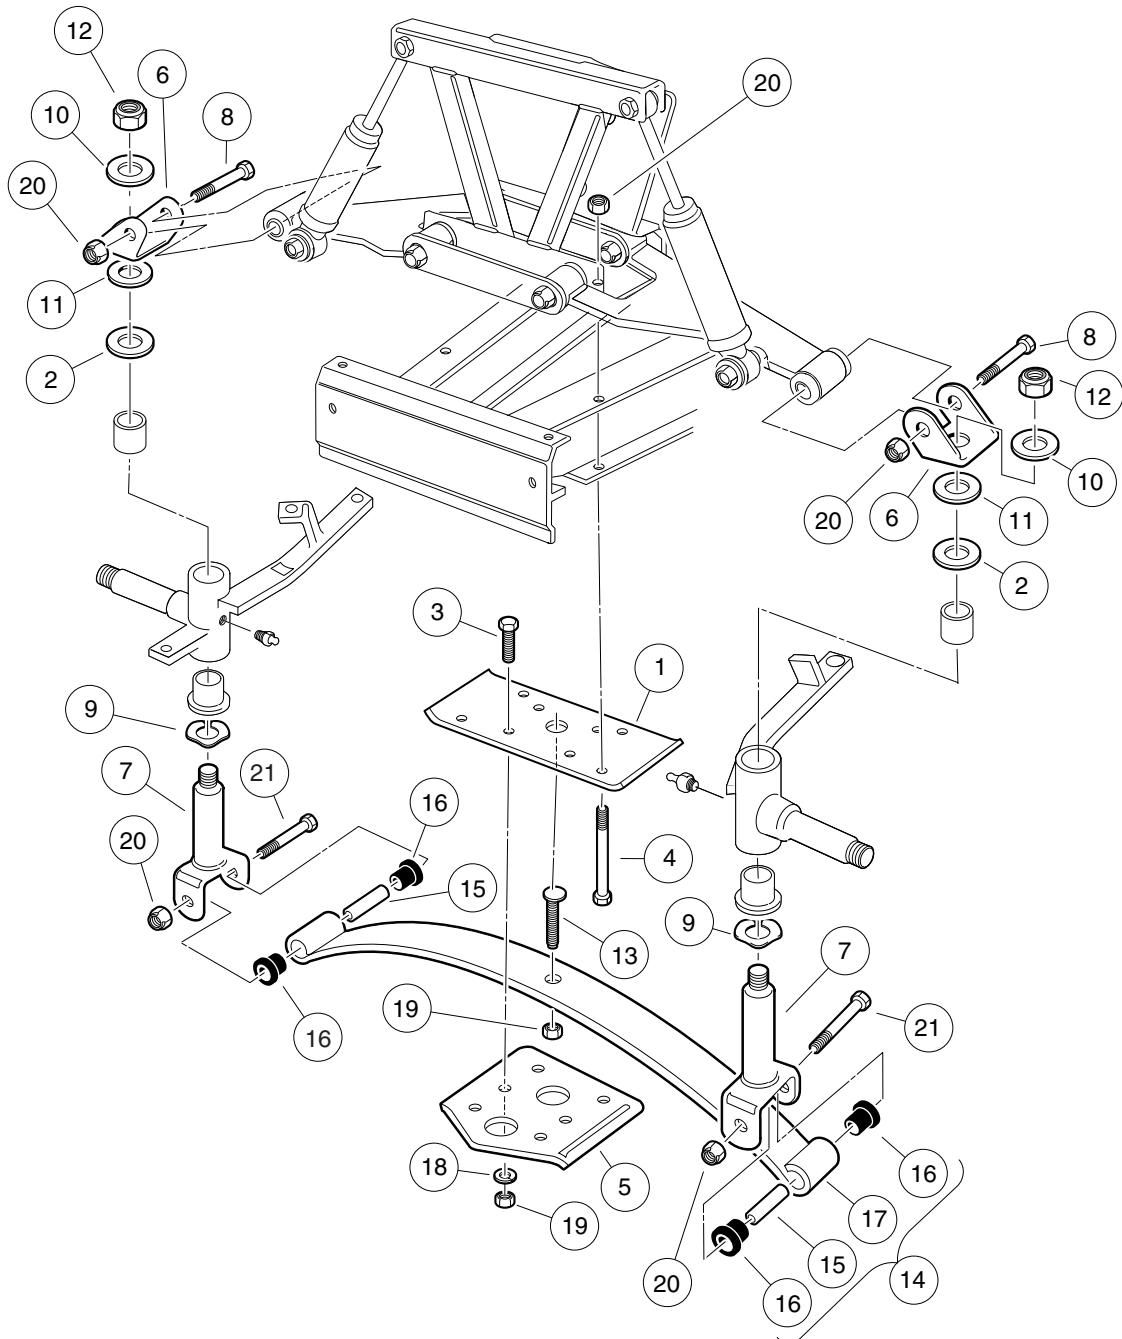
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	6
1	<u>1010005</u>	Washer, 3/4 Flat	2
2	<u>1011393</u>	Hub Bearing Package (includes items 3 and 4)	4
3	7274	Bearing, Front Hub Wheel	1
4	7308	Race, Front Hub Bearing	1
5	<u>1011892</u>	Hub Assembly (includes items 6 through 13)	2
6	<u>1011887</u>	Dust Cover	1
7	N/A	Hub (includes items 8 through 10)	1
8	N/A	Front Hub	1
9	<u>103477901</u>	Lug Stud, 1/2-20 Unf, 4037	4
10	7308	Race, Front Hub Bearing	2
11	<u>1013135</u>	Seal, Double Lip	1
12	7274	Bearing, Front Hub Wheel	2
13	<u>7910</u>	Pin, 5/32 X 1.00 Cotter	1
14	<u>103665902</u>	Asm, Spindle, Rh, 2wb, Sp (includes items 15 through 18)	1
15	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1
16	N/A	Subasm, Spndle, Rh, 2wb	1
17	<u>7048</u>	Bushing, Flanged Bronze	1
18	<u>8067</u>	Bushing, Bronze Spindle	1
19	<u>103666002</u>	Asm, Spindle, Lh, 2wb, Sp (includes items 20 through 23)	1
20	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1
21	N/A	Subasm, Spndle, Lh, 2wb	1
22	<u>7048</u>	Bushing, Flanged Bronze	1
23	<u>8067</u>	Bushing, Bronze Spindle	1
24	<u>7840</u>	Nut, 3/4-16 Hex Slotted	2

6**G****E**

001105-001

FRONT SUSPENSION, UPPER – VEHICLES WITH TWO-WHEEL BRAKES AND MAINTENANCE-FREE BALL JOINTS

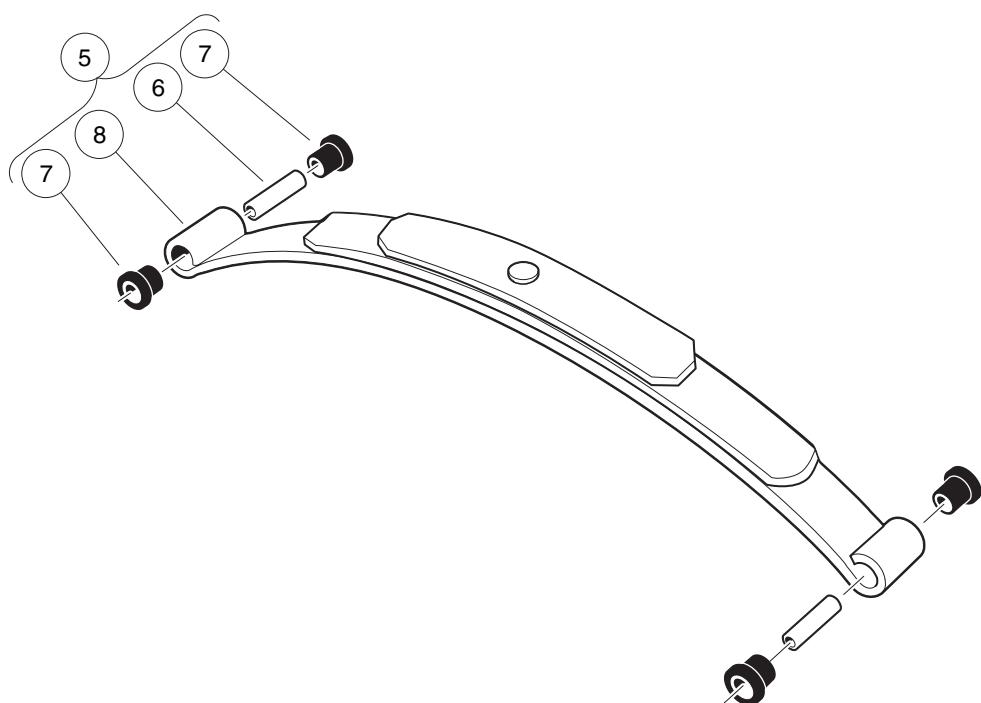
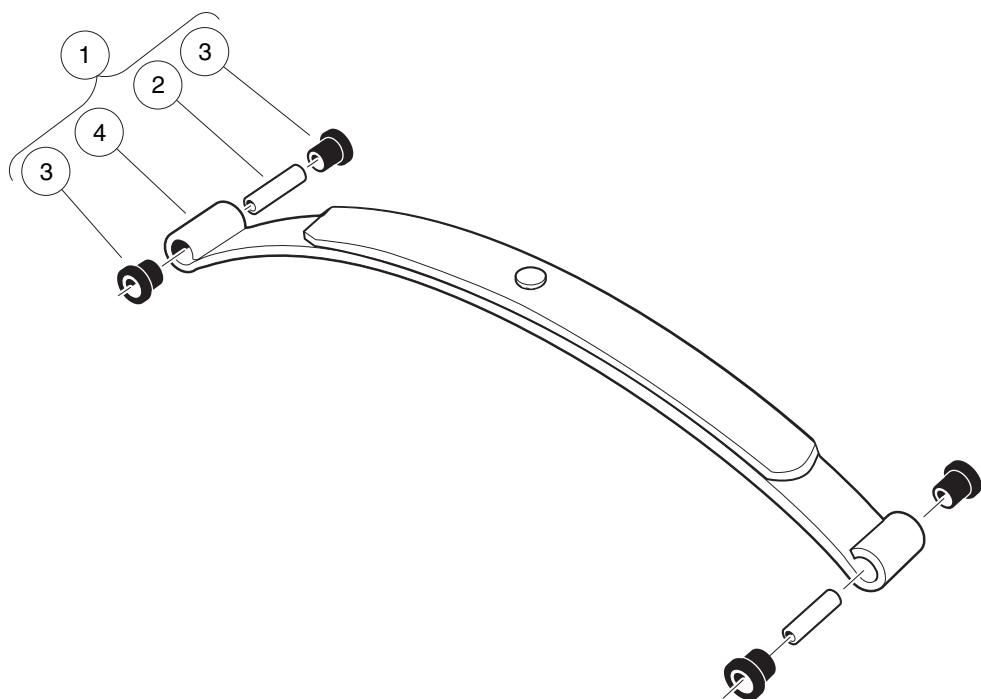
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	6
1	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2
2	<u>1013042</u>	Nut, 12mm Hex	1
3	<u>1016353</u>	Sub-Assembly, Delta A-Plate (includes items 4 through 7)	2
4	<u>1016346</u>	Bushing, Urethane	6
5	<u>1016349</u>	Sleeve, Delta Inner	2
6	<u>1016350</u>	Sleeve, Delta Outer	1
7	<u>1016351</u>	Delta A-Plate	1
8	<u>1016385</u>	Delta Shock and Gear Support Assembly	1
9	<u>1017266</u>	A-Plate Strap	2
10	<u>102022601</u>	End, Tie Rod M12 X 1.25 Rh	1
11	<u>102022602</u>	End, Tie Rod, M12 X 1.25, Lh	1
12	<u>102289201</u>	Nut - Hex Locking, M12 X 1.25	2
13	<u>103351001</u>	Shock Absorber, Front, Common	2
14	<u>103354701</u>	Rod, Tie, Male Thd	1
15	<u>103653501</u>	Nut, Jam, M12-1.25, Lh	1
16	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4
17	<u>8754</u>	Locknut, 3/8-16 Hex	6
18	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	2

6**G****E**

001106-001

FRONT SUSPENSION, LOWER – VEHICLES WITH TWO-WHEEL BRAKES AND MAINTENANCE-FREE BALL JOINTS

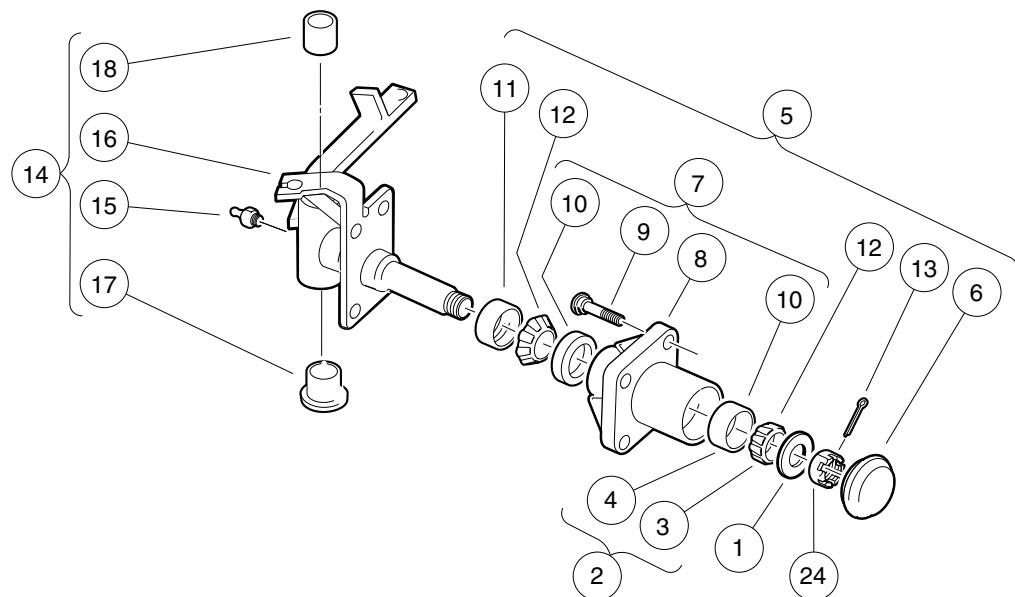
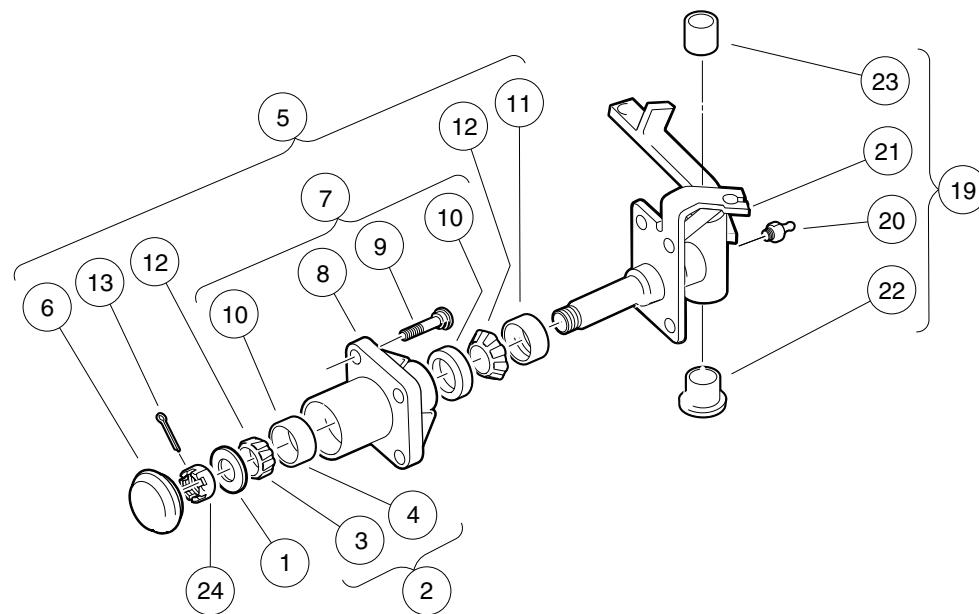
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	6
1	<u>1010124</u>	Plate, Spring Mount	1
2	<u>1010150</u>	Bearing, Thrust	2
3	<u>1010177</u>	Bolt, 3/8-16 X 2.00 Hex Head	4
4	<u>1010200</u>	Bolt, 3/8-16 X 4.25 Hex Head	4
5	<u>1014276</u>	Plate, Front Spring Retainer	1
6	<u>1016384</u>	Clevis, Delta Upper	2
7	<u>1016386</u>	King Pin Assembly	2
8	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	2
9	<u>1016389</u>	Washer, 1.125 Od Wave	2
10	<u>102564002</u>	Washer-1/2 Conical, Yellow	2
11	<u>102684501</u>	Washer, M12 Hard Regular	2
12	<u>102766301</u>	Nut, 1/2-20, Center Lock	2
13	<u>103507001</u>	Eccentric Bolt Common	1
14	<u>103628701</u>	Spring Asm, Front, 1 Leaf (includes items 15 through 17)	1
15	<u>1012303</u>	Bushing, Steel	2
16	<u>101558302</u>	Bushing, Urethane, Soft	4
17	<u>103502601</u>	Spring, Front, 1 Leaf	1
18	<u>357</u>	Lockwasher, 3/8 Split	4
19	<u>706</u>	Nut, Hex 3/8-16	5
20	<u>8754</u>	Locknut, 3/8-16 Hex	8
21	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2

6**G****E**

001225-001

HEAVY DUTY FRONT SPRINGS

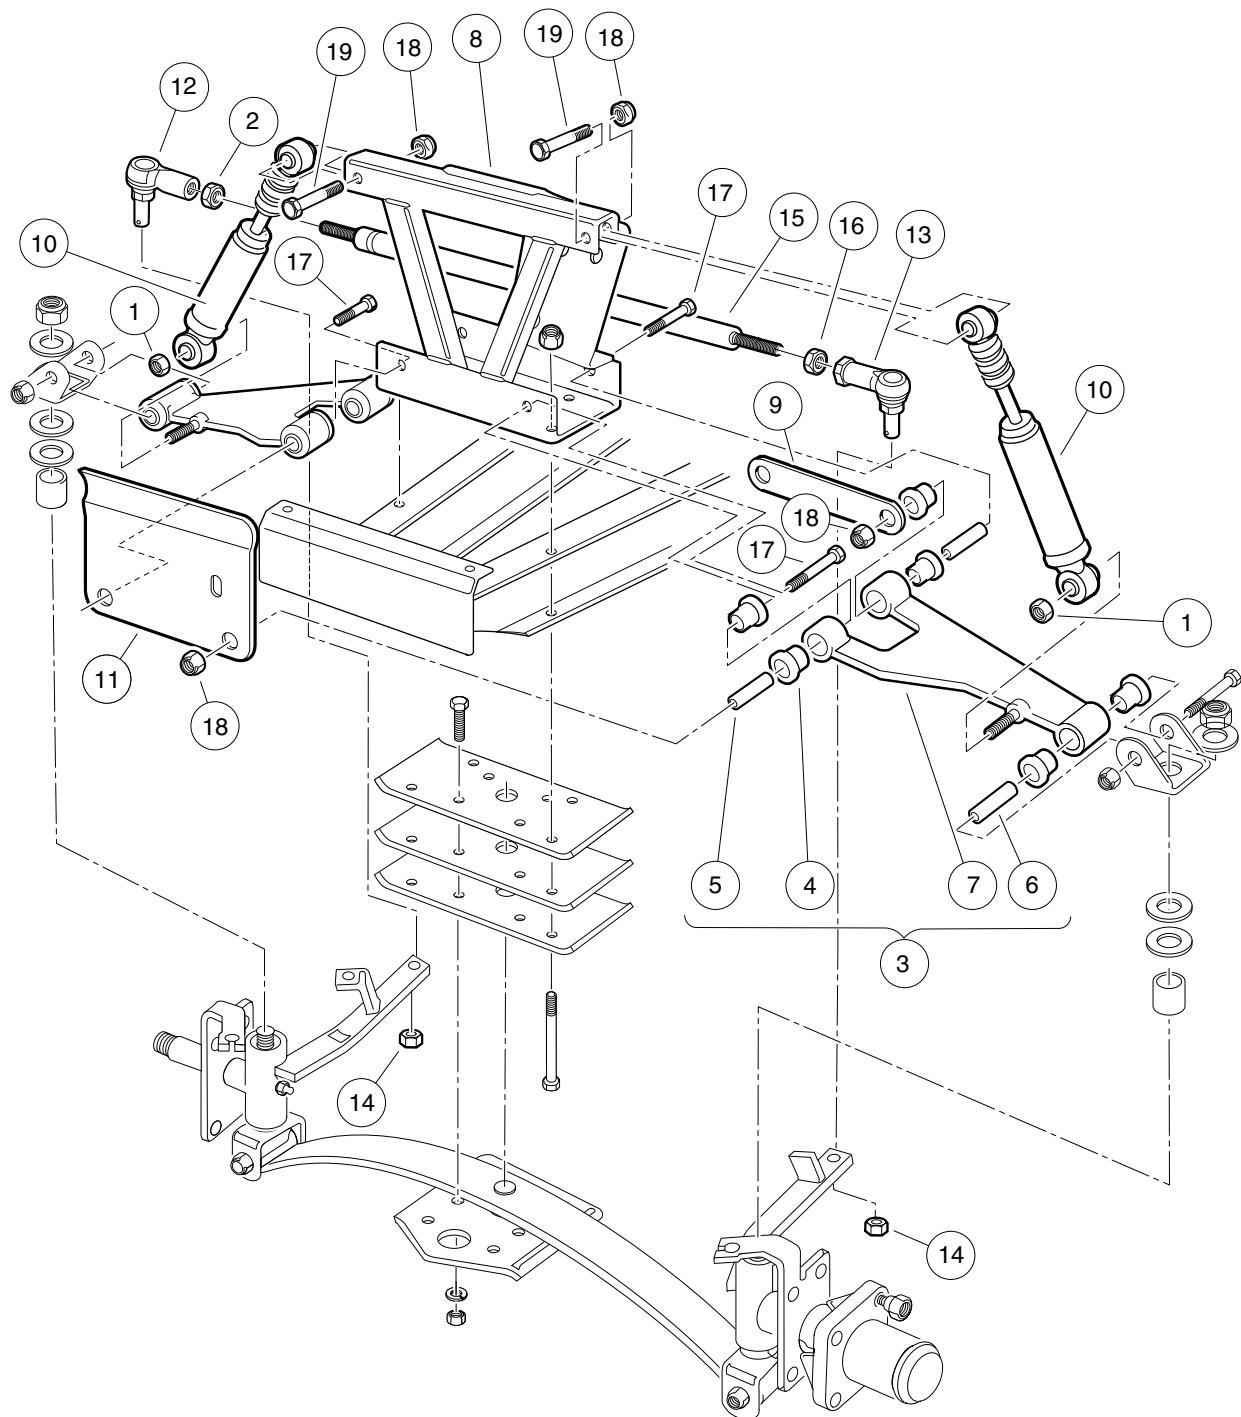
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103628801</u>	Spring Asm, Front, 2 Leaf (includes items 2 through 4)	1
2	<u>1012303</u>	Bushing, Steel	2
3	<u>1015583</u>	Bushing, Urethane	4
4	<u>103502701</u>	Spring, Front, 2 Leaf	1
5	<u>103628901</u>	Spring Asm, Front, 3 Leaf (includes items 6 through 8)	1
6	<u>1012303</u>	Bushing, Steel	2
7	<u>1015583</u>	Bushing, Urethane	4
8	103502801	Spring, Front, 3 Leaf	1

6**G****E**

000310-002

FRONT SPINDLES AND HUBS – VEHICLES WITH FOUR-WHEEL BRAKES AND MAINTENANCE-FREE BALL JOINTS

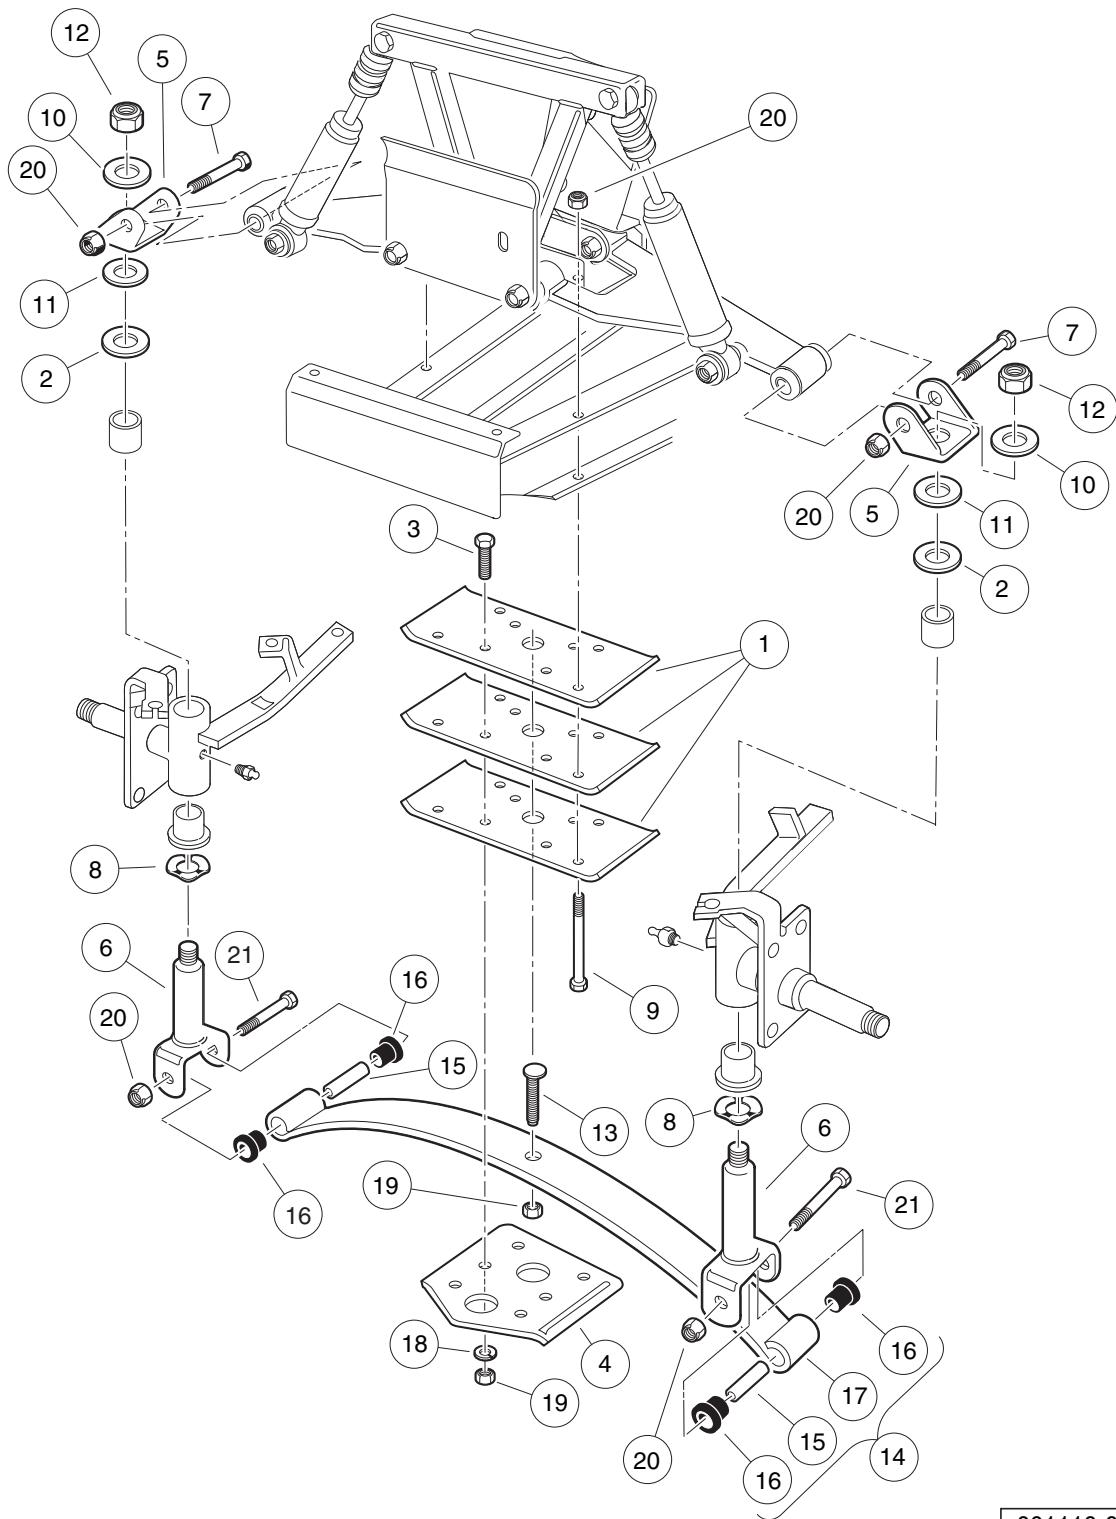
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	6
1	<u>1010005</u>	Washer, 3/4 Flat	2
2	<u>1011393</u>	Hub Bearing Package (includes items 3 and 4)	4
3	7274	Bearing, Front Hub Wheel	1
4	7308	Race, Front Hub Bearing	1
5	<u>1011892</u>	Hub Assembly (includes items 6 through 13)	2
6	<u>1011887</u>	Dust Cover	1
7	N/A	Hub (includes items 8 through 10)	1
8	N/A	Front Hub	1
9	<u>103477901</u>	Lug Stud, 1/2-20 Unf, 4037	4
10	7308	Race, Front Hub Bearing	2
11	<u>1013135</u>	Seal, Double Lip	1
12	7274	Bearing, Front Hub Wheel	2
13	<u>7910</u>	Pin, 5/32 X 1.00 Cotter	1
14	<u>103717302</u>	Asm, Spindle, Lh, 4wb, Sp (includes items 15 through 18)	1
15	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1
16	N/A	Subasm, Spindle, Lh, 4wb	1
17	<u>7048</u>	Bushing, Flanged Bronze	1
18	<u>8067</u>	Bushing, Bronze Spindle	1
19	<u>103717402</u>	Asm, Spindle, Rh, 4wb, Sp (includes items 20 through 23)	1
20	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1
21	N/A	Subasm, Spindle, Rh, 4wb	1
22	<u>7048</u>	Bushing, Flanged Bronze	1
23	<u>8067</u>	Bushing, Bronze Spindle	1
24	<u>7840</u>	Nut, 3/4-16 Hex Slotted	2

6**G****E**

001109-001

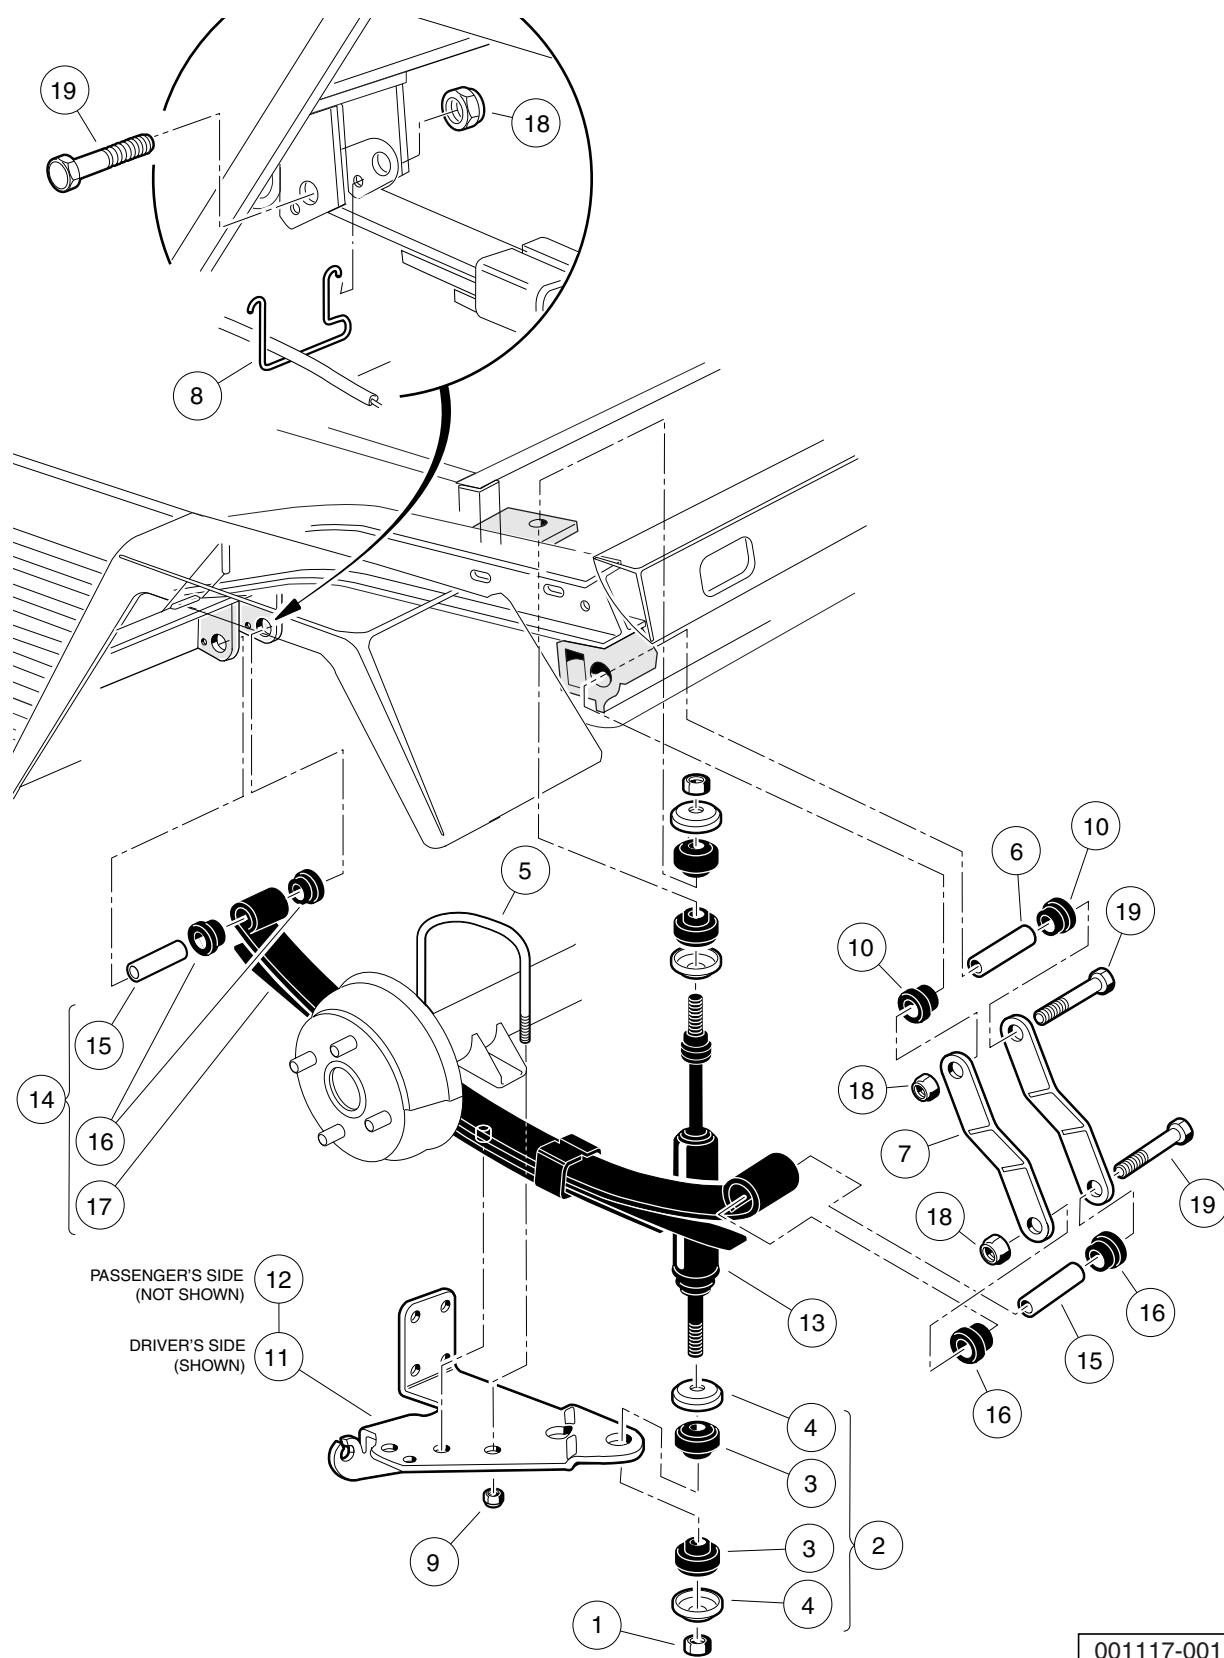
FRONT SUSPENSION, UPPER – VEHICLES WITH FOUR-WHEEL BRAKES AND MAINTENANCE-FREE BALL JOINTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	6
1	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2
2	<u>1013042</u>	Nut, 12mm Hex	1
3	<u>1016353</u>	Sub-Assembly, Delta A-Plate (includes items 4 through 7)	2
4	<u>1016346</u>	Bushing, Urethane	6
5	<u>1016349</u>	Sleeve, Delta Inner	2
6	<u>1016350</u>	Sleeve, Delta Outer	1
7	<u>1016351</u>	Delta A-Plate	1
8	<u>1016385</u>	Delta Shock and Gear Support Assembly	1
9	<u>1017266</u>	A-Plate Strap	1
10	<u>101870601</u>	Shock Absorber, Front Utility	2
11	<u>101955001</u>	Brake Cable Guide Bracket	1
12	<u>102022601</u>	End, Tie Rod M12 X 1.25 Rh	1
13	<u>102022602</u>	End, Tie Rod, M12 X 1.25, Lh	1
14	<u>102289201</u>	Nut - Hex Locking, M12 X 1.25	2
15	<u>103354701</u>	Rod, Tie, Male Thd	1
16	<u>103653501</u>	Nut, Jam, M12-1.25, Lh	1
17	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4
18	<u>8754</u>	Locknut, 3/8-16 Hex	6
19	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	2

6**G****E**

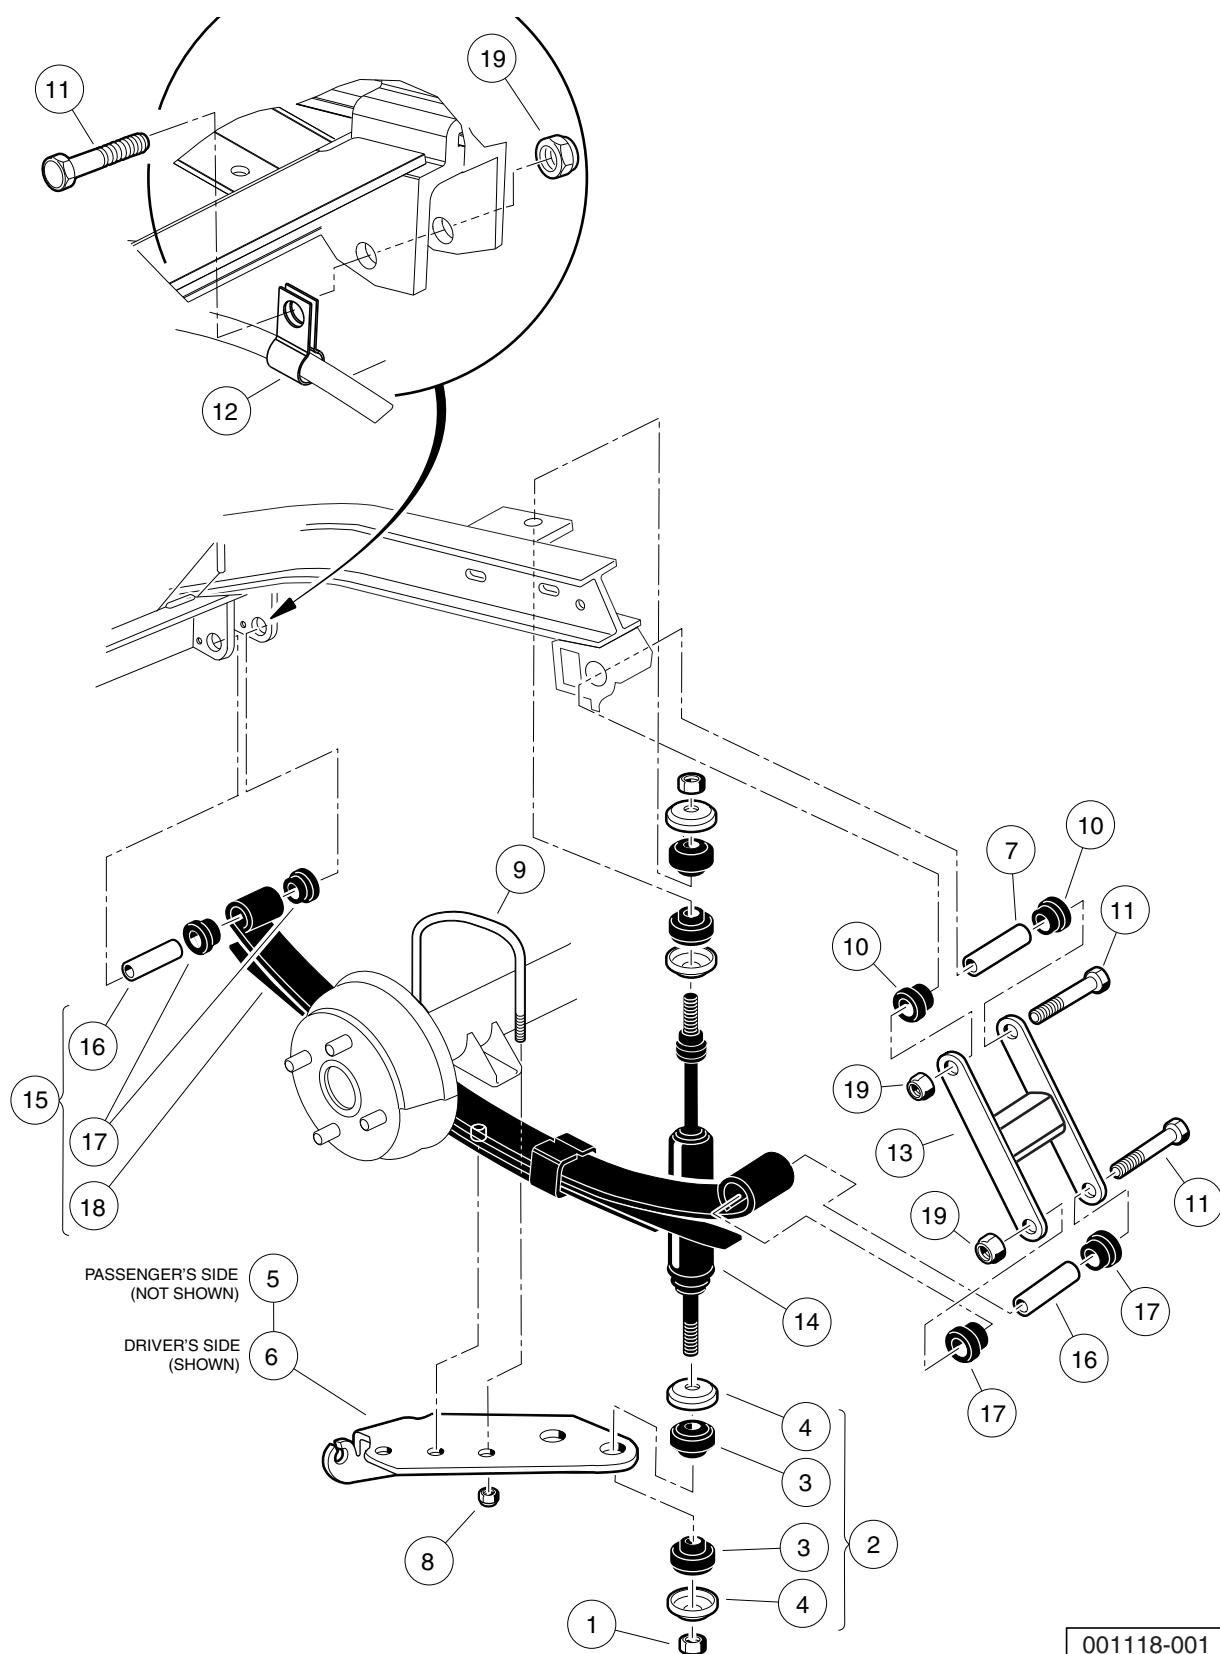
FRONT SUSPENSION, LOWER – VEHICLES WITH FOUR-WHEEL BRAKES AND MAINTENANCE-FREE BALL JOINTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	6
1	<u>1010124</u>	Plate, Spring Mount	3
2	<u>1010150</u>	Bearing, Thrust	2
3	<u>1010177</u>	Bolt, 3/8-16 X 2.00 Hex Head	4
4	<u>1014276</u>	Plate, Front Spring Retainer	1
5	<u>1016384</u>	Clevis, Delta Upper	2
6	<u>1016386</u>	King Pin Assembly	2
7	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	2
8	<u>1016389</u>	Washer, 1.125 Od Wave	2
9	<u>101870501</u>	Screw, 3/8-16 X 4.75 Hx Hd Cap	4
10	<u>102564002</u>	Washer-1/2 Conical, Yellow	2
11	<u>102684501</u>	Washer, M12 Hard Regular	2
12	<u>102766301</u>	Nut, 1/2-20, Center Lock	2
13	<u>103507001</u>	Eccentric Bolt Common	1
14	<u>103628701</u>	Spring Asm, Front, 1 Leaf (includes items 15 through 17)	1
15	<u>1012303</u>	Bushing, Steel	2
16	<u>101558302</u>	Bushing, Urethane, Soft	4
17	<u>103502601</u>	Spring, Front, 1 Leaf	1
18	<u>357</u>	Lockwasher, 3/8 Split	4
19	<u>706</u>	Nut, Hex 3/8-16	5
20	<u>8754</u>	Locknut, 3/8-16 Hex	8
21	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2

6**G****E**

REAR SUSPENSION – GASOLINE TURF/CARRYALL 2, 2 PLUS, AND 6

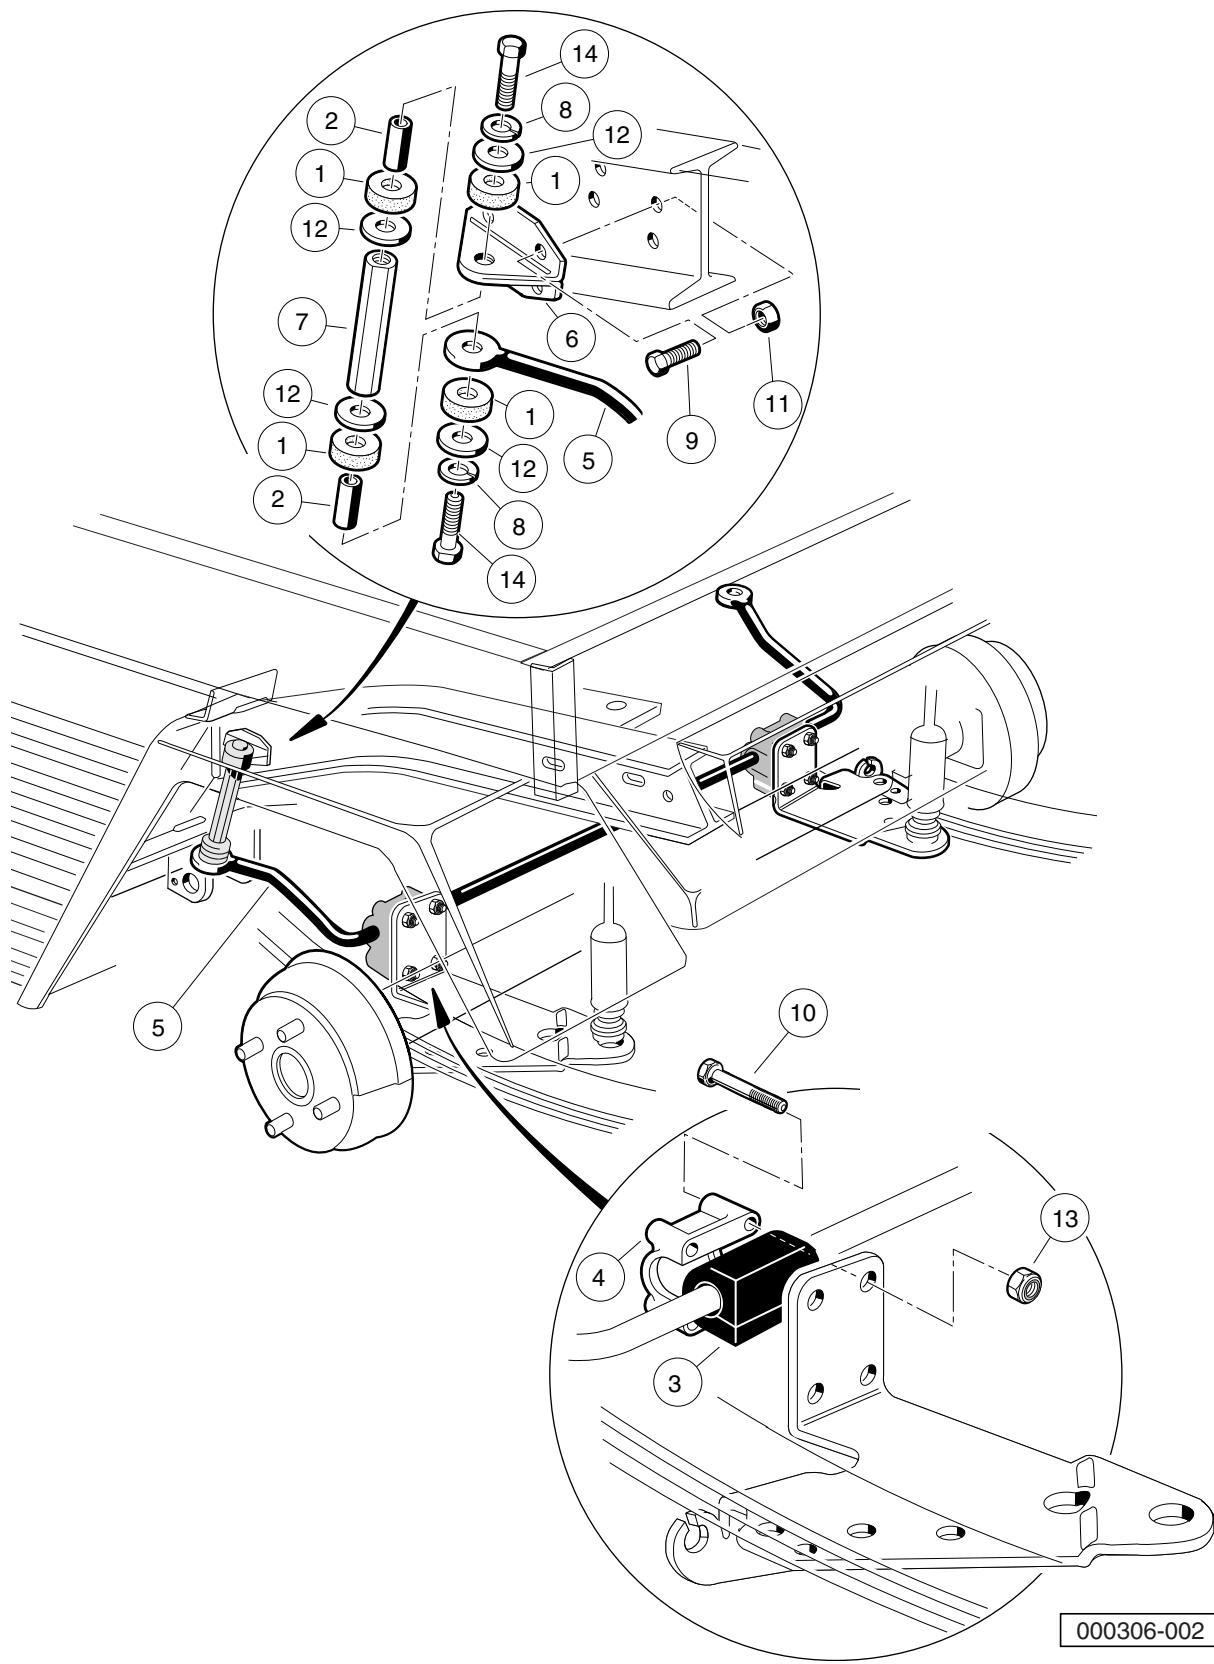
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	6
1	<u>1010145</u>	Nut, 3/8-24 Hex	4
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4
3	N/A	Cushion, Shock Absorber	2
4	N/A	Retainer, Shock Absorber Cushion	2
5	<u>1012180</u>	U-Bolt	2
6	<u>1012303</u>	Bushing, Steel	2
7	<u>1012304</u>	Shackle, Rear Spring	4
8	<u>1013207</u>	Hanger, Brake Cable	2
9	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4
10	<u>101558302</u>	Bushing, Urethane, Soft	4
11	<u>101926501</u>	Bracket, Left-Hand	1
12	<u>101929401</u>	Bracket, Right	1
13	<u>103350901</u>	Shock Absorber, Rear, Utility	2
14	<u>103657301</u>	Asm-rear 3leaf Spring, 600 Lb (includes items 15 through 17)	2
15	<u>1012303</u>	Bushing, Steel	2
16	<u>101558302</u>	Bushing, Urethane, Soft	4
17	<u>102871801</u>	Rear Spring, 3leaf, 600 Lb/in	1
18	<u>8754</u>	Locknut, 3/8-16 Hex	6
19	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	6
		Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock mounting plate.	

6**G****E**

001118-001

REAR SUSPENSION – TURF/CARRYALL 2 AND 6 IQ PLUS VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	6
1	<u>1010145</u>	Nut, 3/8-24 Hex	4
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4
3	N/A	Cushion, Shock Absorber	2
4	N/A	Retainer, Shock Absorber Cushion	2
5	1012181	Bracket, Shock Mounting, Right (Passenger)	1
6	1012182	Bracket, Shock Mounting, Left (Driver)	1
7	<u>1012303</u>	Bushing, Steel	2
8	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4
9	<u>1014902</u>	U-Bolt	2
10	<u>101558302</u>	Bushing, Urethane, Soft	4
11	<u>102066201</u>	Screw, 3/8-16 X 3.50 Hex Cap	6
12	<u>102891101</u>	Clamp, Cable, Brake, Sym	2
13	<u>102917101</u>	Weldment, Shackle	2
14	<u>103351101</u>	Shock, Absorber, Utility	2
15	<u>103657301</u>	Asm-rear 3leaf Spring, 600 Lb (includes items 16 through 18)	2
16	<u>1012303</u>	Bushing, Steel	2
17	<u>101558302</u>	Bushing, Urethane, Soft	4
18	<u>102871801</u>	Rear Spring, 3leaf, 600 Lb/in	1
19	<u>8754</u>	Locknut, 3/8-16 Hex	6
		Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock mounting plate.	

6**G****E**

STABILIZER BAR – TURF/CARRYALL 2, 6, AND CARRYALL 2 PLUS GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	6
1	<u>1015453</u>	Compression Mount	8
2	<u>1015457</u>	Spacer, 0.720"	4
3	<u>1015613</u>	Bushing, Stabilizer Bar	2
4	<u>1015614</u>	Support, Bushing	2
5	<u>1015760</u>	Stabilizer Bar	1
6	<u>1016813</u>	Mounting Bracket, Stabilizer Bar	2
7	<u>1016814</u>	Link, Stabilizer Bar	2
8	<u>357</u>	Lockwasher, 3/8 Split	4
9	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	8
10	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	8
11	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	8
12	<u>808</u>	Washer, 3/8 Type B Flat	8
13	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	8
14	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	4

6

G

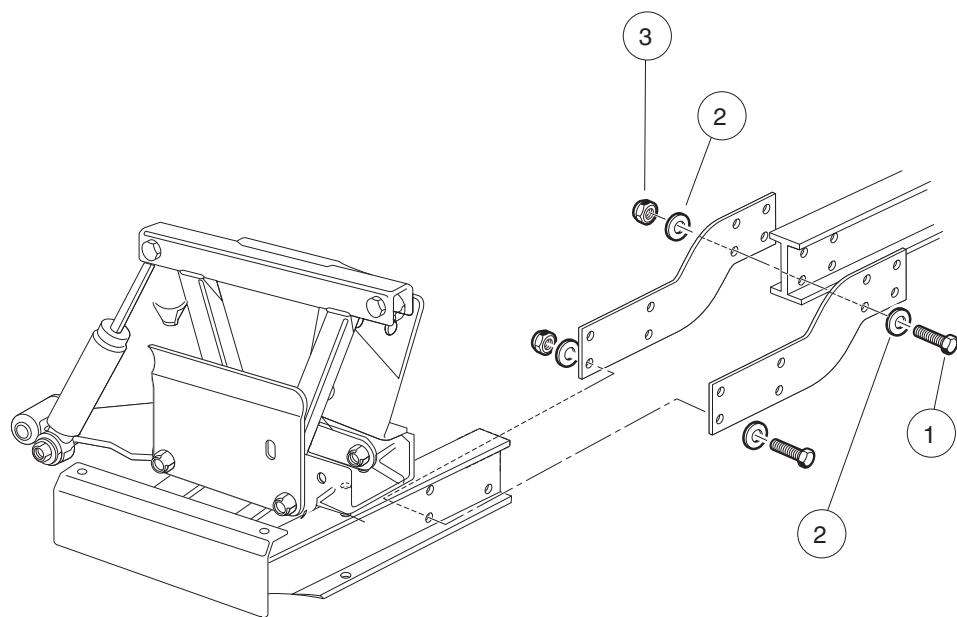
E

STEERING AND SUSPENSIONS – 252 AND 900

7

G

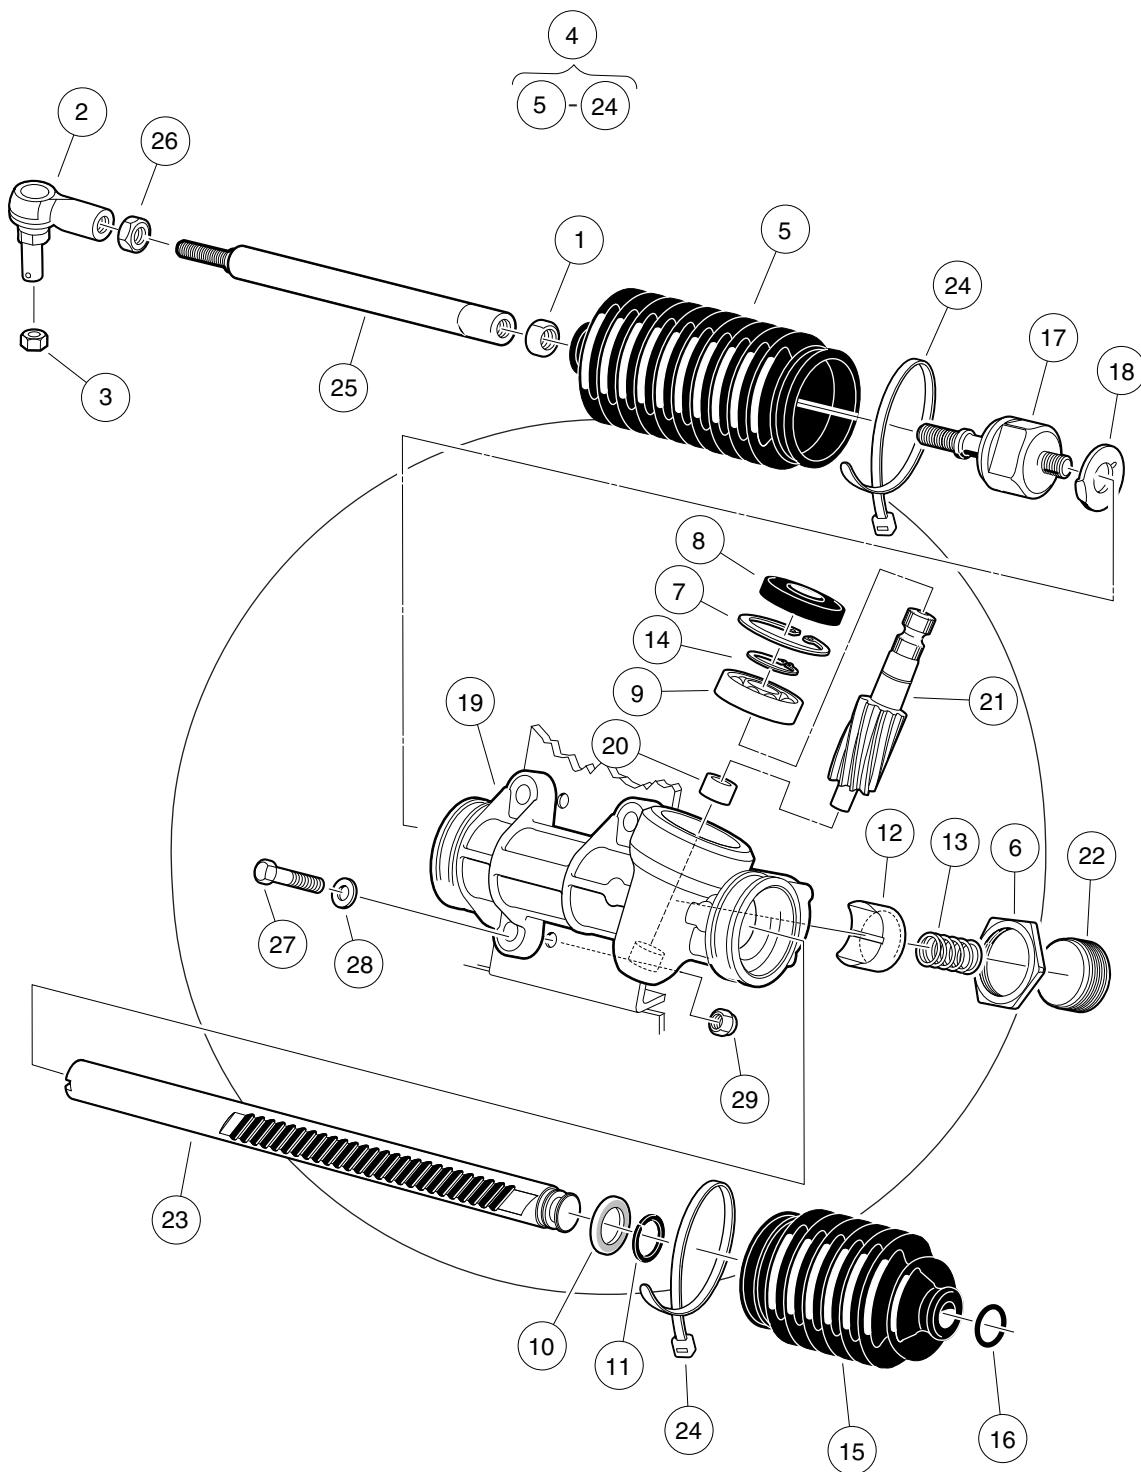
E

7**G****E**

000304-002

FRONT FRAME PLATE HARDWARE – TURF/CARRYALL 252 AND XRT 900

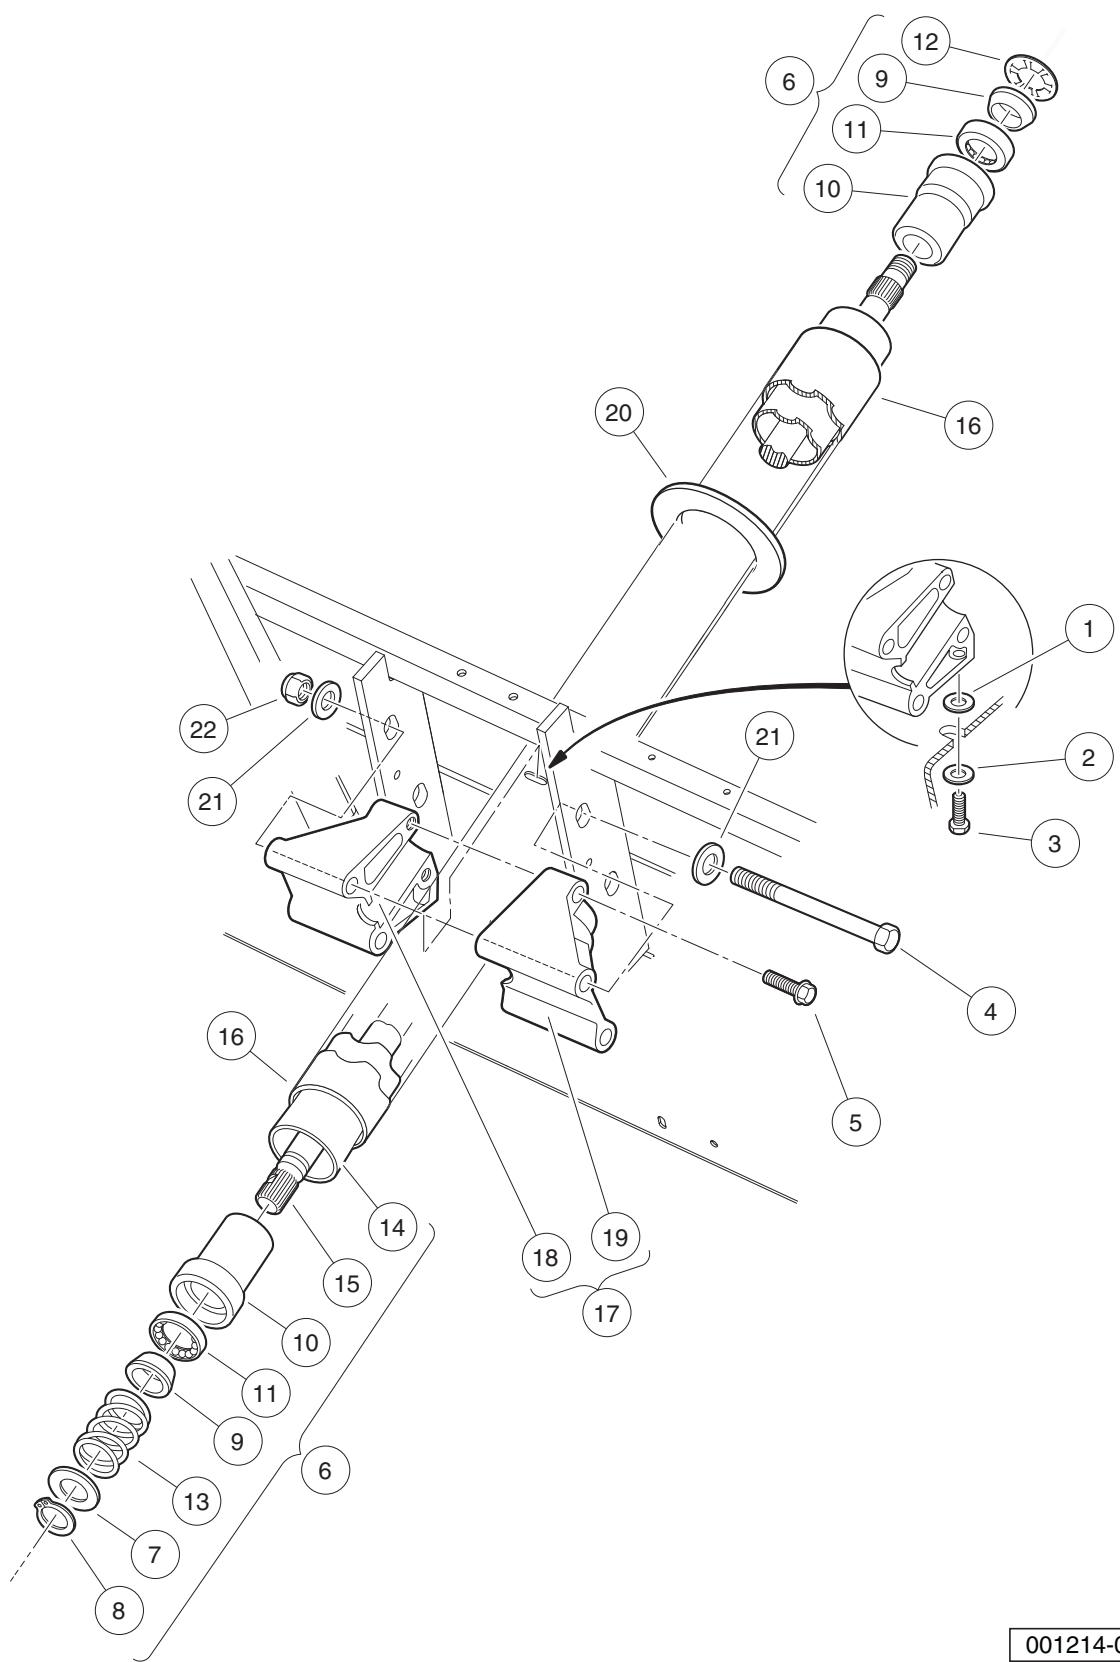
ITEM	PART NO.	DESCRIPTION	QTY	
1	1218	Screw, 5/16-18 X 1.25 Hex-Head Cap	16	7
2	<u>1241</u>	Washer, 5/16 Type A Flat	32	G
3	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	16	E

7**G****E**

001500-002

STEERING GEAR ASSEMBLY (WANDA) – MAINT.-FREE BALL JOINT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	7
1	<u>1013042</u>	Nut, 12mm Hex	1
2	<u>102022602</u>	End, Tie Rod, M12 X 1.25, Lh	1
3	<u>102289201</u>	Nut - Hex Locking, M12 X 1.25	1
4	<u>103601501</u>	Asm, Steering Rack And Pinion (includes items 5 through 24)	1
5	<u>1013035</u>	Bellows, Long	1
6	<u>1013044</u>	Rack Screw Locknut	1
7	N/A	Snap Ring	1
8	<u>1013052</u>	Seal, Steering Pinion Dust	1
9	<u>101879401</u>	Bearing, Ball	1
10	<u>101879501</u>	Stop Washer	1
11	<u>101879601</u>	Stop Ring, C-Type	1
12	<u>101879701</u>	Support Yoke	1
13	<u>101879801</u>	Rack Guide Pressure Spring	1
14	<u>101879901</u>	Ring, Stop, C-Type	1
15	<u>101880001</u>	Bellows, Short	1
16	<u>101880101</u>	Dust Seal Retaining Ring	1
17	<u>101880201</u>	Inner Ball Joint Asm	1
18	<u>101880301</u>	Washer, Tab	1
19	N/A	Box, Steering Gear	1
20	N/A	Bearing, Lower Pinion	1
21	N/A	Pinion, Steering	1
22	N/A	Screw, Rack Guide	1
23	N/A	Rack, Steering	1
24	<u>8990</u>	Tie Wrap, 8" Nylon	2
25	<u>103653401</u>	Link, Drag, Male Thd	1
26	<u>103653501</u>	Nut, Jam, M12-1.25, Lh	1
27	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	3
28	<u>334</u>	Washer, 3/8, Type A, Flat	3
29	<u>8754</u>	Locknut, 3/8-16 Hex	3

7**G****E**

001214-001

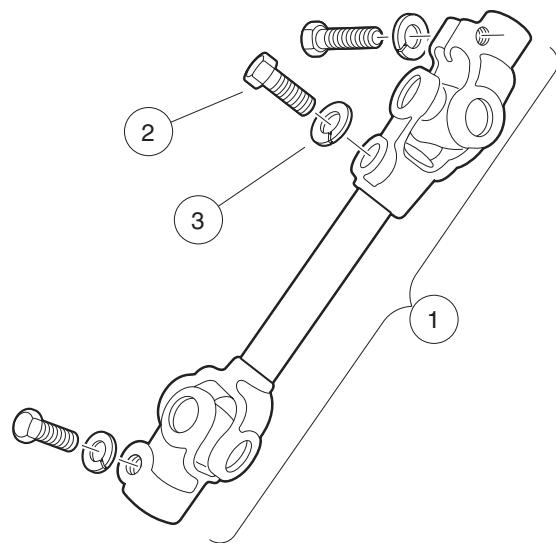
STEERING COLUMN – UTILITY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	7
1	<u>1011578</u>	Washer, 5/16 Type B Flat	1
2	<u>1011697</u>	Washer, 5/16 Flat	1
3	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	1
4	<u>1016183</u>	Screw, 3/8-16 X 7.00 Hex Cap	2
5	<u>1016269</u>	Screw, 5/16-18 Thrd Forming	2
6	<u>1017313</u>	Steering Shaft Assembly (includes items 7 through 15)	1
7	<u>1012604</u>	Washer, 0.675 ID X 1.19 OD	1
8	<u>1012605</u>	Ring, 0.579 Internal Retaining	1
9	<u>1014125</u>	Wedge, Molded	2
10	<u>1014126</u>	Seat, Plastic Bearing	2
11	<u>1014213</u>	Bearing, Ball	2
12	<u>1014214</u>	Ring, Retaining	1
13	<u>1014217</u>	Spring, Steering Shaft	1
14	<u>1017314</u>	Column, Aluminum Steering	1
15	<u>1017315</u>	Shaft Steering Column	1
16	<u>1017317</u>	Tube Cover, Steering Column	1
17	101984801	Kit, Steering Column Mounting Bracket (includes items 18 and 19)	1
18	N/A	Bracket, RH Steering Column Mount	1
19	N/A	Bracket, LH Steering column mount	1
20	<u>102278001</u>	Boot, Steering Column Round	1
21	<u>334</u>	Washer, 3/8, Type A, Flat	4
22	<u>8754</u>	Locknut, 3/8-16 Hex	2

7

G

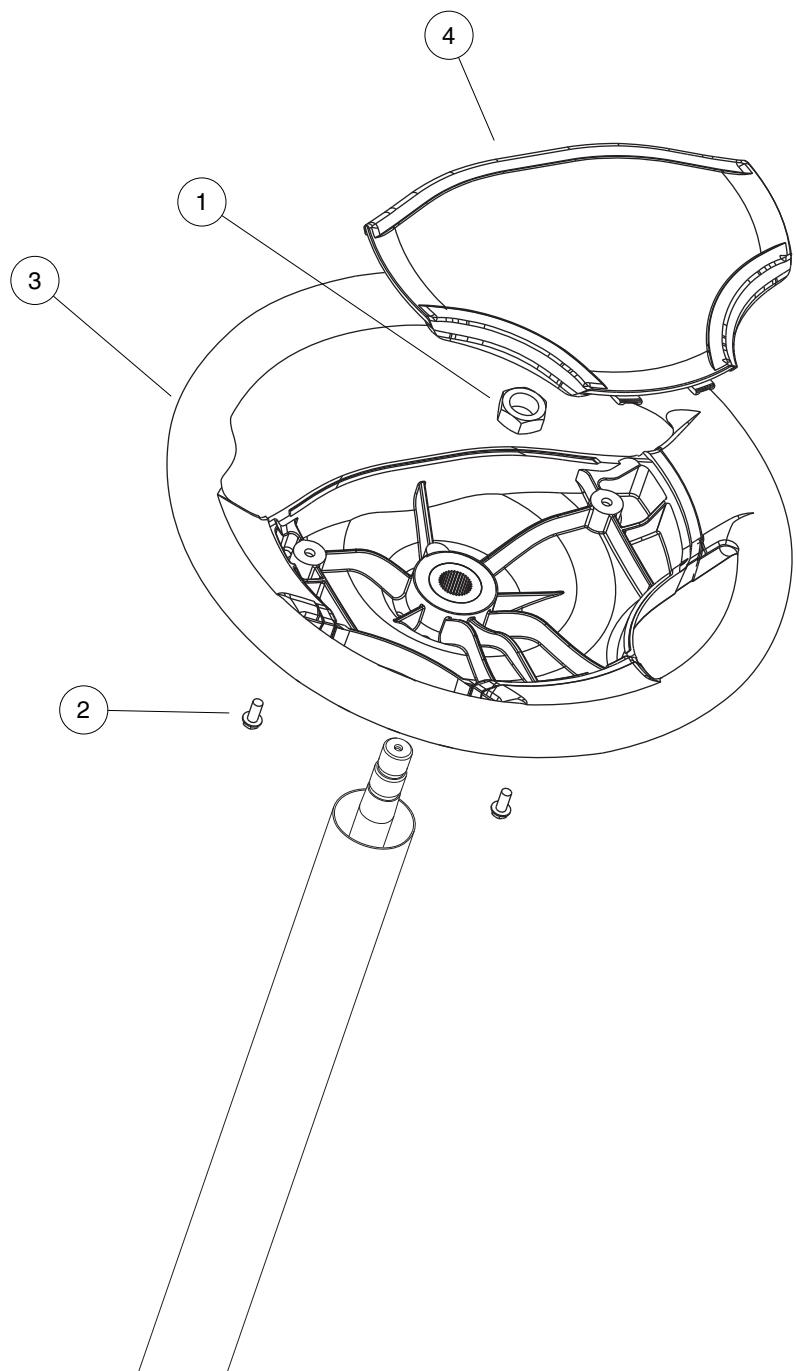
E



001218-001

INTERMEDIATE STEERING SHAFT – TURF/CARRYALL 252 AND XRT 900 VEHICLES

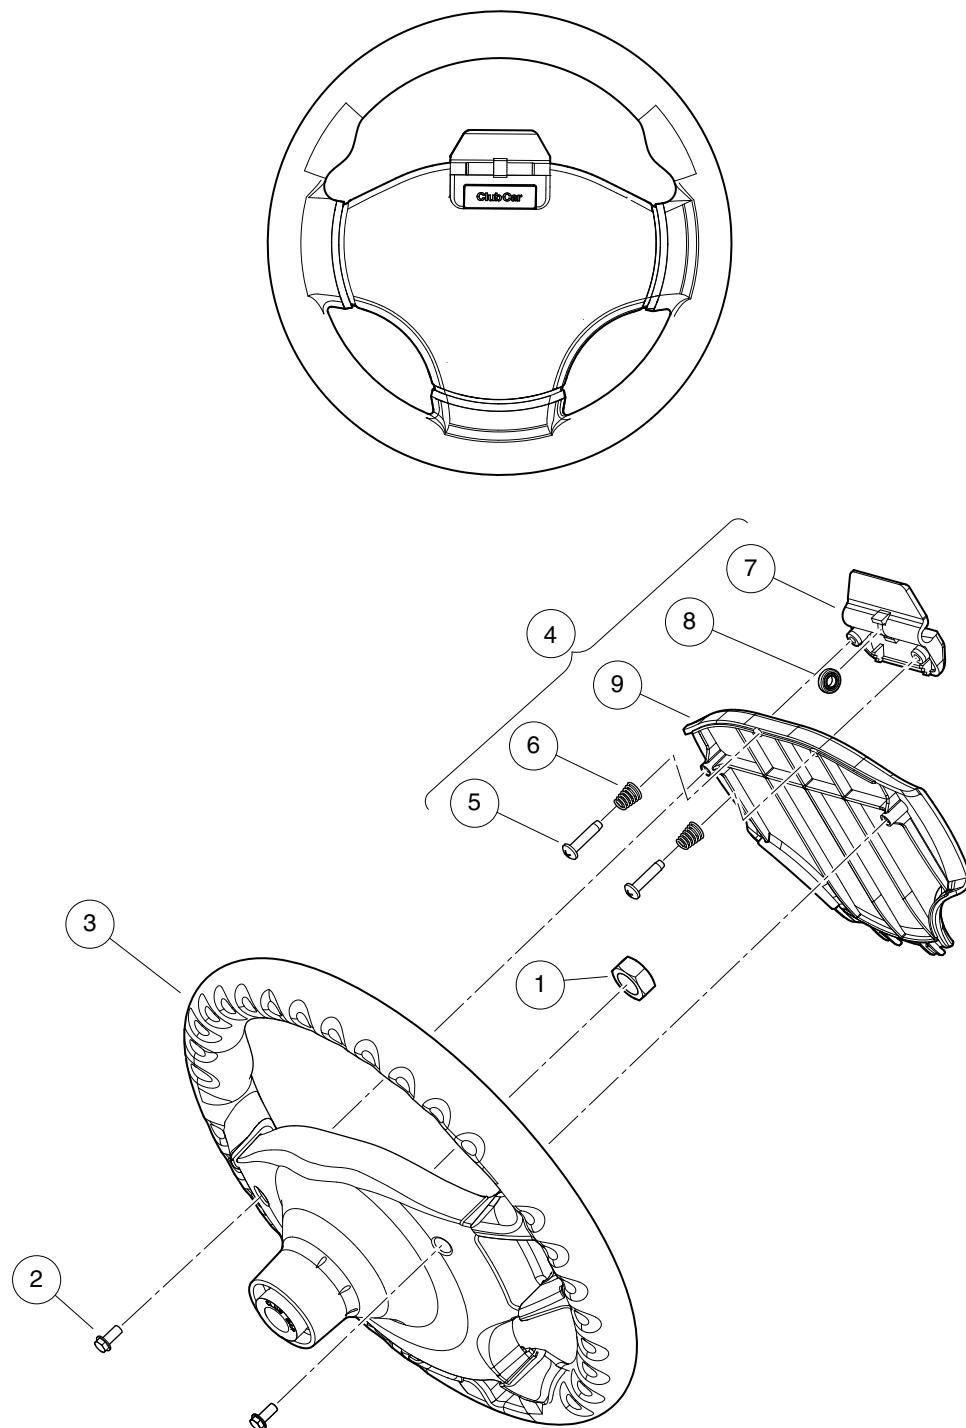
ITEM	PART NO.	DESCRIPTION	QTY
1	<u>102004101</u>	1 2 3 4 Joint, Steering (includes items 2 and 3)	1
2	<u>1017226</u>	Bolt, Hex-Head, 8mm X 1.25 - 30	3
3	<u>7174</u>	Lockwasher, 5/16 Split	3

7**G****E**

000246-007

STEERING WHEEL

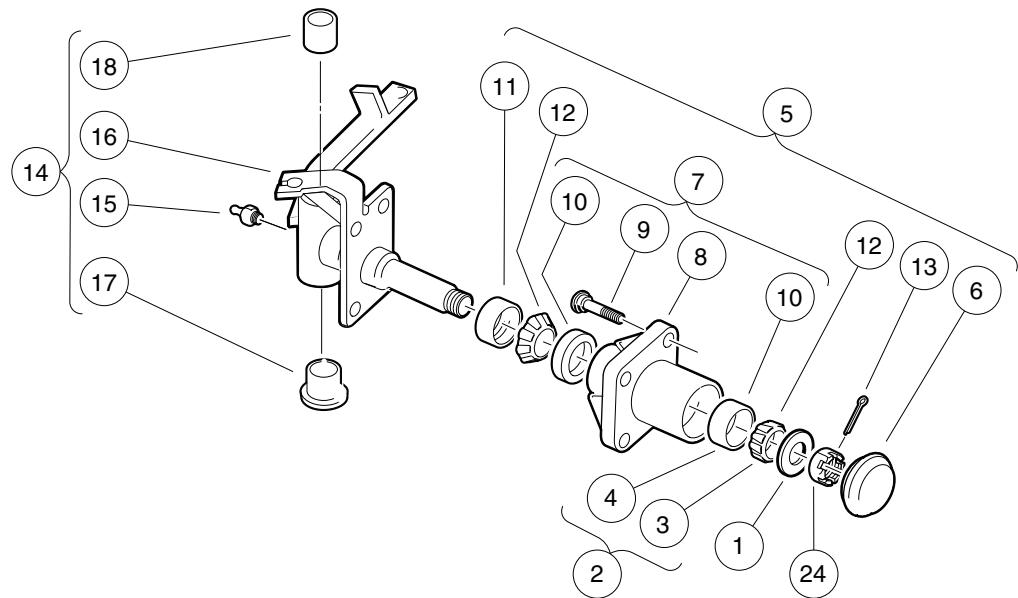
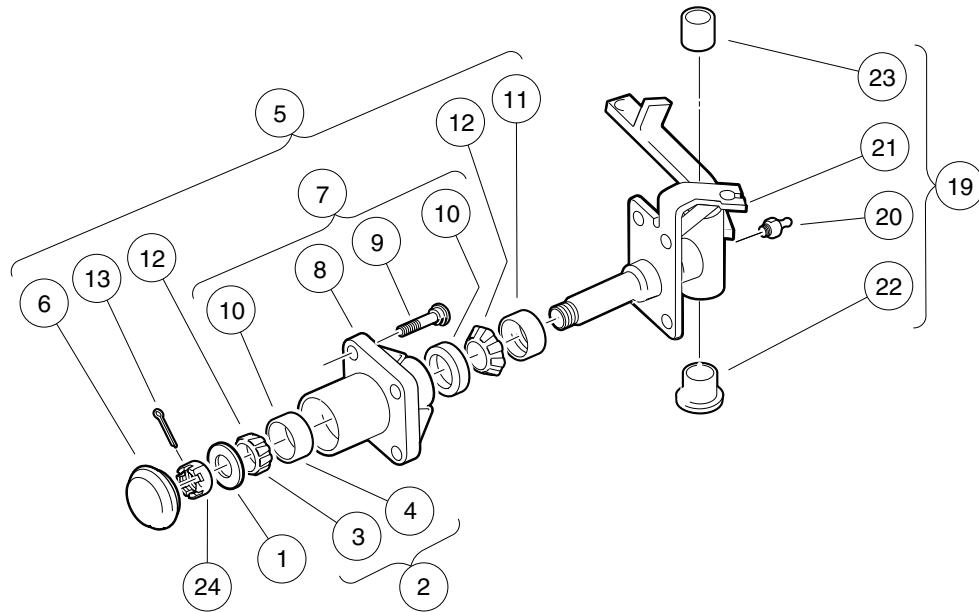
ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		7
1	<u>1017273</u>	Nut, 5/8-18 Nylon Insert Jam	1	G
2	<u>101850301</u>	Screw, #12-16 X 0.50 Washer-Head Hi-Lo	2	
3	<u>103724502</u>	Wheel, Steering, Splined	1	E
4	<u>103724602</u>	Cover, Steering Wheel, Generic	1	

7**G****E**

001504-001

STEERING WHEEL WITH CLIP

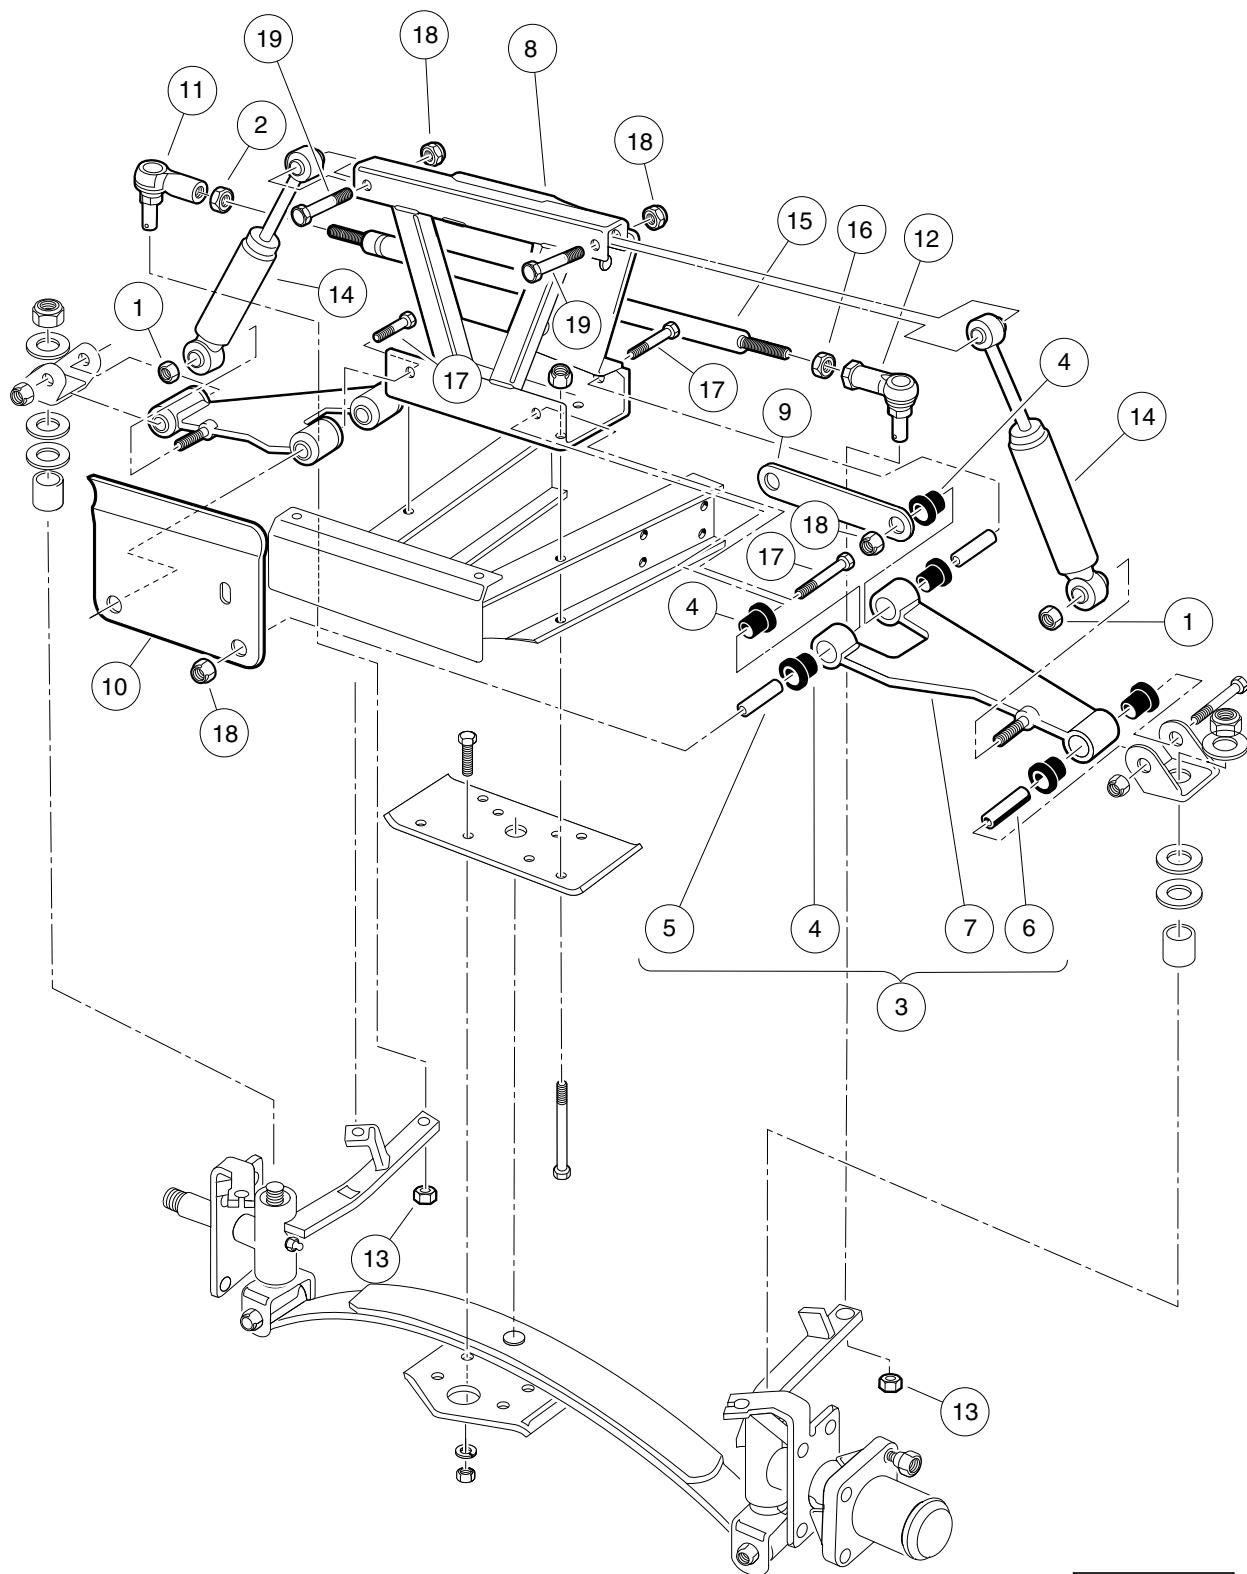
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	7
1	<u>1017273</u>	Nut, 5/8-18 Nylon Insert Jam	1
2	<u>101850301</u>	Screw, #12-16 X 0.50 Washer-Head Hi-Lo	2
3	<u>103724502</u>	Wheel, Steering, Splined	1
4	<u>103724901</u>	Asm, Scorecard, Clip (includes items 5 through 9)	1
5	<u>1012565</u>	Screw, #12 Phillips Round Head	2
6	<u>1012566</u>	Tapered Compression Spring	2
7	<u>1016154</u>	Clip, Scorecard	1
8	<u>1016214</u>	Pencil Grip	1
9	103724601	Cover, Steering Wheel, Clip	1

7**G****E**

000310-002

FRONT SPINDLES AND HUBS – VEHICLES WITH FOUR-WHEEL BRAKES AND MAINTENANCE-FREE BALL JOINTS

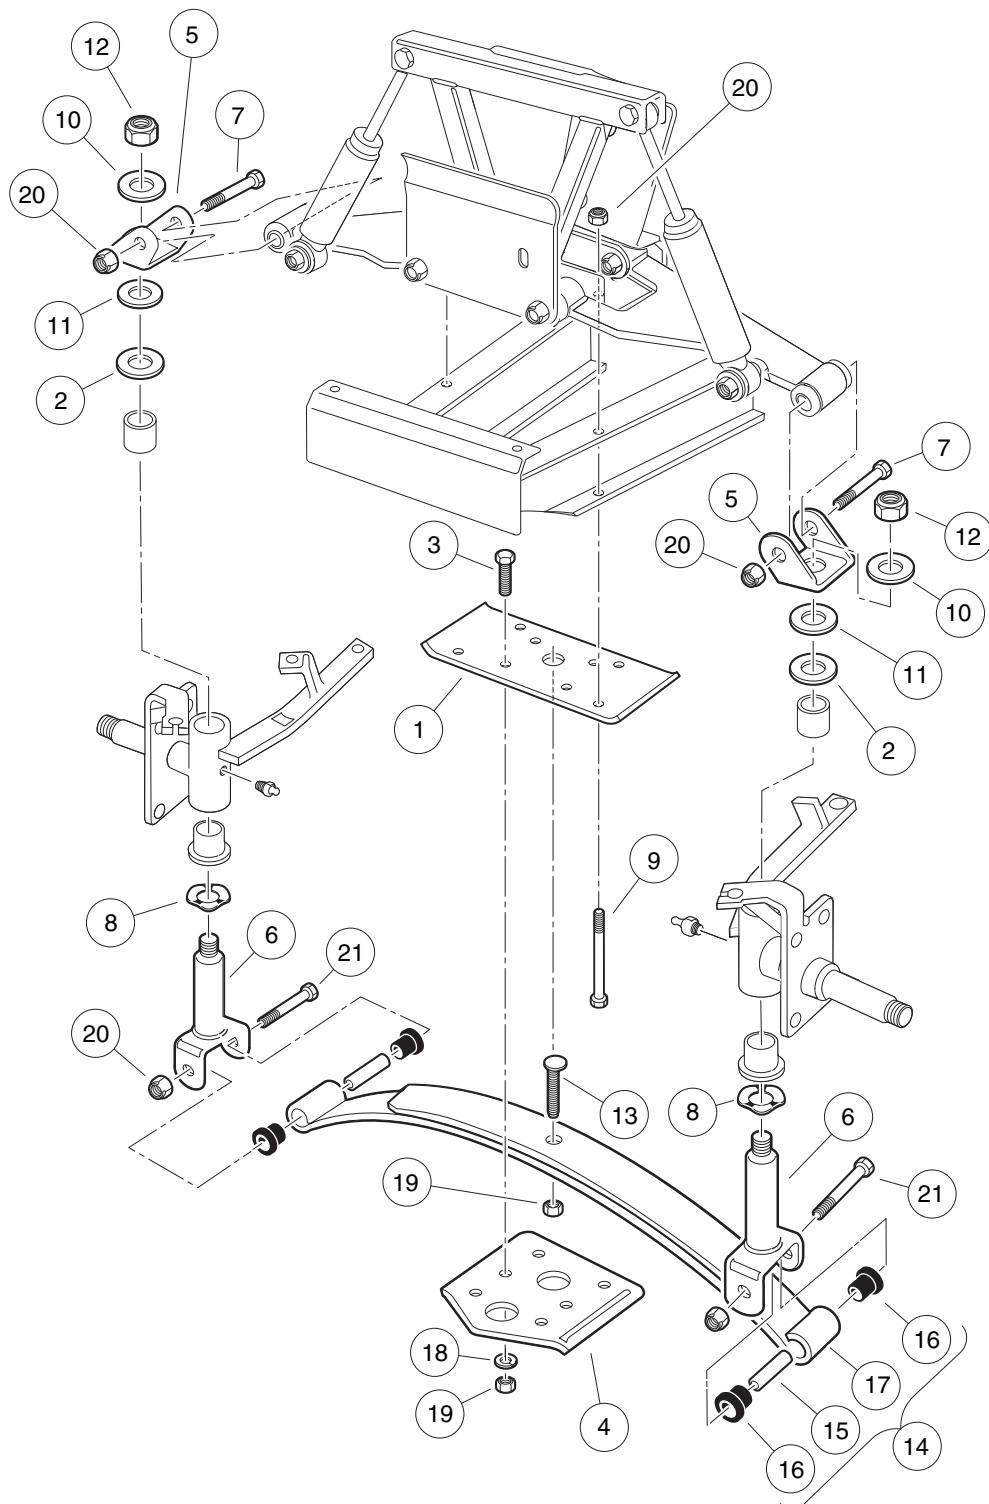
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	7
1	<u>1010005</u>	Washer, 3/4 Flat	2
2	<u>1011393</u>	Hub Bearing Package (includes items 3 and 4)	4
3	7274	Bearing, Front Hub Wheel	1
4	7308	Race, Front Hub Bearing	1
5	<u>1011892</u>	Hub Assembly (includes items 6 through 13)	2
6	<u>1011887</u>	Dust Cover	1
7	N/A	Hub (includes items 8 through 10)	1
8	N/A	Front Hub	1
9	<u>103477901</u>	Lug Stud, 1/2-20 Unf, 4037	4
10	7308	Race, Front Hub Bearing	2
11	<u>1013135</u>	Seal, Double Lip	1
12	7274	Bearing, Front Hub Wheel	2
13	<u>7910</u>	Pin, 5/32 X 1.00 Cotter	1
14	<u>103717302</u>	Asm, Spindle, Lh, 4wb, Sp (includes items 15 through 18)	1
15	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1
16	N/A	Subasm, Spindle, Lh, 4wb	1
17	<u>7048</u>	Bushing, Flanged Bronze	1
18	<u>8067</u>	Bushing, Bronze Spindle	1
19	<u>103717402</u>	Asm, Spindle, Rh, 4wb, Sp (includes items 20 through 23)	1
20	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1
21	N/A	Subasm, Spindle, Rh, 4wb	1
22	<u>7048</u>	Bushing, Flanged Bronze	1
23	<u>8067</u>	Bushing, Bronze Spindle	1
24	<u>7840</u>	Nut, 3/4-16 Hex Slotted	2

7**G****E**

001112-001

FRONT SUSPENSION, UPPER – TURF/CARRYALL 252 AND XRT 900 WITH MAINTENANCE-FREE BALL JOINTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	7
1	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2
2	<u>1013042</u>	Nut, 12mm Hex	1
3	<u>1016353</u>	Sub-Assembly, Delta A-Plate (includes items 4 through 7)	2
4	<u>1016346</u>	Bushing, Urethane	6
5	<u>1016349</u>	Sleeve, Delta Inner	2
6	<u>1016350</u>	Sleeve, Delta Outer	1
7	<u>1016351</u>	Delta A-Plate	1
8	<u>1016385</u>	Delta Shock and Gear Support Assembly	1
9	<u>1017266</u>	A-Plate Strap	1
10	<u>101955001</u>	Brake Cable Guide Bracket	1
11	<u>102022601</u>	End, Tie Rod M12 X 1.25 Rh	1
12	<u>102022602</u>	End, Tie Rod, M12 X 1.25, Lh	1
13	<u>102289201</u>	Nut - Hex Locking, M12 X 1.25	2
14	<u>103351001</u>	Shock Absorber, Front, Common	2
15	<u>103354701</u>	Rod, Tie, Male Thd	1
16	<u>103653501</u>	Nut, Jam, M12-1.25, Lh	1
17	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4
18	<u>8754</u>	Locknut, 3/8-16 Hex	6
19	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	2

7**G****E**

001113-001

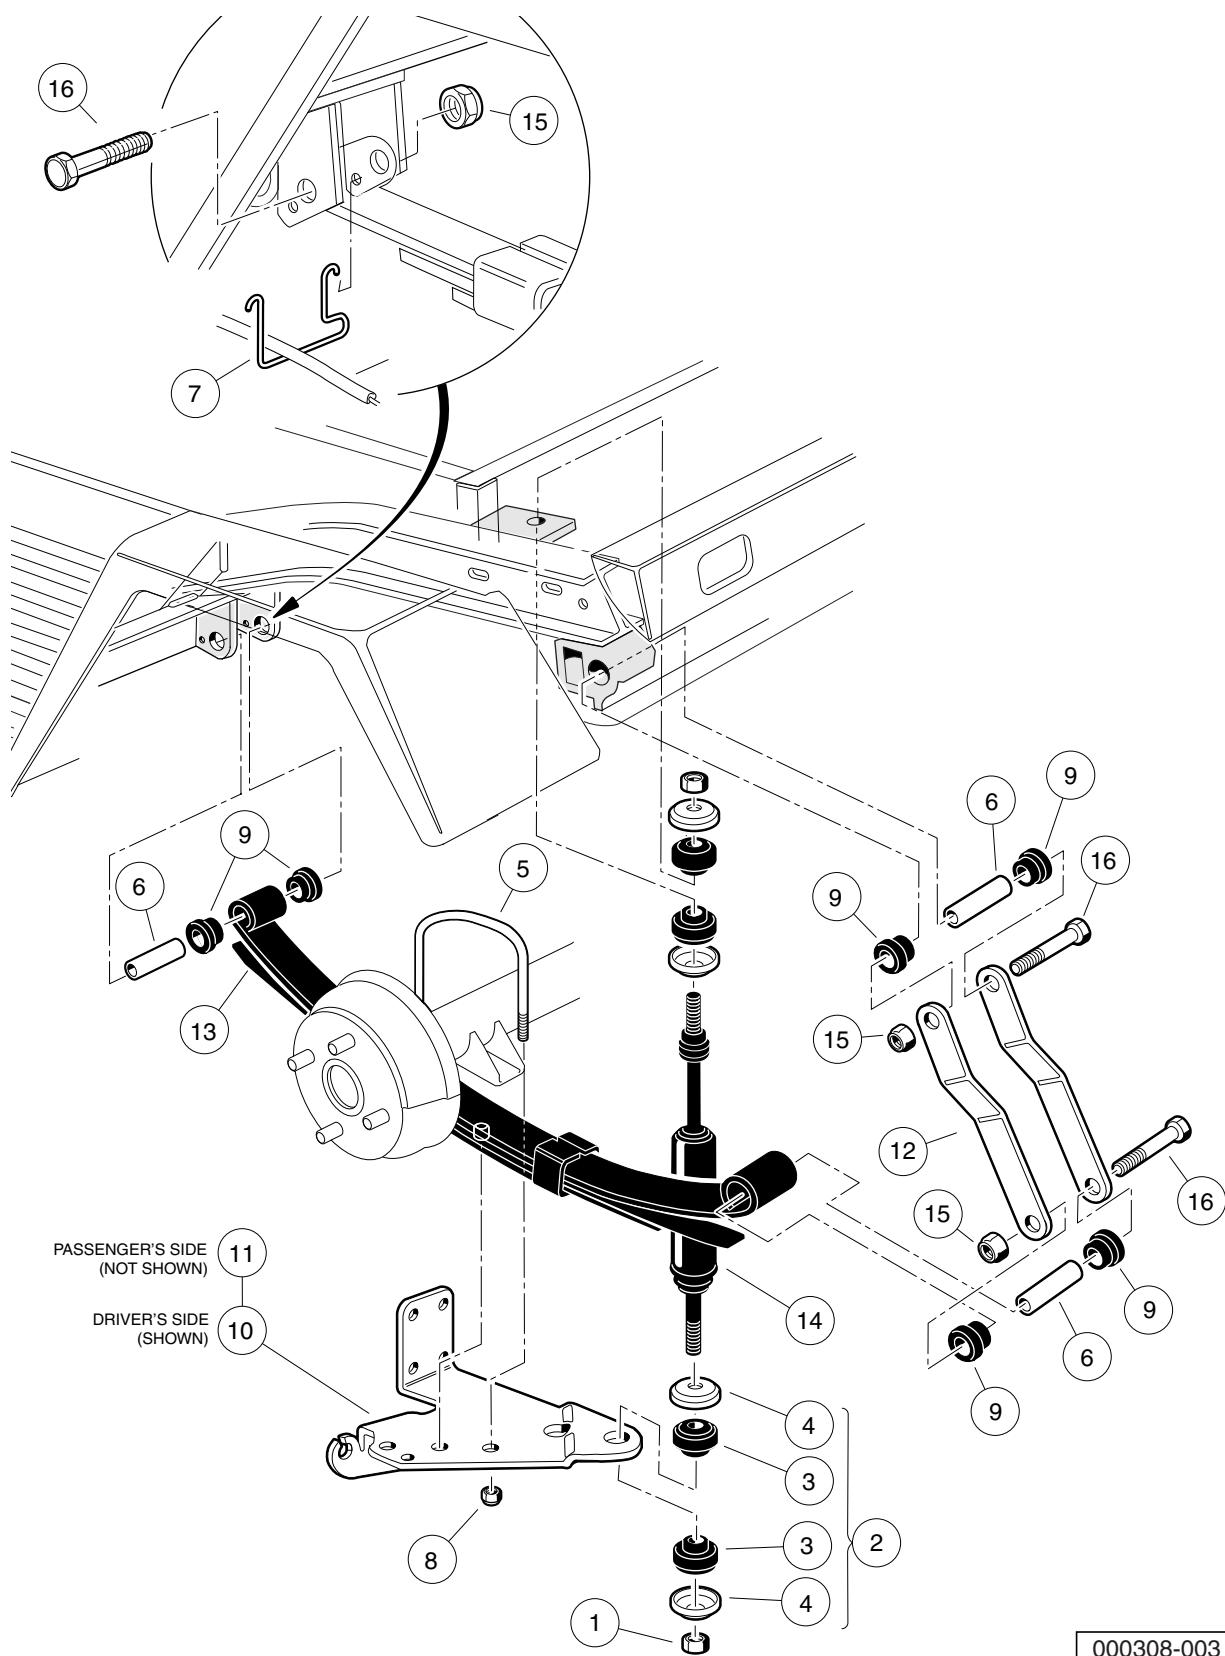
FRONT SUSPENSION, LOWER – TURF/CARRYALL 252 AND XRT 900 WITH MAINTENANCE-FREE BALL JOINTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	7
1	<u>1010124</u>	Plate, Spring Mount	1
2	<u>1010150</u>	Bearing, Thrust	2
3	<u>1010177</u>	Bolt, 3/8-16 X 2.00 Hex Head	4
4	<u>1014276</u>	Plate, Front Spring Retainer	1
5	<u>1016384</u>	Clevis, Delta Upper	2
6	<u>1016386</u>	King Pin Assembly	2
7	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	2
8	<u>1016389</u>	Washer, 1.125 Od Wave	2
9	<u>101870501</u>	Screw, 3/8-16 X 4.75 Hx Hd Cap	4
10	<u>102564002</u>	Washer-1/2 Conical, Yellow	2
11	<u>102684501</u>	Washer, M12 Hard Regular	2
12	<u>102766301</u>	Nut, 1/2-20, Center Lock	2
13	<u>103507001</u>	Eccentric Bolt Common	1
14	<u>103628801</u>	Spring Asm, Front, 2 Leaf (includes items 15 through 17)	1
15	<u>1012303</u>	Bushing, Steel	2
16	<u>1015583</u>	Bushing, Urethane	4
17	<u>103502701</u>	Spring, Front, 2 Leaf	1
18	<u>357</u>	Lockwasher, 3/8 Split	4
19	<u>706</u>	Nut, Hex 3/8-16	5
20	<u>8754</u>	Locknut, 3/8-16 Hex	8
21	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2

7

G

E



REAR SUSPENSION – GASOLINE TURF/CARRYALL 252 AND XRT 900

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>1010145</u>	1 2 3 4 Nut, 3/8-24 Hex	4
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4
3	N/A	Cushion, Shock Absorber	2
4	N/A	Retainer, Shock Absorber Cushion	2
5	<u>1012180</u>	U-Bolt	2
6	<u>1012303</u>	Bushing, Steel	6
7	<u>1013207</u>	Hanger, Brake Cable	2
8	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4
9	<u>1015583</u>	Bushing, Urethane	12
10	<u>101926501</u>	Bracket, Left-Hand	1
11	101929401	Bracket, Right	1
12	<u>102004201</u>	Rear Spring Shackle	4
13	<u>102871801</u>	Rear Spring, 3leaf, 600 Lb/in	2
14	<u>103351101</u>	Shock, Absorber, Utility	2
15	<u>8754</u>	Locknut, 3/8-16 Hex	6
16	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	6

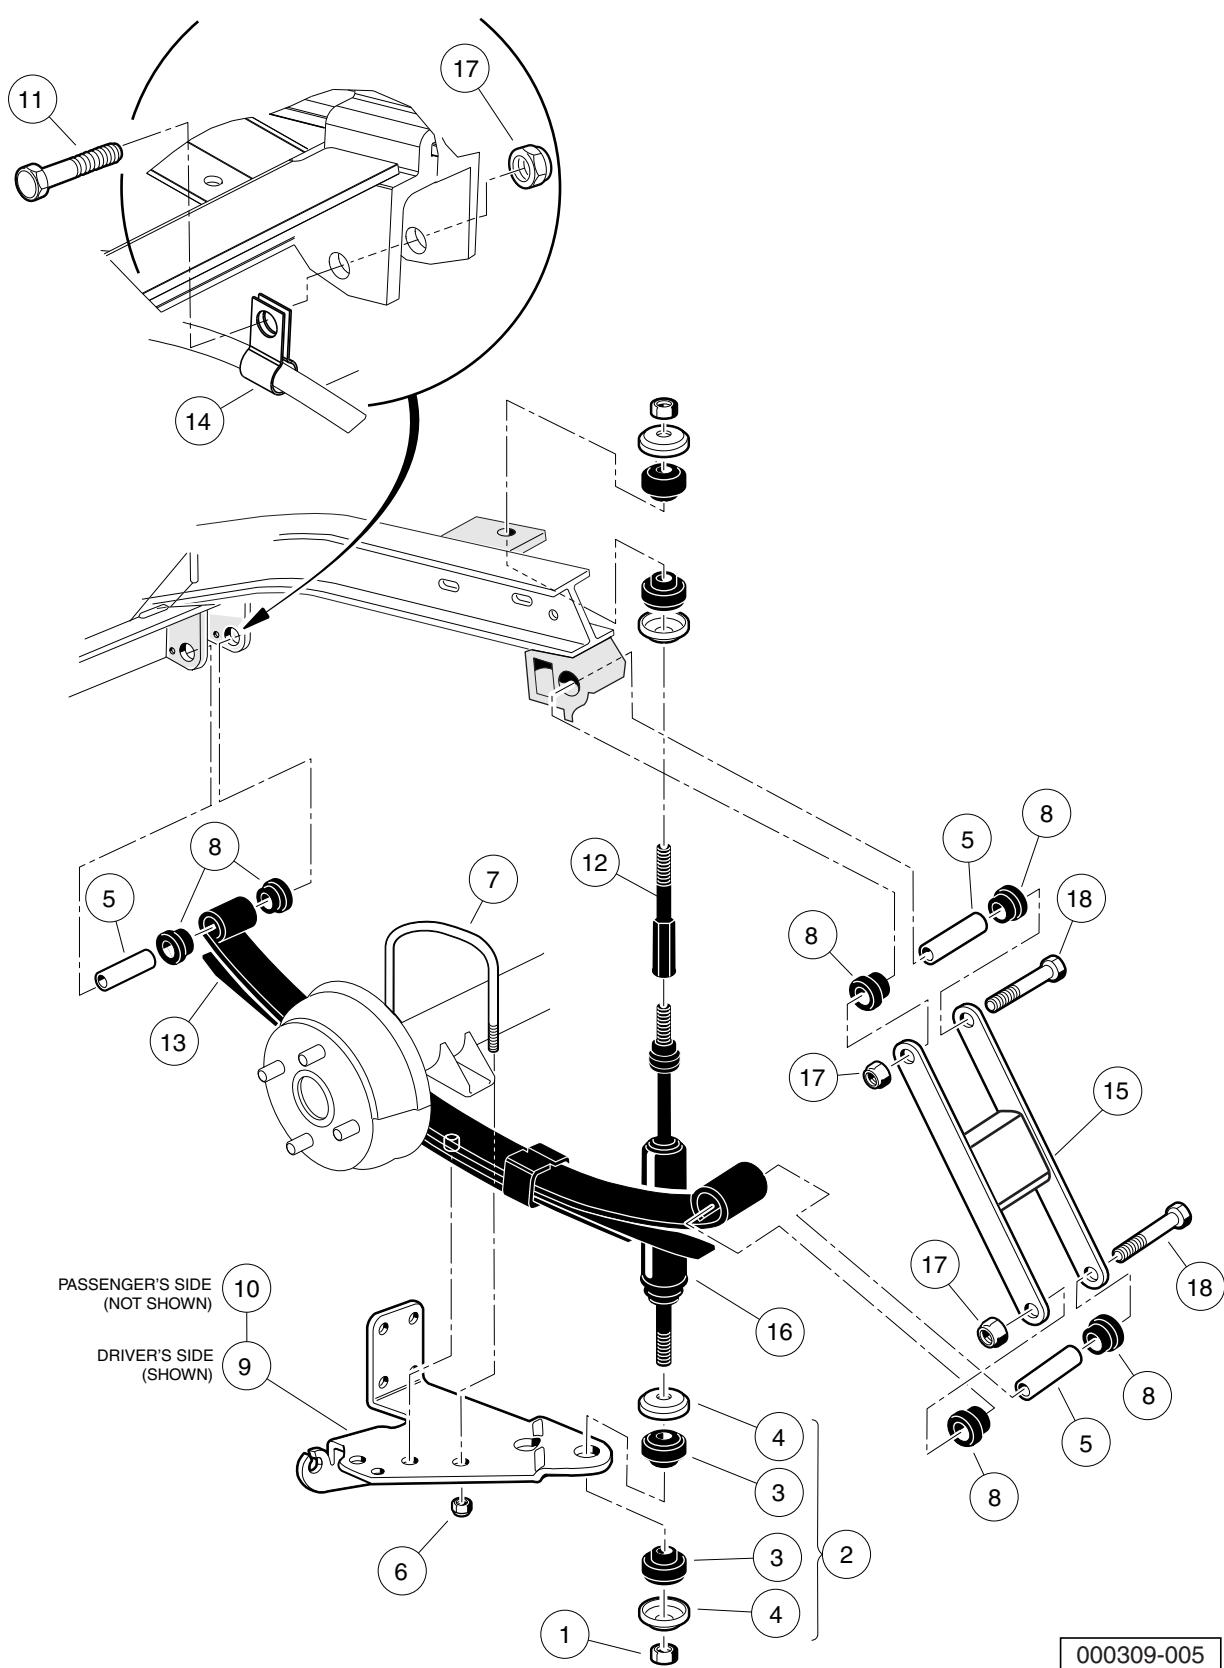
Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock mounting plate.

7
G
E

7

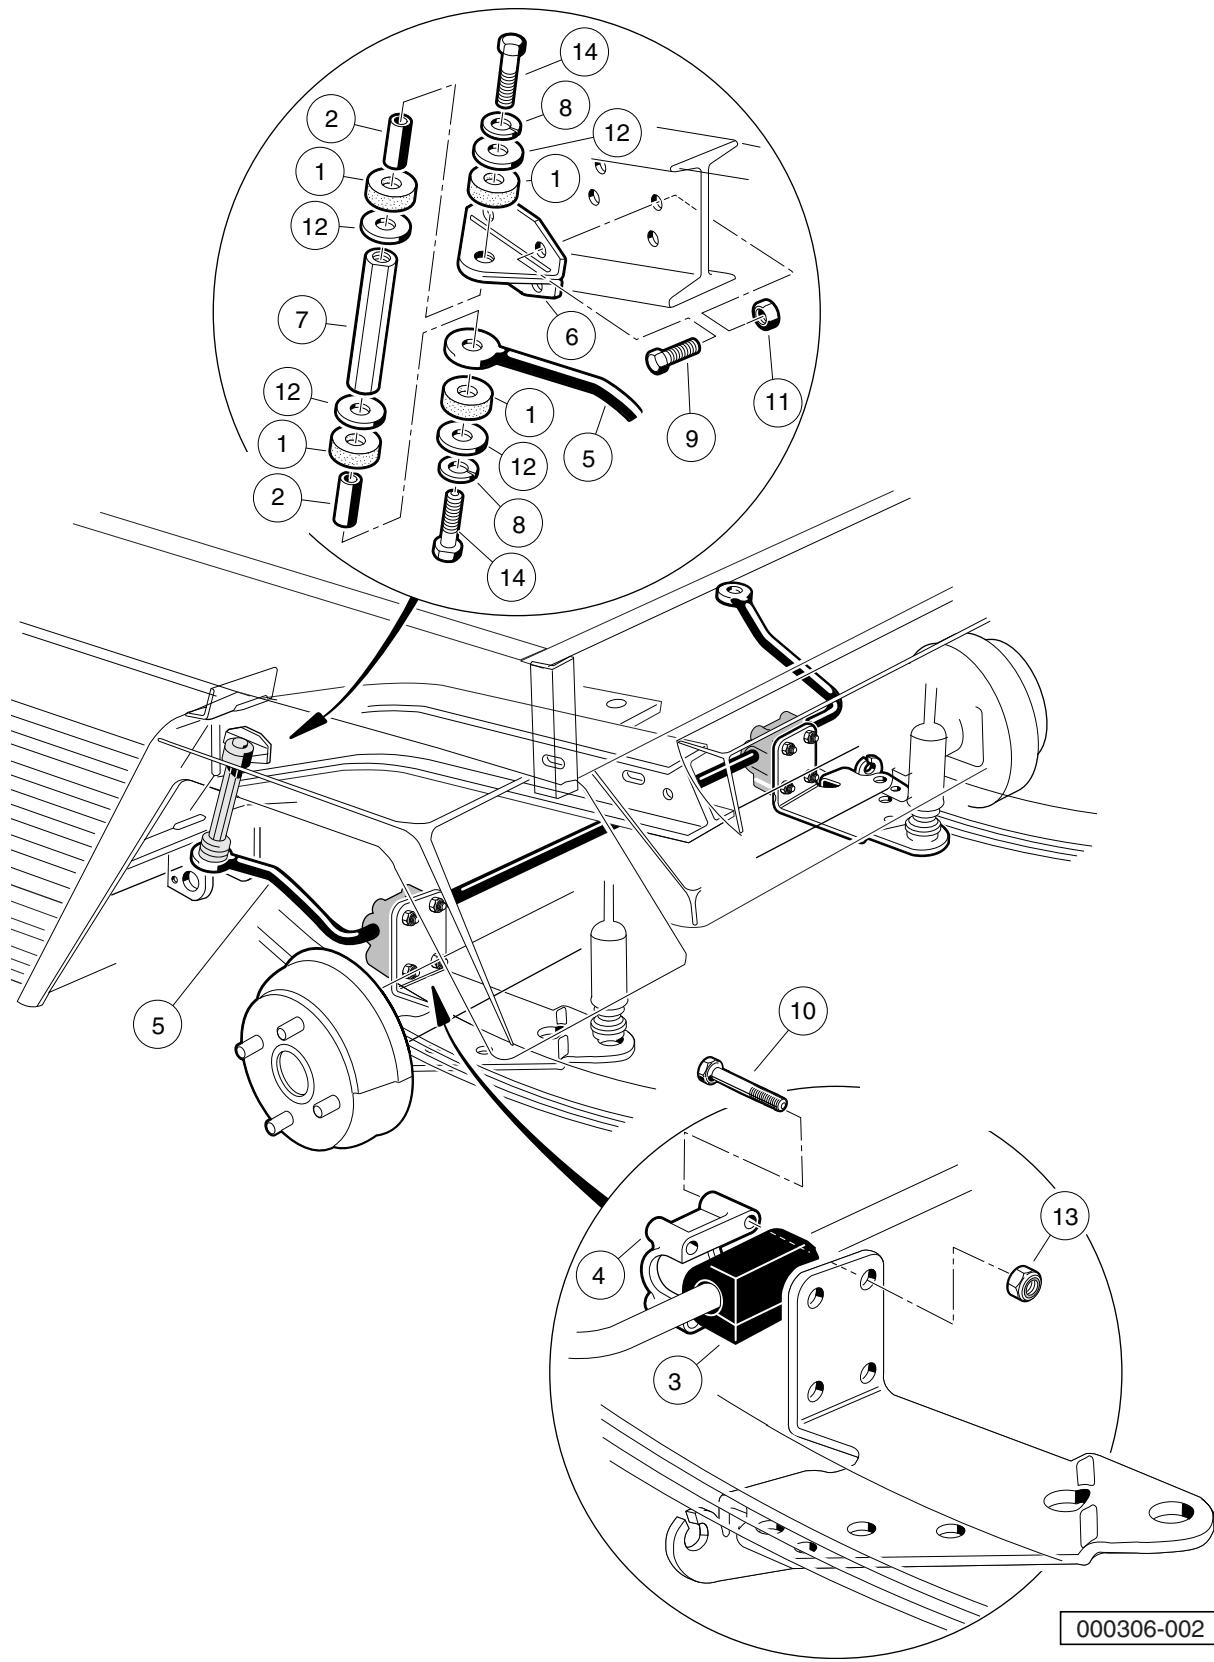
G

E



REAR SUSPENSION – TURF/CARRYALL 252 AND XRT 900 IQ PLUS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	7
1	<u>1010145</u>	Nut, 3/8-24 Hex	4
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4
3	N/A	Cushion, Shock Absorber	2
4	N/A	Retainer, Shock Absorber Cushion	2
5	<u>1012303</u>	Bushing, Steel	6
6	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4
7	<u>1014902</u>	U-Bolt	2
8	<u>1015583</u>	Bushing, Urethane	12
9	<u>101926501</u>	Bracket, Left-Hand	1
10	101929401	Bracket, Right	1
11	<u>102066201</u>	Screw, 3/8-16 X 3.50 Hex Cap	2
12	<u>102399001</u>	Shock Extension	2
13	<u>102871801</u>	Rear Spring, 3leaf, 600 Lb/in	2
14	<u>102891101</u>	Clamp, Cable, Brake, Sym	2
15	<u>103324801</u>	Weldment, Shackle, 10.0	2
16	<u>103351101</u>	Shock, Absorber, Utility	2
17	8754	Locknut, 3/8-16 Hex	6
18	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	4
		Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock mounting plate.	

7**G****E**

STABILIZER BAR – TURF/CARRYALL 252 AND XRT 900

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	7
1	<u>1015453</u>	Compression Mount	8
2	<u>1015457</u>	Spacer, 0.720"	4
3	<u>1015613</u>	Bushing, Stabilizer Bar	2
4	<u>1015614</u>	Support, Bushing	2
5	<u>1015760</u>	Stabilizer Bar	1
6	<u>1016813</u>	Mounting Bracket, Stabilizer Bar	2
7	<u>102004901</u>	Link, Stabilizer Bar	2
8	<u>357</u>	Lockwasher, 3/8 Split	4
9	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	8
10	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	8
11	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	8
12	<u>808</u>	Washer, 3/8 Type B Flat	8
13	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	8
14	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	4

7

G

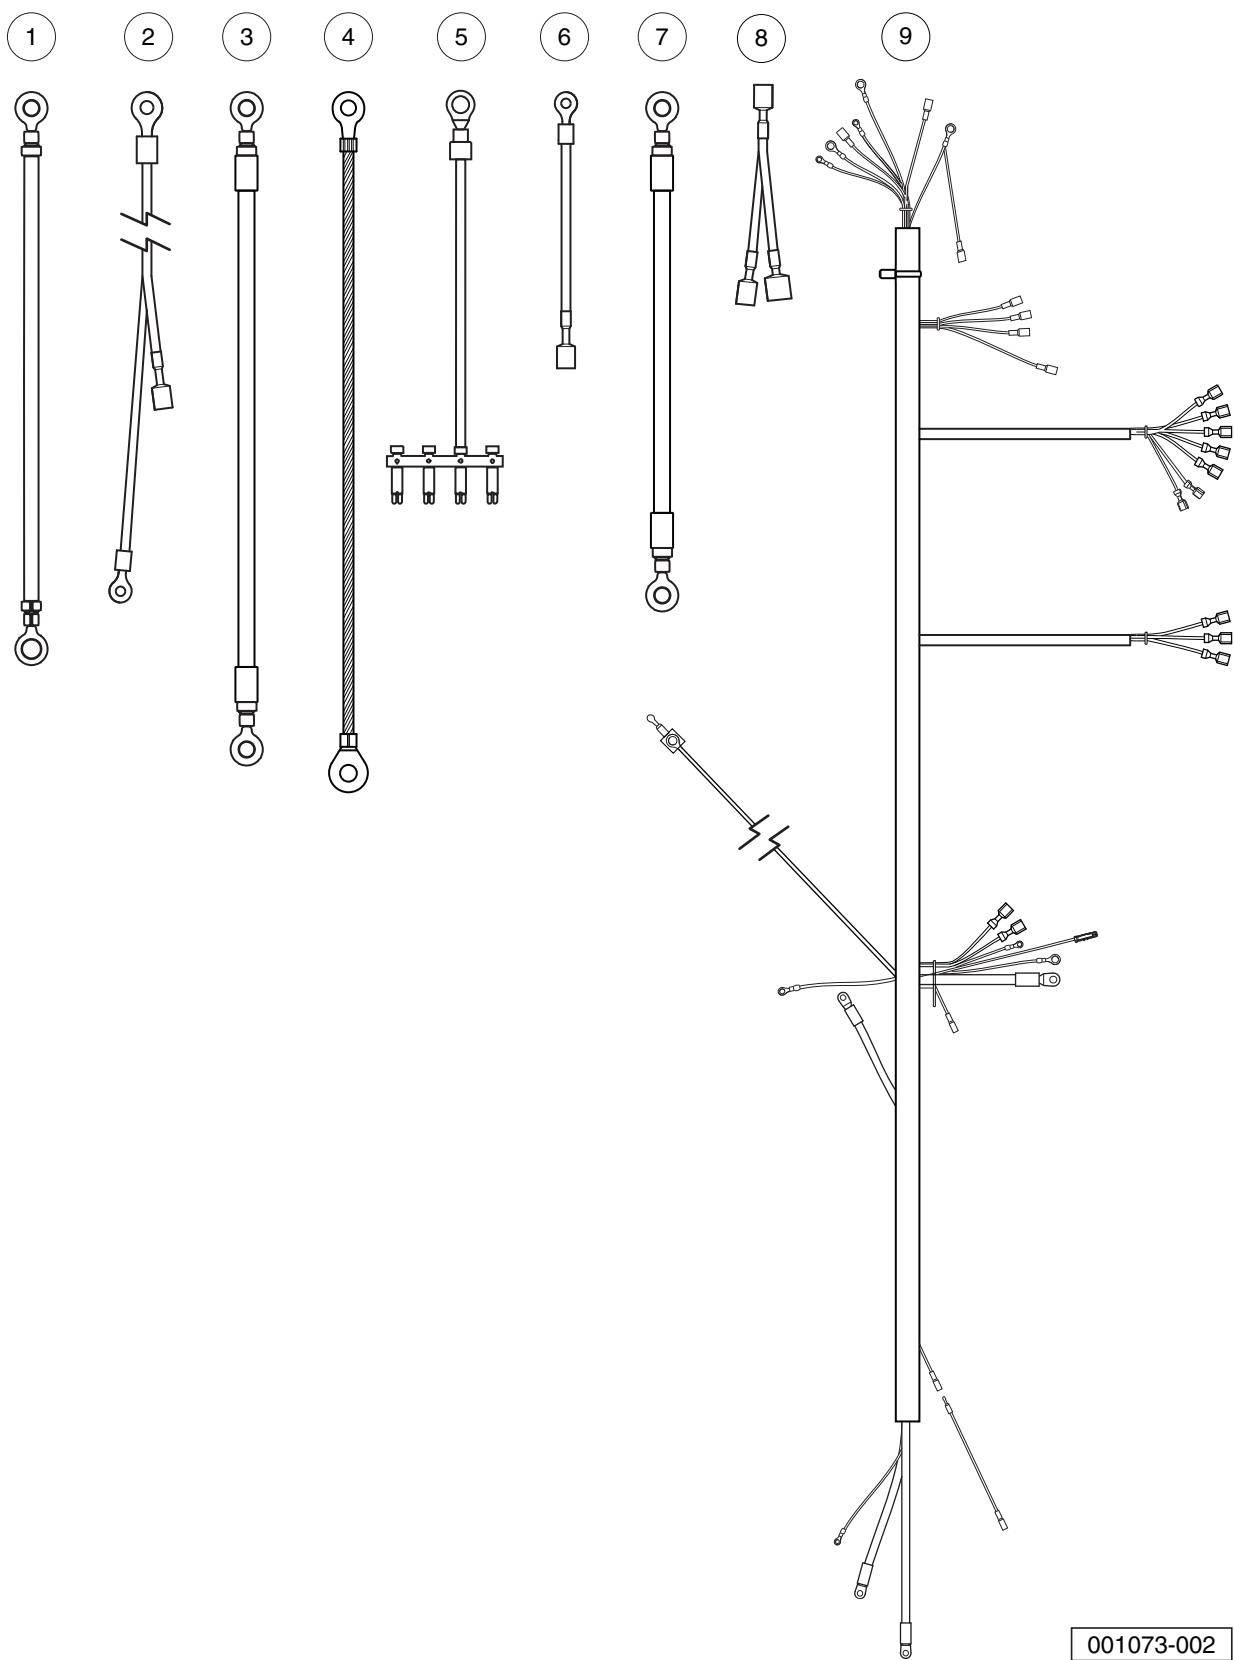
E

ELECTRICAL SYSTEM – GASOLINE VEHICLE

8

G

8
G

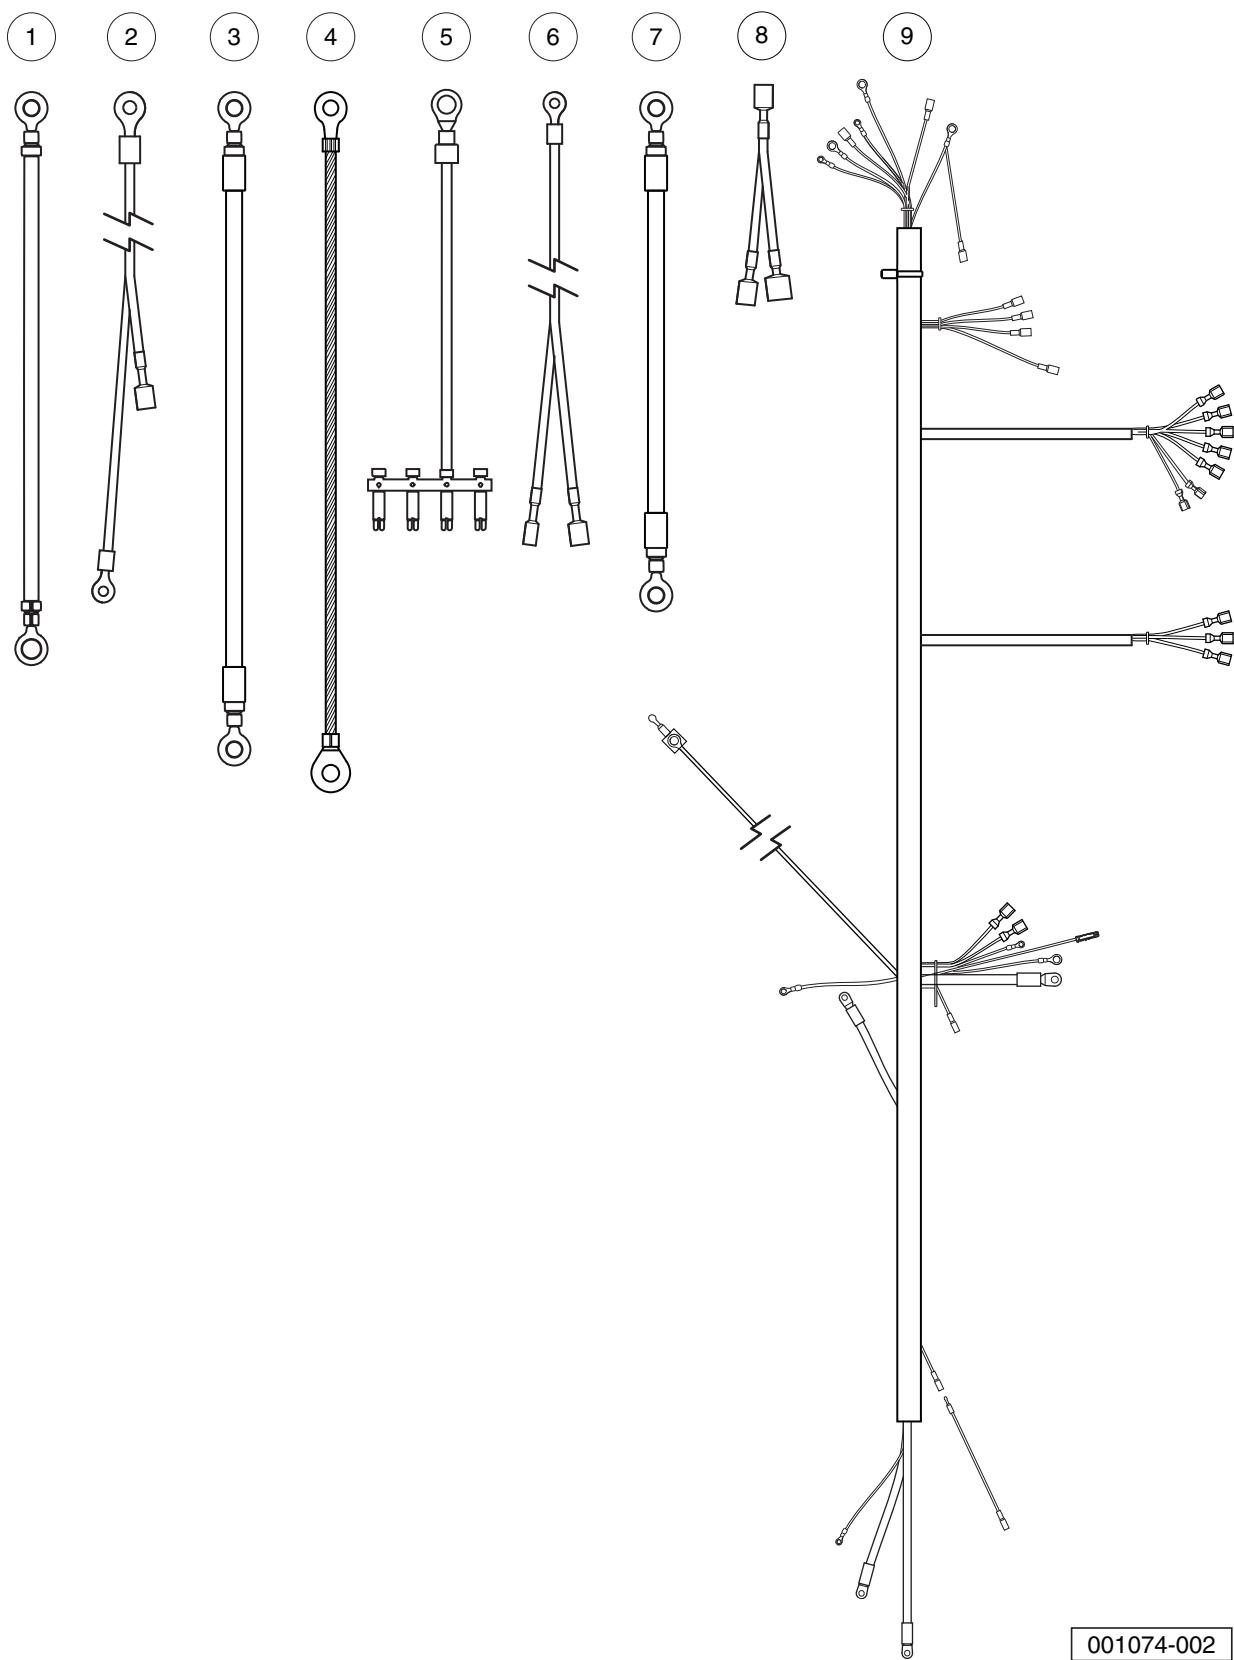


001073-002

WIRING, FUSES, AND DIODES – TURF/CARRYALL 2 AND 252 WITH AMD STARTER/GEN

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012382</u>	Wire Assy, #6 Black	1
2	<u>1012396</u>	Wire Assy #18 Black	1
3	<u>1014119</u>	Wire Assembly #6 Red	1
4	<u>1015332</u>	Wire, Ground, #10, Uninsulated	1
5	<u>1015737</u>	Wire Assy, #10 Red	1
6	<u>1016401</u>	Wire Assy, #16 Orange	1
7	<u>101837301</u>	Wire Assy, #6 Green	1
8	<u>103348501</u>	Asm, Wire Meter, F-h Jumper	1
9	<u>103687101</u>	Asm, Wire Harness, Carryall 2, Gas, AMD S/G	1

8
G

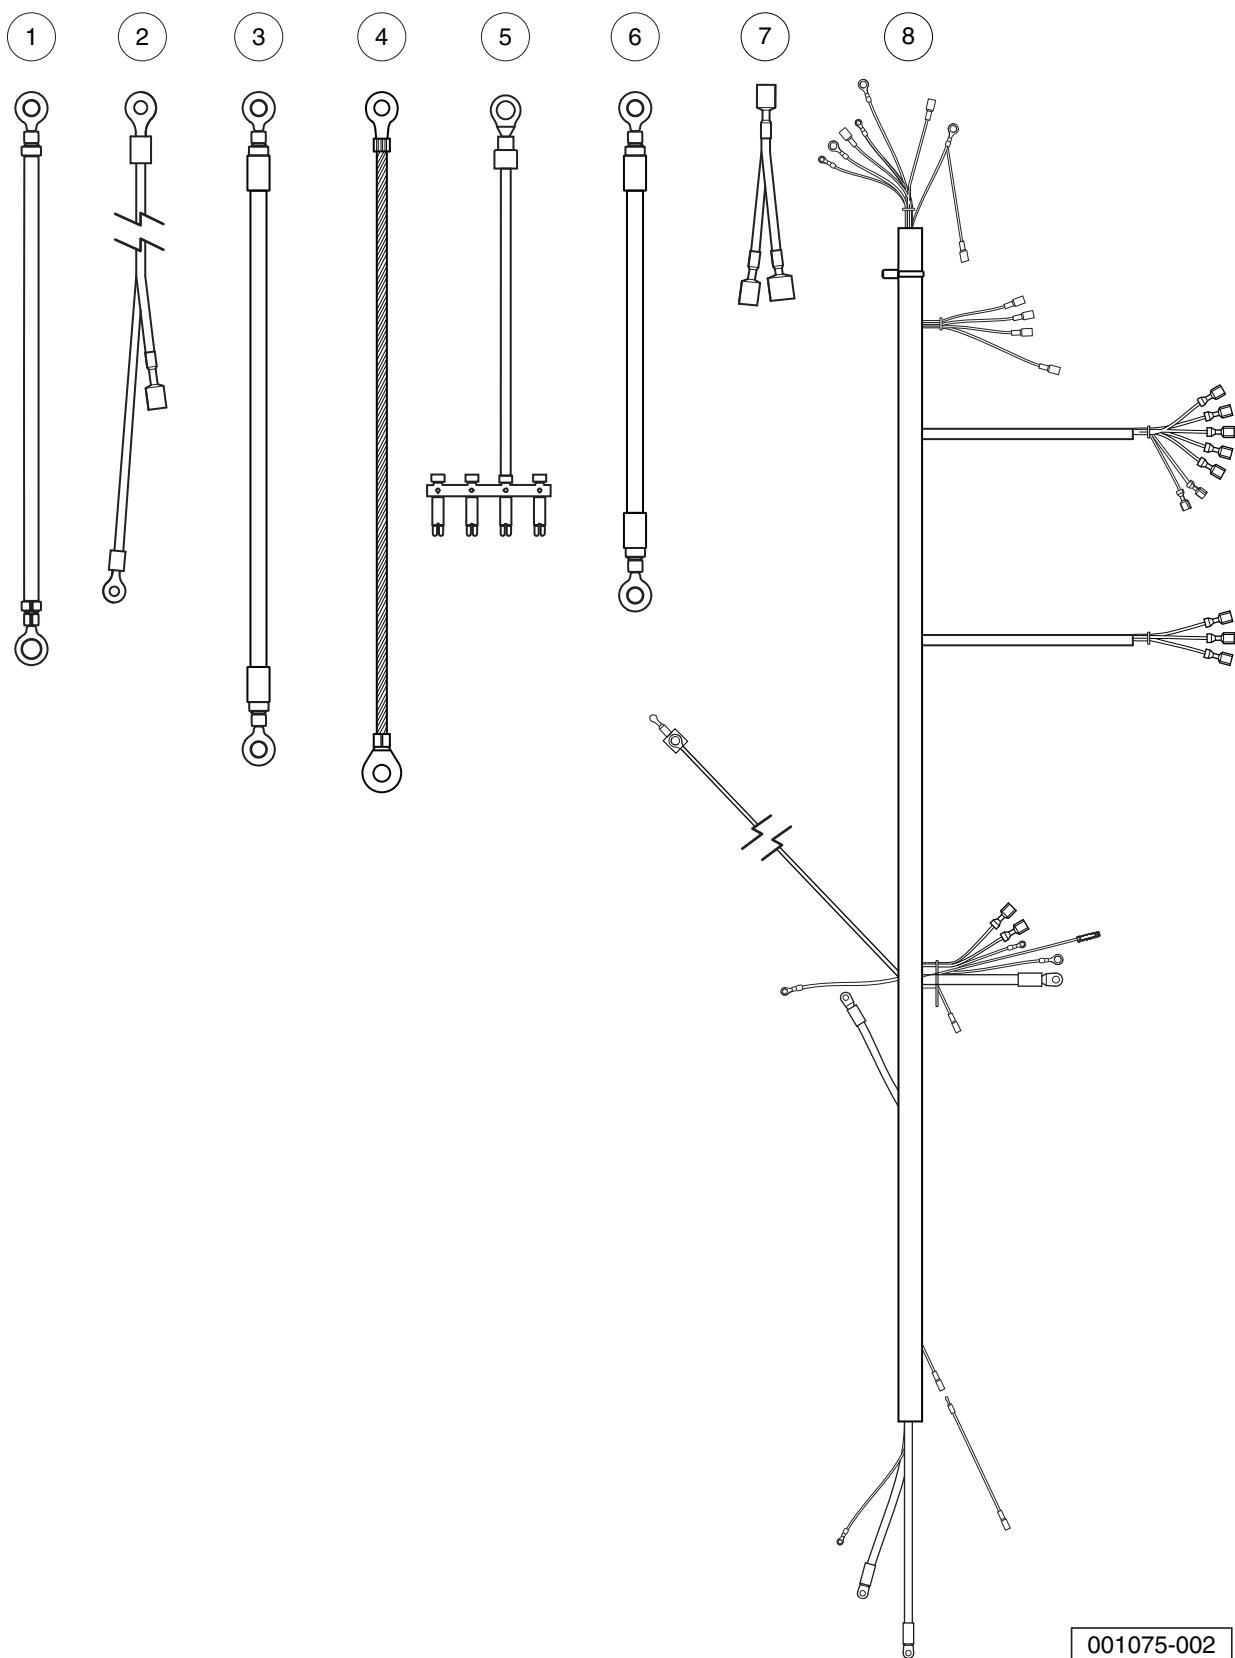


001074-002

WIRING, FUSES, AND DIODES – CARRYALL 2 PLUS WITH AMD STARTER/GEN

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012382</u>	Wire Assy, #6 Black	1
2	<u>1012396</u>	Wire Assy #18 Black	1
3	<u>1014119</u>	Wire Assembly #6 Red	1
4	<u>1015332</u>	Wire, Ground, #10, Uninsulated	1
5	<u>1015737</u>	Wire Assy, #10 Red	1
6	<u>1017006</u>	Wire Assembly Orange #18	1
7	<u>101837301</u>	Wire Assy, #6 Green	1
8	<u>103348501</u>	Asm, Wire Meter, F-h Jumper	1
9	<u>103686401</u>	Asm, Wire Harness, Carryall 2 Plus, Gas, AMD S/G	1

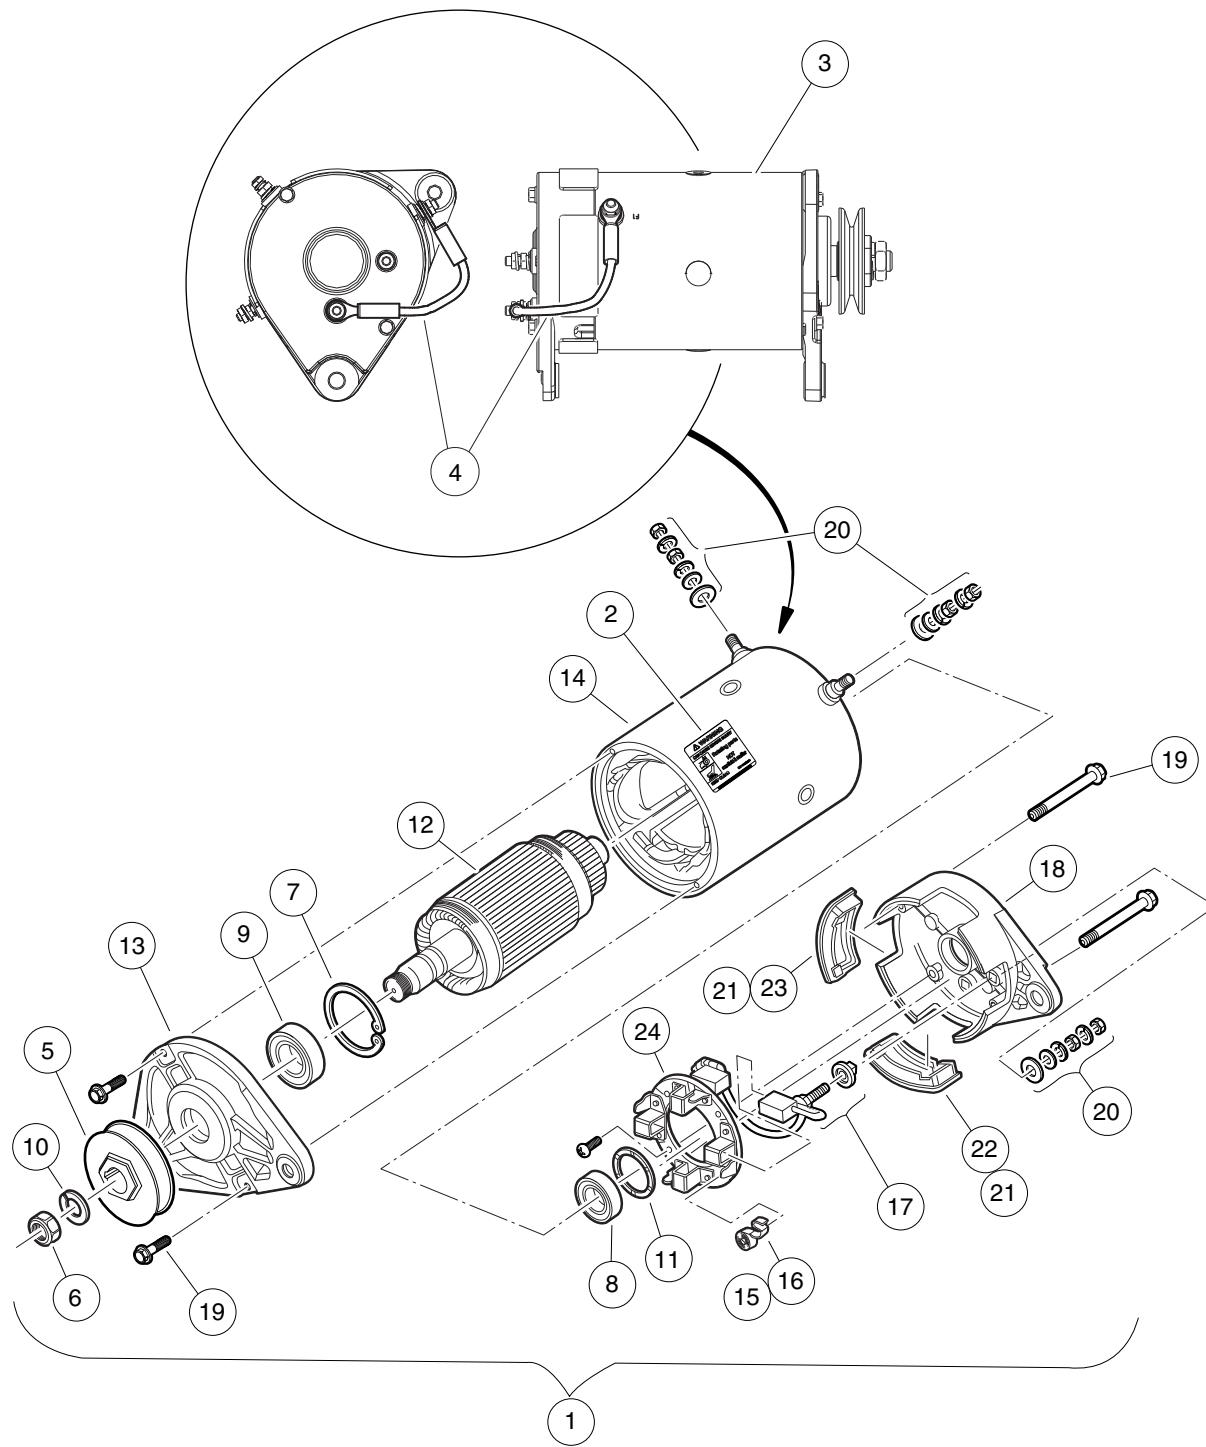
8
G



001075-002

WIRING, FUSES, AND DIODES – XRT 900 WITH AMD STARTER/GEN

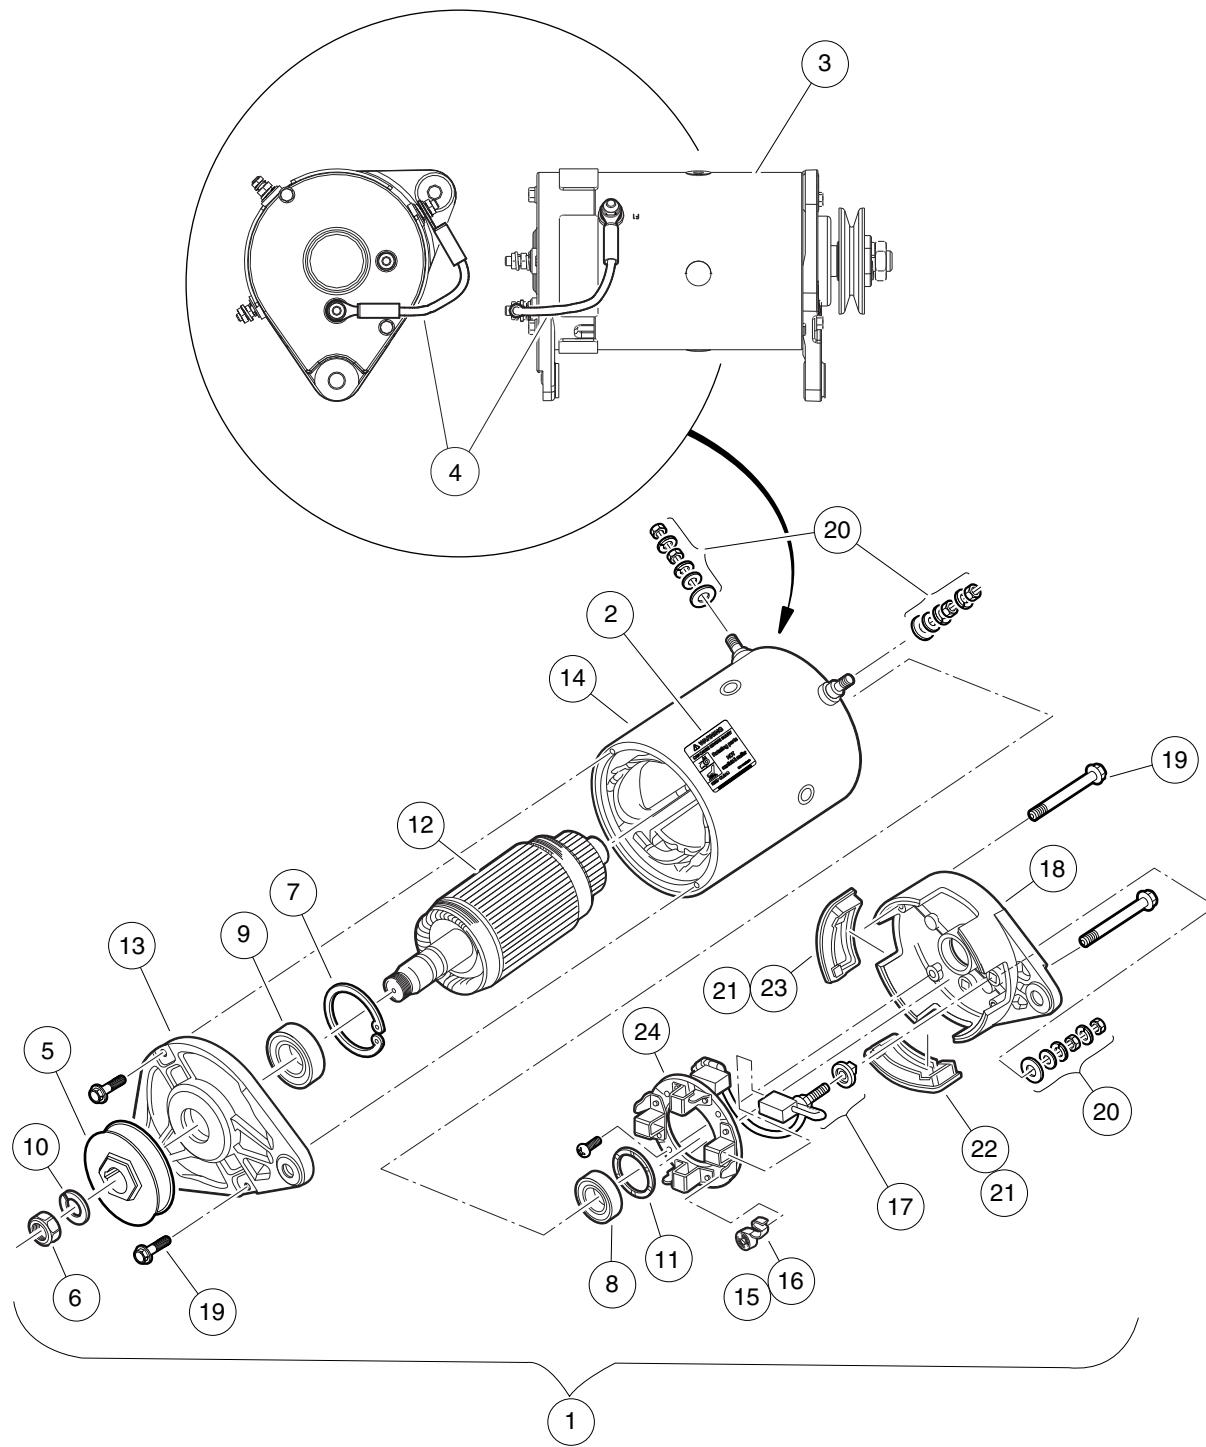
ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		8
1	<u>1012382</u>	Wire Assy, #6 Black	1	
2	<u>1012396</u>	Wire Assy #18 Black	1	
3	<u>1014119</u>	Wire Assembly #6 Red	1	
4	<u>1015332</u>	Wire, Ground, #10, Uninsulated	1	
5	<u>1015737</u>	Wire Assy, #10 Red	1	
6	<u>101837301</u>	Wire Assy, #6 Green	1	
7	<u>103348501</u>	Asm, Wire Meter, F-h Jumper	1	
8	<u>103687201</u>	Asm, Wire Harness, XRT 900, Gas, AMD S/G	1	



000124-005

STARTER/GENERATOR ASSEMBLY (PEDAL- START), MODEL 114-01-4009A

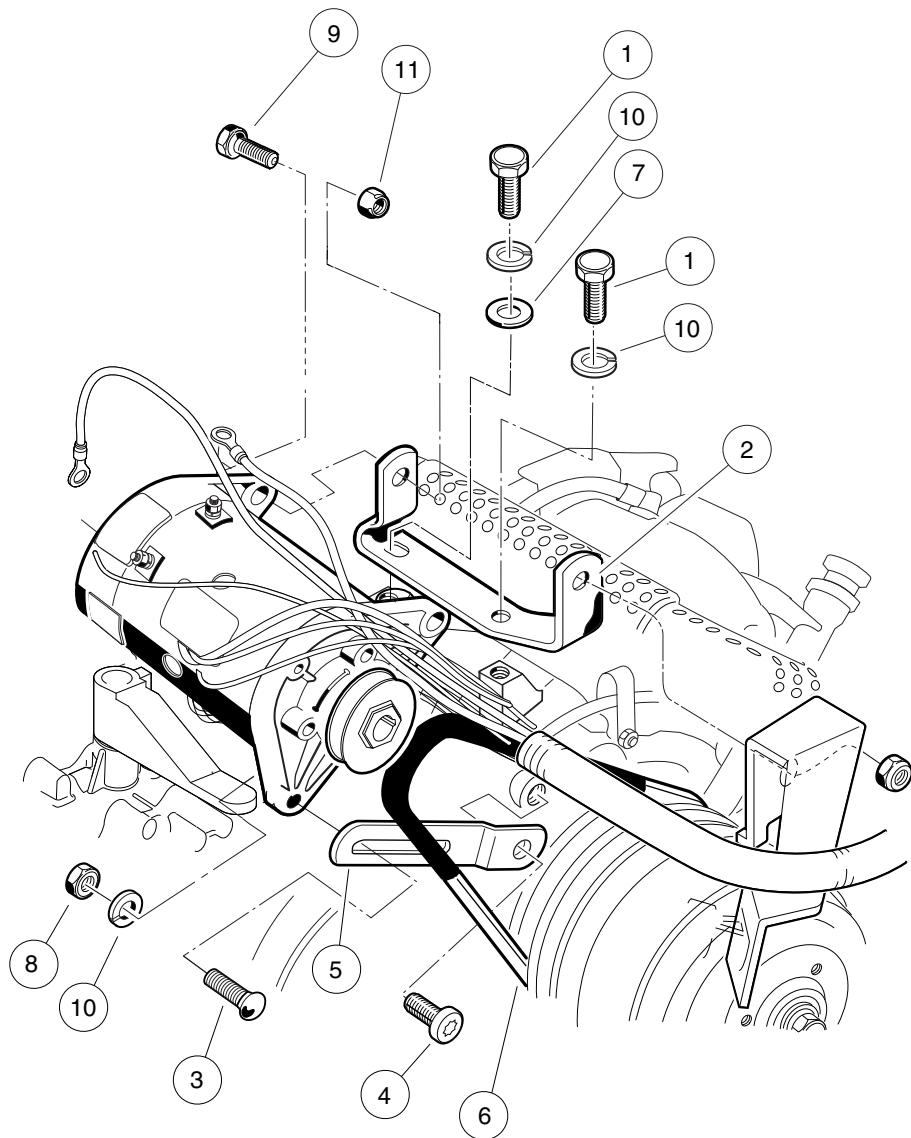
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	103678402	Asm, St/gen, Bi-rot, Ps, Svc (includes items 2 and 3)	1
2	101960501	Decal, Rotating Parts/Hot Manifold	1
3	103718702	St/gen, Bi-rot, Util,ps W/wire (includes items 4 through 24)	1
4	101837301	Wire Assy, #6 Green	1
5	102711001	Pulley, V-Belt	1
6	102838701	Nut, Hex, M14x2, S/G	1
7	102838801	Retainer, Front, S/G	1
8	102838901	Bearing, Ball, Rear, S-g	1
9	102839001	Bearing, Ball, Front, S-g	1
10	102839301	Washer, Lock M14x2, S-g	1
11	102841101	Washer, Wave, S-g	1
12	N/A	Asm, Armature, Starter/Generator	1
13	102844601	Head, Drive End, S-g	1
14	102844701	Asm, Frame and Field, Starter/Generator	1
15	103347101	Kit, Spring Brush, Starter/Generator (includes item 16)	1
16	N/A	Spring, Brush, S-g	4
17	103347301	Set, Brush Term, S-g	1
18	103347601	Head, Comm End, S-g	1
19	103347701	Set, Fast, Ceh Deh, S-g	1
20	103347801	Set, Term Hardware, S/G	1
21	103347901	Kit, Cover, Brush Insp, Starter/Generator (includes items 22 and 23)	1
22	N/A	Plug, Rubber Drain, Start/Generator	3
23	N/A	Cover, Inspection, S-g	1
24	103953301	Kit, Brush And Brush Holder	1



000124-005

**STARTER/GENERATOR ASSEMBLY (KEY-START),
MODEL 114-04-4001A**

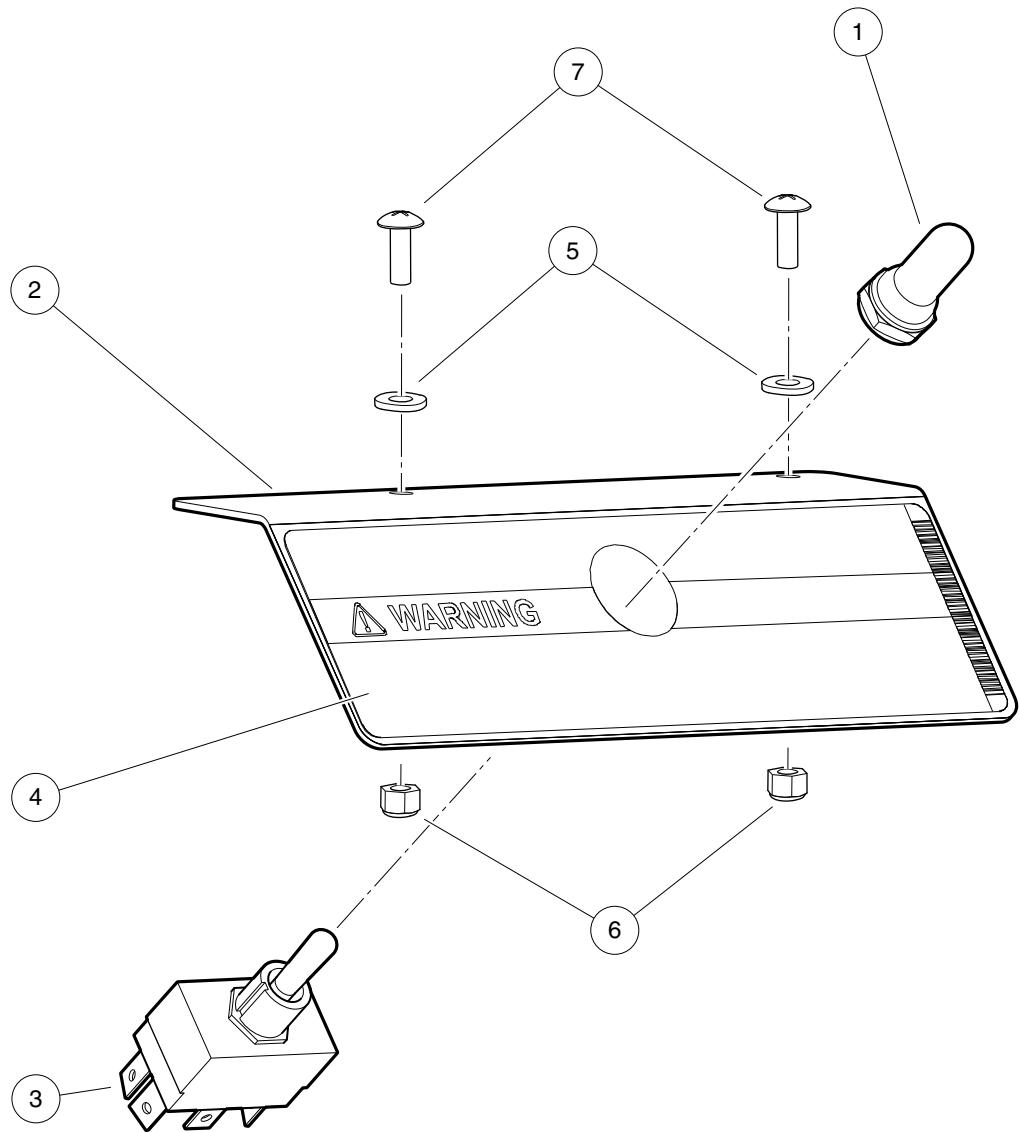
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103678502</u>	Asm, St/gen, Bi-rot, Ks, Svc (includes items 2 and 3)	1
2	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	1
3	N/A	St/gen, Bi-rot, Util, Ks (includes items 4 through 24)	1
4	<u>101837301</u>	Wire Assy, #6 Green	1
5	<u>102711001</u>	Pulley, V-Belt	1
6	<u>102838701</u>	Nut, Hex, M14x2, S/G	1
7	<u>102838801</u>	Retainer, Front, S/G	1
8	<u>102838901</u>	Bearing, Ball, Front, S-g	1
9	<u>102839001</u>	Bearing, Ball, Front, S-g	1
10	<u>102839301</u>	Washer, Lock M14x2, S-g	1
11	<u>102841101</u>	Washer, Wave, S-g	1
12	N/A	Asm, Armature, Starter/Generator	1
13	<u>102844601</u>	Head, Drive End, S-g	1
14	<u>102844701</u>	Asm, Frame and Field, Starter/Generator	1
15	<u>103347101</u>	Kit, Spring Brush, Starter/Generator (includes item 16)	1
16	N/A	Spring, Brush, S-g	4
17	<u>103347301</u>	Set, Brush Term, S-g	1
18	<u>103347601</u>	Head, Comm End, S-g	1
19	<u>103347701</u>	Set, Fastener, Ceh Deh, S-g	1
20	<u>103347801</u>	Set, Term Hardware, S/G	1
21	<u>103347901</u>	Kit, Cover, Brush Insp, Starter/Generator (includes items 22 and 23)	1
22	N/A	Plug, Rubber Drain, Start/Generator	3
23	N/A	Cover, Inspection, S-g	1
24	<u>103953301</u>	Kit, Brush And Brush Holder	1



000238-005

STARTER/GENERATOR MOUNTING – 114-0X-400XX MODELS

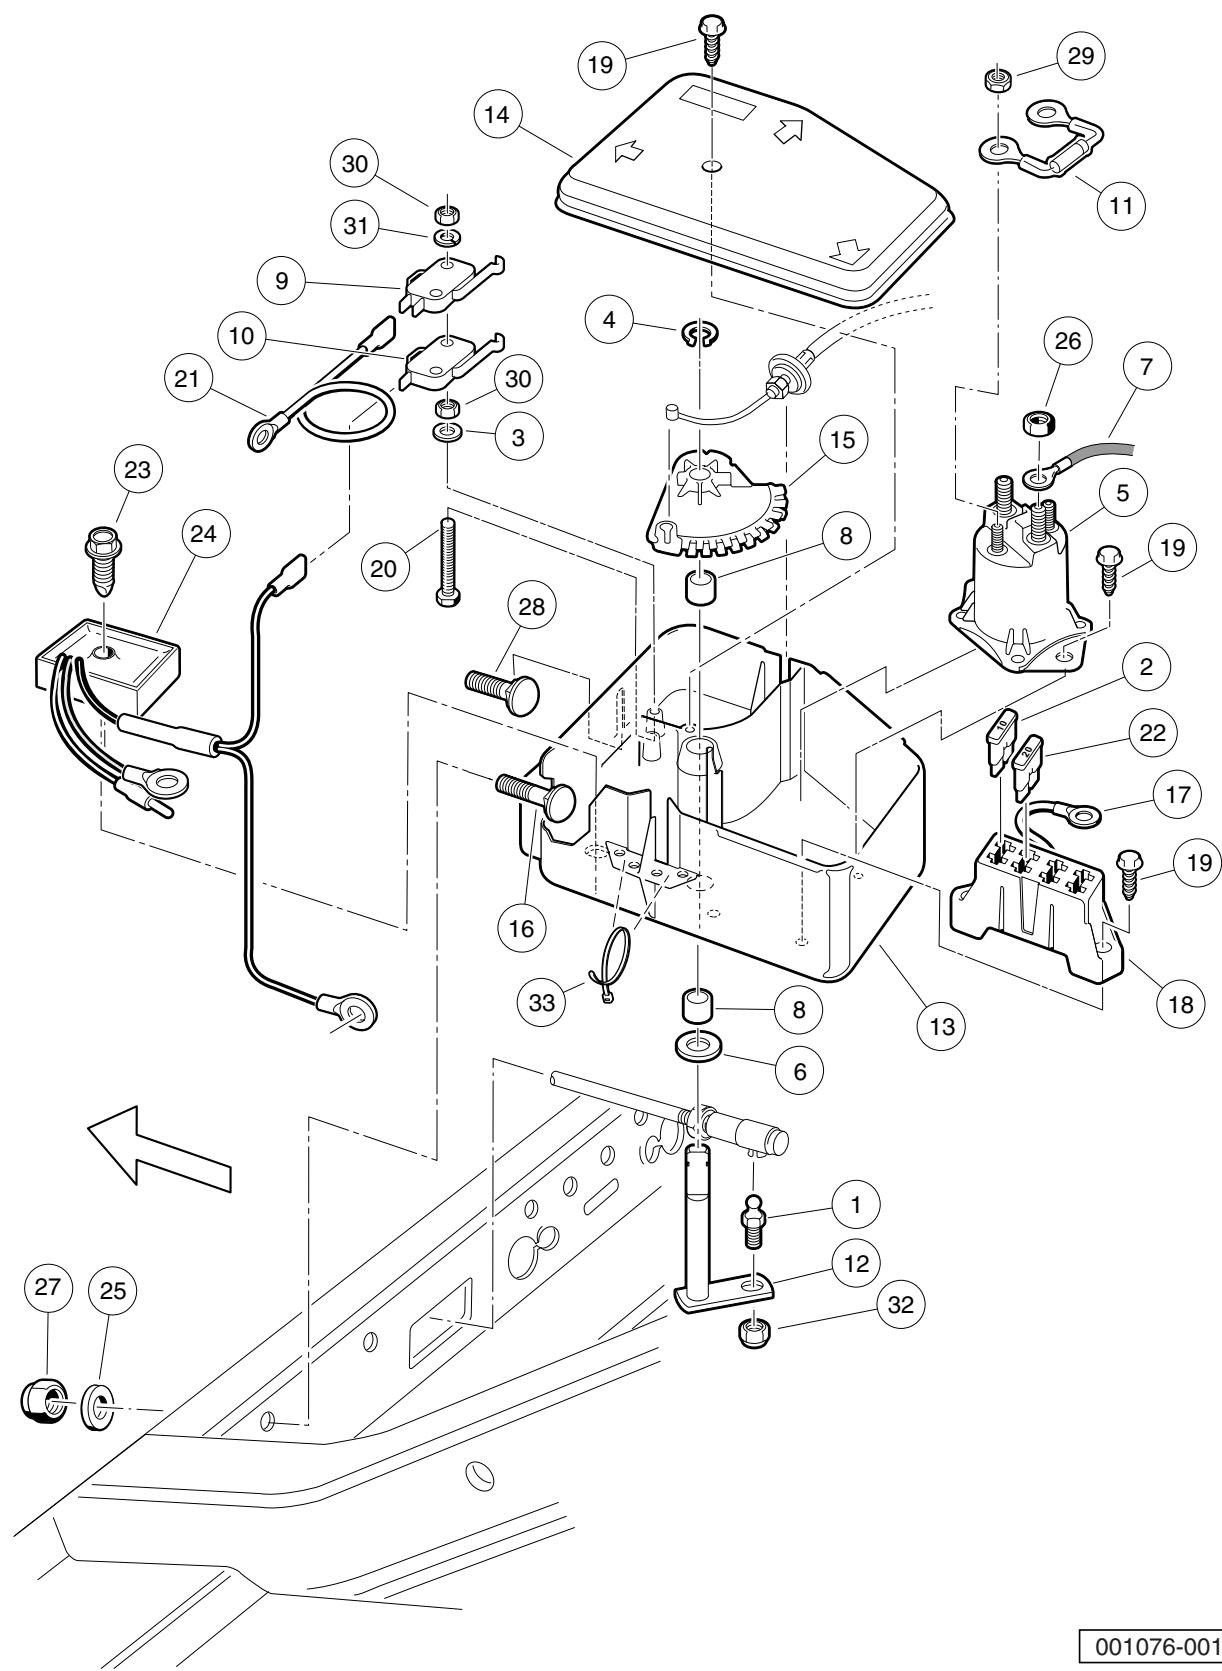
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	2
2	<u>101524002</u>	Bracket, Starter/Generator Mounting	1
3	<u>1015932</u>	Bolt, Carriage, 5/16-18	1
4	<u>1016074</u>	Screw, M8-1.25 X 18mm Torx	1
5	<u>1016883</u>	Bracket, Starter/Generator Adjustment	1
6	<u>101916701</u>	V-Belt	1
7	<u>1241</u>	Washer, 5/16 Type A Flat	1
8	<u>1242</u>	Nut, 5/16-18 Hex	1
9	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	2
10	<u>7174</u>	Lockwasher, 5/16 Split	3
11	<u>8754</u>	Locknut, 3/8-16 Hex	2



000755-003

OPERATION AND MAINTENANCE SWITCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101908401</u>	Boot, Switch	1
2	<u>101922501</u>	Bracket, Tow/Run Switch Mounting	1
3	<u>103198401</u>	Switch, Toggle, SPDT	1
4	<u>103205501</u>	Decal, Run/Service Switch	1
5	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
6	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2
7	<u>8248</u>	Screw, 1/4-20 X 0.75, Truss-Head Machine	2

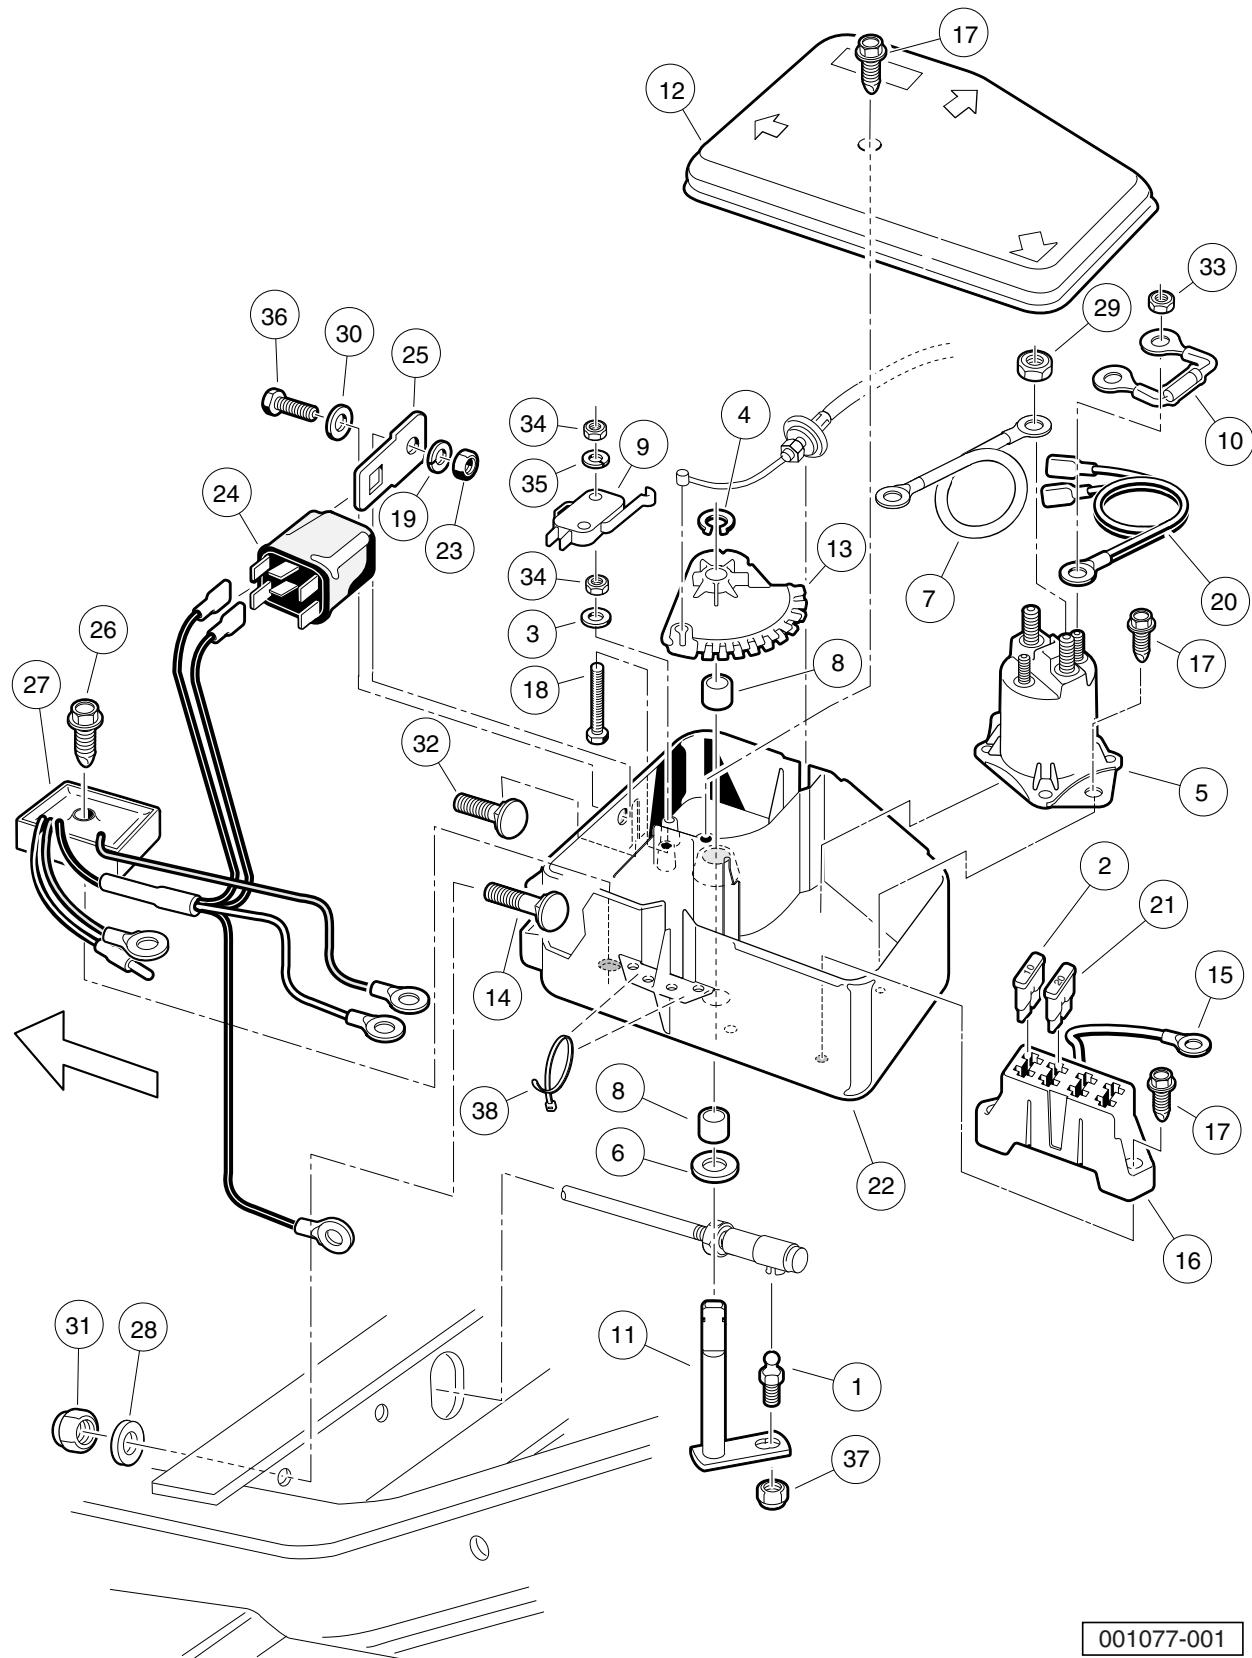


ELECTRICAL COMPONENT BOX – TURF/CARRYALL 2 AND 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010954</u>	Stud, Ball, 1/4-28 X 0.560	1
2	<u>1012295</u>	Fuse, 10-Amp	1
3	<u>1012431</u>	Washer, #4 Flat	2
4	<u>1013589</u>	Ring, Retaining, 0.338" Internal	1
5	<u>1013609</u>	Solenoid, 12-Volt	1
6	<u>1014065</u>	Washer, Flat, 0.38" ID, Delrin	1
7	<u>1014119</u>	Wire Assembly #6 Red	1
8	<u>1014145</u>	Bushing, Secondary Weight, Split	2
9	<u>1014807</u>	Switch, Limit	1
10	<u>1014808</u>	Switch, Limit	1
11	<u>1014948</u>	Diode	1
12	<u>1015345</u>	Bell Crank and Shaft Assembly	1
13	<u>1015371</u>	Box, Electrical Component	1
14	<u>1015372</u>	Cover, Electric Box	1
15	<u>1015373</u>	Cam, Electric Box	1
16	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	1
17	<u>1015737</u>	Wire Assy, #10 Red	1
18	<u>1015741</u>	Fuse Block	1
19	<u>1015752</u>	Screw, #12-16 X 0.625, Hi-Lo	5
20	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2
21	<u>1016401</u>	Wire Assy, #16 Orange	1
22	<u>1016423</u>	Fuse, 20-Amp	1
23	<u>101856102</u>	Screw, 1/4-15 X 1.50, Hi-lo, Hex	1
24	<u>102711201</u>	Voltage Regulator	1
25	<u>1241</u>	Washer, 5/16 Type A Flat	2
26	<u>1242</u>	Nut, 5/16-18 Hex	2
27	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
28	<u>7818</u>	Bolt, Carriage, 5/16-18 X 1.5	1
29	<u>7893</u>	Nut, #10-32 Hex	2
30	<u>8057</u>	Nut, #4-40 Hex Machine	4
31	<u>8058</u>	Lockwasher, #4 Split	2
32	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1
33	<u>8990</u>	Tie Wrap, 8" Nylon	2

8

G



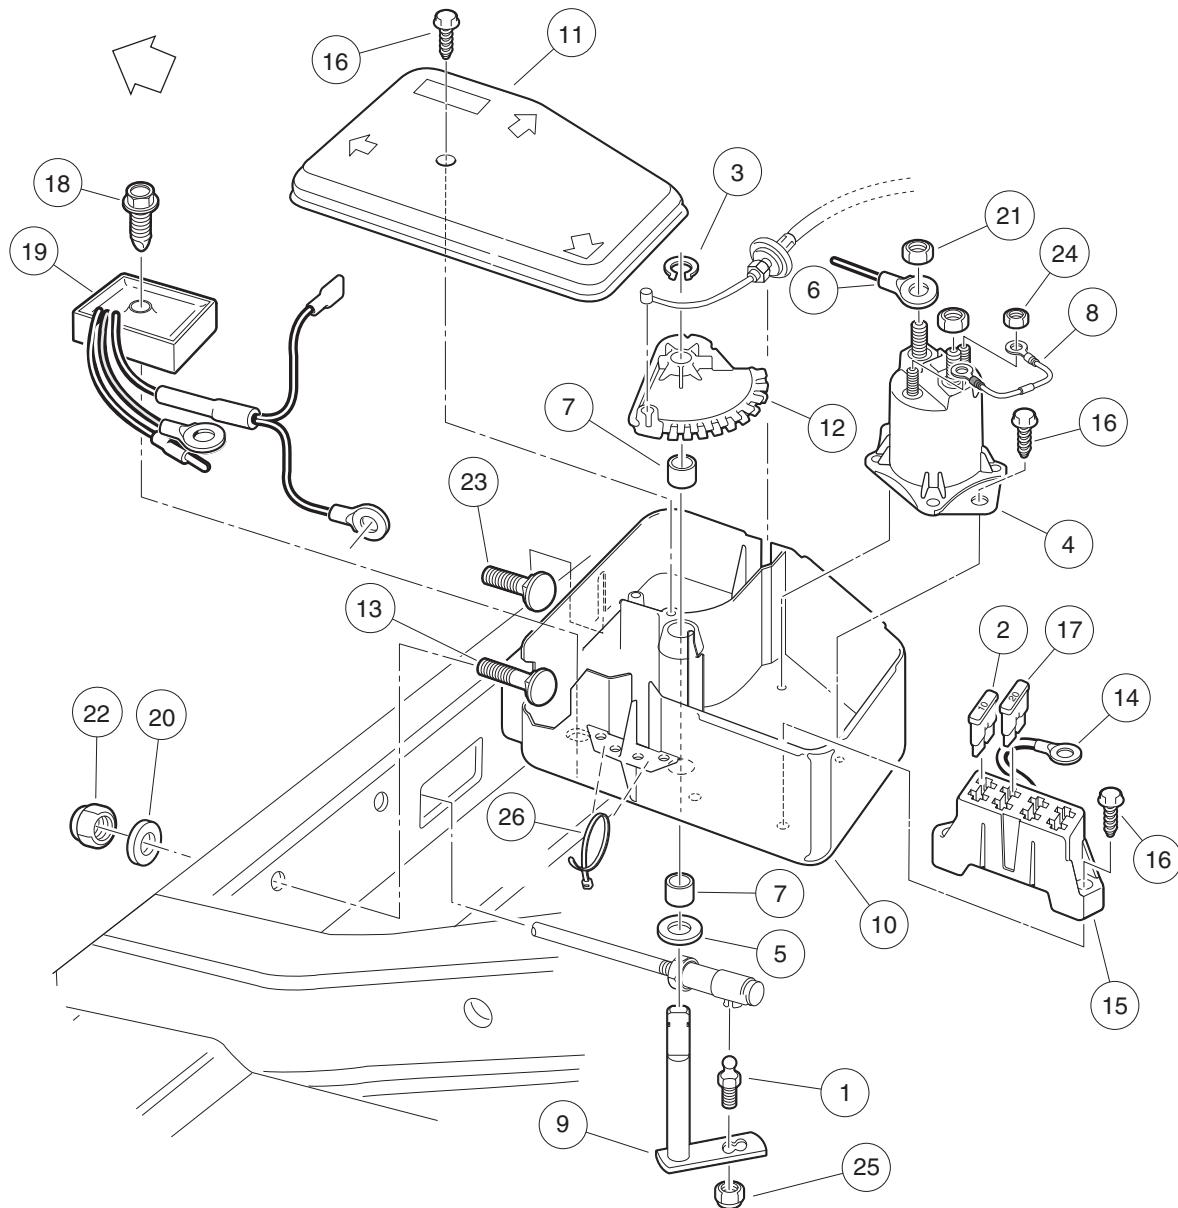
001077-001

ELECTRICAL COMPONENT BOX – CARRYALL 2 PLUS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010954</u>	Stud, Ball, 1/4-28 X 0.560	1
2	<u>1012295</u>	Fuse, 10-Amp	1
3	<u>1012431</u>	Washer, #4 Flat	2
4	<u>1013589</u>	Ring, Retaining, 0.338" Internal	1
5	<u>1013609</u>	Solenoid, 12-Volt	1
6	<u>1014065</u>	Washer, Flat, 0.38" ID, Delrin	1
7	<u>1014119</u>	Wire Assembly #6 Red	1
8	<u>1014145</u>	Bushing, Secondary Weight, Split	2
9	<u>1014807</u>	Switch, Limit	1
10	<u>1014948</u>	Diode	1
11	<u>1015345</u>	Bell Crank and Shaft Assembly	1
12	<u>1015372</u>	Cover, Electric Box	1
13	<u>1015373</u>	Cam, Electric Box	1
14	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	1
15	<u>1015737</u>	Wire Assy, #10 Red	1
16	<u>1015741</u>	Fuse Block	1
17	<u>1015752</u>	Screw, #12-16 X 0.625, Hi-Lo	5
18	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2
19	<u>1016</u>	Lockwasher, #10 Split	1
20	<u>1016401</u>	Wire Assy, #16 Orange	1
21	<u>1016423</u>	Fuse, 20-Amp	1
22	<u>1016997</u>	Electrical Component Box	1
23	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	1
24	<u>1017239</u>	Relay W/mounting Bracket	1
25	<u>1017243</u>	Mounting Bracket, Relay	1
26	<u>101856102</u>	Screw, 1/4-15 X 1.50, Hi-lo, Hex	1
27	<u>102803401</u>	Asm, Voltage Regulator Key Sta	1
28	<u>1241</u>	Washer, 5/16 Type A Flat	2
29	<u>1242</u>	Nut, 5/16-18 Hex	2
30	<u>183</u>	Washer, #10, Type A, Flat	1
31	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
32	<u>7818</u>	Bolt, Carriage, 5/16-18 X 1.5	1
33	<u>7893</u>	Nut, #10-32 Hex	2
34	<u>8057</u>	Nut, #4-40 Hex Machine	4
35	<u>8058</u>	Lockwasher, #4 Split	2
36	<u>8450</u>	Screw, #10-24 X 0.50, Hex-Head	1
37	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1
38	<u>8990</u>	Tie Wrap, 8" Nylon	3

8

G



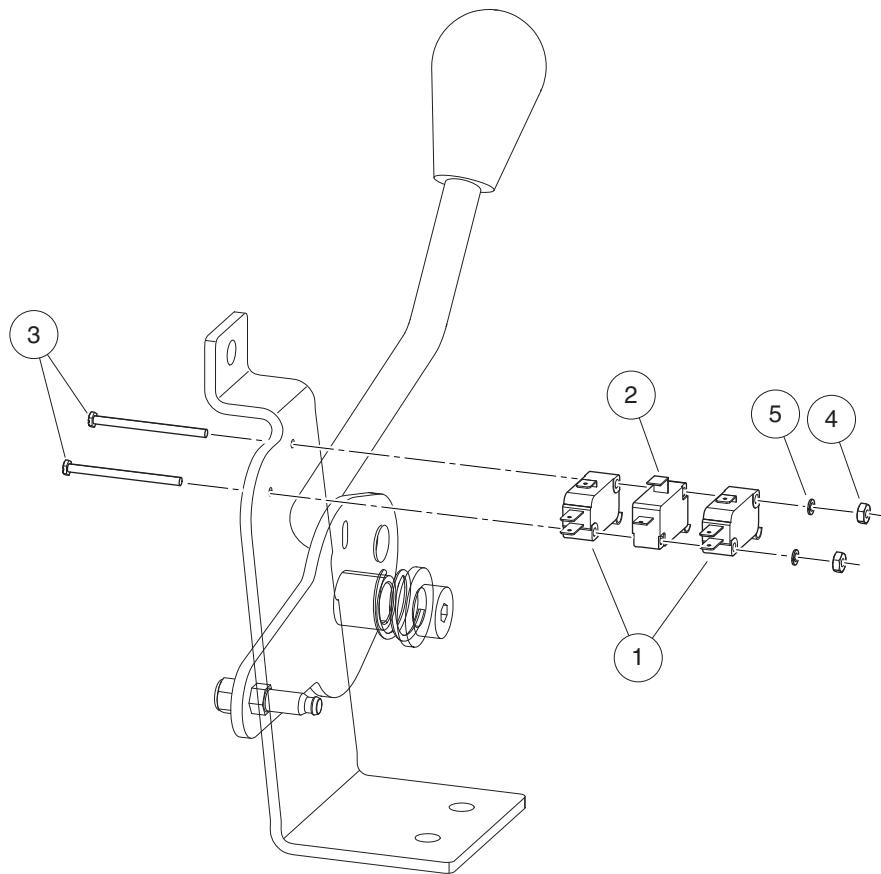
001078-001

ELECTRICAL COMPONENT BOX – XRT 900

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010954</u>	Stud, Ball, 1/4-28 X 0.560	1
2	<u>1012295</u>	Fuse, 10-Amp	1
3	<u>1013589</u>	Ring, Retaining, 0.338" Internal	1
4	<u>1013609</u>	Solenoid, 12-Volt	1
5	<u>1014065</u>	Washer, Flat, 0.38" ID, Delrin	1
6	<u>1014119</u>	Wire Assembly #6 Red	1
7	<u>1014145</u>	Bushing, Secondary Weight, Split	2
8	<u>1014948</u>	Diode	1
9	<u>1015345</u>	Bell Crank and Shaft Assembly	1
10	<u>1015371</u>	Box, Electrical Component	1
11	<u>1015372</u>	Cover, Electric Box	1
12	<u>1015373</u>	Cam, Electric Box	1
13	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	1
14	<u>1015737</u>	Wire Assy, #10 Red	1
15	<u>1015741</u>	Fuse Block	1
16	<u>1015752</u>	Screw, #12-16 X 0.625, Hi-Lo	5
17	<u>1016423</u>	Fuse, 20-Amp	1
18	<u>101856102</u>	Screw, 1/4-15 X 1.50, Hi-lo, Hex	1
19	<u>102711201</u>	Voltage Regulator	1
20	<u>1241</u>	Washer, 5/16 Type A Flat	2
21	<u>1242</u>	Nut, 5/16-18 Hex	2
22	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
23	<u>7818</u>	Bolt, Carriage, 5/16-18 X 1.5	1
24	<u>7893</u>	Nut, #10-32 Hex	2
25	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1
26	<u>8990</u>	Tie Wrap, 8" Nylon	2

8

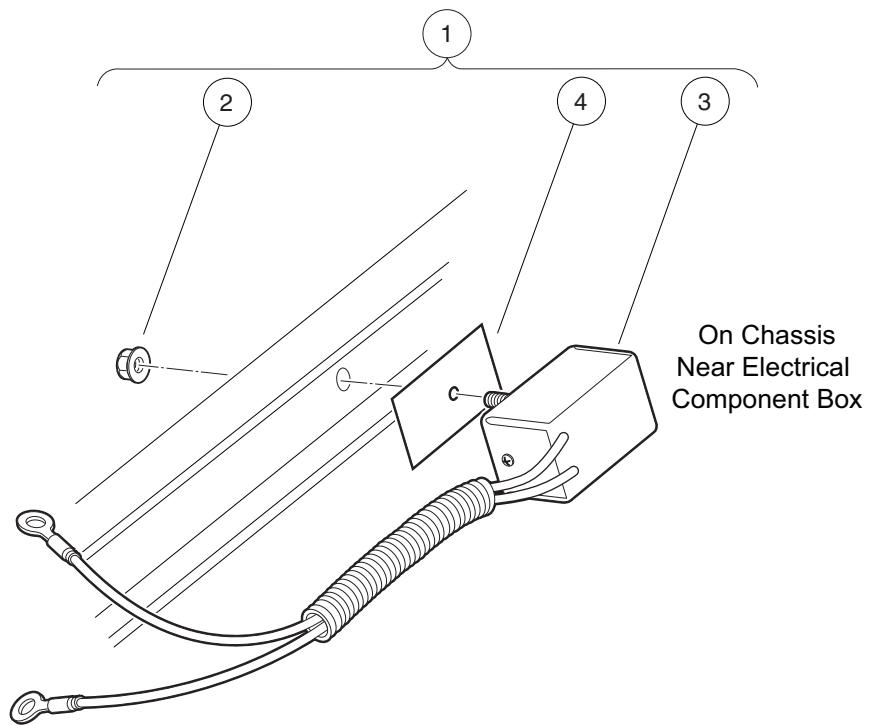
G

8**G**

001080-001

FORWARD/REVERSE SHIFTER SWITCHES – DASH MOUNTED SHIFTER

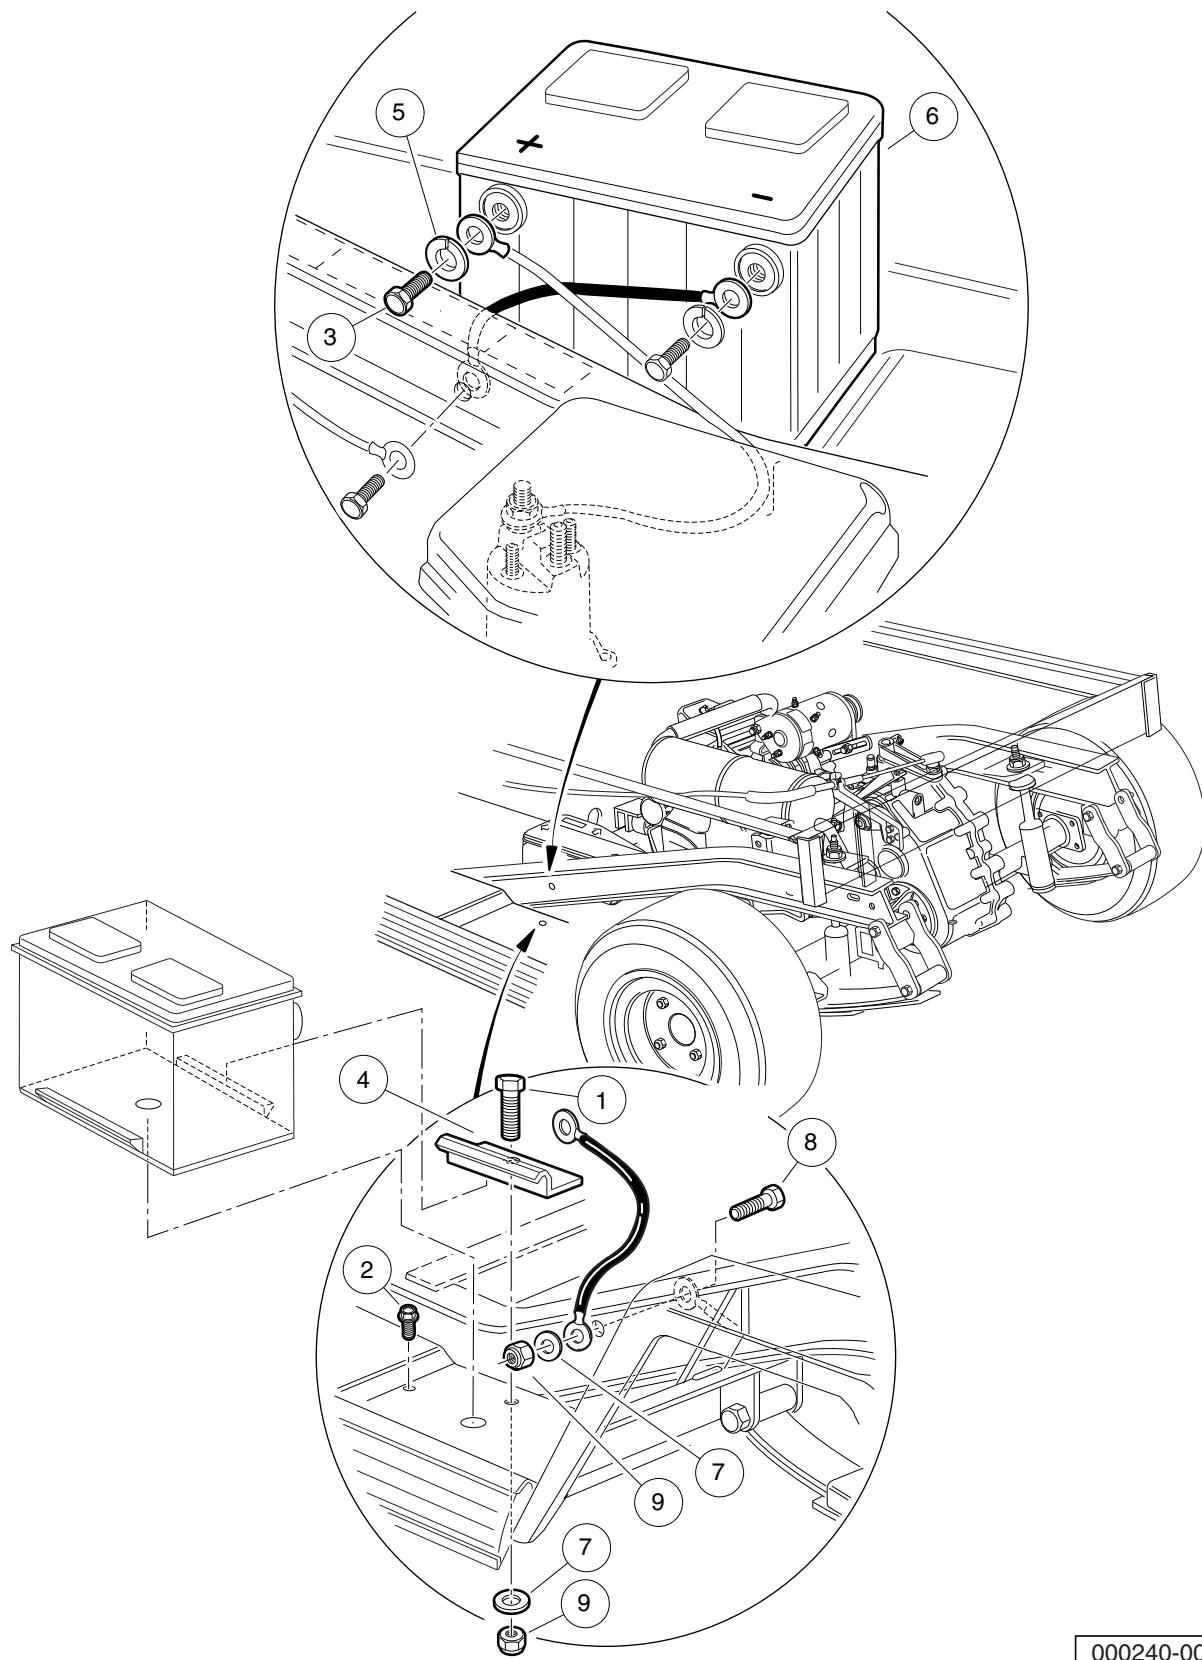
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014807</u>	Switch, Limit	2
2	<u>1014808</u>	Switch, Limit	1
3	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2
4	<u>8057</u>	Nut, #4-40 Hex Machine	2
5	<u>8058</u>	Lockwasher, #4 Split	2



001079-001

CHARGING DIODE, KEY-START – XRT VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102272501</u>	Kit, Diode (includes items 2 through 4)	1
2	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	1
3	<u>102264001</u>	Diode Assembly	1
4	<u>102269701</u>	Thermal Pad	1

8**G**

BATTERY – GASOLINE UTILITY VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1	
2	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	1	
3	<u>1014375</u>	Screw, 3/8-16 X 0.50, Stainless Steel, Hex-Head	2	
4	<u>101898001</u>	Clamp, Battery	1	
5	<u>102355301</u>	Lockwasher, 3/8 Split Ss	2	
6	<u>103496801</u>	Battery, Start, 12v	1	
7	<u>1241</u>	Washer, 5/16 Type A Flat	2	
8	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1	
9	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	

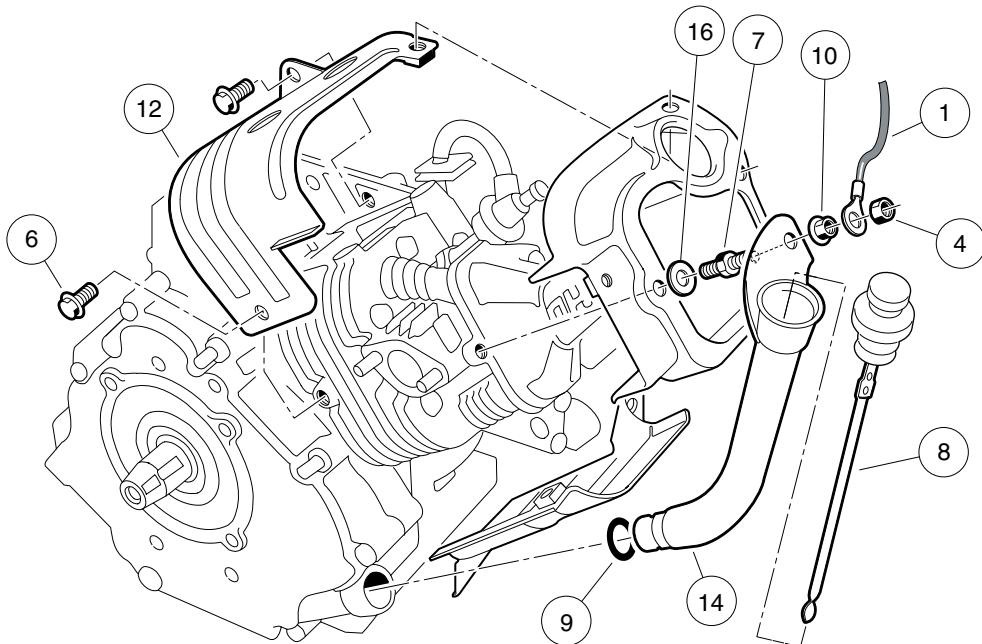
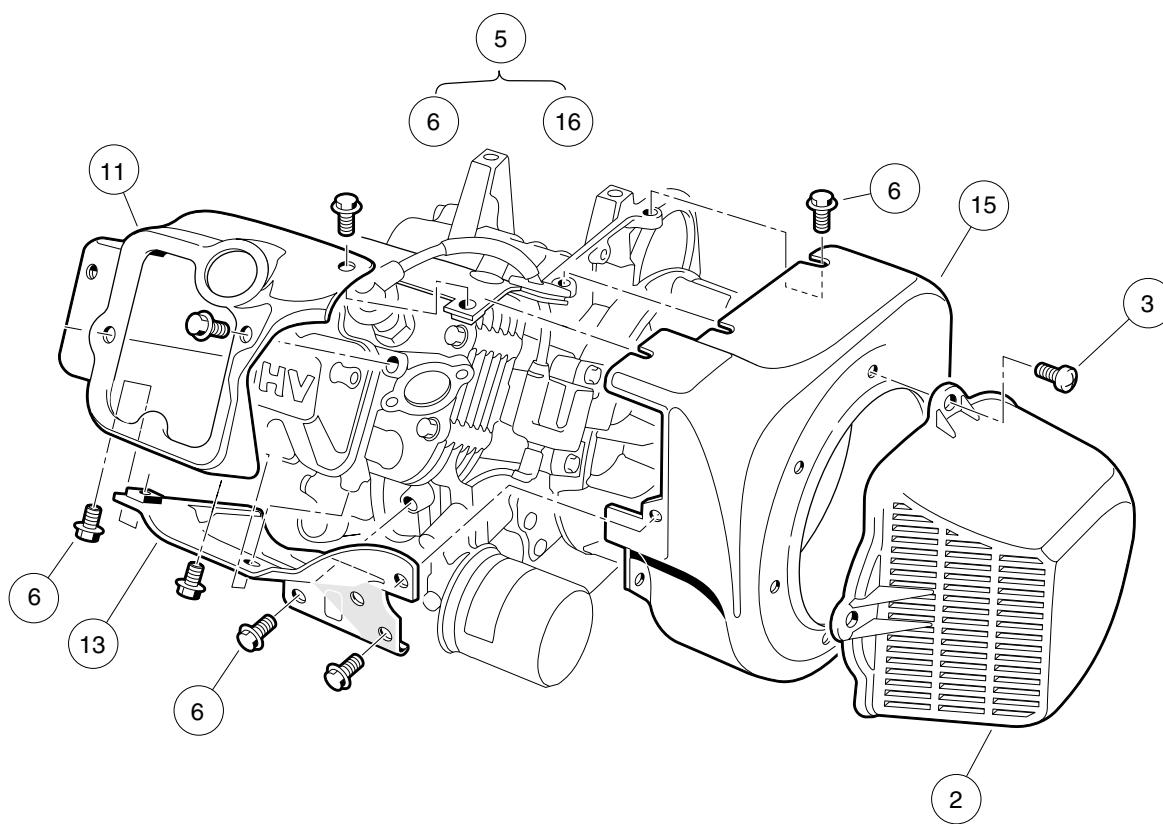
8

G

ENGINE (S27) W/O ACR, 50-STATE

9

G

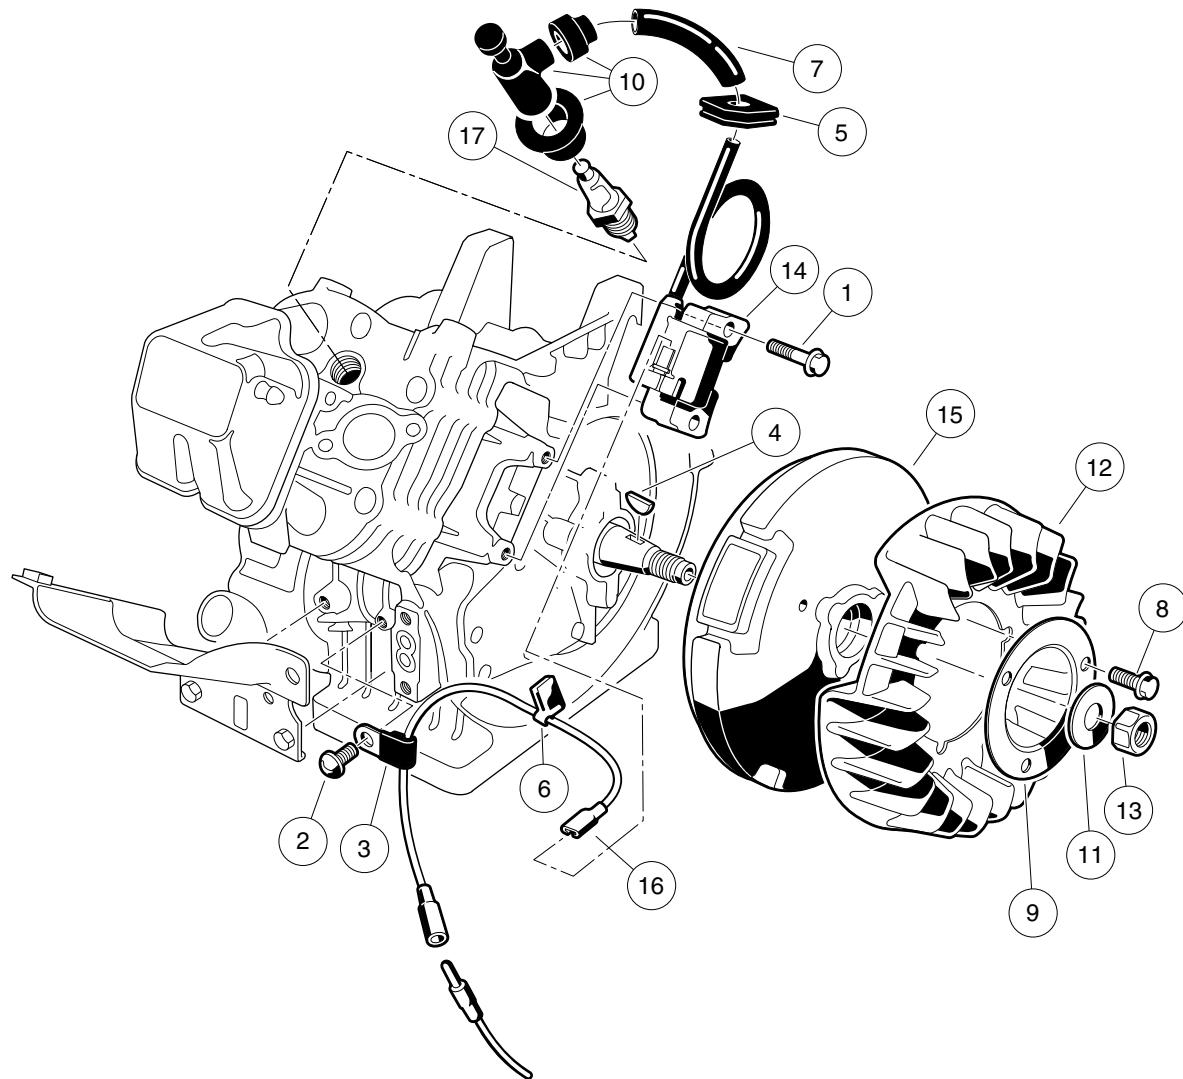
9**G**

000201-002

FE350 ENGINE (S27) W/O ACR, SHROUDS, AND BRACKETS; 50-STATE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	9
1	<u>1015332</u>	Wire, Ground, #10, Uninsulated	1
2	<u>1015649</u>	Shroud, Fan	1
3	<u>1015969</u>	Screw, M6-1.00 X 10mm, Pan Hd	4
4	<u>101887601</u>	Locknut, M6-1.00 Nylon Insert	1
5	<u>103386202</u>	Engine, FE350 S27 (includes items 6 through 16)	1
6	1016456	Bolt, Flange Head, M6 x 1 x 12 mm	16
7	<u>1016507</u>	Bolt, Two-Ended	1
8	1016531	Dipstick	1
9	<u>1016539</u>	O-Ring	1
10	1016547	Nut, M6 Flange	1
11	<u>1017474</u>	Shroud, Engine	1
12	<u>1017475</u>	Shroud, Engine	1
13	<u>1017476</u>	Shroud, Engine	1
14	<u>1017486</u>	Tube, Oil Filler	1
15	<u>101916101</u>	Housing, FE350 Fan	1
16	N/A	Washer, 6mm Flat	1

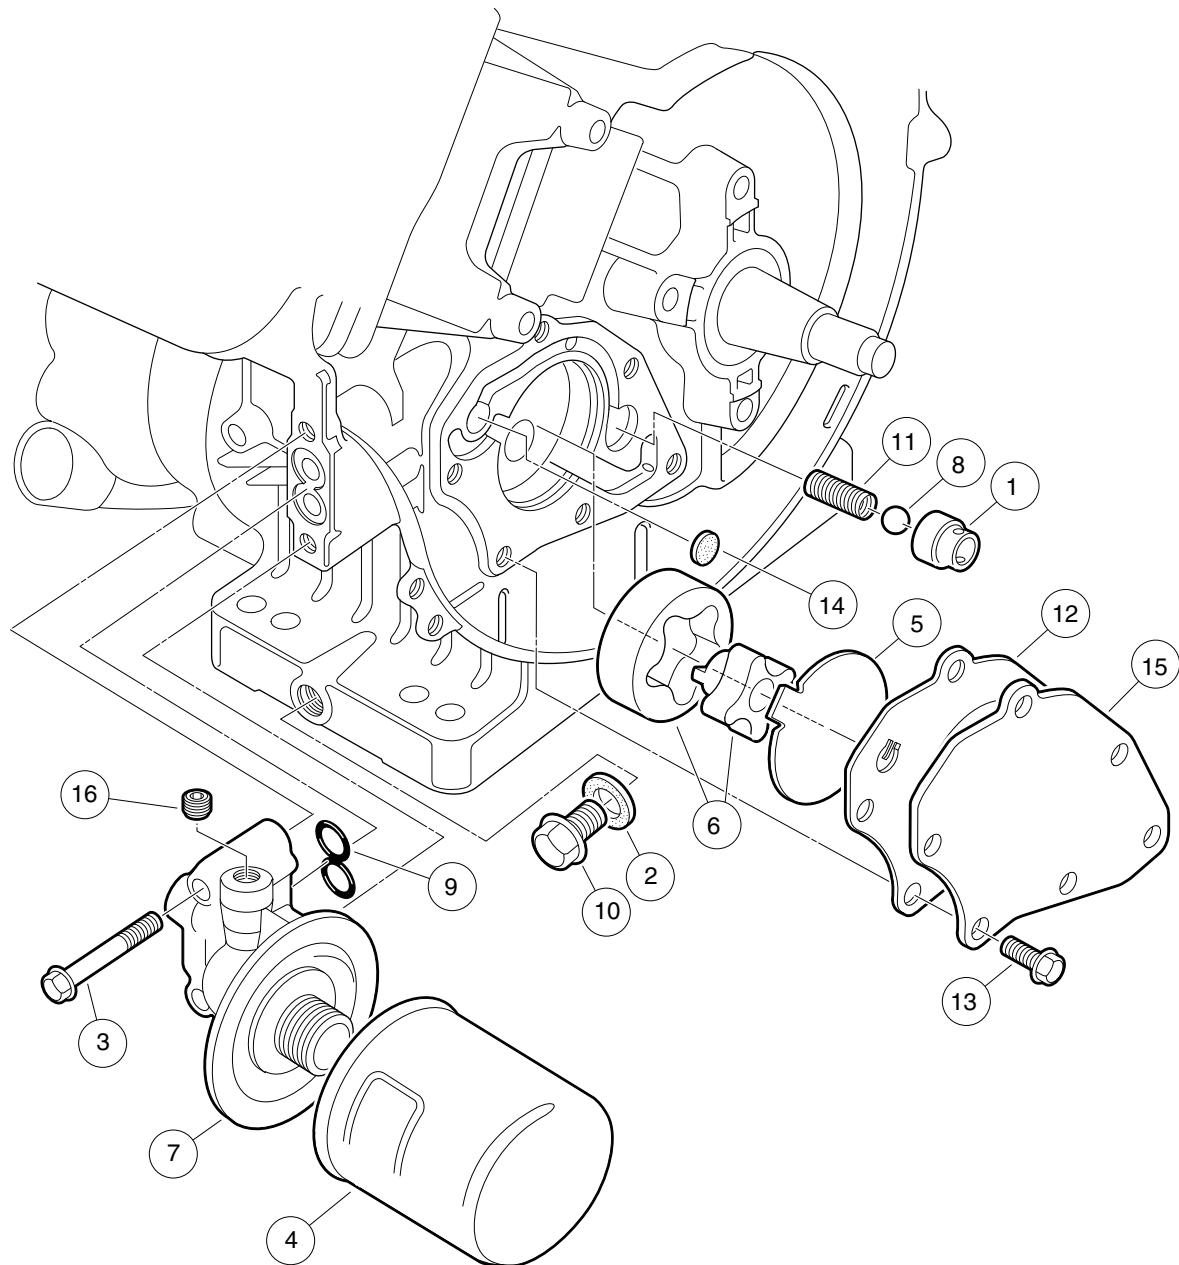
Note: The S27 engine meets emission requirements for all 50 states.



000202-004

FE350 ENGINE (S27) – IGNITION COMPONENTS AND FLYWHEEL

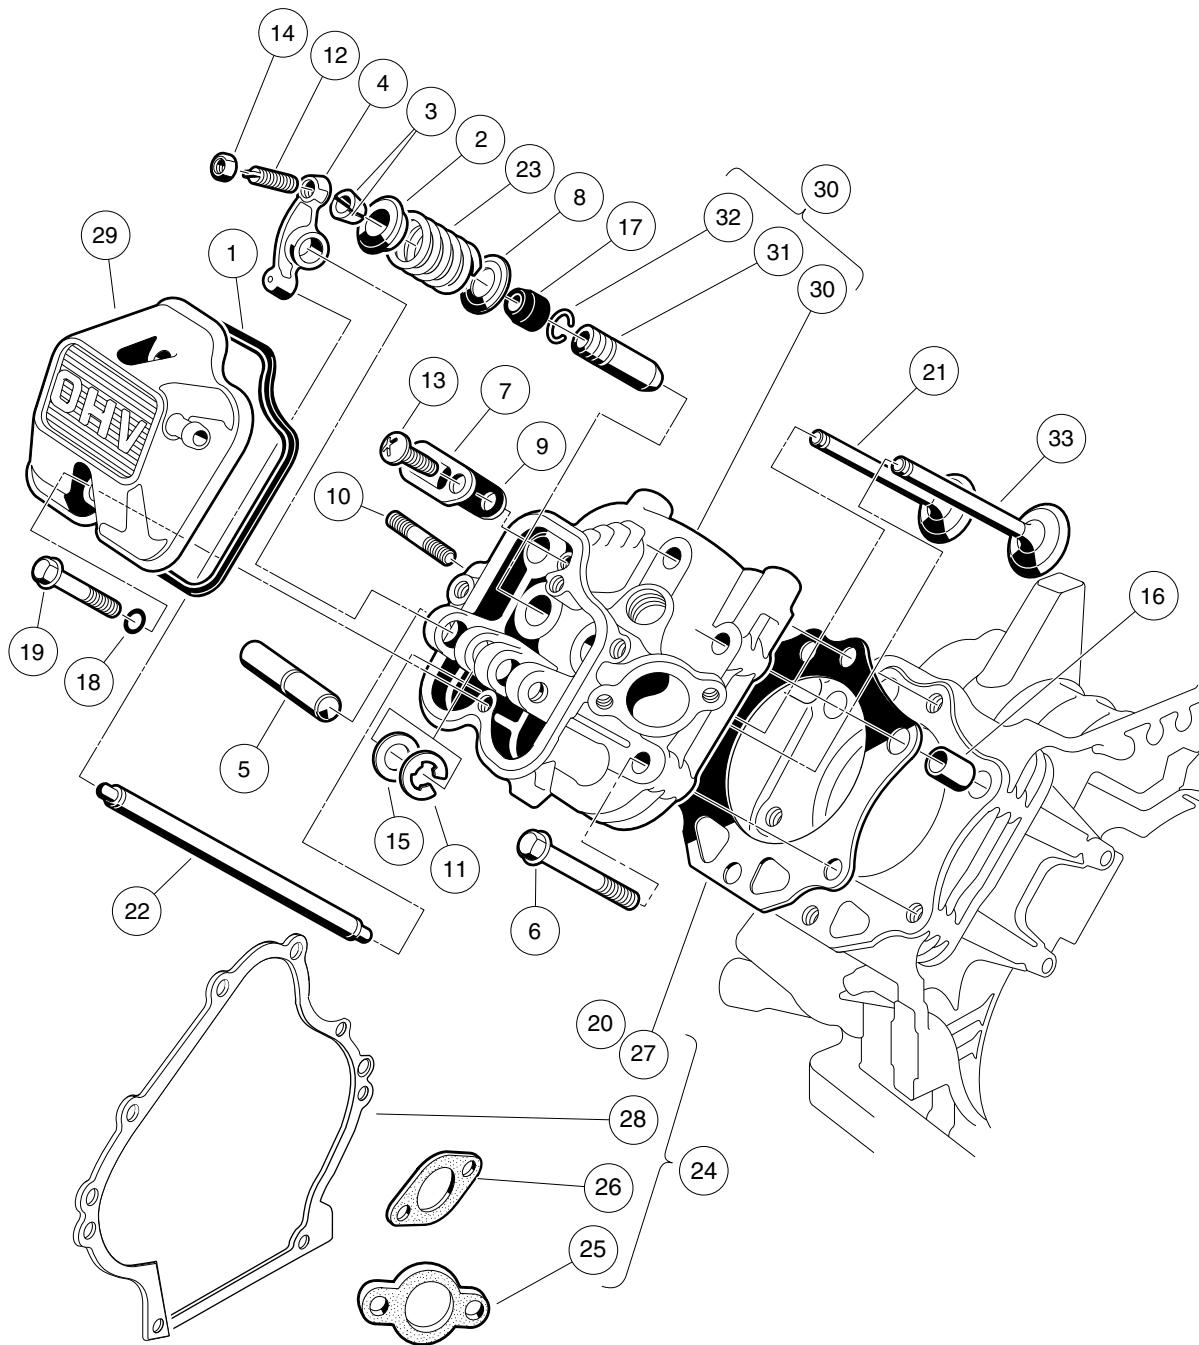
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	9
1	<u>1016455</u>	Bolt, Flange Head	2
2	<u>1016544</u>	Screw	1
3	<u>1016561</u>	Clamp	1
4	<u>1016562</u>	Key	1
5	<u>1016578</u>	Grommet, Ignition	1
6	<u>1016587</u>	Clamp	1
7	<u>1016588</u>	Tube, 7mm X 10mm X 70mm	1
8	<u>1017448</u>	Bolt, Flanged	3
9	<u>1017455</u>	Plate, Flywheel Fan	1
10	<u>1017463</u>	Cap Asm, Plug	1
11	<u>1017490</u>	Washer, Flat	1
12	<u>101916301</u>	Fan (cw)	1
13	<u>102838401</u>	Nut, Hex, 18 mm Fine	1
14	<u>103616501</u>	Coil Asm, Ignition	1
15	<u>103616601</u>	Flywheel, Complete	1
16	<u>103616701</u>	Wire Lead, Ignition	1
17	<u>AM1232301</u>	Spark Plug, BPR2ES	1



000203-001

FE350 ENGINE (S27) – OIL CIRCULATION

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		
1	<u>1016429</u>	Seat, Valve Oil Pressure Relief	1	
2	<u>1016432</u>	Gasket, Drain Plug	1	
3	<u>1016457</u>	Bolt, Flange Head	2	
4	<u>1016467</u>	Filter, Oil	1	
5	<u>1016473</u>	Plate, Oil Pump	1	
6	<u>101648203</u>	Oil Pump And Rotor	1	
7	<u>1016502</u>	Bracket, Oil Filter Mount	1	
8	<u>1016537</u>	Ball, Steel, Press, Relief	1	
9	<u>1016570</u>	O-Ring	1	
10	<u>1016576</u>	Plug, Drain	1	
11	<u>1016581</u>	Spring	1	
12	<u>1017442</u>	Gasket	1	
13	<u>1017456</u>	Bolt, Flanged	6	
14	<u>1017458</u>	Filter	1	
15	<u>1017460</u>	Cover, Pump	1	
16	<u>1017507</u>	Plug	2	

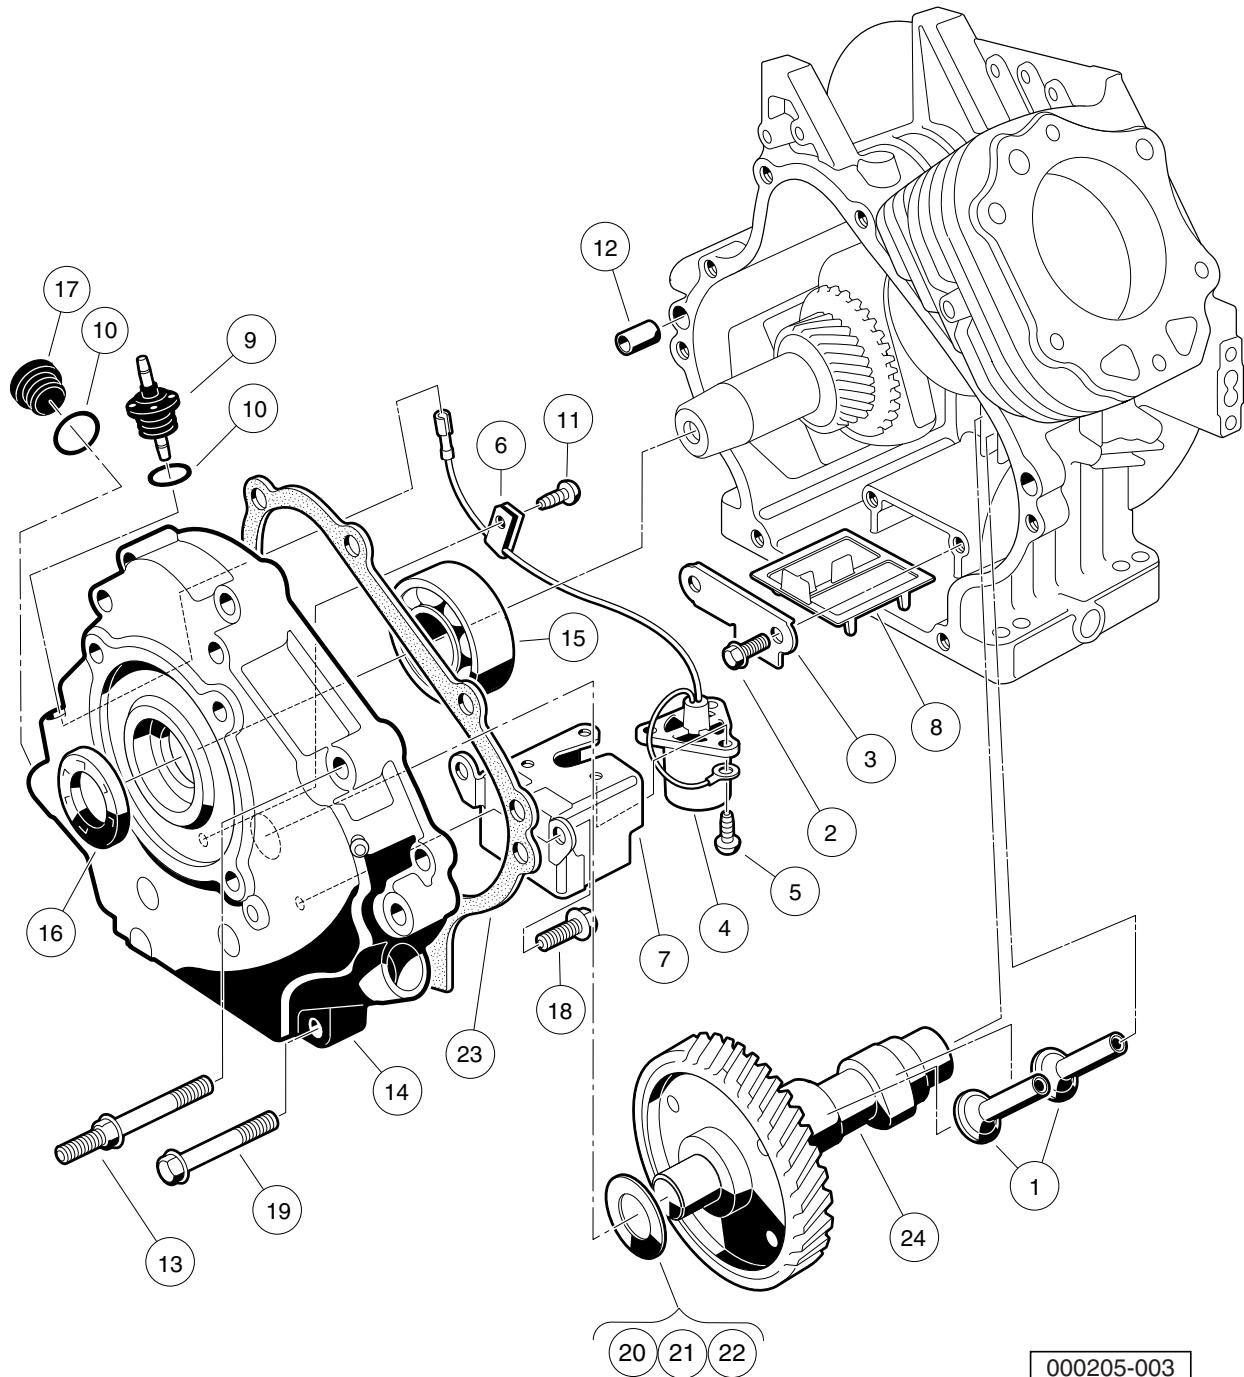
9**G**

000204-007

FE350 ENGINE (S27) – CYLINDER HEAD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	9
1	<u>1016436</u>	Gasket, Rocker Case	1
2	<u>1016449</u>	Retainer, Valve Spring	2
3	<u>1016450</u>	Collet	4
4	<u>1016451</u>	Arm, Rocker	2
5	<u>1016452</u>	Shaft, Rocker	1
6	<u>1016458</u>	Bolt, Flange Head, M8 x 1.25 x 45 mm	6
7	<u>1016474</u>	Plate	1
8	<u>1016479</u>	Seat, Spring	2
9	<u>1016483</u>	Valve	1
10	<u>1016489</u>	Stud, Two-Ended, M8-1.25	2
11	<u>1016517</u>	Circlip, Type-E	1
12	<u>1016542</u>	Screw	2
13	<u>1016544</u>	Screw	1
14	<u>1016545</u>	Nut	2
15	<u>1016549</u>	Washer, 12.1x19x1.8	1
16	<u>1016563</u>	Pin	2
17	<u>1016566</u>	Seal, Oil	2
18	<u>1016569</u>	O-Ring	2
19	<u>1016583</u>	Bolt, 6x35	2
20	<u>1017434</u>	Gasket, Head	1
21	<u>1017445</u>	Valve, Exhaust	1
22	<u>1017454</u>	Rod, Push	2
23	<u>1017473</u>	Spring, Engine Valve	2
24	<u>102304801</u>	Kit, Gasket, FE350 (includes items 25 through 28)	1
25	<u>1016440</u>	Gasket, Engine to Insulator	1
26	<u>1016904</u>	Gasket, Exhaust	1
27	<u>1017434</u>	Gasket, Head	1
28	<u>1017443</u>	Gasket, Crankcase Cover	1
29	<u>102753401</u>	Case, Rocker, Fe	1
30	<u>103615601</u>	Cylinder Head (includes items 31 and 32)	1
31	<u>1016519</u>	Guide, Valve, Intake, Exhaust	2
32	<u>1016560</u>	Snap Ring	2
33	103616301	Valve, Intake, Hard Tip	1

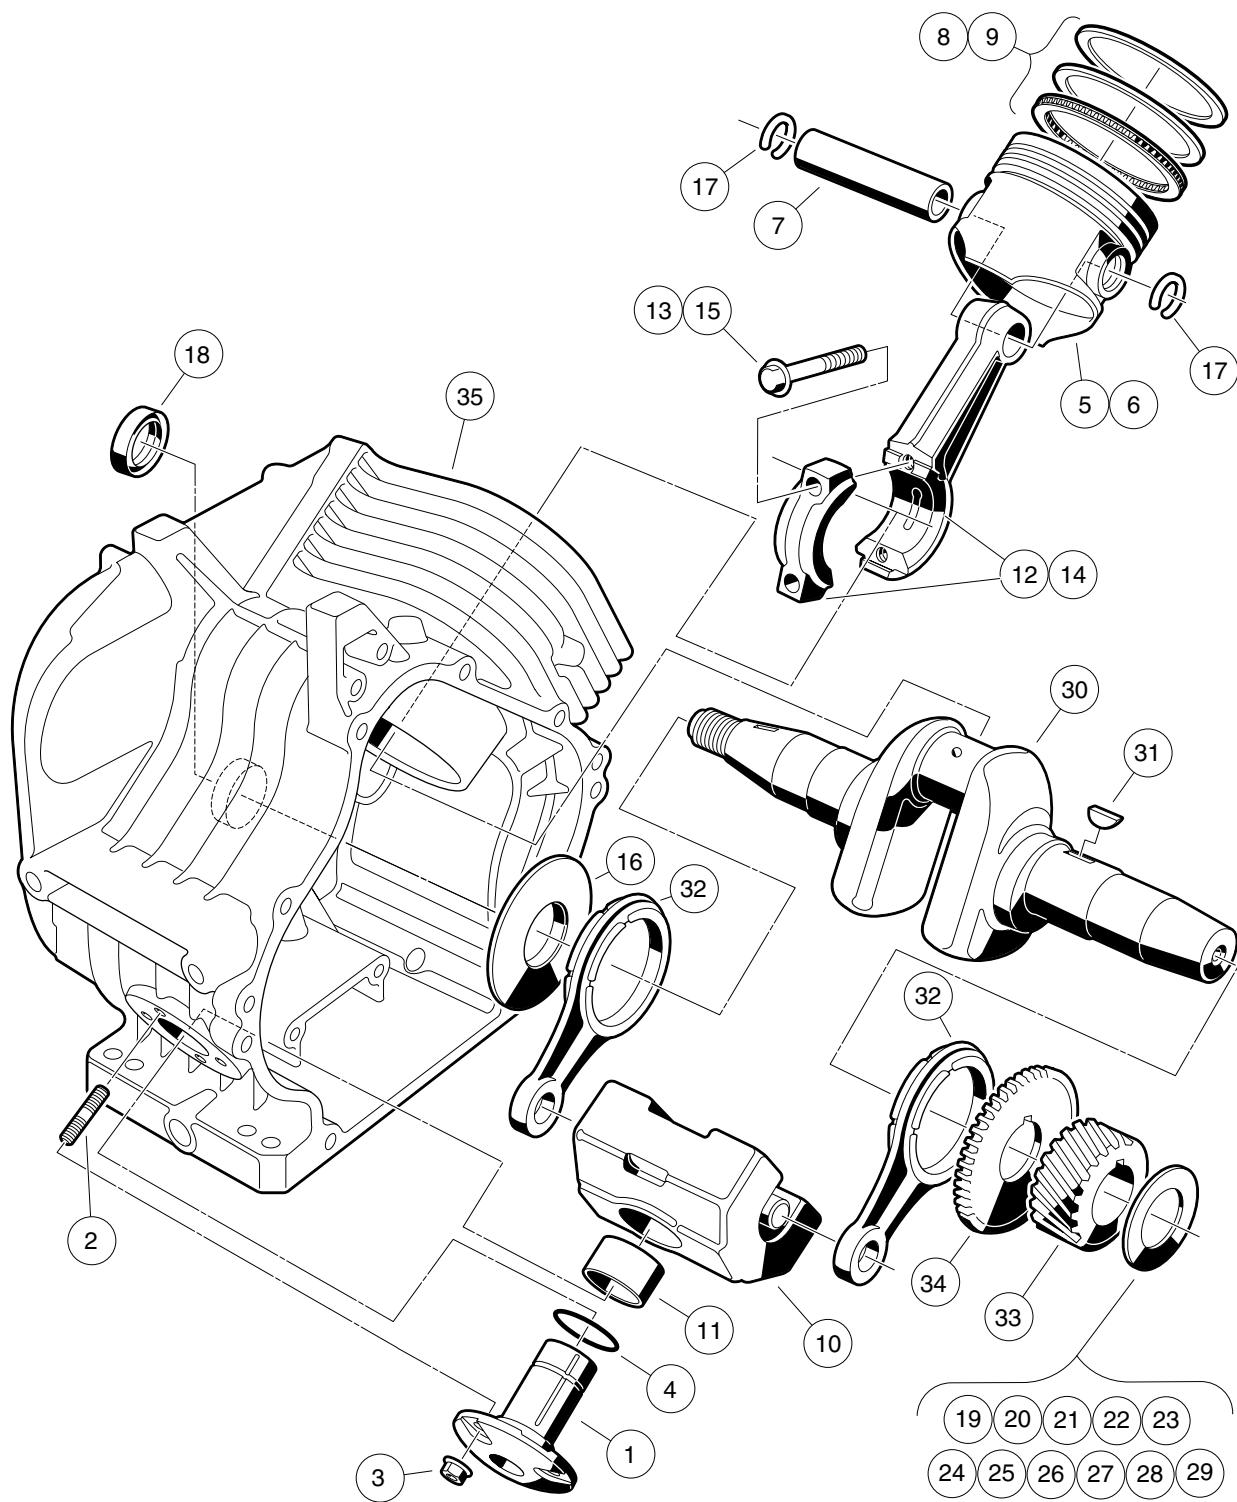
Note: Item 25 is not a component of the FE350 engine.



000205-003

FE350 ENGINE (S27) – CRANKCASE, CAMSHAFT, AND OIL SENSOR

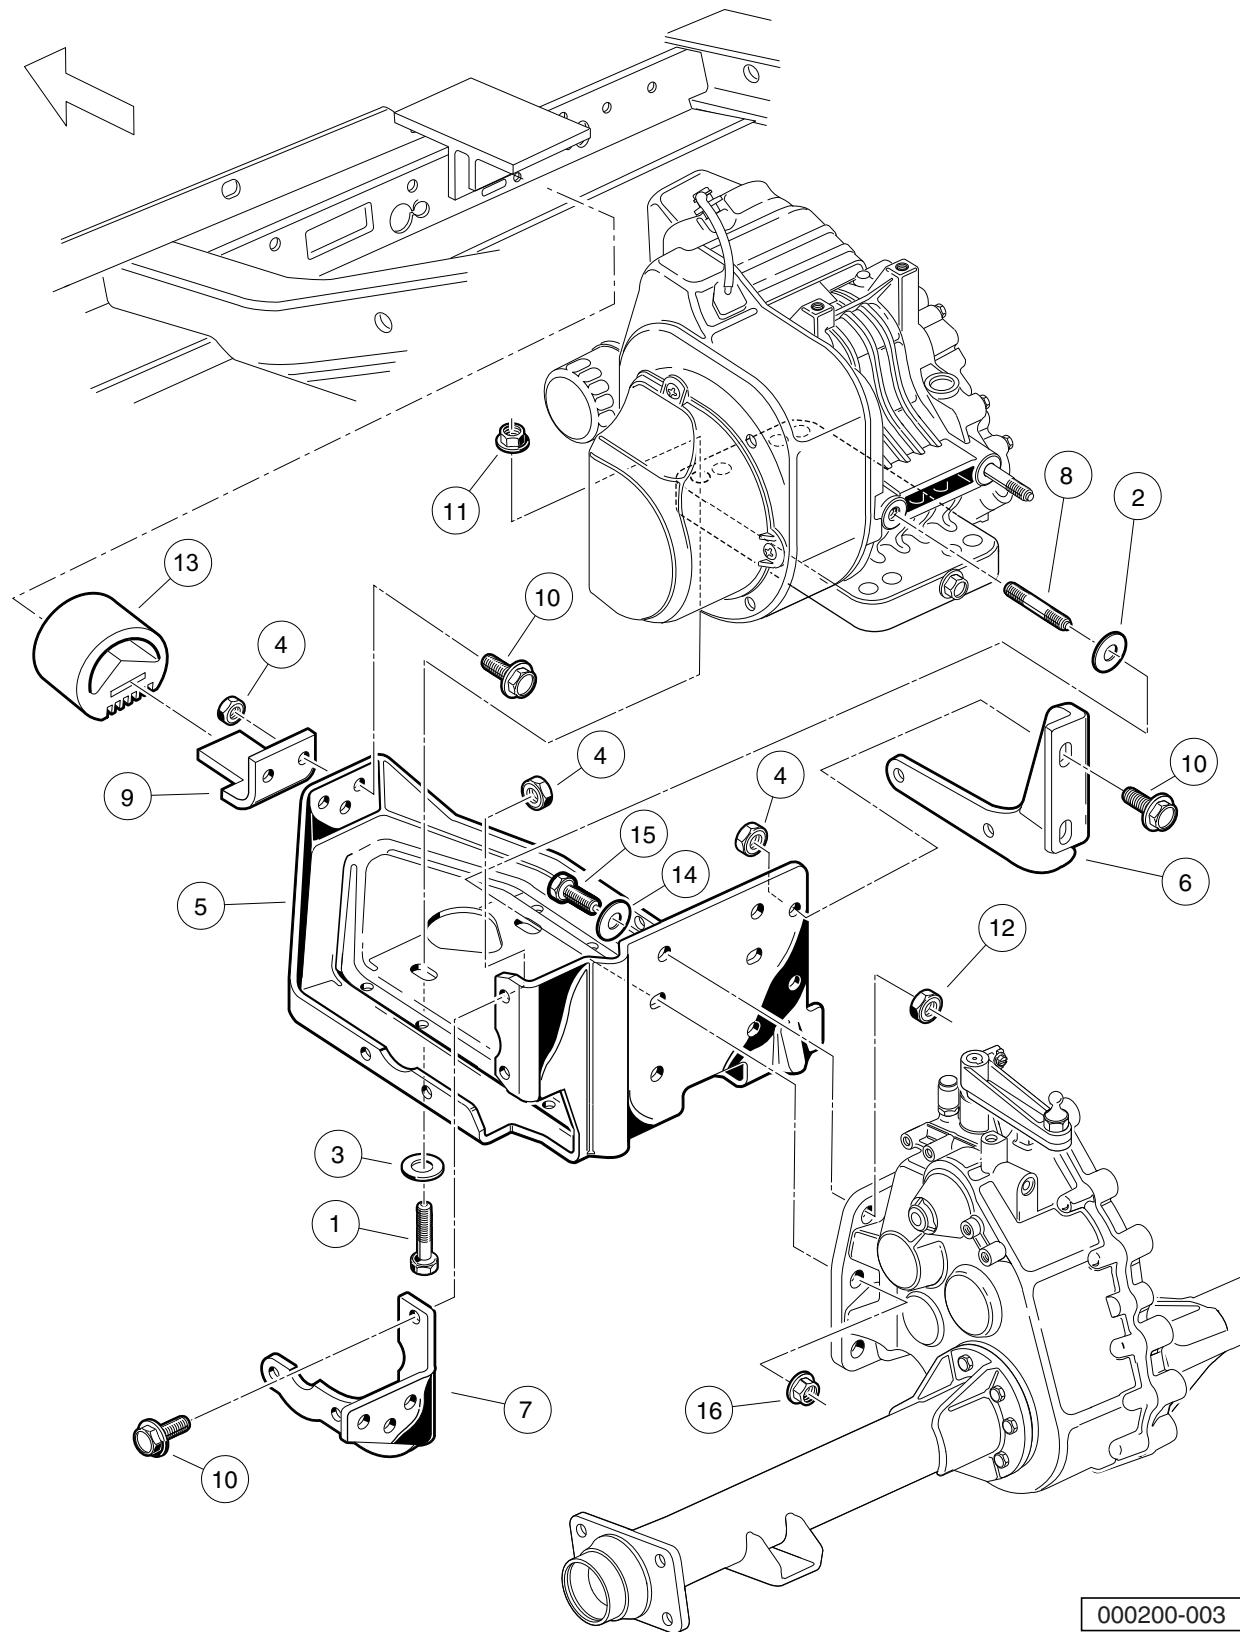
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	9
1	<u>1016453</u>	Tappet	2
2	<u>1016454</u>	Bolt, Flange Head, M5 x 0.8 x 8 mm	2
3	<u>1016472</u>	Plate, Oil Filter Screen	1
4	<u>1016494</u>	Sensor, Oil Level	1
5	<u>1016496</u>	Screw, Cross Pan-Head, M4 x 0.7 x 8 mm	3
6	<u>1016506</u>	Clamp	1
7	<u>1016510</u>	Bracket, Switch, Oil Level	1
8	<u>1016521</u>	Screen, Oil Filter	1
9	<u>1016535</u>	Connector, Cord	1
10	<u>1016538</u>	O-Ring	2
11	<u>1016544</u>	Screw	1
12	<u>1016564</u>	Pin	2
13	<u>1016584</u>	Bolt, Two-Ended, M8 x 1.25 x 69 mm	2
14	<u>1017472</u>	Cover Crankcase	1
15	<u>1017487</u>	Bearing, Ball	1
16	<u>1017504</u>	Seal, Oil	1
17	<u>1017508</u>	Plug	1
18	<u>1017513</u>	Bolt Switch Bracket	2
19	<u>1017514</u>	Screw, M8-1.25 X 45mm Hex	6
20	<u>101751801</u>	Shim, 0.3	1
21	<u>101751802</u>	Shim, 0.4	1
22	<u>101751803</u>	Shim, 0.5	1
23	<u>103615901</u>	Gasket, Crankcase Cover	1
24	<u>103616401</u>	Camshaft, Complete	1

9**G**

000206-003

FE350 ENGINE (S27) – CRANKCASE AND CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	9
1	1016470	Shaft, Guide, Counterbalance	1
2	1016541	Stud, 6x14	4
3	1016547	Nut, Flanged, M6 X 1.00	4
4	1016571	O-Ring	1
5	101744901	Piston, Standard	1
6	101744902	Piston, 0.50 mm Oversize	1
7	1017450	Pin, Piston	1
8	101745101	Ring Set, Standard Piston	1
9	101745102	Ring Set, Piston, 0.50 mm Oversize	1
10	1017453	Counterbalance Weight (includes item 11)	1
11	1017510	Bearing, Plain	1
12	101745701	Asm, Con. Rod Std (includes item 13)	1
13	1017512	Bolt	2
14	101745702	Asm, Con.Rod 0.5mm U/s (includes item 15)	1
15	1017512	Bolt	2
16	1017501	Spacer	1
17	1017502	Snap Ring	2
18	1017503	Seal, Oil	1
19	101773301	Shim, Crankshaft, 1.18mm	1
20	101773302	Shim, Crankshaft, 1.25mm	1
21	101773303	Shim, Crankshaft, 1.32mm	1
22	101773304	Shim, Crankshaft, 1.39mm	1
23	101773305	Shim, Crankshaft, 1.46mm	1
24	101773306	Shim, Crankshaft, 1.53mm	1
25	101773307	Shim, Crankshaft, 1.60mm	1
26	101773308	Shim, Crankshaft, 1.67mm	1
27	101773309	Shim, Crankshaft, 1.74mm	1
28	101773310	Shim, Crankshaft, 1.11mm	1
29	101773311	Shim, Crankshaft, 1.81mm	1
30	102430901	Crankshaft, FE350 Left-Hand, 22-Tooth (includes items 31 through 34)	1
31	1016562	Key	1
32	1017471	Rod	2
33	N/A	Gear, Helical	1
34	N/A	Gear, Spur	1
35	103615801	Crankcase, FE350	1

9**G**

000200-003

FE350 ENGINE (S27) – MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	9
1	<u>1010577</u>	Bolt, Hex-Head, 5/16-18 X 1.50	4
2	<u>1011697</u>	Washer, 5/16 Flat	2
3	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	4
4	<u>1013924</u>	Nut, 5/16-24, Hex Head Cone	10
5	<u>101827101</u>	Plate, Engine Mounting	1
6	<u>101832601</u>	Stiffener (PTO Side)	1
7	<u>101832701</u>	Stiffener (Flywheel Side)	1
8	<u>101833101</u>	Stud, M8-1.25 X 50 mm Two-Ended	2
9	<u>101834601</u>	Bracket, Snubber	1
10	<u>101884801</u>	Screw, 5/16-24 X 0.875, Grade-8	10
11	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4
12	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4
13	<u>102540301</u>	Snubber, Inner Frame	1
14	<u>334</u>	Washer, 3/8, Type A, Flat	4
15	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	4
16	<u>96704416</u>	Nut, Flange, M8 X 1.25 Serrated	2

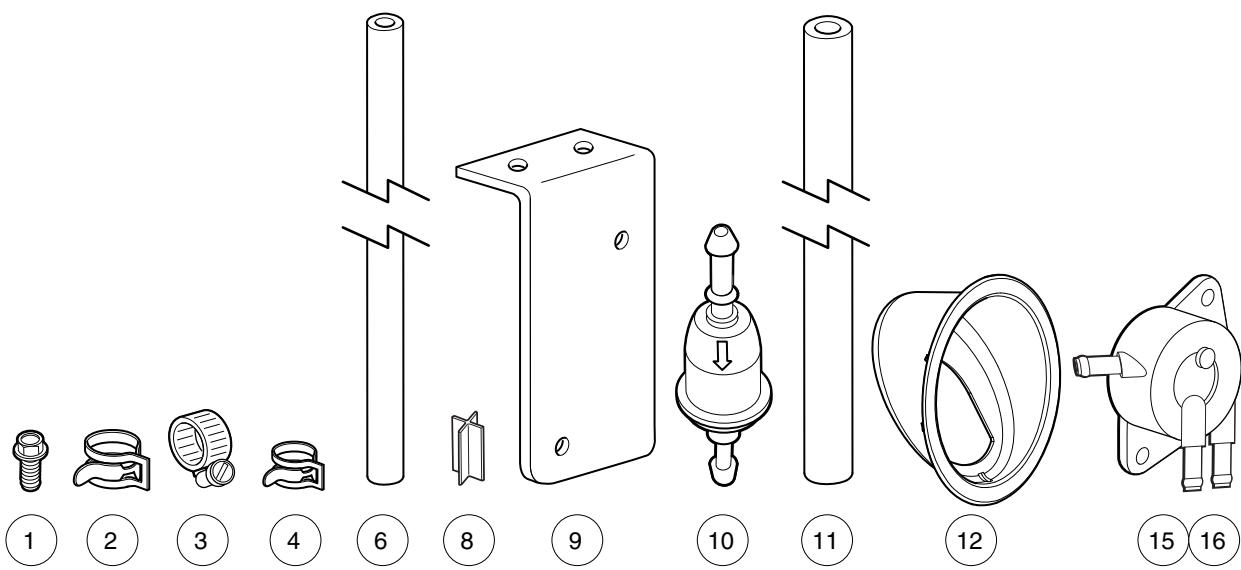
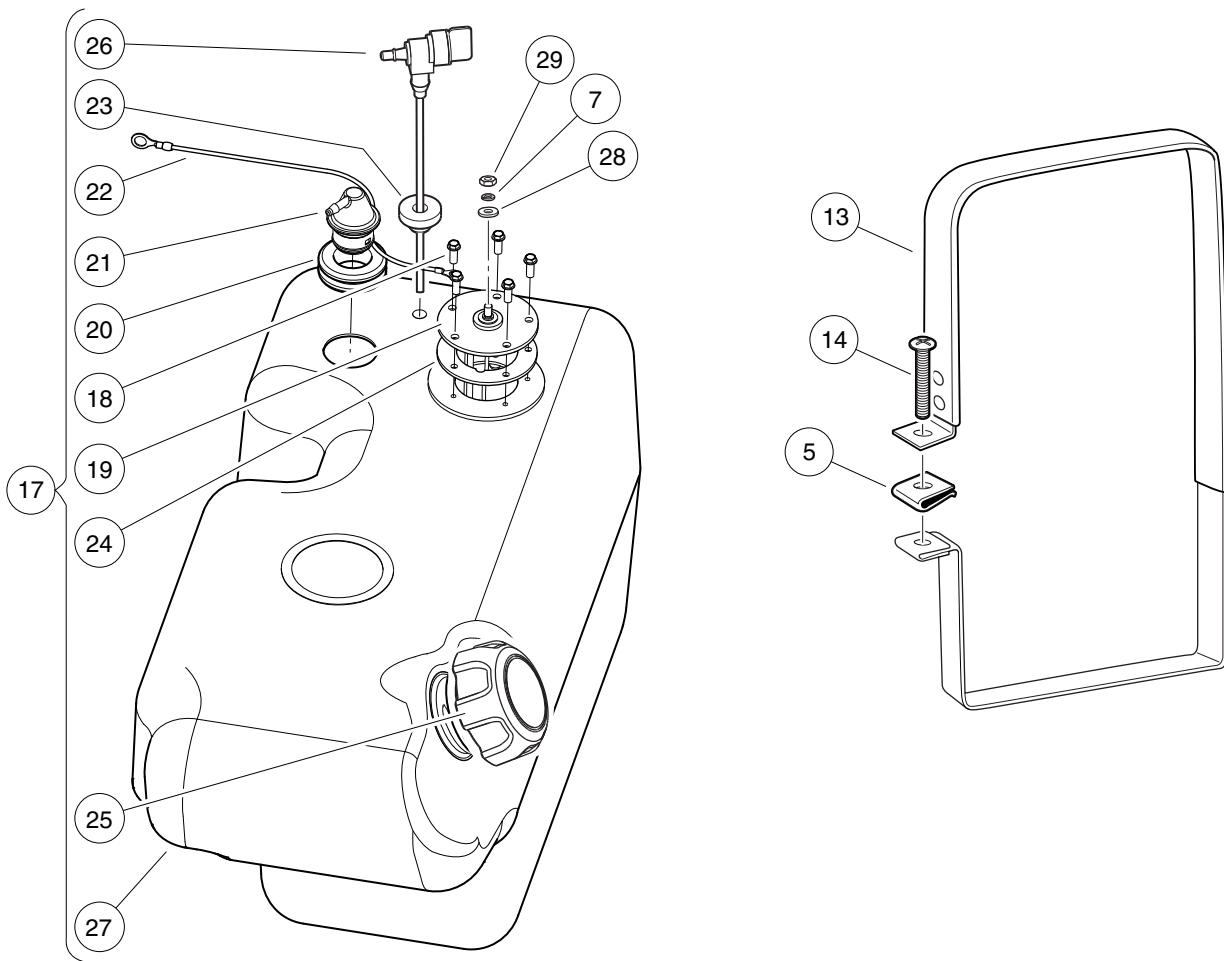
9

G

FUEL, INTAKE, AND GOVERNOR SYSTEMS

10

G

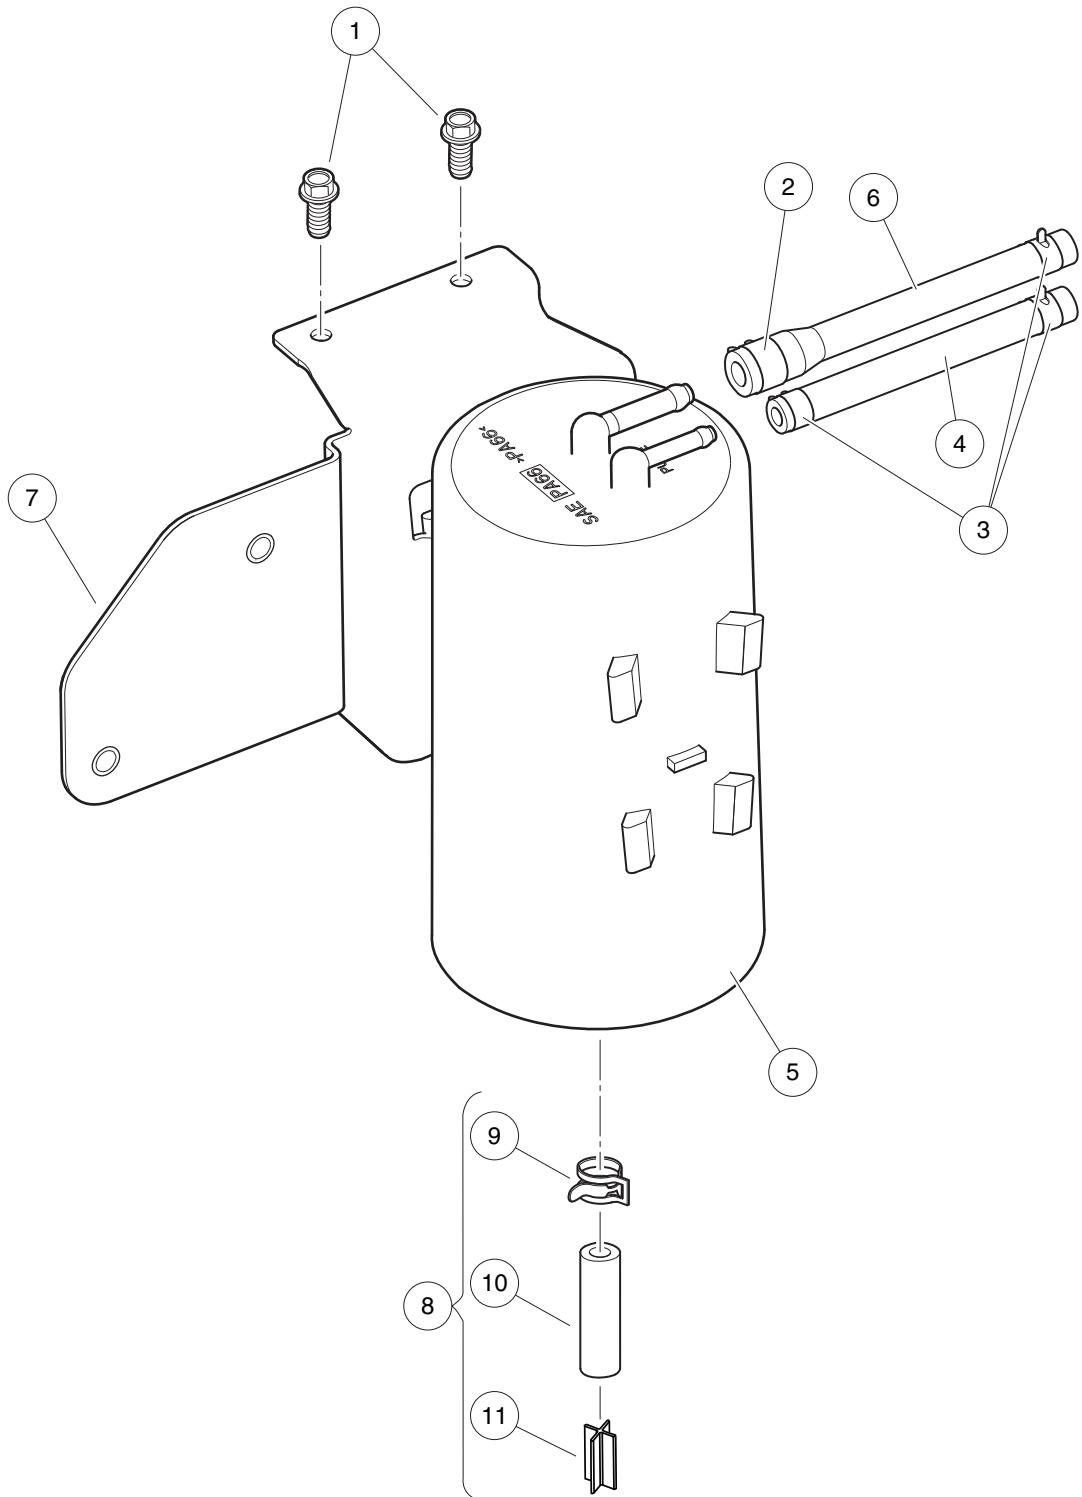
10**G**

001072-005

FUEL SYSTEM, 50-STATE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	10
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4
2	<u>1012649</u>	Clamp, 0.460 Red Hose	8
3	<u>1013687</u>	Clamp, 3/8" Hose (screw type)	1
4	<u>1013746</u>	Clamp, 0.301 ID Hose	2
5	<u>1014116</u>	Nut, 1/4-20 Speed	1
6	<u>1015137</u>	Fuel Line, 3/16 (available by the foot)	A/R
7	<u>1016</u>	Lockwasher, #10 Split	1
8	<u>101824401</u>	Vent Barb	1
9	<u>101929501</u>	Mount Fuel Pump	1
10	<u>102003201</u>	Filter, Fuel, 30 Micron	2
11	<u>102865101</u>	Fuel Line, 1/4 (available by the foot)	A/R
12	<u>102977901</u>	Bezel, Fuel Fill, 5.0 Dia	1
13	<u>102978001</u>	Strap, Fuel Tank, Side Fill	1
14	<u>103306301</u>	Screw, Bhsc, 1/4-20 X 2.0	1
15	<u>103781101</u>	Kit, Fuel Pump Retrofit (includes item 16)	1
16	<u>103010101</u>	Pump, Fuel, Impulse, Fh	1
17	<u>103788101</u>	Asm, Fuel Tank,side Fill,nano (includes items 18 through 27)	1
18	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	5
19	<u>1013462</u>	Sending Unit, Fuel Level *	1
20	<u>1015139</u>	Insulation Grommet	1
21	<u>1015143</u>	Vent, Fuel Tank	1
22	1015921	Wire Assembly #16 Black	1
23	<u>102406701</u>	Bushing, Line, Return	1
24	<u>102522001</u>	Gasket, Rubber	1
25	<u>103372101</u>	Cap, Fuel Tank, Gas, Ratchet	1
26	<u>103372301</u>	Valve, Fuel, 259mm	1
27	103788001	Tank, Fuel,side Fill,nano	1
28	<u>183</u>	Washer, #10, Type A, Flat	1
29	<u>8797</u>	Nut, #10-32 Brass Hex	1

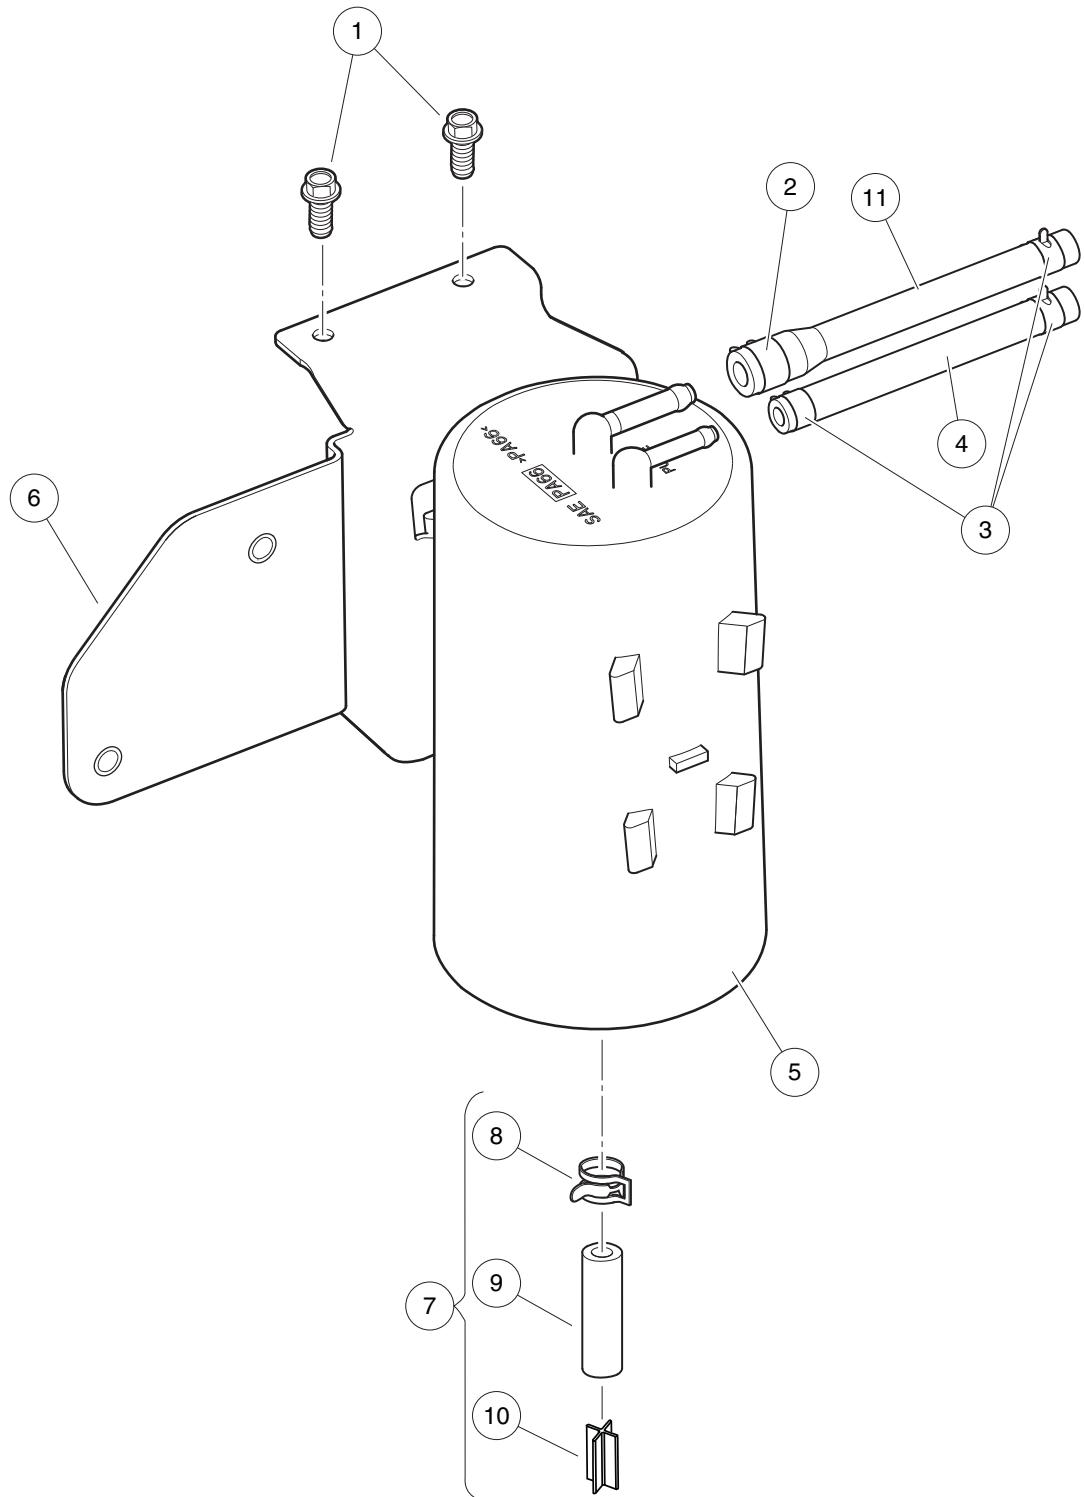
* Note: Must replace fuel sending unit gasket when servicing this component.



000980-007

CARBON CANISTER – TO MID-2011 MODEL YEAR

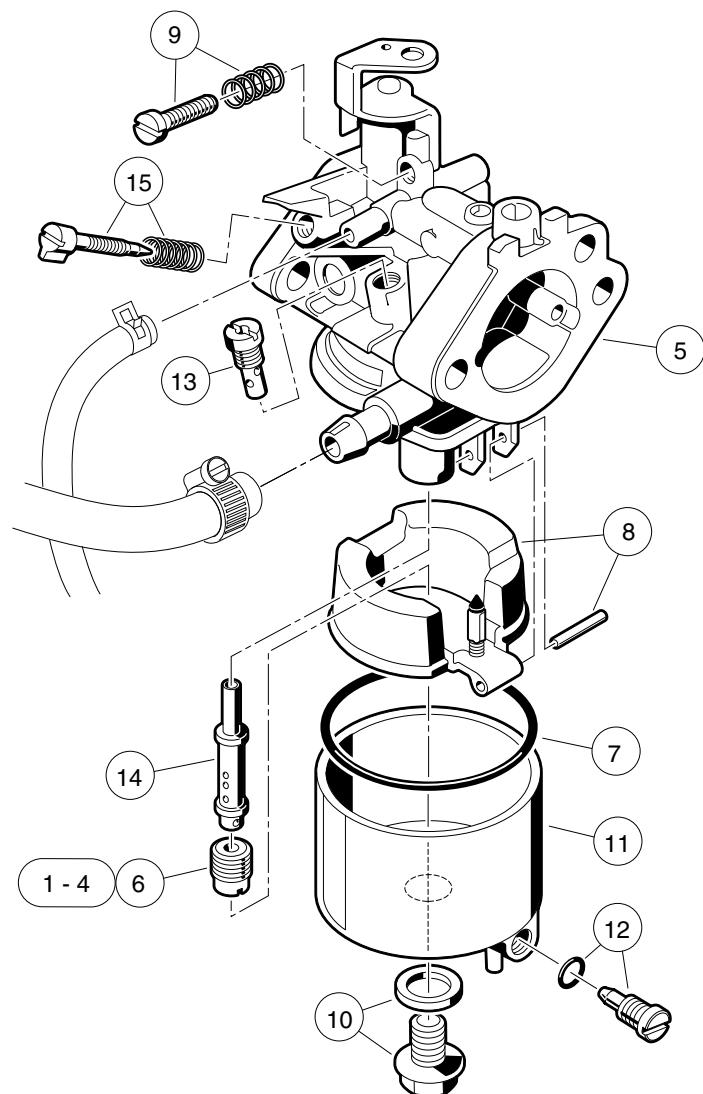
ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		10
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	2	
2	<u>101313402</u>	Clamp, Green Hose	1	
3	<u>1013746</u>	Clamp, 0.301 ID Hose	3	
4	<u>1015137</u>	Fuel Line, 3/16 (available by the foot)	A/R	
5	<u>103372401</u>	Canister, Carbon	1	
6	<u>103372504</u>	Hose, Vent, Flare, 9"	1	
7	<u>103372801</u>	Bracket, Carbon Canister, Sw	1	
8	<u>103418601</u>	Asm, Vent Line, Utility (includes items 9 through 11)	1	
9	<u>1012649</u>	Clamp, 0.460 Red Hose	1	
10	N/A	Hose, Vent, 5/16 I.D., Bulk	A/R	
11	N/A	Vent, Barb, 5/16 I.D. Hose	1	



000980-008

CARBON CANISTER – FROM MID-2011 MODEL YEAR

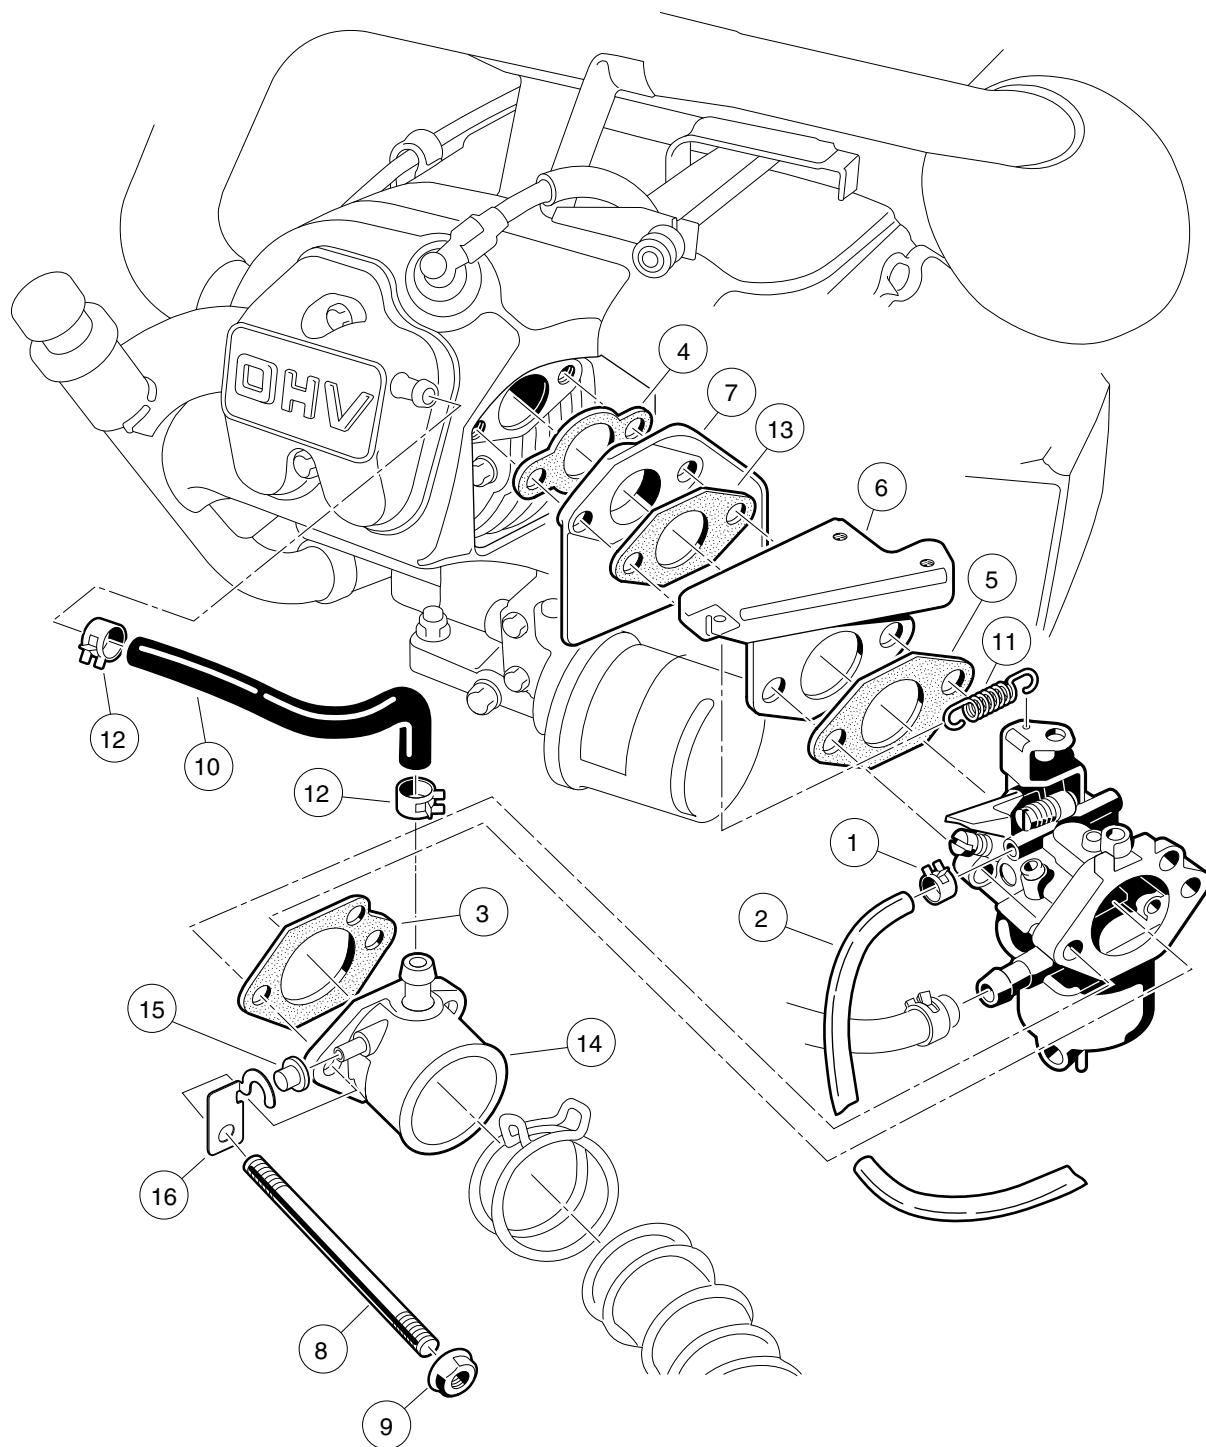
ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		10
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	2	
2	<u>101313402</u>	Clamp, Green Hose	1	G
3	<u>1013746</u>	Clamp, 0.301 ID Hose	3	
4	<u>1015137</u>	Fuel Line, 3/16 (available by the foot)	A/R	
5	<u>103372401</u>	Canister, Carbon	1	
6	<u>103372801</u>	Bracket, Carbon Canister, Sw	1	
7	<u>103418601</u>	Asm, Vent Line, Utility (includes items 8 through 10)	1	
8	<u>1012649</u>	Clamp, 0.460 Red Hose	1	
9	N/A	Hose, Vent, 5/16 I.D., Bulk	A/R	
10	N/A	Vent, Barb, 5/16 I.D. Hose	1	
11	<u>103851201</u>	Hose, Vent Flared, 9.0 Inch	1	

10**G**

000212-002

CARBURETOR ASSEMBLY – FE350 S27

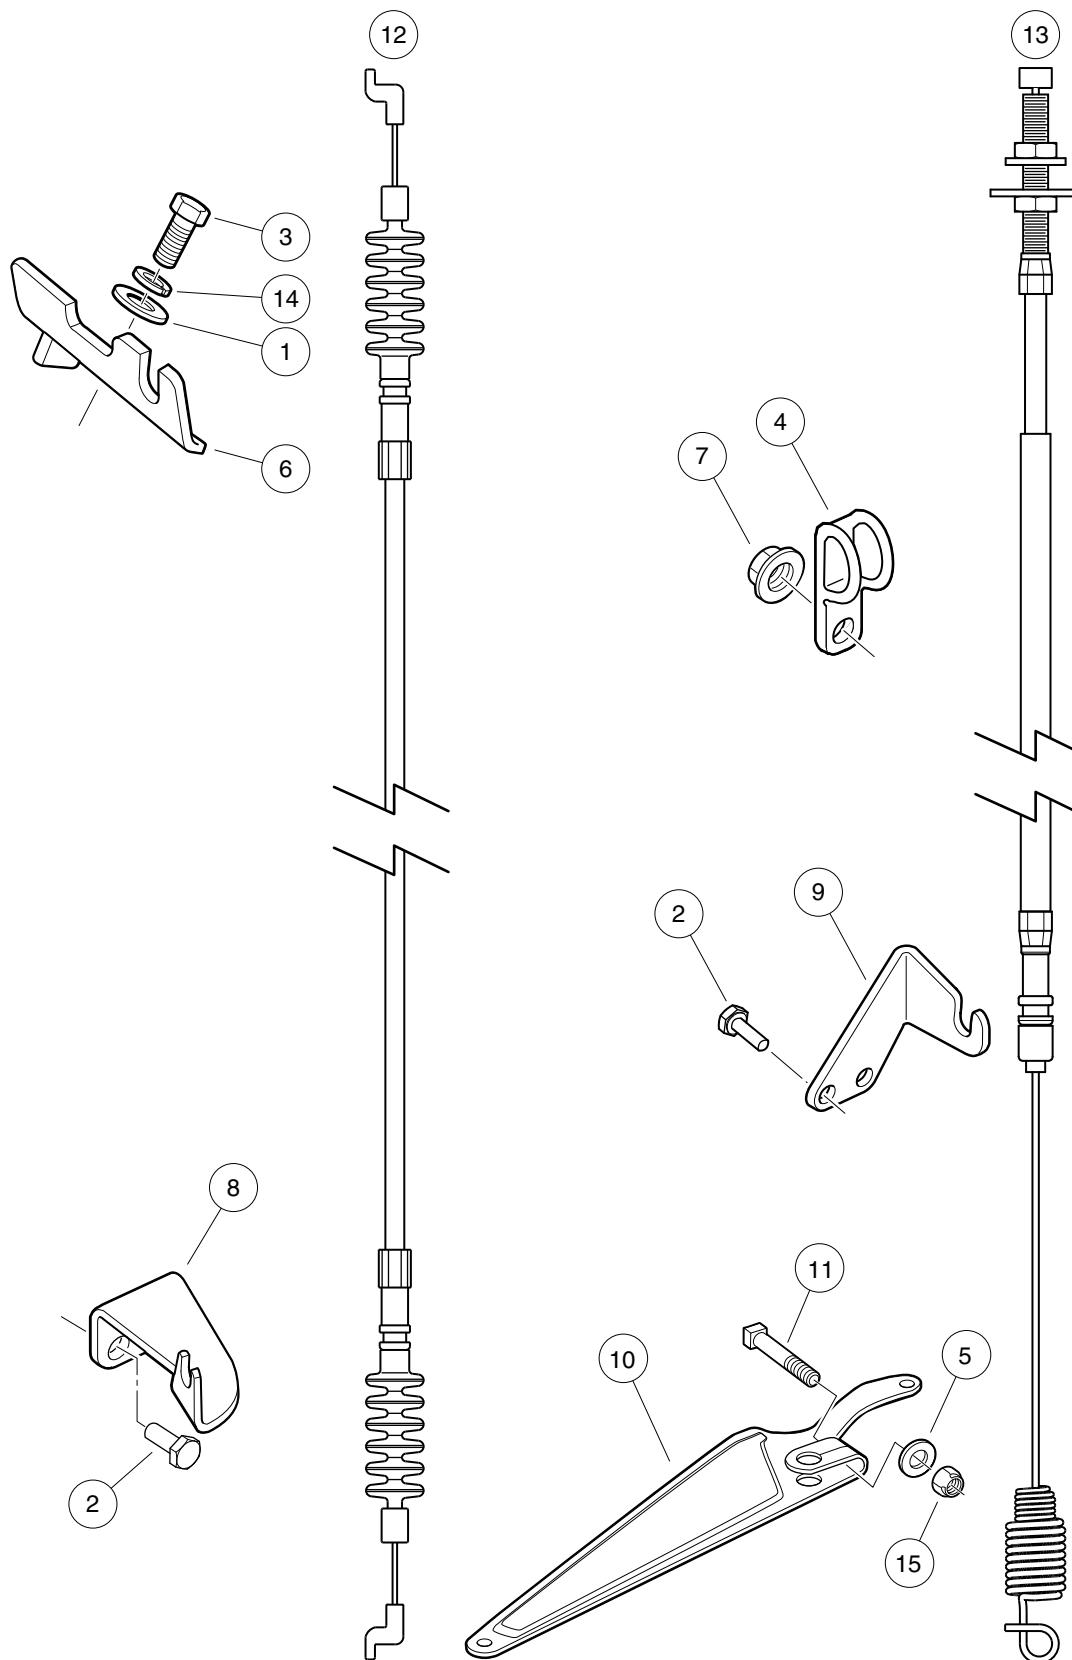
ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		10
1	<u>101642575</u>	Jet, Altitude, # 75	1	
2	<u>101642578</u>	Jet, Altitude, # 78	1	
3	<u>101642580</u>	Jet, Altitude, # 80	1	
4	<u>101642582</u>	Jet, Altitude, # 82	1	
5	<u>103617101</u>	Carburetor, FE350 S27 (includes items 6 through 15)	1	
6	<u>101642585</u>	Jet, Altitude, # 85	1	
7	<u>1016437</u>	Gasket, Carburetor Bowl OHV	1	
8	<u>1016486</u>	Float Assembly	1	
9	<u>1016501</u>	Screw Assembly	1	
10	<u>1016585</u>	Bolt	1	
11	<u>1017461</u>	Chamber Assembly, Float (includes item 12)	1	
12	<u>1016499</u>	Screw Assembly	1	
13	<u>101973101</u>	Jet, #40 Pilot	1	
14	<u>101973301</u>	Nozzle, Main	1	
15	N/A	Assembly, Pilot Air Screw	1	
		Note: <u>101642585</u> for 0 - 3,200 feet; <u>101642582</u> for 3,200 - 6,500 feet; <u>101642580</u> for 6,500 - 9,800 feet; <u>101642578</u> for 9,800 feet and above.		G



000214-002

CARBURETOR MOUNTING, UTILITY, FE350 S27

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013746</u>	Clamp, 0.301 ID Hose	1
2	<u>1015137</u>	Fuel Line, 3/16 (available by the foot)	1
3	<u>1016438</u>	Gasket, Carb To Intake Manifold	1
4	<u>1016440</u>	Gasket, Engine to Insulator	1
5	<u>1016441</u>	Gasket, Sprg Brkt To Carb OHV	1
6	<u>1016444</u>	Bracket, Throttle Spring Return	1
7	101648102	Insulator, Carburetor	1
8	<u>101649002</u>	Stud, M6-1.00 Two-Ended	2
9	<u>1016547</u>	Nut, M6 Flange	2
10	<u>1016572</u>	Tube, Crankcase Vent	1
11	<u>1016582</u>	Spring, Throttle Return	1
12	<u>1017466</u>	Clamp	2
13	<u>101973401</u>	Gasket, Insulator To Bracket	1
14	103507101	Carburetor Adapter w/ Tap	1
15	103507201	Plug, Intake Manifold, Carb	1
16	103507301	Bracket, Intake Manifold, Carb	1

10**G**

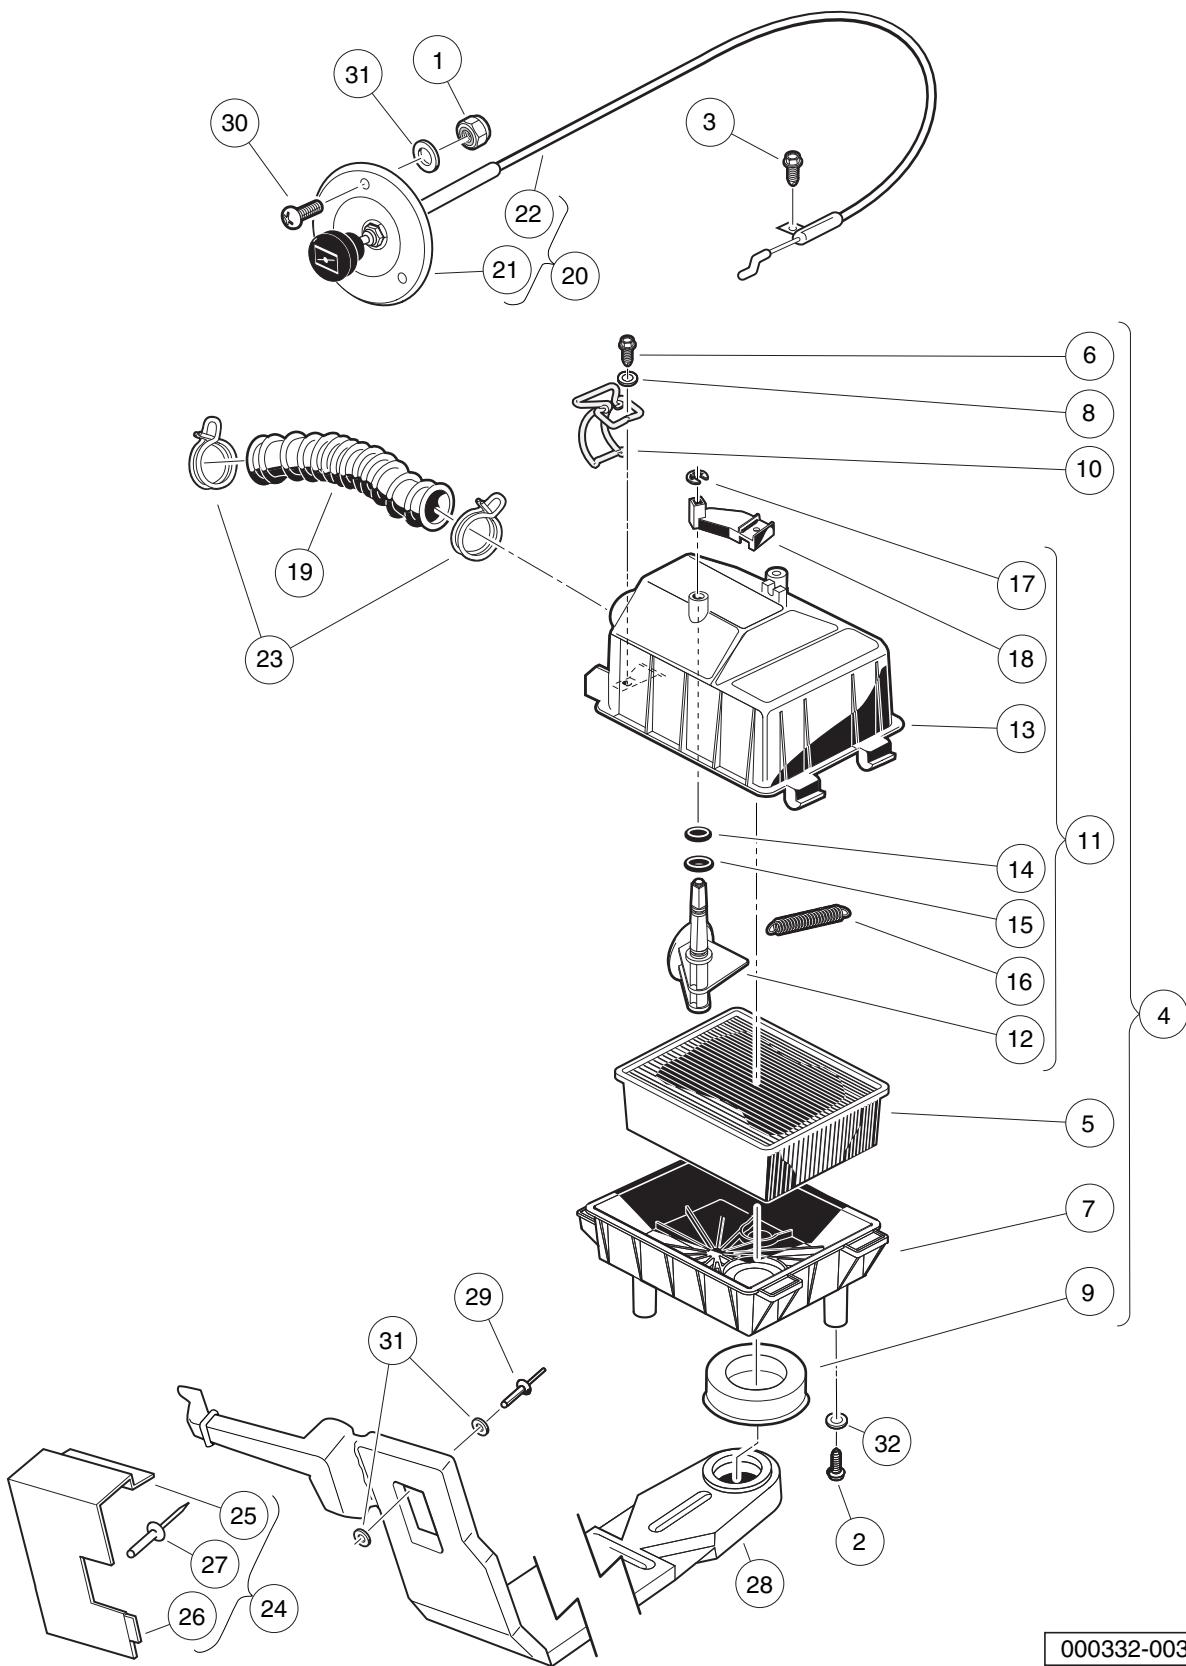
000215-004

GOVERNOR AND ACCELERATOR CABLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011697</u>	Washer, 5/16 Flat	1
2	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	4
3	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	1
4	<u>1013700</u>	Clamp	2
5	<u>1014007</u>	Washer, 1/4, Flat	1
6	<u>101584502</u>	Bracket, Governor Cable Snap-In	1
7	<u>1016546</u>	Nut	2
8	<u>101832202</u>	Bracket, Rear Governor Cable Snap-In	1
9	<u>101832302</u>	Bracket, Rear Accelerator Cable Snap-In	1
10	<u>101834801</u>	Arm, Governor	1
11	<u>101886101</u>	Screw, 1/4-20 X 1.00, Square-Head	1
12	<u>102336001</u>	Cable, Governor, Snap-In	1
13	<u>102336101</u>	Cable, Accelerator, Snap-In	1
14	<u>7174</u>	Lockwasher, 5/16 Split	1
15	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	1

10

G

10**G**

000332-003

AIR FILTER AND INTAKE SYSTEM

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	10
1	<u>1012438</u>	Locknut, #10-24 Nylon Insert	3
2	<u>1015752</u>	Screw, #12-16 X 0.625, Hi-Lo	3
3	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	1
4	<u>101821501</u>	Assembly, Air Box (includes items 5 through 11)	1
5	<u>1015426</u>	Filter, Air	1
6	<u>101804301</u>	Screw, #8 X 0.500, Hex-Head Hi-Lo	2
7	<u>101811901</u>	Bottom, Air Box	1
8	<u>101881701</u>	Washer, #8 Stainless-Steel Flat	2
9	<u>101921501</u>	Seal, Intake	1
10	<u>101925701</u>	Latch, Wireform	2
11	<u>101972801</u>	Top Assy, Air Box (includes items 12 through 18)	1
12	N/A	Valve, Choke	1
13	N/A	Top, Air Box	1
14	N/A	O-Ring, 5/16	1
15	N/A	O-Ring, 3/8	1
16	<u>101812301</u>	Spring, Extension Return	1
17	<u>101813001</u>	Retaining Ring 0.25, Shaft	1
18	<u>101917601</u>	Lever, Choke	1
19	<u>101837101</u>	Hose, Air Intake	1
20	<u>101926801</u>	Cable, Choke (includes items 21 and 22)	1
21	<u>101933701</u>	Bezel, Choke Cable	1
22	N/A	Choke Cable without Bezel, Short	1
23	<u>101971301</u>	Clamp, 1.58" ID Hose	2
24	<u>102190702</u>	Kit, Air Duct Shield (includes items 25 through 27)	1
25	<u>102185401</u>	Tape, 3M VHB 4950	1
26	N/A	Shield, Air Duct	1
27	<u>7973</u>	Rivet, 3/16 X .400 Blind	1
28	<u>103520401</u>	Duct, Air Intake, Ca li	1
29	<u>1606</u>	Rivet, 3/16 X .500 Alum Pop	2
30	<u>1631</u>	Screw, #10-24 X 0.75 Phillips Pan-Head	3
31	<u>183</u>	Washer, #10, Type A, Flat	7
32	<u>332</u>	Washer, 1/4 Type A Narrow Flat	3

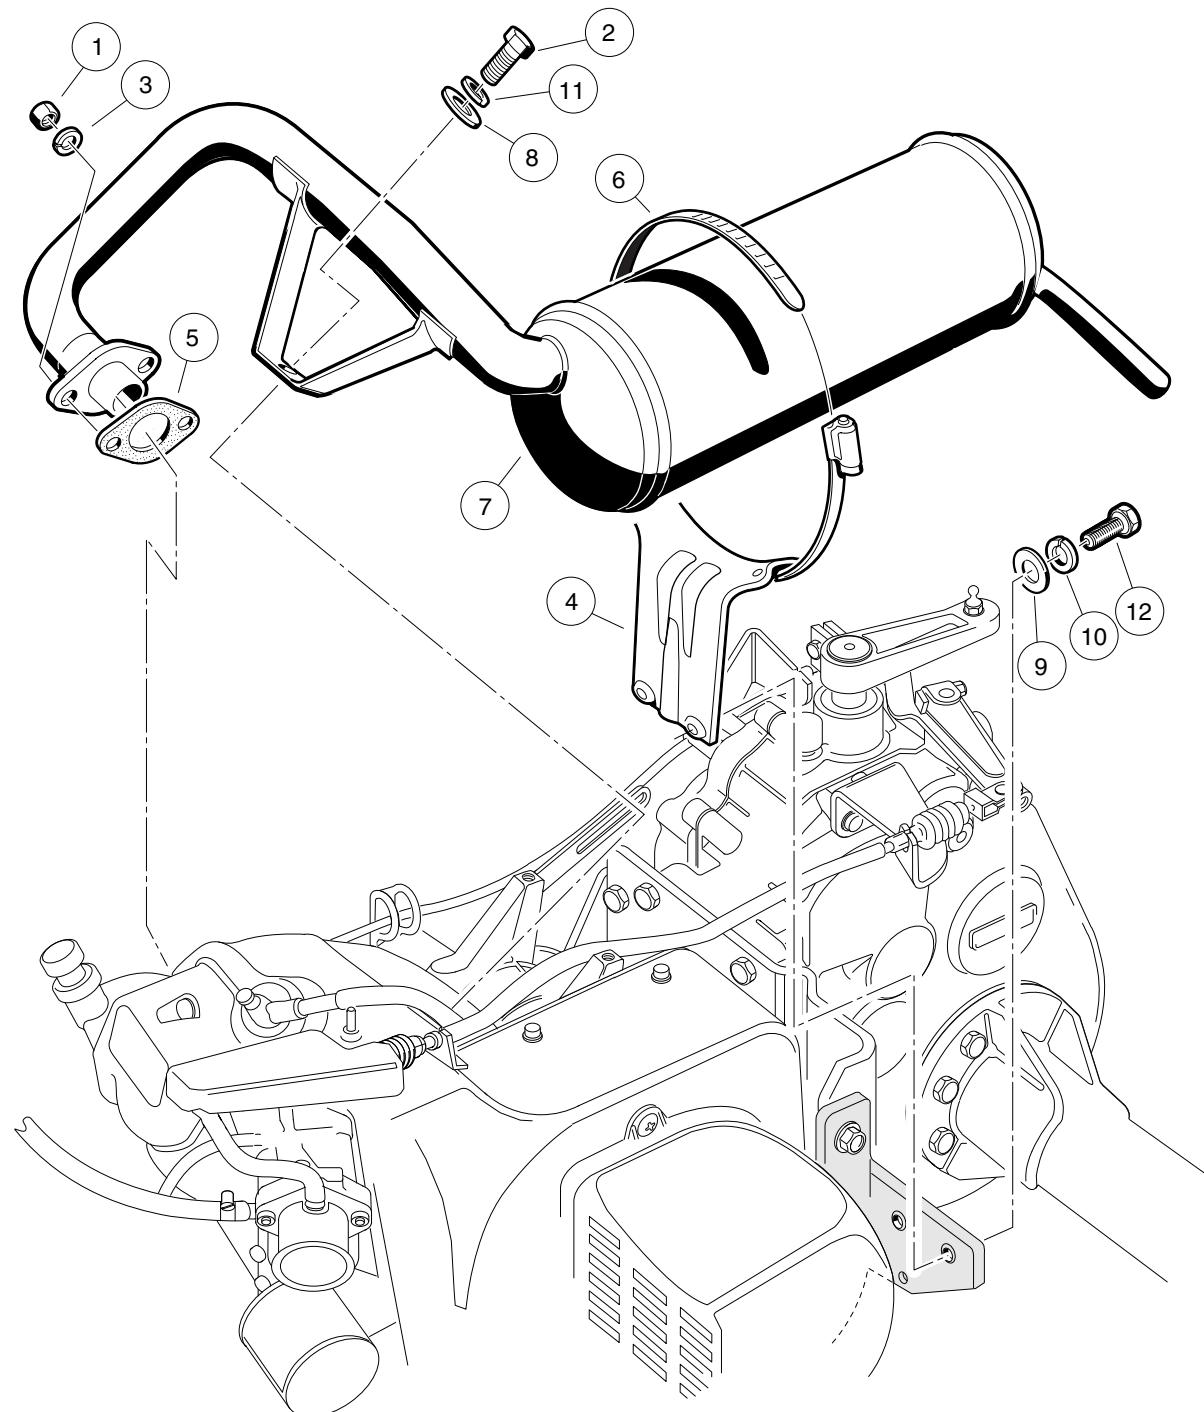
10

G

EXHAUST SYSTEM

11

G

11**G**

000209-001

EXHAUST SYSTEM – FE350 ENGINE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012528</u>	Nut, M8-1.25 Hex	2
2	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	1
3	<u>1013734</u>	Lockwasher, 8mm Split	2
4	<u>1015814</u>	Bracket, Muffler Mounting	1
5	<u>1016904</u>	Gasket, Exhaust	1
6	<u>1017689</u>	Clamp, 5" Muffler Hose	1
7	<u>101859401</u>	Exhaust System, FE350	1
8	<u>1241</u>	Washer, 5/16 Type A Flat	1
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
10	<u>451</u>	Lockwasher, 1/4 Split	2
11	<u>7174</u>	Lockwasher, 5/16 Split	1
12	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2

11

G

11

G

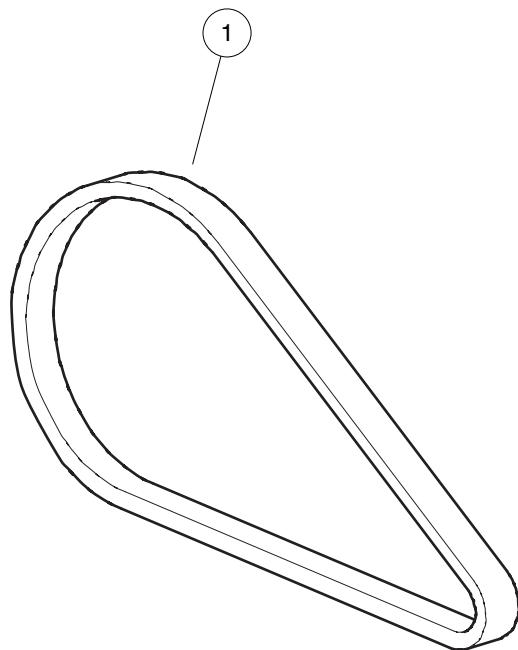
DRIVE BELT AND CLUTCHES

12

G

12

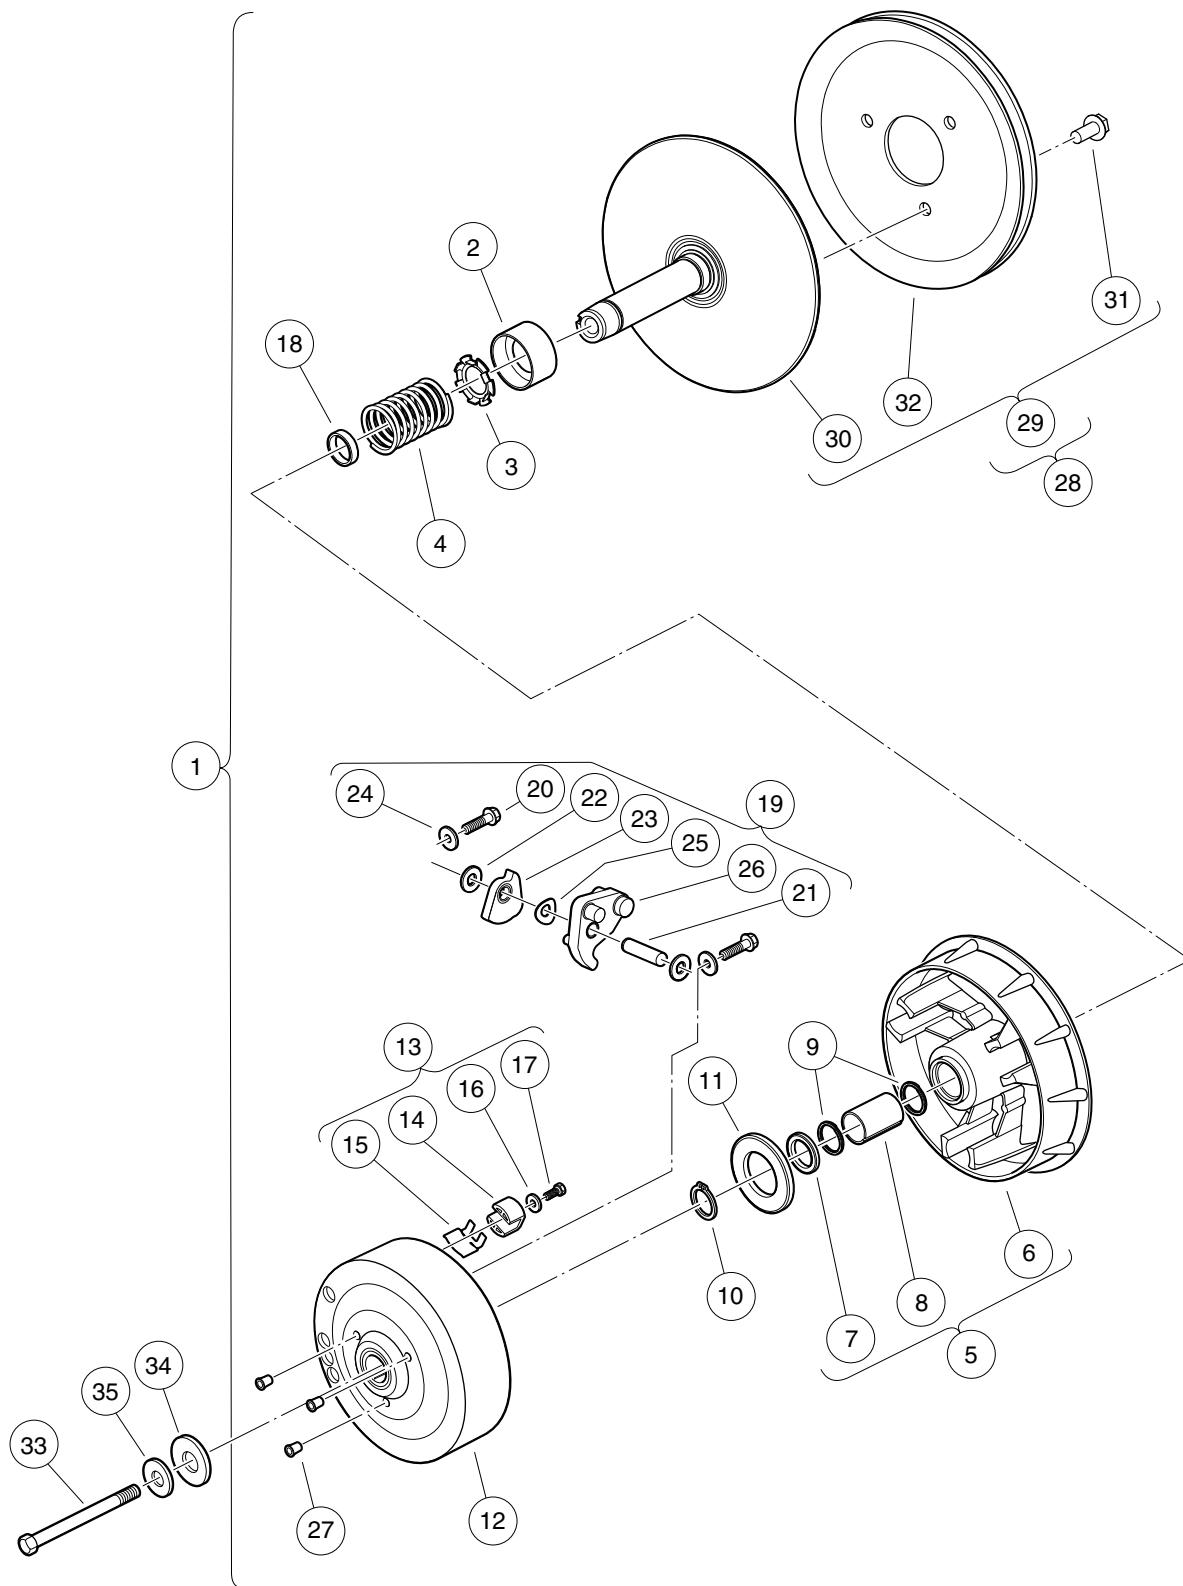
G



000918-001

DRIVE BELT

ITEM	PART NO.	DESCRIPTION	QTY	
1	<u>1017188</u>	1 2 3 4 Belt, Drive (FE350)	1	12 G



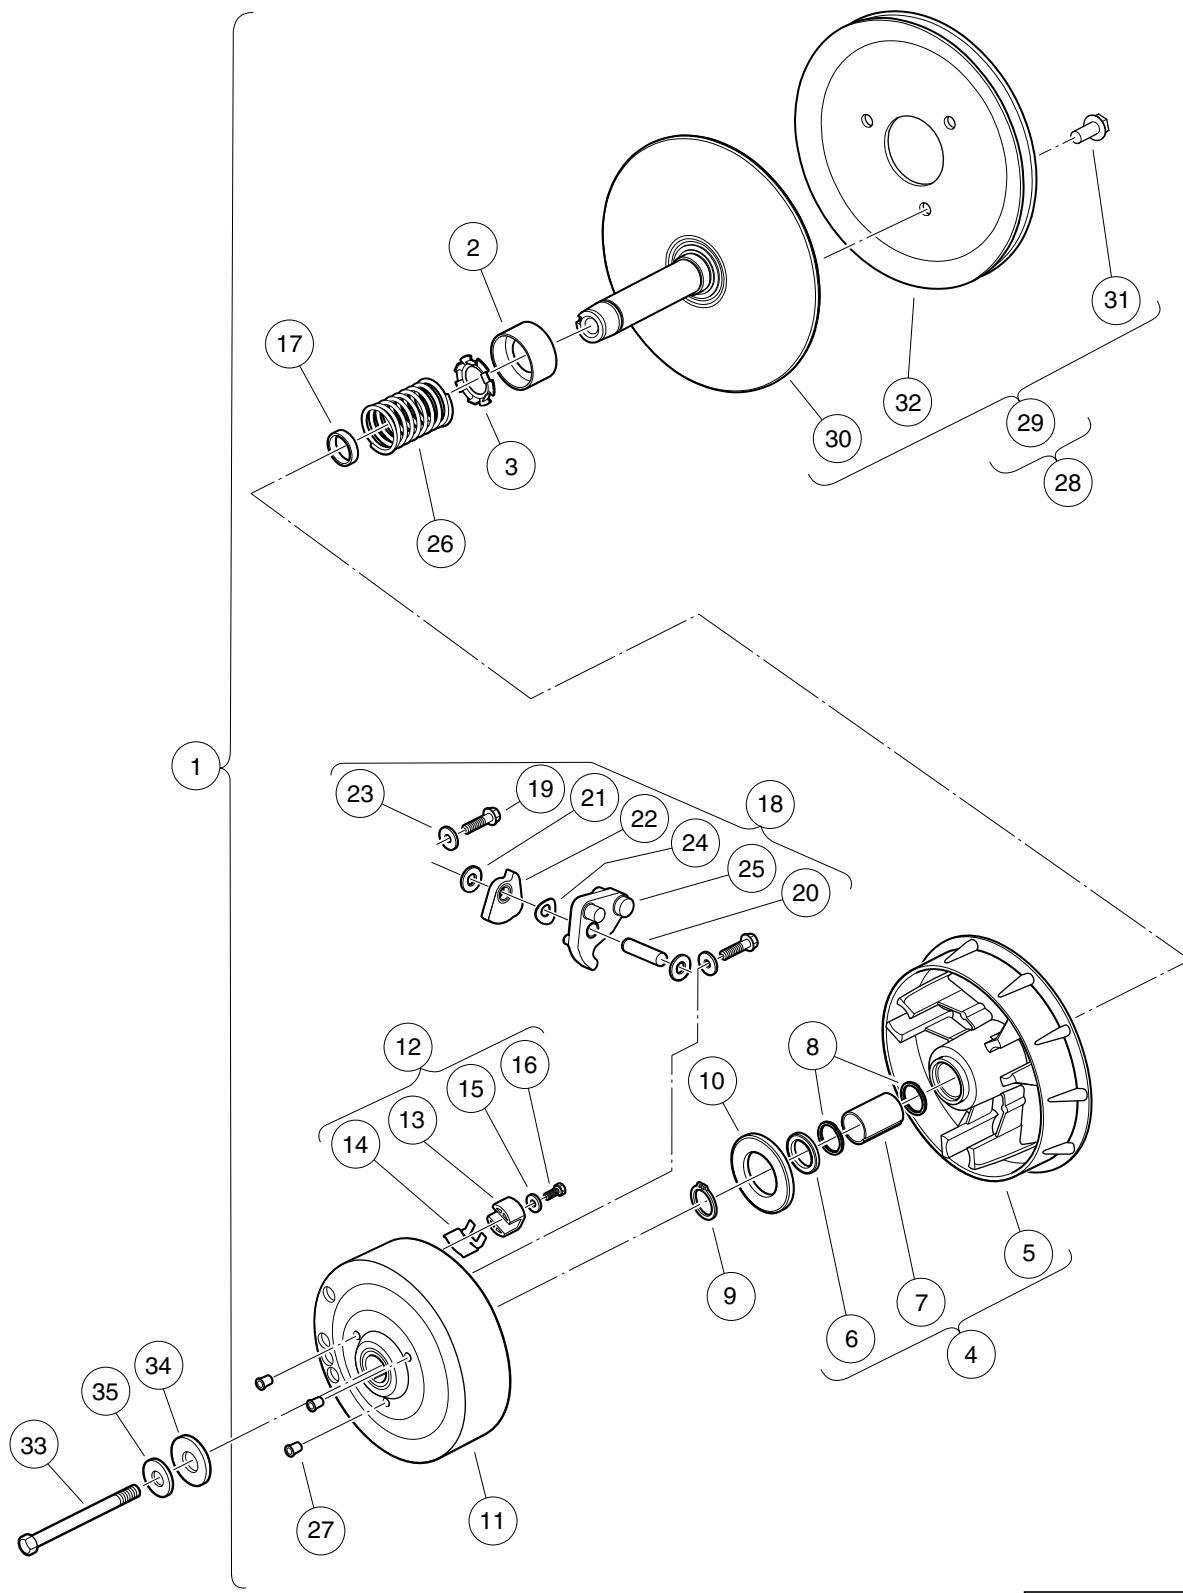
000217-006

DRIVE CLUTCH – TURF/CARRYALL 2 AND 252

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101833902</u>	Clutch, Drive (includes items 2 through 28)	1
2	<u>1014049</u>	Bearing, Idler	1
3	<u>1014050</u>	Retainer, Spring	1
4	<u>1014051</u>	Spring, Drive Clutch	1
5	<u>1014052</u>	Movable-Face Assembly (includes items 6 through 8)	1
6	N/A	Drive Clutch Movable Face	1
7	<u>1014055</u>	Retainer	1
8	N/A	Bushing, Split, Drive Clutch	1
9	<u>1014056</u>	Ring, Spiral Backup	2
10	<u>1014057</u>	Ring, 0.810" Internal Retaining	1
11	<u>1014058</u>	Thrust Washer	1
12	<u>1014059</u>	Drive Hub Assy, Drive Clutch	1
13	<u>1014453</u>	Kit, Drive Clutch Button (includes items 14 through 17)	1
14	<u>1014062</u>	Driver, Drive Clutch	3
15	<u>1014287</u>	Spring, Drive Button	3
16	<u>183</u>	Washer, #10, Type A, Flat	3
17	<u>8450</u>	Screw, #10-24 X 0.50, Hex-Head	3
18	<u>1016289</u>	Spacer, Fixed Face Shaft	1
19	<u>1016801</u>	Kit, Drive Clutch Weight (includes items 20 through 26)	1
20	<u>1014063</u>	Screw, 1/4-20 X 1.00, Hex Head	6
21	N/A	Pin, Dowel, 0.3752 x 1.50	3
22	<u>1014065</u>	Washer, Flat, 0.38" ID, Delrin	6
23	N/A	Clutch Weight, Secondary	3
24	N/A	Washer	6
25	<u>1016201</u>	Washer, Wave	3
26	N/A	Weight, Primary	3
27	<u>101925601</u>	Plug, Drive Clutch	3
28	<u>101929802</u>	Kit, Fxd Face Dr Asm Fe290/350 (includes item 29)	1
29	N/A	Assembly, Fixed-Face Drive (includes items 30 through 32)	1
30	N/A	Fixed Face Assembly, Drive Clutch	1
31	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	3
32	N/A	Pulley, Clutch	1
33	<u>103345701</u>	Screw 3/8-24x5.5 Hex Loc Ptch	1
34	<u>334</u>	Washer, 3/8, Type A, Flat	1
35	<u>808</u>	Washer, 3/8 Type B Flat	1

12

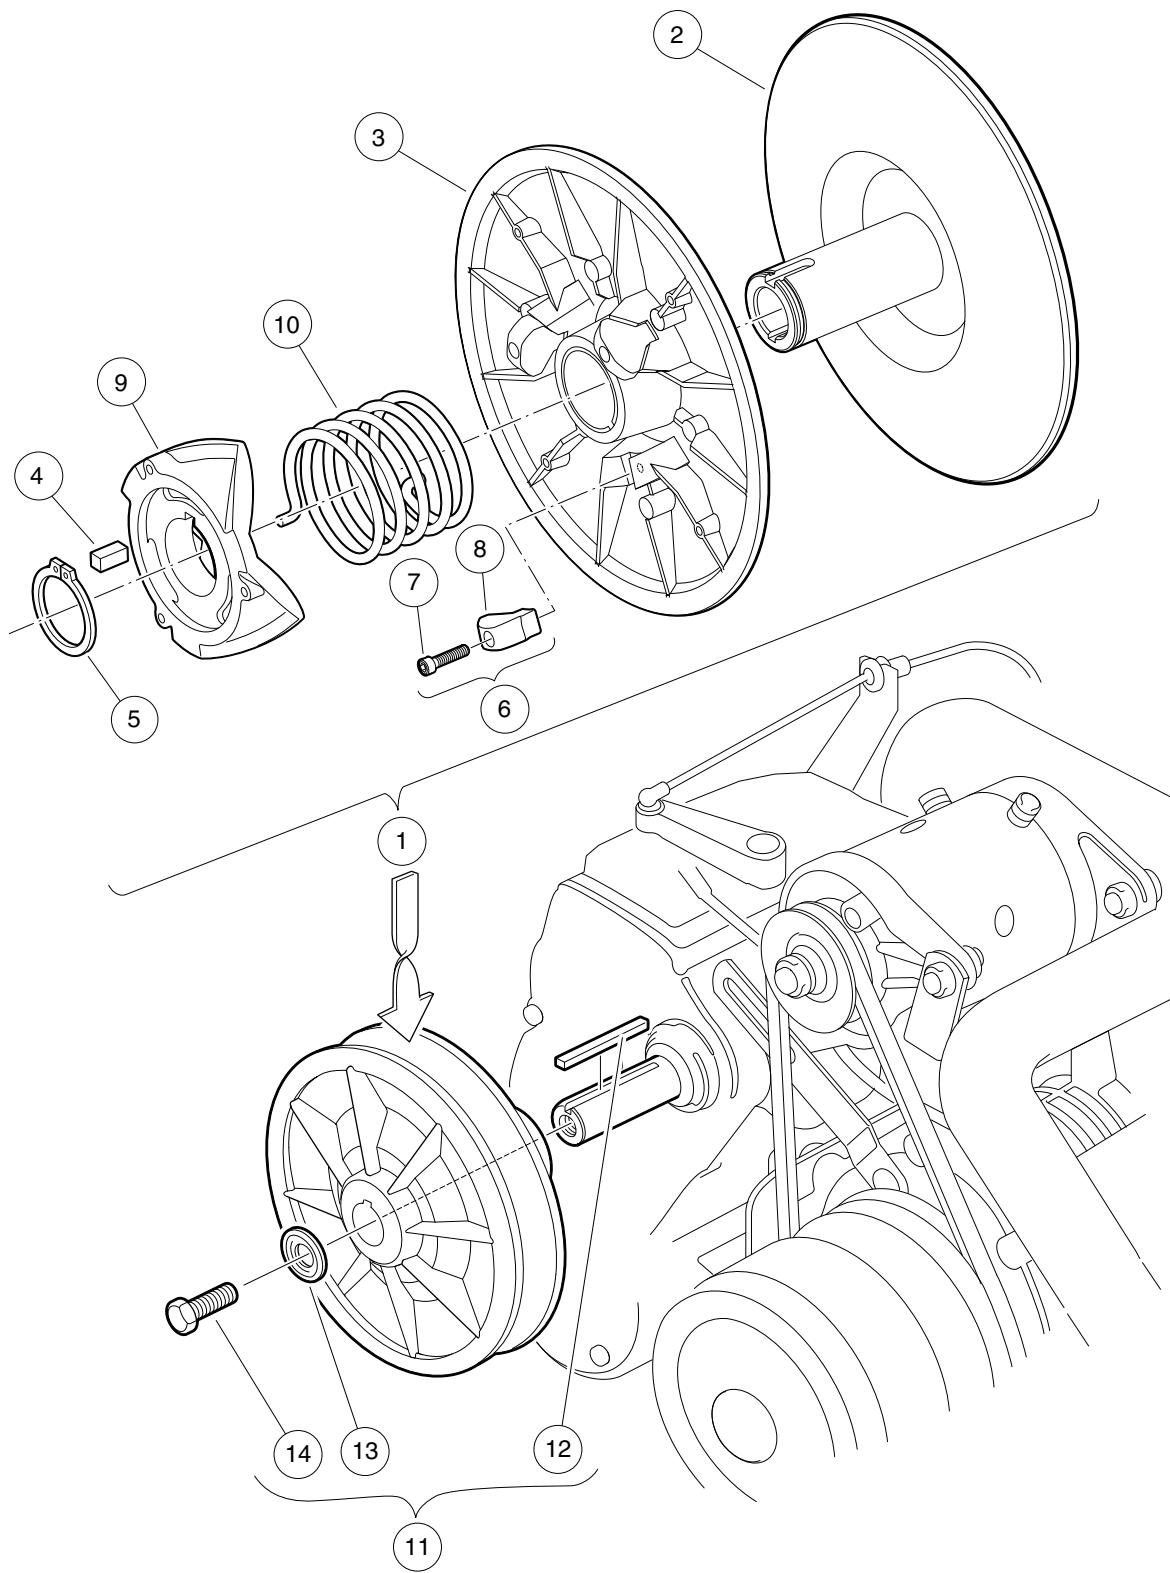
G



000217-008

DRIVE CLUTCH – XRT 900 AND CARRYALL 2 PLUS

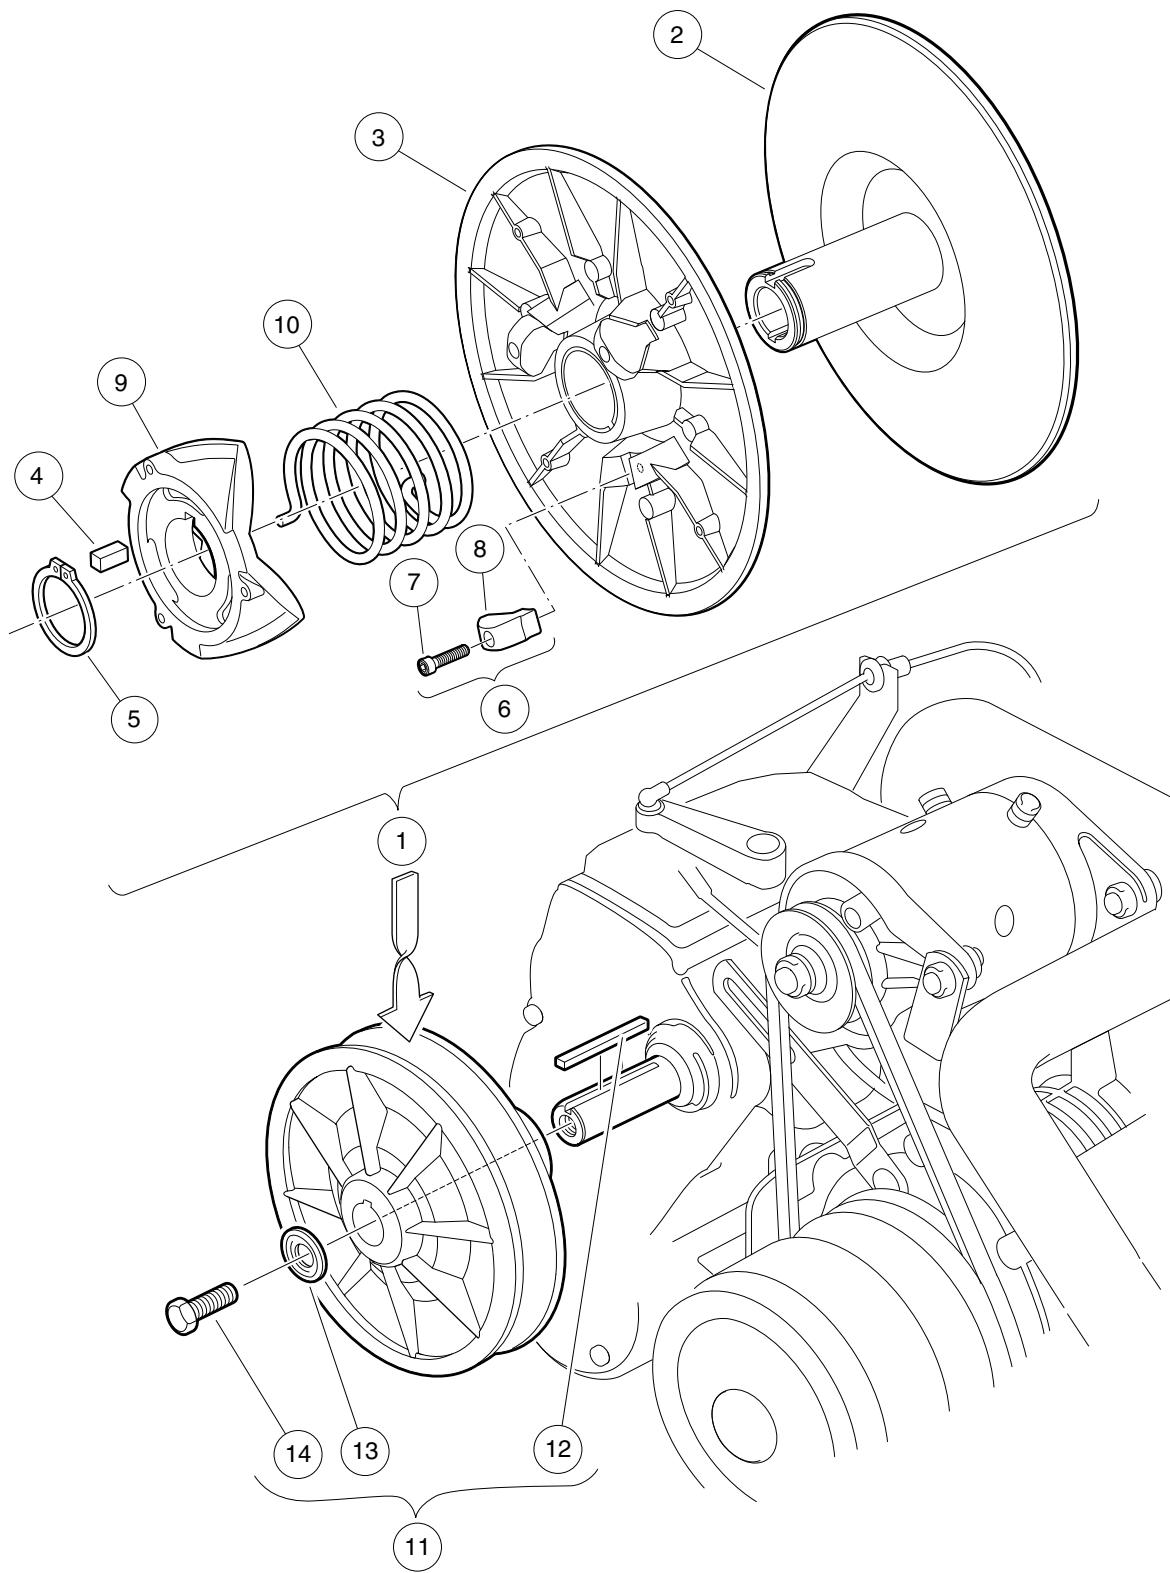
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	12
1	<u>101833906</u>	Drive Clutch Assy. FE 350/272 (includes items 2 through 28)	1
2	<u>1014049</u>	Bearing, Idler	1
3	<u>1014050</u>	Retainer, Spring	1
4	<u>1014052</u>	Movable-Face Assembly (includes items 5 through 7)	1
5	N/A	Drive Clutch Movable Face	1
6	<u>1014055</u>	Retainer	1
7	N/A	Bushing, Split, Drive Clutch	1
8	<u>1014056</u>	Ring, Spiral Backup	2
9	<u>1014057</u>	Ring, 0.810" Internal Retaining	1
10	<u>1014058</u>	Thrust Washer	1
11	<u>1014059</u>	Drive Hub Assy, Drive Clutch	1
12	<u>1014453</u>	Kit, Drive Clutch Button (includes items 13 through 16)	1
13	<u>1014062</u>	Driver, Drive Clutch	3
14	<u>1014287</u>	Spring, Drive Button	3
15	<u>183</u>	Washer, #10, Type A, Flat	3
16	<u>8450</u>	Screw, #10-24 X 0.50, Hex-Head	3
17	<u>1016289</u>	Spacer, Fixed Face Shaft	1
18	<u>1016801</u>	Kit, Drive Clutch Weight (includes items 19 through 25)	1
19	<u>1014063</u>	Screw, 1/4-20 X 1.00, Hex Head	6
20	N/A	Pin, Dowel, 0.3752 x 1.50	3
21	<u>1014065</u>	Washer, Flat, 0.38" ID, Delrin	6
22	N/A	Clutch Weight, Secondary	3
23	N/A	Washer	6
24	<u>1016201</u>	Washer, Wave	3
25	N/A	Weight, Primary	3
26	<u>1016901</u>	Spring, Drive Clutch	1
27	N/A	Cap Plug	3
28	<u>101929802</u>	Kit, Fxd Face Dr Asm Fe290/350 (includes item 29)	1
29	N/A	Assembly, Fixed-Face Drive (includes items 30 through 32)	1
30	N/A	Fixed Face Assembly, Drive Clutch	1
31	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	3
32	N/A	Pulley, Clutch	1
33	<u>103345701</u>	Screw 3/8-24x5.5 Hex Loc Ptch	1
34	<u>334</u>	Washer, 3/8, Type A, Flat	1
35	<u>808</u>	Washer, 3/8 Type B Flat	1

12**G**

000219-001

DRIVEN CLUTCH – TURF/CARRYALL 2 AND 252

ITEM	PART NO.	DESCRIPTION	QTY	12	G
		1 2 3 4			
1	<u>101834001</u>	Assembly, Driven Clutch (includes items 2 through 10)	1		
2	<u>1014070</u>	Fixed Face Assy, Driven Clutch	1		
3	<u>1014072</u>	Movable-Face Assembly with Bushing	1		
4	<u>1014078</u>	Key, Driven Clutch	1		
5	<u>1014080</u>	Ring, Retaining	1		
6	<u>1014454</u>	Kit, Driven Clutch Button (includes items 7 and 8)	1		
7	<u>1012836</u>	Screw, #8-32 X 3/4, Socket-Head Cap	3		
8	N/A	Button, Drive	3		
9	<u>1017686</u>	Cam, Driven Clutch	1		
10	<u>101836201</u>	Spring, Driven Clutch, Reversed	1		
11	<u>AM10419</u>	Kit, Clutch Repair (includes items 12 through 14)	1		
12	<u>101833401</u>	Key, 3/16 Sq X 1.50"	1		
13	<u>102155801</u>	Washer, Driven Clutch	1		
14	<u>102242101</u>	Screw, 5/16-18 X 3/4 Hex-Head with Patch	1		

12**G**

000219-001

DRIVEN CLUTCH – CARRYALL 2 PLUS AND XRT 900

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101834003</u>	Clutch, Driven (includes items 2 through 10)	1
2	<u>1014070</u>	Fixed Face Assy, Driven Clutch	1
3	<u>1014072</u>	Movable-Face Assembly with Bushing	1
4	<u>1014078</u>	Key, Driven Clutch	1
5	<u>1014080</u>	Ring, Retaining	1
6	<u>1014454</u>	Kit, Driven Clutch Button (includes items 7 and 8)	1
7	<u>1012836</u>	Screw, #8-32 X 3/4, Socket-Head Cap	3
8	N/A	Button, Drive	3
9	<u>1017686</u>	Cam, Driven Clutch	1
10	<u>101836202</u>	Spring, Driven Clutch, Reversed	1
11	<u>AM10419</u>	Kit, Clutch Repair (includes items 12 through 14)	1
12	<u>101833401</u>	Key, 3/16 Sq X 1.50"	1
13	<u>102155801</u>	Washer, Driven Clutch	1
14	<u>102242101</u>	Screw, 5/16-18 X 3/4 Hex-Head with Patch	1

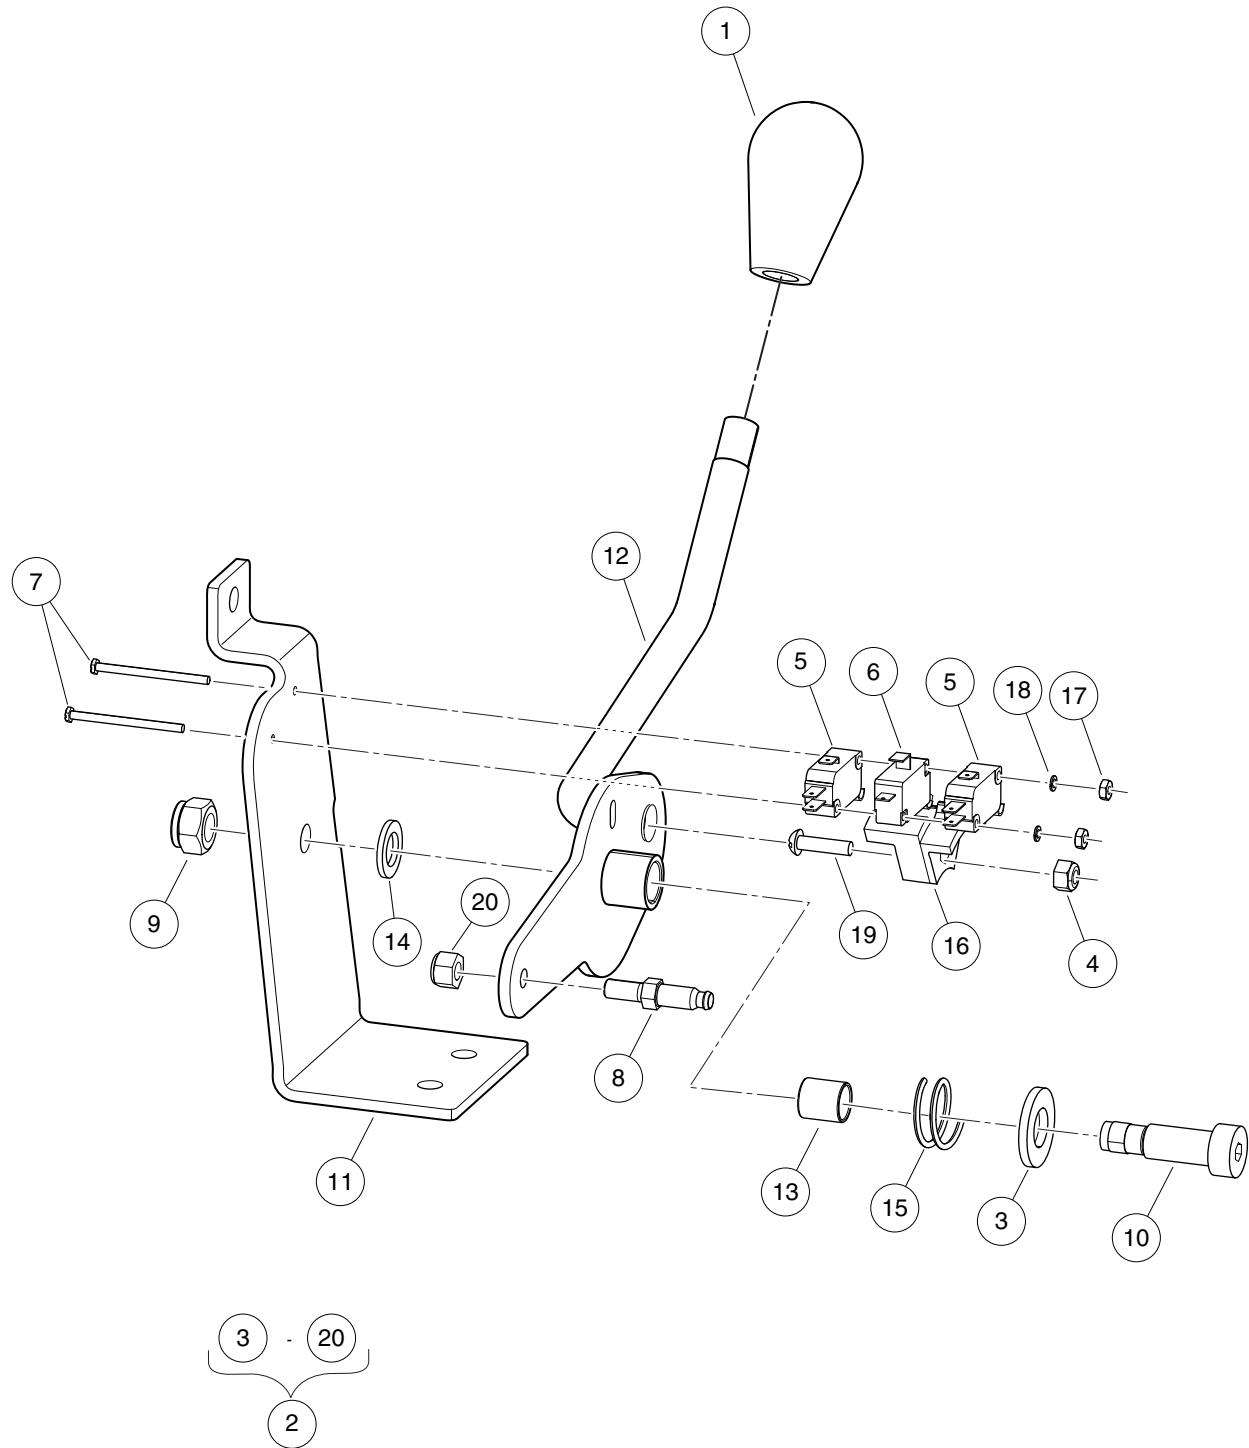
12

G

UNITIZED TRANSAXLE – GASOLINE VEHICLES

13

G

13**G**

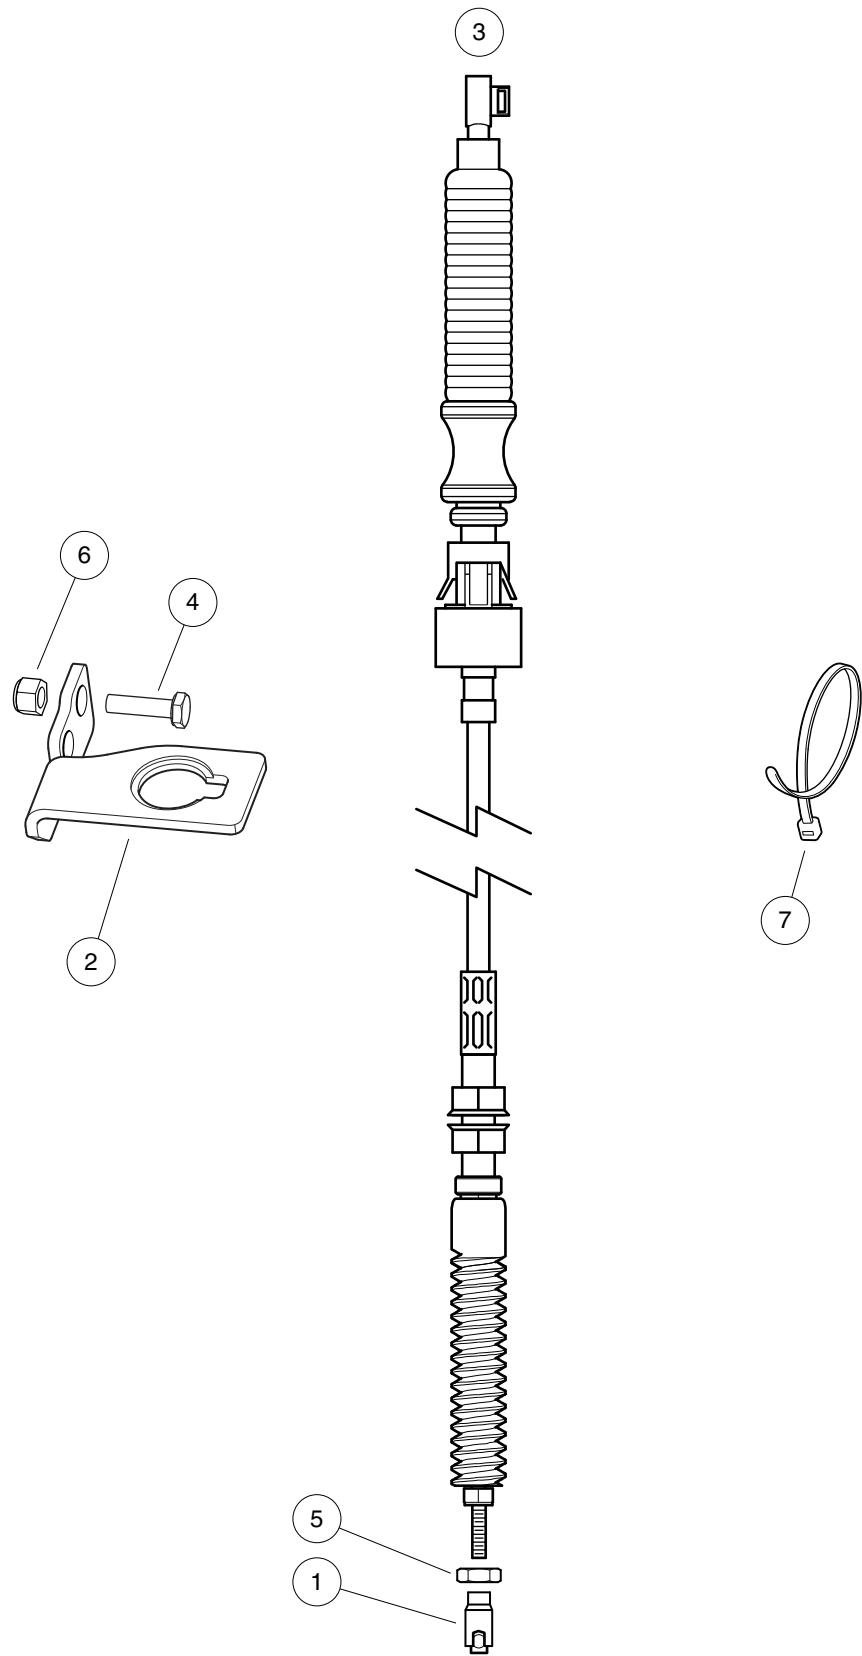
000563-001

FORWARD/REVERSE SHIFTER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102376001</u>	Knob, FNR, Shifter	1
2	<u>102969901</u>	Asm, Shifter, FNR (includes items 3 through 20)	1
3	<u>1010028</u>	Washer, 1/2 Type A Flat	1
4	<u>1013061</u>	Locknut, #10-32 Nylon Insert	1
5	<u>1014807</u>	Switch, Limit	2
6	<u>1014808</u>	Switch, Limit	1
7	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2
8	<u>102526201</u>	Stud, Thread, 1/4-28	1
9	<u>102616701</u>	Locknut, M10x1.5 Nylon Insert	1
10	<u>102684602</u>	Shoulder Bolt, M12 X 25.0	1
11	<u>102969401</u>	Bracket, Shifter, FNR	1
12	<u>102969801</u>	Weldment, Shift Lever, FNR	1
13	<u>103173301</u>	Bushing, Greaseless, 12mm Id	1
14	<u>103177401</u>	Washer, Thrust, Shifter, FNR	1
15	<u>103192701</u>	Spring, Comp, .97 Od X.75 L	1
16	<u>103369501</u>	Cam, Limit Switch, Fn Shifter	1
17	<u>8057</u>	Nut, #4-40 Hex Machine	2
18	<u>8058</u>	Lockwasher, #4 Split	2
19	8104	Screw, #10-32 X .75 Rd Hd Mach	1
20	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1

13

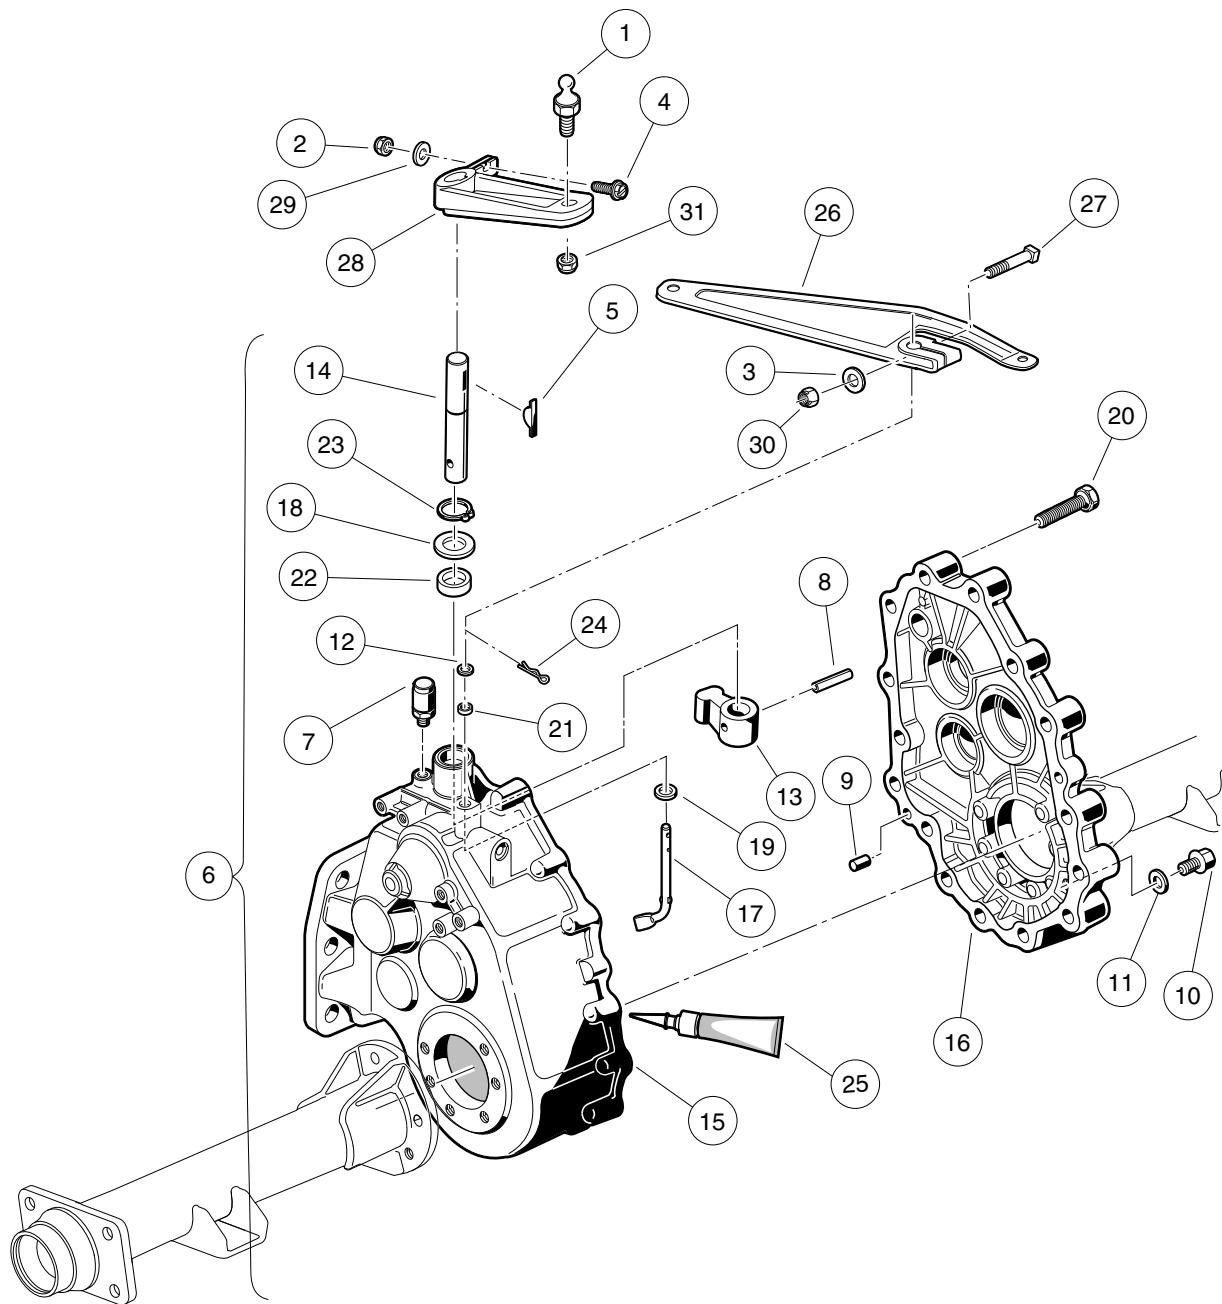
G

13**G**

001071-001

SHIFTER CABLE – TURF/CA 2/252/2 PLUS AND XRT900

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		13
1	<u>1012333</u>	Joint, #10-32 Ball	1	G
2	<u>103295101</u>	Brkt, Spt, Cable End, Fnr	1	
3	<u>103295202</u>	Cable, Trans, Ball End, 1855mm	1	
4	<u>304</u>	Screw, 1/4-20 X 1.0 Hex-Head Cap	2	
5	<u>7893</u>	Nut, #10-32 Hex	1	
6	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2	
7	<u>8639</u>	Tie Wrap, 11" Nylon	A/R	



000220-005

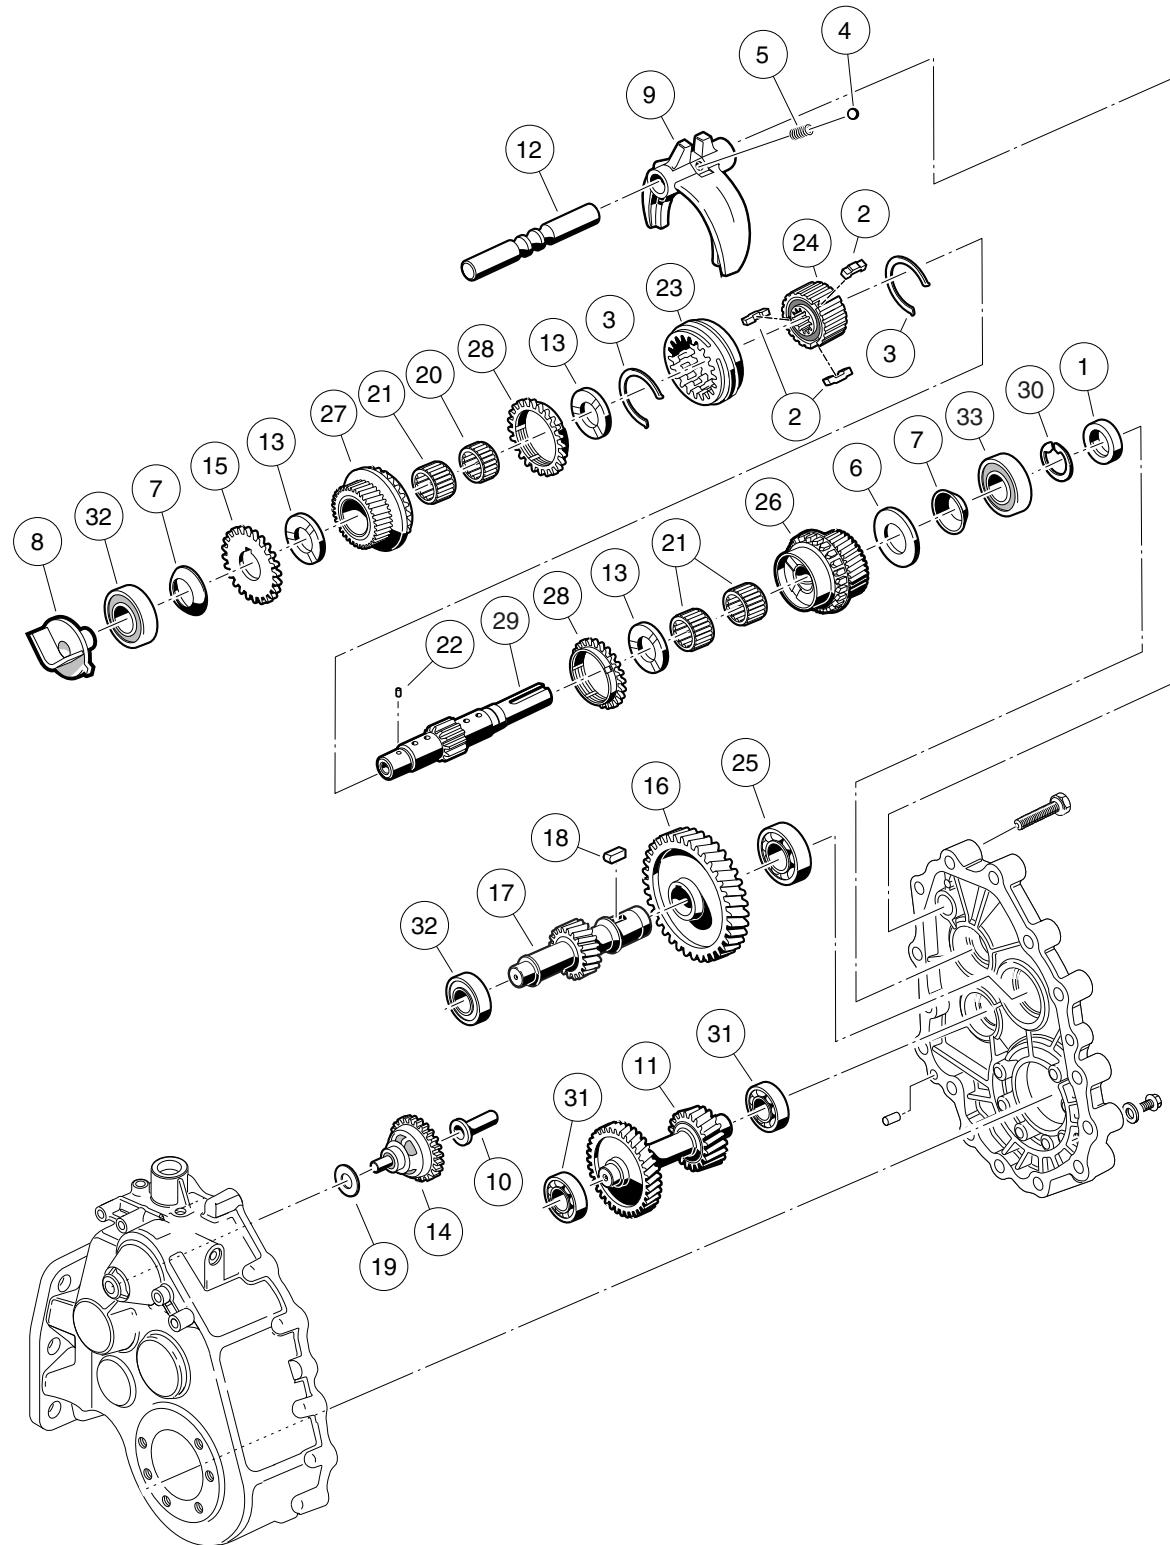
KAWASAKI TRANSAXLE – GEAR CASES AND LEVERS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010954</u>	Stud, Ball, 1/4-28 X 0.560	1
2	<u>1013061</u>	Locknut, #10-32 Nylon Insert	1
3	<u>1014007</u>	Washer, 1/4, Flat	1
4	<u>1017082</u>	Screw, #10-32 X 0.75, Hex-Head Machine	1
5	<u>1017231</u>	Key, Woodruff	1
6	<u>101833601</u>	Transaxle, 11.77 Ratio (includes items 7 through 25)	1
7	<u>1012711</u>	Breather	1
8	<u>1012752</u>	Roll Pin	1
9	<u>1012896</u>	Pin, Dowel	2
10	<u>1013760</u>	Fill Plug	2
11	<u>1016432</u>	Gasket, Drain Plug	1
12	<u>1016513</u>	Washer, M6 Flat	1
13	<u>101890101</u>	Lever, Drive Selector	1
14	<u>101890201</u>	Shaft, Drive Selector	1
15	<u>101890501</u>	Gear Case (driver side)	1
16	<u>101890601</u>	Gear Case (passenger side)	1
17	<u>101891301</u>	Arm Pivot	1
18	<u>101892901</u>	Washer	1
19	<u>101893801</u>	Washer	1
20	<u>101926901</u>	Screw, M8-1.25 X 40mm Hex-Head	15
21	<u>101927101</u>	Seal, Oil	1
22	<u>101927201</u>	Seal, Oil	1
23	<u>101927301</u>	Snap Ring	1
24	<u>101928601</u>	Pin, Cotter	1
25	<u>101928701</u>	Liquid Gasket (Transaxle case)	1
26	<u>101834801</u>	Arm, Governor	1
27	<u>101886101</u>	Screw, 1/4-20 X 1.00, Square-Head	1
28	<u>102515401</u>	Lever, Transmission Shift	1
29	<u>183</u>	Washer, #10, Type A, Flat	1
30	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	1
31	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1

Note: Kawasaki transaxle component listings span three pages.

13

G



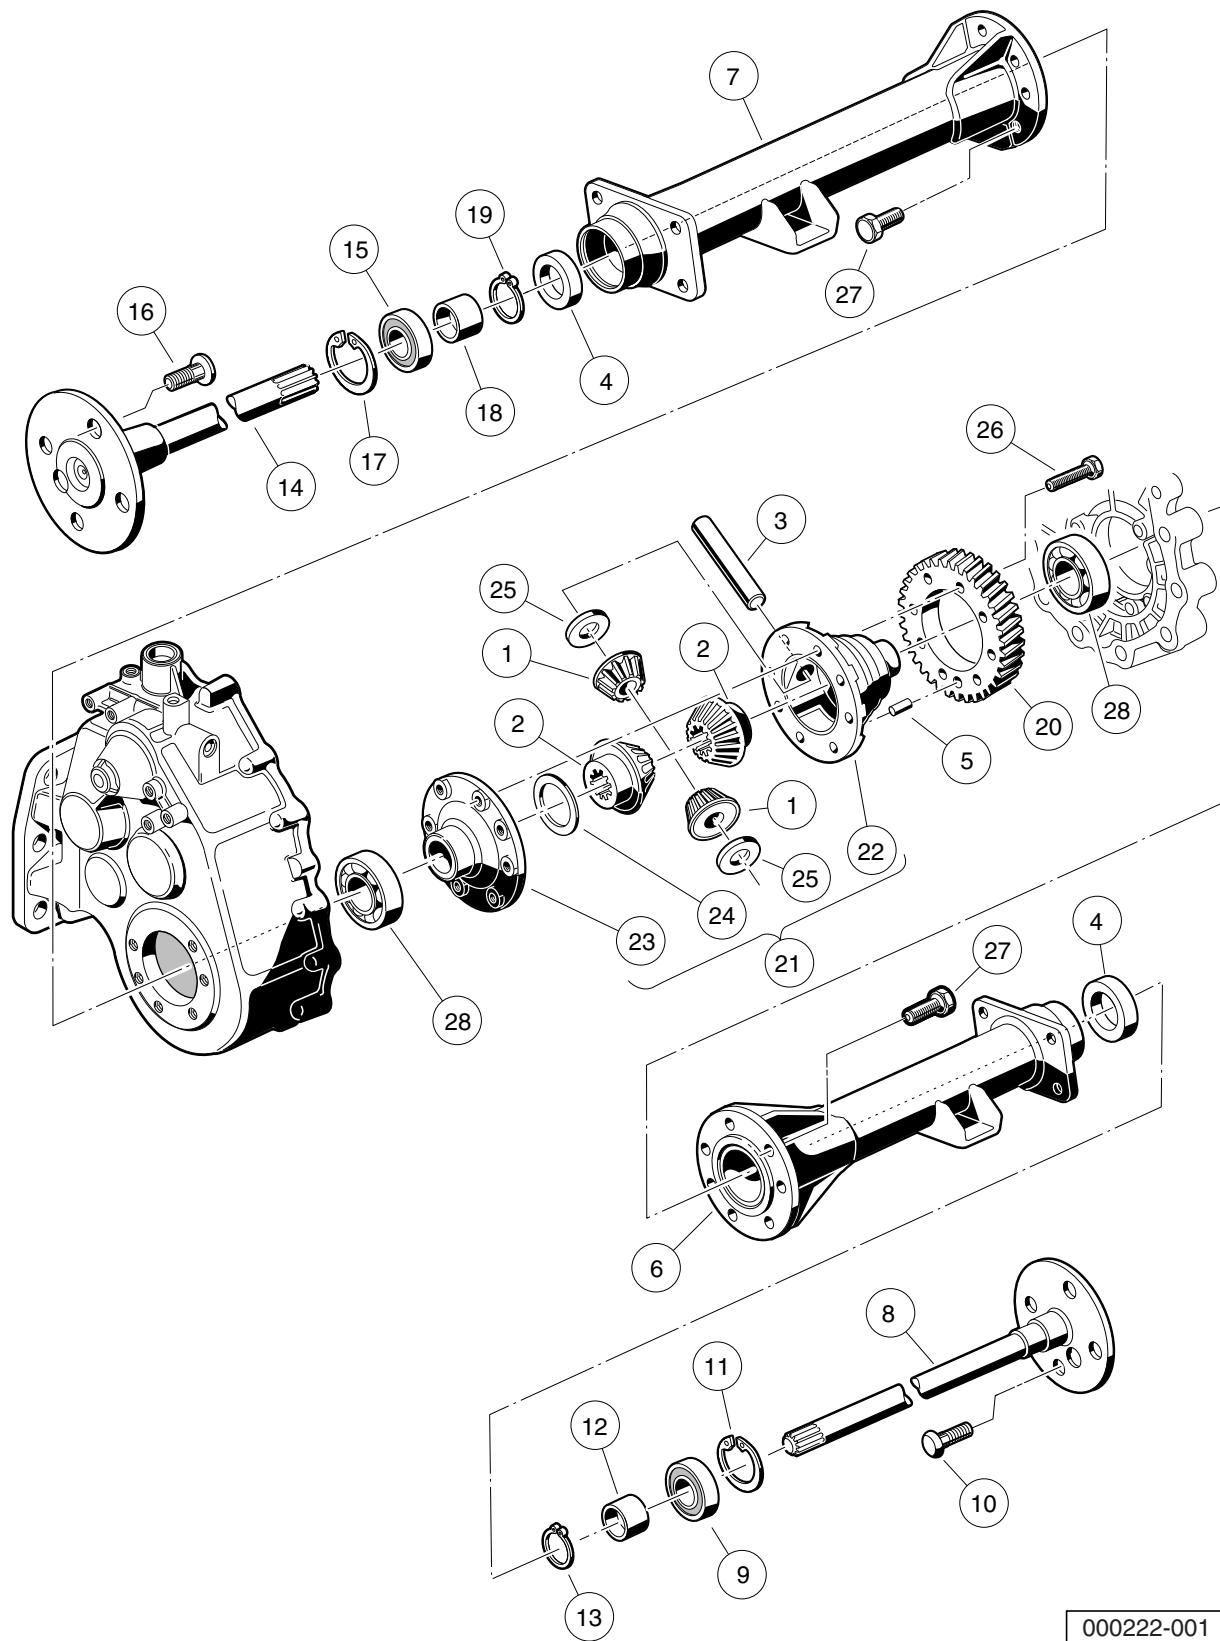
000221-001

KAWASAKI TRANSAXLE – F&R TRANSMISSION AND GEAR REDUCTION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012714</u>	Oil Seal	1
2	<u>1012740</u>	Synchro Insert	3
3	<u>1012741</u>	Synchro Spring	2
4	<u>1012747</u>	Shifter Ball	1
5	<u>1012748</u>	Shifter Spring	1
6	<u>1016337</u>	Washer, Thrust	1
7	<u>1016338</u>	Washer, Spring	2
8	<u>101889401</u>	Guide	1
9	<u>101890001</u>	Fork - Shift	1
10	<u>101891601</u>	Sleeve, Governor	1
11	<u>101891901</u>	Gear, Cluster	1
12	<u>101892001</u>	Rod, Shift	1
13	<u>101892201</u>	Plate, Thrust	3
14	<u>101892301</u>	Governor Assembly	1
15	<u>101892401</u>	Gear, Spur	1
16	<u>101892501</u>	Gear, Helical (61 Tooth)	1
17	<u>101892601</u>	Gear, Helical (17 Tooth)	1
18	<u>101893201</u>	Key Sunk	1
19	<u>101893901</u>	Washer	1
20	<u>101927501</u>	Needle Bearing	1
21	<u>101927601</u>	Needle Bearing	3
22	<u>101927701</u>	Pin, .116" Dia X 0.264 Dowel	1
23	<u>101927901</u>	Sleeve, Synchro	1
24	<u>101928001</u>	Hub, Synchro Clutch	1
25	<u>101928101</u>	Bearing, Ball	1
26	<u>101980801</u>	Gear Assembly, 16-Degree Synchro (25 Tooth)	1
27	<u>101980901</u>	Gear Assembly, 16-Degree Rear Synchro (28 Tooth)	1
28	<u>101981001</u>	Ring, 16-Degree Synchronizer	2
29	<u>102453001</u>	Shaft, Trans, with Circlip	1
30	<u>102453101</u>	Circlip	1
31	<u>7335</u>	Bearing	2
32	<u>AM10080</u>	Bearing, Ball, Sealed	2
33	<u>AM10081</u>	Bearing, Ball, Sealed	1

13

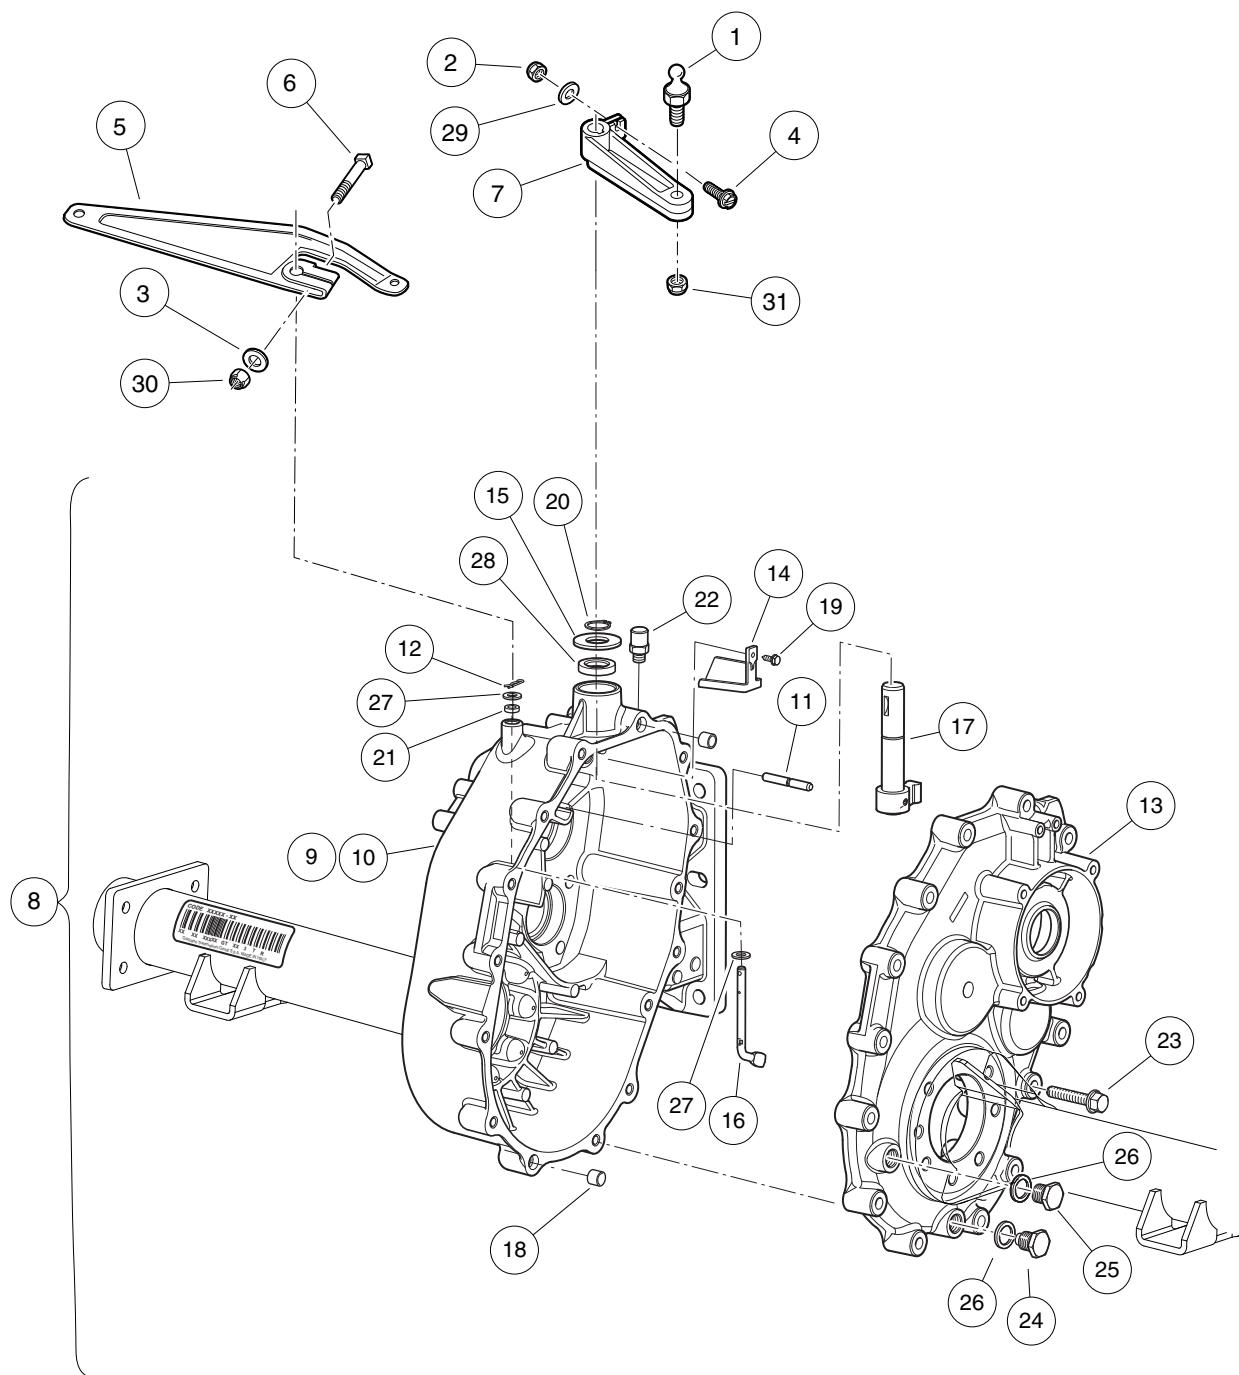
G

13**G**

000222-001

KAWASAKI TRANSAXLE – DIFFERENTIAL AND AXLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	13
1	<u>1013770</u>	Differential Idler Gear	2
2	<u>1013771</u>	Gear, Differential	2
3	<u>1013772</u>	Pin, Differential	1
4	<u>1013794</u>	Axle Shaft Oil Seal	2
5	N/A	Dowel Pin	1
6	<u>101890901</u>	Axle Tube (Passenger Side)	1
7	<u>101891001</u>	Axle Tube (Driver Side)	1
8	<u>101891401</u>	Axle Assembly, Passenger Side (includes items 9 through 13)	1
9	<u>1011291</u>	Outer Axle, Tube Bearing	1
10	<u>1013787</u>	Lug Stud	4
11	<u>1013792</u>	Circlip Type C	1
12	<u>1014207</u>	Bushing	1
13	<u>1016672</u>	Retaining Ring	1
14	<u>101891501</u>	Axle Assembly, Driver-Side (includes items 15 through 19)	1
15	<u>1011291</u>	Outer Axle, Tube Bearing	1
16	<u>1013787</u>	Lug Stud	4
17	<u>1013792</u>	Circlip Type C	1
18	<u>1014207</u>	Bushing	1
19	<u>1016672</u>	Retaining Ring	1
20	<u>101892701</u>	Gear, Helical	1
21	<u>101910501</u>	Kit, Differential Gear Case (includes items 22 through 25)	1
22	<u>1013768</u>	Differential Gear Case, Left-Hand	1
23	<u>1013769</u>	Differential Gear Case, Right-Hand	1
24	<u>1013773</u>	Plate, Thrust (Differential Gear)	1
25	<u>1013774</u>	Plate, Thrust (Idler Gear)	2
26	<u>101928301</u>	Screw, M8-1.25 X 35mm Hex Head	8
27	<u>102031901</u>	Bolt, M10 X 1.5 X 30mm	14
28	<u>7330</u>	Inner Axle Tube Bearing	2

13**G**

000680-009

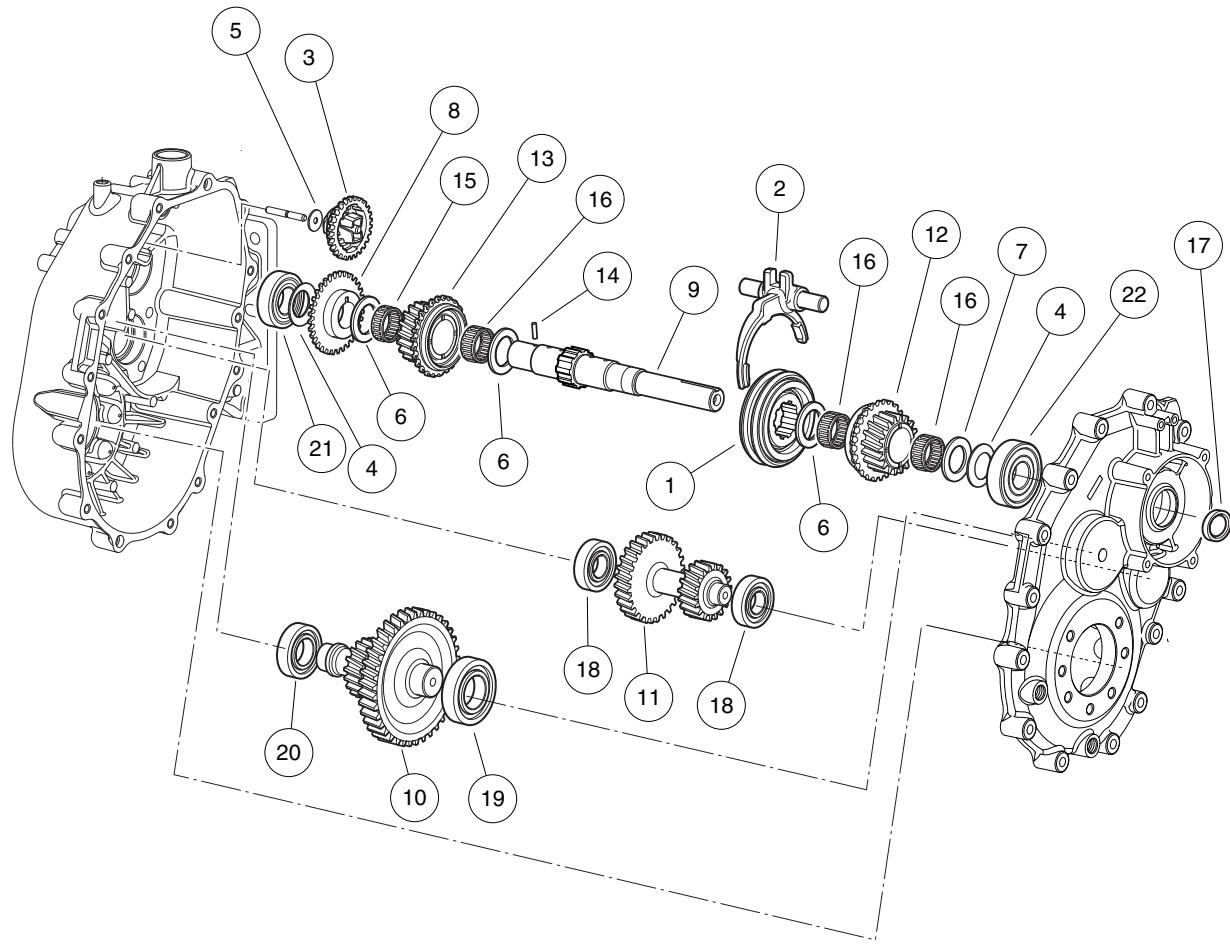
GRAZIANO TRANSAXLE – GEAR CASES AND LEVERS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010954</u>	Stud, Ball, 1/4-28 X 0.560	1
2	<u>1013061</u>	Locknut, #10-32 Nylon Insert	1
3	<u>1014007</u>	Washer, 1/4, Flat	1
4	<u>1017082</u>	Screw, #10-32 X 0.75, Hex-Head Machine	1
5	<u>101834801</u>	Arm, Governor	1
6	<u>101886101</u>	Screw, 1/4-20 X 1.00, Square-Head	1
7	<u>102515401</u>	Lever, Transmission Shift	1
8	<u>102896801</u>	Transaxle, Unitized, Graziano (includes items 9 through 28)	1
9	<u>102896901</u>	Gear Box (Driver-Side) (includes items 10 and 11)	1
10	N/A	Gear Box	1
11	N/A	Pin, Speed Governor	1
12	<u>102897401</u>	Pin, Split	1
13	<u>102897501</u>	Cover, Gear Box (Passenger-Side)	1
14	<u>102897601</u>	Conveyor, Oil	1
15	<u>102897801</u>	Washer, Thrust	1
16	<u>102897901</u>	Lever, Speed Governor	1
17	<u>102898201</u>	Unit, Drive Selector	1
18	<u>102899101</u>	Dowel	2
19	<u>102899201</u>	Screw	1
20	<u>102899401</u>	Ring, Snap	1
21	<u>102899701</u>	Grommet	1
22	<u>102899801</u>	Breather	1
23	<u>102900001</u>	Screw	15
24	<u>102900101</u>	Drain Plug, Magnetic	1
25	<u>102900201</u>	Fill Plug	1
26	<u>102900301</u>	Seal	2
27	<u>102900601</u>	Washer	2
28	<u>102900901</u>	Grommet	1
29	<u>183</u>	Washer, #10, Type A, Flat	1
30	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	1
31	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1

Note: Graziano transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube.

13

G

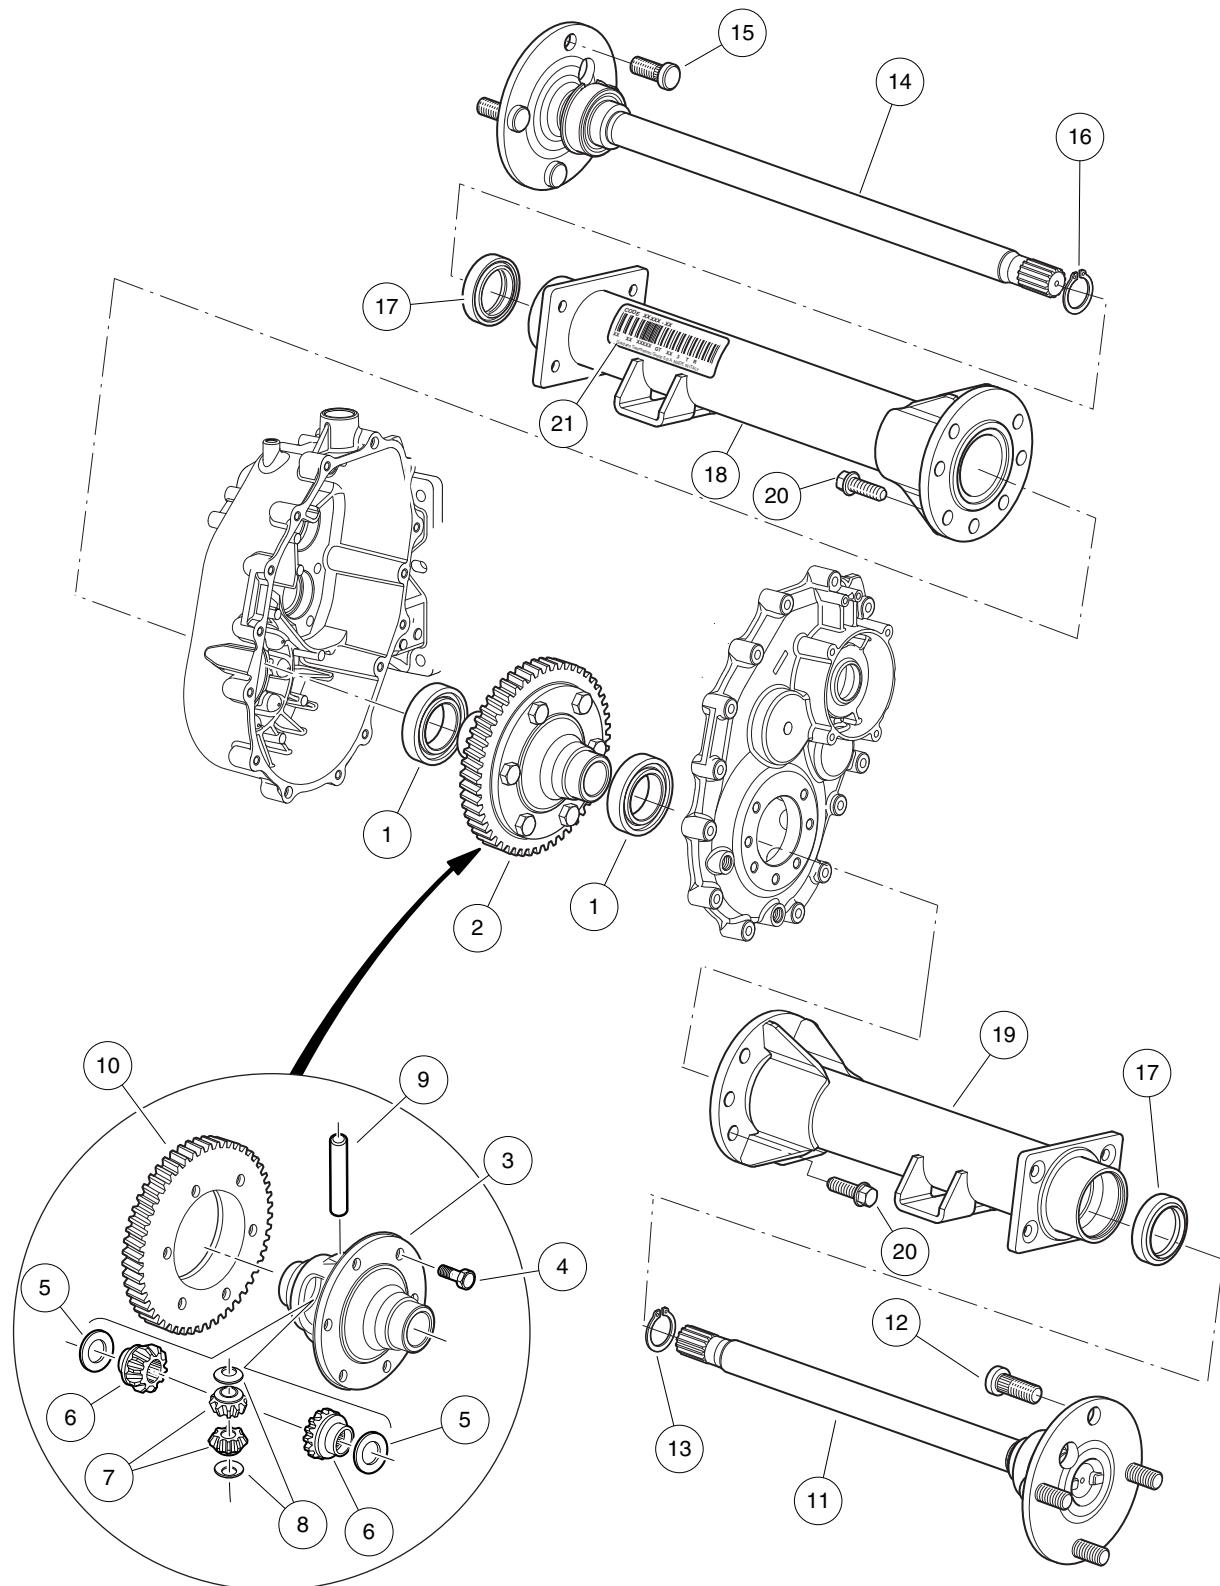


000680-006

GRAZIANO TRANSAKLE – F&R TRANSMISSION AND GEAR REDUCTION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102897201</u>	Synchronizer, Complete	1
2	<u>102897301</u>	Fork, Complete	1
3	<u>102897701</u>	Assembly, Speed Governor	1
4	<u>102898001</u>	Washer, Belleville	2
5	<u>102898101</u>	Bearing, Thrust	1
6	<u>102898301</u>	Bearing, Thrust	3
7	<u>102898401</u>	Washer, Thrust	1
8	<u>102898501</u>	Gear, Speed Governor	1
9	<u>102898601</u>	Shaft, Main	1
10	<u>102898701</u>	Shaft, Secondary	1
11	<u>102898801</u>	Shaft, Reverse Gear	1
12	<u>102898901</u>	Gear, Complete, 25t	1
13	<u>102899001</u>	Gear, Complete, 28t	1
14	<u>102899301</u>	Pin	1
15	<u>102899501</u>	Cage, Roller	1
16	<u>102899601</u>	Cage, Roller	3
17	<u>102899901</u>	Grommet	1
18	<u>102900401</u>	Bearing	2
19	<u>102900501</u>	Bearing, 62 Od X 30 Id X 16	1
20	<u>102900701</u>	Bearing	1
21	<u>102901001</u>	Bearing	1
22	<u>102901101</u>	Bearing	1

Note: To identify your transaxle, locate the serial number decal on the axle tube.

13**G**

000681-002

GRAZIANO TRANSAKLE -DIFFERENTIAL AND AXLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102900801</u>	Bearing, 68 Od X 40 Id X 15	2
2	<u>102902001</u>	Assembly, Differential (includes items 3 through 10)	1
3	<u>102901201</u>	Box, Differential	1
4	<u>102901301</u>	Screw, M10 X 25	6
5	<u>102901401</u>	Ring, Sleeve	2
6	<u>102901501</u>	Gear, Sun	2
7	<u>102901601</u>	Gear, Planetary	2
8	<u>102901701</u>	Ring, Sleeve	2
9	<u>102901801</u>	Pin	1
10	<u>102901901</u>	Gear	1
11	<u>102902101</u>	Shaft, Axle, Short, Complete (Passenger-Side) (includes items 12 and 13)	1
12	<u>102902301</u>	Bolt, Stud	4
13	<u>102902401</u>	Snap Ring	1
14	<u>102902201</u>	Shaft, Axle, Long, Complete (Driver-Side) (includes items 15 and 16)	1
15	<u>102902301</u>	Bolt, Stud	4
16	<u>102902401</u>	Snap Ring	1
17	<u>102902501</u>	Seal, Lip	2
18	<u>102902601</u>	Axle Tube, (Driver-Side)	1
19	<u>102902701</u>	Axle Tube, (Passenger-Side)	1
20	<u>102902801</u>	Screw, M10 X 30	14
21	N/A	Tag, Serial	1
		Note: To identify your transaxle, locate the serial number decal on the axle tube.	

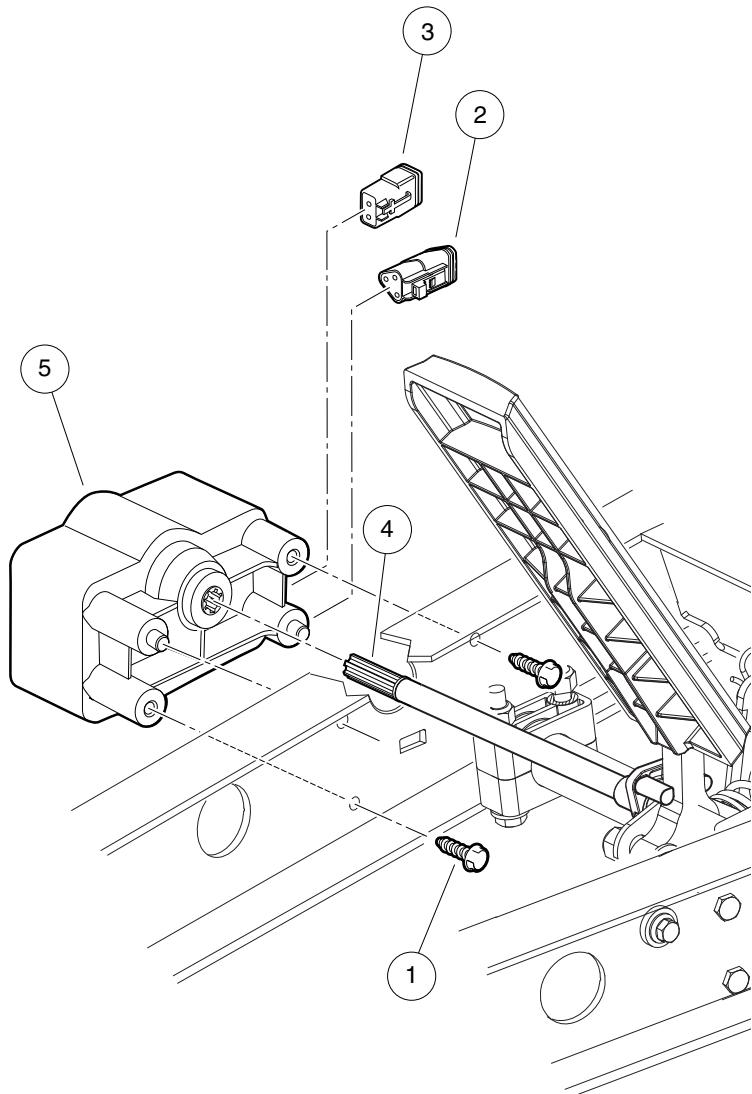
13

G

ELECTRICAL SYSTEM, ELECTRIC VEHICLES – TO EARLY-2011 MODEL

14

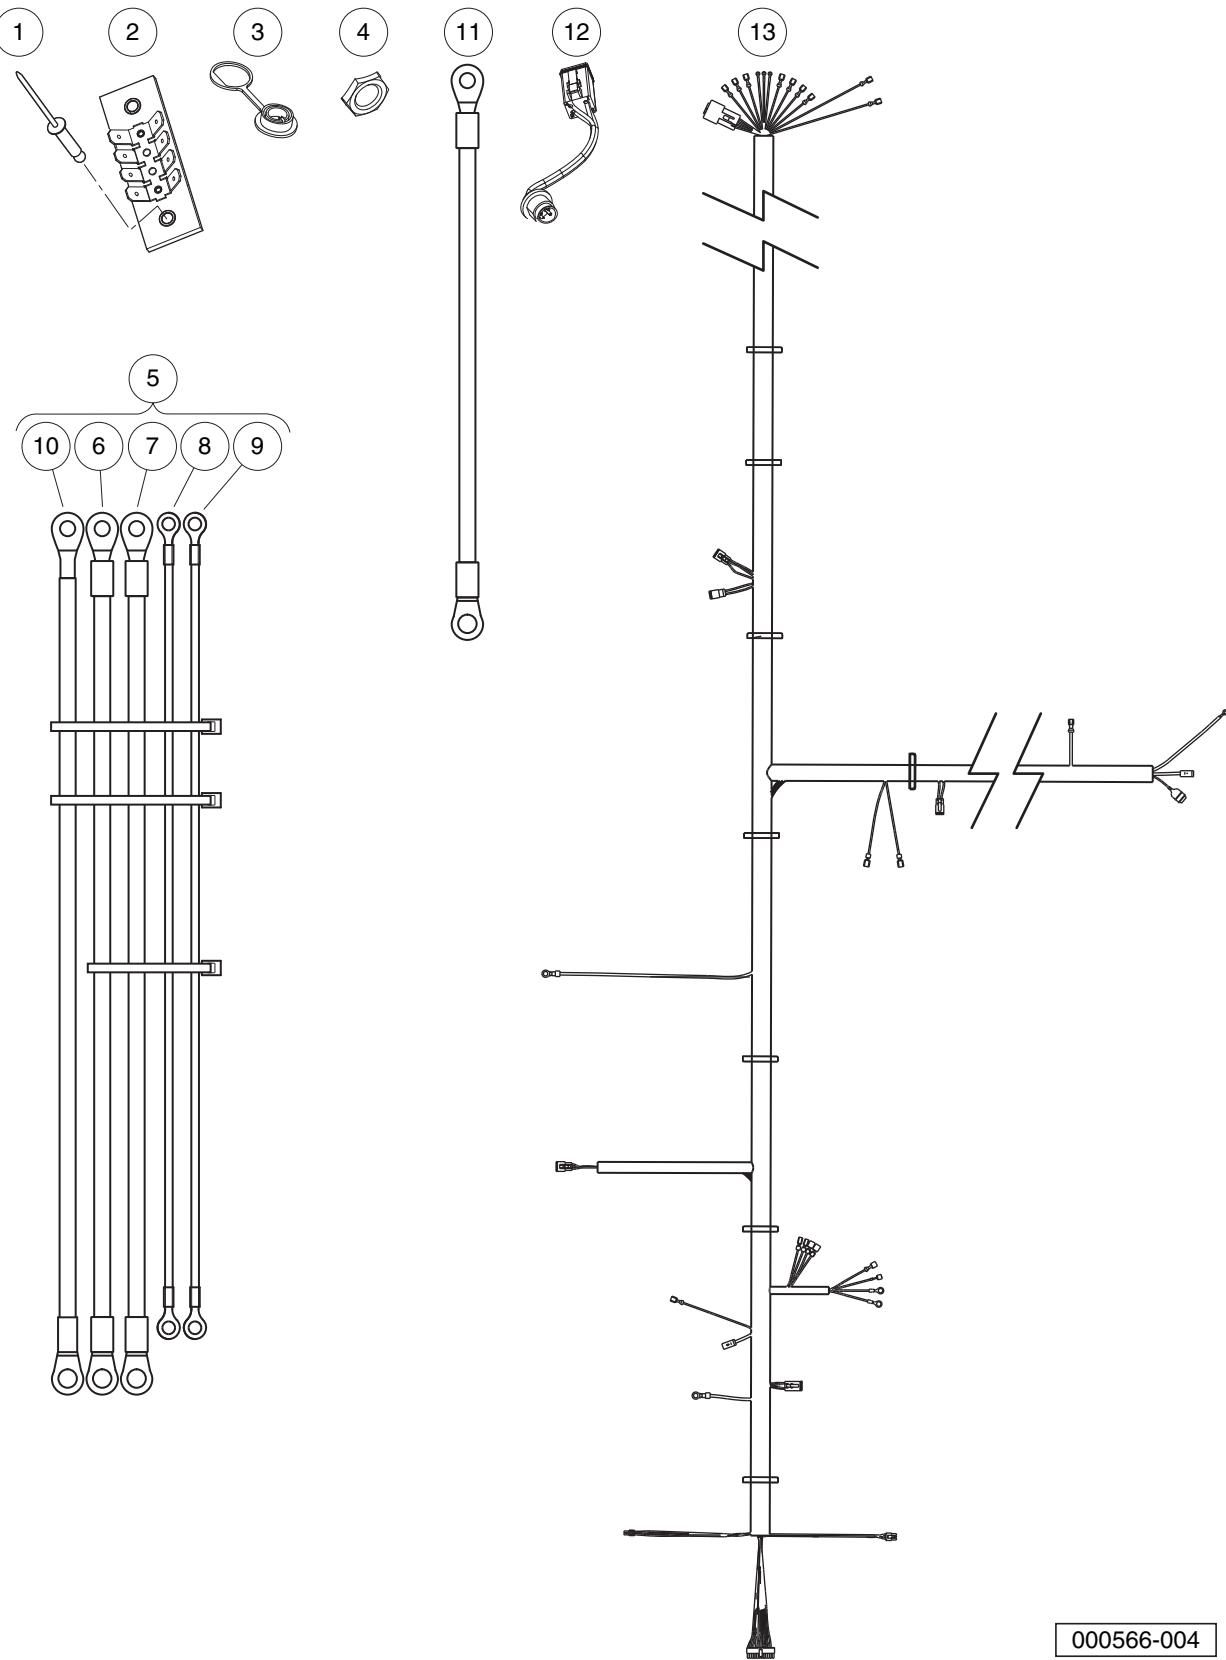
E



001070-001

MOTOR CONTROLLER OUTPUT REGULATOR (MCOR)

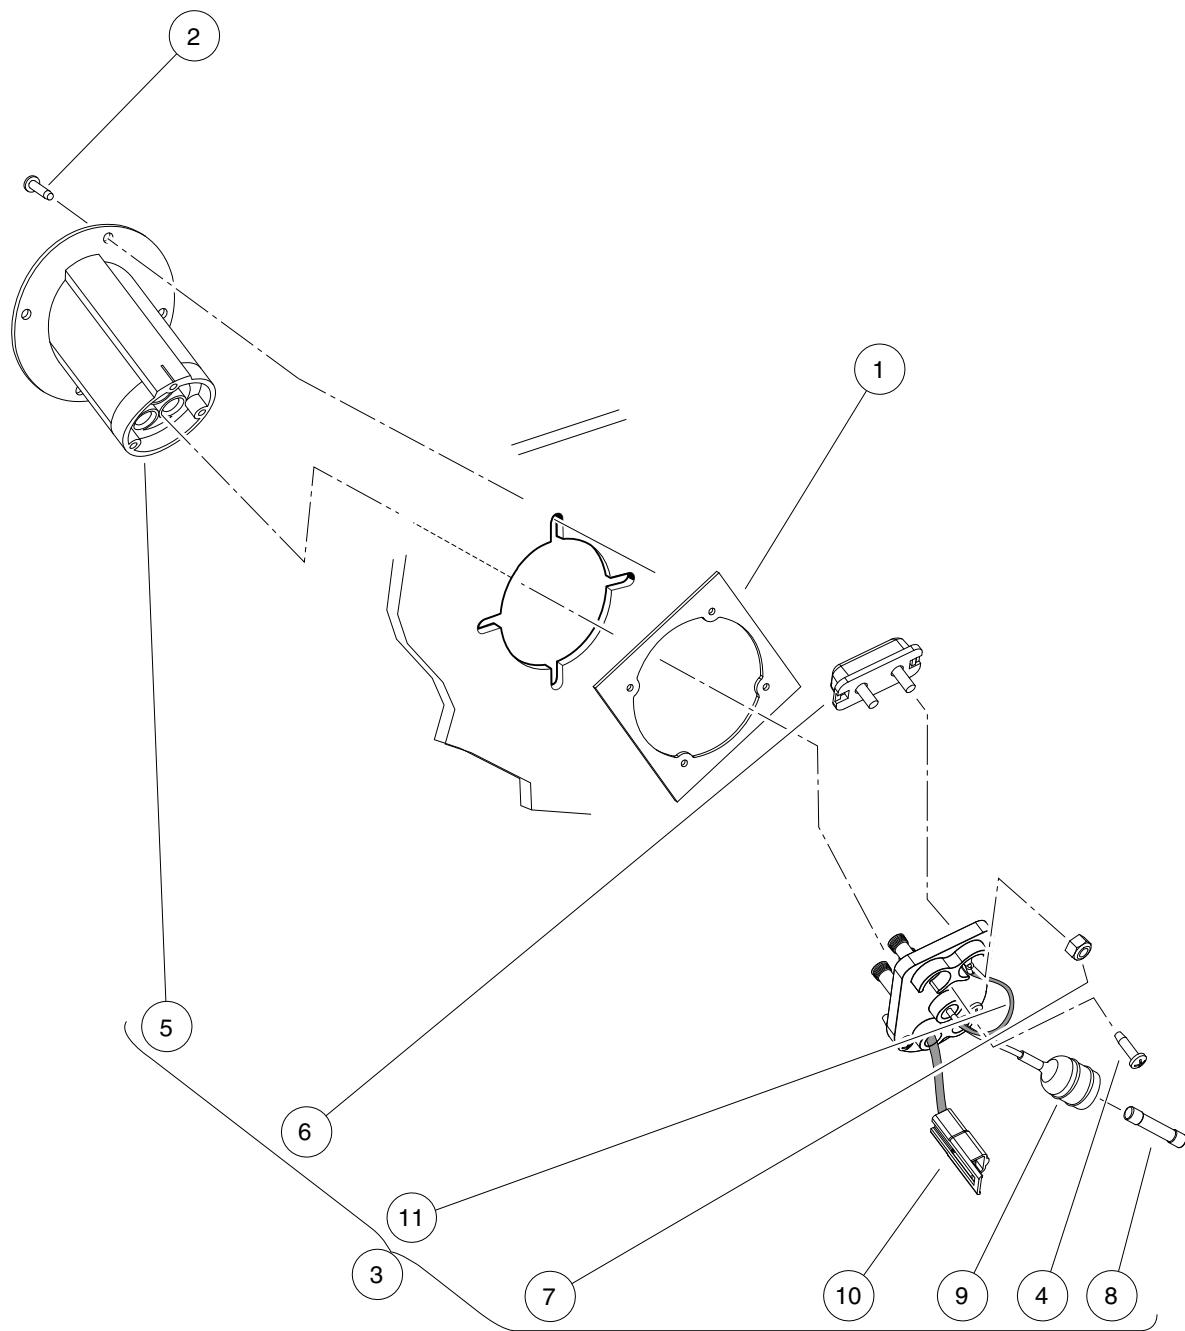
ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		14
1	<u>1015752</u>	Screw, #12-16 X 0.625, Hi-Lo	2	
2	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1	E
3	<u>101936801</u>	Kit, 2-Pin Wedge Lock	1	
4	<u>102101001</u>	Bar, Drive, Cast	1	
5	<u>102101101</u>	MCOR	1	

14**E**

WIRING – ELECTRIC VEHICLE – TO EARLY-2011 MODEL YEAR

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		14
1	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2	
2	<u>1016356</u>	Terminal Block with Insulator	1	E
3	<u>102196901</u>	Dust Cap	1	
4	<u>102572401</u>	Nut, Diagnostic Port, Prec	1	
5	<u>102845401</u>	Wire Harness, Power, IQ Plus (includes items 6 through 10)	1	
6	N/A	Asm, #4 Grn Wire, 37"	1	
7	N/A	Asm, #4 Wht Wire, 36.5"	1	
8	N/A	Asm, #10 Org Wire, 39"	1	
9	N/A	Asm, #10 Blu Wire, 46"	1	
10	<u>102846402</u>	Asm, #4 Red Wire, 33"	1	
11	<u>102863801</u>	Wire Asm, #4 Yellow, 12.5"	1	
12	<u>103218601</u>	Harness, Diagnostic Port	1	
13	103221901	Asm, Wire Harness, Carryall 2, Elec	1	

Note: Wire Harness (item 13) is for use with Onboard Computers equipped with the Packard 56 Series connector.

14**E**

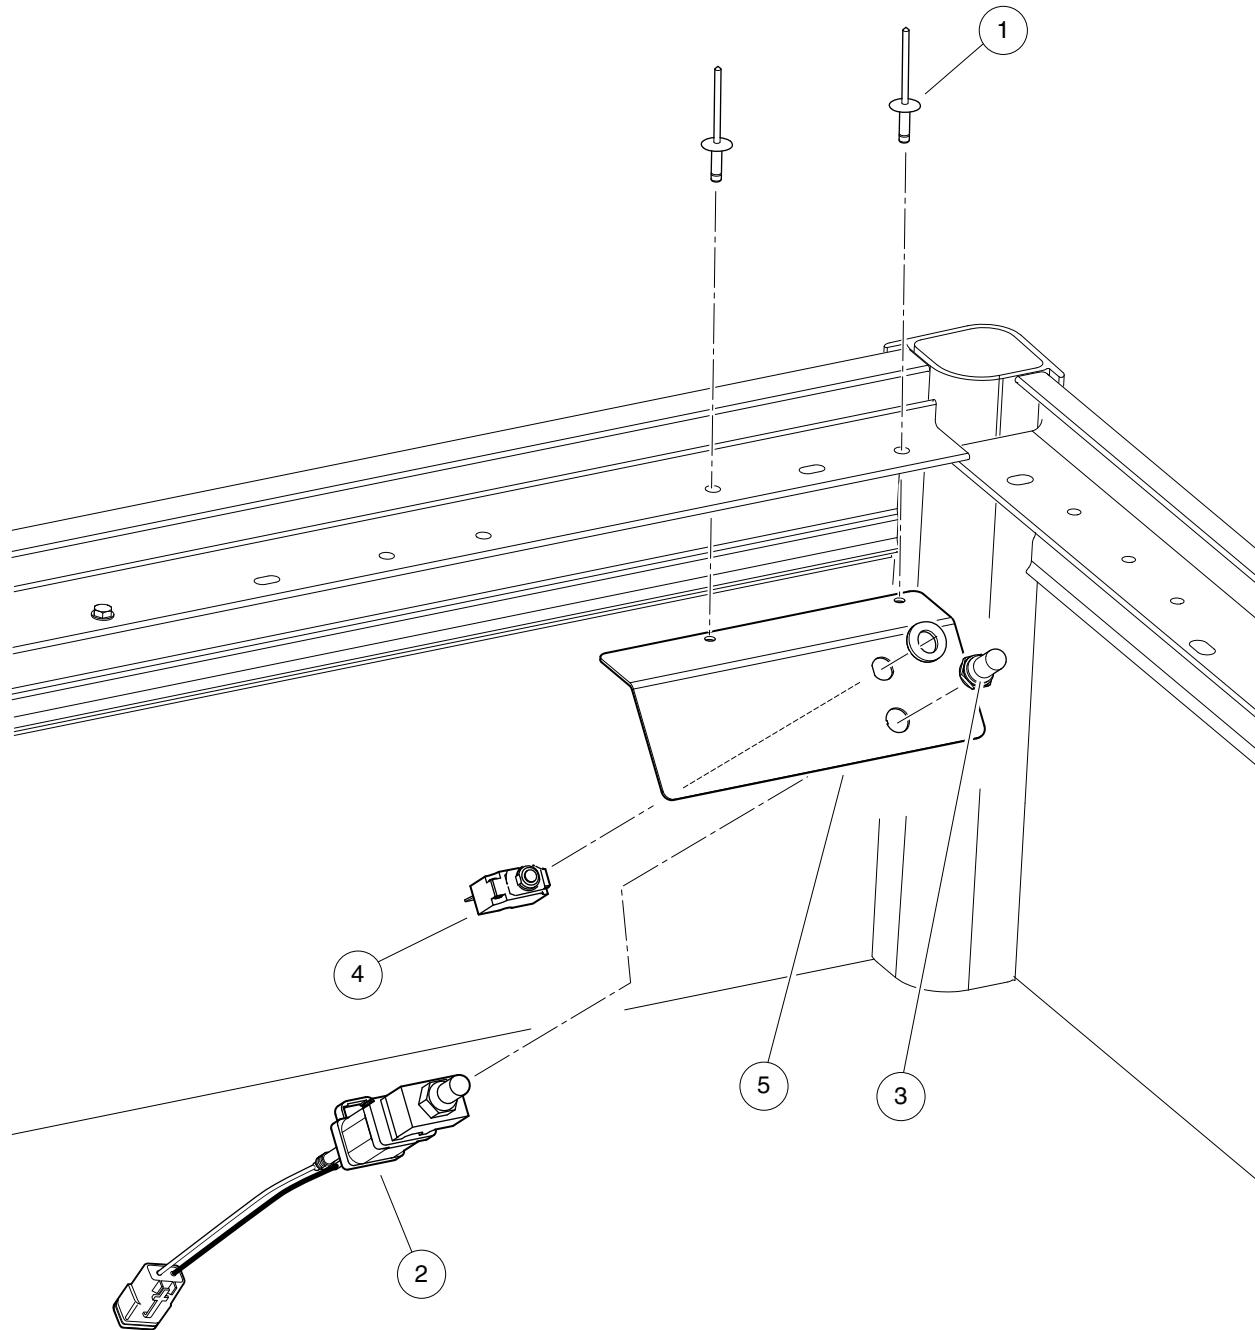
000369-002

BATTERY CHARGER RECEPTACLE – TO EARLY-2011 MODEL YEAR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101801001</u>	Plate, Receptacle Backing	1
2	<u>101832001</u>	Screw, #7-19 X 0.625 Phillips Pan-Head Tap	4
3	<u>102848701</u>	Fuse and Receptacle Assembly (includes items 4 through 11)	1
4	<u>1017705</u>	Screw, #8 X 5/8 Phillips Pan-Head Type AB	3
5	<u>101796501</u>	Receptacle	1
6	<u>101796801</u>	Fuse Assembly (includes item 7)	1
7	<u>1013061</u>	Locknut, #10-32 Nylon Insert	2
8	<u>101894901</u>	Fuse, 3/8-Amp	1
9	N/A	Wire Assembly, Sense Lead, Gray	1
10	N/A	Wire Assembly, #10 Red	1
11	N/A	Wire Assembly, #10 Black	1
		Note: For use with charging system equipped with the Packard 56 series connector.	

14

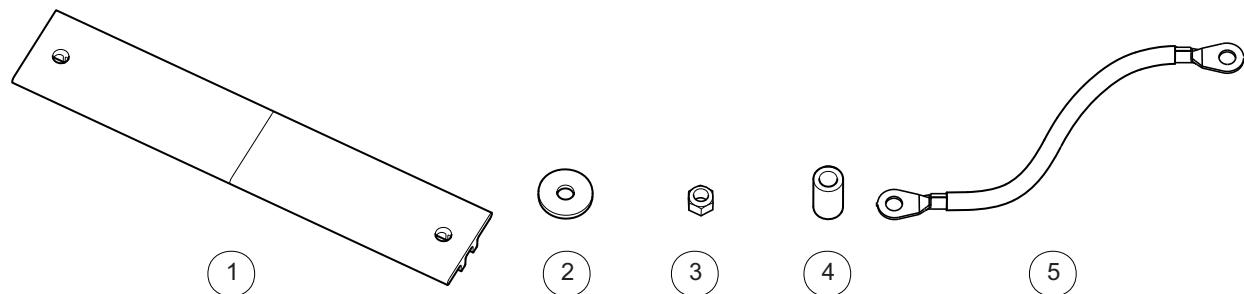
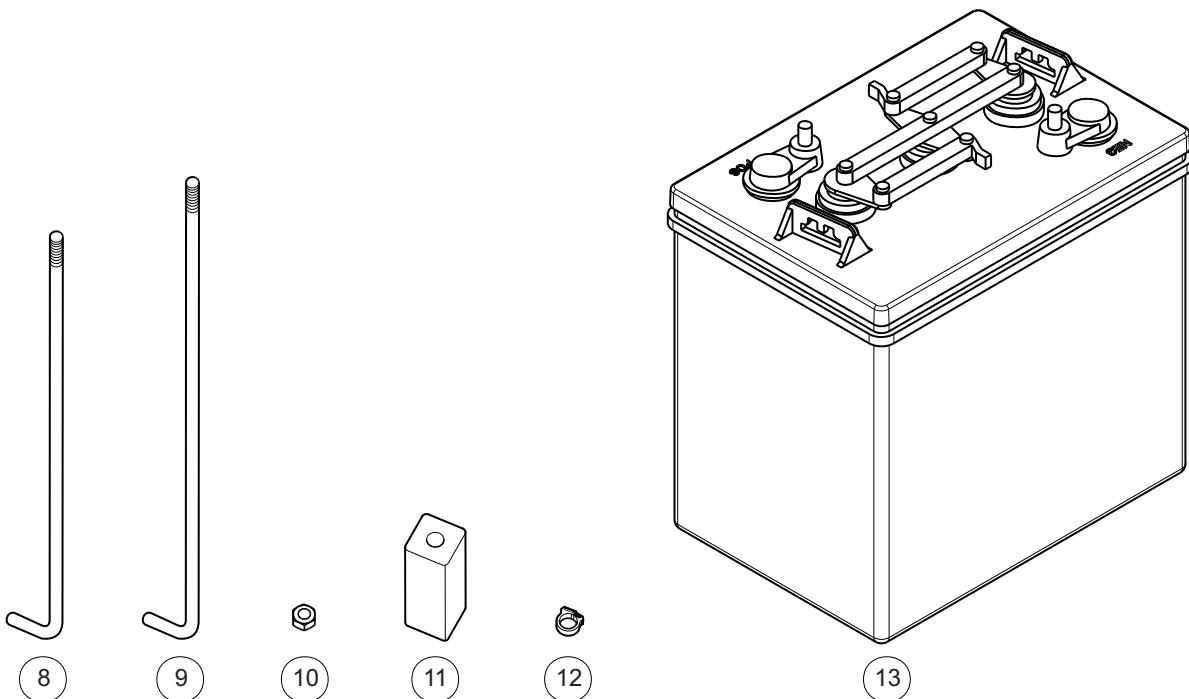
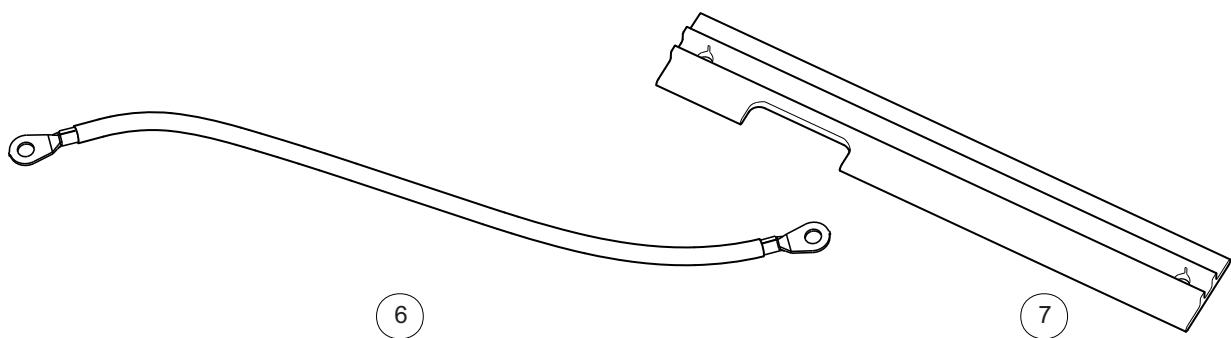
E



002520-003

TOW/RUN SWITCH AND CIRCUIT BREAKER – IQ PLUS

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		14
1	<u>1015392</u>	Rivet, 3/16 Pop	2	
2	<u>101908101</u>	Switch Assembly, Tow/Run	1	E
3	<u>101908401</u>	Boot, Switch	1	
4	<u>102838101</u>	Circuit Breaker, 20 Amp	1	
5	<u>102915701</u>	Plate, Switch, Run Tow, Mode	1	

14**E**

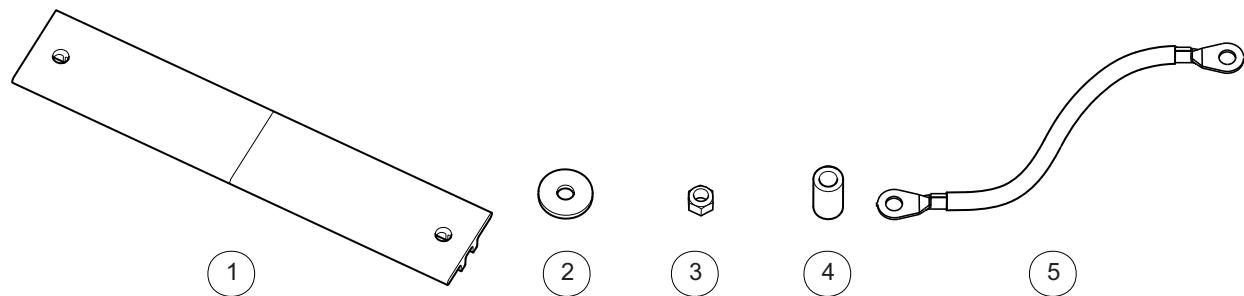
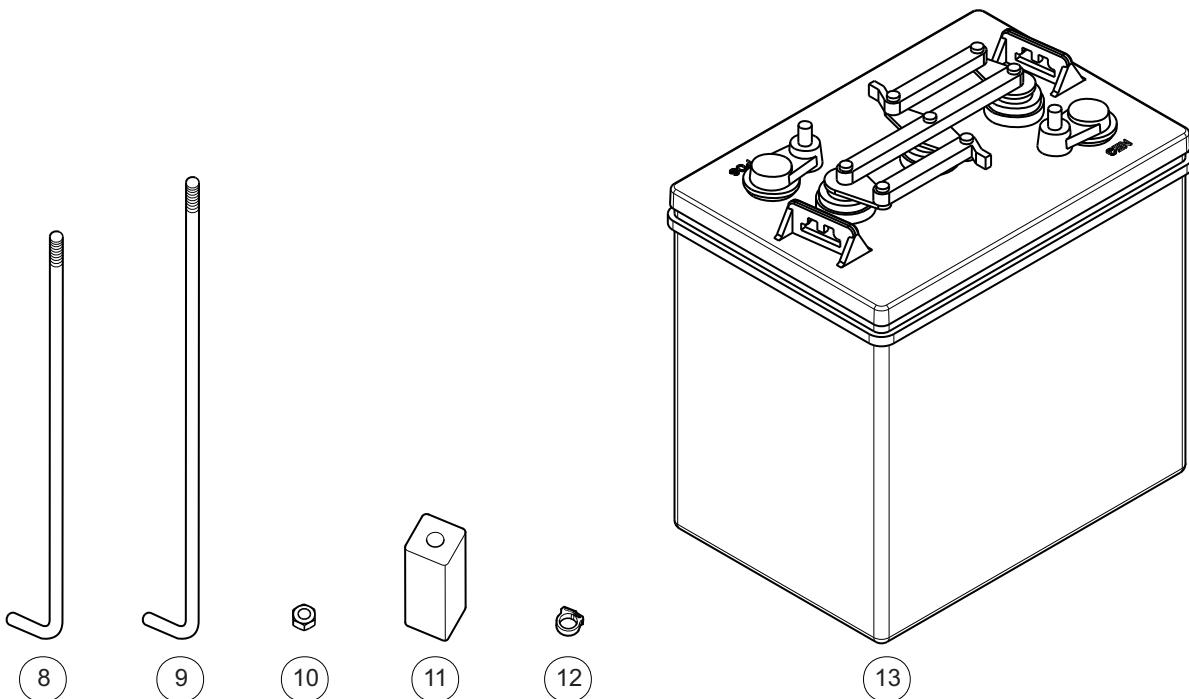
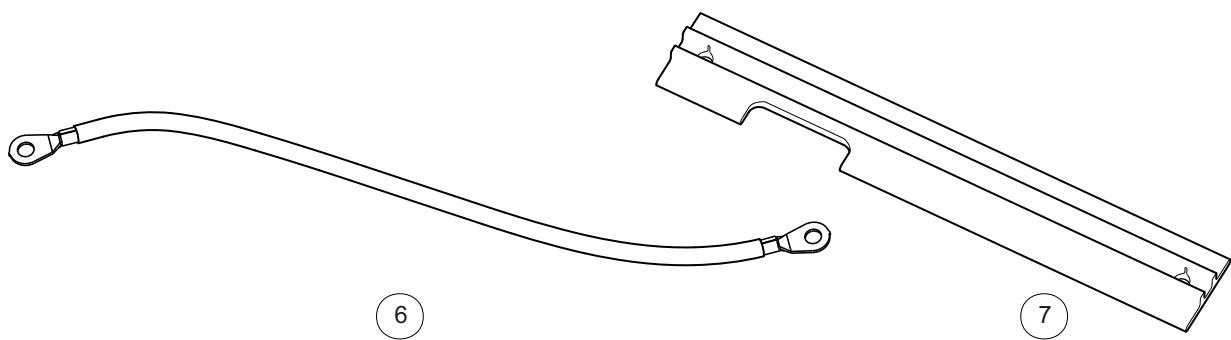
000409-006

BATTERIES, 6-VOLT, STANDARD DUTY, U.S. BATTERY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101090801</u>	Hold-Down, Battery	4
2	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	12
3	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	12
4	<u>1015608</u>	Tube Spacer, Hydraulic Cylinder	2
5	<u>102002901</u>	Wire Assy, #4 Black	4
6	<u>102764001</u>	Wire Asm, #4 Black	3
7	<u>102766201</u>	Hold Down, Outside	2
8	<u>102845201</u>	Rod, Battery Hold Down 9.7"	10
9	<u>102845203</u>	Rod, Battery Hold Down 10.7"	2
10	<u>102873401</u>	5/16-18 Heavy Hex Nut	16
11	<u>102980801</u>	Extr, Plastic, 1 X 1 X 3	2
12	<u>102980901</u>	Clamp, Hose, Nylon, .25	2
13	<u>103695502</u>	Battery, 6v, 2000xc, Dry	8
14	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
15	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	2
		Note: If U.S. Battery is used to replace any other brand of battery, the onboard computer must be changed to match. See Computer, Controller, and Solenoid pages.	

14

E

14**E**

14

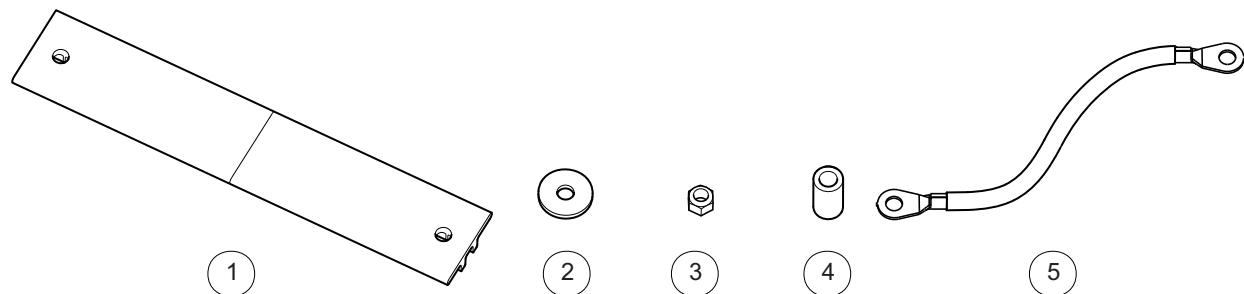
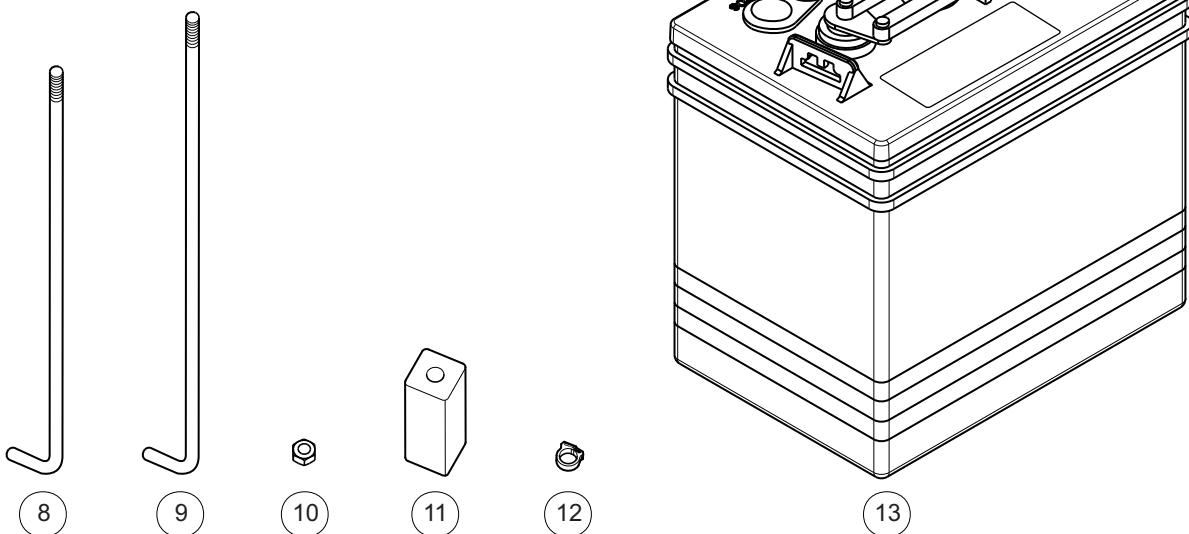
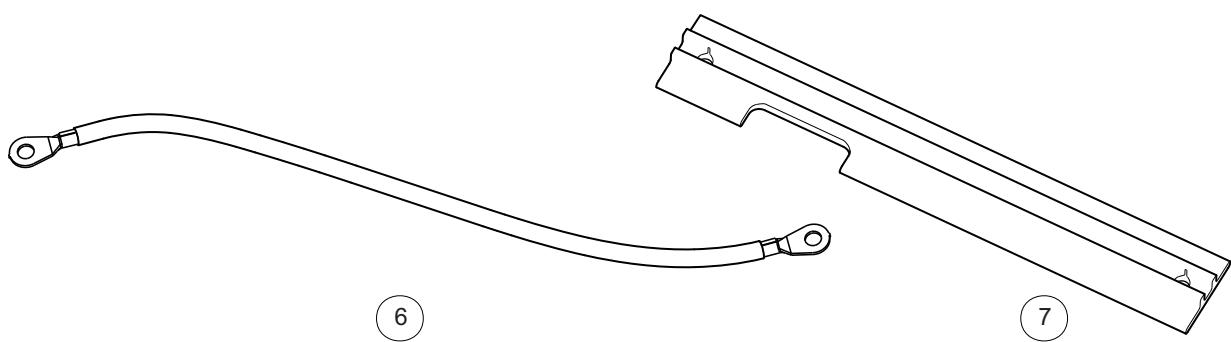


15

000409-006

BATTERIES, 6-VOLT, HEAVY DUTY, U.S. BATTERY

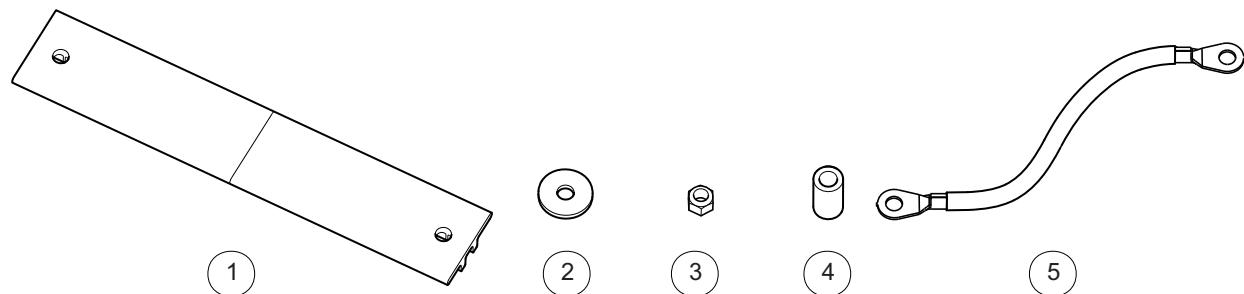
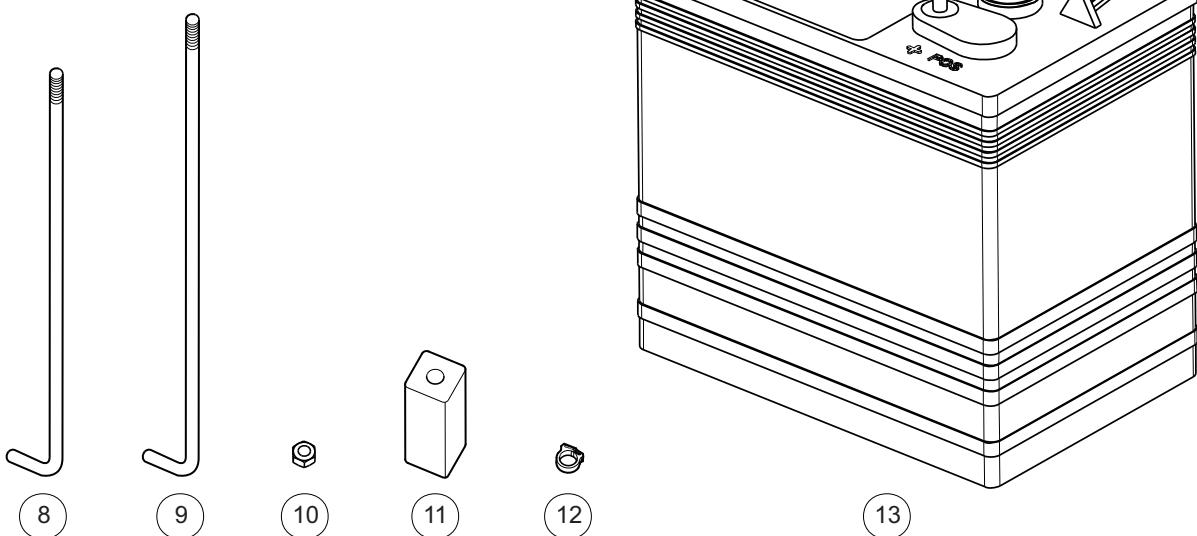
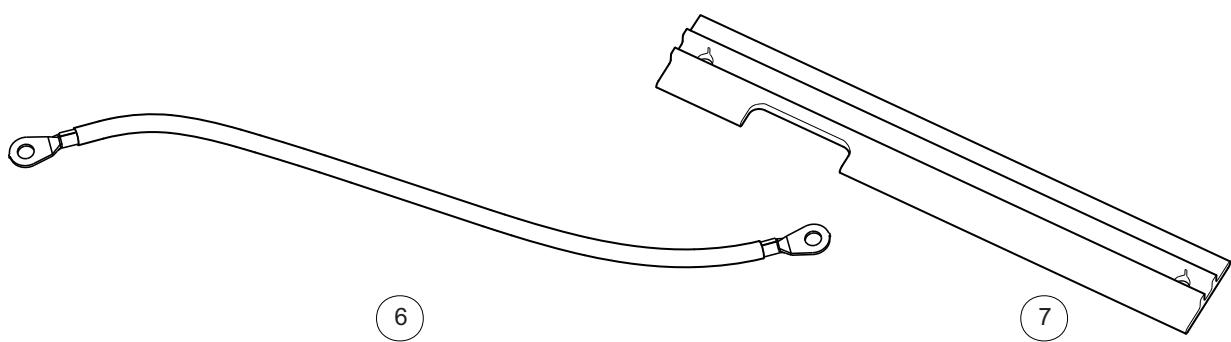
ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		14
1	<u>101090801</u>	Hold-Down, Battery	4	
2	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	12	
3	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	12	
4	<u>1015608</u>	Tube Spacer, Hydraulic Cylinder	2	
5	<u>102002901</u>	Wire Assy, #4 Black	4	
6	<u>102764001</u>	Wire Asm, #4 Black	3	
7	<u>102766201</u>	Hold Down, Outside	2	
8	<u>102845203</u>	Rod, Battery Hold Down 10.7"	10	
9	<u>102845204</u>	Rod, Battery Hold Down 12"	2	
10	<u>102873401</u>	5/16-18 Heavy Hex Nut	16	
11	<u>102980801</u>	Extr, Plastic, 1 X 1 X 3	2	
12	<u>102980901</u>	Clamp, Hose, Nylon, .25	2	
13	<u>103695702</u>	Battery, 6v, 145xc, Dry	8	
14	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	
15	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	2	
		Note: If U.S. Battery is used to replace any other brand of battery, the onboard computer must be changed to match. See Computer, Controller, and Solenoid pages.		E

14**E**

000409-007

BATTERIES, 6-VOLT, STANDARD DUTY, JCI

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		14
1	<u>101090801</u>	Hold-Down, Battery	4	
2	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	12	
3	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	12	
4	<u>1015608</u>	Tube Spacer, Hydraulic Cylinder	2	
5	<u>102002901</u>	Wire Assy, #4 Black	4	
6	<u>102764001</u>	Wire Asm, #4 Black	3	
7	<u>102766201</u>	Hold Down, Outside	2	
8	<u>102845201</u>	Rod, Battery Hold Down 9.7"	10	
9	<u>102845203</u>	Rod, Battery Hold Down 10.7"	2	
10	<u>102873401</u>	5/16-18 Heavy Hex Nut	16	
11	<u>102980801</u>	Extr, Plastic, 1 X 1 X 3	2	
12	<u>102980901</u>	Clamp, Hose, Nylon, .25	2	
13	<u>103793102</u>	Battery, 6v, Gc2, Dry	8	
14	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	
15	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	2	

14**E**

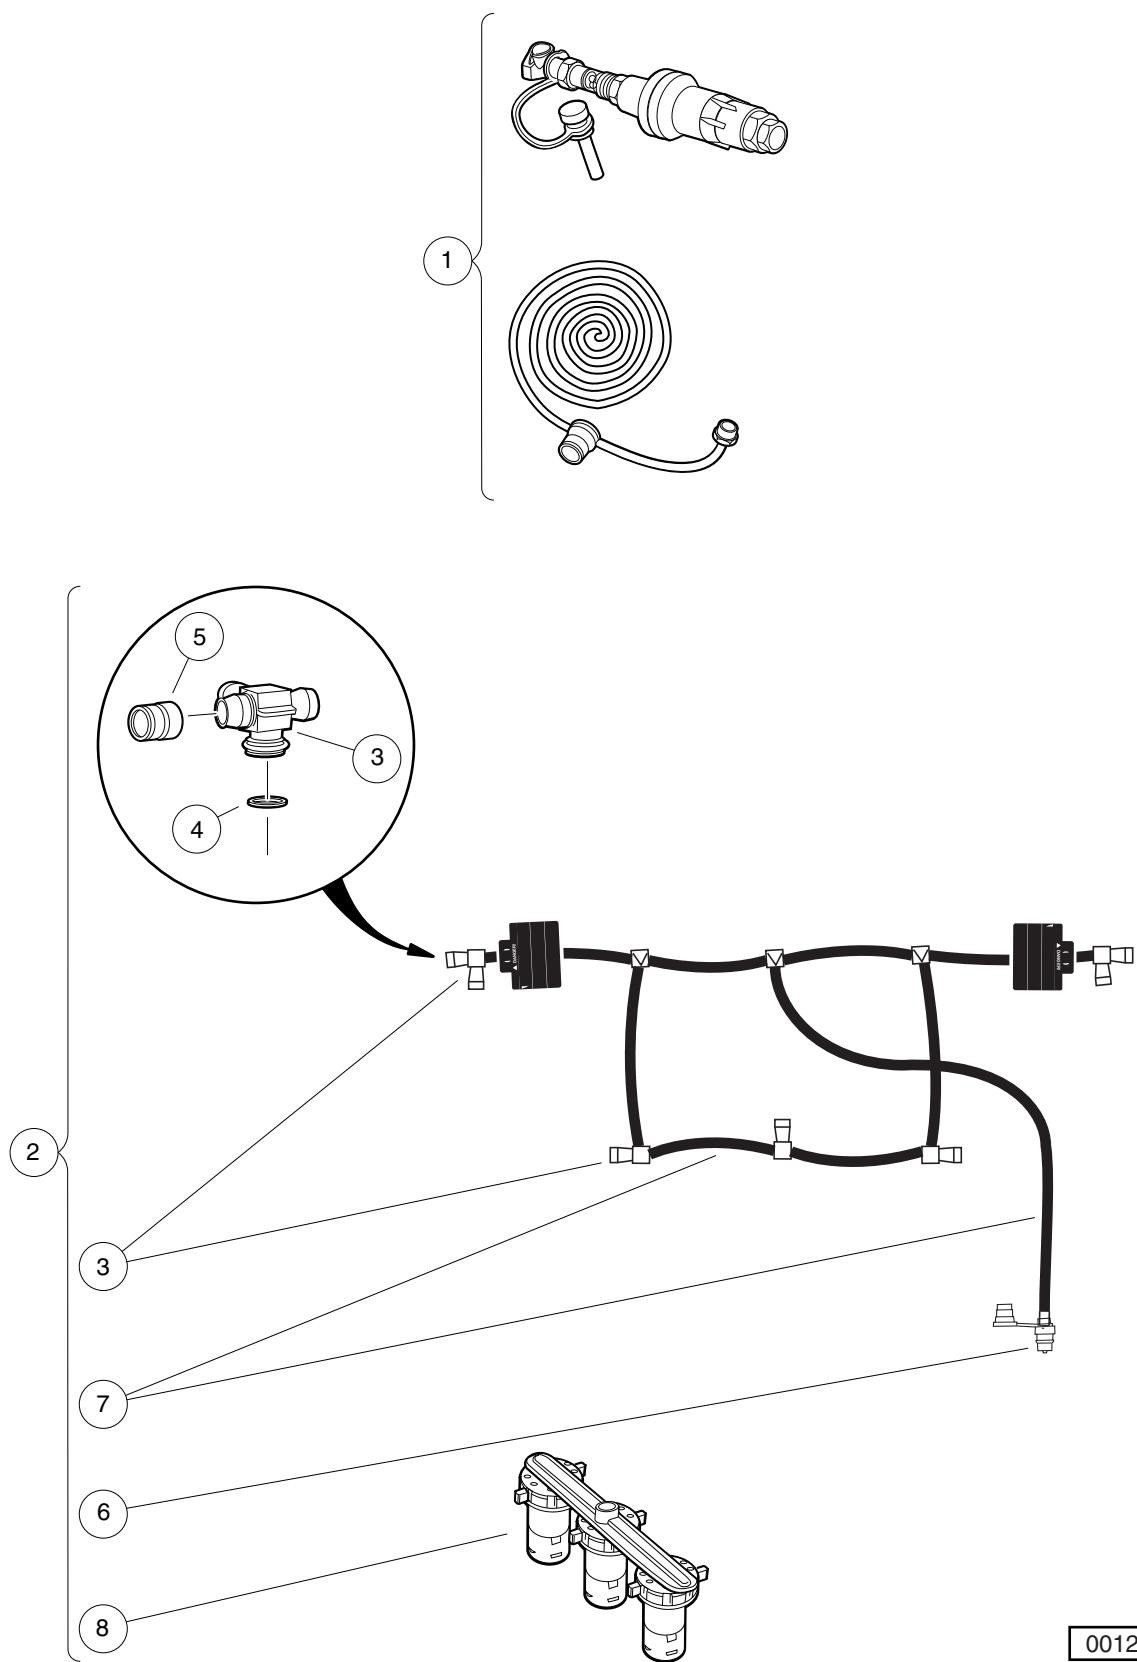
000409-005

BATTERIES, 6-VOLT, HEAVY DUTY, CROWN

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		14
1	<u>101090801</u>	Hold-Down, Battery	4	
2	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	12	
3	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	12	
4	<u>1015608</u>	Tube Spacer, Hydraulic Cylinder	2	
5	<u>102002901</u>	Wire Assy, #4 Black	4	
6	<u>102764001</u>	Wire Asm, #4 Black	3	
7	<u>102766201</u>	Hold Down, Outside	2	
8	<u>102845203</u>	Rod, Battery Hold Down 10.7"	10	
9	<u>102845204</u>	Rod, Battery Hold Down 12"	2	
10	<u>102873401</u>	5/16-18 Heavy Hex Nut	16	
11	<u>102980801</u>	Extr, Plastic, 1 X 1 X 3	2	
12	<u>102980901</u>	Clamp, Hose, Nylon, .25	2	
13	<u>103720402</u>	Battery, 6v, Cr245, Moist	8	
14	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	
15	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	2	

14

E



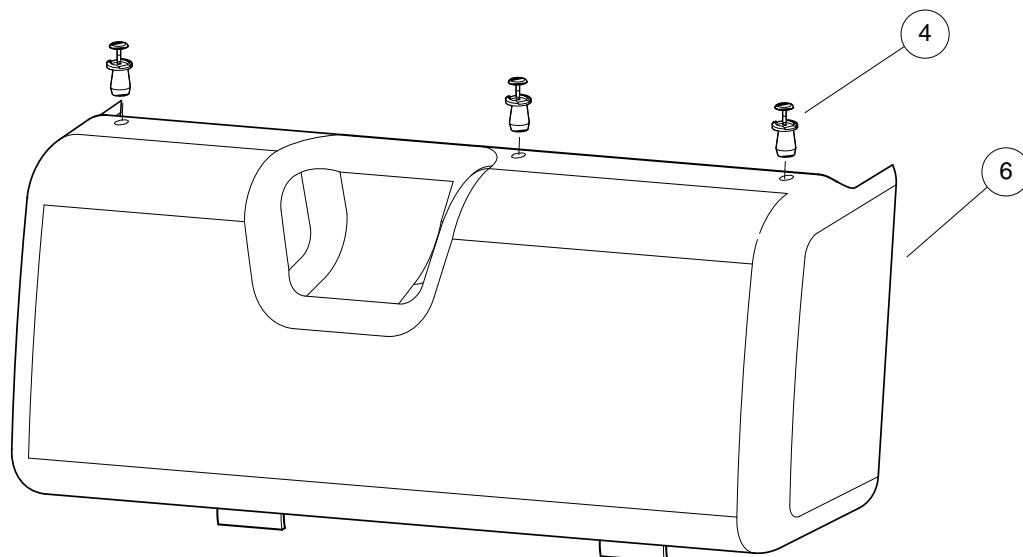
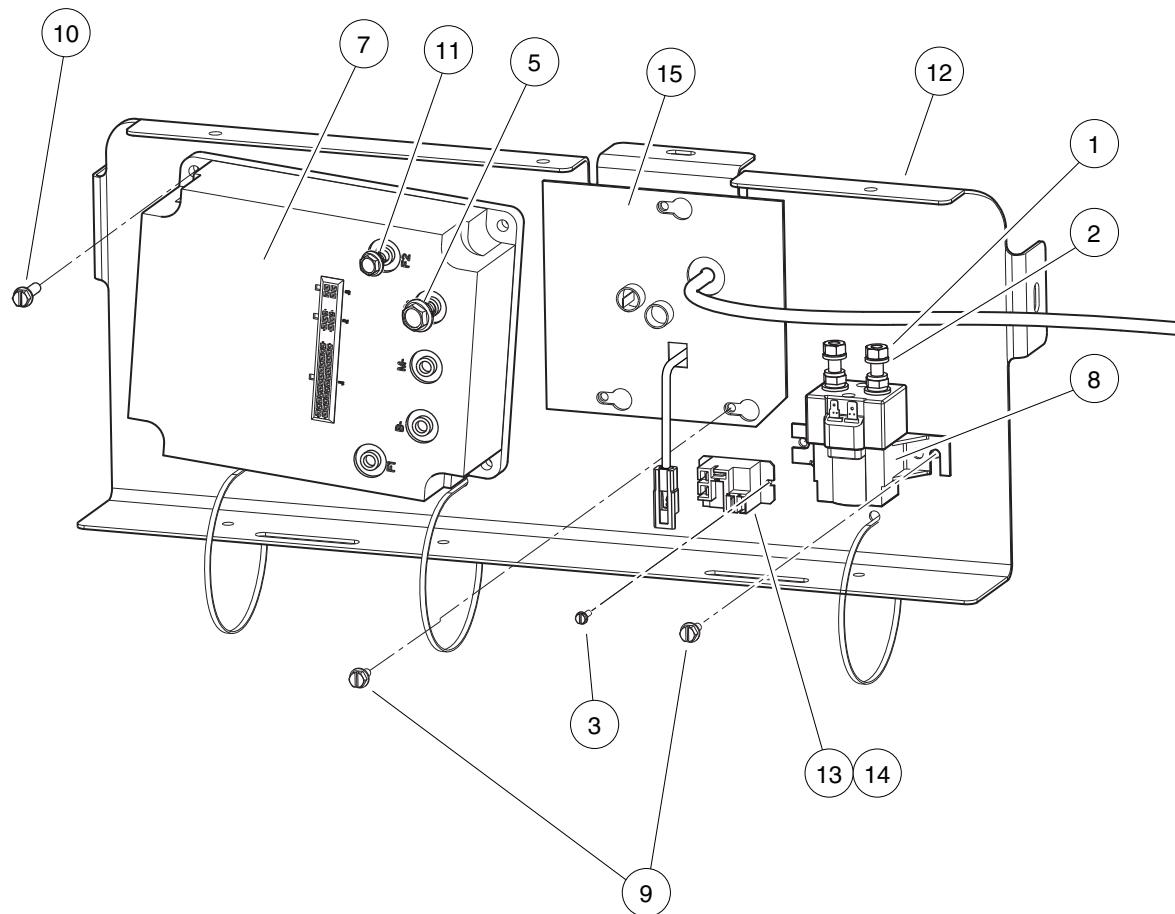
001226-001

SINGLE POINT WATERING SYSTEM, 6V

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102958001</u>	Kit Regulated Hose Sply Spws	1
2	<u>103510801</u>	Kit, Spws, 8x6v, Opt 2 (includes items 3 through 8)	1
3	<u>103226201</u>	Fitting Spws Swivel T	8
4	<u>103226301</u>	O-ring Spws Swivel T	8
5	<u>103226401</u>	Cap Spws Swivel T Red	7
6	<u>103226601</u>	Coupler Male Spws Supply	1
7	<u>103226701</u>	Tubing Spws	A/R
8	<u>103510501</u>	Manifold, Lpr, 3 Vlve, Spw	8
		Note: For 6-Volt batteries only.	

14

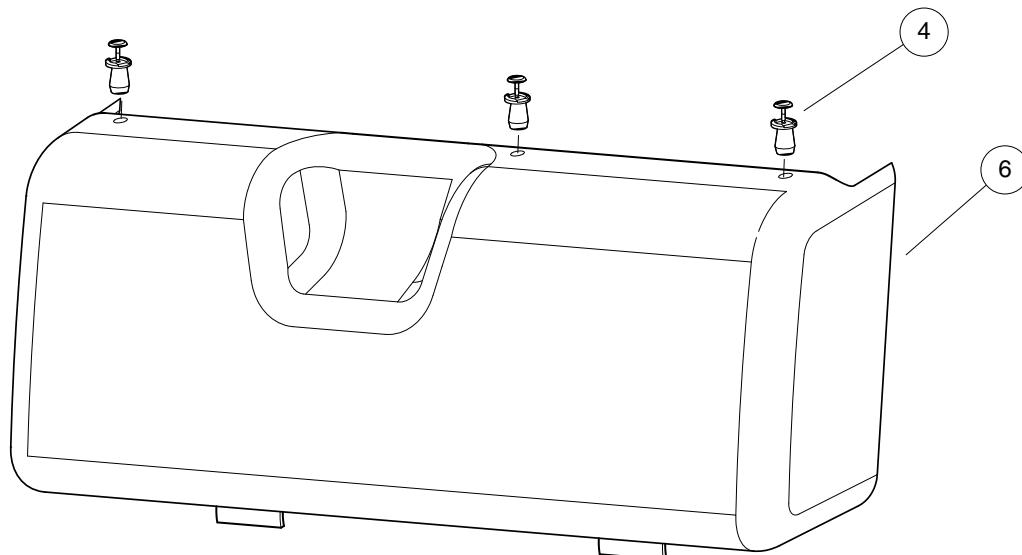
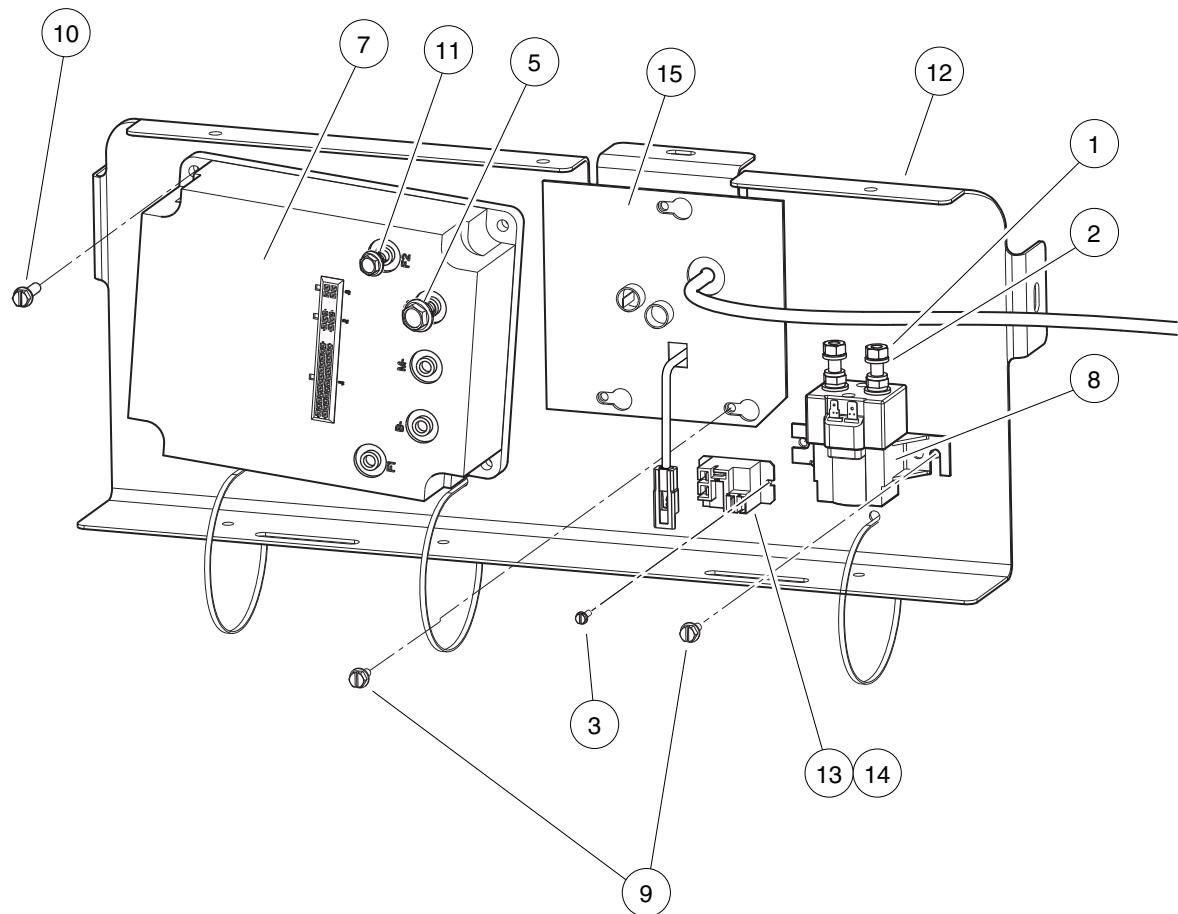
E

14**E**

000597-003

COMPUTER, CONTROLLER, AND SOLENOID – FOR U.S. BATTERY ONLY – TO EARLY-2011 MODEL YEAR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012528</u>	Nut, M8-1.25 Hex	2
2	<u>1013734</u>	Lockwasher, 8mm Split	2
3	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	2
4	<u>1016967</u>	Blind Rivet, Push Type	3
5	<u>102240501</u>	Bolt, Controller, Terminal	3
6	<u>102772401</u>	Cover, Component, Elec, Rear	1
7	<u>102774501</u>	Controller, 500 Amp	1
8	<u>102774701</u>	Solenoid, 48v	1
9	<u>102817101</u>	Screw, 1/4-20 X .50 Hex Wsh Hd	5
10	<u>102817201</u>	Screw, 1/4-20 X .88 Hex Wsh Hd	4
11	<u>102859501</u>	Screw, M6 X 1 X 20 Ser Hex Flg	2
12	<u>102931101</u>	Plate, Component, Rear	1
13	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes item 14)	1
14	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
15	<u>103697105</u>	Obc, Iqplus, A2, 38"	1
		Note: If U.S. Battery is used to replace any other brand of battery, the onboard computer must be changed to match. See Batteries pages. NOTE 2: Onboard Computer (item 15) is equipped with the Packard 56 Series connector.	

14**E**

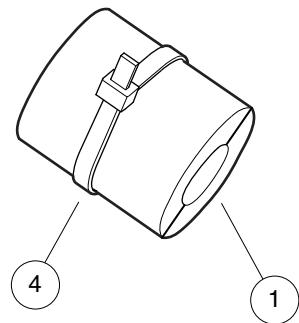
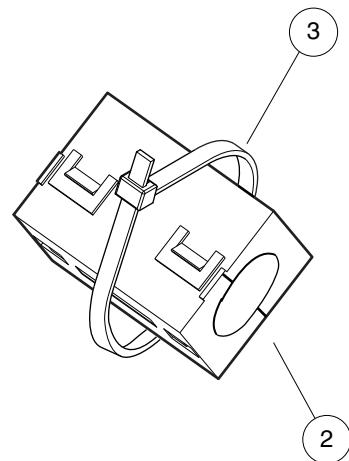
000597-003

COMPUTER, CONTROLLER, AND SOLENOID – FOR JCI & CROWN BATTERIES – TO EARLY-2011 MODEL YEAR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012528</u>	Nut, M8-1.25 Hex	2
2	<u>1013734</u>	Lockwasher, 8mm Split	2
3	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	2
4	<u>1016967</u>	Blind Rivet, Push Type	3
5	<u>102240501</u>	Bolt, Controller, Terminal	3
6	<u>102772401</u>	Cover, Component, Elec, Rear	1
7	<u>102774501</u>	Controller, 500 Amp	1
8	<u>102774701</u>	Solenoid, 48v	1
9	<u>102817101</u>	Screw, 1/4-20 X .50 Hex Wsh Hd	5
10	<u>102817201</u>	Screw, 1/4-20 X .88 Hex Wsh Hd	4
11	<u>102859501</u>	Screw, M6 X 1 X 20 Ser Hex Flg	2
12	<u>102931101</u>	Plate, Component, Rear	1
13	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes item 14)	1
14	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
15	<u>103697102</u>	Obc, Iqplus, A1, 38"	1
		Note: If JCI or Crown is used to replace U.S. Battery brand of battery, the onboard computer must be changed to match. See Batteries pages. NOTE 2: Onboard Computer (item 15) is equipped with the Packard 56 Series connector.	

14

E



001055-001

FERRITE BEADS, CE

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		14
1	<u>103449501</u>	Bead, Ferrite, Tdk	A/R	E
2	<u>103449601</u>	Bead, Ferrite, Fair-rite	A/R	
3	<u>8639</u>	Tie Wrap, 11" Nylon	A/R	
4	<u>8990</u>	Tie Wrap, 8" Nylon	A/R	

14

E

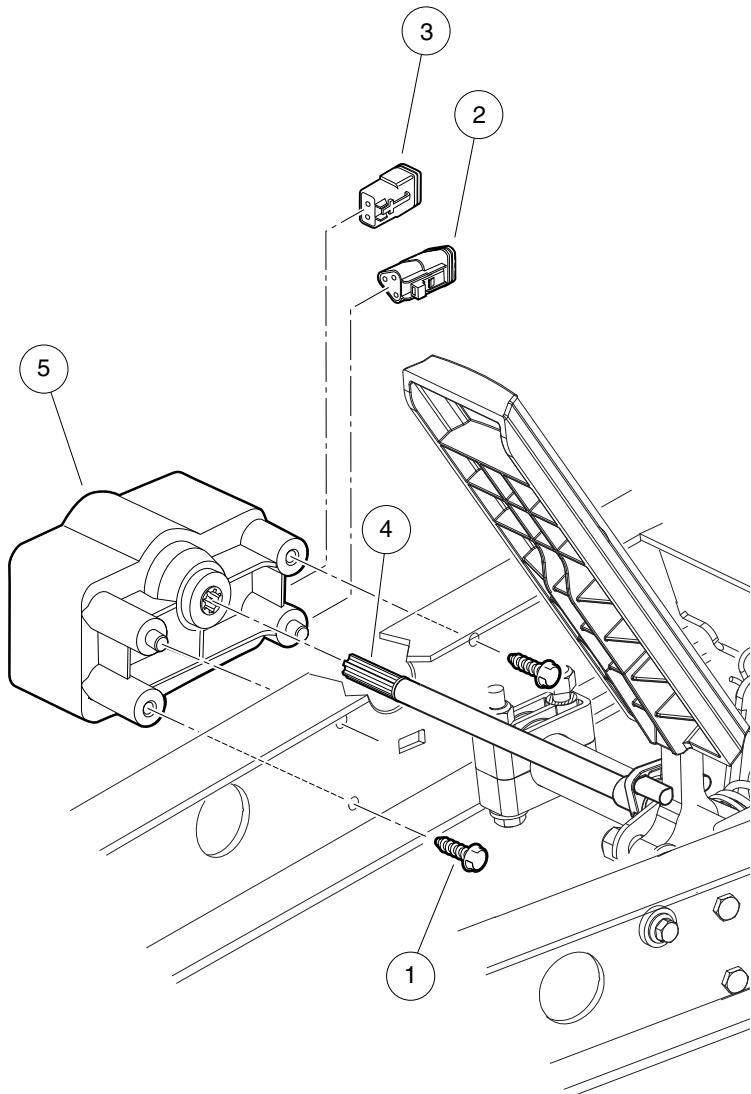
ELECTRICAL SYSTEM, ELECTRIC VEHICLES – FROM EARLY-2011

15

E

15

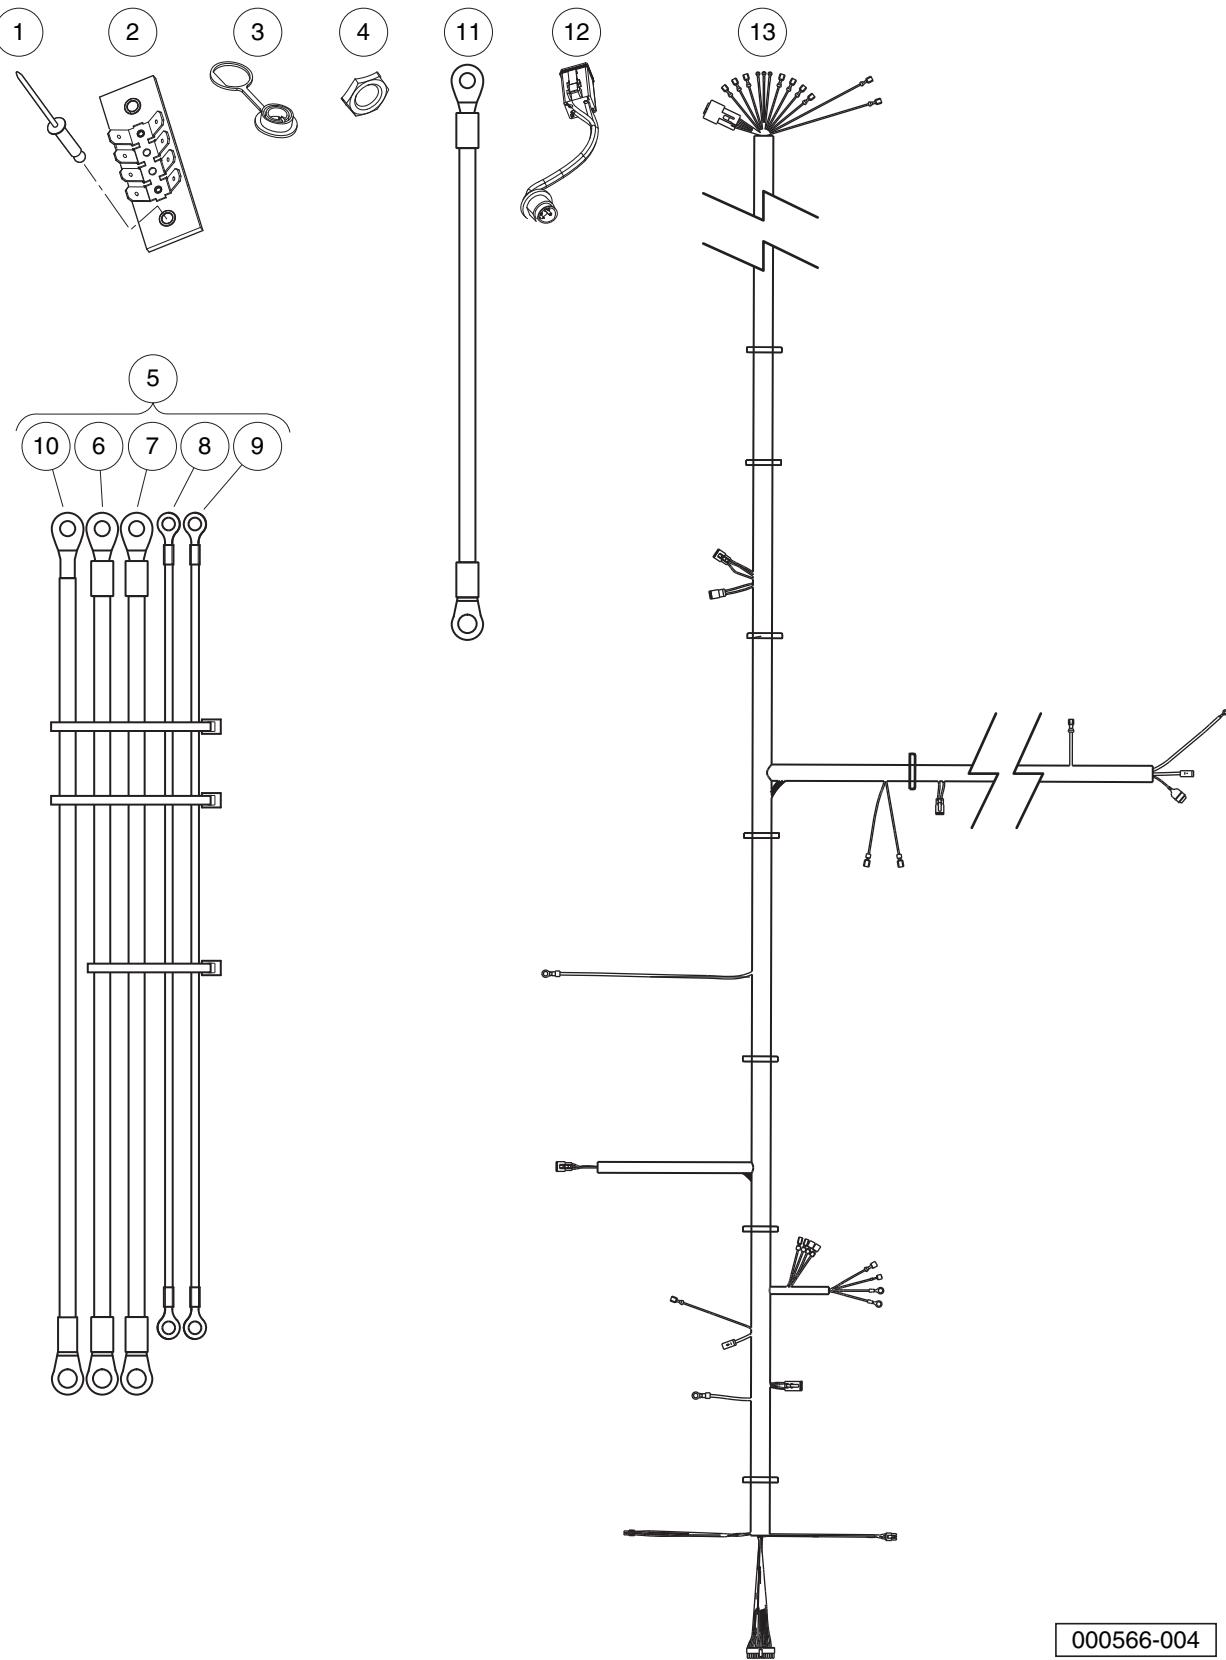
E



001070-001

MOTOR CONTROLLER OUTPUT REGULATOR (MCOR)

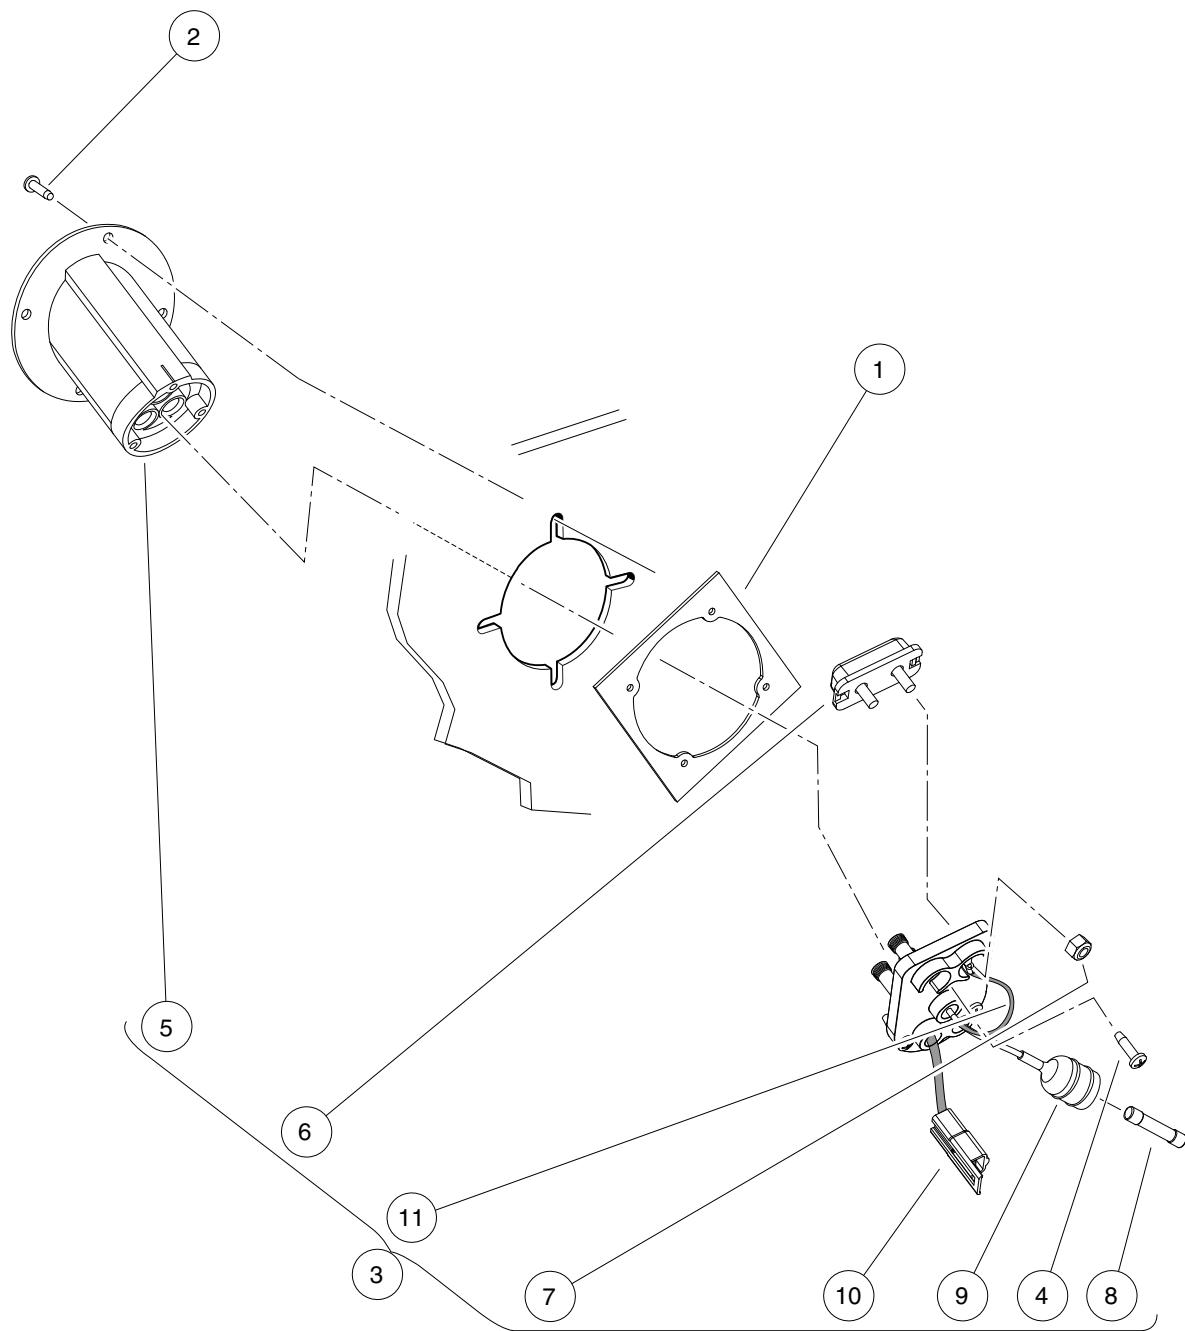
ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		15
1	<u>1015752</u>	Screw, #12-16 X 0.625, Hi-Lo	2	
2	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1	E
3	<u>101936801</u>	Kit, 2-Pin Wedge Lock	1	
4	<u>102101001</u>	Bar, Drive, Cast	1	
5	<u>102101101</u>	MCOR	1	

15**E**

WIRING – ELECTRIC VEHICLE – FROM EARLY-2011 MODEL YEAR

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		15
1	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2	
2	<u>1016356</u>	Terminal Block with Insulator	1	E
3	<u>102196901</u>	Dust Cap	1	
4	<u>102572401</u>	Nut, Diagnostic Port, Prec	1	
5	<u>102845401</u>	Wire Harness, Power, IQ Plus (includes items 6 through 10)	1	
6	N/A	Asm, #4 Grn Wire, 37"	1	
7	N/A	Asm, #4 Wht Wire, 36.5"	1	
8	N/A	Asm, #10 Org Wire, 39"	1	
9	N/A	Asm, #10 Blu Wire, 46"	1	
10	<u>102846402</u>	Asm, #4 Red Wire, 33"	1	
11	<u>102863801</u>	Wire Asm, #4 Yellow, 12.5"	1	
12	<u>103218601</u>	Harness, Diagnostic Port	1	
13	103771501	Asm, Wire Harness, Carryall 2, Elec, Packard 480	1	

Note: Wire Harness (item 13) is for use with Onboard Computers equipped with the Packard 480 Series connector.

15**E**

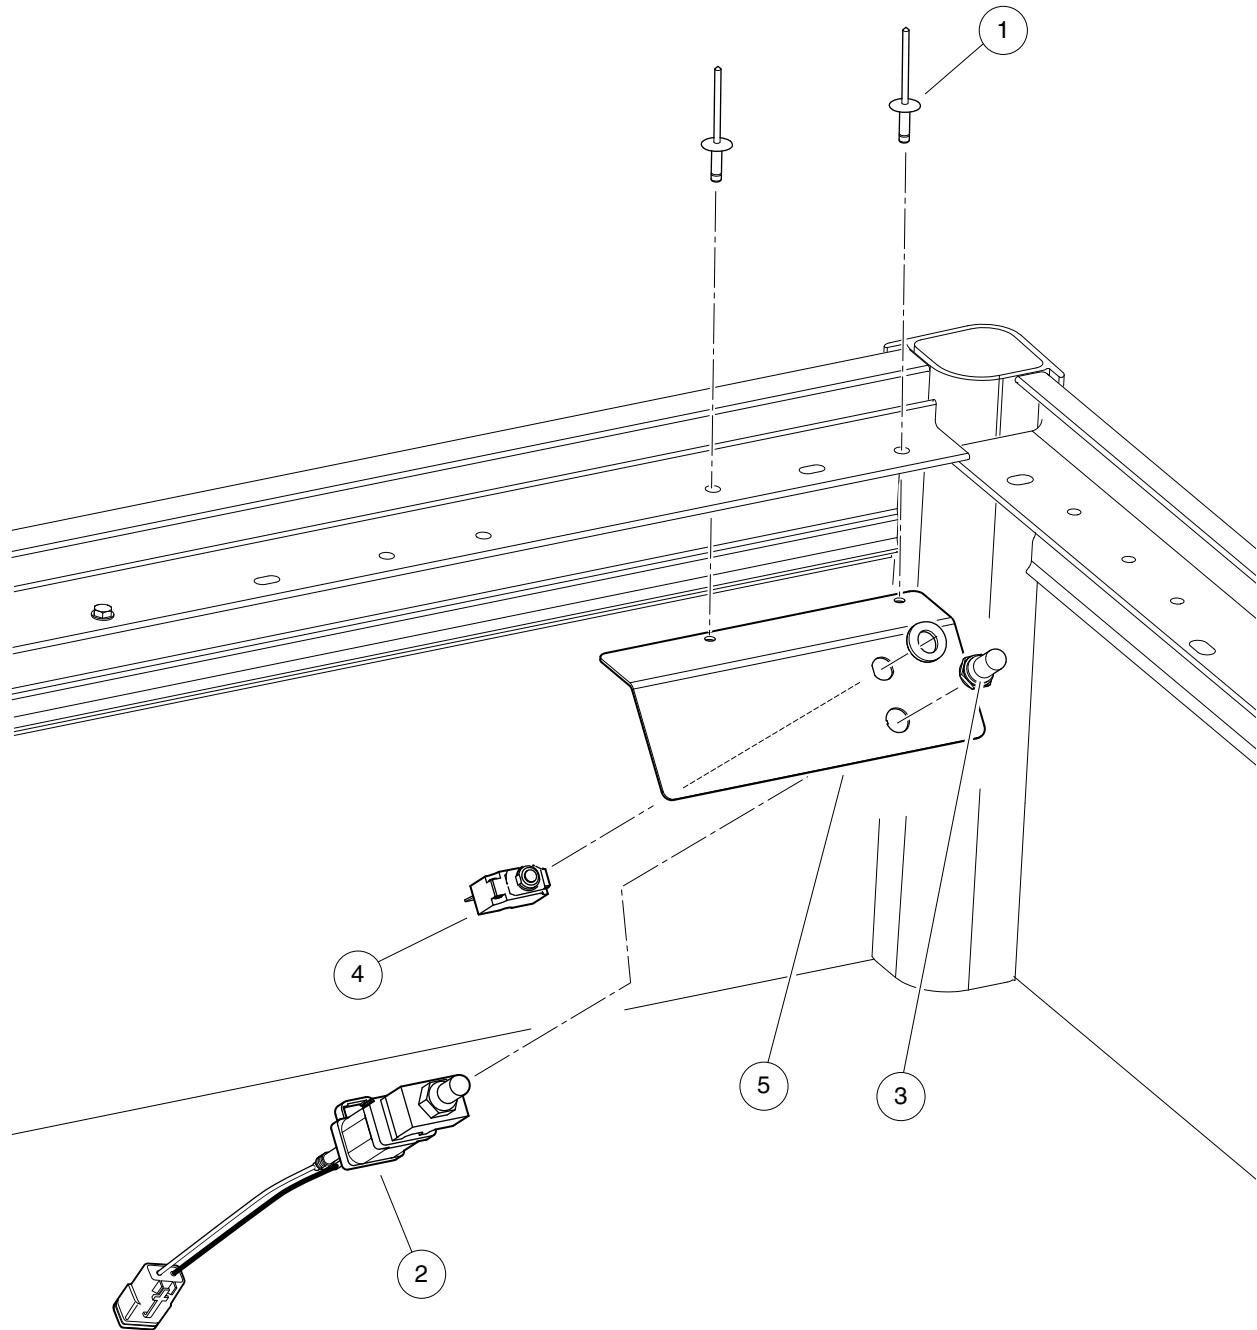
000369-002

BATTERY CHARGER RECEPTACLE – FROM EARLY-2011 MODEL YEAR

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		15
1	<u>101801001</u>	Plate, Receptacle Backing	1	
2	<u>101832001</u>	Screw, #7-19 X 0.625 Phillips Pan-Head Tap	4	E
3	<u>103771901</u>	Asm, Fuse & Receptacle, 480 (includes items 4 through 11)	1	
4	<u>1017705</u>	Screw, #8 X 5/8 Phillips Pan-Head Type AB	3	
5	<u>101796501</u>	Receptacle	1	
6	<u>101796801</u>	Fuse Assembly (includes item 7)	1	
7	<u>1013061</u>	Locknut, #10-32 Nylon Insert	2	
8	<u>101894901</u>	Fuse, 3/8-Amp	1	
9	N/A	Wire Assembly, Sense Lead, Gray	1	
10	N/A	Wire Assembly, #10 Red	1	
11	N/A	Wire Assembly, #10 Black	1	
		Note: For use with charging system equipped with the Packard 480 series connector.		

15

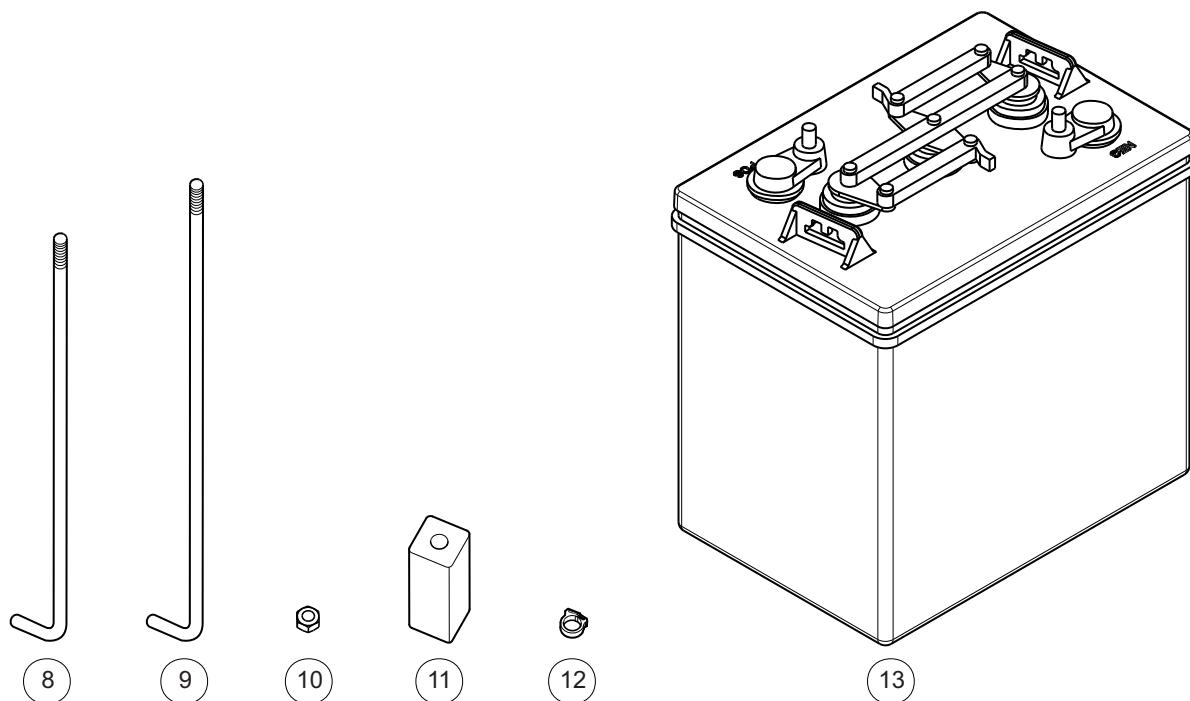
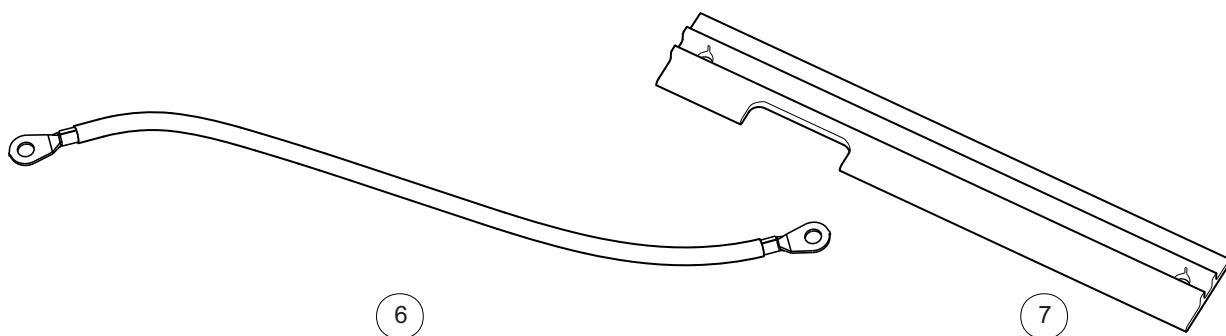
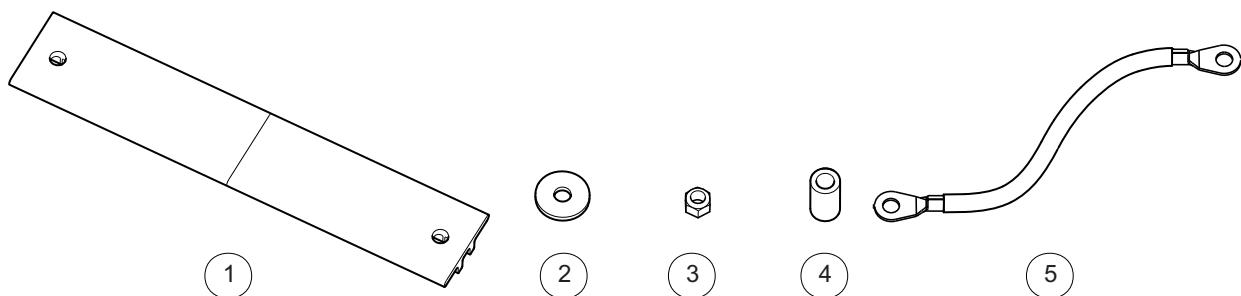
E



002520-003

TOW/RUN SWITCH AND CIRCUIT BREAKER – IQ PLUS

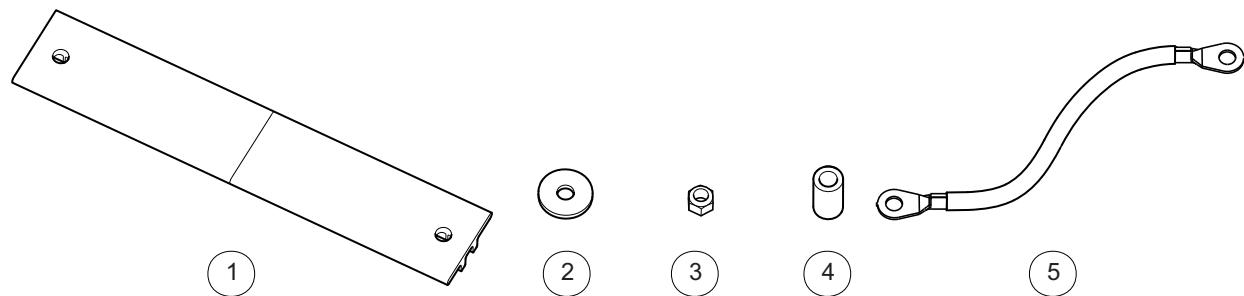
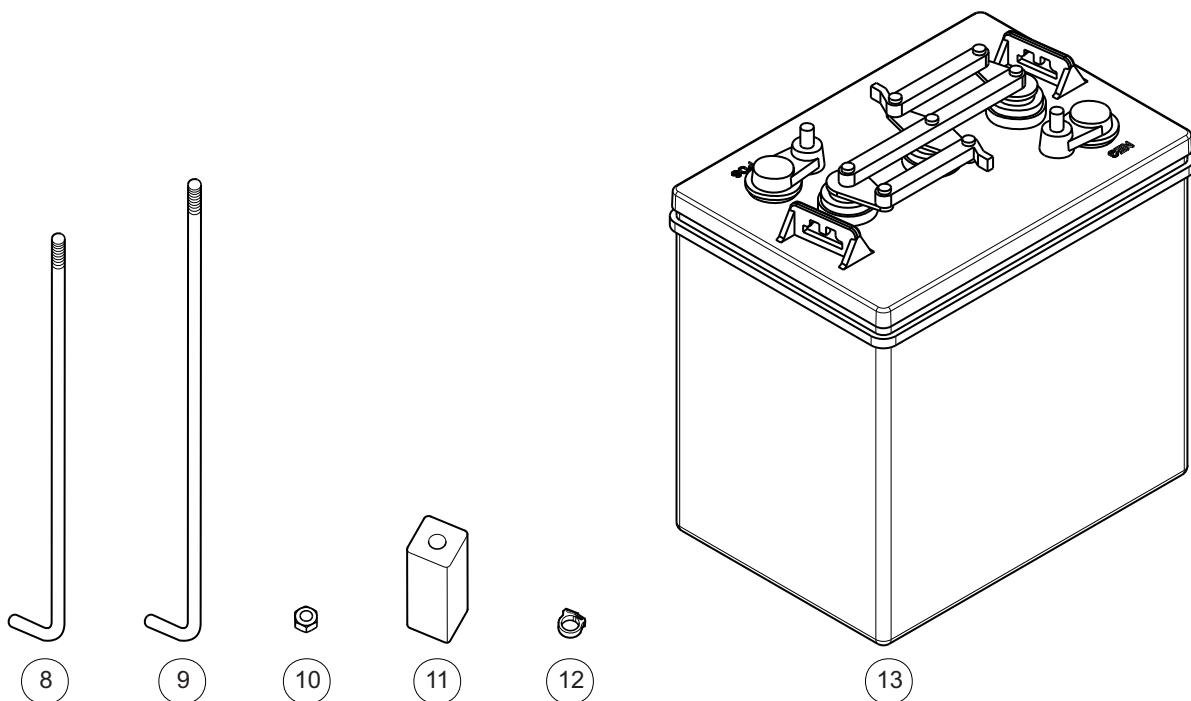
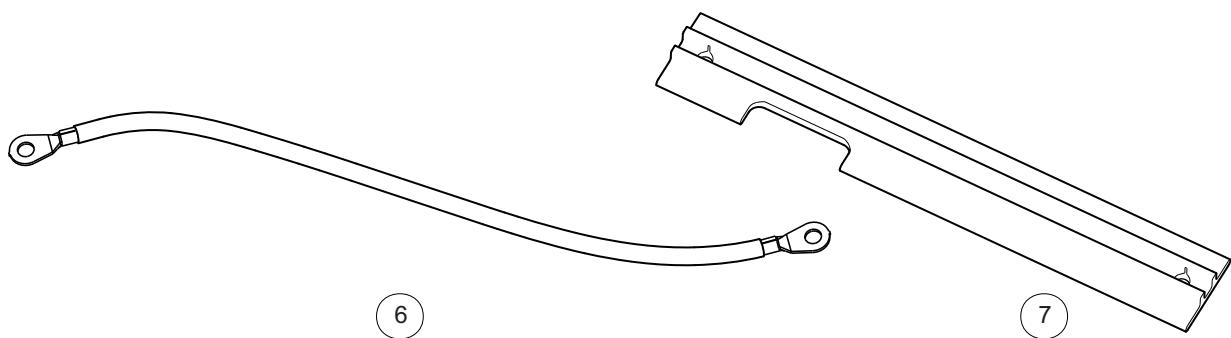
ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		15
1	<u>1015392</u>	Rivet, 3/16 Pop	2	
2	<u>101908101</u>	Switch Assembly, Tow/Run	1	E
3	<u>101908401</u>	Boot, Switch	1	
4	<u>102838101</u>	Circuit Breaker, 20 Amp	1	
5	<u>102915701</u>	Plate, Switch, Run Tow, Mode	1	

15**E**

000409-006

BATTERIES, 6-VOLT, STANDARD DUTY, U.S. BATTERY

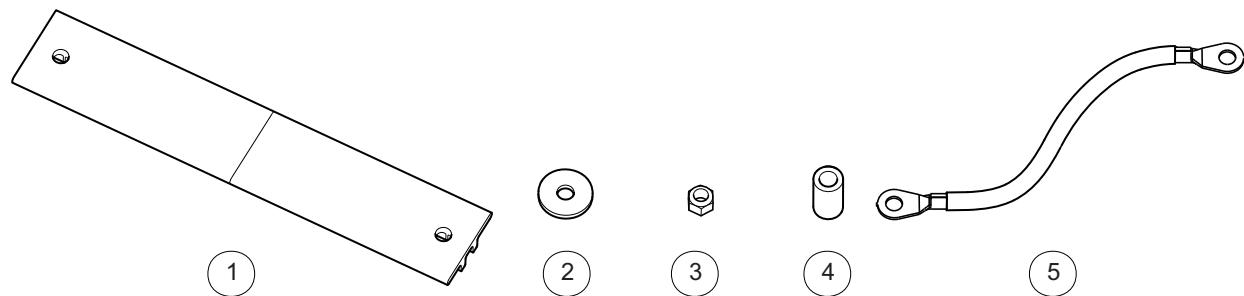
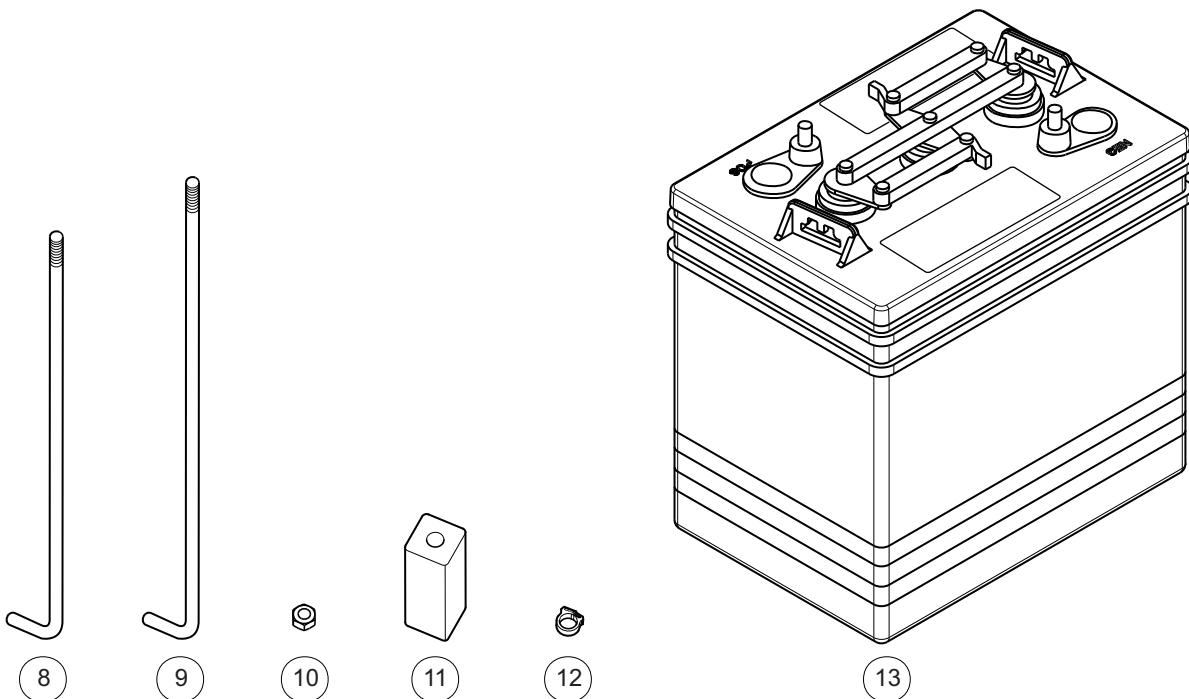
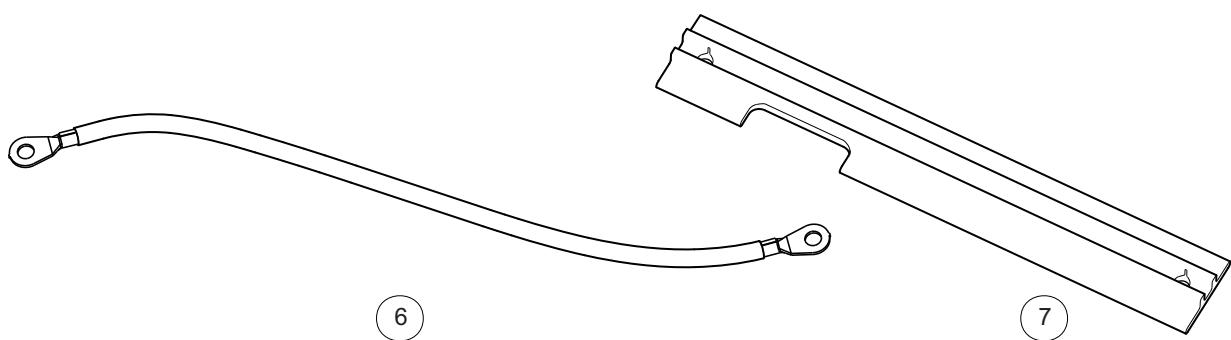
ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		15
1	<u>101090801</u>	Hold-Down, Battery	4	
2	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	12	
3	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	12	
4	<u>1015608</u>	Tube Spacer, Hydraulic Cylinder	2	
5	<u>102002901</u>	Wire Assy, #4 Black	4	
6	<u>102764001</u>	Wire Asm, #4 Black	3	
7	<u>102766201</u>	Hold Down, Outside	2	
8	<u>102845201</u>	Rod, Battery Hold Down 9.7"	10	
9	<u>102845203</u>	Rod, Battery Hold Down 10.7"	2	
10	<u>102873401</u>	5/16-18 Heavy Hex Nut	16	
11	<u>102980801</u>	Extr, Plastic, 1 X 1 X 3	2	
12	<u>102980901</u>	Clamp, Hose, Nylon, .25	2	
13	<u>103695502</u>	Battery, 6v, 2000xc, Dry	8	
14	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	
15	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	2	
		Note: If U.S. Battery is used to replace any other brand of battery, the onboard computer must be changed to match. See Computer, Controller, and Solenoid pages.		E

15**E**

000409-006

BATTERIES, 6-VOLT, HEAVY DUTY, U.S. BATTERY

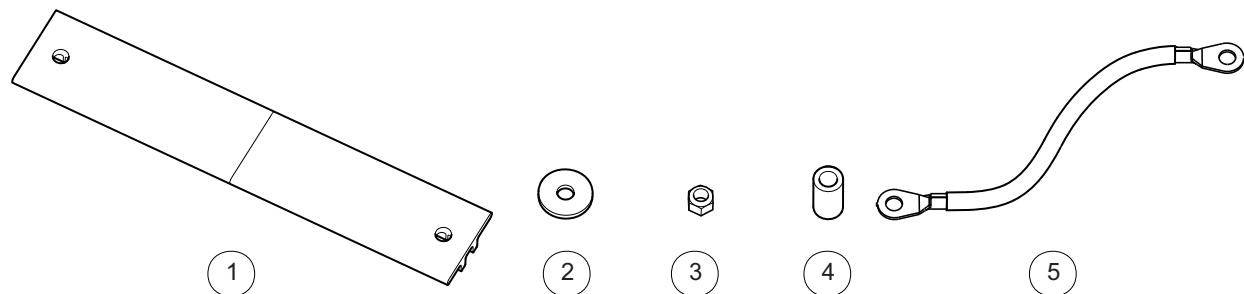
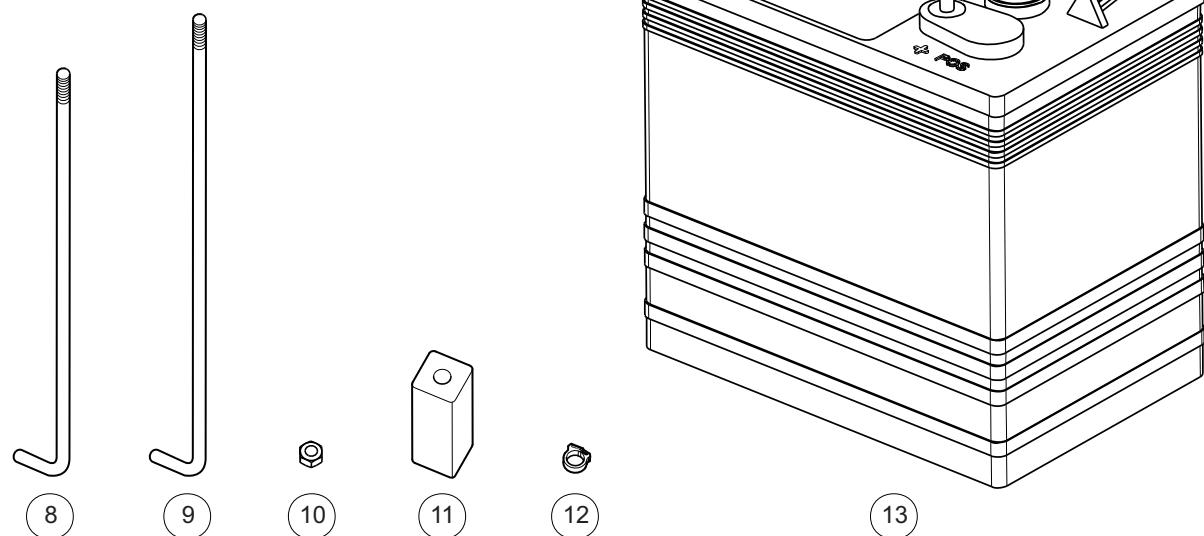
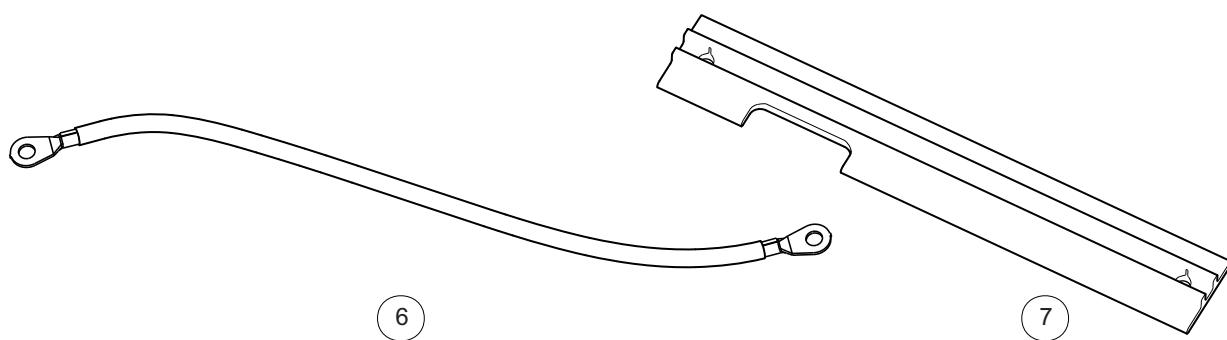
ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		15
1	<u>101090801</u>	Hold-Down, Battery	4	
2	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	12	
3	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	12	
4	<u>1015608</u>	Tube Spacer, Hydraulic Cylinder	2	
5	<u>102002901</u>	Wire Assy, #4 Black	4	
6	<u>102764001</u>	Wire Asm, #4 Black	3	
7	<u>102766201</u>	Hold Down, Outside	2	
8	<u>102845203</u>	Rod, Battery Hold Down 10.7"	10	
9	<u>102845204</u>	Rod, Battery Hold Down 12"	2	
10	<u>102873401</u>	5/16-18 Heavy Hex Nut	16	
11	<u>102980801</u>	Extr, Plastic, 1 X 1 X 3	2	
12	<u>102980901</u>	Clamp, Hose, Nylon, .25	2	
13	<u>103695702</u>	Battery, 6v, 145xc, Dry	8	
14	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	
15	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	2	
		Note: If U.S. Battery is used to replace any other brand of battery, the onboard computer must be changed to match. See Computer, Controller, and Solenoid pages.		E

15**E**

000409-007

BATTERIES, 6-VOLT, STANDARD DUTY, JCI

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		15
1	<u>101090801</u>	Hold-Down, Battery	4	
2	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	12	
3	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	12	
4	<u>1015608</u>	Tube Spacer, Hydraulic Cylinder	2	
5	<u>102002901</u>	Wire Assy, #4 Black	4	
6	<u>102764001</u>	Wire Asm, #4 Black	3	
7	<u>102766201</u>	Hold Down, Outside	2	
8	<u>102845201</u>	Rod, Battery Hold Down 9.7"	10	
9	<u>102845203</u>	Rod, Battery Hold Down 10.7"	2	
10	<u>102873401</u>	5/16-18 Heavy Hex Nut	16	
11	<u>102980801</u>	Extr, Plastic, 1 X 1 X 3	2	
12	<u>102980901</u>	Clamp, Hose, Nylon, .25	2	
13	<u>103793102</u>	Battery, 6v, Gc2, Dry	8	
14	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	
15	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	2	

15**E**

14



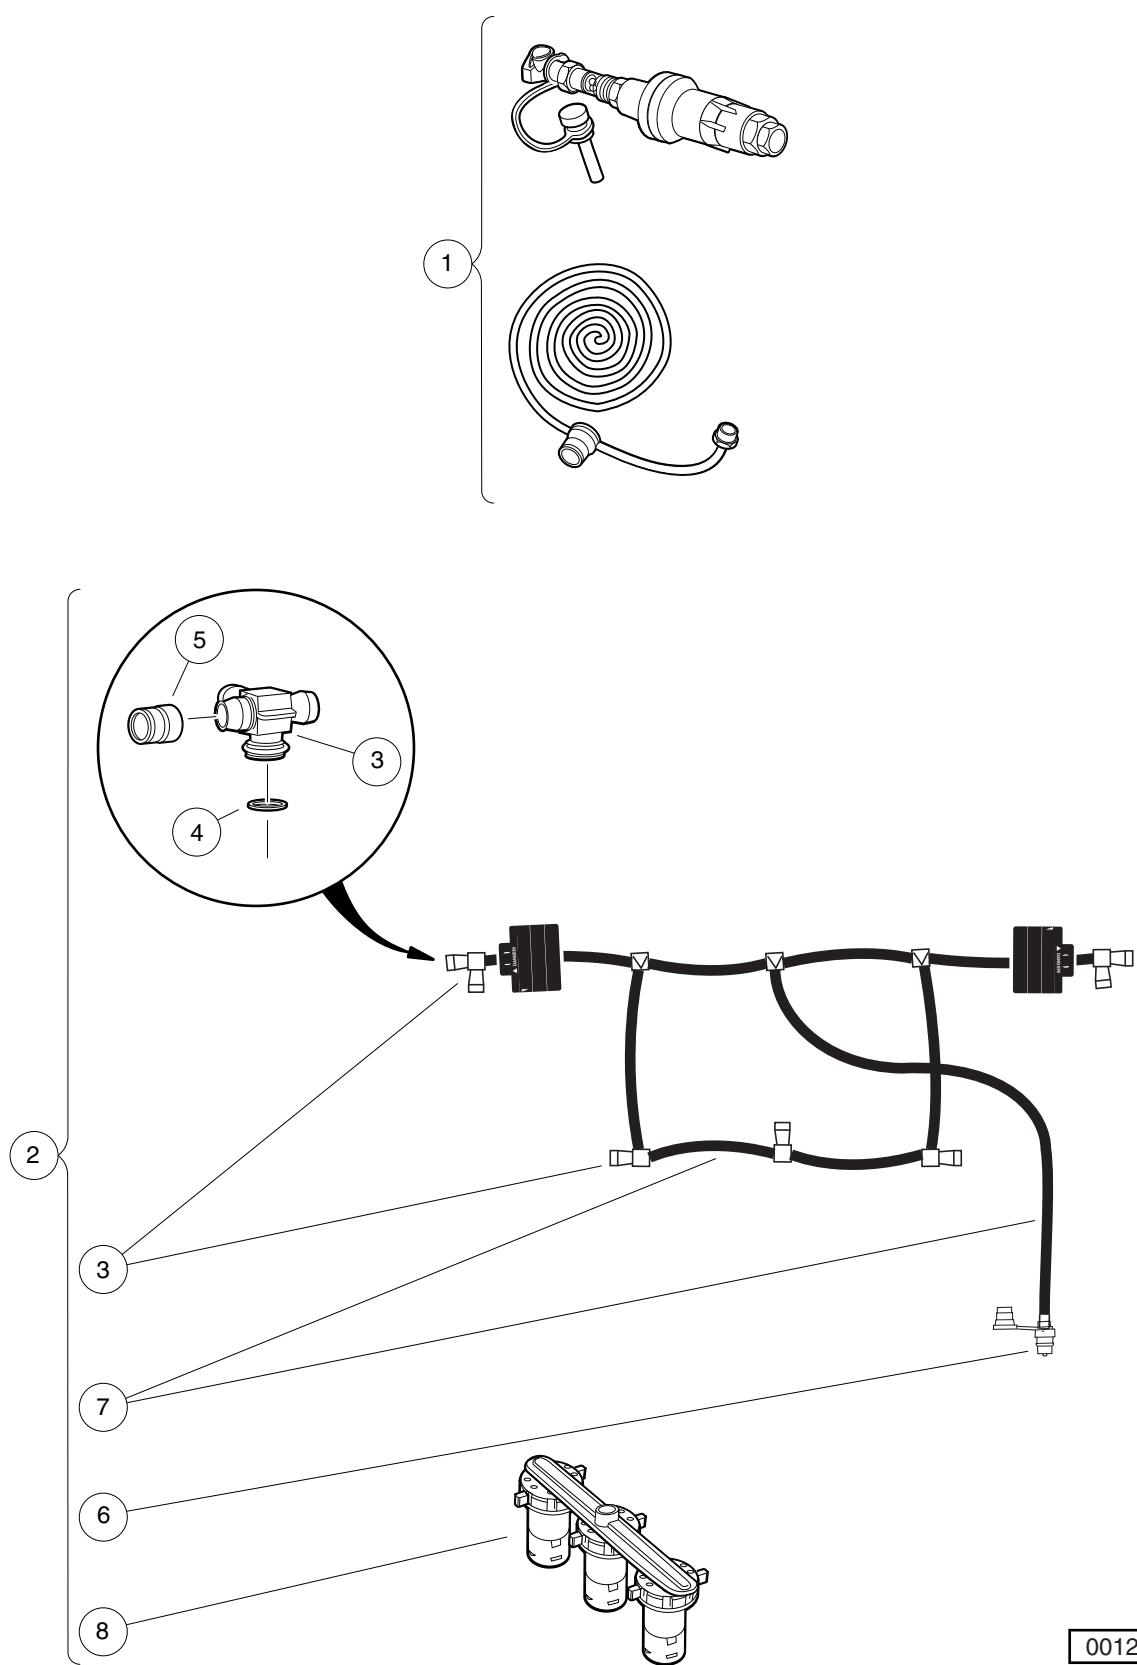
15



000409-005

BATTERIES, 6-VOLT, HEAVY DUTY, CROWN

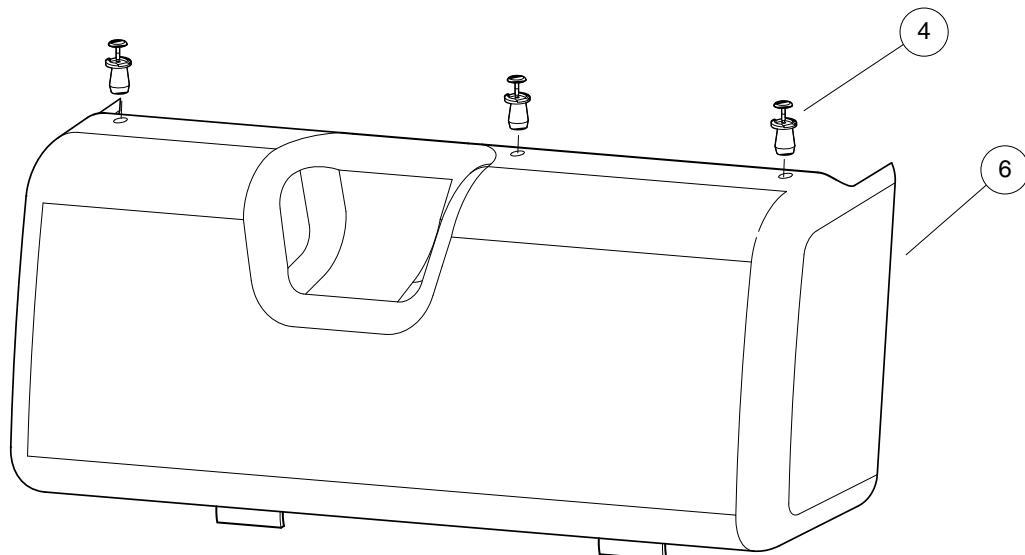
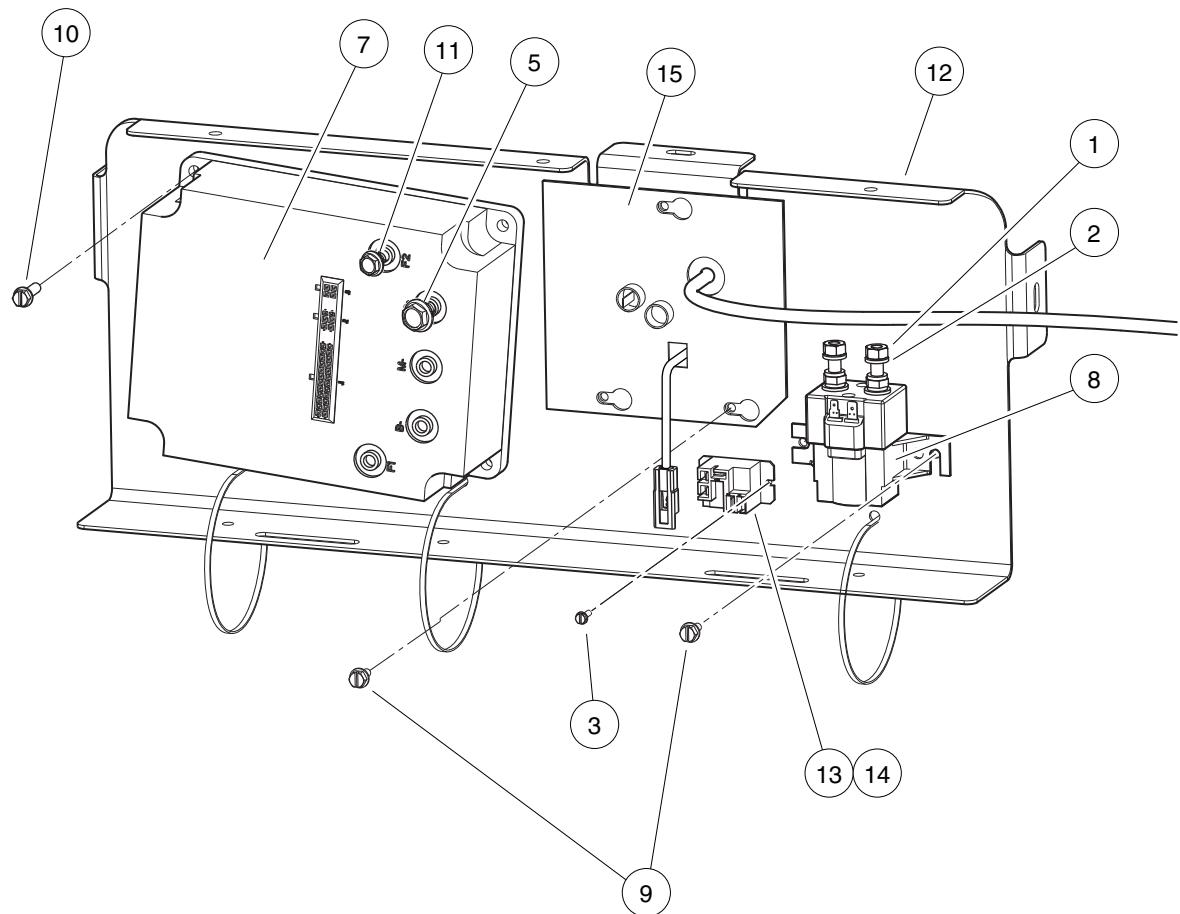
ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		15
1	<u>101090801</u>	Hold-Down, Battery	4	
2	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	12	
3	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	12	
4	<u>1015608</u>	Tube Spacer, Hydraulic Cylinder	2	
5	<u>102002901</u>	Wire Assy, #4 Black	4	
6	<u>102764001</u>	Wire Asm, #4 Black	3	
7	<u>102766201</u>	Hold Down, Outside	2	
8	<u>102845203</u>	Rod, Battery Hold Down 10.7"	10	
9	<u>102845204</u>	Rod, Battery Hold Down 12"	2	
10	<u>102873401</u>	5/16-18 Heavy Hex Nut	16	
11	<u>102980801</u>	Extr, Plastic, 1 X 1 X 3	2	
12	<u>102980901</u>	Clamp, Hose, Nylon, .25	2	
13	<u>103720402</u>	Battery, 6v, Cr245, Moist	8	
14	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	
15	<u>8963</u>	Screw, 5/16-18 X 1.75 Hex-Head Cap	2	

15**E**

001226-001

SINGLE POINT WATERING SYSTEM, 6V

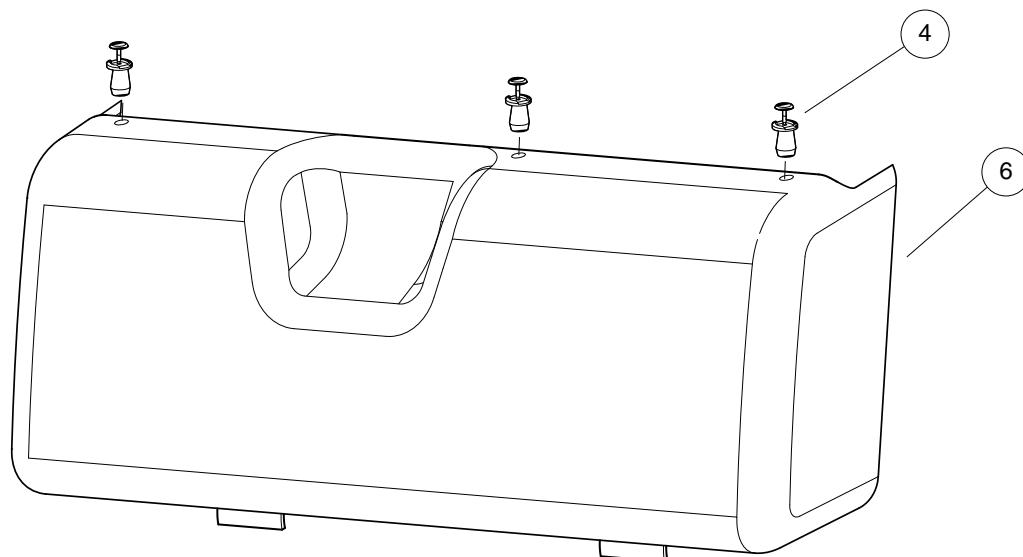
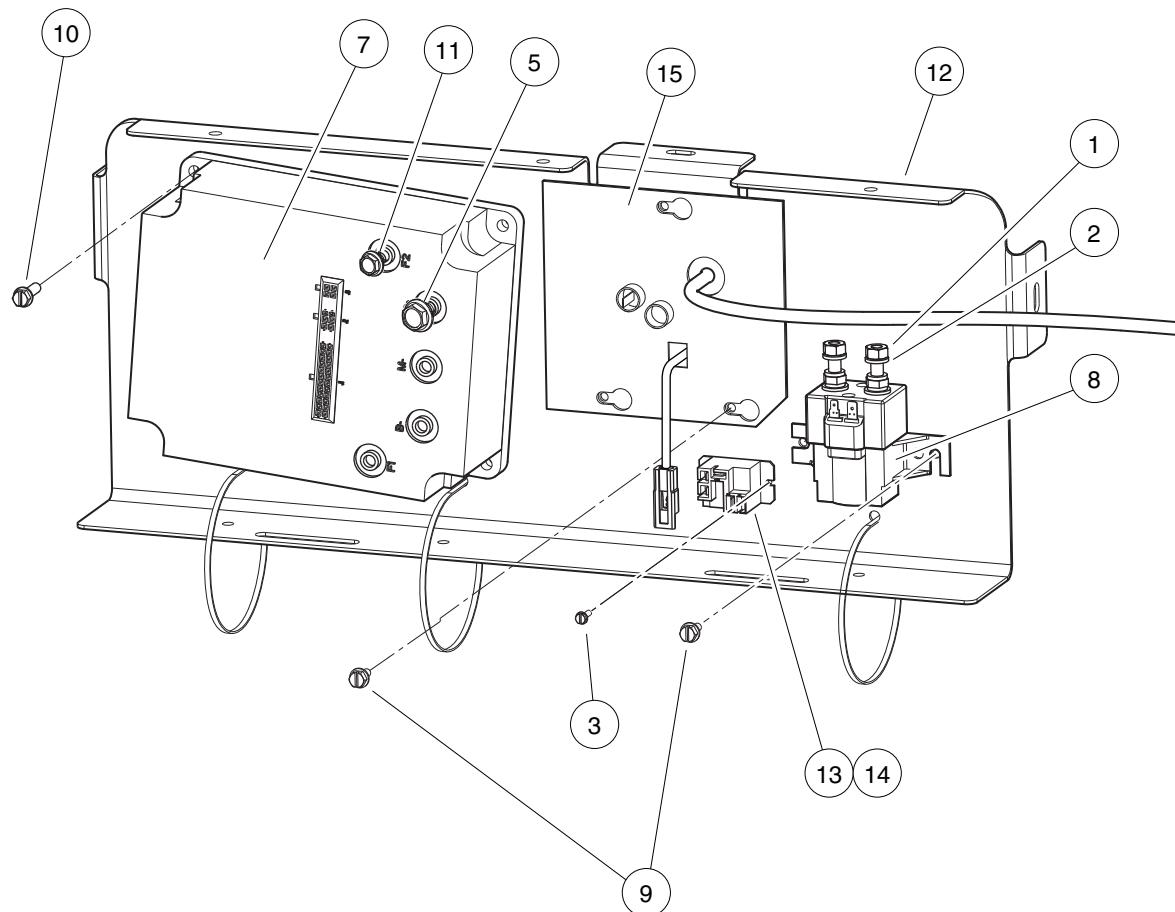
ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		
1	<u>102958001</u>	Kit Regulated Hose Sply Spws	1	
2	<u>103510801</u>	Kit, Spws, 8x6v, Opt 2 (includes items 3 through 8)	1	
3	<u>103226201</u>	Fitting Spws Swivel T	8	
4	<u>103226301</u>	O-ring Spws Swivel T	8	
5	<u>103226401</u>	Cap Spws Swivel T Red	7	
6	<u>103226601</u>	Coupler Male Spws Supply	1	
7	<u>103226701</u>	Tubing Spws	A/R	
8	<u>103510501</u>	Manifold, Lpr, 3 Vlve, Spw	8	
		Note: For 6-Volt batteries only.		

15**E**

000597-003

COMPUTER, CONTROLLER, AND SOLENOID – FOR U.S. BATTERY ONLY – FROM EARLY-2011 MODEL YEAR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012528</u>	Nut, M8-1.25 Hex	2
2	<u>1013734</u>	Lockwasher, 8mm Split	2
3	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	2
4	<u>1016967</u>	Blind Rivet, Push Type	3
5	<u>102240501</u>	Bolt, Controller, Terminal	3
6	<u>102772401</u>	Cover, Component, Elec, Rear	1
7	<u>102774501</u>	Controller, 500 Amp	1
8	<u>102774701</u>	Solenoid, 48v	1
9	<u>102817101</u>	Screw, 1/4-20 X .50 Hex Wsh Hd	5
10	<u>102817201</u>	Screw, 1/4-20 X .88 Hex Wsh Hd	4
11	<u>102859501</u>	Screw, M6 X 1 X 20 Ser Hex Flg	2
12	<u>102931101</u>	Plate, Component, Rear	1
13	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes item 14)	1
14	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
15	103709205	Obc, Iqplus, A2, 38", 480	1
		Note: If U.S. Battery is used to replace any other brand of battery, the onboard computer must be changed to match. See Batteries pages. NOTE 2: Onboard Computer (item 15) is equipped with the Packard 480 Series connector.	

15**E**

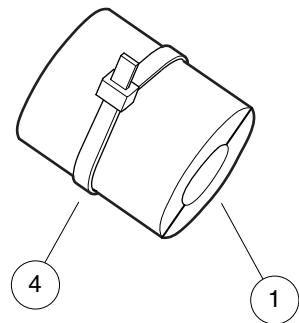
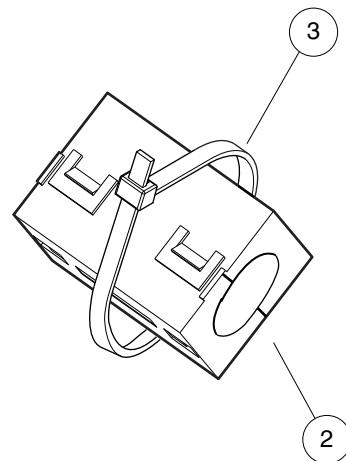
000597-003

COMPUTER, CONTROLLER, AND SOLENOID – FOR JCI & CROWN BATTERIES – FROM EARLY-2011 MODEL YEAR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012528</u>	Nut, M8-1.25 Hex	2
2	<u>1013734</u>	Lockwasher, 8mm Split	2
3	<u>1015720</u>	Screw, #6-32 X 1/2 Hex Washer-Head	2
4	<u>1016967</u>	Blind Rivet, Push Type	3
5	<u>102240501</u>	Bolt, Controller, Terminal	3
6	<u>102772401</u>	Cover, Component, Elec, Rear	1
7	<u>102774501</u>	Controller, 500 Amp	1
8	<u>102774701</u>	Solenoid, 48v	1
9	<u>102817101</u>	Screw, 1/4-20 X .50 Hex Wsh Hd	5
10	<u>102817201</u>	Screw, 1/4-20 X .88 Hex Wsh Hd	4
11	<u>102859501</u>	Screw, M6 X 1 X 20 Ser Hex Flg	2
12	<u>102931101</u>	Plate, Component, Rear	1
13	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes item 14)	1
14	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
15	103709202	Obc, Iqplus, A1, 38", 480	1
		Note: If JCI or Crown is used to replace U.S. Battery brand of battery, the onboard computer must be changed to match. See Batteries pages. NOTE 2: Onboard Computer (item 15) is equipped with the Packard 480 Series connector.	

15

E



001055-001

FERRITE BEADS, CE

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		15
1	<u>103449501</u>	Bead, Ferrite, Tdk	A/R	
2	<u>103449601</u>	Bead, Ferrite, Fair-rite	A/R	E
3	<u>8639</u>	Tie Wrap, 11" Nylon	A/R	
4	<u>8990</u>	Tie Wrap, 8" Nylon	A/R	

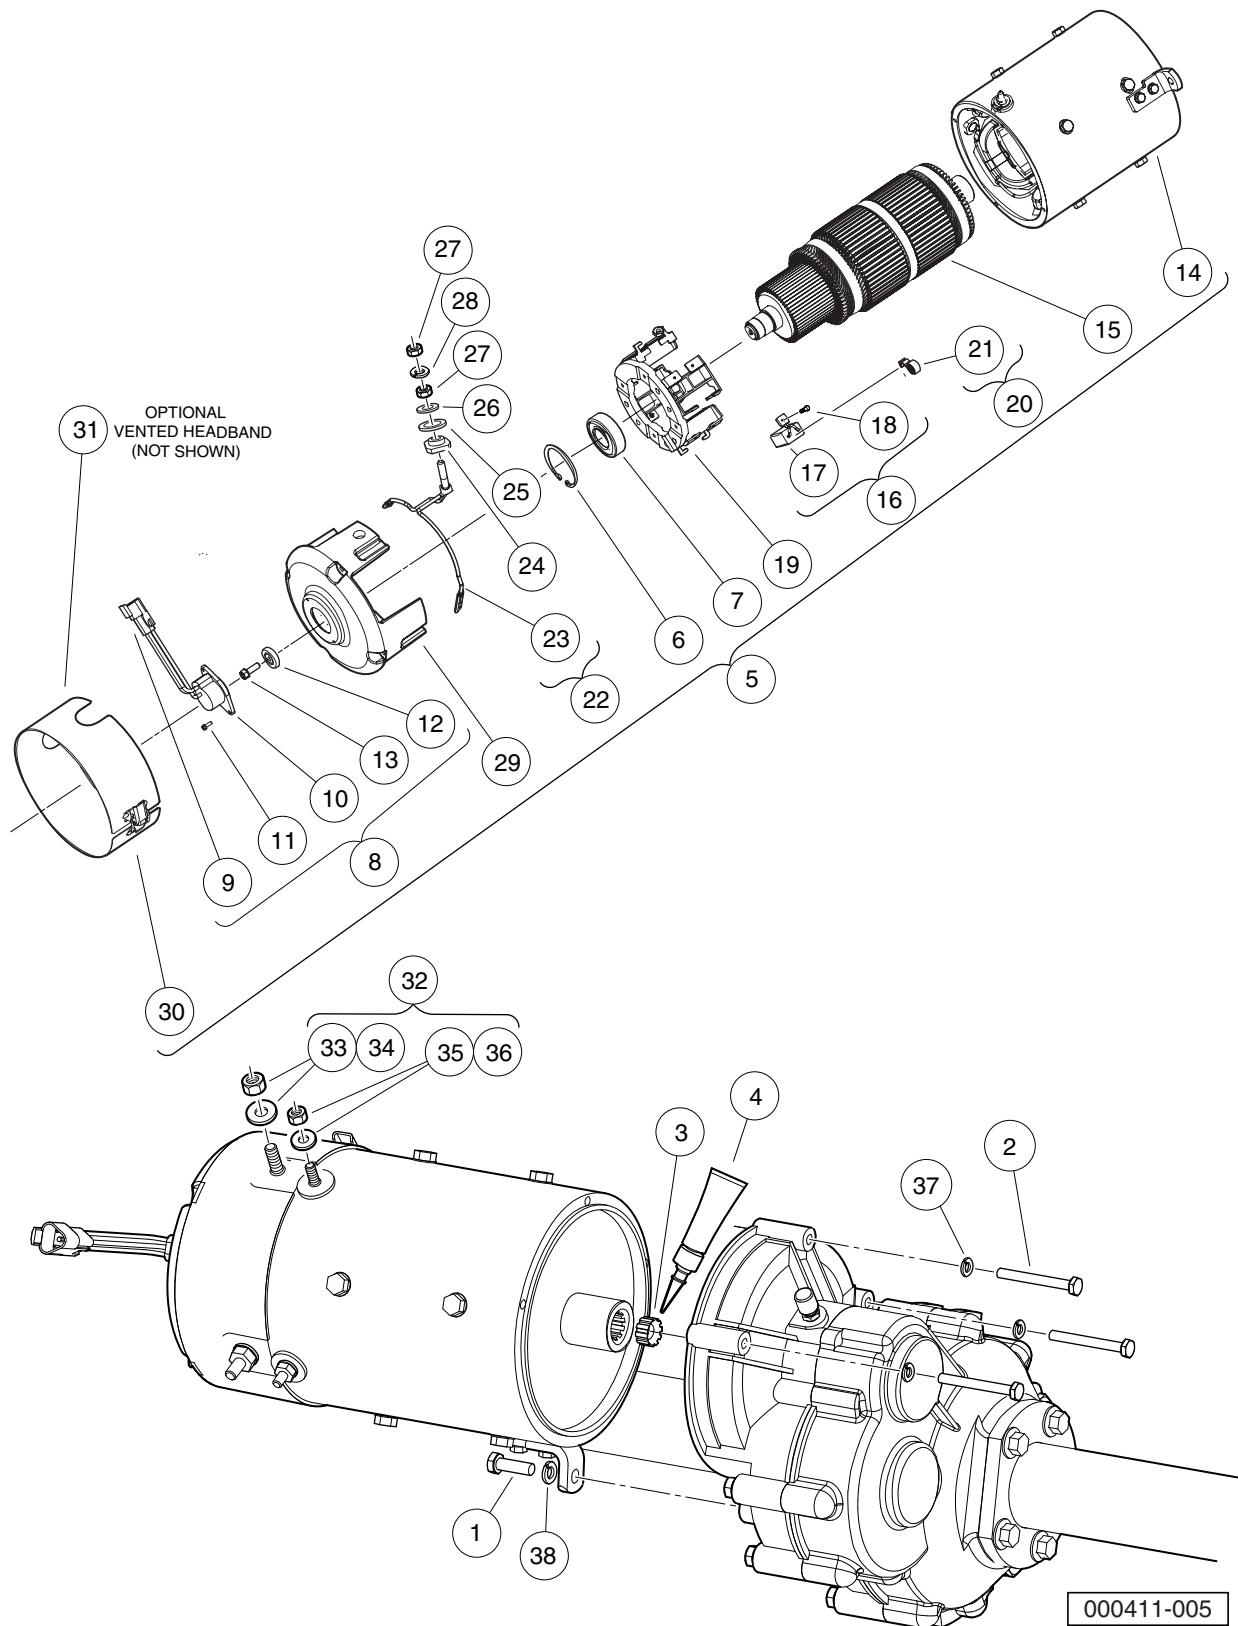
15

E

MOTOR (MODEL DA5-4006) – IQ PLUS

16

E



MOTOR (MODEL DA5-4006) – IQ PLUS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1
2	<u>1014201</u>	Screw, 1/4-20 X 2.25 Hex Cap	3
3	<u>102235201</u>	Bumper, Drive Unit	1
4	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
5	<u>102775101</u>	IQ Plus Electric Motor, 48-VDC 3.7 hp (includes items 6 through 30)	1
6	N/A	Ring, 2.24" Internal Retaining	1
7	<u>102186401</u>	Bearing, Ball	1
8	<u>102704901</u>	Kit, Speed Sensor (includes items 9 through 13)	1
9	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
10	N/A	Sensor, Motor Speed, ADC	1
11	N/A	Screw, #8-32, Taptite Thread	2
12	N/A	Magnet, ADC Motor	1
13	N/A	Screw, 1/4-20 x 0.5	1
14	N/A	Asm, Frame And Field, 3.7 Hp	1
15	N/A	Armature (Includes external hardware not shown)	1
16	<u>102938601</u>	Kit, Brush, 3.7 Hp (includes items 17 and 18)	1
17	N/A	Brush, Motor	8
18	N/A	Screw, Taptite	8
19	<u>102938701</u>	Asm, Brush Box, 3.7 Hp	1
20	<u>102938801</u>	Kit, Brush Spring, 3.7 Hp (includes item 21)	1
21	N/A	Brush Spring	8
22	<u>102938901</u>	Kit, Brush Lead Asm, 3.7 Hp (includes items 23 through 28)	1
23	N/A	Terminal and Lead Assembly	2
24	N/A	Insulator, Terminal	2
25	N/A	Washer, Insulating	2
26	N/A	Washer, Flat, 5/16, Brass/Bronze	2
27	N/A	Nut, 5/16, Steel	4
28	N/A	Lockwasher, 5/16, Steel	2
29	<u>102939001</u>	Commutator End Head, 3.7 Hp	1
30	<u>102939101</u>	Sealed Headband, 3.7 Hp	1
31	<u>102939102</u>	Vented Headband, 3.7 HP (optional - not shown)	1
32	<u>102951701</u>	Pkg, Terminal Hardware, 3.7hp (includes items 33 through 36)	1
33	N/A	Nut, 5/16, Steel	2
34	N/A	Lockwasher, 5/16, Steel	2
35	N/A	Nut, 1/4-20, Steel	2
36	N/A	Lockwasher, 1/4-20, Steel	2
37	<u>451</u>	Lockwasher, 1/4 Split	3
38	<u>7174</u>	Lockwasher, 5/16 Split	1

16

E

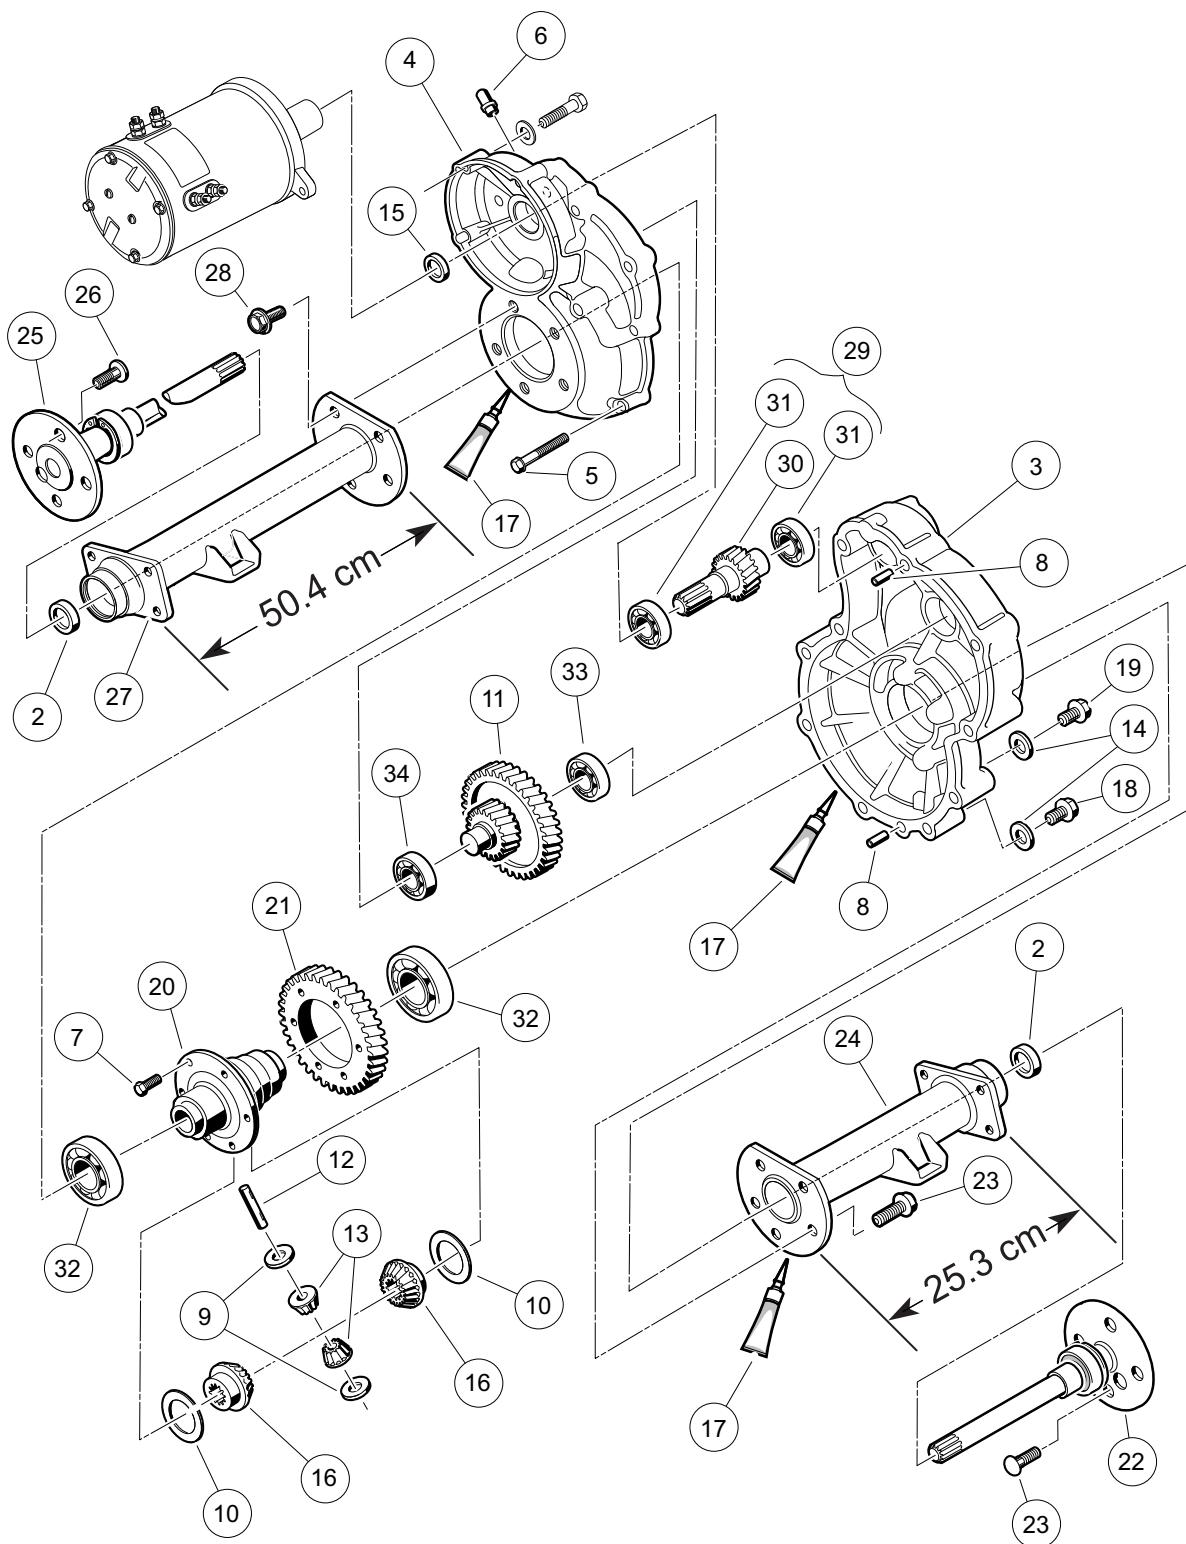
16

E

TRANSAXLE – ELECTRIC VEHICLES

17

E

17**E**

000223-005

TRANSAXLE – ELECTRIC VEHICLES

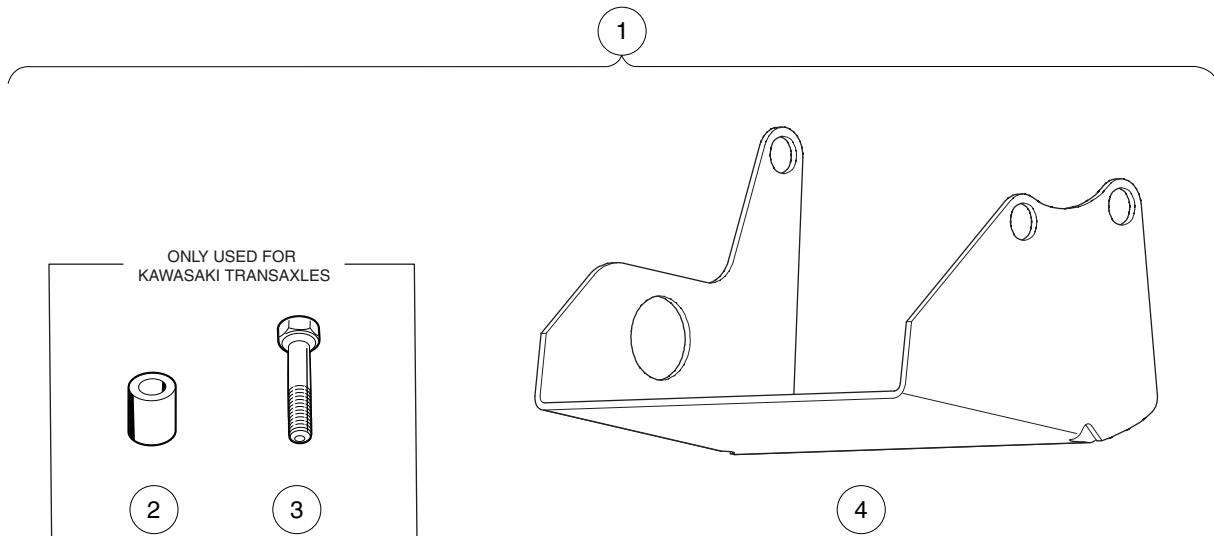
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102771701</u>	Transaxle, Electric (includes items 2 through 34)	1
2	<u>1013794</u>	Axle Shaft Oil Seal	2
3	<u>101895401</u>	Gear Case, Driver-Side	1
4	<u>101895501</u>	Gear Case, Passenger-Side	1
5	<u>101897001</u>	Screw, M8-1.25 X 60mm Hex-Head	11
6	<u>101897201</u>	Breather	1
7	<u>101897401</u>	Screw, M10-1.25 X 25mm	6
8	<u>101897601</u>	Pin, 11mm OD X 8.5mm ID X 10mm	2
9	<u>101903601</u>	Washer, Thrust	2
10	<u>101903701</u>	Washer, Thrust	2
11	<u>101906901</u>	Intermediate Shaft Assembly	1
12	<u>101922101</u>	Pin, 15.99mm X 88.7mm Dowel	1
13	<u>101923001</u>	Gear, Differential Idler	2
14	<u>101923201</u>	Gasket	2
15	<u>101923501</u>	Seal, Lip	1
16	<u>101923901</u>	Gear, Differential	2
17	<u>101928701</u>	Liquid Gasket (Transaxle case)	1
18	<u>101972101</u>	Plug, M14-1.5 X 12mm Magnetic	1
19	<u>101972201</u>	Plug, M14-1.5 X 12mm Hex	1
20	<u>102356601</u>	Housing, Differential, 6 Bolt	6
21	<u>102356801</u>	Gear, Differential Output, 6-Bolt	6
22	<u>102886301</u>	Axle Assembly, Driver-Side (includes item 23)	1
23	<u>101922201</u>	Lug Stud	4
24	<u>102886401</u>	Tube, Axle, Driver-Side	1
25	<u>102886501</u>	Axle Assembly, Passenger-Side (includes item 26)	1
26	<u>101922201</u>	Lug Stud	4
27	<u>102886601</u>	Tube, Axle, Passenger-Side	1
28	<u>102902801</u>	Screw, M10 X 30	10
29	<u>103582801</u>	Asm, E Trans Shaft/bearing (includes items 30 and 31)	1
30	N/A	Shaft, Input	1
31	<u>7335</u>	Bearing	2
32	<u>7330</u>	Inner Axle Tube Bearing	2
33	<u>7335</u>	Bearing	1
34	<u>7336</u>	Bearing	1

17

E

17

E



000365-002

DIFFERENTIAL GUARD – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		17
1	<u>101611402</u>	Kit, Differential Guard, Elec Vehicles (includes items 2 through 4)	1	
2	<u>101914001</u>	Spacer, Steel	2	
3	<u>101936101</u>	Screw, M10-1.50 X 60mm Hex Cap	2	
4	<u>101978601</u>	Guard, Differential, Electric Vehicle Transaxle	1	

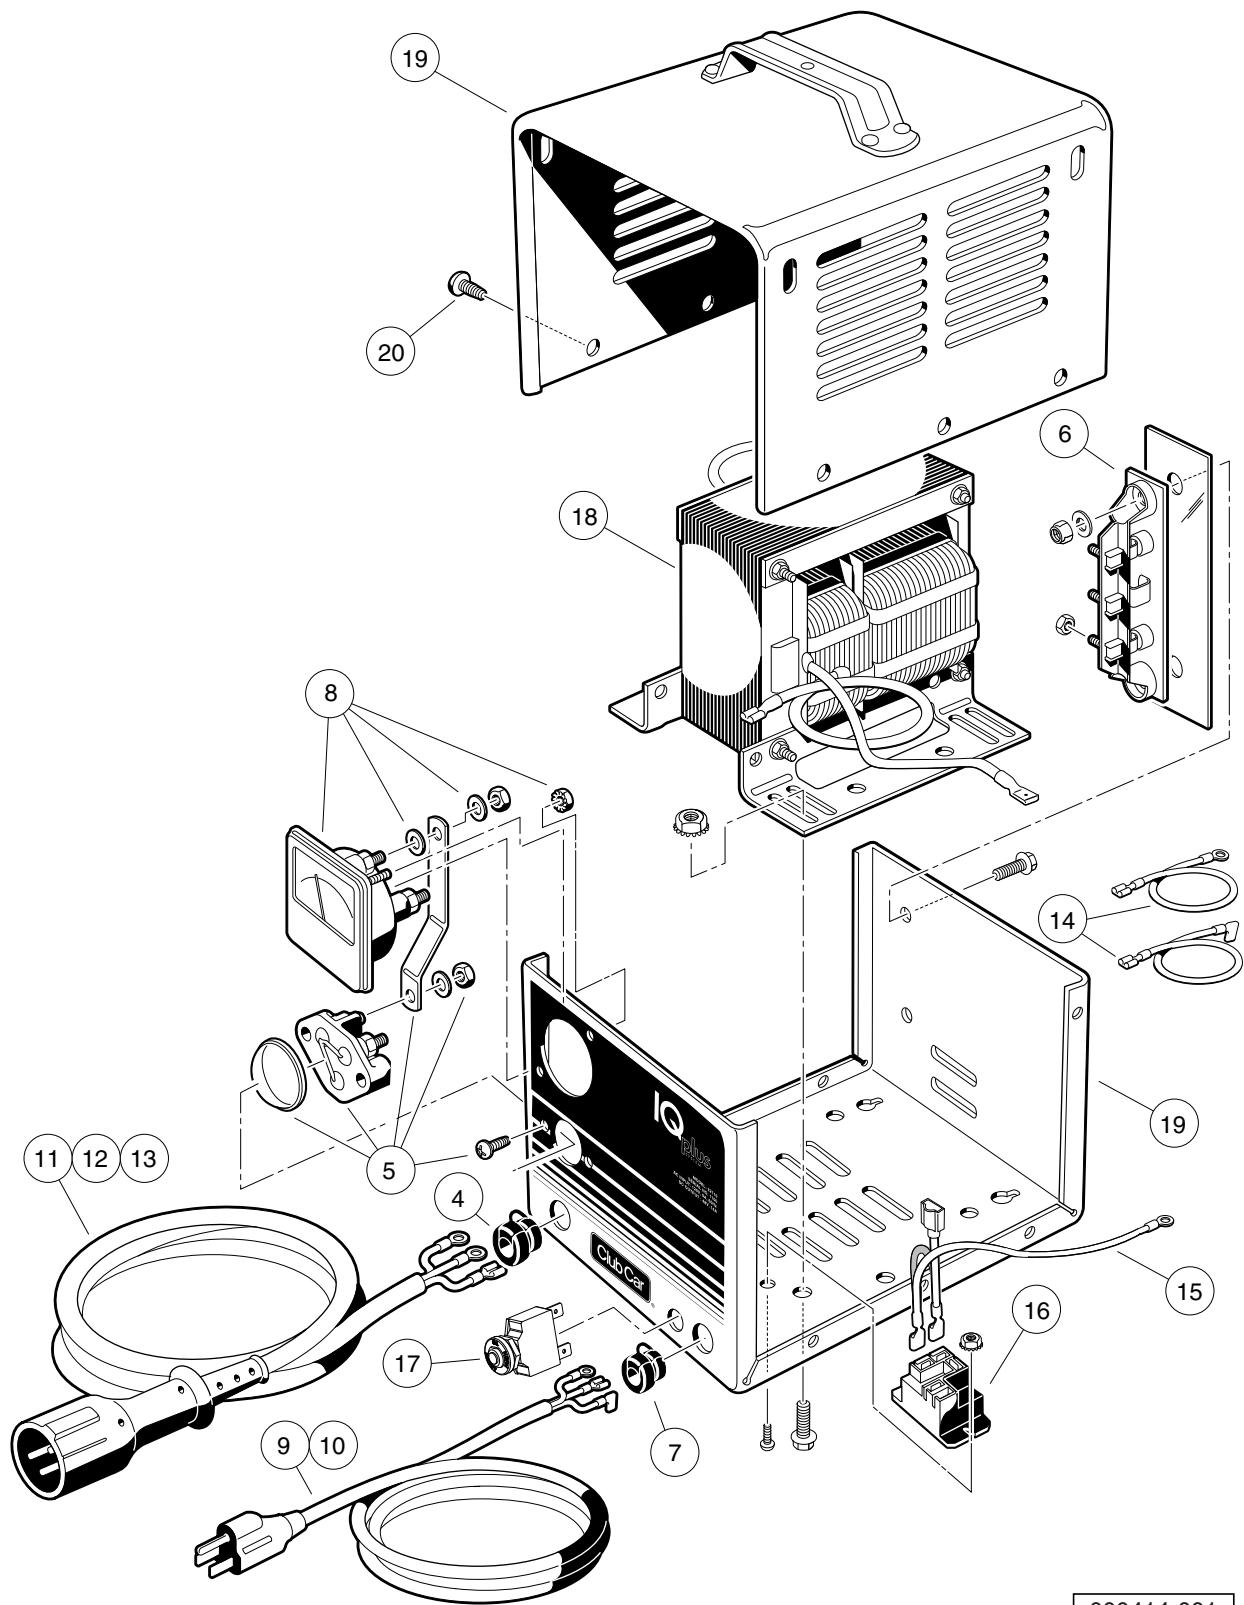
17

E

BATTERY CHARGERS – TO EARLY- 2011 MODEL YEAR

18

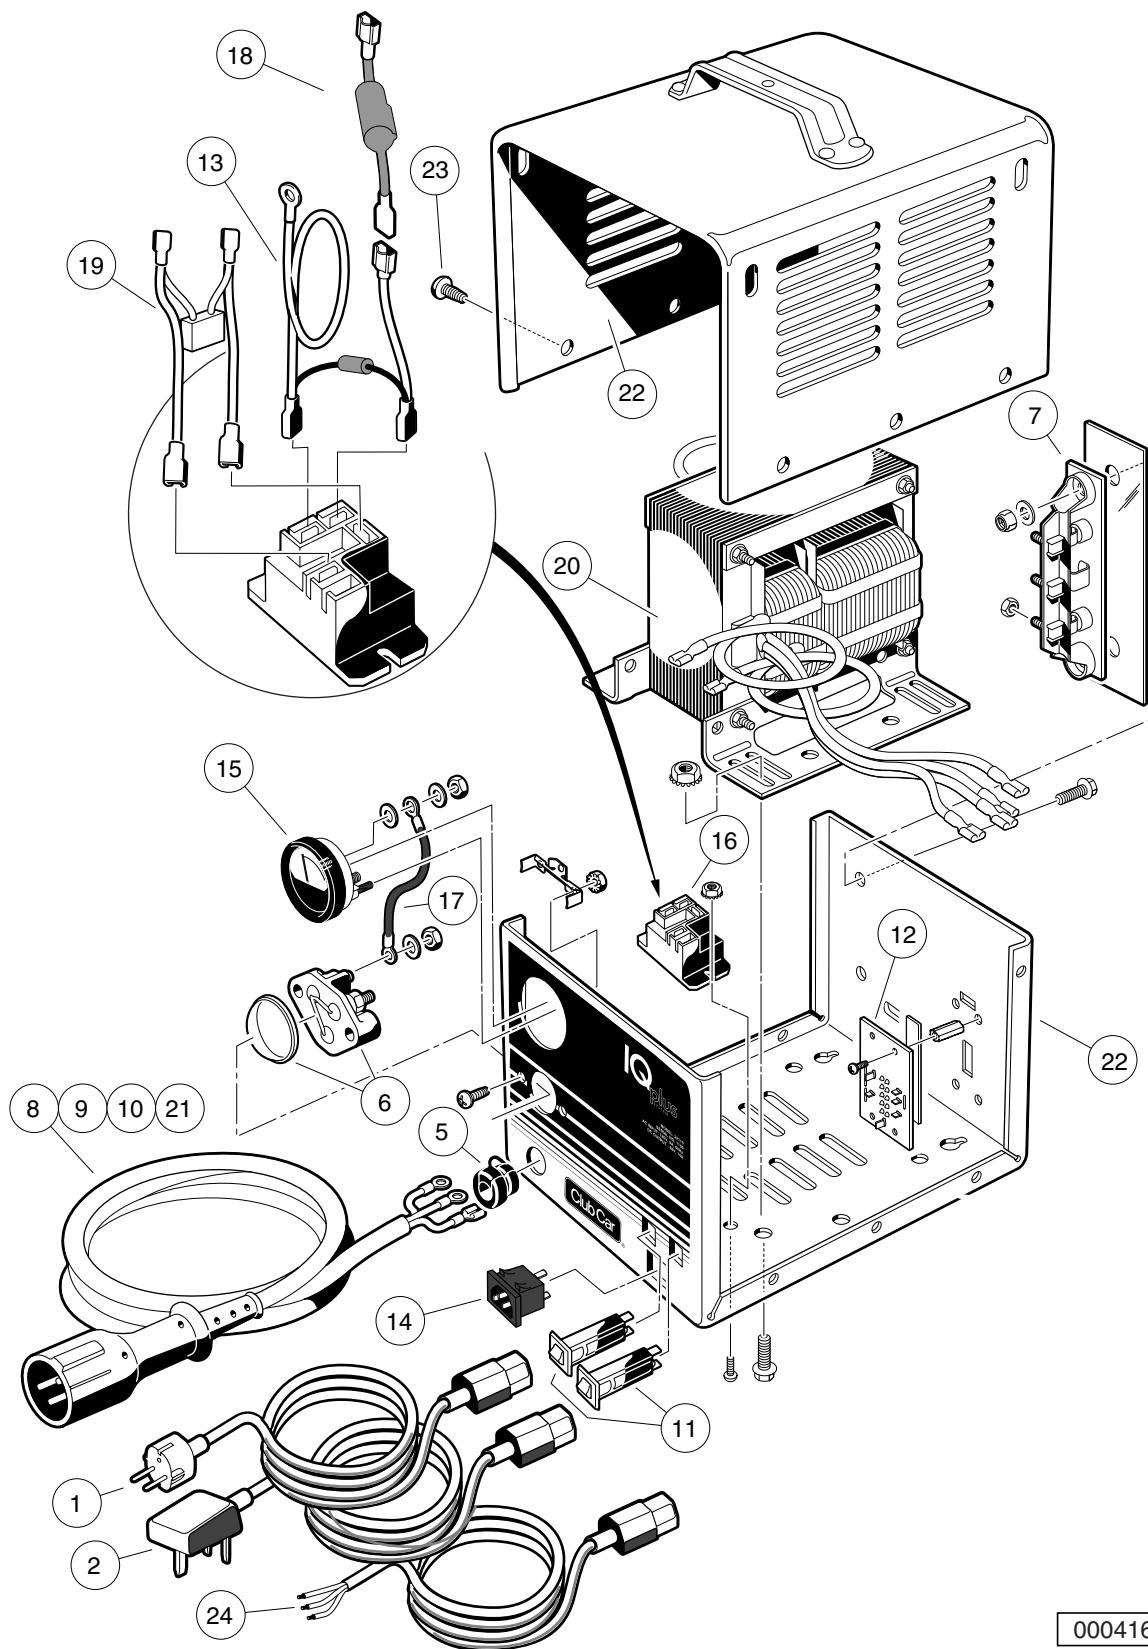
E

18**E**

000414-001

**IQ PLUS BATTERY CHARGER (MODELS 25730-11,-18,-19),
DOMESTIC**

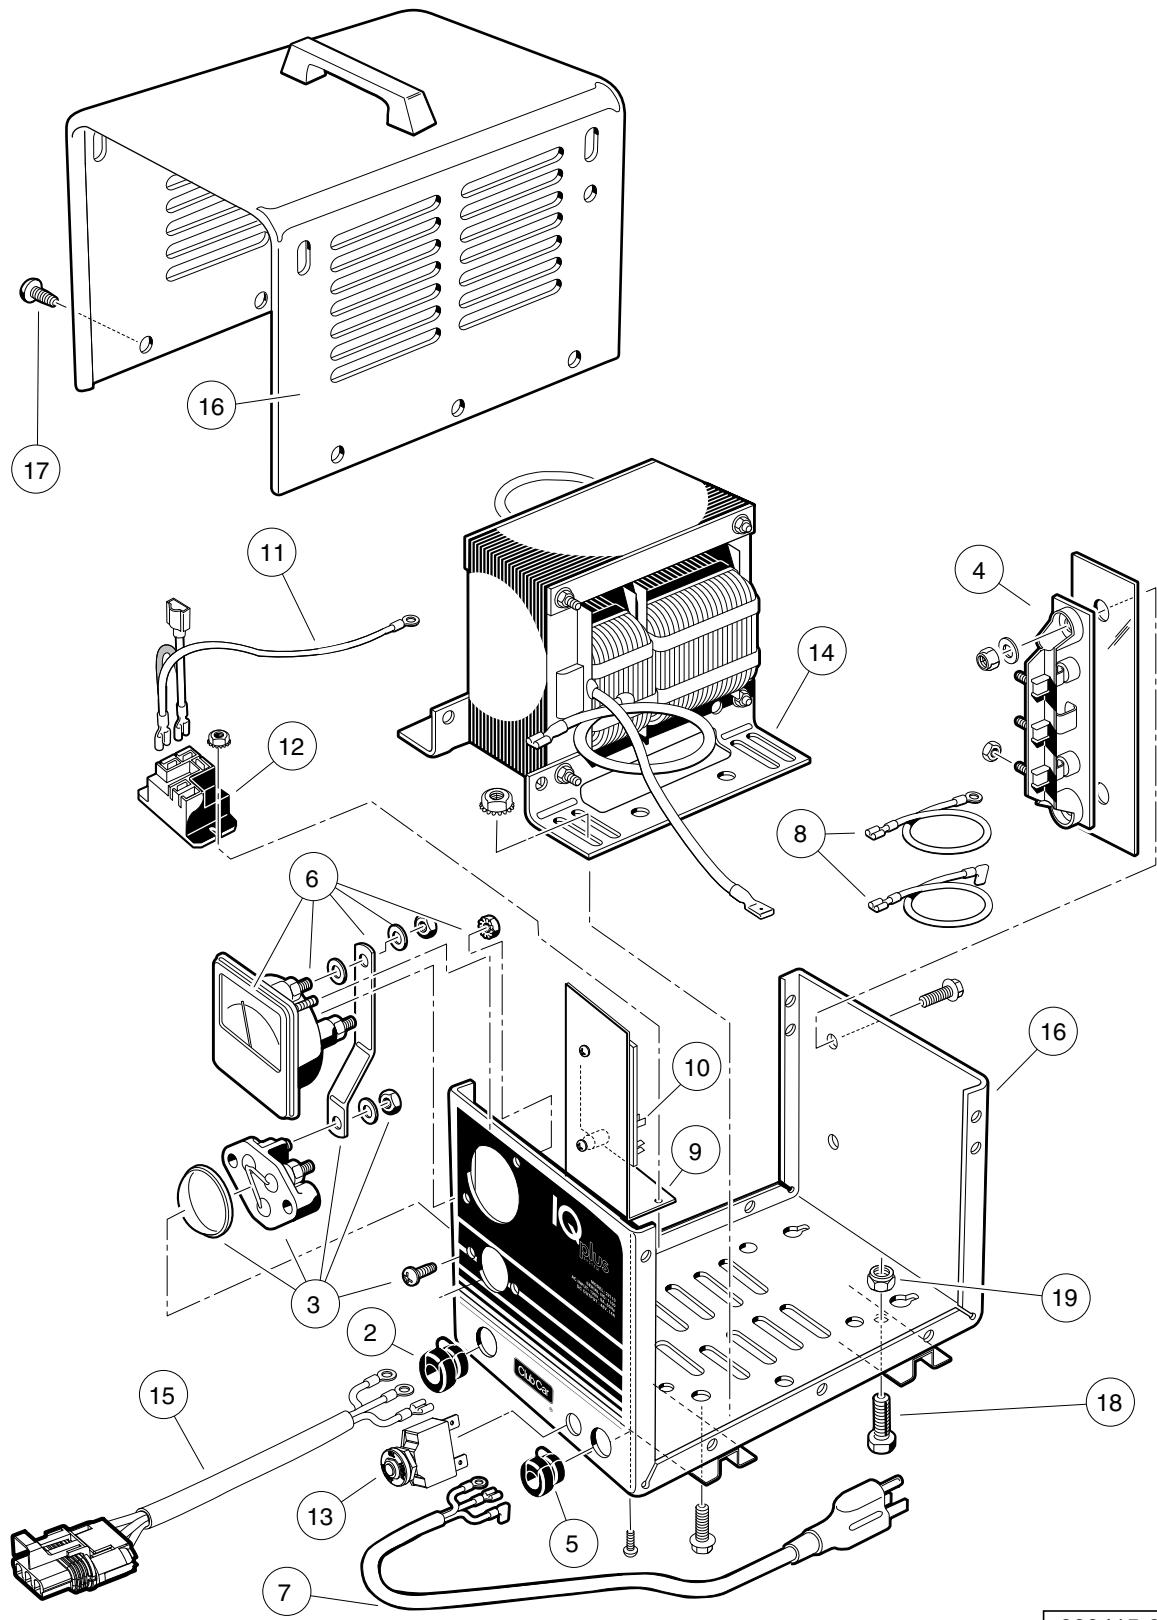
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102847801</u>	Charger, IQ Plus, Domestic (9-ft. DC Cord, 6-ft. AC Cord)	1
2	<u>102847802</u>	Charger, IQ Plus, Domestic (12-ft. DC Cord, 9-ft. AC Cord)	1
3	<u>102847803</u>	Charger, IQ Plus, Domestic (20-ft. DC Cord, 9-ft. AC Cord) (includes items 4 through 20)	1
4	<u>1012098</u>	Bushing, DC Cord	1
5	<u>1012101</u>	Fuse Assembly	1
6	<u>1015914</u>	Rectifier with Heatsink Assembly	1
7	<u>1015917</u>	Bushing, AC Cord	1
8	<u>101828501</u>	Ammeter	1
9	<u>101828801</u>	Cord, AC, 80-Inch (203 cm)	1
10	<u>101828802</u>	Cord, AC, 108-Inch (274 cm)	1
11	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
12	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
13	<u>101828903</u>	Cord, DC, 250-Inch (635 cm)	1
14	<u>101831101</u>	Wire Assembly Kit	1
15	<u>101914401</u>	Assembly, Voltage Suppressor	1
16	<u>102275401</u>	Relay, 48-VDC	1
17	<u>102838101</u>	Circuit Breaker 250vac-50vdc	1
18	N/A	Transformer, Battery Charger	1
19	N/A	Case, Battery Charger	1
20	7577	Screw, #10 X 0.50 Phillips Pan-Head	10

18**E**

000416-001

IQ PLUS BATTERY CHARGER (MODELS 25880-11 AND -18), INTERNATIONAL

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		18
1	<u>101958201</u>	Cord, UK, AC, Battery Charger	1	
2	<u>101958301</u>	Cord, European AC, Battery Charger	1	
3	<u>102892901</u>	Charger, IQ Plus, International (9-ft. DC Cord)	1	
4	<u>102892902</u>	Charger, IQ Plus, International (12-ft. DC Cord) (includes items 5 through 23)	1	
5	<u>1012098</u>	Bushing, DC Cord	1	
6	<u>1012101</u>	Fuse Assembly	1	
7	<u>1015914</u>	Rectifier with Heatsink Assembly	1	
8	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1	
9	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1	
10	<u>101828903</u>	Cord, DC, 250-Inch (635 cm)	1	
11	<u>101838401</u>	Circuit Breaker	2	
12	<u>101838601</u>	Four-Position Switch	1	
13	<u>101914401</u>	Assembly, Voltage Suppressor	1	
14	<u>101973501</u>	Receptacle, AC Cord	1	
15	<u>101976601</u>	Ammeter with Mounting Bracket	1	
16	<u>102275401</u>	Relay, 48-VDC	1	
17	N/A	Wire, Jumper	1	
18	N/A	Limiter, Current	1	
19	N/A	Wire Assembly, Battery Charger	1	
20	N/A	Transformer, Battery Charger	1	
21	<u>102940801</u>	Cord, Dc	1	
22	N/A	Case, Battery Charger	1	
23	7577	Screw, #10 X 0.50 Phillips Pan-Head	10	
24	<u>102939501</u>	Cord, European AC, Battery Charger	1	

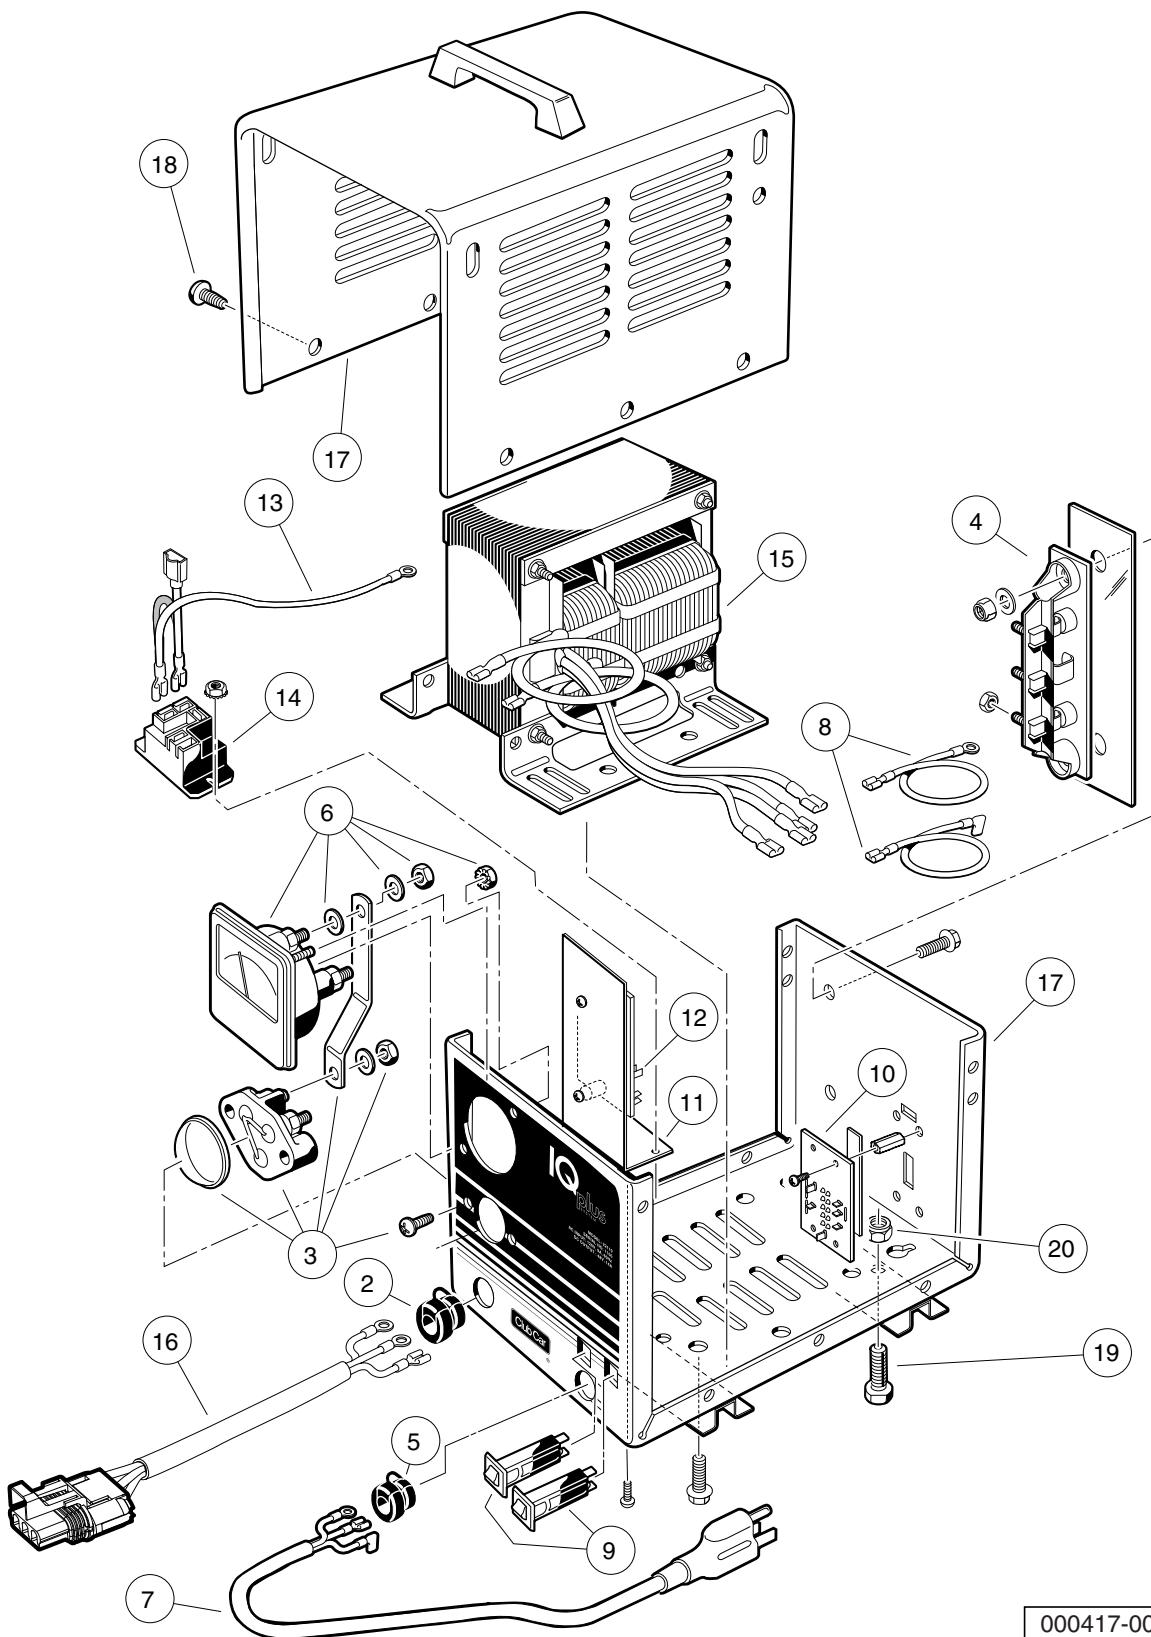
18**E**

000415-001

ONBOARD IQ PLUS BATTERY CHARGER (MODEL 25260-11), DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		
1	<u>102837001</u>	Battery Charger, Onboard, 120-VAC, 48-VDC (includes items 2 through 19)	1	
2	<u>1012098</u>	Bushing, DC Cord	1	
3	<u>1012101</u>	Fuse Assembly	1	
4	<u>1015914</u>	Rectifier with Heatsink Assembly	1	
5	<u>1015917</u>	Bushing, AC Cord	1	
6	<u>101828501</u>	Ammeter	1	
7	<u>101829001</u>	Cord, AC, 22-Inch (56 cm)	1	
8	<u>101831101</u>	Wire Assembly Kit	1	
9	<u>101838701</u>	Mounting Bracket, Relay	1	
10	<u>101841901</u>	Control Board	1	
11	101914401	Assembly, Voltage Suppressor	1	
12	<u>102275401</u>	Relay, 48-VDC	1	
13	<u>102838101</u>	Circuit Breaker 250vac-50vdc	1	
14	N/A	Transformer, Battery Charger	1	
15	<u>102940801</u>	Cord, Dc	1	
16	N/A	Case, Battery Charger	1	
17	7577	Screw, #10 X 0.50 Phillips Pan-Head	12	
18	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	4	
19	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4	

Note: DC Cord (item 15) uses the Packard 280 Connector.

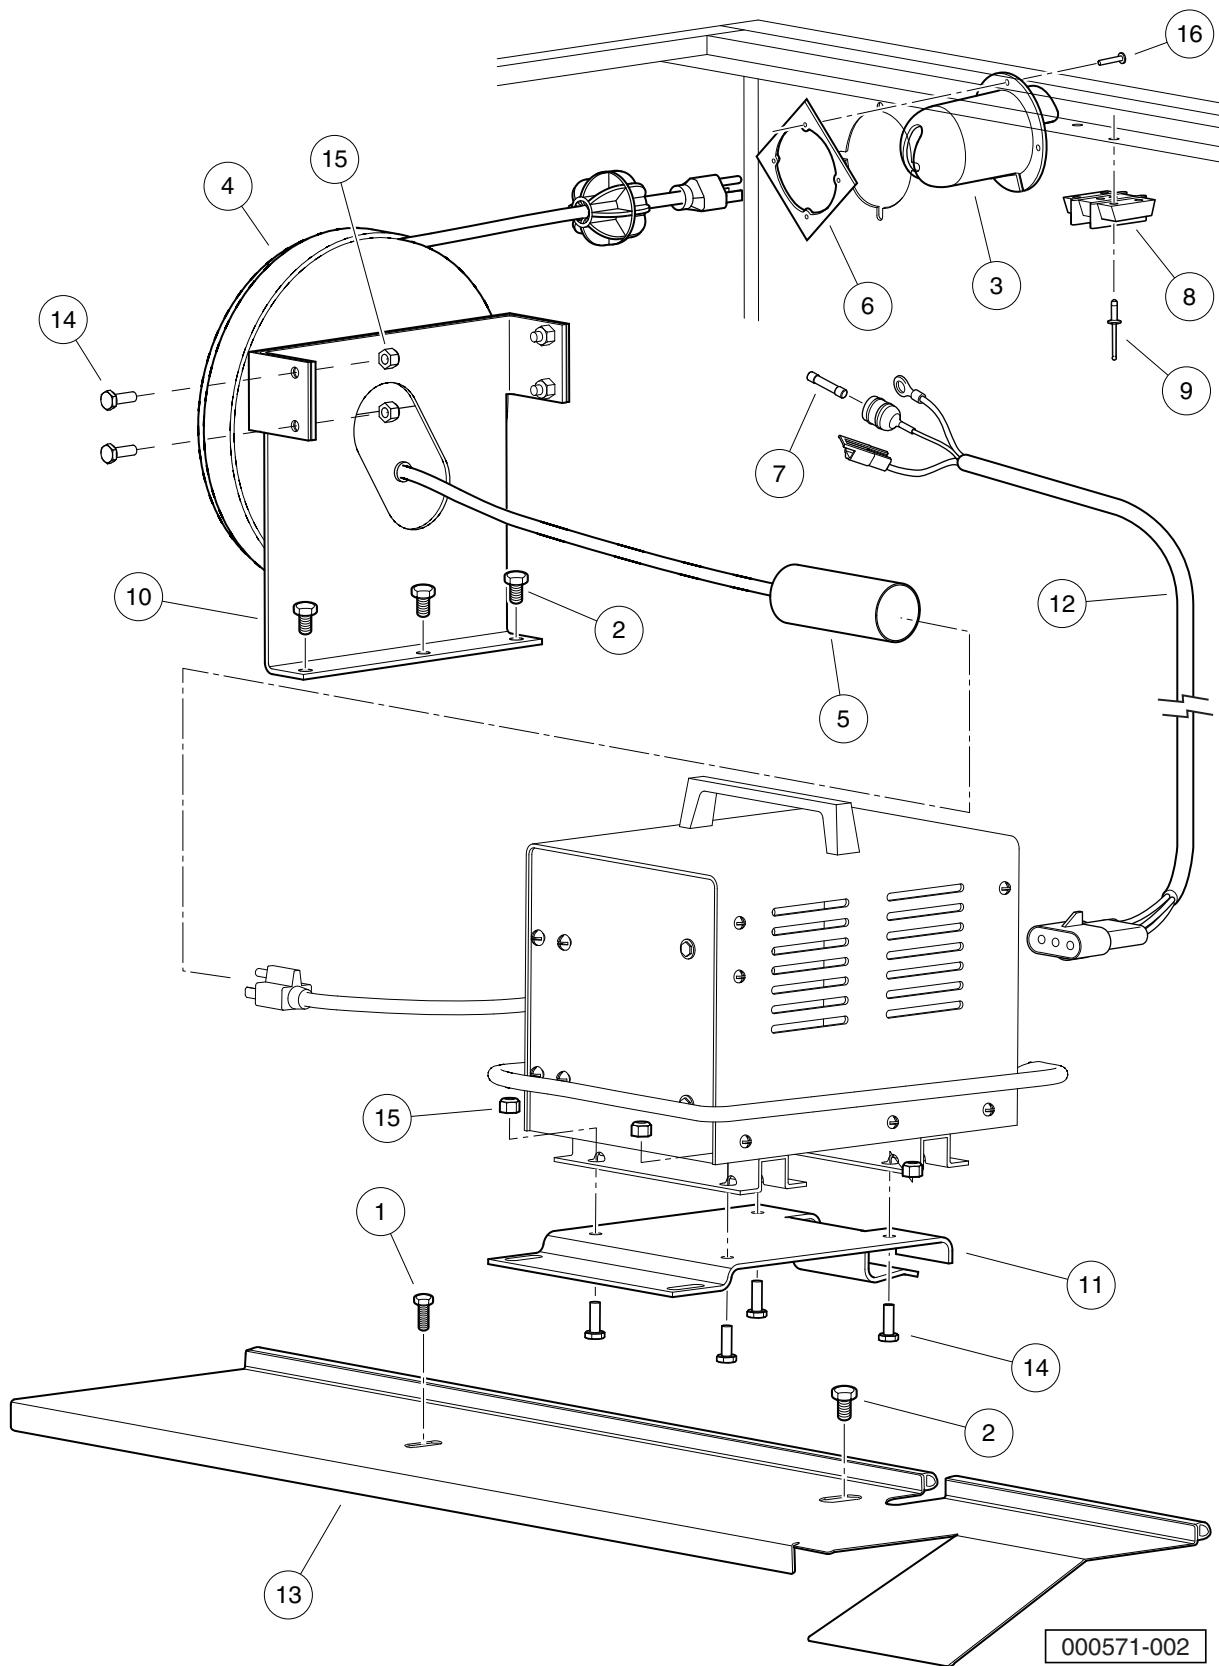
18**E**

000417-001

ONBOARD IQ PLUS BATTERY CHARGER (MODEL 25660-40), INTERNATIONAL

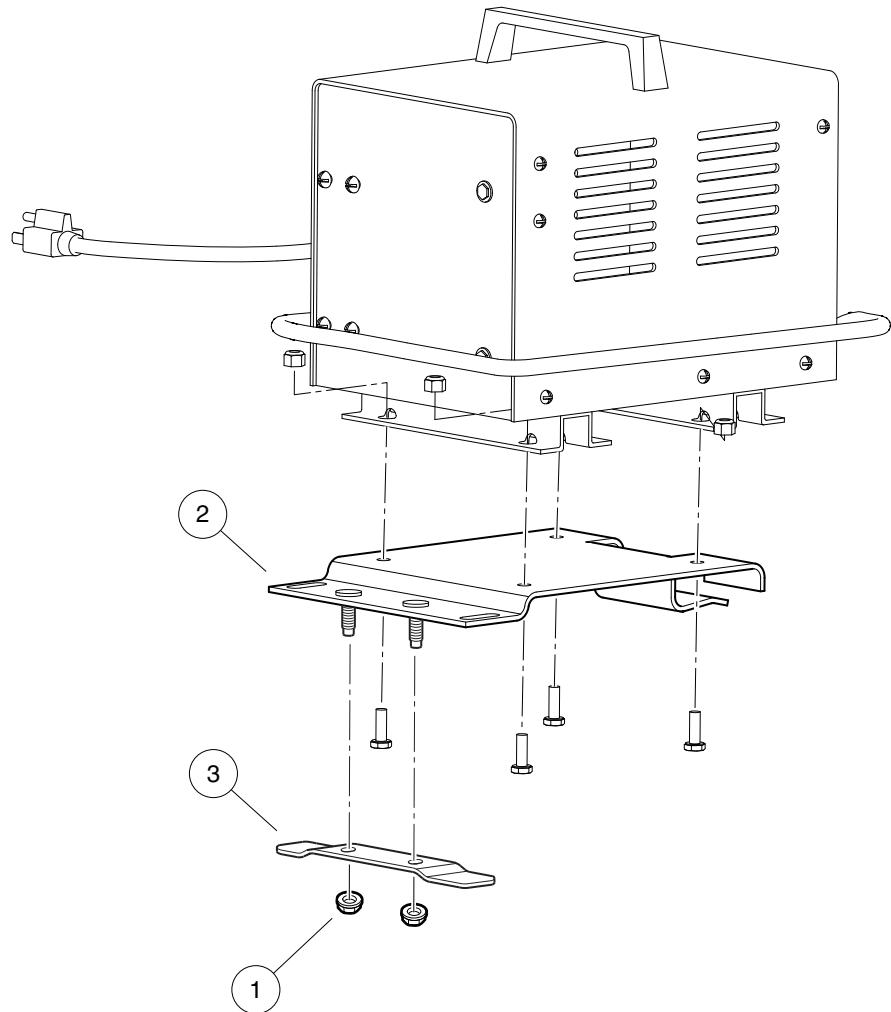
ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		18
1	102893001	Battery Charger, Onboard, International, IQ Plus (includes items 2 through 20)	1	
2	<u>1012098</u>	Bushing, DC Cord	1	E
3	<u>1012101</u>	Fuse Assembly	1	
4	<u>1015914</u>	Rectifier with Heatsink Assembly	1	
5	<u>1015917</u>	Bushing, AC Cord	1	
6	<u>101828501</u>	Ammeter	1	
7	<u>101829001</u>	Cord, AC, 22-Inch (56 cm)	1	
8	<u>101831101</u>	Wire Assembly Kit	1	
9	101838401	Circuit Breaker	2	
10	101838601	Four-Position Switch	1	
11	<u>101838701</u>	Mounting Bracket, Relay	1	
12	<u>101841901</u>	Control Board	1	
13	101914401	Assembly, Voltage Suppressor	1	
14	<u>102275401</u>	Relay, 48-VDC	1	
15	N/A	Transformer, Battery Charger	1	
16	<u>102940801</u>	Cord, Dc	1	
17	N/A	Case, Battery Charger	1	
18	7577	Screw, #10 X 0.50 Phillips Pan-Head	12	
19	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4	
20	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4	

Note: DC Cord (item 16) uses the Packard 280 Connector.

18**E**

ONBOARD IQ PLUS CHARGER AND CORD REEL MOUNTING (TO EARLY-2011 MY), PAGE 1 OF 2

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014063</u>	Screw, 1/4-20 X 1.00, Hex Head	1
2	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	4
3	<u>1016673</u>	Housing, Cord Reel	1
4	<u>1017187</u>	Retractable Cord Reel	1
5	<u>1017189</u>	Heat Shrink Tube 1.5" X 3"	1
6	<u>101801001</u>	Plate, Receptacle Backing	1
7	<u>101894901</u>	Fuse, 3/8-Amp	1
8	<u>101966801</u>	Block, Terminal	1
9	<u>101968801</u>	Rivet, 3/16", Pop	2
10	<u>102770701</u>	Bracket, Reel, Tabbed	1
11	<u>102844001</u>	Plate, Charger Mounting	1
12	<u>102881401</u>	Charger Harness, IQ Plus, 55"	1
13	<u>103353501</u>	Shield	1
14	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8
15	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	8
16	<u>8796</u>	Screw, #7-19 X 0.75 Pan-Head Type AB	4
17	<u>8990</u>	Tie Wrap, 8" Nylon	4
		Note: Charger Harness (item 12) uses the Packard 280 Connector. NOTE 2: Tie Wrap (item 17) not shown. NOTE 3: See following page for parts specific to the international onboard charger.	



000572-003

**ONBOARD IQ PLUS CHARGER AND CORD REEL MOUNTING,
PAGE 2 OF 2**

ITEM	PART NO.	DESCRIPTION	QTY	
1	<u>101832901</u>	1 2 3 4 Nut, M10-1.25 Hex Flange	2	
2	<u>102844002</u>	Plate, Charger Mounting, with Studs, International	1	
3	<u>103189101</u>	Retainer, Charger Assembly	1	
Note: Items on this page are used only for the International Onboard IQ Plus Battery Charger.				E

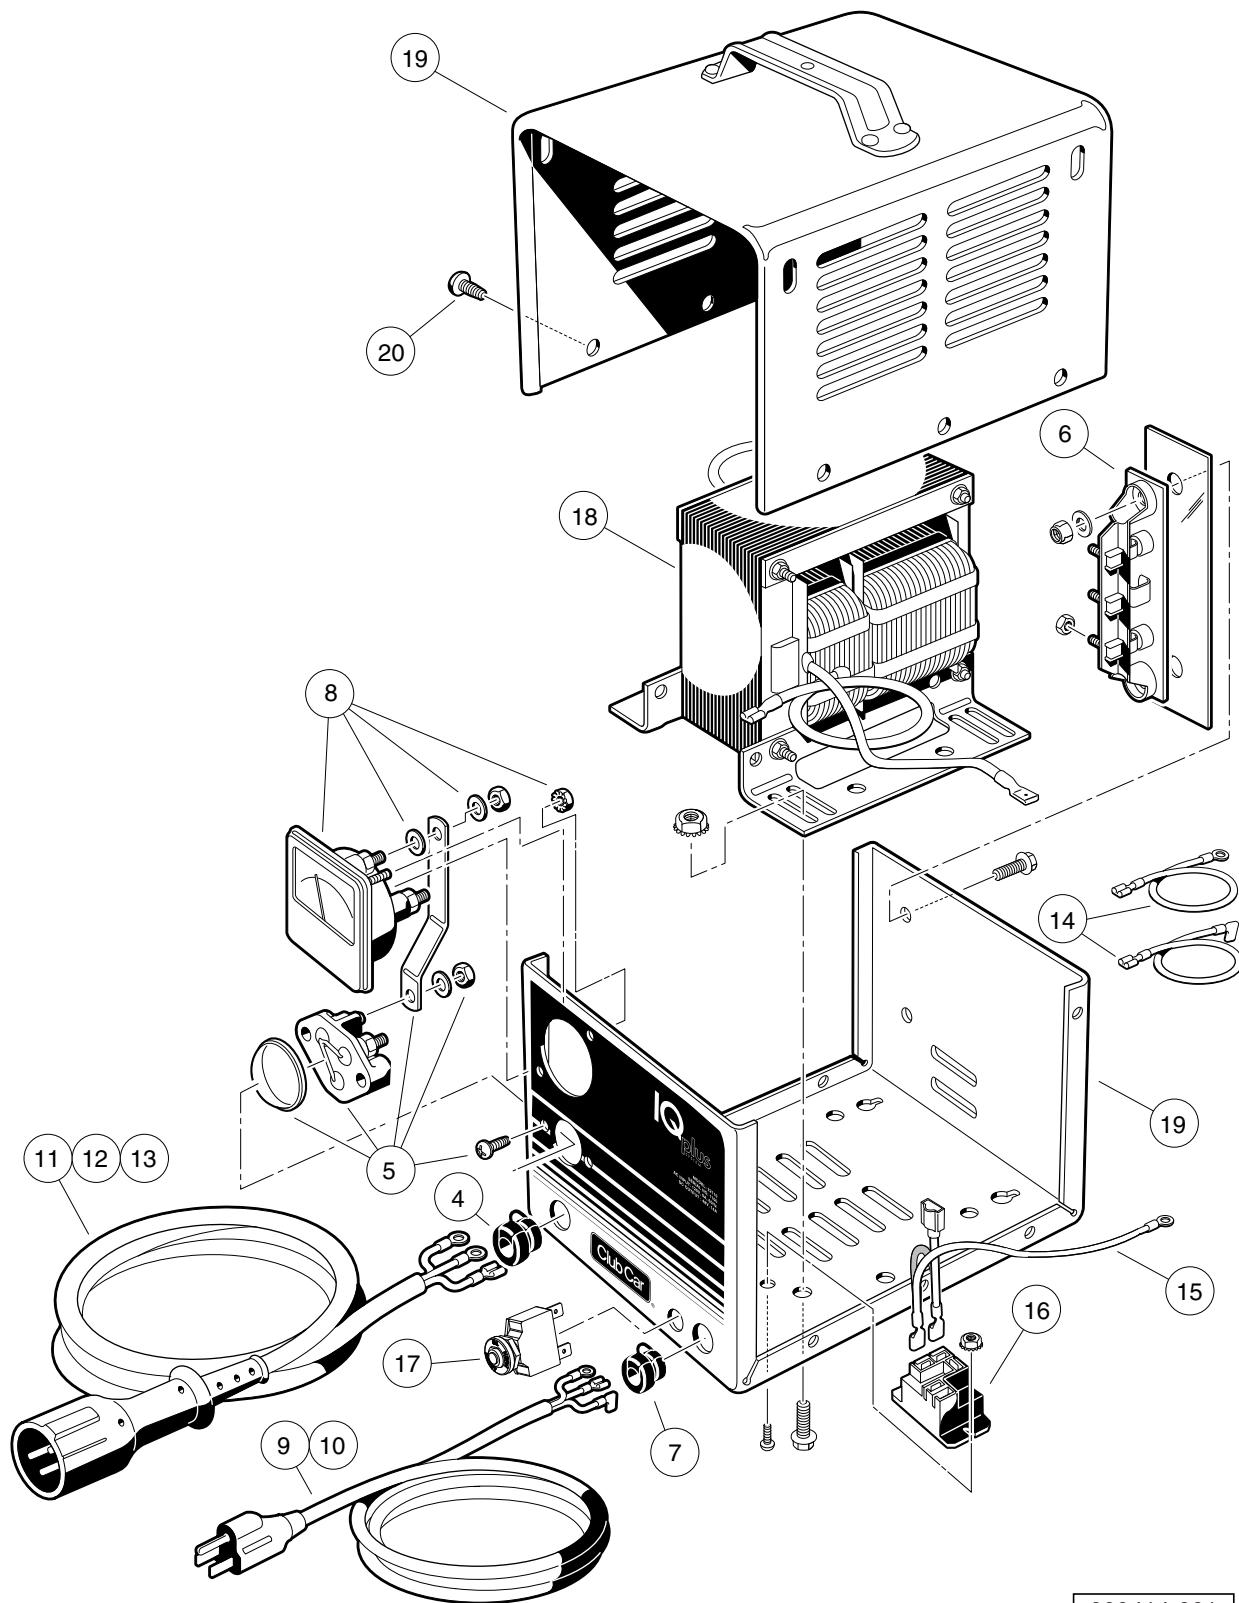
18

E

BATTERY CHARGERS – FROM EARLY- 2011 MODEL YEAR

19

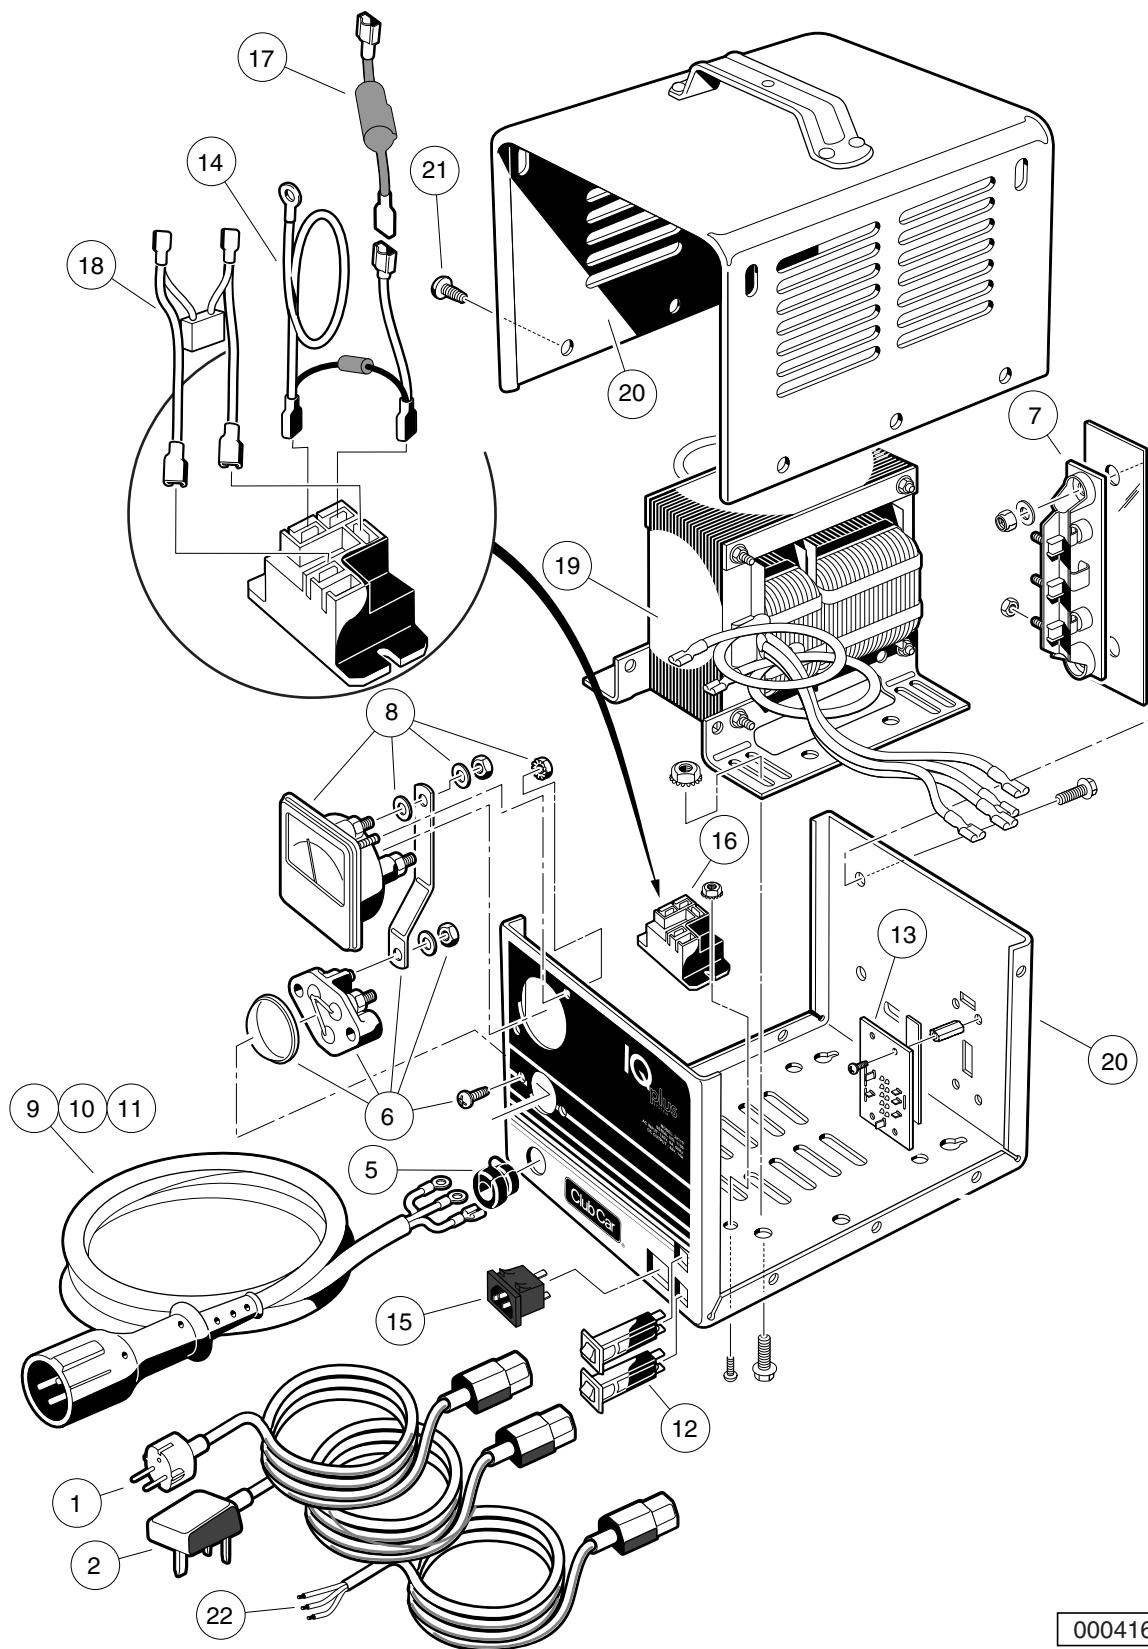
E

19**E**

000414-001

**IQ PLUS BATTERY CHARGER (MODELS 25730-11,-18,-19),
DOMESTIC**

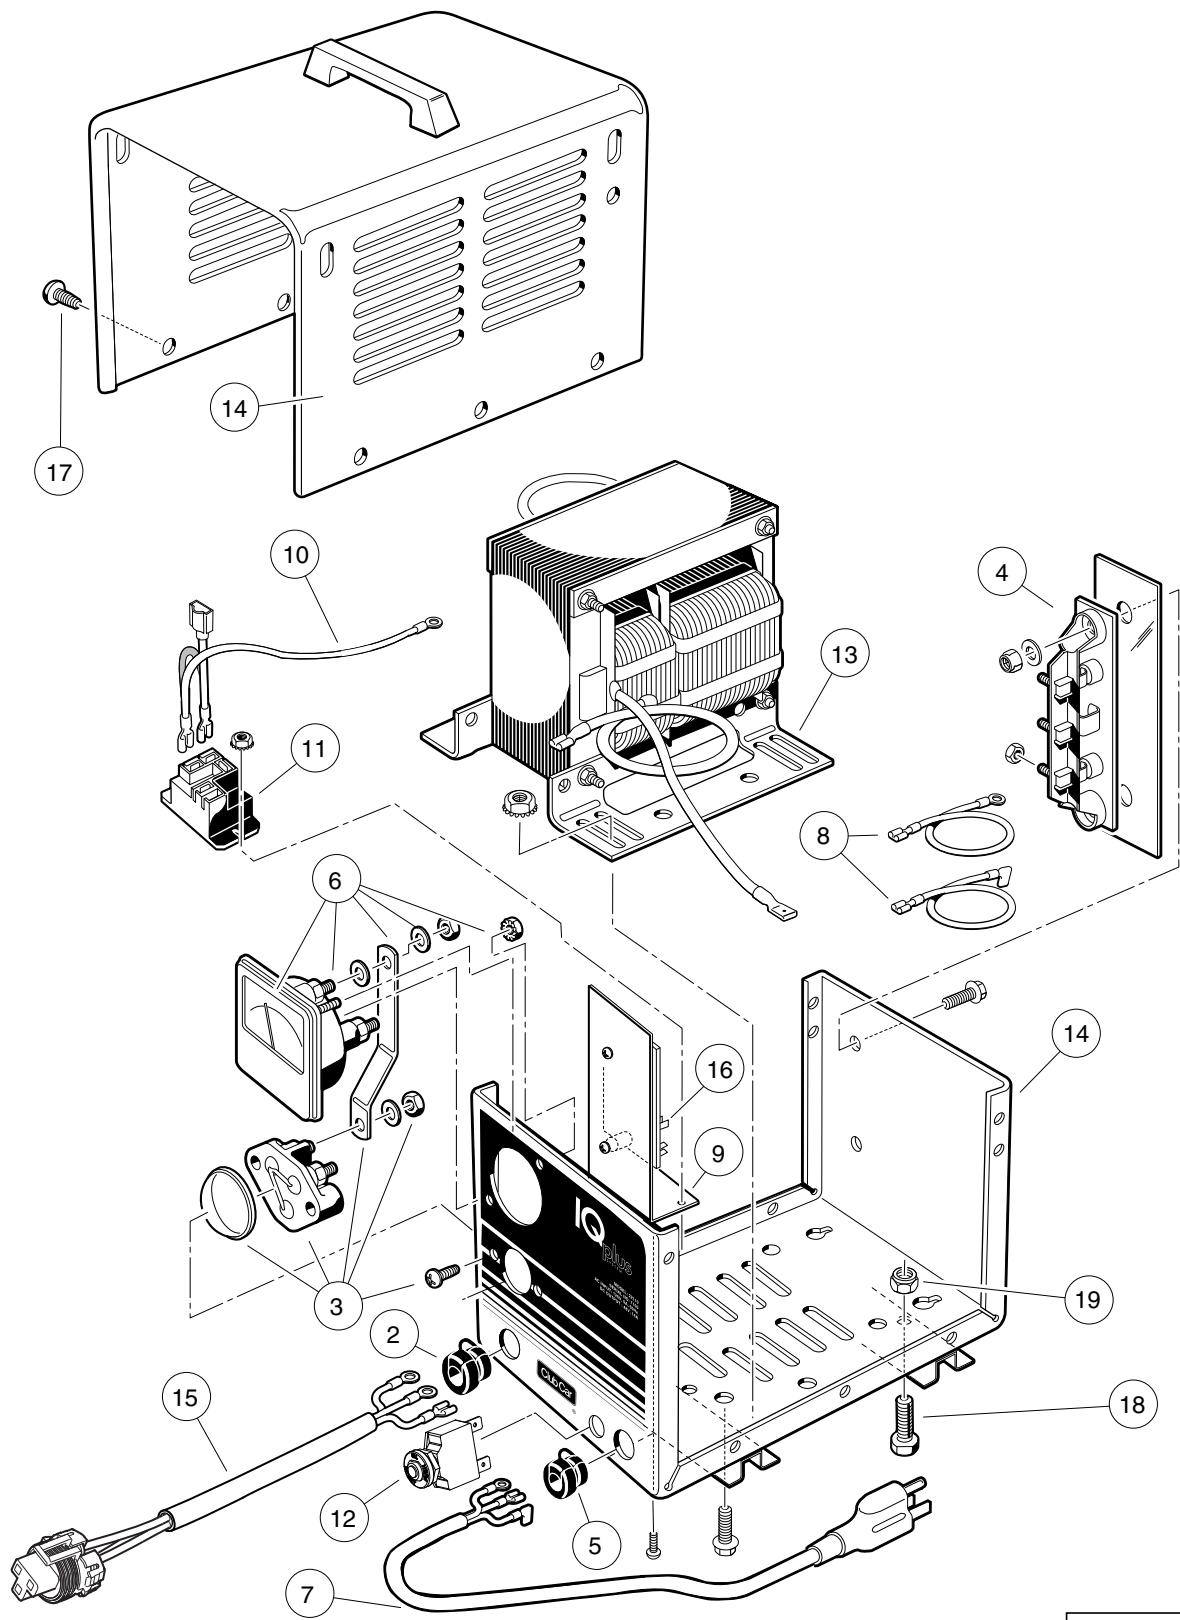
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102847801</u>	Charger, IQ Plus, Domestic (9-ft. DC Cord, 6-ft. AC Cord)	1
2	<u>102847802</u>	Charger, IQ Plus, Domestic (12-ft. DC Cord, 9-ft. AC Cord)	1
3	<u>102847803</u>	Charger, IQ Plus, Domestic (20-ft. DC Cord, 9-ft. AC Cord) (includes items 4 through 20)	1
4	<u>1012098</u>	Bushing, DC Cord	1
5	<u>1012101</u>	Fuse Assembly	1
6	<u>1015914</u>	Rectifier with Heatsink Assembly	1
7	<u>1015917</u>	Bushing, AC Cord	1
8	<u>101828501</u>	Ammeter	1
9	<u>101828801</u>	Cord, AC, 80-Inch (203 cm)	1
10	<u>101828802</u>	Cord, AC, 108-Inch (274 cm)	1
11	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1
12	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1
13	<u>101828903</u>	Cord, DC, 250-Inch (635 cm)	1
14	<u>101831101</u>	Wire Assembly Kit	1
15	<u>101914401</u>	Assembly, Voltage Suppressor	1
16	<u>102275401</u>	Relay, 48-VDC	1
17	<u>102838101</u>	Circuit Breaker 250vac-50vdc	1
18	N/A	Transformer, Battery Charger	1
19	N/A	Case, Battery Charger	1
20	7577	Screw, #10 X 0.50 Phillips Pan-Head	10

19**E**

000416-002

IQ PLUS BATTERY CHARGER (MODELS 25880-11 AND -18), INTERNATIONAL

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		19
1	<u>101958201</u>	Cord, UK, AC, Battery Charger	1	
2	<u>101958301</u>	Cord, European AC, Battery Charger	1	E
3	<u>102892901</u>	Charger, IQ Plus, International (9-ft. DC Cord)	1	
4	<u>102892902</u>	Charger, IQ Plus, International (12-ft. DC Cord) (includes items 5 through 21)	1	
5	<u>1012098</u>	Bushing, DC Cord	1	
6	<u>1012101</u>	Fuse Assembly	1	
7	<u>1015914</u>	Rectifier with Heatsink Assembly	1	
8	<u>101828501</u>	Ammeter	1	
9	<u>101828901</u>	Cord, DC, 113-Inch (287 cm)	1	
10	<u>101828902</u>	Cord, DC, 154-Inch (391 cm)	1	
11	<u>101828903</u>	Cord, DC, 250-Inch (635 cm)	1	
12	<u>101838401</u>	Circuit Breaker	2	
13	<u>101838601</u>	Four-Position Switch	1	
14	<u>101914401</u>	Assembly, Voltage Suppressor	1	
15	<u>101973501</u>	Receptacle, AC Cord	1	
16	<u>102275401</u>	Relay, 48-VDC	1	
17	N/A	Limiter, Current	1	
18	N/A	Wire Assembly, Battery Charger	1	
19	N/A	Transformer, Battery Charger	1	
20	N/A	Case, Battery Charger	1	
21	7577	Screw, #10 X 0.50 Phillips Pan-Head	10	
22	<u>102939501</u>	Cord, European AC, Battery Charger	1	

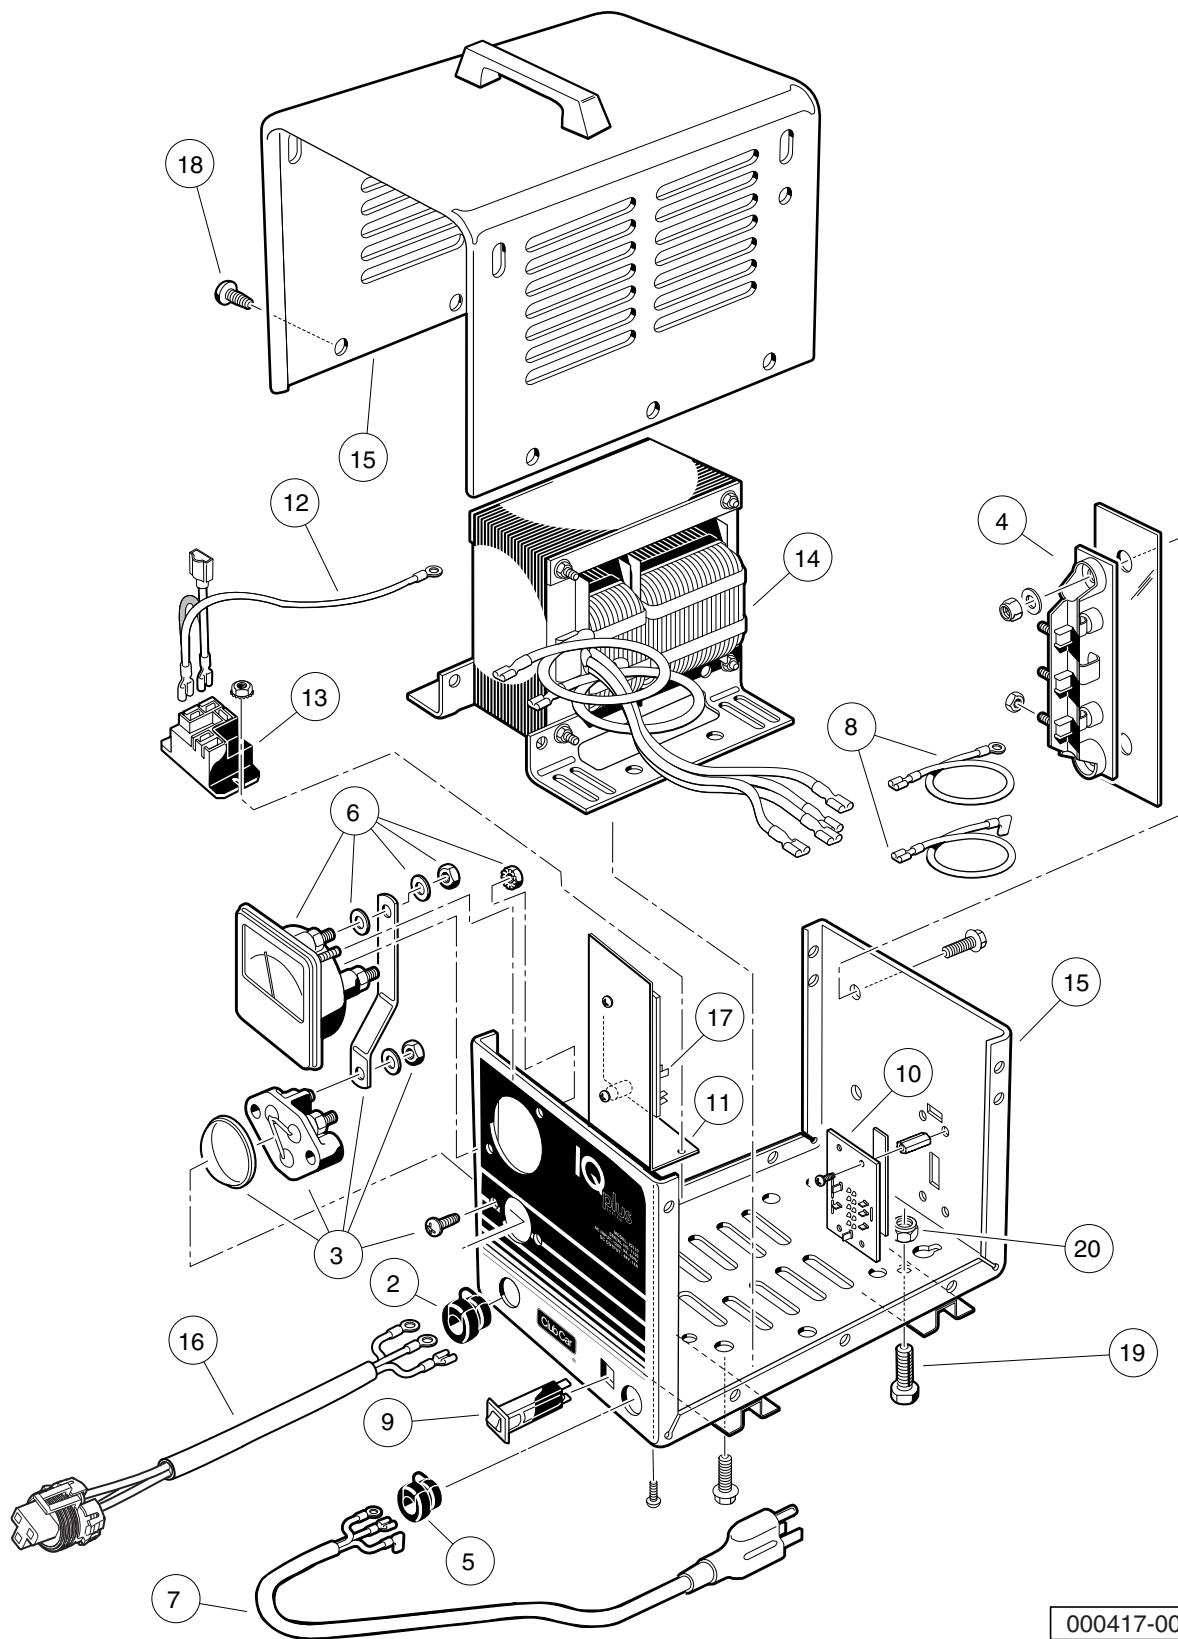
19**E**

000415-002

ONBOARD IQ PLUS BATTERY CHARGER (MODEL 25260-50), DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		19
1	<u>103772401</u>	Charger, IQ Plus, Onboard, Domestic (includes items 2 through 19)	1	
2	<u>1012098</u>	Bushing, DC Cord	1	E
3	<u>1012101</u>	Fuse Assembly	1	
4	<u>1015914</u>	Rectifier with Heatsink Assembly	1	
5	<u>1015917</u>	Bushing, AC Cord	1	
6	<u>101828501</u>	Ammeter	1	
7	<u>101829001</u>	Cord, AC, 22-Inch (56 cm)	1	
8	<u>101831101</u>	Wire Assembly Kit	1	
9	<u>101838701</u>	Mounting Bracket, Relay	1	
10	<u>101914401</u>	Assembly, Voltage Suppressor	1	
11	<u>102275401</u>	Relay, 48-VDC	1	
12	<u>102838101</u>	Circuit Breaker, 20 Amp	1	
13	N/A	Transformer, Battery Charger	1	
14	N/A	Case, Battery Charger	1	
15	<u>103832001</u>	Cord, DC, 20", Charger	1	
16	<u>103869401</u>	Control Board, Potted	1	
17	7577	Screw, #10 X 0.50 Phillips Pan-Head	12	
18	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	4	
19	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4	

Note: DC Cord (item 15) uses the Packard 480 Connector.

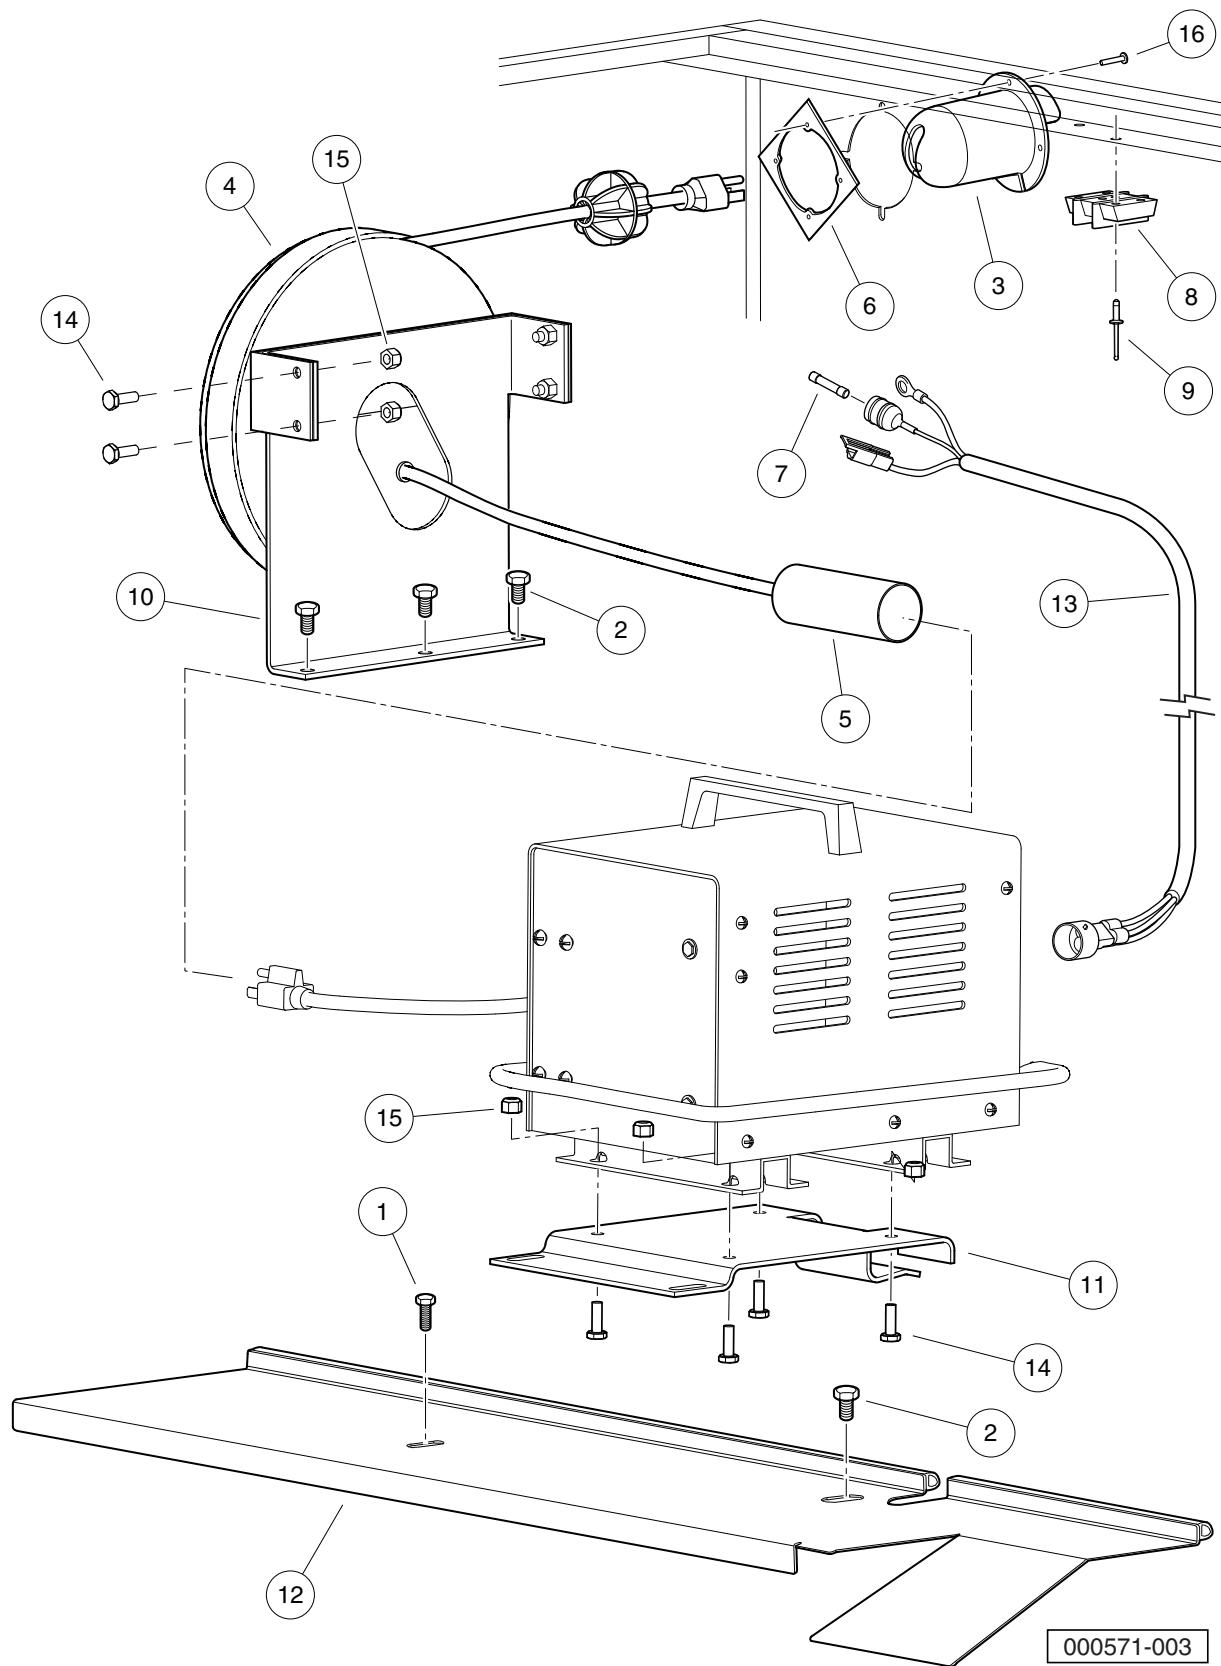
19**E**

000417-002

ONBOARD IQ PLUS BATTERY CHARGER (MODEL 25660-50), INTERNATIONAL

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		19
1	<u>103771601</u>	Charger, IQ Plus, Onboard, International (includes items 2 through 20)	1	
2	<u>1012098</u>	Bushing, DC Cord	1	
3	<u>1012101</u>	Fuse Assembly	1	
4	<u>1015914</u>	Rectifier with Heatsink Assembly	1	
5	<u>1015917</u>	Bushing, AC Cord	1	
6	<u>101828501</u>	Ammeter	1	
7	<u>101829001</u>	Cord, AC, 22-Inch (56 cm)	1	
8	<u>101831101</u>	Wire Assembly Kit	1	
9	<u>101838401</u>	Circuit Breaker	1	
10	<u>101838601</u>	Four-Position Switch	1	
11	<u>101838701</u>	Mounting Bracket, Relay	1	
12	<u>101914401</u>	Assembly, Voltage Suppressor	1	
13	<u>102275401</u>	Relay, 48-VDC	1	
14	N/A	Transformer, Battery Charger	1	
15	N/A	Case, Battery Charger	1	
16	<u>103832001</u>	Cord, DC, 20", Charger	1	
17	<u>103869401</u>	Control Board, Potted	1	
18	7577	Screw, #10 X 0.50 Phillips Pan-Head	12	
19	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4	
20	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4	

Note: DC Cord (item 16) uses the Packard 480 Connector.

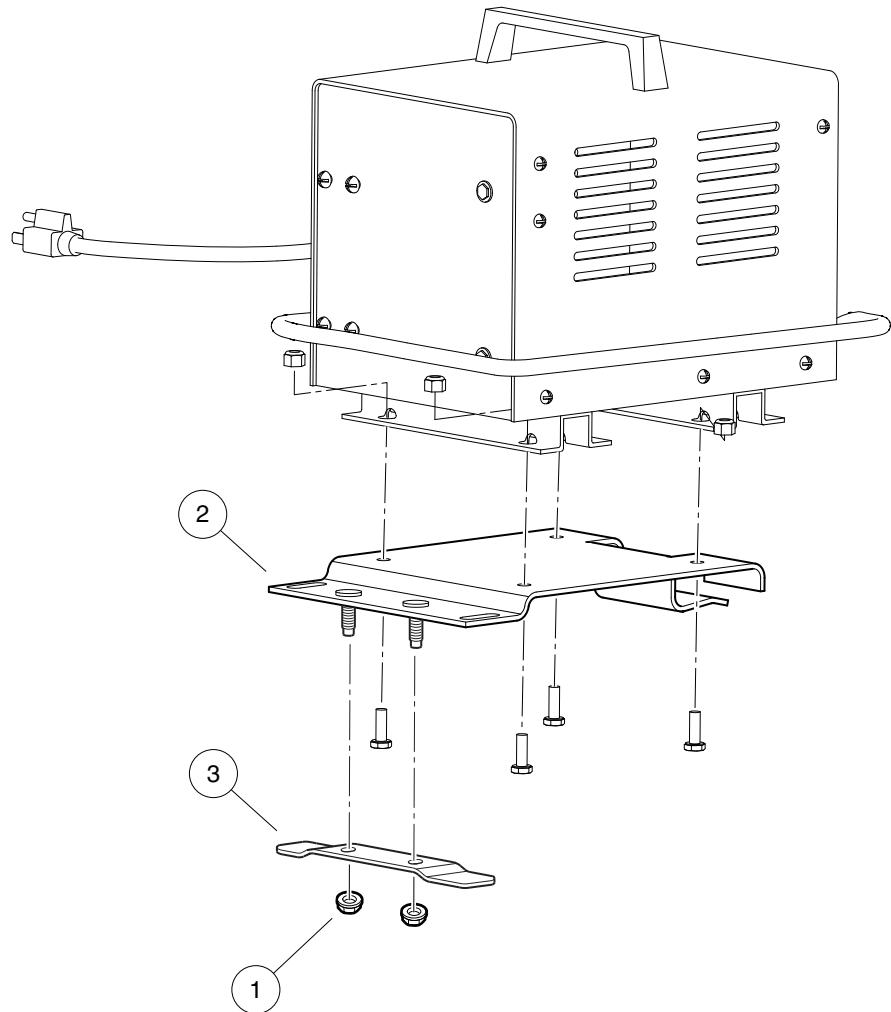
19**E**

ONBOARD IQ PLUS CHARGER AND CORD REEL MOUNTING (FROM EARLY-2011 MY), PAGE 1 OF 2

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014063</u>	Screw, 1/4-20 X 1.00, Hex Head	1
2	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	4
3	<u>1016673</u>	Housing, Cord Reel	1
4	<u>1017187</u>	Retractable Cord Reel	1
5	<u>1017189</u>	Heat Shrink Tube 1.5" X 3"	1
6	<u>101801001</u>	Plate, Receptacle Backing	1
7	<u>101894901</u>	Fuse, 3/8-Amp	1
8	<u>101966801</u>	Block, Terminal	1
9	<u>101968801</u>	Rivet, 3/16", Pop	2
10	<u>102770701</u>	Bracket, Reel, Tabbed	1
11	<u>102844001</u>	Plate, Charger Mounting	1
12	<u>103353501</u>	Shield	1
13	<u>103772301</u>	Harness, Wire, Charger, IQ Plus, 55"	1
14	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	8
15	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	8
16	<u>8796</u>	Screw, #7-19 X 0.75 Pan-Head Type AB	4
17	<u>8990</u>	Tie Wrap, 8" Nylon	4
		Note: Charger Harness (item 13) uses the Packard 480 Connector. NOTE 2: Tie Wrap (item 17) not shown. NOTE 3: See following page for parts specific to the international onboard charger.	

19

E



000572-003

**ONBOARD IQ PLUS CHARGER AND CORD REEL MOUNTING,
PAGE 2 OF 2**

ITEM	PART NO.	DESCRIPTION	QTY	
1	<u>101832901</u>	1 2 3 4 Nut, M10-1.25 Hex Flange	2	
2	<u>102844002</u>	Plate, Charger Mounting, with Studs, International	1	
3	<u>103189101</u>	Retainer, Charger Assembly	1	
Note: Items on this page are used only for the International Onboard IQ Plus Battery Charger.				E

19

E

MAINTENANCE AND SERVICE TOOLS

20

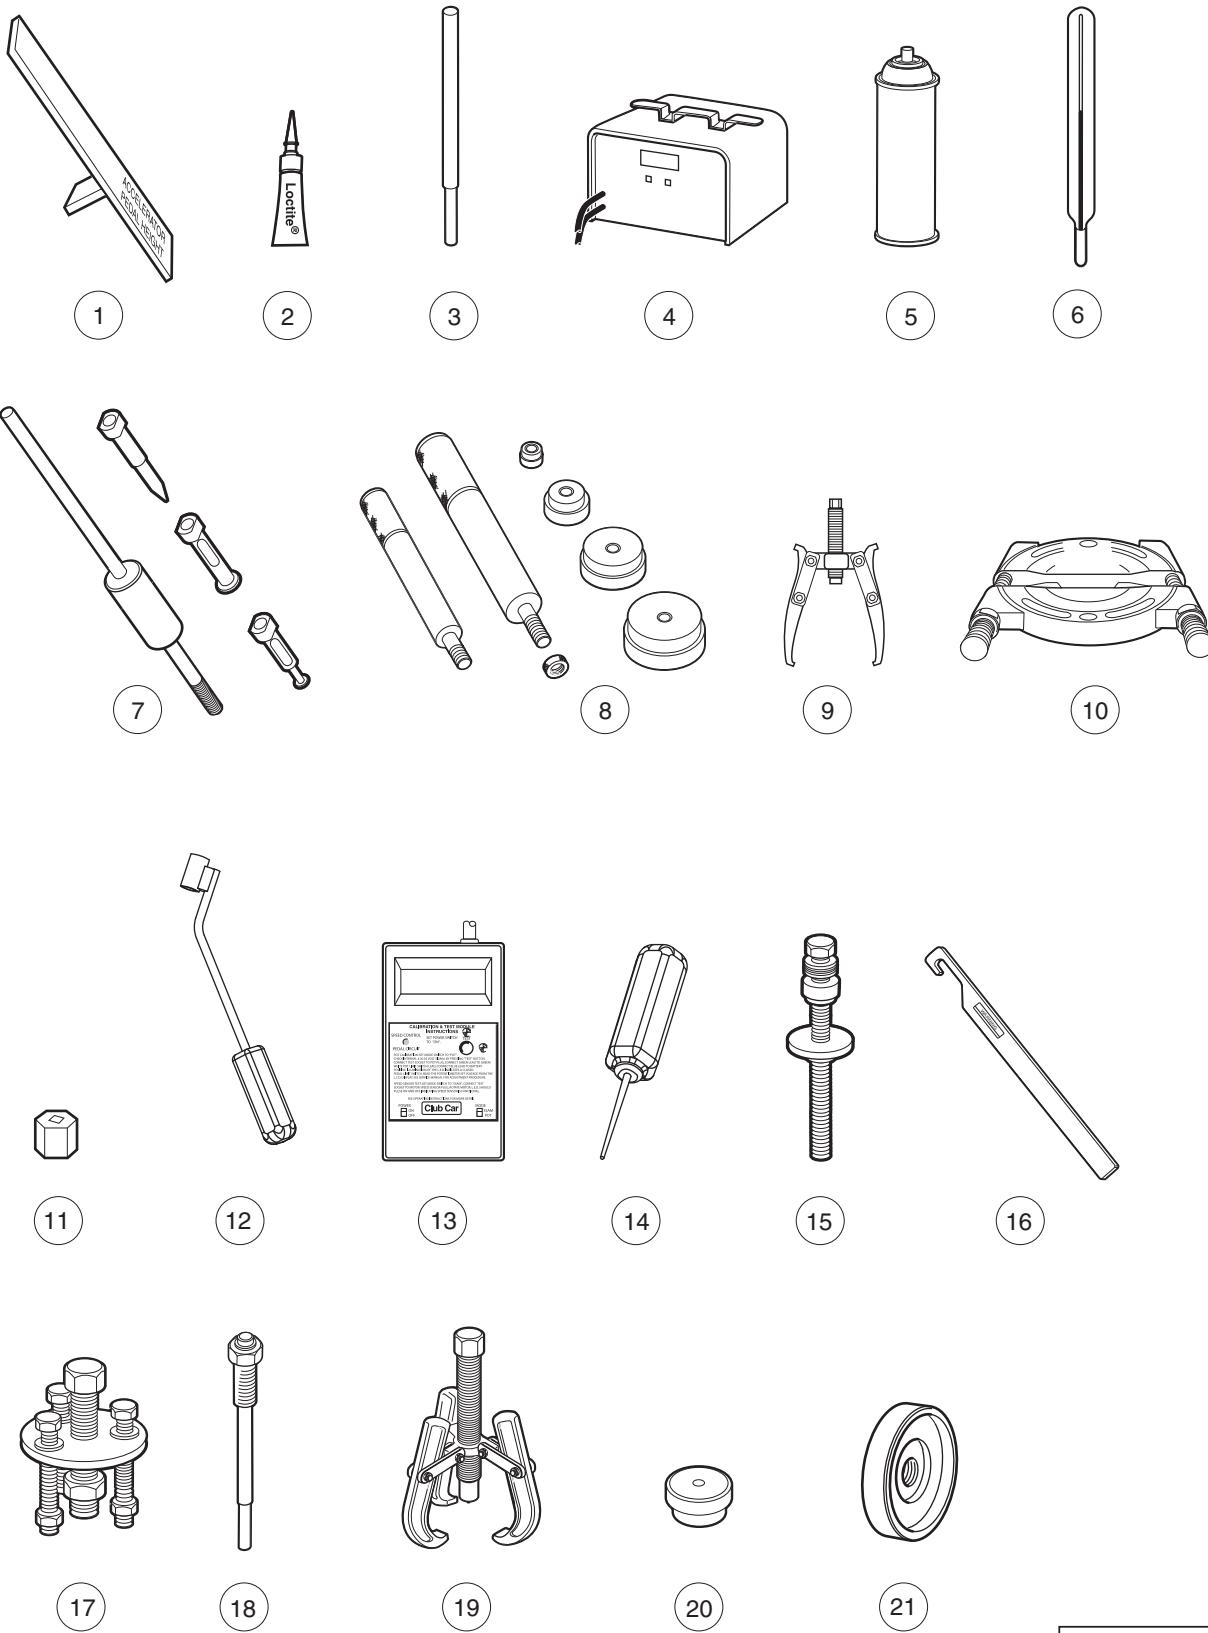
G

E

20

G

E



001600-001

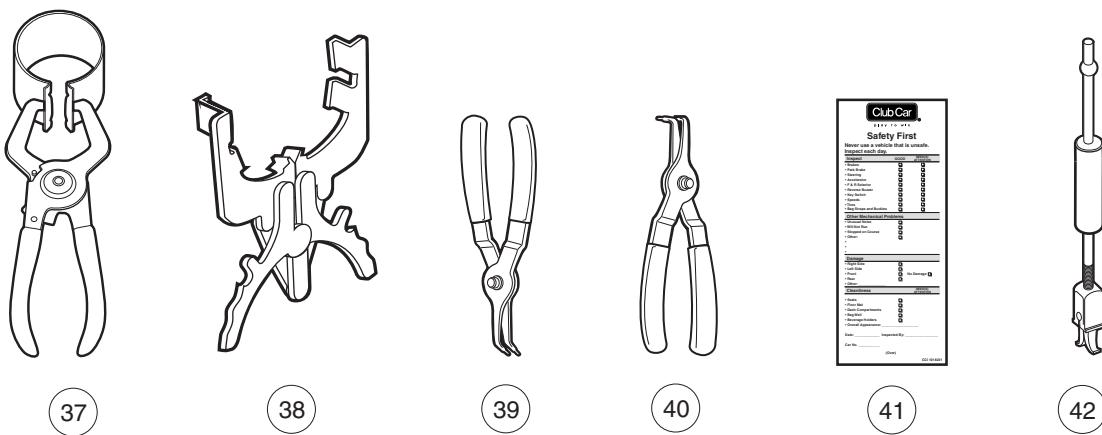
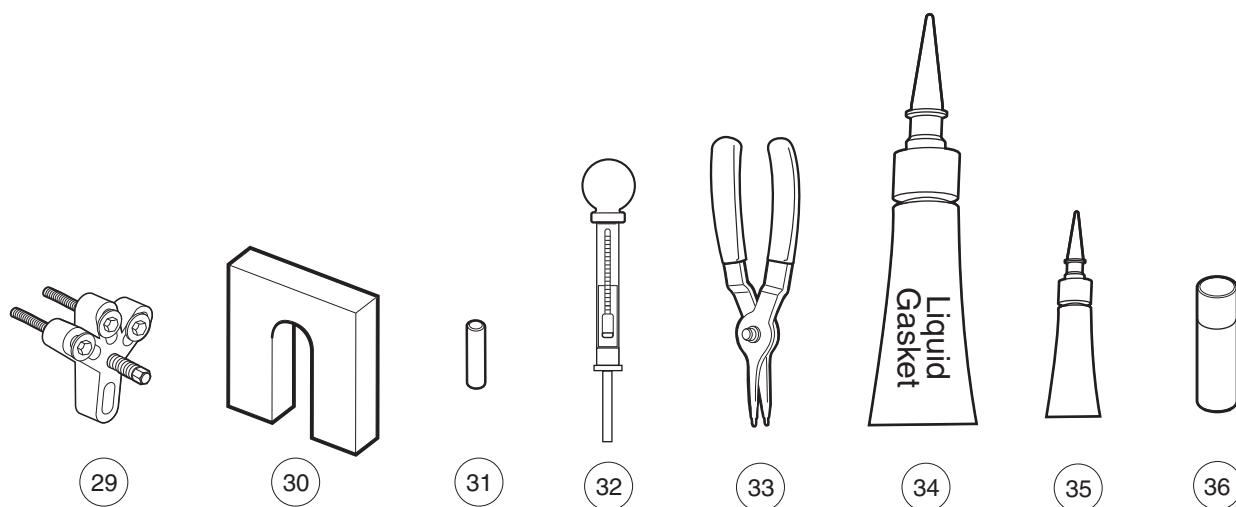
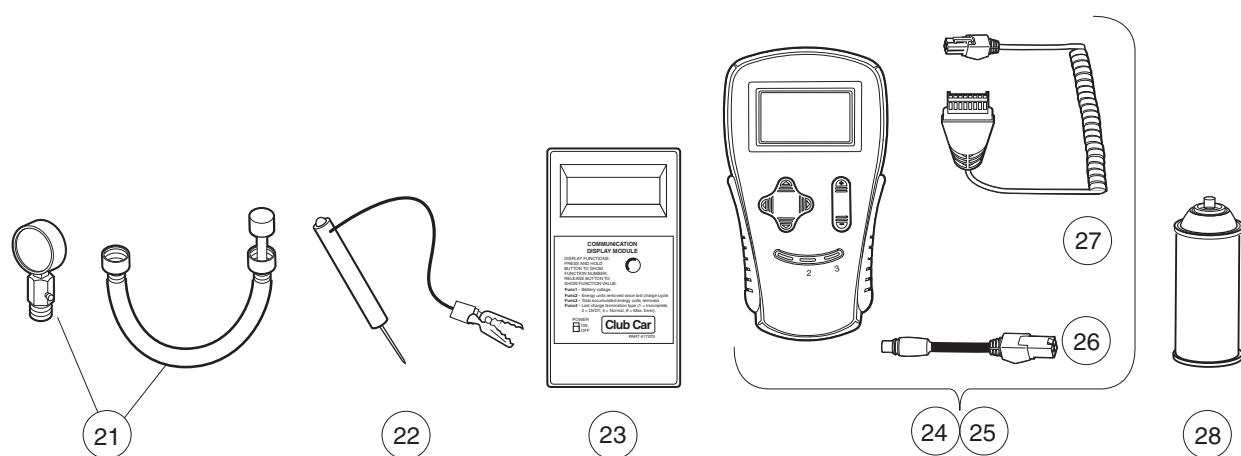
MAINTENANCE AND SERVICE TOOLS

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4 The following tool list includes all tools available from Club Car to perform maintenance and service procedures on all electric utility vehicles and all gasoline utility vehicles equipped with Kawasaki FE-series engines. Be sure to carefully examine the tool list for applicability to your vehicle before ordering.		
1	<u>101871001</u>	Accelerator Pedal Adjustment Tool (Utility Vehicles).....	1	1
2	<u>101813202</u>	Adhesive, Guide Ring, 3-Gram Tube		1
3	<u>101641202</u>	Arbor	1	
4	<u>101831901</u>	Battery Discharge Machine, 36/48 Volt		1
5	<u>1014305</u>	Battery Terminal Protector Spray	1	1
6	<u>1011767</u>	Battery Thermometer	1	1
7	<u>1016417</u>	Bearing and Oil Seal Remover Assembly	1	1
8	<u>1016416</u>	Bearing Driver Set	1	1
9	<u>1012811</u>	Bearing Puller	1	1
10	<u>1012812</u>	Bearing Puller Wedge Attachment	1	1
11	<u>1013582</u>	Brake Adjustment Tool (used only on vehicles with manually adjusted mechanical brakes)	1	1
12	<u>102555501</u>	Brake Cable Release Tool	1	1
13	<u>101887101</u>	Calibration Test Module		1
14	<u>102562401</u>	Charger Bezel Tool		1
15	<u>101808401</u>	Clutch Tools (items 14 - 20)	1	
16	<u>1015524</u>	Clutch Cam Installation Tool (for Kawasaki engines)	1	
17	<u>1014497</u>	Drive Clutch Holder Tool Assembly (for Kawasaki engines)	1	
18	<u>1014496</u>	Drive Clutch Hub Puller (for Kawasaki engines)	1	
19	<u>1014508</u>	Drive Clutch Puller (for Kawasaki engines)	1	
20	<u>1014507</u>	Driven Clutch Cam Puller (for Kawasaki engines)	1	
21	<u>101809101</u>	Driven Clutch Puller Plug (for Kawasaki engines)	1	
		Please refer to the maintenance and service manual for proper tool application.		

20

G

E

20**G****E**

001601-001

MAINTENANCE AND SERVICE TOOLS, CONTINUED

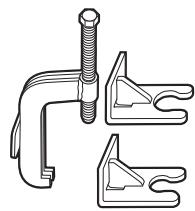
ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	
		1 2 3 4			20
21	101641002	Compression Gauge and Adapter	1		G
22	1011273	Continuity Tester	1	1	
23	101831801	Communication Display Module		1	
24	<u>102248803</u>	IQ Display Module (IQDM) Kit (IQ System and IQ Plus vehicles)		1	
		(includes items 54 and 55)			
25	102248804	IQ Display Module (IQDM-P) Kit (IQ System and IQ Plus vehicles)		1	
		(includes items 54 and 55)			
26	<u>102251501</u>	Adaptor, Cable		1	
27	<u>102241502</u>	IQDM Series 2 Cable		1	
28	<u>1012151</u>	Dry Moly Lubricant	1	1	
29	<u>1016627</u>	Flywheel Puller Kit (for Kawasaki Engines)	1		
30	<u>1016418</u>	Gear Yoke	1	1	
31	<u>101933101</u>	Governor Shaft Installation Tool (for Kawasaki Engine Vehicles)	1		
32	<u>1011478</u>	Hydrometer	1	1	
33	<u>1013593</u>	Internal Retaining Ring Pliers	1	1	
34	<u>101928701</u>	Liquid Gasket (transaxle case)	1	1	
35	<u>102243402</u>	Moly-Teflon Lubricant (4-oz. (113-gram) tube)		1	
36	<u>101997201</u>	Paint, Touch-Up ,Äì Beige*	1	1	
36	<u>101997207</u>	Paint, Touch-Up ,Äì Black*	1	1	
36	<u>101997212</u>	Paint, Touch-Up ,Äì Burgundy*	1	1	
36	<u>101997211</u>	Paint, Touch-Up ,Äì Classic Blue (Navy)*	1	1	
36	<u>101997205</u>	Paint, Touch-Up ,Äì Dark Gray*	1	1	
36	<u>101997209</u>	Paint, Touch-Up ,Äì Dark Green*	1	1	
36	<u>101997204</u>	Paint, Touch-Up ,Äì Gray*	1	1	
36	<u>101997203</u>	Paint, Touch-Up ,Äì Red*	1	1	
36	<u>101997206</u>	Paint, Touch-Up ,Äì Royal Blue (Pacific Blue)*	1	1	
36	<u>101997202</u>	Paint, Touch-Up ,Äì White*	1	1	
37	<u>1016414</u>	Piston Ring Compressor Kit	1		
38	<u>1016415</u>	Piston Ring Pliers	1		
39	<u>1012549</u>	Retaining Ring Pliers, 45-× External	1	1	
40	<u>1012560</u>	Retaining Ring Pliers, 90-× Internal	1	1	
41	<u>101823101</u>	Safety First Card (50 per pack)	1	1	
42	<u>1012809</u>	Seal Puller	1	1	
		Please refer to the maintenance and service manual for proper tool application.			

20**G****E**

43




44




45



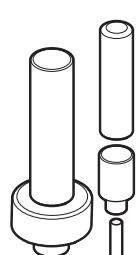
46




47



48




49



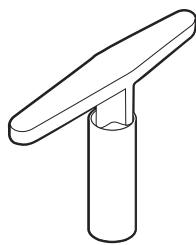
51



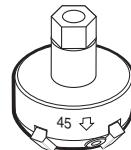
52



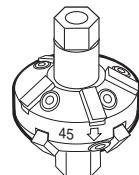
53



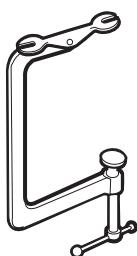
54



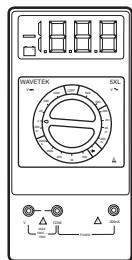
55



56



57



58

001602-001

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	
		1 2 3 4			20
43	<u>1014264</u>	Steering Column Bearing Press Tool	1	1	G
44	<u>1014259</u>	Steering Column Retaining Ring Tool	1	1	
45	102061201	Steering Wheel Puller Tool	1	1	E
46	<u>AM10753</u>	Tachometer (includes gasoline engine pick up lead only)	1		
47	<u>1014162</u>	Transaxle Axle Seal Tool (for electric vehicles)		1	
48	<u>1014161</u>	Transaxle Pinion Seal Tool (for electric vehicles)		1	
49	<u>1014115</u>	Transmission Tool Kit (for electric vehicles).....		1	
50	<u>101611003</u>	Tune-Up Kit, All OHV (for FE290, FE350, FE400 only) (includes air filter, spark plug, oil filter, fuel filters) (not shown)	1		
51	<u>1016413</u>	Valve Clearance Adjuster Screw Holder (for FE290 engines only)	1		
52	101641201	Valve Guide Reamer (FE290, FE350, and FE400 only).....	1		
53	<u>1016552</u>	Valve Seat Cutter Guide	1		
54	<u>1016551</u>	Valve Seat Cutter T-Wrench	1		
55	<u>1016553</u>	Valve Seat Cutter, 45-× (32 mm diameter) (for FE290 engines only)	1		
56	<u>1016554</u>	Valve Seat Cutter, 45-×/30-× (35 mm diameter)	1		
57	<u>101641101</u>	Valve Spring Compressor	1		
58	1011480	Volt Ohm Meter	1	1	
		Please refer to the maintenance and service manual for proper tool application.			

INDEX

Part Number and Page

AM10753	20-7	1620	4-3	8797	10-3
AM10015	4-43, 4-45	1624	5-5, 5-7, 6-3, 7-5, 8-13	8861	6-15, 6-23, 6-31, 7-17, 7-25
AM10080	13-9	1631	10-15	8935	1-7
AM10081	13-9	2402	6-15, 6-23, 7-17	8963	1-27, 1-29, 1-31, 14-11, 14-13, 14-15, 14-17, 15-11, 15-13, 15-15, 15-17
AM10419	12-9, 12-11	4029	4-47, 4-49	8990	1-51, 1-53, 1-55, 4-7, 4-11, 4-13, 4-15, 4-31, 4-33, 4-39, 4-43, 4-45, 4-51, 6-3, 7-5, 8-17, 8-19, 8-21, 14-25, 15-25, 18-11, 19-11
AM10808	1-7	7048	6-13, 6-21, 7-15	1010005	6-13, 6-21, 7-15
AM1232301	9-5	7049	1-43	1010028	13-3
AM1243501	4-41	7173	1-15, 4-7, 4-10, 6-31, 7-25, 8-27	1010086	1-49
AM1243701	4-37, 4-39, 4-41	7174	1-55, 1-61, 1-65, 6-7, 7-9, 8-13, 10-13, 11-3, 16-3	1010124	6-17, 6-25, 7-19
AM1243801	4-37, 4-39, 4-41	7251	1-5, 1-7, 1-15	1010138	1-51, 1-53, 1-55, 6-15, 6-23, 7-17
AM1264001	1-63	7274	6-13, 6-21, 7-15	1010145	6-27, 6-29, 7-21, 7-23
AM1304001	1-71	7308	6-13, 6-21, 7-15	1010150	6-17, 6-25, 7-19
AM1304101	1-71	7310	2-3, 2-5, 2-7	1010177	1-55, 6-17, 6-25, 7-19
AM1304201	1-71	7311	1-27, 1-29, 1-31, 1-49, 6-31, 7-25	1010200	6-17
AM1304301	1-71	7330	13-11, 17-3	1010237	1-27, 1-29, 1-31
AM1304401	1-71	7335	13-9, 17-3	1010434	1-5, 1-7, 1-9, 1-41
AM1304501	1-71	7336	17-3	1010435	1-5, 1-7, 1-35, 1-45, 1-51, 1-53
AM1304601	1-71	7473	1-5, 1-7, 1-27, 1-29, 1-31, 1-35, 1-43, 1-45, 1-51, 1-53, 1-55, 1-87, 4-7, 4-11, 4-43, 4-45, 5-3, 5-5, 5-7, 5-13, 5-15, 5-21, 6-31, 7-3, 7-25, 8-17, 8-19, 8-21, 8-27, 14-11, 14-13, 14-15, 14-17, 15-11, 15-13, 15-15, 15-17	1010436	1-45
AM1304701	1-71	7479	1-49	1010543	1-19
AM1304801	1-71	7532	1-35	1010546	1-5
AM1304901	1-71	7561	1-51, 1-53, 1-55	1010577	9-15
AM1305001	1-71	7577	18-3, 18-5, 18-7, 18-9, 19-3, 19-5, 19-7, 19-9	1010805	5-3
AM1305101	1-71	7591	4-5, 4-7, 4-9, 4-11	1010829	5-13, 5-15, 5-21
AM1305201	1-71	7716	5-3, 5-5, 5-7	1010850	5-11, 5-17
SVP184001	3-9, 3-21, 3-25	7818	8-17, 8-19, 8-21	1010877	5-3
183	4-5, 4-9, 4-13, 4-15, 4-35, 4-41, 8-19, 10-3, 10-15, 12-5, 12-7, 13-7, 13-13	7820	4-7, 4-11, 4-47, 4-49	1010878	1-37, 5-3
304	1-69, 1-85, 4-6, 4-9, 4-47, 4-49, 13-5	7840	6-13, 6-21, 7-15	101090801	14-11, 14-13, 14-15, 14-17, 15-11, 15-13, 15-15, 15-17
320	1-55	7847	1-13, 1-39, 1-67, 11-3, 18-7, 18-9, 18-11, 19-7, 19-9, 19-11	1010909	4-5, 4-35
324	4-37, 4-39	7893	4-7, 4-13, 4-15, 4-35, 8-17, 8-19, 8-21, 13-5	1010921	1-27, 1-29, 1-31, 5-3
332	1-19, 1-37, 1-39, 1-43, 1-45, 1-49, 1-67, 1-69, 4-7, 4-9, 4-37, 4-39, 4-47, 4-49, 8-15, 10-15, 11-3	7910	6-13, 6-21, 7-15	1010927	5-3
334	1-39, 5-5, 5-7, 6-3, 6-5, 7-5, 7-7, 9-15, 12-5, 12-7	7973	1-11, 10-15	1010932	5-3
357	1-51, 1-53, 1-55, 1-61, 6-17, 6-25, 6-31, 7-19, 7-25	8057	8-17, 8-19, 8-23, 13-3	1010933	5-3
403	1-35	8058	8-17, 8-19, 8-23, 13-3	1010934	1-7, 1-43, 1-49, 1-55, 1-61, 1-65, 4-43, 4-45, 8-27, 16-3
451	5-11, 5-17, 11-3, 16-3	8067	6-13, 6-21, 7-15	1010954	8-17, 8-19, 8-21, 13-7, 13-13
705	1-51, 1-53, 1-55, 1-61, 9-15	8104	4-13, 4-15, 13-3	1010984	2-3, 2-5, 2-7
706	1-51, 1-53, 1-55, 1-61, 6-17, 6-25, 7-19	8233	1-27, 1-29, 1-31, 1-37, 1-39, 1-43, 1-45, 1-67, 1-69, 1-85, 4-7, 4-11, 4-37, 4-39, 4-47, 4-49, 4-51, 5-5, 5-7, 6-31, 7-25, 8-15, 10-13, 13-5, 13-7, 13-13, 18-7, 18-9, 18-11, 19-7, 19-9, 19-11	1011014	1-5, 1-7
808	1-39, 6-31, 7-25, 12-5, 12-7	8248	1-15, 8-15	1011017	1-5, 1-7, 4-27
1016	4-5, 4-9, 4-13, 4-15, 4-35, 8-19, 10-3	8251	1-33	1011084	5-9
1017	4-3, 4-5, 4-9, 8-19	8294	4-47, 4-49	1011114	5-11, 5-17
1028	5-3	8450	8-19, 12-5, 12-7	1011137	5-11
1032	1-41, 5-3	8639	1-3, 1-85, 4-11, 4-41, 13-5, 14-25, 15-25	1011154	5-11, 5-17
1035	1-39, 1-85	8717	5-7, 8-17, 8-19, 8-21, 13-3, 13-7, 13-13	1011226	1-85
1108	1-49	8754	1-35, 5-5, 5-7, 6-3, 6-5, 6-15, 6-17, 6-23, 6-25, 6-27, 6-29, 7-5, 7-7, 7-17, 7-19, 7-21, 7-23, 8-13	1011229	4-5, 4-9
1218	1-27, 1-29, 1-31, 4-5, 7-3	8755	1-35, 6-17, 6-25, 6-27, 7-19, 7-21, 7-23	1011273	20-5
1231	1-41	8796	18-11, 19-11	1011291	13-11
1241	1-5, 1-7, 1-27, 1-29, 1-31, 1-55, 1-61, 1-65, 4-5, 4-9, 4-43, 4-45, 5-3, 5-5, 5-7, 5-15, 5-21, 7-3, 8-13, 8-17, 8-19, 8-21, 8-27, 11-3			1011298	5-11, 5-17
1242	1-55, 1-61, 1-65, 5-13, 5-15, 5-21, 8-13, 8-17, 8-19, 8-21			1011303	5-11, 5-17
1606	10-15			1011314	5-11, 5-17
				1011382	4-17, 4-19, 4-21, 4-23
				1011393	6-13, 6-21, 7-15
				1011394	1-5, 1-7
				1011402	5-3

INDEX

1011415	6-27, 6-29, 7-21, 7-23	1012333	13-5	1013509	4-37, 4-39
1011418	5-3	1012349	1-85	1013531	5-15, 5-21
1011439	4-5, 4-9	1012382	8-3, 8-5, 8-7	1013579	4-51
101146302	5-11, 5-17	1012396	4-17, 4-19, 8-3, 8-5, 8-7	1013582	20-3
1011464	5-11, 5-17	1012431	8-17, 8-19	1013589	8-17, 8-19, 8-21
1011465	5-11, 5-17	1012438	4-9, 4-41, 10-15	1013593	20-5
1011466	5-11, 5-17	1012463	1-55	1013609	8-17, 8-19, 8-21
1011467	5-11, 5-17	1012505	4-17, 4-19, 4-21, 4-23	1013677	3-5, 3-9
1011478	20-5	1012528	11-3, 14-21, 14-23, 15-21, 15-23	1013687	10-3
1011480	20-7	1012549	20-5	1013700	10-13
1011494	5-11, 5-17	1012560	20-5	1013734	11-3, 14-21, 14-23, 15-21, 15-23
1011546	1-63	1012565	6-11, 7-13	1013746	10-3, 10-5, 10-7, 10-11
1011553	1-61, 1-65, 3-5, 3-9, 3-13, 3-17, 3-21, 3-25	1012566	6-11, 7-13	1013760	13-7
1011557	4-5, 4-9	1012571	9-15, 14-11, 14-13, 14-15, 14-17, 15-11, 15-13, 15-15, 15-17	1013768	13-11
1011558	4-5, 4-9	1012604	6-5, 7-7	1013769	13-11
1011578	1-7, 6-5, 7-7	1012605	6-5, 7-7	1013770	13-11
1011582	4-53	1012640	2-9	1013771	13-11
1011590	4-13	1012641	2-9	1013772	13-11
1011694	5-5, 5-7	1012642	2-9	1013773	13-11
1011697	6-5, 7-7, 9-15, 10-13	1012649	10-3, 10-5, 10-7	1013774	13-11
1011734	5-9	1012711	13-7	1013787	13-11
1011767	20-3	1012714	13-9	1013792	13-11
1011779	5-13, 5-15, 5-21	1012740	13-9	1013794	13-11, 17-3
1011825	4-5, 4-9, 4-47, 4-49	1012741	13-9	1013824	1-15
1011843	4-53	1012747	13-9	1013825	1-15
1011852	1-27, 1-29, 1-31	1012748	13-9	1013846	1-15
1011862	1-27, 1-29, 1-31	1012752	13-7	1013857	4-5, 4-9
1011865	1-27, 1-29, 1-31	1012809	20-5	1013869	5-3
1011868	1-27, 1-29, 1-31	1012811	20-3	1013870	5-3
101187702	5-3	1012812	20-3	1013871	5-5, 5-7
1011878	1-15	1012830	8-13, 10-13, 11-3	1013876	5-3
1011883	1-27, 1-29, 1-31	1012836	12-9, 12-11	1013924	5-11, 5-17, 5-19, 9-15
1011887	6-13, 6-21, 7-15	1012896	13-7	1014007	5-5, 5-7, 10-13, 13-7, 13-13
1011892	6-13, 6-21, 7-15	1013035	6-3, 7-5	1014049	12-5, 12-7
1011897	1-25	1013042	6-3, 6-15, 6-23, 7-5, 7-17	1014050	12-5, 12-7
1011931	5-5, 5-7	1013044	6-3, 7-5	1014051	12-5
1011937	1-27, 1-29, 1-31	1013052	6-3, 7-5	1014052	12-5, 12-7
1011942	1-27, 1-29, 1-31	1013061	13-3, 13-7, 13-13, 14-7, 15-7	1014055	12-5, 12-7
1011962	1-57	10131402	10-5, 10-7	1014056	12-5, 12-7
1011964	1-27, 1-29, 1-31, 1-85	1013135	6-13, 6-21, 7-15	1014057	12-5, 12-7
1011990	1-41, 1-51, 1-53, 1-55, 1-61	1013207	6-27, 7-21	1014058	12-5, 12-7
1012008	1-27, 1-29, 1-31	1013309	1-19	1014059	12-5, 12-7
1012098	18-3, 18-5, 18-7, 18-9, 19-3, 19-5, 19-7, 19-9	1013311	1-19	1014062	12-5, 12-7
1012101	18-3, 18-5, 18-7, 18-9, 19-3, 19-5, 19-7, 19-9	1013312	1-19	1014063	12-5, 12-7, 18-11, 19-11
1012151	20-5	1013317	1-41, 3-27, 3-29, 3-31	1014065	8-17, 8-19, 8-21, 12-5, 12-7
1012180	6-27, 7-21	1013343	1-11	1014070	12-9, 12-11
1012181	6-29	1013344	1-11	1014072	12-9, 12-11
1012182	6-29	1013357	4-5, 4-9, 14-5, 15-5	1014078	12-9, 12-11
1012285	1-67, 1-69, 1-85, 4-51, 10-3, 10-5, 10-7, 10-13	1013366	1-45	1014080	12-9, 12-11
1012295	8-17, 8-19, 8-21	1013420	1-13	1014109	4-5
1012303	1-35, 6-17, 6-19, 6-25, 6-27, 6-29, 7-19, 7-21, 7-23	1013422	1-13	1014115	20-7
1012304	6-27	1013461	10-3	1014116	10-3
		1013462	10-3	1014119	8-3, 8-5, 8-7, 8-17, 8-19, 8-21
		1013483	1-61	1014125	6-5, 7-7
		1013494	4-17, 4-19, 4-21, 4-23	1014126	6-5, 7-7
				1014145	8-17, 8-19, 8-21

INDEX

1014153	5-11, 5-17, 5-19	1015162	4-37	1015624	1-55
1014161	20-7	1015167	4-41	101562711	1-19
1014162	20-7	1015170	4-41	101562712	1-19
1014201	16-3	1015172	4-37, 4-39	101562714	1-19
1014207	13-11	1015187	4-37, 4-39, 4-41	101562715	1-19
1014213	6-5, 7-7	101524002	8-13	101564501	1-19
1014214	6-5, 7-7	1015245	1-41	101564502	1-19
1014217	6-5, 7-7	1015252	1-35	101564503	1-19
1014259	20-7	1015258	1-35	101564505	1-19
1014264	20-7	1015277	1-37	1015649	9-3
1014276	6-17, 6-25, 7-19	1015313	1-41	1015654	1-49
1014287	12-5, 12-7	1015332	8-3, 8-5, 8-7, 9-3	1015656	1-49
1014288	6-5, 7-7, 8-27, 12-5, 12-7, 18-11, 19-11	1015345	8-17, 8-19, 8-21	101565803	1-49
1014305	20-3	1015348	1-39	1015700	1-39
1014306	1-45, 1-67, 1-69, 4-51	1015363	1-41	101570401	1-55
1014307	4-9	1015366	1-41	1015720	14-21, 14-23, 15-21, 15-23
1014321	1-33, 1-43	1015368	1-41	1015737	4-5, 8-3, 8-5, 8-7, 8-17, 8-19, 8-21
1014375	8-27	1015371	8-17, 8-21	1015741	4-5, 4-9, 8-17, 8-19, 8-21
1014387	1-33, 1-43	1015372	8-17, 8-19, 8-21	1015752	8-17, 8-19, 8-21, 10-15, 14-3, 15-3
1014415	1-43, 1-45	1015373	8-17, 8-19, 8-21	1015760	6-31, 7-25
1014435	1-25	1015390	1-41	1015765	4-37
101444101	1-25	1015391	1-35	1015768	4-41
1014453	12-5, 12-7	1015392	14-9, 15-9	101576802	1-3
1014454	12-9, 12-11	1015399	1-35, 1-43, 1-45, 1-87	1015770	4-41
1014471	1-35	1015400	1-35, 1-41	1015814	11-3
1014496	20-3	1015405	1-5, 8-17, 8-19, 8-21	1015820	1-55
1014497	20-3	1015412	1-41	101584502	10-13
1014503	1-27, 1-29, 1-31	1015424	1-41	1015878	8-17, 8-19, 8-23, 13-3
1014506	1-27	1015426	10-15	1015914	18-3, 18-5, 18-7, 18-9, 19-3, 19-5, 19-7, 19-9
101450698	1-29	101542901	1-35	1015917	18-3, 18-7, 18-9, 19-3, 19-7, 19-9
1014507	20-3	1015445	1-61	1015921	10-3
1014508	20-3	1015453	6-31, 7-25	1015932	8-13
1014509	1-27	1015457	6-31, 7-25	1015969	9-3
101450902	1-31	101547601	3-13, 3-17, 3-21, 3-25	1016060	1-37
101450903	1-29	1015507	1-35	1016074	8-13
1014530	4-5, 4-9, 4-47, 4-49	1015524	20-3	1016077	1-49
1014537	1-43, 1-45	1015526	4-37, 4-39, 4-41	1016078	1-37
1014555	6-27, 6-29, 7-21, 7-23	1015528	4-17, 4-19, 4-21, 4-23	101609401	3-3, 3-7, 3-11, 3-15, 3-19, 3-23
1014771	2-3	1015530	1-67, 1-69	101611003	20-7
1014807	8-17, 8-19, 8-23, 13-3	101553901	1-41, 1-49, 3-3, 3-7, 3-11, 3-15, 3-19, 3-23	101611402	17-5
1014808	8-17, 8-23, 13-3	1015583	1-35, 6-19, 7-19, 7-21, 7-23	1016136	1-55
1014902	6-29, 7-23	101558302	6-17, 6-25, 6-27, 6-29	1016154	6-11, 7-13
1014948	8-17, 8-19, 8-21	1015597	6-13, 6-21, 7-15	1016183	6-5, 7-7
1015010	4-41	1015607	1-41	1016201	12-5, 12-7
101503202	1-7, 1-11	1015608	1-7, 1-55, 14-11, 14-13, 14-15, 14-17, 15-11, 15-13, 15-15, 15-17	1016214	6-11, 7-13
1015072	14-11, 14-13, 14-15, 14-17, 15-11, 15-13, 15-15, 15-17	1015610	1-55	1016230	4-41
1015075	1-5, 1-7	1015612	1-51, 1-55	1016267	4-41
1015137	10-3, 10-5, 10-7, 10-11	1015613	6-31, 7-25	1016269	6-5, 7-7
1015139	10-3	1015614	6-31, 7-25	1016287	4-41
1015143	10-3	1015615	1-55	1016289	12-5, 12-7
1015153	4-37	1015616	1-55	1016319	5-13
1015154	4-37	1015617	1-55	1016320	5-13
1015156	4-37, 4-39, 4-41	1015621	1-55	1016337	13-9
1015157	4-37, 4-39	1015623	1-55	1016338	13-9
1015160	4-37, 4-39			1016346	6-15, 6-23, 7-17

INDEX

1016349	6-15, 6-23, 7-17	101648203	9-7	1016585	10-9
1016350	6-15, 6-23, 7-17	1016483	9-9	1016587	9-5
1016351	6-15, 6-23, 7-17	1016486	10-9	1016588	9-5
1016353	6-15, 6-23, 7-17	1016489	9-9	1016603	1-51, 1-53
1016356	4-5, 4-9, 14-5, 15-5	101649002	10-11	1016627	20-5
1016363	4-9	1016494	9-11	1016630	4-17, 4-19
1016365	4-31, 4-33	1016496	9-11	1016631	4-9
1016366	4-9	1016499	10-9	1016672	13-11
1016367	4-5	1016501	10-9	1016673	18-11, 19-11
1016384	6-17, 6-25, 7-19	1016502	9-7	1016679	1-67
1016385	6-15, 6-23, 7-17	1016506	9-11	101670201	3-27, 3-29
1016386	6-17, 6-25, 7-19	1016507	9-3	1016751	1-21
1016387	6-17, 6-25, 7-19	1016510	9-11	101675511	1-21
1016389	6-17, 6-25, 7-19	1016513	13-7	101675512	1-21
1016401	8-3, 8-17, 8-19	101651406	2-3	101675514	1-21
101641002	20-5	101651407	2-3	101675515	1-21
101641101	20-7	101651414	2-3	101677701	1-21
101641201	20-7	101651418	2-3	101677702	1-21
101641202	20-3	101651419	2-3	101677703	1-21
1016413	20-7	1016517	9-9	101677705	1-21
1016414	20-5	1016519	9-9	1016801	12-5, 12-7
1016415	20-5	1016521	9-11	1016813	6-31, 7-25
1016416	20-3	1016531	9-3	1016814	6-31
1016417	20-3	1016535	9-11	1016837	4-37, 4-39
1016418	20-5	1016537	9-7	1016849	4-17, 4-19, 4-21, 4-23
1016423	4-5, 4-9, 8-17, 8-19, 8-21	1016538	9-11	1016851	4-17, 4-19, 4-21, 4-23
101642575	10-9	1016539	9-3	1016868	1-5, 1-7
101642578	10-9	1016541	9-13	1016879	4-3
101642580	10-9	1016542	9-9	1016880	4-3
101642582	10-9	1016544	9-5, 9-9, 9-11	1016883	8-13
101642585	10-9	1016545	9-9	1016901	12-7
1016429	9-7	1016546	10-13	1016904	1-85, 9-9, 11-3
1016432	9-7, 13-7	1016547	9-3, 9-13, 10-11	1016916	1-49
1016436	9-9	1016549	9-9	101692501	1-5
1016437	10-9	1016551	20-7	101692502	1-5
1016438	10-11	1016552	20-7	101692506	1-5
1016440	9-9, 10-11	1016553	20-7	101692509	1-5
1016441	10-11	1016554	20-7	101692510	1-5
1016444	10-11	1016557	5-11, 5-17	101692511	1-5
1016449	9-9	1016560	9-9	101692512	1-5
1016450	9-9	1016561	9-5	101692513	1-5
1016451	9-9	1016562	9-5, 9-13	101692514	1-5
1016452	9-9	1016563	9-9	101692515	1-5
1016453	9-11	1016564	9-11	1016929	4-37, 4-39, 4-41
1016454	9-11	1016566	9-9	101693901	1-5, 1-7
1016455	9-5	1016569	9-9	101693902	1-5, 1-7
1016456	9-3	1016570	9-7	101693906	1-5, 1-7
1016457	9-7	1016571	9-13	101693908	1-7
1016458	9-9	1016572	10-11	101693909	1-5, 1-7
1016467	9-7	1016573	5-11, 5-17	101693910	1-5, 1-7
1016470	9-13	1016576	9-7	101693911	1-5, 1-7
1016472	9-11	1016578	9-5	101693912	1-5, 1-7
1016473	9-7	1016581	9-7	101693913	1-5, 1-7
1016474	9-9	1016582	10-11	101693914	1-5, 1-7
1016479	9-9	1016583	9-9	1016952	1-13
101648102	10-11	1016584	9-11	1016967	1-5, 1-7, 14-21, 14-23, 15-21, 15-23

INDEX

1016997	8-19	1017471	9-13	101808401	20-3
1017006	8-5	1017472	9-11	101809101	20-3
1017029	5-3	1017473	9-9	101810601	4-9
1017035	4-5, 4-9, 4-53	1017474	9-3	101811901	10-15
101705603	4-5	1017475	9-3	101812301	10-15
1017062	4-3	1017476	9-3	101813001	10-15
1017064	4-3	1017486	9-3	101813202	20-3
1017065	4-3	1017487	9-11	101814601	4-39
101707402	4-13	1017490	9-5	101815501	5-19
101707405	4-15	1017501	9-13	101815502	5-19
1017075	4-13, 4-15	1017502	9-13	101816501	5-19
1017080	1-5, 1-7	1017503	9-13	101816502	5-19
1017082	13-7, 13-13	1017504	9-11	101817401	5-5, 5-7
1017162	1-51, 1-53	1017507	9-7	101818801	5-7
1017167	1-51, 1-53	1017508	9-11	101821501	10-15
1017187	18-11, 19-11	1017510	9-13	101821601	4-41
1017188	12-3	1017512	9-13	101822001	5-9
1017189	18-11, 19-11	1017513	9-11	101823101	20-5
1017211	5-13	1017514	9-11	101823201	5-19
1017226	6-7, 7-9	101751801	9-11	101823801	5-19
1017231	13-7	101751802	9-11	101823901	5-19
1017239	8-19	101751803	9-11	101824401	10-3
1017243	8-19	101754201	1-87	101825101	3-3, 3-7, 3-11, 3-19
1017266	6-15, 6-23, 7-17	101754204	1-87	101825102	3-15, 3-23
1017273	6-9, 6-11, 7-11, 7-13	1017686	12-9, 12-11	101825103	4-27
101728602	1-23	1017689	1-85, 11-3	101826201	4-21, 4-23
1017313	6-5, 7-7	101769302	2-3	101826301	4-17
1017314	6-5, 7-7	1017696	5-5, 5-7	101826401	4-19
1017315	6-5, 7-7	1017699	4-53	101827101	9-15
1017317	6-5, 7-7	101770202	1-47	101828501	18-3, 18-7, 18-9, 19-3, 19-5, 19-7, 19-9
101734802	1-5	1017705	14-7, 15-7	101828801	18-3, 19-3
101737002	2-3	1017721	4-5, 4-35	101828802	18-3, 19-3
1017378	5-5, 5-7	1017722	4-5	101828901	18-3, 18-5, 19-3, 19-5
1017380	5-5, 5-7	1017724	4-13, 4-15	101828902	18-3, 18-5, 19-3, 19-5
1017424	5-5, 5-7	101773301	9-13	101828903	18-3, 18-5, 19-3, 19-5
1017434	9-9	101773302	9-13	101829001	18-7, 18-9, 19-7, 19-9
1017442	9-7	101773303	9-13	101830601	4-17, 4-19, 4-21, 4-23
1017443	9-9	101773304	9-13	101830701	4-17, 4-19, 4-21, 4-23, 4-29
1017445	9-9	101773305	9-13	101831101	18-3, 18-7, 18-9, 19-3, 19-7, 19-9
1017448	9-5	101773306	9-13	101831801	20-5
101744901	9-13	101773307	9-13	101831901	20-3
101744902	9-13	101773308	9-13	101832001	14-7, 15-7
1017450	9-13	101773309	9-13	101832202	10-13
101745101	9-13	101773310	9-13	101832302	10-13
101745102	9-13	101773311	9-13	101832601	9-15
1017453	9-13	1017774	1-51, 1-53	101832701	9-15
1017454	9-9	1017853	4-5, 4-9	101832901	18-13, 19-13
1017455	9-5	101791101	5-17, 5-19	101833101	9-15
1017456	9-7	101796201	5-5, 5-7	101833401	12-9, 12-11
101745701	9-13	101796501	14-7, 15-7	101833601	13-7
101745702	9-13	101796801	14-7, 15-7	101833902	12-5
1017458	9-7	101801001	14-7, 15-7, 18-11, 19-11	101833906	12-7
1017460	9-7	101804301	4-17, 4-19, 10-15	101834001	12-9
1017461	10-9	101806001	1-17	101834003	12-11
1017463	9-5	101806002	1-17	101834502	4-17, 4-19, 4-21, 4-23, 4-29
1017466	10-11	101806005	1-17		

INDEX

101834601	9-15	101887601	9-3	101922101	17-3
101834801	10-13, 13-7, 13-13	101889401	13-9	101922201	17-3
101835601	1-35, 1-37, 4-31, 4-33	101890001	13-9	101922501	8-15
101836201	12-9	101890101	13-7	101922801	1-39
101836202	12-11	101890201	13-7	101923001	17-3
101837101	10-15	101890501	13-7	101923201	17-3
101837301	8-3, 8-5, 8-7, 8-9, 8-11	101890601	13-7	101923501	17-3
101837401	1-59	101890901	13-11	101923901	17-3
101837502	1-59	101891001	13-11	101925601	12-5
101838401	18-5, 18-9, 19-5, 19-9	101891301	13-7	101925701	10-15
101838601	18-5, 18-9, 19-5, 19-9	101891401	13-11	101926501	6-27, 7-21, 7-23
101838701	18-7, 18-9, 19-7, 19-9	101891501	13-11	101926801	10-15
101839801	4-29	101891601	13-9	101926901	13-7
101839802	4-29	101891901	13-9	101927101	13-7
101839803	4-29	101892001	13-9	101927201	13-7
101839804	4-29	101892201	13-9	101927301	13-7
101839805	4-29	101892301	13-9	101927501	13-9
101839806	4-29	101892401	13-9	101927601	13-9
101839807	4-29	101892501	13-9	101927701	13-9
101839808	4-29	101892601	13-9	101927901	13-9
101839809	4-29	101892701	13-11	101928001	13-9
101839810	4-29	101892901	13-7	101928101	13-9
101839811	4-29	101893201	13-9	101928301	13-11
101839812	4-29	101893801	13-7	101928601	13-7
101841901	18-7, 18-9	101893901	13-9	101928701	13-7, 17-3, 20-5
101850301	6-9, 6-11, 7-11, 7-13	101894303	1-19	101929401	6-27, 7-21, 7-23
101851101	4-17, 4-19, 4-21, 4-23, 4-29	101894304	1-45	101929501	10-3
101856002	4-21, 4-23	101894702	1-43	101929802	12-5, 12-7
101856102	8-17, 8-19, 8-21	101894901	14-7, 15-7, 18-11, 19-11	101932201	1-85, 4-5, 4-9
101859401	11-3	101895401	17-3	101933101	20-5
101861901	5-5, 5-7	101895501	17-3	101933701	10-15
101862001	5-5	101897001	17-3	101936101	17-5
101865301	5-13	101897201	17-3	101936801	14-3, 15-3
101870401	1-5	101897401	17-3	101942301	16-3
101870501	6-25, 7-19	101897601	17-3	101946201	1-33
101870601	6-23	101898001	8-27	101953102	5-21
101871001	20-3	101903601	17-3	101953106	5-13, 5-15
101874601	5-13	101903701	17-3	101954301	1-19
101878201	5-3	101906901	17-3	101955001	6-23, 7-17
101879401	6-3, 7-5	101908101	14-9, 15-9	101955101	4-5, 4-9, 4-47, 4-49
101879501	6-3, 7-5	101908401	8-15, 14-9, 15-9	101957101	4-5, 4-9
101879601	6-3, 7-5	101910501	13-11	101958201	18-5, 19-5
101879701	6-3, 7-5	101914001	17-5	101958301	18-5, 19-5
101879801	6-3, 7-5	101914401	4-5, 18-3, 18-5, 18-7, 18-9, 19-3, 19-5, 19-7, 19-9	101958601	1-37
101879901	6-3, 7-5	101914402	4-9	101960201	3-3, 3-11, 3-15
101880001	6-3, 7-5	101915201	3-13, 3-17, 3-21, 3-25	101960501	3-13, 3-17, 3-21, 3-25, 8-9, 8-11
101880101	6-3, 7-5	101916101	9-3	101963301	1-33
101880201	6-3, 7-5	101916301	9-5	101963401	1-33, 1-43, 1-45, 8-25, 9-15
101880301	6-3, 7-5	101916701	8-13	101964001	1-33
101880701	5-11, 5-17	101917601	10-15	101966801	18-11, 19-11
101881501	4-51	101918501	5-3	101968801	18-11, 19-11
101881601	4-51	101919801	5-5, 5-7	101969701	4-5, 4-9, 4-47
101881701	10-15	101920101	14-3, 15-3	101971301	10-15
101884801	9-15	101921501	10-15	101972001	20-5
101886101	10-13, 13-7, 13-13	101921601	1-39	101972002	20-5
101887101	20-3			101972003	20-5

INDEX

101972004	20-5	102004901	7-25	102163001	1-23
101972005	20-5	102005701	1-23	102163101	1-23
101972006	20-5	102006201	1-87	102181101	1-85
101972007	20-5	102006701	3-7, 3-19, 3-23	102182101	1-85
101972009	20-5	102009201	2-5	102185401	10-15
101972011	20-5	102009202	2-5	102186401	16-3
101972012	20-5	102009301	2-5	102190702	10-15
101972101	17-3	102009302	2-5	102196901	4-21, 4-23, 14-5, 15-5
101972201	17-3	102009401	2-5	102198501	1-31
101972801	10-15	102009402	2-5	102198701	4-5
101973101	10-9	102009501	2-5	102199001	4-5
101973301	10-9	102009502	2-5	102199201	4-5, 4-9
101973401	10-11	102009901	2-7	102199301	4-5, 4-9
101973501	18-5, 19-5	102009902	2-7	102199401	4-5, 4-9
101974701	4-29	102010001	2-7	102221301	1-45
101974702	4-29	102010002	2-7	102221401	1-45
101974703	4-29	102010501	1-69	102221501	1-45
101974704	4-29	102022101	5-21	102221701	1-45
101974705	4-29	102022601	6-15, 6-23, 7-17	102221801	1-45
101974706	4-29	102022602	6-3, 6-15, 6-23, 7-5, 7-17	102222001	1-45
101974707	4-29	102025401	1-85	102222101	1-45
101974708	4-29	102026001	5-5, 5-7	102222201	1-45
101974709	4-29	102031901	13-11	102224001	1-69
101974710	4-29	102046501	3-31	102231601	1-3, 3-9, 3-21, 3-25
101974711	4-29	102051901	4-5, 4-9	102235201	16-3
101974712	4-29	102054501	4-43	102239901	1-45
101976601	18-5	102054502	4-45	102240501	14-21, 14-23, 15-21, 15-23
101978601	17-5	102056001	1-65	102241502	20-5
101980801	13-9	102056401	1-57	102242101	12-9, 12-11
101980901	13-9	102056502	1-85	102242401	1-27, 1-29, 1-31
101981001	13-9	102061201	20-7	102243402	20-5
101984801	6-5, 7-7	102065103	1-65	102243403	16-3
101987901	4-3	102065901	1-35, 9-15	102248803	20-5
101988001	4-3, 4-5, 4-9	102066201	6-29, 7-23	102251501	20-5
101988002	4-3, 4-5, 4-9	102070601	1-85	102262901	1-71
101988101	4-3	102071701	1-85	102264001	8-25
101988201	4-3	102074101	1-85	102264501	1-71
101990801	5-15, 5-21	102074201	1-85	102269701	8-25
101994301	1-79	102074501	1-85	102272501	8-25
101994401	1-83	102074601	1-85	102272601	1-75
101994601	1-77	102074701	1-85	102275401	18-3, 18-5, 18-7, 18-9, 19-3, 19-5, 19-7, 19-9
101994801	1-81	102074801	1-85	102278001	6-5, 7-7
101995101	1-73	102074901	1-85	102289201	6-3, 6-15, 6-23, 7-5, 7-17
101996901	1-57	102075801	3-7, 3-19, 3-23	102292801	5-13, 5-15, 5-21
101997802	4-51	102076702	1-27, 1-29, 1-31	102304801	9-9
101997803	4-51	102077601	4-43, 4-45	102323101	5-3, 5-13, 5-15, 5-21
101997902	4-51	102077701	4-43, 4-45	102323201	5-3, 5-13, 5-15, 5-21
101997903	4-51	102077801	4-43, 4-45	102336001	10-13
102002901	14-11, 14-13, 14-15, 14-17, 15-11, 15-13, 15-15, 15-17	102077901	4-43, 4-45	102336101	10-13
102003201	10-3	102078001	4-43, 4-45	102345901	3-25
102004101	7-9	102101001	14-3, 15-3	102349501	1-3
102004201	7-21	102101101	14-3, 15-3	102354901	4-31, 4-33
102004301	1-7	102155701	4-43	102355301	8-27
102004601	1-69	102155801	12-9, 12-11	102356601	17-3
102004602	1-69	102158901	5-5, 5-7	102356801	17-3
		102159601	4-43, 4-45		

INDEX

102376001	13-3	102838801	8-9, 8-11	102898201	13-13
102399001	7-23	102838901	8-9, 8-11	102898301	13-15
102406701	10-3	102839001	8-9, 8-11	102898401	13-15
102430901	9-13	102839301	8-9, 8-11	102898501	13-15
102453001	13-9	102841101	8-9, 8-11	102898601	13-15
102453101	13-9	102844001	18-11, 19-11	102898701	13-15
102459301	3-5, 3-9, 3-13, 3-15, 3-19, 3-23	102844002	18-13, 19-13	102898801	13-15
102460201	3-21, 3-25	102844601	8-9, 8-11	102898901	13-15
102508701	4-21, 4-23	102844701	8-9, 8-11	102899001	13-15
102515401	13-7, 13-13	102845101	3-5, 3-9	102899101	13-13
102517501	4-15	102845201	14-11, 14-15, 15-11, 15-15	102899201	13-13
102517601	4-49	102845203	14-11, 14-13, 14-15, 14-17, 15-11,	102899301	13-15
102518301	3-5, 3-9		15-13, 15-15, 15-17	102899401	13-13
102522001	10-3	102845204	14-13, 14-17, 15-13, 15-17	102899501	13-15
102526201	13-3	102845401	14-5, 15-5	102899601	13-15
102529201	4-13, 4-15	102846402	14-5, 15-5	102899701	13-13
102529203	4-49	102847601	1-49	102899801	13-13
102540301	9-15	102847602	1-49	102899901	13-15
102546401	4-15	102847603	1-49	102900001	13-13
102555501	20-3	102847701	1-49	102900101	13-13
102559901	2-9	102847801	18-3, 19-3	102900201	13-13
102562401	20-3	102847802	18-3, 19-3	102900301	13-13
102564002	6-17, 6-25, 7-19	102847803	18-3, 19-3	102900401	13-15
102572401	4-21, 4-23, 14-5, 15-5	102848701	14-7	102900501	13-15
102614401	1-45	102852101	5-15	102900601	13-13
102616701	13-3	102859501	14-21, 14-23, 15-21, 15-23	102900701	13-15
102673201	1-45	102863801	14-5, 15-5	102900801	13-17
102683201	3-29	102865101	10-3	102900901	13-13
102683301	3-29	102869401	4-5, 4-9, 4-19, 4-23	102901001	13-15
102683701	3-31	102871801	6-27, 6-29, 7-21, 7-23	102901101	13-15
102683801	3-31	102873401	14-11, 14-13, 14-15, 14-17, 15-11,	102901201	13-17
102684501	6-17, 6-25, 7-19		15-13, 15-15, 15-17	102901301	13-17
102684602	13-3	102881401	18-11	102901401	13-17
102704901	16-3	102882501	1-51, 1-53, 1-55	102901501	13-17
102711001	8-9, 8-11	102886301	17-3	102901601	13-17
102711201	8-17, 8-21	102886401	17-3	102901701	13-17
102718301	1-3	102886501	17-3	102901801	13-17
102753401	9-9	102886601	17-3	102901901	13-17
102764001	14-11, 14-13, 14-15, 14-17, 15-11,	102890201	4-31, 4-33	102902001	13-17
	15-13, 15-15, 15-17	102891101	6-29, 7-23	102902101	13-17
102766201	14-11, 14-13, 14-15, 14-17, 15-11,	102892901	18-5, 19-5	102902201	13-17
	15-13, 15-15, 15-17	102892902	18-5, 19-5	102902301	13-17
102766301	6-17, 6-25, 7-19	102893001	18-9	102902401	13-17
102770701	18-11, 19-11	102893601	1-53	102902501	13-17
102771701	17-3	102896801	13-13	102902601	13-17
102772401	14-21, 14-23, 15-21, 15-23	102896901	13-13	102902701	13-17
102774501	14-21, 14-23, 15-21, 15-23	102897201	13-15	102902801	13-17, 17-3
102774701	14-21, 14-23, 15-21, 15-23	102897301	13-15	102915101	4-9
102775101	16-3	102897401	13-13	102915701	14-9, 15-9
102803401	8-19	102897501	13-13	102917101	6-29
102817101	14-21, 14-23, 15-21, 15-23	102897601	13-13	102918701	4-31
102817201	14-21, 14-23, 15-21, 15-23	102897701	13-15	102918702	4-33
102837001	18-7	102897801	13-13	102931101	14-21, 14-23, 15-21, 15-23
102838101	14-9, 15-9, 18-3, 18-7, 19-3, 19-7	102897901	13-13	102938601	16-3
102838401	9-5	102898001	13-15	102938701	16-3
102838701	8-9, 8-11	102898101	13-15	102938801	16-3

INDEX

102938901	16-3	103260101	3-27	103483601	5-19
102939001	16-3	103260801	3-27	103483701	5-19
102939101	16-3	103260901	3-27	103496801	8-27
102939102	16-3	103261301	3-29	103502601	6-17, 6-25
102939501	18-5, 19-5	103270201	1-51	103502701	6-19, 7-19
102940801	18-5, 18-7, 18-9	103270301	1-53	103502801	6-19
102950301	4-27	103272801	1-51	103507001	6-17, 6-25, 7-19
102951701	16-3	103274202	1-53	103507101	10-11
102958001	14-19, 15-19	103274401	1-71	103507201	10-11
102959601	1-53	103284101	3-27, 3-29	103507301	10-11
102962303	4-27	103295101	13-5	103510001	4-51
102962602	4-27	103295202	13-5	103510301	4-51
102966401	1-33	103306301	10-3	103510501	14-19, 15-19
102966501	1-33	103318401	1-55	103510801	14-19, 15-19
102966502	1-33	103324402	1-55	103520401	10-15
102967601	3-5, 3-9	103324801	7-23	103538701	1-35
102969401	13-3	103345701	12-5, 12-7	103538901	1-35
102969801	13-3	103347101	8-9, 8-11	103582401	1-3
102969901	13-3	103347301	8-9, 8-11	103582801	17-3
102977001	4-17, 4-19	103347601	8-9, 8-11	103601501	6-3, 7-5
102977002	4-21, 4-23	103347701	8-9, 8-11	103601601	6-7
102977901	10-3	103347801	8-9, 8-11	103615601	9-9
102978001	10-3	103347901	8-9, 8-11	103615801	9-13
102980801	14-11, 14-13, 14-15, 14-17, 15-11, 15-13, 15-15, 15-17	103348204	4-17, 4-19	103615901	9-11
102980901	14-11, 14-13, 14-15, 14-17, 15-11, 15-13, 15-15, 15-17	103348501	4-17, 4-19, 8-3, 8-5, 8-7	103616301	9-9
102989501	1-33, 1-35	103348602	4-17, 4-19	103616401	9-11
103010101	10-3	103350001	4-45	103616501	9-5
103173301	13-3	103350901	6-27	103616601	9-5
103174401	1-9	103351001	6-15, 7-17	103616701	9-5
103177401	13-3	103351101	6-29, 7-21, 7-23	103617101	10-9
103180101	4-17, 4-19, 4-21, 4-23	103353501	18-11, 19-11	103618001	4-15
103189101	18-13, 19-13	103354701	6-15, 6-23, 7-17	103618101	4-49
103192701	13-3	103369501	13-3	103628701	6-17, 6-25
103198301	4-21, 4-23	103372101	10-3	103628801	6-19, 7-19
103198401	8-15	103372301	10-3	103628901	6-19
103199001	4-17, 4-19	103372401	10-5, 10-7	103653401	6-3, 7-5
103199101	4-17, 4-19	103372504	10-5	103653501	6-3, 6-15, 6-23, 7-5, 7-17
103205401	3-3, 3-7, 3-11, 3-15, 3-19, 3-23	103372801	10-5, 10-7	103657301	6-27, 6-29
103205501	3-13, 3-17, 3-21, 3-25, 8-15	103380201	5-19	103658701	2-3
103210201	3-13, 3-17, 3-21, 3-25	103380202	5-19	103665902	6-13
103210301	3-5, 3-9	103386202	9-3	103666002	6-13
103212302	1-3	103397901	4-9, 14-21, 14-23, 15-21, 15-23	103678402	8-9
103218601	4-21, 4-23, 14-5, 15-5	103406501	1-41	103678502	8-11
103221901	14-5	103406601	1-41	103686401	8-5
103226201	14-19, 15-19	103414901	14-21, 14-23, 15-21, 15-23	103687101	8-3
103226301	14-19, 15-19	103418601	10-5, 10-7	103687201	8-7
103226401	14-19, 15-19	103449501	14-25, 15-25	103694501	2-9
103226601	14-19, 15-19	103449601	14-25, 15-25	103695502	14-11, 15-11
103226701	14-19, 15-19	103459102	2-3	103695702	14-13, 15-13
103234301	3-27, 3-29, 3-31	103464801	3-27, 3-29	103696101	1-3
103245201	1-33	103477901	6-13, 6-21, 7-15	103696201	1-3
103245301	1-33	103483101	5-19	103696401	1-3
103254101	4-5	103483102	5-19	103697102	14-23
103256901	4-5, 4-9	103483201	5-19	103697105	14-21
		103483401	5-19	103700301	4-31

INDEX

103709202 15-23
103709205 15-21
103717302 6-21, 7-15
103717402 6-21, 7-15
103718702 8-9
103720402 14-17, 15-17
103722901 2-3
103723002 2-3
103724502 6-9, 6-11, 7-11, 7-13
103724601 6-11, 7-13
103724602 6-9, 7-11
103724901 6-11, 7-13
103771501 15-5
103771601 19-9
103771901 15-7
103772301 19-11
103772401 19-7
103781101 10-3
103783001 3-3, 3-7
103783002 3-11, 3-19
103783003 3-15, 3-23
103788001 10-3
103788101 10-3
103793102 14-15, 15-15
103802401 4-33
103832001 19-7, 19-9
103851201 10-7
103860501 4-25
103869401 19-7, 19-9
103953301 8-9, 8-11
96704416 9-15

A

absorber, shock 6-23
AC cord 18-3, 18-5, 18-7, 18-9, 19-3, 19-5, 19-7, 19-9
AC cord receptacle 18-5, 19-5
accelerator bracket and bearing assembly 5-5, 5-7
accelerator cable 10-13
accelerator pedal 5-5, 5-7
accelerator pedal adjustment tool 20-3
accelerator pivot rod 5-5, 5-7
accelerator return spring 5-5, 5-7
accelerator rod 5-9
accessory switch panel 1-77
actuator 1-51, 1-53
adapter
 actuator 1-51, 1-53
 cable (IQDM) 20-5
adhesive, guide ring 20-3
air box 10-15
air box top 10-15
air duct shield 10-15
air filter 10-15
air intake hose 10-15

ammeter 18-3, 18-5, 18-7, 18-9, 19-3, 19-5, 19-7, 19-9
anchor body 5-11, 5-17
anchor body kit 5-11, 5-17
anchor, piston 5-11, 5-17
anti-sway bar 6-31, 7-25
A-plate strap 6-15, 6-23, 7-17
A-plate, delta 6-15, 6-23, 7-17
arbor 20-3
arm
 governor 10-13, 13-7, 13-13
 pivot 13-7
 rocker 9-9
 wiper 1-71
armature 16-3
assembly
 accelerator bracket and bearing 5-5, 5-7
 accelerator pivot rod 5-5, 5-7
 air box 10-15
 air box top 10-15
 axle 13-11
 bearing, steering shaft 6-5, 7-7
 bell crank and shaft 8-17, 8-19, 8-21
 brake lever 5-19
 cab 1-71
 choke cable 10-15
 connecting rod 9-13
 cylinder head 9-9
 delta A-plate 6-15, 6-23, 7-17
 delta shock and gear support 6-15, 6-23, 7-17
 drive hub 12-5, 12-7
 driven clutch 12-9
 driven clutch fixed-face 12-9, 12-11
 float 10-9
 fuel cap 10-3
 fuel pump 10-3
 fuel tank vent 10-3
 governor 13-9, 13-15
 headlight 4-3, 4-5, 4-9
 headlight harness 4-3
 idle screw 10-9
 inner ball joint 6-3, 7-5
 kingpin 6-17, 6-25, 7-19
 latch weld 1-35
 moveable-face 12-5, 12-7, 12-9, 12-11
 pilot air screw 10-9
 plug cap 9-5
 prop rod support 1-39
 ratchet 5-3
 secondary clutch weight 12-5, 12-7
 steering shaft 6-5, 7-7
 tailgate 1-45
 tether 1-45
 tilt bed 1-35
 turn signal lens 4-3

axle 13-7, 13-11, 13-17, 17-3
axle guard 17-5
axle shaft oil seal 13-11, 13-17, 17-3
axle tube 13-11, 13-17, 17-3

B

backing plate, brake 5-11, 5-17, 5-19
ball bearing 8-9, 8-11, 9-11
ball joint 5-3, 5-9, 13-5
ball stud 8-17, 8-19, 8-21, 13-7, 13-13
ball, shifter 13-9
ball, steel pressure relief 9-7
ball, trailer hitch 1-63
bar, drive 14-3, 15-3
bar, light 4-43, 4-45
bar, stabilizer 6-31, 7-25
barb, vent 10-3
barrel, plastic 1-5, 1-7, 1-9, 1-41
battery 14-11, 14-13, 14-15, 14-17, 15-11, 15-13, 15-15, 15-17
 12-volt, side-post 8-27
battery charger 18-3, 18-5, 19-3, 19-5
battery charger case 18-3, 18-5, 18-7, 18-9, 19-3, 19-5, 19-7, 19-9
battery charger harness 18-11, 19-11
battery charger mounting plate 18-11, 19-11
battery charger receptacle 14-7, 15-7
battery charger retainer 18-13, 19-13
battery charger shield 18-11, 19-11
battery charger transformer 18-3, 18-5, 18-7, 18-9, 19-3, 19-5, 19-7, 19-9
battery charger wire assembly 18-5, 19-5
battery charger, onboard 18-7, 18-9, 19-7, 19-9
battery clamp 8-27
battery discharge machine 20-3
battery hold-down 14-11, 14-13, 14-15, 14-17, 15-11, 15-13, 15-15, 15-17
battery hold-down rod 14-11, 14-13, 14-15, 14-17, 15-11, 15-13, 15-15, 15-17
battery light 4-21, 4-23
battery terminal protector spray 4-9, 20-3
battery thermometer 20-3
bead, ferrite 14-25, 15-25
bearing 17-3
 ball 8-9, 8-11, 9-11
 ball (motor) 16-3
 ball (steering pinion) 6-3, 7-5
 cage roller 13-15
 front wheel hub 6-13, 6-21, 7-15
 hub 6-13, 6-21, 7-15
 idler 12-5, 12-7
 inner axle tube 13-11, 17-3
 lower pinion (steering) 6-3, 7-5
 needle 13-9
 outer axle tube 13-11
 pivot support 5-5, 5-7

INDEX

- steering shaft 6-5, 7-7
 thrust 6-17, 6-25, 7-19
 bearing and oil seal remover 20-3
 bearing driver set 20-3
 bearing puller 20-3
 bearing puller wedge 20-3
 bearing seat 6-5, 7-7
 bed floor plate 1-35
 bed latch 1-41
 bed latch spring 1-41
 bed lift
 hydraulic 1-55
 bed mat 1-47
 bed seal 1-33, 1-35
 bed, tilt 1-35
 bell crank and shaft 8-17, 8-19, 8-21
 bellows 6-3, 7-5
 belt, drive 12-3
 belt, seat 1-71
 belt, starter/generator 8-13
 belt, V 8-13
 bezel, choke cable 10-15
 bezel, headlight 4-3
 block, brake-mounting 5-3
 block, fuse 4-5, 4-9, 8-17, 8-19, 8-21
 block, terminal 4-5, 4-9, 14-5, 15-5
 blower cover 1-85
 blower mounting bracket 1-85
 blower, centrifugal 1-85
 body, anchor 5-11, 5-17
 bolt, U- 6-29, 7-23
 boot, steering column 6-5, 7-7
 boot, switch 8-15, 14-9, 15-9
 bottom, air box 10-15
 box
 air 10-15
 cargo 1-41
 differential 13-17
 electrical component 8-17, 8-19, 8-21
 steering gear 6-3, 7-5
 tool 1-59
 van 1-87
 brace, light bar 4-43, 4-45
 brace, trailer hitch 1-61
 bracket 6-27, 7-21, 7-23
 accelerator cable 10-13
 adjustable starter/generator 8-13
 brace mounting 4-43, 4-45
 brake cable guide 6-23, 7-17
 brake light switch 4-5, 4-9
 FNR shifter 13-3
 governor cable 10-13
 headlight mounting 4-3
 horn 4-5, 4-9, 4-47, 4-49
 light mounting 4-43, 4-45
 muffler mounting 11-3
- oil filter mount 9-7
 oil level switch 9-11
 relay mounting 8-19, 18-7, 18-9, 19-7, 19-9
 shock mounting, drv 6-29
 shock mounting, pas 6-29
 snubber 9-15
 stabilizer bar mounting 6-31, 7-25
 stake side 1-49
 starter/generator mounting 8-13
 steering column 6-5, 7-7
 steering column mounting 6-5, 7-7
 throttle spring return 10-11
 Tow/Run switch 8-15
 bracket, carburetor intake manifold 10-11
 bracket, hinge, bed 1-35
 bracket, hour meter 4-51
 brake actuator kit 5-11, 5-17
 brake adjusting mechanism 5-19
 brake adjustment tool 20-3
 brake backing plate 5-11, 5-17, 5-19
 brake cable 5-13, 5-15, 5-21
 brake cable equalizer 5-13, 5-15, 5-21
 brake cable hanger 6-27, 7-21
 brake cable release tool 20-3
 brake cluster 5-11, 5-17, 5-19
 brake drum 5-11, 5-17, 5-19
 brake lever 5-19
 brake lever arm 5-11, 5-17
 brake light switch bracket 4-5, 4-9
 brake mounting block 5-3
 brake pedal 5-3
 brake pedal pad 5-3
 brake relay kit, 12-volt 4-5
 brake return spring 5-15, 5-21
 brake self-adjusting mechanism 5-19
 brake shoe 5-11, 5-17, 5-19
 brake spring 5-11, 5-17, 5-19
 breaker, circuit 18-5, 18-9, 19-5, 19-9
 breather 13-7, 13-13, 17-3
 brush box assembly 16-3
 brush cover kit, starter/generator 8-9, 8-11
 brush guard 1-7
 brush inspection port cover 8-9, 8-11
 brush kit, motor 16-3
 brush rigging 16-3
 brush spring 8-9, 8-11, 16-3
 brush spring set 8-9, 8-11
 brush spring, starter/generator 8-9, 8-11
 brush terminal, starter/generator 8-9, 8-11
 brush, motor 16-3
 bulb, headlight 4-3
 bulb, light bar 4-43, 4-45
 bulb, strobe light 4-37, 4-39, 4-41
 bulb, tail light 4-53
 bumper 1-25
 drive unit (motor) 16-3
- front 1-5, 1-7
 front, heavy duty 1-5
 front, kit 1-5, 1-7
 rubber 1-37, 1-45, 5-3
 seal, long 1-19
 spring return 5-5, 5-7
 bumper, heavy-duty 1-5
 bumper, seat 1-19
 bushing 1-51, 1-53, 8-17, 8-19, 8-21, 12-5, 12-7, 13-3
 bronze 6-13, 6-21, 7-15
 nylon 1-41, 1-43, 5-3
 return line 10-3
 snap-in 1-41
 spindle 6-13, 6-21, 7-15
 stabilizer bar 6-31, 7-25
 steel 1-35, 6-17, 6-19, 6-25, 6-27, 6-29, 7-19, 7-21, 7-23
 urethane 1-35, 6-15, 6-17, 6-19, 6-23, 6-25, 6-27, 6-29, 7-17, 7-19, 7-21, 7-23
 bushing support 6-31, 7-25
 button, drive 12-9, 12-11
 buzzer, reverse 4-17, 4-19, 4-21, 4-23
- C**
- cab 1-71
 door 1-71
 door hinge 1-71
 door latch 1-71
 heater 1-85
 roof 1-71
 side rear window 1-71
 windshield 1-71
 windshield latches 1-71
 wiper arm 1-71
 wiper blade 1-71
 wiper motor 1-71
- cable
 accelerator 10-13
 brake 5-13, 5-15, 5-21
 choke 10-15
 FNR shifter 13-5
 governor 10-13
 calibration test module 20-3
- cam
 driven clutch 12-9, 12-11
 electrical component box 8-17, 8-19, 8-21
- cam, FNR shifter 13-3
- camshaft 9-11
- camshaft shim 9-11
- canister, carbon, fuel tank 10-5, 10-7
- canopy 1-27, 1-29, 1-31
- canopy brace 1-27, 1-29, 1-31
- canopy support 1-27, 1-29, 1-31
- canopy trim plate 1-27, 1-29, 1-31
- cap

INDEX

- corner 1-33, 1-43
dust 4-21, 4-23, 14-5, 15-5
front corner 1-45
fuel, gas, ratchet 10-3
key switch 4-17, 4-19, 4-21, 4-23, 4-29
plug 9-5
seat back 1-21
cap, hub, 7 prong 2-9
carbon canister 10-5, 10-7
carburetor adapter 10-11
carburetor gasket 10-11
carburetor insulator 10-11
carburetor mounting gasket 10-11
carburetor, FE350 S27 10-9
card, safety first 20-5
cargo bed, side panel 1-41
cargo box 1-41
case
 battery charger 18-3, 18-5, 18-7, 18-9, 19-3, 19-5, 19-7, 19-9
 differential gear 13-11
 gear 13-7, 13-13, 17-3
 rocker 9-9
CE mark ferrite bead, Fair-rite 14-25, 15-25
CE mark ferrite bead, TDK 14-25, 15-25
centrifugal blower 1-85
charger
 wire assembly kit 18-3, 18-7, 18-9, 19-3, 19-7, 19-9
charger bezel tool 20-3
charger info indicator 4-25
charger receptacle 14-7, 15-7
charger, battery 18-3, 18-5, 19-3, 19-5
charger, battery, onboard 18-7, 18-9, 19-7, 19-9
charger, battery, shield 18-11, 19-11
choke cable 10-15
choke cable bezel 10-15
choke valve 10-15
circuit breaker 14-9, 15-9, 18-3, 18-5, 18-7, 18-9, 19-3, 19-5, 19-7, 19-9
clamp
 battery 8-27
 cable retaining 10-13
 hose 10-3, 10-5, 10-7, 10-11, 10-15
 hose, green 10-5, 10-7
 muffler hose 1-85, 11-3
clevis, upper delta 6-17, 6-25, 7-19
clip
 hair pin 1-45
clip, score card 6-11, 7-13
cluster idler gear 13-9
cluster, brake 5-11, 5-17, 5-19
clutch cam installation tool 20-3
clutch pulley 12-5, 12-7
clutch repair kit 12-9, 12-11
clutch tool kit 20-3
clutch weight 12-5, 12-7
clutch, drive 12-5, 12-7
clutch, driven 12-9, 12-11
collet 9-9
column, steering 6-5, 7-7
communication display module 20-5
component box, electrical 8-17, 8-19, 8-21
component mounting plate 14-21, 14-23, 15-21, 15-23
compression gauge 20-5
compression mount 6-31, 7-25
compressor, piston ring 20-5
compressor, valve spring 20-7
computer
 onboard 14-21, 14-23, 15-21, 15-23
conduit 1-3, 4-41
connecting rod 9-13
continuity tester 20-5
control board 18-7, 18-9
control board, potted 19-7, 19-9
controller, speed 14-21, 14-23, 15-21, 15-23
converter, DC/DC 4-31
cord connector 9-11
cord reel 18-11, 19-11
cord, AC 18-3, 18-5, 18-7, 18-9, 19-3, 19-5, 19-7, 19-9
cord, DC 18-3, 18-5, 18-7, 18-9, 19-3, 19-5, 19-7, 19-9
corner cap 1-45
counterbalance guide shaft 9-13
counterbalance weight 9-13
coupler, SPWS 14-19, 15-19
cover
 brush inspection port 8-9, 8-11
 crankcase 9-11
 dust 5-11, 5-17, 5-19, 6-13, 6-21, 7-15
 electrical box 8-17, 8-19, 8-21
 electrical component 14-21, 14-23, 15-21, 15-23
 fuse block 4-9
 oil pump 9-7
 rocker switch hole 4-17, 4-19, 4-21, 4-23
 screw head 4-17, 4-19, 4-21, 4-23
 steering column 6-5, 7-7
 wheel 2-9
cover, steering column 4-13, 4-15
cowl 1-5, 1-7
crankcase 9-13
crankcase cover 9-11
crankcase vent tube 10-11
crankshaft 9-13
crankshaft rod 9-13
crankshaft shim 9-13
C-type stop ring 6-3, 7-5
cup holder 1-13
cup, spring 5-5, 5-7
current limiter 18-5, 19-5
cushion, shock absorber 6-27, 6-29, 7-21, 7-23
cutter, valve seat 20-7
cylinder adapter 1-55
cylinder head 9-9
- D**
- dash component 1-11
dash panel 4-17, 4-19, 4-21, 4-23
dc converter, 15A 4-31
dc converter, CE 4-33
DC cord 18-3, 18-5, 18-7, 18-9, 19-3, 19-5, 19-7, 19-9
DC/DC converter 4-31
decal
 4-gauge wire warning 3-5, 3-9
 battery danger 3-5, 3-9
 bed load warning 1-41, 1-49, 3-3, 3-7, 3-11, 3-15, 3-19, 3-23
 Carryall 3-27, 3-29
 Carryall 2 3-27
 Carryall 2 Plus 3-27
 Carryall 252 3-29
 Club Car name plate 3-27, 3-29, 3-31
 Club Car tailgate 1-45
 crush area warning 3-3, 3-5, 3-7, 3-9, 3-11, 3-13, 3-15, 3-19, 3-23
 dash, beverage unit warning 1-57
 diode safety 3-25
 driver/passenger 3-13, 3-17, 3-21, 3-25
 electrical cover safety 3-5, 3-9
 FNR 3-5, 3-9, 3-13, 3-17, 3-21, 3-25
 frame ground 3-13, 3-17, 3-21, 3-25
 header heater 1-85
 heater inspection 1-85
 IR 3-27, 3-29, 3-31
 key switch 3-15, 3-23
 on/off 3-3, 3-7, 3-11, 3-19
 operating instructions 3-3, 3-7, 3-11, 3-15, 3-19, 3-23
 passcode 4-27
 refreshment center 1-57
 refreshment center warning 1-57
 rollover warning 3-3, 3-7, 3-11, 3-15, 3-19, 3-23
 rotating parts 1-69, 3-13, 3-17, 3-21, 3-25, 8-9, 8-11
 rotating parts warning 3-21, 3-25
 run/service switch 3-13, 3-17, 3-21, 3-25, 8-15
 tailgate 1-41, 3-27, 3-29, 3-31
 tilt system warning 1-55
 Tow/Run switch 3-5, 3-9
 trailer hitch 1-61, 1-65, 3-5, 3-9, 3-13, 3-17, 3-21, 3-25
 Turf 2 3-27

INDEX

Turf 252 3-29
vehicle loading 3-3, 3-7, 3-11, 3-15, 3-19, 3-23
winch cable warning 1-3, 3-9, 3-21, 3-25
winch, warning 1-3
XRT 900 3-31
young driver warning 3-7, 3-19, 3-23
defogger fan 1-83
delta A-plate 6-15, 6-23, 7-17
delta A-plate sub-assembly 6-15, 6-23, 7-17
delta shock and gear support 6-15, 6-23, 7-17
diagnostic port 4-21, 4-23, 14-5, 15-5
differential drive unit 13-7, 17-3
differential gear 13-11, 17-3
differential gear case 13-11, 13-17
differential guard 17-5
differential housing 17-3
differential idler gear 13-11
differential pin 13-11
diode 8-17, 8-19, 8-21, 8-25
diode, charging 8-25
dipstick 9-3
door 1-71
door latch 1-71
drain plug 9-7, 13-13
drain plug gasket 9-7, 13-7, 13-13
drain plug, rubber 8-9, 8-11
drive bar 14-3, 15-3
drive belt 12-3
drive button 12-9, 12-11
drive clutch 12-5, 12-7
drive clutch button 12-5, 12-7
drive clutch fixed-face 12-5, 12-7
drive clutch holder tool 20-3
drive clutch hub puller 20-3
drive clutch puller 20-3
drive clutch spring 12-5, 12-7
drive clutch weight 12-5, 12-7
drive hub 12-5, 12-7
drive selector shaft 13-7, 13-13
drive unit bumper 16-3
drive unit guard 17-5
driven clutch 12-9, 12-11
driven clutch button 12-9, 12-11
driven clutch cam 12-9, 12-11
driven clutch cam puller 20-3
driven clutch fixed-face assembly 12-9, 12-11
driven clutch puller plug 20-3
driver, drive clutch 12-5, 12-7
drum, brake 5-11, 5-17, 5-19
dry moly lubricant 20-5
duct hose 1-85
dust cap 4-21, 4-23, 14-5, 15-5
dust cover 5-11, 5-17, 5-19, 6-13, 6-21, 7-15

E

eccentric bolt 6-17, 6-25, 7-19
E-clip 5-13, 5-15, 5-21
electrical box cover 8-17, 8-19, 8-21
electrical component box 8-17, 8-19, 8-21
electrical component cover 14-21, 14-23, 15-21, 15-23
end cap, motor 16-3
end, tie rod 6-15, 6-23, 7-17
engine mounting plate 9-15
engine shroud 9-3
engine, FE350 S27 9-3
equalizer pivot 5-13
equalizer rod 5-13, 5-15, 5-21
equalizer, brake cable 5-13, 5-15, 5-21
exhaust system 11-3
exhaust valve 9-9
extension, spring latch 1-35
extrusion, fender 1-5
extrusion, plastic 1-25

F

face, moveable 12-5, 12-7, 12-9, 12-11
fan housing 9-3
fan shroud 9-3
fan, defogger 1-83
fan, flywheel 9-5
fender 1-69
fender extrusion 1-5
fender kit 1-69
fender, rear 1-67, 1-69
ferrite bead (CE), Fair-rite 14-25, 15-25
ferrite bead (CE), TDK 14-25, 15-25
field coil housing 8-9, 8-11
fill plug 13-7, 13-13
fill plug gasket 13-13
filter
 air 10-15
 fuel 10-3
 oil 9-7
 oil pump 9-7
fitting, thread-forming grease 6-13, 6-21, 7-15
fixed-face, drive clutch 12-5, 12-7
fixed-face, driven clutch 12-9, 12-11
flasher, turn signal, 12-volt 4-15
float 10-9
floor mat 1-7, 1-11
floor plate, bed 1-35
fluid, hydraulic 1-55
flywheel 9-5
flywheel fan 9-5
flywheel fan plate 9-5
flywheel puller 20-5
FNR closeout brush 4-17, 4-19
FNR shift lever 13-7, 13-13

FNR shifter 13-3

FNR shifter bracket 13-3

FNR shifter cable 13-3

FNR shifter cam 13-3

fork, shift 13-9, 13-15

frame and field, motor 16-3

frame and field, starter/generator 8-9, 8-11

frame, tilt bed 1-35

front bumper 1-5, 1-7

front bumper kit 1-5, 1-7

front spring retainer plate 6-17, 6-25, 7-19

fuel filter 10-3

fuel gauge sending unit 10-3

fuel line 10-3, 10-5, 10-7, 10-11

fuel pump 10-3

fuel pump mount 10-3

fuel tank 10-3

fuel tank strap 10-3

fuel tank vent 10-3

fuse 14-7, 15-7, 18-3, 18-5, 18-7, 18-9, 19-3, 19-5, 19-7, 19-9

10-amp 8-17, 8-19, 8-21

20-amp 4-5, 4-9, 8-17, 8-19, 8-21

3/8-amp 14-7, 15-7, 18-11, 19-11

fuse and receptacle 14-7

fuse block 4-5, 4-9, 8-17, 8-19, 8-21

fuse block cover 4-9

G

gasket

carburetor 10-11

carburetor mounting 10-9, 10-11

crankcase cover 9-9, 9-11

drain plug 9-7, 13-7

drain plug, fill plug 13-13

exhaust 1-85, 9-9, 11-3

head 9-9

insulator 9-9, 10-11

liquid 13-7, 17-3, 20-5

plug 17-3

rocker case 9-9

sending unit 10-3

taillight 4-53

gasket kit, FE350 9-9

gauge, compression 20-5

gear

25 tooth 13-15

28 tooth 13-15

case 13-13

cluster idler 13-9

differential 13-11, 13-17, 17-3

differential idler 13-11, 17-3

differential output 17-3

helical 9-13, 13-9, 13-11

planetary 13-17

speed governor 13-15

INDEX

spur 9-13, 13-9
sun 13-17
synchro 13-9
gear yoke 20-5
gearcase 13-7, 17-3
governor 13-9, 13-15
governor arm 10-13, 13-7, 13-13
governor cable 10-13
governor cable bracket 10-13
governor shaft installation tool 20-5
grip, pencil 6-11, 7-13
grip, tilt latch hand 1-35, 1-41
grommet 1-17, 1-27, 1-29, 1-31, 10-3
 ignition 9-5
guard, brush 1-7
guard, differential 17-5
guard, splash 1-9
guide
 intake valve 9-9
 valve seat cutter 20-7
guide ring adhesive 20-3

H

hair pin clip 1-45
handle 1-87
hanger, brake cable 6-27, 7-21
harness
 wire 4-49
harness, battery charger 18-11, 19-11
harness, wire 1-85, 4-31, 4-33, 4-37, 4-39, 4-49,
 8-3, 8-5, 8-7, 14-5, 15-5, 19-11
head gasket 9-9
head, cylinder 9-9
headband, sealed, motor 16-3
headband, vented, motor 16-3
headlamp template 4-5, 4-9
headlight 4-3
headlight assembly 4-3, 4-5, 4-9
headlight bulb 4-3
headlight harness 4-3
headlight retainer 4-3
heat shrink tube 18-11, 19-11
heater 1-85
heatsink and rectifier 18-3, 18-5, 18-7, 18-9,
 19-3, 19-5, 19-7, 19-9
heavy-duty bumper 1-5
helical gear 9-13, 13-9, 13-11
hill brake rod 5-3
hill brake weld assembly 5-3
hinge kit, door 1-71
hinge pin 1-49
hinge, stake side 1-49
hitch, trailer 1-61
hitch, trailer, ball 1-63
hold-down rod, battery 14-11, 14-13, 14-15,
 14-17, 15-11, 15-13, 15-15, 15-17

hold-down, battery 14-11, 14-13, 14-15, 14-17,
 15-11, 15-13, 15-15, 15-17
holder, cup 1-13
hole plug 4-21, 4-23
horn 4-5, 4-9, 4-47, 4-49
horn bracket 4-5, 4-9, 4-47, 4-49
horn button and wire assembly 4-5, 4-9, 4-47
hose 1-55
 fuel 10-3
 SPWS 14-19, 15-19
 vent 10-5, 10-7
 vent flare 10-5
hose clamp, green 10-5, 10-7
hose, air intake 10-15
hose, duct 1-85
hour meter 4-51
hour meter bracket 4-51
hour meter, 36-48 volt 4-51
housing
 2-pin 14-3, 15-3
 3-pin 14-3, 15-3, 16-3
 differential 17-3
 fan 9-3
 field coil 8-9, 8-11
hub 6-13, 6-21, 7-15
hub bearing 6-13, 6-21, 7-15
hub cap 2-9
hub cap, 7 prong 2-9
hub, synchronizer clutch 13-9
hydraulic bed lift 1-55
hydraulic bed lift harness 1-55
hydraulic fluid 1-55
hydraulic tilt bed pump 1-55
hydraulic tilt cylinder 1-55
hydrometer 20-5

I

idle screw assembly 10-9
idler bearing 12-5, 12-7
idler gear, differential 17-3
ignition coil 9-5
indicator
 charger info 4-25
inlet valve 1-85
inner frame snubber 9-15
input shaft 17-3
insert, synchronizer 13-9
instrument panel 4-17, 4-19, 4-21, 4-23
insulating washer 16-3
insulator gasket 9-9, 10-11
insulator, carburetor 10-11
insulator, motor terminal 16-3
intake valve 9-9
intermediate shaft 17-3
internal retaining ring pliers 20-5
IQ display module (IQDM) 20-5

J

jet, main 10-9
jet, pilot 10-9
joint
 ball 5-3, 5-9, 13-5
steering 7-9

K

key
 crankshaft 9-5, 9-13
 driven clutch 12-9, 12-11
 On/Off 4-17, 4-19, 4-21, 4-23
 square 12-9, 12-11
 woodruff 13-7
key switch 4-17, 4-19
key switch cap 4-17, 4-19, 4-21, 4-23, 4-29
key switch, On/Off 4-21, 4-23
key switch, uncommon 4-29
kingpin 6-17, 6-25, 7-19
kit
 2-pin housing 14-3, 15-3
 3-pin housing 14-3, 15-3, 16-3
 accelerator pivot rod 5-5, 5-7
 air duct shield 10-15
 anchor body 5-11, 5-17
 bed lift 1-51, 1-53
 brake actuator 5-11, 5-17
 brake cable 5-13, 5-21
 brake pedal 5-3
 brake relay 4-5
 brake shoe 5-11, 5-17
 brake shoe retainer 5-11, 5-17, 5-19
 cab adapter 1-71
 canopy 1-27, 1-29, 1-31
 clutch repair 12-9, 12-11
 cup holder 1-13
 DC/DC converter 4-31
 differential gear case 13-11
 diode 8-25
 door hinge 1-71
 drive clutch button 12-5, 12-7
 drive clutch weight 12-5, 12-7
 driven clutch button 12-9, 12-11
 equalizer, brake 5-13
 fan/defogger 1-83
 fixed-face drive 12-5, 12-7
 flywheel puller 20-5
 front bumper 1-5, 1-7
 gasket, FE350 9-9
 heater, cab 1-85
 heavy-duty front bumper 1-5
 hour meter 4-51
 hub cap 2-9
 hydraulic bed lift 1-55
 IQ display module (IQDM) 20-5

INDEX

- light 4-5, 4-9
 mirror 1-15
 mirror, inside rear-view 1-73
 mirror, side-view 1-75
 motor brush 16-3
 motor brush lead assembly 16-3
 motor brush spring 16-3
 motor speed sensor 16-3
 name plate 3-27, 3-29
 park brake latch 5-3
 park brake pedal 5-3
 piston ring compressor 20-5
 prop rod 1-39
 rear fender 1-69
 rear receiver hitch 1-65
 relay, 48V 14-21, 14-23, 15-21, 15-23
 seat belt 1-71
 shock absorber cushion 6-27, 6-29, 7-21, 7-23
 shoe retainer 5-11, 5-17, 5-19
 smartkey 4-27
 SPWS 14-19, 15-19
 stake side 1-49
 steering column mounting bracket 6-5, 7-7
 strobe light 1-79, 4-37, 4-39, 4-41
 tailgate angle 1-43
 tailgate mounting 1-41
 taillight hardware 4-53
 trailer hitch 1-61
 transmission tool 20-7
 tune-up 20-7
 turn signal 4-13
 wheel cover 2-9
 winch 1-3
 windshield, hinged 1-23
 windshield, one-piece 1-25
 wire assembly, charger 18-3, 18-7, 18-9, 19-3, 19-7, 19-9
 work light 1-81
 knob, forward/reverse 13-3
 knob, light switch 4-5, 4-9
- L**
 lamp, strobe light 4-37, 4-39, 4-41
 lamp, turn signal and socket 4-13, 4-15
 latch plate, tilt bed 1-37
 latch weld 1-35
 latch, air box 10-15
 latch, bed 1-41
 latch, park brake 5-3
 latch, slam 1-45
 latch, spring 1-45
 leaf spring 6-27, 6-29, 7-21, 7-23
 lens, headlight 4-3
 lens, strobe light 4-37, 4-39, 4-41
- lens, taillight 4-53
 lever
 choke 10-15
 drive selector 13-7
 speed governor 13-13
 transmission shift 13-7, 13-13
 light
 battery 4-21, 4-23
 indicator 4-25
 oil 4-17, 4-19
 light bar 4-43, 4-45
 light switch 4-5, 4-9
 light switch knob 4-5, 4-9
 light, strobe 1-79, 4-37, 4-39, 4-41
 lighting package 4-5, 4-9
 limit switch 4-5, 4-9, 8-17, 8-19, 8-23, 13-3
 limiter
 current 18-5, 19-5
 voltage 4-5, 4-35
 line, fuel 10-3, 10-5, 10-7, 10-11
 link, stabilizer bar 6-31, 7-25
 liquid gasket 13-7, 17-3, 20-5
 low oil warning light 4-17, 4-19
 lubricant, dry moly 20-5
 lubricant, moly-teflon 16-3, 20-5
 lug nut 2-3, 2-5, 2-7
 lug stud 13-11, 13-17, 17-3
- M**
 magnet, speed sensor 16-3
 main jet 10-9
 mat, bed 1-47
 mat, floor 1-7, 1-11
 MCOR 14-3, 15-3
 mechanism, brake adjusting 5-19
 meter, hour 4-51
 meter, volt ohm 20-7
 mirror 1-15
 mirror, inside rear-view 1-73
 mirror, rear view 1-15
 mirror, side-view 1-75
 module
 calibration test 20-3
 communication display 20-5
 moly-teflon lubricant 20-5
 motor
 48-volt IQ Plus 16-3
 wiper 1-71
 motor brush 16-3
 motor brush kit 16-3
 motor brush lead assembly kit 16-3
 motor brush spring 16-3
 motor bumper 16-3
 motor controller 14-21, 14-23, 15-21, 15-23
 motor end cap 16-3
 motor frame and field 16-3
- motor headband, sealed 16-3
 motor headband, vented 16-3
 motor magnet, speed sensor 16-3
 motor speed sensor 16-3
 motor speed sensor kit 16-3
 motor terminal and lead assembly 16-3
 motor terminal insulator 16-3
 mount, compression 6-31, 7-25
 mount, fuel pump 10-3
 mounting block, brake 5-3
 moveable-face 12-5, 12-7, 12-9, 12-11
 muffler hose clamp 1-85, 11-3
- N**
 name plate 3-27, 3-29
 needle bearing 13-9
 nozzle, main 10-9
 nut, lug 2-3, 2-5, 2-7
- O**
 oil conveyor 13-13
 oil filler tube 9-3
 oil filter 9-7
 oil filter mount bracket 9-7
 oil filter screen 9-11
 oil filter screen plate 9-11
 oil level sensor 9-11
 oil level switch bracket 9-11
 oil pump and rotor 9-7
 oil pump cover 9-7
 oil pump filter 9-7
 oil pump plate 9-7
 oil seal 9-9, 9-11, 9-13, 13-7, 13-9
 oil warning light, low 4-17, 4-19
 onboard battery charger 18-7, 18-9, 19-7, 19-9
 onboard computer (OBC) 14-21, 14-23, 15-21, 15-23
 O-ring 9-3, 9-9, 9-11, 9-13, 14-19, 15-19
- P**
 pad
 accelerator pedal 5-5, 5-7
 brake pedal 5-3
 park brake 5-3
 thermal 8-25
 paint, touch-up 20-5
 panel
 front 1-45
 left 1-45
 right 1-45
 panel box 1-41
 panel, front 1-41
 panel, instrument 4-17, 4-19, 4-21, 4-23
 park brake latch 5-3
 park brake pedal 5-3

INDEX

park brake rod sleeve 5-3

park brake spacer 5-3

park brake torsion spring 5-3

pawl 5-3

pedal, accelerator 5-5, 5-7

pedal, brake 5-3

pedal, park brake 5-3

pencil grip 6-11, 7-13

pilot air screw assembly 10-9

pilot jet 10-9

pin

bow tie locking 5-13, 5-15, 5-21

clevis 5-13, 5-15, 5-21

differential 13-11

piston 9-13

pin, hinge 1-49

pin, receiver 1-3

pinion, steering 6-3, 7-5

piston 9-13

piston anchor 5-11, 5-17

piston pin 9-13

piston ring 9-13

piston ring compressor 20-5

piston ring pliers 20-5

piston ring set 9-13

pivot arm 13-7

pivot support bearing 5-5, 5-7

plate

backing (brake) 5-19

component mounting 14-21, 14-23, 15-21, 15-23

engine mounting 9-15

flywheel fan 9-5

front spring retainer 6-17, 6-25, 7-19

latch 1-37

name 3-27, 3-29

oil filter screen 9-11

oil pump 9-7

receptacle backing 14-7, 15-7, 18-11, 19-11

spring mounting 6-17, 6-25, 7-19

thrust 13-9, 13-11

plate, canopy trim 1-27, 1-29, 1-31

plate, Tow/Run switch 14-9, 15-9

pliers

internal retaining ring 20-5

piston ring 20-5

retaining ring 20-5

plug

drain 9-7, 13-13

drive clutch 12-5

driven clutch puller 20-3

fill 13-7, 13-13

hole 4-21, 4-23

rubber drain 8-9, 8-11

spark 9-5

plug cap 9-5

plug, carburetor intake manifold 10-11

port, diagnostic 4-21, 4-23, 14-5, 15-5

portable refreshment center 1-57

PRC 1-57

press weldment 20-3

prop rod 1-39

prop rod track 1-39

protector spray, battery terminal 20-3

puller

bearing 20-3

drive clutch 20-3

drive clutch hub 20-3

driven clutch cam 20-3

flywheel 20-5

seal 20-5

pulley

clutch 12-5, 12-7

starter-generator 8-9, 8-11

v-belt 8-9, 8-11

pump

fuel 10-3

pump assembly, hydraulic tilt bed 1-55

push rod 9-9

R

race, front hub bearing 6-13, 6-21, 7-15

rack guide pressure spring 6-3, 7-5

rack, steering 6-3, 7-5

ratchet, park brake 5-3

reamer, valve guide 20-7

rear fender 1-67

rear spring shackle 6-27, 7-21

rear view mirror 1-15

rear-view mirror, inside 1-73

receiver hitch 1-65

receiver pin 1-3

receptacle and fuse 14-7

receptacle backing plate 14-7, 15-7, 18-11, 19-11

receptacle, AC cord 18-5, 19-5

receptacle, battery charger 14-7, 15-7

rectifier with heatsink 18-3, 18-5, 18-7, 18-9, 19-3, 19-5, 19-7, 19-9, 19-11

reel bracket 18-11, 19-11

reel cord 18-11, 19-11

refreshment center, portable 1-57

regulator, voltage 8-17, 8-19, 8-21

relay 4-9, 8-19, 14-21, 14-23, 15-21, 15-23

relay mounting bracket 8-19, 18-7, 18-9, 19-7, 19-9

relay, 12-volt 4-5

relay, 48V 14-21, 14-23, 15-21, 15-23

relay, 48-volt 18-3, 18-5, 18-7, 18-9, 19-3, 19-5, 19-7, 19-9

relay, brake, kit, 12-volt 4-5

remover, bearing and oil seal 20-3

retainer

accelerator pedal spring 5-5, 5-7

brake shoe 5-11, 5-17, 5-19

headlight 4-3

shock absorber cushion 6-27, 6-29, 7-21, 7-23

spring (drive clutch) 12-5, 12-7

valve spring 9-9

retainer, battery charger 18-13, 19-13

retaining ring 6-5, 7-7

retaining ring pliers 20-5

return spring bumper 5-5, 5-7

reverse buzzer 4-17, 4-19, 4-21, 4-23

rim, wheel 2-5, 2-7

rim, wheel, silver 2-5, 2-7

rim, wheel, white 2-3

ring

C-type stop 6-3, 7-5

piston 9-13

retaining 6-5, 7-7, 8-17, 8-19, 8-21, 12-5, 12-7, 12-9, 12-11

snap 6-3, 7-5, 9-9, 9-13

spiral backup 12-5, 12-7

synchronizer 13-9

rivet, blind push 1-5, 1-7, 14-21, 14-23, 15-21, 15-23

rock guard 17-5

rocker arm 9-9

rocker case 9-9

rocker case gasket 9-9

rocker shaft 9-9

rocker switch 1-51, 1-53, 1-55, 4-21, 4-23

rocker switch (lights) 4-5, 4-9, 4-19, 4-23

rod

accelerator 5-9

accelerator pivot 5-5, 5-7

battery hold-down 14-11, 14-13, 14-15, 14-17, 15-11, 15-13, 15-15, 15-17

connecting 9-13

crankshaft 9-13

equalizer 5-13, 5-15, 5-21

hill brake 5-3

prop 1-39

push 9-9

shift 13-9

roof 1-71

rubber bumper 1-45

S

safety first card 20-5

score card clip 6-11, 7-13

score card plate 6-11, 7-13

screen, oil filter 9-11

screw, valve clearance adjuster 20-7

seal

intake 10-15

INDEX

- lip 17-3
 oil 9-9, 9-11, 9-13, 13-7, 13-9, 13-11, 13-17,
 17-3
 steering pinion dust 6-3, 7-5
 seal puller 20-5
 seal, bed 1-33, 1-35
 sealant 13-7, 17-3
 seat
 spring 9-9
 valve 9-7
 seat back 1-21
 seat back assembly 1-21
 seat back cap 1-21
 seat back tube 1-33
 seat back, white 1-21
 seat belt 1-71
 seat bottom assembly 1-19
 seat bumper 1-19
 seat cover, vinyl 1-19
 seat strap 1-19
 seat, bearing 6-5, 7-7
 sending unit, fuel gauge 10-3
 sensor, motor speed 16-3
 sensor, oil level 9-11
 shackle weldment 6-29
 shackle, rear spring 6-27, 7-21
 shaft
 counterbalance guide 9-13
 drive selector 13-7, 13-13
 input 17-3
 intermediate 17-3
 rocker 9-9
 steering column 6-5, 7-7
 transmission 13-9, 13-15
 shaft, reverse gear 13-15
 shaft, secondary
 transmission 13-15
 shield, air duct 10-15
 shield, battery charger 18-11, 19-11
 shift fork 13-9, 13-15
 shift lever 13-7, 13-13
 shift rod 13-9
 shifter, FNR 13-3
 shim, camshaft 9-11
 shim, crankshaft 9-13
 shim, latch plate 1-37
 shim, tilt bed pivot 1-35
 shock absorber 6-15, 6-23, 6-27, 6-29, 7-17,
 7-21, 7-23
 shock absorber cushion 6-27, 6-29, 7-21, 7-23
 shock absorber cushion retainer 6-27, 6-29,
 7-21, 7-23
 shock extension 7-23
 shock mounting bracket, drv 6-29
 shock mounting bracket, pas 6-29
 shoe retainer kit 5-11, 5-17, 5-19
 shoe, brake 5-11, 5-17, 5-19
 shroud 9-3
 shroud, engine 9-3
 shroud, fan 9-3
 side-view mirror 1-75
 signal, turn 4-13
 single-point watering system 14-19, 15-19
 slam latch 1-45
 sleeve
 delta A-plate 6-15, 6-23, 7-17
 governor 13-9
 park brake rod 5-3
 synchronizer 13-9
 smartkey 4-27
 snap ring 6-3, 7-5, 9-9, 9-13
 snubber bracket 9-15
 snubber, inner frame 9-15
 solenoid 14-21, 14-23, 15-21, 15-23
 solenoid, 12-volt 8-17, 8-19, 8-21
 spacer 1-7, 1-55, 14-11, 14-13, 14-15, 14-17,
 15-11, 15-13, 15-15, 15-17
 accelerator pivot rod 5-5, 5-7
 park brake 5-3
 spark plug 9-5
 speed controller 14-21, 14-23, 15-21, 15-23
 speed sensor 16-3
 speed sensor magnet 16-3
 speed sensor, motor 16-3
 spindle 6-13
 spindle assembly 6-21, 7-15
 spiral backup ring 12-5, 12-7
 splash guard 1-9
 spray, battery terminal protector 4-9, 20-3
 spring
 accelerator return 5-5, 5-7
 brake 5-11, 5-17, 5-19
 brake return 5-15, 5-21
 brush 8-9, 8-11, 16-3
 compression 6-11, 7-13
 drive button 12-5, 12-7
 drive clutch 12-5, 12-7
 driven clutch 12-9
 extension 1-35
 extension return 10-15
 latch tilt 1-41
 leaf 6-27, 6-29, 7-21, 7-23
 park brake torsion 5-3
 rack guide pressure 6-3, 7-5
 shifter 13-9
 steering shaft compression 6-5, 7-7
 synchronizer 13-9
 throttle return 10-11
 valve 9-9
 spring cup 5-5, 5-7
 spring latch 1-45
 spring mounting plate 6-17, 6-25, 7-19
 spring, motor brush 16-3
 spring, leaf 6-17, 6-25
 spur gear 9-13, 13-9
 SPWS coupler 14-19, 15-19
 SPWS fitting, swivel T 14-19, 15-19
 SPWS hose 14-19, 15-19
 SPWS manifold 14-19, 15-19
 SPWS tubing 14-19, 15-19
 stabilizer bar 6-31, 7-25
 stabilizer bar link 6-31, 7-25
 stabilizer bar mounting bracket 6-31, 7-25
 stake side 1-49
 stake side bracket 1-49
 stake side hinge 1-49
 stake side kit 1-49
 starter/generator (bi-rotational) 8-11
 starter/generator belt 8-13
 starter/generator brush cover kit 8-9, 8-11
 starter/generator brush spring 8-9, 8-11
 starter/generator brush terminal 8-9, 8-11
 starter/generator frame and field 8-9, 8-11
 starter/generator pulley 8-9, 8-11
 steel bushing 1-35, 6-17, 6-19, 6-25, 6-27, 6-29,
 7-19, 7-21, 7-23
 steel pressure relief ball 9-7
 steering column 6-5, 7-7
 steering column bearing press tool 20-7
 steering column cover 4-13, 4-15
 steering column retaining ring tool 20-7
 steering gear box 6-3, 7-5
 steering joint 7-9
 steering pinion 6-3, 7-5
 steering pinion dust seal 6-3, 7-5
 steering rack 6-3, 7-5
 steering shaft assembly 6-5, 7-7
 steering shaft compression spring 6-5, 7-7
 steering wheel 6-9, 6-11, 7-11, 7-13
 steering wheel puller tool 20-7
 stem, valve 2-3, 2-5, 2-7
 stiffener 1-19
 stiffener, flywheel side 9-15
 stiffener, PTO side 9-15
 strap, A-plate 6-15, 6-23, 7-17
 strap, fuel tank 10-3
 strap, seat 1-19
 strobe light 1-79, 4-37, 4-39, 4-41
 strobe light lens 4-37, 4-39, 4-41
 stud 9-15
 lug 13-11, 13-17, 17-3
 self-clinching 1-43, 1-45
 stud, ball 8-17, 8-19, 8-21, 13-7, 13-13
 support yoke (steering) 6-3, 7-5
 support, bushing 6-31, 7-25
 suppressor, voltage 4-5, 18-3, 18-5, 18-7, 18-9,
 19-3, 19-5, 19-7, 19-9
 switch plate cover 4-37, 4-39, 4-41

INDEX

switch 1-85
four-position 18-5, 18-9, 19-5, 19-9
key 4-17, 4-19, 4-21, 4-23
key, uncommon 4-29
light 4-5, 4-9
light rocker 4-5, 4-9, 4-19, 4-23
limit 4-5, 4-9, 8-17, 8-19, 8-23, 13-3
rocker 1-51, 1-53, 1-55, 4-21, 4-23
toggle 4-43, 4-45
Tow/Run 14-9, 15-9
turn signal 4-13, 4-15
switch assembly 4-37, 4-39, 4-41
switch panel, accessory 1-77
switch rubber boot 8-15, 14-9, 15-9
switch, toggle 8-15
synchro gear 13-9
synchronizer clutch hub 13-9
synchronizer insert 13-9
synchronizer sleeve 13-9
synchronizer spring 13-9
synchronizer, complete 13-15
system, exhaust 11-3

T

12-volt solenoid 8-17, 8-19, 8-21
tachometer 20-7
tail light bulb 4-53
tailgate 1-41, 1-45
tailgate angle 1-43, 1-45
tailgate mounting kit 1-41
taillight 4-53
taillight assembly 4-5, 4-9, 4-53
taillight base 4-53
taillight gasket 4-53
taillight hardware kit 4-53
taillight lens 4-53
tailskirt 1-67, 1-69
tank
 fuel 10-3
tape 10-15
tape, vinyl foam 1-35
tappet 9-11
terminal block 4-5, 4-9, 14-5, 15-5, 18-11, 19-11
tester, continuity 20-5
tether 1-45
thermal pad 8-25
thermometer, battery 20-3
thread-forming grease fitting 6-13, 6-21, 7-15
throttle return spring 10-11
throttle spring return bracket 10-11
thrust bearing 6-17, 6-25, 7-19
thrust plate 13-9, 13-11
tie rod 6-15, 6-23, 7-17
tie rod end 6-15, 6-23, 7-17
tie wrap 1-3, 1-51, 1-53, 1-55, 1-85, 4-7, 4-11, 4-13, 4-15, 4-31, 4-33, 4-39, 4-41, 4-43, 4-45,

4-51, 6-3, 7-5, 8-17, 8-19, 8-21, 13-5, 14-25, 15-25, 18-11, 19-11
tilt bed 1-35
tilt bed frame 1-35
tilt latch hand grip 1-35, 1-41
tilt, hydraulic, cylinder 1-55
tire 2-3, 2-5, 2-7
tire and wheel assembly 2-3
toggle switch 4-43, 4-45, 8-15
tool
 accelerator pedal adjustment 20-3
 brake adjustment 20-3
 brake cable release 20-3
 charger bezel 20-3
 clutch cam installation 20-3
 drive clutch holder 20-3
 governor shaft installation 20-5
 steering column bearing press 20-7
 steering column retaining ring 20-7
 steering wheel puller 20-7
 transaxle axle seal 20-7
 transaxle pinion seal 20-7
 transmission 20-7
tool kit, clutch 20-3
toolbox 1-59
touch-up paint 20-5
Tow/Run switch 14-9, 15-9
Tow/Run switch bracket 8-15
Tow/Run switch plate 14-9, 15-9
track, prop rod 1-39
trailer hitch 1-61
trailer hitch ball 1-63
trailer hitch brace 1-61
transaxle (Electric Vehicle) 17-3
transaxle axle seal tool 20-7
transaxle Graziano (gasoline vehicle), unitized 13-13
transaxle guard 17-5
transaxle pinion seal tool 20-7
transaxle, Kawasaki (Gasoline Vehicle) 13-7
transformer, battery charger 18-3, 18-5, 18-7, 18-9, 19-3, 19-5, 19-7, 19-9
transmission secondary shaft 13-15
transmission shaft 13-9, 13-15
transmission tool 20-7
trim
 cowl 1-5, 1-7
 seat bottom 1-33
tube
 axle 13-11, 13-17, 17-3
 crankcase vent 10-11
 oil filler 9-3
 seat back 1-33
tubing, SPWS 14-19, 15-19
tune-up kit 20-7
turn signal 4-13

turn signal conversion kit 4-13
turn signal lens 4-3
turn signal socket and lamp 4-13, 4-15
turn signal switch 4-15

U

U-bolt 6-27, 6-29, 7-21, 7-23
unitized transaxle Graziano 13-13
upper delta clevis 6-17, 6-25, 7-19
urethane bushing 1-35, 6-15, 6-17, 6-19, 6-23, 6-25, 6-27, 6-29, 7-17, 7-19, 7-21, 7-23

V

valve
 choke 10-15
 exhaust 9-9
 reed 9-9
valve clearance adjuster screw 20-7
valve guide reamer 20-7
valve guide, intake 9-9
valve seat 9-7
valve seat cutter 20-7
valve seat cutter guide 20-7
valve seat t-wrench 20-7
valve spring 9-9
valve spring compressor 20-7
valve spring retainer 9-9
valve stem 2-3, 2-5, 2-7
valve stem extension 2-9
valve, inlet 1-85
van box 1-87
v-belt 8-13
vent barb 10-3
vent, barb 10-5, 10-7
volt ohm meter 20-7
voltage limiter 4-5, 4-35
voltage regulator 8-17, 8-19, 8-21
voltage suppressor 4-5, 18-3, 18-5, 18-7, 18-9, 19-3, 19-5, 19-7, 19-9

W

warning light, low oil 4-17, 4-19

washer, insulating 16-3

wedge, bearing puller 20-3

weight

 clutch 12-5, 12-7
 counterbalance 9-13
 secondary clutch 12-5, 12-7

weldment

 press 20-3
 tilt bed frame 1-35

weldment, receiver hitch 1-65

wheel

 steering 6-9, 6-11, 7-11, 7-13

wheel and tire assembly 2-3

INDEX

wheel cover 2-9
wheel rim 2-5, 2-7
wheel rim, silver 2-5, 2-7
wheel rim, white 2-3
winch 1-3
window 1-71
windshield 1-71
 hinged 1-23
 one-piece 1-25
windshield channel 1-23
windshield frame 1-27, 1-29, 1-31
windshield frame pad 1-27, 1-29, 1-31
windshield latches 1-71
wiper arm 1-71
wiper blade 1-71
wiper motor 1-71
wire assembly, battery charger 18-5, 19-5
wire harness 1-55, 1-85, 4-31, 4-33, 4-37, 4-39,
 4-49, 8-3, 8-5, 8-7, 14-5, 15-5, 19-11
wire harness, light bar 4-43
wire lead, ignition 9-5
woodruff key 13-7
work lights, light, work 1-81
wrap, tie 1-3, 1-51, 1-53, 1-55, 1-85, 4-7, 4-11,
 4-13, 4-15, 4-31, 4-33, 4-39, 4-41, 4-43, 4-45,
 4-51, 6-3, 7-5, 8-17, 8-19, 8-21, 13-5, 14-25,
 15-25, 18-11, 19-11

Y

yoke, gear 20-5
yoke, support (steering) 6-3, 7-5



Club Car, Inc.
P.O. Box 204658
Augusta, GA 30917-4658
USA

Web www.clubcar.com
Phone 1.706.863.3000
1.800.ClubCar
Int'l +1 706.863.3000
Fax 1.706.863.5808