


Club Car

®

**2006
XRT 1500/Carryall 294
Illustrated Parts List**

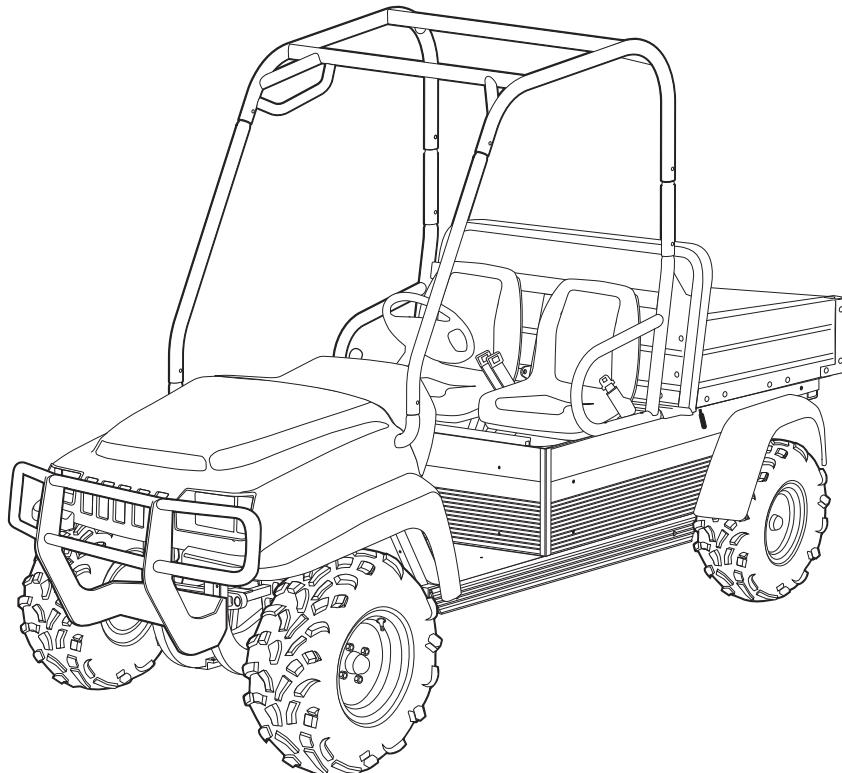

Gasoline and Diesel Vehicles

Manual Number 102907608
Edition Code 0307L0112K

USING THE ILLUSTRATED PARTS LIST

⚠ WARNING

- This manual is to be used only for identification and ordering of service parts. Be sure to read and use the maintenance and service manual before attempting any vehicle repairs.

This manual covers all XRT 1500 and Carryall 294 vehicles.

The manual is divided into 15 sections. Sections 1 through 14 pertain to service parts for the vehicles, and Section 15 pertains to tools that are used on all Club Car products.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section numbers, and under them, the individual page titles and numbers to be found in that section. The index can be used to find specific parts and assemblies. The index is divided into numerical and alphabetical listings with the page numbers in italic text.

There is a two-page spread for each individual page title in the Table of Contents. On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used.

Note that a part description may be indented. This indentation corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to *level 2* is a component of the *level 1* part (assembly) that it is listed under. A *level 3* part is a component of the *level 2* part that it is listed under, and a *level 4* part is a component of the *level 3* part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part is *the quantity used per next higher level assembly of which it is a component*. A part that is not indented is a *level 1* part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.

HOW TO ORDER PARTS

Replacement parts and accessories can be obtained from our network of authorized dealers and distributors. You can obtain the name and phone number of your closest authorized Club Car dealer or distributor by visiting our web site at www.clubcar.com and clicking on the "Distributor Search" link or by calling our toll-free Service Parts and Technical Assistance hotline at (800) 872-2246 or (706) 863-3000, extension 3887.



P. O. Box 204658
Augusta, Georgia 30917-4658 USA
Telephone 706-863-3000
Service Parts Fax 706-855-7413
www.clubcar.com

NOTE: This illustrated parts list represents the most current information at the time of publication. Club Car, Inc. is continually working to further improve its vehicles and other products. These improvements may affect the parts used to service the vehicle. Any modification and/or significant change in specifications will be forwarded to all Club Car and Carryall distributors/dealers and will, when applicable, appear in future editions of this illustrated parts list.

Club Car, Inc. reserves the right to change specifications and designs at any time without notice and without the obligation of making changes to units previously sold.

Copyright © 2007 Club Car, Inc.
Club Car is a registered trademark of Club Car, Inc.
This manual effective July 15, 2005.

CONTENTS

SECTION 1 – BODY AND TRIM

Front Body Trim, Gasoline Vehicles	1-3
Front Body Trim, Diesel Vehicles	1-5
Front Body Components	1-7
Front Seats and Cup Holder	1-9
ROPS	1-11
Tilt Bed and Hinge	1-13
Electric Bed Lift	1-15
Rear Body Trim	1-17
Cargo Box (Steel)	1-19

SECTION 2 – WHEELS AND TIRES

Wheels and Tires	2-3
------------------------	-----

SECTION 3 – DECALS

Safety Decals, Gasoline Vehicles	3-3
Safety Decals, Gasoline Vehicles, Continued	3-5
Safety Decals, Diesel Vehicles	3-7
Safety Decals, Diesel Vehicles, Continued	3-9
Badging Decals, XRT 1500 Vehicles	3-11
Badging Decals, Carryall 294 Vehicles	3-13

SECTION 4 – BRAKE SYSTEMS

Front Brake Assembly	4-3
Rear Brake Assembly	4-5
Master Cylinder	4-7
Hydraulic Brake Lines and Clips	4-9
Park Brake Assembly with Pulley System	4-11
Park Brake Assembly with Bellcrank System	4-13

SECTION 5 – PEDAL GROUP

Accelerator Pedal Assembly	5-3
Brake Pedal Assembly	5-5
Park Brake Pedal Assembly	5-7
Park Brake Pedal Assembly with Bellcrank System	5-9

CONTENTS

SECTION 6 – STEERING AND SUSPENSION

Steering Column	6-3
Steering Gear Assembly	6-5
Front Suspension – A-Arms	6-7
Front Suspension (Standard)	6-9
Front Suspension (High-Capacity Option)	6-11
Rear Suspension (Standard)	6-13
Rear Suspension (High-Capacity Option)	6-15

SECTION 7 – ELECTRICAL SYSTEM

Wiring – Gasoline Vehicles	7-5
Wiring – Gasoline Vehicles	7-9
Wiring – Diesel Vehicles	7-13
Headlights	7-15
Electrical Component Box, Gasoline Vehicles	7-17
Electrical Component Box, Diesel Vehicles	7-19
Electrical Components, Instrument Panel, Gasoline Vehicles	7-21
Electrical Components, Instrument Panel, Diesel Vehicles	7-23
Battery – Gasoline Vehicles	7-25
Battery – Diesel Vehicles	7-27

SECTION 8 – DIESEL ENGINE – CLOSED BREATHER

Kubota D722 Diesel Engine Mounting	8-3
Crankcase	8-5
Oil Pan	8-7
Cylinder Head	8-9
Gear Case	8-11
Head Cover	8-13
Dipstick and Guide	8-15
Oil Pump	8-17
Main Bearing Case	8-19
Camshaft and Idle Gear	8-21
Piston and Crankshaft	8-23
Flywheel	8-25
Shaft	8-27
Idle Apparatus	8-29
Stop Solenoid	8-31
40-Amp Alternator	8-33

CONTENTS

60-Amp Alternator	8-35
Injection Pump	8-37
Speed Control Plate	8-39
Nozzle Holders and Glow Plugs	8-41
Governor Components	8-43
Starter	8-45
Valves and Rocker Arms	8-47
Diesel Inlet Manifold	8-49
Exhaust Manifold	8-51
Gasket Kits	8-53
Piston Kit	8-55

SECTION 9 – HONDA GX620 GASOLINE ENGINE

Honda GX620 Gasoline Engine Mounting	9-3
Shrouds and Brackets	9-5
Ignition Components and Flywheel	9-7
Oil Circulation	9-9
Cylinder Head	9-11
Crankcase and Crankshaft	9-13
Oil Filter Adapter and Voltage Regulator	9-15

SECTION 10 – FUEL, INTAKE, AND GOVERNOR SYSTEM

Fuel System – Gasoline Vehicles	10-3
Fuel Tank – Gasoline Vehicles	10-5
Fuel System – Diesel Vehicles	10-7
Fuel Tank – Diesel Vehicles	10-9
Carburetor Assembly, Honda Gasoline Vehicles	10-11
Carburetor Installation – Honda Gasoline Vehicles	10-13
Governor and Accelerator Cables, Gasoline Vehicles	10-15
Choke Cable, Gasoline Vehicles	10-17
Accelerator Cable, Diesel Vehicles	10-19
Governor Cover – Gasoline Vehicles	10-21
Governor System – Gasoline Vehicles	10-23
Intake Duct and Air Box Assembly – Honda Gasoline Vehicles	10-25
Intake Duct and Air Box Assembly – Diesel Vehicles	10-27

SECTION 11 – EXHAUST SYSTEM

Exhaust System, Gasoline Vehicles	11-3
Exhaust System, Diesel Vehicles	11-5

CONTENTS

SECTION 12 – CLUTCHES

Clutch Cover (Standard)	12-3
Clutch Cover (Sealed)	12-5
Drive Belt	12-7
Drive Clutch – Gasoline Vehicles	12-9
Drive Clutch – Diesel Vehicles	12-11
Driven Clutch	12-13

SECTION 13 – DRIVETRAIN COMPONENTS

Front Differential Mounting and Half Shafts	13-3
Front Differential (Output Components)	13-5
Front Differential (Input Components)	13-7
Prop Shafts	13-9
Forward/Reverse Shifter Assembly	13-11
Transmission	13-13
Transmission, Continued	13-15
Transmission Shift Shaft and Bell CrankTransmission Shift Shaft and Bell Crank (Style A)	13-17
Transmission Shift Shaft and Bell Crank (Style B)	13-19
Transmission, Continued	13-21
Transmission Cable	13-23
Rear Differential	13-25
Rear Differential, Continued	13-27

SECTION 14 – RADIATOR AND COOLANT SYSTEM (DIESEL VEHICLES)

Radiator	14-3
Coolant Expansion Tank	14-5
Coolant Pipes and Hoses	14-7
Water Flange and Thermostat	14-9
Water Pump	14-11
Block Coolant Pipe	14-13

SECTION 15 – MAINTENANCE AND SERVICE TOOLS

Maintenance and Service Tools	15-3
Maintenance and Service Tools, Continued	15-5
Maintenance and Service Tools, Continued	15-7
Maintenance and Service Tools, Continued	15-9
Maintenance and Service Tools, Continued	15-11

CONTENTS


SECTION i – INDEX

BODY AND TRIM

1

G

D

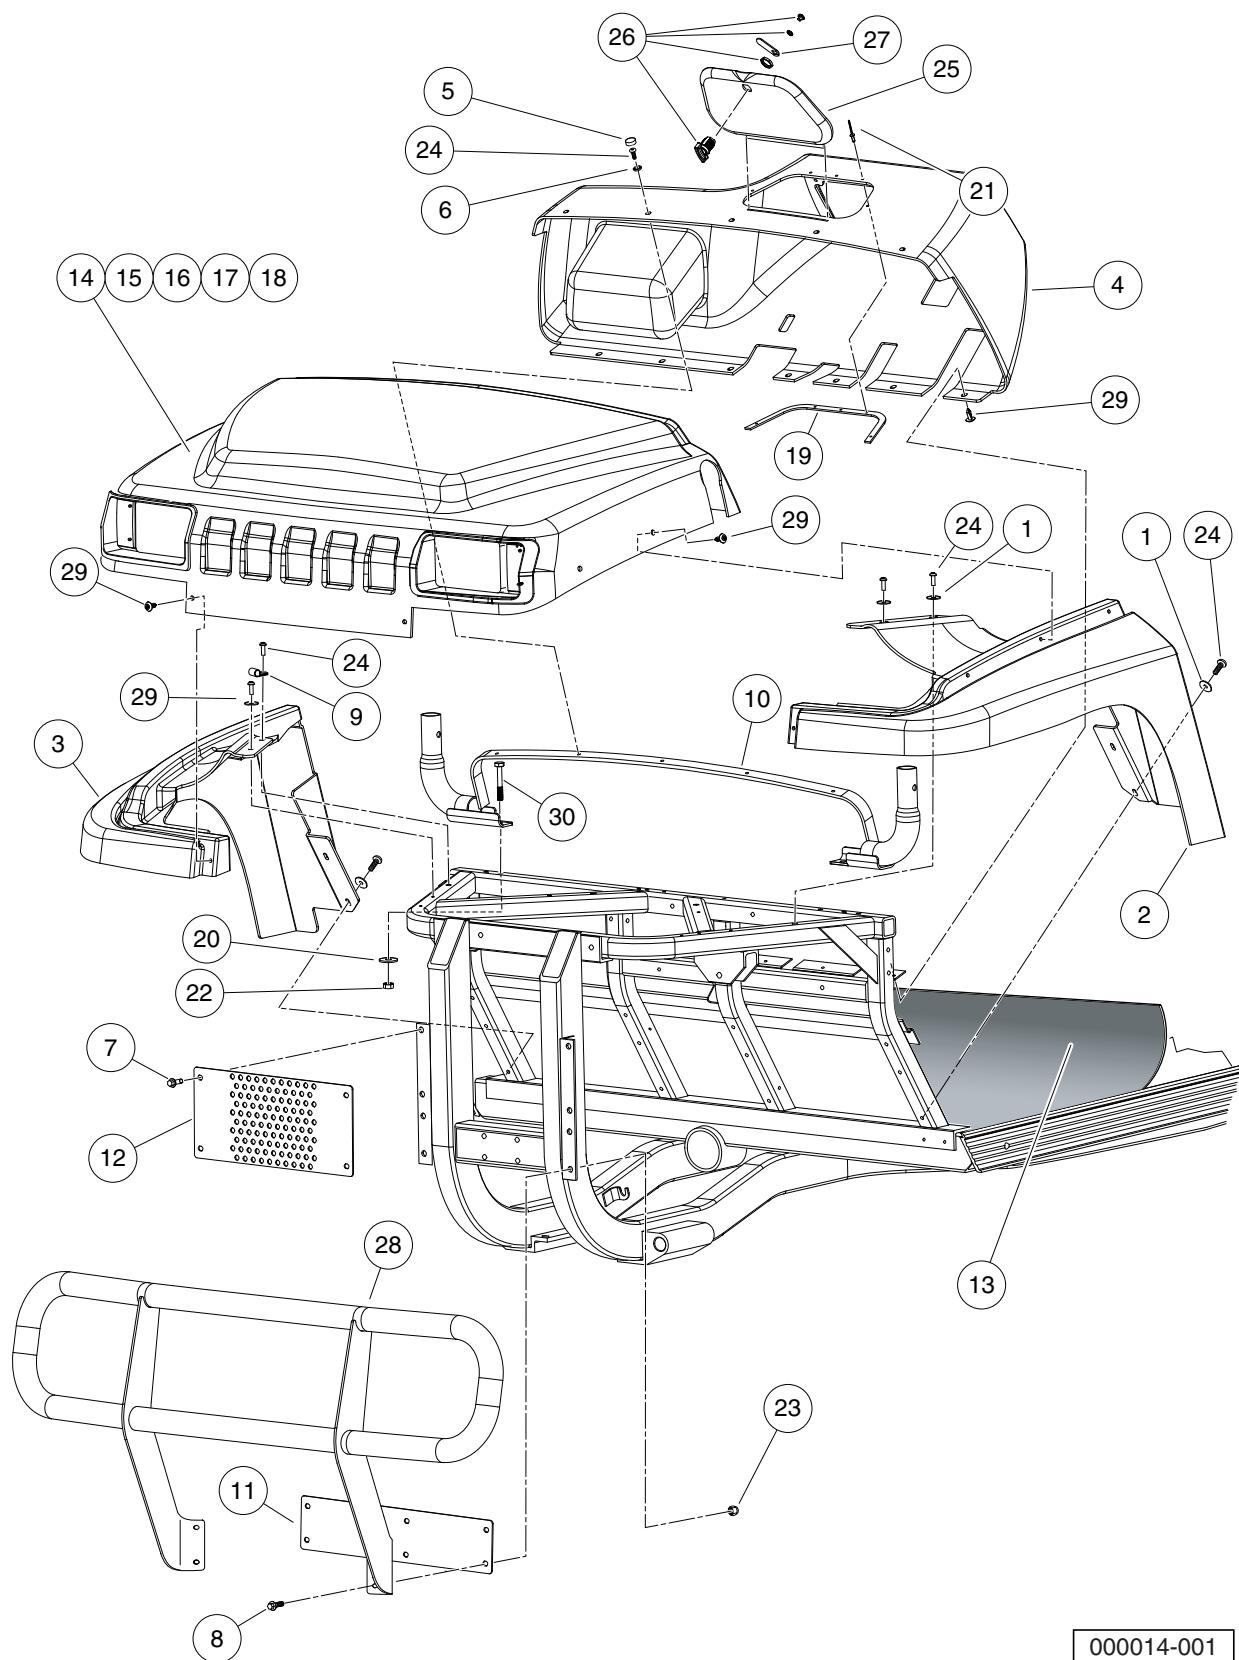1**G****D**

000014-001


FRONT BODY TRIM, GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014306</u>	Washer, 1/4" Type B Flat	7
2	<u>102021502</u>	Fender, Left Front	1
3	<u>102021602</u>	Fender, Right Front	1
4	<u>102021802</u>	Dashboard with Access Hole	1
5	<u>102045001</u>	Cap, 1/4" Plastic Screw Head	5
6	<u>102048401</u>	Washer, 1/4 Id Scalloped Plast	5
7	<u>102289002</u>	Screw, M8 X 1.25 X 30 Tri, Blk	4
8	<u>102298130</u>	Bolt, Flange Head, M8 X 30.0	4
9	<u>102410603</u>	P-Clamp, Insulated .312 In	1
10	<u>102418501</u>	Weldment, Support, ROPS	1
11	N/A	Plate, Brush Mount	1
12	<u>102429301</u>	Grill, Flat	1
13	<u>102432001</u>	Mat, Floor	1
14	<u>102459710</u>	Cowl, Machined, Dark Green	1
15	<u>102459714</u>	Cowl, Machined, Dark Gray	1
16	<u>102459715</u>	Cowl, Machined, Red	1
17	<u>102459716</u>	Cowl, Machined, White	1
18	<u>102459718</u>	Cowl, Machined, Camo	1
19	<u>102477301</u>	Support, Access Panel, Dash	1
20	<u>102491501</u>	Washer Hard,m10	4
21	<u>102492801</u>	Rivet, .125" Dia, .311" Panel	5
22	<u>102617201</u>	Nut Flg M10 X 1.5 Mech Def	4
23	<u>102618601</u>	Lock Nut, Flg M8 X 1.25 Nylon	4
24	<u>102628601</u>	Screw, 1/4-20 X 1.0 Pn Hd Torx	13
25	<u>102760501</u>	Panel, Access, Dash	1
26	<u>102760701</u>	Cam Lock Body	1
27	<u>102760801</u>	Latch, Cam, Access Panel	1
28	<u>102778001</u>	Asm, Brush Guard	1
29	<u>102967901</u>	Rivet, Removable, Tuflok 1/4"	15
30	<u>96715552</u>	Bolt, M10 X 1.50 X 65	4

1

G

D

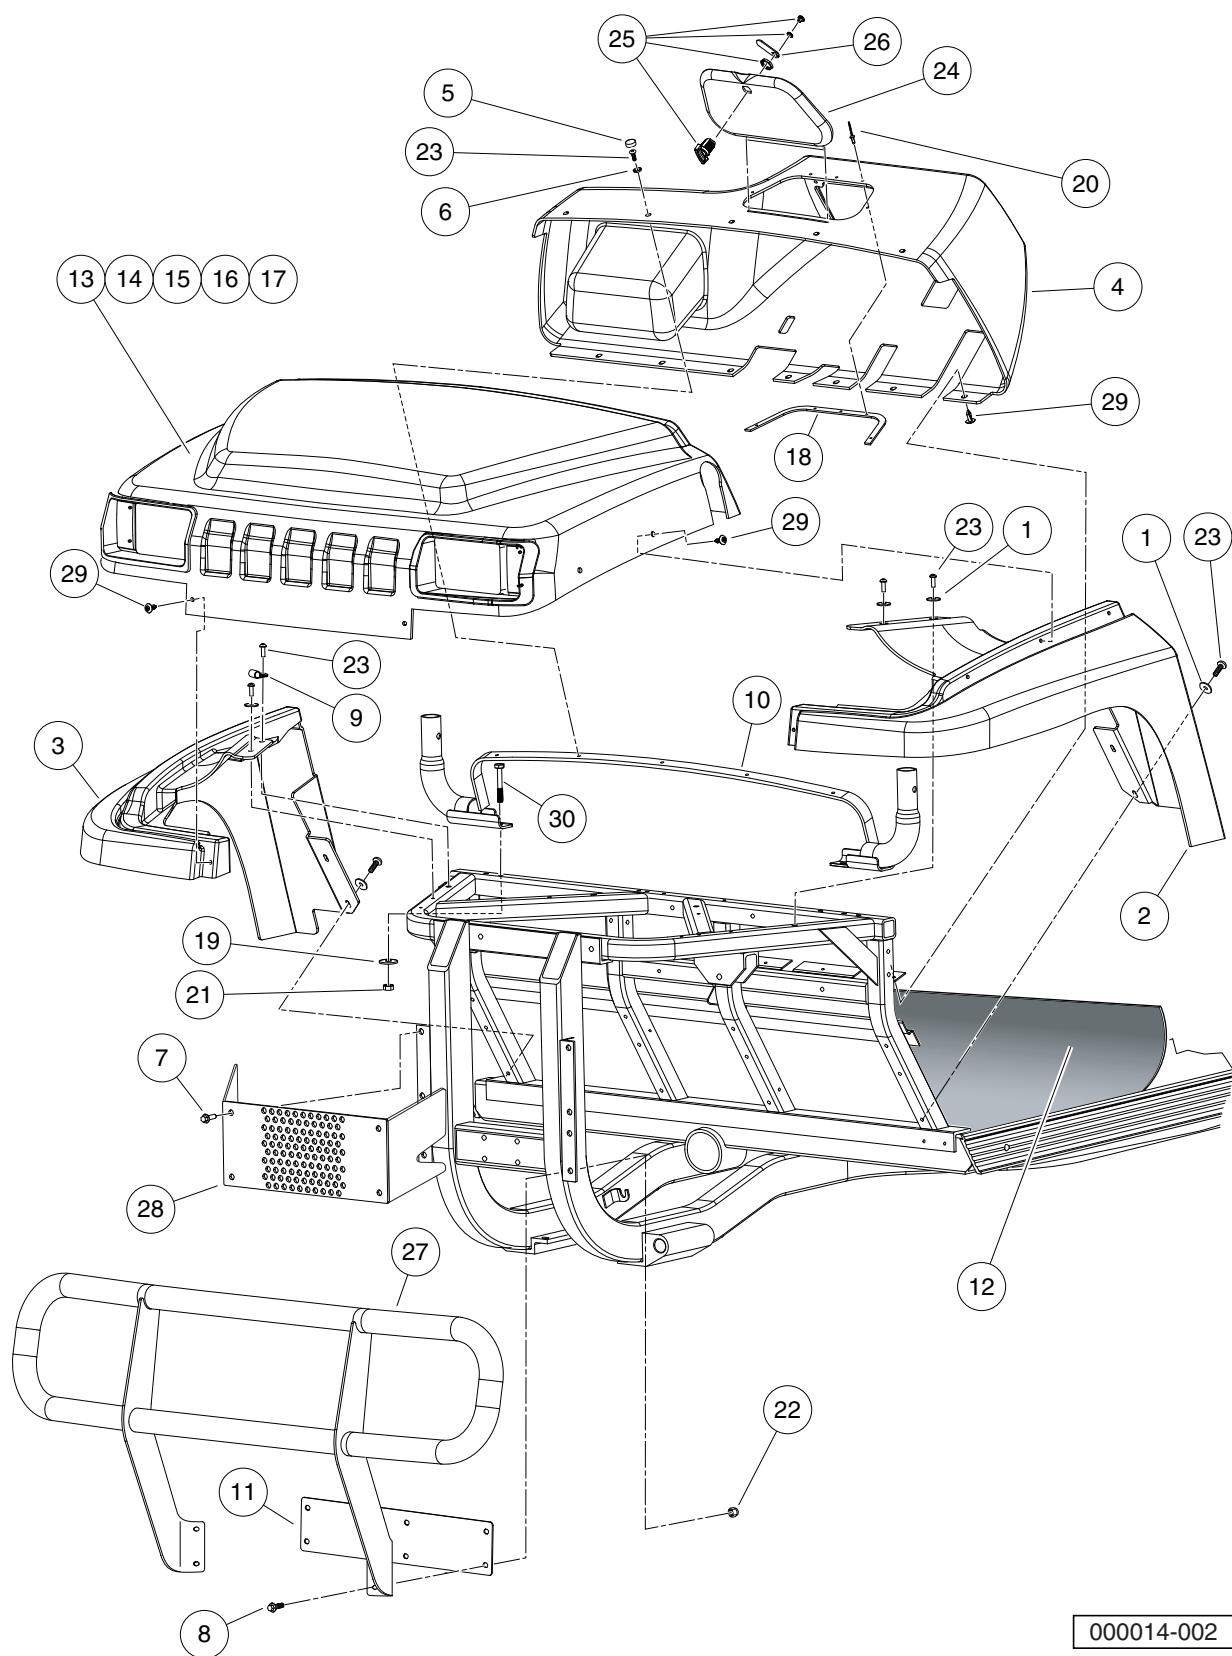1**G****D**


FRONT BODY TRIM, DIESEL VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014306</u>	Washer, 1/4" Type B Flat	7
2	<u>102021502</u>	Fender, Left Front	1
3	<u>102021602</u>	Fender, Right Front	1
4	<u>102021802</u>	Dashboard with Access Hole	1
5	<u>102045001</u>	Cap, 1/4" Plastic Screw Head	5
6	<u>102048401</u>	Washer, 1/4 Id Scalloped Plast	5
7	<u>102289002</u>	Screw, M8 X 1.25 X 30 Tri, Blk	4
8	<u>102298130</u>	Bolt, Flange Head, M8 X 30.0	4
9	<u>102410603</u>	P-Clamp, Insulated .312 In	1
10	<u>102418501</u>	Weldment, Support, ROPS	1
11	N/A	Plate, Brush Mount	1
12	<u>102432001</u>	Mat, Floor	1
13	<u>102459710</u>	Cowl, Machined, Dark Green	1
14	<u>102459714</u>	Cowl, Machined, Dark Gray	1
15	<u>102459715</u>	Cowl, Machined, Red	1
16	<u>102459716</u>	Cowl, Machined, White	1
17	<u>102459718</u>	Cowl, Machined, Camo	1
18	<u>102477301</u>	Support, Access Panel, Dash	1
19	<u>102491501</u>	Washer Hard,m10	4
20	<u>102492801</u>	Rivet, .125" Dia, .311" Panel	5
21	<u>102617201</u>	Nut Flg M10 X 1.5 Mech Def	4
22	102618601	Lock Nut, Flg M8 X 1.25 Nylon	4
23	<u>102628601</u>	Screw, 1/4-20 X 1.0 Pn Hd Torx	13
24	<u>102760501</u>	Panel, Access, Dash	1
25	<u>102760701</u>	Cam Lock Body	1
26	<u>102760801</u>	Latch, Cam, Access Panel	1
27	<u>102778001</u>	Asm, Brush Guard	1
28	<u>102831601</u>	Guard, Radiator	1
29	<u>102967901</u>	Rivet, Removable, Tuflok 1/4"	15
30	<u>8248</u>	Screw, 1/4-20 X 0.75 Truss-Head Machine	4

1

G

D

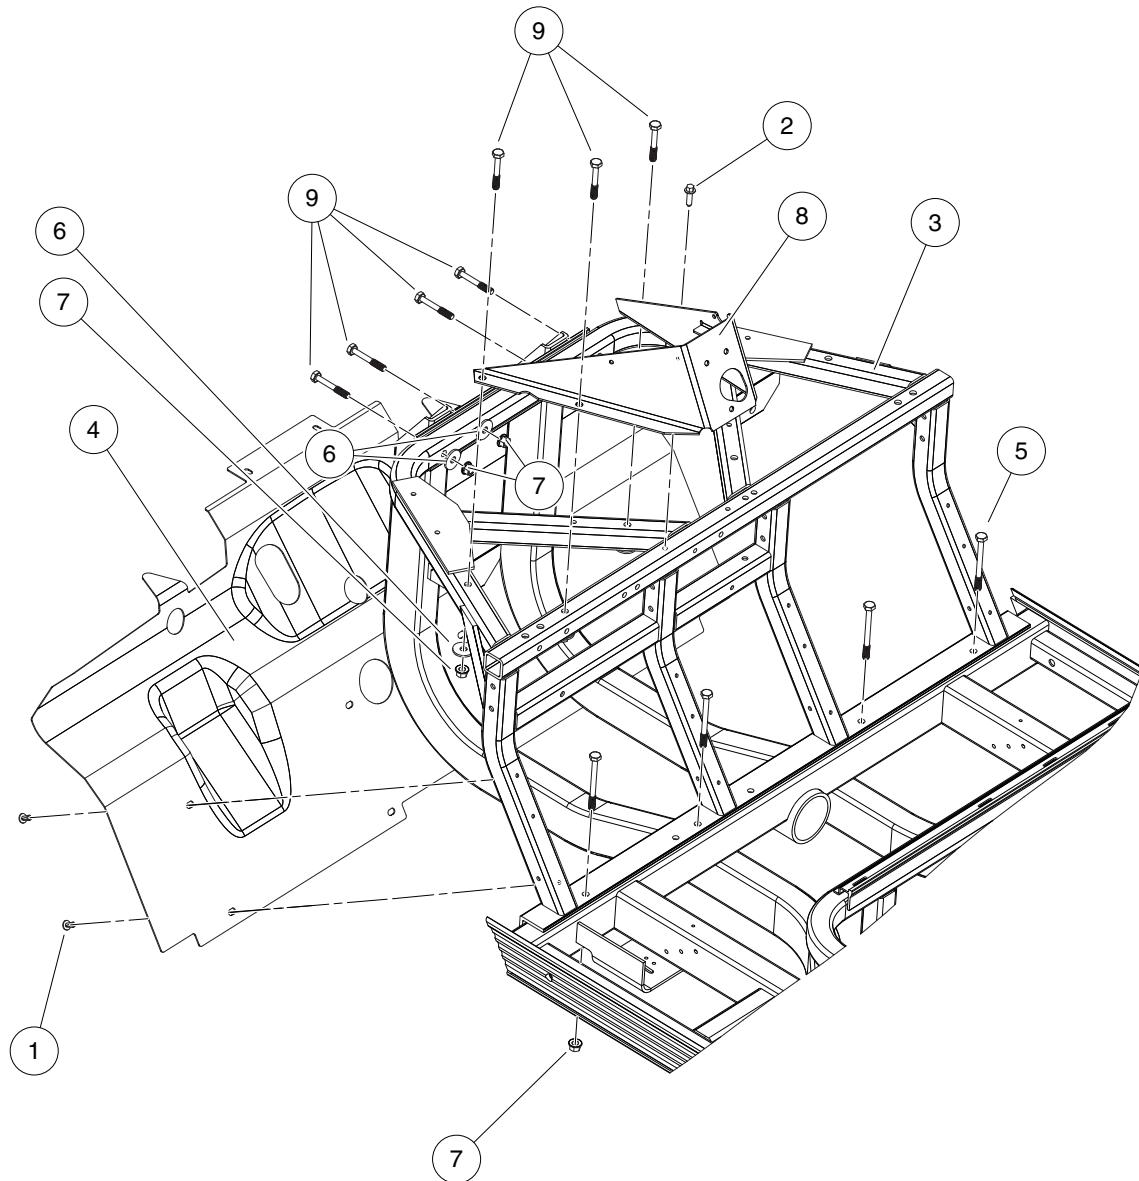1**G****D**

000017-001

FRONT BODY COMPONENTS


ITEM	PART NO.	DESCRIPTION	QTY
1	<u>1016967</u>	Blind Rivet, Push Type	8
2	<u>102289001</u>	Screw, M8X1.25X30, Hex	1
3	<u>102373401</u>	Weldment, Dash, Front	1
4	<u>102437201</u>	Guard, Splash	1
5	<u>102491301</u>	Bolt, M10x1.50x100 (Black)	4
6	<u>102491501</u>	Washer Hard,m10	7
7	<u>102617201</u>	Nut Flg M10 X 1.5 Mech Def	11
8	****	Bracket, Support, Steering	1
9	<u>96715552</u>	Bolt, M10 X 1.50 X 65	7

**** Special order item available upon request.

1

G

D

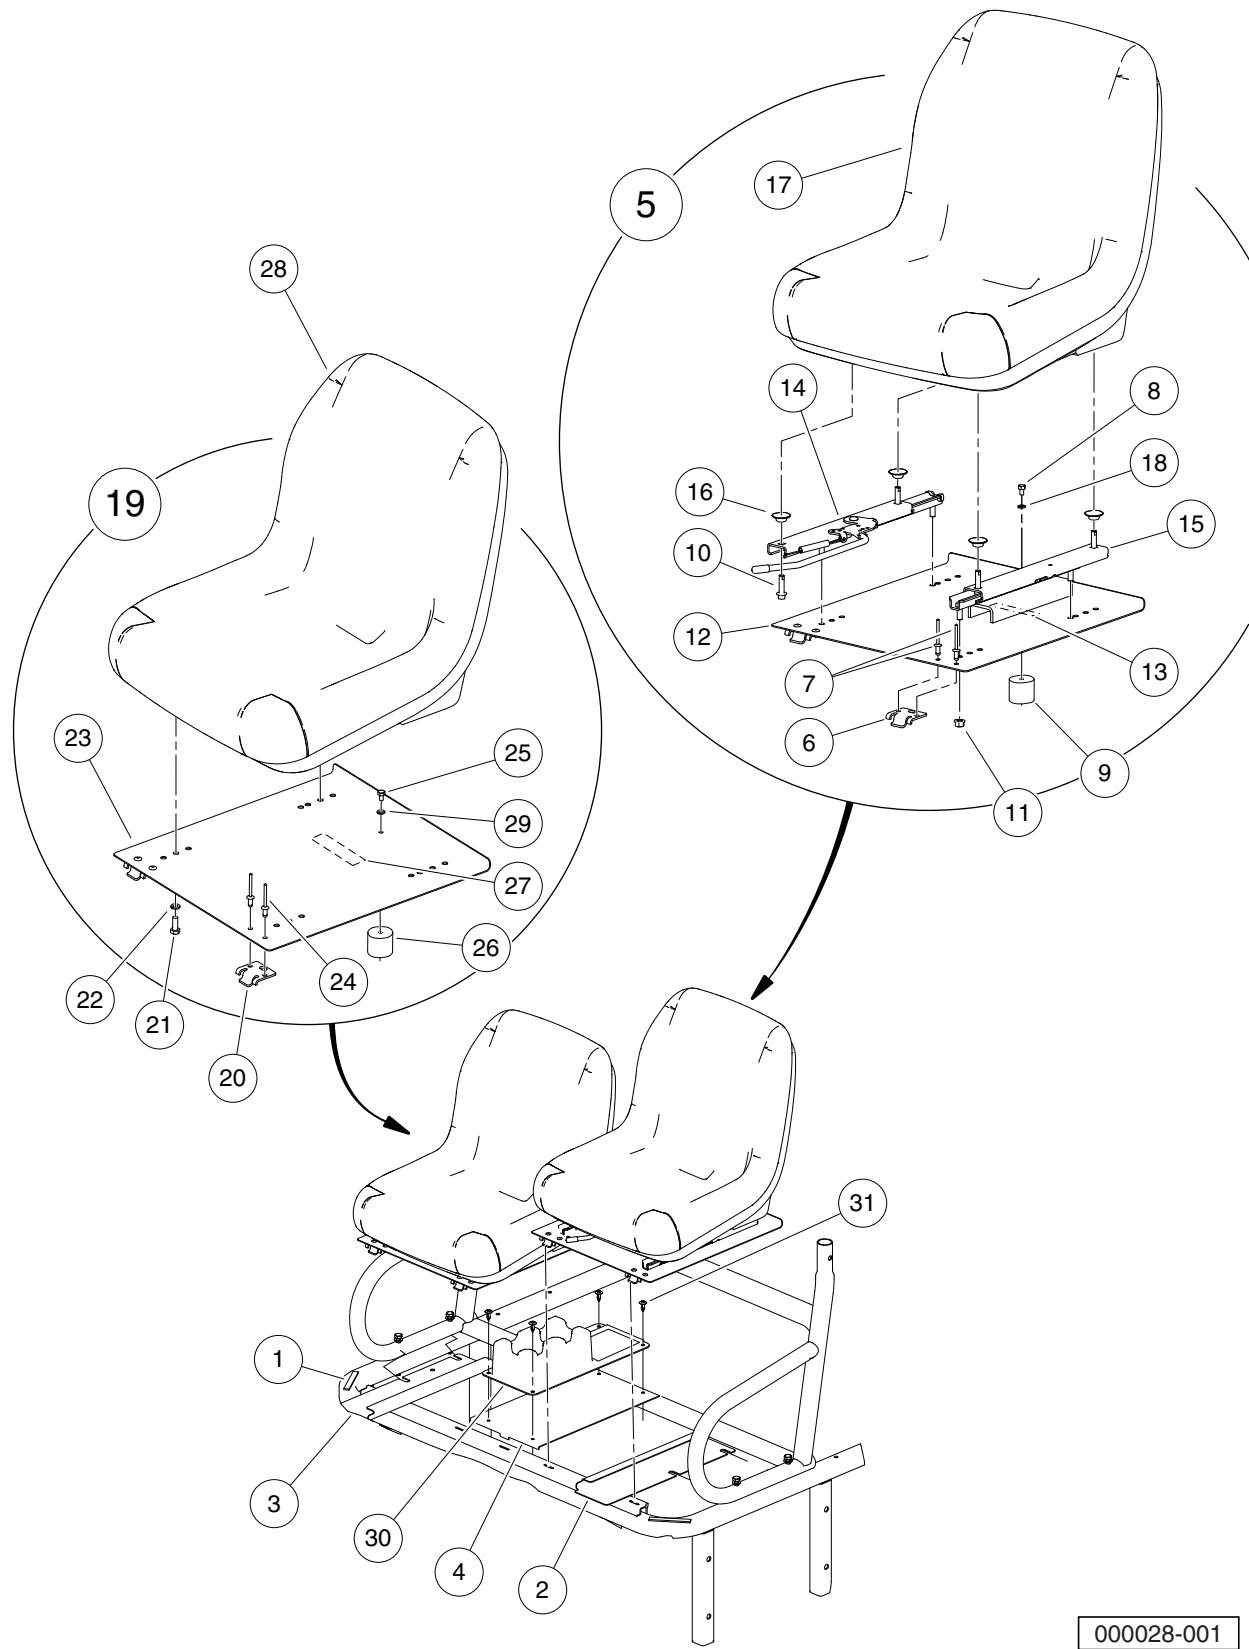
1**G****D**

000028-001

FRONT SEATS AND CUP HOLDER


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	1
1	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4" *	2
2	<u>102425401</u>	Closeout, Driver Side	1
3	<u>102425501</u>	Closeout, Passenger Side	1
4	<u>102442001</u>	Pan, Center, Closeout	1
5	<u>102473701</u>	Asm, Bucket Seat Adjustable (includes items 6 through 18)	1
6	<u>1011652</u>	Hinge Plate	2
7	<u>102047001</u>	Rivet, 1/4 X .438 Blind	4
8	<u>102059401</u>	Screw, 6m-1.00 X 10mm Hex Head	1
9	<u>102061101</u>	Seat Holder Cup	1
10	<u>102298130</u>	Bolt, Flange Head, M8 X 30.0	4
11	<u>102298401</u>	Nut,m8,all Metal Lock	4
12	<u>102456001</u>	Pan, Seat, Driver Asm	1
13	<u>102458901</u>	Decal, Hot Surface Warning	1
14	<u>102473501</u>	Adjuster, Forward/Aft	1
15	<u>102473601</u>	Adjuster, Slider	1
16	<u>102475901</u>	Washer, Bell	4
17	<u>103267001</u>	Seat, Bucket, Gray	1
18	<u>451</u>	Lockwasher, 1/4 Split	1
19	N/A	Assembly, Bucket Seat w/Spacers (includes items 20 through 29)	1
20	<u>1011652</u>	Hinge Plate	2
21	<u>1012830</u>	Screw, M8-125 X 22 Hex-Head	4
22	<u>1013734</u>	Lockwasher, 8mm Split	4
23	<u>102023703</u>	Pan, Seat, Passenger	1
24	<u>102047001</u>	Rivet, 1/4 X .438 Blind	4
25	<u>102059401</u>	Screw, 6m-1.00 X 10mm Hex Head	1
26	<u>102061101</u>	Seat Holder Cup	1
27	<u>102458901</u>	Decal, Hot Surface Warning	1
28	<u>103267001</u>	Seat, Bucket, Gray	1
29	<u>451</u>	Lockwasher, 1/4 Split	1
30	<u>102486201</u>	Console, Center, Drink Holder	1
31	<u>102967901</u>	Rivet, Removable, Tuflok 1/4"	4

* Note: Item not shown.

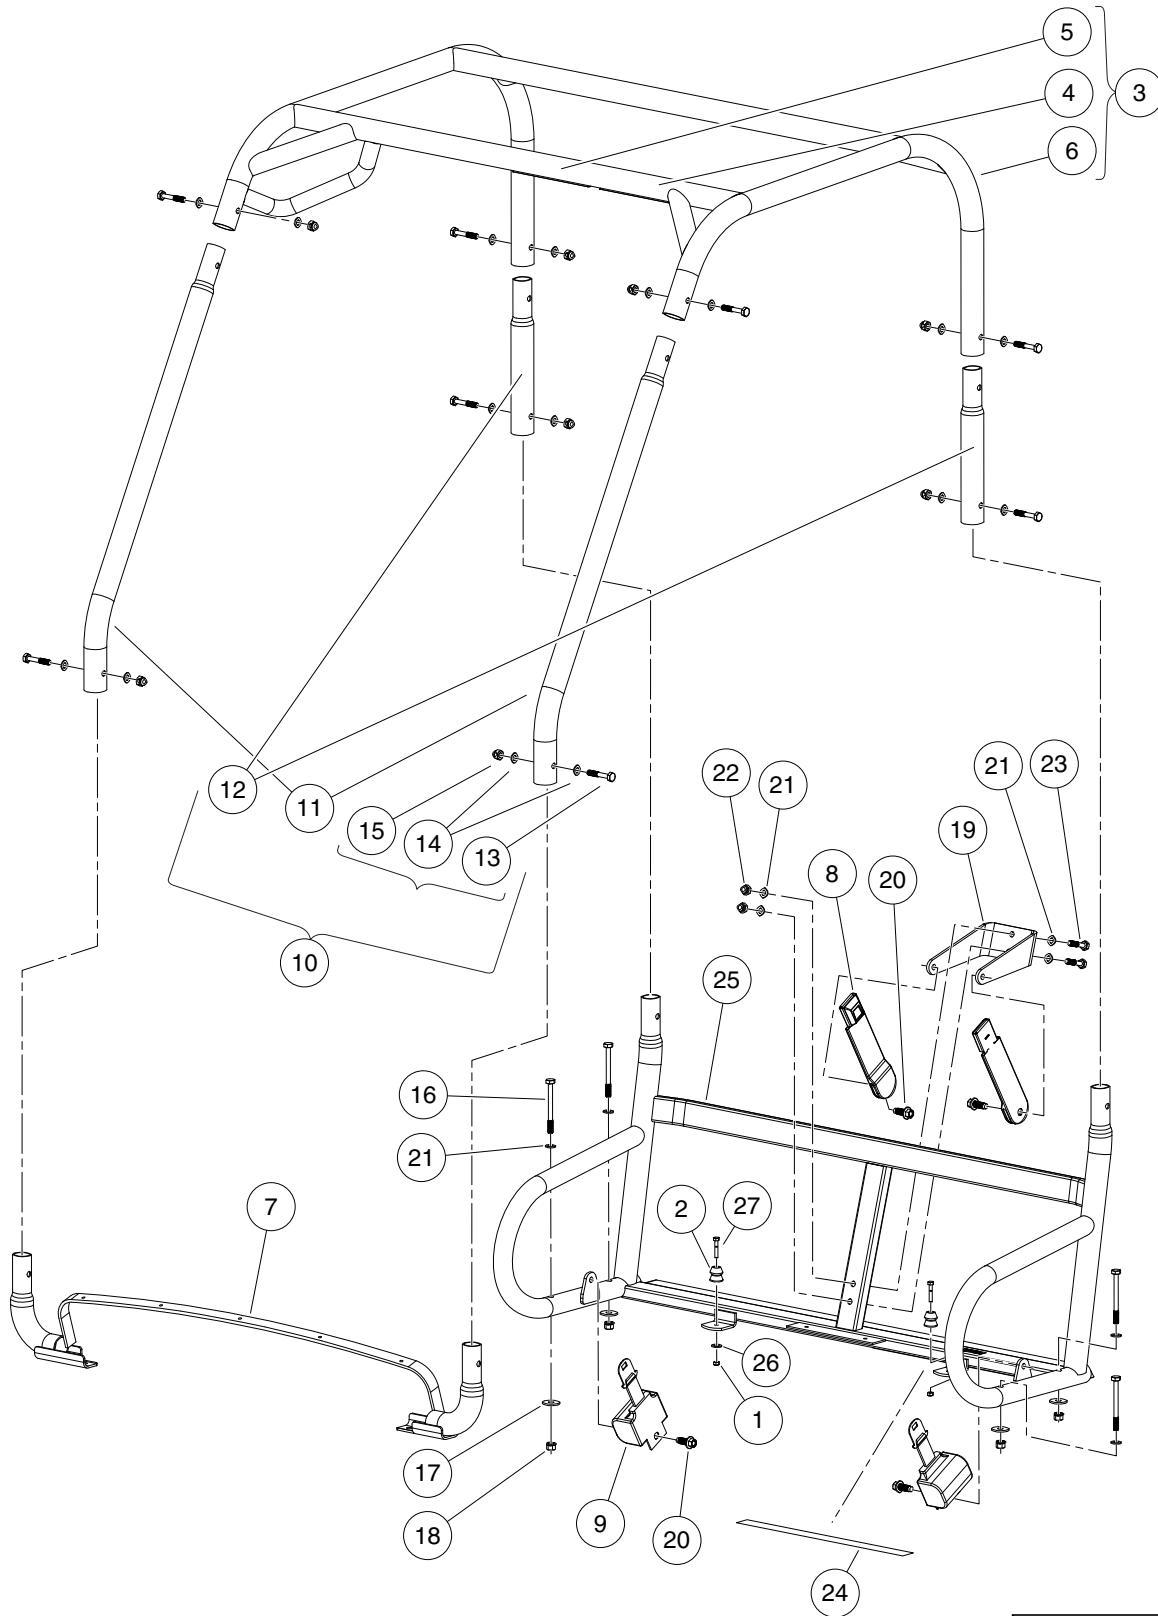1**G****D**

ROPS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	1
1	<u>101887601</u>	Locknut, M6-1.00 Nylon Insert	2
2	<u>102059001</u>	Seat Holder Base	2
3	<u>102418401</u>	Weldment, Top, ROPS (includes items 4 through 6)	1
4	<u>102459401</u>	Decal, Young Driver Warning	1
5	<u>102621101</u>	Decal, ROPS Certification/Warning	1
6	N/A	Weldment, ROPS, Top, Unlabeled	1
7	<u>102418501</u>	Weldment, Support, ROPS	1
8	<u>102447601</u>	Buckle, Seat Belt with Sleeve	2
9	<u>102447602</u>	Retractor, Seat Belt	2
10	<u>102482201</u>	Kit, ROPS (includes items 11 through 15)	1
11	<u>102419901</u>	Tube, Support, Front, ROPS	2
12	<u>102420001</u>	Tube, Support, Rear, ROPS	2
13	<u>102718001</u>	Bolt, M10 X 55, Zn-Ni (Black)	8
14	<u>102718101</u>	Washer, Hard, M10, Zn-Ni/Blk	16
15	<u>102718201</u>	Nut, Hex Cap, M10, Zn-Ni/Blk	8
16	<u>102491301</u>	Bolt, M10x1.50x100 (Black)	4
17	<u>102491501</u>	Washer Hard,m10	4
18	<u>102617201</u>	Nut Flg M10 X 1.5 Mech Def	4
19	<u>102670601</u>	Bracket, Seatbelt, Bolt-On	1
20	<u>102671201</u>	Screw,m12x1.75x30 Thd Form Blk	4
21	<u>102718101</u>	Washer, Hard, M10, Zn-Ni/Blk	8
22	<u>102718201</u>	Nut, Hex Cap, M10, Zn-Ni/Blk	2
23	<u>102732401</u>	Bolt, M10 X 45, Zn-Ni (Black)	2
24	<u>102739201</u>	Barrier, Heat, Neoprene	1
25	<u>102886101</u>	Weldment, Supp, Seat, Rops	1
26	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
27	<u>96742515</u>	Bolt, M6 X 1 X 45	2

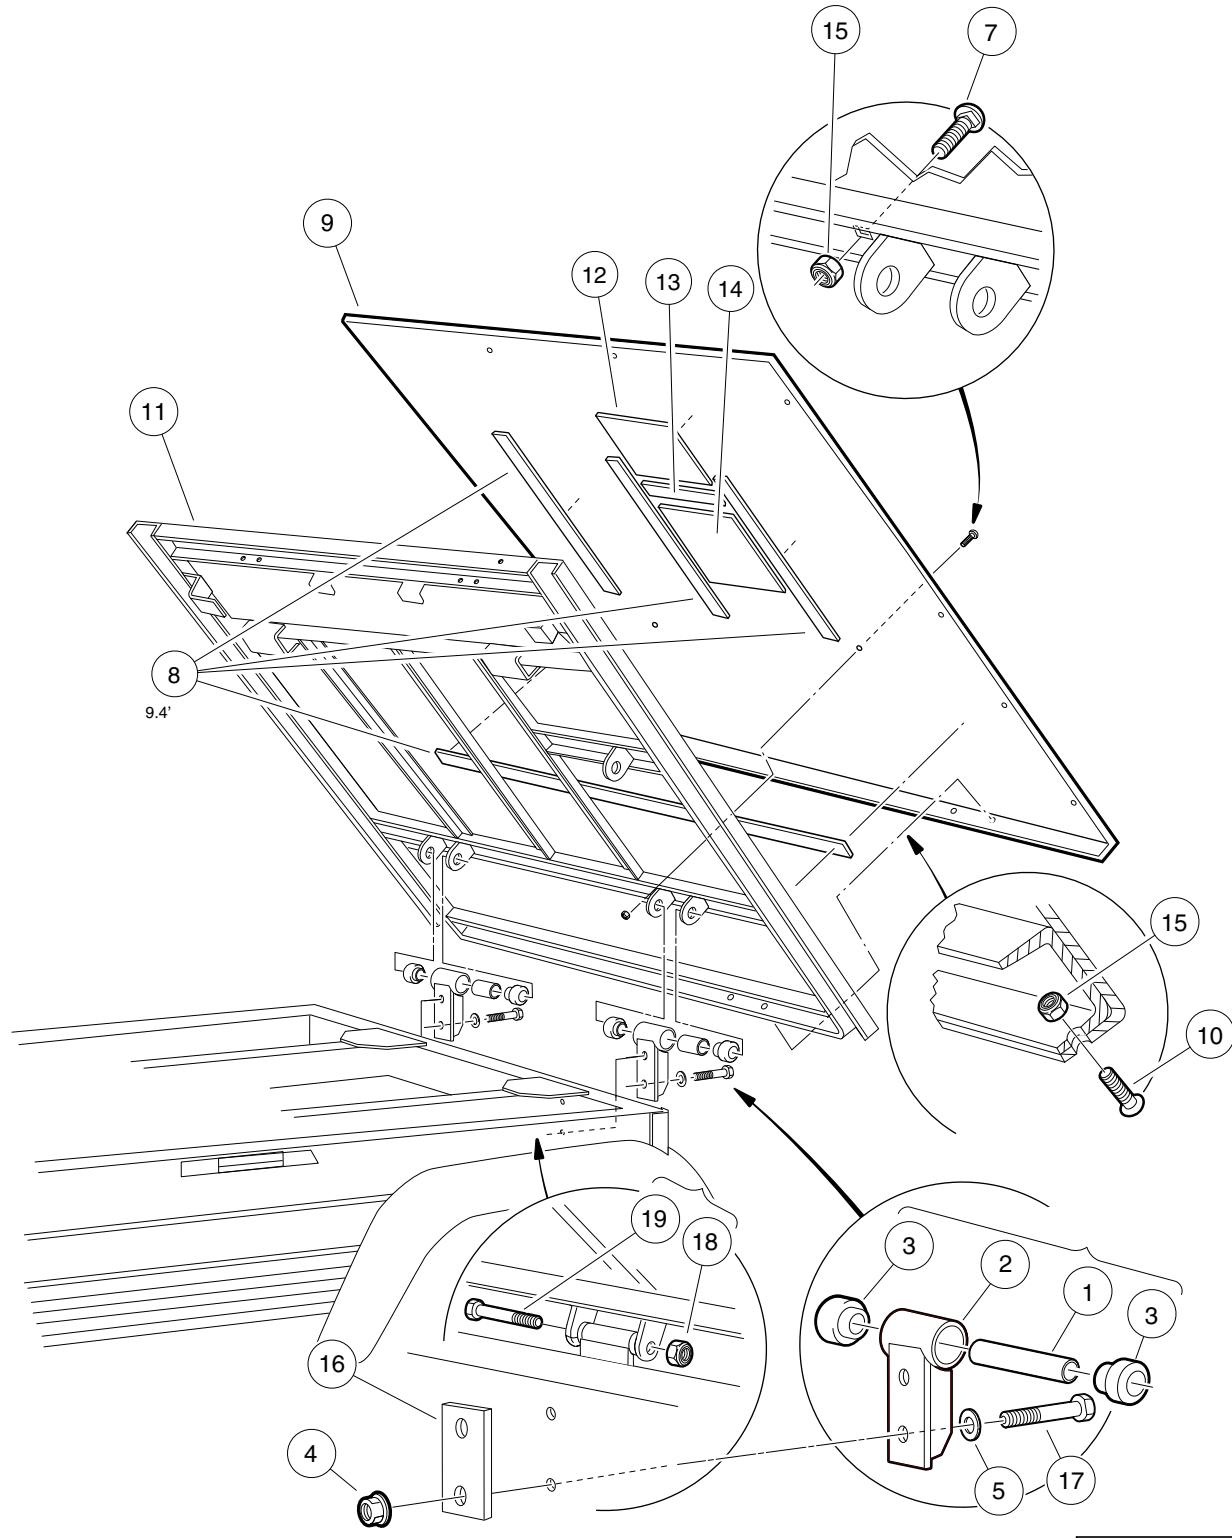
1**G****D**

000157-001

TILT BED AND HINGE


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	1
1	<u>1012303</u>	Bushing, Steel	2
2	<u>1015356</u>	Hinge	2
3	<u>1015583</u>	Bushing, Urethane	2
4	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4
5	<u>102066001</u>	Washer, 3/8 Type B Hard Flat	4
6	<u>102171504</u>	Assembly, Tilt Bed, Electric Lift (includes items 7 through 14)	1
7	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	4
8	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4" *	1
9	<u>1015258</u>	Plate, Floor Bed	1
10	N/A	Frame Assembly	1
11	1015399	Screw, 5/16-18 X 0.88 Torx Truss-Head	4
12	<u>102725801</u>	Foam, Barrier, Heat, Bed, Frt	1
13	<u>102725901</u>	Foam, Barrier, Heat, Bed, Rail	1
14	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	8
15	<u>102614101</u>	Plate, Back	2
16	<u>7561</u>	Bolt, 3/8-16 X 3.00 Hex Head	4
17	<u>8754</u>	Locknut, 3/8-16 Hex	2
18	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2

* Note: Item not shown.

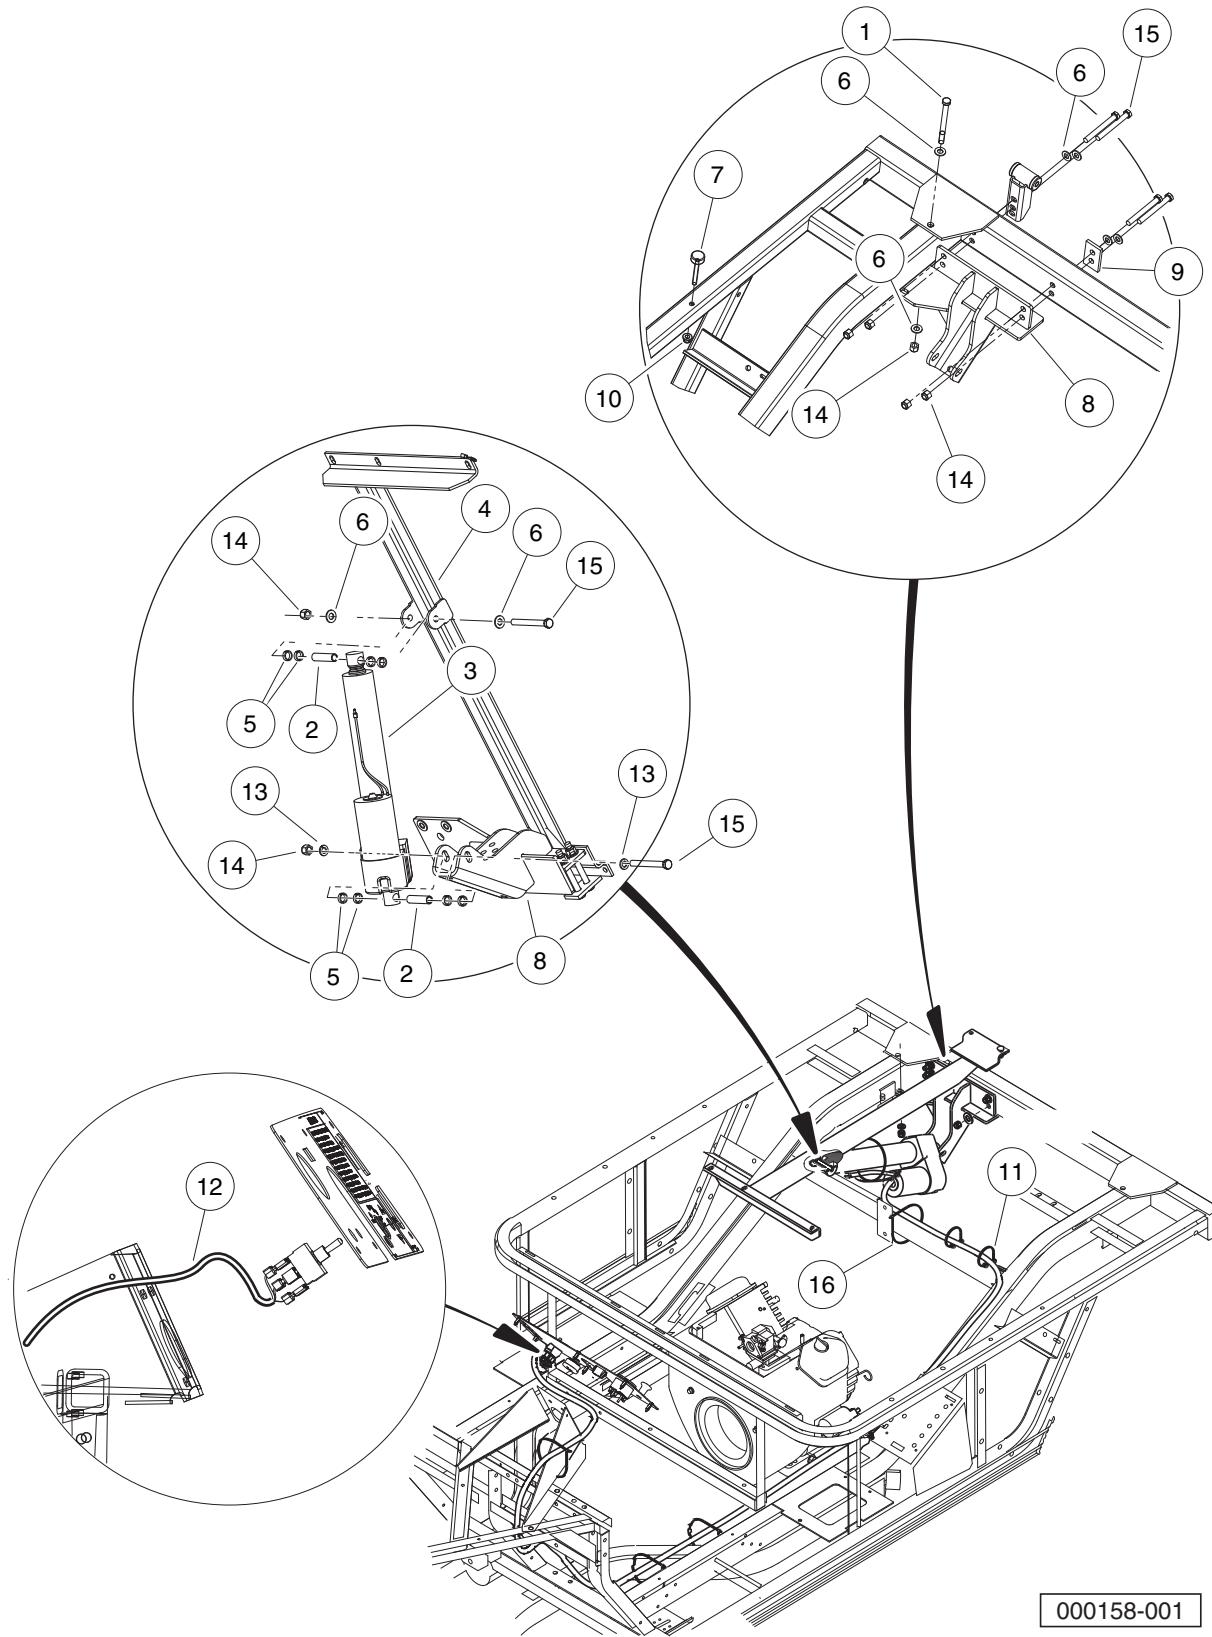1**G****D**

ELECTRIC BED LIFT


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010200</u>	Bolt, 3/8-16 X 4.25 Hex Head	1
2	<u>1016603</u>	Bushing Long	2
3	<u>1017162</u>	Actuator Assembly, Electric	1
4	<u>1017167</u>	Actuator Adapter	1
5	<u>1017774</u>	Body Spacer	8
6	<u>102066001</u>	Washer, 3/8 Type B Hard Flat	8
7	<u>102426601</u>	Bumper, Bed, Mtg, Front	2
8	<u>102465701</u>	Weldment, Bracket, Actuator	1
9	<u>102614101</u>	Plate, Back	1
10	102618601	Lock Nut, Flg M8 X 1.25 Nylon	2
11	<u>102629001</u>	Tie Wrap, 8.00" With Mount	2
12	<u>102673901</u>	Wire Harness, Electric Lift	1
13	<u>357</u>	Lockwasher, 3/8 Split	2
14	<u>8754</u>	Locknut, 3/8-16 Hex	9
15	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	6
16	<u>8990</u>	Tie Wrap, 8" Nylon	5

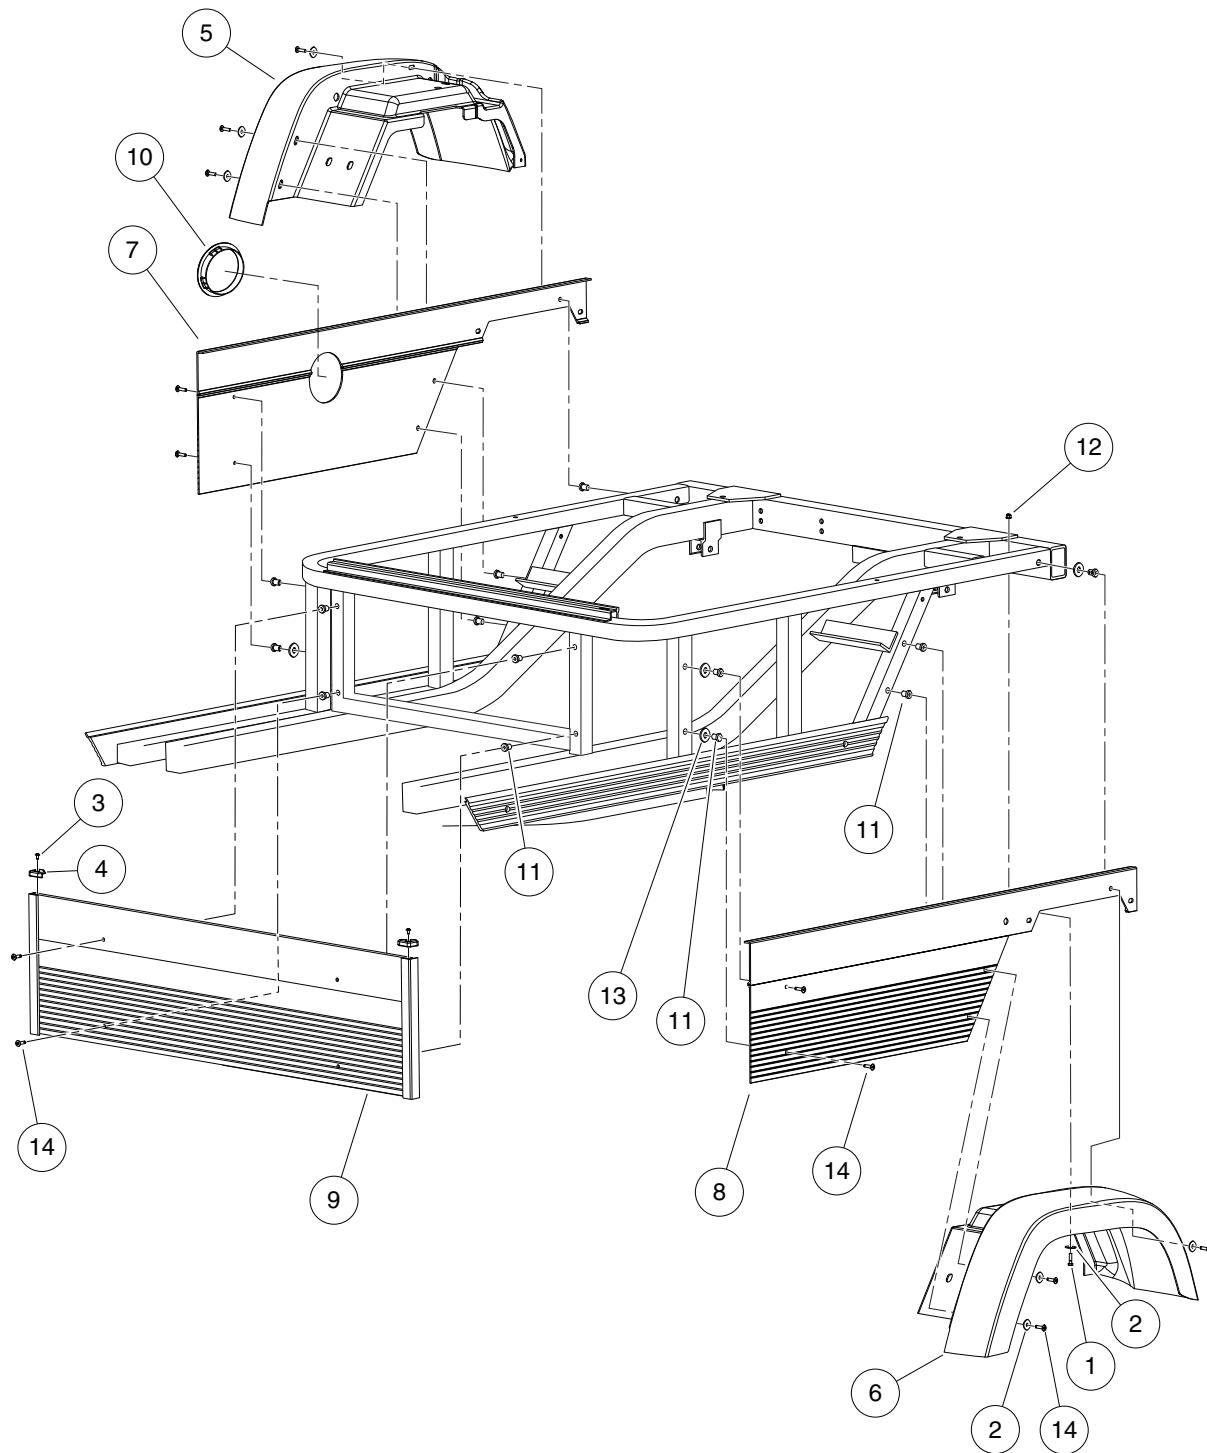1**G****D**

000027-001

REAR BODY TRIM

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012769</u>	Screw, M6-1.00 X 25mm Hex Cap	2
2	<u>1014306</u>	Washer, 1/4" Type B Flat	8
3	<u>1014321</u>	Screw, #10 Truss-Head Torx	2
4	<u>101438702</u>	Corner Cap AWD	2
5	<u>102251601</u>	Fender, Right Rear	1
6	<u>102251701</u>	Fender, Left Rear	1
7	<u>102454001</u>	Assembly, Panel (Passenger Side)	1
8	<u>102454101</u>	Assembly, Panel (Driver Side)	1
9	<u>102454201</u>	Panel, Front	1
10	<u>102466201</u>	Bezel, Fuel Fill	1
11	<u>102491701</u>	Well Nut 1/4-20	14
12	<u>102621501</u>	Nut Flg, M6 X 1.0 Nylon	2
13	<u>102684501</u>	Washer, M12 Hard Regular	2
14	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	14

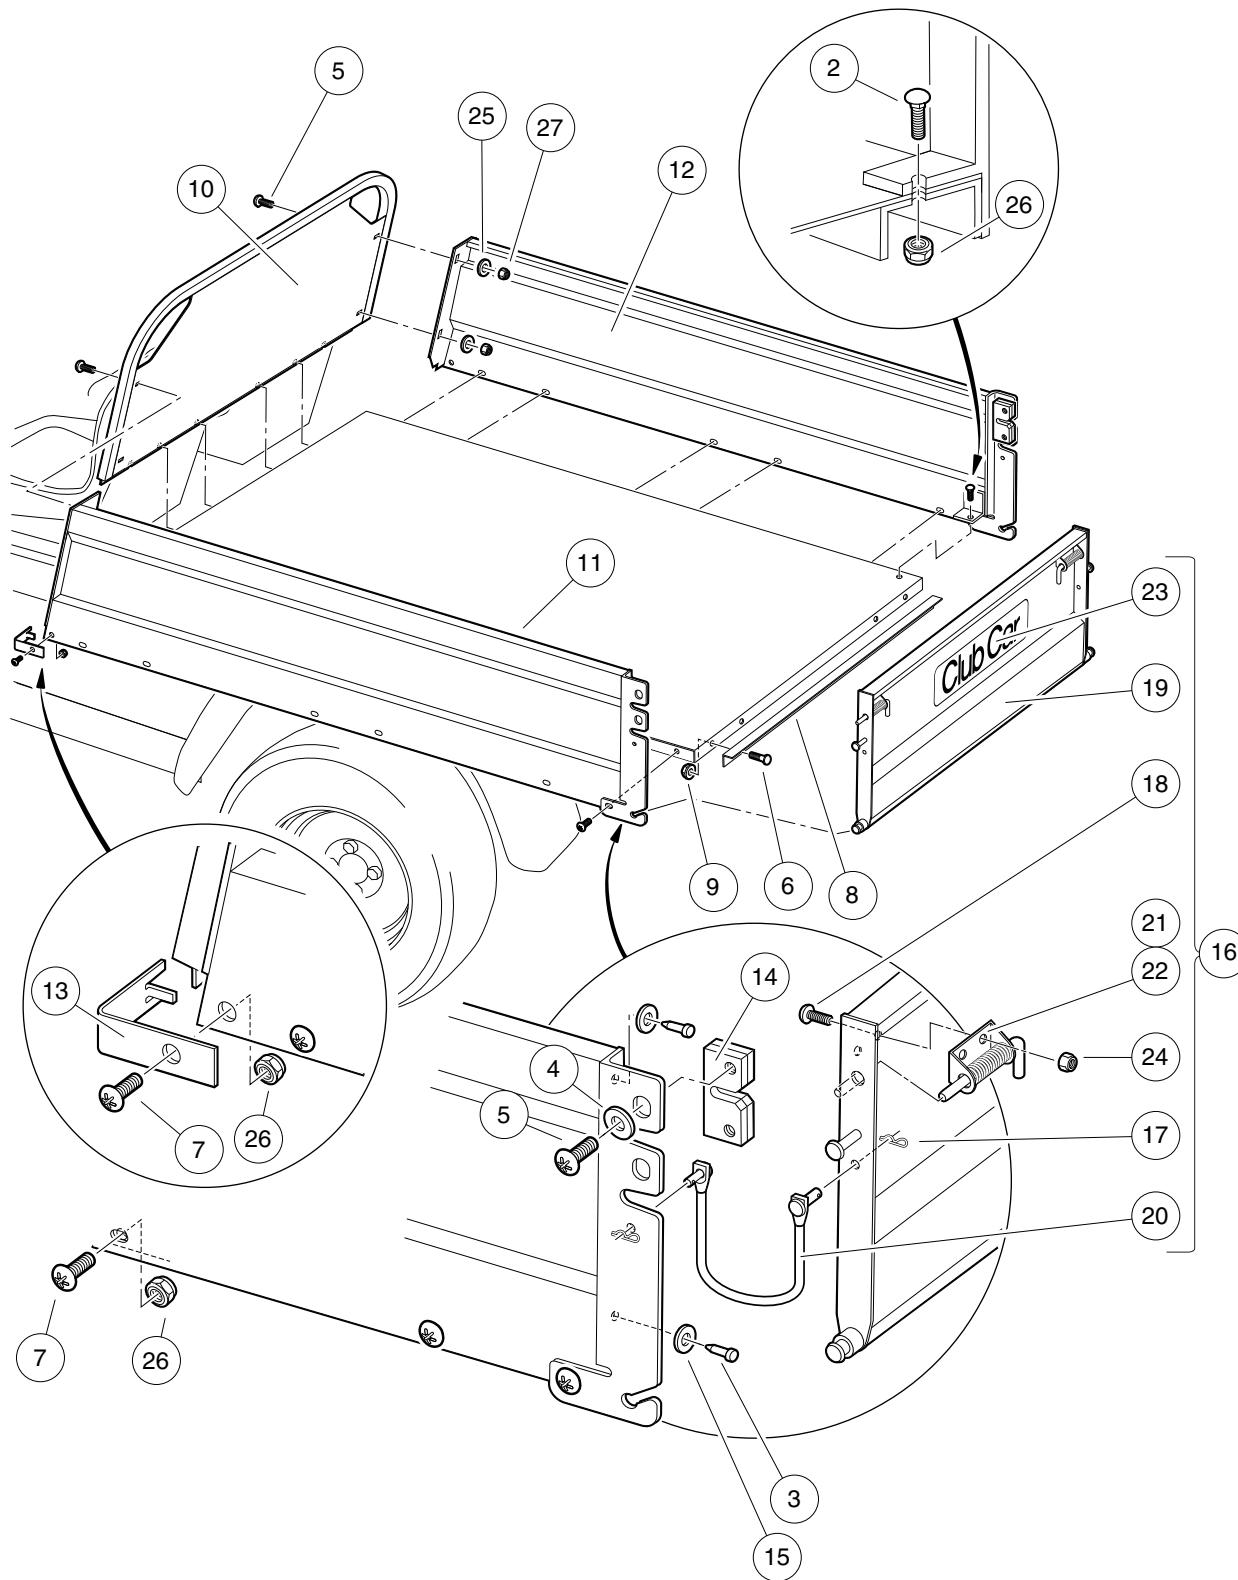1**G****D**

000038-001

CARGO BOX (STEEL)

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	1
1	N/A	Instl, Steel Box, XRT (includes items 2 through 27)	1
2	<u>1010435</u>	Bolt, Carriage, 5/16-18 X 1.00	13
3	<u>1010436</u>	Bumper, Rubber	4
4	<u>1014306</u>	Washer, 1/4" Type B Flat	4
5	<u>1014415</u>	Screw, 1/4-20 X 0.75 Torx Truss-Head	8
6	<u>1014537</u>	Stud, Self-Clinching Flush Head	4
7	<u>1015399</u>	Screw, 5/16-18 X 0.88 Torx Truss-Head	18
8	<u>101894304</u>	Box Bed Tailgate Angle	1
9	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	4
10	<u>102221301</u>	Front Panel Weldment	1
11	<u>102221401</u>	Left Panel Weldment	1
12	<u>102221501</u>	Right Panel Weldment	1
13	<u>102221701</u>	Front Corner Cap	2
14	<u>102222001</u>	Slam Latch	2
15	<u>102239901</u>	Washer, Rubber, 3/8	4
16	<u>102614401</u>	Assembly, Tailgate (includes items 17 through 24)	1
17	<u>1013366</u>	Hair Pin Clip	4
18	<u>1014415</u>	Screw, 1/4-20 X 0.75 Torx Truss-Head	4
19	N/A	Tailgate, Weldment	1
20	<u>102221801</u>	Tether Assembly	2
21	<u>102222101</u>	Spring Latch Left	1
22	<u>102222201</u>	Spring Latch Right	1
23	<u>102673201</u>	Decal, Club Car Tailgate	1
24	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4
25	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4
26	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	31
27	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	4

1

G

D

1

G


D

WHEELS AND TIRES

2

G

D

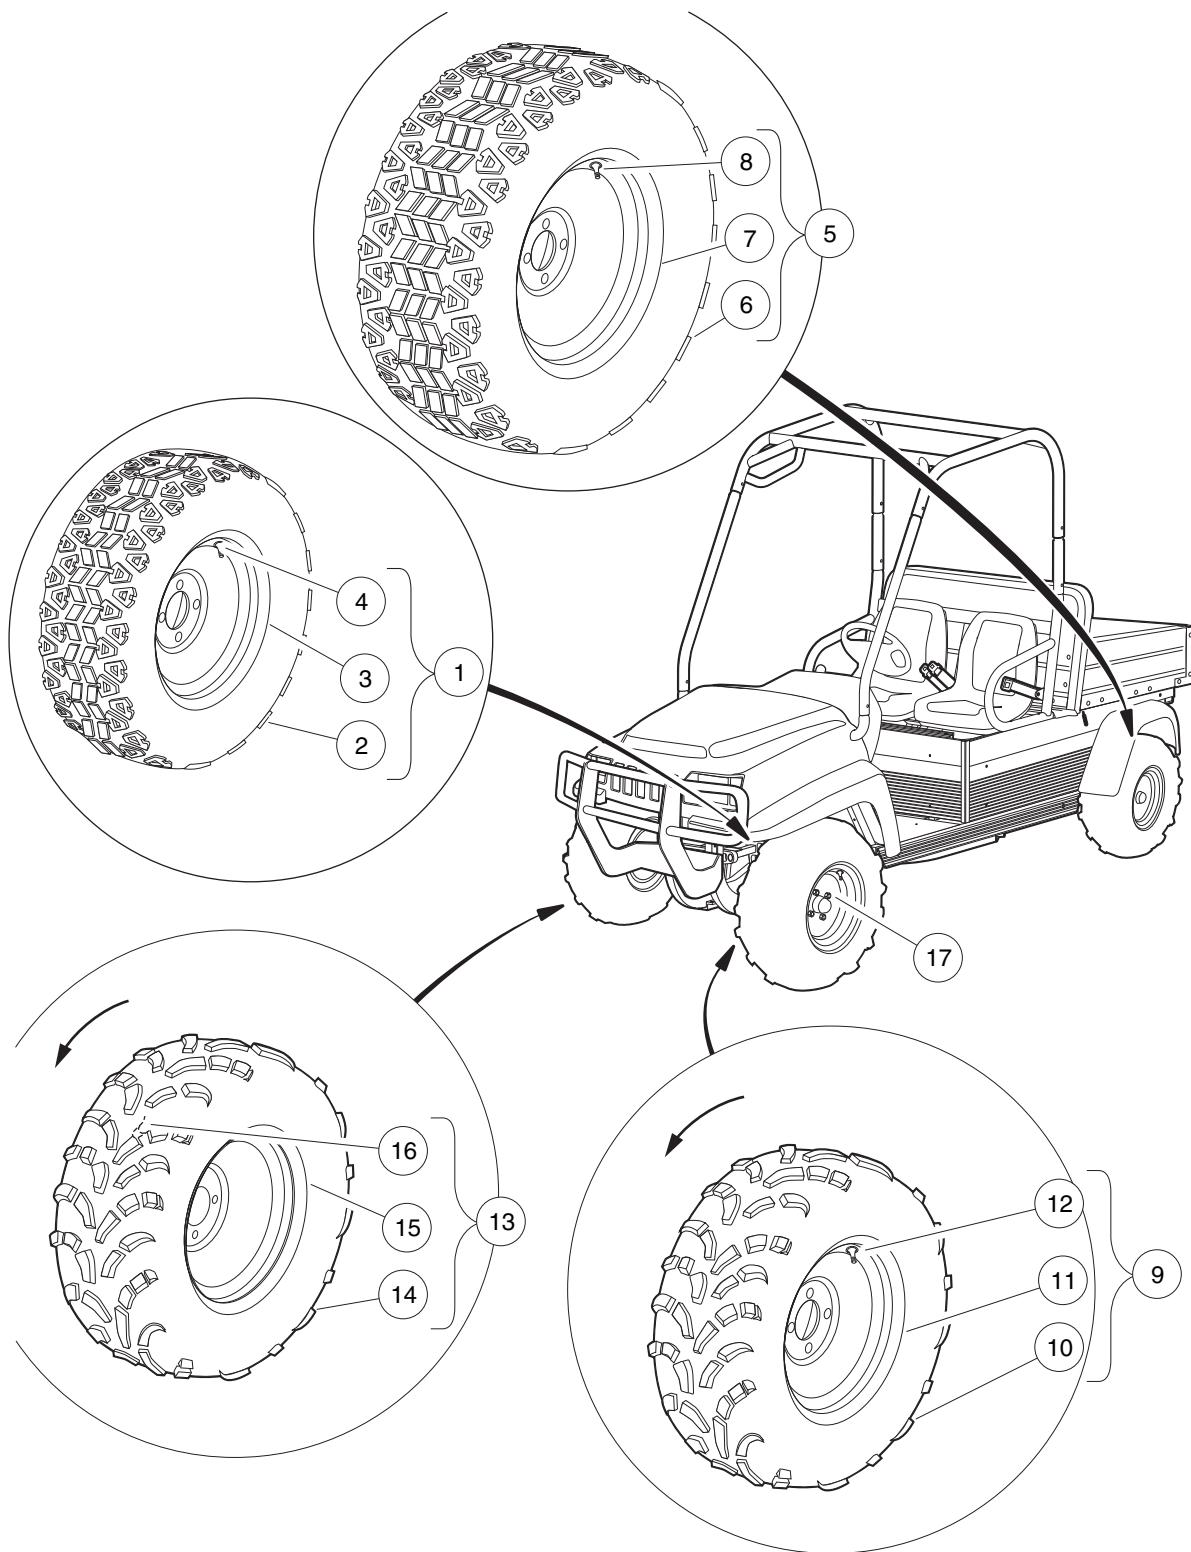2**G****D**

000009-001

WHEELS AND TIRES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102021406</u>	Gray Tire Assembly, HDAT, 8-Inch (includes items 2 through 4)	2
2	<u>102021305</u>	HDAT Tire, 8"	1
3	<u>102374801</u>	Wheel, Indus Spider, Gray	1
4	<u>7310</u>	Valve Stem	1
5	<u>102021407</u>	Gray Tire Assembly, HDAT 10.5-Inch (includes items 6 through 8)	2
6	<u>102021302</u>	Tire, HDAT	1
7	<u>102374801</u>	Wheel, Indus Spider, Gray	1
8	<u>7310</u>	Valve Stem	1
9	<u>102021408</u>	Gray Tire Assembly, AT489 LH (includes items 10 through 12)	2
10	102021306	Tire, AT489	1
11	<u>102374801</u>	Wheel, Indus Spider, Gray	1
12	<u>7310</u>	Valve Stem	1
13	<u>102021409</u>	Gray Tire Assembly, AT489 RH (includes items 14 through 16)	2
14	102021306	Tire, AT489	1
15	<u>102374801</u>	Wheel, Indus Spider, Gray	1
16	<u>7310</u>	Valve Stem	1
17	<u>102736901</u>	Nut, Lug, 1/2-20 SAE J2283	16

2

G

D

DECALS

3


G

D

3

G

D

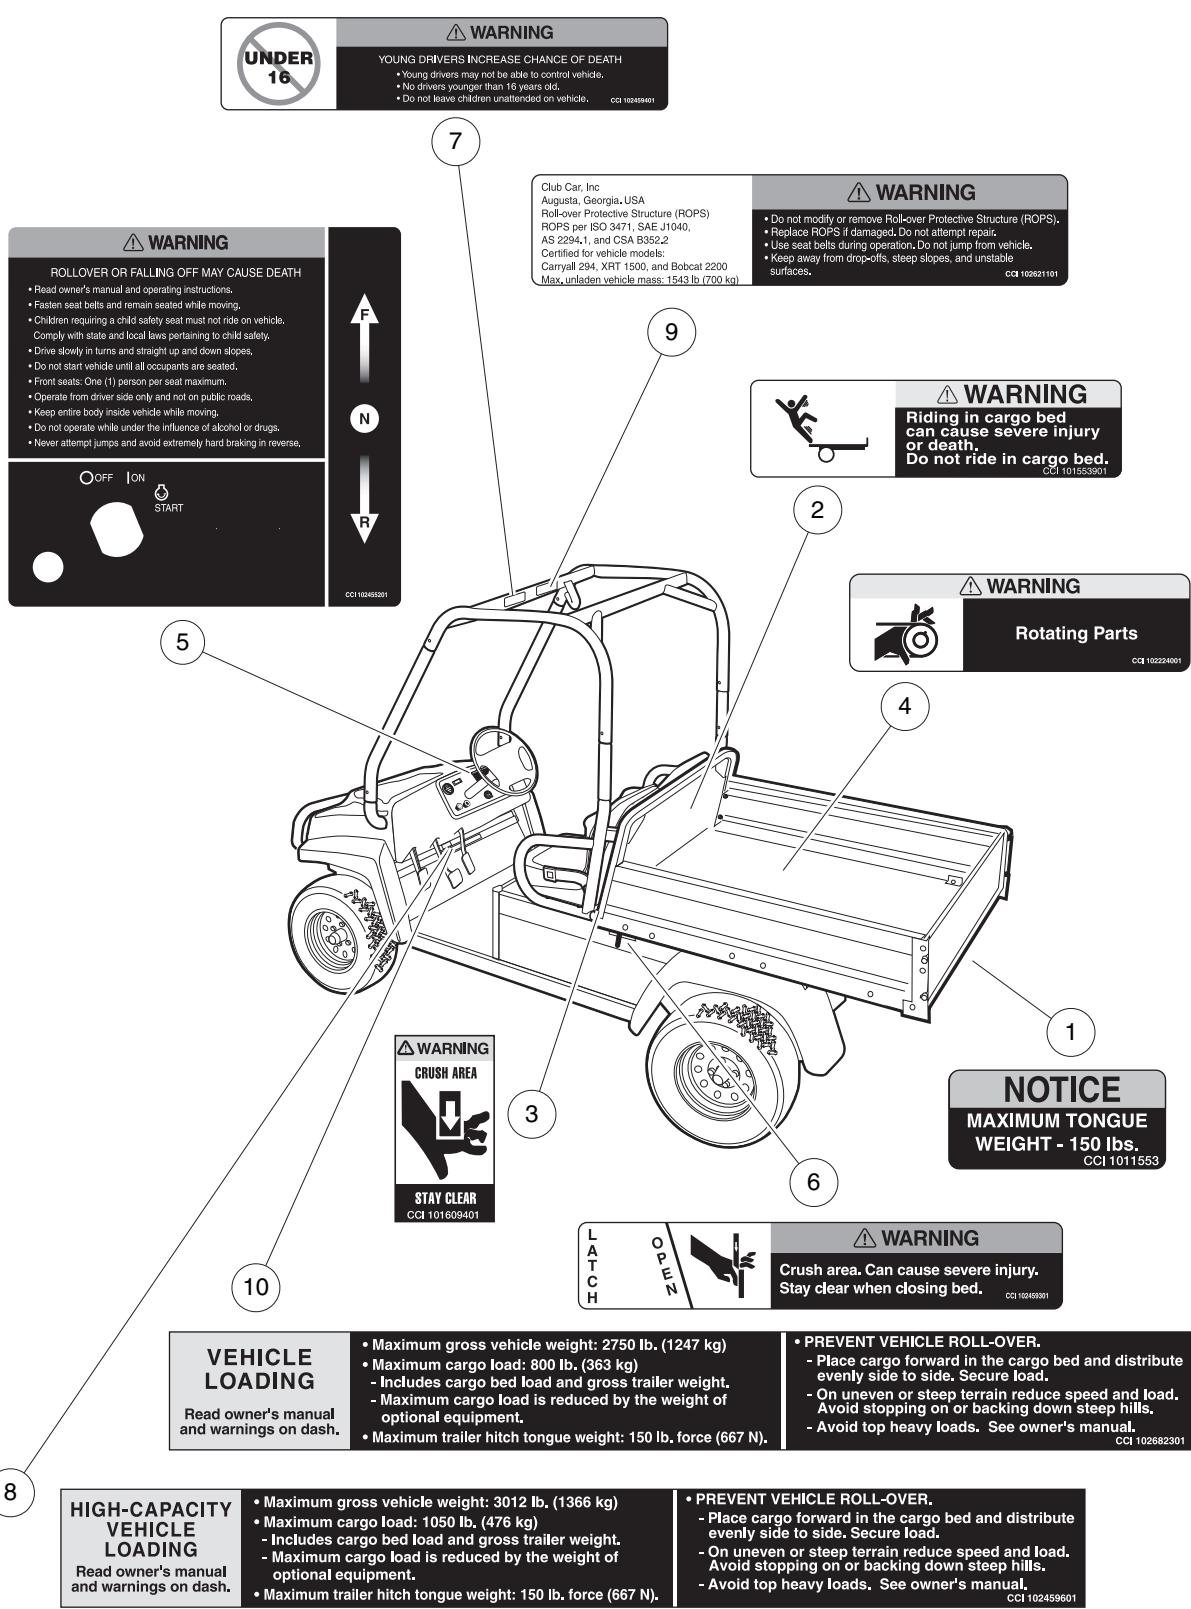

000005-001

SAFETY DECALS, GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011553</u>	Decal, Trailer Hitch	1
2	<u>101553901</u>	Decal, Bed Load Warning	1
3	<u>101609401</u>	Decal, Crush Area Warning	2
4	<u>102224001</u>	Decal, Rotating Parts Warning	1
5	<u>102455201</u>	Decal, Instrument Panel Warning, Gasoline Vehicle	1
6	<u>102459301</u>	Decal, Bed Crush Area Warning	1
7	<u>102459401</u>	Decal, Young Driver Warning	1
8	<u>102459601</u>	Decal, Vehicle Loading, High-Capacity	1
9	<u>102621101</u>	Decal, ROPS Certification/Warning	1
10	<u>102682301</u>	Decal, Vehicle Loading, Standard Capacity	1

3

G

D

WARNING



- GASOLINE EXPLOSION / FIRE.
 - CAN CAUSE SEVERE INJURY OR DEATH.
 - NO SMOKING, SPARKS, OR OPEN FLAME.
 - STOP ENGINE, ALLOW TO COOL BEFORE REFUELING.
 - TURN FUEL VALVE (↴) ON DURING OPERATION.
(↴) OFF DURING STORAGE OR TRANSPORT.
- CCI 101547601

OPERATING INSTRUCTIONS

• Read owner's manual and vehicle safety warnings. Study and understand controls.

TO START ENGINE

• Place shift lever in Neutral (N) position and press brake pedal.

• Turn key to "START" position and hold until engine starts.

TO OPERATE VEHICLE

• Make sure wheels are turned in desired direction and nothing is in your path.

• Engine must be at idle before moving shift lever.

• While vehicle is stopped, and the engine is at idle, select shift lever position.

⬆ – Forward ⬇ – Neutral ⬇ – Reverse (Buzzer will sound)

• Release park brake and slowly press accelerator pedal to increase speed.

• All-wheel drive will automatically drive appropriate wheel(s) as required.

TO STOP VEHICLE

• Release accelerator pedal and push brake pedal. After stopping, firmly set park brake.

• Turn key to "OFF" position, remove key and place shift lever in neutral position when not in use.

CCI 102455601

1

3

2

4

5

6



000006-001


SAFETY DECALS, GASOLINE VEHICLES, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		3
1	<u>101547601</u>	Decal, Gasoline Explosion/Fire Warning	1	G
2	<u>102231601</u>	Decal, Winch Cable Fracture Warning	1	
3	<u>102455001</u>	Decal, Operating Instructions, Gasoline	1	
4	<u>102458901</u>	Decal, Hot Surface Warning	3	D
5	<u>102459101</u>	Decal, Frame Ground Warning	1	
6	<u>102459501</u>	Decal, Rotating Parts and Hot Exhaust Warning	1	

3

G

D

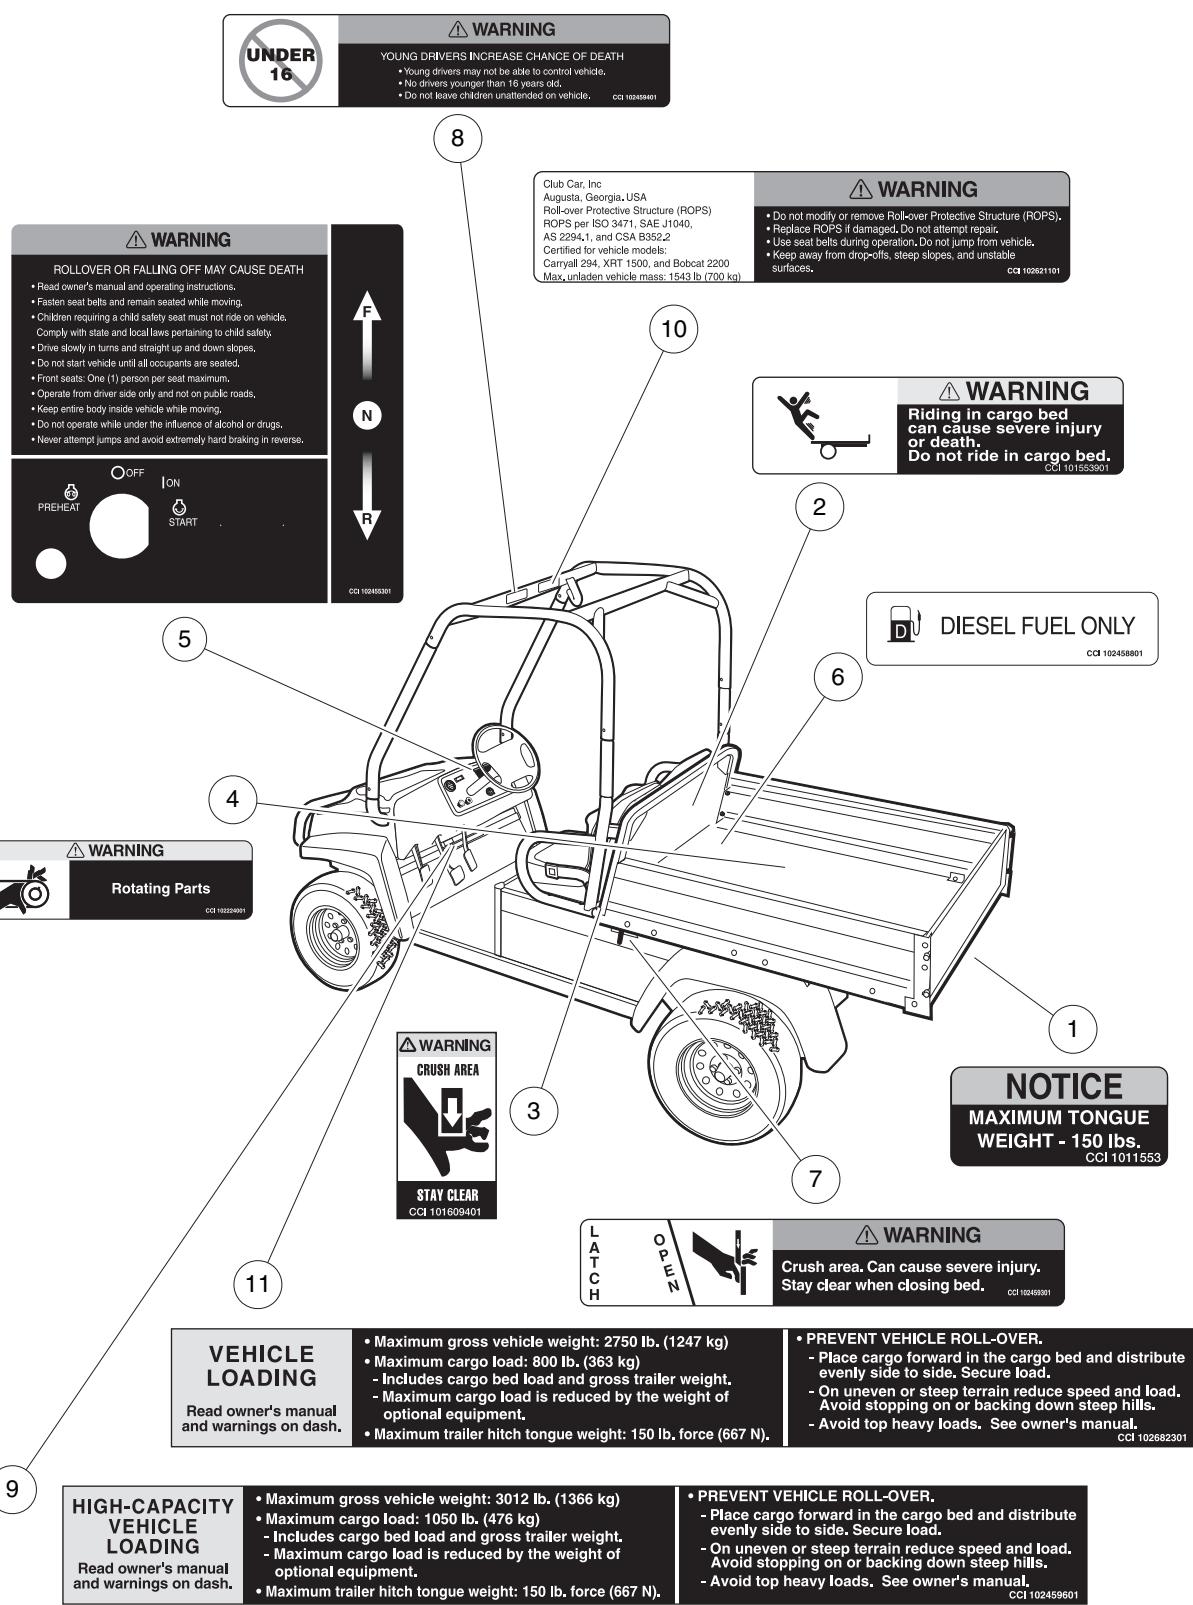

SAFETY DECALS, DIESEL VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011553</u>	Decal, Trailer Hitch	1
2	<u>101553901</u>	Decal, Bed Load Warning	1
3	<u>101609401</u>	Decal, Crush Area Warning	2
4	<u>102224001</u>	Decal, Rotating Parts Warning	1
5	<u>102455301</u>	Decal, Warning, Diesel	1
6	<u>102458801</u>	Decal, Diesel Fuel Only	1
7	<u>102459301</u>	Decal, Bed Crush Area Warning	1
8	<u>102459401</u>	Decal, Young Driver Warning	1
9	<u>102459601</u>	Decal, Vehicle Loading, High-Capacity	1
10	<u>102621101</u>	Decal, ROPS Certification/Warning	1
11	<u>102682301</u>	Decal, Vehicle Loading, Standard Capacity	1

3

G

D

3

G

D

**OPERATING INSTRUCTIONS**

• Read owner's manual and vehicle safety warnings. Study and understand controls.

TO START ENGINE

- Place shift lever in Neutral () position and press brake pedal.
- If preheat glow plugs, turn key to "PREHEAT" position and hold for 10-15 seconds.
- Turn key to "START" position and hold until engine starts.


TO OPERATE VEHICLE

- Make sure wheels are turned in desired direction and nothing is in your path.
- Engine must be at idle before moving shift lever.
- While vehicle is stopped, and the engine is at idle, select shift lever position.
 - Forward  - Neutral  - Reverse (Buzzer will sound)
- Release park brake and slowly press accelerator pedal to increase speed.
- All-wheel drive will automatically drive appropriate wheel(s) as required.

TO STOP VEHICLE

- Release accelerator pedal and push brake pedal. After stopping, firmly set park brake.
- Turn key to "OFF" position, remove key and place shift lever in neutral position when not in use.

CCI 102455101

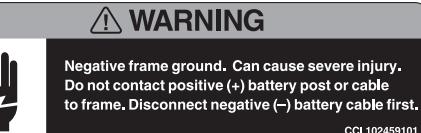

000006-002



SAFETY DECALS, DIESEL VEHICLES, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102231601</u>	Decal, Winch Cable Fracture Warning	1
2	<u>102455101</u>	Decal, Operating Instructions, Diesel	1
3	<u>102458901</u>	Decal, Hot Surface Warning	5
4	<u>102459001</u>	Decal, Hot Manifold Warning	1
5	<u>102459101</u>	Decal, Frame Ground Warning	1
6	<u>102459201</u>	Decal, Diesel Explosion/Fire Warning	1
7	<u>102459501</u>	Decal, Rotating Parts and Hot Exhaust Warning	1
8	<u>102460201</u>	Decal, Rotating Parts Warning	1

3

G



D

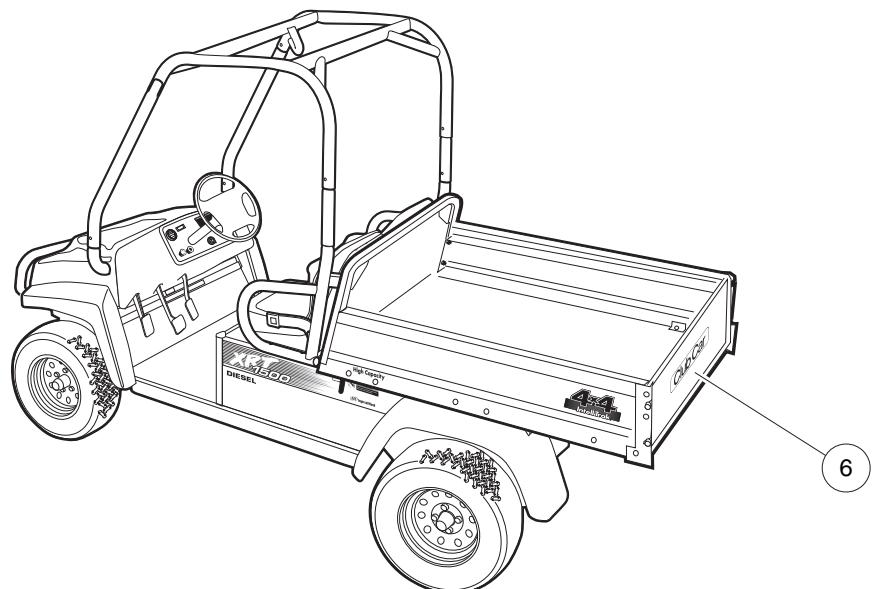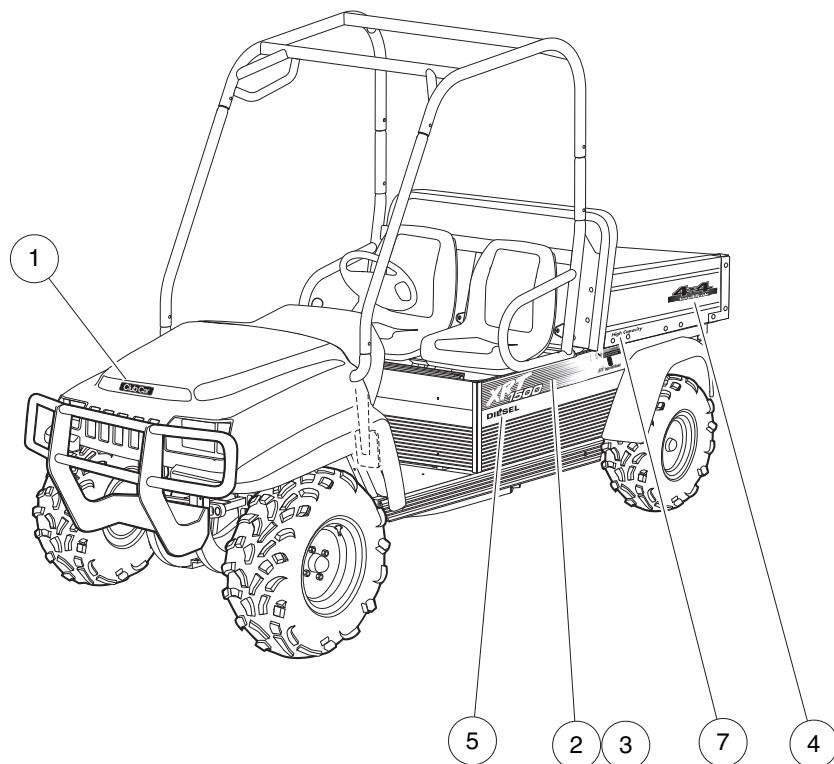3**G****D**

000011-001

BADGING DECALS, XRT 1500 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		3
1	<u>102046501</u>	Decal, CC Nameplate, Utility	1	G
2	<u>102622701</u>	Decal, XRT 1500 (driver-side)	1	
3	<u>102622801</u>	Decal, XRT 1500 (passenger-side)	1	
4	<u>102623301</u>	Decal, 4x4	2	D
5	<u>102623501</u>	Decal, Diesel	2	
6	<u>102673201</u>	Decal, Club Car Tailgate	1	
7	<u>102673301</u>	Decal, High-Capacity (optional accessory)	2	

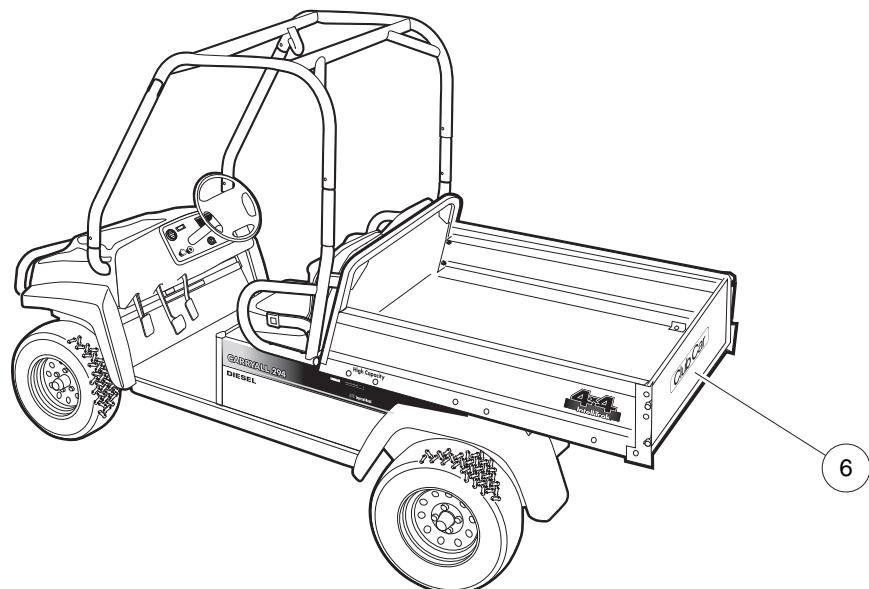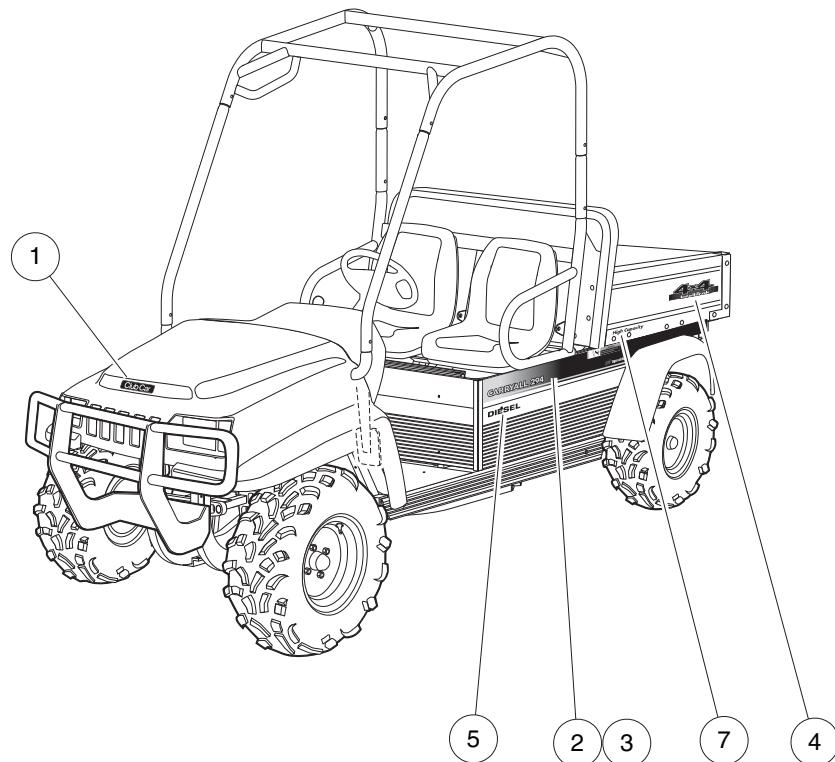3**G****D**

BADGING DECALS, CARRYALL 294 VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		3
1	<u>102046501</u>	Decal, CC Nameplate, Utility	1	G
2	<u>102622901</u>	Decal, Carryall 294 (driver-side)	1	
3	<u>102623001</u>	Decal, Carryall 294 (passenger-side)	1	
4	<u>102623301</u>	Decal, 4x4	2	D
5	<u>102623501</u>	Decal, Diesel	2	
6	<u>102673201</u>	Decal, Club Car Tailgate	1	
7	<u>102673301</u>	Decal, High-Capacity (optional accessory)	2	

3

G


D

4

BRAKE SYSTEMS

G


D

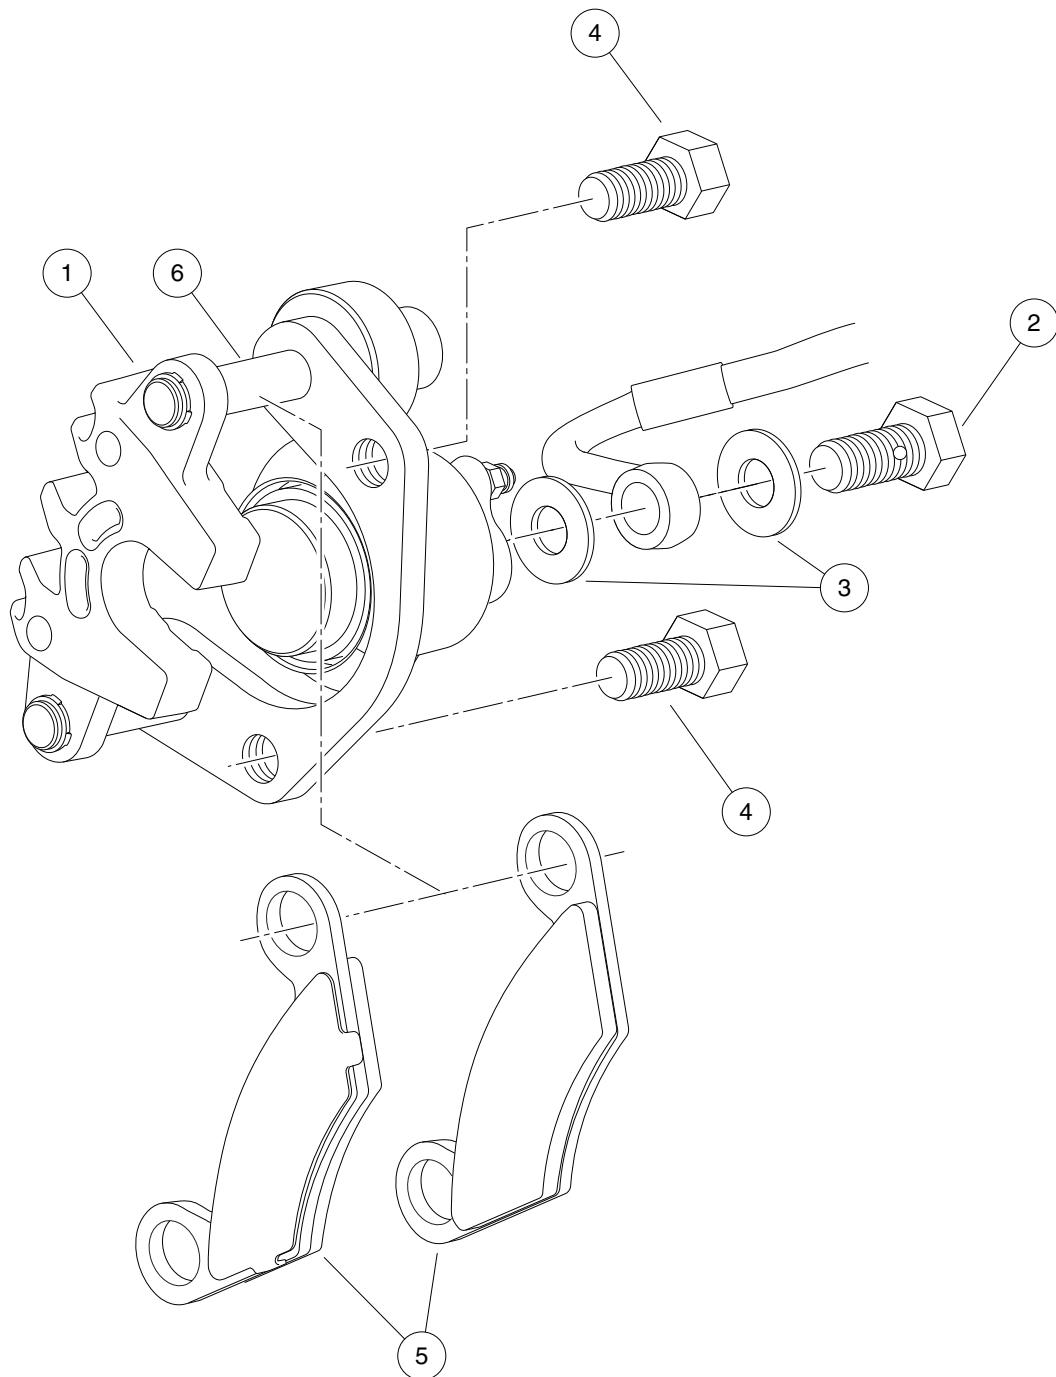4**G****D**

000067-001

FRONT BRAKE ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102367601</u>	Brake Caliper, Front, with Brake Pads	2
2	<u>102488001</u>	Bolt, Banjo, M10x1x19	2
3	<u>102491601</u>	Washer, Copper, M10 Crush	4
4	<u>102493301</u>	Bolt Flange Head, 3/8-24x.750 with Loctite	4
5	<u>102714001</u>	Service Kit, Brake Pad (4 Pads)	1
6	<u>103418801</u>	Pin, Slide, 7/16	2

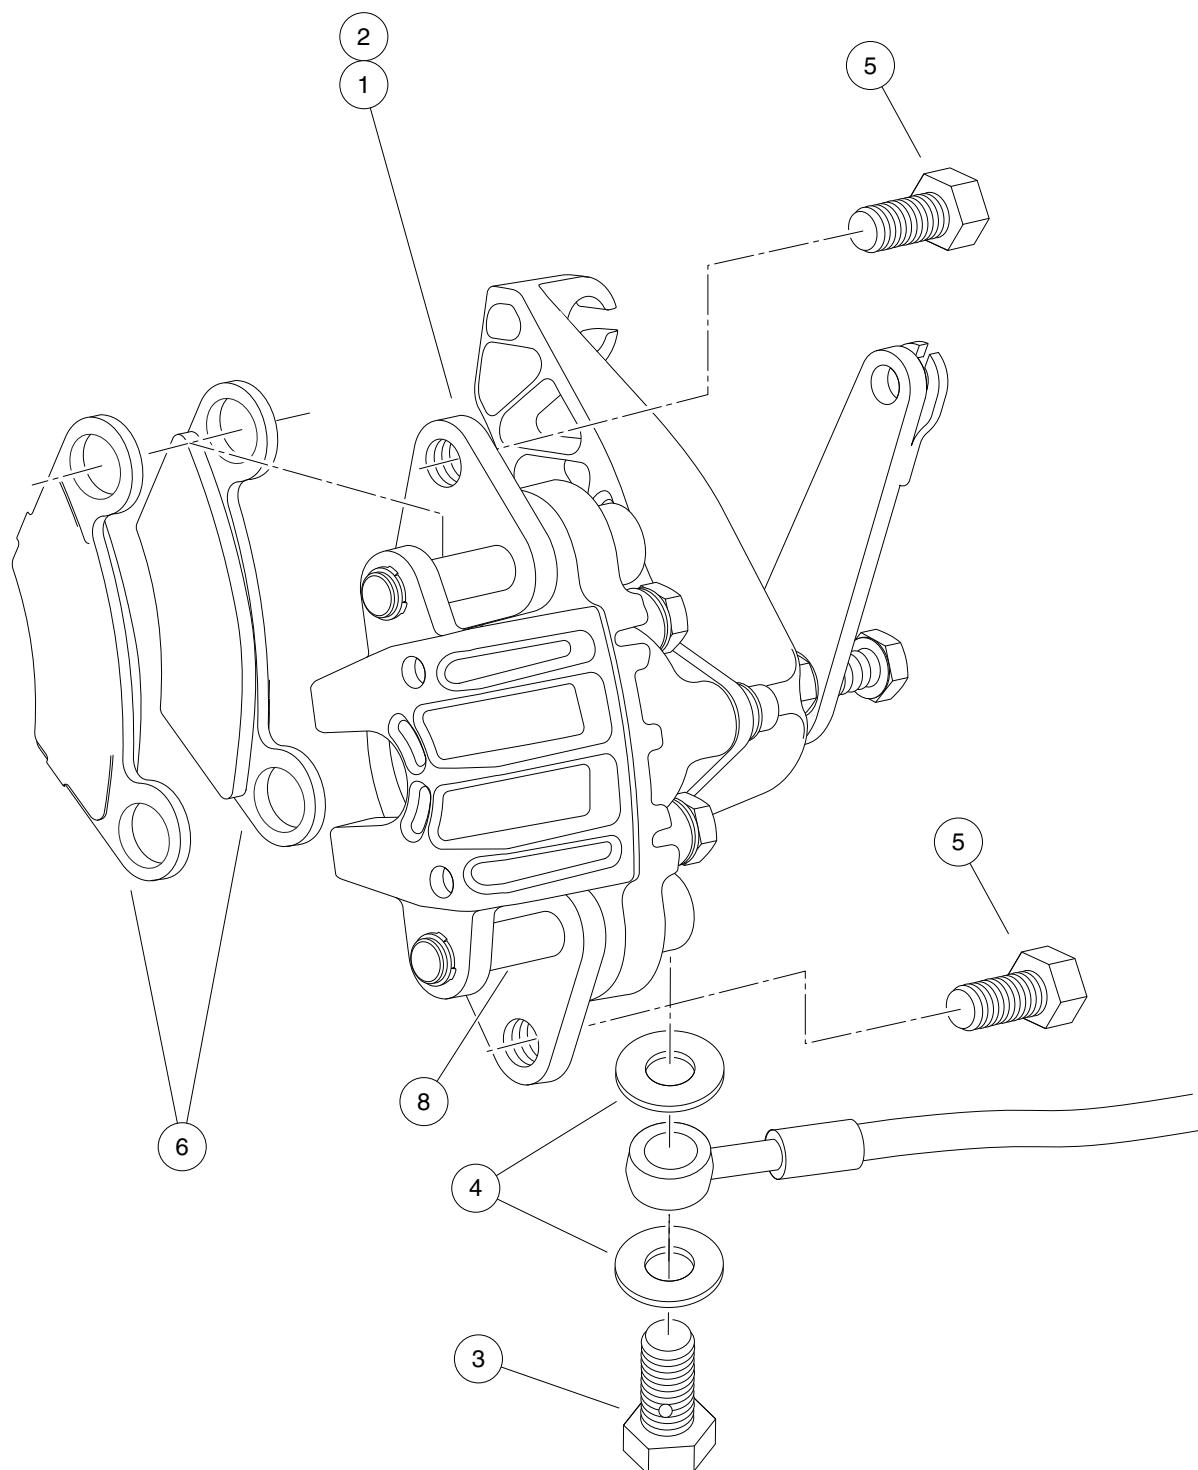4**G****D**

000068-001


REAR BRAKE ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102399201</u>	Caliper, Brake, Hydro-Mechanical, LH	1
2	<u>102399202</u>	Caliper, Brake, Hydro-Mechanical, RH	1
3	<u>102488001</u>	Bolt, Banjo, M10x1x19	2
4	<u>102491601</u>	Washer, Copper, M10 Crush	4
5	<u>102493301</u>	Bolt Flange Head, 3/8-24x.750 with Loctite	4
6	<u>102714001</u>	Service Kit, Brake Pad (4 Pads)	1
7	<u>103418701</u>	Spring, Brake Caliper, Return	1
8	<u>103418801</u>	Pin, Slide, 7/16	2

4

G

D

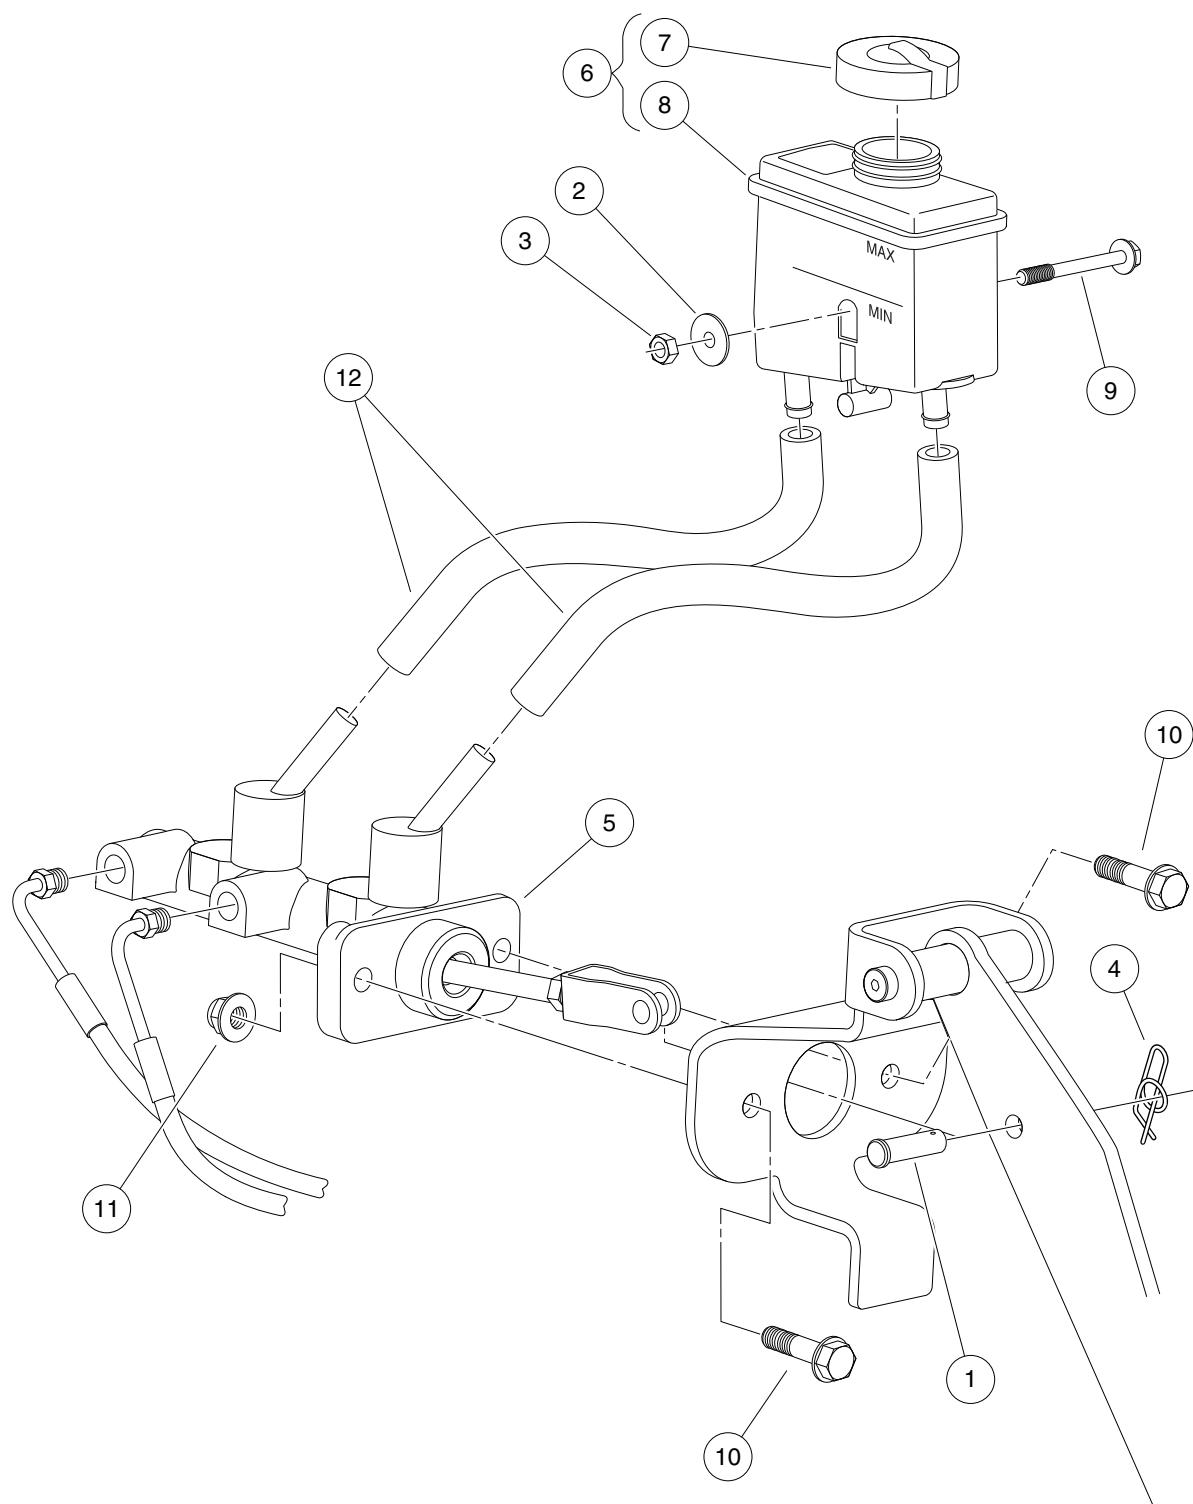4**G****D**

000069-001


MASTER CYLINDER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101082903</u>	Clevis Pin, 5/16 X 1	1
2	<u>1014306</u>	Washer, 1/4" Type B Flat	1
3	<u>101887601</u>	Locknut, M6-1.00 Nylon Insert	1
4	<u>102176901</u>	Pin, Rue	1
5	<u>102402801</u>	Cylinder, Master, Tandem	1
6	<u>102402901</u>	Assembly, Reservoir, Remote (includes items 7 and 8)	1
7	<u>102051401</u>	Filler Cap Asm	1
8	N/A	Reservoir, Brake Fluid, Without Cap	1
9	<u>102541465</u>	Bolt, M 6 X 1.0 X 65 Hex, Flange, Head, Black	1
10	<u>102618401</u>	Bolt Flanged Head, M8 X 1.25 X 35	2
11	102618601	Lock Nut, Flg M8 X 1.25 Nylon	2
12	<u>102715701</u>	Line, Reservoir, Brake	2

4

G

D

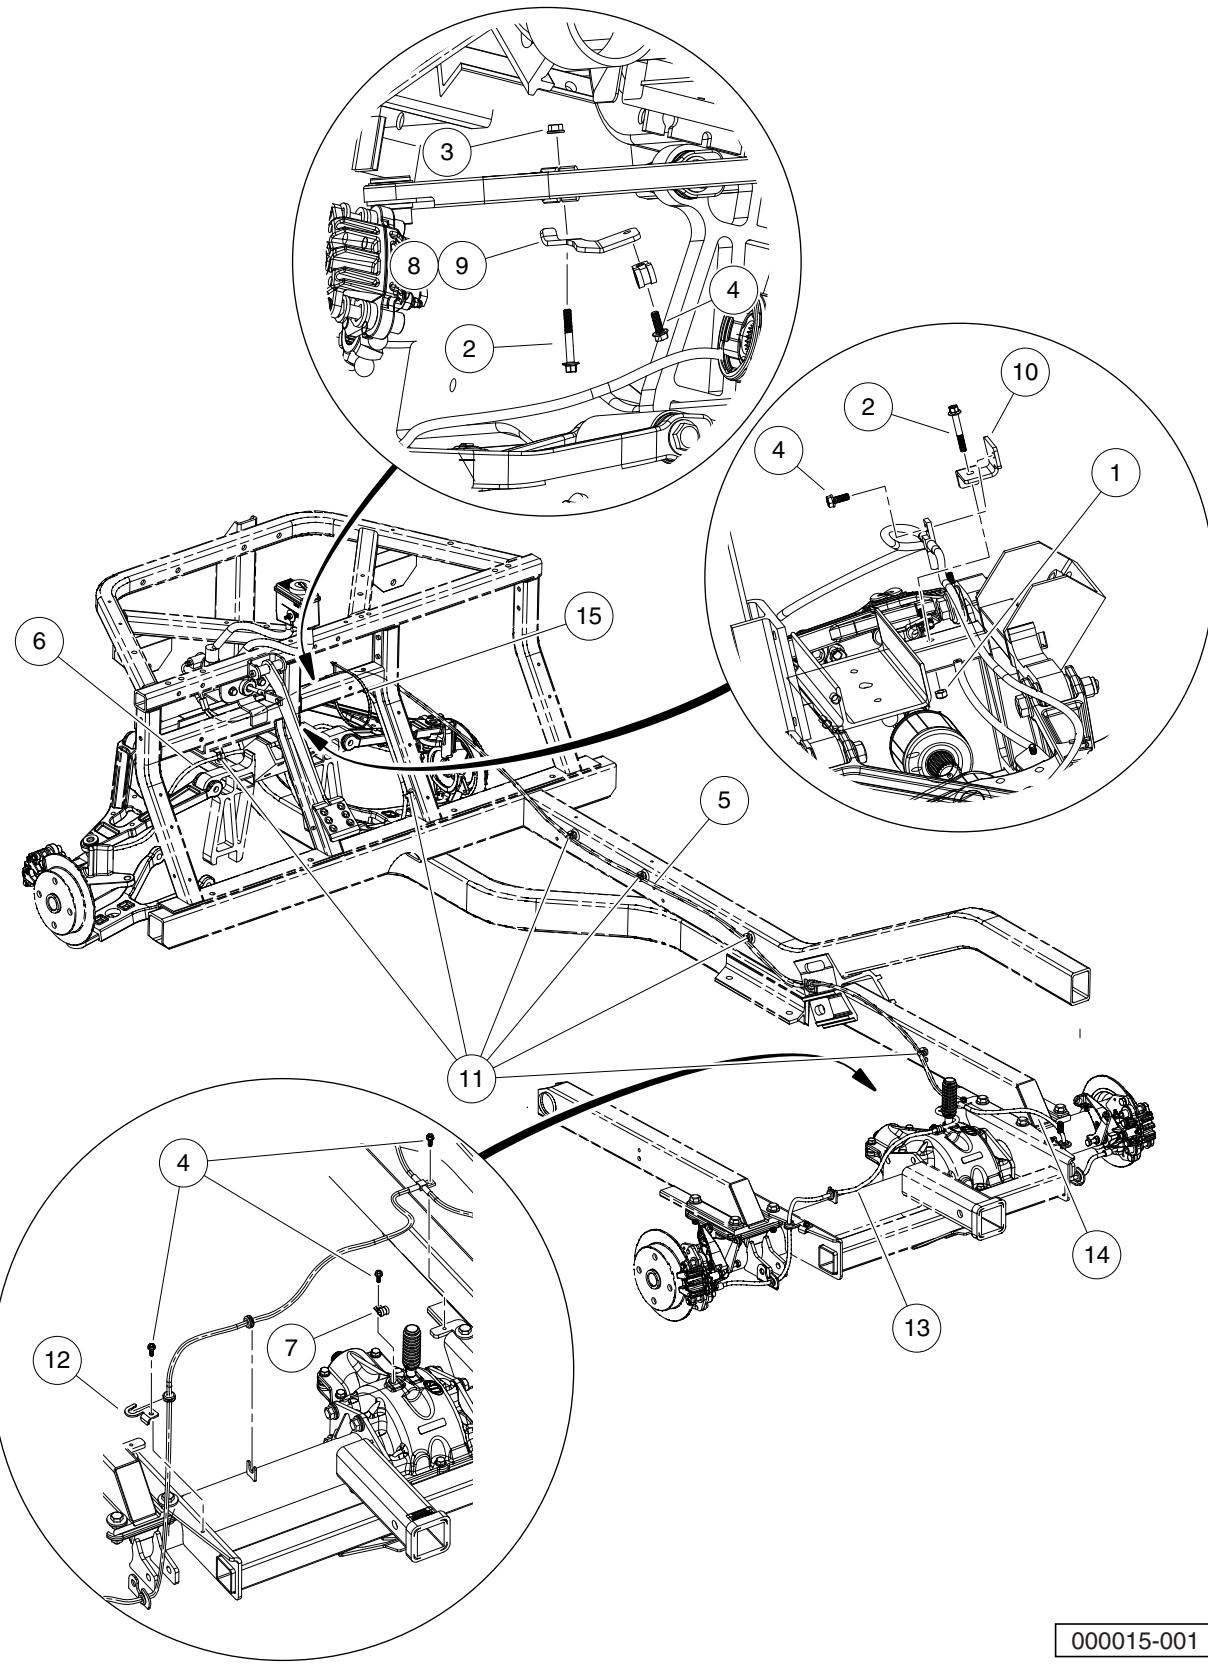4**G****D**

000015-001


HYDRAULIC BRAKE LINES AND CLIPS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101887601</u>	Locknut, M6-1.00 Nylon Insert	1
2	<u>102296140</u>	Bolt, Flanged Head, M6x1.0x40	3
3	<u>102296401</u>	Nut-m6x1.0 Flng All Mtl Lock	2
4	<u>102296716</u>	Screw, M6 X 16 Tt Hx Fl Hd	7
5	<u>102407801</u>	Assembly, Brake Line, Rear	1
6	<u>102407901</u>	Assembly, Brakeline, Front (includes item 7)	1
7	<u>102410603</u>	P-Clamp, Insulated .312 In	1
8	<u>102474101</u>	Bracket, Brake Line, Left	1
9	<u>102474102</u>	Bracket, Brake Line, Right	1
10	<u>102474301</u>	Bracket, Tee, Brakeline	1
11	<u>102475701</u>	Clip, Brake Line	6
12	<u>102689001</u>	Bracket, Line, Hydraulic	2
13	<u>102689101</u>	Brkt, Line, Hyd, Shk Mnt, Drv	1
14	<u>102689102</u>	Brkt, Line, Hyd, Shk Mnt, Pass	1
15	<u>8639</u>	Tie Wrap, 11" Nylon	1

4

G

D

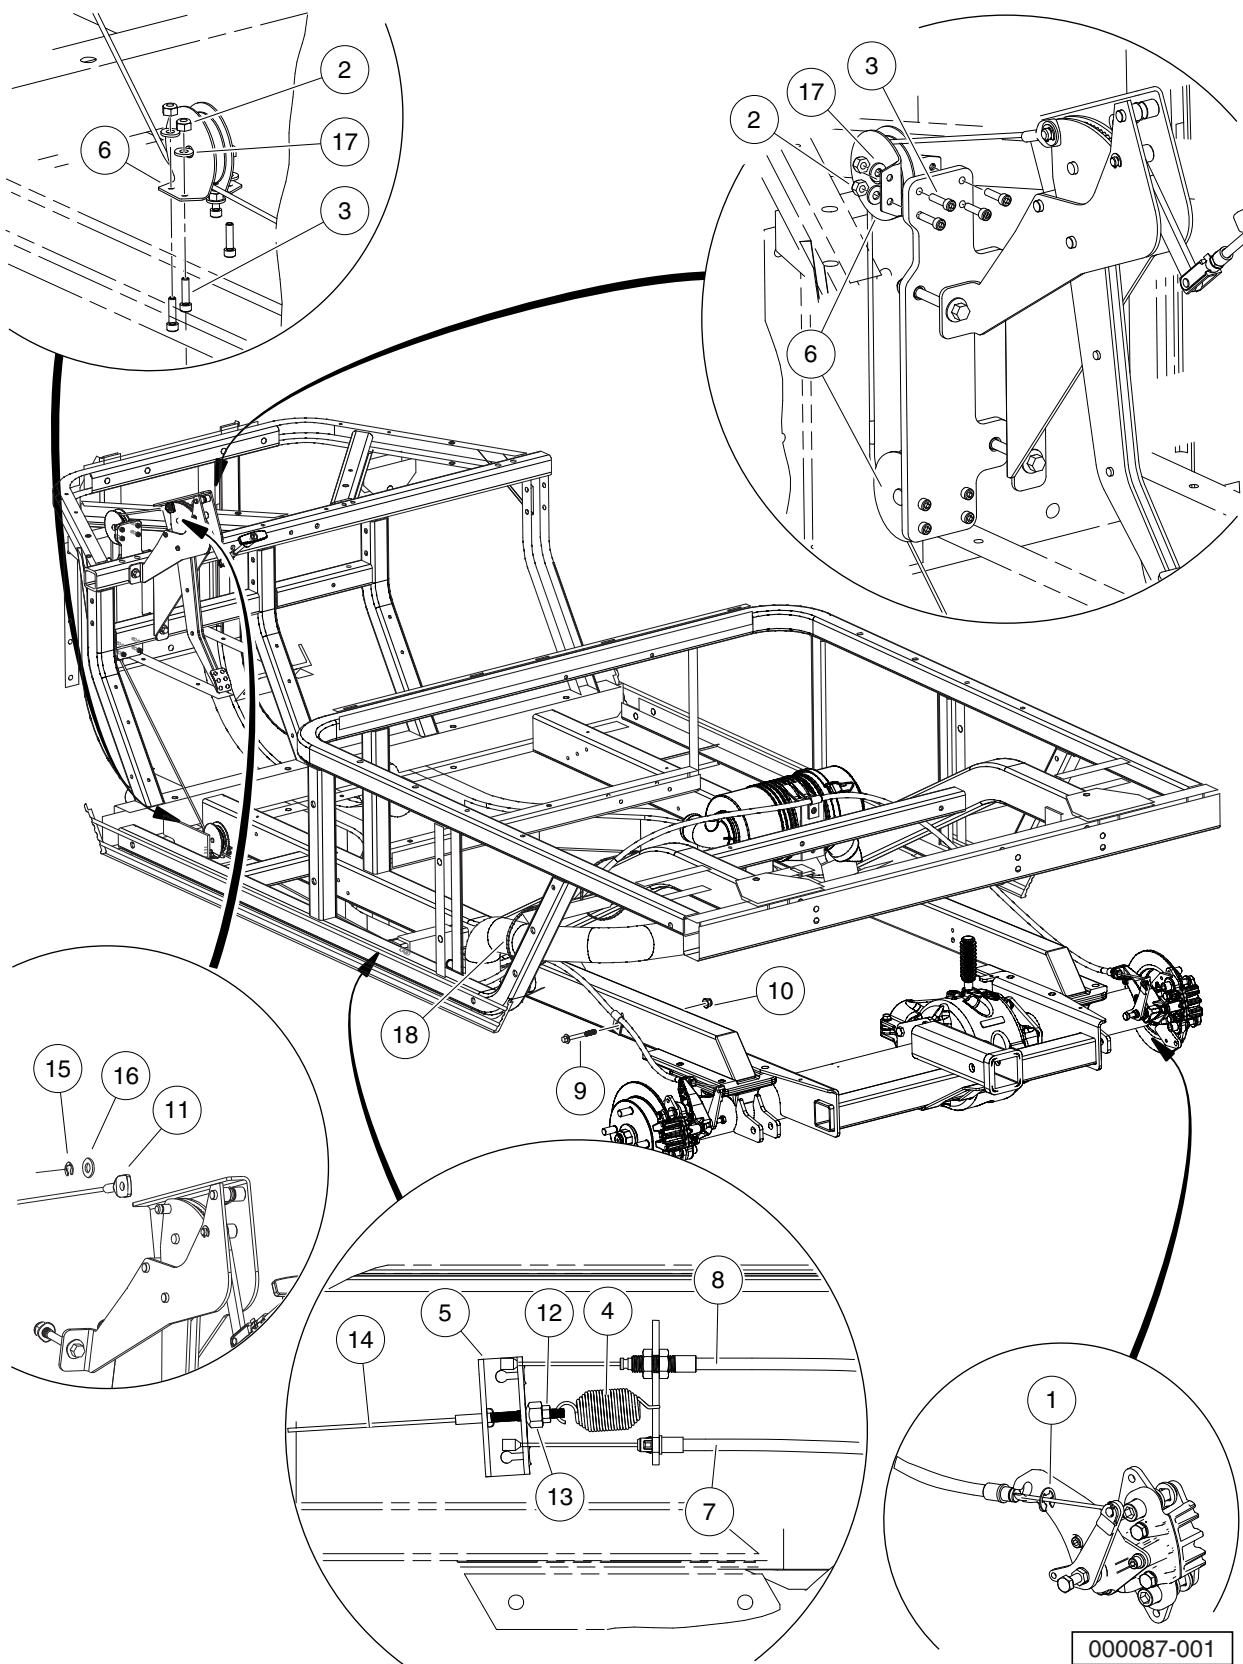4**G****D**

000087-001


PARK BRAKE ASSEMBLY WITH PULLEY SYSTEM

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011779</u>	E-Clip, 1/2	2
2	<u>1012438</u>	Locknut, #10-24 Nylon Insert	12
3	<u>101260202</u>	Screw, #10-24 X 3/4 Socket-Head	12
4	<u>1013531</u>	Spring, Brake Return	1
5	<u>101990802</u>	Equalizer Bracket	1
6	<u>102028302</u>	Pulley, 2-Inch Flat Mount	3
7	<u>102442701</u>	Cable, Brake, Parking, Left	1
8	<u>102442801</u>	Cable, Brake, Parking, Right	1
9	<u>102618301</u>	Bolt Flanged Head, M8 X 1.25 X 65	1
10	<u>102618601</u>	Lock Nut, Flg M8 X 1.25 Nylon	1
11	<u>102770001</u>	Brake Cable, Park, Kit, Front (includes items 12 through 16)	1
12	<u>1010521</u>	Nut, 5/16-24 Hex	1
13	<u>102052801</u>	Nut, 5/16-24 Hex Cone	1
14	<u>102492401</u>	Cable, Brake, Parking, Front	1
15	<u>102692801</u>	Ring, Retaining, External, 9mm	1
16	<u>1241</u>	Washer, 5/16 Type A Flat	1
17	<u>183</u>	Washer, #10 Type A Flat	12
18	<u>8639</u>	Tie Wrap, 11" Nylon	2

4

G

D

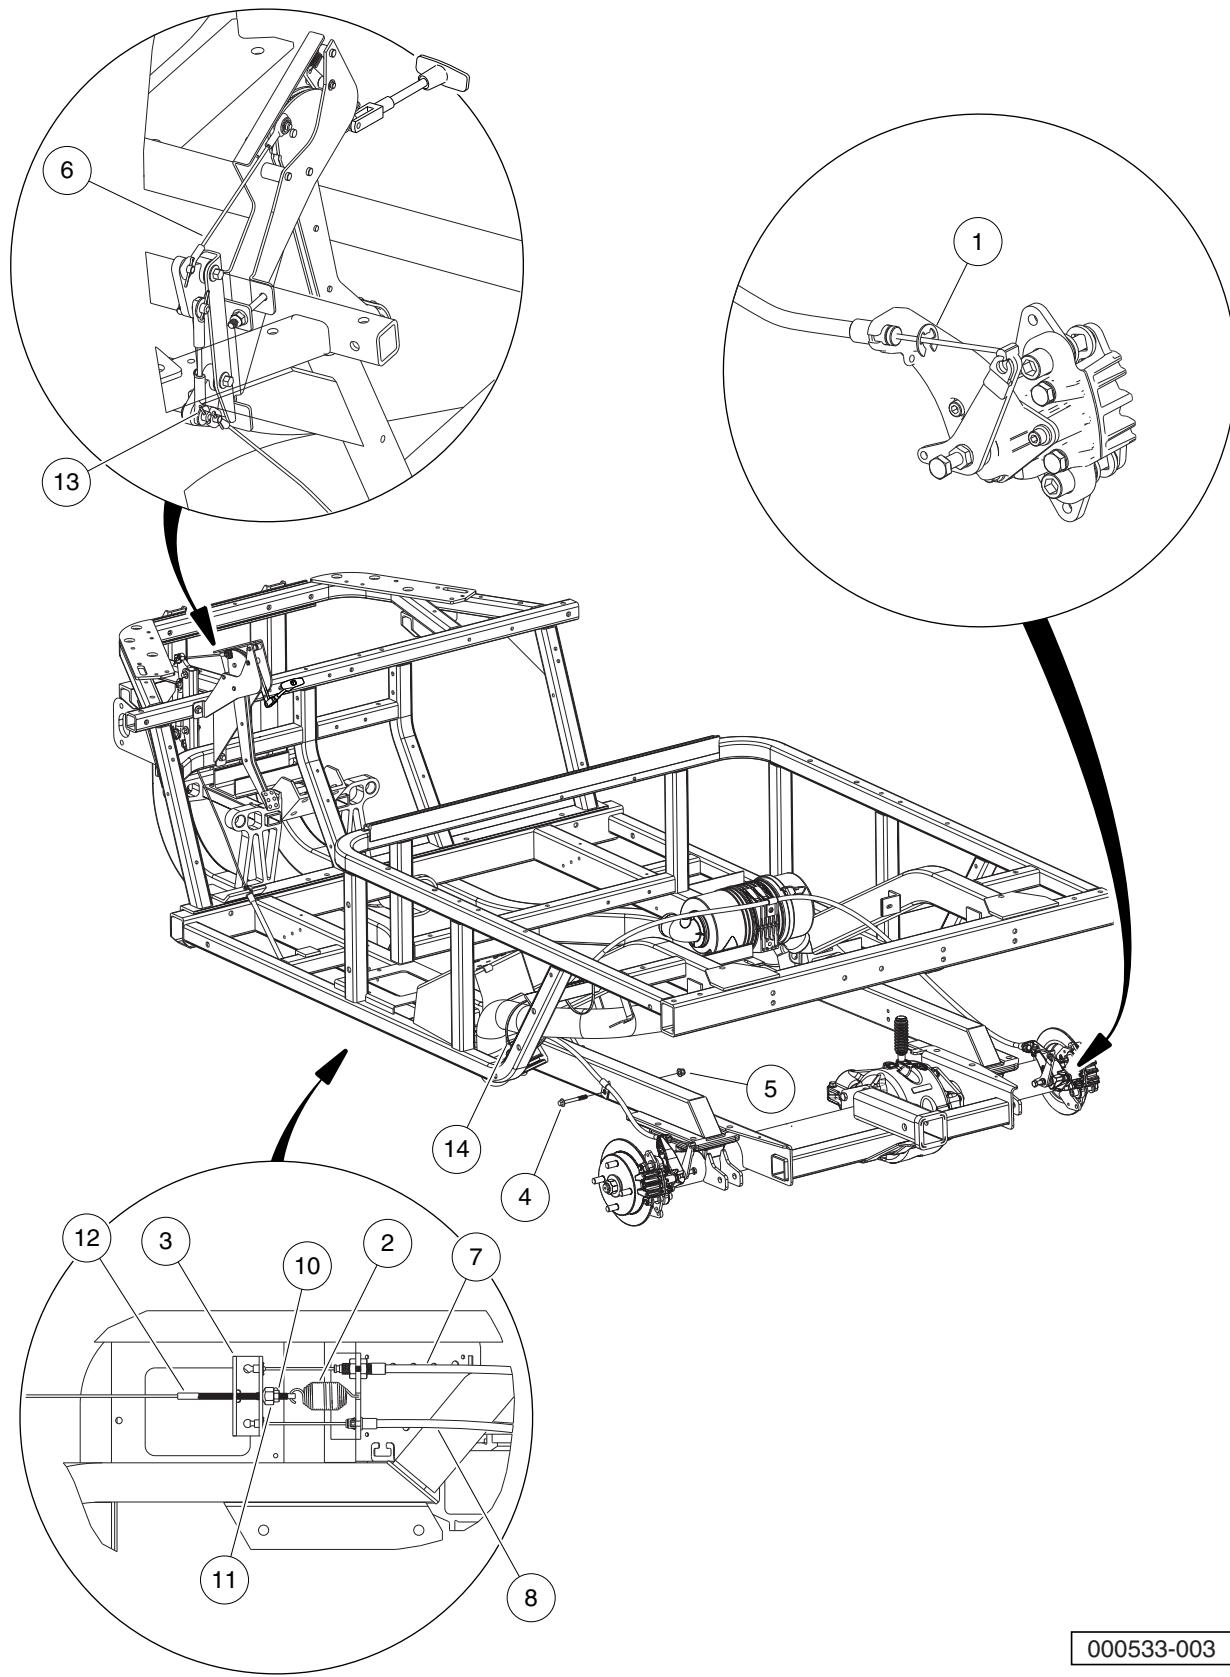4**G****D**

000533-003

PARK BRAKE ASSEMBLY WITH BELLCRANK SYSTEM

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011779</u>	E-Clip, 1/2	2
2	<u>1013531</u>	Spring, Brake Return	1
3	<u>101990802</u>	Equalizer Bracket	1
4	<u>102618301</u>	Bolt Flanged Head, M8 X 1.25 X 65	1
5	102618601	Lock Nut, Flg M8 X 1.25 Nylon	1
6	<u>102712601</u>	Cable, Crank, Bell, Front	1
7	<u>102763301</u>	Cable, Noncoated, Pbrake, Left	1
8	<u>102763401</u>	Cable, Noncoated, Pbrake, Rght	1
9	<u>102770301</u>	Kit, Cable, Brake, Crank, Fr (includes items 10 through 13)	1
10	<u>1010521</u>	Nut, 5/16-24 Hex	1
11	<u>102052801</u>	Nut, 5/16-24 Hex Cone	1
12	<u>102712701</u>	Cable, Crank, Bell, Main	1
13	<u>1035</u>	Cotter Pin, 3/32 x 1	1
14	<u>8639</u>	Tie Wrap, 11" Nylon	2

4

G

D

4

G


D

PEDAL GROUP

5

G


D

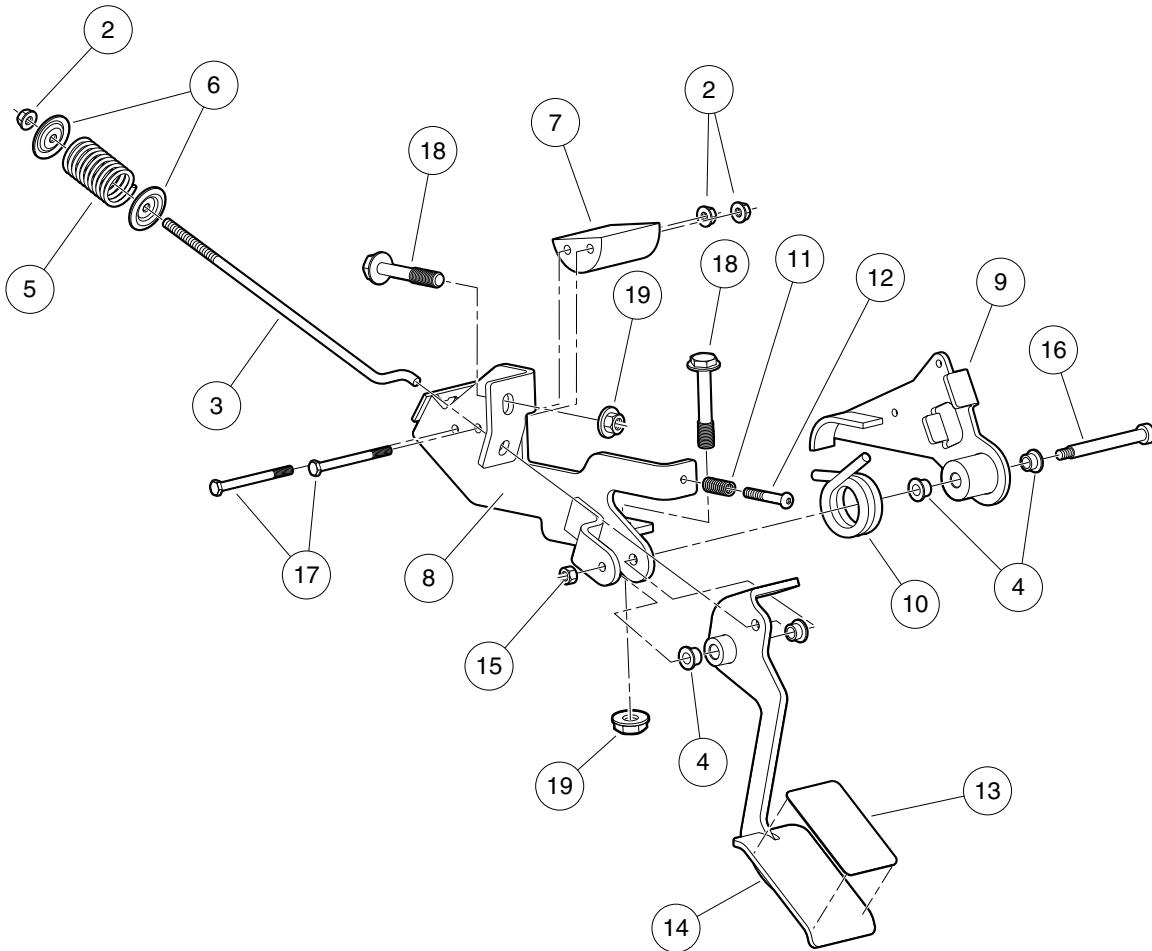5**G****D**

000026-001

ACCELERATOR PEDAL ASSEMBLY


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	5
1	<u>102489901</u>	Asm, Pedal, Accelerator (includes items 2 through 17)	1
2	<u>102296401</u>	Nut-m6x1.0 Flng All Mtl Lock	3
3	N/A	Pullrod, Spring, Compression	1
4	<u>102442901</u>	Bushing, Greaseless	4
5	<u>102445201</u>	Spring, Comp, Pedal, Pullrod	1
6	N/A	Washer, Retaining Spring, 7mm	2
7	N/A	Guide, Cable, Accelerator	1
8	N/A	Weldment, Bracket, Pedal	1
9	<u>102469401</u>	Weldment, Lever, Motion, Lost	1
10	N/A	Spring, Torsion	1
11	<u>102476301</u>	Spring, Stop, Pedal	1
12	<u>102476401</u>	Bolt, Stop, Pedal	1
13	<u>102479301</u>	Pad, Grip Tape, Accelerator	1
14	N/A	Weldment, Pedal, Accel	1
15	<u>102618101</u>	Nut M6x1 Mech Def Center	1
16	<u>103273101</u>	Bolt, Shoulder, M8 X 70, Hc	1
17	<u>96706825</u>	Bolt, M6 X 1 X 70	2
18	<u>102618301</u>	Bolt Flanged Head, M8 X 1.25 X 65	2
19	102618601	Lock Nut, Flg M8 X 1.25 Nylon	2

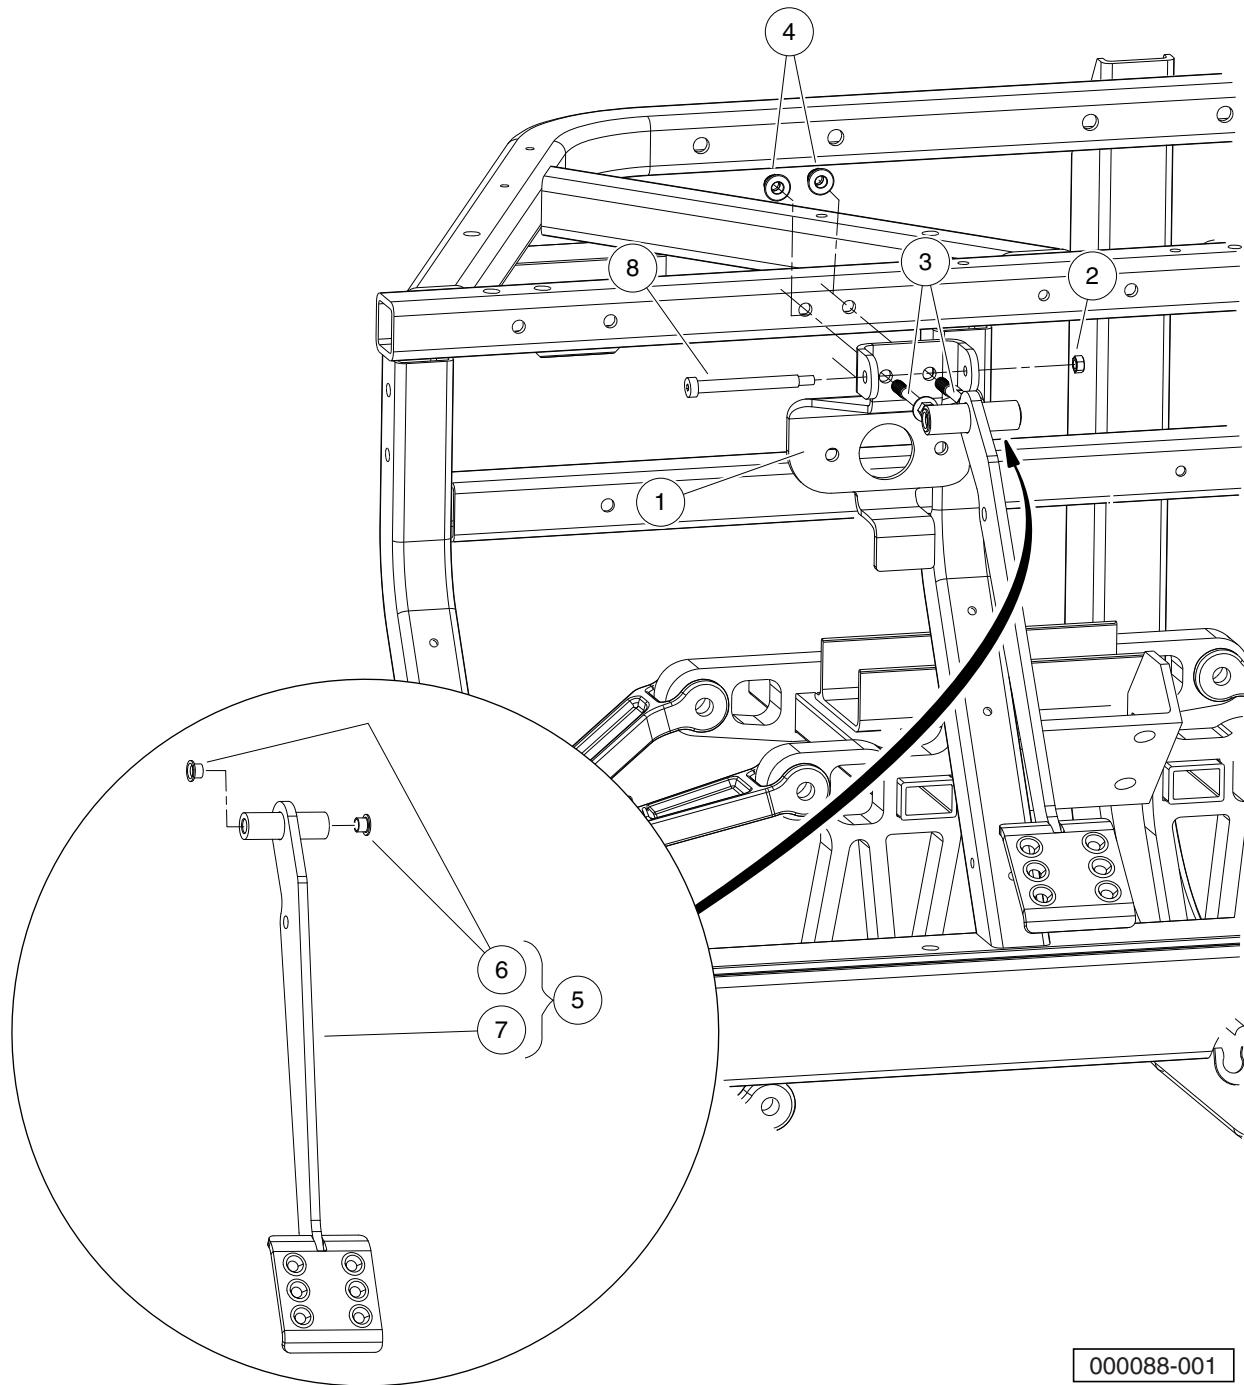5**G****D**

000088-001

BRAKE PEDAL ASSEMBLY


ITEM	PART NO.	DESCRIPTION	QTY
1	<u>102380601</u>	1 2 3 4 Bracket, Pedal, Brake	1
2	<u>102618101</u>	Nut M6x1 Mech Def Center	1
3	<u>102618301</u>	Bolt Flanged Head, M8 X 1.25 X 65	2
4	<u>102618601</u>	Lock Nut, Flg M8 X 1.25 Nylon	2
5	N/A	Asm, Pedal, Brake, Hung (includes items 6 and 7)	1
6	<u>102442901</u>	Bushing, Greaseless	2
7	<u>102626201</u>	Weldment, Pedal, Brake, Hung	1
8	<u>103273101</u>	Bolt, Shoulder, M8 X 70, Hc	1

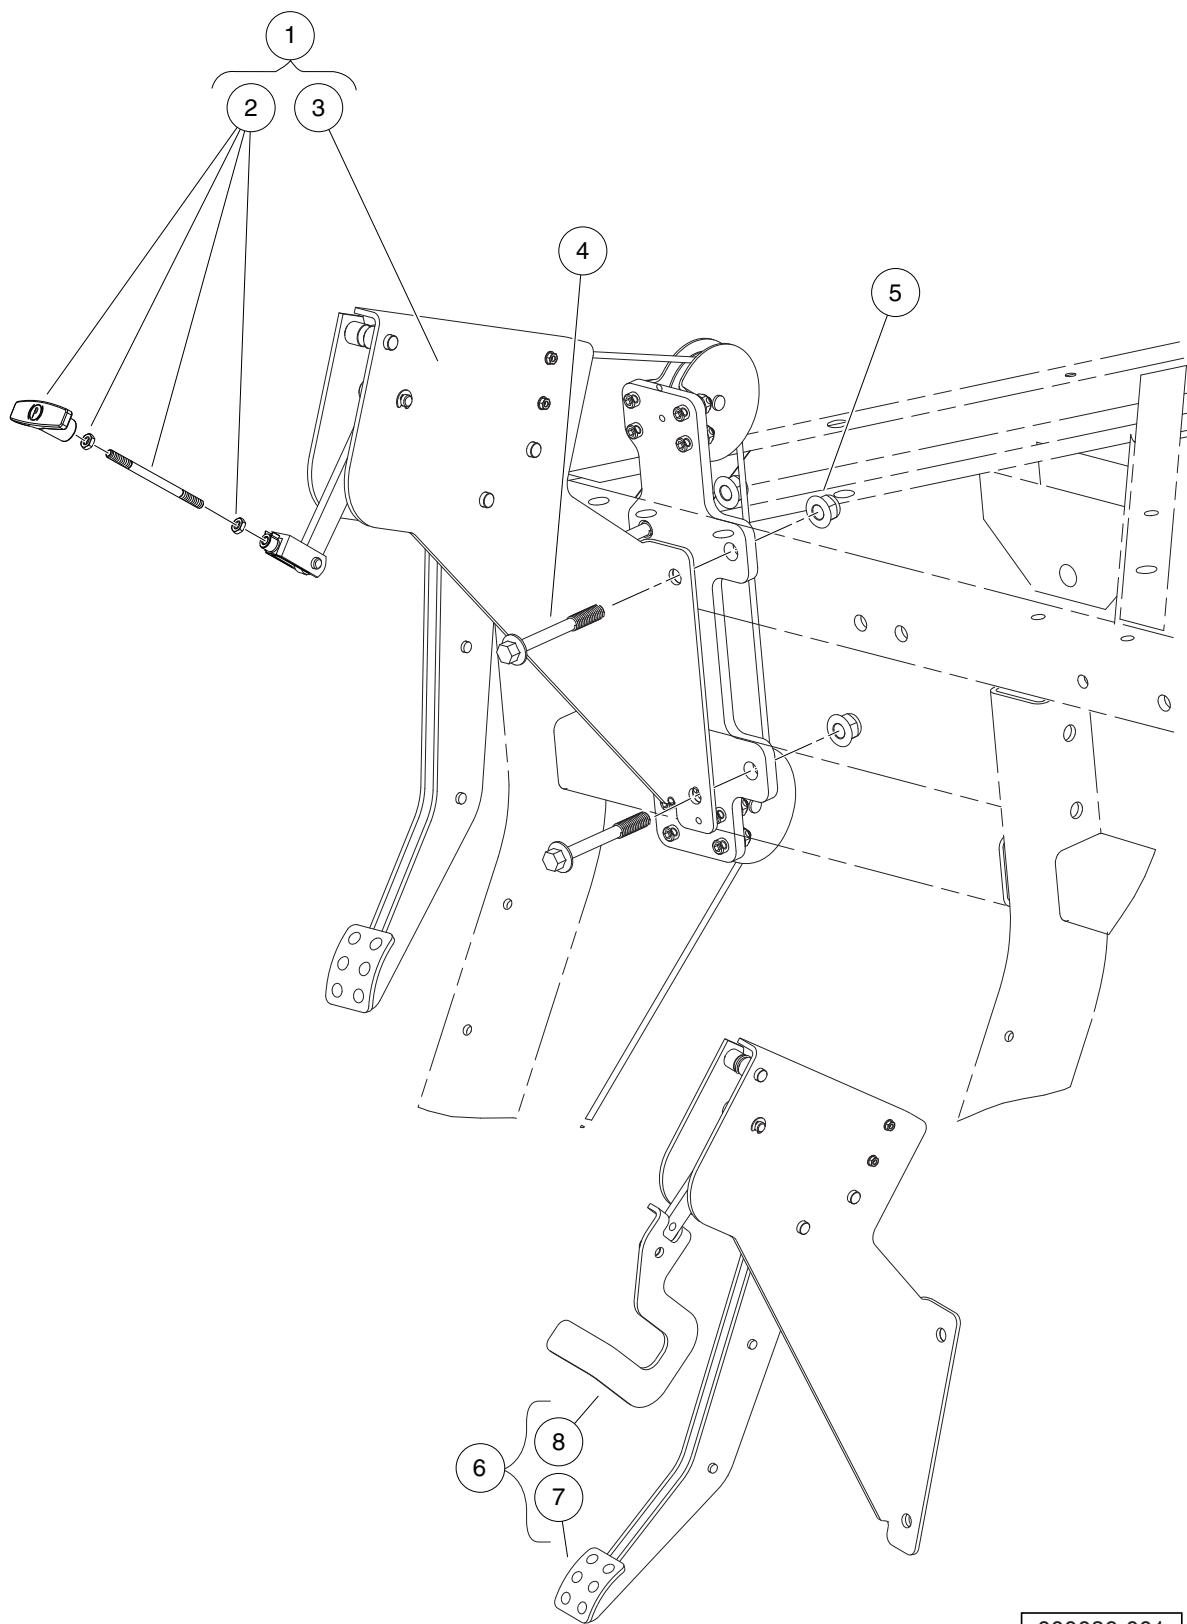5**G****D**

000086-001

PARK BRAKE PEDAL ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	5
1	102438101	Pedal Asm, Brake, Park (includes items 2 and 3)	1
2	<u>102758701</u>	Kit, Handle, Brake, Park	1
3	N/A	Pedal, Brake, Park	1
4	<u>102618301</u>	Bolt Flanged Head, M8 X 1.25 X 65	3
5	102618601	Lock Nut, Flg M8 X 1.25 Nylon	3
6	<u>102892401</u>	Asm, Pedal, Brake, Hard (includes items 7 and 8)	1
7	N/A	Pedal, Brake, Park	1
8	<u>102896601</u>	Handle, Release, Park Brake	1
<p>Note: Item 1 has been discontinued. Use item 6 for replacement of the complete assembly.</p>			

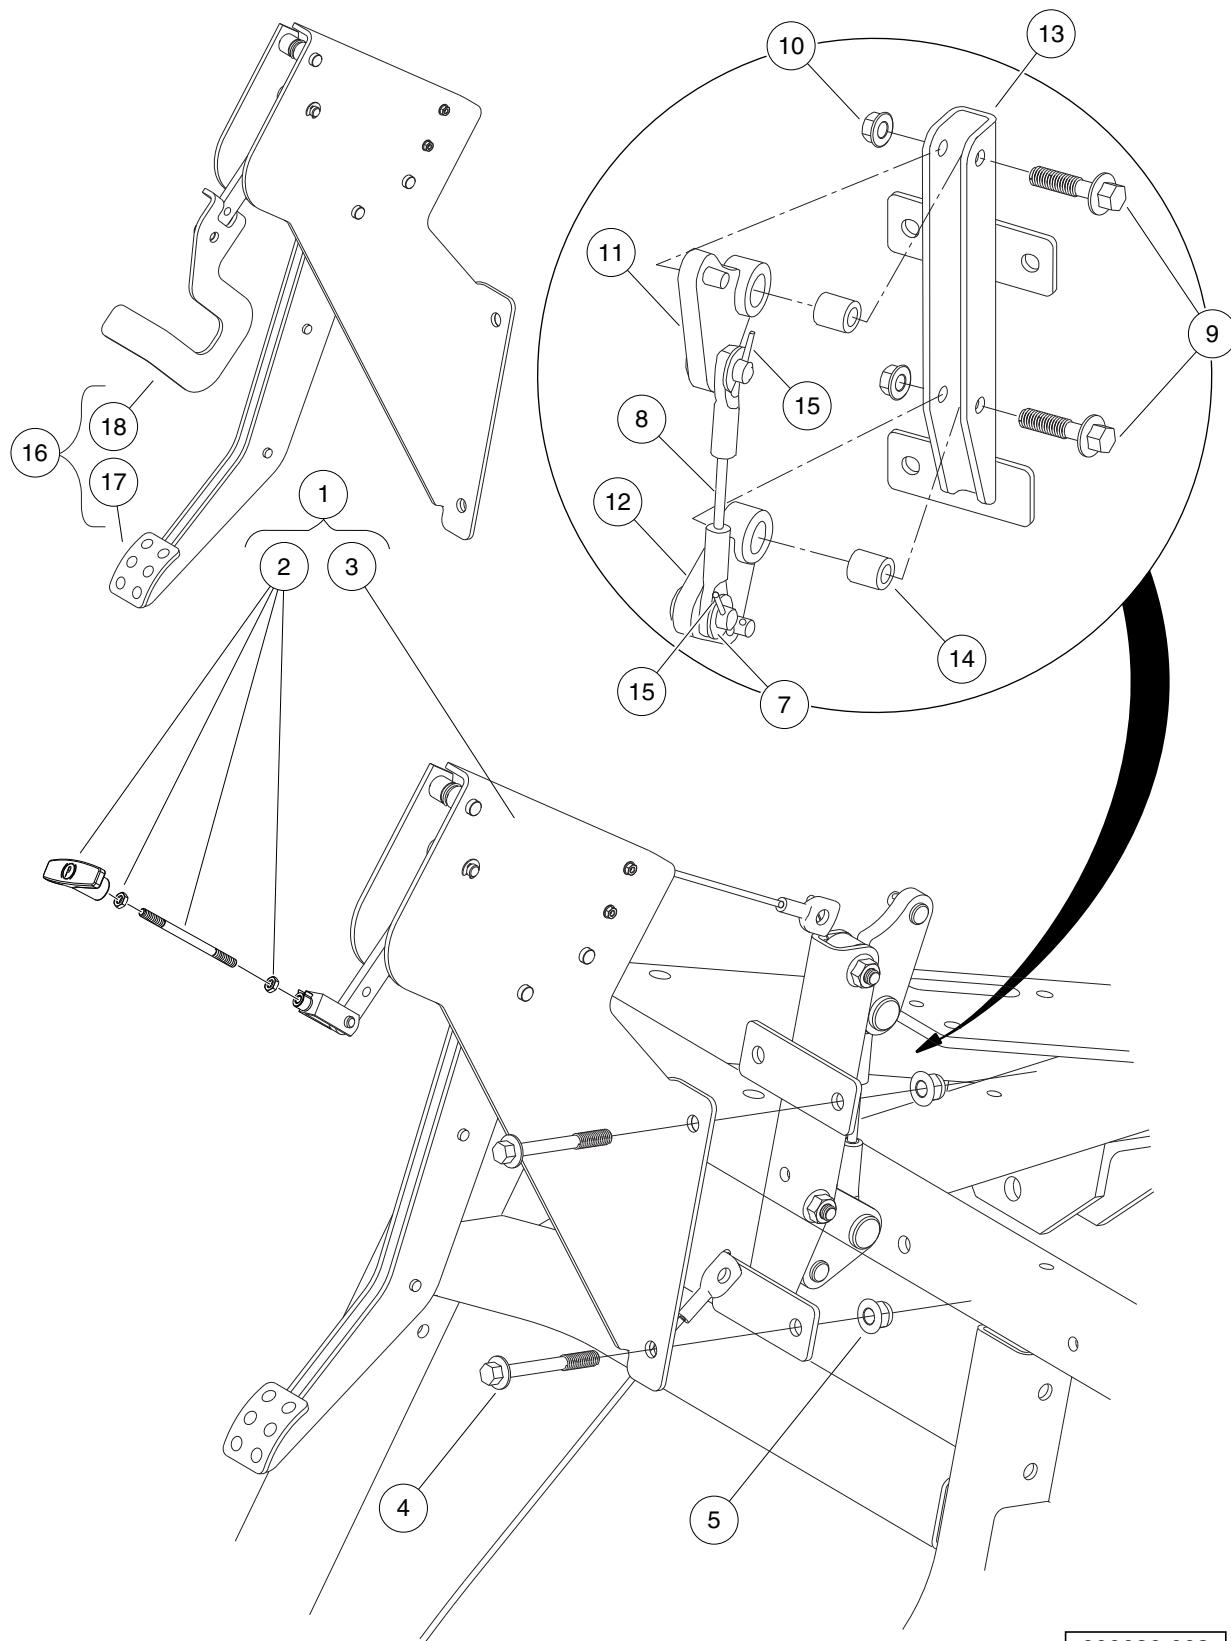5**G****D**

000086-003

PARK BRAKE PEDAL ASSEMBLY WITH BELLCRANK SYSTEM

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	5
1	102438101	Pedal Asm, Brake, Park (includes items 2 and 3)	1
2	<u>102758701</u>	Kit, Handle, Brake, Park	1
3	N/A	Pedal, Brake, Park	1
4	<u>102618301</u>	Bolt Flanged Head, M8 X 1.25 X 65	3
5	102618601	Lock Nut, Flg M8 X 1.25 Nylon	3
6	<u>102751501</u>	Asm, Sub, Bracket, Park Brake (includes items 7 through 15)	1
7	<u>102323501</u>	Washer, Flat, 3/8, Blk Fin	2
8	<u>102716001</u>	Cable, Crank, Bell	1
9	<u>102741501</u>	Bolt Flg, M8x1.25 X 35, Gr10.9	2
10	<u>102741601</u>	Nut Flg M8 X 1.25 Gr 10	2
11	<u>102751301</u>	Asm, Bellcrank, Upper	1
12	<u>102751401</u>	Asm, Bellcrank, Lower	1
13	<u>103305001</u>	Brkt, Bellcrank, Prk Brk, Awd	1
14	<u>103305101</u>	Spacer, Pivot, Park Brk, Awd	2
15	<u>1035</u>	Cotter Pin, 3/32 x 1	2
16	<u>102892401</u>	Asm, Pedal, Brake, Hard (includes items 17 and 18)	1
17	N/A	Pedal, Brake, Park	1
18	<u>102896601</u>	Handle, Release, Park Brake	1
		Note: Item 1 has been discontinued. Use item 16 for replacement of the complete assembly.	

5

G


D

STEERING AND SUSPENSION

6

G

D

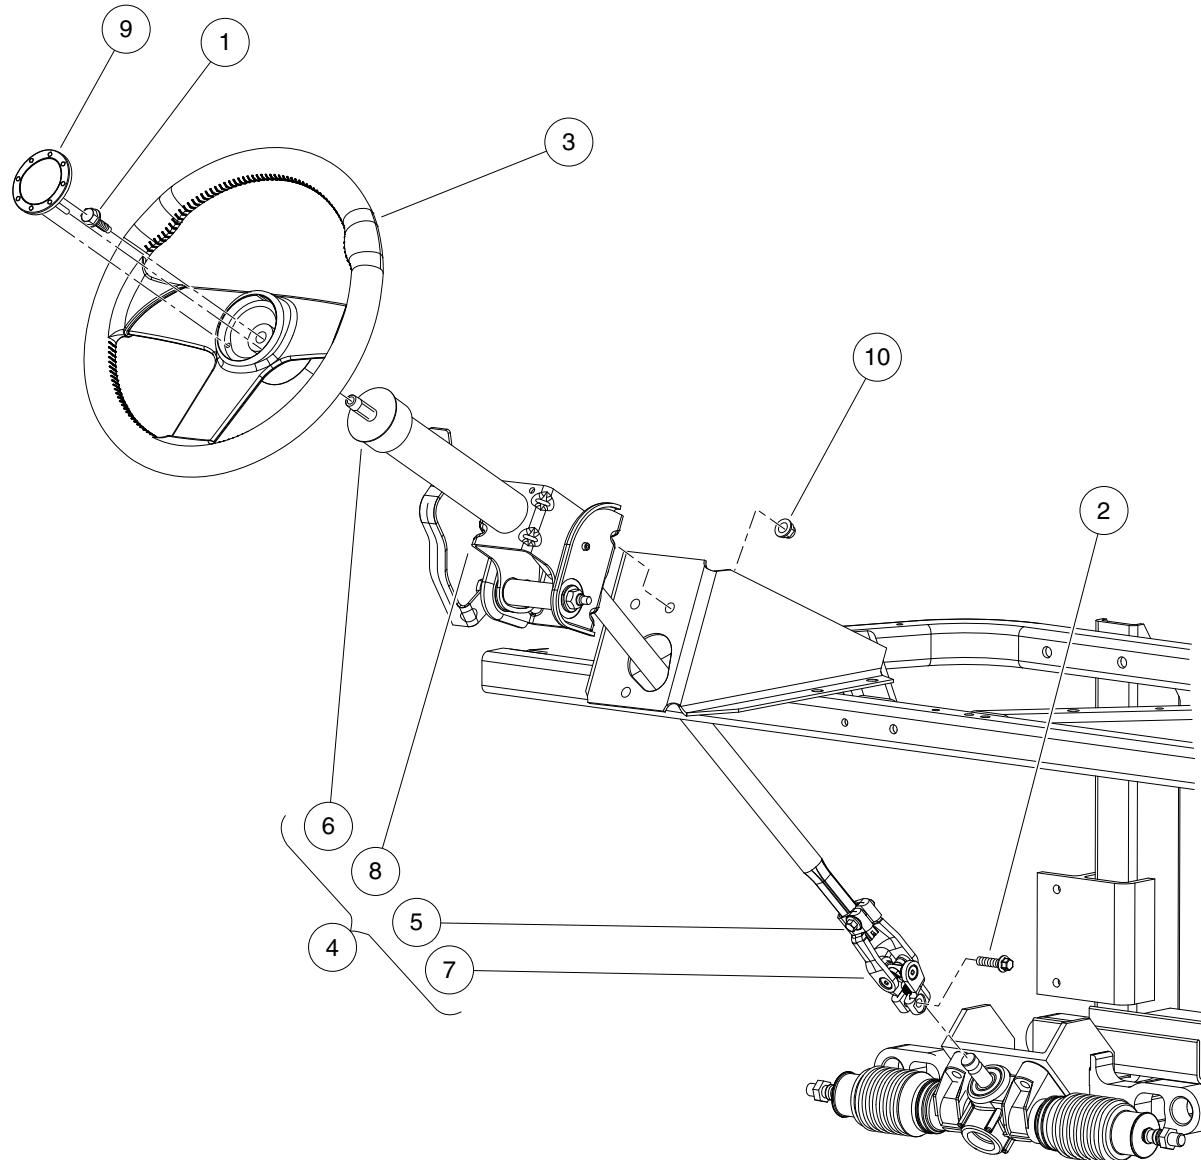6**G****D**

000070-001


STEERING COLUMN

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102290120</u>	Bolt, M10 X 20 Hex Washer Hd	1
2	<u>102298130</u>	Bolt, Flange Head, M8 X 30.0	1
3	<u>102363802</u>	Steering Wheel, Viper, Hex Hub	1
4	<u>102364201</u>	Steering Column (includes items 5 through 8)	1
5	<u>102298130</u>	Bolt, Flange Head, M8 X 30.0	1
6	<u>102571301</u>	Shroud, Steering Column	1
7	<u>102676801</u>	Knuckle, Steering, Slider	1
8	N/A	Column, Steering without Knuckle and Shroud	1
9	<u>102367101</u>	Cap, Steering Wheel, Viper	1
10	102618601	Lock Nut, Flg M8 X 1.25 Nylon	3

6

G


D

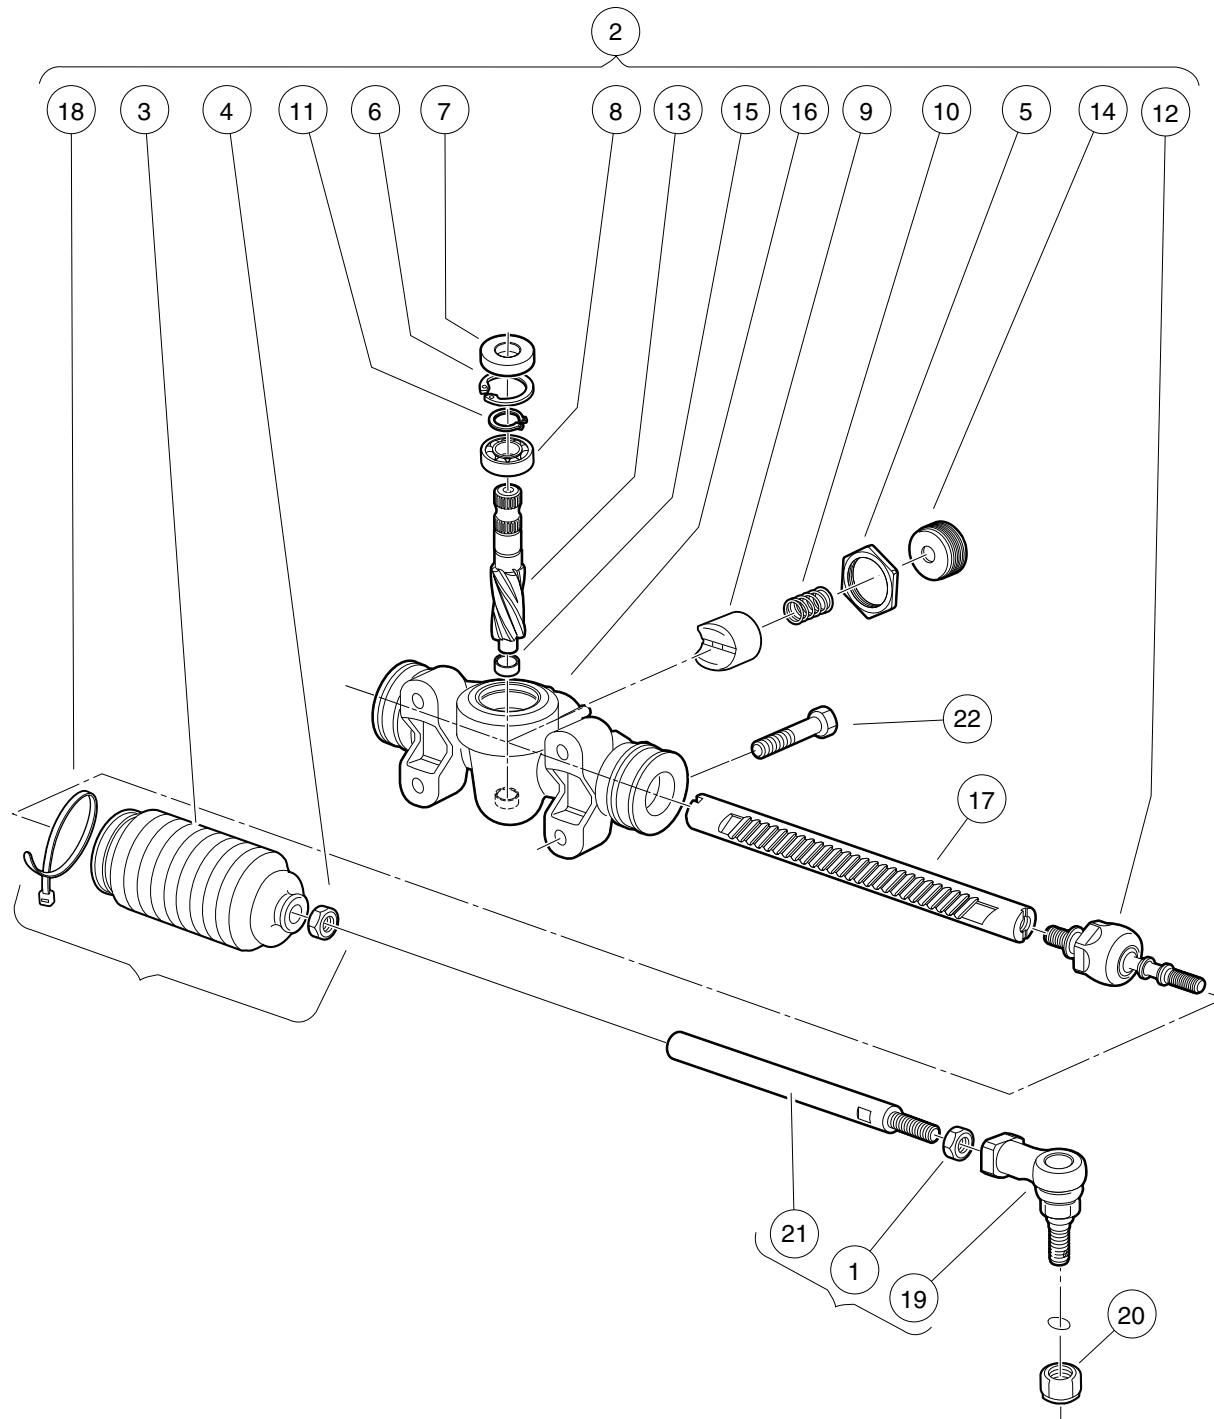6**G****D**

000071-002

STEERING GEAR ASSEMBLY



ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	6
1	1013042	Nut, 12mm Hex	2
2	<u>102010102</u>	Steering Rack (includes items 3 through 18)	1
3	<u>1013035</u>	Bellows, Long	2
4	<u>1013042</u>	Nut, 12mm Hex	2
5	<u>1013044</u>	Rack Screw Locknut	1
6	<u>1013051</u>	Snap Ring	1
7	<u>1013052</u>	Seal, Steering Pinion Dust	1
8	<u>101879401</u>	Bearing, Ball	1
9	<u>101879701</u>	Support Yoke	1
10	<u>101879801</u>	Rack Guide Pressure Spring	1
11	<u>101879901</u>	Ring, Stop, C-Type	1
12	<u>101880201</u>	Inner Ball Joint Asm	2
13	N/A	Pinion, Steering	1
14	N/A	Bearing, Lower Pinion	1
15	N/A	Screw, Rack Guide	1
16	N/A	Housing, Steering Gear	1
17	N/A	Rack, Steering	1
18	<u>8990</u>	Tie Wrap, 8" Nylon	2
19	<u>102022601</u>	End, Tie Rod M12 X 1.25 Rh	2
20	<u>102022901</u>	Locknut, M12-1.25 Nylon	2
21	<u>102449901</u>	Link, Drag	2
22	<u>102687801</u>	Bolt, Flange Head, M10x 1.5 X 40 with Loctite	4

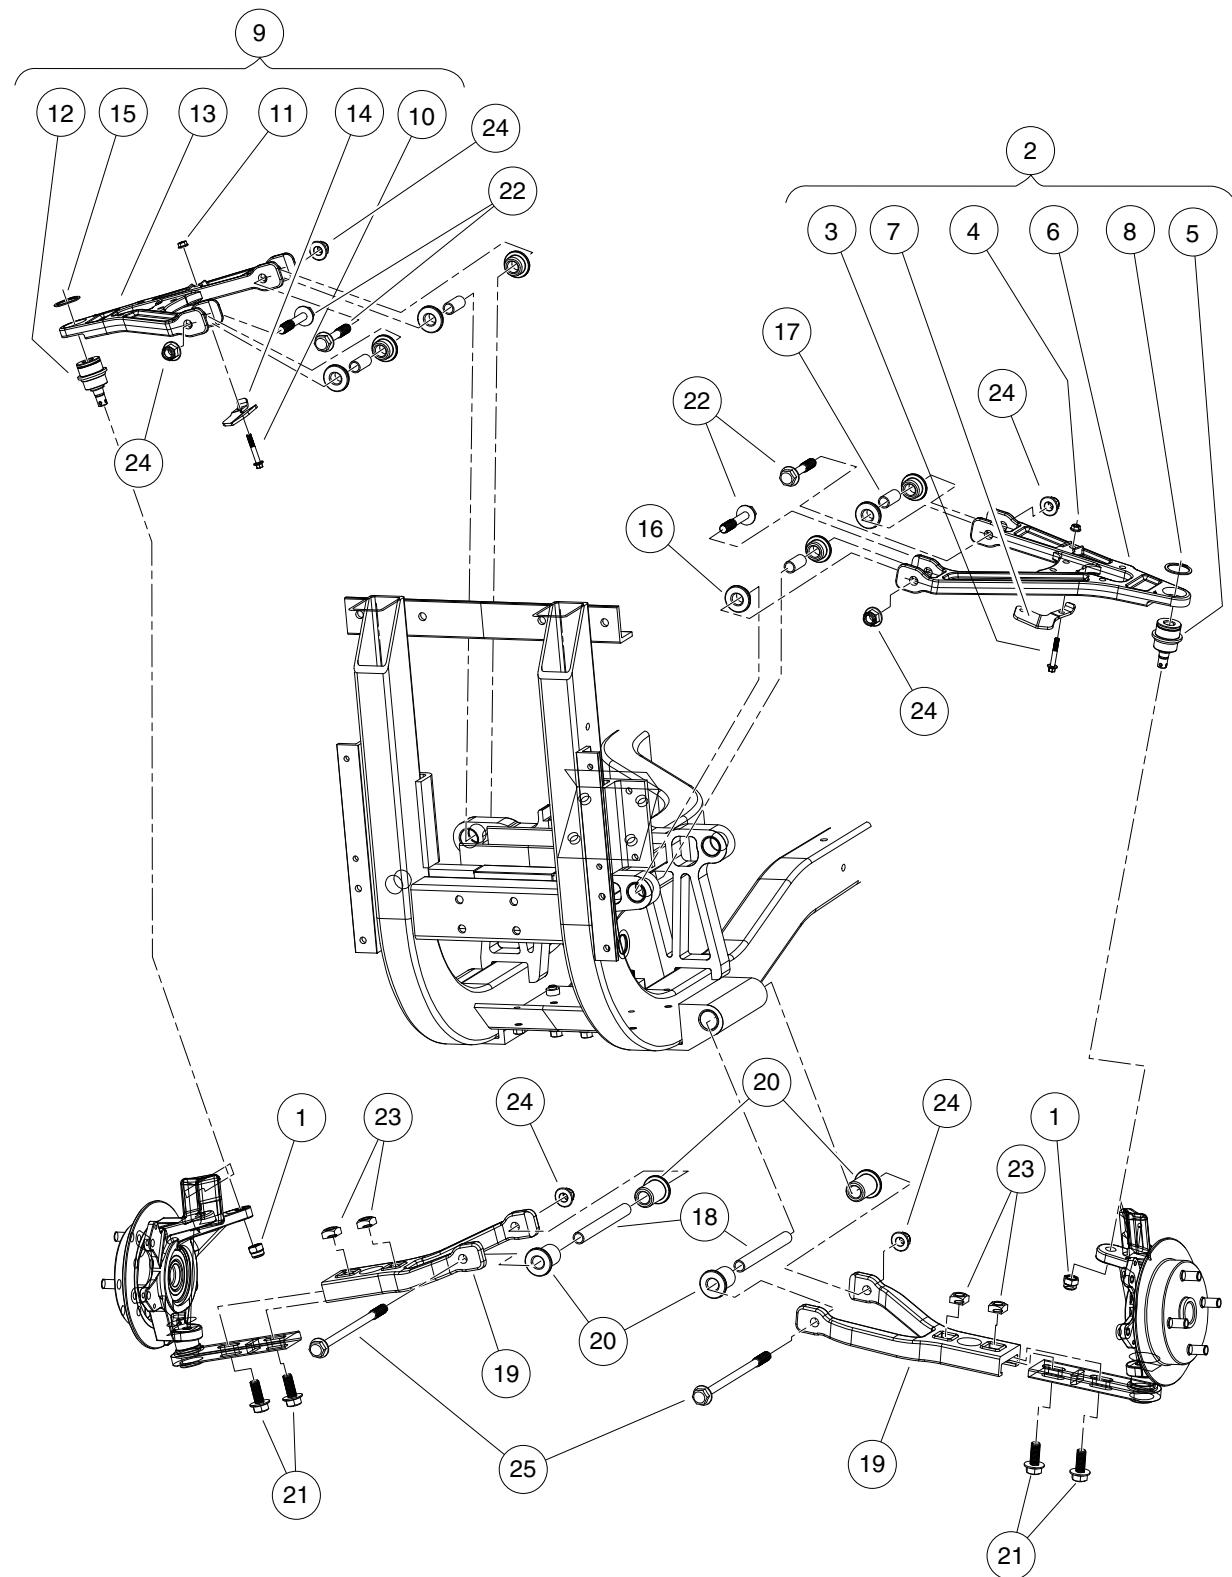6**G****D**

000074-001

FRONT SUSPENSION – A-ARMS


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	6
1	<u>102022901</u>	Locknut, M12-1.25 Nylon	2
2	<u>102368501</u>	Sub-assembly, A-Arm, Upper, LH (includes items 3 through 8)	1
3	<u>102296140</u>	Bolt, Flanged Head, M6x1.0x40	1
4	<u>102296401</u>	Nut-m6x1.0 Flng All Mtl Lock	1
5	<u>102361901</u>	Joint, Ball	1
6	<u>102368801</u>	A-Arm, Upper, Left	1
7	<u>102474101</u>	Bracket, Brake Line, Left	1
8	<u>102722301</u>	Ring, Retaining, Ext, 1-1/4"	1
9	<u>102368502</u>	Sub-assembly, A-Arm, Upper, RH (includes items 10 through 15)	1
10	<u>102296140</u>	Bolt, Flanged Head, M6x1.0x40	1
11	<u>102296401</u>	Nut-m6x1.0 Flng All Mtl Lock	1
12	<u>102361901</u>	Joint, Ball	1
13	<u>102368802</u>	A-Arm, Upper, Right	1
14	<u>102474102</u>	Bracket, Brake Line, Right	1
15	<u>102722301</u>	Ring, Retaining, Ext, 1-1/4"	1
16	<u>102408401</u>	Bushing, A-Arm	8
17	<u>102437001</u>	Sleeve, Upper	4
18	<u>102437101</u>	Sleeve, Lower	2
19	<u>102446901</u>	Arm, Lower	2
20	<u>102469901</u>	Bushing, Lower Arm	4
21	<u>102490801</u>	Bolt, Flange Head, M12x 1.75x 30 with Loctite	4
22	<u>102616301</u>	Bolt, Flange Head, M12 X 1.75 X 70	4
23	<u>102617701</u>	Nut, Square, M12x 1.75	4
24	<u>102620501</u>	Nut Flg, M12x1.75, Nylon Gr 10	6
25	<u>103256701</u>	Bolt Flg, M12 X 1.75 X 200 10.	2

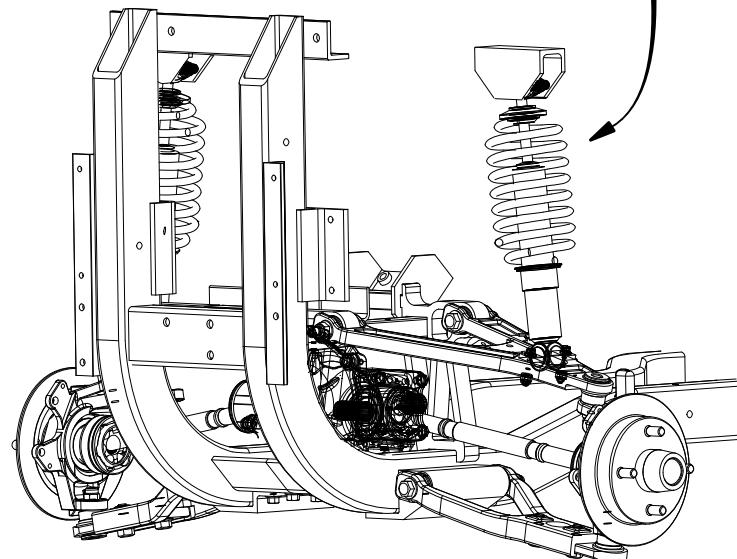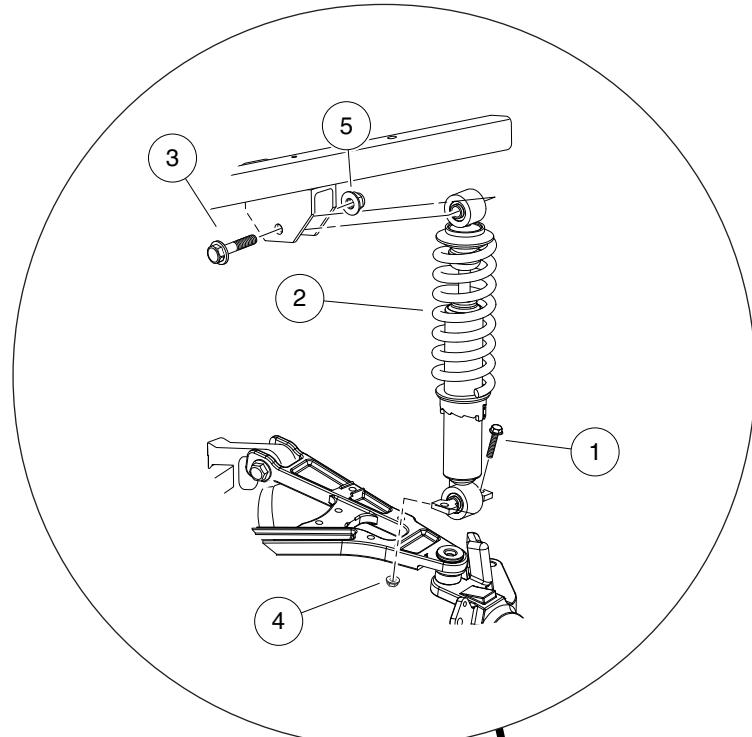6**G****D**

000072-001

FRONT SUSPENSION (STANDARD)

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	6
1	<u>102298240</u>	Bolt, Flange Head, M8-1.25 X 40	4
2	<u>102394002</u>	Shock, Coil Over, Front Hd	2
3	<u>102616301</u>	Bolt, Flange Head, M12 X 1.75 X 70	2
4	<u>102618601</u>	Lock Nut, Flg M8 X 1.25 Nylon	4
5	<u>102620501</u>	Nut Flg, M12x1.75, Nylon Gr 10	2

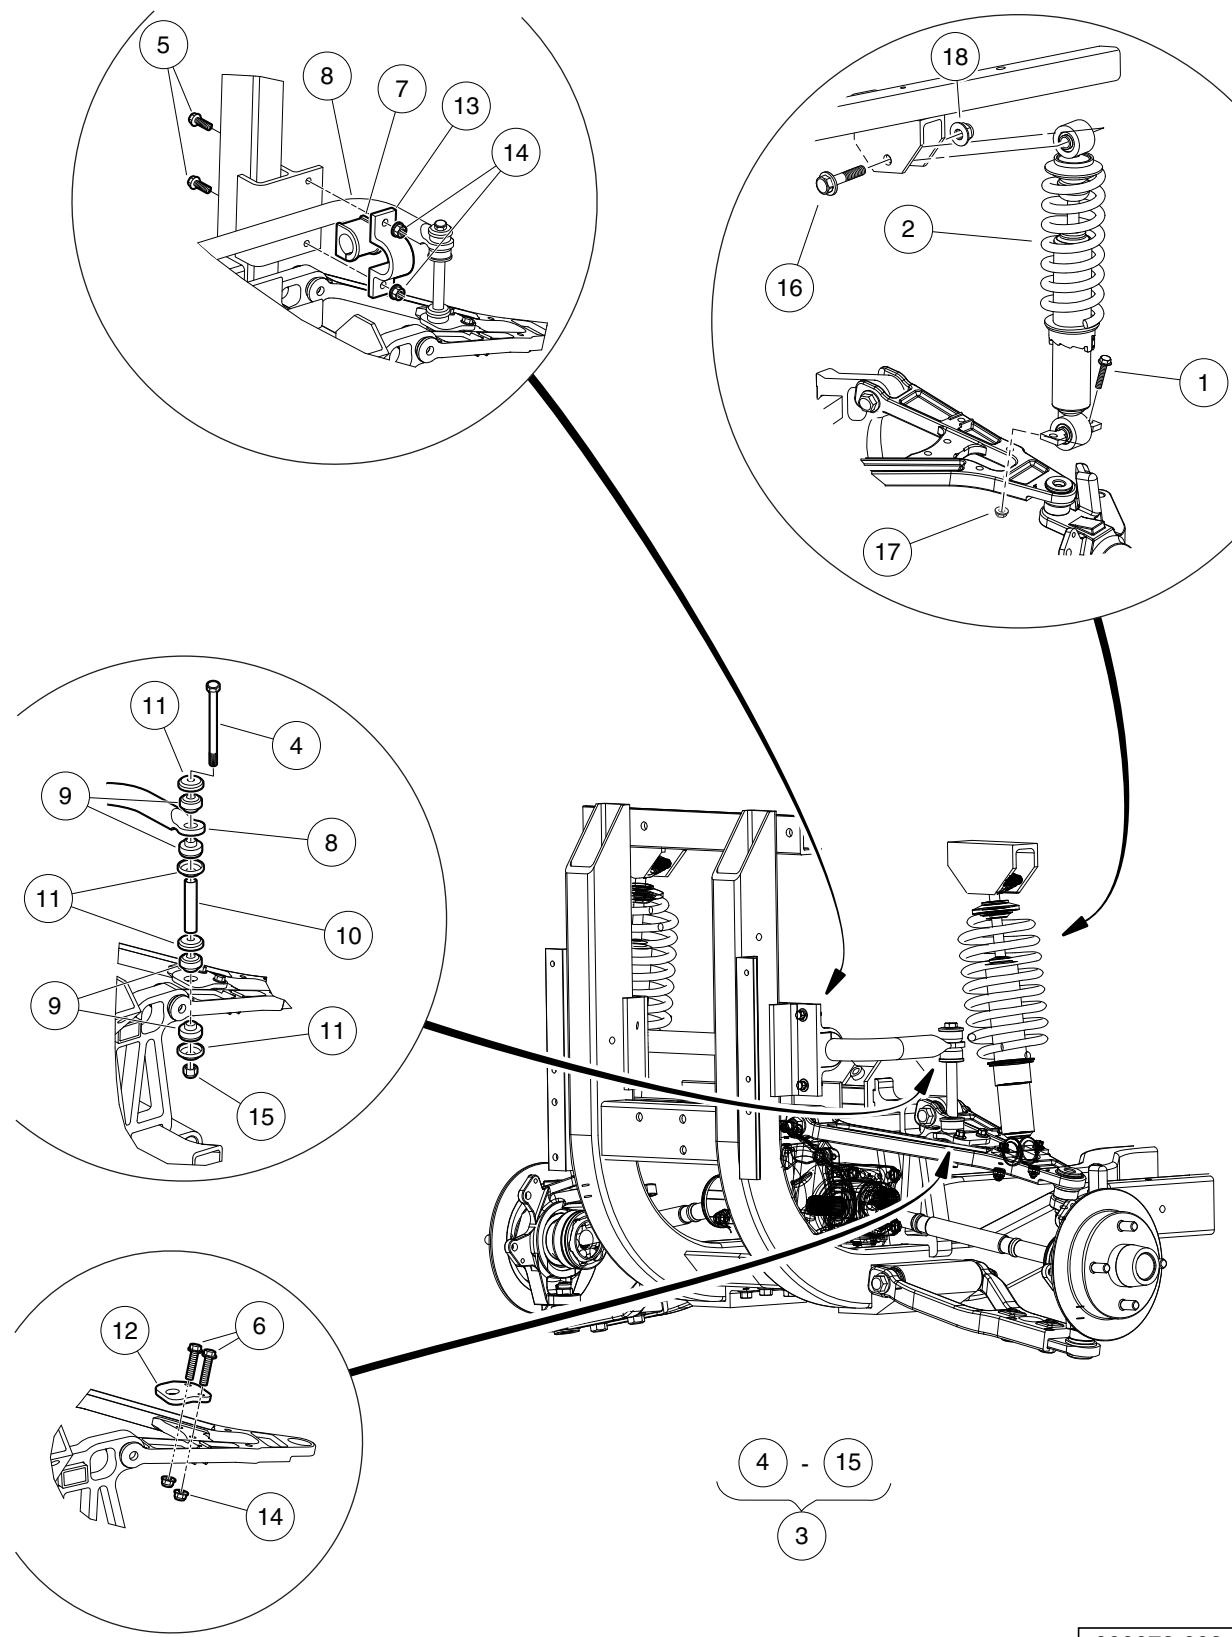6**G****D**

000072-002


FRONT SUSPENSION (HIGH-CAPACITY OPTION)

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102298240</u>	Bolt, Flange Head, M8-1.25 X 40	4
2	<u>102394002</u>	Shock, Coil Over, Front Hd	2
3	<u>102468802</u>	Kit, Anti-Sway Bar (includes items 4 through 15)	1
4	<u>1016183</u>	Screw, 3/8-16 X 7.00 Hex Cap	2
5	<u>102298130</u>	Bolt, Flange Head, M8 X 30.0	4
6	<u>102298240</u>	Bolt, Flange Head, M8-1.25 X 40	4
7	<u>102446601</u>	Bushing, Anti-Sway Bar, 1-1/8	2
8	<u>102464601</u>	Bar, Sway, Formed	1
9	<u>102470101</u>	Bushing, Link	8
10	<u>102470501</u>	Sleeve, Link	2
11	<u>102470601</u>	Washer, Cup, Bushing	8
12	<u>102477201</u>	Mount, Link	2
13	<u>102495001</u>	Bracket, Anti-Sway Bar	2
14	102618601	Lock Nut, Flg M8 X 1.25 Nylon	8
15	<u>8754</u>	Locknut, 3/8-16 Hex	2
16	<u>102616301</u>	Bolt, Flange Head, M12 X 1.75 X 70	2
17	102618601	Lock Nut, Flg M8 X 1.25 Nylon	4
18	<u>102620501</u>	Nut Flg, M12x1.75, Nylon Gr 10	2

6

G


D

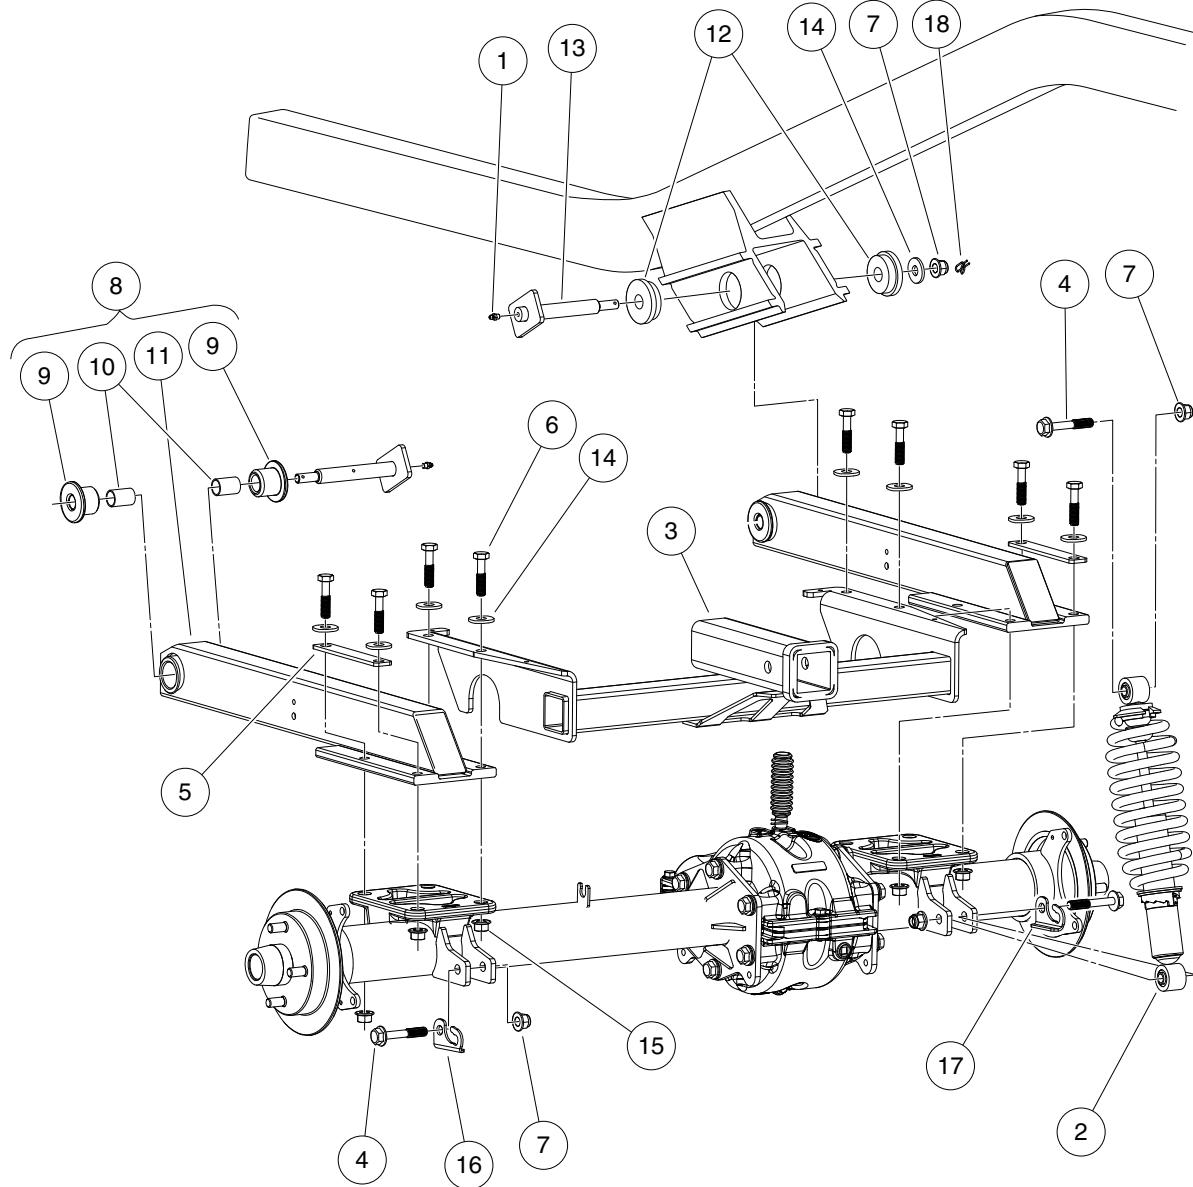6**G****D**

000031-001

REAR SUSPENSION (STANDARD)

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	6
1	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	2
2	<u>102365601</u>	Shock, Coil Over Rear	2
3	<u>102393501</u>	Weldment, Receiver, Rear	1
4	<u>102616301</u>	Bolt, Flange Head, M12 X 1.75 X 70	4
5	<u>102619801</u>	Washer, Strip, Swingarm	2
6	<u>102620401</u>	Bolt Flanged Head, M12 X 1.75 X 50	8
7	<u>102620501</u>	Nut Flg, M12x1.75, Nylon Gr 10	6
8	N/A	Sub Asm Swingarm (includes items 9 through 11)	2
9	<u>102398901</u>	Bushing, Pivot, Urethane	2
10	<u>102477001</u>	Bushing, Teflon	2
11	<u>103282301</u>	Swingarm, Rear, Awd	1
12	<u>102682701</u>	Insert, Flanged, H-Bracket	4
13	<u>102682901</u>	Pin, Swingarm, Weldment	2
14	<u>102684501</u>	Washer, M12 Hard Regular	10
15	<u>102685601</u>	Nut Flg M12 X 1.75 Cl10	8
16	<u>102689101</u>	Brkt, Line, Hyd, Shk Mnt, Drv	1
17	<u>102689102</u>	Brkt, Line, Hyd, Shk Mnt, Pass	1
18	<u>102737101</u>	Cotter, Rue Ring, 1/2"	2

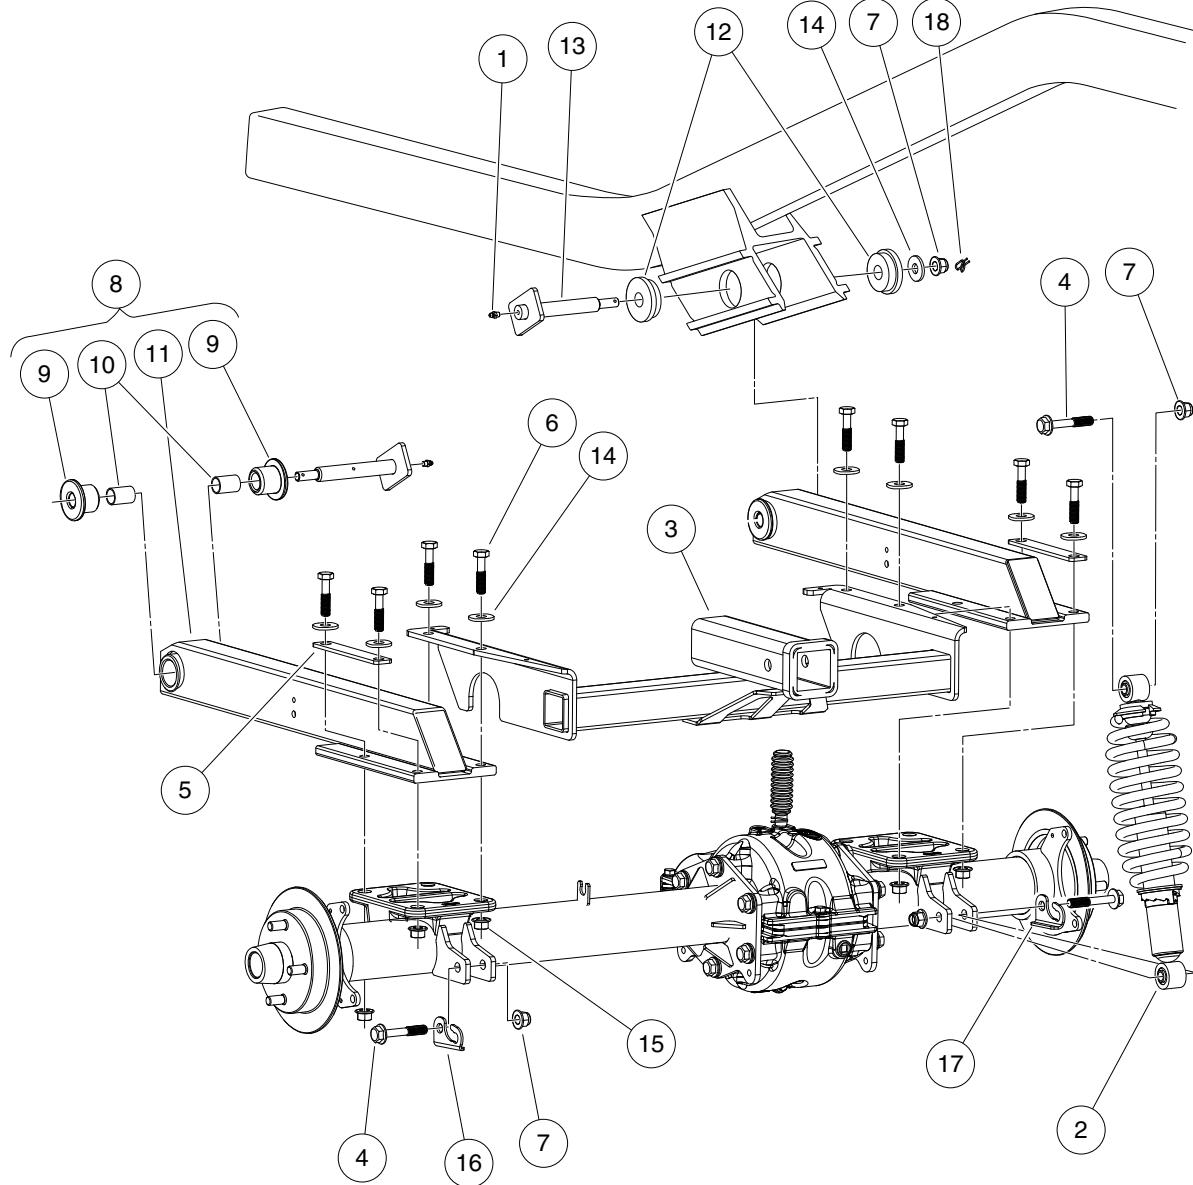6**G****D**

000031-001

REAR SUSPENSION (HIGH-CAPACITY OPTION)

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	6
1	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	2
2	<u>102365602</u>	Shock, Coil Over, Rear HD	2
3	<u>102393501</u>	Weldment, Receiver, Rear	1
4	<u>102616301</u>	Bolt, Flange Head, M12 X 1.75 X 70	4
5	<u>102619801</u>	Washer, Strip, Swingarm	2
6	<u>102620401</u>	Bolt Flanged Head, M12 X 1.75 X 50	8
7	<u>102620501</u>	Nut Flg, M12x1.75, Nylon Gr 10	6
8	N/A	Sub Asm Swingarm (includes items 9 through 11)	2
9	<u>102398901</u>	Bushing, Pivot, Urethane	2
10	<u>102477001</u>	Bushing, Teflon	2
11	<u>103282301</u>	Swingarm, Rear, Awd	1
12	<u>102682701</u>	Insert, Flanged, H-Bracket	4
13	<u>102682901</u>	Pin, Swingarm, Weldment	2
14	<u>102684501</u>	Washer, M12 Hard Regular	10
15	<u>102685601</u>	Nut Flg M12 X 1.75 Cl10	8
16	<u>102689101</u>	Brkt, Line, Hyd, Shk Mnt, Drv	1
17	<u>102689102</u>	Brkt, Line, Hyd, Shk Mnt, Pass	1
18	<u>102737101</u>	Cotter, Rue Ring, 1/2"	2

6

G

D

ELECTRICAL SYSTEM

7


G

D

7

G

D

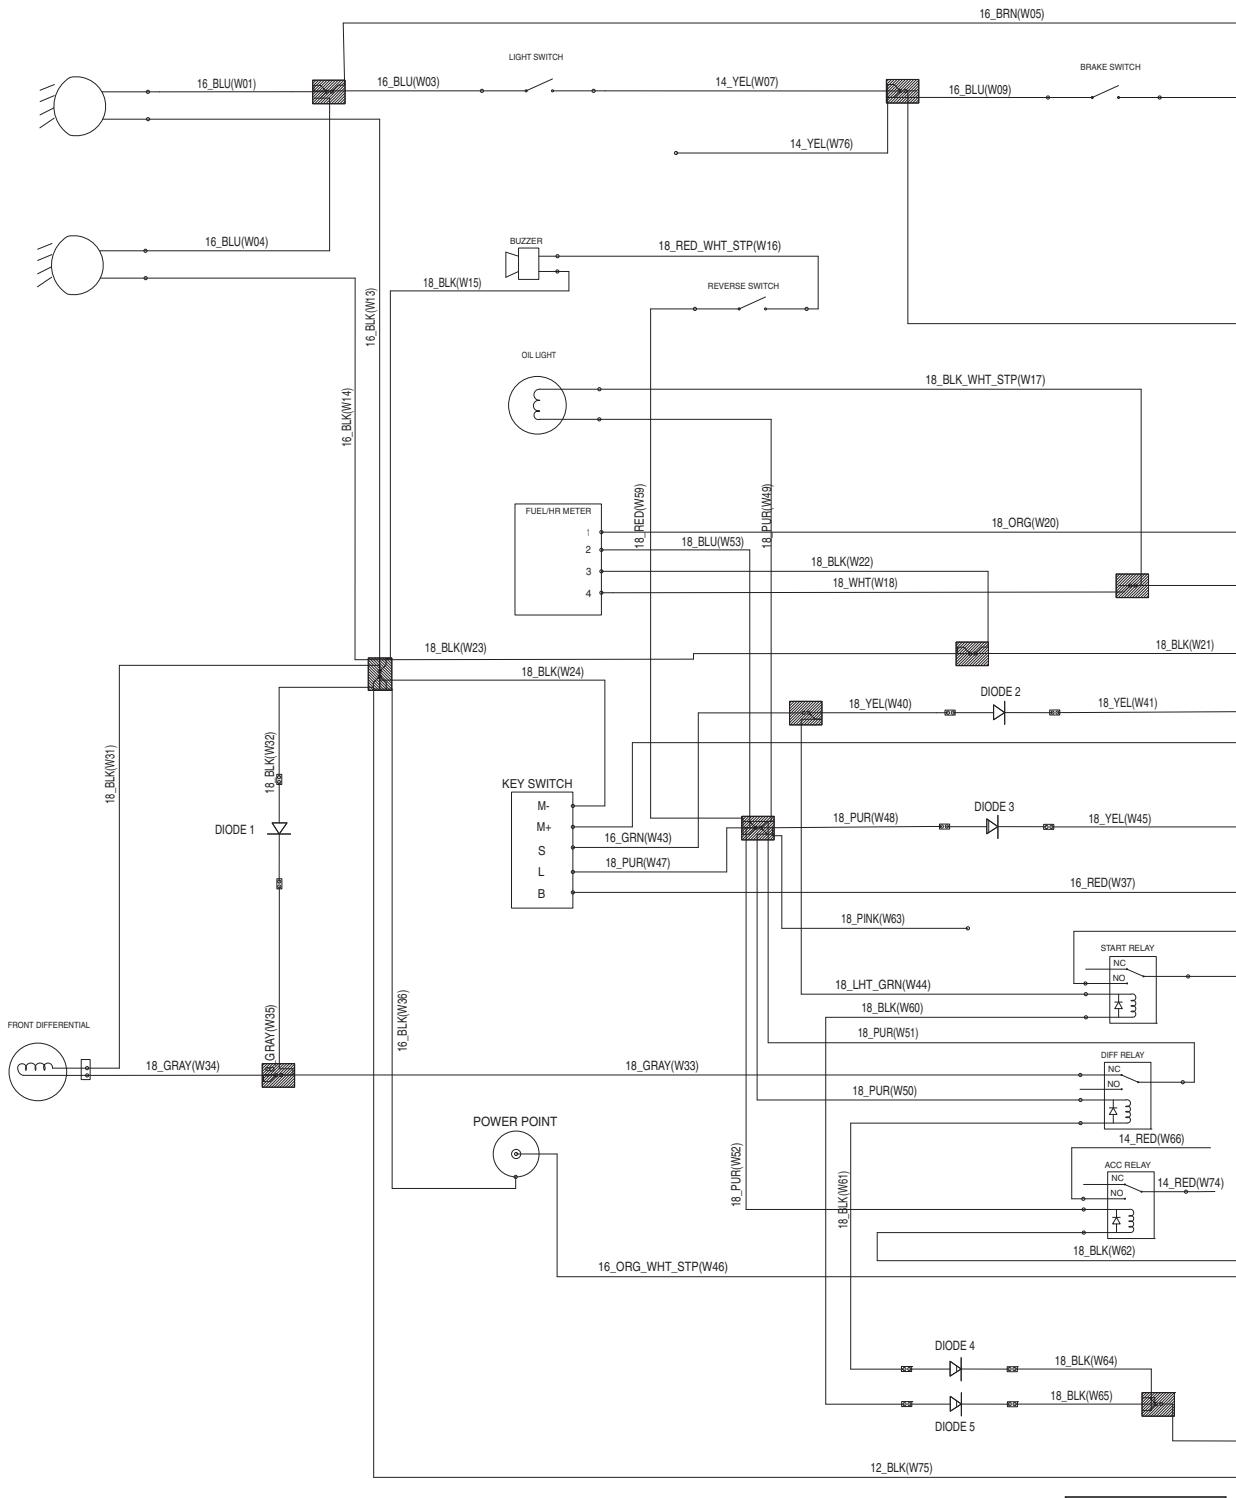


000001-002

7

G

D

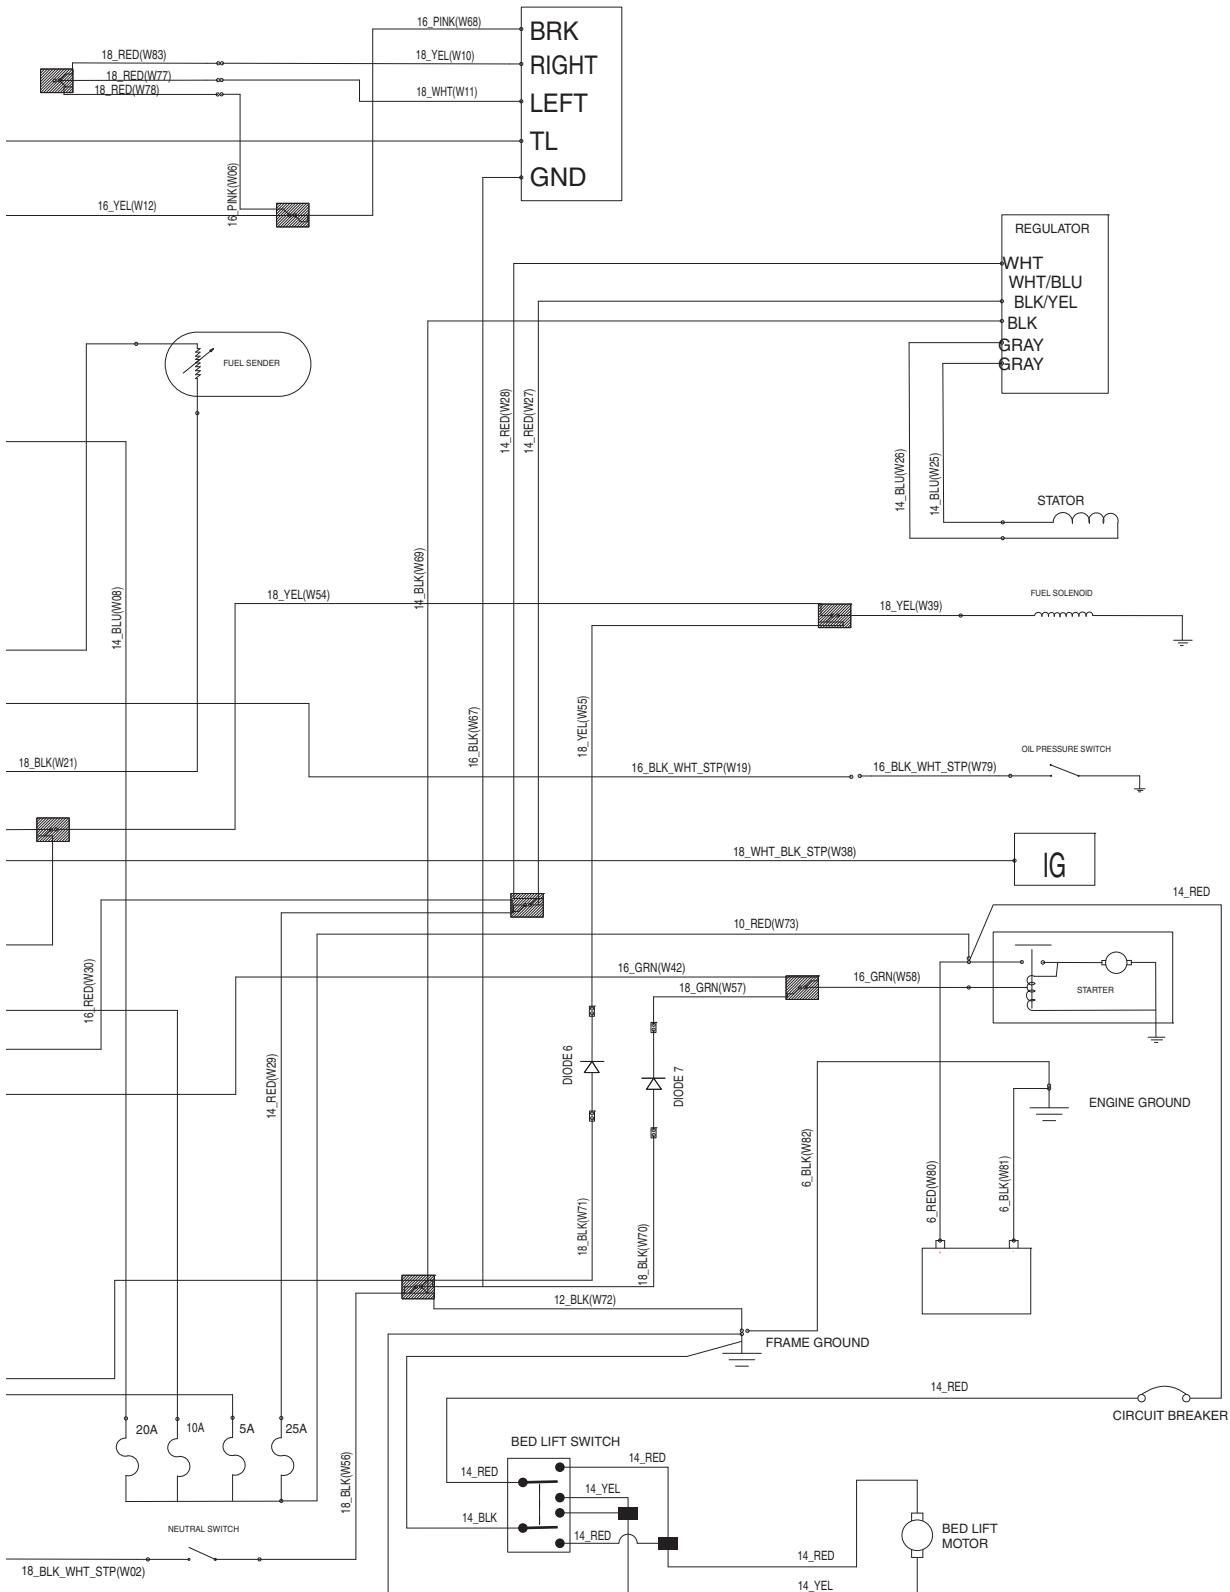

000001-002

7

G

D

See previous two pages for illustration.


WIRING – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	
1	<u>102435301</u>	1 2 3 4 Wire Harness, Awd, Gas	1	7 G D


7

G

D

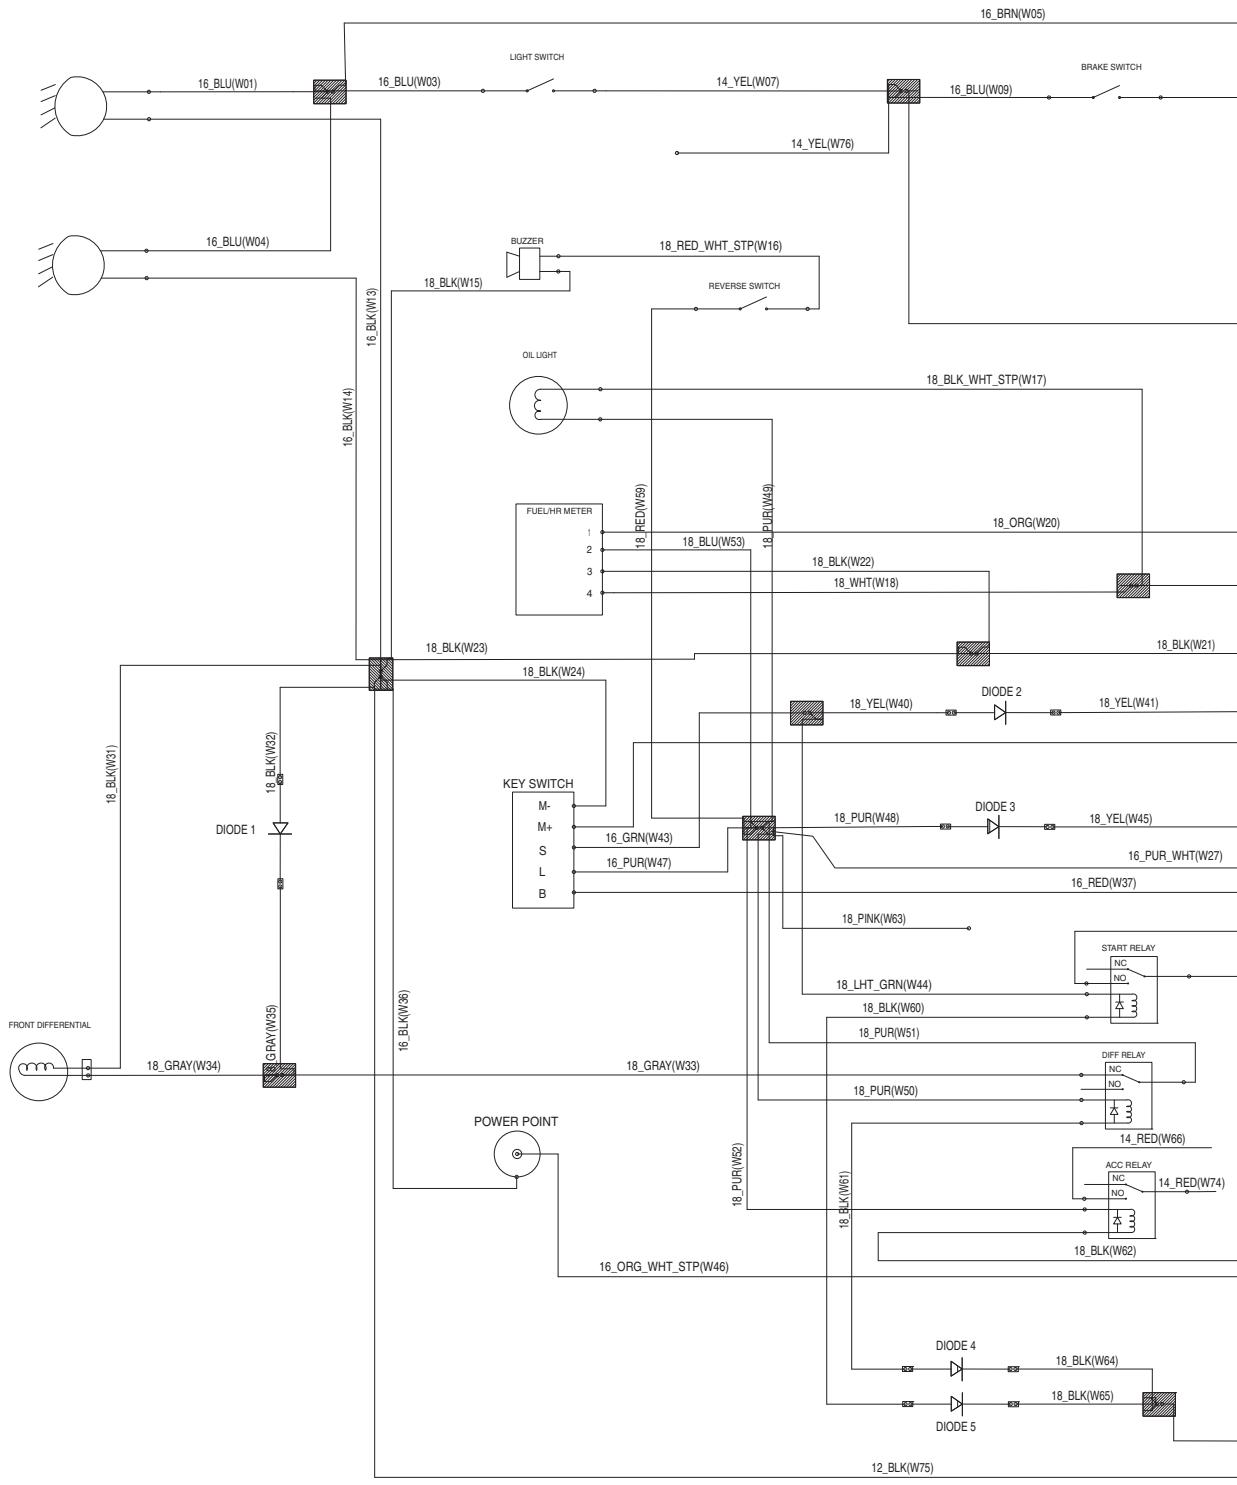

000001-002

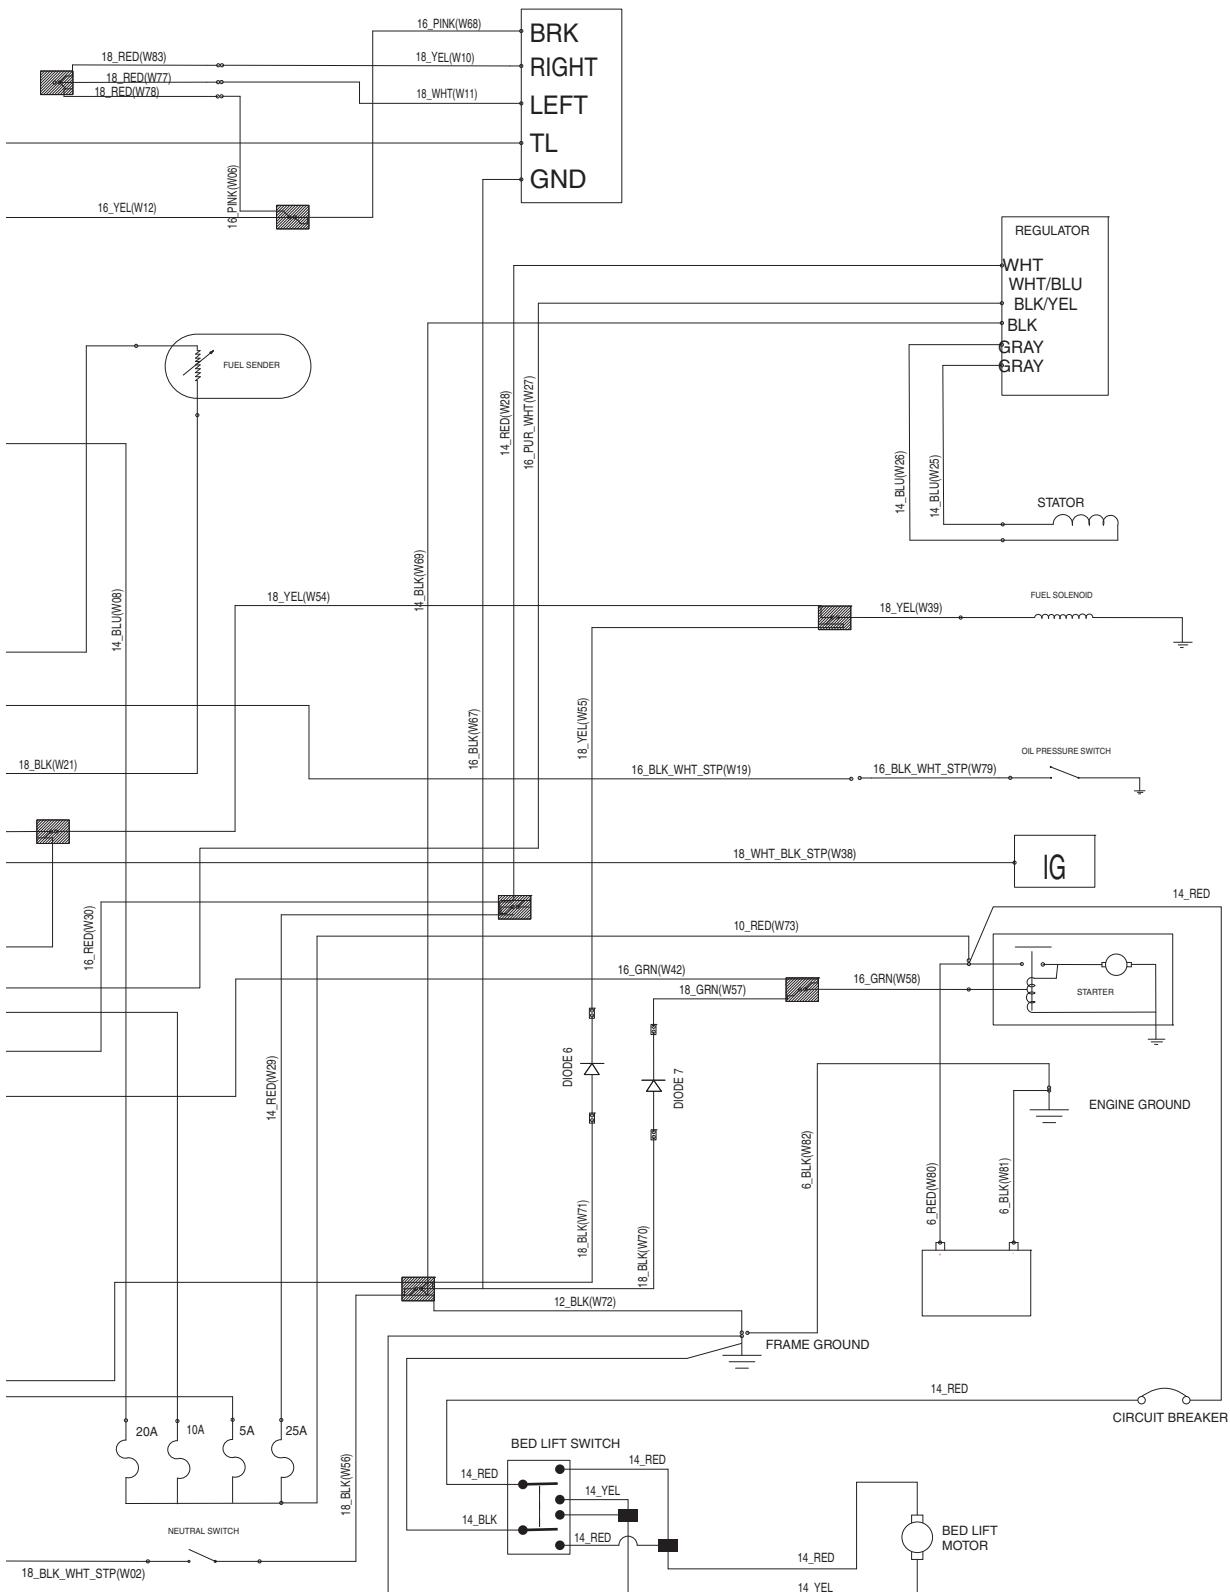

000001-003

7

G

D

See previous two pages for illustration.


WIRING – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	
1	<u>102435301</u>	1 2 3 4 Wire Harness, Awd, Gas	1	7 G D


7

G

D

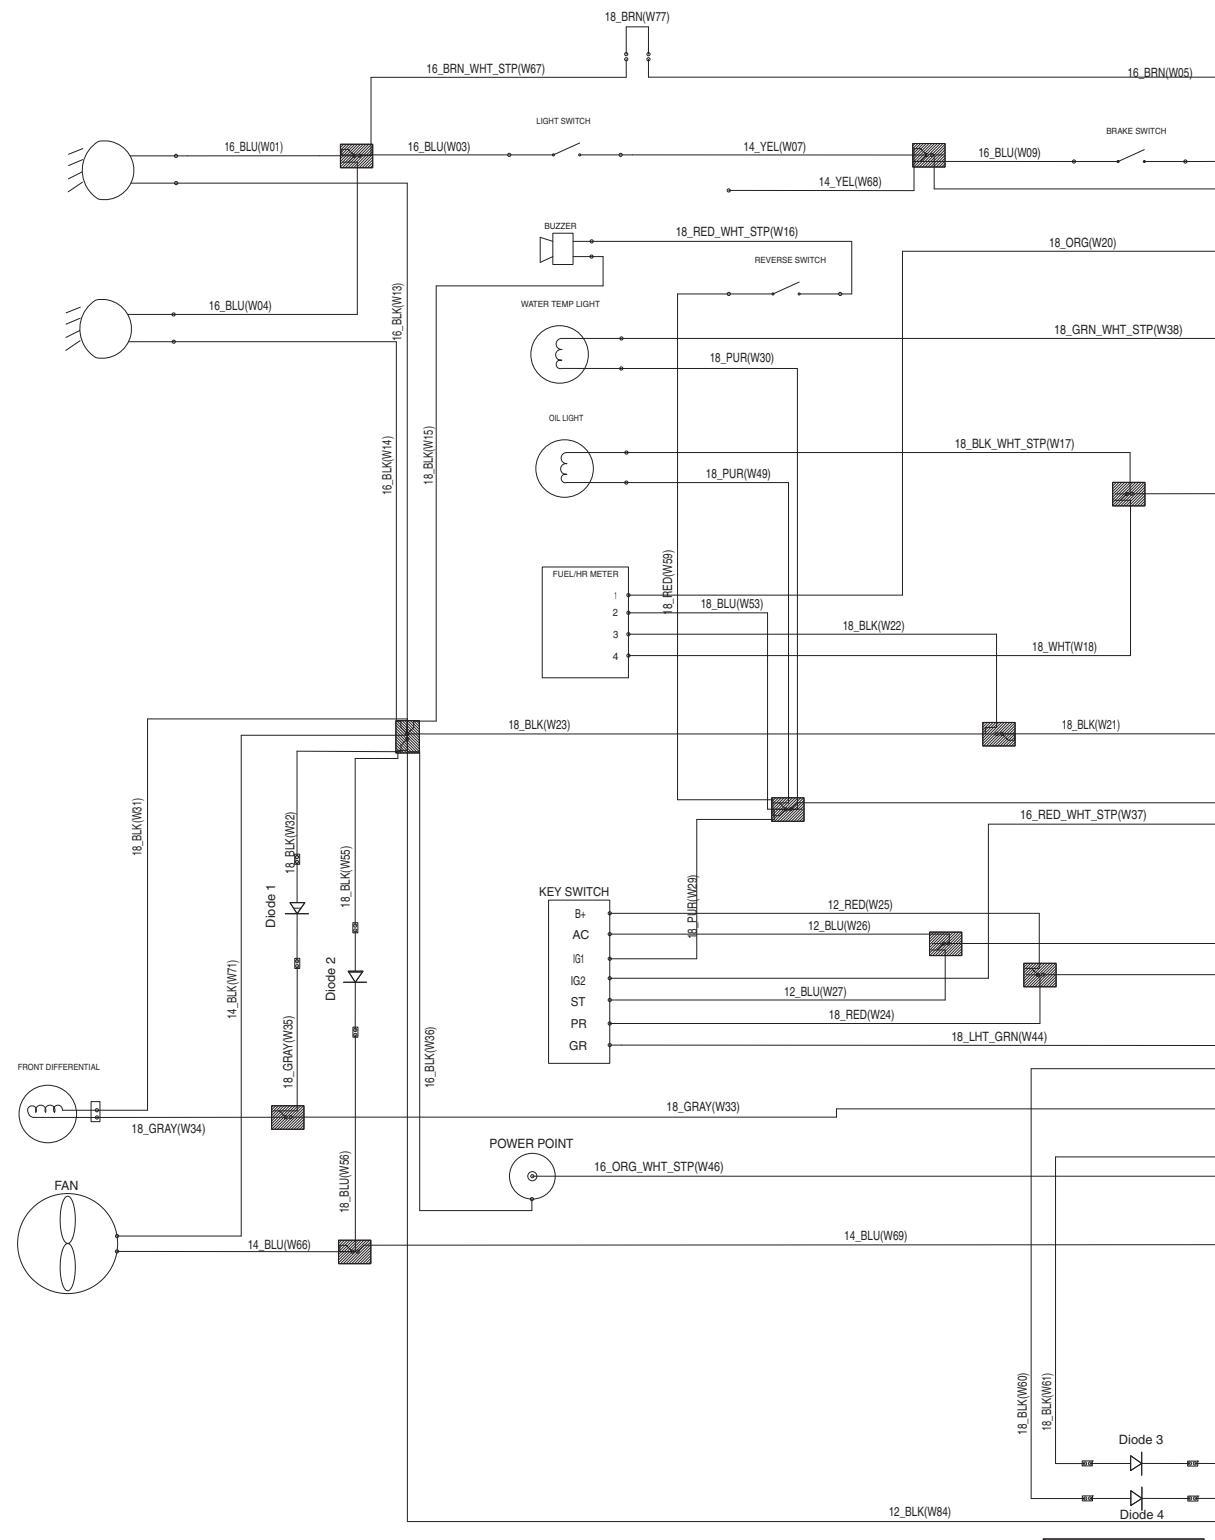

000002-002

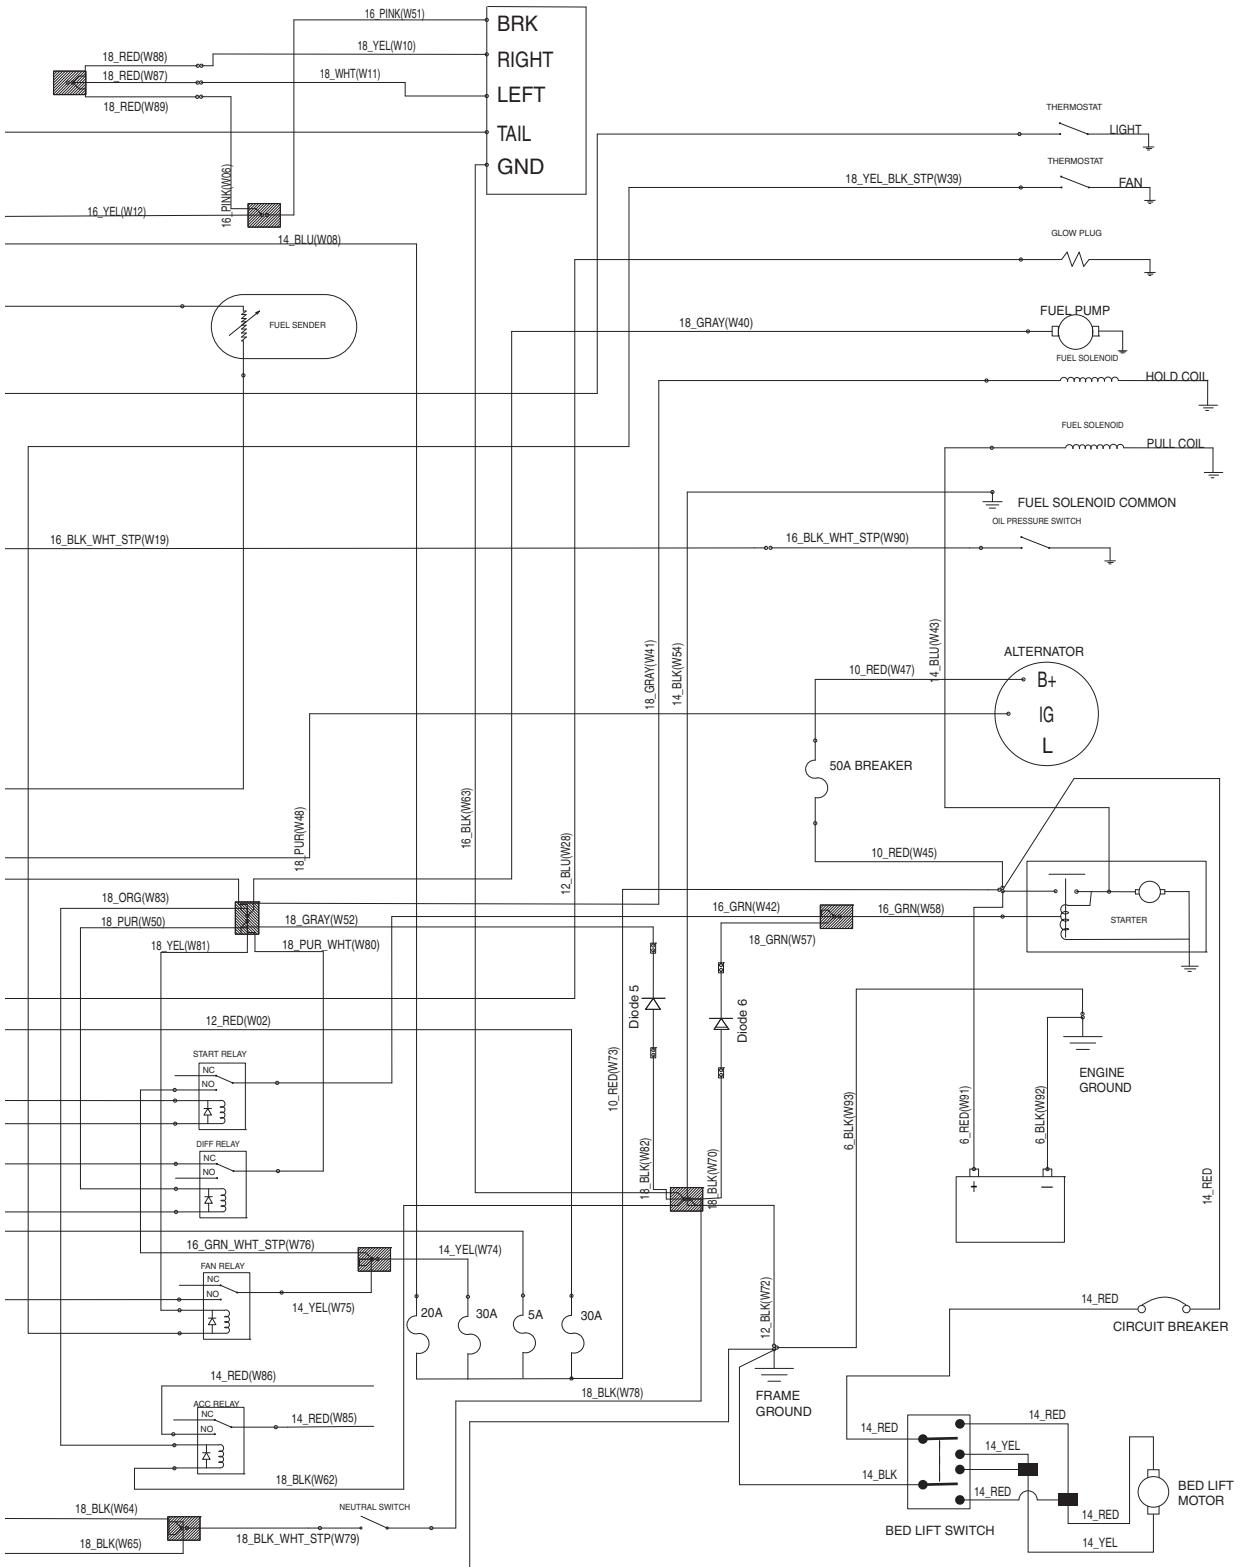

000002-002

7


G

D

See previous two pages for illustration.

WIRING – DIESEL VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY	
1	<u>102444201</u>	1 2 3 4 Wire Harness, Awd, Diesel	1	7 G D

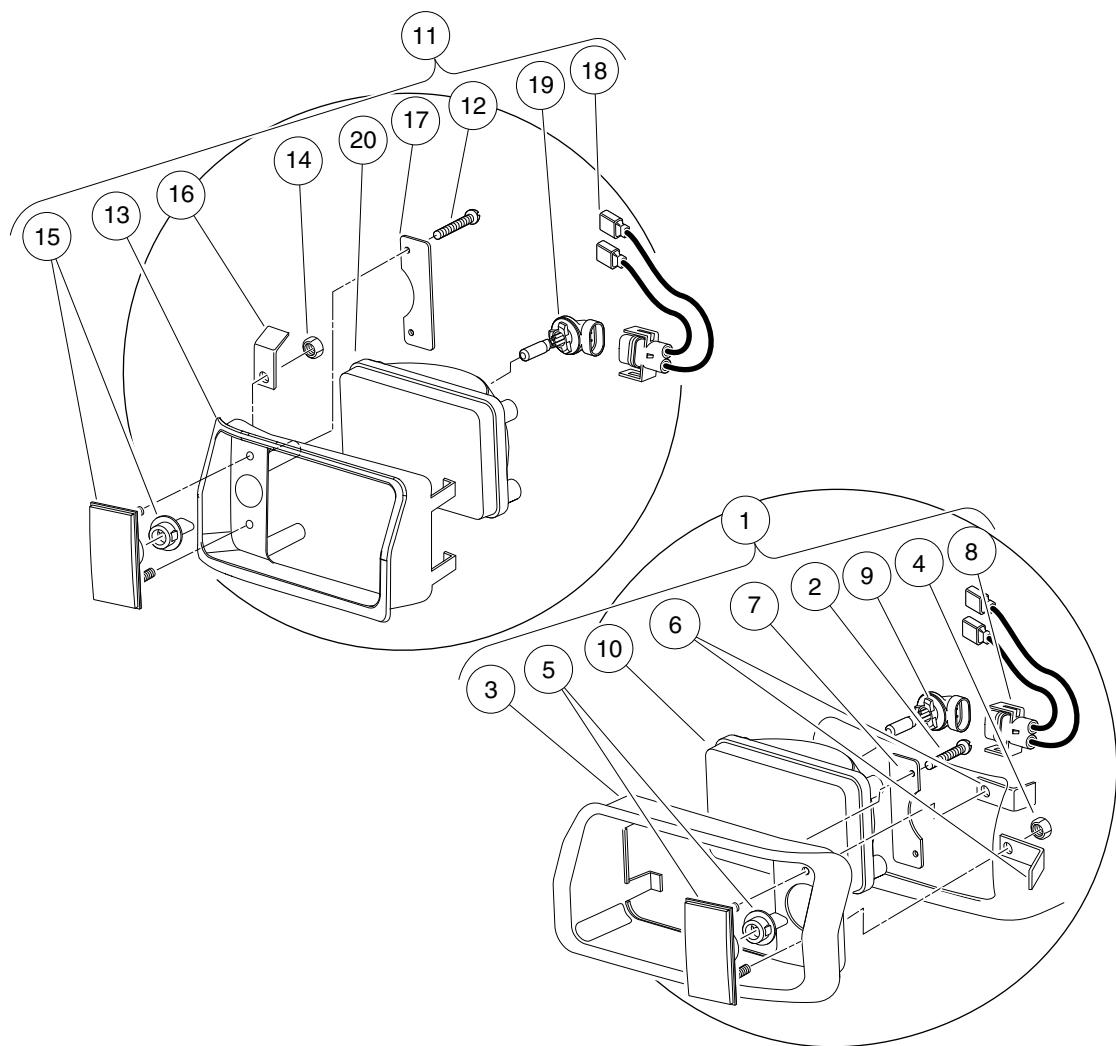7**G****D**

000073-001

HEADLIGHTS


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	7
1	<u>101988001</u>	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	1
2	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2
3	<u>1016880</u>	Headlight Bezel, Left	1
4	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
5	<u>1017062</u>	Turn Signal Lens Assy	1
6	<u>1017064</u>	Mounting Bracket	2
7	<u>1017065</u>	Retainer, Headlight	1
8	<u>101987901</u>	Connector Harness Assembly, Headlight	1
9	<u>101988101</u>	Bulb, Headlight	1
10	<u>101988201</u>	Lens, Headlight	1
11	<u>101988002</u>	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	1
12	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2
13	<u>1016879</u>	Headlight Bezel, Right	1
14	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2
15	<u>1017062</u>	Turn Signal Lens Assy	1
16	<u>1017064</u>	Mounting Bracket	2
17	<u>1017065</u>	Retainer, Headlight	1
18	<u>101987901</u>	Connector Harness Assembly, Headlight	1
19	<u>101988101</u>	Bulb, Headlight	1
20	<u>101988201</u>	Lens, Headlight	1

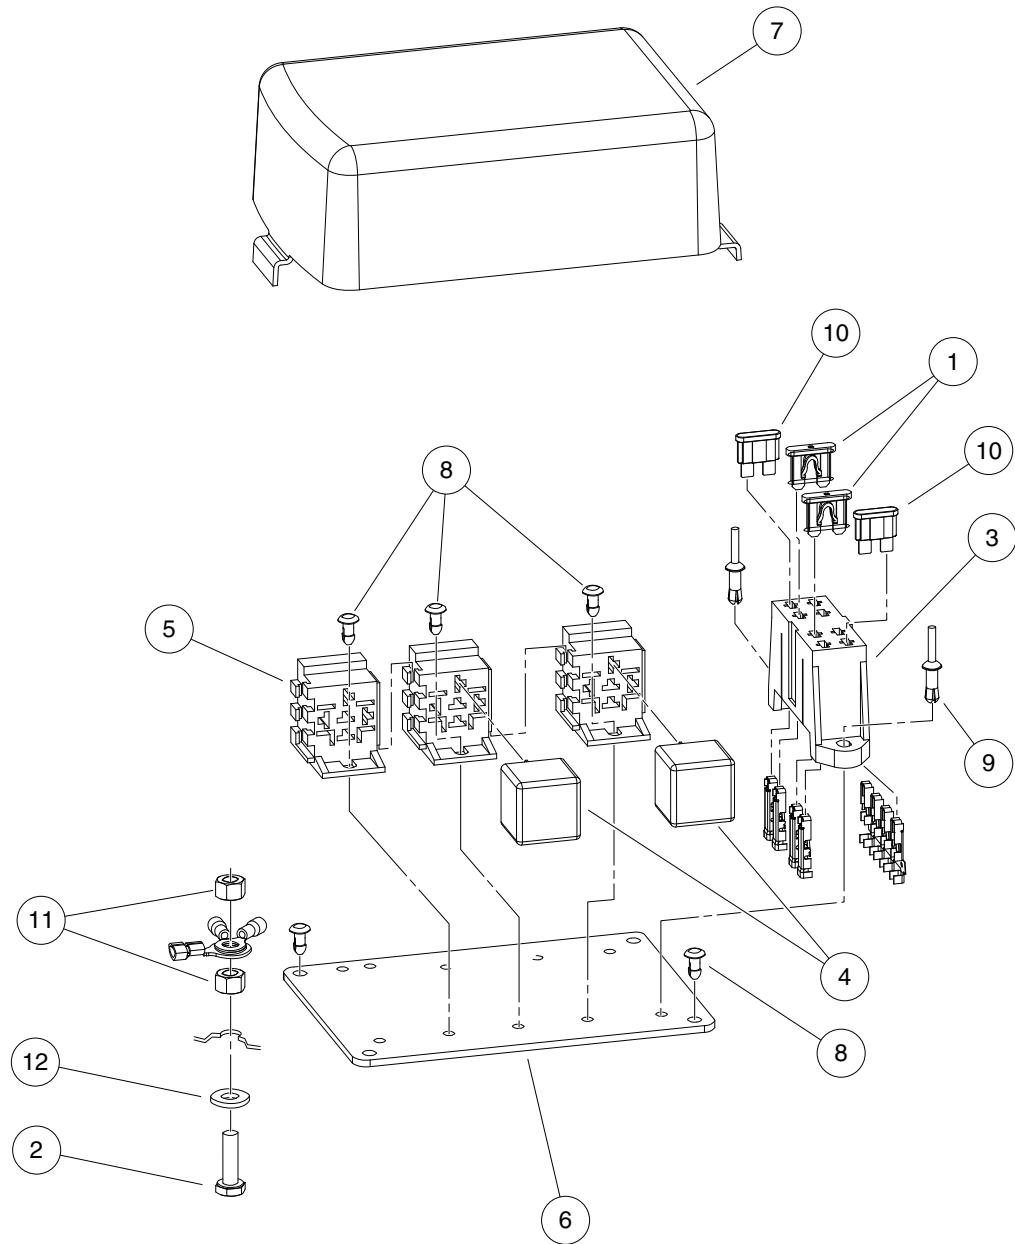7**G****D**

000076-001

ELECTRICAL COMPONENT BOX, GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012295</u>	Fuse, 10-Amp	2
2	<u>1015521</u>	Screw, 1/4-20 X .88 Hex Hd Cap	1
3	<u>1015741</u>	Fuse Block	1
4	<u>102420201</u>	Relay, Mini ISO, SPDT	2
5	****	Connector, Relay	3
6	<u>102420401</u>	Plate, Electrical	1
7	<u>102420501</u>	Cover, Electrical	1
8	<u>102447901</u>	Fastener, Push-in	7
9	<u>102448001</u>	Rivet, Drive	2
10	<u>102492201</u>	Fuse, 25-Amp	2
11	<u>1108</u>	Locknut, 1/4-20 Dimpled	2
12	<u>332</u>	Washer, 1/4 Type A Narrow Flat	1
		**** Special order item available upon request.	

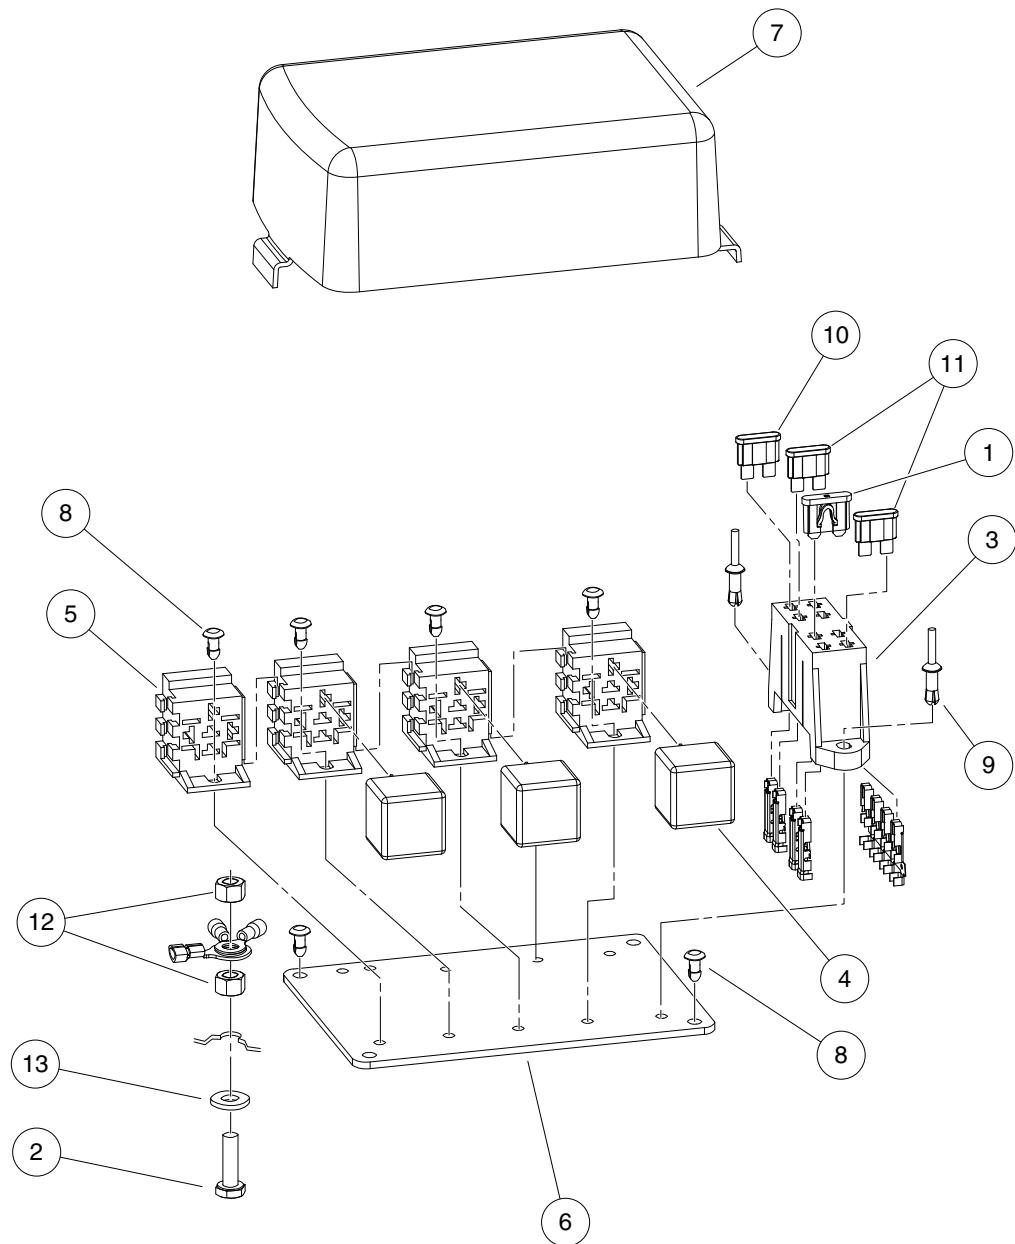7**G****D**

000076-002

ELECTRICAL COMPONENT BOX, DIESEL VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012295</u>	Fuse, 10-Amp	1
2	<u>1015521</u>	Screw, 1/4-20 X .88 Hex Hd Cap	1
3	<u>1015741</u>	Fuse Block	1
4	<u>102420201</u>	Relay, Mini ISO, SPDT	3
5	****	Connector, Relay	4
6	<u>102420401</u>	Plate, Electrical	1
7	<u>102420501</u>	Cover, Electrical	1
8	<u>102447901</u>	Fastener, Push-in	8
9	<u>102448001</u>	Rivet, Drive	2
10	<u>102492201</u>	Fuse, 25-Amp	1
11	<u>102492301</u>	Fuse, 30-Amp	2
12	<u>1108</u>	Locknut, 1/4-20 Dimpled	2
13	<u>332</u>	Washer, 1/4 Type A Narrow Flat	1

**** Special order item available upon request.

7

G


D

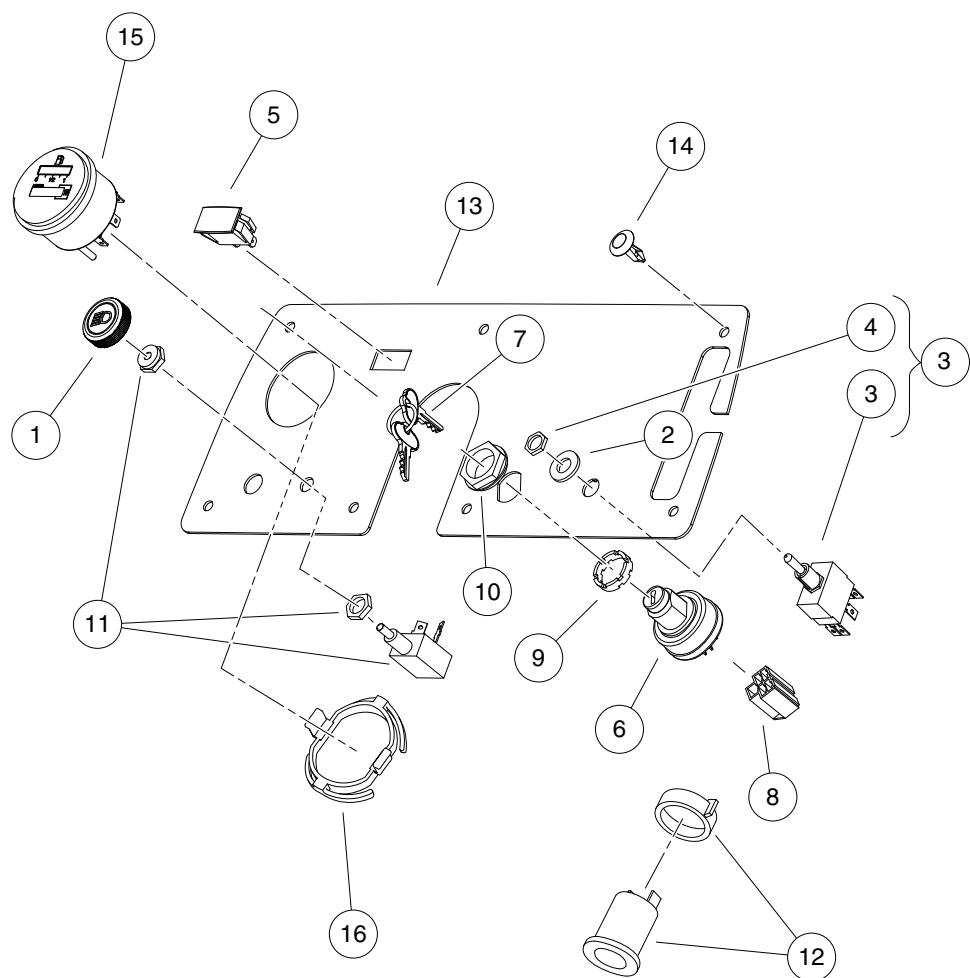7**G****D**

000080-003

ELECTRICAL COMPONENTS, INSTRUMENT PANEL, GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	7
1	<u>1013857</u>	Knob, Light Switch	1
2	<u>1014557</u>	Washer, 7/16 Flat	1
3	<u>1015636</u>	Toggle Switch (includes item 4)	1
4	N/A	Nut, Toggle Switch	1
5	<u>1016630</u>	Light, Oil	1
6	<u>102044702</u>	Key Switch 12v Key Start	1
7	102044801	Key Set	1
8	N/A	Connector, 5 Way, Female	1
9	<u>102051601</u>	Spacer, Keyswitch	1
10	<u>102051701</u>	Nut, Key Switch	1
11	<u>102051901</u>	Switch, Light	1
12	<u>102198001</u>	Receptacle, Accessory	1
13	<u>102739901</u>	Panel, Instrument - Gas	1
14	<u>102967901</u>	Rivet, Removable, Tuflok 1/4"	7
15	<u>103348101</u>	Gauge Fuel-hour Sep Gnd	1
16	<u>103348201</u>	Clip, Meter, Round	1

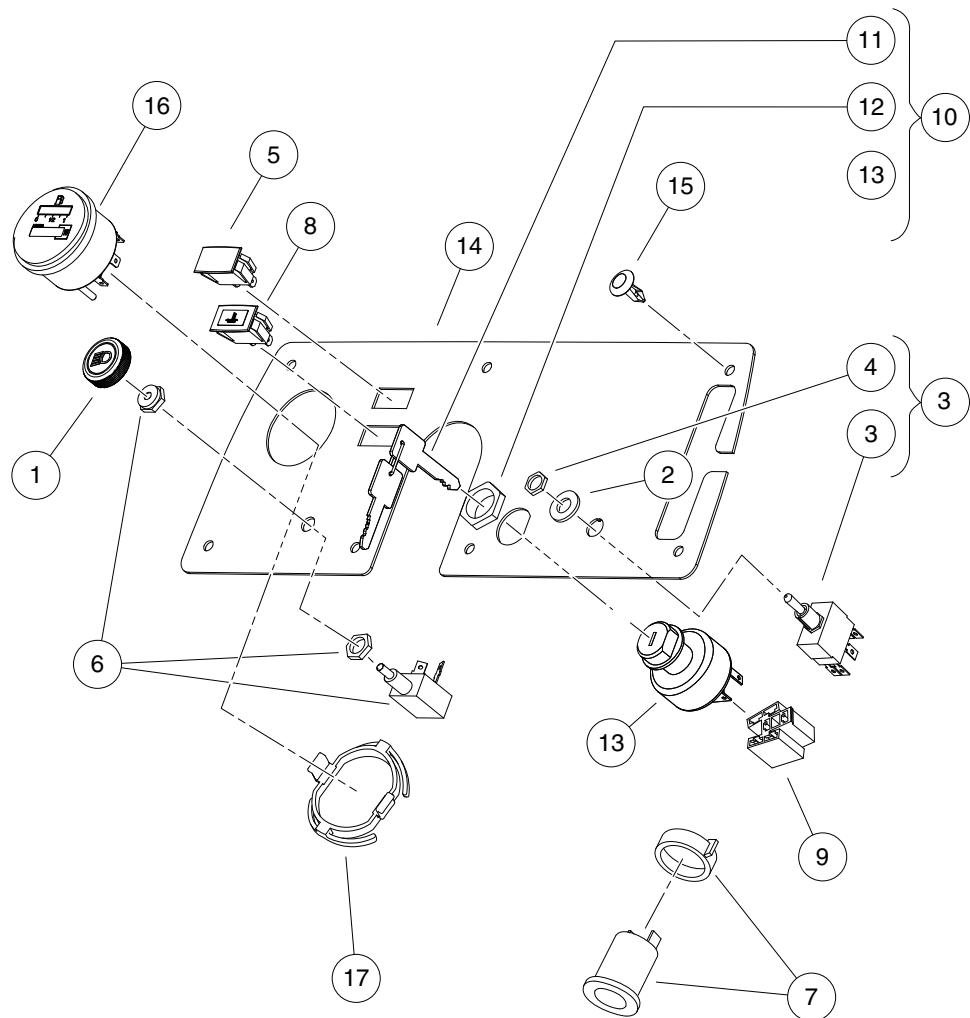7**G****D**

000080-004


ELECTRICAL COMPONENTS, INSTRUMENT PANEL, DIESEL VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013857</u>	Knob, Light Switch	1
2	<u>1014557</u>	Washer, 7/16 Flat	1
3	<u>1015636</u>	Toggle Switch (includes item 4)	1
4	N/A	Nut, Toggle Switch	1
5	<u>1016630</u>	Light, Oil	1
6	<u>102051901</u>	Switch, Light	1
7	<u>102198001</u>	Receptacle, Accessory	1
8	<u>102375401</u>	Light, Indicator, Coolant Temp	1
9	N/A	Connector, 6 Way, 56 Series	1
10	<u>102457301</u>	Switch, Key (includes items 11 through 13)	1
11	<u>102731701</u>	Key Set (1 pair)	1
12	N/A	Nut, Key Switch	1
13	N/A	Switch, Key without Nut	1
14	<u>102739902</u>	Panel, Instrument - Diesel	1
15	<u>102967901</u>	Rivet, Removable, Tuflok 1/4"	7
16	<u>103348101</u>	Gauge Fuel-hour Sep Gnd	1
17	<u>103348201</u>	Clip, Meter, Round	1

7

G


D

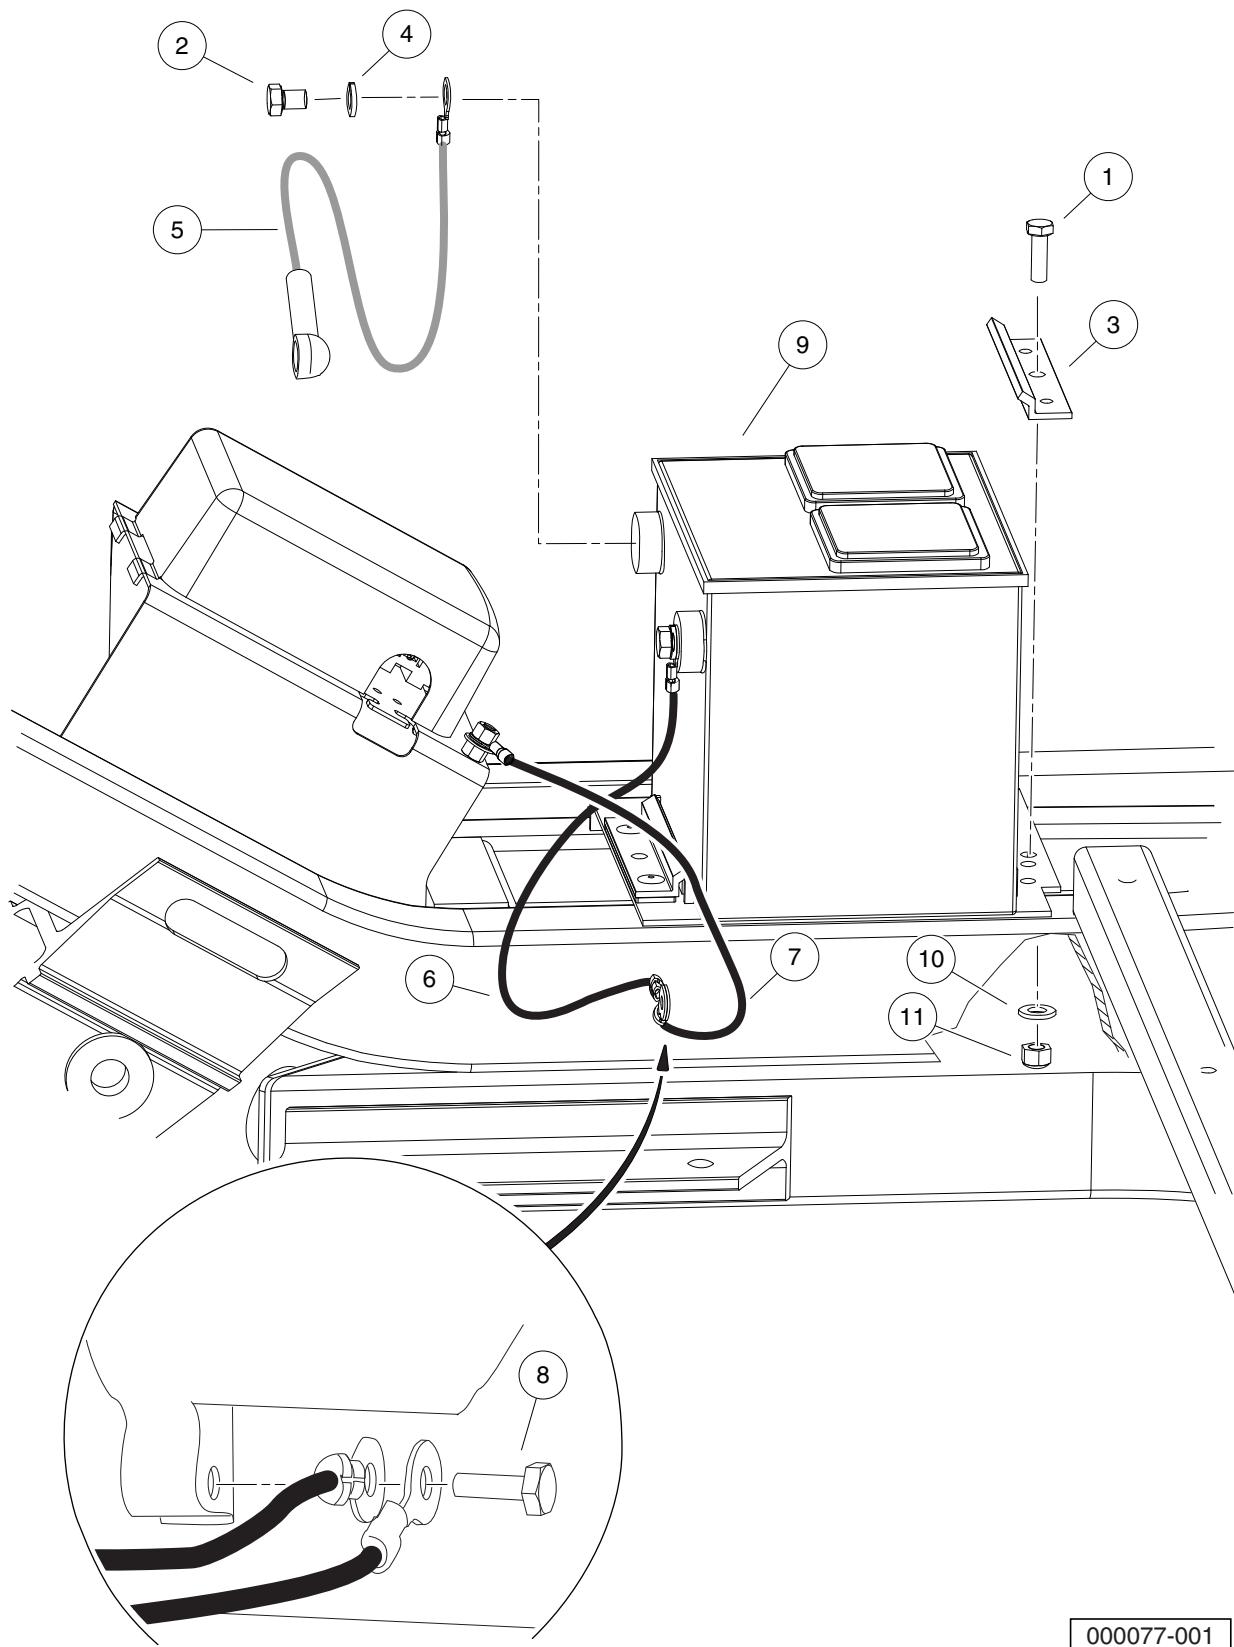

000077-001

BATTERY – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	7
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1
2	<u>1014375</u>	Screw, 3/8-16 X 0.50 Stainless Steel Hex-Head	2
3	<u>101898001</u>	Clamp, Battery	1
4	<u>102355301</u>	Lockwasher, #10 Split Ss	2
5	<u>102442201</u>	Asm, #6 Red Wire	1
6	<u>102442301</u>	Asm, #6 Blk Wire	1
7	<u>102442401</u>	Asm, #6 Blk Wire	1
8	<u>102490301</u>	Bolt, M6 X 1 X 16 Loctite	1
9	N/A	Battery, Start, 12v	1
10	<u>1241</u>	Washer, 5/16 Type A Flat	1
11	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1

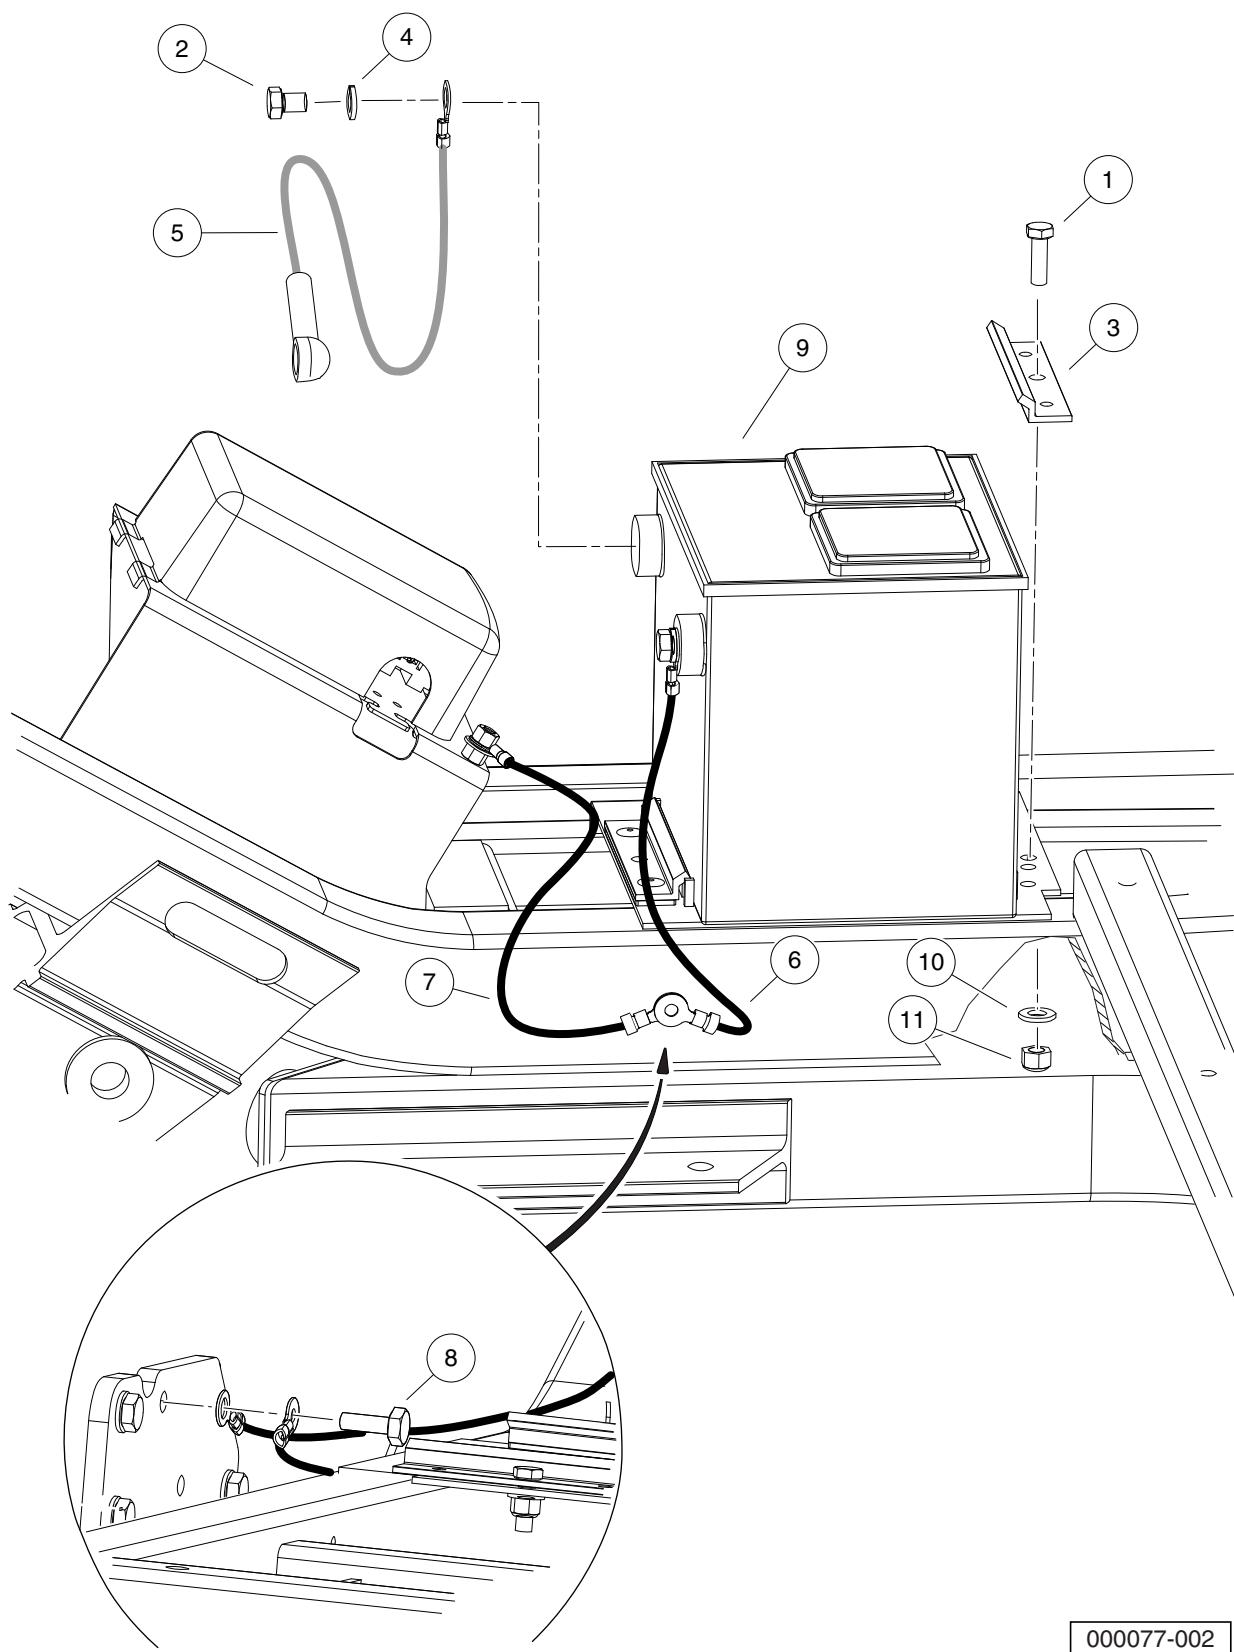7**G****D**

000077-002

BATTERY – DIESEL VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1
2	<u>1014375</u>	Screw, 3/8-16 X 0.50 Stainless Steel Hex-Head	2
3	<u>101898001</u>	Clamp, Battery	1
4	<u>102355301</u>	Lockwasher, #10 Split Ss	2
5	<u>102442201</u>	Asm, #6 Red Wire	1
6	<u>102448401</u>	Wire Asm, #6 Blk, Awd, 350	1
7	<u>102448501</u>	Wire Asm, #6 Blk, Awd, 325	1
8	<u>102498201</u>	Bolt, M10 X 1.25 X 25 Loctite	1
9	N/A	Battery, Start, 12v	1
10	<u>1241</u>	Washer, 5/16 Type A Flat	1
11	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1

7

G

D

7


G

D

DIESEL ENGINE – CLOSED BREATHER

D

D

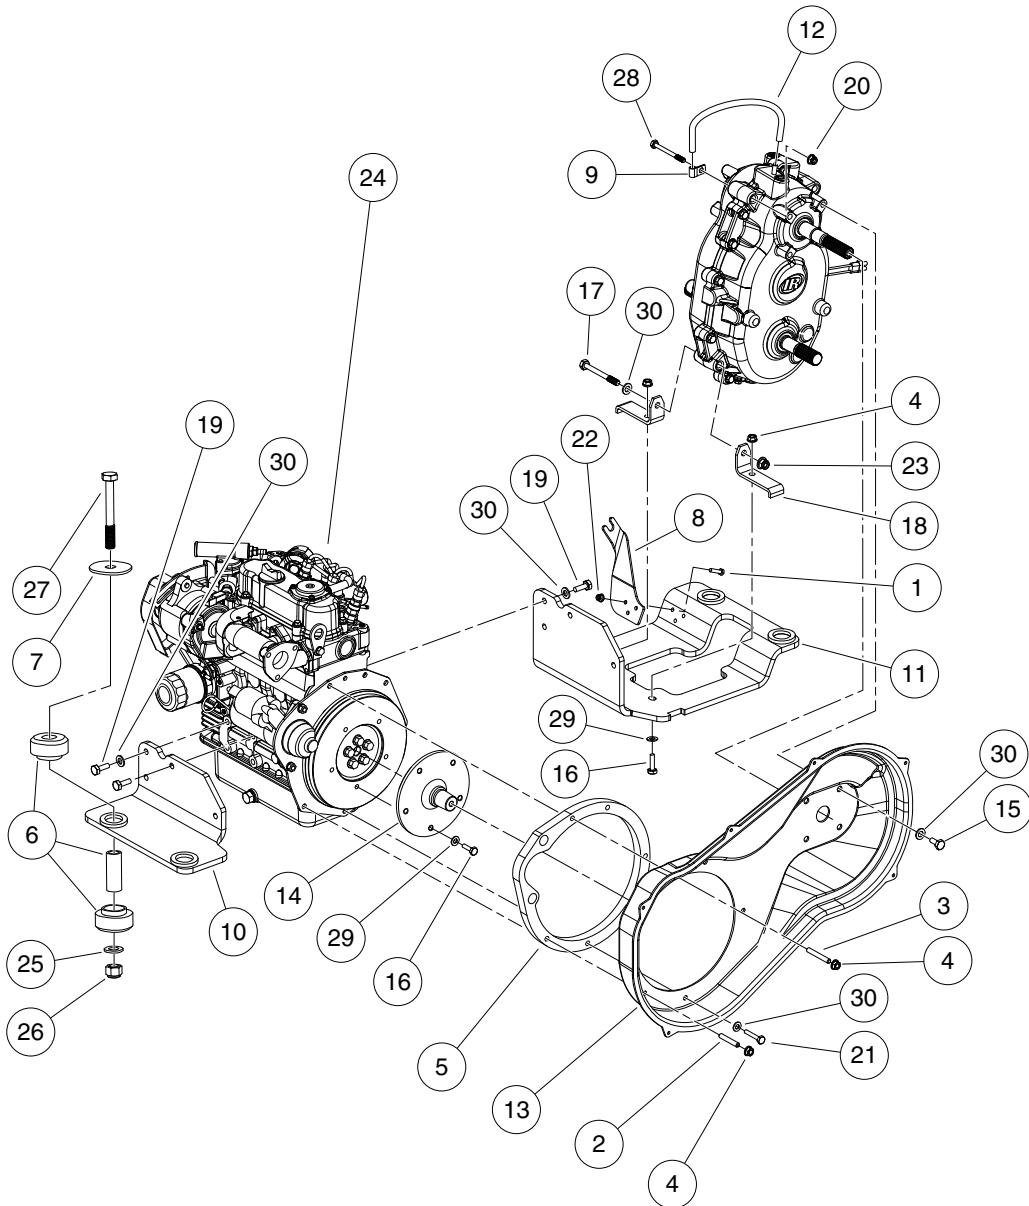


000025-002

KUBOTA D722 DIESEL ENGINE MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012769</u>	Screw, M6-1.00 X 25mm Hex Cap	3
2	<u>101833101</u>	Stud, M8-1.25 X 50 mm Two-Ended	1
3	<u>101833201</u>	Stud, M8-1.25 X 60mm Two-Ended	1
4	<u>102298401</u>	Nut,m8,all Metal Lock	7
5	<u>102370101</u>	Spacer, Engine, Diesel	1
6	<u>102370501</u>	Isolator Ring and Bushing	4
7	<u>102370601</u>	Washer, Snubbing, Ring N Bush	4
8	<u>102382401</u>	Bracket, FNR Trans Cable	1
9	<u>102410603</u>	P-Clamp, Insulated .312 In	1
10	<u>102414701</u>	Plate, Engine Mounting, Weld, Left-Hand	1
11	<u>102414801</u>	Plate, Engine Mounting, Weld, Right-Hand	1
12	<u>102462301</u>	Hose, Vent, Transmission	1
13	<u>102462501</u>	Cover, CVT Inner, Diesel	1
14	<u>102465901</u>	Shaft, CVT Adapter	1
15	<u>102490101</u>	Bolt, M10 X 1.5 X 20 Loctite	4
16	<u>102490201</u>	Bolt, M8 X 1.25 X 25 Loctite	7
17	<u>102490501</u>	Bolt, M10 X 1.5 X 100 Loctite	1
18	<u>102494401</u>	Bracket, Transmission Mounting	2
19	<u>102498201</u>	Bolt, M10 X 1.25 X 25 Loctite	8
20	<u>102618601</u>	Lock Nut, Flg M8 X 1.25 Nylon	1
21	<u>102621301</u>	Bolt, M8 X 1.25 X 40 with Loctite	3
22	<u>102621501</u>	Nut Flg, M6 X 1.0 Nylon	3
23	<u>102670701</u>	Nut Flg M10 X 1.5 Nylon	1
24	<u>102934601</u>	Engine, Kubota, D722, with Closed Breather, 60a	1
25	<u>96701412</u>	Washer, M12 Hard	4
26	<u>96704622</u>	Locknut, M12x1.75 Nylon Insert	4
27	<u>96704721</u>	Bolt, M12 X 1.75 X 90	4
28	<u>96718978</u>	Bolt, M8 X 1.25 X 80	1
29	<u>96741038</u>	Washer, M8 Hard	10
30	<u>96741046</u>	Washer, M10 Hard	12

8

D

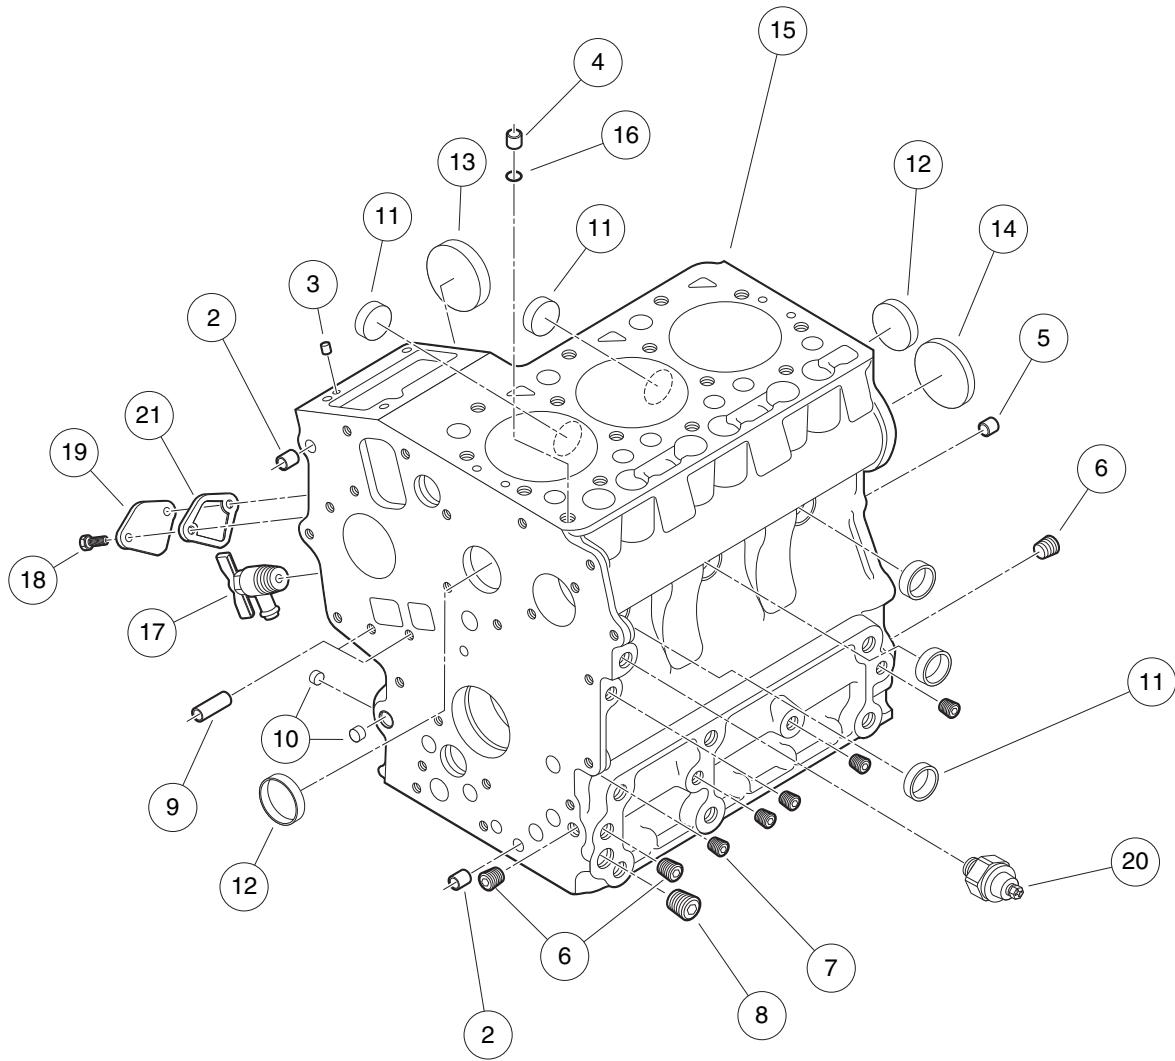

2 - 15
1


000039-001

CRANKCASE

8

D

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102600001</u>	Engine Block (includes items 2 through 15)	1
2	<u>102600101</u>	Pin, Pipe, Dia 8 X 14	2
3	<u>102600201</u>	Pin, Straight, Dia 5 X 10	2
4	<u>102600401</u>	Pin, Pipe, Dia 7 X 14	1
5	<u>102600601</u>	Pin, Straight, Dia 8 X 16	2
6	<u>102600701</u>	Plug, 1/8"	3
7	<u>102600801</u>	Plug, 3/32"	5
8	<u>102601001</u>	Plug, 1/4"	1
9	<u>102601301</u>	Pin, Pipe, Dia 8 X 11	2
10	<u>102726201</u>	Cap, Sealing, Small	3
11	<u>102726301</u>	Cap, Sealing, Med	5
12	<u>102726401</u>	Cap, Sealing, Large	2
13	<u>102726501</u>	Cover, Fuel Camshaft	1
14	<u>102726601</u>	Plug, Expansion	1
15	N/A	Block, Engine	1
16	<u>102600301</u>	O Ring, 8 X 7	1
17	<u>102601401</u>	Cock, Drain	1
18	<u>102631601</u>	Bolt, M6 X 1 X 20	2
19	N/A	Plate, Engine Block	1
20	<u>102730801</u>	Switch, Oil Pressure	1
21	<u>102732601</u>	Gasket, Fuel Pump, D722	1

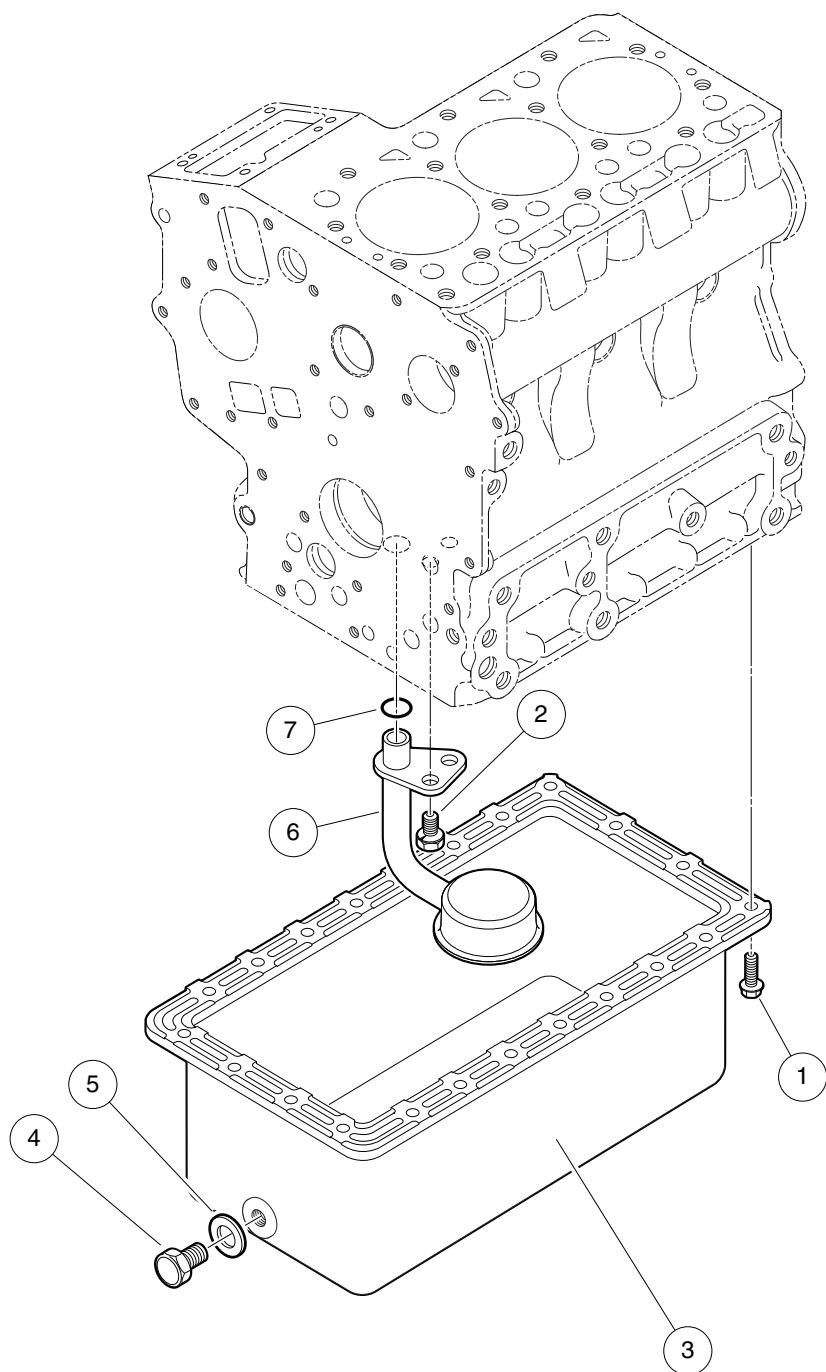


000040-001

OIL PAN**8**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102605101</u>	Bolt, M6 X 1 X 14	22
2	<u>102606901</u>	Bolt, M8 X 1.25 X 15	1
3	<u>102607001</u>	Oil Pan	1
4	<u>102607201</u>	Plug, Drain, M12 X 14	1
5	<u>102607301</u>	Gasket, 20 X 13	1
6	<u>102607401</u>	Filter, Oil, Pick Up	1
7	<u>102654601</u>	O Ring, 20 X 17	1

D

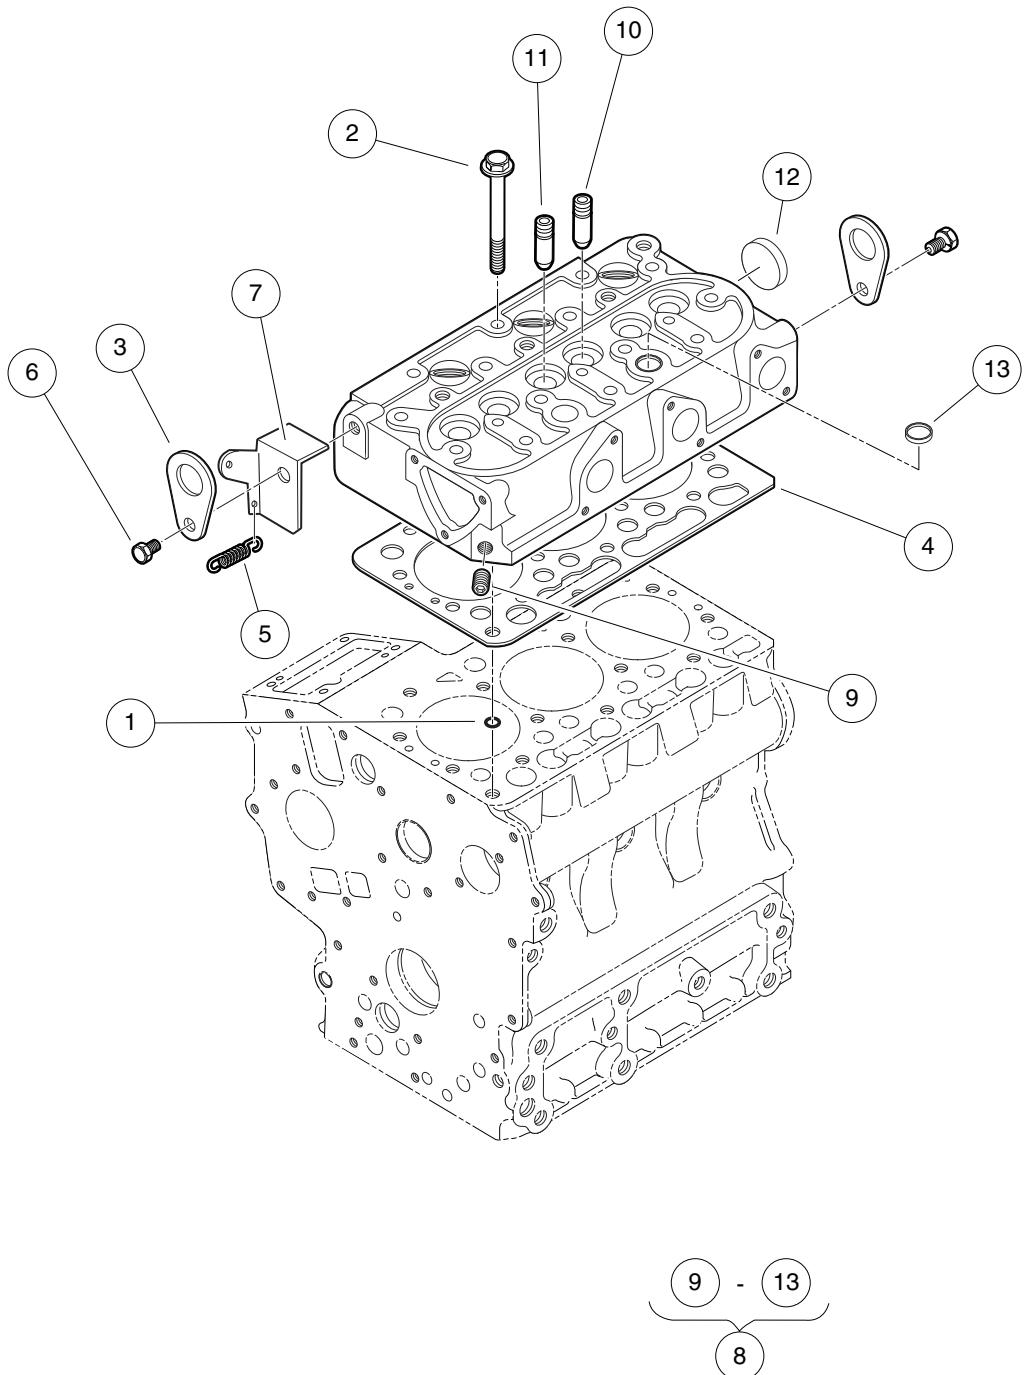

9 - 13
8


000041-002

CYLINDER HEAD

8

D

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102600301</u>	O Ring, 8 X 7	1
2	<u>102652801</u>	Bolt, Cylinder Head	14
3	<u>102653901</u>	Hook, Engine	2
4	<u>102654101</u>	Gasket, Cylinder Head	1
5	<u>102701001</u>	Spring, Start	1
6	<u>102726701</u>	Bolt, Engine Hook	2
7	<u>102727101</u>	Stay, Cylinder Head	1
8	<u>102798001</u>	Head, Cylinder, Complete (includes items 9 through 13)	1
9	<u>102600801</u>	Plug, 3/32"	1
10	<u>102653401</u>	Guide, Exhaust Valve	3
11	<u>102653501</u>	Guide, Inlet Valve	3
12	<u>102726901</u>	Cap, Sealing, Head	1
13	<u>102727001</u>	Cap, Sealing, Head, Top	2

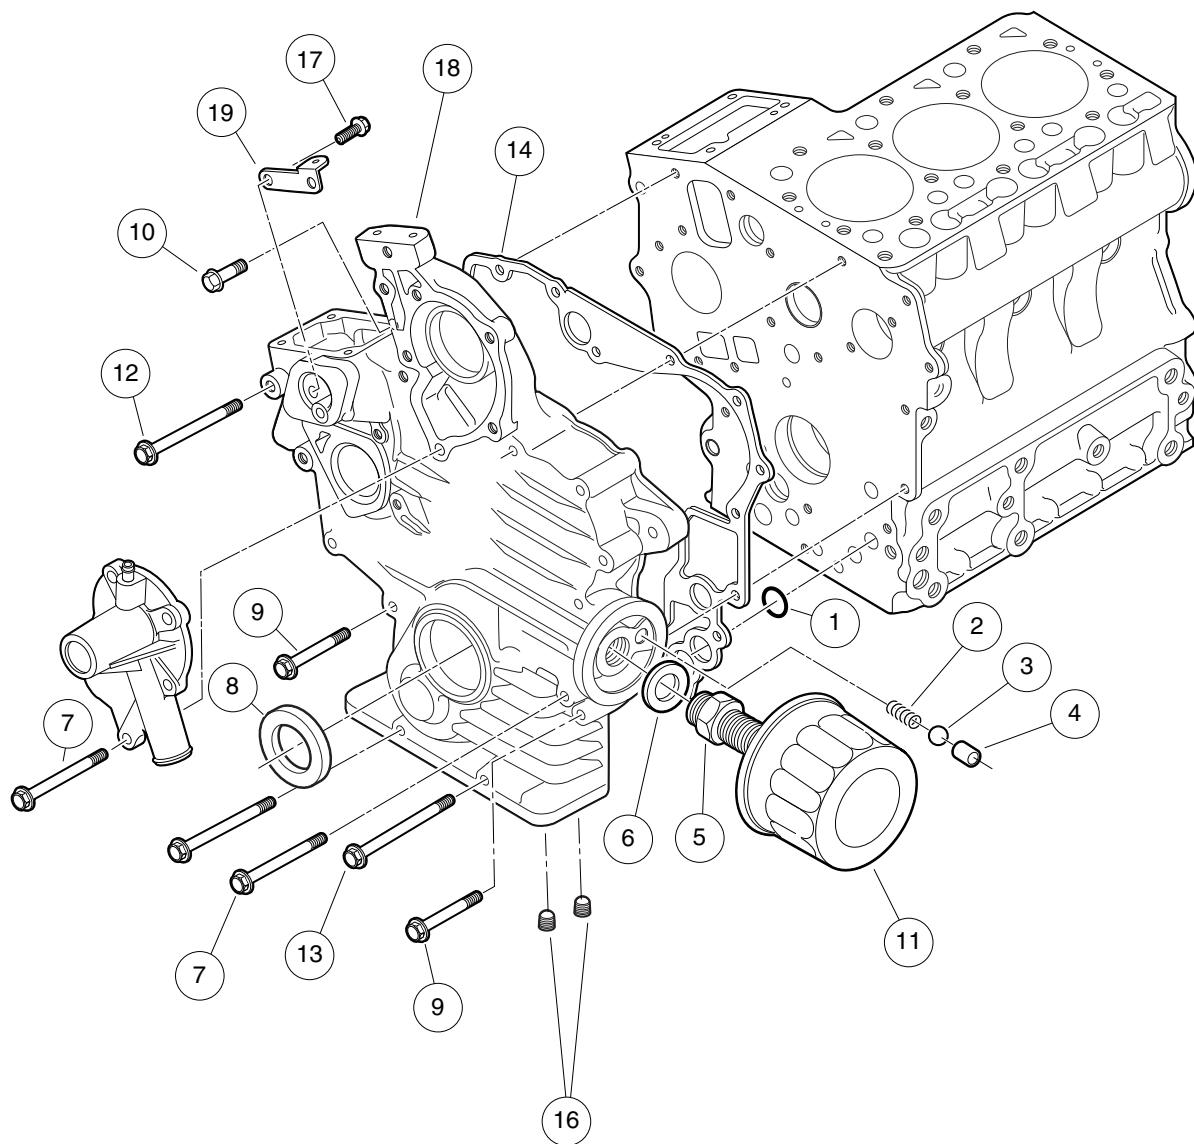


000042-002

GEAR CASE

8

D

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102601801</u>	O Ring, 18 X 13	3
2	<u>102601901</u>	Spring, Valve	1
3	<u>102602001</u>	Ball, Valve	1
4	<u>102602101</u>	Seat, Valve	1
5	<u>102602301</u>	Joint, Pipe	1
6	<u>102602401</u>	Washer, Plain, Special	1
7	<u>102602601</u>	Bolt, M6 X 1 X 60	2
8	<u>102602701</u>	Seal, Oil	1
9	<u>102602801</u>	Bolt, D722, Front Case	9
10	<u>102654301</u>	Bolt, D722 Intake Manfld Lower	1
11	<u>102703301</u>	Filter, Engine Oil, D722	1
12	<u>102727401</u>	Bolt, Gearcase, Top	2
13	<u>102727501</u>	Bolt, Gearcase, Lower	1
14	<u>102729301</u>	Gasket, Gearcase, D722	1
15	N/A	Case, Gear (includes items 16 through 19)	1
16	<u>102601001</u>	Plug, 1/4"	2
17	<u>102727601</u>	Screw, Breather	2
18	N/A	Case, Gear	1
19	<u>102798201</u>	Stay, Spring	1

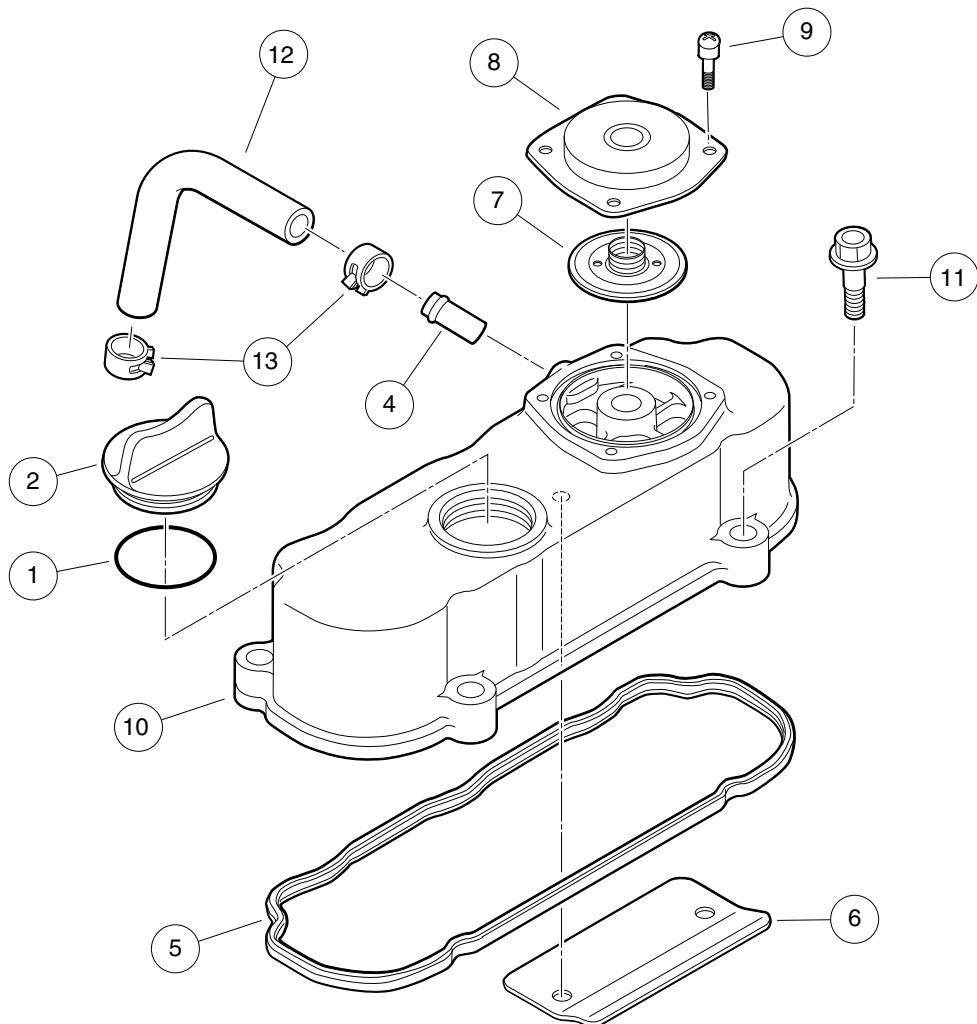


000181-001

HEAD COVER

8

D

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102644001</u>	O Ring, 30 X 36	1
2	<u>102644101</u>	Plug, Oil Filler	1
3	<u>102798401</u>	Assembly, Cylinder Head Cover (includes items 4 through 10)	1
4	<u>102633301</u>	Pipe, Water Return, D722	1
5	<u>102798501</u>	Gasket, Cylinder Head Cover	1
6	<u>102798601</u>	Shield, Breather	1
7	<u>102799001</u>	Valve, Breather	1
8	<u>102799101</u>	Cover, Breather	1
9	<u>102799201</u>	Screw, Breather	4
10	N/A	Cover, Cylinder Head	1
11	<u>102798701</u>	Bolt, Cylinder Head Cover	4
12	<u>102798801</u>	Tube, Breather	1
13	<u>102798901</u>	Clamp, Breather Tube	2

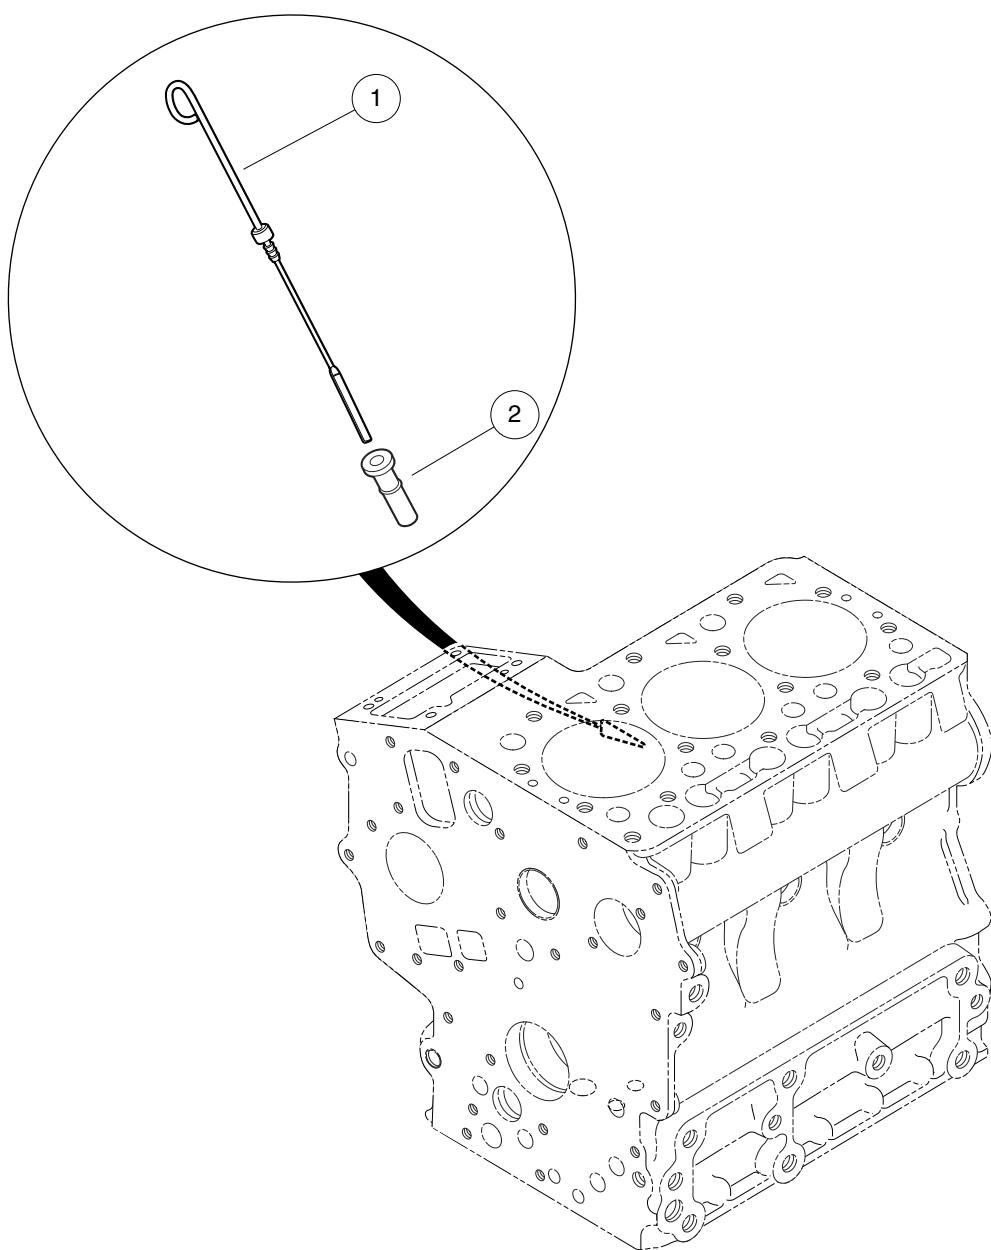


000044-002

DIPSTICK AND GUIDE

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>102606701</u>	Gauge, Oil	1
2	<u>102727701</u>	Guide, Oil Gauge	1

8

D

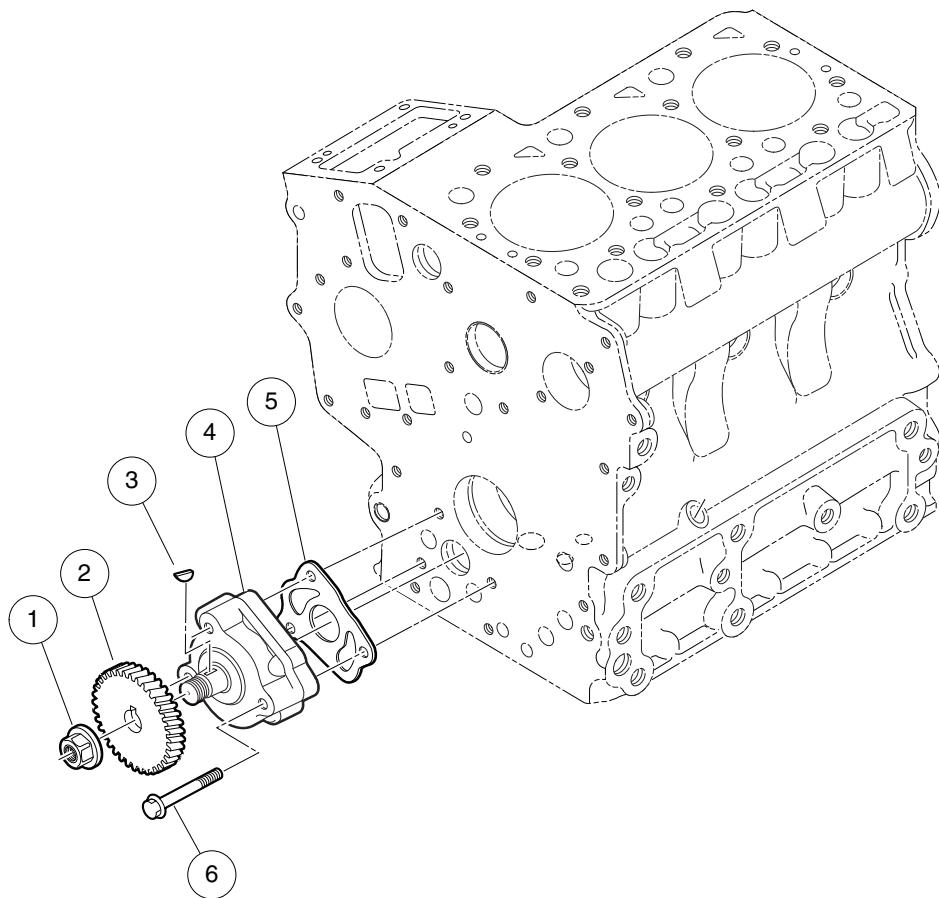


000045-001

OIL PUMP

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>102606201</u>	1 2 3 4 Nut, Flange, D722 Oil Pump	1
2	<u>102606301</u>	Gear, Oil Pump Drive	1
3	<u>102606401</u>	Key, Feather, 8x4	1
4	<u>102606501</u>	Assy, Pump, Oil	1
5	<u>102606601</u>	Gasket, Oil Pump	1
6	<u>102727901</u>	Bolt, Oil Pump	3

8

D

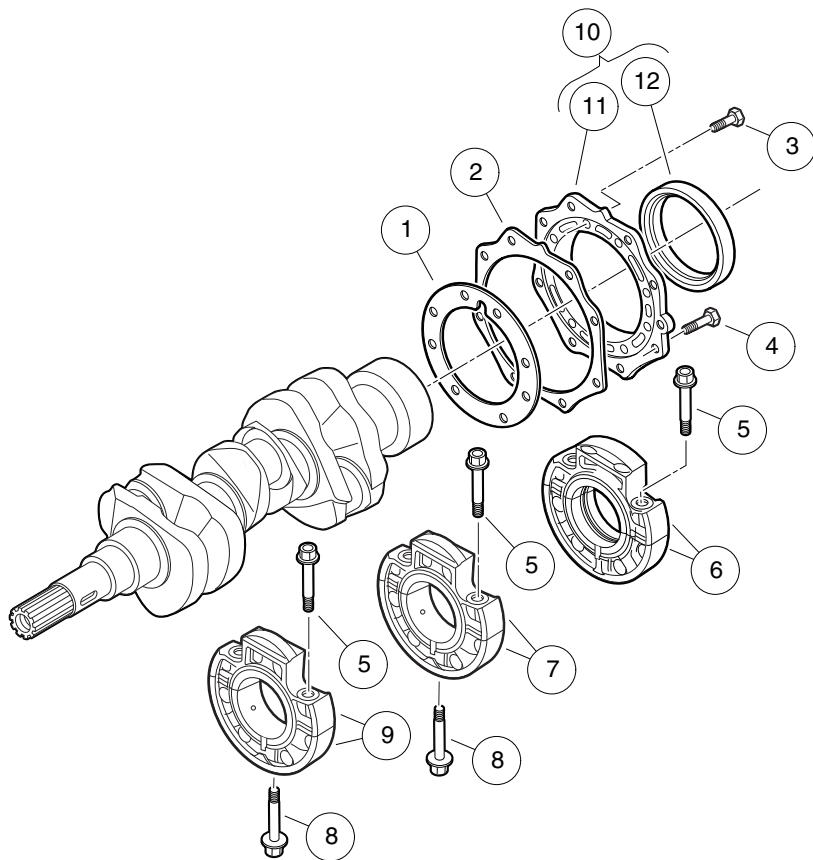


000046-001

MAIN BEARING CASE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102608201</u>	Gasket, Bearing Case	1
2	<u>102608301</u>	Gasket, Cover	1
3	<u>102608601</u>	Bolt, M6 X 1 X 20	8
4	<u>102608701</u>	Bolt, M6 X 1 X 22	8
5	<u>102608901</u>	Bolt, Bearing Case, Top	6
6	<u>102609101</u>	Assy Case, Main Brg, First	1
7	<u>102609301</u>	Assy Case, Main Brg, Sec	1
8	<u>102609401</u>	Bolt, Bearing Case, Bottom	2
9	<u>102609601</u>	Assy Case, Main Brg, Third	1
10	<u>102728001</u>	Assy, Cover, Bearing Case (includes items 11 and 12)	1
11	<u>102608401</u>	Cover, Bearing Case	1
12	<u>102608501</u>	Seal, Oil	1

8

D

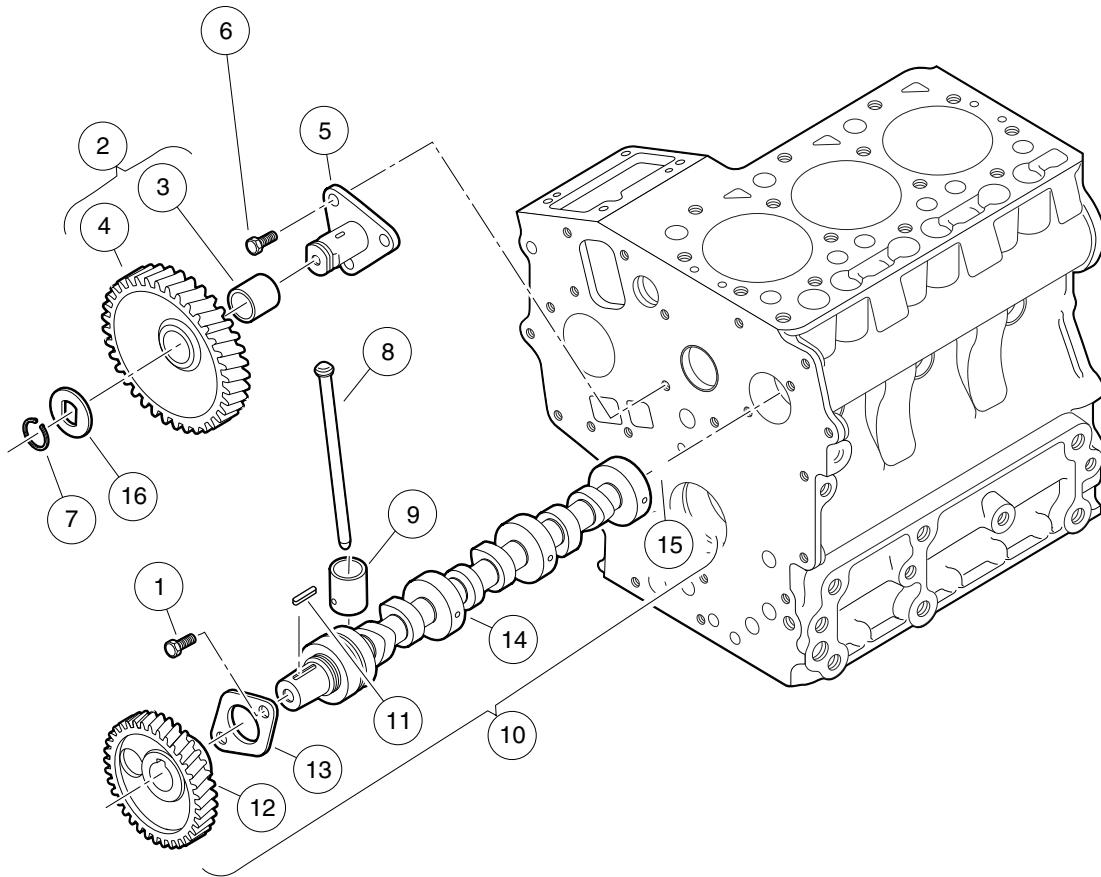


000047-002

CAMSHAFT AND IDLE GEAR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102604201</u>	Bolt, D722, Cam End	2
2	<u>102604901</u>	Gear, Idle (includes items 3 and 4)	1
3	<u>102603201</u>	Bushing, D722 Idle Gear	1
4	N/A	Gear, Idle	1
5	<u>102605001</u>	Shaft, Idle Gear	1
6	<u>102605101</u>	Bolt, M6 X 1 X 14	3
7	<u>102605301</u>	Ring, Snap	1
8	<u>102605401</u>	Push Rod	6
9	<u>102605501</u>	Tappet	6
10	<u>102605801</u>	Assy Camshaft, Long (includes items 11 through 15)	1
11	<u>102605601</u>	Key, Feather, Long Camshaft	1
12	<u>102605901</u>	Gear, Cam	1
13	102606001	Stopper, Camshaft	1
14	N/A	Camshaft	1
15	<u>102799401</u>	Ball, Check	1
16	<u>102654401</u>	Collar, Idle Gear	1

8

D

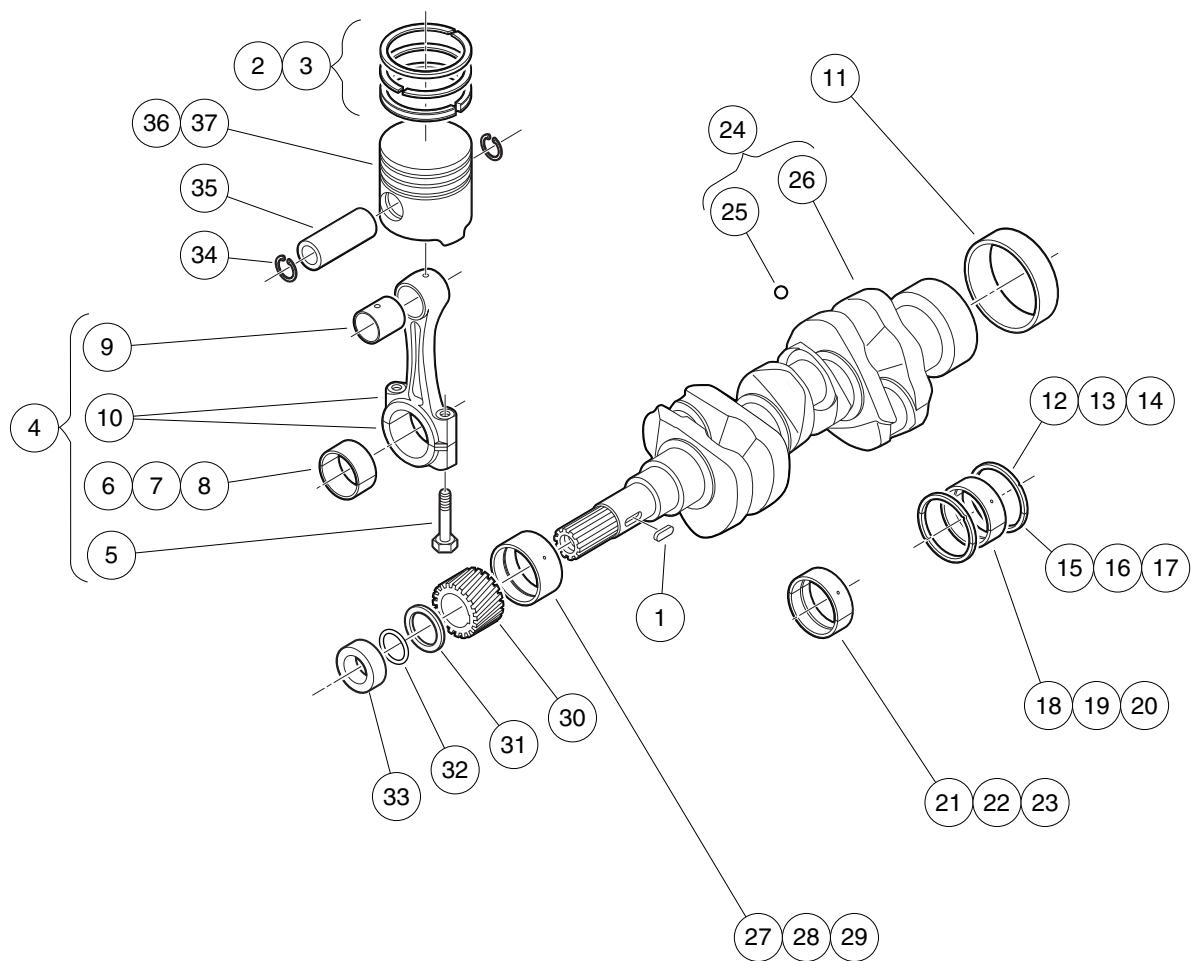


000048-002

PISTON AND CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102604401</u>	Key, Feather, Short Camshaft	1
2	<u>102607601</u>	Assy Piston Ring, D722 Std	3
3	<u>102607602</u>	Assy Piston Ring, D722 +.025	3
4	<u>102607801</u>	Assy, Connecting Rod (includes items 5 through 10)	3
5	<u>102607901</u>	Bolt, Connecting Rod	6
6	<u>102630701</u>	Metal, Crank, Rod, D722, Std	3
7	N/A	Metal, Crank, Rod, D722, .020	3
8	<u>102630703</u>	Metal, Crank, Rod, D722, .040	3
9	<u>102732201</u>	Bushing, Piston Pin, D722	3
10	N/A	Rod, Connecting	1
11	<u>102608101</u>	Sleeve, Crankshaft	1
12	<u>102608801</u>	Metal,crank, O Side, Std	2
13	N/A	Metal,crank, O Side, +.020	2
14	<u>102608803</u>	Metal,crank, O Side, +.040	2
15	<u>102608804</u>	Metal,crank, I Side, Std	2
16	N/A	Metal,crank, I Side, +.020	2
17	<u>102608806</u>	Metal,crank, I Side, +.040	2
18	<u>102609001</u>	Metal, Crank, Main, Rear Std	1
19	N/A	Metal, Crank, Main, Rear -.020	1
20	<u>102609003</u>	Metal, Crank, Main, Rear -.040	1
21	<u>102609801</u>	Metal, Crank, Main, Mid Std	4
22	N/A	Metal, Crank, Main, Mid +.020	2
23	<u>102609803</u>	Metal, Crank, Main, Mid +.040	2
24	<u>102610001</u>	Crankshaft (includes items 25 and 26)	1
25	<u>102608001</u>	Ball, Crankshaft	3
26	N/A	Crankshaft	1
27	<u>102630001</u>	Metal, Crank, D722, Frnt, Std	1
28	N/A	Metal, Crank, 722, Frnt, -.020	1
29	<u>102630003</u>	Metal, Crank, 722, Frnt, -.040	1
30	<u>102630101</u>	Gear, Crank	1
31	<u>102630201</u>	Slinger, Oil	1
32	<u>102630301</u>	O Ring, 23 X 26	1
33	<u>102630401</u>	Collar, Crankshaft	1
34	<u>102630901</u>	Circlip, Piston Pin	6
35	<u>102631001</u>	Pin, Piston	3
36	<u>102728101</u>	Piston, D722, Std	3
37	<u>102728102</u>	Piston, D722, +0.25	3

8

D

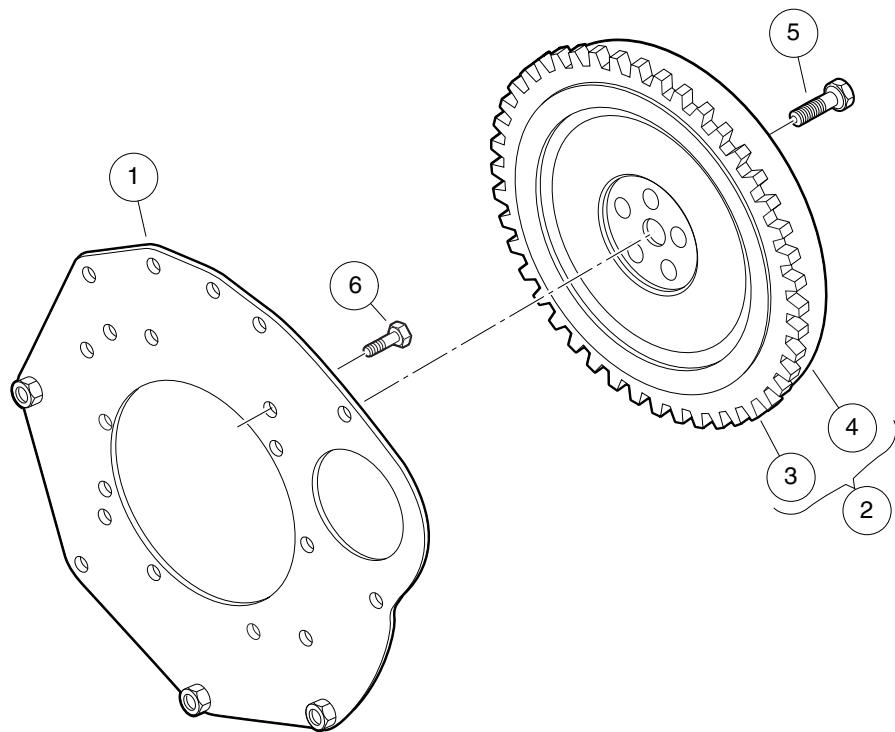


000049-001

FLYWHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102647501</u>	Plate, Rear End	1
2	<u>102647801</u>	Flywheel (includes items 3 and 4)	1
3	<u>102647901</u>	Gear, Ring, D722	1
4	N/A	Flywheel	1
5	<u>102648001</u>	Bolt, Flange Head, M10 X 1.5 X 25	5
6	<u>102728301</u>	Bolt, End Plate	10

8


D

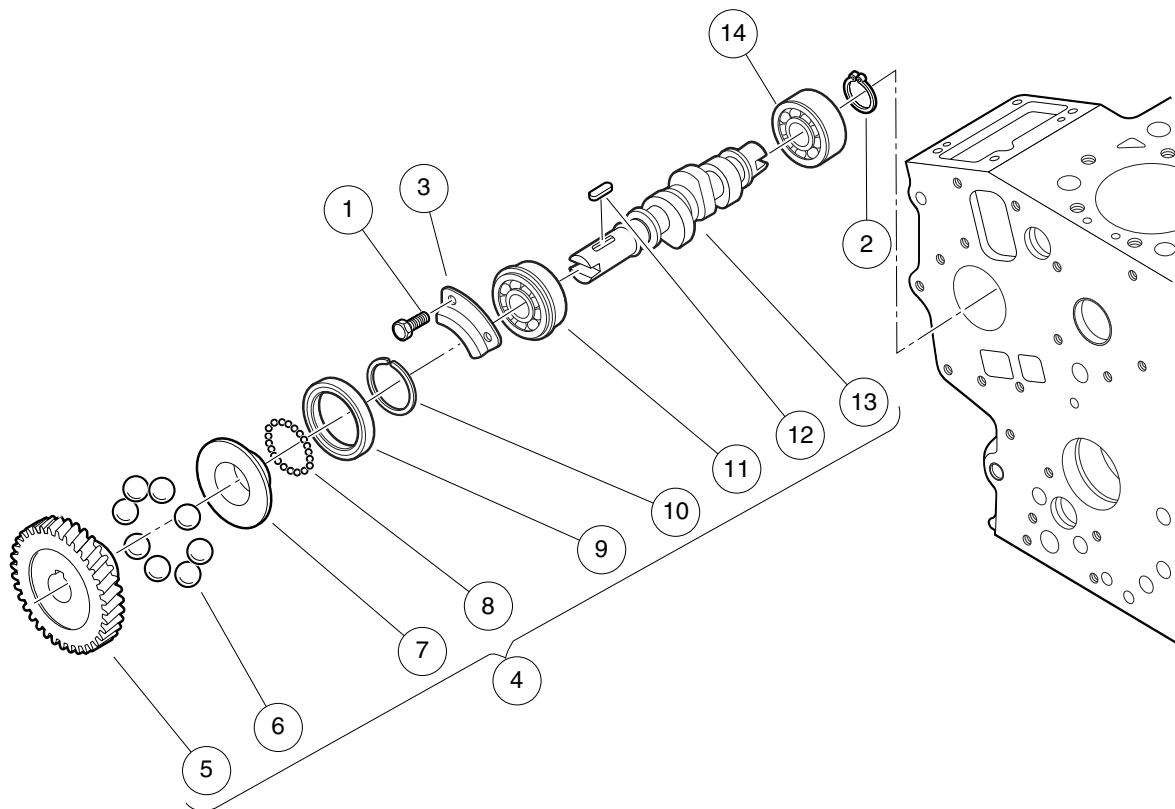

000050-001

SHAFT**8****D**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102604201</u>	Bolt, D722, Cam End	2
2	<u>102604701</u>	Circlip, External	1
3	N/A	Stopper, Fuel, C/shaft	1
4	<u>102728401</u>	Assy, Fuel Camshaft (includes items 5 through 13)	1
5	<u>102603601</u>	Gear, Injection Pump	1
6	<u>102603701</u>	Ball, Injection Pump	8
7	<u>102603801</u>	Sleeve, Governor	1
8	<u>102603901</u>	Ball, Governor	32
9	<u>102604001</u>	Case, Governor Ball	1
10	<u>102604101</u>	Circlip	1
11	<u>102604301</u>	Bearing, Ball	1
12	<u>102604401</u>	Key, Feather, Short Camshaft	1
13	<u>102604501</u>	Camshaft, Fuel, Short	1
14	<u>102728501</u>	Bearing, Ball	1

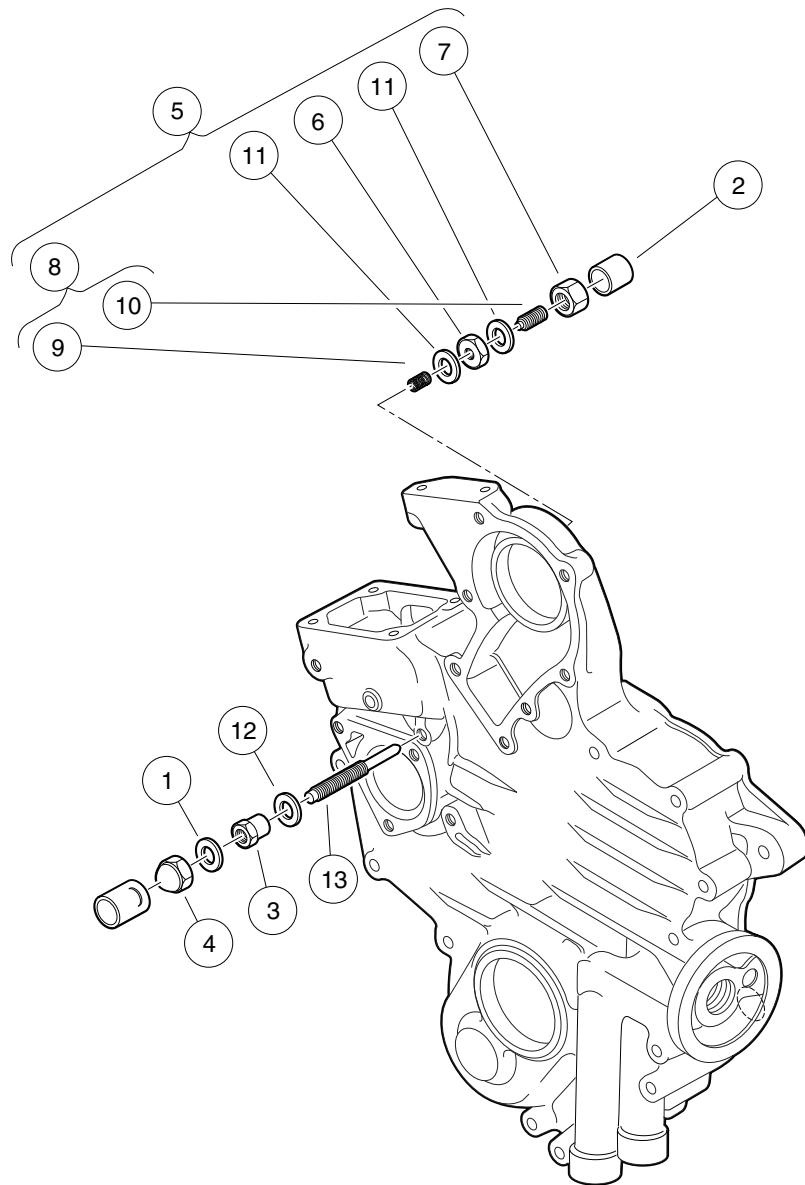8**D**


000051-002

IDLE APPARATUS

8

D

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102635301</u>	Gasket, 6 X 10	1
2	<u>102635701</u>	Cap, Bolt Assy	1
3	<u>102637001</u>	Nut, Lock, Special	1
4	<u>102637101</u>	Nut, Special	1
5	<u>102728601</u>	Assy, Idle Apparatus (includes items 6 through 11)	1
6	<u>102635501</u>	Nut, M8, D722 Idle App, Specl	1
7	<u>102635801</u>	Nut, M8, D722 Idle App	1
8	<u>102635901</u>	Assy, Bolt, Adjusting (includes items 9 and 10)	1
9	<u>102728701</u>	Spring, Idle Apparatus	1
10	N/A	Stud, Idle Adjustment	1
11	<u>102728801</u>	Gasket, Idle Apparatus, Rear	2
12	<u>102728901</u>	Gasket, Idle Apparatus, Front	1
13	<u>102799501</u>	Bolt, Idle Adjusting	1

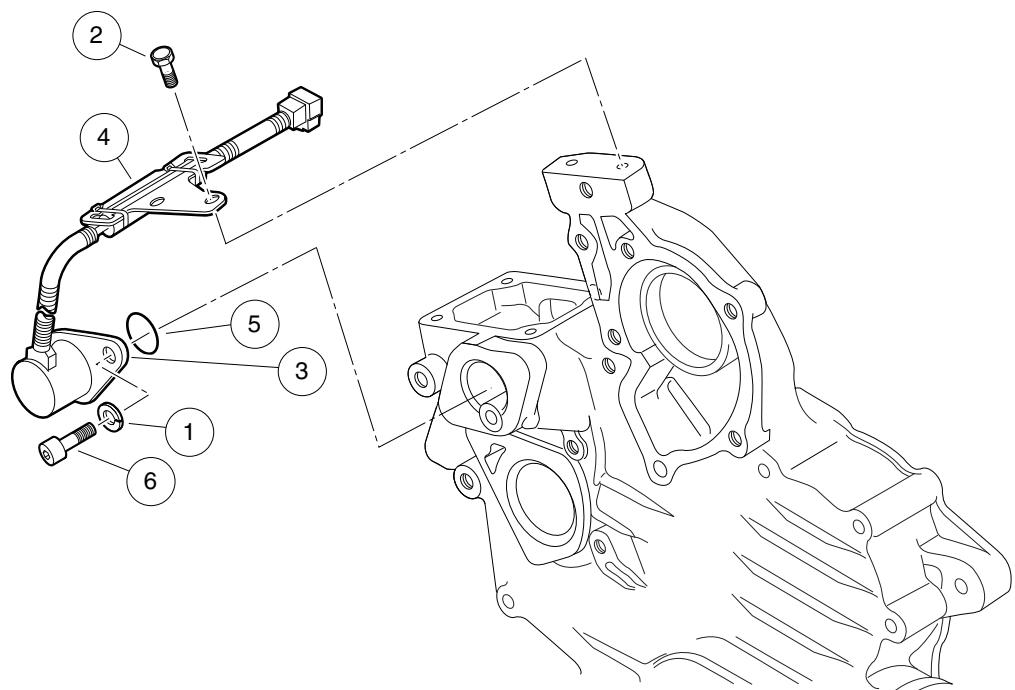


000182-001

STOP SOLENOID

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102640601</u>	Washer, Spring, M6, D722	2
2	<u>102729101</u>	Bolt, Solenoid, Stop, D722	2
3	<u>102799601</u>	Solenoid, Stop	1
4	<u>102799701</u>	Stay, Stop Solenoid	1
5	<u>102799801</u>	O-Ring, Stop Solenoid	1
6	N/A	Bolt, Stop Solenoid	2

8

D

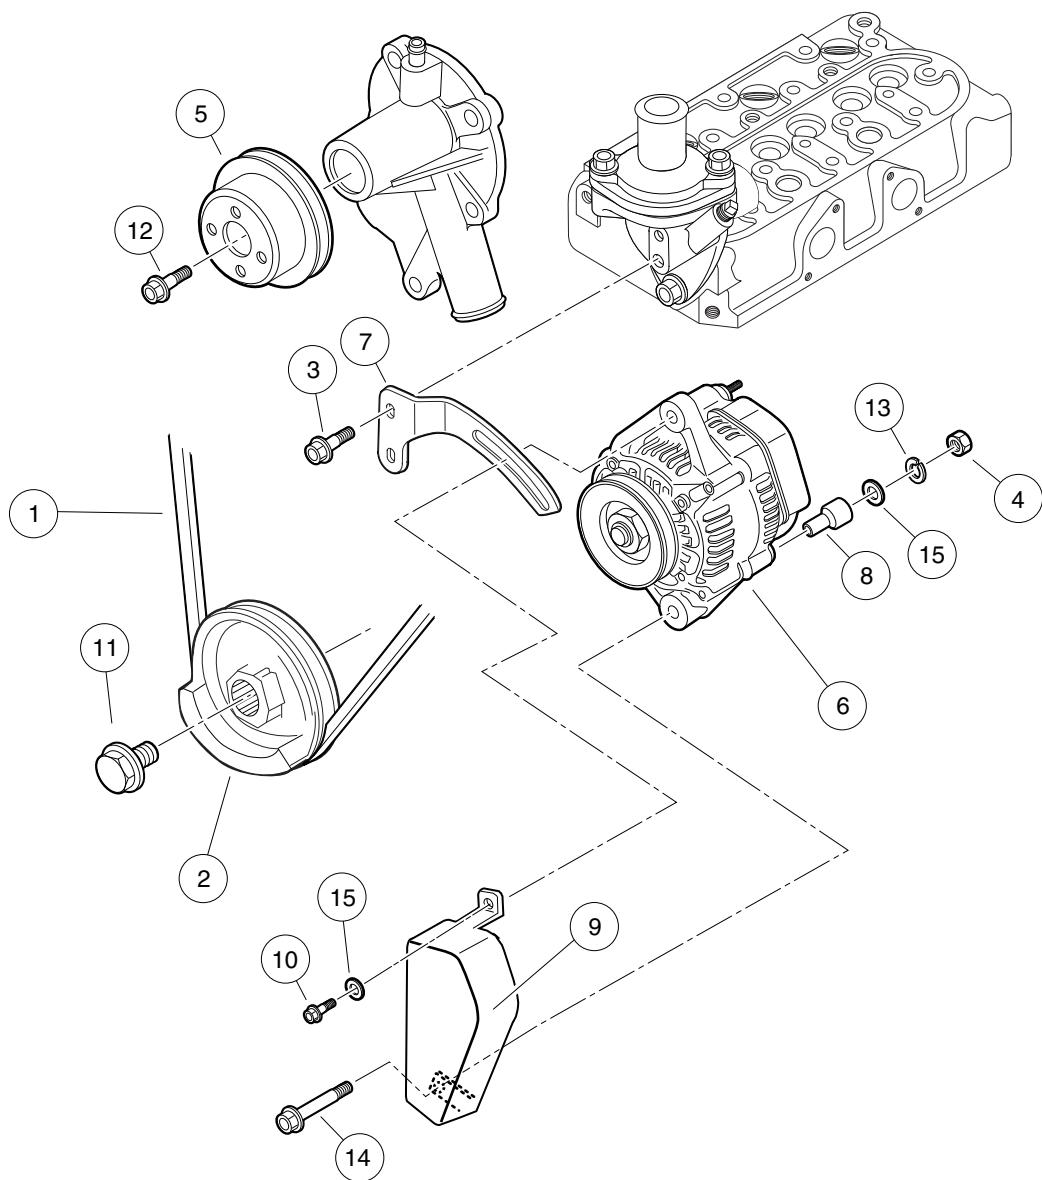


000057-002

40-AMP ALTERNATOR

8

D

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102601101</u>	V-Belt	1
2	<u>102630601</u>	Pulley, Fan Drive	1
3	<u>102631601</u>	Bolt, M6 X 1 X 20	2
4	<u>102647701</u>	Nut, M8, Plate	1
5	<u>102701201</u>	Pulley, Water Pump	1
6	<u>102730001</u>	Alternator, 40-Amp	1
7	<u>102730101</u>	Stay, Alternator Assy, D722	1
8	<u>102730201</u>	Collar, Alternator Assy, D722	1
9	<u>102730301</u>	Cover, Alternator Assy, D722	1
10	<u>102730401</u>	Bolt, Alt, D722, Adjuster	1
11	<u>102730601</u>	Bolt, Alt, D722, Drive Pulley	1
12	<u>102731301</u>	Bolt, D722, Drive Pulley	4
13	<u>102732501</u>	Washer, Spring, D722, Starter	1
14	<u>102800701</u>	Bolt, Alternator, Lower	1
15	<u>102801001</u>	Washer, Alternator, Upper	2

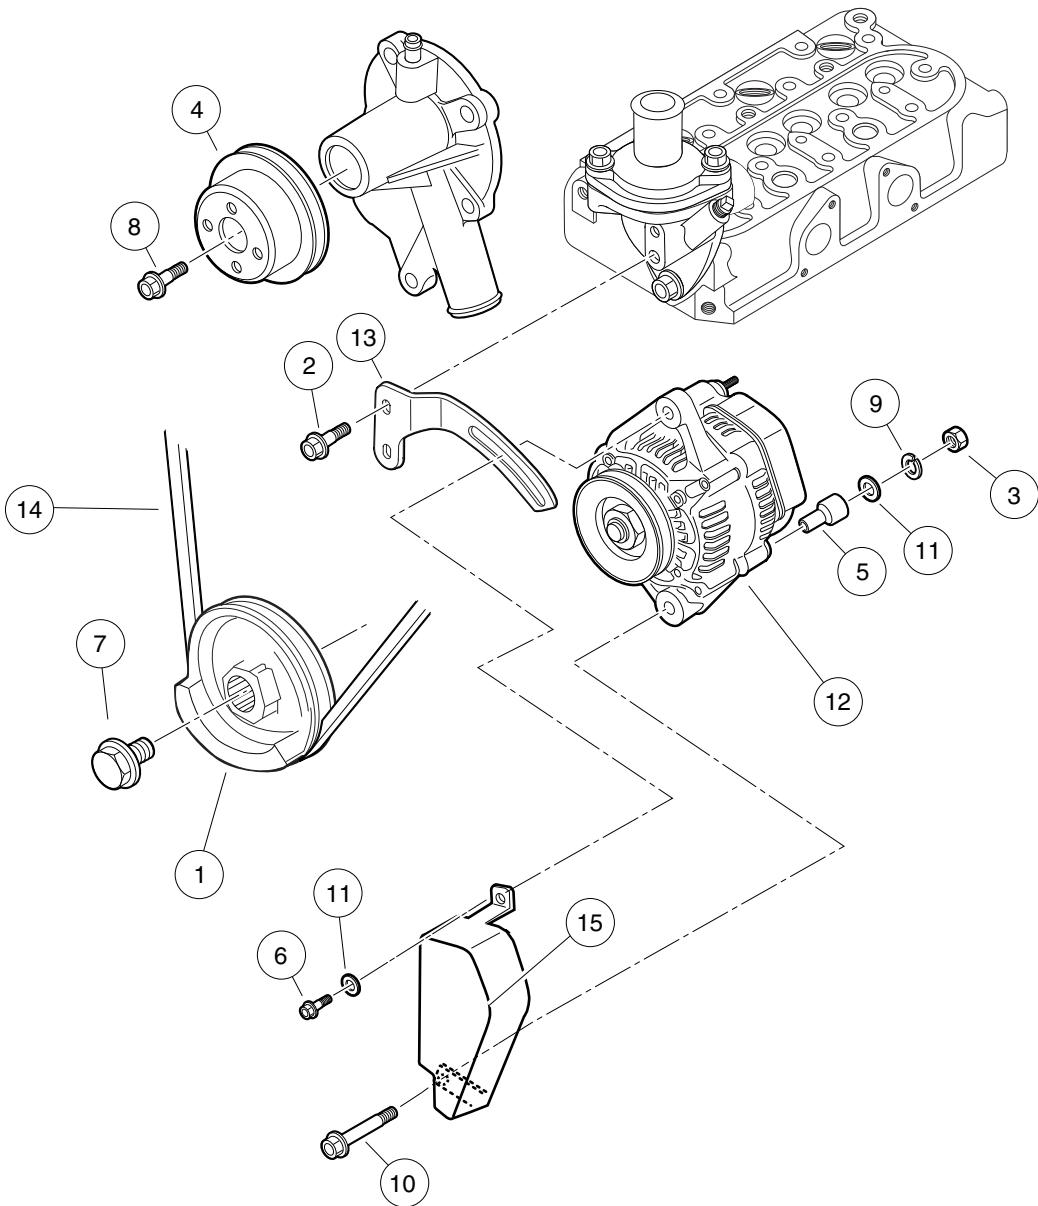


000057-003

60-AMP ALTERNATOR

8

D

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102630601</u>	Pulley, Fan Drive	1
2	<u>102631601</u>	Bolt, M6 X 1 X 20	2
3	<u>102647701</u>	Nut, M8, Plate	1
4	<u>102701201</u>	Pulley, Water Pump	1
5	<u>102730201</u>	Collar, Alternator Assy, D722	1
6	<u>102730401</u>	Bolt, Alt, D722, Adjuster	1
7	<u>102730601</u>	Bolt, Alt, D722, Drive Pulley	1
8	<u>102731301</u>	Bolt, D722, Drive Pulley	4
9	<u>102732501</u>	Washer, Spring, D722, Starter	1
10	<u>102800701</u>	Bolt, Alternator, Lower	1
11	<u>102801001</u>	Washer, Alternator, Upper	2
12	<u>102934701</u>	Alternator, 60 Amp	1
13	<u>102934801</u>	Brkt, Alt, D722, 60 Amp	1
14	<u>102934901</u>	Belt, Acc Drive, D722, 60 Amp	1
15	<u>103239901</u>	Guard, Acc Belt	1

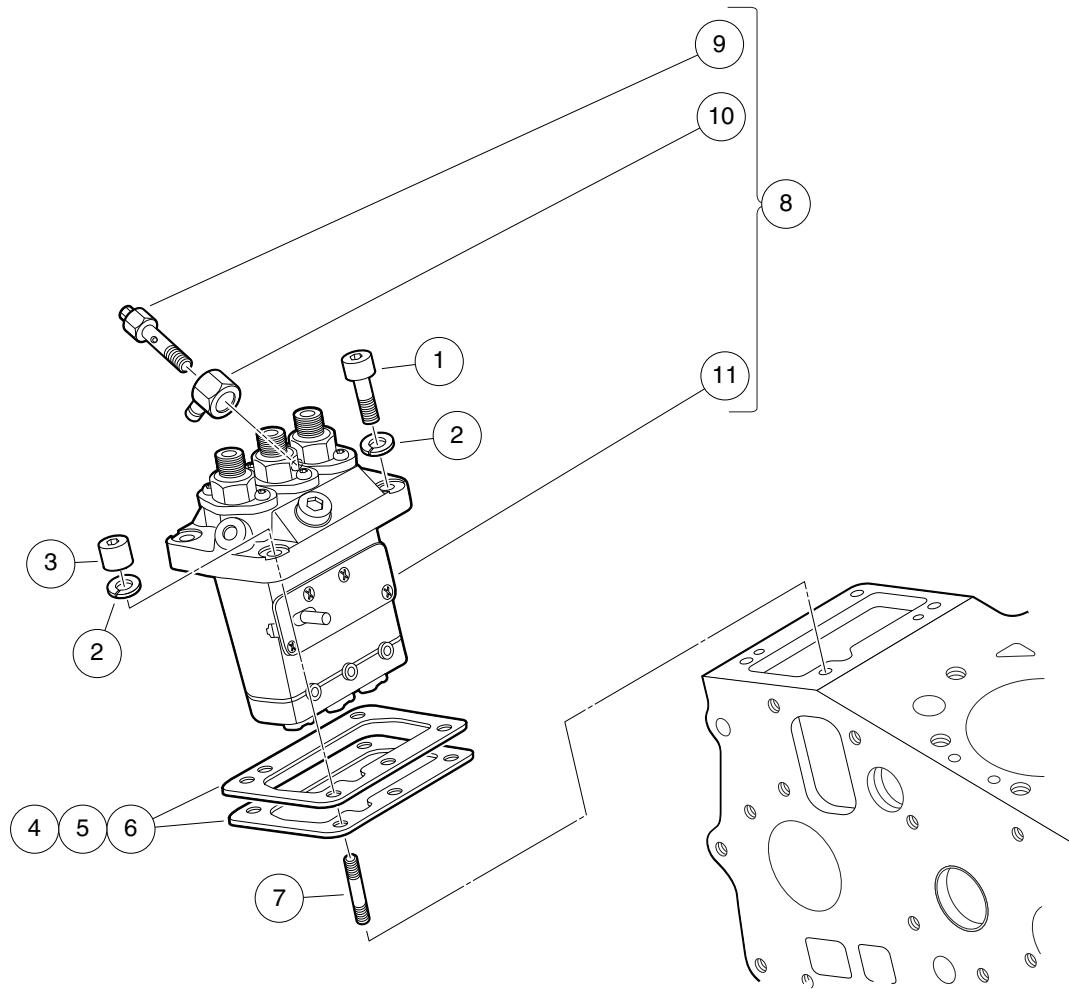8**D**


000053-002

INJECTION PUMP

8

D

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102640501</u>	Bolt, Hex-Head, M5 X 0.75 X	2
2	<u>102640601</u>	Washer, Spring, M6, D722	4
3	<u>102640701</u>	Nut, Special	2
4	<u>102640901</u>	Shim, Injection Pump, 0.20 mm	1
5	<u>102641001</u>	Shim, Injection Pump, 0.25 mm	1
6	<u>102641101</u>	Shim, Injection Pump, 0.30 mm	1
7	<u>102641201</u>	Stud, M5 X 25	2
8	<u>102800101</u>	Assembly, Fuel Injection Pump (includes items 9 through 11)	1
9	<u>102637701</u>	Screw, Hollow, D722, Inj Pump	1
10	<u>102640401</u>	Joint, Eye	1
11	N/A	Pump, Injection	1

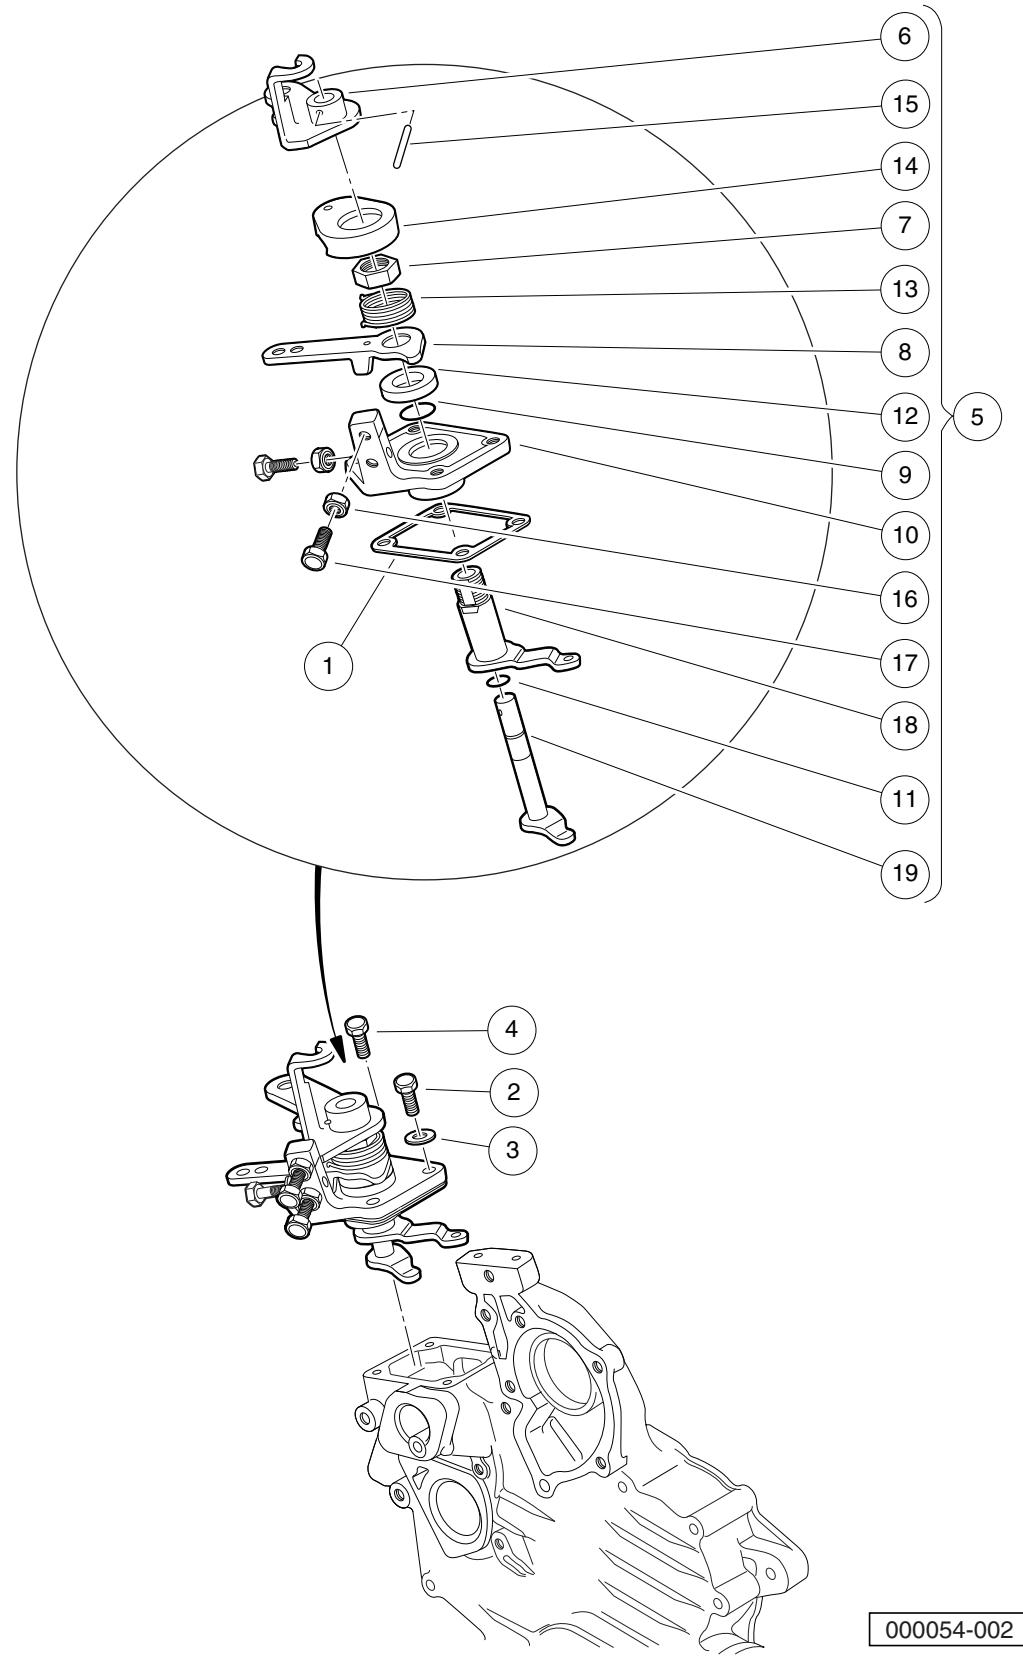


SPEED CONTROL PLATE

8

D

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102634501</u>	Gasket, Control Plate	1
2	<u>102635201</u>	Bolt, M6 X 1 X 30	2
3	<u>102635301</u>	Gasket, 6 X 10	2
4	<u>102654301</u>	Bolt, D722 Intake Manfld Lower	2
5	<u>102800401</u>	Assembly, Speed Plate (includes items 6 through 19)	1
6	<u>102633701</u>	Lever, Engine Stop	1
7	<u>102633801</u>	Nut, Speed Control	1
8	<u>102633901</u>	Lever, Speed Control	1
9	<u>102634001</u>	O Ring, 19 X 16	1
10	<u>102634101</u>	Plate, Speed Control	1
11	<u>102634401</u>	O Ring, 9 X 7	1
12	<u>102634601</u>	Collar, Lever	1
13	<u>102634701</u>	Spring, Return	1
14	<u>102729401</u>	Cap, Speed Cntrl Plate Rtrn	1
15	<u>102729501</u>	Pin, Spring, Speed Plate	1
16	N/A	Nut, Speed Control	2
17	N/A	Bolt, Speed Control	2
18	<u>102800501</u>	Lever, Governor	1
19	<u>102800601</u>	Shaft, Governor Lever	1

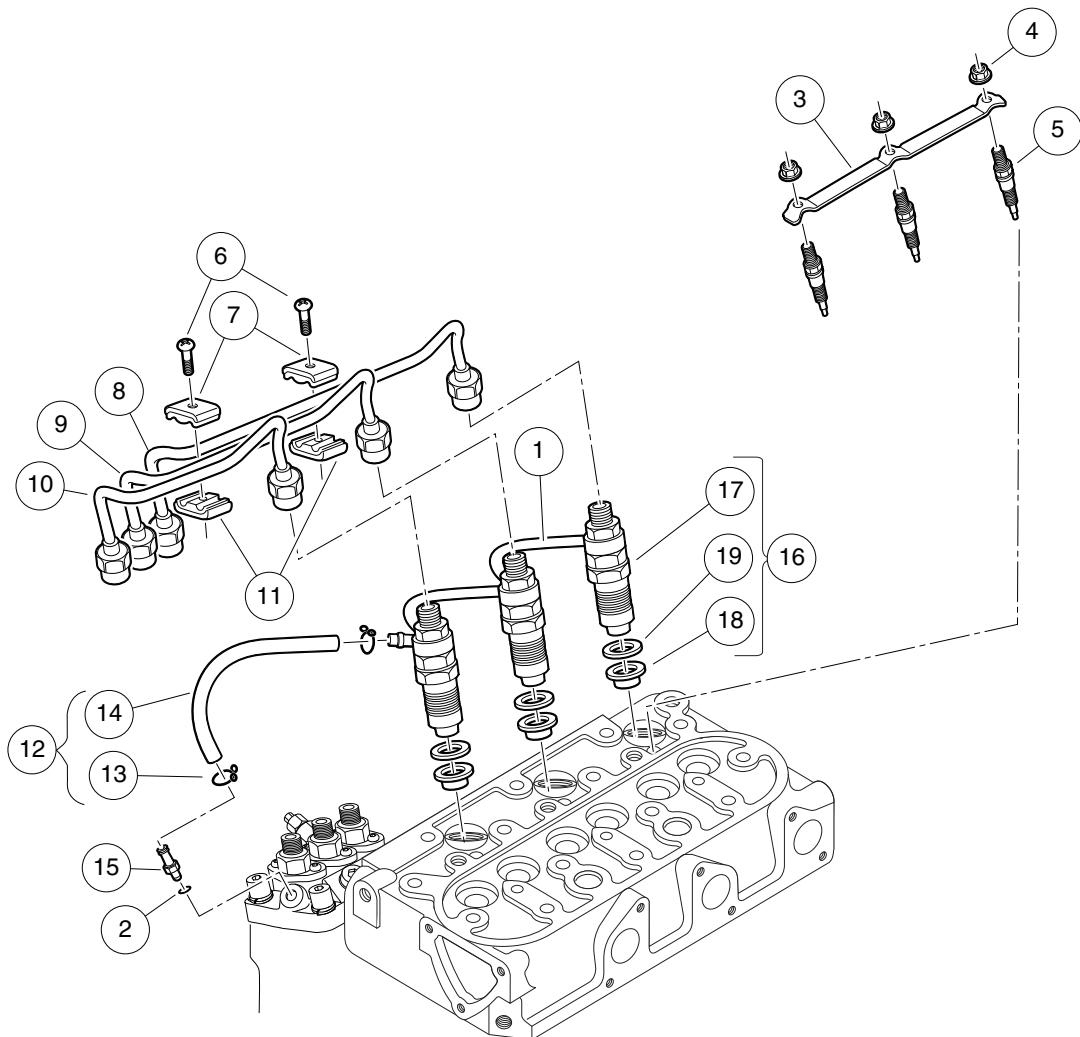


000055-001

NOZZLE HOLDERS AND GLOW PLUGS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102605701</u>	Assy Pipe, D722 Fuel Over Flow	1
2	<u>102635301</u>	Gasket, 6 X 10	1
3	<u>102642401</u>	Cord, Glow Plug	1
4	<u>102642501</u>	Nut, Flange,m4	3
5	<u>102642601</u>	Glow Plug	3
6	<u>102642801</u>	Screw, Washer	2
7	<u>102642901</u>	Clamp, Pipe, Top	2
8	<u>102643001</u>	Pipe, Injection, Left	1
9	<u>102643101</u>	Pipe, Injection, Right	1
10	<u>102643201</u>	Pipe, Injection, Middle	1
11	<u>102643301</u>	Clamp, Pipe, Bottom	2
12	<u>102643401</u>	Assy Pipe, Over Flow (includes items 13 and 14)	1
13	<u>102729601</u>	Clip, Pipe, Return	2
14	N/A	Hose, Overflow	1
15	<u>102643701</u>	Screw, Air Bleeder	1
16	<u>102729701</u>	Kit, Holder, Nozzle (includes items 17 through 19)	3
17	<u>102641501</u>	Assembly, Nozzle Holder	3
18	<u>102642701</u>	Seal, Heat	3
19	<u>102643601</u>	Gasket, Nozzle	3

8

D

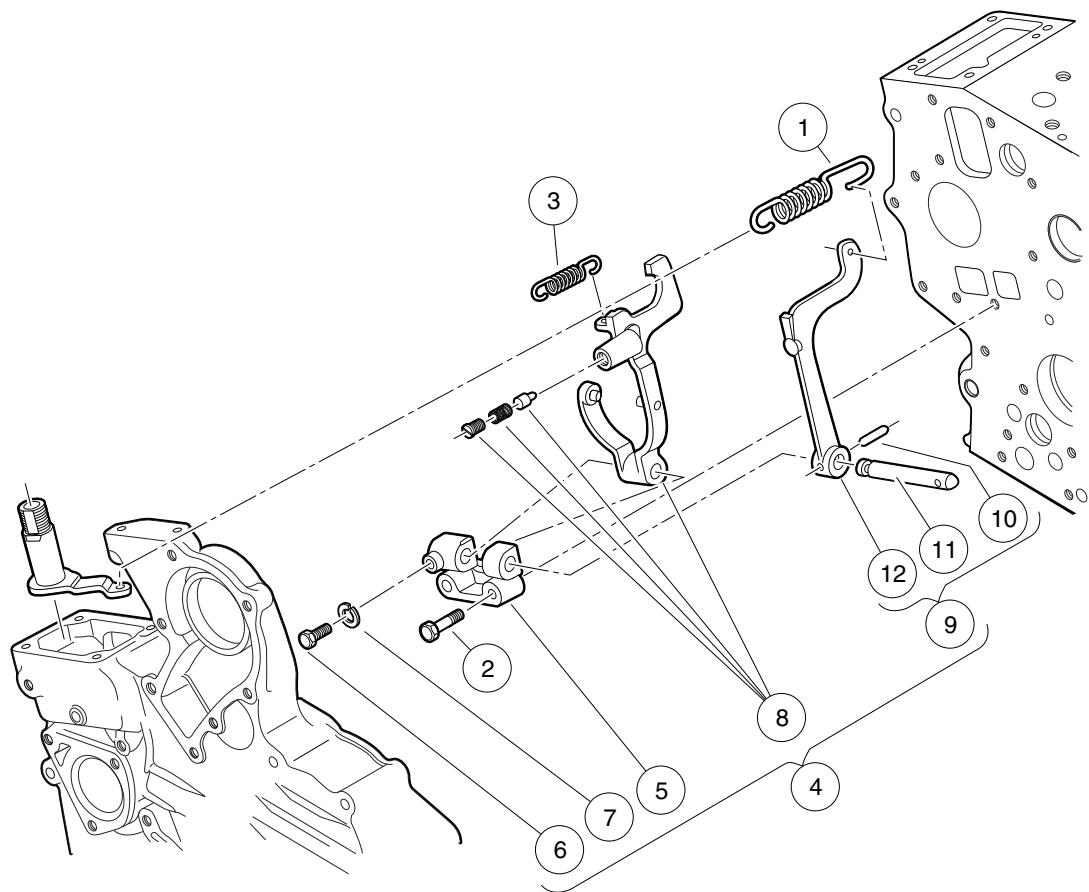8**D**


000056-002

GOVERNOR COMPONENTS

8

D

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102635101</u>	Spring, Governor	1
2	<u>102636301</u>	Bolt, M5 X 0.75 X 25	2
3	<u>102800201</u>	Spring, Start	1
4	<u>102800301</u>	Assembly, Governor Fork (includes items 5 through 9)	1
5	<u>102636201</u>	Holder, Fork Lever	1
6	<u>102636401</u>	Bolt, M5 X 0.75 X 11	1
7	<u>102636501</u>	Washer, Spring, M5	1
8	N/A	Lever, Fork, Middle, D722 CB	1
9	N/A	Assembly, Governor Fork Level, Lower, D722 CB (includes items 10 through 12)	1
10	<u>102633601</u>	Pin, Spring	1
11	<u>102636601</u>	Shaft, Fork Lever	1
12	N/A	Lever, Fork, End, D722 CB	1

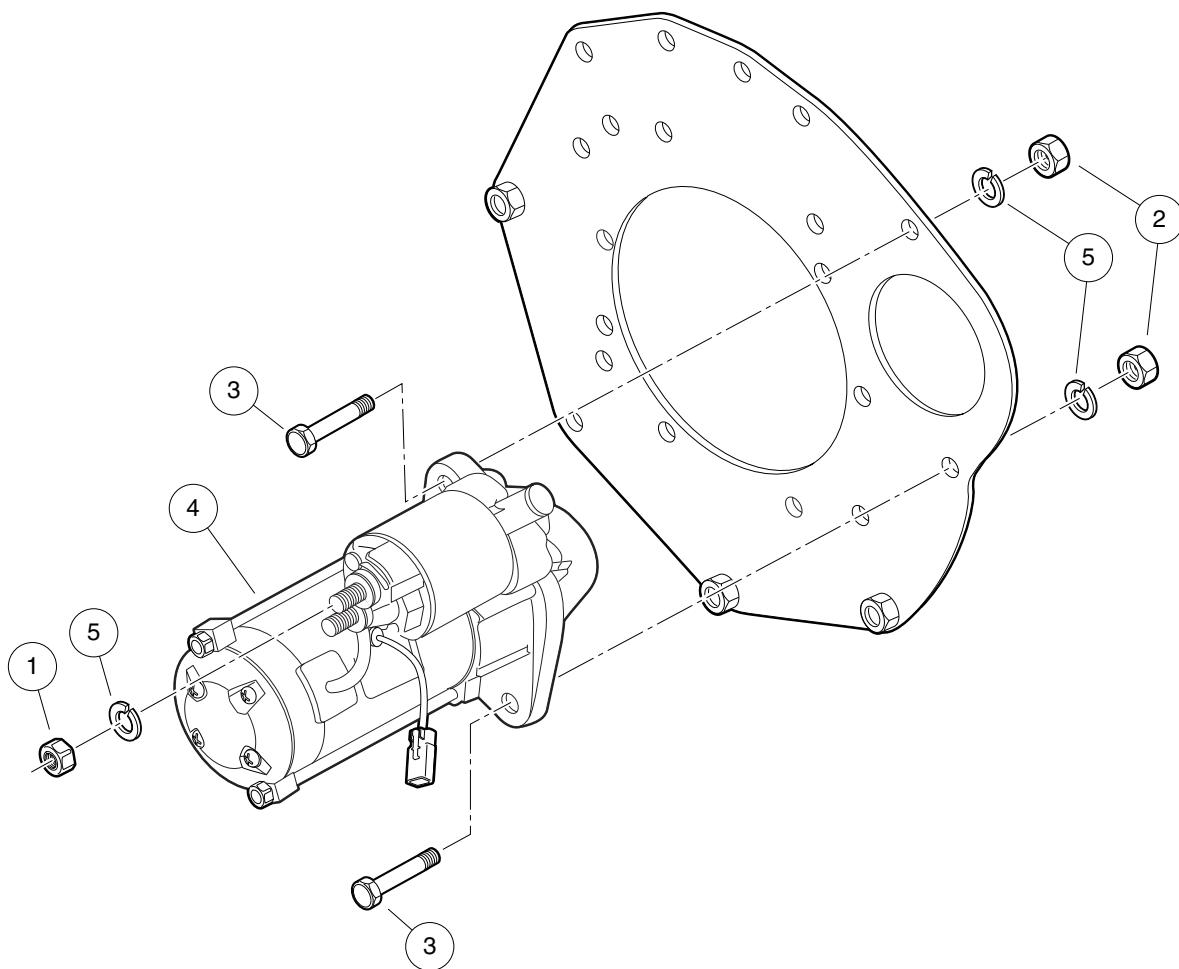


000058-001

STARTER

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		
1	<u>102645501</u>	Nut, D722, Starter	2	
2	<u>102647701</u>	Nut, M8, Plate	2	
3	<u>102648401</u>	Bolt, M8 X 1.25 X 28	2	
4	<u>102648501</u>	Motor, Starter	1	
5	<u>102732501</u>	Washer, Spring, D722, Starter	4	

8**D**

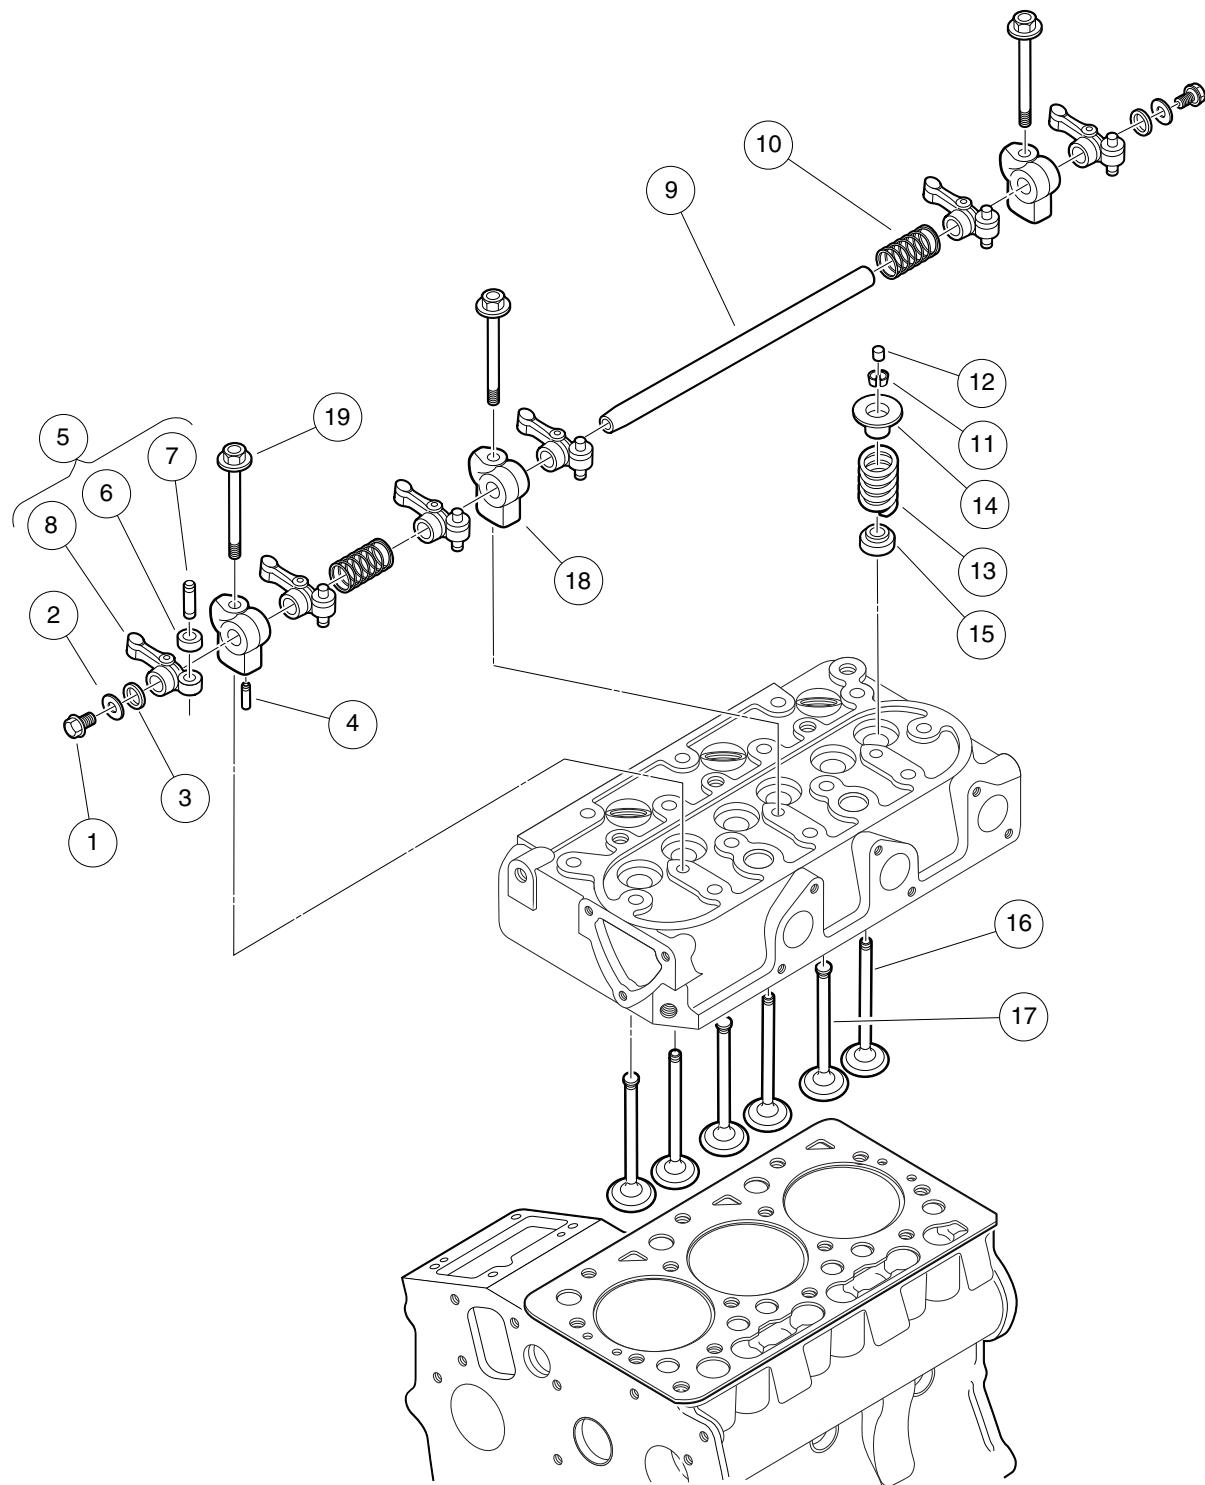8**D**


000062-002

VALVES AND ROCKER ARMS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102646401</u>	Bolt, M6 X 1 X 8	2
2	<u>102651301</u>	Washer, D722, Plain, Rocker	2
3	<u>102651601</u>	Washer, Rocker Arm	2
4	<u>102651801</u>	Pin, Spring, D722, Rocker	1
5	<u>102652001</u>	Assy Rocker Arm (includes items 6 through 8)	6
6	<u>102651501</u>	Nut, M6	6
7	<u>102651701</u>	Screw-Adjusting	6
8	N/A	Arm, Rocker	1
9	<u>102652601</u>	Shaft, Rocker Arm	1
10	<u>102652701</u>	Spring, Rocker Arm	2
11	<u>102652901</u>	Collet, Valve Spring, Set	6
12	<u>102653001</u>	Cap, Valve, D722	6
13	<u>102653101</u>	Spring, Valve	6
14	<u>102653201</u>	Retainer, Spring	6
15	<u>102653301</u>	Seal, Valve Stem	6
16	<u>102653601</u>	Valve, Exhaust	3
17	<u>102653701</u>	Valve, Inlet	3
18	<u>102801101</u>	Bracket, Rocker Arm, D722 Closed-Breather	3
19	<u>102801201</u>	Bolt, Rocker Arm	3

8


D

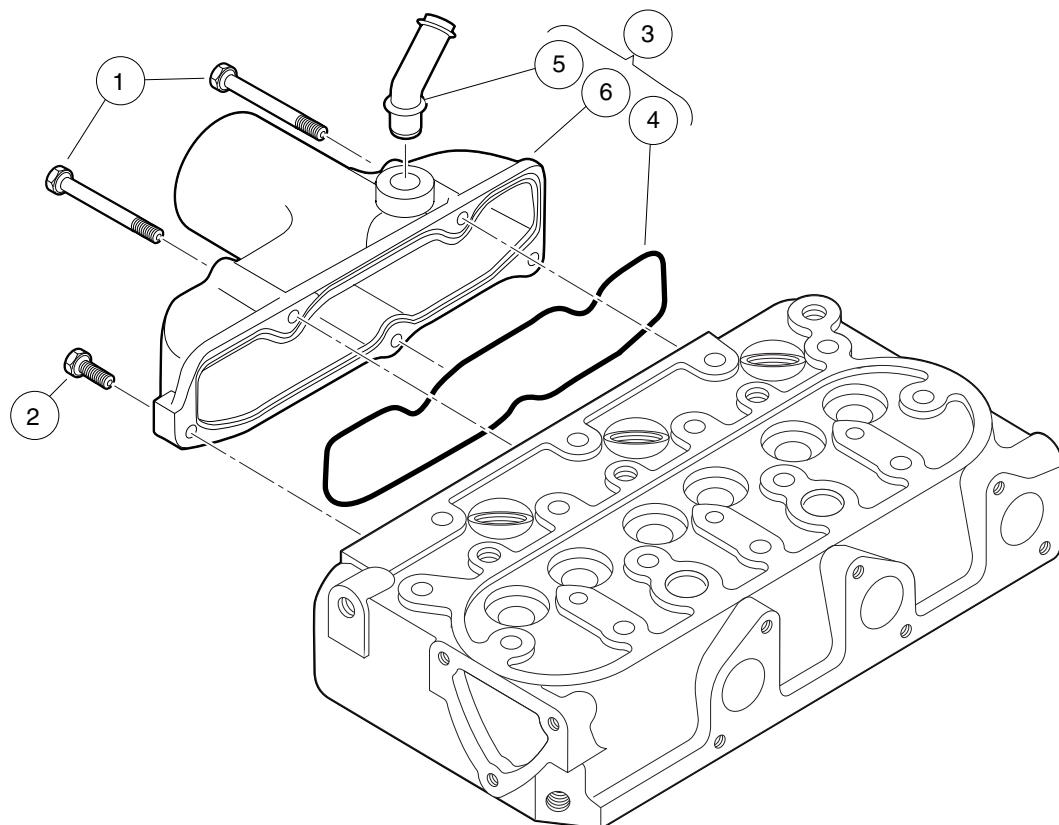

000063-002

DIESEL INLET MANIFOLD

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		8
1	<u>102646101</u>	Bolt, M6 X 1 X 45	3	
2	<u>102654301</u>	Bolt, D722 Intake Manfld Lower	2	
3	<u>102801301</u>	Assembly, Intake Manifold (includes items 4 through 6)	1	
4	<u>102646001</u>	Gasket, Intake Manifold	1	
5	<u>102801401</u>	Pipe, Breather	1	
6	<u>102801501</u>	Manifold, Intake	1	

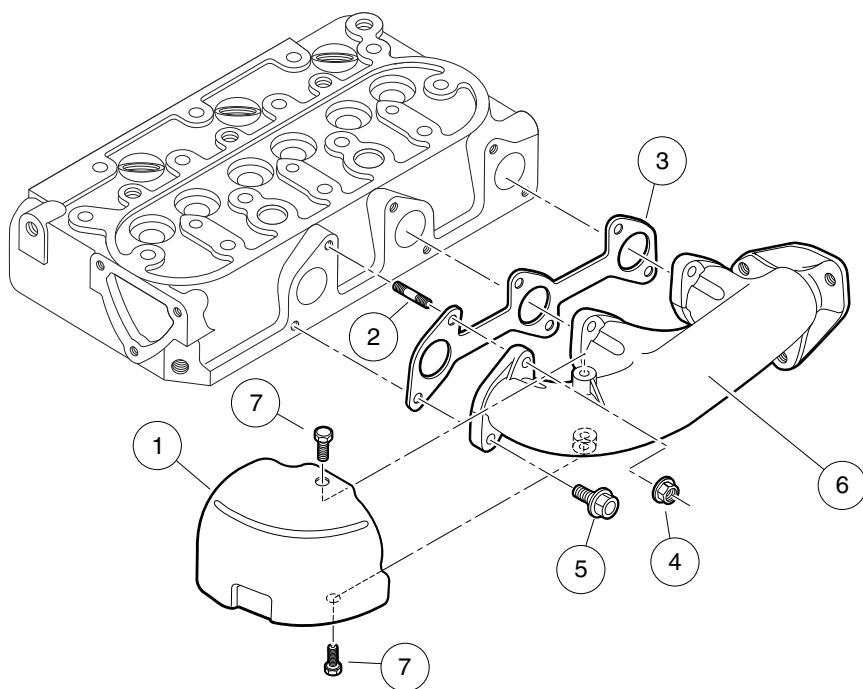


000064-001

EXHAUST MANIFOLD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102646301</u>	Cover, Heat Proof	1
2	<u>102646501</u>	Stud, M6 X 26	3
3	<u>102646601</u>	Gasket, Ex-manifold	1
4	<u>102647101</u>	Nut, Flange, M6, Ubs	3
5	<u>102647201</u>	Bolt, Flange Head, M6 X 1 X 16	3
6	<u>102731501</u>	Manifold, Exhaust, D722	1
7	<u>102731601</u>	Bolt, D722, Exhst Manfld Cover	2

8

D

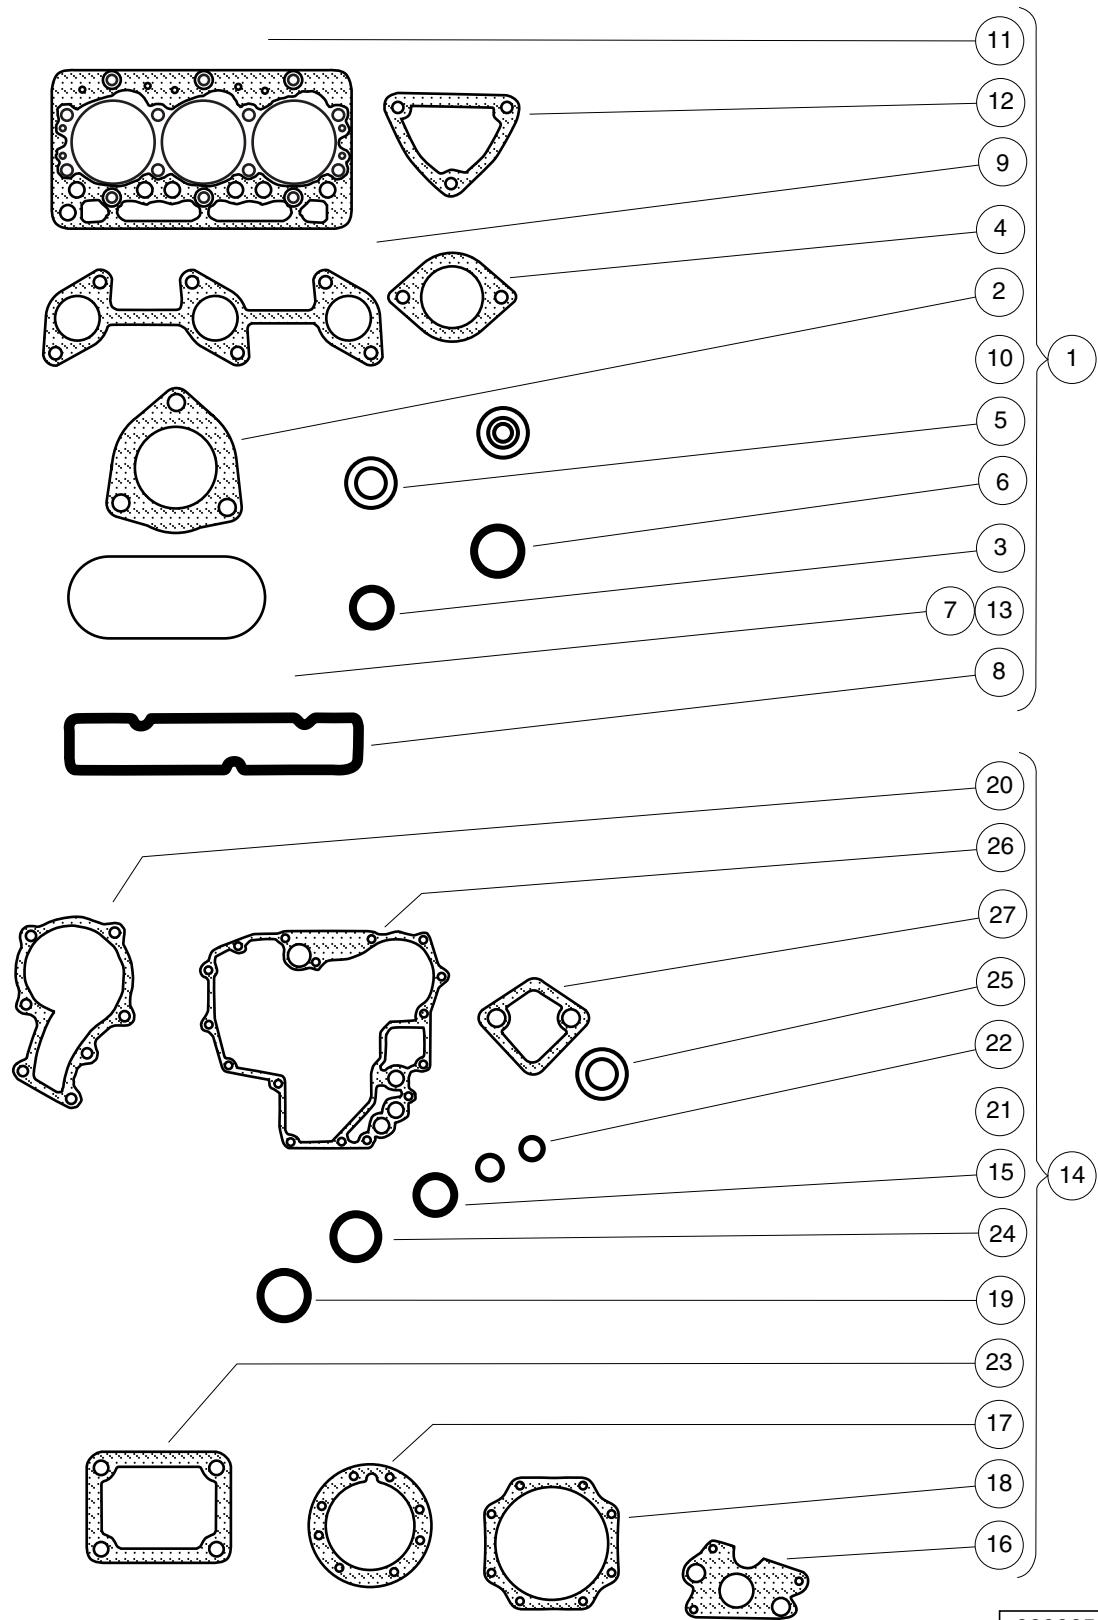


000065-001

GASKET KITS

8

D

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102731801</u>	Kit, Gasket Upper, D722 (includes items 2 through 13)	1
2	<u>102422301</u>	Gasket, Exhaust Diesel	1
3	<u>102600301</u>	O Ring, 8 X 7	1
4	<u>102633401</u>	Gasket, Thermostat	1
5	<u>102635301</u>	Gasket, 6 X 10	3
6	<u>102644001</u>	O Ring, 30 X 36	1
7	<u>102644501</u>	Gasket, Head Cover	1
8	<u>102646001</u>	Gasket, Intake Manifold	1
9	<u>102646601</u>	Gasket, Ex-manifold	1
10	<u>102653301</u>	Seal, Valve Stem	6
11	<u>102654101</u>	Gasket, Cylinder Head	1
12	<u>102654701</u>	Gasket, Water Flange	1
13	<u>102798501</u>	Gasket, Cylinder Head Cover	1
14	<u>102731901</u>	Kit, Gasket Lower, D722 (includes items 15 through 27)	1
15	<u>102601801</u>	O Ring, 18 X 13	3
16	<u>102606601</u>	Gasket, Oil Pump	1
17	<u>102608201</u>	Gasket, Bearing Case	1
18	<u>102608301</u>	Gasket, Cover	1
19	<u>102630301</u>	O Ring, 23 X 26	1
20	<u>102632701</u>	Gasket, Water Pump, D722	1
21	<u>102634001</u>	O Ring, 19 X 16	1
22	<u>102634401</u>	O Ring, 9 X 7	1
23	<u>102634501</u>	Gasket, Control Plate	1
24	<u>102654601</u>	O Ring, 20 X 17	1
25	<u>102728801</u>	Gasket, Idle Apparatus, Rear	2
26	<u>102729301</u>	Gasket, Gearcase, D722	1
27	<u>102732601</u>	Gasket, Fuel Pump, D722	1

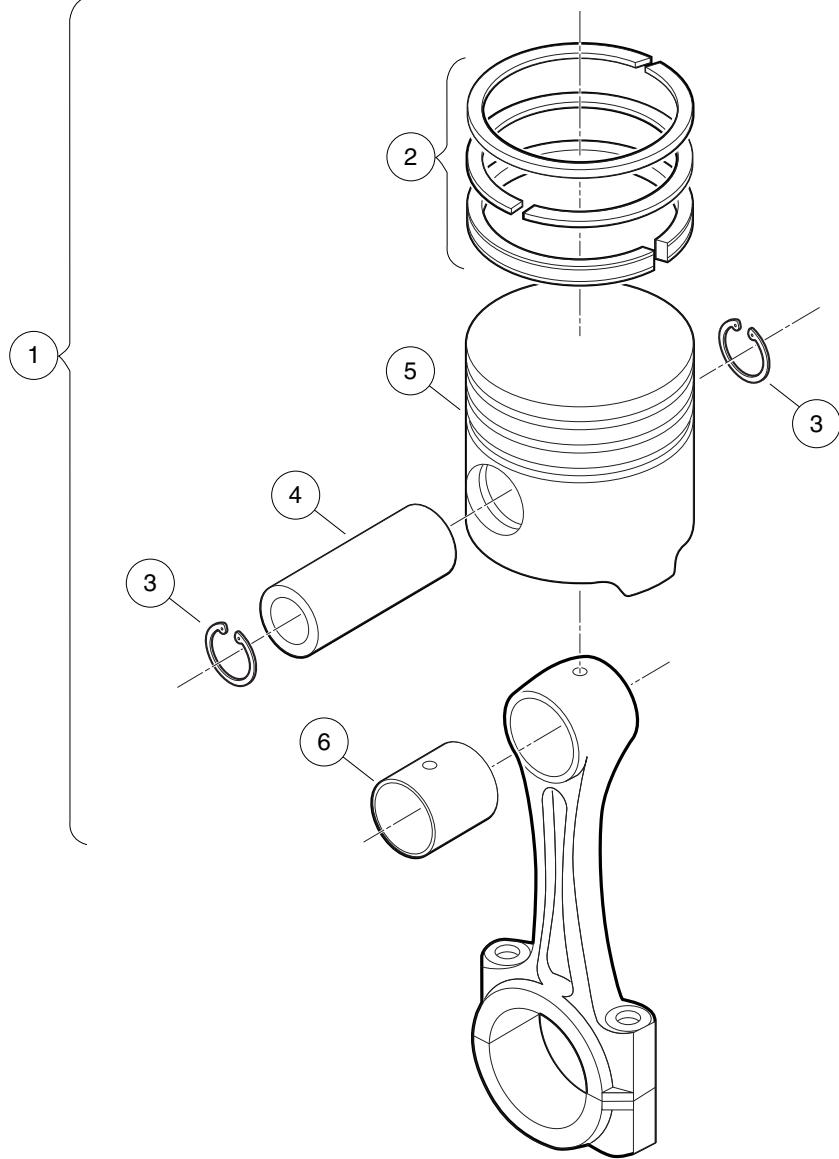

000066-001

PISTON KIT

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>102732001</u>	Kit, Piston Rebuild, D722 (includes items 2 through 6)	1
2	<u>102607601</u>	Assy Piston Ring, D722 Std	1
3	<u>102630901</u>	Circlip, Piston Pin	2
4	<u>102631001</u>	Pin, Piston	1
5	102728101	Piston, D722, Std	1
6	<u>102732201</u>	Bushing, Piston Pin, D722	1

8


D

8

D

HONDA GX620 GASOLINE ENGINE




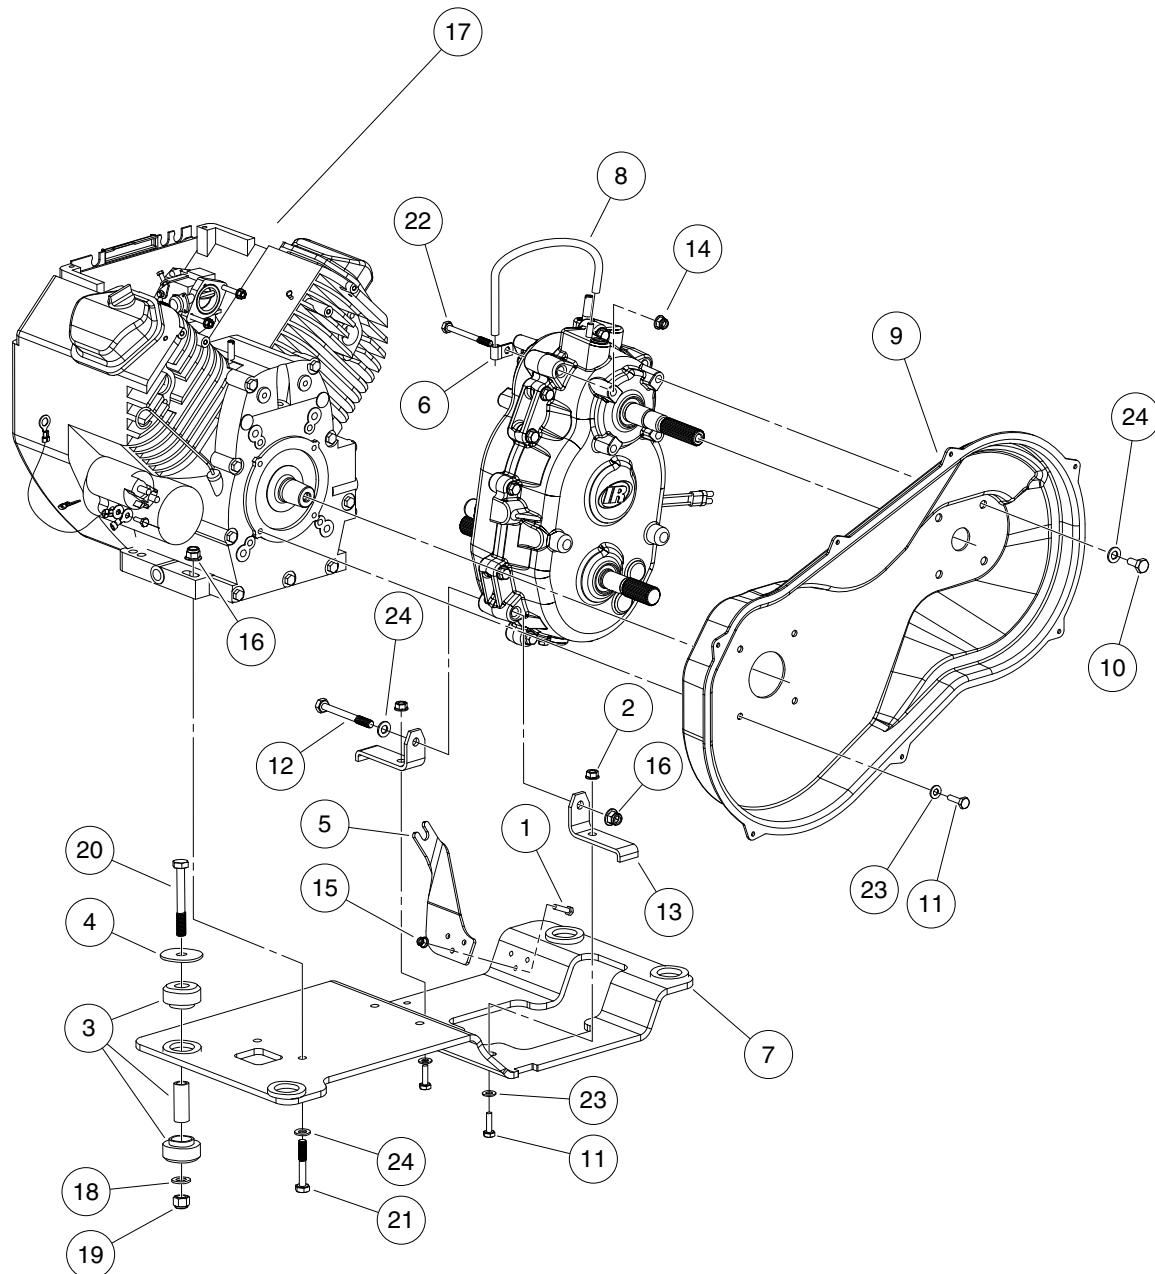

000025-003

HONDA GX620 GASOLINE ENGINE MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	9
1	<u>1012769</u>	Screw, M6-1.00 X 25mm Hex Cap	3
2	<u>102298401</u>	Nut,m8,all Metal Lock	2
3	<u>102370501</u>	Isolator Ring and Bushing	4
4	<u>102370601</u>	Washer, Snubbing, Ring N Bush	4
5	<u>102382401</u>	Bracket, FNR Trans Cable	1
6	<u>102410603</u>	P-Clamp, Insulated .312 In	1
7	<u>102414901</u>	Plate, Eng Mtg, Weld, Honda	1
8	<u>102462301</u>	Hose, Vent, Transmission	1
9	<u>102462502</u>	Cover, CVT Inner, Honda	1
10	<u>102490101</u>	Bolt, M10 X 1.5 X 20 Loctite	4
11	<u>102490201</u>	Bolt, M8 X 1.25 X 25 Loctite	6
12	<u>102490501</u>	Bolt, M10 X 1.5 X 100 Loctite	1
13	<u>102494401</u>	Bracket, Transmission Mounting	2
14	<u>102618601</u>	Lock Nut, Flg M8 X 1.25 Nylon	1
15	<u>102621501</u>	Nut Flg, M6 X 1.0 Nylon	3
16	<u>102670701</u>	Nut Flg M10 X 1.5 Nylon	5
17	<u>103252201</u>	Engine, Honda, No Acr	1
18	<u>96701412</u>	Washer, M12 Hard	4
19	<u>96704622</u>	Locknut, M12x1.75 Nylon Insert	4
20	<u>96704721</u>	Bolt, M12 X 1.75 X 90	4
21	<u>96704960</u>	Bolt, M10 X 1.5 X 60	4
22	<u>96718978</u>	Bolt, M8 X 1.25 X 80	1
23	<u>96741038</u>	Washer, M8 Hard	6
24	<u>96741046</u>	Washer, M10 Hard	9

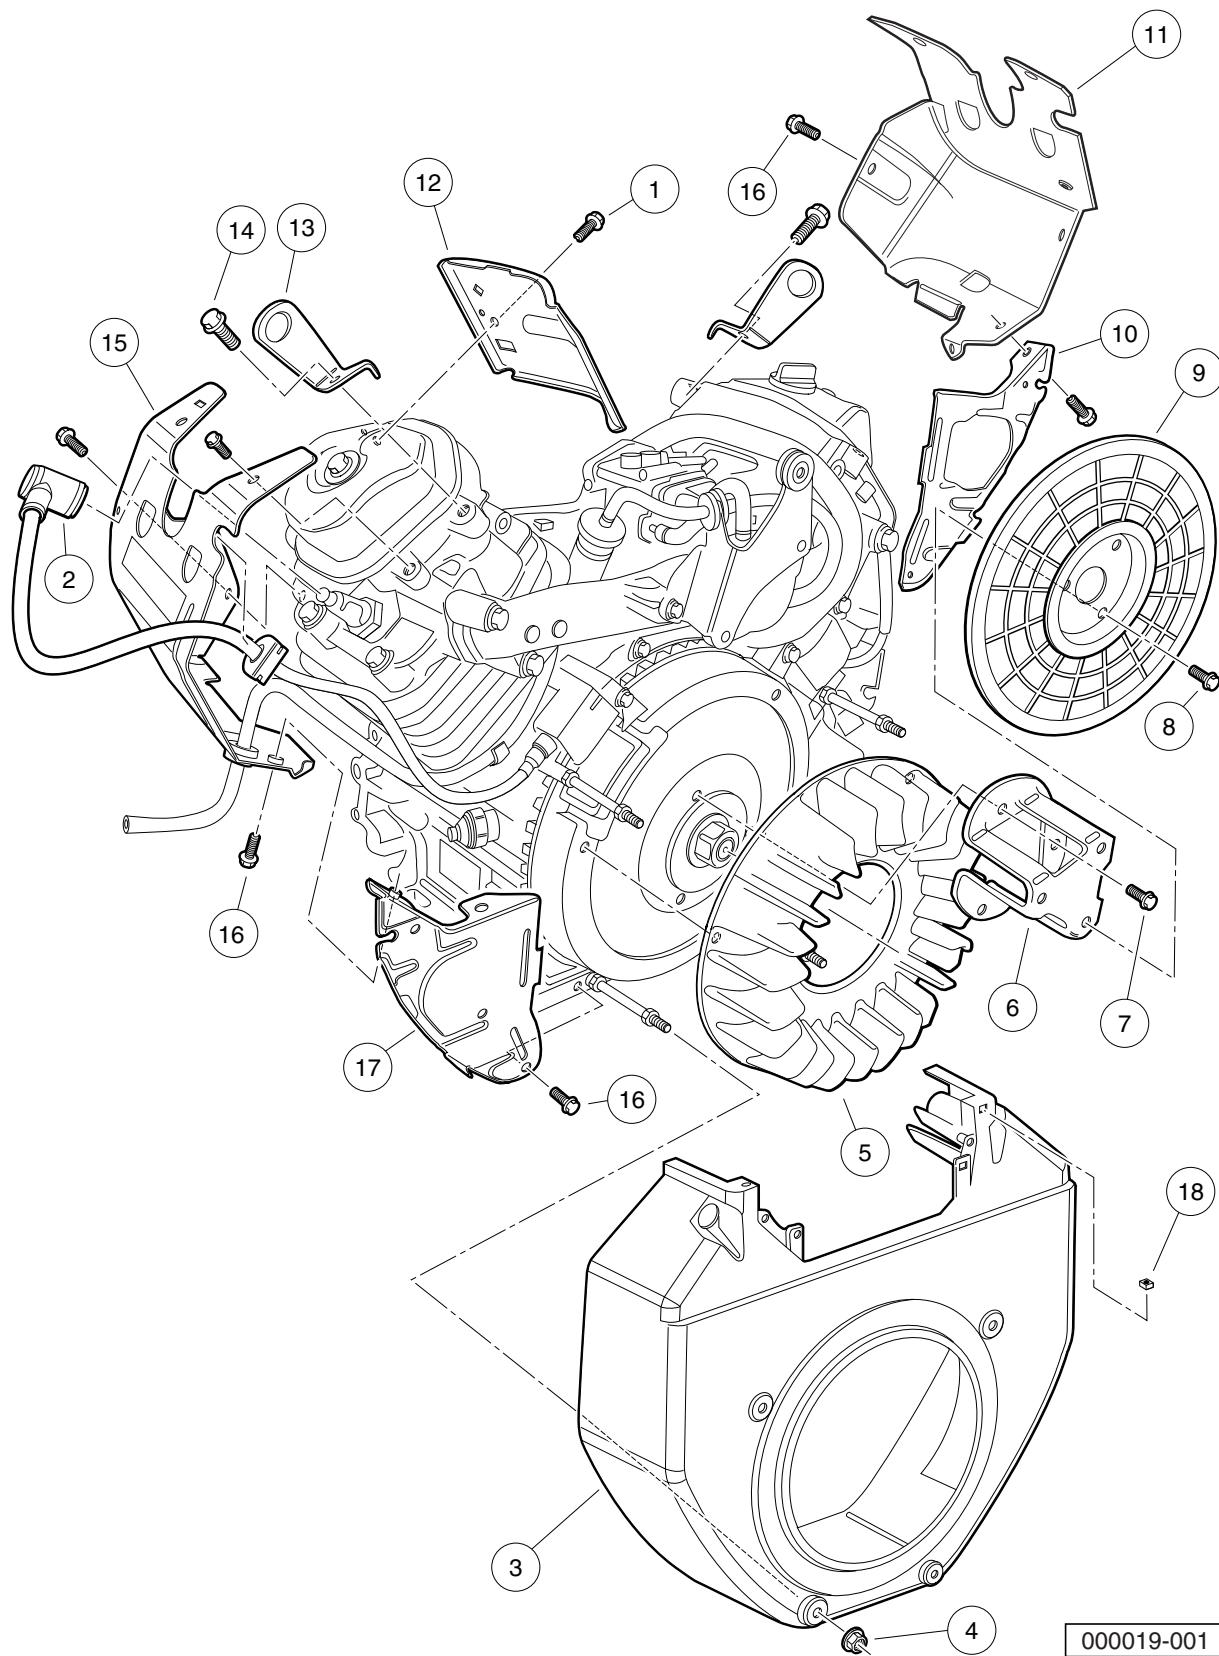
9**G**

000019-001

SHROUDS AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	9
1	<u>102657501</u>	Bolt, Flange Head, M6 X 11 X 4	2
2	<u>102666201</u>	Cap Assy, Noise Suppressor	2
3	<u>102666801</u>	Cover, Fan, Bright Red	1
4	<u>102666901</u>	Nut, Flange, M6	4
5	<u>102667001</u>	Fan, Cooling	1
6	<u>102667101</u>	Holder, Screen Grid	1
7	<u>102667201</u>	Bolt, Flange Head, M8 X 1.25 X 16	3
8	<u>102667301</u>	Bolt, Flange Head, M6 X 1 X 12	3
9	<u>102667401</u>	Grid Screen, PTO	1
10	<u>102667501</u>	Plate, R Side	1
11	<u>102667601</u>	Shroud, R	1
12	<u>102667701</u>	Shroud, Head	2
13	<u>102667901</u>	Hanger, Engine	2
14	<u>102668001</u>	Bolt, Flange Head, M8 X 1.25 X 20	2
15	<u>102668101</u>	Shroud, L	1
16	<u>102668301</u>	Bolt, Flange Head, M6 X 1 X 12	6
17	<u>102668401</u>	Plate, Left Side	1
18	<u>102759401</u>	Nut, Square, 5mm	2


Note: The part number for a complete engine is 102402701.

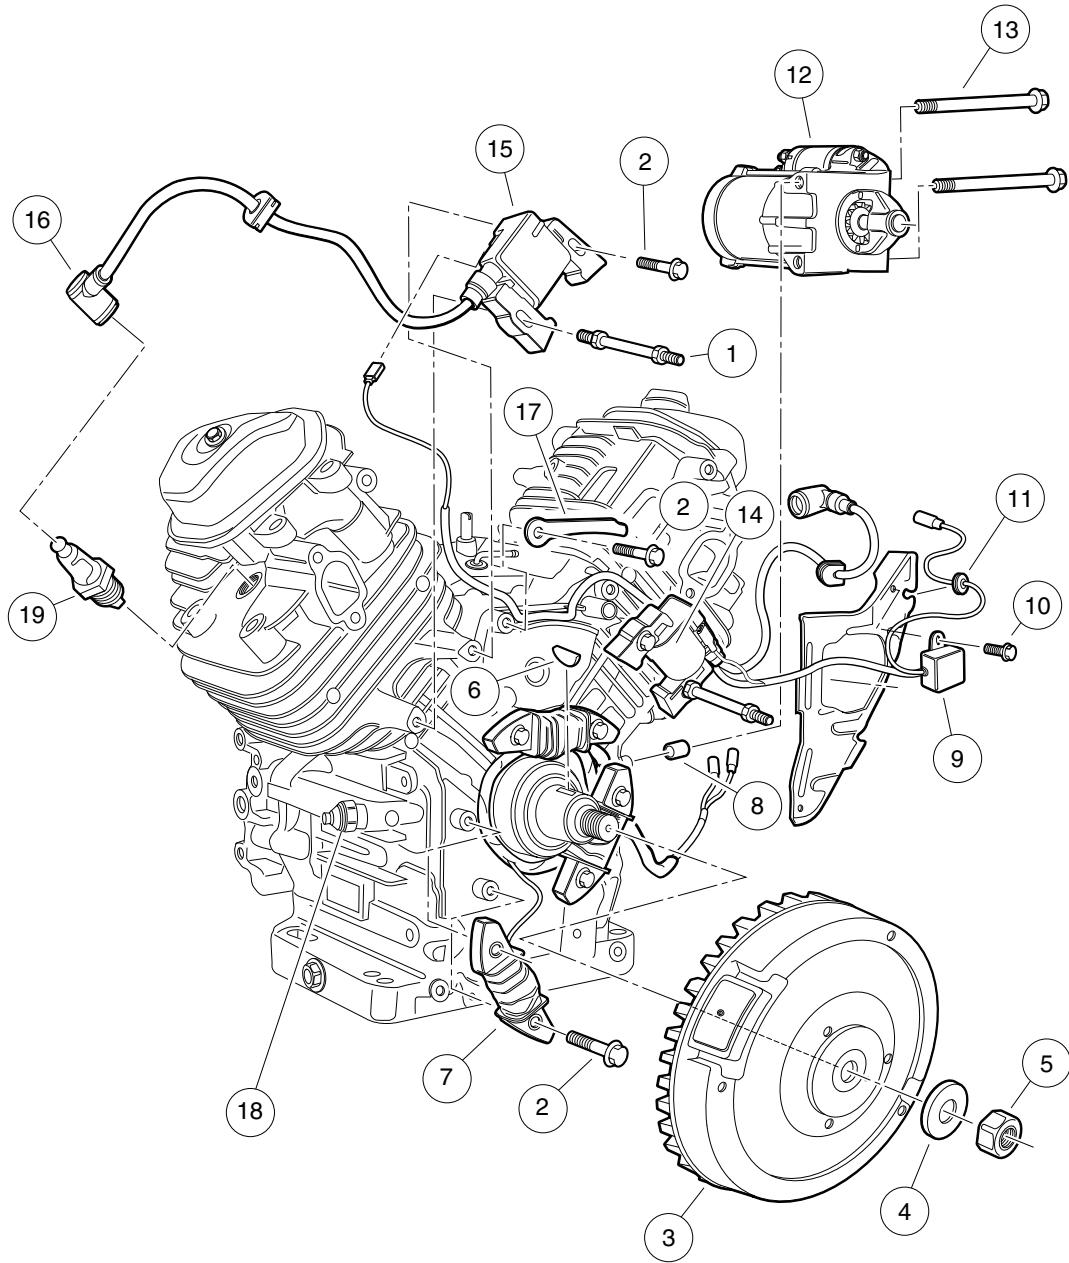

000018-001

IGNITION COMPONENTS AND FLYWHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	9
1	<u>102655301</u>	Stud, Engine	2
2	<u>102661901</u>	Bolt, Flange Head, M6 X 1 X 32	9
3	<u>102664601</u>	Flywheel	1
4	<u>102664701</u>	Washer, M20	1
5	<u>102664801</u>	Nut, Flange, M20	1
6	<u>102664901</u>	Key, Special Woodruff, 25 X 18	1
7	<u>102665001</u>	Coil Assy, Charge, 12-Volt, 20-Amp	1
8	<u>102665101</u>	Pin, Dowel, 10x12	2
9	<u>102665301</u>	Diode Assembly	1
10	<u>102665401</u>	Bolt, Flange Head, M6 X 1 X 8	1
11	<u>102665501</u>	Grommet, Tool	1
12	<u>102665601</u>	Motor, Starter	1
13	<u>102665701</u>	Bolt, Flange Head, M8 X 1.25 X 110	2
14	<u>102665901</u>	Coil Assy, R, Ignition	2
15	<u>102666001</u>	Coil Assy, L, Ignition	2
16	<u>102666201</u>	Cap Assy, Noise Suppressor	2
17	<u>102668201</u>	Clamp, Wire	1
18	<u>102831201</u>	Switch, Oil Pressure	1
19	<u>AM1232301</u>	Spark Plug, BPR2ES	2

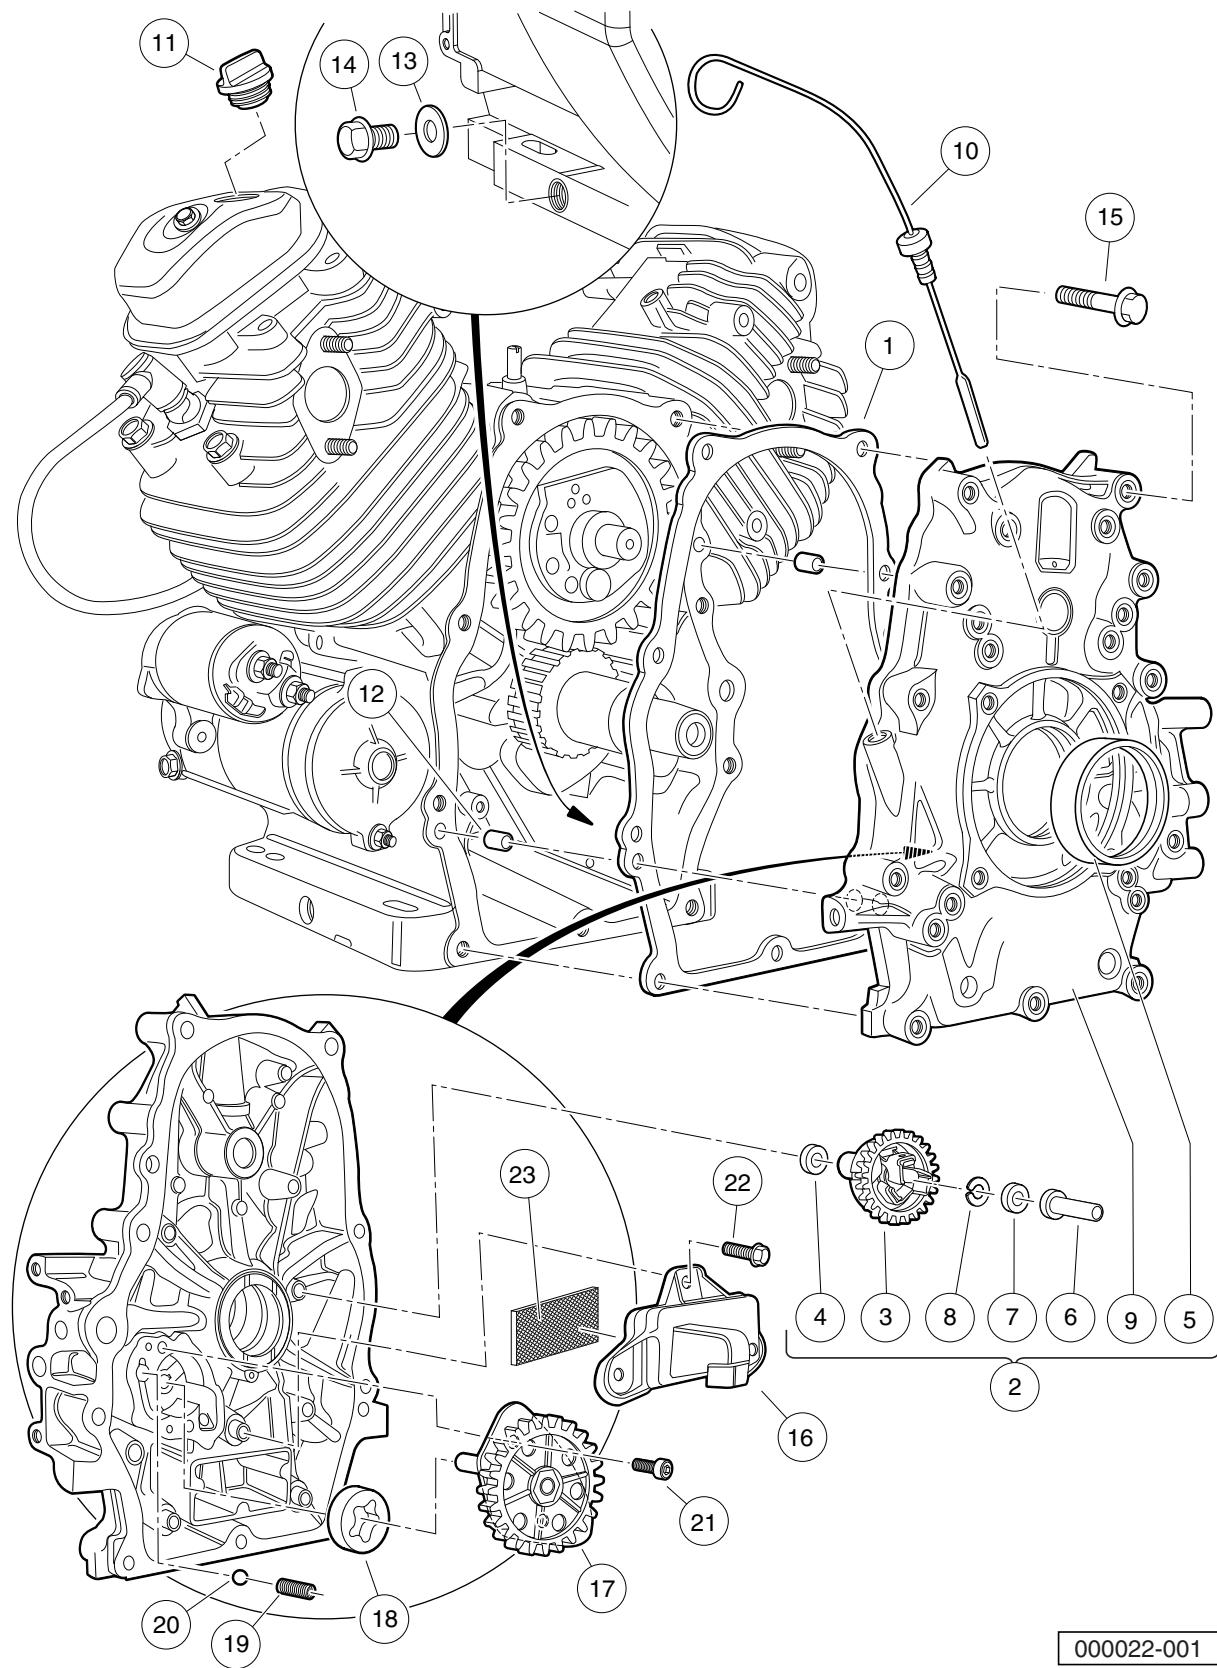
9**G**

OIL CIRCULATION

9

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102658001</u>	Gasket, Case Cover	1
2	<u>102658101</u>	Cover Assembly, Crankcase (includes items 3 through 9)	1
3	<u>102658801</u>	Governor Assembly	1
4	<u>102659601</u>	Washer, Plain, M6	1
5	<u>102724301</u>	Seal, Oil, 38 X 58 X 9	1
6	<u>102724401</u>	Slider, Governor	1
7	<u>102724501</u>	Washer, 6 X 16	1
8	<u>102724601</u>	Clip, Governor	1
9	N/A	Cover, Crankcase	1
10	<u>102658201</u>	Dipstick, Oil	1
11	<u>102658301</u>	Cap, Oil Filler	1
12	<u>102658401</u>	Pin A, Dowel, 8 X 14	2
13	<u>102658501</u>	Washer, Drain Plug, M14	1
14	<u>102658601</u>	Bolt, Drain Plug , M14	1
15	<u>102658701</u>	Bolt, Flange Head, M8 X 1.25 X 50	9
16	<u>102658901</u>	Cover, Oil Filter	1
17	<u>102659001</u>	Cover Assembly, Oil Pump	1
18	<u>102659101</u>	Rotor, Oil Pump, Outer	1
19	<u>102659201</u>	Spring, Relief Valve	1
20	<u>102659301</u>	Ball, Steel , 3/8, #12	1
21	<u>102659401</u>	Bolt, Socket	2
22	<u>102659501</u>	Bolt, Flange Head, M6 X 1 X 20	3
23	<u>102724701</u>	Screen, Oil Filter	1

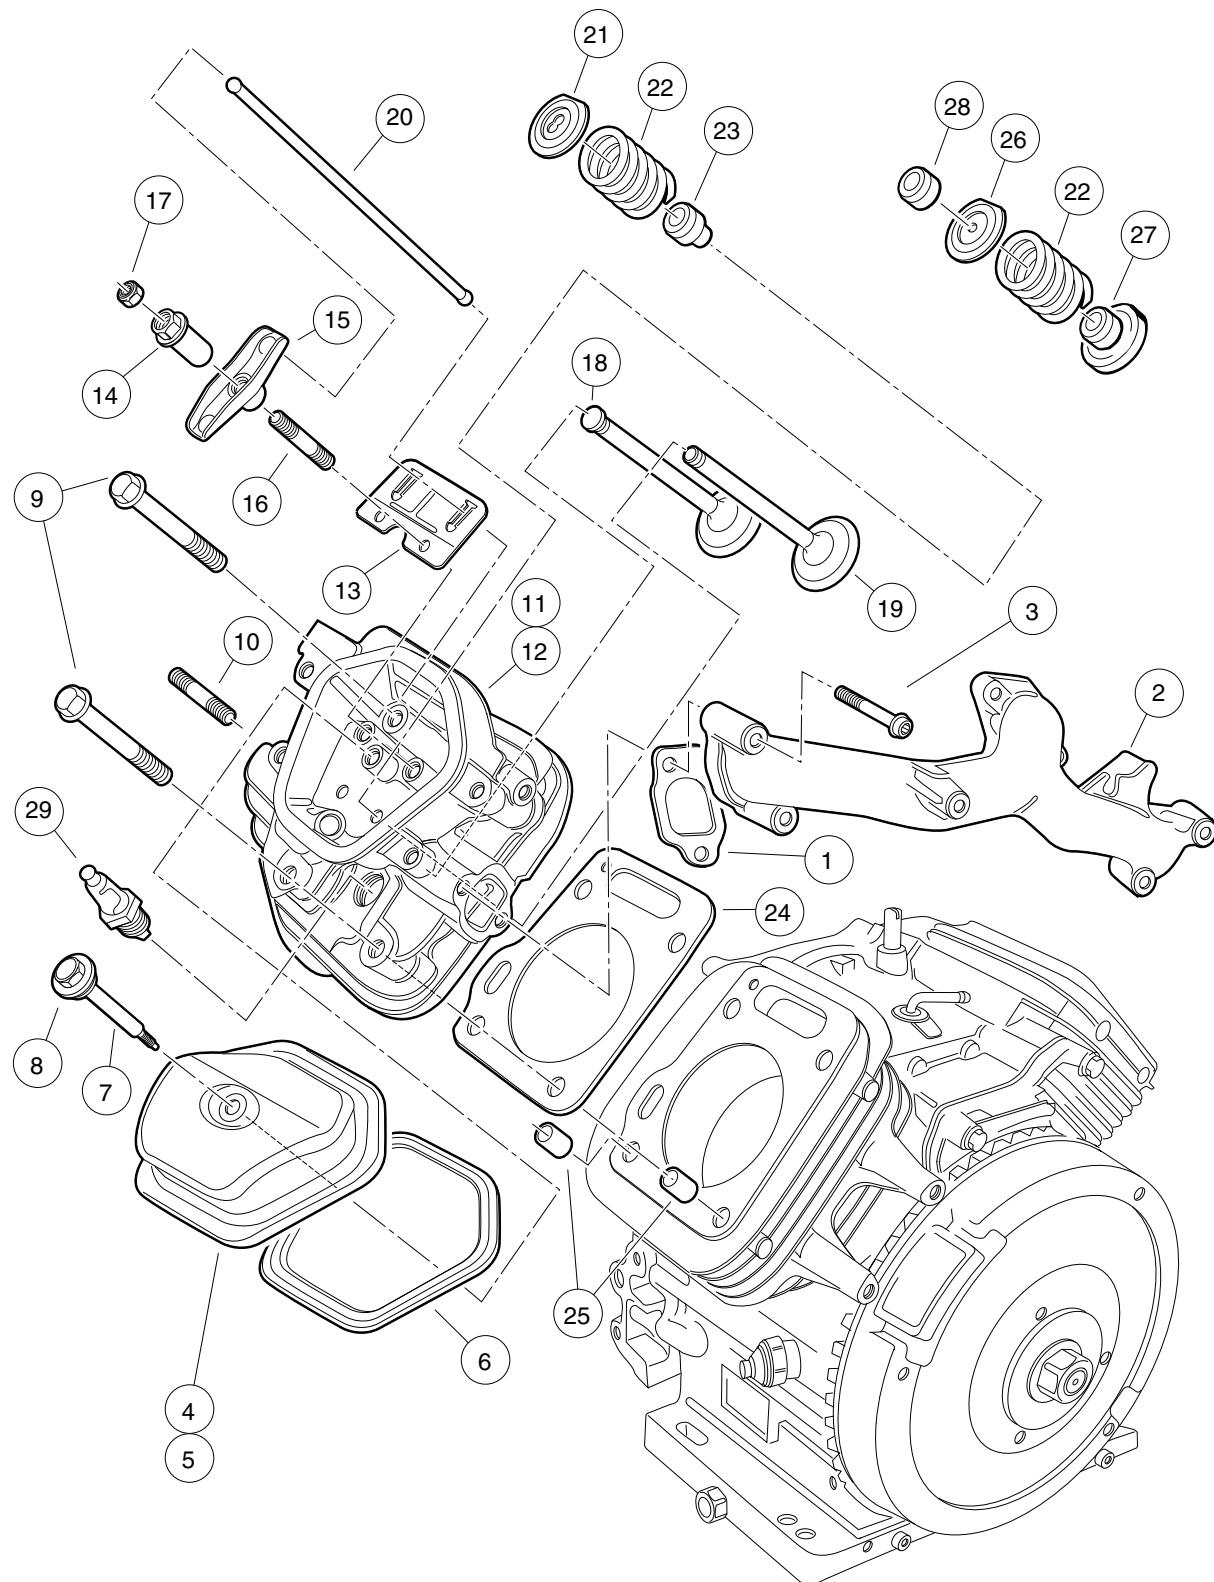9**G**


000013-001

CYLINDER HEAD

9

G


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102657601</u>	Gasket, Intake Manifold	2
2	<u>102657701</u>	Manifold, Inlet	1
3	<u>102657801</u>	Bolt, Socket, M8 X 1.25 X 45	4
4	<u>102662101</u>	Cover, Head	1
5	N/A	Cover, Head Filler	1
6	<u>102662201</u>	Gasket, Cylinder Head Cover	2
7	<u>102662301</u>	Bolt, Head Cover	2
8	<u>102662401</u>	Washer, Head Cover	2
9	<u>102662601</u>	Bolt, Flange Head, M10 X 1.5 X 80	8
10	<u>102662701</u>	Bolt, Stud, M8x22	4
11	<u>102662801</u>	Cylinder Head, #2	1
12	<u>102662802</u>	Cylinder Head, #1	1
13	<u>102662901</u>	Plate, Push Rod Guide	2
14	<u>102663001</u>	Pivot, Rocker Arm	4
15	<u>102663101</u>	Arm, Valve Rocker	4
16	<u>102663201</u>	Bolt, Pivot, M8	4
17	<u>102663301</u>	Nut, Pivot Adj	4
18	<u>102663401</u>	Valve, Ex	2
19	<u>102663501</u>	Valve, In	2
20	<u>102663801</u>	Rod, Push	4
21	<u>102663901</u>	Retainer, In Valve Spring	2
22	<u>102664001</u>	Spring, Valve	4
23	<u>102664101</u>	Seal, Valve Stem	2
24	<u>102664301</u>	Gasket, Cylinder Head	2
25	<u>102664401</u>	Pin A, Dowel ,12 X 20	4
26	<u>102722701</u>	Retainer, Ex Valve Spring	2
27	<u>102722801</u>	Seat, Valve Spring	2
28	<u>102722901</u>	Rotator, Valve	2
29	<u>AM1232301</u>	Spark Plug, BPR2ES	2

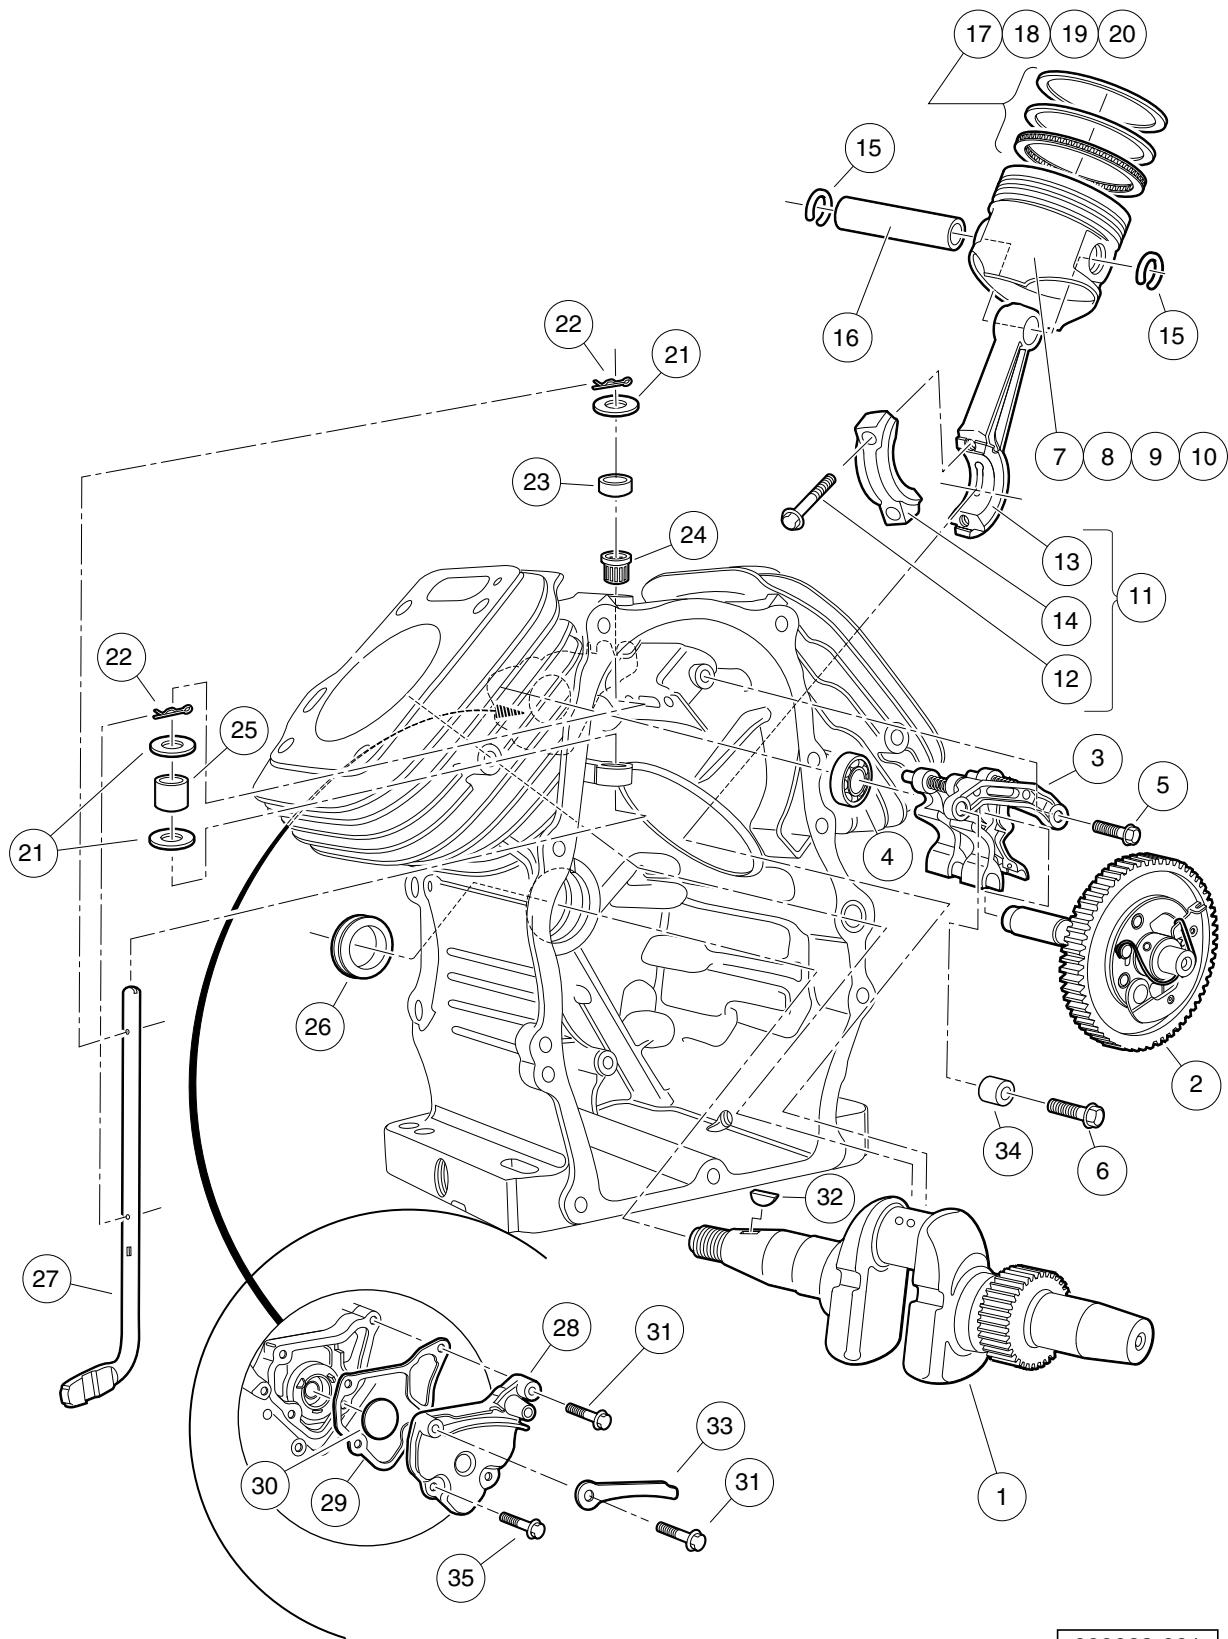

000023-001

CRANKCASE AND CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	9
1	<u>102659801</u>	Crankshaft	1
2	<u>102659901</u>	Camshaft Assembly	1
3	<u>102660001</u>	Lifter Assembly, Valve	1
4	<u>102660101</u>	Bearing, Radial Ball, 6003	1
5	<u>102660201</u>	Bolt, Flange Head, M5 X 1 X 16	1
6	<u>102660301</u>	Bolt, Flange Head, M6 X 1 X 25	1
7	<u>102660401</u>	Piston, Std	2
8	<u>102660402</u>	Piston, Over-Sized 0.25	2
9	<u>102660403</u>	Piston, Over-Sized 0.50	2
10	<u>102660404</u>	Piston, 0.75	2
11	<u>102660501</u>	Rod Assy., Connecting (includes items 12 through 14)	2
12	<u>102660901</u>	Bolt, Connecting Rod, 6 X 37	2
13	N/A	Connecting Rod	1
14	N/A	Cap, Connecting Rod	1
15	<u>102660601</u>	Clip, Piston Pin, 18mm	4
16	<u>102660701</u>	Pin, Piston	2
17	<u>102660801</u>	Ring Set, Piston, Std	2
18	<u>102660802</u>	Ring Set, Piston, OS 0.25	2
19	<u>102660803</u>	Ring Set, Piston, OS 0.50	2
20	<u>102660804</u>	Ring Set, Piston, OS 0.75	2
21	<u>102661001</u>	Washer, Plain, M8	3
22	<u>102661101</u>	Pin, Lock, 8 Mm	2
23	<u>102661201</u>	Bearing, Needle, 8 X 12.7 X 11	1
24	<u>102661202</u>	Oil Seal, 8 X 14 X 5	1
25	<u>102661301</u>	Bearing, Needle, 8 X 12 X 10	1
26	<u>102661401</u>	Oil Seal, 38 X 58 X 9	1
27	<u>102661501</u>	Shaft, Governor Arm	1
28	<u>102661601</u>	Cover, Breather	1
29	<u>102661701</u>	Gasket, Breather Cover	1
30	<u>102661801</u>	Valve, Breather	1
31	<u>102661901</u>	Bolt, Flange Head, M6 X 1 X 32	2
32	<u>102664901</u>	Key, Special Woodruff, 25 X 18	1
33	<u>102668201</u>	Clamp, Wire	1
34	<u>102725101</u>	Pin A, Dowel	1
35	<u>102725201</u>	Bolt, Flange Head, 6 X 16	1

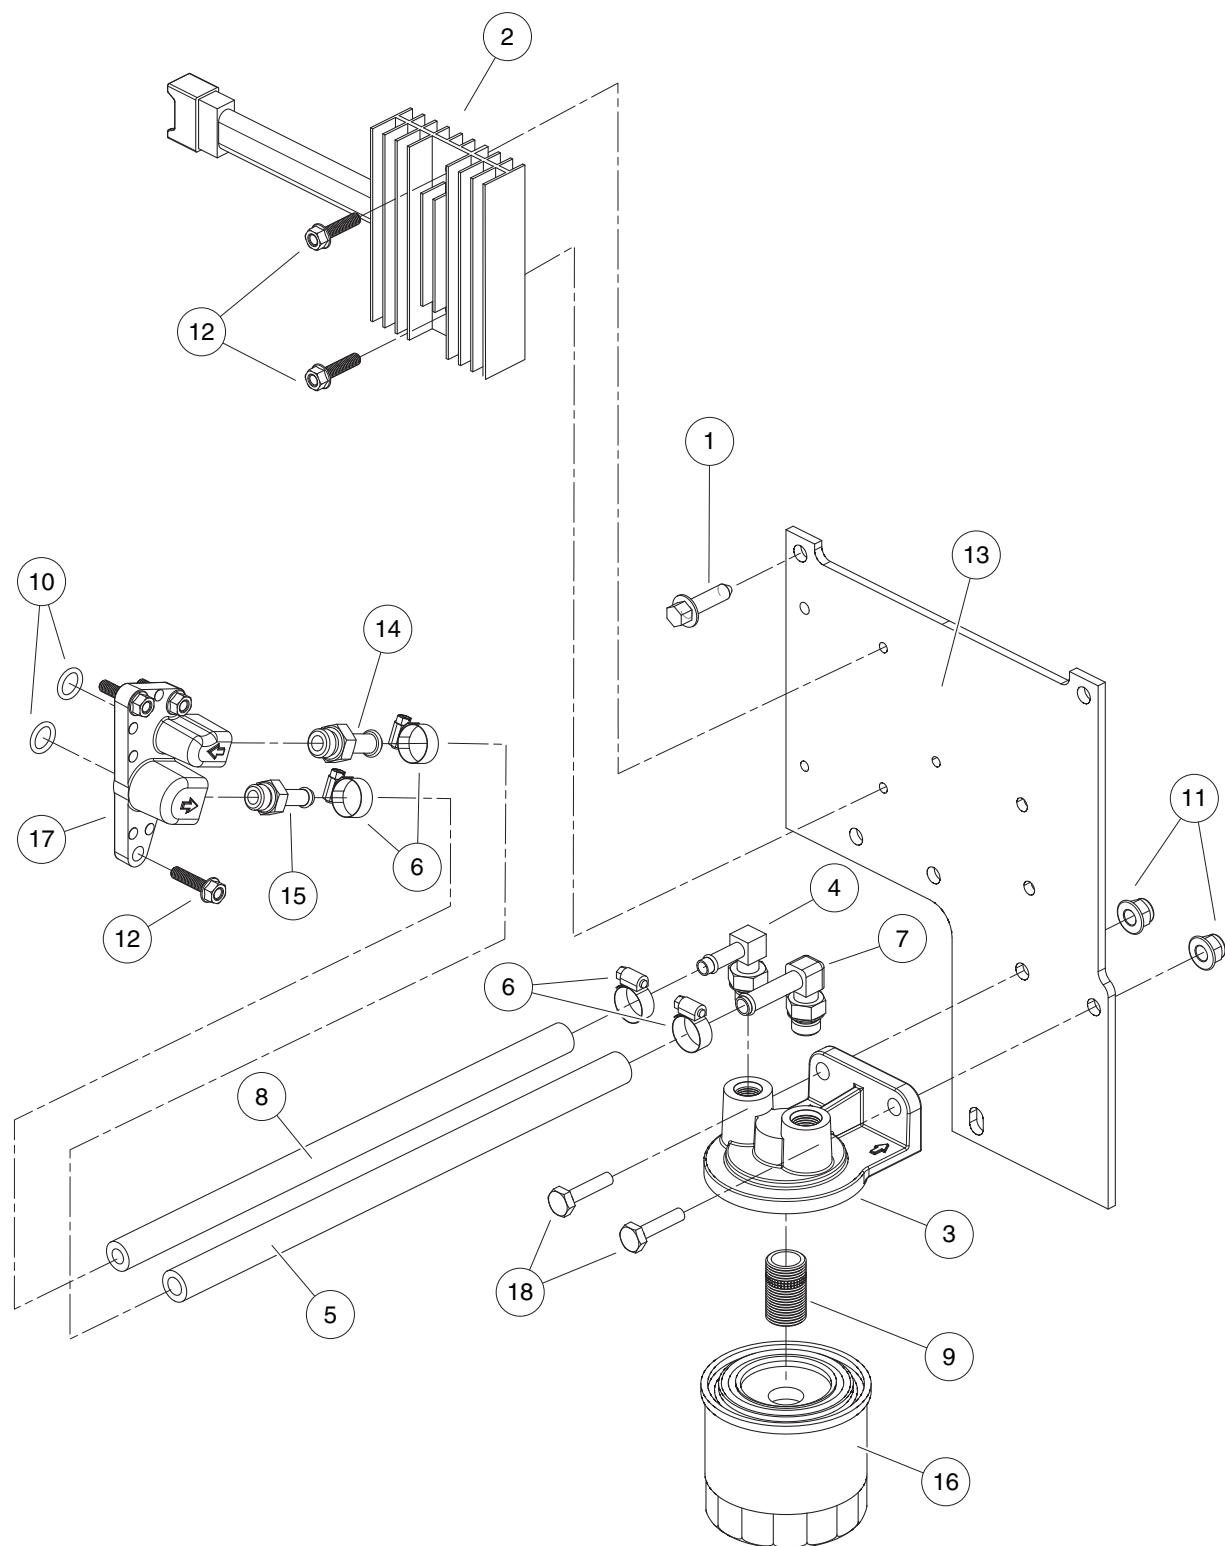9**G**

000083-001

OIL FILTER ADAPTER AND VOLTAGE REGULATOR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	9
1	<u>102289001</u>	Screw, M8X1.25X30, Hex	3
2	<u>102331401</u>	Regulator, Voltage	1
3	<u>102371401</u>	Bracket, Oil Filter Mount	1
4	<u>102434801</u>	Adapter, 90, 5/16 Tube	1
5	<u>102443501</u>	Hose, 3/8, Remote Oil, Honda	1
6	<u>102443601</u>	Clamp, Hose	4
7	<u>102457501</u>	Adapter, 90, 3/8 Tube	1
8	<u>102457601</u>	Hose, 5/16, Remote Oil, Honda	1
9	<u>102475301</u>	Nipple, M20, Remote Oil	1
10	<u>102490401</u>	O-ring 11.8 X 2.4	2
11	<u>102618601</u>	Lock Nut, Flg M8 X 1.25 Nylon	2
12	<u>102670801</u>	Screw, M6 X 1 X 25 Thd Form	5
13	<u>102710301</u>	Plate, Fuel/Oil System	1
14	<u>102721901</u>	Adapter, 3/8 Hose	1
15	<u>102722001</u>	Adapter, 5/16 Hose	1
16	<u>102827901</u>	Filter, Oil, Honda Service	1
17	<u>102849401</u>	Adapter, Oil Filter, Honda Eng	1
18	<u>96705587</u>	Bolt, M8 X 1.25 X 30	2

9


G

FUEL, INTAKE, AND GOVERNOR SYSTEM

10

G


D

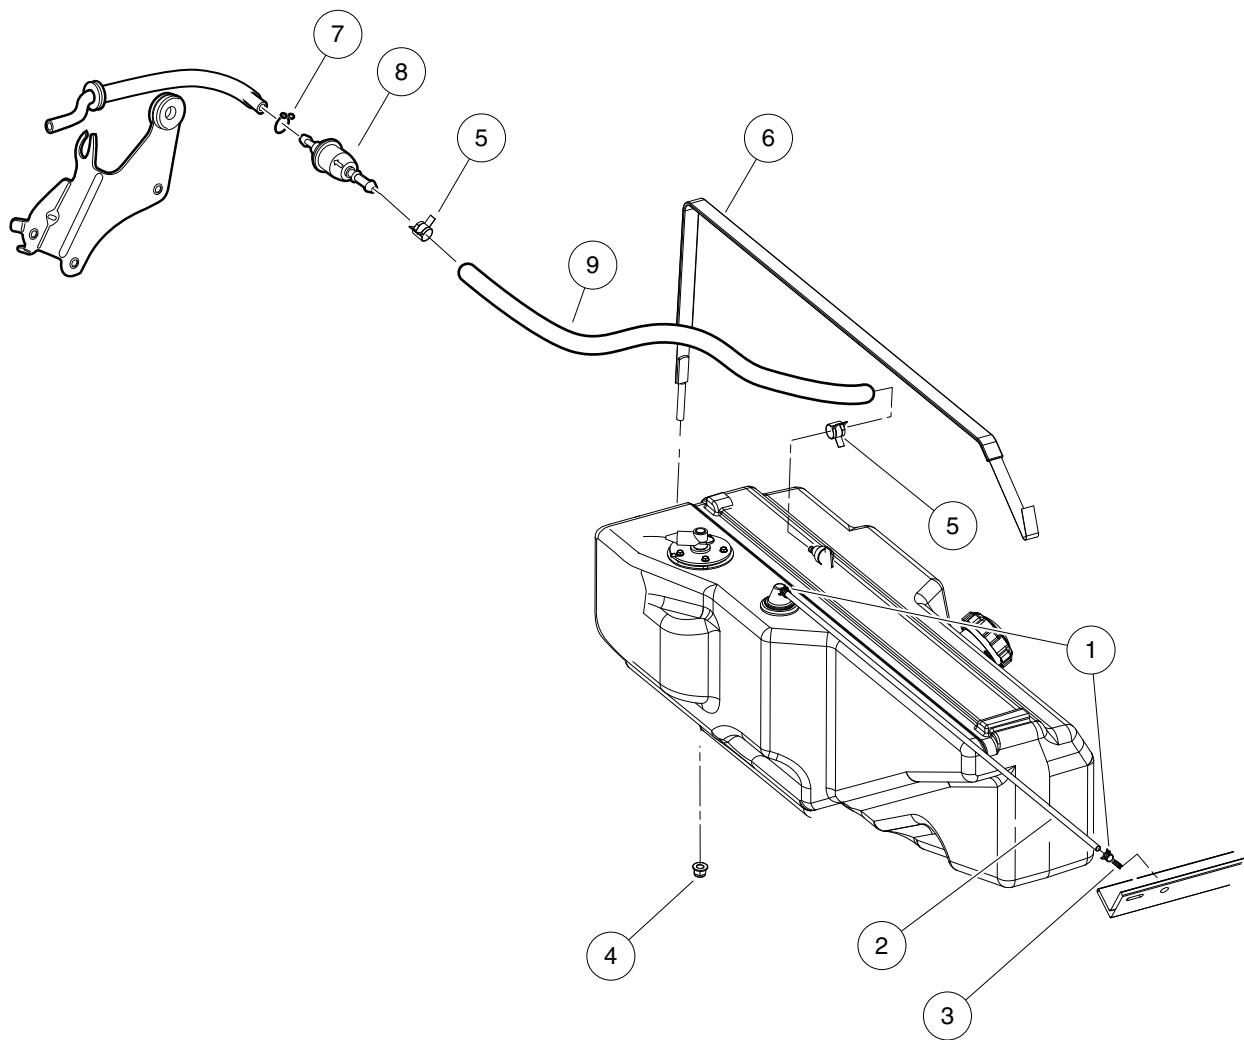10**G****D**

000081-002

FUEL SYSTEM – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		10
1	<u>1013746</u>	Clamp, 0.301 ID Hose	2	G
2	<u>101587703</u>	Hose, Fuel, Vent, 22" Long	1	
3	<u>101824401</u>	Vent Barb	1	
4	<u>102298401</u>	Nut,m8,all Metal Lock	1	
5	<u>102411202</u>	Clamp, Hose, Ctb 13mm	2	
6	<u>102426301</u>	Strap, Tank, Fuel	1	
7	<u>102657201</u>	Clip, Tube, B10	1	
8	<u>102657301</u>	Filter, Fuel	1	
9	<u>103307901</u>	Hose, Tank To Filter, Fh680d	1	D

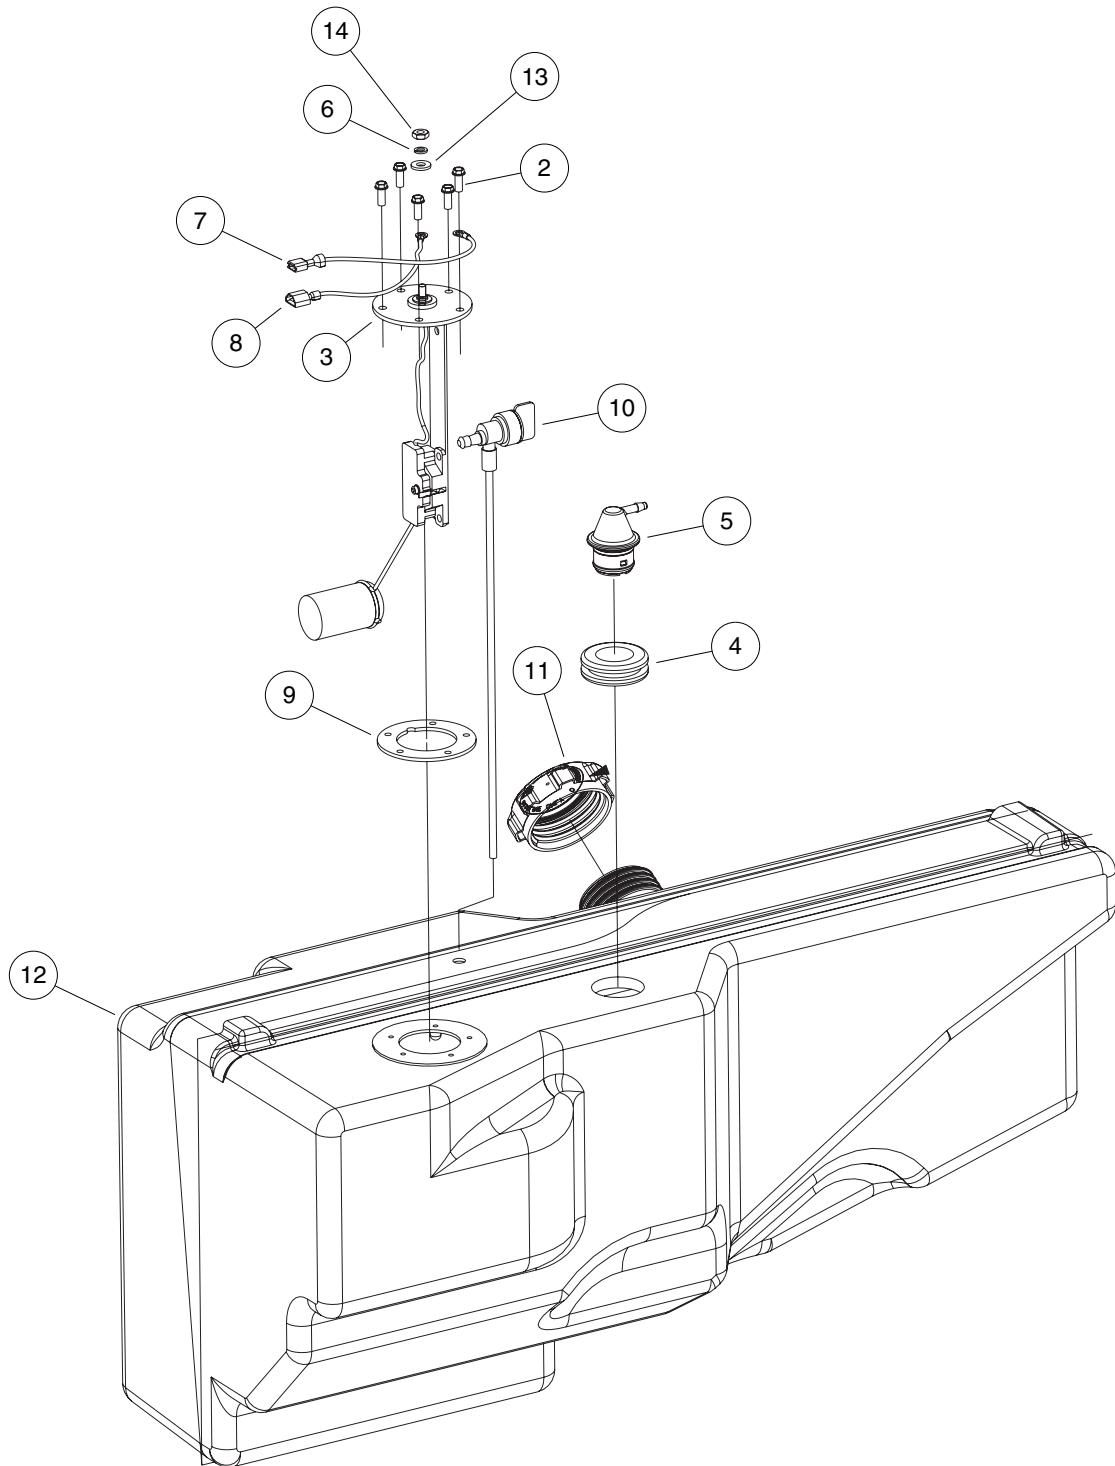10**G****D**

000082-004


FUEL TANK – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102952102</u>	Asm, Tank, Fuel, Gas, 4x4 (includes items 2 through 14)	1
2	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	5
3	<u>1013462</u>	Sending Unit, Fuel Level *	1
4	<u>1015139</u>	Insulation Grommet	1
5	<u>1015143</u>	Vent, Fuel Tank	1
6	<u>1016</u>	Lockwasher, #10 Split	1
7	N/A	Wire Asm, Blk, 170mm	1
8	N/A	Wire Asm, Org, 170mm	1
9	<u>102522001</u>	Gasket, Rubber	1
10	<u>102670901</u>	Valve, Pickup Tube, Fuel	1
11	<u>102751601</u>	Cap, Fuel Tank, Gasoline	1
12	N/A	Tank, Fuel, Gas, 4x4	1
13	<u>183</u>	Washer, #10 Type A Flat	1
14	<u>8797</u>	Nut, #10-32 Brass Hex	1
		* Note: Must replace fuel sending unit gasket when servicing this component.	

10

G


D

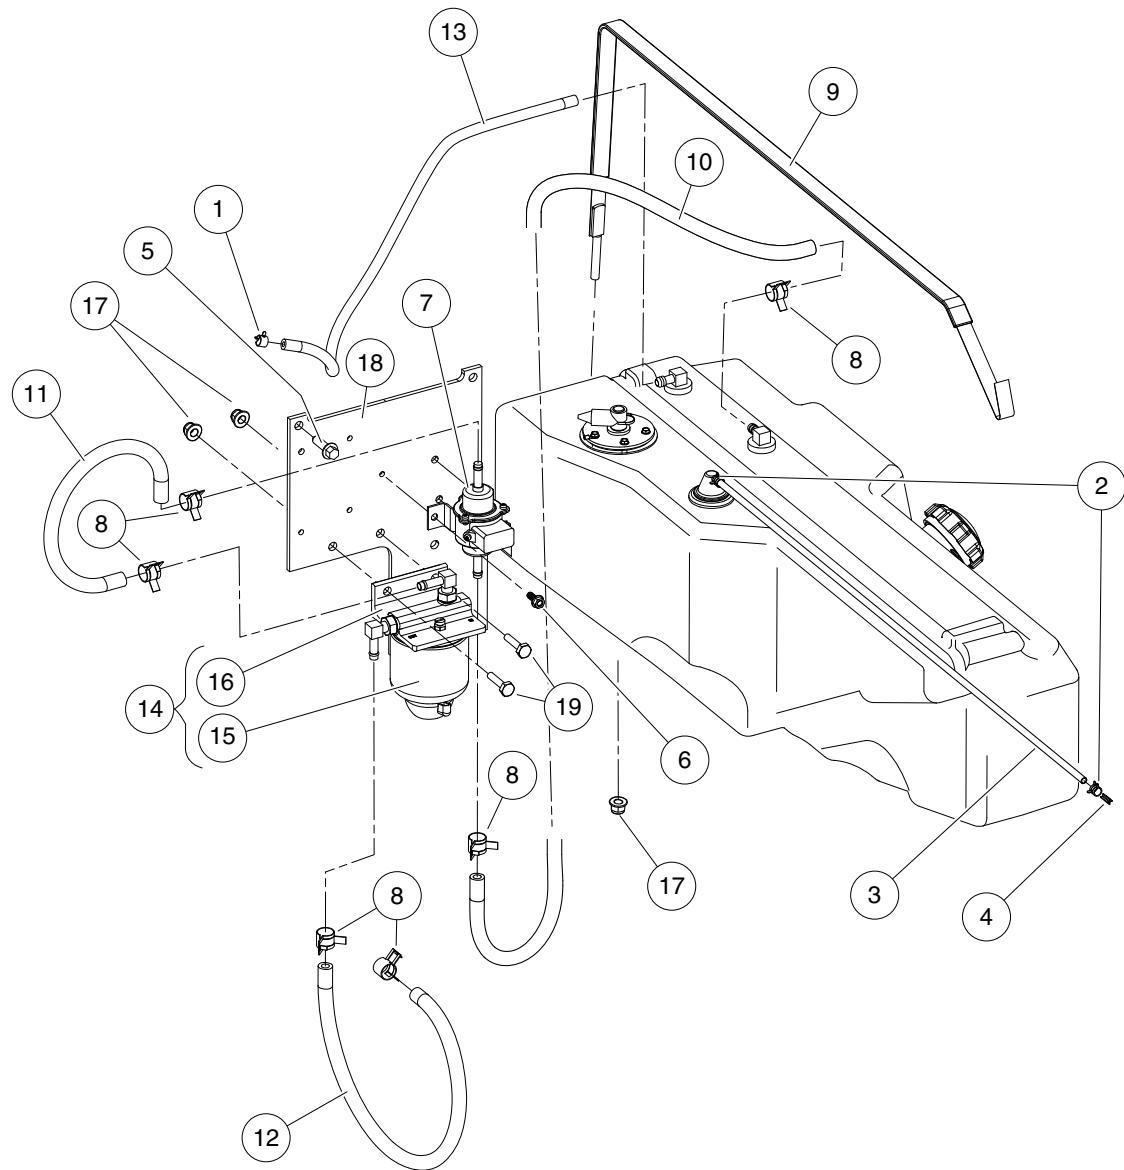10**G****D**

000081-005

FUEL SYSTEM – DIESEL VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		10
1	<u>101313402</u>	Clamp, Green Hose	1	G
2	<u>1013746</u>	Clamp, 0.301 ID Hose	2	
3	<u>101587703</u>	Hose, Fuel, Vent, 22" Long	1	
4	<u>101824401</u>	Vent Barb	1	D
5	<u>102289001</u>	Screw, M8X1.25X30, Hex	5	
6	<u>102296716</u>	Screw, M6 X 16 Tt Hx Fl Hd	1	
7	<u>102410801</u>	Pump, Diesel Fuel Electric	1	
8	<u>102411203</u>	Clamp, Hose, Ctb 14mm	5	
9	<u>102426301</u>	Strap, Tank, Fuel	1	
10	<u>102430001</u>	Hose, Tank To Prefilter Diesel	1	
11	<u>102430201</u>	Hose, Fuel Pump To Filter	1	
12	<u>102430301</u>	Hose, Fuel Filter To Eng	1	
13	<u>102430401</u>	Hose, Fuel Return	1	
14	<u>102434601</u>	Filter Assy, Fuel	1	
15	<u>102434701</u>	Filter, Fuel	1	
16	<u>102434801</u>	Adapter, 90, 5/16 Tube	2	
17	102618601	Lock Nut, Flg M8 X 1.25 Nylon	3	
18	<u>102710301</u>	Plate, Fuel/Oil System	1	
19	<u>96705587</u>	Bolt, M8 X 1.25 X 30	2	

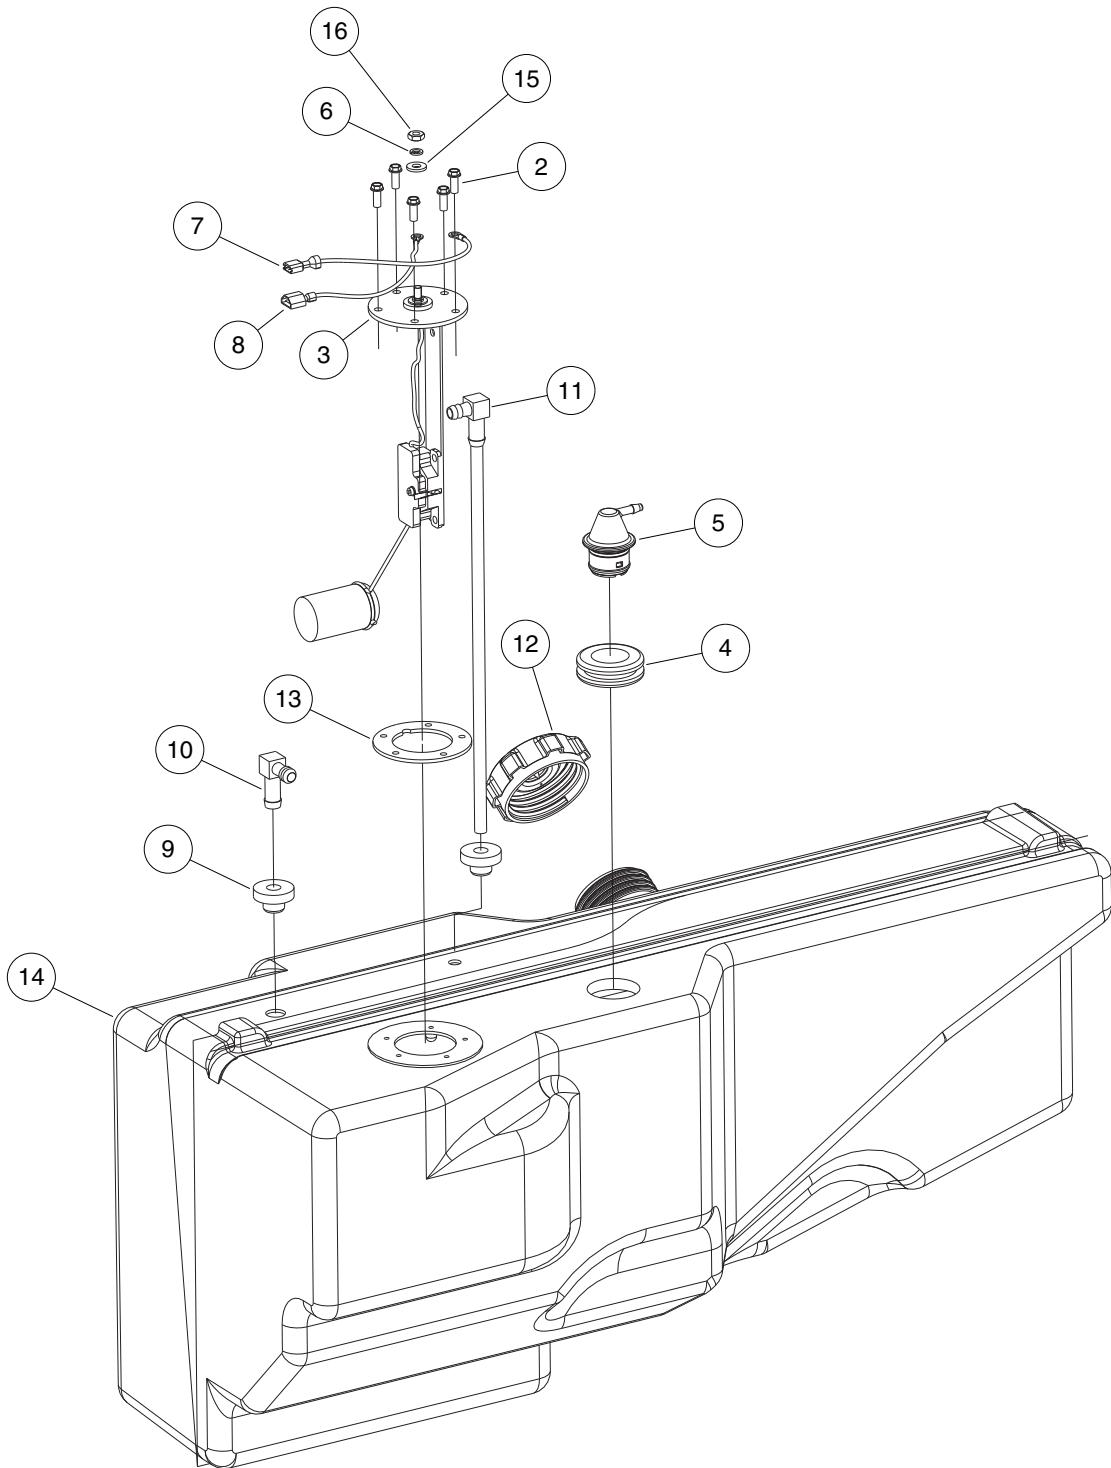10**G****D**

000082-005

FUEL TANK – DIESEL VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102952101</u>	Asm, Tank, Fuel, Diesel, 4x4 (includes items 2 through 16)	1
2	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	5
3	<u>1013462</u>	Sending Unit, Fuel Level *	1
4	<u>1015139</u>	Insulation Grommet	1
5	<u>1015143</u>	Vent, Fuel Tank	1
6	<u>1016</u>	Lockwasher, #10 Split	1
7	N/A	Wire Asm, Blk, 170mm	1
8	N/A	Wire Asm, Org, 170mm	1
9	<u>102406701</u>	Bushing, Line, Return	2
10	<u>102406801</u>	Elbow, 90 Barbed	1
11	<u>102478501</u>	Pickup Tube, Fuel	1
12	<u>102494701</u>	Cap, Fuel (Diesel)	1
13	<u>102522001</u>	Gasket, Rubber	1
14	N/A	Tank, Fuel, Diesel, 4x4	1
15	<u>183</u>	Washer, #10 Type A Flat	1
16	<u>8797</u>	Nut, #10-32 Brass Hex	1

* Note: Must replace fuel sending unit gasket when servicing this component.

10

G

D

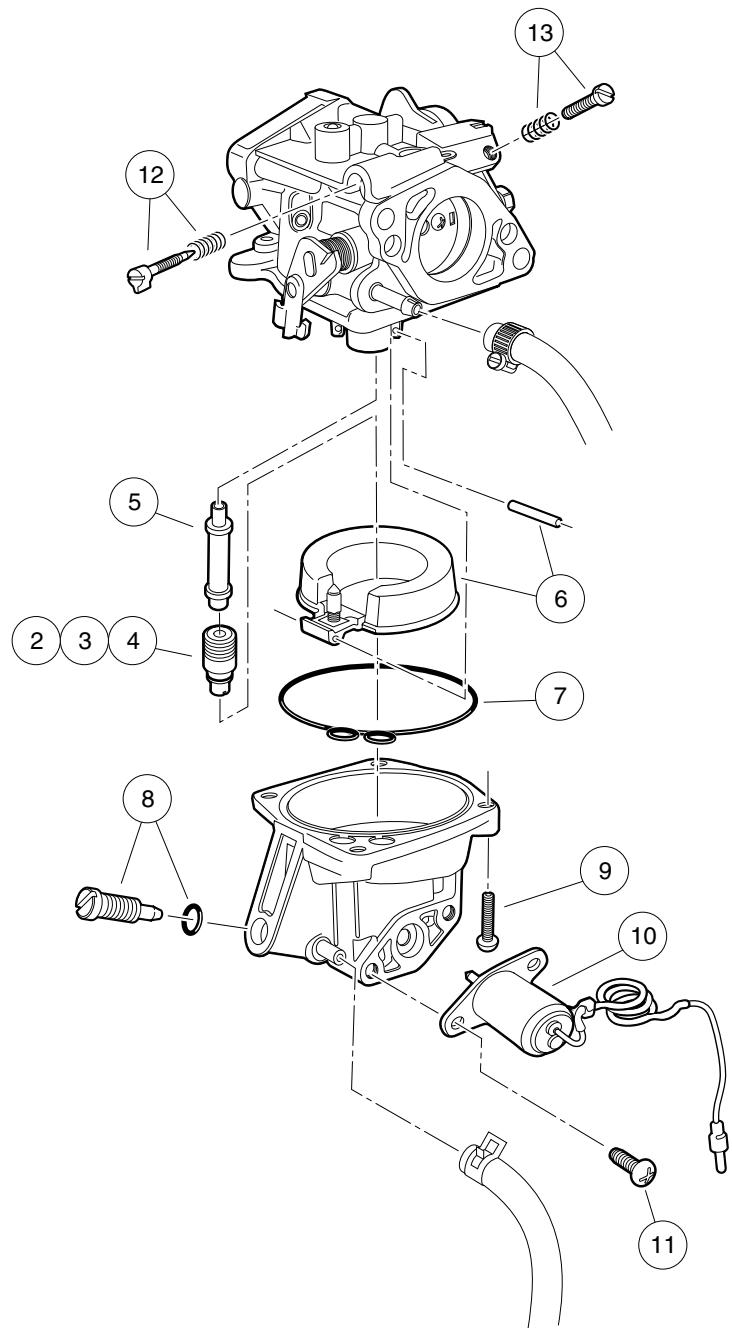10**G****D**

000020-001


CARBURETOR ASSEMBLY, HONDA GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103201601</u>	Carburetor, Seal Shaft (includes items 2 through 13)	1
2	<u>102623802</u>	Jet, GX620, #102 (8000 ft. and higher (2438 m and higher))	1
3	<u>102623805</u>	Jet, GX620, #105 (5000-8000 ft. (1524-2438 m))	1
4	<u>102623808</u>	Jet, GX620, #108 (0-5000 ft. (0-1524 m))	1
5	<u>102655401</u>	Nozzle, Main	1
6	<u>102655501</u>	Float Set	1
7	<u>102655601</u>	Gasket Set	1
8	<u>102655701</u>	Screw Set, Drain	1
9	<u>102655801</u>	Screw-Washer, M4 X 14	4
10	<u>102655901</u>	Valve Assy., Solenoid	1
11	<u>102656001</u>	Screw-Washer, M5 X 12	2
12	<u>102724101</u>	Screw Set, Left	1
13	<u>102724201</u>	Screw Set, Right	1

10

G

D

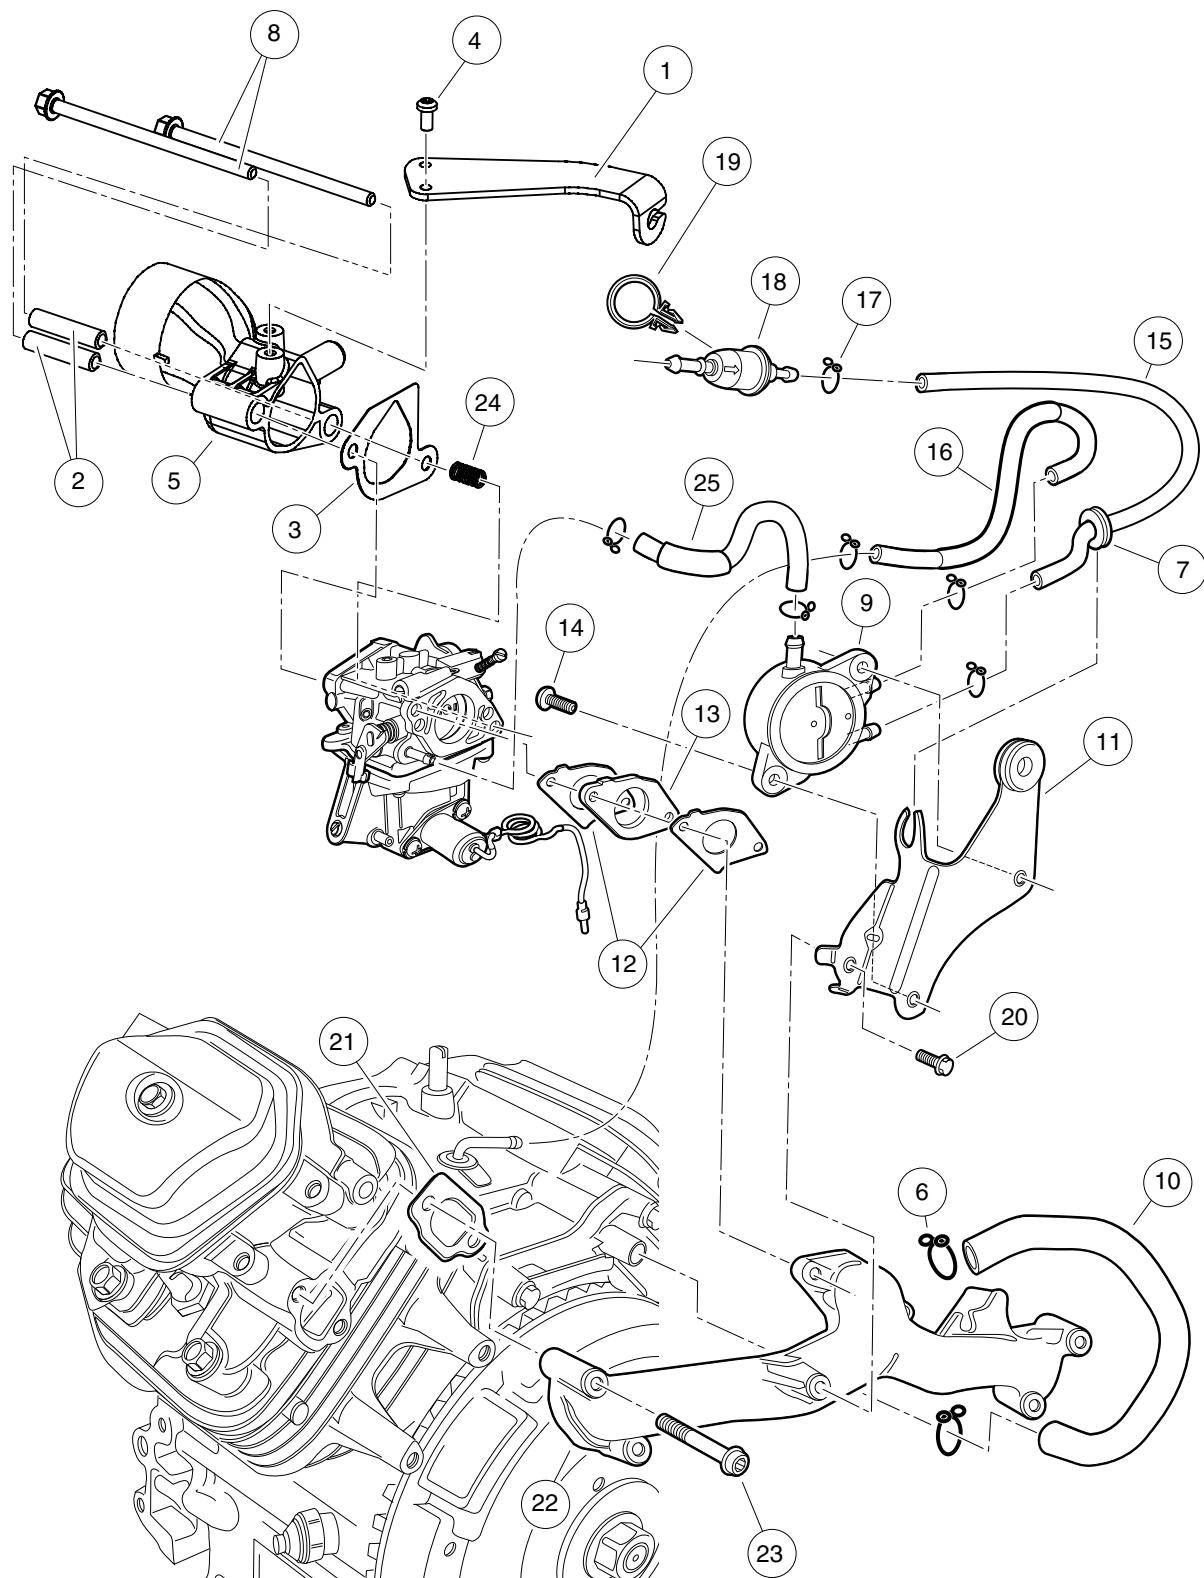10**G****D**

000021-001


CARBURETOR INSTALLATION – HONDA GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	10
1	<u>102385801</u>	Bracket, Choke Cable	1
2	<u>102462601</u>	Insert, Adapter, Carburetor	2
3	<u>102493001</u>	Gasket, Adapter, Carburetor	1
4	<u>102617301</u>	Screw Tapping, M5 X 0.8x10	2
5	<u>102620801</u>	Adapter, Intake Honda GX620	1
6	<u>102656101</u>	Clip, Breather Tube	1
7	<u>102656201</u>	Grommet, Reserve Tank	1
8	<u>102656301</u>	Bolt, Flange Head, M6 X 1 X 120	2
9	<u>102656402</u>	Pump Assy., Fuel, Sup	1
10	<u>102656501</u>	Tube, Breather	1
11	<u>102656601</u>	Stay, Fuel Pump	1
12	<u>102656701</u>	Gasket, Carburetor	2
13	<u>102656801</u>	Insulator, Carburetor	1
14	<u>102656901</u>	Srew-Washer, M6 X 16	2
15	<u>102657001</u>	Tube B, Fuel	1
16	<u>102657101</u>	Tube, Diaphragm	1
17	<u>102657201</u>	Clip, Tube, B10	3
18	<u>102657301</u>	Filter, Fuel	1
19	<u>102657401</u>	Clip, Wire Harness	1
20	<u>102657501</u>	Bolt, Flange Head, M6 X 11 X 4	2
21	<u>102657601</u>	Gasket, Intake Manifold	2
22	<u>102657701</u>	Manifold, Inlet	1
23	<u>102657801</u>	Bolt, Socket, M8 X 1.25 X 45	4
24	<u>102710501</u>	Spring, Continuity, Solenoid	1
25	<u>102725401</u>	Tube A, Fuel	1

10

G

D

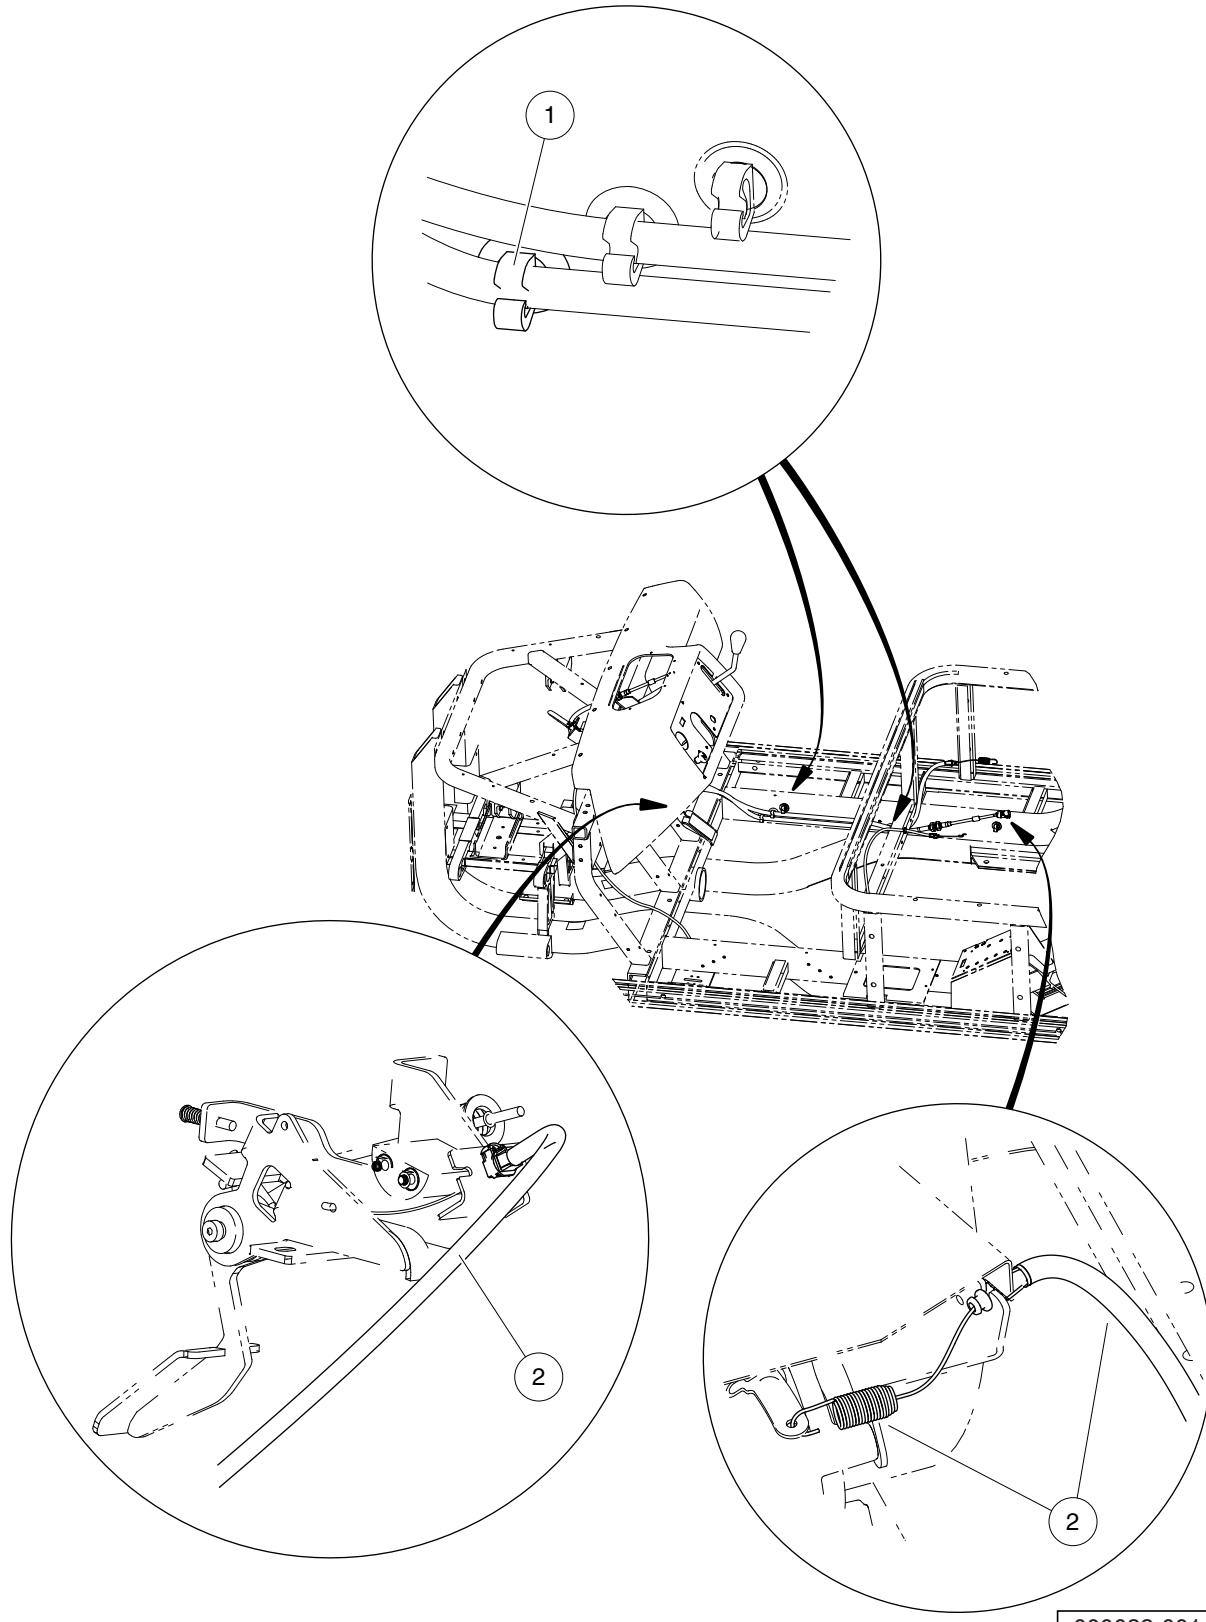

000033-001


GOVERNOR AND ACCELERATOR CABLES, GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	
1	<u>102475701</u>	1 2 3 4 Clip, Brake Line	2	10
2	<u>102498701</u>	Cable, Accelerator, GX620	1	G

10

G

D

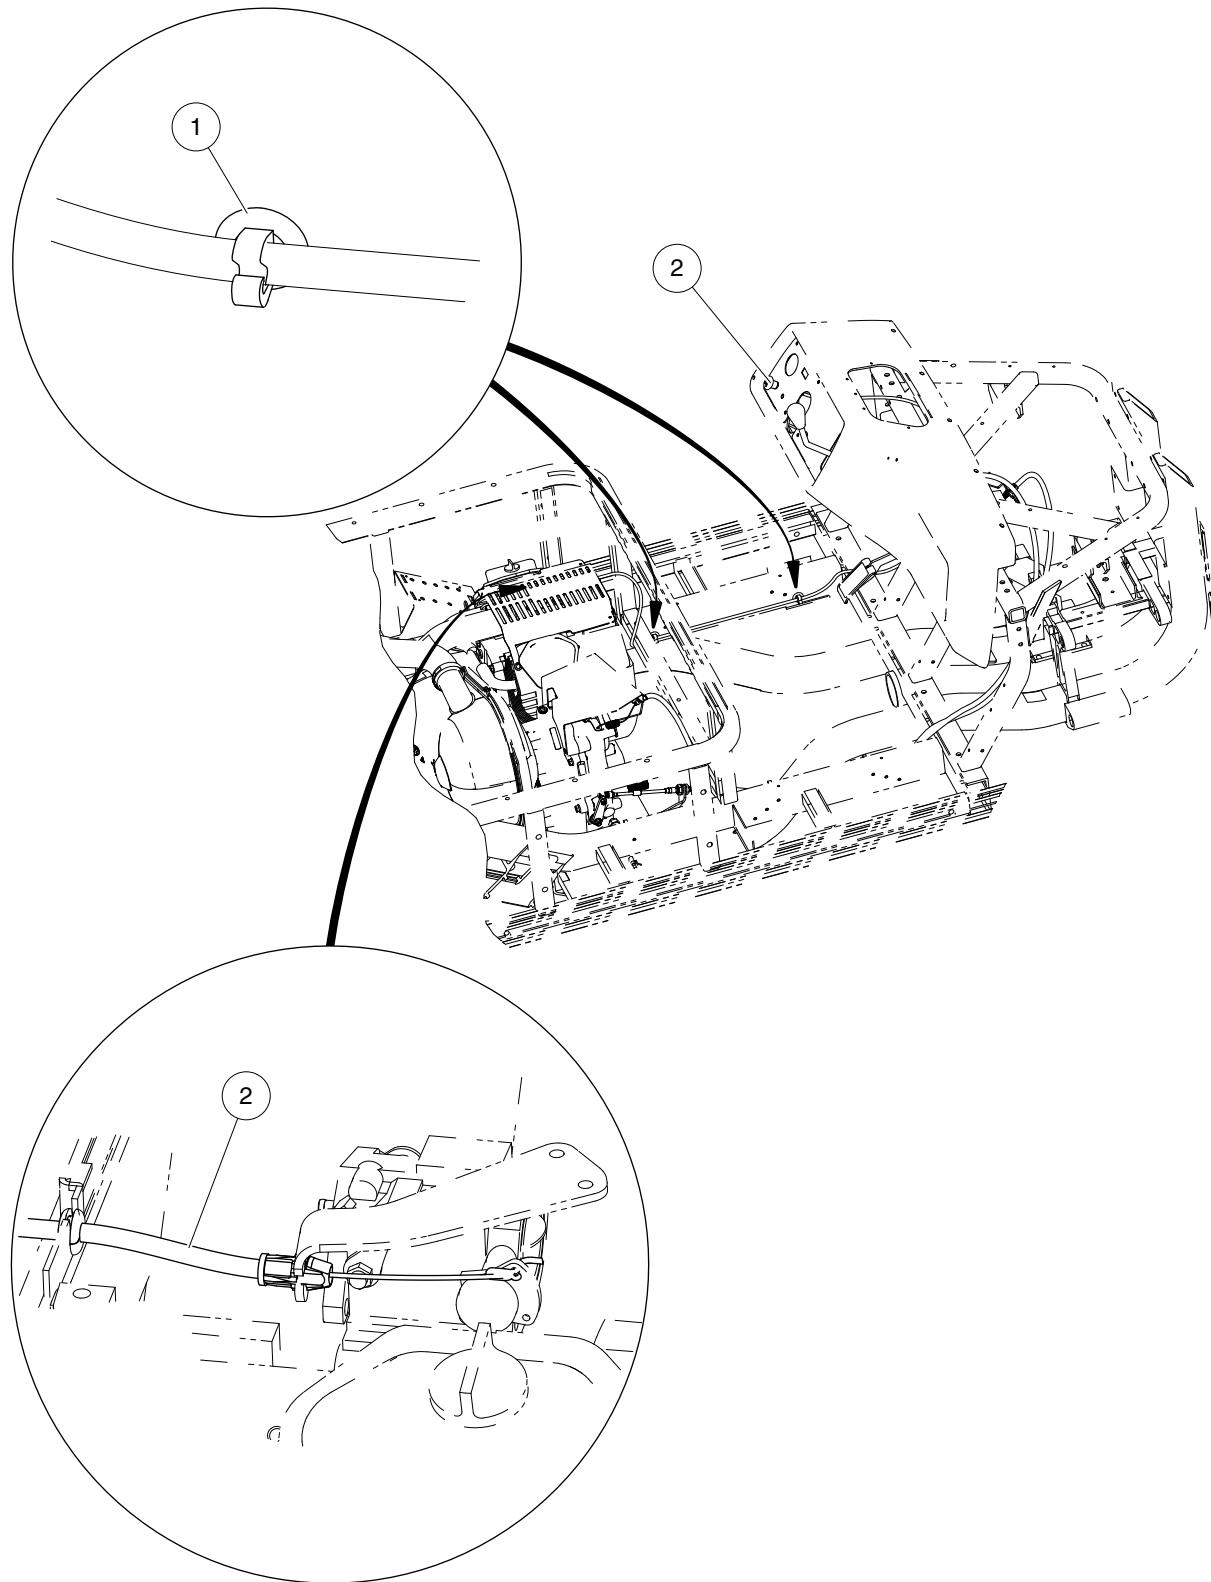

000034-001

CHOKE CABLE, GASOLINE VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY	
1	<u>102475701</u>	Clip, Brake Line	2	10
2	<u>102826101</u>	Cable, Choke	1	G

D

10

G

D

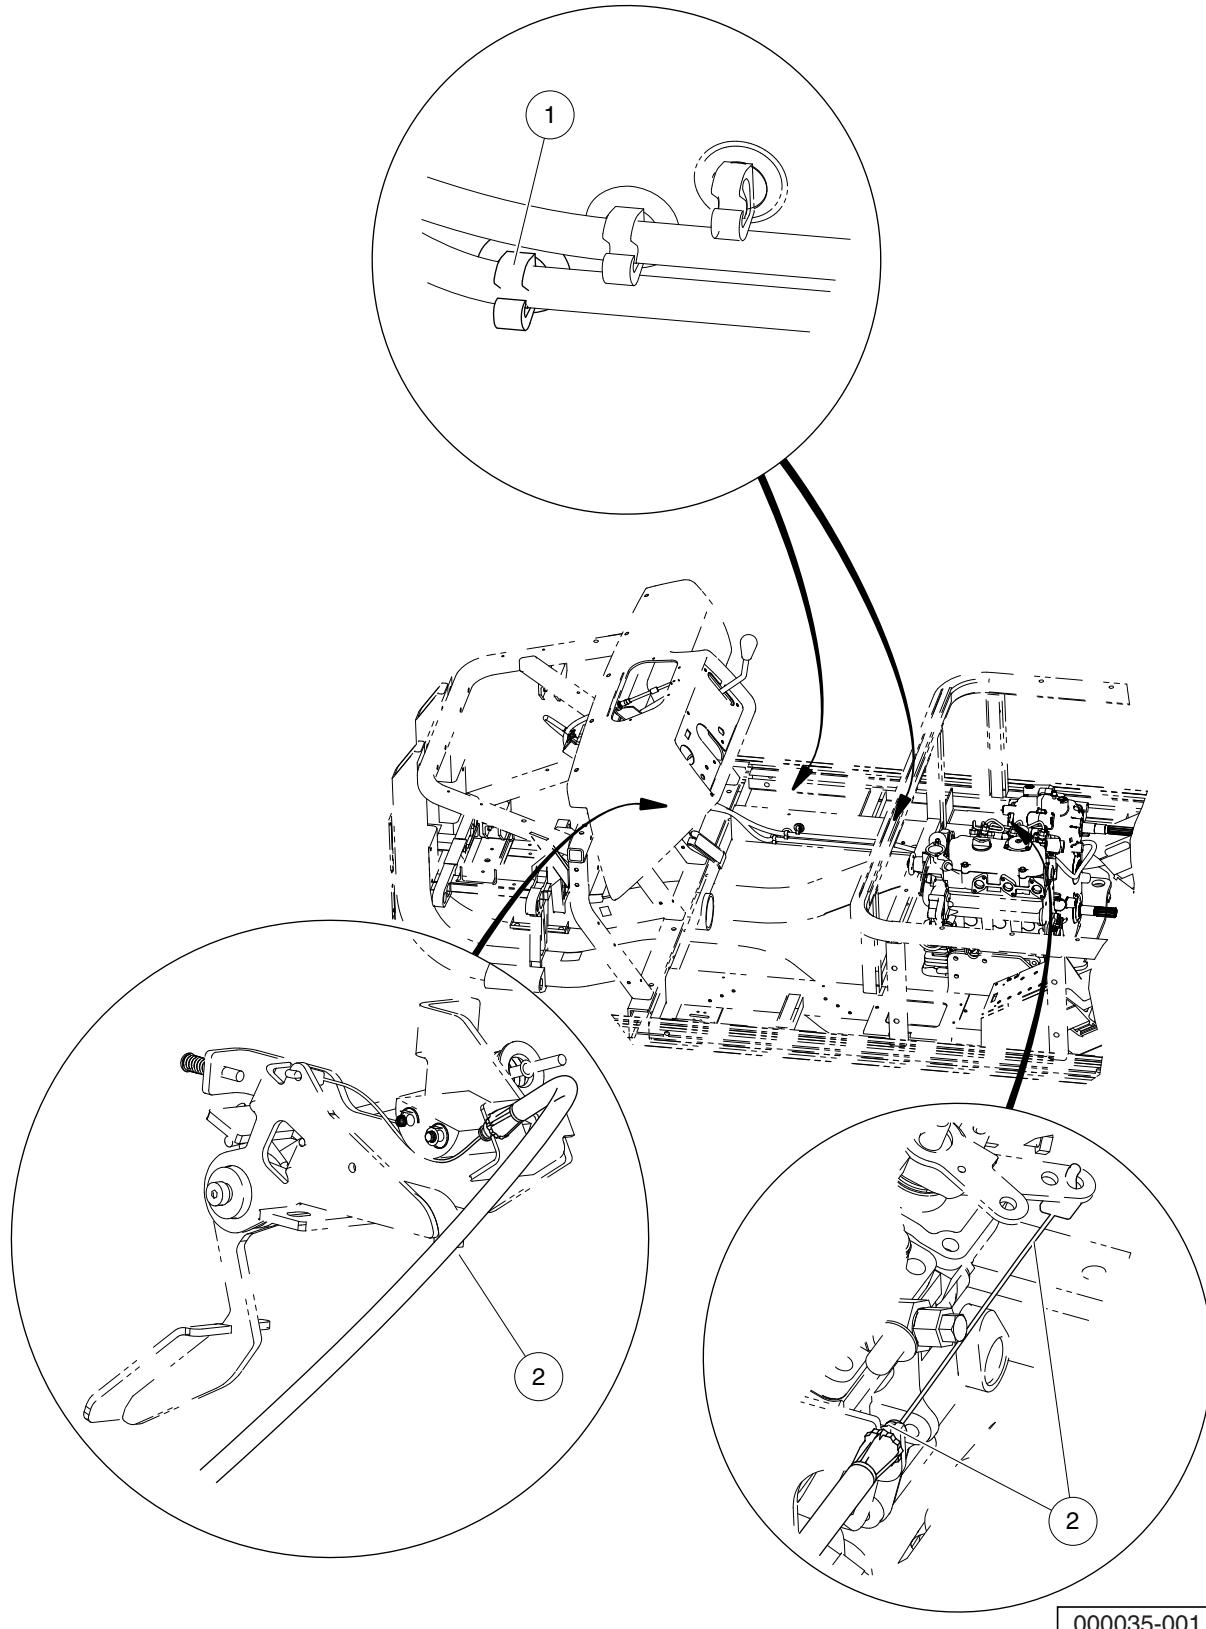

000035-001

ACCELERATOR CABLE, DIESEL VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY	
1	<u>102475701</u>	Clip, Brake Line	2	10
2	<u>102498801</u>	Cable, Accelerator, Diesel	1	G

D

10

G


D

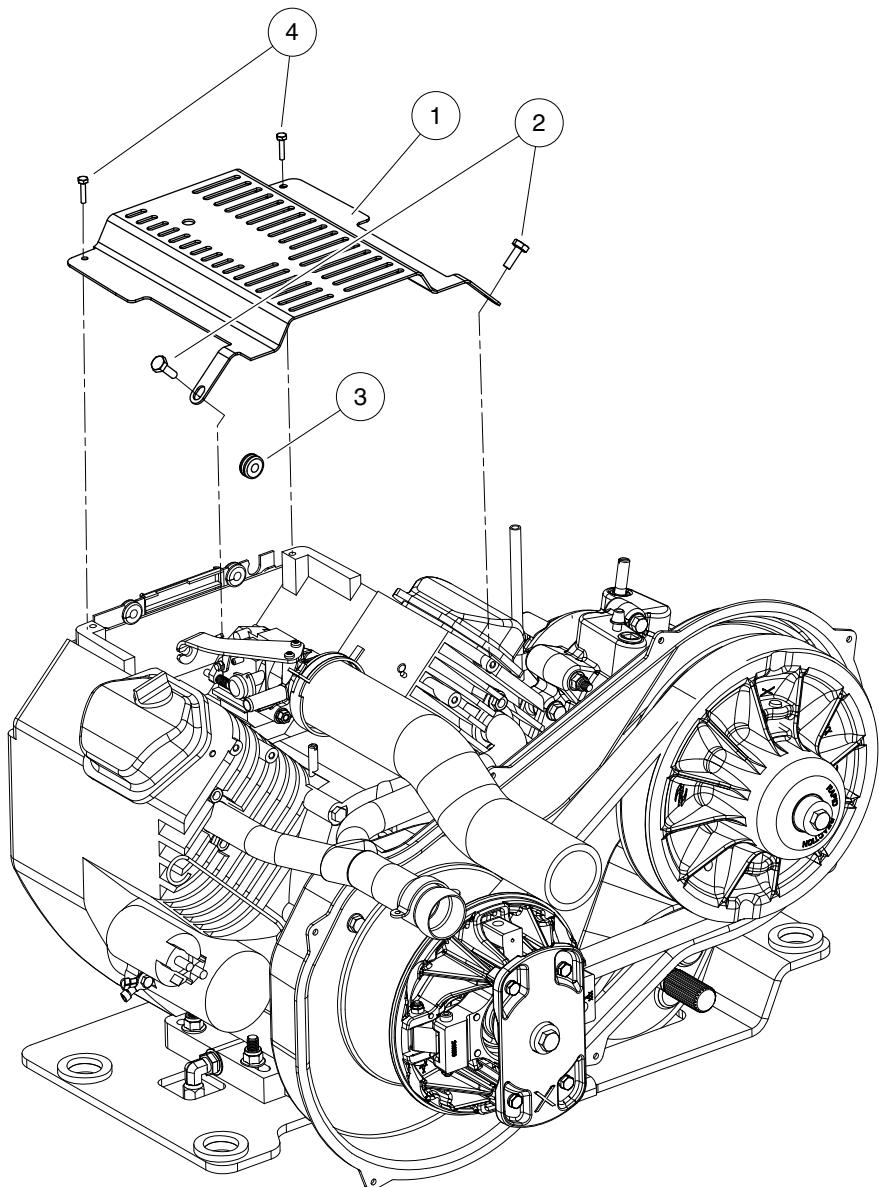

000085-001

GOVERNOR COVER – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		10
1	<u>102451001</u>	Cover, Engine, Honda	1	G
2	<u>102498101</u>	Bolt, M8 X 1.25 X 20	2	
3	<u>102707101</u>	Grommet, Split, 50 Durometer	2	
4	<u>96705736</u>	Bolt, M5 X .8 X 20	2	D

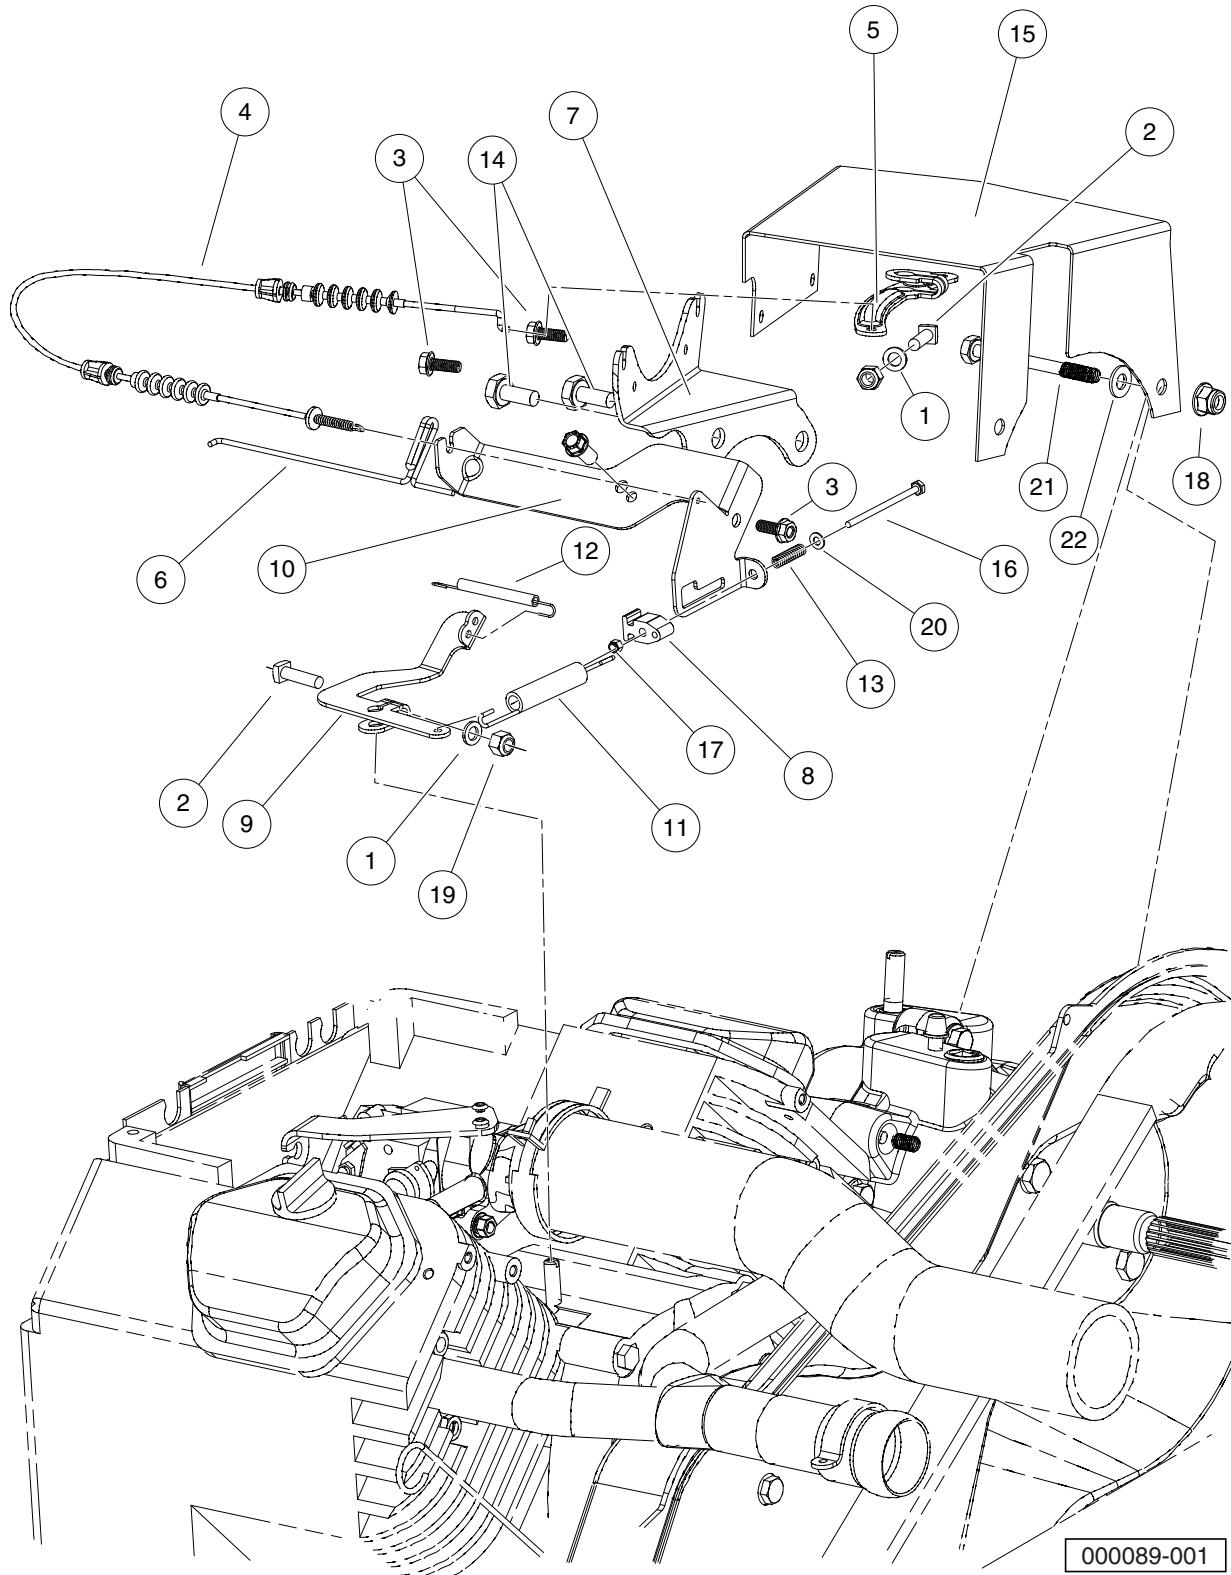10**G****D**

000089-001


GOVERNOR SYSTEM – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014007</u>	Washer, 1/4 Flat	2
2	<u>101886101</u>	Screw, 1/4-20 X 1.00 Square-Head	2
3	<u>102296716</u>	Screw, M6 X 16 Tt Hx Fl Hd	3
4	<u>102423701</u>	Cable, Engine Governor	1
5	<u>102433101</u>	Bracket, Governor, Arm, Trans	1
6	<u>102433501</u>	Wire, Governor	1
7	<u>102451201</u>	Bracket, Governor, Trans Cable	1
8	<u>102452301</u>	Adjuster, Spring, Idle	1
9	<u>102454801</u>	Bracket, Arm, Gov, Engine	1
10	<u>102454901</u>	Bracket, Cable, Gov, Engine	1
11	<u>102457001</u>	Spring	1
12	<u>102457101</u>	Spring, Carb	1
13	<u>102457201</u>	Spring, Compression, Adj, Idle	1
14	<u>102490101</u>	Bolt, M10 X 1.5 X 20 Loctite	2
15	<u>102499601</u>	Guard, Governor, Ground Speed	1
16	<u>102616801</u>	Bolt, M4 X .7 X 60	1
17	<u>102616901</u>	Nut Flg, M4 X 0.7 Mech Def	1
18	<u>102618601</u>	Lock Nut, Flg M8 X 1.25 Nylon	1
19	<u>8233</u>	Locknut, 1/4-20 Nylon Insert	2
20	<u>96714464</u>	Washer, M4	1
21	<u>96718978</u>	Bolt, M8 X 1.25 X 80	1
22	<u>96741038</u>	Washer, M8 Hard	1

10

G


D

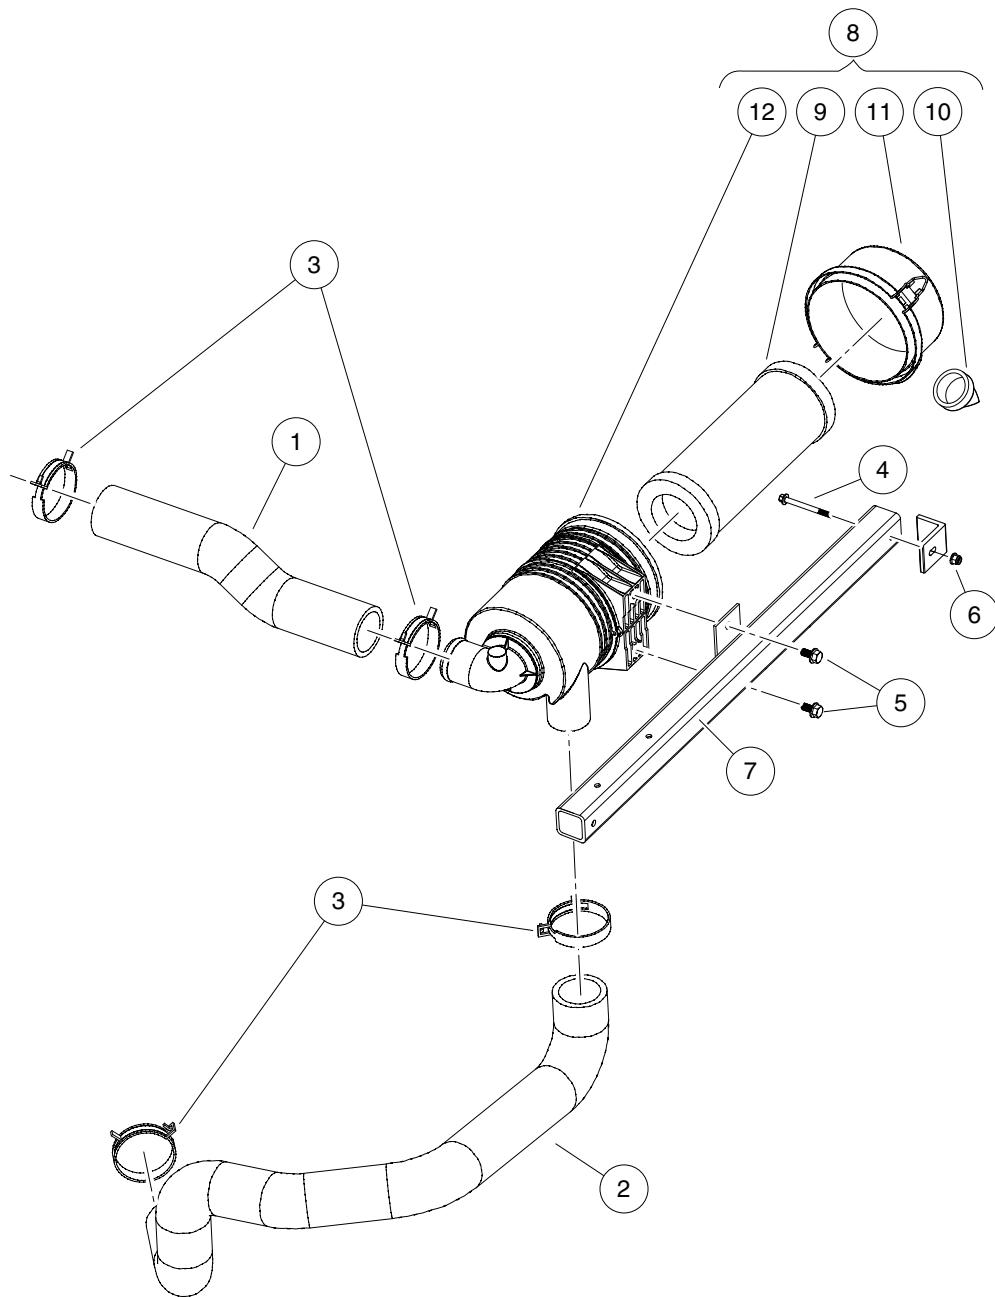10**G****D**

000090-001

INTAKE DUCT AND AIR BOX ASSEMBLY – HONDA GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		10
1	<u>102378901</u>	Hose, Intake, GX620	1	G
2	<u>102395601</u>	Hose, Intake, Primary	1	
3	<u>102411210</u>	Clamp, Hose, Ctb 64mm	4	
4	<u>102541465</u>	Bolt, M 6 X 1.0 X 65 Hex, Flange, Head, Black	2	
5	<u>102621201</u>	Bolt Flanged Head, M8 X1.25x 16 with Loctite	2	
6	<u>102621501</u>	Nut Flg, M6 X 1.0 Nylon	2	
7	N/A	Weldment, Support, Air Cleaner	1	
8	<u>102810701</u>	Filter, Air, Canister, W/labe (includes items 9 through 12)	1	
9	<u>102498601</u>	Element, Filter, Air, 5 In	1	
10	<u>102725501</u>	Valve, Evacuator, Filter Air	1	
11	<u>102725601</u>	Cap, Latch Lock, Filter, Air	1	
12	N/A	Body, Canister, Filter, Air	1	

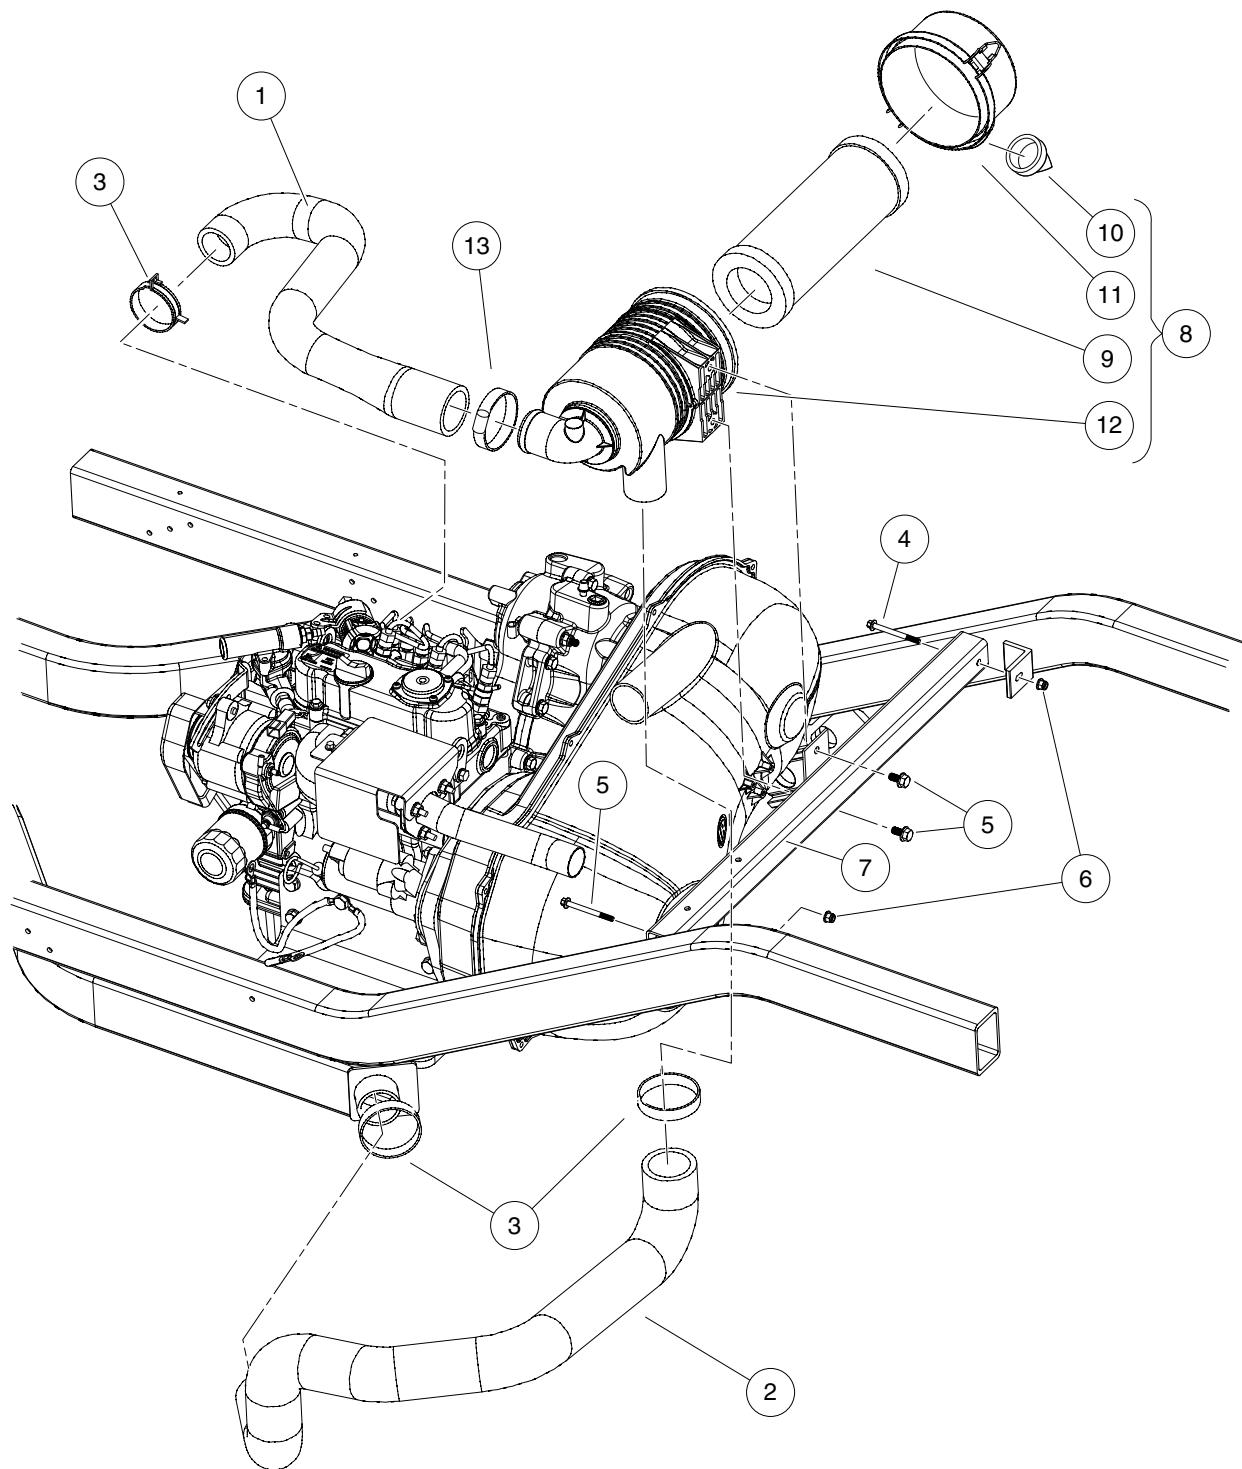10**G****D**

000090-002

INTAKE DUCT AND AIR BOX ASSEMBLY – DIESEL VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		10
1	<u>102379001</u>	Hose, Intake, D722	1	G
2	<u>102395601</u>	Hose, Intake, Primary	1	
3	<u>102411209</u>	Clamp, Hose, Ctb 55mm	3	
4	<u>102541465</u>	Bolt, M 6 X 1.0 X 65 Hex, Flange, Head, Black	2	
5	<u>102621201</u>	Bolt Flanged Head, M8 X1.25x 16 with Loctite	2	
6	<u>102621501</u>	Nut Flg, M6 X 1.0 Nylon	2	
7	N/A	Weldment, Support, Air Cleaner	1	
8	<u>102810701</u>	Filter, Air, Canister, W/labe (includes items 9 through 12)	1	
9	<u>102498601</u>	Element, Filter, Air, 5 In	1	
10	<u>102725501</u>	Valve, Evacuator, Filter Air	1	
11	<u>102725601</u>	Cap, Latch Lock, Filter, Air	1	
12	N/A	Body, Canister, Filter, Air	1	
13	<u>103441401</u>	Clamp, Worm Screw, Hose, 2"	1	

10

G

D

EXHAUST SYSTEM

11


G

D

11

G

D

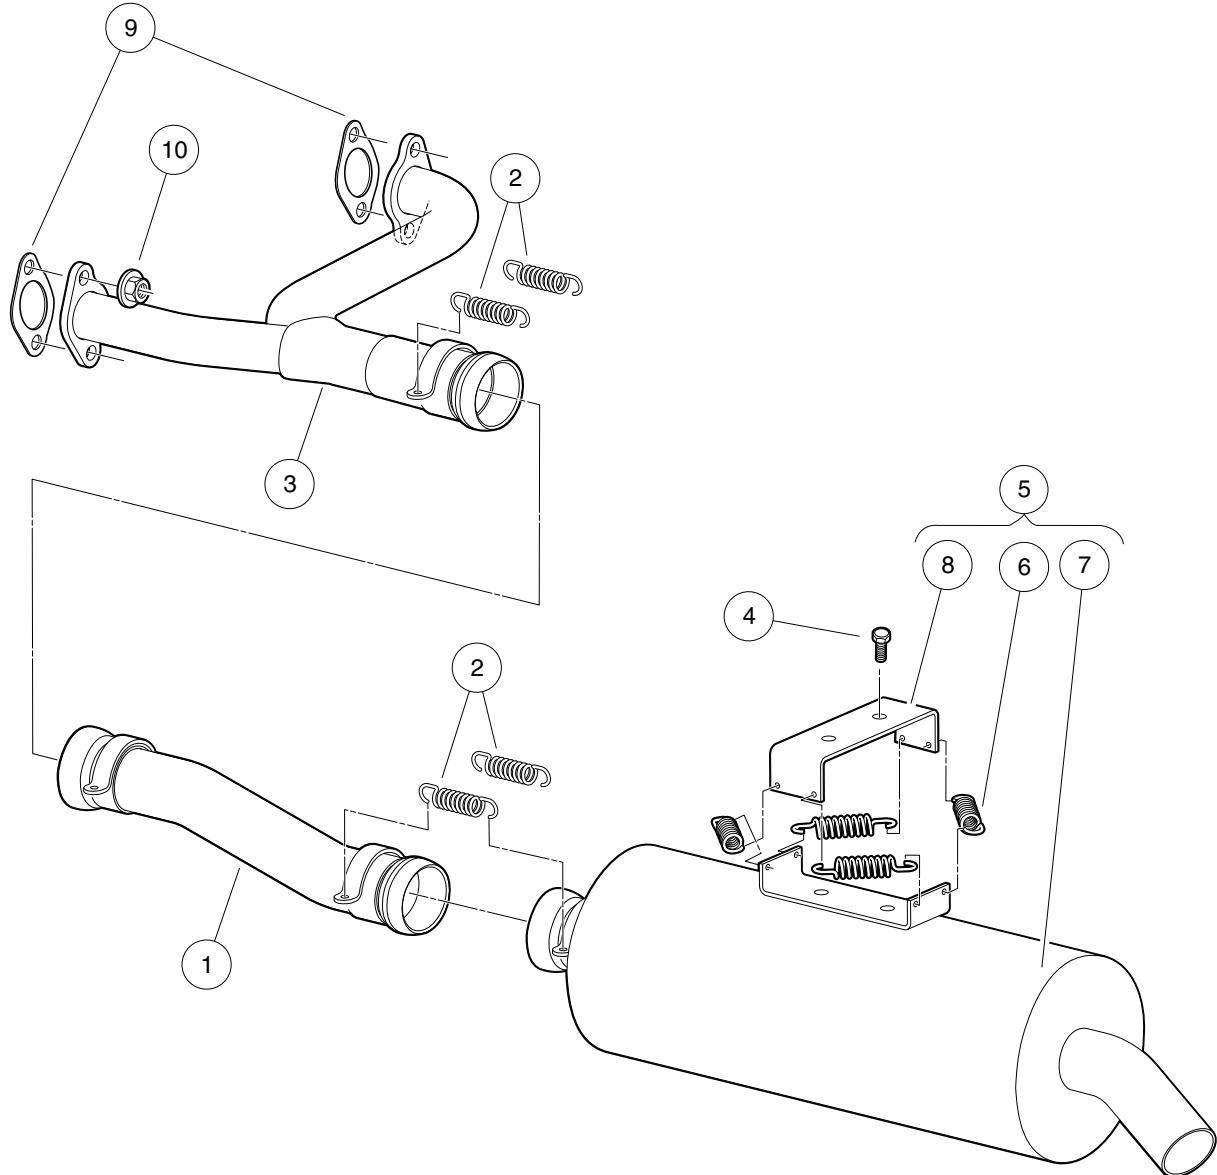

000075-001


EXHAUST SYSTEM, GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102409401</u>	Pipe, Exhaust Intermediate	1
2	<u>102409501</u>	Spring, Exhaust	4
3	<u>102409601</u>	Header, Exhaust, Gas	1
4	<u>102621201</u>	Bolt Flanged Head, M8 X1.25x 16 with Loctite	2
5	<u>102812801</u>	Asm, Muffler, AWD Homologation (includes items 6 through 8)	1
6	<u>102409501</u>	Spring, Exhaust	4
7	N/A	Muffler	1
8	N/A	Bracket, Muffler	1
9	<u>102834901</u>	Gasket, Exhaust, Gx620	2
10	<u>96704416</u>	Nut Flg, M8 X 1.25 Serrated	4

11

G

D

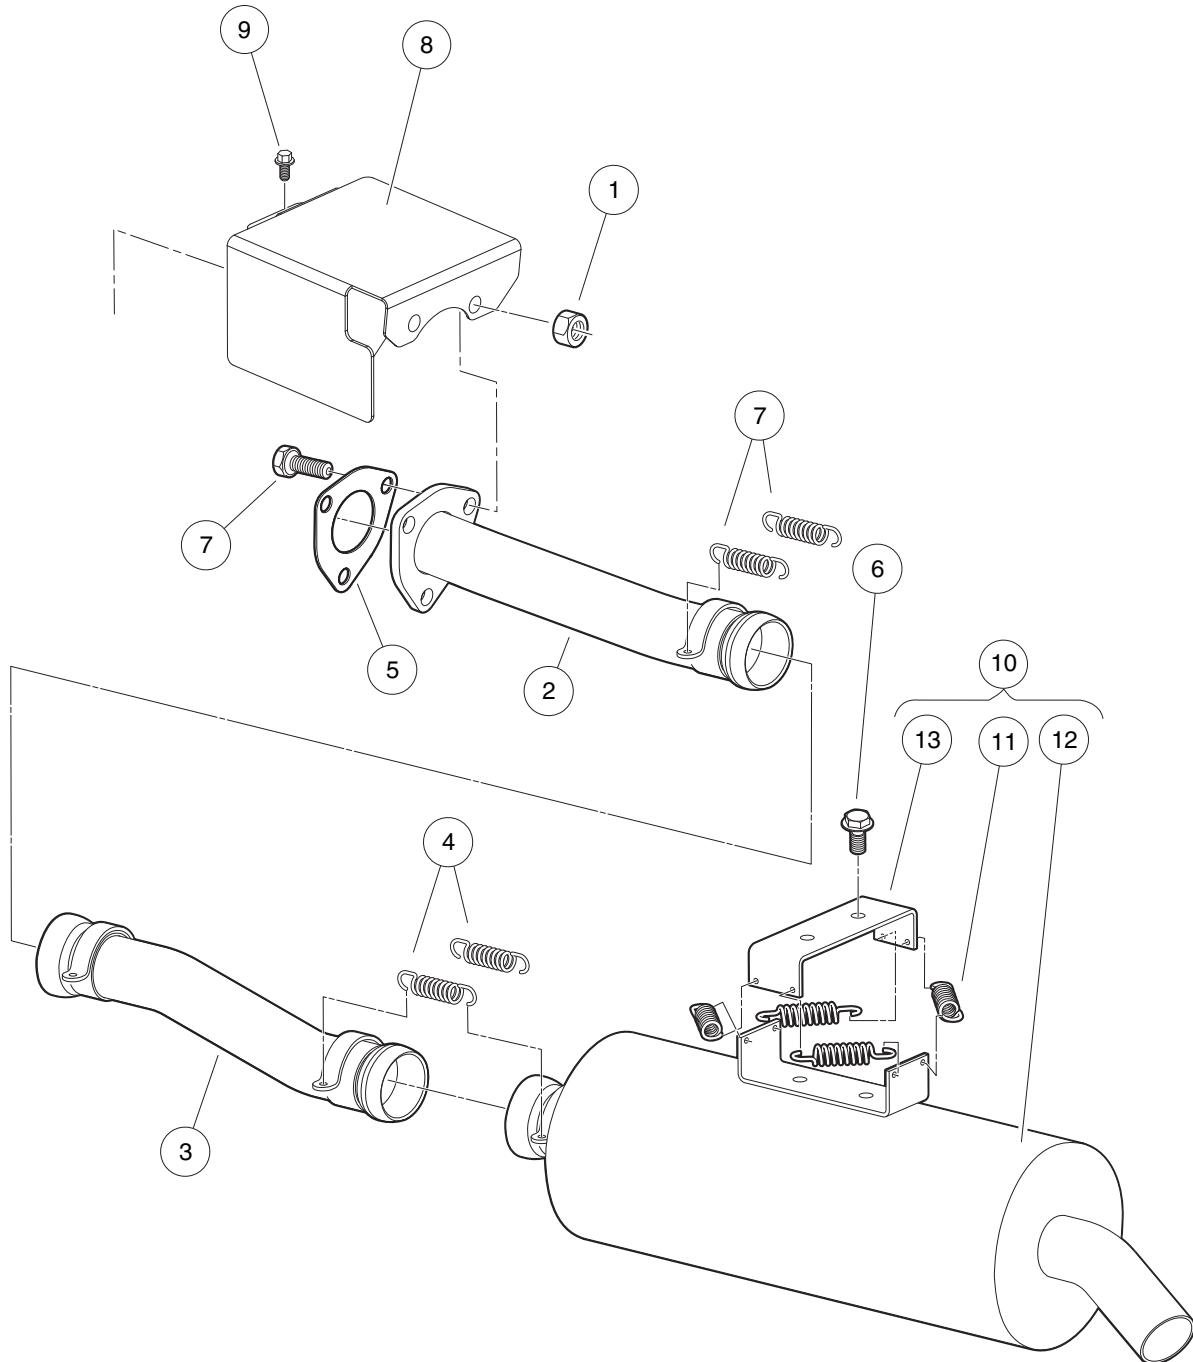11**G****D**

000075-002

EXHAUST SYSTEM, DIESEL VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102298401</u>	Nut,m8,all Metal Lock	3
2	<u>102409301</u>	Pipe, Exhaust Diesel Main	1
3	<u>102409401</u>	Pipe, Exhaust Intermediate	1
4	<u>102409501</u>	Spring, Exhaust	4
5	<u>102422301</u>	Gasket, Exhaust Diesel	1
6	<u>102621201</u>	Bolt Flanged Head, M8 X1.25x 16 with Loctite	2
7	<u>102621301</u>	Bolt, M8 X 1.25 X 40 with Loctite	3
8	<u>102628101</u>	Shield, Diesel Exhaust	1
9	<u>102731601</u>	Bolt, D722, Exhst Manfld Cover	1
10	<u>102812801</u>	Asm, Muffler, AWD Homologation (includes items 11 through 13)	1
11	<u>102409501</u>	Spring, Exhaust	4
12	N/A	Muffler	1
13	N/A	Bracket, Muffler	1

11

G

D

11

G

D

CLUTCHES

12


G

D

12

G


D

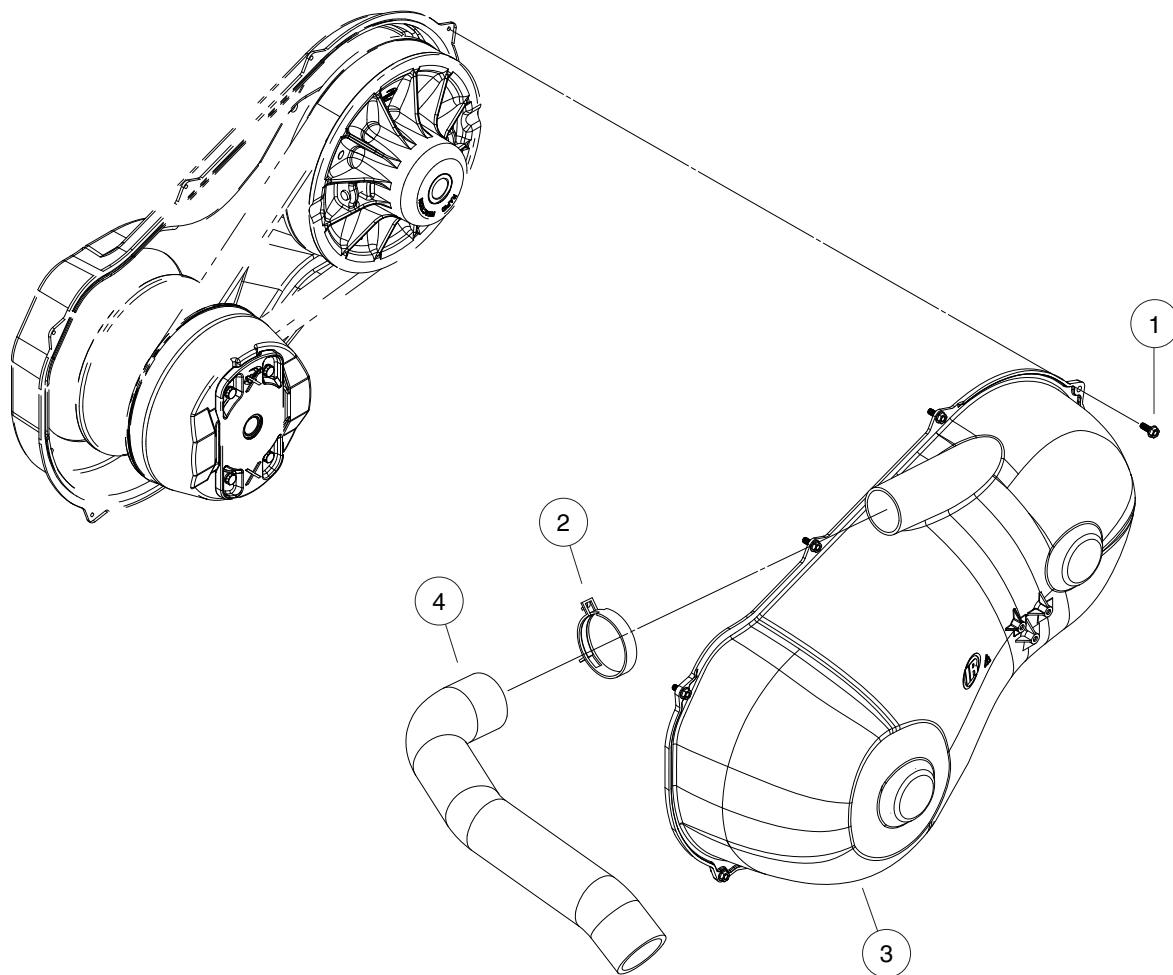

000008-002

CLUTCH COVER (STANDARD)

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		12
1	<u>102296716</u>	Screw, M6 X 16 Tt Hx Fl Hd	7	G
2	<u>102411210</u>	Clamp, Hose, Ctb 64mm	1	
3	N/A	Cover, Cvt, Open	1	
4	<u>103320601</u>	Hose, Outlet, Cvt	1	D

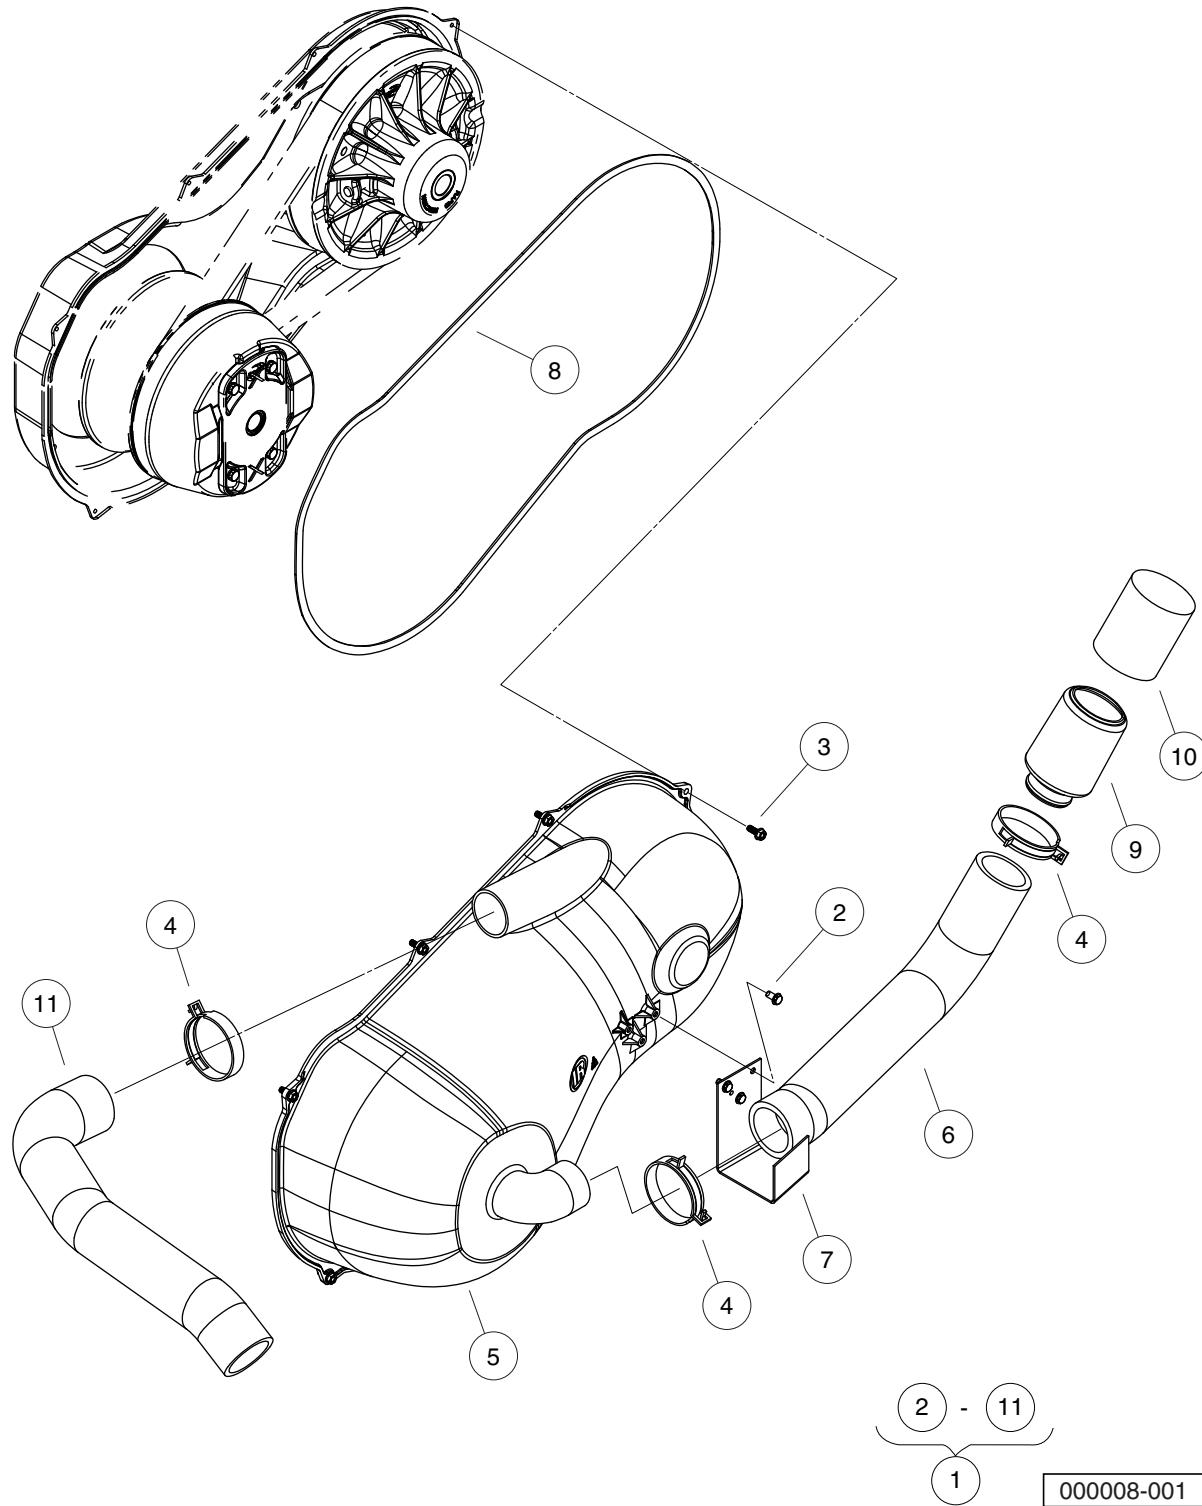12**G****D**

CLUTCH COVER (SEALED)

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102616003</u>	Kit, Sealed CVT Cover (includes items 2 through 11)	1
2	<u>101856102</u>	Screw, 1/4-15 X 1.50 Hi-lo Hex	3
3	<u>102296716</u>	Screw, M6 X 16 Tt Hx Fl Hd	7
4	<u>102411210</u>	Clamp, Hose, Ctb 64mm	2
5	<u>102414501</u>	Cover, CVT Outer	1
6	<u>102481001</u>	Hose, Inlet, Cover, CVT	1
7	<u>102481201</u>	Bracket, Inlet, Cover, CVT	1
8	<u>102481301</u>	Gasket, Cover, CVT	1
9	<u>102616101</u>	Cap, Inlet, Cover, CVT	1
10	<u>102628001</u>	Filter, Inlet, Cover, CVT	1
11	<u>103320601</u>	Hose, Outlet, Cvt	1

12


G

D

12

G


D

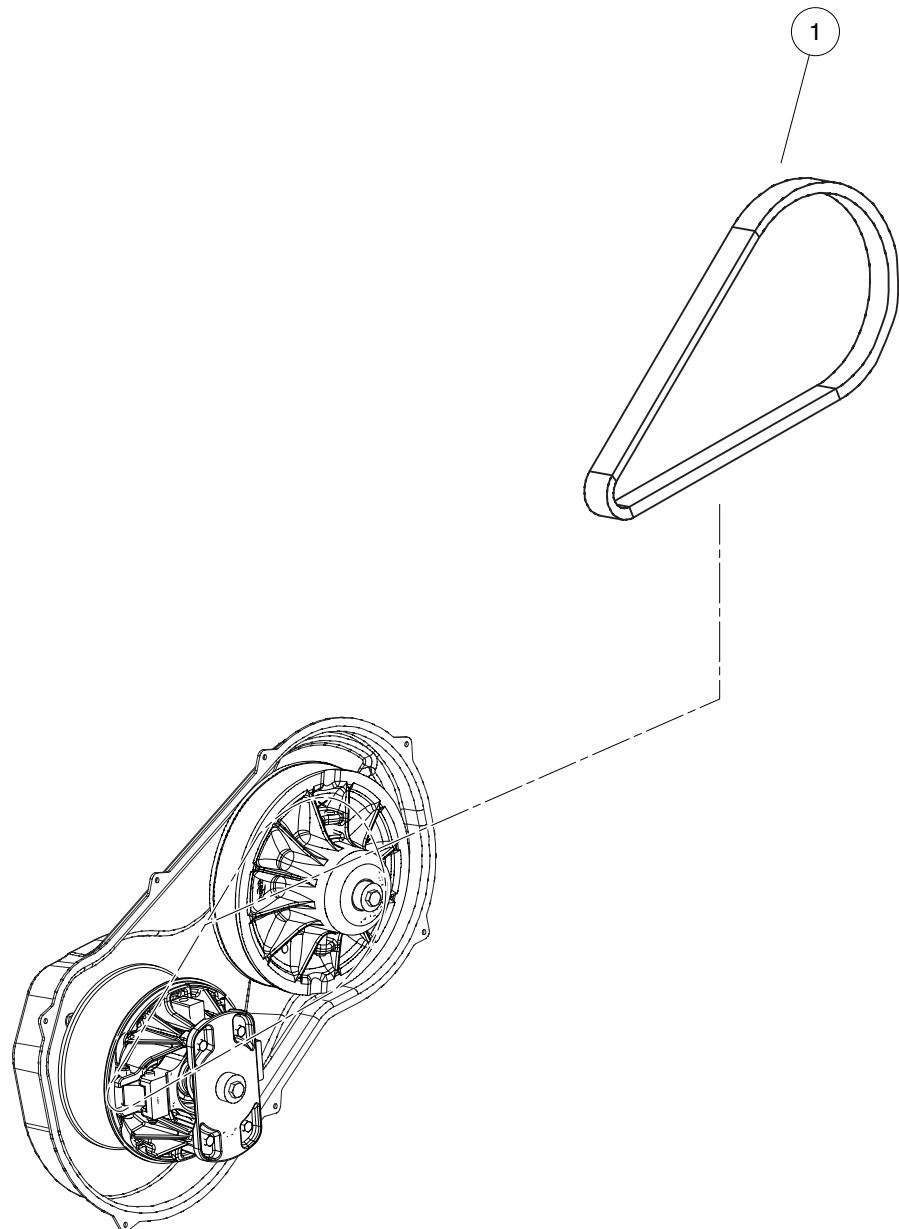

000084-001

DRIVE BELT


ITEM	PART NO.	DESCRIPTION	QTY	
1	<u>102374901</u>	1 2 3 4 Belt, Drive	1	12 G D

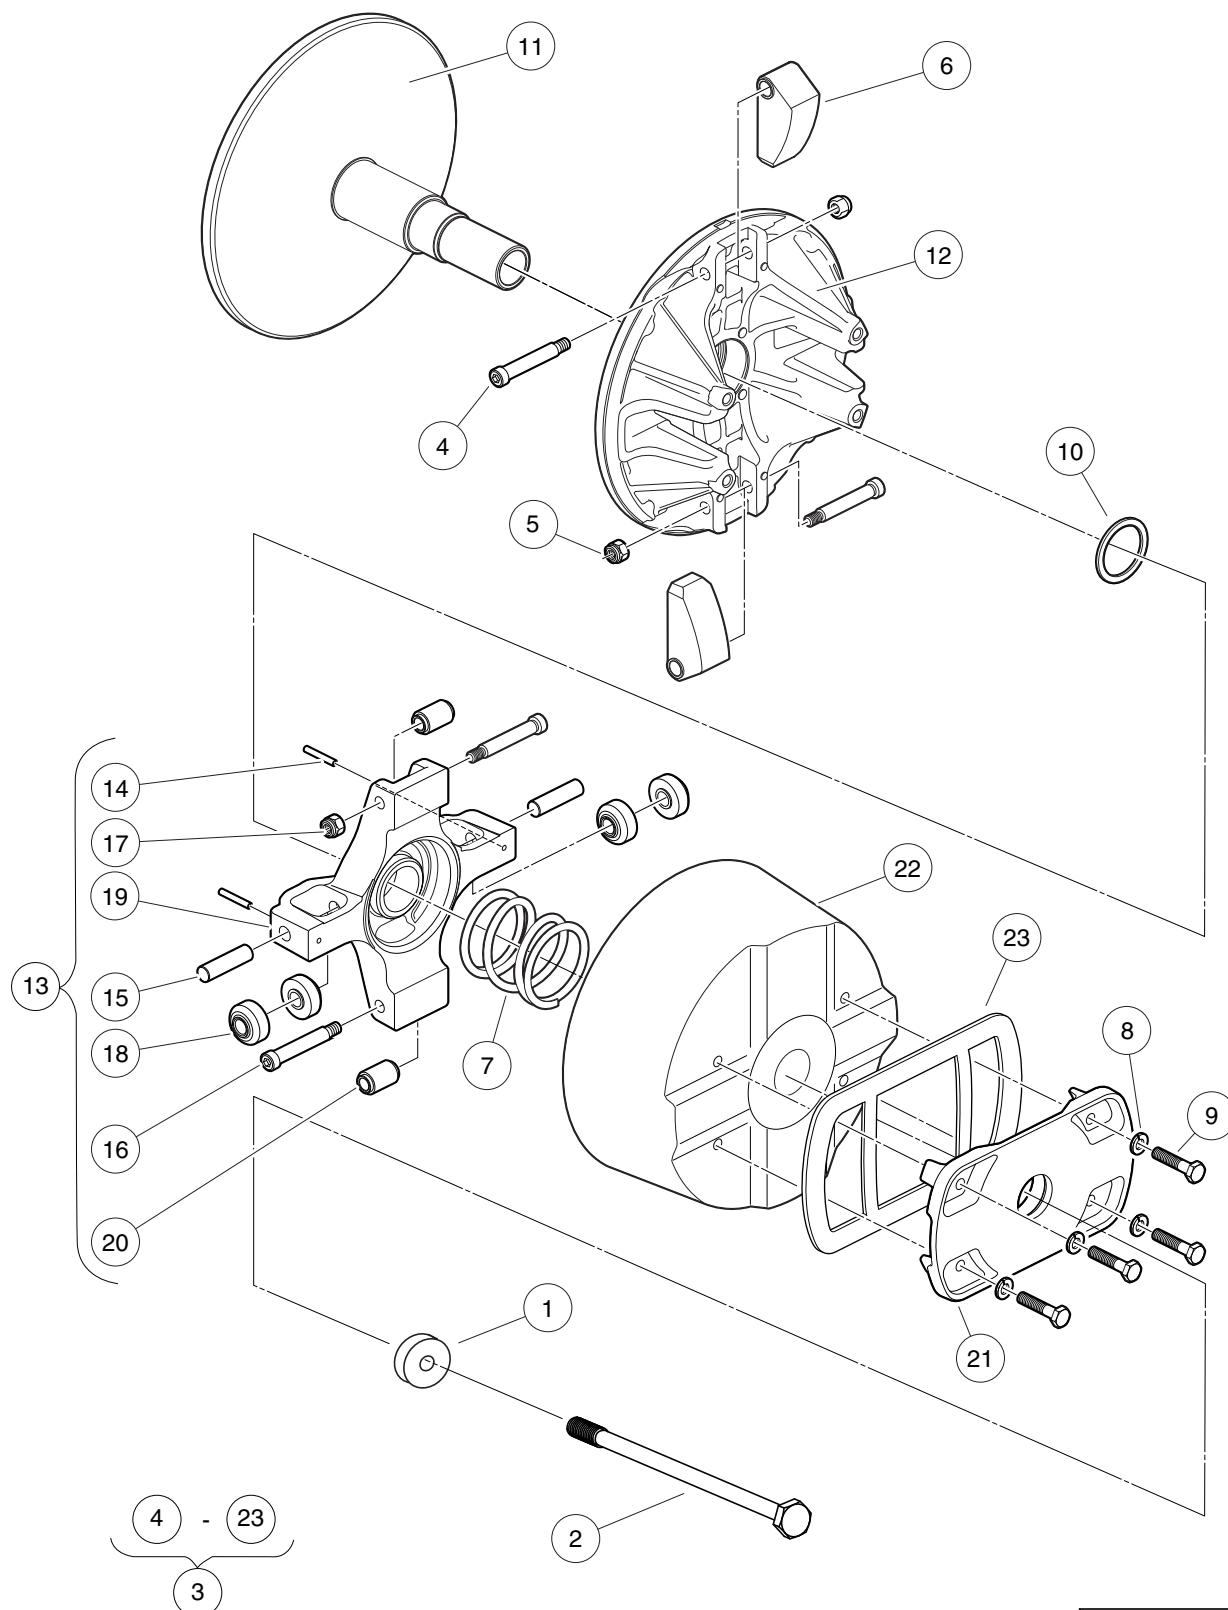12**G****D**

000007-003

DRIVE CLUTCH – GASOLINE VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102385601</u>	Washer, Stepped	1
2	<u>102490001</u>	Bolt, M10x1.25x200 Loctite	1
3	<u>103185401</u>	Clutch, 4x4, Gas, W/cover (includes items 4 through 23)	1
4	<u>102690501</u>	Screw, Shlder Hex, .312 X 1.75	2
5	<u>102690701</u>	Nut, Lock Hex, 1/14-20, Flexlc	2
6	<u>102691001</u>	Sub Assy, Wt Clutch, Gas	2
7	<u>102691401</u>	Spring, Compression, Primary	1
8	<u>102691601</u>	Washer, Lock, H-Spring, 1/4	4
9	<u>102691701</u>	Screw, Cap, Hex Hd, 1/4 X 1.25	4
10	<u>102691801</u>	Shim, 1.63 X 1.33	1
11	N/A	Subassembly, Drive Clutch	1
12	N/A	Subassembly, Moveable, Drive Clutch	1
13	N/A	Spider Subassembly (Gasoline) (includes items 14 through 20)	1
14	<u>102690201</u>	Pin, Spring Slotted, 1.25 X 1.0	2
15	<u>102690301</u>	Pin, Dowel, .375 X 1.50	2
16	<u>102690501</u>	Screw, Shlder Hex, .312 X 1.75	2
17	<u>102690701</u>	Nut, Lock Hex, 1/14-20, Flexlc	2
18	<u>102691901</u>	Roller, Torque, Gas	4
19	N/A	Spider, Drive Clutch	1
20	<u>102839401</u>	Sub Assy, Roller Weight	2
21	N/A	Cover, Drive Clutch	1
22	<u>103185801</u>	Cover, Clutch, 4x4	1
23	<u>103185901</u>	Gasket, Cover, Clutch, 4x4	1

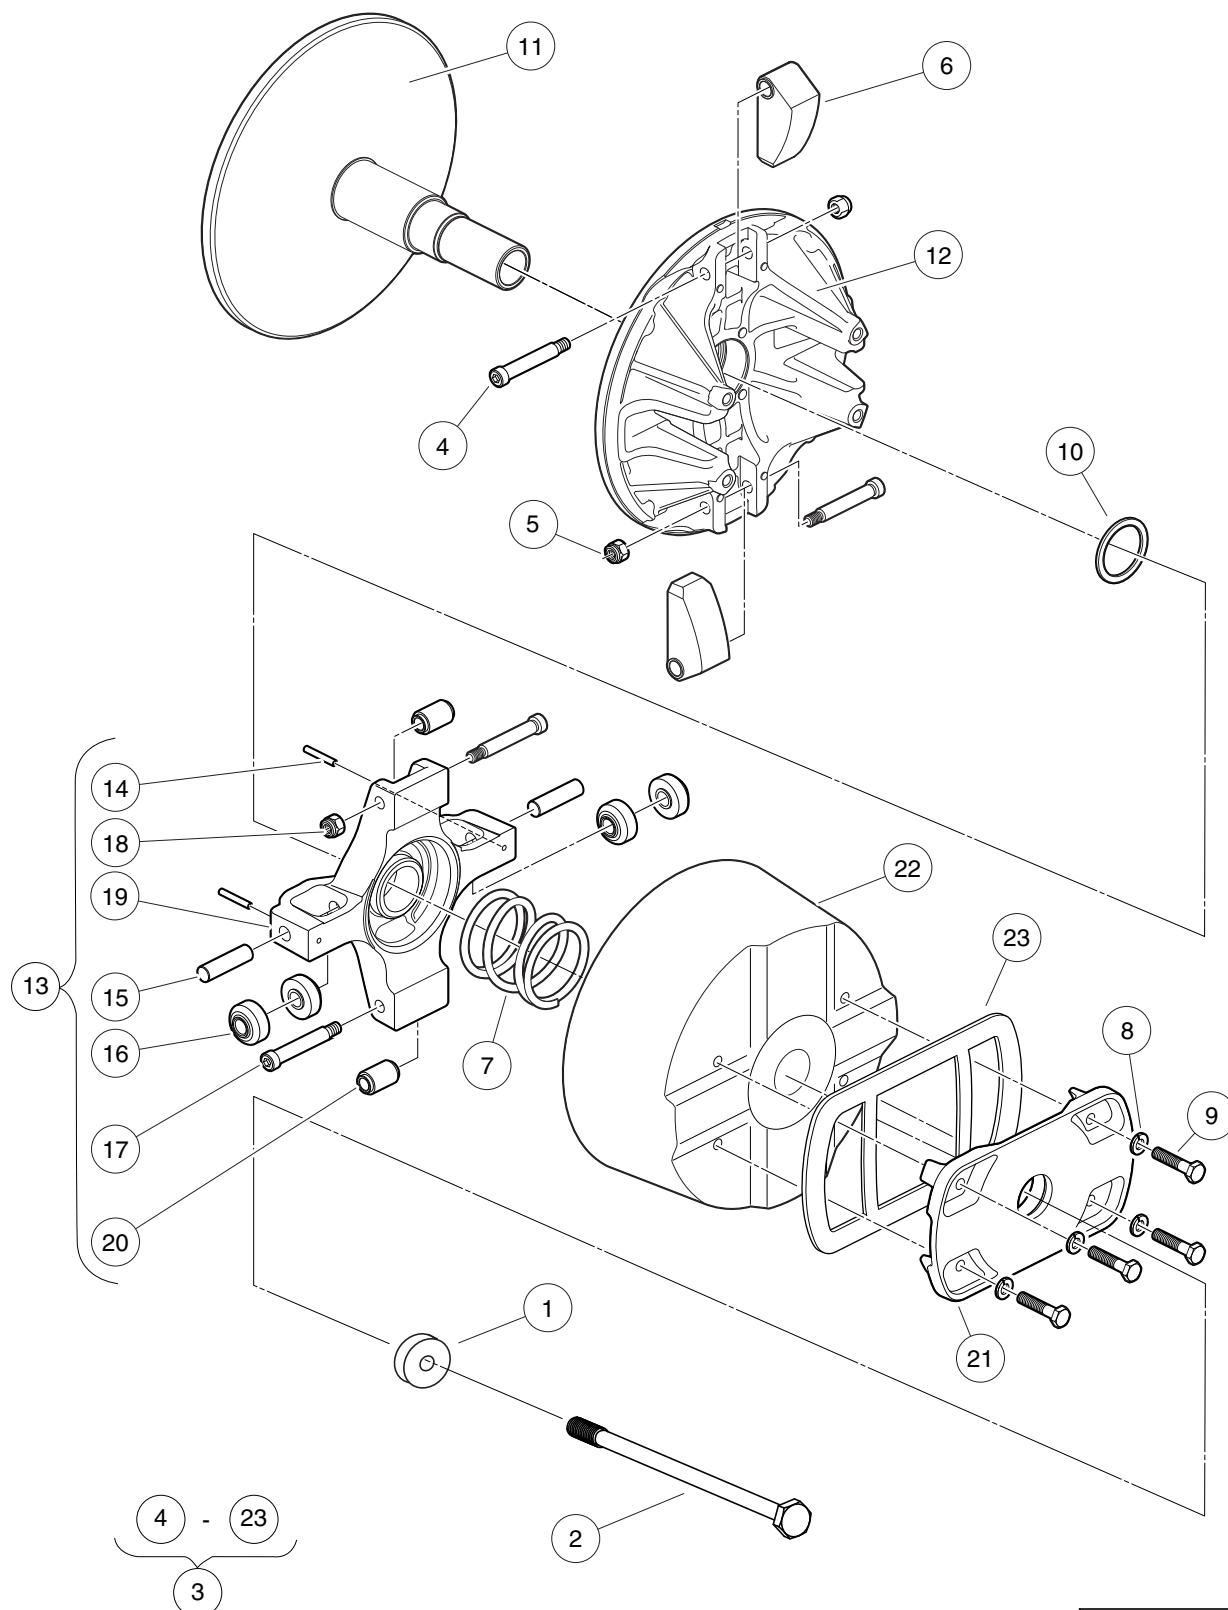12**G****D**

000007-004

DRIVE CLUTCH – DIESEL VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	12
1	<u>102385601</u>	Washer, Stepped	1
2	<u>102616501</u>	Bolt, M10 X 1.5 X 160	1
3	<u>103185501</u>	Clutch, 4x4, Diesel, W/cover (includes items 4 through 23)	1
4	<u>102690501</u>	Screw, Shlder Hex, .312 X 1.75	2
5	<u>102690701</u>	Nut, Lock Hex, 1/14-20, Flexlc	2
6	<u>102690801</u>	Sub Assy, Wt Clutch, Diesel	2
7	<u>102691401</u>	Spring, Compression, Primary	1
8	<u>102691601</u>	Washer, Lock, H-Spring, 1/4	4
9	<u>102691701</u>	Screw, Cap, Hex Hd, 1/4 X 1.25	4
10	<u>102691801</u>	Shim, 1.63 X 1.33	1
11	N/A	Subassembly, Drive Clutch	1
12	N/A	Subassembly, Moveable, Drive Clutch	1
13	N/A	Subassembly, Spider Utility, Diesel (includes items 14 through 20)	1
14	<u>102690201</u>	Pin, Spring Slotted, 1.25 X 1.0	2
15	<u>102690301</u>	Pin, Dowel, .375 X 1.50	2
16	<u>102690401</u>	Roller, Torque, Diesel	4
17	<u>102690501</u>	Screw, Shlder Hex, .312 X 1.75	2
18	<u>102690701</u>	Nut, Lock Hex, 1/14-20, Flexlc	2
19	N/A	Spider, Drive Clutch	1
20	<u>102839401</u>	Sub Assy, Roller Weight	2
21	N/A	Cover, Drive Clutch	1
22	<u>103185801</u>	Cover, Clutch, 4x4	1
23	<u>103185901</u>	Gasket, Cover, Clutch, 4x4	1

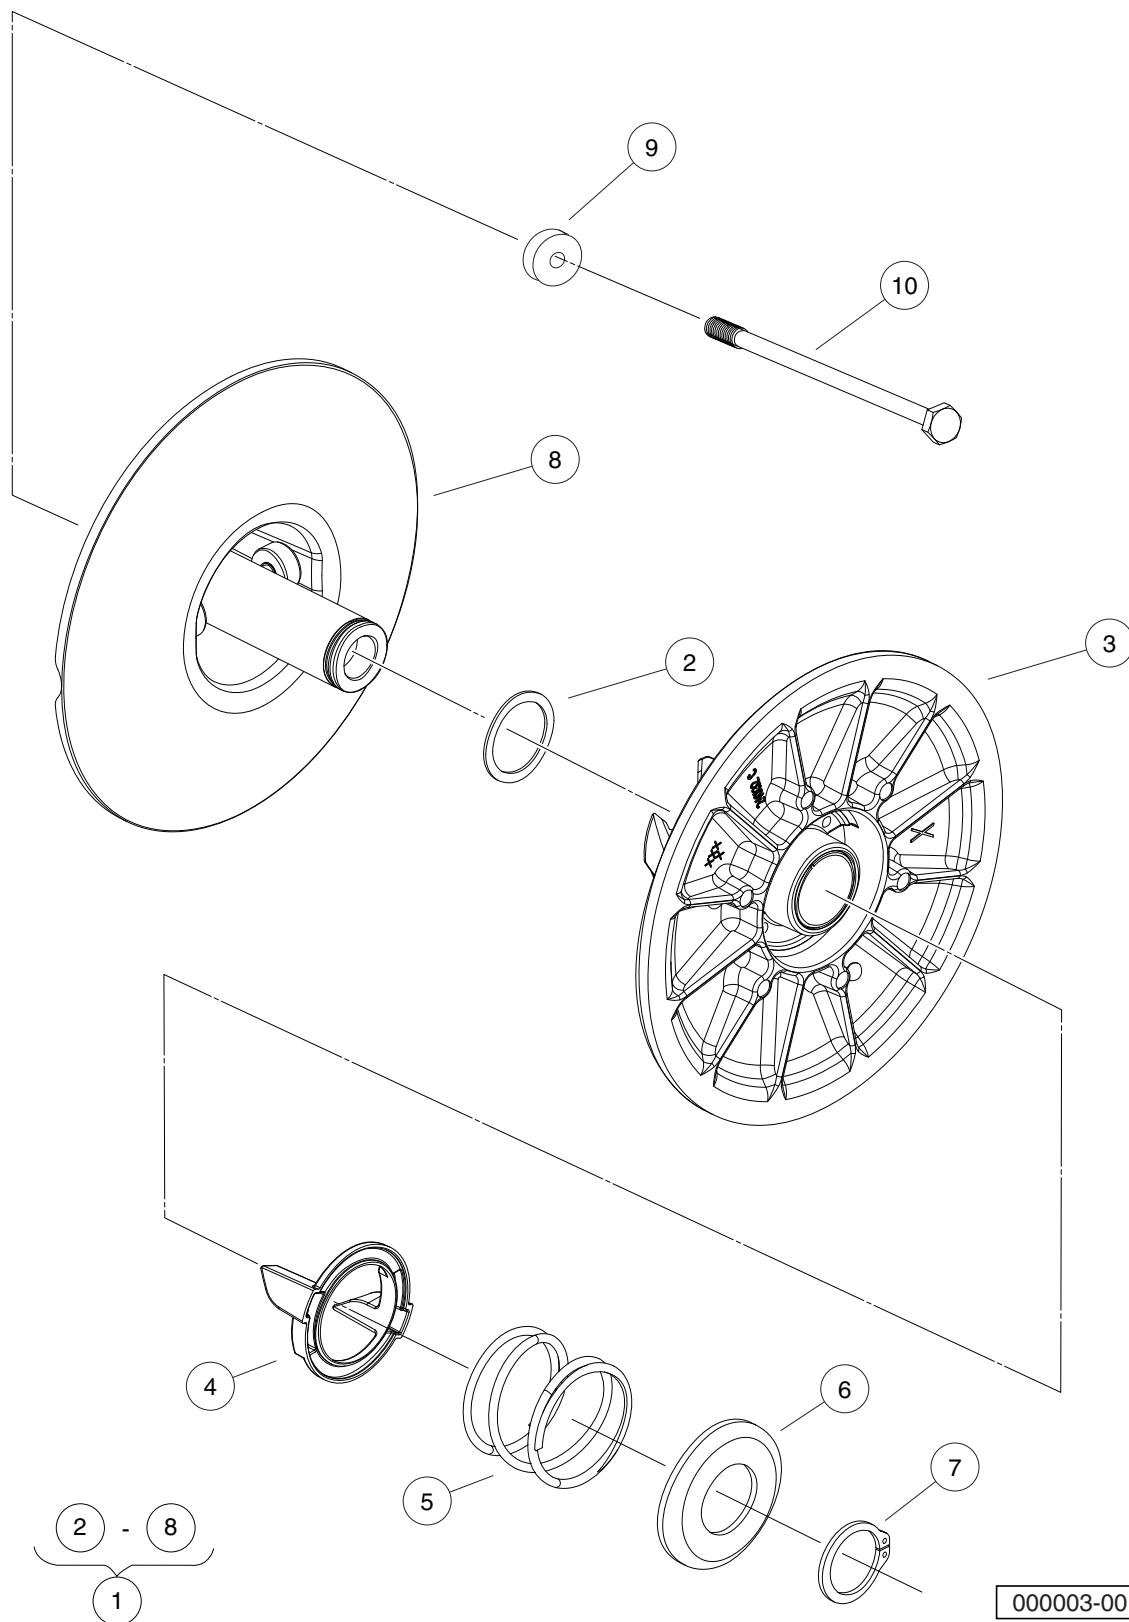12**G****D**

000003-001

DRIVEN CLUTCH

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		12
1	<u>102369901</u>	CVT, Secondary (includes items 2 through 8)	1	G
2	<u>102695401</u>	Washer, Thrust, 1.53 X 1.92	1	
3	N/A	Sheave, Driven Clutch	1	
4	<u>102695601</u>	Retainer, Spring, Inner	1	
5	<u>102695701</u>	Spring, Compression, Secondary	1	
6	<u>102695801</u>	Retainer, Spring, Outer	1	
7	<u>102695901</u>	Ring, Retaining, External	1	
8	N/A	Driven Clutch Base Sheave	1	
9	<u>102385701</u>	Washer, Stepped	1	
10	<u>102719301</u>	Bolt, M10 X 1.50 X 90, Loctite	1	D

12


G

D

DRIVETRAIN COMPONENTS


G

D

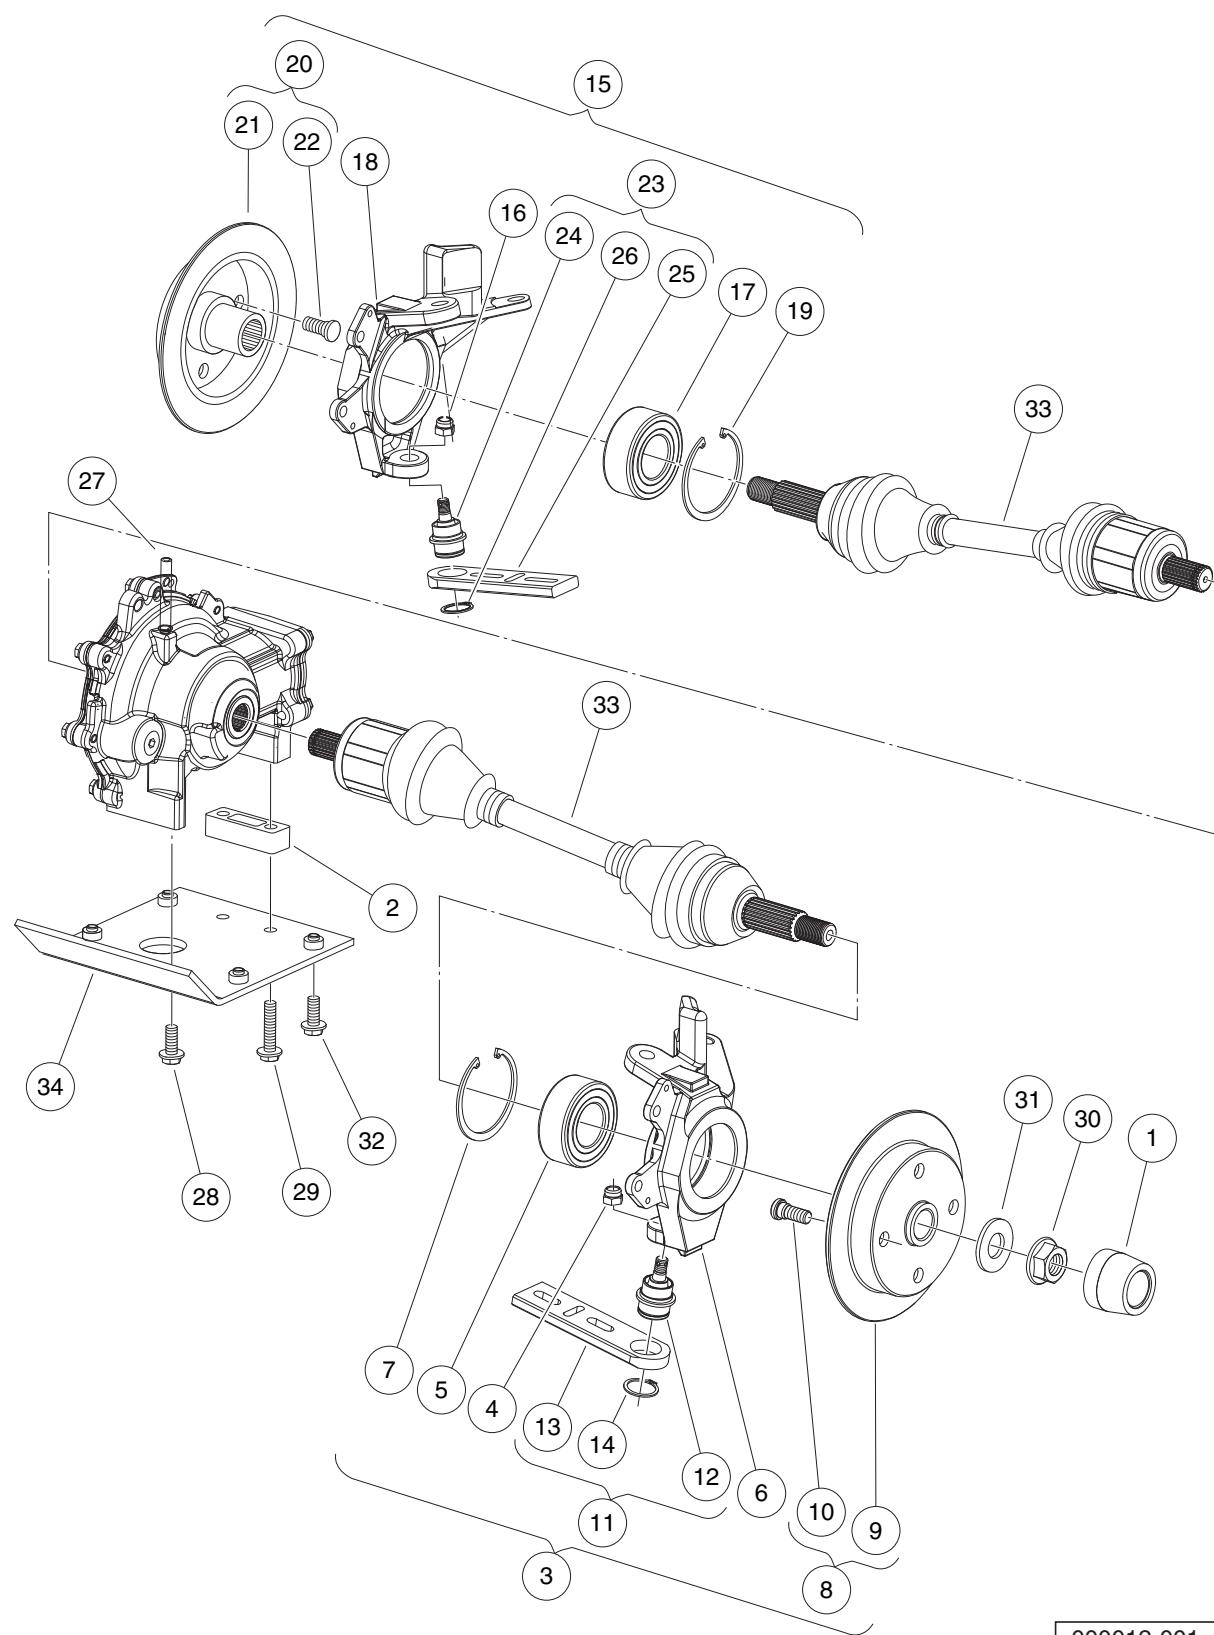13**G****D**

FRONT DIFFERENTIAL MOUNTING AND HALF SHAFTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	13
1	102274101	Center Cap, Rubber	2
2	102381701	Spacer Block, Diff	1
3	102436001	Upright Sub-Assembly, LH (includes items 4 through 11)	1
4	102022901	Locknut, M12-1.25 Nylon	1
5	102368201	Bearing	1
6	102368301	Upright, Left	1
7	102374701	Internal Retaining Ring, 80mm Bore	1
8	102376601	Assy, Rotor, Brake, Front (includes items 9 and 10)	1
9	N/A	Rotor, Brake, Front	1
10	102475801	Stud, Wheel Lug	4
11	102479001	Asm, Adjuster, Slide (includes items 12 through 14)	1
12	102361901	Joint, Ball	1
13	102447001	Slide, Adjuster	1
14	102722301	Ring, Retaining, Ext, 1-1/4"	1
15	102436101	Upright Sub-Assembly, RH (includes items 16 through 23)	1
16	102022901	Locknut, M12-1.25 Nylon	1
17	102368201	Bearing	1
18	102368302	Upright, Right	1
19	102374701	Internal Retaining Ring, 80mm Bore	1
20	102376601	Assy, Rotor, Brake, Front (includes items 21 and 22)	1
21	N/A	Rotor, Brake, Front	1
22	102475801	Stud, Wheel Lug	4
23	102479001	Asm, Adjuster, Slide (includes items 24 through 26)	1
24	102361901	Joint, Ball	1
25	102447001	Slide, Adjuster	1
26	102722301	Ring, Retaining, Ext, 1-1/4"	1
27	102462401	Hose, Vent, Front Diff	1
28	102491001	Bolt Flanged Head, 3/8-16x1.0 with Loctite	2
29	102491101	Bolt Flanged Head, 3/8-16x1.500 with Loctite	2
30	102617501	Nut Flg, M22 X 1.5 Mech Def	2
31	102617801	Washer Hard, M22	2
32	102711601	Bolt, Flange Head, M10 X 1.5 X 25	4
33	102865201	Shaft, Half	2
34	103244701	Asm, Mount, Diff Plate	1

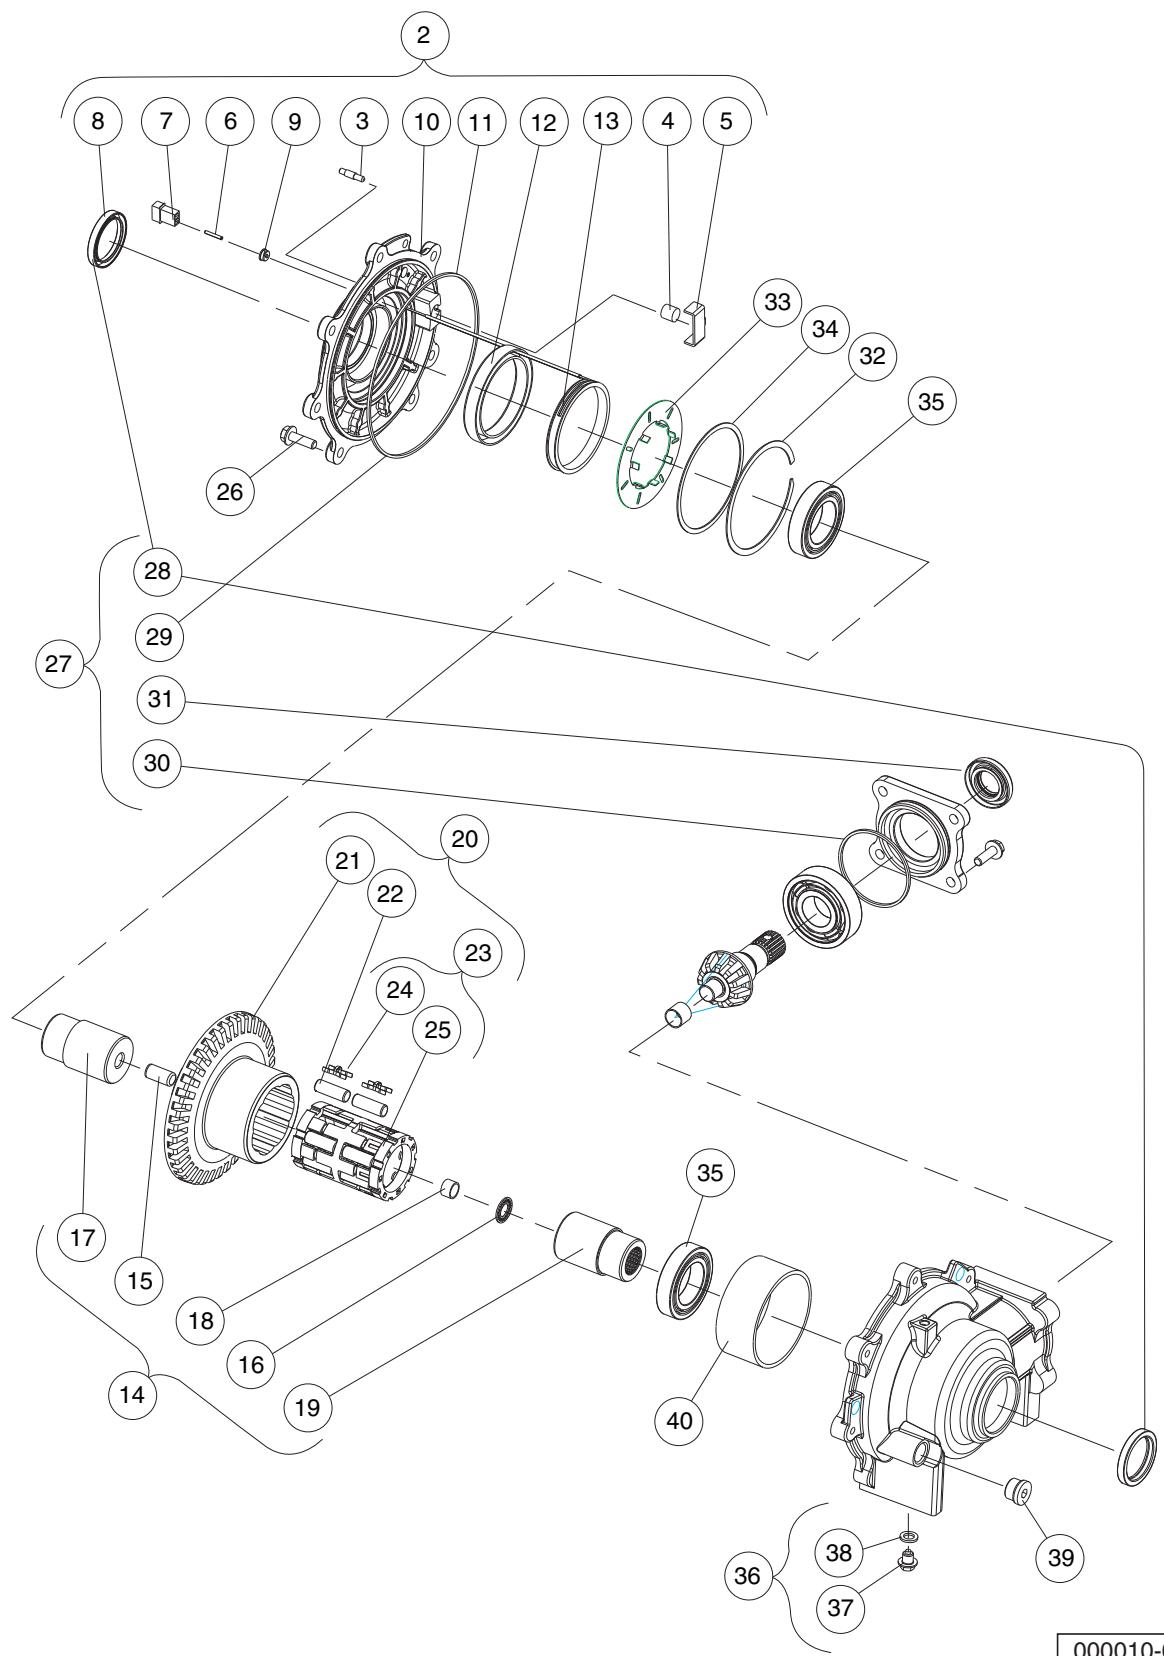13**G****D**

000010-001

FRONT DIFFERENTIAL (OUTPUT COMPONENTS)


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102371801</u>	Differential, Front * (includes items 2 through 40)	1
2	<u>102438201</u>	Kit, Assy, Output Cover Plate (includes items 3 through 13)	1
3	<u>102439001</u>	Set Screw, #10-24 UNC-3A with Patch	1
4	<u>102439101</u>	Thrust Button	1
5	<u>102439201</u>	Thrust Plate	1
6	N/A	Mate-N-Lock Pin	2
7	N/A	Mate-N-Lock Housing	1
8	N/A	Oil Seal	1
9	N/A	Grommet	1
10	N/A	Plate, Output Cover	1
11	N/A	O-Ring	1
12	N/A	Coil, Pocket Insert	1
13	N/A	Coil with Press-Fit Bobbin	1
14	<u>102438301</u>	Kit, Assy, Race Output Hub (includes items 15 through 19)	1
15	<u>102439401</u>	Pin, Dowel	1
16	<u>102439501</u>	Bearing, Needle	1
17	N/A	Race/Output Hub, Male	1
18	N/A	Bushing, PermiGlide	1
19	N/A	Race/Output Hub, Female	1
20	<u>102438401</u>	Kit, Assy, Clutch (includes items 21 through 23)	1
21	<u>102439601</u>	Clutch Hsg/Ring Gear, Machined	1
22	<u>102439801</u>	Kit, Roller (contains 14 rollers)	1
23	<u>102439901</u>	Kit, Assy, Roll Cage (includes items 24 and 25)	1
24	<u>102439701</u>	Kit, H-Clip Spring (contains 14 clips)	1
25	N/A	Roll Cage, Plastic	1
26	<u>102438501</u>	Kit, Bolt (contains 7 bolts)	1
27	<u>102438601</u>	Kit, Minor Repair (includes items 28 through 31)	1
28	N/A	Oil Seal	1
29	N/A	O-Ring	1
30	N/A	O-Ring	1
31	N/A	Oil Seal, Triple-Lipped	1
32	<u>102438701</u>	Retaining, Ring Internal	1
33	<u>102438801</u>	Plate, Armature	1
34	<u>102438901</u>	Shim, Armature, Plate	1
35	<u>102439301</u>	Bearing, Ball	12
36	<u>102440101</u>	Kit, Assy, Drain Plug (includes items 37 and 38)	1
37	N/A	Plug, Oil Drain	1
38	N/A	Washer, Nylon, 0.625 x 0.382 x 0.06	1
39	<u>102440301</u>	Plug, Oil Fill	1
40	N/A	Bushing, Self-Lubricating, 80 x 85 x 20	1

* Note: This assembly also contains components listed on the following two pages.

13

G

D

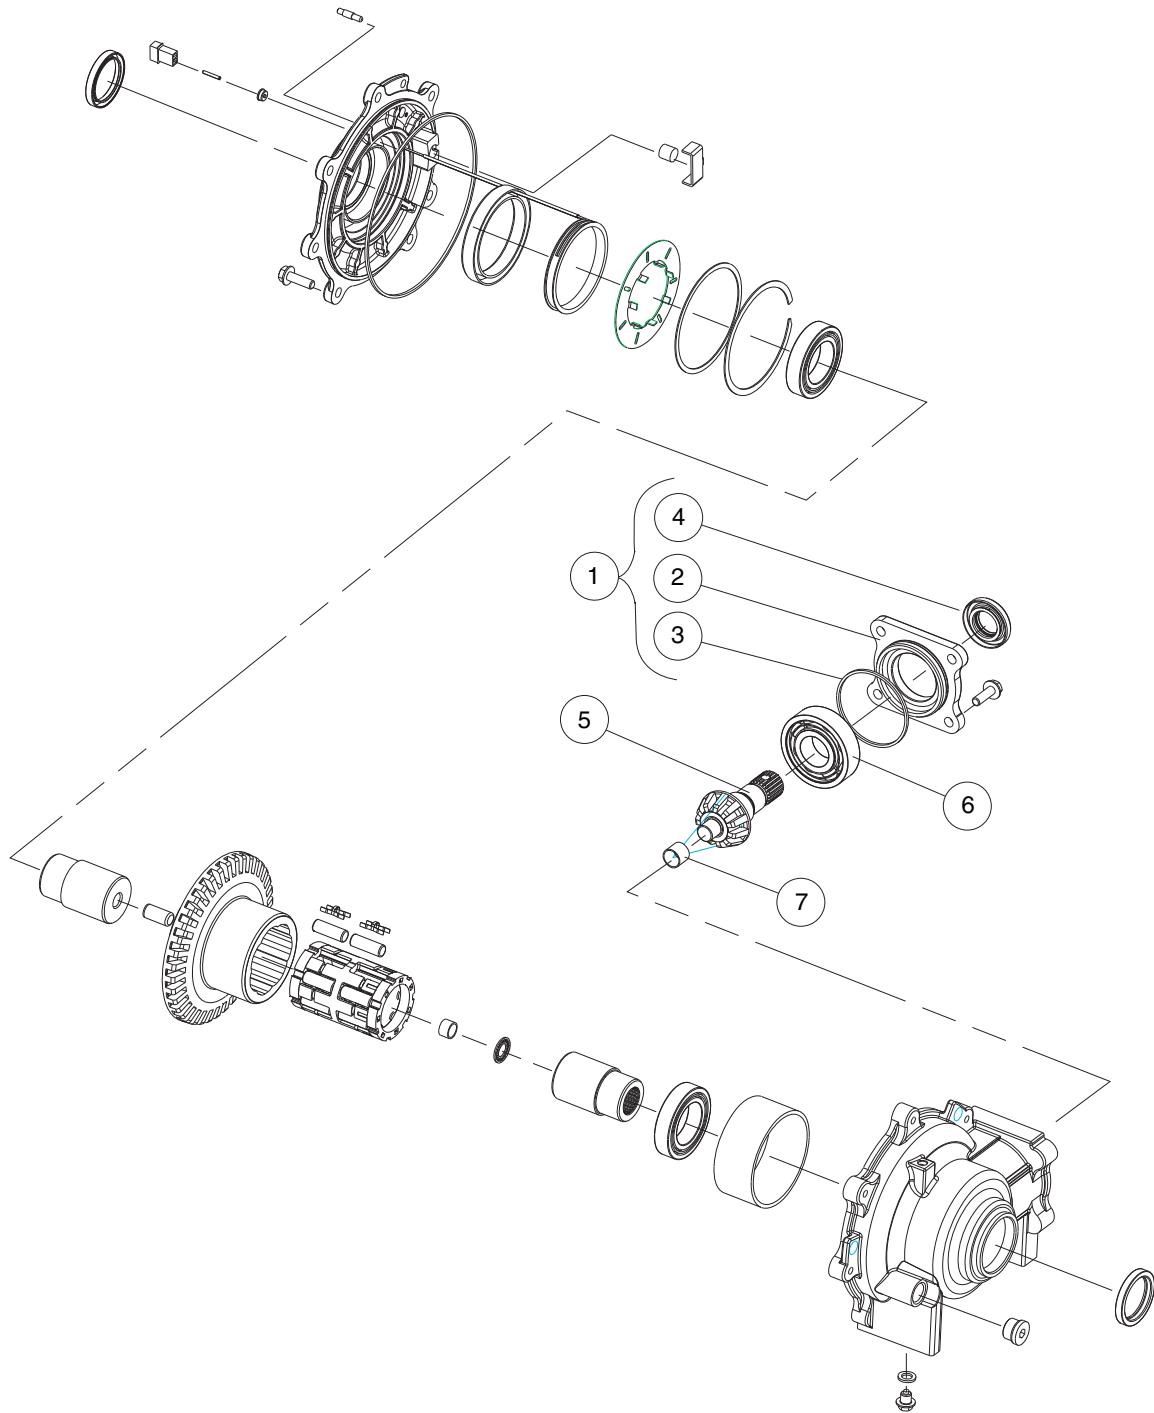13**G****D**

000010-002

FRONT DIFFERENTIAL (INPUT COMPONENTS)

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102440201</u>	Kit, Assy, Input Cover Plate (includes items 2 through 4)	1
2	<u>102440601</u>	Cover, Input, Machined	1
3	N/A	O-Ring	1
4	N/A	Oil Seal, Triple-Lipped	1
5	<u>102440401</u>	Shaft, Pinion, Machined	1
6	<u>102440501</u>	Bearing, Ball	1
7	N/A	Bushing, Plain 16 Id X 15 Wide	1
<p>Note: This page contains a list of components internal to the front differential. See the previous pages for other front differential components.</p>			

13


G

D

13

G


D

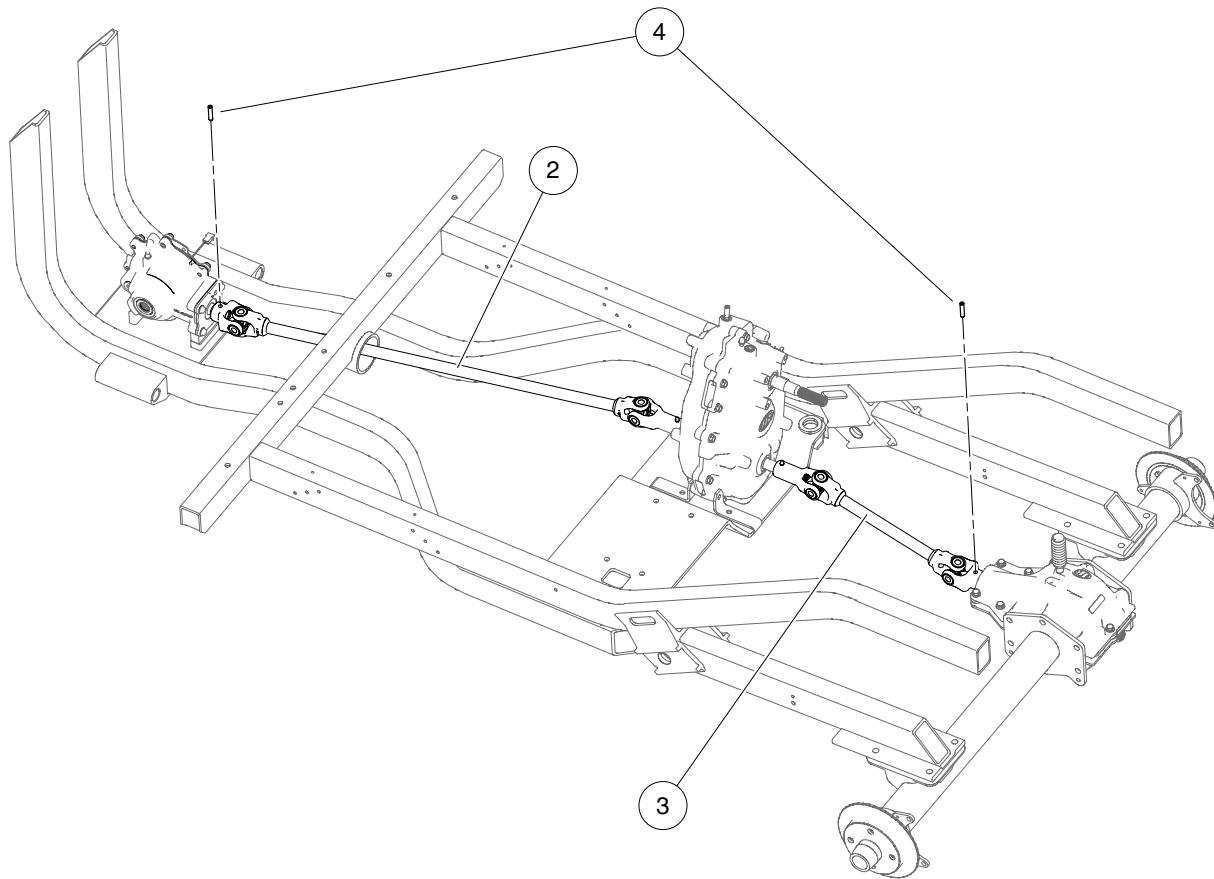

000091-001

PROP SHAFTS

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		13
1	N/A	Inst, Prop Shafts, Awd (includes items 2 through 4)	1	G
2	<u>102371701</u>	Prop Shaft, Front	1	
3	102372101	Prop Shaft, Rear	1	
4	95293643	Pin, Spring, 5/16 X 1-1/2 Hd	2	D

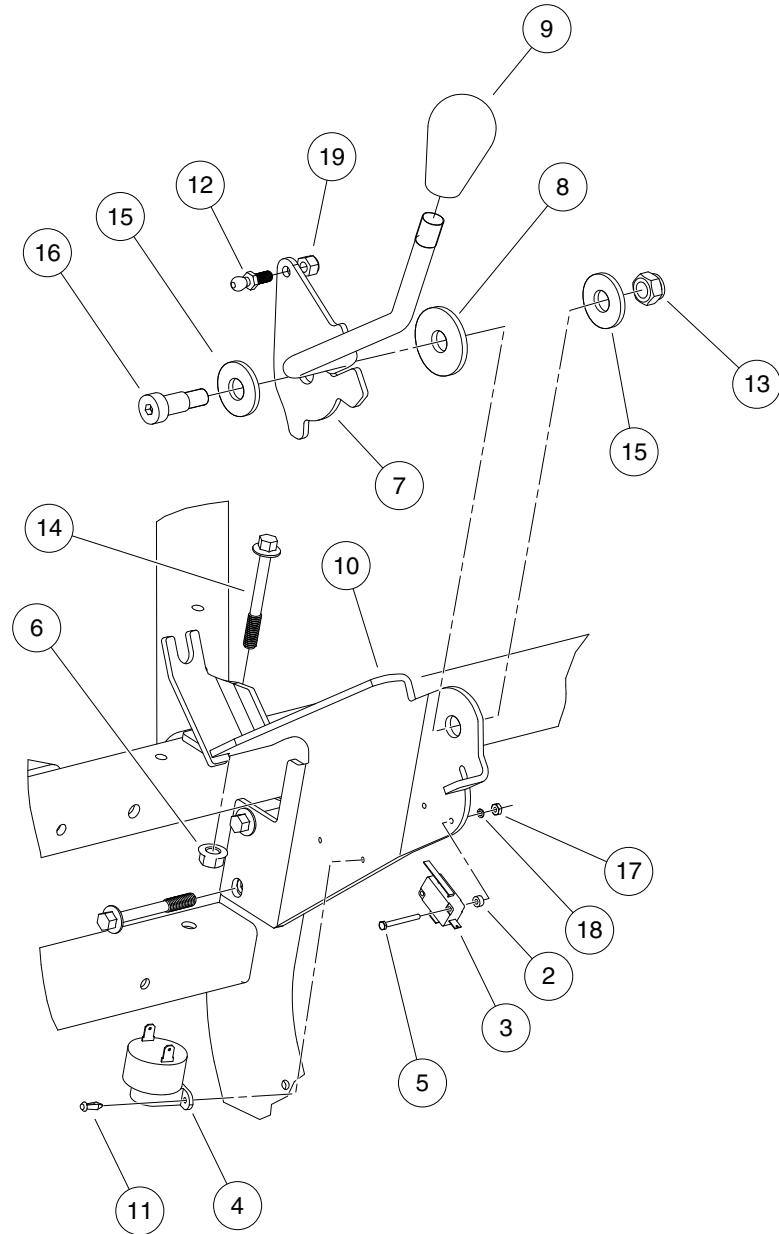13**G****D**

000030-001


FORWARD/REVERSE SHIFTER ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102470801</u>	Asm, FNR (includes items 2 through 19)	1
2	<u>1014727</u>	Washer, #4 Nylon Flat	2
3	<u>1014808</u>	Switch, Limit	1
4	<u>1016851</u>	Buzzer, Reverse (9-48 VDC)	1
5	<u>1016896</u>	Screw, #4-40 X 1.125 Hx Hd Mch	2
6	<u>102298401</u>	Nut,m8,all Metal Lock	3
7	<u>102375801</u>	Weldment, FNR Shifter	1
8	<u>102375901</u>	Bushing, Fnr	1
9	<u>102376001</u>	Knob, Fnr	1
10	N/A	Weldment, FNR Shifter Bracket	1
11	<u>102499001</u>	Rivet, Micro Tuflok	2
12	<u>102615701</u>	Stud, Ball, .346 Dia	1
13	<u>102616701</u>	Locknut, M10x1.5 Nylon Insert	1
14	<u>102618301</u>	Bolt Flanged Head, M8 X 1.25 X 65	3
15	<u>102684501</u>	Washer, M12 Hard Regular	2
16	<u>102684601</u>	Shoulder Bolt,m12 X 20 M10 Thd	1
17	<u>8057</u>	Nut, #4-40 Hex Machine	2
18	<u>8058</u>	Lockwasher, #4 Split	2
19	<u>8717</u>	Locknut, 1/4-28 Nylon Insert	1

13

G

D

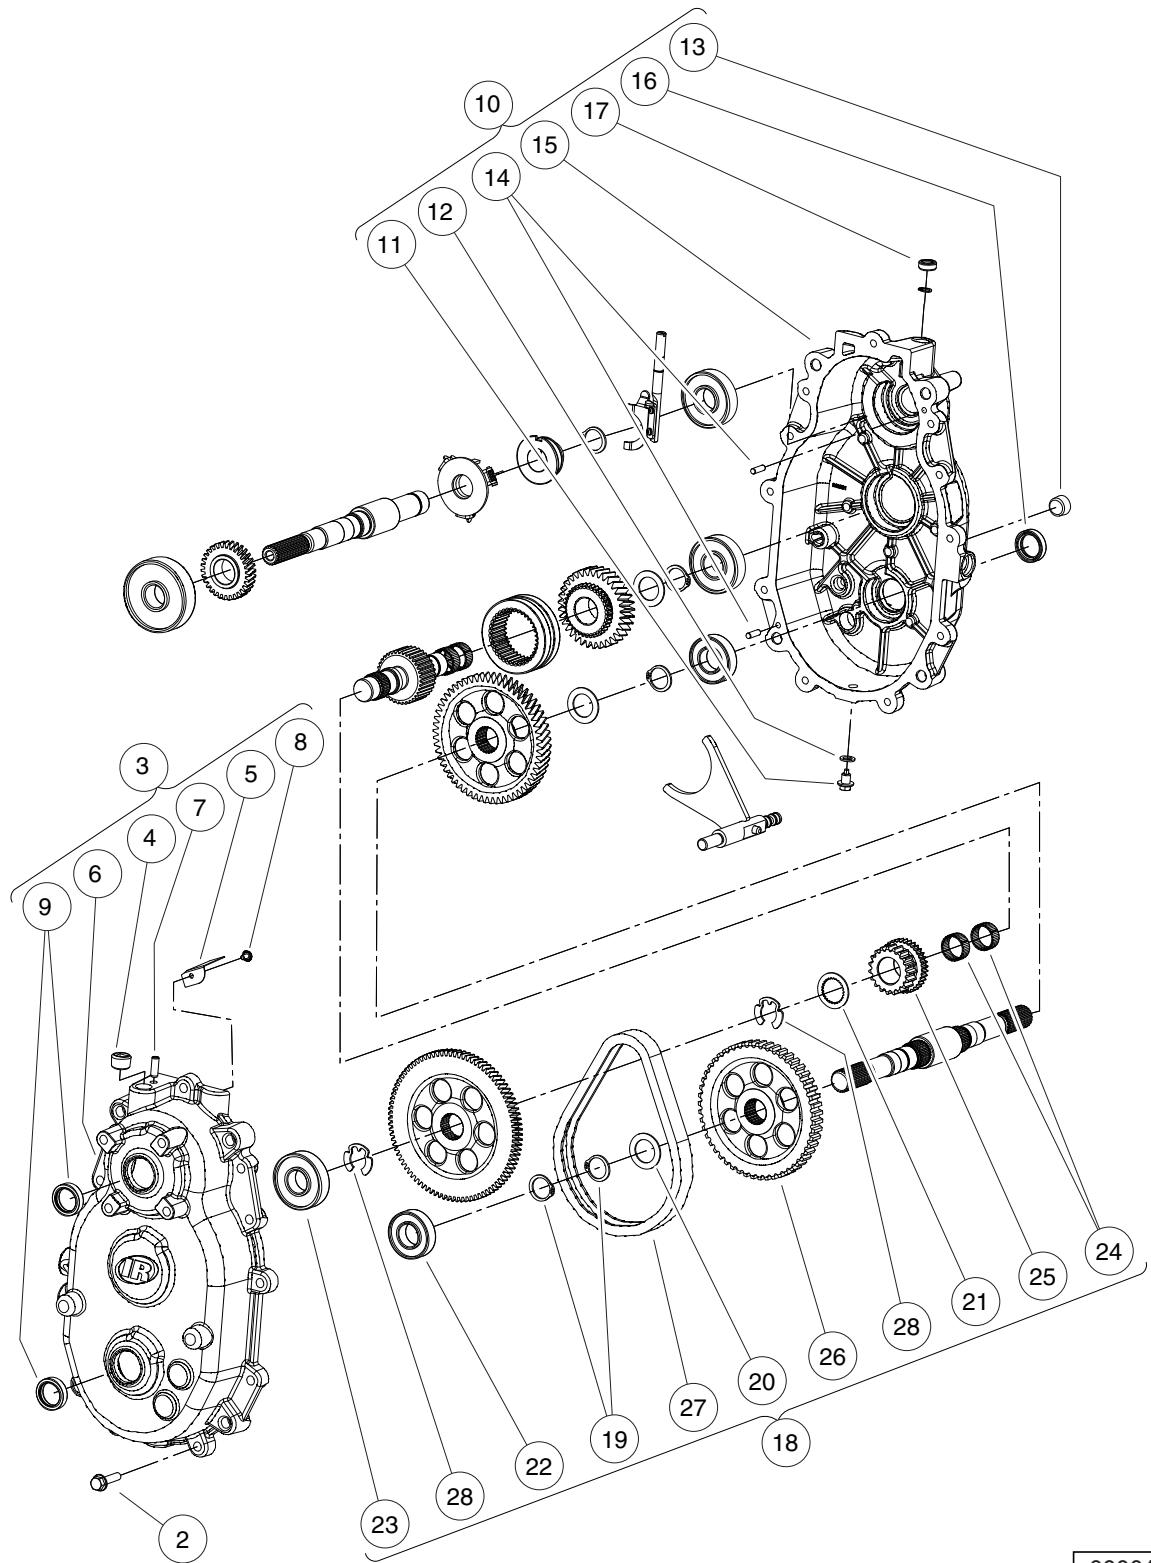13**G****D**

000016-001

TRANSMISSION


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102369401</u>	Transmission, Parallel Shaft * (includes items 2 through 18)	1
2	<u>102693301</u>	Screw,hex Flange, M8 X 35	11
3	<u>102764201</u>	Asm, Gear Case, Rear (includes items 4 through 9)	1
4	<u>102694201</u>	Plug, Square Skt, 1/12-14, Ptf	1
5	<u>102696301</u>	Oil, Deflector	1
6	<u>102697401</u>	Gearcase, Rear	1
7	<u>102698301</u>	Vent, Trans	1
8	<u>102698901</u>	Screw, Tapping # 10-24 X .375	1
9	<u>102699401</u>	Seal, Triple, 25 X 35 X 7.8	2
10	N/A	Asm, Gear Case, Front (includes items 11 through 17)	1
11	<u>102693401</u>	Plug,3/8-16, Hex Flange	1
12	<u>102693501</u>	Washer, .625 X .382 X .60	1
13	<u>102694201</u>	Plug, Square Skt, 1/12-14, Ptf	1
14	<u>102696101</u>	Pin, Dowel, 6 X 20	2
15	<u>102697301</u>	Gearcase, Front	1
16	<u>102699401</u>	Seal, Triple, 25 X 35 X 7.8	1
17	<u>102721501</u>	Seal, Dual-Lip	1
18	<u>102765201</u>	Kit, Reverse Gear Repair (includes items 19 through 28)	1
19	<u>102696201</u>	Ring, Retaining, Basic External	2
20	<u>102696501</u>	Washer, Thrust, 1.007 X .062	1
21	<u>102696701</u>	Washer, 26.231 X 39.167 X 1.57	1
22	<u>102696801</u>	Bearing, Ball	1
23	<u>102696901</u>	Bearing, Ball	1
24	<u>102697101</u>	Bearing, Needle	2
25	<u>102697601</u>	Sprocket, 19-Tooth	1
26	<u>102697701</u>	Sprocket, 51-Tooth	1
27	<u>102699201</u>	Chain, .375p, .75 Wide, 60ptch	1
28	<u>102699701</u>	Ring, Retaining, E-Ring	2

* Note: This assembly also contains components listed on the following four pages.

13

G

D

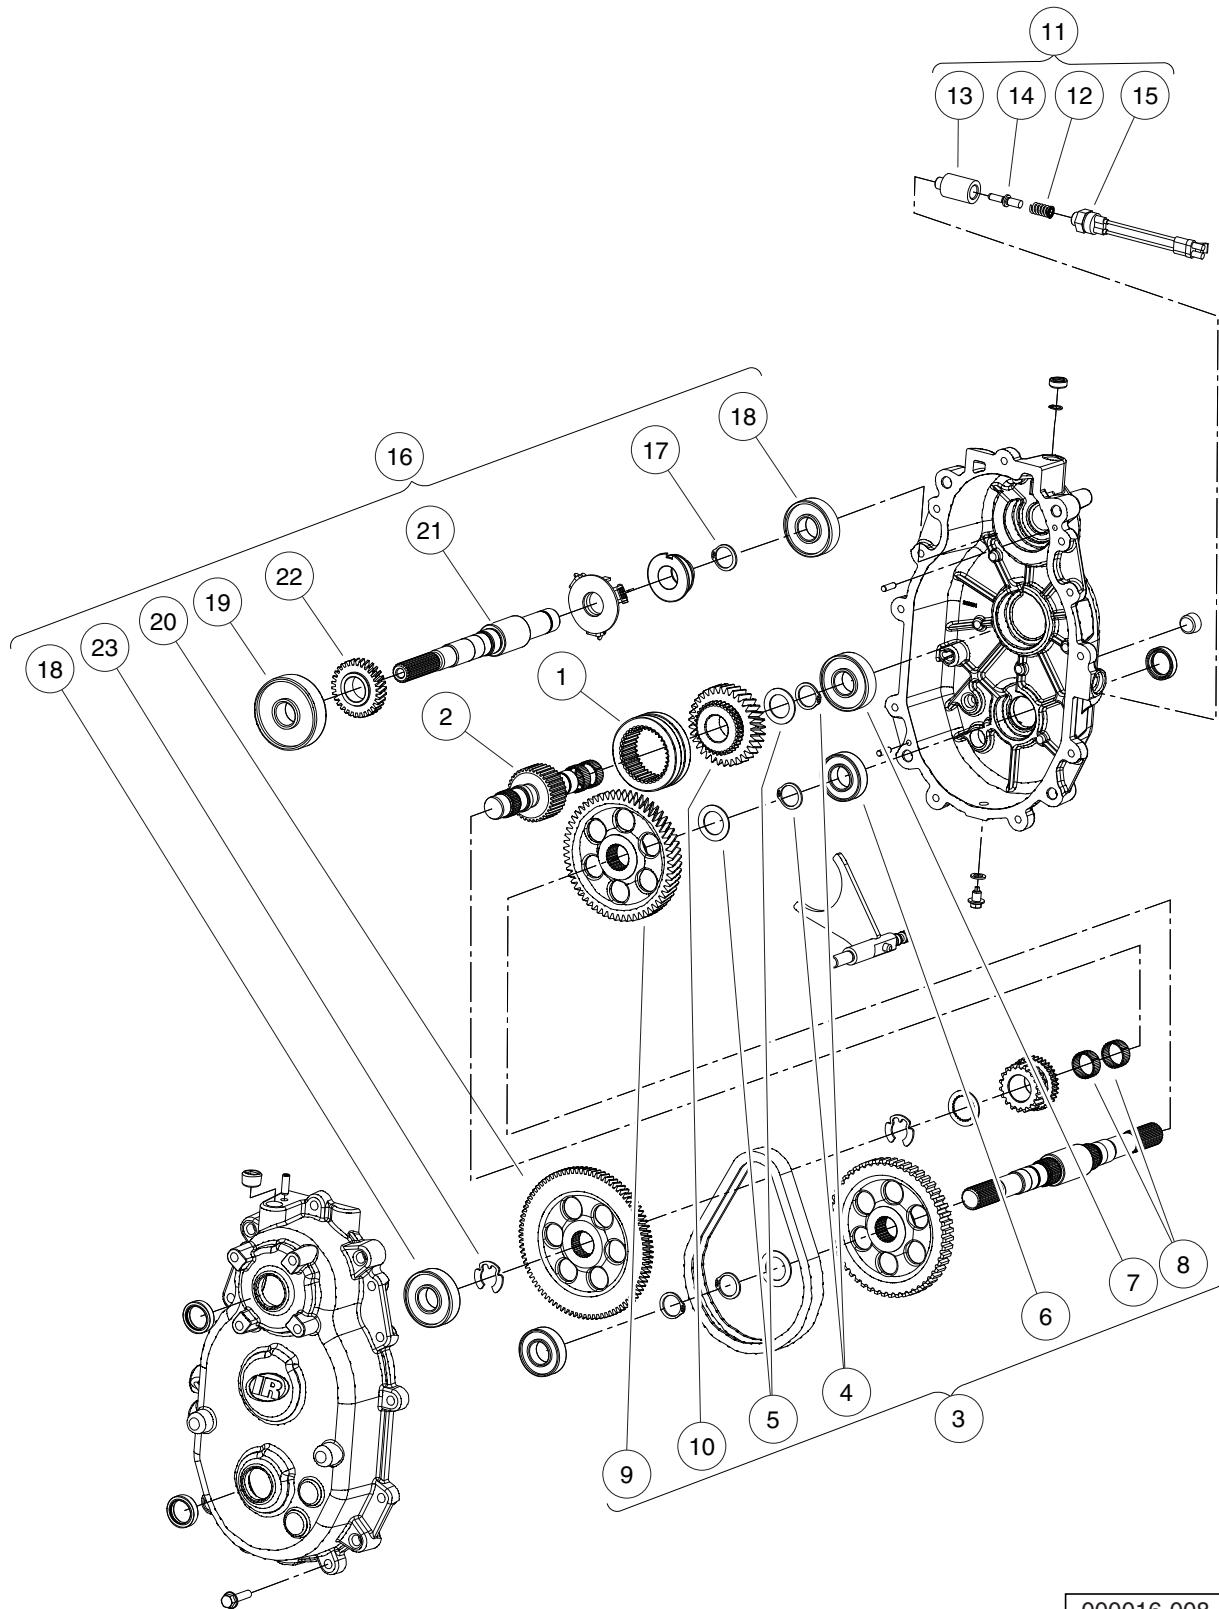13**G****D**

000016-008


TRANSMISSION, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102697501</u>	Dog, Engagement	1
2	<u>102698701</u>	Shaft, Intermediate	1
3	<u>102764901</u>	Kit, Forward Gear Repair (includes items 4 through 10)	1
4	<u>102696201</u>	Ring, Retaining, Basic External	2
5	<u>102696501</u>	Washer, Thrust, 1.007 X .062	2
6	<u>102696801</u>	Bearing, Ball	1
7	<u>102696901</u>	Bearing, Ball	1
8	<u>102697101</u>	Bearing, Needle	2
9	<u>102697901</u>	Gear, Helical 58-Tooth	1
10	<u>102698001</u>	Gear, Helical 34-Tooth	1
11	<u>102765101</u>	Kit, Neutral Switch Repair (includes items 12 through 15)	1
12	<u>102697201</u>	Spring, .484 X .340 X 1.076	1
13	N/A	Guide, Detent Bullet	1
14	<u>102698601</u>	Bullet, Detent	1
15	<u>102699301</u>	Switch, Indicator, Pollak	1
		Note: This page contains a list of components internal to the transmission. See the previous pages for other transmission components.	

13

G

D

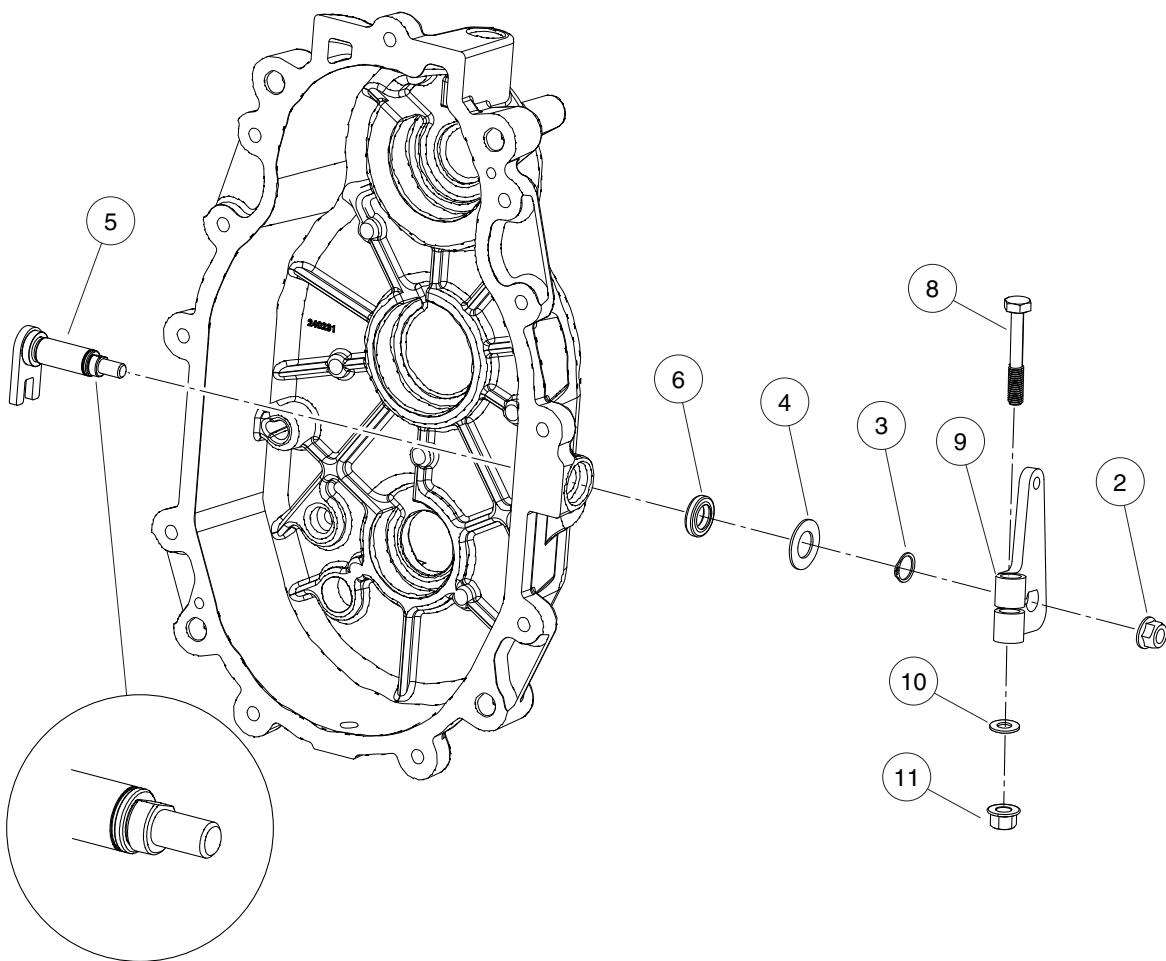13**G****D**

000016-009

TRANSMISSION SHIFT SHAFT AND BELL CRANK


TRANSMISSION SHIFT SHAFT AND BELL CRANK (STYLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102765001	Kit, Trans Shift Shaft Repair (includes items 2 through 6)	1
2	102696001	Nut, Lock Hex, Nylon, 5/16-24	1
3	102696401	Ring, Retaining, External 9/16	1
4	102696601	Washer, Flat, .58 X 1.08 X .05	1
5	N/A	Weldment, Shift, Shaft	1
6	102699601	Seal, Dul Lip, .88 X .56 X .19	1
7	103294301	Kit, Bellcrank, D Shape, Clamp (includes items 8 through 11)	1
8	1010177	Bolt, 3/8-16 X 2.00 Hex Head	1
9	N/A	Asm, Bellcrank, D Shape, Clamp	1
10	334	Washer, 3/8 Type A Flat	1
11	8754	Locknut, 3/8-16 Hex	1

13

G


D

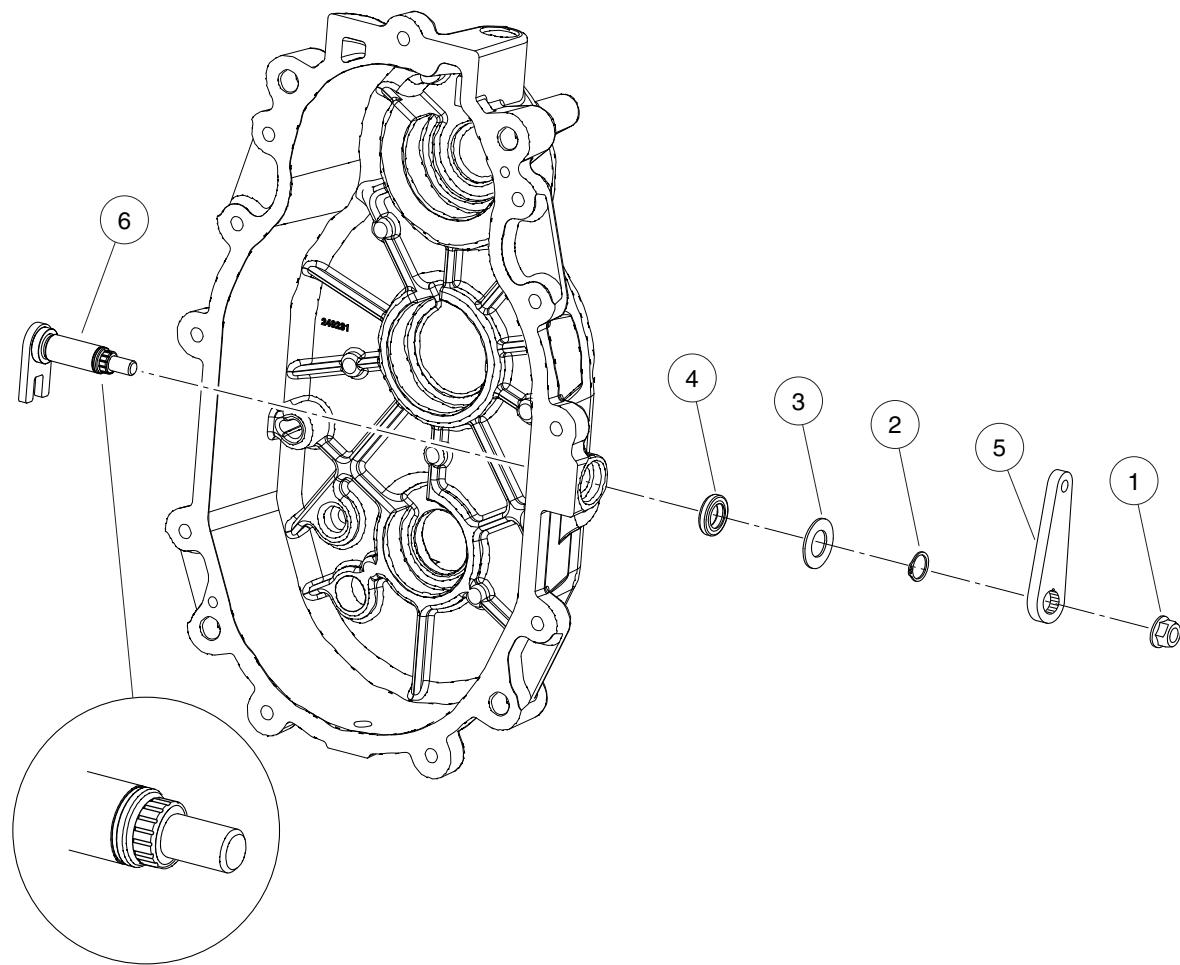13**G****D**

000016-010

TRANSMISSION SHIFT SHAFT AND BELL CRANK (STYLE B)


ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		13
1	<u>102696001</u>	Nut, Lock Hex, Nylon, 5/16-24	1	G
2	<u>102696401</u>	Ring, Retaining, External 9/16	1	
3	<u>102696601</u>	Washer, Flat, .58 X 1.08 X .05	1	
4	<u>102699601</u>	Seal, Dul Lip, .88 X .56 X .19	1	
5	<u>103239501</u>	Bellcrank, Alum	1	
6	<u>103239801</u>	Shaft, Shift	1	D

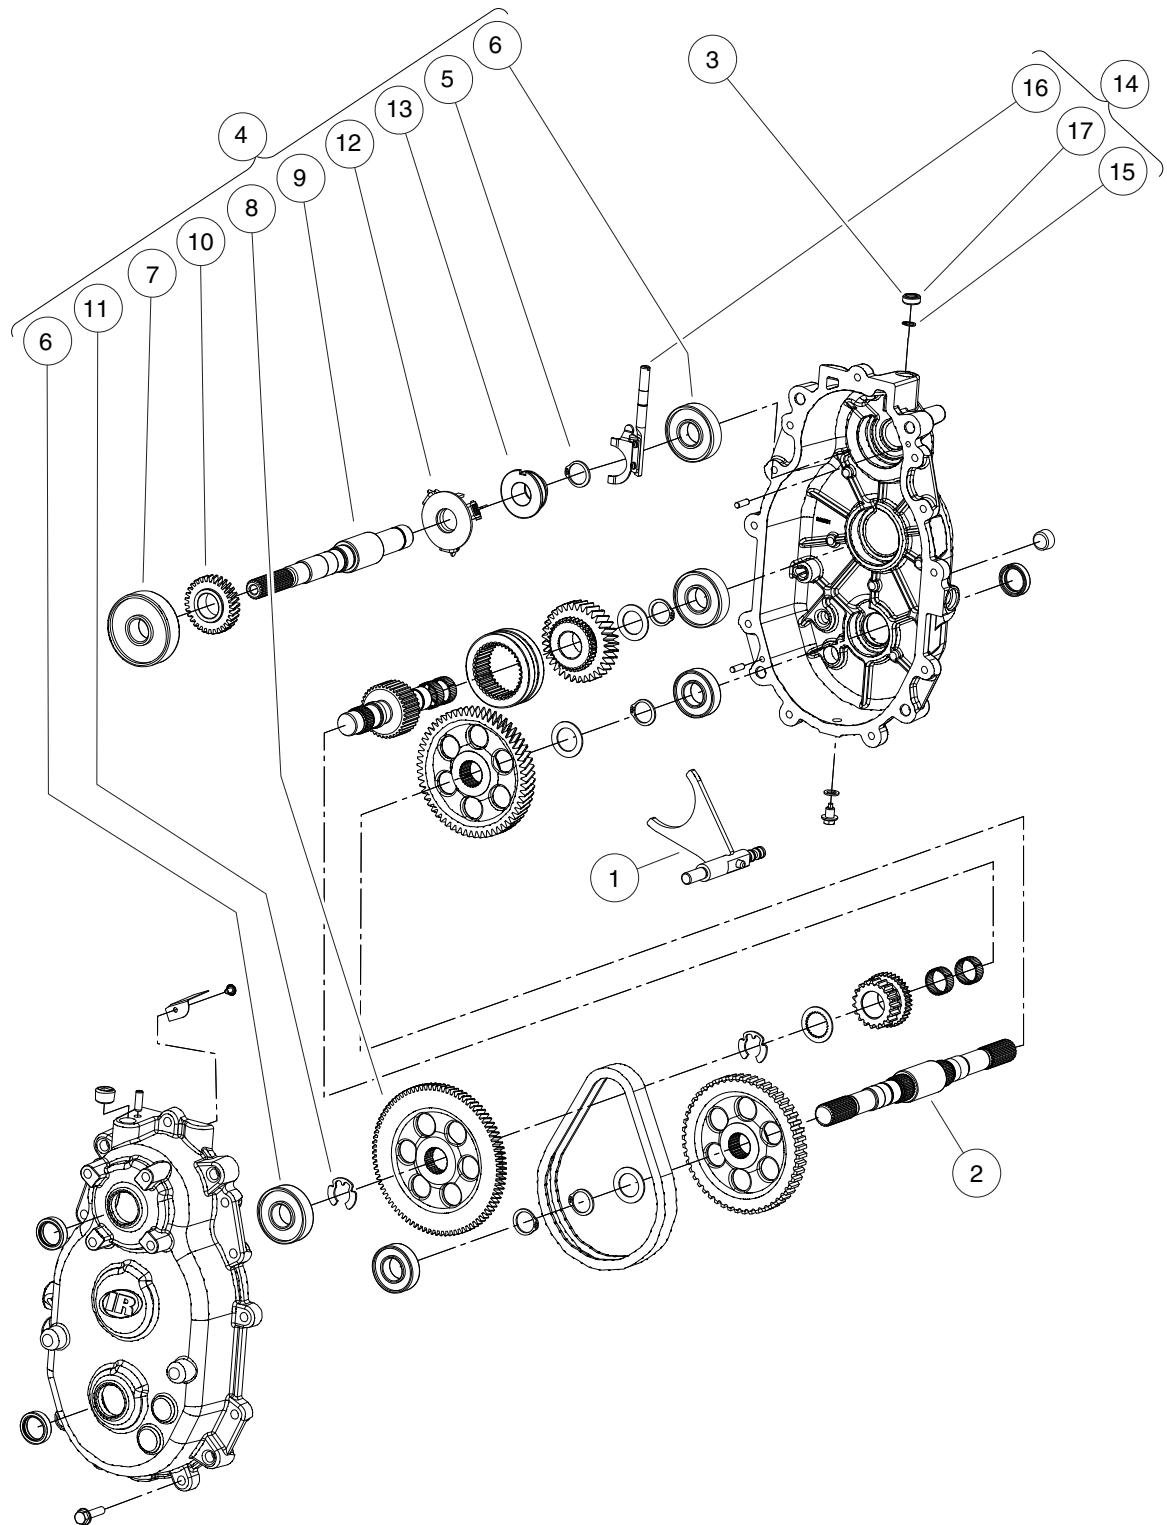13**G****D**

000016-003

TRANSMISSION, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102697801</u>	Fork, Transmission	1
2	<u>102698801</u>	Shaft, Output	1
3	<u>102699501</u>	Plug, 19mm	1
4	<u>102764701</u>	Kit, Input Shaft Repair (includes items 5 through 13)	1
5	<u>102696201</u>	Ring, Retaining, Basic External	1
6	<u>102696901</u>	Bearing, Ball	2
7	<u>102697001</u>	Bearing, Ball	1
8	<u>102698101</u>	Gear, Helical 90-Tooth	1
9	<u>102698401</u>	Shaft, Input	1
10	<u>102699001</u>	Gear, Helical, 31-tooth	1
11	<u>102699701</u>	Ring, Retaining, E-Ring	1
12	<u>102700201</u>	Sub Assy, Fly Weight	1
13	<u>102700301</u>	Sub Assy, Governor Spool	1
14	<u>102764801</u>	Kit, Governor Shaft Repair (includes items 15 through 17)	2
15	<u>102700001</u>	Ring, Retaining	1
16	<u>102700101</u>	Assy, Governor Arm	1
17	<u>102721501</u>	Seal, Dual-Lip	1
		Note: This page contains a list of components internal to the transmission. See the previous pages for other transmission components.	

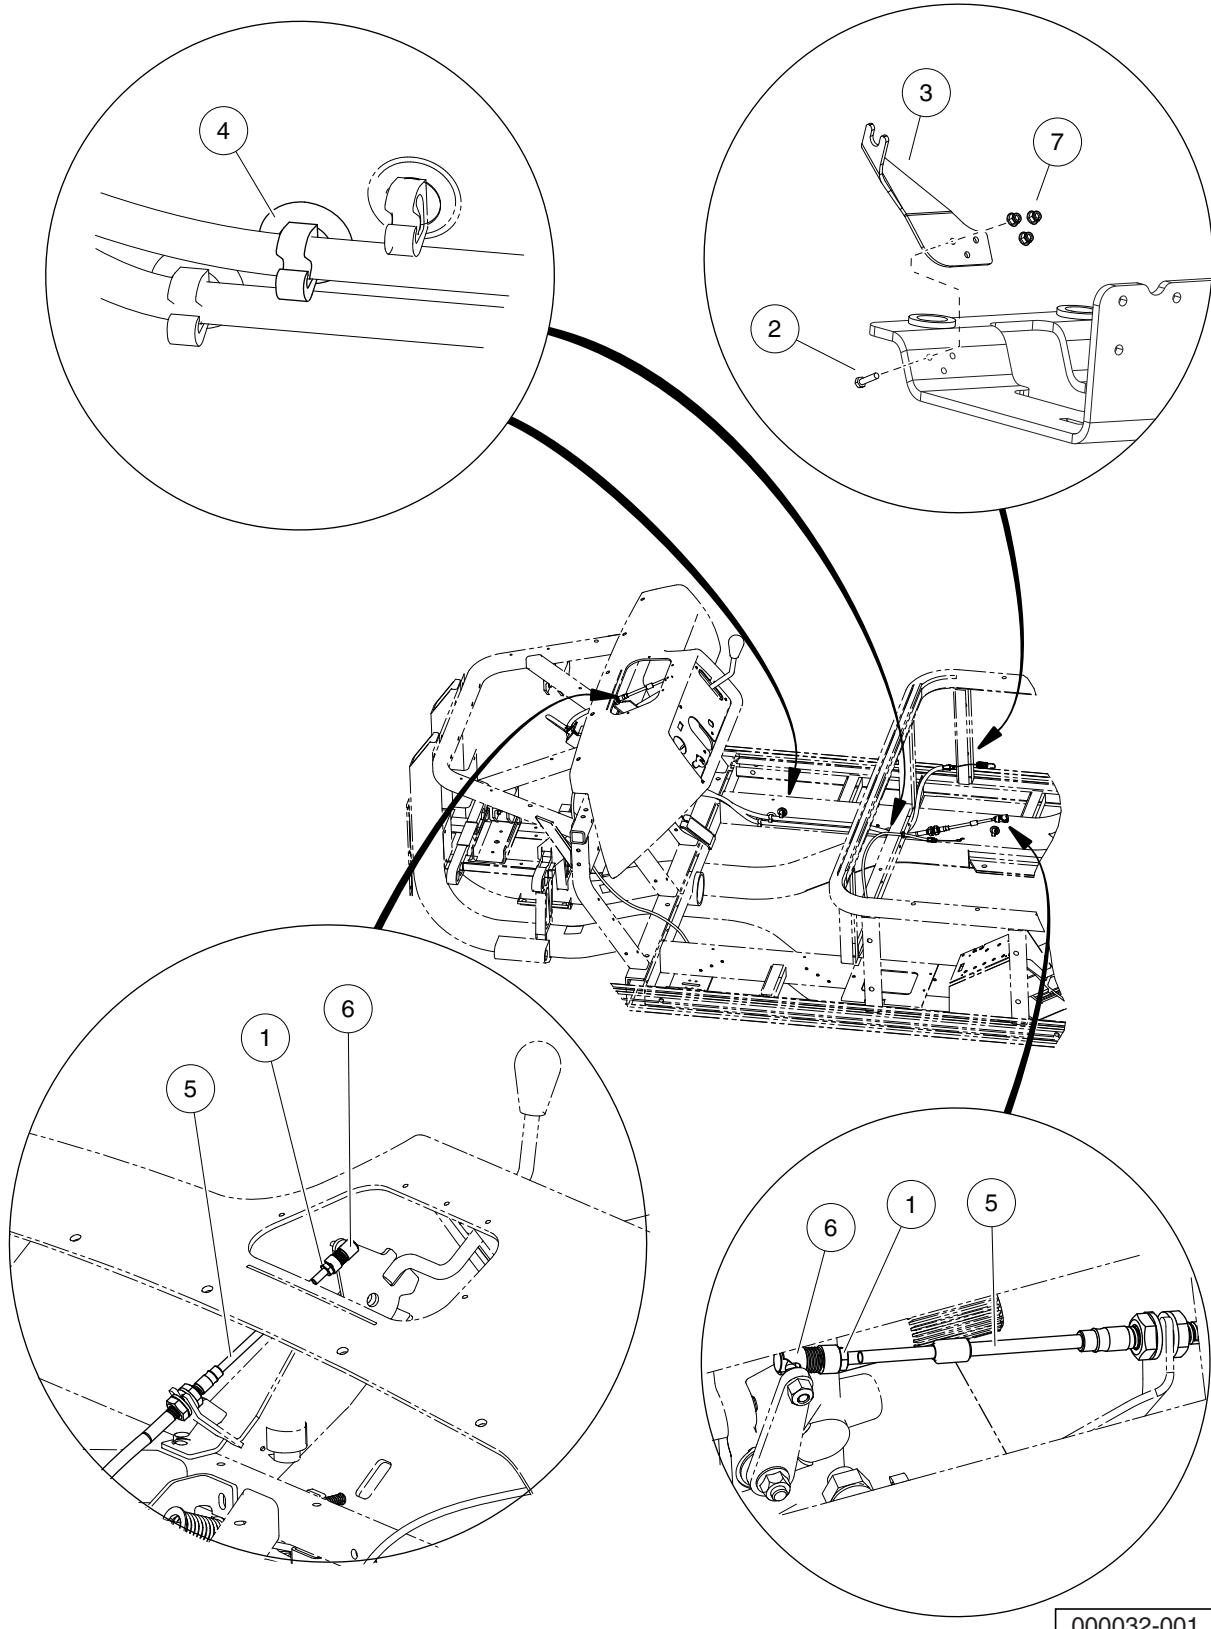13**G****D**

000032-001

TRANSMISSION CABLE

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		13
1	<u>1011084</u>	Nut, 1/4-28 Hex Jam	2	G
2	<u>1012769</u>	Screw, M6-1.00 X 25mm Hex Cap	3	
3	<u>102382401</u>	Bracket, FNR Trans Cable	1	
4	<u>102475701</u>	Clip, Brake Line	2	D
5	<u>102495801</u>	Cable, Transmission Shift	1	
6	<u>102615801</u>	Joint, Ball, .346 Dia	2	
7	<u>102621501</u>	Nut Flg, M6 X 1.0 Nylon	3	

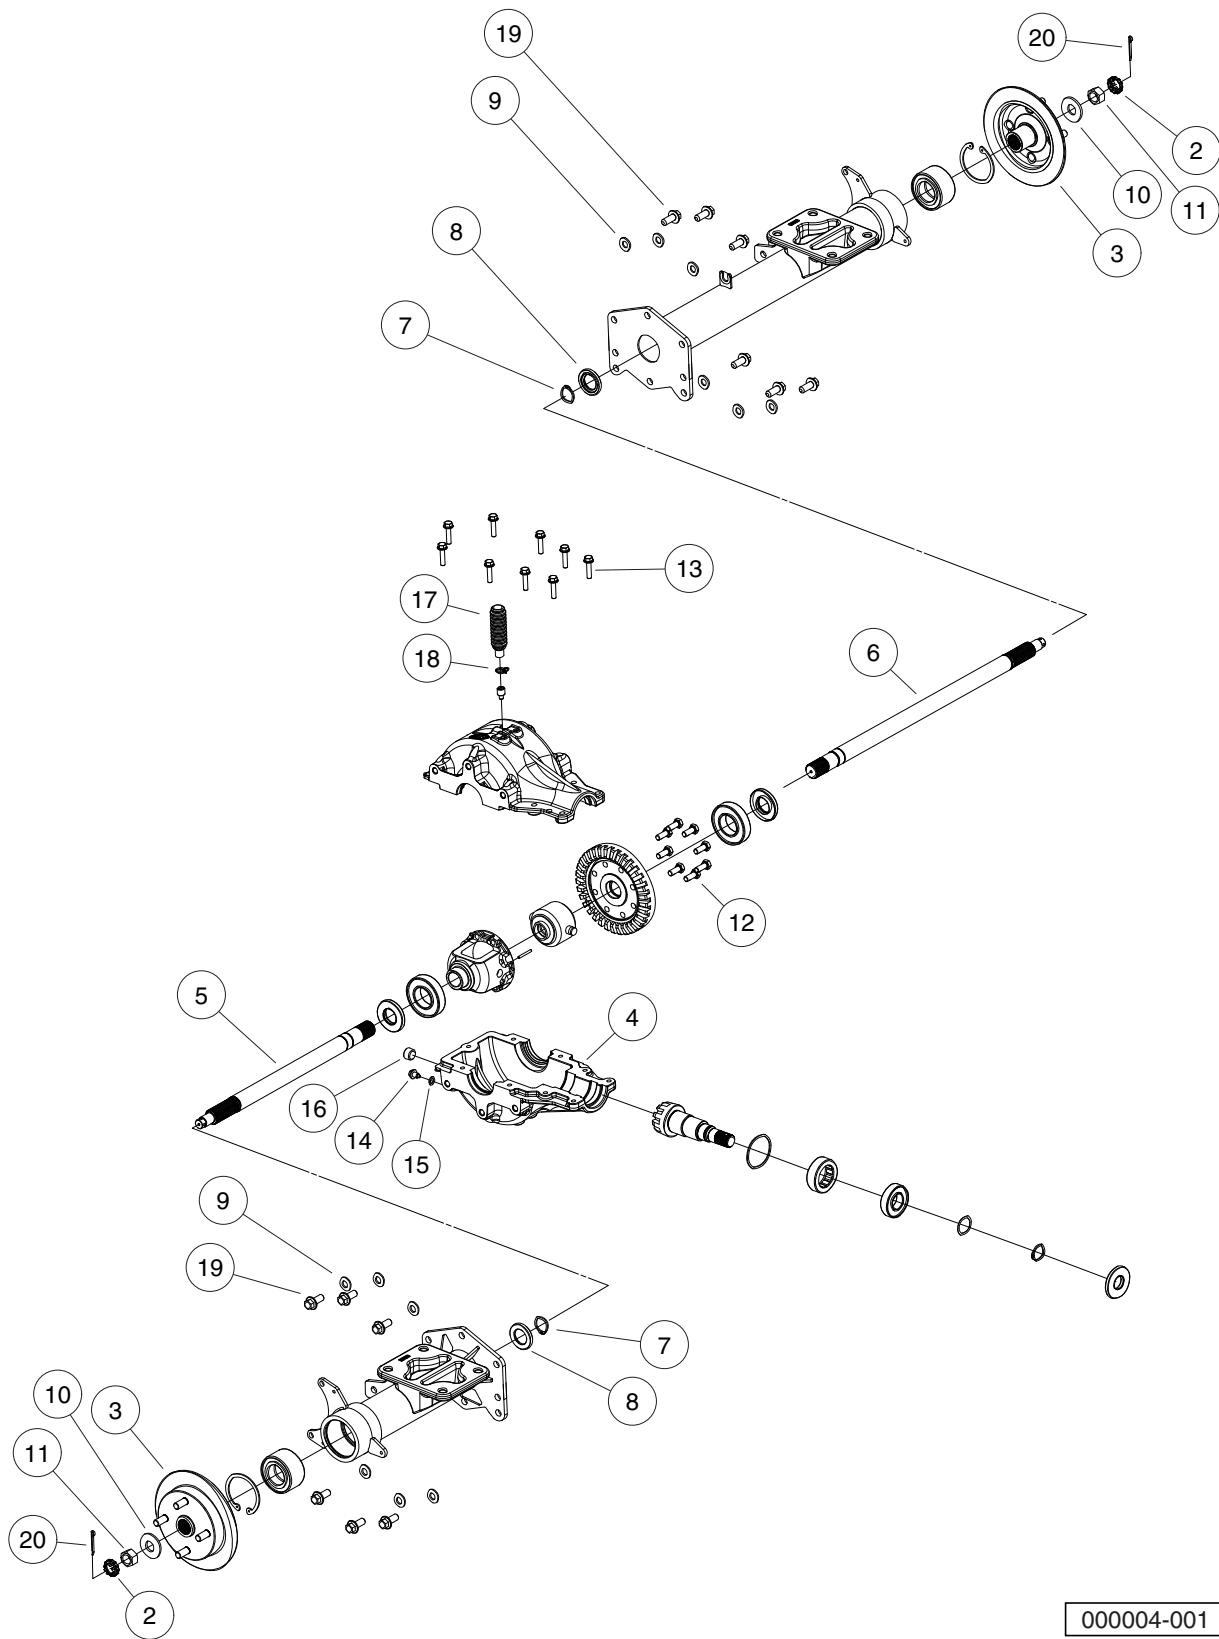13**G****D**


REAR DIFFERENTIAL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102831501</u>	Axle, Rear, Guard Mounts (Complete Assembly) (includes items 2 through 20)	1
2	<u>102276001</u>	Locking Cap, Nut	2
3	<u>102376602</u>	Assy, Rotor, Brake, Rear	2
4	<u>102449101</u>	Gearcase, Lower, Machined	1
5	<u>102463501</u>	Axle, Right-hand	1
6	<u>102463601</u>	Axle, Left-Hand	1
7	<u>102463801</u>	Ring, Retaining, Internal	2
8	<u>102672101</u>	Washer,counterbored 51 X 30	2
9	<u>102672201</u>	Washer, Belleville, 1.063 X .043	12
10	<u>102672301</u>	Washer, Belleville, 49 X 4	2
11	<u>102672401</u>	Nut, Hex, M20 X 1.5 , Modified	2
12	N/A	Screw, M10 X 25	8
13	<u>102693301</u>	Screw,hex Flange, M8 X 35	9
14	<u>102693401</u>	Plug,3/8-16, Hex Flange	1
15	<u>102693501</u>	Washer, .625 X .382 X .60	1
16	<u>102694201</u>	Plug, Square Skt, 1/12-14, Ptf	1
17	<u>102694301</u>	Bellows, Vent, Upper Housing	1
18	<u>102694401</u>	Clamp, Hose, Dw-9.5	1
19	<u>102694701</u>	Screw, Hex Fl, M12 X 1.75 X 30	12
20	<u>102694801</u>	Pin, Cotter, 5/32 X 1.25	2

13

G

D

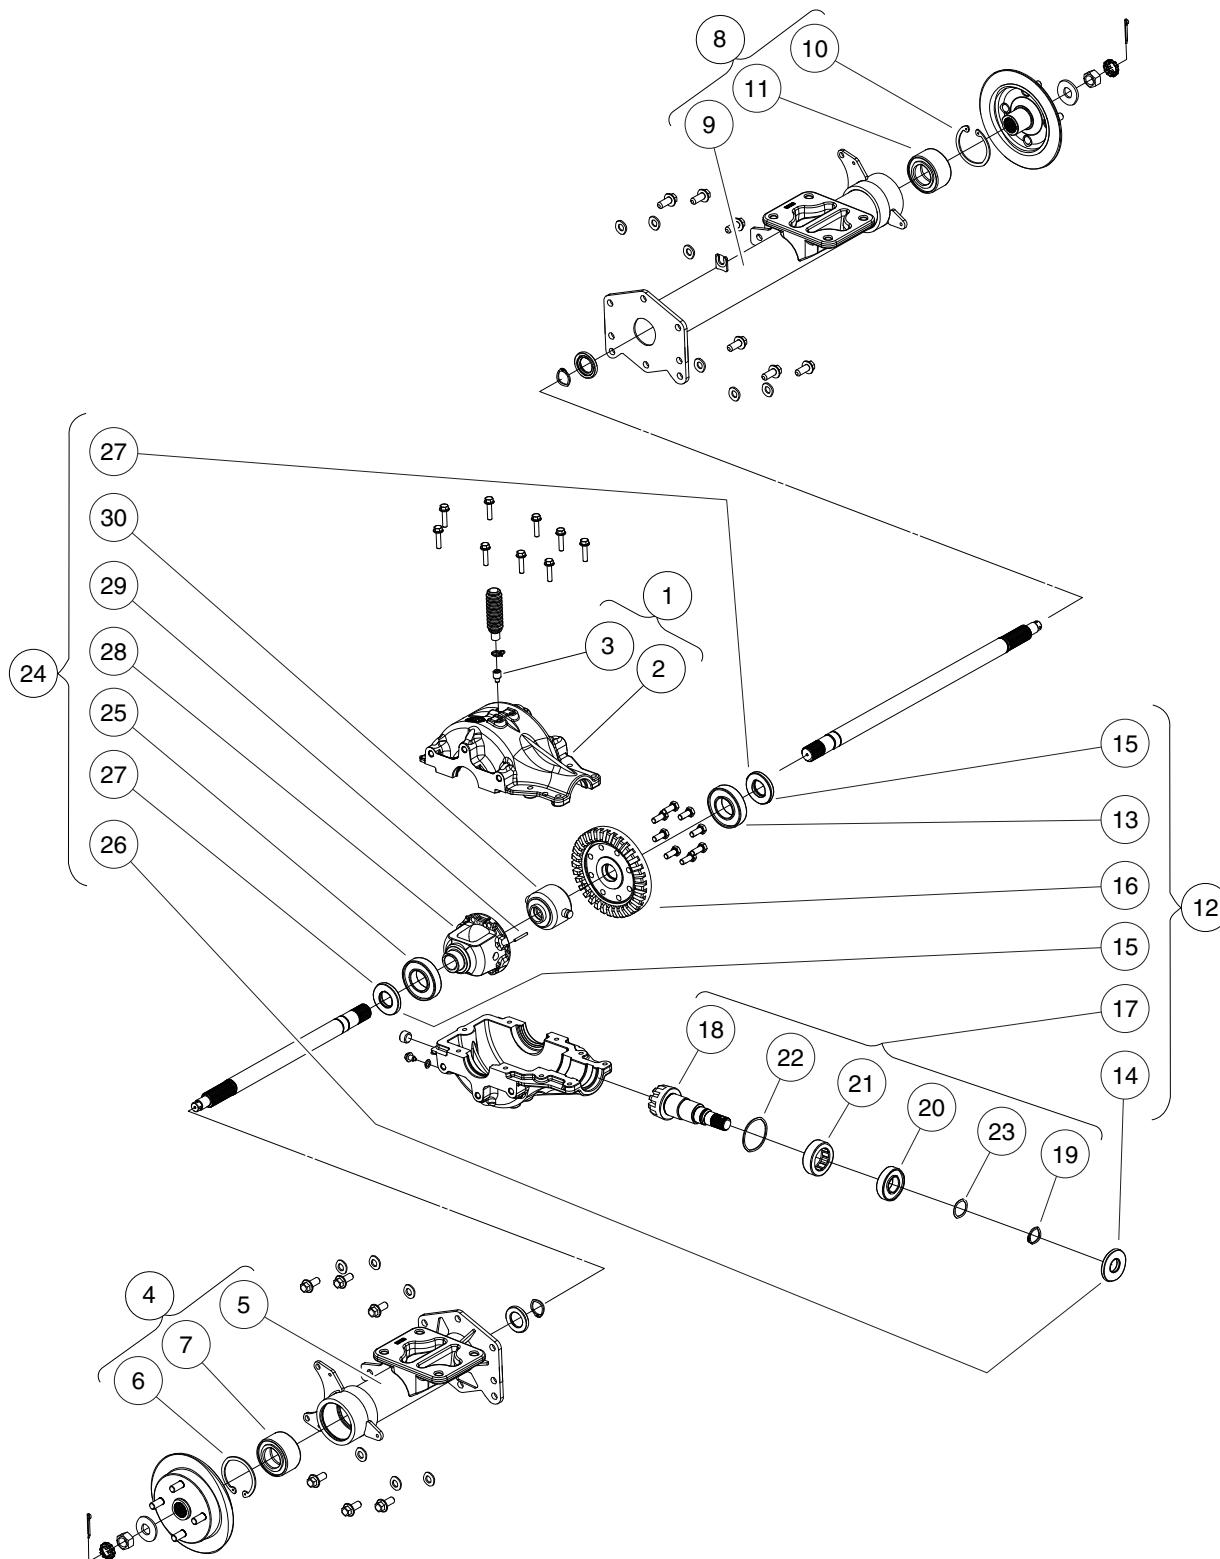13**G****D**

000004-002

REAR DIFFERENTIAL, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102765301</u>	Asm, Gearcase, Upper (includes items 2 and 3)	1
2	<u>102449201</u>	Gearcase, Upper, Machined	1
3	<u>102694001</u>	Vent, Top, Upper Housing	1
4	<u>102765401</u>	Asm, Axle Tube, RH (includes items 5 through 7)	1
5	<u>102463401</u>	Weldment, Axle Tube Rh	1
6	<u>102463801</u>	Ring, Retaining, Internal	1
7	<u>102464301</u>	Bearing	1
8	<u>102765501</u>	Asm, Axle Tube, LH (includes items 9 through 11)	1
9	<u>102463301</u>	Weldment, Axle Tube Lh	1
10	<u>102463801</u>	Ring, Retaining, Internal	1
11	<u>102464301</u>	Bearing	1
12	<u>102765801</u>	Kit, Rear Axle Gear Repair (includes items 13 through 17)	1
13	<u>102464201</u>	Bearing, Ball	1
14	<u>102464401</u>	Seal, Dual-Lip 25x 62x 7tc	1
15	<u>102464501</u>	Seal, Dual-Lip 30x 62x 8tc	2
16	<u>102762601</u>	Gear, Ring, 33-Tooth	1
17	<u>102765701</u>	Asm, Pinion W/ Bearings (includes items 18 through 23)	1
18	<u>102463101</u>	Pinion, 10t Machined	1
19	<u>102463901</u>	Ring, Retaining, External	1
20	<u>102464001</u>	Bearing, Ball	1
21	<u>102464101</u>	Bearing, Needle, Drawn Shell	1
22	<u>102693601</u>	Washer, 2.625 X 2.367 X .06	1
23	<u>102694502</u>	Shim, 1.50 X 1.189 X .008	1
24	<u>102961501</u>	Asm, Differential & Carrier (includes items 25 through 30)	1
25	<u>102464201</u>	Bearing, Ball	1
26	<u>102464401</u>	Seal, Dual-Lip 25x 62x 7tc	1
27	<u>102464501</u>	Seal, Dual-Lip 30x 62x 8tc	2
28	<u>102961301</u>	Housing, Differential, Mach	1
29	<u>102961401</u>	Pin, Dowel, 4 X 35	1
30	<u>102961601</u>	Asm, Locker, Nongrease/Spacers	1

13

G

D

13


G

D

RADIATOR AND COOLANT SYSTEM (DIESEL VEHICLES)

14

D

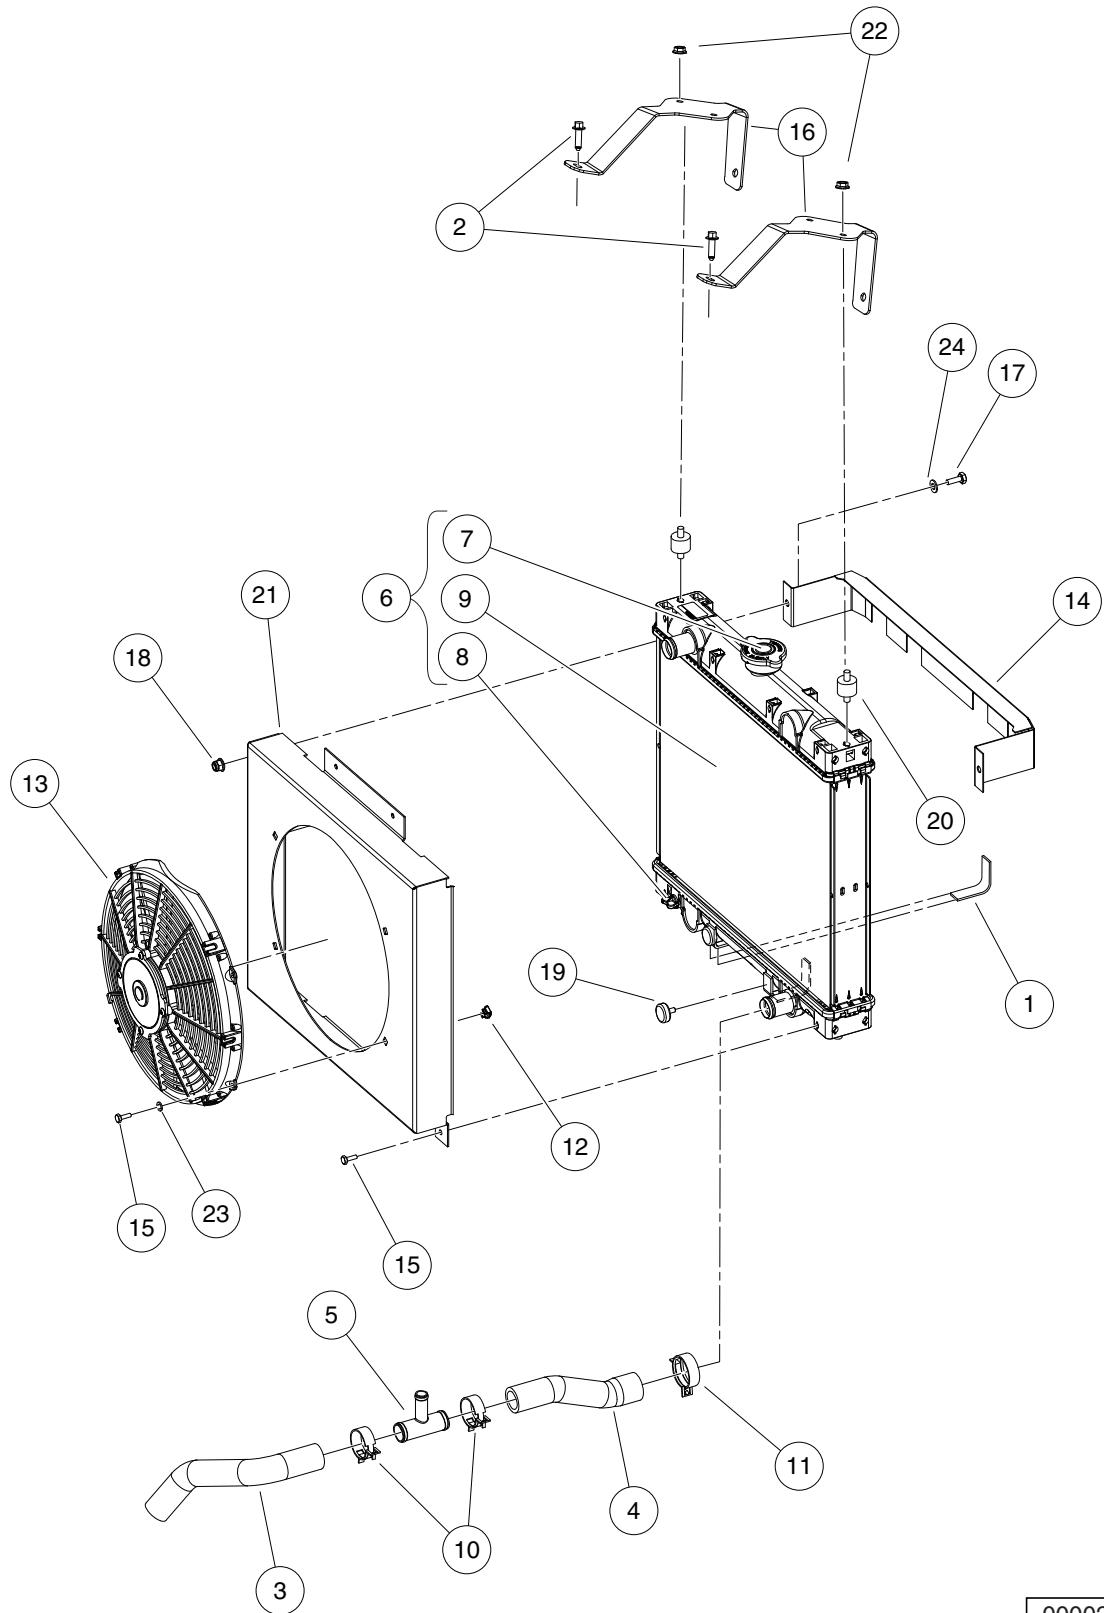14**D**

000024-001


RADIATOR

14

D

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014471</u>	Tape, Vinyl Foam 1/8" x 3/4" *	1
2	<u>102289001</u>	Screw, M8X1.25X30, Hex	2
3	<u>102377801</u>	Hose, Coolant Lower Pipe	1
4	<u>102377901</u>	Hose, Coolant Lower Rad	1
5	<u>102380301</u>	Tee, Coolant Fill	1
6	<u>102410301</u>	Exchanger, Engine Coolant (includes items 7 and 8)	1
7	<u>102737301</u>	Cap, Radiator	1
8	<u>102737401</u>	Drain Cock, Radiator	1
9	<u>102411207</u>	Clamp, Hose, Ctb 35mm	2
10	<u>102411208</u>	Clamp, Hose, Ctb 38mm	1
11	<u>102411301</u>	Nut, Self Retaining	4
12	<u>102436701</u>	Fan, Cooling 12 In Elect	1
13	<u>102452101</u>	Guard, Radiator, Top	1
14	<u>102490301</u>	Bolt, M6 X 1 X 16 Loctite	8
15	<u>102493401</u>	Bracket, Upper Radiator Mount	2
16	<u>102498101</u>	Bolt, M8 X 1.25 X 20	2
17	<u>102618601</u>	Lock Nut, Flg M8 X 1.25 Nylon	2
18	<u>102684401</u>	Bumper, 13mm Stud	2
19	<u>102685001</u>	Isolator, Twin-Stud	2
20	<u>102855501</u>	Shroud, Radiator Fan	1
21	<u>96704416</u>	Nut Flg, M8 X 1.25 Serrated	2
22	<u>96705199</u>	Washer, M6	4
23	<u>96741038</u>	Washer, M8 Hard	2

* Note: Item not shown.

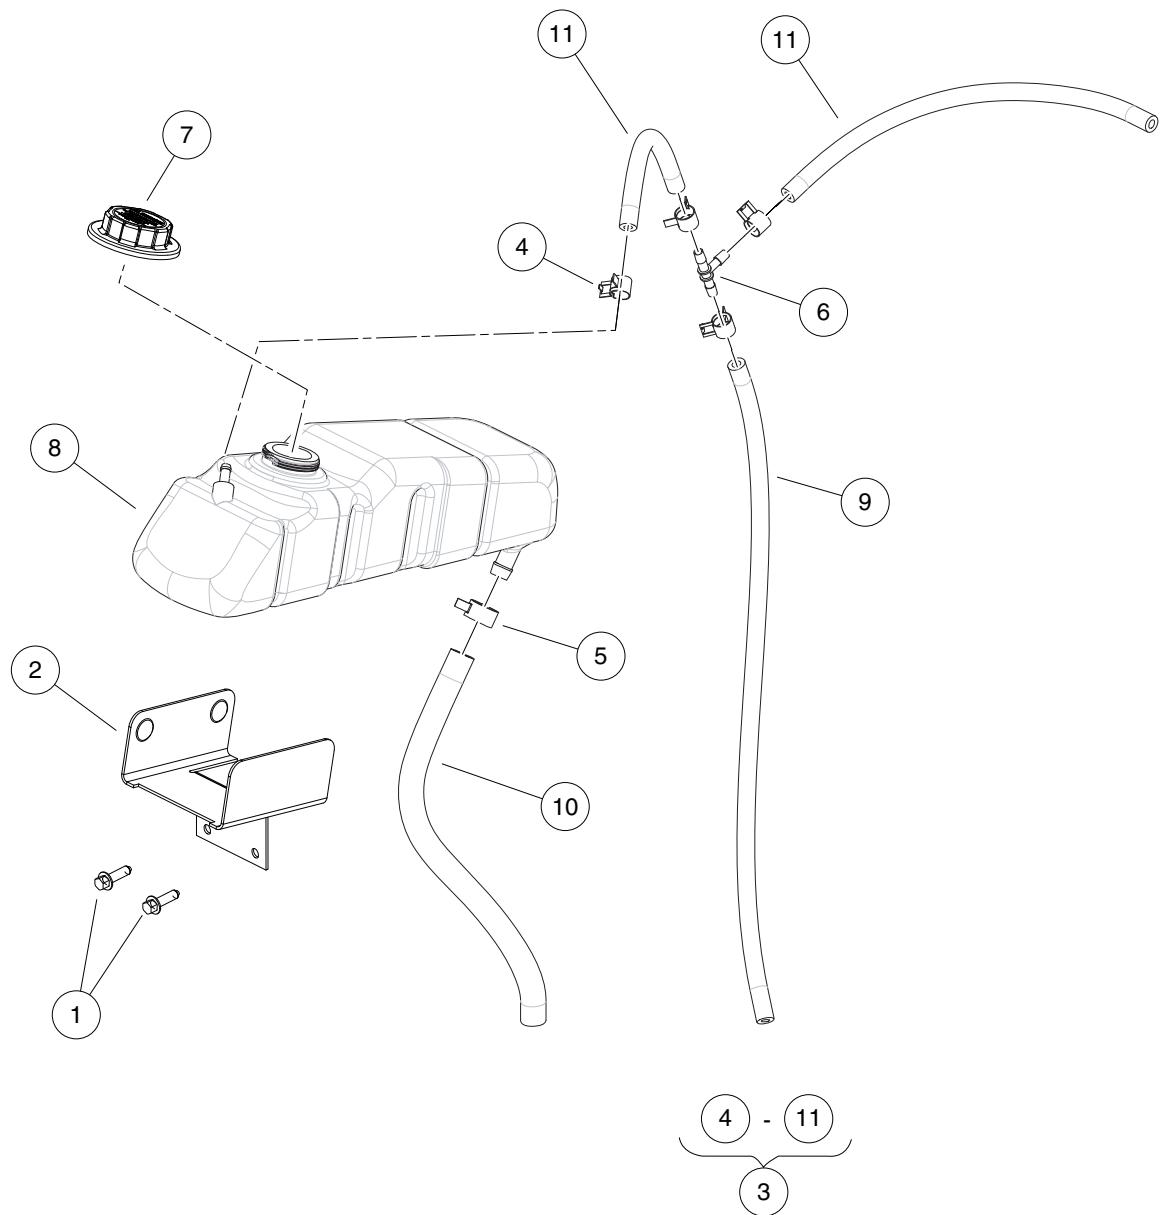


000078-001

COOLANT EXPANSION TANK

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102289001</u>	Screw, M8X1.25X30, Hex	2
2	<u>102460801</u>	Bracket, Coolant Bottle	1
3	N/A	Asm, Tank, Expansion (includes items 4 through 11)	1
4	<u>102411204</u>	Clamp, Hose, CTB 15mm	4
5	<u>102411205</u>	Clamp, Hose, CTB 22mm	1
6	<u>102411701</u>	Fitting, Tee	1
7	<u>102427501</u>	Cap, Radiator	1
8	<u>102434501</u>	Tank, Expansion	1
9	<u>102435201</u>	Hose, Tee To Vent Tube, Coolnt	1
10	<u>102807601</u>	Hose, Clnt, 5/8 Sae J20r3 Bulk	1
11	<u>102807801</u>	Hose, Clnt 5/16 Sae J20r3 Bulk	1

14

D

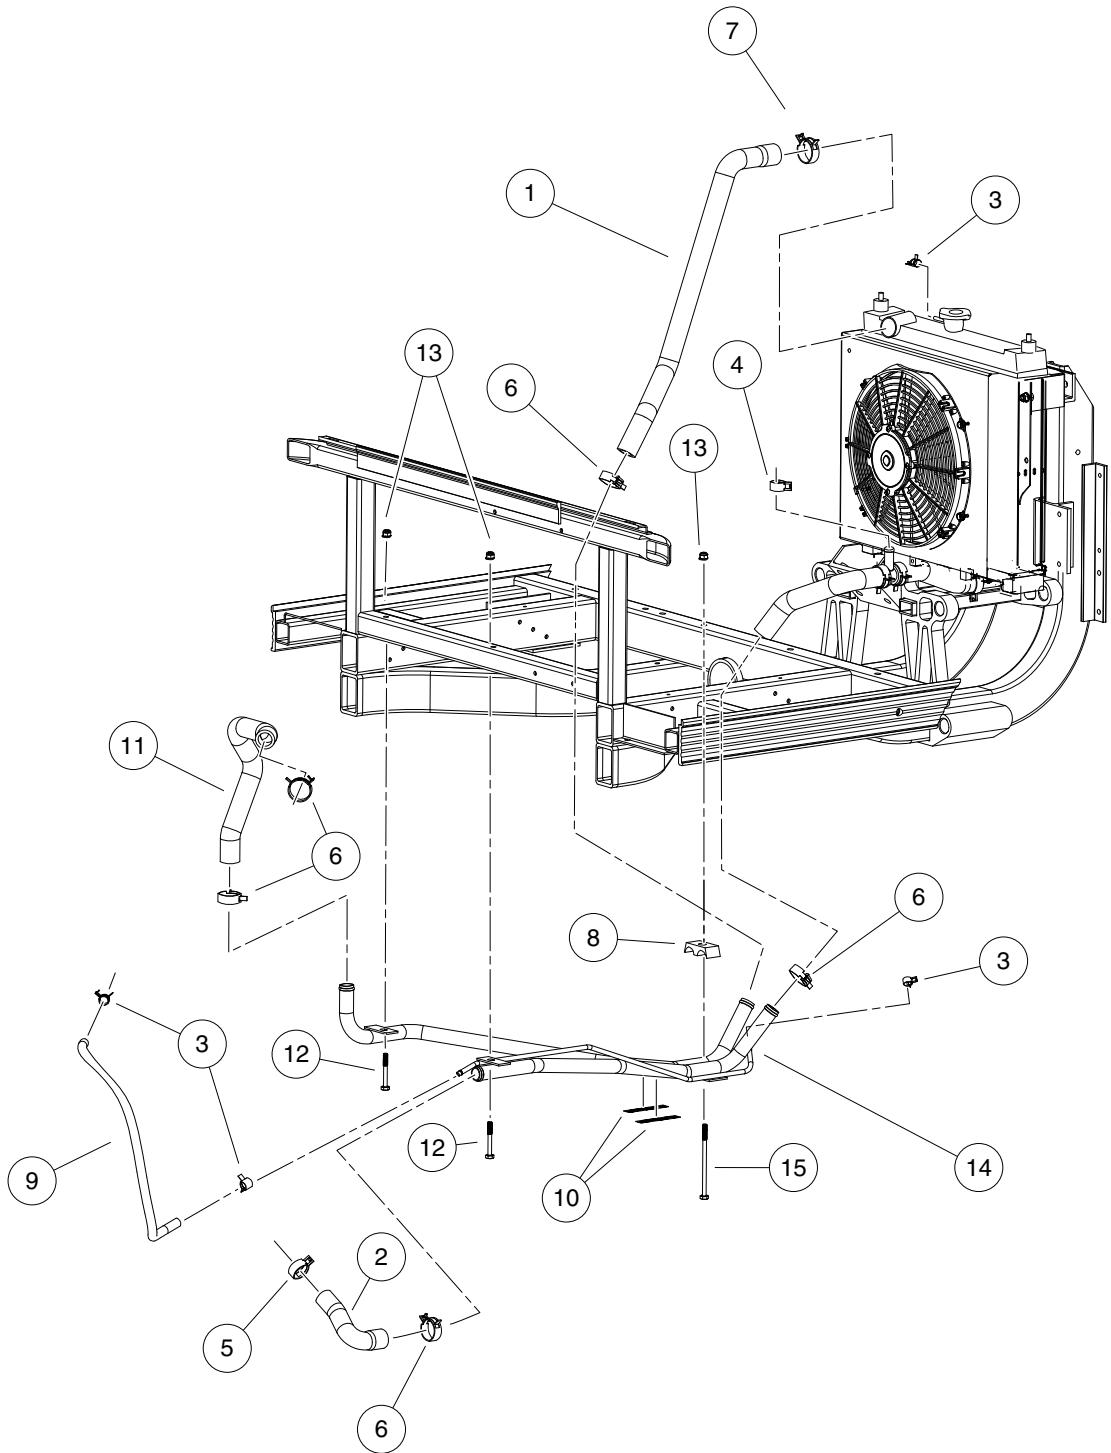


000079-001

COOLANT PIPES AND HOSES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102377501</u>	Hose, Coolant Upper Rad	1
2	<u>102377601</u>	Hose, Coolant Lower Eng	1
3	<u>102411204</u>	Clamp, Hose, CTB 15mm	4
4	<u>102411205</u>	Clamp, Hose, CTB 22mm	1
5	<u>102411206</u>	Clamp, Hose, Ctb 30mm	1
6	<u>102411207</u>	Clamp, Hose, Ctb 35mm	5
7	<u>102411208</u>	Clamp, Hose, Ctb 38mm	1
8	<u>102427601</u>	Clamp, Bar	1
9	<u>102435001</u>	Hose, Vent Tube To Eng, Coolnt	1
10	<u>102458901</u>	Decal, Hot Surface Warning	2
11	<u>102480501</u>	Hose, Coolant, Return, Engine	1
12	<u>102618301</u>	Bolt Flanged Head, M8 X 1.25 X 65	2
13	<u>102618601</u>	Lock Nut, Flg M8 X 1.25 Nylon	3
14	<u>102628701</u>	Weldment, Group, Coolant Pipe (includes items 15 through 19)	1
15	<u>102377401</u>	Pipe, Coolant Upper	1
16	<u>102377701</u>	Pipe, Coolant Lower	1
17	N/A	Tab, Rear Mntg, Coolant Pipe	2
18	N/A	Pipe, Vent, Coolant	1
19	N/A	Tab, Cooling Pipe Mount	1
20	<u>96747126</u>	Bolt, M8 X 1.25 X 130	1

14

D

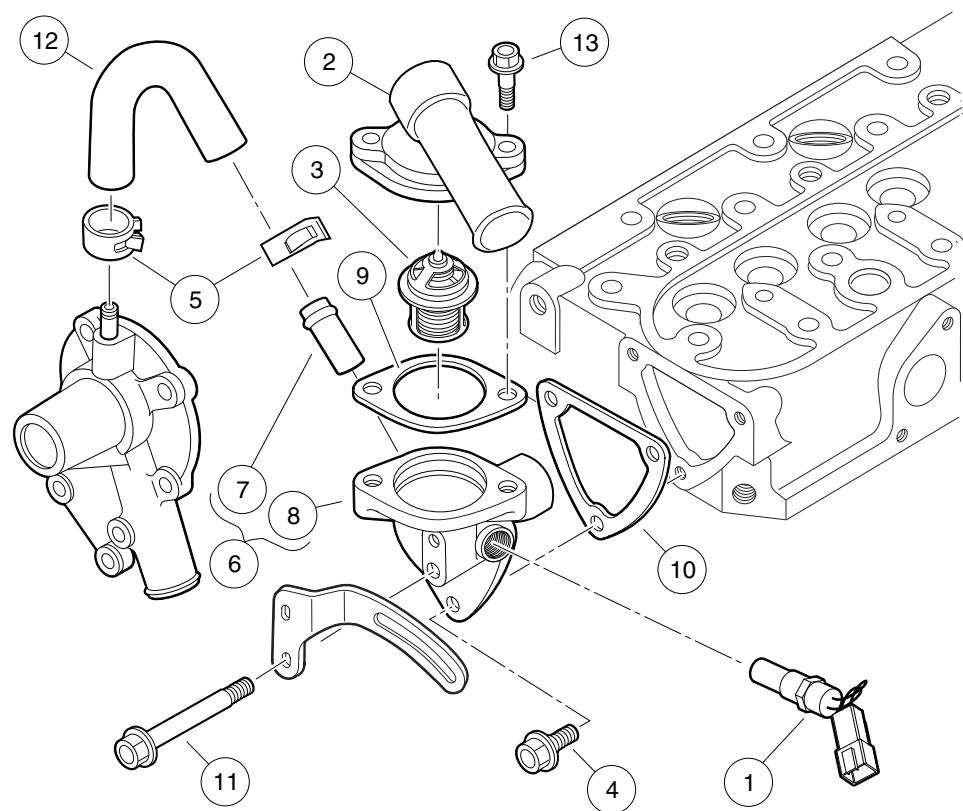


000059-001

WATER FLANGE AND THERMOSTAT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102410001</u>	Sensor, Coolant Temp	1
2	<u>102631301</u>	Cover, Thermostat	1
3	<u>102631401</u>	Assy, Thermostat	1
4	<u>102631601</u>	Bolt, M6 X 1 X 20	2
5	<u>102633001</u>	Band, Pipe	2
6	<u>102633201</u>	Flange, Water (includes items 7 and 8)	1
7	<u>102633301</u>	Pipe, Water Return, D722	1
8	N/A	Flange, Water	1
9	<u>102633401</u>	Gasket, Thermostat	1
10	<u>102654701</u>	Gasket, Water Flange	1
11	<u>102730901</u>	Bolt, Alt, D722, Stay Lower	1
12	<u>102731001</u>	Pipe, Water Return, D722	1
13	<u>102731101</u>	Bolt, D722, Thermostat Cover	2

14


D

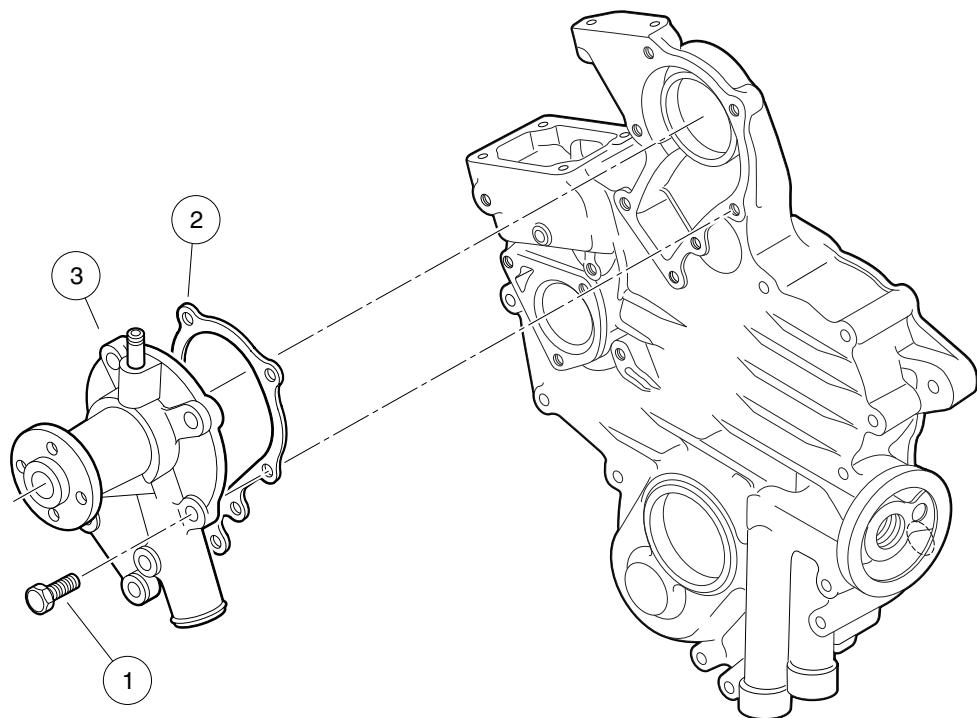

000060-001

WATER PUMP

ITEM	PART NO.	DESCRIPTION	QTY	
1	<u>102608701</u>	1 2 3 4 Bolt, M6 X 1 X 22	4	
2	<u>102632701</u>	Gasket, Water Pump, D722	1	
3	<u>102731201</u>	Water Pump Assembly	1	D

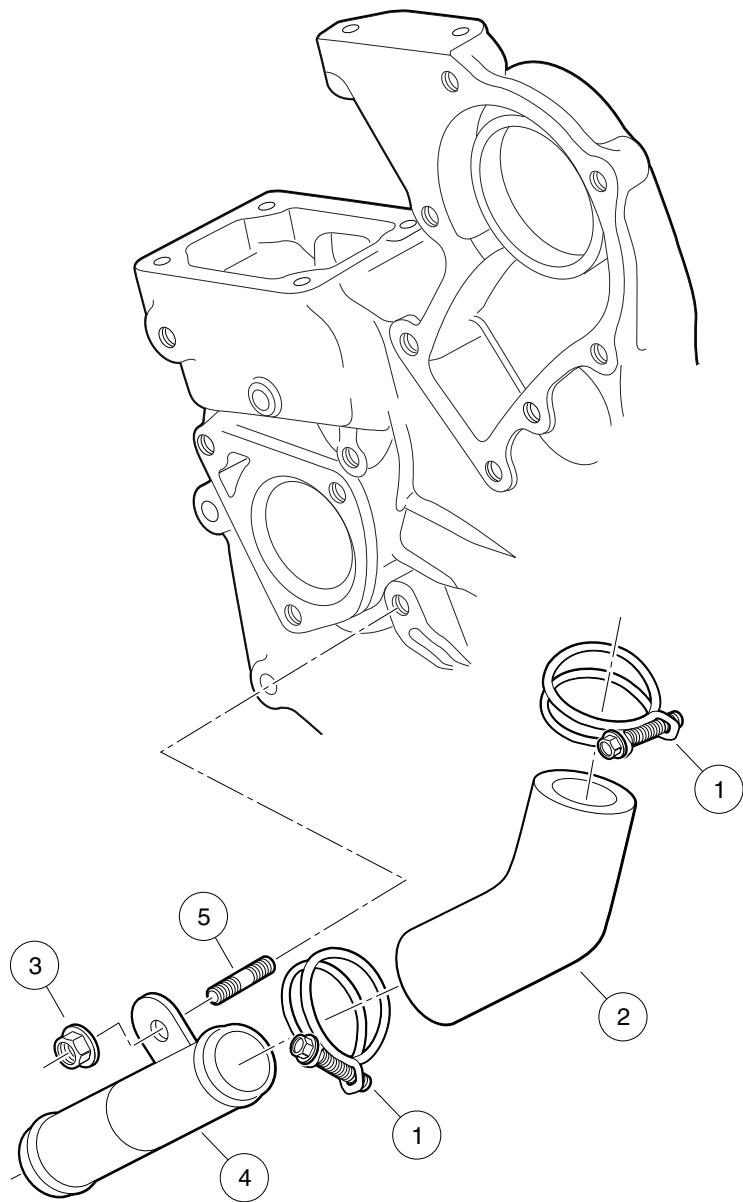14**D**

000061-001

BLOCK COOLANT PIPE

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		
1	<u>102631701</u>	Band, Pipe, with Nut	2	
2	<u>102631801</u>	Pipe, Water, Bent	1	
3	<u>102632001</u>	Nut, Flange, M6	1	
4	<u>102632101</u>	Pipe, Water, Bent	1	
5	<u>102632201</u>	Stud, M6 X 15	1	

14

D

14

D


MAINTENANCE AND SERVICE TOOLS

15

G

E

D

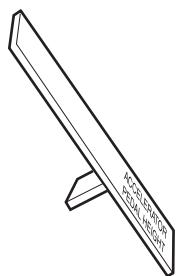15**G****E****D**


1



2



3

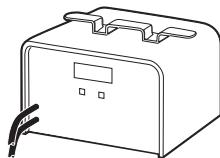


4




5



6

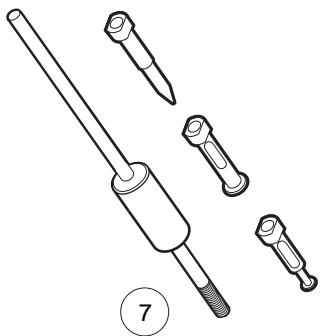


7

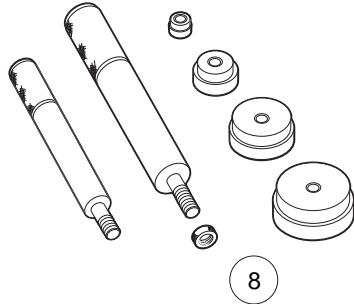

8




9

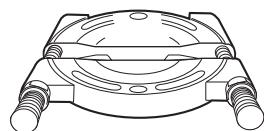


10



11

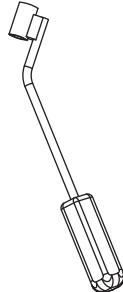


12

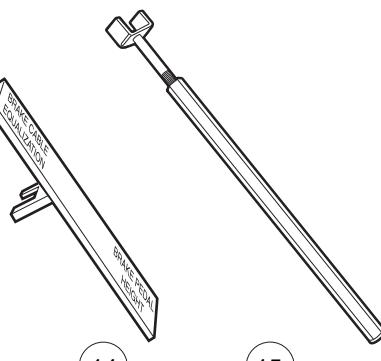


14

15

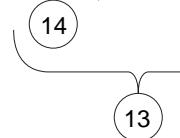

13

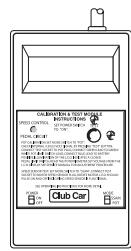


16



17




18

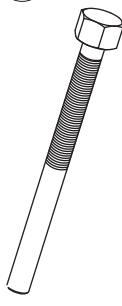




19

MAINTENANCE AND SERVICE TOOLS

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	
		1 2 3 4 The following tool list includes all tools available from Club Car for maintenance and service procedures for gasoline, electric, and/or diesel vehicles, both past and present models. Be sure to carefully examine the tool list for applicability to your vehicle before ordering.				15
1	<u>101871001</u>	Accelerator Pedal Adjustment Tool		1	1	G
2	<u>101813202</u>	Adhesive, Guide Ring, 3-Gram Tube			1	E
3	<u>101641202</u>	Arbor		1		D
4	<u>101831901</u>	Battery Discharge Machine, 36/48 Volt			1	
5	<u>1014305</u>	Battery Terminal Protector Spray	1	1	1	
6	<u>1011767</u>	Battery Thermometer	1	1	1	
7	<u>1016417</u>	Bearing and Oil Seal Remover Assembly	1	1	1	
8	<u>1016416</u>	Bearing Driver Set	1	1	1	
9	<u>1012811</u>	Bearing Puller	1	1	1	
10	<u>1012812</u>	Bearing Puller Wedge Attachment	1	1	1	
11	1013582	Brake Adjustment Tool (used only on vehicles with manually adjusted mechanical brakes)		1	1	
12	<u>102555501</u>	Brake Cable Release Tool	1	1	1	
13	102249901	Brake Pedal Adjustment Tool Kit (used for the Carryall Electric Industrial Truck only) (includes items 14 and 15)			1	
14	****	Brake Pedal Adjustment Tool			1	
15	****	Brake Pedal Tension Tool			1	
16	<u>101887101</u>	Calibration Test Module			1	
17	<u>101808401</u>	Cam Installation Tool			1	
18	<u>102562401</u>	Charger Bezel Tool			1	
19	<u>102686101</u>	Clutch Removal Tool (for 4x4 vehicles)	1	1		
		Please refer to the maintenance and service manual for proper tool application. **** Special order item available upon request				

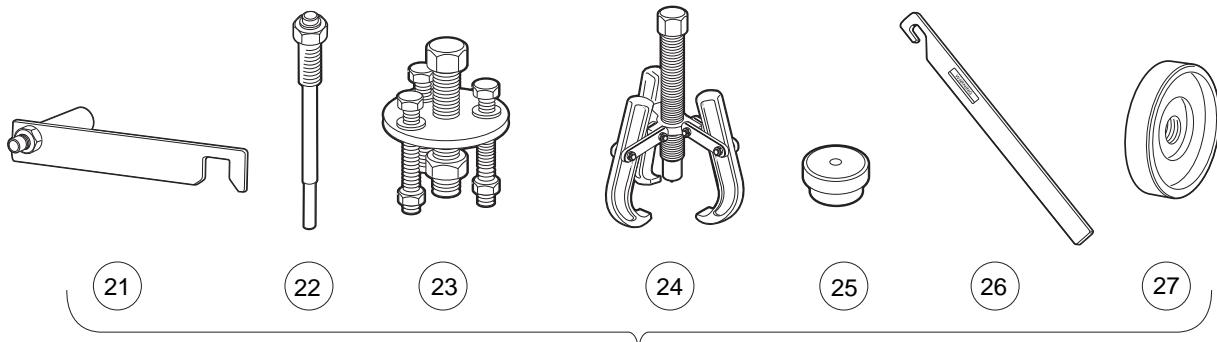
15**G****E****D**

20

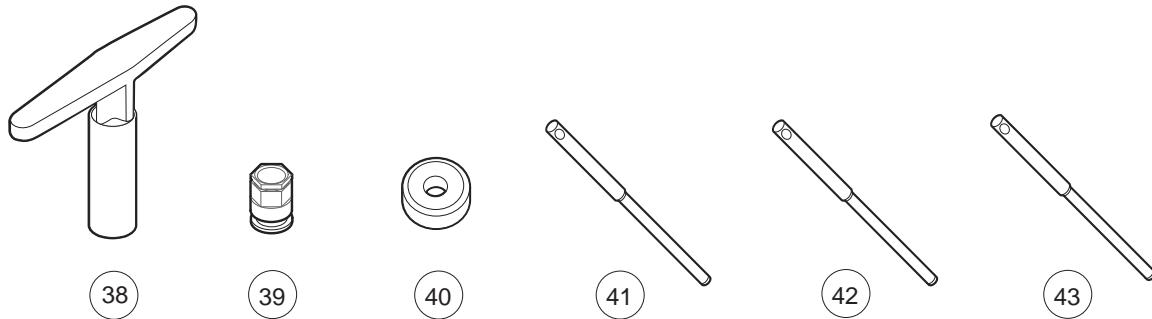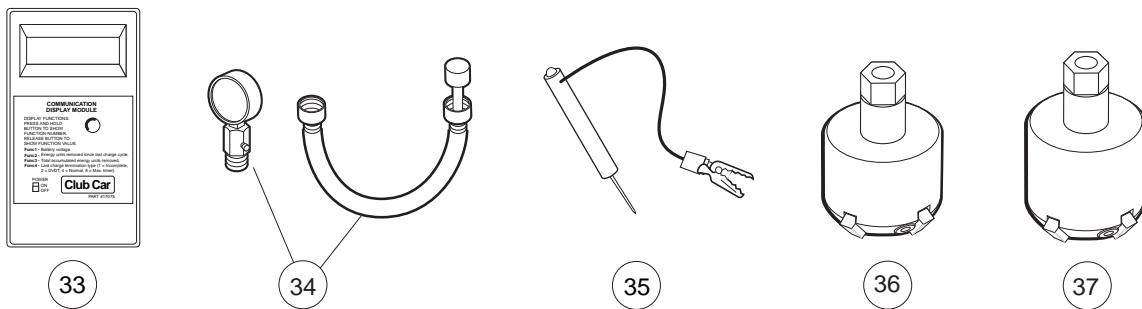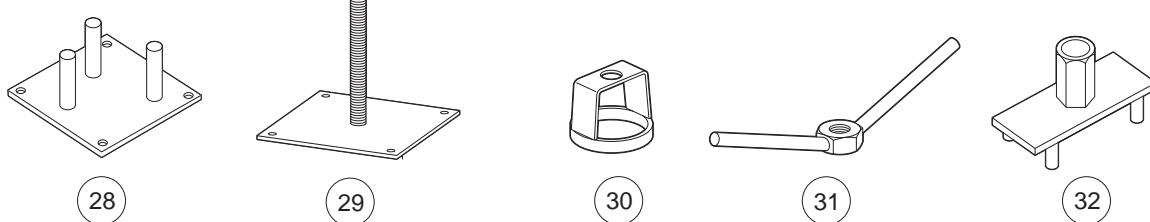


MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	
		1 2 3 4				15
20	<u>1014510</u>	Clutch Tool Kit (includes items 21 - 27)		1		G
21	<u>1014498</u>	Clutch Alignment Tool (for pre-unitized transaxle vehicles built prior to 1997 model year)		1		E
22	<u>1014496</u>	Drive Clutch Puller (for Kawasaki engines only)		1		D
23	<u>1014497</u>	Drive Clutch Hub Puller (for Kawasaki engines only)		1		
24	<u>1014508</u>	Driven Clutch Cam Puller (for Kawasaki engines only)		1		
25	<u>1014507</u>	Driven Clutch Puller Plug (for Kawasaki engines only)		1		
26	<u>1015524</u>	Driven Clutch Holder Tool Assembly (for Kawasaki engines only)		1		
27	<u>101809101</u>	Press Weldment (for Kawasaki engines only)		1		
28	<u>102601501</u>	Drive ClutchFixed Sheave Tool (for 4x4 vehicles)	1	1		
29	<u>102603501</u>	Driven Clutch Spring Compression Base (for use with items 30 and 31) (for 4x4 vehicles)	1	1		
30	<u>102605201</u>	Driven Clutch Spring Compression Collar (for use with items 29 and 31) (for 4x4 vehicles)	1	1		
31	<u>102606101</u>	Driven Clutch Spring Compression Nut (for use with items 29 and 30) (for 4x4 vehicles)	1	1		
32	<u>102607501</u>	Drive Clutch Spider Removal Tool (for 4x4 vehicles)	1	1		
33	101831801	Communication Display Module			1	
34	101641002	Compression Gauge and Adapter		1		
35	1011273	Continuity Tester		1	1	
36	<u>102773801</u>	Cutter, Valve Seat, #122		1		
37	<u>102773901</u>	Cutter, Valve Seat #115		1		
38	<u>102774101</u>	Wrench, T, #505.....		1		
39	<u>102774101</u>	Adapter, T-Wrench		1		
40	102675401	Cutter, Valve Seat, 60 Degree (requires item 51) (for Honda GX620 Gasoline Engines)		1		
41	<u>102774201</u>	Pilot, 6.6 MM		1		
42	<u>102774301</u>	Pilot, 6.62 MM.....		1		
43	<u>102774401</u>	Pilot, 6.65 MM.....		1		
		Please refer to the maintenance and service manual for proper tool application.				

15**G****E****D**


44

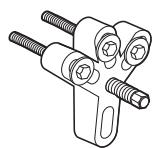

45

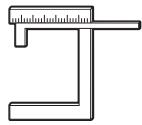


46

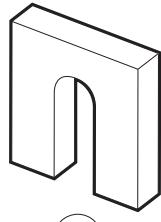


47



48




49




50



51

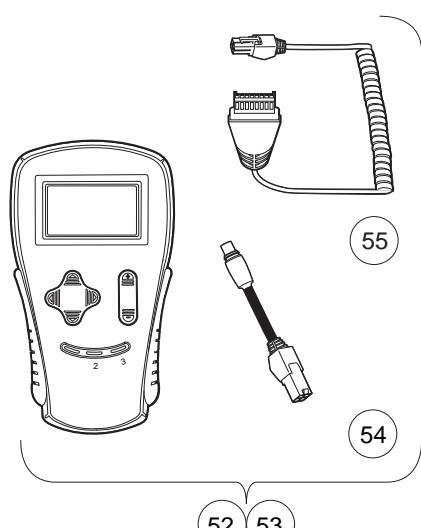


52 53

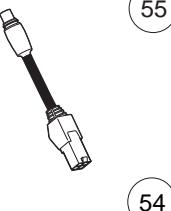


55

54

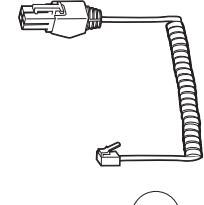


56

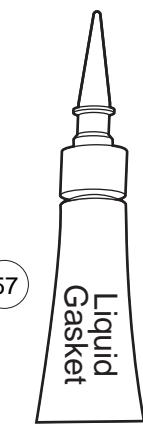


57



58



59 60




61

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	
		1 2 3 4				15
44	<u>1012151</u>	Dry Moly Lubricant	1	1	1	G
45	<u>1016627</u>	Flywheel Puller Kit (for Kawasaki Engines)		1		E
46	<u>102669901</u>	Gauge, Carburetor Float Level (for Honda GX620 Gasoline Engines)		1		D
47	<u>1016418</u>	Gear Yoke	1	1	1	
48	<u>101933101</u>	Governor Shaft Installation Tool (for Kawasaki Engine Vehicles)		1		
49	<u>102169401</u>	Hydraulic Brake Adjuster (for Turf/CA 272/472, Pioneer/XRT 1200, Bobcat 2100, HUV 4213)			1	
50	<u>1011478</u>	Hydrometer	1	1	1	
51	<u>1013593</u>	Internal Retaining Ring Pliers	1	1	1	
52	<u>102248803</u>	IQ Display Module (IQDM) Kit (IQ System and IQ Plus vehicles) .. (includes items 54 and 55)			1	
53	<u>102248804</u>	IQ Display Module (IQDM-P) Kit (IQ System and IQ Plus vehicles) .. (includes items 54 and 55)			1	
54	<u>102251501</u>	Adaptor, Cable			1	
55	<u>102241502</u>	IQDM Series 2 Cable			1	
56	<u>102241501</u>	IQDM Series 1 Cable (replacement)			1	
57	<u>101928701</u>	Liquid Gasket (transaxle case)	1	1	1	
58	<u>102243402</u>	Moly-Teflon Lubricant (4-oz. (113-gram) tube)			1	
59	<u>101997201</u>	Paint, Touch-Up – Beige*		1	1	
59	<u>101997207</u>	Paint, Touch-Up – Black*		1	1	
59	<u>101997212</u>	Paint, Touch-Up – Burgundy*		1	1	
59	<u>101997211</u>	Paint, Touch-Up – Classic Blue (Navy)*		1	1	
59	<u>101997205</u>	Paint, Touch-Up – Dark Gray*	1	1	1	
59	<u>101997209</u>	Paint, Touch-Up – Dark Green*	1	1	1	
59	<u>101997204</u>	Paint, Touch-Up – Gray*	1	1	1	
59	<u>101997203</u>	Paint, Touch-Up – Red*	1	1	1	
59	<u>101997206</u>	Paint, Touch-Up – Royal Blue (Pacific Blue)*		1	1	
59	<u>101997202</u>	Paint, Touch-Up – White*	1	1	1	
60	<u>102562301</u>	Paint, Precedent Underbody – Gray		1	1	
61	<u>102587201</u>	Paint Pen, Touch-Up, Precedent Underbody – Black		1	1	
		Please refer to the maintenance and service manual for proper tool application.				
		* Item 59 is not for use on Surlyn® body material, which is used on Precedent vehicles.				

15**G****E****D**

62

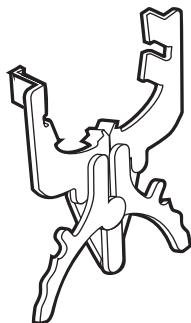

63

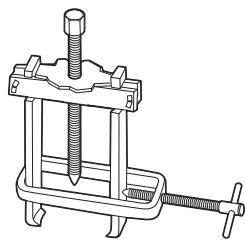

64



65



66



67



68




69



70




71

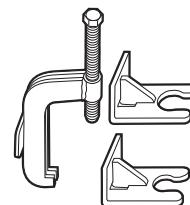


72




73

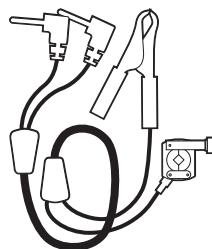


74




75



76

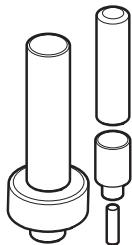

77



83



84



85




86

MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	
		1 2 3 4				15
62	<u>1016414</u>	Piston Ring Compressor Kit (FE290, FE350 and FE400 engines)		1		G
63	<u>1016415</u>	Piston Ring Pliers (for Kawasaki Engines)		1		
64	<u>102668801</u>	Puller, Special Use (for Kubota D722 Diesel Engines)	1			E
65	<u>1012549</u>	Retaining Ring Pliers, 45° External	1	1	1	
66	<u>1012560</u>	Retaining Ring Pliers, 90° Internal	1	1	1	
67	<u>101823101</u>	Safety First Card (50 per pack)	1	1	1	
68	<u>1012809</u>	Seal Puller	1	1	1	
69	<u>102330901</u>	Spanner Wrench (for coil over shock front suspension vehicles only)	1	1		
70	<u>1014264</u>	Steering Column Bearing Press Tool		1	1	
71	<u>1014259</u>	Steering Column Retaining Ring Tool		1	1	
72	<u>102061201</u>	Steering Wheel Puller Tool	1	1	1	
73	<u>AM10753</u>	Tachometer (includes gasoline engine pick up lead only)	1	1		
74	<u>AM10771</u>	Tachometer Diesel Probe (for use with item 73)	1			
75	<u>1014162</u>	Transaxle Axle Seal Tool		1		
76	<u>1014161</u>	Transaxle Pinion Seal Tool		1		
77	<u>1014115</u>	Transmission Tool Kit		1		
78	<u>101611003</u>	Tune-Up Kit, All OHV (for FE290, FE350, FE400 only) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
79	<u>AM11804</u>	Tune-Up Kit, Gx620 (for Honda Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
80	<u>AM11805</u>	Tune-Up Kit, D722 (for Kubota Engines) (includes air filter, oil filter, fuel filters, water separator filter) (not shown)	1			
81	<u>AM1220301</u>	Tune-Up Kit, Precedent (for FE290/350 Engines) (includes air filter, spark plug, oil filter, fuel filters) (not shown)		1		
82	<u>AM1232401</u>	Tune-Up Kit, FH680D (for Kawasaki V-Twin Engines) (includes oil filter, fuel filter, air filter, and spark plugs) (not shown)		1		
83	<u>1016413</u>	Valve Clearance Adjuster Screw Holder (for FE290 engines only)		1		
84	<u>102674601</u>	Valve Guide Driver (for Honda GX620 Gasoline Engines)		1		
85	<u>101641201</u>	Valve Guide Reamer (FE290, FE350, and FE400 only)		1		
86	<u>102674401</u>	Valve Guide Reamer, 6.6 mm (for Honda GX620 Gasoline Engines)		1		

15**G****E****D**


87

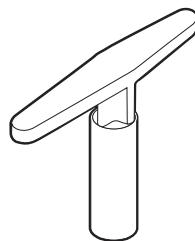


88

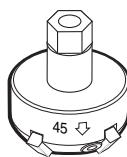


89

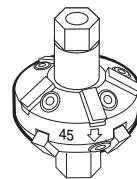


90

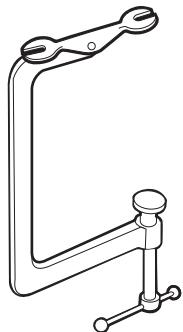


91

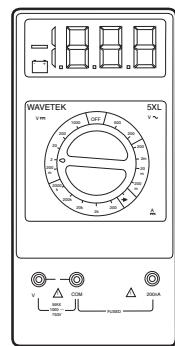


92

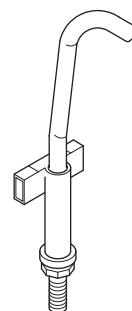

93



94

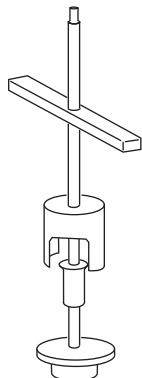

95



96

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	
		1 2 3 4				15
87	<u>1016552</u>	Valve Seat Cutter Guide		1		G
88	<u>1016551</u>	Valve Seat Cutter T-Wrench		1		
89	<u>1016553</u>	Valve Seat Cutter, 45° (32 mm diameter) (for FE290 engines only)		1		E
90	<u>1016554</u>	Valve Seat Cutter, 45°/30° (35 mm diameter)		1		
91	<u>101641101</u>	Valve Spring Compressor		1		D
92	<u>1011480</u>	Volt Ohm Meter	1	1	1	
93	<u>102570401</u>	Tool, Tensioning, Starter Generator (For Precedent vehicles)		1		
94	<u>103601401</u>	Puller, Drive Clutch, XRT 950*		1		
95	<u>103601701</u>	Tool, Disassembly, Driven Clutch, XRT 950.....		1		
96	<u>103600501</u>	Screw, Driven Clutch Disassembly, M6, XRT 950		1		

*Note: The XRT 950 Drive Clutch Puller requires the use of Screw, Driven Clutch Disassembly, CCI Part Number 103600501.

INDEX

Part Number and Page

AM10753	15-9	1013035	6-5	101641101	15-11
AM10771	15-9	1013042	6-5	101641201	15-9
AM1232301	9-7, 9-11	1013044	6-5	101641202	15-3
183	4-11, 10-5, 10-9	1013051	6-5	1016413	15-9
332	1-11, 1-19, 7-17, 7-19	1013052	6-5	1016414	15-9
334	13-17	101313402	10-7	1016415	15-9
357	1-15	1013366	1-19	1016416	15-3
451	1-9	1013461	7-15, 10-5, 10-9	1016417	15-3
1016	10-5, 10-9	1013462	10-5, 10-9	1016418	15-7
1017	7-15	1013531	4-11, 4-13	1016551	15-11
1035	4-13, 5-9	1013582	15-3	1016552	15-11
1108	7-17, 7-19	1013593	15-7	1016553	15-11
1241	4-11, 7-25, 7-27	1013734	1-9	1016554	15-11
7310	2-3	1013746	10-3, 10-7	1016603	1-15
7473	1-13, 1-19, 7-25, 7-27	1013857	7-21, 7-23	1016627	15-7
7561	1-13	1014007	10-23	1016630	7-21, 7-23
8057	13-11	1014115	15-9	1016851	13-11
8058	13-11	1014161	15-9	1016879	7-15
8233	1-19, 10-23	1014162	15-9	1016880	7-15
8248	1-5	1014259	15-9	1016896	13-11
8251	1-17	1014264	15-9	1016967	1-7
8639	4-9, 4-11, 4-13	1014305	15-3	1017062	7-15
8717	13-11	1014306	1-3, 1-5, 1-17, 1-19, 4-7	1017064	7-15
8754	1-13, 1-15, 6-11, 13-17	1014321	1-17	1017065	7-15
8755	1-13, 1-15	1014375	7-25, 7-27	1017162	1-15
8797	10-5, 10-9	101438702	1-17	1017167	1-15
8990	1-15, 6-5	1014415	1-19	1017774	1-15
1010177	13-17	1014471	1-9, 1-13, 14-3	101808401	15-3
1010200	1-15	1014496	15-5	101809101	15-5
1010435	1-13, 1-19	1014497	15-5	101813202	15-3
1010436	1-19	1014498	15-5	101823101	15-9
1010521	4-11, 4-13	1014507	15-5	101824401	10-3, 10-7
101082903	4-7	1014508	15-5	101831801	15-5
1010934	7-25, 7-27	1014510	15-5	101831901	15-3
1011084	13-23	1014537	1-19	101833101	8-3
1011273	15-5	1014557	7-21, 7-23	101833201	8-3
1011478	15-7	1014727	13-11	101856102	12-5
1011480	15-11	1014808	13-11	101871001	15-3
1011553	3-3, 3-7	1015139	10-5, 10-9	101879401	6-5
1011652	1-9	1015143	10-5, 10-9	101879701	6-5
1011767	15-3	1015258	1-13	101879801	6-5
1011779	4-11, 4-13	1015356	1-13	101879901	6-5
1012151	15-7	1015399	1-13, 1-19	101880201	6-5
1012295	7-17, 7-19	101547601	3-5	101886101	10-23
1012303	1-13	1015521	7-17, 7-19	101887101	15-3
1012438	4-11	1015524	15-5	101887601	1-11, 4-7, 4-9
1012549	15-9	101553901	3-3, 3-7	101894304	1-19
1012560	15-9	1015583	1-13	101898001	7-25, 7-27
101260202	4-11	1015597	6-13, 6-15	101928701	15-7
1012769	1-17, 8-3, 9-3, 13-23	1015636	7-21, 7-23	101933101	15-7
1012809	15-9	1015741	7-17, 7-19	101963401	1-19
1012811	15-3	101587703	10-3, 10-7	101972001	15-7
1012812	15-3	101609401	3-3, 3-7	101972002	15-7
1012830	1-9	101611003	15-9	101972003	15-7
		1016183	6-11	101972004	15-7
		101641002	15-5	101972005	15-7

INDEX

101972006	15-7	102231601	3-5, 3-9	102376601	13-3
101972007	15-7	102239901	1-19	102376602	13-25
101972009	15-7	102241501	15-7	102377401	14-7
101972011	15-7	102241502	15-7	102377501	14-7
101972012	15-7	102243402	15-7	102377601	14-7
101987901	7-15	102248803	15-7	102377701	14-7
101988001	7-15	102249901	15-3	102377801	14-3
101988002	7-15	102251501	15-7	102377901	14-3
101988101	7-15	102251601	1-17	102378901	10-25
101988201	7-15	102251701	1-17	102379001	10-27
101990802	4-11, 4-13	102274101	13-3	102380301	14-3
102010102	6-5	102276001	13-25	102380601	5-5
102021302	2-3	102289001	1-7, 9-15, 10-7, 14-3, 14-5	102381701	13-3
102021305	2-3	102289002	1-3, 1-5	102382401	8-3, 9-3, 13-23
102021306	2-3	102290120	6-3	102385601	12-9, 12-11
102021406	2-3	102296140	4-9, 6-7	102385701	12-13
102021407	2-3	102296401	4-9, 5-3, 6-7	102385801	10-13
102021408	2-3	102296716	4-9, 10-7, 10-23, 12-3, 12-5	102393501	6-13, 6-15
102021409	2-3	102298130	1-3, 1-5, 1-9, 6-3, 6-11	102394002	6-9, 6-11
102021502	1-3, 1-5	102298240	6-9, 6-11	102395601	10-25, 10-27
102021602	1-3, 1-5	102298401	1-9, 8-3, 9-3, 10-3, 11-5, 13-11	102398901	6-13, 6-15
102021802	1-3, 1-5	102323501	5-9	102399201	4-5
102022601	6-5	102330901	15-9	102399202	4-5
102022901	6-5, 6-7, 13-3	102331401	9-15	102402801	4-7
102023703	1-9	102355301	7-25, 7-27	102402901	4-7
102028302	4-11	102361901	6-7, 13-3	102406701	10-9
102044702	7-21	102363802	6-3	102406801	10-9
102044801	7-21	102364201	6-3	102407801	4-9
102045001	1-3, 1-5	102365601	6-13	102407901	4-9
102046501	3-11, 3-13	102365602	6-15	102408401	6-7
102047001	1-9	102367101	6-3	102409301	11-5
102048401	1-3, 1-5	102367601	4-3	102409401	11-3, 11-5
102051401	4-7	102368201	13-3	102409501	11-3, 11-5
102051601	7-21	102368301	13-3	102409601	11-3
102051701	7-21	102368302	13-3	102410001	14-9
102051901	7-21, 7-23	102368501	6-7	102410301	14-3
102052801	4-11, 4-13	102368502	6-7	102410603	1-3, 1-5, 4-9, 8-3, 9-3
102059001	1-11	102368801	6-7	102410801	10-7
102059401	1-9	102368802	6-7	102411202	10-3
102061101	1-9	102369401	13-13	102411203	10-7
102061201	15-9	102369901	12-13	102411204	14-5, 14-7
102065901	1-13	102370101	8-3	102411205	14-5, 14-7
102066001	1-13, 1-15	102370501	8-3, 9-3	102411206	14-7
102169401	15-7	102370601	8-3, 9-3	102411207	14-3, 14-7
102171504	1-13	102371401	9-15	102411208	14-3, 14-7
102176901	4-7	102371701	13-9	102411209	10-27
102198001	7-21, 7-23	102371801	13-5	102411210	10-25, 12-3, 12-5
102221301	1-19	102372101	13-9	102411301	14-3
102221401	1-19	102373401	1-7	102411701	14-5
102221501	1-19	102374701	13-3	102414501	12-5
102221701	1-19	102374801	2-3	102414701	8-3
102221801	1-19	102374901	12-7	102414801	8-3
102222001	1-19	102375401	7-23	102414901	9-3
102222101	1-19	102375801	13-11	102418401	1-11
102222201	1-19	102375901	13-11	102418501	1-3, 1-5, 1-11
102224001	3-3, 3-7	102376001	13-11	102419901	1-11

INDEX

102420001	1-11	102440501	13-7	102459715	1-3, 1-5
102420201	7-17, 7-19	102440601	13-7	102459716	1-3, 1-5
102420401	7-17, 7-19	102442001	1-9	102459718	1-3, 1-5
102420501	7-17, 7-19	102442201	7-25, 7-27	102460201	3-9
102422301	8-53, 11-5	102442301	7-25	102460801	14-5
102423701	10-23	102442401	7-25	102462301	8-3, 9-3
102425401	1-9	102442701	4-11	102462401	13-3
102425501	1-9	102442801	4-11	102462501	8-3
102426301	10-3, 10-7	102442901	5-3, 5-5	102462502	9-3
102426601	1-15	102443501	9-15	102462601	10-13
102427501	14-5	102443601	9-15	102463101	13-27
102427601	14-7	102444201	7-13	102463301	13-27
102429301	1-3	102445201	5-3	102463401	13-27
102430001	10-7	102446601	6-11	102463501	13-25
102430201	10-7	102446901	6-7	102463601	13-25
102430301	10-7	102447001	13-3	102463801	13-25, 13-27
102430401	10-7	102447601	1-11	102463901	13-27
102432001	1-3, 1-5	102447602	1-11	102464001	13-27
102433101	10-23	102447901	7-17, 7-19	102464101	13-27
102433501	10-23	102448001	7-17, 7-19	102464201	13-27
102434501	14-5	102448401	7-27	102464301	13-27
102434601	10-7	102448501	7-27	102464401	13-27
102434701	10-7	102449101	13-25	102464501	13-27
102434801	9-15, 10-7	102449201	13-27	102464601	6-11
102435001	14-7	102449901	6-5	102465701	1-15
102435201	14-5	102451001	10-21	102465901	8-3
102435301	7-5, 7-9	102451201	10-23	102466201	1-17
102436001	13-3	102452101	14-3	102468802	6-11
102436101	13-3	102452301	10-23	102469401	5-3
102436701	14-3	102454001	1-17	102469901	6-7
102437001	6-7	102454101	1-17	102470101	6-11
102437101	6-7	102454201	1-17	102470501	6-11
102437201	1-7	102454801	10-23	102470601	6-11
102438101	5-7, 5-9	102454901	10-23	102470801	13-11
102438201	13-5	102455001	3-5	102473501	1-9
102438301	13-5	102455101	3-9	102473601	1-9
102438401	13-5	102455201	3-3	102473701	1-9
102438501	13-5	102455301	3-7	102474101	4-9, 6-7
102438601	13-5	102456001	1-9	102474102	4-9, 6-7
102438701	13-5	102457001	10-23	102474301	4-9
102438801	13-5	102457101	10-23	102475301	9-15
102438901	13-5	102457201	10-23	102475701	4-9, 10-15, 10-17, 10-19, 13-23
102439001	13-5	102457301	7-23	102475801	13-3
102439101	13-5	102457501	9-15	102475901	1-9
102439201	13-5	102457601	9-15	102476301	5-3
102439301	13-5	102458801	3-7	102476401	5-3
102439401	13-5	102458901	1-9, 3-5, 3-9, 14-7	102477001	6-13, 6-15
102439501	13-5	102459001	3-9	102477201	6-11
102439601	13-5	102459101	3-5, 3-9	102477301	1-3, 1-5
102439701	13-5	102459201	3-9	102478501	10-9
102439801	13-5	102459301	3-3, 3-7	102479001	13-3
102439901	13-5	102459401	1-11, 3-3, 3-7	102479301	5-3
102440101	13-5	102459501	3-5, 3-9	102480501	14-7
102440201	13-7	102459601	3-3, 3-7	102481001	12-5
102440301	13-5	102459710	1-3, 1-5	102481201	12-5
102440401	13-7	102459714	1-3, 1-5	102481301	12-5

INDEX

102482201	1-11	102602001	8-11	102608701	8-19, 14-11
102486201	1-9	102602101	8-11	102608801	8-23
102488001	4-3, 4-5	102602301	8-11	102608803	8-23
102489901	5-3	102602401	8-11	102608804	8-23
102490001	12-9	102602601	8-11	102608806	8-23
102490101	8-3, 9-3, 10-23	102602701	8-11	102608901	8-19
102490201	8-3, 9-3	102602801	8-11	102609001	8-23
102490301	7-25, 14-3	102603201	8-21	102609003	8-23
102490401	9-15	102603501	15-5	102609101	8-19
102490501	8-3, 9-3	102603601	8-27	102609301	8-19
102490801	6-7	102603701	8-27	102609401	8-19
102491001	13-3	102603801	8-27	102609601	8-19
102491101	13-3	102603901	8-27	102609801	8-23
102491301	1-7, 1-11	102604001	8-27	102609803	8-23
102491501	1-3, 1-5, 1-7, 1-11	102604101	8-27	102610001	8-23
102491601	4-3, 4-5	102604201	8-21, 8-27	102614101	1-13, 1-15
102491701	1-17	102604301	8-27	102614401	1-19
102492201	7-17, 7-19	102604401	8-23, 8-27	102615701	13-11
102492301	7-19	102604501	8-27	102615801	13-23
102492401	4-11	102604701	8-27	102616003	12-5
102492801	1-3, 1-5	102604901	8-21	102616101	12-5
102493001	10-13	102605001	8-21	102616301	6-7, 6-9, 6-11, 6-13, 6-15
102493301	4-3, 4-5	102605101	8-7, 8-21	102616501	12-11
102493401	14-3	102605201	15-5	102616701	13-11
102494401	8-3, 9-3	102605301	8-21	102616801	10-23
102494701	10-9	102605401	8-21	102616901	10-23
102495001	6-11	102605501	8-21	102617201	1-3, 1-5, 1-7, 1-11
102495801	13-23	102605601	8-21	102617301	10-13
102498101	10-21, 14-3	102605701	8-41	102617501	13-3
102498201	7-27, 8-3	102605801	8-21	102617701	6-7
102498601	10-25, 10-27	102605901	8-21	102617801	13-3
102498701	10-15	102606001	8-21	102618101	5-3, 5-5
102498801	10-19	102606101	15-5	102618301	4-11, 4-13, 5-3, 5-5, 5-7, 5-9, 13-11, 14-7
102499001	13-11	102606201	8-17	102618401	4-7
102499601	10-23	102606301	8-17	102618601	1-3, 1-5, 1-15, 4-7, 4-11, 4-13, 5-3, 5-5, 5-7, 5-9, 6-3, 6-9, 6-11, 8-3, 9-3, 9-15, 10-7, 10-23, 14-3, 14-7
102522001	10-5, 10-9	102606401	8-17	102619801	6-13, 6-15
102541465	4-7, 10-25, 10-27	102606501	8-17	102620401	6-13, 6-15
102555501	15-3	102606601	8-17, 8-53	102620501	6-7, 6-9, 6-11, 6-13, 6-15
102562401	15-3	102606701	8-15	102620801	10-13
102570401	15-11	102606901	8-7	102621101	1-11, 3-3, 3-7
102571301	6-3	102607001	8-7	102621201	10-25, 10-27, 11-3, 11-5
102600001	8-5	102607201	8-7	102621301	8-3, 11-5
102600101	8-5	102607301	8-7	102621501	1-17, 8-3, 9-3, 10-25, 10-27, 13-23
102600201	8-5	102607401	8-7	102622701	3-11
102600301	8-5, 8-9, 8-53	102607501	15-5	102622801	3-11
102600401	8-5	102607601	8-23, 8-55	102622901	3-13
102600601	8-5	102607602	8-23	102623001	3-13
102600701	8-5	102607801	8-23	102623301	3-11, 3-13
102600801	8-5, 8-9	102607901	8-23	102623501	3-11, 3-13
102601001	8-5, 8-11	102608001	8-23	102623802	10-11
102601101	8-33	102608101	8-23	102623805	10-11
102601301	8-5	102608201	8-19, 8-53	102623808	10-11
102601401	8-5	102608301	8-19, 8-53	102626201	5-5
102601501	15-5	102608401	8-19		
102601801	8-11, 8-53	102608501	8-19		
102601901	8-11	102608601	8-19		

INDEX

102628001	12-5	102640601	8-31, 8-37	102653701	8-47
102628101	11-5	102640701	8-37	102653901	8-9
102628601	1-3, 1-5	102640901	8-37	102654101	8-9, 8-53
102628701	14-7	102641001	8-37	102654301	8-11, 8-39, 8-49
102629001	1-15	102641101	8-37	102654401	8-21
102630001	8-23	102641201	8-37	102654601	8-7, 8-53
102630003	8-23	102641501	8-41	102654701	8-53, 14-9
102630101	8-23	102642401	8-41	102655301	9-7
102630201	8-23	102642501	8-41	102655401	10-11
102630301	8-23, 8-53	102642601	8-41	102655501	10-11
102630401	8-23	102642701	8-41	102655601	10-11
102630601	8-33, 8-35	102642801	8-41	102655701	10-11
102630701	8-23	102642901	8-41	102655801	10-11
102630703	8-23	102643001	8-41	102655901	10-11
102630901	8-23, 8-55	102643101	8-41	102656001	10-11
102631001	8-23, 8-55	102643201	8-41	102656101	10-13
102631301	14-9	102643301	8-41	102656201	10-13
102631401	14-9	102643401	8-41	102656301	10-13
102631601	8-5, 8-33, 8-35, 14-9	102643601	8-41	102656402	10-13
102631701	14-13	102643701	8-41	102656501	10-13
102631801	14-13	102644001	8-13, 8-53	102656601	10-13
102632001	14-13	102644101	8-13	102656701	10-13
102632101	14-13	102644501	8-53	102656801	10-13
102632201	14-13	102645501	8-45	102656901	10-13
102632701	8-53, 14-11	102646001	8-49, 8-53	102657001	10-13
102633001	14-9	102646101	8-49	102657101	10-13
102633201	14-9	102646301	8-51	102657201	10-3, 10-13
102633301	8-13, 14-9	102646401	8-47	102657301	10-3, 10-13
102633401	8-53, 14-9	102646501	8-51	102657401	10-13
102633601	8-43	102646601	8-51, 8-53	102657501	9-5, 10-13
102633701	8-39	102647101	8-51	102657601	9-11, 10-13
102633801	8-39	102647201	8-51	102657701	9-11, 10-13
102633901	8-39	102647501	8-25	102657801	9-11, 10-13
102634001	8-39, 8-53	102647701	8-33, 8-35, 8-45	102658001	9-9
102634101	8-39	102647801	8-25	102658101	9-9
102634401	8-39, 8-53	102647901	8-25	102658201	9-9
102634501	8-39, 8-53	102648001	8-25	102658301	9-9
102634601	8-39	102648401	8-45	102658401	9-9
102634701	8-39	102648501	8-45	102658501	9-9
102635101	8-43	102651301	8-47	102658601	9-9
102635201	8-39	102651501	8-47	102658701	9-9
102635301	8-29, 8-39, 8-41, 8-53	102651601	8-47	102658801	9-9
102635501	8-29	102651701	8-47	102658901	9-9
102635701	8-29	102651801	8-47	102659001	9-9
102635801	8-29	102652001	8-47	102659101	9-9
102635901	8-29	102652601	8-47	102659201	9-9
102636201	8-43	102652701	8-47	102659301	9-9
102636301	8-43	102652801	8-9	102659401	9-9
102636401	8-43	102652901	8-47	102659501	9-9
102636501	8-43	102653001	8-47	102659601	9-9
102636601	8-43	102653101	8-47	102659801	9-13
102637001	8-29	102653201	8-47	102659901	9-13
102637101	8-29	102653301	8-47, 8-53	102660001	9-13
102637701	8-37	102653401	8-9	102660101	9-13
102640401	8-37	102653501	8-9	102660201	9-13
102640501	8-37	102653601	8-47	102660301	9-13

INDEX

102660401	9-13	102666001	9-7	102690201	12-9, 12-11
102660402	9-13	102666201	9-5, 9-7	102690301	12-9, 12-11
102660403	9-13	102666801	9-5	102690401	12-11
102660404	9-13	102666901	9-5	102690501	12-9, 12-11
102660501	9-13	102667001	9-5	102690701	12-9, 12-11
102660601	9-13	102667101	9-5	102690801	12-11
102660701	9-13	102667201	9-5	102691001	12-9
102660801	9-13	102667301	9-5	102691401	12-9, 12-11
102660802	9-13	102667401	9-5	102691601	12-9, 12-11
102660803	9-13	102667501	9-5	102691701	12-9, 12-11
102660804	9-13	102667601	9-5	102691801	12-9, 12-11
102660901	9-13	102667701	9-5	102691901	12-9
102661001	9-13	102667901	9-5	102692801	4-11
102661101	9-13	102668001	9-5	102693301	13-13, 13-25
102661201	9-13	102668101	9-5	102693401	13-13, 13-25
102661202	9-13	102668201	9-7, 9-13	102693501	13-13, 13-25
102661301	9-13	102668301	9-5	102693601	13-27
102661401	9-13	102668401	9-5	102694001	13-27
102661501	9-13	102668801	15-9	102694201	13-13, 13-25
102661601	9-13	102669901	15-7	102694301	13-25
102661701	9-13	102670601	1-11	102694401	13-25
102661801	9-13	102670701	8-3, 9-3	102694502	13-27
102661901	9-7, 9-13	102670801	9-15	102694701	13-25
102662101	9-11	102670901	10-5	102694801	13-25
102662201	9-11	102671201	1-11	102695401	12-13
102662301	9-11	102672101	13-25	102695601	12-13
102662401	9-11	102672201	13-25	102695701	12-13
102662601	9-11	102672301	13-25	102695801	12-13
102662701	9-11	102672401	13-25	102695901	12-13
102662801	9-11	102673201	1-19, 3-11, 3-13	102696001	13-17, 13-19
102662802	9-11	102673301	3-11, 3-13	102696101	13-13
102662901	9-11	102673901	1-15	102696201	13-13, 13-15, 13-21
102663001	9-11	102674001	15-5	102696301	13-13
102663101	9-11	102674101	15-5	102696401	13-17, 13-19
102663201	9-11	102674201	15-5	102696501	13-13, 13-15
102663301	9-11	102674401	15-9	102696601	13-17, 13-19
102663401	9-11	102674601	15-9	102696701	13-13
102663501	9-11	102675001	15-5	102696801	13-13, 13-15
102663801	9-11	102675101	15-5	102696901	13-13, 13-15, 13-21
102663901	9-11	102675201	15-5	102697001	13-21
102664001	9-11	102675301	15-5	102697101	13-13, 13-15
102664101	9-11	102675401	15-5	102697201	13-15
102664301	9-11	102676801	6-3	102697301	13-13
102664401	9-11	102682301	3-3, 3-7	102697401	13-13
102664601	9-7	102682701	6-13, 6-15	102697501	13-15
102664701	9-7	102682901	6-13, 6-15	102697601	13-13
102664801	9-7	102684401	14-3	102697701	13-13
102664901	9-7, 9-13	102684501	1-17, 6-13, 6-15, 13-11	102697801	13-21
102665001	9-7	102684601	13-11	102697901	13-15
102665101	9-7	102685001	14-3	102698001	13-15
102665301	9-7	102685601	6-13, 6-15	102698101	13-21
102665401	9-7	102686101	15-3	102698301	13-13
102665501	9-7	102687801	6-5	102698401	13-21
102665601	9-7	102689001	4-9	102698601	13-15
102665701	9-7	102689101	4-9, 6-13, 6-15	102698701	13-15
102665901	9-7	102689102	4-9, 6-13, 6-15	102698801	13-21

INDEX

102698901	13-13	102727001	8-9	102751501	5-9
102699001	13-21	102727101	8-9	102751601	10-5
102699201	13-13	102727401	8-11	102758701	5-7, 5-9
102699301	13-15	102727501	8-11	102759401	9-5
102699401	13-13	102727601	8-11	102760501	1-3, 1-5
102699501	13-21	102727701	8-15	102760701	1-3, 1-5
102699601	13-17, 13-19	102727901	8-17	102760801	1-3, 1-5
102699701	13-13, 13-21	102728001	8-19	102762601	13-27
102700001	13-21	102728101	8-23, 8-55	102763301	4-13
102700101	13-21	102728102	8-23	102763401	4-13
102700201	13-21	102728301	8-25	102764201	13-13
102700301	13-21	102728401	8-27	102764701	13-21
102701001	8-9	102728501	8-27	102764801	13-21
102701201	8-33, 8-35	102728601	8-29	102764901	13-15
102703301	8-11	102728701	8-29	102765001	13-17
102707101	10-21	102728801	8-29, 8-53	102765101	13-15
102710301	9-15, 10-7	102728901	8-29	102765201	13-13
102710501	10-13	102729101	8-31	102765301	13-27
102711601	13-3	102729301	8-11, 8-53	102765401	13-27
102712601	4-13	102729401	8-39	102765501	13-27
102712701	4-13	102729501	8-39	102765701	13-27
102714001	4-3, 4-5	102729601	8-41	102765801	13-27
102715701	4-7	102729701	8-41	102770001	4-11
102716001	5-9	102730001	8-33	102770301	4-13
102718001	1-11	102730101	8-33	102778001	1-3, 1-5
102718101	1-11	102730201	8-33, 8-35	102798001	8-9
102718201	1-11	102730301	8-33	102798201	8-11
102719301	12-13	102730401	8-33, 8-35	102798401	8-13
102721501	13-13, 13-21	102730601	8-33, 8-35	102798501	8-13, 8-53
102721901	9-15	102730801	8-5	102798601	8-13
102722001	9-15	102730901	14-9	102798701	8-13
102722301	6-7, 13-3	102731001	14-9	102798801	8-13
102722701	9-11	102731101	14-9	102798901	8-13
102722801	9-11	102731201	14-11	102799001	8-13
102722901	9-11	102731301	8-33, 8-35	102799101	8-13
102724101	10-11	102731501	8-51	102799201	8-13
102724201	10-11	102731601	8-51, 11-5	102799401	8-21
102724301	9-9	102731701	7-23	102799501	8-29
102724401	9-9	102731801	8-53	102799601	8-31
102724501	9-9	102731901	8-53	102799701	8-31
102724601	9-9	102732001	8-55	102799801	8-31
102724701	9-9	102732201	8-23, 8-55	102800101	8-37
102725101	9-13	102732401	1-11	102800201	8-43
102725201	9-13	102732501	8-33, 8-35, 8-45	102800301	8-43
102725401	10-13	102732601	8-5, 8-53	102800401	8-39
102725501	10-25, 10-27	102736901	2-3	102800501	8-39
102725601	10-25, 10-27	102737101	6-13, 6-15	102800601	8-39
102725801	1-13	102737301	14-3	102800701	8-33, 8-35
102725901	1-13	102737401	14-3	102801001	8-33, 8-35
102726201	8-5	102739201	1-11	102801101	8-47
102726301	8-5	102739901	7-21	102801201	8-47
102726401	8-5	102739902	7-23	102801301	8-49
102726501	8-5	102741501	5-9	102801401	8-49
102726601	8-5	102741601	5-9	102801501	8-49
102726701	8-9	102751301	5-9	102807601	14-5
102726901	8-9	102751401	5-9	102807801	14-5

INDEX

- 102810701 10-25, 10-27
 102812801 11-3, 11-5
 102826101 10-17
 102827901 9-15
 102831201 9-7
 102831501 13-25
 102831601 1-5
 102834901 11-3
 102839401 12-9, 12-11
 102849401 9-15
 102855501 14-3
 102865201 13-3
 102886101 1-11
 102892401 5-7, 5-9
 102896601 5-7, 5-9
 102934601 8-3
 102934701 8-35
 102934801 8-35
 102934901 8-35
 102952101 10-9
 102952102 10-5
 102961301 13-27
 102961401 13-27
 102961501 13-27
 102961601 13-27
 102967901 1-3, 1-5, 1-9, 7-21, 7-23
 103185401 12-9
 103185501 12-11
 103185801 12-9, 12-11
 103185901 12-9, 12-11
 103201601 10-11
 103239501 13-19
 103239801 13-19
 103239901 8-35
 103244701 13-3
 103252201 9-3
 103256701 6-7
 103267001 1-9
 103273101 5-3, 5-5
 103282301 6-13, 6-15
 103294301 13-17
 103305001 5-9
 103305101 5-9
 103307901 10-3
 103320601 12-3, 12-5
 103348101 7-21, 7-23
 103348201 7-21, 7-23
 103418701 4-5
 103418801 4-3, 4-5
 103441401 10-27
 95293643 13-9
 96701412 8-3, 9-3
 96704416 11-3, 14-3
 96704622 8-3, 9-3
 96704721 8-3, 9-3
 96704960 9-3
 96705199 14-3
 96705587 9-15, 10-7
 96705736 10-21
 96706825 5-3
 96714464 10-23
 96715552 1-3, 1-7
 96718978 8-3, 9-3, 10-23
 96741038 8-3, 9-3, 10-23, 14-3
 96741046 8-3, 9-3
 96742515 1-11
 96747126 14-7
- A**
- A-arm 6-7
 - absorber, shock 6-9, 6-11
 - accelerator cable 10-15, 10-19
 - accelerator pedal 5-3
 - accelerator pedal adjustment tool 15-3
 - accessory receptacle 7-21, 7-23
 - actuator 1-15
 - adapter
 - actuator 1-15
 - cable (IQDM) 15-7
 - hose 9-15
 - intake, engine 10-13
 - tube 9-15, 10-7
 - adapter, oil filter 9-15
 - adhesive, guide ring 15-3
 - adjuster
 - hydraulic brake 15-7
 - adjuster, forward/aft 1-9
 - adjuster, slide 13-3
 - adjuster, slider 1-9
 - adjuster, spring 10-23
 - air clean support 10-25, 10-27
 - air filter 10-25, 10-27
 - air filter canister 10-25, 10-27
 - air filter evacuator 10-25, 10-27
 - alternator 8-33, 8-35
 - alternator belt 8-35
 - arbor 15-3
 - arm
 - A- 6-7
 - governor 13-21
 - lower 6-7
 - rocker 8-47
 - valve rocker 9-11
 - arm, swing 6-13, 6-15
 - assembly
 - accelerator pedal 5-3
 - adjusting bolt 8-29
 - alternator 8-33
 - bearing case cover 8-19
 - brake line 4-9
 - brake pedal 5-5, 5-7, 5-9
 - brake rotor 13-3, 13-25
 - bucket seat 1-9
 - camshaft 8-21, 9-13
 - case, main bearing 8-19
 - connecting rod 8-23, 9-13
 - crankcase cover 9-9
 - cylinder head cover 8-13
 - drain cock 8-5
 - filler cap 4-7
 - forward/reverse 13-11
 - fuel camshaft 8-27
 - fuel cap 10-9
 - fuel filter 10-7
 - fuel injection pump 8-37
 - fuel pump 10-7, 10-13
 - fuel tank vent 10-5, 10-9
 - gear case 13-13, 13-27
 - governor 9-9
 - governor arm 13-21
 - governor fork 8-43
 - governor fork lever 8-43
 - headlight 7-15
 - headlight harness 7-15
 - hinge, tilt bed 1-13
 - idle apparatus 8-29
 - inner ball joint 6-5
 - intake manifold 8-49
 - muffler 13-3
 - nozzle holder 8-41
 - oil pump 8-17
 - oil pump cover 9-9
 - overflow pipe 8-41
 - park brake pedal 5-7, 5-9
 - pinion 13-27
 - piston ring 8-23, 8-55
 - reservoir, remote 4-7
 - rocker arm 8-47
 - slide adjuster 13-3
 - speed plate 8-39
 - tailgate 1-19
 - tank, coolant expansion 14-5
 - tether 1-19
 - thermostat 14-9
 - tilt bed 1-13
 - tire 2-3
 - turn signal lens 7-15
 - valve, lifter 9-13
 - valve, solenoid 10-11
 - water pump 14-11
 - wire 7-25, 7-27, 10-5, 10-9
- assembly, sub-
- A-arm, upper 6-7
 - fly weight 13-21
 - front differential upright 13-3
 - gear case 13-13
 - governor spool 13-21
 - moveable drive clutch 12-9, 12-11

INDEX

spider 12-9, 12-11
 stationary 12-9, 12-11
 swingarm 6-13, 6-15
 weight clutch 12-9, 12-11
 axle 13-25
 axle tube 13-27
 axle, rear, guard mounts 13-25

B

ball
 check 8-21
 crankshaft 8-23
 governor 8-27
 injection pump 8-27
 steel 9-9
 valve 8-11
 ball joint 6-7, 13-3, 13-23
 ball stud 13-11
 band, pipe 14-9, 14-13
 banjo bolt 4-3, 4-5
 bar clamp 14-7
 bar, sway 6-11
 barb, vent 10-3, 10-7
 barrier, heat 1-11
 base, seat holder 1-11
 battery 7-25, 7-27
 battery clamp 7-25, 7-27
 battery discharge machine 15-3
 battery terminal protector spray 15-3
 battery thermometer 15-3
 bearing 13-27
 ball (steering pinion) 6-5
 lower pinion 6-5
 needle 9-13, 13-5, 13-13, 13-15, 13-27
 radial ball 9-13
 bearing and oil seal remover 15-3
 bearing case cover 8-19
 bearing case, main 8-19
 bearing driver set 15-3
 bearing puller 15-3
 bearing puller wedge 15-3
 bed floor plate 1-13
 bed, tilt 1-13
 bell crank kit 4-13
 bellcrank 5-9, 13-17, 13-19
 bellows 6-5, 13-25
 belt guard 8-35
 belt, alternator 8-35
 belt, drive 12-7
 belt, V- 8-33
 bezel, fuel fill 1-17
 bezel, headlight 7-15
 block, differential spacer 13-3
 block, engine 8-5
 block, fuse 7-17, 7-19
 bobbin, coil with press fit 13-5

body, front 1-3, 1-5
 bolt
 adjusting 8-29
 banjo 4-3, 4-5
 drain plug 9-9
 box
 cargo 1-19
 bracket
 actuator 1-15
 anti-sway bar 6-11
 brake line 4-9, 6-7
 brake pedal 5-5
 choke cable 10-13
 coolant bottle 14-5
 cover inlet 12-5
 equalizer 4-11, 4-13
 governor arm 10-23
 governor cable 10-23
 headlight mounting 7-15
 hydraulic line 4-9, 6-13, 6-15
 muffler 11-3, 11-5
 oil filter mount 9-15
 park brake 5-9
 radiator mount, upper 14-3
 rocker arm 8-47
 seatbelt 1-11
 steering support 1-7
 transmission cable 8-3, 9-3, 13-23
 transmission mounting 8-3, 9-3
 brake adjustment tool 15-3
 brake cable 4-13
 brake cable release tool 15-3
 brake caliper 4-3, 4-5
 brake caliper return spring 4-5
 brake fluid reservoir 4-7
 brake line 4-9
 brake pad service kit 4-3, 4-5
 brake pedal 5-5, 5-7, 5-9
 brake pedal adjustment tool 15-3
 brake pedal tension tool 15-3
 brake return spring 4-11, 4-13
 brake rotor 13-3, 13-25
 brake, park, cable pulley kit 4-11
 breather cover 8-13
 breather shield 8-13
 breather tube 8-13, 10-13
 breather valve 8-13, 9-13
 brush guard 1-3, 1-5
 bucket seat 1-9
 buckle, seatbelt 1-11
 bulb, headlight 7-15
 bullet, detent 13-15
 bumper
 bed 1-15
 front 1-3, 1-5
 rubber 1-19

stud 14-3
 bushing 1-15
 A-arm 6-7
 anti-sway bar 6-11
 arm, lower 6-7
 flanged bronze 8-21
 forward/reverse 13-11
 greaseless 5-3, 5-5
 link 6-11
 Permaglide 13-5
 piston pin 8-23, 8-55
 pivot, urethane 6-13, 6-15
 plain 13-7
 return line 10-9
 self-lubricating 13-5
 steel 1-13
 teflon 6-13, 6-15
 urethane 1-13
 button, thrust 13-5
 buzzer, reverse 13-11

C

cable
 accelerator 10-15, 10-19
 bell crank 4-13, 5-9
 brake 4-13
 choke 10-17
 governor 10-23
 IQDM 15-7
 park brake 4-11
 transmission 13-23
 cage, roll 13-5
 calibration test module 15-3
 caliper, brake 4-3, 4-5
 cam installation tool 15-3
 camshaft 8-21, 9-13
 camshaft, fuel 8-27
 canister, air filter 10-25, 10-27
 cap
 air filter 10-25, 10-27
 bolt assembly 8-29
 connecting rod 9-13
 filler 4-7
 fuel 10-9
 fuel tank 10-5
 inlet 12-5
 noise suppressor 9-5, 9-7
 oil filler 9-9
 pressure 14-5
 radiator 14-3
 rubber 13-3
 sealing 8-5, 8-9
 spark plug 9-5, 9-7
 speed control plate 8-39
 steering wheel 6-3
 valve 8-47

INDEX

cap, front corner 1-19
carburetor air vent tube 10-3, 10-7
carburetor float level tool 15-7
carburetor, Honda 10-11
card, safety first 15-9
cargo box 1-19
case
 gear 8-11, 13-13, 13-25, 13-27
 governor ball 8-27
 main bearing 8-19
case cover, bearing 8-19
chain, transmission 13-13
charge coil 9-7
charger bezel tool 15-3
choke cable 10-17
clamp
 bar 14-7
 battery 7-25, 7-27
 breather tube 8-13
 hose 10-3, 10-7
 p-(fuel filter) 1-3, 1-5, 4-9, 8-3, 9-3
 pipe 8-41
 wire 9-7, 9-13
clevis pin 4-7
clip
 hair pin 1-19
clip, brake line 4-9, 10-15, 10-17, 10-19, 13-23
clip, breather tube 10-13
clip, governor 9-9
clip, meter 7-21, 7-23
clip, piston pin 9-13
clip, return pipe 8-41
clip, tube 10-3, 10-13
clip, wire harness 10-13
closeout 1-9
clutch 12-13
clutch alignment tool 15-5
clutch cover 12-9, 12-11
clutch housing 13-5
clutch removal tool 15-3
clutch tool kit 15-5
clutch, diesel 12-11
clutch, gas 12-9
coil
 charge 9-7
 ignition 9-7
 pocket insert 13-5
coil with press-fit bobbin 13-5
collar, alternator assembly 8-33, 8-35
collar, crankshaft 8-23
collar, idle gear 8-21
collar, lever 8-39
collet 8-47
column, steering 6-3
communication display module 15-5
compression gauge 15-5

compressor, piston ring 15-9
compressor, valve spring 15-11
connecting rod 8-23, 9-13
connector, relay 7-17, 7-19
console, drink holder 1-9
continuity tester 15-5
coolant exchanger 14-3
coolant expansion tank 14-5
coolant fill tee 14-3
coolant lamp sensor 14-9
coolant pipe 14-7
coolant pipe mounting tab 14-7
coolant temperature indicator light 7-23
cooling fan 9-5, 14-3
cord, glow plug 8-41
corner cap 1-19
cotter, rue ring 6-13, 6-15
cover 9-9
 alternator assembly 8-33
 bearing case 8-19
 breather 8-13, 9-13
 clutch 12-9, 12-11
 crankcase 9-9
 CVT 8-3, 9-3, 12-3, 12-5, 12-9, 12-11
 cylinder head 8-13
 electrical 7-17, 7-19
 engine 10-21
 fan 9-5
 fuel camshaft 8-5
 head 9-11
 head filler 9-11
 heat proof 8-51
 input 13-7
 oil filter 9-9
 oil pump 9-9
 thermostat 14-9
cover plate, output 13-5
cover, steering column 6-3
cowl 1-3, 1-5
cowl support, ROPS 1-3, 1-5, 1-11
crank 8-23
crankcase 9-9
crankcase cover 9-9
crankshaft 8-23, 9-13
C-type stop ring 6-5
cup holder, seat 1-9
cutter, valve seat 15-5, 15-11
CVT 12-13
CVT cover 12-3
CVT cover kit, sealed 12-5
CVT cover kit, unsealed 12-5
cylinder head 8-9, 9-11
cylinder head cover 8-13
cylinder, master 4-7

D
dash, front 1-7
dashboard 1-3, 1-5
decal
 4x4 3-11, 3-13
 bed load warning 3-3, 3-7
 Carryall 294 3-13
 Club Car 3-11, 3-13
 Club Car tailgate 1-19, 3-11, 3-13
 crush area warning 3-3, 3-7
 diesel 3-11, 3-13
 diesel fuel only 3-7
 driver/passenger 3-5, 3-9
 ground warning 3-5, 3-9
 high capacity 3-11, 3-13
 hot manifold warning 3-9
 hot surface warning 1-9, 3-5, 3-9, 14-7
 operating instructions 3-5, 3-9
 ROPS certification 1-11, 3-3, 3-7
 rotating parts 3-3, 3-7
 rotating parts and hot manifold 3-5, 3-9
 rotating parts warning 3-9
 trailer hitch 3-3, 3-7
 under 16 warning 1-11, 3-3, 3-7
 vehicle loading 3-3, 3-7
 warning, diesel 3-7
 warning, gas 3-3
 winch cable warning 3-5, 3-9
 XRT 1500 3-11
deflector oil 13-13
diaphragm tube 10-13
diesel tachometer probe 15-9
differential housing 13-27
differential, front 13-5
diode, engine stop 9-7
dipstick, oil 9-9
disc 4-11
dowel pin 13-5
drag link 6-5
drain cock 8-5
drink holder console 1-9
drive belt 12-7
drive clutch fixed sheave tool 15-5
drive clutch holder tool 15-5
drive clutch hub puller 15-5
drive clutch puller 15-5
drive clutch spider removal tool 15-5
drive clutch, moveable 12-9, 12-11
drive shaft 13-9
driven clutch base sheave 12-13
driven clutch cam puller 15-5
driven clutch puller plug 15-5
driven clutch spring compression base tool 15-5
driven clutch spring compression collar tool 15-5

INDEX

driven clutch spring compression nut tool 15-5
dry moly lubricant 15-7

E

E-clip 4-11, 4-13
elbow 10-9
end, tie rod 6-5
engine block 8-5
engine, diesel, Kubota D722 with closed breather 8-3
engine, Honda 9-3
equalizer 4-11, 4-13
exchanger, engine coolant 14-3
exhaust header 11-3
exhaust valve 8-47, 9-11
expansion tank, coolant 14-5

F

fan shroud 14-3
fan, cooling 9-5, 14-3
fastener, push-in 7-17, 7-19
fender, front 1-3, 1-5
fender, rear 1-17
filler cap 4-7
filter
air 10-25, 10-27
fuel 10-3, 10-7, 10-13
inlet cover 12-5
oil 8-7, 8-11, 9-15
filter, air, canister 10-25, 10-27
fitting, thread-forming grease 6-13, 6-15
flange, water 14-9
float set 10-11
floor mat 1-3, 1-5
floor plate, bed 1-13
fly weight 13-21
flywheel 8-25, 9-7
flywheel puller 15-7
FNR shifter bracket 8-3, 9-3, 13-23
fork, transmission 13-21
forward/reverse assembly 13-11
Forward/Reverse shifter 13-11
frame, tilt bed 1-13
front body 1-3, 1-5
front differential 13-5
fuel camshaft 8-27
fuel cap 10-9
fuel filter 10-3, 10-7, 10-13
fuel gauge sending unit 10-5, 10-9
fuel injection pump 8-37
fuel pickup tube 10-9
fuel pump 10-7, 10-13
fuel tank (diesel) 10-9
fuel tank (gasoline) 10-5
fuel tank cap 10-5

fuel tank strap 10-3, 10-7
fuel tank vent 10-5, 10-9
fuel tank, diesel 10-9
fuel tank, gas 10-5
fuel tube 10-13
fuel-hour gauge 7-21, 7-23
fuse
10-amp 7-17, 7-19
25-amp 7-17, 7-19
30-amp 7-19
fuse block 7-17, 7-19

G

gasket
bearing case 8-19, 8-53
breather cover 9-13
carburetor 10-13
carburetor adapter 10-13
carburetor bowl 10-11
case cover 9-9
clutch cover 12-9, 12-11
control plate 8-39, 8-53
cover 8-19, 8-53, 12-5
cylinder head 8-9, 8-53, 9-11
cylinder head cover 8-13, 8-53, 9-11
drain plug 8-7
exhaust 8-53, 11-3, 11-5
ex-manifold 8-51, 8-53
fuel pump 8-5, 8-53
gearcase 8-11, 8-53
head cover 8-53
head cover nut 8-29, 8-39, 8-41, 8-53
idle apparatus 8-29, 8-53
intake manifold 8-49, 8-53, 9-11, 10-13
liquid 15-7
nozzle 8-41
oil pump 8-17, 8-53
sending unit 10-5, 10-9
thermostat 8-53, 14-9
water flange 8-53, 14-9
water pump 8-53, 14-11
gauge, compression 15-5
gauge, fuel-hour 7-21, 7-23
gauge, oil 8-15
gear
cam 8-21
case 8-11, 13-13, 13-25, 13-27
crank 8-23
helical 13-15, 13-21
idle 8-21
injection pump 8-27
oil pump drive 8-17
ring 8-25, 13-5, 13-27
gear ring engagement 13-15
gear yoke 15-7
glow plug 8-41

glow plug cord 8-41
governor 9-9
governor arm 13-21
governor cable 10-23
governor fork lever 8-43
governor guard 10-23
governor lever 8-39
governor shaft installation tool 15-7
governor spool 13-21
governor wire 10-23
grid, screen 9-5
grill 1-3
grip tape, accelerator pad 5-3
grommet 10-5, 10-9, 10-13, 13-5
grommet tool 9-7
guard
governor 10-23
radiator 14-3
splash 1-7
guard, belt 8-35
guard, brush 1-3, 1-5
guide
accelerator cable 5-3
detent bullet 13-15
exhaust valve 8-9
inlet valve 8-9
oil gauge 8-15
valve seat cutter 15-11
guide ring adhesive 15-3

H

hair pin clip 1-19
half shaft 13-3
handle, park brake 5-7, 5-9
hanger, engine 9-5
harness, wire 7-5, 7-9, 7-13
head, cylinder 8-9, 9-11
header, exhaust 11-3
headlight assembly 7-15
headlight bulb 7-15
headlight harness 7-15
headlight retainer 7-15
heat barrier 1-11
heat seal 8-41
helical gear 13-15, 13-21
hinge plate 1-9
hinge, tilt bed 1-13
holder
drink 1-9
fork lever 8-43
screen grid 9-5
Honda engine 9-3
hook, engine 8-9
hose 14-5
coolant 14-3, 14-7
fuel filter 10-7

INDEX

- fuel pump 10-7
fuel return 10-7
inlet cover 12-5
intake 10-25, 10-27
oil, remote 9-15
overflow 8-41
vent 8-3, 9-3, 13-3, 14-5, 14-7
hose, outlet 12-3, 12-5
housing
 clutch 13-5
 differential 13-27
 Mate-N-Lock 13-5
 steering gear 6-5
hub 4-11
hub, race/output 13-5
hydraulic brake adjuster 15-7
hydrometer 15-7
- I**
idle apparatus 8-29
idle gear 8-21
ignition coil 9-7
injection pump gear 8-27
inlet valve 8-47, 9-11
insert, carburetor adapter 10-13
insulator, carburetor 10-13
intake adapter, engine 10-13
intake manifold 8-49
internal retaining ring pliers 15-7
IQ display module (IQDM) 15-7
isolator ring and bushing 8-3, 9-3
isolator, twin stud 14-3
- J**
jet, main 10-11
joint
 ball 6-7, 13-3, 13-23
 eye 8-37
 pipe 8-11
- K**
key
 feather 8-17, 8-21, 8-23, 8-27
 pair 7-23
 woodruff 9-7, 9-13
key (pair) 7-21
key switch 7-21, 7-23
key switch spacer 7-21
keyswitch nut 7-21
kit
 anti-sway 6-11
 bolt 13-5
 brake pad service 4-3, 4-5
 brake pedal adjustment tool 15-3
 clutch 13-5
- cover plate, input 13-7
cover plate, output 13-5
drain plug 13-5
forward gear repair 13-15
gasket 8-53
governor shaft repair 13-21
H-clip spring 13-5
input shaft repair 13-21
IQ display module (IQDM) 15-7
neutral switch repair 13-15
nozzle holder 8-41
park brake handle 5-7, 5-9
piston rebuild 8-55
race output hub 13-5
rear axle gear repair 13-27
repair, minor 13-5
reverse gear repair 13-13
roll cage 13-5
roller 13-5
ROPS 1-11
transmission shift shaft repair 13-17
tune-up 15-9
knob, forward/reverse 13-11
knob, light switch 7-21, 7-23
knuckle, slider steering 6-3
- L**
latch, access panel 1-3, 1-5
latch, slam 1-19
latch, spring 1-19
lens, headlight 7-15
lever
 engine stop 8-39
 fork 8-43
 governor 8-39
 lost motion 5-3
 speed control 8-39
light
 oil 7-21, 7-23
light switch 7-21, 7-23
light switch knob 7-21, 7-23
light, coolant temperature indicator 7-23
limit switch 13-11
line, brake reservoir 4-7
link, drag 6-5
liquid gasket 15-7
low oil warning light 7-21, 7-23
lubricant, dry moly 15-7
lubricant, moly-teflon 15-7
- M**
main jet 10-11
manifold
 exhaust 8-51
 inlet 9-11, 10-13
- intake 8-49
mat, floor 1-3, 1-5
Mate-N-Lock housing 13-5
Mate-N-Lock pin 13-5
meter clip 7-21, 7-23
meter, volt ohm 15-11
module
 calibration test 15-3
 communication display 15-5
moly-teflon lubricant 15-7
motor
 starter 8-45, 9-7
mount, link 6-11
moveable drive clutch 12-9, 12-11
muffler 11-3, 11-5, 13-3
- N**
nipple, remote oil 9-15
noise suppressor cap 9-5, 9-7
nongrease/spacers locker 13-27
nozzle holder 8-41
nozzle, main 10-11
nut, keyswitch 7-21
nut, toggle switch 7-21, 7-23
- O**
oil deflector 13-13
oil dipstick 9-9
oil filter 8-7, 8-11, 9-15
oil filter screen 9-9
oil pan 8-7
oil pressure switch 8-5, 9-7
oil pump 8-17
oil pump drive gear 8-17
oil seal 8-11, 8-19, 9-9, 9-13, 13-5, 13-7
oil slinger 8-23
oil warning light, low 7-21, 7-23
O-ring 8-5, 8-7, 8-9, 8-11, 8-13, 8-23, 8-31, 8-39, 8-53, 9-15, 13-5, 13-7
overflow pipe 8-41
- P**
paint, touch-up 15-7
pan
 center 1-9
 oil 8-7
 seat 1-9
panel
 access 1-3, 1-5
 left 1-19
 right 1-19
 side 1-17
panel, front 1-17, 1-19
park brake cable 4-11
park brake pedal 5-7, 5-9

INDEX

p-clamp (fuel filter) 1-3, 1-5, 4-9, 8-3, 9-3

pedal, accelerator 5-3

pedal, brake 5-5, 5-7, 5-9

pin, clevis 4-7

pin, dowel 13-5

pin, Mate-N-Lock 13-5

pin, piston 8-23, 8-55, 9-13

pin, slide, caliper slide pin 4-3, 4-5

pinion 13-27

pinion, steering 6-5

pipe

- breather 8-49

- coolant 14-7

- exhaust 11-3, 11-5

- injection 8-41

- overflow 8-41

- water 14-13

- water return 8-13, 14-9

pipe band 14-9, 14-13

pipe clamp 8-41

pipe, coolant 14-7

piston 8-23, 8-55, 9-13

piston pin 8-23, 8-55, 9-13

piston ring 8-23, 8-55

piston ring compressor 15-9

piston ring pliers 15-9

piston ring set 9-13

pivot, rocker arm 9-11

plate

- armature 13-5

- back 1-13, 1-15

- brush mount 1-3, 1-5

- cover, output 13-5

- electrical 7-17, 7-19

- engine block 8-5

- engine mounting 8-3, 9-3

- engine, left side 9-5

- fuel/oil 9-15, 10-7

- hinge 1-9

- push rod guide 9-11

- shroud 8-25, 9-5

- speed 8-39

- speed control 8-39

- thrust 13-5

pliers

- internal retaining ring 15-7

- piston ring 15-9

- retaining ring 15-9

plug

- drain 8-7

- driven clutch puller 15-5

- engine block 8-5, 8-9, 8-11, 13-13, 13-25

- expansion 8-5

- gearcase 13-13, 13-25

- glow 8-41

- oil drain 13-5

oil fill 13-5

oil filler 8-13

plug, spark 9-7, 9-11

press weldment 15-5

prop shaft 13-9

protector spray, battery terminal 15-3

puller

- bearing 15-3

- clutch 15-3

- drive clutch 15-5

- drive clutch hub 15-5

- driven clutch cam 15-5

- flywheel 15-7

- seal 15-9

- special use tool 15-9

pulley

- fan drive 8-33, 8-35

- mount 4-11

- water pump 8-33, 8-35

pulley, brake, park, cable, kit 4-11

pullrod, compression spring 5-3

pump

- fuel 10-7, 10-13

- fuel injection 8-37

- oil 8-17

- water 14-11

push rod 8-21, 9-11

R

rack guide pressure spring 6-5

rack, steering 6-5

radiator cap 14-3

radiator guard 1-5, 14-3

radiator pipe 14-7

reamer, valve guide 15-9

receiver, rear 6-13, 6-15

receptacle, accessory 7-21, 7-23

regulator, voltage 9-15

relay 7-17, 7-19

relay connector 7-17, 7-19

remover, bearing and oil seal 15-3

reservoir, brake fluid 4-7

reservoir, remote 4-7

retainer

- headlight 7-15

- spring (driven clutch) 12-13

- valve spring 8-47, 9-11

retaining ring 13-3

retaining ring pliers 15-9

retractor, seat belt 1-11

reverse buzzer 13-11

ring

- piston 8-23, 8-55

- snap 6-5

ring gear 8-25, 13-5, 13-27

ring set, piston 9-13

ring, C-type stop 6-5

ring, retaining 13-3

ring, retaining, ext 6-7, 13-3

rivet, blind push 1-7

rocker arm 8-47

rocker arm pivot 9-11

rod

- connecting 8-23, 9-13

- crank crank rod 8-23

- push 8-21, 9-11

roll cage 13-5

roller weight 12-9, 12-11

roller, torque 12-9, 12-11

ROPS certification decal 1-11, 3-3, 3-7

ROPS cowl support 1-3, 1-5, 1-11

ROPS kit 1-11

ROPS support tube 1-11

ROPS top 1-11

ROPS weldment 1-11

rotator, valve 9-11

rotor, brake 13-3, 13-25

rotor, oil pump 9-9

rubber bumper 1-19

S

safety first card 15-9

screen grid 9-5

screen, oil filter 9-9

screw, valve clearance adjuster 15-9

seal

- dual lip 13-13, 13-17, 13-19, 13-21, 13-27

- heat 8-41

- oil 8-11, 8-19, 9-9, 9-13, 13-5, 13-7

- steering pinion dust 6-5

- triple lip 13-13

- valve stem 8-47, 8-53, 9-11

seal puller 15-9

seat

- bucket 1-9

- valve 8-11

- valve spring 9-11

seat belt retractor 1-11

seat holder base 1-11

seat, bucket 1-9

seatbelt buckle 1-11

sending unit, fuel gauge 10-5, 10-9

sensor, coolant lamp 14-9

service kit, brake pad 4-3, 4-5

shaft

- CVT adapter 8-3

- drive 13-9

- fork lever 8-43

- governor arm 9-13

- governor lever 8-39

- idle gear 8-21

- input 13-21

INDEX

- intermediate 13-15
output 13-21
pinion 13-7
prop 13-9
rock arm 8-47
shift 13-19
shaft shift 13-17
shaft, half 13-3
sheave, drive clutch base 12-13
sheave, driven clutch 12-13
shield, breather 8-13
shield, exhaust 11-5
shift, shaft 13-17
shim 12-9, 12-11, 13-27
shim, armature plate 13-5
shim, injection pump 8-37
shock absorber 6-9, 6-11, 6-13, 6-15
shroud 9-5
head 9-5
shroud, fan 14-3
slam latch 1-19
sleeve
crankshaft 8-23
governor 8-27
link 6-11
lower suspension 6-7
upper suspension 6-7
slide pin 4-3, 4-5
slide, adjuster 13-3
slider, governor 9-9
slinger, oil 8-23
snap ring 6-5
solenoid, stop 8-31
spacer
engine 8-3
key switch 7-21
spacer block, differential 13-3
spanner wrench 15-9
spark plug 9-7, 9-11
spark plug cap 9-5, 9-7
speed plate 8-39
spider 12-9, 12-11
splash guard 1-7
spray, battery terminal protector 15-3
spring
access panel 1-3, 1-5
brake caliper return 4-5
brake return 4-11, 4-13
carburetor 10-23
choke spring 10-23
compression 10-23, 12-9, 12-11, 12-13
continuity 10-13
detent bullet 13-15
exhaust 11-3, 11-5
governor 8-43
governor idle 10-23
idle apparatus 8-29
pedal 5-3
pedal stop 5-3
rack guide pressure 6-5
relief valve 9-9
return 8-39
rocker arm 8-47
start 8-9, 8-43
torsion 5-3
valve 8-11, 8-47, 9-11
spring latch 1-19
sprocket 13-13
start spring 8-43
starter motor 8-45, 9-7
stay
alternator assembly 8-33
cylinder head 8-9
fuel pump 10-13
spring 8-11
stop solenoid 8-31
steel bushing 1-13
steering column 6-3
steering column bearing press tool 15-9
steering column cover 6-3
steering column retaining ring tool 15-9
steering gear housing 6-5
steering pinion dust seal 6-5
steering rack 6-5
steering wheel 6-3
steering wheel puller tool 15-9
stem, valve 2-3
stop solenoid stay 8-31
stopper, camshaft 8-21
stopper, fuel camshaft 8-27
strap, fuel tank 10-3, 10-7
stud 8-3, 8-37, 8-51, 14-13
engine 9-7
idle adjustment 8-29
self-clinching 1-19
stud, ball 13-11
support yoke (steering) 6-5
support, access panel 1-3, 1-5
sway bar 6-11
swingarm 6-13, 6-15
switch
indicator (transmission) 13-15
key 7-21, 7-23
light 7-21, 7-23
limit 13-11
oil pressure 8-5, 9-7
toggle 7-21, 7-23
- T**
tab, coolant pipe mounting 14-7
tachometer 15-9
tachometer probe, diesel 15-9
tailgate 1-19
tailgate angle 1-19
tank
coolant expansion 14-5
tank, fuel 10-5, 10-9
tank, fuel (diesel) 10-9
tank, fuel (gasoline) 10-5
tape, grip, accelerator pad 5-3
tape, vinyl foam 1-9, 1-13, 14-3
tappet 8-21
tee, coolant fill 14-3
temperature indicator light, coolant 7-23
tester, continuity 15-5
tether 1-19
thermometer, battery 15-3
thermostat 14-9
thread-forming grease fitting 6-13, 6-15
thrust button 13-5
thrust plate 13-5
tie rod end 6-5
tie wrap 1-15, 4-9, 4-11, 4-13, 6-5
tilt bed 1-13
tilt bed frame 1-13
tire 2-3
toggle switch 7-21, 7-23
tool
accelerator pedal adjustment 15-3
belt tensioning, starter/generator 15-11
brake adjustment 15-3
brake cable release 15-3
brake pedal adjustment 15-3
brake pedal tension 15-3
cam installation 15-3
carburetor float level 15-7
charger bezel 15-3
clutch alignment 15-5
cT-wrench 15-5
drive clutch fixed sheave 15-5
drive clutch holder 15-5
drive clutch spider removal 15-5
driven clutch spring compression base 15-5
driven clutch spring compression collar 15-5
driven clutch spring compression nut 15-5
governor shaft installation 15-7
grommet 9-7
puller, special use 15-9
steering column bearing press 15-9
steering column retaining ring 15-9
steering wheel puller 15-9
transaxle axle seal 15-9
transaxle pinion seal 15-9
transmission 15-9
valve guide driver 15-9
valve seat cutter 15-5

INDEX

tool kit, clutch 15-5
top, ROPS 1-11
torque converter 12-13
torque roller 12-9, 12-11
touch-up paint 15-7
transaxle axle seal tool 15-9
transaxle housing 13-27
transaxle pinion seal tool 15-9
transmission cable 13-23
transmission cable bracket 8-3, 9-3, 13-23
transmission chain 13-13
transmission fork 13-21
transmission tool 15-9
transmission, parallel shaft 13-13
tube
 axle 13-27
 breather 8-13, 10-13
 carburetor air vent 10-3, 10-7
 diaphragm 10-13
 fuel 10-13
 fuel pickup 10-9
 ROPS support 1-11
tune-up kit 15-9
turn signal lens 7-15
T-wrench tool 15-5

U

upright, front differential 13-3
urethane bushing 1-13

V

valve 10-25, 10-27
 breather 8-13, 9-13
 exhaust 8-47, 9-11
 fuel pickup tube 10-5
 inlet 8-47, 9-11
 lifter 9-13
 rocker arm 9-11
 rotator 9-11
 seat 8-11
 solenoid 10-11
 spring seat 9-11
valve clearance adjuster screw 15-9
valve guide driver tool 15-9
valve guide reamer 15-9
valve seat cutter 15-5, 15-11
valve seat cutter guide 15-11
valve seat cutter tool 15-5
valve seat t-wrench 15-11
valve spring compressor 15-11
valve stem 2-3
V-belt 8-33
vent barb 10-3, 10-7
vent, housing, upper 13-27
vent, transmission 13-13

volt ohm meter 15-11
voltage regulator 9-15

W

warning light, low oil 7-21, 7-23
water flange 14-9
water pump 14-11
wedge, bearing puller 15-3
weight clutch 12-9, 12-11
weldment
 press 15-5
weldment, accelerator pedal 5-3
weldment, accelerator pedal bracket 5-3
weldment, actuator bracket 1-15
weldment, air cleaner support 10-25, 10-27
weldment, brake pedal 5-5
weldment, coolant pipe 14-7
weldment, cowl support, ROPS 1-3, 1-5, 1-11
weldment, dash, front 1-7
weldment, Forward/Reverse shifter 13-11
weldment, Forward/Reverse shifter bracket 13-11
weldment, lever, lost motion 5-3
weldment, receiver 6-13, 6-15
weldment, shaft shift 13-17
weldment, tilt bed frame 1-13
weldment, top, ROPS 1-11
wheel 2-3
wheel, steering 6-3
wire assembly 7-25, 7-27, 10-5, 10-9
wire harness 7-5, 7-9, 7-13
wire harness, electric lift 1-15
wire, governor 10-23
wrap, tie 1-15, 4-9, 4-11, 4-13, 6-5
wrench, spanner 15-9

Y

yoke, gear 15-7
yoke, support (steering) 6-5



Club Car, Inc.
P.O. Box 204658
Augusta, GA 30917-4658
USA

Web www.clubcar.com
Phone 1.706.863.3000
1.800.ClubCar
Int'l +1 706.863.3000
Fax 1.706.863.5808