



2022 Carryall 100 Illustrated Parts List



Gasoline (SZ) and Electric (FC) Vehicle

Manual Number 86753090151
Edition Code _A

USING THE ILLUSTRATED PARTS LIST

WARNING

- **This manual is to be used only for identification and ordering of service parts. Be sure to read and use the maintenance and service manual before attempting any vehicle repairs.**

This manual is divided into several sections. Note that there are flags on the outside edge of each page. The first flag contains the section number of which that page is a part. The other flags contain the letters G or E, signifying that the page pertains to either the gasoline vehicle, the electric vehicle, or both.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section numbers, and under them, the individual page titles and numbers to be found in that section. The index can be used to find specific parts and assemblies. The index is divided into numerical and alphabetical listings with the page numbers in italic text.

There is a two-page spread for each individual page title in the Table of Contents. On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used.

Note that a part description may be indented. This indentation corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to *level 2* is a component of the *level 1* part (assembly) that it is listed under. A *level 3* part is a component of the *level 2* part that it is listed under, and a *level 4* part is a component of the *level 3* part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part is *the quantity used per next higher level assembly of which it is a component*. A part that is not indented is a *level 1* part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.

HOW TO ORDER PARTS

Replacement parts and accessories can be obtained from our network of authorized dealers and distributors. You can obtain the name and phone number of your closest authorized Club Car dealer or distributor by visiting our web site at www.clubcar.com and clicking on the "Distributor Search" link or by calling our toll-free Service Parts and Technical Assistance hotline at (800) 872-2246 or (706) 863-3000, extension 3887.



P. O. Box 204658
Augusta, Georgia 30917-4658 USA
Telephone 706-863-3000
Service Parts Fax 706-855-7413
www.clubcar.com

NOTE: *This illustrated parts list represents the most current information at the time of publication. Club Car, Inc. is continually working to further improve its vehicles and other products. These improvements may affect the parts used to service the vehicle. Any modification and/or significant change in specifications will be forwarded to all Club Car and Carryall distributors/dealers and will, when applicable, appear in future editions of this illustrated parts list.*

Club Car, Inc. reserves the right to change specifications and designs at any time without notice and without the obligation of making changes to units previously sold.

CONTENTS

SECTION 1 – BODY AND TRIM

Front Body	1-3
Front Body and Dash Closeout	1-5
Canopy and Rear Strut	1-7
Windshield Canopy Frame	1-9
Hinged Windshield	1-11
Bumper – Gasoline Vehicles	1-13
Bumper – Electric Vehicles	1-15
Brush Guard	1-17
Dash Boxes – Gasoline and Electric Vehicles	1-19
Glove Box	1-21
Floormat and Side Trim	1-23
Nerf Bar	1-25
Rear Body with Rear Facing Seat – Gasoline Vehicle	1-27
Rear Body with Fenders – Bed Box – Gasoline Vehicle	1-29
Rear Body with Rear Facing Seat – Electric Vehicle	1-31
Rear Body with Fenders – Bed Box – Electric Vehicle	1-33
Fwd Seat Back and Structure	1-35
Front Seat Bottom and Armrests	1-37
Rear Seat Back and Structure	1-39
Cargo Bed	1-41
Bed Hinge	1-43
Fold Down Seat Hinge	1-45
Rear-Facing Seat Frame and Foot Deck	1-47

SECTION 2 – WHEELS AND TIRES

Wheels and Tires	2-3
Hubcap	2-5

SECTION 3 – LOGO AND DECALS

Logo Decals	3-3
Safety Decals – Gasoline Vehicles	3-5
Safety Decals – Electric Vehicles	3-7

SECTION 4 – LIGHTS, CONTROLS, AND INDICATORS

Headlights	4-3
Lighting System Components – Gasoline Vehicles	4-5
Lighting System Components – Electric Vehicles	4-7

CONTENTS

Turn Signal Kit – Gasoline and Electric Vehicles	4-9
Reverse Buzzer	4-11
Instrument Panel – Gasoline Vehicle	4-13
Instrument Panel – Electric Vehicle	4-15
Battery Condition Indicator – Electric Vehicles	4-17
DC Converter – Electric Vehicle	4-19
Voltage Limiter – Gasoline Vehicle	4-21
Strobe Light, Post-Mounted – Gasoline Vehicles	4-23
Strobe Light, Post-Mounted – Electric Vehicles	4-25
Strobe Light, Canopy-Mounted	4-27
Horn	4-29
Taillights – LED	4-31
Taillights – Standard Version	4-33

SECTION 5 – BRAKE SYSTEM

Brake Pedal Assembly	5-3
Accelerator Pedal Assembly – Electric Vehicles with MCOR	5-5
Accelerator Pedal Assembly – Gasoline Vehicles	5-7
Accelerator Rod – Gasoline Vehicles	5-9
Rear Brakes, Self-Adjusting – Electric Vehicle	5-11
Rear Brakes, Self-Adjusting – Gasoline Vehicle	5-13
Brake Cables and Equalizer	5-15

SECTION 6 – STEERING AND SUSPENSIONS

Steering Gear Assembly	6-3
Steering Column	6-5
Steering Wheel	6-7
Front Suspension, Lower – Vehicles with Two-Wheel Brakes	6-9
Front Suspension, Upper	6-11
Front Spindles and Hubs	6-13
Rear Suspension Components	6-15

SECTION 7 – ELECTRICAL SYSTEM – GASOLINE VEHICLES

Wiring, Fuses, and Diodes, Pedal-Start – EFI	7-3
Starter/Generator (Model 114-05-4001) – EFI	7-5
Starter/Generator Mounting – ECH440	7-7
Electrical Component Box, Pedal-Start	7-9
Forward/Reverse Shifter Switches, Pedal-Start – EFI, CA100	7-11
Top-Post Battery – Gasoline Utility Vehicles	7-13

CONTENTS

SECTION 8 – ENGINE (KOHLER ECH440)

Tune-Up Parts	8-3
Engine and Engine Mounting	8-5
Engine Pan and Snubber Mounting	8-7
Blower Housing and Heat Shield – ECH440	8-9
Ignition Components and Flywheel – ECH440	8-11
Cylinder Head and Valve – ECH440	8-13
Crankcase and Piston – ECH440	8-15
Oil Sensor and Lubrication – ECH440	8-17
Crankshaft – ECH440	8-19

SECTION 9 – FUEL SYSTEM – EFI

Fuel Tank with Pump, Top Fill – EFI	9-3
Carbon Canister – EFI	9-5
Throttle Body and Mounting	9-7
Governor Bracket and Cover – EFI	9-9
Governor and Accelerator Cables – EFI	9-11
Air Intake Elbow – EFI	9-13
Air Filter System and Intake Hose – EFI	9-15

SECTION 10 – EXHAUST SYSTEMS – ECH440

Exhaust Systems	10-3
-----------------------	------

SECTION 11 – DRIVE BELT AND CLUTCHES – EFI GASOLINE VEHICLES

Drive Belt – EFI	11-3
Drive Clutch – Pedal-Start Vehicles	11-5
Driven Clutch – Pedal Start	11-7

SECTION 12 – TRANSAXLE (FUJI ED65)

Forward/Reverse Shifter – EFI	12-3
Shifter Cable	12-5
Shift Lever and Bracket – Pedal-Start Engines	12-7
Governor Arm and Brackets – Utility Vehicles	12-9
Transaxle (ED65), Limited Slip – Page 1 of 3	12-11
Transaxle (ED65), Open – Page 1 of 3	12-13
Transaxle (ED65), Limited Slip and Open – Page 2 of 3	12-15
Transaxle (ED65), Limited Slip – Page 3 of 3	12-17
Transaxle (ED65), Open – Page 3 of 3	12-19

CONTENTS

Hub, Rear	12-21
Differential Guard, ED65 – Gasoline Vehicle	12-23

SECTION 13 – ELECTRICAL SYSTEM – ELECTRIC VEHICLES

Forward/Reverse Switch, Tow/Run Switch	13-3
Motor Controller Output Regulator (MCOR)	13-5
Wiring – Electric Vehicle	13-7
Battery Charger Receptacle	13-9
Computer, Controller, and Solenoid	13-11
Batteries 8-Volt, Heavy Duty	13-13
Single Point Watering System (SPWS)	13-15
Hand Pump and Deionizer (Battery-Powered Quality Light)	13-17

SECTION 14 – ELECTRIC MOTOR

Motor (Model EJ8-4001A) – Electric Vehicle	14-3
--	------

SECTION 15 – TRANSAXLE – ELECTRIC VEHICLES

Transaxle – Electric Vehicles	15-3
Differential Guard – Electric Vehicles	15-5

SECTION 16 – BATTERY CHARGERS

Battery Charger, High-Frequency – U.S./Canada	16-3
Battery Charger, High-Freq., 2.74 m DC Cord – Global	16-5
Battery Charger, High-Freq., 3.66 m DC Cord – Global	16-7
Battery Charger, High-Freq., 6.1 m DC Cord – Global	16-9
Cords – Battery Charger, High-Frequency	16-11

SECTION 17 – MAINTENANCE AND SERVICE TOOLS

Maintenance and Service Tools	17-3
Maintenance and Service Tools, Continued	17-5
Maintenance and Service Tools, Continued	17-7

SECTION i – INDEX

BODY AND TRIM

1


G

E

1

G


E

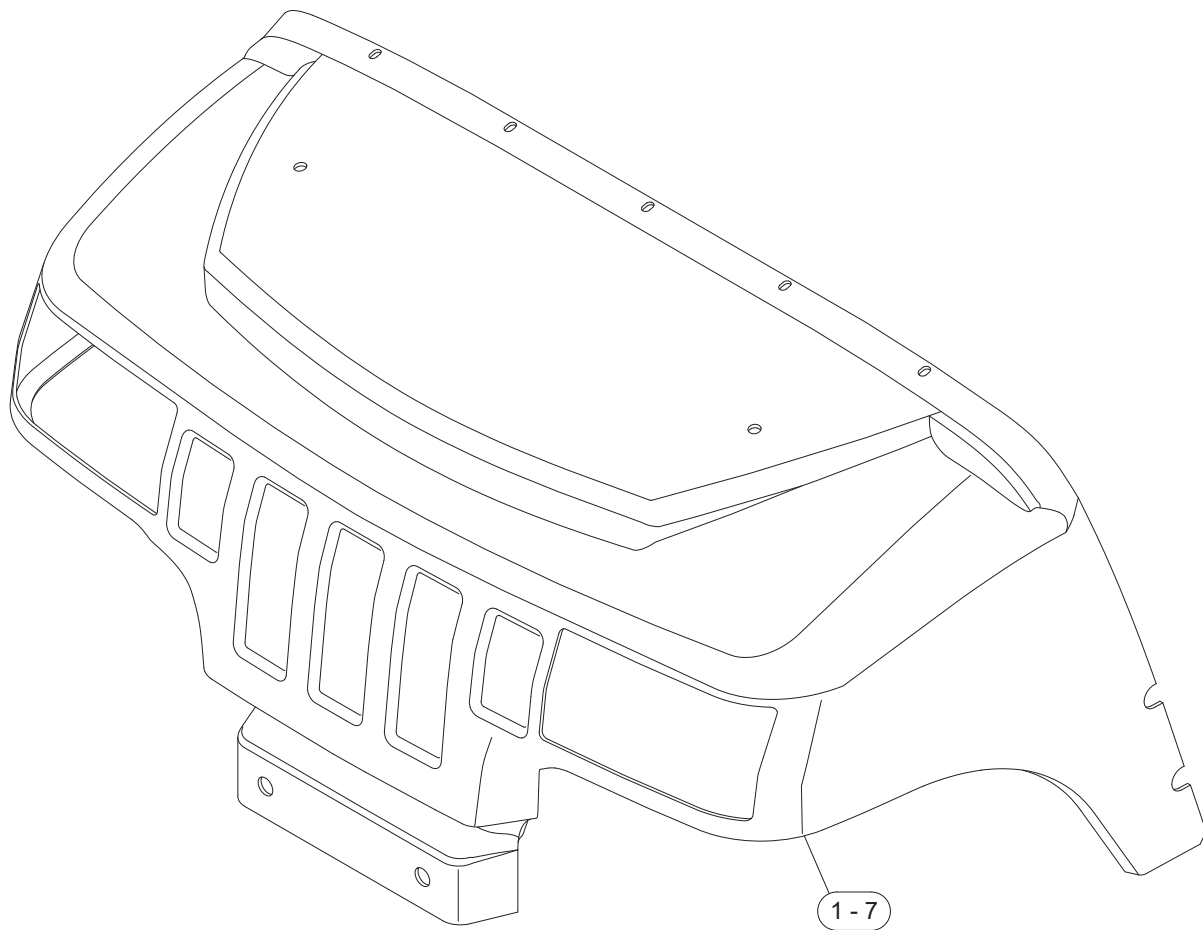

G-140299-000020

FRONT BODY


ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	<u>103984401</u>	Cowl, Red, Common	1			
2	<u>103984402</u>	Cowl, Dk Green, Common	1			
3	<u>103984404</u>	Cowl, Cl Blue, Common	1			
4	<u>103984405</u>	Cowl, Black, Common	1			
5	<u>103984410</u>	Cowl, White, Common	1			
6	<u>103984411</u>	Cowl, Dk Gray, Common	1			
7	<u>103984412</u>	Cowl, Beige, Common	1			
Note: For current and additional color options that may be available contact your nearest Club Car dealer or distributor for more information.						

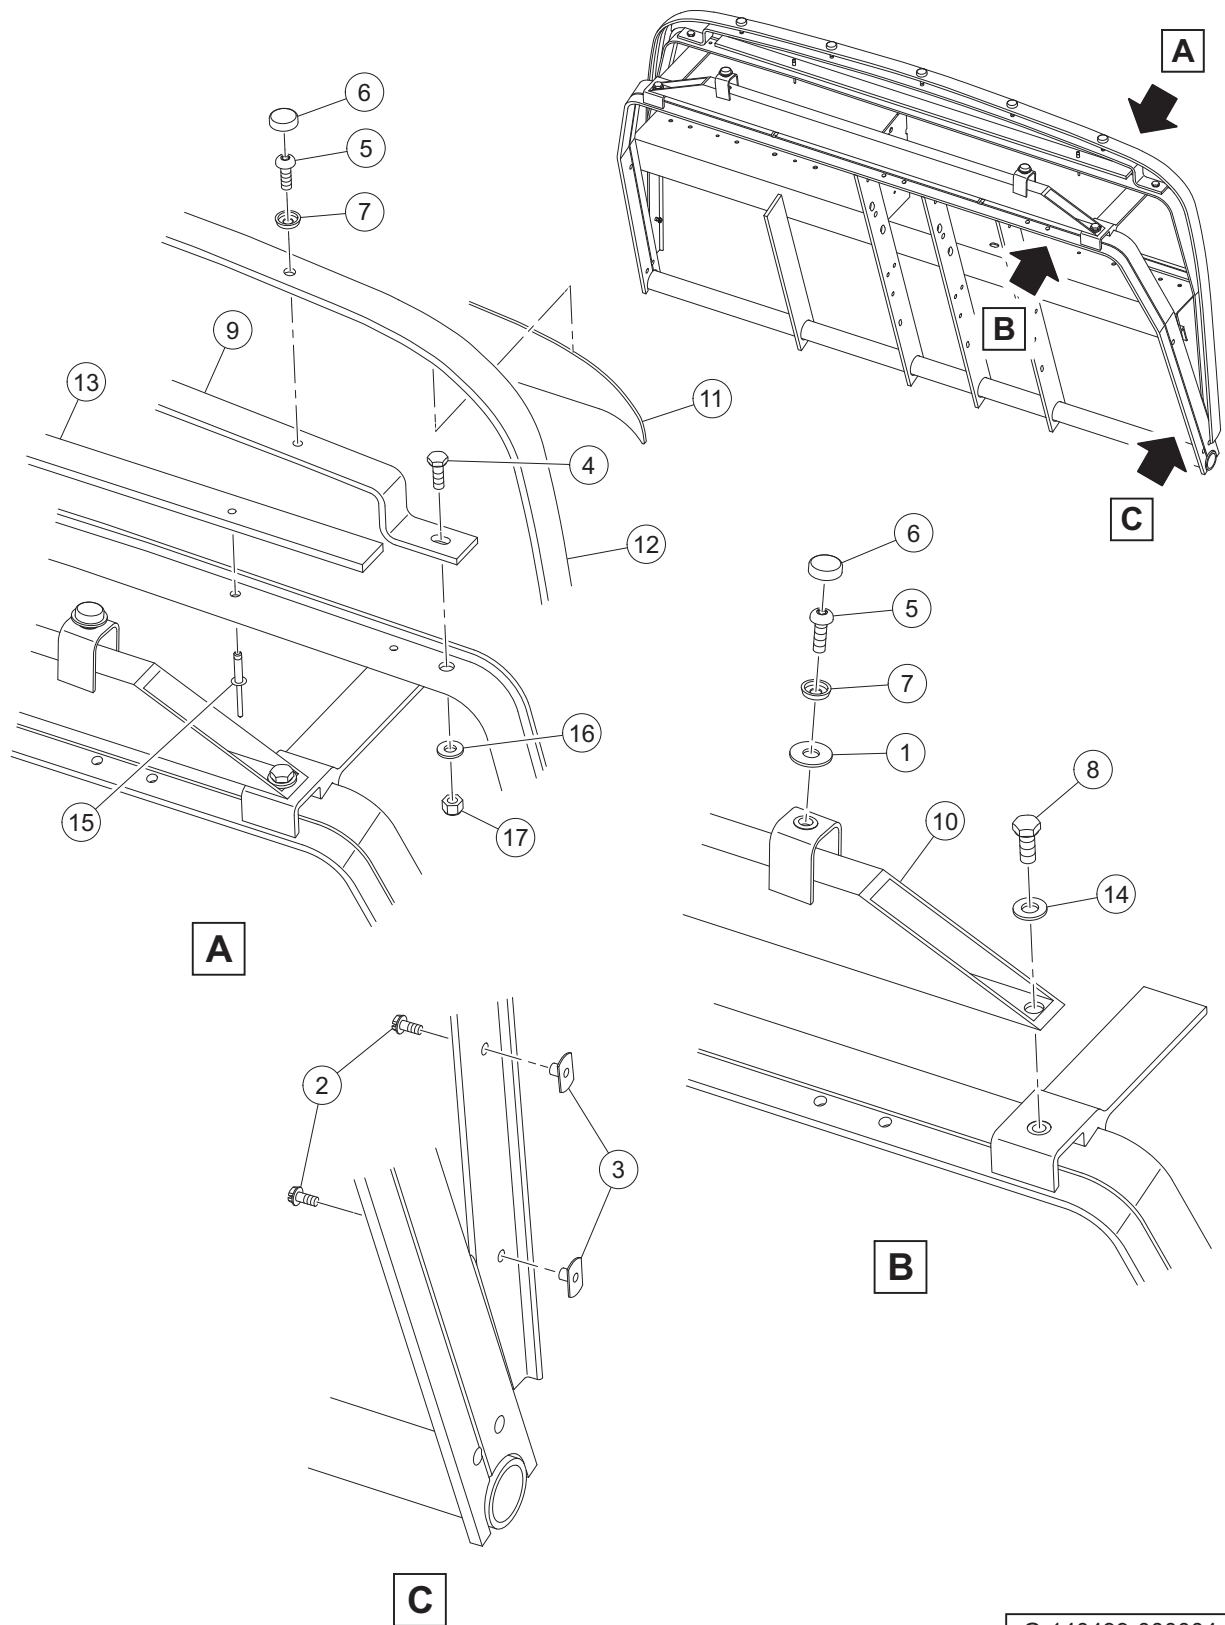1**G****E**

G-140499-000004

FRONT BODY AND DASH CLOSEOUT

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	<u>1010517</u>	Washer, .88 Od X .343 Id Nylon	2			
2	<u>1011017</u>	Screw, #8-32 X 0.375	4			
3	<u>1011659</u>	#8-32 Unc-2b Slub Base Teenut	4			
4	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2			
5	<u>102025801</u>	Screw, 1/4-20 X .75 Torx Pn Hd	7			
6	<u>102045001</u>	Cap, 1/4" Plastic Screw Head	7			
7	<u>102048401</u>	Washer, 1/4 Id Scalloped Plast	7			
8	<u>102242101</u>	Screw, 5/16-18 X 3/4 Hex-Head with Patch	2			
9	<u>102778601</u>	Support, Upper Cowl	1			
10	<u>103313301</u>	Asm, Brace, Canopy, Tube, Xrt	1			
11	<u>103364101</u>	Panel, Closeout, Dash	1			
12	<u>103364201</u>	Strip, Trim, Dash, Black	1			
13	<u>103395101</u>	Plate, Retention, Closeout	1			
14	<u>1241</u>	Washer, 5/16 Type A Flat	2			
15	<u>1606</u>	Rivet, 3/16 X .500 Alum Pop	2			
16	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2			
17	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2			

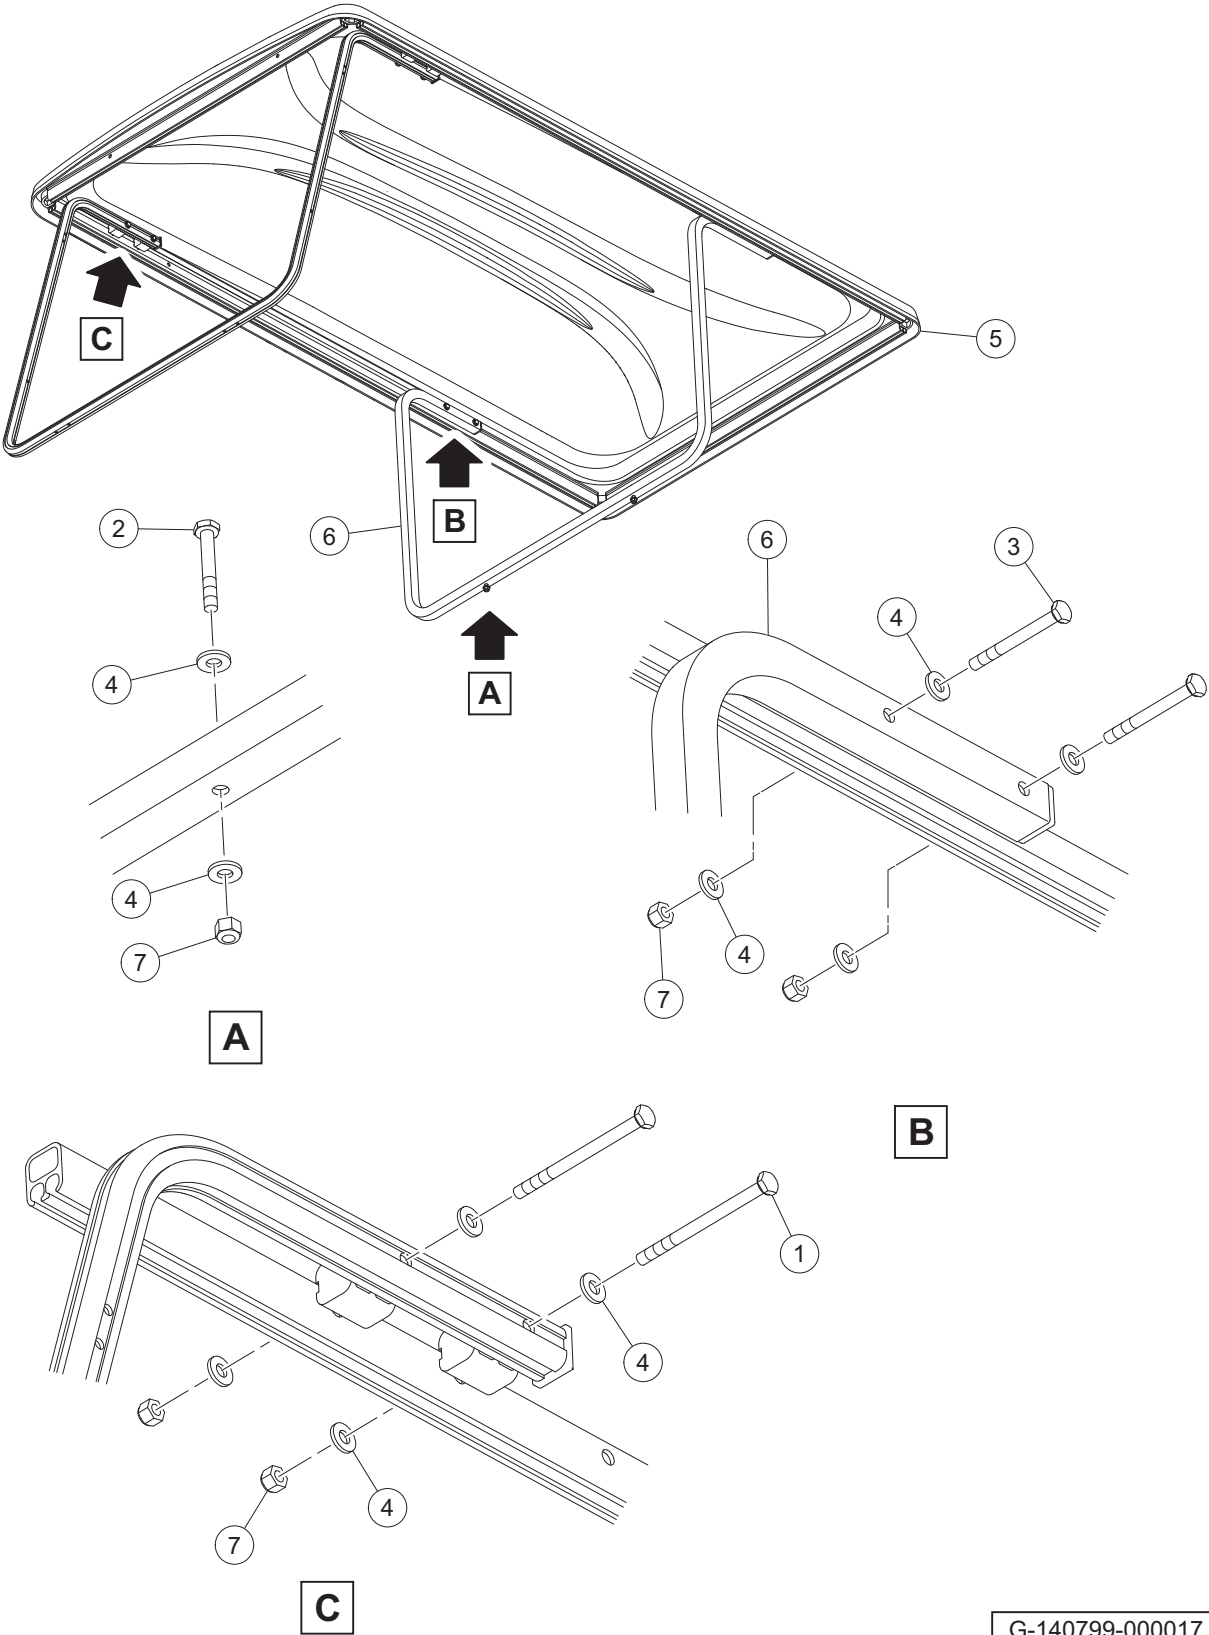

G-140799-000017


CANOPY AND REAR STRUT

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1012462</u>	Bolt, 1/4-20 X 3.50 Hex Head	4	
2	<u>1013509</u>	Screw, 1/4-20 X 1.75 Hx Hd Cap	2	
3	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	4	
4	<u>332</u>	Washer, 1/4 Type A Narrow Flat	20	
5	47557674001	Top, Canopy, Phantom Blk	1	
6	47595292001	Strut, Canopy, Rear, Long	1	
7	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	10	
Note: For complete black canopy and rear strut kit order p/n 47595294001. See the windshield canopy frame for additional parts information.				

1

G

E

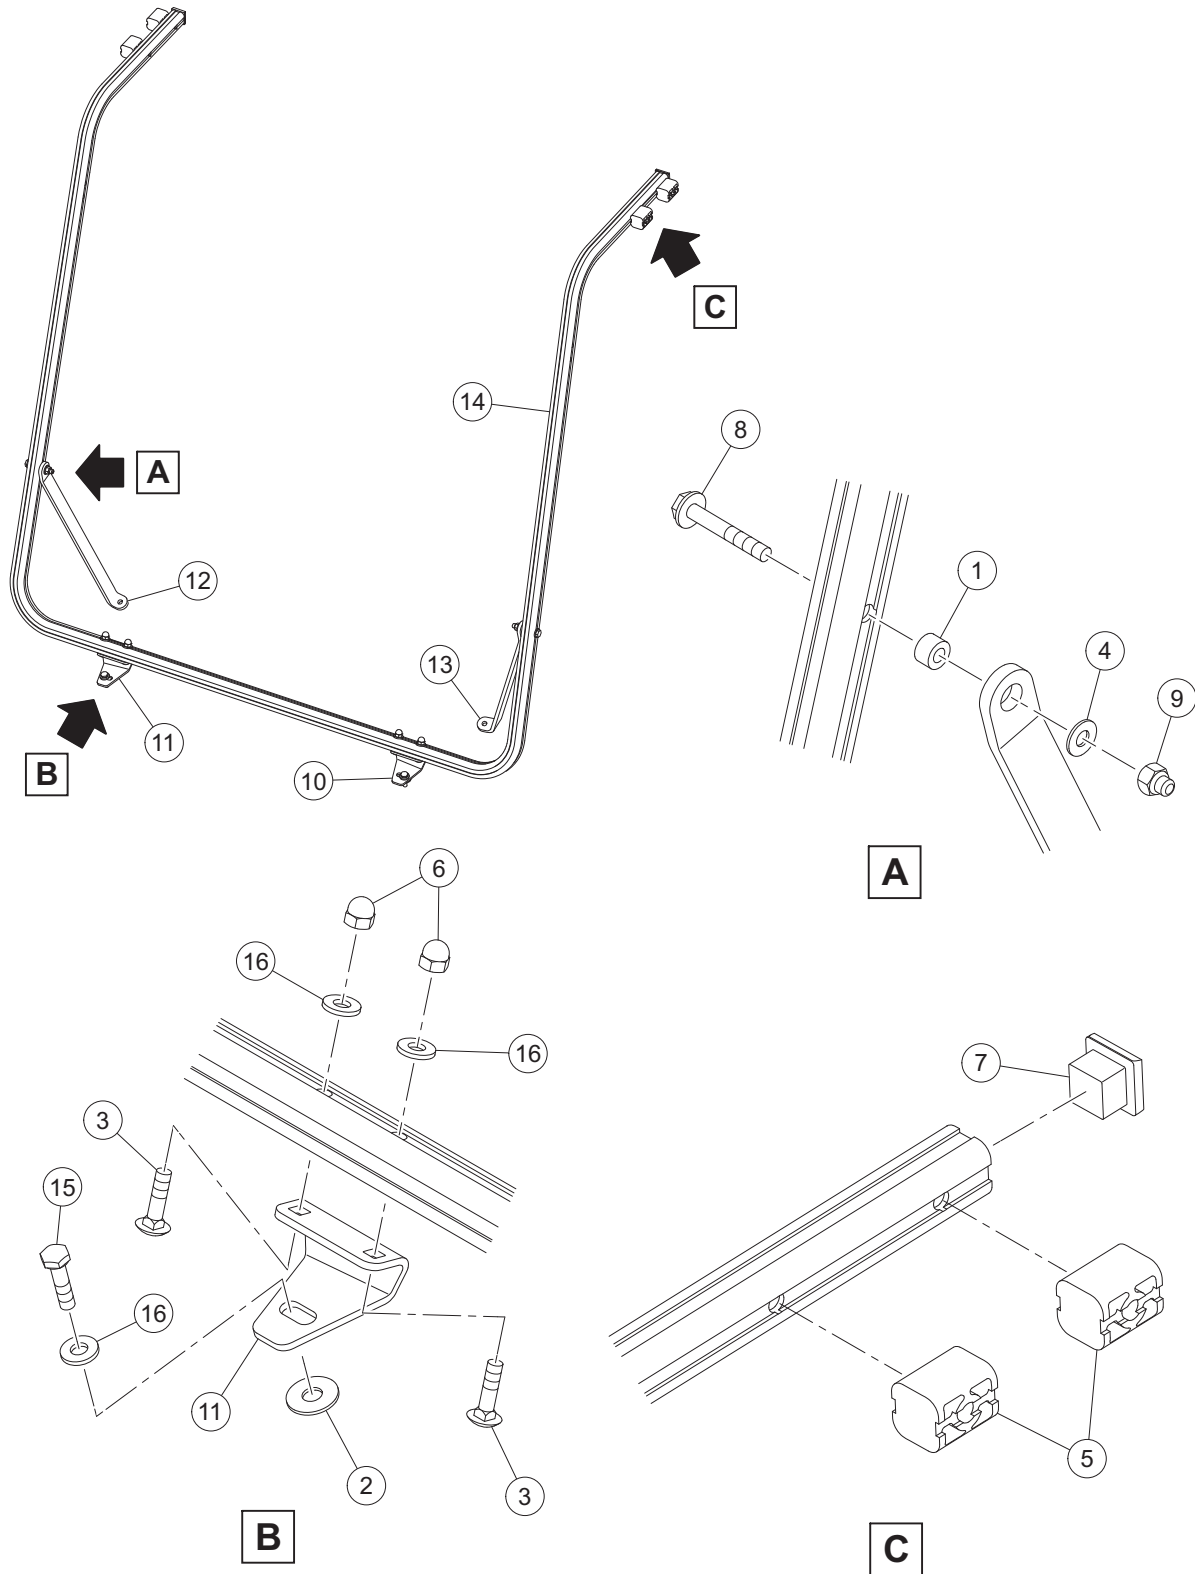

G-140799-000018


WINDSHIELD CANOPY FRAME

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010237</u>	Bushing	2	
2	<u>1010517</u>	Washer, .88 Od X .343 Id Nylon	2	
3	<u>1011963</u>	Bolt, 1/4-20 X 1.50 Rd Hd Sq N	4	
4	<u>1011964</u>	Washer, 1/4 Flat	2	
5	<u>1013884</u>	Spacer, Bag Hoop	4	
6	<u>1015091</u>	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	4	
7	<u>1017271</u>	Finishing Plug	2	
8	<u>102076702</u>	Screw, 1/4-20 X 1.75 Hexhead, SEMS, Black	2	
9	<u>102242401</u>	Nut - Nylon Insert W/cap	2	
10	<u>102854301</u>	Bracket, Support, Windshield Frame, Driver-Side	1	
11	<u>102854302</u>	Bracket, Support, Windshield Frame, Passenger-Side	1	
12	<u>103411101</u>	Brace, Knee, Passenger	1	
13	<u>103411201</u>	Brace, Knee, Driver	1	
14	<u>103787304</u>	Windshield Frame, Long	1	
15	<u>304</u>	Screw, 1/4-20 X 1.0 Hex-Head Cap	2	
16	<u>332</u>	Washer, 1/4 Type A Narrow Flat	6	
Note: For complete windshield canopy frame kit order p/n 103795504. See the canopy and rear strut installation for additional parts information.				

1

G

E

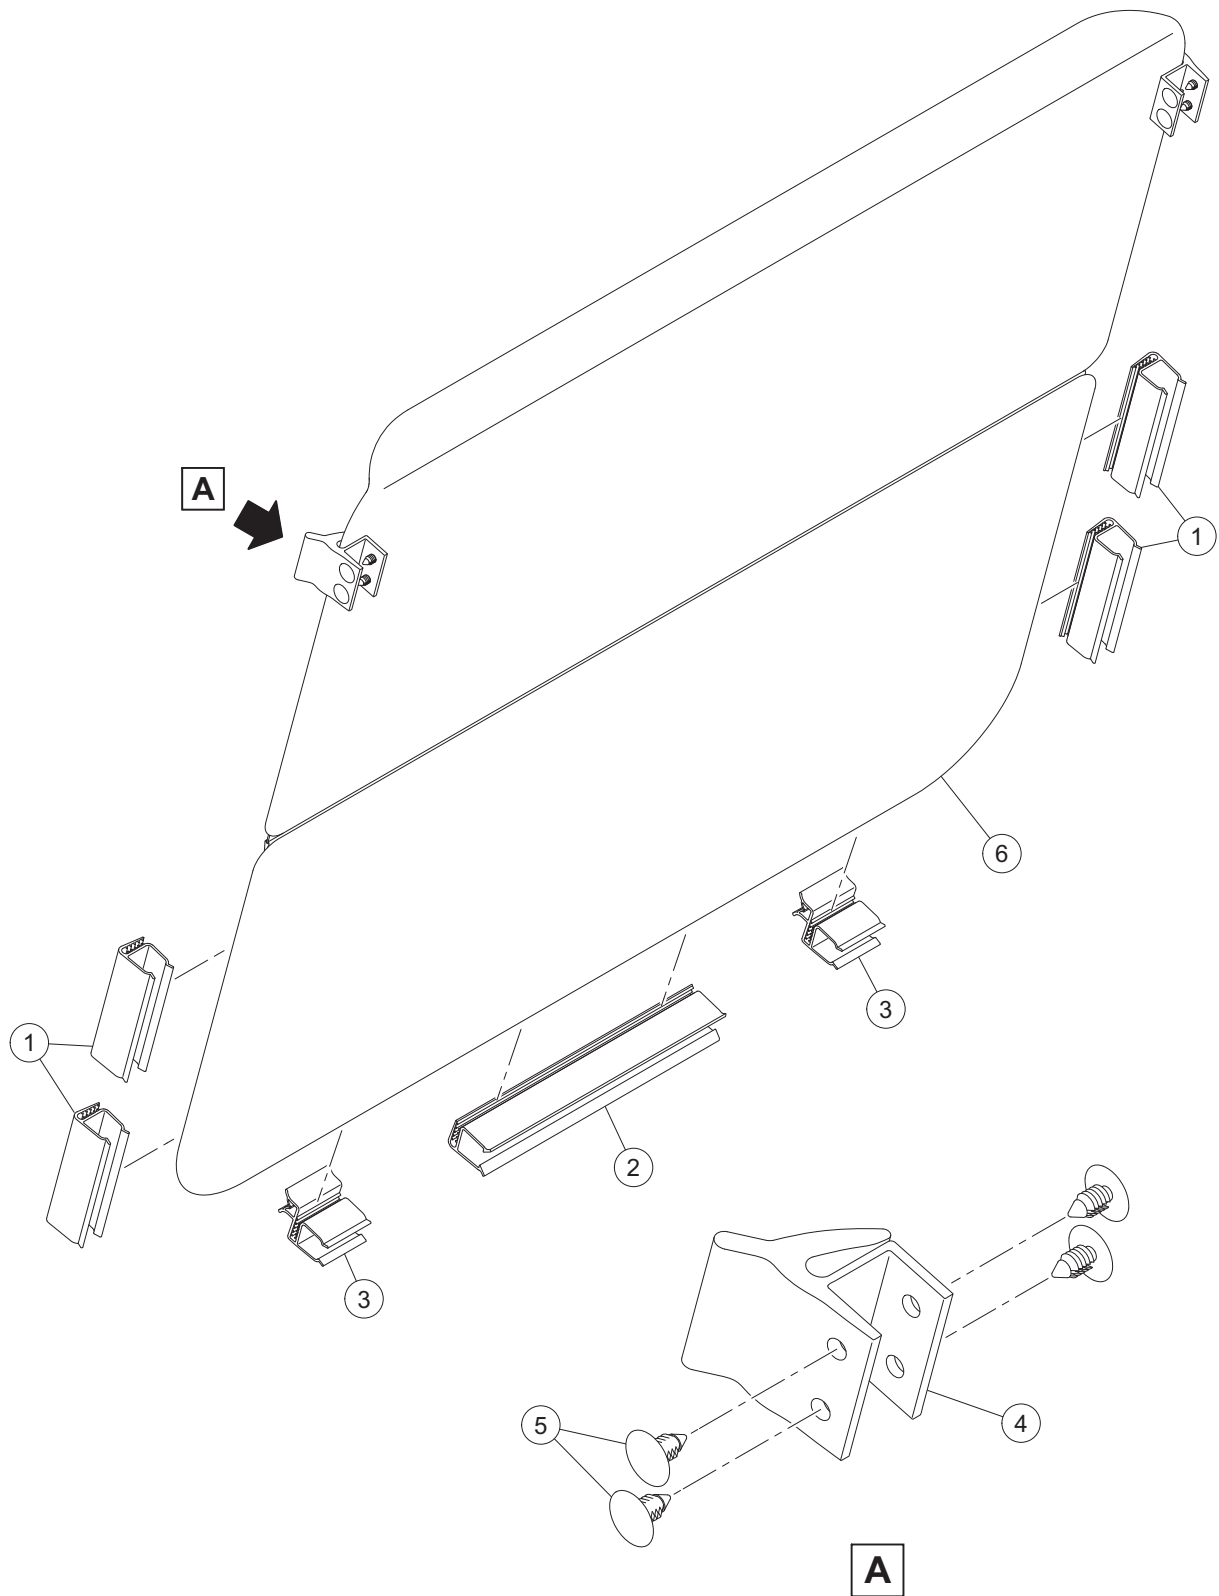

G-140899-000007


HINGED WINDSHIELD

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>102005701</u>	5" Plastic Extrusion	4	
2	<u>102163001</u>	Windshield Channel	1	
3	<u>102163101</u>	Channel with Receiver Clip	2	
4	<u>103677101</u>	W/s, Rubber, Clip Retainer	2	
5	<u>103754901</u>	Fastener, Barrel - .610 X .25	8	
6	<u>105077701</u>	Ws, Hinged, Utility, Clear	1	
Note: For complete hinged windshield kit order p/n 105077801. See the windshield canopy frame for additional parts information.				

1

G

E

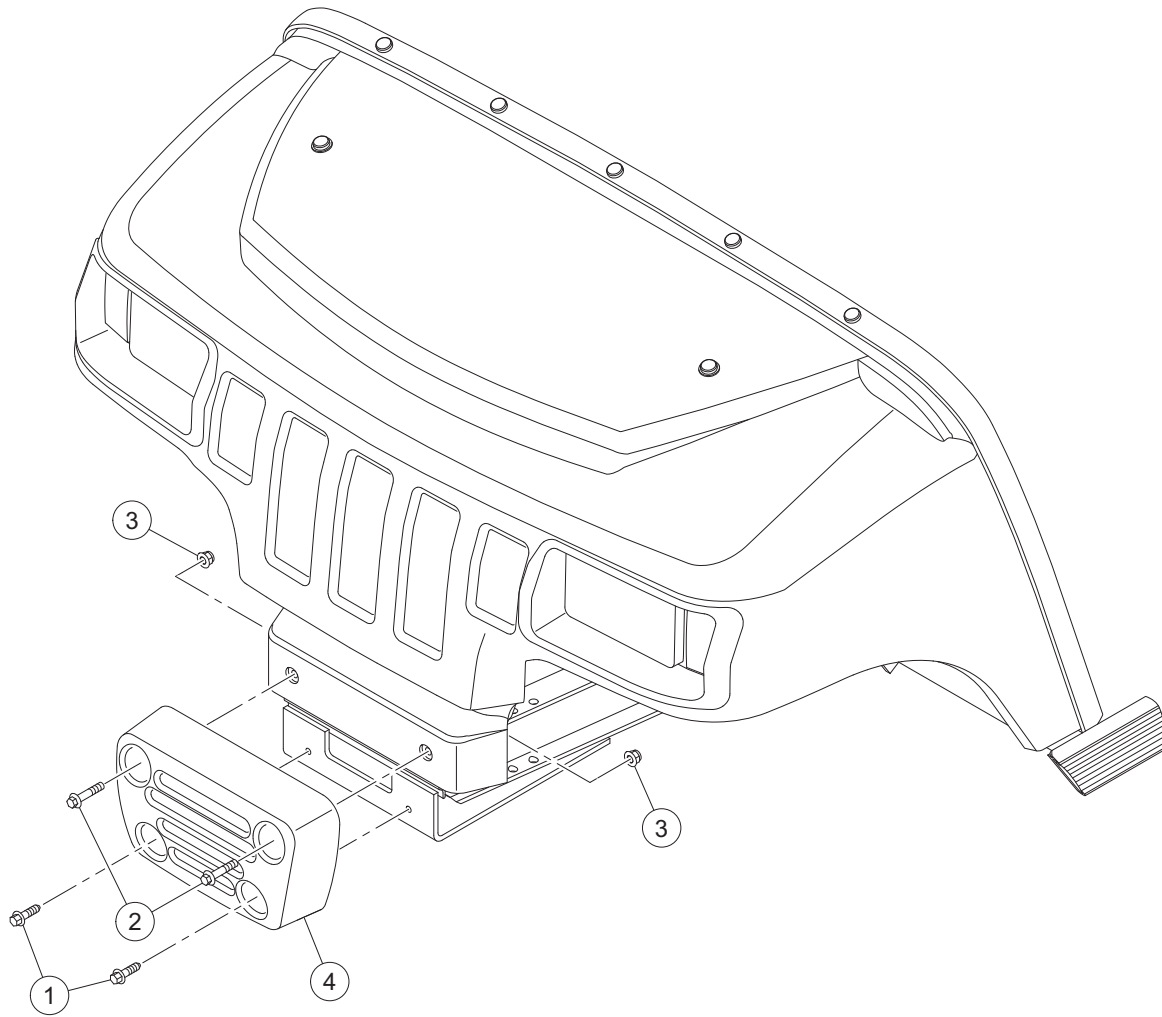

G-140199-000024


BUMPER – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>102289002</u>	Screw, M8 X 1.25 X 30 Tri, Blk	2	
2	<u>102298240</u>	Bolt, Flange Head, M8-1.25 X 40	2	
3	<u>102618601</u>	Lock Nut, Flange, M8 X 1.25 Nylon	2	
4	<u>102830501</u>	Bumper, Cast	1	

1

G

E

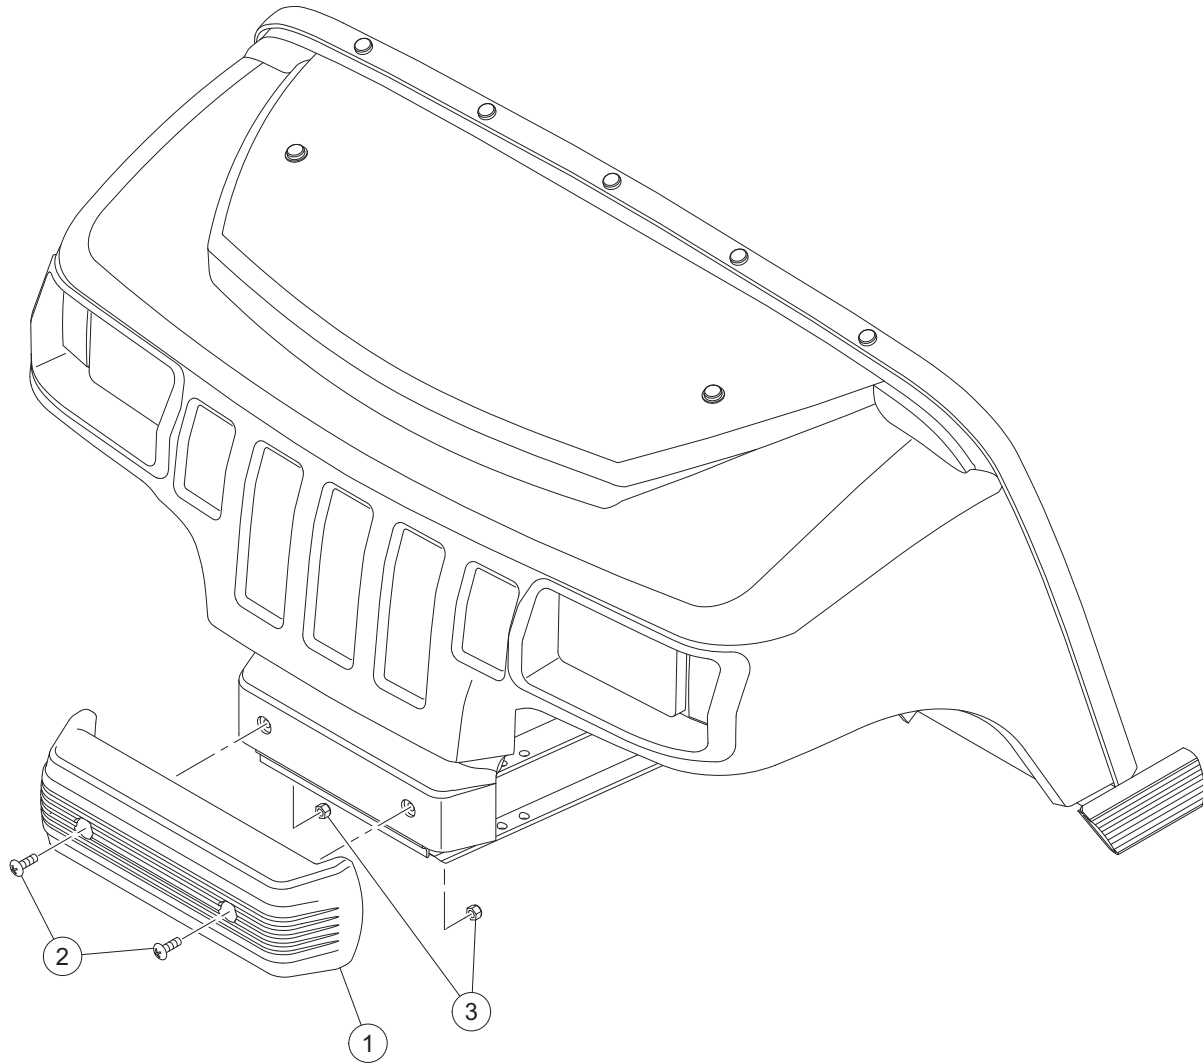

G-140199-000023


BUMPER – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
1	<u>1016868</u>	1 2 3 4 Front Bumper	1	
2	<u>7251</u>	Screw, 5/16-18 x 1.0 Truss-Head	2	
3	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	
Note: For complete electric vehicle bumper kit order p/n 1017080.				

1

G

E

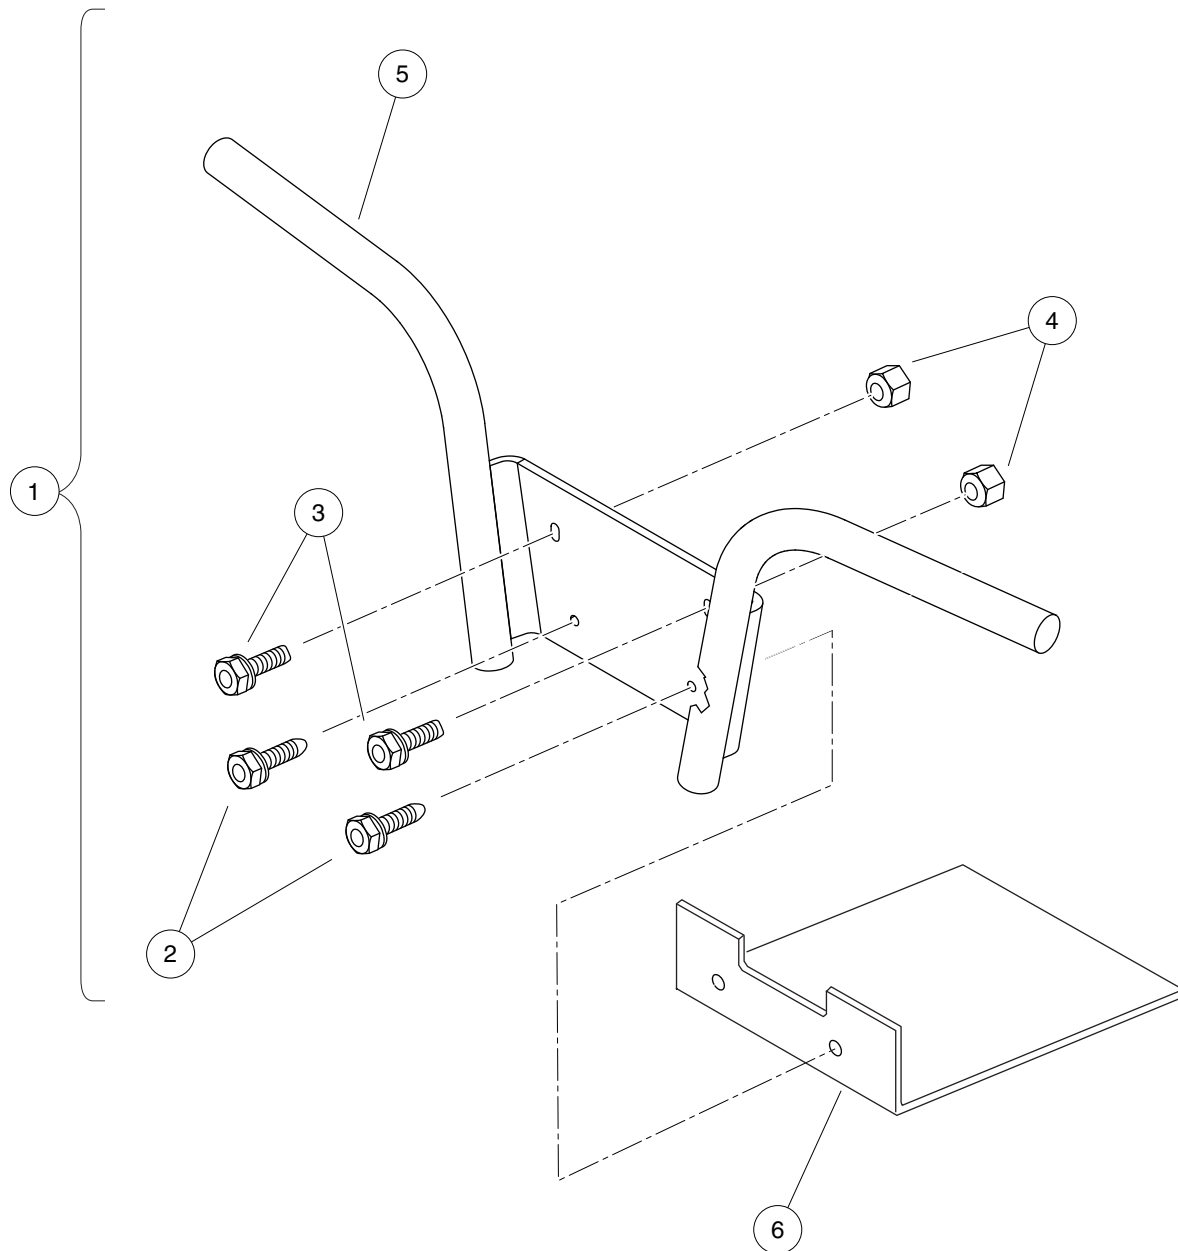

000356-003



BRUSH GUARD

ITEM	PART NO.	DESCRIPTION	QTY	1
		1 2 3 4		G
1	<u>102852401</u>	Kit, Brush Guard (includes items 2 through 6)	1	E
2	<u>102289002</u>	Screw, M8 X 1.25 X 30 Tri, Blk	2	
3	<u>102298240</u>	Bolt, Flange Head, M8-1.25 X 40	2	
4	<u>102618601</u>	Lock Nut, Flange, M8 X 1.25 Nylon	2	
5	<u>102830201</u>	Guard, Brush	1	
6	<u>102830401</u>	Support, Brush Guard	1	

1

G

E

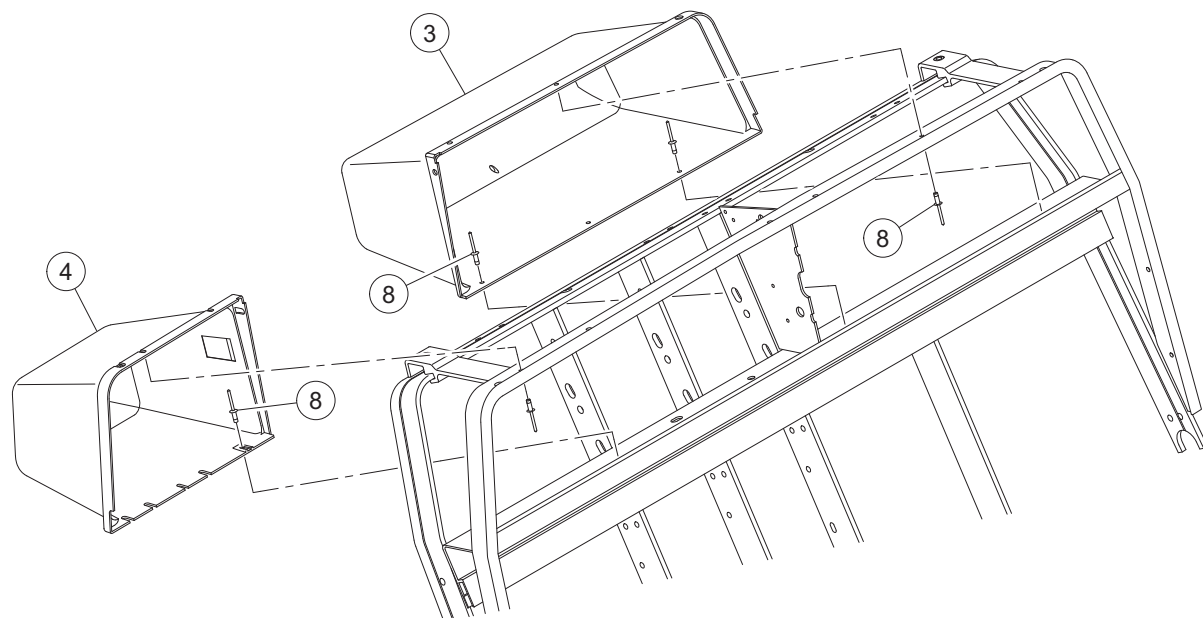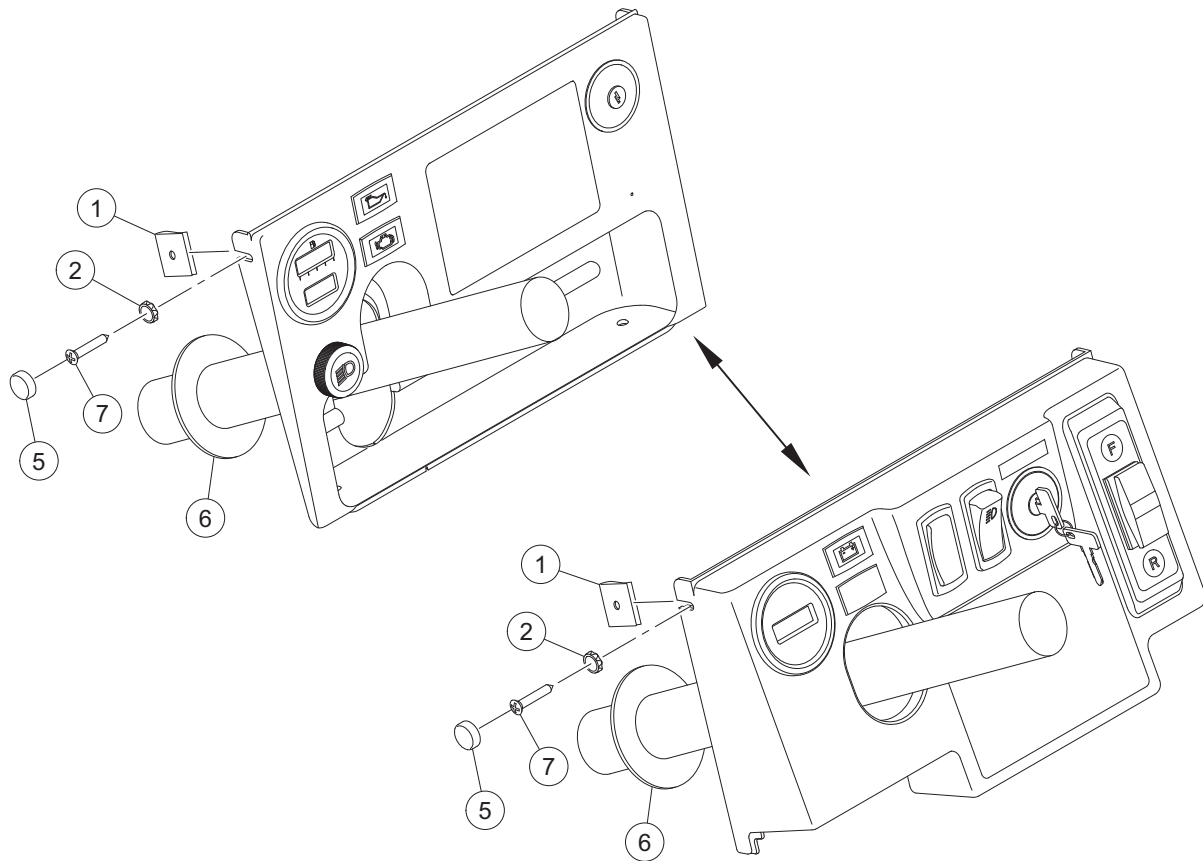

G-140499-000005


DASH BOXES – GASOLINE AND ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1011019</u>	Nut, Speed	2	
2	1011382	Washer, #10 Pan-Head Screw	2	
3	<u>1013343</u>	Dash Component, Passenger-Side, Black	1	
4	1013344	Dash Component, Driver-Side	1	
5	<u>1013494</u>	Cover, Screw Head	2	
6	<u>102278001</u>	Boot, Steering Column Round	1	
7	1620	Screw, #10-16 X 0.75 Pan-Head Tap	2	
8	<u>7973</u>	Rivet, 3/16 X .400 Blind	5	

1

G

E

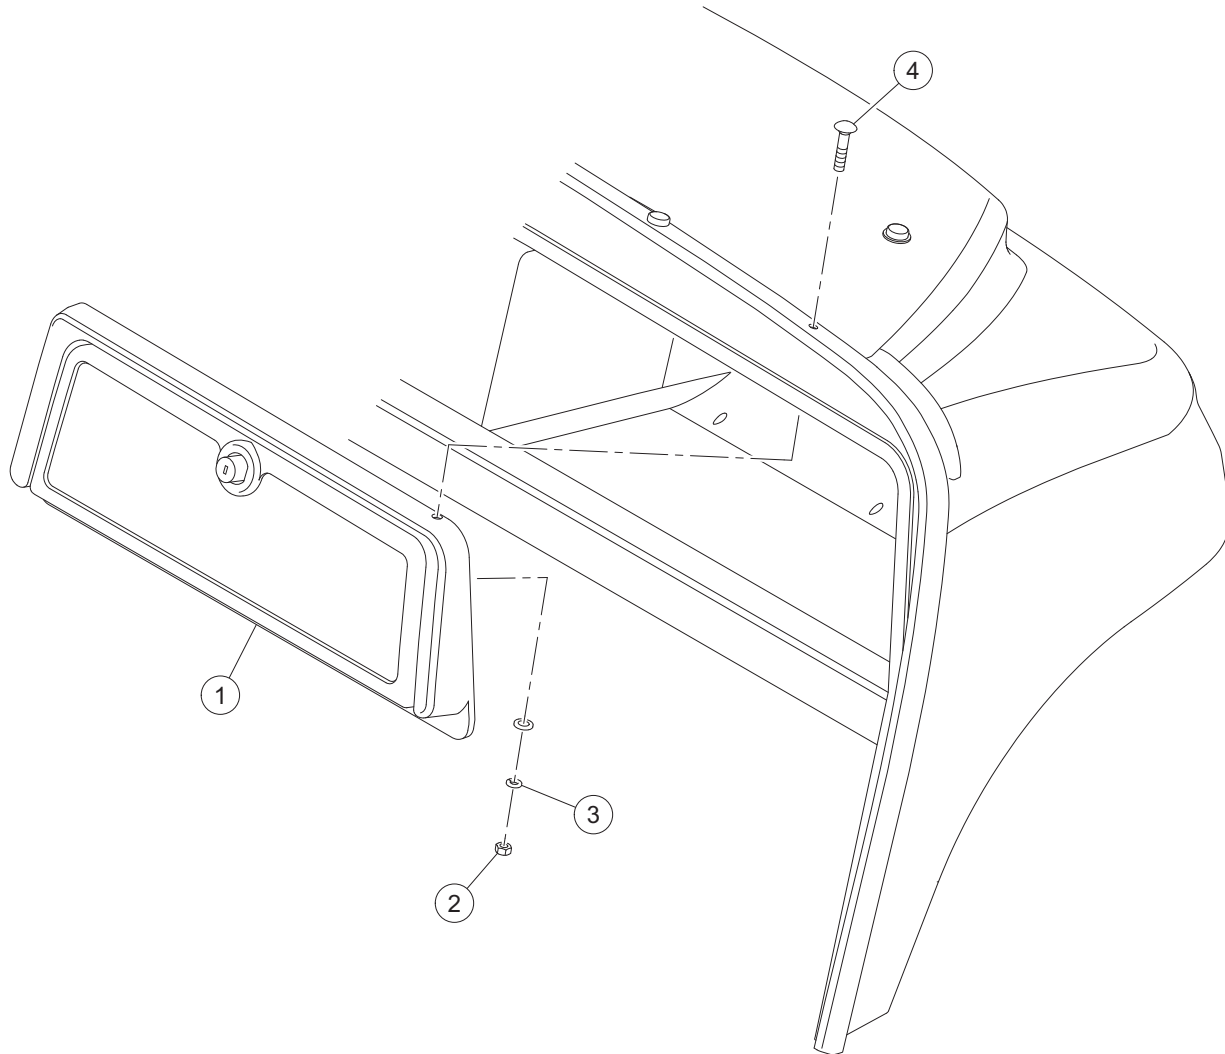

G-140499-000006


GLOVE BOX

ITEM	PART NO.	DESCRIPTION	QTY	1
1	1015484	Glove Compartment Subassembly (Black)	1	G
2	<u>1242</u>	Nut, 5/16-18 Hex	1	E
3	<u>7174</u>	Lockwasher, 5/16 Split	1	
4	<u>7818</u>	Bolt, Carriage, 5/16-18 X 1.5	1	

1

G

E

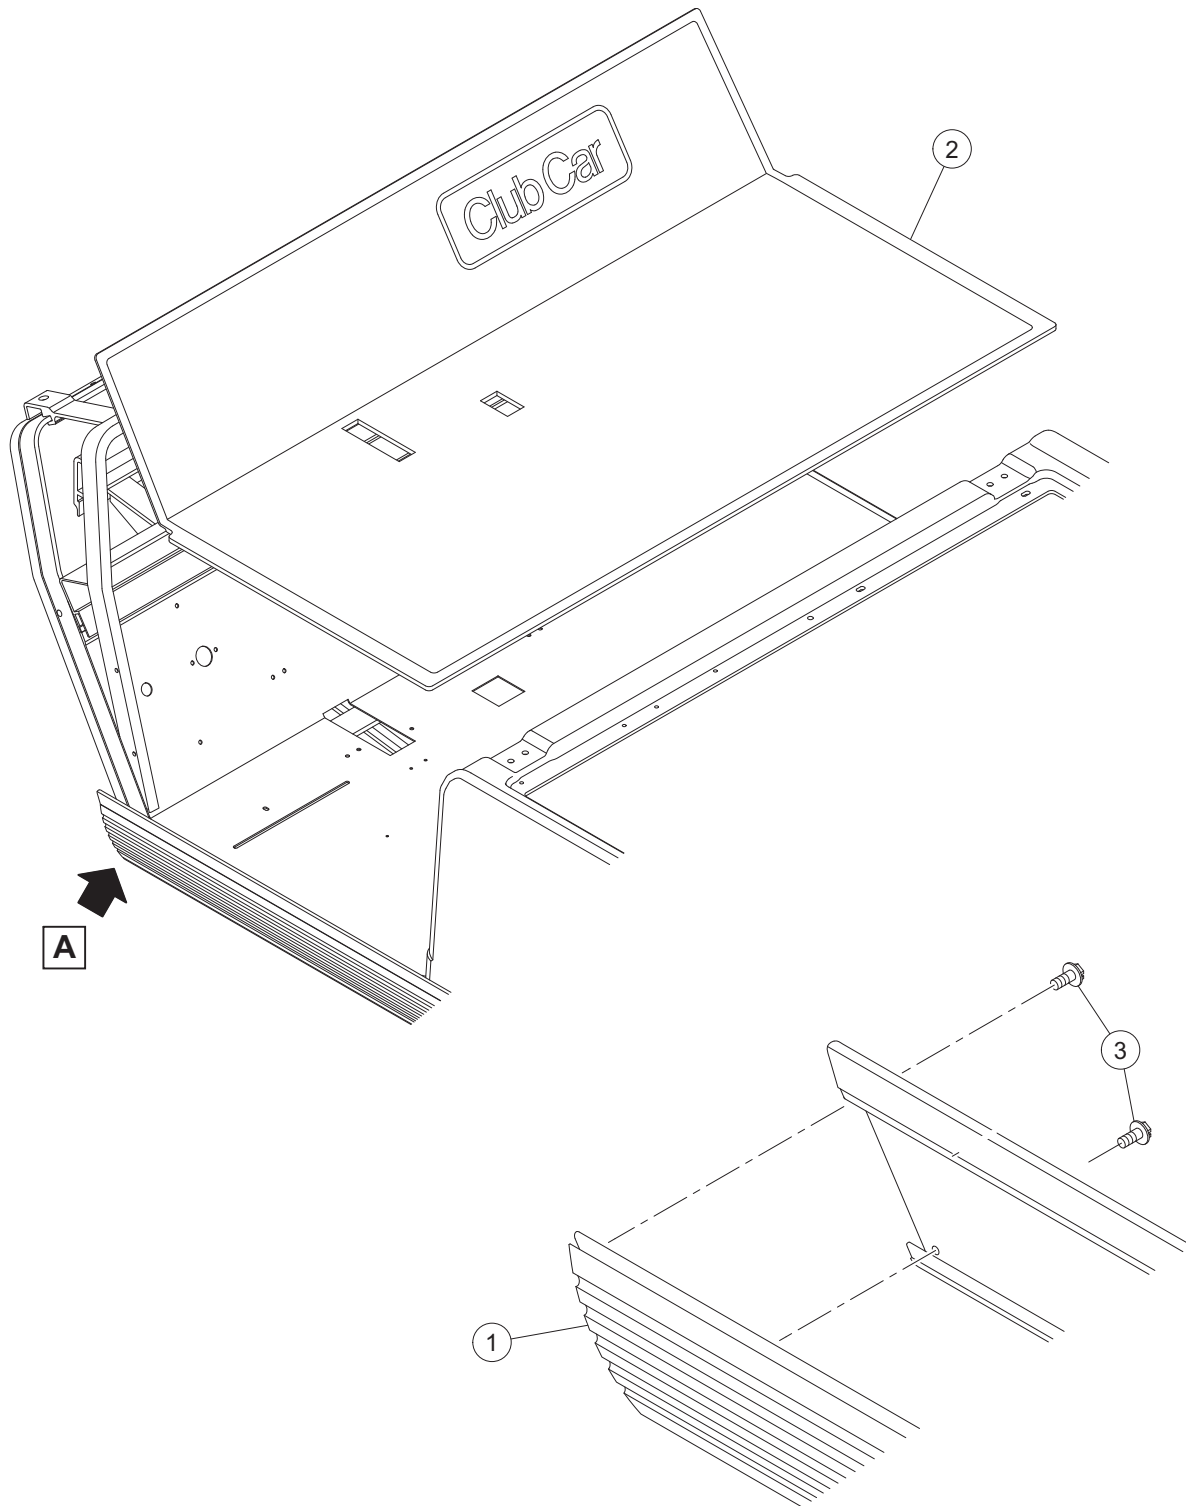

G-140599-000008


FLOORMAT AND SIDE TRIM

ITEM	PART NO.	DESCRIPTION	QTY	1
1	<u>1013983</u>	Bumper, Side Trim	2	G
2	<u>101503202</u>	Floormat	1	E
3	<u>102310701</u>	Screw, #8-18 x 0.375, Hex-Head Washer	8	


1

G

E

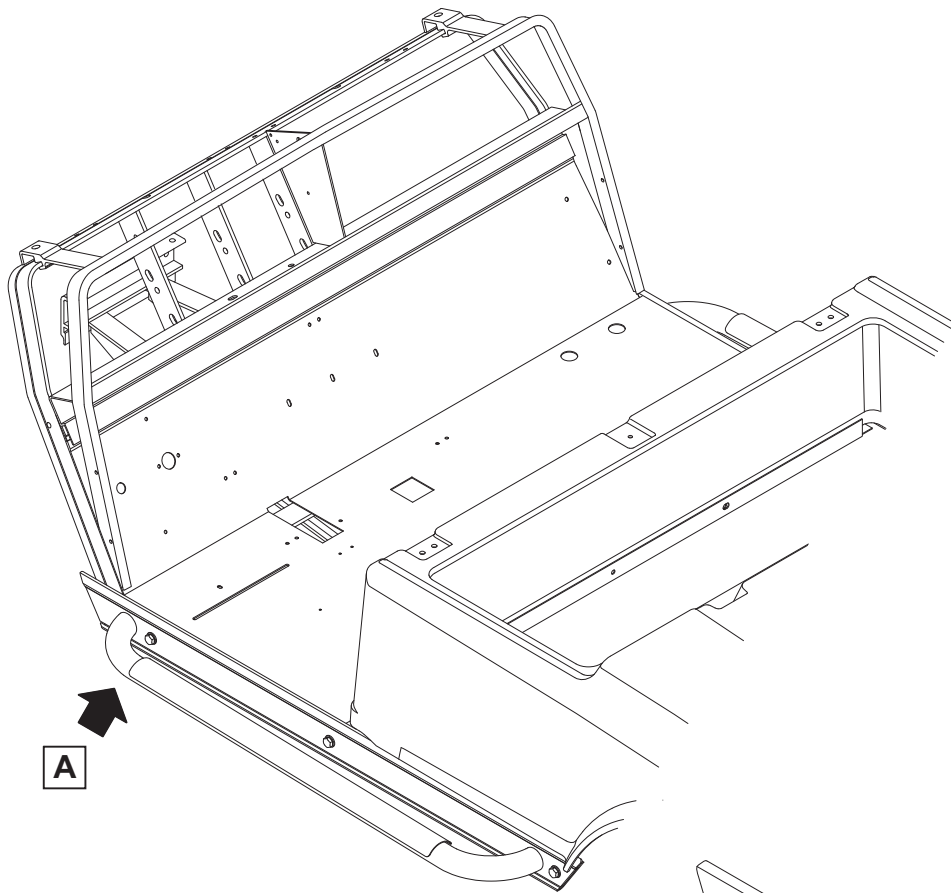

A

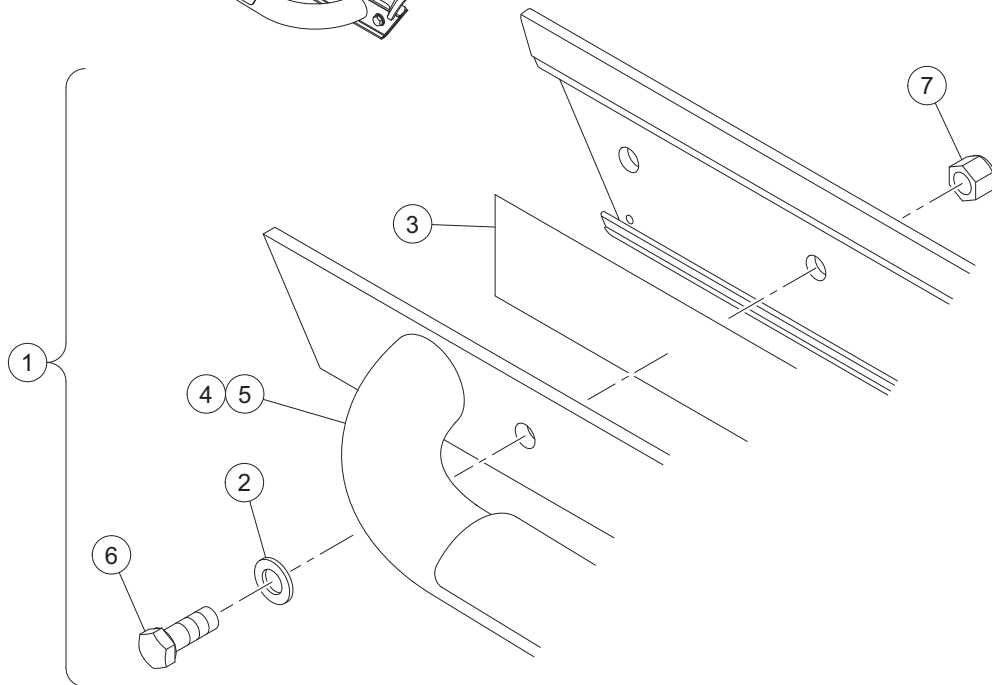

A

G-140199-000025


NERF BAR

ITEM	PART NO.	DESCRIPTION	QTY	1
		1 2 3 4		G
1	<u>102829802</u>	Kit, Nerf Bar (black) (includes items 2 through 7)	1	E
2	<u>1011990</u>	Washer, 3/8 Flat	6	
3	<u>102355102</u>	Tape, Non-skid	2	
4	<u>102829703</u>	Nerf Bar Assy, Driver	1	
5	<u>102829704</u>	Nerf Bar Assy, Passenger	1	
6	<u>320</u>	Screw, 3/8-16 X 1.00 Hex-Head Cap	6	
7	<u>8754</u>	Locknut, 3/8-16 Hex	6	

1

G


E

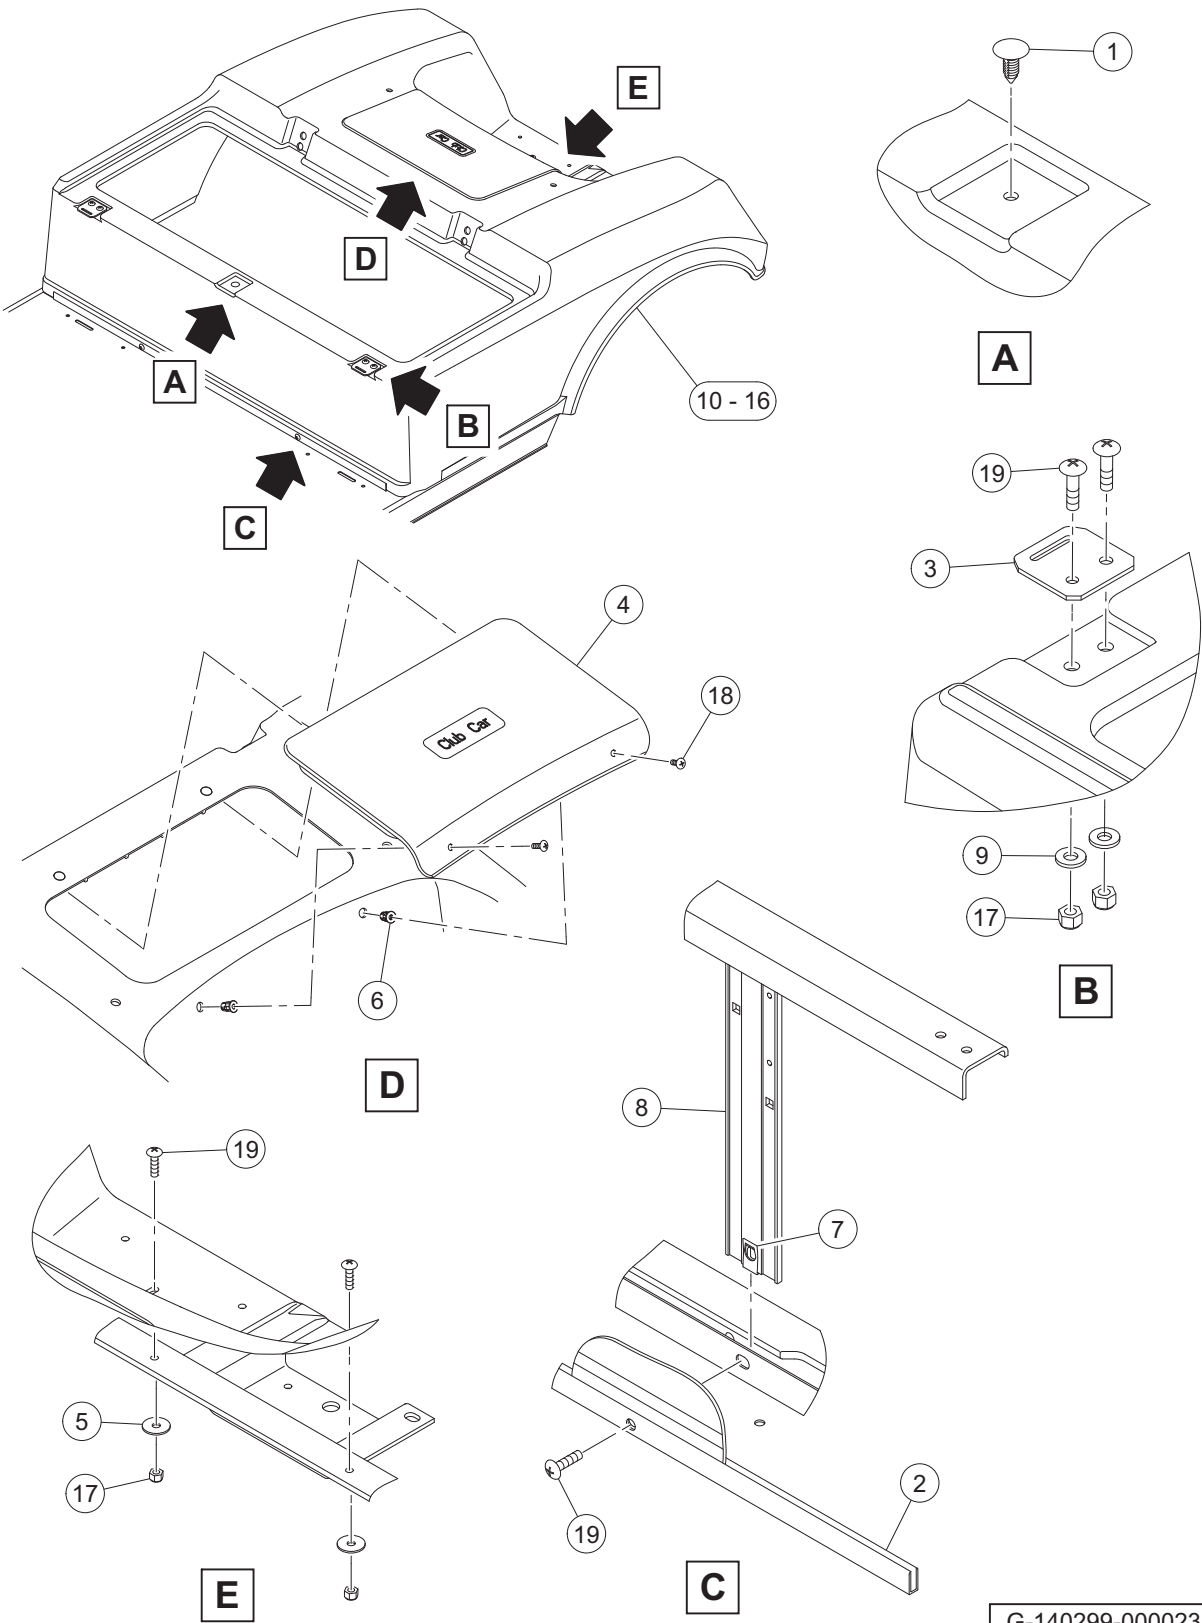

G-140299-000023

REAR BODY WITH REAR FACING SEAT – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010434</u>	Barrel - Plastic	1	
2	<u>1010993</u>	Body Kick Plate	1	
3	<u>1012412</u>	Body, Hinge Plate	2	
4	<u>1013032</u>	Panel, Access, Top, Std	1	
5	<u>1014306</u>	Washer, 1/4" Type B Flat	2	
6	<u>1015525</u>	Nut, 1/4-20 Blind	2	
7	<u>1016952</u>	U-Nut, 1/4-20	2	
8	<u>1017141</u>	Body Support Weldment	1	
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4	
10	47623450001	Body, Rear, Xrt 800, Gas -red	A/R	
11	47623450002	Body, Rear, Xrt 800, Gas -gree	A/R	
12	47623450003	Body, Rear, Xrt 800, Gas -blue	A/R	
13	47623450005	Body, Rear, Xrt 800, Gas -blac	A/R	
14	47623450006	Body, Rear, Xrt 800, Gas -whit	A/R	
15	47623450007	Body, Rear, Xrt 800, Gas -dk G	A/R	
16	47623450008	Body, Rear, Xrt 800, Gas -beig	A/R	
17	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	6	
18	<u>8248</u>	Screw, 1/4-20 X 0.75, Truss-Head Machine	2	
19	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	8	
Note: For current and available color options contact your local Club Car dealer or distributor.				

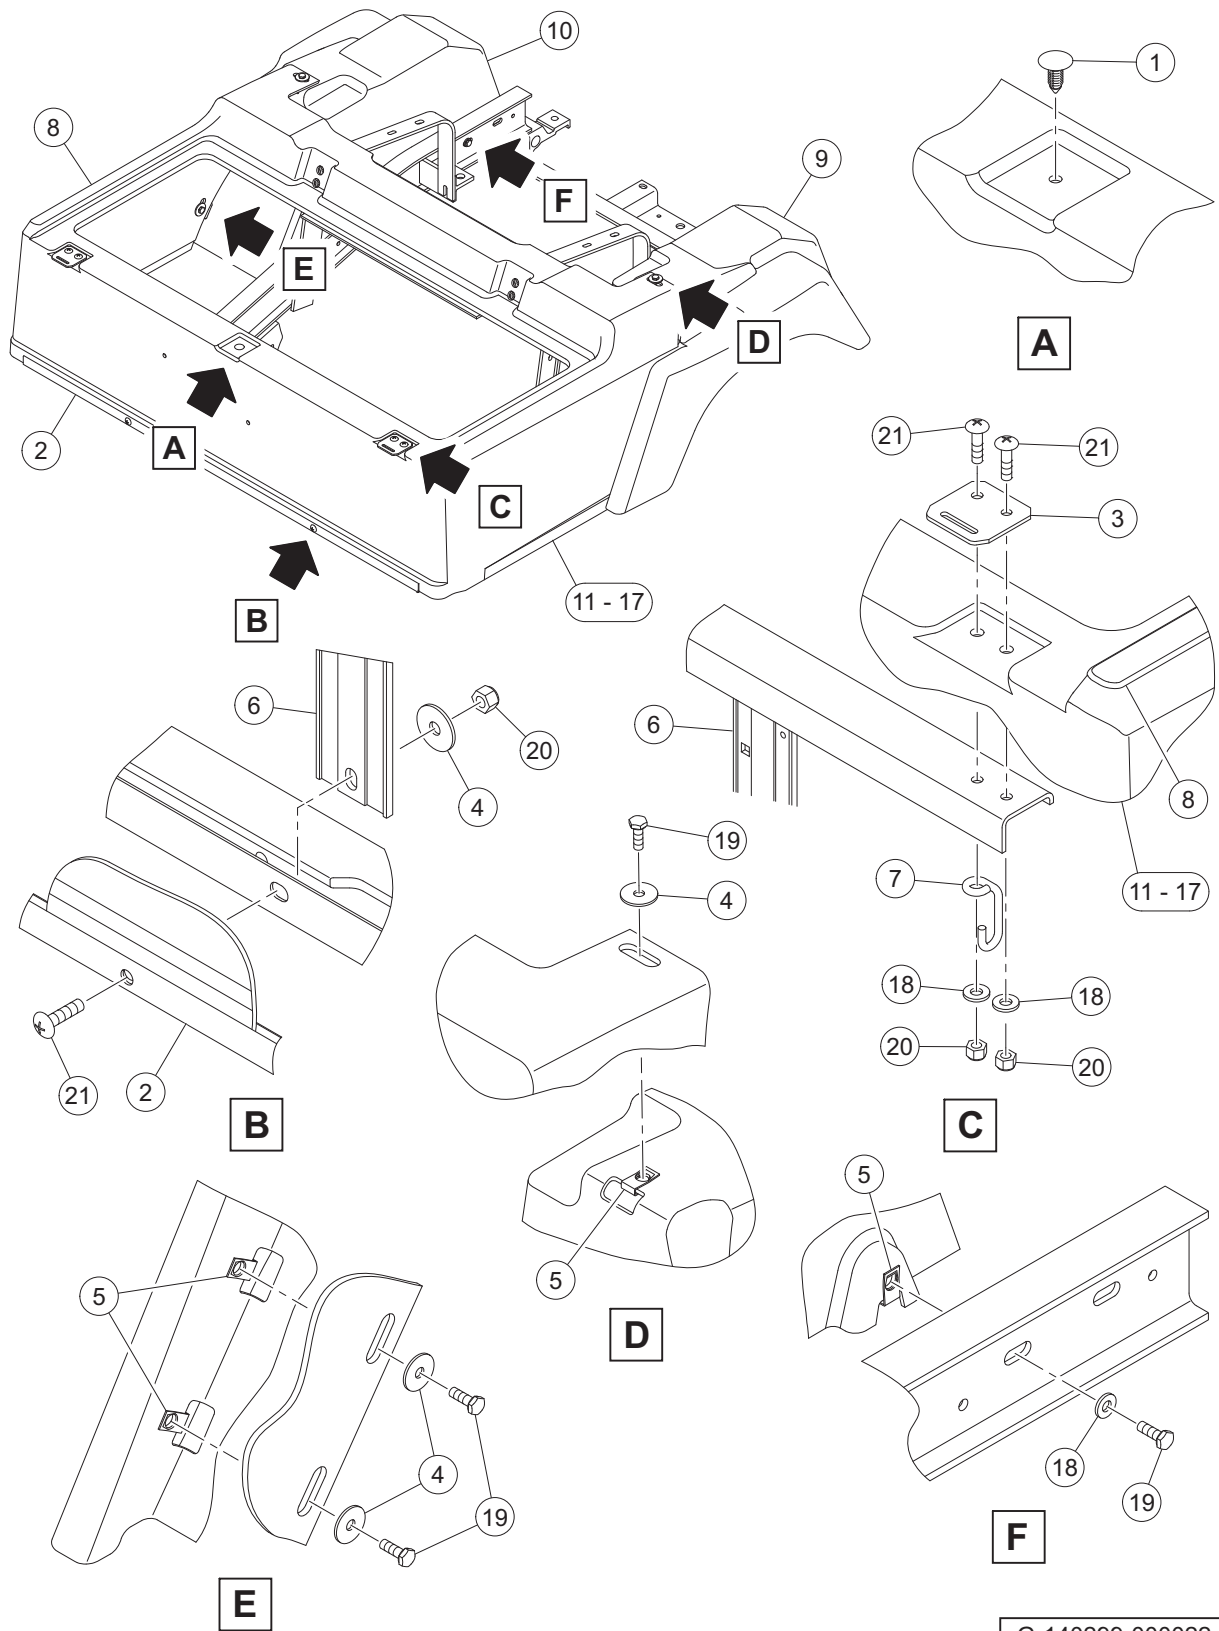1**G****E**

G-140299-000022


REAR BODY WITH FENDERS – BED BOX – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010434</u>	Barrel - Plastic	1	
2	<u>1010993</u>	Body Kick Plate	1	
3	<u>1012412</u>	Body, Hinge Plate	2	
4	<u>1014306</u>	Washer, 1/4" Type B Flat	2	
5	<u>1016952</u>	U-Nut, 1/4-20	8	
6	<u>1017141</u>	Body Support Weldment	1	
7	<u>101855801</u>	Cable Retainer	1	
8	<u>102221201</u>	Wear Pad	2	
9	<u>102777601</u>	Fender, Driver Side	1	
10	<u>102777602</u>	Fender, Passenger Side	1	
11	<u>105005201</u>	Body, Rear, Efi, Cut, Red	A/R	
12	<u>105005203</u>	Body, Rear, Efi, Cut, Grn	A/R	
13	<u>105005204</u>	Body, Rear, Efi, Cut, Cls Blu	A/R	
14	<u>105005206</u>	Body, Rear, Efi, Cut, Black	A/R	
15	<u>105005207</u>	Body, Rear, Efi, Cut, White	A/R	
16	<u>105005208</u>	Body, Rear, Efi, Cut, Dk Gray	A/R	
17	<u>105005209</u>	Body, Rear, Efi, Cut, Beige	A/R	
18	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4	
19	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	6	
20	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4	
21	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	4	
Note: For current and available color options contact your local Club Car dealer or distributor.				

1

G

E

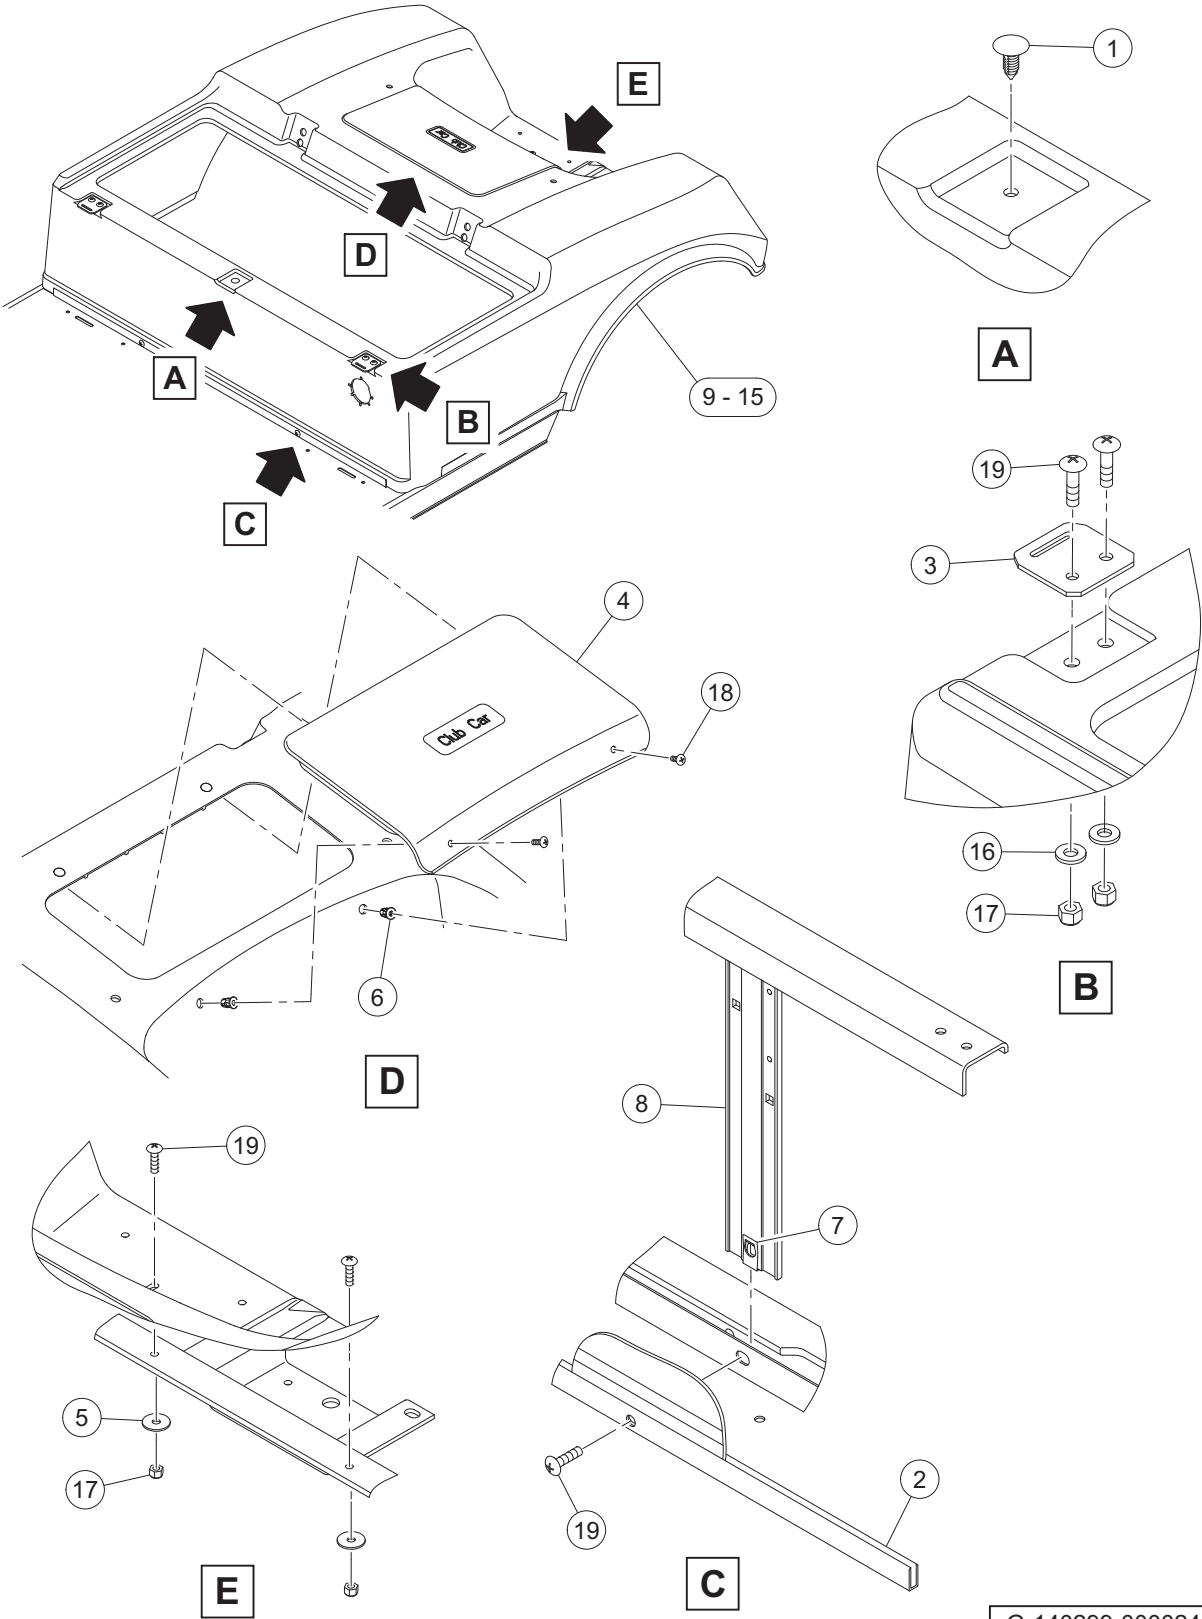

G-140299-000024

REAR BODY WITH REAR FACING SEAT – ELECTRIC VEHICLE


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010434</u>	Barrel - Plastic	1
2	<u>1010993</u>	Body Kick Plate	1
3	<u>1012412</u>	Body, Hinge Plate	2
4	<u>1013032</u>	Panel, Access, Top, Std	1
5	<u>1014306</u>	Washer, 1/4" Type B Flat	2
6	<u>1015525</u>	Nut, 1/4-20 Blind	2
7	<u>1016952</u>	U-Nut, 1/4-20	2
8	<u>1017141</u>	Body Support Weldment	1
9	103365521	Body, Rear Xrt Red, Svc	A/R
10	103365522	Body, Rear Xrt Green, Svc	A/R
11	103365524	Body, Rear Xrt Blue, Svc	A/R
12	103365525	Body, Rear Xrt Black, Svc	A/R
13	103365530	Body, Rear, Xrt Beige	A/R
14	103365531	Body, Rear, Xrt White	A/R
15	103365532	Body, Rear, Xrt Dk Gray	A/R
16	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4
17	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	6
18	<u>8248</u>	Screw, 1/4-20 X 0.75, Truss-Head Machine	2
19	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	8
Note: For current and available color options contact your local Club Car dealer or distributor.			

1

G


E

E



REAR BODY WITH FENDERS – BED BOX – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1010434</u>	Barrel - Plastic	1	
2	<u>1010993</u>	Body Kick Plate	1	
3	<u>1012412</u>	Body, Hinge Plate	2	
4	<u>1014306</u>	Washer, 1/4" Type B Flat	2	
5	<u>1016952</u>	U-Nut, 1/4-20	8	
6	<u>1017141</u>	Body Support Weldment	1	
7	<u>101855801</u>	Cable Retainer	1	
8	<u>102221201</u>	Wear Pad	2	
9	<u>102777601</u>	Fender, Driver Side	1	
10	<u>102777602</u>	Fender, Passenger Side	1	
11	<u>103698901</u>	Body, Rear, Cut, El, Red	A/R	
12	<u>103698903</u>	Body, Rear, Cut, El, Grn	A/R	
13	<u>103698904</u>	Body, Rear, Cut, El, Cl Blue	A/R	
14	<u>103698906</u>	Body, Rear, Cut, El, Black	A/R	
15	<u>103698907</u>	Body, Rear, Cut, El, White	A/R	
16	<u>103698908</u>	Body, Rear, Cut, El, Dk Gray	A/R	
17	<u>103698909</u>	Body, Rear, Cut, El, Beige	A/R	
18	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4	
19	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	6	
20	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4	
21	<u>8251</u>	Screw, 1/4-20 X 1.0 Truss-Head Machine	4	
Note: For current and available color options contact your local Club Car dealer or distributor.				

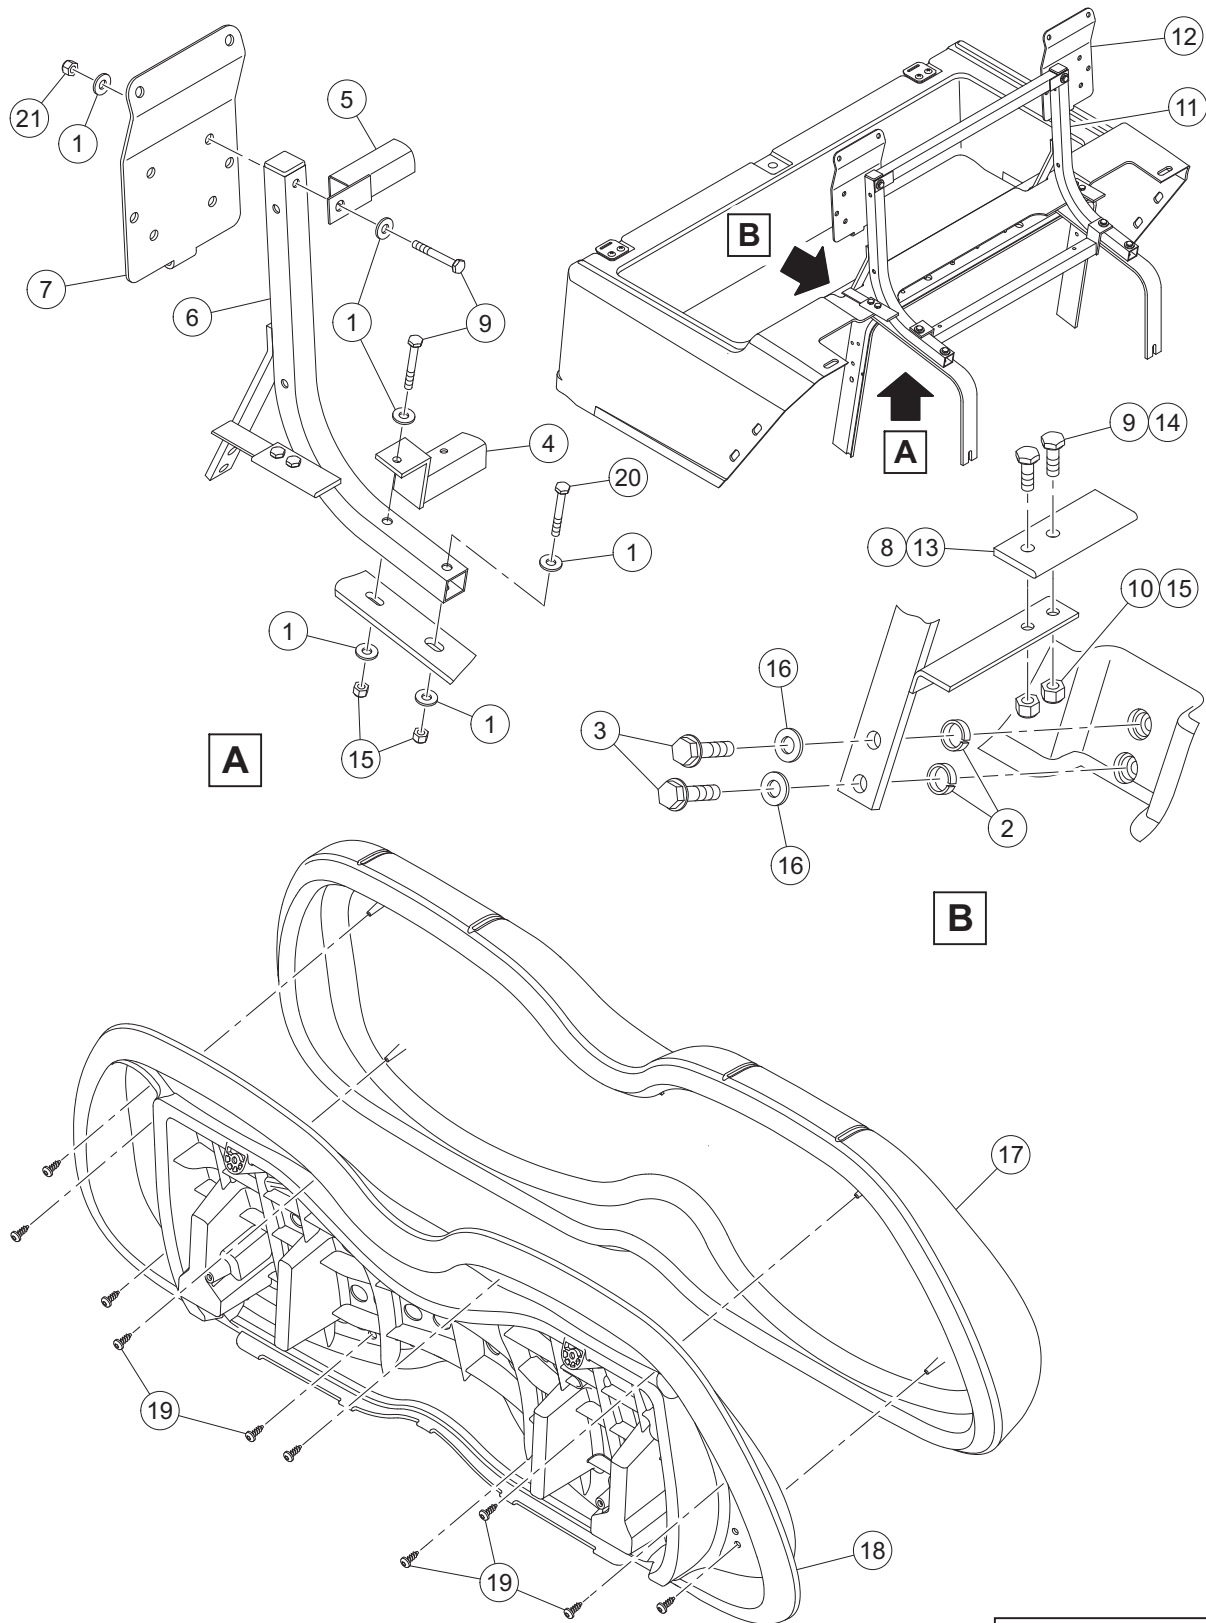1**G****E**

G-140699-000040


FWD SEAT BACK AND STRUCTURE

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1011931</u>	Washer, 1/4 Flat	4	
2	<u>1017774</u>	Body Spacer	4	
3	<u>101910401</u>	Screw, 5/16-18 X 1.25 Thrd Frm	4	
4	<u>102796101</u>	Weldment, Bed Support	1	
5	<u>102816201</u>	Seat Support, Cross Brace	1	
6	<u>102913101</u>	Seat Support W/striker, Drv (includes items 7 through 10)	1	
7	<u>102796301</u>	Seat Support, Driver-Side	1	
8	<u>102840301</u>	Striker Plate	1	
9	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2	
10	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2	
11	<u>102913102</u>	Support, Seat, Right (passenger) (includes items 12 through 15)	1	
12	<u>102796302</u>	Seat Support, Passenger-Side	1	
13	<u>102840301</u>	Striker Plate	1	
14	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2	
15	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2	
16	<u>1241</u>	Washer, 5/16 Type A Flat	4	
17	47720336009	Asm, Seatback, Gray, Service (includes items 18 and 19)	1	
18	103852901	Pan, Seatback W/holes, Prec	1	
19	47729995001	Screw, Tx Flange Hd Pt, M6x18	10	
20	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	6	
21	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	6	

1

G


E

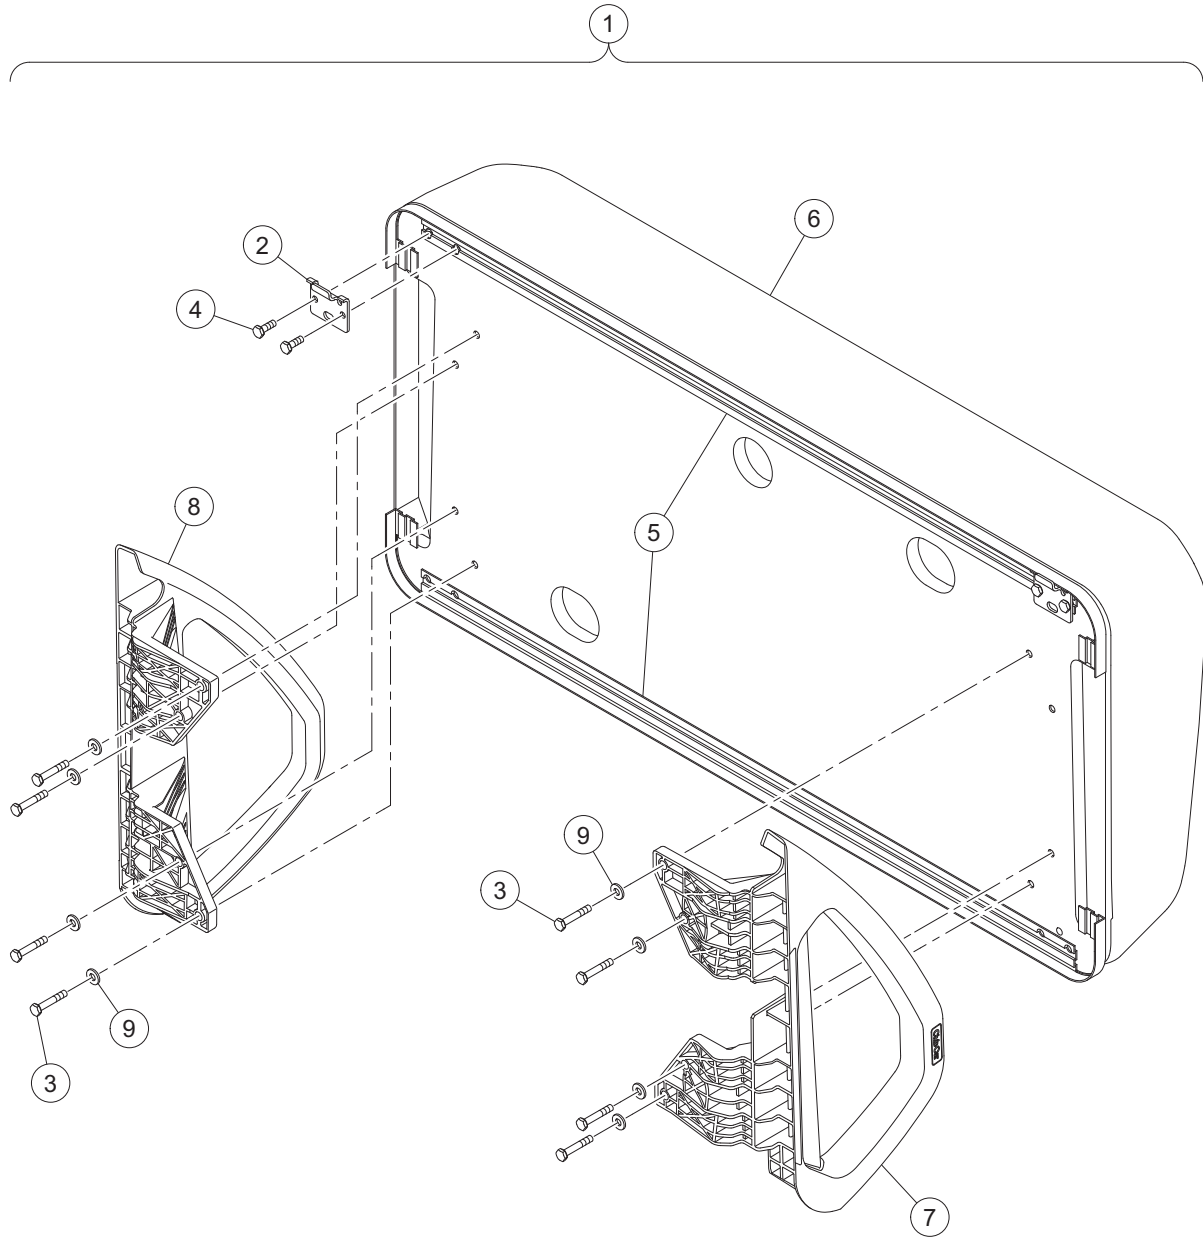

G-140699-000039

FRONT SEAT BOTTOM AND ARMRESTS

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	101998011	Seat Assy Ds, Prec Gray (includes items 2 through 9)	1	
2	<u>1011652</u>	Hinge Plate	2	
3	1016916	Screw, 1/4-20 X 1.50 Hex-Head Cap	4	
4	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4	
5	<u>101998501</u>	Gasket, Seat	2	
6	102174208	Seat Assembly Prec Gray	1	
7	<u>103246701</u>	Hip Restraint, Drvr Side	1	
8	<u>103246801</u>	Hip Restraint, Pass Side	1	
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	8	

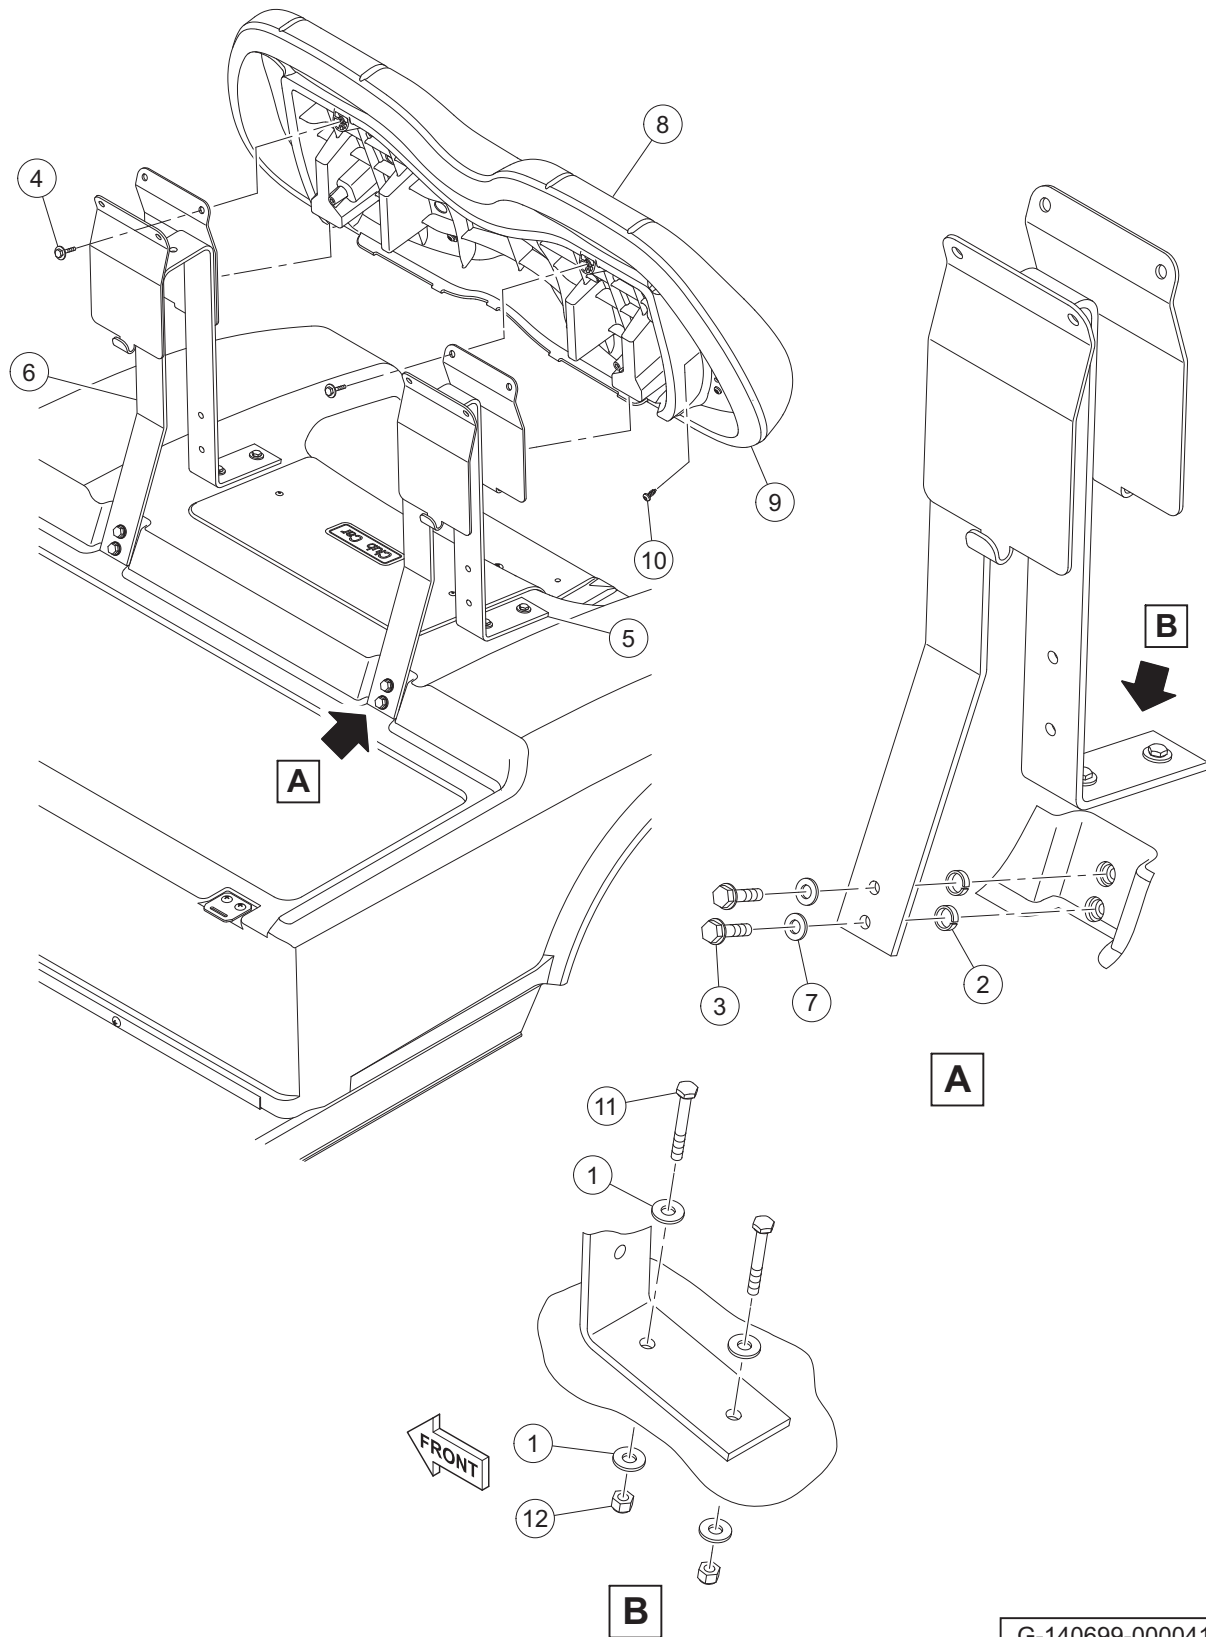1**G****E**

G-140699-000041


REAR SEAT BACK AND STRUCTURE

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>1011931</u>	Washer, 1/4 Flat	4	
2	<u>1017774</u>	Body Spacer	4	
3	<u>101910401</u>	Screw, 5/16-18 X 1.25 Thrd Frm	4	
4	<u>102296530</u>	Screw - M6 X 1.0 X 30 Sems	2	
5	<u>103378301</u>	Weldment, Bracket, Seat, Fd Rh	1	
6	<u>103378302</u>	Weldment, Bracket, Seat, Fd Lh	1	
7	<u>1241</u>	Washer, 5/16 Type A Flat	4	
8	47720336010	Asm, Seatback, Black, Service (includes items 9 and 10)	1	
9	103852901	Pan, Seatback W/holes, Prec	1	
10	47729995001	Screw, Tx Flange Hd Pt, M6x18	4	
11	<u>7311</u>	Screw, 1/4-20 X 2.00 Hex-Head Cap	4	
12	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4	

1

G



E

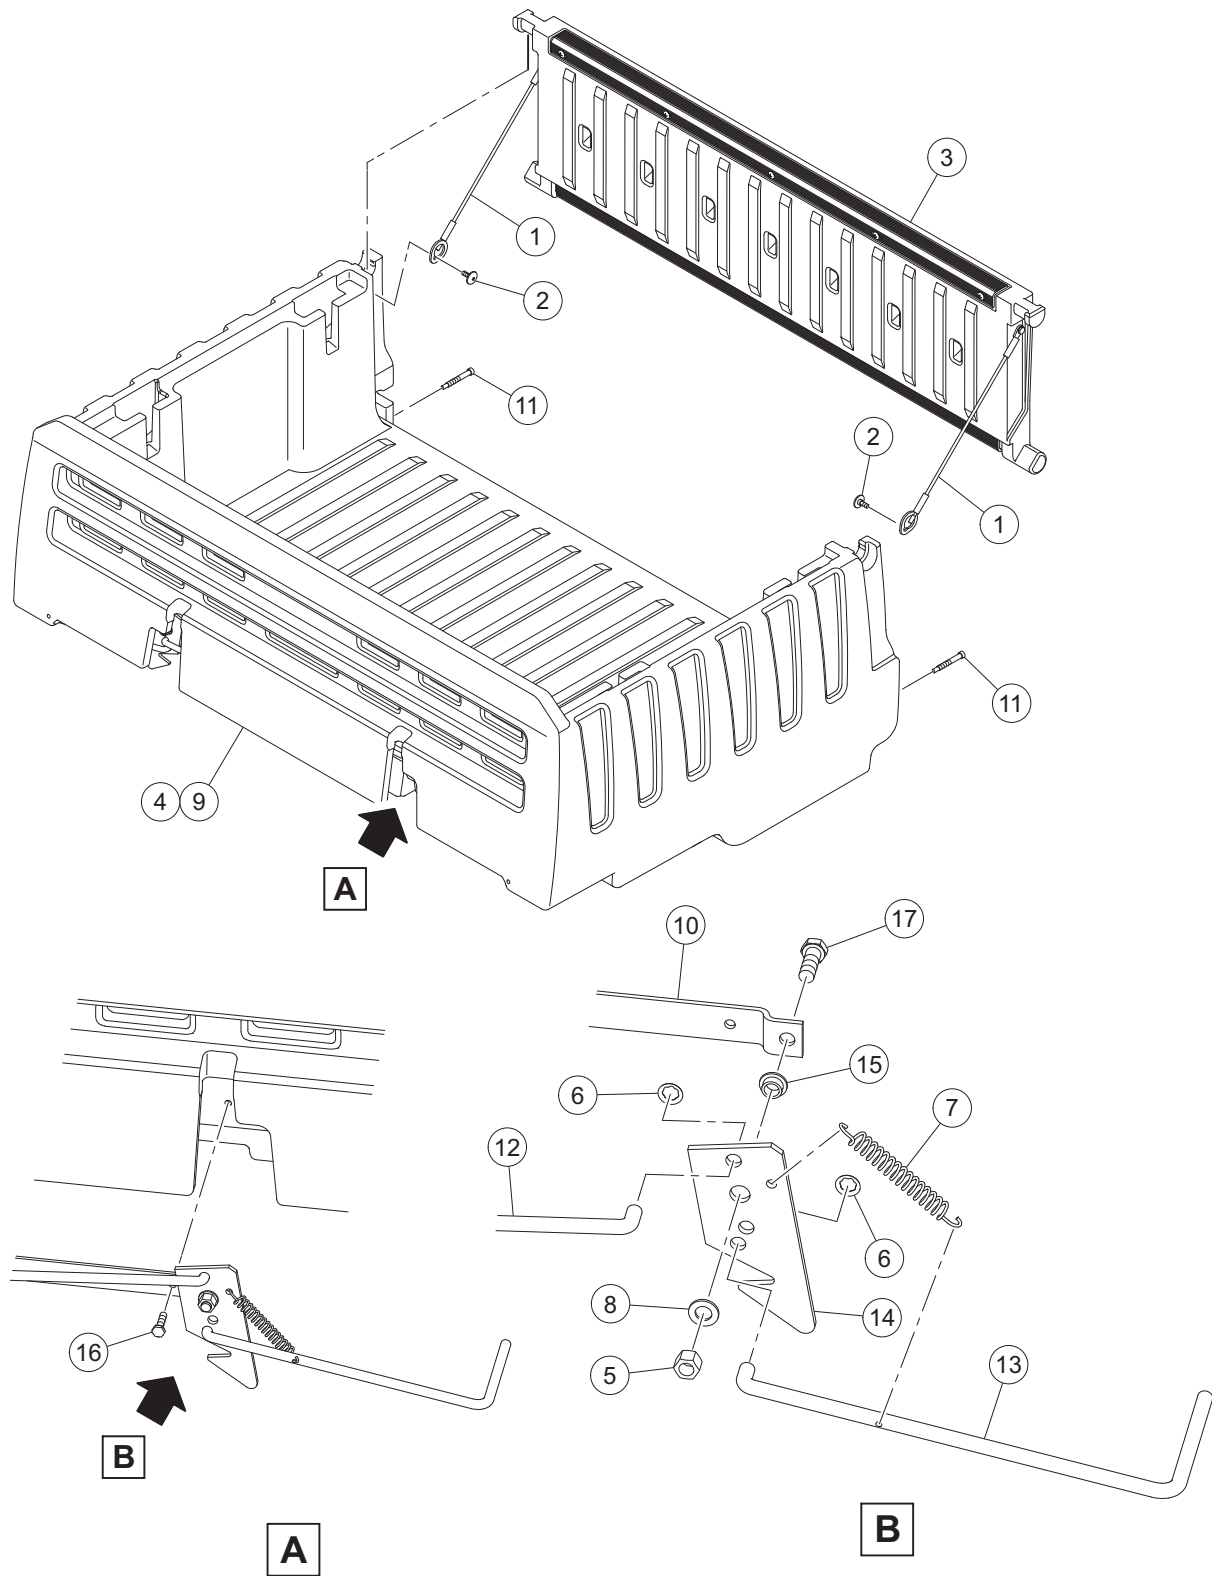

G-140399-000007

CARGO BED

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	<u>102779001</u>	Lanyard, Tailgate	2	
2	<u>102779401</u>	Bolt Lanyard	2	
3	<u>102779501</u>	Tailgate	1	
4	<u>103189901</u>	Bed Assembly (includes items 5 through 17)	1	
5	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2	
6	<u>1013876</u>	Pushnut, 3/8	4	
7	<u>1015391</u>	Extension, Spring Latch	2	
8	N/A	Washer, 3/8 Flat Type A	2	
9	N/A	Bed	1	
10	<u>102778901</u>	Support, Latch Link	1	
11	N/A	Pin, Support	2	
12	<u>102779201</u>	Rod, Long Link	1	
13	<u>102779301</u>	Rod, Bed Lift, Short Bent	2	
14	<u>102779601</u>	Catch, Tilt Bed	2	
15	<u>102830701</u>	Bearing, Bronze, 1/2x9/32	2	
16	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	2	
17	320	Screw, 3/8-16 X 1.00 Hex-Head Cap	1	

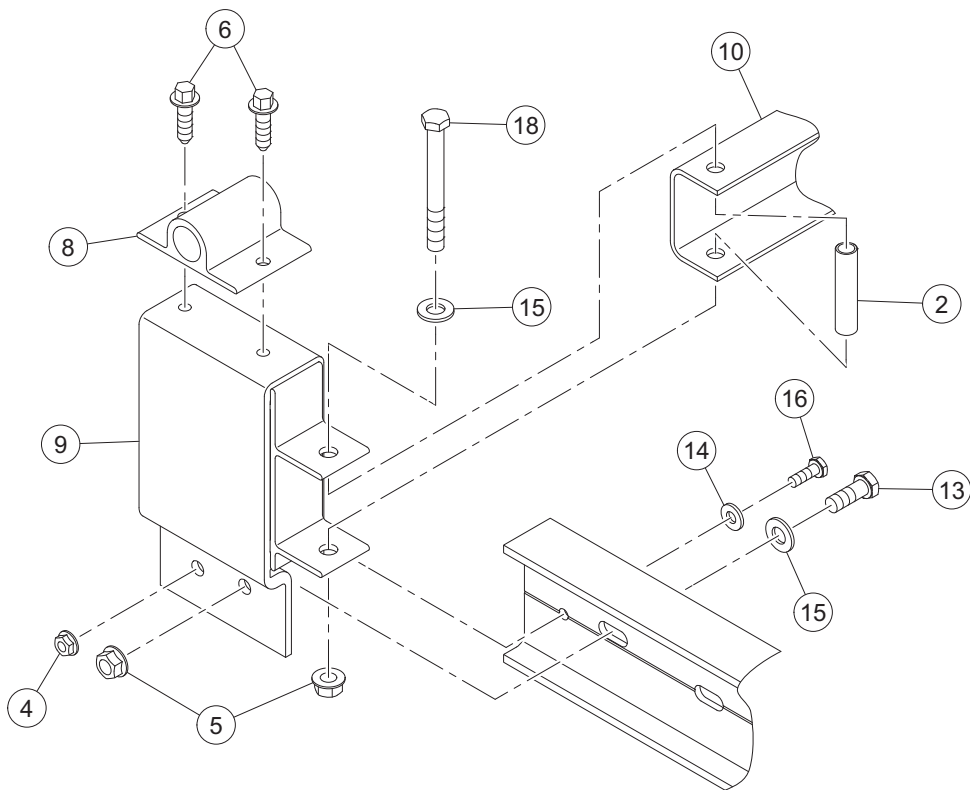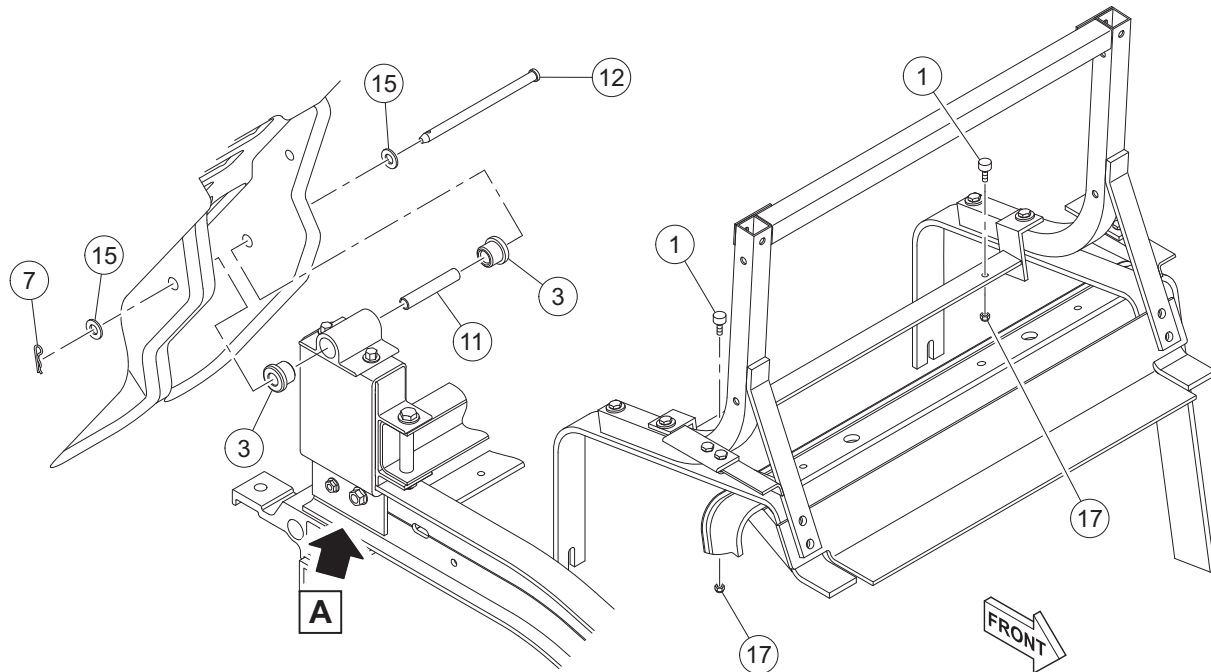1**G****E****A**

G-140399-000008



BED HINGE

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	<u>1010878</u>	Bumper, Rubber	2			
2	<u>1012303</u>	Bushing, Steel	2			
3	<u>1015583</u>	Bushing, Urethane	4			
4	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	2			
5	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4			
6	<u>102289001</u>	Screw, M8X1.25X30, Hex	4			
7	<u>102289301</u>	Rue Ring - 1/2"	2			
8	<u>102797201</u>	Hinge, Roto Bed	2			
9	<u>102820301</u>	Support, Hinge	2			
10	<u>102820501</u>	Stiffener, Bed Support	1			
11	<u>102821101</u>	Bushing, Steel	2			
12	<u>102823201</u>	Pin, Clevis, 3/8	2			
13	<u>320</u>	Screw, 3/8-16 X 1.00 Hex-Head Cap	2			
14	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2			
15	<u>334</u>	Washer, 3/8, Type A, Flat	8			
16	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2			
17	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2			
18	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2			

1

G

E

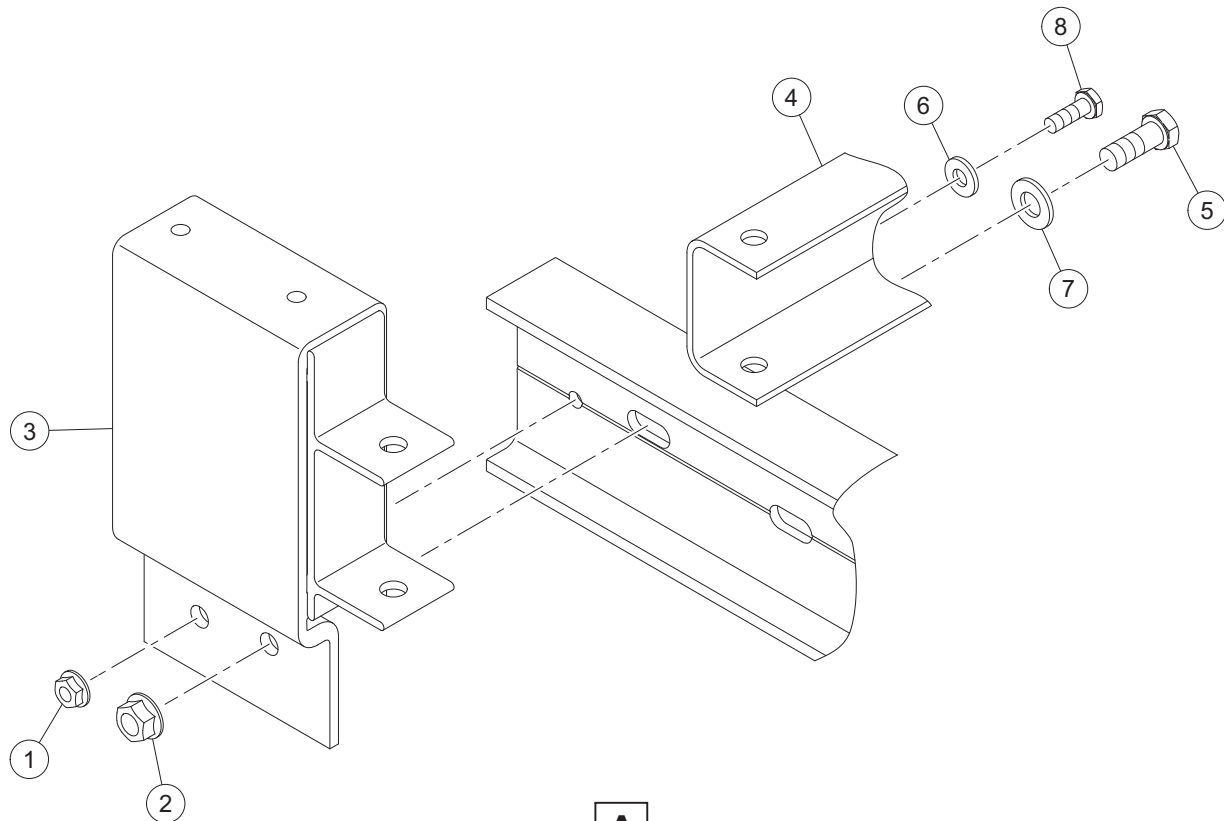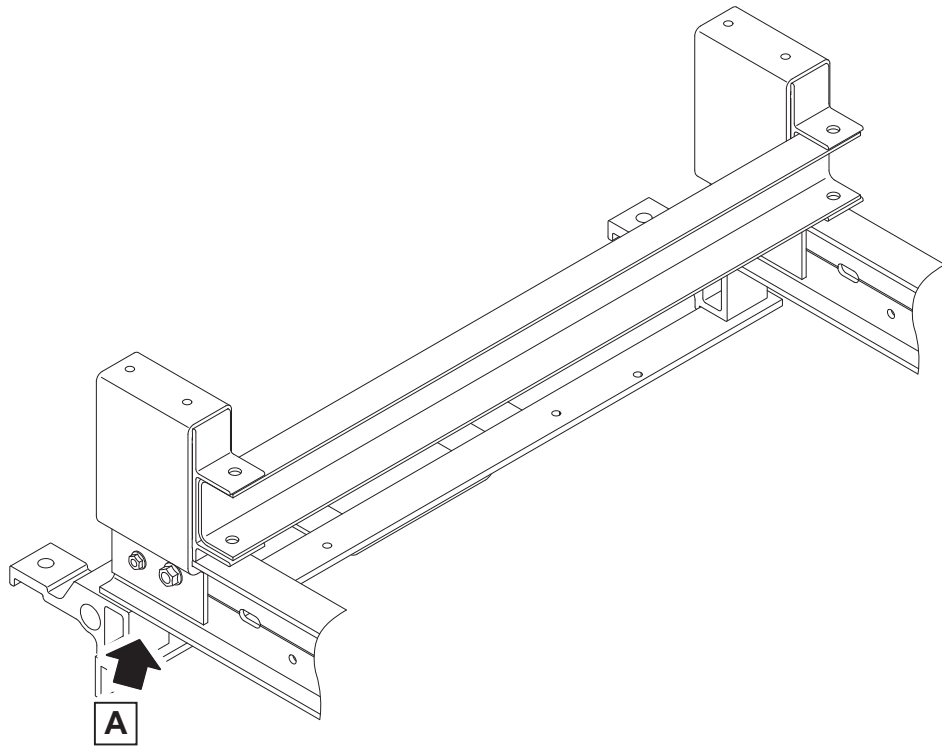


A

G-140399-000009

FOLD DOWN SEAT HINGE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	2
2	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	2
3	<u>102820301</u>	Support, Hinge	2
4	<u>102820501</u>	Stiffener, Bed Support	1
5	320	Screw, 3/8-16 X 1.00 Hex-Head Cap	2
6	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
7	<u>334</u>	Washer, 3/8, Type A, Flat	2
8	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2

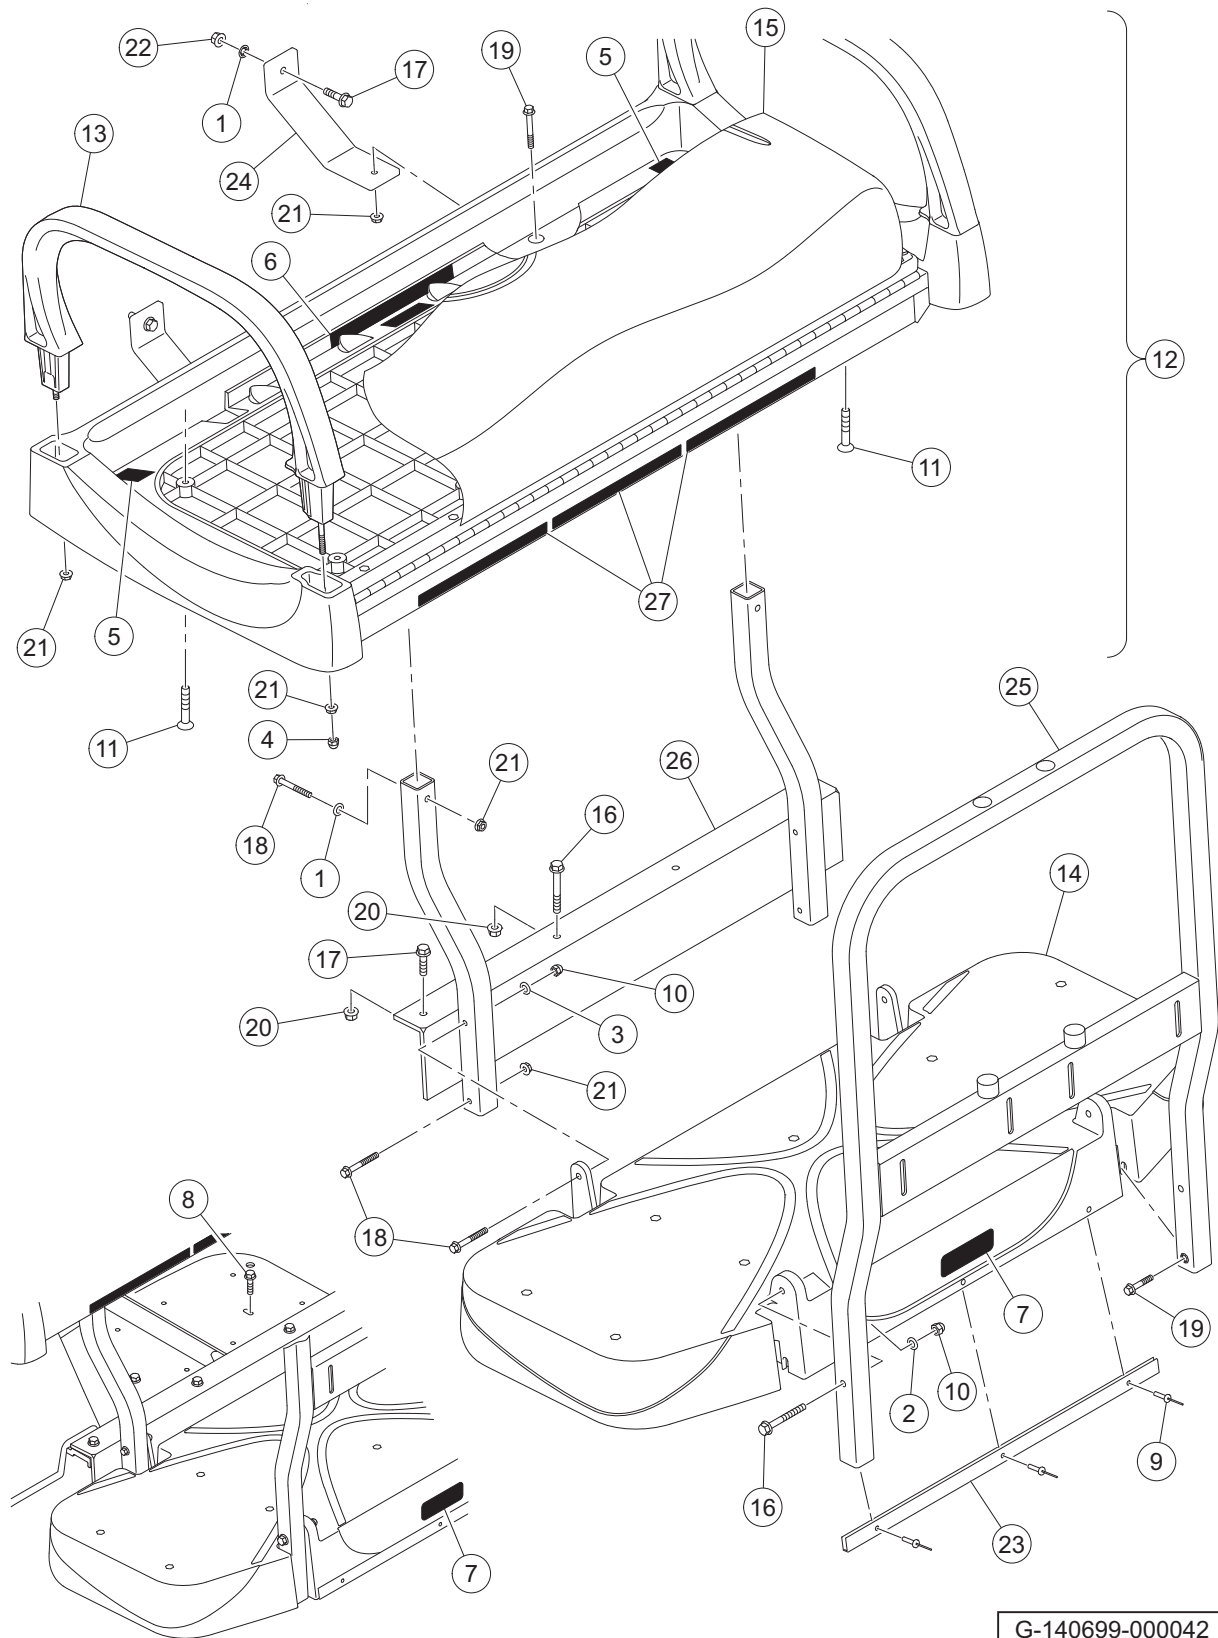1**G****E**

G-140699-000042

REAR-FACING SEAT FRAME AND FOOT DECK

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011578</u>	Washer, 5/16 Type B Flat	2
2	<u>1011697</u>	Washer, 5/16 Flat	2
3	<u>1011931</u>	Washer, 1/4 Flat	2
4	<u>1015091</u>	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	4
5	<u>101609401</u>	Decal, Crush Area Warning	3
6	<u>101972001</u>	Decal, D.s. Box Bed Warning (for vehicles with bed box option)	1
7	<u>102278802</u>	Decal, Club Car, Silver	1
8	<u>102298720</u>	Screw, M8-1.25x20, Taptite	2
9	<u>102828701</u>	Rivet, Alum, 3/16"	3
10	<u>103245301</u>	Nut, Hex, Cp, Mech Def, 5/16-18	2
11	<u>47563307001</u>	Screw, Flthd, 1/4-20x1.50, Ss	10
12	<u>47564782001</u>	Assy, Seat Base, Dmd, Mx5	1
13	<u>47564783001</u>	Arm Rest, Mx5	2
14	<u>47564784001</u>	Assy, Foot Rest, Mx5	1
15	<u>47564887024</u>	Asm, Seat Bottom, Rear, Gray, Service Replacement	1
16	<u>47568672001</u>	Bolt, 5/16-18x2.5 Hx Flg Zn G8	4
17	<u>47568673001</u>	Bolt, 5/16-18x1.25 Hx Flg Zn G5	4
18	<u>47568674001</u>	Bolt, 1/4-20x2.0 Hx Flg Zn G5	6
19	<u>47568674002</u>	Bolt, 1/4-20x1.25 Hx Flg Zn G5	4
20	<u>47568675001</u>	Nut, 5/16-18 Hx Flg Zn Nyloc	6
21	<u>47568676001</u>	Nut, 1/4-20 Hx Flg Zn Nyloc	10
22	<u>47568677001</u>	Nut, 5/16, Push, Ps	2
23	<u>47581051001</u>	Stiffener, Foot Rest, Mx5	1
24	<u>47582894002</u>	Bracket, Seat Mount, Coated	2
25	N/A	Asm, Grab Bar, Rear	1
26	N/A	Asm, Weldment, Bumper Mount	1
27	<u>SVP370901</u>	Asm, Decal, Warn 800 850 Prec (includes items 28 through 30)	1
28	<u>SVP370601</u>	Decal, Warn 800 850 Prec Fld L	A/R
29	<u>SVP370701</u>	Decal, Warn 800 850 Prec Fld M	A/R
30	<u>SVP370801</u>	Decal, Warn 800 850 Prec Fld R	A/R
Note: Item 27 contains all three decals needed for the rear seat. Items 28, 29 and 30 are not illustrated.			

1
G
E

1

G



E

WHEELS AND TIRES

2

G

E

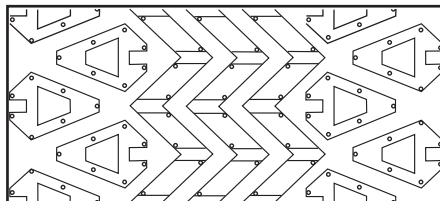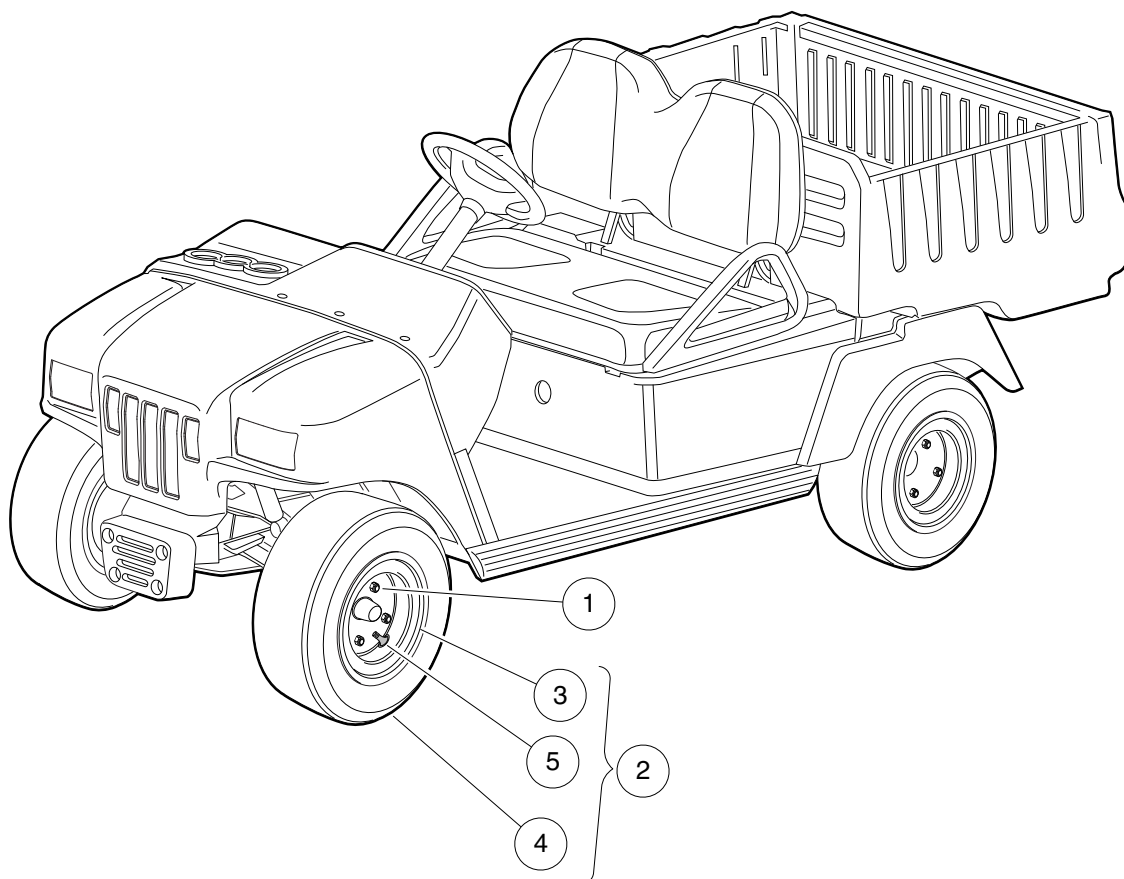

000224-002


WHEELS AND TIRES

ITEM	PART NO.	DESCRIPTION	QTY	2
		1 2 3 4		G
1	<u>1010984</u>	.500-20 Unf Lug Nut	16	E
2	<u>102819101</u>	Tire Assembly, All Trail II (includes items 3 through 5)	4	
3	<u>102815801</u>	Wheel Rim, Gray	1	
4	<u>102815901</u>	Tire, Unmounted, All Trail II	1	
5	<u>7310</u>	Valve Stem, Black Plastic	1	

2

G

E

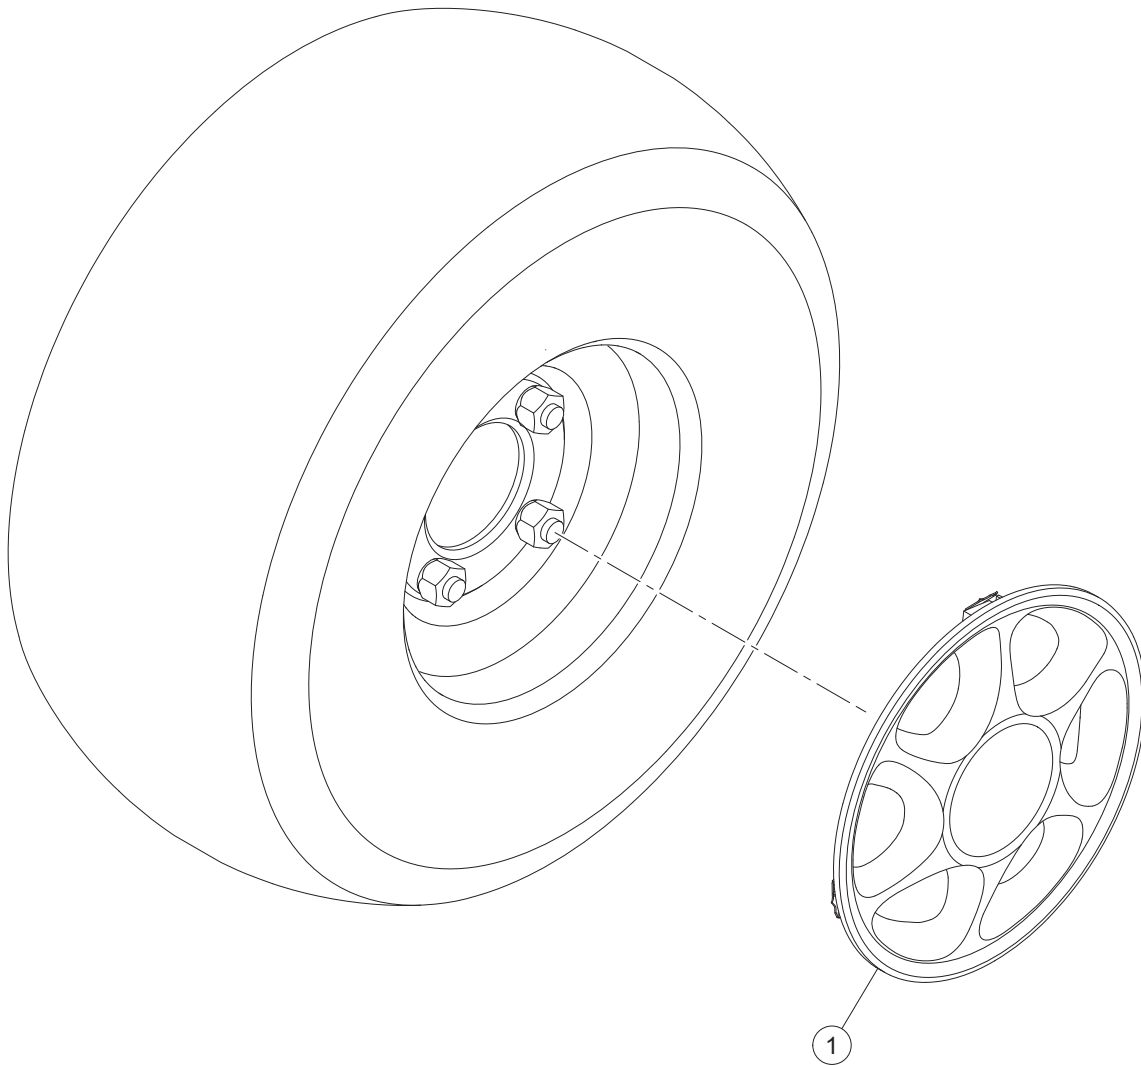

000318-002

HUBCAP

ITEM	PART NO.	DESCRIPTION	QTY	2 G E
1	<u>102861401</u>	1 2 3 4 Wheel Cover, Chrome Elite	4	

2

G

E

LOGO AND DECALS

3



G

E

3

G

E

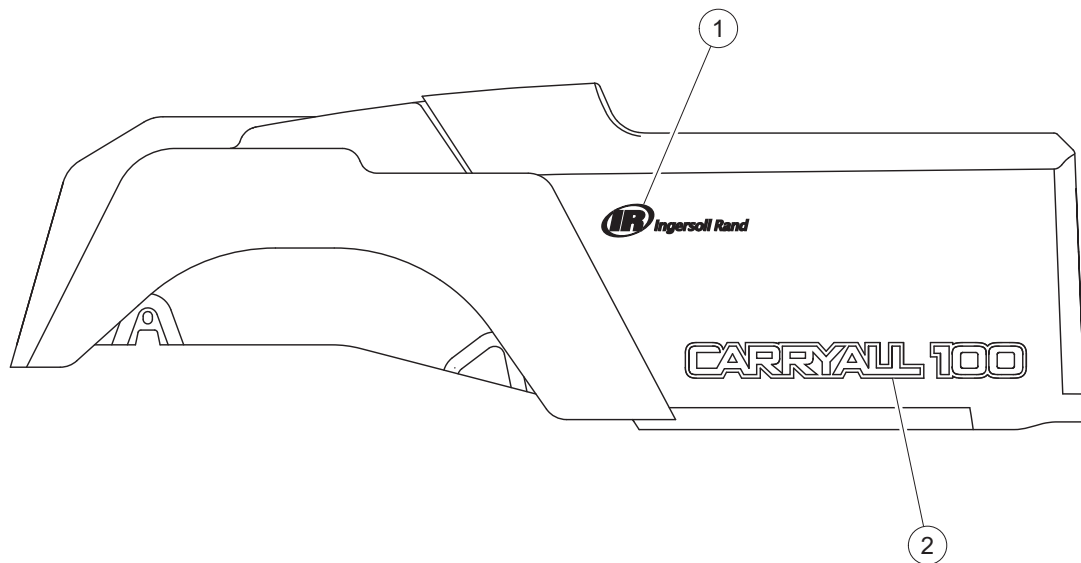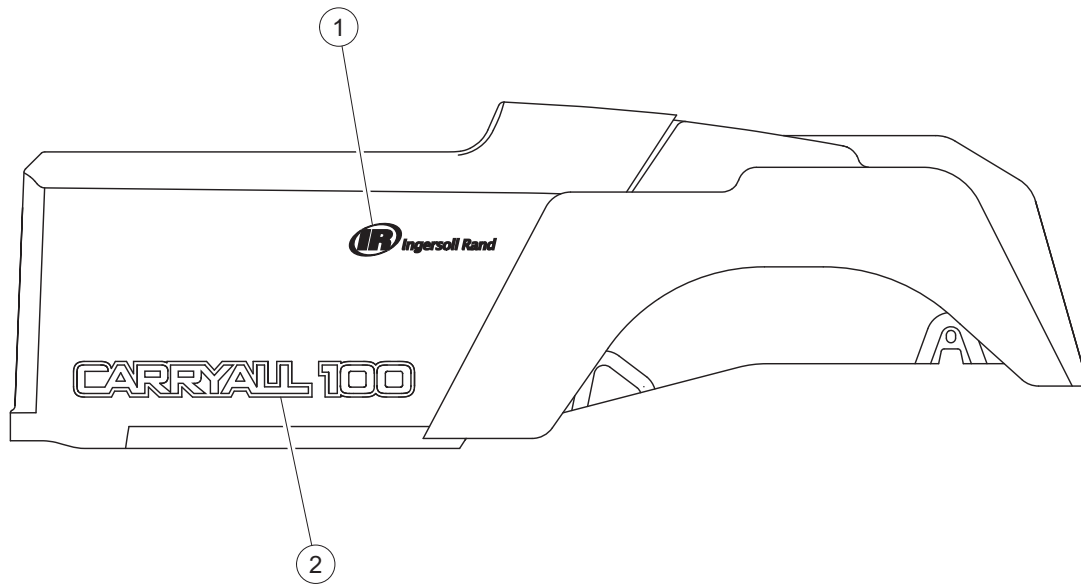

G-160299-000003

LOGO DECALS

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>103234303</u>	1 2 3 4 Decal, Badge, Ir Black	2
2	<u>105199601</u>	Decal,†carryall†100	2

3


G

E

3

G

E

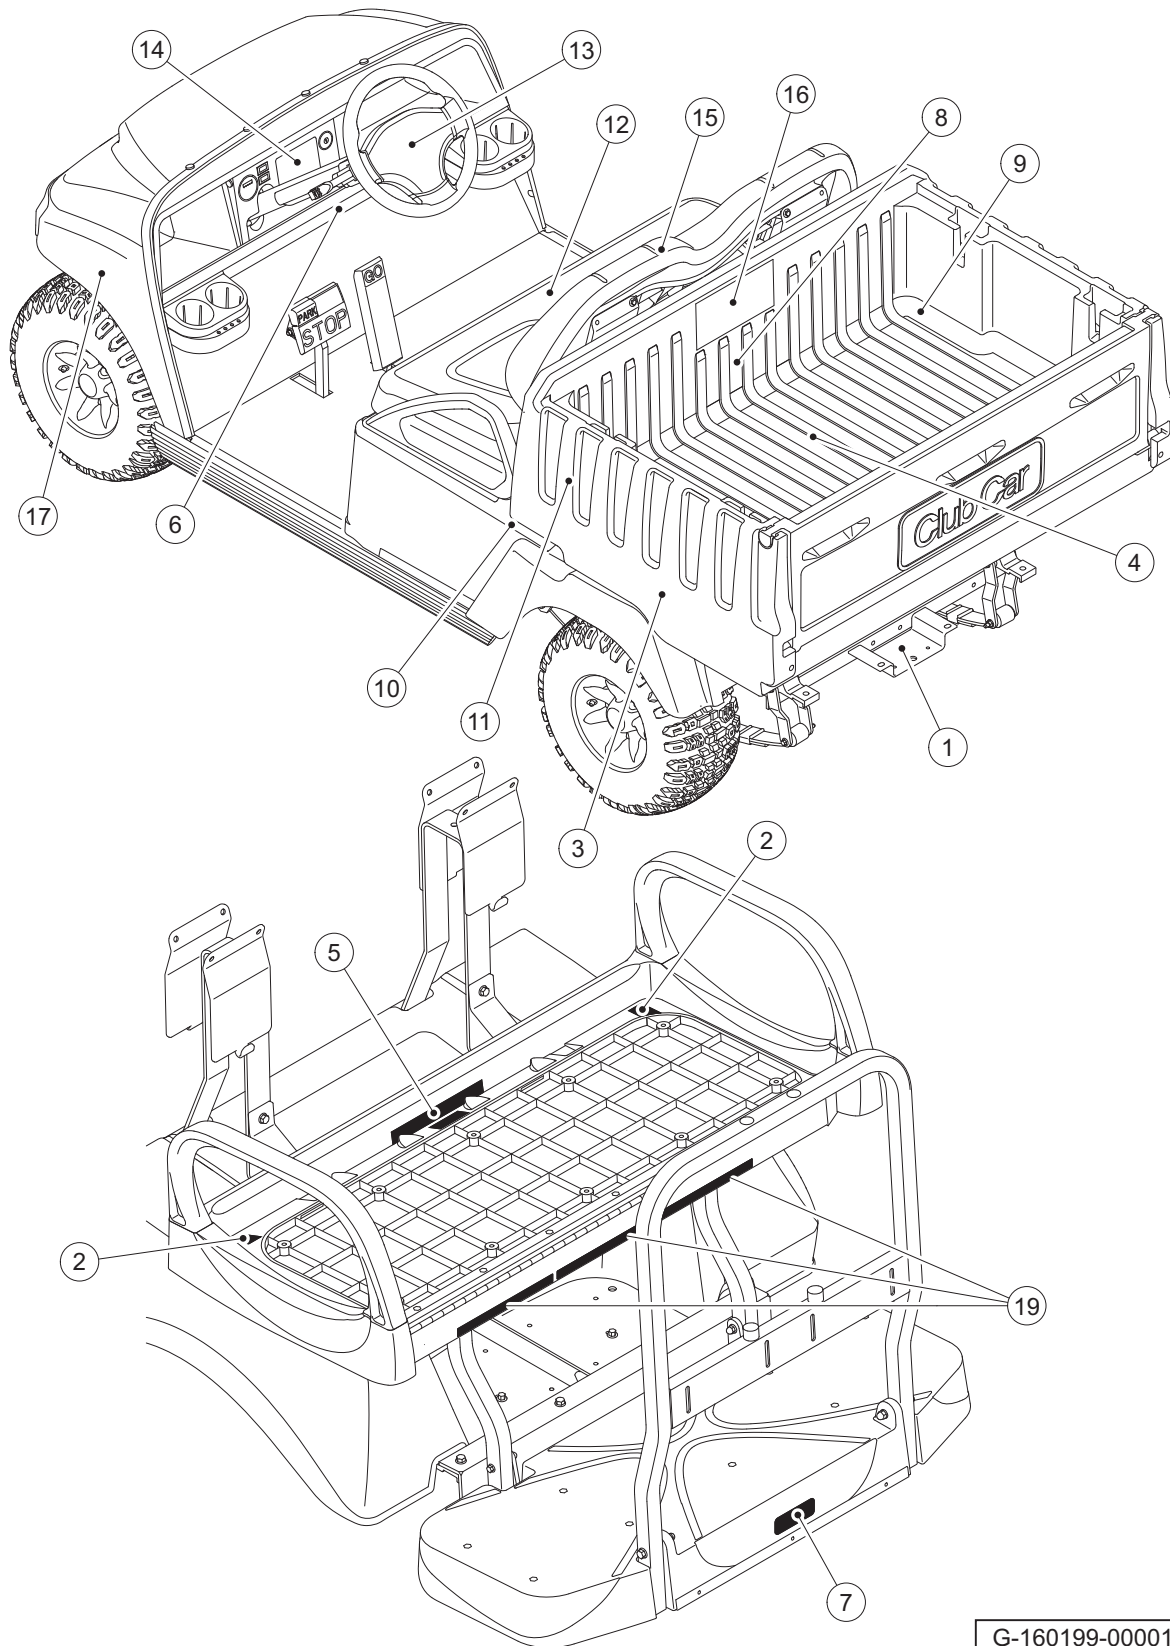

G-160199-000019

SAFETY DECALS – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101155301	Decal, Trailer Hitch Weight	1
2	101609401	Decal, Crush Area Warning	3
3	101915201	Decal, Frame Ground and Governor Warning	1
4	101960501	Decal, Rotating Parts/Hot Manifold	1
5	101972001	Decal, D.s. Box Bed Warning (for vehicles with bed box option)	1
6	102075801	Decal, Young Driver Warning	1
7	102278802	Decal, Club Car, Silver	1
8	102458901	Decal, Hot Surface Warning	1
9	102831901	Decal, Crush Warning, Driver-Side	1
10	102832001	Decal, Crush Warning, Passenger-Side	1
11	102833301	Decal, Maintenance	1
12	103205501	Decal, Maintenance/Operate Switch	1
13	103783002	Decal, Op Instr, Gas Ps	1
14	103961601	Decal, Warn, Rollover, Ds Utl	1
15	105082301	Decal, Warn, Gas Pressure	1
16	105137107	Decal, Vehicle Load, Xrt800	1
17	105153301	Decal, Efi, Italic, Lh	1
18	105153302	Decal, Efi, Italic, Rh	1
19	SVP370901	Asm, Decal, Warn 800 850 Prec (includes items 20 through 22)	1
20	SVP370601	Decal, Warn 800 850 Prec Fld L	A/R
21	SVP370701	Decal, Warn 800 850 Prec Fld M	A/R
22	SVP370801	Decal, Warn 800 850 Prec Fld R	A/R
Note: Item 18 (RH) is not illustrated and is opposite of item 17 (LH). Item 19 contains all three decals (not illustrated) needed for the rear seat.			

3


G

E

3

G

E

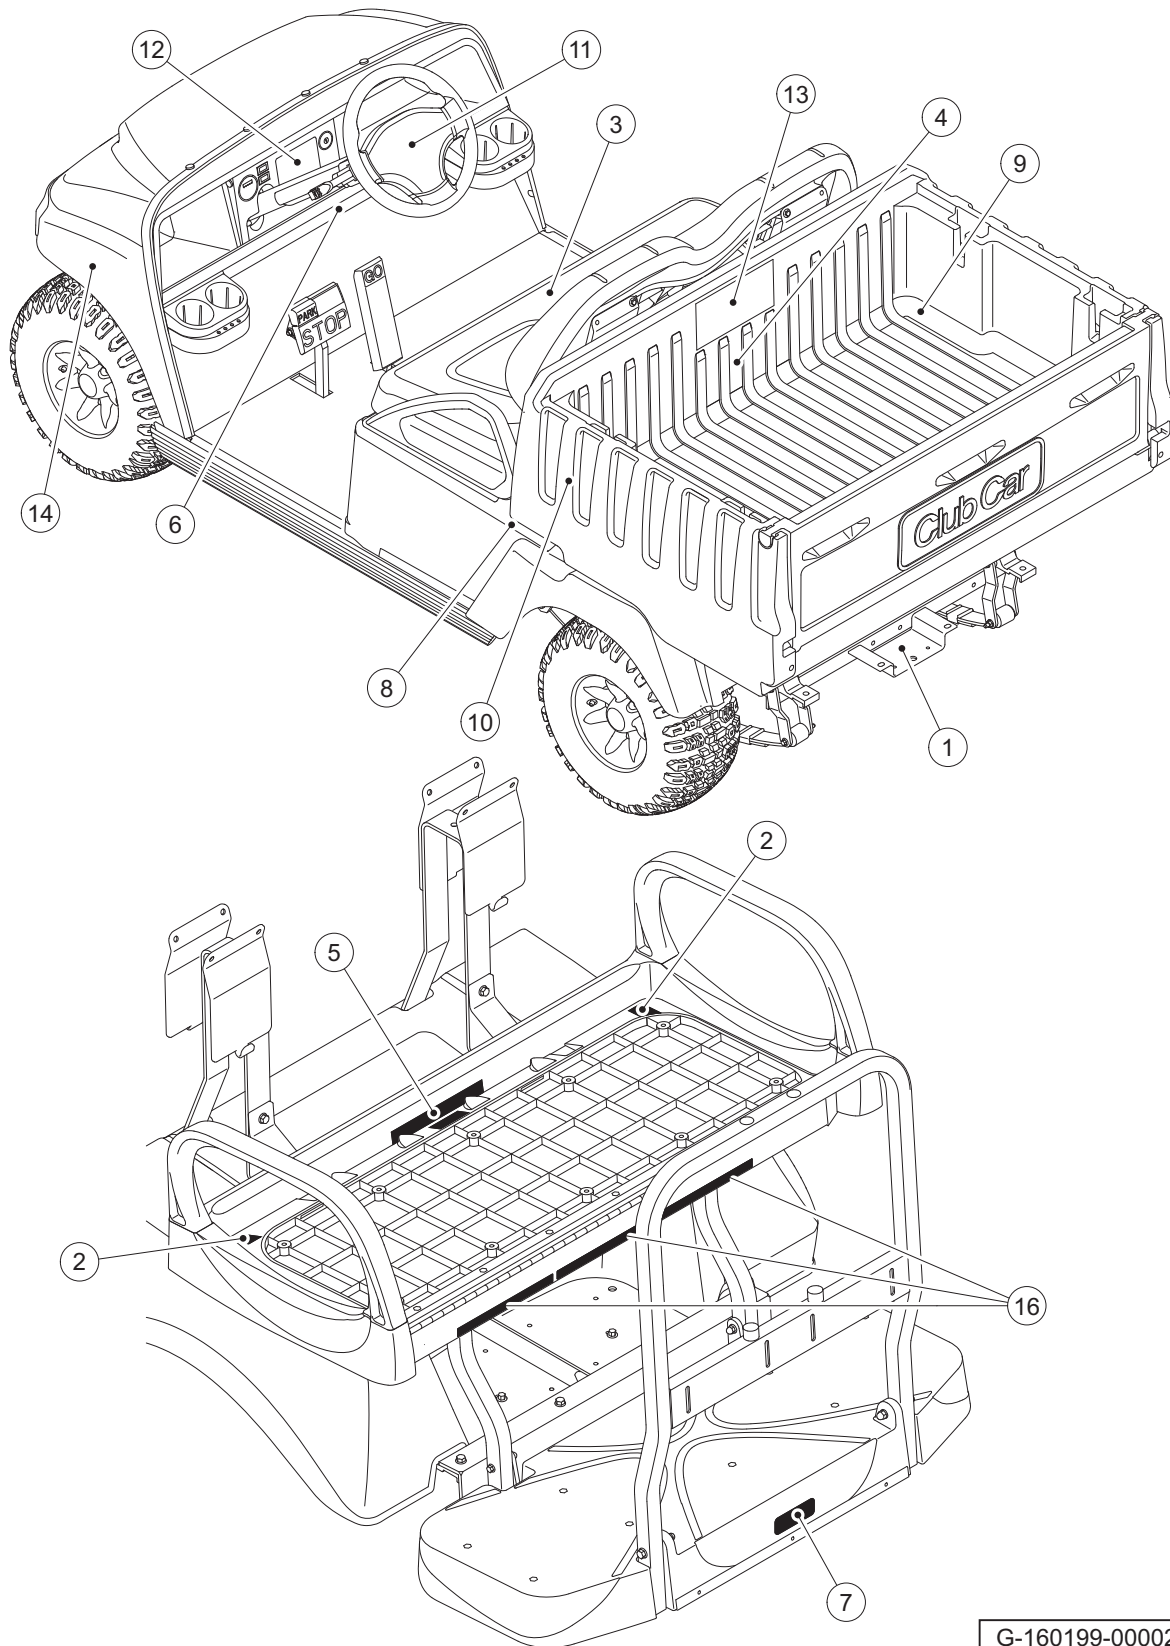

G-160199-000020

SAFETY DECALS – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	101155301	Decal, Trailer Hitch Weight	1	
2	101609401	Decal, Crush Area Warning	3	
3	101908601	Decal, Tow/Run Switch Warning	1	
4	101931501	Decal, Component Cover	1	
5	101972001	Decal, D.s. Box Bed Warning (for vehicles with bed box option)	1	
6	102075801	Decal, Young Driver Warning	1	
7	102278802	Decal, Club Car, Silver	1	
8	102831901	Decal, Crush Warning, Driver-Side	1	
9	102832001	Decal, Crush Warning, Passenger-Side	1	
10	102833301	Decal, Maintenance	1	
11	103783001	Decal, Op Instr, Ele	1	
12	103961601	Decal, Warn, Rollover, Ds Utl	1	
13	105137107	Decal, Vehicle Load, Xrt800	1	
14	105153201	Decal, Zero Emission Vhcle, Lh	1	
15	105153202	Decal, Zero Emission Vhcle, Rh	1	
16	SVP370901	Asm, Decal, Warn 800 850 Prec (includes items 17 through 19)	1	
17	SVP370601	Decal, Warn 800 850 Prec Fld L	A/R	
18	SVP370701	Decal, Warn 800 850 Prec Fld M	A/R	
19	SVP370801	Decal, Warn 800 850 Prec Fld R	A/R	
Note: Item 15 (RH) is not illustrated and is opposite of item 14 (LH). Item 16 contains all three decals (not illustrated) needed for the rear seat.				

3

G


E

LIGHTS, CONTROLS, AND INDICATORS

4

G

E








HEADLIGHTS

ITEM	PART NO.	DESCRIPTION	QTY	4	G	E
		1 2 3 4				
1	<u>101988001</u>	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	1			
2	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2			
3	<u>1016880</u>	Headlight Bezel, Left	1			
4	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2			
5	<u>1017062</u>	Turn Signal Lens Assy	1			
6	<u>1017064</u>	Mounting Bracket	2			
7	<u>1017065</u>	Retainer, Headlight	1			
8	<u>101987901</u>	Connector, Harness Assembly, Headlight	1			
9	<u>101988101</u>	Bulb, Headlight	1			
10	<u>101988201</u>	Lens, Headlight	1			
11	<u>101988002</u>	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	1			
12	<u>1013461</u>	Screw, #10-16 Hex-Head Hi-Lo	2			
13	<u>1016879</u>	Headlight Bezel, Right	1			
14	<u>1017</u>	Nut, #10-24 Stainless-Steel Hex Machine	2			
15	<u>1017062</u>	Turn Signal Lens Assy	1			
16	<u>1017064</u>	Mounting Bracket	2			
17	<u>1017065</u>	Retainer, Headlight	1			
18	<u>101987901</u>	Connector, Harness Assembly, Headlight	1			
19	<u>101988101</u>	Bulb, Headlight	1			
20	<u>101988201</u>	Lens, Headlight	1			

4

G

E

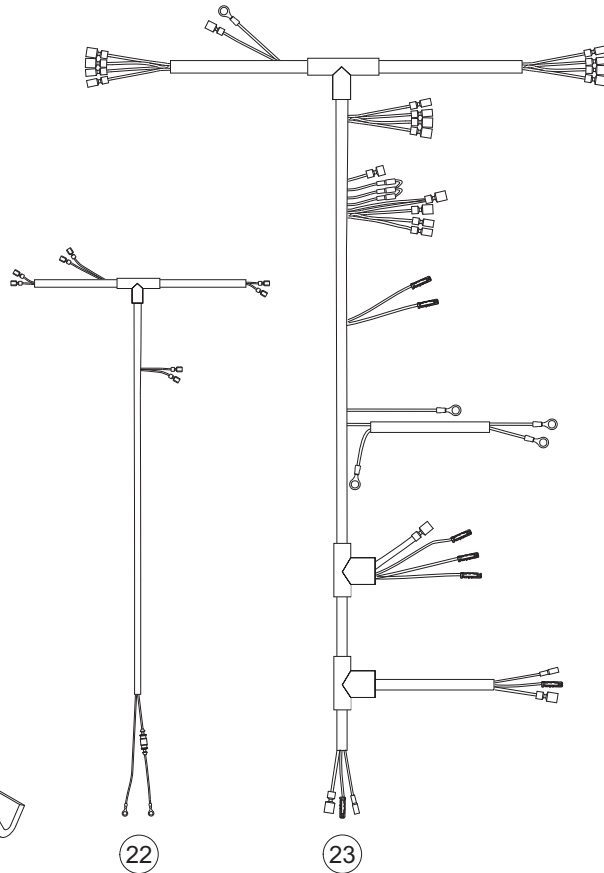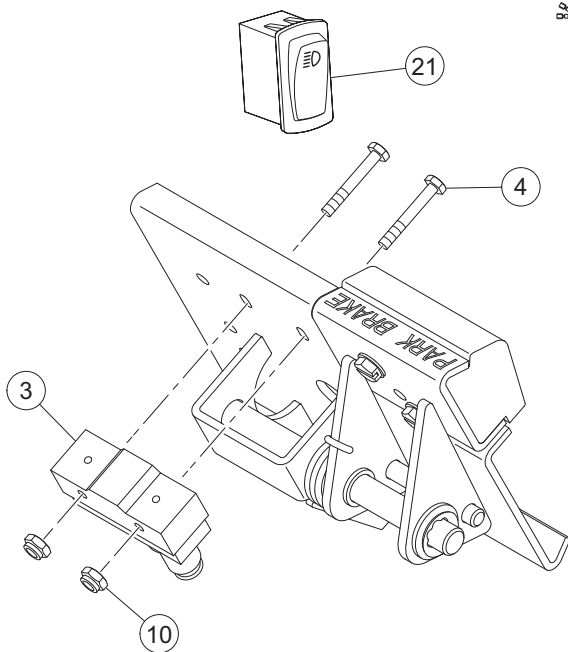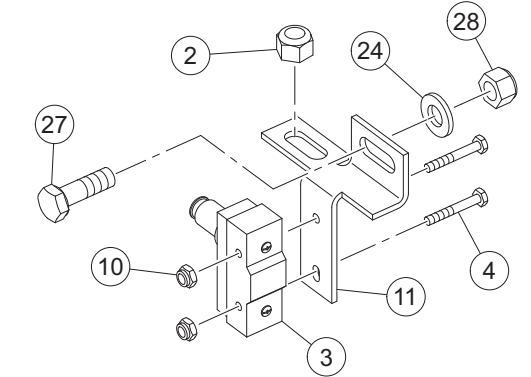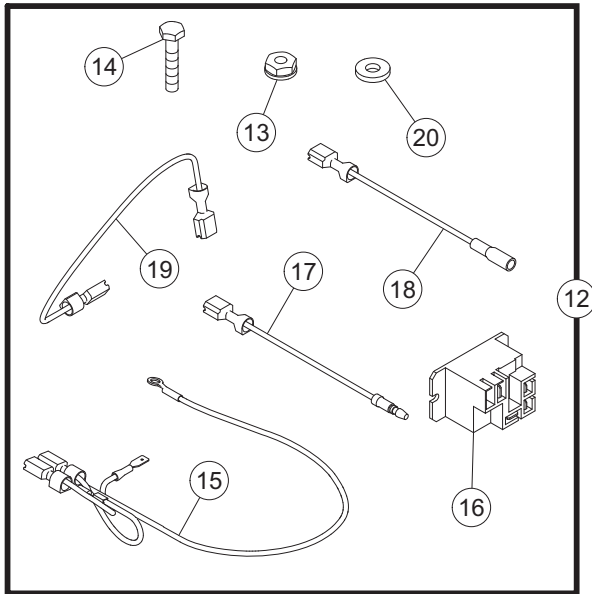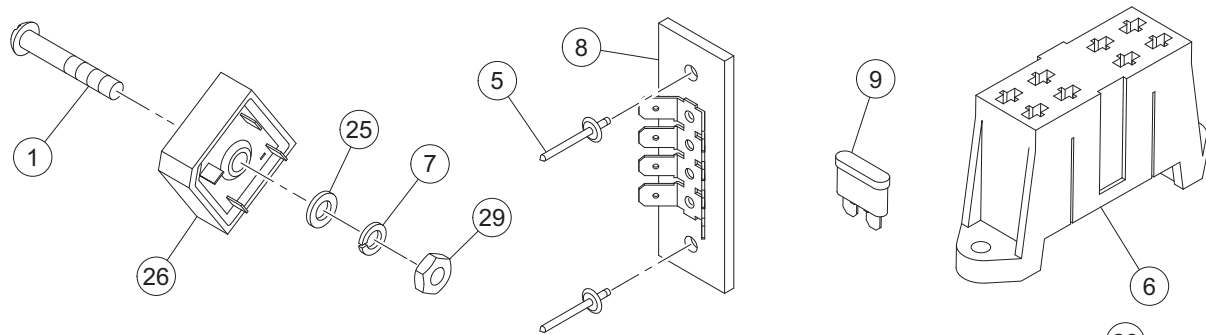

G-080299-000001

LIGHTING SYSTEM COMPONENTS – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010909</u>	Screw, #10-32 X 1.25 Rd Hd Mch	1
2	<u>1011280</u>	Locknut, 5/16-18	1
3	<u>1011439</u>	Switch, Limit	2
4	<u>1011557</u>	Screw, #6-32 X 1.00 Hex-Head Machine	4
5	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2
6	<u>1015741</u>	Fuse Block	1
7	<u>1016</u>	Lockwasher, #10 Split	1
8	<u>1016356</u>	Terminal Block with Insulator	1
9	<u>1016423</u>	Fuse, 20-Amp	3
10	<u>101932201</u>	Locknut, #6-32 Nylon	4
11	<u>101957101</u>	Bracket, Brake Light Switch	1
12	<u>102198701</u>	Brake Relay Kit - 12v (includes items 13 through 20)	1
13	<u>1011229</u>	Locknut, #6-32 Whiz	2
14	<u>1017853</u>	Screw, #6-32 X 0.75 Hex-Head Machine	2
15	<u>101914401</u>	Assembly, Voltage Suppressor	1
16	<u>102199001</u>	Relay, 12-Volt	1
17	<u>102199201</u>	Wire Asm #18 Brown	1
18	<u>102199301</u>	Wire Asm #18 Black	1
19	<u>102199401</u>	Wire Asm #18 Black	1
20	<u>7591</u>	Washer, #6, Flat	2
21	<u>102869401</u>	Switch, Rocker, Light	1
22	<u>103255601</u>	Wire Harness, Headlights-Only, CA, Gas	1
23	<u>103256901</u>	Wire Harness, Lighting, CA2	1
24	<u>1241</u>	Washer, 5/16 Type A Flat	1
25	<u>183</u>	Washer, #10, Type A, Flat	1
26	<u>47604303001</u>	Voltage Limiter, Gas	1
27	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1
28	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1
29	<u>7893</u>	Nut, #10-32 Hex	1
Note: Use item 22 for headlights only. NOTE 2: Use item 23 for headlights and taillights. NOTE 3: Items 22 and 23 are used in multiple applications.			

4


G

E

4

G

E

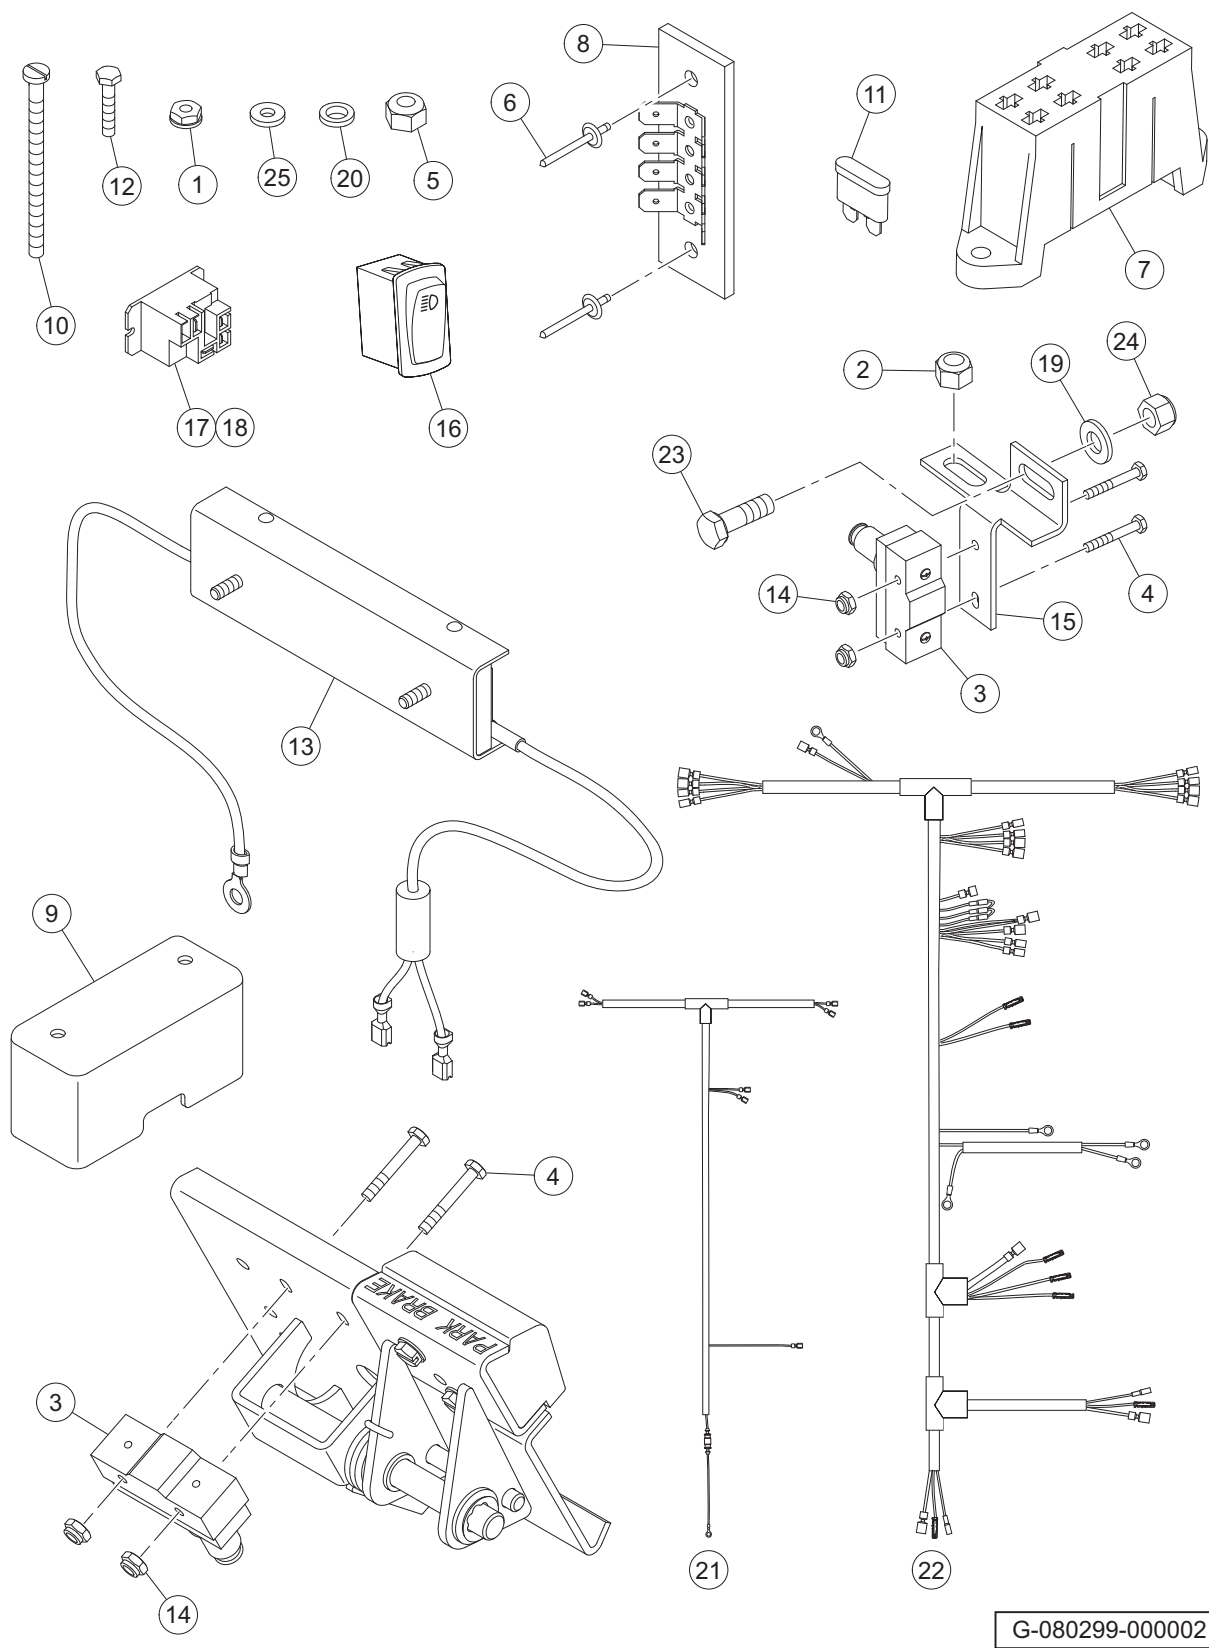

G-080299-000002


LIGHTING SYSTEM COMPONENTS – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011229</u>	Locknut, #6-32 Whiz	2
2	<u>1011280</u>	Locknut, 5/16-18	1
3	<u>1011439</u>	Switch, Limit	2
4	<u>1011557</u>	Screw, #6-32 X 1.00 Hex-Head Machine	4
5	<u>1012438</u>	Locknut, #10-24 Nylon Insert	2
6	<u>1013357</u>	Rivet, 5/32 Aluminum Pop	2
7	<u>1015741</u>	Fuse Block	1
8	<u>1016356</u>	Terminal Block with Insulator	1
9	<u>1016363</u>	Fuse Block Cover	1
10	<u>1016366</u>	Screw, #10-24 X 3.0 Pan-Head Machine	2
11	<u>1016423</u>	Fuse, 20-Amp	3
12	<u>1017853</u>	Screw, #6-32 X 0.75 Hex-Head Machine	2
13	<u>101810501</u>	Limiter, Voltage	1
14	<u>101932201</u>	Locknut, #6-32 Nylon	4
15	<u>101957101</u>	Bracket, Brake Light Switch	1
16	<u>102869401</u>	Switch, Rocker, Light	1
17	<u>103414901</u>	Kit, Relay, 48v 30a W/instr (includes item 18)	1
18	<u>103397901</u>	Relay, Spst No, 48v 30a, Pmt	1
19	<u>1241</u>	Washer, 5/16 Type A Flat	1
20	<u>183</u>	Washer, #10, Type A, Flat	4
21	<u>47564770001</u>	Harness, Headlight, Sb	1
22	<u>47564770001</u>	Harness, Lighting, Sb	1
23	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1
24	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1
25	<u>7591</u>	Washer, #6, Flat	2
Note: Use item 21 for headlights only. NOTE 2: Use item 22 for headlights and taillights. NOTE 3: Items 21 and 22 are used in multiple applications.			

4

G

E

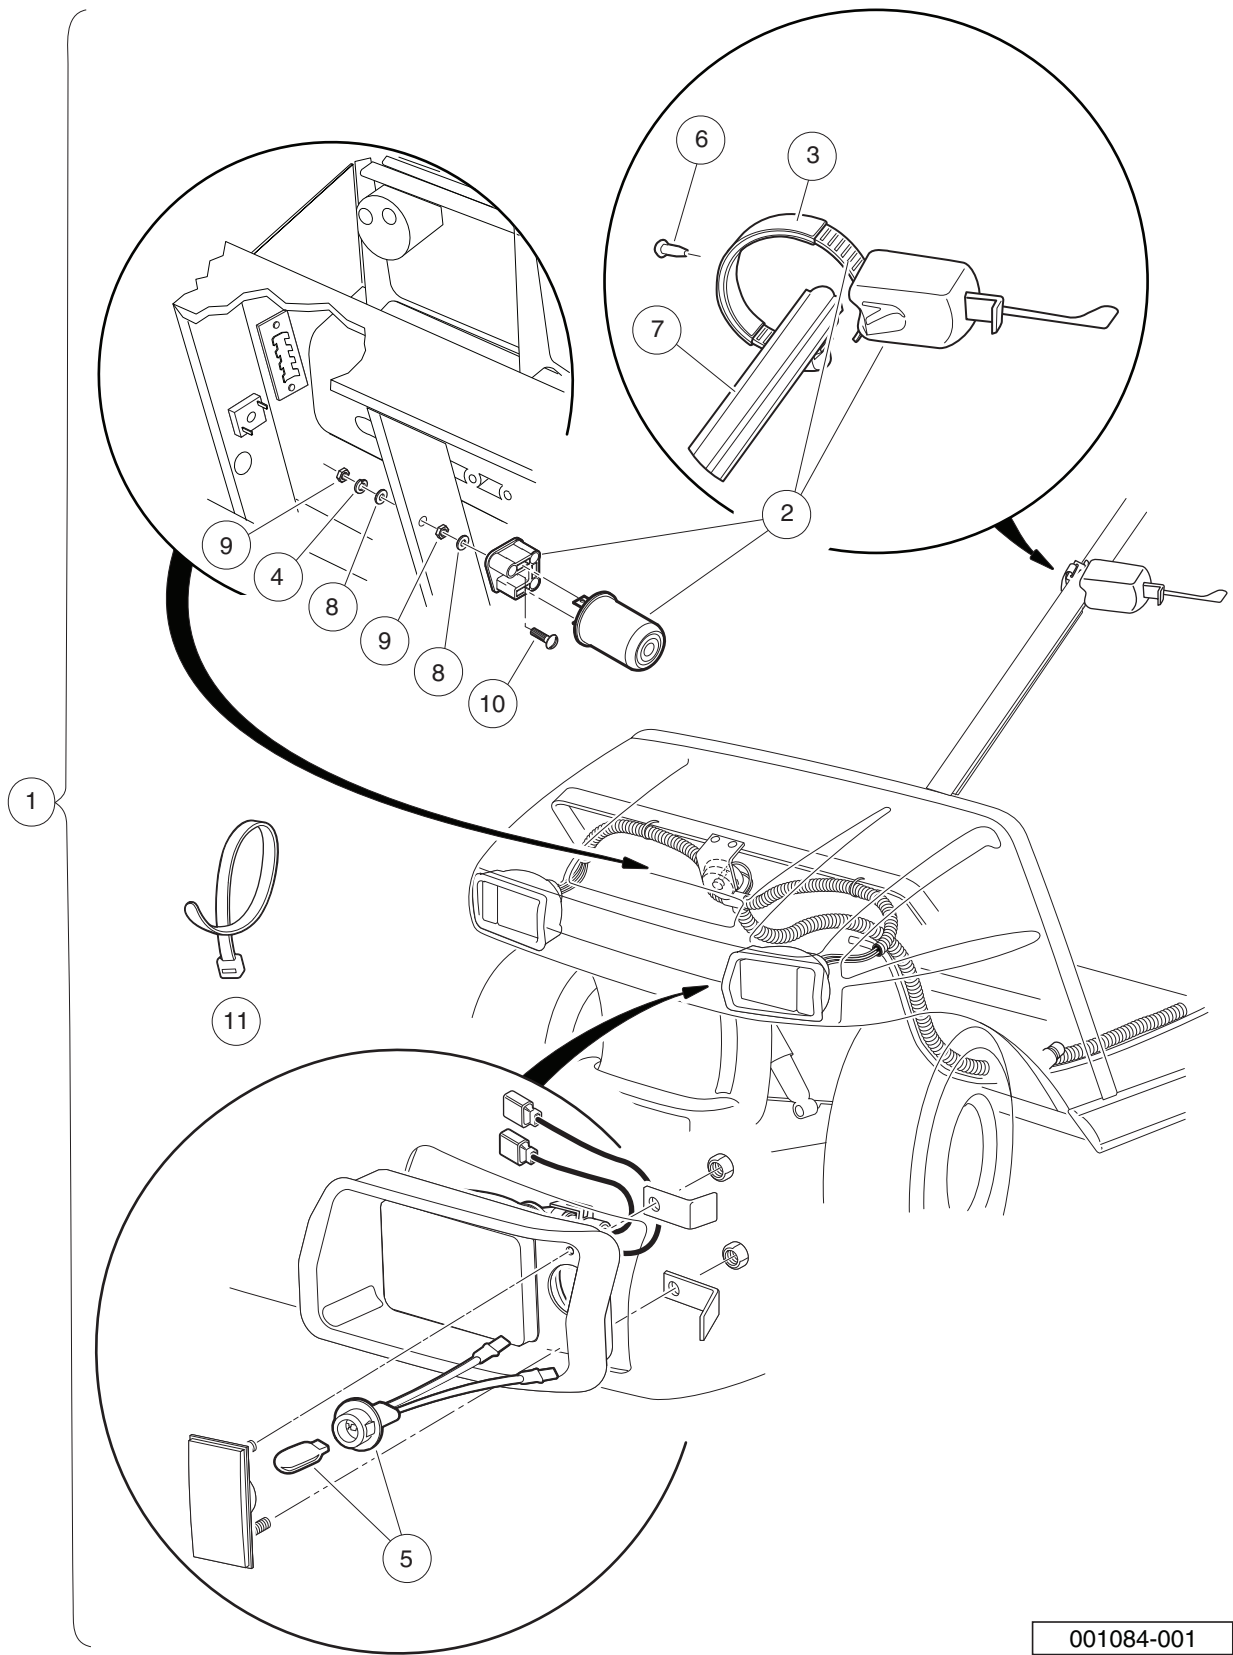

001084-001


TURN SIGNAL KIT – GASOLINE AND ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	101707402	Turn Signal Conversion Kit (includes items 2 through 11)	1	
2	<u>1011590</u>	Switch Sub-assy, Turn Signal	1	
3	N/A	Strap, Extrusion	1	
4	<u>1016</u>	Lockwasher, #10 Split	1	
5	<u>1017075</u>	Socket & Lamp Assembly	2	
6	<u>1017724</u>	Rivet, Plastic	1	
7	<u>102529201</u>	Wire Cover, Steering Column	1	
8	<u>183</u>	Washer, #10, Type A, Flat	2	
9	<u>7893</u>	Nut, #10-32 Hex	2	
10	8104	Screw, #10-32 X .75 Rd Hd Mach	1	
11	<u>8990</u>	Tie Wrap, 8" Nylon	1	

4

G

E

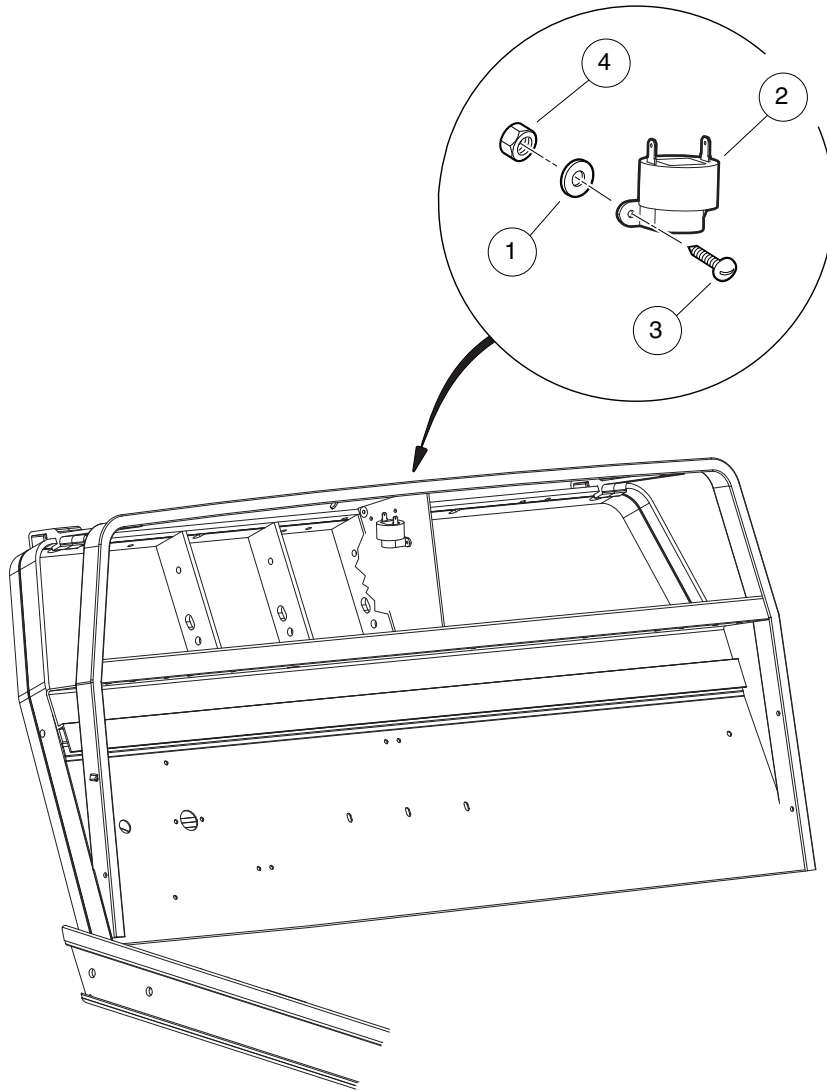

000363-001


REVERSE BUZZER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012431	Washer, #4 Flat	1
2	<u>1016851</u>	Multi-Purpose Buzzer (9-48 VDC)	1
3	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	1
4	<u>8057</u>	Nut, #4-40 Hex Machine	1

4

G


E

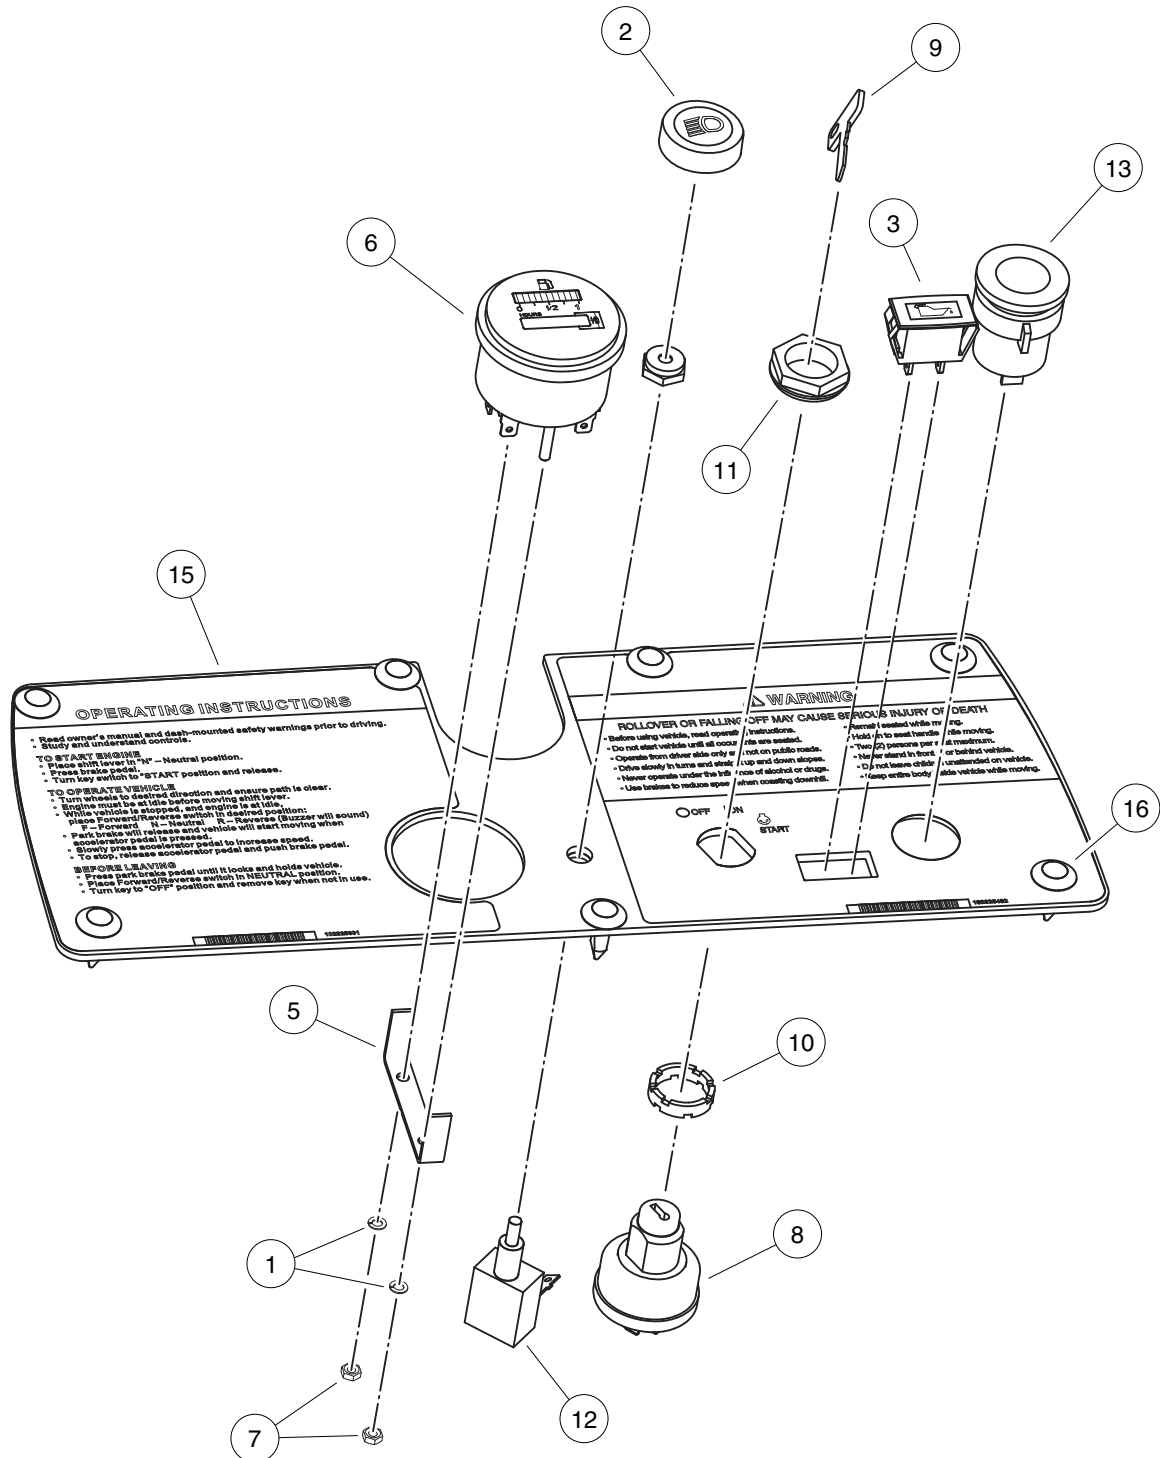

000232-001

INSTRUMENT PANEL – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>1012986</u>	Lockwasher, M4	2	E
2	<u>1013857</u>	Knob, Light Switch	1	
3	<u>1016630</u>	Light, Oil	1	
4	<u>101990703</u>	Gauge, Fuel/Hour, with Bracket (includes items 5 and 6)	1	
5	<u>102025901</u>	Bracket, Fuel Gauge/Hour Meter	1	
6	N/A	Gauge, Fuel/Hour	1	
7	<u>101991101</u>	Nut, M4-0.7	2	
8	<u>102044702</u>	Key Switch 12v Key Start	1	
9	<u>102044801</u>	Key Set	1	
10	<u>102051601</u>	Spacer, Keyswitch	1	
11	<u>102051701</u>	Nut, Key Switch	1	
12	<u>102051901</u>	Switch, Light	1	
13	<u>102198001</u>	Receptacle, Accessory	1	
14	<u>102804501</u>	Panel, Instrument	1	
15	<u>102804502</u>	Panel, Instrument (with 12-Volt Accessory Outlet Cutout)	1	
16	<u>102967901</u>	Rivet, Removable, Tuflok 1/4"	7	
Note: Item 4 is not illustrated.				

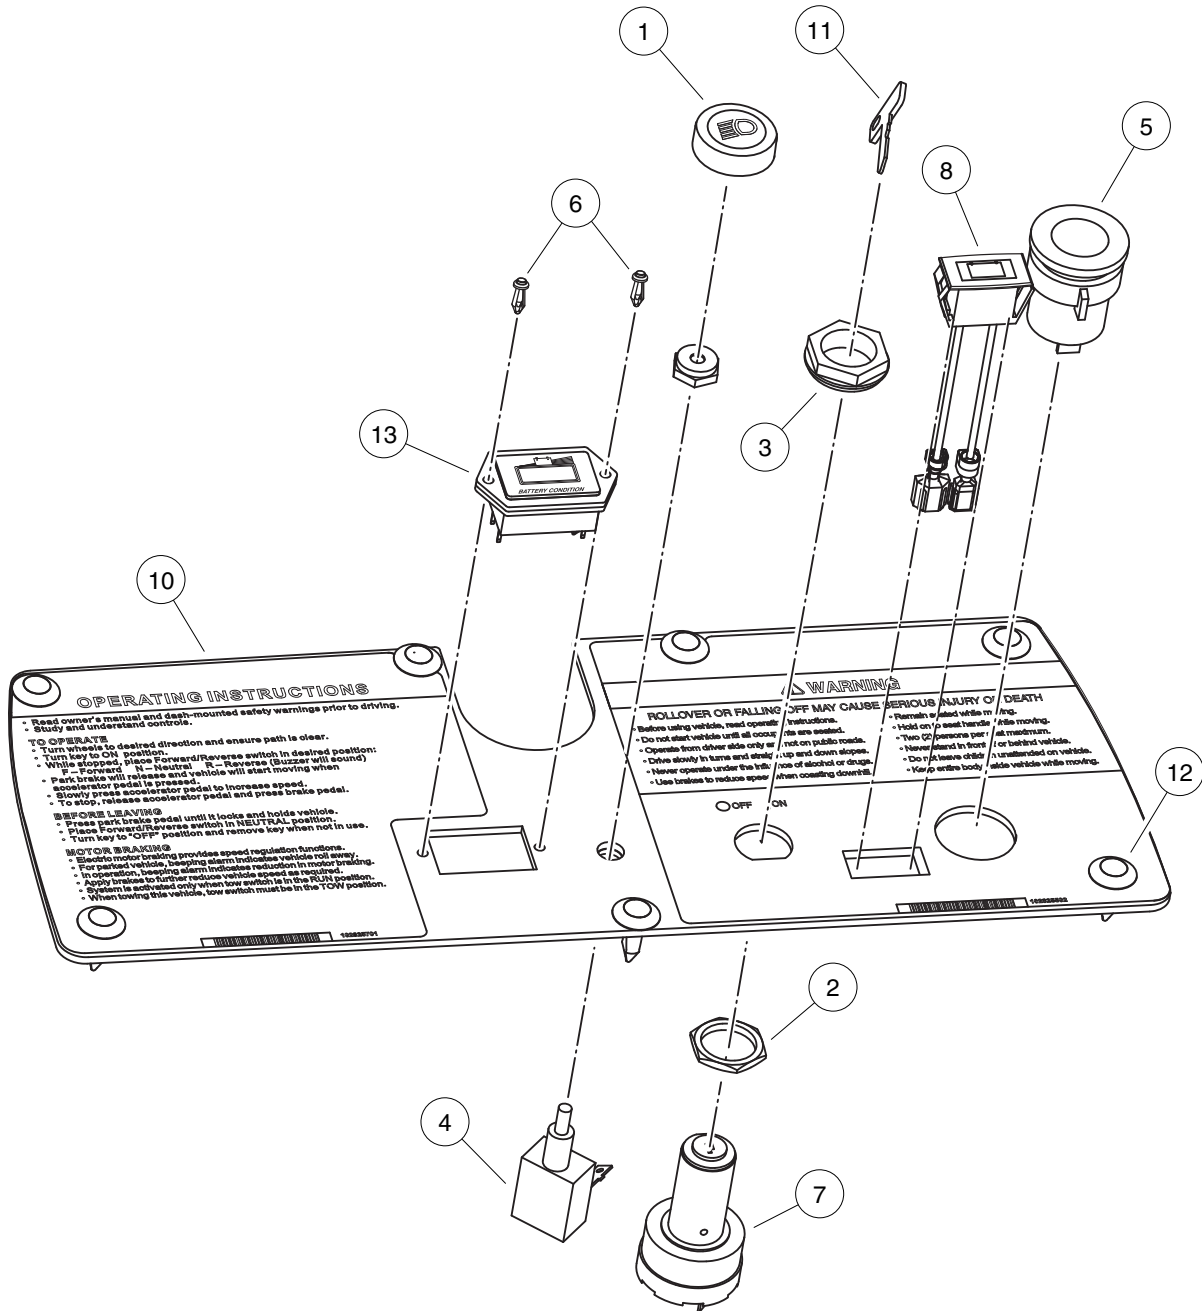

000231-001


INSTRUMENT PANEL – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>1013857</u>	Knob, Light Switch	1	E
2	<u>101830701</u>	Nut, Key Switch	1	
3	<u>102051701</u>	Nut, Key Switch	1	
4	<u>102051901</u>	Switch, Light	1	
5	<u>102198001</u>	Receptacle, Accessory	1	
6	<u>102499001</u>	Rivet, Micro Tuflok	2	
7	<u>102508601</u>	Key Switch, Electric	1	
8	<u>102508701</u>	Light, Battery	1	
9	<u>102804503</u>	Panel, Instrument	1	
10	<u>102804504</u>	Panel, Instrument (With 12-Volt Accessory Outlet Cutout) *	1	
11	<u>102830801</u>	Set, Key	1	
12	<u>102967901</u>	Rivet, Removable, Tuflok 1/4"	7	
13	<u>103200701</u>	Battery Condition Indicator - 48V	1	
Note: Items marked with an asterisk (*) are to be used only on vehicles equipped with a 12-volt accessory outlet. Item 9 is not illustrated. This item to be used only in vehicles equipped with accessory outlets.				

4

G

E

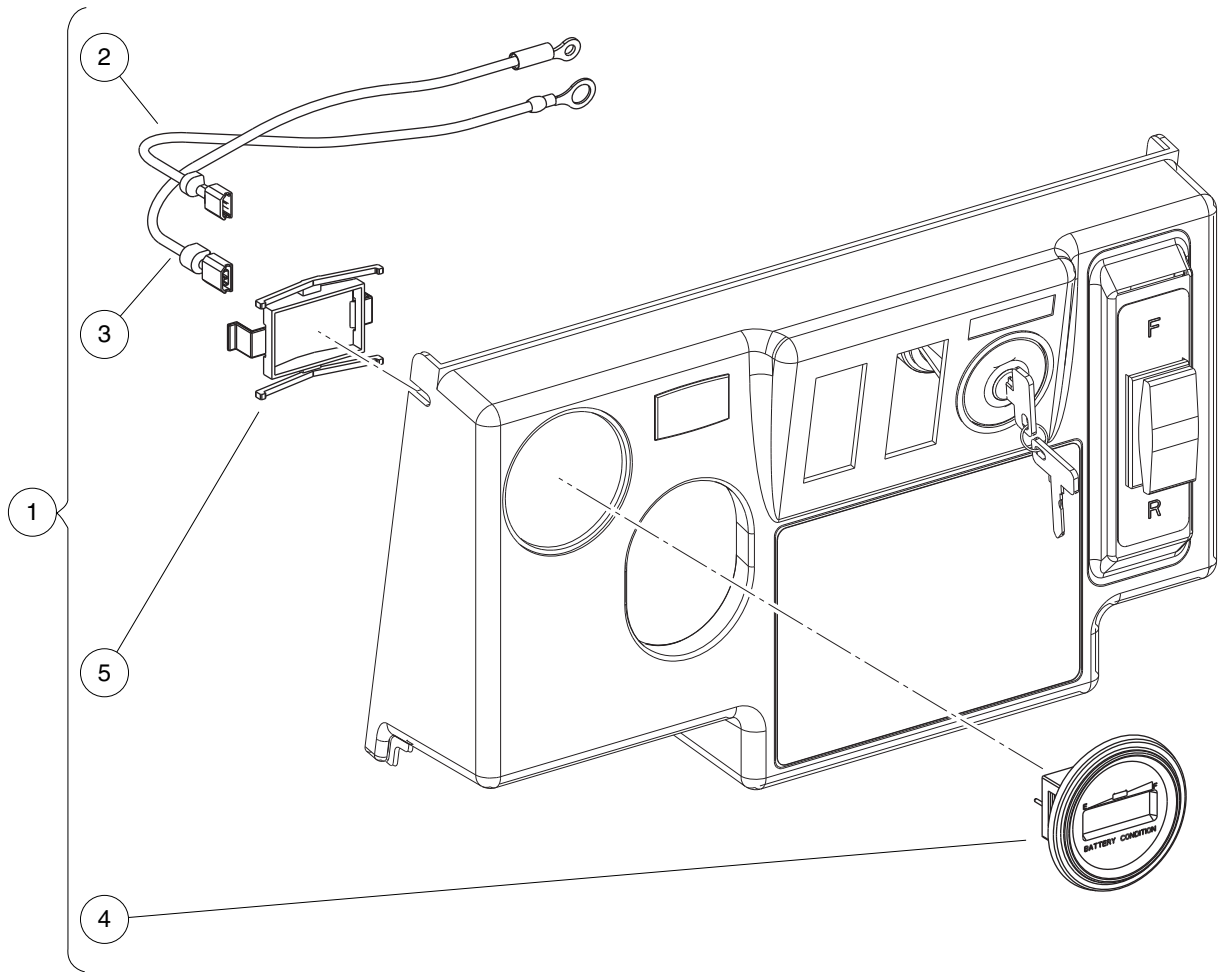

000817-002


BATTERY CONDITION INDICATOR – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>103257603</u>	Kit, Gauge, Battery Condition Indicator (includes items 2 through 4)	1	E
2	<u>103257701</u>	Wire Asm, #18 Black, 2565mm	1	
3	<u>103257801</u>	Wire Asm, #16 Red, 330mm	1	
4	<u>103354401</u>	Gauge, Battery Cond Ind, Rnd (includes item 5)	1	
5	<u>103348202</u>	Clip, Bci, Round	1	

4

G

E

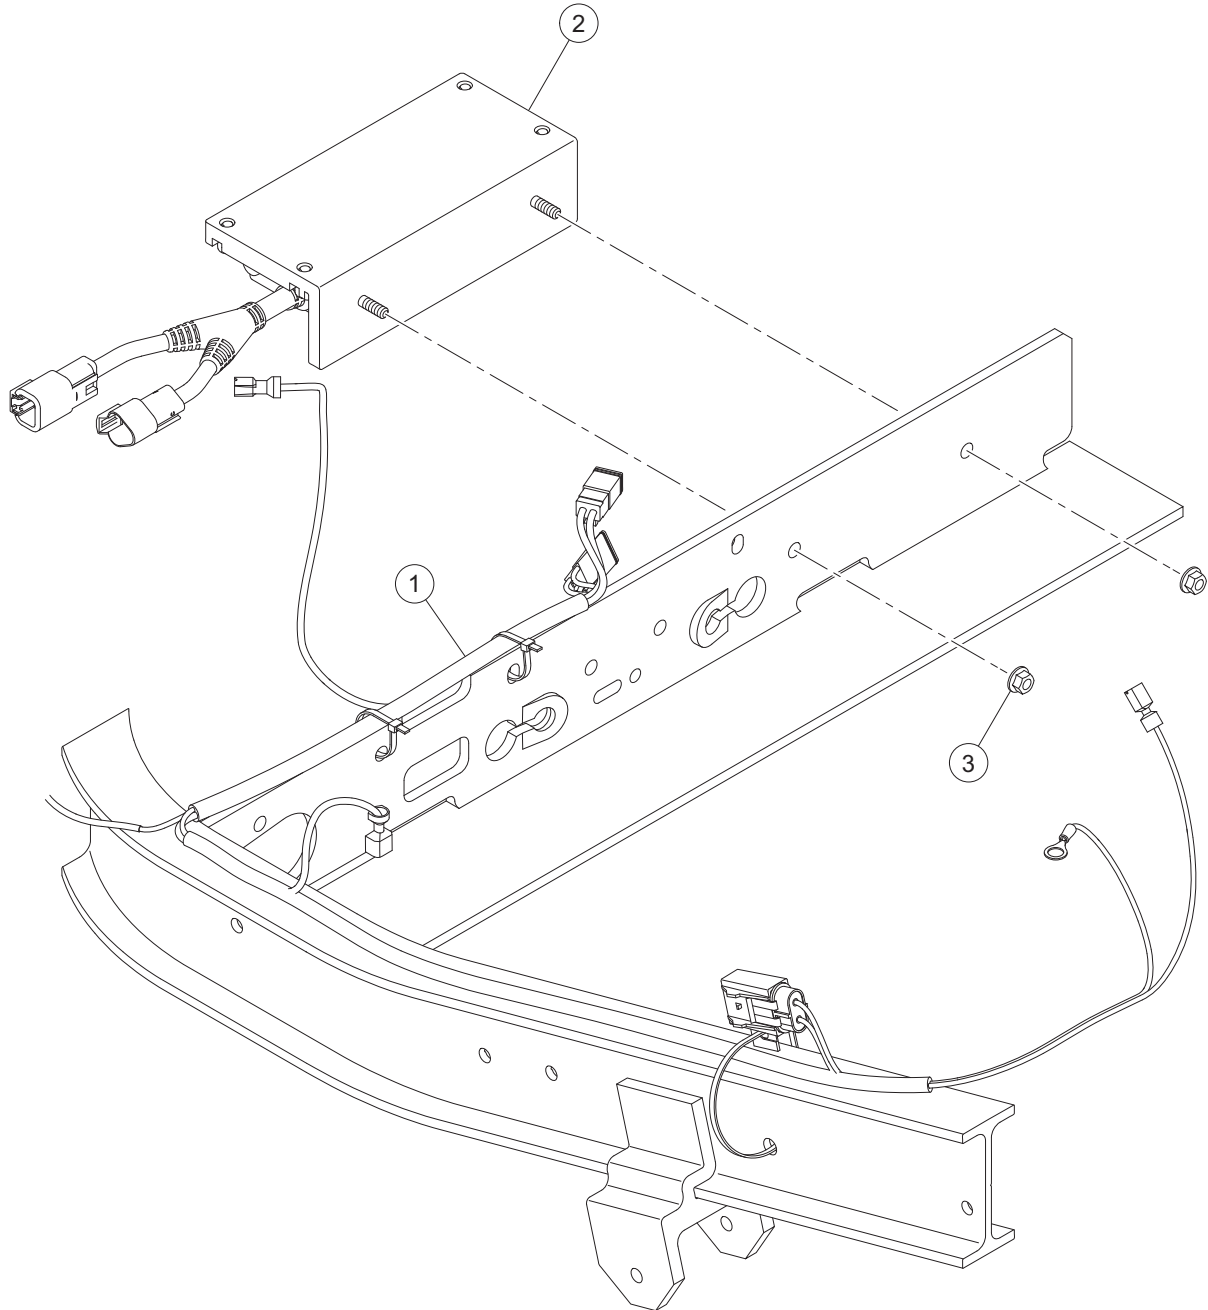

G-130299-000011


DC CONVERTER – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
1	47564778001	Harness, Dc-dc, Sb	1
2	47594727001	Converter, Dc/dc	1
3	96704176	Nut, Flanged, M6 X 1, Serrated	2

4

G


E

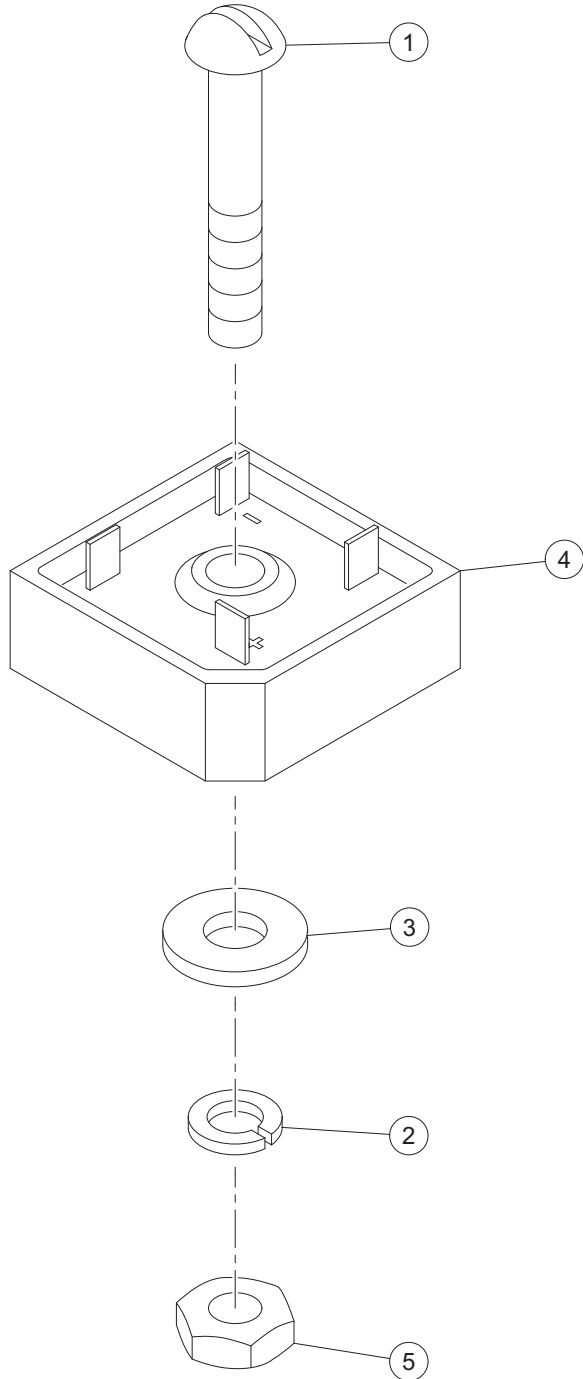

001091-001

VOLTAGE LIMITER – GASOLINE VEHICLE


ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		4
1	<u>1010909</u>	Screw, #10-32 X 1.25 Rd Hd Mch	1	G
2	<u>1016</u>	Lockwasher, #10 Split	1	E
3	<u>183</u>	Washer, #10, Type A, Flat	1	
4	<u>47604303001</u>	Voltage Limiter, Gas	1	
5	<u>7893</u>	Nut, #10-32 Hex	1	

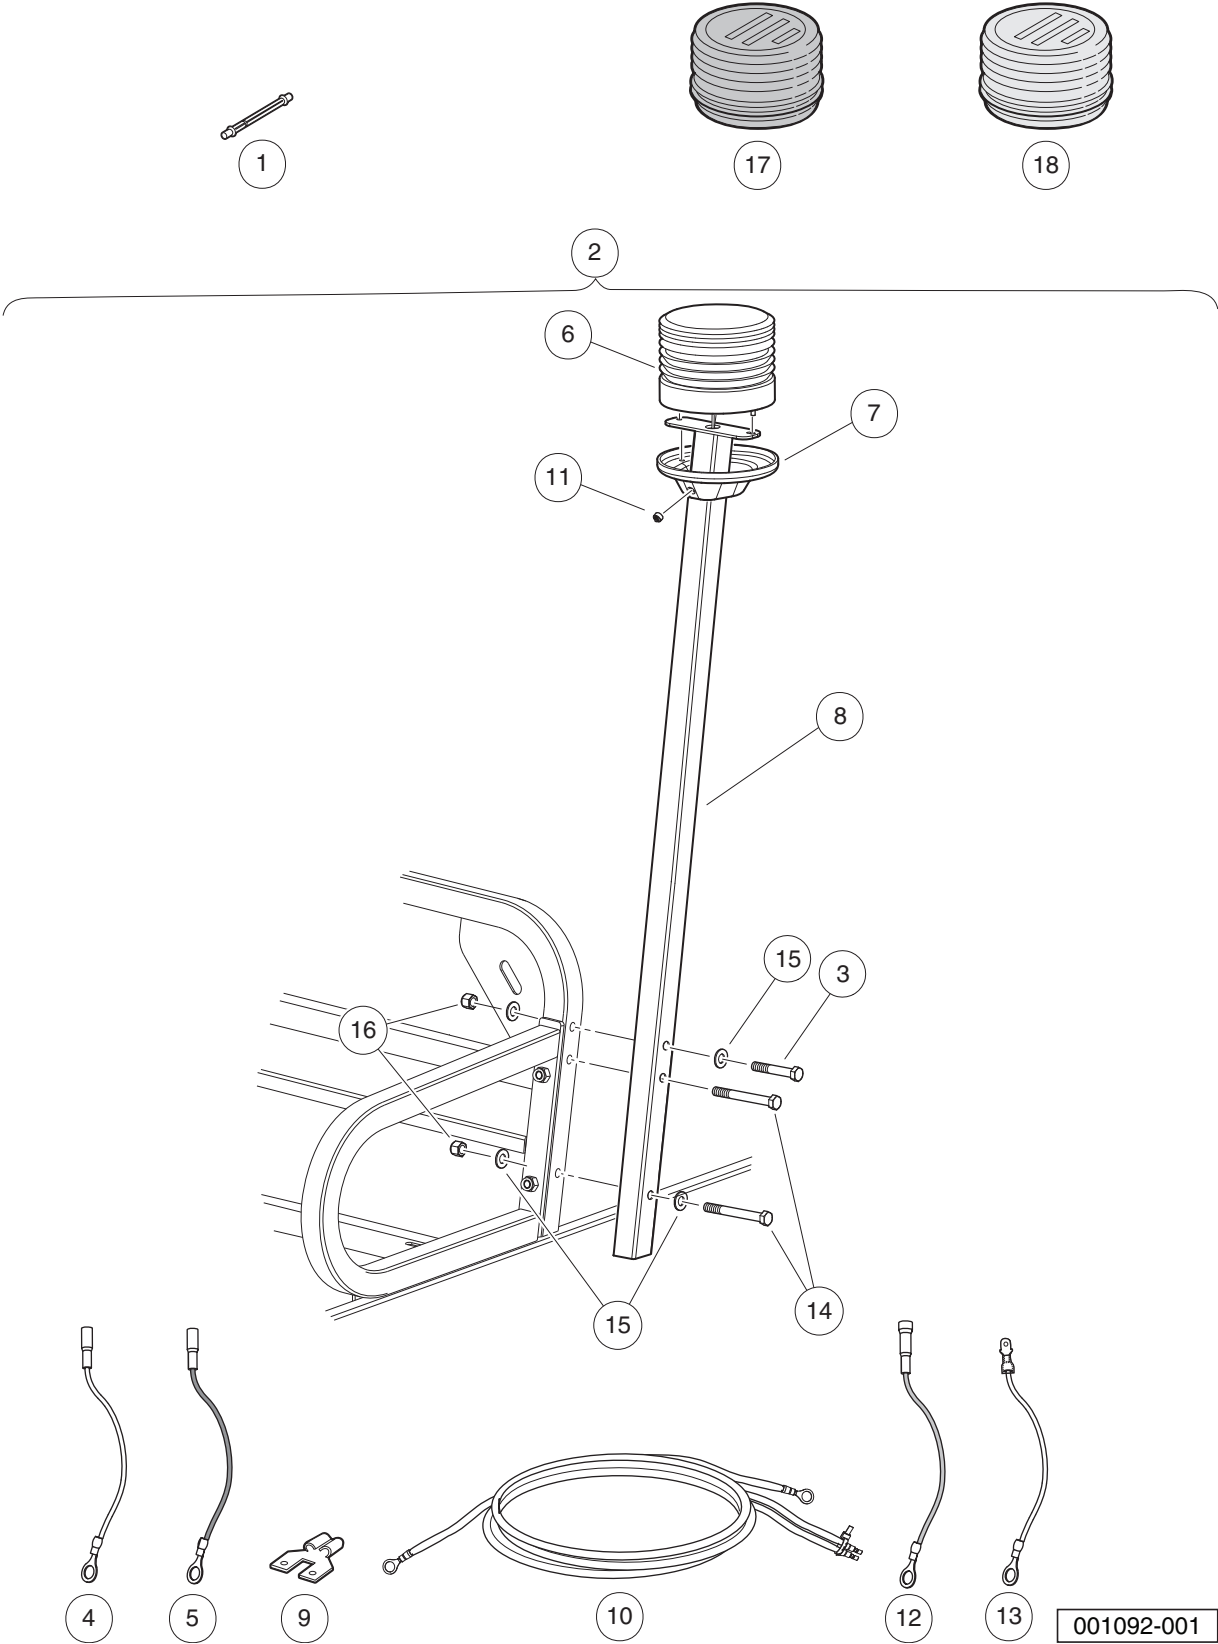

001092-001

STROBE LIGHT, POST-MOUNTED – GASOLINE VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>1015526</u>	Bulb, Replacement, for Strobe Light	1	
2	<u>1015765</u>	Safety Strobe Lht Post Mnt Gas (includes items 3 through 16)	1	
3	<u>1013509</u>	Screw, 1/4-20 X 1.75 Hx Hd Cap	2	
4	<u>1015153</u>	Wire Assembly #16 Yellow	1	
5	<u>1015154</u>	Wire Assembly Blue Ca #16	1	
6	<u>1015156</u>	Light Assembly, Strobe	1	
7	<u>1015157</u>	Cover Plate Switch - Pole Ca	1	
8	<u>1015160</u>	Pole Weldment Carryall	1	
9	<u>1015162</u>	3/16 Tab Adapter Non-insul	1	
10	<u>1015172</u>	Wire Harness Assy, Strobe Lght	1	
11	<u>1015187</u>	Switch Assembly	1	
12	<u>1016837</u>	Wire Assembly Red #18	1	
13	<u>1016929</u>	Wire Assembly Black #16	1	
14	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	2	
15	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4	
16	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2	
17	<u>AM1243701</u>	Lens, Blue, for Strobe Light	1	
18	<u>AM1243801</u>	Lens, Red, for Strobe Light	1	

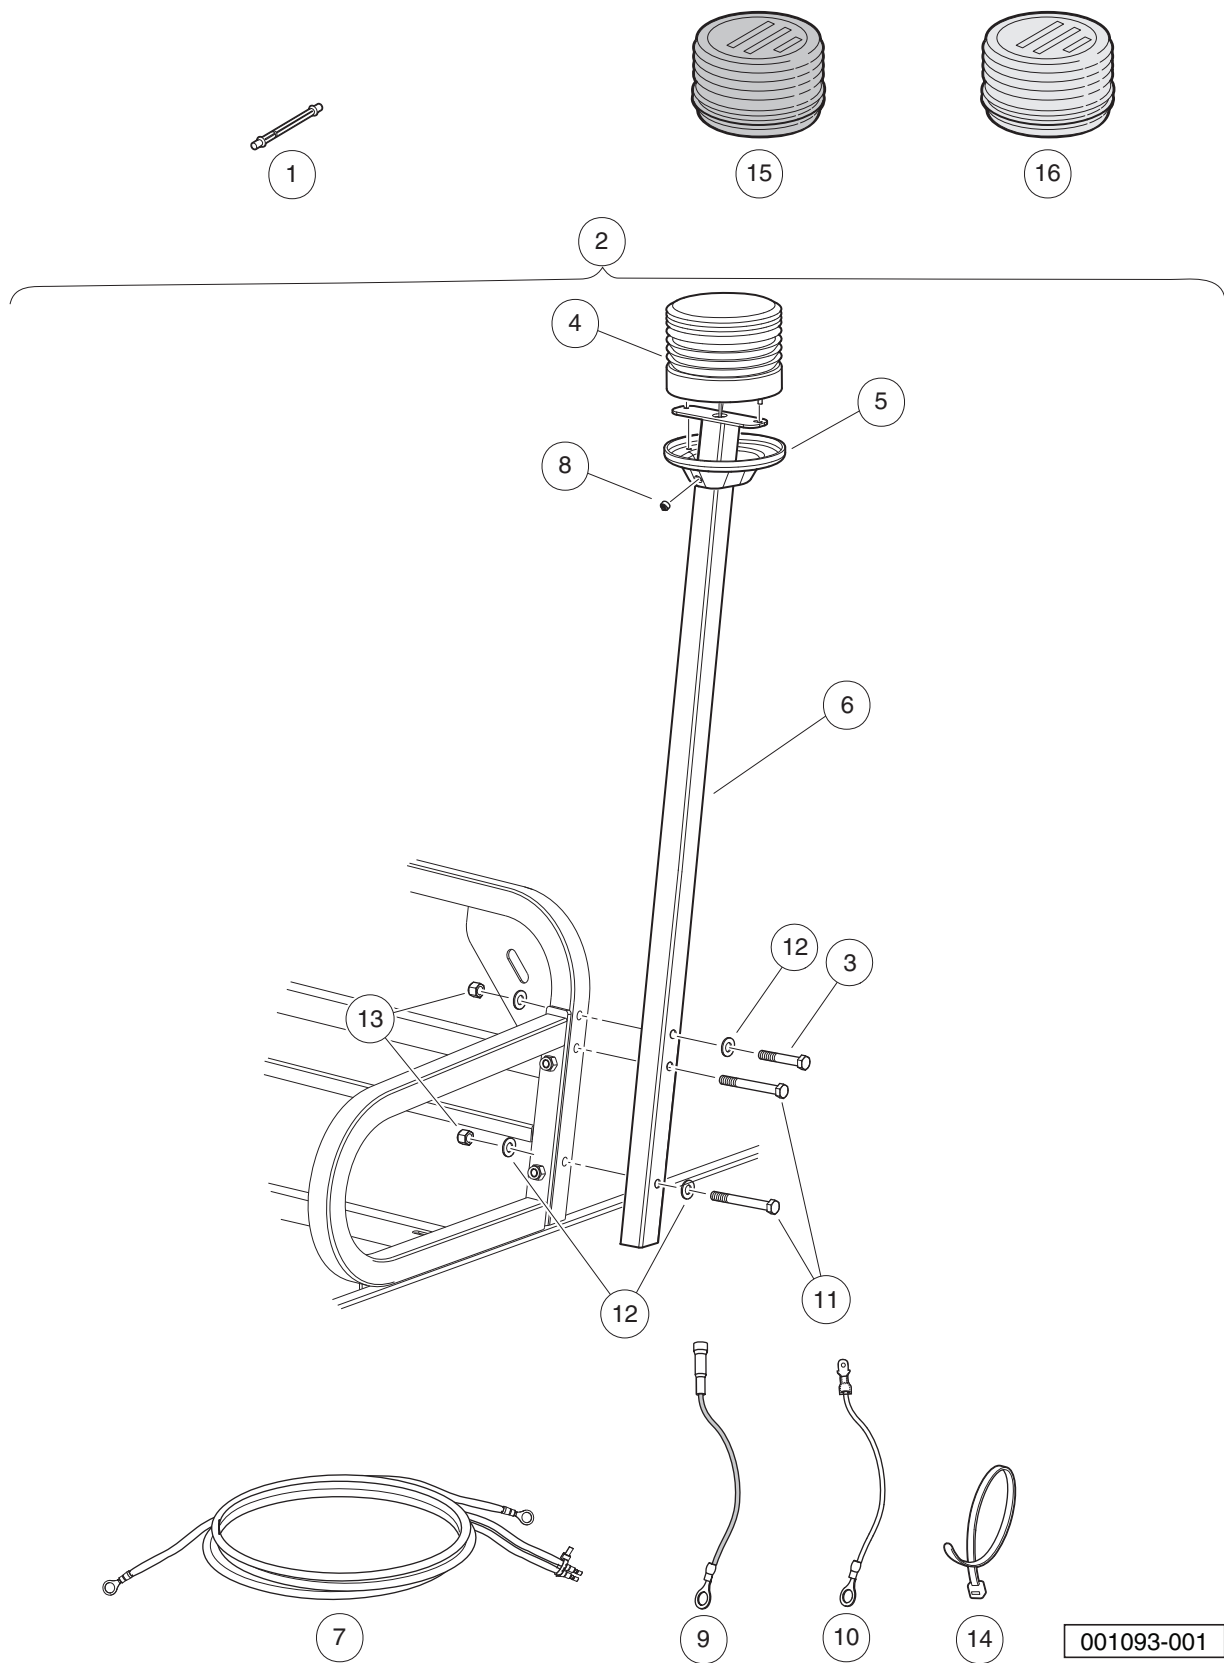

001093-001

STROBE LIGHT, POST-MOUNTED – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>1015526</u>	Bulb, Replacement, for Strobe Light	1	E
2	<u>101814601</u>	Safety Strobe Lht & Post Mt El (includes items 3 through 14)	1	
3	<u>1013509</u>	Screw, 1/4-20 X 1.75 Hx Hd Cap	2	
4	<u>1015156</u>	Light Assembly, Strobe	1	
5	<u>1015157</u>	Cover Plate Switch - Pole Ca	1	
6	<u>1015160</u>	Pole Weldment Carryall	1	
7	<u>1015172</u>	Wire Harness Assy, Strobe Lght	1	
8	<u>1015187</u>	Switch Assembly	1	
9	<u>1016837</u>	Wire Assembly Red #18	1	
10	<u>1016929</u>	Wire Assembly Black #16	1	
11	<u>324</u>	Screw, 1/4-20 X 2.50 Hx Hd Cap	2	
12	<u>332</u>	Washer, 1/4 Type A Narrow Flat	4	
13	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2	
14	<u>8990</u>	Tie Wrap, 8" Nylon	4	
15	<u>AM1243701</u>	Lens, Blue, for Strobe Light	1	
16	<u>AM1243801</u>	Lens, Red, for Strobe Light	1	

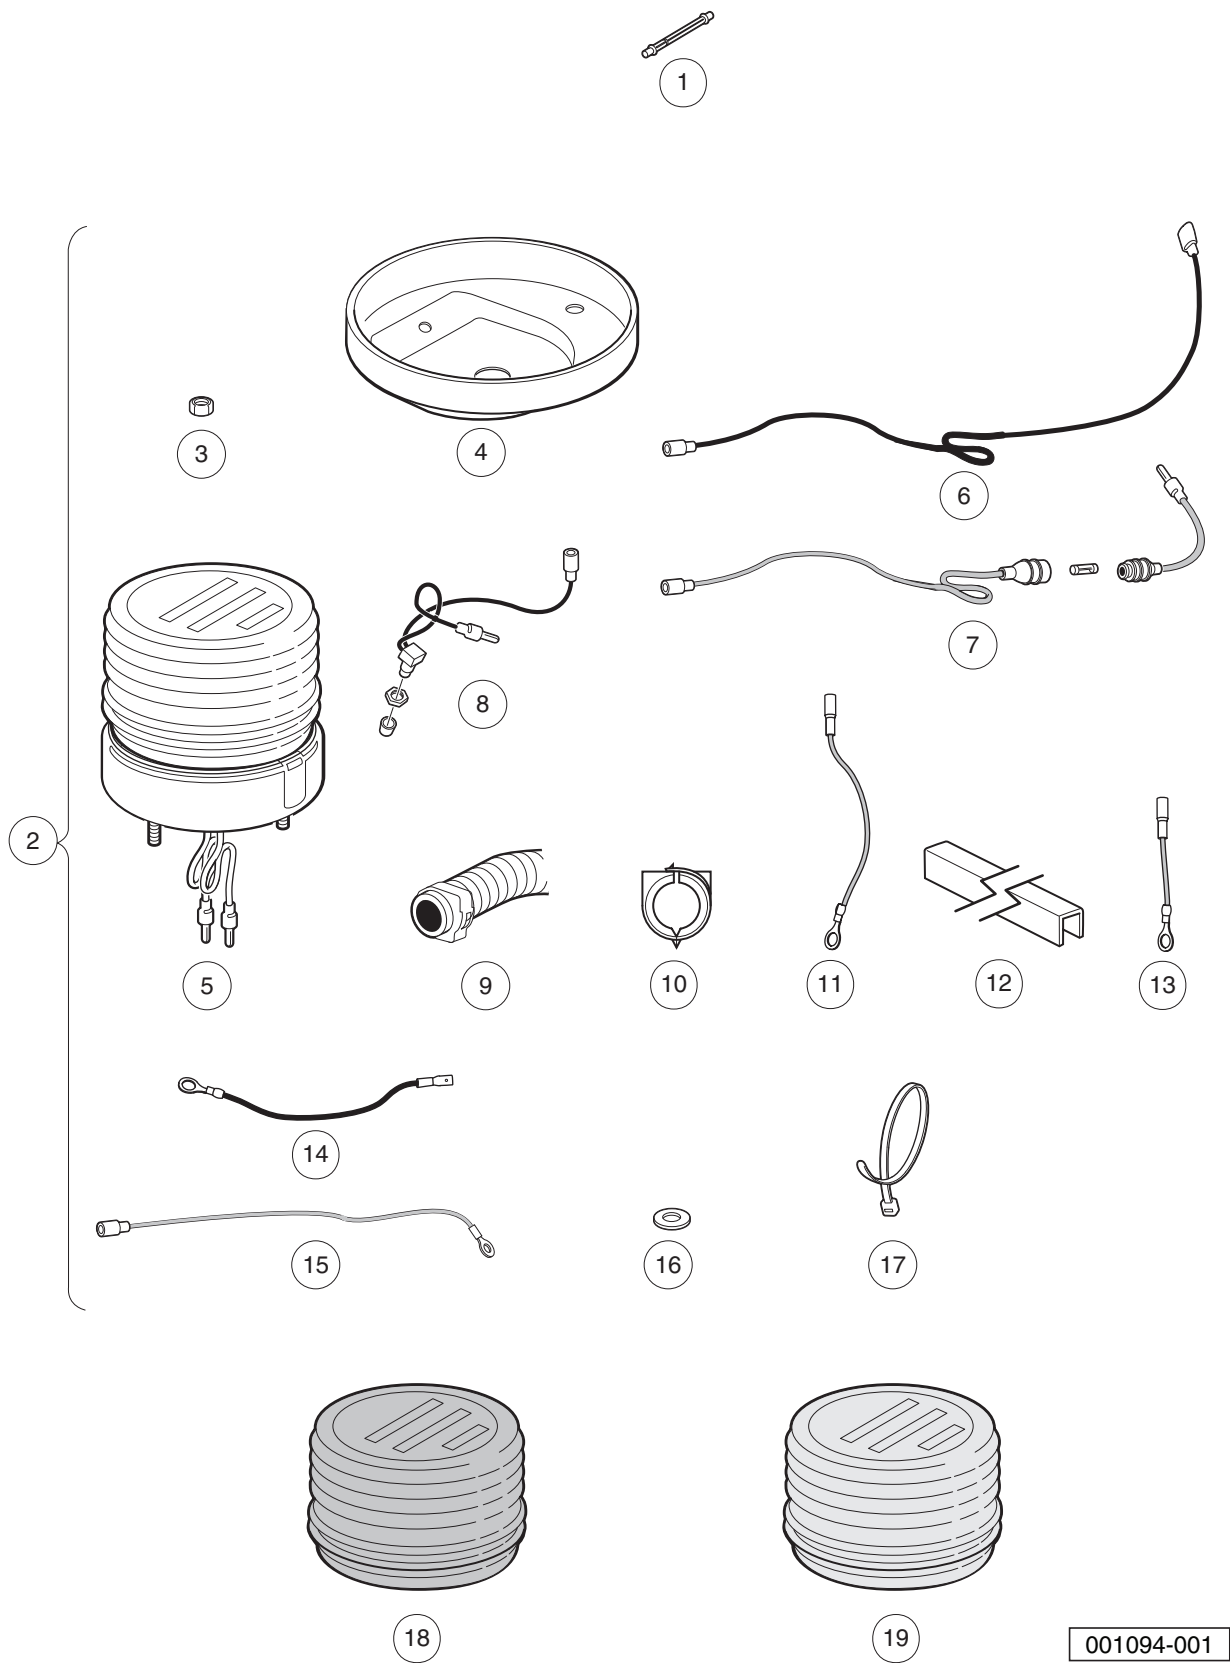

001094-001


STROBE LIGHT, CANOPY-MOUNTED

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>1015526</u>	Bulb, Replacement, for Strobe Light	1	E
2	<u>AM1243501</u>	Kit, Roof Mounted Strobe Fd (includes items 3 through 17)	A/R	
3	<u>1012438</u>	Locknut, #10-24 Nylon Insert	2	
4	<u>1015010</u>	Cover Plate Switch	1	
5	<u>1015156</u>	Light Assembly, Strobe	1	
6	<u>1015167</u>	#16 Black Wire Asm	1	
7	<u>1015170</u>	Wire Assembly #16	1	
8	<u>1015187</u>	Switch Assembly	1	
9	<u>1015768</u>	Split Convolute Elec Conduit	11	
10	<u>1015770</u>	Outlet Ring - .5 Diameter	5	
11	<u>1016230</u>	Wire Asm #16 Red	1	
12	<u>1016267</u>	Snap On Conduit Vert.	1	
13	<u>1016287</u>	Wire Asm #16 Red	1	
14	<u>1016929</u>	Wire Assembly Black #16	1	
15	<u>101821601</u>	#18 Red Wire Assembly	1	
16	<u>183</u>	Washer, #10, Type A, Flat	2	
17	<u>8639</u>	Tie Wrap, 11" Nylon	8	
18	<u>AM1243701</u>	Lens, Blue, for Strobe Light	A/R	
19	<u>AM1243801</u>	Lens, Red, for Strobe Light	A/R	

4

G

E

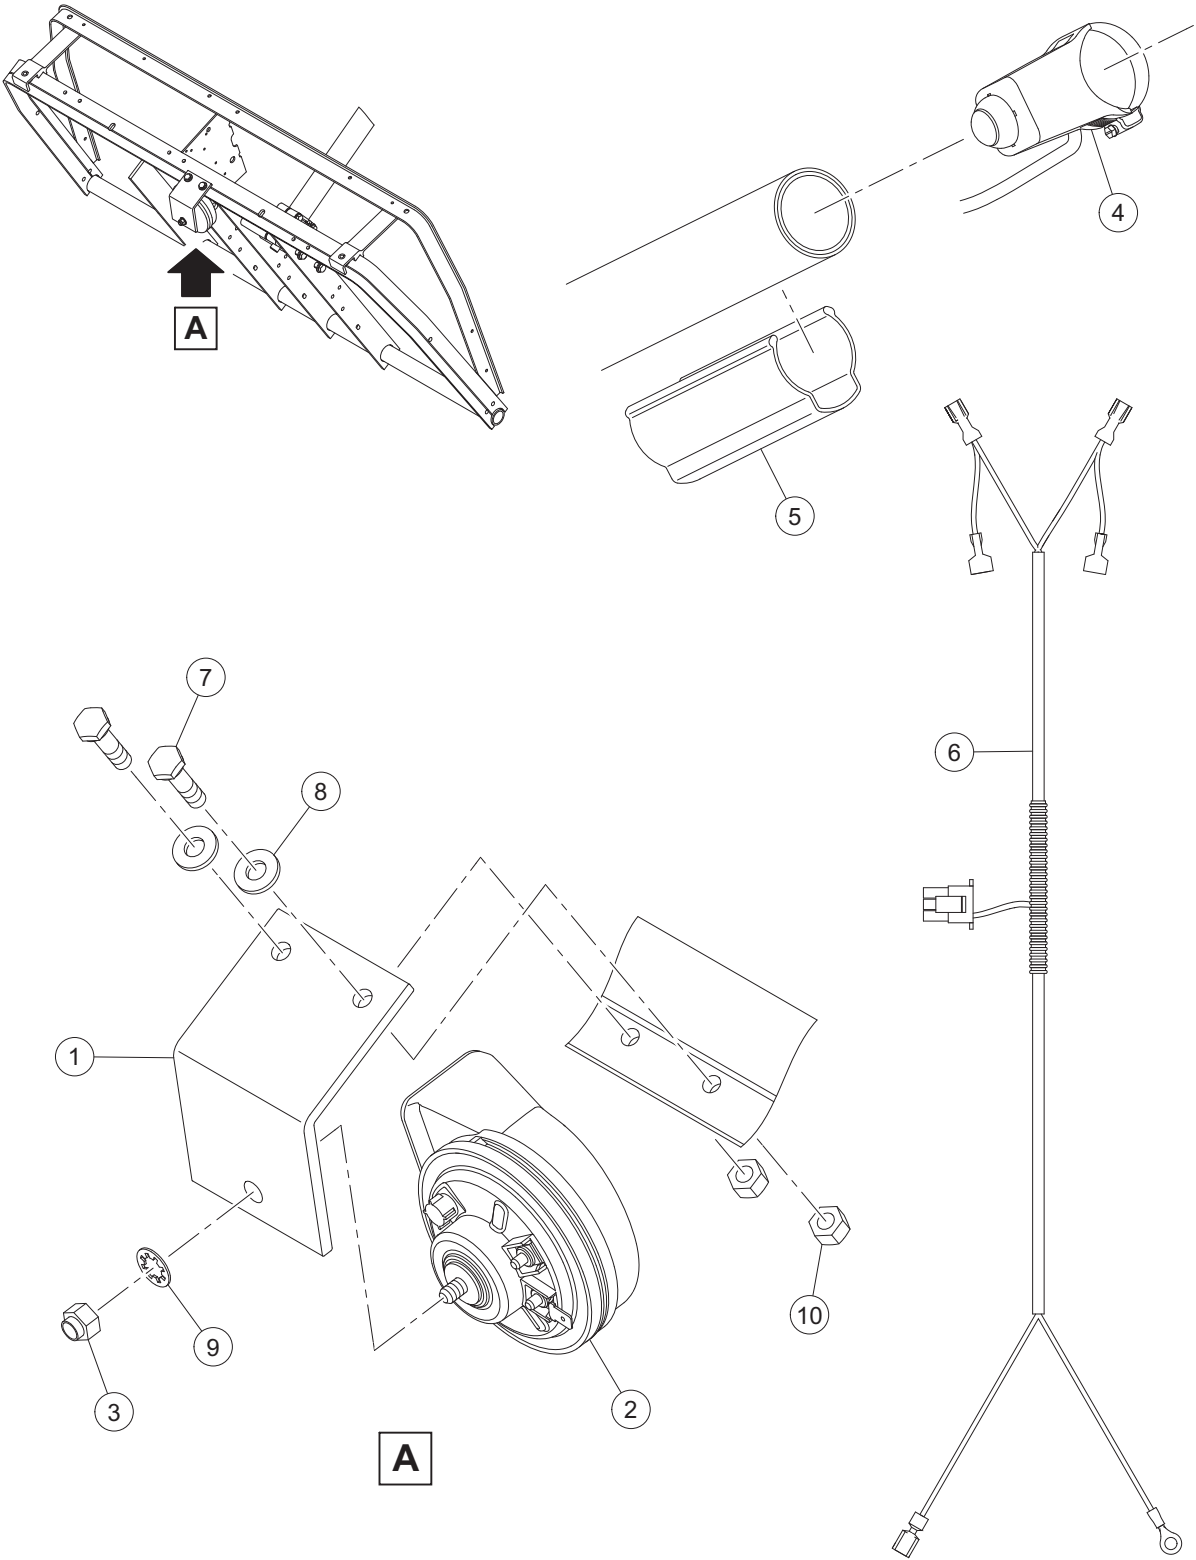

G-130699-000011


HORN

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>1011825</u>	Horn Bracket	1	E
2	<u>1014530</u>	Horn, 12-VDC	1	
3	<u>101955101</u>	Nut, M6 Hex	1	
4	<u>102517601</u>	Subasm, Horn Button Harness	1	
5	<u>102529202</u>	Wire Cover-steer Column 85mm	1	
6	<u>103295301</u>	Harness, Jumper, Horn, Sm Utl	1	
7	<u>304</u>	Screw, 1/4-20 X 1.0 Hex-Head Cap	2	
8	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2	
9	<u>7820</u>	Washer, 5/16 Internal-Tooth	1	
10	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2	

4

G

E

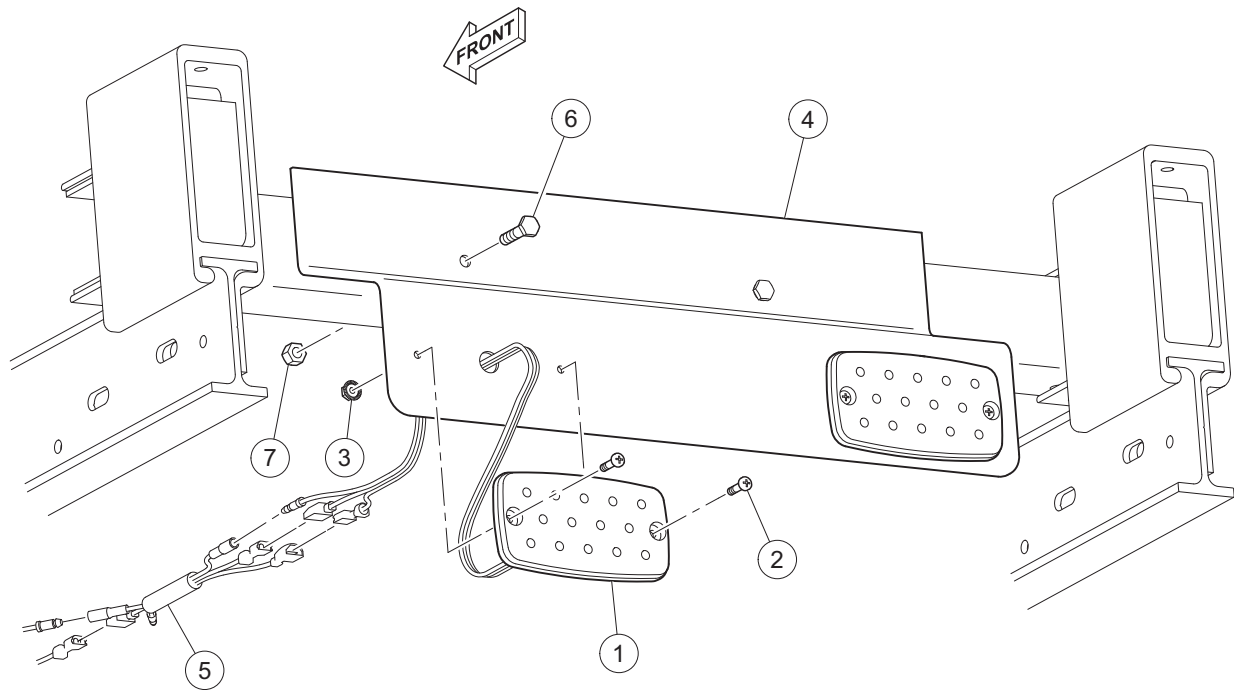


G-130699-000013

TAILLIGHTS – LED

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	105165801	Lamp, Stop/trn/tail, Footdeck	2	E
2	<u>105190601</u>	Screw, #8-32 X 0.625, Clr Znc	4	
3	<u>105190701</u>	Nut, Flanged, #8-32, Serrated	4	
4	47607758001	Bracket, Tail Light, Support	1	
5	47613326001	Harness, Jumper, Tail Lt, Ca	2	
6	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2	
7	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2	
Note: There are different tail light options. Make sure to validate the correct replacement for your vehicle.				

E



TAILLIGHTS – STANDARD VERSION

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	<u>102852501</u>	Kit, Tail Lights (includes items 2 through 12)	1	
2	<u>1015752</u>	Screw, #12-16 X 0.625, Hi-Lo	4	
3	<u>1016717</u>	Light Assembly, Stop/Taillight (includes items 4 through 8)	2	
4	<u>1011582</u>	Taillight Bulb	1	
5	N/A	Housing, Taillight	1	
6	N/A	Gasket, Taillight	1	
7	N/A	Lens, Taillight	1	
8	N/A	Screw, Taillight Lens	2	
9	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	2	
10	<u>102909901</u>	Support, Tail Light	1	
11	<u>102911601</u>	Asm, Wire Harness	1	
12	<u>7847</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	2	
Note: There are different tail light options. Make sure to validate the correct replacement for your vehicle.				


4

G

E

BRAKE SYSTEM


5
G
E

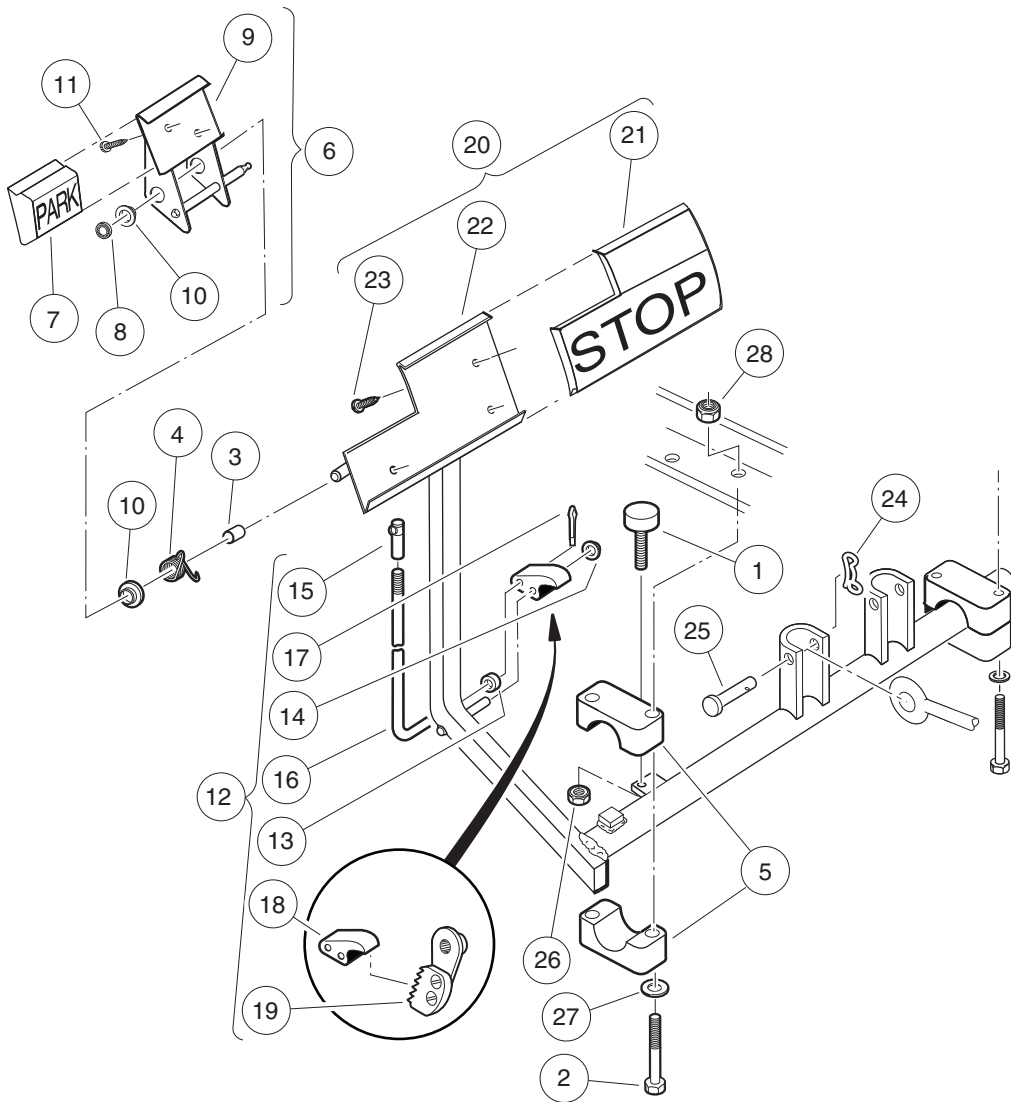

000187-001


BRAKE PEDAL ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1010878</u>	Bumper, Rubber	1	
2	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	4	
3	<u>1010927</u>	Hill Brake Spacer	1	
4	<u>1010933</u>	Spring, Hill Brake Torsion	1	
5	<u>1011402</u>	Package, Brake Mounting Block	1	
6	<u>1011418</u>	Kit, Hill Brake Pedal (includes items 7 through 11)	1	
7	<u>1013870</u>	Pad, Hill Brake	1	
8	<u>1013876</u>	Pushnut, 3/8	1	
9	N/A	Hill Brake Weld Assembly	1	
10	<u>1032</u>	Bushing, Nylon	2	
11	7716	Screw, #10-16 Type AB, Sheet Metal	2	
12	<u>101187702</u>	Kit, Hill Brake Latch (includes items 13 through 19)	1	
13	<u>1010805</u>	Sleeve, Hill Brake Rod	1	
14	<u>1010877</u>	Pushnut, 3/8	1	
15	1010932	Ball Joint, 1/4-28	1	
16	N/A	Rod, Hill Brake	1	
17	<u>1017029</u>	Pin, Cotter, 7/64 x 1/2 Stainless-Steel	1	
18	N/A	Pawl, Hill Brake	1	
19	101918501	Ratchet Assembly	1	
20	<u>101878201</u>	Brake Pedal Kit (includes items 21 through 23)	1	
21	<u>1013869</u>	Pad, Brake Pedal	1	
22	N/A	Weldment, Brake Pedal, 2wr Std	1	
23	7716	Screw, #10-16 Type AB, Sheet Metal	3	
24	<u>102323101</u>	Pin, Bow Tie Locking	1	
25	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1	
26	<u>1028</u>	Nut, 1/4-20 Hex	1	
27	<u>1241</u>	Washer, 5/16 Type A Flat	4	
28	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4	



ACCELERATOR PEDAL ASSEMBLY – ELECTRIC VEHICLES WITH MCOR

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2	
2	<u>1011931</u>	Washer, 1/4 Flat	1	
3	<u>1014007</u>	Washer, 1/4, Flat	4	
4	<u>1017378</u>	Cup, Spring	1	
5	<u>1017380</u>	Bumper, Spring Return	1	
6	<u>1017424</u>	Bearing, Pivot Support	1	
7	<u>1017696</u>	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1	
8	1013871	Pad, Accelerator Pedal	1	
9	N/A	Accelerator Pedal Weldment	1	
10	7716	Screw, #10-16 Type AB, Sheet Metal	4	
11	101796201	Spring, Accelerator Return	1	
12	<u>101817401</u>	Retainer, Spring	1	
13	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4	
14	<u>101862001</u>	Screw, 1/4-20 X 1.500 Flange	1	
15	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 16 and 17)	1	
16	101919801	Spacer, Accelerator	1	
17	<u>102158901</u>	Pivot Rod Weldment	1	
18	<u>1241</u>	Washer, 5/16 Type A Flat	1	
19	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	1	
20	<u>334</u>	Washer, 3/8, Type A, Flat	2	
21	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	
22	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	5	
23	<u>8754</u>	Locknut, 3/8-16 Hex	2	

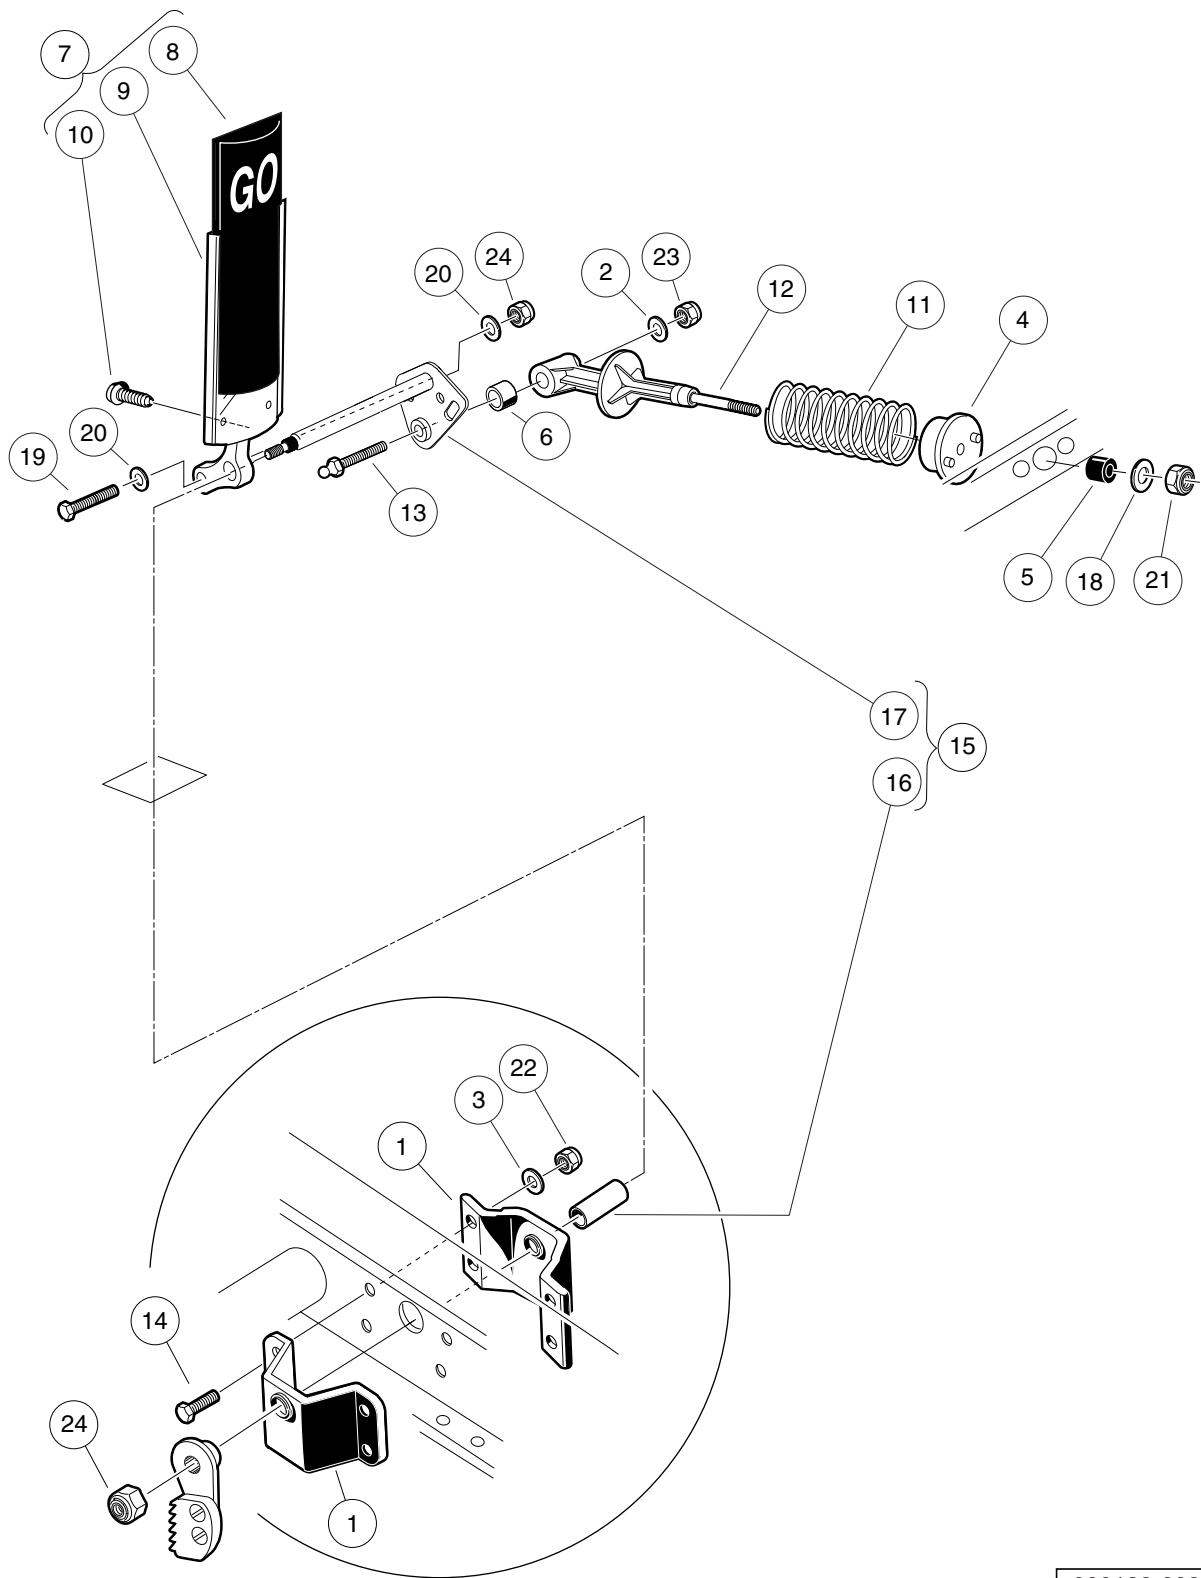


000188-008

ACCELERATOR PEDAL ASSEMBLY – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2	
2	<u>1011931</u>	Washer, 1/4 Flat	1	
3	<u>1014007</u>	Washer, 1/4, Flat	4	
4	<u>1017378</u>	Cup, Spring	1	
5	<u>1017380</u>	Bumper, Spring Return	1	
6	<u>1017424</u>	Bearing, Pivot Support	1	
7	<u>1017696</u>	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1	
8	1013871	Pad, Accelerator Pedal	1	
9	N/A	Accelerator Pedal Weldment	1	
10	7716	Screw, #10-16 Type AB, Sheet Metal	4	
11	101796201	Spring, Accelerator Return	1	
12	<u>101817401</u>	Retainer, Spring	1	
13	101818801	Stud, 1/4-28 X 1.35 Ball	1	
14	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4	
15	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 16 and 17)	1	
16	101919801	Spacer, Accelerator	1	
17	<u>102158901</u>	Pivot Rod Weldment	1	
18	<u>1241</u>	Washer, 5/16 Type A Flat	1	
19	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	1	
20	<u>334</u>	Washer, 3/8, Type A, Flat	2	
21	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	
22	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4	
23	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1	
24	<u>8754</u>	Locknut, 3/8-16 Hex	2	

$$\frac{5}{G}$$

G

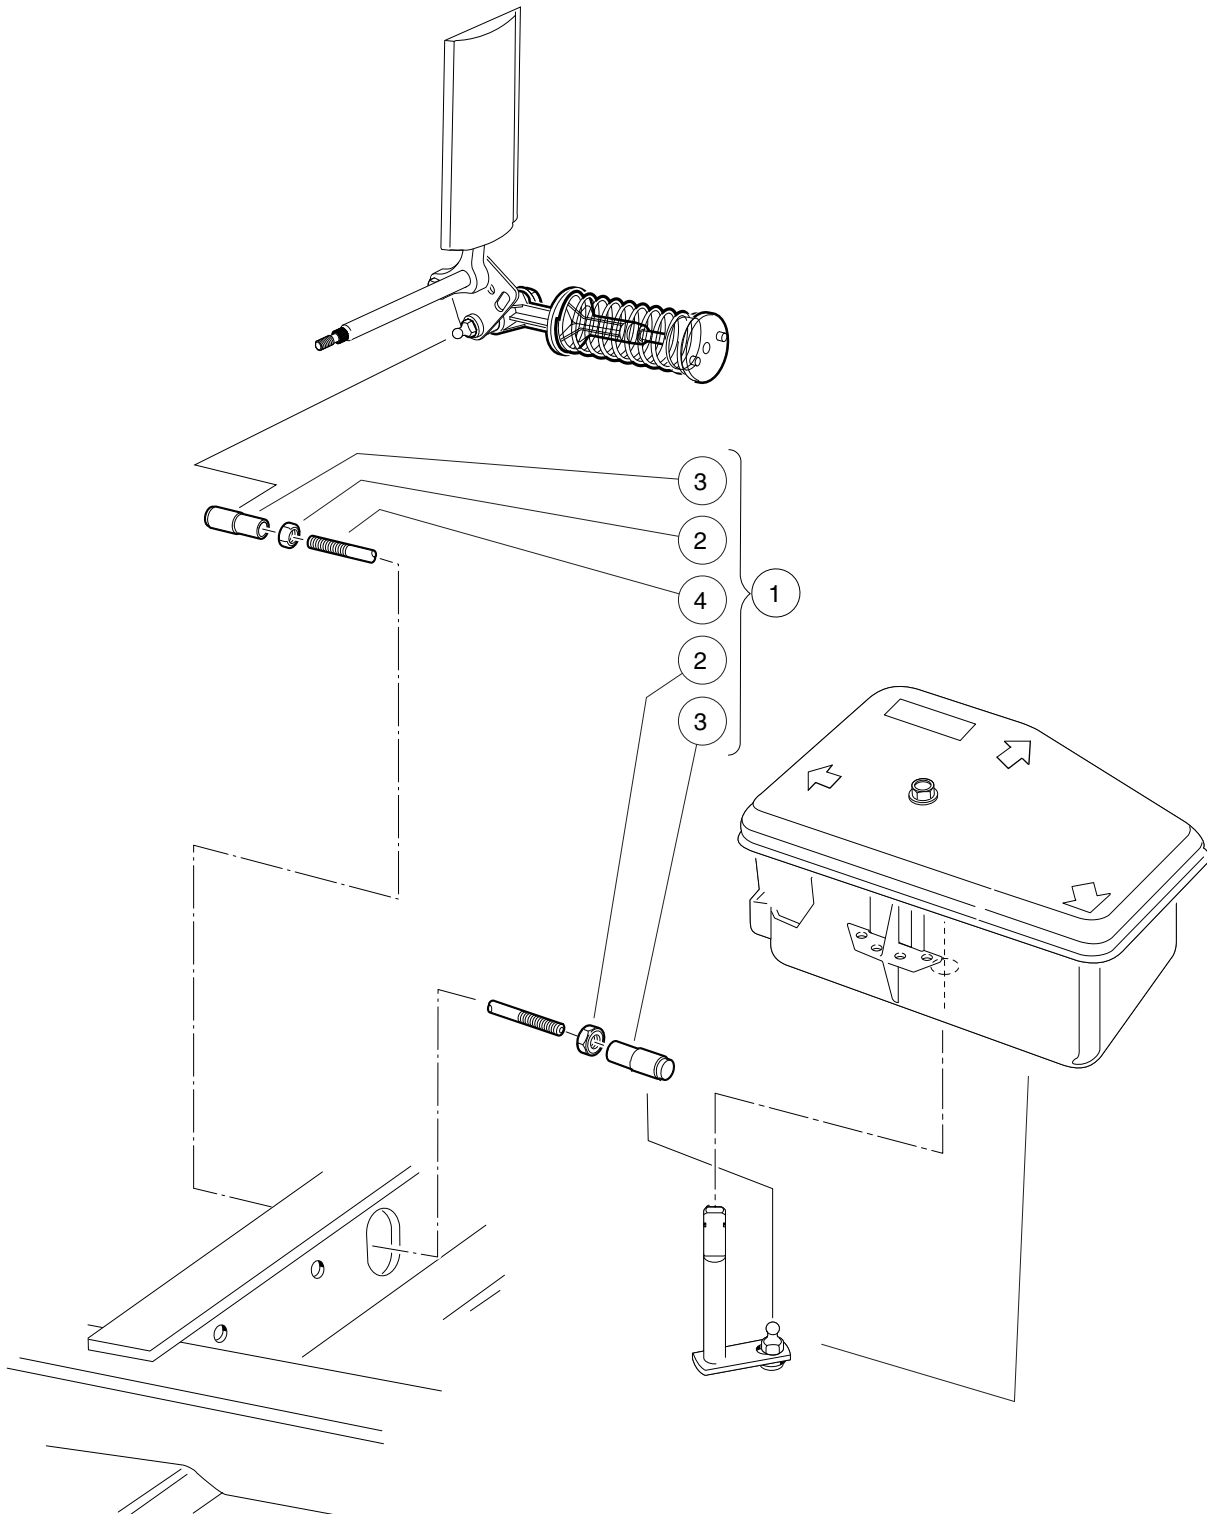E

000362-001


ACCELERATOR ROD – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101912401	Rod, Accelerator (includes items 2 through 4)	1
2	<u>1011084</u>	Nut, 1/4-28 Hex Jam	2
3	<u>1011734</u>	Joint, Ball	2
4	N/A	Accelerator Rod	1

5

G

E

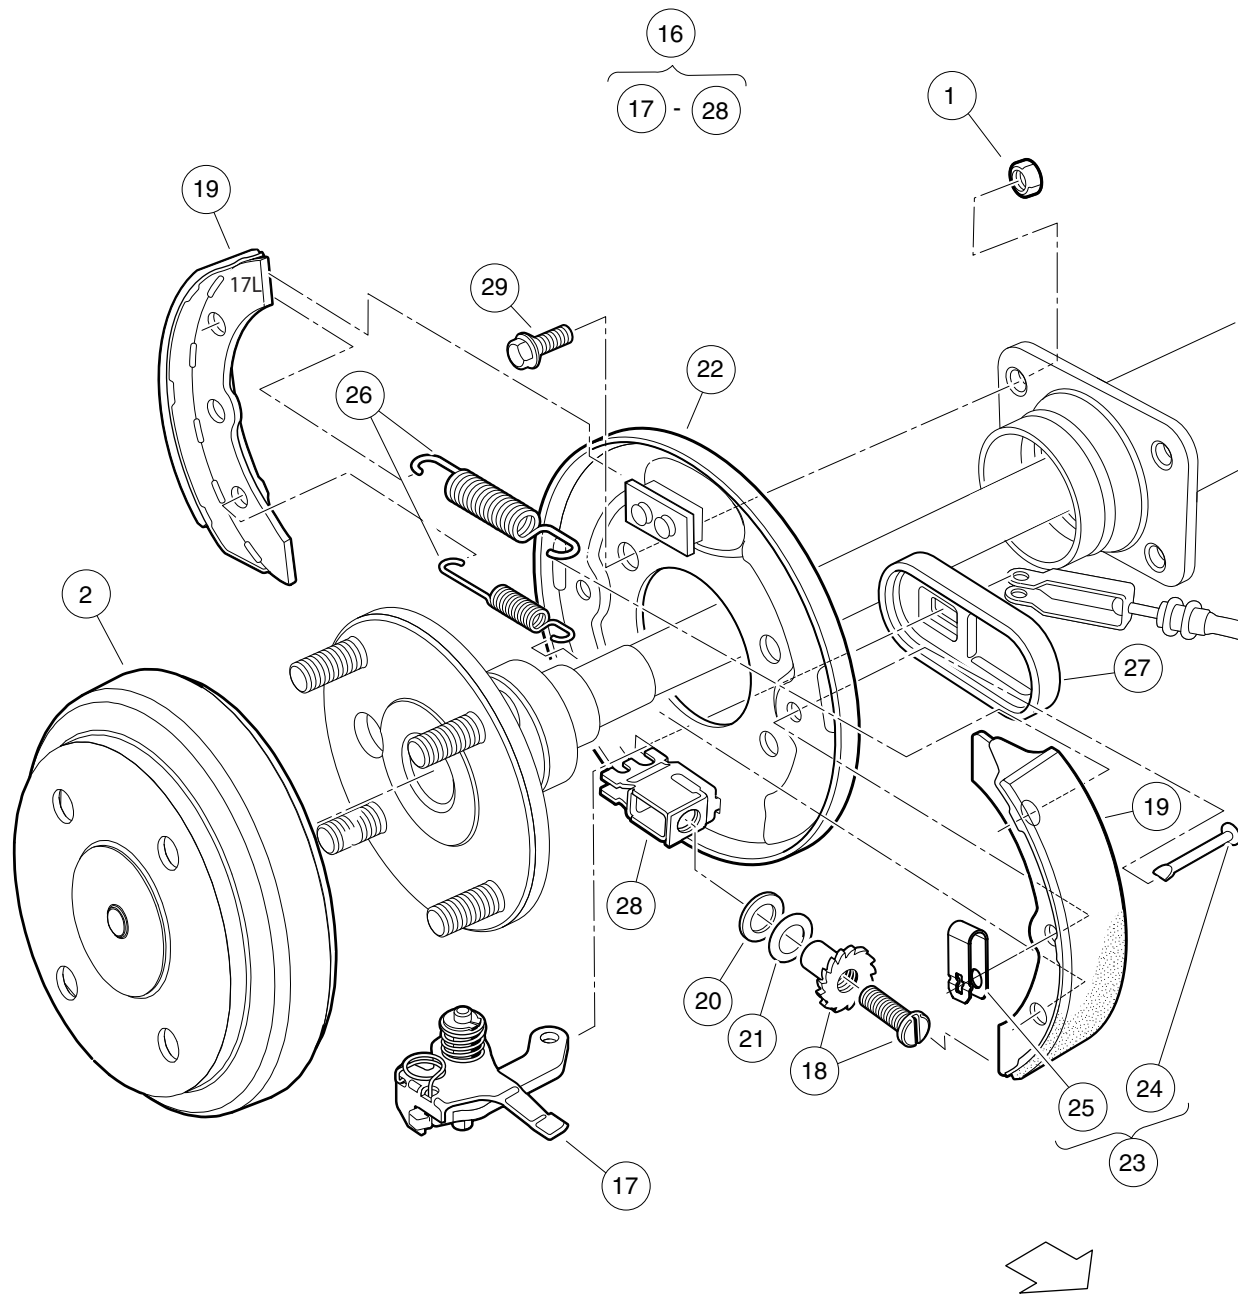

000186-006


REAR BRAKES, SELF-ADJUSTING – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1013924</u>	Nut, 5/16-24, Hex Head Cone	8
2	<u>101791101</u>	Drum without Center Hole, Brake	2
3	<u>103380201</u>	Asm, Brake Cluster, Mech, Drvr (includes items 4 through 15)	1
4	<u>101815502</u>	Lever Assembly, Self-Adjusting Brake, Left	1
5	<u>101816502</u>	Adjusting Mechanism, Self-Adjusting Brake, Left	1
6	<u>101823201</u>	Package, Brake Shoe, Self-Adjusting	1
7	<u>101823801</u>	Plate, Washer, Brake, Self-Adjusting	1
8	<u>101823901</u>	Washer, Brake, Self-Adjusting	1
9	<u>103483102</u>	Backing Plate, Driver-side	1
10	<u>103483201</u>	Kit, Shoe Retainer (includes items 11 and 12)	1
11	N/A	Pin	2
12	N/A	Spring, Shoe, Clamp	2
13	<u>103483401</u>	Package Brake Spring Self Adj	1
14	<u>103483601</u>	Cover, Dust	1
15	<u>103483701</u>	Brake Block	1
16	<u>103380202</u>	Asm, Brake Cluster, Mech, Pass (includes items 17 through 28)	1
17	<u>101815501</u>	Lever Assembly, Self-Adjusting Brake, Right (Passenger)	1
18	<u>101816501</u>	Adj Mechanism, S.A. Brakes, Right (Passenger)	1
19	<u>101823201</u>	Package, Brake Shoe, Self-Adjusting	1
20	<u>101823801</u>	Plate, Washer, Brake, Self-Adjusting	1
21	<u>101823901</u>	Washer, Brake, Self-Adjusting	1
22	<u>103483101</u>	Backing Plate, Passenger-side	1
23	<u>103483201</u>	Kit, Shoe Retainer (includes items 24 and 25)	1
24	N/A	Pin	2
25	N/A	Spring, Shoe, Clamp	2
26	<u>103483401</u>	Package Brake Spring Self Adj	1
27	<u>103483601</u>	Cover, Dust	1
28	<u>103483701</u>	Brake Block	1
29	<u>47542195001</u>	Bolt, Brake Cluster Mnt	8
		Note: Driver-side brake cluster (items 4 -16) not shown. Components have a similar appearance to passenger-side brake cluster components.	

5

G

E

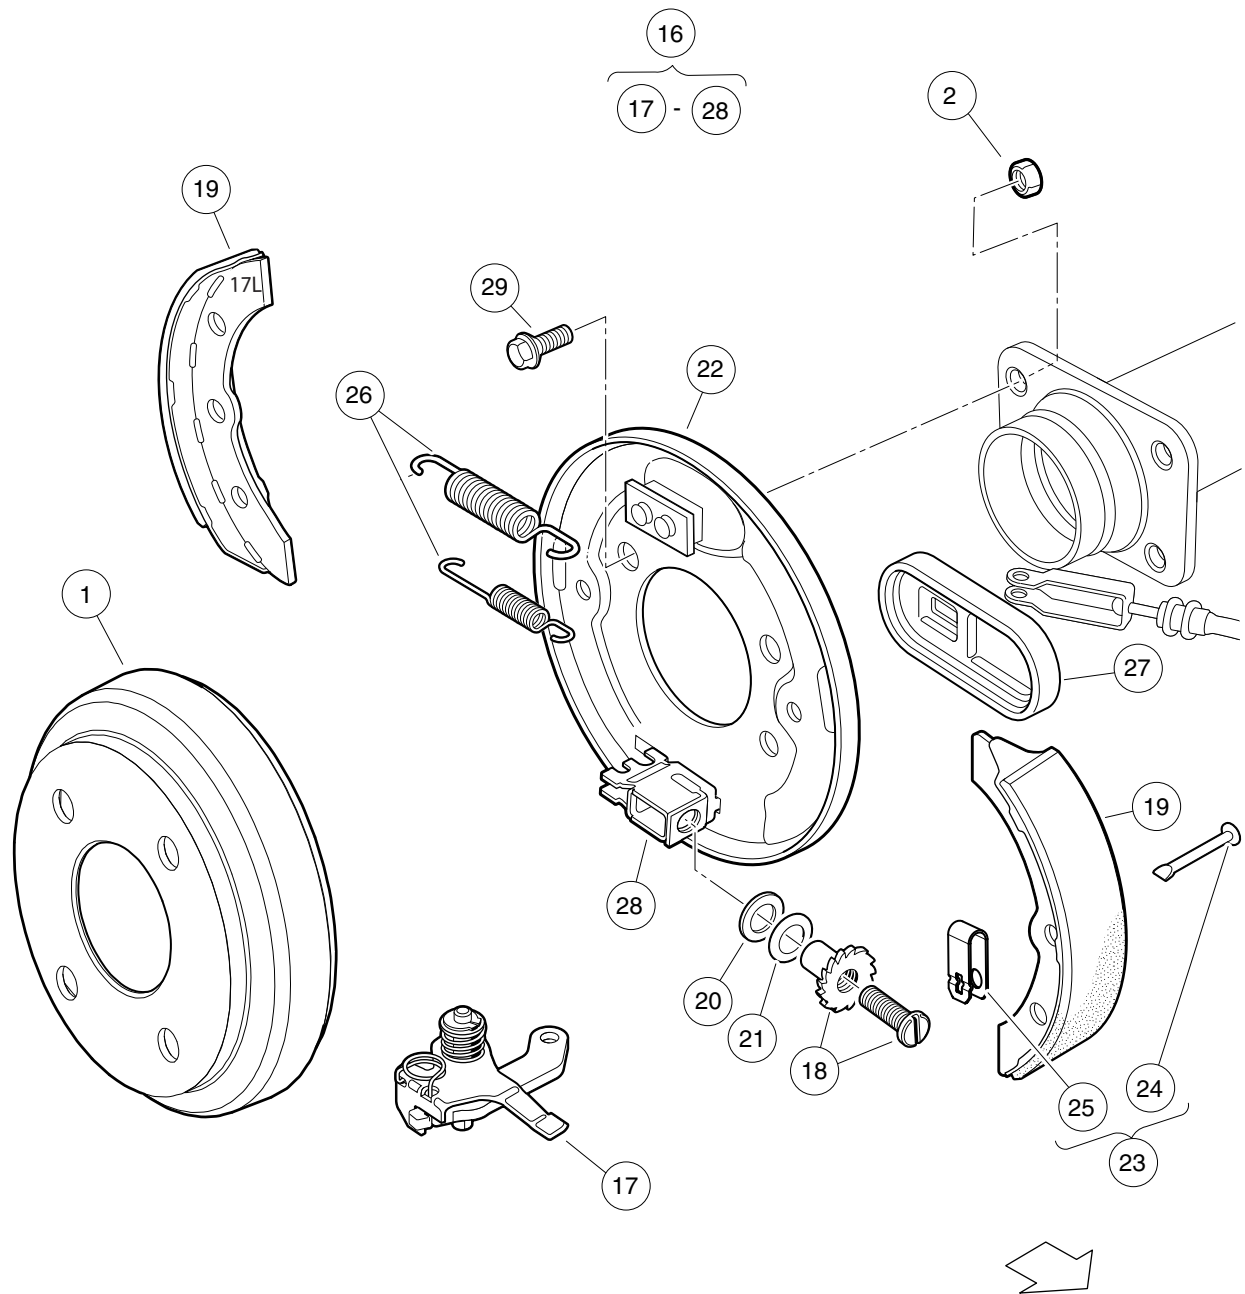

000186-007


REAR BRAKES, SELF-ADJUSTING – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1011137</u>	Drum, Brake	2	
2	<u>1013924</u>	Nut, 5/16-24, Hex Head Cone	8	
3	<u>103380201</u>	Asm, Brake Cluster, Mech, Drvr (includes items 4 through 15)	1	
4	<u>101815502</u>	Lever Assembly, Self-Adjusting Brake, Left	1	
5	<u>101816502</u>	Adjusting Mechanism, Self-Adjusting Brake, Left	1	
6	<u>101823201</u>	Package, Brake Shoe, Self-Adjusting	1	
7	<u>101823801</u>	Plate, Washer, Brake, Self-Adjusting	1	
8	<u>101823901</u>	Washer, Brake, Self-Adjusting	1	
9	<u>103483102</u>	Backing Plate, Driver-side	1	
10	<u>103483201</u>	Kit, Shoe Retainer (includes items 11 and 12)	1	
11	N/A	Pin	2	
12	N/A	Spring, Shoe, Clamp	2	
13	<u>103483401</u>	Package Brake Spring Self Adj	1	
14	<u>103483601</u>	Cover, Dust	1	
15	<u>103483701</u>	Brake Block	1	
16	<u>103380202</u>	Asm, Brake Cluster, Mech, Pass (includes items 17 through 28)	1	
17	<u>101815501</u>	Lever Assembly, Self-Adjusting Brake, Right (Passenger)	1	
18	<u>101816501</u>	Adj Mechanism, S.A. Brakes, Right (Passenger)	1	
19	<u>101823201</u>	Package, Brake Shoe, Self-Adjusting	1	
20	<u>101823801</u>	Plate, Washer, Brake, Self-Adjusting	1	
21	<u>101823901</u>	Washer, Brake, Self-Adjusting	1	
22	<u>103483101</u>	Backing Plate, Passenger-side	1	
23	<u>103483201</u>	Kit, Shoe Retainer (includes items 24 and 25)	1	
24	N/A	Pin	2	
25	N/A	Spring, Shoe, Clamp	2	
26	<u>103483401</u>	Package Brake Spring Self Adj	1	
27	<u>103483601</u>	Cover, Dust	1	
28	<u>103483701</u>	Brake Block	1	
29	<u>47542195001</u>	Bolt, Brake Cluster Mnt	8	
		Note: Driver-side brake cluster (items 4 -16) not shown. Components have a similar appearance to passenger-side brake cluster components.		

5

G

E

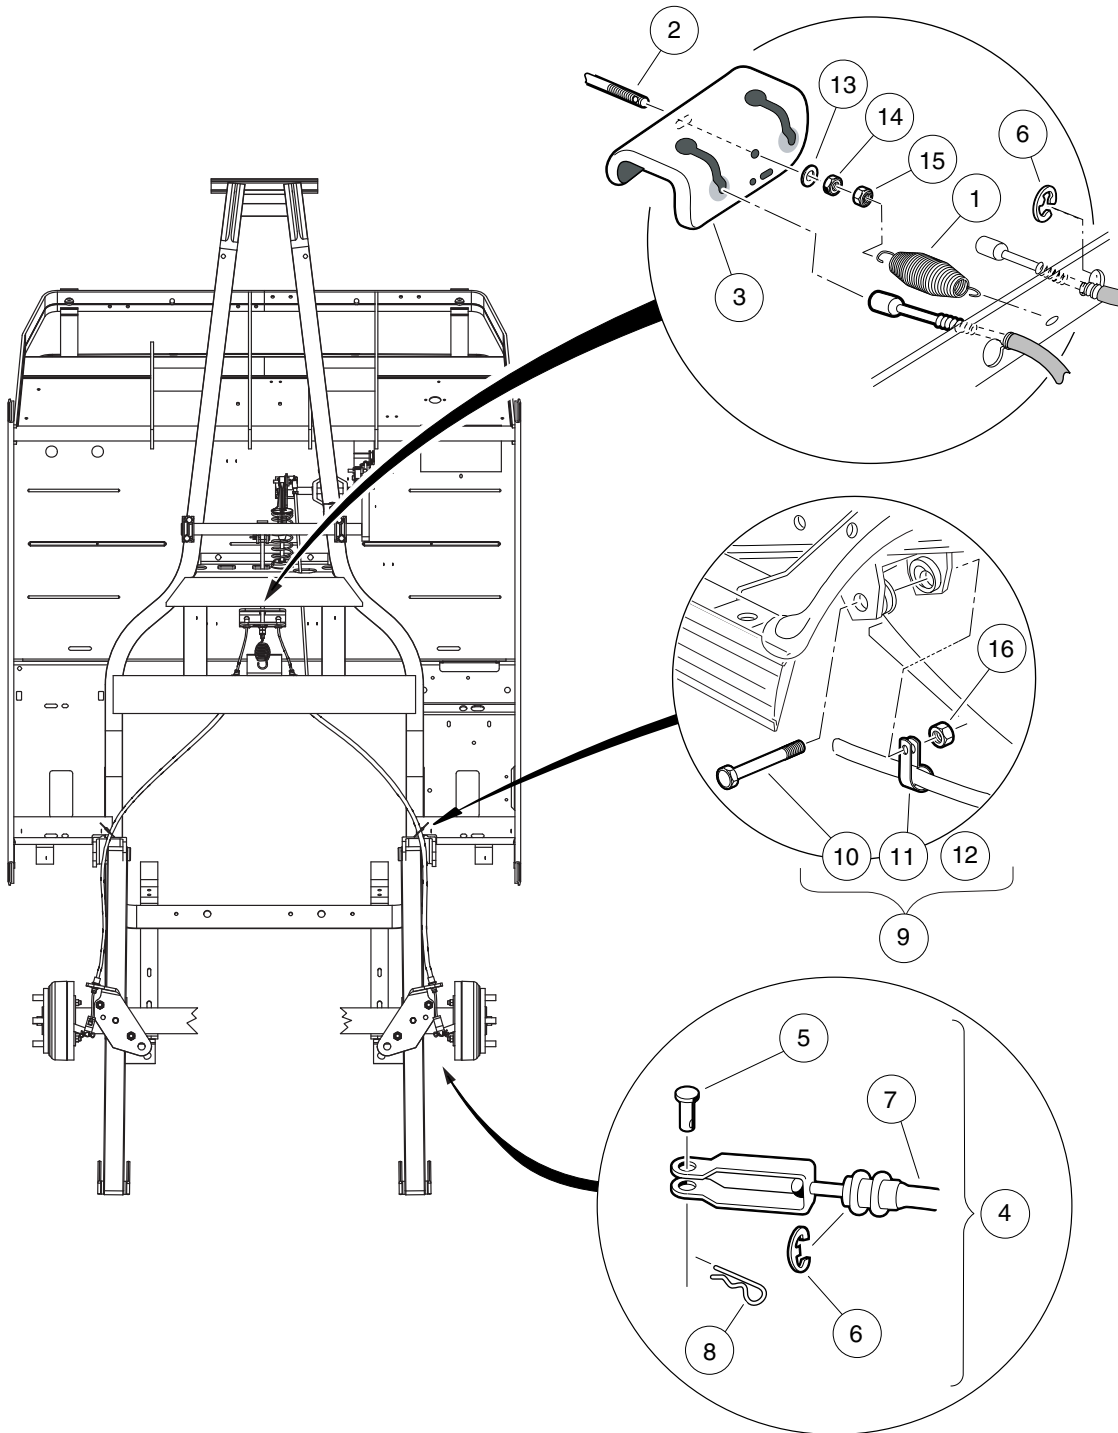

000245-002

BRAKE CABLES AND EQUALIZER

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1013531</u>	Spring, Brake Return	1	
2	<u>101953101</u>	Rod, Equalizer, 8.91"	1	
3	<u>101990801</u>	Equalizer Bracket	1	
4	<u>102022101</u>	Brake Cable Kit (includes items 5 through 8)	2	
5	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	1	
6	<u>1011779</u>	E-Clip, 1/2	2	
7	N/A	Cable, Brake, 41"	1	
8	<u>102292801</u>	Pin, Bow Tie Locking - .072	1	
9	<u>103377301</u>	Kit, Field P-clamp, Brake Line (includes items 10 through 12)	1	
10	<u>102066201</u>	Screw, 3/8-16 X 3.50 Hex Cap	2	
11	<u>103377201</u>	P-clamp, Brake Line	2	
12	N/A	Instr Fd. P-clamp, Brake Line	1	
13	<u>1241</u>	Washer, 5/16 Type A Flat	5	
14	<u>1242</u>	Nut, 5/16-18 Hex	1	
15	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	5	
16	<u>8754</u>	Locknut, 3/8-16 Hex	2	

5

G


E

STEERING AND SUSPENSIONS

6

G


E

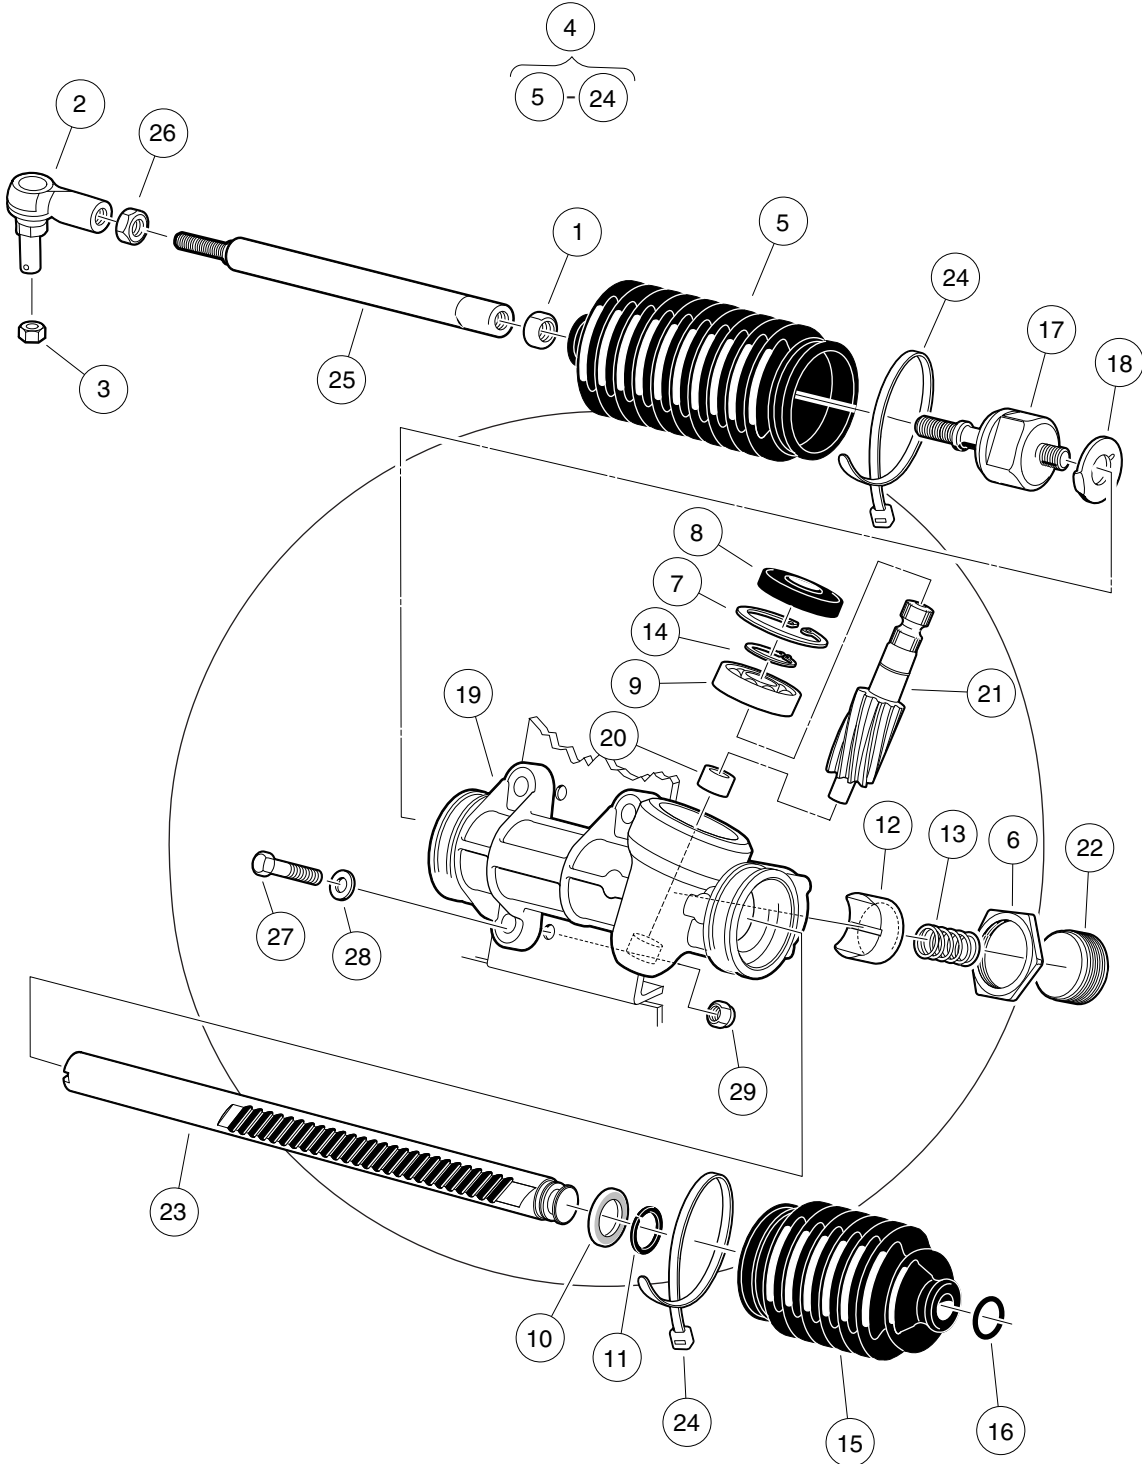6**G****E**

001500-002

STEERING GEAR ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	1013042	Nut, 12mm Hex	1	
2	<u>102022602</u>	End, Tie Rod, M12 X 1.25, Lh	1	
3	<u>102289201</u>	Nut - Hex Locking, M12 X 1.25	1	
4	<u>103601501</u>	Asm, Steering Rack And Pinion (includes items 5 through 24)	1	
5	<u>1013035</u>	Bellows, Long	1	
6	<u>1013044</u>	Rack Screw Locknut	1	
7	N/A	Snap Ring	1	
8	<u>1013052</u>	Seal, Steering Pinion Dust	1	
9	<u>101879401</u>	Bearing, Ball	1	
10	<u>101879501</u>	Stop Washer	1	
11	<u>101879601</u>	Stop Ring, C-Type	1	
12	<u>101879701</u>	Support Yoke	1	
13	<u>101879801</u>	Rack Guide Pressure Spring	1	
14	<u>101879901</u>	Ring, Stop, C-Type	1	
15	<u>101880001</u>	Bellows, Short	1	
16	<u>101880101</u>	Dust Seal Retaining Ring	1	
17	<u>101880201</u>	Inner Ball Joint Asm	1	
18	<u>101880301</u>	Washer, Tab	1	
19	N/A	Box, Steering Gear	1	
20	N/A	Bearing, Lower Pinion	1	
21	N/A	Pinion, Steering	1	
22	N/A	Screw, Rack Guide	1	
23	N/A	Rack, Steering	1	
24	<u>8990</u>	Tie Wrap, 8" Nylon	2	
25	<u>103653401</u>	Link, Drag, Male Thd	1	
26	<u>103653501</u>	Nut, Jam, M12-1.25, Lh	1	
27	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	3	
28	<u>334</u>	Washer, 3/8, Type A, Flat	3	
29	<u>8754</u>	Locknut, 3/8-16 Hex	3	

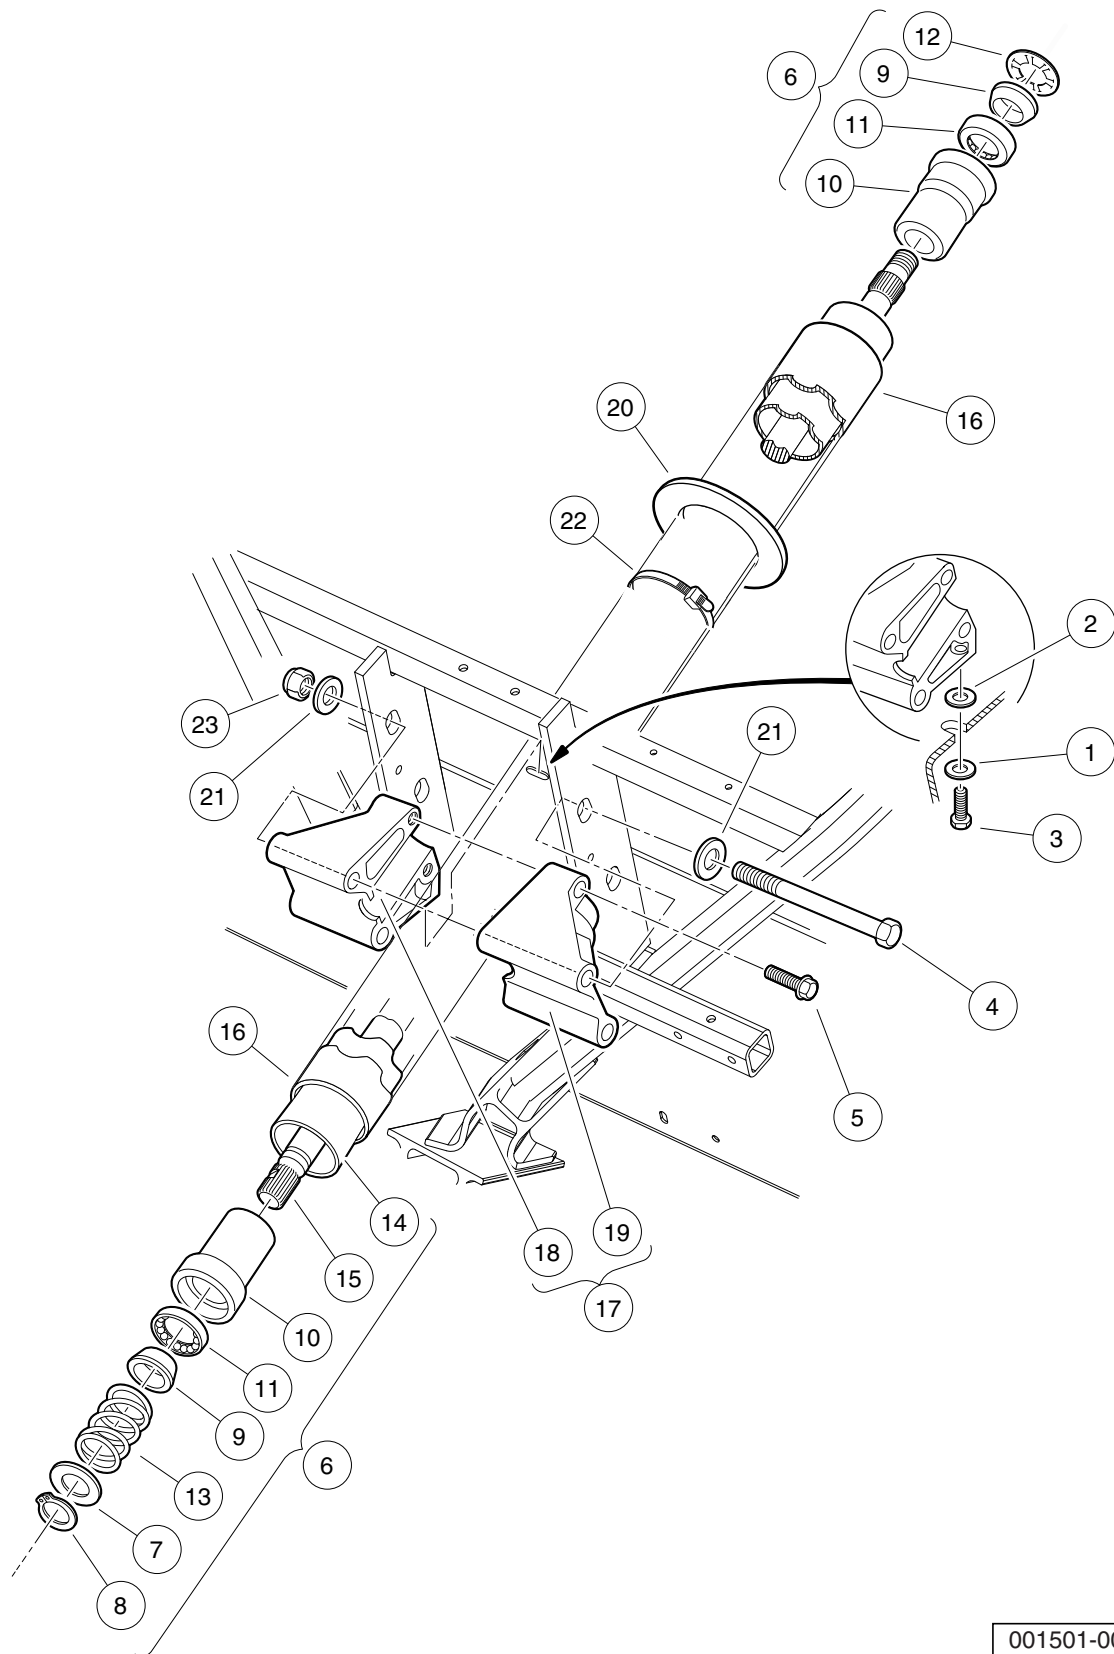

001501-001


STEERING COLUMN

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	<u>1011697</u>	Washer, 5/16 Flat	1	E
2	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	1	
3	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	1	
4	<u>1016183</u>	Screw, 3/8-16 X 7.00 Hex Cap	2	
5	<u>1016269</u>	Screw, 5/16-18 Thrd Forming	2	
6	<u>1017313</u>	Steering Shaft Assembly (includes items 7 through 15)	1	
7	<u>1012604</u>	Washer, 0.675 ID X 1.19 OD	1	
8	<u>1012605</u>	Ring, 0.579 Internal Retaining	1	
9	<u>1014125</u>	Wedge, Molded	2	
10	<u>1014126</u>	Seat, Plastic Bearing	2	
11	<u>1014213</u>	Bearing, Ball	2	
12	<u>1014214</u>	Ring, Retaining	1	
13	<u>1014217</u>	Spring, Steering Shaft	1	
14	<u>1017314</u>	Column, Aluminum Steering	1	
15	<u>1017315</u>	Shaft Steering Column	1	
16	<u>1017317</u>	Tube Cover, Steering Column	1	
17	101984801	Kit, Steering Column Mounting Bracket (includes items 18 and 19)	1	
18	N/A	Bracket, RH Steering Column Mount	1	
19	N/A	Bracket, LH Steering column mount	1	
20	<u>102278001</u>	Boot, Steering Column Round	1	
21	<u>334</u>	Washer, 3/8, Type A, Flat	4	
22	<u>8639</u>	Tie Wrap, 11" Nylon	1	
23	<u>8754</u>	Locknut, 3/8-16 Hex	2	

6

G

E

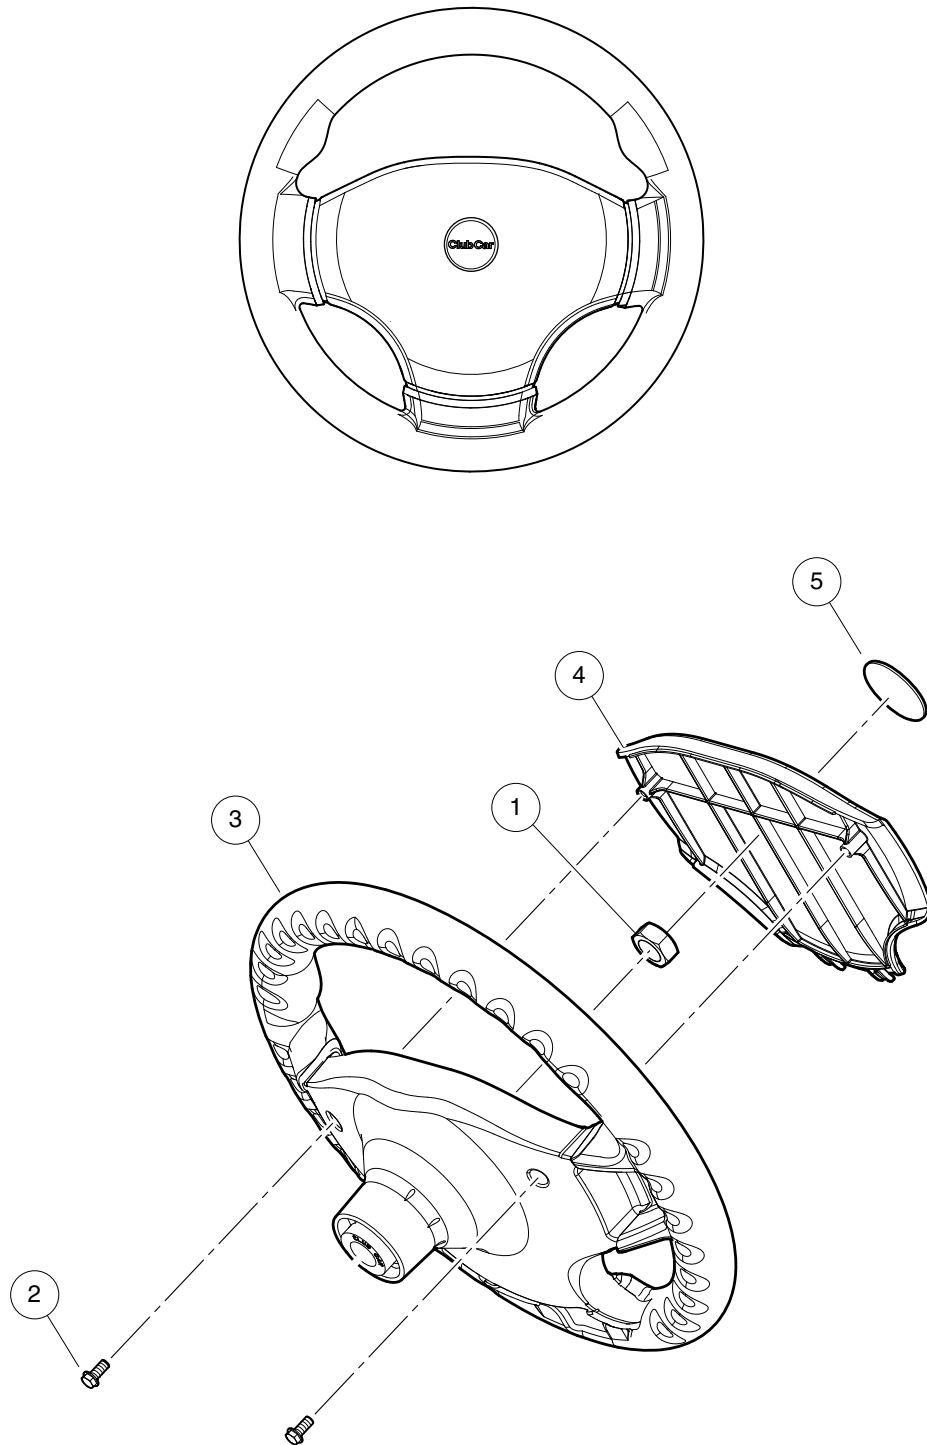

001503-001


STEERING WHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1017273	Nut, 5/8-18 Nylon Insert Jam	1
2	101850301	Screw, #12-16 X 0.50 Washer-Head Hi-Lo	2
3	103724504	Steering Wheel, Soft Spl	1
4	103724602	Cover, Steering Wheel, Generic	1
5	103829401	Logo, Cci, Steer Wheel	1

6

G


E

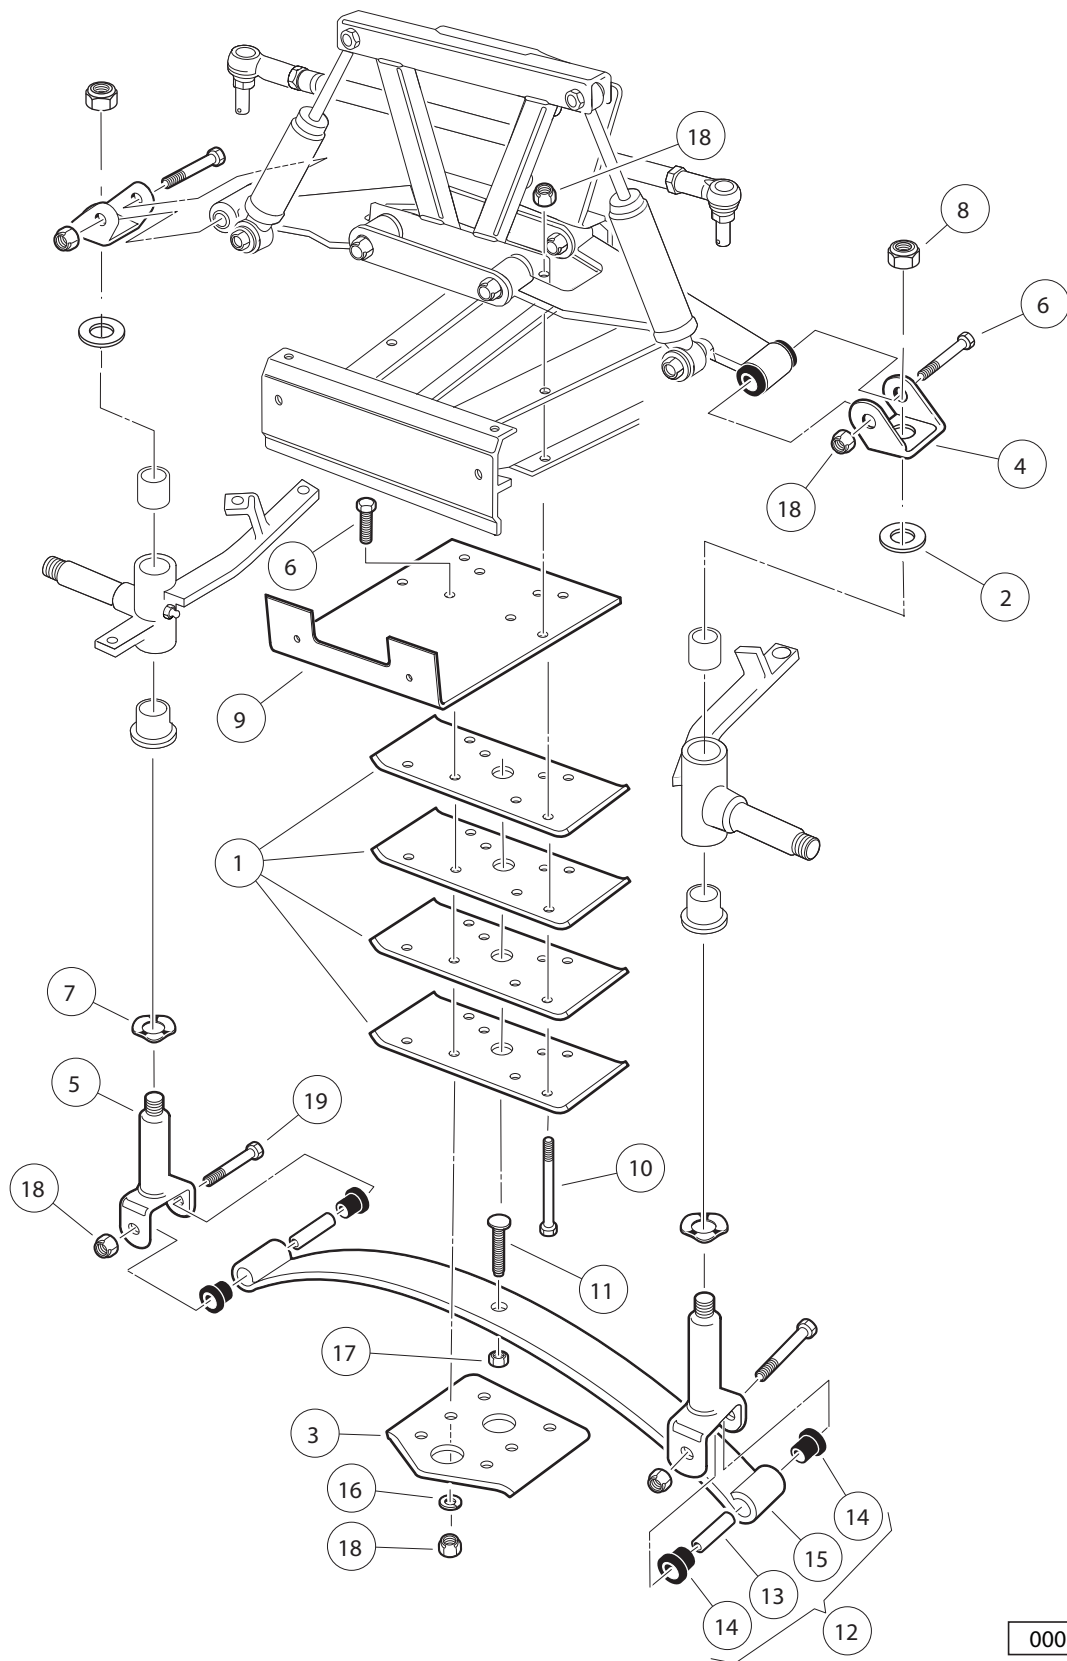6**G****E**

000191-005

FRONT SUSPENSION, LOWER – VEHICLES WITH TWO-WHEEL BRAKES


ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	<u>1010124</u>	Plate, Spring Mount	4	
2	<u>1010150</u>	Bearing, Thrust	2	
3	<u>1014276</u>	Plate, Front Spring Retainer	1	
4	<u>1016384</u>	Clevis, Delta Upper	2	
5	<u>1016386</u>	King Pin Assembly	2	
6	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	6	
7	<u>1016389</u>	Washer, 1.125 Od Wave	2	
8	<u>101903101</u>	Locknut, 1/2-20 Nylon Insert	2	
9	<u>102830401</u>	Support, Brush Guard	1	
10	<u>102913601</u>	Screw, 3/8-16 X 5.50 Hx Hd Cap	4	
11	<u>103507001</u>	Eccentric Bolt Common	1	
12	<u>103628701</u>	Spring Asm, Front, 1 Leaf (includes items 13 through 15)	1	
13	<u>1012303</u>	Bushing, Steel	2	
14	<u>101558302</u>	Bushing, Urethane, Soft	4	
15	<u>103502601</u>	Spring, Front, 1 Leaf	1	
16	<u>357</u>	Lockwasher, 3/8 Split	4	
17	<u>706</u>	Nut, Hex 3/8-16	1	
18	<u>8754</u>	Locknut, 3/8-16 Hex	8	
19	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2	

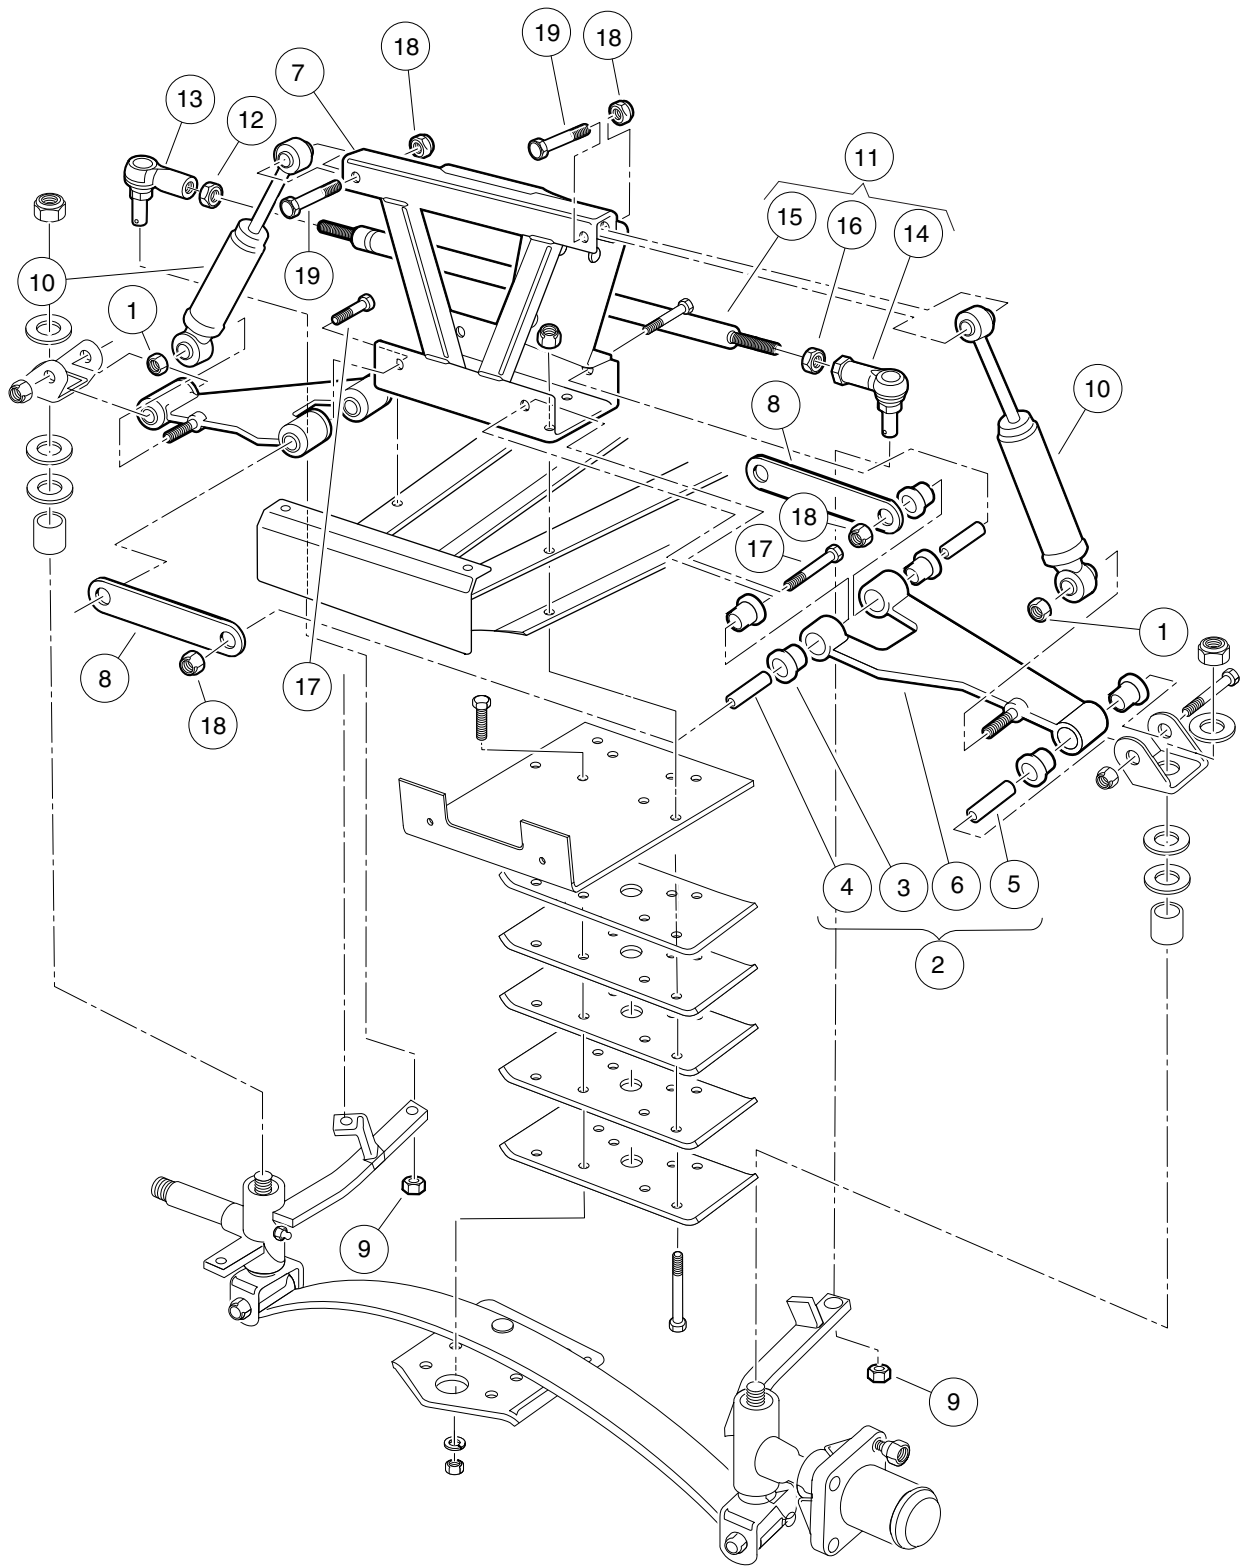6**G****E**

000190-002

FRONT SUSPENSION, UPPER

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2	E
2	<u>1016353</u>	Sub-Assembly, Delta A-Plate (includes items 3 through 6)	2	
3	<u>1016346</u>	Bushing, Urethane	6	
4	<u>1016349</u>	Sleeve, Delta Inner	2	
5	<u>1016350</u>	Sleeve, Delta Outer	1	
6	<u>1016351</u>	Delta A-Plate	1	
7	<u>1016385</u>	Delta Shock and Gear Support Assembly	1	
8	<u>1017266</u>	A-Plate Strap	2	
9	<u>102289201</u>	Nut - Hex Locking, M12 X 1.25	3	
10	<u>103351001</u>	Shock Absorber, Front, Common	2	
11	<u>103653601</u>	Asm, Tie Rod (includes items 12 through 16)	1	
12	<u>1013042</u>	Nut, 12mm Hex	1	
13	<u>102022601</u>	End, Tie Rod M12 X 1.25 Rh	1	
14	<u>102022602</u>	End, Tie Rod, M12 X 1.25, Lh	1	
15	<u>103354701</u>	Rod, Tie, Male Thd	1	
16	<u>103653501</u>	Nut, Jam, M12-1.25, Lh	1	
17	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4	
18	<u>8754</u>	Locknut, 3/8-16 Hex	13	
19	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	2	

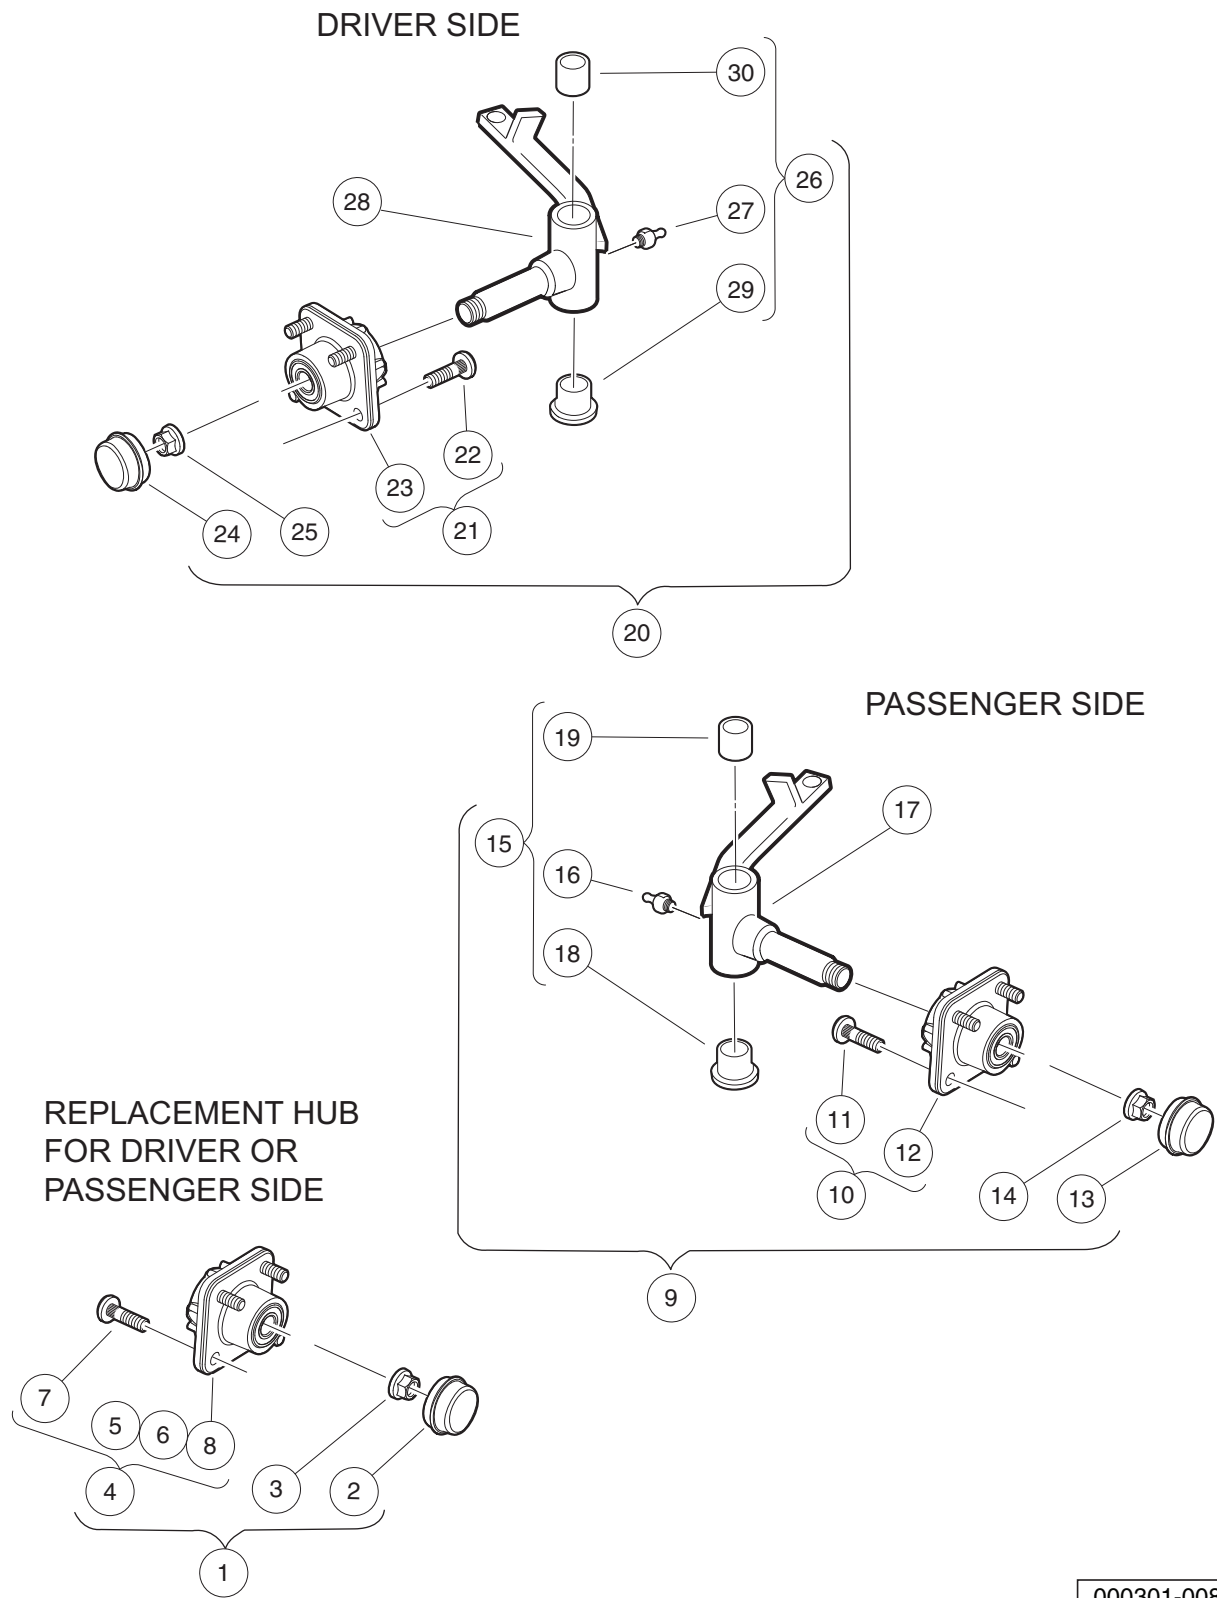


000301-008

FRONT SPINDLES AND HUBS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102357701</u>	Replacement Kit, Front Hub (includes items 2 through 4)	1
2	<u>102353201</u>	Cap, Front Hub	1
3	<u>102353301</u>	Hex Nut, Locking Flange, M14x2	1
4	N/A	Asm, Front Hub, Bb, Long Stud (includes items 5 through 8)	1
5	N/A	Bearing, Ball, 6204	2
6	N/A	Spacer, Bearing, Front Hub, Pm	1
7	<u>103477901</u>	Lug Stud, 1/2-20 Unf, 4037	4
8	N/A	Front Hub, Ball Brg, Long Stud	1
9	N/A	Asm, Hub And Spindle, Left-Hand Ext (includes items 10 through 15)	1
10	N/A	Front Hub Assembly, Ball Bearing (includes items 11 and 12)	1
11	<u>102353401</u>	Lug Stud, 1/2-20 UNF, 4037 Stl	4
12	N/A	Hub, Front	1
13	<u>102353201</u>	Cap, Front Hub	1
14	<u>102353301</u>	Hex Nut, Locking Flange, M14x2	1
15	<u>102354204</u>	Asm, Spindle, LH, Ext (includes items 16 through 19)	1
16	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1
17	N/A	Subasm, Spindle, LH, Ext	1
18	<u>7048</u>	Bushing, Flanged Bronze	1
19	<u>8067</u>	Bushing, Bronze Spindle	1
20	N/A	Asm, Hub And Spindle, Right-Hand Ext (includes items 21 through 26)	1
21	N/A	Front Hub Assembly, Ball Bearing (includes items 22 and 23)	1
22	<u>102353401</u>	Lug Stud, 1/2-20 UNF, 4037 Stl	4
23	N/A	Hub, Front	1
24	<u>102353201</u>	Cap, Front Hub	1
25	<u>102353301</u>	Hex Nut, Locking Flange, M14x2	1
26	<u>102354104</u>	Asm, Spindle, RH, Ext (includes items 27 through 30)	1
27	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1
28	N/A	Subasm, Spindle, RH, Ext	1
29	<u>7048</u>	Bushing, Flanged Bronze	1
30	<u>8067</u>	Bushing, Bronze Spindle	1

6
G
E

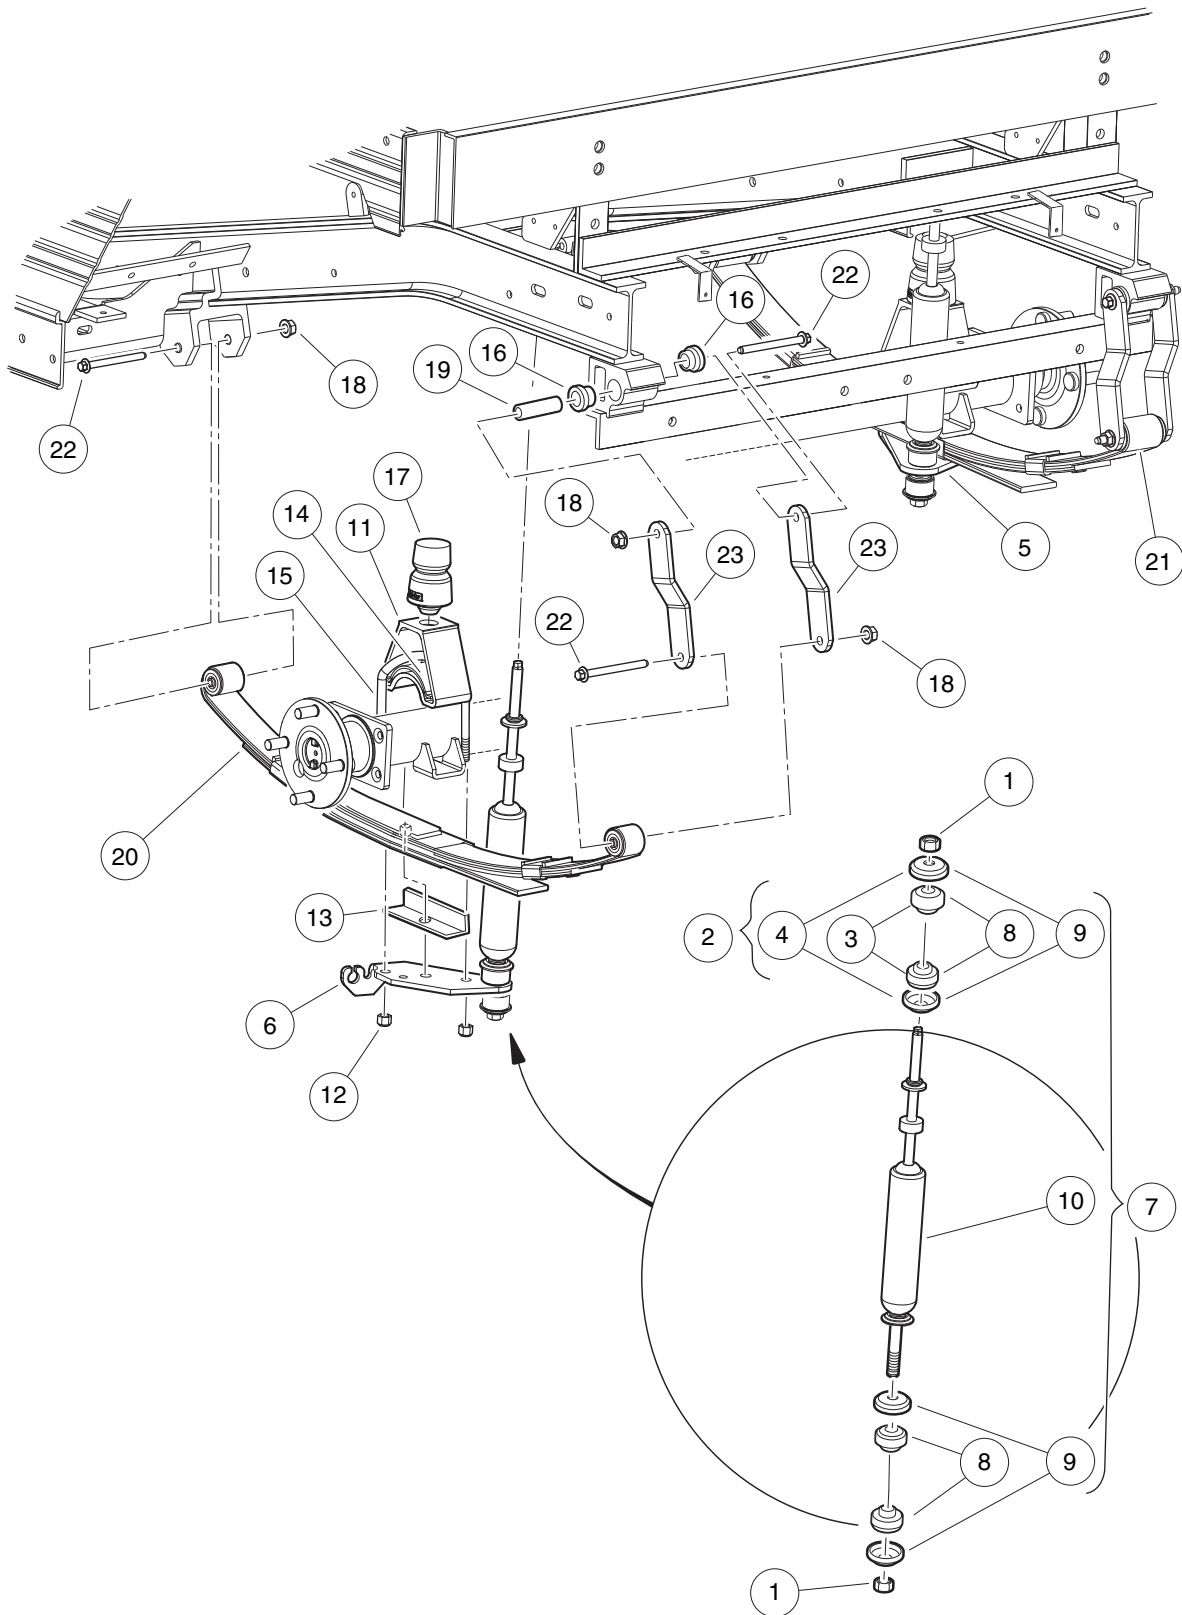6**G****E**

001522-001

REAR SUSPENSION COMPONENTS

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	<u>1010145</u>	Nut, 3/8-24 Hex	4	E
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4	
3	N/A	Retainer, Shock Absorber Cushion	2	
4	<u>47579096001</u>	Isolator, Shock Damper	2	
5	<u>1012181</u>	Bracket, Shock Mounting, Right (Passenger)	1	
6	<u>1012182</u>	Bracket, Shock Mounting, Left (Driver)	1	
7	<u>1013164</u>	Shock Absorber Kit (includes items 8 through 10)	1	
8	N/A	Cushion, Shock Absorber	8	
9	N/A	Retainer, Shock Absorber Cushion	8	
10	<u>102706401</u>	Shock Absorber Rear	2	
11	<u>101454602</u>	Bumper Mount	2	
12	<u>1014555</u>	Locknut, 7/16-14 Nylon Hex	4	
13	<u>1014573</u>	Spring Retainer	2	
14	<u>1014901</u>	Spacer, Overload Bumper	2	
15	<u>1014902</u>	U-Bolt	2	
16	<u>101558302</u>	Bushing, Urethane, Soft	4	
17	<u>1017235</u>	Bumper, Jounce	2	
18	<u>102298401</u>	Nut,m8,all Metal Lock	6	
19	<u>102506401</u>	Sleeve - Spring Eye Mounts	2	
20	<u>105186001</u>	Asm, Spring 260lb Nr Light, Lh	1	
21	<u>105186002</u>	Asm, Spring 260lb Nr Light, Rh	1	
22	<u>105188185</u>	Bolt, M8x85mm,10.9 Grade	6	
23	<u>105188201</u>	Shackle,Steel Standard,M8	4	
Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the shock mounting bracket (RH-1012181 and LH-1012182).				

6

G

E


ELECTRICAL SYSTEM – GASOLINE VEHICLES

7

G

7

G

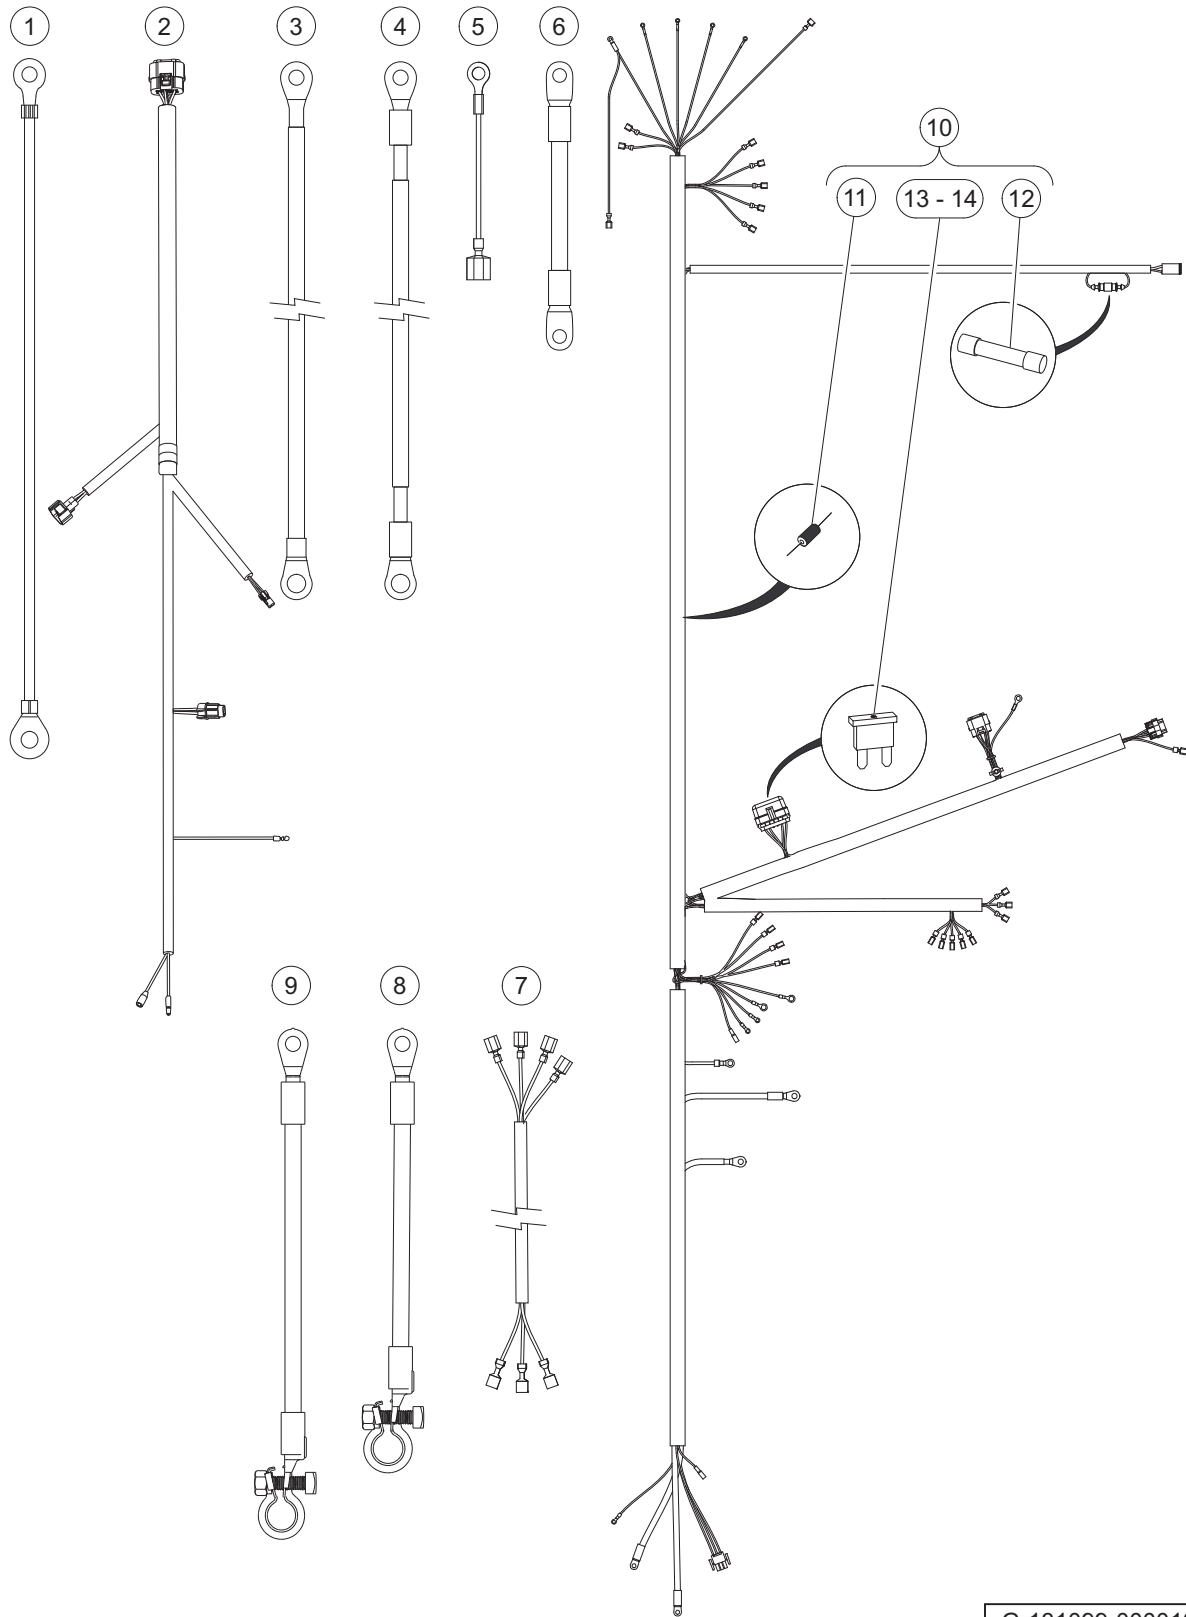


G-131099-000019

WIRING, FUSES, AND DIODES, PEDAL-START – EFI

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015332</u>	Wire, Ground, #10, Uninsulated	1
2	<u>105008101</u>	Harness, Wire, ECU/Engine	1
3	<u>105135901</u>	Wire, Battery (side-post), B-, Gas	1
4	<u>105136001</u>	Wire, Battery (side-post), B+, Gas	1
5	<u>105143301</u>	Wire, Ground, Fuel Tank	1
6	<u>105161701</u>	Wire, 4-Ga, Green, Starter/Generator	1
7	105245701	Jumper, Run/maint, Sw	1
8	105256701	Wire Assy, 4ga, Battery, (top-post) B-, Gas	1
9	<u>105256801</u>	Wire Assy, 4ga, Battery, (top-post) B+, Gas	1
10	47612539001	Harness, Main, Gas, Ca100, Ps (includes items 11 through 14)	1
11	<u>1014789</u>	Diode, General Purpose, 3.0-Amp	1
12	<u>103924801</u>	Fuse, Glass, 2-Amp	1
13	105081501	Fuse, ATM, 5-Amp	1
14	105081601	Fuse, ATM, 10-Amp	1
Note: For ECU, see Throttle Body in Fuel System section.			

7
G

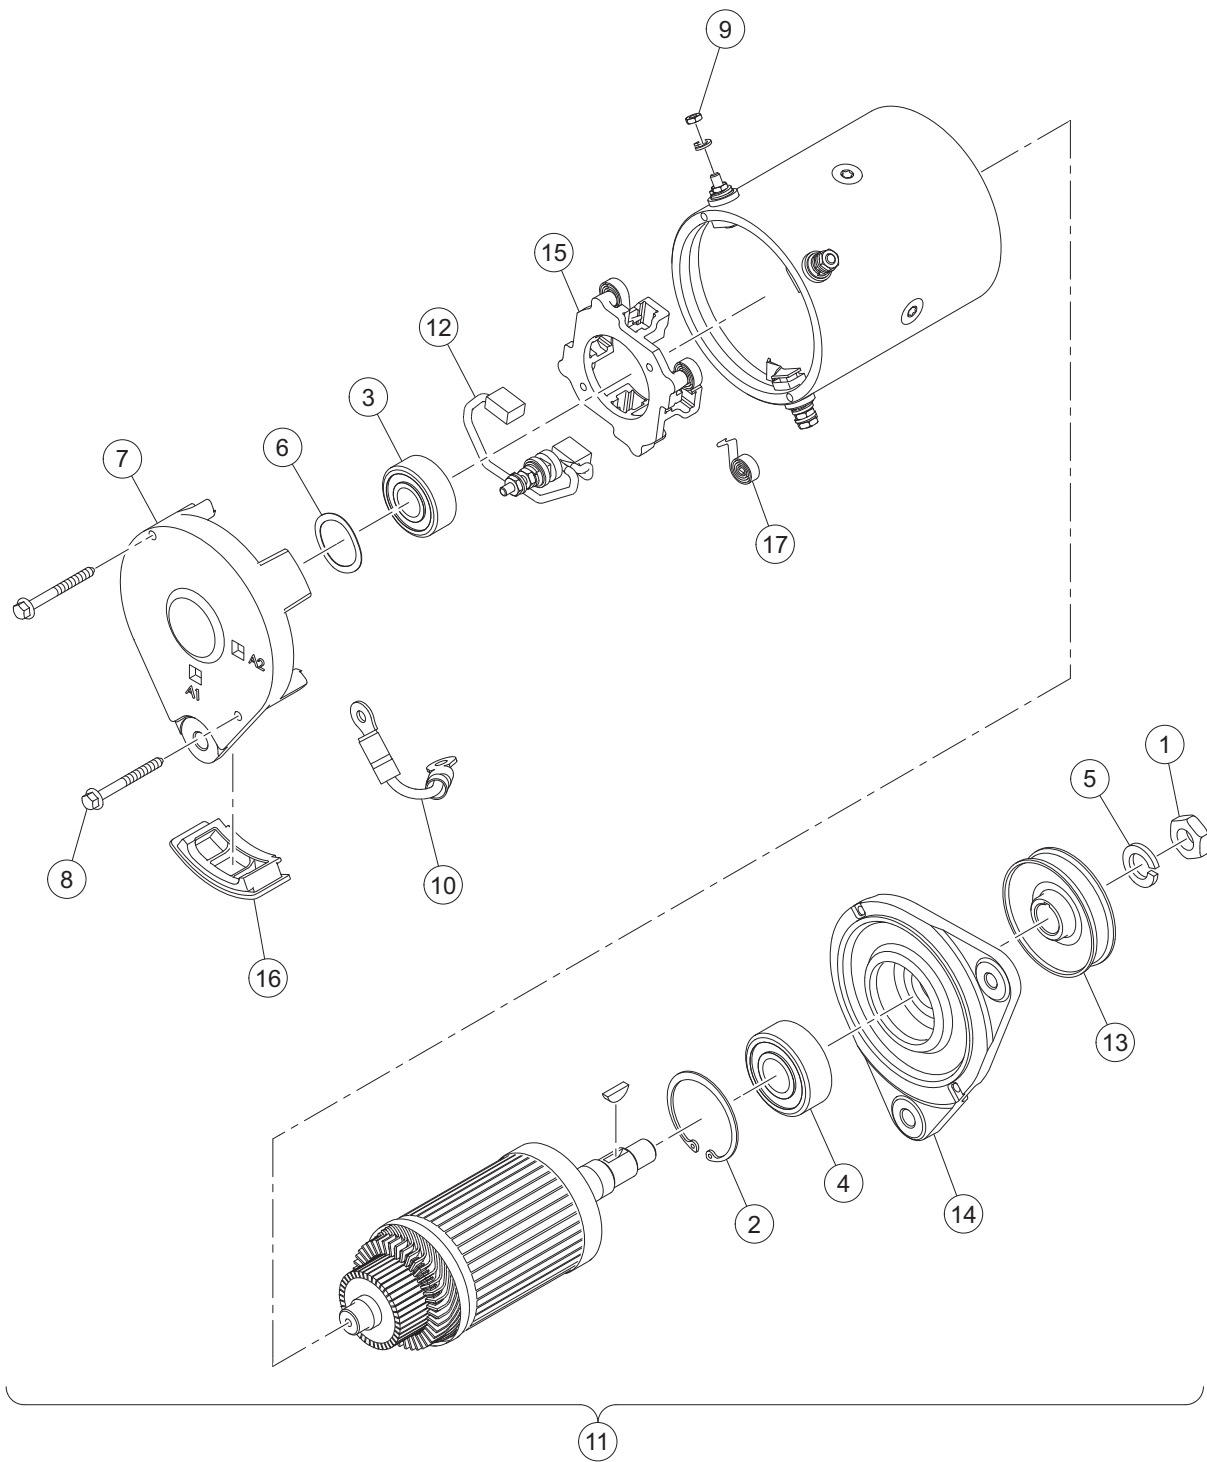


G-130199-000005

STARTER/GENERATOR (MODEL 114-05-4001) – EFI

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102838701</u>	Nut, Hex, M14x2, S/G	1
2	<u>102838801</u>	Retainer, Front, S/G	1
3	<u>102838901</u>	Bearing, Ball, Rear, S-g	1
4	<u>102839001</u>	Bearing, Ball, Front, S-g	1
5	<u>102839301</u>	Washer, Lock M14x2, S-g	1
6	<u>102841101</u>	Washer, Wave, S-g	1
7	<u>103347601</u>	Head, Comm End, S-g	1
8	<u>103347701</u>	Set, Fast, Ceh Deh, S-g	1
9	<u>103347801</u>	Set, Term Hardware, S/G	1
10	<u>105161701</u>	Wire, 4-Ga, Green, Starter/Generator	1
11	<u>47559475001</u>	Starter Generator, Ps	1
12	<u>47583000001</u>	Set, Brush Term, S-g	1
13	<u>47583790001</u>	Pulley, Starter-generator	1
14	<u>47583791001</u>	Head, Drive End, S-g	1
15	<u>47583794001</u>	Kit, Brush And Brush Holder	1
16	<u>47584178001</u>	Kit, Cover, Brush Insp, S-g	1
17	<u>47584179001</u>	Kit, Spring Brush, S-g	1
Note: Item 16 contains four (4) brush covers. Item 17 contains four (4) spring brushes.			




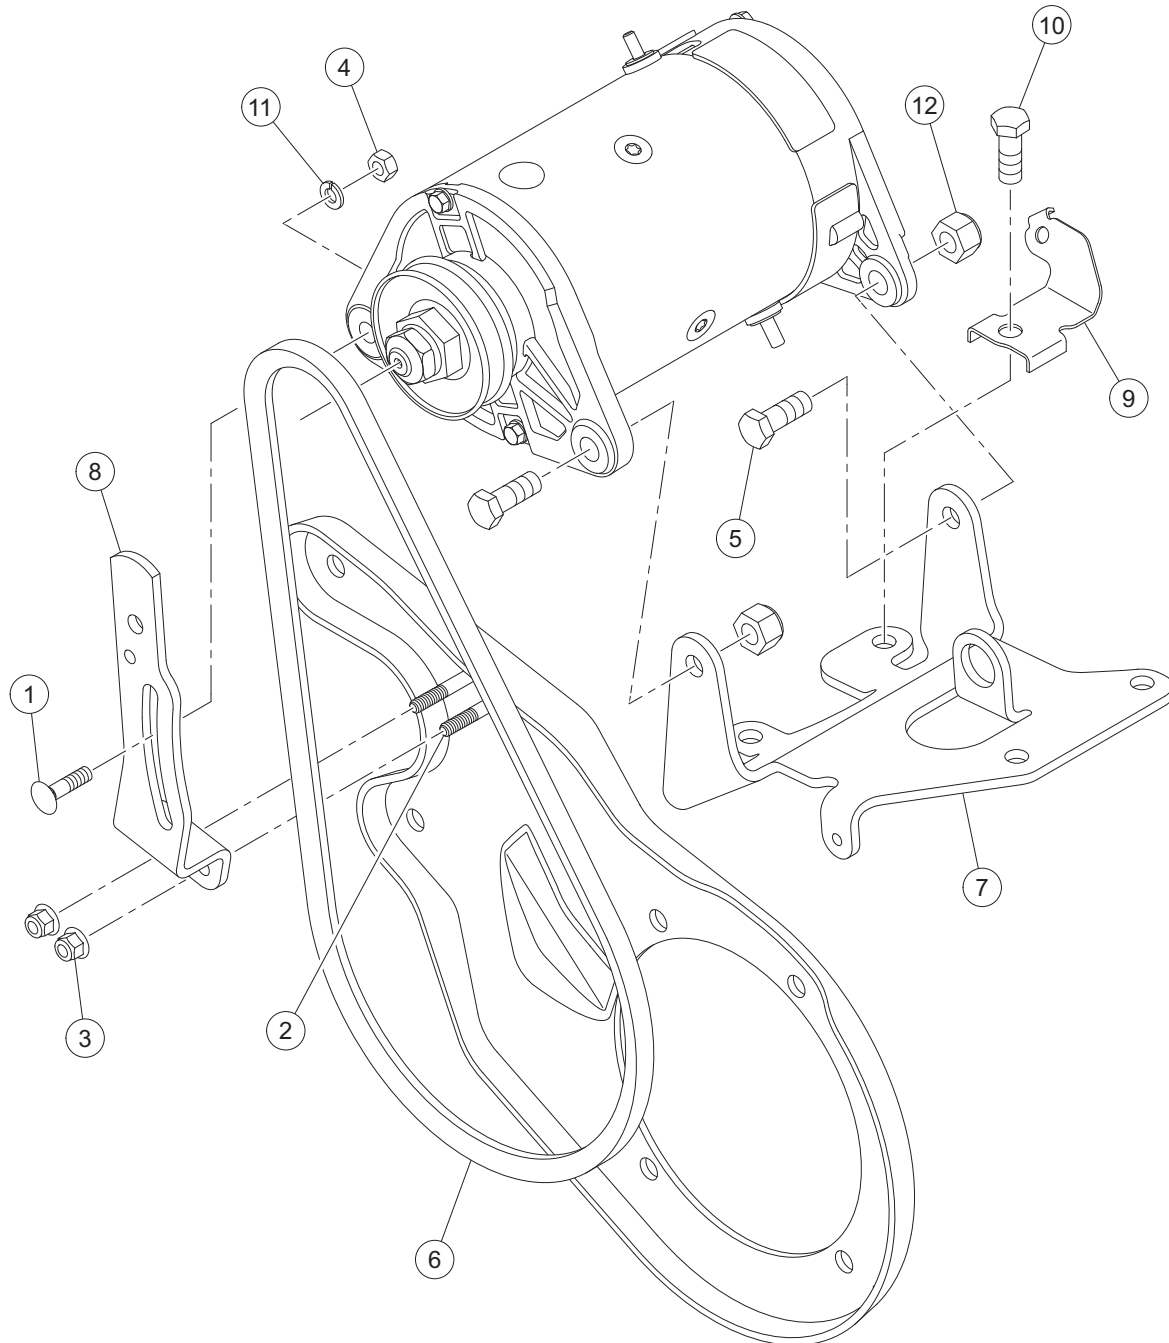

G-130199-000002

STARTER/GENERATOR MOUNTING – ECH440

ITEM	PART NO.	DESCRIPTION	QTY	7
		1 2 3 4		G
1	<u>1015932</u>	Bolt, Carriage, 5/16-18	1	
2	<u>102541401</u>	Bolt-m6x1.0x20 Hex Flhd Blk-I	2	
3	<u>102621501</u>	Nut, Flange, M6 X 1.0, Nylon	2	
4	<u>1242</u>	Nut, 5/16-18 Hex	1	
5	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	2	
6	47539338002	Belt, Sg, Ech440, #5a	1	
7	47611868001	Bracket, Mounting, S/g	1	
8	47611869001	Bracket, Tensioner, S/g	1	
9	47611870001	Bracket, Mtg, Gov Cable Clip	1	
10	47617345001	Screw, M8-1.25x20, Hex Hd Flg	4	
11	<u>7174</u>	Lockwasher, 5/16 Split	1	
12	<u>8754</u>	Locknut, 3/8-16 Hex	2	

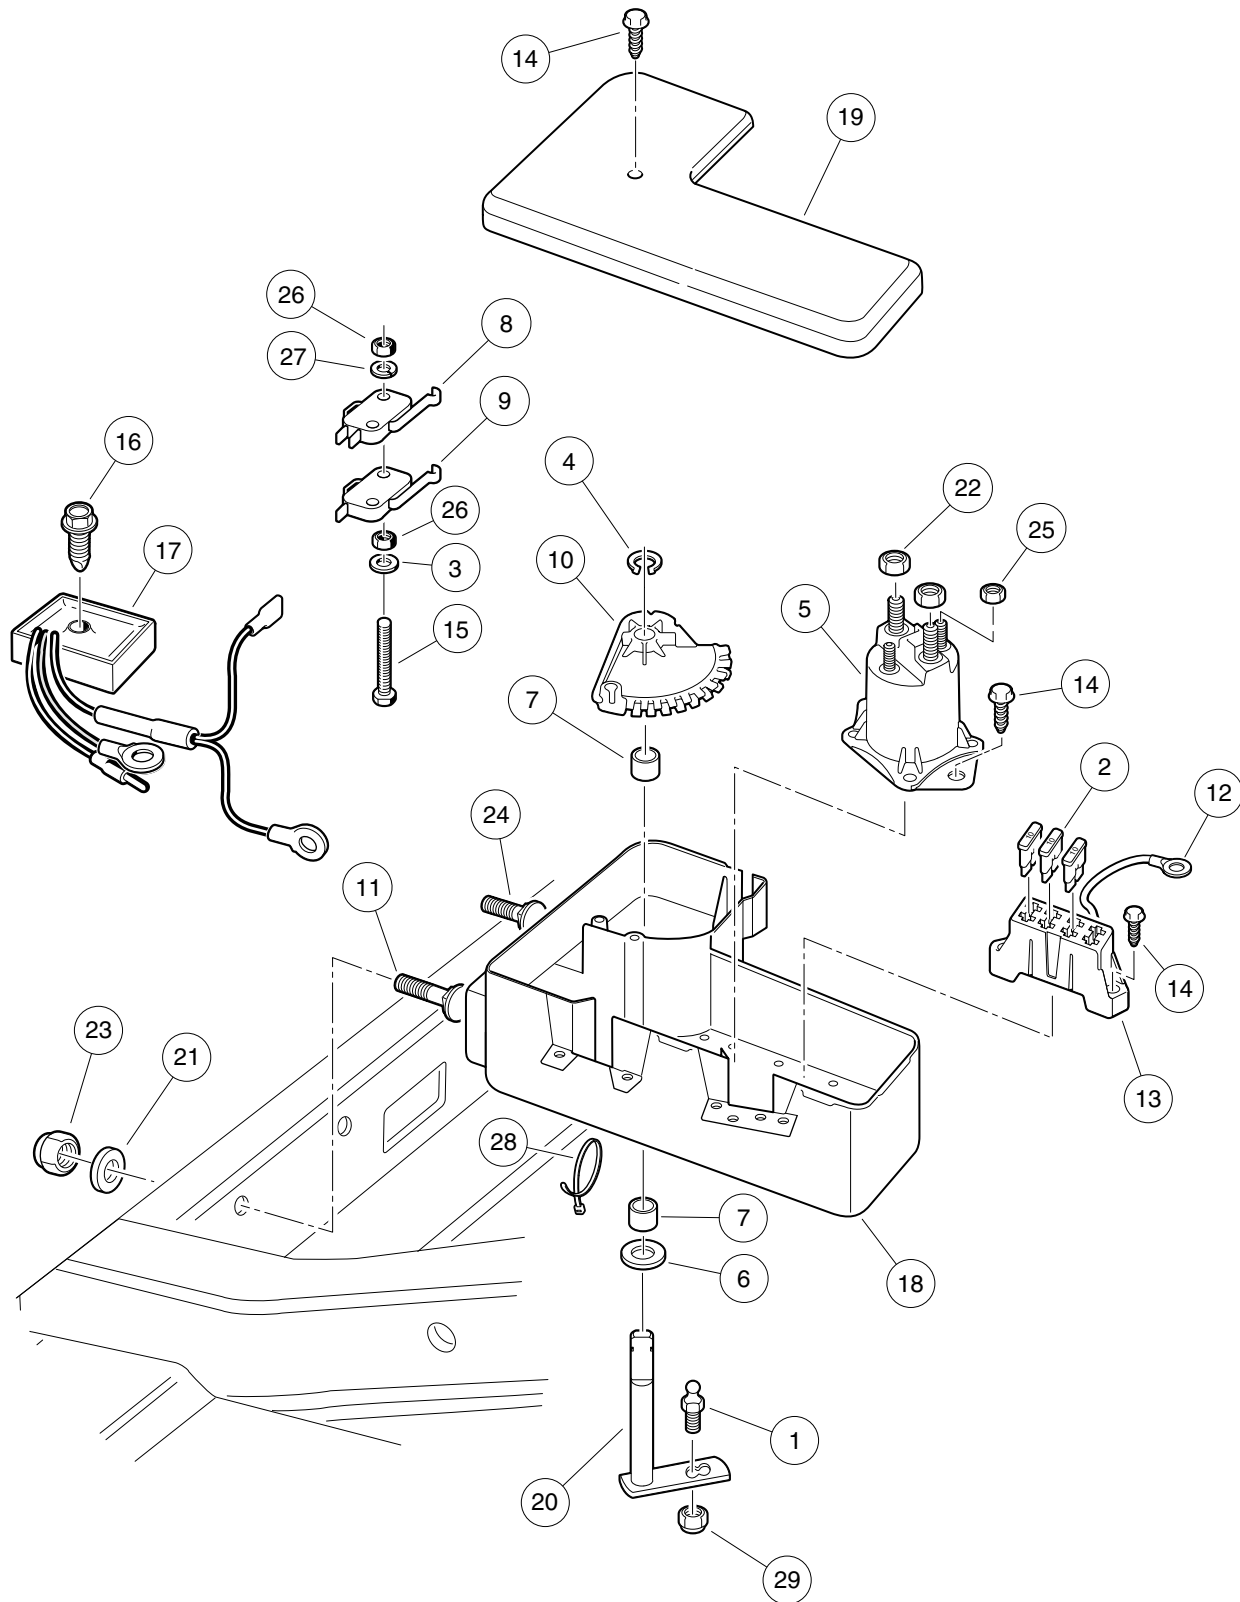

001014-001

ELECTRICAL COMPONENT BOX, PEDAL-START



ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010954</u>	Stud, Ball, 1/4-28 X 0.560	1
2	<u>1012295</u>	Fuse, 10-Amp	3
3	<u>1012431</u>	Washer, #4 Flat	2
4	<u>1013589</u>	Ring, Retaining, 0.338" Internal	1
5	<u>1013609</u>	Solenoid, 12-Volt	1
6	<u>1014065</u>	Washer, Flat, 0.38" ID, Delrin	1
7	<u>1014145</u>	Bushing, Secondary Weight, Split	2
8	<u>1014807</u>	Switch, Limit	1
9	<u>1014808</u>	Switch, Limit	1
10	<u>1015373</u>	Cam, Electric Box	1
11	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	1
12	<u>1015737</u>	Wire Assy, #10 Red	1
13	<u>1015741</u>	Fuse Block	1
14	<u>1015752</u>	Screw, #12-16 X 0.625, Hi-Lo	5
15	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2
16	<u>101856102</u>	Screw, 1/4-15 X 1.50, Hi-lo, Hex	1
17	<u>102711201</u>	Voltage Regulator	1
18	<u>105000301</u>	Box, Component, Electrical	1
19	<u>105000401</u>	Cover, Box, Component, Elec	1
20	<u>105037401</u>	Weldment, Bellcrank, Comp Box	1
21	<u>1241</u>	Washer, 5/16 Type A Flat	2
22	<u>1242</u>	Nut, 5/16-18 Hex	2
23	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
24	<u>7818</u>	Bolt, Carriage, 5/16-18 X 1.5	1
25	<u>7893</u>	Nut, #10-32 Hex	2
26	<u>8057</u>	Nut, #4-40 Hex Machine	4
27	<u>8058</u>	Lockwasher, #4 Split	2
28	<u>8639</u>	Tie Wrap, 11" Nylon	6
29	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1

7

G

7

G

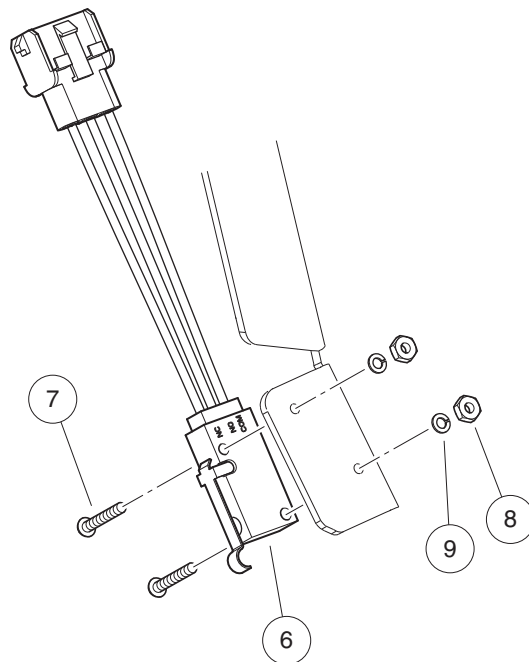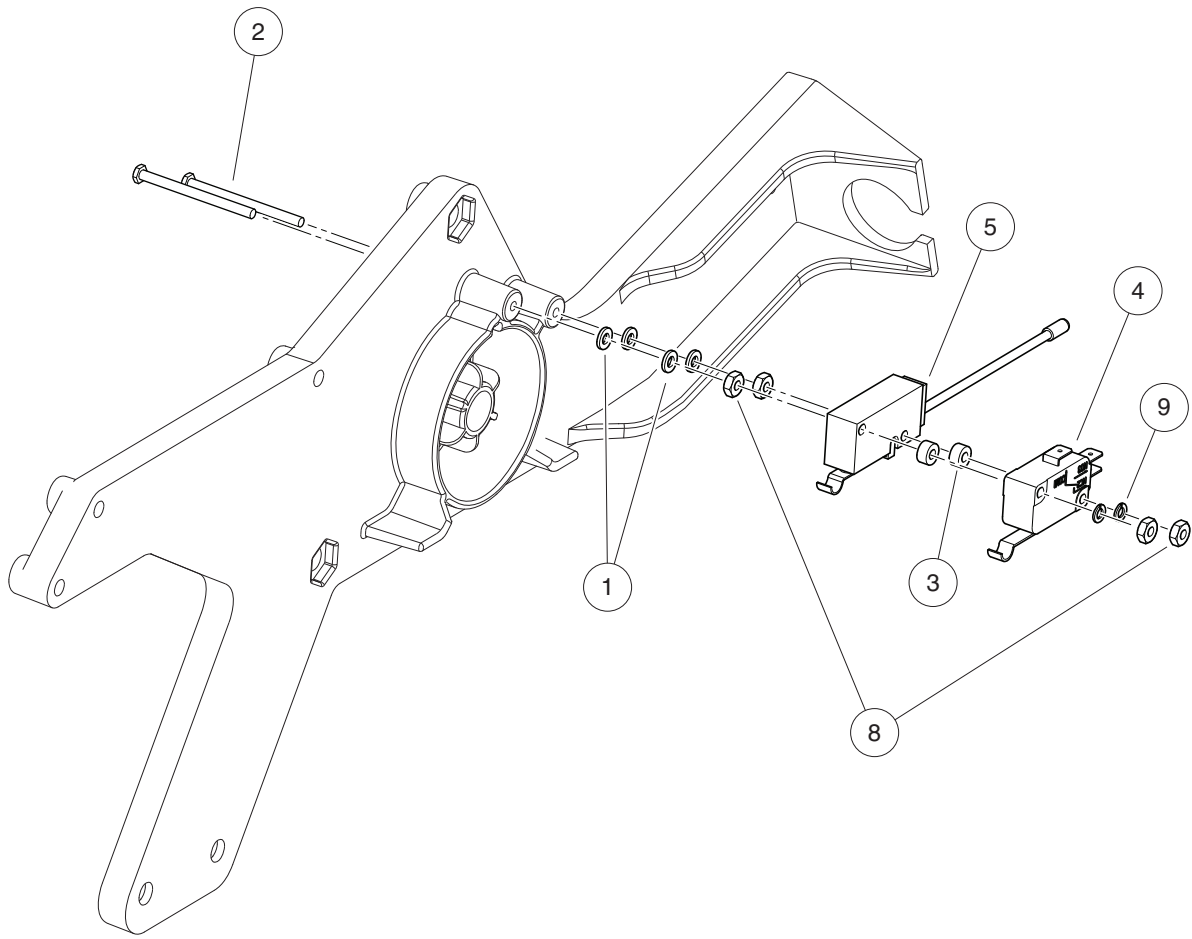


001013-001

FORWARD/REVERSE SHIFTER SWITCHES, PEDAL-START – EFI, CA100

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012431	Washer, #4 Flat	4
2	<u>1012594</u>	Screw, #4-40 Machine	2
3	<u>1014727</u>	Washer, Flat, #4, Nylon	2
4	<u>1014807</u>	Switch, Limit	1
5	<u>101979101</u>	Switch, Limit, Assembly, Sealed	1
6	<u>105102601</u>	Switch, Limit, Sealed, with 3-Wire Lead	1
7	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2
8	<u>8057</u>	Nut, #4-40 Hex Machine	6
9	<u>8058</u>	Lockwasher, #4 Split	4

7

G

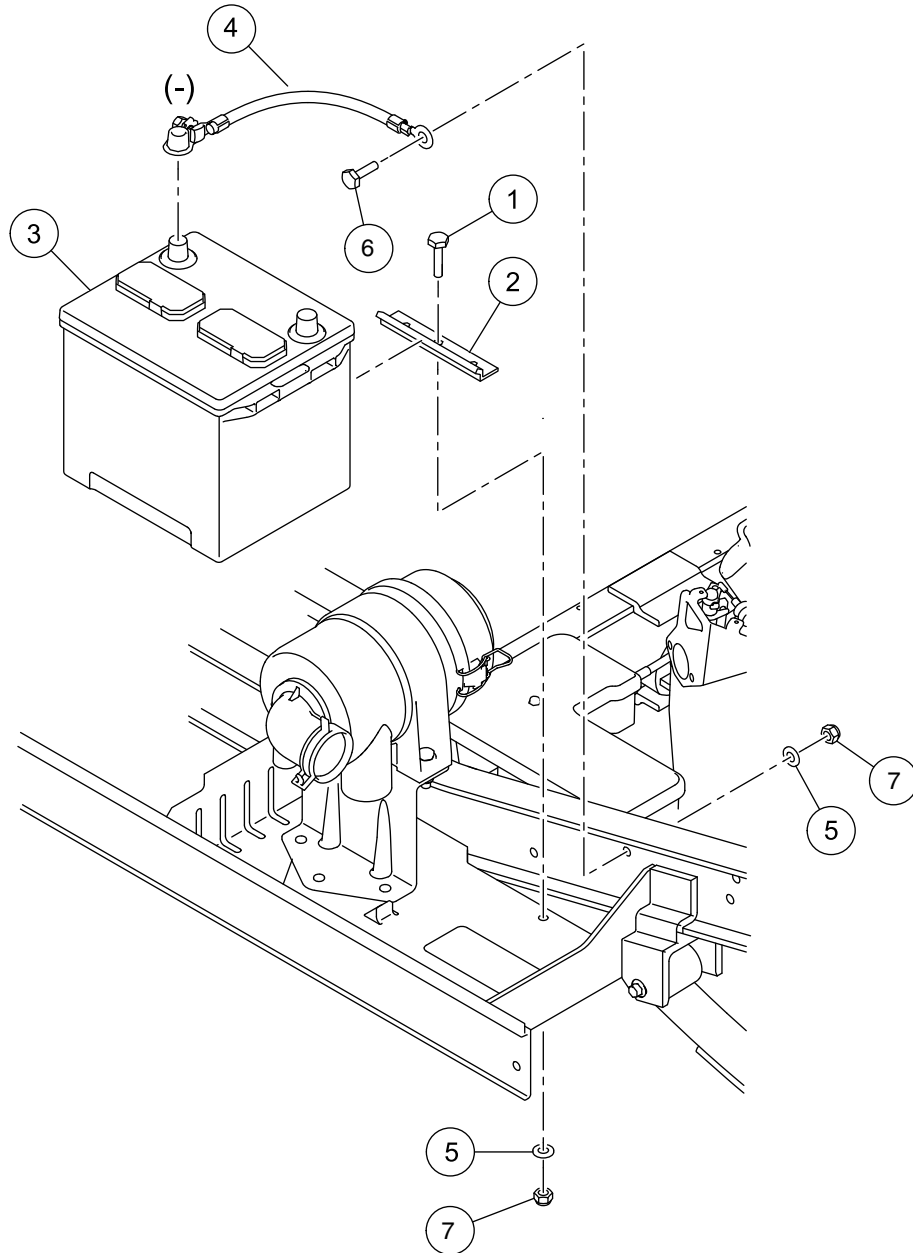

000250-001

TOP-POST BATTERY – GASOLINE UTILITY VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	7
		1 2 3 4		G
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1	
2	<u>101898001</u>	Clamp, Battery	1	
3	<u>105237399</u>	Battery, Start, 12v, G 26, Sp	1	
4	<u>105256701</u>	Wire Assy, 4ga, Battery, (top-post) B-, Gas	1	
5	<u>1241</u>	Washer, 5/16 Type A Flat	2	
6	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1	
7	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	


7

G


ENGINE (KOHLER ECH440)

8

G

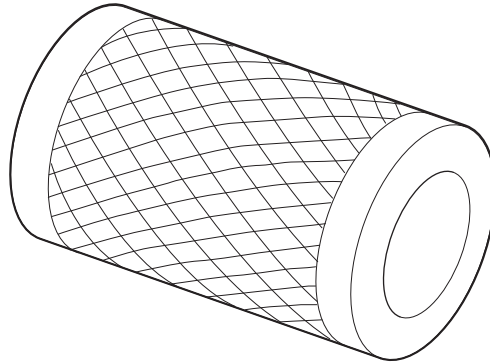

1




2

000992-003

8
G


8
G

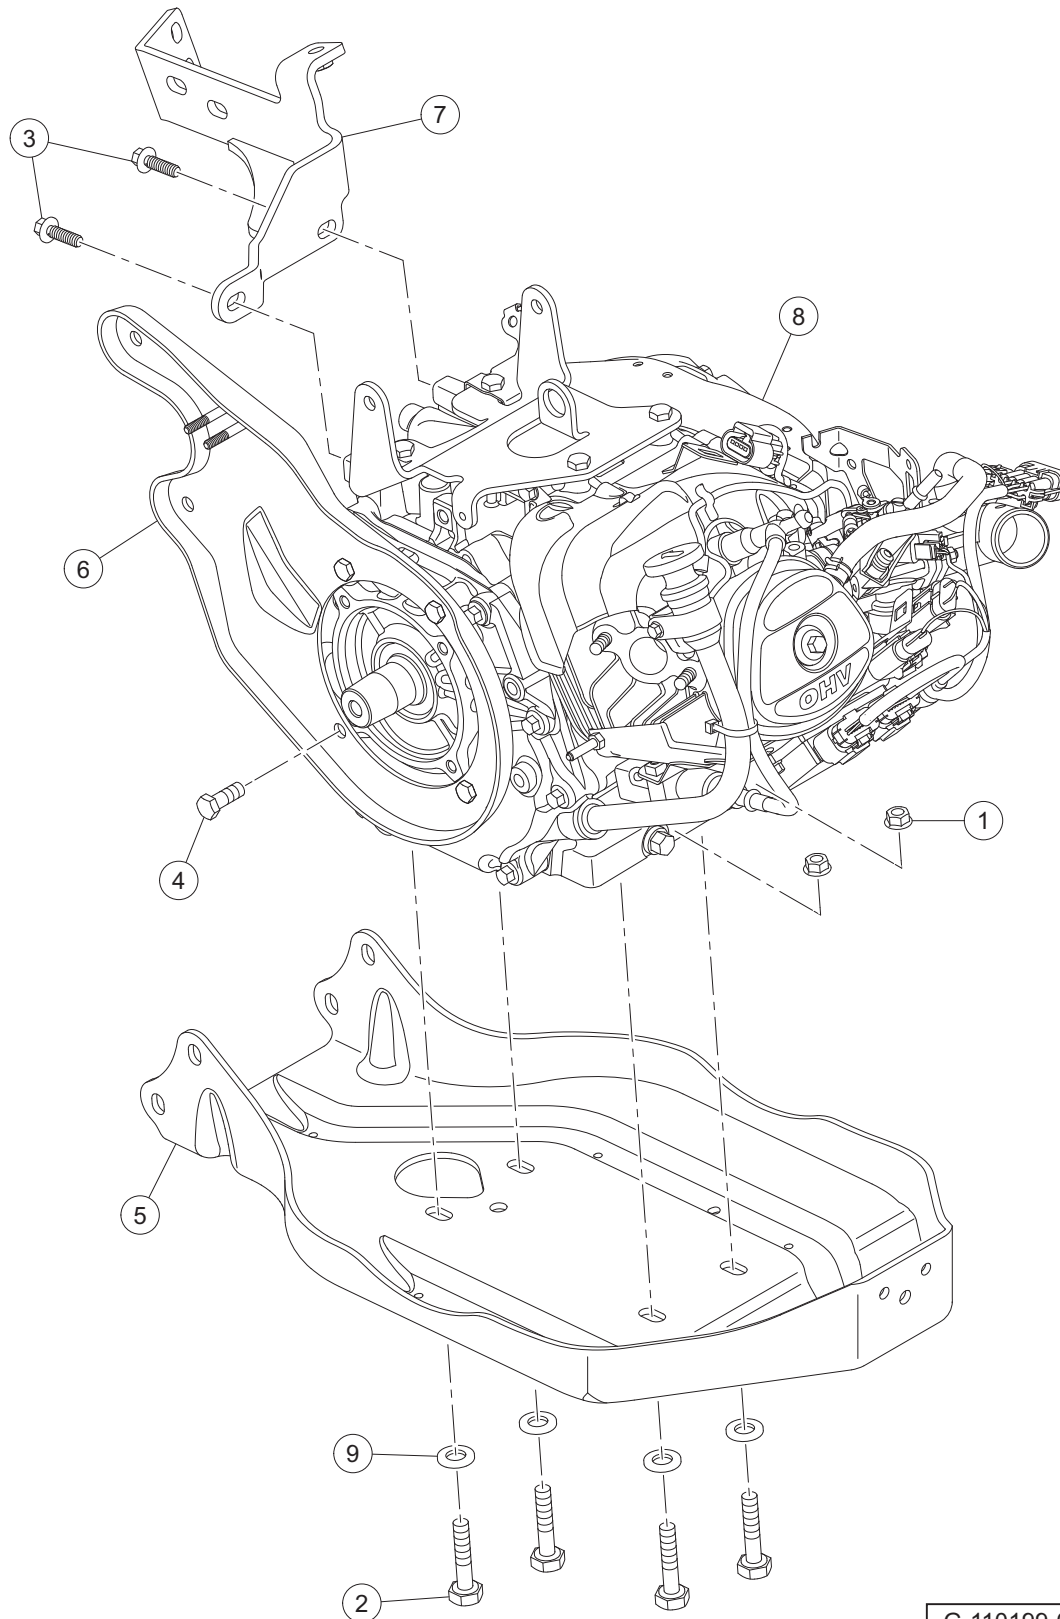

G-110199-000004

ENGINE AND ENGINE MOUNTING


ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>102617201</u>	Nut, Flanged, M10 X 1.5, Mechanically Deformed	4	
2	<u>102732401</u>	Bolt, M10 X 45, Zn-Ni (Black)	4	
3	<u>103262201</u>	Bolt Flg Blk, M8 X 25, Loctite	2	
4	<u>103508101</u>	Bolt, 3/8-16 X .75 Lock Patch	4	
5	47611483001	Plate, Mtg, Engine/axle, Pan	1	
6	47611484001	Plate, Mtg, Engine/axle, Cvt	1	
7	47611648001	Weldment, Mtg, Exhaust	1	
8	47695923001	Engine, Gas, Kohler Ech440	1	
9	<u>96741046</u>	Washer, M10, Hard	4	

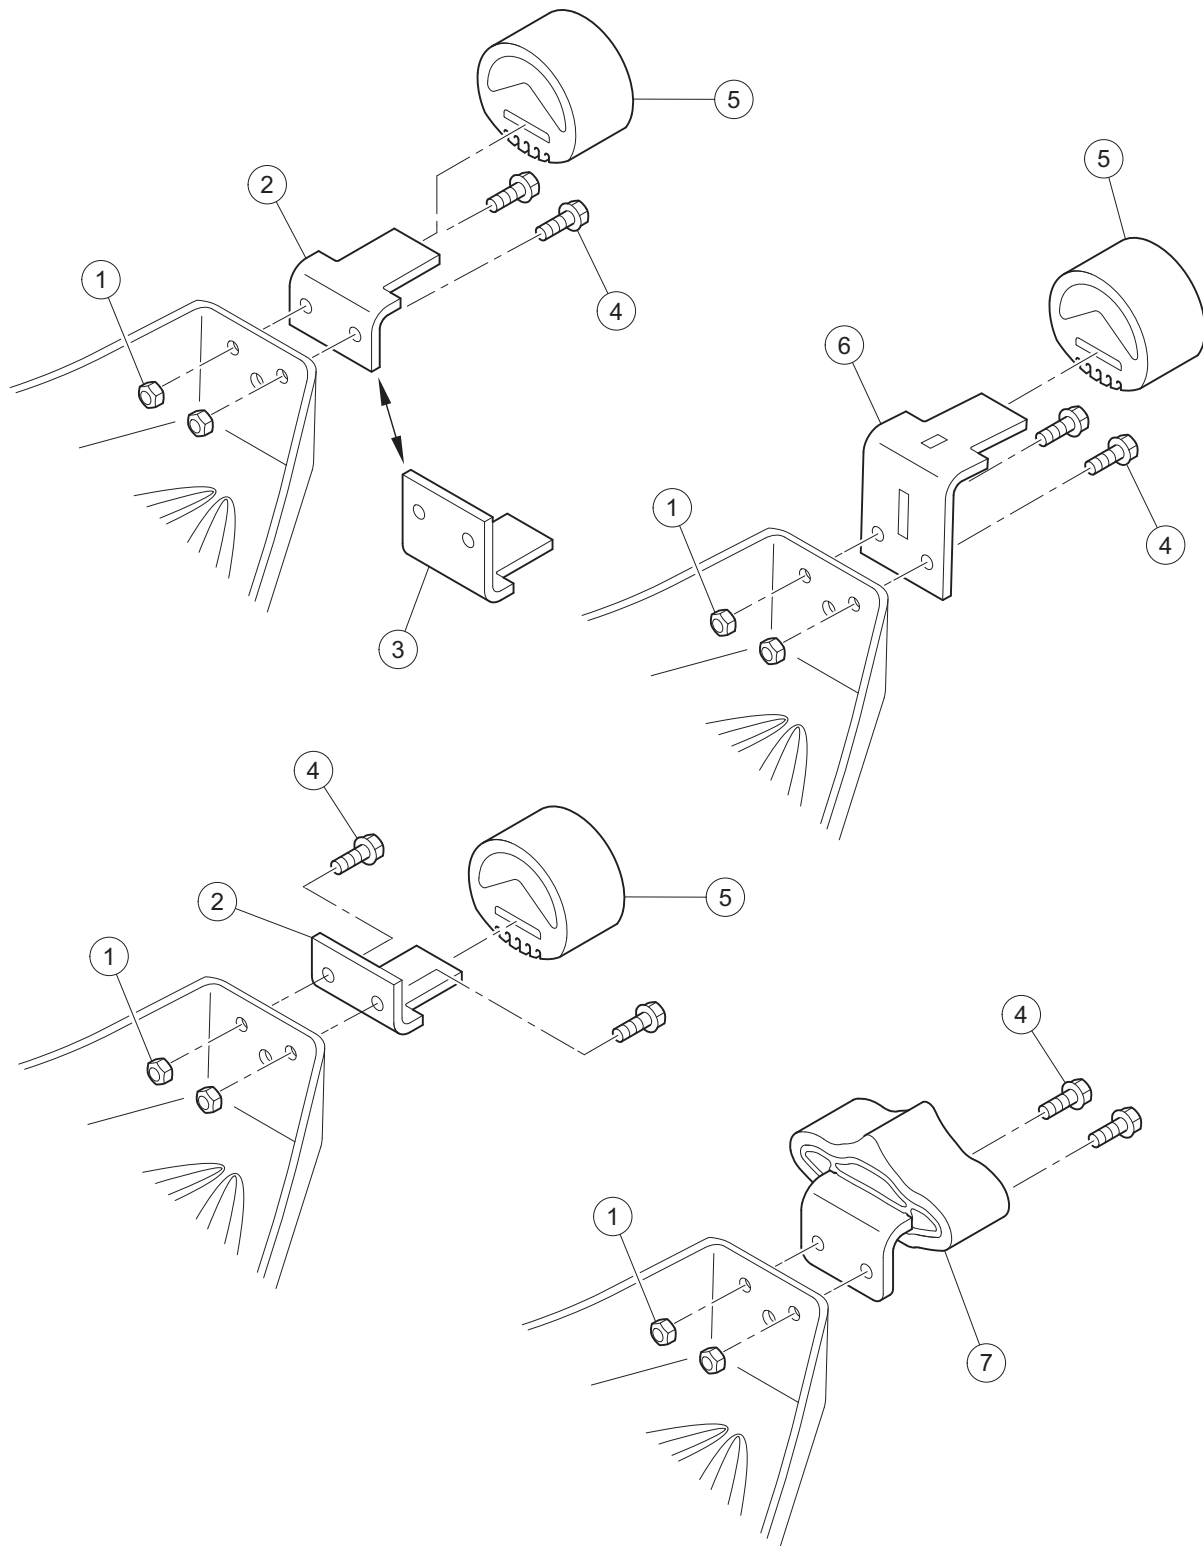

G-010299-000001

ENGINE PAN AND SNUBBER MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>1013924</u>	Nut, 5/16-24, Hex Head Cone	2	
2	<u>101834601</u>	Bracket, Snubber	1	
3	<u>101834602</u>	Bracket, Snubber, Tall	1	
4	<u>101884801</u>	Screw, 5/16-24 X 0.875, Grade-8	2	
5	<u>102540301</u>	Snubber, Inner Frame	1	
6	47564890001	Bracket, Snubber, Csmr, Lifted	1	
7	47587701001	Asm, Dual Snubber (includes items 8 and 9)	1	
8	47583795001	Bracket, Dual Snubber	1	
9	47584184001	Snubber, Dual	1	
Note: Items 8 and 9 are not illustrated.				

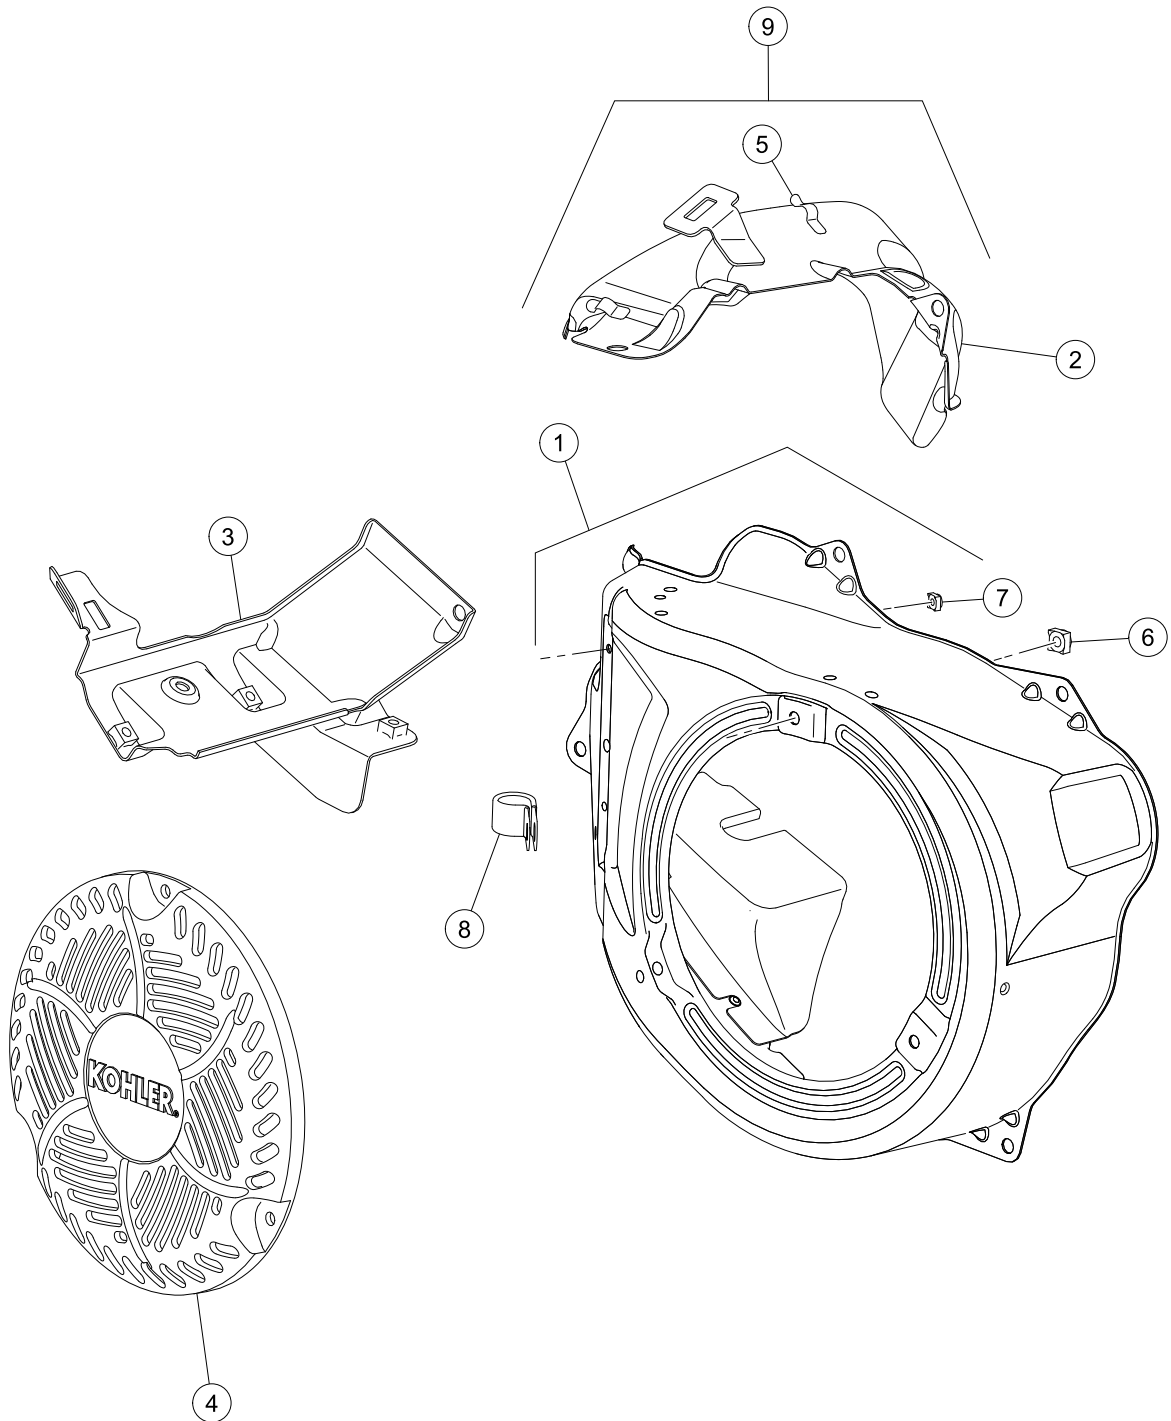


G-040899-000001

BLOWER HOUSING AND HEAT SHIELD – ECH440

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>47629844001</u>	Kit, Blower Housing, Kohler	1
2	<u>47629845001</u>	Shield, Upper Heater, Kohler	1
3	<u>47629846001</u>	Shield Assembly, Cylinder, Koh	1
4	<u>47629847001</u>	Screen, Blower Housing, Kohler	1
5	<u>47629848001</u>	Clip, Wire, Kohler	2
6	<u>47629851001</u>	Nut, Blower Housing (cky), Koh	1
7	<u>47629853001</u>	Nut, Blower Housing (cky), Koh	1
8	<u>47629855001</u>	Clamp, Insulator, Kohler	1
9	<u>47629856001</u>	Assembly, Heat Shield, Kohler	1

8


G

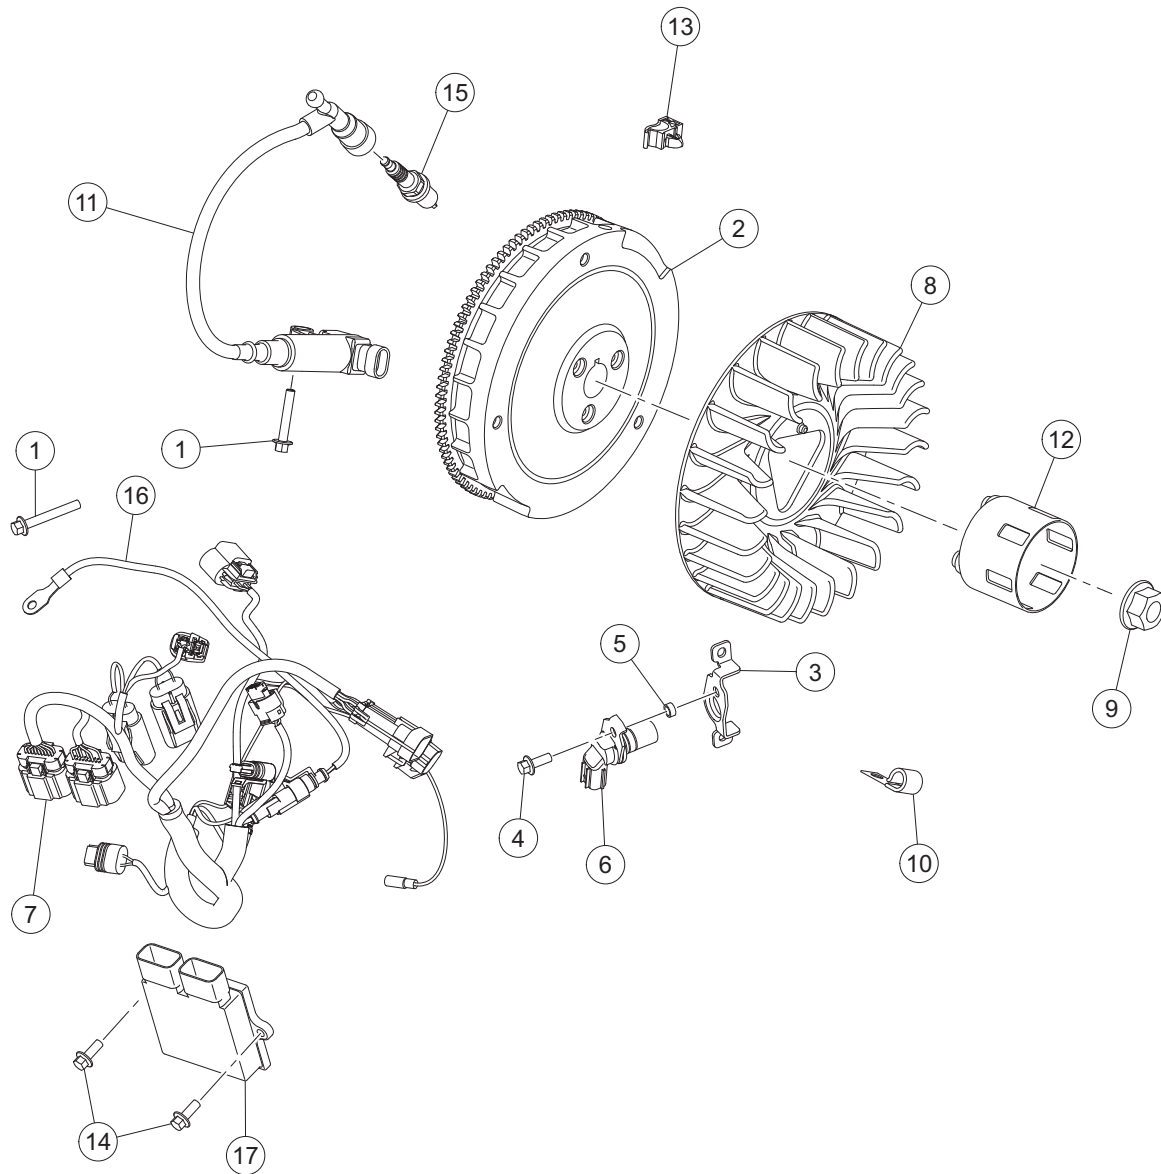

G-040799-000004

IGNITION COMPONENTS AND FLYWHEEL – ECH440


ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	47629702001	Screw, Hex Flange (m6), Kohler	3	
2	47629702001	Screw, Hex Flange (m6), Kohler	1	
3	47629826001	Flywheel Assy, Electric Start	1	
4	47629828001	Bracket, Crank Sensor, Kohler	1	
5	47629831001	Screw, Hex Flange, Kohler	1	
6	47629832001	Spacer, Kohler	1	
7	47629833001	Sensor, Speed, Kohler	1	
8	47629834001	Harness, Wiring Assy, Kohler	1	
9	47629835001	Fan, Flywheel, Kohler	1	
10	47629836001	Nut, Flywheel, Kohler	1	
11	47629837001	Clip, Cable, Kohler	1	
12	47629838001	Coil, Ignition-efi, Kohler	1	
13	47629841001	Cup, Starter Drive, Kohler	1	
14	47629843001	Clip, Wiring Harness, Kohler	1	
15	47640021001	Screw, M6x16, Kohler	2	
16	47640281001	Plug, Spark, Kohler	1	
17	47650647001	Sensor, Temperature	1	
18	47676897001	Module, ECU, Kohler	1	

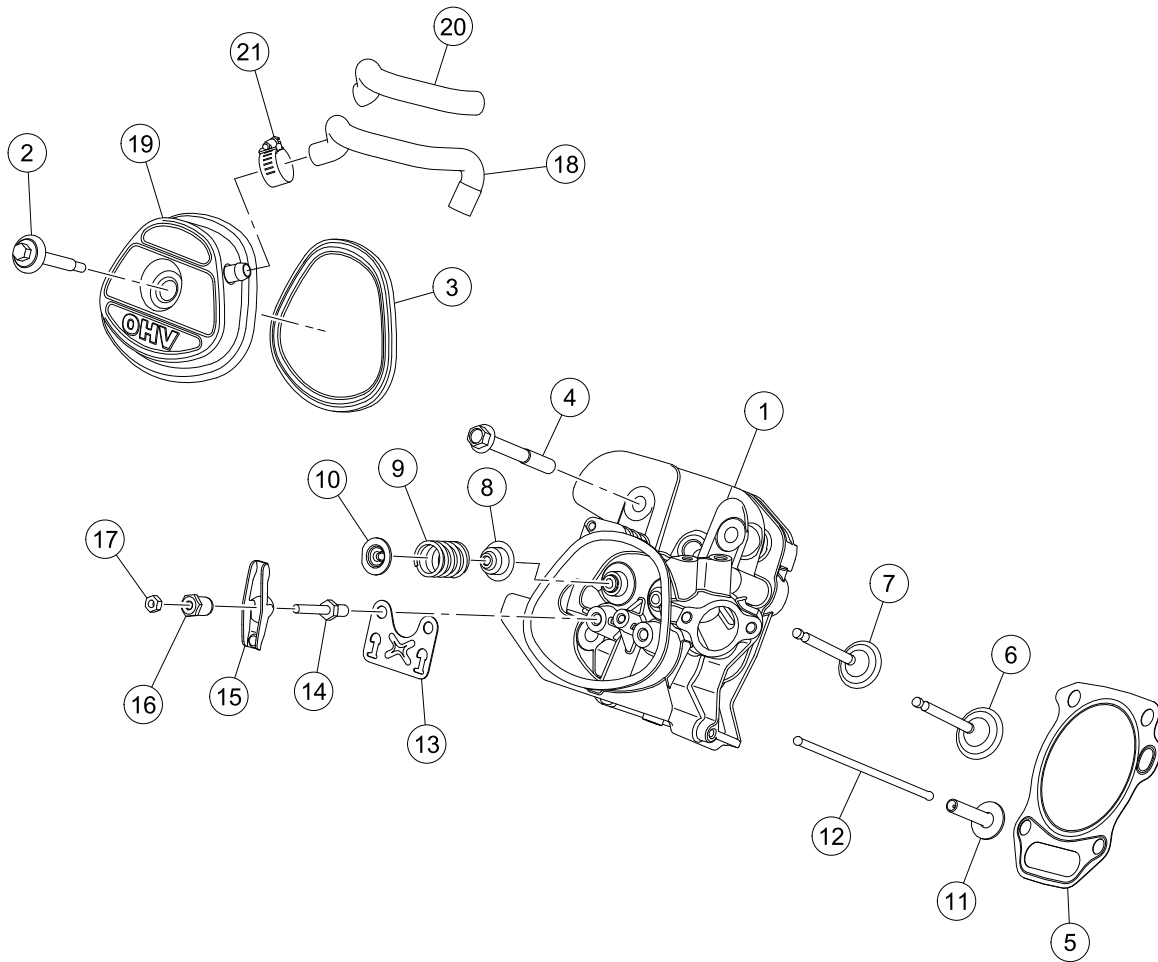

G-040599-000001

CYLINDER HEAD AND VALVE – ECH440


ITEM	PART NO.	DESCRIPTION	QTY	8	G
		1 2 3 4			
1	47629711001	Assembly, Cylinder Head, Kohle	1		
2	47629714001	Screw, Valve Cover Seal Assy,	1		
3	47629716001	Gasket, Valve Cover, Kohler	1		
4	47629717001	Screw, Hex Flange Cylinder Hea	4		
5	47629718001	Kit, Head Gasket, Kohler	1		
6	47629719001	Valve, Intake, Kohler	1		
7	47629720001	Valve, Exhaust, Kohler	1		
8	47629722001	Seal, Valve Stem, Kohler	2		
9	47629723001	Spring, Valve, Kohler	2		
10	47629724001	Retainer, Valve Spring, Kohler	2		
11	47629725001	Lifter, Valve, Kohler	2		
12	47629726001	Rod, Push, Kohler	2		
13	47629727001	Plate, Pushrod Guide, Kohler	1		
14	47629728001	Stud, Rocker, Kohler	2		
15	47629729001	Arm, Rocker, Kohler	2		
16	47629730001	Pivot, Rocker Arm, Kohler	2		
17	47629768001	Nut, Hex Jam, Kohler	2		
18	47629822001	Hose, Breather, Kohler	1		
19	47629823001	Valve Cover Assembly, Kohler	1		
20	47629824001	Sleeve, Anti Abrasion, Kohler	1		
21	47629825001	Clamp, Hose, Kohler	1		

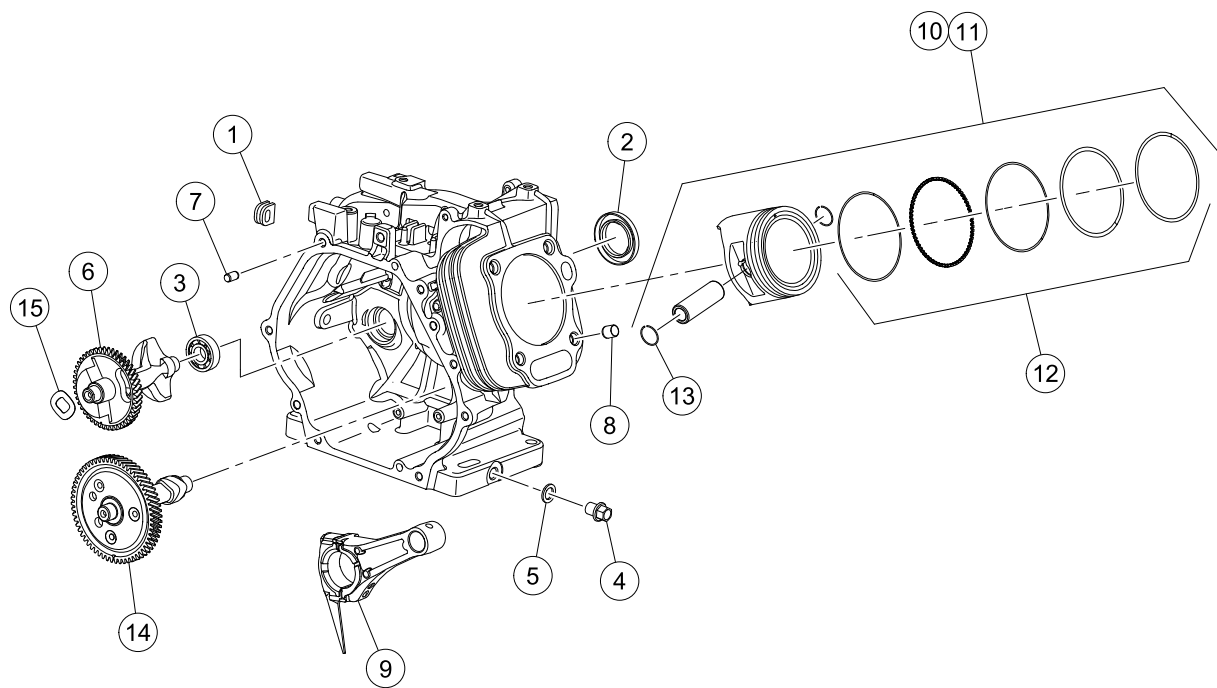

G-040399-000001

CRANKCASE AND PISTON – ECH440


ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>47629677001</u>	Grommet, Crankcase,kohler	1	
2	<u>47629680001</u>	Seal, Crankcase, Kohler	2	
3	<u>47629682001</u>	Bearing, Balancing Shaft, Kohl	2	
4	<u>47629685001</u>	Kit, Drain Plug, Kohler	2	
5	<u>47629686001</u>	Washer, Drain Plug, Kohler	2	
6	<u>47629687001</u>	Shaft, Balance, Kohler	1	
7	<u>47629688001</u>	Pin, Dowel, Kohler	2	
8	<u>47629689001</u>	Pin, Dowel Cylinder Head, Kohl	2	
9	<u>47629690001</u>	Rod, Connecting Assembly,kohle	1	
10	<u>47629691001</u>	Kit, Piston Wing Set (std), Ko	1	
11	<u>47629693001</u>	Kit, Piston (0.25 O.s.), Kohle	1	
12	<u>47629694001</u>	Ring Set, Kohler	2	
13	<u>47629696001</u>	Retainer, Piston, Kohler	2	
14	<u>47629697001</u>	Camshaft Assembly, Kohler	1	
15	<u>47629698001</u>	Spring, Wave, Kohler	1	

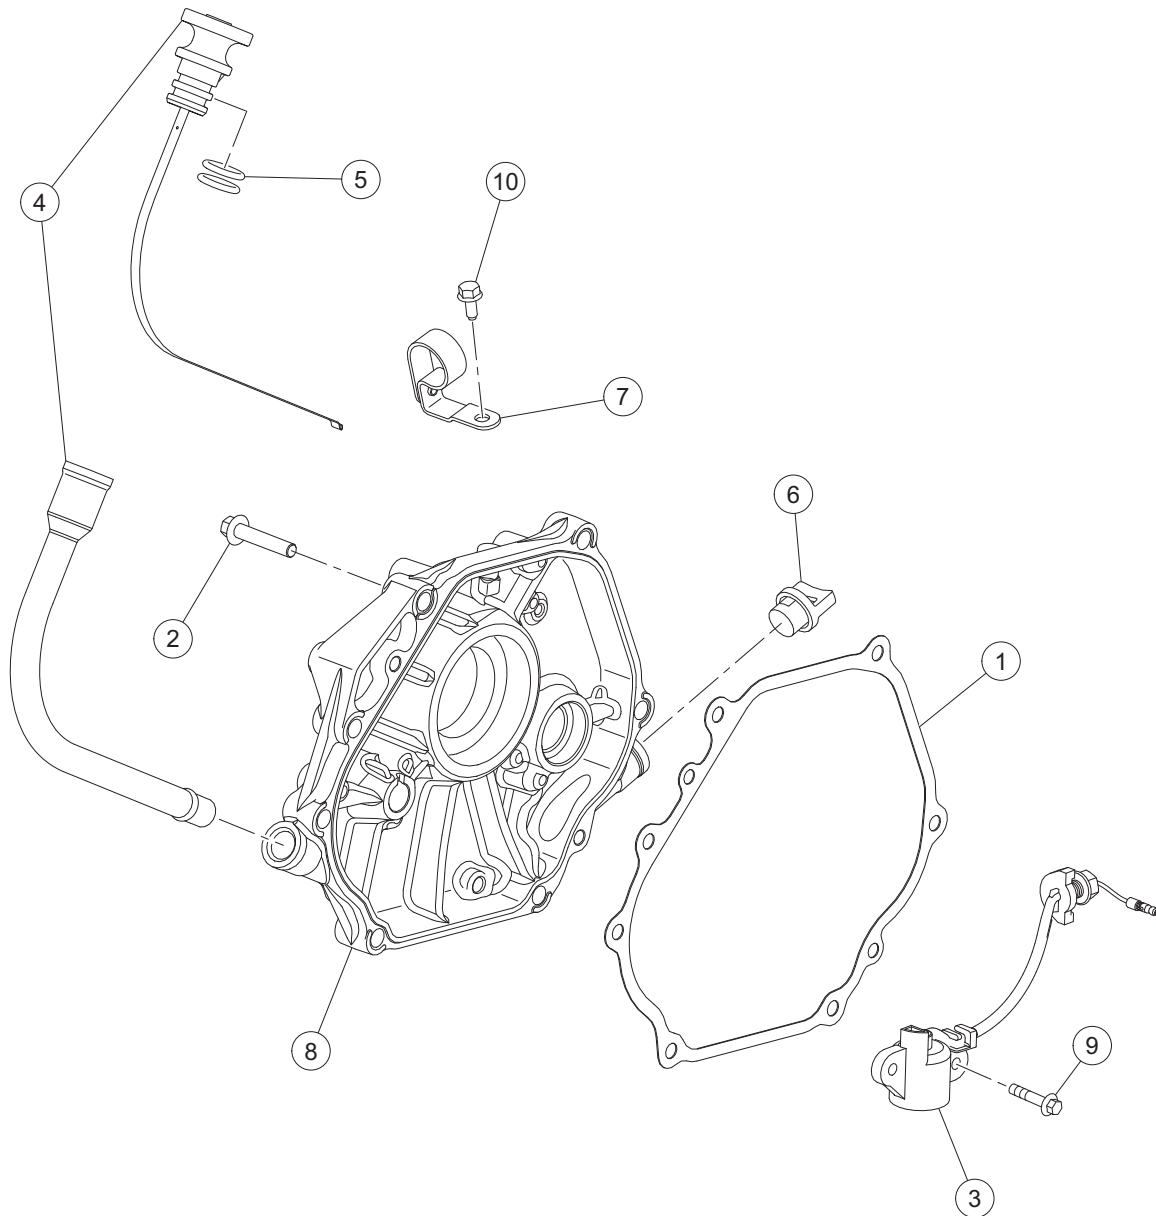

G-040699-000002

OIL SENSOR AND LUBRICATION – ECH440

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>47629699001</u>	Gasket, Closure Plate, Kohler	1	
2	<u>47629700001</u>	Screw, Closure Plate, Kohler	7	
3	<u>47629701001</u>	Switch, Oil Sensor Assembly, K	1	
4	<u>47629703001</u>	Dipstick, Assembly, Kohler	1	
5	<u>47629705001</u>	O-ring, Dipstick Cap, Kohler	2	
6	<u>47629707001</u>	Cap Assy, Oil Fill, Kohler	1	
7	<u>47629709001</u>	Bracket, Dipstick Tub, Kohler	1	
8	<u>47640020001</u>	Plate, Closure, Kohler	1	
9	<u>47640021001</u>	Screw, M6x16, Kohler	2	
10	<u>47640022001</u>	Screw, M5 X8, Kohler	1	

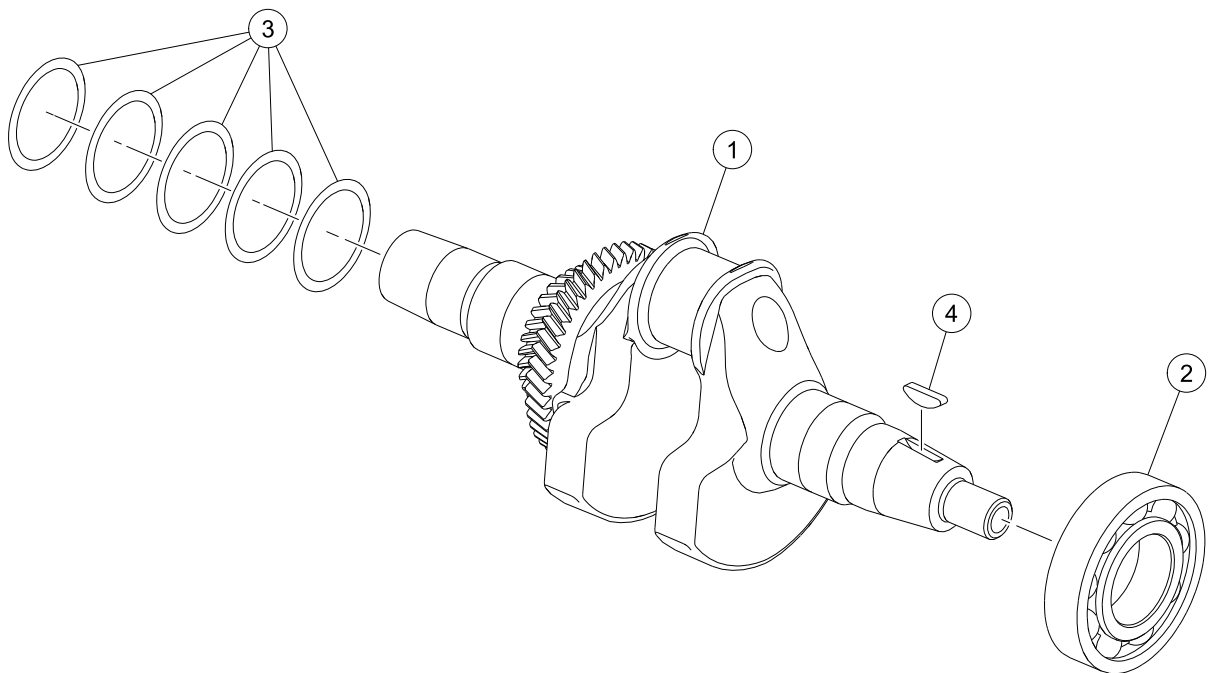

G-040299-000001

CRANKSHAFT – ECH440

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	47629583001	Crankshaft Assembly, Kohler	1
2	47629585001	Bearing, Crankshaft, Kohler	2
3	47629588001	Kit, Shims, Kohler	5
4	47629589001	Key, Flywheel, Kohler	1

8

G


8

G

FUEL SYSTEM – EFI

9

G

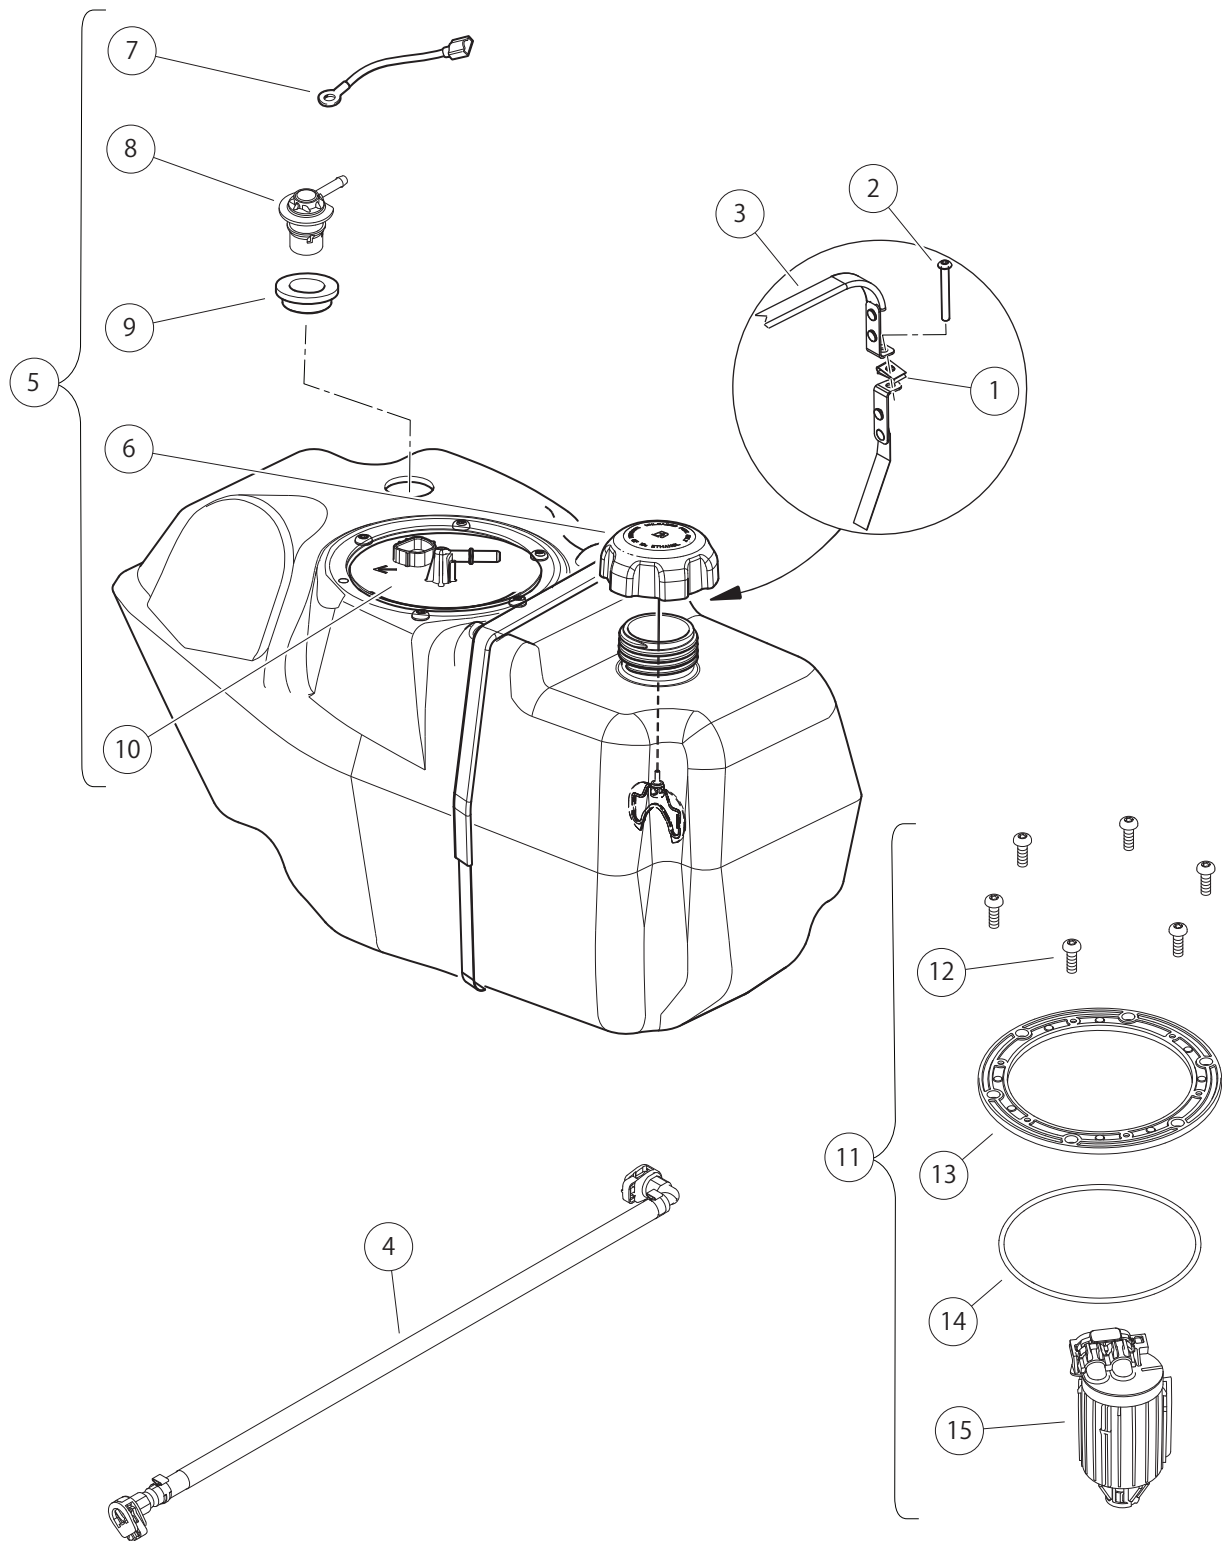


000975-006

FUEL TANK WITH PUMP, TOP FILL – EFI

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014116</u>	Nut, 1/4-20 Speed	1
2	<u>105194101</u>	1/4-20 X 2.5, Bhcs, 6-lobe	1
3	<u>105245401</u>	Strap, Tank, Utility	1
4	<u>47606233003</u>	Asm, Fuel Line, Util, Sb	1
5	<u>47664038001</u>	Asm, Tank, Fuel, Top, Su (includes items 6 through 11)	1
6	<u>103372101</u>	Cap, Fuel Tank, Gas, Ratchet	1
7	<u>105143301</u>	Wire, Ground, Fuel Tank	1
8	<u>47611876001</u>	Vent Rov, Fuel Tank, Precedent	1
9	<u>47611877001</u>	Grommet, Fuel Tank, Vent	1
10	N/A	Fuel Pump Module Su 50psi	1
11	<u>47623339001</u>	Kit, Fuel Filter, 50 Psi (includes items 12 through 15)	1
12	<u>102025801</u>	Screw, 1/4-20 X .75 Torx Pn Hd	6
13	<u>105043801</u>	Fuel Module, Hold Down Ring	1
14	<u>105043901</u>	O-Ring, Fuel Module	1
15	N/A	Fuel Filter, 50psi	1

9


G

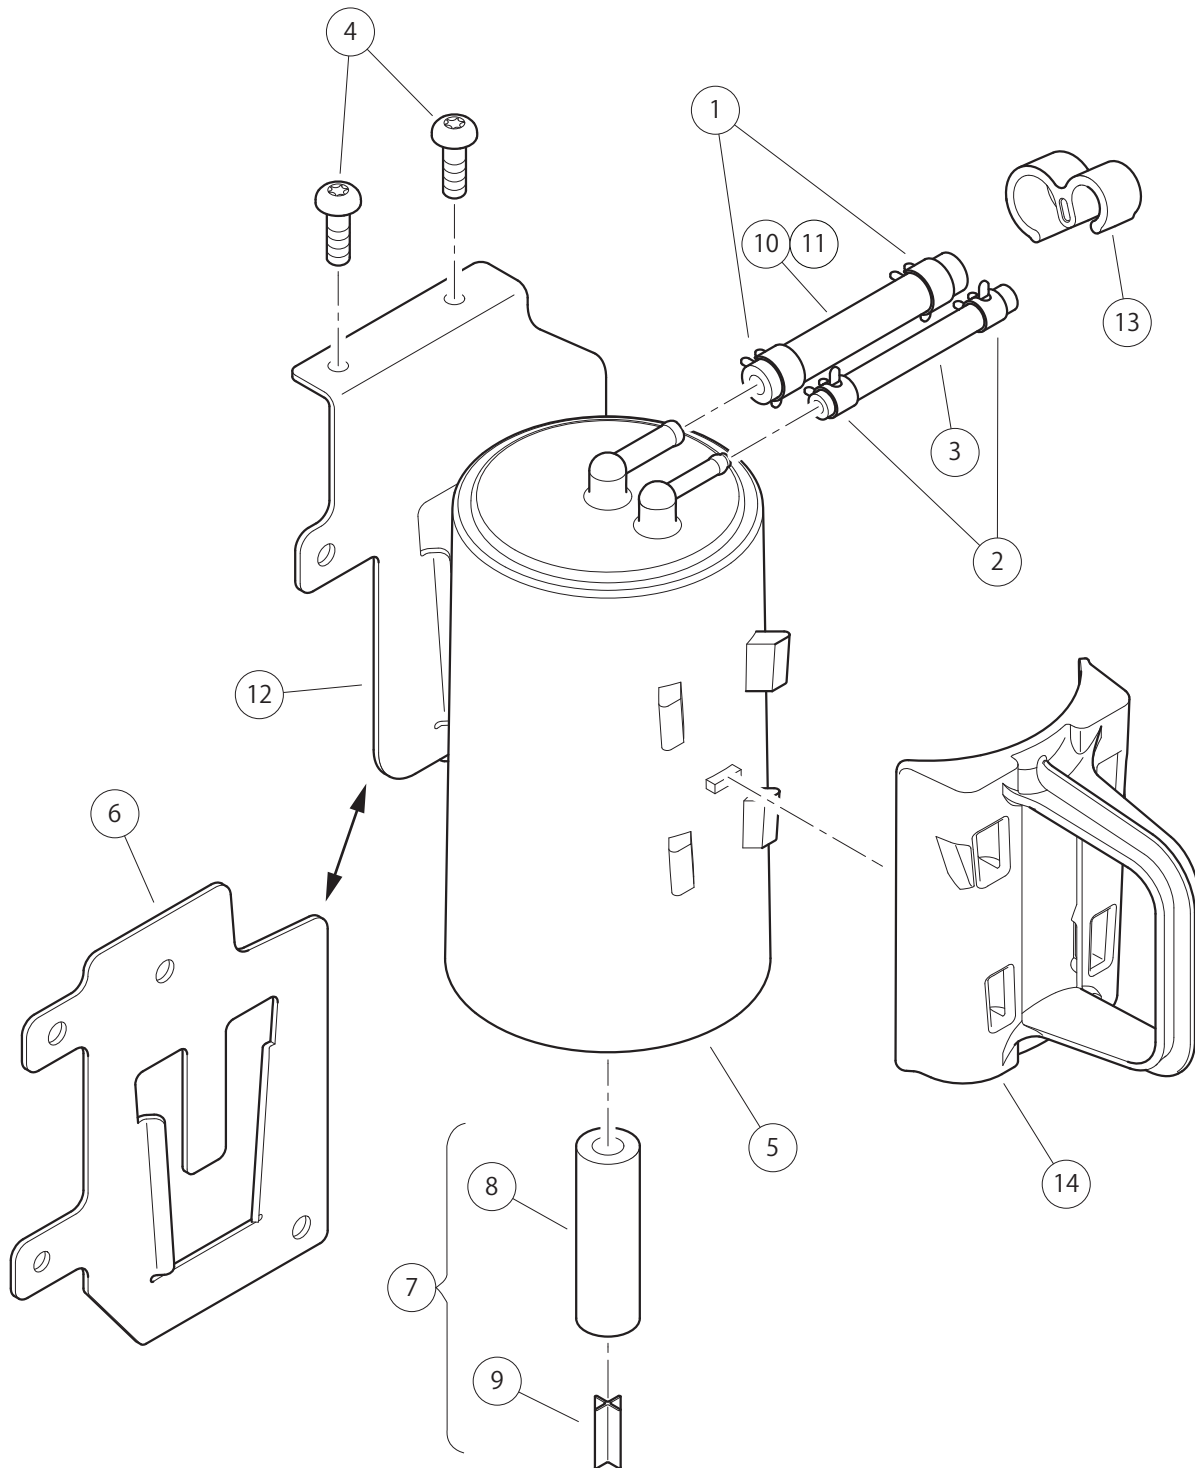

000980-014

CARBON CANISTER – EFI


ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>1012649</u>	Clamp, 0.460 Red Hose	2	
2	<u>1013746</u>	Clamp, 0.301 ID Hose	2	
3	101587714	Hose, Fuel, Vent, 34" Long	1	
4	<u>102025801</u>	Screw, 1/4-20 X .75 Torx Pn Hd	2	
5	<u>103372401</u>	Canister, Carbon	1	
6	<u>103452001</u>	Brkt, Mtg, Carbon Canister	1	
7	<u>103756401</u>	Asm, Vent Line, Carbon Canister (includes items 8 and 9)	1	
8	N/A	Hose, Vent, 5/16 I.D., Bulk	1	
9	N/A	Vent, Barb, 5/16 I.D. Hose	1	
10	103896604	Hose, Vent, 1/4 Id, 17 In (SWB and Utility)	1	
11	103896605	Hose, Vent, 1/4 Id, 23.5 In	1	
12	47606257001	Brkt, Mtg, Carbon Canister	1	
13	47619701001	Clip, Purge Line, Util	2	
14	47637087001	Bracket, fuel line routing	1	
Note: Items 6 and 14 apply to short wheel base vehicles only. Item 12 applies to utility and long wheel base vehicles only.				

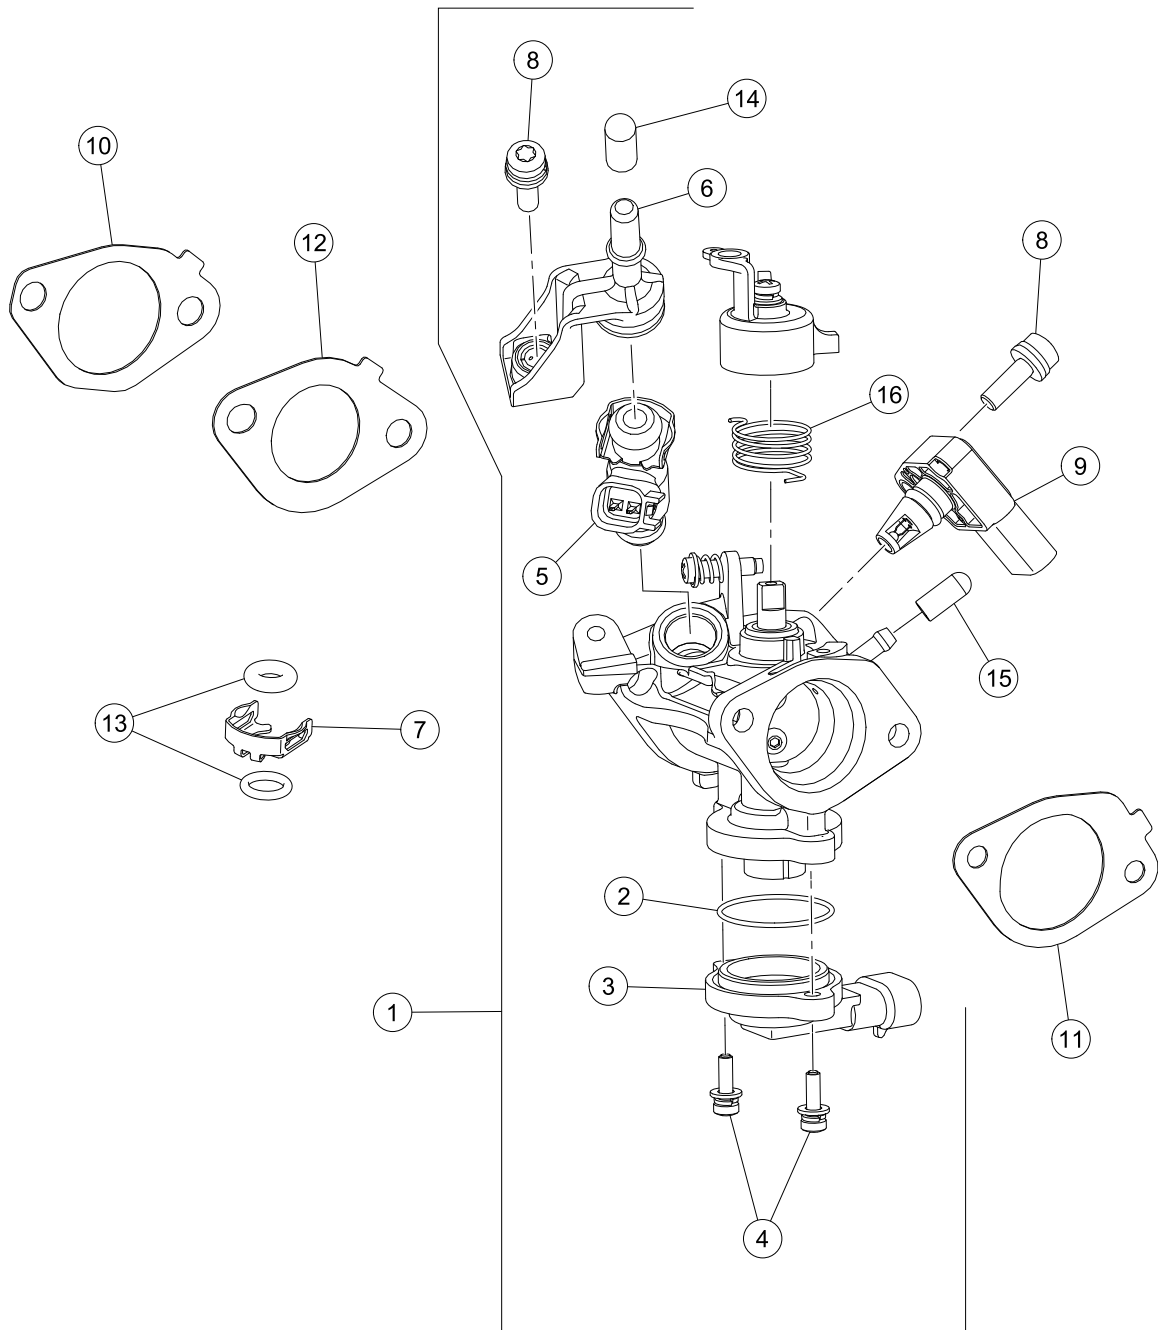

G-100199-000001

THROTTLE BODY AND MOUNTING


ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>47629857001</u>	Throttle Body, Assembly, Kohle	1	
2	<u>47629858001</u>	O-ring, Kohler	1	
3	<u>47629859001</u>	Kit, Tps, Kohler	1	
4	<u>47629860001</u>	Screw, Hexalobular, M4 X 0.7 X	2	
5	<u>47629861001</u>	Injector, Fuel, Kohler	1	
6	<u>47629862001</u>	Cap, Fuel Inector, Kohler	1	
7	<u>47629864001</u>	Clip, Retainer, Kohler	1	
8	<u>47629865001</u>	Screw, Hexalobular, M6 X 1 Sem	2	
9	<u>47629866001</u>	Sensor, T-map, Kohler	1	
10	<u>47629867001</u>	Kit, Gasket Intake, Kohler	1	
11	<u>47629868001</u>	Gasket, Throttle Body, Kohler	1	
12	<u>47629869001</u>	Gasket, Insulator To T-body, K	1	
13	<u>47629870001</u>	Kit, Fuel Injector O-ring, Koh	1	
14	<u>47629871001</u>	Cap, Masking, Kohler	1	
15	<u>47629872001</u>	Cap, Masking, Kohler	1	
16	<u>47629874001</u>	Spring, Return, Kohler	1	

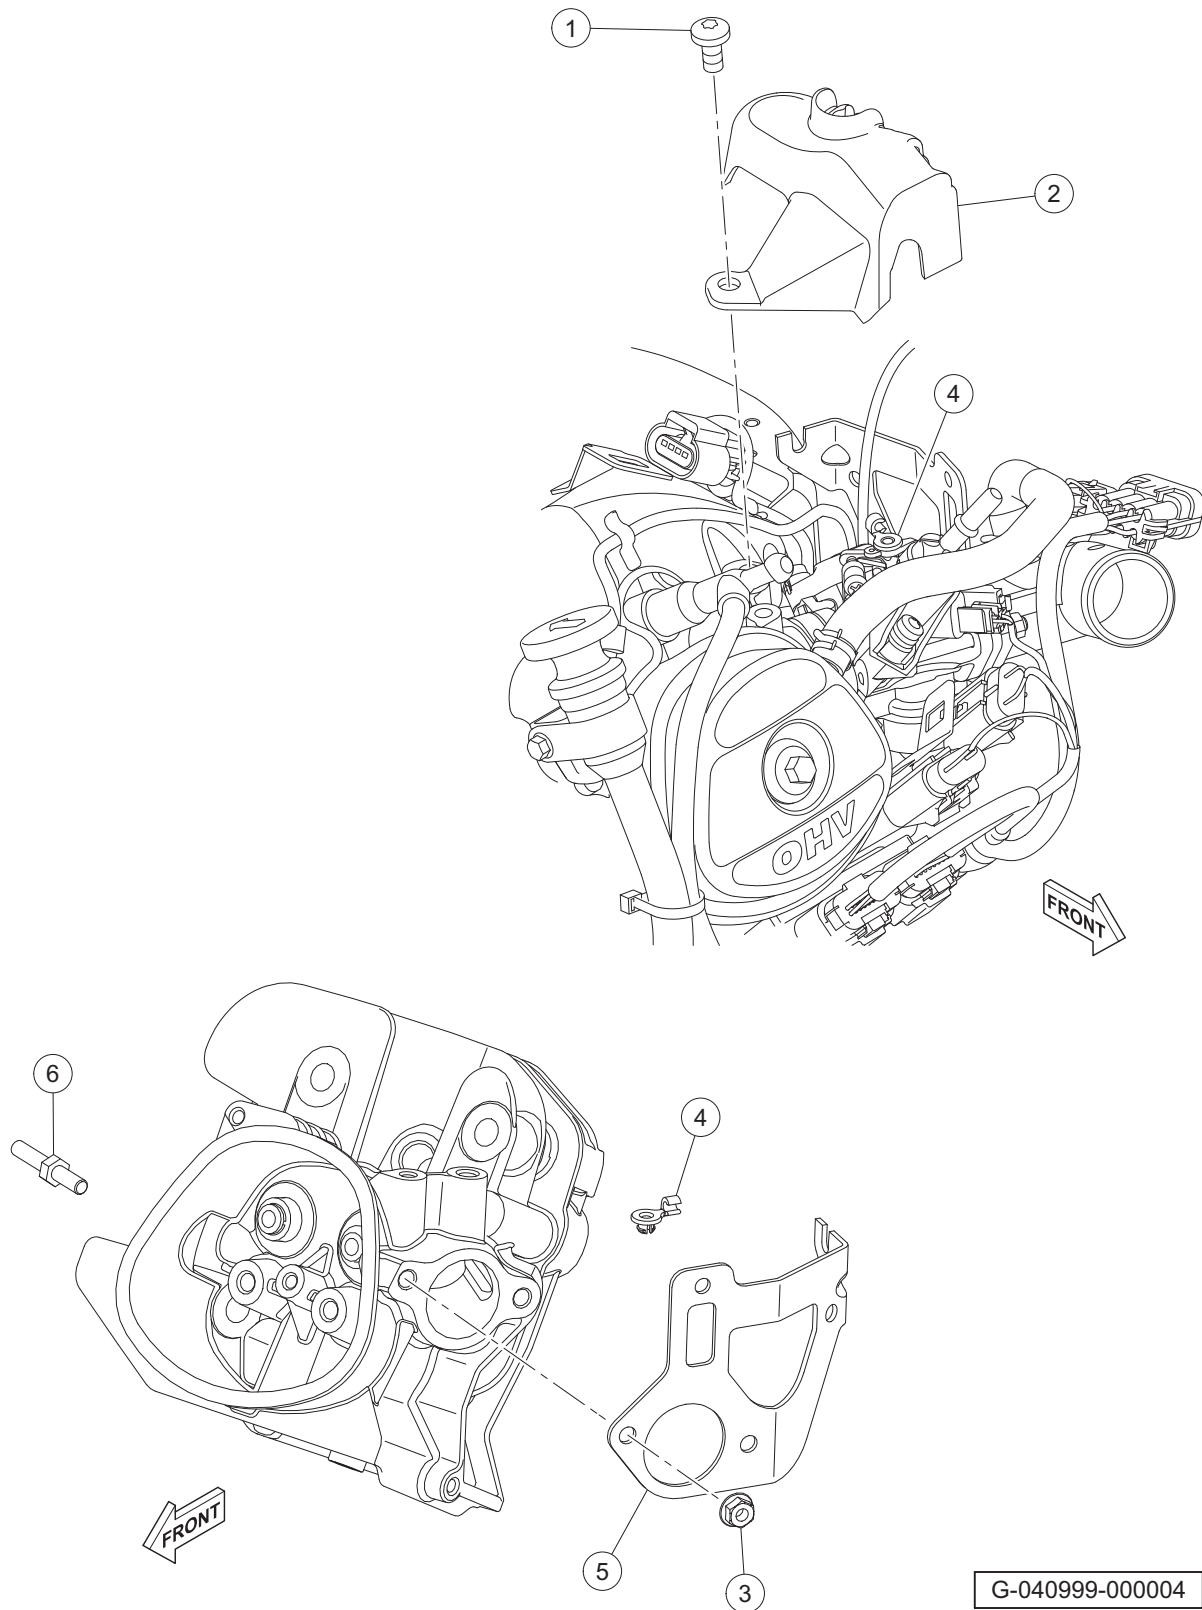

G-040999-000004

GOVERNOR BRACKET AND COVER – EFI

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>102298116</u>	Bolt, Flanged Head, M8 X 16.0	1	
2	<u>47612352001</u>	Cover, Governor, Ech 440	1	
3	<u>47629875001</u>	Nut, Hex Flange Lock (m6), Koh	2	
4	<u>47629876001</u>	Bushing, Linkage Retainer, Koh	1	
5	<u>47629877001</u>	Bracket, Governor, Kohler	1	
6	<u>47629878001</u>	Stud, Ground, Kohler	1	

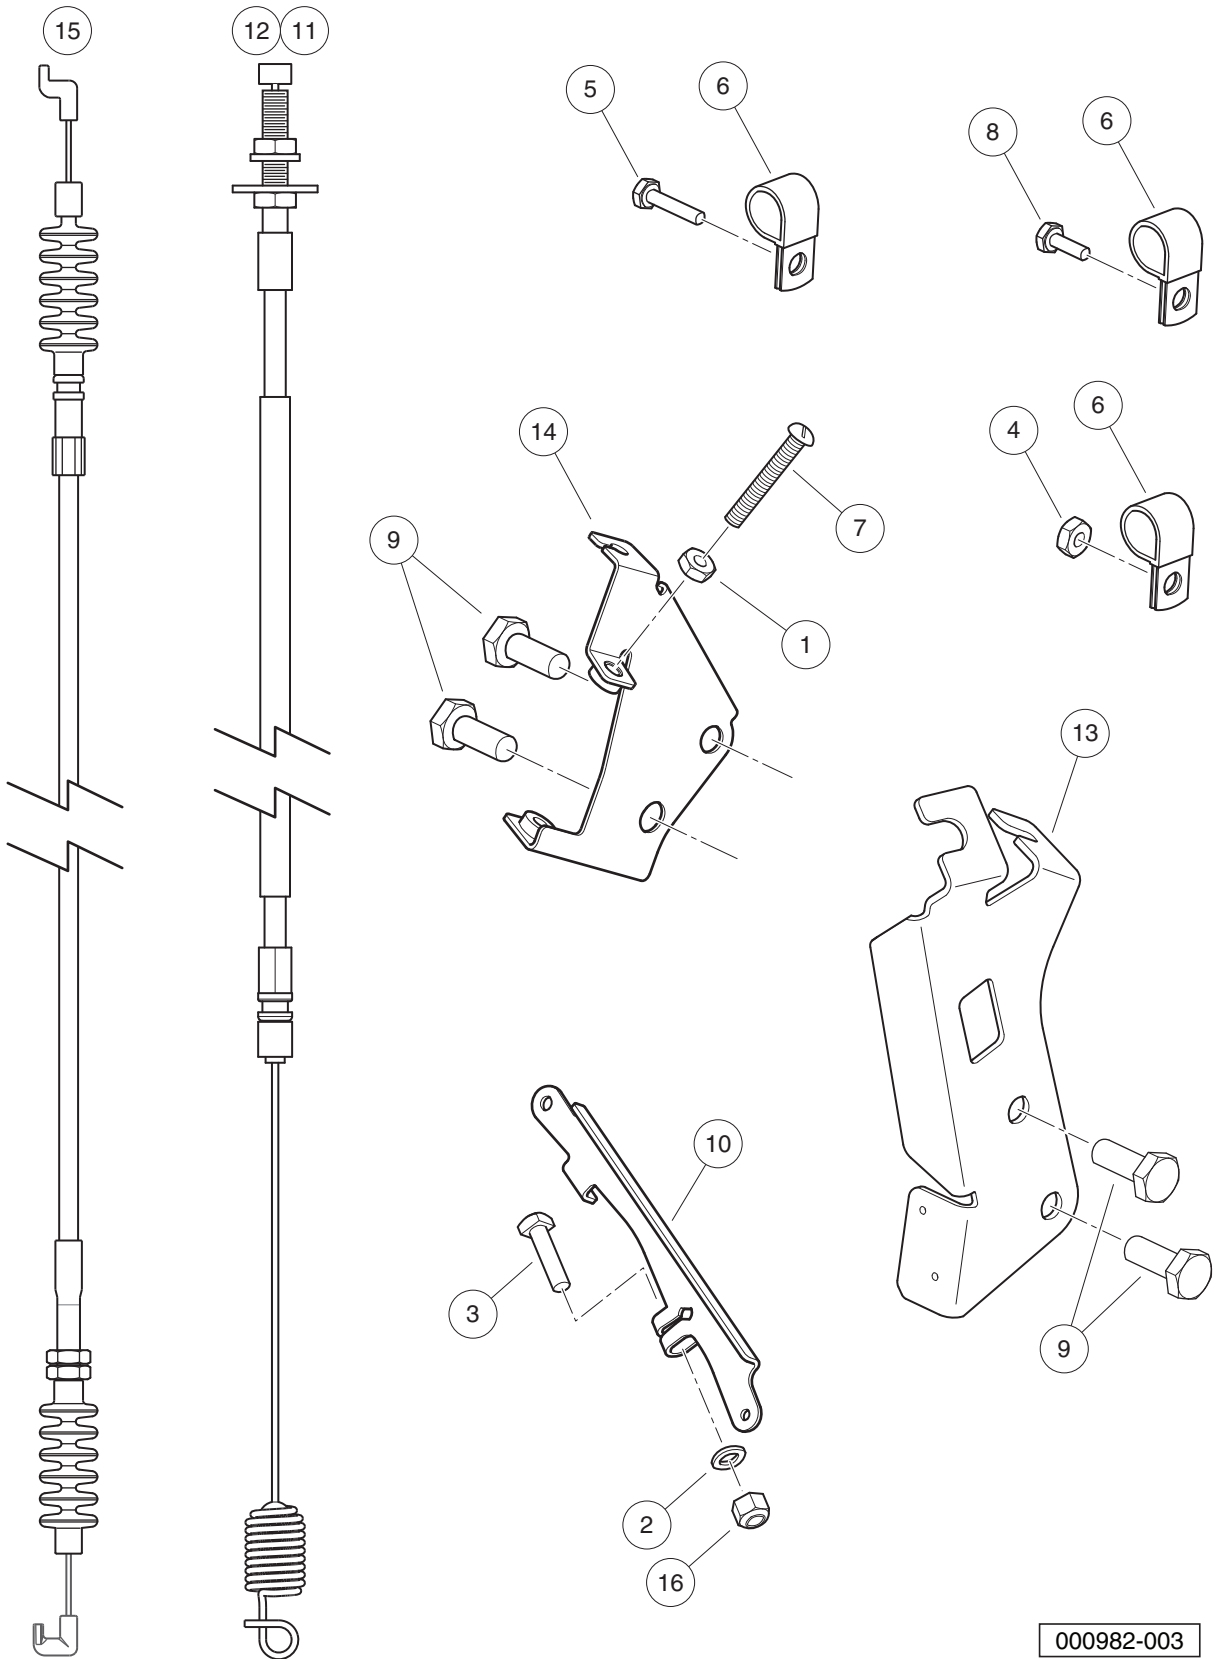


000982-003

GOVERNOR AND ACCELERATOR CABLES – EFI

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011114</u>	Nut, M6-1.00 Hex	2
2	<u>1014007</u>	Washer, 1/4, Flat	1
3	<u>101886101</u>	Screw, 1/4-20 X 1.00, Square-Head	1
4	<u>101887601</u>	Locknut, M6-1.00 Nylon Insert	1
5	<u>102296716</u>	Screw, M6 X 16 Tt Hx Fl Hd	1
6	<u>102410604</u>	P-clamp, Insulated, 0.625 Inch	3
7	<u>102476401</u>	Bolt, Stop, Pedal	1
8	<u>102490301</u>	Bolt, M6 X 1 X 16, Loctite	1
9	<u>102498201</u>	Bolt, M10 X 1.25 X 25, Loctite	2
10	<u>104023501</u>	Arm, Governor, ED65	1
11	<u>105007402</u>	Cable, Accelerator, Utility, Low-Speed	1
12	<u>105007403</u>	Cable, Accelerator, Utility, Std-Speed	1
13	<u>105135101</u>	Bracket, Cable, FNR/Accelerator, ED65	1
14	<u>105144401</u>	Weldment, Governor Bracket	1
15	<u>47601355001</u>	Cable, Governor, Z Fit 90 Fit	1
16	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	1

9

G

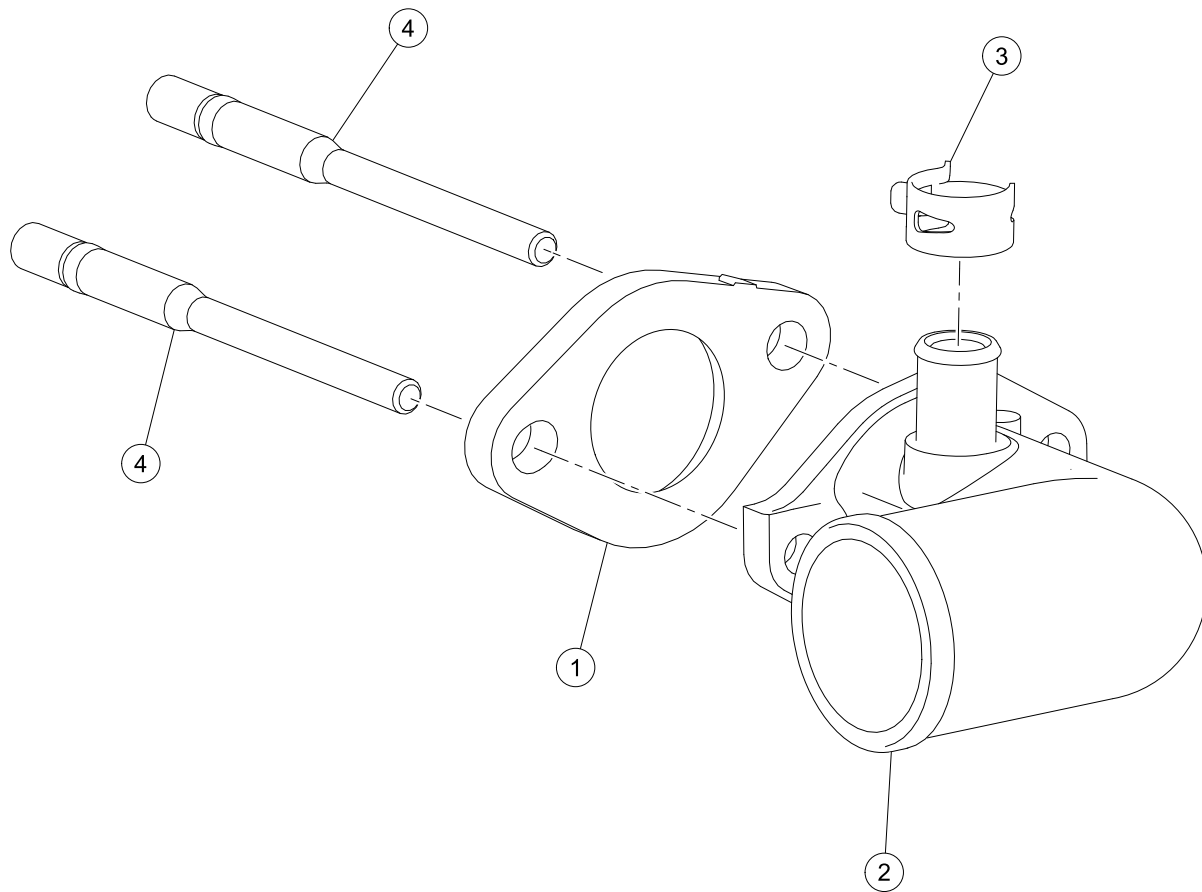


G-040999-000003

AIR INTAKE ELBOW – EFI

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>47629879001</u>	Insulator Throttle Body, Kohle	1
2	<u>47629880001</u>	Elbow, Air Inlet, Kohler	1
3	<u>47629881001</u>	Clamp, Breather Hose, Kohler	1
4	<u>47629882001</u>	Stud, Intake, Kohler	2

9

G

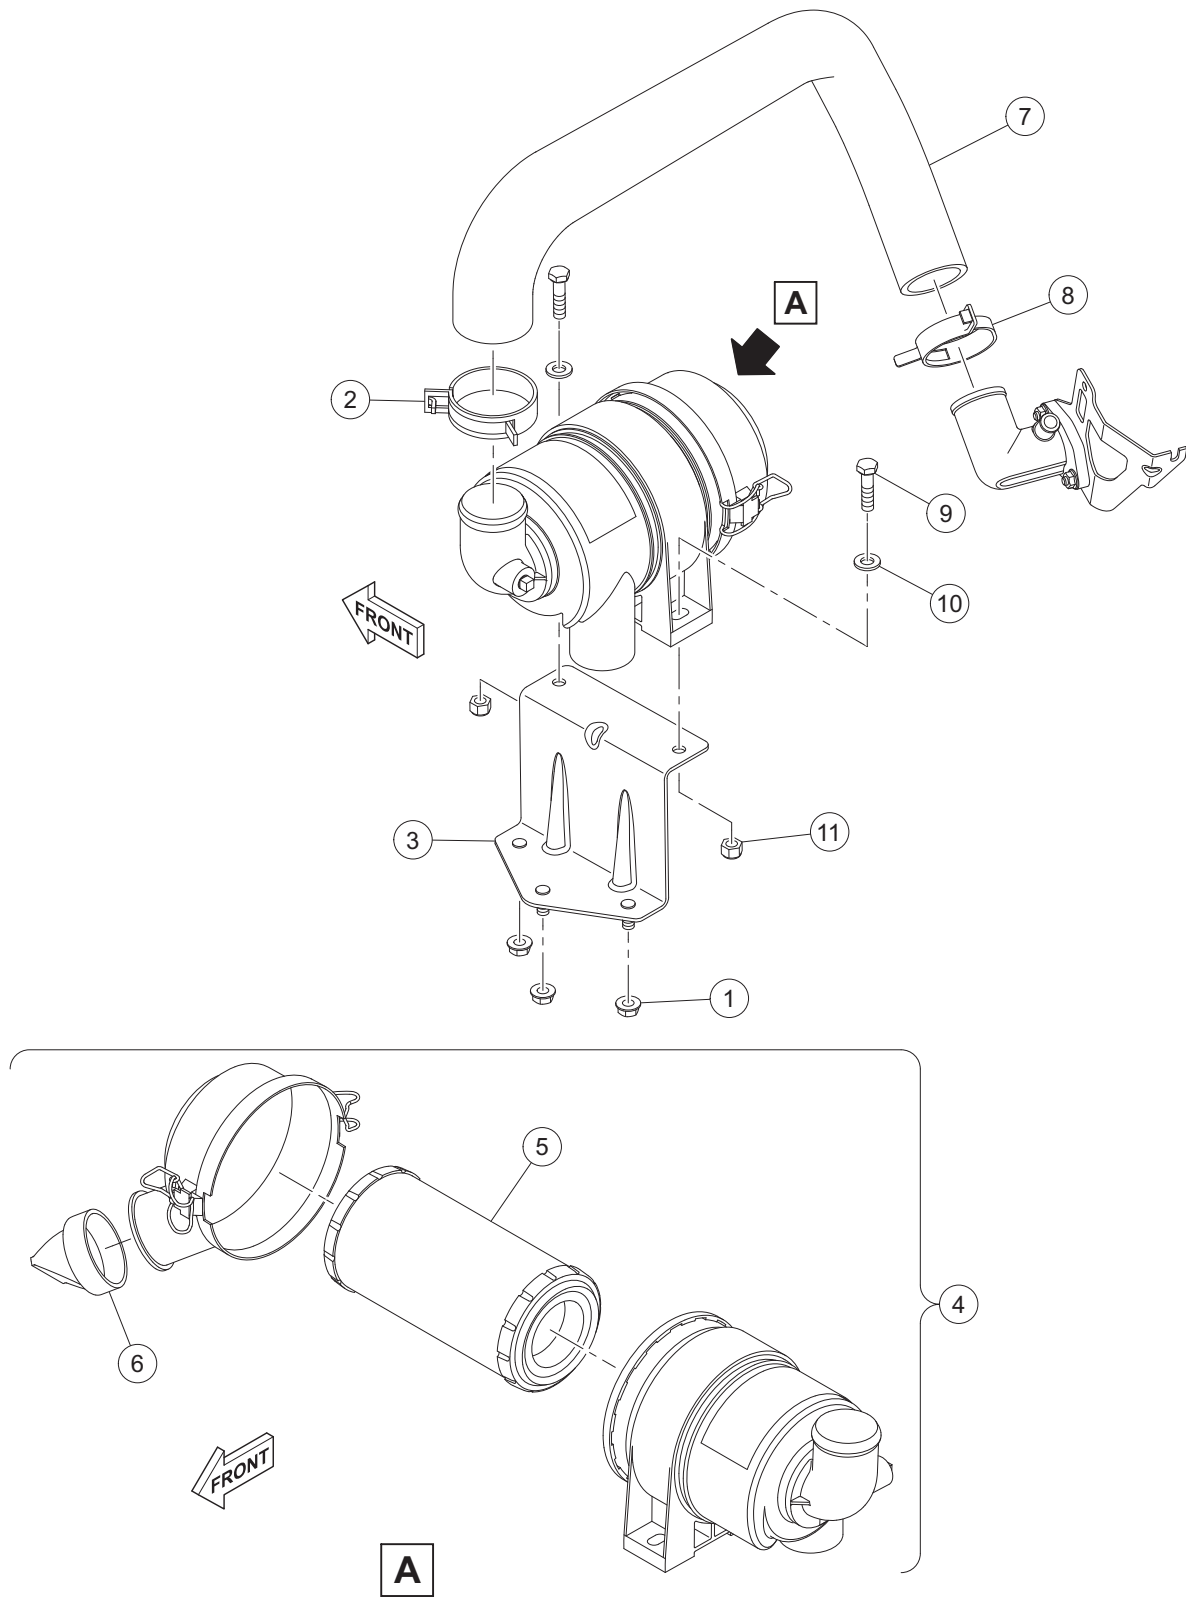

G-040999-000005

AIR FILTER SYSTEM AND INTAKE HOSE – EFI

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	3	
2	<u>102411209</u>	Clamp, Hose, Ctb 55mm Dia.	1	
3	<u>105003401</u>	Asm, Bracket, Mtg, Air Cleaner	1	
4	<u>105009101</u>	Air Cleaner, Utility with EFI (includes items 5 and 6)	1	
5	<u>102558201</u>	Air Filter, 4 Inch	1	
6	<u>102725501</u>	Valve, Evacuator, Filter Air	1	
7	<u>105009401</u>	Hose, Air Intake, LWB Utility with EFI	1	
8	<u>105088501</u>	Clamp, Ctb, 49mm Dia, W/clip	1	
9	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	2	
10	<u>1241</u>	Washer, 5/16 Type A Flat	2	
11	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	
Note: Item 4 conatins items 5 and 6. All items can be ordered seperately.				


9

G

EXHAUST SYSTEMS – ECH440

10

G

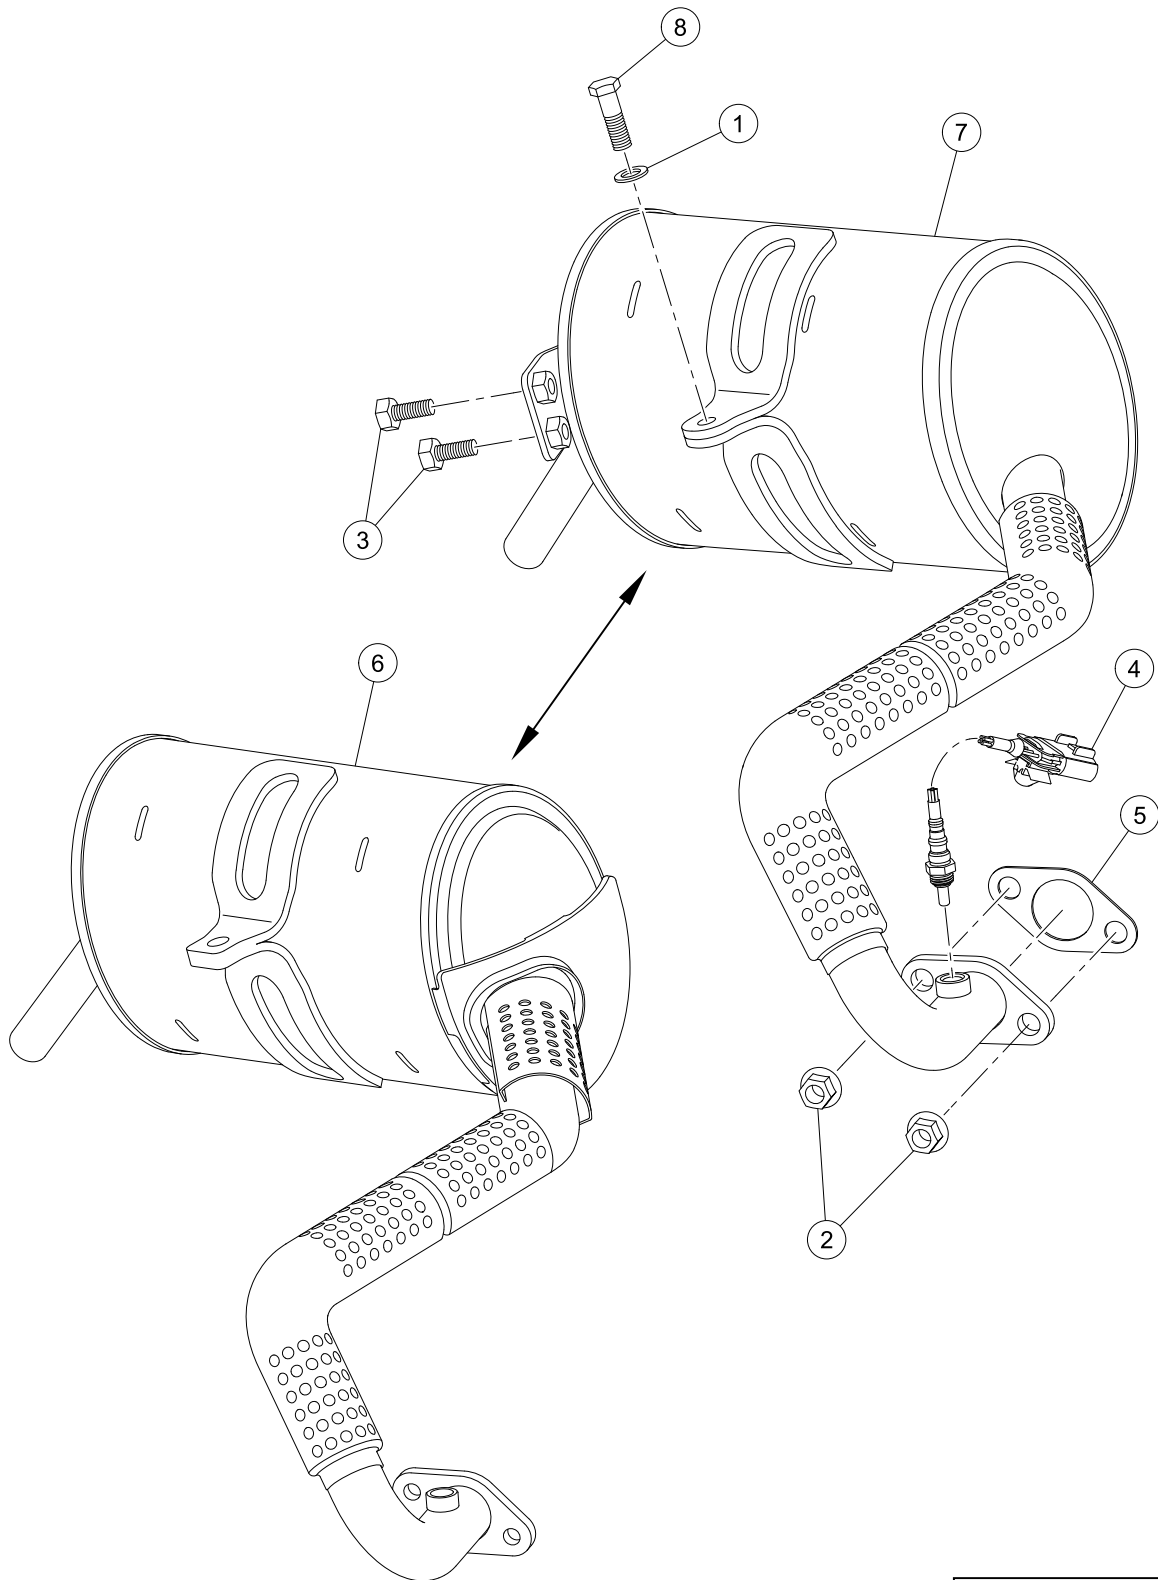

G-110199-000003

EXHAUST SYSTEMS

ITEM	PART NO.	DESCRIPTION	QTY	10
		1 2 3 4		G
1	<u>1011697</u>	Washer, 5/16 Flat	1	
2	<u>102298401</u>	Nut, M8, All Metal Lock	2	
3	<u>102922701</u>	Bolt, Flanged Head, M8x1.25x20 Lock Patch	2	
4	<u>47611209001</u>	Asm, Sensor, Oxygen, Heated	1	
5	<u>47611210001</u>	Gasket, Exhaust, Grpht, Ech440	1	
6	<u>47649808001</u>	Exhaust, LTFF, ECH440	1	
7	<u>47649808002</u>	Exhaust, Utility, ECH440	1	
8	<u>96705587</u>	Bolt, M8 X 1.25 X 30	1	


10

G

DRIVE BELT AND CLUTCHES – EFI GASOLINE VEHICLES

11

G

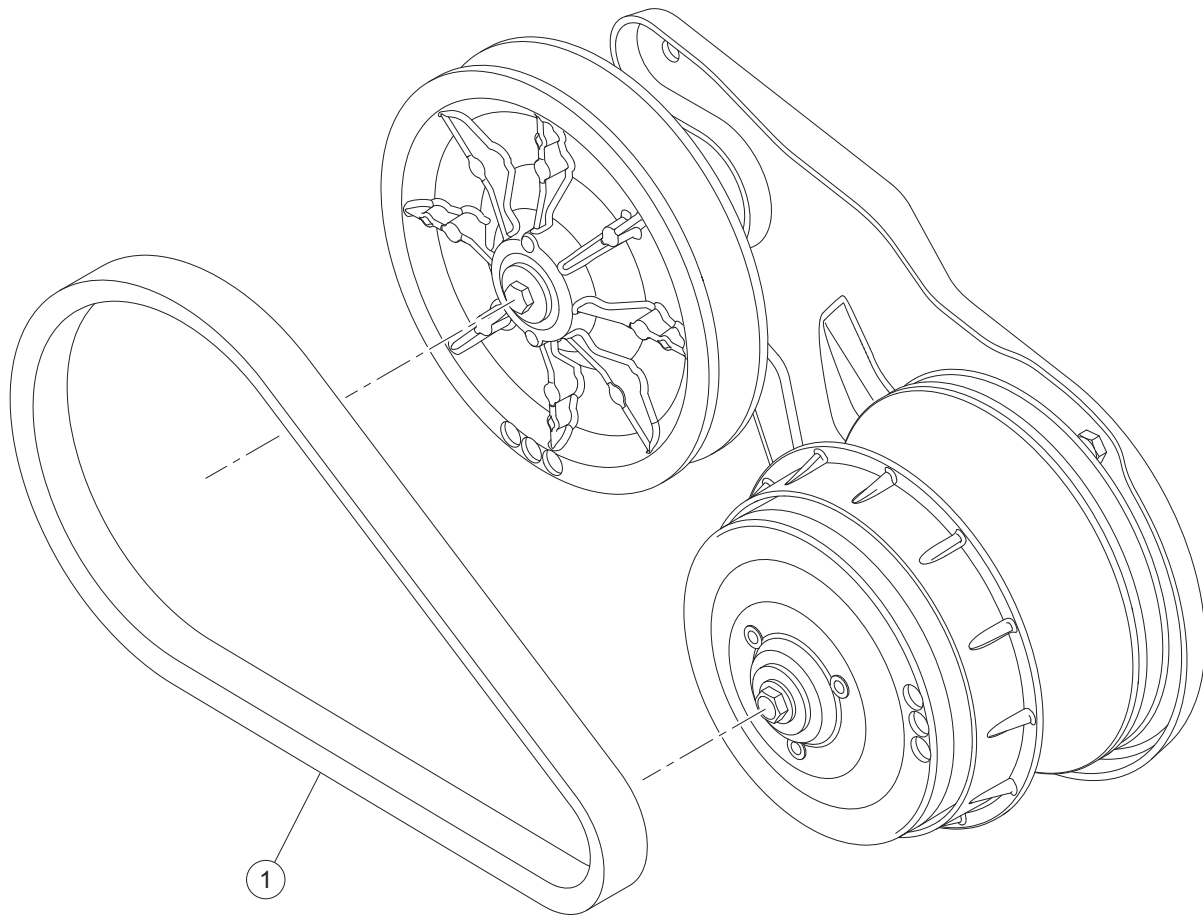


G-060099-000003

DRIVE BELT – EFI

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>105245801</u>	1 2 3 4 Belt, Drive, Pedal-Start	1

11

G




DRIVE CLUTCH – PEDAL-START VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102491501</u>	Washer, Hard, M10	1
2	<u>103973901</u>	Clutch, Drive, Pedal-Start (includes items 3 through 30)	1
3	<u>1014051</u>	Spring, Drive Clutch	1
4	<u>1014056</u>	Ring, Spiral Backup	2
5	<u>1014057</u>	Ring, 0.810" Internal Retaining	1
6	<u>1014058</u>	Thrust Washer	1
7	<u>1014059</u>	Drive Hub Assy, Drive Clutch	1
8	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	3
9	<u>1014453</u>	Kit, Drive Clutch Button (includes items 10 through 13)	1
10	<u>1014062</u>	Driver, Drive Clutch	3
11	<u>1014287</u>	Spring, Drive Button	3
12	<u>183</u>	Washer, #10, Type A, Flat	3
13	<u>8450</u>	Screw, #10-24 X 0.50, Hex-Head	3
14	<u>1016289</u>	Spacer, Fixed Face Shaft	1
15	<u>1016801</u>	Kit, Drive Clutch Weight (includes items 16 through 22)	1
16	<u>1014063</u>	Screw, 1/4-20 X 1.00, Hex Head	6
17	N/A	Pin, Dowel, 0.3752 x 1.50	3
18	<u>1014065</u>	Washer, Flat, 0.38" ID, Delrin	6
19	N/A	Clutch Weight, Secondary	3
20	N/A	Washer	6
21	<u>1016201</u>	Washer, Wave	3
22	N/A	Weight, Primary	3
23	N/A	Cap Plug	3
24	<u>103974201</u>	Asm, Sheave, Moveable, Drive, Wr (includes items 25 through 27)	1
25	<u>1014055</u>	Retainer	1
26	N/A	Bushing, Split, Drive Clutch	1
27	N/A	Sheave, Moveable, Drive, Wr	1
28	<u>103974401</u>	Sheave, Fixed, Drive, Wr	1
29	<u>103984601</u>	Spacer, Idler, Drive	1
30	<u>105096101</u>	Pulley, 7.3 Inch Effective Dia	1
31	<u>103976101</u>	Screw, 3/8-24x5.75, Patch	1
32	<u>334</u>	Washer, 3/8, Type A, Flat	1

11

G

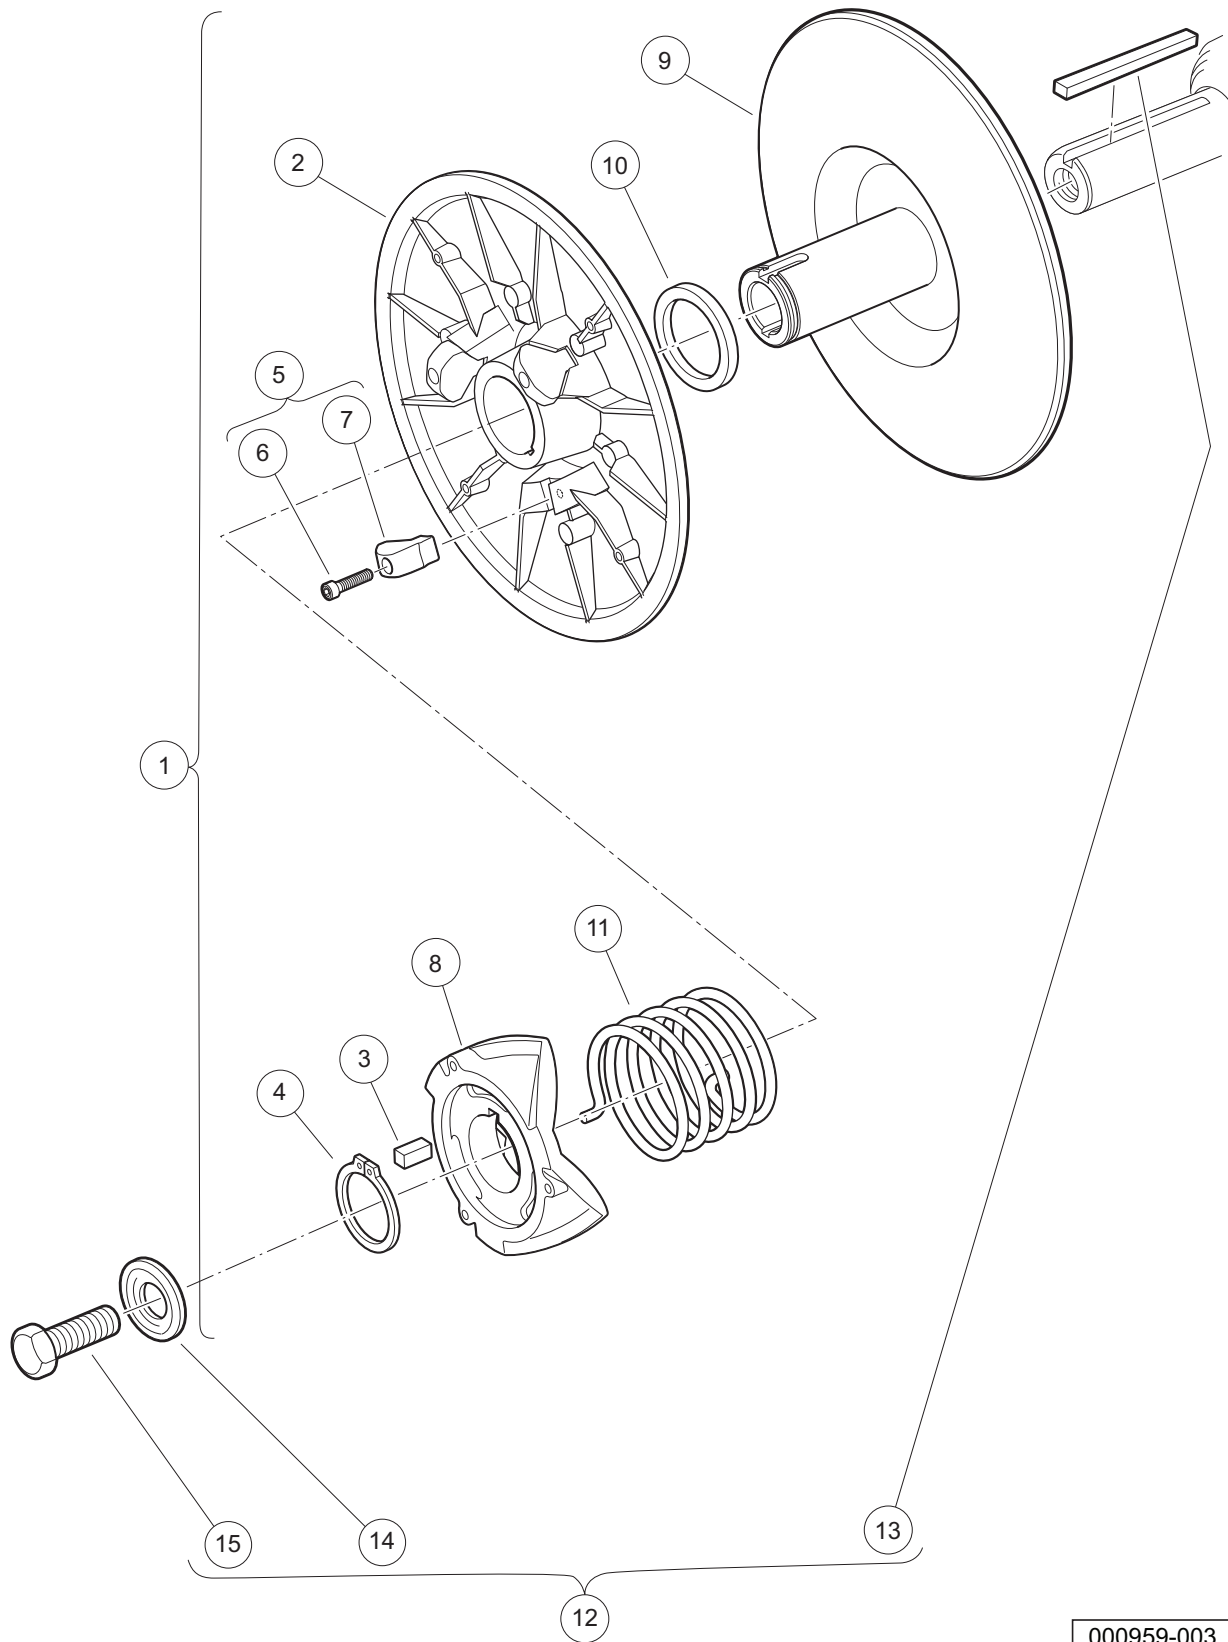

000959-003

DRIVEN CLUTCH – PEDAL START

ITEM	PART NO.	DESCRIPTION	QTY	11
		1 2 3 4		G
1	47601767002	Asm, Clutch, Driven, Ccw, Red (includes items 2 through 11)	1	
2	<u>1014072</u>	Movable-Face Assembly with Bushing	1	
3	<u>1014078</u>	Key, Driven Clutch	1	
4	<u>1014080</u>	Ring, Retaining	1	
5	<u>1014454</u>	Kit, Driven Clutch Button (includes items 6 and 7)	1	
6	<u>1012836</u>	Screw, #8-32 X 3/4, Socket-Head Cap	3	
7	N/A	Button, Drive	3	
8	<u>1017686</u>	Cam, Driven Clutch	1	
9	<u>103975301</u>	Sheave, Fixed, Driven, Wr	1	
10	<u>104025101</u>	Washer, Acetal, Driven Clutch	1	
11	<u>47601832001</u>	Spring, Drvn Clutch, Ccw, Red	1	
12	<u>AM10419</u>	Kit, Clutch Repair (includes items 13 through 15)	1	
13	<u>101833401</u>	Key, 3/16 Sq X 1.50"	1	
14	<u>102155801</u>	Washer, Driven Clutch	1	
15	<u>102242101</u>	Screw, 5/16-18 X 3/4 Hex-Head with Patch	1	


11

G

TRANSAXLE (FUJI ED65)

12

G

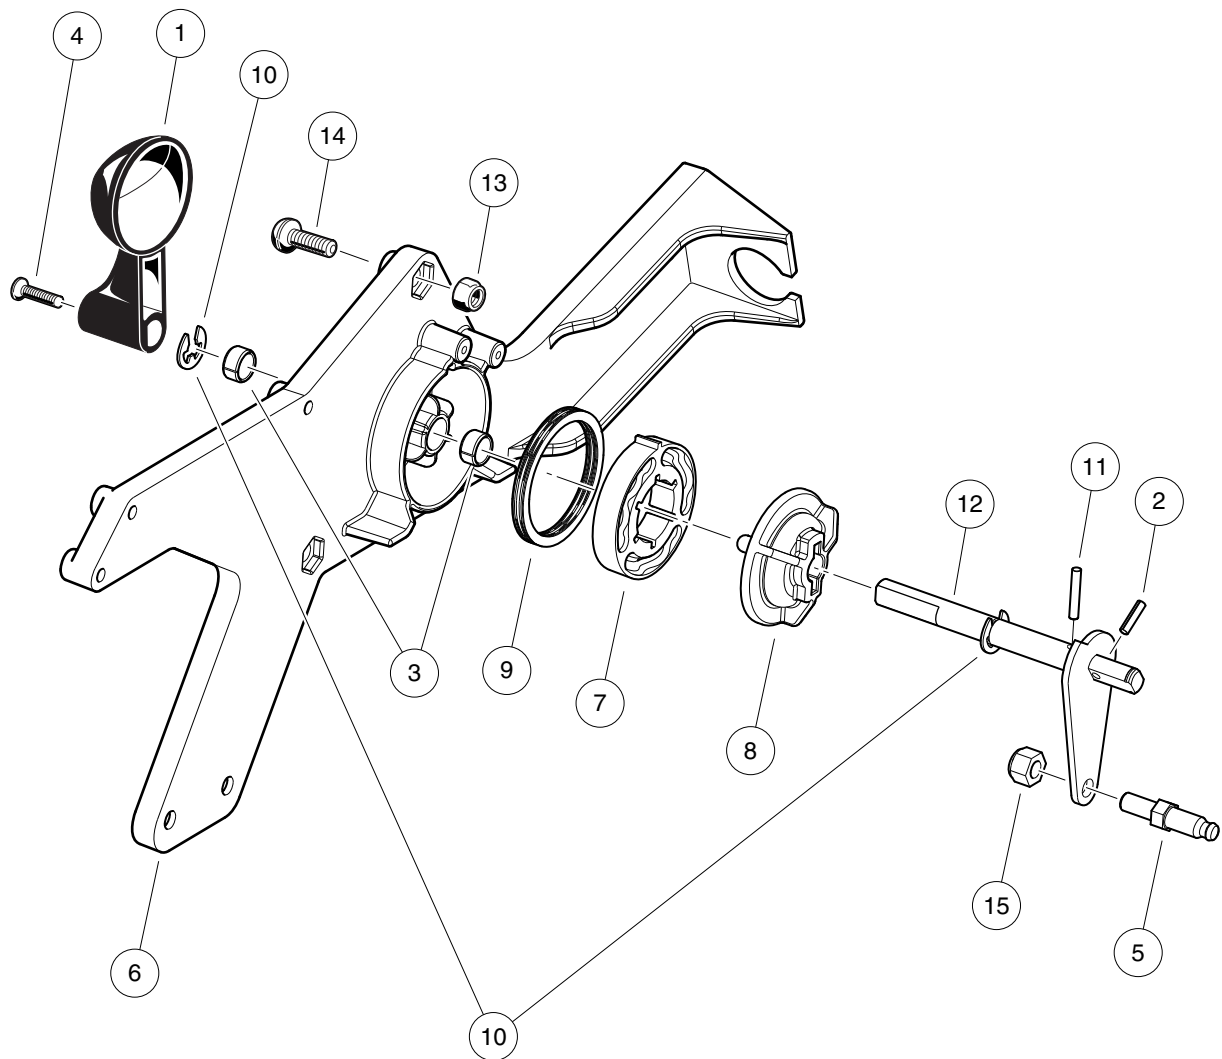


001012-001

FORWARD/REVERSE SHIFTER – EFI

ITEM	PART NO.	DESCRIPTION	QTY	12	G
		1 2 3 4			
1	<u>1012987</u>	Handle, FNR	1		
2	<u>1013591</u>	Pin, Roll, 1/8 X 1/2	1		
3	<u>1014145</u>	Bushing, Secondary Weight, Split	2		
4	<u>1015064</u>	Screw, #8-32 X 0.63 Machine	1		
5	<u>102526201</u>	Stud, Thread, 1/4-28	1		
6	<u>105037501</u>	Housing, Gas FNR Body Shift	1		
7	<u>105037601</u>	Cam, FNR Detent, 45 Degree	1		
8	<u>105037701</u>	Follower, FNR Detent	1		
9	<u>105038501</u>	Spring, Wave, Gas FNR Shifter	1		
10	<u>105039801</u>	E-Clip, External, 8mm Groove	2		
11	<u>105040401</u>	Pin, Round, 0.125 Dia x 0.625	1		
12	<u>105041201</u>	Weldment, Shaft, FNR, Dash	1		
13	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	3		
14	<u>8248</u>	Screw, 1/4-20 X 0.75, Truss-Head Machine	3		
15	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1		

12

G

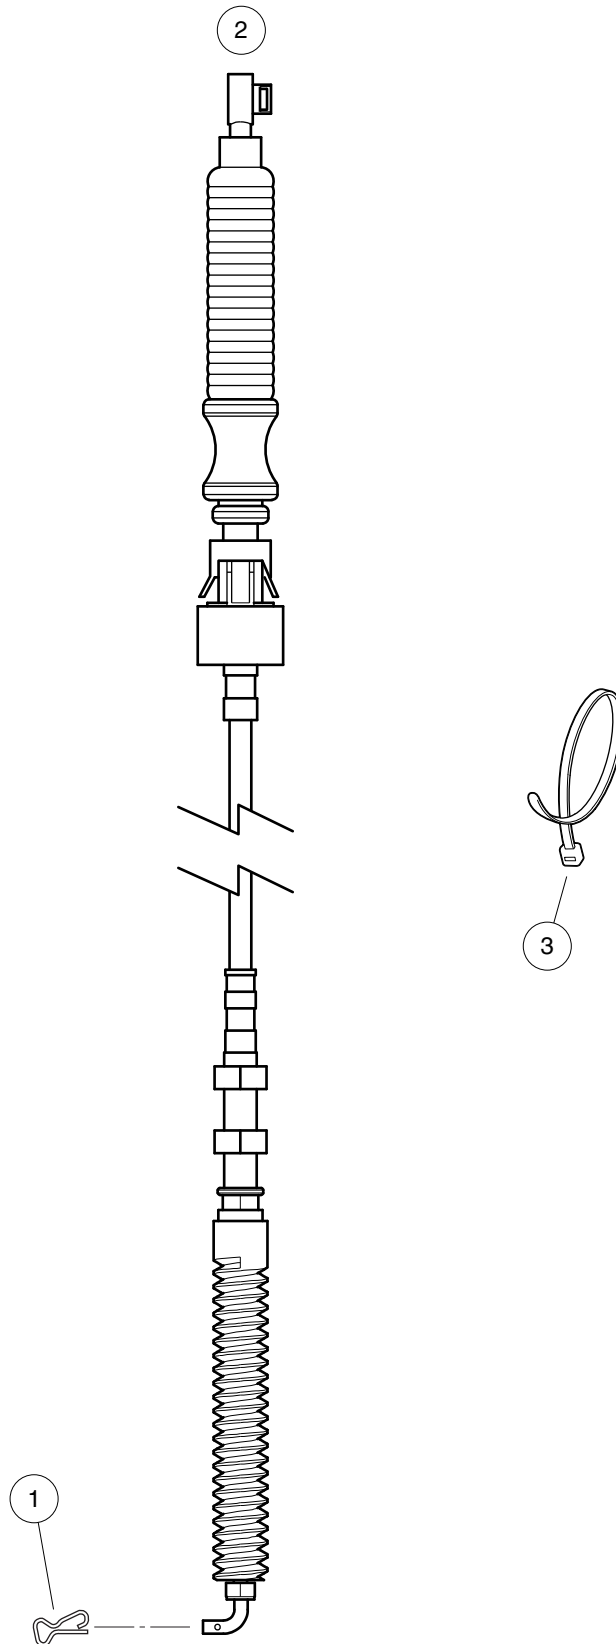


000988-001

SHIFTER CABLE

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>103886601</u>	1 2 3 4 Clip, Bowtie	1
2	<u>105038801</u>	Cable, Shifter	1
3	<u>8990</u>	Tie Wrap, 8" Nylon	A/R

12



G

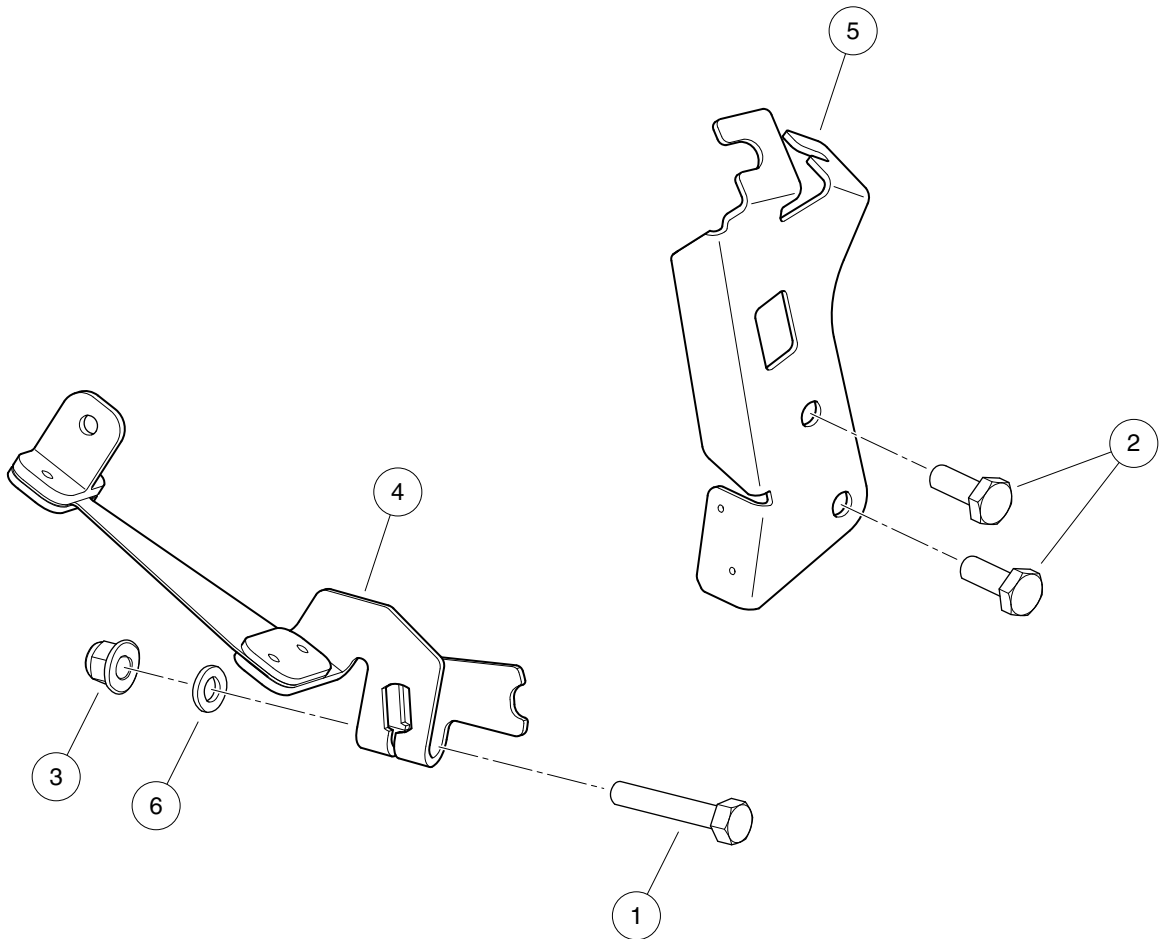

000965-001

SHIFT LEVER AND BRACKET – PEDAL-START ENGINES

ITEM	PART NO.	DESCRIPTION	QTY	12
		1 2 3 4		G
1	<u>102059501</u>	Screw, 6M-1.00 X 35mm, Hex Head	1	
2	<u>102498201</u>	Bolt, M10 X 1.25 X 25, Loctite	2	
3	<u>102621501</u>	Nut, Flange, M6 X 1.0, Nylon	1	
4	<u>105040901</u>	Lever, Shift, Flex, Transaxle, Pedal-Start	1	
5	<u>105135101</u>	Bracket, Cable, FNR/Accelerator, ED65	1	
6	<u>96705199</u>	Washer, M6	1	

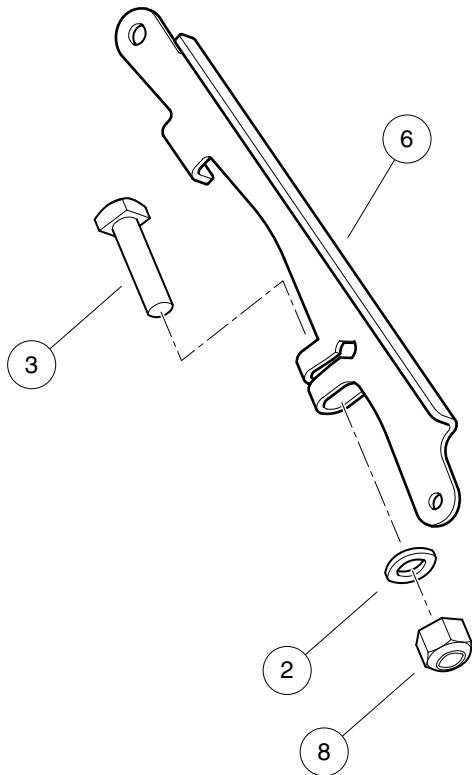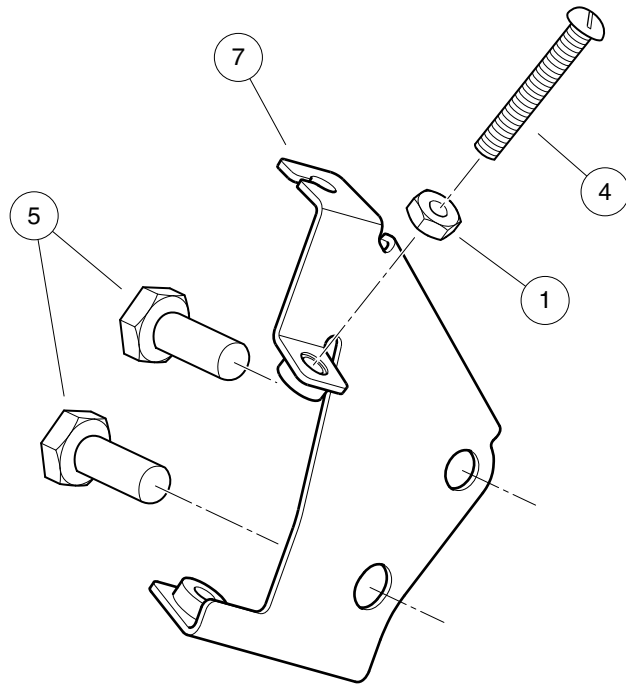


000966-002

GOVERNOR ARM AND BRACKETS – UTILITY VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011114	Nut, M6-1.00 Hex	1
2	1014007	Washer, 1/4, Flat	1
3	101886101	Screw, 1/4-20 X 1.00, Square-Head	1
4	102476401	Bolt, Stop, Pedal	1
5	102498201	Bolt, M10 X 1.25 X 25, Loctite	2
6	104023501	Arm, Governor, ED65	1
7	105144401	Weldment, Governor Bracket	1
8	8233	Locknut, 1/4-20, Nylon Insert	1

12

G

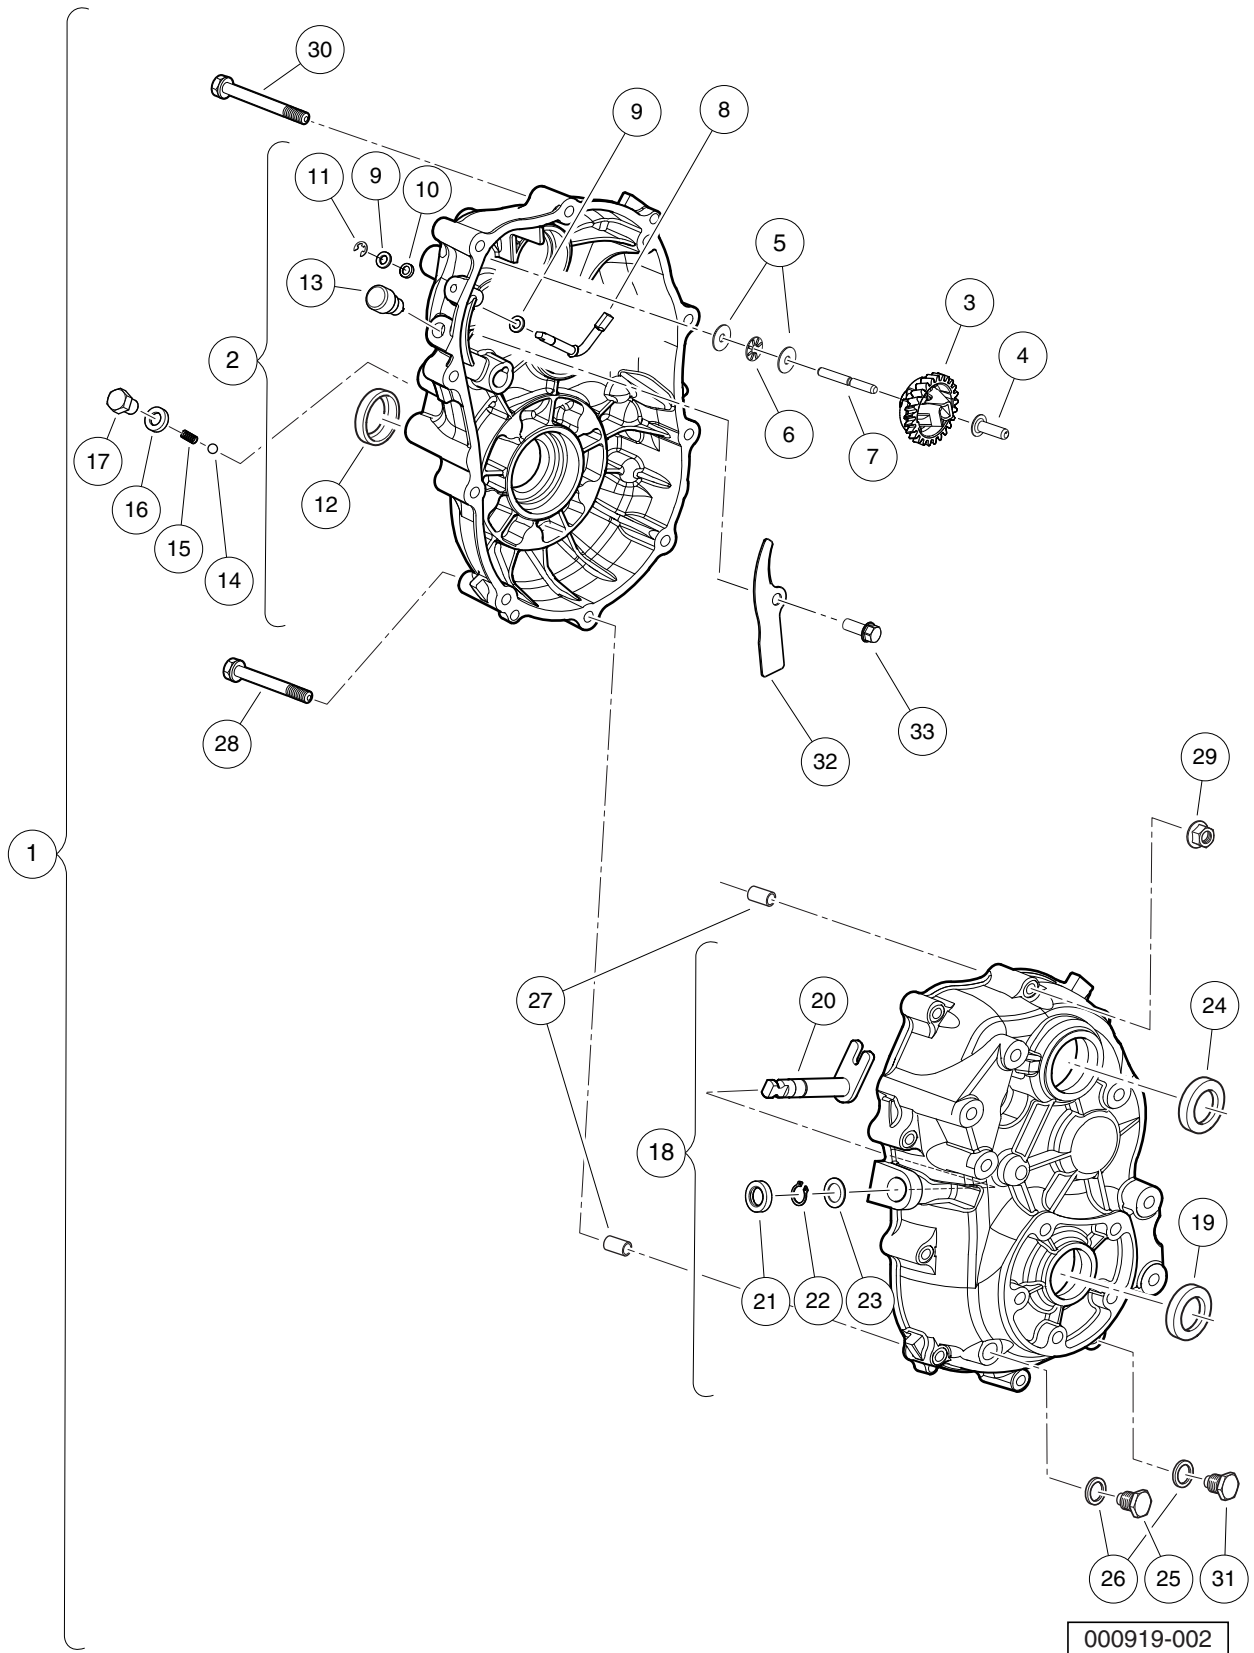


TRANSAXLE (ED65), LIMITED SLIP – PAGE 1 OF 3

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103879702</u>	Transaxle, ED65, Limited-Slip Differential (includes items 2 through 33)	1
2	<u>105025001</u>	Case, Transaxle, Left, Complete, ED65 (includes items 3 through 13)	1
3	<u>105025101</u>	Gear, Governor, Complete, ED65	1
4	<u>105025201</u>	Sleeve, Governor, ED65	1
5	<u>105025301</u>	Washer, ED65	2
6	<u>105025401</u>	Bearing, Thrust, ED65	1
7	<u>105025501</u>	Shaft, Governor Gear, ED65	1
8	<u>105025601</u>	Shaft, Governor, ED65	1
9	<u>105025701</u>	Washer, 6mm, ED65	2
10	<u>105025801</u>	Seal, Oil, 6x10x2.5, ED65	1
11	<u>105025901</u>	Retaining Ring, E5, ED65	1
12	<u>105026001</u>	Seal, Oil, 24x40x9, ED65	1
13	<u>105027101</u>	Vent, Breather, ED65	1
14	<u>105026101</u>	Ball, Steel, ED65	1
15	<u>105026201</u>	Spring, ED65	1
16	<u>105026301</u>	Gasket, 10, ED65	1
17	<u>105026401</u>	Bolt, M10-1.25x12mm Lg, ED65	1
18	<u>105026501</u>	Case, Transaxle, Right, Complete, ED65 (includes items 19 through 24)	1
19	<u>105026001</u>	Seal, Oil, 24x40x9, ED65	1
20	<u>105026601</u>	Shaft, Select, ED65	1
21	<u>105026701</u>	Seal, Oil, 13x22x5, ED65	1
22	<u>105026801</u>	Snap Ring, 13mm, ED65	1
23	<u>105026901</u>	Spacer, 13x1, ED65	1
24	<u>105027001</u>	Seal, Oil, 25x45x7, ED65	1
25	<u>105027201</u>	Plug, Oil Drain, ED65	1
26	<u>105027301</u>	Gasket, 14, ED65	2
27	<u>105028301</u>	Pin, Guide, ED65	2
28	<u>105028501</u>	Bolt, Flange, M8-1.25x65mm, ED65	1
29	<u>105030001</u>	Nut, Flange, M8-1.25, ED65	10
30	<u>105030701</u>	Bolt, Flanged, M8-1.25x80mm, ED65	9
31	<u>105063501</u>	Plug, Oil Drain, Magnetic, ED65	1
32	<u>105234801</u>	Plate, Ed65 Splash	1
33	<u>105234901</u>	Bolt, M6-1 X 12mm Lg, Ed65	1
Note: Fuji transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube.			

12


G

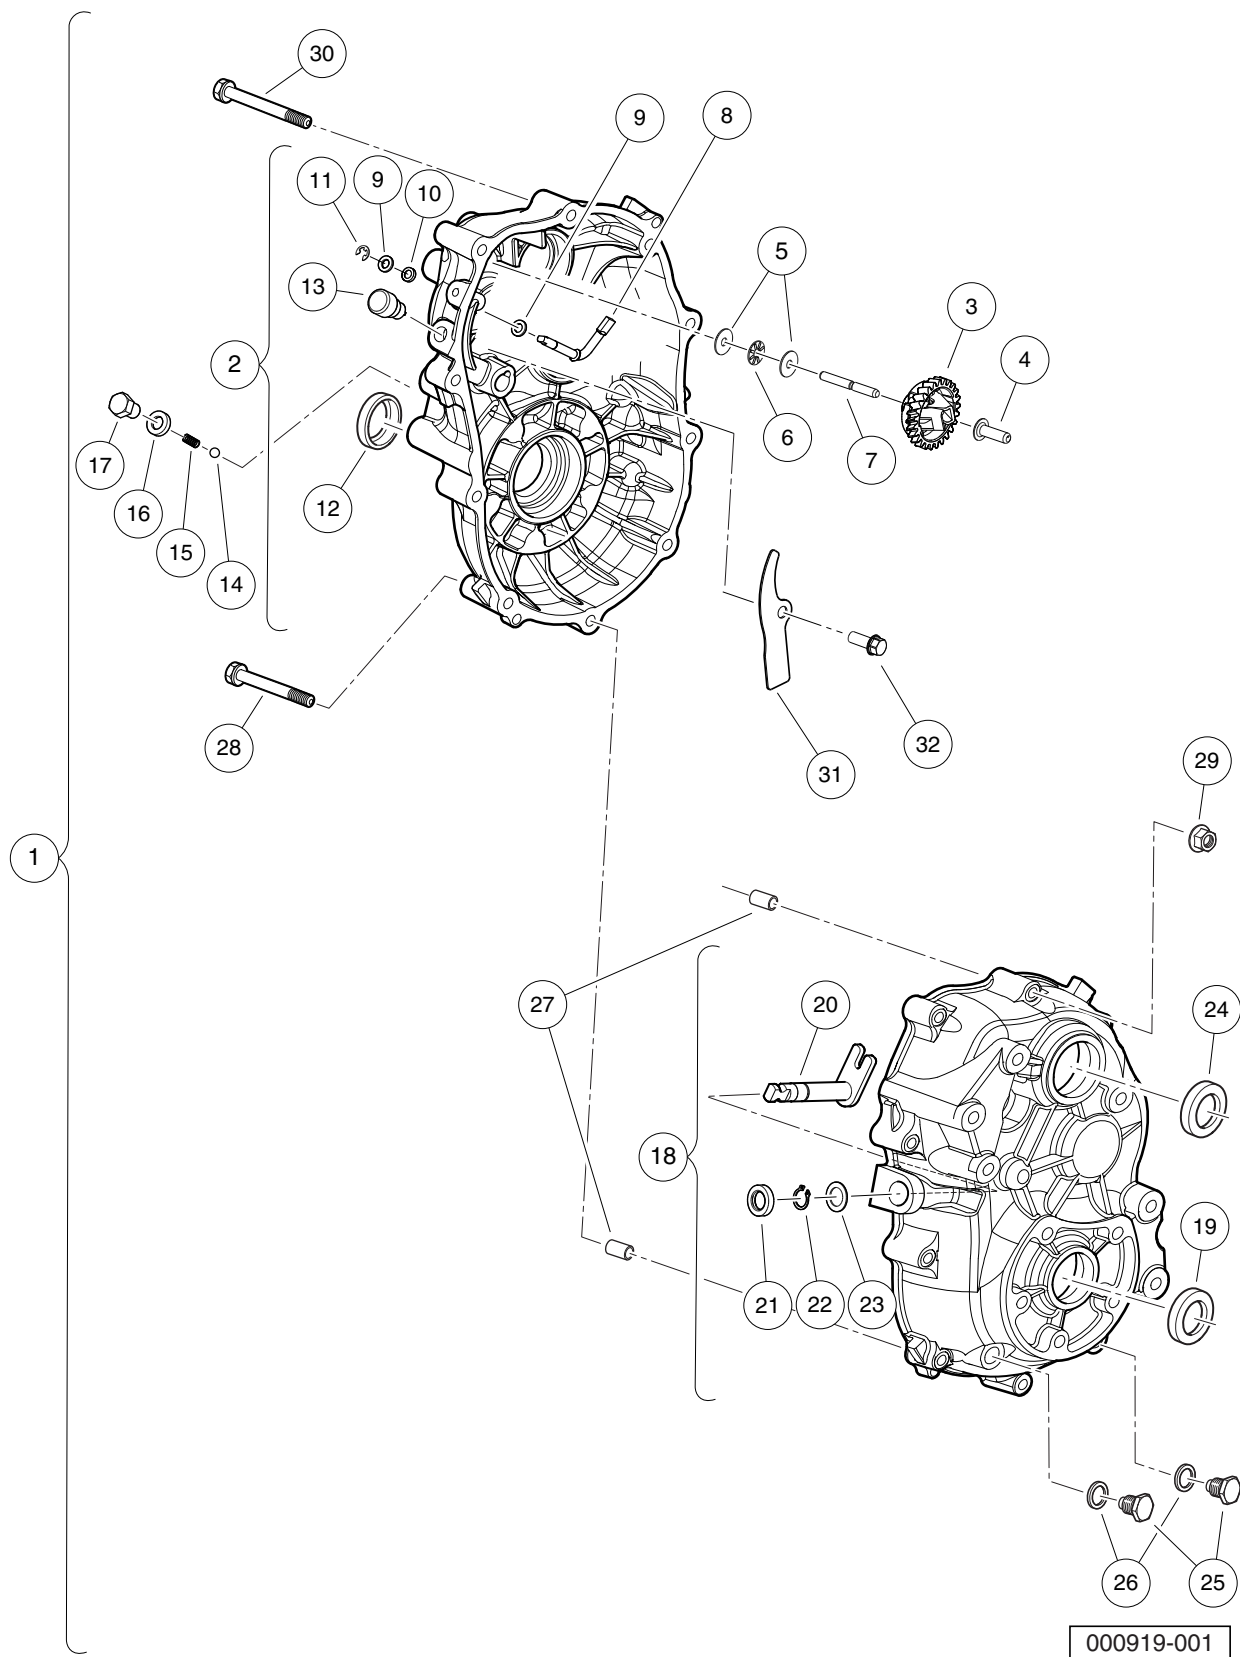

TRANSAXLE (ED65), OPEN – PAGE 1 OF 3

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103879701</u>	Transaxle, ED65, Open Differential (includes items 2 through 32)	1
2	<u>105025001</u>	Case, Transaxle, Left, Complete, ED65 (includes items 3 through 13)	1
3	<u>105025101</u>	Gear, Governor, Complete, ED65	1
4	<u>105025201</u>	Sleeve, Governor, ED65	1
5	<u>105025301</u>	Washer, ED65	2
6	<u>105025401</u>	Bearing, Thrust, ED65	1
7	<u>105025501</u>	Shaft, Governor Gear, ED65	1
8	<u>105025601</u>	Shaft, Governor, ED65	1
9	<u>105025701</u>	Washer, 6mm, ED65	2
10	<u>105025801</u>	Seal, Oil, 6x10x2.5, ED65	1
11	<u>105025901</u>	Retaining Ring, E5, ED65	1
12	<u>105026001</u>	Seal, Oil, 24x40x9, ED65	1
13	<u>105027101</u>	Vent, Breather, ED65	1
14	<u>105026101</u>	Ball, Steel, ED65	1
15	<u>105026201</u>	Spring, ED65	1
16	<u>105026301</u>	Gasket, 10, ED65	1
17	<u>105026401</u>	Bolt, M10-1.25x12mm Lg, ED65	1
18	<u>105026501</u>	Case, Transaxle, Right, Complete, ED65 (includes items 19 through 24)	1
19	<u>105026001</u>	Seal, Oil, 24x40x9, ED65	1
20	<u>105026601</u>	Shaft, Select, ED65	1
21	<u>105026701</u>	Seal, Oil, 13x22x5, ED65	1
22	<u>105026801</u>	Snap Ring, 13mm, ED65	1
23	<u>105026901</u>	Spacer, 13x1, ED65	1
24	<u>105027001</u>	Seal, Oil, 25x45x7, ED65	1
25	<u>105027201</u>	Plug, Oil Drain, ED65	2
26	<u>105027301</u>	Gasket, 14, ED65	2
27	<u>105028301</u>	Pin, Guide, ED65	2
28	<u>105028501</u>	Bolt, Flange, M8-1.25x65mm, ED65	1
29	<u>105030001</u>	Nut, Flange, M8-1.25, ED65	10
30	<u>105030701</u>	Bolt, Flanged, M8-1.25x80mm, ED65	9
31	<u>105234801</u>	Plate, Ed65 Splash	1
32	<u>105234901</u>	Bolt, M6-1 X 12mm Lg, Ed65	1
Note: Fuji transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube.			


12
G

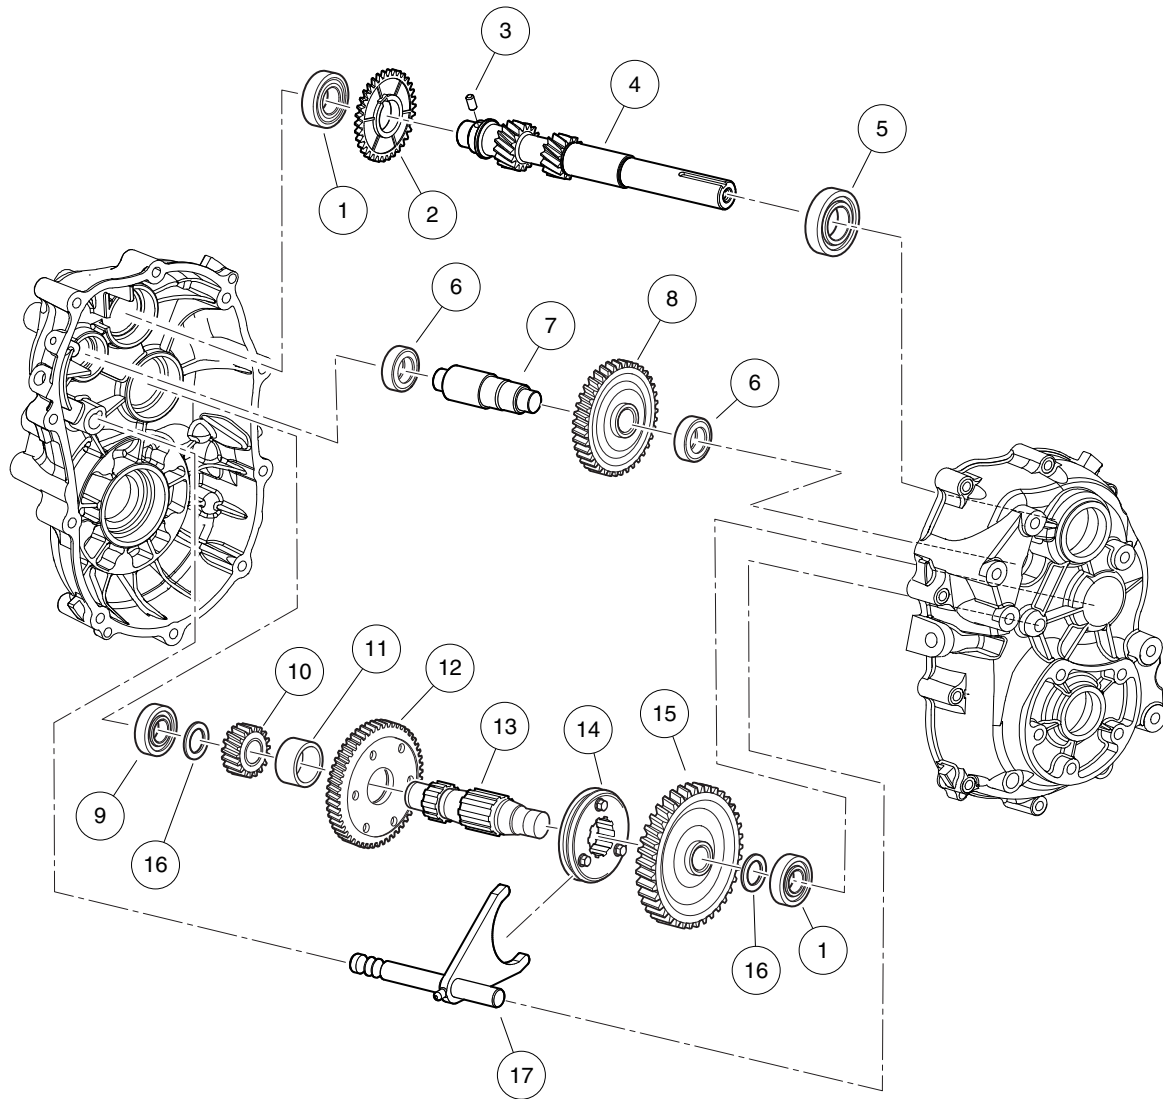

000919-003

TRANSAXLE (ED65), LIMITED SLIP AND OPEN – PAGE 2 OF 3

ITEM	PART NO.	DESCRIPTION	QTY	12	G
		1 2 3 4			
1	<u>105027401</u>	Bearing, Ball (6204)	2		
2	<u>105027501</u>	Gear, Governor, 34 Tooth, ED65	1		
3	<u>105027601</u>	Pin, 6x12 Long, ED65	1		
4	<u>105027701</u>	Shaft, Input, ED65	1		
5	<u>105027801</u>	Bearing, Ball (6205 seal)	1		
6	<u>105027901</u>	Bearing, Ball (6202)	2		
7	<u>105028001</u>	Shaft, Counter, ED65	1		
8	<u>105028201</u>	Gear, 34 Tooth, ED65	1		
9	<u>105028401</u>	Bearing, Ball (6304)	1		
10	<u>105028601</u>	Gear, 17 Tooth, ED65	1		
11	<u>105028701</u>	Collar, 24 x 12, ED65	1		
12	<u>105028801</u>	Gear, 52 Tooth, ED65	1		
13	<u>105028901</u>	Shaft, Center, ED65	1		
14	<u>105029001</u>	Clutch, Pin, ED65	1		
15	<u>105029101</u>	Gear, 62 Tooth, ED65	1		
16	<u>105029201</u>	Spacer, 20x2, ED65	2		
17	<u>105030901</u>	Shaft, Shift, ED65	1		
		Note: To identify your transaxle, locate the serial number decal on the axle tube.			

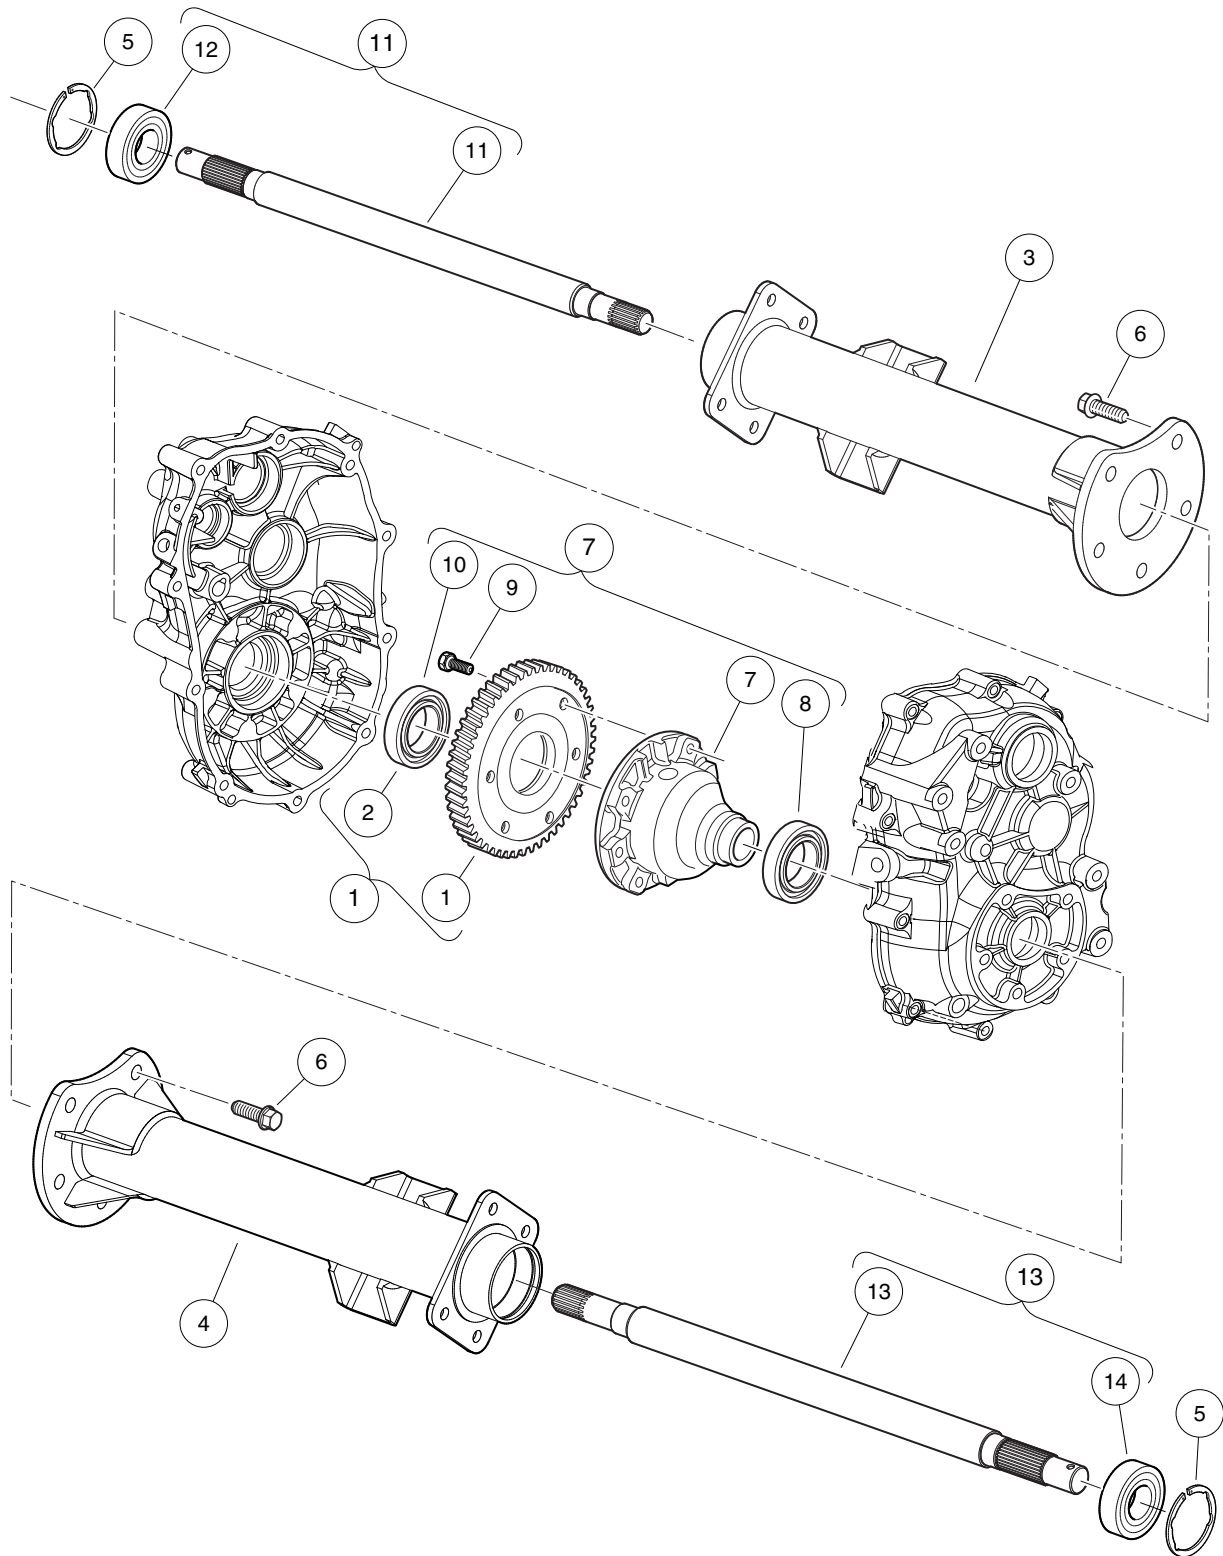


000919-005

TRANSAXLE (ED65), LIMITED SLIP – PAGE 3 OF 3

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	105029901	Gear, 60 Tooth, Complete, ED65 (includes item 2)	1
2	<u>105029801</u>	Bearing, Ball (6007)	1
3	105030401	Axle Tube, Driver-Side, ED65	1
4	105030501	Axle Tube, Passenger-Side, ED65	1
5	<u>105030601</u>	Snap Ring, 52mm, ED65	2
6	<u>105030801</u>	Bolt, Flange, M10-1.25x25, ED65	10
7	<u>105063601</u>	Differential, Limited-Slip, ED65 (includes items 8 through 10)	1
8	<u>105028101</u>	Bearing, Ball (6006)	1
9	<u>105029501</u>	Bolt, M10-1.25x26mm Lg, ED65	6
10	<u>105029801</u>	Bearing, Ball (6007)	1
11	<u>105066001</u>	Axle Shaft, Driver-Side, Complete, ED65 (includes item 12)	1
12	<u>105030301</u>	Bearing, Ball (6205DD)	1
13	<u>105066101</u>	Axle Shaft, Passenger-Side, Complete, ED65 (includes item 14)	1
14	<u>105030301</u>	Bearing, Ball (6205DD)	1
Note: To identify your transaxle, locate the serial number decal on the axle tube.			

12

G

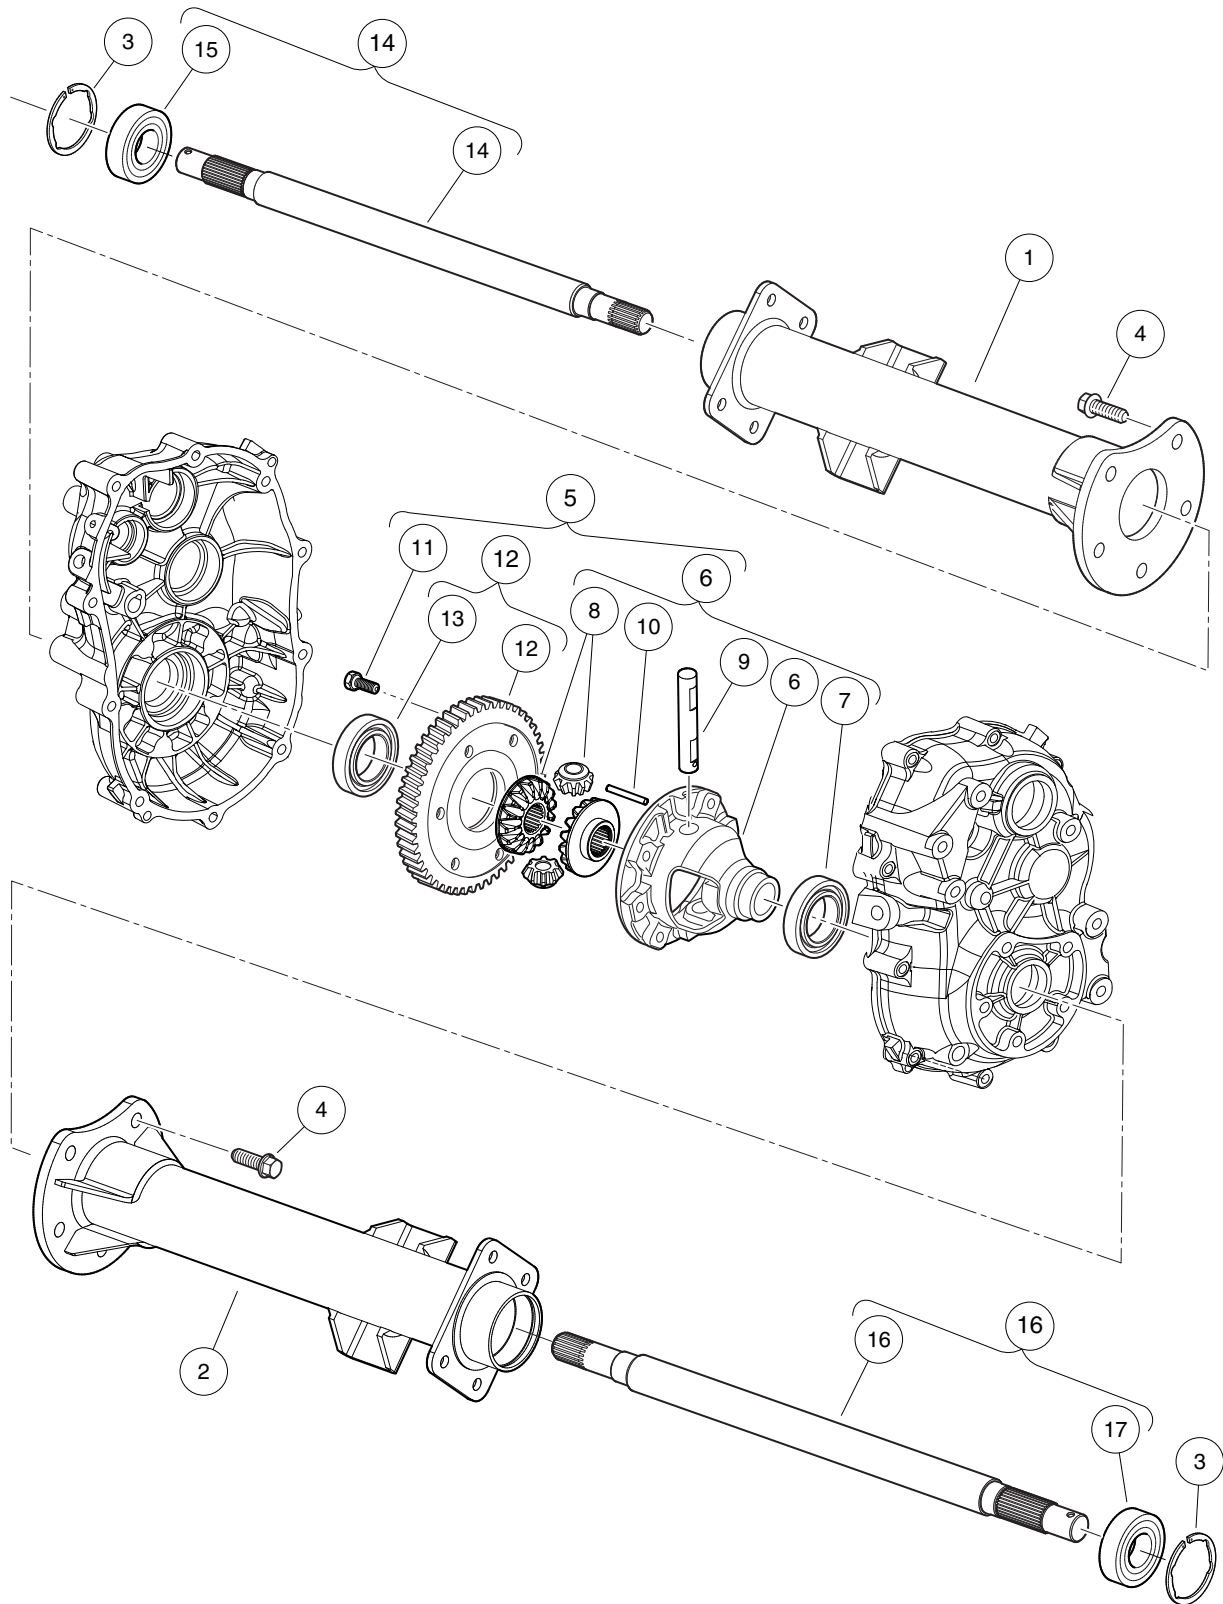


000919-004

TRANSAXLE (ED65), OPEN – PAGE 3 OF 3

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	105030401	Axle Tube, Driver-Side, ED65	1
2	105030501	Axle Tube, Passenger-Side, ED65	1
3	<u>105030601</u>	Snap Ring, 52mm, ED65	2
4	<u>105030801</u>	Bolt, Flange, M10-1.25x25, ED65	10
5	<u>105031001</u>	Differential, Open, ED65 (includes items 6 through 12)	1
6	<u>105029301</u>	Case, Differential, Complete, ED65 (includes items 7 through 10)	1
7	<u>105028101</u>	Bearing, Ball (6006)	1
8	105029401	Gear Set, Differential, ED65	1
9	<u>105029601</u>	Shaft, Differential, ED65	1
10	<u>105029701</u>	Pin, 4x40 Long, ED65	1
11	<u>105029501</u>	Bolt, M10-1.25x26mm Lg, ED65	6
12	105029901	Gear, 60 Tooth, Complete, ED65 (includes item 13)	1
13	<u>105029801</u>	Bearing, Ball (6007)	1
14	<u>105066001</u>	Axle Shaft, Driver-Side, Complete, ED65 (includes item 15)	1
15	<u>105030301</u>	Bearing, Ball (6205DD)	1
16	<u>105066101</u>	Axle Shaft, Passenger-Side, Complete, ED65 (includes item 17)	1
17	<u>105030301</u>	Bearing, Ball (6205DD)	1
Note: To identify your transaxle, locate the serial number decal on the axle tube.			

12

G

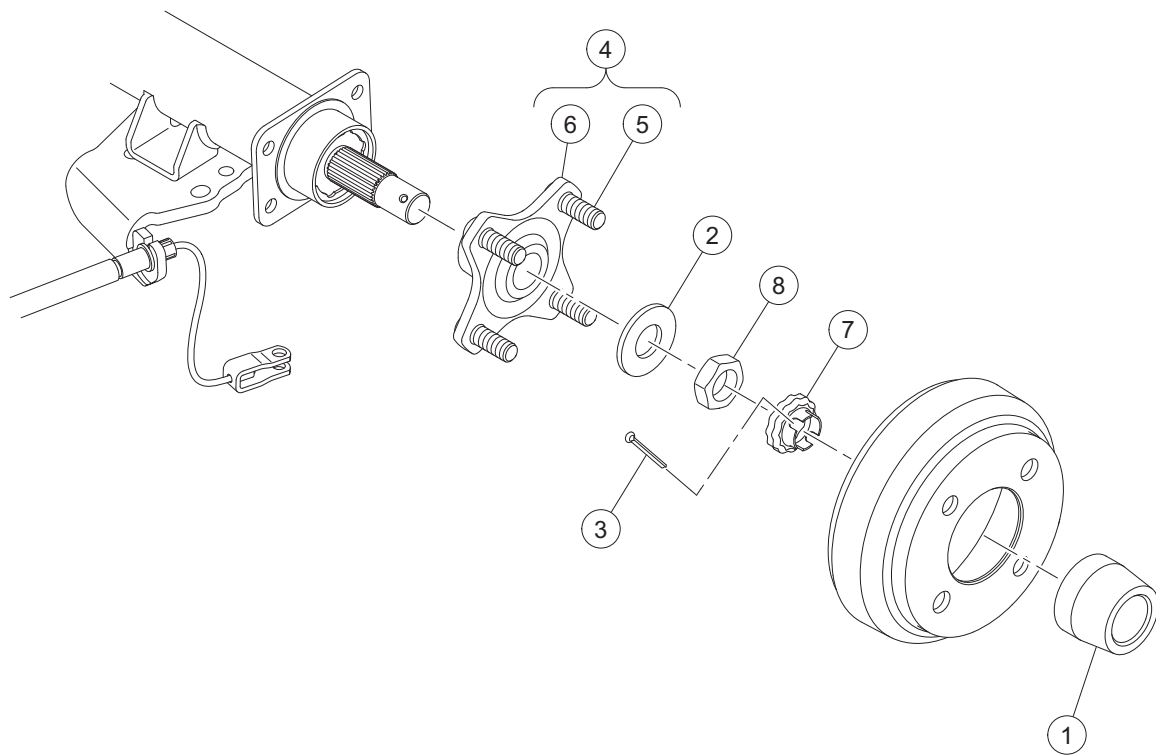


G-070199-000003

HUB, REAR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102274101	Center Cap, Rubber	2
2	<u>102617801</u>	Washer, Hard, M22	2
3	<u>103989501</u>	Pin, Cotter, 9/64 X 1.75"	2
4	<u>103995001</u>	Asm, Hub, Machined (includes items 5 and 6)	2
5	<u>103951501</u>	Lug Stud, 1/2-20 UNF, SAE J1102	4
6	<u>103979301</u>	Hub, Machined	1
7	<u>104021701</u>	Retaining Ring, Hex Nut, M22	2
8	<u>104027101</u>	Nut, Hex, M22x1.5, Thin	2

12

G

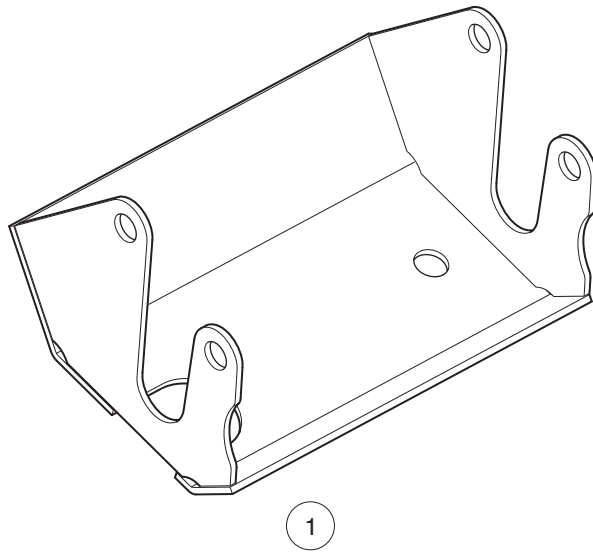

001436-001

DIFFERENTIAL GUARD, ED65 – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
1	47662588001	1 2 3 4 Guard, Differential	1

12

G


12

G

ELECTRICAL SYSTEM – ELECTRIC VEHICLES

13

E

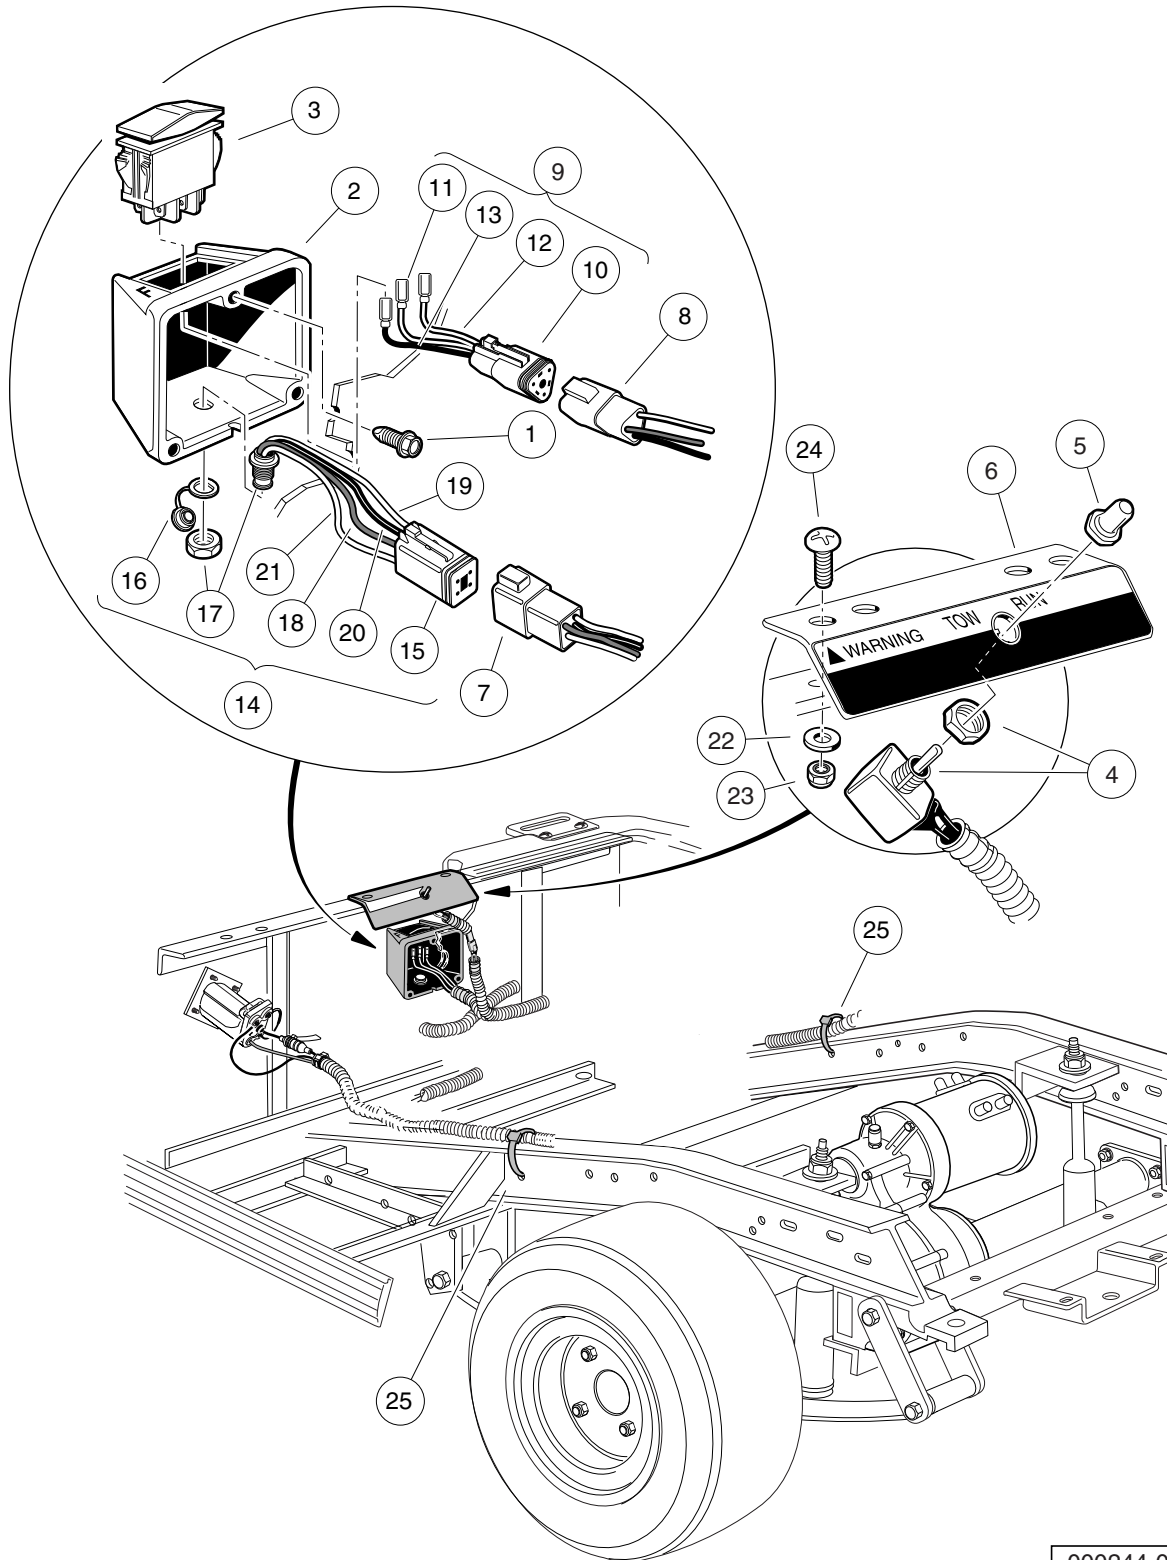

000244-001

FORWARD/REVERSE SWITCH, TOW/RUN SWITCH



ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	3
2	<u>101855002</u>	Case, FNR Switch	1
3	<u>101856002</u>	Switch, Rocker, Single-Pole	1
4	<u>101908101</u>	Switch Assembly, Tow/Run	1
5	<u>101908401</u>	Boot, Switch	1
6	<u>101922501</u>	Bracket, Tow/Run Switch Mounting	1
7	<u>101932401</u>	Kit, 4-Pin Receptacle and Wedge Lock	1
8	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
9	<u>102266601</u>	Wire Assembly, FNR Switch (includes items 10 through 13)	1
10	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
11	N/A	Wire Assembly, #18 Blue	1
12	N/A	Wire Assembly, #18 Orange	1
13	N/A	Wire Assembly, #18 Brown	1
14	<u>102266701</u>	Wire Assembly, IQDM Port (includes items 15 through 21)	1
15	<u>101932501</u>	Kit, 4-Pin Wedge Lock	1
16	<u>102196901</u>	Dust Cap	1
17	N/A	Connector Mount, Four-Pin	1
18	N/A	Wire Assembly, #18 Red/Yellow	1
19	N/A	Wire Assembly, #18 Black/Yellow	1
20	N/A	Wire Assembly, #18 Blue/Yellow	1
21	N/A	Wire Assembly, #18 Green/Yellow	1
22	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
23	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2
24	<u>8248</u>	Screw, 1/4-20 X 0.75, Truss-Head Machine	2
25	<u>8990</u>	Tie Wrap, 8" Nylon	1

13

E

13

E

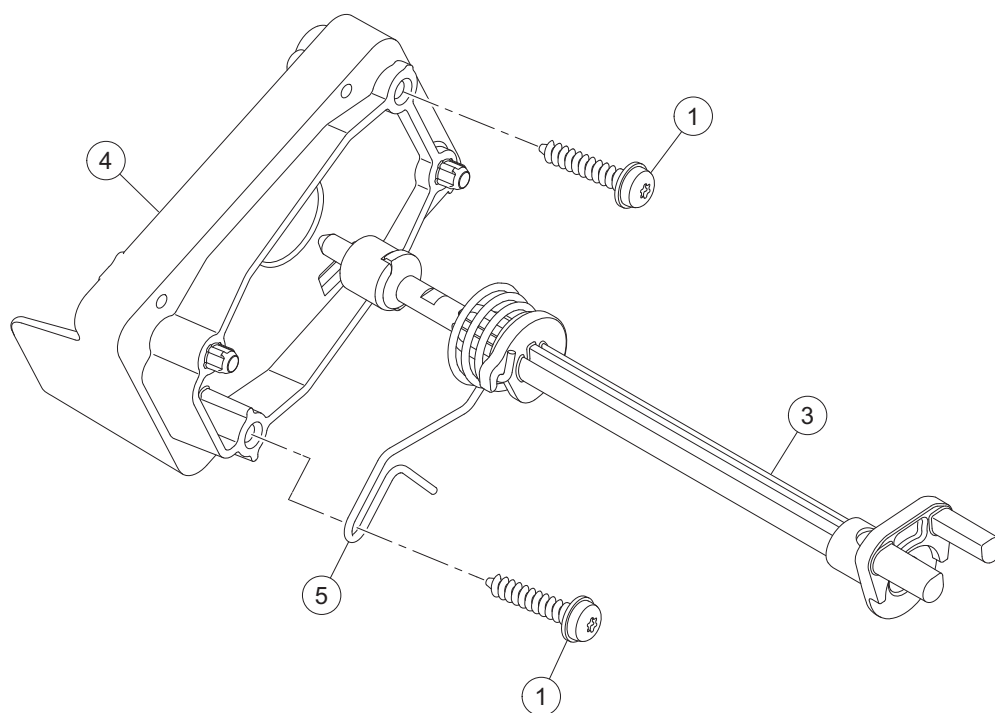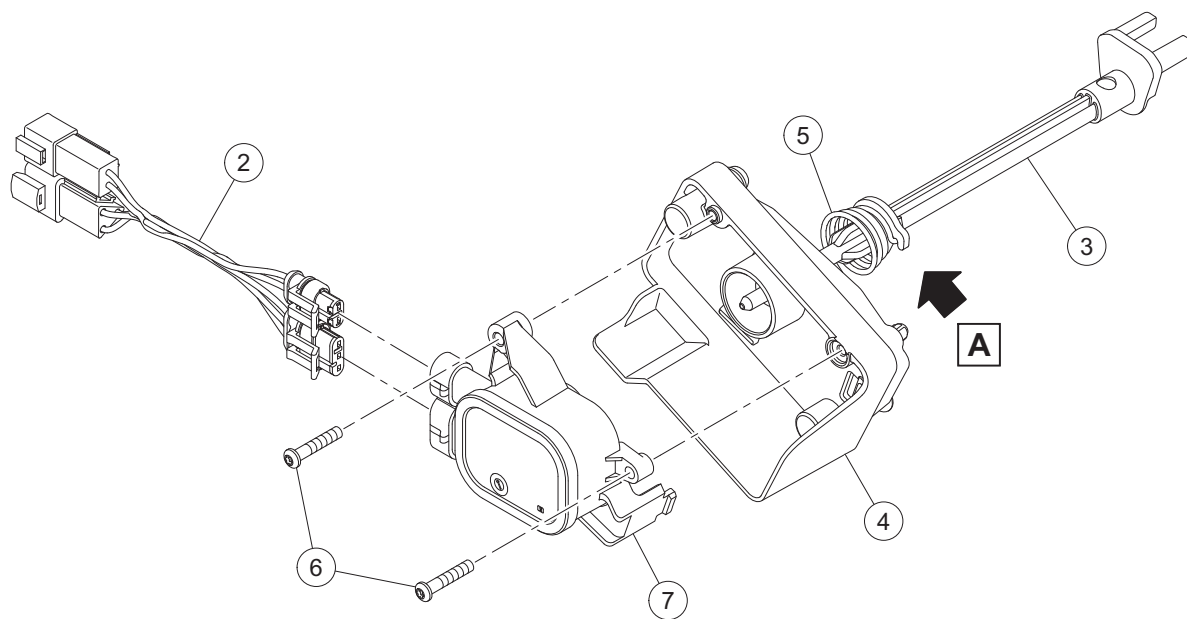

G-131199-000004

MOTOR CONTROLLER OUTPUT REGULATOR (MCOR)


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015752</u>	Screw, #12-16 X 0.625, Hi-Lo	2
2	<u>102297230</u>	Screw, M6, Torx, Interlock Thread	2
3	<u>103890801</u>	Harness, Jumper, Mcor3	1
4	<u>103902101</u>	Bar, Drive, Cast	1
5	<u>103902301</u>	Housing, Mcor	1
6	<u>103902401</u>	Spring, Torsion	1
7	<u>103943401</u>	Screw, Pan, #10 X 1.00 Hi-lo	2
8	<u>105116301</u>	MCOR4, Type 16 Switch	1
Note: For a complete MCOR4 conversion kit with instructions, order p/n 103943601.			

13

E

13

E

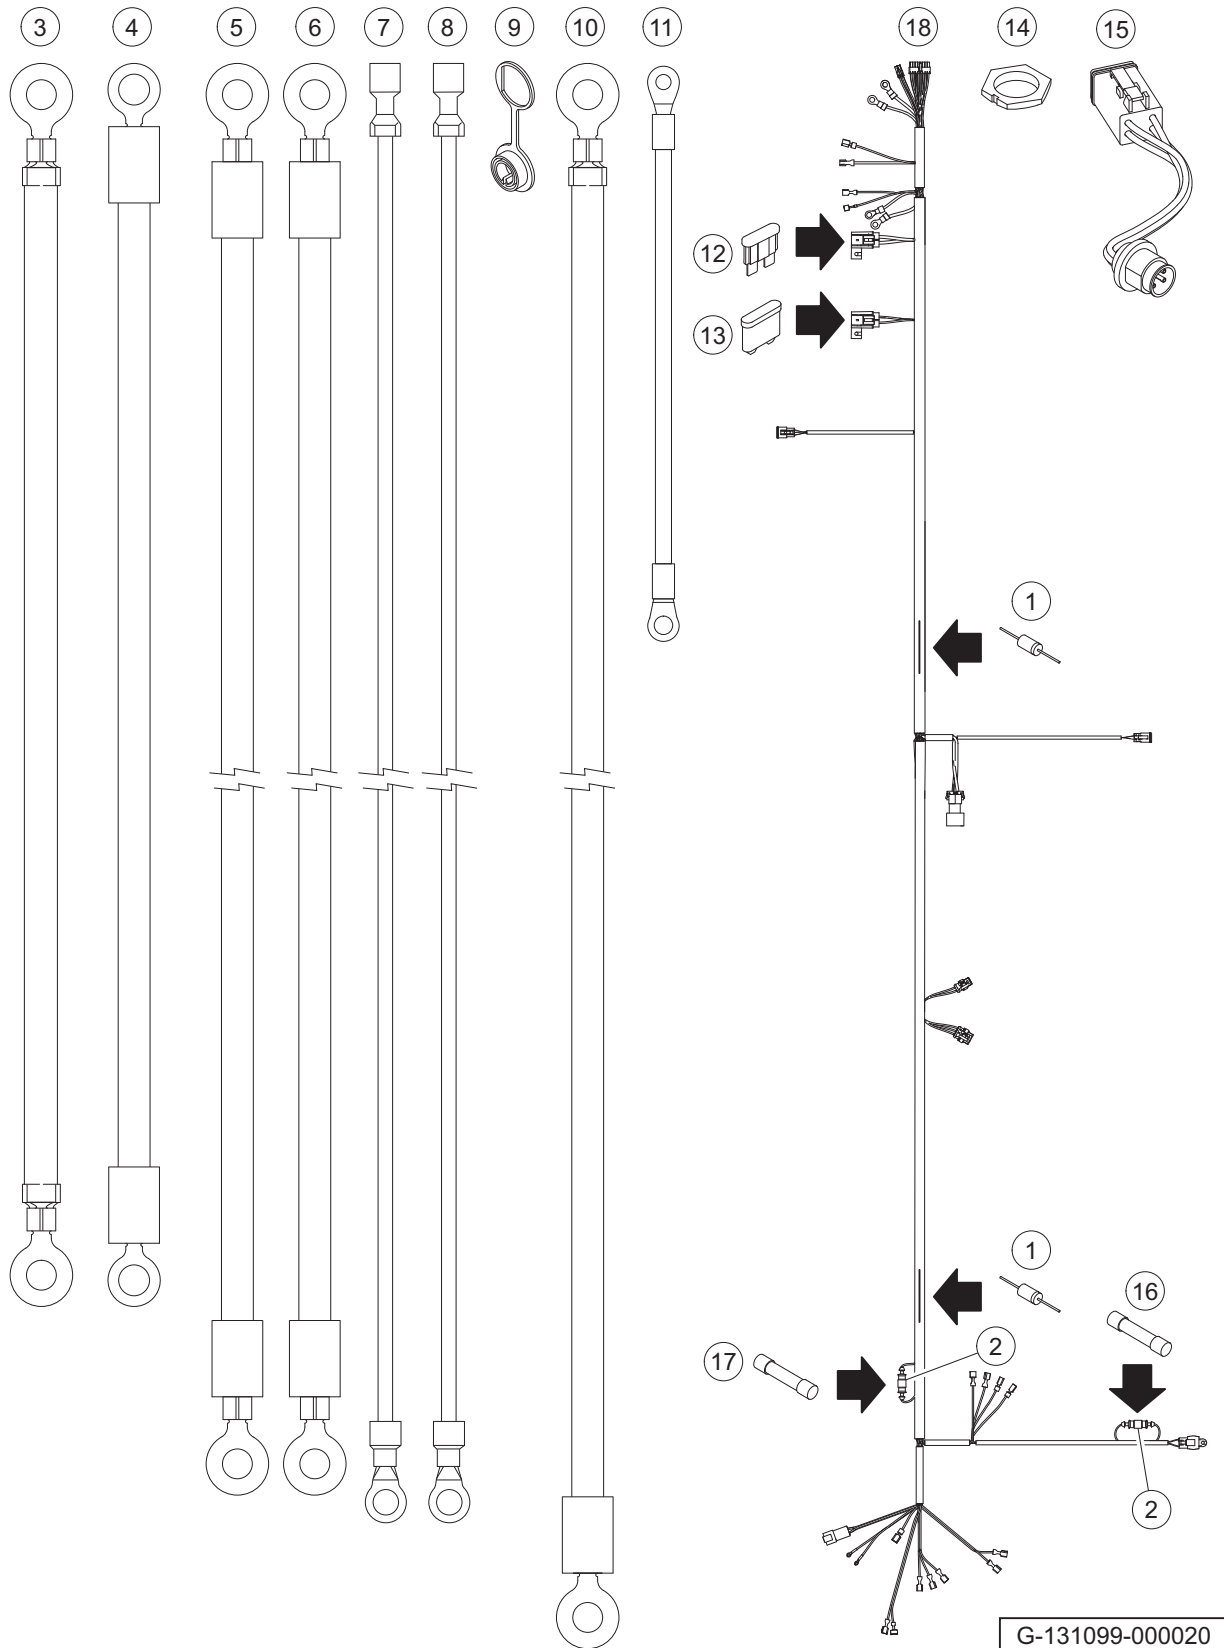

WIRING – ELECTRIC VEHICLE



ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014789</u>	Diode, General Purpose, 3.0-Amp	1
2	<u>1015360</u>	In-line Fuse Holder	2
3	<u>101795701</u>	Asm, Wire, #6blk, 15 In	3
4	<u>101903001</u>	Wire Assembly #6 Yellow	1
5	<u>101968701</u>	Wire Assy, #6 White	1
6	<u>101978001</u>	Wire Assy, #6 Green	1
7	<u>101978101</u>	Asm, Wire, #10 Orange 5/16	1
8	<u>101978201</u>	Asm, Wire, #10 Blue 5/16	1
9	<u>102196901</u>	Dust Cap	1
10	<u>102199601</u>	Wire Asm, #6 Red, 37.7	1
11	<u>102263601</u>	Wire Assy, #10 Black	1
12	<u>102492301</u>	Fuse, 30-Amp	1
13	<u>102538601</u>	15 Amp Fuse	1
14	<u>102572401</u>	Nut, Diagnostic Port	1
15	<u>103218601</u>	Harness, Diagnostic Port	1
16	<u>103924801</u>	Fuse, Glass, 2-Amp	1
17	<u>105173901</u>	Fuse, Agc, 1 Amp	1
18	<u>47563434001</u>	Harness, Main, Sb, Hfc	1
Note: Items 1, 2, 12, 13, 16 and 17 are supplied with and part of item 18 main wire harness assy.			

13

E

13

E

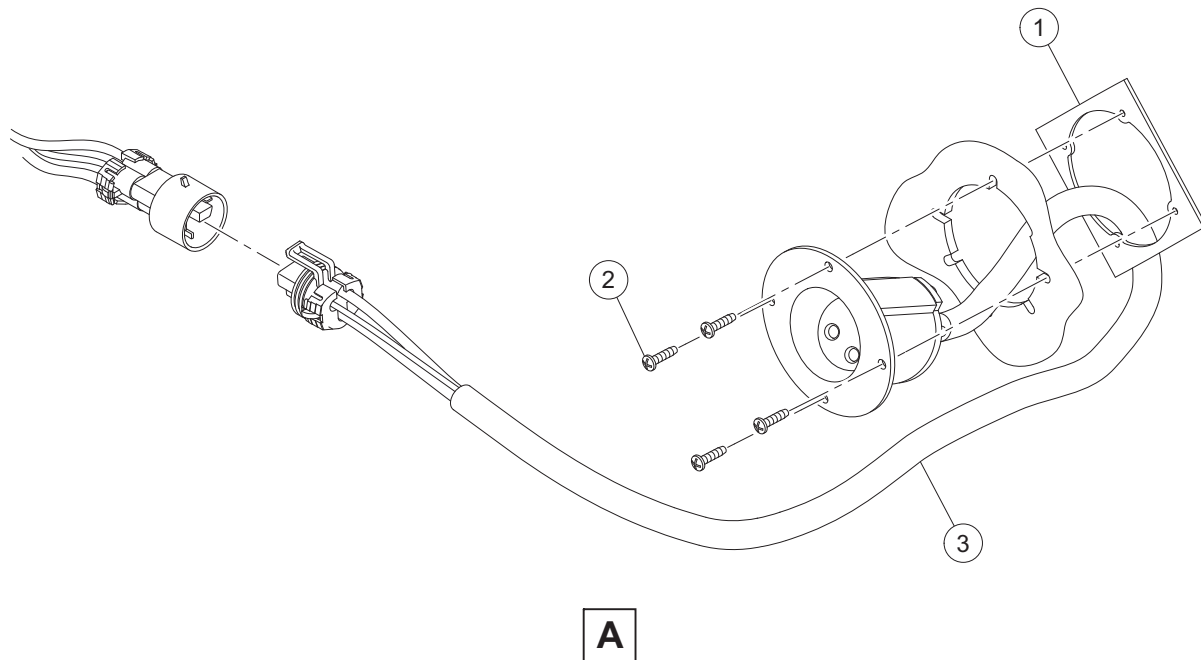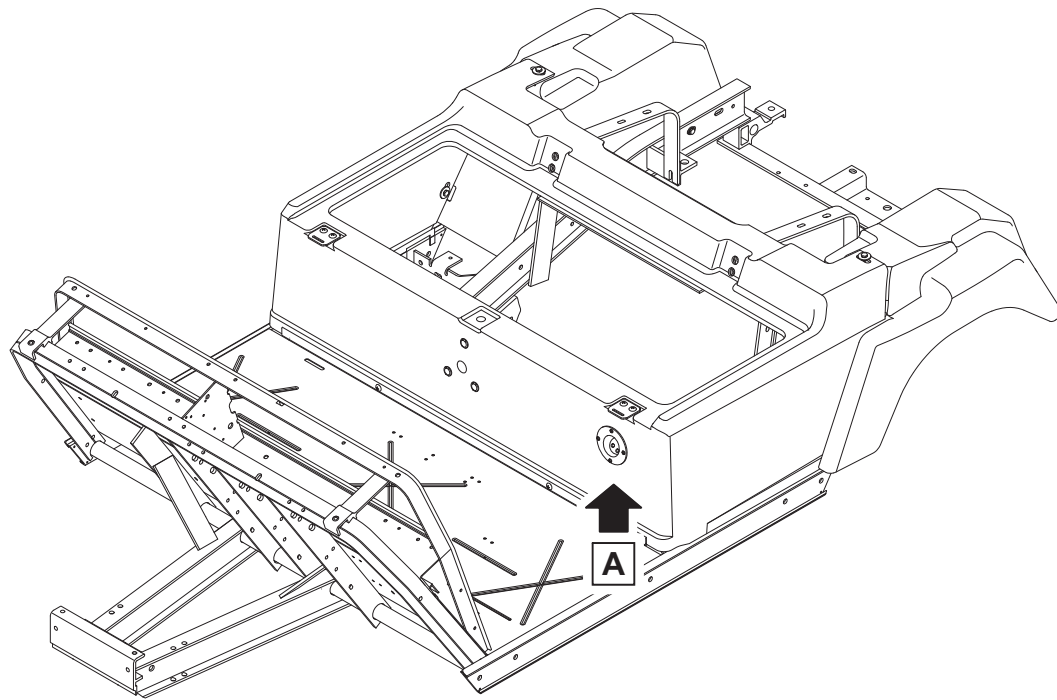

G-130899-000021

BATTERY CHARGER RECEPTACLE


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101801001	Plate, Receptacle Backing	1
2	101832001	Screw, #7-19 X 0.625 Phillips Pan-Head Tap	4
3	47564781001	Receptacle, Body Mnt, Hfc	1

13

E

13

E



COMPUTER, CONTROLLER, AND SOLENOID


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1012285</u>	Screw, 1/4 X 0.625 Hex-Head	14
2	<u>1012528</u>	Nut, M8-1.25 Hex	2
3	<u>1013734</u>	Lockwasher, 8mm Split	2
4	<u>1014063</u>	Screw, 1/4-20 X 1.00, Hex Head	2
5	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	2
6	<u>1014947</u>	Resistor Assembly	1
7	<u>101910401</u>	Screw, 5/16-18 X 1.25 Thrd Frm	2
8	<u>101965205</u>	Plate, Component Mounting	1
9	<u>102240501</u>	Bolt, Controller, Terminal	3
10	<u>102243101</u>	Extrusion, Cover Support	1
11	<u>102865901</u>	Solenoid 48v Slot Mt No Diode	1
12	<u>103316901</u>	Cover Asm - Controller (includes items 13 through 15)	1
13	<u>101931501</u>	Decal, Component Cover	1
14	<u>103316701</u>	Cover - Controller, Deep	1
15	<u>103316801</u>	Gasket - Controller Cover	1
16	<u>103982301</u>	Controller, 1515, 250A, White	1
17	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2
18	<u>8990</u>	Tie Wrap, 8" Nylon	2

13

E

13

E

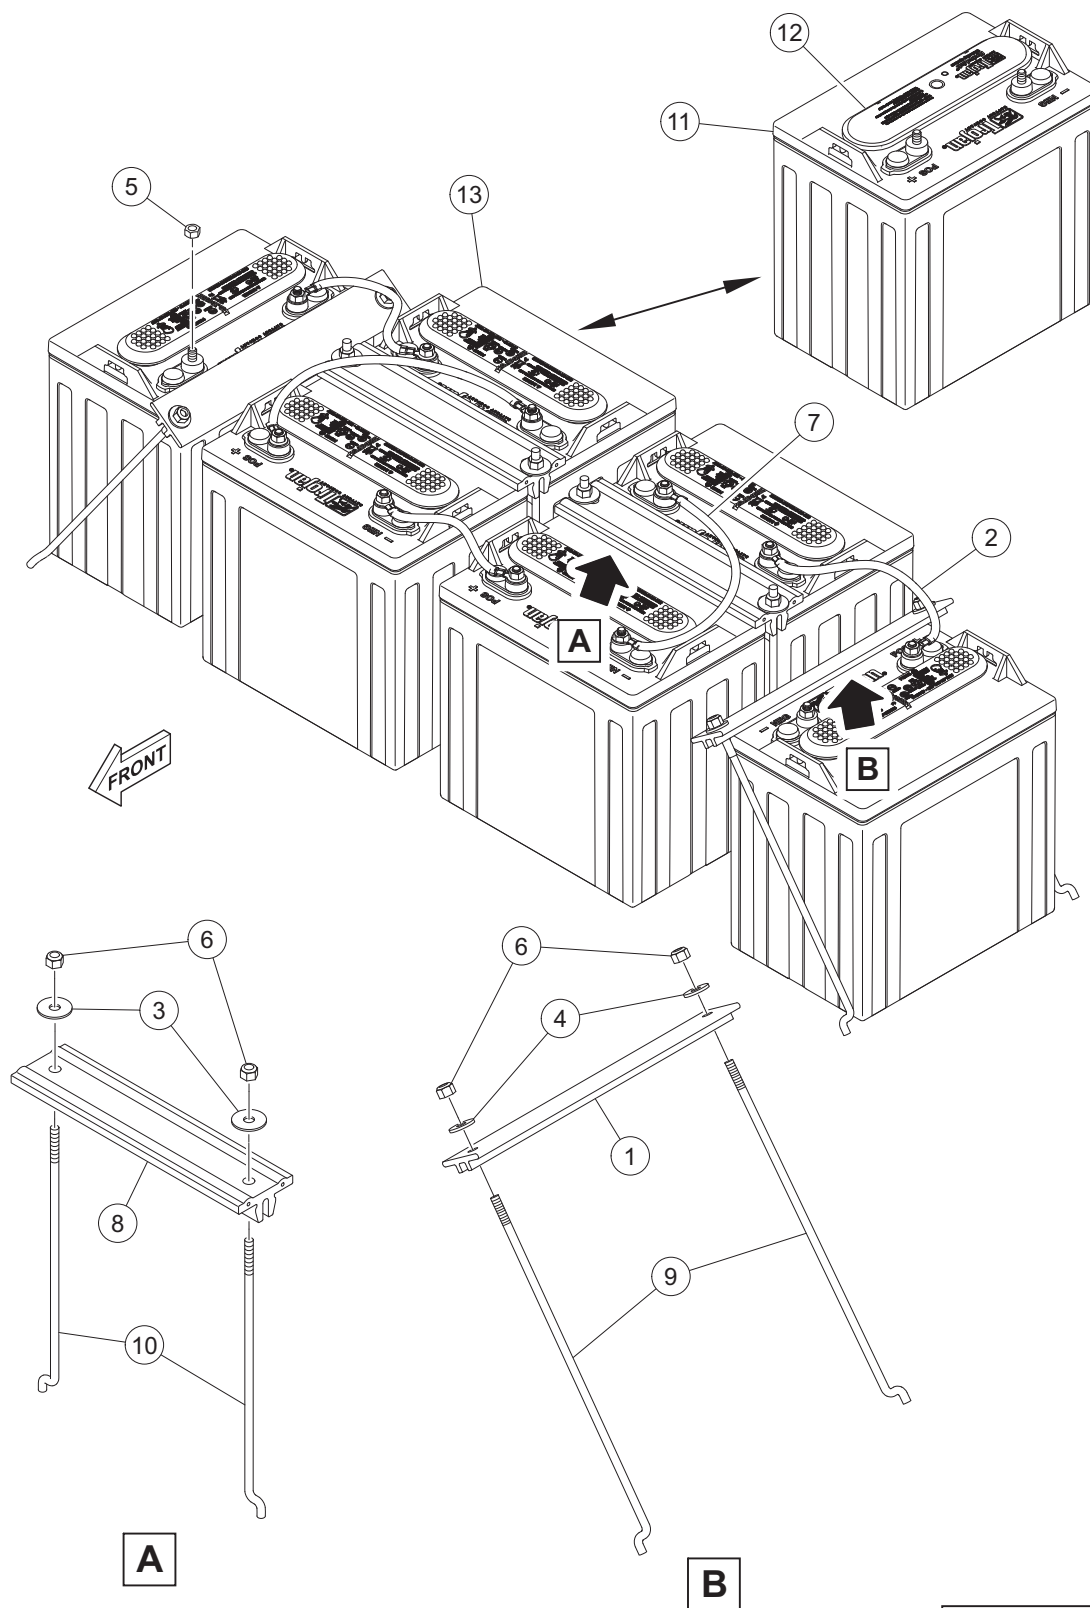


G-130799-000010

BATTERIES 8-VOLT,HEAVY DUTY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101090802</u>	Hold-Down, Battery	2
2	<u>1010958</u>	Asm, Wire, #6blk 8in	3
3	<u>1011578</u>	Washer, 5/16 Type B Flat	4
4	<u>1011697</u>	Washer, 5/16 Flat	4
5	<u>1014304</u>	Nut, 5/16-18 Stainless-Steel Hex	12
6	<u>1015072</u>	Locknut, 5/16-18 Nylon Insert	8
7	<u>101795701</u>	Asm, Wire, #6blk, 15 In	2
8	<u>103504301</u>	Tee, Batt Ret Ctr Short	2
9	<u>103696801</u>	J Bolt, Batt Hold Down 12"	4
10	<u>103958101</u>	J-bolt 10.75"	4
11	<u>103971798</u>	Battery,8v Trojan T875,spws,sp (includes item 12)	6
12	<u>47689303001</u>	Cap,hydrolink,trojan,8v,svc	1
13	<u>103971799</u>	Battery,8v Trojan T875, Wet,sp	6
Note: Item 11 is for use in vehicles with Single Point Watering System (SPWS) only.			

13

E

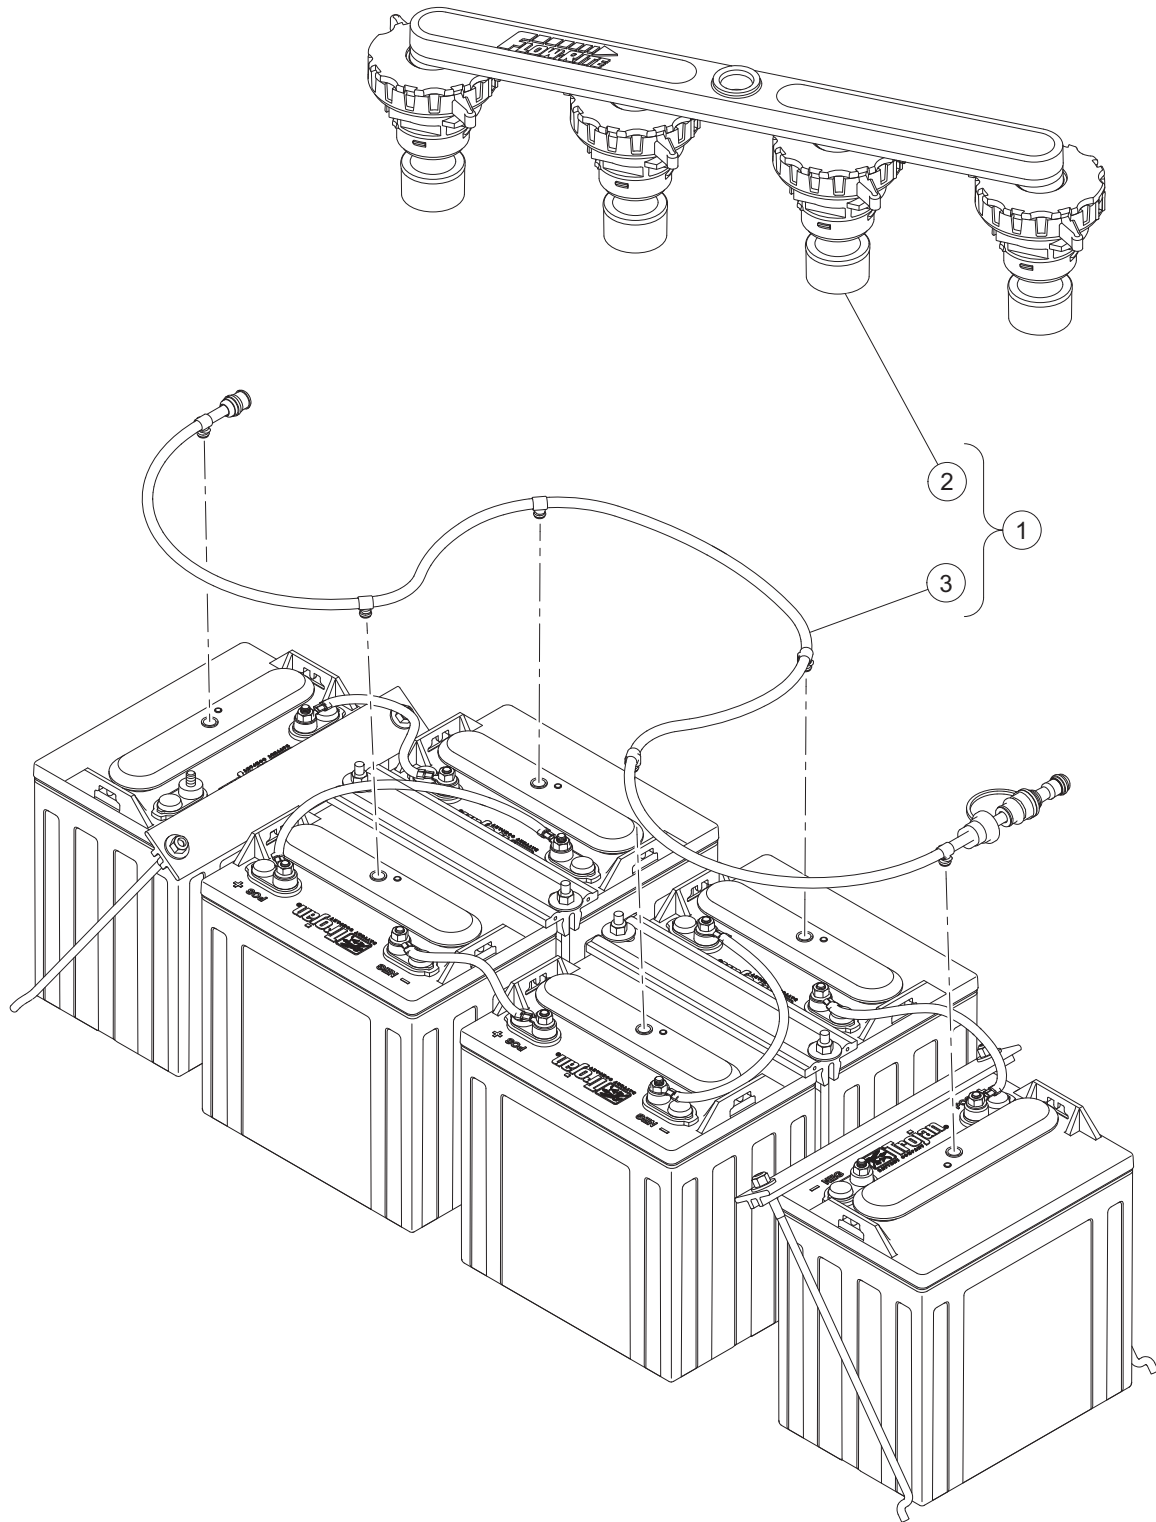


G-130799-000020

SINGLE POINT WATERING SYSTEM (SPWS)

ITEM	PART NO.	DESCRIPTION	QTY	13
1	<u>103711301</u>	1 2 3 4 Kit, SPWS, Trojan, 8V (includes items 2 and 3)	1	
2	<u>103510601</u>	Spws, Manifold Asm, Tr 8 Volt	6	E
3	<u>103864601</u>	Asm, Hose, Spws, Ds 8v	1	

13

E

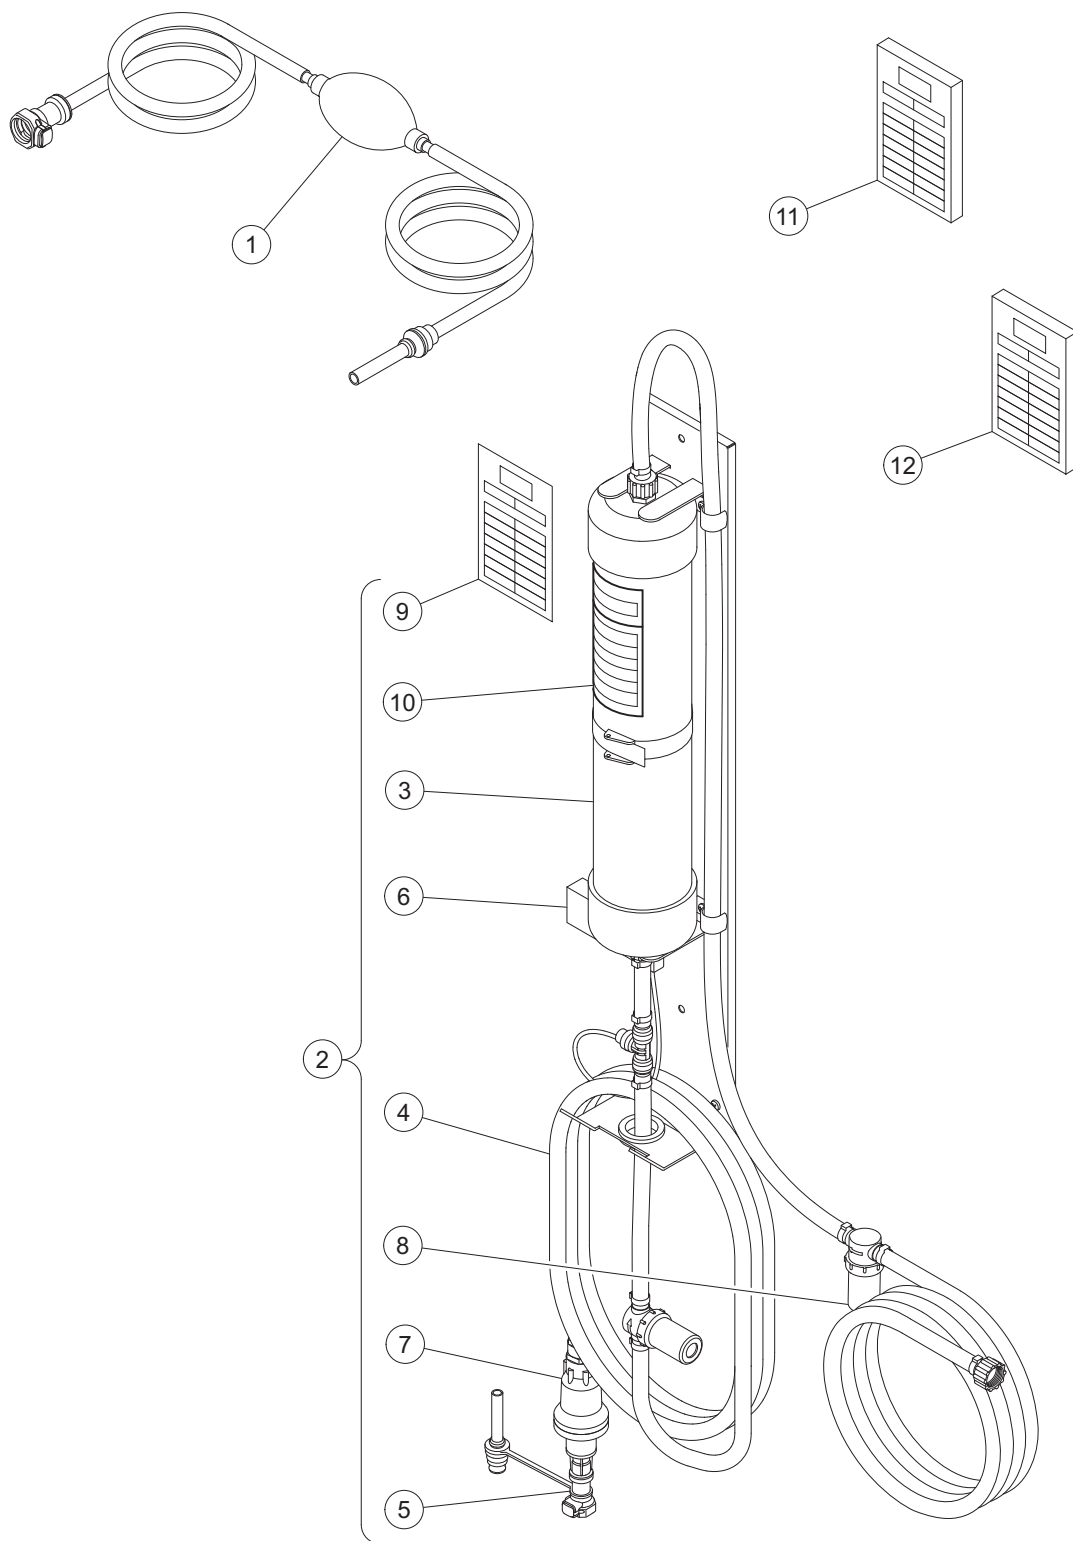

002523-003

HAND PUMP AND DEIONIZER (BATTERY-POWERED QUALITY LIGHT)

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>104006101</u>	Kit, Hand Pump, Spws	1
2	<u>105166801</u>	Deionizer, w/Battery-Powered Water Quality Light (includes items 3 through 10)	1
3	<u>104005901</u>	Cartridge, Deionizer	1
4	<u>105166901</u>	Hose,outlet,deionizer	1
5	<u>105167001</u>	Flow Ind, W/coupler, Deionizer	1
6	<u>105167101</u>	Light, Quality, Battery-Powered, w/T-Fitting	1
7	<u>105168501</u>	Regulator, Pressure, Deionizer	1
8	<u>105168601</u>	Strainer, In-line, Deionizer	1
9	<u>AM1300001</u>	Decal, Filter Log, Blue	1
10	<u>AM1300201</u>	Decal, Inspect Log, Yellow	1
11	AM1300101	Decal, Filter Log, Blue, Pack of 100	A/R
12	AM1300301	Decal, Inspect Log, Yellow, Pack of 100	A/R

13
E


ELECTRIC MOTOR

14

E

14

E

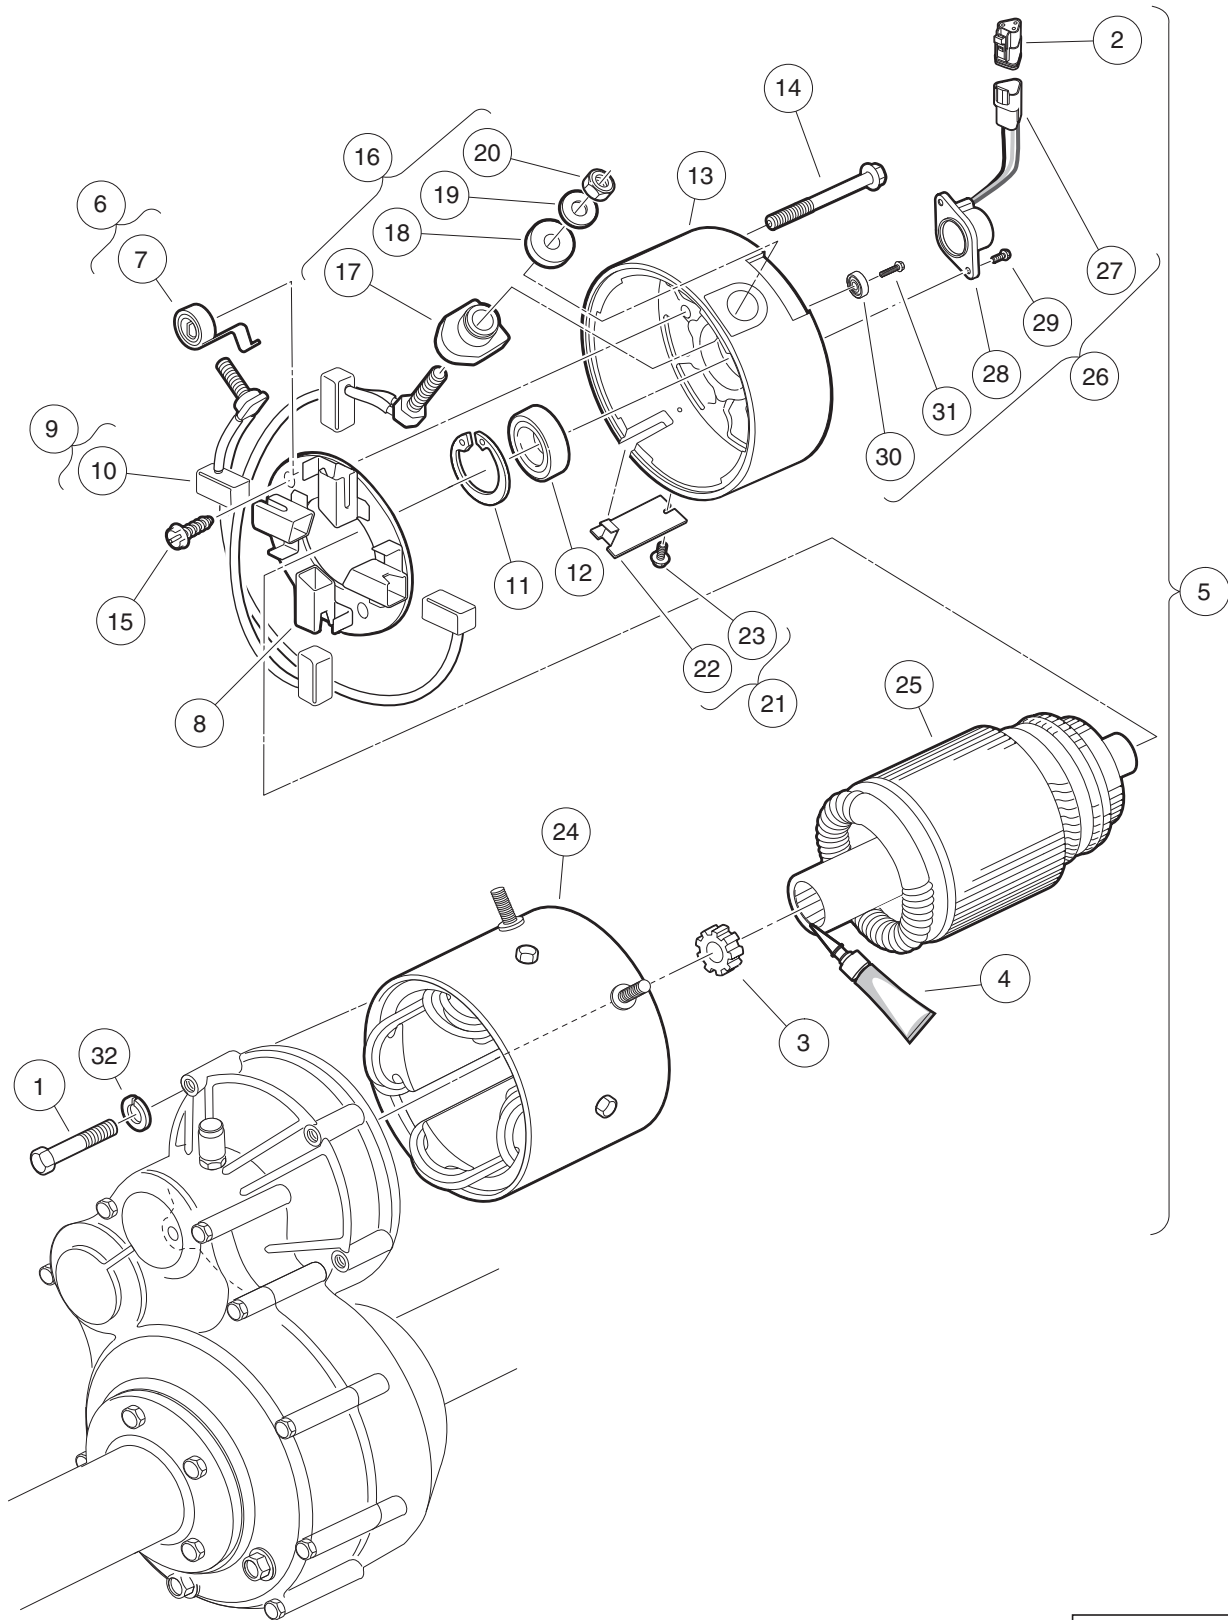

000185-002

MOTOR (MODEL EJ8-4001A) – ELECTRIC VEHICLE


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1014201	Screw, 1/4-20 X 2.25 Hex Cap	3
2	<u>101920101</u>	Kit, 3-Pin Wedge Lock	1
3	<u>102235201</u>	Bumper, Drive Unit	1
4	<u>102243403</u>	Lubricant, Moly-Teflon (Single-Use Tube)	1
5	<u>103572501</u>	IQ Electric Motor, 48-VDC 3.3 hp (includes items 6 through 26)	1
6	<u>102186001</u>	Spring Kit, Motor Brush (includes item 7)	1
7	N/A	Spring, Brush, S-g	4
8	<u>102186101</u>	Brush Box Assembly	1
9	<u>102186201</u>	Brush Kit, Motor (includes item 10)	1
10	N/A	Assembly, Brush and Terminal	2
11	N/A	Ring, 2.24" Internal Retaining	1
12	<u>102186401</u>	Bearing, Ball	1
13	<u>102186701</u>	End Cap, Motor	1
14	N/A	Screw, 1/4-20 X 2.25 Hex-Head Washer	2
15	<u>102186901</u>	Screw, #8-32 X .5 Hex-Head	2
16	<u>102187101</u>	Hardware Kit, Motor Terminal (includes items 17 through 20)	2
17	N/A	Insulator	2
18	N/A	Washer, Nylon Flat	2
19	N/A	Washer, Flat, 5/16 Steel	2
20	N/A	Nut, Brass Hex, 5/16 - 18	2
21	<u>102187201</u>	Plate Kit, Motor Cover (includes items 22 and 23)	1
22	N/A	Assembly, Cover Plate	1
23	N/A	Screw, #8-32 x 0.375, Taptite Thread	1
24	<u>102704701</u>	Frame and Field Assembly	1
25	<u>102704801</u>	Armature Assembly	1
26	<u>102704901</u>	Kit, Speed Sensor (includes items 27 through 31)	1
27	<u>101942301</u>	Kit, 3-Pin Wedge Lock	1
28	N/A	Sensor, Motor Speed, ADC	1
29	N/A	Screw, #8-32, Taptite Thread	2
30	N/A	Magnet, ADC Motor	1
31	N/A	Screw, 1/4-20 x 0.5	1
32	<u>451</u>	Lockwasher, 1/4 Split	3
Note: The F1 and F2 terminal posts on the EJ8-4001A motor have 1/4 - 20			

14
E

TRANSAXLE – ELECTRIC VEHICLES

15

E

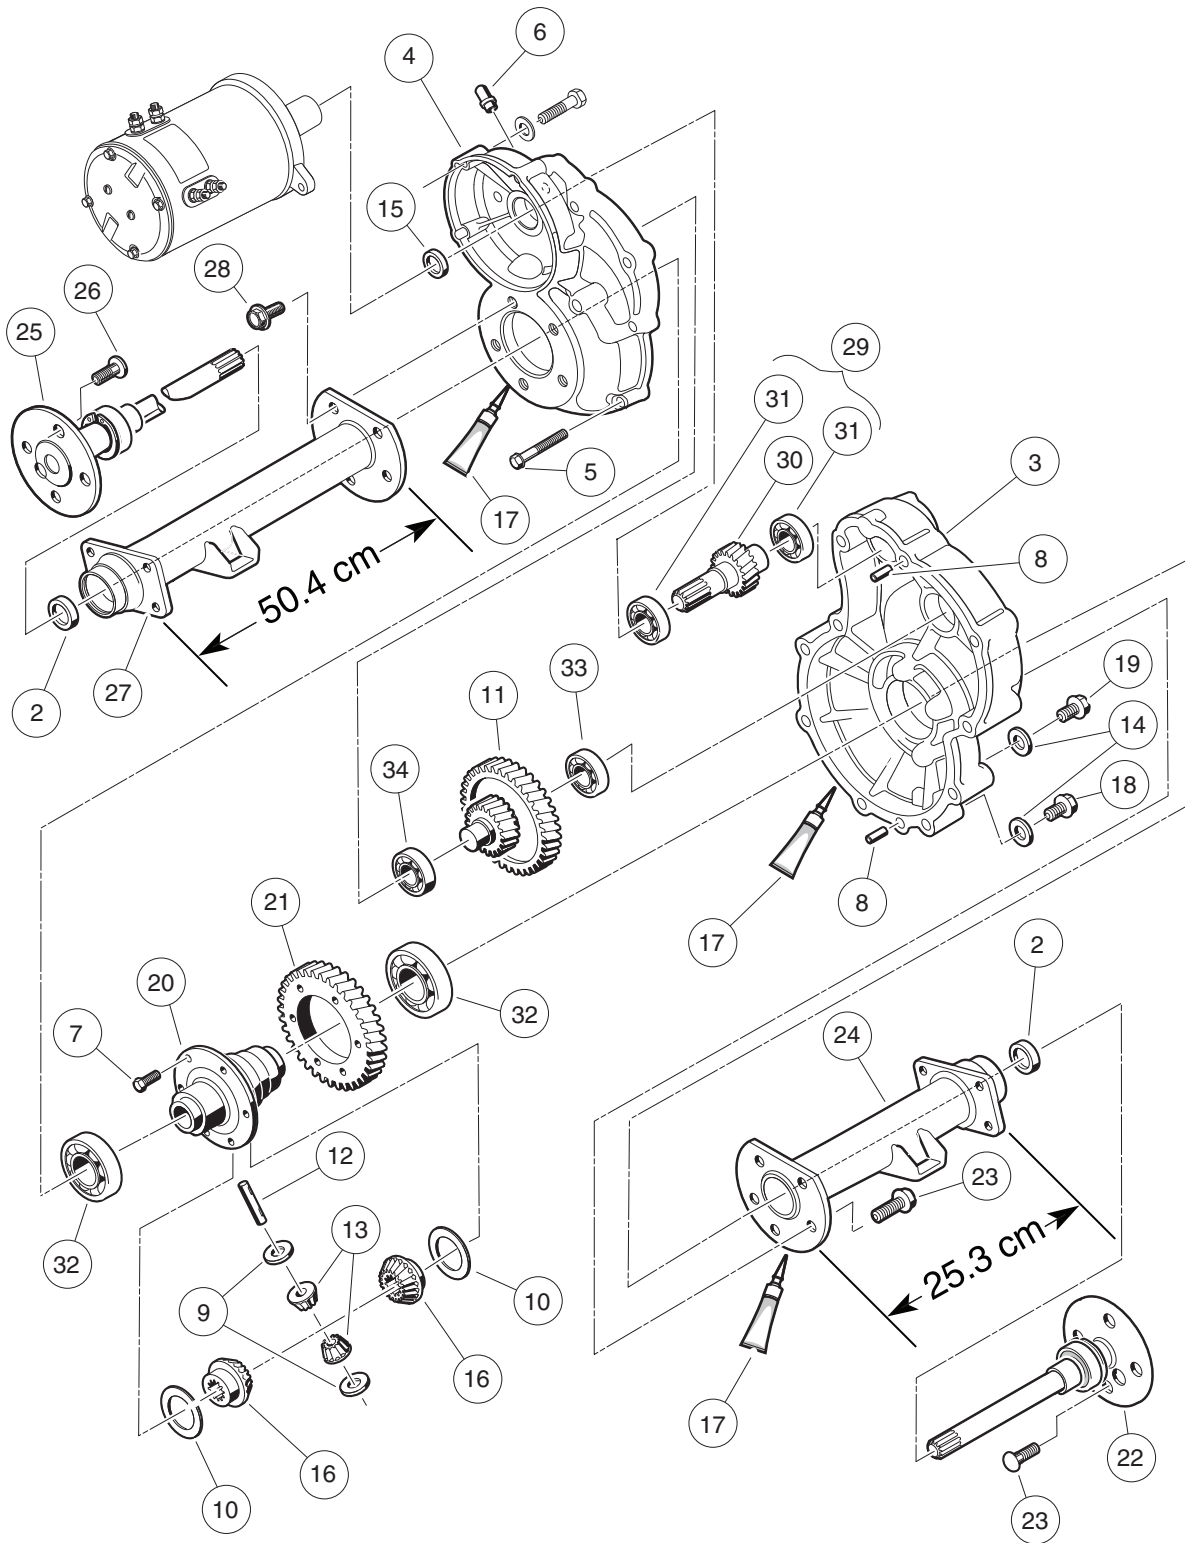


000223-005

TRANSAXLE – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102771701</u>	Transaxle, Electric (includes items 2 through 34)	1
2	<u>1013794</u>	Axle Shaft Oil Seal	2
3	<u>101895401</u>	Gear Case, Driver-Side	1
4	<u>101895501</u>	Gear Case, Passenger-Side	1
5	<u>101897001</u>	Screw, M8-1.25 X 60mm Hex-Head	11
6	<u>101897201</u>	Breather	1
7	<u>101897401</u>	Screw, M10-1.25 X 25mm	6
8	<u>101897601</u>	Pin, 11mm OD X 8.5mm ID X 10mm	2
9	<u>101903601</u>	Washer, Thrust	2
10	<u>101903701</u>	Washer, Thrust	2
11	<u>101906901</u>	Intermediate Shaft Assembly	1
12	<u>101922101</u>	Pin, 15.99mm X 88.7mm Dowel	1
13	<u>101923001</u>	Gear, Differential Idler	2
14	<u>101923201</u>	Gasket	2
15	<u>101923501</u>	Seal, Lip	1
16	<u>101923901</u>	Gear, Differential	2
17	<u>101928701</u>	Liquid Gasket (Transaxle case)	1
18	<u>101972101</u>	Plug, M14-1.5 X 12mm Magnetic	1
19	<u>101972201</u>	Plug, M14-1.5 X 12mm Hex	1
20	<u>102356601</u>	Housing, Differential, 6 Bolt	6
21	<u>102356801</u>	Gear, Differential Output, 6-Bolt	6
22	<u>102886301</u>	Axle Assembly, Driver-Side (includes item 23)	1
23	<u>101922201</u>	Lug Stud	4
24	<u>102886401</u>	Tube, Axle, Driver-Side	1
25	<u>102886501</u>	Axle Assembly, Passenger-Side (includes item 26)	1
26	<u>101922201</u>	Lug Stud	4
27	<u>102886601</u>	Tube, Axle, Passenger-Side	1
28	<u>102902801</u>	Screw, M10 X 30	10
29	<u>103582801</u>	Asm, E Trans Shaft/bearing (includes items 30 and 31)	1
30	N/A	Shaft, Input	1
31	<u>7335</u>	Bearing	2
32	<u>7330</u>	Inner Axle Tube Bearing	2
33	<u>7335</u>	Bearing	1
34	<u>7336</u>	Bearing	1

15

E

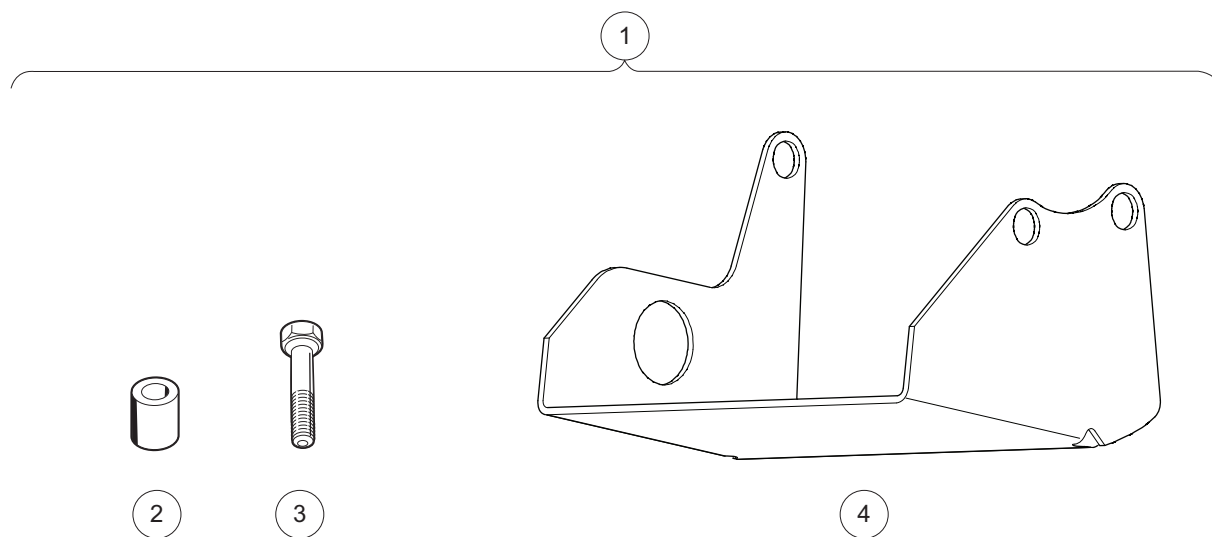

000365-002

DIFFERENTIAL GUARD – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	15
		1 2 3 4		
1	<u>101611402</u>	Kit, Differential Guard, Elec Vehicles (includes items 2 through 4)	1	
2	<u>101914001</u>	Spacer, Steel	2	E
3	<u>101936101</u>	Screw, M10-1.50 X 60mm Hex Cap	2	
4	<u>101978601</u>	Guard, Differential, Electric Vehicle Transaxle	1	


15

E

BATTERY CHARGERS

16

E

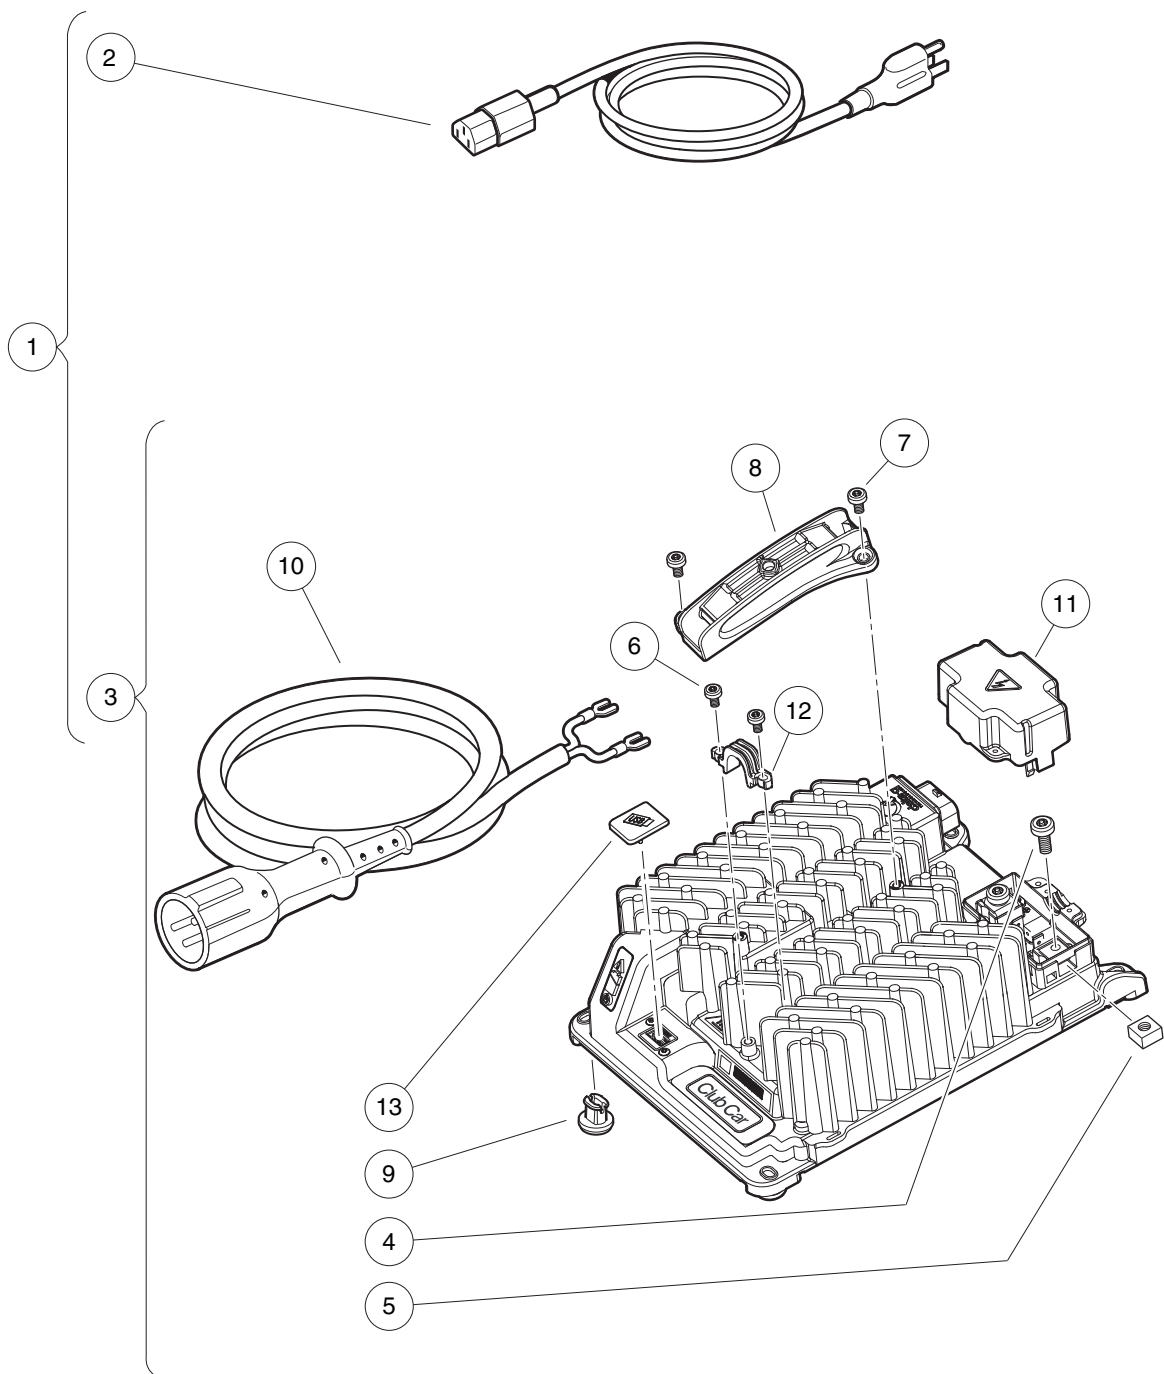


000610-002

BATTERY CHARGER, HIGH-FREQUENCY – U.S./CANADA

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>105095201</u>	Charger, High-Freq, Service, 9ft Yel DC, 6ft AC, US/Canada (includes items 2 and 3)	1
2	<u>104024201</u>	Cord, AC, Nema To Iec320, 6ft (1.83 m), U.S./Canada	1
3	<u>104029601</u>	Charger, Asm, High-Freq, 9ft (2.74 m) Yellow DC Cord (includes items 4 through 13)	1
4	<u>104024501</u>	Screw, M6, Torx Head	2
5	<u>104024601</u>	Nut, M6, Square, Captured	2
6	<u>104028901</u>	Screw, M4 X .70, Pan Hd, Torx	2
7	<u>104029001</u>	Screw, M5 X .80, Pan Hd, Torx	2
8	<u>105003601</u>	Handle, Charger, High-Freq	1
9	<u>105003701</u>	Foot, Charger, High-Freq	4
10	<u>105070101</u>	Cord, DC, Yellow, 9ft (2.74 m)	1
11	<u>105092301</u>	Cover, DC Terminal Block, High-Freq Charger	1
12	<u>105093101</u>	Strain Relief, High-Freq, External, Charger	1
13	<u>105123801</u>	Cover, USB	1
Note: This charger includes both an AC cord and DC cord. For additional cord lengths that may be used with this charger, see the Battery Charger Cords page.			

16

E

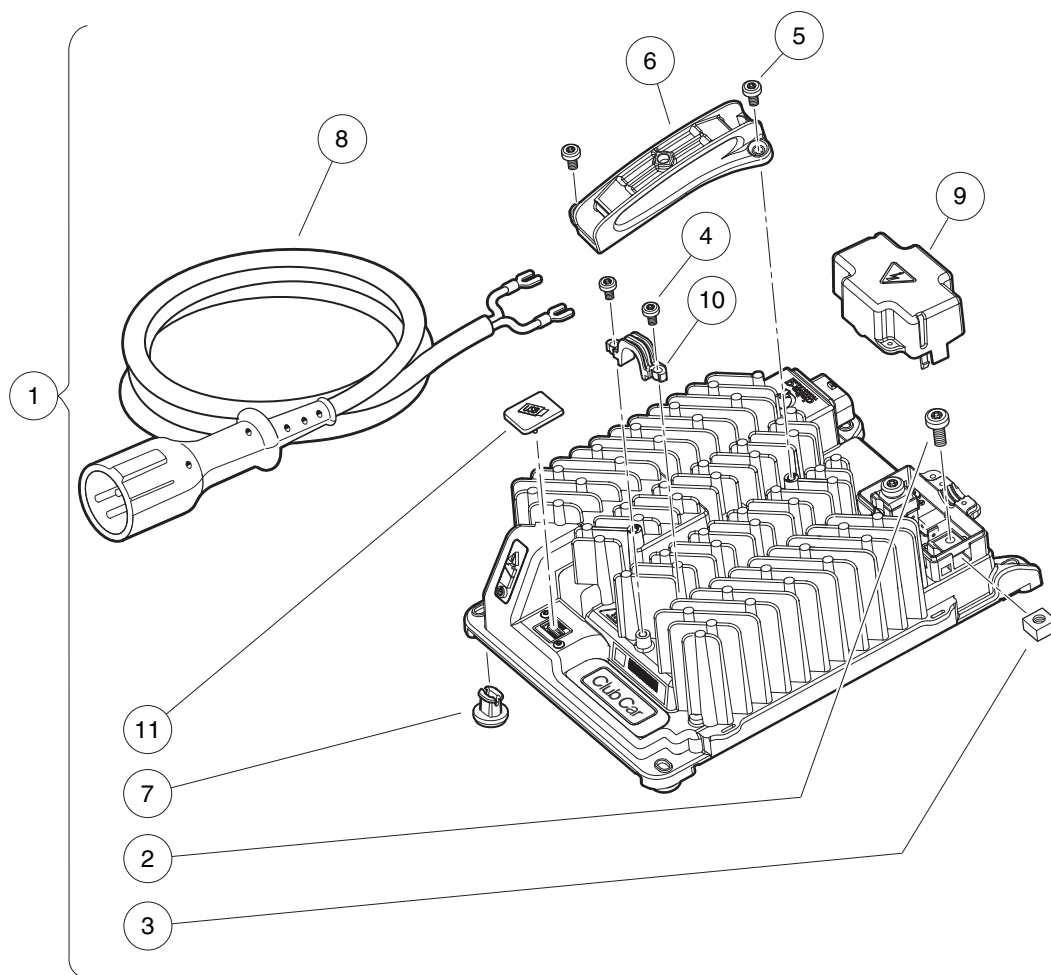


000610-003

BATTERY CHARGER, HIGH-FREQ., 2.74 M DC CORD – GLOBAL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>104029601</u>	Charger, Asm, High-Freq, 9ft (2.74 m) Yellow DC Cord (includes items 2 through 11)	1
2	<u>104024501</u>	Screw, M6, Torx Head	2
3	<u>104024601</u>	Nut, M6, Square, Captured	2
4	<u>104028901</u>	Screw, M4 X .70, Pan Hd, Torx	2
5	<u>104029001</u>	Screw, M5 X .80, Pan Hd, Torx	2
6	<u>105003601</u>	Handle, Charger, High-Freq	1
7	<u>105003701</u>	Foot, Charger, High-Freq	4
8	<u>105070101</u>	Cord, DC, Yellow, 9ft (2.74 m)	1
9	<u>105092301</u>	Cover, DC Terminal Block, High-Freq Charger	1
10	<u>105093101</u>	Strain Relief, High-Freq, External, Charger	1
11	<u>105123801</u>	Cover, USB	1
Note: This charger does not include the AC cord. To complete the charger, choose the appropriate type and length of AC cord found on the Battery Charger Cords page.			

16

E

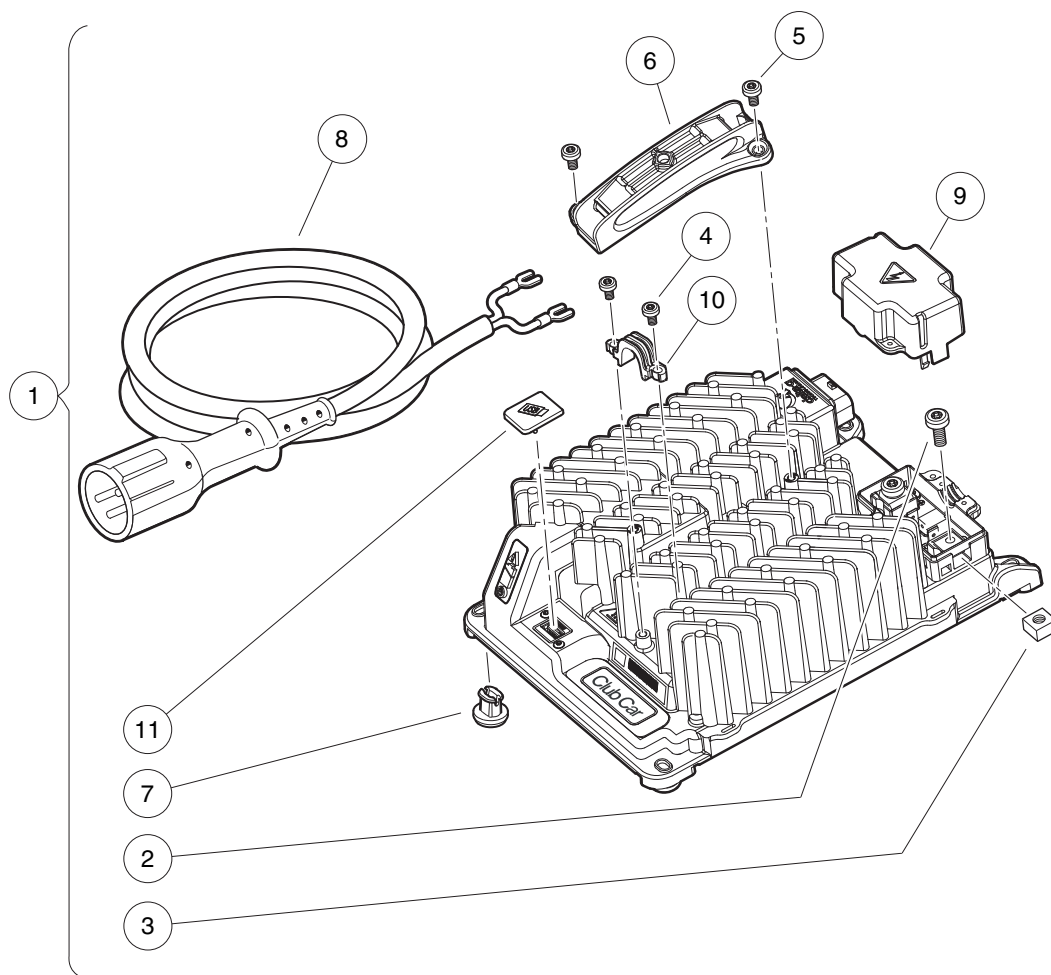


000610-003

BATTERY CHARGER, HIGH-FREQ., 3.66 M DC CORD – GLOBAL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>104029602</u>	Charger, Asm, High-Freq, 12ft (3.66 m) Yellow DC Cord (includes items 2 through 11) ..	1
2	<u>104024501</u>	Screw, M6, Torx Head	2
3	<u>104024601</u>	Nut, M6, Square, Captured	2
4	<u>104028901</u>	Screw, M4 X .70, Pan Hd, Torx	2
5	<u>104029001</u>	Screw, M5 X .80, Pan Hd, Torx	2
6	<u>105003601</u>	Handle, Charger, High-Freq	1
7	<u>105003701</u>	Foot, Charger, High-Freq	4
8	<u>105070102</u>	Cord, DC, Yellow, 12ft (3.66 m)	1
9	<u>105092301</u>	Cover, DC Terminal Block, High-Freq Charger	1
10	<u>105093101</u>	Strain Relief, High-Freq, External, Charger	1
11	<u>105123801</u>	Cover, USB	1
Note: This charger does not include the AC cord. To complete the charger, choose the appropriate type and length of AC cord found on the Battery Charger Cords page.			

16

E

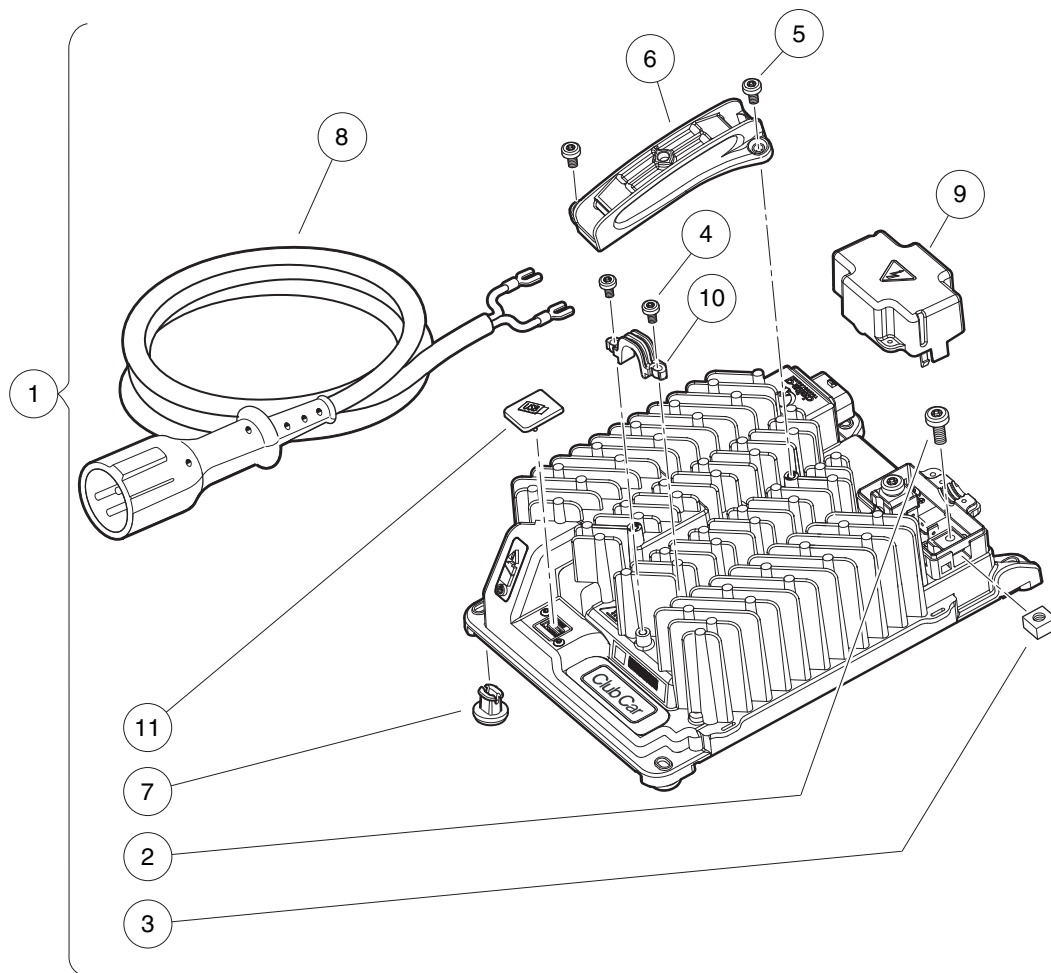

000610-003

BATTERY CHARGER, HIGH-FREQ., 6.1 M DC CORD – GLOBAL









ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>104029603</u>	Charger, Asm, High-Freq, 20ft (6.1 m) Yellow DC Cord (includes items 2 through 11)	1
2	<u>104024501</u>	Screw, M6, Torx Head	2
3	<u>104024601</u>	Nut, M6, Square, Captured	2
4	<u>104028901</u>	Screw, M4 X .70, Pan Hd, Torx	2
5	<u>104029001</u>	Screw, M5 X .80, Pan Hd, Torx	2
6	<u>105003601</u>	Handle, Charger, High-Freq	1
7	<u>105003701</u>	Foot, Charger, High-Freq	4
8	<u>105070103</u>	Cord, DC, Yellow, 20ft (6.1 m)	1
9	<u>105092301</u>	Cover, DC Terminal Block, High-Freq Charger	1
10	<u>105093101</u>	Strain Relief, High-Freq, External, Charger	1
11	<u>105123801</u>	Cover, USB	1
Note: This charger does not include the AC cord. To complete the charger, choose the appropriate type and length of AC cord found on the Battery Charger Cords page.			

16

E

16

E

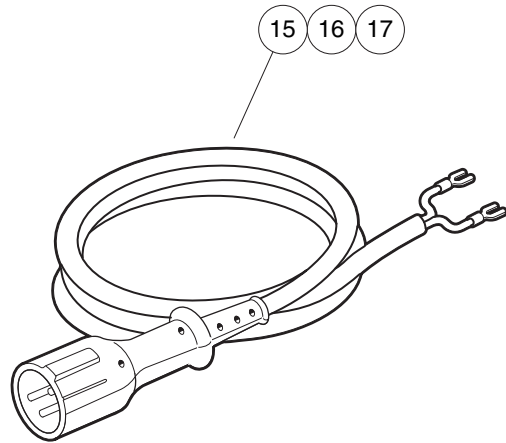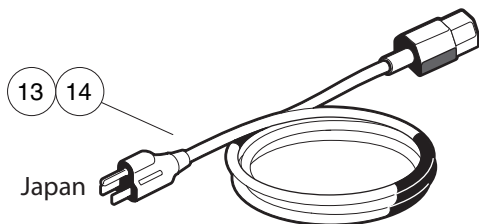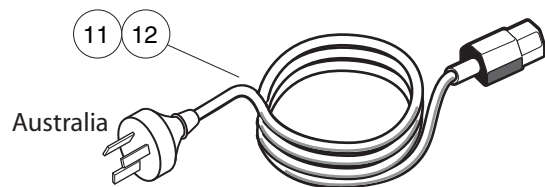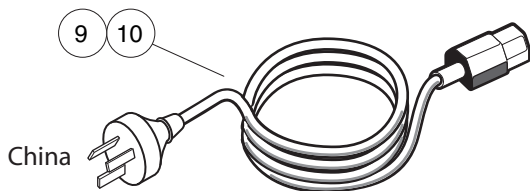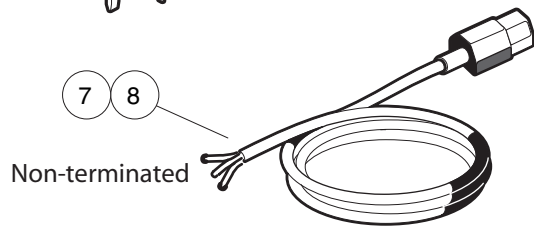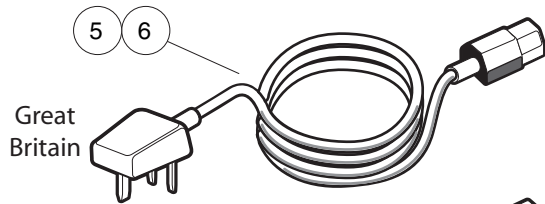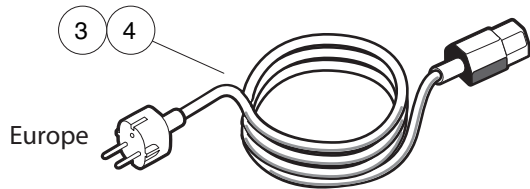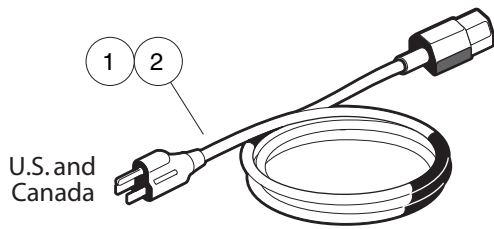

000610-004

CORDS – BATTERY CHARGER, HIGH-FREQUENCY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	104024201	Cord, AC, Nema To lec320, 6ft (1.83 m), U.S./Canada	A/R
2	104024202	Cord, AC, Nema To lec320, 9ft (2.74 m), U.S./Canada	A/R
3	<u>104024401</u>	Cord, AC, lec320, 6ft (1.83 m), Europe	A/R
4	<u>104024402</u>	Cord, AC, lec320, 9ft (2.74 m), Europe	A/R
5	<u>104028501</u>	Cord, AC, lec320, 6ft (1.83 m), Great Britain	A/R
6	<u>104028502</u>	Cord, AC, lec320, 9ft (2.74 m), Great Britain	A/R
7	104028601	Cord, AC, lec320, 6ft (1.83 m), Non-terminated	A/R
8	104028602	Cord, AC, lec320, 9ft (2.74 m), Non-terminated	A/R
9	105068201	Cord, AC, lec320, 6ft (1.83 m), China	A/R
10	105068202	Cord, AC, lec320, 9ft (2.74 m), China	A/R
11	105068301	Cord, AC, lec320, 6ft (1.83 m), Australia	A/R
12	105068302	Cord, AC, lec320, 9ft (2.74 m), Australia	A/R
13	105068401	Cord, AC, lec320, 6ft (1.83 m), Japan	A/R
14	105068402	Cord, AC, lec320, 9ft (2.74 m), Japan	A/R
15	<u>105070101</u>	Cord, DC, Yellow, 9ft (2.74 m)	A/R
16	<u>105070102</u>	Cord, DC, Yellow, 12ft (3.66 m)	A/R
17	<u>105070103</u>	Cord, DC, Yellow, 20ft (6.1 m)	A/R

16
E

MAINTENANCE AND SERVICE TOOLS

17


G

E

17

G

E

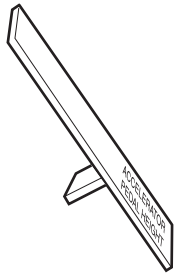


1



2



3

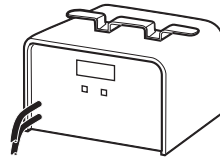


4




5



6

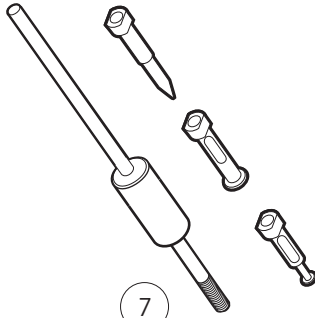


7

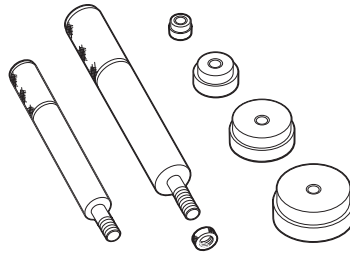


8




9

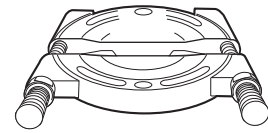


10

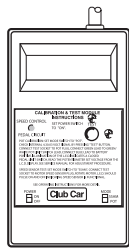


11




12

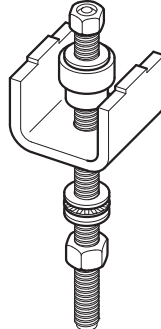


13

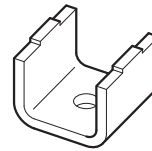

14

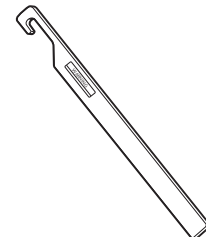


15

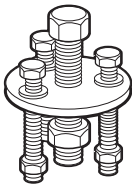

16



17

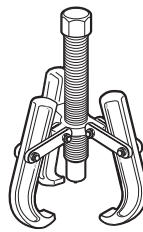

18



19

001060-003








MAINTENANCE AND SERVICE TOOLS

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	17 G E
		1 2 3 4 The following tool list includes all tools available from Club Car for maintenance and service procedures for gasoline and electric golf and utility vehicles. Be sure to carefully examine the tool list for applicability to your vehicle before ordering.			
1	<u>101871001</u>	Accelerator Pedal Adjustment Tool (Utility Vehicles).....	1	1	
2	<u>101813202</u>	Adhesive, Guide Ring, 3-Gram Tube		1	
3	<u>101641202</u>	Arbor	1		
4	<u>101831901</u>	Battery Discharge Machine, 36/48 Volt		1	
5	<u>1014305</u>	Battery Terminal Protector Spray	1	1	
6	<u>1011767</u>	Battery Thermometer	1	1	
7	<u>1016417</u>	Bearing and Oil Seal Remover Assembly	1	1	
8	<u>1016416</u>	Bearing Driver Set	1	1	
9	<u>1012811</u>	Bearing Puller	1	1	
10	<u>1012812</u>	Bearing Puller Wedge Attachment	1	1	
11	<u>101887101</u>	Calibration Test Module		1	
12	<u>102562401</u>	Charger Bezel Tool		1	
		Clutch Tools (items 13 - 19)	1		
13	<u>47568549001</u>	Driven Clutch Tool	1		
14	<u>47568246001</u>	Plate, Cam Press (supplied with item 13).....	1		
15	<u>105072501</u>	Drive Clutch Holder Tool Assembly	1		
16	<u>1014497</u>	Drive Clutch Hub Puller	1		
17	<u>1014496</u>	Drive Clutch Puller	1		
18	<u>1014508</u>	Driven Clutch Cam Puller	1		
19	<u>1014507</u>	Driven Clutch Puller Plug	1		
		Please refer to the maintenance and service manual for proper tool application.			

17

G

E

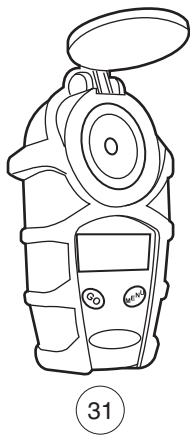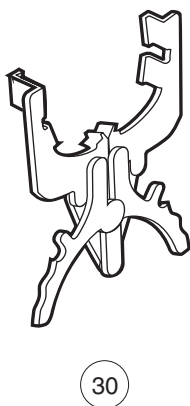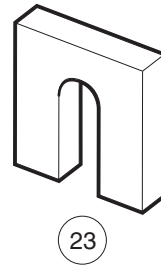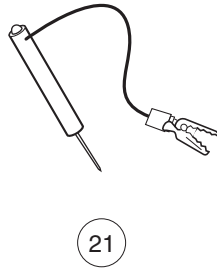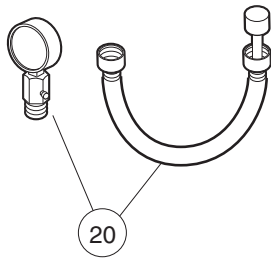

001061-003

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	17 G E
		1 2 3 4			
20	101641002	Compression Gauge and Adapter	1		
21	1011273	Continuity Tester	1	1	
22	1012151	Dry Moly Lubricant	1	1	
23	1016418	Gear Yoke	1	1	
24	1011478	Hydrometer	1	1	
25	1013593	Internal Retaining Ring Pliers	1	1	
26	101928701	Liquid Gasket (transaxle case)	1	1	
27	102243402	Moly-Teflon Lubricant (4-oz. (113-gram) tube)		1	
28	102587201	Paint Pen, Touch-Up, Underbody ,Black	1	1	
29	1016414	Piston Ring Compressor Kit	1		
30	1016415	Piston Ring Pliers	1		
31	AM1285701	Refractometer	1	1	
32	1012549	Retaining Ring Pliers, 45 External	1	1	
33	1012560	Retaining Ring Pliers, 90 Internal	1	1	
34	101823101	Safety First Card (50 per pack)	1	1	
35	1012809	Seal Puller	1	1	
Please refer to the maintenance and service manual for proper tool application.					

17

G


E




36




37

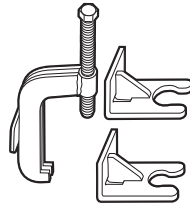


38




39




40




41

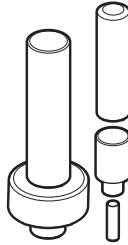

42

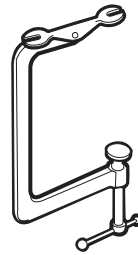

43

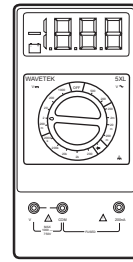

44



45



46



47

001062-002

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	17 G E
		1 2 3 4			
36	<u>1014264</u>	Steering Column Bearing Press Tool	1	1	
37	<u>1014259</u>	Steering Column Retaining Ring Tool	1	1	
38	102061201	Steering Wheel Puller Tool	1	1	
39	<u>102570401</u>	Tool, Tensioning, Starter Generator	1		
40	<u>1014162</u>	Transaxle Axle Seal Tool		1	
41	1014161	Transaxle Pinion Seal Tool		1	
42	<u>1014115</u>	Transmission Tool Kit		1	
43	<u>101641101</u>	Valve Spring Compressor	1		
44	1011480	Volt Ohm Meter	1	1	
45	<u>47631025001</u>	Kit, EFI Diagnostics	1		
46	<u>47631026001</u>	Kit, Bluetooth EFI Diagnostics	1		
47	<u>47631075001</u>	Kit, EFI Tool	1		
		 Please refer to the maintenance and service manual for proper tool application.			

INDEX

Part Number and Page

AM10419	11-7	8067	6-13	1011652	1-37
AM1243501	4-27	8104	4-9	1011659	1-5
AM1243701	4-23, 4-25, 4-27	8233	1-5, 1-7, 1-27, 1-29, 1-31, 1-33, 1-35, 1-39, 1-43, 4-23, 4-25, 4-29, 4-31, 5-5, 5-7, 9-11, 12-3, 12-9, 13-3	1011694	5-5, 5-7
AM1243801	4-23, 4-25, 4-27	8248	1-27, 1-31, 12-3, 13-3	1011697	1-47, 6-5, 10-3, 13-13
AM1300001	13-17	8251	1-27, 1-29, 1-31, 1-33	1011734	5-9
AM1300101	13-17	8450	11-5	1011767	17-3
AM1300201	13-17	8639	4-27, 6-5, 7-9	1011779	5-15
AM1300301	13-17	8717	5-7, 7-9, 12-3	1011825	4-29
SVP370601	1-47, 3-5, 3-7	8754	1-25, 5-5, 5-7, 5-15, 6-3, 6-5, 6-9, 6-11, 7-7	101187702	5-3
SVP370701	1-47, 3-5, 3-7	8755	1-43, 6-9	1011931	1-35, 1-39, 1-47, 5-5, 5-7
SVP370801	1-47, 3-5, 3-7	8861	6-11	1011963	1-9
SVP370901	1-47, 3-5, 3-7	8990	4-9, 4-25, 6-3, 12-5, 13-3, 13-11	1011964	1-9
183	4-5, 4-7, 4-9, 4-21, 4-27, 11-5	1010124	6-9	1011990	1-25
304	1-9, 1-41, 4-29	1010138	1-41, 6-11	1012151	17-5
320	1-25, 1-41, 1-43, 1-45	1010145	6-15	1012181	6-15
324	1-7, 4-23, 4-25	1010150	6-9	1012182	6-15
332	1-5, 1-7, 1-9, 1-27, 1-29, 1-31, 1-33, 1-37, 1-43, 1-45, 4-23, 4-25, 4-29, 13-3, 13-11	1010237	1-9	1012285	13-3, 13-11
334	1-43, 1-45, 5-5, 5-7, 6-3, 6-5, 11-5	1010434	1-27, 1-29, 1-31, 1-33	1012295	7-9
357	6-9	1010517	1-5, 1-9	1012303	1-43, 6-9
451	14-3	1010805	5-3	1012412	1-27, 1-29, 1-31, 1-33
706	6-9	1010829	5-15	1012431	4-11, 7-9, 7-11
1016	4-5, 4-9, 4-21	1010877	5-3	1012438	4-7, 4-27
1017	4-3	1010878	1-43, 5-3	1012462	1-7
1028	5-3	101090802	13-13	1012528	13-11
1032	5-3	1010909	4-5, 4-21	1012549	17-5
1218	9-15	1010921	5-3	1012560	17-5
1241	1-5, 1-35, 1-39, 4-5, 4-7, 5-3, 5-5, 5-7, 5-15, 7-9, 7-13, 9-15	1010927	5-3	1012571	6-5
1242	1-21, 5-15, 7-7, 7-9	1010932	5-3	1012594	7-11
1606	1-5	1010933	5-3	1012604	6-5
1620	1-19	1010934	7-13	1012605	6-5
1624	5-5, 5-7, 6-3, 7-7	1010954	7-9	1012649	9-5
2402	6-11	1010958	13-13	1012809	17-5
7048	6-13	1010984	2-3	1012811	17-3
7173	4-5, 4-7, 7-13	1010993	1-27, 1-29, 1-31, 1-33	1012812	17-3
7174	1-21, 7-7	1011017	1-5	1012836	11-7
7251	1-15	1011019	1-19	1012986	4-13
7310	2-3	1011084	5-9	1012987	12-3
7311	1-35, 1-39	1011114	9-11, 12-9	1013032	1-27, 1-31
7330	15-3	1011137	5-13	1013035	6-3
7335	15-3	1011229	4-5, 4-7	1013042	6-3, 6-11
7336	15-3	1011273	17-5	1013044	6-3
7473	1-15, 4-5, 4-7, 5-3, 5-5, 5-7, 5-15, 7-9, 7-13, 9-15	1011280	4-5, 4-7	1013052	6-3
7591	4-5, 4-7	1011382	1-19	1013164	6-15
7716	5-3, 5-5, 5-7	1011402	5-3	1013343	1-19
7818	1-21, 7-9	1011415	6-15	1013344	1-19
7820	4-29	1011418	5-3	1013357	4-5, 4-7
7847	1-29, 1-33, 1-35, 1-43, 1-45, 4-31, 4-33	1011439	4-5, 4-7	1013461	4-3
7893	4-5, 4-9, 4-21, 7-9	1011478	17-5	1013494	1-19
7973	1-19	1011480	17-7	1013509	1-7, 4-23, 4-25
8056	4-11, 7-11	101155301	3-5, 3-7	1013531	5-15
8057	4-11, 7-9, 7-11	1011557	4-5, 4-7	1013589	7-9
8058	7-9, 7-11	1011578	1-47, 13-13	1013591	12-3
		1011582	4-33	1013593	17-5
		1011590	4-9	1013609	7-9
				1013734	13-11
				1013746	9-5

INDEX

1013794	15-3	1014902	6-15	1016385	6-11
1013857	4-13, 4-15	1014947	13-11	1016386	6-9
1013869	5-3	1015010	4-27	1016387	6-9
1013870	5-3	101503202	1-23	1016389	6-9
1013871	5-5, 5-7	1015064	12-3	101641002	17-5
1013876	1-41, 5-3	1015072	13-13	101641101	17-7
1013884	1-9	1015091	1-9, 1-47	101641202	17-3
1013924	5-11, 5-13, 8-7	1015153	4-23	1016414	17-5
1013983	1-23	1015154	4-23	1016415	17-5
1014007	5-5, 5-7, 9-11, 12-9	1015156	4-23, 4-25, 4-27	1016416	17-3
1014051	11-5	1015157	4-23, 4-25	1016417	17-3
1014055	11-5	1015160	4-23, 4-25	1016418	17-5
1014056	11-5	1015162	4-23	1016423	4-5, 4-7
1014057	11-5	1015167	4-27	1016630	4-13
1014058	11-5	1015170	4-27	1016717	4-33
1014059	11-5	1015172	4-23, 4-25	1016801	11-5
1014062	11-5	1015187	4-23, 4-25, 4-27	1016837	4-23, 4-25
1014063	11-5, 13-11	1015332	7-3	1016851	4-11
1014065	7-9, 11-5	1015360	13-7	1016868	1-15
1014072	11-7	1015373	7-9	1016879	4-3
1014078	11-7	1015391	1-41	1016880	4-3
1014080	11-7	1015405	7-9	1016916	1-37
1014115	17-7	1015484	1-21	1016929	4-23, 4-25, 4-27
1014116	9-3	1015524	17-3	1016952	1-27, 1-29, 1-31, 1-33
1014125	6-5	1015525	1-27, 1-31	1017029	5-3
1014126	6-5	1015526	4-23, 4-25, 4-27	1017062	4-3
1014145	7-9, 12-3	1015583	1-43	1017064	4-3
1014161	17-7	101558302	6-9, 6-15	1017065	4-3
1014162	17-7	1015597	6-13	101707402	4-9
1014201	14-3	1015737	7-9	1017075	4-9
1014213	6-5	1015741	4-5, 4-7, 7-9	1017141	1-27, 1-29, 1-31, 1-33
1014214	6-5	1015752	4-33, 7-9, 13-5	1017235	6-15
1014217	6-5	1015765	4-23	1017266	6-11
1014259	17-7	1015768	4-27	1017271	1-9
1014264	17-7	1015770	4-27	1017273	6-7
1014276	6-9	101587714	9-5	1017313	6-5
1014287	11-5	1015878	7-9	1017314	6-5
1014288	6-5, 11-5, 13-11	1015932	7-7	1017315	6-5
1014304	13-13	101609401	1-47, 3-5, 3-7	1017317	6-5
1014305	17-3	101611402	15-5	1017378	5-5, 5-7
1014306	1-27, 1-29, 1-31, 1-33	1016183	6-5	1017380	5-5, 5-7
1014453	11-5	1016201	11-5	1017424	5-5, 5-7
1014454	11-7	1016230	4-27	1017686	11-7
1014496	17-3	1016267	4-27	1017696	5-5, 5-7
1014497	17-3	1016269	6-5	1017724	4-9
1014507	17-3	1016287	4-27	1017774	1-35, 1-39
1014508	17-3	1016289	11-5	1017853	4-5, 4-7
1014530	4-29	1016346	6-11	101791101	5-11
101454602	6-15	1016349	6-11	101795701	13-7, 13-13
1014555	6-15	1016350	6-11	101796201	5-5, 5-7
1014573	6-15	1016351	6-11	101801001	13-9
1014727	7-11	1016353	6-11	101808401	17-3
1014789	7-3, 13-7	1016356	4-5, 4-7	101810501	4-7
1014807	7-9, 7-11	1016363	4-7	101813202	17-3
1014808	7-9	1016366	4-7	101814601	4-25
1014901	6-15	1016384	6-9	101815501	5-11, 5-13

INDEX

101815502	5-11, 5-13	101912401	5-9	102044801	4-13
101816501	5-11, 5-13	101914001	15-5	102045001	1-5
101816502	5-11, 5-13	101914401	4-5	102048401	1-5
101817401	5-5, 5-7	101915201	3-5	102051601	4-13
101818801	5-7	101918501	5-3	102051701	4-13, 4-15
101821601	4-27	101919801	5-5, 5-7	102051901	4-13, 4-15
101823101	17-5	101920101	13-3, 14-3	102059501	12-7
101823201	5-11, 5-13	101922101	15-3	102061201	17-7
101823801	5-11, 5-13	101922201	15-3	102065901	1-43, 1-45
101823901	5-11, 5-13	101922501	13-3	102066201	5-15
101830701	4-15	101923001	15-3	102075801	3-5, 3-7
101831901	17-3	101923201	15-3	102076702	1-9
101832001	13-9	101923501	15-3	102155801	11-7
101833401	11-7	101923901	15-3	102158901	5-5, 5-7
101834601	8-7	101928701	15-3, 17-5	102163001	1-11
101834602	8-7	101931501	3-7, 13-11	102163101	1-11
101835601	1-43, 1-45, 4-33	101932201	4-5, 4-7	102174208	1-37
101850301	6-7	101932401	13-3	102186001	14-3
101855002	13-3	101932501	13-3	102186101	14-3
101855801	1-29, 1-33	101936101	15-5	102186201	14-3
101856002	13-3	101942301	13-3, 14-3	102186401	14-3
101856102	7-9	101953101	5-15	102186701	14-3
101861901	5-5, 5-7	101954301	1-5, 1-37	102186901	14-3
101862001	5-5	101955101	4-29	102187101	14-3
101871001	17-3	101957101	4-5, 4-7	102187201	14-3
101878201	5-3	101960501	3-5	102196901	13-3, 13-7
101879401	6-3	101963401	9-15	102198001	4-13, 4-15
101879501	6-3	101965205	13-11	102198701	4-5
101879601	6-3	101968701	13-7	102199001	4-5
101879701	6-3	101972001	1-47, 3-5, 3-7	102199201	4-5
101879801	6-3	101972101	15-3	102199301	4-5
101879901	6-3	101972201	15-3	102199401	4-5
101880001	6-3	101978001	13-7	102199601	13-7
101880101	6-3	101978101	13-7	102221201	1-29, 1-33
101880201	6-3	101978201	13-7	102235201	14-3
101880301	6-3	101978601	15-5	102240501	13-11
101884801	8-7	101979101	7-11	102242101	1-5, 11-7
101886101	9-11, 12-9	101984801	6-5	102242401	1-9
101887101	17-3	101987901	4-3	102243101	13-11
101887601	9-11	101988001	4-3	102243402	17-5
101895401	15-3	101988002	4-3	102243403	14-3
101895501	15-3	101988101	4-3	102263601	13-7
101897001	15-3	101988201	4-3	102266601	13-3
101897201	15-3	101990703	4-13	102266701	13-3
101897401	15-3	101990801	5-15	102274101	12-21
101897601	15-3	101991101	4-13	102278001	1-19, 6-5
101898001	7-13	101998011	1-37	102278802	1-47, 3-5, 3-7
101903001	13-7	101998501	1-37	102289001	1-43
101903101	6-9	102005701	1-11	102289002	1-13, 1-17
101903601	15-3	102022101	5-15	102289201	6-3, 6-11
101903701	15-3	102022601	6-11	102289301	1-43
101906901	15-3	102022602	6-3, 6-11	102292801	5-15
101908101	13-3	102025801	1-5, 9-3, 9-5	102296530	1-39
101908401	13-3	102025901	4-13	102296716	9-11
101908601	3-7	102026001	5-5, 5-7	102297230	13-5
101910401	1-35, 1-39, 13-11	102044702	4-13	102298116	9-9

INDEX

102298240	1-13, 1-17	102779201	1-41	102913601	6-9
102298401	6-15, 10-3	102779301	1-41	102922701	10-3
102298720	1-47	102779401	1-41	102967901	4-13, 4-15
102310701	1-23	102779501	1-41	103189901	1-41
102323101	5-3	102779601	1-41	103200701	4-15
102323201	5-3	102796101	1-35	103205501	3-5
102353201	6-13	102796301	1-35	103218601	13-7
102353301	6-13	102796302	1-35	103234303	3-3
102353401	6-13	102797201	1-43	103245301	1-47
102354104	6-13	102804501	4-13	103246701	1-37
102354204	6-13	102804502	4-13	103246801	1-37
102355102	1-25	102804503	4-15	103255601	4-5
102356601	15-3	102804504	4-15	103256901	4-5
102356801	15-3	102815801	2-3	103257603	4-17
102357701	6-13	102815901	2-3	103257701	4-17
102410604	9-11	102816201	1-35	103257801	4-17
102411209	9-15	102819101	2-3	103262201	8-5
102458901	3-5	102820301	1-43, 1-45	103295301	4-29
102476401	9-11, 12-9	102820501	1-43, 1-45	103313301	1-5
102490301	9-11	102821101	1-43	103316701	13-11
102491501	11-5	102823201	1-43	103316801	13-11
102492301	13-7	102828701	1-47	103316901	13-11
102498201	9-11, 12-7, 12-9	102829703	1-25	103347601	7-5
102499001	4-15	102829704	1-25	103347701	7-5
102506401	6-15	102829802	1-25	103347801	7-5
102508601	4-15	102830201	1-17	103348202	4-17
102508701	4-15	102830401	1-17, 6-9	103351001	6-11
102517601	4-29	102830501	1-13	103354401	4-17
102526201	12-3	102830701	1-41	103354701	6-11
102529201	4-9	102830801	4-15	103364101	1-5
102529202	4-29	102831901	3-5, 3-7	103364201	1-5
102538601	13-7	102832001	3-5, 3-7	103365521	1-31
102540301	8-7	102833301	3-5, 3-7	103365522	1-31
102541401	7-7	102838701	7-5	103365524	1-31
102558201	8-3, 9-15	102838801	7-5	103365525	1-31
102562401	17-3	102838901	7-5	103365530	1-31
102570401	17-7	102839001	7-5	103365531	1-31
102572401	13-7	102839301	7-5	103365532	1-31
102587201	17-5	102840301	1-35	103372101	9-3
102617201	8-5	102841101	7-5	103372401	9-5
102617801	12-21	102852401	1-17	103377201	5-15
102618601	1-13, 1-17	102852501	4-33	103377301	5-15
102621501	7-7, 12-7	102854301	1-9	103378301	1-39
102704701	14-3	102854302	1-9	103378302	1-39
102704801	14-3	102861401	2-5	103380201	5-11, 5-13
102704901	14-3	102865901	13-11	103380202	5-11, 5-13
102706401	6-15	102869401	4-5, 4-7	103395101	1-5
102711201	7-9	102886301	15-3	103397901	4-7
102725501	9-15	102886401	15-3	103411101	1-9
102732401	8-5	102886501	15-3	103411201	1-9
102771701	15-3	102886601	15-3	103414901	4-7
102777601	1-29, 1-33	102902801	15-3	103452001	9-5
102777602	1-29, 1-33	102909901	4-33	103477901	6-13
102778601	1-5	102911601	4-33	103483101	5-11, 5-13
102778901	1-41	102913101	1-35	103483102	5-11, 5-13
102779001	1-41	102913102	1-35	103483201	5-11, 5-13

INDEX

103483401	5-11, 5-13	103979301	12-21	105025601	12-11, 12-13
103483601	5-11, 5-13	103982301	13-11	105025701	12-11, 12-13
103483701	5-11, 5-13	103984401	1-3	105025801	12-11, 12-13
103502601	6-9	103984402	1-3	105025901	12-11, 12-13
103504301	13-13	103984404	1-3	105026001	12-11, 12-13
103507001	6-9	103984405	1-3	105026101	12-11, 12-13
103508101	8-5	103984410	1-3	105026201	12-11, 12-13
103510601	13-15	103984411	1-3	105026301	12-11, 12-13
103572501	14-3	103984412	1-3	105026401	12-11, 12-13
103582801	15-3	103984601	11-5	105026501	12-11, 12-13
103601501	6-3	103989501	12-21	105026601	12-11, 12-13
103628701	6-9	103995001	12-21	105026701	12-11, 12-13
103653401	6-3	104005901	13-17	105026801	12-11, 12-13
103653501	6-3, 6-11	104006101	13-17	105026901	12-11, 12-13
103653601	6-11	104021701	12-21	105027001	12-11, 12-13
103677101	1-11	104023501	9-11, 12-9	105027101	12-11, 12-13
103696801	13-13	104024201	16-3, 16-11	105027201	12-11, 12-13
103698901	1-33	104024202	16-11	105027301	12-11, 12-13
103698903	1-33	104024401	16-11	105027401	12-15
103698904	1-33	104024402	16-11	105027501	12-15
103698906	1-33	104024501	16-3, 16-5, 16-7, 16-9	105027601	12-15
103698907	1-33	104024601	16-3, 16-5, 16-7, 16-9	105027701	12-15
103698908	1-33	104025101	11-7	105027801	12-15
103698909	1-33	104027101	12-21	105027901	12-15
103711301	13-15	104028501	16-11	105028001	12-15
103724504	6-7	104028502	16-11	105028101	12-17, 12-19
103724602	6-7	104028601	16-11	105028201	12-15
103754901	1-11	104028602	16-11	105028301	12-11, 12-13
103756401	9-5	104028901	16-3, 16-5, 16-7, 16-9	105028401	12-15
103783001	3-7	104029001	16-3, 16-5, 16-7, 16-9	105028501	12-11, 12-13
103783002	3-5	104029601	16-3, 16-5	105028601	12-15
103787304	1-9	104029602	16-7	105028701	12-15
103829401	6-7	104029603	16-9	105028801	12-15
103852901	1-35, 1-39	105000301	7-9	105028901	12-15
103864601	13-15	105000401	7-9	105029001	12-15
103879701	12-13	105003401	9-15	105029101	12-15
103879702	12-11	105003601	16-3, 16-5, 16-7, 16-9	105029201	12-15
103886601	12-5	105003701	16-3, 16-5, 16-7, 16-9	105029301	12-19
103890801	13-5	105005201	1-29	105029401	12-19
103896604	9-5	105005203	1-29	105029501	12-17, 12-19
103896605	9-5	105005204	1-29	105029601	12-19
103902101	13-5	105005206	1-29	105029701	12-19
103902301	13-5	105005207	1-29	105029801	12-17, 12-19
103902401	13-5	105005208	1-29	105029901	12-17, 12-19
103924801	7-3, 13-7	105005209	1-29	105030001	12-11, 12-13
103943401	13-5	105007402	9-11	105030301	12-17, 12-19
103951501	12-21	105007403	9-11	105030401	12-17, 12-19
103958101	13-13	105008101	7-3	105030501	12-17, 12-19
103961601	3-5, 3-7	105009101	9-15	105030601	12-17, 12-19
103971798	13-13	105009401	9-15	105030701	12-11, 12-13
103971799	13-13	105025001	12-11, 12-13	105030801	12-17, 12-19
103973901	11-5	105025101	12-11, 12-13	105030901	12-15
103974201	11-5	105025201	12-11, 12-13	105031001	12-19
103974401	11-5	105025301	12-11, 12-13	105037401	7-9
103975301	11-7	105025401	12-11, 12-13	105037501	12-3
103976101	11-5	105025501	12-11, 12-13	105037601	12-3

INDEX

105037701	12-3	105188201	6-15	47611209001	10-3
105038501	12-3	105190601	4-31	47611210001	10-3
105038801	12-5	105190701	4-31	47611483001	8-5
105039801	12-3	105194101	9-3	47611484001	8-5
105040401	12-3	105199601	3-3	47611648001	8-5
105040901	12-7	105234801	12-11, 12-13	47611868001	7-7
105041201	12-3	105234901	12-11, 12-13	47611869001	7-7
105043801	9-3	105237399	7-13	47611870001	7-7
105043901	9-3	105245401	9-3	47611876001	9-3
105063501	12-11	105245701	7-3	47611877001	9-3
105063601	12-17	105245801	11-3	47612352001	9-9
105066001	12-17, 12-19	105256701	7-3, 7-13	47612539001	7-3
105066101	12-17, 12-19	105256801	7-3	47613326001	4-31
105068201	16-11	47539338002	7-7	47617345001	7-7
105068202	16-11	47542195001	5-11, 5-13	47619701001	9-5
105068301	16-11	47557674001	1-7	47623339001	9-3
105068302	16-11	47559475001	7-5	47623450001	1-27
105068401	16-11	47563307001	1-47	47623450002	1-27
105068402	16-11	47563434001	13-7	47623450003	1-27
105070101	16-3, 16-5, 16-11	47564770001	4-7	47623450005	1-27
105070102	16-7, 16-11	47564777001	4-7	47623450006	1-27
105070103	16-9, 16-11	47564778001	4-19	47623450007	1-27
105077701	1-11	47564781001	13-9	47623450008	1-27
105081501	7-3	47564782001	1-47	47629583001	8-19
105081601	7-3	47564783001	1-47	47629585001	8-19
105082301	3-5	47564784001	1-47	47629588001	8-19
105088501	9-15	47564887024	1-47	47629589001	8-19
105092301	16-3, 16-5, 16-7, 16-9	47564890001	8-7	47629677001	8-15
105093101	16-3, 16-5, 16-7, 16-9	47568672001	1-47	47629680001	8-15
105095201	16-3	47568673001	1-47	47629682001	8-15
105096101	11-5	47568674001	1-47	47629685001	8-15
105102601	7-11	47568674002	1-47	47629686001	8-15
105116301	13-5	47568675001	1-47	47629687001	8-15
105123801	16-3, 16-5, 16-7, 16-9	47568676001	1-47	47629688001	8-15
105135101	9-11, 12-7	47568677001	1-47	47629689001	8-15
105135901	7-3	47579096001	6-15	47629690001	8-15
105136001	7-3	47581051001	1-47	47629691001	8-15
105137107	3-5, 3-7	47582894002	1-47	47629693001	8-15
105143301	7-3, 9-3	47583000001	7-5	47629694001	8-15
105144401	9-11, 12-9	47583790001	7-5	47629696001	8-15
105153201	3-7	47583791001	7-5	47629697001	8-15
105153202	3-7	47583794001	7-5	47629698001	8-15
105153301	3-5	47583795001	8-7	47629699001	8-17
105153302	3-5	47584178001	7-5	47629700001	8-17
105161701	7-3, 7-5	47584179001	7-5	47629701001	8-17
105165801	4-31	47584184001	8-7	47629702001	8-11
105166801	13-17	47587701001	8-7	47629703001	8-17
105166901	13-17	47594727001	4-19	47629705001	8-17
105167001	13-17	47595292001	1-7	47629707001	8-17
105167101	13-17	47601355001	9-11	47629709001	8-17
105168501	13-17	47601767002	11-7	47629711001	8-13
105168601	13-17	47601832001	11-7	47629714001	8-13
105173901	13-7	47604303001	4-5, 4-21	47629716001	8-13
105186001	6-15	47606233003	9-3	47629717001	8-13
105186002	6-15	47606257001	9-5	47629718001	8-13
105188185	6-15	47607758001	4-31	47629719001	8-13

INDEX

47629720001 8-13
 47629722001 8-13
 47629723001 8-13
 47629724001 8-13
 47629725001 8-13
 47629726001 8-13
 47629727001 8-13
 47629728001 8-13
 47629729001 8-13
 47629730001 8-13
 47629768001 8-13
 47629822001 8-13
 47629823001 8-13
 47629824001 8-13
 47629825001 8-13
 47629826001 8-11
 47629828001 8-11
 47629831001 8-11
 47629832001 8-11
 47629833001 8-11
 47629834001 8-11
 47629835001 8-11
 47629836001 8-11
 47629837001 8-11
 47629838001 8-11
 47629841001 8-11
 47629843001 8-11
 47629844001 8-9
 47629845001 8-9
 47629846001 8-9
 47629847001 8-9
 47629848001 8-9
 47629851001 8-9
 47629853001 8-9
 47629855001 8-9
 47629856001 8-9
 47629857001 9-7
 47629858001 9-7
 47629859001 9-7
 47629860001 9-7
 47629861001 9-7
 47629862001 9-7
 47629864001 9-7
 47629865001 9-7
 47629866001 9-7
 47629867001 9-7
 47629868001 9-7
 47629869001 9-7
 47629870001 9-7
 47629871001 9-7
 47629872001 9-7
 47629874001 9-7
 47629875001 9-9
 47629876001 9-9
 47629877001 9-9
 47629878001 9-9

47629879001 9-13
 47629880001 9-13
 47629881001 9-13
 47629882001 9-13
 47637087001 9-5
 47640020001 8-17
 47640021001 8-11, 8-17
 47640022001 8-17
 47640281001 8-3, 8-11
 47649808001 10-3
 47649808002 10-3
 47650647001 8-11
 47662588001 12-23
 47664038001 9-3
 47676897001 8-11
 47689303001 13-13
 47695923001 8-5
 47720336009 1-35
 47720336010 1-39
 47729995001 1-35, 1-39
 96704176 4-19
 96705199 12-7
 96705587 10-3
 96741046 8-5

A

AC cord 16-3, 16-11
 accelerator bracket and bearing assembly 5-5,
 5-7
 accelerator cable 9-11
 accelerator pedal 5-5, 5-7
 accelerator pedal adjustment tool 17-3
 accelerator pivot rod 5-5, 5-7
 accelerator return spring 5-5, 5-7
 accelerator rod 5-9
 accessory receptacle 4-13, 4-15
 adhesive, guide ring 17-3
 air cleaner assembly 9-15
 air filter 8-3, 9-15
 air filter evacuator 9-15
 air intake hose 9-15
 AM1285701 17-5
 A-plate strap 6-11
 A-plate, delta 6-11
 arbor 17-3
 arm
 governor 9-11, 12-9
 armature 14-3
 assembly
 accelerator bracket and bearing 5-5, 5-7
 accelerator pivot rod 5-5, 5-7
 bearing, steering shaft 6-5
 brake lever 5-11, 5-13
 delta A-plate 6-11
 delta shock and gear support 6-11
 drive hub 11-5

frame and field (motor) 14-3
 fuel cap 9-3
 headlight 4-3
 headlight harness 4-3
 inner ball joint 6-3
 kingpin 6-9
 moveable-face 11-5, 11-7
 ratchet 5-3
 secondary clutch weight 11-5
 steering shaft 6-5
 turn signal lens 4-3

axle 15-3
 axle guard 15-5
 axle shaft 12-17, 12-19
 axle shaft oil seal 15-3
 axle tube 12-17, 12-19, 15-3

B

backing plate, brake 5-11, 5-13
 ball bearing 7-5, 12-15, 12-17, 12-19
 ball joint 5-3, 5-9
 ball stud 7-9
 ball, bearing 6-13
 barrel, plastic 1-27, 1-29, 1-31, 1-33
 battery charger 16-3, 16-5, 16-7, 16-9
 battery clamp 7-13
 battery condition indicator 4-17
 battery condition indicator kit 4-17
 battery condition indicator, 48-volt 4-15
 battery discharge machine 17-3
 battery hold-down 13-13
 battery light 4-15
 battery terminal protector spray 17-3
 battery thermometer 17-3
 battery, 12-volt, top-post 7-13
 battery, top-post, wire, 4ga, B+ 7-3
 battery, top-post, wire, B- 4ga, 7-3, 7-13
 bearing 15-3
 ball 6-13, 7-5, 12-15, 12-17, 12-19
 ball (motor) 14-3
 ball (steering pinion) 6-3
 inner axle tube 15-3
 lower pinion (steering) 6-3
 pivot support 5-5, 5-7
 steering shaft 6-5
 thrust 6-9, 12-11, 12-13
 bearing and oil seal remover 17-3
 bearing driver set 17-3
 bearing puller 17-3
 bearing puller wedge 17-3
 bearing seat 6-5
 bed support 1-35
 bed support stiffener 1-43, 1-45
 bed, cargo 1-41
 bellows 6-3
 belt, drive 11-3

INDEX

- bezel, headlight 4-3
 - block, brake-mounting 5-3
 - block, fuse 4-5, 4-7, 7-9
 - block, terminal 4-5, 4-7
 - body kick plate 1-27, 1-29, 1-31, 1-33
 - bolt, U- 6-15
 - boot, steering column 1-19, 6-5
 - boot, switch 13-3
 - bottom, seat 1-47
 - box
 - steering gear 6-3
 - brace, canopy 1-5
 - brace, seat support cross 1-35
 - bracket 4-13
 - accel.cable 9-11, 12-7
 - brake light switch 4-5, 4-7
 - carbon canister 9-5
 - FNR cable 9-11, 12-7
 - governor 9-11, 12-9
 - headlight mounting 4-3
 - horn 4-29
 - shock mounting, drv 6-15
 - shock mounting, pas 6-15
 - snubber 8-7
 - steering column 6-5
 - steering column mounting 6-5
 - Tow/Run switch 13-3
 - brake adjusting mechanism 5-11, 5-13
 - brake backing plate 5-11, 5-13
 - brake cable 5-15
 - brake cable equalizer 5-15
 - brake cluster 5-11, 5-13
 - brake drum 5-11, 5-13
 - brake lever 5-11, 5-13
 - brake light switch bracket 4-5, 4-7
 - brake mounting block 5-3
 - brake pedal 5-3
 - brake pedal pad 5-3
 - brake relay kit, 12-volt 4-5
 - brake return spring 5-15
 - brake self-adjusting mechanism 5-11, 5-13
 - brake shoe 5-11, 5-13
 - brake spring 5-11, 5-13
 - breather 12-11, 12-13, 15-3
 - brush 14-3
 - brush box assembly 14-3
 - brush guard 1-17
 - brush guard support 1-17, 6-9
 - brush rigging 14-3
 - brush spring 14-3
 - bulb, headlight 4-3
 - bulb, strobe light 4-23, 4-25, 4-27
 - bulb, tail light 4-33
 - bumper
 - cast 1-13
 - drive unit (motor) 14-3
 - front 1-15
 - jounce 6-15
 - rubber 1-43, 5-3
 - side trim 1-23
 - spring return 5-5, 5-7
 - bumper mount 6-15
 - bushing 7-9, 11-5, 12-3
 - bronze 6-13
 - nylon 5-3
 - spindle 6-13
 - steel 1-43, 6-9
 - urethane 1-43, 6-9, 6-11, 6-15
 - button, drive 11-7
 - buzzer, reverse 4-11
- ## C
- cable
 - accelerator 9-11
 - brake 5-15
 - FNR shifter 12-5
 - cable retainer 1-29, 1-33
 - cable, cargo bed 1-41
 - calibration test module 17-3
 - cam
 - driven clutch 11-7
 - electrical component box 7-9
 - canister, carbon, fuel tank 9-5
 - canopy 1-7
 - canopy brace 1-5
 - cap
 - dust 13-3, 13-7
 - front hub 6-13
 - fuel, gas, ratchet 9-3
 - rubber 12-21
 - carbon canister 9-5
 - card, safety first 17-5
 - cargo bed 1-41
 - cargo bed hinge 1-43
 - case
 - FNR switch 13-3
 - gear 15-3
 - transaxle 12-11, 12-13
 - cast bumper 1-13
 - catch, tilt bed 1-41
 - center shaft 12-15
 - charger bezel tool 17-3
 - charger, battery, Hi-Freq 16-3, 16-5, 16-7, 16-9
 - clamp
 - battery 7-13
 - hose 9-5, 9-15
 - p- (fuel filter) 9-11
 - clevis, upper delta 6-9
 - cluster, brake 5-11, 5-13
 - clutch
 - pin 12-15
 - clutch cam installation tool 17-3
 - clutch repair kit 11-7
 - clutch tool kit 17-3
 - clutch weight 11-5
 - clutch, drive 11-5
 - collar 12-15
 - column, steering 6-5
 - component mounting plate 13-11
 - compression gauge 17-5
 - compressor, piston ring 17-5
 - compressor, valve spring 17-7
 - conduit 4-27
 - connector, four-pin 13-3
 - continuity tester 17-5
 - controller cover 13-11
 - controller cover gasket 13-11
 - controller, motor speed
 - Excel w/Hi-Freq 13-11
 - cord set, DC 16-3, 16-5, 16-7, 16-9, 16-11
 - cord, AC 16-3, 16-11
 - counter shaft 12-15
 - cover
 - DC terminal block 16-3, 16-5, 16-7, 16-9
 - dust 5-11, 5-13
 - fuse block 4-7
 - screw head 1-19
 - steering column 6-5
 - USB 16-3, 16-5, 16-7, 16-9
 - cover gasket, controller 13-11
 - cover plate 14-3
 - cover, controller 13-11
 - cover, speed controller 13-11
 - cover, steering column 4-9
 - cowl support 1-5
 - cross brace, seat support 1-35
 - C-type stop ring 6-3
 - cup, spring 5-5, 5-7
 - cushion, shock absorber 6-15
- ## D
- dash closeout panel 1-5
 - dash component 1-19
 - DC cord set 16-3, 16-5, 16-7, 16-9, 16-11
 - decal
 - box bed warning 1-47, 3-5, 3-7
 - component cover 3-7, 13-11
 - crush area 3-5, 3-7
 - crush area warning 1-47, 3-5, 3-7
 - crush warning 3-5, 3-7
 - filter log 13-17
 - frame ground 3-5
 - hot surface warning 3-5
 - inspect log 13-17
 - maintenance/operate switch 3-5
 - operating instructions 3-5, 3-7
 - owner notice 3-5, 3-7
 - rotating parts 3-5

INDEX

Tow/Run switch warning 3-7
young driver warning 3-5, 3-7
deionizer 13-17
 cartridge 13-17
delta A-plate 6-11
delta A-plate sub-assembly 6-11
delta shock and gear support 6-11
diagnostic port 13-7
differential 12-19
 limited-slip 12-17
 open 12-19
differential drive unit 15-3
differential gear 15-3
differential gear set 12-19
differential guard 15-5
differential housing 15-3
differential shaft 12-19
diode 7-3, 13-7
door, access 1-27, 1-31
drain plug 12-11, 12-13
drive belt 11-3
drive button 11-7
drive clutch 11-5
drive clutch button 11-5
drive clutch holder tool 17-3
drive clutch hub puller 17-3
drive clutch puller 17-3
drive clutch spring 11-5
drive clutch weight 11-5
drive hub 11-5
drive unit bumper 14-3
drive unit guard 15-5
driven clutch button 11-7
driven clutch cam 11-7
driven clutch cam puller 17-3
driven clutch puller plug 17-3
driver, drive clutch 11-5
drum, brake 5-11, 5-13
dry moly lubricant 17-5
dual snubber 8-7
dust cap 13-3, 13-7
dust cover 5-11, 5-13

E

eccentric bolt 6-9
E-clip 5-15
end cap, motor 14-3
end, tie rod 6-11
engine
 air cleaner 9-15
 air filter 8-3, 9-15
 air intake hose 9-15
equalizer rod 5-15
equalizer, brake cable 5-15
Exhaust 10-3
extension, spring latch 1-41

extrusion, cover support 13-11

F

face, moveable 11-7
fender 1-29, 1-33
filter
 air 8-3, 9-15
finishing plug 1-9
fitting, thread-forming grease 6-13
floor mat 1-23
FNR handle 12-3
FNR shift lever 12-7
FNR shifter base 12-3
FNR shifter cable 12-5
FNR switch case 13-3
frame and field assembly (motor) 14-3
front body support 1-27, 1-29, 1-31, 1-33
front bumper 1-15
front hub 6-13
front spring retainer plate 6-9
fuel gauge/hour meter 4-13
Fuel Module, Hold-Down Ring 9-3
fuse
 10-amp 7-3, 7-9
 15-amp 13-7
 1-amp 13-7
 20-amp 4-5, 4-7
 2-amp 7-3, 13-7
 30-amp 13-7
 5-amp 7-3
fuse block 4-5, 4-7, 7-9
fuse block cover 4-7
fuse holder, in-line 13-7

G

gasket 12-11, 12-13
 liquid 15-3, 17-5
 plug 15-3
 seat 1-37
 taillight 4-33
gasket, controller cover 13-11
gauge, battery condition 4-17
gauge, compression 17-5
gauge, fuel/hour 4-13
gear
 17 tooth 12-15
 34 tooth 12-15
 52 tooth 12-15
 60 tooth 12-17, 12-19
 62 tooth 12-15
 differential 15-3
 differential idler 15-3
 differential output 15-3
 governor 12-11, 12-13
 governor, 34 tooth 12-15

 set, differential 12-19
gear yoke 17-5
gearcase 15-3
glove box 1-21
governor arm 9-11, 12-9
governor gear shaft 12-11, 12-13
governor shaft 12-11, 12-13
guard, brush 1-17
guard, differential 15-5
guide pin 12-11, 12-13
guide ring adhesive 17-3

H

handle, FNR 12-3
harness, headlight 4-5
harness, wire 4-23, 4-25, 4-29, 4-33
harness, wire, gas engine-ECU 7-3
headlight 4-3
headlight assembly 4-3
headlight bulb 4-3
headlight harness 4-3
headlight retainer 4-3
headlight wire harness 4-5
hill brake rod 5-3
hill brake weld assembly 5-3
hinge plate 1-27, 1-29, 1-31, 1-33, 1-37
hinge support 1-43, 1-45
hinge, cargo bed 1-43
hold-down, battery 13-13
horn 4-29
horn bracket 4-29
hose
 air intake 9-15
 vent 9-5
hour meter/fuel gauge 4-13
housing
 3-pin 13-3, 14-3
 4-pin 13-3
 differential 15-3
hub 6-13, 12-21
hub and spindle 6-13
hub cap 6-13
hub, front 6-13
hydrometer 17-5

I

idler gear, differential 15-3
indicator, battery condition 4-17
in-line fuse holder 13-7
inner frame snubber 8-7
input shaft 12-15, 15-3
instrument panel 4-13, 4-15
intermediate shaft 15-3
internal retaining ring pliers 17-5
isolator, shock damper 6-15

INDEX

J

joint
 ball 5-3, 5-9
jounce bumper 6-15
jumper harness, run/maint 7-3

K

key 4-15
 driven clutch 11-7
 square 11-7
key (pair) 4-13
key switch 4-13, 4-15
key switch spacer 4-13
keyswitch nut 4-13, 4-15
kick plate, body 1-27, 1-29, 1-31, 1-33
kingpin 6-9
kit

 3-pin housing 13-3, 14-3
 4-pin housing 13-3
 accelerator pivot rod 5-5, 5-7
 battery condition indicator 4-17
 brake cable 5-15
 brake pedal 5-3
 brake relay 4-5
 brake shoe retainer 5-11, 5-13
 clutch repair 11-7
 drive clutch button 11-5
 drive clutch weight 11-5
 driven clutch button 11-7
 front hub replacement 6-13
 hand pump, SPWS 13-17
 motor brush 14-3
 motor brush spring 14-3
 motor cover plate 14-3
 motor speed sensor 14-3
 motor terminal hardware 14-3
 park brake latch 5-3
 park brake pedal 5-3
 relay, 48V 4-7
 shock absorber 6-15
 shock absorber cushion 6-15
 shoe retainer 5-11, 5-13
 steering column mounting bracket 6-5
 strobe light 4-23, 4-25, 4-27
 turn signal 4-9

Kit, SPWS 13-15

knob, light switch 4-13, 4-15

L

lamp, strobe light 4-23, 4-25, 4-27
lamp, turn signal and socket 4-9
lamp, stop, turn, tail 4-31
latch, park brake 5-3
leaf spring, 260lb, lh 6-15
leaf spring, 260lb, rh 6-15

lens, headlight 4-3
lens, strobe light 4-23, 4-25, 4-27
lens, taillight 4-33
lever
 transaxle shift 12-7
light
 battery 4-15
 oil 4-13
 tail 4-33
 water quality 13-17
light switch 4-13, 4-15
light switch knob 4-13, 4-15
light, strobe 4-23, 4-25, 4-27
limit switch 4-5, 4-7, 7-9, 7-11
limiter
 voltage 4-7
link, rod 1-41
liquid gasket 15-3, 17-5
low oil warning light 4-13
lubricant, dry moly 17-5
lubricant, moly-teflon 14-3, 17-5
lug nut 2-3
lug stud 6-13, 12-21, 15-3

M

magnet, speed sensor 14-3
mat, floor 1-23
MCOR 13-5
mechanism, brake adjusting 5-11, 5-13
meter, volt ohm 17-7
module
 calibration test 17-3
Module, ECU 8-11
moly-teflon lubricant 17-5
motor
 48-volt IQ 14-3
 motor brush kit 14-3
 motor brush spring kit 14-3
 motor bumper 14-3
 motor end cap 14-3
 motor magnet, speed sensor 14-3
 motor speed controller
 Excel w/Hi-Freq 13-11
 motor speed sensor 14-3
 motor speed sensor kit 14-3
 motor terminal hardware kit 14-3
 mount, bumper 6-15
 mounting block, brake 5-3
 moveable-face 11-5, 11-7

N

nerf bar 1-25
non-skid tape 1-25
nut, keyswitch 4-13, 4-15
nut, lug 2-3

O

oil seal 12-11, 12-13
oil warning light, low 4-13
O-Ring, Fuel Module 9-3
overload bumper spacer 6-15

P

pad
 accelerator pedal 5-5, 5-7
 brake pedal 5-3
 park brake 5-3
 wear 1-29, 1-33
paint, underbody (black) 17-5
panel
 closeout, dash 1-5
 instrument 4-13
panel, instrument 4-13, 4-15
park brake latch 5-3
park brake pedal 5-3
park brake rod sleeve 5-3
park brake spacer 5-3
park brake torsion spring 5-3
pawl 5-3
p-clamp (fuel filter) 9-11
pedal, accelerator 5-5, 5-7
pedal, brake 5-3
pedal, park brake 5-3
pin
 bow tie locking 5-15
 clevis 5-15
 differential 12-19
 guide 12-11, 12-13
 input shaft 12-15
pinion, steering 6-3
piston ring compressor 17-5
piston ring pliers 17-5
pivot support bearing 5-5, 5-7
plate
 backing (brake) 5-11, 5-13
 body kick 1-27, 1-29, 1-31, 1-33
 component mounting 13-11
 cover 14-3
 front spring retainer 6-9
 hinge 1-27, 1-29, 1-31, 1-33, 1-37
 receptacle backing 13-9
 spring mounting 6-9
Plate, Closure, Kohler 8-17
pliers
 internal retaining ring 17-5
 piston ring 17-5
 retaining ring 17-5
plug 1-9
 4-pin 13-3
 drain 12-11, 12-13
 driven clutch puller 17-3

INDEX

port, diagnostic 13-7
protector spray, battery terminal 17-3
puller
 bearing 17-3
 drive clutch 17-3
 drive clutch hub 17-3
 driven clutch cam 17-3
 seal 17-5

R

rack guide pressure spring 6-3
rack, steering 6-3
ratchet, park brake 5-3
rear shock absorber 6-15
receptacle backing plate 13-9
receptacle, accessory 4-13, 4-15
receptacle, charger 13-9
refractometer 17-5
regulator, voltage 7-9
relay 4-7
relay, 12-volt 4-5
relay, 48V 4-7
relay, brake, kit, 12-volt 4-5
remover, bearing and oil seal 17-3
resistor assembly 13-11
retainer
 accelerator pedal spring 5-5, 5-7
 brake shoe 5-11, 5-13
 cable 1-29, 1-33
 headlight 4-3
 shock absorber cushion 6-15
 spring 6-15
retaining ring 6-5
retaining ring pliers 17-5
return spring bumper 5-5, 5-7
reverse buzzer 4-11
rim, wheel 2-3
ring
 C-type stop 6-3
 retaining 6-5, 7-9, 11-5, 11-7, 12-11, 12-13, 12-21
 snap 6-3
 spiral backup 11-5
Rivet, Removable 4-13, 4-15
rock guard 15-5
rocker switch 13-3
rocker switch (lights) 4-5, 4-7
rod
 accelerator 5-9
 accelerator pivot 5-5, 5-7
 equalizer 5-15
 hill brake 5-3
 link 1-41

S

safety first card 17-5

seal
 lip 15-3
 oil 12-11, 12-13, 15-3
 steering pinion dust 6-3
seal puller 17-5
sealant 15-3
seat bottom 1-47
seat gasket 1-37
seat support 1-35
seat support cross brace 1-35
seat, bearing 6-5
select shaft 12-11, 12-13
sensor, motor speed 14-3
Sensor, Temperature 8-11
shackle 6-15
shaft
 axle 12-17, 12-19
 center 12-15
 counter 12-15
 differential 12-19
 governor 12-11, 12-13
 governor gear 12-11, 12-13
 input 12-15, 15-3
 intermediate 15-3
 select 12-11, 12-13
 shift 12-15
 steering column 6-5
shift lever 12-7
shift shaft 12-15
shock absorber 6-11
shock absorber cushion 6-15
shock absorber cushion retainer 6-15
shock absorber, rear 6-15
shock damper isolator 6-15
shock mounting bracket, drv 6-15
shock mounting bracket, pas 6-15
shoe retainer kit 5-11, 5-13
shoe, brake 5-11, 5-13
side bar 1-25
signal, turn 4-9
sleeve 6-15, 12-11, 12-13
 delta A-plate 6-11
 park brake rod 5-3
snap ring 6-3
snubber bracket 8-7
snubber, dual 8-7
snubber, inner frame 8-7
solenoid, 12-volt 7-9
spacer 12-11, 12-13, 12-15
 accelerator pivot rod 5-5, 5-7
 key switch 4-13
 overload bumper 6-15
 park brake 5-3
speed controller
 Excel w/Hi-Freq 13-11
speed controller cover 13-11

speed sensor 14-3
speed sensor magnet 14-3
speed sensor, motor 14-3
spindle 6-13
spindle and hub 6-13
spiral backup ring 11-5
spray, battery terminal protector 17-3
spring 12-11, 12-13
 accelerator return 5-5, 5-7
 brake 5-11, 5-13
 brake return 5-15
 brush 14-3
 drive button 11-5
 drive clutch 11-5
 extension 1-41
 park brake torsion 5-3
 rack guide pressure 6-3
 steering shaft compression 6-5
spring cup 5-5, 5-7
spring mounting plate 6-9
spring retainer 6-15
spring, leaf 6-9
Spws, Manifold Asm 13-15
steel bushing 1-43, 6-9
steering column 6-5
steering column bearing press tool 17-7
steering column cover 4-9
steering column retaining ring tool 17-7
steering gear box 6-3
steering pinion 6-3
steering pinion dust seal 6-3
steering rack 6-3
steering shaft assembly 6-5
steering shaft compression spring 6-5
steering wheel puller tool 17-7
stem, valve 2-3
stiffener, bed support 1-43, 1-45
strap, A-plate 6-11
strobe light 4-23, 4-25, 4-27
strobe light lens 4-23, 4-25, 4-27
stud
 lug 6-13, 12-21, 15-3
stud, ball 7-9
support
 bed 1-35
 brush guard 1-17, 6-9
 cowl 1-5
 hinge 1-43, 1-45
 latch link 1-41
 seat 1-35
support yoke (steering) 6-3
support, front body 1-27, 1-29, 1-31, 1-33
support, seat 1-35
suppressor, voltage 4-5
switch plate cover 4-23, 4-25, 4-27
switch

INDEX

key 4-13, 4-15
light 4-13, 4-15
light rocker 4-5, 4-7
limit 4-5, 4-7, 7-9, 7-11
rocker 13-3
Tow/Run 13-3
turn signal 4-9
switch assembly 4-23, 4-25, 4-27
switch rubber boot 13-3

T

12-volt solenoid 7-9
tail light bulb 4-33
taillight 4-33
taillight gasket 4-33
taillight kit 4-33
taillight lens 4-33
taligate 1-41
tape, non-skid 1-25
terminal block 4-5, 4-7
tester, continuity 17-5
thermometer, battery 17-3
thread-forming grease fitting 6-13
thrust bearing 6-9
tie rod 6-11
tie rod end 6-11
tie wrap 4-9, 4-25, 4-27, 6-3, 6-5, 7-9, 12-5, 13-3, 13-11
tilt bed catch 1-41
tire 2-3
tool
 accelerator pedal adjustment 17-3
 belt tensioning, starter/generator 17-7
 charger bezel 17-3
 clutch cam installation 17-3
 drive clutch holder 17-3
 steering column bearing press 17-7
 steering column retaining ring 17-7
 steering wheel puller 17-7
 transaxle axle seal 17-7
 transaxle pinion seal 17-7
 transmission 17-7
tool kit, clutch 17-3
touch-up paint 17-5
Tow/Run switch 13-3
Tow/Run switch bracket 13-3
transaxle (Electric Vehicle) 15-3
transaxle axle seal tool 17-7
transaxle guard 15-5
transaxle pinion seal tool 17-7
transaxle, limited-slip (Gas Vehicle) 12-11
transaxle, open-diff (Gas Vehicle) 12-13
transmission tool 17-7
tube
 axle 12-17, 12-19, 15-3
Tuflok 4-13, 4-15

turn signal 4-9
turn signal conversion kit 4-9
turn signal lens 4-3
turn signal socket and lamp 4-9

U

U-bolt 6-15
upper delta clevis 6-9
urethane bushing 1-43, 6-9, 6-11, 6-15
USB
 cover 16-3, 16-5, 16-7, 16-9
USB cover 16-3, 16-5, 16-7, 16-9

V

valve 9-15
valve spring compressor 17-7
valve stem 2-3
vent
 transaxle 12-11, 12-13
vent, barb 9-5
volt ohm meter 17-7
voltage limiter 4-7
voltage regulator 7-9
voltage suppressor 4-5

W

warning light, low oil 4-13
water quality light 13-17
wear pad 1-29, 1-33
wedge, bearing puller 17-3
weight
 clutch 11-5
 secondary clutch 11-5
weldment
 governor bracket 9-11, 12-9
wheel cover 2-5
wheel rim 2-3
windshield channel 1-11
wire
 green, starter/generator 7-3, 7-5
 ground, fuel tank 7-3, 9-3
wire harness 4-23, 4-25, 4-29, 4-33, 7-3
wire harness, headlight 4-5
wrap, tie 4-9, 4-25, 4-27, 6-3, 6-5, 7-9, 12-5, 13-3, 13-11

Y

yoke, gear 17-5
yoke, support (steering) 6-3



Club Car, Inc.
P.O. Box 204658
Augusta, GA 30917-4658
USA

Web	www.clubcar.com
Phone	1.706.863.3000 1.800.ClubCar
Int'l	+1 706.863.3000
Fax	1.706.863.5808