




1999
ILLUSTRATED
PARTS LIST
SUPPLEMENT

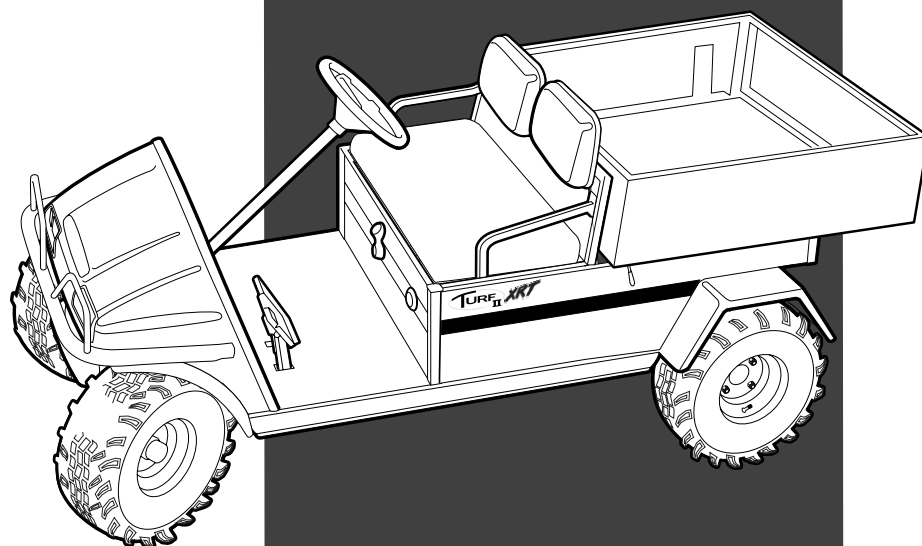

CARRYALL TURF II XRT

SUPPLEMENT TO THE
1999 CARRYALL
ILLUSTRATED PARTS LIST

MANUAL NUMBER 101993905
EDITION CODE 0299C00000

USING THE ILLUSTRATED PARTS LIST SUPPLEMENT

WARNING

- **THIS SUPPLEMENT IS TO BE USED ONLY FOR IDENTIFICATION AND ORDERING OF SERVICE PARTS. BE SURE TO READ AND USE THE MAINTENANCE AND SERVICE MANUAL BEFORE ATTEMPTING ANY VEHICLE REPAIRS.**

This supplement covers 1999 Carryall® Turf II® XRT vehicles when used in conjunction with the 1999 Carryall Illustrated Part List (Club Car Manual No. 101993902). This supplement covers sections and partial sections that supply additional information about the Turf II XRT vehicle which are not represented in the Carryall IPL. All other information in the 1999 Carryall Illustrated Parts List pertaining to the Carryall Turf II vehicle applies to the Turf II XRT model as well.

Use the Table of Contents in this supplement to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section titles and numbers, and under them, the individual page titles and numbers to be found in that section. The Table of Contents will direct you either to a page in the 1999 Carryall Illustrated Parts List or to a page in this supplement.

Please refer to the 1999 Carryall Illustrated Parts List for complete instructions for using the Illustrated Parts List.



P. O. Box 204658
Augusta, Georgia 30917-4658 USA
Telephone 706-863-3000
Service Parts Fax 706-855-7413

© 1999, CLUB CAR, INC.
All rights reserved.

This manual effective September 4, 1998

CONTENTS

MAINTENANCE AND SERVICE TOOLS

SECTION

1

MAINTENANCE AND SERVICE TOOLS	See Carryall IPL, Page	1-3
MAINTENANCE AND SERVICE TOOLS, CONTINUED	See Carryall IPL, Page	1-5

BODY AND TRIM

SECTION

2

FRONT BODY AND TRIM		2-3
SEATS AND SUPPORT STRUCTURE	See Carryall IPL, Page	2-5
LATCH PLATE AND PROP ROD	See Carryall IPL, Page	2-11
TILT BED, HINGE AND LATCH	See Carryall IPL, Page	2-13
CARGO BOX	See Carryall IPL, Page	2-15
REAR BODY TRIM		2-5

WHEELS AND TIRES

SECTION

3

WHEELS AND TIRES		3-3
------------------------	--	-----

DECALS

SECTION

4

DECALS		4-3
DECALS, CONTINUED	See Carryall IPL, Page	4-5

BRAKES, PEDAL, AND CABLE ASSEMBLIES

SECTION

5

REAR BRAKE ASSEMBLY, MANUALLY ADJUSTED	See Carryall IPL, Page	5-5
BRAKE PEDAL AND CABLE ASSEMBLY	See Carryall IPL, Page	5-9
FRONT BRAKE ASSEMBLY	See Carryall IPL, Page	5-11
ACCELERATOR PEDAL ASSEMBLY	See Carryall IPL, Page	5-13

STEERING, FRONT AND REAR SUSPENSION

SECTION

6

STEERING COLUMN		6-3
STEERING GEAR ASSEMBLY	See Carryall IPL, Page	6-5
FRONT SUSPENSION, UPPER		6-5
FRONT SUSPENSION, LOWER		6-7
REAR SUSPENSION		6-9
STABILIZER BAR		6-11

ELECTRICAL SYSTEM

SECTION

7

FORWARD/REVERSE SHIFTER ASSEMBLY		7-3
ELECTRICAL COMPONENT BOX, GASOLINE VEHICLE	See Carryall IPL, Page	7-9
ELECTRICAL COMPONENTS, FRONT BODY	See Carryall IPL, Page	7-11
HEADLIGHTS	See Carryall IPL, Page	7-13
WIRING	See Carryall IPL, Page	7-15
STARTER/GENERATOR ASSEMBLY	See Carryall IPL, Page	7-29
STARTER/GENERATOR MOUNTING	See Carryall IPL, Page	7-31
BATTERY	See Carryall IPL, Page	7-33

CONTENTS

ENGINE

SECTION

8

FE 350 ENGINE— SHROUDS AND BRACKETS	See Carryall IPL, Page	8-15
FE 350 ENGINE— IGNITION COMPONENTS AND FLYWHEEL	See Carryall IPL, Page	8-17
FE 350 ENGINE— OIL CIRCULATION	See Carryall IPL, Page	8-19
FE 350 ENGINE— CYLINDER HEAD	See Carryall IPL, Page	8-21
FE 350 ENGINE— CRANKCASE, CAMSHAFT AND OIL SENSOR	See Carryall IPL, Page	8-23
FE 350 ENGINE— CRANKCASE AND CRANKSHAFT	See Carryall IPL, Page	8-25
ENGINE MOUNTING		8-3

FUEL, INTAKE, AND GOVERNOR SYSTEMS

SECTION

9

FUEL SYSTEM	See Carryall IPL, Page	9-3
CARBURETOR ASSEMBLY, FE 350 ENGINE	See Carryall IPL, Page	9-7
CARBURETOR INSTALLATION	See Carryall IPL, Page	9-9
GOVERNOR AND ACCELERATOR CABLES	See Carryall IPL, Page	9-11
INTAKE DUCT, CHOKE, AND AIR BOX ASSEMBLY	See Carryall IPL, Page	9-15

EXHAUST SYSTEM

SECTION

10

EXHAUST SYSTEM, FE 350	See Carryall IPL, Page	10-5
------------------------------	------------------------	------

TORQUE CONVERTER

SECTION

11

DRIVE CLUTCH	See Carryall IPL, Page	11-3
DRIVEN CLUTCH	See Carryall IPL, Page	11-5

UNITIZED TRANSAXLE

SECTION

12

UNITIZED TRANSAXLE— GEAR CASES AND BRACKETS	See Carryall IPL, Page	12-3
UNITIZED TRANSAXLE— F&R TRANSMISSION AND GEAR REDUCTION	See Carryall IPL, Page	12-5
UNITIZED TRANSAXLE— DIFFERENTIAL AND AXLES	See Carryall IPL, Page	12-7

1


G

E

BODY AND TRIM

2

G

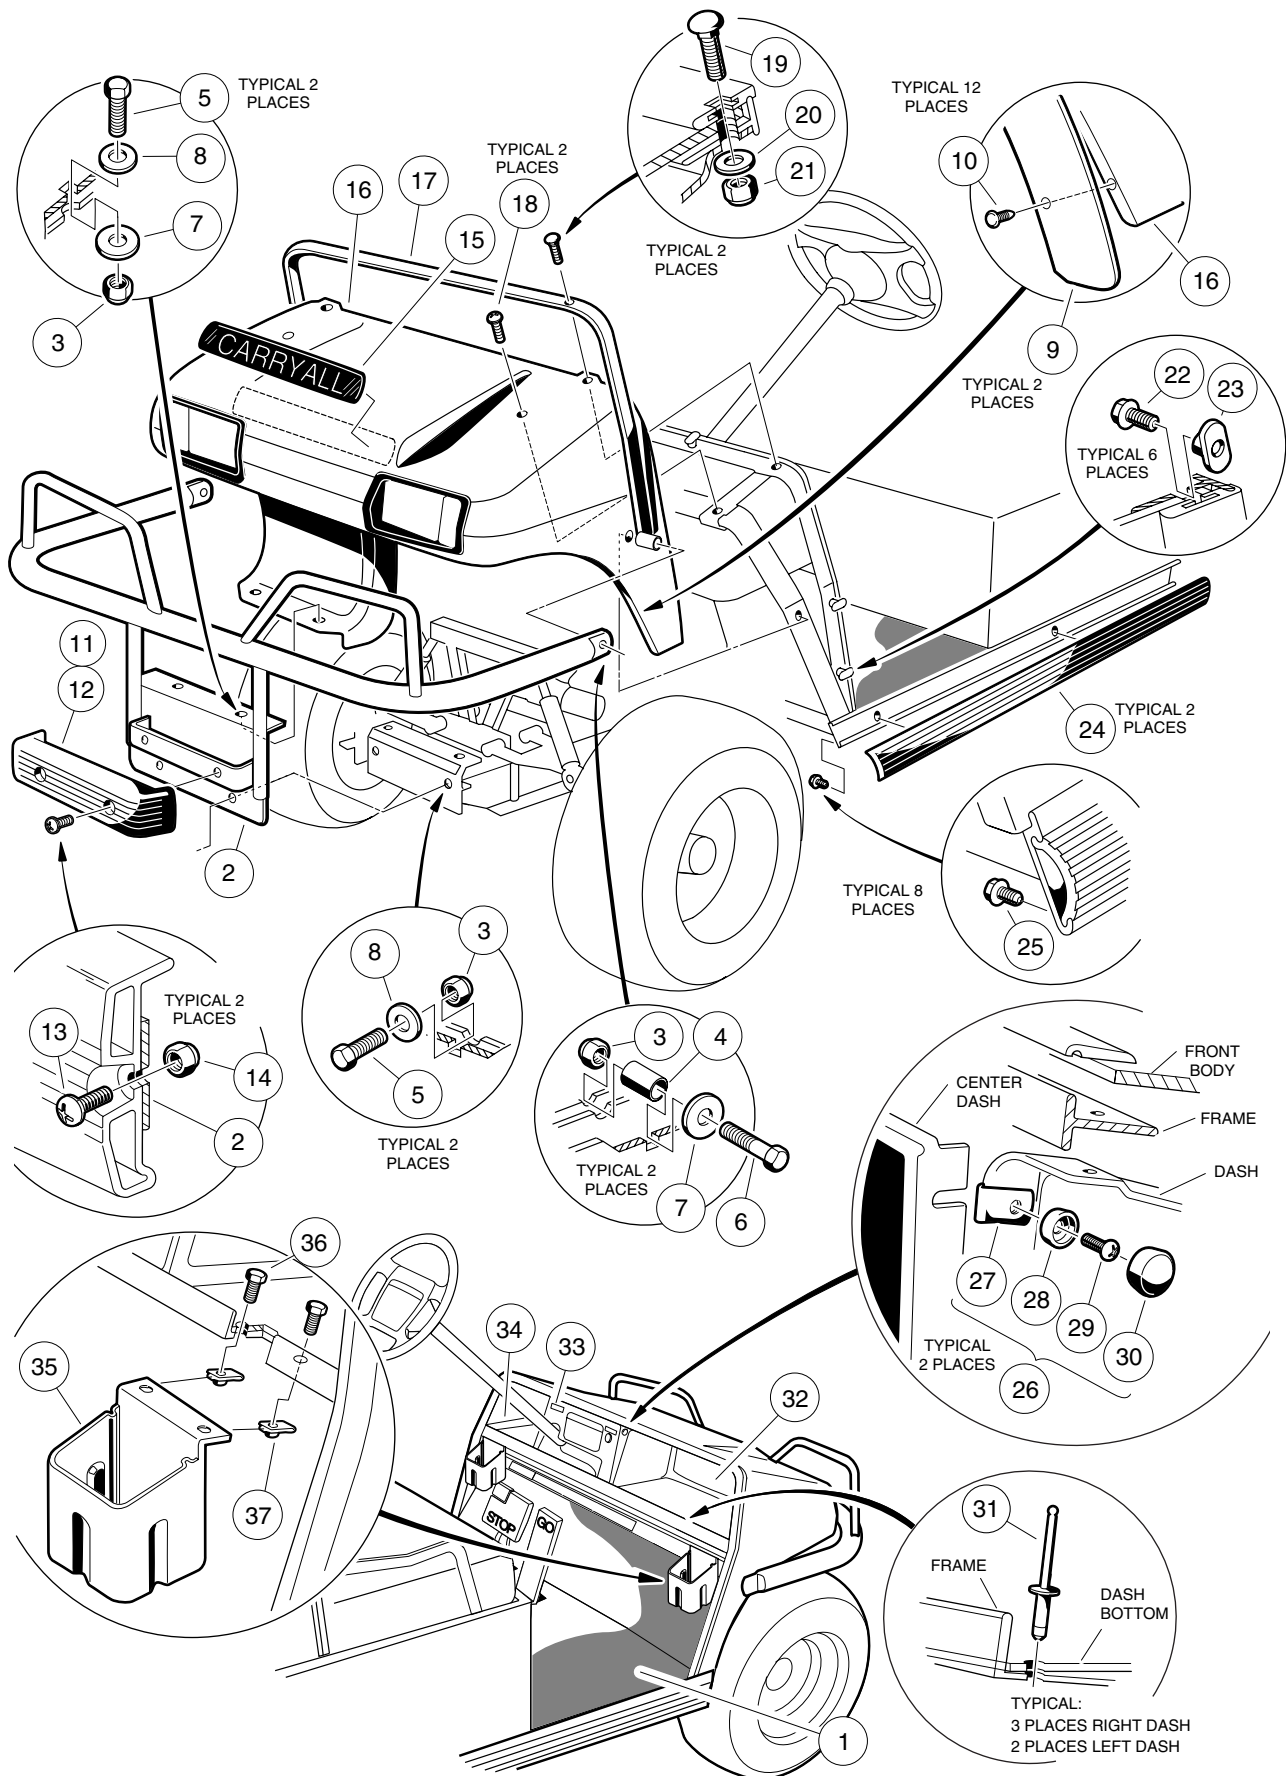


FRONT BODY AND TRIM

2

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015032</u>	MAT, FLOOR, FRONT	1
2	<u>102004301</u>	GUARD, BRUSH	1
3	<u>7473</u>	NUT, NYLON LOCK, 5/16 - 18	6
4	<u>1015608</u>	SPACER	2
5	<u>1010934</u>	SCREW, HEX HEAD, 5/16 - 18 x 1	4
6	<u>8935</u>	SCREW, HEX HEAD, 5/16 - 18 x 2-1/4	2
7	<u>1011578</u>	WASHER, FLAT, TYPE B, 5/16	4
8	<u>1241</u>	WASHER, FLAT, 5/16	4
9	<u>102004401</u>	FENDER, FRONT	2
10	<u>1010434</u>	BARREL, PLASTIC	12
11	<u>1017080</u>	KIT, FRONT BUMPER (INCLUDES ITEMS 12 - 14)	1
12	<u>1016868</u>	BUMPER, FRONT	1
13	<u>7251</u>	SCREW, PHILLIPS TRUSS HEAD, 5/16 - 18 x 1	2
14	<u>7473</u>	NUT, NYLON LOCK, 5/16 - 18	2
15	<u>101978401</u>	NAMEPLATE, CARRYALL	1
16	<u>101693909</u>	BODY, FRONT WITH HEADLIGHT OPENING (GREEN)	1
17	<u>1011014</u>	TRIM, FRONT BODY	1
18	<u>7251</u>	SCREW, PHILLIPS TRUSS HEAD, 5/16 - 18 x 1	2
19	<u>1010435</u>	BOLT, CARRIAGE, 5/16 - 18 x 1	2
20	<u>1241</u>	WASHER, FLAT, 5/16	2
21	<u>7473</u>	NUT, NYLON LOCK, 5/16 - 18	2
22	<u>1011017</u>	SCREW, FLANGE LOCK	6
23	<u>1011394</u>	NUT, SLAB BASE "T" (PACKAGE OF 4)	1
24	<u>101347502</u>	TRIM, SIDE BUMPER GUARD	2
25	<u>1012047</u>	SCREW, SELF-TAPPING, 8 - 32 x 3/8	8
26	<u>1014645</u>	KIT, SNAP WASHER, BLACK (INCLUDES ITEMS 27 - 30)	2
27	N/A	NUT, SPEED, 10 - 32	1
28	N/A	WASHER, CUP, NO. 10	1
29	N/A	SCREW, SHEET METAL, 10 x 3/4	1
30	N/A	COVER, SCREW HEAD	1
31	<u>7973</u>	RIVET, ALUMINUM POP, 3/16	5
32	<u>1013343</u>	COMPONENT, DASH, PASSENGER SIDE (BLACK)	1
33	<u>101660404</u>	PANEL, CENTER DASH (BLACK)	1
34	<u>1013344</u>	COMPONENT, DASH, DRIVER SIDE (BLACK)	1
35	<u>1013422</u>	KIT, CUP HOLDER (INCLUDES ITEMS 36 AND 37)	2
36	<u>1010545</u>	SCREW, HEX HEAD, 1/4 - 20 x 3/4	2
37	<u>1016952</u>	NUT, "U", 1/4 - 20	2

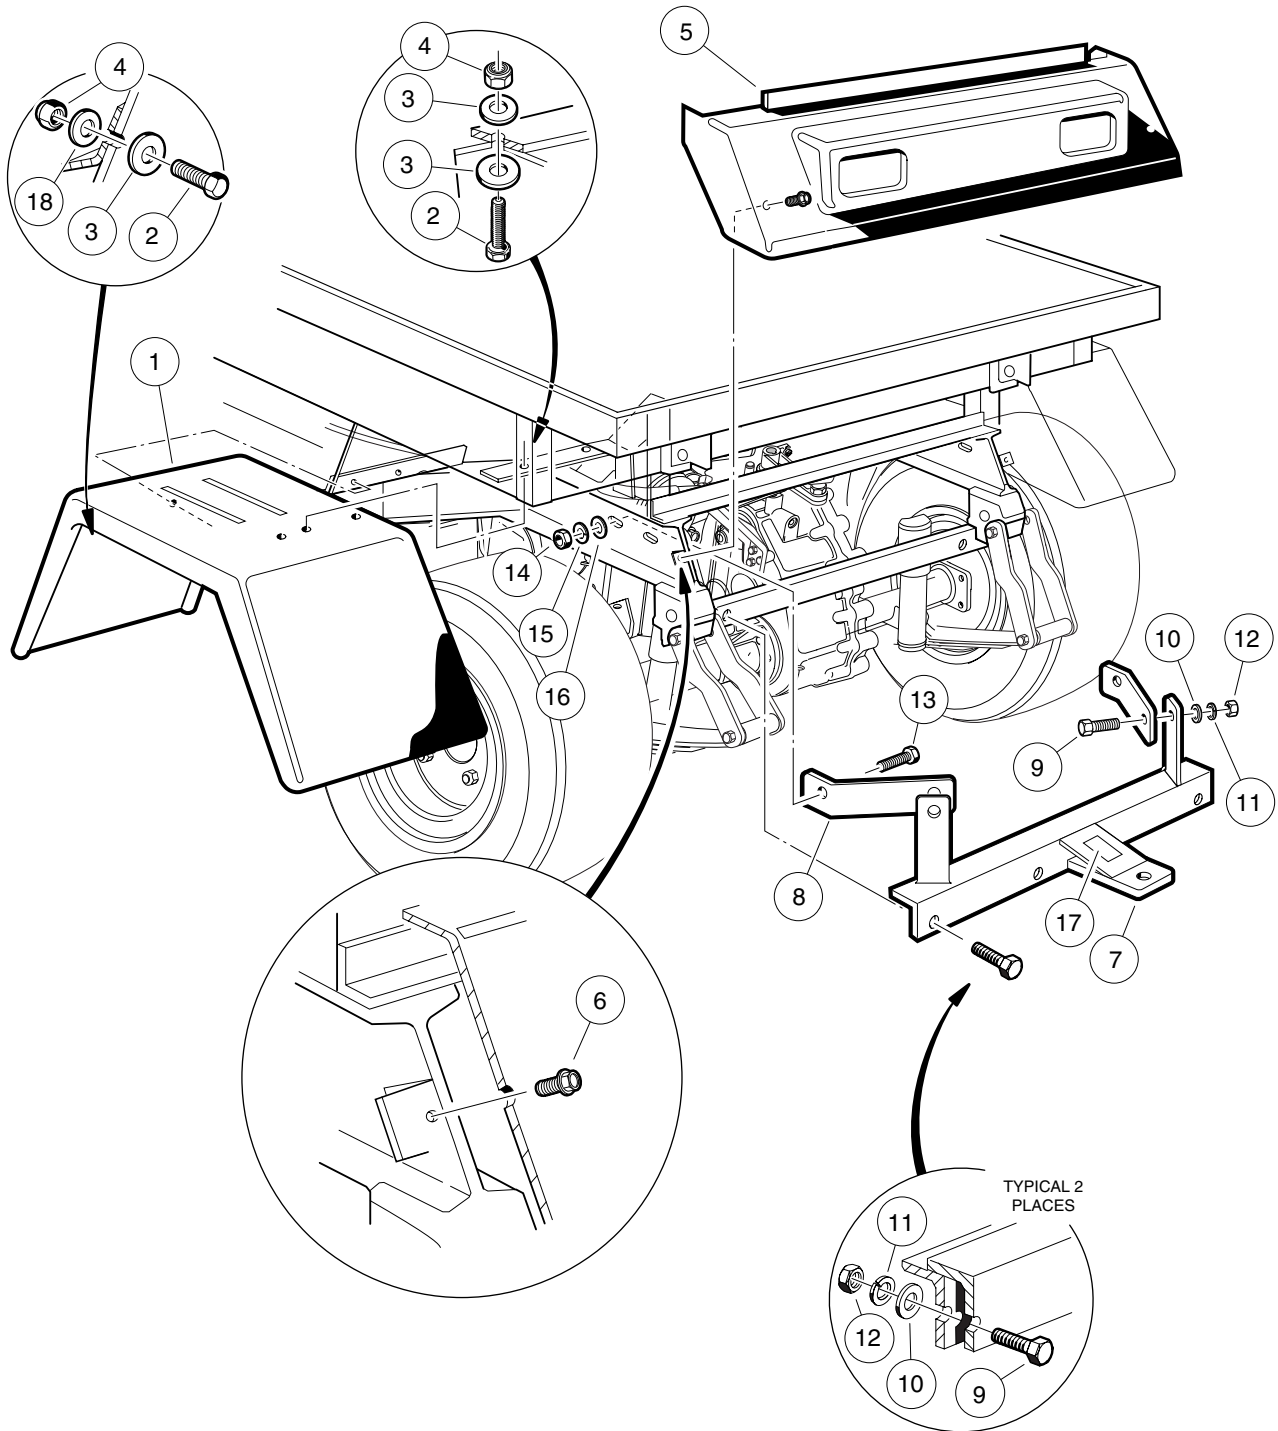

REAR BODY TRIM

2
G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102004601</u>	FENDER, REAR	2
2	<u>304</u>	SCREW, HEX HEAD CAP, 1/4 - 20 x 1	8
3	<u>1014306</u>	WASHER, FLAT, TYPE B, 1/4	12
4	<u>8233</u>	NUT, NYLON LOCK, 1/4 - 20	8
5	<u>1015530</u>	TAILSKIRT	1
6	<u>1012285</u>	SCREW, THREAD-ROLLING, 1/4 - 20 x 5/8	2
7	<u>1015445</u>	KIT, TRAILER HITCH (INCLUDES ITEMS 8 - 17)	1
8	<u>1013483</u>	BRACE, TRAILER HITCH	2
9	<u>1010934</u>	SCREW, HEX HEAD CAP, 5/16 - 18 x 1	4
10	<u>1241</u>	WASHER, FLAT, 5/16	4
11	<u>7174</u>	WASHER, LOCK, 5/16	3
12	<u>1242</u>	NUT, HEX, 5/16 - 18	4
13	<u>705</u>	SCREW, HEX HEAD, CAP, 3/8 - 16 x 1-1/4.....	2
14	<u>706</u>	NUT, HEX, 3/8 - 16	2
15	<u>357</u>	WASHER, LOCK, 3/8	2
16	<u>1011990</u>	WASHER, FLAT, 3/8	2
17	<u>1011553</u>	DECAL, TRAILER HITCH	1
18	<u>332</u>	WASHER, FLAT, 1/4	4



2

G


WHEELS AND TIRES

3

G

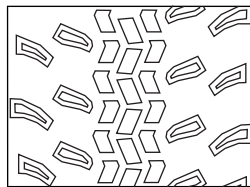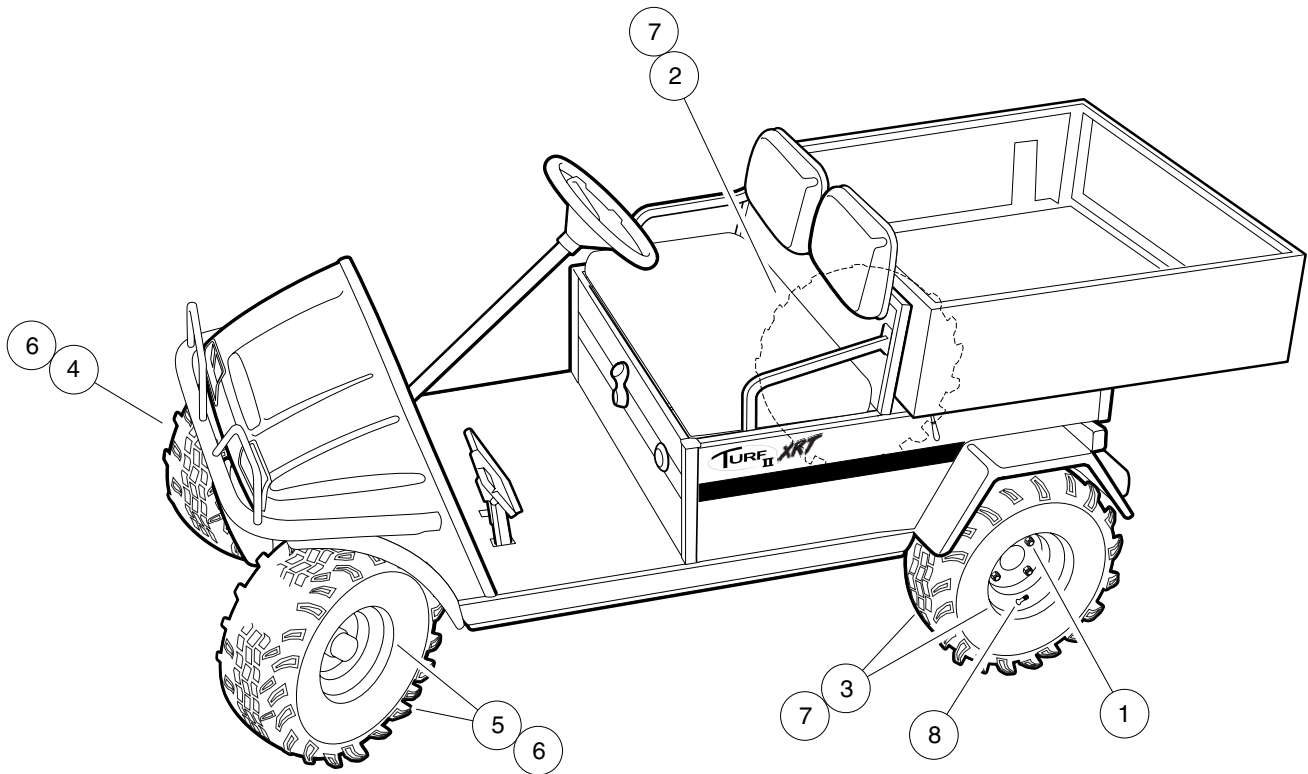

OFF-ROAD
TREAD

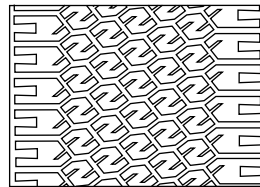

TURF
TREAD

WHEELS AND TIRES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010984</u>	NUT, LUG	16
2	<u>102009401</u>	ASSEMBLY, WHEEL (WHITE) AND TIRE, PASSENGER SIDE REAR, OFF-ROAD TREAD, 6-PLY (22 x 11 - 10)	1
3	<u>102009501</u>	ASSEMBLY, WHEEL (WHITE) AND TIRE, DRIVER SIDE REAR, OFF-ROAD TREAD, 6-PLY (22 x 11 - 10)	1
4	<u>102009201</u>	ASSEMBLY, WHEEL (WHITE) AND TIRE, PASSENGER SIDE FRONT, OFF-ROAD TREAD, 6-PLY (22 x 11 - 10)	1
5	<u>102009301</u>	ASSEMBLY, WHEEL (WHITE) AND TIRE, DRIVER SIDE FRONT, OFF-ROAD TREAD, 6-PLY (22 x 11 - 10)	1
6	<u>102009901</u>	ASSEMBLY, WHEEL (WHITE) AND TIRE, FRONT, TURF TREAD, 4-PLY (23 x 10.5 - 12)	2
7	<u>102010001</u>	ASSEMBLY, WHEEL (WHITE) AND TIRE, REAR, TURF TREAD, 4-PLY (23 x 10.5 - 12)	2
8	<u>7310</u>	STEM, VALVE	4

3

G

3

G

DECALS

4

G

⚠ WARNING

READ AND FOLLOW THESE WARNINGS AND THE OPERATING INSTRUCTIONS BEFORE USING VEHICLE. FAILURE TO DO SO CAN CAUSE SEVERE INJURY OR DEATH.


- Operation from driver side by authorized persons only and only in designated areas - not on public roads.
- DO NOT start vehicle until all occupants (two (2) per seat maximum) are seated.
- Remain seated with entire body inside vehicle and hold on to seat handle or handrail at all times.
- Drive slowly in turns and straight up and down slopes.
- Never stand in front of or behind vehicle.
- DO NOT operate while under the influence of alcohol or drugs.
- DO NOT leave children unattended on vehicle at any time.

CCI 101960601


**DRIVER/PASSENGER
WARNING DECAL****OPERATING INSTRUCTIONS**

- Read Owner's Manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.
- Make sure wheels are turned in desired direction.
- Turn key to "ON" position and be sure nothing is in your path.
- While vehicle is stopped, select direction by placing shift lever or switch in desired position:
F - Forward N - Neutral R - Reverse (Buzzer will sound)
- Vehicle will start moving when accelerator pedal is depressed.
- Slowly depress accelerator pedal to increase speed. Park brake will release when accelerator pedal is depressed.
- To stop, release accelerator pedal and depress brake pedal.
- After stopping, firmly depress park brake until it locks.
- Place forward and reverse switch in neutral position.
- Turn key "OFF" and remove key when not in use.

CCI 101621601

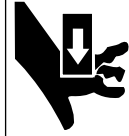OPERATING INSTRUCTIONS**⚠ WARNING****CRUSH AREA****STAY CLEAR**

CCI 101609401

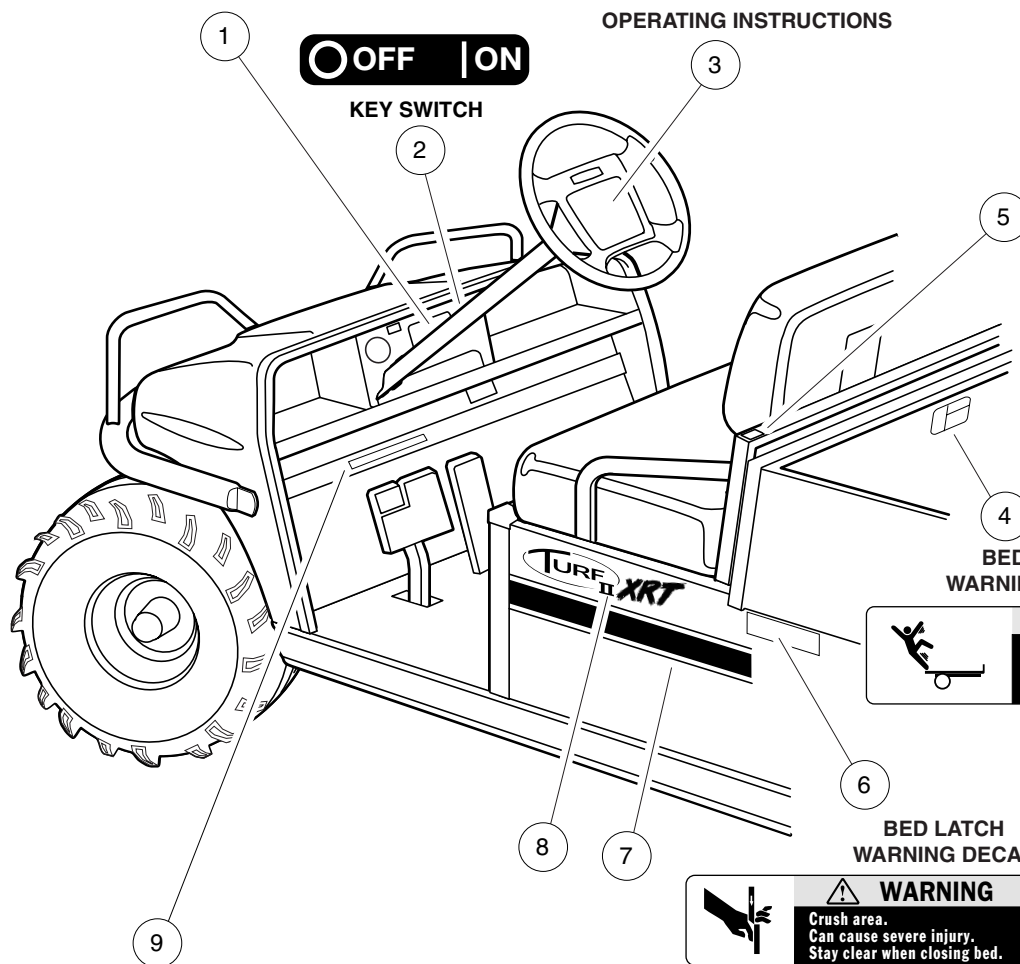**CRUSH AREA
DECAL****VEHICLE LOADING DECAL****VEHICLE
LOADING**

Read Owner's Manual
and warnings on dash.

- Vehicle rated capacity - 900 lbs. on level surface only. Weight to include passengers, cargo bed load, and gross trailer weight. See Owner's Manual.
- Maximum cargo load - 500 lbs. Weight to include cargo bed load and gross trailer weight.
- Maximum trailer hitch tongue weight - 150 lbs.

- Cargo should be evenly spread over the floor of the cargo bed as far forward as possible and secured.
- For vehicle stability, when fully loaded, drive slowly and avoid stopping on or backing down steep hills.
- Avoid top heavy loads. See Owner's Manual.
- When driving on uneven terrain or down steep hills, reduce speed and load.

CCI 102006701

**⚠ WARNING**

Crush area.
Can cause severe injury.
Stay clear when closing bed.

**L
A
T
C
H****O
P
E
N**

CCI 101543701

DECALS

4


G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101960601	DECAL, DRIVER/PASSENGER WARNING	1
2	<u>101825101</u>	DECAL, KEY SWITCH	1
3	101621601	DECAL, OPERATING INSTRUCTIONS	1
4	<u>101553901</u>	DECAL, BED LOAD WARNING	1
5	<u>101609401</u>	DECAL, CRUSH AREA	1
6	<u>101543701</u>	DECAL, BED/LATCH WARNING	1
7	<u>101972502</u>	DECAL, CARRYALL TURF II (GREEN STRIPE) (DRIVER SIDE)	1
7	<u>101972501</u>	DECAL, CARRYALL TURF II (GREEN STRIPE) (PASSENGER SIDE)	1
8	102003301	DECAL, CARRYALL TURF II XRT	2
9	<u>102006701</u>	DECAL, VEHICLE LOADING	1

STEERING, FRONT AND REAR SUSPENSION

6

G

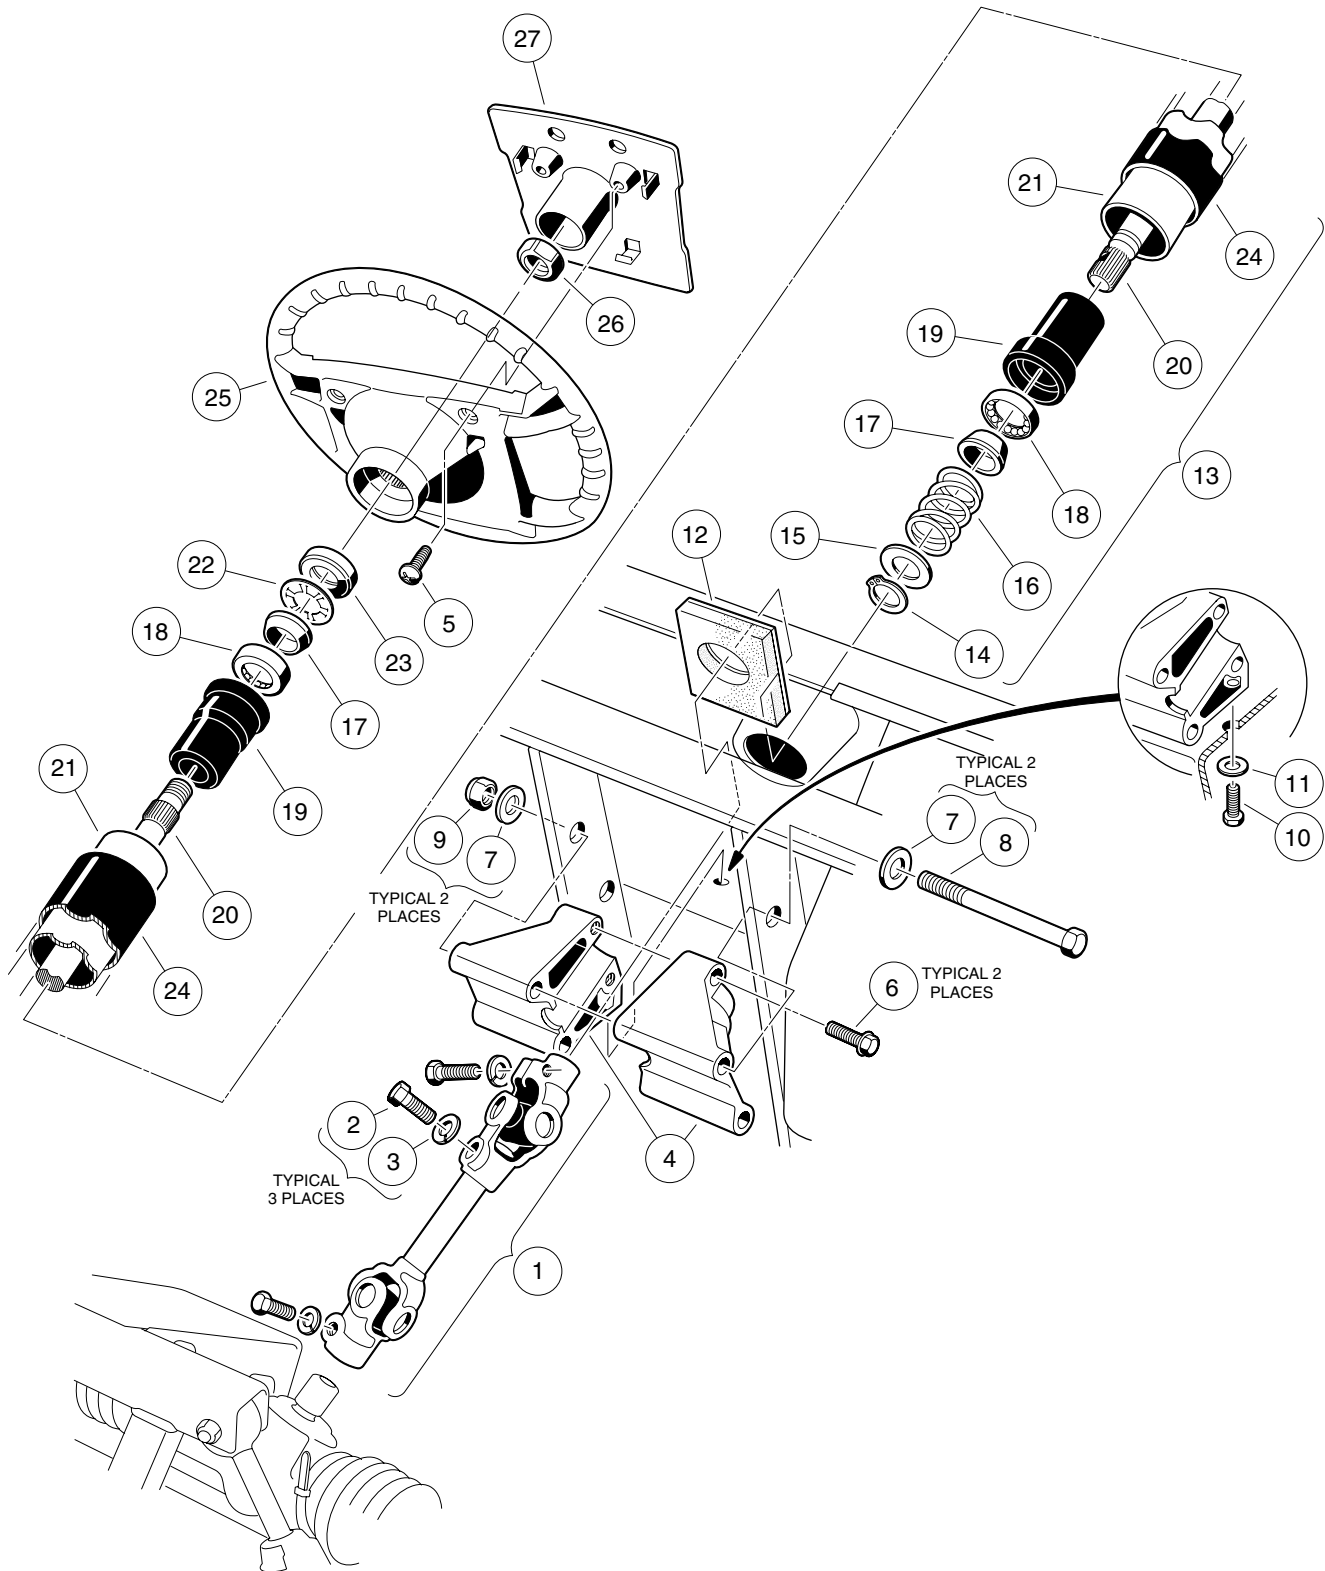


STEERING COLUMN

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102004101</u>	JOINT, COMPOUND STEERING (INCLUDES ITEMS 2 AND 3)	1
2	<u>1017226</u>	SCREW, HEX HEAD CAP, M8 x 1.25 x 30MM	3
3	<u>7174</u>	WASHER, LOCK, 5/16	3
4	101984801	KIT, STEERING COLUMN MOUNTING BRACKET	1
5	<u>1016663</u>	SCREW, PHILLIPS, TYPE A, 12 - 11 x 5/8	2
6	<u>1016269</u>	SCREW, HEX WASHER HEAD THREAD FORMING, 5/16 - 18 x 2	2
7	<u>334</u>	WASHER, FLAT, 3/8	4
8	<u>1016183</u>	SCREW, HEX HEAD CAP, 3/8 - 16 x 7	2
9	<u>8754</u>	NUT, NYLON LOCK, 3/8 - 16	2
10	<u>1014288</u>	SCREW, HEX WASHER HEAD THREAD FORMING, 5/16 - 18 x 3/4	1
11	<u>1011697</u>	WASHER, FLAT, 5/16	1
12	<u>1012499</u>	BOOT, STEERING COLUMN	1
13	1016181	ASSEMBLY, STEERING COLUMN (INCLUDES ITEMS 14 - 23)	1
14	<u>1012605</u>	RING, RETAINING	1
15	<u>1012604</u>	WASHER, STEEL, 5/8	1
16	<u>1014217</u>	SPRING, COMPRESSION	1
17	1014125	WEDGE	2
18	<u>1014213</u>	ASSEMBLY, BEARING	2
19	<u>1014126</u>	SEAT, BEARING	2
20	<u>1015545</u>	SHAFT, STEERING COLUMN	1
21	1016622	COLUMN, ALUMINUM STEERING	1
22	1014214	RING, RETAINING	1
23	<u>1014211</u>	SEAL, BEARING	1
24	1016263	COVER, STEERING COLUMN	1
25	<u>1016156</u>	WHEEL, STEERING	1
26	<u>1017273</u>	NUT, NYLON LOCK, 5/8 - 18	1
27	101615502	SCORECARD PLATE	1

6

G

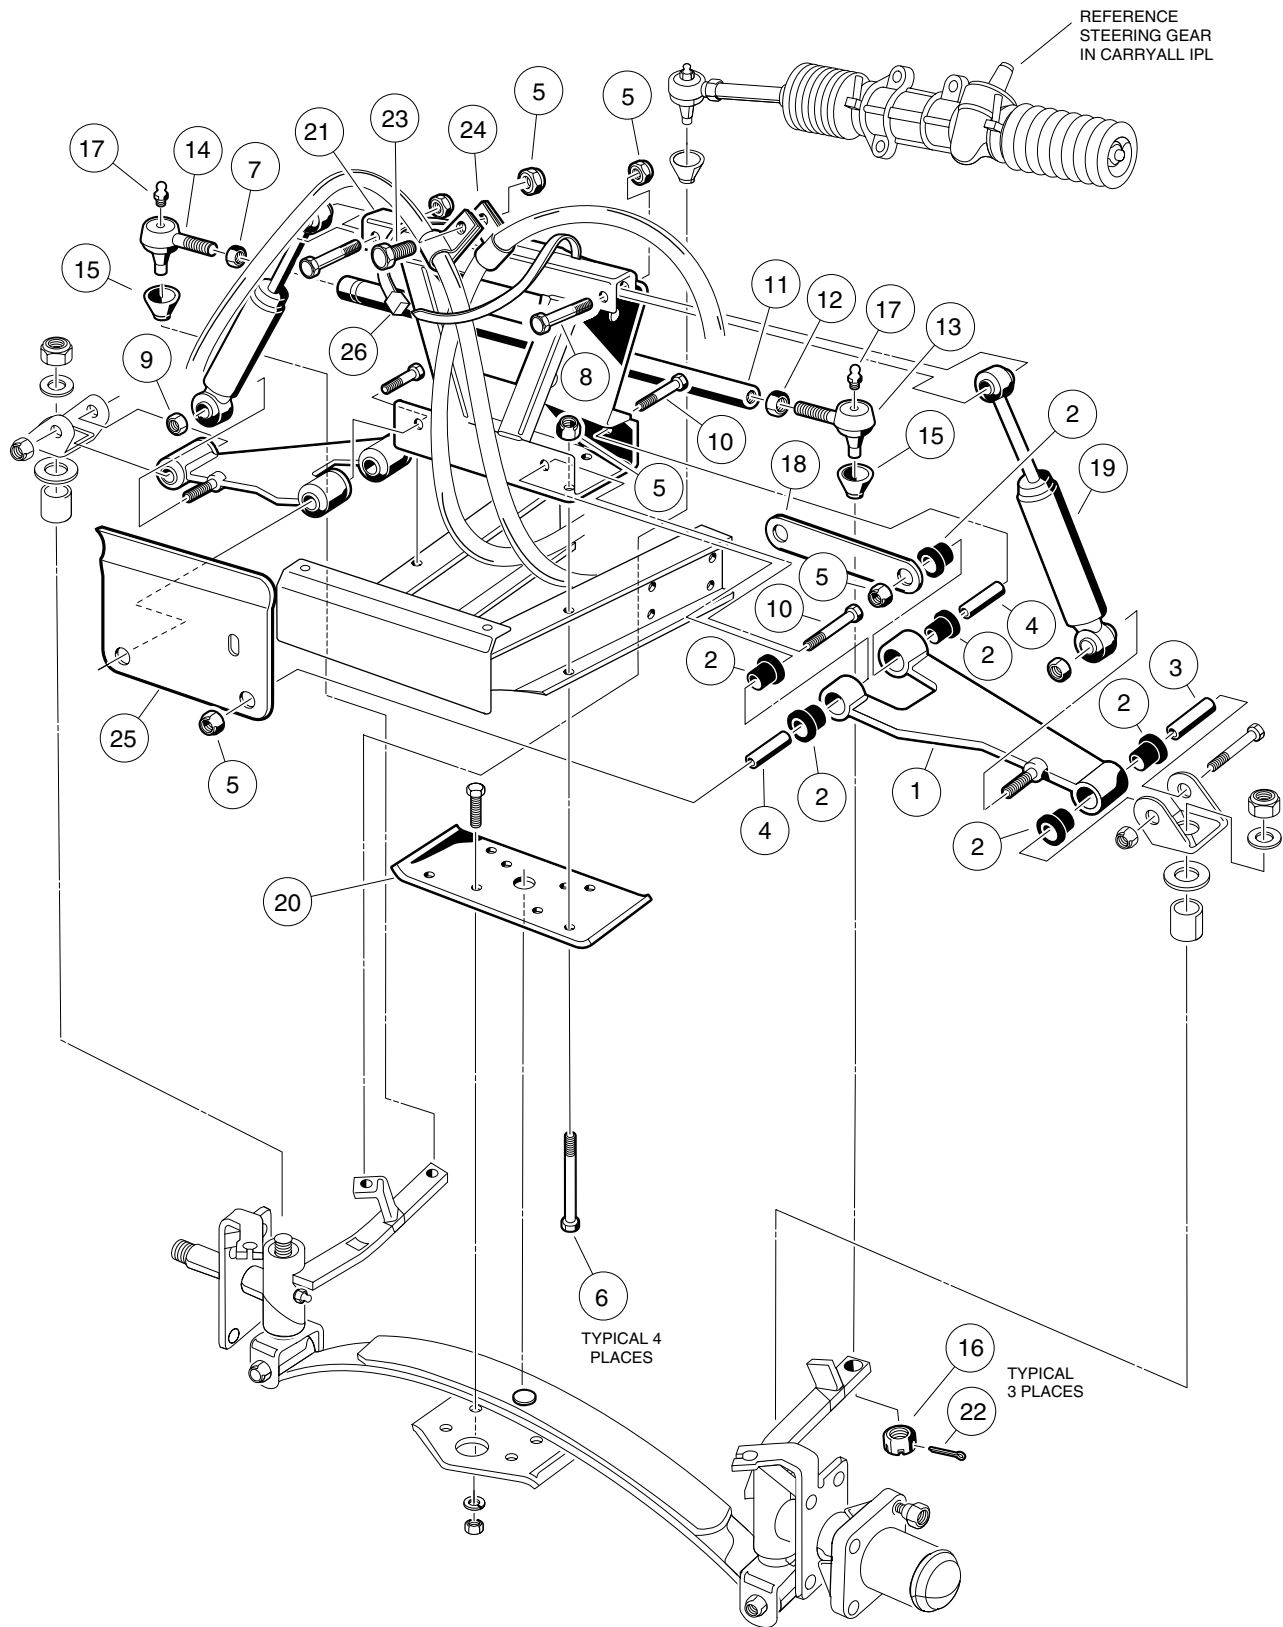


FRONT SUSPENSION, UPPER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1016353</u>	ASSEMBLY, DELTA A-PLATE (INCLUDES ITEMS 2, 3 AND 4)	2
2	<u>1016346</u>	BUSHING, URETHANE	6
3	<u>1016350</u>	SLEEVE, DELTA OUTER	1
4	<u>1016349</u>	SLEEVE, DELTA INNER	2
5	<u>8754</u>	NUT, NYLON LOCK, 3/8 - 16	11
6	<u>101870501</u>	BOLT, HEX HEAD, 3/8 - 16 x 4-3/4	4
7	<u>1308</u>	NUT, HEX, 1/2 - 20	1
8	<u>8861</u>	BOLT, HEX HEAD, 3/8 - 16 x 2-3/4	2
9	<u>1010138</u>	NUT, DIMPLED LOCK, 3/8 - 16	2
10	<u>2402</u>	BOLT, HEX HEAD, 3/8 - 16 x 2-1/4	4
11	<u>1010219</u>	ROD, TIE	1
12	<u>7555</u>	NUT, HEX, LEFT-HAND THREAD, 1/2 - 20	1
13	<u>7540</u>	BALL JOINT, LEFT-HAND THREAD (INCLUDES ITEMS 15, 16 AND 17)	1
14	<u>7539</u>	BALL JOINT (INCLUDES ITEMS 15, 16 AND 17)	1
15	<u>1011930</u>	SEAL, DUST	1
16	<u>7602</u>	NUT, SLOTTED HEX, 3/8 - 24	1
17	<u>1015597</u>	FITTING, THREAD-FORMING GREASE, 1/4-28	1
18	<u>1017266</u>	STRAP, A-PLATE	1
19	<u>1014235</u>	SHOCK ABSORBER, FRONT	2
20	<u>1010124</u>	PLATE, SPRING MOUNTING	1
21	<u>1016385</u>	ASSEMBLY, DELTA SHOCK AND GEAR SUPPORT	1
22	<u>1035</u>	PIN, COTTER, 3/32 x 1	3
23	<u>320</u>	BOLT, HEX HEAD, 3/8 - 16 x 1	1
24	<u>101935301</u>	CLAMP, BRAKE CABLE (PART OF BRAKE CABLE ASSEMBLY)	2
25	<u>101955001</u>	BRACKET, BRAKE CABLE GUIDE	1
26	<u>102025401</u>	TIE WRAP	1

6

G

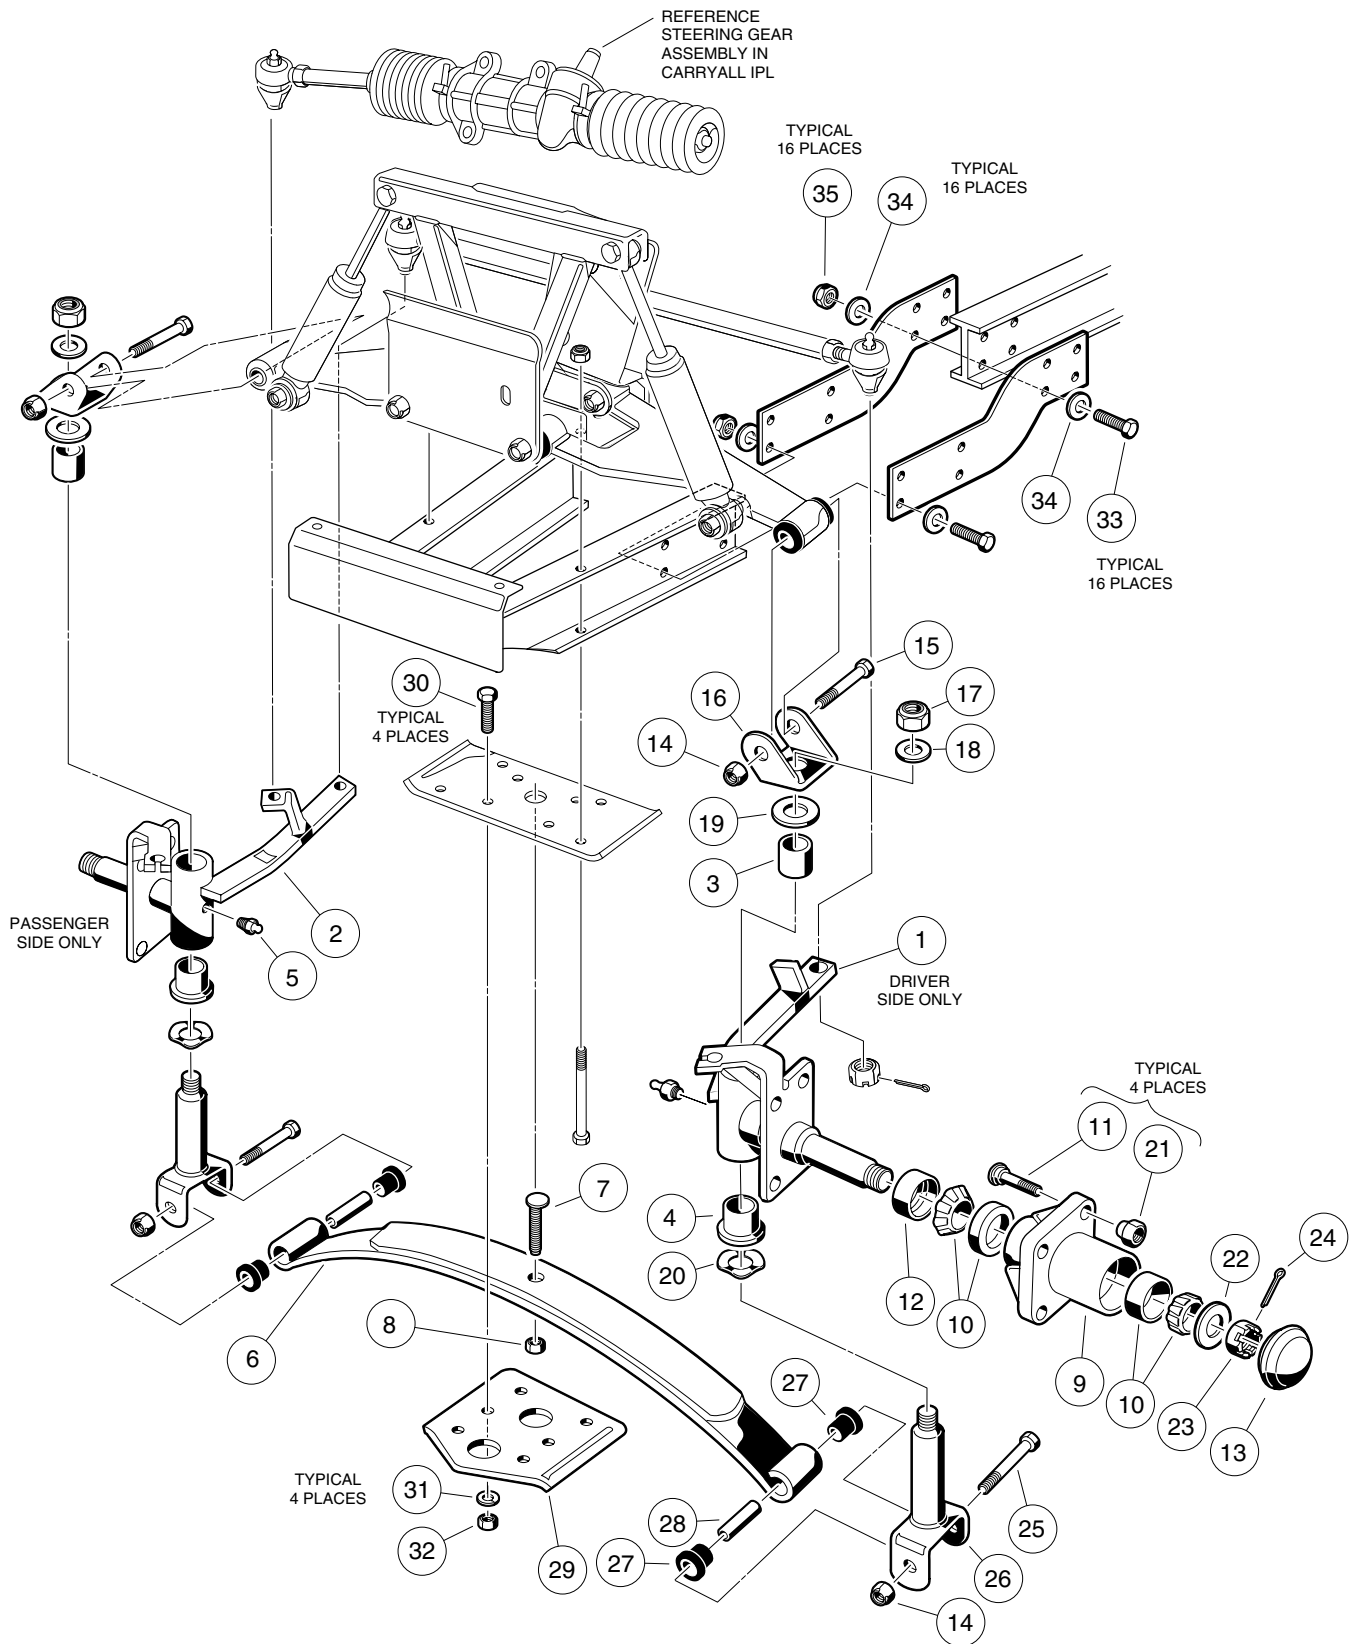


FRONT SUSPENSION, LOWER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101876901	ASSEMBLY, SPINDLE, DRIVER SIDE (INCLUDES ITEMS 3, 4 AND 5)	1
2	<u>101877001</u>	ASSEMBLY, SPINDLE, PASSENGER SIDE (INCLUDES ITEMS 3, 4 AND 5)	1
3	<u>8067</u>	BUSHING, BRONZE SPINDLE	1
4	<u>7048</u>	BUSHING, BRONZE	1
5	<u>1015597</u>	FITTING, GREASE, 1/4 - 28	1
6	<u>102004001</u>	SPRING, TAPERED LEAF	1
7	<u>8745</u>	ASSEMBLY, ECCENTRIC	1
8	<u>706</u>	NUT, HEX, 3/8 - 16	1
9	<u>1011892</u>	ASSEMBLY, HUB (INCLUDES ITEMS 10 - 13)	2
10	<u>1011393</u>	PACKAGE, HUB BEARING	2
11	<u>1011304</u>	STUD, LUG, 1/2 - 20	4
12	<u>1013135</u>	SEAL, DOUBLE LIP	1
13	<u>1011887</u>	COVER, DUST	1
14	<u>8754</u>	NUT, NYLON LOCK, 3/8 - 16	4
15	<u>1016387</u>	SCREW, HEX HEAD CAP, 3/8 - 16 x 2-3/4	2
16	<u>1016384</u>	CLEVIS, UPPER DELTA	2
17	<u>101903101</u>	NUT, NYLON LOCK, 1/2 - 20	2
18	<u>1010028</u>	WASHER, FLAT, 1/2	2
19	<u>1010150</u>	BEARING, THRUST	2
20	<u>1016389</u>	WASHER, KINGPIN WAVE	2
21	<u>1010984</u>	NUT, LUG	8
22	<u>1010005</u>	WASHER, FLAT, 3/4	2
23	<u>7840</u>	NUT, HEX SLOTTED, 3/4 - 16	2
24	<u>7910</u>	PIN, COTTER, 5/32 x 1	2
25	<u>8755</u>	SCREW, HEX HEAD CAP, 3/8 - 16 x 3-3/8	2
26	<u>1016386</u>	KINGPIN	2
27	<u>1015583</u>	BUSHING, URETHANE	4
28	<u>1012303</u>	BUSHING, STEEL	2
29	<u>1014276</u>	PLATE, FRONT SPRING RETAINER	1
30	<u>1010177</u>	SCREW, HEX HEAD CAP, 3/8 - 16 x 2	4
31	<u>357</u>	WASHER, LOCK, 3/8	4
32	<u>706</u>	NUT, HEX, 3/8 - 16	4
33	1218	SCREW, HEX HEAD CAP, 5/16 - 18 x 1-1/4	16
34	<u>1241</u>	WASHER, FLAT, 5/16	32
35	<u>7473</u>	NUT, HEX, 5/16 - 18	16

6

G

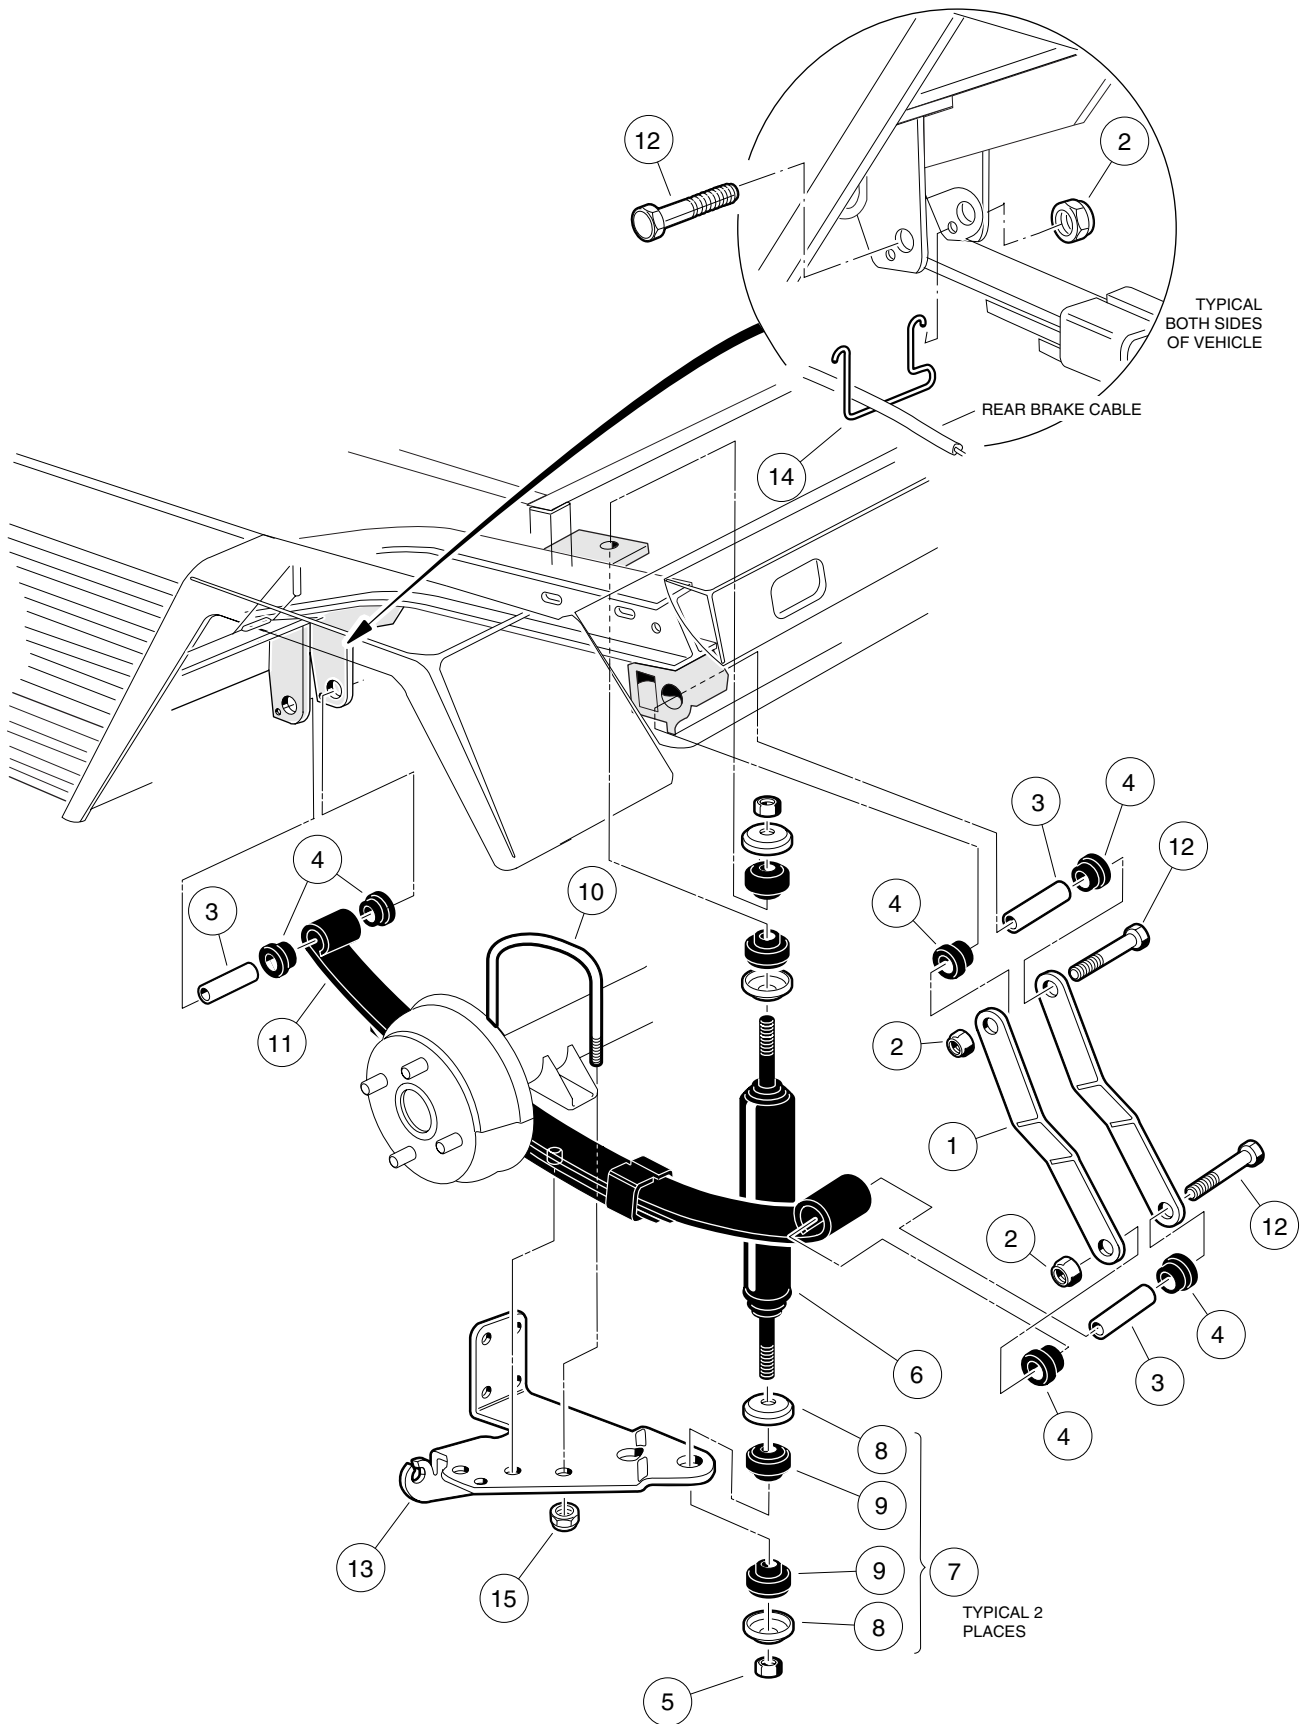


REAR SUSPENSION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102004201</u>	SHACKLE, REAR SPRING	4
2	<u>8754</u>	NUT, NYLON LOCK, 3/8 - 16	6
3	<u>1012303</u>	BUSHING, STEEL	6
4	<u>1015583</u>	BUSHING, URETHANE	12
5	<u>1010145</u>	NUT, UNF HEX, 3/8 - 24	4
6	<u>102006601</u>	SHOCK ABSORBER, REAR	2
7	<u>1011415</u>	KIT, SHOCK ABSORBER CUSHION (INCLUDES ITEMS 8 AND 9)	4
8	N/A	RETAINER, SHOCK ABSORBER CUSHION	8
9	N/A	CUSHION, SHOCK ABSORBER	8
10	<u>1014902</u>	U-BOLT	2
11	<u>101975201</u>	SPRING, REAR LEAF	2
12	<u>8755</u>	SCREW, HEX HEAD CAP, 3/8 - 16 x 3-3/8	6
13	<u>101926501</u>	PAD, SPRING, DRIVER SIDE	1
13	<u>101929401</u>	PAD, SPRING, PASSENGER SIDE	1
14	<u>1013207</u>	HANGER, BRAKE CABLE	2
15	<u>1014555</u>	NUT, NYLON LOCK, 7/16 - 24	2

6

G

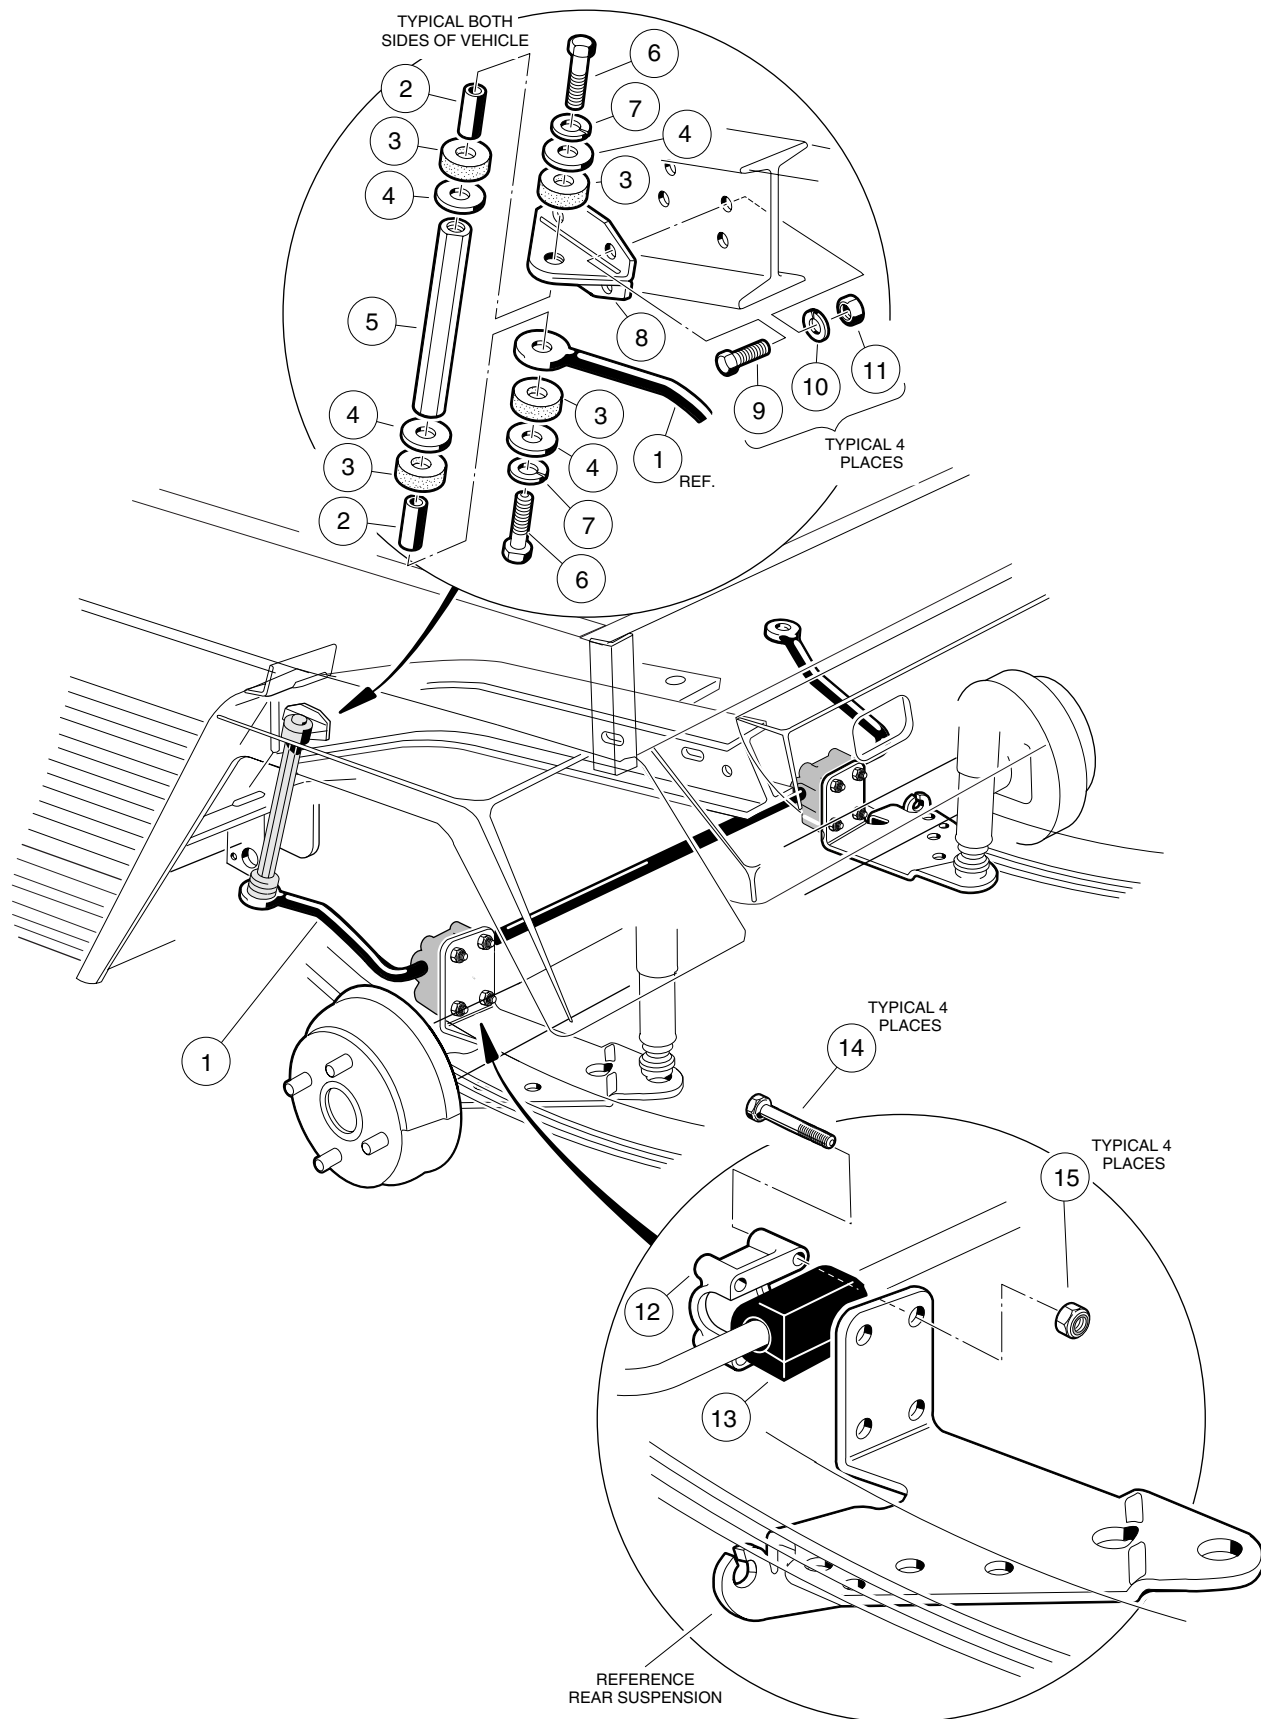

STABILIZER BAR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1015760</u>	BAR, STABILIZER, 3/4 DIAMETER	1
2	<u>1015457</u>	SPACER	4
3	<u>1015453</u>	MOUNT, COMPRESSION	8
4	<u>808</u>	WASHER, FLAT, 3/8	8
5	<u>102004901</u>	LINK, STABILIZER BAR	2
6	<u>8861</u>	SCREW, HEX HEAD CAP, 3/8 - 16 x 1-3/4	4
7	<u>357</u>	WASHER, LOCK, 3/8	4
8	<u>1016813</u>	BRACKET, STABILIZER BAR MOUNTING	2
9	<u>7173</u>	SCREW, HEX HEAD CAP, 5/16 - 18 x 3/4	8
10	<u>7174</u>	WASHER, LOCK, 5/16	8
11	<u>1242</u>	NUT, HEX, 5/16 - 18	8
12	<u>1015614</u>	SUPPORT, STABILIZER BAR BUSHING	2
13	<u>1015613</u>	BUSHING, STABILIZER BAR	2
14	<u>7311</u>	SCREW, HEX HEAD CAP, 1/4 - 20 x 2	8
15	<u>8233</u>	NUT, NYLON LOCK, 1/4 - 20	8

6


G



ELECTRICAL SYSTEM

7

G

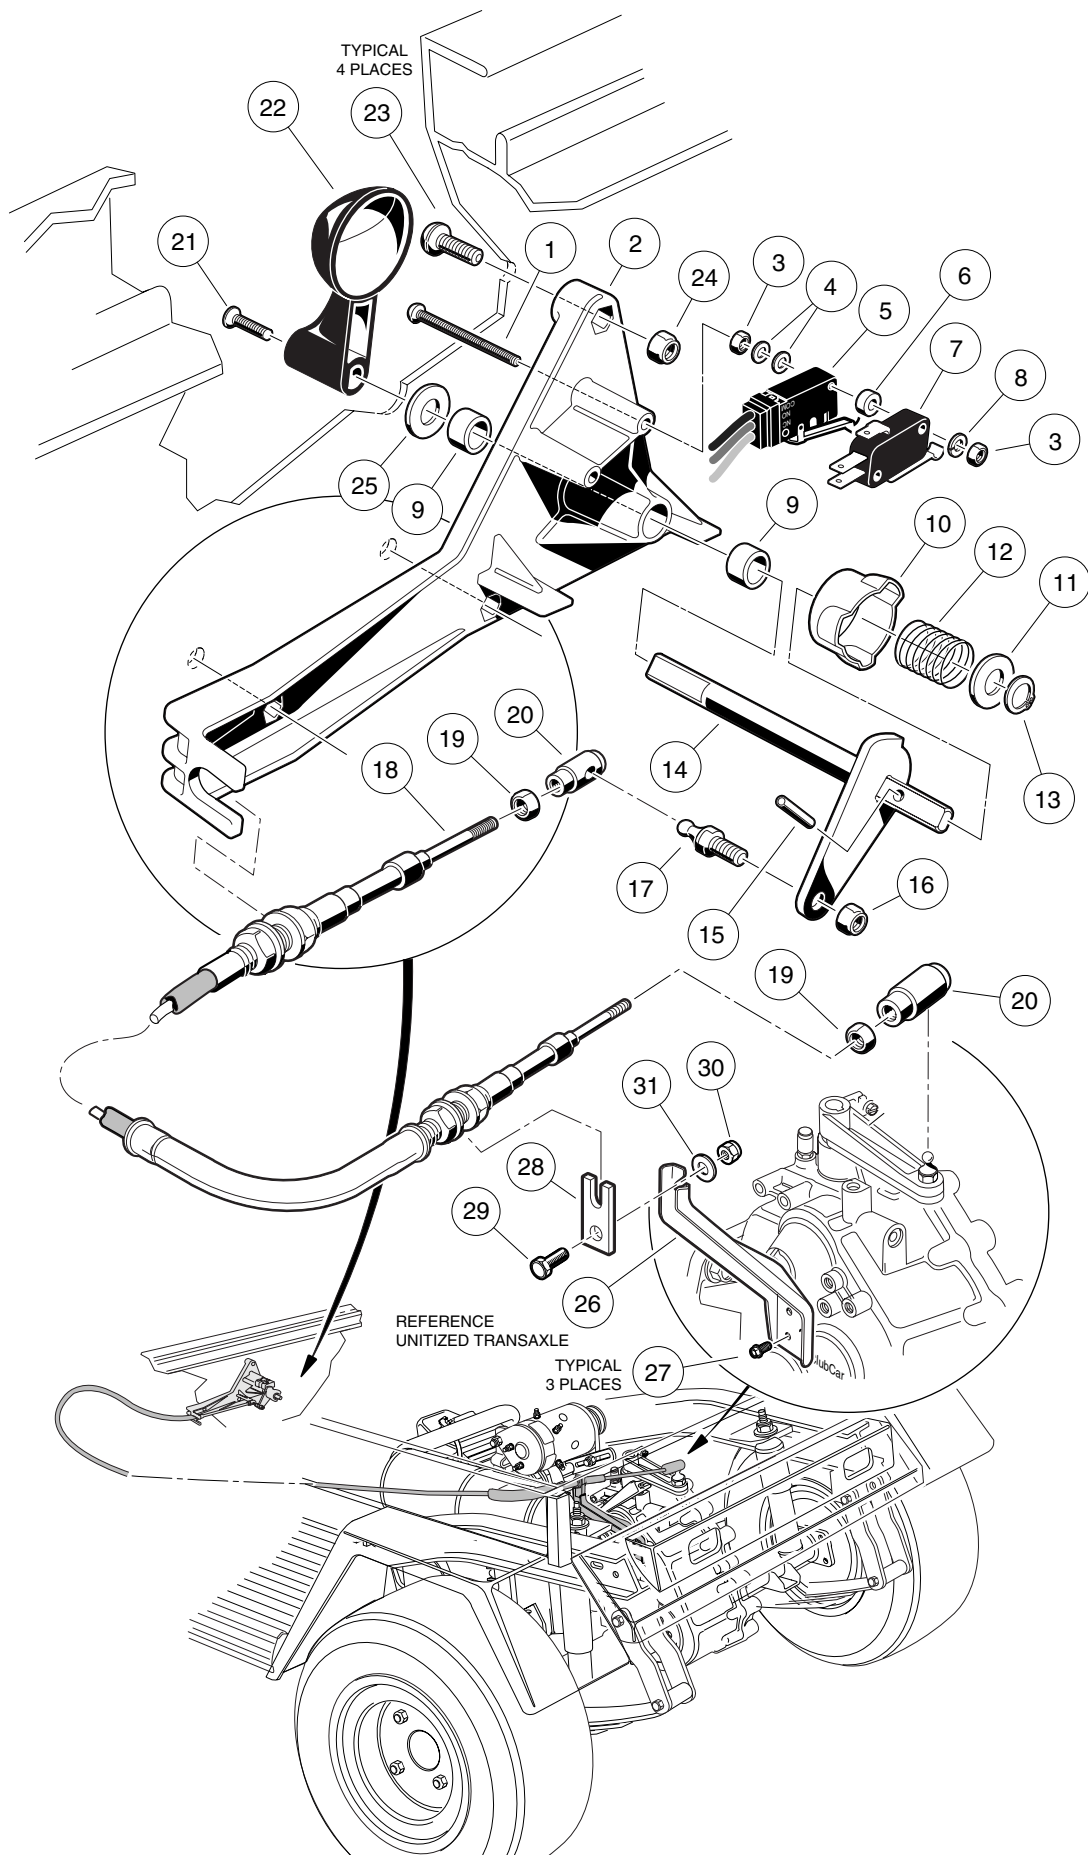

FORWARD/REVERSE SHIFTER ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	1016947	ASSEMBLY, FORWARD/REVERSE SHIFTER (INCLUDES ITEMS 1 - 17)	1
1	<u>1012594</u>	SCREW, MACHINE, 4 - 40 x 1-1/2	2
2	<u>1016342</u>	BASE, FORWARD/REVERSE SHIFTER	1
3	<u>8057</u>	NUT, HEX HEAD, 4 - 40	4
4	1012431	WASHER, FLAT, NO. 4	4
5	<u>101979101</u>	SWITCH, LIMIT	1
6	<u>1014727</u>	WASHER, NYLON FLAT, NO. 4	2
7	<u>1014807</u>	SWITCH, LIMIT	1
8	<u>8058</u>	WASHER, LOCK, NO. 4	2
9	<u>1014145</u>	BUSHING, BRONZE	2
10	1014089	KIT, NEUTRAL LOCK-OUT CAM (INCLUDES ITEM 11)	1
11	<u>1014065</u>	WASHER, FLAT	1
12	<u>1013590</u>	SPRING, FORWARD/REVERSE CAM	1
13	<u>1013589</u>	RING, RETAINING	1
14	1013587	WELDMENT, FORWARD/REVERSE BELL CRANK	1
15	<u>1013591</u>	PIN, ROLL, 1/8	1
16	<u>8717</u>	NUT, NYLON LOCK, 1/4 - 28	1
17	<u>1010954</u>	STUD, BALL, 1/4 - 28 x 1/4	1
18	<u>1015409</u>	CABLE, TRANSMISSION (INCLUDES ITEMS 19 AND 20)	1
19	<u>7893</u>	NUT, HEX, 10 - 32	2
20	<u>1012333</u>	JOINT, BALL	2
21	<u>1013198</u>	SCREW, PHILLIPS OVAL COUNTERSUNK MACHINE, 8 - 32 x 5/8	1
22	<u>1012987</u>	HANDLE, FORWARD AND REVERSE SWITCH	1
23	<u>8248</u>	SCREW, PHILLIPS TRUSS HEAD, 1/4 - 20 x 3/4	4
24	8233	NUT, NYLON LOCK, 1/4 - 20	5
25	<u>1016201</u>	WASHER, WAVE, 3/8	1
26	101922601	BRACKET, TRANSMISSION CABLE SUPPORT	1
27	<u>1012285</u>	SCREW, THREAD ROLLING, 1/4 - 20 x 5/8	3
28	<u>102004801</u>	EXTENSION, SHIFTER BRACKET	1
29	320	SCREW, HEX HEAD, 3/8-16 x 1	1
30	<u>8754</u>	LOCKNUT, NYLON, 3/8-16	1
31	<u>808</u>	WASHER, FLAT, 3/8	1

7

G


7

G

ENGINE

8

G

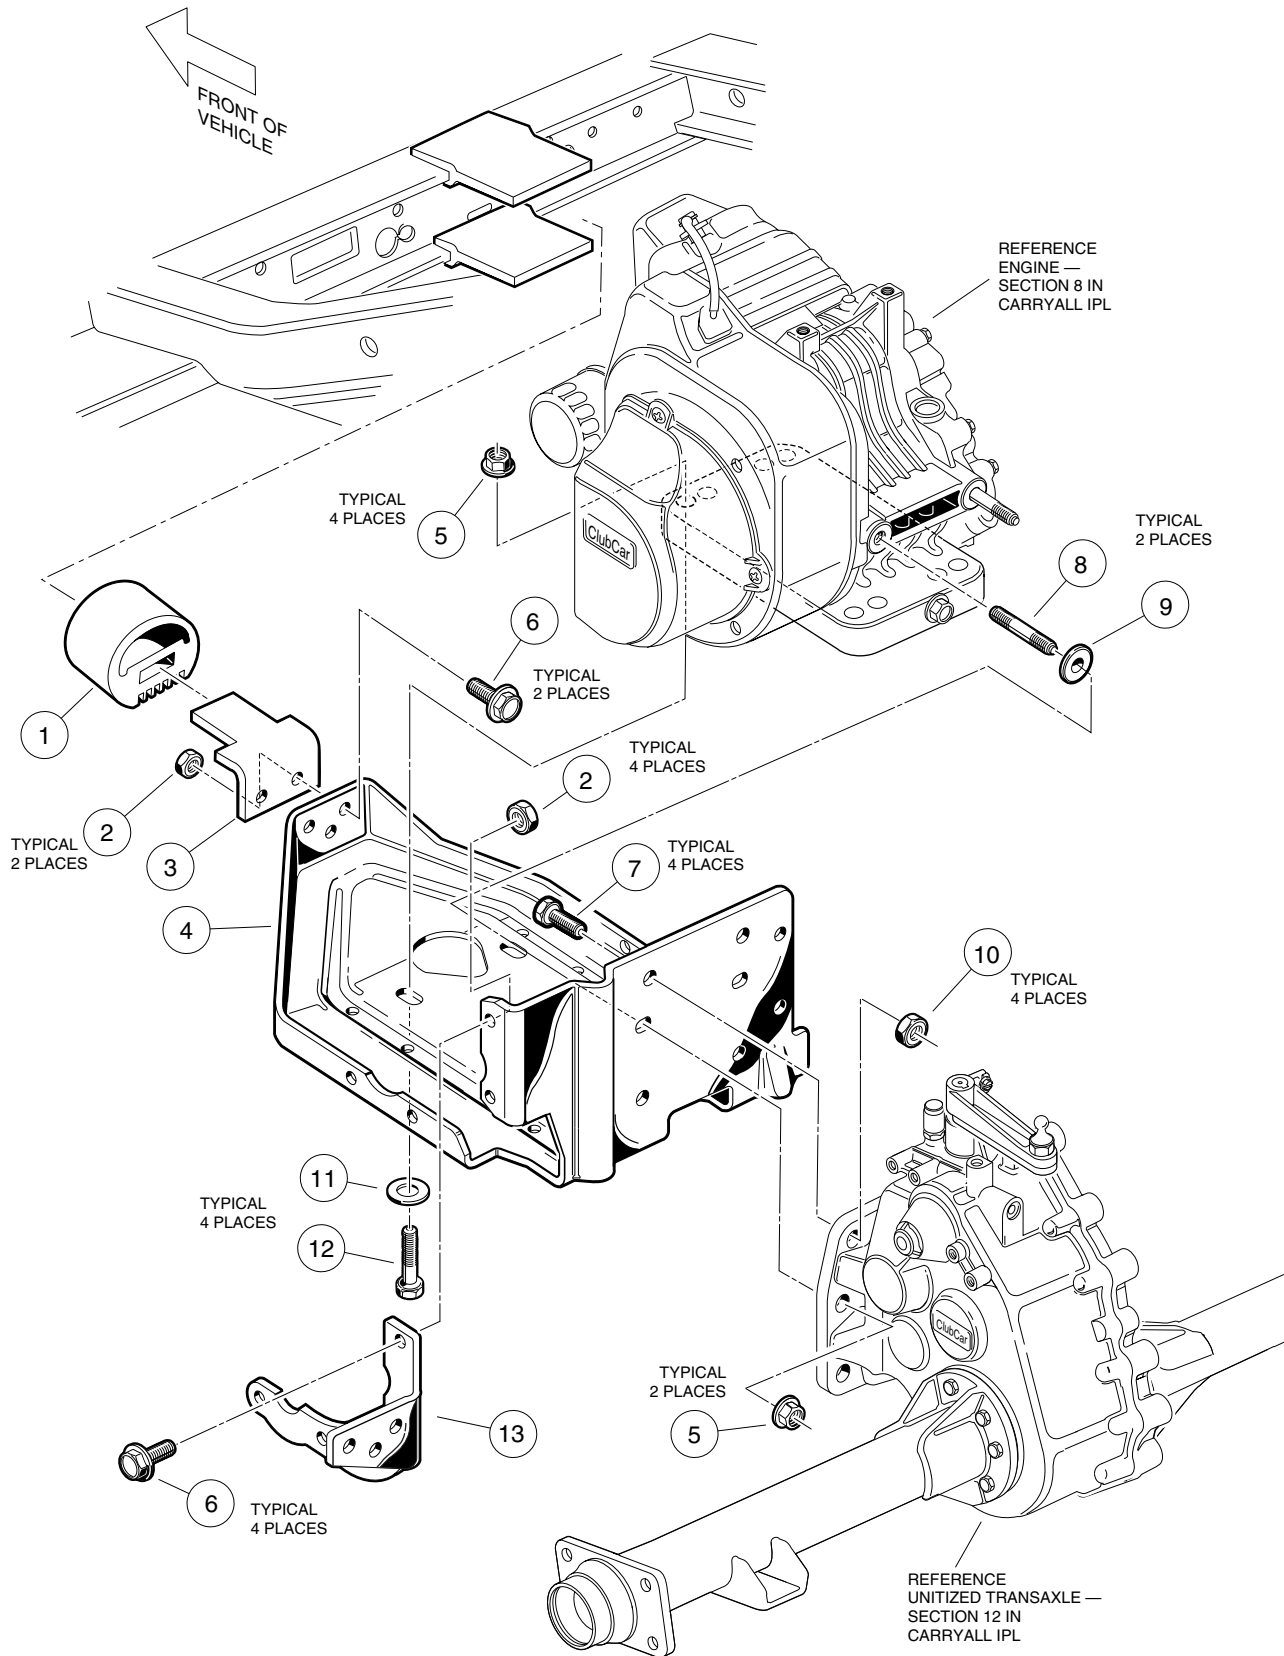

ENGINE MOUNTING

8

G

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012164	SNUBBER	1
2	<u>1013924</u>	NUT, HEX LOCK, 5/16 - 24, UNF	6
3	<u>101834601</u>	BRACKET, SNUBBER	1
4	<u>101827101</u>	PLATE, MOUNTING	1
5	101833001	NUT, FLANGE, M8 x 1.25	6
6	<u>101884801</u>	SCREW, HEX WASHER, 5/16 -24 x 7/8	6
7	<u>101833301</u>	SCREW, HEX HEAD CAP, M10 x 1.25 x 30MM	4
8	<u>101833201</u>	STUD, M8 x 1.25	2
9	<u>1011697</u>	WASHER, FLAT, 5/16	2
10	<u>101832901</u>	NUT, FLANGE, M10 x 1.25	4
11	1012571	WASHER, HEAVY FLAT, 5/16	4
12	<u>101855901</u>	SCREW, HEX HEAD CAP, M8 x 1.25 x 43MM	4
13	<u>101832701</u>	STIFFENER, FLYWHEEL SIDE	1

8

G

FE 290 ENGINE