



2022 Café Express Illustrated Parts List



Gasoline Vehicle

Manual Number 86753090107
Edition Code _A

USING THE ILLUSTRATED PARTS LIST

WARNING

- **This manual is to be used only for identification and ordering of service parts. Be sure to read and use the maintenance and service manual before attempting any vehicle repairs.**

The manual is divided into sections. Note that there are two flags on the outside edge of each page. The first flag contains the section number of which that page is a part of. The other flag contains the letter G, signifying that the page pertains to gasoline vehicles only.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section numbers, and under them, the individual page titles and numbers to be found in that section. The index can be used to find specific parts and assemblies. The index is divided into numerical and alphabetical listings with the page numbers in italic text.

There is a two-page spread for each individual page title in the Table of Contents. On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used.

Note that a part description may be indented. This indentation corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to *level 2* is a component of the *level 1* part (assembly) that it is listed under. A *level 3* part is a component of the *level 2* part that it is listed under, and a *level 4* part is a component of the *level 3* part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part is *the quantity used per next higher level assembly of which it is a component*. A part that is not indented is a *level 1* part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.



P. O. Box 204658
Augusta, Georgia 30917-4658 USA
Telephone 706-863-3000
Service Parts Fax 706-855-7413
www.clubcar.com

HOW TO ORDER PARTS

Replacement parts and accessories can be obtained from our network of authorized dealers and distributors. You can obtain the name and phone number of your closest authorized Club Car dealer or distributor by visiting our web site at www.clubcardealer.com, by calling our toll-free Service Parts and Technical Assistance hotline at (800) 872-2246 or (706) 863-3000, extension 3887, or by scanning this Quick Response (QR) code to be taken to the Club Car dealer locator. **Refer to Figure 1.** Download a QR code reader such as RedLaser or Barcode Scanner to your cell phone or tablet.



Figure 1 Dealer Locator QR Code

CUSTOMER SATISFACTION SURVEY

Let your voice be heard!

Please take time to participate in the Technical Publications satisfaction survey. Obtaining feedback from our customers is important to the department's continuous improvement process. The online survey takes less than five minutes and responses will help the department to examine current performance as well as identify areas for future improvement.

Our top priority is to provide timely, accurate, and user friendly manuals.

The online satisfaction survey can be found at: <http://bit.ly/1w9uFMh>



Figure 2 Survey QR Code

NOTE: *This illustrated parts list represents the most current information at the time of publication. Club Car, LLC is continually working to further improve its vehicles and other products. These improvements may affect the parts used to service the vehicle. Any modification and/or significant change in specifications will be forwarded to all Club Car and Carryall distributors/dealers and will, when applicable, appear in future editions of this illustrated parts list.*

Club Car, LLC reserves the right to change specifications and designs at any time without notice and without the obligation of making changes to units previously sold.

Copyright © 2021 Club Car, LLC.

Club Car is a registered trademark of Club Car, LLC.

This manual effective July 1, 2021.

CONTENTS

SECTION 1 – BODY AND TRIM

Brush Guards	1-3
Headlight Guard	1-5
Fender Guard	1-7
Front License Plate Holder	1-9
Front Body	1-11
Body Touch-Up Paint	1-13
Front Bumper, Grille, and Fenders	1-15
Headlight Bezels	1-17
Dash, Glovebox Door, and Floormat	1-19
Front Frame, Standard	1-21
Seat Bottom	1-23
Seat Back	1-25
Seat Frame and Hip-Restraint	1-27
Windshield, Non-Hinged	1-29
Mirrors	1-31
Inner Rear Fenders	1-33
Rear Fenders and Tail Skirt	1-35
Rear License Plate Holder	1-37
Latch and Prop Rod Track	1-39
Bed Latch, Hinge, and Prop Rod	1-41
Electric Bed Lift – Gasoline Vehicles	1-43
Canopy, Frame, and Struts	1-45
Caf� Express Lower Cabinet	1-47
Caf� Express Upper Cabinet	1-49

SECTION 2 – WHEELS AND TIRES

Wheels and Tires	2-3
Wheel Covers	2-5

SECTION 3 – DECALS

Decals – Caf� Express	3-3
Decals – Caf� Express, Continued	3-5
Decals – Caf� Express, Continued	3-7
Badging Decals – Caf� Express	3-9

SECTION 4 – LIGHTS, CONTROLS, AND INDICATORS

Headlights	4-3
------------------	-----

CONTENTS

Horn, Turn Signals, and Taillights – Electric and Gasoline Vehicles	4-5
Horn and Tail Light Kit – Electric and Gasoline Vehicles	4-7
Instrument Panel – Gasoline Vehicle	4-9
Keyswitch, Pedal-Start – Gasoline Vehicle	4-11
Voltage Limiter – Gasoline Vehicle	4-13
Reflectors	4-15

SECTION 5 – BRAKES, PEDALS, AND CABLE ASSEMBLIES

Brake Pedal Assembly – Vehicles with 2-Wheel Brakes and 4-Wheel Brakes	5-3
Accelerator Pedal and Rod Assembly – Gasoline Vehicle	5-5
Pedal Close-Out Kit	5-7
Front Brake Assembly – Vehicles with 4-Wheel Brakes	5-9
Front Brake Cables and Equalizer – Gasoline Vehicle with 4-Wheel Brakes	5-11
Rear Brake Cables and Equalizer – Gasoline Vehicle with 4-Wheel Brakes	5-13
Rear Brakes, Manually-Adjusted – Gas Vehicles with 4-Wheel Brakes	5-15

SECTION 6 – STEERING, FRONT AND REAR SUSPENSION

Steering Gear Assembly	6-3
Steering Column	6-5
Steering Wheel	6-7
Steering Wheel with Clip	6-9
Front Suspension, Upper, HD	6-11
Front Suspension, Lower, HD, 3 Leaf-1 Plate	6-13
Front Suspension, Upper, STD	6-15
Front Suspension, Lower, HD, 2 Leaf-2 Plates	6-17
Steering Stop	6-19
Front Wheel Hubs	6-21
Rear Suspension Components, Standard	6-23

SECTION 7 – ELECTRICAL SYSTEM – GASOLINE EFI

Wiring, Fuses, and Diodes, Key and Pedal Start – EFI	7-3
Starter/Generator, Key and Pedal Start – EFI	7-5
Starter/Generator Mounting – ECH440	7-7
Operation and Maintenance Switch	7-9
Electrical Component Box, Pedal-Start	7-11
Forward/Reverse Shifter Switches, Pedal-Start – EFI	7-13
Battery – Gasoline Utility Vehicles	7-15
Top-Post Battery – Gasoline Utility Vehicles	7-17
USB and Powerpoint Receptacle	7-19

CONTENTS

SECTION 8 – ENGINE (KOHLEK ECH440)

Tune-Up Parts	8-3
Engine and Engine Mounting	8-5
Engine Pan and Snubber Mounting	8-7
Blower Housing and Heat Shield – ECH440	8-9
Ignition Components and Flywheel – ECH440	8-11
Cylinder Head and Valve – ECH440	8-13
Crankcase and Piston – ECH440	8-15
Oil Sensor and Lubrication – ECH440	8-17
Crankshaft – ECH440	8-19

SECTION 9 – FUEL SYSTEM – EFI

Fuel Tank with Pump, Side Fill – EFI	9-3
Carbon Canister – EFI	9-5
Throttle Body and Mounting	9-7
Governor Bracket and Cover – EFI	9-9
Governor and Accelerator Cables – EFI	9-11
Air Intake Elbow – EFI	9-13
Air Filter System and Intake Hose – EFI	9-15

SECTION 10 – EXHAUST SYSTEM – ECH440

Exhaust System	10-3
----------------------	------

SECTION 11 – DRIVE BELT AND CLUTCHES – EFI GASOLINE VEHICLES

Drive Belts – EFI	11-3
Drive Clutch – Key-Start Vehicles	11-5
Drive Clutch – Pedal-Start Vehicles	11-7
Driven Clutch – Key Start and Pedal Start	11-9

SECTION 12 – TRANSAXLE (FUJI ED65)

Forward/Reverse Shifter Assembly	12-3
Shifter Cable – CA500 & CA550	12-5
Shift Lever and Bracket – Pedal-Start Engines	12-7
Shift Lever and Bracket – Key-Start Engines	12-9
Governor Arm and Brackets – Utility Vehicles	12-11
Transaxle (ED65), Limited Slip – Page 1 of 3	12-13
Transaxle (ED65), Open – Page 1 of 3	12-15
Transaxle (ED65), Limited Slip and Open – Page 2 of 3	12-17

CONTENTS

Transaxle (ED65), Limited Slip – Page 3 of 3	12-19
Transaxle (ED65), Open – Page 3 of 3	12-21
Hub, Rear	12-23
Differential Guard, ED65 – Gasoline Vehicle	12-25

SECTION 13 – MAINTENANCE AND SERVICE TOOLS

Maintenance and Service Tools	13-3
Maintenance and Service Tools, Continued	13-5
Maintenance and Service Tools, Continued	13-7

SECTION i – INDEX




BODY AND TRIM

1

G

1

G

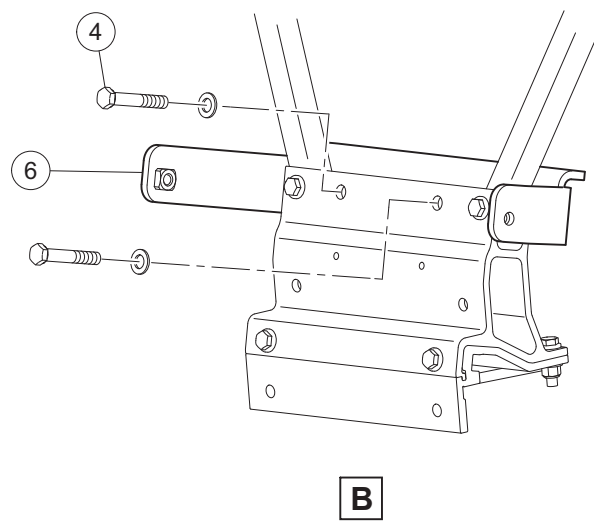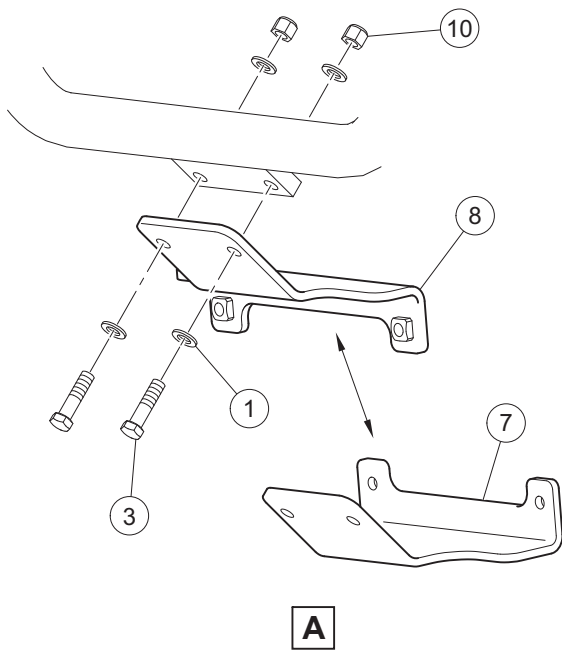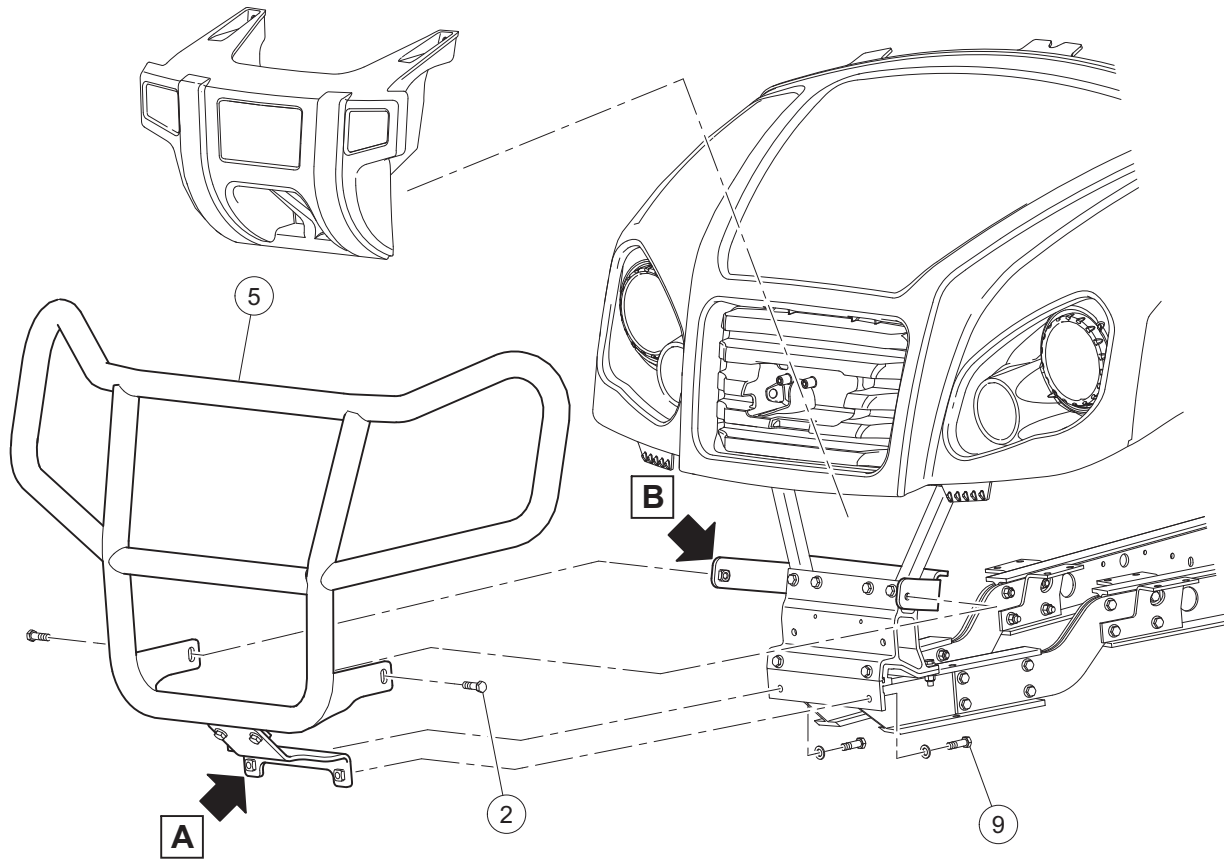


G-140199-000006

BRUSH GUARDS

ITEM	PART NO.	DESCRIPTION	QTY	1	G
		1 2 3 4			
1	<u>1011990</u>	Washer, 3/8 Flat	8		
2	<u>105197401</u>	Bolt, Flg, 3/8-16 X 1" Loc	2		
3	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	2		
4	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	2		
5	47600627001	Weldment, Hd Bumper, Hb, Res	1		
6	47600628001	Asm,bkt,back Spt,bg,common	1		
7	47600629001	Asm,bkt,btm Spt,bg,non-lifted	1		
8	47600630001	Asm,bkt,btm Spt,bg,lifted	1		
9	705	Screw, Cap-hex Hd 3/8-16x1.25	2		
10	<u>8754</u>	Locknut, 3/8-16 Hex	2		
Note: For complete brush guard kits order kit part number 47605991002 for non-lifted vehicles or kit part number 47605991004 for lifted vehicles.					

1

G

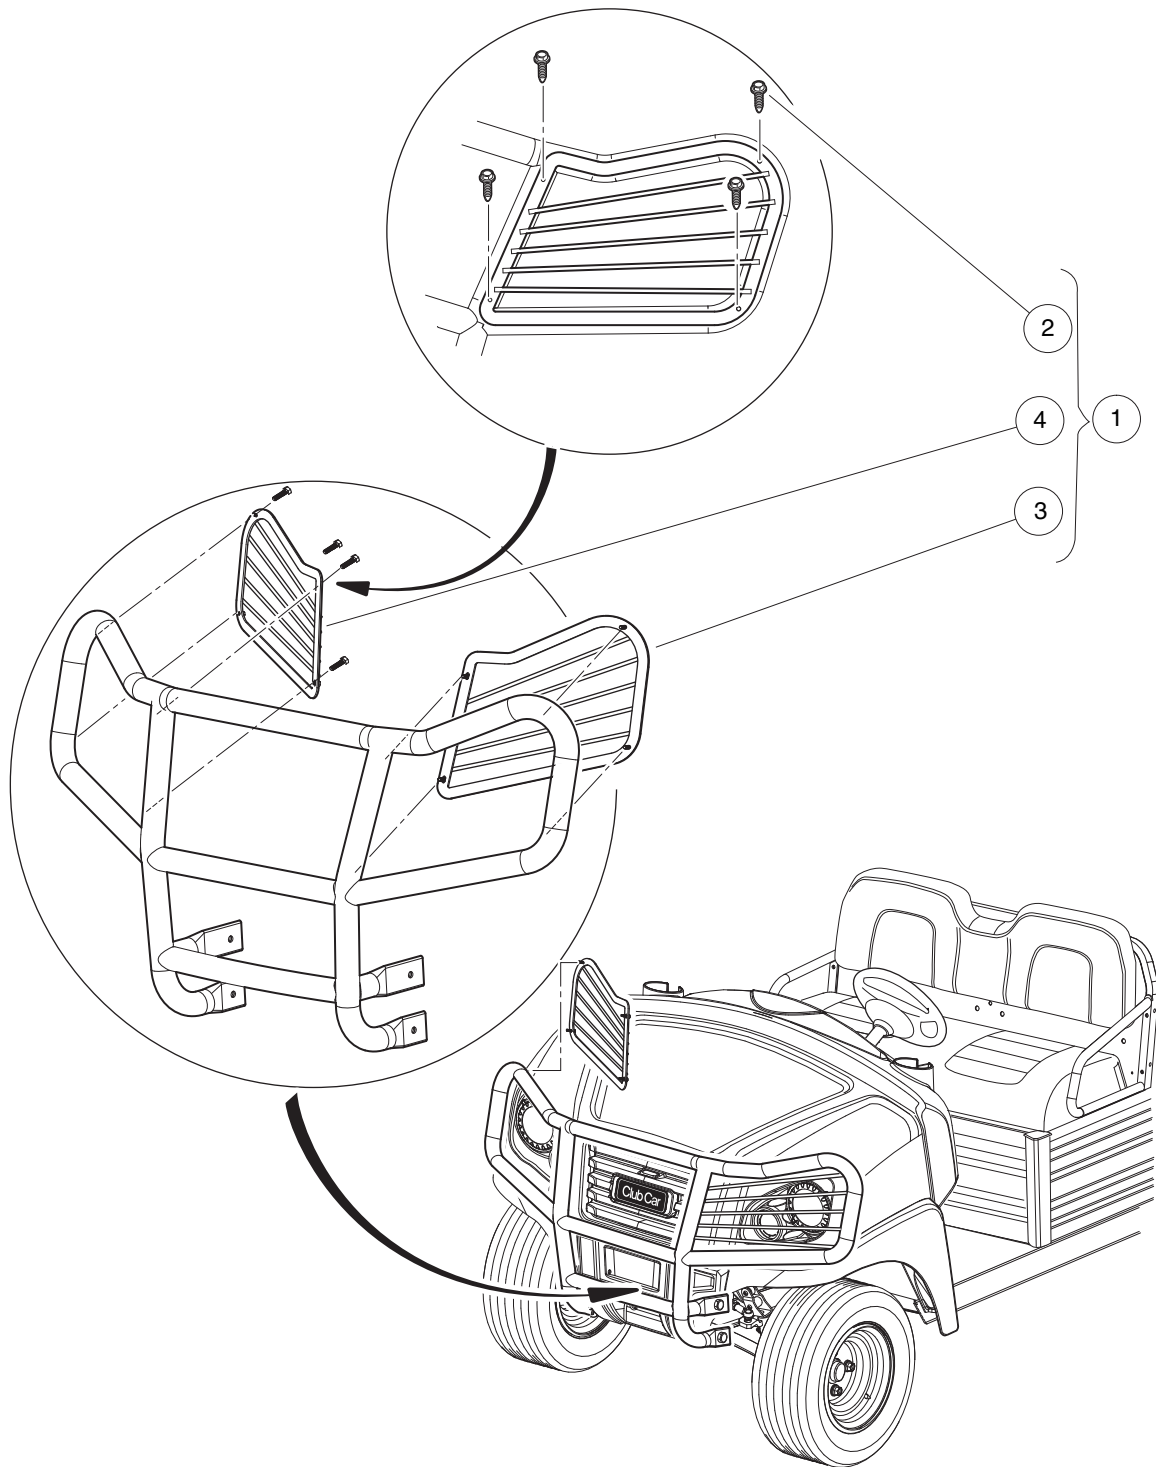


001300-017

HEADLIGHT GUARD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	105156301	Kit, Head Light Guard, Utl Res (includes items 2 through 4)	1
2	102296819	Screw-M6 x 19	8
3	105156701	Guard, Headlight, UTL,LH	1
4	105156702	Guard, Head Light, Utl, Rh	1

1

G

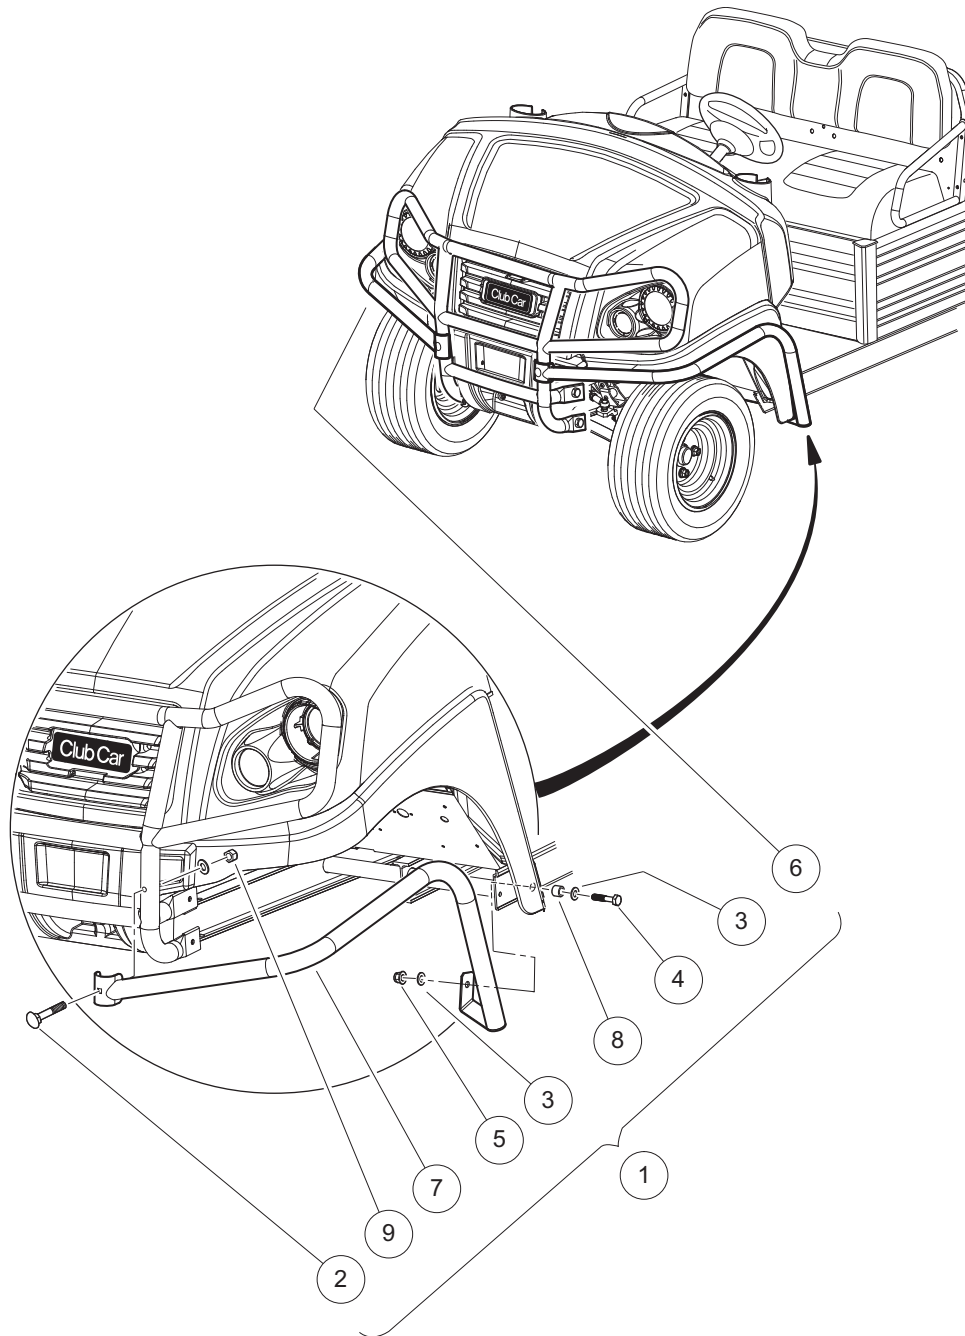


001300-002

FENDER GUARD

ITEM	PART NO.	DESCRIPTION	QTY	1	G
		1 2 3 4			
1	<u>105124001</u>	Kit, Fender Guard, Hb Res (includes items 2 through 9)	1		
2	<u>101242802</u>	Bolt, 3/8-16 X 2.25 Rd Hd Sq Bk	2		
3	<u>102323501</u>	Washer, Flat, 3/8, Blk Fin	6		
4	<u>102621601</u>	Bolt, M10 X 1.50 X 45 Black	2		
5	<u>102670701</u>	Nut, Flange, M10 X 1.5 Nylon	2		
6	<u>105074501</u>	Weldment, Fender Guard, Hb, Rh	1		
7	<u>105074502</u>	Weldment, Fender Guard, Hb, Lh	1		
8	<u>105094001</u>	Spacer, Canopy Support, Dash	2		
9	<u>8754</u>	Locknut, 3/8-16 Hex	2		

1

G

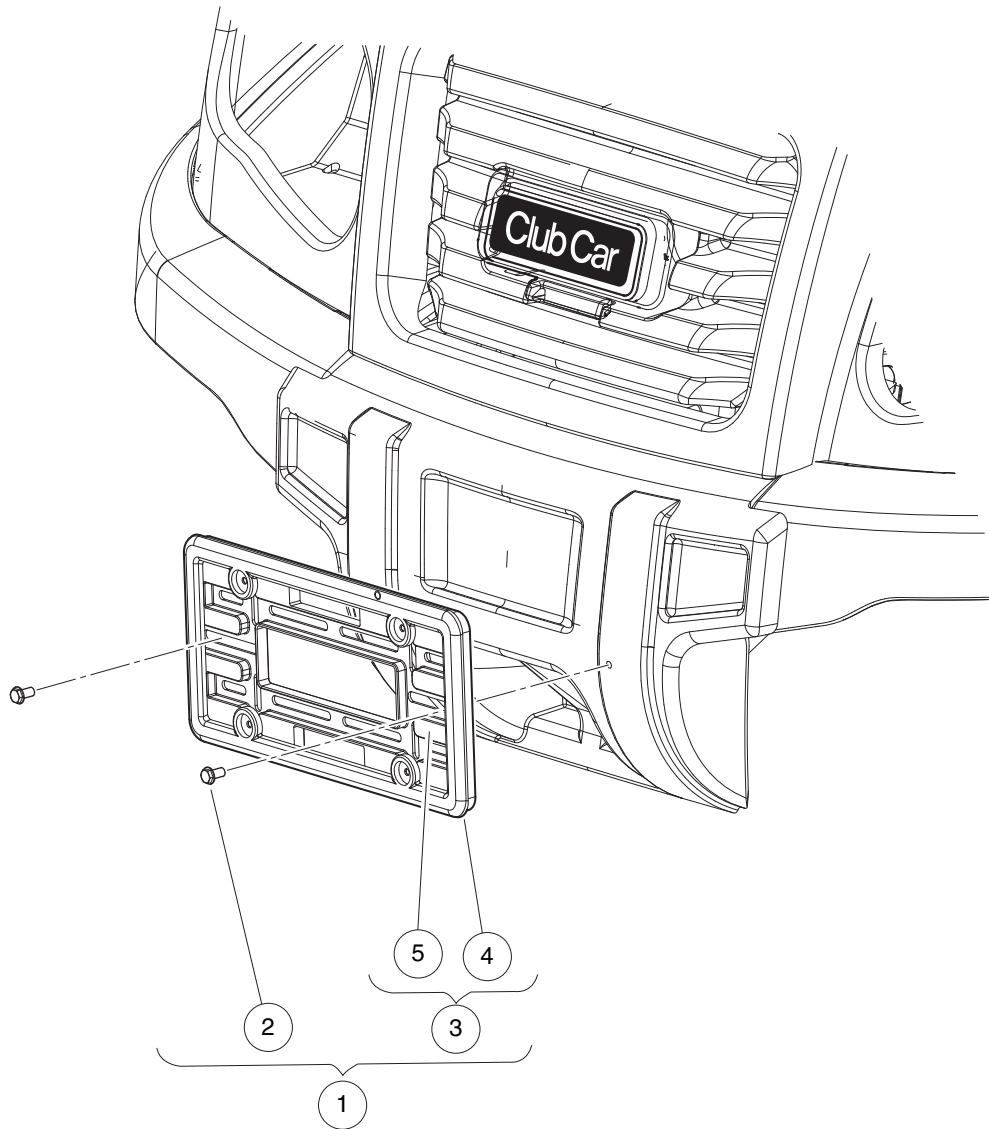


001155-001

FRONT LICENSE PLATE HOLDER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	105124901	Kit, Front, License Pl, Lsv (includes items 2 and 3)	1
2	101856101	Screw, 1/4-15 X .50 Hi-lo Hex	2
3	102311501	Front License Plate Assembly (includes items 4 and 5)	1
4	N/A	Frame, License Plate	1
5	N/A	Mount, License Plate	1

1

G

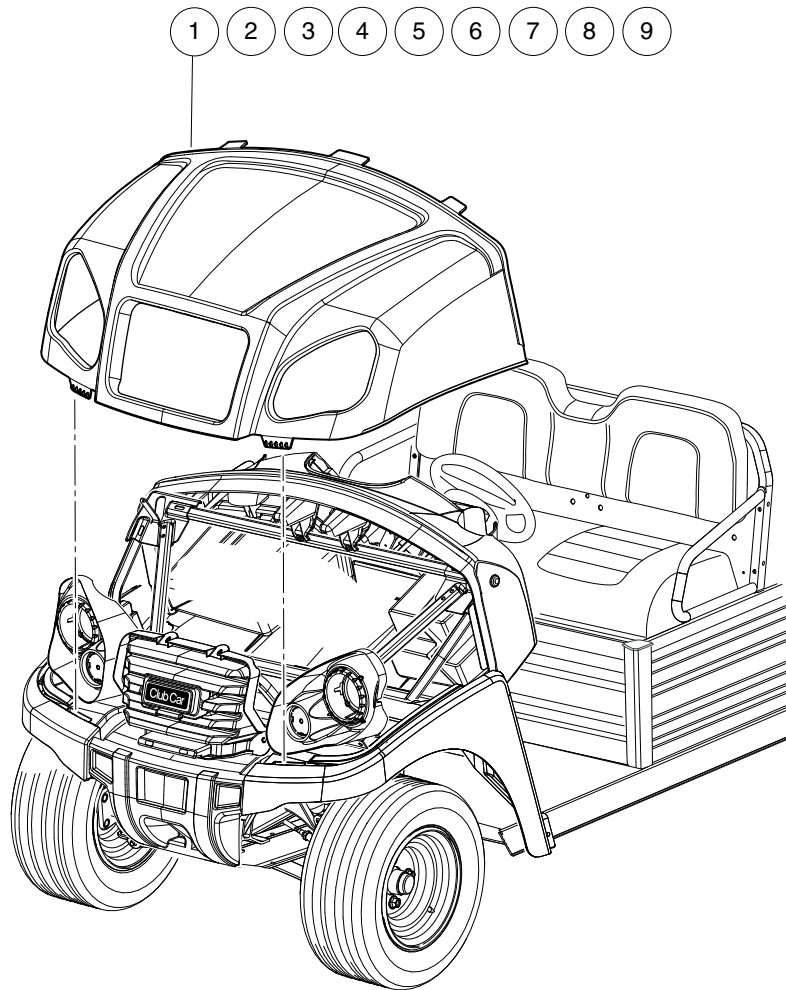

001300-003


FRONT BODY

ITEM	PART NO.	DESCRIPTION	QTY	1	G
		1 2 3 4			
1	<u>105034321</u>	Cowl, Ca, Serv, Dk Green	1		
2	<u>105034322</u>	Cowl, Ca, Serv, Dk Gray	1		
3	<u>105034323</u>	Cowl, Ca, Serv, White	1		
4	<u>105034324</u>	Cowl, Ca, Serv, Bright Blue	1		
5	<u>105034325</u>	Cowl, Ca, Serv, Titn Silver	1		
6	<u>105034326</u>	Cowl, Ca, Serv, Beige	1		
7	<u>105034327</u>	Cowl, Ca, Serv, Red	1		
8	<u>105034328</u>	Cowl, Ca, Serv, Black	1		
9	<u>105034329</u>	Cowl, Ca, Serv, Classic Blue	1		

1

G


- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10

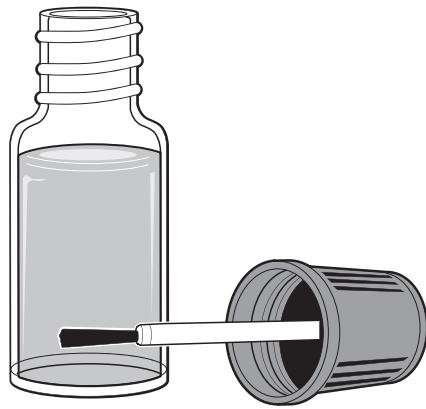

001300-020

BODY TOUCH-UP PAINT


ITEM	PART NO.	DESCRIPTION	QTY	1	G
		1 2 3 4			
1	<u>105117701</u>	Paint, Touch-up, White	1		
2	<u>105117702</u>	Paint, Touch-up, Classic Blue	1		
3	<u>105117703</u>	Paint, Touch-up, Dark Green	1		
4	<u>105117704</u>	Paint, Touch-up, Red	1		
5	<u>105117705</u>	Paint, Touch-up, Dark Gray	1		
6	<u>105117706</u>	Paint, Touch-up, Black	1		
7	<u>105117707</u>	Paint, Touch-up, Tan	1		
8	<u>105117708</u>	Paint, Touch-up, Bright Blue	1		
9	<u>105117709</u>	Paint, Touch-up, Titn Silver	1		
10	<u>105117710</u>	Paint, Touch-up, Light Gray	1		

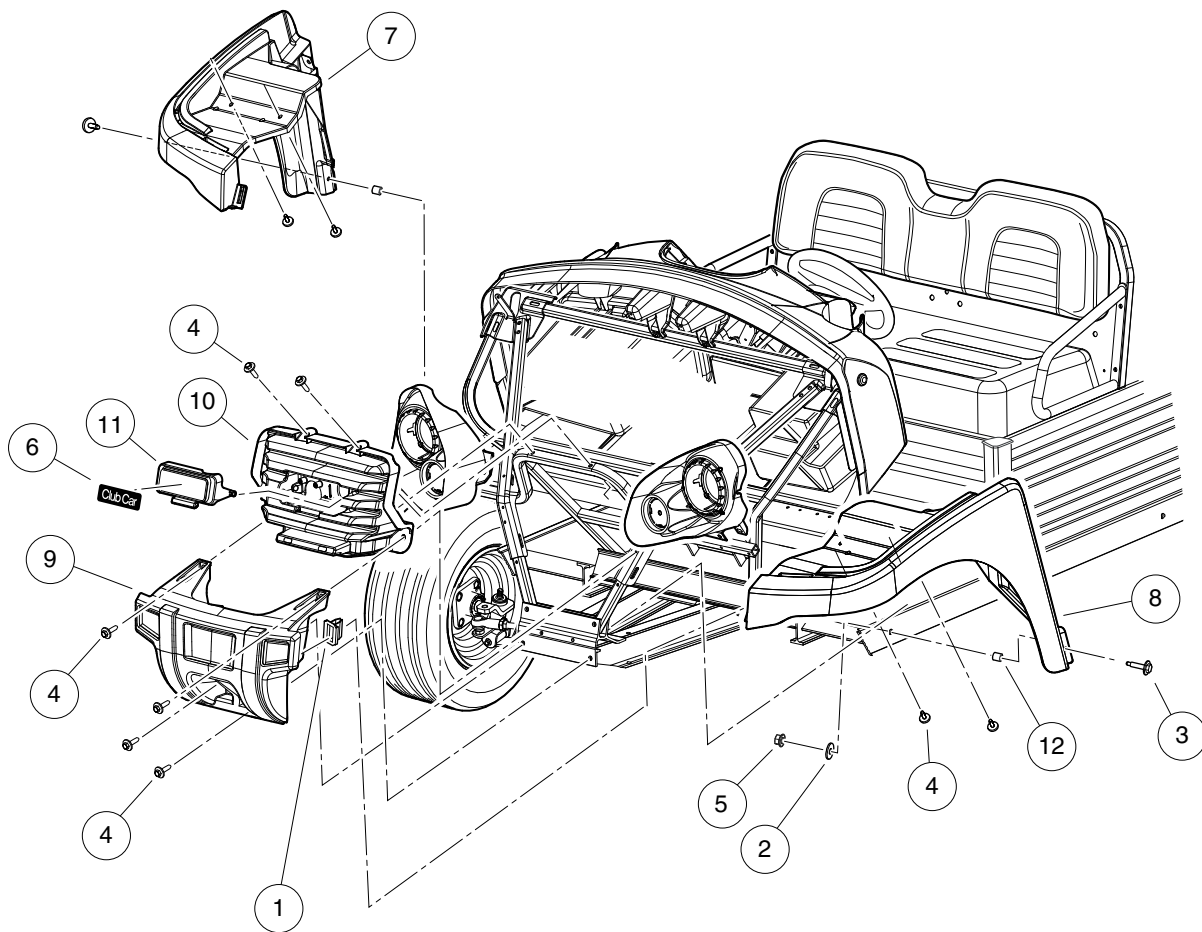

001300-004

FRONT BUMPER, GRILLE, AND FENDERS

ITEM	PART NO.	DESCRIPTION	QTY	1	G
		1 2 3 4			
1	<u>102292701</u>	Clip-body-trim	2		
2	<u>102296301</u>	Washer, M6x18x1.6 Flat	2		
3	<u>102296530</u>	Screw - M6 X 1.0 X 30 Sems	6		
4	<u>102297125</u>	Screw, M6-1.0x25.4, Thread-Forming, SEMS	8		
5	<u>102541501</u>	Nut-m6x1.0 Fl Mtl Lock,blk	2		
6	<u>102883601</u>	Decal, Nameplate, CCI, Front	1		
7	<u>105034401</u>	Fender, Front, Rh, Ca	1		
8	<u>105034501</u>	Fender, Front, Lh, Ca	1		
9	<u>105034601</u>	Bumper, Front, Plastic, Ca	1		
10	<u>105034701</u>	Grille, Ca	1		
11	<u>105034801</u>	Door, Charger Port, Ca	1		
12	<u>105036701</u>	Spacer, Frt Fender, Ca	2		

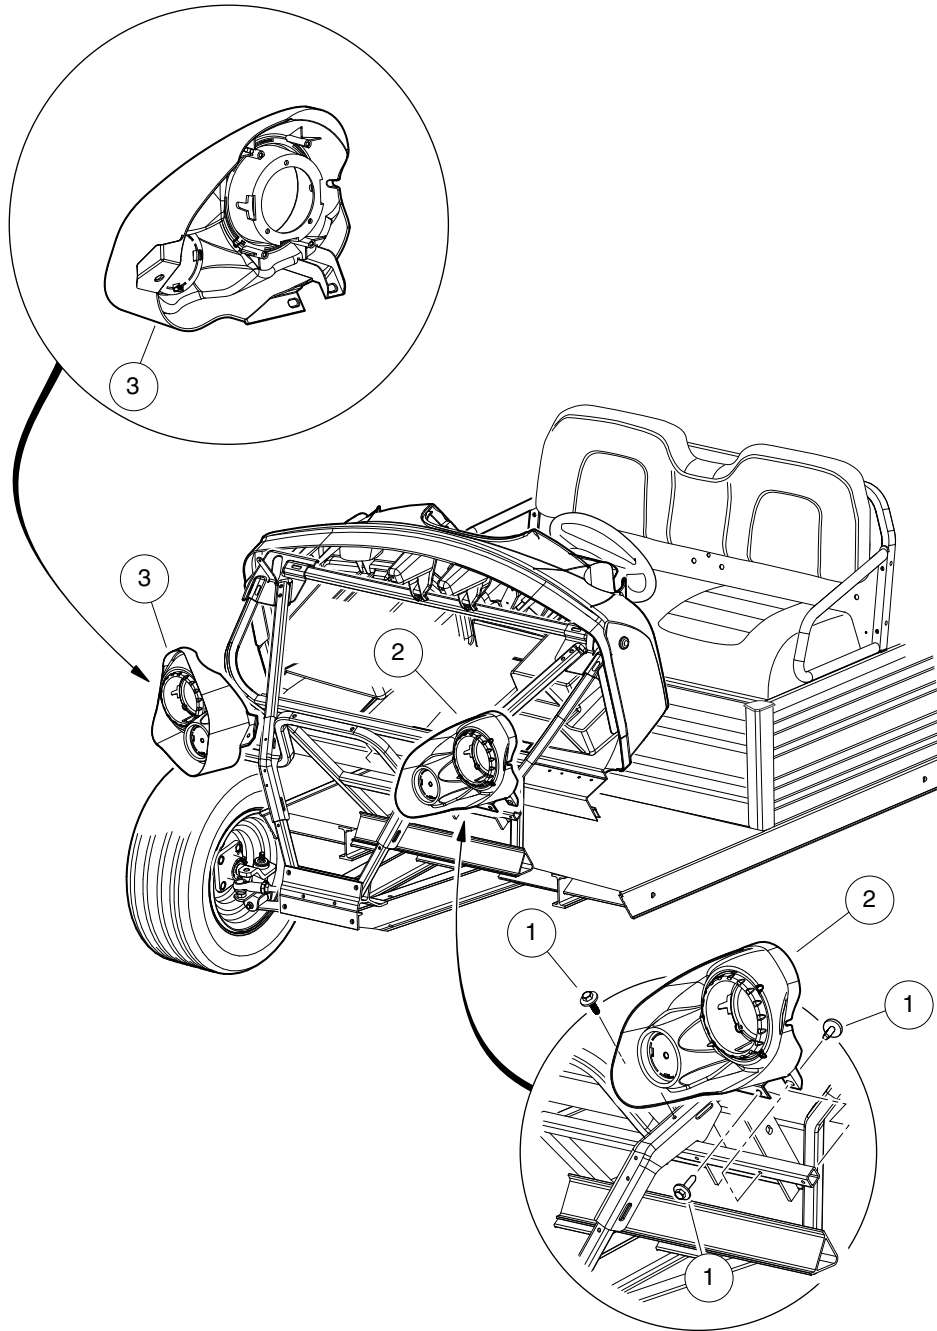


001300-005

HEADLIGHT BEZELS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102297125	Screw, M6-1.0x25.4, Thread-Forming, SEMS	6
2	105034901	Bezel, Hl, Lh, Ca	1
3	105035001	Bezel, Hl, Rh, Ca	1

1

G

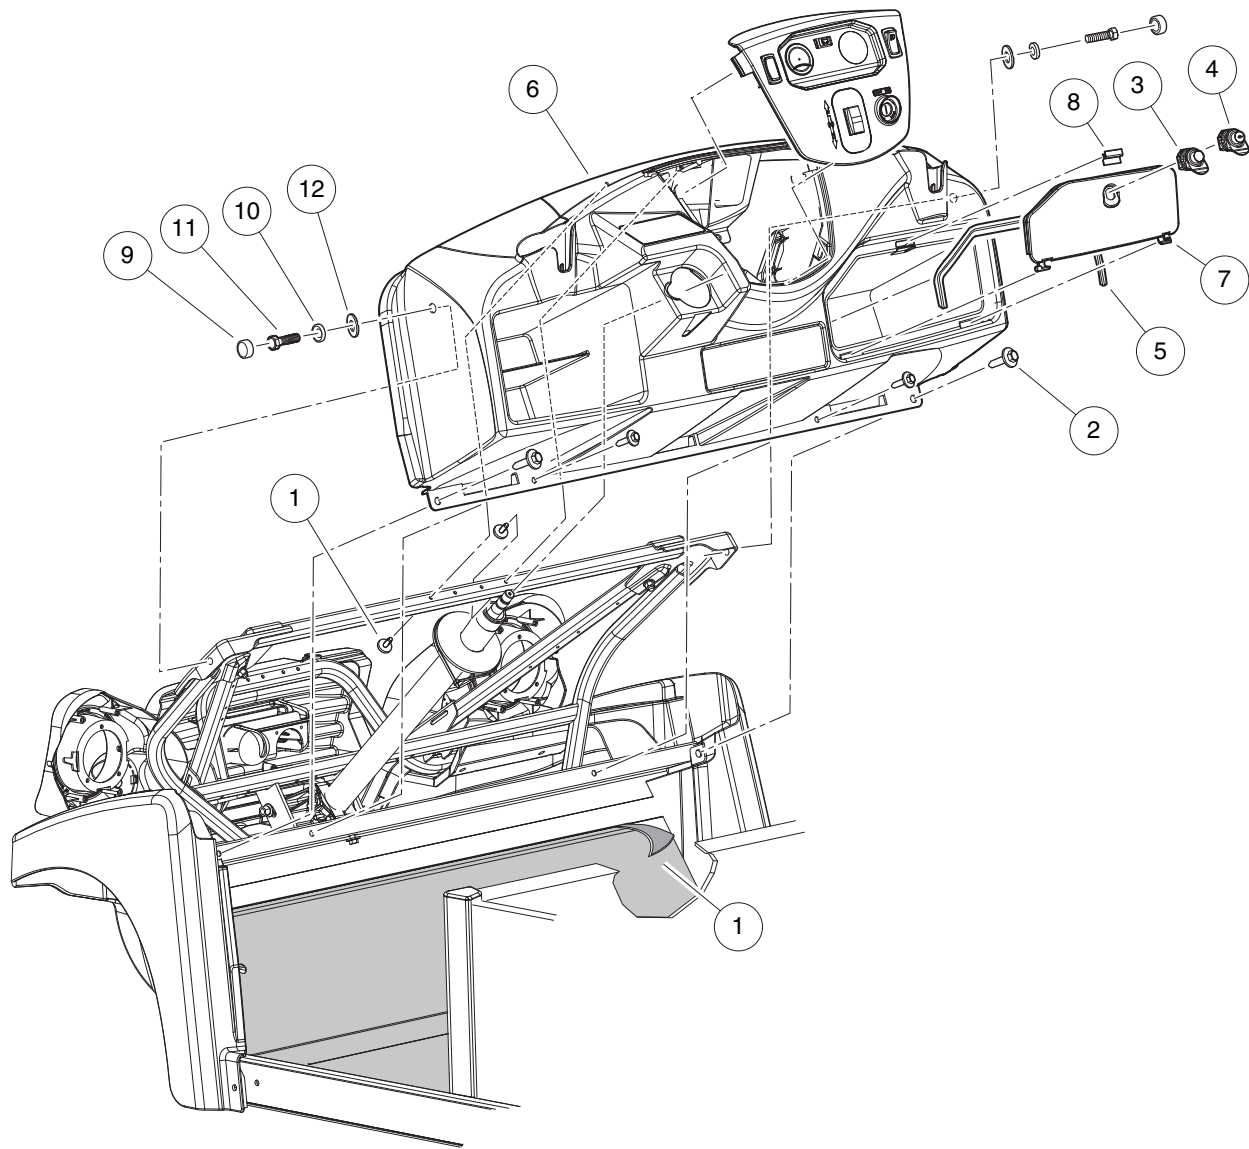


001300-006

DASH, GLOVEBOX DOOR, AND FLOORMAT

ITEM	PART NO.	DESCRIPTION	QTY	1	G
		1 2 3 4			
1	<u>101503202</u>	Floormat	1		
2	<u>102297125</u>	Screw, M6-1.0x25.4, Thread-Forming, SEMS	6		
3	<u>103182701</u>	Latch, Push Close	1		
4	<u>103182702</u>	Latch, Push Close W/ Key	1		
5	<u>103540203</u>	Seal, Bulb, 13 X 27 X 579 Mm	1		
6	<u>105034001</u>	Dash, Ca	1		
7	<u>105034201</u>	Door, Glove Box, Ca	1		
8	<u>105035701</u>	Keeper, Latch, Ca	1		
9	<u>105049201</u>	Cover, Bolt, Rh Series	2		
10	<u>105049301</u>	Cover, Washer, Rhw Series	2		
11	320	Screw, 3/8-16 X 1.00 Hex-Head Cap	2		
12	<u>334</u>	Washer, 3/8, Type A, Flat	2		

1

G

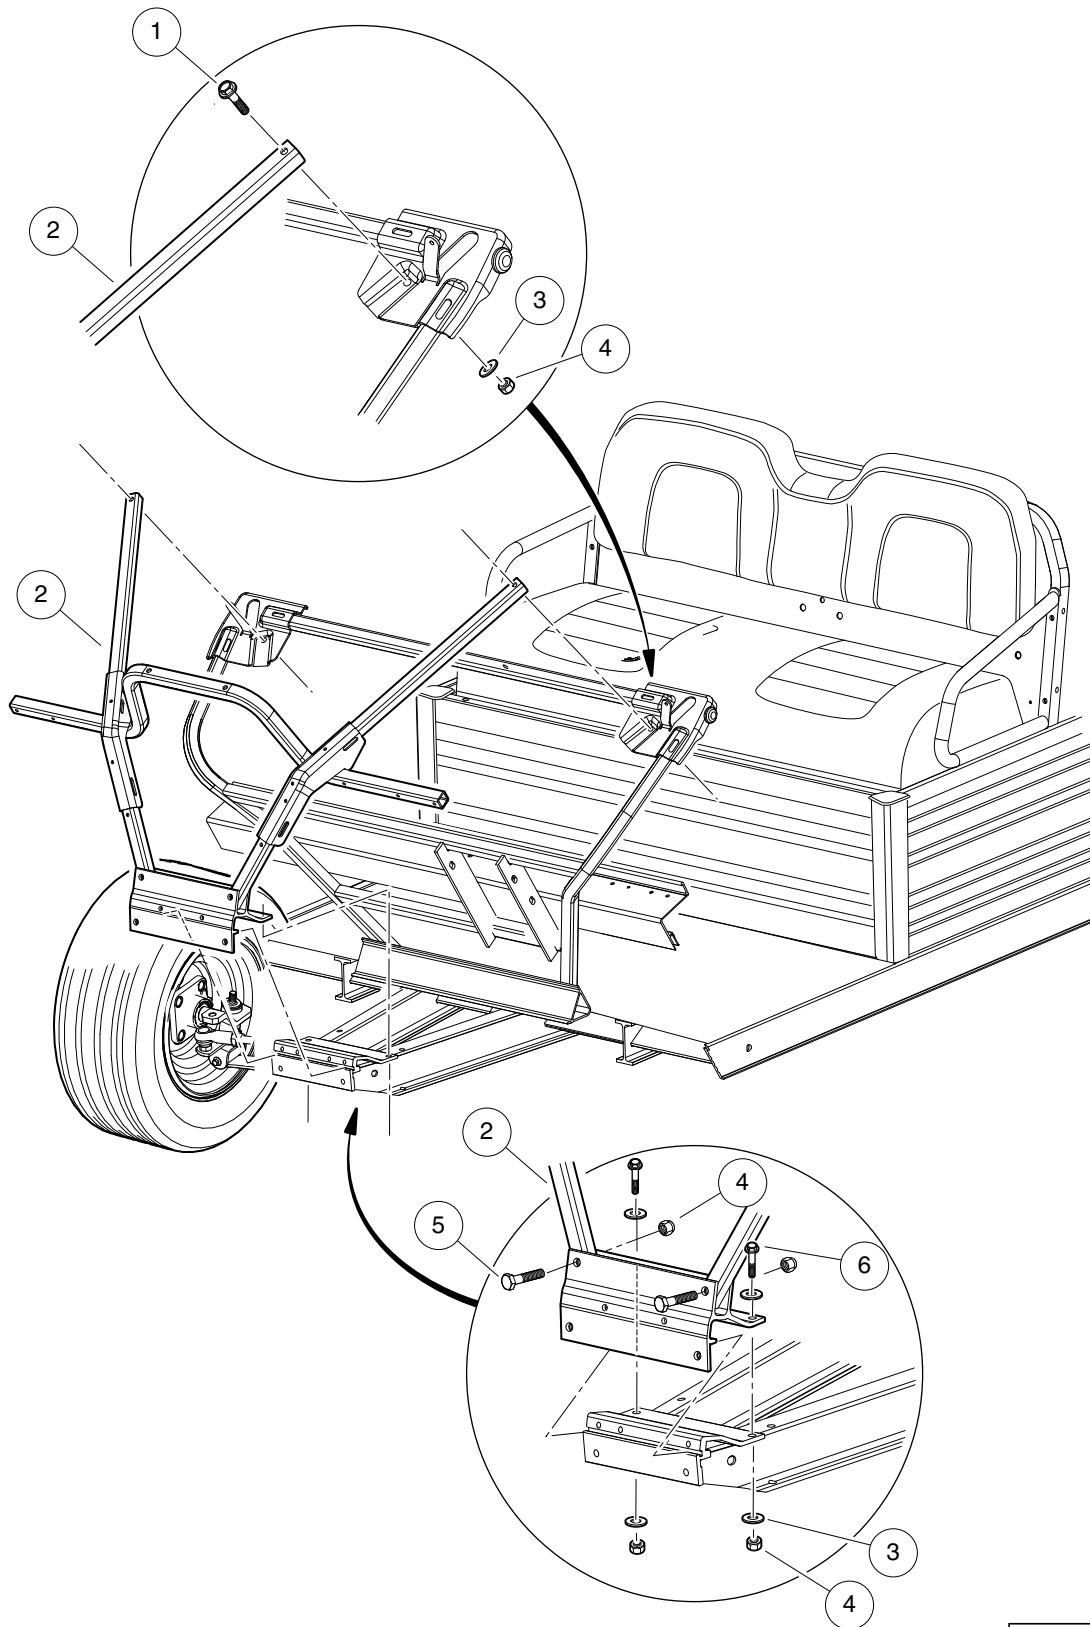

001107-001

FRONT FRAME, STANDARD


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011937	Bolt, 5/16-18 X 1.25 Hex Head	2
2	105007001	Weldment, Front, Util, Std	1
3	1241	Washer, 5/16 Type A Flat	6
4	7473	Locknut, 5/16-18 Nylon Insert	6
5	8935	Screw, 5/16-18 X 2.25 Hex-Head Cap	2
6	8963	Screw, 5/16-18 X 1.75 Hex-Head Cap	2

1

G

1

G

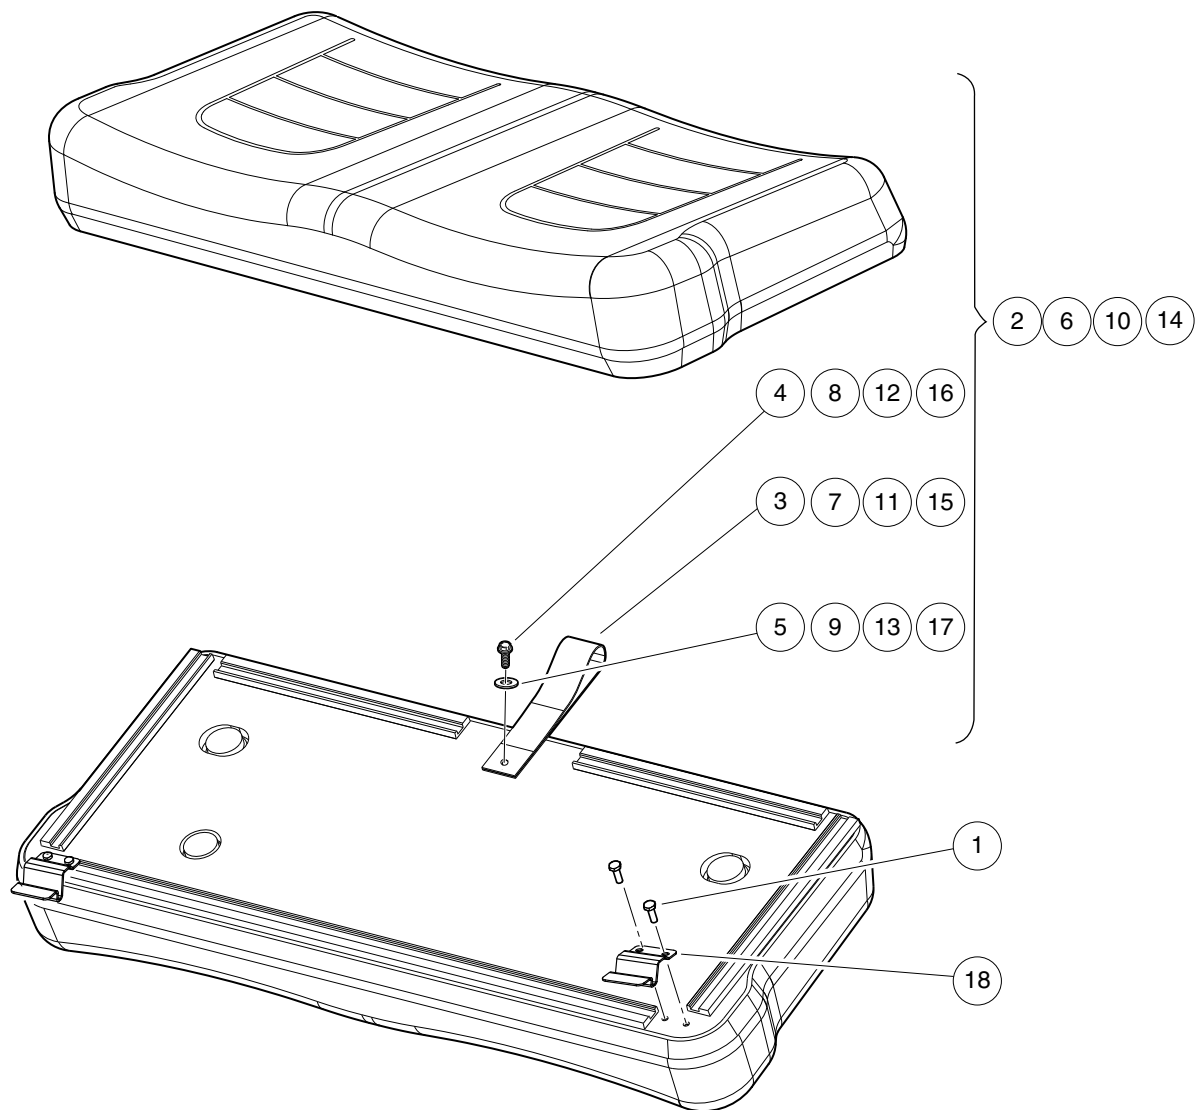

001300-021

SEAT BOTTOM

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
2	<u>105064521</u>	Asm, Seatbottom, White, Ca, Sp (includes items 3 through 5)	1
3	<u>1013309</u>	Strap, Utility Seat	1
4	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	1
5	<u>332</u>	Washer, 1/4 Type A Narrow Flat	1
6	<u>105064522</u>	Asm, Seatbottom, Black, Ca, Sp (includes items 7 through 9)	1
7	<u>1013309</u>	Strap, Utility Seat	1
8	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	1
9	<u>332</u>	Washer, 1/4 Type A Narrow Flat	1
10	<u>105064523</u>	Asm, Seatbottom, Gray, Ca, Sp (includes items 11 through 13)	1
11	<u>1013309</u>	Strap, Utility Seat	1
12	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	1
13	<u>332</u>	Washer, 1/4 Type A Narrow Flat	1
14	<u>105064524</u>	Asm, Seatbottom, Beige,ca, Sp (includes items 15 through 17)	1
15	<u>1013309</u>	Strap, Utility Seat	1
16	<u>101954301</u>	Screw, 1/4-20 X 0.75 Hex-Head Cap	1
17	<u>332</u>	Washer, 1/4 Type A Narrow Flat	1
18	<u>105200401</u>	Bracket,Hinge, Seat,CA	2


1

G

1

G

1 2 3 4

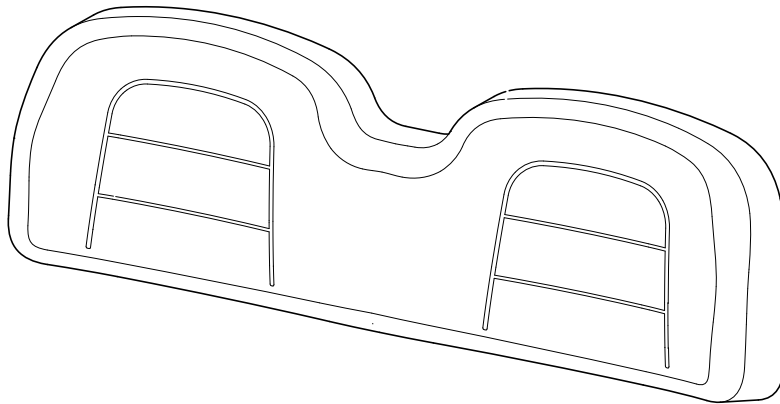


001300-022

SEAT BACK

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>105064121</u>	Asm, Seatback, White, Ca, Sp	1
2	<u>105064122</u>	Asm, Seatback, Black, Ca, Sp	1
3	<u>105064123</u>	Asm, Seatback, Gray, Ca, Sp	1
4	<u>105064124</u>	Asm, Seatback, Beige, Ca, Sp	1

1


G

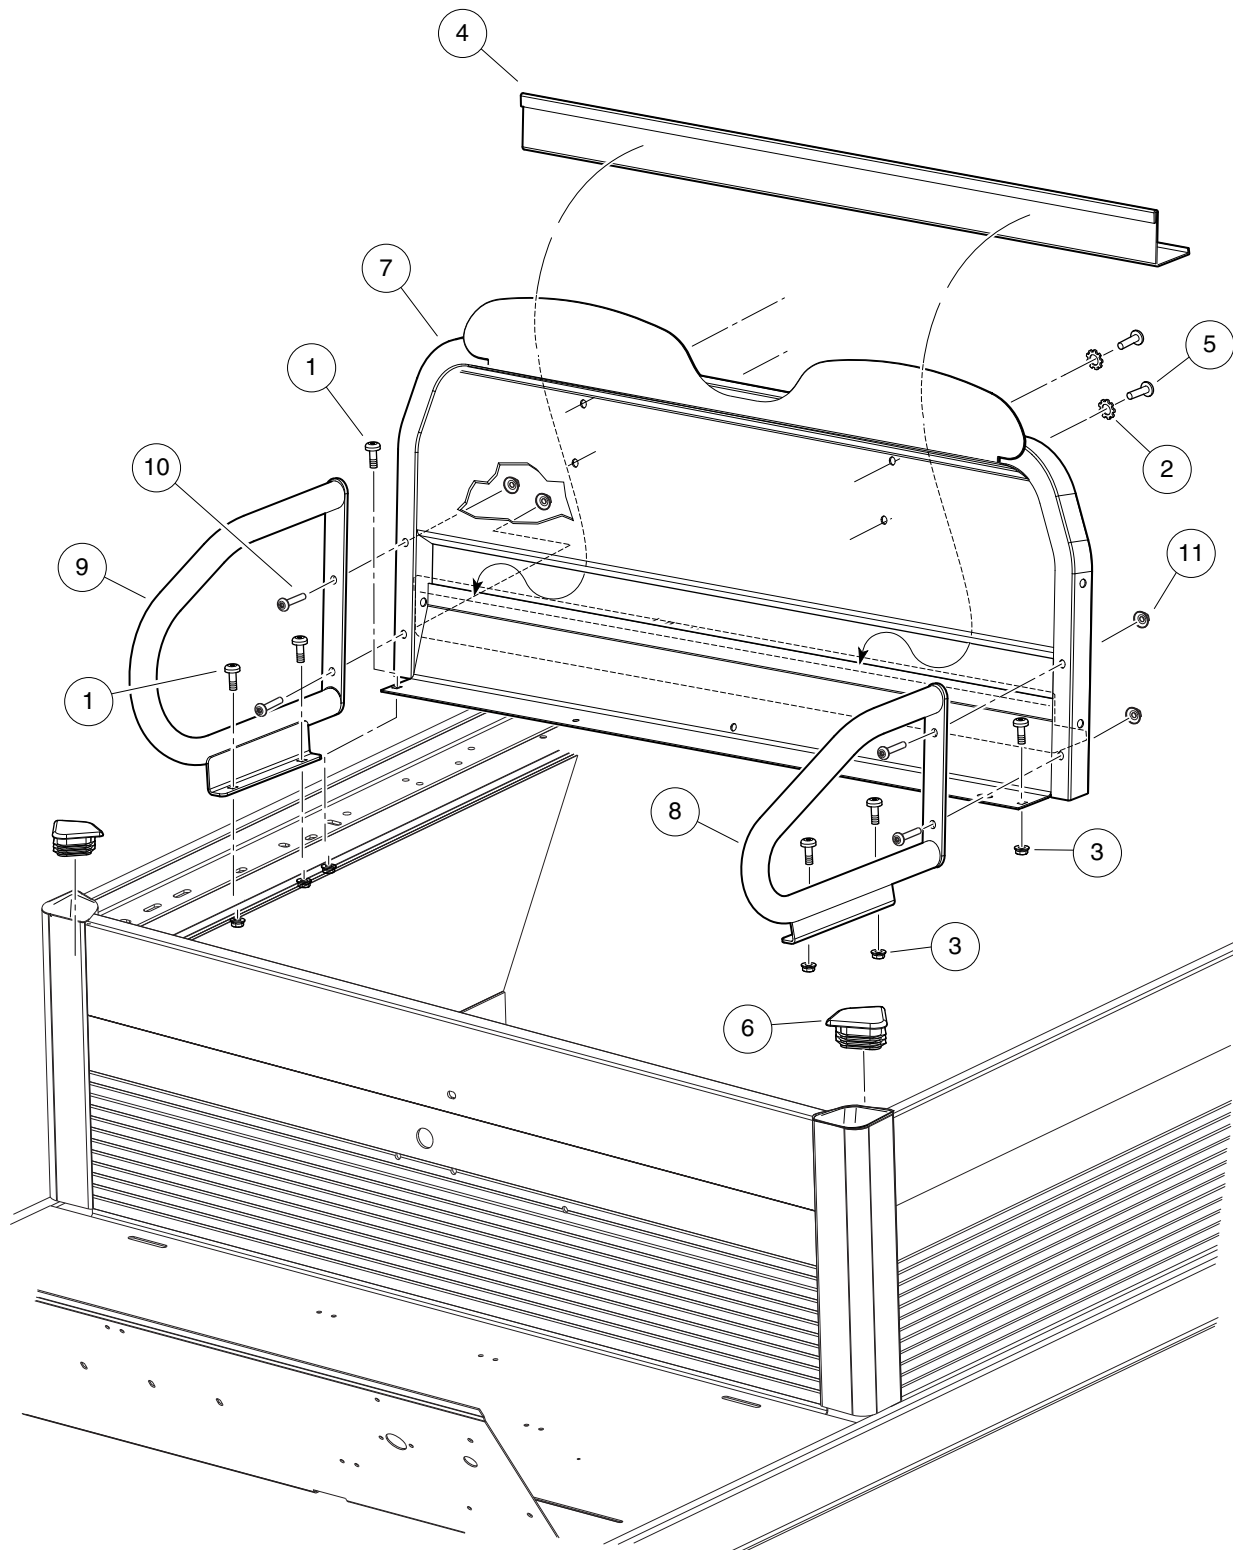

001161-003

SEAT FRAME AND HIP-RESTRAINT


ITEM	PART NO.	DESCRIPTION	QTY	1	G
		1 2 3 4			
1	1015399	Screw, 5/16-18 X 0.88 Torx Truss-Head	6		
2	<u>101946201</u>	Washer, Lock, 0.250 External-Tooth	4		
3	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	6		
4	<u>102989501</u>	Seal, Bed, 41-Inch	1		
5	<u>103487501</u>	Screw, 1/4-20 X 1.0, Black	4		
6	<u>105006501</u>	Cap, Corner, Frame	2		
7	<u>105062401</u>	Seatback, Weldment, Ca	1		
8	<u>105063001</u>	Wldmnt, Hip Restraint, Sml, Lh	1		
9	<u>105063002</u>	Wldmnt, Hip Restraint, Lrg, Rh	1		
10	<u>105078401</u>	Scrw, 5/16-18 X 1.75, Tr Tx Hd	4		
11	<u>105194301</u>	Nut, 5/16-18, Conical Washer	4		

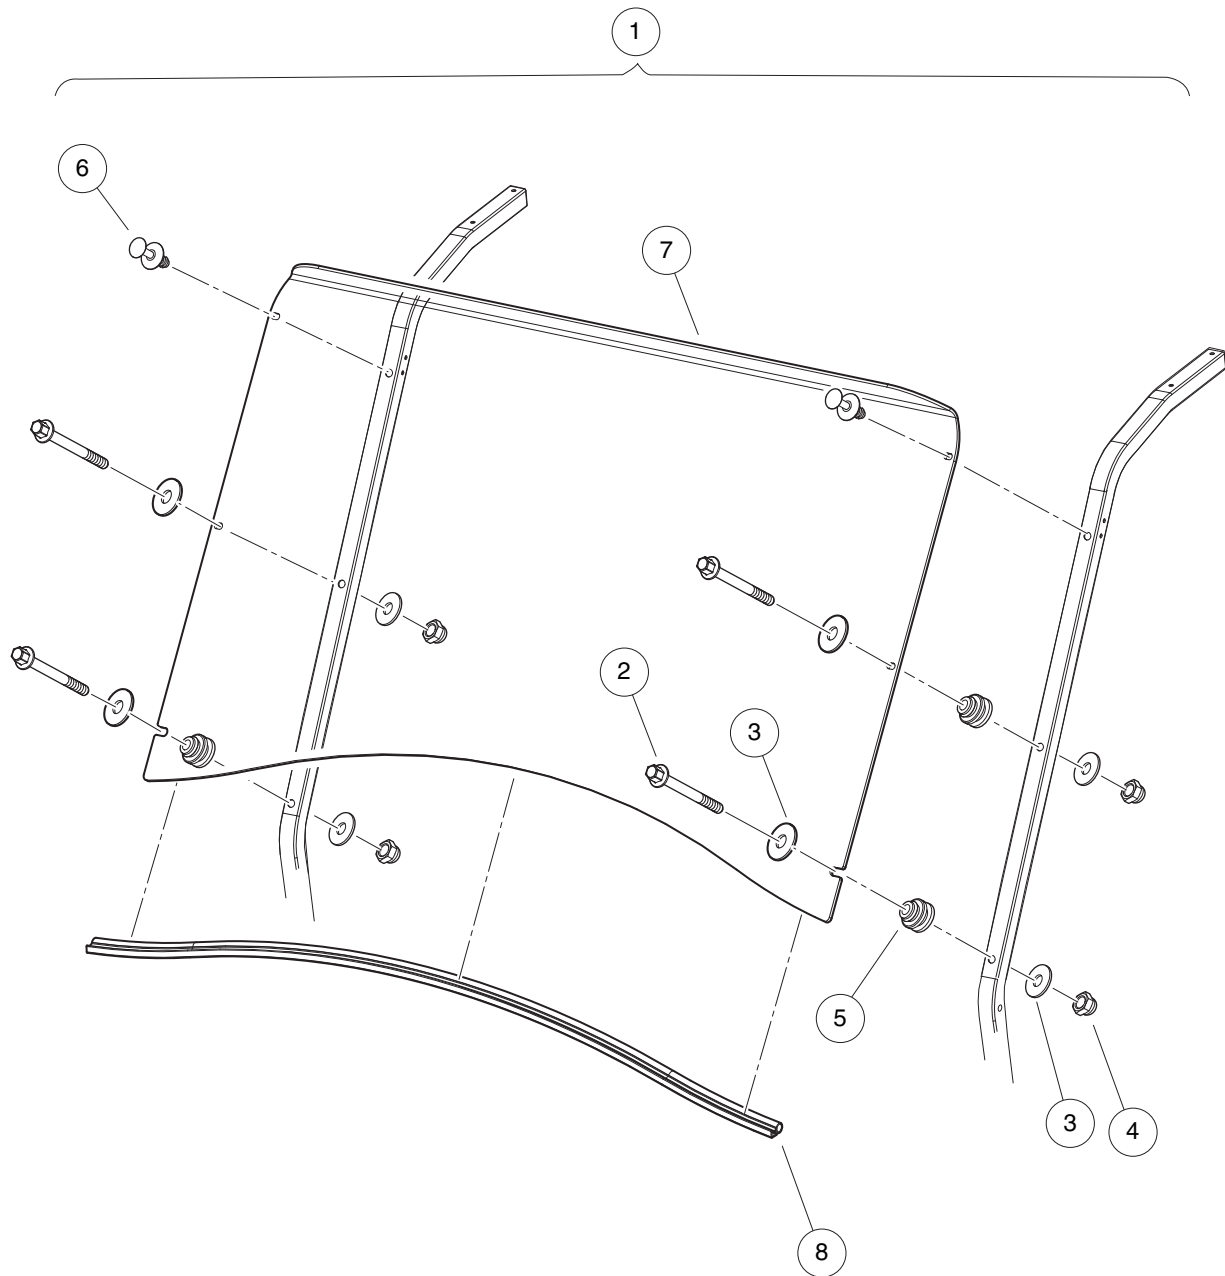

001115-001

WINDSHIELD, NON-HINGED

ITEM	PART NO.	DESCRIPTION	QTY	1	G
		1 2 3 4			
1	<u>105109201</u>	Kit, Windshield, Single, Hb (includes items 2 through 8)	1		
2	<u>102296150</u>	Bolt - M6x1.0x50 Hex Flng Hd	4		
3	<u>102296301</u>	Washer, M6x18x1.6 Flat	8		
4	<u>102582401</u>	Cap Nut M6, Sp	4		
5	<u>102947601</u>	Grommet, Windshield	4		
6	<u>105093501</u>	Blind Rivet, Push, 3-10 Panel	2		
7	<u>105102301</u>	Windshield, Single, Hb	1		
8	<u>105196001</u>	seal,windshield	1		

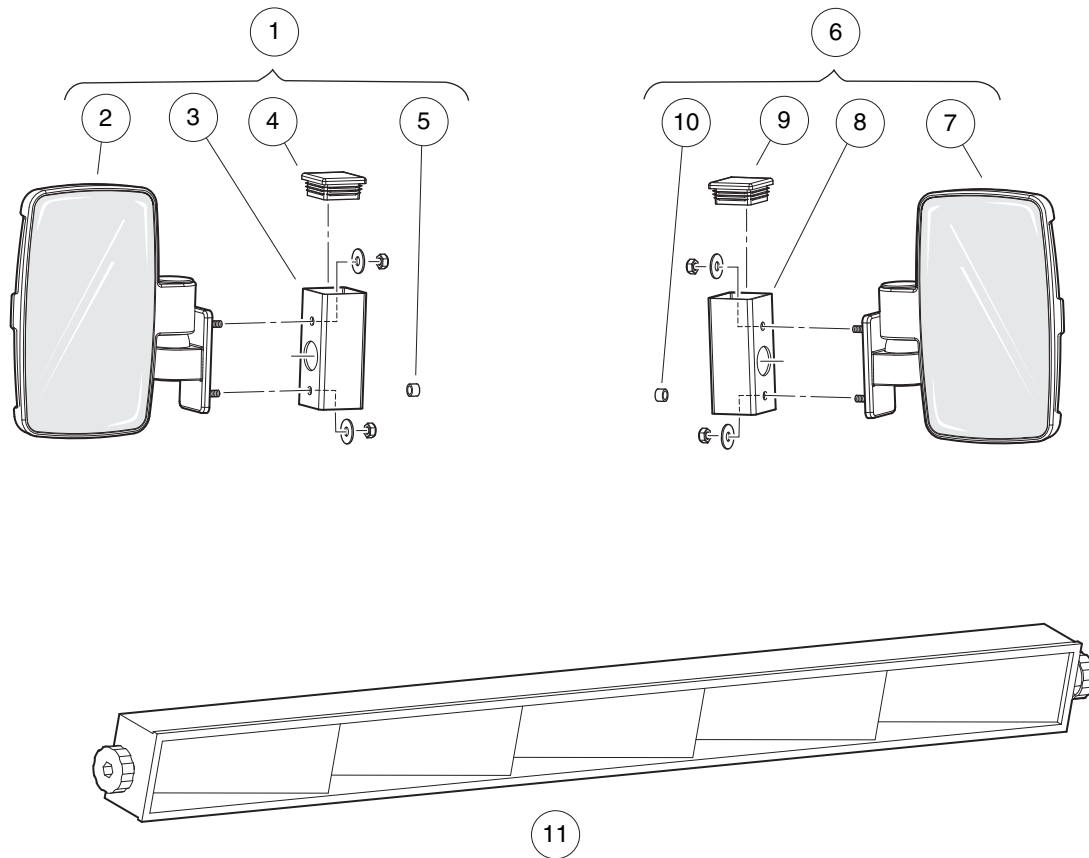


001300-019

MIRRORS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>105124201</u>	Kit, Mirror, Hb, Res, Ds (includes items 2 through 5)	1
2	<u>105128801</u>	Asm, Mirror, Utl Res, Ds	1
3	105128901	Tube, Mirror, Support	1
4	105129001	Plug, Square 38.1 Mm	1
5	105170101	Spacer, M6, Plastic	1
6	<u>105124202</u>	Kit, Mirror, Hb, Res, Ps (includes items 7 through 10)	1
7	<u>105128802</u>	Asm, Mirror, Utl Res, Ps	1
8	105128901	Tube, Mirror, Support	1
9	105129001	Plug, Square 38.1 Mm	1
10	105170101	Spacer, M6, Plastic	1
11	<u>105288801</u>	Kit, Mirror, 5 Panel, Canopy	1

1
G

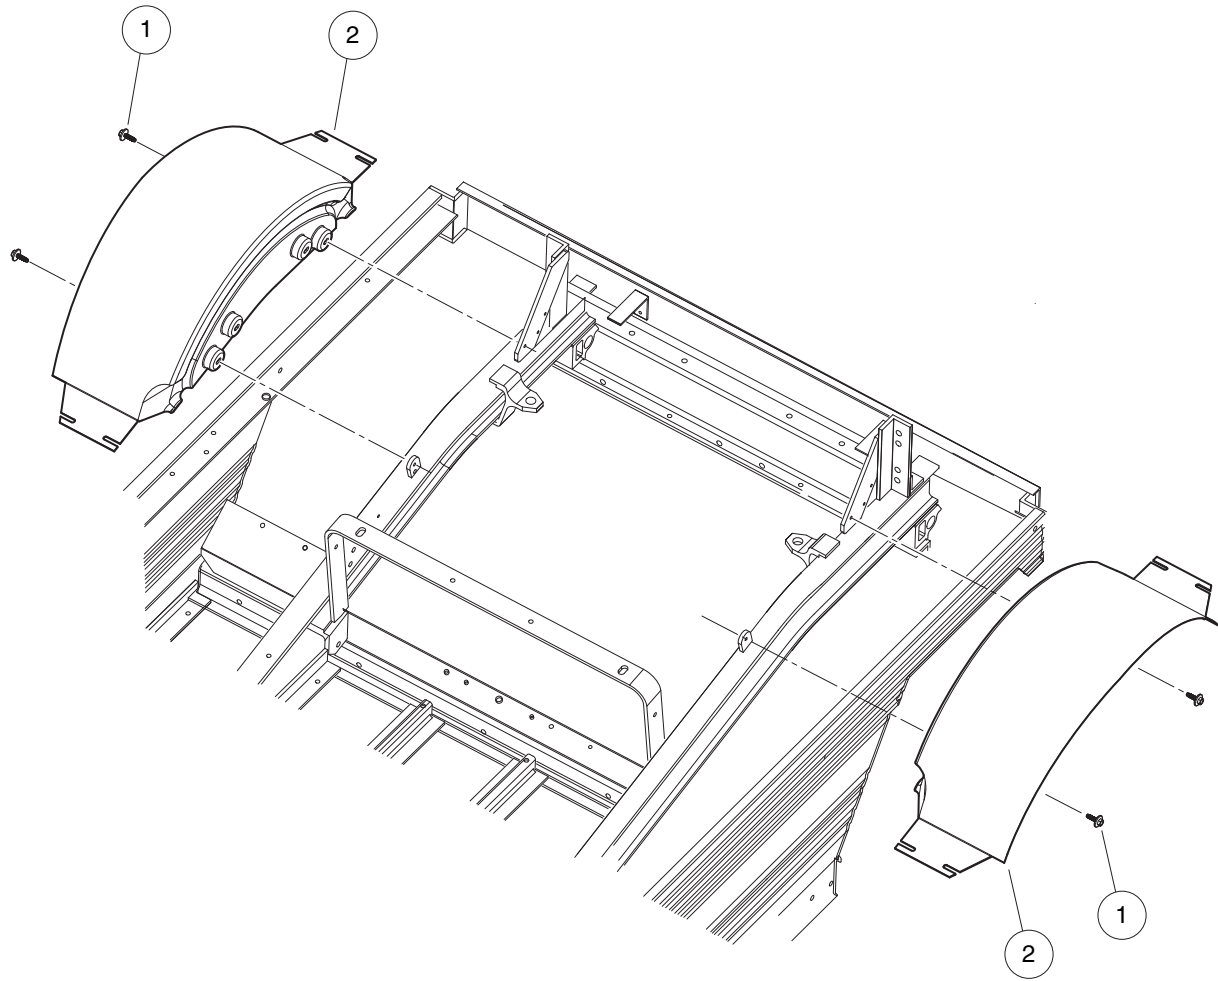


001123-001

INNER REAR FENDERS

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>102297125</u>	1 2 3 4 Screw, M6-1.0x25.4, Thread-Forming, SEMS	4
2	<u>105035801</u>	Fender, Inner, Ca	2



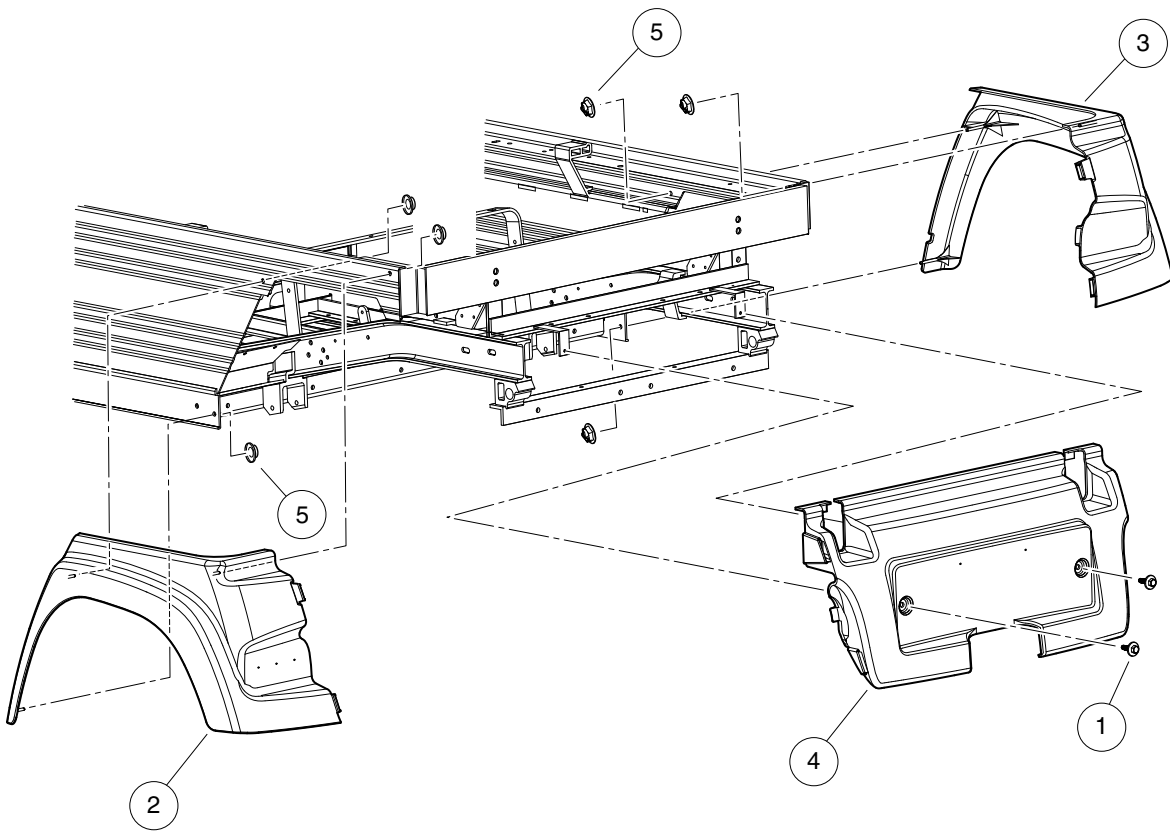


001124-001

REAR FENDERS AND TAIL SKIRT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102297125	Screw, M6-1.0x25.4, Thread-Forming, SEMS	2
2	105035101	Fender, Rear, Lh, Ca	1
3	105035201	Fender, Rear, Rh, Ca	1
4	105035301	Tailskirt, Ca	1
5	105066401	Nut, Self Thread, 5x10x15	6

1

G

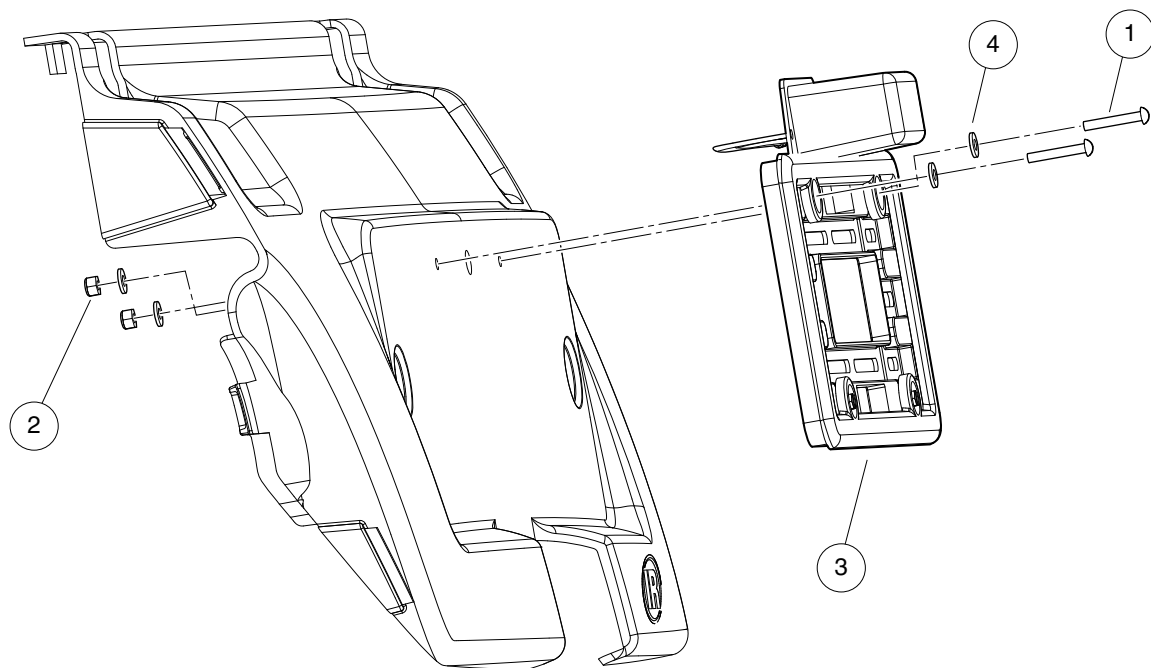


001170-001

REAR LICENSE PLATE HOLDER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010909	Screw, #10-32 X 1.25 Rd Hd Mch	2
2	1013061	Locknut, #10-32 Nylon Insert	2
3	N/A	License Plate,ASM, Rear	1
4	183	Washer, #10, Type A, Flat	4

1


G

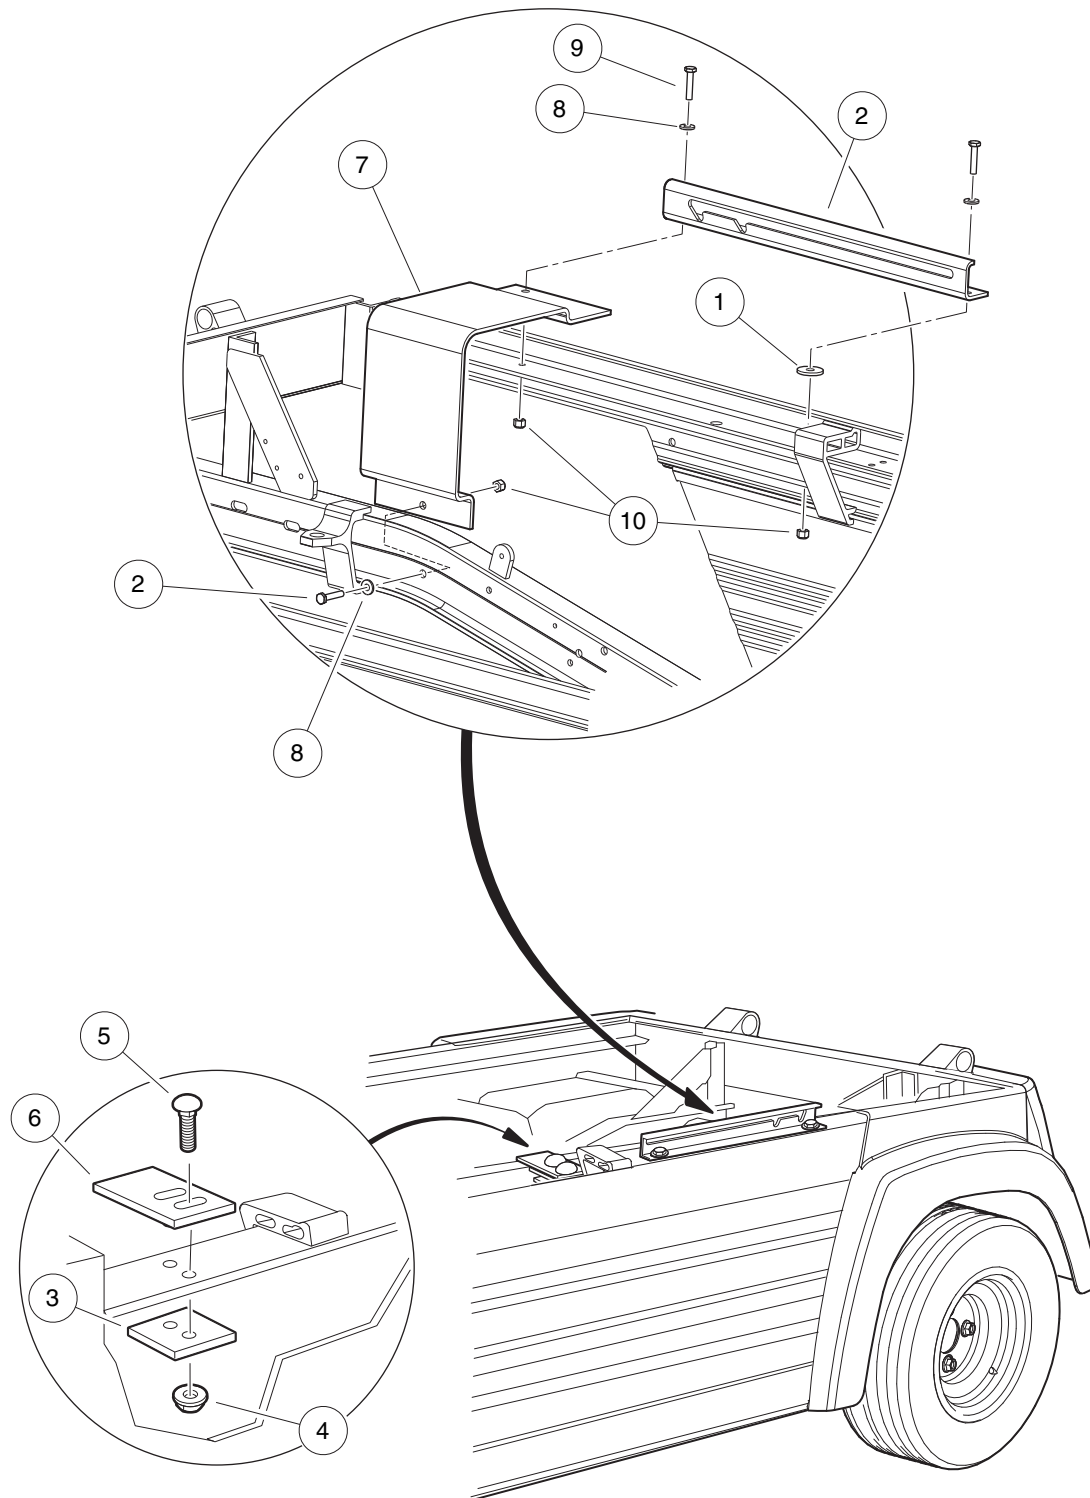

001163-001

LATCH AND PROP ROD TRACK


ITEM	PART NO.	DESCRIPTION	QTY	1	G
		1 2 3 4			
1	1012571	Washer, 5/16 Extra Thick Flat	1		
2	1015700	Track Prop Rod Ca li	1		
3	<u>1016060</u>	Plate, Latch Support	2		
4	<u>101835601</u>	Locknut, 1/4-20 Hex Whiz	4		
5	<u>101958602</u>	Bolt, Carriage, 1/4-20 X 1.0	4		
6	<u>105110801</u>	Plate, Latch, Ca	2		
7	<u>105142701</u>	Brkt, Side Support, CafÈ Exprs	1		
8	<u>332</u>	Washer, 1/4 Type A Narrow Flat	3		
9	<u>7479</u>	Screw, 1/4-20 X 1.25 Hex-Head Cap	3		
10	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	3		

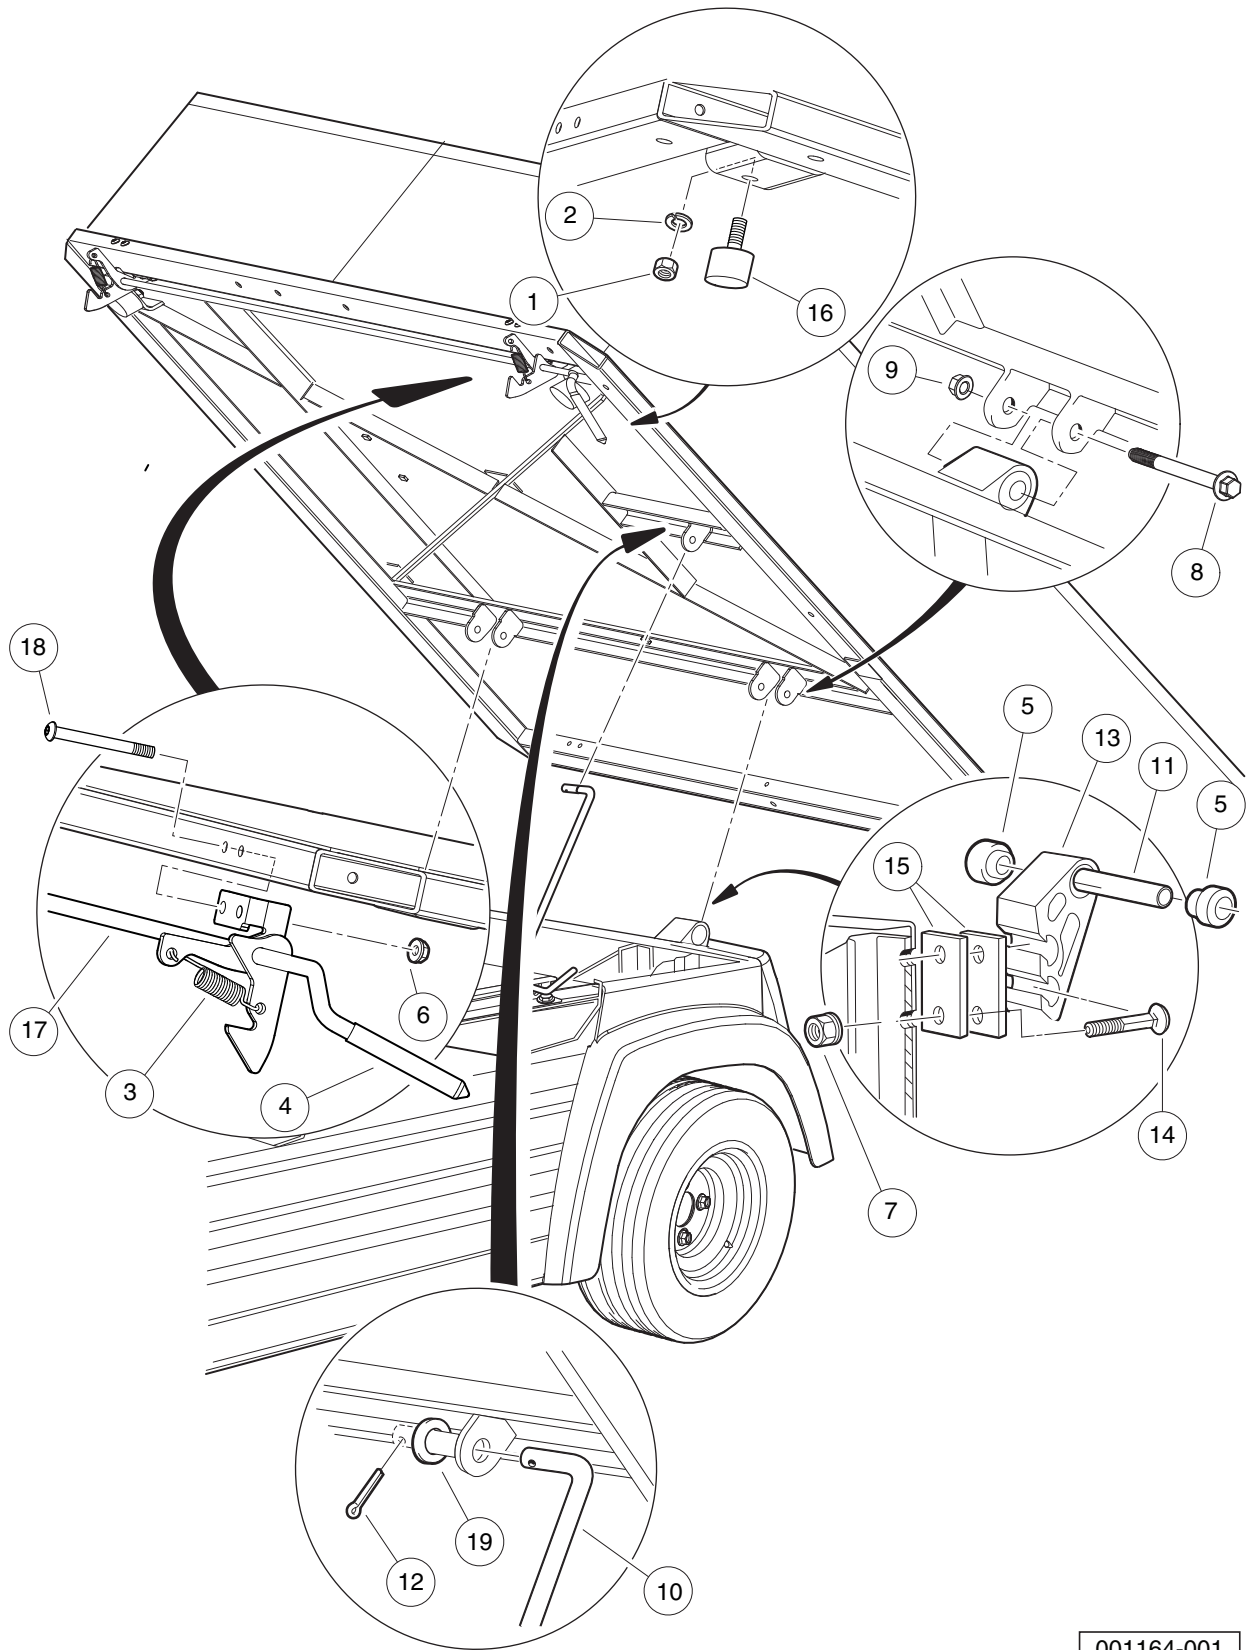

001164-001


BED LATCH, HINGE, AND PROP ROD

ITEM	PART NO.	DESCRIPTION	QTY	1	G
		1 2 3 4			
1	<u>1012528</u>	Nut, M8-1.25 Hex	2		
2	<u>1013734</u>	Lockwasher, 8mm Split	2		
3	<u>1015391</u>	Extension, Spring Latch	2		
4	<u>1015400</u>	Grip, Tilt Latch Hand	1		
5	<u>1015583</u>	Bushing, Urethane	4		
6	<u>1015661</u>	Nut, Lock Hx Flanged 1/4-20	4		
7	<u>102065901</u>	Locknut, 3/8-16 Flanged Dimple	4		
8	<u>102298185</u>	Bolt - Flange Hd, M8 X 85.0	2		
9	<u>102298401</u>	Nut,m8,all Metal Lock	2		
10	<u>102301401</u>	Rod, Prop	1		
11	<u>102506401</u>	Sleeve - Spring Eye Mounts	2		
12	<u>1035</u>	Cotter Pin, 3/32 x 1	1		
13	<u>103538701</u>	Bracket, Bed Hinge, Extruded	2		
14	<u>103539001</u>	3/8-16 X 1.25 Carr Blt Gr5 Zn	4		
15	<u>103575801</u>	Shim, Bed Hinge, .125 Thick	4		
16	<u>105036601</u>	Bumper, Bedfloor, Ca	2		
17	<u>105169101</u>	Weldment, Bed Latch, CA	1		
18	<u>105194101</u>	1/4-20 X 2.5, Bhcs, 6-lobe	4		
19	<u>334</u>	Washer, 3/8, Type A, Flat	1		

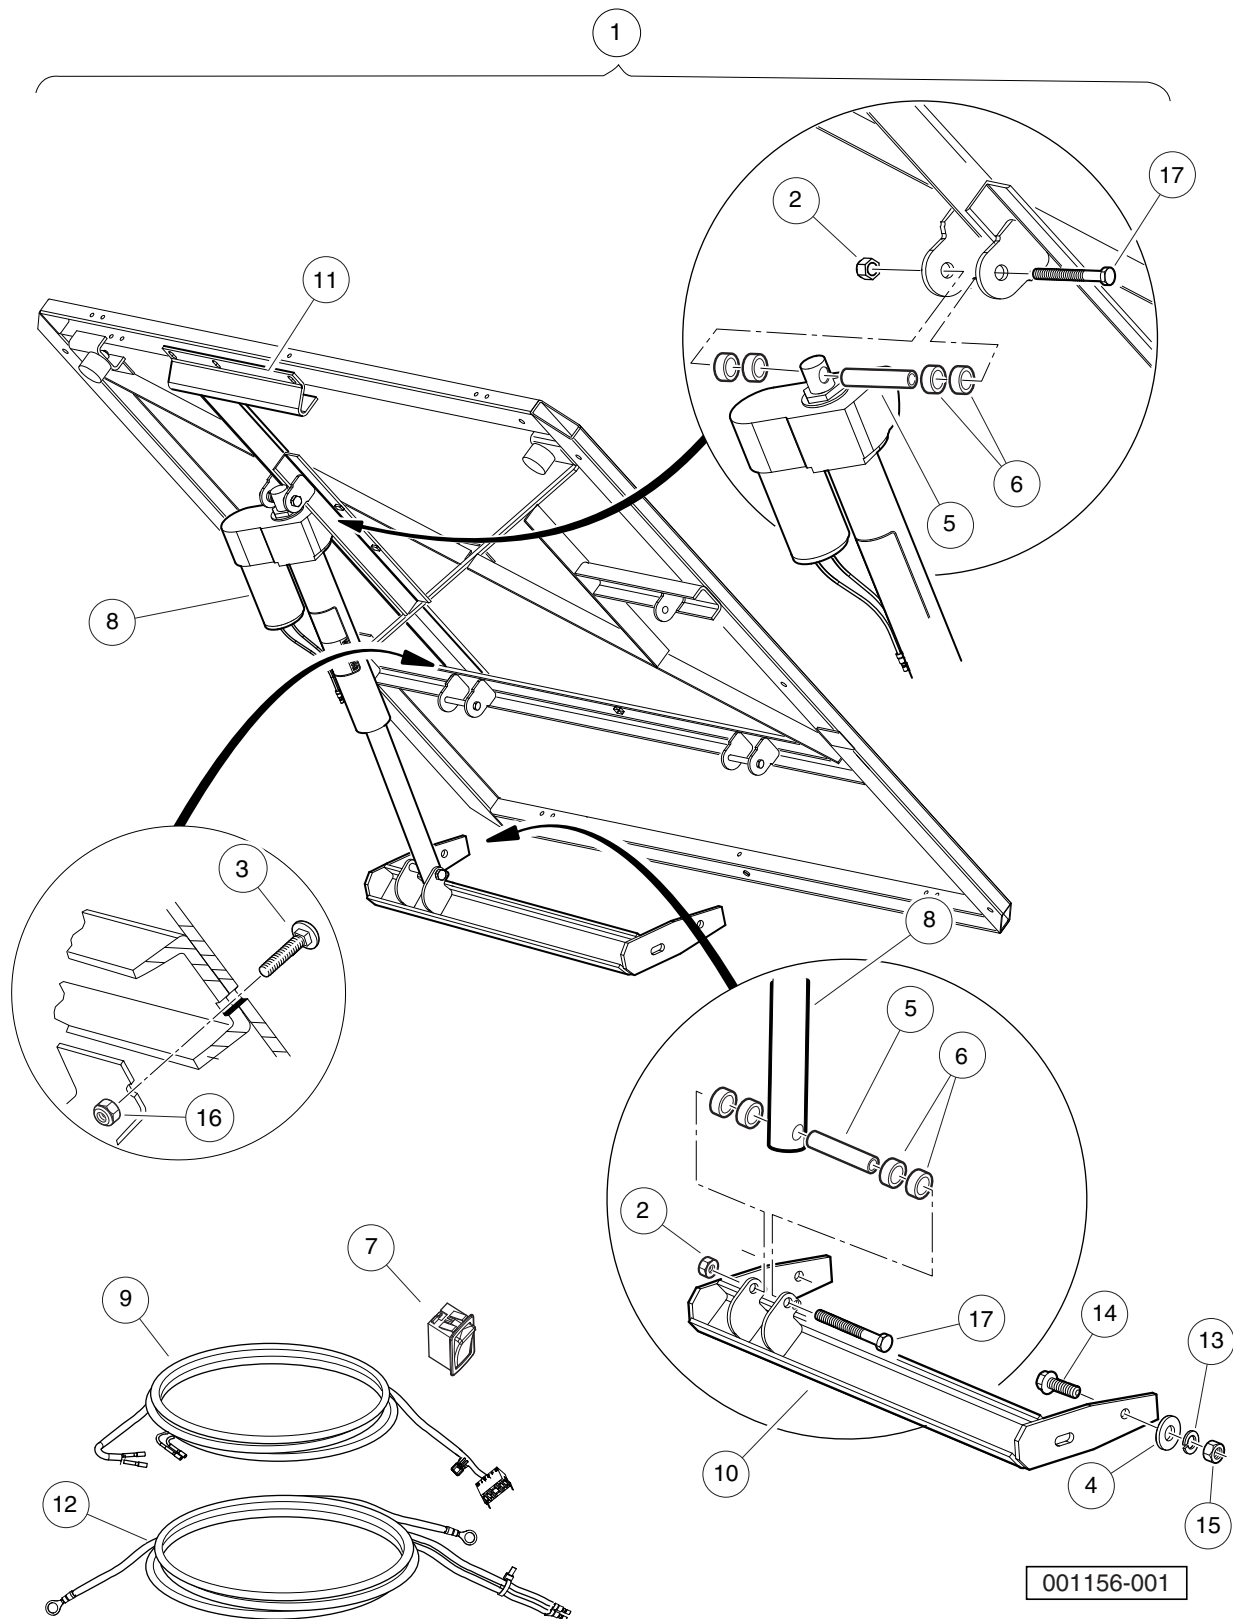

ELECTRIC BED LIFT – GASOLINE VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY	1	G
		1 2 3 4			
1	<u>105170501</u>	Kit, Bed Lift, Gas, Med (includes items 2 through 17)	1		
2	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2		
3	<u>101043502</u>	Bolt, Carriage, 5/16-18x1 blk	1		
4	<u>1011990</u>	Washer, 3/8 Flat	4		
5	<u>1016603</u>	Bushing, Long	2		
6	<u>1017774</u>	Body Spacer	8		
7	<u>102882501</u>	Switch, Rocker, Bed Lift	1		
8	<u>103951801</u>	Actuator, Bed Lift, Electric	1		
9	<u>105108901</u>	Harness, Bed Lift, Util	1		
10	<u>105131001</u>	Weldment, Mnt, Bed Lift, Ca	1		
11	<u>105193501</u>	Weldment, Bed Lift, Med	1		
12	<u>105197601</u>	Asm, Jumper, Bedlift, Ca500	1		
13	<u>357</u>	Lockwasher, 3/8 Split	4		
14	<u>705</u>	Screw, Cap-hex Hd 3/8-16x1.25	4		
15	<u>706</u>	Nut, Hex 3/8-16	4		
16	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1		
17	<u>7561</u>	Bolt, 3/8-16 X 3.00 Hex Head	2		

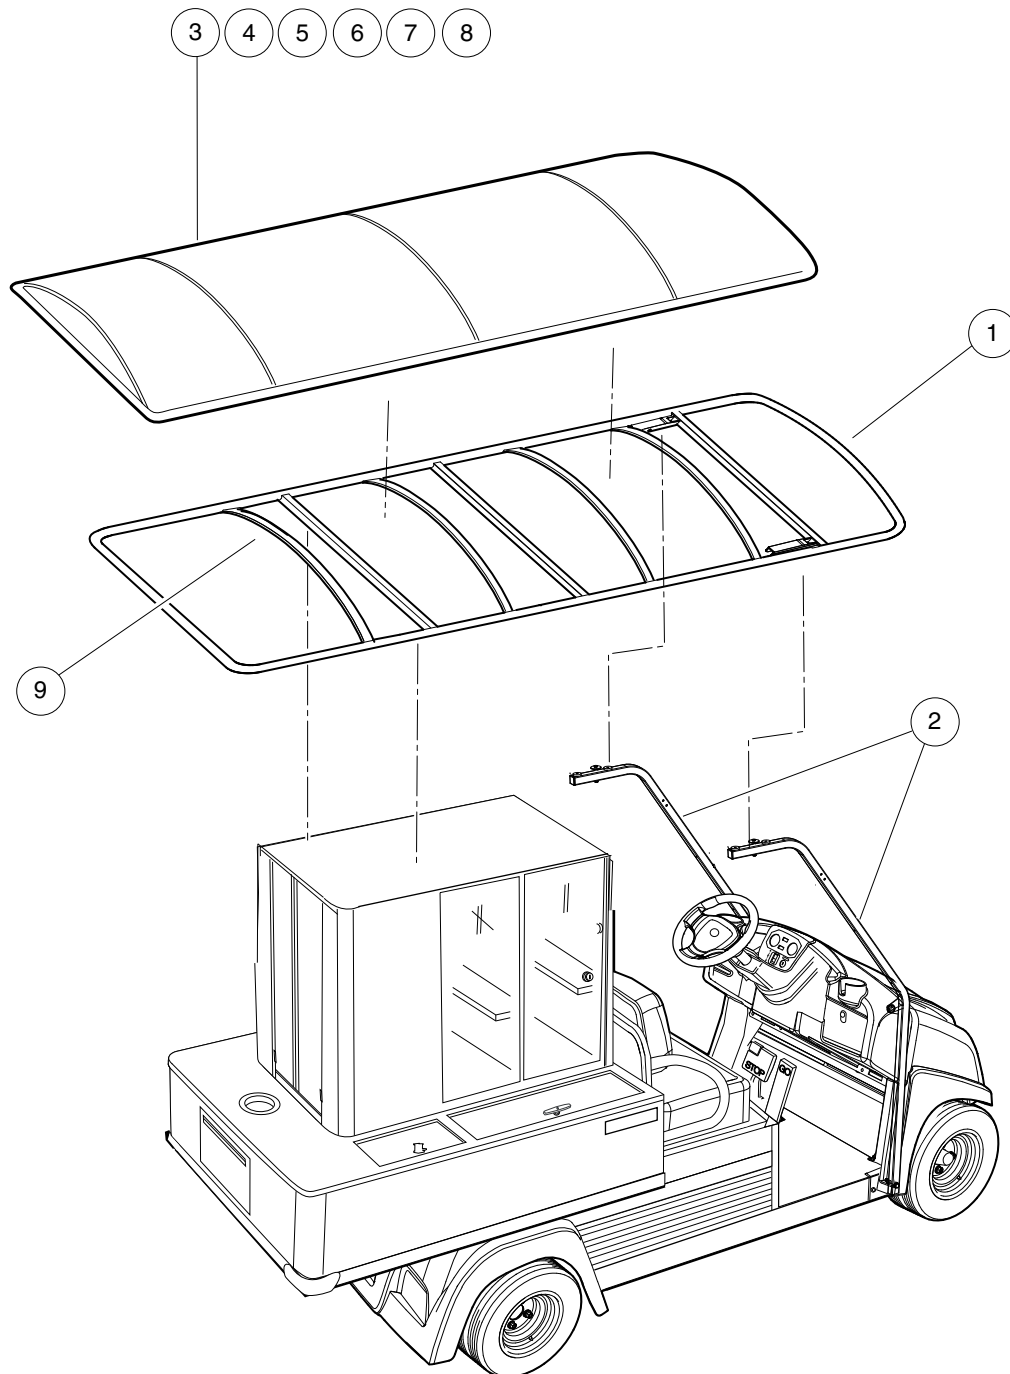

001153-001

CANOPY, FRAME, AND STRUTS


ITEM	PART NO.	DESCRIPTION	QTY	1	G
		1 2 3 4			
1	<u>105104001</u>	Cafe Express Canopy Frame 500	1		
2	<u>105104101</u>	CafÈ Express Front Struts 500	1		
3	<u>105104201</u>	CafÈ Express Canopy Green	1		
4	<u>105104202</u>	CafÈ Express Canopy Grn/white	1		
5	<u>105104203</u>	CafÈ Express Canopy Green Tw	1		
6	<u>105104204</u>	CafÈ Express Canopy Blue Tw	1		
7	<u>105104205</u>	CafÈ Express Canopy Linen Tw	1		
8	<u>105104206</u>	CafÈ Express Canopy Gray Tw	1		
9	<u>105210501</u>	CafÈ,Canopy,Cross Supports	4		

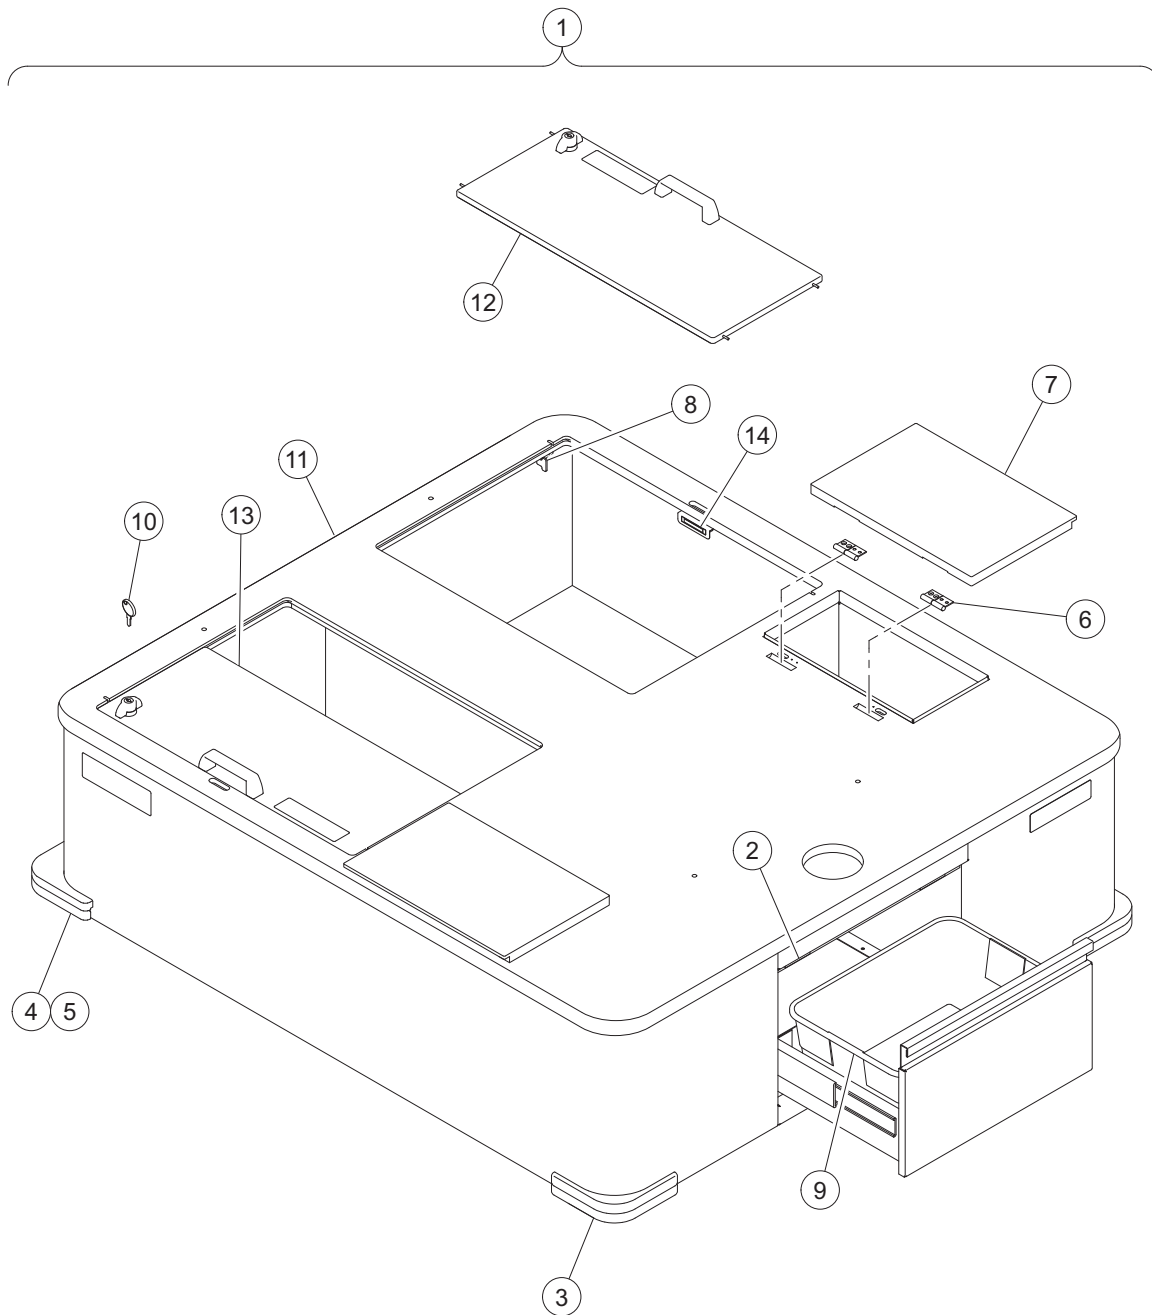

G-140399-000004

CAFÈ EXPRESS LOWER CABINET

ITEM	PART NO.	DESCRIPTION	QTY	1	G
		1 2 3 4			
1	<u>47616108001</u>	Cabinet, Base, Cafe Express (includes items 2 through 14)	1		
2	105301001	Catch, Magnetic	4		
3	105301101	Bumper, Rear, CafÈ	2		
4	105301201	Bumper, Front, CafÈ, Pas	1		
5	105301301	Bumper, Front, CafÈ, Drv	1		
6	105301401	Hinge, Ice Bin, CafÈ	4		
7	105301501	Lid, Ice Bin, CafÈ	2		
8	105301601	Striker, Bev Lock, CafÈ	2		
9	105305401	Bin, Trash, Cafe	1		
10	<u>105305501</u>	Keys, Cafe	1		
11	47616109001	Shell, Base, CafÈ	1		
12	47616110001	Asm, Door, Bev, Pas	1		
13	47616111001	Asm, Door, Bev, Pas	1		
14	47616112001	Bracket, Shelf Support, CafÈ	2		

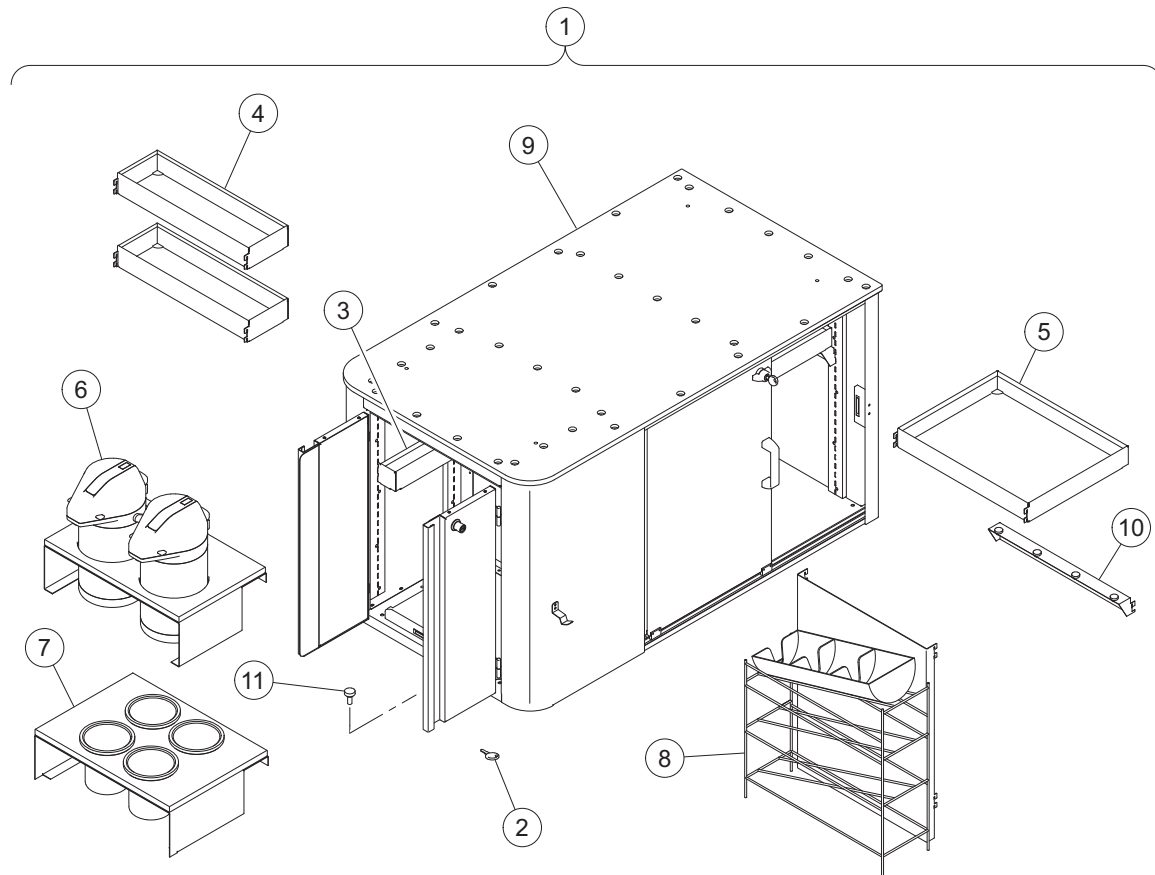

G-140399-000003

CAFÈ EXPRESS UPPER CABINET

ITEM	PART NO.	DESCRIPTION	QTY	1	G
		1 2 3 4			
1	47616573001	Kit, Cafe Upper Cabinet (includes items 2 through 11)	1		
2	105305501	Keys, Cafe	1		
3	105305801	Shelf, Adjustable, Sml, CafÈ	2		
4	105305901	Shelf, Adjustable, Med, CafÈ	2		
5	105306001	Shelf, Adjustable, Lrg, CafÈ	2		
6	105306201	Asm, Airpot, CafÈ Express	1		
7	105306401	Asm, Liquor Bar, CafÈ Express	1		
8	105306601	Asm, Holder, Cup, CafÈ Express	1		
9	47616575001	Cabinet, Upper, CafÈ Express	1		
10	47616576001	Bracket, Shelf Support, CafÈ	2		
11	47616717001	Screw, Thumb, CafÈ	3		
Note: Items 6 and 7 are interchangeable.					

1



G

WHEELS AND TIRES

2

G


E

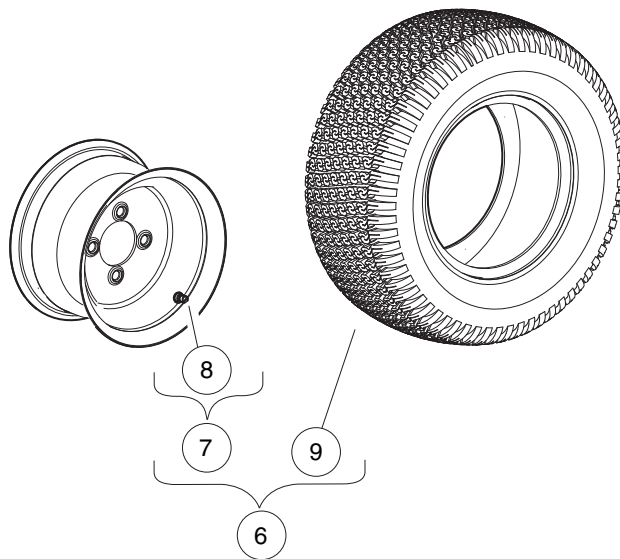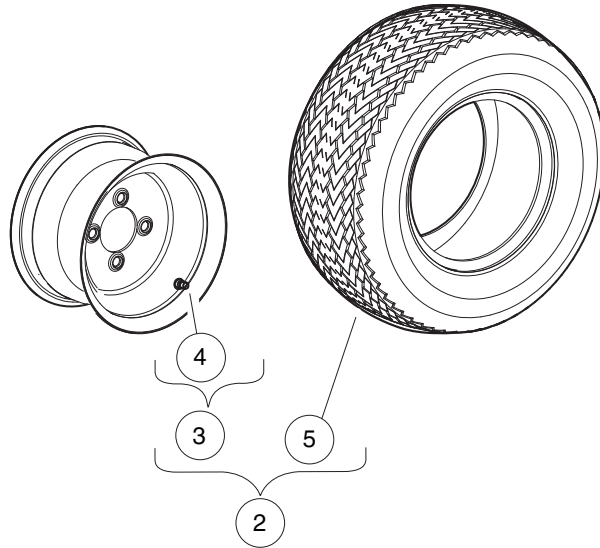

001320-001

WHEELS AND TIRES

ITEM	PART NO.	DESCRIPTION	QTY	2
		1 2 3 4		G
1	<u>1010984</u>	.500-20 Unf Lug Nut	16	E
2	<u>105078809</u>	Asm,whl,hn1,20x10-10,6pl (includes items 3 through 5)	4	
3	<u>105079204</u>	Wheel, 10"x6", Gray, 0 Offset, RR, with Valve Stem (includes item 4)	1	
4	<u>105078901</u>	Valve Stem, Kenda, Tr 412	1	
5	<u>105079301</u>	Tire, Hole-n-1, 20x10-10, 6pl	1	
6	<u>105078810</u>	Asm,whl,st,20x10-10,6pl (includes items 7 through 9)	4	
7	<u>105079204</u>	Wheel, 10"x6", Gray, 0 Offset, RR, with Valve Stem (includes item 8)	1	
8	<u>105078901</u>	Valve Stem, Kenda, Tr 412	1	
9	<u>105079401</u>	Tire, Superturf, 20x10-10, 6pl	1	

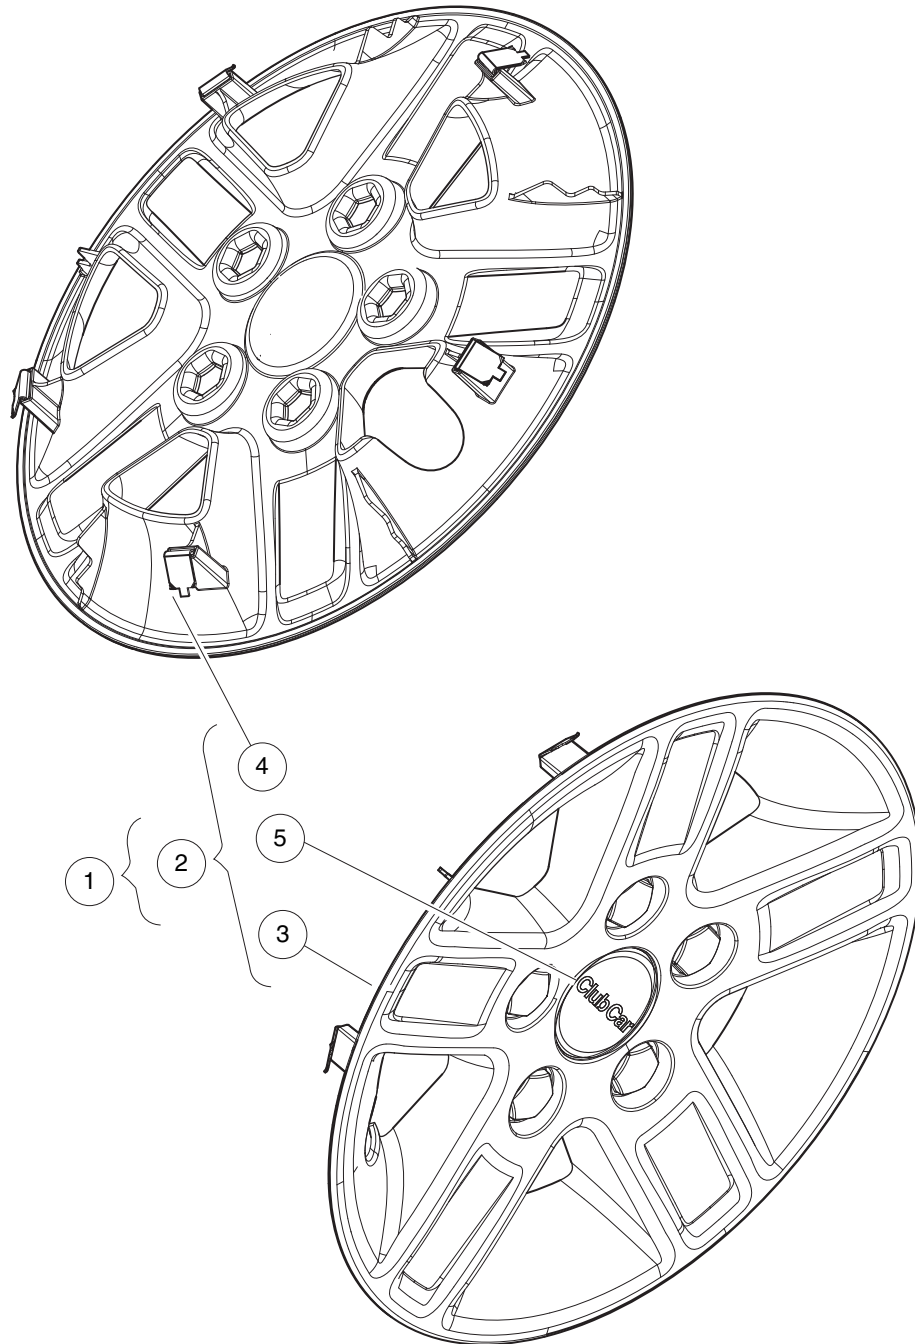

001350-002

WHEEL COVERS

ITEM	PART NO.	DESCRIPTION	QTY	2
		1 2 3 4		G
1	<u>105106501</u>	Kit, Wheel Cover, 10x6" (includes item 2)	1	E
2	<u>105106301</u>	Asm, Whl Cover, 5 Spoke, 10x6" (includes items 3 through 5)	4	
3	N/A	Wheel Cover, 5 Spoke, 10x7"	1	
4	105106101	Wheel Cover, Clip	5	
5	105106201	Decal, Wheel Cover, Club Car	1	

2

G

E

DECALS

3

G

E

WARNING

Unintended vehicle movement may cause severe injury or death. Before using vehicle, read owner's manual and vehicle safety warnings.

Before leaving vehicle:

- Engage park brake to lock wheels.
- Place vehicle in NEUTRAL.
- Turn key to OFF and remove key.

105046101

WARNING

UNINTENDED MOVEMENT, ROLLOVER, OR FALLING OUT CAN CAUSE SERIOUS INJURY OR DEATH.

- Vehicle to be operated by licensed and authorized persons only.
- Use in authorized areas only. Do not operate on public roads.
- One (1) person per bucket seat maximum.
- Two (2) persons per bench seat maximum.
- Operate from driver's seat only.
- Do not start vehicle until all occupants are fully seated.
- Drive slowly in turns and straight up and down slopes.
- Remain fully seated while moving.
- Hold on and keep entire body inside vehicle while moving.
- Never attempt jumps and avoid extreme braking in reverse.
- Do not leave children unattended in vehicle at any time.
- Children requiring a child safety seat must not ride in vehicle.
- Never operate under the influence of alcohol or drugs.

104026801

1

2

3

4

5

6

WARNING

CRUSH AREA

101609401

STAY CLEAR

WARNING

VEHICLE ROLLOVER CAN CAUSE SERIOUS INJURY OR DEATH.

Operate vehicle only:

- On cart paths or improved surfaces.
- With 6-ply rated, 20x10-10 tires.
- With 28 to 32 psig (193 to 221 kPa) tire pressure checked daily.
- With all compartment loads equally distributed.

105185901

VEHICLE LOADING

Read owner's manual, supplement, and warnings on vehicle.


- Vehicle rated capacity - 850 lbs. (385.6 kg) on level surface only. Weight to include driver, passenger, and total cargo load.
- Maximum cargo load - 450 lbs. (204.1 kg). Weight to include total cargo load in ALL storage locations.
- Avoid top heavy loads.
- Cargo should be evenly distributed in the beverage unit, as far forward as possible, and secured.
- For vehicle stability, when fully loaded, drive slowly and avoid stopping on or backing down steep hills.
- When driving on uneven terrain or down steep hills, reduce speed and load.

CC1 102278901

2904

DECALS – CAFÈ EXPRESS

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>101609401</u>	Decal, Crush Area Warning	2	
2	<u>101825101</u>	Decal, Off/On	1	
3	<u>102278901</u>	Decal, Loading -cafe Express	1	
4	<u>104026801</u>	Decal, Oc, Warning, Ca	1	
5	<u>105046101</u>	Decal, Op, Instructions, Ca	1	
6	<u>105185901</u>	Decal, Warn Rollover CafÈ	1	

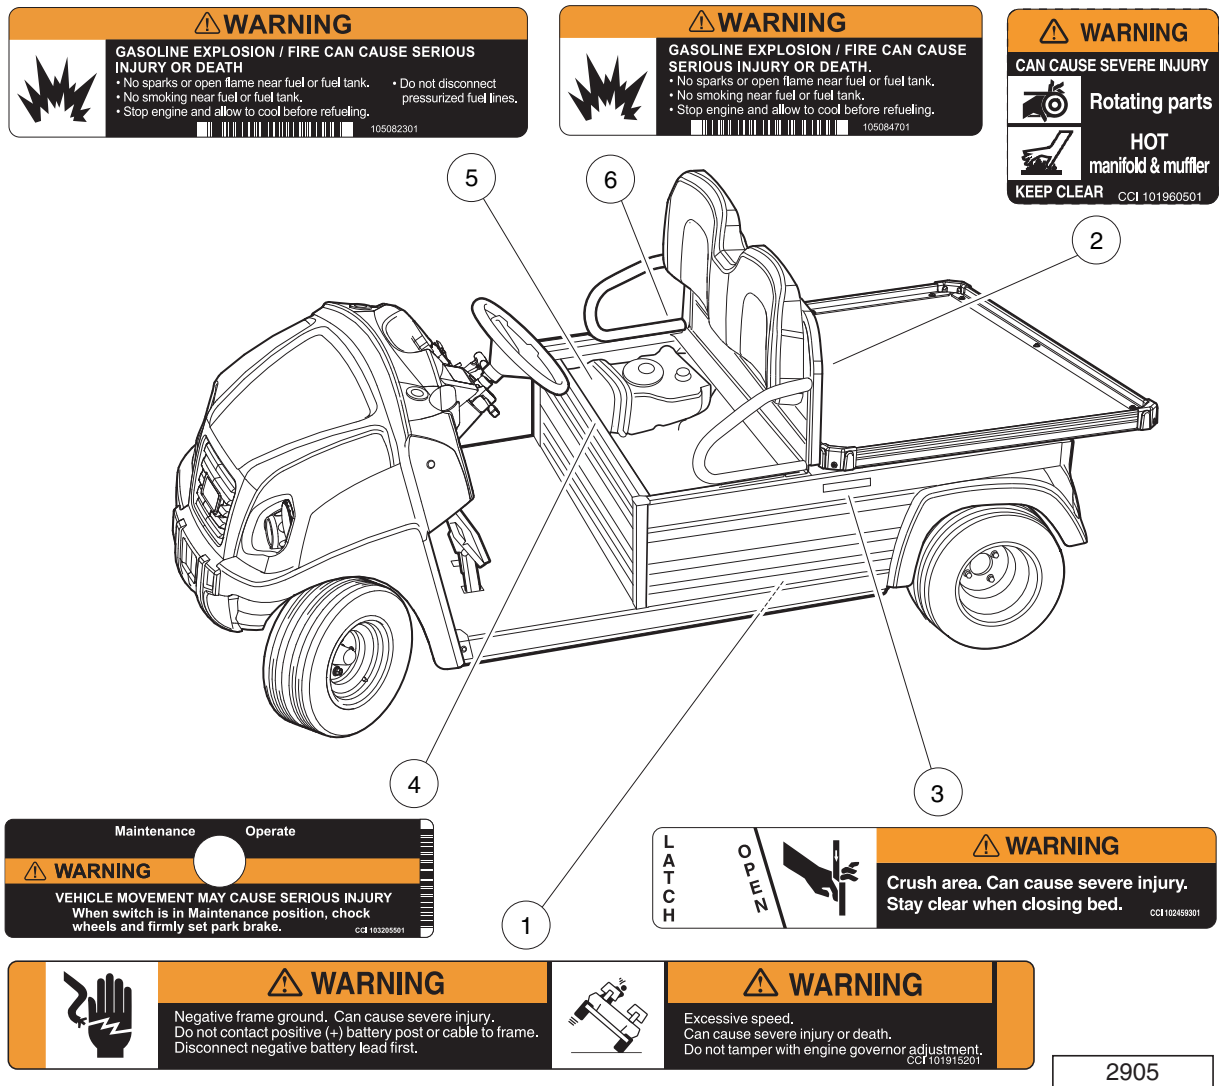


DECALS – CAFÈ EXPRESS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>101915201</u>	Decal, Frame Ground and Governor Warning	1	
2	<u>101960501</u>	Decal, Rotating Parts/Hot Manifold	1	
3	<u>102459301</u>	Decal, Bed Crush Area Warning	1	
4	<u>103205501</u>	Decal, Maintenance/Operate Switch	1	
5	<u>105082301</u>	Decal, Warn, Gas Pressure	1	
6	<u>105084701</u>	Decal, Warn Gas Side Fill	1	



DECALS – CAFÈ EXPRESS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>1011962</u>	Decal, Refreshment Center	2	
2	<u>101553901</u>	Decal, Bed Load Warning	1	
3	<u>102160601</u>	Pin Removal Warning Decal	2	
4	102175901	Decal, Consumable Ice	2	
5	105185902	Decal, Warn, Port, Ref, Ctr	2	
6	SVP203101	Decal, Proper Use Notice, CafÈ	2	

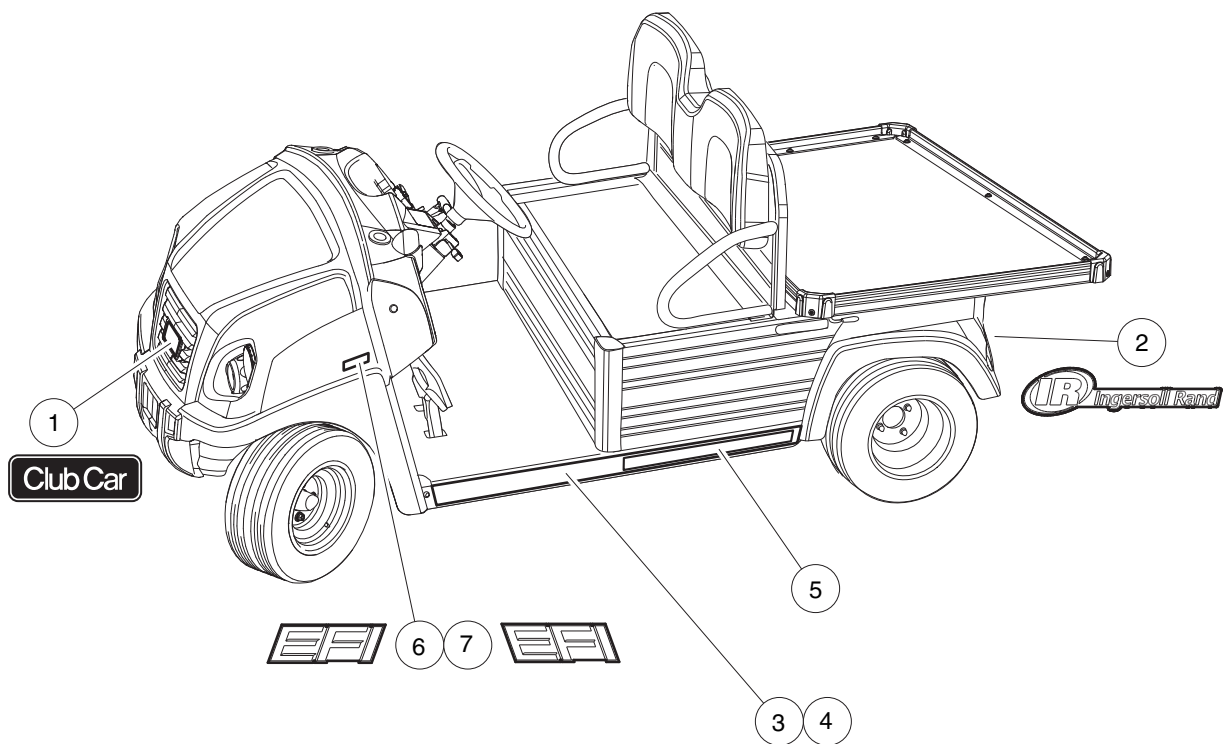

001026-001

BADGING DECALS – CAFÈ EXPRESS

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	<u>102883601</u>	Decal, Nameplate, CCI, Front	1	
2	<u>103234304</u>	Decal, Badge, Ir, Red	1	
3	<u>105115002</u>	Decal, Side Stringer, Medium	1	
4	<u>105115005</u>	Decal, R Side Stringer, Medium	1	
5	<u>105152801</u>	Decal, Branding, Carryall	2	
6	<u>105153301</u>	Decal, Efi, Italic, Lh	1	
7	<u>105153302</u>	Decal, Efi, Italic, Rh	1	

3


G

E

LIGHTS, CONTROLS, AND INDICATORS

4


G

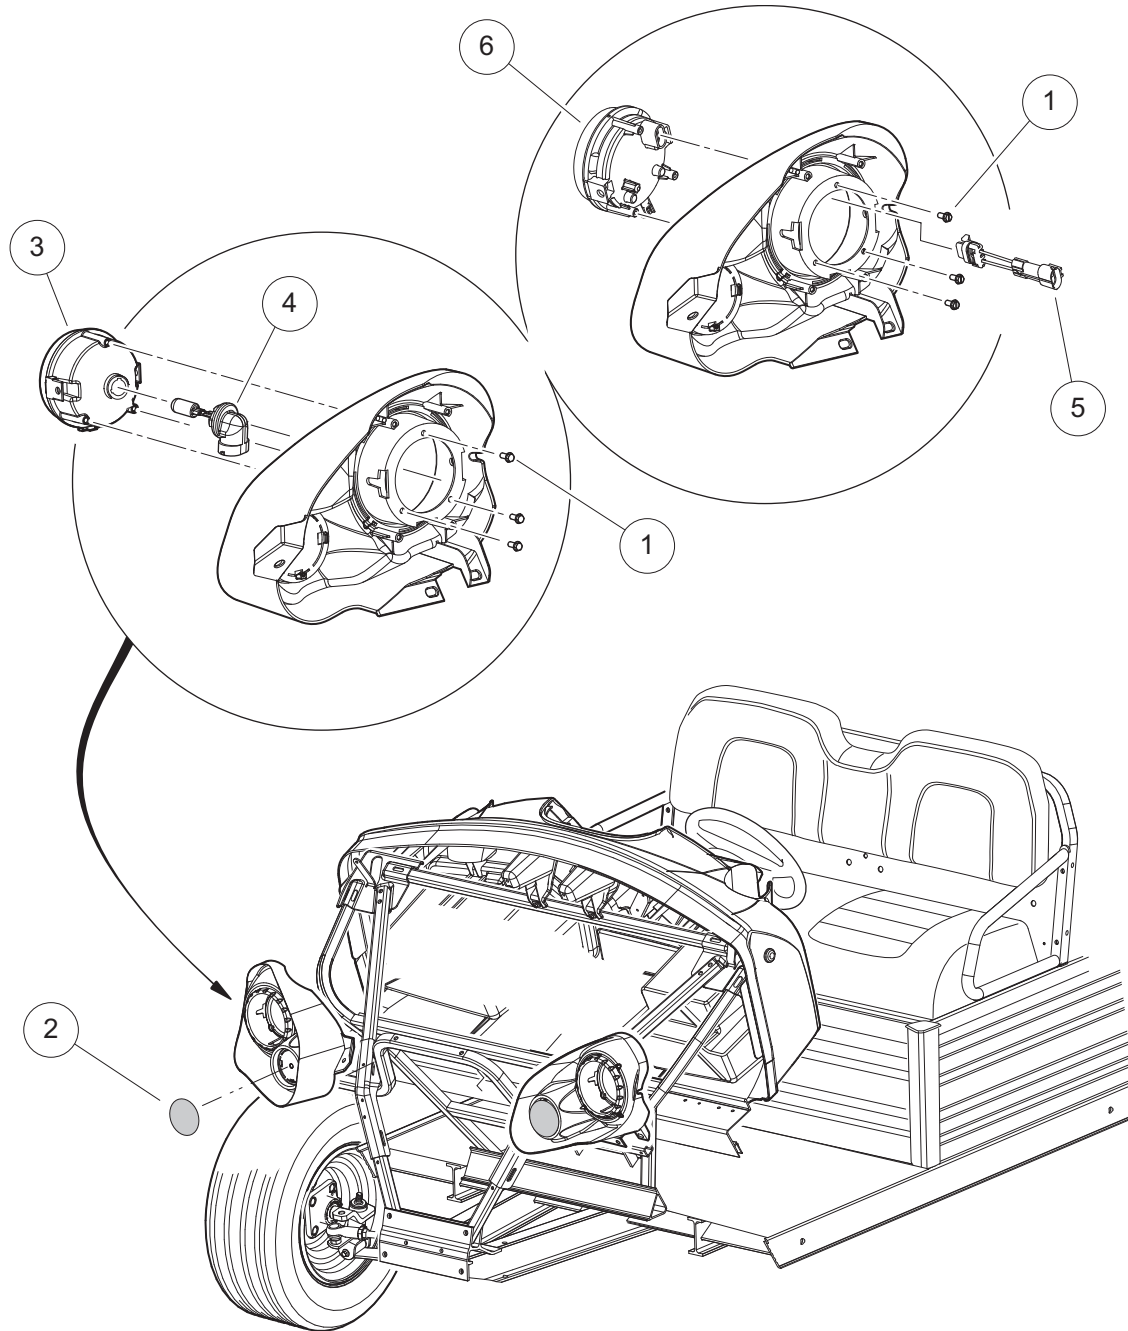

001370-002

HEADLIGHTS

ITEM	PART NO.	DESCRIPTION	QTY	4	G
		1 2 3 4			
1	<u>101850301</u>	Screw, #12-16 X 0.50 Washer-Head Hi-Lo	6		
2	<u>105036801</u>	Reflector, Decal, 3.20", Amber	2		
3	<u>105073401</u>	Hdlight, Round, 4.5", Utl	2		
4	<u>105093801</u>	Bulb, Halogen, 862	2		
5	<u>47579923001</u>	Jmpr, Head Lt, Led, Ca	2		
6	<u>47583907001</u>	Headlight, Led, 4.5", Ca	2		
		Note: Item 5 only applies to vehicles with LED headlights.			

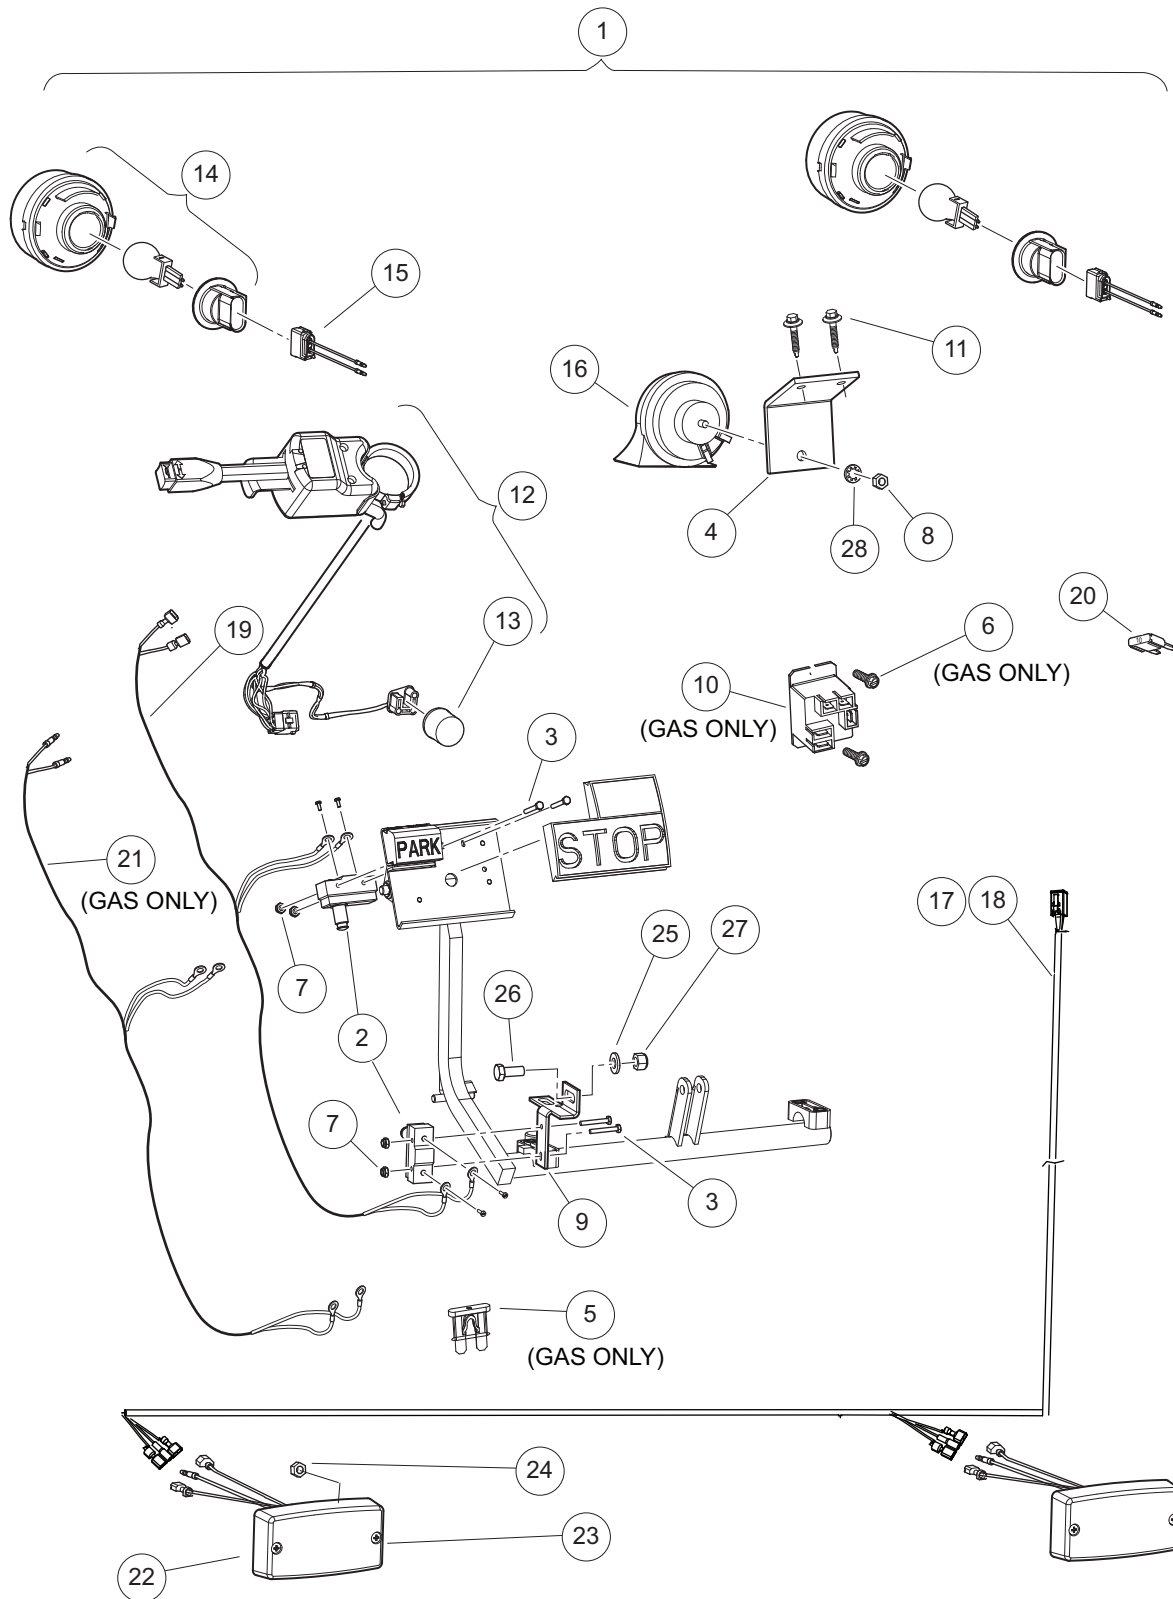


001368-002

HORN, TURN SIGNALS, AND TAILLIGHTS – ELECTRIC AND GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>105122808</u>	Kit, Horn/Tail Light/Turn (includes items 2 through 28)	1
2	<u>1011439</u>	Switch, Limit	2
3	<u>1011557</u>	Screw, #6-32 X 1.00 Hex-Head Machine	4
4	<u>1011825</u>	Horn Bracket	1
5	<u>1012295</u>	Fuse, 10-Amp	1
6	<u>1016849</u>	Screw, #4-24 X 0.33, Pan-Head, Machine	2
7	<u>101932201</u>	Locknut, #6-32 Nylon	4
8	<u>101955101</u>	Nut, M6 Hex	1
9	<u>101957101</u>	Bracket, Brake Light Switch	1
10	<u>102199001</u>	Relay, 12-Volt	1
11	<u>102297125</u>	Screw, M6-1.0x25.4, Thread-Forming, SEMS	2
12	<u>102517501</u>	Turn Signal Asm (includes item 13)	1
13	<u>102546401</u>	Flasher Unit, Prec	1
14	<u>102894503</u>	Light, Turn Sig, Round 3", Utl	2
15	<u>103245001</u>	Jumper, Turn Signal, Ca/xrt/hu	2
16	<u>103484301</u>	Horn, 12v, Gnd Isolated	1
17	<u>105108201</u>	Harness, Tail Light, Utility, Short	1
18	<u>105108301</u>	Harness, Tail Light, Utility, Long	1
19	<u>105108401</u>	Harness, Brk, Pedal Switch Utl	1
20	<u>105114806</u>	Fuse, Mini, Atm, 10 Amp	1
21	<u>105135201</u>	Jumper, Hill Brake, Switch	1
22	<u>105165801</u>	Lamp, Stop/trn/tail, Footdeck	2
23	<u>105190601</u>	Screw, #8-32 X 0.625, Clr Znc	4
24	<u>105190701</u>	Nut, Flanged, #8-32, Serrated	4
25	<u>1241</u>	Washer, 5/16 Type A Flat	1
26	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1
27	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2
28	<u>7820</u>	Washer, 5/16 Internal-Tooth	1
Note: 1051082, Harness, Tail Light, Utility, Short, fits the following vehicles with serial prefix: MA, MB, MC, MD, ME, MF, MK, ML, MM, MP, MU.			

4

G

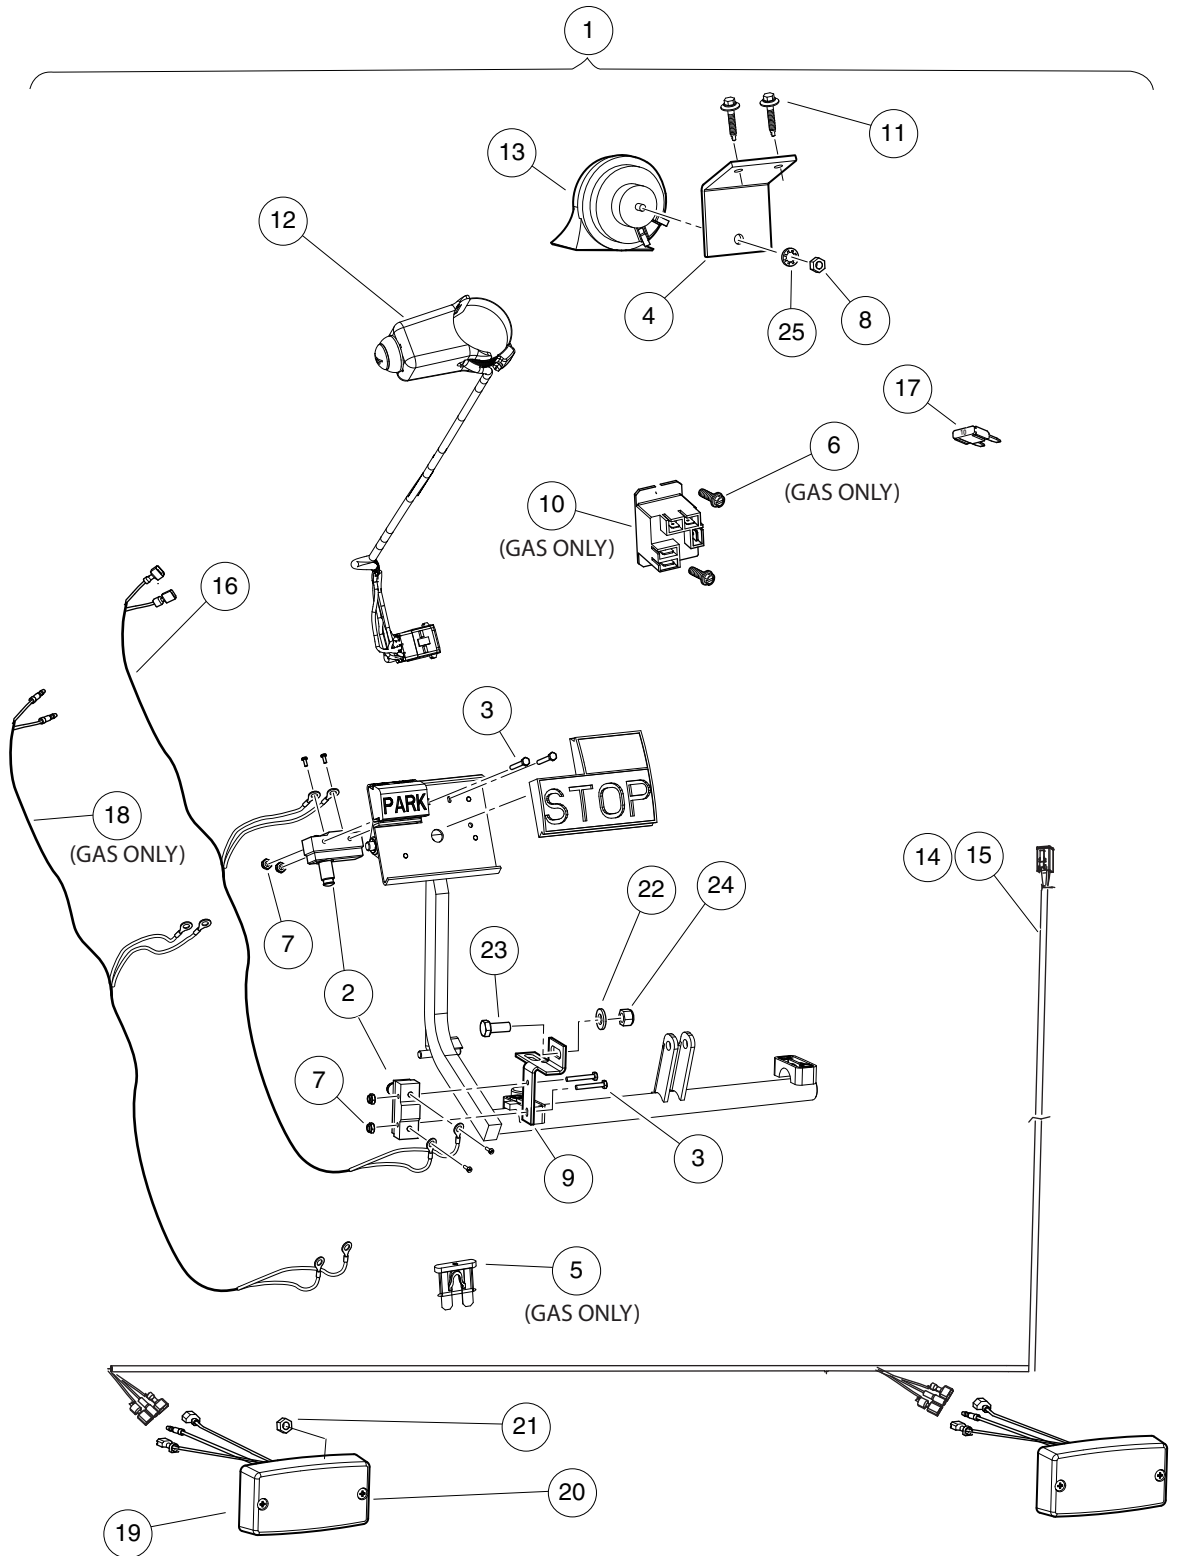

001367-002

HORN AND TAIL LIGHT KIT – ELECTRIC AND GASOLINE VEHICLES



ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>105122807</u>	Kit, Horn/Tail Light/Turn (includes items 2 through 25)	1
2	<u>1011439</u>	Switch, Limit	2
3	<u>1011557</u>	Screw, #6-32 X 1.00 Hex-Head Machine	4
4	<u>1011825</u>	Horn Bracket	1
5	<u>1012295</u>	Fuse, 10-Amp	1
6	<u>1016849</u>	Screw, #4-24 X 0.33, Pan-Head, Machine	2
7	<u>101932201</u>	Locknut, #6-32 Nylon	4
8	<u>101955101</u>	Nut, M6 Hex	1
9	<u>101957101</u>	Bracket, Brake Light Switch	1
10	<u>102199001</u>	Relay, 12-Volt	1
11	<u>102297125</u>	Screw, M6-1.0x25.4, Thread-Forming, SEMS	2
12	<u>102517601</u>	Subasm, Horn Button Harness	1
13	<u>103484301</u>	Horn, 12v, Gnd Isolated	1
14	<u>105108201</u>	Harness, Tail Light, Utility, Short	1
15	<u>105108301</u>	Harness, Tail Light, Utility, Long	1
16	<u>105108401</u>	Harness, Brk, Pedal Switch Utl	1
17	<u>105114806</u>	Fuse, Mini, Atm, 10 Amp	1
18	<u>105135201</u>	Jumper, Hill Brake, Switch	1
19	<u>105165801</u>	Lamp, Stop/trn/tail, Footdeck	2
20	<u>105190601</u>	Screw, #8-32 X 0.625, Clr Znc	4
21	<u>105190701</u>	Nut, Flanged, #8-32, Serrated	4
22	<u>1241</u>	Washer, 5/16 Type A Flat	1
23	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1
24	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1
25	<u>7820</u>	Washer, 5/16 Internal-Tooth	1
Note: <u>105108201</u> Harness, Tail Light, Utility, Short, fits the following vehicles with serial prefix: MA, MB, MC, MD, ME, MF, MK, ML, MM, MP, MU.			

4

G

4


G

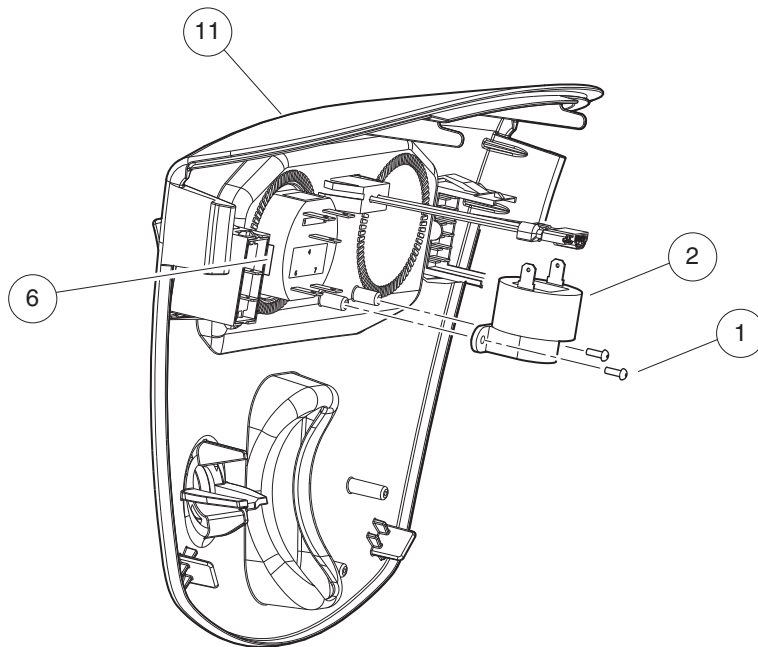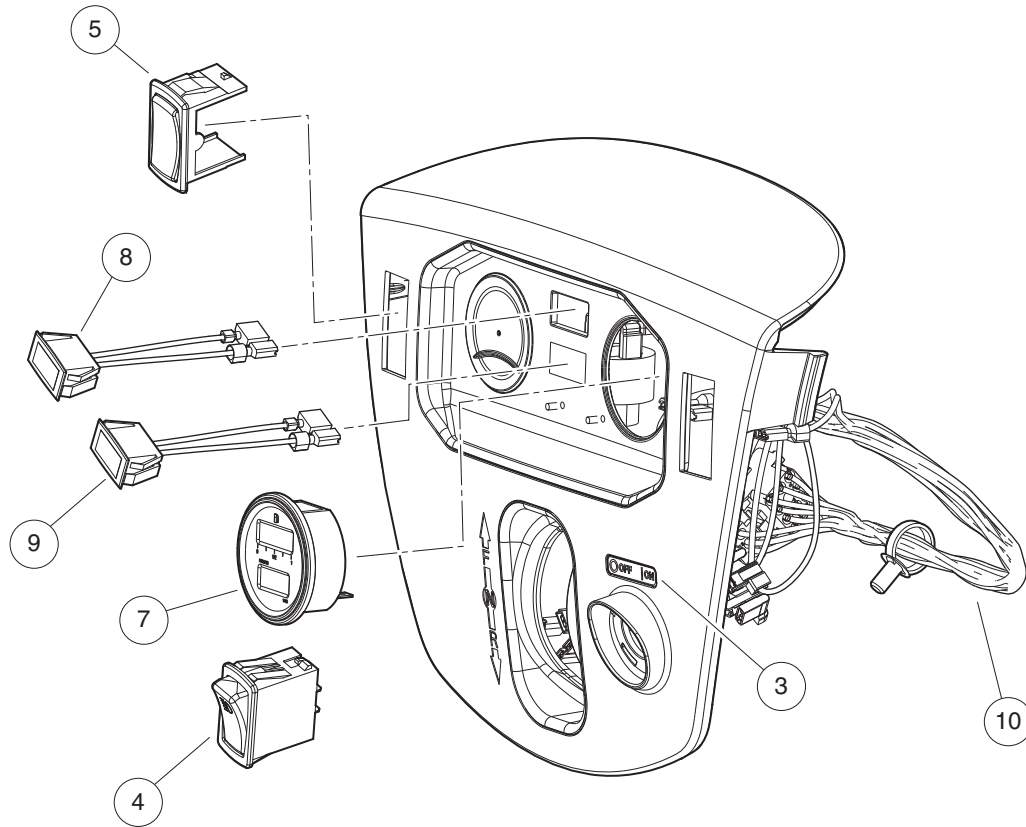

001372-002

INSTRUMENT PANEL – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	4	G
		1 2 3 4			
1	<u>1016849</u>	Screw, #4-24 X 0.33, Pan-Head, Machine	2		
2	<u>1016851</u>	Multi-Purpose Buzzer (9-48 VDC)	1		
3	<u>101825101</u>	Decal, Off/On	1		
4	<u>102869401</u>	Switch, Rocker, Light	1		
5	<u>103180101</u>	Cover, Hole, Switch, Rocker	1		
6	<u>103348201</u>	Clip, Meter, Round	1		
7	<u>103348602</u>	Gauge, Fuel-hour,sep Gnd, Ds	1		
8	<u>105037101</u>	Light, Oil (LED)	1		
9	47598441001	Light, Dash, Led, Mil	1		
10	47609057001	Harness, Ip, Gas, Ca, Com	1		
11	47631907002	Instrument Panel, Ca, Gas, Uv	1		

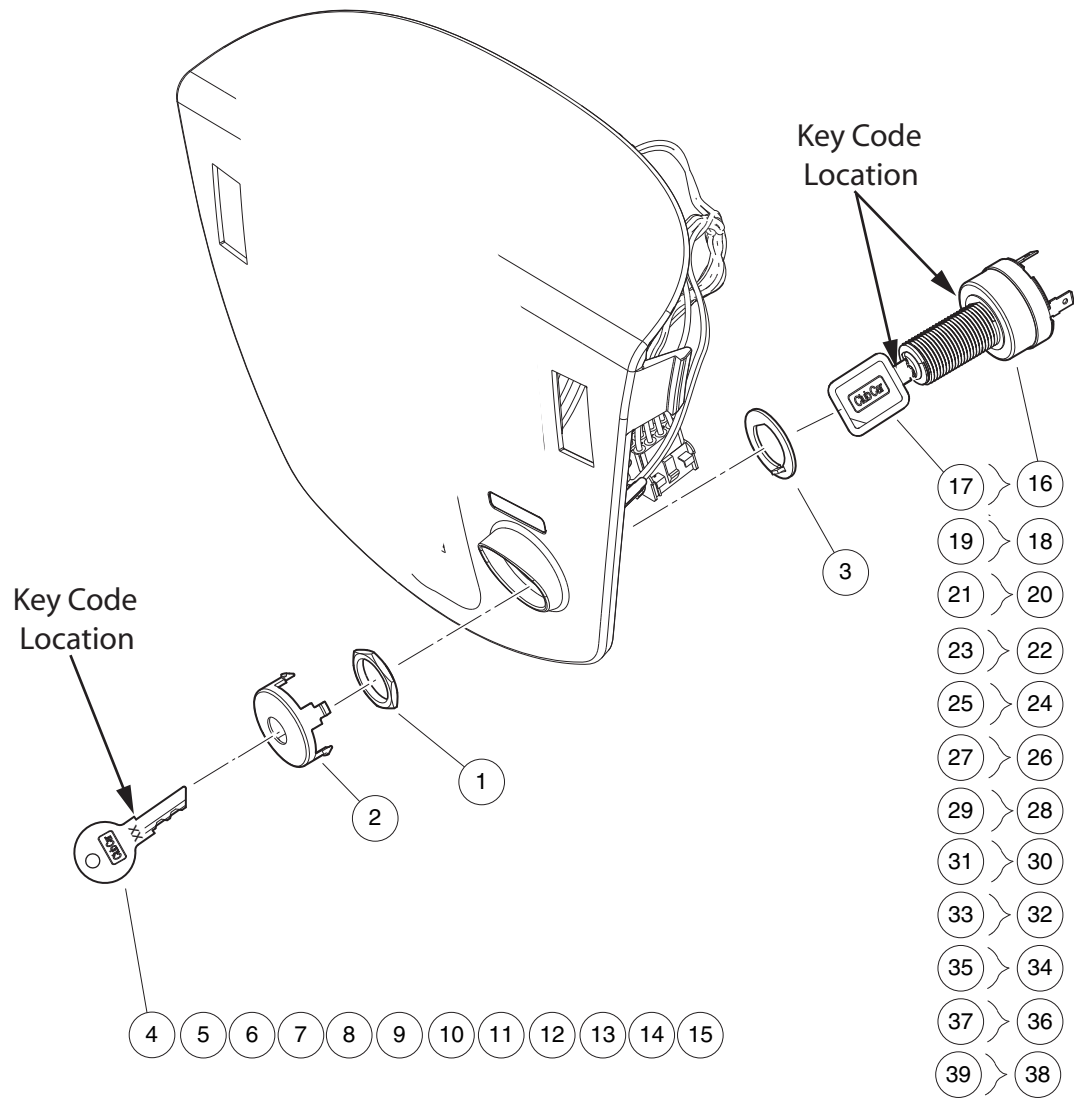


001355-001

KEYSWITCH, PEDAL-START – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>101830701</u>	Nut, Key Switch	1
2	<u>101834502</u>	Cap, Black Key Switch	1
3	<u>101851101</u>	Washer, Key Switch	1
4	<u>101974701</u>	Key, Uncommon 1a	1
5	<u>101974702</u>	Key, Uncommon 1b	1
6	<u>101974703</u>	Key, Uncommon 1c	1
7	<u>101974704</u>	Key, Uncommon 1d	1
8	<u>101974705</u>	Key, Uncommon 2a	1
9	<u>101974706</u>	Key, Uncommon 2b	1
10	<u>101974707</u>	Key, Uncommon 2c	1
11	<u>101974708</u>	Key, Uncommon 2d	1
12	<u>101974709</u>	Key, Uncommon 1e	1
13	<u>101974710</u>	Key, Uncommon 1f	1
14	<u>101974711</u>	Key, Uncommon 2e	1
15	<u>101974712</u>	Key, Uncommon 2f	1
16	<u>105081801</u>	Keysw, Uncom, 4t, Off/on 1a, G (includes item 17)	1
17	<u>105068001</u>	Key, Uncommon, Padded 1a	1
18	<u>105081802</u>	Keysw, Uncom, 4t, Off/on 1b, G (includes item 19)	1
19	<u>105068002</u>	Key, Uncommon, Padded 1b	1
20	<u>105081803</u>	Keysw, Uncom, 4t, Off/on 1c, G (includes item 21)	A/R
21	<u>105068003</u>	Key, Uncommon, Padded 1c	1
22	<u>105081804</u>	Keysw, Uncom, 4t, Off/on 1d, G (includes item 23)	1
23	<u>105068004</u>	Key, Uncommon, Padded 1d	1
24	<u>105081805</u>	Keysw, Uncom, 4t, Off/on 1e, G (includes item 25)	1
25	<u>105068005</u>	Key, Uncommon, Padded 1e	1
26	<u>105081806</u>	Keysw, Uncom, 4t, Off/on 1f, G (includes item 27)	1
27	<u>105068006</u>	Key, Uncommon, Padded 1f	1
28	<u>105081807</u>	Keysw, Uncom, 4t, Off/on 2a, G (includes item 29)	1
29	<u>105068007</u>	Key, Uncommon, Padded 2a	1
30	<u>105081808</u>	Keysw, Uncom, 4t, Off/on 2b, G (includes item 31)	1
31	<u>105068008</u>	Key, Uncommon, Padded 2b	1
32	<u>105081809</u>	Keysw, Uncom, 4t, Off/on 2c, G (includes item 33)	1
33	<u>105068009</u>	Key, Uncommon, Padded 2c	1
34	<u>105081810</u>	Keysw, Uncom, 4t, Off/on 2d, G (includes item 35)	1
35	<u>105068010</u>	Key, Uncommon, Padded 2d	1
36	<u>105081811</u>	Keysw, Uncom, 4t, Off/on 2e, G (includes item 37)	1
37	<u>105068011</u>	Key, Uncommon, Padded 2e	1
38	<u>105081812</u>	Keysw, Uncom, 4t, Off/on 2f, G (includes item 39)	1
39	<u>105068012</u>	Key, Uncommon, Padded 2f	1
Note: Keyswitch <u>105081801</u>, is standard for pedal-start gasoline vehicles equipped with a cab. Keyswitch <u>105081802</u>, is standard for pedal-start gasoline vehicles without a cab. Keyswitches <u>105081803</u> through <u>105081812</u> allows different key code combinations for pedal-start gasoline fleet vehicles.			

4


G

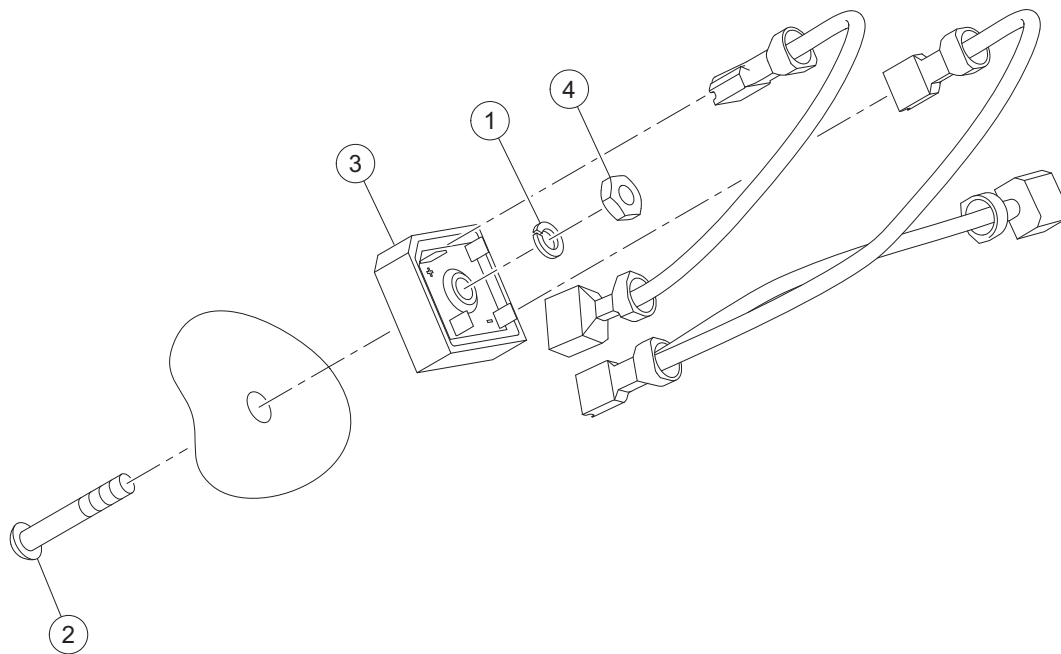

001365-003

VOLTAGE LIMITER – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	<u>1016</u>	Lockwasher, #10 Split	1	
2	<u>103821301</u>	Screw, Panhead #10-32 X 1.75	1	
3	<u>47604303001</u>	Voltage Limiter, Gas	1	
4	<u>7893</u>	Nut, #10-32 Hex	1	

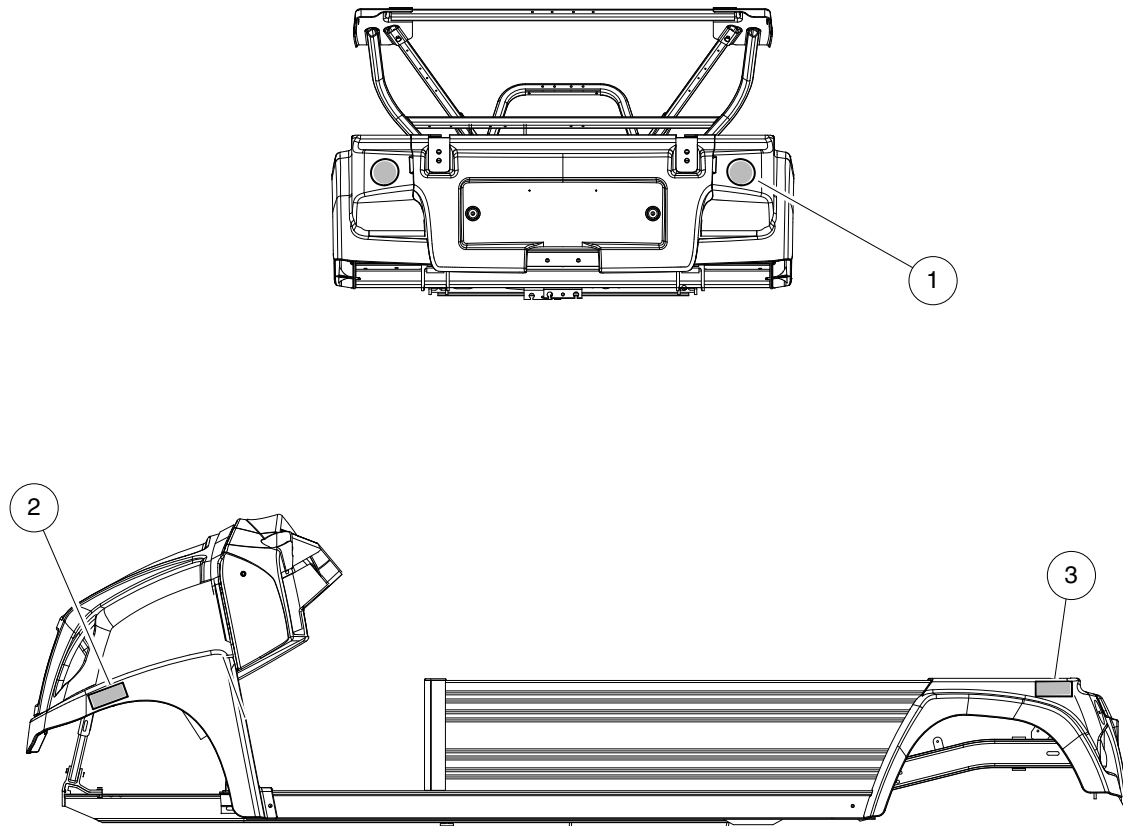

001362-001

REFLECTORS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	103832501	Reflector, Red, Round, Sae	2
2	103832601	Reflector, Yell, Rect, Sae	2
3	105144801	Reflector, Red, Rect, Sae	2

4

G

4


G

BRAKES, PEDALS, AND CABLE ASSEMBLIES

5

G

E

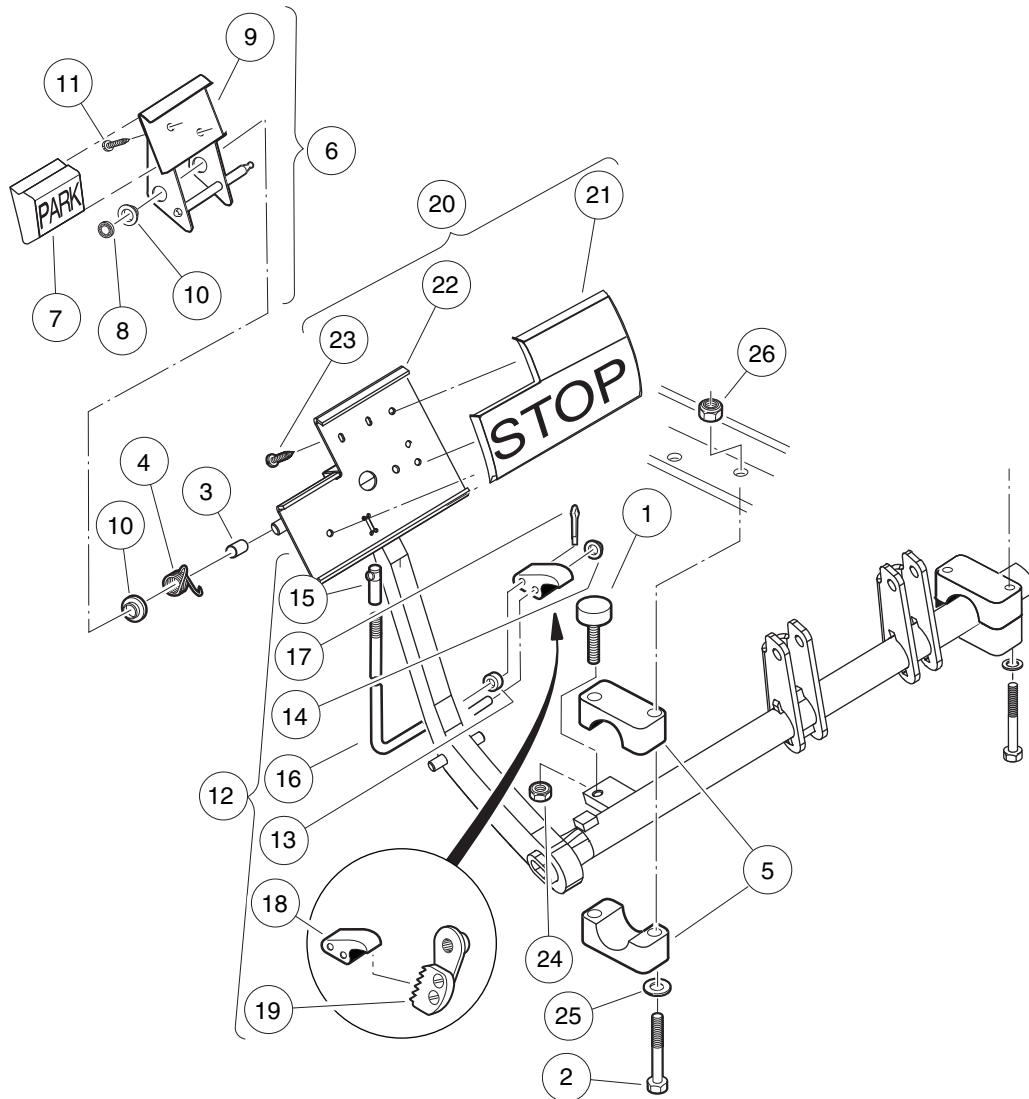


001405-002

BRAKE PEDAL ASSEMBLY – VEHICLES WITH 2-WHEEL BRAKES AND 4-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1010878</u>	Bumper, Rubber	1	
2	<u>1010921</u>	Screw, 5/16-18 X 2.50 Hex Cap	4	
3	<u>1010927</u>	Hill Brake Spacer	1	
4	<u>1010933</u>	Spring, Hill Brake Torsion	1	
5	<u>1011402</u>	Package, Brake Mounting Block	1	
6	<u>1011418</u>	Kit, Hill Brake Pedal (includes items 7 through 11)	1	
7	<u>1013870</u>	Pad, Hill Brake	1	
8	<u>1013876</u>	Pushnut, 3/8	1	
9	N/A	Hill Brake Weld Assembly	1	
10	<u>1032</u>	Bushing, Nylon	2	
11	7716	Screw, #10-16 Type AB, Sheet Metal	2	
12	<u>101187702</u>	Kit, Hill Brake Latch (includes items 13 through 19)	1	
13	<u>1010805</u>	Sleeve, Hill Brake Rod	1	
14	<u>1010877</u>	Pushnut, 3/8	1	
15	1010932	Ball Joint, 1/4-28	1	
16	N/A	Rod, Hill Brake	1	
17	<u>1017029</u>	Pin, Cotter, 7/64 x 1/2 Stainless-Steel	1	
18	N/A	Pawl, Hill Brake	1	
19	101918501	Ratchet Assembly	1	
20	<u>101878201</u>	Brake Pedal Kit (includes items 21 through 23)	1	
21	<u>1013869</u>	Pad, Brake Pedal	1	
22	N/A	Weldment, Brake Pedal, 2wr Std	1	
23	7716	Screw, #10-16 Type AB, Sheet Metal	3	
24	<u>1028</u>	Nut, 1/4-20 Hex	1	
25	<u>1241</u>	Washer, 5/16 Type A Flat	4	
26	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4	

ACCELERATOR PEDAL AND ROD ASSEMBLY – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1011694</u>	Accelerator Bracket and Bearing Assembly	2	
2	<u>1011931</u>	Washer, 1/4 Flat	1	
3	<u>1014007</u>	Washer, 1/4, Flat	4	
4	<u>1017378</u>	Cup, Spring	1	
5	<u>1017380</u>	Bumper, Spring Return	1	
6	<u>1017424</u>	Bearing, Pivot Support	1	
7	101796201	Spring, Accelerator Return	1	
8	<u>101817401</u>	Retainer, Spring	1	
9	101818801	Stud, 1/4-28 X 1.35 Ball	1	
10	<u>101861901</u>	Screw, 1/4-20 X 1.125 Hex Cap	4	
11	101918501	Ratchet Assembly	1	
12	<u>102026001</u>	Kit, Accelerator Pivot Rod Assembly (includes items 13 and 14)	1	
13	101919801	Spacer, Accelerator	1	
14	<u>102158901</u>	Pivot Rod Weldment	1	
15	<u>103865101</u>	Pedal, Accel, Insert	1	
16	<u>105100801</u>	Asm, Accel Rod, Utility (includes items 17 through 19)	1	
17	<u>1011084</u>	Nut, 1/4-28 Hex Jam	2	
18	<u>1011734</u>	Joint, Ball	2	
19	<u>105100401</u>	Rod, Accel, Utility, Adj	1	
20	<u>1241</u>	Washer, 5/16 Type A Flat	1	
21	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	1	
22	<u>334</u>	Washer, 3/8, Type A, Flat	2	
23	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	
24	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	4	
25	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1	
26	<u>8754</u>	Locknut, 3/8-16 Hex	2	

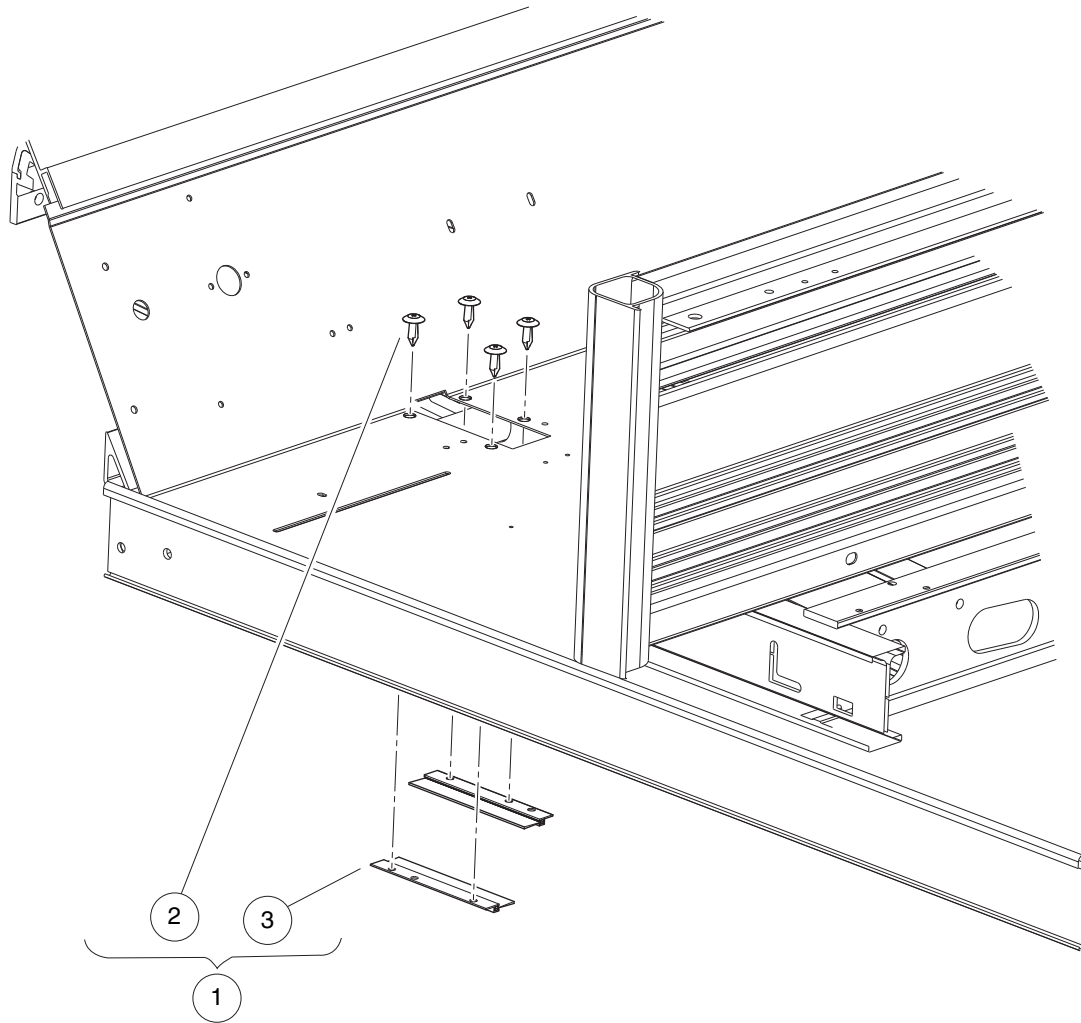

001418-001


PEDAL CLOSE-OUT KIT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>105149101</u>	Kit, Close Out, Pedal, Utl (includes items 2 and 3)	1
2	<u>102025701</u>	Screw, Tuflok Panel, 1/4	4
3	<u>105149201</u>	Asm, Brush, Pedal Close Out	2

5

G


E

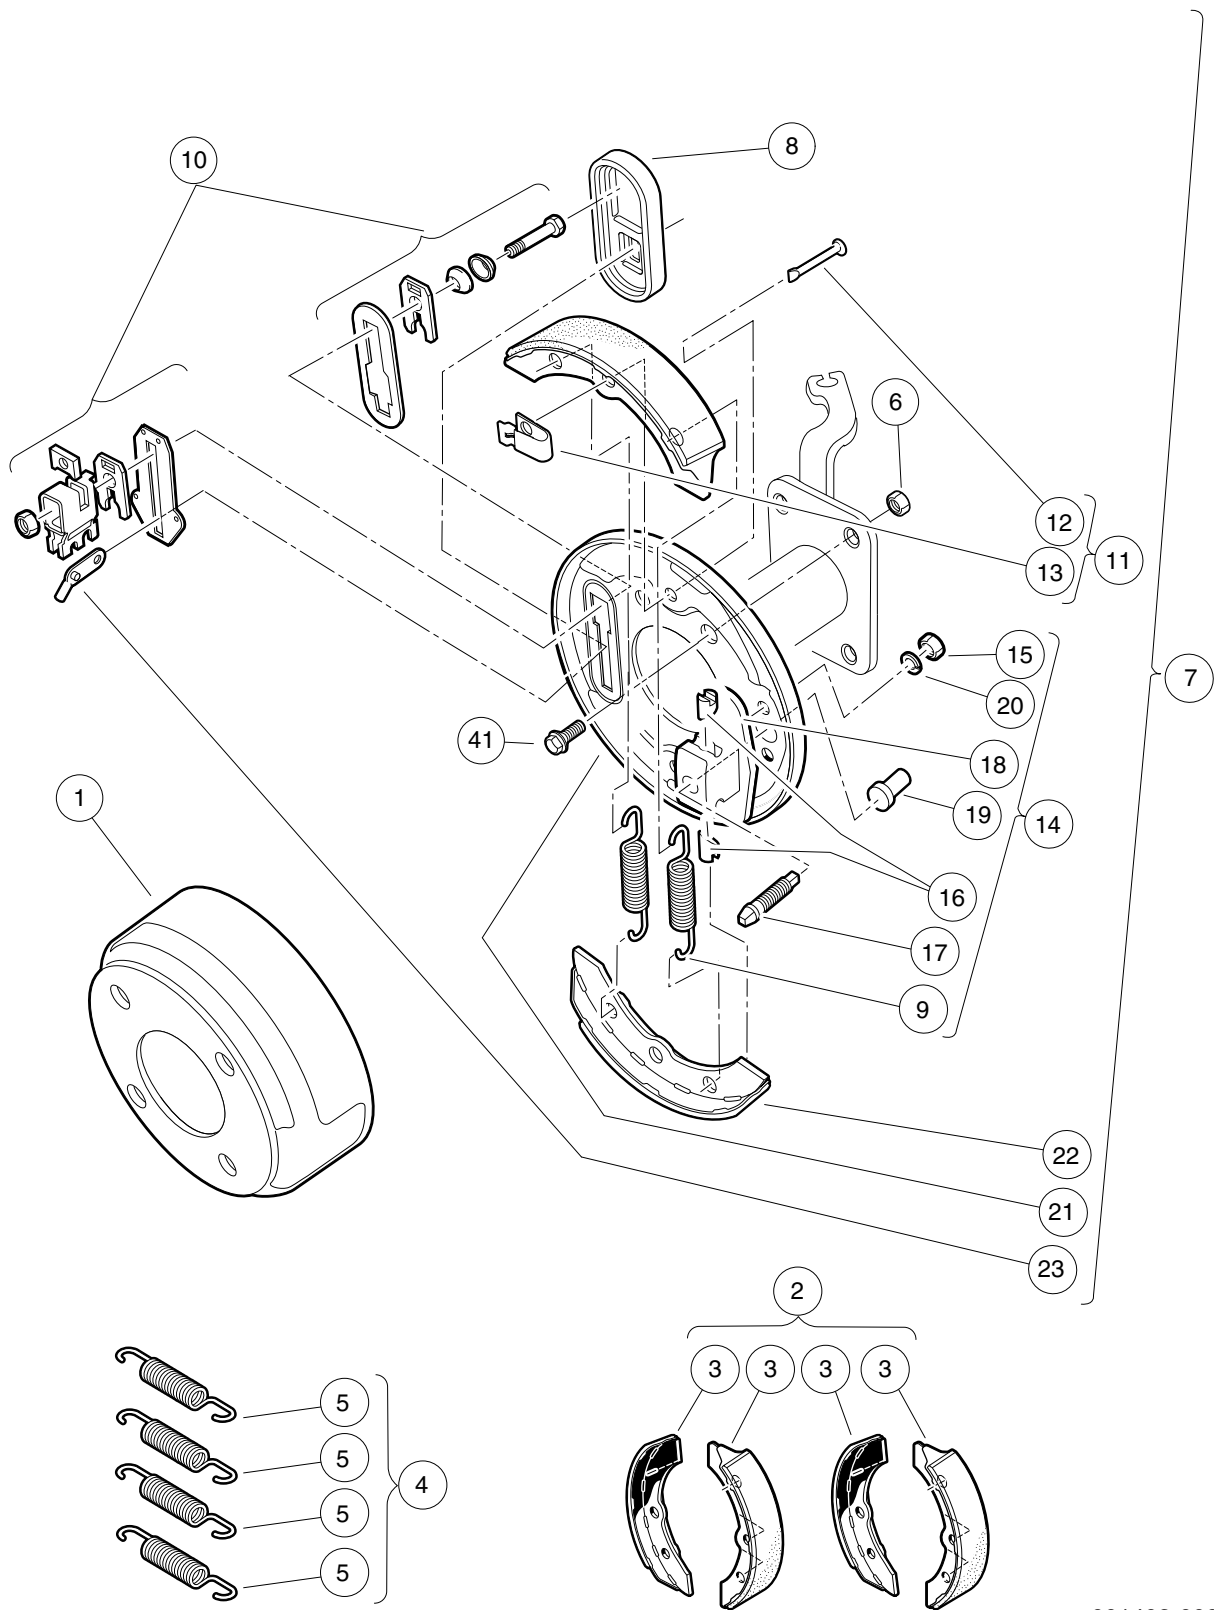

001402-002


FRONT BRAKE ASSEMBLY – VEHICLES WITH 4-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1011137</u>	Drum, Brake	2	
2	<u>101146302</u>	Kit, Non-Asbestos Brake Shoe (includes item 3)	1	
3	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	4	
4	<u>1011464</u>	Package, Brake Spring (includes item 5)	1	
5	1011314	Brake Spring	4	
6	<u>1013924</u>	Nut, 5/16-24, Hex Head Cone	8	
7	<u>1016557</u>	Cluster, Brake, Driver-Side (includes items 8 through 23)	1	
8	<u>1010850</u>	Dust Cover	1	
9	1011314	Brake Spring	2	
10	<u>1011465</u>	Kit, Brake Actuator	1	
11	<u>1011466</u>	Kit, Shoe Retainer (includes items 12 and 13)	1	
12	N/A	Pin	2	
13	N/A	Shoe Clamp Spring	2	
14	<u>1011467</u>	Kit, Anchor Body (includes items 15 through 20)	1	
15	<u>1011114</u>	Nut, M6-1.00 Hex	2	
16	1011298	Anchor Piston	2	
17	N/A	Adjustment Bolt	1	
18	N/A	Anchor Body Component	1	
19	<u>1011303</u>	Adjustment Bolt Cap	1	
20	<u>451</u>	Lockwasher, 1/4 Split	2	
21	1011494	Backing Plate, Left-Hand	1	
22	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2	
23	102860501	Arm, Brake Lever	1	
24	<u>1016573</u>	Cluster, Brake, Passenger-Side (includes items 25 through 40)	1	
25	<u>1010850</u>	Dust Cover	1	
26	<u>1011154</u>	Backing Plate, Right-Hand	1	
27	1011314	Brake Spring	2	
28	<u>1011465</u>	Kit, Brake Actuator	1	
29	<u>1011466</u>	Kit, Shoe Retainer (includes items 30 and 31)	1	
30	N/A	Pin	2	
31	N/A	Shoe Clamp Spring	2	
32	<u>1011467</u>	Kit, Anchor Body (includes items 33 through 38)	1	
33	<u>1011114</u>	Nut, M6-1.00 Hex	2	
34	1011298	Anchor Piston	2	
35	N/A	Adjustment Bolt	1	
36	N/A	Anchor Body Component	1	
37	<u>1011303</u>	Adjustment Bolt Cap	1	
38	<u>451</u>	Lockwasher, 1/4 Split	2	
39	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2	
40	102860501	Arm, Brake Lever	1	
41	<u>47542195001</u>	Bolt, Brake Cluster Mnt	8	
		Note: Passenger-side brake cluster (items 25-41) not shown. Components have a similar appearance to driver-side brake cluster components.		

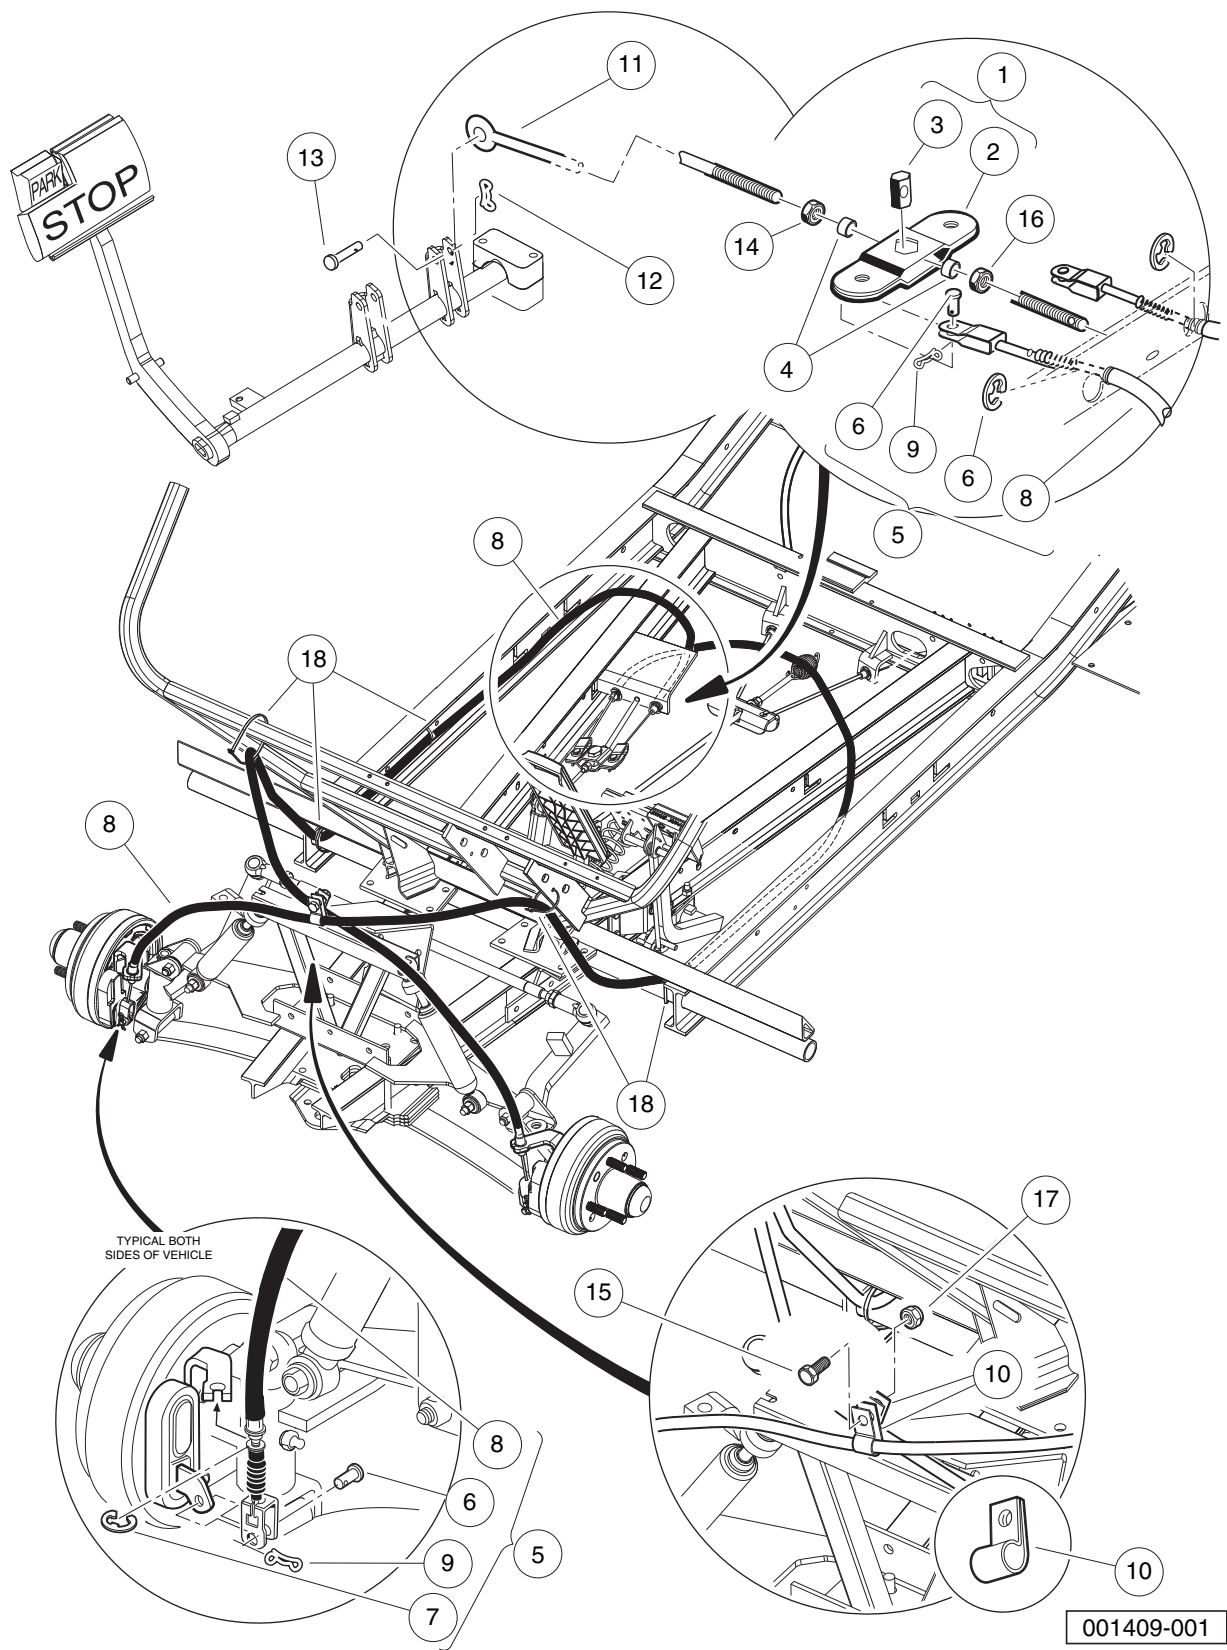


FRONT BRAKE CABLES AND EQUALIZER – GASOLINE VEHICLE WITH 4-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1017211</u>	Kit, Equalizer and Pivot Limiter (includes items 2 and 3)	1	
2	<u>1016319</u>	Equalizer Weld Assembly	2	
3	<u>1016320</u>	Equalizer, Pivot Limiter	1	
4	<u>101865301</u>	Spacer	2	
5	<u>101874601</u>	Kit, Brake Cable (includes items 6 through 9)	1	
6	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	4	
7	<u>1011779</u>	E-Clip, 1/2	4	
8	N/A	Brake Cable	2	
9	<u>102292801</u>	Pin, Bow Tie Locking - .072	4	
10	<u>101935301</u>	Clamp, Brake Cable	2	
11	<u>101953106</u>	Rod, Equalizer, 9.75"	1	
12	<u>102323101</u>	Pin, Bow Tie Locking	1	
13	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1	
14	<u>1242</u>	Nut, 5/16-18 Hex	1	
15	<u>320</u>	Screw, 3/8-16 X 1.00 Hex-Head Cap	1	
16	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	1	
17	<u>8754</u>	Locknut, 3/8-16 Hex	1	
18	<u>8990</u>	Tie Wrap, 8" Nylon	5	

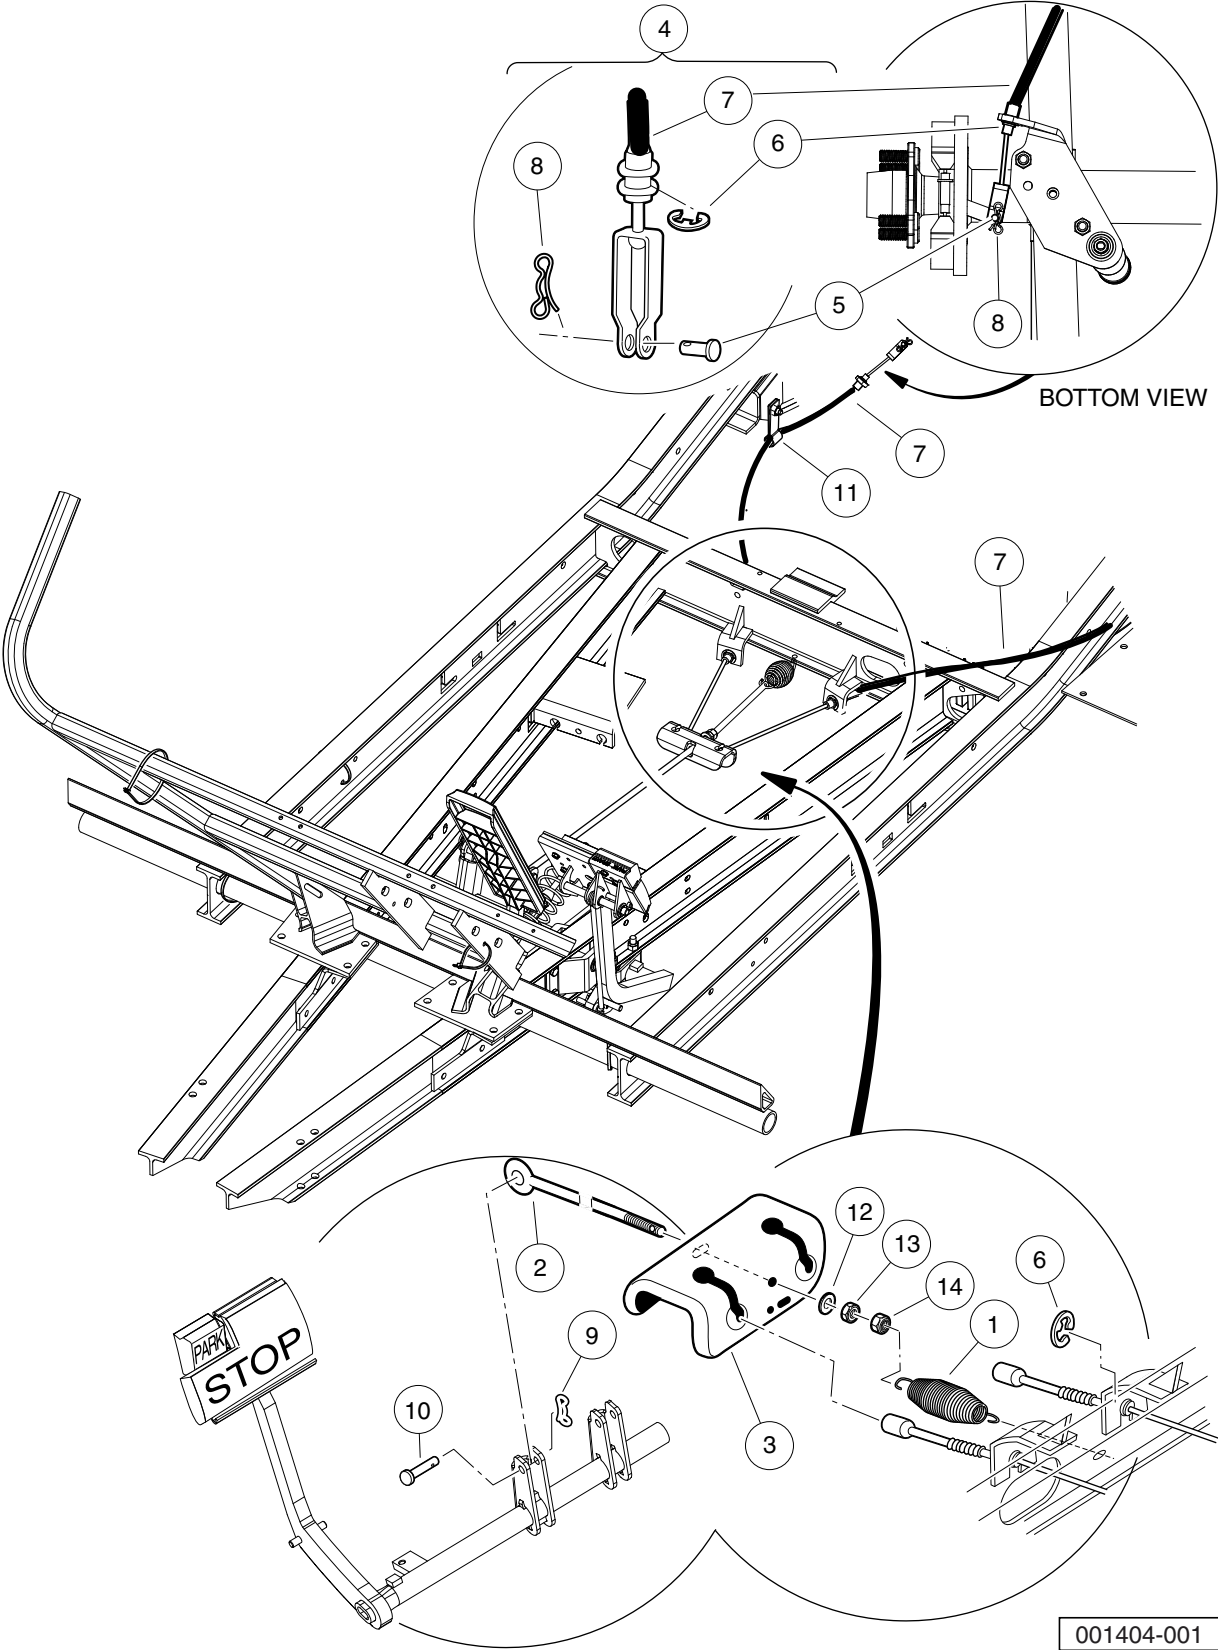

REAR BRAKE CABLES AND EQUALIZER – GASOLINE VEHICLE WITH 4-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1013531</u>	Spring, Brake Return	1	
2	<u>101953102</u>	Rod, Equalizer, 20.91 inch	1	
3	<u>101990801</u>	Equalizer Bracket	1	
4	<u>102166901</u>	Kit, Brake Cable Rear (includes items 5 through 8)	A/R	
5	<u>1010829</u>	Pin, Clevis, 5/16 X 3/4	2	
6	<u>1011779</u>	E-Clip, 1/2	4	
7	<u>102162601</u>	Cable, Brake	2	
8	<u>102292801</u>	Pin, Bow Tie Locking - .072	2	
9	<u>102323101</u>	Pin, Bow Tie Locking	1	
10	<u>102323201</u>	Pin, 3/8 X 1-5/16 Clevis	1	
11	<u>105143201</u>	Clamp, Cable, Brake, Sym, 2 In	2	
12	<u>1241</u>	Washer, 5/16 Type A Flat	5	
13	<u>1242</u>	Nut, 5/16-18 Hex	1	
14	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	5	

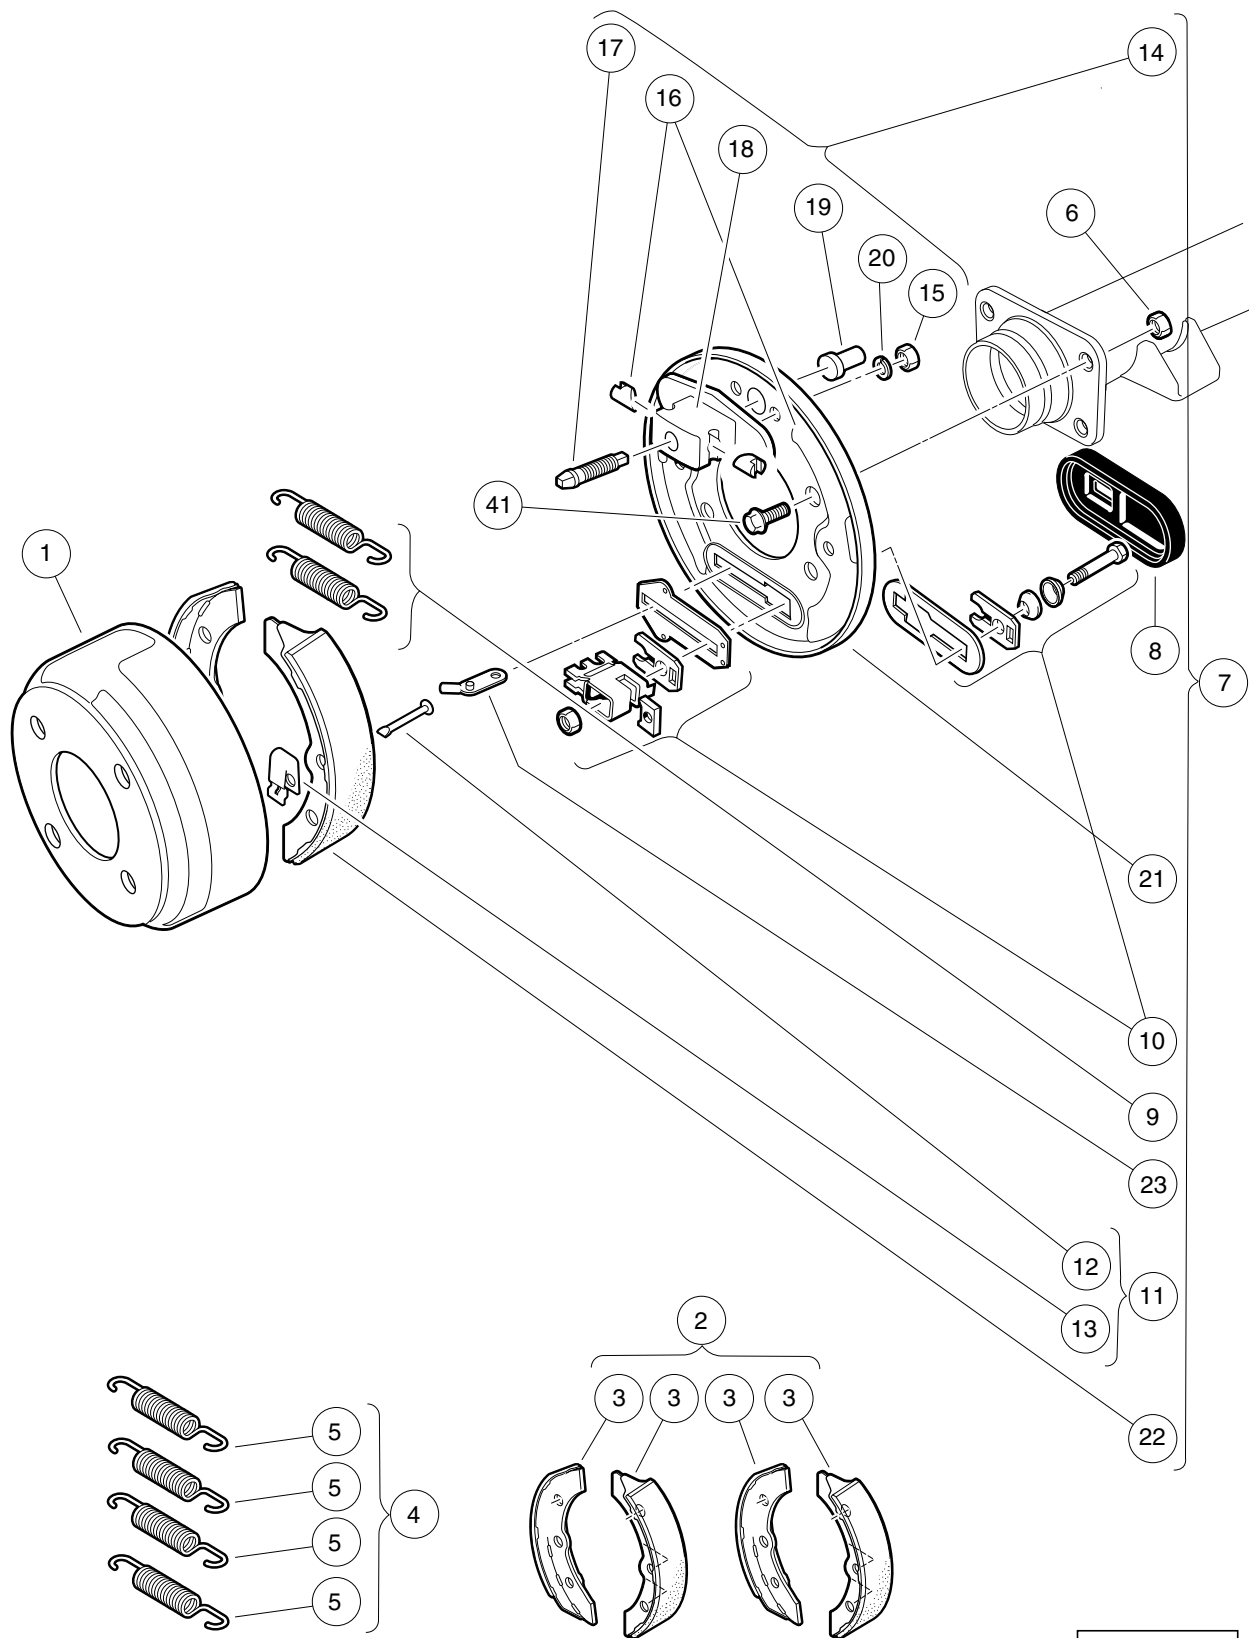

001403-004

REAR BRAKES, MANUALLY-ADJUSTED – GAS VEHICLES WITH 4-WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	<u>1011137</u>	Drum, Brake	2	
2	<u>101146302</u>	Kit, Non-Asbestos Brake Shoe (includes item 3)	1	
3	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	4	
4	<u>1011464</u>	Package, Brake Spring (includes item 5)	1	
5	1011314	Brake Spring	4	
6	<u>1013924</u>	Nut, 5/16-24, Hex Head Cone	8	
7	<u>1016557</u>	Cluster, Brake, Driver-Side (includes items 8 through 23)	1	
8	<u>1010850</u>	Dust Cover	1	
9	1011314	Brake Spring	2	
10	<u>1011465</u>	Kit, Brake Actuator	1	
11	<u>1011466</u>	Kit, Shoe Retainer (includes items 12 and 13)	1	
12	N/A	Pin	2	
13	N/A	Shoe Clamp Spring	2	
14	<u>1011467</u>	Kit, Anchor Body (includes items 15 through 20)	1	
15	<u>1011114</u>	Nut, M6-1.00 Hex	2	
16	1011298	Anchor Piston	2	
17	N/A	Adjustment Bolt	1	
18	N/A	Anchor Body Component	1	
19	<u>1011303</u>	Adjustment Bolt Cap	1	
20	<u>451</u>	Lockwasher, 1/4 Split	2	
21	1011494	Backing Plate, Left-Hand	1	
22	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2	
23	102860501	Arm, Brake Lever	1	
24	<u>1016573</u>	Cluster, Brake, Passenger-Side (includes items 25 through 40)	1	
25	<u>1010850</u>	Dust Cover	1	
26	<u>1011154</u>	Backing Plate, Right-Hand	1	
27	1011314	Brake Spring	2	
28	<u>1011465</u>	Kit, Brake Actuator	1	
29	<u>1011466</u>	Kit, Shoe Retainer (includes items 30 and 31)	1	
30	N/A	Pin	2	
31	N/A	Shoe Clamp Spring	2	
32	<u>1011467</u>	Kit, Anchor Body (includes items 33 through 38)	1	
33	<u>1011114</u>	Nut, M6-1.00 Hex	2	
34	1011298	Anchor Piston	2	
35	N/A	Adjustment Bolt	1	
36	N/A	Anchor Body Component	1	
37	<u>1011303</u>	Adjustment Bolt Cap	1	
38	<u>451</u>	Lockwasher, 1/4 Split	2	
39	101880701	Shoe Brake Manual Adj (Available in Kit, Non-Asbestos Brake Shoe)	2	
40	102860501	Arm, Brake Lever	1	
41	<u>47542195001</u>	Bolt, Brake Cluster Mnt	8	
		Note: Passenger-side brake cluster (items 25-41) not shown. Components have a similar appearance to driver-side brake cluster components.		

5

G


E

STEERING, FRONT AND REAR SUSPENSION

6

G


E

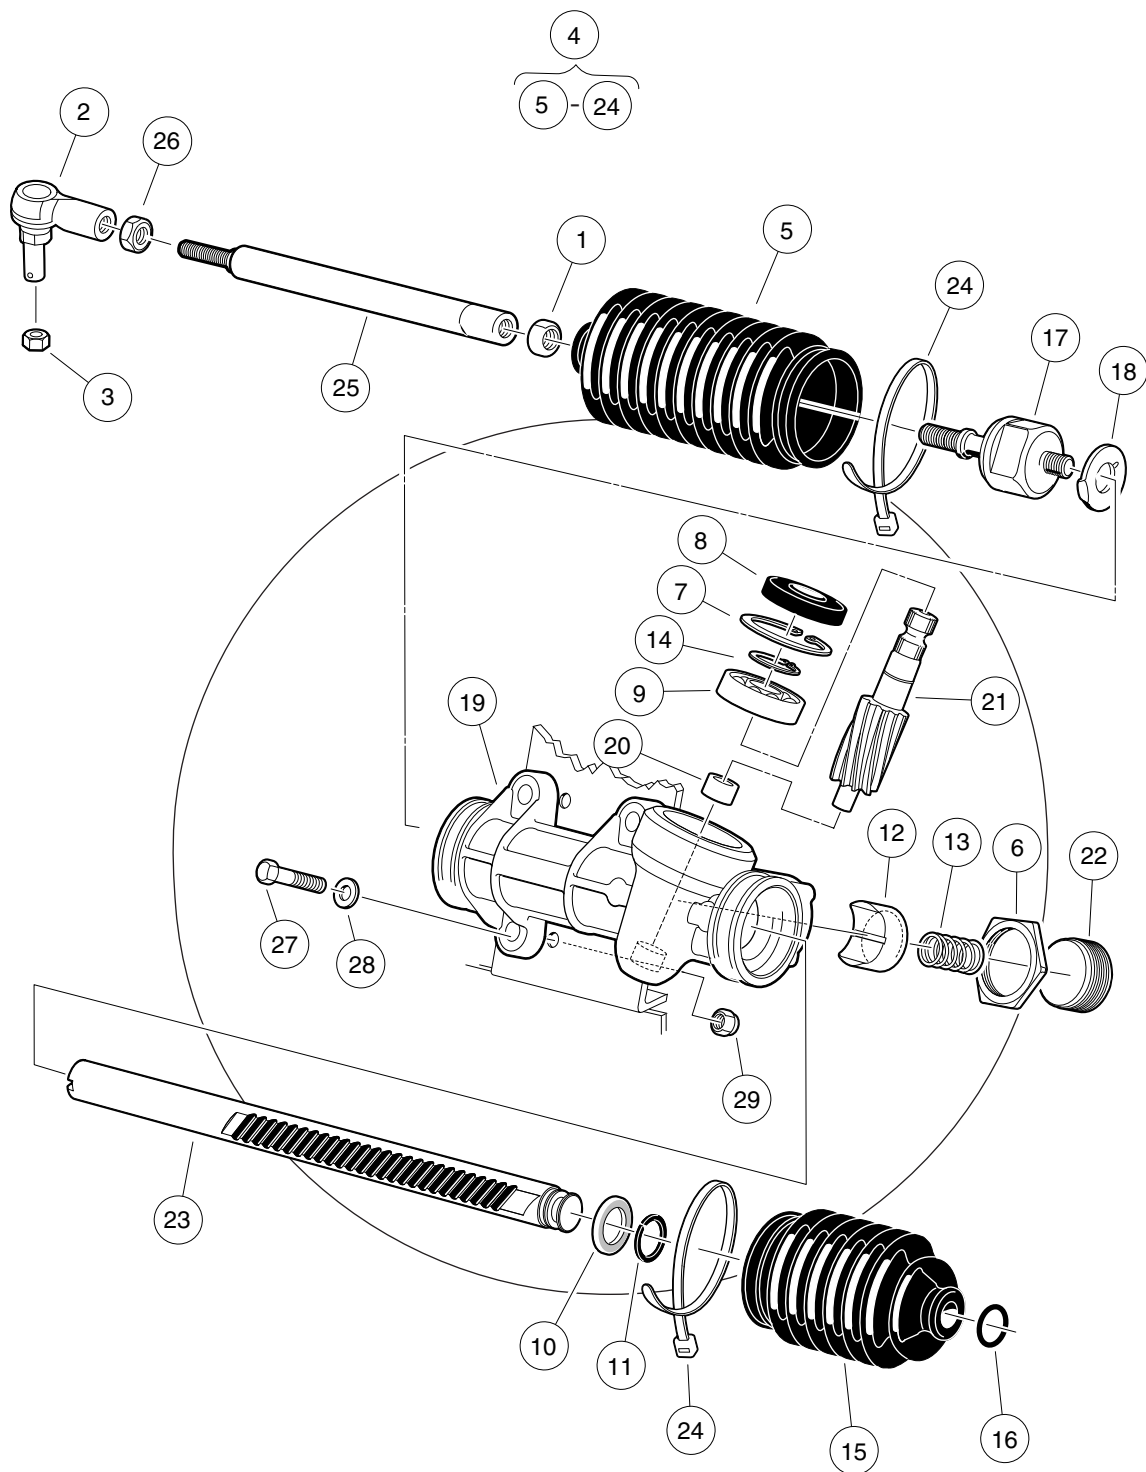

001500-002

STEERING GEAR ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	1013042	Nut, 12mm Hex	1	
2	102022602	End, Tie Rod, M12 X 1.25, Lh	1	
3	102289201	Nut - Hex Locking, M12 X 1.25	1	
4	103601501	Asm, Steering Rack And Pinion (includes items 5 through 24)	1	
5	1013035	Bellows, Long	1	
6	1013044	Rack Screw Locknut	1	
7	N/A	Snap Ring	1	
8	1013052	Seal, Steering Pinion Dust	1	
9	101879401	Bearing, Ball	1	
10	101879501	Stop Washer	1	
11	101879601	Stop Ring, C-Type	1	
12	101879701	Support Yoke	1	
13	101879801	Rack Guide Pressure Spring	1	
14	101879901	Ring, Stop, C-Type	1	
15	101880001	Bellows, Short	1	
16	101880101	Dust Seal Retaining Ring	1	
17	101880201	Inner Ball Joint Asm	1	
18	101880301	Washer, Tab	1	
19	N/A	Box, Steering Gear	1	
20	N/A	Bearing, Lower Pinion	1	
21	N/A	Pinion, Steering	1	
22	N/A	Screw, Rack Guide	1	
23	N/A	Rack, Steering	1	
24	8990	Tie Wrap, 8" Nylon	2	
25	103653401	Link, Drag, Male Thd	1	
26	103653501	Nut, Jam, M12-1.25, Lh	1	
27	1624	Screw, 3/8-16 X 1.50, Hex-Head Cap	3	
28	334	Washer, 3/8, Type A, Flat	3	
29	8754	Locknut, 3/8-16 Hex	3	

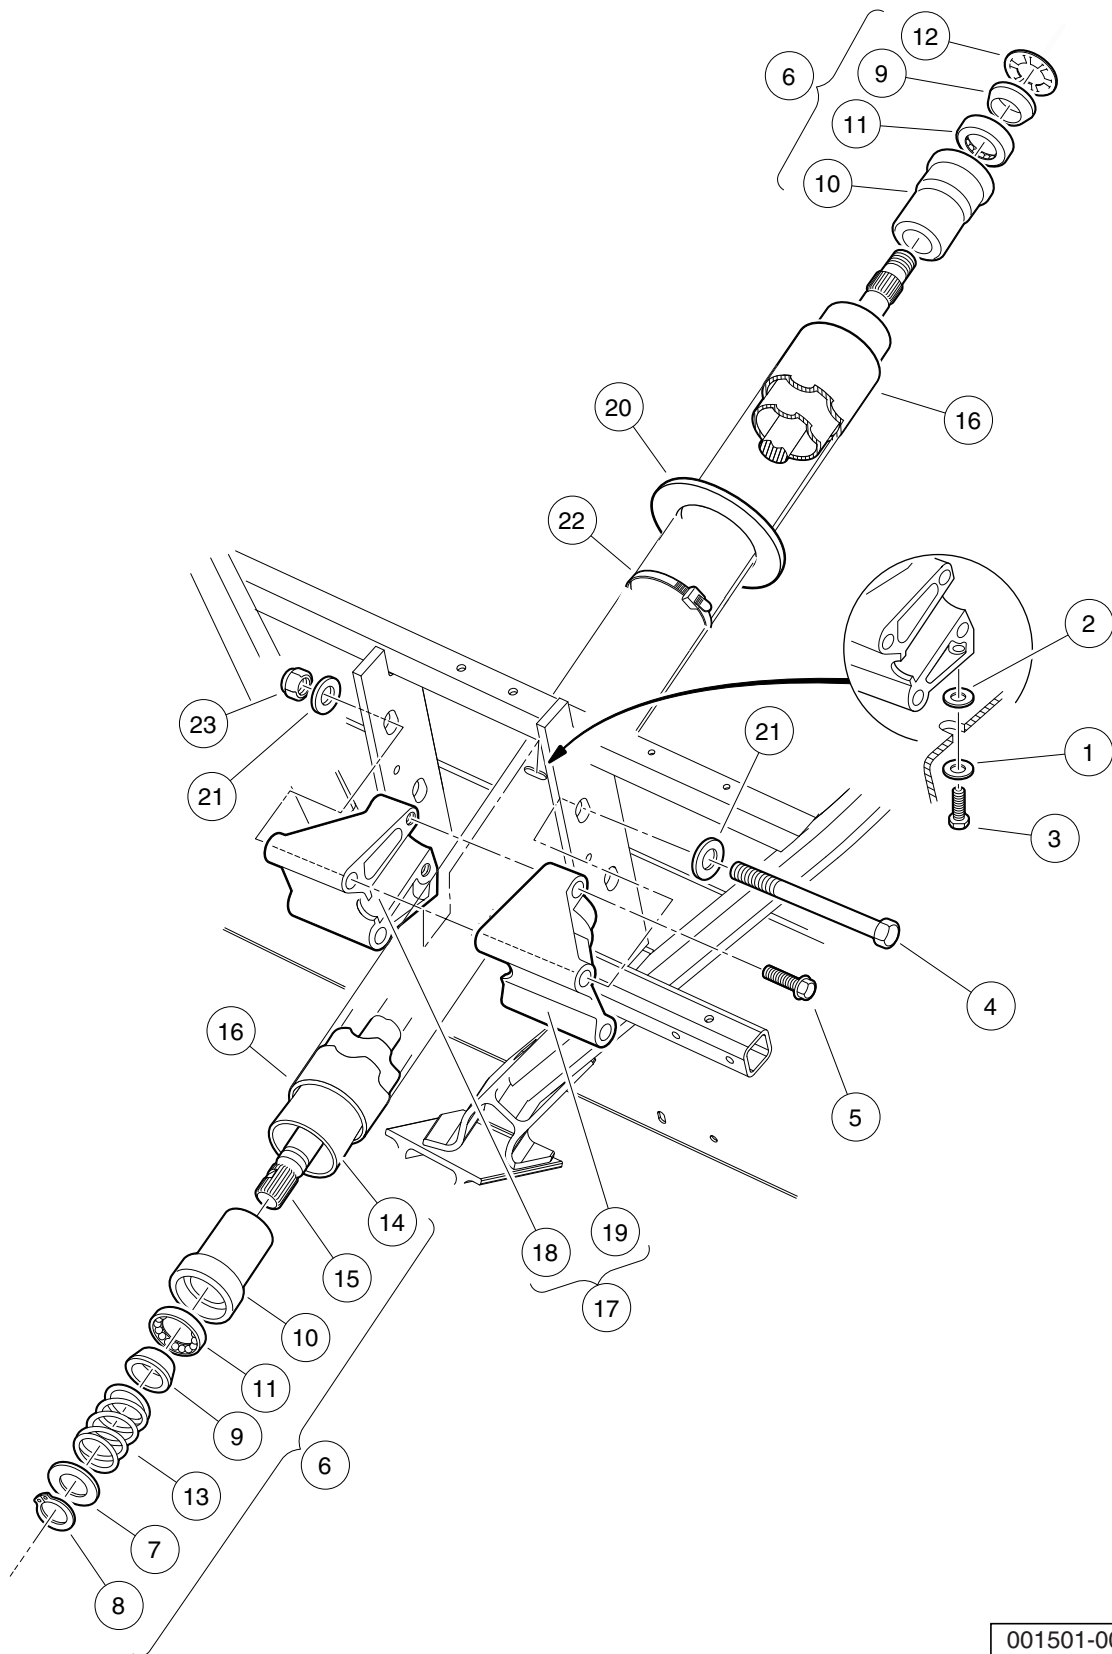

001501-001

STEERING COLUMN

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1011697</u>	Washer, 5/16 Flat	1
2	<u>1012571</u>	Washer, 5/16 Extra Thick Flat	1
3	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	1
4	<u>1016183</u>	Screw, 3/8-16 X 7.00 Hex Cap	2
5	<u>1016269</u>	Screw, 5/16-18 Thrd Forming	2
6	<u>1017313</u>	Steering Shaft Assembly (includes items 7 through 15)	1
7	<u>1012604</u>	Washer, 0.675 ID X 1.19 OD	1
8	<u>1012605</u>	Ring, 0.579 Internal Retaining	1
9	<u>1014125</u>	Wedge, Molded	2
10	<u>1014126</u>	Seat, Plastic Bearing	2
11	<u>1014213</u>	Bearing, Ball	2
12	<u>1014214</u>	Ring, Retaining	1
13	<u>1014217</u>	Spring, Steering Shaft	1
14	<u>1017314</u>	Column, Aluminum Steering	1
15	<u>1017315</u>	Shaft Steering Column	1
16	<u>1017317</u>	Tube Cover, Steering Column	1
17	101984801	Kit, Steering Column Mounting Bracket (includes items 18 and 19)	1
18	N/A	Bracket, RH Steering Column Mount	1
19	N/A	Bracket, LH Steering column mount	1
20	<u>102278001</u>	Boot, Steering Column Round	1
21	<u>334</u>	Washer, 3/8, Type A, Flat	4
22	<u>8639</u>	Tie Wrap, 11" Nylon	1
23	<u>8754</u>	Locknut, 3/8-16 Hex	2

6


G

E

6

G

E

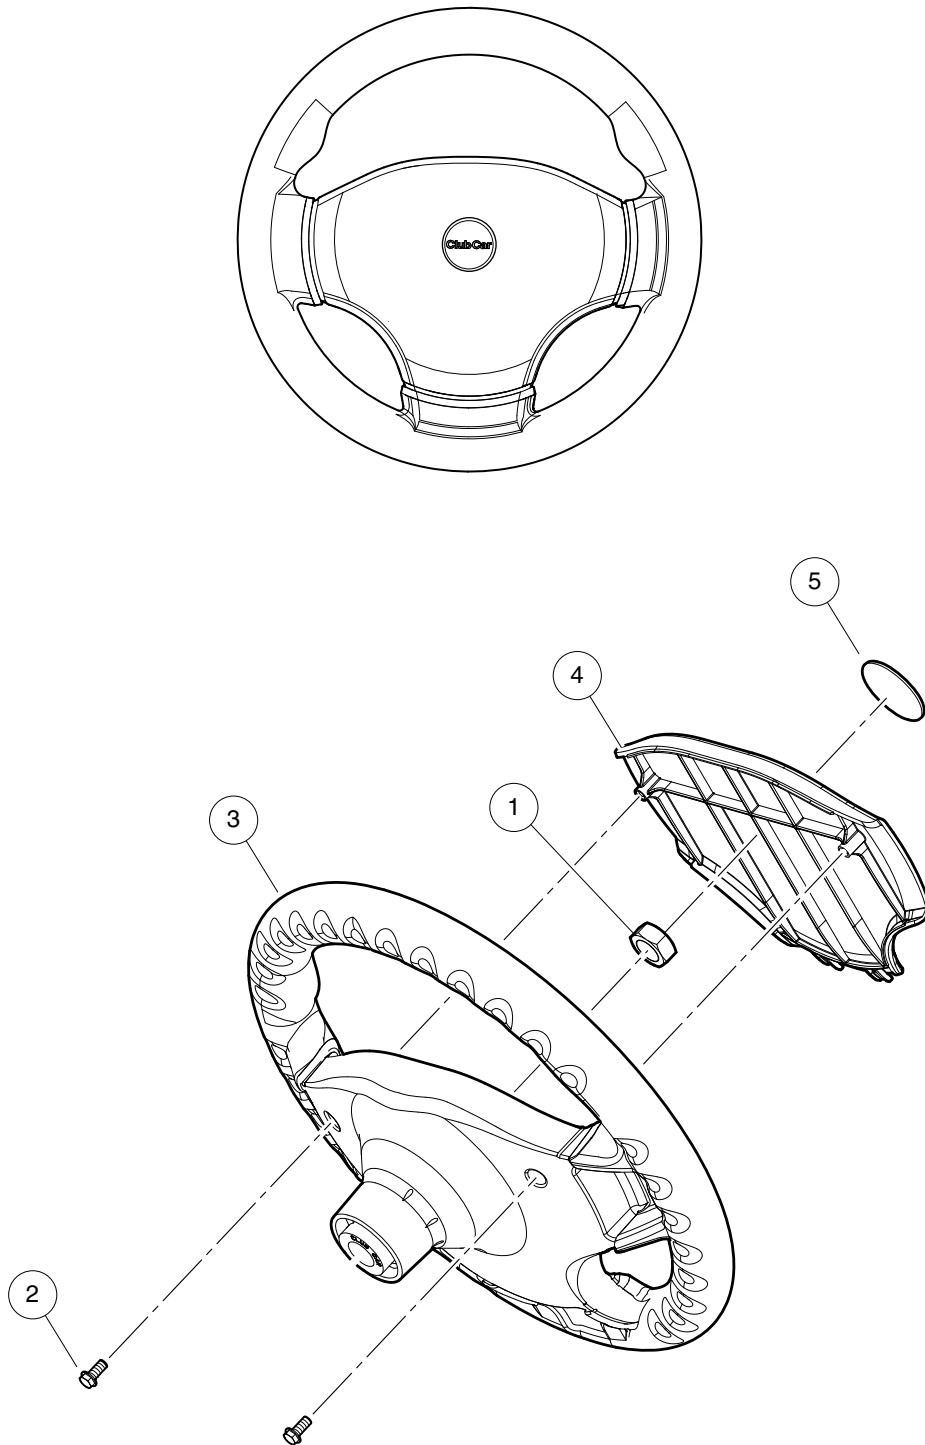

001503-001


STEERING WHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1017273	Nut, 5/8-18 Nylon Insert Jam	1
2	101850301	Screw, #12-16 X 0.50 Washer-Head Hi-Lo	2
3	103724504	Steering Wheel, Soft Spl	1
4	103724602	Cover, Steering Wheel, Generic	1
5	103829401	Logo, Cci, Steer Wheel	1

6

G

E

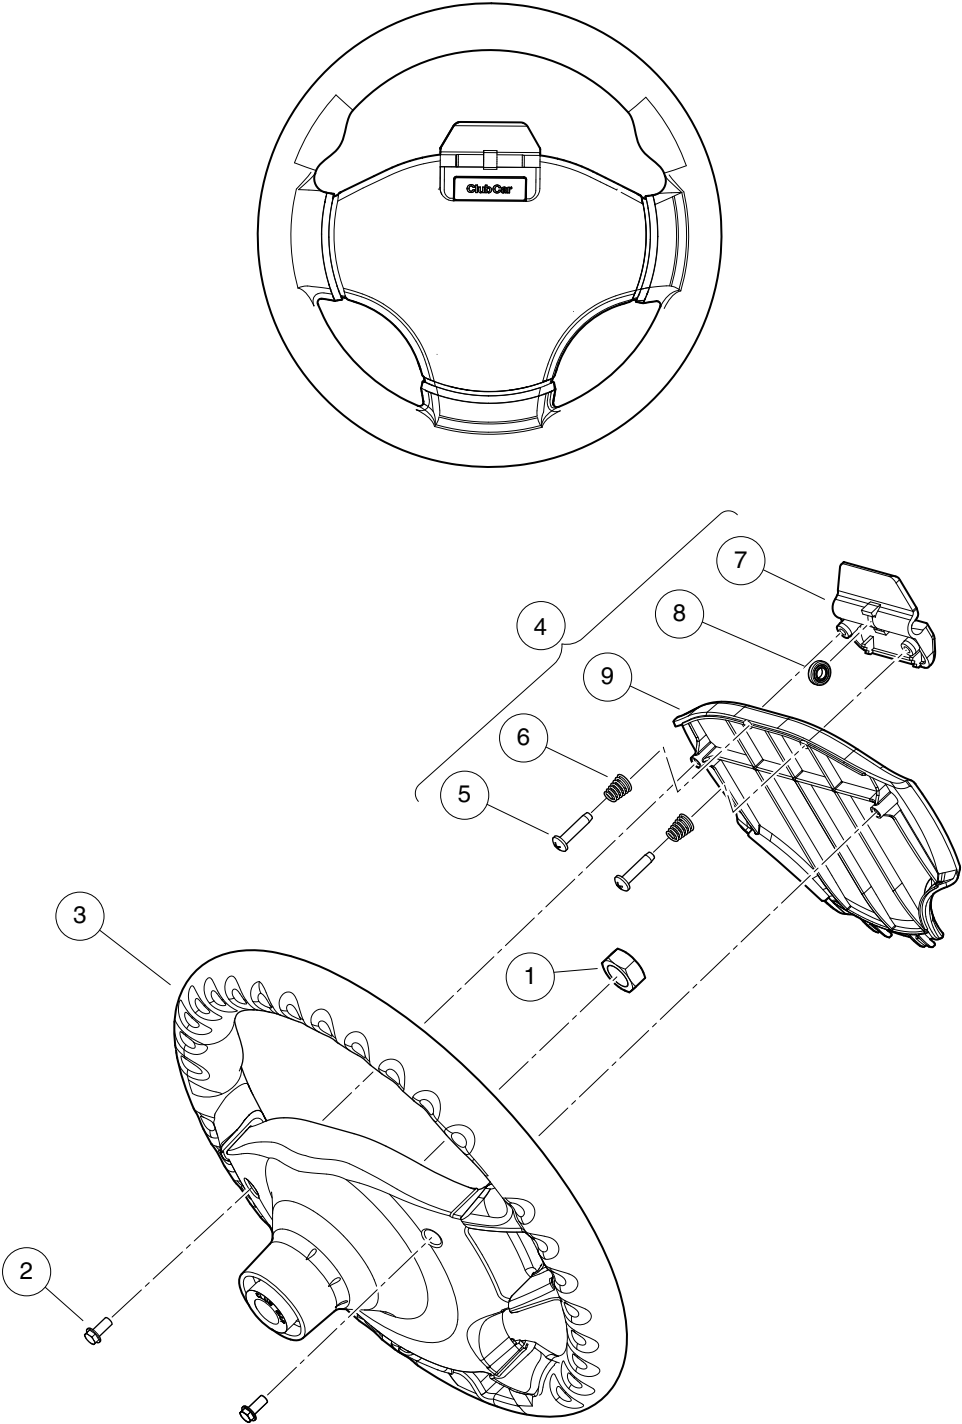

001504-001


STEERING WHEEL WITH CLIP

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1017273</u>	Nut, 5/8-18 Nylon Insert Jam	1
2	<u>101850301</u>	Screw, #12-16 X 0.50 Washer-Head Hi-Lo	2
3	<u>103724504</u>	Steering Wheel, Soft Spl	1
4	<u>103724901</u>	Asm, Scorecard, Clip (includes items 5 through 9)	1
5	<u>1012565</u>	Screw, #12 Phillips Round Head	2
6	<u>1012566</u>	Tapered Compression Spring	2
7	<u>1016154</u>	Clip, Scorecard	1
8	<u>1016214</u>	Pencil Grip	1
9	<u>103724601</u>	Cover, Steering Wheel, Clip	1

6

G


E

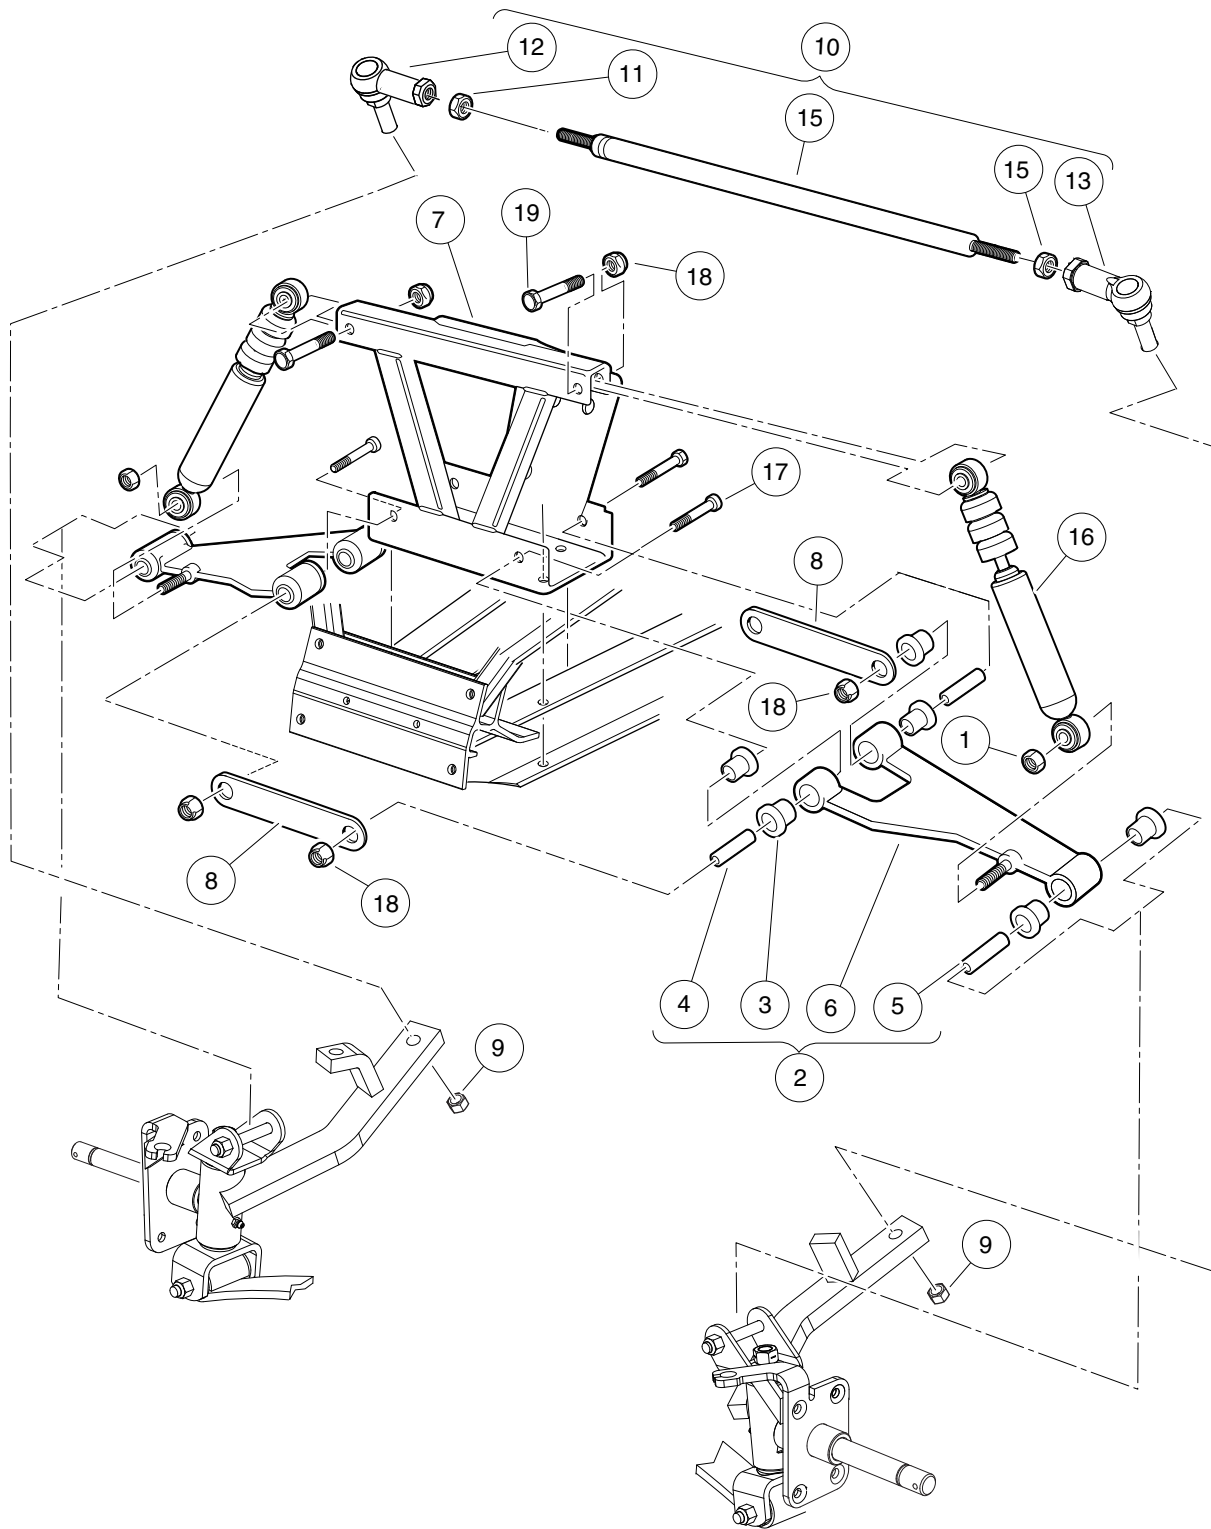

001510-001

FRONT SUSPENSION, UPPER, HD

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2	E
2	<u>1016353</u>	Sub-Assembly, Delta A-Plate (includes items 3 through 6)	2	
3	<u>1016346</u>	Bushing, Urethane	6	
4	<u>1016349</u>	Sleeve, Delta Inner	2	
5	<u>1016350</u>	Sleeve, Delta Outer	1	
6	<u>1016351</u>	Delta A-Plate	1	
7	<u>101638502</u>	Weldment, Shock & Gear, Ca	1	
8	<u>1017266</u>	A-Plate Strap	2	
9	<u>102289201</u>	Nut - Hex Locking, M12 X 1.25	2	
10	<u>103653601</u>	Asm, Tie Rod (includes items 11 through 15)	1	
11	<u>1013042</u>	Nut, 12mm Hex	1	
12	<u>102022601</u>	End, Tie Rod M12 X 1.25 Rh	1	
13	<u>102022602</u>	End, Tie Rod, M12 X 1.25, Lh	1	
14	<u>103354701</u>	Rod, Tie, Male Thd	1	
15	<u>103653501</u>	Nut, Jam, M12-1.25, Lh	1	
16	<u>105106702</u>	Shock Absorb, Frnt, 3 Bump Ele	2	
17	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4	
18	<u>8754</u>	Locknut, 3/8-16 Hex	6	
19	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	2	

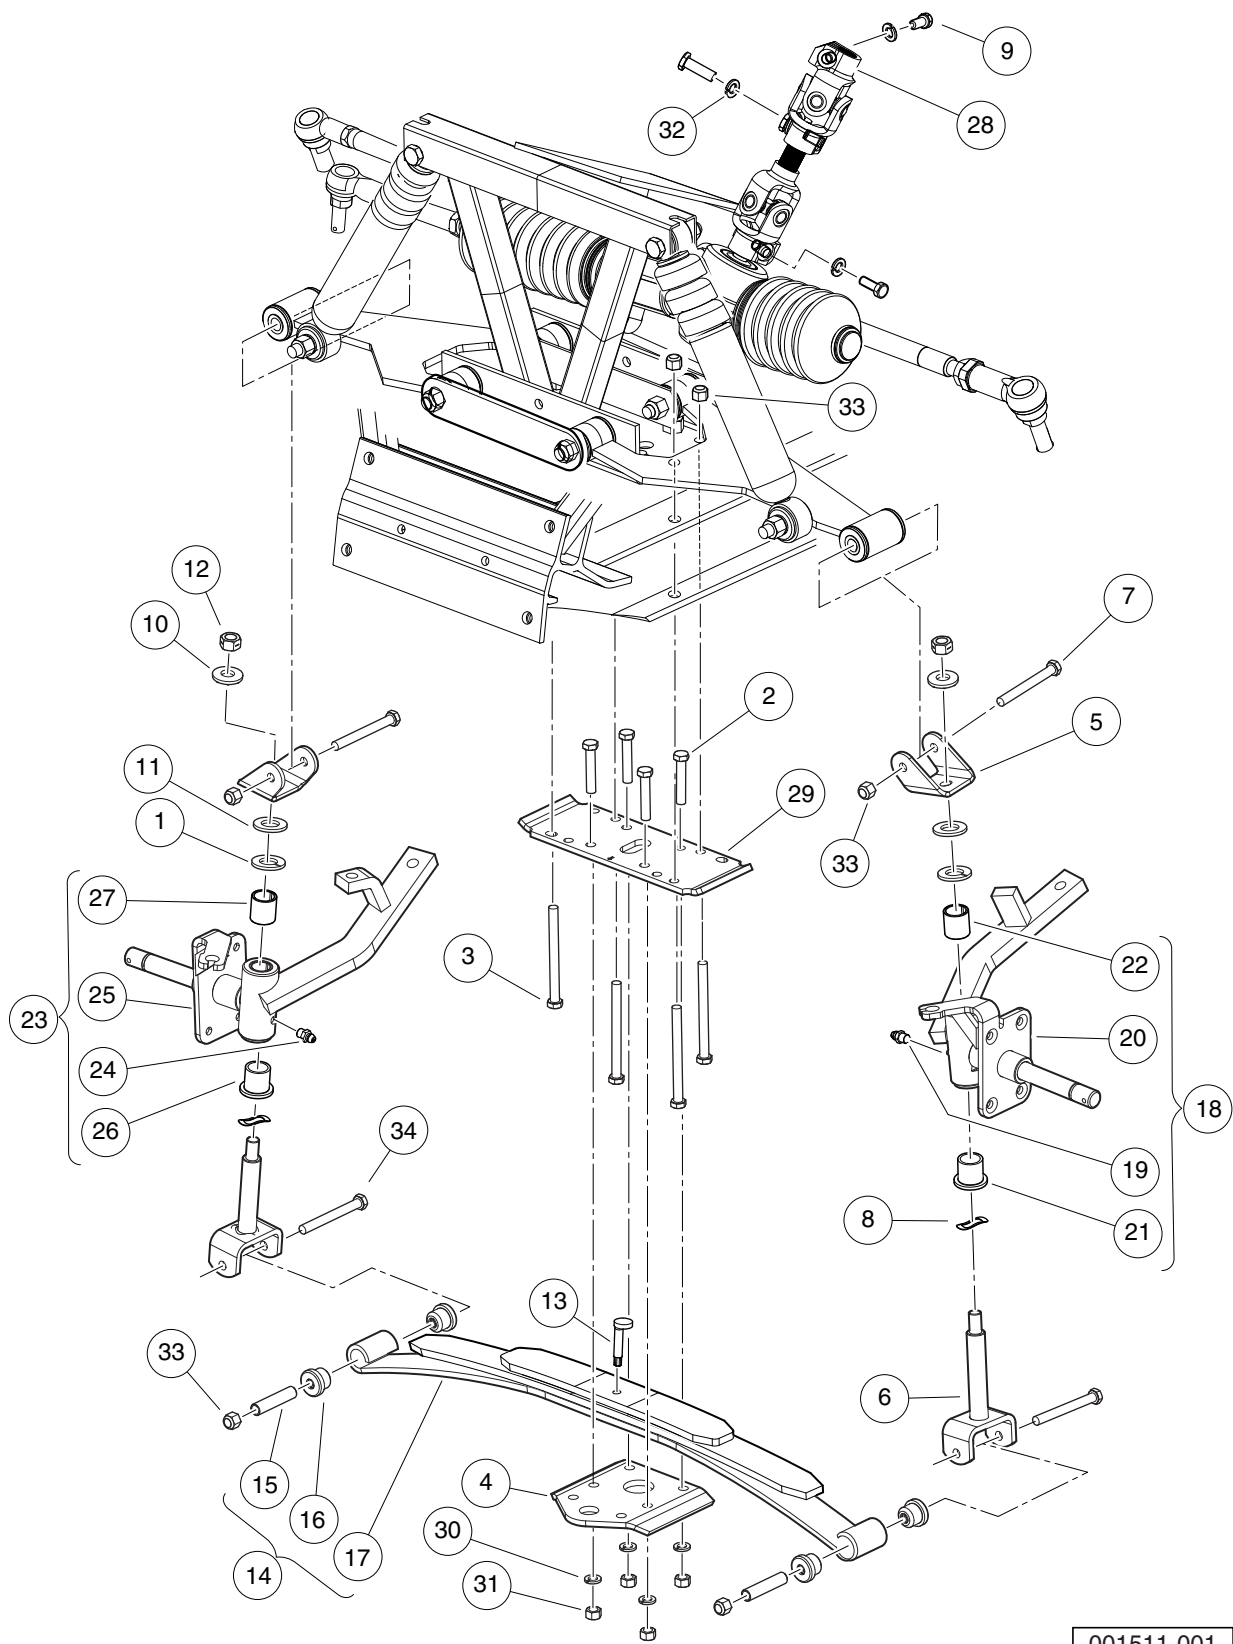


001511-001

FRONT SUSPENSION, LOWER, HD, 3 LEAF-1 PLATE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010150</u>	Bearing, Thrust	2
2	<u>1010177</u>	Bolt, 3/8-16 X 2.00 Hex Head	4
3	<u>1010200</u>	Bolt, 3/8-16 X 4.25 Hex Head	4
4	<u>1014276</u>	Plate, Front Spring Retainer	1
5	<u>1016384</u>	Clevis, Delta Upper	2
6	<u>1016386</u>	King Pin Assembly	2
7	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	2
8	<u>1016389</u>	Washer, 1.125 Od Wave	2
9	<u>1017226</u>	Bolt, Hex-Head, 8mm X 1.25 - 30	3
10	<u>102564002</u>	Washer-1/2 Conical, Yellow	2
11	<u>102684501</u>	Washer, M12 Hard Regular	2
12	<u>102766301</u>	Nut, 1/2-20, Center Lock	2
13	<u>103507001</u>	Eccentric Bolt Common	1
14	<u>103628901</u>	Spring Asm, Front, 3 Leaf (includes items 15 through 17)	1
15	<u>1012303</u>	Bushing, Steel	2
16	<u>1015583</u>	Bushing, Urethane	4
17	103502801	Spring, Front, 3 Leaf	1
18	<u>103717302</u>	Asm, Spindle, Lh, 4wb, Sp (includes items 19 through 22)	1
19	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1
20	N/A	Subasm, Spindle, Lh, 4wb	1
21	<u>7048</u>	Bushing, Flanged Bronze	1
22	<u>8067</u>	Bushing, Bronze Spindle	1
23	<u>103717402</u>	Asm, Spindle, Rh, 4wb, Sp (includes items 24 through 27)	1
24	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1
25	N/A	Subasm, Spindle, Rh, 4wb	1
26	<u>7048</u>	Bushing, Flanged Bronze	1
27	<u>8067</u>	Bushing, Bronze Spindle	1
28	<u>105074201</u>	Shaft, Int, Steering, Sus Fwd	1
29	<u>105083301</u>	Plate, Spring Mount, Restyle	1
30	<u>357</u>	Lockwasher, 3/8 Split	4
31	<u>706</u>	Nut, Hex 3/8-16	5
32	<u>7174</u>	Lockwasher, 5/16 Split	3
33	<u>8754</u>	Locknut, 3/8-16 Hex	8
34	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2


6
G
E

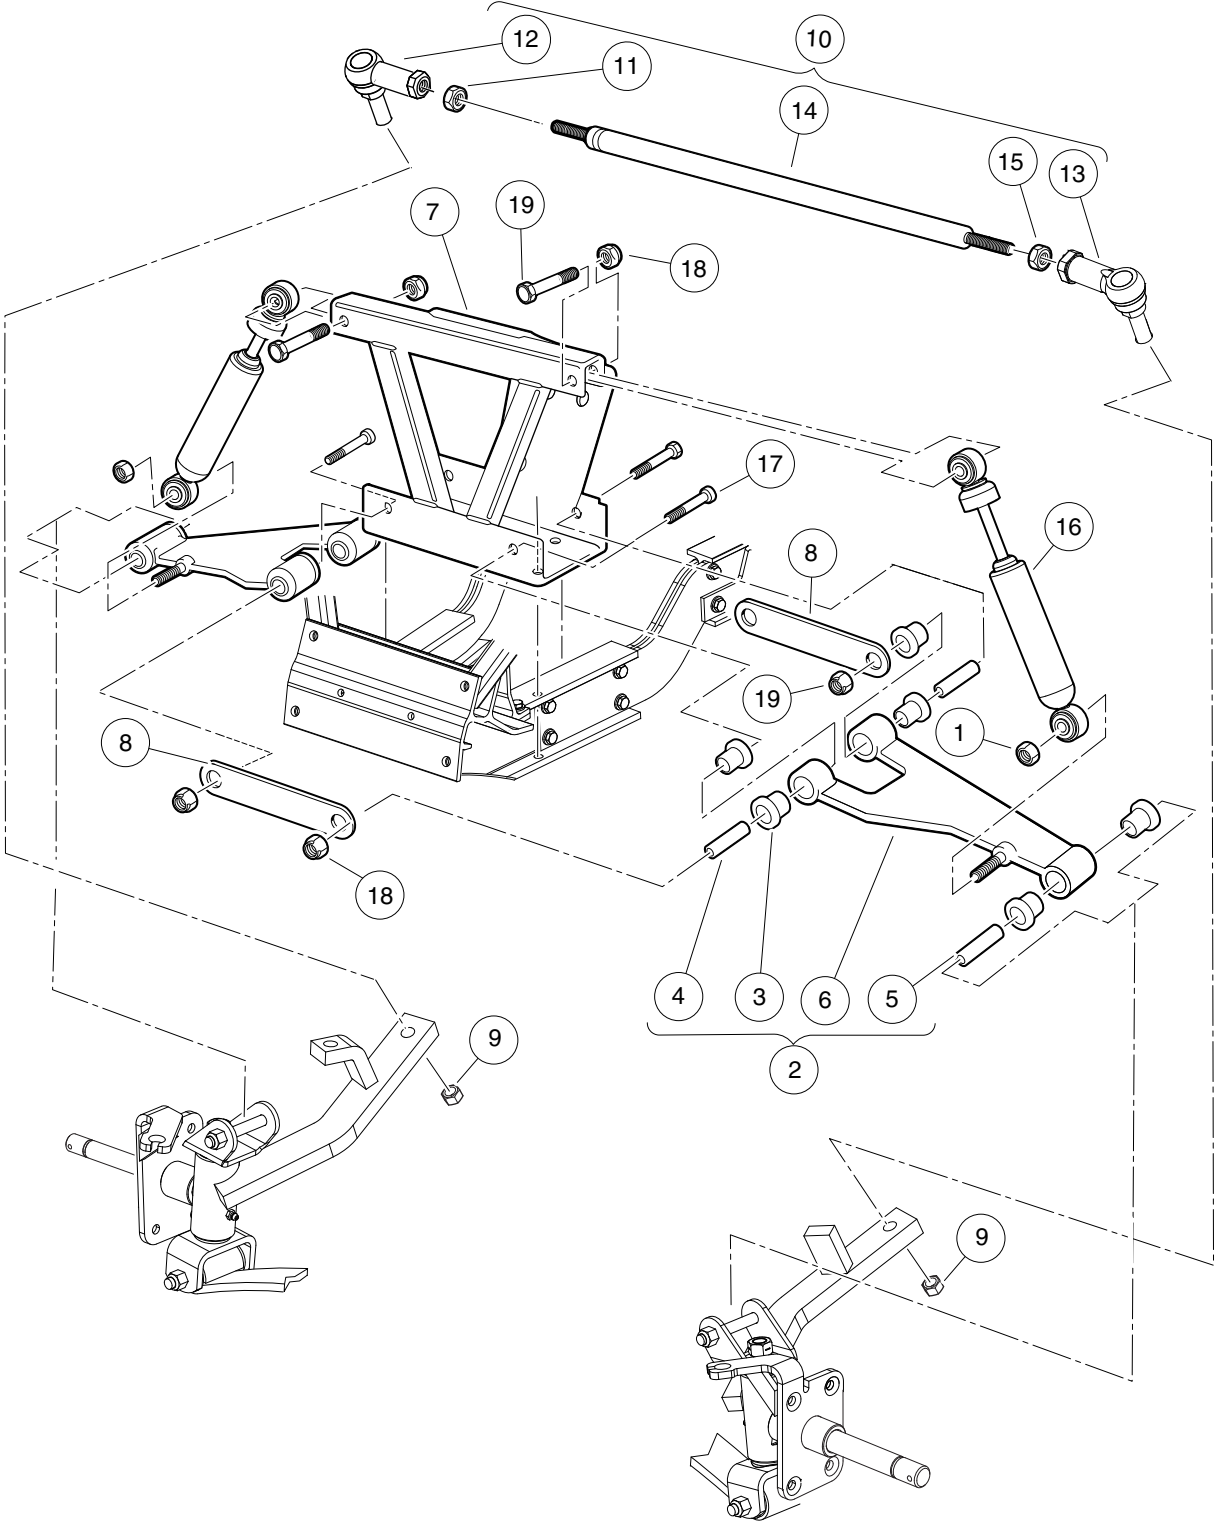

001512-001

FRONT SUSPENSION, UPPER, STD

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	<u>1010138</u>	Locknut, 3/8-16 Dimpled	2	E
2	<u>1016353</u>	Sub-Assembly, Delta A-Plate (includes items 3 through 6)	2	
3	<u>1016346</u>	Bushing, Urethane	6	
4	<u>1016349</u>	Sleeve, Delta Inner	2	
5	<u>1016350</u>	Sleeve, Delta Outer	1	
6	<u>1016351</u>	Delta A-Plate	1	
7	<u>101638502</u>	Weldment, Shock & Gear, Ca	1	
8	<u>1017266</u>	A-Plate Strap	2	
9	<u>102289201</u>	Nut - Hex Locking, M12 X 1.25	2	
10	<u>103653601</u>	Asm, Tie Rod (includes items 11 through 15)	1	
11	<u>1013042</u>	Nut, 12mm Hex	1	
12	<u>102022601</u>	End, Tie Rod M12 X 1.25 Rh	1	
13	<u>102022602</u>	End, Tie Rod, M12 X 1.25, Lh	1	
14	<u>103354701</u>	Rod, Tie, Male Thd	1	
15	<u>103653501</u>	Nut, Jam, M12-1.25, Lh	1	
16	<u>105106601</u>	Shock Absorber, Front, 1 Bumper	2	
17	<u>2402</u>	Screw, 3/8-16 X 2.25 Hx Hd Cap	4	
18	<u>8754</u>	Locknut, 3/8-16 Hex	6	
19	<u>8861</u>	Bolt, 3/8-16 X 1.75 Hex	2	

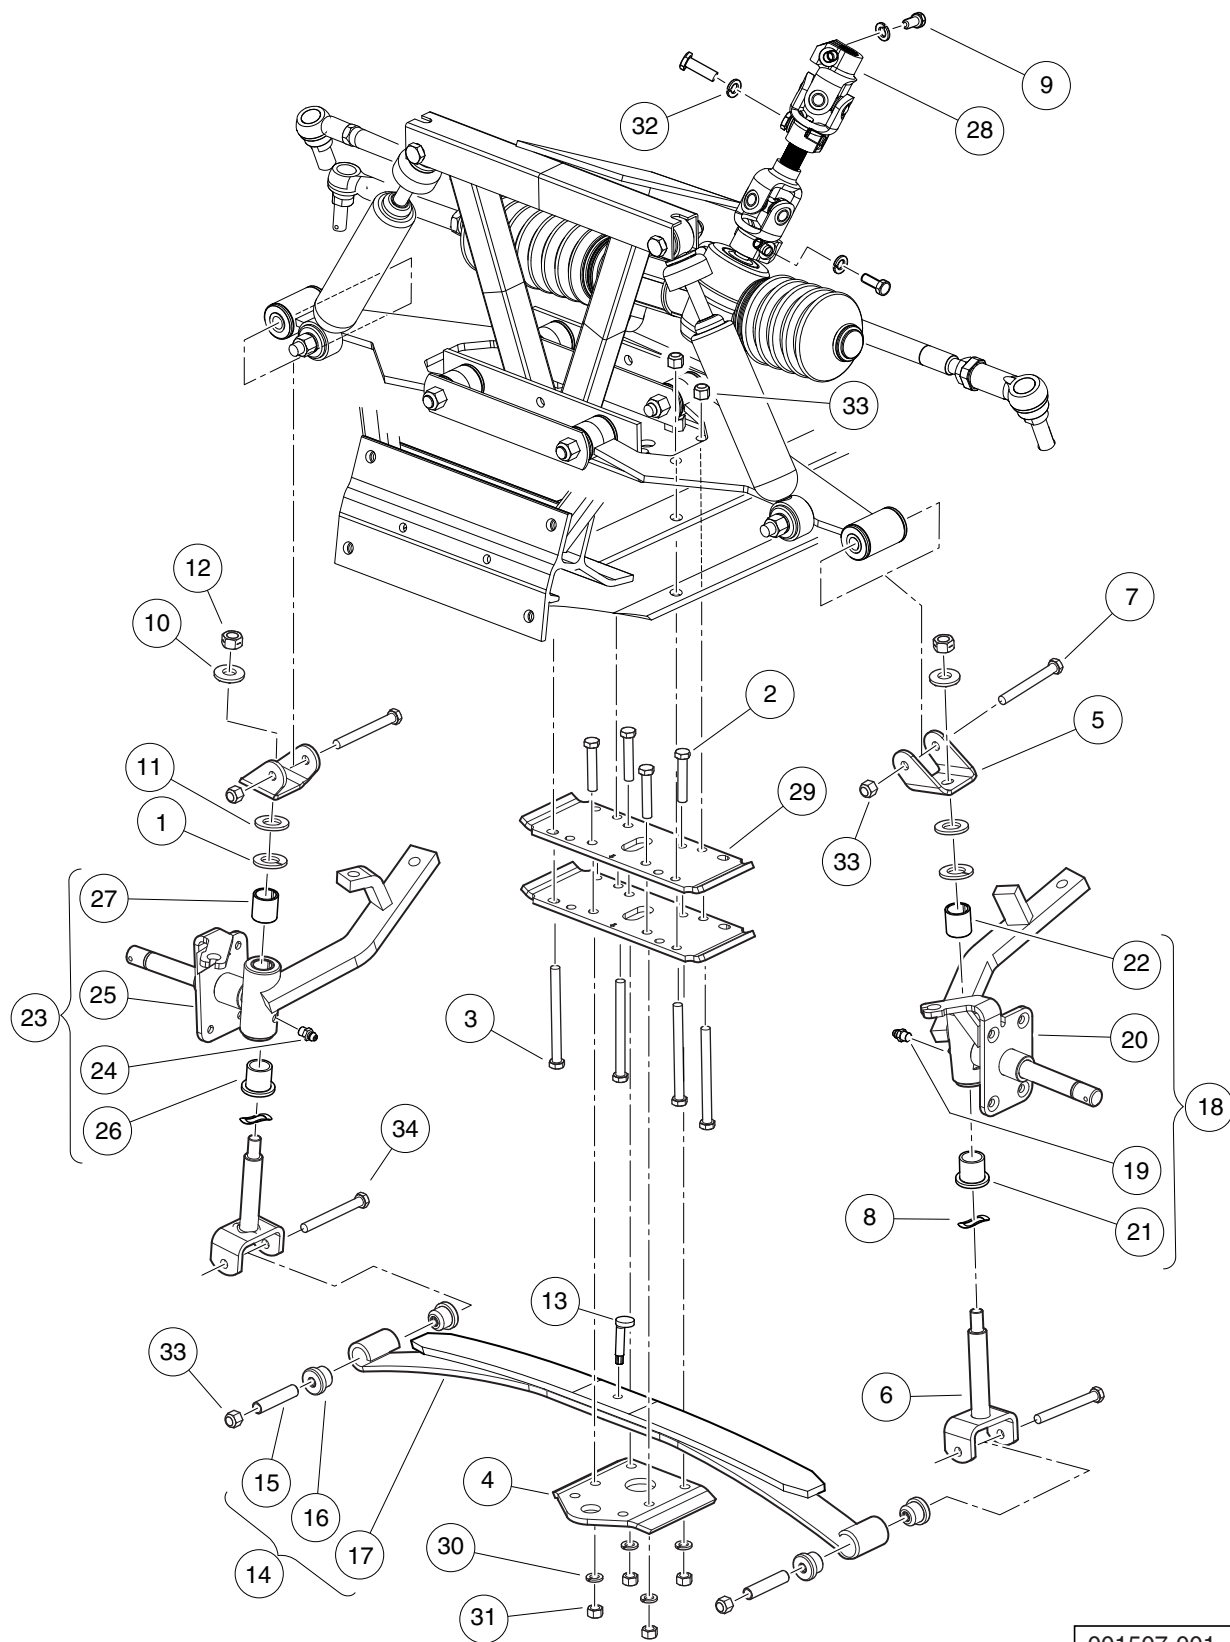

001507-001


FRONT SUSPENSION, LOWER, HD, 2 LEAF-2 PLATES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1010150</u>	Bearing, Thrust	2
2	<u>1010177</u>	Bolt, 3/8-16 X 2.00 Hex Head	4
3	<u>1010200</u>	Bolt, 3/8-16 X 4.25 Hex Head	4
4	<u>1014276</u>	Plate, Front Spring Retainer	1
5	<u>1016384</u>	Clevis, Delta Upper	2
6	<u>1016386</u>	King Pin Assembly	2
7	<u>1016387</u>	Screw, 3/8-16 X 2.75 Hx Hd Cap	2
8	<u>1016389</u>	Washer, 1.125 Od Wave	2
9	<u>1017226</u>	Bolt, Hex-Head, 8mm X 1.25 - 30	3
10	<u>102564002</u>	Washer-1/2 Conical, Yellow	2
11	<u>102684501</u>	Washer, M12 Hard Regular	2
12	<u>102766301</u>	Nut, 1/2-20, Center Lock	2
13	<u>103507001</u>	Eccentric Bolt Common	1
14	<u>103628801</u>	Spring Asm, Front, 2 Leaf (includes items 15 through 17)	1
15	<u>1012303</u>	Bushing, Steel	2
16	<u>1015583</u>	Bushing, Urethane	4
17	<u>103502701</u>	Spring, Front, 2 Leaf	1
18	<u>103717302</u>	Asm, Spindle, Lh, 4wb, Sp (includes items 19 through 22)	1
19	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1
20	N/A	Subasm, Spindle, Lh, 4wb	1
21	<u>7048</u>	Bushing, Flanged Bronze	1
22	<u>8067</u>	Bushing, Bronze Spindle	1
23	<u>103717402</u>	Asm, Spindle, Rh, 4wb, Sp (includes items 24 through 27)	1
24	<u>1015597</u>	Fitting, 1/4-28 Thread-Forming Grease	1
25	N/A	Subasm, Spindle, Rh, 4wb	1
26	<u>7048</u>	Bushing, Flanged Bronze	1
27	<u>8067</u>	Bushing, Bronze Spindle	1
28	<u>105074201</u>	Shaft, Int, Steering, Sus Fwd	1
29	<u>105083301</u>	Plate, Spring Mount, Restyle	2
30	<u>357</u>	Lockwasher, 3/8 Split	4
31	<u>706</u>	Nut, Hex 3/8-16	5
32	<u>7174</u>	Lockwasher, 5/16 Split	3
33	<u>8754</u>	Locknut, 3/8-16 Hex	8
34	<u>8755</u>	Screw, 3/8-16 X 3.375 Hex Cap	2

6

G

E

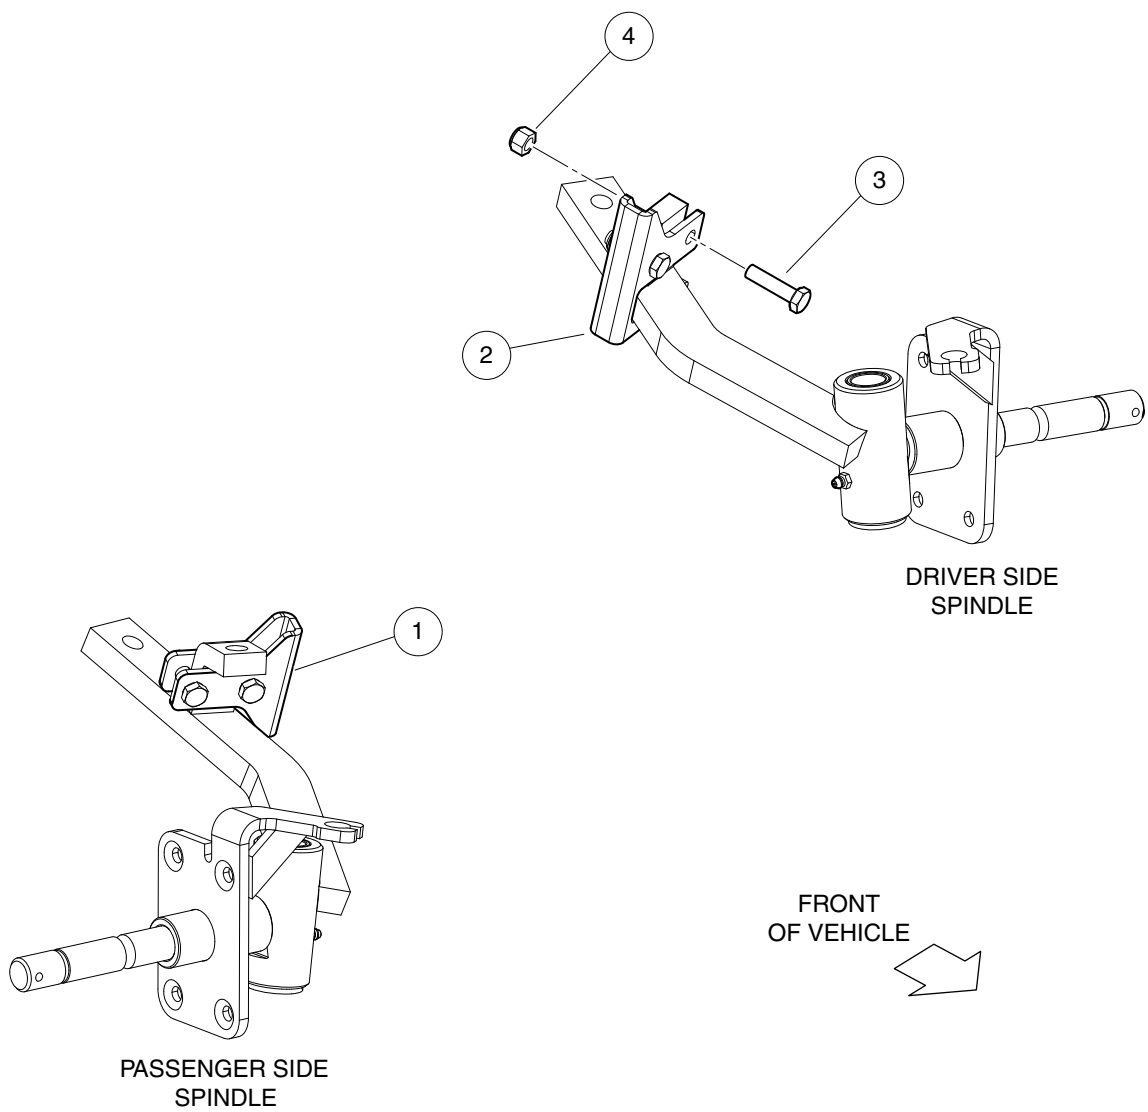

001529-001


STEERING STOP

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>105242801</u>	Brkt, Steering Stop, Pass, Ca	1
2	<u>105243001</u>	Brkt, Steering Stop, Drv, Ca	1
3	1218	Screw, 5/16-18 X 1.25 Hex-Head Cap	4
4	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	4
Note: Steering Stops <u>105242801</u> and <u>105243001</u> are required if vehicle is equipped with the 105100601, HD Bumper Kit.			

6

G


E

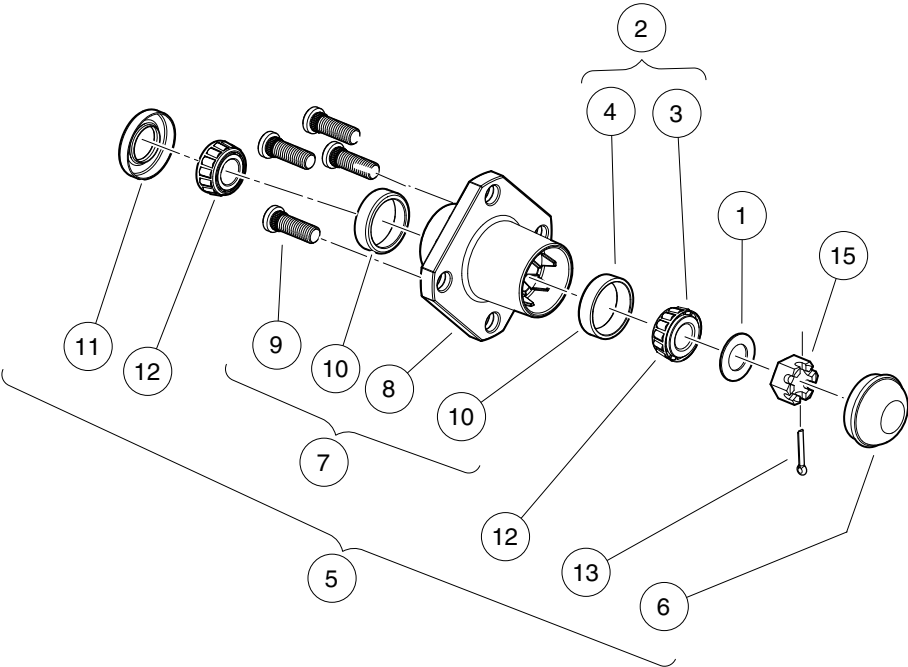

001520-002

FRONT WHEEL HUBS

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	<u>1010005</u>	Washer, 3/4 Flat	2	E
2	<u>1011393</u>	Hub Bearing Package (includes items 3 and 4)	4	
3	7274	Bearing, Front Hub Wheel	1	
4	7308	Race, Front Hub Bearing	1	
5	<u>1011892</u>	Hub Assembly (includes items 6 through 13)	1	
6	<u>1011887</u>	Dust Cover	1	
7	N/A	Hub (includes items 8 through 10)	1	
8	N/A	Front Hub	1	
9	<u>103477901</u>	Lug Stud, 1/2-20 Unf, 4037	4	
10	7308	Race, Front Hub Bearing	2	
11	<u>1013135</u>	Seal, Double Lip	1	
12	7274	Bearing, Front Hub Wheel	2	
13	<u>7910</u>	Pin, 5/32 X 1.00 Cotter	1	
14	<u>1013135</u>	Seal, Double Lip	2	
15	<u>7840</u>	Nut, 3/4-16 Hex Slotted	2	

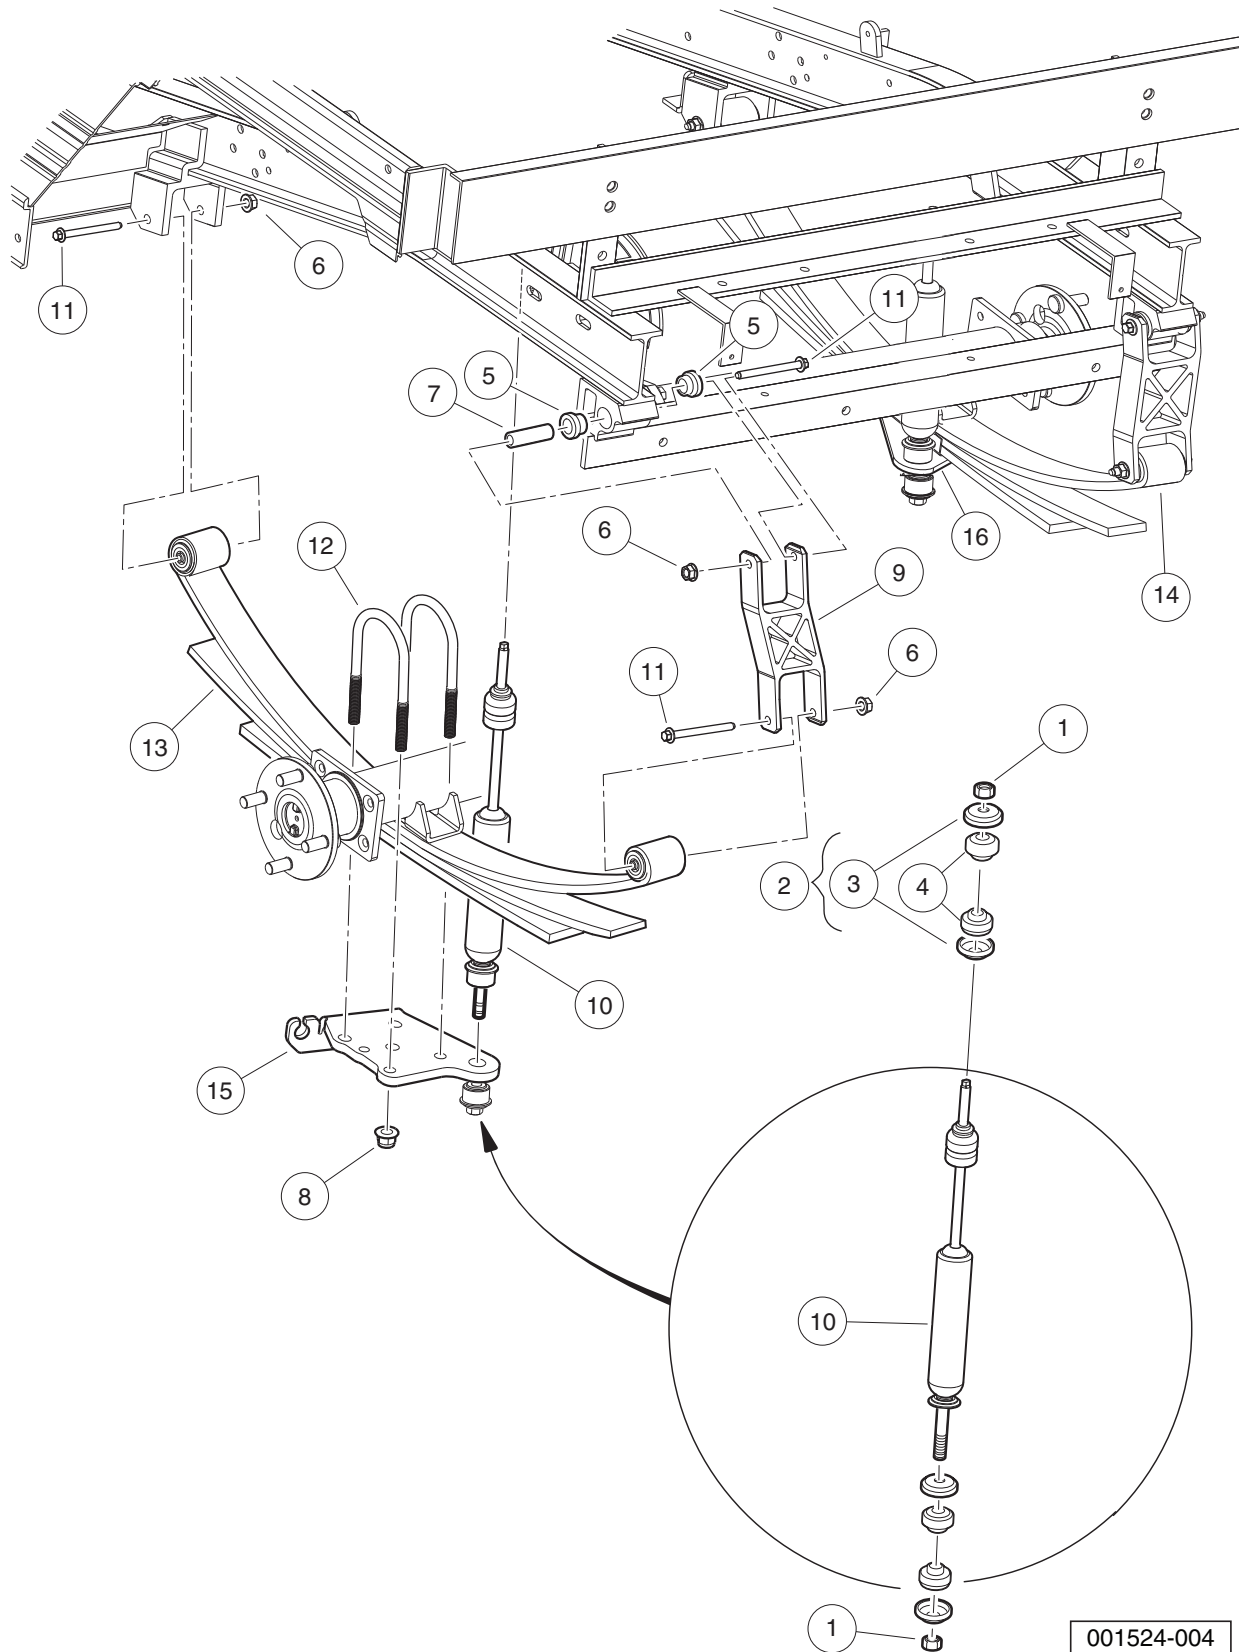6**G****E**

001524-004

REAR SUSPENSION COMPONENTS, STANDARD

ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	<u>1010145</u>	Nut, 3/8-24 Hex	4	
2	<u>1011415</u>	Kit, Shock Absorber Cushion (includes items 3 and 4)	4	
3	N/A	Retainer, Shock Absorber Cushion	2	
4	<u>47579096001</u>	Isolator, Shock Damper	2	
5	<u>101558302</u>	Bushing, Urethane, Soft	4	
6	<u>102298401</u>	Nut,m8,all Metal Lock	6	
7	<u>102506401</u>	Sleeve - Spring Eye Mounts	2	
8	<u>102670701</u>	Nut, Flange, M10 X 1.5 Nylon	8	
9	<u>105068902</u>	Shackle, 6", Com, Machined	2	
10	<u>105106801</u>	Shock Absorber,Rear, 2 Bumper	2	
11	<u>105188185</u>	Bolt, M8x85mm,10.9 Grade	6	
12	<u>105188701</u>	U-bolt, M10x1.5x58	4	
13	<u>47585228001</u>	Spring Asm, Std Rear Leaf, Lh	1	
14	<u>47585228002</u>	Spring Asm, Std Rear Leaf, Rh	1	
15	<u>47599907001</u>	Bkt, U-bolt, 3-1, Lh	1	
16	<u>47599907002</u>	Bkt, U-bolt, 3-1, Rh	1	

6


G

E

ELECTRICAL SYSTEM – GASOLINE EFI

7


G

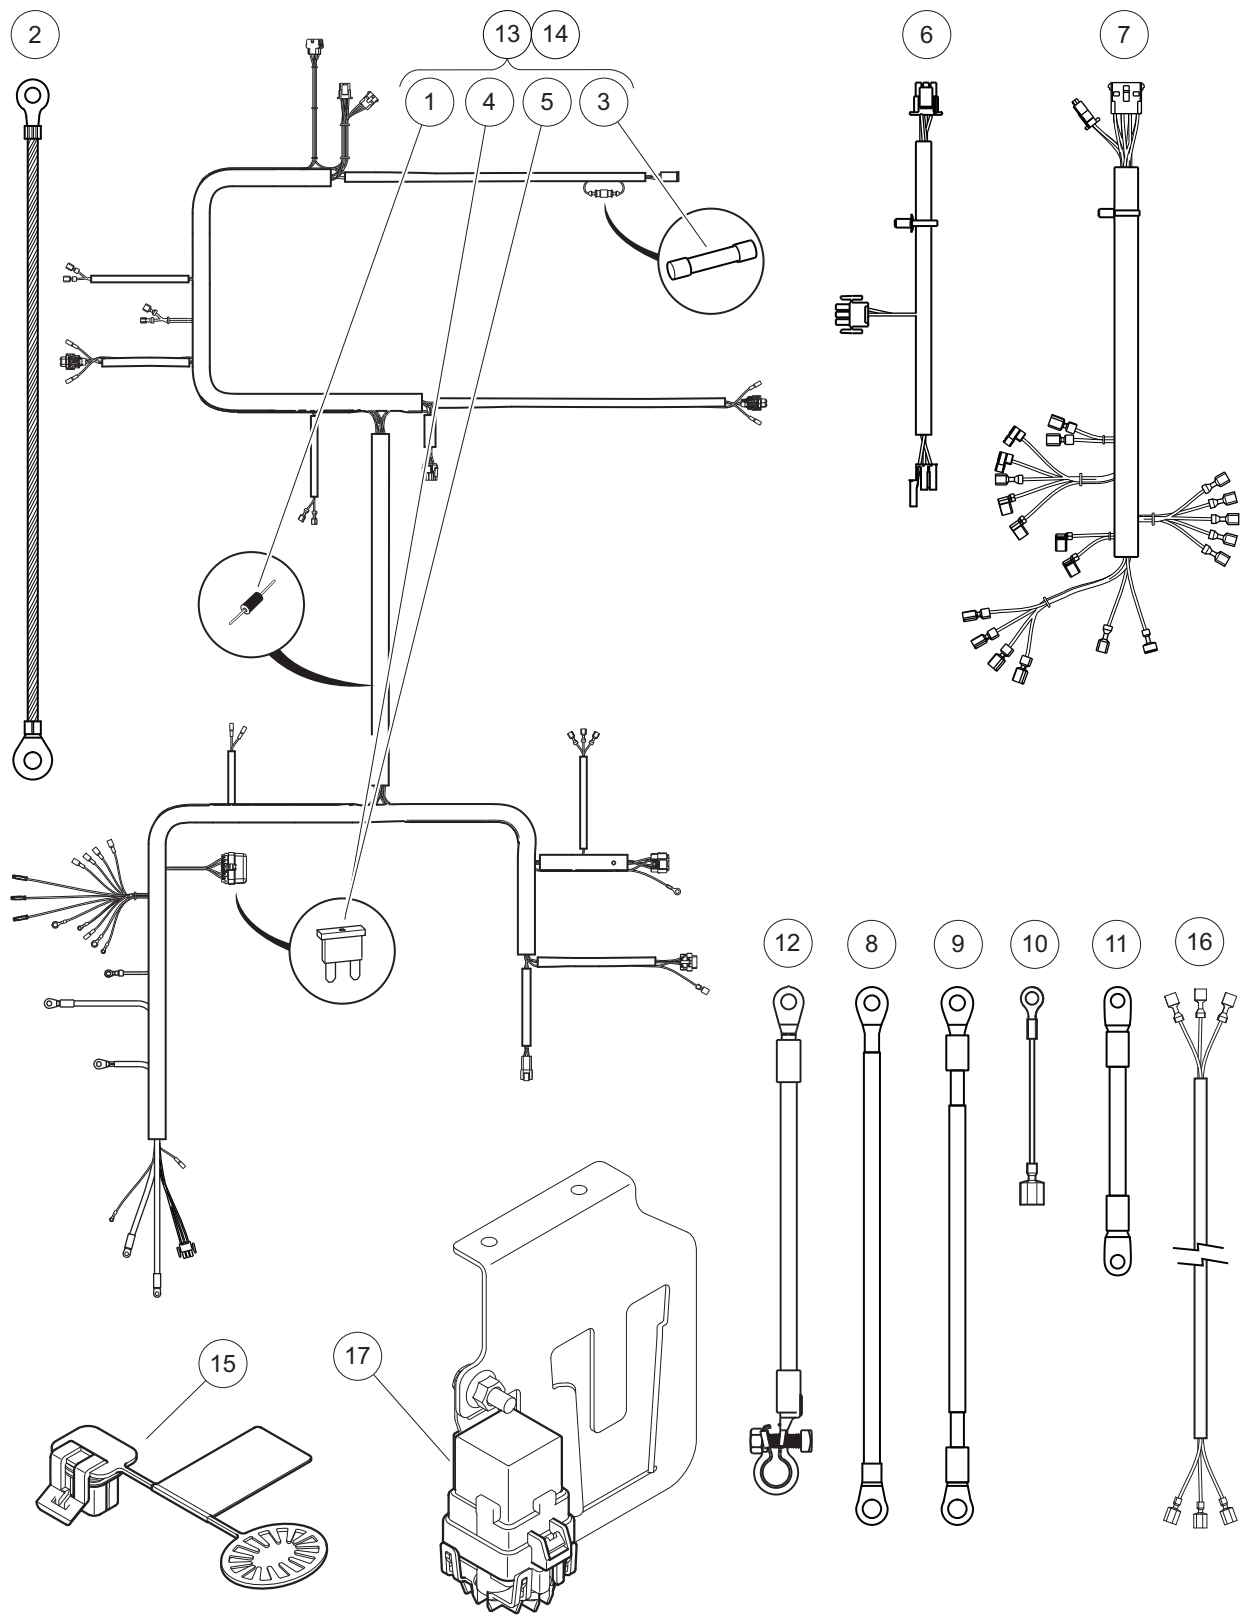

000994-003

WIRING, FUSES, AND DIODES, KEY AND PEDAL START – EFI

ITEM	PART NO.	DESCRIPTION	QTY	7	G
		1 2 3 4			
1	<u>1014789</u>	Diode, General Purpose, 3.0-Amp	2		
2	<u>1015332</u>	Wire, Ground, #10, Uninsulated	1		
3	<u>103924801</u>	Fuse, Glass, 2-Amp	1		
4	<u>105081501</u>	Fuse, ATM, 5-Amp	1		
5	<u>105081601</u>	Fuse, ATM, 10-Amp	1		
6	<u>105093301</u>	Harness, Wire, FNR Connector, CA300-700	1		
7	<u>105095101</u>	Harness, Wire, Instr. Panel, Gas, CA300-700	1		
8	<u>105135901</u>	Wire, Battery (side-post), B-, Gas	1		
9	<u>105136001</u>	Wire, Battery (side-post), B+, Gas	1		
10	<u>105143301</u>	Wire, Ground, Fuel Tank	1		
11	<u>105161701</u>	Wire, 4-Ga, Green, Starter/Generator	1		
12	<u>105256801</u>	Wire Assy, 4ga, Battery, (top-post) B+, Gas	1		
13	<u>47607337001</u>	Harness, Main, Gas, Ca500, Ks	1		
14	<u>47607338001</u>	Harness, Main, Gas, Ca500, Ps	1		
15	<u>47611208001</u>	Cap, Diagnostic Port	1		
16	<u>47616912001</u>	Jumper, Maint Sw / Diag. Port	1		
17	<u>47623281001</u>	Relay, Mini 630 Spdt,40a/30a	1		
		Note: For ECU, see Engine Ignition Components section.			

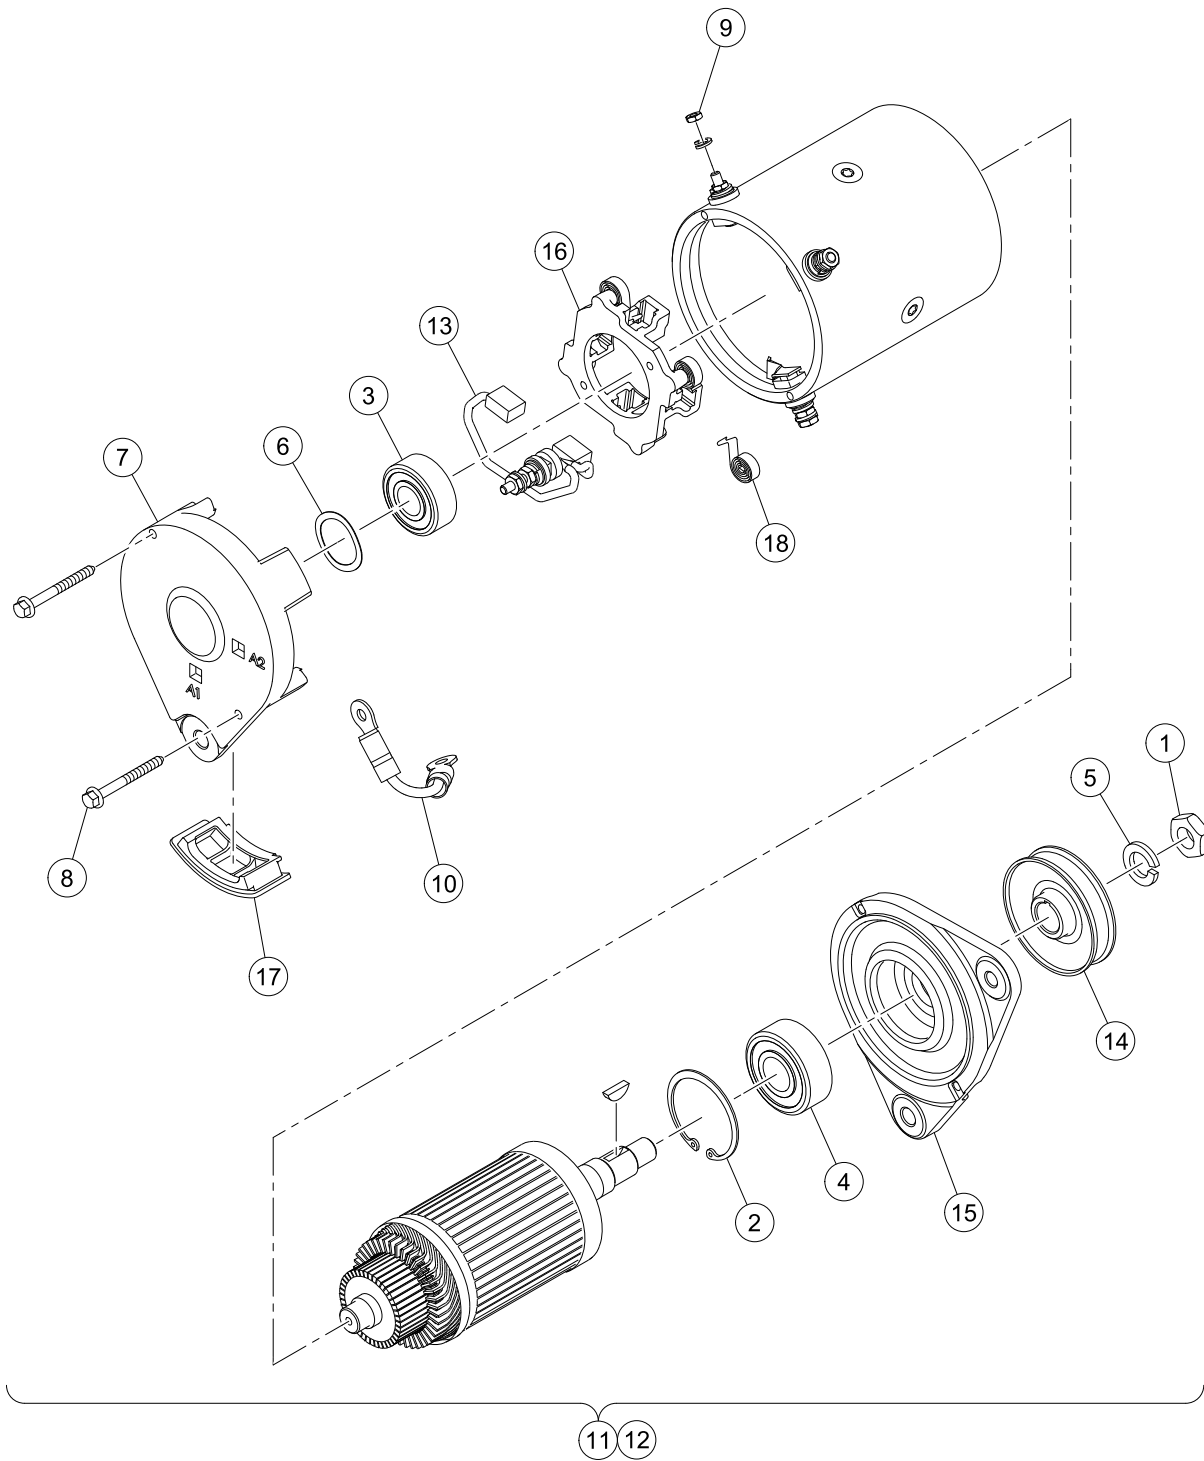


G-130199-000001

STARTER/GENERATOR, KEY AND PEDAL START – EFI

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102838701</u>	Nut, Hex, M14x2, S/G	1
2	<u>102838801</u>	Retainer, Front, S/G	1
3	<u>102838901</u>	Bearing, Ball, Rear, S-g	1
4	<u>102839001</u>	Bearing, Ball, Front, S-g	1
5	<u>102839301</u>	Washer, Lock M14x2, S-g	1
6	<u>102841101</u>	Washer, Wave, S-g	1
7	<u>103347601</u>	Head, Comm End, S-g	1
8	<u>103347701</u>	Set, Fast, Ceh Deh, S-g	1
9	<u>103347801</u>	Set, Term Hardware, S/G	1
10	<u>105161701</u>	Wire, 4-Ga, Green, Starter/Generator	1
11	<u>47559475001</u>	Starter Generator, Ps	1
12	<u>47559475002</u>	Starter Generator, Ks	1
13	<u>47583000001</u>	Set, Brush Term, S-g	1
14	<u>47583790001</u>	Pulley, Starter-generator	1
15	<u>47583791001</u>	Head, Drive End, S-g	1
16	<u>47583794001</u>	Kit, Brush And Brush Holder	1
17	<u>47584178001</u>	Kit, Cover, Brush Insp, S-g	1
18	<u>47584179001</u>	Kit, Spring Brush, S-g	1


7
G

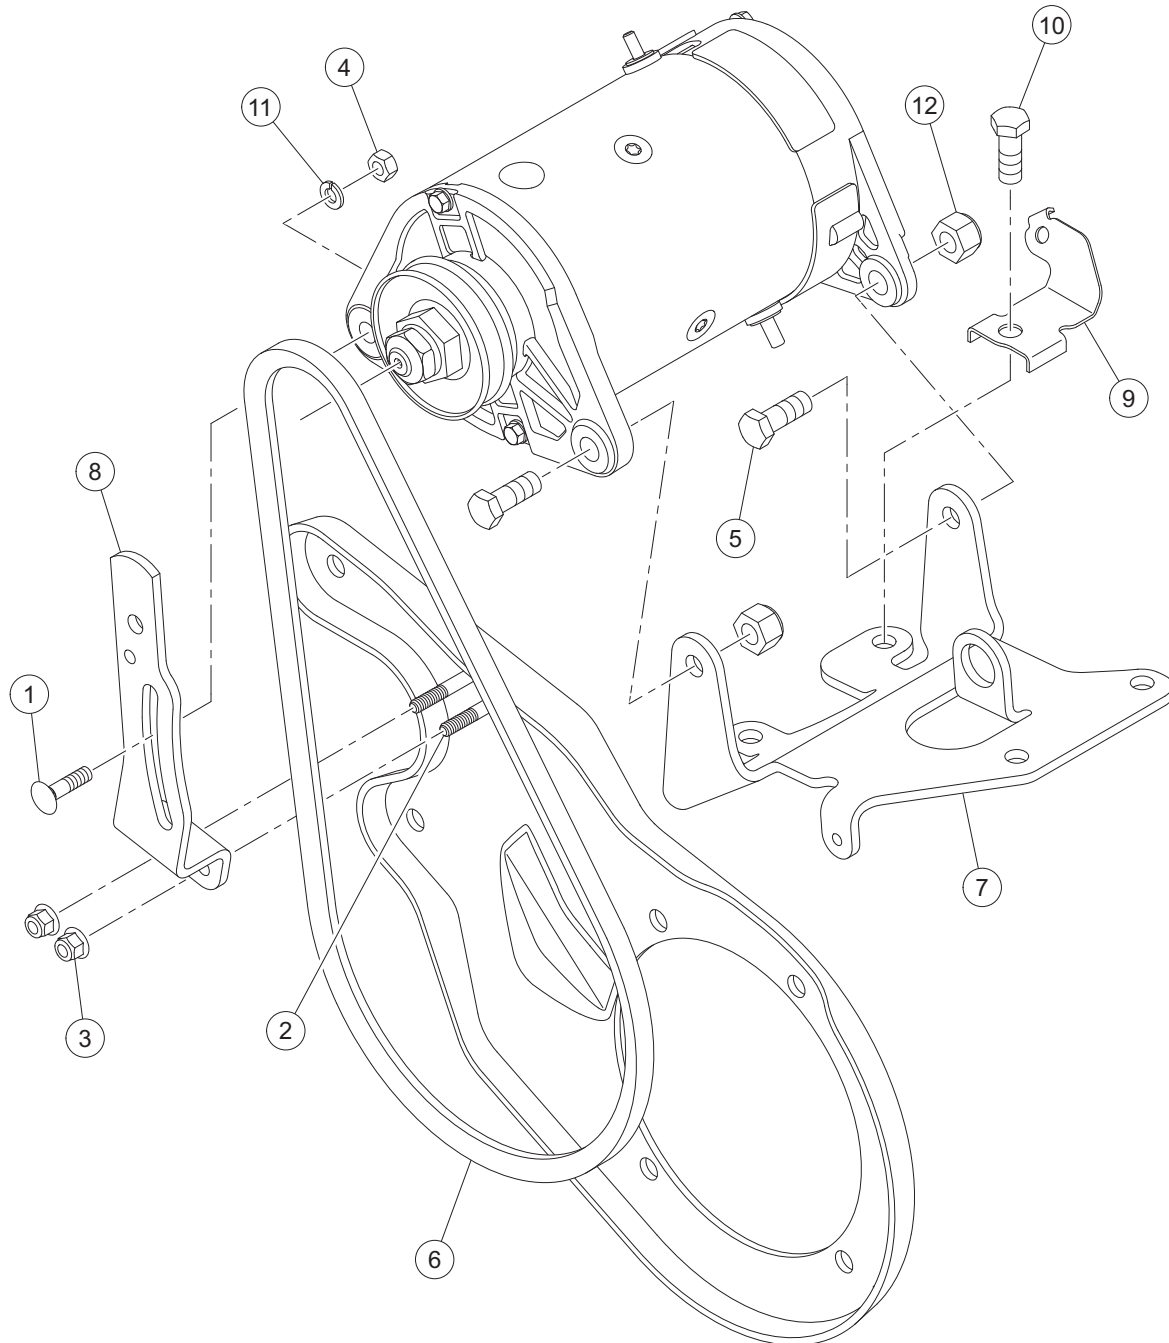

G-130199-000002

STARTER/GENERATOR MOUNTING – ECH440


ITEM	PART NO.	DESCRIPTION	QTY	7
		1 2 3 4		G
1	<u>1015932</u>	Bolt, Carriage, 5/16-18	1	
2	<u>102541401</u>	Bolt-m6x1.0x20 Hex Flhd Blk-I	2	
3	<u>102621501</u>	Nut, Flange, M6 X 1.0, Nylon	2	
4	<u>1242</u>	Nut, 5/16-18 Hex	1	
5	<u>1624</u>	Screw, 3/8-16 X 1.50, Hex-Head Cap	2	
6	47539338002	Belt, Sg, Ech440, #5a	1	
7	47611868001	Bracket, Mounting, S/g	1	
8	47611869001	Bracket, Tensioner, S/g	1	
9	47611870001	Bracket, Mtg, Gov Cable Clip	1	
10	47617345001	Screw, M8-1.25x20, Hex Hd Flg	4	
11	<u>7174</u>	Lockwasher, 5/16 Split	1	
12	<u>8754</u>	Locknut, 3/8-16 Hex	2	

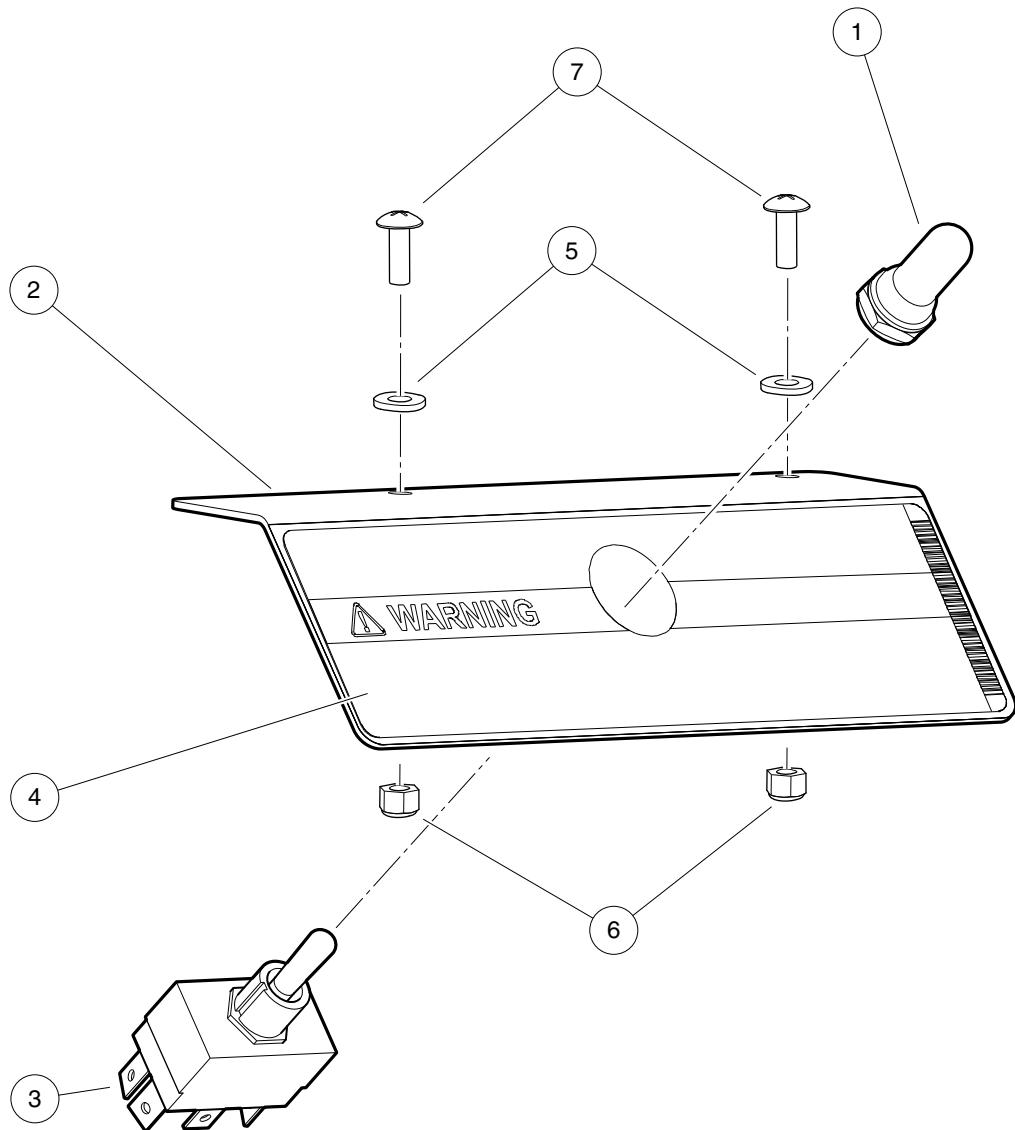

000755-003

OPERATION AND MAINTENANCE SWITCH



ITEM	PART NO.	DESCRIPTION	QTY	7	G
		1 2 3 4			
1	<u>101908401</u>	Boot, Switch	1		
2	<u>101922501</u>	Bracket, Tow/Run Switch Mounting	1		
3	<u>103198401</u>	Switch, Toggle, SPDT	1		
4	<u>103205501</u>	Decal, Maintenance/Operate Switch	1		
5	<u>332</u>	Washer, 1/4 Type A Narrow Flat	2		
6	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	2		
7	<u>8248</u>	Screw, 1/4-20 X 0.75, Truss-Head Machine	2		

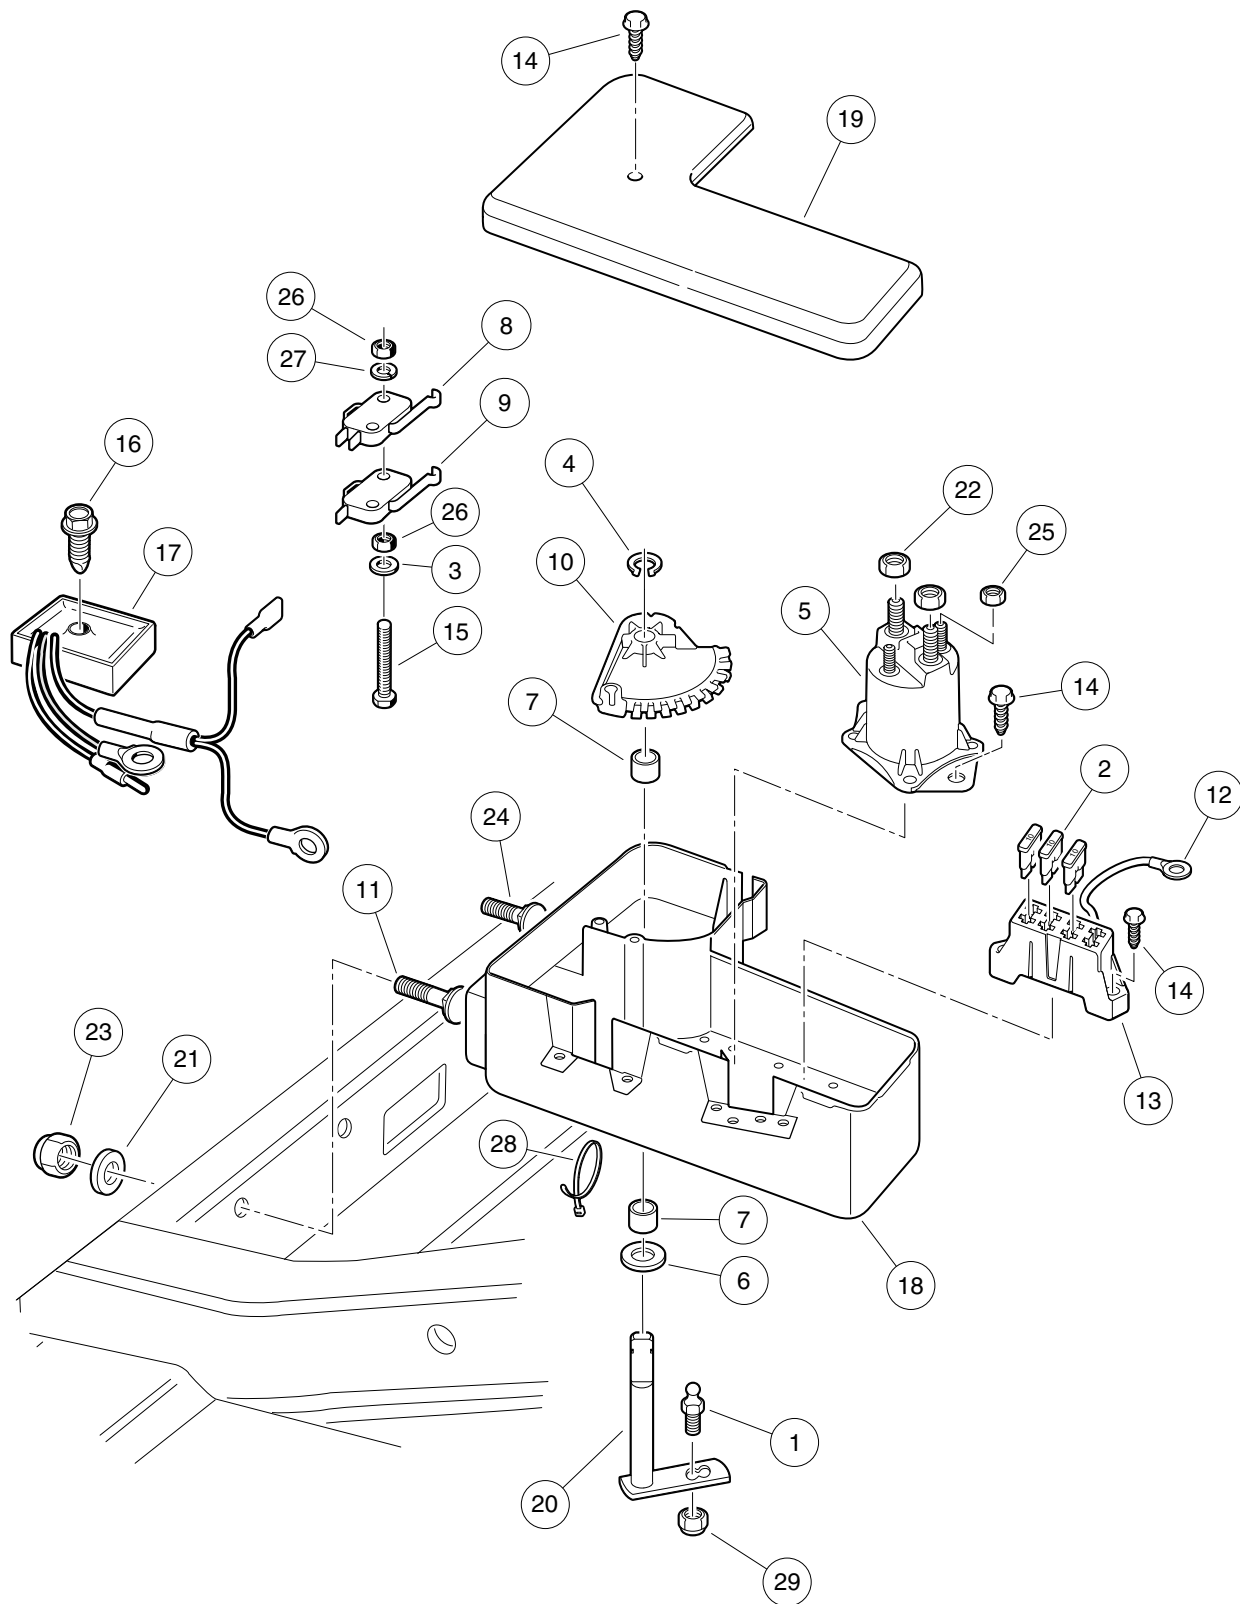

001014-001

ELECTRICAL COMPONENT BOX, PEDAL-START

ITEM	PART NO.	DESCRIPTION	QTY	7	G
		1 2 3 4			
1	<u>1010954</u>	Stud, Ball, 1/4-28 X 0.560	1		
2	<u>1012295</u>	Fuse, 10-Amp	3		
3	<u>1012431</u>	Washer, #4 Flat	2		
4	<u>1013589</u>	Ring, Retaining, 0.338" Internal	1		
5	<u>1013609</u>	Solenoid, 12-Volt	1		
6	<u>1014065</u>	Washer, Flat, 0.38" ID, Delrin	1		
7	<u>1014145</u>	Bushing, Secondary Weight, Split	2		
8	<u>1014807</u>	Switch, Limit	1		
9	<u>1014808</u>	Switch, Limit	1		
10	<u>1015373</u>	Cam, Electric Box	1		
11	<u>1015405</u>	Bolt, Carriage, 5/16-18 X 2.0	1		
12	<u>1015737</u>	Wire Assy, #10 Red	1		
13	<u>1015741</u>	Fuse Block	1		
14	<u>1015752</u>	Screw, #12-16 X 0.625, Hi-Lo	5		
15	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2		
16	<u>101856102</u>	Screw, 1/4-15 X 1.50, Hi-lo, Hex	1		
17	<u>102711201</u>	Voltage Regulator	1		
18	<u>105000301</u>	Box, Component, Electrical	1		
19	<u>105000401</u>	Cover, Box, Component, Elec	1		
20	<u>105037401</u>	Weldment, Bellcrank, Comp Box	1		
21	<u>1241</u>	Washer, 5/16 Type A Flat	2		
22	<u>1242</u>	Nut, 5/16-18 Hex	2		
23	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2		
24	<u>7818</u>	Bolt, Carriage, 5/16-18 X 1.5	1		
25	<u>7893</u>	Nut, #10-32 Hex	2		
26	<u>8057</u>	Nut, #4-40 Hex Machine	4		
27	<u>8058</u>	Lockwasher, #4 Split	2		
28	<u>8639</u>	Tie Wrap, 11" Nylon	6		
29	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1		

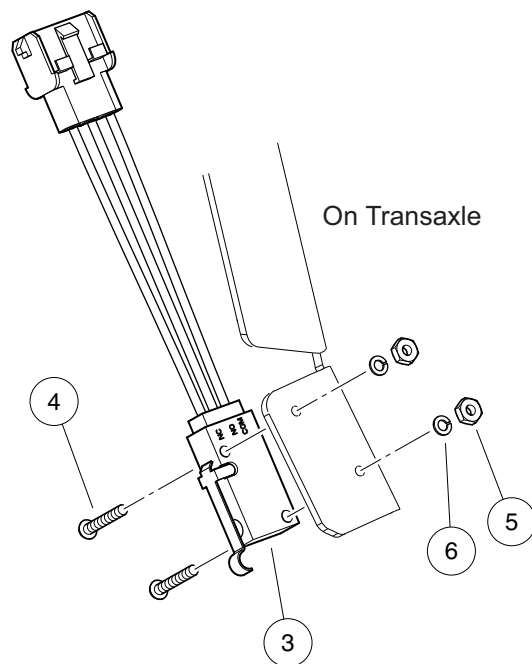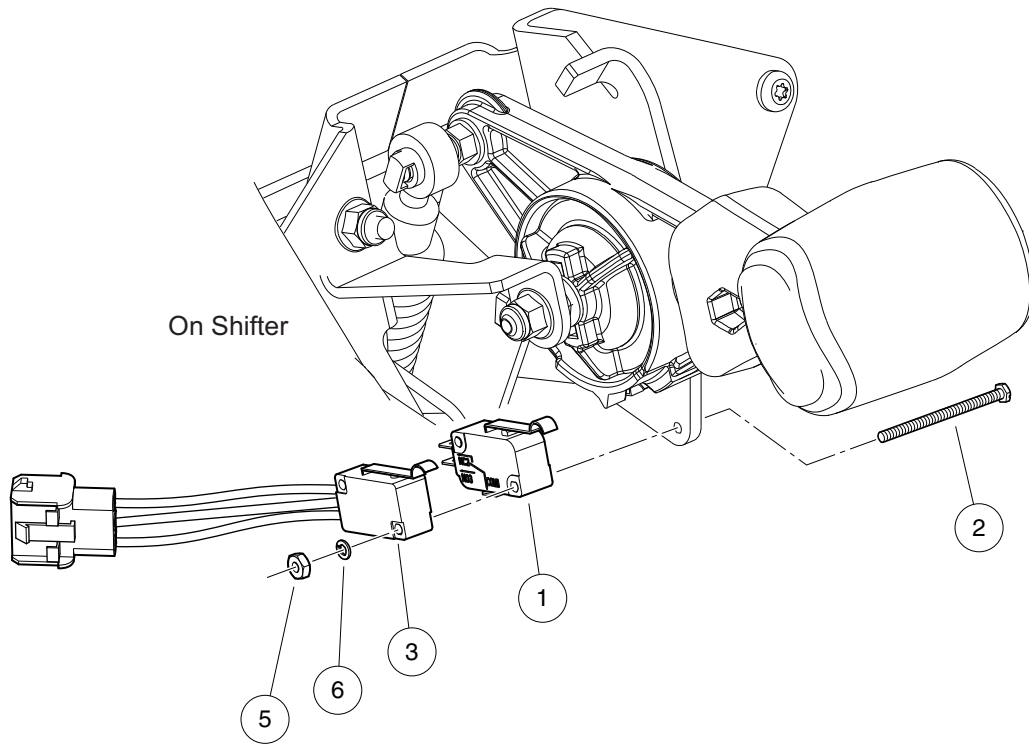


000999-001

FORWARD/REVERSE SHIFTER SWITCHES, PEDAL-START – EFI

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014807</u>	Switch, Limit	1
2	<u>1015878</u>	Screw, #4-40 Hex Head Machine	2
3	<u>105102601</u>	Switch, Limit, Sealed, with 3-Wire Lead	2
4	<u>8056</u>	Screw, #4-40 X 0.75 Round-Head Machine	2
5	<u>8057</u>	Nut, #4-40 Hex Machine	4
6	<u>8058</u>	Lockwasher, #4 Split	4


7
G

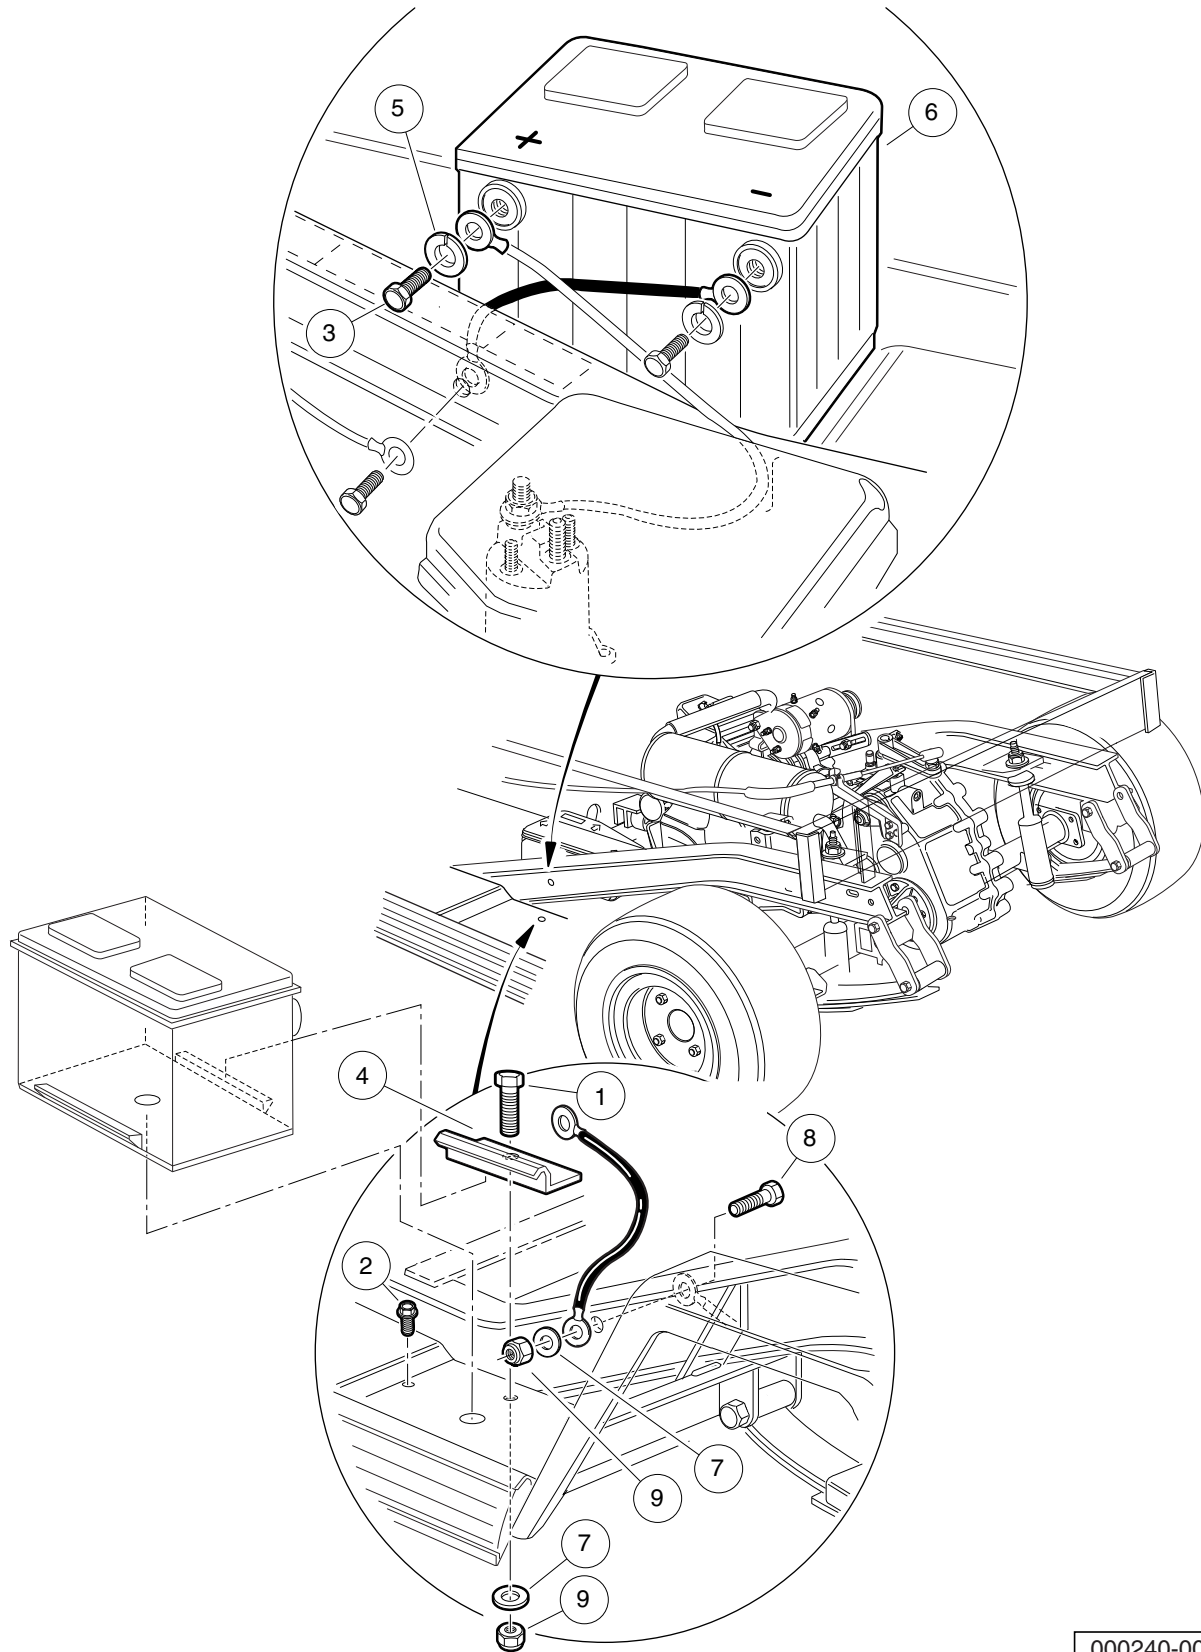

000240-001

BATTERY – GASOLINE UTILITY VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY	7	G
		1 2 3 4			
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1		
2	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	1		
3	<u>1014375</u>	Screw, 3/8-16 X 0.50, Stainless Steel, Hex-Head	2		
4	<u>101898001</u>	Clamp, Battery	1		
5	<u>101898101</u>	Retainer - Battery	1		
6	<u>102355301</u>	Lockwasher, 3/8 Split Ss	2		
7	<u>103496801</u>	Battery, Start, 12v	1		
8	<u>1241</u>	Washer, 5/16 Type A Flat	2		
9	<u>1606</u>	Rivet, 3/16 X .500 Alum Pop	2		
10	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1		
11	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2		

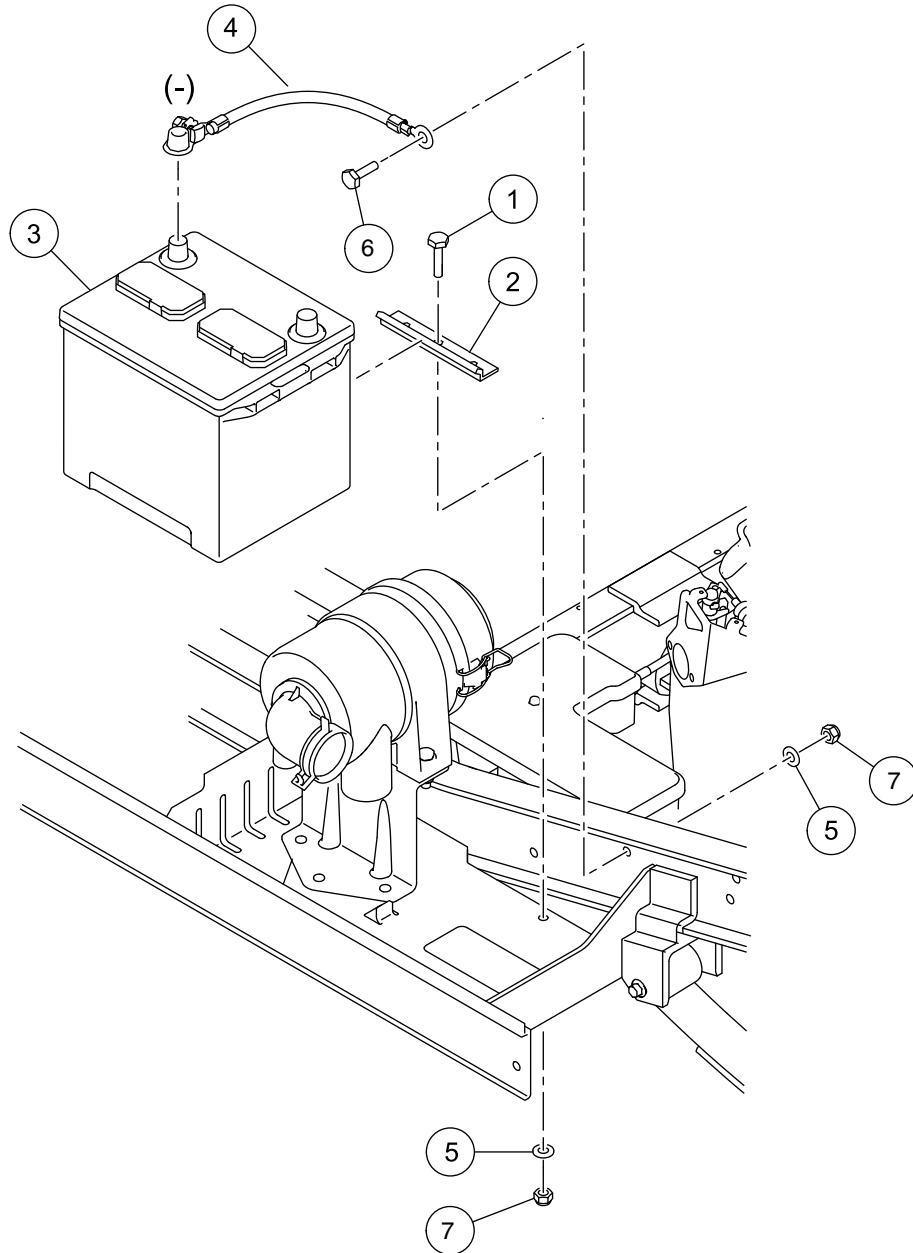

000250-001

TOP-POST BATTERY – GASOLINE UTILITY VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	7	G
		1 2 3 4			
1	<u>1010934</u>	Screw, 5/16-18 X 1.00 Hex Cap	1		
2	<u>101898001</u>	Clamp, Battery	1		
3	<u>105237399</u>	Battery, Start, 12v, G 26, Sp	1		
4	<u>105256701</u>	Wire Assy, 4ga, Battery, (top-post) B-, Gas	1		
5	<u>1241</u>	Washer, 5/16 Type A Flat	2		
6	<u>7173</u>	Screw, 5/16-18 X 0.75, Hex-Head Cap	1		
7	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2		

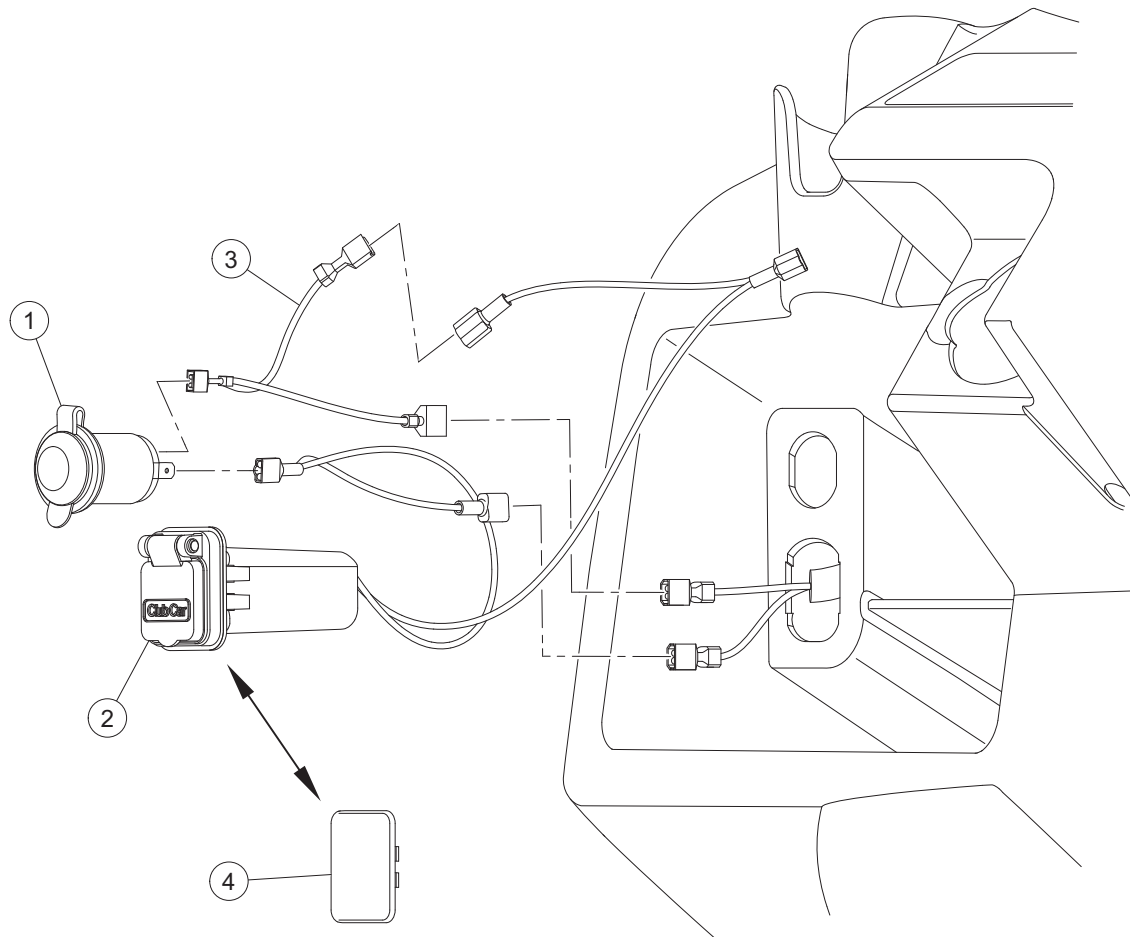

G-150299-000001

USB AND POWERPOINT RECEPTACLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102198001	Receptacle, Accessory	1
2	47587715001	Usb, 12v	1
3	47654251001	Harness, Jumper, Usb	1
4	47669399001	Plug, Usb	A/R

7

G


7

G


ENGINE (KOHLER ECH440)

8

G

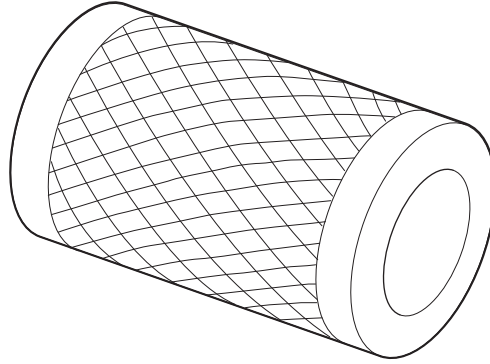

1




2

000992-003

8
G


2022 CafÈ Express Gasoline Vehicle Illustrated Parts List Page 8-3

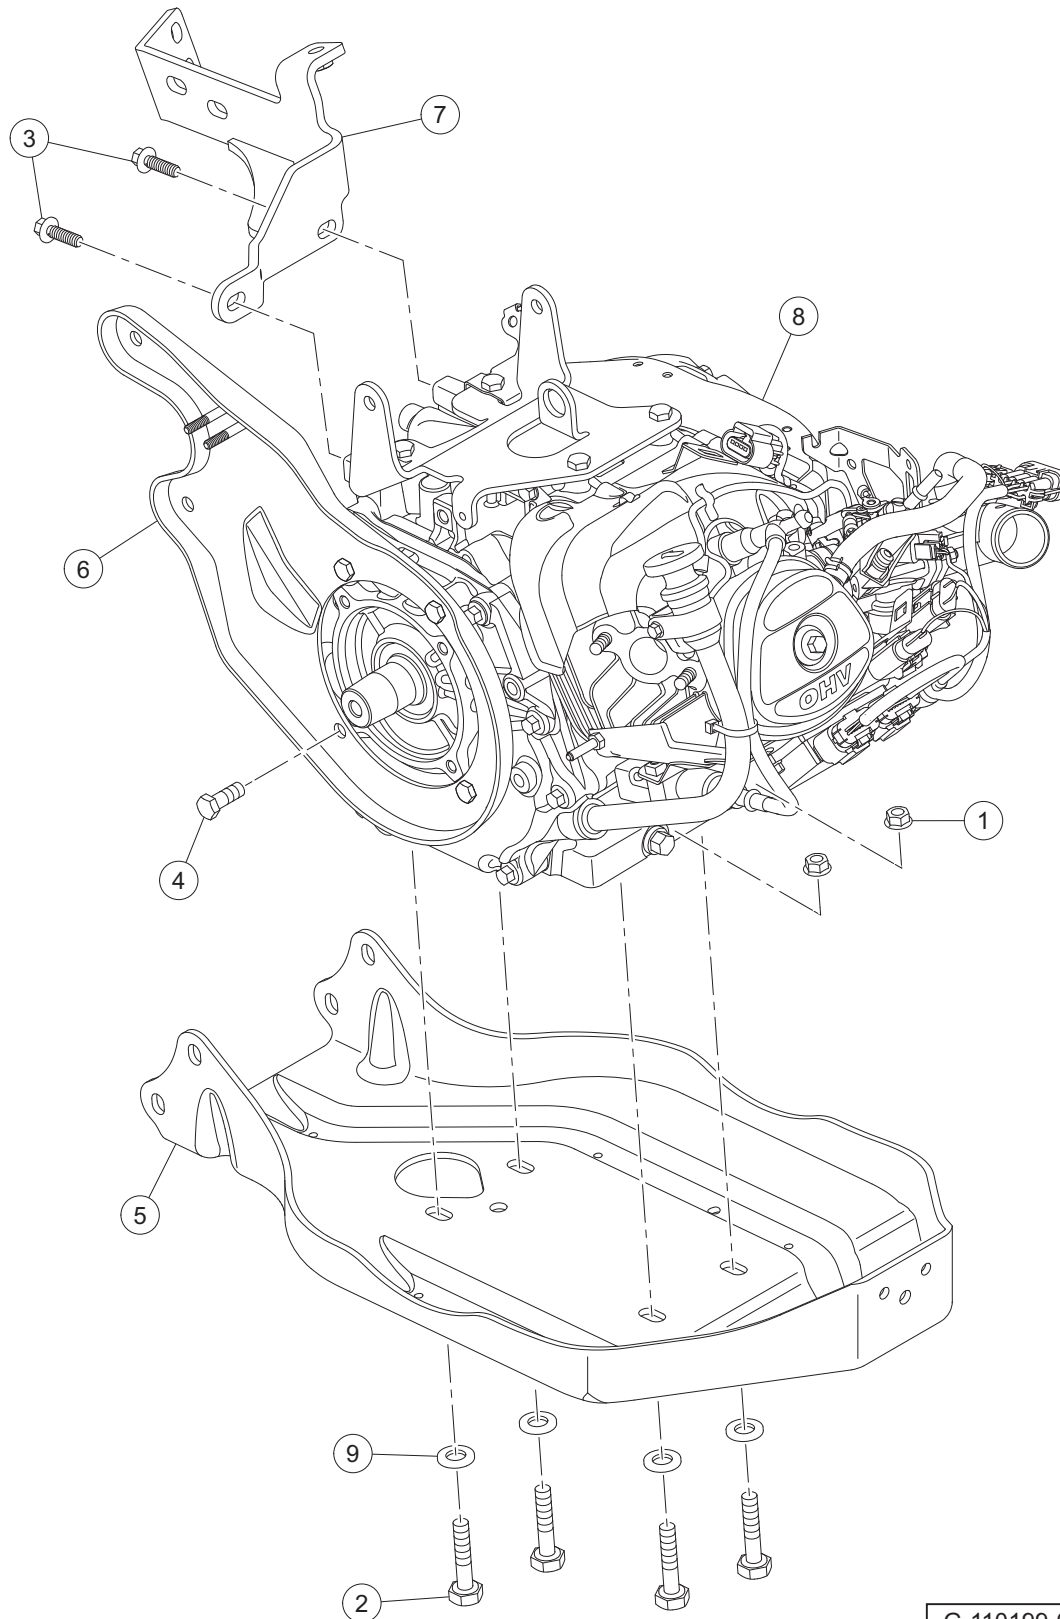

G-110199-000004

ENGINE AND ENGINE MOUNTING


ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>102617201</u>	Nut, Flanged, M10 X 1.5, Mechanically Deformed	4	
2	<u>102732401</u>	Bolt, M10 X 45, Zn-Ni (Black)	4	
3	<u>103262201</u>	Bolt Flg Blk, M8 X 25, Loctite	2	
4	<u>103508101</u>	Bolt, 3/8-16 X .75 Lock Patch	4	
5	47611483001	Plate, Mtg, Engine/axle, Pan	1	
6	47611484001	Plate, Mtg, Engine/axle, Cvt	1	
7	47611648001	Weldment, Mtg, Exhaust	1	
8	47695923001	Engine, Gas, Kohler Ech440	1	
9	<u>96741046</u>	Washer, M10, Hard	4	

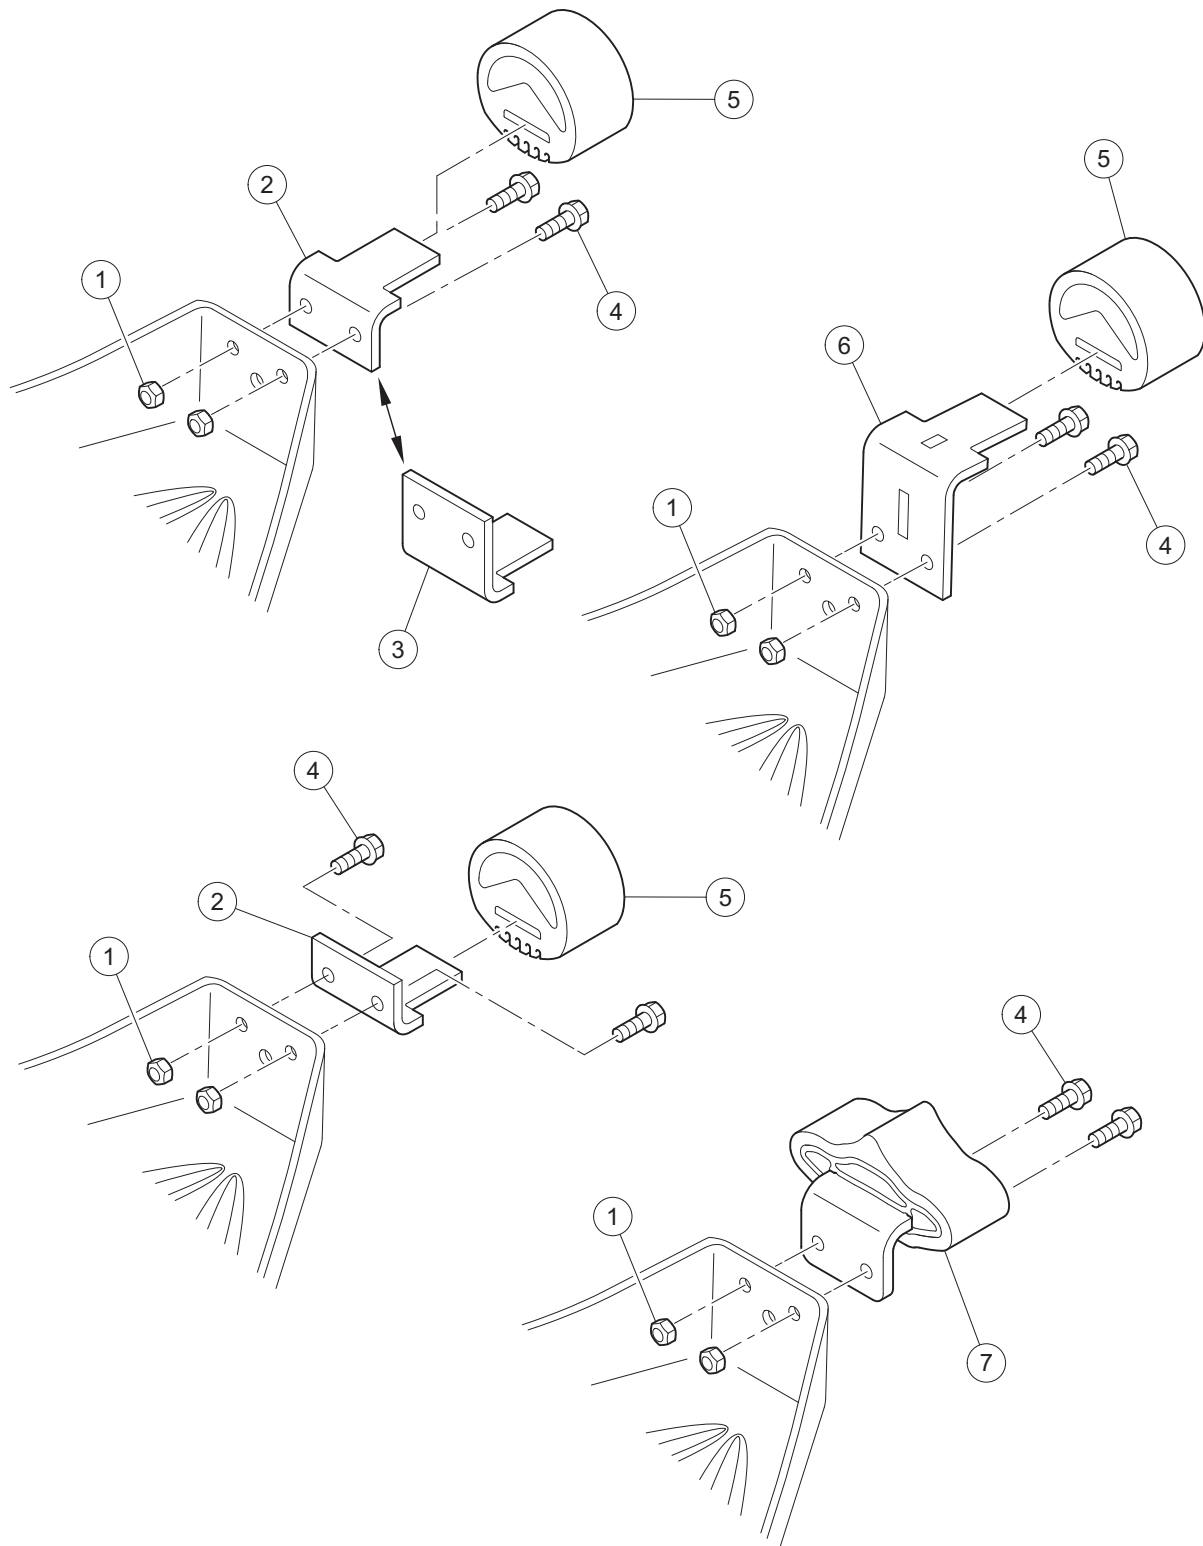

G-010299-000001

ENGINE PAN AND SNUBBER MOUNTING


ITEM	PART NO.	DESCRIPTION	QTY	8	G
		1 2 3 4			
1	<u>1013924</u>	Nut, 5/16-24, Hex Head Cone	2		
2	<u>101834601</u>	Bracket, Snubber	1		
3	<u>101834602</u>	Bracket, Snubber, Tall	1		
4	<u>101884801</u>	Screw, 5/16-24 X 0.875, Grade-8	2		
5	<u>102540301</u>	Snubber, Inner Frame	1		
6	47564890001	Bracket, Snubber, Csmr, Lifted	1		
7	47587701001	Asm, Dual Snubber (includes items 8 and 9)	1		
8	47583795001	Bracket, Dual Snubber	1		
9	47584184001	Snubber, Dual	1		
Note: Items 8 and 9 are not illustrated.					

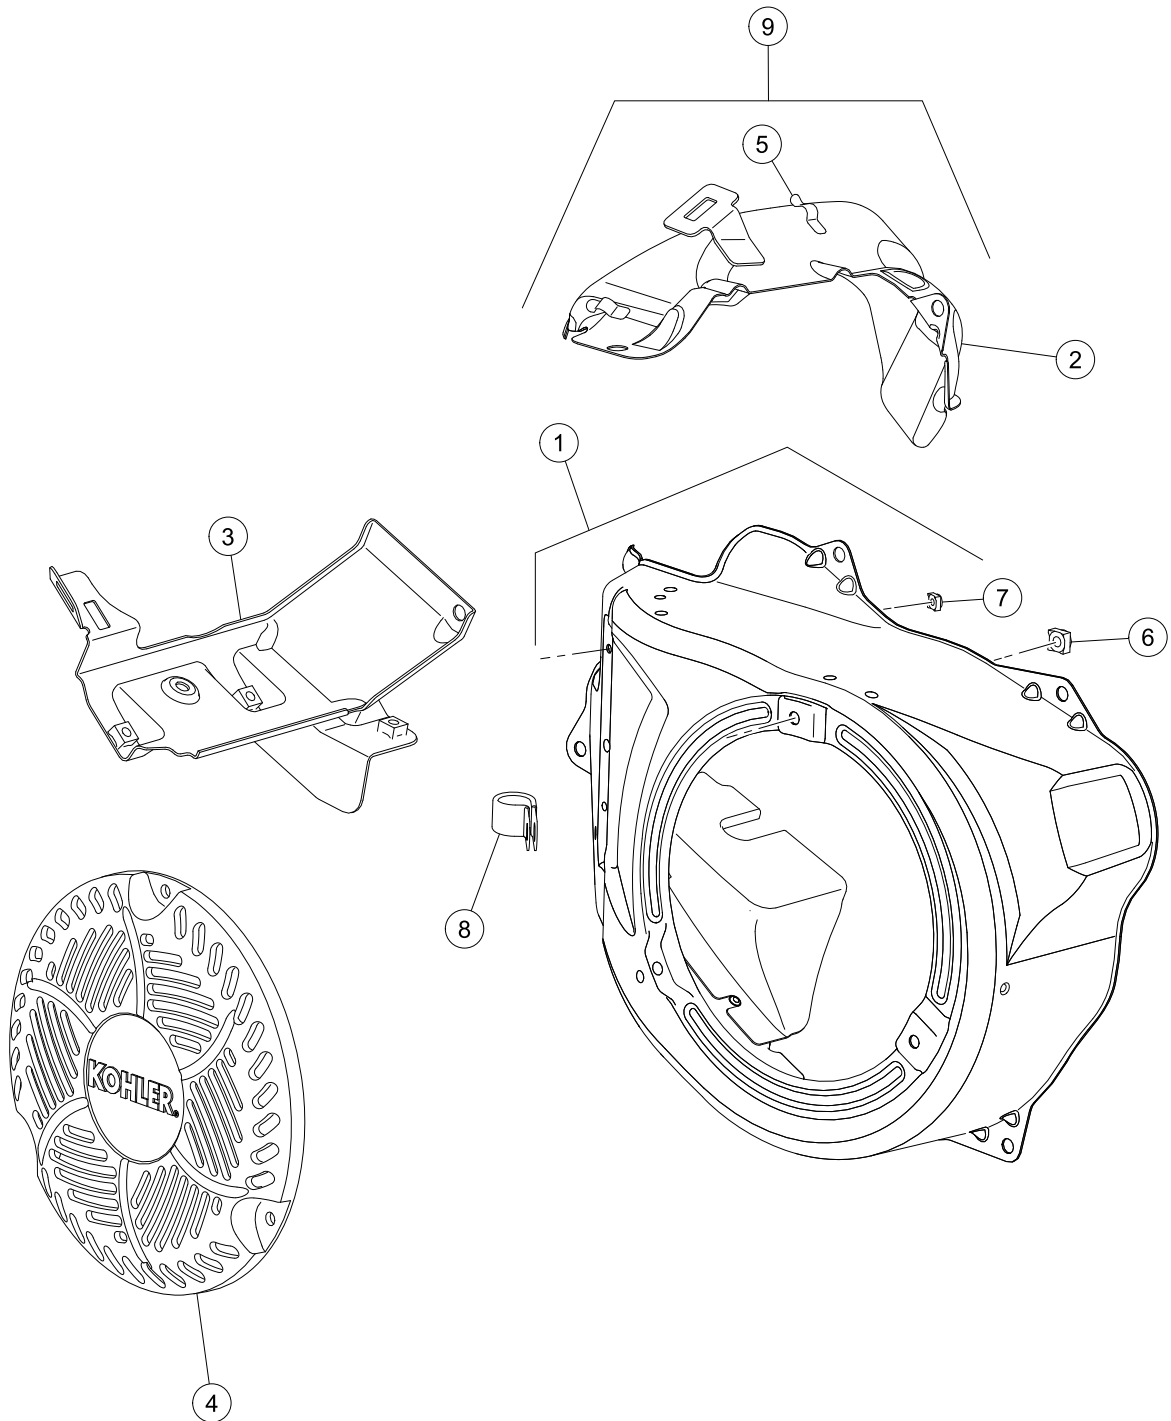

G-040899-000001

BLOWER HOUSING AND HEAT SHIELD – ECH440


ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>47629844001</u>	Kit, Blower Housing, Kohler	1	
2	<u>47629845001</u>	Shield, Upper Heater, Kohler	1	
3	<u>47629846001</u>	Shield Assembly, Cylinder, Koh	1	
4	<u>47629847001</u>	Screen, Blower Housing, Kohler	1	
5	<u>47629848001</u>	Clip, Wire, Kohler	2	
6	<u>47629851001</u>	Nut, Blower Housing (cky), Koh	1	
7	<u>47629853001</u>	Nut, Blower Housing (cky), Koh	1	
8	<u>47629855001</u>	Clamp, Insulator, Kohler	1	
9	<u>47629856001</u>	Assembly, Heat Shield, Kohler	1	

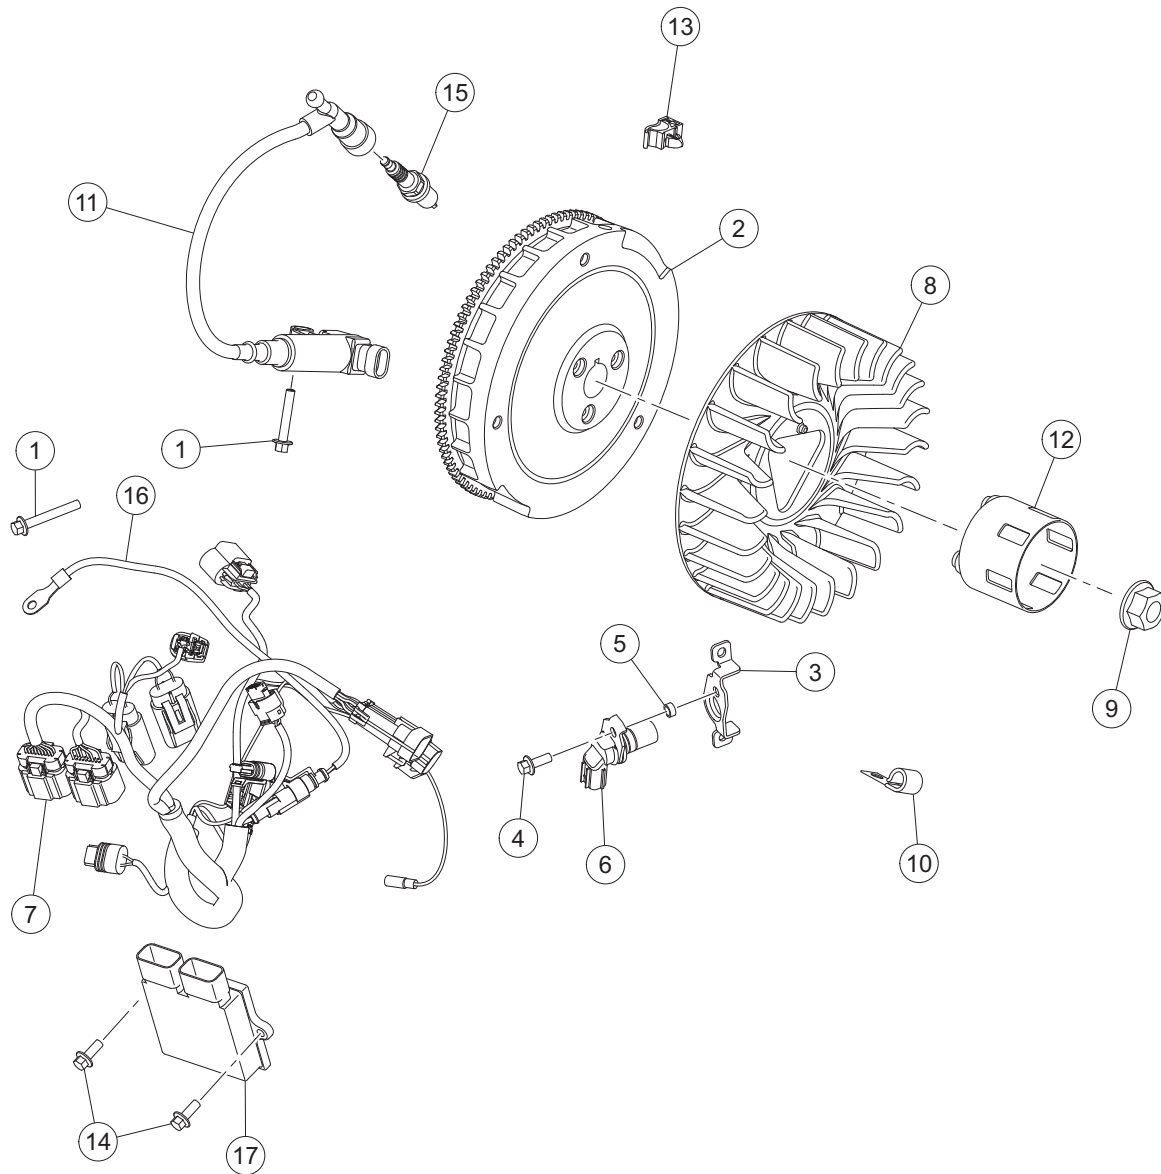

G-040799-000004

IGNITION COMPONENTS AND FLYWHEEL – ECH440


ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	47629702001	Screw, Hex Flange (m6), Kohler	3	
2	47629702001	Screw, Hex Flange (m6), Kohler	1	
3	47629826001	Flywheel Assy, Electric Start	1	
4	47629828001	Bracket, Crank Sensor, Kohler	1	
5	47629831001	Screw, Hex Flange, Kohler	1	
6	47629832001	Spacer, Kohler	1	
7	47629833001	Sensor, Speed, Kohler	1	
8	47629834001	Harness, Wiring Assy, Kohler	1	
9	47629835001	Fan, Flywheel, Kohler	1	
10	47629836001	Nut, Flywheel, Kohler	1	
11	47629837001	Clip, Cable, Kohler	1	
12	47629838001	Coil, Ignition-efi, Kohler	1	
13	47629841001	Cup, Starter Drive, Kohler	1	
14	47629843001	Clip, Wiring Harness, Kohler	1	
15	47640021001	Screw, M6x16, Kohler	2	
16	47640281001	Plug, Spark, Kohler	1	
17	47650647001	Sensor, Temperature	1	
18	47676897001	Module, ECU, Kohler	1	

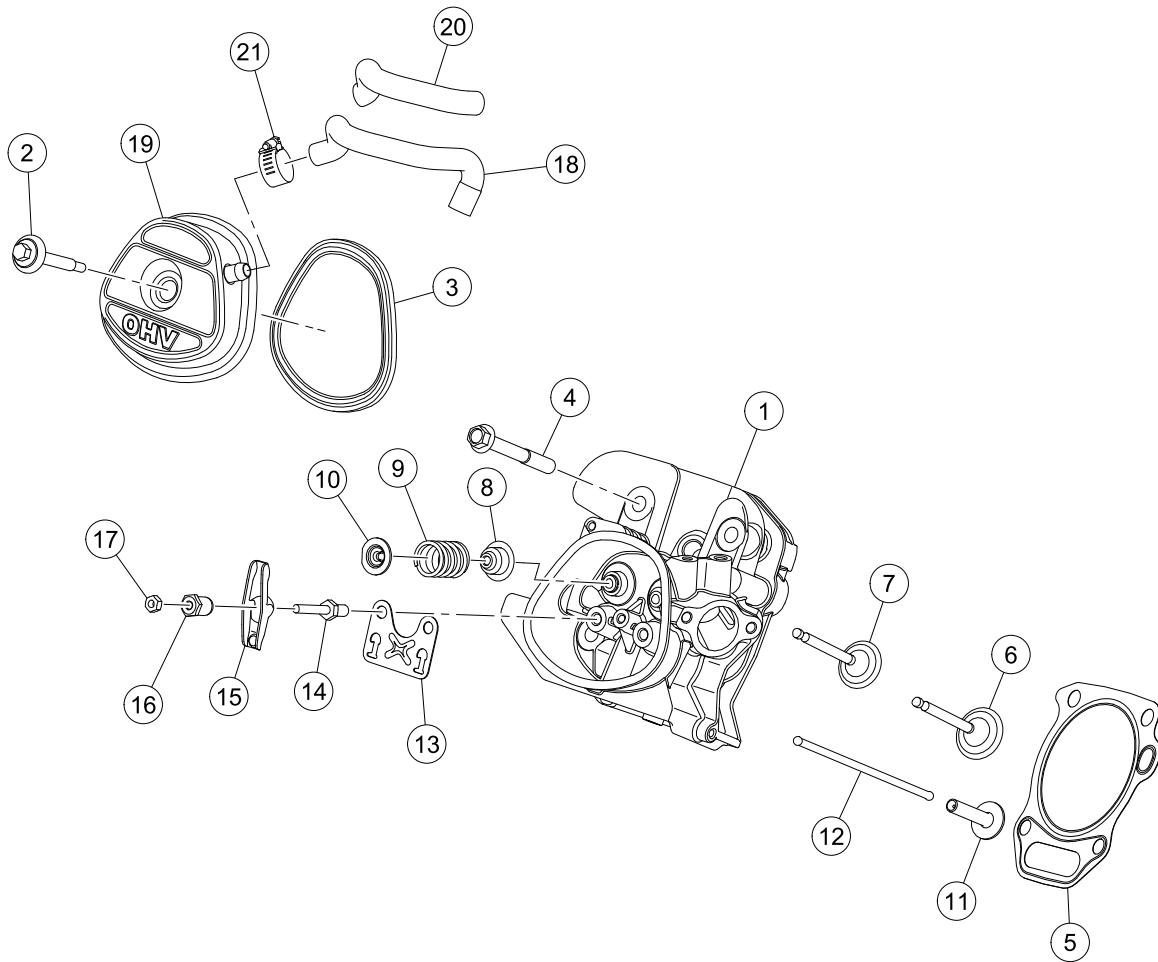

G-040599-000001

CYLINDER HEAD AND VALVE – ECH440


ITEM	PART NO.	DESCRIPTION	QTY	8	G
		1 2 3 4			
1	47629711001	Assembly, Cylinder Head, Kohle	1		
2	47629714001	Screw, Valve Cover Seal Assy,	1		
3	47629716001	Gasket, Valve Cover, Kohler	1		
4	47629717001	Screw, Hex Flange Cylinder Hea	4		
5	47629718001	Kit, Head Gasket, Kohler	1		
6	47629719001	Valve, Intake, Kohler	1		
7	47629720001	Valve, Exhaust, Kohler	1		
8	47629722001	Seal, Valve Stem, Kohler	2		
9	47629723001	Spring, Valve, Kohler	2		
10	47629724001	Retainer, Valve Spring, Kohler	2		
11	47629725001	Lifter, Valve, Kohler	2		
12	47629726001	Rod, Push, Kohler	2		
13	47629727001	Plate, Pushrod Guide, Kohler	1		
14	47629728001	Stud, Rocker, Kohler	2		
15	47629729001	Arm, Rocker, Kohler	2		
16	47629730001	Pivot, Rocker Arm, Kohler	2		
17	47629768001	Nut, Hex Jam, Kohler	2		
18	47629822001	Hose, Breather, Kohler	1		
19	47629823001	Valve Cover Assembly, Kohler	1		
20	47629824001	Sleeve, Anti Abrasion, Kohler	1		
21	47629825001	Clamp, Hose, Kohler	1		

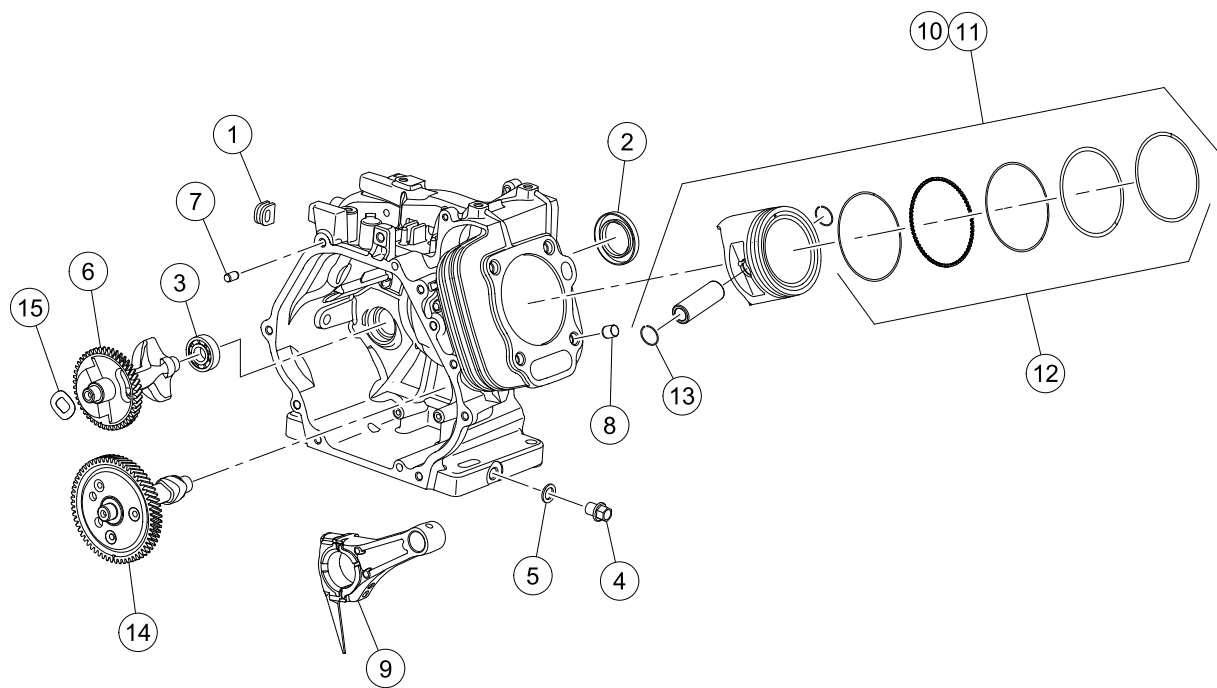

G-040399-000001

CRANKCASE AND PISTON – ECH440


ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>47629677001</u>	Grommet, Crankcase,kohler	1	
2	<u>47629680001</u>	Seal, Crankcase, Kohler	2	
3	<u>47629682001</u>	Bearing, Balancing Shaft, Kohl	2	
4	<u>47629685001</u>	Kit, Drain Plug, Kohler	2	
5	<u>47629686001</u>	Washer, Drain Plug, Kohler	2	
6	<u>47629687001</u>	Shaft, Balance, Kohler	1	
7	<u>47629688001</u>	Pin, Dowel, Kohler	2	
8	<u>47629689001</u>	Pin, Dowel Cylinder Head, Kohl	2	
9	<u>47629690001</u>	Rod, Connecting Assembly,kohle	1	
10	<u>47629691001</u>	Kit, Piston Wing Set (std), Ko	1	
11	<u>47629693001</u>	Kit, Piston (0.25 O.s.), Kohle	1	
12	<u>47629694001</u>	Ring Set, Kohler	2	
13	<u>47629696001</u>	Retainer, Piston, Kohler	2	
14	<u>47629697001</u>	Camshaft Assembly, Kohler	1	
15	<u>47629698001</u>	Spring, Wave, Kohler	1	

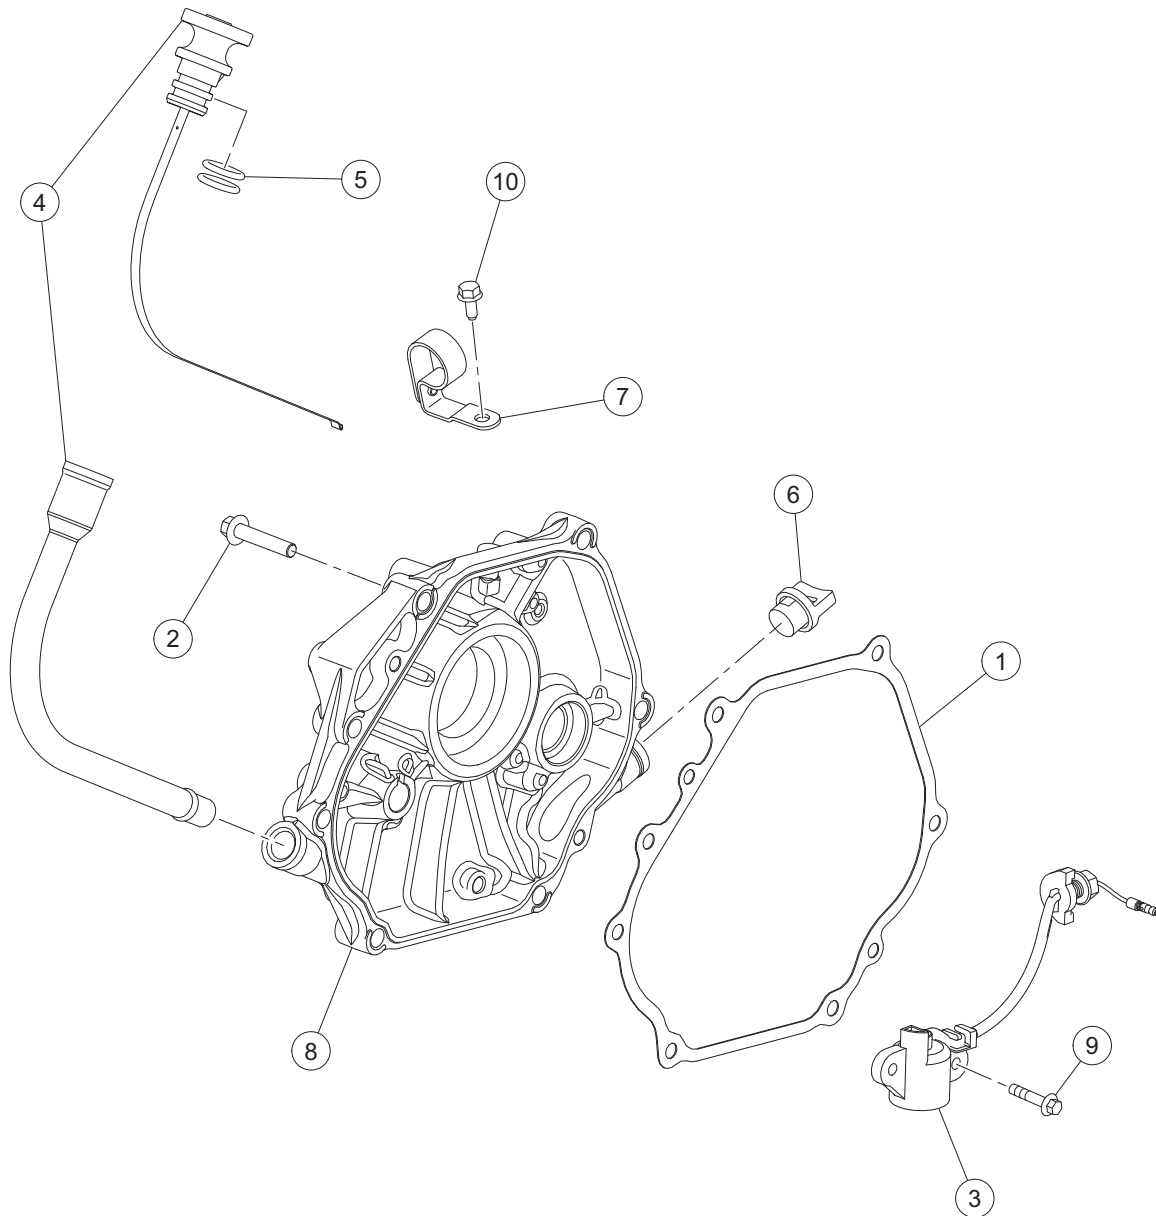

G-040699-000002

OIL SENSOR AND LUBRICATION – ECH440

ITEM	PART NO.	DESCRIPTION	QTY	8
		1 2 3 4		G
1	<u>47629699001</u>	Gasket, Closure Plate, Kohler	1	
2	<u>47629700001</u>	Screw, Closure Plate, Kohler	7	
3	<u>47629701001</u>	Switch, Oil Sensor Assembly, K	1	
4	<u>47629703001</u>	Dipstick, Assembly, Kohler	1	
5	<u>47629705001</u>	O-ring, Dipstick Cap, Kohler	2	
6	<u>47629707001</u>	Cap Assy, Oil Fill, Kohler	1	
7	<u>47629709001</u>	Bracket, Dipstick Tub, Kohler	1	
8	<u>47640020001</u>	Plate, Closure, Kohler	1	
9	<u>47640021001</u>	Screw, M6x16, Kohler	2	
10	<u>47640022001</u>	Screw, M5 X8, Kohler	1	

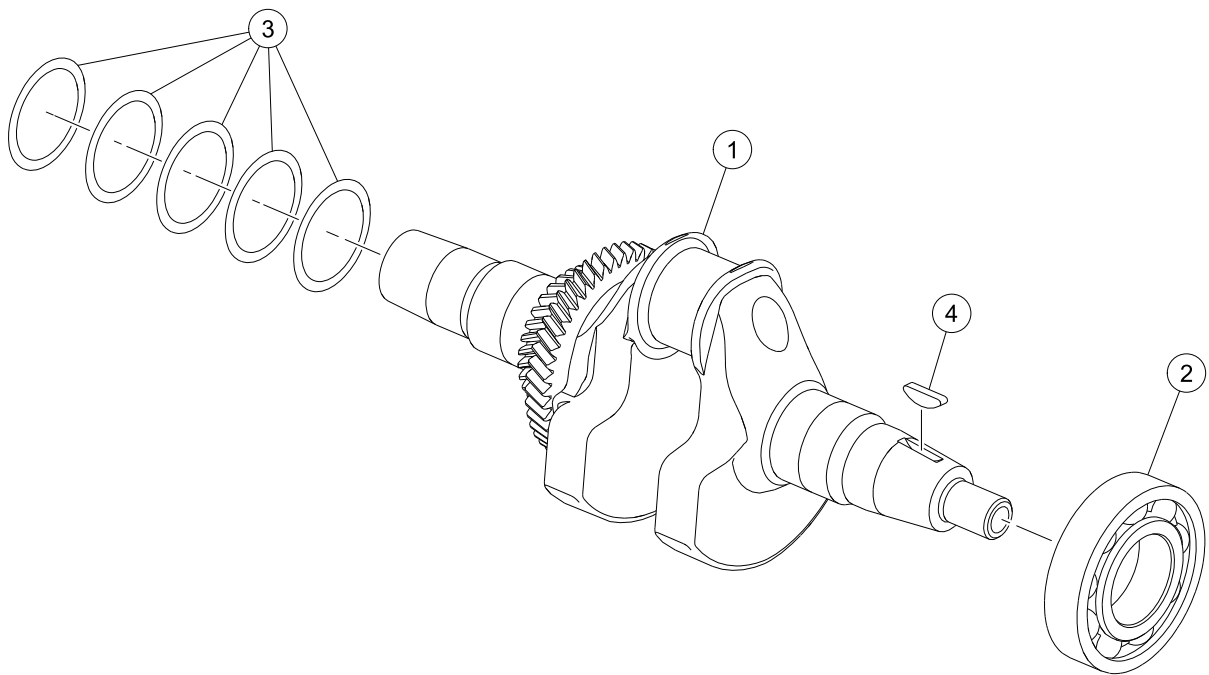

G-040299-000001

CRANKSHAFT – ECH440

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	47629583001	Crankshaft Assembly, Kohler	1
2	47629585001	Bearing, Crankshaft, Kohler	2
3	47629588001	Kit, Shims, Kohler	5
4	47629589001	Key, Flywheel, Kohler	1

8

G


8

G

FUEL SYSTEM – EFI

9


G

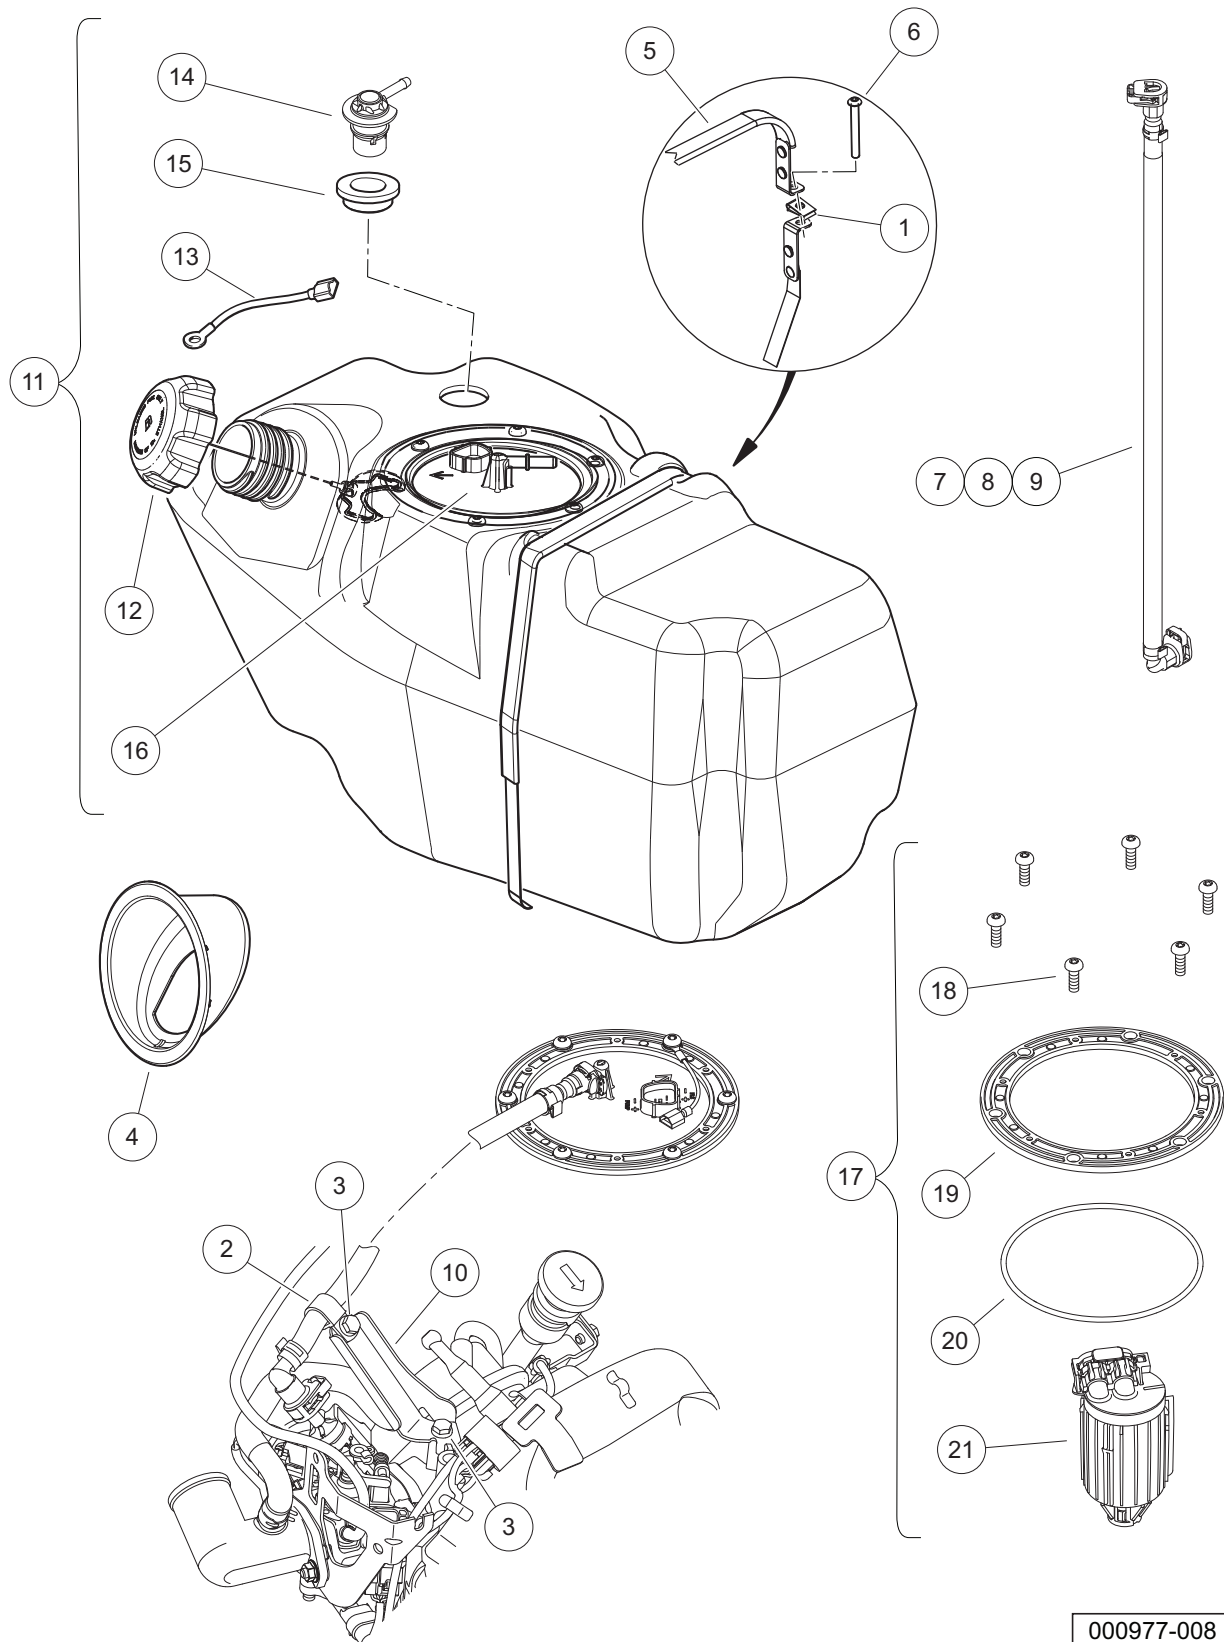

000977-008


FUEL TANK WITH PUMP, SIDE FILL – EFI

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>1014116</u>	Nut, 1/4-20 Speed	1	
2	<u>102410607</u>	P-clamp, Insulated .500 In	1	
3	<u>102490301</u>	Bolt, M6 X 1 X 16, Loctite	2	
4	<u>102977901</u>	Bezel, Fuel Fill, 5.0 Dia	1	
5	<u>105093601</u>	Retention Strap, Tank	1	
6	<u>105194101</u>	1/4-20 X 2.5, Bhcs, 6-lobe	1	
7	47606233001	Asm, Fuel Line, Util	1	
8	47606233002	Asm, Fuel Line, Util	1	
9	47606233004	Asm, Fuel Line, Uff, Hb, Lwb	1	
10	47634448002	Bracket, Support	1	
11	47664037001	Asm, Tank, Fuel, Side, Su (includes items 12 through 17)	1	
12	<u>103372101</u>	Cap, Fuel Tank, Gas, Ratchet	1	
13	<u>105143301</u>	Wire, Ground, Fuel Tank	1	
14	47611876001	Vent Rov, Fuel Tank, Precedent	1	
15	47611877001	Grommet, Fuel Tank, Vent	1	
16	N/A	Fuel Pump Module Su 50psi	1	
17	<u>47623339001</u>	Kit, Fuel Filter, 50 Psi (includes items 18 through 21)	1	
18	<u>102025801</u>	Screw, 1/4-20 X .75 Torx Pn Hd	6	
19	<u>105043801</u>	Fuel Module, Hold Down Ring	1	
20	<u>105043901</u>	O-Ring, Fuel Module	1	
21	N/A	Fuel Filter, 50psi	1	
Note: Item 7 applies to short wheel base vehicles only. Item 8 applies to medium wheel base vehicles only. Item 9 applies to long wheel base vehicles only.				



CARBON CANISTER – EFI


ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>1012649</u>	Clamp, 0.460 Red Hose	2	
2	<u>1013746</u>	Clamp, 0.301 ID Hose	2	
3	101587714	Hose, Fuel, Vent, 34" Long	1	
4	<u>102025801</u>	Screw, 1/4-20 X .75 Torx Pn Hd	2	
5	<u>103372401</u>	Canister, Carbon	1	
6	<u>103452001</u>	Brkt, Mtg, Carbon Canister	1	
7	<u>103756401</u>	Asm, Vent Line, Carbon Canister (includes items 8 and 9)	1	
8	N/A	Hose, Vent, 5/16 I.D., Bulk	1	
9	N/A	Vent, Barb, 5/16 I.D. Hose	1	
10	103896604	Hose, Vent, 1/4 Id, 17 In (SWB and Utility)	1	
11	103896605	Hose, Vent, 1/4 Id, 23.5 In	1	
12	47606257001	Brkt, Mtg, Carbon Canister	1	
13	47619701001	Clip, Purge Line, Util	2	
14	47637087001	Bracket, fuel line routing	1	
Note: Items 6 and 14 apply to short wheel base vehicles only. Item 12 applies to utility and long wheel base vehicles only.				

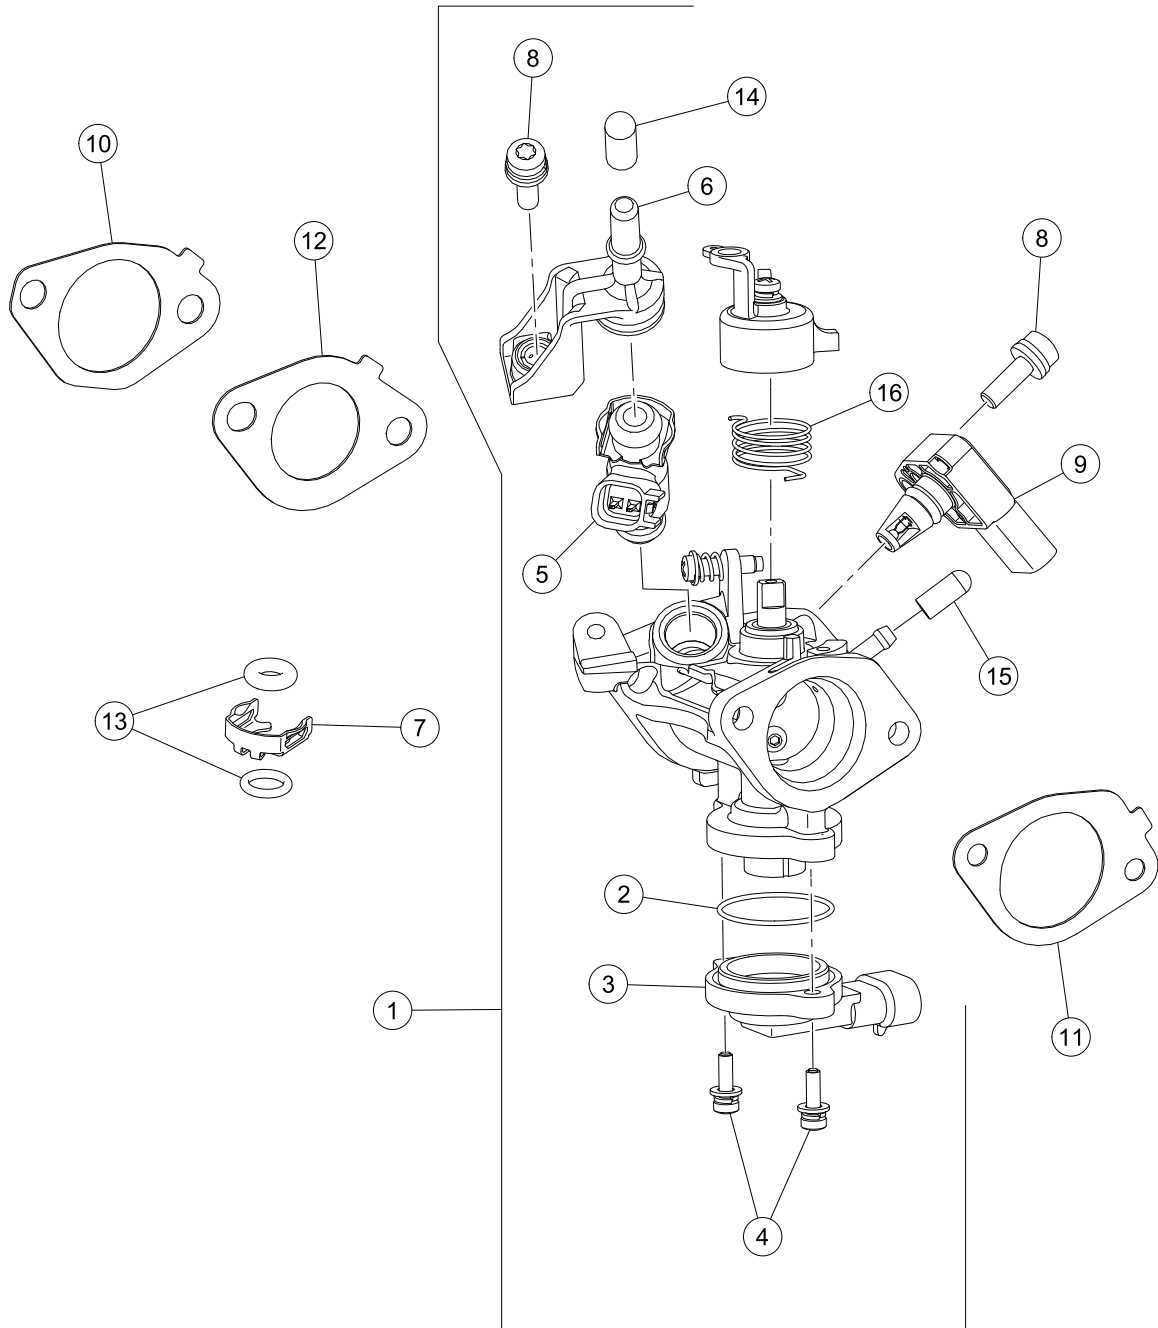

G-100199-000001


THROTTLE BODY AND MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>47629857001</u>	Throttle Body, Assembly, Kohle	1	
2	<u>47629858001</u>	O-ring, Kohler	1	
3	<u>47629859001</u>	Kit, Tps, Kohler	1	
4	<u>47629860001</u>	Screw, Hexalobular, M4 X 0.7 X	2	
5	<u>47629861001</u>	Injector, Fuel, Kohler	1	
6	<u>47629862001</u>	Cap, Fuel Inector, Kohler	1	
7	<u>47629864001</u>	Clip, Retainer, Kohler	1	
8	<u>47629865001</u>	Screw, Hexalobular, M6 X 1 Sem	2	
9	<u>47629866001</u>	Sensor, T-map, Kohler	1	
10	<u>47629867001</u>	Kit, Gasket Intake, Kohler	1	
11	<u>47629868001</u>	Gasket, Throttle Body, Kohler	1	
12	<u>47629869001</u>	Gasket, Insulator To T-body, K	1	
13	<u>47629870001</u>	Kit, Fuel Injector O-ring, Koh	1	
14	<u>47629871001</u>	Cap, Masking, Kohler	1	
15	<u>47629872001</u>	Cap, Masking, Kohler	1	
16	<u>47629874001</u>	Spring, Return, Kohler	1	

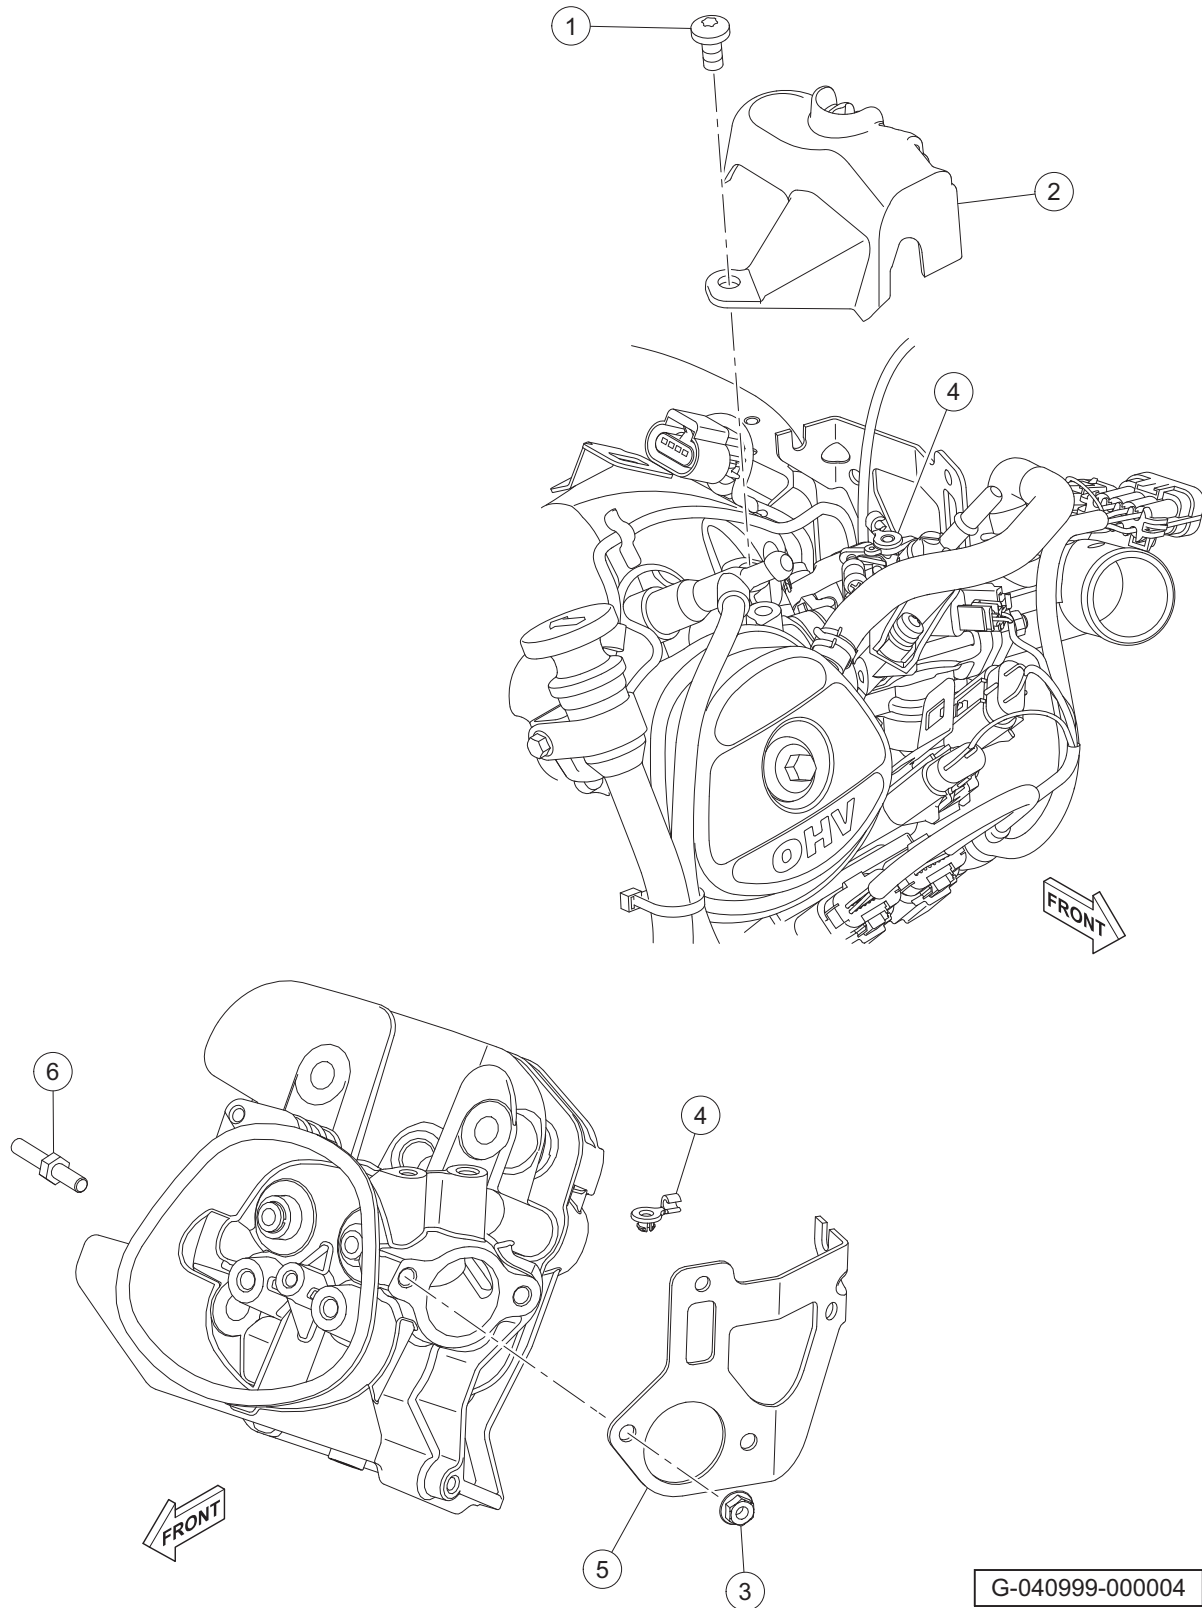

GOVERNOR BRACKET AND COVER – EFI


ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>102298116</u>	Bolt, Flanged Head, M8 X 16.0	1	
2	<u>47612352001</u>	Cover, Governor, Ech 440	1	
3	<u>47629875001</u>	Nut, Hex Flange Lock (m6), Koh	2	
4	<u>47629876001</u>	Bushing, Linkage Retainer, Koh	1	
5	<u>47629877001</u>	Bracket, Governor, Kohler	1	
6	<u>47629878001</u>	Stud, Ground, Kohler	1	

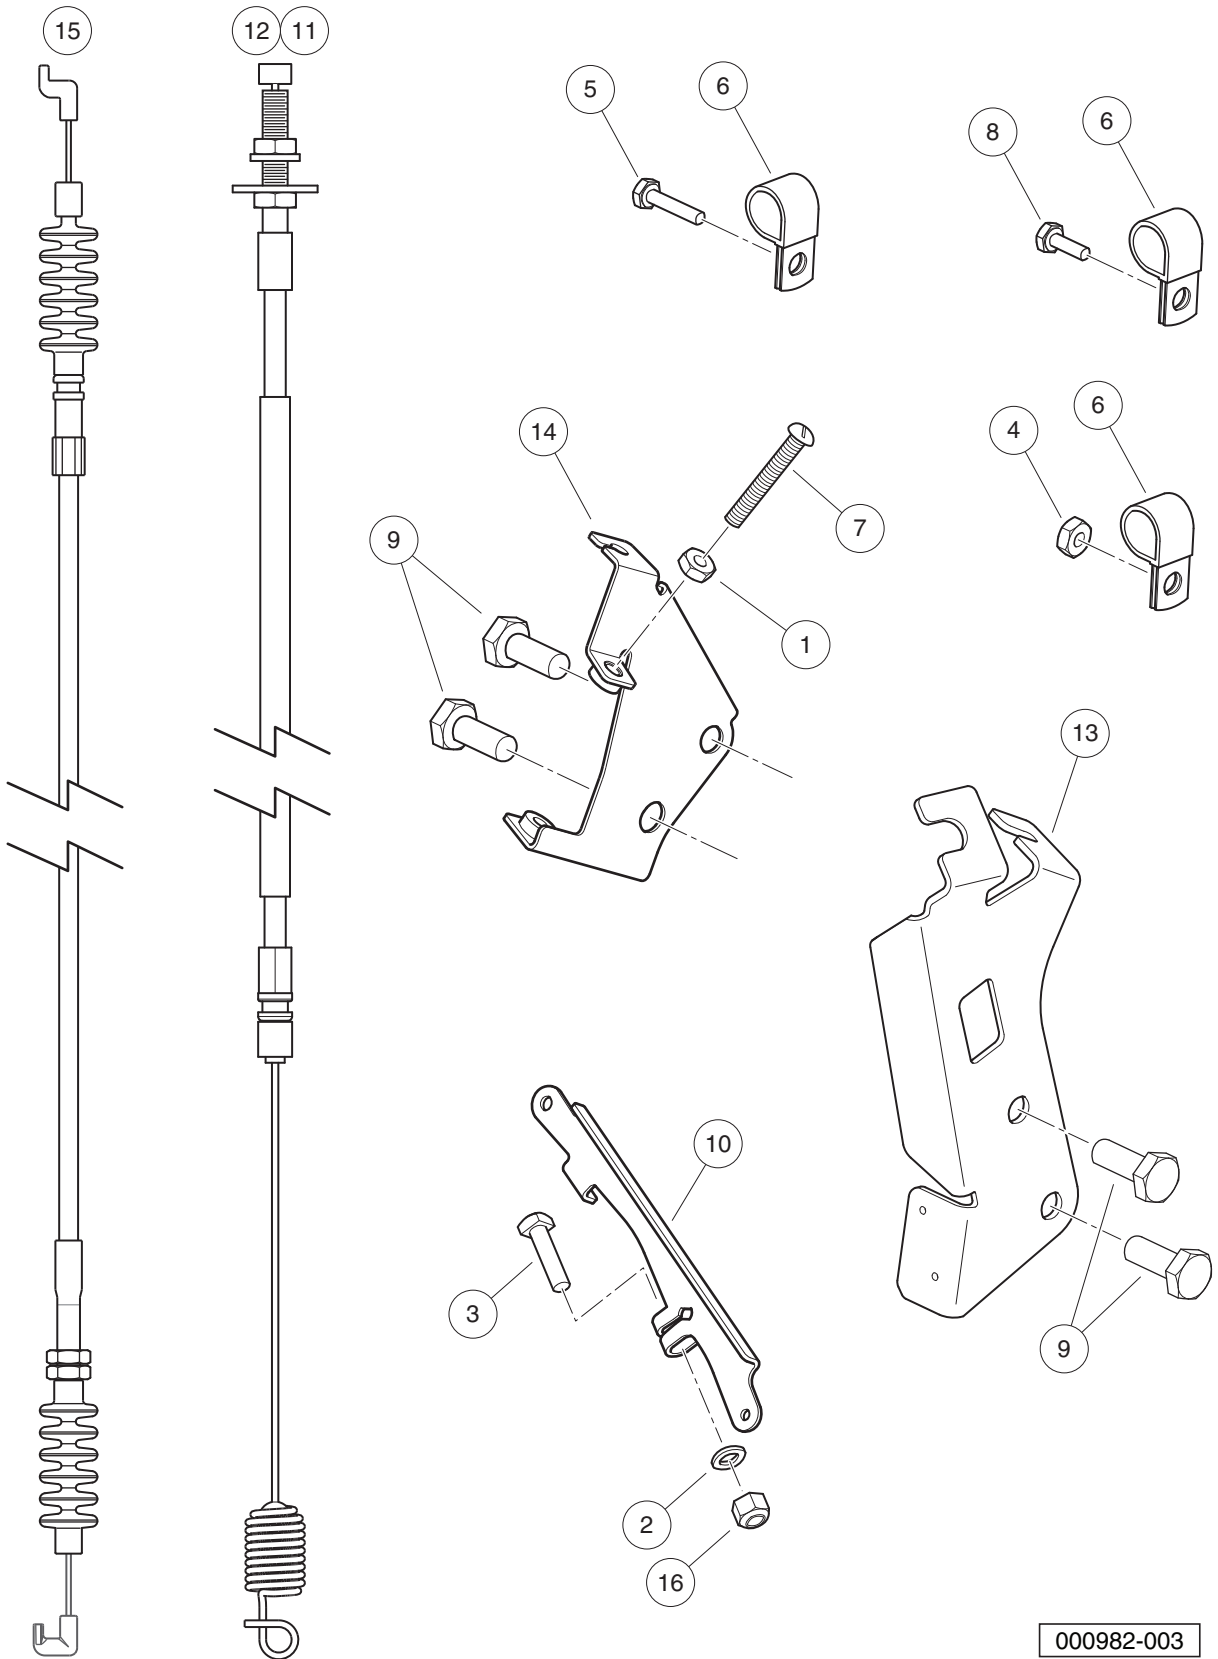

000982-003

GOVERNOR AND ACCELERATOR CABLES – EFI

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>1011114</u>	Nut, M6-1.00 Hex	2	
2	<u>1014007</u>	Washer, 1/4, Flat	1	
3	<u>101886101</u>	Screw, 1/4-20 X 1.00, Square-Head	1	
4	<u>101887601</u>	Locknut, M6-1.00 Nylon Insert	1	
5	<u>102296716</u>	Screw, M6 X 16 Tt Hx Fl Hd	1	
6	<u>102410604</u>	P-clamp, Insulated, 0.625 Inch	3	
7	<u>102476401</u>	Bolt, Stop, Pedal	1	
8	<u>102490301</u>	Bolt, M6 X 1 X 16, Loctite	1	
9	<u>102498201</u>	Bolt, M10 X 1.25 X 25, Loctite	2	
10	<u>104023501</u>	Arm, Governor, ED65	1	
11	<u>105007402</u>	Cable, Accelerator, Utility, Low-Speed	1	
12	<u>105007403</u>	Cable, Accelerator, Utility, Std-Speed	1	
13	<u>105135101</u>	Bracket, Cable, FNR/Accelerator, ED65	1	
14	<u>105144401</u>	Weldment, Governor Bracket	1	
15	<u>47601355001</u>	Cable, Governor, Z Fit 90 Fit	1	
16	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	1	


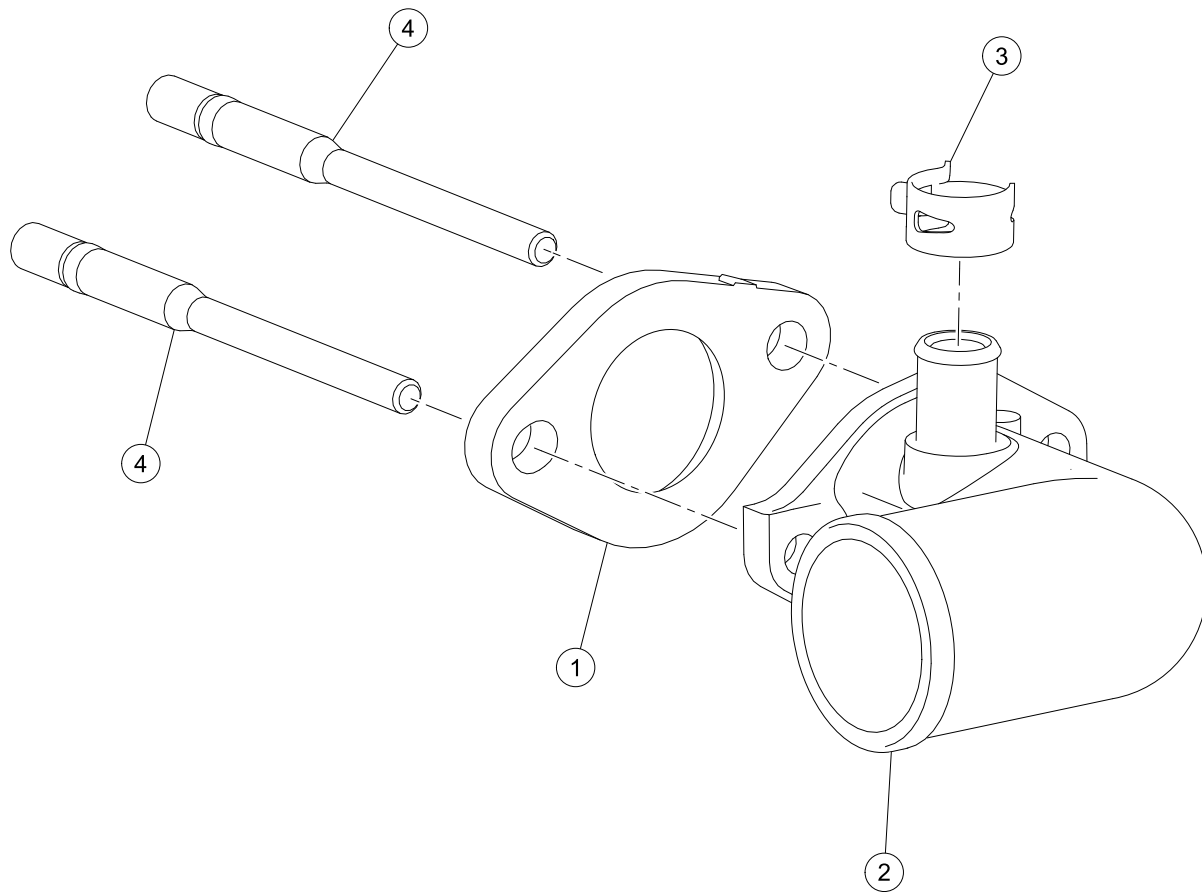


G-040999-000003

9
G9
G

9

G

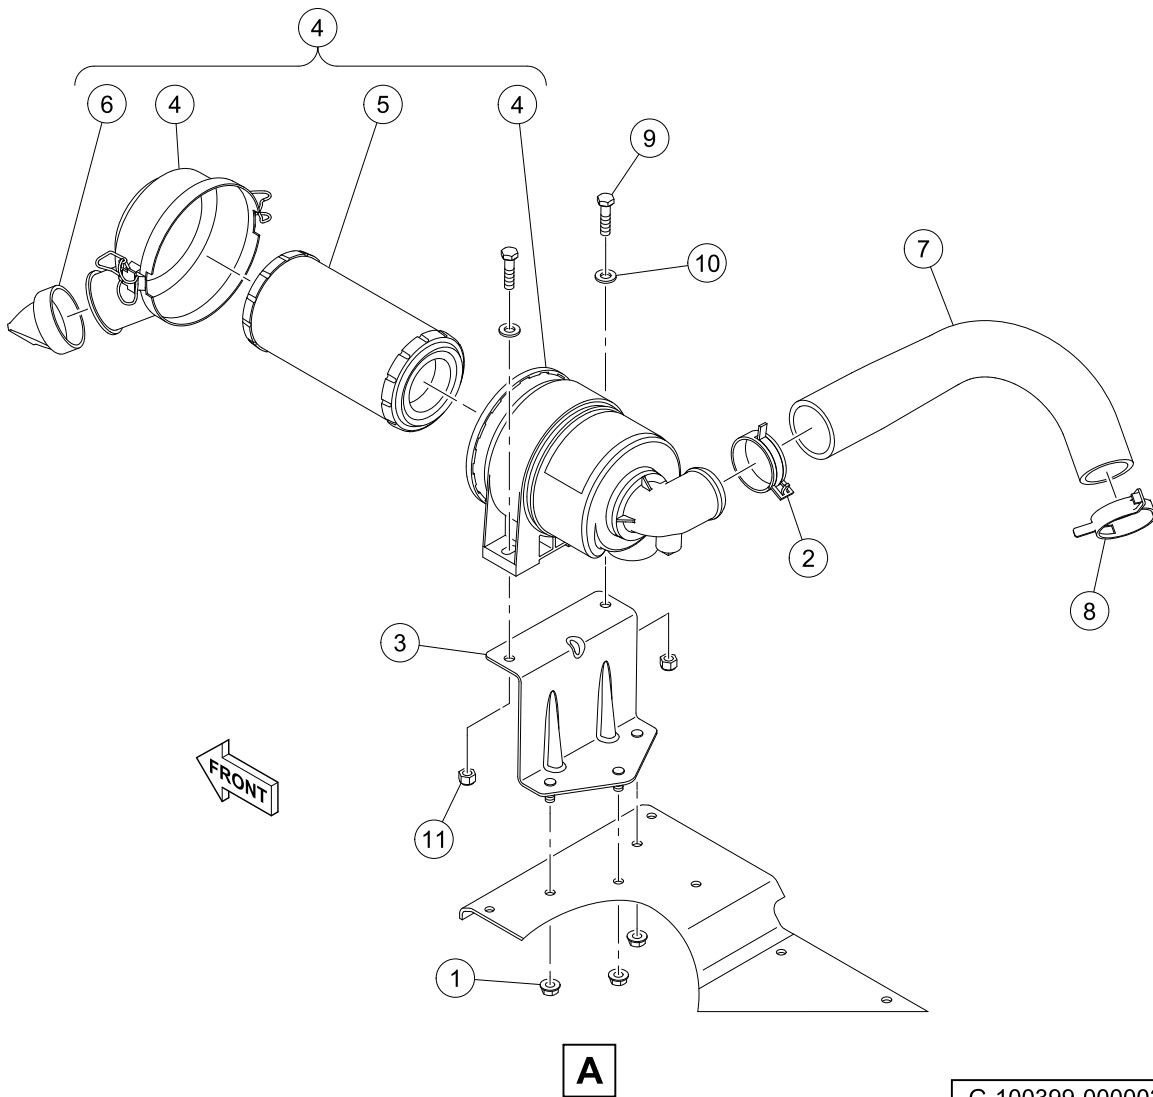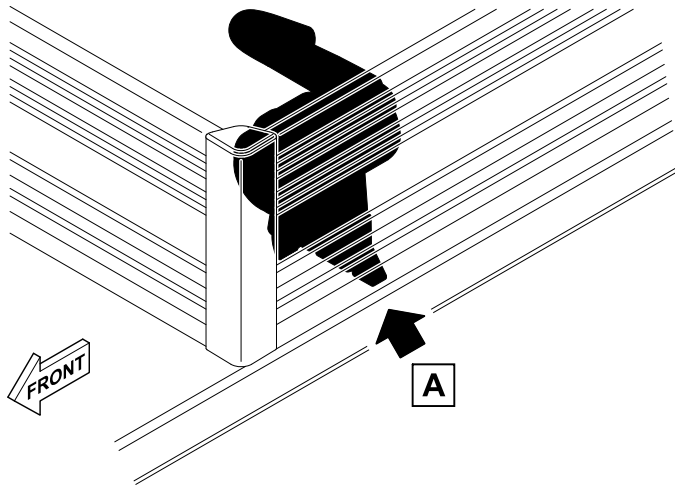

G-100399-000003

AIR FILTER SYSTEM AND INTAKE HOSE – EFI

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	<u>101963401</u>	Locknut, 5/16-18 Hex Flange	3	
2	<u>102411209</u>	Clamp, Hose, Ctb 55mm Dia.	1	
3	<u>105003401</u>	Asm, Bracket, Mtg, Air Cleaner	1	
4	<u>105009101</u>	Air Cleaner, Utility with EFI (includes items 5 and 6)	1	
5	<u>102558201</u>	Air Filter, 4 Inch	1	
6	<u>102725501</u>	Valve, Evacuator, Filter Air	1	
7	<u>105009401</u>	Hose, Air Intake, LWB Utility with EFI	1	
8	<u>105088501</u>	Clamp, Ctb, 49mm Dia, W/clip	1	
9	<u>1218</u>	Screw, 5/16-18 X 1.25 Hex-Head Cap	2	
10	<u>1241</u>	Washer, 5/16 Type A Flat	2	
11	<u>7473</u>	Locknut, 5/16-18 Nylon Insert	2	


9

G

EXHAUST SYSTEM – ECH440

10

G

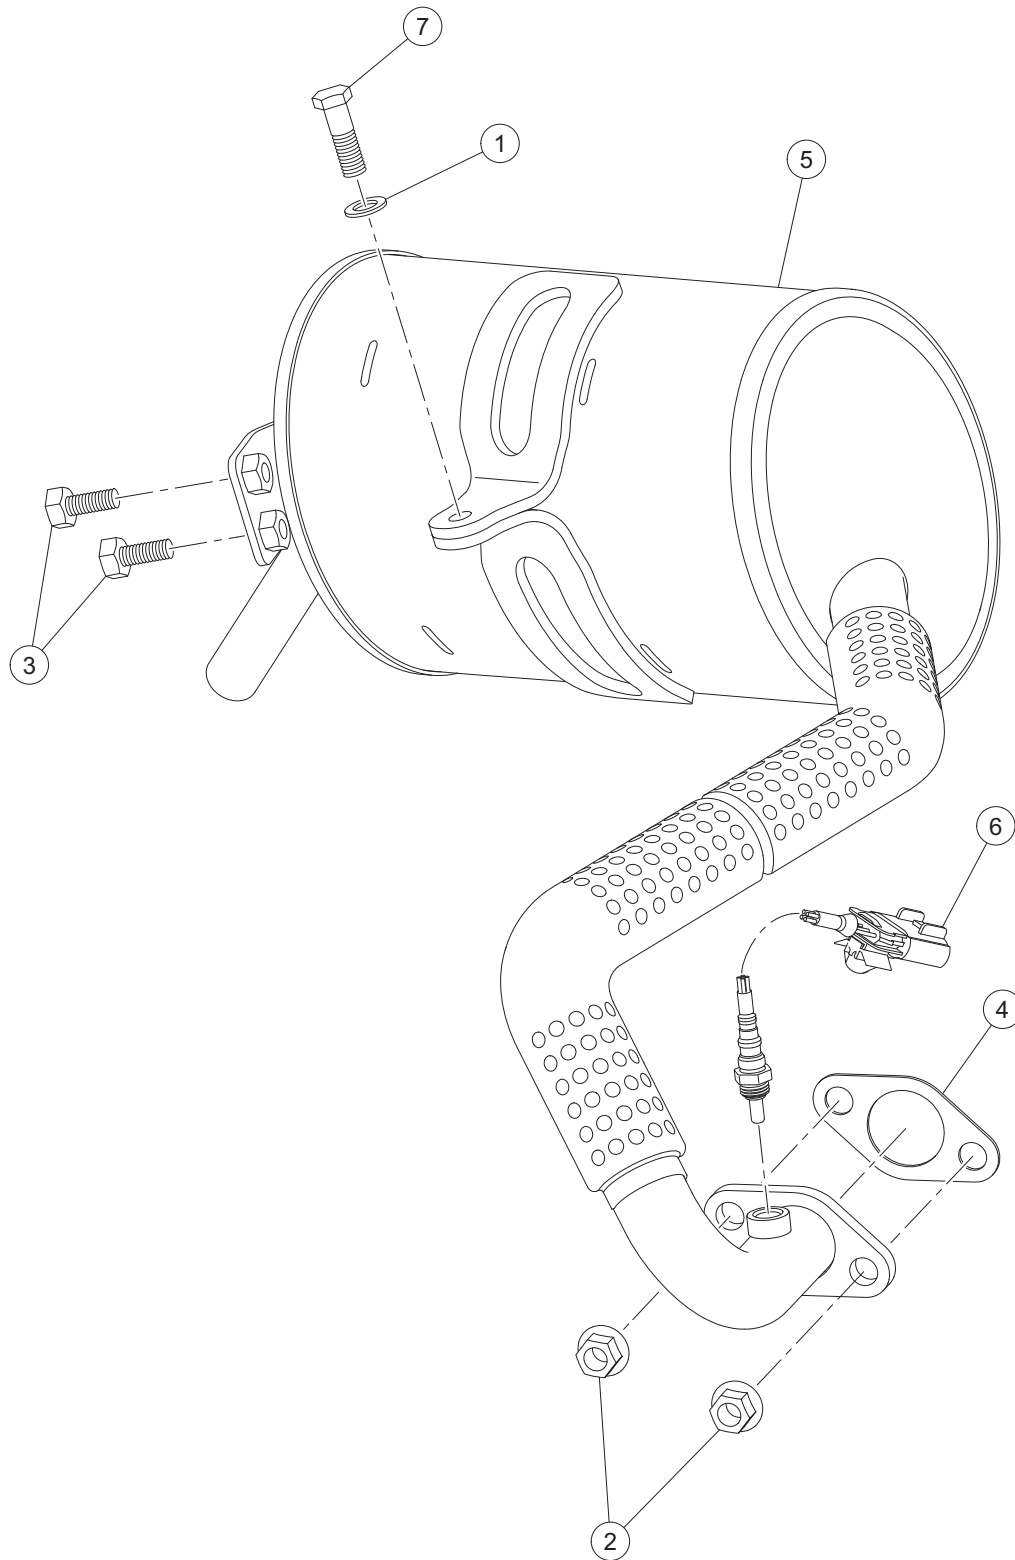

G-110199-000001

EXHAUST SYSTEM

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011697	Washer, 5/16 Flat	1
2	102298401	Nut, M8, All Metal Lock	2
3	102922701	Bolt, Flanged Head, M8x1.25x20 Lock Patch	2
4	47611210001	Gasket, Exhaust, Grpht, Ech440	1
5	47613047002	Exhaust, Ech440, Utility	1
6	47695676001	Sensor, O2, Heated	1
7	96705587	Bolt, M8 X 1.25 X 30	1

10

G


10

G

DRIVE BELT AND CLUTCHES – EFI GASOLINE VEHICLES

11

G

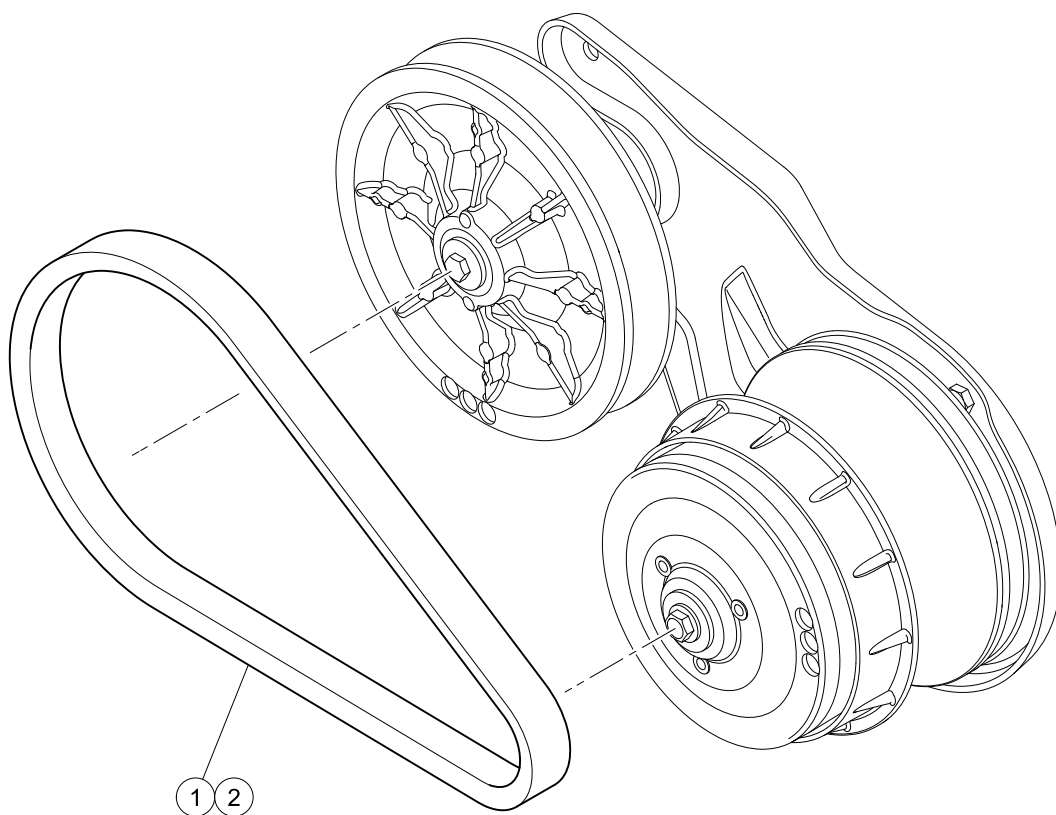


G-060099-000001

DRIVE BELTS – EFI

ITEM	PART NO.	DESCRIPTION	QTY
1	<u>103974102</u>	1 2 3 4 Belt, Drive, Key-Start	1
2	<u>105245801</u>	Belt, Drive, Pedal-Start	1

11
G

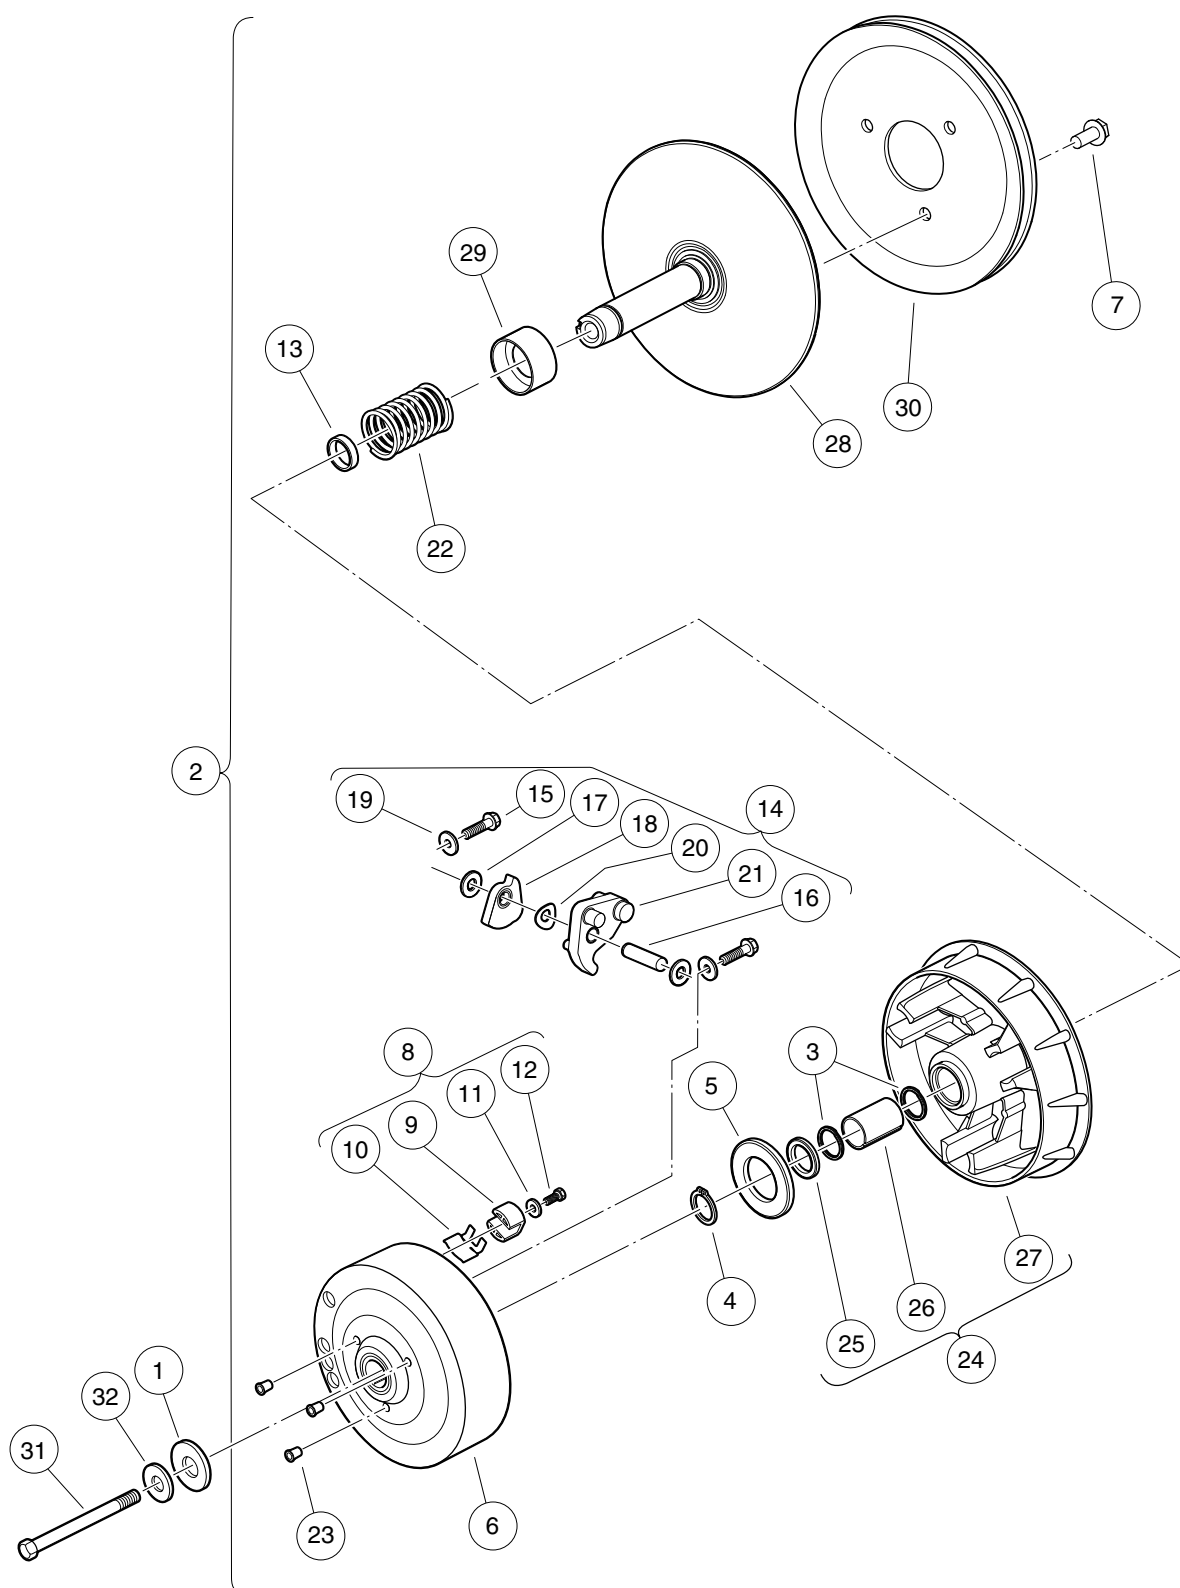


000958-002

DRIVE CLUTCH – KEY-START VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102491501</u>	Washer, Hard, M10	1
2	<u>103973902</u>	Clutch, Drive, Key-Start (includes items 3 through 30)	1
3	<u>1014056</u>	Ring, Spiral Backup	2
4	<u>1014057</u>	Ring, 0.810" Internal Retaining	1
5	<u>1014058</u>	Thrust Washer	1
6	<u>1014059</u>	Drive Hub Assy, Drive Clutch	1
7	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	3
8	<u>1014453</u>	Kit, Drive Clutch Button (includes items 9 through 12)	1
9	<u>1014062</u>	Driver, Drive Clutch	3
10	<u>1014287</u>	Spring, Drive Button	3
11	<u>183</u>	Washer, #10, Type A, Flat	3
12	<u>8450</u>	Screw, #10-24 X 0.50, Hex-Head	3
13	<u>1016289</u>	Spacer, Fixed Face Shaft	1
14	<u>1016801</u>	Kit, Drive Clutch Weight (includes items 15 through 21)	1
15	<u>1014063</u>	Screw, 1/4-20 X 1.00, Hex Head	6
16	N/A	Pin, Dowel, 0.3752 x 1.50	3
17	<u>1014065</u>	Washer, Flat, 0.38" ID, Delrin	6
18	N/A	Clutch Weight, Secondary	3
19	N/A	Washer	6
20	<u>1016201</u>	Washer, Wave	3
21	N/A	Weight, Primary	3
22	<u>1016901</u>	Spring, Drive Clutch	1
23	N/A	Cap Plug	3
24	<u>103974201</u>	Asm, Sheave, Moveable, Drive, Wr (includes items 25 through 27)	1
25	<u>1014055</u>	Retainer	1
26	N/A	Bushing, Split, Drive Clutch	1
27	N/A	Sheave, Moveable, Drive, Wr	1
28	<u>103974401</u>	Sheave, Fixed, Drive, Wr	1
29	<u>103984601</u>	Spacer, Idler, Drive	1
30	<u>105096101</u>	Pulley, 7.3 Inch Effective Dia	1
31	<u>103976101</u>	Screw, 3/8-24x5.75, Patch	1
32	<u>334</u>	Washer, 3/8, Type A, Flat	1

11

G

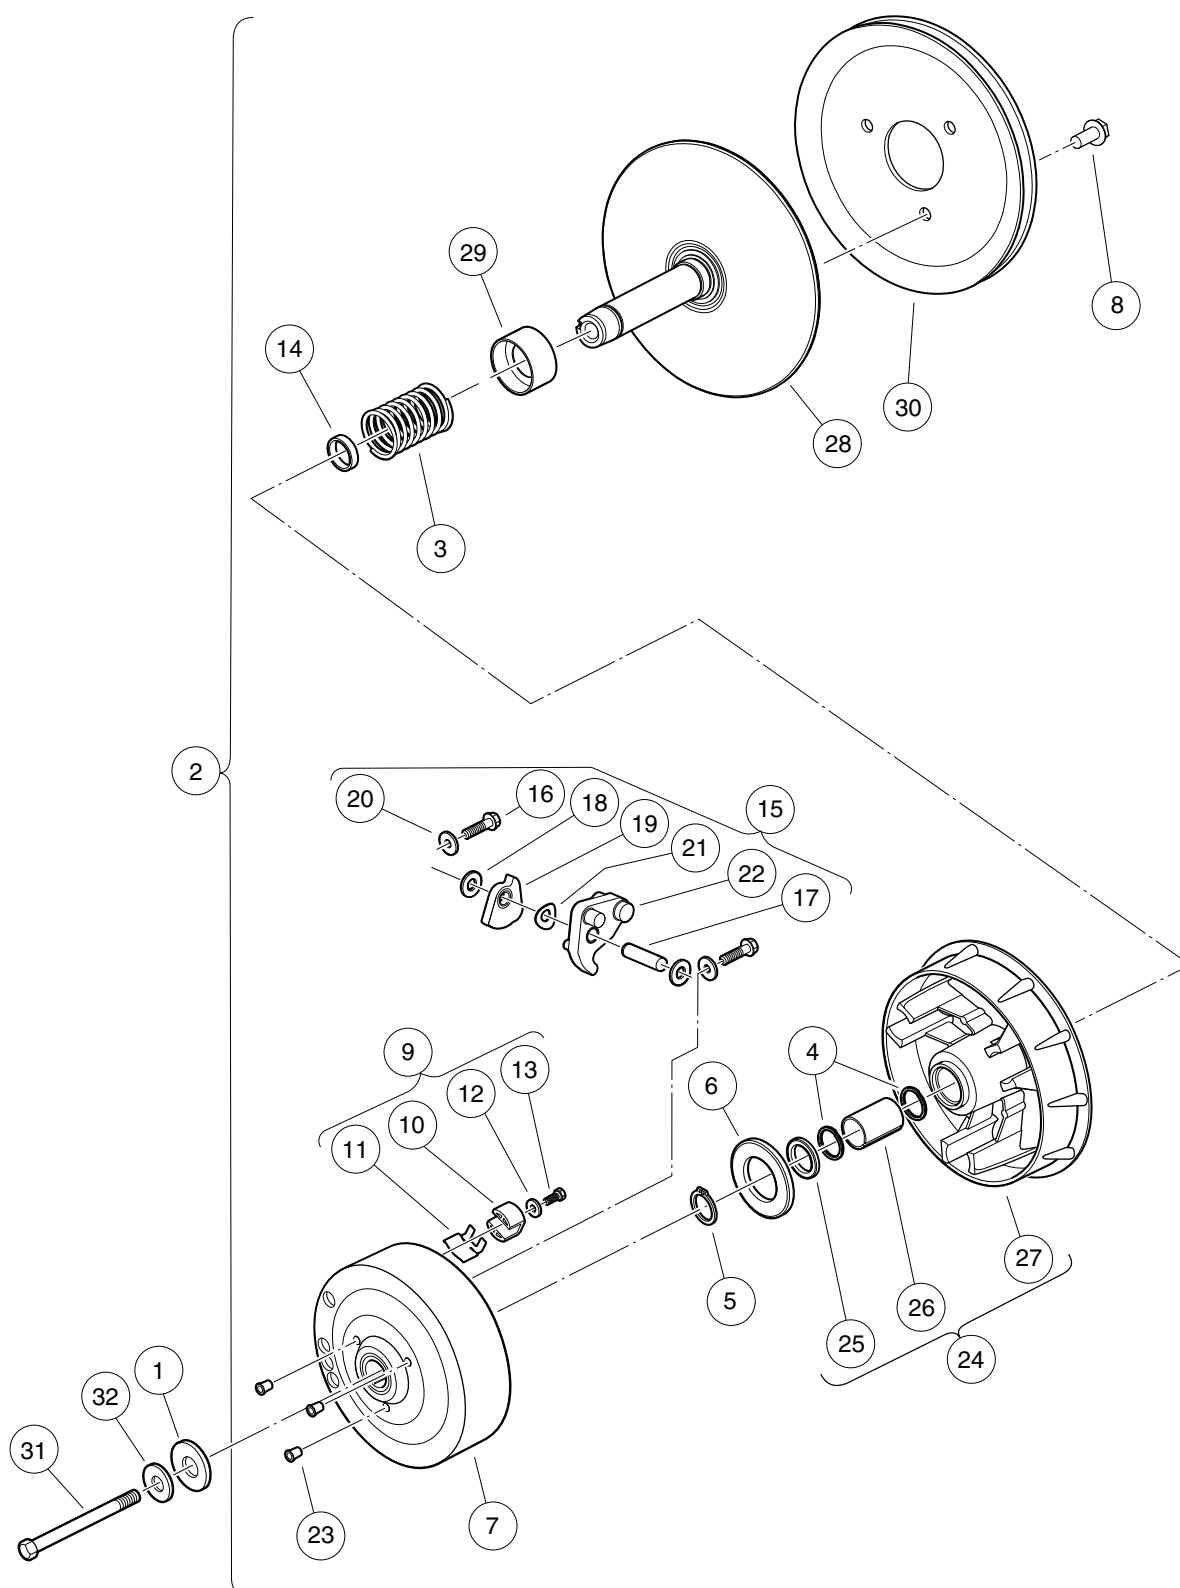


000958-001

DRIVE CLUTCH – PEDAL-START VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>102491501</u>	Washer, Hard, M10	1
2	<u>103973901</u>	Clutch, Drive, Pedal-Start (includes items 3 through 30)	1
3	<u>1014051</u>	Spring, Drive Clutch	1
4	<u>1014056</u>	Ring, Spiral Backup	2
5	<u>1014057</u>	Ring, 0.810" Internal Retaining	1
6	<u>1014058</u>	Thrust Washer	1
7	<u>1014059</u>	Drive Hub Assy, Drive Clutch	1
8	<u>1014288</u>	Screw, 5/16-18 X 0.75, Thread-Forming	3
9	<u>1014453</u>	Kit, Drive Clutch Button (includes items 10 through 13)	1
10	<u>1014062</u>	Driver, Drive Clutch	3
11	<u>1014287</u>	Spring, Drive Button	3
12	<u>183</u>	Washer, #10, Type A, Flat	3
13	<u>8450</u>	Screw, #10-24 X 0.50, Hex-Head	3
14	<u>1016289</u>	Spacer, Fixed Face Shaft	1
15	<u>1016801</u>	Kit, Drive Clutch Weight (includes items 16 through 22)	1
16	<u>1014063</u>	Screw, 1/4-20 X 1.00, Hex Head	6
17	N/A	Pin, Dowel, 0.3752 x 1.50	3
18	<u>1014065</u>	Washer, Flat, 0.38" ID, Delrin	6
19	N/A	Clutch Weight, Secondary	3
20	N/A	Washer	6
21	<u>1016201</u>	Washer, Wave	3
22	N/A	Weight, Primary	3
23	N/A	Cap Plug	3
24	<u>103974201</u>	Asm, Sheave, Moveable, Drive, Wr (includes items 25 through 27)	1
25	<u>1014055</u>	Retainer	1
26	N/A	Bushing, Split, Drive Clutch	1
27	N/A	Sheave, Moveable, Drive, Wr	1
28	<u>103974401</u>	Sheave, Fixed, Drive, Wr	1
29	<u>103984601</u>	Spacer, Idler, Drive	1
30	<u>105096101</u>	Pulley, 7.3 Inch Effective Dia	1
31	<u>103976101</u>	Screw, 3/8-24x5.75, Patch	1
32	<u>334</u>	Washer, 3/8, Type A, Flat	1

11

G

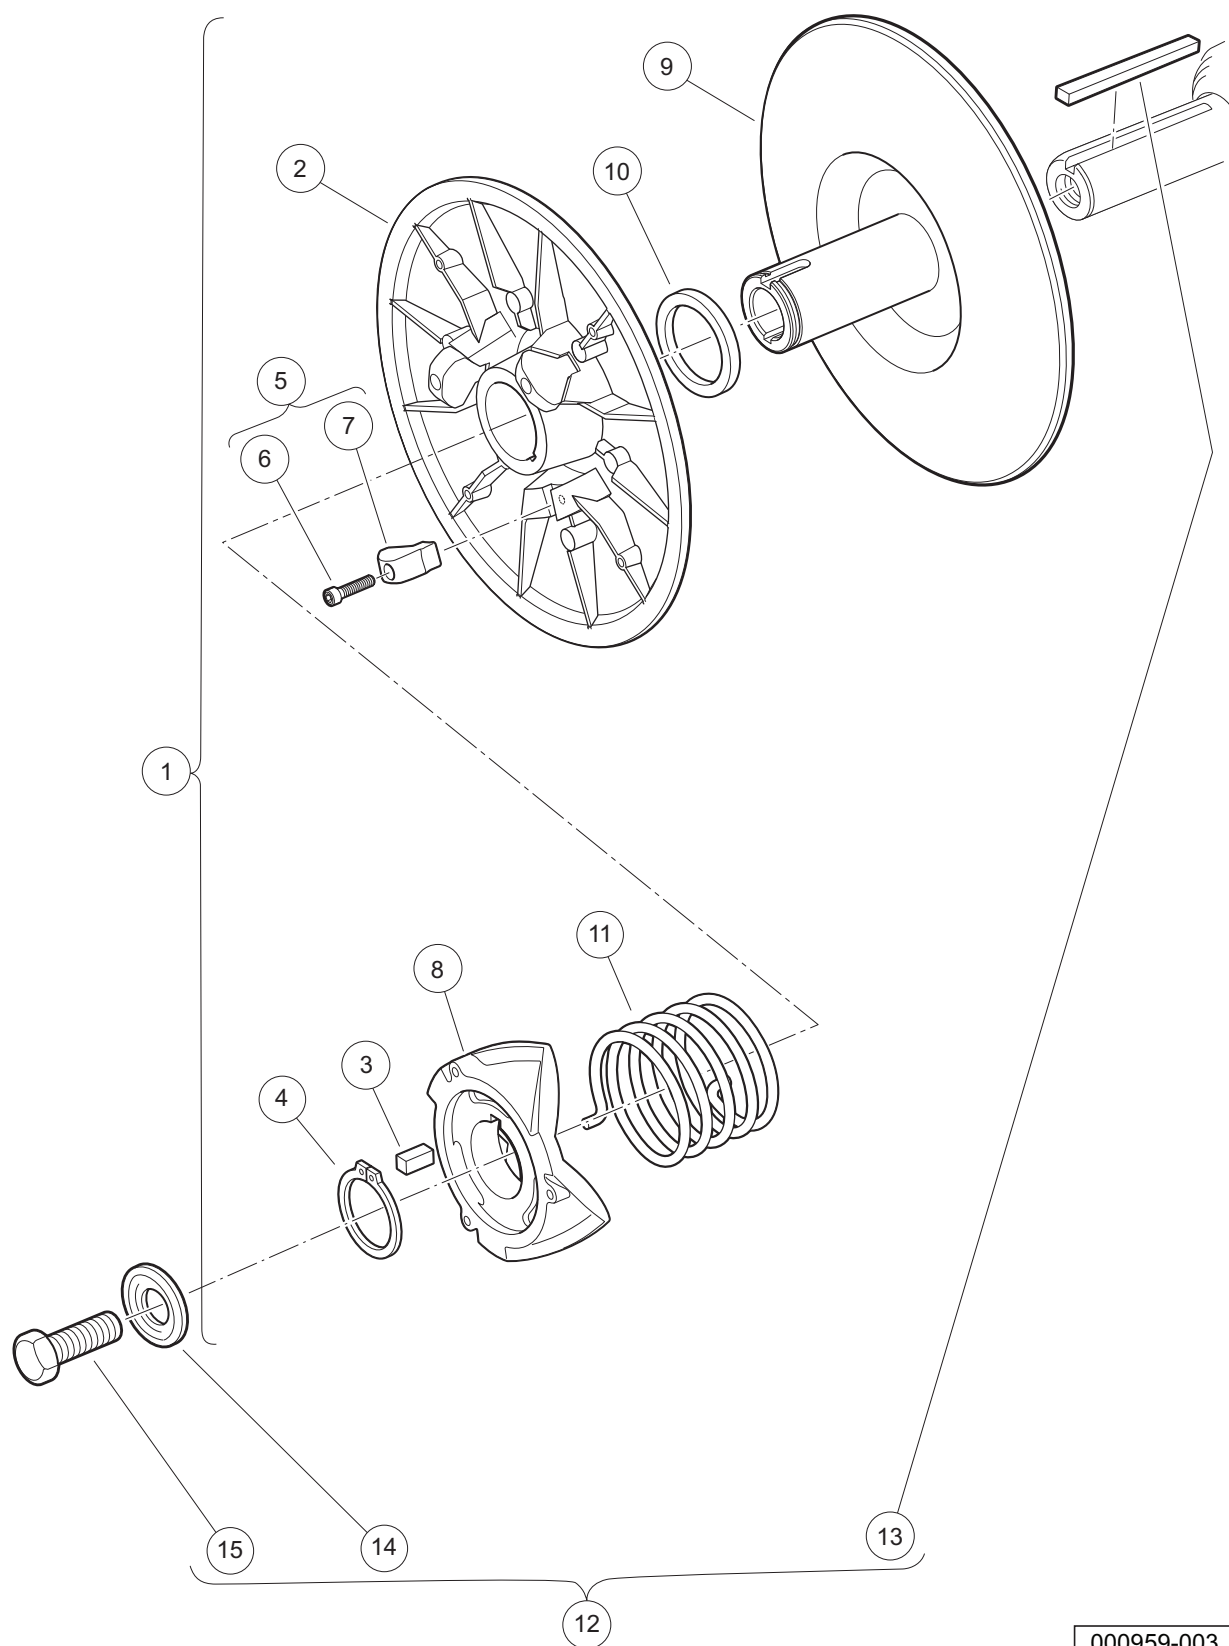

000959-003

DRIVEN CLUTCH – KEY START AND PEDAL START

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	47601767002	Asm, Clutch, Driven, Ccw, Red (includes items 2 through 11)	1
2	<u>1014072</u>	Movable-Face Assembly with Bushing	1
3	<u>1014078</u>	Key, Driven Clutch	1
4	<u>1014080</u>	Ring, Retaining	1
5	<u>1014454</u>	Kit, Driven Clutch Button (includes items 6 and 7)	1
6	<u>1012836</u>	Screw, #8-32 X 3/4, Socket-Head Cap	3
7	N/A	Button, Drive	3
8	<u>1017686</u>	Cam, Driven Clutch	1
9	<u>103975301</u>	Sheave, Fixed, Driven, Wr	1
10	<u>104025101</u>	Washer, Acetal, Driven Clutch	1
11	47601832001	Spring, Drvn Clutch, Ccw, Red	1
12	<u>AM10419</u>	Kit, Clutch Repair (includes items 13 through 15)	1
13	<u>101833401</u>	Key, 3/16 Sq X 1.50"	1
14	<u>102155801</u>	Washer, Driven Clutch	1
15	<u>102242101</u>	Screw, 5/16-18 X 3/4 Hex-Head with Patch	1

11
G


11

G

TRANSAXLE (FUJI ED65)

12

G

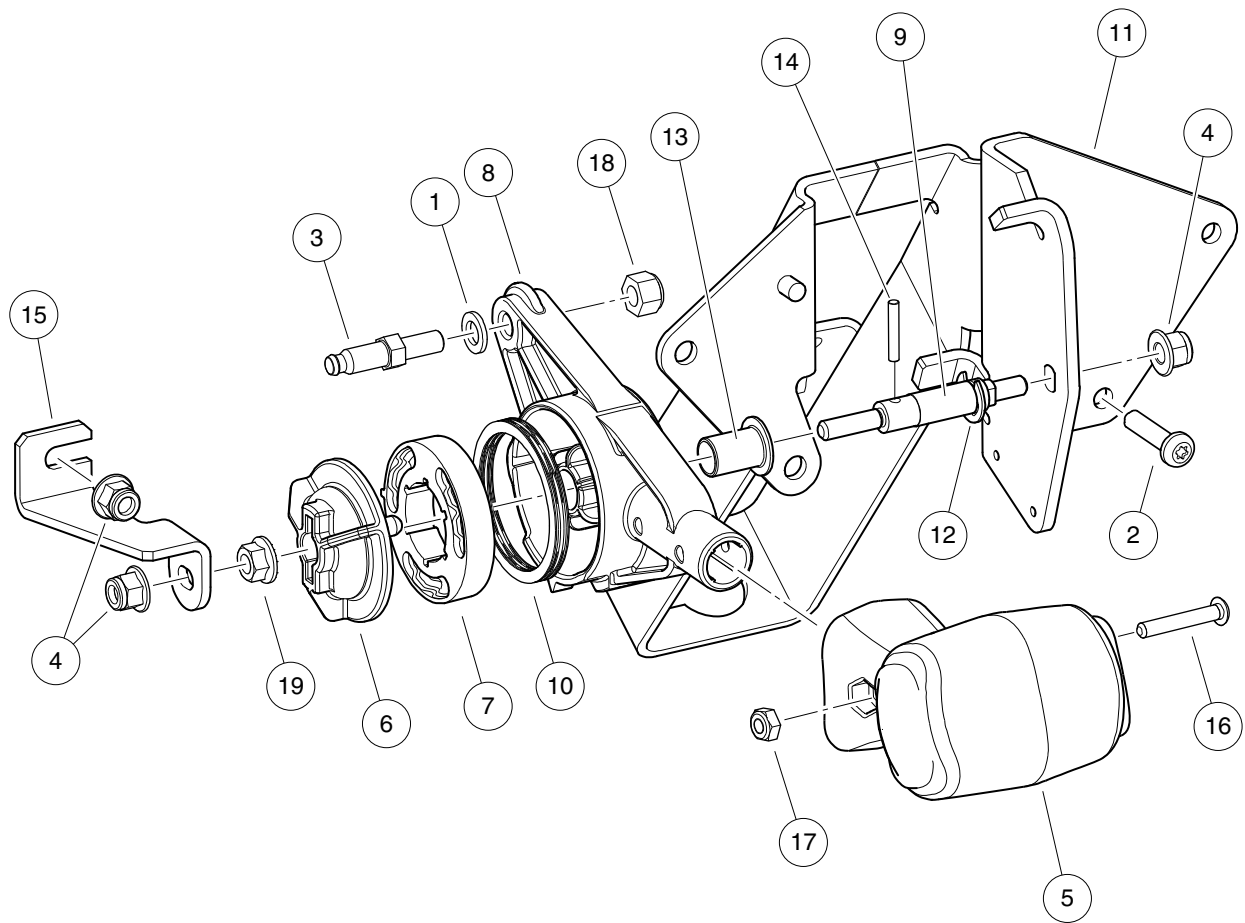


000987-001

FORWARD/REVERSE SHIFTER ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>1014007</u>	Washer, 1/4, Flat	1
2	<u>102296020</u>	Screw, Torx Pan Hd Pt, M6 X 20	4
3	<u>102526201</u>	Stud, Thread, 1/4-28	1
4	<u>102621501</u>	Nut, Flange, M6 X 1.0, Nylon	3
5	<u>105036301</u>	Shifter, Soft, Gas, CA300-700	1
6	<u>105037701</u>	Follower, FNR Detent	1
7	<u>105038001</u>	Cam, FNR Detent, Alternate	1
8	<u>105038101</u>	Housing, FNR, Gas, CA300-700	1
9	<u>105038201</u>	Shaft, FNR, Dash	1
10	<u>105038501</u>	Spring, Wave, Gas FNR Shifter	1
11	<u>105039401</u>	Bracket, Shifter, Dash Mount	1
12	<u>105039801</u>	E-Clip, External, 8mm Groove	1
13	<u>105039901</u>	Bushing, Dash Shifter, Gas	1
14	<u>105040401</u>	Pin, Round, 0.125 Dia x 0.625	1
15	<u>105040501</u>	Bracket, Shifter, Brace, Dash	1
16	<u>105083701</u>	Bolt, 10-24 X 1.25", But Head	1
17	<u>105083801</u>	Nut, Nylon Lock, #10-24, Blk	1
18	<u>8717</u>	Locknut, Nylon Insert, 1/4-28	1
19	<u>96704176</u>	Nut, Flanged, M6 X 1, Serrated	1

12

G

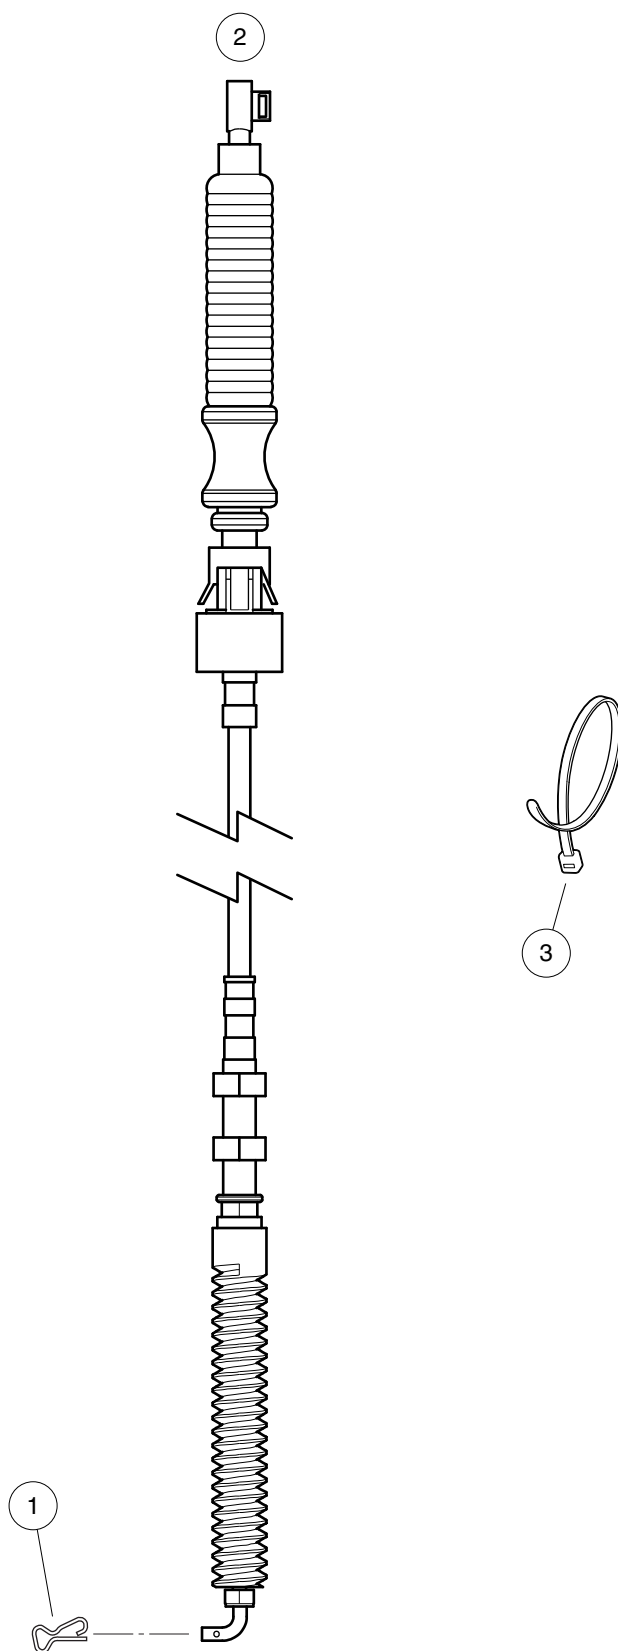


000988-001

SHIFTER CABLE – CA500 & CA550

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103886601</u>	Clip, Bowtie	1
2	<u>105038803</u>	Cable, Shifter, CA500/550/Caf� Express	1
3	<u>8990</u>	Tie Wrap, 8" Nylon	A/R

12


G

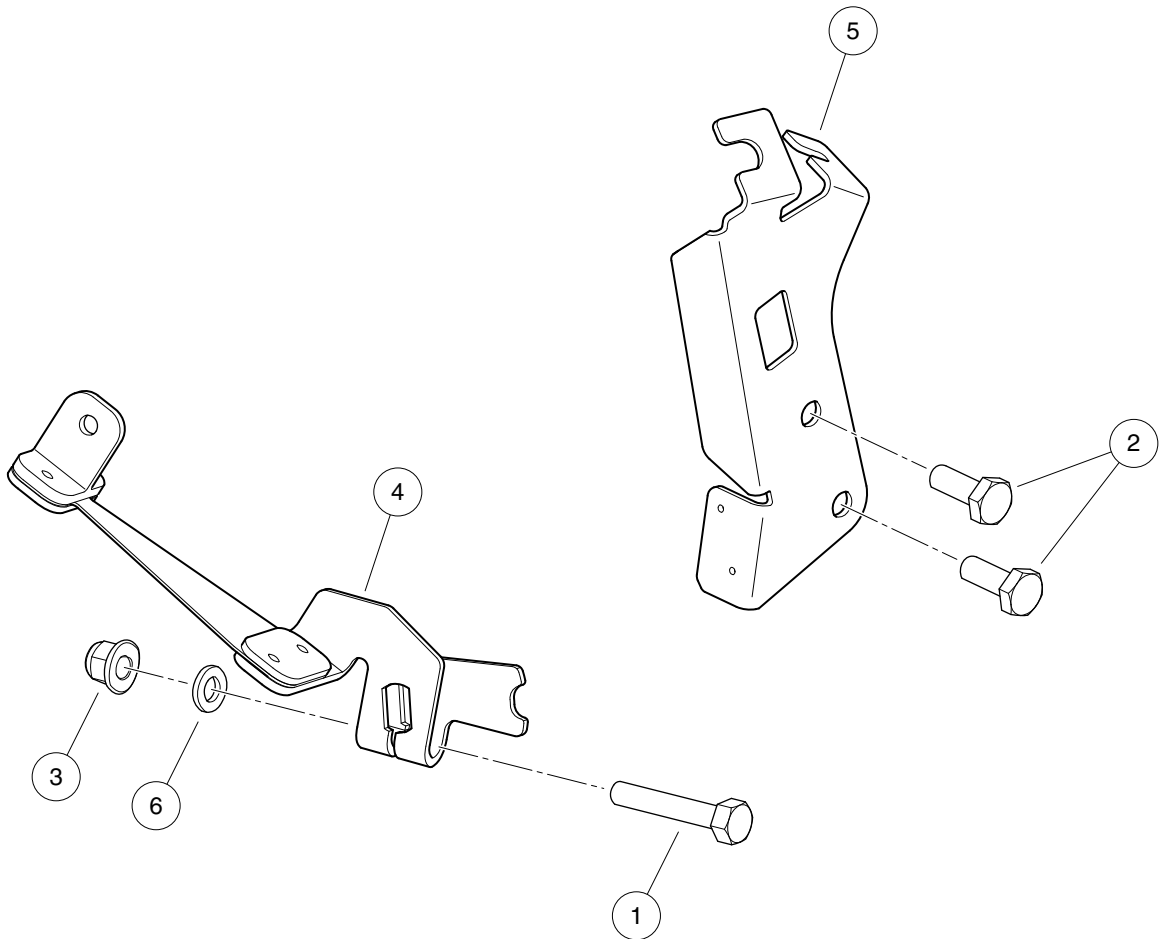

000965-001

SHIFT LEVER AND BRACKET – PEDAL-START ENGINES



ITEM	PART NO.	DESCRIPTION	QTY	12
		1 2 3 4		G
1	<u>102059501</u>	Screw, 6M-1.00 X 35mm, Hex Head	1	
2	<u>102498201</u>	Bolt, M10 X 1.25 X 25, Loctite	2	
3	<u>102621501</u>	Nut, Flange, M6 X 1.0, Nylon	1	
4	<u>105040901</u>	Lever, Shift, Flex, Transaxle, Pedal-Start	1	
5	<u>105135101</u>	Bracket, Cable, FNR/Accelerator, ED65	1	
6	<u>96705199</u>	Washer, M6	1	

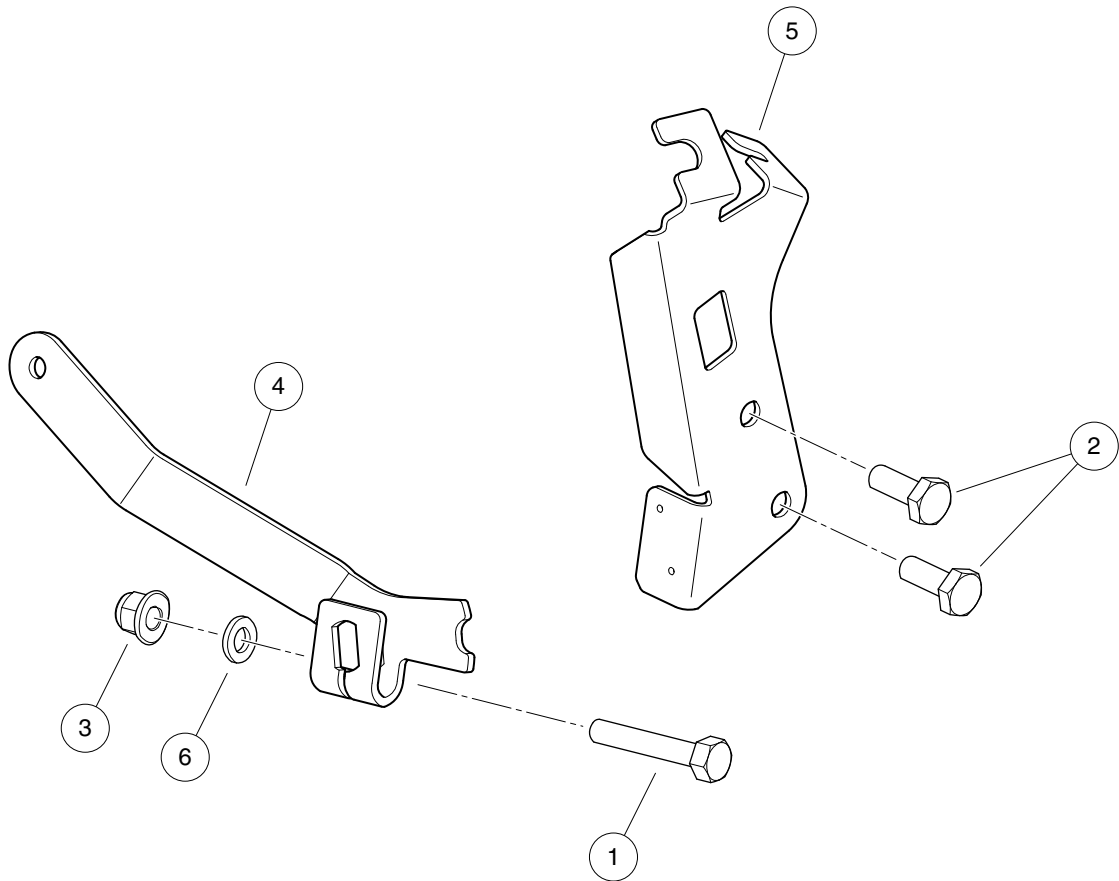

000965-002

SHIFT LEVER AND BRACKET – KEY-START ENGINES


ITEM	PART NO.	DESCRIPTION	QTY	12
		1 2 3 4		G
1	<u>102059501</u>	Screw, 6M-1.00 X 35mm, Hex Head	1	
2	<u>102498201</u>	Bolt, M10 X 1.25 X 25, Loctite	2	
3	<u>102621501</u>	Nut, Flange, M6 X 1.0, Nylon	1	
4	<u>105134901</u>	Lever, Shift, Transaxle, Key-Start	1	
5	<u>105135101</u>	Bracket, Cable, FNR/Accelerator, ED65	1	
6	<u>96705199</u>	Washer, M6	1	

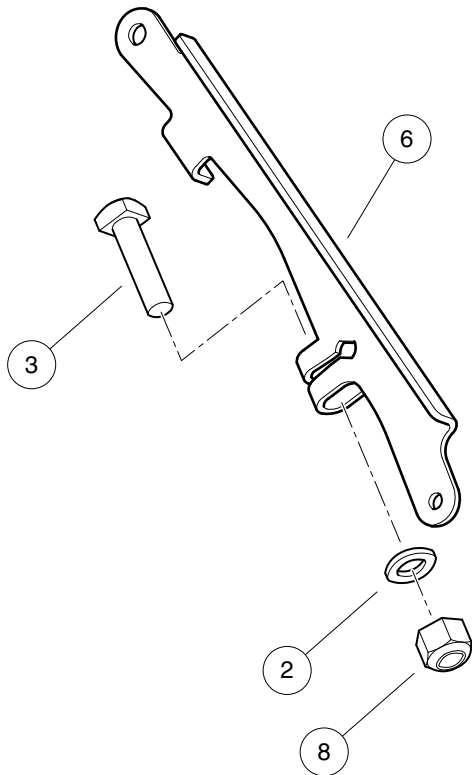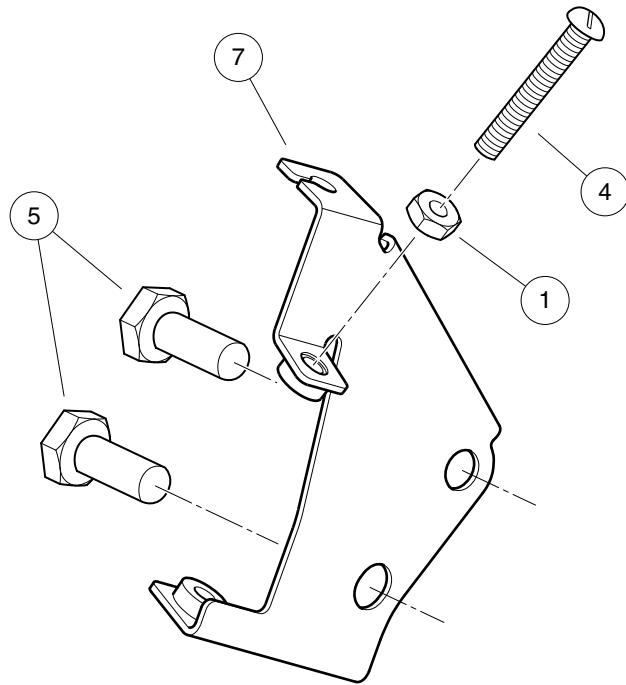

000966-002

GOVERNOR ARM AND BRACKETS – UTILITY VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	12	G
		1 2 3 4			
1	<u>1011114</u>	Nut, M6-1.00 Hex	1		
2	<u>1014007</u>	Washer, 1/4, Flat	1		
3	<u>101886101</u>	Screw, 1/4-20 X 1.00, Square-Head	1		
4	<u>102476401</u>	Bolt, Stop, Pedal	1		
5	<u>102498201</u>	Bolt, M10 X 1.25 X 25, Loctite	2		
6	<u>104023501</u>	Arm, Governor, ED65	1		
7	<u>105144401</u>	Weldment, Governor Bracket	1		
8	<u>8233</u>	Locknut, 1/4-20, Nylon Insert	1		

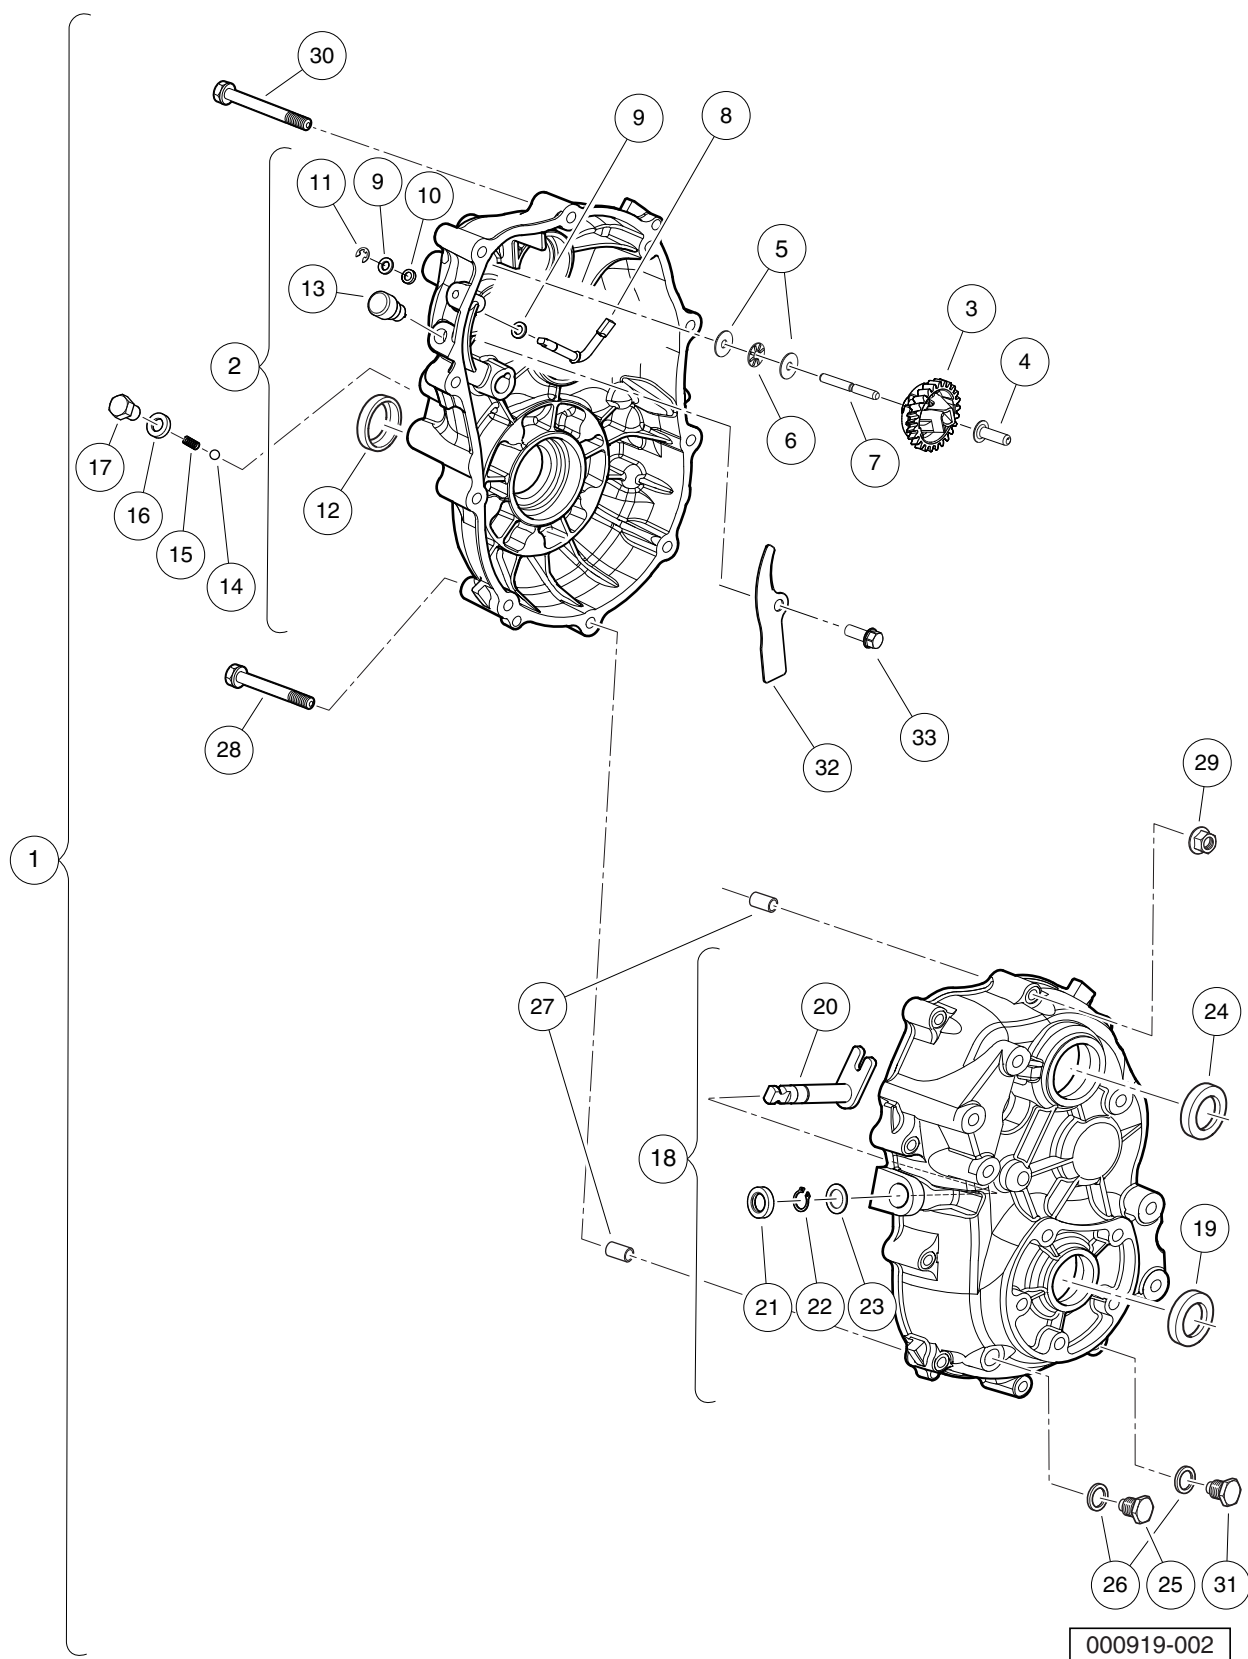


TRANSAXLE (ED65), LIMITED SLIP – PAGE 1 OF 3

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103879702</u>	Transaxle, ED65, Limited-Slip Differential (includes items 2 through 33)	1
2	<u>105025001</u>	Case, Transaxle, Left, Complete, ED65 (includes items 3 through 13)	1
3	<u>105025101</u>	Gear, Governor, Complete, ED65	1
4	<u>105025201</u>	Sleeve, Governor, ED65	1
5	<u>105025301</u>	Washer, ED65	2
6	<u>105025401</u>	Bearing, Thrust, ED65	1
7	<u>105025501</u>	Shaft, Governor Gear, ED65	1
8	<u>105025601</u>	Shaft, Governor, ED65	1
9	<u>105025701</u>	Washer, 6mm, ED65	2
10	<u>105025801</u>	Seal, Oil, 6x10x2.5, ED65	1
11	<u>105025901</u>	Retaining Ring, E5, ED65	1
12	<u>105026001</u>	Seal, Oil, 24x40x9, ED65	1
13	<u>105027101</u>	Vent, Breather, ED65	1
14	<u>105026101</u>	Ball, Steel, ED65	1
15	<u>105026201</u>	Spring, ED65	1
16	<u>105026301</u>	Gasket, 10, ED65	1
17	<u>105026401</u>	Bolt, M10-1.25x12mm Lg, ED65	1
18	<u>105026501</u>	Case, Transaxle, Right, Complete, ED65 (includes items 19 through 24)	1
19	<u>105026001</u>	Seal, Oil, 24x40x9, ED65	1
20	<u>105026601</u>	Shaft, Select, ED65	1
21	<u>105026701</u>	Seal, Oil, 13x22x5, ED65	1
22	<u>105026801</u>	Snap Ring, 13mm, ED65	1
23	<u>105026901</u>	Spacer, 13x1, ED65	1
24	<u>105027001</u>	Seal, Oil, 25x45x7, ED65	1
25	<u>105027201</u>	Plug, Oil Drain, ED65	1
26	<u>105027301</u>	Gasket, 14, ED65	2
27	<u>105028301</u>	Pin, Guide, ED65	2
28	<u>105028501</u>	Bolt, Flange, M8-1.25x65mm, ED65	1
29	<u>105030001</u>	Nut, Flange, M8-1.25, ED65	10
30	<u>105030701</u>	Bolt, Flanged, M8-1.25x80mm, ED65	9
31	<u>105063501</u>	Plug, Oil Drain, Magnetic, ED65	1
32	<u>105234801</u>	Plate, Ed65 Splash	1
33	<u>105234901</u>	Bolt, M6-1 X 12mm Lg, Ed65	1
Note: Fuji transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube.			

12

G

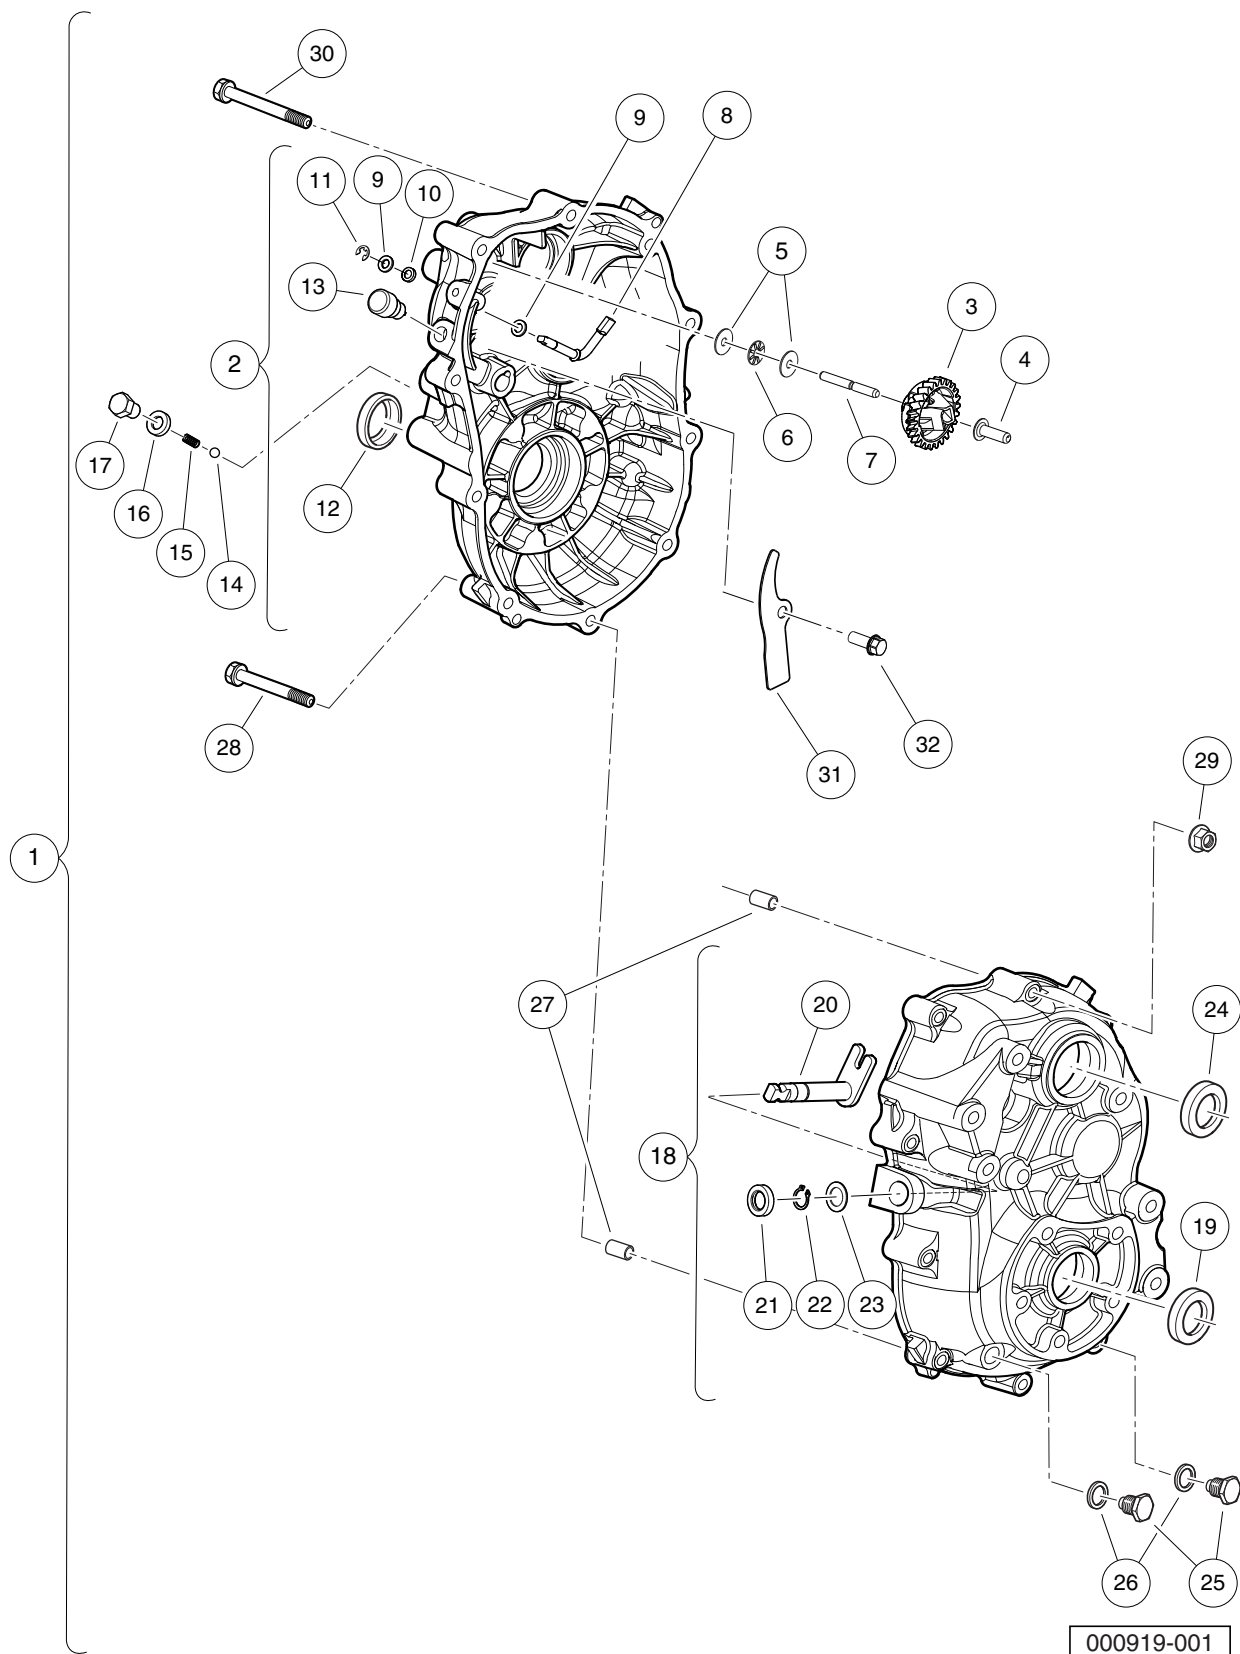


TRANSAXLE (ED65), OPEN – PAGE 1 OF 3

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	<u>103879701</u>	Transaxle, ED65, Open Differential (includes items 2 through 32)	1
2	<u>105025001</u>	Case, Transaxle, Left, Complete, ED65 (includes items 3 through 13)	1
3	<u>105025101</u>	Gear, Governor, Complete, ED65	1
4	<u>105025201</u>	Sleeve, Governor, ED65	1
5	<u>105025301</u>	Washer, ED65	2
6	<u>105025401</u>	Bearing, Thrust, ED65	1
7	<u>105025501</u>	Shaft, Governor Gear, ED65	1
8	<u>105025601</u>	Shaft, Governor, ED65	1
9	<u>105025701</u>	Washer, 6mm, ED65	2
10	<u>105025801</u>	Seal, Oil, 6x10x2.5, ED65	1
11	<u>105025901</u>	Retaining Ring, E5, ED65	1
12	<u>105026001</u>	Seal, Oil, 24x40x9, ED65	1
13	<u>105027101</u>	Vent, Breather, ED65	1
14	<u>105026101</u>	Ball, Steel, ED65	1
15	<u>105026201</u>	Spring, ED65	1
16	<u>105026301</u>	Gasket, 10, ED65	1
17	<u>105026401</u>	Bolt, M10-1.25x12mm Lg, ED65	1
18	<u>105026501</u>	Case, Transaxle, Right, Complete, ED65 (includes items 19 through 24)	1
19	<u>105026001</u>	Seal, Oil, 24x40x9, ED65	1
20	<u>105026601</u>	Shaft, Select, ED65	1
21	<u>105026701</u>	Seal, Oil, 13x22x5, ED65	1
22	<u>105026801</u>	Snap Ring, 13mm, ED65	1
23	<u>105026901</u>	Spacer, 13x1, ED65	1
24	<u>105027001</u>	Seal, Oil, 25x45x7, ED65	1
25	<u>105027201</u>	Plug, Oil Drain, ED65	2
26	<u>105027301</u>	Gasket, 14, ED65	2
27	<u>105028301</u>	Pin, Guide, ED65	2
28	<u>105028501</u>	Bolt, Flange, M8-1.25x65mm, ED65	1
29	<u>105030001</u>	Nut, Flange, M8-1.25, ED65	10
30	<u>105030701</u>	Bolt, Flanged, M8-1.25x80mm, ED65	9
31	<u>105234801</u>	Plate, Ed65 Splash	1
32	<u>105234901</u>	Bolt, M6-1 X 12mm Lg, Ed65	1
Note: Fuji transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube.			

12


G

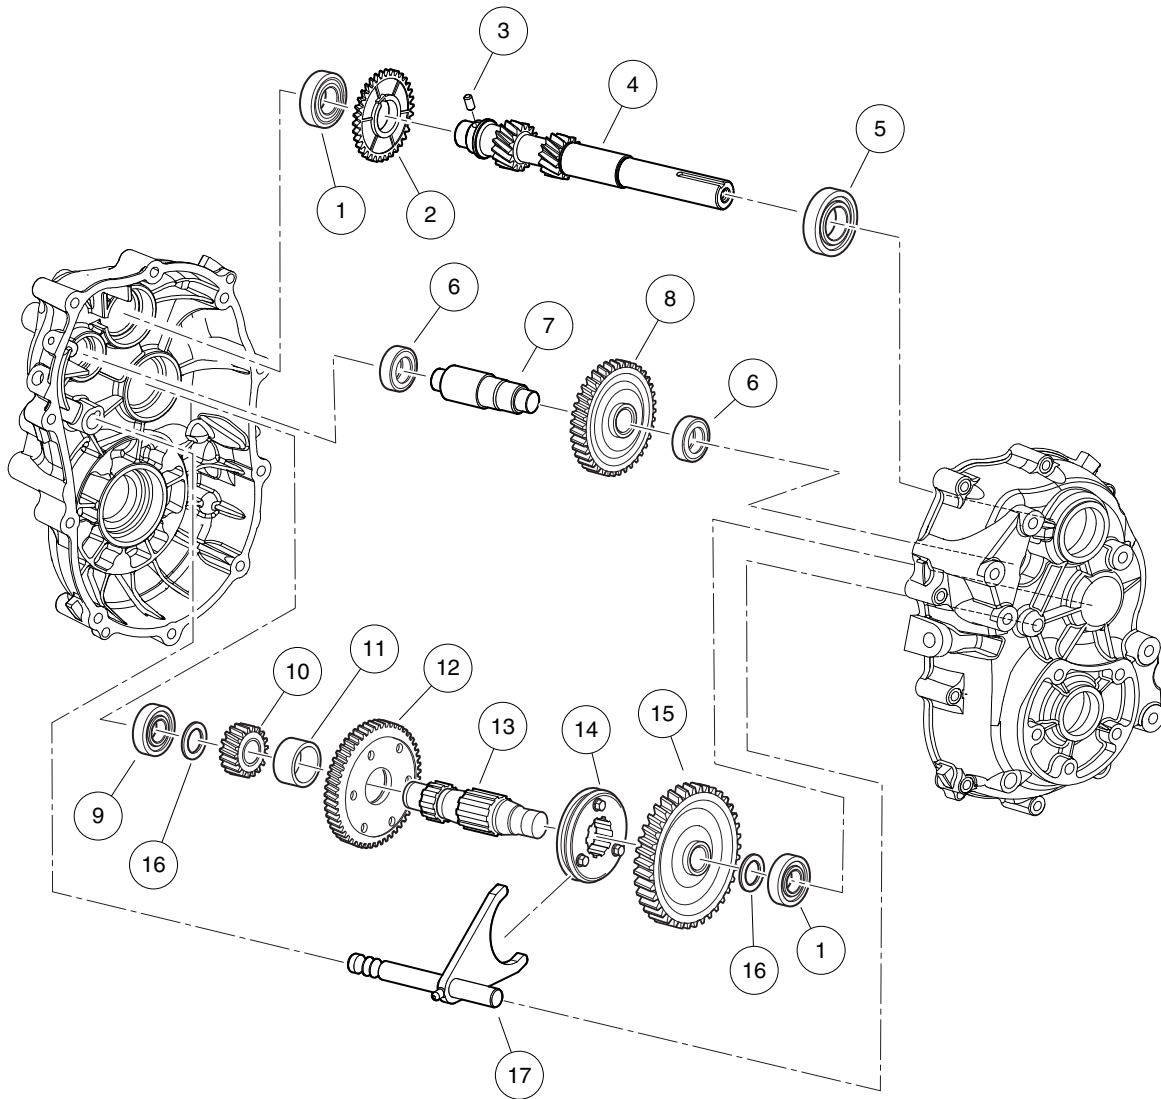

000919-003

TRANSAXLE (ED65), LIMITED SLIP AND OPEN – PAGE 2 OF 3


ITEM	PART NO.	DESCRIPTION	QTY	12	G
		1 2 3 4			
1	<u>105027401</u>	Bearing, Ball (6204)	2		
2	<u>105027501</u>	Gear, Governor, 34 Tooth, ED65	1		
3	<u>105027601</u>	Pin, 6x12 Long, ED65	1		
4	<u>105027701</u>	Shaft, Input, ED65	1		
5	<u>105027801</u>	Bearing, Ball (6205 seal)	1		
6	<u>105027901</u>	Bearing, Ball (6202)	2		
7	<u>105028001</u>	Shaft, Counter, ED65	1		
8	<u>105028201</u>	Gear, 34 Tooth, ED65	1		
9	<u>105028401</u>	Bearing, Ball (6304)	1		
10	<u>105028601</u>	Gear, 17 Tooth, ED65	1		
11	<u>105028701</u>	Collar, 24 x 12, ED65	1		
12	<u>105028801</u>	Gear, 52 Tooth, ED65	1		
13	<u>105028901</u>	Shaft, Center, ED65	1		
14	<u>105029001</u>	Clutch, Pin, ED65	1		
15	<u>105029101</u>	Gear, 62 Tooth, ED65	1		
16	<u>105029201</u>	Spacer, 20x2, ED65	2		
17	<u>105030901</u>	Shaft, Shift, ED65	1		
		Note: To identify your transaxle, locate the serial number decal on the axle tube.			

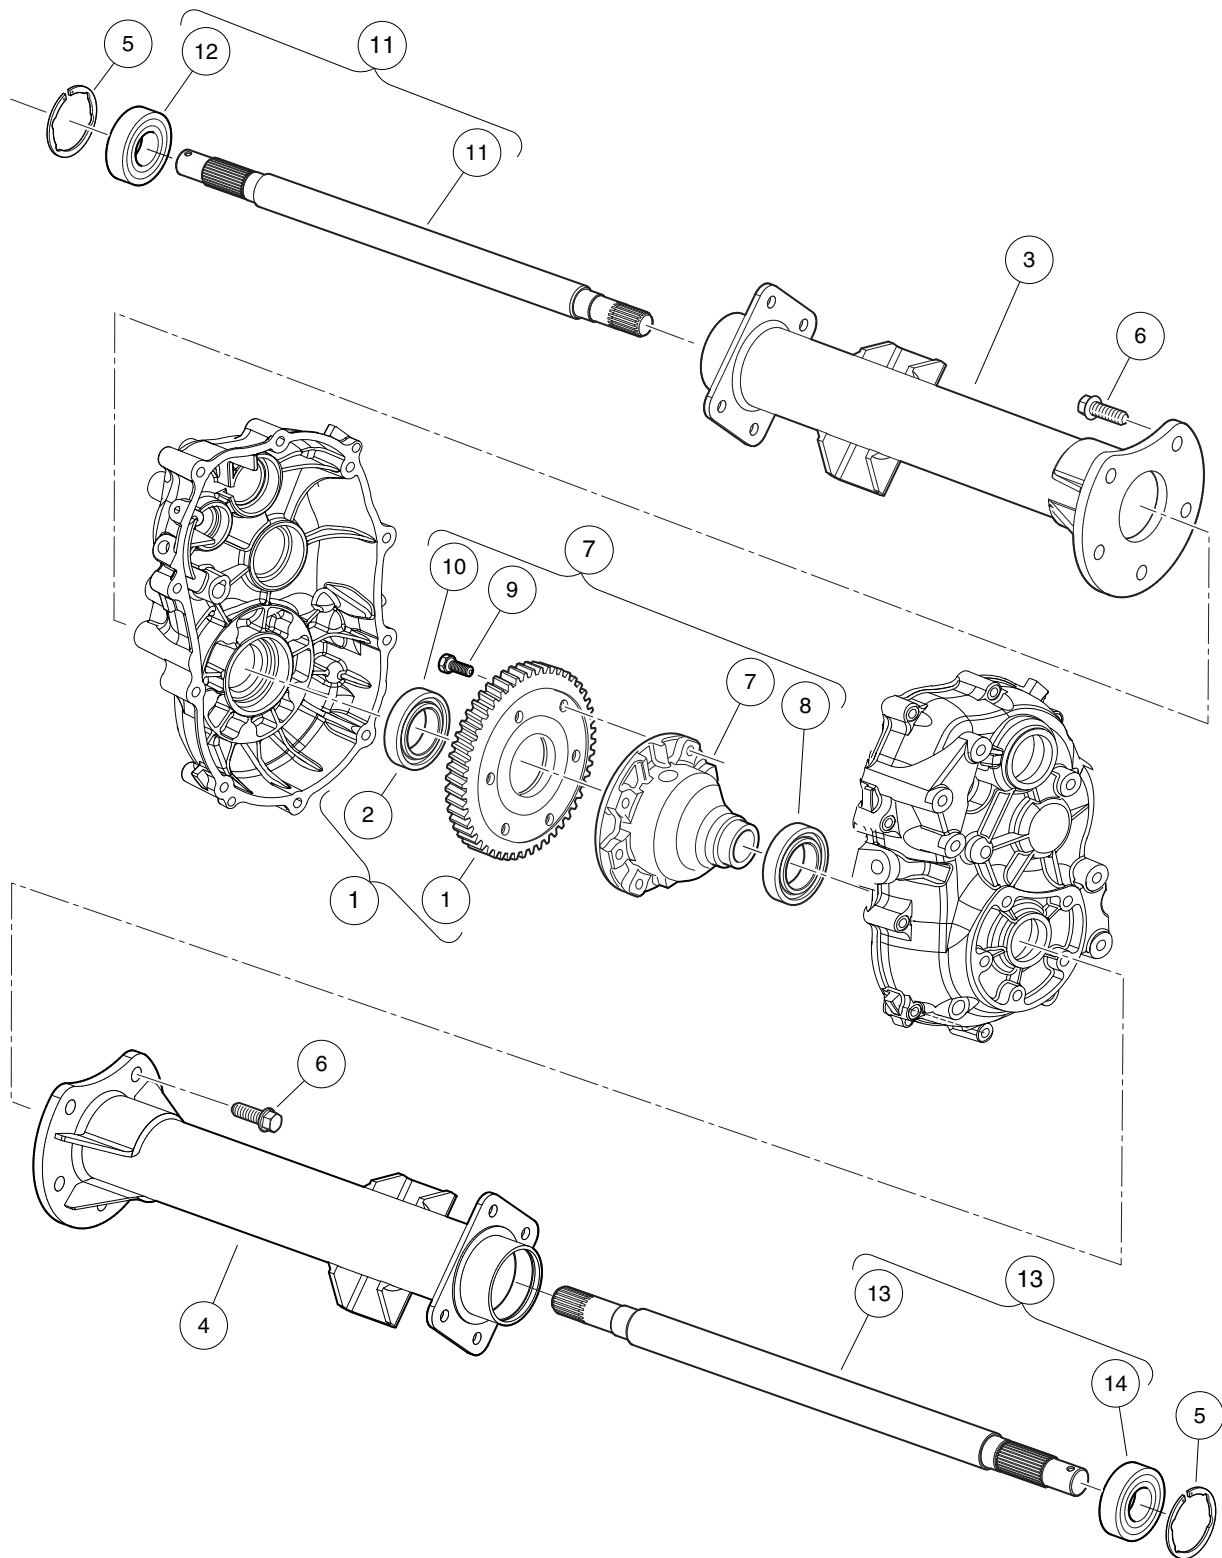

000919-005

TRANSAXLE (ED65), LIMITED SLIP – PAGE 3 OF 3

ITEM	PART NO.	DESCRIPTION	QTY	12	G
		1 2 3 4			
1	105029901	Gear, 60 Tooth, Complete, ED65 (includes item 2)	1		
2	<u>105029801</u>	Bearing, Ball (6007)	1		
3	105030401	Axle Tube, Driver-Side, ED65	1		
4	105030501	Axle Tube, Passenger-Side, ED65	1		
5	<u>105030601</u>	Snap Ring, 52mm, ED65	2		
6	<u>105030801</u>	Bolt, Flange, M10-1.25x25, ED65	10		
7	<u>105063601</u>	Differential, Limited-Slip, ED65 (includes items 8 through 10)	1		
8	<u>105028101</u>	Bearing, Ball (6006)	1		
9	<u>105029501</u>	Bolt, M10-1.25x26mm Lg, ED65	6		
10	<u>105029801</u>	Bearing, Ball (6007)	1		
11	<u>105066001</u>	Axle Shaft, Driver-Side, Complete, ED65 (includes item 12)	1		
12	<u>105030301</u>	Bearing, Ball (6205DD)	1		
13	<u>105066101</u>	Axle Shaft, Passenger-Side, Complete, ED65 (includes item 14)	1		
14	<u>105030301</u>	Bearing, Ball (6205DD)	1		
Note: To identify your transaxle, locate the serial number decal on the axle tube.					

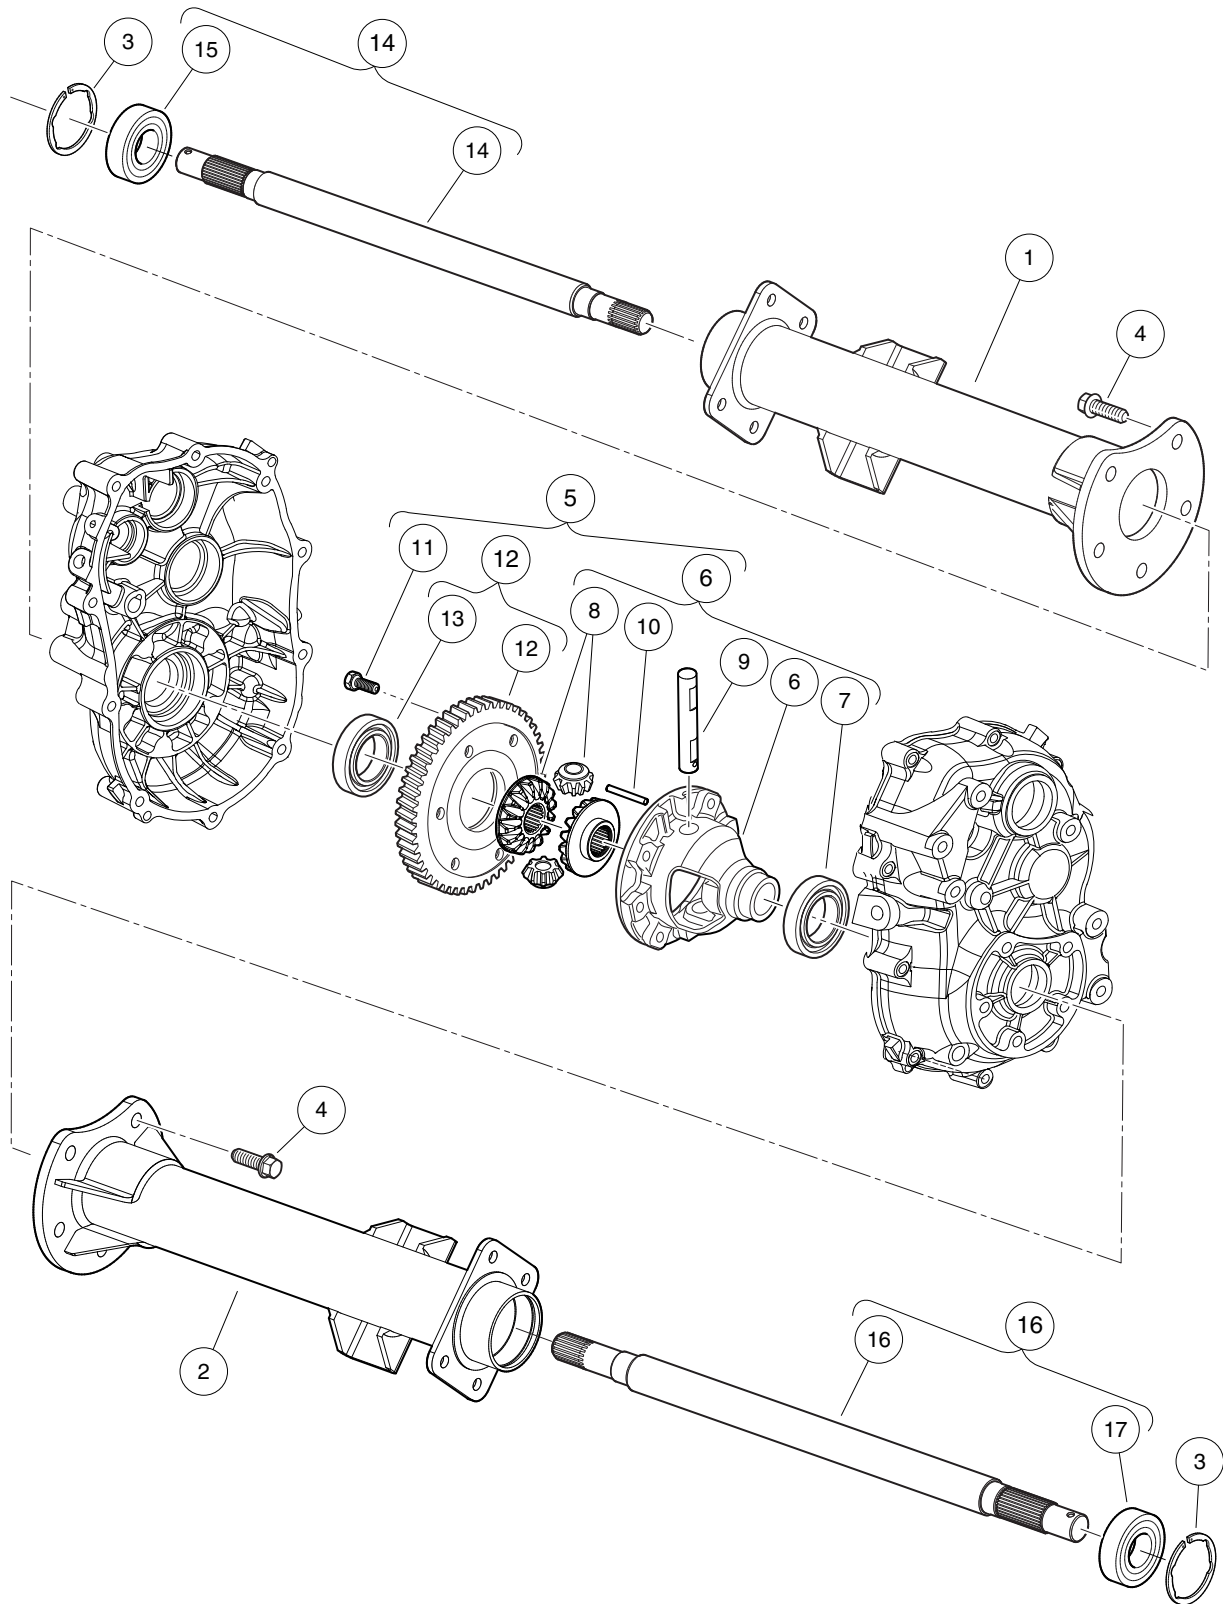


000919-004

TRANSAXLE (ED65), OPEN – PAGE 3 OF 3

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	105030401	Axle Tube, Driver-Side, ED65	1
2	105030501	Axle Tube, Passenger-Side, ED65	1
3	105030601	Snap Ring, 52mm, ED65	2
4	105030801	Bolt, Flange, M10-1.25x25, ED65	10
5	105031001	Differential, Open, ED65 (includes items 6 through 12)	1
6	105029301	Case, Differential, Complete, ED65 (includes items 7 through 10)	1
7	105028101	Bearing, Ball (6006)	1
8	105029401	Gear Set, Differential, ED65	1
9	105029601	Shaft, Differential, ED65	1
10	105029701	Pin, 4x40 Long, ED65	1
11	105029501	Bolt, M10-1.25x26mm Lg, ED65	6
12	105029901	Gear, 60 Tooth, Complete, ED65 (includes item 13)	1
13	105029801	Bearing, Ball (6007)	1
14	105066001	Axle Shaft, Driver-Side, Complete, ED65 (includes item 15)	1
15	105030301	Bearing, Ball (6205DD)	1
16	105066101	Axle Shaft, Passenger-Side, Complete, ED65 (includes item 17)	1
17	105030301	Bearing, Ball (6205DD)	1
Note: To identify your transaxle, locate the serial number decal on the axle tube.			

12

G

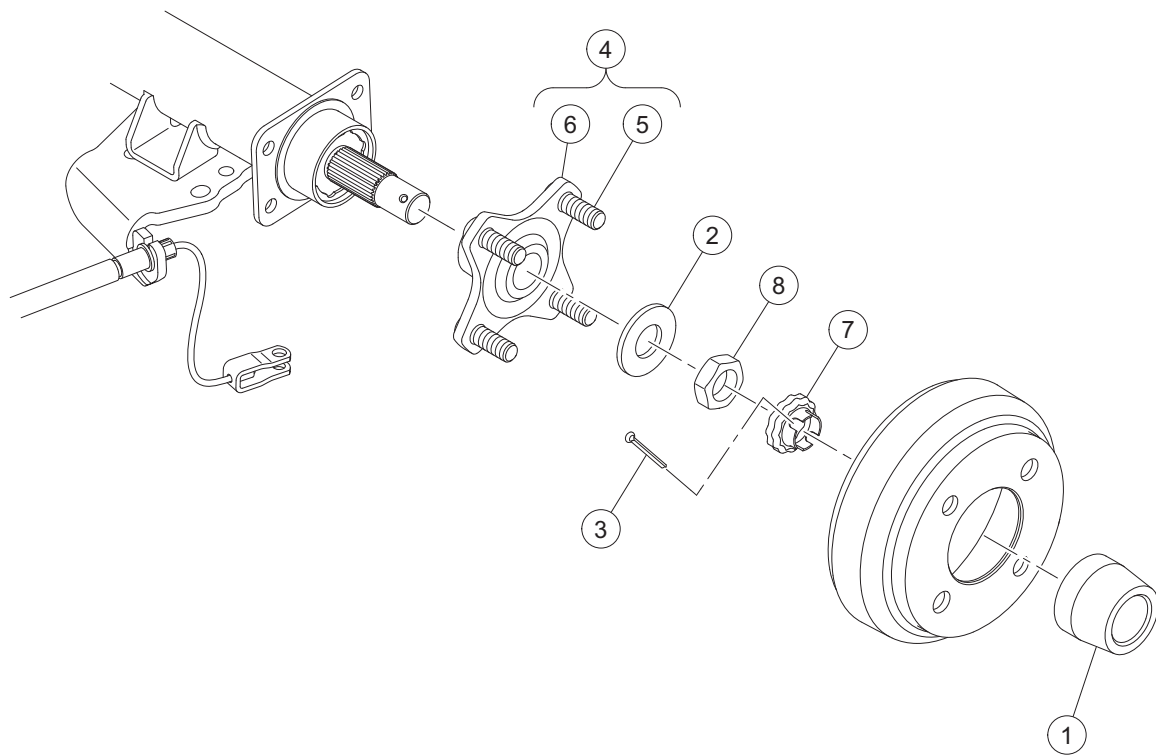


G-070199-000003

HUB, REAR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102274101	Center Cap, Rubber	2
2	102617801	Washer, Hard, M22	2
3	103989501	Pin, Cotter, 9/64 X 1.75"	2
4	103995001	Asm, Hub, Machined (includes items 5 and 6)	2
5	103951501	Lug Stud, 1/2-20 UNF, SAE J1102	4
6	103979301	Hub, Machined	1
7	104021701	Retaining Ring, Hex Nut, M22	2
8	104027101	Nut, Hex, M22x1.5, Thin	2

12

G

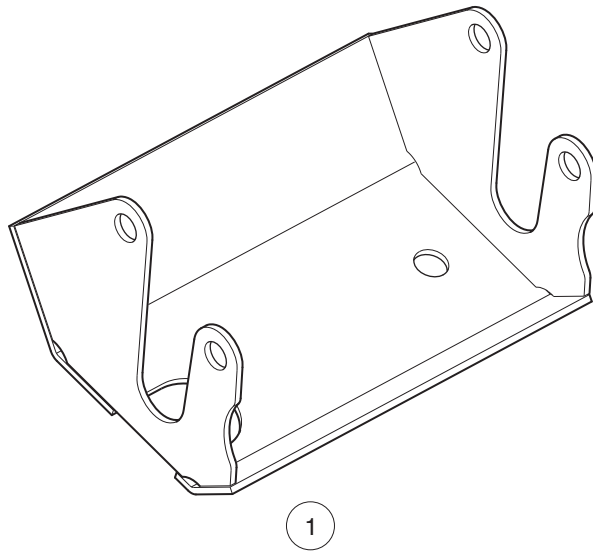

001436-001

DIFFERENTIAL GUARD, ED65 – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
1	47662588001	1 2 3 4 Guard, Differential	1

12

G

12

G

MAINTENANCE AND SERVICE TOOLS

13


G

E

13

G

E

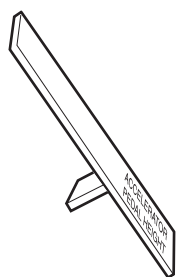


1



2



3

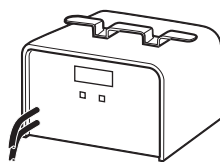


4




5



6

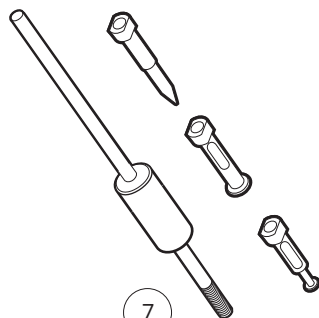


7

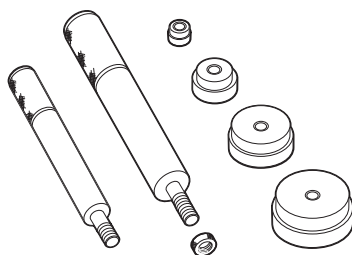

8




9

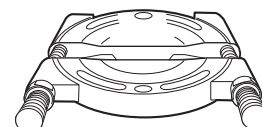


10




11




12

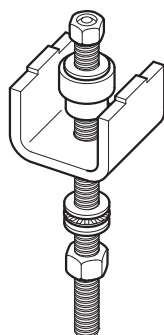


13

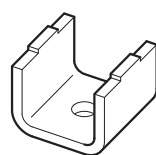

14

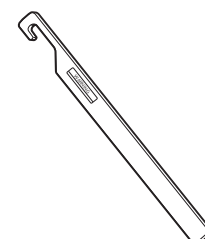


15

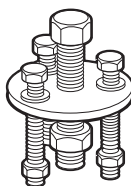

16



17

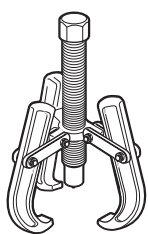

18



19

001060-003








MAINTENANCE AND SERVICE TOOLS

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	13 G E
		1 2 3 4 The following tool list includes all tools available from Club Car for maintenance and service procedures for gasoline and electric golf and utility vehicles. Be sure to carefully examine the tool list for applicability to your vehicle before ordering.			
1	<u>101871001</u>	Accelerator Pedal Adjustment Tool (Utility Vehicles).....	1	1	
2	<u>101813202</u>	Adhesive, Guide Ring, 3-Gram Tube		1	
3	<u>101641202</u>	Arbor	1		
4	<u>101831901</u>	Battery Discharge Machine, 36/48 Volt		1	
5	<u>1014305</u>	Battery Terminal Protector Spray	1	1	
6	<u>1011767</u>	Battery Thermometer	1	1	
7	<u>1016417</u>	Bearing and Oil Seal Remover Assembly	1	1	
8	<u>1016416</u>	Bearing Driver Set	1	1	
9	<u>1012811</u>	Bearing Puller	1	1	
10	<u>1012812</u>	Bearing Puller Wedge Attachment	1	1	
11	<u>101887101</u>	Calibration Test Module		1	
12	<u>102562401</u>	Charger Bezel Tool		1	
		Clutch Tools (items 13 - 19)	1		
13	<u>47568549001</u>	Driven Clutch Tool	1		
14	<u>47568246001</u>	Plate, Cam Press (supplied with item 13).....	1		
15	<u>105072501</u>	Drive Clutch Holder Tool Assembly	1		
16	<u>1014497</u>	Drive Clutch Hub Puller	1		
17	<u>1014496</u>	Drive Clutch Puller	1		
18	<u>1014508</u>	Driven Clutch Cam Puller	1		
19	<u>1014507</u>	Driven Clutch Puller Plug	1		
		Please refer to the maintenance and service manual for proper tool application.			

13

G

E

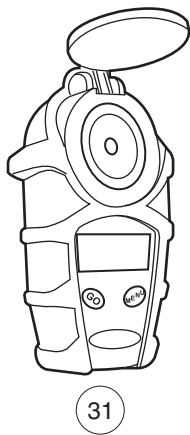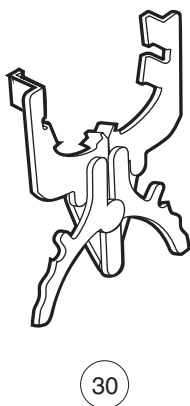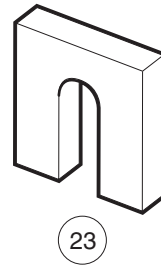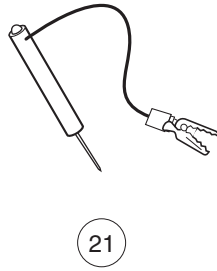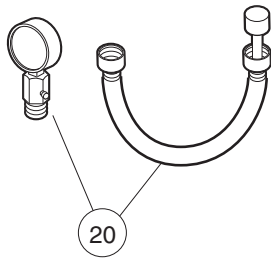

001061-003

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	13 G E
		1 2 3 4			
20	101641002	Compression Gauge and Adapter	1		
21	1011273	Continuity Tester	1	1	
22	1012151	Dry Moly Lubricant	1	1	
23	1016418	Gear Yoke	1	1	
24	1011478	Hydrometer	1	1	
25	1013593	Internal Retaining Ring Pliers	1	1	
26	101928701	Liquid Gasket (transaxle case)	1	1	
27	102243402	Moly-Teflon Lubricant (4-oz. (113-gram) tube)		1	
28	102587201	Paint Pen, Touch-Up, Underbody ,Black	1	1	
29	1016414	Piston Ring Compressor Kit	1		
30	1016415	Piston Ring Pliers	1		
31	AM1285701	Refractometer	1	1	
32	1012549	Retaining Ring Pliers, 45 External	1	1	
33	1012560	Retaining Ring Pliers, 90 Internal	1	1	
34	101823101	Safety First Card (50 per pack)	1	1	
35	1012809	Seal Puller	1	1	
Please refer to the maintenance and service manual for proper tool application.					

13

G


E




36




37

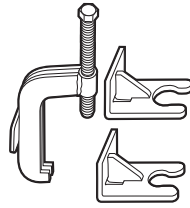


38




39




40




41

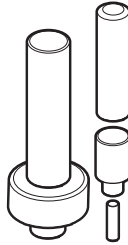

42

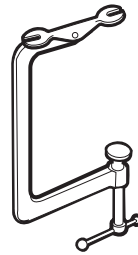

43

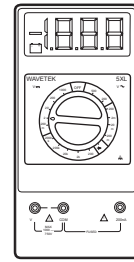

44



45



46



47

001062-002

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	13 G E
		1 2 3 4			
36	<u>1014264</u>	Steering Column Bearing Press Tool	1	1	
37	<u>1014259</u>	Steering Column Retaining Ring Tool	1	1	
38	102061201	Steering Wheel Puller Tool	1	1	
39	<u>102570401</u>	Tool, Tensioning, Starter Generator	1		
40	<u>1014162</u>	Transaxle Axle Seal Tool		1	
41	1014161	Transaxle Pinion Seal Tool		1	
42	<u>1014115</u>	Transmission Tool Kit		1	
43	<u>101641101</u>	Valve Spring Compressor	1		
44	1011480	Volt Ohm Meter	1	1	
45	<u>47631025001</u>	Kit, EFI Diagnostics	1		
46	<u>47631026001</u>	Kit, Bluetooth EFI Diagnostics	1		
47	<u>47631075001</u>	Kit, EFI Tool	1		
		 Please refer to the maintenance and service manual for proper tool application.			

INDEX

Part Number and Page

AM10419	11-9	1010150	6-13, 6-17	1012431	7-11
SVP203101	3-7	1010177	6-13, 6-17	1012528	1-41
183	1-37, 11-5, 11-7	1010200	6-13, 6-17	1012549	13-5
320	1-19, 5-11	101043502	1-43	1012560	13-5
332	1-23, 1-39, 7-9	1010805	5-3	1012565	6-9
334	1-19, 1-41, 5-5, 6-3, 6-5, 11-5, 11-7	1010829	5-11, 5-13	1012566	6-9
357	1-43, 6-13, 6-17	1010850	5-9, 5-15	1012571	1-39, 6-5
451	5-9, 5-15	1010877	5-3	1012604	6-5
705	1-3, 1-43	1010878	5-3	1012605	6-5
706	1-43, 6-13, 6-17	1010909	1-37	1012649	9-5
1016	4-13	1010921	5-3	1012809	13-5
1028	5-3	1010927	5-3	1012811	13-3
1032	5-3	1010932	5-3	1012812	13-3
1035	1-41	1010933	5-3	1012836	11-9
1218	6-19, 9-15	1010934	7-15, 7-17	1013035	6-3
1241	1-21, 4-5, 4-7, 5-3, 5-5, 5-13, 7-11, 7-15, 7-17, 9-15	1010954	7-11	1013042	6-3, 6-11, 6-15
1242	5-11, 5-13, 7-7, 7-11	1010984	2-3	1013044	6-3
1606	7-15	1011084	5-5	1013052	6-3
1624	1-3, 5-5, 6-3, 7-7	1011114	5-9, 5-15, 9-11, 12-11	1013061	1-37
2402	1-3, 6-11, 6-15	1011137	5-9, 5-15	1013135	6-21
7048	6-13, 6-17	1011154	5-9, 5-15	1013309	1-23
7173	4-5, 4-7, 7-15, 7-17	1011273	13-5	1013531	5-13
7174	6-13, 6-17, 7-7	1011298	5-9, 5-15	1013589	7-11
7274	6-21	1011303	5-9, 5-15	1013593	13-5
7308	6-21	1011314	5-9, 5-15	1013609	7-11
7473	1-21, 1-43, 4-5, 4-7, 5-3, 5-5, 5-11, 5-13, 6-19, 7-11, 7-15, 7-17, 9-15	1011393	6-21	1013734	1-41
7479	1-39	1011402	5-3	1013746	9-5
7561	1-43	1011415	6-23	1013869	5-3
7716	5-3	1011418	5-3	1013870	5-3
7818	7-11	1011439	4-5, 4-7	1013876	5-3
7820	4-5, 4-7	101146302	5-9, 5-15	1013924	5-9, 5-15, 8-7
7840	6-21	1011464	5-9, 5-15	1014007	5-5, 9-11, 12-3, 12-11
7893	4-13, 7-11	1011465	5-9, 5-15	1014051	11-7
7910	6-21	1011466	5-9, 5-15	1014055	11-5, 11-7
8056	7-13	1011467	5-9, 5-15	1014056	11-5, 11-7
8057	7-11, 7-13	1011478	13-5	1014057	11-5, 11-7
8058	7-11, 7-13	1011480	13-7	1014058	11-5, 11-7
8067	6-13, 6-17	1011494	5-9, 5-15	1014059	11-5, 11-7
8233	1-39, 5-5, 7-9, 9-11, 12-11	1011557	4-5, 4-7	1014062	11-5, 11-7
8248	7-9	1011694	5-5	1014063	11-5, 11-7
8450	11-5, 11-7	1011697	6-5, 10-3	1014065	7-11, 11-5, 11-7
8639	6-5, 7-11	1011734	5-5	1014072	11-9
8717	5-5, 7-11, 12-3	1011767	13-3	1014078	11-9
8754	1-3, 1-7, 5-5, 5-11, 6-3, 6-5, 6-11, 6-13, 6-15, 6-17, 7-7	1011779	5-11, 5-13	1014080	11-9
8755	6-13, 6-17	1011825	4-5, 4-7	1014115	13-7
8861	6-11, 6-15	101187702	5-3	1014116	9-3
8935	1-21	1011887	6-21	1014125	6-5
8963	1-21	1011892	6-21	1014126	6-5
8990	5-11, 6-3, 12-5	1011931	5-5	1014145	7-11
1010005	6-21	1011937	1-21	1014161	13-7
1010138	1-43, 6-11, 6-15	1011962	3-7	1014162	13-7
1010145	6-23	1011990	1-3, 1-43	1014213	6-5
		1012151	13-5	1014214	6-5
		1012295	4-5, 4-7, 7-11	1014217	6-5
		1012303	6-13, 6-17	1014259	13-7
		101242802	1-7	1014264	13-7

INDEX

1014276	6-13, 6-17	101641202	13-3	101880001	6-3
1014287	11-5, 11-7	1016414	13-5	101880101	6-3
1014288	6-5, 7-15, 11-5, 11-7	1016415	13-5	101880201	6-3
1014305	13-3	1016416	13-3	101880301	6-3
1014375	7-15	1016417	13-3	101880701	5-9, 5-15
1014453	11-5, 11-7	1016418	13-5	101884801	8-7
1014454	11-9	1016557	5-9, 5-15	101886101	9-11, 12-11
1014496	13-3	1016573	5-9, 5-15	101887101	13-3
1014497	13-3	1016603	1-43	101887601	9-11
1014507	13-3	1016801	11-5, 11-7	101898001	7-15, 7-17
1014508	13-3	1016849	4-5, 4-7, 4-9	101898101	7-15
1014789	7-3	1016851	4-9	101908401	7-9
1014807	7-11, 7-13	1016901	11-5	101915201	3-5
1014808	7-11	1017029	5-3	101918501	5-3, 5-5
101503202	1-19	1017211	5-11	101919801	5-5
1015332	7-3	1017226	6-13, 6-17	101922501	7-9
1015373	7-11	1017266	6-11, 6-15	101928701	13-5
1015391	1-41	1017273	6-7, 6-9	101932201	4-5, 4-7
1015399	1-27	1017313	6-5	101935301	5-11
1015400	1-41	1017314	6-5	101946201	1-27
1015405	7-11	1017315	6-5	101953102	5-13
1015524	13-3	1017317	6-5	101953106	5-11
101553901	3-7	1017378	5-5	101954301	1-23
1015583	1-41, 6-13, 6-17	1017380	5-5	101955101	4-5, 4-7
101558302	6-23	1017424	5-5	101957101	4-5, 4-7
1015597	6-13, 6-17	1017686	11-9	101958602	1-39
1015661	1-41	1017774	1-43	101960501	3-5
1015700	1-39	101796201	5-5	101963401	1-27, 9-15
1015737	7-11	101808401	13-3	101974701	4-11
1015741	7-11	101813202	13-3	101974702	4-11
1015752	7-11	101817401	5-5	101974703	4-11
101587714	9-5	101818801	5-5	101974704	4-11
1015878	7-11, 7-13	101823101	13-5	101974705	4-11
1015932	7-7	101825101	3-3, 4-9	101974706	4-11
1016060	1-39	101830701	4-11	101974707	4-11
101609401	3-3	101831901	13-3	101974708	4-11
1016154	6-9	101833401	11-9	101974709	4-11
1016183	6-5	101834502	4-11	101974710	4-11
1016201	11-5, 11-7	101834601	8-7	101974711	4-11
1016214	6-9	101834602	8-7	101974712	4-11
1016269	6-5	101835601	1-39	101984801	6-5
1016289	11-5, 11-7	101850301	4-3, 6-7, 6-9	101990801	5-13
1016319	5-11	101851101	4-11	102022601	6-11, 6-15
1016320	5-11	101856101	1-9	102022602	6-3, 6-11, 6-15
1016346	6-11, 6-15	101856102	7-11	102025701	5-7
1016349	6-11, 6-15	101861901	5-5	102025801	9-3, 9-5
1016350	6-11, 6-15	101865301	5-11	102026001	5-5
1016351	6-11, 6-15	101871001	13-3	102059501	12-7, 12-9
1016353	6-11, 6-15	101874601	5-11	102061201	13-7
1016384	6-13, 6-17	101878201	5-3	102065901	1-41
101638502	6-11, 6-15	101879401	6-3	102155801	11-9
1016386	6-13, 6-17	101879501	6-3	102158901	5-5
1016387	6-13, 6-17	101879601	6-3	102160601	3-7
1016389	6-13, 6-17	101879701	6-3	102162601	5-13
101641002	13-5	101879801	6-3	102166901	5-13
101641101	13-7	101879901	6-3	102175901	3-7

INDEX

102198001 7-19
 102199001 4-5, 4-7
 102242101 11-9
 102243402 13-5
 102274101 12-23
 102278001 6-5
 102278901 3-3
 102289201 6-3, 6-11, 6-15
 102292701 1-15
 102292801 5-11, 5-13
 102296020 12-3
 102296150 1-29
 102296301 1-15, 1-29
 102296530 1-15
 102296716 9-11
 102296819 1-5
 102297125 1-15, 1-17, 1-19, 1-33, 1-35, 4-5, 4-7
 102298116 9-9
 102298185 1-41
 102298401 1-41, 6-23, 10-3
 102301401 1-41
 102311501 1-9
 102323101 5-11, 5-13
 102323201 5-11, 5-13
 102323501 1-7
 102355301 7-15
 102410604 9-11
 102410607 9-3
 102411209 9-15
 102459301 3-5
 102476401 9-11, 12-11
 102490301 9-3, 9-11
 102491501 11-5, 11-7
 102498201 9-11, 12-7, 12-9, 12-11
 102506401 1-41, 6-23
 102517501 4-5
 102517601 4-7
 102526201 12-3
 102540301 8-7
 102541401 7-7
 102541501 1-15
 102546401 4-5
 102558201 8-3, 9-15
 102562401 13-3
 102564002 6-13, 6-17
 102570401 13-7
 102582401 1-29
 102587201 13-5
 102617201 8-5
 102617801 12-23
 102621501 7-7, 12-3, 12-7, 12-9
 102621601 1-7
 102670701 1-7, 6-23
 102684501 6-13, 6-17
 102711201 7-11
 102725501 9-15

102732401 8-5
 102766301 6-13, 6-17
 102838701 7-5
 102838801 7-5
 102838901 7-5
 102839001 7-5
 102839301 7-5
 102841101 7-5
 102860501 5-9, 5-15
 102869401 4-9
 102882501 1-43
 102883601 1-15, 3-9
 102894503 4-5
 102922701 10-3
 102947601 1-29
 102977901 9-3
 102989501 1-27
 103180101 4-9
 103182701 1-19
 103182702 1-19
 103198401 7-9
 103205501 3-5, 7-9
 103234304 3-9
 103245001 4-5
 103262201 8-5
 103347601 7-5
 103347701 7-5
 103347801 7-5
 103348201 4-9
 103348602 4-9
 103354701 6-11, 6-15
 103372101 9-3
 103372401 9-5
 103452001 9-5
 103477901 6-21
 103484301 4-5, 4-7
 103487501 1-27
 103496801 7-15
 103502701 6-17
 103502801 6-13
 103507001 6-13, 6-17
 103508101 8-5
 103538701 1-41
 103539001 1-41
 103540203 1-19
 103575801 1-41
 103601501 6-3
 103628801 6-17
 103628901 6-13
 103653401 6-3
 103653501 6-3, 6-11, 6-15
 103653601 6-11, 6-15
 103717302 6-13, 6-17
 103717402 6-13, 6-17
 103724504 6-7, 6-9
 103724601 6-9

103724602 6-7
 103724901 6-9
 103756401 9-5
 103821301 4-13
 103829401 6-7
 103832501 4-15
 103832601 4-15
 103865101 5-5
 103879701 12-15
 103879702 12-13
 103886601 12-5
 103896604 9-5
 103896605 9-5
 103924801 7-3
 103951501 12-23
 103951801 1-43
 103973901 11-7
 103973902 11-5
 103974102 11-3
 103974201 11-5, 11-7
 103974401 11-5, 11-7
 103975301 11-9
 103976101 11-5, 11-7
 103979301 12-23
 103984601 11-5, 11-7
 103989501 12-23
 103995001 12-23
 104021701 12-23
 104023501 9-11, 12-11
 104025101 11-9
 104026801 3-3
 104027101 12-23
 105000301 7-11
 105000401 7-11
 105003401 9-15
 105006501 1-27
 105007001 1-21
 105007402 9-11
 105007403 9-11
 105009101 9-15
 105009401 9-15
 105025001 12-13, 12-15
 105025101 12-13, 12-15
 105025201 12-13, 12-15
 105025301 12-13, 12-15
 105025401 12-13, 12-15
 105025501 12-13, 12-15
 105025601 12-13, 12-15
 105025701 12-13, 12-15
 105025801 12-13, 12-15
 105025901 12-13, 12-15
 105026001 12-13, 12-15
 105026101 12-13, 12-15
 105026201 12-13, 12-15
 105026301 12-13, 12-15
 105026401 12-13, 12-15

INDEX

105026501	12-13, 12-15	105034501	1-15	105068007	4-11
105026601	12-13, 12-15	105034601	1-15	105068008	4-11
105026701	12-13, 12-15	105034701	1-15	105068009	4-11
105026801	12-13, 12-15	105034801	1-15	105068010	4-11
105026901	12-13, 12-15	105034901	1-17	105068011	4-11
105027001	12-13, 12-15	105035001	1-17	105068012	4-11
105027101	12-13, 12-15	105035101	1-35	105068902	6-23
105027201	12-13, 12-15	105035201	1-35	105073401	4-3
105027301	12-13, 12-15	105035301	1-35	105074201	6-13, 6-17
105027401	12-17	105035701	1-19	105074501	1-7
105027501	12-17	105035801	1-33	105074502	1-7
105027601	12-17	105036301	12-3	105078401	1-27
105027701	12-17	105036601	1-41	105078809	2-3
105027801	12-17	105036701	1-15	105078810	2-3
105027901	12-17	105036801	4-3	105078901	2-3
105028001	12-17	105037101	4-9	105079204	2-3
105028101	12-19, 12-21	105037401	7-11	105079301	2-3
105028201	12-17	105037701	12-3	105079401	2-3
105028301	12-13, 12-15	105038001	12-3	105081501	7-3
105028401	12-17	105038101	12-3	105081601	7-3
105028501	12-13, 12-15	105038201	12-3	105081801	4-11
105028601	12-17	105038501	12-3	105081802	4-11
105028701	12-17	105038803	12-5	105081803	4-11
105028801	12-17	105039401	12-3	105081804	4-11
105028901	12-17	105039801	12-3	105081805	4-11
105029001	12-17	105039901	12-3	105081806	4-11
105029101	12-17	105040401	12-3	105081807	4-11
105029201	12-17	105040501	12-3	105081808	4-11
105029301	12-21	105040901	12-7	105081809	4-11
105029401	12-21	105043801	9-3	105081810	4-11
105029501	12-19, 12-21	105043901	9-3	105081811	4-11
105029601	12-21	105046101	3-3	105081812	4-11
105029701	12-21	105049201	1-19	105082301	3-5
105029801	12-19, 12-21	105049301	1-19	105083301	6-13, 6-17
105029901	12-19, 12-21	105062401	1-27	105083701	12-3
105030001	12-13, 12-15	105063001	1-27	105083801	12-3
105030301	12-19, 12-21	105063002	1-27	105084701	3-5
105030401	12-19, 12-21	105063501	12-13	105088501	9-15
105030501	12-19, 12-21	105063601	12-19	105093301	7-3
105030601	12-19, 12-21	105064121	1-25	105093501	1-29
105030701	12-13, 12-15	105064122	1-25	105093601	9-3
105030801	12-19, 12-21	105064123	1-25	105093801	4-3
105030901	12-17	105064124	1-25	105094001	1-7
105031001	12-21	105064521	1-23	105095101	7-3
105034001	1-19	105064522	1-23	105096101	11-5, 11-7
105034201	1-19	105064523	1-23	105100401	5-5
105034321	1-11	105064524	1-23	105100801	5-5
105034322	1-11	105066001	12-19, 12-21	105102301	1-29
105034323	1-11	105066101	12-19, 12-21	105102601	7-13
105034324	1-11	105066401	1-35	105104001	1-45
105034325	1-11	105068001	4-11	105104101	1-45
105034326	1-11	105068002	4-11	105104201	1-45
105034327	1-11	105068003	4-11	105104202	1-45
105034328	1-11	105068004	4-11	105104203	1-45
105034329	1-11	105068005	4-11	105104204	1-45
105034401	1-15	105068006	4-11	105104205	1-45

INDEX

105104206	1-45	105161701	7-3, 7-5	47584178001	7-5
105106101	2-5	105165801	4-5, 4-7	47584179001	7-5
105106201	2-5	105169101	1-41	47584184001	8-7
105106301	2-5	105170101	1-31	47585228001	6-23
105106501	2-5	105170501	1-43	47585228002	6-23
105106601	6-15	105185901	3-3	47587701001	8-7
105106702	6-11	105185902	3-7	47587715001	7-19
105106801	6-23	105188185	6-23	47598441001	4-9
105108201	4-5, 4-7	105188701	6-23	47599907001	6-23
105108301	4-5, 4-7	105190601	4-5, 4-7	47599907002	6-23
105108401	4-5, 4-7	105190701	4-5, 4-7	47600627001	1-3
105108901	1-43	105193501	1-43	47600628001	1-3
105109201	1-29	105194101	1-41, 9-3	47600629001	1-3
105110801	1-39	105194301	1-27	47600630001	1-3
105114806	4-5, 4-7	105196001	1-29	47601355001	9-11
105115002	3-9	105197401	1-3	47601767002	11-9
105115005	3-9	105197601	1-43	47601832001	11-9
105117701	1-13	105200401	1-23	47604303001	4-13
105117702	1-13	105210501	1-45	47606233001	9-3
105117703	1-13	105234801	12-13, 12-15	47606233002	9-3
105117704	1-13	105234901	12-13, 12-15	47606233004	9-3
105117705	1-13	105237399	7-17	47606257001	9-5
105117706	1-13	105242801	6-19	47607337001	7-3
105117707	1-13	105243001	6-19	47607338001	7-3
105117708	1-13	105245801	11-3	47609057001	4-9
105117709	1-13	105256701	7-17	47611208001	7-3
105117710	1-13	105256801	7-3	47611210001	10-3
105122807	4-7	105288801	1-31	47611483001	8-5
105122808	4-5	105301001	1-47	47611484001	8-5
105124001	1-7	105301101	1-47	47611648001	8-5
105124201	1-31	105301201	1-47	47611868001	7-7
105124202	1-31	105301301	1-47	47611869001	7-7
105124901	1-9	105301401	1-47	47611870001	7-7
105128801	1-31	105301501	1-47	47611876001	9-3
105128802	1-31	105301601	1-47	47611877001	9-3
105128901	1-31	105305401	1-47	47612352001	9-9
105129001	1-31	105305501	1-47, 1-49	47613047002	10-3
105131001	1-43	105305801	1-49	47616108001	1-47
105134901	12-9	105305901	1-49	47616109001	1-47
105135101	9-11, 12-7, 12-9	105306001	1-49	47616110001	1-47
105135201	4-5, 4-7	105306201	1-49	47616111001	1-47
105135901	7-3	105306401	1-49	47616112001	1-47
105136001	7-3	105306601	1-49	47616573001	1-49
105142701	1-39	47539338002	7-7	47616575001	1-49
105143201	5-13	47542195001	5-9, 5-15	47616576001	1-49
105143301	7-3, 9-3	47559475001	7-5	47616717001	1-49
105144401	9-11, 12-11	47559475002	7-5	47616912001	7-3
105144801	4-15	47564890001	8-7	47617345001	7-7
105149101	5-7	47579096001	6-23	47619701001	9-5
105149201	5-7	47579923001	4-3	47623281001	7-3
105152801	3-9	47583000001	7-5	47623339001	9-3
105153301	3-9	47583790001	7-5	47629583001	8-19
105153302	3-9	47583791001	7-5	47629585001	8-19
105156301	1-5	47583794001	7-5	47629588001	8-19
105156701	1-5	47583795001	8-7	47629589001	8-19
105156702	1-5	47583907001	4-3	47629677001	8-15

INDEX

47629680001	8-15	47629845001	8-9	accelerator pivot rod	5-5
47629682001	8-15	47629846001	8-9	accelerator return spring	5-5
47629685001	8-15	47629847001	8-9	accessory receptacle	7-19
47629686001	8-15	47629848001	8-9	adhesive, guide ring	13-3
47629687001	8-15	47629851001	8-9	air cleaner assembly	9-15
47629688001	8-15	47629853001	8-9	air filter	8-3, 9-15
47629689001	8-15	47629855001	8-9	air filter evacuator	9-15
47629690001	8-15	47629856001	8-9	air intake hose	9-15
47629691001	8-15	47629857001	9-7	AM1285701	13-5
47629693001	8-15	47629858001	9-7	anchor body	5-9, 5-15
47629694001	8-15	47629859001	9-7	anchor body kit	5-9, 5-15
47629696001	8-15	47629860001	9-7	anchor, piston	5-9, 5-15
47629697001	8-15	47629861001	9-7	A-plate strap	6-11, 6-15
47629698001	8-15	47629862001	9-7	A-plate, delta	6-11, 6-15
47629699001	8-17	47629864001	9-7	arbor	13-3
47629700001	8-17	47629865001	9-7	arm	
47629701001	8-17	47629866001	9-7	governor	9-11, 12-11
47629702001	8-11	47629867001	9-7	assembly	
47629703001	8-17	47629868001	9-7	accelerator bracket and bearing	5-5
47629705001	8-17	47629869001	9-7	accelerator pivot rod	5-5
47629707001	8-17	47629870001	9-7	bearing, steering shaft	6-5
47629709001	8-17	47629871001	9-7	delta A-plate	6-11, 6-15
47629711001	8-13	47629872001	9-7	drive hub	11-5, 11-7
47629714001	8-13	47629874001	9-7	fuel cap	9-3
47629716001	8-13	47629875001	9-9	inner ball joint	6-3
47629717001	8-13	47629876001	9-9	kingpin	6-13, 6-17
47629718001	8-13	47629877001	9-9	moveable-face	11-5, 11-7, 11-9
47629719001	8-13	47629878001	9-9	ratchet	5-3, 5-5
47629720001	8-13	47629879001	9-13	secondary clutch weight	11-5, 11-7
47629722001	8-13	47629880001	9-13	steering shaft	6-5
47629723001	8-13	47629881001	9-13	axle shaft	12-19, 12-21
47629724001	8-13	47629882001	9-13	axle tube	12-19, 12-21
47629725001	8-13	47631907002	4-9		
47629726001	8-13	47634448002	9-3	B	
47629727001	8-13	47637087001	9-5	backing plate, brake	5-9, 5-15
47629728001	8-13	47640020001	8-17	ball bearing	7-5, 12-17, 12-19, 12-21
47629729001	8-13	47640021001	8-11, 8-17	ball joint	5-3, 5-5
47629730001	8-13	47640022001	8-17	ball stud	7-11
47629768001	8-13	47640281001	8-3, 8-11	battery	
47629822001	8-13	47650647001	8-11	12-volt, side-post	7-15
47629823001	8-13	47654251001	7-19	battery clamp	7-15, 7-17
47629824001	8-13	47662588001	12-25	battery discharge machine	13-3
47629825001	8-13	47664037001	9-3	battery retainer	7-15
47629826001	8-11	47669399001	7-19	battery terminal protector spray	13-3
47629828001	8-11	47676897001	8-11	battery thermometer	13-3
47629831001	8-11	47695676001	10-3	battery, 12-volt, top-post	7-17
47629832001	8-11	47695923001	8-5	battery, top-post, wire, 4ga, B+	7-3
47629833001	8-11	96704176	12-3	battery, top-post, wire, B- 4ga,	7-17
47629834001	8-11	96705199	12-7, 12-9	bearing	
47629835001	8-11	96705587	10-3	ball	7-5, 12-17, 12-19, 12-21
47629836001	8-11	96741046	8-5	ball (steering pinion)	6-3
47629837001	8-11			front wheel hub	6-21
47629838001	8-11	A		hub	6-21
47629841001	8-11	accelerator bracket and bearing assembly	5-5	lower pinion (steering)	6-3
47629843001	8-11	accelerator cable	9-11	pivot support	5-5
47629844001	8-9	accelerator pedal adjustment tool	13-3	steering shaft	6-5

INDEX

thrust 6-13, 6-17, 12-13, 12-15
bearing and oil seal remover 13-3
bearing driver set 13-3
bearing puller 13-3
bearing puller wedge 13-3
bearing seat 6-5
bed latch weldment 1-41
bed lift actuator 1-43
bed lift harness 1-43
bed lift kit 1-43
bed lift weldment 1-43
bed seal 1-27
bellows 6-3
belt, drive 11-3
block, brake-mounting 5-3
block, fuse 7-11
body, anchor 5-9, 5-15
boot, steering column 6-5
boot, switch 7-9
box
 steering gear 6-3
bracket
 accel.cable 9-11, 12-7, 12-9
 brake light switch 4-5, 4-7
 carbon canister 9-5
 FNR cable 9-11, 12-7, 12-9
 governor 9-11, 12-11
 horn 4-5, 4-7
 shifter 12-3
 snubber 8-7
 steering column 6-5
 steering column mounting 6-5
 Tow/Run switch 7-9
bracket, hinge, bed 1-41
brake actuator kit 5-9, 5-15
brake backing plate 5-9, 5-15
brake cable 5-11, 5-13
brake cable equalizer 5-11, 5-13
brake cluster 5-9, 5-15
brake drum 5-9, 5-15
brake lever arm 5-9, 5-15
brake light switch bracket 4-5, 4-7
brake mounting block 5-3
brake pedal 5-3
brake pedal pad 5-3
brake return spring 5-13
brake shoe 5-9, 5-15
brake spring 5-9, 5-15
breather 12-13, 12-15
Brkt, Steering Stop, Drv, CA, LSV 6-19
bulb, halogen 4-3
bumper
 rubber 5-3
 spring return 5-5
bumper, bedfloor 1-41
bushing 1-43, 7-11, 11-5, 11-7, 12-3

bronze 6-13, 6-17
nylon 5-3
spindle 6-13, 6-17
steel 6-13, 6-17
urethane 1-41, 6-11, 6-13, 6-15, 6-17, 6-23

button, drive 11-9
buzzer, reverse 4-9

C

cable
 accelerator 9-11
 brake 5-11, 5-13
 FNR shifter 12-5
calibration test module 13-3
cam
 driven clutch 11-9
 electrical component box 7-11
canister, carbon, fuel tank 9-5
canopy cross support 1-45
canopy frame 1-45
canopy front struts 1-45
canopy, blue 1-45
canopy, gray 1-45
canopy, green 1-45
canopy, green/white 1-45
canopy, linen 1-45
cap
 fuel, gas, ratchet 9-3
 key switch 4-11
 rubber 12-23
carbon canister 9-5
card, safety first 13-5
case
 transaxle 12-13, 12-15
center shaft 12-17
charger bezel tool 13-3
clamp
 battery 7-15, 7-17
 hose 9-5, 9-15
 p- (fuel filter) 9-11
clevis, upper delta 6-13, 6-17
clip
 body trim 1-15
 meter 4-9
 wheel cover 2-5
clip, score card 6-9
cluster, brake 5-9, 5-15
clutch
 pin 12-17
clutch cam installation tool 13-3
clutch repair kit 11-9
clutch tool kit 13-3
clutch weight 11-5, 11-7
clutch, drive 11-5, 11-7
collar 12-17
column, steering 6-5

compression gauge 13-5
compressor, piston ring 13-5
compressor, valve spring 13-7
continuity tester 13-5
counter shaft 12-17
cover
 dust 5-9, 5-15, 6-21
 rocker switch hole 4-9
 steering column 6-5
cowl 1-11
C-type stop ring 6-3
cup, spring 5-5
cushion, shock absorber 6-23

D

dash 1-19
decal
 bed load warning 3-7
 consumable ice 3-7
 crush area warning 3-3, 3-5
 frame ground 3-5
 maintenance/operate switch 3-5, 7-9
 nameplate 1-15, 3-9
 on/off 3-3, 4-9
 pin removal warning 3-7
 refreshment center 3-7
 rotating parts 3-5
 vehicle loading 3-3
 wheel cover 2-5
delta A-plate 6-11, 6-15
delta A-plate sub-assembly 6-11, 6-15
differential 12-21
 limited-slip 12-19
 open 12-21
differential gear set 12-21
differential shaft 12-21
diode 7-3
door, charger port 1-15
door, glove box 1-19
drain plug 12-13, 12-15
drive belt 11-3
drive button 11-9
drive clutch 11-5, 11-7
drive clutch button 11-5, 11-7
drive clutch holder tool 13-3
drive clutch hub puller 13-3
drive clutch puller 13-3
drive clutch spring 11-5, 11-7
drive clutch weight 11-5, 11-7
drive hub 11-5, 11-7
driven clutch button 11-9
driven clutch cam 11-9
driven clutch cam puller 13-3
driven clutch puller plug 13-3
driver, drive clutch 11-5, 11-7
drum, brake 5-9, 5-15

INDEX

dry moly lubricant 13-5
dual snubber 8-7
dust cover 5-9, 5-15, 6-21

E

eccentric bolt 6-13, 6-17
E-clip 5-11, 5-13
end, tie rod 6-11, 6-15
engine
 air cleaner 9-15
 air filter 8-3, 9-15
 air intake hose 9-15
equalizer pivot 5-11
equalizer rod 5-11, 5-13
equalizer, brake cable 5-11, 5-13
extension, spring latch 1-41

F

face, moveable 11-9
fender, front, lh 1-15
fender, front, rh 1-15
fender, inner 1-33
fender, rear 1-35
filter
 air 8-3, 9-15
fitting, thread-forming grease 6-13, 6-17
flasher, turn signal, 12-volt 4-5
floor mat 1-19
fnr shaft 12-3
FNR shift lever 12-7, 12-9
FNR shifter base 12-3
FNR shifter cable 12-5
frame
 corner cap 1-27
frame weldment, front 1-21
front spring retainer plate 6-13, 6-17
Fuel Module, Hold-Down Ring 9-3
fuse
 10-amp 4-5, 4-7, 7-3, 7-11
 2-amp 7-3
 5-amp 7-3
fuse block 7-11
fuse, mini, 10A 4-5, 4-7

G

gasket 12-13, 12-15
 liquid 13-5
gauge, compression 13-5
gear
 17 tooth 12-17
 34 tooth 12-17
 52 tooth 12-17
 60 tooth 12-19, 12-21
 62 tooth 12-17
 governor 12-13, 12-15

 governor, 34 tooth 12-17
 set, differential 12-21
gear yoke 13-5
governor arm 9-11, 12-11
governor gear shaft 12-13, 12-15
governor shaft 12-13, 12-15
grill 1-15
grip, pencil 6-9
grip, tilt latch hand 1-41
guide pin 12-13, 12-15
guide ring adhesive 13-3

H

handle, FNR 12-3
harness, wire 4-7
harness, wire, gas FNR connector 7-3
harness, wire, gas instr. panel 7-3
harness, brake pedal switch 4-5, 4-7
harness, taillight 4-5, 4-7
headlight 4-3
headlight bezel, lh 1-17
headlight bezel, rh 1-17
headlight guard kit 1-5
hill brake rod 5-3
hill brake weld assembly 5-3
hip restraint 1-27
holder, license plate 1-9
horn bracket 4-5, 4-7
hose
 air intake 9-15
 vent 9-5
hub 6-21, 12-23
hub bearing 6-21
hydrometer 13-5

I

inner frame snubber 8-7
input shaft 12-17
internal retaining ring pliers 13-5
isolator, shock damper 6-23

J

joint
 ball 5-3, 5-5

K

key
 driven clutch 11-9
 square 11-9
key switch cap 4-11
key switch, uncommon 4-11
kingpin 6-13, 6-17
kit
 accelerator pivot rod 5-5
 anchor body 5-9, 5-15

brake actuator 5-9, 5-15
brake cable 5-11
brake pedal 5-3
brake shoe 5-9, 5-15
brake shoe retainer 5-9, 5-15
clutch repair 11-9
drive clutch button 11-5, 11-7
drive clutch weight 11-5, 11-7
driven clutch button 11-9
equalizer, brake 5-11
park brake latch 5-3
park brake pedal 5-3
shock absorber cushion 6-23
shoe retainer 5-9, 5-15
steering column mounting bracket 6-5
Kit, Horn/Tail Light/Turn 4-7

L

lamp, stop, turn, tail 4-5, 4-7
latch 1-19
latch plate 1-39
latch, park brake 5-3
lever
 transaxle shift 12-7, 12-9
license frame kit 1-9
license plate 1-9
license plate holder 1-9
light
 oil 4-9
limit switch 4-5, 4-7, 7-11, 7-13
liquid gasket 13-5
low oil warning light 4-9
lubricant, dry moly 13-5
lubricant, moly-teflon 13-5
lug nut 2-3
lug stud 12-23

M

mat, floor 1-19
meter clip 4-9
meter, volt ohm 13-7
mirror, exterior kit 1-31
module
 calibration test 13-3
Module, ECU 8-11
moly-teflon lubricant 13-5
mounting block, brake 5-3
moveable-face 11-5, 11-7, 11-9

N

nameplate decal 1-15, 3-9
nut, lug 2-3

O

oil seal 12-13, 12-15

INDEX

oil warning light, low 4-9
O-Ring, Fuel Module 9-3

P

pad
 brake pedal 5-3
 park brake 5-3
paint, underbody (black) 13-5
paint, touch-up 1-13
park brake latch 5-3
park brake pedal 5-3
park brake rod sleeve 5-3
park brake spacer 5-3
park brake torsion spring 5-3
pawl 5-3
p-clamp (fuel filter) 9-11
pedal, brake 5-3
pedal, park brake 5-3
pencil grip 6-9
pin
 bow tie locking 5-11, 5-13
 clevis 5-11, 5-13
 differential 12-21
 guide 12-13, 12-15
 input shaft 12-17
pinion, steering 6-3
piston anchor 5-9, 5-15
piston ring compressor 13-5
piston ring pliers 13-5
pivot support bearing 5-5
plate
 front spring retainer 6-13, 6-17
 license 1-9
Plate, Closure, Kohler 8-17
pliers
 internal retaining ring 13-5
 piston ring 13-5
 retaining ring 13-5
plug
 drain 12-13, 12-15
 driven clutch puller 13-3
prop rod 1-41
prop rod bracket side support 1-39
prop rod track 1-39
protector spray, battery terminal 13-3
puller
 bearing 13-3
 drive clutch 13-3
 drive clutch hub 13-3
 driven clutch cam 13-3
 seal 13-5

R

race, front hub bearing 6-21
rack guide pressure spring 6-3

rack, steering 6-3
ratchet, park brake 5-3, 5-5
receptacle, accessory 7-19
reflector, yellow 4-15
reflector, amber 4-3
reflector, red 4-15
reflector, red, rectangle 4-15
refractometer 13-5
regulator, voltage 7-11
relay, 12-volt 4-5, 4-7
remover, bearing and oil seal 13-3
retainer
 accelerator pedal spring 5-5
 battery 7-15
 brake shoe 5-9, 5-15
 shock absorber cushion 6-23
retaining ring 6-5
retaining ring pliers 13-5
return spring bumper 5-5
reverse buzzer 4-9
ring
 C-type stop 6-3
 retaining 6-5, 7-11, 11-5, 11-7, 11-9, 12-13, 12-15, 12-23
 snap 6-3
 spiral backup 11-5, 11-7
rocker switch 1-43
rocker switch (lights) 4-9
rod
 accelerator pivot 5-5
 equalizer 5-11, 5-13
 hill brake 5-3
 prop 1-41

S

safety first card 13-5
score card clip 6-9
score card plate 6-9
seal
 oil 12-13, 12-15
 steering pinion dust 6-3
seal puller 13-5
seal, bed 1-27
seat bottom 1-23
seat strap 1-23
seat, bearing 6-5
seatback 1-25
seatback weldment 1-27
select shaft 12-13, 12-15
Sensor, Temperature 8-11
shaft
 axle 12-19, 12-21
 center 12-17
 counter 12-17
 differential 12-21
 governor 12-13, 12-15
 governor gear 12-13, 12-15
 input 12-17
 select 12-13, 12-15
 shift 12-17
 steering column 6-5
shift lever 12-7, 12-9
shift shaft 12-3, 12-17
shifter bracket 12-3
shifter handle 12-3
shifter, base 12-3
shifter, FNR 12-3
shock absorber 6-23
shock absorber cushion 6-23
shock absorber cushion retainer 6-23
shock damper isolator 6-23
shoe retainer kit 5-9, 5-15
shoe, brake 5-9, 5-15
sleeve 1-41, 6-23, 12-13, 12-15
 delta A-plate 6-11, 6-15
 park brake rod 5-3
snap ring 6-3
snubber bracket 8-7
snubber, dual 8-7
snubber, inner frame 8-7
solenoid, 12-volt 7-11
spacer 12-13, 12-15, 12-17
 accelerator pivot rod 5-5
 park brake 5-3
spindle assembly 6-13, 6-17
spiral backup ring 11-5, 11-7
spray, battery terminal protector 13-3
spring 12-13, 12-15
 accelerator return 5-5
 brake 5-9, 5-15
 brake return 5-13
 compression 6-9
 drive button 11-5, 11-7
 drive clutch 11-5, 11-7
 extension 1-41
 park brake torsion 5-3
 rack guide pressure 6-3
 steering shaft compression 6-5
spring cup 5-5
spring mounting plate 6-13, 6-17
steel bushing 6-13, 6-17
steering column 6-5
steering column bearing press tool 13-7
steering column retaining ring tool 13-7
steering gear box 6-3
steering pinion 6-3
steering pinion dust seal 6-3
steering rack 6-3
steering shaft 6-13, 6-17
steering shaft assembly 6-5
steering shaft compression spring 6-5
steering wheel puller tool 13-7

INDEX

strap, A-plate 6-11, 6-15
strap, seat 1-23
stud
 lug 12-23
stud, ball 7-11
support yoke (steering) 6-3
switch
 key, uncommon 4-11
 light rocker 4-9
 limit 4-5, 4-7, 7-11, 7-13
 rocker 1-43
 turn signal 4-5
switch rubber boot 7-9
switch, toggle 7-9

T

12-volt solenoid 7-11
tailskirt 1-35
tester, continuity 13-5
thermometer, battery 13-3
thread-forming grease fitting 6-13, 6-17
thrust bearing 6-13, 6-17
tie rod 6-11, 6-15
tie rod end 6-11, 6-15
tie wrap 5-11, 6-3, 6-5, 7-11, 12-5
tilt latch hand grip 1-41
tire 2-3
toggle switch 7-9
tool
 accelerator pedal adjustment 13-3
 belt tensioning, starter/generator 13-7
 charger bezel 13-3
 clutch cam installation 13-3
 drive clutch holder 13-3
 steering column bearing press 13-7
 steering column retaining ring 13-7
 steering wheel puller 13-7
 transaxle axle seal 13-7
 transaxle pinion seal 13-7
 transmission 13-7
tool kit, clutch 13-3
touch-up paint 13-5
Tow/Run switch bracket 7-9
track, prop rod 1-39
transaxle axle seal tool 13-7
transaxle pinion seal tool 13-7
transaxle, limited-slip (Gas Vehicle) 12-13
transaxle, open-diff (Gas Vehicle) 12-15
transmission tool 13-7
tube
 axle 12-19, 12-21
turn signal switch 4-5

U

U-bolt 6-23

upper delta clevis 6-13, 6-17
urethane bushing 1-41, 6-11, 6-13, 6-15, 6-17, 6-23

V

valve 9-15
valve spring compressor 13-7
valve stem 2-3
vent
 transaxle 12-13, 12-15
vent, barb 9-5
volt ohm meter 13-7
voltage regulator 7-11

W

warning light, low oil 4-9
wedge, bearing puller 13-3
weight
 clutch 11-5, 11-7
 secondary clutch 11-5, 11-7
weldment
 governor bracket 9-11, 12-11
wheel 2-3
wheel cover 2-5
windshield kit, non-hinged 1-29
windshield, non-hinged 1-29
wire
 green, starter/generator 7-3, 7-5
 ground, fuel tank 7-3, 9-3
wire harness 4-7, 7-3
wrap, tie 5-11, 6-3, 6-5, 7-11, 12-5

Y

yoke, gear 13-5
yoke, support (steering) 6-3



Club Car, Inc.
P.O. Box 204658
Augusta, GA 30917-4658
USA

Web	www.clubcar.com
Phone	1.706.863.3000 1.800.ClubCar
Int'l	+1 706.863.3000
Fax	1.706.863.5808